

91-21-51

HOOKUP LIST



91-21-51
HOOKUP LIST

Section	Page	Date	Section	Page	Date	Section	Page	Date
EFFECTIVE PAGES			C00000 cont.			C00300 cont.		
	1 thru 58	Aug 05/2009		6	Jan 21/2005		16	Jan 21/2005
B00000	1	Jan 21/2005		7	Jan 21/2005		17	Jan 21/2005
	2	Jan 21/2005		8	Jan 21/2005		18	Jan 21/2005
	3	Jan 21/2005		9	Jan 21/2005		19	Jan 21/2005
	4	Jan 21/2005		10	Jan 21/2005	C00400	1	Jan 21/2005
B00100	1	Jan 21/2005	C00100	1	Jan 21/2005		2	Jan 21/2005
	2	Jan 21/2005		2	Jan 21/2005		3	Jan 21/2005
	3	Jan 21/2005		3	Jan 21/2005		4	Jan 21/2005
	4	Jan 21/2005		4	Jan 21/2005	R C00500	1	Aug 05/2009
	5	Jan 21/2005		5	Jan 21/2005		2	Jan 21/2005
	6	Jan 21/2005		6	Jan 21/2005		3	Jan 21/2005
	7	Jan 21/2005		7	Jan 21/2005		4	Jan 21/2005
B00200	1	Jan 21/2005	C00300	1	Jan 21/2005		5	Jan 21/2005
	2	Jan 21/2005		2	Jan 21/2005		6	Jan 21/2005
	3	Jan 21/2005		3	Jan 21/2005		7	Jan 21/2005
B00300	1	Jan 21/2005		4	Jan 21/2005		8	Jan 21/2005
	2	Jan 21/2005		5	Jan 21/2005		9	Jan 21/2005
	3	Jan 21/2005		6	Feb 06/2009	C00600	1	Jan 21/2005
B00400	1	Jan 21/2005		7	Jan 21/2005		2	Jan 21/2005
	2	Jan 21/2005		8	Jan 21/2005		3	Jan 21/2005
	3	Jan 21/2005		9	Jan 21/2005		4	Jan 21/2005
B09000	1	Jan 21/2005		10	Jan 21/2005		5	Jan 21/2005
C00000	1	Jan 21/2005		11	Jan 21/2005		6	Jan 21/2005
	2	Jan 21/2005		12	Jan 21/2005		7	Jan 21/2005
	3	Jan 21/2005		13	Jan 21/2005		8	Jun 06/2008
	4	Jan 21/2005		14	Jan 21/2005		9	Jan 21/2005
	5	Jan 21/2005		15	Jan 21/2005		10	Jan 21/2005

A = Added, R = Revised, D = Deleted, O = Overflow

HOOKUP LIST

D280T132

EFFECTIVE PAGES

Page 1
Aug 05/2009



91-21-51
HOOKUP LIST

Section	Page	Date	Section	Page	Date	Section	Page	Date
C00700	1	Jan 21/2005	C01000 cont.	8	Jan 21/2005	C01400	1	May 20/2005
	2	Jan 21/2005					2	May 20/2005
	3	Jan 21/2005					3	May 20/2005
	4	Jan 21/2005					4	May 20/2005
	5	Jan 21/2005					5	May 20/2005
	6	Jan 21/2005					6	May 20/2005
	7	Jan 21/2005					7	May 20/2005
C00800	1	Jan 21/2005	C01100	1	Jan 21/2005	C01500	1	May 20/2005
	2	Jan 21/2005					2	May 20/2005
	3	Jan 21/2005					3	May 20/2005
	4	Jan 21/2005					4	May 20/2005
	5	Jan 21/2005					5	May 20/2005
	6	Jan 21/2005					6	May 20/2005
	7	Jan 21/2005					7	May 20/2005
C00900	1	Jan 21/2005	C01200	1	May 20/2005	C04000	1	May 20/2005
	2	Jan 21/2005					2	May 20/2005
	3	Jan 21/2005					3	May 20/2005
	4	Jan 21/2005					4	May 20/2005
	5	Jan 21/2005					5	May 20/2005
	6	Jan 21/2005					6	May 20/2005
	7	Jan 21/2005					7	May 20/2005
C01000	1	Jan 21/2005	C01300	1	May 20/2005	R	2	Aug 05/2009
	2	Jan 21/2005					3	May 20/2005
	3	Jan 21/2005					4	May 20/2005
	4	Jan 21/2005					5	May 20/2005
	5	Jan 21/2005					6	May 20/2005
	6	Jan 21/2005					7	May 20/2005
	7	Jan 21/2005					8	May 20/2005
						D00000	1	May 20/2005
							2	May 20/2005
							3	May 20/2005
							4	May 20/2005
							5	May 20/2005

A = Added, R = Revised, D = Deleted, O = Overflow

HOOKUP LIST

D280T132

EFFECTIVE PAGES

Page 2
Aug 05/2009



91-21-51
HOOKUP LIST

Section	Page	Date	Section	Page	Date	Section	Page	Date
D00000 cont.			D00100 cont.			D00200 cont.		
	6	May 20/2005		21	May 20/2005		21	May 20/2005
	7	May 20/2005		22	May 20/2005		22	May 20/2005
	8	May 20/2005		23	May 20/2005		23	May 20/2005
	9	May 20/2005		24	May 20/2005		24	May 20/2005
	10	May 20/2005		25	May 20/2005		25	Jun 06/2008
	11	May 20/2005		26	May 20/2005		26	May 20/2005
	12	May 20/2005		27	May 20/2005		27	May 20/2005
D00100	1	May 20/2005	D00200	1	May 20/2005		28	May 20/2005
	2	May 20/2005		2	May 20/2005		29	May 20/2005
	3	May 20/2005		3	May 20/2005		30	May 20/2005
	4	May 20/2005		4	May 20/2005		31	May 20/2005
	5	May 20/2005		5	May 20/2005		32	May 20/2005
	6	May 20/2005		6	May 20/2005		33	May 20/2005
	7	May 20/2005		7	May 20/2005		34	May 20/2005
	8	May 20/2005		8	May 20/2005		35	May 20/2005
	9	May 20/2005		9	May 20/2005		36	May 20/2005
	10	May 20/2005		10	May 20/2005		37	May 20/2005
	11	May 20/2005		11	May 20/2005		38	May 20/2005
	12	May 20/2005		12	May 20/2005		39	May 20/2005
	13	May 20/2005		13	May 20/2005		40	May 20/2005
	14	May 20/2005		14	May 20/2005		41	May 20/2005
	15	May 20/2005		15	May 20/2005		42	May 20/2005
	16	May 20/2005		16	May 20/2005		43	May 20/2005
	17	May 20/2005		17	Jun 06/2008		44	May 20/2005
	18	May 20/2005		18	May 20/2005		45	May 20/2005
	19	May 20/2005		19	May 20/2005		46	May 20/2005
	20	May 20/2005		20	May 20/2005	D00300	1	May 20/2005

A = Added, R = Revised, D = Deleted, O = Overflow

HOOKUP LIST

D280T132

EFFECTIVE PAGES

Page 3
Aug 05/2009



91-21-51
HOOKUP LIST

Section	Page	Date	Section	Page	Date	Section	Page	Date
D00300 cont.			D00300 cont.			D00300 cont.		
	2	May 20/2005		29	May 20/2005		56	Mar 14/2007
	3	May 20/2005		30	May 20/2005		57	Mar 14/2007
	4	May 20/2005		31	May 20/2005		58	Mar 14/2007
	5	May 20/2005		32	May 20/2005		59	Mar 14/2007
	6	May 20/2005		33	May 20/2005		60	Mar 14/2007
	7	May 20/2005		34	May 20/2005		61	Mar 14/2007
	8	May 20/2005		35	May 20/2005		62	Mar 14/2007
	9	May 20/2005		36	May 20/2005		63	Mar 14/2007
	10	May 20/2005		37	May 20/2005		64	Mar 14/2007
	11	May 20/2005		38	May 20/2005		65	Mar 14/2007
	12	Mar 14/2007		39	May 20/2005		66	Mar 14/2007
	13	Aug 15/2007		40	May 20/2005		67	Mar 14/2007
	14	Aug 15/2007		41	Mar 14/2007		68	Mar 14/2007
	15	Aug 15/2007		42	Mar 14/2007		69	Aug 15/2007
	16	Mar 14/2007		43	Mar 14/2007		70	Aug 15/2007
	17	Mar 14/2007		44	Mar 14/2007		71	Aug 15/2007
	18	May 20/2005		45	Mar 14/2007		72	Mar 14/2007
	19	May 20/2005		46	Mar 14/2007		73	Mar 14/2007
	20	May 20/2005		47	Mar 14/2007		74	Mar 14/2007
	21	May 20/2005		48	Mar 14/2007		75	Mar 14/2007
	22	May 20/2005		49	Mar 14/2007		76	Mar 14/2007
	23	May 20/2005		50	Mar 14/2007		77	Mar 14/2007
	24	May 20/2005		51	Mar 14/2007		78	Mar 14/2007
	25	May 20/2005		52	Mar 14/2007		79	Mar 14/2007
	26	May 20/2005		53	Mar 14/2007		80	Mar 14/2007
	27	May 20/2005		54	Mar 14/2007		81	Mar 14/2007
	28	May 20/2005		55	Mar 14/2007		82	Mar 14/2007

A = Added, R = Revised, D = Deleted, O = Overflow

HOOKUP LIST

D280T132

EFFECTIVE PAGES

Page 4
Aug 05/2009



91-21-51
HOOKUP LIST

Section	Page	Date	Section	Page	Date	Section	Page	Date
D00300 cont.			D00300 cont.			D00300 cont.		
	83	Mar 14/2007		110	Mar 14/2007		137	Mar 14/2007
	84	Mar 14/2007		111	Mar 14/2007		138	Mar 14/2007
	85	Mar 14/2007		112	Mar 14/2007		139	Mar 14/2007
	86	Mar 14/2007		113	Mar 14/2007		140	Mar 14/2007
	87	Mar 14/2007		114	Mar 14/2007		141	Mar 14/2007
	88	Mar 14/2007		115	Mar 14/2007		142	Mar 14/2007
	89	Mar 14/2007		116	Mar 14/2007		143	Mar 14/2007
	90	Mar 14/2007		117	Mar 14/2007		144	Mar 14/2007
	91	Mar 14/2007		118	Mar 14/2007		145	Mar 14/2007
	92	Mar 14/2007		119	Mar 14/2007		146	Mar 14/2007
	93	Mar 14/2007		120	Mar 14/2007		147	Mar 14/2007
	94	Mar 14/2007		121	Mar 14/2007		148	Mar 14/2007
	95	Mar 14/2007		122	Mar 14/2007		149	Mar 14/2007
	96	Mar 14/2007		123	Mar 14/2007		150	Mar 14/2007
	97	Mar 14/2007		124	Mar 14/2007		151	Mar 14/2007
	98	Mar 14/2007		125	Mar 14/2007		152	Mar 14/2007
	99	Mar 14/2007		126	Mar 14/2007		153	Mar 14/2007
	100	Mar 14/2007		127	Mar 14/2007		154	Mar 14/2007
	101	Mar 14/2007		128	Mar 14/2007		155	Mar 14/2007
	102	Mar 14/2007		129	Mar 14/2007		156	Mar 14/2007
	103	Mar 14/2007		130	Mar 14/2007		157	Mar 14/2007
	104	Mar 14/2007		131	Mar 14/2007		158	Mar 14/2007
	105	Mar 14/2007		132	Mar 14/2007		159	Mar 14/2007
	106	Mar 14/2007		133	Mar 14/2007	D00400	1	Mar 14/2007
	107	Mar 14/2007		134	Mar 14/2007		2	Mar 14/2007
	108	Mar 14/2007		135	Mar 14/2007		3	Mar 14/2007
	109	Mar 14/2007		136	Mar 14/2007		4	Mar 14/2007

A = Added, R = Revised, D = Deleted, O = Overflow

HOOKUP LIST

D280T132

EFFECTIVE PAGES

Page 5
Aug 05/2009



91-21-51
HOOKUP LIST

Section	Page	Date	Section	Page	Date	Section	Page	Date
D00400 cont.			D00400 cont.			D00400 cont.		
	5	Mar 14/2007		32	Mar 14/2007		59	Mar 14/2007
	6	Mar 14/2007		33	Mar 14/2007		60	Mar 14/2007
	7	Mar 14/2007		34	Mar 14/2007		61	Mar 14/2007
	8	Mar 14/2007		35	Mar 14/2007		62	Mar 14/2007
	9	Mar 14/2007		36	Mar 14/2007		63	Mar 14/2007
	10	Mar 14/2007		37	Mar 14/2007		64	Mar 14/2007
	11	Mar 14/2007		38	Mar 14/2007		65	Mar 14/2007
	12	Mar 14/2007		39	Mar 14/2007		66	Mar 14/2007
	13	Mar 14/2007		40	Mar 14/2007		67	Mar 14/2007
	14	Mar 14/2007		41	Mar 14/2007		68	Mar 14/2007
	15	Mar 14/2007		42	Mar 14/2007		69	Mar 14/2007
	16	Mar 14/2007		43	Mar 14/2007		70	Mar 14/2007
	17	Mar 14/2007		44	Mar 14/2007		71	Mar 14/2007
	18	Mar 14/2007		45	Mar 14/2007		72	Mar 14/2007
	19	Mar 14/2007		46	Mar 14/2007		73	Mar 14/2007
	20	Mar 14/2007		47	Mar 14/2007		74	Mar 14/2007
	21	Mar 14/2007		48	Mar 14/2007		75	Mar 14/2007
	22	Mar 14/2007		49	Mar 14/2007		76	Mar 14/2007
	23	Mar 14/2007		50	Mar 14/2007		77	Mar 14/2007
	24	Mar 14/2007		51	Mar 14/2007		78	Mar 14/2007
	25	Mar 14/2007		52	Mar 14/2007		79	Mar 14/2007
	26	Mar 14/2007		53	Mar 14/2007		80	Mar 14/2007
	27	Mar 14/2007		54	Mar 14/2007		81	Mar 14/2007
	28	Mar 14/2007		55	Mar 14/2007		82	Mar 14/2007
	29	Mar 14/2007		56	Mar 14/2007		83	Mar 14/2007
	30	Mar 14/2007		57	Mar 14/2007		84	Mar 14/2007
	31	Mar 14/2007		58	Mar 14/2007		85	Mar 14/2007

A = Added, R = Revised, D = Deleted, O = Overflow

HOOKUP LIST

D280T132

EFFECTIVE PAGES

Page 6
Aug 05/2009



91-21-51
HOOKUP LIST

Section	Page	Date	Section	Page	Date	Section	Page	Date
D00400 cont.			D00400 cont.			D00400 cont.		
	86	Mar 14/2007		113	Mar 14/2007		140	Mar 14/2007
	87	Mar 14/2007		114	Mar 14/2007		141	Mar 14/2007
	88	Mar 14/2007		115	Mar 14/2007		142	Mar 14/2007
	89	Mar 14/2007		116	Mar 14/2007		143	Mar 14/2007
	90	Mar 14/2007		117	Mar 14/2007		144	Mar 14/2007
	91	Mar 14/2007		118	Mar 14/2007		145	Mar 14/2007
	92	Mar 14/2007		119	Mar 14/2007		146	Mar 14/2007
	93	Mar 14/2007		120	Mar 14/2007		147	Mar 14/2007
	94	Mar 14/2007		121	Mar 14/2007		148	Mar 14/2007
	95	Mar 14/2007		122	Mar 14/2007		149	Mar 14/2007
	96	Mar 14/2007		123	Mar 14/2007		150	Mar 14/2007
	97	Mar 14/2007		124	Mar 14/2007		151	Mar 14/2007
	98	Mar 14/2007		125	Mar 14/2007		152	Mar 14/2007
	99	Mar 14/2007		126	Mar 14/2007		153	Mar 14/2007
	100	Mar 14/2007		127	Mar 14/2007		154	Mar 14/2007
	101	Mar 14/2007		128	Mar 14/2007		155	Mar 14/2007
	102	Mar 14/2007		129	Mar 14/2007		156	Mar 14/2007
	103	Mar 14/2007		130	Mar 14/2007		157	Mar 14/2007
	104	Mar 14/2007		131	Mar 14/2007		158	Mar 14/2007
	105	Mar 14/2007		132	Mar 14/2007		159	Mar 14/2007
	106	Mar 14/2007		133	Mar 14/2007		160	Mar 14/2007
	107	Mar 14/2007		134	Mar 14/2007		161	Mar 14/2007
	108	Mar 14/2007		135	Mar 14/2007		162	Mar 14/2007
	109	Mar 14/2007		136	Mar 14/2007		163	Mar 14/2007
	110	Mar 14/2007		137	Mar 14/2007		164	Mar 14/2007
	111	Mar 14/2007		138	Mar 14/2007		165	Mar 14/2007
	112	Mar 14/2007		139	Mar 14/2007		166	Mar 14/2007

A = Added, R = Revised, D = Deleted, O = Overflow

HOOKUP LIST

D280T132

EFFECTIVE PAGES

Page 7
Aug 05/2009



91-21-51
HOOKUP LIST

Section	Page	Date	Section	Page	Date	Section	Page	Date
D00400 cont.			D00600 cont.			D00600 cont.		
	167	Mar 14/2007		4	Mar 14/2007		31	Mar 14/2007
	168	Mar 14/2007		5	Mar 14/2007		32	Mar 14/2007
	169	Mar 14/2007		6	Mar 14/2007		33	Mar 14/2007
	170	Mar 14/2007		7	Mar 14/2007		34	Mar 14/2007
D00500	1	Mar 14/2007		8	Mar 14/2007		35	Mar 14/2007
	2	Mar 14/2007		9	Mar 14/2007		36	Mar 14/2007
	3	Mar 14/2007		10	Mar 14/2007		37	Mar 14/2007
	4	Mar 14/2007		11	Mar 14/2007		38	Mar 14/2007
	5	Mar 14/2007		12	Mar 14/2007		39	Mar 14/2007
	6	Mar 14/2007		13	Mar 14/2007		40	Mar 14/2007
	7	Mar 14/2007		14	Mar 14/2007		41	Mar 14/2007
	8	Mar 14/2007		15	Mar 14/2007		42	Mar 14/2007
	9	Mar 14/2007		16	Mar 14/2007		43	Mar 14/2007
	10	Mar 14/2007		17	Mar 14/2007		44	Mar 14/2007
	11	Mar 14/2007		18	Mar 14/2007		45	Mar 14/2007
	12	Mar 14/2007		19	Mar 14/2007		46	Mar 14/2007
	13	Mar 14/2007		20	Mar 14/2007		47	Mar 14/2007
	14	Mar 14/2007		21	Mar 14/2007		48	Mar 14/2007
	15	Mar 14/2007		22	Mar 14/2007		49	Mar 14/2007
	16	Mar 14/2007		23	Mar 14/2007		50	Mar 14/2007
	17	Mar 14/2007		24	Mar 14/2007		51	Mar 14/2007
	18	Mar 14/2007		25	Mar 14/2007		52	Mar 14/2007
	19	Mar 14/2007		26	Mar 14/2007	D00700	1	Mar 14/2007
	20	Mar 14/2007		27	Mar 14/2007		2	Mar 14/2007
D00600	1	Mar 14/2007		28	Mar 14/2007		3	Mar 14/2007
	2	Mar 14/2007		29	Mar 14/2007		4	Mar 14/2007
	3	Mar 14/2007		30	Mar 14/2007		5	Mar 14/2007

A = Added, R = Revised, D = Deleted, O = Overflow

HOOKUP LIST

D280T132

EFFECTIVE PAGES

Page 8
Aug 05/2009



91-21-51
HOOKUP LIST

Section	Page	Date	Section	Page	Date	Section	Page	Date
D00700 cont.			D00800	1	Mar 14/2007	D00800 cont.		
	6	Mar 14/2007		2	Mar 14/2007		29	Mar 14/2007
	7	Mar 14/2007		3	Mar 14/2007		30	Mar 14/2007
	8	Mar 14/2007		4	Mar 14/2007		31	Mar 14/2007
	9	Mar 14/2007		5	Mar 14/2007		32	Mar 14/2007
	10	Mar 14/2007		6	Mar 14/2007		33	Mar 14/2007
	11	Mar 14/2007		7	Mar 14/2007		34	Mar 14/2007
	12	Mar 14/2007		8	Mar 14/2007		35	Mar 14/2007
	13	Mar 14/2007		9	Mar 14/2007		36	Mar 14/2007
	14	Mar 14/2007		10	Mar 14/2007		37	Mar 14/2007
	15	Mar 14/2007		11	Mar 14/2007		38	Mar 14/2007
	16	Mar 14/2007		12	Mar 14/2007		39	Mar 14/2007
	17	Mar 14/2007		13	Mar 14/2007		40	Mar 14/2007
	18	Mar 14/2007		14	Mar 14/2007		41	Mar 14/2007
	19	Mar 14/2007		15	Mar 14/2007		42	Mar 14/2007
	20	Mar 14/2007		16	Mar 14/2007		43	Mar 14/2007
	21	Mar 14/2007		17	Mar 14/2007		44	Mar 14/2007
	22	Mar 14/2007		18	Mar 14/2007		45	Mar 14/2007
	23	Mar 14/2007		19	Mar 14/2007		46	Mar 14/2007
	24	Mar 14/2007		20	Mar 14/2007		47	Mar 14/2007
	25	Mar 14/2007		21	Mar 14/2007		48	Mar 14/2007
	26	Mar 14/2007		22	Mar 14/2007		49	Mar 14/2007
	27	Mar 14/2007		23	Mar 14/2007		50	Mar 14/2007
	28	Mar 14/2007		24	Mar 14/2007		51	Mar 14/2007
	29	Mar 14/2007		25	Mar 14/2007		52	Mar 14/2007
	30	Mar 14/2007		26	Mar 14/2007		53	Mar 14/2007
	31	Mar 14/2007		27	Mar 14/2007		54	Mar 14/2007
	32	Mar 14/2007		28	Mar 14/2007		55	Mar 14/2007

A = Added, R = Revised, D = Deleted, O = Overflow

HOOKUP LIST

D280T132

EFFECTIVE PAGES

Page 9
Aug 05/2009



91-21-51
HOOKUP LIST

Section	Page	Date	Section	Page	Date	Section	Page	Date
D00800 cont.			D00800 cont.			D00800 cont.		
	56	Mar 14/2007		83	Mar 14/2007		110	Mar 14/2007
	57	Mar 14/2007		84	Mar 14/2007		111	Mar 14/2007
	58	Mar 14/2007		85	Mar 14/2007		112	Jun 06/2008
	59	Mar 14/2007		86	Mar 14/2007		113	Jun 06/2008
	60	Mar 14/2007		87	Mar 14/2007		114	Jun 06/2008
	61	Mar 14/2007		88	Mar 14/2007		115	Jun 06/2008
	62	Mar 14/2007		89	Mar 14/2007		116	Jun 06/2008
	63	Mar 14/2007		90	Mar 14/2007		117	Jun 06/2008
	64	Mar 14/2007		91	Mar 14/2007		118	Jun 06/2008
	65	Mar 14/2007		92	Mar 14/2007		119	Jun 06/2008
	66	Mar 14/2007		93	Mar 14/2007		120	Jun 06/2008
	67	Mar 14/2007		94	Mar 14/2007		121	Jun 06/2008
	68	Mar 14/2007		95	Mar 14/2007		122	Jun 06/2008
	69	Mar 14/2007		96	Mar 14/2007		123	Jun 06/2008
	70	Mar 14/2007		97	Mar 14/2007		124	Jun 06/2008
	71	Mar 14/2007		98	Mar 14/2007		125	Jun 06/2008
	72	Mar 14/2007		99	Mar 14/2007		126	Jun 06/2008
	73	Mar 14/2007		100	Mar 14/2007		127	Jun 06/2008
	74	Mar 14/2007		101	Mar 14/2007		128	Jun 06/2008
	75	Mar 14/2007		102	Mar 14/2007		129	Jun 06/2008
	76	Mar 14/2007		103	Mar 14/2007		130	Jun 06/2008
	77	Mar 14/2007		104	Mar 14/2007		131	Jun 06/2008
	78	Mar 14/2007		105	Mar 14/2007		132	Jun 06/2008
	79	Mar 14/2007		106	Mar 14/2007		133	Jun 06/2008
	80	Mar 14/2007		107	Mar 14/2007		134	Jun 06/2008
	81	Mar 14/2007		108	Mar 14/2007		135	Jun 06/2008
	82	Mar 14/2007		109	Mar 14/2007		136	Jun 06/2008

A = Added, R = Revised, D = Deleted, O = Overflow

HOOKUP LIST

D280T132

EFFECTIVE PAGES

Page 10
Aug 05/2009



91-21-51
HOOKUP LIST

Section	Page	Date	Section	Page	Date	Section	Page	Date
D00800 cont.			D00800 cont.			D01100 cont.		
	137	Jun 06/2008		164	Jun 06/2008		3	Mar 14/2007
	138	Jun 06/2008		165	Jun 06/2008		4	Mar 14/2007
	139	Jun 06/2008		166	Jun 06/2008		5	Mar 14/2007
	140	Jun 06/2008		167	Jun 06/2008		6	Mar 14/2007
	141	Jun 06/2008	D00900	1	Mar 14/2007		7	Mar 14/2007
	142	Jun 06/2008		2	Mar 14/2007		8	Mar 14/2007
	143	Jun 06/2008		3	Mar 14/2007		9	Mar 14/2007
	144	Jun 06/2008		4	Mar 14/2007		10	Mar 14/2007
	145	Jun 06/2008		5	Mar 14/2007		11	Mar 14/2007
	146	Jun 06/2008		6	Mar 14/2007		12	Mar 14/2007
	147	Jun 06/2008		7	Mar 14/2007		13	Mar 14/2007
	148	Jun 06/2008		8	Mar 14/2007		14	Mar 14/2007
	149	Jun 06/2008		9	Mar 14/2007		15	Mar 14/2007
	150	Jun 06/2008		10	Mar 14/2007	D01200	1	Mar 14/2007
	151	Jun 06/2008	D01000	1	Mar 14/2007		2	Mar 14/2007
	152	Jun 06/2008		2	Mar 14/2007		3	Mar 14/2007
	153	Jun 06/2008		3	Mar 14/2007		4	Mar 14/2007
	154	Jun 06/2008		4	Mar 14/2007		5	Mar 14/2007
	155	Jun 06/2008		5	Mar 14/2007		6	Mar 14/2007
	156	Jun 06/2008		6	Mar 14/2007		7	Mar 14/2007
	157	Jun 06/2008		7	Mar 14/2007		8	Mar 14/2007
	158	Jun 06/2008		8	Mar 14/2007		9	Mar 14/2007
	159	Jun 06/2008		9	Mar 14/2007		10	Mar 14/2007
	160	Jun 06/2008		10	Mar 14/2007		11	Mar 14/2007
	161	Jun 06/2008		11	Mar 14/2007		12	Mar 14/2007
	162	Jun 06/2008	D01100	1	Mar 14/2007		13	Mar 14/2007
	163	Jun 06/2008		2	Mar 14/2007		14	Mar 14/2007

A = Added, R = Revised, D = Deleted, O = Overflow

HOOKUP LIST

D280T132

EFFECTIVE PAGES

Page 11
Aug 05/2009



91-21-51
HOOKUP LIST

Section	Page	Date	Section	Page	Date	Section	Page	Date
D01200 cont.			D01200 cont.			D01200 cont.		
	15	Mar 14/2007		42	Mar 14/2007		69	Mar 14/2007
	16	Mar 14/2007		43	Mar 14/2007		70	Mar 14/2007
	17	Mar 14/2007		44	Mar 14/2007		71	Mar 14/2007
	18	Mar 14/2007		45	Mar 14/2007		72	Mar 14/2007
	19	Mar 14/2007		46	Mar 14/2007		73	Mar 14/2007
	20	Mar 14/2007		47	Mar 14/2007		74	Mar 14/2007
	21	Mar 14/2007		48	Mar 14/2007		75	Mar 14/2007
	22	Mar 14/2007		49	Mar 14/2007		76	Mar 14/2007
	23	Mar 14/2007		50	Mar 14/2007		77	Mar 14/2007
	24	Mar 14/2007		51	Mar 14/2007		78	Mar 14/2007
	25	Mar 14/2007		52	Mar 14/2007		79	Mar 14/2007
	26	Mar 14/2007		53	Mar 14/2007		80	Mar 14/2007
	27	Mar 14/2007		54	Mar 14/2007	D01300	1	Mar 14/2007
	28	Mar 14/2007		55	Mar 14/2007		2	Mar 14/2007
	29	Mar 14/2007		56	Mar 14/2007		3	Mar 14/2007
	30	Mar 14/2007		57	Mar 14/2007		4	Mar 14/2007
	31	Mar 14/2007		58	Mar 14/2007		5	Mar 14/2007
	32	Mar 14/2007		59	Mar 14/2007		6	Mar 14/2007
	33	Mar 14/2007		60	Mar 14/2007		7	Mar 14/2007
	34	Mar 14/2007		61	Mar 14/2007		8	Mar 14/2007
	35	Mar 14/2007		62	Mar 14/2007		9	Mar 14/2007
	36	Mar 14/2007		63	Mar 14/2007		10	Mar 14/2007
	37	Mar 14/2007		64	Mar 14/2007		11	Mar 14/2007
	38	Mar 14/2007		65	Mar 14/2007		12	Mar 14/2007
	39	Mar 14/2007		66	Mar 14/2007		13	Mar 14/2007
	40	Mar 14/2007		67	Mar 14/2007		14	Mar 14/2007
	41	Mar 14/2007		68	Mar 14/2007		15	Mar 14/2007

A = Added, R = Revised, D = Deleted, O = Overflow

HOOKUP LIST

D280T132

EFFECTIVE PAGES

Page 12
Aug 05/2009



91-21-51
HOOKUP LIST

Section	Page	Date	Section	Page	Date	Section	Page	Date
D01300 cont.			D01400 cont.			D01400 cont.		
	16	Mar 14/2007		9	Mar 14/2007		36	Mar 14/2007
	17	Mar 14/2007		10	Mar 14/2007		37	Mar 14/2007
	18	Mar 14/2007		11	Mar 14/2007		38	Mar 14/2007
	19	Mar 14/2007		12	Mar 14/2007		39	Mar 14/2007
	20	Mar 14/2007		13	Mar 14/2007		40	Mar 14/2007
	21	Mar 14/2007		14	Mar 14/2007		41	Mar 14/2007
	22	Mar 14/2007		15	Mar 14/2007		42	Mar 14/2007
	23	Mar 14/2007		16	Mar 14/2007		43	Mar 14/2007
	24	Mar 14/2007		17	Mar 14/2007	D01500	1	Mar 14/2007
	25	Mar 14/2007		18	Mar 14/2007		2	Mar 14/2007
	26	Mar 14/2007		19	Mar 14/2007		3	Mar 14/2007
	27	Mar 14/2007		20	Mar 14/2007		4	Mar 14/2007
	28	Mar 14/2007		21	Mar 14/2007		5	Mar 14/2007
	29	Mar 14/2007		22	Mar 14/2007		6	Mar 14/2007
	30	Mar 14/2007		23	Mar 14/2007		7	Mar 14/2007
	31	Mar 14/2007		24	Mar 14/2007		8	Mar 14/2007
	32	Mar 14/2007		25	Mar 14/2007		9	Mar 07/2008
	33	Mar 14/2007		26	Mar 14/2007		10	Mar 07/2008
	34	Mar 14/2007		27	Mar 14/2007		11	Mar 14/2007
D01400	1	Mar 14/2007		28	Mar 14/2007		12	Mar 14/2007
	2	Mar 14/2007		29	Mar 14/2007		13	Mar 14/2007
	3	Mar 14/2007		30	Mar 14/2007		14	Mar 14/2007
	4	Mar 14/2007		31	Mar 14/2007		15	Mar 14/2007
	5	Mar 14/2007		32	Mar 14/2007		16	Mar 14/2007
	6	Mar 14/2007		33	Mar 14/2007	D01600	1	Mar 14/2007
	7	Mar 14/2007		34	Mar 14/2007		2	Mar 14/2007
	8	Mar 14/2007		35	Mar 14/2007		3	Mar 14/2007

A = Added, R = Revised, D = Deleted, O = Overflow

HOOKUP LIST

D280T132

EFFECTIVE PAGES

Page 13
Aug 05/2009



91-21-51
HOOKUP LIST

Section	Page	Date	Section	Page	Date	Section	Page	Date
D01600 cont.			D01700 cont.			D01800 cont.		
	4	Mar 14/2007		10	Mar 14/2007		9	Mar 14/2007
	5	Mar 14/2007		11	Mar 14/2007		10	Mar 14/2007
	6	Mar 14/2007		12	Mar 14/2007		11	Mar 14/2007
	7	Mar 14/2007		13	Mar 14/2007		12	Mar 14/2007
	8	Mar 14/2007		14	Mar 14/2007		13	Mar 14/2007
	9	Mar 14/2007		15	Mar 14/2007		14	Mar 14/2007
	10	Mar 14/2007		16	Mar 14/2007		15	Mar 14/2007
	11	Mar 14/2007		17	Mar 14/2007		16	Mar 14/2007
	12	Mar 14/2007		18	Mar 14/2007		17	Mar 14/2007
	13	Mar 14/2007		19	Mar 14/2007		18	Mar 14/2007
	14	Mar 14/2007		20	Mar 14/2007		19	Mar 14/2007
	15	Mar 14/2007		21	Mar 14/2007		20	Mar 14/2007
	16	Mar 14/2007		22	Mar 14/2007		21	Mar 14/2007
	17	Mar 14/2007		23	Mar 14/2007		22	Mar 14/2007
	18	Mar 14/2007		24	Mar 14/2007		23	Mar 14/2007
	19	Mar 14/2007		25	Mar 14/2007		24	Mar 14/2007
	20	Mar 14/2007		26	Mar 14/2007		25	Mar 14/2007
	21	Mar 14/2007		27	Mar 14/2007		26	Mar 14/2007
D01700	1	Mar 14/2007		28	Mar 14/2007		27	Mar 14/2007
	2	Mar 14/2007	D01800	1	Mar 14/2007		28	Mar 14/2007
	3	Mar 14/2007		2	Mar 14/2007	D01900	1	Mar 14/2007
	4	Mar 14/2007		3	Mar 14/2007		2	Mar 14/2007
	5	Mar 14/2007		4	Mar 14/2007		3	Mar 14/2007
	6	Mar 14/2007		5	Mar 14/2007		4	Mar 14/2007
	7	Mar 14/2007		6	Mar 14/2007		5	Mar 14/2007
	8	Mar 14/2007		7	Mar 14/2007		6	Mar 14/2007
	9	Mar 14/2007		8	Mar 14/2007		7	Mar 14/2007

A = Added, R = Revised, D = Deleted, O = Overflow

HOOKUP LIST

D280T132

EFFECTIVE PAGES

Page 14
Aug 05/2009



91-21-51
HOOKUP LIST

Section	Page	Date	Section	Page	Date	Section	Page	Date
D01900 cont.			D02000 cont.			D02100 cont.		
	8	Mar 14/2007		7	Mar 14/2007		16	Mar 14/2007
	9	Mar 14/2007		8	Mar 14/2007		17	Mar 14/2007
	10	Mar 14/2007		9	Mar 14/2007		18	Mar 14/2007
	11	Mar 14/2007		10	Mar 14/2007		19	Mar 14/2007
	12	Mar 14/2007		11	Mar 14/2007		20	Mar 14/2007
	13	Mar 14/2007		12	Mar 14/2007		21	Mar 14/2007
	14	Mar 14/2007		13	Mar 14/2007		22	Mar 14/2007
	15	Mar 14/2007		14	Mar 14/2007		23	Mar 14/2007
	16	Mar 14/2007		15	Mar 14/2007		24	Mar 14/2007
	17	Mar 14/2007		16	Mar 14/2007		25	Mar 14/2007
	18	Mar 14/2007		17	Mar 14/2007		26	Mar 14/2007
	19	Mar 14/2007		18	Mar 14/2007		27	Mar 14/2007
	20	Mar 14/2007	D02100	1	Mar 14/2007		28	Mar 14/2007
	21	Mar 14/2007		2	Mar 14/2007		29	Mar 14/2007
	22	Mar 14/2007		3	Mar 14/2007		30	Mar 14/2007
	23	Mar 14/2007		4	Mar 14/2007		31	Mar 14/2007
	24	Mar 14/2007		5	Mar 14/2007		32	Mar 14/2007
	25	Mar 14/2007		6	Mar 14/2007		33	Mar 14/2007
	26	Mar 14/2007		7	Mar 14/2007		34	Mar 14/2007
	27	Mar 14/2007		8	Mar 14/2007		35	Mar 14/2007
	28	Mar 14/2007		9	Mar 14/2007	D02200	1	Mar 14/2007
D02000	1	Mar 14/2007		10	Mar 14/2007		2	Mar 14/2007
	2	Mar 14/2007		11	Mar 14/2007		3	Mar 14/2007
	3	Mar 14/2007		12	Mar 14/2007		4	Mar 14/2007
	4	Mar 14/2007		13	Mar 14/2007		5	Mar 14/2007
	5	Mar 14/2007		14	Mar 14/2007		6	Mar 14/2007
	6	Mar 14/2007		15	Mar 14/2007		7	Mar 14/2007

A = Added, R = Revised, D = Deleted, O = Overflow

HOOKUP LIST

D280T132

EFFECTIVE PAGES

Page 15
Aug 05/2009



91-21-51
HOOKUP LIST

Section	Page	Date	Section	Page	Date	Section	Page	Date
D02200 cont.			D02200 cont.			D02300 cont.		
	8	Mar 14/2007		35	Mar 14/2007		25	Mar 14/2007
	9	Mar 14/2007		36	Mar 14/2007		26	Mar 14/2007
	10	Mar 14/2007		37	Mar 14/2007		27	Mar 14/2007
	11	Mar 14/2007	D02300	1	Mar 14/2007		28	Mar 14/2007
	12	Mar 14/2007		2	Mar 14/2007		29	Mar 14/2007
	13	Mar 14/2007		3	Mar 14/2007		30	Mar 14/2007
	14	Mar 14/2007		4	Mar 14/2007	D02400	1	Mar 14/2007
	15	Mar 14/2007		5	Mar 14/2007		2	Mar 14/2007
	16	Mar 14/2007		6	Mar 14/2007		3	Mar 14/2007
	17	Mar 14/2007		7	Mar 14/2007		4	Mar 14/2007
	18	Mar 14/2007		8	Mar 14/2007		5	Mar 14/2007
	19	Mar 14/2007		9	Mar 14/2007		6	Mar 14/2007
	20	Mar 14/2007		10	Mar 14/2007		7	Mar 14/2007
	21	Mar 14/2007		11	Mar 14/2007		8	Mar 14/2007
	22	Mar 14/2007		12	Mar 14/2007		9	Mar 14/2007
	23	Mar 14/2007		13	Mar 14/2007		10	Mar 14/2007
	24	Mar 14/2007		14	Mar 14/2007		11	Mar 14/2007
	25	Mar 14/2007		15	Mar 14/2007		12	Mar 14/2007
	26	Mar 14/2007		16	Mar 14/2007		13	Mar 14/2007
	27	Mar 14/2007		17	Mar 14/2007		14	Mar 14/2007
	28	Mar 14/2007		18	Mar 14/2007		15	Mar 14/2007
	29	Mar 14/2007		19	Mar 14/2007		16	Mar 14/2007
	30	Mar 14/2007		20	Mar 14/2007		17	Mar 14/2007
	31	Mar 14/2007		21	Mar 14/2007		18	Mar 14/2007
	32	Mar 14/2007		22	Mar 14/2007		19	Mar 14/2007
	33	Mar 14/2007		23	Mar 14/2007		20	Mar 14/2007
	34	Mar 14/2007		24	Mar 14/2007		21	Mar 14/2007

A = Added, R = Revised, D = Deleted, O = Overflow

HOOKUP LIST

D280T132

EFFECTIVE PAGES

Page 16
Aug 05/2009



91-21-51
HOOKUP LIST

Section	Page	Date	Section	Page	Date	Section	Page	Date
D02400 cont.			D02500 cont.			D02600 cont.		
	22	Mar 14/2007		19	Mar 14/2007		18	Mar 14/2007
	23	Mar 14/2007		20	Mar 14/2007		19	Mar 14/2007
	24	Mar 14/2007		21	Mar 14/2007		20	Mar 14/2007
	25	Mar 14/2007		22	Mar 14/2007		21	Mar 14/2007
	26	Mar 14/2007		23	Mar 14/2007		22	Mar 14/2007
	27	Mar 14/2007		24	Mar 14/2007		23	Mar 14/2007
	28	Mar 14/2007		25	Mar 14/2007		24	Mar 14/2007
	29	Mar 14/2007		26	Mar 14/2007		25	Mar 14/2007
	30	Mar 14/2007		27	Mar 14/2007		26	Mar 14/2007
D02500	1	Mar 14/2007	D02600	1	Mar 14/2007		27	Mar 14/2007
	2	Mar 14/2007		2	Mar 14/2007		28	Mar 14/2007
	3	Mar 14/2007		3	Mar 14/2007		29	Mar 14/2007
	4	Mar 14/2007		4	Mar 14/2007		30	Mar 14/2007
	5	Mar 14/2007		5	Mar 14/2007		31	Mar 14/2007
	6	Mar 14/2007		6	Mar 14/2007		32	Mar 14/2007
	7	Mar 14/2007		7	Mar 14/2007		33	Mar 14/2007
	8	Mar 14/2007		8	Mar 14/2007		34	Mar 14/2007
	9	Mar 14/2007		9	Mar 14/2007		35	Mar 14/2007
	10	Mar 14/2007		10	Mar 14/2007		36	Mar 14/2007
	11	Mar 14/2007		11	Mar 14/2007		37	Mar 14/2007
	12	Mar 14/2007		12	Mar 14/2007		38	Mar 14/2007
	13	Mar 14/2007		13	Mar 14/2007		39	Mar 14/2007
	14	Mar 14/2007		14	Mar 14/2007		40	Mar 14/2007
	15	Mar 14/2007		15	Mar 14/2007		41	Mar 14/2007
	16	Mar 14/2007		16	Mar 14/2007		42	Mar 14/2007
	17	Mar 14/2007		17	Mar 14/2007		43	Mar 14/2007
	18	Mar 14/2007					44	Mar 14/2007

A = Added, R = Revised, D = Deleted, O = Overflow

HOOKUP LIST

D280T132

EFFECTIVE PAGES

Page 17
Aug 05/2009



91-21-51
HOOKUP LIST

Section	Page	Date	Section	Page	Date	Section	Page	Date
D02600 cont.			D02700 cont.			D02800 cont.		
	45	Mar 14/2007		12	Mar 14/2007		3	Mar 14/2007
	46	Mar 14/2007		13	Mar 14/2007		4	Mar 14/2007
	47	Mar 14/2007		14	Mar 14/2007		5	Mar 14/2007
	48	Mar 14/2007		15	Mar 14/2007		6	Mar 14/2007
	49	Mar 14/2007		16	Mar 14/2007		7	Mar 14/2007
	50	Mar 14/2007		17	Mar 14/2007		8	Mar 14/2007
	51	Mar 14/2007		18	Mar 14/2007		9	Mar 14/2007
	52	Mar 14/2007		19	Mar 14/2007		10	Mar 14/2007
	53	Mar 14/2007		20	Mar 14/2007		11	Mar 14/2007
	54	Mar 14/2007		21	Mar 14/2007		12	Mar 14/2007
	55	Mar 14/2007		22	Mar 14/2007		13	Mar 14/2007
	56	Mar 14/2007		23	Mar 14/2007		14	Mar 14/2007
	57	Mar 14/2007		24	Mar 14/2007		15	Mar 14/2007
	58	Mar 14/2007		25	Mar 14/2007		16	Mar 14/2007
	59	Mar 14/2007		26	Mar 14/2007		17	Mar 14/2007
	60	Mar 14/2007		27	Mar 14/2007		18	Mar 14/2007
D02700	1	Mar 14/2007		28	Mar 14/2007		19	Mar 14/2007
	2	Mar 14/2007		29	Mar 14/2007		20	Mar 14/2007
	3	Mar 14/2007		30	Mar 14/2007		21	Mar 14/2007
	4	Mar 14/2007		31	Mar 14/2007		22	Mar 14/2007
	5	Mar 14/2007		32	Mar 14/2007		23	Mar 14/2007
	6	Mar 14/2007		33	Mar 14/2007		24	Mar 14/2007
	7	Mar 14/2007		34	Mar 14/2007		25	Mar 14/2007
	8	Mar 14/2007		35	Mar 14/2007		26	Mar 14/2007
	9	Mar 14/2007		36	Mar 14/2007	D02900	1	Mar 14/2007
	10	Mar 14/2007	D02800	1	Mar 14/2007		2	Mar 14/2007
	11	Mar 14/2007		2	Mar 14/2007		3	Mar 14/2007

A = Added, R = Revised, D = Deleted, O = Overflow

HOOKUP LIST

D280T132

EFFECTIVE PAGES

Page 18
Aug 05/2009



91-21-51
HOOKUP LIST

Section	Page	Date	Section	Page	Date	Section	Page	Date
D02900 cont.			D03100 cont.			D03200 cont.		
	4	Mar 14/2007		4	Mar 14/2007		16	Mar 14/2007
	5	Mar 14/2007		5	Mar 14/2007		17	Mar 14/2007
	6	Mar 14/2007		6	Mar 14/2007		18	Mar 14/2007
	7	Mar 14/2007		7	Mar 14/2007		19	Mar 14/2007
	8	Mar 14/2007		8	Mar 14/2007		20	Mar 14/2007
	9	Mar 14/2007		9	Mar 14/2007		21	Mar 14/2007
	10	Mar 14/2007		10	Mar 14/2007		22	Mar 14/2007
	11	Mar 14/2007		11	Mar 14/2007		23	Mar 14/2007
	12	Mar 14/2007		12	Mar 14/2007		24	Mar 14/2007
	13	Mar 14/2007		13	Mar 14/2007		25	Mar 14/2007
	14	Mar 14/2007		14	Mar 14/2007	D03300	1	Mar 14/2007
	15	Mar 14/2007		15	Mar 14/2007		2	Mar 14/2007
D03000	1	Mar 14/2007	D03200	1	Mar 14/2007		3	Mar 14/2007
	2	Mar 14/2007		2	Mar 14/2007		4	Mar 14/2007
	3	Mar 14/2007		3	Mar 14/2007		5	Mar 14/2007
	4	Mar 14/2007		4	Mar 14/2007		6	Mar 14/2007
	5	Mar 14/2007		5	Mar 14/2007		7	Mar 14/2007
	6	Mar 14/2007		6	Mar 14/2007		8	Mar 14/2007
	7	Mar 14/2007		7	Mar 14/2007		9	Mar 14/2007
	8	Mar 14/2007		8	Mar 14/2007		10	Mar 14/2007
	9	Mar 14/2007		9	Mar 14/2007		11	Mar 14/2007
	10	Mar 14/2007		10	Mar 14/2007		12	Mar 14/2007
	11	Mar 14/2007		11	Mar 14/2007		13	Mar 14/2007
	12	Mar 14/2007		12	Mar 14/2007		14	Mar 14/2007
D03100	1	Mar 14/2007		13	Mar 14/2007		15	Mar 14/2007
	2	Mar 14/2007		14	Mar 14/2007		16	Mar 14/2007
	3	Mar 14/2007		15	Mar 14/2007		17	Mar 14/2007

A = Added, R = Revised, D = Deleted, O = Overflow

HOOKUP LIST

D280T132

EFFECTIVE PAGES

Page 19
Aug 05/2009



91-21-51
HOOKUP LIST

Section	Page	Date	Section	Page	Date	Section	Page	Date
D03300 cont.			D03500 cont.			D03600 cont.		
	18	Mar 14/2007		2	Mar 14/2007		16	Mar 14/2007
	19	Mar 14/2007		3	Mar 14/2007	D03700	1	Mar 14/2007
	20	Mar 14/2007		4	Mar 14/2007		2	Mar 14/2007
	21	Mar 14/2007		5	Mar 14/2007		3	Mar 14/2007
	22	Mar 14/2007		6	Mar 14/2007		4	Mar 14/2007
	23	Mar 14/2007		7	Mar 14/2007		5	Mar 14/2007
	24	Mar 14/2007		8	Mar 14/2007		6	Mar 14/2007
	25	Mar 14/2007		9	Mar 14/2007		7	Mar 14/2007
	26	Mar 14/2007		10	Mar 14/2007		8	Mar 14/2007
	27	Mar 14/2007		11	Mar 14/2007		9	Mar 14/2007
D03400	1	Mar 14/2007		12	Mar 14/2007		10	Mar 14/2007
	2	Mar 14/2007		13	Mar 14/2007		11	Mar 14/2007
	3	Mar 14/2007	D03600	1	Mar 14/2007		12	Mar 14/2007
	4	Mar 14/2007		2	Mar 14/2007	D03800	1	Mar 14/2007
	5	Mar 14/2007		3	Mar 14/2007		2	Mar 14/2007
	6	Mar 14/2007		4	Mar 14/2007		3	Mar 14/2007
	7	Mar 14/2007		5	Mar 14/2007		4	Mar 14/2007
	8	Mar 14/2007		6	Mar 14/2007		5	Mar 14/2007
	9	Mar 14/2007		7	Mar 14/2007	D03900	1	Mar 14/2007
	10	Mar 14/2007		8	Mar 14/2007		2	Mar 14/2007
	11	Mar 14/2007		9	Mar 14/2007		3	Mar 14/2007
	12	Mar 14/2007		10	Mar 14/2007		4	Mar 14/2007
	13	Mar 14/2007		11	Mar 14/2007		5	Mar 14/2007
	14	Mar 14/2007		12	Mar 14/2007		6	Mar 14/2007
	15	Mar 14/2007		13	Mar 14/2007		7	Mar 14/2007
	16	Mar 14/2007		14	Mar 14/2007		8	Mar 14/2007
D03500	1	Mar 14/2007		15	Mar 14/2007		9	Mar 14/2007

A = Added, R = Revised, D = Deleted, O = Overflow

HOOKUP LIST

D280T132

EFFECTIVE PAGES

Page 20
Aug 05/2009



91-21-51
HOOKUP LIST

Section	Page	Date	Section	Page	Date	Section	Page	Date
D03900 cont.			D04000 cont.			D04000 cont.		
	10	Mar 14/2007		26	Aug 15/2007		53	Feb 06/2009
	11	Mar 14/2007		27	Aug 15/2007		54	Feb 06/2009
D04000	1	Mar 14/2007		28	Aug 15/2007		55	Feb 06/2009
	2	Mar 14/2007		29	Aug 15/2007		56	Feb 06/2009
	3	Mar 14/2007		30	Aug 15/2007		57	Feb 06/2009
	4	Mar 14/2007		31	Aug 15/2007		58	Jun 06/2008
	5	Mar 14/2007		32	Aug 15/2007		59	Jun 06/2008
	6	Mar 14/2007		33	Feb 06/2009		60	Aug 15/2007
	7	Mar 14/2007		34	Feb 06/2009		61	Aug 15/2007
	8	Mar 14/2007		35	Feb 06/2009		62	Aug 15/2007
	9	Mar 14/2007		36	Feb 06/2009		63	Aug 15/2007
	10	Mar 14/2007		37	Feb 06/2009		64	Aug 15/2007
	11	Mar 14/2007		38	Feb 06/2009		65	Aug 15/2007
	12	Mar 14/2007		39	Feb 06/2009		66	Aug 15/2007
	13	Mar 14/2007		40	Feb 06/2009		67	Aug 15/2007
	14	Aug 15/2007		41	Feb 06/2009		68	Aug 15/2007
	15	Aug 15/2007		42	Feb 06/2009		69	Aug 15/2007
	16	Aug 15/2007		43	Feb 06/2009		70	Aug 15/2007
	17	Aug 15/2007		44	Feb 06/2009	D04100	1	Mar 14/2007
	18	Aug 15/2007		45	Feb 06/2009		2	Mar 14/2007
	19	Aug 15/2007		46	Feb 06/2009		3	Mar 14/2007
	20	Aug 15/2007		47	Feb 06/2009		4	Mar 14/2007
	21	Aug 15/2007		48	Feb 06/2009		5	Mar 14/2007
	22	Aug 15/2007		49	Feb 06/2009		6	Mar 14/2007
	23	Aug 15/2007		50	Feb 06/2009		7	Mar 14/2007
	24	Aug 15/2007		51	Feb 06/2009		8	Mar 14/2007
	25	Aug 15/2007		52	Feb 06/2009		9	Mar 14/2007

A = Added, R = Revised, D = Deleted, O = Overflow

HOOKUP LIST

D280T132

EFFECTIVE PAGES

Page 21
Aug 05/2009



91-21-51
HOOKUP LIST

Section	Page	Date	Section	Page	Date	Section	Page	Date
D04100 cont.			D04100 cont.			D04200 cont.		
	10	Mar 14/2007		37	Mar 14/2007		5	Mar 14/2007
	11	Mar 14/2007		38	Mar 14/2007		6	Mar 14/2007
	12	Mar 14/2007		39	Mar 14/2007		7	Mar 14/2007
	13	Mar 14/2007		40	Mar 14/2007		8	Mar 14/2007
	14	Mar 14/2007		41	Mar 14/2007		9	Mar 14/2007
	15	Mar 14/2007		42	Mar 14/2007		10	Mar 14/2007
	16	Mar 14/2007		43	Mar 14/2007		11	Mar 14/2007
	17	Mar 14/2007		44	Mar 14/2007		12	Mar 14/2007
	18	Mar 14/2007		45	Mar 14/2007		13	Mar 14/2007
	19	Mar 14/2007		46	Mar 14/2007		14	Mar 14/2007
	20	Mar 14/2007		47	Mar 14/2007		15	Mar 14/2007
	21	Mar 14/2007		48	Mar 14/2007		16	Mar 14/2007
	22	Mar 14/2007		49	Mar 14/2007		17	Mar 14/2007
	23	Mar 14/2007		50	Mar 14/2007		18	Mar 14/2007
	24	Mar 14/2007		51	Mar 14/2007		19	Mar 14/2007
	25	Mar 14/2007		52	Mar 14/2007		20	Mar 14/2007
	26	Mar 14/2007		53	Mar 14/2007		21	Mar 14/2007
	27	Mar 14/2007		54	Mar 14/2007		22	Mar 14/2007
	28	Mar 14/2007		55	Mar 14/2007		23	Mar 14/2007
	29	Mar 14/2007		56	Mar 14/2007		24	Mar 14/2007
	30	Mar 14/2007		57	Mar 14/2007		25	Mar 14/2007
	31	Mar 14/2007		58	Mar 14/2007		26	Mar 14/2007
	32	Mar 14/2007		59	Mar 14/2007		27	Mar 14/2007
	33	Mar 14/2007	D04200	1	Mar 14/2007		28	Mar 14/2007
	34	Mar 14/2007		2	Mar 14/2007		29	Mar 14/2007
	35	Mar 14/2007		3	Mar 14/2007		30	Mar 14/2007
	36	Mar 14/2007		4	Mar 14/2007		31	Mar 14/2007

A = Added, R = Revised, D = Deleted, O = Overflow

HOOKUP LIST

D280T132

EFFECTIVE PAGES

Page 22
Aug 05/2009



91-21-51
HOOKUP LIST

Section	Page	Date	Section	Page	Date	Section	Page	Date
D04200 cont.			D04200 cont.			D04200 cont.		
	32	Mar 14/2007		59	Mar 14/2007		86	Mar 14/2007
	33	Mar 14/2007		60	Mar 14/2007		87	Mar 14/2007
	34	Mar 14/2007		61	Mar 14/2007		88	Mar 14/2007
	35	Mar 14/2007		62	Mar 14/2007		89	Mar 14/2007
	36	Mar 14/2007		63	Mar 14/2007		90	Mar 14/2007
	37	Mar 14/2007		64	Mar 14/2007		91	Mar 14/2007
	38	Mar 14/2007		65	Mar 14/2007		92	Mar 14/2007
	39	Mar 14/2007		66	Mar 14/2007		93	Mar 14/2007
	40	Mar 14/2007		67	Mar 14/2007		94	Mar 14/2007
	41	Mar 14/2007		68	Mar 14/2007		95	Mar 14/2007
	42	Mar 14/2007		69	Mar 14/2007		96	Mar 14/2007
	43	Mar 14/2007		70	Mar 14/2007		97	Mar 14/2007
	44	Mar 14/2007		71	Mar 14/2007		98	Mar 14/2007
	45	Mar 14/2007		72	Mar 14/2007		99	Mar 14/2007
	46	Mar 14/2007		73	Mar 14/2007		100	Mar 14/2007
	47	Mar 14/2007		74	Mar 14/2007		101	Mar 14/2007
	48	Mar 14/2007		75	Mar 14/2007		102	Mar 14/2007
	49	Mar 14/2007		76	Mar 14/2007		103	Mar 14/2007
	50	Mar 14/2007		77	Mar 14/2007		104	Mar 14/2007
	51	Mar 14/2007		78	Mar 14/2007		105	Mar 14/2007
	52	Mar 14/2007		79	Mar 14/2007	D04300	1	Mar 14/2007
	53	Mar 14/2007		80	Mar 14/2007		2	Mar 14/2007
	54	Mar 14/2007		81	Mar 14/2007		3	Mar 14/2007
	55	Mar 14/2007		82	Mar 14/2007		4	Mar 14/2007
	56	Mar 14/2007		83	Mar 14/2007		5	Mar 14/2007
	57	Mar 14/2007		84	Mar 14/2007		6	Mar 14/2007
	58	Mar 14/2007		85	Mar 14/2007		7	Mar 14/2007

A = Added, R = Revised, D = Deleted, O = Overflow

HOOKUP LIST

D280T132

EFFECTIVE PAGES

Page 23
Aug 05/2009



91-21-51
HOOKUP LIST

Section	Page	Date	Section	Page	Date	Section	Page	Date
D04300 cont.			D04300 cont.			D04300 cont.		
	8	Mar 14/2007		35	Mar 14/2007		62	Mar 14/2007
	9	Mar 14/2007		36	Mar 14/2007		63	Mar 14/2007
	10	Mar 14/2007		37	Mar 14/2007		64	Mar 14/2007
	11	Mar 14/2007		38	Mar 14/2007		65	Mar 14/2007
	12	Mar 14/2007		39	Mar 14/2007		66	Mar 14/2007
	13	Mar 14/2007		40	Mar 14/2007		67	Mar 14/2007
	14	Mar 14/2007		41	Mar 14/2007		68	Mar 14/2007
	15	Mar 14/2007		42	Mar 14/2007		69	Mar 14/2007
	16	Mar 14/2007		43	Mar 14/2007		70	Mar 14/2007
	17	Mar 14/2007		44	Mar 14/2007		71	Mar 14/2007
	18	Mar 14/2007		45	Mar 14/2007		72	Mar 14/2007
	19	Mar 14/2007		46	Mar 14/2007		73	Mar 14/2007
	20	Mar 14/2007		47	Mar 14/2007		74	Mar 14/2007
	21	Mar 14/2007		48	Mar 14/2007		75	Mar 14/2007
	22	Mar 14/2007		49	Mar 14/2007		76	Mar 14/2007
	23	Mar 14/2007		50	Mar 14/2007		77	Mar 14/2007
	24	Mar 14/2007		51	Mar 14/2007		78	Mar 14/2007
	25	Mar 14/2007		52	Mar 14/2007		79	Mar 14/2007
	26	Mar 14/2007		53	Mar 14/2007		80	Mar 14/2007
	27	Mar 14/2007		54	Mar 14/2007		81	Mar 14/2007
	28	Mar 14/2007		55	Mar 14/2007		82	Mar 14/2007
	29	Mar 14/2007		56	Mar 14/2007		83	Mar 14/2007
	30	Mar 14/2007		57	Mar 14/2007		84	Mar 14/2007
	31	Mar 14/2007		58	Mar 14/2007		85	Mar 14/2007
	32	Mar 14/2007		59	Mar 14/2007		86	Mar 14/2007
	33	Mar 14/2007		60	Mar 14/2007		87	Mar 14/2007
	34	Mar 14/2007		61	Mar 14/2007		88	Mar 14/2007

A = Added, R = Revised, D = Deleted, O = Overflow

HOOKUP LIST

D280T132

EFFECTIVE PAGES

Page 24
Aug 05/2009



91-21-51
HOOKUP LIST

Section	Page	Date	Section	Page	Date	Section	Page	Date
D04300 cont.			D04400 cont.			D04400 cont.		
	89	Mar 14/2007		12	Mar 14/2007		39	Mar 14/2007
	90	Mar 14/2007		13	Mar 14/2007		40	Mar 14/2007
	91	Mar 14/2007		14	Mar 14/2007		41	Mar 14/2007
	92	Mar 14/2007		15	Mar 14/2007		42	Mar 14/2007
	93	Mar 14/2007		16	Mar 14/2007		43	Mar 14/2007
	94	Mar 14/2007		17	Mar 14/2007		44	Mar 14/2007
	95	Mar 14/2007		18	Mar 14/2007		45	Mar 14/2007
	96	Mar 14/2007		19	Mar 14/2007		46	Mar 14/2007
	97	Mar 14/2007		20	Mar 14/2007		47	Mar 14/2007
	98	Mar 14/2007		21	Mar 14/2007		48	Mar 14/2007
	99	Mar 14/2007		22	Mar 14/2007		49	Mar 14/2007
	100	Mar 14/2007		23	Mar 14/2007		50	Mar 14/2007
	101	Mar 14/2007		24	Mar 14/2007		51	Mar 14/2007
	102	Mar 14/2007		25	Mar 14/2007		52	Mar 14/2007
	103	Mar 14/2007		26	Mar 14/2007		53	Mar 14/2007
	104	Mar 14/2007		27	Mar 14/2007	D04500	1	Mar 14/2007
D04400	1	Mar 14/2007		28	Mar 14/2007		2	Mar 14/2007
	2	Mar 14/2007		29	Mar 14/2007		3	Mar 14/2007
	3	Mar 14/2007		30	Mar 14/2007		4	Mar 14/2007
	4	Mar 14/2007		31	Mar 14/2007		5	Mar 14/2007
	5	Mar 14/2007		32	Mar 14/2007		6	Mar 14/2007
	6	Mar 14/2007		33	Mar 14/2007		7	Mar 14/2007
	7	Mar 14/2007		34	Mar 14/2007		8	Mar 14/2007
	8	Mar 14/2007		35	Mar 14/2007		9	Mar 14/2007
	9	Mar 14/2007		36	Mar 14/2007		10	Mar 14/2007
	10	Mar 14/2007		37	Mar 14/2007		11	Mar 14/2007
	11	Mar 14/2007		38	Mar 14/2007		12	Mar 14/2007

A = Added, R = Revised, D = Deleted, O = Overflow

HOOKUP LIST

D280T132

EFFECTIVE PAGES

Page 25
Aug 05/2009



91-21-51
HOOKUP LIST

Section	Page	Date	Section	Page	Date	Section	Page	Date
D04500 cont.			D04500 cont.			D04500 cont.		
	13	Mar 14/2007		40	Mar 14/2007		67	Mar 14/2007
	14	Mar 14/2007		41	Mar 14/2007		68	Mar 14/2007
	15	Mar 14/2007		42	Mar 14/2007		69	Mar 14/2007
	16	Mar 14/2007		43	Mar 14/2007		70	Mar 14/2007
	17	Mar 14/2007		44	Mar 14/2007		71	Mar 14/2007
	18	Mar 14/2007		45	Mar 14/2007		72	Mar 14/2007
	19	Mar 14/2007		46	Mar 14/2007		73	Mar 14/2007
	20	Mar 14/2007		47	Mar 14/2007		74	Mar 14/2007
	21	Mar 14/2007		48	Mar 14/2007		75	Mar 14/2007
	22	Mar 14/2007		49	Mar 14/2007		76	Mar 14/2007
	23	Mar 14/2007		50	Mar 14/2007		77	Mar 14/2007
	24	Mar 14/2007		51	Mar 14/2007		78	Mar 14/2007
	25	Mar 14/2007		52	Mar 14/2007		79	Mar 14/2007
	26	Mar 14/2007		53	Mar 14/2007		80	Mar 14/2007
	27	Mar 14/2007		54	Mar 14/2007		81	Mar 14/2007
	28	Mar 14/2007		55	Mar 14/2007		82	Mar 14/2007
	29	Mar 14/2007		56	Mar 14/2007		83	Mar 14/2007
	30	Mar 14/2007		57	Mar 14/2007		84	Mar 14/2007
	31	Mar 14/2007		58	Mar 14/2007	D04600	1	Mar 14/2007
	32	Mar 14/2007		59	Mar 14/2007		2	Mar 14/2007
	33	Mar 14/2007		60	Mar 14/2007		3	Mar 14/2007
	34	Mar 14/2007		61	Mar 14/2007		4	Mar 14/2007
	35	Mar 14/2007		62	Mar 14/2007		5	Mar 14/2007
	36	Mar 14/2007		63	Mar 14/2007		6	Mar 14/2007
	37	Mar 14/2007		64	Mar 14/2007		7	Mar 14/2007
	38	Mar 14/2007		65	Mar 14/2007		8	Mar 14/2007
	39	Mar 14/2007		66	Mar 14/2007		9	Mar 14/2007

A = Added, R = Revised, D = Deleted, O = Overflow

HOOKUP LIST

D280T132

EFFECTIVE PAGES

Page 26
Aug 05/2009



91-21-51
HOOKUP LIST

Section	Page	Date	Section	Page	Date	Section	Page	Date
D04600 cont.			D04600 cont.			D04600 cont.		
	10	Mar 14/2007		37	Mar 14/2007		64	Mar 14/2007
	11	Mar 14/2007		38	Mar 14/2007		65	Mar 14/2007
	12	Mar 14/2007		39	Mar 14/2007		66	Mar 14/2007
	13	Mar 14/2007		40	Mar 14/2007		67	Mar 14/2007
	14	Mar 14/2007		41	Mar 14/2007		68	Mar 14/2007
	15	Mar 14/2007		42	Mar 14/2007		69	Mar 14/2007
	16	Mar 14/2007		43	Mar 14/2007		70	Mar 14/2007
	17	Mar 14/2007		44	Mar 14/2007		71	Mar 14/2007
	18	Mar 14/2007		45	Mar 14/2007		72	Mar 14/2007
	19	Mar 14/2007		46	Mar 14/2007		73	Mar 14/2007
	20	Mar 14/2007		47	Mar 14/2007		74	Mar 14/2007
	21	Mar 14/2007		48	Mar 14/2007		75	Mar 14/2007
	22	Mar 14/2007		49	Mar 14/2007		76	Mar 14/2007
	23	Mar 14/2007		50	Mar 14/2007		77	Mar 14/2007
	24	Mar 14/2007		51	Mar 14/2007		78	Mar 14/2007
	25	Mar 14/2007		52	Mar 14/2007		79	Mar 14/2007
	26	Mar 14/2007		53	Mar 14/2007		80	Mar 14/2007
	27	Mar 14/2007		54	Mar 14/2007		81	Mar 14/2007
	28	Mar 14/2007		55	Mar 14/2007		82	Mar 14/2007
	29	Mar 14/2007		56	Mar 14/2007		83	Mar 14/2007
	30	Mar 14/2007		57	Mar 14/2007		84	Mar 14/2007
	31	Mar 14/2007		58	Mar 14/2007		85	Mar 14/2007
	32	Mar 14/2007		59	Mar 14/2007		86	Mar 14/2007
	33	Mar 14/2007		60	Mar 14/2007		87	Mar 14/2007
	34	Mar 14/2007		61	Mar 14/2007		88	Mar 14/2007
	35	Mar 14/2007		62	Mar 14/2007		89	Mar 14/2007
	36	Mar 14/2007		63	Mar 14/2007		90	Mar 14/2007

A = Added, R = Revised, D = Deleted, O = Overflow

HOOKUP LIST

D280T132

EFFECTIVE PAGES

Page 27
Aug 05/2009



91-21-51
HOOKUP LIST

Section	Page	Date	Section	Page	Date	Section	Page	Date
D04700	1	Mar 14/2007	D04700 cont.			D04700 cont.		
	2	Mar 14/2007		29	Mar 14/2007		56	Mar 14/2007
	3	Mar 14/2007		30	Mar 14/2007		57	Mar 14/2007
	4	Mar 14/2007		31	Mar 14/2007		58	Mar 14/2007
	5	Mar 14/2007		32	Mar 14/2007		59	Mar 14/2007
	6	Mar 14/2007		33	Mar 14/2007		60	Mar 14/2007
	7	Mar 14/2007		34	Mar 14/2007		61	Mar 14/2007
	8	Mar 14/2007		35	Mar 14/2007		62	Mar 14/2007
	9	Mar 14/2007		36	Mar 14/2007		63	Mar 14/2007
	10	Mar 14/2007		37	Mar 14/2007		64	Mar 14/2007
	11	Mar 14/2007		38	Mar 14/2007		65	Mar 14/2007
	12	Mar 14/2007		39	Mar 14/2007		66	Mar 14/2007
	13	Mar 14/2007		40	Mar 14/2007		67	Mar 14/2007
	14	Mar 14/2007		41	Mar 14/2007		68	Mar 14/2007
	15	Mar 14/2007		42	Mar 14/2007		69	Mar 14/2007
	16	Mar 14/2007		43	Mar 14/2007		70	Mar 14/2007
	17	Mar 14/2007		44	Mar 14/2007		71	Mar 14/2007
	18	Mar 14/2007		45	Mar 14/2007		72	Mar 14/2007
	19	Mar 14/2007		46	Mar 14/2007		73	Mar 14/2007
	20	Mar 14/2007		47	Mar 14/2007		74	Mar 14/2007
	21	Mar 14/2007		48	Mar 14/2007		75	Mar 14/2007
	22	Mar 14/2007		49	Mar 14/2007		76	Mar 14/2007
	23	Mar 14/2007		50	Mar 14/2007		77	Mar 14/2007
	24	Mar 14/2007		51	Mar 14/2007		78	Mar 14/2007
	25	Mar 14/2007		52	Mar 14/2007		79	Mar 14/2007
	26	Mar 14/2007		53	Mar 14/2007		80	Mar 14/2007
	27	Mar 14/2007		54	Mar 14/2007		81	Mar 14/2007
	28	Mar 14/2007		55	Mar 14/2007		82	Mar 14/2007

A = Added, R = Revised, D = Deleted, O = Overflow

HOOKUP LIST

D280T132

EFFECTIVE PAGES

Page 28
Aug 05/2009



91-21-51
HOOKUP LIST

Section	Page	Date	Section	Page	Date	Section	Page	Date
D04700 cont.			D04700 cont.			D04800 cont.		
	83	Mar 14/2007		110	Mar 14/2007		14	Mar 14/2007
	84	Mar 14/2007		111	Mar 14/2007		15	Mar 14/2007
	85	Mar 14/2007		112	Mar 14/2007		16	Mar 14/2007
	86	Mar 14/2007		113	Mar 14/2007		17	Mar 14/2007
	87	Mar 14/2007		114	Mar 14/2007		18	Mar 14/2007
	88	Mar 14/2007		115	Mar 14/2007		19	Mar 14/2007
	89	Mar 14/2007		116	Mar 14/2007		20	Mar 14/2007
	90	Mar 14/2007		117	Mar 14/2007		21	Mar 14/2007
	91	Mar 14/2007		118	Mar 14/2007		22	Mar 14/2007
	92	Mar 14/2007		119	Mar 14/2007		23	Mar 14/2007
	93	Mar 14/2007		120	Mar 14/2007		24	Mar 14/2007
	94	Mar 14/2007		121	Mar 14/2007		25	Mar 14/2007
	95	Mar 14/2007		122	Mar 14/2007		26	Mar 14/2007
	96	Mar 14/2007		123	Mar 14/2007		27	Mar 14/2007
	97	Mar 14/2007	D04800	1	Mar 14/2007		28	Mar 14/2007
	98	Mar 14/2007		2	Mar 14/2007		29	Mar 14/2007
	99	Mar 14/2007		3	Mar 14/2007		30	Mar 14/2007
	100	Mar 14/2007		4	Mar 14/2007		31	Mar 14/2007
	101	Mar 14/2007		5	Mar 14/2007		32	Mar 14/2007
	102	Mar 14/2007		6	Mar 14/2007		33	Mar 14/2007
	103	Mar 14/2007		7	Mar 14/2007		34	Mar 14/2007
	104	Mar 14/2007		8	Mar 14/2007		35	Mar 14/2007
	105	Mar 14/2007		9	Mar 14/2007		36	Mar 14/2007
	106	Mar 14/2007		10	Mar 14/2007		37	Mar 14/2007
	107	Mar 14/2007		11	Mar 14/2007		38	Mar 14/2007
	108	Mar 14/2007		12	Mar 14/2007		39	Mar 14/2007
	109	Mar 14/2007		13	Mar 14/2007		40	Mar 14/2007

A = Added, R = Revised, D = Deleted, O = Overflow

HOOKUP LIST

D280T132

EFFECTIVE PAGES

Page 29
Aug 05/2009



91-21-51
HOOKUP LIST

Section	Page	Date	Section	Page	Date	Section	Page	Date
D04800 cont.			D04800 cont.			D04900 cont.		
	41	Mar 14/2007		68	Feb 06/2009		14	Feb 06/2009
	42	Mar 14/2007		69	Feb 06/2009		15	Feb 06/2009
	43	Mar 14/2007		70	Feb 06/2009		16	Feb 06/2009
	44	Feb 06/2009		71	Feb 06/2009		17	Feb 06/2009
	45	Feb 06/2009		72	Feb 06/2009		18	Feb 06/2009
	46	Feb 06/2009		73	Feb 06/2009		19	Feb 06/2009
	47	Feb 06/2009		74	Feb 06/2009		20	Feb 06/2009
	48	Feb 06/2009		75	Feb 06/2009		21	Feb 06/2009
	49	Feb 06/2009		76	Feb 06/2009		22	Feb 06/2009
	50	Feb 06/2009		77	Feb 06/2009		23	Feb 06/2009
	51	Feb 06/2009		78	Feb 06/2009		24	Feb 06/2009
	52	Feb 06/2009		79	Feb 06/2009		25	Feb 06/2009
	53	Feb 06/2009		80	Feb 06/2009		26	Feb 06/2009
	54	Feb 06/2009		81	Feb 06/2009		27	Feb 06/2009
	55	Feb 06/2009	D04900	1	Mar 14/2007		28	Feb 06/2009
	56	Feb 06/2009		2	Mar 14/2007		29	Feb 06/2009
	57	Feb 06/2009		3	Mar 14/2007		30	Feb 06/2009
	58	Feb 06/2009		4	Feb 06/2009		31	Feb 06/2009
	59	Feb 06/2009		5	Feb 06/2009		32	Mar 14/2007
	60	Feb 06/2009		6	Feb 06/2009		33	Mar 14/2007
	61	Feb 06/2009		7	Feb 06/2009		34	Mar 14/2007
	62	Feb 06/2009		8	Feb 06/2009		35	Mar 14/2007
	63	Feb 06/2009		9	Feb 06/2009		36	Mar 14/2007
	64	Feb 06/2009		10	Feb 06/2009		37	Mar 14/2007
	65	Feb 06/2009		11	Feb 06/2009		38	Mar 14/2007
	66	Feb 06/2009		12	Feb 06/2009		39	Mar 14/2007
	67	Feb 06/2009		13	Feb 06/2009		40	Mar 14/2007

A = Added, R = Revised, D = Deleted, O = Overflow

HOOKUP LIST

D280T132

EFFECTIVE PAGES

Page 30
Aug 05/2009



91-21-51
HOOKUP LIST

Section	Page	Date	Section	Page	Date	Section	Page	Date
D04900 cont.			D04900 cont.			D04900 cont.		
	41	Mar 14/2007		68	Mar 14/2007		95	Mar 14/2007
	42	Mar 14/2007		69	Mar 14/2007		96	Mar 14/2007
	43	Mar 14/2007		70	Mar 14/2007		97	Mar 14/2007
	44	Mar 14/2007		71	Mar 14/2007		98	Mar 14/2007
	45	Mar 14/2007		72	Mar 14/2007		99	Mar 14/2007
	46	Mar 14/2007		73	Mar 14/2007		100	Mar 14/2007
	47	Mar 14/2007		74	Mar 14/2007		101	Mar 14/2007
	48	Mar 14/2007		75	Mar 14/2007		102	Mar 14/2007
	49	Mar 14/2007		76	Mar 14/2007		103	Mar 14/2007
	50	Mar 14/2007		77	Mar 14/2007		104	Mar 14/2007
	51	Mar 14/2007		78	Mar 14/2007		105	Mar 14/2007
	52	Mar 14/2007		79	Mar 14/2007		106	Mar 14/2007
	53	Mar 14/2007		80	Mar 14/2007		107	Mar 14/2007
	54	Mar 14/2007		81	Mar 14/2007		108	Mar 14/2007
	55	Mar 14/2007		82	Mar 14/2007		109	Mar 14/2007
	56	Mar 14/2007		83	Mar 14/2007		110	Mar 14/2007
	57	Mar 14/2007		84	Mar 14/2007	D05000	1	Mar 14/2007
	58	Mar 14/2007		85	Mar 14/2007		2	Mar 14/2007
	59	Mar 14/2007		86	Mar 14/2007		3	Mar 14/2007
	60	Mar 14/2007		87	Mar 14/2007		4	Mar 14/2007
	61	Mar 14/2007		88	Mar 14/2007		5	Mar 14/2007
	62	Mar 14/2007		89	Mar 14/2007		6	Mar 14/2007
	63	Mar 14/2007		90	Mar 14/2007		7	Mar 14/2007
	64	Mar 14/2007		91	Mar 14/2007		8	Mar 14/2007
	65	Mar 14/2007		92	Mar 14/2007		9	Mar 14/2007
	66	Mar 14/2007		93	Mar 14/2007		10	Mar 14/2007
	67	Mar 14/2007		94	Mar 14/2007		11	Mar 14/2007

A = Added, R = Revised, D = Deleted, O = Overflow

HOOKUP LIST

D280T132

EFFECTIVE PAGES

Page 31
Aug 05/2009



91-21-51
HOOKUP LIST

Section	Page	Date	Section	Page	Date	Section	Page	Date
D05000 cont.			D05000 cont.			D05000 cont.		
	12	Mar 14/2007		39	Mar 14/2007		66	Feb 06/2009
	13	Mar 14/2007		40	Mar 14/2007		67	Feb 06/2009
	14	Mar 14/2007		41	Mar 14/2007		68	Feb 06/2009
	15	Mar 14/2007		42	Mar 14/2007		69	Feb 06/2009
	16	Mar 14/2007		43	Mar 14/2007		70	Feb 06/2009
	17	Mar 14/2007		44	Mar 14/2007		71	Feb 06/2009
	18	Mar 14/2007		45	Mar 14/2007		72	Feb 06/2009
	19	Mar 14/2007		46	Mar 14/2007		73	Feb 06/2009
	20	Mar 14/2007		47	Mar 14/2007		74	Feb 06/2009
	21	Mar 14/2007		48	Mar 14/2007		75	Feb 06/2009
	22	Mar 14/2007		49	Mar 14/2007		76	Feb 06/2009
	23	Mar 14/2007		50	Mar 14/2007		77	Feb 06/2009
	24	Mar 14/2007		51	Mar 14/2007		78	Feb 06/2009
	25	Mar 14/2007		52	Mar 14/2007		79	Feb 06/2009
	26	Mar 14/2007		53	Mar 14/2007		80	Feb 06/2009
	27	Mar 14/2007		54	Feb 06/2009		81	Feb 06/2009
	28	Mar 14/2007		55	Feb 06/2009		82	Feb 06/2009
	29	Mar 14/2007		56	Feb 06/2009		83	Feb 06/2009
	30	Mar 14/2007		57	Feb 06/2009		84	Feb 06/2009
	31	Mar 14/2007		58	Feb 06/2009		85	Feb 06/2009
	32	Mar 14/2007		59	Feb 06/2009		86	Feb 06/2009
	33	Mar 14/2007		60	Feb 06/2009		87	Feb 06/2009
	34	Mar 14/2007		61	Feb 06/2009		88	Feb 06/2009
	35	Mar 14/2007		62	Feb 06/2009		89	Feb 06/2009
	36	Mar 14/2007		63	Feb 06/2009		90	Feb 06/2009
	37	Mar 14/2007		64	Feb 06/2009		91	Feb 06/2009
	38	Mar 14/2007		65	Feb 06/2009		92	Feb 06/2009

A = Added, R = Revised, D = Deleted, O = Overflow

HOOKUP LIST

D280T132

EFFECTIVE PAGES

Page 32
Aug 05/2009



91-21-51
HOOKUP LIST

Section	Page	Date	Section	Page	Date	Section	Page	Date
D05000 cont.			D05000 cont.			D05100 cont.		
	93	Feb 06/2009		120	Feb 06/2009		27	Mar 14/2007
	94	Feb 06/2009	D05100	1	Mar 14/2007		28	Mar 14/2007
	95	Feb 06/2009		2	Mar 14/2007		29	Mar 14/2007
	96	Feb 06/2009		3	Mar 14/2007		30	Mar 14/2007
	97	Feb 06/2009		4	Mar 14/2007		31	Mar 14/2007
	98	Feb 06/2009		5	Mar 14/2007		32	Mar 14/2007
	99	Feb 06/2009		6	Mar 14/2007		33	Mar 14/2007
	100	Feb 06/2009		7	Mar 14/2007		34	Mar 14/2007
	101	Feb 06/2009		8	Mar 14/2007		35	Mar 14/2007
	102	Feb 06/2009		9	Mar 14/2007		36	Mar 14/2007
	103	Feb 06/2009		10	Mar 14/2007		37	Mar 14/2007
	104	Feb 06/2009		11	Mar 14/2007		38	Mar 14/2007
	105	Feb 06/2009		12	Mar 14/2007		39	Mar 14/2007
	106	Feb 06/2009		13	Mar 14/2007		40	Mar 14/2007
	107	Feb 06/2009		14	Mar 14/2007		41	Mar 14/2007
	108	Feb 06/2009		15	Mar 14/2007		42	Mar 14/2007
	109	Feb 06/2009		16	Mar 14/2007		43	Mar 14/2007
	110	Feb 06/2009		17	Mar 14/2007		44	Mar 14/2007
	111	Feb 06/2009		18	Mar 14/2007		45	Mar 14/2007
	112	Feb 06/2009		19	Mar 14/2007		46	Mar 14/2007
	113	Feb 06/2009		20	Mar 14/2007		47	Mar 14/2007
	114	Feb 06/2009		21	Mar 14/2007		48	Mar 14/2007
	115	Feb 06/2009		22	Mar 14/2007		49	Mar 14/2007
	116	Feb 06/2009		23	Mar 14/2007		50	Mar 14/2007
	117	Feb 06/2009		24	Mar 14/2007		51	Mar 14/2007
	118	Feb 06/2009		25	Mar 14/2007		52	Mar 14/2007
	119	Feb 06/2009		26	Mar 14/2007		53	Mar 14/2007

A = Added, R = Revised, D = Deleted, O = Overflow

HOOKUP LIST

D280T132

EFFECTIVE PAGES

Page 33
Aug 05/2009



91-21-51
HOOKUP LIST

Section	Page	Date	Section	Page	Date	Section	Page	Date
D05100 cont.			D05100 cont.			D05100 cont.		
	54	Mar 14/2007		81	Mar 14/2007		108	Mar 14/2007
	55	Mar 14/2007		82	Mar 14/2007		109	Mar 14/2007
	56	Mar 14/2007		83	Mar 14/2007		110	Mar 14/2007
	57	Mar 14/2007		84	Mar 14/2007	D05200	1	Mar 14/2007
	58	Mar 14/2007		85	Mar 14/2007		2	Mar 14/2007
	59	Mar 14/2007		86	Mar 14/2007		3	Mar 14/2007
	60	Mar 14/2007		87	Mar 14/2007		4	Mar 14/2007
	61	Mar 14/2007		88	Mar 14/2007		5	Mar 14/2007
	62	Mar 14/2007		89	Mar 14/2007		6	Mar 14/2007
	63	Mar 14/2007		90	Mar 14/2007		7	Mar 14/2007
	64	Mar 14/2007		91	Mar 14/2007		8	Mar 14/2007
	65	Mar 14/2007		92	Mar 14/2007		9	Mar 14/2007
	66	Mar 14/2007		93	Mar 14/2007		10	Mar 14/2007
	67	Mar 14/2007		94	Mar 14/2007		11	Mar 14/2007
	68	Mar 14/2007		95	Mar 14/2007		12	Mar 14/2007
	69	Mar 14/2007		96	Mar 14/2007		13	Mar 14/2007
	70	Mar 14/2007		97	Mar 14/2007		14	Mar 14/2007
	71	Mar 14/2007		98	Mar 14/2007		15	Mar 14/2007
	72	Mar 14/2007		99	Mar 14/2007		16	Mar 14/2007
	73	Mar 14/2007		100	Mar 14/2007		17	Mar 14/2007
	74	Mar 14/2007		101	Mar 14/2007		18	Mar 14/2007
	75	Mar 14/2007		102	Mar 14/2007		19	Mar 14/2007
	76	Mar 14/2007		103	Mar 14/2007		20	Mar 14/2007
	77	Mar 14/2007		104	Mar 14/2007		21	Mar 14/2007
	78	Mar 14/2007		105	Mar 14/2007		22	Mar 14/2007
	79	Mar 14/2007		106	Mar 14/2007		23	Mar 14/2007
	80	Mar 14/2007		107	Mar 14/2007		24	Mar 14/2007

A = Added, R = Revised, D = Deleted, O = Overflow

HOOKUP LIST

D280T132

EFFECTIVE PAGES

Page 34
Aug 05/2009



91-21-51
HOOKUP LIST

Section	Page	Date	Section	Page	Date	Section	Page	Date
D05200 cont.			D05200 cont.			D05300		
	25	Mar 14/2007		52	Mar 14/2007		1	Mar 14/2007
	26	Mar 14/2007		53	Mar 14/2007		2	Mar 14/2007
	27	Mar 14/2007		54	Mar 14/2007		3	Mar 14/2007
	28	Mar 14/2007		55	Mar 14/2007		4	Mar 14/2007
	29	Mar 14/2007		56	Mar 14/2007		5	Mar 14/2007
	30	Mar 14/2007		57	Mar 14/2007		6	Mar 14/2007
	31	Mar 14/2007		58	Mar 14/2007		7	Mar 14/2007
	32	Mar 14/2007		59	Mar 14/2007		8	Mar 14/2007
	33	Mar 14/2007		60	Mar 14/2007		9	Mar 14/2007
	34	Mar 14/2007		61	Mar 14/2007		10	Mar 14/2007
	35	Mar 14/2007		62	Mar 14/2007		11	Mar 14/2007
	36	Mar 14/2007		63	Mar 14/2007		12	Mar 14/2007
	37	Mar 14/2007		64	Mar 14/2007		13	Mar 14/2007
	38	Mar 14/2007		65	Mar 14/2007		14	Mar 14/2007
	39	Mar 14/2007		66	Mar 14/2007		15	Mar 14/2007
	40	Mar 14/2007		67	Mar 14/2007		16	Mar 14/2007
	41	Mar 14/2007		68	Mar 14/2007		17	Mar 14/2007
	42	Mar 14/2007		69	Mar 14/2007		18	Mar 14/2007
	43	Mar 14/2007		70	Mar 14/2007		19	Mar 14/2007
	44	Mar 14/2007		71	Mar 14/2007		20	Mar 14/2007
	45	Mar 14/2007		72	Mar 14/2007		21	Mar 14/2007
	46	Mar 14/2007		73	Mar 14/2007		22	Mar 14/2007
	47	Mar 14/2007		74	Mar 14/2007		23	Mar 14/2007
	48	Mar 14/2007		75	Mar 14/2007		24	Mar 14/2007
	49	Mar 14/2007		76	Mar 14/2007		25	Mar 14/2007
	50	Mar 14/2007		77	Mar 14/2007		26	Mar 14/2007
	51	Mar 14/2007		78	Mar 14/2007		27	Mar 14/2007
							28	Mar 14/2007

A = Added, R = Revised, D = Deleted, O = Overflow

HOOKUP LIST

D280T132

EFFECTIVE PAGES

Page 35
Aug 05/2009



91-21-51
HOOKUP LIST

Section	Page	Date	Section	Page	Date	Section	Page	Date
D05300 cont.			D05300 cont.			D05300 cont.		
	29	Mar 14/2007		56	Mar 14/2007		83	Mar 14/2007
	30	Mar 14/2007		57	Mar 14/2007		84	Mar 14/2007
	31	Mar 14/2007		58	Mar 14/2007		85	Mar 14/2007
	32	Mar 14/2007		59	Mar 14/2007		86	Mar 14/2007
	33	Mar 14/2007		60	Mar 14/2007		87	Mar 14/2007
	34	Mar 14/2007		61	Mar 14/2007		88	Mar 14/2007
	35	Mar 14/2007		62	Mar 14/2007		89	Mar 14/2007
	36	Mar 14/2007		63	Mar 14/2007		90	Mar 14/2007
	37	Mar 14/2007		64	Mar 14/2007		91	Mar 14/2007
	38	Mar 14/2007		65	Mar 14/2007	D05400	1	Mar 14/2007
	39	Mar 14/2007		66	Mar 14/2007		2	Mar 14/2007
	40	Feb 06/2009		67	Mar 14/2007		3	Mar 14/2007
	41	Feb 06/2009		68	Mar 14/2007		4	Mar 14/2007
	42	Feb 06/2009		69	Mar 14/2007		5	Mar 14/2007
	43	Feb 06/2009		70	Mar 14/2007		6	Mar 14/2007
	44	Feb 06/2009		71	Mar 14/2007		7	Mar 14/2007
	45	Feb 06/2009		72	Mar 14/2007		8	Mar 14/2007
	46	Mar 14/2007		73	Mar 14/2007		9	Mar 14/2007
	47	Mar 14/2007		74	Mar 14/2007		10	Mar 14/2007
	48	Mar 14/2007		75	Mar 14/2007		11	Mar 14/2007
	49	Mar 14/2007		76	Mar 14/2007		12	Mar 14/2007
	50	Mar 14/2007		77	Mar 14/2007		13	Mar 14/2007
	51	Mar 14/2007		78	Mar 14/2007		14	Mar 14/2007
	52	Mar 14/2007		79	Mar 14/2007		15	Mar 14/2007
	53	Mar 14/2007		80	Mar 14/2007		16	Mar 14/2007
	54	Mar 14/2007		81	Mar 14/2007		17	Mar 14/2007
	55	Mar 14/2007		82	Mar 14/2007		18	Mar 14/2007

A = Added, R = Revised, D = Deleted, O = Overflow

HOOKUP LIST

D280T132

EFFECTIVE PAGES

Page 36
Aug 05/2009



91-21-51
HOOKUP LIST

Section	Page	Date	Section	Page	Date	Section	Page	Date
D05400 cont.			D05400 cont.			D05400 cont.		
	19	Mar 14/2007		46	Mar 14/2007		73	Mar 14/2007
	20	Mar 14/2007		47	Mar 14/2007		74	Mar 14/2007
	21	Mar 14/2007		48	Mar 14/2007		75	Mar 14/2007
	22	Mar 14/2007		49	Mar 14/2007		76	Mar 14/2007
	23	Mar 14/2007		50	Mar 14/2007		77	Mar 14/2007
	24	Mar 14/2007		51	Mar 14/2007		78	Mar 14/2007
	25	Mar 14/2007		52	Mar 14/2007		79	Mar 14/2007
	26	Mar 14/2007		53	Mar 14/2007		80	Mar 14/2007
	27	Mar 14/2007		54	Mar 14/2007	D05500	1	Mar 14/2007
	28	Mar 14/2007		55	Mar 14/2007		2	Mar 14/2007
	29	Mar 14/2007		56	Mar 14/2007		3	Mar 14/2007
	30	Mar 14/2007		57	Mar 14/2007		4	Mar 14/2007
	31	Mar 14/2007		58	Mar 14/2007		5	Mar 14/2007
	32	Mar 14/2007		59	Mar 14/2007		6	Mar 14/2007
	33	Mar 14/2007		60	Mar 14/2007		7	Mar 14/2007
	34	Mar 14/2007		61	Mar 14/2007		8	Mar 14/2007
	35	Mar 14/2007		62	Mar 14/2007		9	Mar 14/2007
	36	Mar 14/2007		63	Mar 14/2007		10	Mar 14/2007
	37	Mar 14/2007		64	Mar 14/2007		11	Mar 14/2007
	38	Mar 14/2007		65	Mar 14/2007		12	Mar 14/2007
	39	Mar 14/2007		66	Mar 14/2007		13	Mar 14/2007
	40	Mar 14/2007		67	Mar 14/2007		14	Mar 14/2007
	41	Mar 14/2007		68	Mar 14/2007		15	Mar 14/2007
	42	Mar 14/2007		69	Mar 14/2007		16	Mar 14/2007
	43	Mar 14/2007		70	Mar 14/2007		17	Mar 14/2007
	44	Mar 14/2007		71	Mar 14/2007		18	Mar 14/2007
	45	Mar 14/2007		72	Mar 14/2007		19	Mar 14/2007

A = Added, R = Revised, D = Deleted, O = Overflow

HOOKUP LIST

D280T132

EFFECTIVE PAGES

Page 37
Aug 05/2009



91-21-51
HOOKUP LIST

Section	Page	Date	Section	Page	Date	Section	Page	Date
D05500 cont.			D05500 cont.			D05600 cont.		
	20	Mar 14/2007		47	Mar 07/2008		9	Mar 14/2007
	21	Mar 14/2007		48	Mar 07/2008		10	Mar 14/2007
	22	Mar 14/2007		49	Mar 07/2008		11	Mar 14/2007
	23	Mar 14/2007		50	Mar 07/2008		12	Mar 14/2007
	24	Mar 14/2007		51	Mar 07/2008		13	Mar 14/2007
	25	Mar 14/2007		52	Mar 14/2007		14	Mar 14/2007
	26	Mar 14/2007		53	Mar 14/2007		15	Mar 14/2007
	27	Mar 14/2007		54	Mar 14/2007		16	Mar 14/2007
	28	Mar 14/2007		55	Mar 14/2007		17	Mar 14/2007
	29	Mar 14/2007		56	Mar 14/2007		18	Mar 14/2007
	30	Mar 14/2007		57	Mar 14/2007		19	Mar 14/2007
	31	Mar 14/2007		58	Mar 14/2007		20	Mar 14/2007
	32	Mar 14/2007		59	Mar 14/2007		21	Mar 14/2007
	33	Mar 14/2007		60	Mar 14/2007		22	Mar 14/2007
	34	Mar 14/2007		61	Mar 14/2007		23	Mar 14/2007
	35	Mar 14/2007		62	Mar 14/2007		24	Mar 14/2007
	36	Mar 14/2007		63	Mar 14/2007		25	Mar 14/2007
	37	Mar 14/2007		64	Mar 14/2007		26	Mar 14/2007
	38	Mar 14/2007		65	Mar 14/2007		27	Mar 14/2007
	39	Mar 14/2007	D05600	1	Mar 14/2007		28	Mar 14/2007
	40	Mar 14/2007		2	Mar 14/2007		29	Mar 14/2007
	41	Mar 14/2007		3	Mar 14/2007		30	Mar 14/2007
	42	Mar 14/2007		4	Mar 14/2007		31	Mar 14/2007
	43	Mar 14/2007		5	Mar 14/2007		32	Mar 14/2007
	44	Mar 14/2007		6	Mar 14/2007		33	Mar 14/2007
	45	Mar 14/2007		7	Mar 14/2007		34	Mar 14/2007
	46	Mar 14/2007		8	Mar 14/2007		35	Mar 14/2007

A = Added, R = Revised, D = Deleted, O = Overflow

HOOKUP LIST

D280T132

EFFECTIVE PAGES

Page 38
Aug 05/2009



91-21-51
HOOKUP LIST

Section	Page	Date	Section	Page	Date	Section	Page	Date
D05600 cont.			D05600 cont.			D05600 cont.		
	36	Mar 14/2007		63	Mar 14/2007		90	Mar 14/2007
	37	Mar 14/2007		64	Mar 14/2007		91	Mar 14/2007
	38	Mar 14/2007		65	Mar 14/2007	D05700	1	Mar 14/2007
	39	Mar 14/2007		66	Mar 14/2007		2	Mar 14/2007
	40	Mar 14/2007		67	Mar 14/2007		3	Mar 14/2007
	41	Mar 14/2007		68	Mar 14/2007		4	Mar 14/2007
	42	Mar 14/2007		69	Mar 14/2007		5	Mar 14/2007
	43	Mar 14/2007		70	Mar 14/2007		6	Mar 14/2007
	44	Mar 14/2007		71	Mar 14/2007		7	Mar 14/2007
	45	Mar 14/2007		72	Mar 14/2007		8	Mar 14/2007
	46	Mar 14/2007		73	Mar 14/2007		9	Mar 14/2007
	47	Mar 14/2007		74	Mar 14/2007		10	Mar 14/2007
	48	Mar 14/2007		75	Mar 14/2007		11	Mar 14/2007
	49	Mar 14/2007		76	Mar 14/2007		12	Mar 14/2007
	50	Mar 14/2007		77	Mar 14/2007		13	Mar 14/2007
	51	Mar 14/2007		78	Mar 14/2007		14	Mar 14/2007
	52	Mar 14/2007		79	Mar 14/2007		15	Mar 14/2007
	53	Mar 14/2007		80	Mar 14/2007		16	Mar 14/2007
	54	Mar 14/2007		81	Mar 14/2007		17	Mar 14/2007
	55	Mar 14/2007		82	Mar 14/2007		18	Mar 14/2007
	56	Mar 14/2007		83	Mar 14/2007		19	Mar 14/2007
	57	Mar 14/2007		84	Mar 14/2007		20	Mar 14/2007
	58	Mar 14/2007		85	Mar 14/2007		21	Mar 14/2007
	59	Mar 14/2007		86	Mar 14/2007		22	Mar 14/2007
	60	Mar 14/2007		87	Mar 14/2007		23	Mar 14/2007
	61	Mar 14/2007		88	Mar 14/2007		24	Mar 14/2007
	62	Mar 14/2007		89	Mar 14/2007		25	Mar 14/2007

A = Added, R = Revised, D = Deleted, O = Overflow

HOOKUP LIST

D280T132

EFFECTIVE PAGES

Page 39
Aug 05/2009



91-21-51
HOOKUP LIST

Section	Page	Date	Section	Page	Date	Section	Page	Date
D05700 cont.			D05700 cont.			D05800 cont.		
	26	Mar 14/2007		53	Mar 14/2007		16	Mar 14/2007
	27	Mar 14/2007		54	Mar 14/2007		17	Mar 14/2007
	28	Mar 14/2007		55	Mar 14/2007		18	Mar 14/2007
	29	Mar 14/2007		56	Mar 14/2007		19	Mar 14/2007
	30	Mar 14/2007		57	Mar 14/2007		20	Mar 14/2007
	31	Mar 14/2007		58	Mar 14/2007		21	Mar 14/2007
	32	Mar 14/2007		59	Mar 14/2007		22	Mar 14/2007
	33	Mar 14/2007		60	Mar 14/2007		23	Mar 14/2007
	34	Mar 14/2007		61	Mar 14/2007		24	Mar 14/2007
	35	Mar 14/2007		62	Mar 14/2007		25	Mar 14/2007
	36	Mar 14/2007		63	Mar 14/2007		26	Mar 14/2007
	37	Mar 14/2007		64	Mar 14/2007		27	Mar 14/2007
	38	Mar 14/2007	D05800	1	Mar 14/2007		28	Mar 14/2007
	39	Mar 14/2007		2	Mar 14/2007		29	Mar 14/2007
	40	Mar 14/2007		3	Mar 14/2007		30	Mar 14/2007
	41	Mar 14/2007		4	Mar 14/2007		31	Mar 14/2007
	42	Mar 14/2007		5	Mar 14/2007		32	Mar 14/2007
	43	Mar 14/2007		6	Mar 14/2007		33	Mar 14/2007
	44	Mar 14/2007		7	Mar 14/2007		34	Mar 14/2007
	45	Mar 14/2007		8	Mar 14/2007		35	Mar 14/2007
	46	Mar 14/2007		9	Mar 14/2007		36	Mar 14/2007
	47	Mar 14/2007		10	Mar 14/2007		37	Mar 14/2007
	48	Mar 14/2007		11	Mar 14/2007		38	Mar 14/2007
	49	Mar 14/2007		12	Mar 14/2007		39	Mar 14/2007
	50	Mar 14/2007		13	Mar 14/2007		40	Mar 14/2007
	51	Mar 14/2007		14	Mar 14/2007		41	Mar 14/2007
	52	Mar 14/2007		15	Mar 14/2007		42	Mar 14/2007

A = Added, R = Revised, D = Deleted, O = Overflow

HOOKUP LIST

D280T132

EFFECTIVE PAGES

Page 40
Aug 05/2009



91-21-51
HOOKUP LIST

Section	Page	Date	Section	Page	Date	Section	Page	Date
D05800 cont.			D05900 cont.			D06000 cont.		
	43	Mar 14/2007		22	Mar 14/2007		3	Mar 14/2007
	44	Mar 14/2007		23	Mar 14/2007		4	Mar 14/2007
	45	Mar 14/2007		24	Mar 14/2007		5	Mar 14/2007
	46	Mar 14/2007		25	Mar 14/2007		6	Mar 14/2007
	47	Mar 14/2007		26	Mar 14/2007		7	Mar 14/2007
	48	Mar 14/2007		27	Mar 14/2007		8	Mar 14/2007
D05900	1	Mar 14/2007		28	Mar 14/2007		9	Mar 14/2007
	2	Mar 14/2007		29	Mar 14/2007		10	Mar 14/2007
	3	Mar 14/2007		30	Mar 14/2007		11	Mar 14/2007
	4	Mar 14/2007		31	Mar 14/2007		12	Mar 14/2007
	5	Mar 14/2007		32	Mar 14/2007		13	Mar 14/2007
	6	Mar 14/2007		33	Mar 14/2007		14	Mar 14/2007
	7	Mar 14/2007		34	Mar 14/2007		15	Mar 14/2007
	8	Mar 14/2007		35	Mar 14/2007		16	Mar 14/2007
	9	Mar 14/2007		36	Mar 14/2007		17	Mar 14/2007
	10	Mar 14/2007		37	Mar 14/2007		18	Mar 14/2007
	11	Mar 14/2007		38	Mar 14/2007		19	Mar 14/2007
	12	Mar 14/2007		39	Mar 14/2007		20	Mar 14/2007
	13	Mar 14/2007		40	Mar 14/2007		21	Mar 14/2007
	14	Mar 14/2007		41	Mar 14/2007		22	Mar 14/2007
	15	Mar 14/2007		42	Mar 14/2007		23	Mar 14/2007
	16	Mar 14/2007		43	Mar 14/2007		24	Mar 14/2007
	17	Mar 14/2007		44	Mar 14/2007		25	Mar 14/2007
	18	Mar 14/2007		45	Mar 14/2007		26	Mar 14/2007
	19	Mar 14/2007		46	Mar 14/2007		27	Mar 14/2007
	20	Mar 14/2007	D06000	1	Mar 14/2007		28	Mar 14/2007
	21	Mar 14/2007		2	Mar 14/2007		29	Mar 14/2007

A = Added, R = Revised, D = Deleted, O = Overflow

HOOKUP LIST

D280T132

EFFECTIVE PAGES

Page 41
Aug 05/2009



91-21-51
HOOKUP LIST

Section	Page	Date	Section	Page	Date	Section	Page	Date
D06000 cont.			D06100 cont.			D06100 cont.		
	30	Mar 14/2007		11	Mar 14/2007		38	Mar 14/2007
	31	Mar 14/2007		12	Mar 14/2007		39	Mar 14/2007
	32	Mar 14/2007		13	Mar 14/2007		40	Mar 14/2007
	33	Mar 14/2007		14	Mar 14/2007		41	Mar 14/2007
	34	Mar 14/2007		15	Mar 14/2007		42	Mar 14/2007
	35	Mar 14/2007		16	Mar 14/2007		43	Mar 14/2007
	36	Mar 14/2007		17	Mar 14/2007		44	Mar 14/2007
	37	Mar 14/2007		18	Mar 14/2007		45	Mar 14/2007
	38	Mar 14/2007		19	Mar 14/2007		46	Mar 14/2007
	39	Mar 14/2007		20	Mar 14/2007		47	Mar 14/2007
	40	Mar 14/2007		21	Mar 14/2007		48	Mar 14/2007
	41	Mar 14/2007		22	Mar 14/2007		49	Mar 14/2007
	42	Mar 14/2007		23	Mar 14/2007		50	Mar 14/2007
	43	Mar 14/2007		24	Mar 14/2007		51	Mar 14/2007
	44	Mar 14/2007		25	Mar 14/2007		52	Mar 14/2007
	45	Mar 14/2007		26	Mar 14/2007		53	Mar 14/2007
	46	Mar 14/2007		27	Mar 14/2007		54	Mar 14/2007
D06100	1	Mar 14/2007		28	Mar 14/2007		55	Mar 14/2007
	2	Mar 14/2007		29	Mar 14/2007		56	Mar 14/2007
	3	Mar 14/2007		30	Mar 14/2007		57	Mar 14/2007
	4	Mar 14/2007		31	Mar 14/2007		58	Mar 14/2007
	5	Mar 14/2007		32	Mar 14/2007		59	Mar 14/2007
	6	Mar 14/2007		33	Mar 14/2007		60	Mar 14/2007
	7	Mar 14/2007		34	Mar 14/2007		61	Mar 14/2007
	8	Mar 14/2007		35	Mar 14/2007		62	Mar 14/2007
	9	Mar 14/2007		36	Mar 14/2007		63	Mar 14/2007
	10	Mar 14/2007		37	Mar 14/2007		64	Mar 14/2007

A = Added, R = Revised, D = Deleted, O = Overflow

HOOKUP LIST

D280T132

EFFECTIVE PAGES

Page 42
Aug 05/2009



91-21-51
HOOKUP LIST

Section	Page	Date	Section	Page	Date	Section	Page	Date
D06100 cont.			D06100 cont.			D06200 cont.		
	65	Mar 14/2007		92	Mar 14/2007		21	Mar 09/2006
	66	Mar 14/2007		93	Mar 14/2007		22	Mar 09/2006
	67	Mar 14/2007		94	Mar 14/2007		23	Mar 09/2006
	68	Mar 14/2007		95	Mar 14/2007		24	Mar 09/2006
	69	Mar 14/2007		96	Mar 14/2007		25	Mar 09/2006
	70	Mar 14/2007		97	Mar 14/2007		26	Mar 09/2006
	71	Mar 14/2007		98	Mar 14/2007		27	Mar 09/2006
	72	Mar 14/2007	D06200	1	Mar 09/2006		28	Mar 09/2006
	73	Mar 14/2007		2	Mar 09/2006		29	Mar 09/2006
	74	Mar 14/2007		3	Mar 09/2006		30	Mar 09/2006
	75	Mar 14/2007		4	Mar 09/2006		31	Mar 09/2006
	76	Mar 14/2007		5	Mar 09/2006		32	Mar 09/2006
	77	Mar 14/2007		6	Mar 09/2006		33	Mar 09/2006
	78	Mar 14/2007		7	Mar 09/2006		34	Mar 09/2006
	79	Mar 14/2007		8	Mar 09/2006		35	Mar 09/2006
	80	Mar 14/2007		9	Mar 09/2006		36	Mar 09/2006
	81	Mar 14/2007		10	Mar 09/2006		37	Mar 09/2006
	82	Mar 14/2007		11	Mar 09/2006		38	Mar 09/2006
	83	Mar 14/2007		12	Mar 09/2006		39	Mar 09/2006
	84	Mar 14/2007		13	Mar 09/2006		40	Mar 09/2006
	85	Mar 14/2007		14	Mar 09/2006		41	Mar 09/2006
	86	Mar 14/2007		15	Mar 09/2006		42	Mar 09/2006
	87	Mar 14/2007		16	Mar 09/2006		43	Mar 09/2006
	88	Mar 14/2007		17	Mar 09/2006		44	Mar 09/2006
	89	Mar 14/2007		18	Mar 09/2006		45	Mar 09/2006
	90	Mar 14/2007		19	Mar 09/2006		46	Mar 09/2006
	91	Mar 14/2007		20	Mar 09/2006		47	Mar 09/2006

A = Added, R = Revised, D = Deleted, O = Overflow

HOOKUP LIST

D280T132

EFFECTIVE PAGES

Page 43
Aug 05/2009



91-21-51
HOOKUP LIST

Section	Page	Date	Section	Page	Date	Section	Page	Date
D06200 cont.			D06200 cont.			D06200 cont.		
	48	Mar 09/2006		75	Jun 06/2008		102	Jun 06/2008
	49	Mar 09/2006		76	Jun 06/2008		103	Jun 06/2008
	50	Mar 09/2006		77	Jun 06/2008		104	Jun 06/2008
	51	Mar 09/2006		78	Jun 06/2008		105	Jun 06/2008
	52	Mar 09/2006		79	Jun 06/2008	D06300	1	Mar 09/2006
	53	Mar 09/2006		80	Jun 06/2008		2	Mar 09/2006
	54	Mar 09/2006		81	Jun 06/2008		3	Mar 09/2006
	55	Mar 09/2006		82	Jun 06/2008		4	Mar 09/2006
	56	Mar 09/2006		83	Jun 06/2008		5	Mar 09/2006
	57	Mar 09/2006		84	Jun 06/2008		6	Mar 09/2006
	58	Mar 09/2006		85	Jun 06/2008		7	Mar 09/2006
	59	Mar 09/2006		86	Jun 06/2008		8	Mar 09/2006
	60	Jun 06/2008		87	Jun 06/2008		9	Mar 09/2006
	61	Jun 06/2008		88	Jun 06/2008		10	Mar 09/2006
	62	Jun 06/2008		89	Jun 06/2008		11	Mar 09/2006
	63	Jun 06/2008		90	Jun 06/2008		12	Mar 09/2006
	64	Jun 06/2008		91	Jun 06/2008		13	Mar 09/2006
	65	Jun 06/2008		92	Jun 06/2008		14	Mar 09/2006
	66	Jun 06/2008		93	Jun 06/2008		15	Mar 09/2006
	67	Jun 06/2008		94	Jun 06/2008		16	Mar 09/2006
	68	Jun 06/2008		95	Jun 06/2008		17	Mar 09/2006
	69	Jun 06/2008		96	Jun 06/2008		18	Mar 09/2006
	70	Jun 06/2008		97	Jun 06/2008		19	Mar 09/2006
	71	Jun 06/2008		98	Jun 06/2008		20	Mar 09/2006
	72	Jun 06/2008		99	Jun 06/2008		21	Mar 09/2006
	73	Jun 06/2008		100	Jun 06/2008		22	Mar 09/2006
	74	Jun 06/2008		101	Jun 06/2008		23	Mar 09/2006

A = Added, R = Revised, D = Deleted, O = Overflow

HOOKUP LIST

D280T132

EFFECTIVE PAGES

Page 44
Aug 05/2009



91-21-51
HOOKUP LIST

Section	Page	Date	Section	Page	Date	Section	Page	Date
D06300 cont.			D06400 cont.			D06600 cont.		
	24	Mar 09/2006		24	Mar 09/2006		6	Feb 06/2009
	25	Mar 09/2006		25	Mar 09/2006		7	Feb 06/2009
	26	Mar 09/2006	D06500	1	Mar 09/2006		8	Feb 06/2009
	27	Mar 09/2006		2	Mar 09/2006		9	Feb 06/2009
D06400	1	Mar 09/2006		3	Mar 09/2006		10	Feb 06/2009
	2	Mar 09/2006		4	Mar 09/2006		11	Feb 06/2009
	3	Mar 09/2006		5	Mar 09/2006		12	Feb 06/2009
	4	Mar 09/2006		6	Mar 09/2006	D06700	1	Mar 09/2006
	5	Mar 09/2006		7	Mar 09/2006		2	Mar 09/2006
	6	Mar 09/2006		8	Mar 09/2006		3	Mar 09/2006
	7	Mar 09/2006		9	Mar 09/2006		4	Mar 09/2006
	8	Mar 09/2006		10	Mar 09/2006		5	Mar 09/2006
	9	Mar 09/2006		11	Mar 09/2006		6	Mar 09/2006
	10	Mar 09/2006		12	Mar 09/2006		7	Mar 09/2006
	11	Mar 09/2006		13	Mar 09/2006		8	Mar 09/2006
	12	Mar 09/2006		14	Mar 09/2006		9	Mar 09/2006
	13	Mar 09/2006		15	Mar 09/2006		10	Mar 09/2006
	14	Mar 09/2006		16	Mar 09/2006		11	Mar 09/2006
	15	Mar 09/2006		17	Mar 09/2006		12	Mar 09/2006
	16	Mar 09/2006		18	Mar 09/2006		13	Mar 09/2006
	17	Mar 09/2006		19	Mar 09/2006		14	Mar 09/2006
	18	Mar 09/2006		20	Mar 09/2006		15	Mar 09/2006
	19	Mar 09/2006	D06600	1	Mar 09/2006		16	Mar 09/2006
	20	Mar 09/2006		2	Mar 09/2006		17	Mar 09/2006
	21	Mar 09/2006		3	Mar 09/2006	D06800	1	Mar 09/2006
	22	Mar 09/2006		4	Mar 09/2006		2	Mar 09/2006
	23	Mar 09/2006		5	Feb 06/2009		3	Mar 09/2006

A = Added, R = Revised, D = Deleted, O = Overflow

HOOKUP LIST

D280T132

EFFECTIVE PAGES

Page 45
Aug 05/2009



91-21-51
HOOKUP LIST

Section	Page	Date	Section	Page	Date	Section	Page	Date
D06800 cont.			D06900 cont.			D07900 cont.		
	4	Mar 09/2006		12	Mar 09/2006		10	Mar 09/2006
	5	Mar 09/2006		13	Mar 09/2006		11	Mar 09/2006
	6	Mar 09/2006		14	Mar 09/2006		12	Mar 09/2006
	7	Mar 09/2006		15	Mar 09/2006		13	Mar 09/2006
	8	Mar 09/2006		16	Mar 09/2006		14	Mar 09/2006
	9	Mar 09/2006		17	Mar 09/2006		15	Mar 09/2006
	10	Mar 09/2006	D07000	1	Mar 09/2006		16	Mar 09/2006
	11	Mar 09/2006		2	Mar 09/2006		17	Mar 09/2006
	12	Mar 09/2006		3	Mar 09/2006		18	Mar 09/2006
	13	Mar 09/2006		4	Mar 09/2006		19	Mar 09/2006
	14	Mar 09/2006		5	Mar 09/2006		20	Mar 09/2006
	15	Mar 09/2006	D07100	1	Mar 09/2006		21	Mar 09/2006
	16	Mar 09/2006		2	Mar 09/2006		22	Mar 09/2006
	17	Mar 09/2006		3	Mar 09/2006		23	Mar 09/2006
	18	Mar 09/2006		4	Mar 09/2006		24	Mar 09/2006
	19	Mar 09/2006		5	Mar 09/2006		25	Mar 09/2006
D06900	1	Mar 09/2006		6	Mar 09/2006		26	Mar 09/2006
	2	Mar 09/2006	D07500	1	Mar 09/2006		27	Mar 09/2006
	3	Mar 09/2006	D07900	1	Mar 09/2006		28	Mar 09/2006
	4	Mar 09/2006		2	Mar 09/2006		29	Mar 09/2006
	5	Mar 09/2006		3	Mar 09/2006		30	Mar 09/2006
	6	Mar 09/2006		4	Mar 09/2006		31	Mar 09/2006
	7	Mar 09/2006		5	Mar 09/2006		32	Mar 09/2006
	8	Mar 09/2006		6	Mar 09/2006		33	Mar 09/2006
	9	Mar 09/2006		7	Mar 09/2006		34	Mar 09/2006
	10	Mar 09/2006		8	Mar 09/2006		35	Mar 09/2006
	11	Mar 09/2006		9	Mar 09/2006		36	Mar 09/2006

A = Added, R = Revised, D = Deleted, O = Overflow

HOOKUP LIST

D280T132

EFFECTIVE PAGES

Page 46
Aug 05/2009



91-21-51
HOOKUP LIST

Section	Page	Date	Section	Page	Date	Section	Page	Date
D07900 cont.			D08000 cont.			D08100	1	Mar 09/2006
	37	Mar 09/2006		26	Feb 06/2009		2	Mar 09/2006
	38	Mar 09/2006		27	Feb 06/2009		3	Mar 09/2006
D08000	1	Mar 09/2006		28	Feb 06/2009		4	Mar 09/2006
	2	Mar 09/2006		29	Feb 06/2009		5	Mar 09/2006
	3	Mar 09/2006		30	Feb 06/2009		6	Mar 09/2006
	4	Mar 09/2006		31	Feb 06/2009		7	Mar 09/2006
	5	Mar 09/2006		32	Feb 06/2009		8	Mar 09/2006
	6	Mar 09/2006		33	Feb 06/2009		9	Mar 09/2006
	7	Mar 09/2006		34	Mar 14/2007		10	Mar 09/2006
	8	Mar 09/2006		35	Mar 14/2007		11	Mar 09/2006
	9	Mar 09/2006		36	Mar 14/2007		12	Mar 09/2006
	10	Mar 09/2006		37	Mar 14/2007		13	Mar 09/2006
	11	Feb 06/2009		38	Mar 14/2007		14	Mar 09/2006
	12	Feb 06/2009		39	Mar 14/2007		15	Mar 09/2006
	13	Feb 06/2009		40	Mar 14/2007		16	Mar 09/2006
	14	Feb 06/2009		41	Mar 14/2007		17	Mar 09/2006
	15	Feb 06/2009		42	Mar 14/2007		18	Mar 09/2006
	16	Feb 06/2009		43	Mar 14/2007		19	Mar 09/2006
	17	Feb 06/2009		44	Mar 14/2007		20	Mar 09/2006
	18	Feb 06/2009		45	Mar 14/2007		21	Mar 09/2006
	19	Feb 06/2009		46	Mar 14/2007		22	Mar 09/2006
	20	Feb 06/2009		47	Mar 14/2007		23	Mar 09/2006
	21	Feb 06/2009		48	Mar 14/2007		24	Mar 09/2006
	22	Feb 06/2009		49	Mar 14/2007		25	Mar 09/2006
	23	Feb 06/2009		50	Mar 14/2007		26	Mar 09/2006
	24	Feb 06/2009		51	Mar 14/2007		27	Mar 09/2006
	25	Feb 06/2009		52	Mar 14/2007	D08200	1	Mar 09/2006

A = Added, R = Revised, D = Deleted, O = Overflow

HOOKUP LIST

D280T132

EFFECTIVE PAGES

Page 47
Aug 05/2009



91-21-51
HOOKUP LIST

Section	Page	Date	Section	Page	Date	Section	Page	Date
D08200 cont.			D08700	1	Mar 09/2006	D09000 cont.		
	2	Mar 09/2006		2	Mar 09/2006		26	Mar 09/2006
	3	Mar 09/2006		3	Mar 09/2006		27	Mar 09/2006
	4	Mar 09/2006	D09000	1	Mar 09/2006		28	Mar 09/2006
D08300	1	Mar 09/2006		2	Mar 09/2006		29	Mar 09/2006
	2	Mar 09/2006		3	Mar 09/2006		30	Mar 09/2006
	3	Mar 09/2006		4	Mar 09/2006		31	Mar 09/2006
	4	Mar 09/2006		5	Mar 09/2006		32	Mar 09/2006
	5	Mar 09/2006		6	Mar 09/2006		33	Mar 09/2006
	6	Mar 09/2006		7	Mar 09/2006		34	Mar 09/2006
	7	Mar 09/2006		8	Mar 09/2006		35	Mar 09/2006
	8	Mar 09/2006		9	Mar 09/2006		36	Mar 09/2006
	9	Mar 09/2006		10	Mar 09/2006		37	Mar 09/2006
	10	Mar 09/2006		11	Mar 09/2006		38	Mar 09/2006
	11	Mar 09/2006		12	Mar 09/2006		39	Mar 09/2006
	12	Mar 09/2006		13	Mar 09/2006		40	Mar 09/2006
	13	Mar 09/2006		14	Mar 09/2006		41	Mar 09/2006
	14	Mar 09/2006		15	Mar 09/2006		42	Mar 09/2006
	15	Mar 09/2006		16	Mar 09/2006		43	Mar 09/2006
D08500	1	Mar 09/2006		17	Mar 09/2006		44	Mar 09/2006
	2	Mar 09/2006		18	Mar 09/2006		45	Mar 09/2006
D08600	1	Mar 09/2006		19	Mar 09/2006		46	Mar 09/2006
	2	Mar 09/2006		20	Mar 09/2006		47	Mar 09/2006
	3	Mar 09/2006		21	Mar 09/2006		48	Mar 09/2006
	4	Mar 09/2006		22	Mar 09/2006		49	Mar 09/2006
	5	Mar 09/2006		23	Mar 09/2006		50	Mar 09/2006
	6	Mar 09/2006		24	Mar 09/2006		51	Mar 09/2006
	7	Mar 09/2006		25	Mar 09/2006		52	Mar 09/2006

A = Added, R = Revised, D = Deleted, O = Overflow

HOOKUP LIST

D280T132

EFFECTIVE PAGES

Page 48
Aug 05/2009



91-21-51
HOOKUP LIST

Section	Page	Date	Section	Page	Date	Section	Page	Date
D09000 cont.			D09000 cont.			D09100 cont.		
	53	Mar 09/2006		80	Mar 09/2006		8	Mar 09/2006
	54	Mar 09/2006		81	Mar 09/2006		9	Mar 09/2006
	55	Mar 09/2006		82	Mar 09/2006		10	Mar 09/2006
	56	Mar 09/2006		83	Mar 09/2006		11	Mar 09/2006
	57	Mar 09/2006		84	Mar 09/2006		12	Mar 09/2006
	58	Mar 09/2006		85	Mar 09/2006		13	Mar 09/2006
	59	Mar 09/2006		86	Mar 09/2006		14	Mar 09/2006
	60	Mar 09/2006		87	Mar 09/2006		15	Mar 09/2006
	61	Mar 09/2006		88	Mar 14/2007		16	Mar 09/2006
	62	Mar 09/2006		89	Mar 14/2007		17	Mar 09/2006
	63	Mar 09/2006		90	Mar 14/2007		18	Mar 09/2006
	64	Mar 09/2006		91	Mar 14/2007		19	Mar 09/2006
	65	Mar 09/2006		92	Mar 14/2007		20	Mar 09/2006
	66	Mar 09/2006		93	Mar 14/2007		21	Mar 09/2006
	67	Mar 09/2006		94	Mar 14/2007		22	Mar 09/2006
	68	Mar 09/2006		95	Mar 14/2007		23	Mar 09/2006
	69	Mar 09/2006		96	Mar 14/2007		24	Mar 09/2006
	70	Mar 09/2006		97	Mar 14/2007		25	Mar 09/2006
	71	Mar 09/2006		98	Mar 14/2007		26	Mar 09/2006
	72	Mar 09/2006		99	Mar 14/2007		27	Mar 09/2006
	73	Mar 09/2006	D09100	1	Mar 09/2006		28	Mar 09/2006
	74	Mar 09/2006		2	Mar 09/2006		29	Mar 09/2006
	75	Mar 09/2006		3	Mar 09/2006		30	Mar 09/2006
	76	Mar 09/2006		4	Mar 09/2006	D09200	1	Mar 09/2006
	77	Mar 09/2006		5	Mar 09/2006	D09300	1	Mar 09/2006
	78	Mar 09/2006		6	Mar 09/2006		2	Mar 09/2006
	79	Mar 09/2006		7	Mar 09/2006		3	Mar 09/2006

A = Added, R = Revised, D = Deleted, O = Overflow

HOOKUP LIST

D280T132

EFFECTIVE PAGES

Page 49
Aug 05/2009



91-21-51
HOOKUP LIST

Section	Page	Date	Section	Page	Date	Section	Page	Date
D09300 cont.			D10100 cont.			D10300 cont.		
	4	Mar 09/2006		8	Mar 09/2006		3	Mar 09/2006
	5	Mar 09/2006		9	Mar 09/2006		4	Mar 09/2006
	6	Mar 09/2006		10	Mar 09/2006		5	Mar 09/2006
	7	Mar 09/2006		11	Mar 09/2006		6	Mar 09/2006
D10000	1	Mar 09/2006		12	Mar 09/2006		7	Mar 09/2006
	2	Mar 09/2006		13	Mar 09/2006	D10400	1	Mar 09/2006
	3	Mar 09/2006		14	Mar 09/2006		2	Mar 09/2006
	4	Mar 09/2006		15	Mar 09/2006		3	Mar 09/2006
	5	Mar 09/2006		16	Mar 09/2006		4	Mar 09/2006
	6	Mar 09/2006		17	Mar 09/2006		5	Mar 09/2006
	7	Mar 09/2006		18	Mar 09/2006		6	Mar 09/2006
	8	Mar 09/2006		19	Mar 09/2006		7	Mar 09/2006
	9	Mar 09/2006		20	Mar 09/2006		8	Mar 09/2006
	10	Mar 09/2006	D10200	1	Mar 09/2006		9	Mar 09/2006
	11	Mar 09/2006		2	Mar 09/2006	D10500	1	Mar 09/2006
	12	Mar 09/2006		3	Mar 09/2006		2	Mar 09/2006
	13	Mar 09/2006		4	Mar 09/2006		3	Mar 09/2006
	14	Mar 09/2006		5	Mar 09/2006		4	Mar 09/2006
	15	Mar 09/2006		6	Mar 09/2006		5	Mar 09/2006
	16	Mar 09/2006		7	Mar 09/2006		6	Mar 09/2006
D10100	1	Mar 09/2006		8	Mar 09/2006		7	Mar 09/2006
	2	Mar 09/2006		9	Mar 09/2006		8	Mar 09/2006
	3	Mar 09/2006		10	Mar 09/2006		9	Mar 09/2006
	4	Mar 09/2006		11	Mar 09/2006		10	Mar 09/2006
	5	Mar 09/2006		12	Mar 09/2006		11	Mar 09/2006
	6	Mar 09/2006	D10300	1	Mar 09/2006	D10600	1	Mar 09/2006
	7	Mar 09/2006		2	Mar 09/2006		2	Mar 09/2006

A = Added, R = Revised, D = Deleted, O = Overflow

HOOKUP LIST

D280T132

EFFECTIVE PAGES

Page 50
Aug 05/2009



91-21-51
HOOKUP LIST

Section	Page	Date	Section	Page	Date	Section	Page	Date
D10600 cont.			D10900 cont.			D11200 cont.		
	3	Mar 09/2006		2	Mar 09/2006		4	Mar 09/2006
	4	Mar 09/2006		3	Mar 09/2006		5	Mar 09/2006
	5	Mar 09/2006		4	Mar 09/2006		6	Mar 09/2006
	6	Mar 09/2006		5	Mar 09/2006		7	Mar 09/2006
	7	Mar 09/2006		6	Mar 09/2006		8	Mar 09/2006
	8	Mar 09/2006		7	Mar 09/2006		9	Mar 09/2006
	9	Mar 09/2006		8	Mar 09/2006	D11300	1	Mar 09/2006
	10	Mar 09/2006	D11000	1	Mar 09/2006		2	Mar 09/2006
D10700	1	Mar 09/2006		2	Mar 09/2006	D11400	1	Mar 09/2006
	2	Mar 09/2006		3	Mar 09/2006		2	Mar 09/2006
	3	Mar 09/2006		4	Mar 09/2006	D11500	1	Mar 09/2006
	4	Mar 09/2006	D11100	1	Mar 09/2006		2	Mar 09/2006
	5	Mar 09/2006		2	Mar 09/2006		3	Mar 09/2006
	6	Mar 09/2006		3	Mar 09/2006		4	Mar 09/2006
	7	Mar 09/2006		4	Mar 09/2006		5	Mar 09/2006
	8	Mar 09/2006		5	Mar 09/2006	D11600	1	Mar 09/2006
	9	Mar 09/2006		6	Mar 09/2006		2	Feb 06/2009
	10	Mar 09/2006		7	Mar 09/2006		3	Feb 06/2009
	11	Mar 09/2006		8	Mar 09/2006		4	Feb 06/2009
	12	Mar 09/2006		9	Mar 09/2006		5	Feb 06/2009
D10800	1	Mar 09/2006		10	Mar 09/2006		6	Feb 06/2009
	2	Mar 09/2006		11	Mar 09/2006		7	Feb 06/2009
	3	Mar 09/2006		12	Mar 09/2006		8	Feb 06/2009
	4	Mar 09/2006		13	Mar 09/2006		9	Feb 06/2009
	5	Mar 09/2006	D11200	1	Mar 09/2006	D11700	1	Mar 09/2006
	6	Mar 09/2006		2	Mar 09/2006		2	Mar 09/2006
D10900	1	Mar 09/2006		3	Mar 09/2006		3	Mar 09/2006

A = Added, R = Revised, D = Deleted, O = Overflow

HOOKUP LIST

D280T132

EFFECTIVE PAGES

Page 51
Aug 05/2009



91-21-51
HOOKUP LIST

Section	Page	Date	Section	Page	Date	Section	Page	Date
D11700 cont.			D12000 cont.			D12200 cont.		
	4	Mar 09/2006		5	Mar 09/2006		7	Mar 09/2006
	5	Mar 09/2006		6	Mar 09/2006		8	Mar 09/2006
	6	Mar 09/2006		7	Mar 09/2006		9	Mar 09/2006
	7	Mar 09/2006		8	Mar 09/2006		10	Mar 09/2006
	8	Mar 09/2006		9	Mar 09/2006	D12300	1	Mar 09/2006
	9	Mar 09/2006		10	Mar 09/2006		2	Mar 09/2006
	10	Mar 09/2006	D12100	1	Mar 09/2006		3	Mar 09/2006
	11	Mar 09/2006		2	Mar 09/2006	D13000	1	Mar 09/2006
	12	Mar 09/2006		3	Mar 09/2006		2	Mar 09/2006
	13	Mar 09/2006		4	Mar 09/2006	D13100	1	Mar 09/2006
D11800	1	Mar 09/2006		5	Mar 09/2006		2	Mar 09/2006
	2	Mar 09/2006		6	Mar 09/2006	D13200	1	Mar 09/2006
	3	Mar 09/2006		7	Mar 09/2006		2	Mar 09/2006
	4	Mar 09/2006		8	Mar 09/2006		3	Mar 09/2006
	5	Mar 09/2006		9	Mar 09/2006		4	Mar 09/2006
	6	Mar 09/2006		10	Mar 09/2006		5	Mar 09/2006
	7	Mar 09/2006		11	Mar 09/2006		6	Mar 09/2006
	8	Mar 09/2006		12	Mar 09/2006		7	Mar 09/2006
	9	Mar 09/2006		13	Mar 09/2006		8	Mar 09/2006
D11900	1	Mar 09/2006		14	Mar 09/2006		9	Mar 09/2006
	2	Mar 09/2006		15	Mar 09/2006		10	Mar 09/2006
	3	Mar 09/2006	D12200	1	Mar 09/2006		11	Mar 09/2006
	4	Mar 09/2006		2	Mar 09/2006		12	Mar 09/2006
D12000	1	Mar 09/2006		3	Mar 09/2006	D13300	1	Mar 09/2006
	2	Mar 09/2006		4	Mar 09/2006		2	Mar 09/2006
	3	Mar 09/2006		5	Mar 09/2006		3	Mar 09/2006
	4	Mar 09/2006		6	Mar 09/2006		4	Mar 09/2006

A = Added, R = Revised, D = Deleted, O = Overflow

HOOKUP LIST

D280T132

EFFECTIVE PAGES

Page 52
Aug 05/2009



91-21-51
HOOKUP LIST

Section	Page	Date	Section	Page	Date	Section	Page	Date
D13300 cont.			D13400 cont.			D13500 cont.		
	5	Mar 09/2006		19	Mar 14/2007		18	Mar 14/2007
	6	Mar 09/2006		20	Mar 14/2007		19	Mar 14/2007
	7	Mar 09/2006		21	Mar 14/2007		20	Mar 14/2007
	8	Mar 09/2006		22	Mar 14/2007		21	Mar 14/2007
	9	Mar 14/2007		23	Mar 14/2007		22	Mar 14/2007
	10	Mar 14/2007		24	Mar 14/2007	D13600	1	Mar 14/2007
	11	Mar 14/2007		25	Mar 14/2007		2	Mar 14/2007
	12	Mar 14/2007		26	Mar 14/2007	D13700	1	Mar 14/2007
	13	Mar 14/2007		27	Mar 14/2007	D13800	1	Mar 14/2007
D13400	1	Mar 14/2007		28	Mar 14/2007		2	Mar 14/2007
	2	Mar 14/2007	D13500	1	Mar 14/2007		3	Mar 14/2007
	3	Mar 14/2007		2	Mar 14/2007		4	Mar 14/2007
	4	Mar 14/2007		3	Mar 14/2007		5	Mar 14/2007
	5	Mar 14/2007		4	Mar 14/2007		6	Mar 14/2007
	6	Mar 14/2007		5	Mar 14/2007		7	Mar 14/2007
	7	Mar 14/2007		6	Mar 14/2007		8	Mar 14/2007
	8	Mar 14/2007		7	Mar 14/2007		9	Mar 14/2007
	9	Mar 14/2007		8	Mar 14/2007		10	Mar 14/2007
	10	Mar 14/2007		9	Mar 14/2007		11	Mar 14/2007
	11	Mar 14/2007		10	Mar 14/2007		12	Mar 14/2007
	12	Mar 14/2007		11	Mar 14/2007	D13900	1	Mar 14/2007
	13	Mar 14/2007		12	Mar 14/2007		2	Mar 14/2007
	14	Mar 14/2007		13	Mar 14/2007		3	Mar 14/2007
	15	Mar 14/2007		14	Mar 14/2007		4	Mar 14/2007
	16	Mar 14/2007		15	Mar 14/2007		5	Mar 14/2007
	17	Mar 14/2007		16	Mar 14/2007		6	Mar 14/2007
	18	Mar 14/2007		17	Mar 14/2007		7	Mar 14/2007

A = Added, R = Revised, D = Deleted, O = Overflow

HOOKUP LIST

D280T132

EFFECTIVE PAGES

Page 53
Aug 05/2009



91-21-51
HOOKUP LIST

Section	Page	Date	Section	Page	Date	Section	Page	Date
D13900 cont.			D20100 cont.			D96100 cont.		
	8	Mar 14/2007		15	Mar 14/2007		6	Mar 07/2008
	9	Mar 14/2007		16	Mar 14/2007	E090	1	Mar 07/2008
	10	Mar 14/2007	D20500	1	Mar 14/2007	G00000	1	Mar 07/2008
	11	Mar 14/2007	D21100	1	Mar 14/2007	GD0000	1	Mar 07/2008
	12	Mar 14/2007		2	Mar 14/2007		2	Mar 07/2008
	13	Mar 14/2007	D21200	1	Mar 14/2007	GD0100	1	Mar 07/2008
	14	Mar 14/2007	D23100	1	Mar 14/2007		2	Mar 07/2008
D15800	1	Mar 14/2007	D30000	1	Mar 14/2007	GD0200	1	Mar 07/2008
D17000	1	Mar 14/2007	D31100	1	Feb 06/2009	GD0300	1	Mar 07/2008
	2	Mar 14/2007	D72000	1	Feb 06/2009	GD0400	1	Mar 07/2008
	3	Mar 14/2007		2	Feb 06/2009		2	Mar 07/2008
D20000	1	Mar 14/2007		3	Feb 06/2009	GD0500	1	Mar 07/2008
	2	Mar 14/2007	D90000	1	Feb 06/2009	GD0600	1	Mar 07/2008
D20100	1	Mar 14/2007		2	Feb 06/2009	GD0000	1	Mar 07/2008
	2	Mar 14/2007		3	Feb 06/2009		2	Mar 07/2008
	3	Mar 14/2007		4	Feb 06/2009	K00100	1	Mar 07/2008
	4	Mar 14/2007		5	Feb 06/2009		2	Mar 07/2008
	5	Mar 14/2007		6	Feb 06/2009		3	Mar 07/2008
	6	Mar 14/2007		7	Feb 06/2009		4	Mar 07/2008
	7	Mar 14/2007		8	Feb 06/2009		5	Mar 07/2008
	8	Mar 14/2007		9	Feb 06/2009		6	Mar 07/2008
	9	Mar 14/2007		10	Feb 06/2009	K00200	1	Mar 07/2008
	10	Mar 14/2007	D96100	1	Mar 07/2008		2	Mar 07/2008
	11	Mar 14/2007		2	Mar 07/2008		3	Mar 07/2008
	12	Mar 14/2007		3	Mar 07/2008	K00300	1	Feb 06/2009
	13	Mar 14/2007		4	Mar 07/2008		2	Feb 06/2009
	14	Mar 14/2007		5	Mar 07/2008		3	Feb 06/2009

A = Added, R = Revised, D = Deleted, O = Overflow

HOOKUP LIST

D280T132

EFFECTIVE PAGES

Page 54
Aug 05/2009



91-21-51
HOOKUP LIST

Section	Page	Date	Section	Page	Date	Section	Page	Date
K00400	1	Mar 07/2008	L00200 cont.			L00400 cont.		
	2	Mar 07/2008		6	Mar 07/2008		5	Mar 07/2008
K00600	1	Mar 07/2008		7	Mar 07/2008		6	Mar 07/2008
K00800	1	Mar 07/2008		8	Mar 07/2008		7	Mar 07/2008
	2	Mar 07/2008		9	Mar 07/2008		8	Mar 07/2008
K02000	1	Mar 07/2008		10	Mar 07/2008		9	Mar 07/2008
	2	Mar 07/2008		11	Mar 07/2008	L00500	1	Mar 07/2008
K09000	1	Mar 07/2008		12	Mar 07/2008		2	Mar 07/2008
L00000	1	Mar 07/2008		13	Mar 07/2008		3	Mar 07/2008
	2	Mar 07/2008		14	Mar 07/2008		4	Mar 07/2008
	3	Mar 07/2008		15	Mar 07/2008		5	Mar 07/2008
	4	Mar 07/2008		16	Mar 07/2008		6	Mar 07/2008
	5	Mar 07/2008		17	Mar 07/2008		7	Mar 07/2008
L00100	1	Mar 07/2008		18	Mar 07/2008		8	Mar 07/2008
	2	Mar 07/2008		19	Mar 07/2008		9	Mar 07/2008
	3	Mar 07/2008		20	Mar 07/2008		10	Mar 07/2008
	4	Mar 07/2008	L00300	1	Mar 07/2008		11	Mar 07/2008
	5	Mar 07/2008		2	Mar 07/2008		12	Mar 07/2008
	6	Mar 07/2008		3	Mar 07/2008	L00600	1	Mar 07/2008
	7	Mar 07/2008		4	Mar 07/2008		2	Mar 07/2008
	8	Mar 07/2008		5	Mar 07/2008	R	3	Aug 05/2009
	9	Mar 07/2008		6	Mar 07/2008		4	Mar 07/2008
	10	Mar 07/2008		7	Mar 07/2008		5	Mar 07/2008
L00200	1	Mar 07/2008		8	Mar 07/2008		6	Mar 07/2008
	2	Mar 07/2008	L00400	1	Mar 07/2008		7	Sep 04/2008
	3	Mar 07/2008		2	Mar 07/2008		8	Feb 06/2009
	4	Mar 07/2008		3	Mar 07/2008	L00700	1	Mar 07/2008
	5	Mar 07/2008		4	Mar 07/2008		2	Mar 07/2008

A = Added, R = Revised, D = Deleted, O = Overflow

HOOKUP LIST

D280T132

EFFECTIVE PAGES

Page 55
Aug 05/2009



91-21-51
HOOKUP LIST

Section	Page	Date	Section	Page	Date	Section	Page	Date
L00700 cont.			M00600	1	Mar 07/2008	R00600	1	Mar 07/2008
	3	Mar 07/2008	M00700	1	Mar 07/2008	S00000	1	Mar 07/2008
	4	Mar 07/2008		2	Mar 07/2008		2	Mar 07/2008
	5	Mar 07/2008	M00800	1	Mar 07/2008		3	Mar 07/2008
	6	Mar 07/2008		2	Mar 07/2008		4	Mar 07/2008
	7	Mar 07/2008	M00900	1	Mar 07/2008	R S00100	1	Aug 05/2009
L00800	1	Mar 07/2008	M01000	1	Mar 07/2008		2	Mar 07/2008
	2	Mar 07/2008	M01100	1	Mar 07/2008		3	Mar 07/2008
	3	Mar 07/2008		2	Mar 07/2008	S00200	1	Mar 07/2008
	4	Mar 07/2008	M01200	1	Mar 07/2008	R	2	Aug 05/2009
L00900	1	Mar 07/2008	M01500	1	Mar 07/2008		3	Mar 07/2008
L01000	1	Mar 07/2008	M01600	1	Mar 07/2008		4	Mar 07/2008
	2	Mar 07/2008	M01900	1	Mar 07/2008		5	Mar 07/2008
L01100	1	Mar 07/2008	M02100	1	Mar 07/2008	S00300	1	Mar 07/2008
	2	Mar 07/2008	M09000	1	Mar 07/2008		2	Mar 07/2008
	3	Mar 07/2008	M10300	1	Mar 07/2008		3	Mar 07/2008
R	4	Aug 05/2009	M10400	1	Mar 07/2008		4	Mar 07/2008
	5	Mar 07/2008	M12000	1	Mar 07/2008		5	Mar 07/2008
	6	Mar 07/2008	N00100	1	Mar 07/2008		6	Mar 07/2008
	7	Mar 07/2008	NL0100	1	Mar 07/2008		7	Mar 07/2008
L01200	1	Mar 07/2008	QD0000	1	Mar 07/2008	S00400	1	Mar 07/2008
	2	Mar 07/2008		2	Mar 07/2008		2	Mar 07/2008
L09000	1	Mar 07/2008		3	Mar 07/2008		3	Mar 07/2008
M00200	1	Jun 06/2008	QD6700	1	Mar 07/2008		4	Mar 07/2008
	2	Mar 07/2008	R00000	1	Mar 07/2008		5	Mar 07/2008
M00300	1	Mar 07/2008		2	Mar 07/2008		6	Mar 07/2008
M00400	1	Mar 07/2008	R00500	1	Mar 07/2008	S00500	1	Mar 07/2008
M00500	1	Mar 07/2008		2	Mar 07/2008		2	Mar 07/2008

A = Added, R = Revised, D = Deleted, O = Overflow

HOOKUP LIST

D280T132

EFFECTIVE PAGES

Page 56
Aug 05/2009



91-21-51
HOOKUP LIST

Section	Page	Date	Section	Page	Date	Section	Page	Date
S00500 cont.			SM0000 cont.			T00100 cont.		
	3	Mar 07/2008		5	Mar 07/2008		3	Mar 07/2008
	4	Mar 07/2008		6	Mar 07/2008		4	Mar 07/2008
	5	Mar 07/2008		7	Mar 07/2008		5	Mar 07/2008
	6	Mar 07/2008		8	Mar 07/2008		6	Mar 07/2008
S00600	1	Mar 07/2008	SP0000	1	Mar 07/2008	TB0000	1	Mar 07/2008
	2	Mar 07/2008		2	Mar 07/2008		2	Mar 07/2008
	3	Mar 07/2008		3	Mar 07/2008		3	Mar 07/2008
	4	Mar 07/2008	SP0100	1	Mar 07/2008		4	Mar 07/2008
	5	Mar 07/2008	SP0200	1	Mar 07/2008		5	Mar 07/2008
	6	Mar 07/2008	SP0300	1	Mar 07/2008		6	Mar 07/2008
	7	Mar 07/2008		2	Mar 07/2008		7	Mar 07/2008
	8	Mar 07/2008		3	Mar 07/2008	TB0100	1	Mar 07/2008
	9	Mar 07/2008		4	Mar 07/2008		2	Mar 07/2008
S00700	1	Mar 07/2008	SP0400	1	Mar 07/2008		3	Mar 07/2008
S00800	1	Mar 07/2008	SP0500	1	Mar 07/2008		4	Mar 07/2008
	2	Mar 07/2008	SP0900	1	Mar 07/2008		5	Mar 07/2008
S00900	1	Mar 07/2008		2	Mar 07/2008		6	Mar 07/2008
S01600	1	Mar 07/2008	ST0600	1	Mar 07/2008		7	Sep 04/2008
	2	Mar 07/2008	ST0900	1	Mar 07/2008		8	Sep 04/2008
	3	Mar 07/2008	ST6500	1	Mar 07/2008		9	Sep 04/2008
S09000	1	Mar 07/2008	STA000	1	Mar 07/2008		10	Sep 04/2008
S10100	1	Mar 07/2008		2	Mar 07/2008		11	Sep 04/2008
S10200	1	Mar 07/2008		3	Mar 07/2008		12	Sep 04/2008
SM0000	1	Mar 07/2008		4	Mar 07/2008		13	Sep 04/2008
	2	Mar 07/2008	STA100	1	Mar 07/2008		14	Sep 04/2008
	3	Mar 07/2008	T00100	1	Mar 07/2008		15	Sep 04/2008
	4	Mar 07/2008		2	Mar 07/2008		16	Sep 04/2008

A = Added, R = Revised, D = Deleted, O = Overflow

HOOKUP LIST

D280T132

EFFECTIVE PAGES

Page 57
Aug 05/2009



91-21-51
HOOKUP LIST

Section	Page	Date	Section	Page	Date	Section	Page	Date
TB0100 cont.			TS0100 cont.					
	17	Sep 04/2008		2	Feb 06/2009			
	18	Sep 04/2008	TS0200	1	Feb 06/2009			
	19	Sep 04/2008		2	Feb 06/2009			
	20	Sep 04/2008	TS0400	1	Feb 06/2009			
	21	Sep 04/2008	TS0500	1	Feb 06/2009			
	22	Sep 04/2008	TS0600	1	Feb 06/2009			
	23	Feb 06/2009	V00000	1	Feb 06/2009			
	24	Feb 06/2009	R V00300	1	Aug 05/2009			
	25	Feb 06/2009		2	BLANK			
TB0200	1	Mar 07/2008						
R	2	Aug 05/2009						
R	3	Aug 05/2009						
	4	Feb 06/2009						
	5	Feb 06/2009						
	6	Feb 06/2009						
	7	Feb 06/2009						
	8	Feb 06/2009						
	9	Feb 06/2009						
TB0300	1	Feb 06/2009						
	2	Feb 06/2009						
	3	Feb 06/2009						
TB0400	1	Feb 06/2009						
	2	Feb 06/2009						
TB5000	1	Feb 06/2009						
TB5100	1	Feb 06/2009						
TS0000	1	Feb 06/2009						
TS0100	1	Feb 06/2009						

A = Added, R = Revised, D = Deleted, O = Overflow

HOOKUP LIST

D280T132

EFFECTIVE PAGES

Page 58
Aug 05/2009



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
B00041		0641/116/L036		(HEATER)-FWD DRAIN MAST				050-099
B00041		0665/116/L036		(HEATER)-FWD DRAIN MAST				150-199, 275-299
	=G		W1258	X-D			30-71-11	ALL
	=P		W1258	X-C			30-71-11	ALL
B00042		1406/111/R025		(HEATER)-AFT DRAIN MAST				050-099
B00042		1410/111/R028		(HEATER)-AFT DRAIN MAST				150-199, 275-299
	=G		W1366	B-D			30-71-11	ALL
	=P		W1366	B-C			30-71-11	ALL
B00043		0315/188/L075		HEATER TAPE-WATER SUPPLY LINE				ALL
	=G		W1258	A-B			30-71-21	ALL
	=P		W1258	A-A			30-71-21	ALL
B00044		1575/140/L002		HEATER-AFT DRAIN PIPE GASKET				ALL
	=G		W1356	C-B			30-71-23	ALL
	=P		W1356	C-A			30-71-23	ALL
B00060		0276/154/R025		HORN-GROUND CREW CALL				ALL
	=G	L	W1343	002	20		23-43-11	ALL
	=P	L	W1343	001	22		23-43-11	ALL
B00069		MULTI /		SPEAKER-PSU				ALL
	4K	Z	W1268	201R	22		23-31-16	050-099, 150-199
	4K	Z	W1270	201R	22		MULTI	050-099, 150-199
	4K	Z	W1272	201R	22		23-31-15	050-099, 162-199, 280-299
	4K	Z	W1268	201R	22		23-31-15	275-299
	COM	Z	W1268	201B	22		23-31-16	050-099, 150-199
	COM	Z	W1270	201B	22		MULTI	050-099, 150-199
	COM	Z	W1272	201B	22		23-31-15	050-099, 162-199, 280-299
	COM	Z	W1268	201B	22		23-31-15	275-299
B00070		0292/280/R025		SPEAKER-GALLEY,FWD				ALL
	2K	Z	W1230	202R	22		23-31-14	ALL
	COM	Z	W1230	202B	22		23-31-14	ALL
B00072		0420/280/L040		SPEAKER-ATTEND,FWD,L				050-099
	+	X	W0665	202R	22		23-31-14	050-099
	-	X	W0665	202B	22		23-31-14	050-099

HOOKUP LIST

D280T132

91-21-51

Section B00000

Page 1

Jan 21/2005



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
B00073		0322/280/006		SPEAKER-ATTEND,FWD,R				050-099
	+	X	W0665	203R	22		23-31-14	050-099
	-	X	W0665	203B	22		23-31-14	050-099
B00074		0810/280/L020		SPEAKER-ATTEND,MID,L				050-099
	+	X	W0110	202R	22		23-31-14	050-099
	-	X	W0110	202B	22		23-31-14	050-099
B00075		0810/280/R020		SPEAKER-ATTEND,MID,R				050-099
	+	X	W0110	201R	22		23-31-14	050-099
	-	X	W0110	201B	22		23-31-14	050-099
B00076		1531/280/L023		SPEAKER-ATTEND,AFT,L				050-099
	+	X	W0665	208R	22		23-31-14	050-099
	-	X	W0665	208B	22		23-31-14	050-099
B00077		1531/280/R023		SPEAKER-ATTEND,AFT,R				050-099
	+	X	W0665	209R	22		23-31-14	050-099
	-	X	W0665	209B	22		23-31-14	050-099
B00087		1560/176/L065		HEATER TAPE-WATER SUPPLY LINE				ALL
	=G		W1358	V-B			30-71-24	050-099
	=G		W1358	V-B			30-71-23	150-199, 275-299
	=P		W1358	V-A			30-71-24	050-099
	=P		W1358	V-A			30-71-23	150-199, 275-299
B00088		1565/156/R040		HEATER TAPE-DRAIN LINE				ALL
	=G		W1358	W-B			30-71-23	ALL
	=P		W1358	W-A			30-71-23	ALL
B00089		1556/171/R027		HEATER BLANKET-WATER TANK, FWD				050-099, 150-199
	BGR		W1358	Q-E			30-71-24	050-099, 150-199
	BLK		W1358	Q-C			30-71-24	050-099, 150-199
	GRA		W1358	Q-F			30-71-24	050-099, 150-199
	ORG		W1358	Q-D			30-71-24	050-099, 150-199
B00090		0273/191/L075		HEATER TAPE-WATER SUPPLY LINE				ALL
	=G		W1258	Y-D			30-71-21	ALL
	=P		W1258	Y-C			30-71-21	ALL

HOOKUP LIST

D280T132

91-21-51

Section B00000

Page 2

Jan 21/2005

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
B00091		0290/190/L065		THERMOSTAT-CONTROL,HEATER TAPE				050-099
B00091		0290/191/L065		THERMOSTAT-CONTROL,HEATER TAPE				150-199
B00091		0290/191/L075		THERMOSTAT-CONTROL,HEATER TAPE				275-278
B00091		0290/190/L075		THERMOSTAT-CONTROL,HEATER TAPE				280-299
	=G		W1258	G-B			30-71-21	ALL
	=P		W1258	G-A			30-71-21	ALL
B00092		1021/194/L060		THERMOSTAT-CONTROL,HEATER TAPE				050-099, 275-278
B00092		1021/196/L056		THERMOSTAT-CONTROL,HEATER TAPE				150-199
B00092		1021/196/L060		THERMOSTAT-CONTROL,HEATER TAPE				280-299
	=G		W1258	J-B			30-71-22	ALL
	=P		W1258	J-A			30-71-22	ALL
B00093		1483/129/R022		THERMOSTAT-CONTROL,HEATER TAPE				050-099, 280-299
B00093		1480/131/R020		THERMOSTAT-CONTROL,HEATER TAPE				150-199
B00093		1480/129/R022		THERMOSTAT-CONTROL,HEATER TAPE				275-278
	=G		W1356	E-C			30-71-24	050-099
	=G		W1356	E-C			30-71-23	150-199, 275-299
	=P		W1356	E-A			30-71-24	050-099
	=P		W1356	E-A			30-71-23	150-199, 275-299
B00095		1097/188/L072		HEATER TAPE-WATER SUPPLY LINE				050-099, 150-199
B00095		1097/188/L072		HEATER TAPE-WATER SPLY LINE (SB 30A0018)				150-152
	=G		W1258	P-H			30-71-23	050-099
	=G		W1258	P-H			30-71-24	150-199
	=P		W1258	P-G			30-71-23	050-099
	=P		W1258	P-G			30-71-24	150-199
B00096		1090/197/L071		HEATER TAPE-WATER SUPPLY LINE				050-099
B00096		1087/197/L071		HEATER TAPE-WATER SUPPLY LINE				150-199
B00096		1090/185/L071		HEATER TAPE-WATER SUPPLY LINE				275-299
	=G		W1258	I-B			30-71-22	ALL
	=P		W1258	I-A			30-71-22	ALL
B00097		0275/192/L075		HEATER TAPE-DRAIN LINE				ALL
	=G		W1258	U-D			30-71-21	ALL
	=P		W1258	U-C			30-71-21	ALL
B00098		1560/176/L065		HEATER TAPE-WATER SUPPLY LINE				050-099, 150-199
	=G		W1358	Z-D			30-71-23	050-099

HOOKUP LIST

D280T132

91-21-51

Section B00000

Page 3

Jan 21/2005



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
B00098		1560/176/L065		HEATER TAPE-WATER SUPPLY LINE (continued)				050-099, 150-199
	=G		W1358	Z-D			30-71-24	150-199
	=P		W1358	Z-C			30-71-23	050-099
	=P		W1358	Z-C			30-71-24	150-199
B00099		1560/180/R065		HEATER TAPE-WATER SUPPLY LINE				050-099, 150-199
	=G		W1356	H-B			30-71-23	050-099
	=G		W1356	H-B			30-71-24	150-199
	=P		W1356	H-A			30-71-23	050-099
	=P		W1356	H-A			30-71-24	150-199

HOOKUP LIST

D280T132

91-21-51

Section B00000

Page 4 End

Jan 21/2005



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
B00100		1560/158/R042		HEATER TAPE-WATER SUPPLY LINE				ALL
	=G		W1356	B-B			30-71-24	050-099
	=G		W1356	B-B			30-71-23	150-199, 275-299
	=P		W1356	B-A			30-71-24	050-099
	=P		W1356	B-A			30-71-23	150-199, 275-299
B00101		1560/180/R065		HEATER TAPE-WATER SUPPLY LINE				275-276
	=G		W1358	S-B			30-71-23	275-276
	=P		W1358	S-A			30-71-23	275-276
B00102		1560/180/R065		HEATER TAPE-WATER SUPPLY LINE				ALL
	=G		W1358	T-B			30-71-23	ALL
	=P		W1358	T-A			30-71-23	ALL
B00103		0630/163/L070		THERMOSTAT-CONTROL,HEATER TAPE				050-099
	=G		W1258	R-B			30-71-21	050-099
	=P		W1258	R-A			30-71-21	050-099
B00104		1351/170/L070		THERMOSTAT-CONTROL,HEATER TAPE				050-099, 150-199
	=G		W1258	Y-B			30-71-23	050-099
	=G		W1258	Y-B			30-71-24	150-199
	=P		W1258	Y-A			30-71-23	050-099
	=P		W1258	Y-A			30-71-24	150-199
B00105		1574/165/R030		CONTROLLER-HEATER BLANKET,WATER TANK				050-099, 150-199
	BGR		W1358	N-E			30-71-24	050-099, 150-199
	BKR		W1358	N-G			30-71-24	050-099, 150-199
	BLK		W1358	N-C			30-71-24	050-099, 150-199
	GRA		W1358	N-F			30-71-24	050-099, 150-199
	ORG		W1358	N-D			30-71-24	050-099, 150-199
B00107		0322/189/L075		HEATER TAPE-DRAIN LINE				ALL
	=G		W1258	D-B			30-71-21	ALL
	=P		W1258	D-A			30-71-21	ALL
B00108		1090/197/L071		HEATER TAPE-WATER SUPPLY LINE				050-099, 275-299
B00108		1087/197/L071		HEATER TAPE-WATER SUPPLY LINE				150-199
	=G		W1258	H-B			30-71-22	ALL
	=P		W1258	H-A			30-71-22	ALL

HOOKUP LIST

D280T132

91-21-51

Section B00100

Page 1

Jan 21/2005



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
B00109		0246/201/R067		HEATER TAPE-WATER SUPPLY LINE				ALL
	=G		W1258	Q-B			30-71-21	ALL
	=P		W1258	Q-A			30-71-21	ALL
B00110		1498/135/R021		HEATER TAPE-WATER SUPPLY LINE				050-099, 150-199
B00110		1384/118/R022		HEATER TAPE-WATER SUPPLY LINE				275-299
	=G		W1356	A-F			30-71-24	050-099
	=G		W1356	A-F			30-71-23	150-199
	=G		W1366	G-B			30-71-23	275-299
	=P		W1356	A-E			30-71-24	050-099
	=P		W1356	A-E			30-71-23	150-199
	=P		W1366	G-A			30-71-23	275-299
B00111		0632/143/L075		HEATER TAPE-WATER SUPPLY LINE				050-099
	=G		W1258	P-B			30-71-21	050-099
	=P		W1258	P-A			30-71-21	050-099
B00112		1560/176/L065		HEATER TAPE-WATER SUPPLY LINE				050-099, 150-199, 277-299
B00112		1560/158/R042		HEATER TAPE-WATER SUPPLY LINE				275-276
	=G		W1358	U-B			30-71-23	ALL
	=P		W1358	U-A			30-71-23	ALL
B00113		0632/143/L075		HEATER TAPE-WATER SUPPLY LINE				050-099
	=G		W1258	O-B			30-71-21	050-099
	=P		W1258	O-A			30-71-21	050-099
B00114		0786/183/L007		HEATER TAPE-WATER SUPPLY LINE				050-099
	=G		W1258	N-B			30-71-22	050-099
	=P		W1258	N-A			30-71-22	050-099
B00115		0639/136/L068		HEATER TAPE-WATER SUPPLY LINE				050-099
B00115		0786/178/L059		HEATER TAPE-WATER SUPPLY LINE				275-299
	=G		W1258	L-B			30-71-21	050-099
	=G		W1258	L-B			30-71-22	275-299
	=P		W1258	L-A			30-71-21	050-099
	=P		W1258	L-A			30-71-22	275-299
B00116		0786/187/R020		HEATER TAPE-WATER SUPPLY LINE				275-299
	=G		W1258	M-B			30-71-22	275-299
	=P		W1258	M-A			30-71-22	275-299

HOOKUP LIST

D280T132

91-21-51

Section B00100

Page 2

Jan 21/2005



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
B00118		0255/199/L075		HEATER TAPE-WATER SUPPLY LINE				ALL
	=G		W1258	B-B			30-71-21	ALL
	=P		W1258	B-A			30-71-21	ALL
B00119		0639/138/L068		HEATER TAPE-WATER SUPPLY LINE				ALL
	=G		W1258	F-B			30-71-21	ALL
	=P		W1258	F-A			30-71-21	ALL
B00120		0639/143/L075		HEATER TAPE-DRAIN LINE				050-099
B00120		0654+121/143/L065		HEATER TAPE-DRAIN LINE				150-199
B00120		0654+121/143/L075		HEATER TAPE-DRAIN LINE				275-276
B00120		0661/143/L075		HEATER TAPE-DRAIN LINE				277-299
	=G		W1258	E-B			30-71-21	ALL
	=P		W1258	E-A			30-71-21	ALL
B00122		P040-00/ /		HORN-APU FIRE WARNING				ALL
	A	M	W1132	014R	18		26-15-12	ALL
	B	M	W1132	013R	18		26-15-12	ALL
	GND	N	W1132	012R	18		26-15-12	ALL
B00126		1565/171/R027		HEATER BLANKET-WATER TANK,MID				050-099, 150-199
	BGR		W1358	P-E			30-71-24	050-099, 150-199
	BLK		W1358	P-C			30-71-24	050-099, 150-199
	GRA		W1358	P-F			30-71-24	050-099, 150-199
	ORG		W1358	P-D			30-71-24	050-099, 150-199
B00127		1583/161/R033		HEATER BLANKET-WATER TANK,AFT				050-099, 150-199
	BGR		W1358	O-E			30-71-24	050-099, 150-199
	BLK		W1358	O-C			30-71-24	050-099, 150-199
	GRA		W1358	O-F			30-71-24	050-099, 150-199
	ORG		W1358	O-D			30-71-24	050-099, 150-199
B00129		P034-00/ /		FUSEHOLDER-EP INTERLOCK				ALL
	=1	\$	W0026	086	24		24-41-11	ALL
	=2	\$	W0026	087	24		24-41-11	ALL
B00130		P034-00/ /		FUSEHOLDER-EP INTERLOCK				ALL
	=1	\$	W0026	088	24		24-41-11	ALL
	=2	\$	W0026	089	24		24-41-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section B00100

Page 3

Jan 21/2005



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
B00131		0764/178/L062		HEATER TAPE-DRAIN LINE				050-099
	=G		W1258	T-D			30-71-22	050-099
	=P		W1258	T-C			30-71-22	050-099
B00132		1365/160/L072		HEATER TAPE-WATER SUPPLY LINE				050-099, 150-199
B00132		1365/160/L072		HEATER TAPE-WATER SPLY LINE (SB 30A0018)				150-152
	=G		W1258	D-S			30-71-24	050-099
	=G		W1258	Z-B			30-71-23	150-199
	=P		W1258	D-R			30-71-24	050-099
	=P		W1258	Z-A			30-71-23	150-199
B00133		0303/190/L075		HEATER TAPE-DRAIN LINE				ALL
	=G		W1258	B-Z			30-71-21	ALL
	=P		W1258	A-Z			30-71-21	ALL
B00135		0786/178/L059		HEATER TAPE-DRAIN LINE				050-099
	=G		W1258	B-F			30-71-22	050-099
	=P		W1258	B-E			30-71-22	050-099
B00139		0315/280/R023		CHIME-ATTENDANT,FWD CTR				150-157
B00139		0325/280/R025		CHIME-ATTENDANT,FWD CTR				162-199
B00139		0312/280/R020		CHIME-ATTENDANT,FWD CTR				275-299
	H/L	C	W0665	043	24		23-42-12	150-199, 275-299
	28V	C	W0665	042	22		23-42-12	150-199, 275-299
	HI	C	W0665	060	24		23-34-13	150-199, 275-299
	HI	C	W0665	087	24		33-25-11	151-152
	CAP	Y	W0665	087	24		33-25-11	150, 153-199
	GRD	C	W0665	041	20		23-42-12	150-199, 275-299
B00144		0290/280/L045		CHIME-ATTENDANT,FWD LEFT				150-199
B00144		0321/280/L006		CHIME-ATTENDANT,FWD LEFT				275-299
	H/L	C	W0665	046	24		23-42-12	150-199, 275-299
	28V	C	W0665	045	22		23-42-12	150-199, 275-299
	HI	C	W0665	061	24		23-34-13	150-199, 275-299
	HI	C	W0820	014	22		33-25-11	150-199, 275-299
	HI	C	W0820	039	22		33-25-11	275-299
	GRD	C	W0665	044	20		23-42-12	150-199, 275-299

HOOKUP LIST

D280T132

91-21-51

Section B00100

Page 4

Jan 21/2005



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
B00145		0944/280/R019		CHIME-ATTENDANT,MID RIGHT				150-199
B00145		0821/280/R017		CHIME-ATTENDANT,MID RIGHT				275-299
	H/L	C	W0122	112	24		23-42-12	150-199
	H/L	C	W0110	057	24		23-42-12	275-299
	28V	C	W0122	113	22		23-42-12	150-199
	28V	C	W0110	056	22		23-42-12	275-299
	HI	C	W0122	013	22		33-25-11	150-199
	HI	C	W0122	119	24		23-34-13	150-199
	HI	C	W0110	060	22		23-34-13	275-299
	DED		W0122	113Z			23-42-12	150-199
	DED		W0110	056Z			23-42-12	275-299
	GRD	C	W0122	114	20		23-42-12	150-199
	GRD	C	W0110	055	20		23-42-12	275-299
B00146		0944/280/L019		CHIME-ATTENDANT,MID LEFT				150-199
B00146		0821/280/L017		CHIME-ATTENDANT,MID LEFT				275-299
	H/L	C	W0122	116	24		23-42-12	150-199
	H/L	C	W0110	023	24		23-42-12	275-299
	28V	C	W0122	117	22		23-42-12	150-199
	28V	C	W0110	058	22		23-42-12	275-299
	HI	C	W0122	120	24		23-34-13	150-199
	HI	C	W0122	128	22		33-25-11	150-199
	HI	C	W0110	018	22		23-34-13	275-299
	DED		W0122	117Z			23-42-12	150-199
	DED		W0110	058Z			23-42-12	275-299
	GRD	C	W0122	118	20		23-42-12	150-199
	GRD	C	W0110	059	20		23-42-12	275-299
B00147		1504/280/R025		CHIME-ATTENDANT,AFT RIGHT				150-199
B00147		1513/280/R025		CHIME-ATTENDANT,AFT RIGHT				275-276, 280-299
B00147		1533/280/R025		CHIME-ATTENDANT,AFT RIGHT				277-278
	H/L	C	W0665	056	24		23-42-12	150-199, 275-299
	28V	C	W0665	055	22		23-42-12	150-199, 275-299
	HI	C	W0828	117	22		33-25-11	150-199
	HI	C	W0665	064	24		23-34-13	150-199, 275-299
	HI	C	W1276	011	22		33-25-11	275-299
	GRD	C	W0665	054	20		23-42-12	150-199, 275-299

HOOKUP LIST

D280T132

91-21-51

Section B00100

Page 5

Jan 21/2005



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
B00148		1504/280/L025		CHIME-ATTENDANT,AFT LEFT				150-199
B00148		1504/280/L033		CHIME-ATTENDANT,AFT LEFT				275-278
B00148		1513/280/L025		CHIME-ATTENDANT,AFT LEFT				280-299
	H/L	C	W0665	059	24		23-42-12	150-199, 275-299
	28V	C	W0665	058	22		23-42-12	150-199, 275-299
	HI	C	W0828	102	22		33-25-11	150-199
	HI	C	W0665	065	24		23-34-13	150-199, 275-299
	HI	C	W0828	027	22		33-25-11	275-299
	GRD	C	W0665	057	20		23-42-12	150-199, 275-299
B00149		1390/113/L004		HEATER-WATER FILL CONNECTION				050-099, 275-299
B00149		1389/117/L005		HEATER-WATER FILL CONNECTION				150-199
	=G		W1366	J-B			30-71-23	ALL
	=P		W1366	J-A			30-71-23	ALL
B00151		1074/180/L070		HEATER TAPE-WATER SUPPLY LINE				050-099
B00151		1087/197/L071		HEATER TAPE-WATER SUPPLY LINE				150-199
	=G		W1258	Z-F			30-71-22	050-099, 150-199
	=P		W1258	Z-E			30-71-22	050-099, 150-199
B00158		1498/135/R021		HEATER TAPE-WATER SUPPLY LINE				050-099, 150-199, 277-299
B00158		1384/118/R022		HEATER TAPE-WATER SUPPLY LINE				275-276
	=G		W1356	N-B			30-71-24	050-099
	=G		W1356	N-B			30-71-23	150-199, 277-299
	=G		W1366	N-B			30-71-23	275-276
	=P		W1356	N-A			30-71-24	050-099
	=P		W1356	N-A			30-71-23	150-199, 277-299
	=P		W1366	N-A			30-71-23	275-276
B00159		0786/197/L056		HEATER TAPE-WATER SUPPLY LINE				050-099, 275-299
B00159		0784/197/L060		HEATER TAPE-WATER SUPPLY LINE				150-199
	=G		W1258	C-F			30-71-22	ALL
	=P		W1258	C-E			30-71-22	ALL
B00160		0786/194/L056		HEATER TAPE-WATER SUPPLY LINE				050-099
B00160		0784/197/L062		HEATER TAPE-WATER SUPPLY LINE				150-199
B00160		0786/197/L056		HEATER TAPE-WATER SUPPLY LINE				275-299
	=G		W1258	D-F			30-71-22	ALL
	=P		W1258	D-E			30-71-22	ALL

HOOKUP LIST

D280T132

91-21-51

Section B00100

Page 6

Jan 21/2005



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
B00161		0784/197/L062		HEATER TAPE-WATER SUPPLY LINE				150-199
	=G		W1258	G-F			30-71-22	150-199
	=P		W1258	G-E			30-71-22	150-199
B00164		0772/172/L062		HEATER TAPE-WATER SUPPLY LINE				050-099
B00164		0764/178/L062		HEATER TAPE-WATER SUPPLY LINE				275-299
	=G		W1258	F-F			30-71-22	050-099, 275-299
	=P		W1258	F-E			30-71-22	050-099, 275-299

HOOKUP LIST

D280T132

91-21-51

Section B00100

Page 7 End

Jan 21/2005



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
B00205		0786/183/L007		HEATER TAPE-WATER SUPPLY LINE				050-099
	=G		W1258	L-H			30-71-22	050-099
	=P		W1258	L-G			30-71-22	050-099
B00212		1570/140/R003		HEATER-SERVICE FITTING,WASTE TANK				ALL
	=G		W1356	A-B			30-71-23	ALL
	=P		W1356	A-A			30-71-23	ALL
B00213		1575/141/R003		HEATER-SERVICE FITTING,WASTE TANK				ALL
	=G		W1356	A-D			30-71-23	ALL
	=P		W1356	A-C			30-71-23	ALL
B00229		1564/280/L018		SPEAKER-GALLEY,AFT L				ALL
	1K	Z	W0665	213R	22		23-31-14	ALL
	COM	Z	W0665	213B	22		23-31-14	ALL
B00230		1564/280/R018		SPEAKER-GALLEY,AFT R				ALL
	1K	Z	W0665	214R	22		23-31-14	ALL
	COM	Z	W0665	214B	22		23-31-14	ALL
B00233		1546/185/R065		HEATER TAPE-WATER SUPPLY LINE				ALL
	=G		W1356	D-D			30-71-23	ALL
	=P		W1356	D-C			30-71-23	ALL
B00234		0786/197/R060		HEATER TAPE-WATER SUPPLY LINE				050-099, 275-299
	=G		W1258	B-D			30-71-22	050-099, 275-299
	=P		W1258	B-C			30-71-22	050-099, 275-299
B00235		1531/280/L027		SPEAKER-CEILING,AFT L				150-199
B00235		1531/280/L023		SPEAKER-CEILING,AFT L				275-299
	4K	Z	W0665	216R	22		23-31-14	150-199, 275-299
	COM	Z	W0665	216B	22		23-31-14	150-199, 275-299
B00236		1531/280/R023		SPEAKER-CEILING,AFT R				280-299
	4K	Z	W0665	217R	22		23-31-14	280-299
	COM	Z	W0665	217B	22		23-31-14	280-299
B00237		1540/158/R062		HEATER TAPE-WATER SUPPLY LINE				ALL
	=G		W1356	F-D			30-71-23	ALL
	=P		W1356	F-C			30-71-23	ALL

HOOKUP LIST

D280T132

91-21-51

Section B00200

Page 1

Jan 21/2005

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
B00241		1390/121/R020		HEATER TAPE WATER FILL LINE				ALL
B00241		1389/120/0000		HEATER TAPE WATER FILL LINE (SB 30-0024)				150-199, 275-299
	= G		W1366	A-F			30-71-23	ALL
	= P		W1366	A-E			30-71-23	ALL
B00243		0940/280/0000		SPEAKER-CEILING,MID				150-199
B00243		0820/280/L020		SPEAKER-CEILING,MID				275-299
	4K	Z	W0122	206R	22		23-31-14	150-199
	4K	Z	W0110	203R	22		23-31-14	275-299
	COM	Z	W0122	206B	22		23-31-14	150-199
	COM	Z	W0110	203B	22		23-31-14	275-299
B00246		0373/280/L036		SPEAKER-CEILING,FWD L				275-299
	4K	Z	W0820	203R	22		23-31-14	275-299
	COM	Z	W0820	203B	22		23-31-14	275-299
B00256		0786/187/R020		HEATER TAPE-DRAIN LINE				275-299
	= G		W1258	A-N			30-71-22	275-299
	= P		W1258	A-M			30-71-22	275-299
B00260		0674/138/R067		HEATER TAPE-DRAIN LINE				150-199
	= G		W1258	G-D			30-71-21	150-199
	= P		W1258	G-C			30-71-21	150-199
B00264		0658/138/L066		THERMOSTAT-CONTROL,HEATER TAPE				150-199
B00264		0654+121/138/L075		THERMOSTAT-CONTROL,HEATER TAPE				275-299
	= G		W1258	H-D			30-71-21	150-199, 275-299
	= P		W1258	H-C			30-71-21	150-199, 275-299
B00269		0252/205/R075		THERMOSTAT-CONTROL,HEATER TAPE				050-099
B00269		0252/208/R075		THERMOSTAT-CONTROL,HEATER TAPE				150-199
B00269		0255/205/R072		THERMOSTAT-CONTROL,HEATER TAPE				275-299
	= G		W1258	J-D			30-71-21	ALL
	= P		W1258	J-C			30-71-21	ALL
B00270		0246/201/R067		HEATER TAPE-SUPPLY LINE				050-099, 150-199
	= G		W1258	I-D			30-71-21	050-099, 150-199
	= P		W1258	I-C			30-71-21	050-099, 150-199

HOOKUP LIST

D280T132

91-21-51

Section B00200

Page 2

Jan 21/2005



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
B00283		0317/247/L094		HEATER-L FWD DR VIEWPORT				ALL
	=G		W0842	A-B			30-46-11	ALL
	=P		W0842	A-A			30-46-11	ALL
B00284		0317/247/R094		HEATER-R FWD DR VIEWPORT				ALL
	=G		W0844	A-B			30-46-11	ALL
	=P		W0844	A-A			30-46-11	ALL
B00285		1510/247/L096		HEATER-L AFT DR VIEWPORT				ALL
	=G		W0850	A-B			30-46-11	ALL
	=P		W0850	A-A			30-46-11	ALL
B00286		1510/247/R096		HEATER-R AFT DR VIEWPORT				ALL
	=G		W0852	A-B			30-46-11	ALL
	=P		W0852	A-A			30-46-11	ALL
B00289		0291/280/L021		SPEAKER-CEILING,FWD L				ALL
	4K	Z	W0820	204R	22		23-31-14	ALL
	COM	Z	W0820	204B	22		23-31-14	ALL
B00292		0415/280/R040		SPEAKER-CEILING,FWD R				050-099, 150-157
B00292		0440/280/R040		SPEAKER-CEILING,FWD R				162-199
	4K	Z	W1230	203R	22		23-31-14	050-099, 150-199
	COM	Z	W1230	203B	22		23-31-14	050-099, 150-199
B00293		0415/280/L035		SPEAKER-CEILING,FWD L				150-157
B00293		0440/280/L035		SPEAKER-CEILING,FWD L				162-199
	4K	Z	W0820	205R	22		23-31-14	150-199
	COM	Z	W0820	205B	22		23-31-14	150-199

HOOKUP LIST

D280T132

91-21-51

Section B00200

Page 3 End

Jan 21/2005



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
B00346		315/188/L075		HEATER TAPE				050-099, 150-199
	=G		W1258	A-R			30-71-21	050-099, 150-199
	=P		W1258	A-Q			30-71-21	050-099, 150-199
B00347		0246/192/L063		HEATER TAPE-WATER SUPPLY LINE				050-099, 150-199
	=G		W1258	B-P			30-71-21	050-099, 150-199
	=P		W1258	B-O			30-71-21	050-099, 150-199
B00350		0687/163/L072		HEATER TAPE				150-199
	=G		W1258	A-X			30-71-21	150-199
	=P		W1258	A-W			30-71-21	150-199
B00351		0687/163/L072		HEATER TAPE				150-199
	=G		W1258	B-I			30-71-21	150-199
	=P		W1258	A-Y			30-71-21	150-199
B00353		0654+66/159/L072		HEATER TAPE				150-199
	=G		W1258	B-N			30-71-21	150-199
	=P		W1258	B-M			30-71-21	150-199
B00356		1450/178/R076		HEATER BLANKET,CENTER-WATER TANK				050-099, 150-199
	BGR		W1356	Q-F			30-71-24	050-099, 150-154
	BLK		W1356	N-E			30-71-24	050-099, 150-199
	BRN		W1356	Q-F			30-71-24	155-199
	GRA		W1356	N-G			30-71-24	050-099, 150-199
	ORG		W1356	Q-D			30-71-24	050-099, 150-199
B00357		1450/178/R076		HEATER BLANKET,AFT-WATER TANK				050-099, 150-199
	BGR		W1356	O-C			30-71-24	050-099, 150-154
	BLK		W1356	P-F			30-71-24	050-099, 150-199
	BRN		W1356	O-C			30-71-24	155-199
	GRA		W1356	P-D			30-71-24	050-099, 150-199
	ORG		W1356	O-E			30-71-24	050-099, 150-199
B00358		1450/178/R076		HEATER BLANKET,FWD-WATER TANK				050-099, 150-199
	BGR		W1356	Q-C			30-71-24	050-099, 150-154
	BLK		W1356	O-F			30-71-24	050-099, 150-199
	BRN		W1356	Q-C			30-71-24	155-199
	GRA		W1356	Q-E			30-71-24	050-099, 150-199
	ORG		W1356	O-D			30-71-24	050-099, 150-199

HOOKUP LIST

D280T132

91-21-51

Section B00300

Page 1

Jan 21/2005



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
B00359		1450/178/R076		CONTROLLER-HEATER BLANKET,WATER TANK				050-099, 150-199
	BGR		W1356	N-F			30-71-24	050-099, 150-199
	BKR		W1356	G-B			30-71-24	050-099, 150-199
	BLK		W1356	G-A			30-71-24	050-099, 150-199
	GRA		W1356	N-D			30-71-24	050-099, 150-199
	ORG		W1356	N-C			30-71-24	050-099, 150-199
B00363		0402/176/L070		HEATER TAPE-WATER SUPPLY LINE				050-099
B00363		0401/176/L070		HEATER TAPE-WATER SUPPLY LINE				150-199
	=G		W1258	R-D			30-71-21	050-099, 150-199
	=P		W1258	R-C			30-71-21	050-099, 150-199
B00364		0402/176/L070		HEATER TAPE-WATER SUPPLY LINE				050-099
B00364		0401/176/L070		HEATER TAPE-WATER SUPPLY LINE				150-199
	=G		W1258	M-D			30-71-21	050-099, 150-199
	=P		W1258	M-C			30-71-21	050-099, 150-199
B00365		0402/176/L070		HEATER TAPE-WATER SUPPLY LINE				050-099
B00365		0401/176/L070		HEATER TAPE-WATER SUPPLY LINE				150-199
	=G		W1258	L-D			30-71-21	050-099, 150-199
	=P		W1258	L-C			30-71-21	050-099, 150-199
B00366		0408/192/L069		HEATER TAPE-WATER SUPPLY LINE				050-099, 150-199
	=G		W1258	K-D			30-71-21	050-099, 150-199
	=P		W1258	K-C			30-71-21	050-099, 150-199
B00367		0784/178/L060		HEATER TAPE-DRAIN LINE				150-199
	=G		W1258	R-H			30-71-22	150-199
	=P		W1258	R-G			30-71-22	150-199
B00368		0784/187/0000		HEATER TAPE-DRAIN LINE				150-199
	=G		W1258	V-H			30-71-22	150-199
	=P		W1258	V-G			30-71-22	150-199
B00369		0786/178/L059		HEATER TAPE-DRAIN LINE				150-199
	=G		W1258	W-H			30-71-22	150-199
	=P		W1258	W-G			30-71-22	150-199
B00370		0784/174/L062		HEATER TAPE-WATER SUPPLY LINE				150-199
	=G		W1258	X-H			30-71-22	150-199

HOOKUP LIST

D280T132

91-21-51

Section B00300

Page 2

Jan 21/2005



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
B00370		0784/174/L062		HEATER TAPE-WATER SUPPLY LINE (continued)				150-199
	=P		W1258	X-G			30-71-22	150-199
B00371		0784/186/0000		HEATER TAPE-DRAIN LINE				150-199
	=G		W1258	S-H			30-71-22	150-199
	=P		W1258	S-G			30-71-22	150-199
B00372		0786/178/L059		HEATER TAPE-WATER SUPPLY				050-099
B00372		0784/186/L062		HEATER TAPE-WATER SUPPLY				150-199
	=G		W1258	U-H			30-71-22	050-099, 150-199
	=P		W1258	U-G			30-71-22	050-099, 150-199
B00373		0654+64/195/L067		HEATER TAPE-WATER SUPPLY LINE				150-199
	=G		W1258	B-R			30-71-21	150-199
	=P		W1258	B-Q			30-71-21	150-199
B00374		0674/162/L072		HEATER TAPE-WATER SUPPLY LINE				150-199
	=G		W1258	S-D			30-71-21	150-199
	=P		W1258	S-C			30-71-21	150-199
B00375		0674/194/L062		HEATER TAPE-WATER SUPPLY LINE				150-199
	=G		W1258	T-H			30-71-22	150-199
	=P		W1258	T-G			30-71-22	150-199
B00376		0438/280/L034		CHIME-ATTENDANT PURSER				150-199
	H/L	C	W0665	174	24		23-42-12	150-199
	28V	C	W0665	175	22		23-42-12	150-199
	HI	C	W0665	198	24		33-25-11	150-199
	GND	C	W0665	176	20		23-42-12	150-199

HOOKUP LIST

D280T132

91-21-51

Section B00300

Page 3 End

Jan 21/2005



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
B00406		0872/245/L095		L ESC HATCH HTR BLKT NO.1				050-099, 155-199, 276-299
B00406		0871/230/L089		L ESC HATCH HTR BLKT NO.1 (SB 25-0113)				150-154, 275
	W		W1398	A-B			21-45-22	ALL
	WB		W1398	A-A			21-45-22	ALL
B00407		0915/230/L089		L ESC HATCH HTR BLKT NO.2 (SB 25-0113)				150-154, 275
B00407		0916/245/L095		L ESC HATCH HTR BLKT NO.2				155-199, 276-299
	W		W1498	A-B			21-45-22	150-199, 275-299
	WB		W1498	A-A			21-45-22	150-199, 275-299
B00408		0872/245/R095		R ESC HATCH HTR BLKT NO.1				050-099, 155-199, 276-299
B00408		0871/230/R089		R ESC HATCH HTR BLKT NO.1 (SB 25-0113)				150-154, 275
	W		W1400	A-B			21-45-22	ALL
	WB		W1400	A-A			21-45-22	ALL
B00409		0915/230/R089		R ESC HATCH HTR BLKT NO.2 (SB 25-0113)				150-154, 275
B00409		0916/245/R095		R ESC HATCH HTR BLKT NO.2				155-199, 276-299
	W		W1500	A-B			21-45-22	150-199, 275-299
	WB		W1500	A-A			21-45-22	150-199, 275-299
B00411		0786/184/L023		HEATER TAPE-WATER SUPPLY LINE				275-299
	=G		W1258	C-S			30-71-22	275-299
	=P		W1258	C-O			30-71-22	275-299
B00412		0764/178/L062		HEATER TAPE-DRAIN LINE				275-299
	=G		W1258	C-Q			30-71-22	275-299
	=P		W1258	B-Y			30-71-22	275-299
B00413		0786/178/L059		HEATER TAPE-DRAIN LINE				275-299
	=G		W1258	C-T			30-71-22	275-299
	=P		W1258	C-P			30-71-22	275-299
B00414		0786/187/R020		HEATER TAPE-DRAIN LINE				275-299
	=G		W1258	C-R			30-71-22	275-299
	=P		W1258	C-N			30-71-22	275-299
B00415		0246/192/L063		HEATER TAPE-WATER SUPPLY LINE				050-099, 155-199
	=G		W1258	C-V			30-71-21	050-099, 155-199
	=P		W1258	C-U			30-71-21	050-099, 155-199

HOOKUP LIST

D280T132

91-21-51

Section B00400

Page 1

Jan 21/2005



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
B00416		0255/235/L009		SWITCH				050-099, 162-199
	A	Z1	W3006	034	22		23-42-11	050-099, 162-164
	B	Z1	W3006	031	20		23-42-11	050-099, 162-164
	C	Z1	W3006	035	22		23-42-11	050-099, 162-199
	NO	Z1	W3006	030	20		23-42-11	050-099, 162-199
	A+	Z1	W3006	034	22		23-42-11	165-199
	A+	Z1	W3006	041	24		23-42-11	165-199
	A-	Z1	W3006	040	24		23-42-11	167-199
	B+	Z1	W3006	031	20		23-42-11	165-199
	B+	Z1	W3006	040	24		23-42-11	165-199
	B-	Z1	W3006	041	24		23-42-11	167-199
	= A+	Z1	W3006	040	24		23-42-11	165-166
	= B+	Z1	W3006	041	24		23-42-11	165-166
B00417		0255/263/L009		SWITCH				050-099, 162-199
	A	Z1	W3006	036	22		23-42-11	050-099, 162-164
	B	Z1	W3006	032	20		23-42-11	050-099, 162-164
	C	Z1	W3006	037	22		23-42-11	050-099, 162-199
	NO	Z1	W3006	033	20		23-42-11	050-099, 162-199
	A+	Z1	W3006	036	22		23-42-11	165-199
	A+	Z1	W3006	043	24		23-42-11	165-199
	A-	Z1	W3006	042	24		23-42-11	167-199
	B+	Z1	W3006	032	20		23-42-11	165-199
	B+	Z1	W3006	042	24		23-42-11	165-199
	B-	Z1	W3006	043	24		23-42-11	167-199
	= A+	Z1	W3006	042	24		23-42-11	165-166
	= B+	Z1	W3006	043	24		23-42-11	165-166
B00420		0260/279/L012		CHIME				050-099, 162-199
	H/L	C	W3008	021	22		23-42-11	050-099, 162-199
	28V	C	W3008	023	22		23-42-11	050-099, 162-199
	GND	C	W3008	022	20		23-42-11	050-099, 162-199
B00421		0786/197/R060		HEATER TAPE-DRAIN LINE				050-099
	= G		W1258	D-J			30-71-22	050-099
	= P		W1258	D-I			30-71-22	050-099
B00422		1072/180/L060		HEATER TAPE-DRAIN LINE				050-099
	= G		W1258	D-L			30-71-22	050-099
	= P		W1258	D-K			30-71-22	050-099

HOOKUP LIST

D280T132

91-21-51

Section B00400

Page 2

Jan 21/2005



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
B00423		1097/188/L072		HEATER TAPE-DRAIN LINE				050-099
	=G		W1258	D-N			30-71-22	050-099
	=P		W1258	D-M			30-71-22	050-099
B00424		1097/175/L072		HEATER TAPE-WATER SUPPLY LINE				050-099
	=G		W1258	D-P			30-71-22	050-099
	=P		W1258	D-O			30-71-22	050-099
B00425		1300/164/L072		HEATER TAPE-WATER SUPPLY LINE				277-299
	=G		W1258	D-S			30-71-23	277-299
	=P		W1258	D-R			30-71-23	277-299
B00480		1390/121/R020		THERMO-CONT,WATER FILL LINE (SB 30-0024)				ALL
	=G		W1366	A-D			30-71-23	ALL
	=P		W1366	A-C			30-71-23	ALL

HOOKUP LIST

D280T132

91-21-51

Section B00400

Page 3 End

Jan 21/2005



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
B09009		412 E90-/90/		CTU COOLING FAN				150, 152-199
	LUG	E	W9077	981	20		23-19-11	150, 152-199
	LUG	E	W9077	983	20		23-19-11	150, 152-199

HOOKUP LIST

D280T132

91-21-51

Section B09000

Page 1 End

Jan 21/2005



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C00001		P011-01/ /A011		CB-AIR DATA AOA SENSOR,L				ALL
	1	D	W0044	080	22		34-12-11	ALL
	2	D	W0044	079	22		34-12-11	ALL
C00002		P011-01/ /A012		CB-AIR DATA BARO CORRECTION,L				ALL
	2	D	W0044	078	22		34-12-11	ALL
C00003		P011-04/ /F031		CB-AIR DATA AOA SENSOR,R				ALL
	1	D	W0042	081	22		34-12-21	ALL
	2	D	W0042	083	22		34-12-21	ALL
C00004		P011-04/ /F032		CB-AIR DATA BARO CORRECTION,R				ALL
	1	D	W0042	082	22		34-12-21	ALL
C00005		P006-05/ /H028		CB-APU HOURMETER				ALL
	1	D	W0156	176	24		49-72-11	ALL
	2	D	W0156	175	24		49-72-11	ALL
	DED		W0156	175Z			49-72-11	ALL
	DED		W0156	176Z			49-72-11	ALL
C00010		P035-00/ /B010		CB-DRIVE CONTROL				150-199, 275-299
	1	D	W1066	34A	22		25-53-14	150-199, 275-299
	2	D	W1066	32A	20		25-53-11	150-199, 275-299
C00011		P039-00/ /B010		CB-DRIVE CONTROL				150-199, 275-299
	1	D	W1068	32B	22		25-53-24	150-199, 275-299
	2	D	W1068	32A	20		25-53-21	150-199, 275-299
C00012		P035-00/ /D008		CB-FWD CARGO EXT LT				ALL
	1	D	W1066	075	20		33-31-61	ALL
	2	D	W1066	060	16		33-31-61	ALL
C00015		P035-00/ /D009		CB-FWD CARGO EXT LIGHTS				ALL
	1	D	W1066	057	20		33-31-61	ALL
	2	D	W1066	170	08		25-53-11	050-099
	2	D	W1066	007	08		25-53-11	150-199, 275-299
C00016		P035-00/ /D006		CB-FWD CAR. DR LTS				ALL
	1	D	W1066	061	20		33-31-61	ALL

HOOKUP LIST

D280T132

91-21-51

Section C00000

Page 1

Jan 21/2005



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C00017		P039-00/ /D006		CB-AFT CAR. DR LTS				ALL
	1	D	W1068	061	20		33-31-61	ALL
	2	D	W1068	060	16		33-31-61	ALL
C00018		P035-00/ /D007		CB-FWD CAR. EXT LT				ALL
	1	D	W1066	063	20		33-31-61	ALL
C00019		P039-00/ /D007		CB-AFT CAR. EXT LT				ALL
	1	D	W1068	063	20		33-31-61	ALL
C00020		P049-00/ /C003		CB-APU START				ALL
	1	D	W1050	037	16		49-61-11	ALL
	2	D	W1050	028	22		49-61-11	ALL
C00021		P035-00/ /D003		CB-FWD A CARGO COMPT LTS				ALL
	1	D	W1066	053	18		33-37-11	050-099
	1	D	W1066	053	16		33-37-11	150-199, 275-299
	2	D	W1066	052	12		33-37-11	ALL
C00022		P035-00/ /D004		CB-FWD B CARGO COMPT LTS				ALL
	1	D	W1066	054	18		33-37-11	050-099
	1	D	W1066	054	16		33-37-11	150-199, 275-299
C00023		P035-00/ /D005		CB-FWD CARGO DOOR LT				ALL
	1	D	W1066	055	20		33-37-11	050-099
	1	D	W1066	055	18		33-37-11	150-199, 275-299
C00024		P039-00/ /D008		CB-BULK CARGO EXT LIGHTS				050-099, 150-199
	1	D	W1068	064	20		33-31-61	050-099, 150-199
C00025		P039-00/ /D009		CB-AFT CARGO EXT LIGHTS				ALL
	1	D	W1068	057	20		33-31-61	ALL
	2	D	W1068	007	08		25-53-21	ALL
C00036		P039-00/ /C002		CB-PDU 1L/6L				050-099
	A1	D	W1068	011	12		25-53-21	050-099
	A1	D	W1068	012	12		25-53-21	050-099
	A2	D	W1068	301B	20		25-53-22	050-099
	B1	D	W1068	021	12		25-53-21	050-099
	B1	D	W1068	022	12		25-53-21	050-099

HOOKUP LIST

D280T132

91-21-51

Section C00000

Page 2

Jan 21/2005



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C00036		P039-00/ /C002		CB-PDU 1L/6L (continued)				050-099
	B2	D	W1068	301R	20		25-53-22	050-099
	C1	D	W1068	031	12		25-53-21	050-099
	C1	D	W1068	032	12		25-53-21	050-099
	C2	D	W1068	301Y	20		25-53-22	050-099
C00037		P039-00/ /C004		CB-PDU 2L/4L/8L				050-099
	A1	D	W1068	012	12		25-53-21	050-099
	A1	D	W1068	013	12		25-53-21	050-099
	A2	D	W1068	302B	20		25-53-22	050-099
	B1	D	W1068	022	12		25-53-21	050-099
	B1	D	W1068	023	12		25-53-21	050-099
	B2	D	W1068	302R	20		25-53-22	050-099
	C1	D	W1068	032	12		25-53-21	050-099
	C1	D	W1068	033	12		25-53-21	050-099
	C2	D	W1068	302Y	20		25-53-22	050-099
C00038		P039-00/ /C006		CB-PDU 3L/5L				050-099
	A1	D	W1068	013	12		25-53-21	050-099
	A1	D	W1068	014	12		25-53-21	050-099
	A2	D	W1068	303B	20		25-53-22	050-099
	B1	D	W1068	023	12		25-53-21	050-099
	B1	D	W1068	024	12		25-53-21	050-099
	B2	D	W1068	303R	20		25-53-22	050-099
	C1	D	W1068	033	12		25-53-21	050-099
	C1	D	W1068	034	12		25-53-21	050-099
	C2	D	W1068	303Y	20		25-53-22	050-099
C00039		P039-00/ /C009		CB-PDU 7L/9L				050-099
	A1	D	W1068	014	12		25-53-21	050-099
	A2	D	W1068	304B	20		25-53-22	050-099
	B1	D	W1068	024	12		25-53-21	050-099
	B2	D	W1068	304R	20		25-53-22	050-099
	C1	D	W1068	034	12		25-53-21	050-099
	C2	D	W1068	304Y	20		25-53-22	050-099
C00040		P039-00/ /B002		CB-PDU 1R/6R				050-099
	A1	D	W1068	305B	20		25-53-22	050-099
	A2	D	W1068	015	12		25-53-21	050-099
	A2	D	W1068	016	12		25-53-21	050-099
	B1	D	W1068	305R	20		25-53-22	050-099

HOOKUP LIST

D280T132

91-21-51

Section C00000

Page 3

Jan 21/2005



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C00040		P039-00/ /B002		CB-PDU 1R/6R (continued)				050-099
	B2	D	W1068	025	12		25-53-21	050-099
	B2	D	W1068	026	12		25-53-21	050-099
	C1	D	W1068	305Y	20		25-53-22	050-099
	C2	D	W1068	035	12		25-53-21	050-099
	C2	D	W1068	036	12		25-53-21	050-099
C00041		P039-00/ /B004		CB-PDU 2R/4R/8R				050-099
	A1	D	W1068	306B	20		25-53-22	050-099
	A2	D	W1068	016	12		25-53-21	050-099
	A2	D	W1068	017	12		25-53-21	050-099
	B1	D	W1068	306R	20		25-53-22	050-099
	B2	D	W1068	026	12		25-53-21	050-099
	B2	D	W1068	027	12		25-53-21	050-099
	C1	D	W1068	306Y	20		25-53-22	050-099
	C2	D	W1068	036	12		25-53-21	050-099
	C2	D	W1068	037	12		25-53-21	050-099
C00042		P039-00/ /B006		CB-PDU 3R/5R/6C				050-099
	A1	D	W1068	307B	20		25-53-22	050-099
	A2	D	W1068	017	12		25-53-21	050-099
	A2	D	W1068	018	12		25-53-21	050-099
	B1	D	W1068	307R	20		25-53-22	050-099
	B2	D	W1068	027	12		25-53-21	050-099
	B2	D	W1068	028	12		25-53-21	050-099
	C1	D	W1068	307Y	20		25-53-22	050-099
	C2	D	W1068	037	12		25-53-21	050-099
	C2	D	W1068	038	12		25-53-21	050-099
C00043		P039-00/ /B008		CB-PDU 7R/9R				050-099
	A1	D	W1068	308B	20		25-53-22	050-099
	A2	D	W1068	018	12		25-53-21	050-099
	B1	D	W1068	308R	20		25-53-22	050-099
	B2	D	W1068	028	12		25-53-21	050-099
	C1	D	W1068	308Y	20		25-53-22	050-099
	C2	D	W1068	038	12		25-53-21	050-099
C00045		P035-00/ /D002		CB-LAT GUIDES				ALL
	1	D	W1066	38B	22		25-53-15	ALL

HOOKUP LIST

D280T132

91-21-51

Section C00000

Page 4

Jan 21/2005



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C00046		P039-00/ /D002		CB-ACTR,LAT GUIDES				ALL
	1	D	W1068	38B	22		25-53-25	ALL
C00049		P035-00/ /D001		CB-ROLLOUT STOPS/CTR GUIDES				ALL
	1	D	W1066	39B	22		25-53-16	ALL
	2	D	W1066	008	12		25-53-11	ALL
C00050		P039-00/ /D001		CB-ACTR,ROLLOUT STOPS/CTR GUIDES				050-099, 150-199
	1	D	W1068	39B	22		25-53-26	050-099, 150-199
	2	D	W1068	008	12		25-53-21	050-099, 150-199
C00053		P035-00/ /A006		CB-LEFT PDU/GUIDES				ALL
	A1	D	W1066	004	08		25-53-11	ALL
	A2	D	W1066	011	12		25-53-11	ALL
	B1	D	W1066	005	08		25-53-11	ALL
	B2	D	W1066	008	12		25-53-11	ALL
	B2	D	W1066	021	12		25-53-11	ALL
	C1	D	W1066	006	08		25-53-11	ALL
	C2	D	W1066	031	12		25-53-11	ALL
C00054		P035-00/ /A009		CB-RIGHT PDU				ALL
	A1	LA	W1066	001	08		25-53-11	ALL
	A1	LA	W1066	004	08		25-53-11	ALL
	A2	D	W1066	015	12		25-53-11	ALL
	B1	LA	W1066	002	08		25-53-11	ALL
	B1	LA	W1066	005	08		25-53-11	ALL
	B2	D	W1066	025	12		25-53-11	ALL
	C1	LA	W1066	003	08		25-53-11	ALL
	C1	LA	W1066	006	08		25-53-11	ALL
	C2	D	W1066	035	12		25-53-11	ALL
C00055		P039-00/ /A006		CB-LEFT PDU/GUIDES				ALL
	A1	D	W1068	004	08		25-53-21	ALL
	A2	D	W1068	011	12		25-53-21	ALL
	B1	D	W1068	005	08		25-53-21	ALL
	B2	D	W1068	008	12		25-53-21	ALL
	B2	D	W1068	021	12		25-53-21	ALL
	C1	D	W1068	006	08		25-53-21	ALL
	C2	D	W1068	031	12		25-53-21	ALL

HOOKUP LIST

D280T132

91-21-51

Section C00000

Page 5

Jan 21/2005



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C00056		P039-00/ /A009		CB-RIGHT PDU				ALL
	A1	LA	W1068	001	08		25-53-21	ALL
	A1	LA	W1068	004	08		25-53-21	ALL
	A2	D	W1068	015	12		25-53-21	ALL
	B1	LA	W1068	002	08		25-53-21	ALL
	B1	LA	W1068	005	08		25-53-21	ALL
	B2	D	W1068	025	12		25-53-21	ALL
	C1	LA	W1068	003	08		25-53-21	ALL
	C1	LA	W1068	006	08		25-53-21	ALL
	C2	D	W1068	035	12		25-53-21	ALL
C00060		P035-00/ /A001		CB-BLOWER 1 SMOKE DET FWD CAR.				ALL
	1	D	W1066	183	20		26-16-21	ALL
	2	D	W1066	181	20		26-16-21	ALL
C00061		P035-00/ /A002		CB-BLOWER 2 SMOKE DET FWD CAR.				ALL
	1	D	W1066	184	20		26-16-21	ALL
	2	D	W1066	182	20		26-16-21	ALL
C00062		P035-00/ /A003		CB-BLOWER 1 SMOKE DET AFT CAR.				ALL
	1	D	W1066	193	20		26-16-21	ALL
	2	D	W1066	191	20		26-16-21	ALL
C00063		P035-00/ /A004		CB-BLOWER 2 SMOKE DET AFT CAR.				ALL
	1	D	W1066	194	20		26-16-21	ALL
	2	D	W1066	192	20		26-16-21	ALL
C00064		P039-00/ /D005		CB-AFT CARGO DOOR LT				ALL
	1	D	W1068	055	20		33-37-21	050-099
	1	D	W1068	055	18		33-37-21	150-199, 275-299
C00065		P039-00/ /D003		CB-AFT A CARGO COMPT LTS				ALL
	1	D	W1068	053	18		33-37-21	050-099
	1	D	W1068	053	16		33-37-21	150-199, 275-299
	2	D	W1068	052	12		33-37-21	ALL
C00066		P039-00/ /D004		CB-AFT B CARGO COMPT LTS				ALL
	1	D	W1068	054	18		33-37-21	050-099
	1	D	W1068	054	16		33-37-21	150-199, 275-299

HOOKUP LIST

D280T132

91-21-51

Section C00000

Page 6

Jan 21/2005



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C00070		P036-00/ /E005		CB-L TANK DEFUEL VALVE				ALL
	1	D	W0056	035	20		28-26-11	ALL
	2	D	W0056	032	18		28-26-11	ALL
C00071		P036-00/ /E006		CB-R TANK DEFUEL VALVE				ALL
	1	D	W0056	036	20		28-26-11	ALL
C00075		P039-00/ /C010		CB-CONTROL SWITCH				ALL
	1	D	W1068	877	22		25-53-21	050-099
	1	D	W1068	180	22		25-53-25	ALL
	1	D	W1068	511	22		25-53-21	ALL
	1	D	W1068	887	22		25-53-21	150-199, 275-299
	2	D	W1068	868	20		25-53-21	ALL
C00076		P035-00/ /C010		CB-CONTROL SWITCH				ALL
	1	D	W1066	511	22		25-53-11	050-099
	1	D	W1066	195	22		25-53-15	ALL
	1	D	W1066	893	22		25-53-11	ALL
	1	D	W1066	511	20		25-53-11	150-199, 275-299
	2	D	W1066	868	20		25-53-11	ALL
C00077		P035-00/ /D010		CB-CONTROL SWITCH				ALL
	1	D	W1066	870	22		25-53-14	ALL
	2	D	W1066	869	20		25-53-11	ALL
C00078		P039-00/ /D010		CB-DRIVE CONTROL				ALL
	1	D	W1068	870	22		25-53-24	ALL
	2	D	W1068	869	20		25-53-21	ALL
C00080								275-299
	1	D	W1068	39B	22		25-53-26	275-299
	2	D	W1068	008	12		25-53-21	275-299
C00081		P035-00/ /B002		CB-PDU 1R/8R/11R				050-099
	A1	D	W1066	305B	20		25-53-12	050-099
	A2	D	W1066	015	12		25-53-11	050-099
	A2	D	W1066	016	12		25-53-11	050-099
	B1	D	W1066	305R	20		25-53-12	050-099
	B2	D	W1066	025	12		25-53-11	050-099
	B2	D	W1066	026	12		25-53-11	050-099

HOOKUP LIST

D280T132

91-21-51

Section C00000

Page 7

Jan 21/2005



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C00081		P035-00/ /B002		CB-PDU 1R/8R/11R (continued)				050-099
	C1	D	W1066	305Y	20		25-53-12	050-099
	C2	D	W1066	035	12		25-53-11	050-099
	C2	D	W1066	036	12		25-53-11	050-099
C00082		P035-00/ /B004		CB-PDU 2R/6R/10R				050-099
	A1	D	W1066	306B	20		25-53-12	050-099
	A2	D	W1066	016	12		25-53-11	050-099
	A2	D	W1066	017	12		25-53-11	050-099
	B1	D	W1066	306R	20		25-53-12	050-099
	B2	D	W1066	026	12		25-53-11	050-099
	B2	D	W1066	027	12		25-53-11	050-099
	C1	D	W1066	306Y	20		25-53-12	050-099
	C2	D	W1066	036	12		25-53-11	050-099
	C2	D	W1066	037	12		25-53-11	050-099
C00083		P035-00/ /B006		CB-PDU 3R/5R/9R				050-099
	A1	D	W1066	307B	20		25-53-12	050-099
	A2	D	W1066	017	12		25-53-11	050-099
	A2	D	W1066	018	12		25-53-11	050-099
	B1	D	W1066	307R	20		25-53-12	050-099
	B2	D	W1066	027	12		25-53-11	050-099
	B2	D	W1066	028	12		25-53-11	050-099
	C1	D	W1066	307Y	20		25-53-12	050-099
	C2	D	W1066	037	12		25-53-11	050-099
	C2	D	W1066	038	12		25-53-11	050-099
C00084		P035-00/ /B008		CB-PDU 4R/7R/8C				050-099
	A1	D	W1066	308B	20		25-53-12	050-099
	A2	D	W1066	018	12		25-53-11	050-099
	B1	D	W1066	308R	20		25-53-12	050-099
	B2	D	W1066	028	12		25-53-11	050-099
	C1	D	W1066	308Y	20		25-53-12	050-099
	C2	D	W1066	038	12		25-53-11	050-099
C00085		P035-00/ /C002		CB-PDU 1L/8L/11L				050-099
	A1	D	W1066	011	12		25-53-11	050-099
	A1	D	W1066	012	12		25-53-11	050-099
	A2	D	W1066	301B	20		25-53-12	050-099
	B1	D	W1066	021	12		25-53-11	050-099
	B1	D	W1066	022	12		25-53-11	050-099

HOOKUP LIST

D280T132

91-21-51

Section C00000

Page 8

Jan 21/2005



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C00085		P035-00/ /C002		CB-PDU 1L/8L/11L (continued)				050-099
	B2	D	W1066	301R	20		25-53-12	050-099
	C1	D	W1066	031	12		25-53-11	050-099
	C1	D	W1066	032	12		25-53-11	050-099
	C2	D	W1066	301Y	20		25-53-12	050-099
C00086		P035-00/ /C004		CB-PDU 2L/6L/10L				050-099
	A1	D	W1066	012	12		25-53-11	050-099
	A1	D	W1066	013	12		25-53-11	050-099
	A2	D	W1066	302B	20		25-53-12	050-099
	B1	D	W1066	022	12		25-53-11	050-099
	B1	D	W1066	023	12		25-53-11	050-099
	B2	D	W1066	302R	20		25-53-12	050-099
	C1	D	W1066	032	12		25-53-11	050-099
	C1	D	W1066	033	12		25-53-11	050-099
	C2	D	W1066	302Y	20		25-53-12	050-099
C00087		P035-00/ /C006		CB-PDU 3L/5L/9L				050-099
	A1	D	W1066	013	12		25-53-11	050-099
	A1	D	W1066	014	12		25-53-11	050-099
	A2	D	W1066	303B	20		25-53-12	050-099
	B1	D	W1066	023	12		25-53-11	050-099
	B1	D	W1066	024	12		25-53-11	050-099
	B2	D	W1066	303R	20		25-53-12	050-099
	C1	D	W1066	033	12		25-53-11	050-099
	C1	D	W1066	034	12		25-53-11	050-099
	C2	D	W1066	303Y	20		25-53-12	050-099
C00088		P035-00/ /C008		CB-PDU 4L/7L/5C				050-099
	A1	D	W1066	014	12		25-53-11	050-099
	A2	D	W1066	304B	20		25-53-12	050-099
	B1	D	W1066	024	12		25-53-11	050-099
	B2	D	W1066	304R	20		25-53-12	050-099
	C1	D	W1066	034	12		25-53-11	050-099
	C2	D	W1066	304Y	20		25-53-12	050-099
C00089		P049-00/ /D003		CB-TRU FAN				275-299
	A1	D	W1050	069	08		24-32-41	275-299
	A2	D	W1050	010	20		24-32-41	275-299
	B1	D	W1050	070	08		24-32-41	275-299
	B2	D	W1050	011	20		24-32-41	275-299

HOOKUP LIST

D280T132

91-21-51

Section C00000

Page 9

Jan 21/2005



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C00089		P049-00/ /D003		CB-TRU FAN (continued)				275-299
	C1	D	W1050	071	08		24-32-41	275-299
	C2	D	W1050	012	20		24-32-41	275-299
	C2	D	W1050	073	20		24-32-41	275-299
C00094		P036-00/ /E006		CB-FUELING PANEL LIGHT (SB 28-0031)				050-099, 150-156, 162-166, 275-276
C00094		P036-00/ /E007		CB-FUELING PANEL LIGHT				157, 167-199
C00094		P036-00/ /D002		CB-FUELING PANEL LIGHT				277-299
	1	D	W0184	095	18		28-21-11	ALL
	1	D	W0184	112	18		28-21-11	ALL
	2	D	W0184	561	18		28-21-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section C00000

Page 10 End

Jan 21/2005



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C00102		P006-05/ /L030		CB-SECONDARY IND LT,L2 PILOTS				ALL
	1	D	W0150	001	22		33-16-12	ALL
	1	D	W0150	002	22		33-16-12	ALL
	2	D	W0150	004	22		33-16-12	ALL
C00103		P006-05/ /L032		CB-SECONDARY IND LT,L3 PILOTS				ALL
	1	D	W0150	013	22		33-16-12	ALL
	2	D	W0150	008	22		33-16-12	ALL
	2	D	W0150	009	22		33-16-12	ALL
	DED		W0150	008Z			33-16-12	ALL
	DED		W0150	009Z			33-16-12	ALL
	DED		W0150	013Z			33-16-12	ALL
C00104		P006-05/ /L029		CB-SECONDARY IND LT,L PILOTS AUTOBRIGHT				ALL
	1	D	W0150	005	22		33-16-12	ALL
	2	D	W0148	015	22		33-16-12	ALL
C00106		P006-05/ /K029		CB-SECONDARY IND LT,R2 PILOTS				ALL
	1	D	W0154	004	22		33-16-12	ALL
	2	D	W0154	002	22		33-16-12	ALL
	2	D	W0154	003	22		33-16-12	ALL
C00107		P006-05/ /K032		CB-SECONDARY IND LT,R3 PILOTS				ALL
	1	D	W0154	012	22		33-16-12	ALL
	2	D	W0154	008	22		33-16-12	ALL
	2	D	W0154	011	22		33-16-12	ALL
	DED		W0154	008Z			33-16-12	ALL
	DED		W0154	011Z			33-16-12	ALL
	DED		W0154	012Z			33-16-12	ALL
C00108		P006-05/ /K028		CB-SECONDARY IND LT,R PILOTS AUTOBRIGHT				ALL
	1	D	W0148	036	22		33-16-12	ALL
	2	D	W0154	005	22		33-16-12	ALL
	DED		W0148	036Z			33-16-12	ALL
C00109		P006-05/ /J026		CB-SECONDARY IND LT,BAT.1 PILOTS				ALL
	1	D	W0156	048	22		33-16-12	ALL
	2	D	W0156	045	22		33-16-12	ALL
	2	D	W0156	046	22		33-16-12	ALL

HOOKUP LIST

D280T132

91-21-51

Section C00100

Page 1

Jan 21/2005



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C00110		P006-05/ /J029		CB-SECONDARY IND LT,BAT.2 PILOTS				ALL
	1	D	W0158	011	22		33-16-12	ALL
	1	D	W0158	014	22		33-16-12	ALL
	2	D	W0158	012	22		33-16-12	ALL
	2	D	W0158	013	22		33-16-12	ALL
	DED		W0158	011Z			33-16-12	ALL
	DED		W0158	014Z			33-16-12	ALL
C00112		P006-05/ /J031		CB-SEC IND LT,BAT. PILOTS AUTOBRIGHT				ALL
	1	D	W0158	016	22		33-16-12	ALL
	2	D	W0158	015	22		33-16-12	ALL
	DED		W0158	015Z			33-16-12	ALL
	DED		W0158	016Z			33-16-12	ALL
C00116		P006-05/ /L028		CB-SECONDARY,IND LT L1 RT SIDE PNL				ALL
	1	D	W0148	049	22		33-16-22	ALL
	1	D	W0148	051	22		33-16-22	ALL
	2	D	W0148	050	22		33-16-22	ALL
	DED		W0148	050Z			33-16-22	ALL
C00117		P006-05/ /L031		CB-SECONDARY,IND LT L2 RT SIDE PNL				ALL
	1	D	W0150	014	22		33-16-22	ALL
	2	D	W0150	015	22		33-16-22	ALL
	DED		W0150	014Z			33-16-22	ALL
C00119		P006-05/ /K027		CB-SECONDARY,IND LT R1 RT SIDE PNL				ALL
	1	D	W0152	034	22		33-16-22	ALL
	1	D	W0152	036	22		33-16-22	ALL
	2	D	W0152	035	22		33-16-22	ALL
	DED		W0152	035Z			33-16-22	ALL
C00120		P006-05/ /K030		CB-SECONDARY,IND LT R2 RT SIDE PNL				ALL
	1	D	W0154	015	22		33-16-22	ALL
	1	D	W0154	017	22		33-16-22	ALL
	2	D	W0154	016	22		33-16-22	ALL
	DED		W0154	016Z			33-16-22	ALL
C00122		P006-05/ /J027		CB-SECONDARY,IND LT BAT.1 RT SIDE PNL				ALL
	1	D	W0156	077	22		33-16-22	ALL
	1	D	W0156	080	22		33-16-22	ALL

HOOKUP LIST

D280T132

91-21-51

Section C00100

Page 2

Jan 21/2005



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C00122		P006-05/ /J027		CB-SECONDARY,IND LT BAT.1 RT SIDE PNL (continued)				ALL
	2	D	W0156	081	22		33-16-22	ALL
	2	D	W0156	082	22		33-16-22	ALL
	DED		W0156	077Z			33-16-22	ALL
	DED		W0156	080Z			33-16-22	ALL
C00123		P006-05/ /J030		CB-SECONDARY,IND LT BAT.2 RT SIDE PNL				ALL
	1	D	W0158	022	22		33-16-22	ALL
	1	D	W0158	024	22		33-16-22	ALL
	2	D	W0158	023	22		33-16-22	ALL
	DED		W0158	022Z			33-16-22	ALL
	DED		W0158	024Z			33-16-22	ALL
C00125		P006-05/ /H026		CB-BUS POWER CONTROL UNIT IND LT				ALL
	1	D	W0156	083	22		33-16-22	ALL
	2	D	W0156	069	22		33-16-22	ALL
	2	D	W0156	078	22		33-16-22	ALL
C00158		P039-00/ /B002		CB-PDU 1R/5R/10R				150-199, 275-299
	A1	D	W1068	305B	20		25-53-22	150-199, 275-299
	A2	D	W1068	015	12		25-53-21	150-199, 275-299
	A2	D	W1068	016	12		25-53-21	150-199, 275-299
	B1	D	W1068	305R	20		25-53-22	150-199, 275-299
	B2	D	W1068	025	12		25-53-21	150-199, 275-299
	B2	D	W1068	026	12		25-53-21	150-199, 275-299
	C1	D	W1068	305Y	20		25-53-22	150-199, 275-299
	C2	D	W1068	035	12		25-53-21	150-199, 275-299
	C2	D	W1068	036	12		25-53-21	150-199, 275-299
C00159		P039-00/ /B004		CB-PDU 2R/6R/12R/9C				150-199, 275-299
	A1	D	W1068	302B	20		25-53-22	150-199, 275-299
	A2	D	W1068	016	12		25-53-21	150-199, 275-299
	A2	D	W1068	017	12		25-53-21	150-199, 275-299
	B1	D	W1068	302R	20		25-53-22	150-199, 275-299
	B2	D	W1068	026	12		25-53-21	150-199, 275-299
	B2	D	W1068	027	12		25-53-21	150-199, 275-299
	C1	D	W1068	302Y	20		25-53-22	150-199, 275-299
	C2	D	W1068	036	12		25-53-21	150-199, 275-299
	C2	D	W1068	037	12		25-53-21	150-199, 275-299

HOOKUP LIST

D280T132

91-21-51

Section C00100

Page 3

Jan 21/2005



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C00160		P039-00/ /B006		CB-PDU 3R/7R/9R				150-199, 275-299
	A1	D	W1068	307B	20		25-53-22	150-199, 275-299
	A2	D	W1068	017	12		25-53-21	150-199, 275-299
	A2	D	W1068	018	12		25-53-21	150-199, 275-299
	B1	D	W1068	307R	20		25-53-22	150-199, 275-299
	B2	D	W1068	027	12		25-53-21	150-199, 275-299
	B2	D	W1068	028	12		25-53-21	150-199, 275-299
	C1	D	W1068	307Y	20		25-53-22	150-199, 275-299
	C2	D	W1068	037	12		25-53-21	150-199, 275-299
	C2	D	W1068	038	12		25-53-21	150-199, 275-299
C00161		P039-00/ /B009		CB-PDU 4R/8R/11R				150-199, 275-299
	A1	D	W1068	340B	20		25-53-22	150-199, 275-299
	A2	D	W1068	018	12		25-53-21	150-199, 275-299
	B1	D	W1068	340R	20		25-53-22	150-199, 275-299
	B2	D	W1068	028	12		25-53-21	150-199, 275-299
	C1	D	W1068	340Y	20		25-53-22	150-199, 275-299
	C2	D	W1068	038	12		25-53-21	150-199, 275-299
C00162		P039-00/ /D002		CB-PDU 1L/5L/10L				150-199, 275-299
	A1	D	W1068	011	12		25-53-21	150-199, 275-299
	A1	D	W1068	012	12		25-53-21	150-199, 275-299
	A2	D	W1068	301B	20		25-53-22	150-199, 275-299
	B1	D	W1068	021	12		25-53-21	150-199, 275-299
	B1	D	W1068	022	12		25-53-21	150-199, 275-299
	B2	D	W1068	301R	20		25-53-22	150-199, 275-299
	C1	D	W1068	031	12		25-53-21	150-199, 275-299
	C1	D	W1068	032	12		25-53-21	150-199, 275-299
	C2	D	W1068	301Y	20		25-53-22	150-199, 275-299
C00163		P039-00/ /C004		CB-PDU 2L/6L/12L				150-199, 275-299
	A1	D	W1068	012	12		25-53-21	150-199, 275-299
	A1	D	W1068	013	12		25-53-21	150-199, 275-299
	A2	D	W1068	306B	20		25-53-22	150-199, 275-299
	B1	D	W1068	022	12		25-53-21	150-199, 275-299
	B1	D	W1068	023	12		25-53-21	150-199, 275-299
	B2	D	W1068	306R	20		25-53-22	150-199, 275-299
	C1	D	W1068	032	12		25-53-21	150-199, 275-299
	C1	D	W1068	033	12		25-53-21	150-199, 275-299
	C2	D	W1068	306Y	20		25-53-22	150-199, 275-299

HOOKUP LIST

D280T132

91-21-51

Section C00100

Page 4

Jan 21/2005



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C00164		P039-00/ /D006		CB-PDU 3L/7L/9L				150-199, 275-299
	A1	D	W1068	013	12		25-53-21	150-199, 275-299
	A1	D	W1068	014	12		25-53-21	150-199, 275-299
	A2	D	W1068	304B	20		25-53-22	150-199, 275-299
	B1	D	W1068	023	12		25-53-21	150-199, 275-299
	B1	D	W1068	024	12		25-53-21	150-199, 275-299
	B2	D	W1068	304R	20		25-53-22	150-199, 275-299
	C1	D	W1068	033	12		25-53-21	150-199, 275-299
	C1	D	W1068	034	12		25-53-21	150-199, 275-299
	C2	D	W1068	304Y	20		25-53-22	150-199, 275-299
C00165		P039-00/ /D009		CB-PDU 4L/8L/11L				150-199, 275-299
	A1	D	W1068	014	12		25-53-21	150-199, 275-299
	A2	D	W1068	341B	20		25-53-22	150-199, 275-299
	B1	D	W1068	024	12		25-53-21	150-199, 275-299
	B2	D	W1068	341R	20		25-53-22	150-199, 275-299
	C1	D	W1068	034	12		25-53-21	150-199, 275-299
	C2	D	W1068	341Y	20		25-53-22	150-199, 275-299
C00166		P035-00/ /B002		CB-PDU 1R/4R/7R/13R				150-199, 275-299
	A1	D	W1066	305B	20		25-53-12	150-199, 275-299
	A2	D	W1066	015	12		25-53-11	150-199, 275-299
	A2	D	W1066	016	12		25-53-11	150-199, 275-299
	B1	D	W1066	305R	20		25-53-12	150-199, 275-299
	B2	D	W1066	025	12		25-53-11	150-199, 275-299
	B2	D	W1066	026	12		25-53-11	150-199, 275-299
	C1	D	W1066	305Y	20		25-53-12	150-199, 275-299
	C2	D	W1066	035	12		25-53-11	150-199, 275-299
	C2	D	W1066	036	12		25-53-11	150-199, 275-299
C00167		P035-00/ /B004		CB-PDU 2R/8R/10R/14R				150-199, 275-299
	A1	D	W1066	306B	20		25-53-12	150-199, 275-299
	A2	D	W1066	016	12		25-53-11	150-199, 275-299
	A2	D	W1066	017	12		25-53-11	150-199, 275-299
	B1	D	W1066	306R	20		25-53-12	150-199, 275-299
	B2	D	W1066	026	12		25-53-11	150-199, 275-299
	B2	D	W1066	027	12		25-53-11	150-199, 275-299
	C1	D	W1066	306Y	20		25-53-12	150-199, 275-299
	C2	D	W1066	036	12		25-53-11	150-199, 275-299
	C2	D	W1066	037	12		25-53-11	150-199, 275-299

HOOKUP LIST

D280T132

91-21-51

Section C00100

Page 5

Jan 21/2005



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C00168		P035-00/ /B006		CB-PDU 3R/5R/6R/11R				150-199, 275-299
	A1	D	W1066	307B	20		25-53-12	150-199, 275-299
	A2	D	W1066	017	12		25-53-11	150-199, 275-299
	A2	D	W1066	018	12		25-53-11	150-199, 275-299
	B1	D	W1066	307R	20		25-53-12	150-199, 275-299
	B2	D	W1066	027	12		25-53-11	150-199, 275-299
	B2	D	W1066	028	12		25-53-11	150-199, 275-299
	C1	D	W1066	307Y	20		25-53-12	150-199, 275-299
	C2	D	W1066	037	12		25-53-11	150-199, 275-299
	C2	D	W1066	038	12		25-53-11	150-199, 275-299
C00169		P035-00/ /B009		CB-PDU 5C/9R/12R				150-199, 275-299
	A1	D	W1066	308B	20		25-53-12	150-199, 275-299
	A2	D	W1066	018	12		25-53-11	150-199, 275-299
	B1	D	W1066	308R	20		25-53-12	150-199, 275-299
	B2	D	W1066	028	12		25-53-11	150-199, 275-299
	C1	D	W1066	308Y	20		25-53-12	150-199, 275-299
	C2	D	W1066	038	12		25-53-11	150-199, 275-299
C00170		P035-00/ /C002		CB-PDU 1L/4L/7L/13L				150-199, 275-299
	A1	D	W1066	011	12		25-53-11	150-199, 275-299
	A1	D	W1066	012	12		25-53-11	150-199, 275-299
	A2	D	W1066	301B	20		25-53-12	150-199, 275-299
	B1	D	W1066	021	12		25-53-11	150-199, 275-299
	B1	D	W1066	022	12		25-53-11	150-199, 275-299
	B2	D	W1066	301R	20		25-53-12	150-199, 275-299
	C1	D	W1066	031	12		25-53-11	150-199, 275-299
	C1	D	W1066	032	12		25-53-11	150-199, 275-299
	C2	D	W1066	301Y	20		25-53-12	150-199, 275-299
C00171		P035-00/ /C004		CB-PDU 2L/8L/10L/14L				150-199, 275-299
	A1	D	W1066	012	12		25-53-11	150-199, 275-299
	A1	D	W1066	013	12		25-53-11	150-199, 275-299
	A2	D	W1066	302B	20		25-53-12	150-199, 275-299
	B1	D	W1066	022	12		25-53-11	150-199, 275-299
	B1	D	W1066	023	12		25-53-11	150-199, 275-299
	B2	D	W1066	302R	20		25-53-12	150-199, 275-299
	C1	D	W1066	032	12		25-53-11	150-199, 275-299
	C1	D	W1066	033	12		25-53-11	150-199, 275-299
	C2	D	W1066	302Y	20		25-53-12	150-199, 275-299

HOOKUP LIST

D280T132

91-21-51

Section C00100

Page 6

Jan 21/2005



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C00172		P035-00/ /C006		CB-PDU 3L/5L/6L/11L				150-199, 275-299
	A1	D	W1066	013	12		25-53-11	150-199, 275-299
	A1	D	W1066	014	12		25-53-11	150-199, 275-299
	A2	D	W1066	304B	20		25-53-12	150-199, 275-299
	B1	D	W1066	023	12		25-53-11	150-199, 275-299
	B1	D	W1066	024	12		25-53-11	150-199, 275-299
	B2	D	W1066	304R	20		25-53-12	150-199, 275-299
	C1	D	W1066	033	12		25-53-11	150-199, 275-299
	C1	D	W1066	034	12		25-53-11	150-199, 275-299
	C2	D	W1066	304Y	20		25-53-12	150-199, 275-299
C00173		P035-00/ /C009		CB-PDU 8C/9L/12L				150-199, 275-299
	A1	D	W1066	014	12		25-53-11	150-199, 275-299
	A2	D	W1066	303B	20		25-53-12	150-199, 275-299
	B1	D	W1066	024	12		25-53-11	150-199, 275-299
	B2	D	W1066	303R	20		25-53-12	150-199, 275-299
	C1	D	W1066	034	12		25-53-11	150-199, 275-299
	C2	D	W1066	303Y	20		25-53-12	150-199, 275-299

HOOKUP LIST

D280T132

91-21-51

Section C00100

Page 7 End

Jan 21/2005



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C00301		P033-00/ /E002		CB-MAIN BAT. CHGR				ALL
	A1	D	W0052	001	20		24-31-11	ALL
	A2	M	W0138	006	12		24-51-52	ALL
	A2	M	W0138	007	12		24-51-52	ALL
	B1	D	W0052	002	20		24-31-11	ALL
	B2	M	W0138	020	12		24-51-52	ALL
	B2	M	W0138	021	12		24-51-52	ALL
	C1	D	W0052	003	20		24-31-11	ALL
	C2	M	W0138	033	12		24-51-52	ALL
	C2	M	W0138	034	12		24-51-52	ALL
C00302		P033-00/ /E005		CB-CHARGER,APU BAT.				ALL
	A1	D	W0052	004	18		24-31-41	ALL
	A2	M	W0138	007	12		24-51-52	ALL
	A2	M	W0138	008	12		24-51-52	ALL
	B1	D	W0052	005	18		24-31-41	ALL
	B2	M	W0138	021	12		24-51-52	ALL
	B2	M	W0138	022	12		24-51-52	ALL
	C1	D	W0052	006	18		24-31-41	ALL
	C2	M	W0138	034	12		24-51-52	ALL
	C2	M	W0138	035	12		24-51-52	ALL
C00303		P032-00/ /		CB-TRU APU START				275-299
	A1	M	W1018	019	04		24-21-21	275-299
	A1	M	W1018	031	04		24-21-21	275-299
	A2	D	W1020	017	08		24-32-41	275-299
	B1	M	W1018	020	04		24-21-21	275-299
	B1	M	W1018	032	04		24-21-21	275-299
	B2	D	W1020	018	08		24-32-41	275-299
	C1	M	W1018	021	04		24-21-21	275-299
	C1	M	W1018	033	04		24-21-21	275-299
	C2	D	W1020	019	08		24-32-41	275-299
C00304		P034-00/ /M003		CB-GND HDLG TRU				ALL
	A1	M	W1012	016	12		24-51-61	ALL
	A1	M	W1012	017	12		24-51-61	050-099, 275-299
	A1	M	W1012	019	12		24-51-61	150-199
	A2	D	W1012	001	22		24-54-61	ALL
	B1	M	W1012	029	12		24-51-61	ALL
	B1	M	W1012	028	12		24-51-61	050-099, 275-299
	B1	M	W1012	026	12		24-51-61	150-199

HOOKUP LIST

D280T132

91-21-51

Section C00300

Page 1

Jan 21/2005



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C00304		P034-00/ /M003		CB-GND HDLG TRU (continued)				ALL
	B2	D	W1012	002	22		24-54-61	ALL
	C1	M	W1012	030	12		24-51-61	ALL
	C1	M	W1012	031	12		24-51-61	050-099, 275-299
	C1	M	W1012	033	12		24-51-61	150-199
	C2	D	W1012	003	22		24-54-61	ALL
C00306		P034-00/ /C010		CB-EXT PWR GND SVCE BUS				ALL
	A1	D	W1006	004	08		24-51-52	ALL
	A2	D	W1008	004	08		24-51-52	ALL
	B1	D	W1006	005	08		24-51-52	ALL
	B2	D	W1008	005	08		24-51-52	ALL
	C1	D	W1006	006	08		24-51-52	ALL
	C2	D	W1008	006	08		24-51-52	ALL
C00307		P006-04/ /A024		CB-115V AC BUS RIGHT SECT 2				ALL
	A1	LA	W1028	010	08		24-51-21	ALL
	A1	LA	W1028	013	08		24-51-21	ALL
	A2	D	W1030	008	16		24-51-21	ALL
	B1	LA	W1028	011	08		24-51-21	ALL
	B1	LA	W1028	014	08		24-51-21	ALL
	B2	D	W1030	009	16		24-51-21	ALL
	C1	LA	W1028	012	08		24-51-21	ALL
	C1	LA	W1028	015	08		24-51-21	ALL
	C2	D	W1030	010	16		24-51-21	ALL
C00308		P006-03/ /A018		CB-115V AC BUS LEFT SECT 2				ALL
	A1	LA	W1024	001	08		24-51-11	ALL
	A1	LA	W1024	007	08		24-51-11	ALL
	A2	D	W1026	007	16		24-51-11	ALL
	B1	LA	W1024	002	08		24-51-11	ALL
	B1	LA	W1024	008	08		24-51-11	ALL
	B2	D	W1026	008	16		24-51-11	ALL
	C1	LA	W1024	003	08		24-51-11	ALL
	C1	LA	W1024	009	08		24-51-11	ALL
	C2	D	W1026	009	16		24-51-11	ALL
C00309		P034-00/ /B019		CB-115V AC GND HDLG BUS				ALL
	A1	N2	W1010	001	06		24-51-61	ALL
	A1	N2	W1010	004	06		24-51-61	ALL
	A2	M	W1012	038	12		24-51-61	ALL

HOOKUP LIST

D280T132

91-21-51

Section C00300

Page 2

Jan 21/2005



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C00309		P034-00/ /B019		CB-115V AC GND HDLG BUS (continued)				ALL
	B1	N2	W1010	002	06		24-51-61	ALL
	B1	N2	W1010	005	06		24-51-61	ALL
	B2	M	W1012	039	12		24-51-61	ALL
	C1	N2	W1010	003	06		24-51-61	ALL
	C1	N2	W1010	006	06		24-51-61	ALL
	C2	M	W1012	040	12		24-51-61	ALL
C00310		P031-00/ /		CB-115V AC BUS LEFT SECT 4				ALL
	A1	M	W1014	004	04		24-21-11	ALL
	A1	M	W1014	016	04		24-21-11	ALL
	A2	D	W1016	004	08		24-51-12	ALL
	B1	M	W1014	005	04		24-21-11	ALL
	B1	M	W1014	017	04		24-21-11	ALL
	B2	D	W1016	005	08		24-51-12	ALL
	C1	M	W1014	006	04		24-21-11	ALL
	C1	M	W1014	018	04		24-21-11	ALL
	C2	D	W1016	006	08		24-51-12	ALL
C00311		P031-00/ /		CB-UTILITY BUS LEFT				ALL
	A1	M	W1014	013	04		24-21-11	ALL
	A1	M	W1014	016	04		24-21-11	ALL
	A2	D	W1016	001	08		24-51-13	ALL
	B1	M	W1014	014	04		24-21-11	ALL
	B1	M	W1014	017	04		24-21-11	ALL
	B2	D	W1016	002	08		24-51-13	ALL
	C1	M	W1014	015	04		24-21-11	ALL
	C1	M	W1014	018	04		24-21-11	ALL
	C2	D	W1016	003	08		24-51-13	ALL
C00312		P006-03/ /C018		CB-TRU,LEFT				ALL
	A1	D	W1026	001	14		24-32-11	ALL
	A2	LA	W1024	007	08		24-51-11	050-099
	A2	LA	W1024	010	08		24-51-11	050-099
	A2	D	W1024	007	08		24-51-11	150-199, 275-299
	A2	D	W1024	010	12		24-51-11	150-199, 275-299
	B1	D	W1026	002	14		24-32-11	ALL
	B2	LA	W1024	008	08		24-51-11	050-099
	B2	LA	W1024	011	08		24-51-11	050-099
	B2	D	W1024	008	08		24-51-11	150-199, 275-299
	B2	D	W1024	011	12		24-51-11	150-199, 275-299

HOOKUP LIST

D280T132

91-21-51

Section C00300

Page 3

Jan 21/2005



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C00312		P006-03/ /C018		CB-TRU,LEFT (continued)				ALL
	C1	D	W1026	003	14		24-32-11	ALL
	C2	LA	W1024	009	08		24-51-11	050-099
	C2	LA	W1024	012	08		24-51-11	050-099
	C2	D	W1024	009	08		24-51-11	150-199, 275-299
	C2	D	W1024	012	12		24-51-11	150-199, 275-299
C00313		P006-03/ /C015		CB-115V AC BUS LEFT SECT 1				ALL
	A1	D	W1026	004	12		24-51-11	ALL
	A1	D	W1026	024	12		24-51-11	ALL
	A2	D	W1024	010	08		24-51-11	050-099
	A2	D	W1024	010	12		24-51-11	150-199, 275-299
	B1	D	W1026	005	12		24-51-11	ALL
	B1	D	W1026	025	12		24-51-11	ALL
	B2	D	W1024	011	08		24-51-11	050-099
	B2	D	W1024	011	12		24-51-11	150-199, 275-299
	C1	D	W1026	006	12		24-51-11	ALL
	C1	D	W1026	026	12		24-51-11	ALL
	C2	D	W1024	012	08		24-51-11	050-099
	C2	D	W1024	012	12		24-51-11	150-199, 275-299
C00314		P006-04/ /L024		CB-PASS. SERVICE OUTLETS				ALL
	A1	D	W1030	032	18		25-29-11	ALL
	A2	D	W1030	026	12		24-51-52	ALL
	A2	D	W1030	029	12		24-51-52	ALL
	B1	D	W1030	033	18		25-29-11	ALL
	B2	D	W1030	027	12		24-51-52	ALL
	B2	D	W1030	030	12		24-51-52	ALL
	C1	D	W0048	031	18		25-29-11	ALL
	C2	D	W1030	028	12		24-51-52	ALL
	C2	D	W1030	031	12		24-51-52	ALL
C00315		P032-00/ /		CB-UTILITY BUS RIGHT				ALL
	A1	M	W1018	019	04		24-21-21	ALL
	A1	M	W1018	022	04		24-21-21	ALL
	A2	D	W1020	007	08		24-51-23	ALL
	B1	M	W1018	020	04		24-21-21	ALL
	B1	M	W1018	023	04		24-21-21	ALL
	B2	D	W1020	008	08		24-51-23	ALL
	C1	M	W1018	021	04		24-21-21	ALL
	C1	M	W1018	024	04		24-21-21	ALL

HOOKUP LIST

D280T132

91-21-51

Section C00300

Page 4

Jan 21/2005



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C00315		P032-00/ /		CB-UTILITY BUS RIGHT (continued)				ALL
	C2	D	W1020	009	08		24-51-23	ALL
C00316		P032-00/ /		CB-GND SVCE BUS				ALL
	A1	M	W1018	022	04		24-21-21	ALL
	A1	M	W1018	025	04		24-21-21	ALL
	A2	D	W1020	001	08		24-51-52	ALL
	B1	M	W1018	023	04		24-21-21	ALL
	B1	M	W1018	026	04		24-21-21	ALL
	B2	D	W1020	002	08		24-51-52	ALL
	C1	M	W1018	024	04		24-21-21	ALL
	C1	M	W1018	027	04		24-21-21	ALL
	C2	D	W1020	003	08		24-51-52	ALL
C00317		P032-00/ /		CB-115V AC BUS RIGHT SECT 4				ALL
	A1	M	W1018	004	04		24-21-21	ALL
	A1	M	W1018	025	04		24-21-21	ALL
	A2	D	W1020	004	08		24-51-22	ALL
	B1	M	W1018	005	04		24-21-21	ALL
	B1	M	W1018	026	04		24-21-21	ALL
	B2	D	W1020	005	08		24-51-22	ALL
	C1	M	W1018	006	04		24-21-21	ALL
	C1	M	W1018	027	04		24-21-21	ALL
	C2	D	W1020	006	08		24-51-22	ALL
C00318		P006-04/ /C024		CB-TRU,RIGHT				ALL
	A1	D	W1030	001	14		24-32-11	ALL
	A2	LA	W1028	016	08		24-51-21	ALL
	A2	LA	W1028	044	08		24-51-21	ALL
	B1	D	W1030	002	14		24-32-11	ALL
	B2	LA	W1028	017	08		24-51-21	ALL
	B2	LA	W1028	045	08		24-51-21	ALL
	C1	D	W1030	003	14		24-32-11	ALL
	C2	LA	W1028	018	08		24-51-21	ALL
	C2	LA	W1028	046	08		24-51-21	ALL
C00319		P006-04/ /C021		CB-115V AC BUS RIGHT SECT 1				ALL
	A1	D	W1030	005	12		24-51-21	ALL
	A1	D	W1030	048	12		24-51-21	ALL
	A2	D	W1028	044	08		24-51-21	ALL
	B1	D	W1030	006	12		24-51-21	ALL

HOOKUP LIST

D280T132

91-21-51

Section C00300

Page 5

Jan 21/2005



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C00319		P006-04/ /C021		CB-115V AC BUS RIGHT SECT 1 (continued)				ALL
	B1	D	W1030	049	12		24-51-21	ALL
	B2	D	W1028	045	08		24-51-21	ALL
	C1	D	W1030	007	12		24-51-21	ALL
	C1	D	W1030	050	12		24-51-21	ALL
	C2	D	W1028	046	08		24-51-21	ALL
C00320		P034-00/ /M006		CB-EXT PWR BPCU				ALL
	A1	D	W0054	036	16		24-41-11	ALL
	A2	D	W0054	030	22		24-41-11	ALL
	B1	D	W0054	037	16		24-41-11	ALL
	B1	D	W0054	040	18		24-28-11	ALL
	B2	D	W0054	032	22		24-41-11	ALL
	C1	D	W0054	038	16		24-41-11	ALL
	C2	D	W0054	033	22		24-41-11	ALL
C00321		P033-00/ /B007		CB-GND SERVICE BUS DISTR-P6 (SB 78-0062)				ALL
C00321		P033-00/ /B007		CB-GROUND SERVICE BUS DISTR-P6				ALL
	A1	M	W0138	005	10		24-51-52	ALL
	A2	D	W0052	060	12		24-51-52	ALL
	B1	M	W0138	019	10		24-51-52	ALL
	B2	D	W0052	061	12		24-51-52	ALL
	C1	M	W0138	032	10		24-51-52	ALL
	C2	D	W0052	062	12		24-51-52	ALL
C00322		P034-00/ /B016		CB-APU GND SVCE BUS				ALL
	A1	D	W1002	004	08		24-51-52	ALL
	A2	D	W1004	004	08		24-51-52	ALL
	B1	D	W1002	005	08		24-51-52	ALL
	B2	D	W1004	005	08		24-51-52	ALL
	C1	D	W1002	006	08		24-51-52	ALL
	C2	D	W1004	006	08		24-51-52	ALL
C00323		P006-04/ /D024		CB-ALT FLAP PWR				ALL
	A1	D	W1030	017	14		27-51-11	ALL
	A2	D	W1028	037	08		24-51-21	ALL
	B1	D	W1030	018	14		27-51-11	ALL
	B2	D	W1028	038	08		24-51-21	ALL
	C1	D	W1030	019	14		27-51-11	ALL
	C2	D	W1028	039	08		24-51-21	ALL

HOOKUP LIST

D280T132

91-21-51

Section C00300

Page 6

Feb 06/2009



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C00324		P006-04/ /D021		CB-ALT SLAT INBD PWR				ALL
	A1	D	W1030	023	20		27-81-11	ALL
	A2	LA	W1028	034	08		24-51-21	ALL
	A2	LA	W1028	037	08		24-51-21	ALL
	B1	D	W1030	024	20		27-81-11	ALL
	B2	LA	W1028	035	08		24-51-21	ALL
	B2	LA	W1028	038	08		24-51-21	ALL
	C1	D	W1030	025	20		27-81-11	ALL
	C2	LA	W1028	036	08		24-51-21	ALL
	C2	LA	W1028	039	08		24-51-21	ALL
C00325		P006-04/ /F024		CB-ALT SLAT OUTBD PWR				ALL
	A1	LA	W1028	028	08		24-51-21	ALL
	A1	LA	W1028	031	08		24-51-21	ALL
	A2	D	W1030	020	18		27-81-21	ALL
	B1	LA	W1028	029	08		24-51-21	ALL
	B1	LA	W1028	032	08		24-51-21	ALL
	B2	D	W1030	021	18		27-81-21	ALL
	C1	LA	W1028	030	08		24-51-21	ALL
	C1	LA	W1028	033	08		24-51-21	ALL
	C2	D	W1030	022	18		27-81-21	ALL
C00326		P006-03/ /D015		CB-115V AC L XFR BUS				ALL
	A1	D	W1024	065	14		24-51-11	ALL
	A2	D	W1026	073	14		24-51-14	ALL
	B1	D	W1024	064	14		24-51-11	ALL
	B2	D	W1026	072	14		24-51-14	ALL
	C1	D	W1024	063	14		24-51-11	ALL
	C2	D	W1026	071	14		24-51-14	ALL
C00327		P006-03/ /F018		CB-115V AC R XFR BUS				ALL
	A1	D	W1028	053	14		24-51-21	050-099, 153-199, 275-299
	A1	D	W1028	053	18		24-51-21	150-152
	A2	D	W0048	092	18		24-51-24	ALL
	B1	D	W1028	052	14		24-51-21	050-099, 153-199, 275-299
	B1	D	W1028	052	18		24-51-21	150-152
	B2	D	W0048	091	18		24-51-24	ALL
	C1	D	W1028	051	14		24-51-21	050-099, 153-199, 275-299
	C1	D	W1028	051	18		24-51-21	150-152
	C2	D	W0048	090	18		24-51-24	ALL

HOOKUP LIST

D280T132

91-21-51

Section C00300

Page 7

Jan 21/2005



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C00328		P006-03/ /A015		CB-115V AC BUS L SECT 3				ALL
	A1	D	W1024	004	08		24-51-11	ALL
	A2	D	W1024	013	08		24-51-11	ALL
	B1	D	W1024	005	08		24-51-11	ALL
	B2	D	W1024	014	08		24-51-11	ALL
	C1	D	W1024	006	08		24-51-11	ALL
	C2	D	W1024	015	08		24-51-11	ALL
C00329		P006-04/ /A021		CB-115V AC BUS RIGHT SECT 3				ALL
	A1	LA	W1028	013	08		24-51-21	ALL
	A1	LA	W1028	016	08		24-51-21	ALL
	A2	D	W1028	001	08		24-51-21	ALL
	B1	LA	W1028	014	08		24-51-21	ALL
	B1	LA	W1028	017	08		24-51-21	ALL
	B2	D	W1028	002	08		24-51-21	ALL
	C1	LA	W1028	015	08		24-51-21	ALL
	C1	LA	W1028	018	08		24-51-21	ALL
	C2	D	W1028	003	08		24-51-21	ALL
C00331		P006-03/ /H018		CB-EQUIP COOL FAN SPLY 1				ALL
	A1	LA	W1024	022	08		24-51-11	ALL
	A1	LA	W1024	026	08		24-51-11	ALL
	A2	D	W0046	033	12		21-58-14	ALL
	B1	LA	W1024	023	08		24-51-11	ALL
	B1	LA	W1024	027	08		24-51-11	ALL
	B2	D	W0046	034	12		21-58-14	ALL
	C1	LA	W1024	025	08		24-51-11	ALL
	C1	LA	W1024	028	08		24-51-11	ALL
	C2	D	W0046	035	12		21-58-14	ALL
C00333		P033-00/ /B001		CB-EQUIP COOL AFT FAN 1				ALL
	A1	M	W0138	004	10		24-51-52	ALL
	A1	M	W0138	006	12		24-51-52	ALL
	A2	D	W0052	007	18		21-26-11	ALL
	B1	M	W0138	020	12		24-51-52	050-099, 150-155, 162-165, 275-276
	B1	M	W0138	018	10		24-51-52	ALL
	B1	M	W0138	700	12		24-51-52	156-157, 166-199, 277-299
	B2	D	W0052	008	18		21-26-11	ALL
	C1	M	W0138	031	10		24-51-52	ALL
	C1	M	W0138	033	12		24-51-52	ALL
	C2	D	W0052	009	18		21-26-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section C00300

Page 8

Jan 21/2005



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C00334		P036-00/ /G004		CB-EQUIP COOL AFT FAN 2				ALL
	A1	D	W0056	015	18		21-26-11	ALL
	A2	M	W1044	001	10		24-51-12	050-099
	A2	M	W1044	016	12		24-51-12	ALL
	A2	M	W1044	013	10		24-51-12	150-157, 165-199, 275, 277-299
	A2	M	W1044	094	10		24-51-12	162-164, 276
	B1	D	W0056	016	18		21-26-11	ALL
	B2	M	W1044	002	10		24-51-12	050-099
	B2	M	W1044	017	12		24-51-12	ALL
	B2	M	W1044	014	10		24-51-12	150-157, 165-199, 275, 277-299
	B2	M	W1044	095	10		24-51-12	162-164, 276
	C1	D	W0056	017	18		21-26-11	ALL
	C2	M	W1044	003	10		24-51-12	050-099
	C2	M	W1044	018	12		24-51-12	050-099
	C2	M	W1044	018	10		24-51-12	150-199, 275-299
	C2	M	W1044	015	08		24-51-12	150-157, 165-199, 275, 277-299
	C2	M	W1044	096	08		24-51-12	162-164, 276
C00335		P006-04/ /H021		CB-EQUIP COOL FAN FWD EXH				ALL
	A1	LA	W1028	019	08		24-51-21	ALL
	A1	LA	W1028	022	08		24-51-21	ALL
	A2	D	W0048	027	12		21-58-15	ALL
	B1	LA	W1028	020	08		24-51-21	ALL
	B1	LA	W1028	023	08		24-51-21	ALL
	B2	D	W0048	026	12		21-58-15	ALL
	C1	LA	W1028	021	08		24-51-21	ALL
	C1	LA	W1028	024	08		24-51-21	ALL
	C2	D	W0048	025	12		21-58-15	ALL
C00336		P036-00/ /F002		CB-RECIRC FAN,LEFT				ALL
	A1	M	W1044	010	10		24-51-13	050-099, 150-199
	A1	M	W1044	051	12		24-51-13	ALL
	A1	M	W1044	150	10		24-51-13	275-299
	A2	D	W0056	018	12		21-25-11	ALL
	B1	M	W1044	011	10		24-51-13	050-099, 150-199
	B1	M	W1044	052	12		24-51-13	ALL
	B1	M	W1044	151	10		24-51-13	275-299
	B2	D	W0056	019	12		21-25-11	ALL
	C1	M	W1044	512	12		24-51-13	050-099, 150, 152-199
	C1	M	W1044	012	10		24-51-13	050-099, 150-199
	C1	M	W1044	152	10		24-51-13	275-299

HOOKUP LIST

D280T132

91-21-51

Section C00300

Page 9

Jan 21/2005



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C00336		P036-00/ /F002		CB-RECIRC FAN,LEFT (continued)				ALL
	C2	D	W0056	020	12		21-25-11	ALL
C00337		P037-00/ /G004		CB-RECIRC FAN,RIGHT				ALL
	A1	D	W0058	015	12		21-25-21	ALL
	A2	D	W1046	081	12		24-51-23	050-099, 150, 152-165
	A2	D	W1046	010	10		24-51-23	050-099, 162-165
	A2	M	W1046	010	10		24-51-23	150-157, 166-199, 275-299
	A2	M	W1046	081	12		24-51-23	166-199
	A2	M	W1046	130	10		24-51-23	275-299
	B1	D	W0058	016	12		21-25-21	ALL
	B2	D	W1046	082	12		24-51-23	050-099, 150, 152-165
	B2	D	W1046	011	10		24-51-23	050-099, 162-165
	B2	M	W1046	011	10		24-51-23	150-157, 166-199, 275-299
	B2	M	W1046	082	12		24-51-23	166-199
	B2	M	W1046	131	10		24-51-23	275-299
	C1	D	W0058	017	12		21-25-21	ALL
	C2	D	W1046	083	12		24-51-23	050-099, 150, 152-165
	C2	D	W1046	012	10		24-51-23	050-099, 162-165
	C2	M	W1046	012	10		24-51-23	150-157, 166-199, 275-299
	C2	M	W1046	083	12		24-51-23	166-199
	C2	M	W1046	132	10		24-51-23	275-299
C00340		P011-02/ /G008		CB-HF COMM,LEFT				ALL
	A1	D	W0036	137	12		24-51-14	ALL
	A2	D	W0040	043	20		23-11-11	ALL
	B1	D	W0036	138	12		24-51-14	ALL
	B2	D	W0040	044	20		23-11-11	ALL
	C1	D	W0036	139	12		24-51-14	ALL
	C2	D	W0040	045	20		23-11-11	ALL
C00341		P011-05/ /G035		CB-HF COMM,RIGHT				ALL
	A1	D	W0038	027	16		24-51-21	ALL
	A2	D	W0042	172	20		23-11-21	ALL
	B1	D	W0038	030	16		24-51-21	ALL
	B2	D	W0042	173	20		23-11-21	ALL
	C1	D	W0038	031	16		24-51-21	ALL
	C2	D	W0042	174	20		23-11-21	ALL
C00342		P036-00/ /E002		CB-GASPER FAN				050-099, 150-199
	A1	D	W0056	050	18		21-24-11	050-099, 150-199

HOOKUP LIST

D280T132

91-21-51

Section C00300

Page 10

Jan 21/2005



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C00342		P036-00/ /E002		CB-GASPER FAN (continued)				050-099, 150-199
	A2	M	W1044	105	12		24-51-13	050-099
	A2	M	W1044	086	12		24-51-13	150-199
	B1	D	W0056	051	18		21-24-11	050-099, 150-199
	B2	M	W1044	106	12		24-51-13	050-099
	B2	M	W1044	087	12		24-51-13	150-199
	C1	D	W0056	052	18		21-24-11	050-099, 150-199
	C2	M	W1044	108	10		24-51-13	050-099
	C2	M	W1044	088	12		24-51-13	150-199
	A02	D	W9158	001	12		24-51-13	150, 153, 157, 165-199
	B02	D	W9158	002	12		24-51-13	150, 153, 157, 165-199
	C02	D	W9158	003	12		24-51-13	150, 153, 157, 165-199
C00343		P036-00/ /A002		CB-FWD DR AREA HTR-PWR				ALL
	A1	M	W1044	511	12		24-51-13	050-099, 150, 152-199
	A1	M	W1044	051	12		24-51-13	ALL
	A2	D	W0056	062	22		21-45-21	050-099, 150-156, 162-166, 275-276
	A2	D	W0056	062	20		21-45-21	157, 167-199, 277-299
	B1	M	W1044	570	12		24-51-13	050-099, 150, 152-199
	B1	M	W1044	052	12		24-51-13	ALL
	B2	D	W0056	063	22		21-45-21	050-099, 150-156, 162-166, 275-276
	B2	D	W0056	063	20		21-45-21	157, 167-199, 277-299
C00344		P037-00/ /E006		CB-CARGO VENT FAN,BULK				ALL
	A1	D	W0058	033	22		21-26-21	ALL
	A2	D	W1046	013	12		24-51-22	050-099
	A2	D	W1046	01A	12		24-51-22	050-099
	A2	M	W1046	013	12		24-51-22	150-154, 162-164, 275-276
	A2	M	W1046	01A	12		24-51-22	150-199, 275-299
	A2	M	W1046	064	12		24-51-22	155-157, 165-199, 277-299
	B1	D	W0058	034	22		21-26-21	ALL
	B2	D	W1046	017	12		24-51-22	050-099
	B2	D	W1046	01C	12		24-51-22	050-099
	B2	M	W1046	017	14		24-51-22	150-154, 162-164, 275-276
	B2	M	W1046	01C	12		24-51-22	150-199, 275-299
	B2	M	W1046	065	12		24-51-22	155-157, 165-199, 277-299
	B2	M	W1046	034	12		24-51-22	275
	C1	D	W0058	035	22		21-26-21	ALL
	C2	D	W1046	019	12		24-51-22	050-099
	C2	D	W1046	067	12		24-51-22	050-099
	C2	M	W1046	019	14		24-51-22	150-154, 162-164, 275-276

HOOKUP LIST

D280T132

91-21-51

Section C00300

Page 11

Jan 21/2005



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C00344		P037-00/ /E006		CB-CARGO VENT FAN,BULK (continued)				ALL
	C2	M	W1046	01E	12		24-51-22	150-199, 275-299
	C2	M	W1046	066	12		24-51-22	155-157, 165-199, 277-299
C00350		P034-00/ /A016		CB-CARGO HDLG-FWD				ALL
	A1	D	W0666	001	08		25-53-11	ALL
	A2	N2	W1010	007	06		24-51-61	ALL
	B1	D	W0666	002	08		25-53-11	ALL
	B2	N2	W1010	008	06		24-51-61	ALL
	C1	D	W0666	003	08		25-53-11	ALL
	C2	N2	W1010	009	06		24-51-61	ALL
C00351		P034-00/ /B019		CB-CARGO HDLG-AFT				ALL
	A1	D	W0666	011	08		25-53-21	ALL
	A2	N2	W1010	004	06		24-51-61	ALL
	A2	N2	W1010	007	06		24-51-61	ALL
	B1	D	W0666	012	08		25-53-21	ALL
	B2	N2	W1010	005	06		24-51-61	ALL
	B2	N2	W1010	008	06		24-51-61	ALL
	C1	D	W0666	013	08		25-53-21	ALL
	C2	N2	W1010	006	06		24-51-61	ALL
	C2	N2	W1010	009	06		24-51-61	ALL
C00354		P006-03/ /H015		CB-SEAT,CAPTAIN				ALL
	A1	LA	W1024	020	08		24-51-11	ALL
	A1	LA	W1024	022	08		24-51-11	ALL
	A2	D	W0046	001	22		25-11-11	ALL
	B1	LA	W1024	014	08		24-51-11	ALL
	B1	LA	W1024	023	08		24-51-11	ALL
	B2	D	W0046	002	22		25-11-11	ALL
	C1	LA	W1024	015	08		24-51-11	ALL
	C1	LA	W1024	025	08		24-51-11	ALL
	C2	D	W0046	003	22		25-11-11	ALL
C00355		P006-04/ /J021		CB-SEAT,FIRST OFFICER				ALL
	A1	D	W0048	001	22		25-11-21	ALL
	A2	LA	W1028	025	08		24-51-21	050-099
	A2	LA	W1028	022	08		24-51-21	ALL
	A2	LA	W1028	047	08		24-51-21	150-199, 275-299
	B1	D	W0048	002	22		25-11-21	ALL
	B2	LA	W1028	026	08		24-51-21	050-099

HOOKUP LIST

D280T132

91-21-51

Section C00300

Page 12

Jan 21/2005



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C00355		P006-04/ /J021		CB-SEAT,FIRST OFFICER (continued)				ALL
	B2	LA	W1028	023	08		24-51-21	ALL
	B2	LA	W1028	048	08		24-51-21	150-199, 275-299
	C1	D	W0048	003	22		25-11-21	ALL
	C2	LA	W1028	027	08		24-51-21	050-099
	C2	LA	W1028	024	08		24-51-21	ALL
	C2	LA	W1028	049	08		24-51-21	150-199, 275-299
C00358		P037-00/ /J003		CB-CARGO VENT FAN,FWD (INOP)				050-099, 150-199
C00358		P037-00/ /C007		CB-CARGO VENT FAN,FWD (INOP)				275-299
	A1	D	W1118	11A	22		21-26-31	050-099, 150-199, 275-278
	A2	D	W1046	01A	12		24-51-22	050-099
	A2	D	W1046	01B	12		24-51-22	050-099
	A2	M	W1046	01A	12		24-51-22	150-199, 275-299
	A2	M	W1046	01B	12		24-51-22	150-199, 275-299
	B1	D	W1118	11B	22		21-26-31	050-099, 150-199, 275-278
	B2	D	W1046	016	10		24-51-22	050-099
	B2	D	W1046	01D	12		24-51-22	050-099
	B2	M	W1046	01C	12		24-51-22	150-199, 275-299
	B2	M	W1046	01D	12		24-51-22	150-199, 275-299
	C1	D	W1118	11C	22		21-26-31	050-099, 150-199, 275-278
	C2	D	W1046	018	12		24-51-22	050-099
	C2	D	W1046	01F	12		24-51-22	050-099
	C2	M	W1046	01E	12		24-51-22	150-199, 275-299
	C2	M	W1046	01F	12		24-51-22	150-199, 275-299
	REF	+	W1118	11A	22		21-26-31	280-299
	REF	+	W1118	11B	22		21-26-31	280-299
	REF	+	W1118	11C	22		21-26-31	280-299
C00359		P037-00/ /J006		CB-CARGO GND EXH FAN				050-099, 151-199
C00359		P037-00/ /J006		CB-CARGO GND EXH FAN (TO 210210)				150
C00359		P037-00/ /C004		CB-CARGO GND EXH FAN				275-299
	A1	D	W1118	11D	22		21-26-31	ALL
	A2	D	W1046	014	12		24-51-22	050-099
	A2	D	W1046	01B	12		24-51-22	050-099
	A2	M	W1046	014	12		24-51-22	150-199, 275-299
	A2	M	W1046	01B	12		24-51-22	150-199, 275-299
	B1	D	W1118	11E	22		21-26-31	ALL
	B2	D	W1046	01D	12		24-51-22	050-099, 150-154, 162-165
	B2	D	W1046	01G	12		24-51-22	150-154, 162-165
	B2	M	W1046	01D	12		24-51-22	155-157, 166-199, 275-299

HOOKUP LIST

D280T132

91-21-51

Section C00300

Page 13

Jan 21/2005



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C00359		P037-00/ /J006		CB-CARGO GND EXH FAN (continued)				050-099, 151-199
C00359		P037-00/ /J006		CB-CARGO GND EXH FAN (TO 210210) (continued)				150
C00359		P037-00/ /C004		CB-CARGO GND EXH FAN (continued)				275-299
	B2	M	W1046	01G	12		24-51-22	155-157, 166-199, 275-299
	C1	D	W1118	11F	22		21-26-31	ALL
	C2	D	W1046	01F	12		24-51-22	050-099
	C2	M	W1046	018	12		24-51-22	150-199, 275-299
	C2	M	W1046	01F	12		24-51-22	150-199, 275-299
C00360		P034-00/ /J007		CB-CARGO DOOR,FWD				ALL
	A1	D	W0054	048	20		52-34-11	ALL
	A2	M	W1012	016	12		24-51-61	ALL
	A2	M	W1012	043	12		24-51-61	ALL
	B1	D	W0054	049	20		52-34-11	ALL
	B2	M	W1012	029	12		24-51-61	ALL
	B2	M	W1012	042	12		24-51-61	ALL
	C1	D	W0054	050	20		52-34-11	ALL
	C2	M	W1012	030	12		24-51-61	ALL
	C2	M	W1012	041	12		24-51-61	ALL
C00361		P034-00/ /J010		CB-CARGO DOOR,AFT				ALL
	A1	D	W0054	051	20		52-35-11	ALL
	A2	M	W1012	038	12		24-51-61	ALL
	A2	M	W1012	043	12		24-51-61	ALL
	B1	D	W0054	052	20		52-35-11	ALL
	B2	M	W1012	039	12		24-51-61	ALL
	B2	M	W1012	042	12		24-51-61	ALL
	C1	D	W0054	053	20		52-35-11	ALL
	C2	M	W1012	040	12		24-51-61	ALL
	C2	M	W1012	041	12		24-51-61	ALL
C00363		P033-00/ /F006		CB-ENTRY DR,FWD				ALL
	A1	M	W0138	009	12		24-51-52	ALL
	A1	M	W0138	010	12		24-51-52	ALL
	A2	D	W0052	016	22		52-11-11	ALL
	B1	M	W0138	011	12		24-51-52	ALL
	B1	M	W0138	022	12		24-51-52	ALL
	B2	D	W0052	017	22		52-11-11	ALL
	C1	M	W0138	012	12		24-51-52	ALL
	C1	M	W0138	035	12		24-51-52	ALL
	C2	D	W0052	018	22		52-11-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section C00300

Page 14

Jan 21/2005

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C00366		P006-03/ /G015		CB-FUEL BOOST PUMP,L AFT				ALL
	A1	D	W0046	041	16		28-22-11	ALL
	A2	D	W1024	032	08		24-51-11	ALL
	B1	D	W0046	042	16		28-22-11	ALL
	B2	LA	W1024	033	08		24-51-11	ALL
	B2	LA	W1024	036	08		24-51-11	ALL
	C1	D	W0046	043	16		28-22-11	ALL
	C2	D	W1024	034	08		24-51-11	ALL
C00368		P006-03/ /G018		CB-FUEL BOOST PUMP,R FWD				ALL
	A1	D	W0046	038	16		28-22-11	ALL
	A2	LA	W1024	029	08		24-51-11	ALL
	A2	LA	W1024	032	08		24-51-11	ALL
	B1	D	W0046	039	16		28-22-11	ALL
	B2	LA	W1024	030	08		24-51-11	ALL
	B2	LA	W1024	033	08		24-51-11	ALL
	C1	D	W0046	040	16		28-22-11	ALL
	C2	LA	W1024	031	08		24-51-11	ALL
	C2	LA	W1024	034	08		24-51-11	ALL
C00369		P006-03/ /F015		CB-FUEL OVRD PUMP,LEFT				ALL
	A1	LA	W1024	026	08		24-51-11	ALL
	A1	LA	W1024	029	08		24-51-11	ALL
	A2	D	W0046	044	12		28-22-12	ALL
	B1	LA	W1024	027	08		24-51-11	ALL
	B1	LA	W1024	030	08		24-51-11	ALL
	B2	D	W0046	045	12		28-22-12	ALL
	C1	LA	W1024	028	08		24-51-11	ALL
	C1	LA	W1024	031	08		24-51-11	ALL
	C2	D	W0046	046	12		28-22-12	ALL
C00370		P006-04/ /F021		CB-FUEL OVRD PUMP,RIGHT				ALL
	A1	LA	W1028	031	08		24-51-21	ALL
	A1	LA	W1028	034	08		24-51-21	ALL
	A2	D	W0048	054	12		28-22-12	ALL
	B1	LA	W1028	032	08		24-51-21	ALL
	B1	LA	W1028	035	08		24-51-21	ALL
	B2	D	W0048	055	12		28-22-12	ALL
	C1	LA	W1028	033	08		24-51-21	ALL
	C1	LA	W1028	036	08		24-51-21	ALL
	C2	D	W0048	056	12		28-22-12	ALL

HOOKUP LIST

D280T132

91-21-51

Section C00300

Page 15

Jan 21/2005



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C00371		P006-04/ /G021		CB-FUEL BOOST PUMP,R AFT				ALL
	A1	D	W0048	048	16		28-22-11	ALL
	A2	LA	W1028	025	08		24-51-21	050-099
	A2	LA	W1028	028	08		24-51-21	ALL
	A2	LA	W1028	047	08		24-51-21	150-199, 275-299
	B1	D	W0048	049	16		28-22-11	ALL
	B2	LA	W1028	026	08		24-51-21	050-099
	B2	LA	W1028	029	08		24-51-21	ALL
	B2	LA	W1028	048	08		24-51-21	150-199, 275-299
	C1	D	W0048	050	16		28-22-11	ALL
	C2	LA	W1028	027	08		24-51-21	050-099
	C2	LA	W1028	030	08		24-51-21	ALL
	C2	LA	W1028	049	08		24-51-21	150-199, 275-299
C00372		P006-04/ /G024		CB-FUEL BOOST PUMP,L FWD				ALL
	A1	D	W0048	051	16		28-22-11	ALL
	A2	D	W1030	029	12		24-51-52	ALL
	B1	D	W0048	052	16		28-22-11	ALL
	B2	D	W1030	054	12		24-51-52	ALL
	C1	D	W0048	053	16		28-22-11	ALL
	C2	D	W1030	031	12		24-51-52	ALL
C00375		P036-00/ /F004		CB-FUEL JTSN PUMP-LEFT (INOP)				050-099, 155-199, 277-299
	A1	M	W1044	001	10		24-51-12	050-099
	A1	M	W1044	071	10		24-51-12	050-099
	A1	M	W0892	001	12		28-31-22	150-154, 275
	A1	M	W1044	094	10		24-51-12	155, 162-165, 276
	A1	M	W1044	094	12		24-51-12	156-157, 166-199, 277-299
	A1	M	W1044	013	10		24-51-12	162-164, 276
	A2	D	W0182	161	12		28-31-21	050-099, 155-199, 276-299
	B1	M	W1044	002	10		24-51-12	050-099
	B1	M	W1044	072	10		24-51-12	050-099
	B1	M	W0892	002	12		28-31-22	150-154, 275
	B1	M	W1044	095	10		24-51-12	155, 162-165, 276
	B1	M	W1044	095	12		24-51-12	156-157, 166-199, 277-299
	B1	M	W1044	014	10		24-51-12	162-164, 276
	B2	D	W0182	162	12		28-31-21	050-099, 155-199, 276-299
	C1	M	W1044	003	10		24-51-12	050-099
	C1	M	W1044	073	10		24-51-12	050-099
	C1	M	W0892	003	12		28-31-22	150-154, 275
	C1	M	W1044	096	08		24-51-12	155, 162-165, 276

HOOKUP LIST

D280T132

91-21-51

Section C00300

Page 16

Jan 21/2005



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C00375		P036-00/ /F004		CB-FUEL JTSN PUMP-LEFT (INOP) (continued)				050-099, 155-199, 277-299
	C1	M	W1044	096	12		24-51-12	156-157, 166-199, 277-299
	C1	M	W1044	015	08		24-51-12	162-164, 276
	C2	D	W0182	163	12		28-31-21	050-099, 155-199, 276-299
C00376		P037-00/ /F004		CB-FUEL JTSN PUMP-RIGHT (INOP)				050-099, 155-199, 276-299
	A1	M	W1046	013	12		24-51-22	050-099, 155-199, 276-299
	A1	M	W1046	064	12		24-51-22	050-099, 162-164, 276
	A1	M	W0894	001	12		28-31-22	150-154, 275
	A2	D	W1118	551	12		28-31-21	050-099, 155-199, 276-299
	B1	M	W1046	017	12		24-51-22	050-099
	B1	M	W1046	065	12		24-51-22	050-099, 162-164, 276
	B1	M	W0894	002	12		28-31-22	150-154, 275
	B1	M	W1046	017	14		24-51-22	155-199, 276-299
	B2	D	W1118	552	12		28-31-21	050-099, 155-199, 276-299
	C1	M	W1046	019	12		24-51-22	050-099
	C1	M	W1046	066	12		24-51-22	050-099, 162-164, 276
	C1	M	W0894	003	12		28-31-22	150-154, 275
	C1	M	W1046	019	14		24-51-22	155-199, 276-299
	C2	D	W1118	553	12		28-31-21	050-099, 155-199, 276-299
C00379		P087-00/ /B003		CB-AFT DOOR AREA HEATER PWR (SB 21-0111)				050-099, 150-199, 275-277
C00379		P087-00/ /B003		CB-AFT DOOR AREA HEATER POWER				278-299
	A1	D	W2110	001	12		24-51-13	278-299
	A1	D	W2110	012	12		24-51-13	278-299
	A2	D	W2112	201R	18		21-45-24	278-299
	C1	D	W2110	003	12		24-51-13	278-299
	C1	D	W2110	014	12		24-51-13	278-299
	C2	D	W2112	201B	18		21-45-24	278-299
	DED		W2112	201Z			21-45-24	278-299
C00388		P037-00/ /G007		CB-VACUUM BLOWER LAV SYSTEM 2				ALL
	A1	D	W0058	001	12		38-32-11	ALL
	A2	M	W1046	007	10		24-51-22	ALL
	A2	M	W1046	064	12		24-51-22	050-099, 155-199, 276-299
	A2	M	W1046	013	12		24-51-22	150-154, 275
	B1	D	W0058	002	12		38-32-11	ALL
	B2	M	W1046	008	10		24-51-22	ALL
	B2	M	W1046	065	12		24-51-22	050-099, 155-199, 276-299
	B2	M	W1046	017	14		24-51-22	150-154, 275
	C1	D	W0058	003	12		38-32-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section C00300

Page 17

Jan 21/2005



767-200/300 WIRING DIAGRAM MANUAL

Equip	Station / WL / BL		Description		GA	CO	Diagram	Effectivity
	Term	Type	Bundle	Wire No.				
C00388	P037-00/ /G007		CB-VACUUM BLOWER LAV SYSTEM 2 (continued)					ALL
	C2	M	W1046	009	10		24-51-22	ALL
	C2	M	W1046	066	12		24-51-22	050-099, 155-199, 276-299
	C2	M	W1046	019	14		24-51-22	150-154, 275
C00389	P036-00/ /F007		CB-VACUUM BLOWER LAV SYSTEM 1					ALL
	A1	M	W1044	071	10		24-51-12	050-099
	A1	M	W1044	007	10		24-51-12	ALL
	A1	M	W1044	013	10		24-51-12	150-199, 275-299
	A2	D	W0056	024	12		38-32-11	ALL
	B1	M	W1044	072	10		24-51-12	050-099
	B1	M	W1044	008	10		24-51-12	ALL
	B1	M	W1044	014	10		24-51-12	150-199, 275-299
	B2	D	W0056	025	12		38-32-11	ALL
	C1	M	W1044	009	10		24-51-12	050-099
	C1	M	W1044	073	10		24-51-12	050-099
	C1	M	W1044	009	08		24-51-12	150-199, 275-299
	C1	M	W1044	015	08		24-51-12	150-199, 275-299
	C2	D	W0056	026	12		38-32-11	ALL
C00391	P036-00/ /L005		CB-WINDOW HT NO.1,LEFT					ALL
	A1	D	W0056	011	12		30-41-11	ALL
	A2	M	W1044	016	12		24-51-12	ALL
	A2	M	W1044	046	12		24-51-12	150-154, 275
	B1	D	W0056	012	12		30-41-11	ALL
	B2	M	W1044	017	12		24-51-12	ALL
	B2	M	W1044	083	12		24-51-12	050-099, 155-199, 275-299
	B2	N1	W1044	083	12		24-51-12	150-154
C00392	P037-00/ /D002		CB-WINDOW HT NO.1,RIGHT					ALL
	B1	D	W1046	016	10		24-51-22	050-099
	B1	D	W1046	01C	12		24-51-22	050-099
	B1	D	W1046	01G	12		24-51-22	150-154, 162-165, 275-276
	B1	M	W1046	01G	12		24-51-22	155-157, 166-199, 277-299
	B2	D	W0058	201B	12		30-41-12	ALL
	C1	D	W1046	067	12		24-51-22	050-099
	C1	D	W1046	018	12		24-51-22	050-099, 162-165
	C1	M	W1046	018	12		24-51-22	150-157, 166-199, 275-299
	C2	D	W0058	201R	12		30-41-12	ALL

HOOKUP LIST

D280T132

91-21-51

Section C00300

Page 18

Jan 21/2005



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C00397		P033-00/ /H006		CB-AIR COMPRESSOR,WATER SYSTEM				ALL
	A1	M	W0138	010	12		24-51-52	ALL
	A2	D	W0052	024	18		38-15-11	ALL
	B1	M	W0138	011	12		24-51-52	ALL
	B1	M	W0138	028	12		24-51-52	ALL
	B2	D	W0052	023	18		38-15-11	ALL
	C1	M	W0138	012	12		24-51-52	ALL
	C1	M	W0138	039	12		24-51-52	ALL
	C2	D	W0052	022	18		38-15-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section C00300

Page 19 End

Jan 21/2005



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C00400		P036-00/ /C004		CB-FLT DK CREW REST HEAT				050-099, 162-199
	A1	D	W0056	065	20		21-66-11	050-099, 162-199
	A2	M	W1044	505	12		24-51-13	050-099, 162-199
	A2	M	W1044	508	12		24-51-13	050-099, 162-199
	B1	D	W0056	066	20		21-66-11	050-099, 162-199
	B2	M	W1044	504	12		24-51-13	050-099, 162-199
	B2	M	W1044	507	12		24-51-13	050-099, 162-199
	C1	D	W0176	39A	22		21-66-11	050-099
	C1	D	W0056	067	20		21-66-11	050-099, 162-199
	C1	D	W0176	39A	22		21-66-11	162-163
	C1	D	W0056	084	22		21-66-11	164-199
	C2	M	W1044	506	12		24-51-13	050-099, 162-199
	C2	M	W1044	509	12		24-51-13	050-099, 162-199
C00401		P036-00/ /C007		CB-FLT DK CREW REST FAN				050-099, 162-199
	A1	D	W0056	070	20		21-66-11	050-099, 162-199
	A2	M	W1044	508	12		24-51-13	050-099, 162-199
	B1	D	W0056	071	20		21-66-11	050-099, 162-199
	B2	M	W1044	507	12		24-51-13	050-099, 162-199
	C1	D	W0056	072	20		21-66-11	050-099, 162-199
	C2	M	W1044	509	12		24-51-13	050-099, 162-199
C00402		P037-00/ /B004		CB-FWD CABIN CREW REST HEAT CONT				050-099, 162-199
	A1	D	W1046	077	12		24-51-23	050-099, 162-165
	A1	M	W1046	077	12		24-51-23	166-199
	A2	D	W0058	073	18		21-66-21	050-099, 162-199
	B1	D	W1046	076	12		24-51-23	050-099, 162-165
	B1	M	W1046	076	12		24-51-23	166-199
	B2	D	W0058	074	18		21-66-21	050-099, 162-199
	C1	D	W1046	075	12		24-51-23	050-099, 162-165
	C1	M	W1046	075	12		24-51-23	166-199
	C2	D	W0058	075	18		21-66-21	050-099, 162-199
C00403		P036-00/ /B004		CB-AFT LH CABIN CREW REST HEAT				050-099, 162-199
C00403		P036-00/ /C007		CB-AFT LH CABIN CREW REST HEAT				150, 152-157
	A1	M	W1044	502	12		24-51-13	050-099, 150, 152-199
	A1	M	W1044	505	12		24-51-13	050-099, 162-199
	A2	D	W0056	075	20		21-66-31	050-099, 150, 152-199
	B1	M	W1044	501	12		24-51-13	050-099, 150, 152-199
	B1	M	W1044	504	12		24-51-13	050-099, 162-199
	B2	D	W0056	076	20		21-66-31	050-099, 150, 152-199

HOOKUP LIST

D280T132

91-21-51

Section C00400

Page 1

Jan 21/2005



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C00403		P036-00/ /B004		CB-AFT LH CABIN CREW REST HEAT (continued)				050-099, 162-199
C00403		P036-00/ /C007		CB-AFT LH CABIN CREW REST HEAT (continued)				150, 152-157
	C1	M	W1044	503	12		24-51-13	050-099, 150, 152-199
	C1	M	W1044	506	12		24-51-13	050-099, 162-199
	C2	D	W0056	077	20		21-66-31	050-099, 150, 152-199
C00404		P037-00/ /B007		CB-AFT RH CABIN CREW REST HEAT				050-099, 150, 152-199
	A1	D	W1046	074	12		24-51-23	050-099, 150, 152-165
	A1	D	W1046	077	12		24-51-23	050-099, 162-165
	A1	M	W1046	074	12		24-51-23	166-199
	A1	M	W1046	077	12		24-51-23	166-199
	A2	D	W0058	082	18		21-66-41	050-099, 150, 152-199
	B1	D	W1046	073	12		24-51-23	050-099, 150, 152-165
	B1	D	W1046	076	12		24-51-23	050-099, 162-165
	B1	M	W1046	073	12		24-51-23	166-199
	B1	M	W1046	076	12		24-51-23	166-199
	B2	D	W0058	083	18		21-66-41	050-099, 150, 152-199
	C1	D	W1046	072	12		24-51-23	050-099, 150, 152-165
	C1	D	W1046	075	12		24-51-23	050-099, 162-165
	C1	M	W1046	072	12		24-51-23	166-199
	C1	M	W1046	075	12		24-51-23	166-199
	C2	D	W0058	084	18		21-66-41	050-099, 150, 152-199
C00405		P037-00/ /C004		CB-FWD CABIN CREW REST FAN				050-099, 162-199
	A1	D	W0058	078	20		21-66-21	050-099, 162-199
	A2	D	W1046	074	12		24-51-23	050-099, 162-165
	A2	D	W1046	078	12		24-51-23	050-099, 162-165
	A2	M	W1046	074	12		24-51-23	166-199
	A2	M	W1046	078	12		24-51-23	166-199
	B1	D	W0058	079	20		21-66-21	050-099, 162-199
	B2	D	W1046	073	12		24-51-23	050-099, 162-165
	B2	D	W1046	079	12		24-51-23	050-099, 162-165
	B2	M	W1046	073	12		24-51-23	166-199
	B2	M	W1046	079	12		24-51-23	166-199
	C1	D	W0058	080	20		21-66-21	050-099, 162-199
	C2	D	W1046	072	12		24-51-23	050-099, 162-165
	C2	D	W1046	080	12		24-51-23	050-099, 162-165
	C2	M	W1046	072	12		24-51-23	166-199
	C2	M	W1046	080	12		24-51-23	166-199

HOOKUP LIST

D280T132

91-21-51

Section C00400

Page 2

Jan 21/2005



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C00406		P036-00/ /B001		CB-AFT LH CABIN CREW REST FAN				050-099, 162-199
C00406		P036-00/ /C004		CB-AFT LH CABIN CREW REST FAN				150, 152-157
	A1	M	W1044	502	12		24-51-13	050-099, 150, 152-199
	A1	M	W1044	511	12		24-51-13	050-099, 150, 152-199
	A2	D	W0056	080	20		21-66-31	050-099, 150, 152-199
	B1	M	W1044	501	12		24-51-13	050-099, 150, 152-199
	B1	M	W1044	570	12		24-51-13	050-099, 150, 152-199
	B2	D	W0056	081	20		21-66-31	050-099, 150, 152-199
	C1	M	W1044	503	12		24-51-13	050-099, 150, 152-199
	C1	M	W1044	512	12		24-51-13	050-099, 150, 152-199
	C2	D	W0056	082	20		21-66-31	050-099, 150, 152-199
C00407		P037-00/ /C007		CB-AFT RH CABIN CREW REST FAN				050-099, 150, 152-199
C00407		P037-00/ /C004		CB-AFT RH CABIN CREW REST FAN				150, 152-157
	A1	D	W0058	087	20		21-66-41	050-099, 150, 152-199
	A2	D	W1046	081	12		24-51-23	050-099, 150, 152-165
	A2	D	W1046	078	12		24-51-23	050-099, 162-165
	A2	D	W1046	074	12		24-51-23	150, 152-157
	A2	M	W1046	078	12		24-51-23	166-199
	A2	M	W1046	081	12		24-51-23	166-199
	B1	D	W0058	088	20		21-66-41	050-099, 150, 152-199
	B2	D	W1046	082	12		24-51-23	050-099, 150, 152-165
	B2	D	W1046	079	12		24-51-23	050-099, 162-165
	B2	D	W1046	073	12		24-51-23	150, 152-157
	B2	M	W1046	079	12		24-51-23	166-199
	B2	M	W1046	082	12		24-51-23	166-199
	C1	D	W0058	089	20		21-66-41	050-099, 150, 152-199
	C2	D	W1046	083	12		24-51-23	050-099, 150, 152-165
	C2	D	W1046	080	12		24-51-23	050-099, 162-165
	C2	D	W1046	072	12		24-51-23	150, 152-157
	C2	M	W1046	080	12		24-51-23	166-199
	C2	M	W1046	083	12		24-51-23	166-199
C00408		P087-00/ /B004		CB-L AFT DOOR AREA FAN PWR (SB 21-0111)				050-099, 150-199, 275-277
C00408		P087-00/ /B004		CB-LEFT AFT DOOR AREA FAN POWER				278-299
	A1	D	W2110	012	12		24-51-13	278-299
	A1	D	W2110	015	12		24-51-13	278-299
	A2	D	W2112	007	20		21-45-24	278-299
	B1	D	W2110	002	12		24-51-13	278-299
	B1	D	W2110	016	12		24-51-13	278-299

HOOKUP LIST

D280T132

91-21-51

Section C00400

Page 3

Jan 21/2005



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C00408		P087-00/ /B004		CB-L AFT DOOR AREA FAN PWR (SB 21-0111) (continued)				050-099, 150-199, 275-277
C00408		P087-00/ /B004		CB-LEFT AFT DOOR AREA FAN POWER (continued)				278-299
	B2	D	W2112	008	20		21-45-24	278-299
	C1	D	W2110	014	12		24-51-13	278-299
	C1	D	W2110	017	12		24-51-13	278-299
	C2	D	W2112	009	20		21-45-24	278-299
C00409		P087-00/ /A001		CB-R AFT DOOR AREA FAN PWR (SB 21-0111)				050-099, 150-199, 275-277
C00409		P087-00/ /A001		CB-RIGHT AFT DOOR AREA FAN POWER				278-299
	A1	D	W2110	015	12		24-51-13	278-299
	A2	D	W2112	010	20		21-45-24	278-299
	B1	D	W2110	016	12		24-51-13	278-299
	B2	D	W2112	011	20		21-45-24	278-299
	C1	D	W2110	017	12		24-51-13	278-299
	C2	D	W2112	012	20		21-45-24	278-299

HOOKUP LIST

D280T132

91-21-51

Section C00400

Page 4 End

Jan 21/2005



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C00501		P011-01/ /F014		CB-TMC AC				ALL
	1	D	W0040	017	20		22-31-11	ALL
	2	D	W0036	026	16		24-51-11	ALL
	2	D	W0036	027	16		24-51-11	ALL
C00506		P011-02/ /H008		CB-SATCOM (MTO-238591/2/3)				150, 153-155, 162-165, 167-199
C00506		P011-02/ /H008		CB-SATCOM (INOP) (MTO-238591/2/3)				156-157, 166
C00506		P011-02/ /H008		CB-SATCOM (INOP)				156-157, 166
C00506		P011-02/ /H008		CB-SATCOM				277-299
	1	D	W0040	910	16		23-25-11	150, 153-155, 162-165
	1	D	W0040	522	16		23-25-11	150, 153-199, 277-299
	2	D	W0036	909	16		24-51-11	150, 153-155, 162-165
	2	D	W0036	032	16		24-51-11	150, 153-199, 277-299
	2	D	W0036	907	16		24-51-11	156-157, 166-199
C00507		P033-00/ /A005		CB-PSUD MID,C				280-299
	1	D	W0052	091	12		23-34-17	280-299
C00512		P011-01/ /F016		CB-TMC SERVO				ALL
	1	D	W0040	018	20		22-31-12	ALL
	2	D	W0036	119	10		24-54-11	ALL
	2	D	W0036	120	10		24-54-11	050-099, 275-299
	2	D	W0036	196	10		24-54-11	150-199
C00513		P011-01/ /E017		CB-FLT CONT CMPTR PWR,LEFT				ALL
	1	D	W0036	022	16		24-51-11	ALL
	1	D	W0036	023	16		24-51-11	150-199
	2	D	W0040	014	20		22-11-11	ALL
C00514		P011-04/ /E035		CB-FLT CONT CMPTR PWR,R				ALL
	1	D	W0038	023	16		24-51-21	050-099
	1	D	W0038	022	16		24-51-21	150-199, 275-299
	2	D	W0042	074	20		22-11-21	ALL
C00515		P011-04/ /E020		CB-FLT CONT CMPTR PWR,C				ALL
	1	D	W0038	032	22		24-51-31	ALL
	1	D	W0038	033	22		24-51-31	ALL
	2	D	W0042	099	20		22-11-31	ALL
	DED		W0038	032Z			24-51-31	ALL
	DED		W0038	033Z			24-51-31	ALL

HOOKUP LIST

D280T132

91-21-51
Section C00500
Page 1
Aug 05/2009



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C00515		P011-04/ /E020		CB-FLT CONT CMPTR PWR,C (continued)				ALL
	DED		W0042	099Z			22-11-31	ALL
C00516		P011-01/ /E016		CB-MODE CONT PNL,LEFT				ALL
	1	D	W0036	078	10		24-54-11	ALL
	1	D	W0036	119	10		24-54-11	ALL
	2	D	W0040	016	20		22-11-12	ALL
C00517		P011-04/ /E034		CB-MODE CONT PNL,R				ALL
	1	LA	W0038	060	08		24-54-21	ALL
	1	LA	W0038	061	08		24-54-21	ALL
	2	D	W0042	075	22		22-11-22	ALL
C00520		P011-03/ /U009		CB-MAINT CONT DSPL				ALL
	1	D	W0040	012	20		22-41-12	ALL
	2	D	W0036	021	12		24-51-11	050-099
	2	D	W0036	122	12		24-51-11	ALL
	2	D	W0036	015	12		24-51-11	150-199, 275-299
C00521		P011-01/ /A017		CB-AUTO FLIGHT WARN				ALL
	1	D	W0032	102	12		24-54-73	ALL
	2	D	W0044	151	20		22-31-12	ALL
	2	D	W0044	152	20		22-11-32	ALL
C00522		P011-01/ /E018		CB-FLT CONT CMPTR SERVO,LEFT				ALL
	1	D	W0036	077	10		24-54-11	ALL
	1	D	W0036	078	10		24-54-11	ALL
	2	D	W0040	015	20		22-11-12	ALL
C00523		P011-04/ /E036		CB-FLT CONT CMPTR SERVO,RIGHT				ALL
	1	LA	W0038	061	08		24-54-21	ALL
	1	LA	W0038	062	08		24-54-21	ALL
	2	D	W0042	076	22		22-11-22	ALL
C00524		P011-04/ /E021		CB-FLT CONT CMPTR SERVO,C				ALL
	1	D	W0038	034	18		24-51-31	ALL
	2	D	W0042	097	20		22-11-32	ALL
	DED		W0038	034Z			24-51-31	ALL
	DED		W0042	097Z			22-11-32	ALL

HOOKUP LIST

D280T132

91-21-51

Section C00500

Page 2

Jan 21/2005



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C00525		P011-01/ /F015		CB-TMC DC				ALL
	1	D	W0040	019	20		22-31-12	ALL
C00530		P036-00/ /J003		CB-PSUD FWD,L				ALL
	1	D	W0056	002	16		23-34-16	ALL
C00531		P033-00/ /A004		CB-PSUD FWD,C				ALL
	1	D	W0052	082	12		23-34-17	ALL
	2	M	W0138	082	10		24-51-52	ALL
	2	M	W0138	109	10		24-51-52	ALL
C00532		P011-05/ /H034		CB-VOICE RECORDER				ALL
	1	D	W0042	091	22		23-71-11	ALL
	2	D	W0038	029	16		24-51-21	ALL
	2	D	W0038	030	16		24-51-21	ALL
C00533		P036-00/ /J001		CB-PSUD FWD,R				ALL
	1	D	W0056	001	16		23-34-15	ALL
	2	M	W1044	025	12		24-51-12	150-199, 275-299
C00534		P036-00/ /J007		CB-ANNCT,PRE-RECD				ALL
	1	D	W0056	007	22		23-31-12	ALL
	2	M	W1044	083	12		24-51-12	ALL
C00535		P036-00/ /J004		CB-PSUD AFT,L				ALL
	1	D	W0056	005	12		23-34-18	ALL
	2	M	W1044	031	12		24-51-12	ALL
	2	M	W1044	019	12		24-51-12	150-154, 275
C00536		P033-00/ /A003		CB-PSUD AFT,C				ALL
	1	D	W0052	081	10		23-34-19	ALL
	2	D	W0138	068	10		24-51-52	050-099
	2	M	W0138	086	10		24-51-52	050-099
	2	M	W0138	068	12		24-51-52	150-199, 275-299
	2	M	W0138	086	12		24-51-52	150-199, 275-299
C00538		P006-01/ /G005		CB-ACARS,DC PWR (INOP)				050-099, 151, 275-299
C00538		P006-01/ /G5		CB ACARS, DC PWR				150, 152-166, 275-299
C00538		P006-01/ /G005		CB-ACARS,DC PWR				167-199
	2	D	W0028	125	22		23-22-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section C00500

Page 3

Jan 21/2005



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C00539		P011-02/ /G003		CB-SELCAL				ALL
	1	D	W0036	087	10		24-54-11	ALL
	1	D	W0036	088	10		24-54-11	ALL
	2	D	W0040	039	22		23-21-11	ALL
C00540		P011-06/ /T034		CB-VIDEO PROJECTION				ALL
	2	D	W0042	089	20		23-32-11	ALL
C00541		P036-00/ /J002		CB-PSUD AFT,R				ALL
	1	D	W0056	004	12		23-34-18	ALL
	2	M	W1044	025	12		24-51-12	050-099
C00542		P037-00/ /K001		CB-CTD,FWD				ALL
	2	D	W0058	013	16		23-34-11	ALL
C00543		P037-00/ /K002		CB-CTD,AFT				ALL
	1	M	W1046	015	12		24-51-22	ALL
	2	D	W0058	014	16		23-34-11	ALL
C00544		P011-01/ /C003		CB-VHF COMM,LEFT				ALL
	1	D	W0032	094	12		24-54-73	ALL
	1	D	W0032	095	12		24-54-73	ALL
	2	D	W0044	147	16		23-12-11	ALL
C00545		P011-05/ /G031		CB-VHF COMM,RIGHT				ALL
	1	LA	W0038	075	08		24-54-21	ALL
	1	LA	W0038	076	08		24-54-21	ALL
	2	D	W0042	069	16		23-12-21	ALL
C00546		P036-00/ /J005		CB-MUX/TAPE REPRO				ALL
	1	D	W0056	003	22		23-34-11	ALL
	2	M	W1044	103	12		24-51-12	050-099
	2	M	W1044	025	12		24-51-12	ALL
	2	M	W1044	046	12		24-51-12	150-199, 275-299
C00547		P011-03/ /T008		CB-PASS. ENTMT/SERVICE CONT				ALL
	2	D	W0040	042	22		23-34-11	ALL
C00548		P011-04/ /C022		CB-PASS. ADRS				ALL
	2	D	W0044	148	18		23-31-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section C00500

Page 4

Jan 21/2005



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C00549		P037-00/ /K005		CB-VIDEO PROJECTOR,FWD				050-099, 150-199
	1	M	W1046	049	12		24-51-22	050-099, 150-199
	2	D	W0058	029	20		23-32-11	050-099, 150-199
C00550		P037-00/ /K006		CB-VIDEO PROJECTOR,MID				050-099, 150-199
	1	D	W1046	902	12		24-51-22	150, 152-199
	2	D	W0058	030	20		23-32-11	050-099, 150-199
C00551		P011-04/ /C023		CB-CAB/SERVICE INTPH				ALL
	2	D	W0044	144	22		23-42-11	ALL
C00555		P037-00/ /K007		CB-VIDEO PROJECTOR,AFT				050-099, 150-199
	1	M	W1046	048	14		24-51-22	050-099, 150-199
	2	D	W0058	031	20		23-32-11	050-099, 150-199
C00556		P011-02/ /G004		CB-VHF COMM,CENTER				ALL
	2	D	W0040	064	16		23-12-31	ALL
C00559		P011-02/ /G006		CB-ACARS,MGMT UNIT AC (INOP)				050-099, 151, 275-299
C00559		P011-02/ /G6		CB ACARS, AC				150, 152-166, 275-299
C00559		P011-02/ /G006		CB-ACARS,MGMT UNIT AC				167-199
	1	D	W0036	031	16		24-51-11	ALL
	2	D	W0040	041	22		23-22-11	ALL
C00560		P011-05/ /H032		CB-GND CALL				ALL
	1	D	W0042	155	22		23-43-11	ALL
	2	LA	W0038	073	08		24-54-21	ALL
	2	LA	W0038	074	08		24-54-21	ALL
C00561		P011-02/ /J007		CB-FLT REC AC				ALL
	1	D	W0036	033	16		24-51-11	ALL
	1	D	W0036	034	16		24-51-11	ALL
	2	D	W0040	037	22		31-31-11	ALL
C00563		P006-01/ /G003		CB-CLOCK TIME BASE,L				ALL
	2	D	W0028	122	24		31-25-11	ALL
C00565		P011-05/ /J034		CB-WARN ELECT A				ALL
	1	D	W0038	025	16		24-51-21	ALL
	1	D	W0038	027	16		24-51-21	ALL

HOOKUP LIST

D280T132

91-21-51

Section C00500

Page 5

Jan 21/2005



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C00565		P011-05/ /J034		CB-WARN ELECT A (continued)				ALL
	2	D	W0042	132	24		31-51-11	ALL
C00566		P011-01/ /B018		CB-WARN ELECT B				ALL
	1	D	W0044	143	24		31-51-12	ALL
	2	D	W0032	108	14		24-54-73	ALL
	2	D	W0032	109	14		24-54-73	ALL
C00567		P011-01/ /B016		CB-SPEAKER,AURAL WARN, L				ALL
	1	D	W0044	142	24		31-51-11	ALL
	2	D	W0032	117	12		24-54-73	050-099
	2	D	W0032	125	12		24-54-73	ALL
	2	D	W0032	099	12		24-54-73	150-199, 275-299
C00568		P011-05/ /H035		CB-SPEAKER,AURAL WARN, R				ALL
	1	D	W0042	198	24		31-51-12	ALL
	2	LA	W0038	074	08		24-54-21	ALL
	2	LA	W0038	075	08		24-54-21	ALL
C00569		P011-02/ /J004		CB-ACMS AC				ALL
	2	D	W0040	504	22		31-35-11	ALL
C00571		P011-02/ /J001		CB-PRINTER (COLLARED & INOP)				ALL
	2	D	W0040	20A	22		31-36-11	ALL
C00573		P011-01/ /B017		CB-CLOCK IND,L				ALL
	1	D	W0040	006	24		31-25-11	ALL
C00574		P011-05/ /J036		CB-CLOCK IND,R				ALL
	1	LA	W0038	068	08		24-54-21	ALL
	1	LA	W0038	069	08		24-54-21	ALL
	2	D	W0042	129	24		31-25-11	ALL
C00576		P006-01/ /G004		CB-CLOCK TIME BASE,R				ALL
	1	LA	W1040	013	08		24-54-72	150-199, 275-299
	1	LA	W1040	014	08		24-54-72	150-199, 275-299
	2	D	W0028	123	24		31-25-11	ALL
C00578		P011-02/ /J008		CB-FLT REC DC				ALL
	1	D	W0036	084	10		24-54-11	050-099

HOOKUP LIST

D280T132

91-21-51

Section C00500

Page 6

Jan 21/2005



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C00578		P011-02/ /J008		CB-FLT REC DC (continued)				ALL
	1	D	W0036	083	10		24-54-11	ALL
	1	D	W0036	163	10		24-54-11	150-199, 275-299
	2	D	W0040	036	22		31-31-11	ALL
C00580		P011-01/ /E001		CB-IAS MACH,L (INOP)				050-099, 153-199, 275-299
C00580		P011-01/ /E001		CB-IAS MACH,L				150-152
	1	D	W0036	040	12		24-51-42	050-099, 150-199, 280-299
	2	D	W0040	004	22		34-13-11	ALL
C00581		P011-04/ /E022		CB-IAS MACH,R (INOP)				050-099, 153-199, 275-299
C00581		P011-04/ /E022		CB-IAS MACH,R				150-152
	1	D	W0038	118	20		24-51-43	ALL
	1	D	W0038	121	20		24-51-43	ALL
	2	D	W0042	127	22		34-13-21	ALL
C00582		P011-01/ /E011		CB-DME,LEFT				ALL
	1	D	W0036	148	12		24-51-14	ALL
	1	D	W0036	149	12		24-51-14	ALL
	2	D	W0040	102	22		34-55-11	ALL
C00583		P011-04/ /E032		CB-DME,RIGHT				ALL
	1	D	W0038	016	16		24-51-21	ALL
	2	D	W0042	079	22		34-55-21	ALL
C00584		P011-01/ /E002		CB-ALTIMETER,L				ALL
	2	D	W0040	005	22		34-13-11	ALL
C00585		P011-04/ /E023		CB-ALTIMETER,R				ALL
	2	D	W0042	128	22		34-13-21	ALL
C00586		P011-01/ /E005		CB-VSI,LEFT				ALL
	2	D	W0040	001	22		34-22-82	ALL
C00587		P011-04/ /E026		CB-VSI,RIGHT				ALL
	1	D	W0038	115	20		24-51-43	ALL
	1	D	W0038	116	20		24-51-43	ALL
	2	D	W0042	123	22		34-22-92	ALL

HOOKUP LIST

D280T132

91-21-51

Section C00500

Page 7

Jan 21/2005



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C00588		P011-01/ /E006		CB-HSI,LEFT				ALL
	1	D	W0036	129	12		24-51-42	ALL
	2	D	W0040	003	24		34-22-16	ALL
C00589		P011-04/ /E027		CB-HSI,RIGHT				ALL
	1	D	W0038	118	20		24-51-43	ALL
	2	D	W0042	124	24		34-22-26	ALL
C00591		P011-01/ /A008		CB-STANDBY ALTIMETER VIBRATOR				ALL
	1	D	W0032	101	12		24-54-73	ALL
	1	D	W0032	102	12		24-54-73	ALL
	2	D	W0044	155	22		34-13-11	ALL
C00592		P011-01/ /F004		CB-GND PROX				ALL
	1	D	W0040	027	22		34-46-11	ALL
	2	D	W0036	125	16		24-51-11	050-099, 275-299
	2	D	W0036	024	16		24-51-11	150-199
C00593		P011-01/ /E003		CB-ADI,LEFT				ALL
	1	D	W0036	040	12		24-51-42	150-199, 280-299
	2	D	W0040	002	24		34-22-16	ALL
C00594		P011-04/ /E024		CB-ADI,RIGHT				ALL
	2	D	W0042	125	24		34-22-26	ALL
C00595		P011-01/ /A001		CB-VOR/MKR,LEFT				ALL
	1	D	W0032	112	14		24-54-73	ALL
	1	D	W0032	115	14		24-54-73	ALL
	2	D	W0044	139	22		34-51-11	ALL
C00596		P011-04/ /E033		CB-VOR,RIGHT				ALL
	2	D	W0042	077	22		34-51-21	ALL
C00597		P011-01/ /E008		CB-FMCS CDU,LEFT				ALL
	1	D	W0036	149	12		24-51-14	150-199, 275-299
	2	D	W0040	032	24		34-61-11	ALL
C00598		P011-04/ /E029		CB-FMCS CDU,RIGHT				ALL
	1	D	W0038	023	16		24-51-21	050-099
	1	D	W0038	021	16		24-51-21	ALL

HOOKUP LIST

D280T132

91-21-51

Section C00500

Page 8

Jan 21/2005



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C00598		P011-04/ /E029		CB-FMCS CDU,RIGHT (continued)				ALL
	1	D	W0038	022	16		24-51-21	150-199, 275-299
	2	D	W0042	087	24		34-61-21	ALL
C00599		P011-04/ /F023		CB-WX RADAR,RIGHT				ALL
	1	D	W0042	135	20		34-43-22	ALL

HOOKUP LIST

D280T132

91-21-51

Section C00500

Page 9 End

Jan 21/2005



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C00600		P011-01/ /F005		CB-RAD ALTM,LEFT				ALL
	1	D	W0040	046	22		34-33-11	ALL
	2	D	W0036	129	12		24-51-42	ALL
	2	D	W0036	130	12		24-51-42	ALL
C00601		P011-04/ /F026		CB-RAD ALTM,RIGHT				ALL
	1	D	W0042	131	22		34-33-21	ALL
	2	D	W0038	116	20		24-51-43	ALL
C00602		P011-04/ /F020		CB-RAD ALTM,CENTER				ALL
	1	D	W0042	157	20		34-33-31	ALL
	2	D	W0038	033	22		24-51-31	ALL
	DED		W0038	033Z			24-51-31	ALL
	DED		W0042	157Z			34-33-31	ALL
C00603		P011-01/ /E010		CB-ILS,L				ALL
	1	D	W0036	127	12		24-51-42	ALL
	1	D	W0036	135	12		24-51-42	ALL
	2	D	W0040	024	22		34-31-11	ALL
C00604		P011-01/ /A009		CB-STDBY ILS INDICATOR				ALL
	2	D	W0044	159	24		34-24-11	ALL
C00605		P011-04/ /E031		CB-ILS,R				ALL
	1	D	W0038	122	20		24-51-43	ALL
	2	D	W0042	073	22		34-31-21	ALL
C00606		P011-01/ /A002		CB-ILS,C				ALL
	1	D	W0032	113	14		24-54-73	ALL
	1	D	W0032	115	14		24-54-73	ALL
	2	D	W0044	153	22		34-31-31	ALL
C00607		P011-01/ /F006		CB-ADF,L				ALL
	1	D	W0040	047	22		34-57-11	ALL
	2	D	W0036	125	16		24-51-11	050-099, 150, 153-199, 275-299
	2	D	W0036	025	16		24-51-11	050-099, 151-152, 275-299
	2	D	W0036	024	16		24-51-11	150-199
C00609		P011-01/ /E009		CB-FMCS COMPUTER,LEFT				ALL
	1	D	W0036	149	12		24-51-14	050-099

HOOKUP LIST

D280T132

91-21-51

Section C00600

Page 1

Jan 21/2005



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C00609		P011-01/ /E009		CB-FMCS COMPUTER,LEFT (continued)				ALL
	2	D	W0040	031	22		34-61-11	ALL
C00610		P011-04/ /E030		CB-FMCS COMPUTER,RIGHT				ALL
	2	D	W0042	086	22		34-61-21	ALL
C00611		P011-01/ /F001		CB-IRS,LEFT				ALL
	1	D	W0040	028	24		34-21-11	ALL
	2	D	W0036	150	12		24-51-14	ALL
C00612		P011-04/ /F022		CB-IRS,RIGHT				ALL
	1	D	W0042	090	24		34-21-21	ALL
	2	D	W0038	019	16		24-51-21	ALL
	2	D	W0038	020	16		24-51-21	ALL
C00613		P011-04/ /F021		CB-IRS,CENTER				ALL
	1	D	W0042	156	24		34-21-31	ALL
	DED		W0042	156Z			34-21-31	ALL
C00614		P006-01/ /D003		CB-IRS,LEFT				ALL
	1	D	W0028	114	16		34-21-11	ALL
	2	LA	W1040	037	08		24-54-72	ALL
	2	LA	W1040	038	08		24-54-72	ALL
C00615		P011-01/ /F002		CB-WX RADAR,LEFT				ALL
	1	D	W0040	008	20		34-43-12	ALL
	2	D	W0036	027	16		24-51-11	ALL
C00616		P011-01/ /F007		CB-ATC,LEFT (SB 24-0069)				050-099, 150-155, 162-165, 275-276
C00616		P011-01/ /F007		CB-ATC,LEFT				156-157, 166-199, 277-299
	1	D	W0040	034	20		34-53-11	050-099, 155-199, 275-299
	1	D	W0040	034	22		34-53-11	150-154
	2	D	W0036	185	12		24-51-14	ALL
	2	D	W0036	025	16		24-51-11	150, 153-199
	2	D	W0036	125	16		24-51-11	150, 153-199
C00617		P011-04/ /F028		CB-ATC,RIGHT				050-099, 155-199, 275-299
C00617		P011-01/ /F028		CB-ATC,RIGHT (SB 34-0082)				150-154
	1	D	W0042	078	20		34-53-21	050-099, 155-199, 275-299
	1	D	W0042	078	22		34-53-21	150-154

HOOKUP LIST

D280T132

91-21-51

Section C00600

Page 2

Jan 21/2005



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C00617		P011-04/ /F028		CB-ATC,RIGHT (continued)				050-099, 155-199, 275-299
C00617		P011-01/ /F028		CB-ATC,RIGHT (SB 34-0082) (continued)				150-154
	2	D	W0038	111	16		24-51-21	ALL
C00619		P011-01/ /A005		CB-STBY ATT INDICATOR				ALL
	1	D	W0032	100	12		24-54-73	ALL
	1	D	W0032	101	12		24-54-73	ALL
	2	D	W0044	160	20		34-24-11	ALL
C00620		P006-01/ /D005		CB-IRS,RIGHT				ALL
	1	D	W0028	196	16		34-21-21	ALL
C00621		P006-01/ /D004		CB-IRS,CENTER				ALL
	1	D	W0028	197	16		34-21-31	ALL
C00622		P011-01/ /A007		CB-EFIS DISPLAY SWITCHING,LEFT				ALL
	2	D	W0040	704	20		34-22-16	ALL
C00623		P011-04/ /F024		CB-EFIS DISPLAY SWITCHING,RIGHT				ALL
	1	D	W0042	169	22		34-22-26	ALL
	2	D	W0038	062	08		24-54-21	ALL
C00625		P011-01/ /A010		CB-AIR DATA COMPUTER,L				ALL
	1	D	W0032	114	14		24-54-73	ALL
	2	D	W0044	077	22		34-12-11	ALL
C00626		P011-04/ /F030		CB-AIR DATA COMPUTER,R				ALL
	1	D	W0042	080	22		34-12-21	ALL
	2	D	W0038	122	20		24-51-43	ALL
C00627		P011-05/ /G024		CB-DATA LOADER				050-099, 155-199, 275-299
C00627		P011-05/ /G024		CB-DATA LOADER (SB 31-0031)				150-154
	1	D	W0038	159	14		24-51-52	050-099
	1	D	W0038	173	12		24-51-52	150-199
	1	D	W0038	159	12		24-51-52	275-276
	1	D	W0038	173	14		24-51-52	277-299
	2	D	W0042	601	22		34-61-15	ALL

HOOKUP LIST

D280T132

91-21-51

Section C00600

Page 3

Jan 21/2005



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C00628		P011-01/ /F012		CB-TCAS (INOP)				050-099, 153-199, 277-299
C00628		P011-01/ /F012		CB-TCAS (INOP) (SB 34-0091)				150-152, 275-276
	1	D	W0040	790	20		34-45-11	050-099, 150-199, 277-299
	2	D	W0036	025	16		24-51-11	050-099, 277-299
	2	D	W0036	198	16		24-51-11	050-099, 277-299
	2	D	W0036	023	16		24-51-11	150-199
C00632		P011-01/ /A003		CB-ADF,R				ALL
	2	D	W0044	716	22		34-57-21	ALL
C00633		P011-01/ /E004		CB-EFIS CONTROL PANEL,LEFT				ALL
	1	D	W0036	040	12		24-51-42	050-099
	1	D	W0036	126	12		24-51-42	ALL
	2	D	W0040	007	24		34-22-16	ALL
C00634		P011-04/ /E025		CB-EFIS CONTROL PANEL,RIGHT				ALL
	1	D	W0038	124	20		24-51-43	ALL
	1	D	W0038	125	20		24-51-43	ALL
	2	D	W0042	126	24		34-22-26	ALL
C00635		P011-01/ /A006		CB-RDMI,LEFT				ALL
	1	D	W0032	113	14		24-54-73	ALL
	1	D	W0032	114	14		24-54-73	ALL
	2	D	W0044	154	24		34-22-81	ALL
C00636		P011-04/ /F025		CB-RDMI,RIGHT				ALL
	1	D	W0042	122	24		34-22-91	ALL
	2	D	W0038	020	16		24-51-21	ALL
	2	D	W0038	111	16		24-51-21	ALL
C00637		P011-01/ /F008		CB-EFIS SYMBOL GENERATOR,LEFT				ALL
	1	D	W0040	013	24		34-22-16	ALL
	2	D	W0036	135	12		24-51-42	ALL
C00638		P011-04/ /F029		CB-EFIS SYMBOL GENERATOR,RIGHT				ALL
	1	D	W0042	084	24		34-22-26	ALL
	2	D	W0038	124	20		24-51-43	ALL
C00639		P011-01/ /F009		CB-EFIS SYMBOL GENERATOR,CENTER				ALL
	1	D	W0040	026	24		34-22-36	ALL

HOOKUP LIST

D280T132

91-21-51

Section C00600

Page 4

Jan 21/2005



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C00639		P011-01/ /F009		CB-EFIS SYMBOL GENERATOR,CENTER (continued)				ALL
	2	D	W0036	130	12		24-51-42	ALL
	2	D	W0036	131	12		24-51-42	ALL
C00644		P011-04/ /C025		CB-FLT AMPL,CAPT OBS,DUAL PWR INTPH				ALL
	2	D	W0044	193	22		23-51-11	ALL
C00645		P011-05/ /G029		CB-FLT AMPL,CAPT OBS,DUAL PWR INTPH				ALL
	1	LA	W0038	057	08		24-54-21	050-099, 150, 152-154, 277-299
	1	LA	W0038	056	08		24-54-21	ALL
	1	LA	W0038	168	08		24-54-21	150-199, 275-276
	2	D	W0042	192	22		23-51-11	ALL
C00646		P011-04/ /C026		CB-F/O,DUAL PWR INTPH				ALL
	1	LA	W0032	004	08		24-54-71	150-199
	1	LA	W0032	005	08		24-54-71	150-199
	2	D	W0044	192	22		23-51-21	ALL
C00647		P011-05/ /G030		CB-F/O,DUAL PWR INTPH				ALL
	2	D	W0042	191	22		23-51-21	ALL
C00651		P011-03/ /P013		CB-EQUIPMENT COOLING OUTBD VALVES				ALL
	1	D	W0040	112	24		21-58-13	ALL
	2	D	W0036	011	12		24-51-11	ALL
	2	D	W0036	117	12		24-51-11	ALL
C00652		P036-00/ /L001		CB-CARGO HEAT VALVE,BULK				ALL
	1	D	W0056	047	24		21-44-21	ALL
C00653		P011-01/ /A013		CB-LEFT PACK FLOW CONT				ALL
	2	D	W0040	113	22		21-51-11	ALL
C00654		P011-03/ /P011		CB-EQUIP COOLING SUPPLY FAN 1				ALL
	1	D	W0040	117	24		21-58-14	ALL
	2	LA	W0036	061	08		24-54-11	ALL
	2	LA	W0036	064	08		24-54-11	ALL
C00656		P011-06/ /P021		CB-EQUIP COOL OVHT/SMOKE/VALVE IND				ALL
	1	D	W0042	064	24		21-58-14	ALL
	1	D	W0042	177	24		21-58-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section C00600

Page 5

Jan 21/2005



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C00656		P011-06/ /P021		CB-EQUIP COOL OVHT/SMOKE/VALVE IND (continued)				ALL
	1	D	W0042	187	24		21-58-16	ALL
C00658		P011-01/ /B015		CB-CABIN ALT CONTROL SELECT				ALL
	1	D	W0044	739	20		21-31-11	ALL
C00660		P011-03/ /R014		CB-CABIN RECIRC FAN,L				ALL
	1	LA	W0036	065	08		24-54-11	ALL
	1	LA	W0036	066	08		24-54-11	ALL
	2	D	W0040	107	24		21-25-11	ALL
C00661		P011-06/ /R023		CB-CABIN RECIRC FAN,R				ALL
	1	LA	W0038	053	08		24-54-21	ALL
	1	LA	W0038	054	08		24-54-21	ALL
	2	D	W0042	040	24		21-25-21	ALL
C00662		P036-00/ /H001		CB-AUXILIARY HEATERS,CAPT,HIGH				ALL
	1	M	W1044	038	10		24-51-13	050-099
	1	M	W1044	105	12		24-51-13	050-099
	1	M	W1044	086	12		24-51-13	150-199
	1	M	W1044	038	12		24-51-13	150-199, 275-299
	2	D	W0056	010	20		21-45-11	ALL
C00663		P036-00/ /H002		CB-AUXILIARY HEATERS,CAPT,LOW				ALL
	1	M	W1044	106	12		24-51-13	050-099
	1	M	W1044	028	12		24-51-13	ALL
	1	M	W1044	087	12		24-51-13	150-199
	2	D	W0056	009	20		21-45-11	ALL
C00664		P036-00/ /E004		CB-CARGO GND EXH B/U VLV				050-099, 151-199, 275-299
C00664		P036-00/ /E004		CB-CARGO GND EXH B/U VLV (TO 210210)				150
	1	D	W0176	01H	22		21-28-11	ALL
	2	D	W0056	01A	08		24-54-11	ALL
C00665		P037-00/ /E003		CB-CARGO GND EXH VLV				050-099, 151-199, 275-299
C00665		P037-00/ /E003		CB-CARGO GND EXH VLV (TO 210210)				150
	1	D	W1118	12M	22		21-28-11	ALL
	2	D	W1046	085	08		24-54-21	050-099, 150, 152-165
	2	D	W1046	084	08		24-54-21	050-099, 162-165
	2	D	W0192	60B	08		24-54-21	150-157, 275-276

HOOKUP LIST

D280T132

91-21-51

Section C00600

Page 6

Jan 21/2005



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C00665		P037-00/ /E003		CB-CARGO GND EXH VLV (continued)				050-099, 151-199, 275-299
C00665		P037-00/ /E003		CB-CARGO GND EXH VLV (TO 210210) (continued)				150
	2	M	W1046	085	08		24-54-21	166-199
	2	M	W1046	084	08		24-54-21	166-199, 277-299
C00666		P037-00/ /E004		CB-CARGO A/C SOV				050-099, 151-199, 275-299
C00666		P037-00/ /E004		CB-CARGO A/C SOV (TO 210210)				150
	1	D	W1118	12L	22		21-28-11	ALL
	2	D	W0192	903	12		24-54-21	150, 152-157
C00667		P011-03/ /R015		CB-ZONE CONTROLLER				ALL
	1	D	W0036	014	12		24-51-11	ALL
	1	D	W0036	019	12		24-51-11	ALL
	2	D	W0040	165	24		21-61-51	ALL
C00668		P011-03/ /R011		CB-AUX ZONE CONTROLLER				ALL
	1	D	W0036	166	12		24-51-11	050-099, 150-199
	1	D	W0036	195	12		24-51-11	050-099, 275-299
	1	D	W0036	010	12		24-51-11	150-199
	1	D	W0036	123	12		24-51-11	275-299
	2	D	W0040	513	24		21-61-51	ALL
C00670		P011-03/ /C033		CB-TRIM AIR				050-099
C00670		P011-04/ /C033		CB-TRIM AIR				150-199, 275-299
	2	D	W0040	077	24		21-61-51	ALL
C00672		P011-02/ /J006		CB-ACMS SENSOR				ALL
	1	D	W0036	047	14		24-53-11	ALL
	1	D	W0036	048	14		24-53-11	ALL
	2	D	W0040	081	22		31-31-15	ALL
C00673		P011-03/ /N010		CB-LEFT PACK AUTO PWR				ALL
	1	D	W0036	008	12		24-51-11	ALL
	1	D	W0036	009	12		24-51-11	050-099, 275-299
	1	D	W0036	174	12		24-51-11	150-199
	2	D	W0040	115	24		21-53-11	ALL
C00674		P011-06/ /N019		CB-RIGHT PACK AUTO PWR				ALL
	1	D	W0038	003	12		24-51-21	ALL
	1	D	W0038	004	12		24-51-21	ALL

HOOKUP LIST

D280T132

91-21-51

Section C00600

Page 7

Jan 21/2005



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C00674		P011-06/ /N019		CB-RIGHT PACK AUTO PWR (continued)				ALL
	2	D	W0042	037	24		21-53-21	ALL
C00676		P033-00/ /D006		CB-AFT EXH FAN 1 AC AVBLE				156-157, 166-199, 277-299
	1	M	W0138	020	12		24-51-52	156-157, 166-199, 277-299
	1	M	W0138	700	12		24-51-52	156-157, 166-199, 277-299
	2	D	W0052	088	24		21-26-11	156-157, 166-199, 277-299
C00677		P011-03/ /R017		CB-GASPER FAN CONTROL				050-099, 150-199
	2	D	W0040	721	24		21-24-11	050-099, 150-199
C00678		P036-00/ /H003		CB-HTR BLKT (INOP) (SB 25A0285)				050-099, 155-199, 276-278
C00678		P036-00/ /H003		CB-HTR BLKT				050-099, 155-199, 276-299
C00678		P036-00/ /H003		CB-HTR BLKT (SB 25-0113)				150-154, 275
	CAP	Y	W0176	72P	22		21-45-22	ALL
C00679		P011-04/ /C019		CB-EQUIP COOL OVERRIDE				ALL
	2	D	W0044	136	24		21-58-16	ALL
C00682		P011-06/ /N027		CB-CARGO HEAT OVERRIDE,BULK				ALL
	1	D	W0038	143	12		24-51-24	ALL
	2	D	W0042	185	24		21-44-21	ALL
C00683		P011-01/ /B014		CB-CABIN ALTITUDE CONTROL MANUAL				ALL
	1	D	W0044	135	20		21-31-31	ALL
C00684		P036-00/ /L003		CB-CARGO HEAT CONTROL VALVE,AFT				ALL
	1	D	W0056	028	24		21-44-11	ALL
C00685		P011-06/ /R021		CB-CARGO HEAT OVERRIDE,FWD				ALL
	1	D	W0038	137	12		24-51-24	ALL
	1	D	W0038	147	12		24-51-24	ALL
	2	D	W0042	060	24		21-43-11	ALL
C00686		P011-03/ /P015		CB-CABIN ALT CONTROL AUTO 1				ALL
	1	D	W0040	109	20		21-31-11	ALL
	2	D	W0036	164	12		24-51-14	ALL
	2	D	W0036	165	12		24-51-14	ALL

HOOKUP LIST

D280T132

91-21-51

Section C00600

Page 8

Jun 06/2008

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C00687		P011-06/ /P022		CB-EQUIPMENT COOLING EXHAUST FAN FWD				ALL
	1	D	W0042	042	24		21-58-15	ALL
	2	LA	W0038	050	08		24-54-21	150-199, 275-299
	2	LA	W0038	155	08		24-54-21	150-199, 275-299
C00688		P011-01/ /B008		CB-EQUIPMENT COOLING STANDBY				ALL
	1	D	W0044	740	24		21-58-12	ALL
C00689		P011-06/ /N026		CB-CARGO HEAT CONTROL,BULK				ALL
	2	D	W0042	186	24		21-44-21	ALL
C00690		P011-06/ /R020		CB-CARGO HEAT CONTROL,AFT				ALL
	1	LA	W0038	052	08		24-54-21	050-099
	1	LA	W0038	053	08		24-54-21	050-099
	2	D	W0042	159	24		21-44-11	ALL
C00691		P011-06/ /R022		CB-CARGO HEAT OVERRIDE,AFT				ALL
	2	D	W0042	062	24		21-44-11	ALL
C00692		P011-03/ /R012		CB-DOOR HEAT CONT				050-099, 155-199, 276-299
C00692		P011-03/ /R012		CB-DOOR HEAT CONT (SB 25-0113)				150-154, 275
	2	D	W0040	70B	24		21-45-22	ALL
	2	D	W0040	760	24		21-45-21	ALL
C00693		P011-06/ /P020		CB-CARGO A/C & VENT CONT				050-099, 275-299
C00693		P011-06/ /P020		CB-CARGO A/C & VENT CONT (TO 210210)				150
C00693		P011-06/ /P020		CB-CARGO A/C & VENT CONT (INOP)				151-199
	1	D	W0042	01A	22		21-26-31	ALL
C00694		P011-04/ /C020		CB-CARGO EXH VLV				050-099, 275-299
C00694		P011-03/ /C020		CB-CARGO EXH VLV (TO 210210)				150
C00694		P011-04/ /C020		CB-CARGO EXH VLV (INOP)				151-199
	2	D	W0044	01A	22		21-28-11	ALL
C00696		P036-00/ /L002		CB-CARGO HEAT CONTROL VALVE,FWD				ALL
	1	D	W0056	046	24		21-43-11	ALL
	2	M	W1044	020	14		24-51-12	ALL
	2	M	W1044	019	12		24-51-12	050-099, 155-199, 276-299
	2	M	W1044	031	12		24-51-12	150-154, 275

HOOKUP LIST

D280T132

91-21-51

Section C00600

Page 9

Jan 21/2005



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C00697		P011-06/ /R019		CB-CARGO HEAT CONTROL,FWD				ALL
	1	LA	W0038	052	08		24-54-21	150-199, 275-299
	1	LA	W0038	053	08		24-54-21	150-199, 275-299
	2	D	W0042	061	24		21-43-11	ALL
C00699		P037-00/ /H001		CB-AUXILIARY HEATERS,F/O,HIGH				ALL
	1	M	W1046	028	12		24-51-23	ALL
	1	M	W1046	045	12		24-51-23	050-099, 275-299
	1	M	W1046	044	12		24-51-23	150-199
	2	D	W0058	018	20		21-45-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section C00600

Page 10 End

Jan 21/2005

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C00700		P037-00/ /H002		CB-AUXILIARY HEATERS,F/O,LOW				ALL
	1	M	W1046	024	12		24-51-23	ALL
	1	M	W1046	025	14		24-51-23	ALL
	2	D	W0058	019	20		21-45-11	ALL
C00701		P011-06/ /P023		CB-CABIN ALT CONTROL AUTO. 2				ALL
	1	D	W0042	015	20		21-31-21	ALL
	2	D	W0038	147	12		24-51-24	ALL
C00702		P011-03/ /N011		CB-LEFT PACK AUTO CONT				ALL
	1	/	W0036	059	08		24-54-11	050-099, 150-156, 162-166, 275
	1	LA	W0036	060	08		24-54-11	ALL
	1	LA	W0036	059	08		24-54-11	157, 167-199, 276-299
	2	D	W0040	116	24		21-53-11	ALL
C00703		P011-06/ /N020		CB-RIGHT PACK AUTO CONT				ALL
	1	LA	W0038	045	08		24-54-21	ALL
	1	LA	W0038	046	08		24-54-21	050-099, 150-199, 277-299
	1	/	W0038	046	08		24-54-21	275-276
	2	D	W0042	038	24		21-53-21	ALL
C00704		P011-04/ /A026		CB-RIGHT PACK FLOW CONT				ALL
	2	D	W0042	030	24		21-51-21	ALL
C00705		P011-03/ /P010		CB-EQUIPMENT COOLING AFT FAN EXH 2				ALL
	1	D	W0040	163	24		21-26-11	ALL
C00706		P011-06/ /P019		CB-EQUIPMENT COOLING AFT FAN EXH 1				ALL
	1	D	W0042	043	24		21-26-11	ALL
	2	LA	W0038	050	08		24-54-21	050-099
	2	LA	W0038	052	08		24-54-21	ALL
	2	LA	W0038	155	08		24-54-21	150-199, 275-299
C00707		P034-00/ /L008		CB-EQUIP COOL AFT FAN 1				ALL
	1	D	W0054	015	24		21-26-11	ALL
	2	D	W1012	007	10		24-54-61	ALL
	2	D	W1012	009	10		24-54-61	050-099, 162-165
	2	D	W1012	058	10		24-54-61	150-199
	2	D	W1012	064	10		24-54-61	156-157, 166-199, 275-299

HOOKUP LIST

D280T132

91-21-51

Section C00700

Page 1

Jan 21/2005



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C00709		P011-03/ /N017		CB-PACK FLOW INDICATION				ALL
	1	D	W0036	006	12		24-51-11	ALL
	1	D	W0036	007	12		24-51-11	ALL
	2	D	W0040	120	24		21-52-41	ALL
C00711		P006-01/ /D006		CB-EQUIP COOL GND WARN				ALL
	1	D	W0028	138	24		21-58-11	ALL
C00724		P011-02/ /H007		CB-HF/SAT AUDIO SW (MTO-238591/2/3)				150, 153-155, 162-165
C00724		P011-02/ /H007		CB-HF/SAT AUDIO SW(INOP)(MTO-238591/2/3)				156-157, 166-199
C00724		P011-02/ /H007		CB-HF/SAT AUDIO SW (INOP)				156-157, 166-199, 277-299
	1	D	W0040	524	24		23-25-14	150, 153-199, 277-299
	2	D	W0036	901	16		24-54-11	150, 153-155, 162-165
	2	D	W0036	902	16		24-54-11	150, 153-155, 162-165
	2	D	W0036	904	16		24-54-11	156-157, 166-199
C00725		P011-01/ /B001		CB-FMS SW, L				ALL
	1	D	W0044	01C	22		34-61-16	050-099, 275-299
	1	D	W0032	100	12		24-54-73	150-199
	1	D	W0032	117	12		24-54-73	150-199
	2	D	W0032	099	12		24-54-73	050-099
	2	D	W0032	117	12		24-54-73	050-099, 275-299
	2	D	W0044	01C	22		34-61-16	150-199
	2	D	W0032	100	12		24-54-73	275-299
C00726		P011-04/ /F033		CB-FMS SW, R				ALL
	1	D	W0042	01D	24		34-61-26	150-199, 275-299
	2	D	W0042	01D	24		34-61-26	050-099
C00730		P006-04/ /J023		CB-MID CABIN SERVICE OUTLETS				ALL
	1	D	W1030	055	18		25-29-11	ALL
	2	D	W1030	030	12		24-51-52	ALL
	2	D	W1030	054	12		24-51-52	ALL
C00731		P033-00/ /D007		CB-SVCE OUTLETS				ALL
	1	M	W0138	041	12		24-51-52	050-099, 150-199, 277-299
	2	D	W0052	025	18		25-29-11	ALL
C00732		P011-06/ /U030		CB-SVCE OUTLET-DC				ALL
	1	D	W0042	063	22		25-29-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section C00700

Page 2

Jan 21/2005



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C00732		P011-06/ /U030		CB-SVCE OUTLET-DC (continued)				ALL
	2	LA	W0038	134	08		24-54-21	050-099
	2	LA	W0038	083	08		24-54-21	ALL
	2	LA	W0038	084	08		24-54-21	150-199, 275-299
C00734		P036-00/ /D001		CB-LAV SHAVERS				ALL
	1	M	W1044	027	10		24-51-13	050-099
	1	M	W1044	107	10		24-51-13	050-099
	1	M	W1044	024	12		24-51-13	150-199
	1	M	W1044	027	12		24-51-13	150-199, 275-299
	1	M	W1044	02A	12		24-51-13	275-299
	2	D	W0056	006	20		25-42-11	ALL
C00737		P011-03/ /U007		CB-AFT GALLEYS				050-099, 150-199, 275-276
	1	D	W0040	088	16		25-31-21	050-099, 150-199, 275-276
	2	LA	W0036	143	08		24-54-11	050-099
	2	LA	W0036	074	08		24-54-11	050-099, 150-199, 275-276
	2	LA	W0036	118	08		24-54-11	150-199, 275-276
C00740		P011-06/ /U033		CB-FWD GALLEY PWR				ALL
	1	D	W0042	103	20		25-31-11	050-099, 150-199
	1	D	W0042	103	16		25-31-11	275-299
	2	LA	W0038	082	08		24-54-21	050-099
	2	LA	W0038	135	08		24-54-21	050-099
	2	LA	W0038	088	08		24-54-21	150-199, 275-299
	2	LA	W0038	129	08		24-54-21	150-199, 275-299
C00741		P011-03/ /U008		CB-R AFT GALLEY				277-299
	1	D	W0040	741	16		25-31-31	277-299
	2	LA	W0036	074	08		24-54-11	277-299
	2	LA	W0036	143	08		24-54-11	277-299
C00742		P011-03/ /U007		CB-L AFT GALLEY				277-299
	1	D	W0040	088	16		25-31-21	277-299
	2	LA	W0036	118	08		24-54-11	277-299
	2	LA	W0036	143	08		24-54-11	277-299
C00746		P034-00/ /J002		CB-CONT-CARGO HDLG-FWD				ALL
	1	D	W0054	008	16		25-53-11	ALL
	2	D	W1012	005	10		24-54-61	ALL

HOOKUP LIST

D280T132

91-21-51

Section C00700

Page 3

Jan 21/2005



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C00746		P034-00/ /J002		CB-CONT-CARGO HDLG-FWD (continued)				ALL
	2	D	W1012	006	10		24-54-61	ALL
C00747		P034-00/ /J003		CB-CONT-CARGO HDLG-AFT				ALL
	1	D	W0054	009	16		25-53-21	ALL
C00748		P006-01/ /F002		CB-EVAC SIGNAL				ALL
	1	D	W0028	022	18		25-63-11	ALL
C00749		P006-01/ /B007		CB-CHILLER SHUTDOWN CONT				050-099, 155-199, 277-299
	1	D	W0028	501	20		25-33-11	050-099, 155-199, 277-299
C00763		P011-05/ /K030		CB-FIRE DET ALTN PWR,L ENG				ALL
	1	D	W0042	730R	22		26-11-11	ALL
C00764		P011-05/ /K031		CB-FIRE DET ALTN PWR,R ENG				ALL
	1	D	W0042	734R	22		26-11-21	ALL
C00765		P011-05/ /K032		CB-FIRE DET ALTN PWR,APU				ALL
	1	D	W0042	738R	22		26-15-11	ALL
C00766		P011-05/ /K033		CB-FIRE DET ALTN PWR,CARGO				ALL
	1	D	W0042	740R	24		26-16-11	ALL
C00767		P011-05/ /K034		CB-OVHT DET ALTN PWR,L ENG				ALL
	1	D	W0042	732R	22		26-11-12	ALL
C00768		P011-05/ /K035		CB-OVHT DET ALTN PWR,R ENG				ALL
	1	D	W0042	736R	22		26-11-22	ALL
	2	LA	W0038	068	08		24-54-21	ALL
	2	LA	W0038	106	08		24-54-21	ALL
C00769		P011-01/ /B010		CB-WW FIRE/DUCT LEAK				ALL
	1	D	W0044	735R	22		26-17-11	ALL
C00770		P011-05/ /K036		CB-SMOKE DETECTORS				050-099, 150-199
	1	D	W0042	20B	18		26-13-11	050-099, 150-199
C00772		P011-04/ /B026		CB-CAR. FIRE DET 1				ALL
	1	D	W0044	007R	24		26-16-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section C00700

Page 4

Jan 21/2005



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C00773		P006-01/ /H006		CB-FEXT BTL 2,CARGO				ALL
	1	D	W0028	049R	20		26-23-11	050-099, 150-199
	1	D	W0028	049R	20		26-23-12	275-299
C00774		P011-04/ /B020		CB-FIRE DETECTION L ENGINE 1				ALL
	1	D	W0044	004R	22		26-11-11	ALL
C00775		P011-04/ /B022		CB-FIRE DETECTION R ENGINE 1				ALL
	1	D	W0044	029R	22		26-11-21	ALL
C00776		P011-04/ /B024		CB-FIRE DETECTION APU 1				ALL
	1	D	W0044	013R	22		26-15-11	ALL
C00778		P006-01/ /H001		CB-FIRE EXTINGUISHING ENG L BTL 1				ALL
	1	D	W0028	054R	20		26-21-11	ALL
C00779		P006-01/ /H003		CB-FIRE EXTINGUISHING ENG R BTL 1				ALL
	1	D	W0028	045R	20		26-21-11	ALL
	2	D	W1040	013	08		24-54-72	ALL
C00780		P006-01/ /G001		CB-APU FIRE EXT 1				ALL
	2	D	W0028	047R	20		26-22-21	ALL
C00781		P006-01/ /H005		CB-FEXT BTL 1,CARGO				ALL
	1	D	W0028	056R	20		26-23-11	ALL
C00782		P006-01/ /G002		CB-APU FIRE EXT 2				275-299
	2	D	W0028	042R	20		26-22-21	275-299
C00783		P011-04/ /B021		CB-FIRE DETECTION L ENGINE 2				ALL
	1	D	W0044	043R	22		26-11-11	ALL
C00784		P011-04/ /B023		CB-FIRE DETECTION R ENGINE 2				ALL
	1	D	W0044	030R	22		26-11-21	ALL
C00785		P011-04/ /B025		CB-FIRE DETECTION APU 2				ALL
	1	D	W0044	033R	22		26-15-11	ALL
C00786		P006-01/ /H002		CB-FIRE EXTINGUISHING ENG L BTL 2				ALL
	1	D	W0028	055R	20		26-21-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section C00700

Page 5

Jan 21/2005



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C00787		P006-01/ /H004		CB-FIRE EXTINGUISHING ENG R BTL 2				ALL
	1	D	W0028	046R	20		26-21-11	ALL
C00788		P011-04/ /B027		CB-CAR. FIRE DET 2				ALL
	1	D	W0044	025R	24		26-16-11	ALL
C00789		P011-04/ /B029		CB-OVERHEAT DETECT L ENGINE 1				ALL
	1	D	W0044	006R	22		26-11-12	ALL
C00790		P011-04/ /B030		CB-OVERHEAT DETECT L ENGINE 2				ALL
	1	D	W0044	044R	22		26-11-12	ALL
C00791		P011-04/ /B031		CB-OVERHEAT DETECT R ENGINE 1				ALL
	1	D	W0044	031R	22		26-11-22	ALL
C00792		P011-04/ /B032		CB-OVERHEAT DETECT R ENGINE 2				ALL
	1	D	W0044	032R	22		26-11-22	ALL
C00793		P011-04/ /B019		CB-FIRE SWITCH UNLOCK				ALL
	1	D	W0044	171R	22		26-11-11	ALL
	2	LA	W0032	007	08		24-54-71	ALL
	2	LA	W0032	004	08		24-54-71	050-099, 275-299
	2	LA	W0032	005	08		24-54-71	150-199
C00794		P011-06/ /U036		CB-CARGO FIRE DET FAN AC				ALL
	1	D	W0042	195	20		26-16-21	ALL
	2	D	W0038	035	12		24-51-52	ALL
	2	D	W0038	095	12		24-51-52	ALL
C00795		P011-06/ /U035		CB-CARGO FIRE DET FAN DC				ALL
	1	D	W0042	180	20		26-16-21	ALL
	2	LA	W0038	086	08		24-54-21	050-099
	2	LA	W0038	135	08		24-54-21	050-099
	2	LA	W0038	082	08		24-54-21	150-199, 275-299
	2	LA	W0038	129	08		24-54-21	150-199, 275-299
C00796		P011-04/ /B034		CB-APU REMOTE FIRE IND				ALL
	1	D	W0044	034R	22		26-15-12	ALL

HOOKUP LIST

D280T132

91-21-51

Section C00700

Page 6

Jan 21/2005



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C00799		P011-04/ /B033		CB-WHEEL WELL FIRE IND				ALL
	1	D	W0044	736R	22		26-17-11	ALL

HOOKUP LIST
D280T132

91-21-51
Section C00700
Page 7 End
Jan 21/2005



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C00800		P006-01/ /C004		CB-BUS TIE ENABLE				ALL
	1	LA	W1040	012	08		24-54-72	ALL
	1	LA	W1040	039	08		24-54-72	ALL
	2	D	W0028	157	24		24-41-11	ALL
	DED		W0028	157Z			24-41-11	ALL
C00801		P006-02/ /C012		CB-DC VOLT SENSE,LEFT				ALL
	1	D	W1026	036	24		24-34-11	ALL
	1	D	W1026	037	24		24-32-11	ALL
	1	D	W1026	059	24		24-51-43	ALL
	2	D	W1032	005	06		24-32-11	ALL
C00802		P006-02/ /G011		CB-DC VOLT SENSE,RIGHT				ALL
	1	D	W1030	045	24		24-51-42	ALL
	1	D	W1030	046	24		24-34-11	ALL
	1	D	W1030	047	24		24-32-11	ALL
	2	D	W1036	003	06		24-32-11	ALL
C00803		P011-06/ /T032		CB-BPCU SECONDARY				ALL
	2	D	W0042	183	20		24-41-11	ALL
C00804		P006-01/ /B001		CB-LEFT GEN CONT UNIT				ALL
	1	D	W0028	038	20		24-11-11	ALL
	DED		W0028	038Z			24-11-11	ALL
C00805		P006-01/ /B002		CB-RIGHT GEN CONT UNIT				ALL
	1	D	W0028	003	20		24-11-21	ALL
C00806		P006-01/ /B003		CB-CONT UNIT,APU GEN				ALL
	1	D	W0028	041	20		24-22-41	ALL
	2	D	W1040	010	12		24-54-71	ALL
	2	D	W1040	044	12		24-54-71	ALL
C00807		P006-01/ /B005		CB-GEN DRIVE DISC,L				ALL
	1	D	W0028	023	18		24-11-11	ALL
C00808		P006-01/ /B006		CB-GEN DRIVE DISC,R				ALL
	1	D	W0028	004	18		24-11-21	ALL

HOOKUP LIST

D280T132

91-21-51

Section C00800

Page 1

Jan 21/2005



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C00809		P006-01/ /B004		CB-CONT UNIT,BUS POWER				ALL
	1	D	W0028	043	20		24-41-11	ALL
	2	D	W1040	047	12		24-54-71	ALL
C00811		P011-01/ /D002		CB-STBY BUS-DC				ALL
	1	D	W0044	705	24		24-33-11	ALL
	2	D	W0032	093	12		24-54-73	ALL
	2	D	W0032	094	12		24-54-73	ALL
C00813		P006-02/ /J012		CB-INV PWR-BAT.				ALL
	1	F	W1040	004	06		24-33-11	ALL
	2	F	W1042	003	06		24-31-11	050-099, 150-154, 162-163, 275-276
	2	F	W1042	006	06		24-31-11	050-099, 150-154, 162-163, 275-276
	2	F3	W1042	003	06		24-31-11	155-157, 164-199, 277-299
	2	F3	W1042	006	06		24-31-11	155-157, 164-199, 277-299
C00814		P006-01/ /D002		CB-BAT. XFER CONT				ALL
	1	D	W0028	080	24		24-33-11	ALL
	2	D	W1040	002	08		24-33-11	ALL
C00815		P034-00/ /M008		CB-APU GEN VOLTMETER				ALL
	1	D	W0054	034	18		24-28-11	ALL
	2	D	W0054	029	24		24-28-11	ALL
C00816		P034-00/ /M009		CB-EXT PWR VOLTMETER				ALL
	1	D	W0054	040	18		24-28-11	ALL
	2	D	W0054	028	24		24-28-11	ALL
C00817		P006-03/ /L016		CB-INVERTER VOLT SENSE				ALL
	1	D	W0046	037	24		24-28-11	ALL
	2	D	W1026	032	14		24-33-11	ALL
C00818		P031-00/ /		CB-LEFT GEN VOLTMETER				ALL
	1	D	W0022	031	18		24-28-11	ALL
	2	D	W0022	030	24		24-28-11	ALL
C00819		P032-00/ /		CB-RIGHT GEN VOLTMETER				ALL
	1	D	W1020	012	18		24-28-11	ALL
	2	D	W0024	039	24		24-28-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section C00800

Page 2

Jan 21/2005



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C00820		P049-00/ /B004		CB-APU BAT. OVHT PROT				ALL
	1	D	W1050	017	14		24-31-41	ALL
	1	D	W1050	080	14		24-31-41	ALL
	2	D	W0030	063	24		24-31-41	ALL
C00821		P049-00/ /B003		CB-APU BAT. DC VOLT				ALL
	1	D	W1050	080	14		24-31-41	ALL
	2	D	W1050	079	24		24-34-11	ALL
C00822		P011-03/ /T004		CB-UTILITY BUS L				ALL
	1	D	W0036	072	08		24-54-11	050-099
	1	LA	W0036	072	08		24-54-11	150-199, 275-299
	1	LA	W0036	118	08		24-54-11	150-199, 275-299
	2	D	W0040	066	20		24-51-13	ALL
C00823		P011-06/ /T031		CB-UTILITY BUS,R				ALL
	1	LA	W0038	088	08		24-54-21	050-099
	1	LA	W0038	082	08		24-54-21	ALL
	1	LA	W0038	086	08		24-54-21	150-199, 275-299
	2	D	W0042	100	20		24-51-23	ALL
C00824		P011-03/ /T003		CB-CAT. III BUS ISOL LEFT				ALL
	2	D	W0040	197	24		24-51-31	ALL
C00825		P011-06/ /T030		CB-CAT. III BUS ISOL RIGHT				ALL
	2	D	W0042	181	24		24-51-31	ALL
C00826		P011-01/ /D006		CB-CAT. III BUS ISOL BAT.				ALL
	1	D	W0044	197	24		24-51-31	ALL
	2	D	W0032	092	12		24-54-73	ALL
	2	D	W0032	093	12		24-54-73	ALL
C00827		P006-01/ /D001		CB-BAT. OVHT PROT				ALL
	1	D	W0028	039	24		24-31-11	ALL
	2	LA	W1040	016	08		24-54-72	ALL
	2	LA	W1040	037	08		24-54-72	ALL
C00828		P006-01/ /A005		CB-STBY PWR CONT				ALL
	1	D	W1040	009	12		24-54-71	ALL
	1	D	W1040	010	12		24-54-71	ALL

HOOKUP LIST

D280T132

91-21-51

Section C00800

Page 3

Jan 21/2005

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C00828		P006-01/ /A005		CB-STBY PWR CONT (continued)				ALL
	2	D	W1040	035	24		24-33-11	ALL
	DED		W1040	035Z			24-33-11	ALL
C00829		P006-01/ /A001		CB-BAT. BUS DISTR				ALL
	2	D	W1040	009	12		24-54-71	ALL
C00830		P006-02/ /G012		CB-HYD GEN 28 VDC PWR				ALL
	1	D	W1042	010	06		24-31-11	050-099, 150-154, 162-163, 275-276
	1	M	W1042	010	06		24-31-11	155-157, 164-199, 277-299
	2	D	W1042	002	06		24-31-11	050-099, 150-154, 162-163, 275-276
	2	D	W1042	009	06		24-31-11	050-099, 150-154, 162-163, 275-276
	2	M	W1042	001	06		24-31-11	155-157, 164-199, 277-299
	2	M	W1042	007	06		24-31-11	155-157, 164-199, 277-299
C00831		P034-00/ /D009		CB-GND HDLG BUS EXT PWR PH A				ALL
	1	F3	W1006	001	06		24-51-61	ALL
	2	F3	W1008	001	06		24-51-61	ALL
C00832		P034-00/ /D010		CB-GND HDLG BUS EXT PWR PH B				ALL
	1	F3	W1006	002	06		24-51-61	ALL
	2	F3	W1008	002	06		24-51-61	ALL
C00833		P034-00/ /D011		CB-GND HDLG BUS EXT PWR PH C				ALL
	1	F3	W1006	003	06		24-51-61	ALL
	2	F3	W1008	003	06		24-51-61	ALL
C00834		P034-00/ /B012		CB-GND HDLG BUS APU PWR PH A				ALL
	1	F3	W1002	001	06		24-51-61	ALL
	2	F3	W1004	001	06		24-51-61	ALL
C00835		P034-00/ /B013		CB-GND HDLG BUS APU PWR PH B				ALL
	1	F3	W1002	002	06		24-51-61	ALL
	2	F3	W1004	002	06		24-51-61	ALL
C00836		P034-00/ /B014		CB-GND HDLG BUS APU PWR PH C				ALL
	1	F3	W1002	003	06		24-51-61	ALL
	2	F3	W1004	003	06		24-51-61	ALL

HOOKUP LIST

D280T132

91-21-51

Section C00800

Page 4

Jan 21/2005



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C00837		P011-02/ /M004		CB-IDG VALVE,LEFT ENG				ALL
	1	D	W0040	087	24		24-11-11	ALL
C00838		P011-05/ /M031		CB-IDG VALVE,RIGHT ENG				ALL
	1	D	W0042	170	24		24-11-21	ALL
	2	LA	W0038	065	08		24-54-21	ALL
	2	LA	W0038	066	08		24-54-21	ALL
C00839		P006-02/ /G013		CB-MEDICAL OUTLETS (INOP)				ALL
	1	D	W1030	057	06		25-29-12	ALL
	2	D	W1036	004	08		24-54-21	ALL
C00843		P006-03/ /K018		CB-28V AC BUS L XFR				ALL
	1	D	W1026	063	12		24-51-14	ALL
	1	D	W1026	069	12		24-51-14	ALL
	2	D	W1026	064	20		24-51-14	ALL
C00844		P006-04/ /J024		CB-28V AC BUS R XFR				ALL
	1	D	W0048	085	22		24-51-24	ALL
	2	D	W0048	083	12		24-51-24	ALL
	2	D	W0048	084	12		24-51-24	ALL
C00845		P065-00/ /		CB-HYD GEN DC VOLT SENSE				ALL
	1	D	W2058	084	06		24-25-13	ALL
	2	D	W2058	080	24		24-25-13	ALL
C00846		P065-00/ /		CB-HYD GEN AC VOLT SENSE				ALL
	1	D	W2058	085	12		24-25-13	ALL
	2	D	W2058	081	24		24-25-13	ALL
C00847		P011-03/ /R004		CB-L AC BUS SENSE				ALL
	1	D	W0036	017	12		24-51-11	ALL
	1	D	W0036	147	12		24-51-11	ALL
	2	D	W0040	762	22		24-25-11	ALL
C00848		P011-06/ /R031		CB-R AC BUS SENSE				ALL
	1	D	W0038	013	12		24-51-21	ALL
	1	D	W0038	015	12		24-51-21	ALL
	2	D	W0042	758	22		24-25-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section C00800

Page 5

Jan 21/2005



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C00853		P011-06/ /T029		CB-GROUND SVCE LOAD CONT				ALL
	2	D	W0042	001	24		24-51-52	ALL
C00865		P011-06/ /T035		CB-TRU APU START CONTROL				275-299
	2	D	W0042	722	20		24-32-41	275-299
C00868		P049-00/ /E004		CB-APU BAT. CHGR				ALL
	1	F	W1048	005	08		24-31-41	ALL
	1	F	W1048	008	08		24-31-41	ALL
	2	FP	W1048	006	*1		24-31-41	050-099, 155-199, 276-299
	2	F	W1048	006	*1		24-31-41	150-154, 275
C00869		P049-00/ /E003		CB-APU BAT. BUS				ALL
	1	D	W1048	008	08		24-31-41	ALL
	2	D	W1050	014	14		24-31-41	ALL
C00870		P033-00/ /D001		CB-GND SERVICE BUS,SECT 2				ALL
	1	M	W0138	008	12		24-51-52	ALL
	1	M	W0138	009	12		24-51-52	ALL
	2	D	W0052	028	12		24-51-52	ALL
C00871		P033-00/ /D002		CB-GND SERVICE XFMR				ALL
	1	M	W0138	027	10		24-51-52	ALL
	1	M	W0138	042	12		24-51-52	ALL
	2	M	W0138	046	12		24-53-51	ALL
C00872		P006-01/ /A002		CB-DC STBY				ALL
	1	D	W1040	006	08		24-33-11	ALL
	2	D	W1040	023	14		24-33-11	ALL
C00874		P006-03/ /J017		CB-AC STBY BUS PWR				ALL
	1	D	W1026	035	18		24-33-11	ALL
	2	D	W1026	060	12		24-51-14	ALL
	2	D	W1026	061	12		24-51-14	ALL
C00875		P006-03/ /L015		CB-INVERTER-CTR BUS ISLN PWR				ALL
	1	D	W0046	036	22		24-51-31	ALL
	DED		W0046	036Z			24-51-31	ALL

HOOKUP LIST

D280T132

91-21-51

Section C00800

Page 6

Jan 21/2005



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C00876		P006-03/ /J018		CB-CTR BUS AC				ALL
	1	D	W1026	014	22		24-51-31	ALL
	2	D	W1024	036	08		24-51-11	ALL
C00877		P006-03/ /J019		CB-28V AC BUS LEFT				ALL
	1	D	W1026	011	16		24-53-11	ALL
	DED		W1026	011Z			24-53-11	ALL
C00878		P006-04/ /J025		CB-28V AC BUS RIGHT				ALL
	1	D	W1030	012	16		24-53-21	ALL
	2	LA	W1028	008	08		24-51-21	ALL
	2	LA	W1028	020	08		24-51-21	ALL
C00879		P006-01/ /A006		CB-DC BUS TIE CONT				ALL
	2	D	W0028	018	24		24-32-11	ALL
C00880		P006-01/ /G007		CB-C BUS CONT				ALL
	2	D	W0028	078	18		24-51-31	ALL
C00881		P006-02/ /D010		CB-DC TIE,LEFT				ALL
	1	F	W1026	019	06		24-32-11	ALL
	2	F	W1032	001	06		24-32-11	ALL
	2	F	W1032	002	06		24-32-11	ALL
	2	F	W1032	003	06		24-32-11	ALL
C00882		P006-02/ /D009		CB-DC BUS L SECT 1				ALL
	1	D	W1026	015	08		24-54-11	ALL
	2	D	W1032	004	06		24-32-11	ALL
C00883		P006-02/ /D008		CB-DC BUS L SECT 2				ALL
	1	D	W1026	016	10		24-54-11	ALL
	1	D	W1026	084	08		24-54-11	ALL
	2	D	W1032	002	06		24-32-11	ALL
C00884		P006-02/ /C010		CB-CTR BUS PWR				ALL
	1	D	W1026	013	18		24-51-31	ALL
	2	D	W1032	004	06		24-32-11	ALL
C00885		P006-02/ /D011		CB-INVERTER PWR-TRU				ALL
	1	D	W1026	018	08		24-33-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section C00800

Page 7

Jan 21/2005



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C00885		P006-02/ /D011		CB-INVERTER PWR-TRU (continued)				ALL
	2	D	W1032	005	06		24-32-11	ALL
C00886		P006-02/ /D012		CB-BAT. BUS PWR-TRU				ALL
	1	LA	W1026	017	08		24-33-11	ALL
	1	LA	W1026	020	08		24-33-11	ALL
	2	D	W1032	003	06		24-32-11	ALL
	2	D	W9045	901	10		24-32-11	150, 152-199
C00887		P006-02/ /C011		CB-BAT. BUS CONT				ALL
	1	D	W1026	038	24		24-33-11	ALL
	2	D	W1026	020	08		24-33-11	ALL
C00889		P006-02/ /G010		CB-DC TIE,RIGHT				ALL
	1	F	W1030	004	06		24-32-11	ALL
	2	F	W1036	001	06		24-32-11	ALL
	2	F	W1036	002	06		24-32-11	ALL
C00890		P006-02/ /G008		CB-DC BUS R SECT 2				ALL
	1	D	W1030	015	08		24-54-21	ALL
	2	D	W1036	002	06		24-32-11	ALL
C00891		P006-02/ /G009		CB-DC BUS R SECT 1				ALL
	1	LA	W1030	014	08		24-54-21	ALL
	1	LA	W1030	056	08		24-54-21	ALL
	1	LA	W1030	062	08		24-54-21	153-157
	2	D	W1036	003	06		24-32-11	ALL
C00892		P011-01/ /D001		CB-STBY BUS-AC				ALL
	1	D	W0044	704	24		24-33-11	ALL
	2	D	W0032	104	14		24-54-73	ALL
	2	D	W0032	105	14		24-54-73	ALL
C00896		P006-02/ /J009		CB-MAIN BAT. CHARGER				ALL
	1	F	W1040	001	06		24-31-11	ALL
	2	F	W1042	001	06		24-31-11	050-099, 150-154, 162-163, 275-276
	2	F	W1042	002	06		24-31-11	050-099, 150-154, 162-163, 275-276
	2	F	W1042	004	06		24-31-11	050-099, 150-154, 162-163, 275-276
	2	F3	W1042	004	06		24-31-11	155-157, 164-199, 277-299
	2	F3	W1042	006	06		24-31-11	155-157, 164-199, 277-299

HOOKUP LIST

D280T132

91-21-51

Section C00800

Page 8

May 20/2005



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C00897		P006-02/ /J010		CB-HOT BAT. BUS				ALL
	1	D	W1040	012	08		24-54-72	ALL
	2	D	W1042	006	06		24-31-11	050-099, 150-154, 162-163, 275-276
	2	M	W1042	007	06		24-31-11	155-157, 164-199, 277-299
C00898		P006-02/ /J011		CB-BAT. BUS PWR				ALL
	1	D	W1040	005	08		24-33-11	ALL
	2	E9	W1042	004	06		24-31-11	050-099, 150-154, 162-163, 275-276
	2	E9	W1042	005	06		24-31-11	050-099, 150-154, 162-163, 275-276
	2	M	W1042	004	06		24-31-11	155-157, 164-199, 277-299

HOOKUP LIST

D280T132

91-21-51

Section C00800

Page 9 End

May 20/2005



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C00901		P031-00/ /		CB-LEFT GEN				ALL
	1	D	W0040	905	20		23-25-13	150, 153-199
	2	D	W0036	902	16		24-54-11	150, 153-155, 162-165
	2	D	W0036	904	16		24-54-11	156-157, 166-199
	L1	H4	W0210	001	04		24-51-11	ALL
	L1	R	W1014	001	04		24-21-11	ALL
	L1	R	W1014	025	04		24-21-11	ALL
	L2	H	W0022	002	18		24-22-11	ALL
	L2	H4	W0210	002	04		24-51-11	ALL
	L2	R	W1014	002	04		24-21-11	ALL
	L2	R	W1014	026	04		24-21-11	ALL
	L3	H4	W0210	003	04		24-51-11	ALL
	L3	R	W1014	003	04		24-21-11	ALL
	L3	R	W1014	027	04		24-21-11	ALL
	T1	H	W1016	013	18		24-21-11	ALL
	T1	H*	W0204	005	*2		24-21-11	ALL
	T2	H	W0022	031	18		24-28-11	ALL
	T2	H	W1016	014	18		24-21-11	ALL
	T2	H*	W0204	006	*2		24-21-11	ALL
	T3	H	W1016	012	18		24-21-11	ALL
	T3	H	W1016	015	18		24-21-11	ALL
	T3	H*	W0204	007	*2		24-21-11	ALL
C00902		P031-00/ /		CB-LEFT BUS TIE				ALL
	1	D	W0040	908	16		23-25-11	156-157, 166-199
	2	D	W0036	909	16		24-51-11	150, 153-155, 162-165
	2	D	W0036	907	16		24-51-11	156-157, 166-199
	L1	H	W0230	001	04		24-21-51	ALL
	L1	H	W0230	013	04		24-21-51	ALL
	L2	H	W0022	048	18		24-22-12	ALL
	L2	H	W0230	002	04		24-21-51	ALL
	L2	H	W0230	014	04		24-21-51	ALL
	L3	H	W0230	003	04		24-21-51	ALL
	L3	H	W0230	015	04		24-21-51	ALL
	L3	H	W1016	019	18		24-21-51	ALL
	T1	R	W1014	001	04		24-21-11	ALL
	T1	R	W1014	004	04		24-21-11	ALL
	T1	R	W1014	022	04		24-21-11	ALL
	T1	R	W1014	025	04		24-21-11	ALL
	T2	R	W1014	002	04		24-21-11	ALL
	T2	R	W1014	005	04		24-21-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section C00900

Page 1

Jan 21/2005



767-200/300 WIRING DIAGRAM MANUAL

Equip	Station / WL / BL		Description		GA	CO	Diagram	Effectivity
	Term	Type	Bundle	Wire No.				
C00902	P031-00/ /		CB-LEFT BUS TIE (continued)					ALL
	T2	R	W1014	023	04		24-21-11	ALL
	T2	R	W1014	026	04		24-21-11	ALL
	T3	H	W1016	016	18		24-21-11	ALL
	T3	R	W1014	003	04		24-21-11	ALL
	T3	R	W1014	006	04		24-21-11	ALL
	T3	R	W1014	024	04		24-21-11	ALL
	T3	R	W1014	027	04		24-21-11	ALL
C00903	P032-00/ /		CB-RIGHT GEN					ALL
	L1	H6	W0212	001	06		24-51-21	ALL
	L1	R	W1018	001	04		24-21-21	ALL
	L1	R	W1018	028	04		24-21-21	ALL
	L2	H	W0024	003	18		24-22-21	ALL
	L2	H6	W0212	002	06		24-51-21	ALL
	L2	R	W1018	002	04		24-21-21	ALL
	L2	R	W1018	029	04		24-21-21	ALL
	L3	H6	W0212	003	06		24-51-21	ALL
	L3	R	W1018	003	04		24-21-21	ALL
	L3	R	W1018	030	04		24-21-21	ALL
	T1	H	W0024	301B	18		24-21-21	ALL
	T1	H*	W0208	005	*2		24-21-21	ALL
	T2	H	W0024	301R	18		24-21-21	ALL
	T2	H	W1020	012	18		24-28-11	ALL
	T2	H*	W0208	006	*2		24-21-21	ALL
	T3	H	W0024	301Y	18		24-21-21	ALL
	T3	H	W1020	013	18		24-21-21	ALL
	T3	H*	W0208	007	*2		24-21-21	ALL
C00904	P032-00/ /		CB-RIGHT BUS TIE					ALL
	L1	H	W0230	001	04		24-21-51	ALL
	L1	H	W0230	004	04		24-21-51	ALL
	L2	H	W0024	015	18		24-22-22	ALL
	L2	H	W0230	002	04		24-21-51	ALL
	L2	H	W0230	005	04		24-21-51	ALL
	L3	H	W0230	003	04		24-21-51	ALL
	L3	H	W0230	006	04		24-21-51	ALL
	L3	H	W1020	015	18		24-21-51	ALL
	T1	R	W1018	001	04		24-21-21	ALL
	T1	R	W1018	004	04		24-21-21	ALL
	T1	R	W1018	007	04		24-21-21	ALL

HOOKUP LIST

D280T132

91-21-51

Section C00900

Page 2

Jan 21/2005



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C00904		P032-00/ /		CB-RIGHT BUS TIE (continued)				ALL
	T1	R	W1018	028	04		24-21-21	ALL
	T2	R	W1018	002	04		24-21-21	ALL
	T2	R	W1018	005	04		24-21-21	ALL
	T2	R	W1018	008	04		24-21-21	ALL
	T2	R	W1018	029	04		24-21-21	ALL
	T3	H	W1020	010	18		24-21-21	ALL
	T3	R	W1018	003	04		24-21-21	ALL
	T3	R	W1018	006	04		24-21-21	ALL
	T3	R	W1018	009	04		24-21-21	ALL
	T3	R	W1018	030	04		24-21-21	ALL
C00905		P034-00/ /		CB-AUX PWR				ALL
	L1	H	W0230	004	04		24-21-51	ALL
	L1	H	W0230	007	04		24-21-51	ALL
	L2	H	W0026	033	18		24-22-41	ALL
	L2	H	W0230	005	04		24-21-51	ALL
	L2	H	W0230	008	04		24-21-51	ALL
	L3	H	W0230	006	04		24-21-51	ALL
	L3	H	W0230	009	04		24-21-51	ALL
	T1	F5	W1002	001	06		24-51-61	ALL
	T1	F5	W1002	004	08		24-51-52	ALL
	T1	H	W0026	301B	18		24-21-41	ALL
	T1	H*	W0236	001	*2		24-21-41	ALL
	T2	F5	W1002	002	06		24-51-61	ALL
	T2	F5	W1002	005	08		24-51-52	ALL
	T2	H	W0026	027	18		24-28-11	ALL
	T2	H	W0026	301R	18		24-21-41	ALL
	T2	H*	W0236	002	*2		24-21-41	ALL
	T3	F5	W1002	003	06		24-51-61	ALL
	T3	F5	W1002	006	08		24-51-52	ALL
	T3	H	W0026	028	18		24-21-41	ALL
	T3	H	W0026	301Y	18		24-21-41	ALL
	T3	H*	W0236	003	*2		24-21-41	ALL
C00906		P006-01/ /A007		CB-HYD GEN CONT				ALL
	2	D	W0028	199	22		24-25-11	ALL
C00915		P036-00/ /D002		CB-FLT DK CREW REST VLV CONT				050-099, 162-199
	1	M	W1044	510	10		24-54-11	050-099, 162-199
	2	D	W0056	073	24		21-66-11	050-099

HOOKUP LIST

D280T132

91-21-51

Section C00900

Page 3

Jan 21/2005



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C00915		P036-00/ /D002		CB-FLT DK CREW REST VLV CONT (continued)				050-099, 162-199
	2	D	W0056	073	22		21-66-11	162-199
C00916		P036-00/ /D003		CB-FLT DK CREW REST HEAT CONT				050-099, 162-199
	2	D	W0056	064	22		21-66-11	050-099, 162-199
C00917		P036-00/ /D004		CB-FLT DK CREW REST FAN CONT				050-099, 162-199
	2	D	W0056	069	22		21-66-11	050-099, 162-199
C00918		P037-00/ /H004		CB-FWD CABIN CREW REST TEMP CONT				050-099, 162-199
	1	D	W1046	903	12		24-54-21	162-199
	2	D	W0058	072	22		21-66-21	050-099, 162-199
C00919		P036-00/ /D006		CB-AFT LH CABIN CREW REST TEMP CONT				050-099, 162-199
C00919		P036-00/ /L005		CB-AFT LH CABIN CREW REST TEMP CONT				150, 152-157
	2	D	W0056	074	22		21-66-31	050-099, 150, 152-199
C00920		P037-00/ /H005		CB-AFT RH CABIN CREW REST TEMP CONT				050-099, 150, 152-199
C00920		P037-00/ /K004		CB-AFT RH CABIN CREW REST TEMP CONT				150, 152-157
	1	D	W1046	086	08		24-54-21	050-099, 150, 152-165
	1	M	W1046	086	08		24-54-21	166-199
	2	D	W0058	081	22		21-66-41	050-099, 150, 152-199
C00921		P037-00/ /D006		CB-FWD CABIN CREW REST FAN CONT				050-099, 162-199
	2	D	W0058	076	22		21-66-21	050-099, 162-199
	2	D	W0058	077	22		21-66-21	050-099, 162-199
C00922		P036-00/ /D005		CB-AFT LH CABIN CREW REST FAN CONT				050-099, 162-199
C00922		P036-00/ /L004		CB-AFT LH CABIN CREW REST FAN CONT				150, 152-157
	1	M	W1044	510	10		24-54-11	155-156
	2	D	W0056	078	22		21-66-31	050-099, 150, 152-199
	2	D	W0056	079	22		21-66-31	050-099, 150, 152-199
C00923		P037-00/ /D007		CB-AFT RH CABIN CREW REST FAN CONT				050-099, 150, 152-199
C00923		P037-00/ /K002		CB-AFT RH CANIN CREW REST FAN CONT				150, 152-157
	1	D	W1046	085	08		24-54-21	050-099, 150, 152-165
	1	D	W1046	086	08		24-54-21	050-099, 150, 152-165
	1	M	W1046	085	08		24-54-21	166-199
	1	M	W1046	086	08		24-54-21	166-199
	2	D	W0058	085	22		21-66-41	050-099, 150, 152-199

HOOKUP LIST

D280T132

91-21-51

Section C00900

Page 4

Jan 21/2005



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C00923		P037-00/ /D007		CB-AFT RH CABIN CREW REST FAN CONT (continued)				050-099, 150, 152-199
C00923		P037-00/ /K002		CB-AFT RH CANIN CREW REST FAN CONT (continued)				150, 152-157
	2	D	W0058	086	22		21-66-41	050-099, 150, 152-199

HOOKUP LIST

D280T132

91-21-51

Section C00900

Page 5 End

Jan 21/2005



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C01001		P011-01/ /C010		CB-SLATS POSITION IND				ALL
	2	D	W0044	065	24		27-88-11	ALL
C01002		P011-02/ /H010		CB-STAB. TRIM POSITION IND,LEFT				ALL
	1	D	W0040	025	24		27-48-11	ALL
	2	D	W0036	045	14		24-53-11	ALL
	2	D	W0036	046	14		24-53-11	ALL
C01005		P011-02/ /K016		CB-RUDDER POSITION				ALL
	1	D	W0040	069	24		27-28-11	ALL
	2	D	W0036	049	14		24-53-11	ALL
	2	D	W0036	050	14		24-53-11	ALL
C01008		P011-02/ /J015		CB-L FLAP POS IND				ALL
	1	D	W0036	151	18		24-51-14	ALL
	2	D	W0040	079	24		27-58-11	ALL
C01009		P011-05/ /H019		CB-STAB. TRIM POSITION IND,RIGHT				ALL
	1	D	W0042	085	24		27-48-11	ALL
	2	D	W0038	042	10		24-53-21	050-099
	2	D	W0038	042	14		24-53-21	150-199, 275-299
C01010		P011-04/ /A036		CB-STAB TRIM ALTN				050-099, 155-199, 275-299
	1	D	W0032	009	08		24-54-71	277-299
	2	D	W0044	700	20		27-41-31	050-099, 155-199, 275-299
C01011		P011-02/ /H017		CB-TAIL,L-FLT CONT SHUTOFF				ALL
	1	D	W0040	091	20		27-23-11	050-099
	1	D	W0040	091	18		27-23-11	150-199, 275-299
C01012		P011-05/ /H027		CB-TAIL,R-FLT CONT SHUTOFF				ALL
	1	D	W0042	102	20		27-23-11	ALL
C01013		P011-02/ /H018		CB-TAIL,C-FLT CONT SHUTOFF				ALL
	1	D	W0040	056	20		27-23-11	050-099
	1	D	W0040	056	18		27-23-11	150-199, 275-299
	2	D	W0036	085	10		24-54-11	ALL
	2	D	W0036	086	10		24-54-11	ALL
	DED		W0040	056Z			27-23-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section C01000

Page 1

Jan 21/2005

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C01014		P011-02/ /H015		CB-WING,L-FLT CONT SHUTOFF				ALL
	1	D	W0040	090	20		27-13-11	ALL
C01015		P011-05/ /H026		CB-WING,R-FLT CONT SHUTOFF				ALL
	1	D	W0042	101	20		27-13-11	ALL
C01016		P011-02/ /H016		CB-WING,C-FLT CONT SHUTOFF				ALL
	1	D	W0040	055	20		27-13-11	ALL
	DED		W0040	055Z			27-13-11	ALL
C01017		P011-02/ /H011		CB-STAB. TRIM,CONT,LEFT				ALL
	1	D	W0040	010	22		27-41-11	ALL
	2	D	W0036	086	10		24-54-11	ALL
	2	D	W0036	187	10		24-54-11	050-099, 275-299
	2	D	W0036	084	10		24-54-11	150-199
C01018		P011-05/ /H020		CB-STAB TRIM CONTROL,RIGHT				ALL
	1	D	W0042	070	22		27-41-21	ALL
	2	LA	W0038	071	08		24-54-21	ALL
	2	LA	W0038	072	08		24-54-21	ALL
C01019		P011-02/ /J014		CB-FLAP SHUTOFF				ALL
	2	D	W0040	071	24		27-51-31	ALL
C01020		P011-02/ /H014		CB-SLAT SHUTOFF				ALL
	1	D	W0040	084	24		27-81-31	ALL
C01021		P011-01/ /C004		CB-FLAP/SLAT POSITION IND				ALL
	2	D	W0040	083	24		27-58-11	ALL
C01022		P011-02/ /J013		CB-FLAP LOAD RELIEF				ALL
	1	D	W0036	084	10		24-54-11	050-099
	1	D	W0036	085	10		24-54-11	ALL
	1	D	W0036	163	10		24-54-11	150-199, 275-299
	2	D	W0040	076	24		27-51-51	ALL
C01023		P011-02/ /G011		CB-AUTO. SPEED BRAKE				ALL
	1	D	W0036	088	10		24-54-11	ALL
	1	D	W0036	089	10		24-54-11	ALL
	2	D	W0040	089	20		27-62-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section C01000

Page 2

Jan 21/2005



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C01024		P011-02/ /K010		CB-STICK NUDGER				ALL
	1	D	W0040	729	16		27-32-31	ALL
C01025		P011-01/ /C016		CB-FSEU CONT 1				ALL
	2	D	W0044	064	24		27-51-61	ALL
C01026		P011-01/ /C017		CB-AILERON LOCKOUT,LEFT				ALL
	1	D	W0032	097	12		24-54-73	ALL
	1	D	W0032	098	12		24-54-73	ALL
	2	D	W0044	161	18		27-11-12	ALL
C01027		P011-05/ /J024		CB-TE FLAPS ALT CONT				ALL
	2	D	W0042	003	18		27-51-11	ALL
C01028		P011-05/ /H023		CB-INBD SLATS ALT CONT				ALL
	1	D	W0042	004	18		27-81-11	ALL
	2	LA	W0038	072	08		24-54-21	ALL
	2	LA	W0038	073	08		24-54-21	ALL
C01029		P011-05/ /H024		CB-OUTBD SLAT,ALT CONT				ALL
	1	D	W0042	005	18		27-81-21	ALL
C01030		P011-01/ /C018		CB-AILERON LOCKOUT,RIGHT				ALL
	2	D	W0044	146	18		27-11-22	ALL
C01031		P011-02/ /G010		CB-RUDDER RATIO				ALL
	2	D	W0040	020	22		27-21-12	ALL
C01033		P011-01/ /C005		CB-RUDDER TRIM				ALL
	2	D	W0040	068	20		27-21-11	ALL
C01034		P011-02/ /K017		CB-RUDDER TRIM POS				ALL
	1	D	W0040	070	24		27-28-13	ALL
	2	D	W0036	151	18		24-51-14	ALL
	2	D	W0036	152	18		24-51-14	ALL
C01035		P011-02/ /K015		CB-AILERON TRIM				ALL
	1	D	W0040	086	24		27-11-11	ALL
	2	D	W0036	080	10		24-54-11	ALL
	2	D	W0036	082	10		24-54-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section C01000

Page 3

Jan 21/2005



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C01036		P011-05/ /G023		CB-FSEU CONT 3				ALL
	1	D	W0038	141	12		24-51-24	ALL
	2	D	W0042	007	24		27-51-61	ALL
C01037		P011-01/ /C015		CB-FSEU SENSOR 1				ALL
	1	D	W0032	107	14		24-54-73	ALL
	1	D	W0032	108	14		24-54-73	ALL
	2	D	W0044	063	24		27-51-61	ALL
C01038		P011-05/ /G022		CB-FSEU POS SENSOR 3				ALL
	1	D	W0038	043	18		24-51-24	ALL
	1	D	W0038	142	18		24-51-24	ALL
	2	D	W0042	006	24		27-51-61	ALL
C01039		P011-01/ /C011		CB-STICK SHAKER,LEFT				ALL
	2	D	W0044	157	20		27-32-11	ALL
C01040		P034-00/ /L002		CB-FUEL QTY REFUEL				ALL
	1	D	W0054	004	22		28-41-12	ALL
	2	D	W1012	006	10		24-54-61	ALL
	2	D	W1012	007	10		24-54-61	ALL
C01041		P034-00/ /L003		CB-FUELING CONTROL				ALL
	1	D	W0054	007	22		28-21-11	ALL
C01042		P034-00/ /L004		CB-DEFUELING VALVES				ALL
	1	D	W0054	006	20		28-26-11	ALL
C01043		P006-01/ /E005		CB-FUELING CONTROL				ALL
	2	D	W0028	036	18		28-21-11	ALL
C01044		P006-01/ /E007		CB-DEFUEL VALVES				ALL
	2	D	W0028	035	18		28-26-11	ALL
C01045		P006-01/ /E004		CB-FUELING QTY				ALL
	2	D	W0028	034	18		28-41-12	ALL
C01046		P006-01/ /E006		CB-FUELING VALVES				ALL
	2	D	W0028	126	20		28-21-13	ALL

HOOKUP LIST

D280T132

91-21-51

Section C01000

Page 4

Jan 21/2005



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C01047		P034-00/ /L005		CB-FUELING VALVES				ALL
	1	D	W0054	031	22		28-21-13	ALL
C01048		P011-04/ /C034		CB-FUEL QTY #1				ALL
	2	D	W0044	738	18		28-41-12	ALL
C01049		P011-02/ /M015		CB-FUEL PUMP,LEFT CTR				ALL
	1	D	W0040	131	24		28-22-12	ALL
C01050		P011-05/ /M024		CB-FUEL PUMP,RIGHT CTR				ALL
	1	D	W0042	115	24		28-22-12	ALL
	2	LA	W0038	064	08		24-54-21	ALL
	2	LA	W0038	065	08		24-54-21	ALL
C01052		P011-04/ /D035		CB-FUEL DC PUMP CONT				ALL
	1	D	W0044	707	22		28-25-11	050-099
	1	D	W0044	001	24		28-22-11	ALL
	1	D	W0044	707	20		28-25-11	150-199, 275-299
C01053		P011-05/ /M019		CB-FUEL QTY #2				ALL
	1	D	W0042	117	18		28-41-12	ALL
	2	LA	W0038	063	08		24-54-21	ALL
	2	LA	W0038	064	08		24-54-21	ALL
C01054		P011-02/ /M016		CB-FUEL PUMP-R FWD/L AFT				ALL
	1	D	W0040	143	24		28-22-11	ALL
	2	LA	W0036	053	08		24-54-11	050-099, 150-154, 275
	2	LA	W0036	052	08		24-54-11	ALL
	2	LA	W0036	054	08		24-54-11	155-199, 276-299
C01055		P011-05/ /M025		CB-FUEL PUMP-L FWD/R AFT				ALL
	1	D	W0042	121	24		28-22-11	ALL
C01058		P011-04/ /D034		CB-FUEL DC PUMP PWR				ALL
	1	D	W0044	019	16		28-25-11	ALL
C01061		P006-01/ /E001		CB-L SPAR FUEL VALVE				ALL
	2	D	W0028	001	22		28-22-21	ALL
	DED		W0028	001Z			28-22-21	ALL

HOOKUP LIST

D280T132

91-21-51

Section C01000

Page 5

Jan 21/2005



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C01062		P006-01/ /E002		CB-R SPAR FUEL VALVE				ALL
	1	LA	W1040	015	08		24-54-72	ALL
	1	LA	W1040	016	08		24-54-72	ALL
	2	D	W0028	051	22		28-22-21	ALL
C01063		P006-01/ /E003		CB-APU FUEL VALVE				ALL
	2	D	W0028	050	22		28-25-21	050-099
	2	D	W0028	050	20		28-25-21	150-199, 275-299
C01065		P011-02/ /M013		CB-FUEL JTSN CONT-LEFT				050, 155-199, 277-299
C01065		P011-02/ /M013		CB-FUEL JTSN CONT-LEFT (SB 28-0030)				051-099
C01065		P011-02/ /M013		CB-FUEL JTSN CONT-LEFT (INOP)				276
	1	D	W0040	516	20		28-31-11	050-099, 155-199, 276-299
C01066		P011-05/ /M022		CB-FUEL JTSN CONT-RIGHT				050, 155-199, 277-299
C01066		P011-05/ /M022		CB-FUEL JTSN CONT-RIGHT (SB 28-0030)				051-099
C01066		P011-05/ /M022		CB-FUEL JTSN CONT-RIGHT (INOP)				276
	1	D	W0042	537	20		28-31-11	050-099, 155-199, 276-299
C01067		P011-02/ /M014		CB-JTSN NOZZLE VALVE-LEFT				050, 155-199, 277-299
C01067		P011-02/ /M014		CB-JTSN NOZZLE VALVE-LEFT (SB 28-0030)				051-099
C01067		P011-02/ /M014		CB-JTSN NOZZLE VALVE-LEFT (INOP)				276
	1	D	W0040	517	20		28-31-12	050-099, 155-199, 276-299
C01068		P011-05/ /M023		CB-JTSN NOZZLE VALVE-RIGHT				050, 155-199, 277-299
C01068		P011-05/ /M023		CB-JTSN NOZZLE VALVE-RIGHT (SB 28-0030)				051-099
C01068		P011-05/ /M023		CB-JTSN NOZZLE VALVE-RIGHT (INOP)				276
	1	D	W0042	538	20		28-31-12	050-099, 155-199, 276-299
C01069		P011-05/ /M020		CB-FWD FUEL CROSSFEED VALVE (SB 28-0034)				ALL
	1	D	W0042	547	20		28-22-31	ALL
	2	D	W0032	031	08		24-54-71	ALL
	DED		W0042	547Z			28-22-31	ALL
C01070		P011-05/ /M021		CB-AFT FUEL CROSSFEED VALVE (SB 28-0034)				ALL
	1	D	W0042	546	20		28-22-31	ALL
	DED		W0042	546Z			28-22-31	ALL
C01071		P011-04/ /D036		CB-CROSSFEED INDICATION (SB 28-0034)				ALL
	1	D	W0044	510	22		28-22-31	ALL

HOOKUP LIST

D280T132

91-21-51

Section C01000

Page 6

Jan 21/2005



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C01071		P011-04/ /D036		CB-CROSSFEED INDICATION (SB 28-0034) (continued)				ALL
	DED		W0044	510Z			28-22-31	ALL
C01080		P011-02/ /L017		CB-HYD SYS L PRESS.				ALL
	2	D	W0040	132	24		29-31-11	ALL
C01081		P011-05/ /L026		CB-HYD SYS R PRESS.				ALL
	1	D	W0038	040	14		24-53-21	ALL
	1	D	W0038	041	14		24-53-21	ALL
	2	D	W0042	032	24		29-31-11	ALL
C01082		P011-02/ /L018		CB-HYD SYS CTR PRESS				ALL
	1	D	W0036	050	14		24-53-11	ALL
	1	D	W0036	051	14		24-53-11	ALL
	2	D	W0040	178	24		29-31-11	ALL
C01084		P011-05/ /L025		CB-HYD ELEC PUMP,L				ALL
	2	D	W0042	035	24		29-11-12	ALL
C01085		P011-02/ /L015		CB-ELEC HYD PUMP C1				ALL
	2	D	W0040	063	22		29-11-31	ALL
	2	D	W0040	175	22		29-21-32	ALL
	DED		W0040	063Z			29-11-31	ALL
	DED		W0040	175Z			29-21-32	ALL
C01086		P011-05/ /L024		CB-ELEC HYD PUMP C2				ALL
	2	D	W0042	162	24		29-11-31	ALL
	DED		W0042	162Z			29-11-31	ALL
C01087		P011-02/ /L016		CB-HYD ELEC PUMP,R				ALL
	2	D	W0040	011	24		29-11-22	ALL
C01088		P006-02/ /J008		CB-RAM AIR TURBINE POWER				ALL
	1	D	W1040	040	08		29-21-31	ALL
	2	D	W1042	005	06		24-31-11	050-099, 150-154, 162-163, 275-276
	2	M	W1042	003	06		24-31-11	155-157, 164-199, 277-299
	2	M	W1042	005	06		24-31-11	155-157, 164-199, 277-299
C01089		P006-01/ /C001		CB-RAM AIR TURBINE MANUAL CONTROL				ALL
	1	LA	W1040	038	08		24-54-72	ALL

HOOKUP LIST

D280T132

91-21-51

Section C01000

Page 7

Jan 21/2005



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C01089		P006-01/ /C001		CB-RAM AIR TURBINE MANUAL CONTROL (continued)				ALL
	1	LA	W1040	039	08		24-54-72	ALL
	2	D	W0028	002	24		29-21-31	ALL
C01090		P011-02/ /L010		CB-HYDR PTU CONT				ALL
	1	D	W0036	056	08		24-54-11	050-099
	1	LA	W0036	094	08		24-54-11	ALL
	1	LA	W0036	056	08		24-54-11	150-199, 275-299
	2	D	W0040	70E	20		29-11-14	ALL
C01095		P011-02/ /L014		CB-HYD L ENG PUMP DEPRESS				ALL
	1	D	W0036	056	08		24-54-11	ALL
	2	D	W0040	198	22		29-11-11	ALL
C01096		P011-05/ /L023		CB-HYD R ENG PUMP DEPRESS				ALL
	1	LA	W0038	067	08		24-54-21	ALL
	1	LA	W0038	106	08		24-54-21	ALL
	2	D	W0042	036	22		29-11-21	ALL
C01097		P011-04/ /D029		CB-ENG HYD PUMP L SUPPLY				ALL
	1	D	W0044	166	22		29-11-11	ALL
C01098		P011-04/ /D030		CB-ENG HYD PUMP R SUPPLY				ALL
	1	D	W0044	181	22		29-11-21	ALL
C01099		P011-04/ /D031		CB-AIR HYD PUMP				ALL
	1	D	W0044	021	22		29-11-32	ALL

HOOKUP LIST

D280T132

91-21-51

Section C01000

Page 8 End

Jan 21/2005



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C01100		P006-01/ /C002		CB-RAM AIR TURBINE AUTOMATIC CONTROL				ALL
	1	D	W1040	044	12		24-54-71	ALL
	2	D	W0028	005	24		29-21-31	ALL
C01101		P011-05/ /L020		CB-HYD QTY				ALL
	1	D	W0038	159	14		24-51-52	050-099
	1	D	W0038	037	14		24-51-52	ALL
	1	D	W0038	173	12		24-51-52	150-199
	1	D	W0038	173	14		24-51-52	277-299
	2	D	W0042	028	24		29-33-11	ALL
C01110		P006-03/ /K014		CB-PITOT PROBE HT,CAPT PHASE A				150-199, 275-299
	1	D	W1026	061	12		24-51-14	ALL
	1	D	W1026	077	12		24-51-14	ALL
	2	D	W0046	022	22		30-31-11	ALL
C01111		P006-03/ /K015		CB-PITOT PROBE HT,CAPT PHASE B				150-199, 275-299
	1	D	W1026	062	12		24-51-14	ALL
	1	D	W1026	063	12		24-51-14	ALL
	2	D	W0046	023	22		30-31-11	ALL
C01112		P006-03/ /K016		CB-PITOT PROBE HT,R AUX PHASE B				150-199, 275-299
	2	D	W0046	024	22		30-31-13	ALL
C01113		P006-03/ /K017		CB-PITOT PROBE HT,R AUX PHASE C				150-199, 275-299
	1	D	W1026	067	12		24-51-14	ALL
	1	D	W1026	068	12		24-51-14	ALL
	2	D	W0046	025	22		30-31-13	ALL
C01114		P006-04/ /K021		CB-PITOT PROBE HT,L AUX PHASE B				ALL
	2	D	W0048	006	22		30-31-23	ALL
C01115		P006-04/ /K020		CB-PITOT PROBE HT,L AUX PHASE C				ALL
	1	LA	W1028	003	08		24-51-21	ALL
	1	LA	W1028	021	08		24-51-21	ALL
	2	D	W1030	041	22		30-31-23	ALL
C01116		P006-04/ /K023		CB-PITOT PROBE HT,F/O PHASE A				ALL
	2	D	W0048	004	22		30-31-21	ALL

HOOKUP LIST

D280T132

91-21-51

Section C01100

Page 1

Jan 21/2005



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C01117		P006-04/ /K022		CB-PITOT PROBE HT,F/O PHASE B				ALL
	1	LA	W1028	002	08		24-51-21	ALL
	1	LA	W1028	008	08		24-51-21	ALL
	2	D	W1030	040	22		30-31-21	ALL
C01118		P011-03/ /T014		CB-L ICE DETECTOR				050-099, 155-199
C01118		P011-03/ /T014		CB-L ICE DETECTOR (SB 30-0017)				150-154
	1	D	W0036	016	12		24-51-11	050-099, 150-199
	2	D	W0040	825	20		30-81-11	050-099, 150-199
C01119		P011-06/ /T023		CB-R ICE DETECTOR				050-099, 155-199
C01119		P011-06/ /T023		CB-R ICE DETECTOR (SB 30-0017)				150-154
	1	D	W0038	008	12		24-51-21	050-099, 150-199
	2	D	W0042	825	20		30-81-11	050-099, 150-199
C01120		P011-01/ /A015		CB-PROBE HEAT IND,LEFT				ALL
	2	D	W0040	093	24		30-31-11	ALL
C01121		P011-04/ /A028		CB-PROBE HEAT IND,RIGHT				ALL
	2	D	W0042	027	24		30-31-21	ALL
C01122		P006-03/ /L019		CB-ENGINE PROBE HEAT,LEFT				ALL
	1	D	W0046	009	22		30-34-11	ALL
	2	D	W1026	057	12		24-51-14	ALL
	2	D	W1026	069	12		24-51-14	ALL
C01123		P006-04/ /K025		CB-ENGINE PROBE HEAT,RIGHT				ALL
	1	D	W0048	088	12		24-51-24	ALL
	1	D	W0048	089	12		24-51-24	ALL
	2	D	W0048	011	22		30-34-21	ALL
C01124		P037-00/ /E001		CB-WINDOW HT NO.2,LEFT				ALL
	1	D	W0058	039	20		30-41-12	ALL
	2	M	W1046	014	12		24-51-22	050-099, 155-199, 276-299
C01125		P036-00/ /H006		CB-WINDOW HT NO.2,RIGHT				ALL
	1	M	W1044	018	12		24-51-12	050-099
	1	M	W1044	019	12		24-51-12	ALL
	1	M	W1044	018	10		24-51-12	150-199, 275-299
	2	D	W0056	049	20		30-41-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section C01100

Page 2

Jan 21/2005



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C01126		P037-00/ /E002		CB-WINDOW HT NO.3,LEFT				ALL
	1	D	W0058	040	20		30-41-12	ALL
	2	M	W1046	048	14		24-51-22	050-099, 155-199, 276-299
	2	M	W1046	060	12		24-51-22	050-099, 155-199, 276-299
	2	M	W1046	014	12		24-51-22	150-154, 275
C01127		P036-00/ /H007		CB-WINDOW HT NO.3,RIGHT				ALL
	1	M	W1044	104	12		24-51-12	050-099
	1	M	W1044	031	12		24-51-12	050-099, 155-199, 276-299
	1	M	W1044	097	12		24-51-12	155-199, 276-299
	2	D	W0056	048	20		30-41-11	ALL
C01128		P011-03/ /T015		CB-WINDOW HEAT TEST				ALL
	1	LA	W0036	143	08		24-54-11	050-099
	1	LA	W0036	197	08		24-54-11	050-099
	1	D	W0036	504	08		24-54-11	155-199
	2	D	W0040	135	24		30-41-11	ALL
C01129								275-299
	A1	M	W1044	010	10		24-51-13	275-299
	A1	M	W1044	150	10		24-51-13	275-299
	A2	D	W0182	196	12		21-73-11	275-299
	B1	M	W1044	011	10		24-51-13	275-299
	B1	M	W1044	151	10		24-51-13	275-299
	B2	D	W0182	197	12		21-73-11	275-299
	C1	M	W1044	012	10		24-51-13	275-299
	C1	M	W1044	152	10		24-51-13	275-299
	C2	D	W0182	198	12		21-73-11	275-299
C01130		P011-06/ /U032		CB-HEATER,DOOR WINDOW				ALL
	1	D	W0042	531	22		30-46-11	ALL
	2	LA	W0038	083	08		24-54-21	ALL
	2	LA	W0038	088	08		24-54-21	ALL
C01131								275-299
	2	D	W0176	86W	20		21-73-11	275-299
C01132		P011-04/ /A031		CB-WING ANTI-ICE				ALL
	2	D	W0042	136	22		30-11-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section C01100

Page 3

Jan 21/2005

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C01133		P006-03/ /L017		CB-PROBE HT,L AOA				150-199, 275-299
	1	D	W0046	007	22		30-32-11	ALL
	2	D	W1026	068	12		24-51-14	ALL
	2	D	W1026	070	12		24-51-14	ALL
	DED		W0046	007Z			30-32-11	ALL
C01136		P011-03/ /T012		CB-RAIN REPELLENT,R (INOP) (SB 30-0028)				050-099, 150-199
C01136		P011-03/ /T012		CB-RAIN REPELLENT,RIGHT				275-299
	1	D	W0036	504	08		24-54-11	155-199
	2	D	W0040	058	22		30-43-11	275-299
	CAP	Y	W0040	058	22		30-43-11	050-099, 150-199
C01138		P006-03/ /L018		CB-TAT PROBE HEAT,LEFT				ALL
	1	D	W0046	008	22		30-33-11	ALL
	2	LA	W1024	013	08		24-51-11	ALL
	2	LA	W1024	020	08		24-51-11	ALL
	DED		W0046	008Z			30-33-11	ALL
C01140		P011-04/ /A030		CB-ANTI-ICE ALT,R ENG				ALL
C01140		P011-04/ /A030		CB-ANTI-ICE ALT,R ENG (SB 30-0017)				150-154
	2	D	W0042	747	24		30-21-11	ALL
C01141		P006-04/ /K024		CB-PROBE HT,R AOA				ALL
	1	LA	W1028	001	08		24-51-21	ALL
	1	LA	W1028	019	08		24-51-21	ALL
	2	D	W0048	009	22		30-32-21	ALL
	DED		W0048	009Z			30-32-21	ALL
C01142		P033-00/ /A002		CB-DRAIN MAST HEATING,FLIGHT				ALL
	1	D	W0052	030	18		30-71-11	ALL
	2	M	W0138	086	10		24-51-52	050-099
	2	M	W0138	078	10		24-51-52	ALL
	2	M	W0138	086	12		24-51-52	150-199, 275-299
C01143		P011-03/ /T013		CB-WINDSHIELD WIPER,LEFT				ALL
	1	LA	W0036	197	08		24-54-11	050-099
	1	LA	W0036	072	08		24-54-11	ALL
	1	LA	W0036	071	08		24-54-11	150-199, 275-299
	2	D	W0040	195	18		30-42-11	ALL
	2	D	W0040	732	16		30-42-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section C01100

Page 4

Jan 21/2005



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C01144		P011-06/ /T022		CB-WINDSHIELD WIPER,RIGHT				ALL
	1	LA	W0038	085	08		24-54-21	050-099
	1	LA	W0038	131	08		24-54-21	050-099
	2	D	W0042	154	18		30-42-11	ALL
	2	D	W0042	742	16		30-42-11	ALL
C01145		P011-06/ /T021		CB-RAIN REPELLENT,L (INOP) (SB 30-0028)				050-099, 150-199
C01145		P011-06/ /T021		CB-RAIN REPELLENT,LEFT				275-299
	2	D	W0042	139	22		30-43-11	275-299
	CAP	Y	W0042	139	22		30-43-11	050-099, 150-199
C01147		P011-01/ /A016		CB-ENGINE ANTI-ICE,L				ALL
C01147		P011-01/ /A016		CB-ENGINE ANTI-ICE,L (SB 30-0017)				150-154
	2	D	W0040	065	24		30-21-11	ALL
C01148		P011-06/ /T019		CB-ENGINE ANTI-ICE,R				ALL
C01148		P011-06/ /T019		CB-ENGINE ANTI-ICE,R (SB 30-0017)				150-154
	1	LA	W0038	080	08		24-54-21	150-199, 275-299
	1	LA	W0038	081	08		24-54-21	150-199, 275-299
	2	D	W0042	146	24		30-21-11	ALL
C01149		P033-00/ /F001		CB-HEATERS,FWD WATER LINE				050-099, 150-199, 276-299
C01149		P037-00/ /J001		CB-HEATERS,FWD WATER LINE				275
	1	D	W0138	068	10		24-51-52	050-099
	1	D	W0138	081	10		24-51-52	050-099
	1	M	W0138	068	12		24-51-52	150-199, 276-299
	1	M	W0138	081	12		24-51-52	150-199, 276-299
	1	D	W0058	041	22		30-71-21	275
	2	D	W0052	031	18		30-71-21	050-099, 150-199
	2	M	W1046	034	12		24-51-22	275
	2	D	W0052	031	22		30-71-21	276-299
C01150		P033-00/ /G001		CB-HEATERS 1,MID WATER LINE				050-099, 150-199, 276-299
C01150		P037-00/ /J002		CB-HEATERS 1,MID WATER LINE				275
	1	D	W0052	821	20		30-71-22	050-099, 155-199, 276-299
	1	D	W0142	821	20		30-71-22	150-154
	1	D	W0058	043	20		30-71-22	275
	2	D	W0138	085	12		24-51-52	050-099
	2	M	W0138	109	10		24-51-52	050-099, 150-199, 276-299
	2	M	W0138	085	12		24-51-52	150-199, 276-299

HOOKUP LIST

D280T132

91-21-51

Section C01100

Page 5

Jan 21/2005

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C01151		P033-00/ /G005		CB-HEATERS 1,AFT WATER LINE				050-099, 150-199, 276-299
C01151		P037-00/ /J006		CB-HEATERS 1,AFT WATER LINE				275
	1	D	W0052	020	20		30-71-23	050-099, 150-199, 276-299
	1	D	W0058	046	20		30-71-23	275
	2	M	W1046	035	10		24-51-22	275
	2	M	W1046	036	12		24-51-22	275
C01154		P034-00/ /P010		CB-HEATER,POTABLE WATER TANK				050-099, 150-199
	1	M	W1012	014	12		24-51-61	050-099, 150-199
	1	M	W1012	063	12		24-51-61	050-099, 150-199
	1	M	W1012	019	12		24-51-61	150-199
	2	D	W0054	014	16		30-71-24	050-099, 150-199
C01155		P033-00/ /G003		CB-HEATERS 3,MID WATER LINE				050-099, 150-199, 276-299
C01155		P037-00/ /J004		CB-HEATERS 3,MID WATER LINE				275
	1	D	W0052	825	20		30-71-21	050-099, 155-199
	1	D	W0142	688	20		30-71-21	150-154
	1	D	W0058	044	20		30-71-22	275
	1	D	W0052	825	20		30-71-22	276-299
	2	M	W1046	015	12		24-51-22	275
	2	M	W1046	036	12		24-51-22	275
C01156		P033-00/ /G006		CB-HEATERS 2,AFT WATER LINE				050-099, 150-199, 276-299
C01156		P037-00/ /J007		CB-HEATERS 2,AFT WATER LINE				275
	1	D	W0052	033	20		30-71-23	050-099, 150-199, 276-299
	1	D	W0058	047	20		30-71-23	275
	2	M	W1046	037	10		24-51-22	275
	2	M	W1046	038	12		24-51-22	275
C01157		P033-00/ /G002		CB-HEATERS 2,MID WATER LINE				050-099, 150-199, 276-299
C01157		P037-00/ /J003		CB-HEATERS 2,MID WATER LINE				275
	1	D	W0052	838	20		30-71-22	050-099, 155-199
	1	D	W0142	732	22		30-71-22	150-154
	1	D	W0058	042	22		30-71-22	275
	1	D	W0052	838	22		30-71-22	276-299
	2	M	W1046	039	12		24-51-22	275
C01158		P033-00/ /G004		CB-HEATERS 4,MID WATER LINE				050-099, 150-199, 276-299
C01158		P037-00/ /J005		CB-HEATERS 4,MID WATER LINE				275
	1	D	W0052	087	20		30-71-22	050-099, 155-199

HOOKUP LIST

D280T132

91-21-51

Section C01100

Page 6

Jan 21/2005



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C01158		P033-00/ /G004		CB-HEATERS 4,MID WATER LINE (continued)				050-099, 150-199, 276-299
C01158		P037-00/ /J005		CB-HEATERS 4,MID WATER LINE (continued)				275
	1	D	W0142	144	20		30-71-22	150-154
	1	D	W0058	045	22		30-71-22	275
	1	D	W0052	087	22		30-71-22	276-299
	2	M	W0138	083	10		24-51-52	050-099
	2	M	W0138	083	12		24-51-52	150-199, 276-299
	2	M	W1046	038	12		24-51-22	275
	2	M	W1046	039	12		24-51-22	275
	2	M	W0138	084	10		24-51-52	276-299
C01165		P033-00/ /A001		CB-DRAIN MAST HEATING,GND				ALL
	1	D	W0052	029	20		30-71-11	ALL
	2	M	W0138	049	10		24-53-51	ALL
	2	M	W0138	105	10		24-53-51	ALL
C01166		P033-00/ /G007		CB-HEATERS 3,AFT WATER LINE				050-099, 150-199, 276-299
C01166		P037-00/ /H004		CB-HEATERS 3 AFT WATER LINE				275
	1	D	W0142	163	20		30-71-24	050-099, 150-199
	1	M	W1046	035	10		24-51-22	275
	1	M	W1046	054	10		24-51-22	275
	1	D	W0052	086	20		30-71-23	276-299
	2	D	W0058	057	20		30-71-23	275
C01167		P034-00/ /P008		CB-HEATER,GALLEY WATER LINE				050-099, 150-199
	1	M	W1012	017	12		24-51-61	050-099
	1	M	W1012	063	12		24-51-61	050-099, 150-199
	2	D	W0026	121	16		30-71-25	050-099, 150-199
	2	D	W0026	131	16		30-71-25	050-099, 150-199
C01170		P011-06/ /U023		CB-LDG GR POS AIR/GND SYS 2				ALL
	1	D	W0042	029	24		32-09-12	ALL
	2	LA	W0038	084	08		24-54-21	050-099
	2	LA	W0038	131	08		24-54-21	050-099
	2	LA	W0038	085	08		24-54-21	150-199, 275-299
	2	LA	W0038	145	08		24-54-21	150-199, 275-299
C01171		P011-03/ /U018		CB-LDG GR,ANTISKID 1-5				ALL
	1	D	W0040	059	24		32-42-11	ALL
	2	LA	W0036	071	08		24-54-11	050-099

HOOKUP LIST

D280T132

91-21-51

Section C01100

Page 7

Aug 15/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C01171		P011-03/ /U018		CB-LDG GR,ANTISKID 1-5 (continued)				ALL
	2	LA	W0036	188	08		24-54-11	050-099
	2	D	W0036	076	08		24-54-11	150-199, 275-299
C01172		P011-06/ /U027		CB-LDG GR,ANTISKID 4-8				ALL
	1	D	W0042	140	24		32-42-11	ALL
	2	LA	W0038	084	08		24-54-21	050-099
	2	LA	W0038	132	08		24-54-21	050-099
	2	LA	W0038	144	08		24-54-21	150-199, 275-299
	2	LA	W0038	150	08		24-54-21	150-199, 275-299
C01173		P011-06/ /U021		CB-AUTOBRKS ANTISKID TEST/IND 2				ALL
	1	D	W0042	031	24		32-42-12	ALL
	2	LA	W0038	081	08		24-54-21	050-099
	2	LA	W0038	085	08		24-54-21	ALL
	2	LA	W0038	146	08		24-54-21	150-199, 275-299
C01174		P011-06/ /U020		CB-LANDING GEAR LEVER LOCK				ALL
	1	D	W0042	160	22		32-31-11	ALL
	2	LA	W0038	080	08		24-54-21	050-099
	2	LA	W0038	081	08		24-54-21	ALL
	2	LA	W0038	146	08		24-54-21	150-199, 275-299
C01175		P011-04/ /C030		CB-LDG GR POS AIR/GND SYS 1				ALL
	2	D	W0044	002	24		32-09-11	ALL
C01176		P011-03/ /U012		CB-AUTOBRKS ANTISKID TEST/IND 1				ALL
	1	D	W0040	060	24		32-42-11	ALL
	2	LA	W0036	074	08		24-54-11	ALL
	2	LA	W0036	075	08		24-54-11	ALL
C01177		P011-03/ /U014		CB-LDG GR ALTN EXT LATCH RST				ALL
	1	D	W0040	052	18		32-35-11	ALL
	2	LA	W0036	141	08		24-54-11	050-099
	2	LA	W0036	075	08		24-54-11	ALL
	2	LA	W0036	160	08		24-54-11	150-199, 275-299
C01178		P011-06/ /T036		CB-PROX SW TEST				ALL
	1	D	W0038	086	08		24-54-21	ALL
	2	D	W0042	058	24		32-09-21	ALL

HOOKUP LIST

D280T132

91-21-51

Section C01100

Page 8

Jan 21/2005



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C01179		P006-01/ /F004		CB-PARKING BRAKE VALVE				ALL
	1	D	W0028	037	22		32-44-11	ALL
	2	LA	W1040	014	08		24-54-72	ALL
	2	LA	W1040	015	08		24-54-72	ALL
	DED		W0028	037Z			32-44-11	ALL
C01180		P011-06/ /U022		CB-BRAKE PRESS.				ALL
	1	D	W0042	723	24		32-41-11	ALL
	2	D	W0038	039	14		24-53-21	ALL
C01181		P011-03/ /U016		CB-BRAKE TEMP				ALL
	1	D	W0040	196	24		32-46-11	ALL
	2	LA	W0036	073	08		24-54-11	050-099
	2	LA	W0036	076	08		24-54-11	050-099
	2	LA	W0036	161	08		24-54-11	150-199, 275-299
	2	LA	W0036	162	08		24-54-11	150-199, 275-299
C01182		P011-03/ /U015		CB-AIR/GND SYS 1				ALL
	1	D	W0040	136	24		32-09-11	ALL
	2	LA	W0036	076	08		24-54-11	050-099
	2	LA	W0036	141	08		24-54-11	050-099
	2	LA	W0036	160	08		24-54-11	150-199, 275-299
	2	LA	W0036	161	08		24-54-11	150-199, 275-299
C01183		P011-04/ /C031		CB-LDG GR,ANTISKID 2-6				ALL
	2	D	W0044	170	24		32-42-11	ALL
C01184		P011-04/ /C032		CB-LDG GR,ANTISKID 3-7				ALL
	1	LA	W0032	002	08		24-54-71	ALL
	1	LA	W0032	004	08		24-54-71	ALL
	2	D	W0044	172	24		32-42-11	ALL
C01185		P011-06/ /U026		CB-TAIL SKID CONT				150-199, 275-299
	1	D	W0042	715	18		32-71-11	150-199, 275-299
	2	LA	W0038	145	08		24-54-21	150-199, 275-299
	2	LA	W0038	150	08		24-54-21	150-199, 275-299

HOOKUP LIST
D280T132

91-21-51
Section C01100
Page 9
Jan 21/2005



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C01186		P011-03/ /U017		CB-TIRE PRESS IND 1				050-099, 155-199, 277-299
C01186		P011-03/ /U017		CB-TIRE PRESS IND 1 (INOP)				150-154
C01186		P011-03/ /U017		CB-TIRE PRESS IND 1 (SB 32-0085)				275-276
	1	D	W0040	20B	22		32-45-11	050-099, 150-156, 163-199, 275-299
	2	LA	W0036	073	08		24-54-11	050-099
	2	LA	W0036	188	08		24-54-11	050-099
	2	LA	W0036	076	08		24-54-11	150-199, 275-299
	2	LA	W0036	162	08		24-54-11	150-199, 275-299
	CAP	Y	W0040	20B	22		32-45-11	157-162
C01187		P034-00/ /M011		CB-TIRE PRESS IND 2				050-099, 155-199, 277-299
C01187		P034-00/ /M011		CB-TIRE PRESS IND 2 (INOP)				150-154
C01187		P034-00/ /M011		CB-TIRE PRESS IND 2 (SB 32-0085)				275-276
	1	D	W1012	008	10		24-54-61	050-099, 275-299
	1	D	W1012	009	10		24-54-61	150-155
	1	D	W1012	058	10		24-54-61	150-199
	1	D	W1012	059	10		24-54-61	275-299
	2	D	W0054	068	22		32-45-11	050-099, 150-156, 163-199, 275-299
	CAP	Y	W0054	068	22		32-45-11	157-162
C01190		P006-05/ /J032		CB-ADC SOURCE SELECT RLY-L (SB 34A0332)				ALL
	1	D	W1026	085	12		24-54-73	ALL
	2	D	W0156	187	22		34-12-61	ALL
C01191		P006-05/ /J033		CB-ADC SOURCE SELECT RLY-R (SB 34A0332)				ALL
	1	D	W1030	062	08		24-54-21	ALL
	2	D	W0152	059	22		34-12-62	ALL
C01192		P011-06/ /S028		CB-POSITION LIGHT, LEFT				ALL
	1	D	W0042	152	20		33-43-11	050-099
	1	D	W0042	152	18		33-43-11	150-199, 275-299
	2	D	W0038	035	12		24-51-52	ALL
	2	D	W0038	036	12		24-51-52	ALL
C01193		P011-06/ /S030		CB-POSITION LIGHT, RIGHT				ALL
	1	D	W0042	147	20		33-43-11	050-099
	1	D	W0042	147	18		33-43-11	150-199, 275-299
C01194		P011-06/ /P034		CB-LAV CALL/SMOKE DET SYS				275-299
	1	D	W0042	014	22		33-25-11	275-299

HOOKUP LIST

D280T132

91-21-51

Section C01100

Page 10

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C01194		P011-06/ /P034		CB-LAV CALL/SMOKE DET SYS (continued)				275-299
	2	LA	W0038	049	08		24-54-21	275-299
	2	LA	W0038	050	08		24-54-21	275-299
C01195		P037-00/ /B004		CB-R. FWD DR AREA HTR-PWR (SB 21-0139)				275-299
	A1	M	W1046	130	10		24-51-23	275-299
	A2	D	W0192	347R	18		21-45-21	275-299
	B1	M	W1046	131	10		24-51-23	275-299
	B2	D	W0192	347Y	18		21-45-21	275-299
	C1	M	W1046	132	10		24-51-23	275-299
	C2	D	W0192	347B	18		21-45-21	275-299

HOOKUP LIST

D280T132

91-21-51

Section C01100

Page 11 End

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C01200		P011-04/ /A035		CB-3,IND LTS				ALL
	2	D	W0044	038	22		33-16-12	ALL
	DED		W0044	038Z			33-16-12	ALL
C01202		P011-06/ /N031		CB-WING LANDING LIGHTS DIM CONTROL				ALL
	1	LA	W0038	047	08		24-54-21	ALL
	1	LA	W0038	048	08		24-54-21	ALL
	2	D	W0042	149	20		33-42-11	ALL
C01203		P011-06/ /R032		CB-NIGHT LTS,FWD				ALL
	1	D	W0038	138	18		24-51-24	ALL
	1	D	W0038	501	12		24-51-24	050-099, 152-199, 275-276, 280-299
	1	D	W0038	501	18		24-51-24	277-278
	2	D	W0042	046	20		33-21-21	ALL
C01204		P037-00/ /L007		CB-NIGHT LTS,AFT PASS.				ALL
	1	D	W0058	004	22		33-21-21	ALL
	2	D	W0058	005	12		24-51-24	ALL
C01205		P033-00/ /J004		CB-NLG WW SVCE LTS				ALL
	1	D	W0052	048	18		33-31-11	ALL
	2	M	W0138	098	14		24-53-51	050-099
	2	M	W0138	047	10		24-53-51	ALL
	2	M	W0138	098	10		24-53-51	150-199, 275-299
C01206		P033-00/ /J005		CB-MN GEAR WW SVCE LTS				ALL
	1	D	W0052	034	20		33-31-11	ALL
	2	M	W0138	039	12		24-51-52	ALL
	2	M	W0138	040	12		24-51-52	ALL
C01207		P033-00/ /L002		CB-INDIRECT CLG LTS CONT				ALL
	1	D	W0052	036	24		33-21-11	ALL
	2	D	W0138	081	10		24-51-52	050-099
	2	M	W0138	079	10		24-51-52	050-099
	2	M	W0138	079	12		24-51-52	150-199, 275-299
	2	M	W0138	081	12		24-51-52	150-199, 276-299
	2	M	W0138	068	12		24-51-52	275
C01209		P034-00/ /S010		CB-FWD CARGO COMPT LTS				ALL
	1	M	W1012	031	12		24-51-61	050-099, 275-299

HOOKUP LIST

D280T132

91-21-51

Section C01200

Page 1

May 20/2005



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL		Description		GA	CO	Diagram	Effectivity
		Type	Bundle	Wire No.					
C01209		P034-00/ /S010		CB-FWD CARGO COMPT LTS (continued)					ALL
	1	M	W1012	033	12		24-51-61	150-199	
	2	D	W0054	010	18		33-37-11	ALL	
	2	D	W0054	041	18		33-37-11	ALL	
C01210		P034-00/ /S011		CB-AFT CARGO COMPT LTS					ALL
	2	D	W0054	011	16		33-37-21	ALL	
C01211		P033-00/ /L001		CB-FWD IND CLG/GLY LTS					ALL
	1	D	W0052	037	16		33-21-11	ALL	
	2	D	W0138	085	12		24-51-52	050-099	
	2	M	W0138	085	12		24-51-52	150-199, 276-299	
	2	M	W0138	109	10		24-51-52	275	
C01212		P011-01/ /B006		CB-PORT. EMER LT CHGR					ALL
	1	D	W0044	167	22		33-51-11	ALL	
	2	D	W0032	100	12		24-54-73	050-099	
	2	D	W0032	099	12		24-54-73	ALL	
	2	D	W0032	117	12		24-54-73	150-199, 275-299	
C01213		P033-00/ /K007		CB-LIGHTS,FLIGHT DECK DOME					ALL
	1	M	W0138	099	14		24-53-51	050-099	
	1	M	W0138	100	14		24-53-51	050-099	
	1	M	W0138	099	10		24-53-51	150-199, 275-299	
	1	M	W0138	100	10		24-53-51	150-199, 275-299	
	2	D	W0052	049	20		33-11-14	ALL	
C01215		P034-00/ /S004		CB-LIGHTS,LAVATORY SERVICE					275-299
	1	M	W1012	028	12		24-51-61	275-299	
	2	D	W0054	001	20		33-26-11	275-299	
C01216		P011-06/ /P033		CB-ATTEND. LIGHT CONT					050-099, 150-199
	1	D	W0042	190	20		33-21-11	050-099	
	1	D	W0042	20A	20		33-21-11	150-199	
C01219		P033-00/ /L003		CB-INDIRECT CLG LTS, AFT INBD					ALL
	1	D	W0052	038	16		33-21-12	ALL	
	2	M	W0138	079	10		24-51-52	050-099	
	2	M	W0138	079	12		24-51-52	150-199, 275-299	

HOOKUP LIST

D280T132

91-21-51

Section C01200

Page 2

May 20/2005

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C01220		P033-00/ /L005		CB-DIRECT CEILING LTS,FWD				ALL
	1	D	W0052	039	22		33-22-41	ALL
	2	D	W0138	106	12		24-51-24	050-099
	2	D	W0138	107	12		24-51-24	050-099
	2	M	W0138	106	12		24-51-24	150-199, 275-299
	2	M	W0138	107	12		24-51-24	150-199, 275-299
C01221		P033-00/ /L006		CB-AFT DIRECT CEILING LTS				ALL
	1	D	W0052	040	20		33-22-42	ALL
	2	D	W0138	107	12		24-51-24	050-099
	2	M	W0138	107	12		24-51-24	150-199, 275-299
C01222		P033-00/ /L004		CB-INDIRECT CLG LTS,AFT OUTBOARD				ALL
	1	D	W0052	041	16		33-21-12	ALL
	2	M	W0138	030	10		24-51-52	050-099
	2	M	W0138	084	10		24-51-52	050-099, 150-154, 275
	2	M	W0138	083	12		24-51-52	150-199
	2	M	W0138	030	12		24-51-52	155-199, 276-299
C01223		P011-06/ /P034		CB-CALL SYSTEM,LAV				050-099, 150-199
	1	D	W0042	014	22		33-25-11	050-099, 150-199
	2	LA	W0038	049	08		24-54-21	050-099, 150-199
	2	LA	W0038	050	08		24-54-21	050-099, 150-199
C01225		P011-06/ /N034		CB-ANTI-COLL LTS,RED				ALL
	1	D	W0038	036	12		24-51-52	ALL
	1	D	W0038	159	12		24-51-52	275-276
	2	D	W0042	141	20		33-44-11	ALL
C01226		P011-03/ /N007		CB-ANTI-COLL LTS,WHITE				ALL
	1	D	W0036	009	12		24-51-11	050-099
	1	D	W0036	010	12		24-51-11	050-099
	2	D	W0040	051	20		33-44-21	ALL
C01227		P011-06/ /N035		CB-WING ILLUM LIGHTS				ALL
	2	D	W0042	145	20		33-41-11	050-099
	2	D	W0042	145	18		33-41-11	150-199, 275-299
C01229		P033-00/ /H004		CB-LIGHTS,CLOSET				ALL
	1	M	W0138	098	14		24-53-51	050-099

HOOKUP LIST

D280T132

91-21-51

Section C01200

Page 3

May 20/2005



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C01229		P033-00/ /H004		CB-LIGHTS,CLOSET (continued)				ALL
	1	M	W0138	099	14		24-53-51	050-099
	1	M	W0138	098	10		24-53-51	150-199, 275-299
	1	M	W0138	099	10		24-53-51	150-199, 275-299
	2	D	W0052	050	22		33-22-21	ALL
C01232		P011-03/ /S005		CB-LIGHTING CONTROL RLY,5KVA INSTR				ALL
	1	D	W0040	761	24		33-13-16	ALL
	2	D	W0036	146	12		24-51-11	ALL
C01237		P011-03/ /P002		CB-INSTR & PNL LTS,CAPT				ALL
	1	D	W0040	140	24		33-13-11	ALL
	1	D	W0040	727	24		33-11-13	ALL
	1	D	W0040	728	24		33-13-16	ALL
	2	D	W0036	036	12		24-51-42	ALL
C01238		P011-06/ /S031		CB-CREW REST LIGHTS				050-099, 162-199
	1	D	W0042	600	22		33-22-33	050-099, 162-199
	2	D	W0038	039	14		24-53-21	050-099, 162-199
	2	D	W0038	167	14		24-53-21	050-099, 162-199
C01239		P011-06/ /P028		CB-INSTR & PNL LTS,F/O				ALL
	1	D	W0042	008	22		33-13-13	ALL
	1	D	W0042	721	22		33-13-21	ALL
	2	D	W0038	117	20		24-51-43	ALL
C01240		P011-06/ /P030		CB-GLARESHIELD INSTR & PNL LTS				ALL
	1	D	W0042	009	24		33-13-17	ALL
	2	D	W0038	166	12		24-51-21	050-099
	2	D	W0038	012	12		24-51-21	ALL
	2	D	W0038	011	12		24-51-21	150-199, 275-299
C01241		P011-03/ /P003		CB-OVHD INSTR & PNL LTS				ALL
	1	D	W0040	053	22		33-13-16	ALL
	2	D	W0036	155	12		24-51-14	ALL
	2	D	W0036	156	12		24-51-14	ALL
C01242		P011-03/ /P001		CB-AISLE STAND INSTR & PNL LTS				ALL
	1	D	W0040	142	22		33-13-18	ALL
	2	D	W0036	154	12		24-51-14	ALL

HOOKUP LIST

D280T132

91-21-51

Section C01200

Page 4

May 20/2005

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C01242		P011-03/ /P001		CB-AISLE STAND INSTR & PNL LTS (continued)				ALL
	2	D	W0036	155	12		24-51-14	ALL
C01244		P011-03/ /P004		CB-OVHD CB INSTR & PNL LIGHT				ALL
	1	D	W0040	748	22		33-13-19	ALL
	2	D	W0036	123	12		24-51-11	ALL
	2	D	W0036	166	12		24-51-11	ALL
C01246		P011-01/ /B007		CB-STBY INSTR LTS				ALL
	1	D	W0044	012	24		33-13-11	ALL
	1	D	W0044	737	22		33-13-16	ALL
C01247		P011-03/ /N003		CB-NOSE GEAR LDG LT,L				ALL
	1	D	W0036	011	12		24-51-11	ALL
	1	D	W0036	010	12		24-51-11	050-099, 275-299
	1	D	W0036	009	12		24-51-11	150-199
	2	D	W0040	048	16		33-42-11	ALL
C01248		P011-03/ /N004		CB-NOSE GEAR LDG LT,R				ALL
	1	D	W0036	013	12		24-51-11	ALL
	1	D	W0036	014	12		24-51-11	ALL
	2	D	W0040	049	16		33-42-11	ALL
C01249		P011-03/ /N005		CB-WING LDG LT,L				ALL
	2	D	W0040	050	18		33-42-11	050-099
	2	D	W0040	050	16		33-42-11	150-199, 275-299
C01250		P011-06/ /N032		CB-WING LDG LT,R				ALL
	1	D	W0038	010	12		24-51-21	ALL
	1	D	W0038	011	12		24-51-21	ALL
	2	D	W0042	138	18		33-42-11	050-099
	2	D	W0042	138	16		33-42-11	150-199, 275-299
C01251		P011-06/ /P031		CB-MAP LIGHTS				ALL
	1	D	W0042	010	22		33-11-16	ALL
	1	D	W0042	176	24		33-14-11	ALL
	2	D	W0038	038	14		24-53-21	ALL
	2	D	W0038	167	14		24-53-21	050-099, 162-199
	2	D	W0038	039	14		24-53-21	150-157, 275-299

HOOKUP LIST

D280T132

91-21-51

Section C01200

Page 5

May 20/2005



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C01252		P011-03/ /P008		CB-LTS,CHART				ALL
	1	D	W0040	144	24		33-14-21	ALL
	2	D	W0036	041	14		24-53-11	ALL
C01253		P033-00/ /J001		CB-S/BELT SIGN				ALL
	1	D	W0052	051	22		33-24-11	050-099
	1	D	W0052	051	16		33-24-11	150-199, 275-299
C01254		P011-03/ /P009		CB-PASS. SIGN CONT				ALL
	1	D	W0040	706	24		33-24-11	ALL
C01255		P033-00/ /K005		CB-ENTRY/ATTENDANT LTS,AFT				ALL
	1	M	W0138	015	12		24-51-52	ALL
	2	D	W0052	042	20		33-22-11	ALL
C01256		P034-00/ /S003		CB-APU/TAIL COMPT LT				ALL
	2	D	W0054	035	18		33-31-31	ALL
C01257		P033-00/ /K006		CB-ELEC EQUIP CTR LIGHTS				ALL
	2	D	W0052	053	16		33-31-41	ALL
C01258		P033-00/ /H001		CB-LAV SIGNS				ALL
	1	M	W0138	047	10		24-53-51	ALL
	1	M	W0138	105	10		24-53-51	ALL
	2	D	W0052	073	22		33-24-11	ALL
C01259		P011-03/ /N001		CB-LIGHTS CONTROL,NOSE GEAR				ALL
	1	LA	W0036	060	08		24-54-11	ALL
	1	LA	W0036	061	08		24-54-11	ALL
	2	D	W0040	085	24		33-42-11	ALL
C01260		P033-00/ /J002		CB-S/BELT NO SMOKE SIGNS				ALL
	1	D	W0052	052	22		33-24-11	050-099
	1	D	W0052	052	16		33-24-11	150-199, 275-299
C01262		P033-00/ /L007		CB-GALLEY LTS				ALL
	1	D	W0052	043	20		33-27-11	ALL
	2	M	W0138	030	10		24-51-52	050-099
	2	M	W0138	083	10		24-51-52	050-099
	2	M	W0138	030	12		24-51-52	150-199, 275-299

HOOKUP LIST

D280T132

91-21-51

Section C01200

Page 6

May 20/2005

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C01262		P033-00/ /L007		CB-GALLEY LTS (continued)				ALL
	2	M	W0138	084	10		24-51-52	155-199
	2	M	W0138	083	12		24-51-52	276-299
C01263		P033-00/ /K001		CB-FWD SIDEWALL/GLY LTS				ALL
	1	M	W0138	028	12		24-51-52	ALL
	1	M	W0138	030	12		24-51-52	150-154, 275
	2	D	W0052	044	18		33-21-31	050-099
	2	D	W0052	044	16		33-21-31	150-199, 275-299
C01265		P033-00/ /K002		CB-SIDEWALL LTS AFT				ALL
	1	M	W0138	040	12		24-51-52	ALL
	2	D	W0052	045	18		33-21-31	050-099
	2	D	W0052	045	16		33-21-31	150-199, 275-299
C01266		P033-00/ /K003		CB-SIDEWALL LTS CONTROL				ALL
	1	M	W0138	014	12		24-51-52	ALL
	1	M	W0138	015	12		24-51-52	ALL
	2	D	W0052	046	24		33-21-31	ALL
C01269		P033-00/ /K004		CB-ENTRY/ATTENDANT LTS,FWD				ALL
	1	M	W0138	100	14		24-53-51	050-099
	1	M	W0138	100	10		24-53-51	150-199, 275-299
	2	D	W0052	054	20		33-22-11	ALL
C01273		P011-06/ /R028		CB-R1,IND LTS				ALL
	2	D	W0042	023	22		33-16-12	ALL
C01274		P011-06/ /R029		CB-R2,IND LTS				ALL
	2	D	W0042	044	22		33-16-12	ALL
	DED		W0042	044Z			33-16-12	ALL
C01275		P037-00/ /L005		CB-LOGO LIGHTS,L				ALL
	1	D	W0058	050	16		33-45-11	ALL
	2	M	W1046	044	12		24-51-23	050-099
	2	D	W1046	045	12		24-51-23	150-154, 162-165, 275-276
	2	M	W1046	045	12		24-51-23	155-157, 166-199, 277-299
C01276		P011-03/ /N006		CB-RUNWAY TURNOFF LT,L				ALL
	2	D	W0040	054	20		33-42-21	050-099

HOOKUP LIST

D280T132

91-21-51

Section C01200

Page 7

May 20/2005



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C01276		P011-03/ /N006		CB-RUNWAY TURNOFF LT,L (continued)				ALL
	2	D	W0040	054	18		33-42-21	150-199, 275-299
C01277		P011-06/ /N033		CB-RUNWAY TURNOFF LT,R				ALL
	2	D	W0042	188	20		33-42-21	050-099
	2	D	W0042	188	18		33-42-21	150-199, 275-299
C01278		P033-00/ /J006		CB-LOGO LIGHTS,L				ALL
	1	D	W0052	067	16		33-45-11	ALL
C01279		P033-00/ /J007		CB-LOGO LIGHTS,R				ALL
	1	D	W0052	068	16		33-45-11	ALL
	2	M	W0138	014	12		24-51-52	050-099, 155-157, 165-199, 275-299
	2	M	W0138	070	10		24-51-52	050-099, 275-299
	2	D	W0138	014	12		24-51-52	150-154, 162-164
	2	D	W0138	070	12		24-51-52	150-154, 162-164
	2	M	W0138	070	12		24-51-52	155-157, 165-199
C01280		P011-06/ /P036		CB-EMER LTS/OFF WG ESC R				ALL
	1	D	W0042	045	18		33-51-11	ALL
	2	LA	W0038	048	08		24-54-21	ALL
	2	LA	W0038	049	08		24-54-21	ALL
C01281		P011-06/ /P032		CB-LIGHTS,UTILITY				ALL
	1	D	W0042	175	24		33-14-31	ALL
C01282		P037-00/ /L006		CB-LOGO LIGHTS,R				ALL
	1	D	W0058	051	16		33-45-11	ALL
	2	M	W1046	021	10		24-51-23	050-099, 277-299
	2	N1	W1046	021	12		24-51-23	150-154, 162-165
	2	M	W1046	021	12		24-51-23	155-157, 166-199
	2	D	W1046	021	10		24-51-23	275-276
C01283		P011-01/ /B004		CB-MAIN PNL FLOOD LT				ALL
	1	D	W0044	036	24		33-11-11	ALL
	1	D	W0044	733	24		33-11-15	ALL
	2	D	W0032	110	14		24-54-73	ALL
	2	D	W0032	112	14		24-54-73	ALL

HOOKUP LIST

D280T132

91-21-51

Section C01200

Page 8

May 20/2005



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C01284		P011-06/ /R030		CB-R3,IND LTS				ALL
	2	D	W0042	024	22		33-16-12	ALL
	2	D	W0042	026	22		33-16-17	ALL
	DED		W0042	024Z			33-16-12	ALL
C01287		P011-01/ /B005		CB-AISLE STAND FLOOD LT				ALL
	1	D	W0044	011	20		33-11-13	ALL
C01289		P011-03/ /P005		CB-FLOOD LT STBY CONT				ALL
	1	D	W0040	138	24		33-11-11	ALL
	2	D	W0036	165	12		24-51-14	ALL
C01290		P034-00/ /S004		CB-LAV LTS & WTR LINE HTRS, SYS 1				050-099, 150-199
	1	M	W1012	028	12		24-51-61	050-099
	1	M	W1012	026	12		24-51-61	150-199
	2	D	W0054	001	20		33-26-11	050-099, 150-199
C01291		P034-00/ /S005		CB-LAV LTS & WTR LINE HTRS, SYS 2				050-099, 150-199
	2	D	W0054	066	20		33-26-11	050-099, 150-199
C01293		P011-03/ /R001		CB-L1,IND LTS				ALL
	2	D	W0040	110	22		33-16-12	ALL
	2	D	W0040	114	22		33-16-17	ALL
C01296		P033-00/ /J003		CB-NO SMOKE SIGN				ALL
	1	D	W0052	055	22		33-24-11	050-099
	1	D	W0052	055	16		33-24-11	150-199, 275-299
C01297		P011-03/ /R002		CB-L2,IND LTS				ALL
	2	D	W0040	106	22		33-16-12	ALL
	DED		W0040	106Z			33-16-12	ALL
C01298		P011-03/ /R003		CB-L3,IND LTS				ALL
	1	LA	W0036	068	08		24-54-11	ALL
	1	LA	W0036	069	08		24-54-11	ALL
	2	D	W0040	111	22		33-16-12	ALL
	DED		W0040	111Z			33-16-12	ALL

HOOKUP LIST

D280T132

91-21-51

Section C01200

Page 9 End

May 20/2005



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C01300		P034-00/ /S002		CB-AIR COND COMPT LIGHTS				ALL
	1	M	W1012	014	12		24-51-61	050-099, 150-199
	1	M	W1012	017	12		24-51-61	275-299
	2	D	W0054	017	18		33-31-21	ALL
C01302		P011-06/ /P035		CB-EMER LTS/OFF WG ESC L				ALL
	1	D	W0042	047	18		33-51-11	ALL
C01303		P011-04/ /A019		CB-EMER LTS/OFF WG ESC,L ALTERNATE				ALL
	2	D	W0044	752	20		33-51-11	ALL
	DED		W0044	752Z			33-51-11	ALL
C01306		P011-04/ /A033		CB-1,IND LTS				ALL
	2	D	W0044	015	22		33-16-12	ALL
C01307		P011-04/ /A032		CB-TEST,IND LTS				ALL
	2	D	W0044	003	24		33-16-11	ALL
C01308		P011-04/ /A034		CB-2,IND LTS				ALL
	1	D	W0032	009	08		24-54-71	277-299
	2	D	W0044	040	22		33-16-12	ALL
	2	D	W0044	041	22		33-16-17	ALL
	DED		W0044	040Z			33-16-12	ALL
	DED		W0044	041Z			33-16-17	ALL
C01309		P011-03/ /R005		CB-DIM CONT,IND LTS				ALL
	1	LA	W0036	067	08		24-54-11	ALL
	1	LA	W0036	068	08		24-54-11	ALL
	2	D	W0040	146	24		33-16-11	ALL
C01310		P011-04/ /A020		CB-EMER LTS/OFF WG ESC,R ALTERNATE				ALL
	2	D	W0044	751	20		33-51-11	ALL
	DED		W0044	751Z			33-51-11	ALL
C01312		P011-03/ /N008		CB-TAXI LIGHT-L				ALL
	1	D	W0036	174	12		24-51-11	150-199
	1	D	W0036	009	12		24-51-11	150-199, 275-299
	1	D	W0036	010	12		24-51-11	275-299
	2	D	W0040	125	20		33-42-21	050-099
	2	D	W0040	125	18		33-42-21	150-199, 275-299

HOOKUP LIST

D280T132

91-21-51

Section C01300

Page 1

May 20/2005



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C01313		P011-03/ /N009		CB-TAXI LIGHT,R				ALL
	1	D	W0036	013	12		24-51-11	ALL
	1	D	W0036	115	12		24-51-11	ALL
	2	D	W0040	722	20		33-42-21	050-099
	2	D	W0040	722	18		33-42-21	150-199, 275-299
C01316		P011-03/ /R009		CB-MIRROR LTS LAV SYS 1				ALL
	1	D	W0036	017	12		24-51-11	ALL
	1	D	W0036	117	12		24-51-11	ALL
	2	D	W0040	153	22		33-26-11	ALL
C01317		P011-06/ /R036		CB-MIRROR LTS LAV SYS 2				ALL
	1	D	W0038	015	12		24-51-21	ALL
	1	D	W0038	109	12		24-51-21	ALL
	2	D	W0042	049	22		33-26-11	ALL
C01318		P011-03/ /R007		CB-LTS,LAVATORY SYS 1				ALL
	1	D	W0036	153	18		24-51-14	ALL
	2	D	W0040	157	16		33-26-21	ALL
C01319		P011-06/ /R034		CB-LTS,LAVATORY SYS 2				ALL
	1	D	W0038	501	12		24-51-24	050-099, 152-199, 275-276, 280-299
	1	D	W0038	501	18		24-51-24	277-278
	2	D	W0042	161	16		33-26-21	ALL
C01320		P011-06/ /U029		CB-OXYGEN PRESSURE				ALL
	1	D	W0042	720	24		35-11-13	ALL
	2	LA	W0038	133	08		24-54-21	050-099
	2	LA	W0038	134	08		24-54-21	050-099
	2	LA	W0038	084	08		24-54-21	150-199, 275-299
	2	LA	W0038	130	08		24-54-21	150-199, 275-299
C01321		P011-04/ /A021		CB-PASS. OXY,LEFT				ALL
	2	D	W0044	188	16		35-21-12	ALL
C01322		P011-04/ /A023		CB-PASS. OXY,RIGHT				ALL
	1	LA	W0032	007	08		24-54-71	ALL
	1	LA	W0032	010	08		24-54-71	ALL
	2	D	W0044	189	16		35-21-13	ALL

HOOKUP LIST

D280T132

91-21-51

Section C01300

Page 2

May 20/2005



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C01323		P011-04/ /A024		CB-PASS. OXY CONT				ALL
	2	D	W0044	187	24		35-21-11	ALL
C01324		P011-04/ /A022		CB-PASS. OXY,CENTER				ALL
	2	D	W0044	190	16		35-21-14	ALL
C01325		P011-04/ /A025		CB-PASS. OXY,MANUAL DEPLOY				ALL
	2	D	W0044	186	24		35-21-11	ALL
C01330		P011-03/ /S012		CB-AIR SUPPLY ISOLATION VALVE POWER,LEFT				ALL
	1	D	W0040	167	24		36-11-11	ALL
	2	D	W0036	154	12		24-51-14	ALL
C01331		P011-06/ /S021		CB-AIR SUPPLY ISLN VALVE POWER,RIGHT				ALL
	1	D	W0042	013	24		36-11-21	ALL
	2	D	W0038	139	12		24-51-24	ALL
C01332		P011-03/ /S016		CB-AIR SUPPLY DUCT PRESS. IND,LEFT				ALL
	1	D	W0040	179	24		36-21-11	ALL
C01333		P011-06/ /S024		CB-AIR SUPPLY APU BLEED CONTROL				ALL
	1	D	W0042	120	24		36-11-41	ALL
	2	LA	W0038	077	08		24-54-21	ALL
	2	LA	W0038	078	08		24-54-21	ALL
C01334		P011-01/ /A014		CB-AIR SUPPLY ISOLATION VALVE CONT,LEFT				ALL
	2	D	W0040	166	24		36-11-11	ALL
C01335		P011-06/ /S022		CB-AIR SUPPLY ISOLATION VALVE CONT,RIGHT				ALL
	1	D	W0042	116	24		36-11-21	ALL
	2	LA	W0038	078	08		24-54-21	ALL
	2	LA	W0038	079	08		24-54-21	ALL
C01336		P011-06/ /S023		CB-AIR SUPPLY APU BLEED POWER				ALL
	1	D	W0042	158	20		36-11-41	ALL
	2	D	W0038	110	12		24-51-21	050-099
	2	D	W0038	005	12		24-51-21	ALL
	2	D	W0038	018	12		24-51-21	150-199, 275-299

HOOKUP LIST
D280T132

91-21-51
Section C01300
Page 3
May 20/2005



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C01337		P011-03/ /S014		CB-AIR SUPPLY ISOLATION VALVE POWER,CTR				ALL
	1	D	W0040	169	24		36-11-31	ALL
	2	D	W0036	019	12		24-51-11	ALL
	2	D	W0036	020	12		24-51-11	ALL
C01338		P011-03/ /S015		CB-AIR SUPPLY ISOLATION VALVE CONT,CTR				ALL
	1	D	W0040	168	24		36-11-31	ALL
	2	LA	W0036	070	08		24-54-11	ALL
	2	LA	W0036	071	08		24-54-11	ALL
C01339		P011-03/ /S011		CB-AIR SUPPLY ENG BLEED CONT,LEFT				ALL
	1	D	W0040	719	18		36-11-51	ALL
C01340		P011-06/ /S020		CB-AIR SUPPLY ENG BLEED CONT,RIGHT				ALL
	1	D	W0042	178	18		36-11-52	ALL
	2	LA	W0038	079	08		24-54-21	050-099
	2	LA	W0038	080	08		24-54-21	050-099
C01341		P036-00/ /L007		CB-AIR SUPPLY BITE				ALL
	1	D	W0056	045	24		36-23-11	ALL
	2	M	W1044	020	14		24-51-12	ALL
C01342		P011-06/ /S025		CB-AIR SUPPLY DUCT PRESS. IND,RIGHT				ALL
	1	D	W0042	164	24		36-21-11	ALL
C01343		P011-03/ /S010		CB-AIR SUPPLY ENG BLEED IND,LEFT				ALL
	1	D	W0040	702	24		36-11-51	ALL
	2	LA	W0036	069	08		24-54-11	ALL
	2	LA	W0036	070	08		24-54-11	ALL
C01344		P011-06/ /S019		CB-AIR SUPPLY ENG BLEED IND,RIGHT				ALL
	1	D	W0042	179	24		36-11-52	ALL
	2	LA	W0038	079	08		24-54-21	150-199, 275-299
	2	LA	W0038	080	08		24-54-21	150-199, 275-299
C01345		P011-04/ /A027		CB-AIR SUPPLY ISLN VALVE CONT ALT,RIGHT				ALL
	2	D	W0042	745	24		36-11-21	ALL
C01351		P011-06/ /N023		CB-PRESSURE REGULATING VALVE CONT,RIGHT				050-099, 155-156, 162-166
	2	D	W0042	798	18		36-11-52	150-154

HOOKUP LIST

D280T132

91-21-51

Section C01300

Page 4

May 20/2005



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL		Description		GA	CO	Diagram	Effectivity
		Type	Bundle	Wire No.					
C01353		P011-06/ /U028		CB-POTABLE WATER/ENTRY LTS					ALL
	1	D	W0042	165	24		38-15-11	ALL	
	2	LA	W0038	132	08		24-54-21	050-099	
	2	LA	W0038	133	08		24-54-21	050-099	
	2	LA	W0038	130	08		24-54-21	150-199, 275-299	
2	LA	W0038	144	08		24-54-21	150-199, 275-299		
C01354		P034-00/ /P011		CB-POTABLE WATER/ENTRY LTS					ALL
	1	D	W1012	009	10		24-54-61	050-099, 150-155, 162-165	
	1	D	W1012	008	10		24-54-61	050-099, 275-299	
	1	D	W1012	010	10		24-54-61	156-157, 166-199	
	2	D	W0026	117	24		38-15-11	ALL	
C01365		P036-00/ /D007		CB-WATER HEATERS LAV SYSTEM 1					ALL
	1	M	W1044	027	10		24-51-13	050-099	
	1	M	W1044	028	12		24-51-13	ALL	
	1	M	W1044	024	12		24-51-13	150-199	
	1	M	W1044	027	12		24-51-13	275-299	
	2	D	W0056	044	16		38-13-11	ALL	
C01366		P037-00/ /H007		CB-WATER HEATERS LAV SYSTEM 2					ALL
	1	M	W1046	025	14		24-51-23	ALL	
2	D	W0058	026	16		38-13-11	ALL		
C01367		P011-03/ /R008		CB-FLUSH CONTROL LAV SYSTEM 1					ALL
	1	LA	W0036	066	08		24-54-11	ALL	
	1	LA	W0036	175	08		24-54-11	ALL	
2	D	W0040	150	18		38-32-11	ALL		
C01368		P011-06/ /R035		CB-FLUSH CONTROL LAV SYSTEM 2					ALL
	1	D	W0038	180	08		24-54-21	ALL	
	2	D	W0042	108	18		38-32-11	ALL	
C01371		P011-03/ /R006		CB-VACUUM S/O VALVE, LAV SYS 1 (INOP)					ALL
	1	LA	W0036	067	08		24-54-11	ALL	
	1	LA	W0036	175	08		24-54-11	ALL	
2	D	W0040	780	18		38-32-14	ALL		
C01372		P011-06/ /R033		CB-VACUUM S/O VALVE, LAV SYS 2 (INOP)					ALL
	1	LA	W0038	054	08		24-54-21	ALL	

HOOKUP LIST

D280T132

91-21-51

Section C01300

Page 5

May 20/2005



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C01372		P011-06/ /R033		CB-VACUUM S/O VALVE, LAV SYS 2 (INOP) (continued)				ALL
	1	LA	W0038	180	08		24-54-21	ALL
	2	D	W0042	788	18		38-32-14	ALL
C01373		P037-00/ /H006		CB-WATER HEATERS LAV SYSTEM 1/2 (INOP)				050-099, 150-199
	1	M	W1046	044	12		24-51-23	050-099, 155-157, 166-199
	1	M	W1046	045	12		24-51-23	050-099, 155-157, 166-199
	1	N1	W1046	044	12		24-51-23	150-154, 162-165
	1	N1	W1046	045	12		24-51-23	150-154, 162-165
	2	D	W0192	19U	16		38-13-11	050-099, 150-157
	2	D	W0058	056	16		38-13-11	162-199
C01374		P034-00/ /N010		CB-LAV FLUSH CONT SYS 1				156-157, 166-199, 277-299
C01374		P034-00/ /N010		CB-LAV FLUSH CONT SYS 1 (SB 38-0035)				275-276
	1	D	W0054	102	18		38-32-11	156-157, 166-199, 275-299
C01375		P034-00/ /N011		CB-LAV FLUSH CONT SYS 2				156-157, 166-199, 277-299
C01375		P034-00/ /N011		CB-LAV FLUSH CONT SYS 2 (SB 38-0035)				275-276
	1	D	W0054	099	18		38-32-11	156-157, 166-199, 275-299
	2	D	W1012	010	10		24-54-61	156-157, 166-199
	2	D	W1012	064	10		24-54-61	156-157, 166-199, 275-299
	2	D	W1012	059	10		24-54-61	275-299
C01383		P049-00/ /C002		CB-APU PRIME CONTROL				ALL
	1	D	W1050	014	14		24-31-41	ALL
	1	D	W1050	016	14		24-31-41	ALL
	2	D	W1050	081	16		49-61-11	ALL
C01385		P049-00/ /C004		CB-APU INLET DOOR ACTR				ALL
	1	D	W1050	016	14		24-31-41	ALL
	1	D	W1050	017	14		24-31-41	ALL
	2	D	W1050	023	16		49-15-11	ALL
C01391		P011-04/ /B035		CB-APU ALTN CONTROL				ALL
	1	D	W0044	042	16		49-61-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section C01300

Page 6 End

May 20/2005



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C01400		P011-03/ /T005		CB-DR LOCK,FLT DECK				ALL
	2	D	W0040	705	24		52-51-11	ALL
C01401		P011-04/ /A029		CB-EEC DISCRETES ALT,R ENG				ALL
	2	D	W0042	749	24		73-21-17	ALL
C01402		P011-03/ /T006		CB-ENTRY DR CONT,FWD				ALL
	2	D	W0040	199	22		52-11-12	050-099, 150-199
	2	D	W0040	199	20		52-11-12	275-299
C01403		P034-00/ /J004		CB-CONT-DOOR-CARGO				ALL
	1	D	W0054	018	24		52-34-12	ALL
C01404		P011-01/ /D017		CB-EEC DISCRETES,LEFT ENGINE				ALL
	1	D	W0040	104	24		73-21-17	ALL
	2	D	W0032	116	12		24-54-73	ALL
C01405		P011-05/ /M032		CB-EEC DISCRETES,RIGHT ENGINE				ALL
	1	D	W0042	022	24		73-21-17	ALL
C01406		P011-06/ /T033		CB-DOOR INDICATION				ALL
	2	D	W0042	166	24		52-71-11	ALL
C01408		P034-00/ /J005		CB-CONT-DOOR-FWD ENTRY				ALL
	1	D	W0054	016	22		52-11-12	050-099, 150-199
	1	D	W0054	016	20		52-11-12	275-299
C01412		P011-02/ /M012		CB-FUEL TEMP				ALL
	1	D	W0040	105	24		28-43-11	ALL
	2	LA	W0036	053	08		24-54-11	050-099, 150-154, 275
	2	LA	W0036	054	08		24-54-11	050-099, 150-154, 275
C01415		P011-02/ /M007		CB-FUEL PRESS.,LEFT ENG				ALL
	1	D	W0040	098	24		73-33-11	ALL
	2	D	W0036	116	14		24-53-11	ALL
C01416		P011-05/ /M034		CB-FUEL PRESS.,RIGHT ENG				ALL
	1	D	W0042	710	24		73-33-11	ALL
	2	D	W0038	040	14		24-53-21	ALL
	2	D	W0038	099	14		24-53-21	ALL

HOOKUP LIST

D280T132

91-21-51

Section C01400

Page 1

May 20/2005

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C01419		P011-04/ /D025		CB-L ENG FUEL CONT VLV & EEC CH B RST				ALL
	1	D	W0044	169	22		76-11-11	ALL
	DED		W0044	169Z			76-11-11	ALL
C01420		P011-04/ /D026		CB-R ENG FUEL CONT VLV & EEC CH B RST				ALL
	1	D	W0044	183	22		76-11-11	ALL
C01426		P011-01/ /D015		CB-ENGINE SPEED SENSE L2				ALL
	1	D	W0044	072	24		73-21-18	ALL
C01427		P011-01/ /D016		CB-ENGINE SPEED SENSE R2				ALL
	1	D	W0044	071	24		73-21-18	ALL
	2	D	W0032	012	08		24-54-71	ALL
C01428		P011-04/ /D023		CB-ENGINE SPEED SENSE L1				ALL
	1	D	W0044	074	24		73-21-18	ALL
	2	LA	W0032	002	08		24-54-71	ALL
	2	LA	W0032	003	08		24-54-71	ALL
	DED		W0044	074Z			73-21-18	ALL
C01429		P011-04/ /D024		CB-ENGINE SPEED SENSE R1				ALL
	1	D	W0044	073	24		73-21-18	ALL
	DED		W0044	073Z			73-21-18	ALL
C01430		P011-02/ /M001		CB-IGNITION 1,LEFT ENG				ALL
	1	D	W0040	184	22		74-31-11	ALL
	2	D	W0036	002	12		24-51-11	ALL
C01431		P011-05/ /M028		CB-IGNITION 2,LEFT ENG				ALL
	1	D	W0042	705	22		74-31-11	ALL
	2	D	W0038	001	12		24-51-21	ALL
	2	D	W0038	002	12		24-51-21	ALL
C01432		P011-02/ /M002		CB-IGNITION 1,RIGHT ENG				ALL
	1	D	W0040	714	22		74-31-21	ALL
	2	D	W0036	001	12		24-51-11	ALL
	2	D	W0036	002	12		24-51-11	ALL
	DED		W0040	714Z			74-31-21	ALL

HOOKUP LIST

D280T132

91-21-51

Section C01400

Page 2

May 20/2005



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C01433		P011-05/ /M029		CB-IGNITION 2,RIGHT ENG				ALL
	1	D	W0042	025	22		74-31-21	ALL
	DED		W0042	025Z			74-31-21	ALL
C01434		P011-01/ /D007		CB-STANDBY IGNITION 1				ALL
	1	D	W0040	185	22		74-31-11	ALL
	1	D	W0040	713	22		74-31-11	ALL
C01435		P011-01/ /D008		CB-STANDBY IGNITION 2				ALL
	1	D	W0044	199	22		74-31-11	ALL
	2	D	W0032	103	14		24-54-73	ALL
	2	D	W0032	104	14		24-54-73	ALL
C01439		P011-02/ /M009		CB-BUS POWER SENSE,LEFT ENG				ALL
	1	D	W0040	191	24		74-31-11	ALL
	1	D	W0040	715	24		74-31-11	ALL
	2	D	W0036	003	12		24-51-11	ALL
	2	D	W0036	004	12		24-51-11	ALL
C01440		P011-05/ /M036		CB-BUS POWER SENSE,RIGHT ENG				ALL
	1	D	W0042	706	24		74-31-11	ALL
	1	D	W0042	716	24		74-31-11	ALL
	2	D	W0038	002	12		24-51-21	ALL
C01449		P011-02/ /K009		CB-L ENG NAC VENT VALVE				ALL
	1	D	W0040	126	24		75-23-11	ALL
	2	D	W0036	082	10		24-54-11	ALL
	2	D	W0036	083	10		24-54-11	ALL
C01450		P011-05/ /L035		CB-R ENG NAC VENT VALVE				ALL
	1	LA	W0038	051	08		24-54-21	050-099
	1	LA	W0038	168	08		24-54-21	050-099
	1	LA	W0038	057	08		24-54-21	150-199, 275-276
	1	LA	W0038	058	08		24-54-21	150-199, 275-276
	1	D	W0038	058	08		24-54-21	277-299
	2	D	W0042	113	24		75-23-11	ALL
C01457		P011-05/ /M033		CB-R ENG IDLE CONTROL				ALL
	1	D	W0042	048	20		73-21-19	ALL
	2	D	W0038	051	08		24-54-21	050-099, 150-199

HOOKUP LIST

D280T132

91-21-51

Section C01400

Page 3

May 20/2005



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C01457		P011-05/ /M033		CB-R ENG IDLE CONTROL (continued)				ALL
	2	D	W0038	058	08		24-54-21	275-276
	2	LA	W0038	058	08		24-54-21	277-299
	2	LA	W0038	169	08		24-54-21	277-299
C01458		P011-02/ /M006		CB-L ENG IDLE CONTROL				ALL
	1	D	W0040	103	20		73-21-19	ALL
	2	LA	W0036	054	08		24-54-11	ALL
	2	LA	W0036	055	08		24-54-11	ALL
C01459		P034-00/ /L001		CB-ENGINE IDLE CONTROL				ALL
	1	D	W0054	058	22		73-21-19	ALL
	1	D	W0054	060	22		73-21-19	ALL
C01460		P011-02/ /L007		CB-EEC/SCU PWR-L ENG				050-099, 155-199, 277-299
C01460		P011-02/ /L007		CB-EEC/SCU PWR-L ENG (SB 76-026)				150-154, 275-276
	1	LA	W0036	199	08		24-54-11	ALL
	1	LA	W0036	094	08		24-54-11	050-099, 150-199, 277-278
	1	LA	W0036	055	08		24-54-11	275-276, 280-299
	2	D	W0040	519	16		73-21-11	ALL
C01461		P011-05/ /K028		CB-EEC/SCU PWR-R ENG				050-099, 155-199, 277-299
C01461		P011-05/ /K028		CB-EEC/SCU PWR-R ENG (SB 76-026)				150-154, 275-276
	1	D	W0042	539	16		73-21-11	ALL
	2	LA	W0038	168	08		24-54-21	050-099, 150-199, 275-276
	2	LA	W0038	057	08		24-54-21	050-099, 151, 155-199, 275-299
	2	LA	W0038	169	08		24-54-21	277-299
C01462		P011-04/ /C027		CB-L ENG EEC CHAN A RST				ALL
	2	D	W0042	786	24		73-21-11	ALL
C01463		P011-04/ /C028		CB-R ENG EEC CHAN A RST				ALL
	2	D	W0042	787	24		73-21-11	ALL
C01464		P011-02/ /K001		CB-ENG VIB MONITOR				ALL
	1	D	W0040	095	24		77-31-11	ALL
	2	D	W0036	004	12		24-51-11	ALL
C01465		P011-02/ /L003		CB-PERF SOL-L ENG-CHAN A				ALL
	1	LA	W0036	055	08		24-54-11	150-199

HOOKUP LIST

D280T132

91-21-51

Section C01400

Page 4

May 20/2005



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C01465		P011-02/ /L003		CB-PERF SOL-L ENG-CHAN A (continued)				ALL
	1	LA	W0036	199	08		24-54-11	150-199
	2	D	W0040	101	16		73-21-20	050-099, 275-299
	2	D	W0040	101	20		73-21-20	150-199
C01466		P011-02/ /L004		CB-PERF SOL-L ENG-CHAN B				ALL
	1	LA	W0036	199	08		24-54-11	050-099, 275-299
	1	LA	W0036	055	08		24-54-11	050-099, 277-278
	1	LA	W0036	094	08		24-54-11	275-276, 280-299
	2	D	W0040	775	16		73-21-20	ALL
C01467		P011-05/ /L030		CB-PERF SOL-R ENG-CHAN A				ALL
	1	D	W0038	152	08		24-54-21	275-299
	2	D	W0042	020	16		73-21-20	050-099, 275-299
	2	D	W0042	020	20		73-21-20	150-199
C01468		P011-05/ /L031		CB-PERF SOL-R ENG-CHAN B				ALL
	2	D	W0042	781	16		73-21-20	ALL
C01474		P033-00/ /D004		CB-PIMU,L ENG				ALL
	1	M	W0138	042	12		24-51-52	ALL
	1	M	W0138	041	12		24-51-52	050-099, 150-199, 277-299
	2	D	W0052	047	24		77-35-11	ALL
C01475		P033-00/ /D005		CB-PIMU,R ENG				ALL
	2	D	W0052	083	24		77-35-11	ALL
C01478		P011-04/ /D032		CB-T/R IND ALT,R ENG				ALL
	1	D	W0042	757	24		78-36-21	ALL
C01479		P011-04/ /D033		CB-T/R CONT ALT,R ENG (SB 78-0051FAA)				050-099, 150-156, 162-166, 275-276
C01479		P011-04/ /D033		CB-T/R CONT ALT,R ENG				157, 167-199, 277-299
	1	D	W0042	110	18		78-34-21	ALL
	1	D	W0042	752	24		78-34-21	ALL
C01480		P011-01/ /D013		CB-T/R IND,LEFT ENG				ALL
	1	D	W0040	035	24		78-36-11	ALL
	1	D	W0040	124	24		78-36-11	ALL
	2	D	W0032	090	12		24-54-73	ALL
	2	D	W0032	092	12		24-54-73	ALL

HOOKUP LIST

D280T132

91-21-51

Section C01400

Page 5

May 20/2005



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C01481		P011-05/ /L032		CB-T/R IND,RIGHT ENG				ALL
	1	LA	W0038	066	08		24-54-21	ALL
	1	LA	W0038	067	08		24-54-21	ALL
	2	D	W0042	112	24		78-36-21	ALL
C01482		P011-01/ /D014		CB-T/R CONT,L ENG (SB 78-0051)				050-099, 150-156, 162-166, 275-276
C01482		P011-01/ /D014		CB-T/R CONT,L ENG				157, 167-199, 277-299
	1	D	W0040	096	24		78-34-11	ALL
	2	D	W0032	116	12		24-54-73	ALL
C01483		P011-05/ /L033		CB-T/R CONT,R ENG (SB 78-0051FAA)				050-099, 150-156, 162-166, 275-276
C01483		P011-05/ /L033		CB-T/R CONT,R ENG				157, 167-199, 277-299
	2	D	W0042	021	18		78-34-21	ALL
	2	D	W0042	059	24		78-34-21	ALL
C01486		P011-05/ /M030		CB-DC BUS PWR SENSE RIGHT				ALL
	1	D	W0042	754	24		78-34-21	ALL
	1	D	W0042	755	24		78-34-21	ALL
	1	D	W0042	777	22		78-34-21	ALL
C01493		P011-04/ /C035		CB-T/L INTERLOCK,L ENG				ALL
	2	D	W0042	520	22		78-36-11	ALL
C01494		P011-04/ /C036		CB-T/L INTERLOCK,R ENG ALTN				ALL
	2	D	W0042	521	22		78-36-21	ALL
C01495		P011-05/ /L029		CB-T/L INTERLOCK,R ENG				ALL
	1	LA	W0038	051	08		24-54-21	150-199
	1	LA	W0038	058	08		24-54-21	150-199
	1	D	W0038	152	08		24-54-21	275-299
	2	D	W0042	522	22		78-36-21	ALL
C01498		P011-02/ /L009		CB-OIL PRESS. EICAS REF,LEFT ENGINE				ALL
	1	D	W0036	051	14		24-53-11	ALL
	1	D	W0036	116	14		24-53-11	ALL
	2	D	W0040	100	22		79-32-11	ALL
C01499		P011-05/ /L036		CB-OIL PRESS. EICAS REF,RIGHT ENGINE				ALL
	1	D	W0038	041	14		24-53-21	ALL
	1	D	W0038	094	14		24-53-21	ALL

HOOKUP LIST

D280T132

91-21-51

Section C01400

Page 6

May 20/2005



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C01499		P011-05/ /L036		CB-OIL PRESS. EICAS REF,RIGHT ENGINE (continued)				ALL
	2	D	W0042	016	22		79-32-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section C01400
Page 7 End
May 20/2005



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C01510		P011-04/ /D019		CB-ENGINE START,LEFT CONT				ALL
	1	D	W0044	712	18		80-11-11	ALL
	2	LA	W0032	001	08		24-54-71	ALL
	2	LA	W0032	003	08		24-54-71	ALL
	DED		W0044	712Z			80-11-11	ALL
C01511		P011-04/ /D020		CB-ENGINE START,RIGHT CONT				ALL
	1	D	W0044	179	18		80-11-21	ALL
C01512		P011-04/ /B036		CB-APU ENGINE START/ECS DISCRETE				ALL
	1	D	W0044	081	24		73-21-15	ALL
	1	D	W0044	141	24		80-11-11	ALL
	2	D	W0032	010	08		24-54-71	ALL
C01521		P011-02/ /G016		CB-FSEU CONT 2				ALL
	2	D	W0040	073	24		27-51-61	ALL
C01522		P011-02/ /J016		CB-R FLAP POS IND				ALL
	2	D	W0040	078	24		27-58-11	ALL
C01523		P011-02/ /J017		CB-FLAP/STAB POS SENSING L				ALL
	1	D	W0036	046	14		24-53-11	ALL
	1	D	W0036	047	14		24-53-11	ALL
	2	D	W0040	082	24		27-58-21	ALL
C01524		P011-02/ /G015		CB-FSEU SENSOR 2				ALL
	1	D	W0036	044	14		24-53-11	ALL
	1	D	W0036	045	14		24-53-11	ALL
	2	D	W0040	074	24		27-51-61	ALL
C01525		P011-01/ /C014		CB-FLAP/STAB POS SENSING C				ALL
	2	D	W0044	039	24		27-58-21	ALL
C01526		P011-05/ /J026		CB-FLAP/STAB POS SENSING R				ALL
	1	D	W0038	043	18		24-51-24	ALL
	2	D	W0042	002	24		27-58-21	ALL
C01528		P011-01/ /C012		CB-SHUT OFF VALVE,STAB TRIM,LEFT				ALL
	2	D	W0044	023	20		27-41-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section C01500

Page 1

May 20/2005



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C01529		P011-01/ /C013		CB-SHUT OFF VALVE,STAB TRIM,C				ALL
	2	D	W0044	060	20		27-41-21	ALL
C01531		P011-02/ /G018		CB-FLT CONT ELEK 1R-DC				ALL
	1	D	W0036	089	10		24-54-11	ALL
	2	D	W0040	029	22		27-09-11	ALL
C01532		P011-05/ /G027		CB-FLT CONT ELEK 2R-DC				ALL
	1	D	W0038	076	08		24-54-21	ALL
	2	D	W0042	072	22		27-09-11	ALL
C01533		P011-01/ /C009		CB-FLT CONT ELEK 2L-DC				ALL
	1	D	W0032	096	12		24-54-73	ALL
	1	D	W0032	097	12		24-54-73	ALL
	2	D	W0044	195	22		27-09-11	ALL
C01534		P011-01/ /C007		CB-FLT CONT ELEK 1L-DC				ALL
	1	D	W0032	095	12		24-54-73	ALL
	1	D	W0032	096	12		24-54-73	ALL
	2	D	W0044	150	22		27-09-11	ALL
C01535		P011-05/ /G026		CB-FLT CONT ELEK 2R-AC				ALL
	1	D	W0038	028	16		24-51-21	ALL
	1	D	W0038	029	16		24-51-21	ALL
	2	D	W0042	071	22		27-09-11	ALL
C01536		P011-02/ /G017		CB-FLT CONT ELEK 1R-AC				ALL
	1	D	W0036	030	16		24-51-11	ALL
	1	D	W0036	031	16		24-51-11	ALL
	2	D	W0040	030	22		27-09-11	ALL
C01537		P011-01/ /C008		CB-FLT CONT ELEK 2L-AC				ALL
	1	D	W0032	106	14		24-54-73	ALL
	1	D	W0032	107	14		24-54-73	ALL
	2	D	W0044	194	22		27-09-11	ALL
C01538		P011-01/ /C006		CB-FLT CONT ELEK 1L-AC				ALL
	1	D	W0032	105	14		24-54-73	ALL
	1	D	W0032	106	14		24-54-73	ALL
	2	D	W0044	149	22		27-09-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section C01500

Page 2

May 20/2005



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C01548		P011-05/ /J022		CB-STICK SHAKER,RIGHT				ALL
	1	LA	W0038	070	08		24-54-21	ALL
	1	LA	W0038	071	08		24-54-21	ALL
	2	D	W0042	171	20		27-32-21	ALL
C01550		P037-00/ /K006		CB-VIDEO CONT CTR-AC				275-299
	1	M	W1046	049	12		24-51-22	275-299
	1	M	W1046	015	12		24-51-22	276-299
	2	D	W0058	029	20		23-32-11	275-299
C01551		P037-00/ /L001		CB-VIDEO 1 AC				275-299
	1	D	W0058	50A	18		23-32-31	275-299
	2	M	W1046	048	12		24-51-22	275
	2	M	W1046	048	14		24-51-22	276-299
C01552		P037-00/ /L002		CB-VIDEO 2 AC				275-299
	1	D	W0058	50B	18		23-32-41	275-299
C01553		P037-00/ /L003		CB-VIDEO 3 AC				275-299
	1	D	W0058	50C	18		23-32-51	275-299
	2	M	W1046	04A	12		24-51-22	275-299
C01554		P037-00/ /L004		CB-VIDEO 4 AC				275-299
	1	D	W0058	50D	18		23-32-61	275-299
C01560		P011-01/ /A018		CB-YAW DAMPER,LEFT				ALL
	2	D	W0044	180	20		22-21-11	ALL
C01561		P011-04/ /F034		CB-YAW DAMPER,RIGHT				ALL
	1	D	W0042	150	20		22-21-21	ALL
	2	LA	W0038	059	08		24-54-21	ALL
	2	LA	W0038	060	08		24-54-21	ALL
C01575		P011-04/ /C029		CB-GR POS AIR/GND SYS 2 ALT(SB78-051FAA)				050-099, 150-156, 162-166, 275-276
C01575		P011-04/ /C029		CB-GR POS AIR/GND SYS 2 ALT (RR41033-23)				157
C01575		P011-04/ /C029		CB-GR POS AIR/GND SYS 2 ALT (RR41033-24)				167-199
C01575		P011-04/ /C029		CB-GR POS AIR/GND SYS 2 ALT (RR41034-20)				277-278
C01575		P011-04/ /C029		CB-GR POS AIR/GND SYS 2 ALT (RR41034-21)				280-299
	2	D	W0042	602	24		32-09-12	ALL

HOOKUP LIST

D280T132

91-21-51

Section C01500

Page 3

May 20/2005



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C01576		P011-01/ /D018		CB-T/R SSL CONTROL, L ENG (SB 78-0062)				ALL
	1	D	W0044	511	20		78-34-11	ALL
	2	D	W0032	098	12		24-54-73	ALL
	2	D	W0032	125	12		24-54-73	ALL
C01577		P011-04/ /D021		CB-T/R SSL CONTROL, R ENG (SB 78-0062)				ALL
	2	D	W0044	512	20		78-34-21	ALL

HOOKUP LIST

D280T132

91-21-51

Section C01500

Page 4 End

May 20/2005



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C04019		P011-03/ /R016		CB-ZONE TEMP IND				ALL
	1	LA	W0036	064	08		24-54-11	ALL
	1	LA	W0036	065	08		24-54-11	ALL
	2	D	W0040	038	24		21-65-11	ALL
C04025		P011-06/ /N022		CB-FWD CARGO DUCT OVHT/INOP				050-099, 275-299
C04025		P011-06/ /N022		CB-FWD CARGO DUCT OVHT/INOP (TO 210210)				150
C04025		P011-06/ /N022		CB-FWD CARGO DUCT OVHT/INOP (INOP)				151-199
	1	LA	W0038	046	08		24-54-21	050-099, 150-199, 277-299
	1	LA	W0038	156	08		24-54-21	050-099, 277-299
	1	/	W0038	181	08		24-54-21	150-156, 162-166
	1	LA	W0038	181	08		24-54-21	157, 167-199
	2	D	W0042	01B	24		21-61-81	ALL
C04026		P011-02/ /H005		CB-AUX FWD ZONE DUCT OVHT				ALL
	1	D	W0040	605	24		21-61-61	050-099, 275-299
	1	D	W0040	514	24		21-61-61	150-199
	2	D	W0036	087	10		24-54-11	275-299
	2	D	W0036	187	10		24-54-11	275-299
C04027		P011-02/ /H006		CB-AUX MID ZONE DUCT OVHT				ALL
	1	D	W0040	511	24		21-61-71	ALL
	2	D	W0036	187	10		24-54-11	050-099
	2	D	W0036	087	10		24-54-11	050-099, 150-199
	2	D	W0036	901	16		24-54-11	150, 153-155, 162-165
	2	D	W0036	084	10		24-54-11	150-199
C04028		P011-06/ /R026		CB-MID ZONE DUCT OVHT/INOP				ALL
	2	D	W0042	743	24		21-61-41	ALL
C04029		P011-06/ /R024		CB-F/D ZONE DUCT OVHT/INOP				ALL
	2	D	W0042	052	24		21-61-11	ALL
C04030		P011-06/ /R025		CB-FWD ZONE DUCT OVHT/INOP				ALL
	2	D	W0042	054	24		21-61-21	ALL
C04031		P011-06/ /R027		CB-AFT ZONE DUCT OVHT/INOP				ALL
	2	D	W0042	056	24		21-61-31	ALL

HOOKUP LIST

D280T132

91-21-51

Section C04000

Page 1

May 20/2005



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C04036		P011-06/ /N024		CB-L PACK PWR STBY				ALL
	1	D	W0038	004	12		24-51-21	050-099
	1	D	W0038	005	12		24-51-21	ALL
	1	D	W0038	154	12		24-51-21	150-199, 275-299
	2	D	W0042	034	24		21-53-12	ALL
	2	D	W0042	133	24		21-51-13	ALL
C04037		P011-06/ /N025		CB-L PACK CONT STBY				ALL
	1	LA	W0038	047	08		24-54-21	ALL
	1	LA	W0038	156	08		24-54-21	050-099, 277-299
	1	/	W0038	181	08		24-54-21	150-156, 162-166
	1	LA	W0038	181	08		24-54-21	157, 167-199
	1	/	W0038	046	08		24-54-21	275-276
	2	D	W0042	033	24		21-53-12	ALL
	2	D	W0042	134	24		21-51-13	ALL
C04038		P011-03/ /N015		CB-R PACK PWR STBY				ALL
	1	D	W0036	007	12		24-51-11	ALL
	1	D	W0036	008	12		24-51-11	ALL
	2	D	W0040	133	24		21-51-23	ALL
	2	D	W0040	161	24		21-53-22	ALL
C04039		P011-03/ /N016		CB-R PACK CONT STBY				ALL
	1	/	W0036	059	08		24-54-11	050-099, 150-156, 162-166, 275
	1	LA	W0036	058	08		24-54-11	050-099, 157, 167-199, 275-299
	1	/	W0036	058	08		24-54-11	150-156, 162-166
	1	LA	W0036	059	08		24-54-11	157, 167-199, 276-299
	2	D	W0040	134	24		21-51-23	ALL
	2	D	W0040	160	24		21-53-22	ALL
C04078		P011-02/ /J002		CB-EICAS,L CMPTR				ALL
	2	D	W0040	137	22		31-41-11	ALL
C04079		P011-05/ /J029		CB-EICAS,R CMPTR				ALL
	1	D	W0038	024	16		24-51-21	ALL
	1	D	W0038	025	16		24-51-21	ALL
	2	D	W0042	137	22		31-41-11	ALL
C04081		P011-02/ /J003		CB-EICAS UPPER DSPL				ALL
	1	D	W0036	034	16		24-51-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section C04000

Page 2

May 20/2005



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C04081		P011-02/ /J003		CB-EICAS UPPER DSPL (continued)				ALL
	2	D	W0040	188	22		31-41-11	ALL
C04082		P011-05/ /J030		CB-EICAS LOWER DSPL				ALL
	2	D	W0042	093	22		31-41-11	ALL
C04094		P011-05/ /J032		CB-EICAS DISPLAY SELECT				ALL
	2	D	W0042	094	22		31-41-11	ALL
C04097		P006-01/ /A004		CB-BAT. CUR. MON PWR				ALL
	2	D	W0028	146	24		24-34-11	ALL
C04099		P011-02/ /K014		CB-AILERON POSITION,L				ALL
	1	D	W0040	067	24		27-18-11	ALL
	2	D	W0036	048	14		24-53-11	ALL
	2	D	W0036	049	14		24-53-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section C04000

Page 3 End

May 20/2005



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C04100		P011-05/ /K023		CB-AILERON POSITION,R				ALL
	1	D	W0042	018	24		27-18-11	ALL
	2	D	W0038	042	10		24-53-21	050-099
	2	D	W0038	094	14		24-53-21	ALL
	2	D	W0038	042	14		24-53-21	150-199, 275-299
C04101		P011-02/ /K013		CB-ELEVATOR POSITION,L				ALL
	1	D	W0040	182	24		27-38-11	ALL
C04102		P011-05/ /K022		CB-ELEVATOR POSITION,R				ALL
	1	D	W0042	019	24		27-38-11	ALL
C04126		P011-03/ /T002		CB-ENG START LOAD SHED RESET				ALL
	2	D	W0040	023	22		24-51-71	ALL
C04153		P011-04/ /D028		CB-ENGINE STBY IND				ALL
	1	D	W0044	138	24		73-21-14	ALL
C04180		P011-06/ /N021		CB-FWD CARGO TEMP CONT				050-099, 275-299
C04180		P011-06/ /N021		CB-FWD CARGO TEMP CONT (TO 210210)				150
C04180		P011-06/ /N021		CB-FWD CARGO TEMP CONT (INOP)				151-199
	1	D	W0038	011	12		24-51-21	050-099
	1	D	W0038	166	12		24-51-21	050-099
	1	D	W0038	004	12		24-51-21	150-199, 275-299
	1	D	W0038	154	12		24-51-21	150-199, 275-299
	2	D	W0042	01C	24		21-61-81	ALL
C04181		P011-02/ /H002		CB-AUX FWD ZONE TEMP CONT				ALL
	1	D	W0040	606	24		21-61-61	050-099, 275-299
	1	D	W0040	515	24		21-61-61	150-199
	2	D	W0036	029	12		24-51-11	050-099
	2	D	W0036	032	16		24-51-11	150, 153-199, 277-299
	2	D	W0036	029	16		24-51-11	150-199, 275-299
C04182		P011-02/ /H003		CB-AUX MID ZONE TEMP CONT				ALL
	1	D	W0040	512	24		21-61-71	ALL
C04183		P011-06/ /P026		CB-MID ZONE TEMP CONT VALVE CLOSE				ALL
	1	D	W0042	744	24		21-61-41	ALL

HOOKUP LIST

D280T132

91-21-51

Section C04100

Page 1

May 20/2005



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C04184		P011-06/ /P024		CB-F/D ZONE TEMP CONT MAN.				ALL
	1	D	W0042	053	24		21-61-11	ALL
C04185		P011-06/ /P025		CB-FWD ZONE TEMP CONT VALVE CLOSE				ALL
	1	D	W0042	055	24		21-61-21	ALL
	2	D	W0038	012	12		24-51-21	ALL
	2	D	W0038	013	12		24-51-21	ALL
C04186		P011-06/ /P027		CB-AFT ZONE TEMP CONT VALVE CLOSE				ALL
	1	D	W0042	057	24		21-61-31	ALL
C04189		P011-05/ /J031		CB-E1CAS,DISPLAY SWITCHING				ALL
	1	LA	W0038	069	08		24-54-21	ALL
	1	LA	W0038	070	08		24-54-21	ALL
	2	D	W0042	109	22		31-41-17	ALL

HOOKUP LIST

D280T132

91-21-51

Section C04100

Page 2 End

May 20/2005



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL		Description		GA	CO	Diagram	Effectivity
		Type	Bundle	Wire No.					
C04205		P011-01/ /B013		CB-CABIN ALTIMETER					ALL
	1	D	W0044	075		24		21-33-21	ALL
	2	D	W0032	109		14		24-54-73	ALL
	2	D	W0032	110		14		24-54-73	ALL
C04206		P011-01/ /B012		CB-CABIN DIFFERENTIAL PRESSURE IND					ALL
	1	D	W0044	076		24		21-33-21	ALL
C04217		P006-01/ /G006		CB-BAT VM/STBY BUS OFF LT					ALL
	1	LA	W1040	013		08		24-54-72	050-099
	1	LA	W1040	014		08		24-54-72	050-099
	2	D	W0028	016		24		24-33-11	ALL
	2	D	W0028	026		24		24-34-11	ALL
	DED		W0028	026Z				24-34-11	ALL
C04221		P011-03/ /S017		CB-AIR SUPPLY DUCT PRESSURE IND PWR					ALL
	1	D	W0040	151		24		36-21-11	ALL
	2	D	W0036	021		12		24-51-11	050-099
	2	D	W0036	020		12		24-51-11	ALL
	2	D	W0036	015		12		24-51-11	150-199, 275-299
C04226		P011-03/ /S007		CB-F/O INSTR TRANSFER ALTN BUS PH A					ALL
	1	D	W0036	133		20		24-51-43	ALL
	2	D	W0036	195		12		24-51-11	050-099
	2	D	W0036	016		12		24-51-11	050-099, 150-199
	2	D	W0036	010		12		24-51-11	150-199
	2	D	W0036	166		12		24-51-11	275-299
C04227		P011-06/ /S034		CB-CAPT INSTR TRANSFER ALTN BUS PH A					ALL
	1	D	W0038	113		20		24-51-42	ALL
	2	D	W0038	110		12		24-51-21	050-099
	2	D	W0038	018		12		24-51-21	150-199, 275-299
C04228		P011-03/ /S008		CB-F/O INSTR TRANSFER ALTN BUS PH B					ALL
	1	D	W0036	134		20		24-51-43	ALL
	2	D	W0036	147		12		24-51-11	ALL
C04229		P011-06/ /S035		CB-CAPT INSTR TRANSFER ALTN BUS PH B					ALL
	1	D	W0038	114		20		24-51-42	ALL
	2	D	W0038	109		12		24-51-21	ALL

HOOKUP LIST

D280T132

91-21-51

Section C04200

Page 1

May 20/2005



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C04230		P011-03/ /S009		CB-F/O INSTR TRANSFER ALTN BUS PH C				ALL
	1	D	W0036	132	20		24-51-43	ALL
	2	D	W0036	122	12		24-51-11	ALL
	2	D	W0036	146	12		24-51-11	ALL
C04231		P011-06/ /S036		CB-CAPT INSTR TRANSFER ALTN BUS PH C				ALL
	1	D	W0038	112	20		24-51-42	ALL
	2	D	W0038	008	12		24-51-21	050-099, 150-199
	2	D	W0038	009	12		24-51-21	ALL
C04248		P006-01/ /F006		CB-LDG GR ALTN EXT MOTOR				ALL
	1	D	W0028	013	12		32-35-11	ALL
	2	D	W1040	047	12		24-54-71	ALL
C04264		P006-03/ /J014		CB-CAPT PRIM INSTR BUS PH A				ALL
	1	D	W1026	053	20		24-51-42	ALL
	2	D	W1026	024	12		24-51-11	ALL
C04265		P006-03/ /J015		CB-CAPT PRIM INSTR BUS PH B				ALL
	1	D	W1026	054	20		24-51-42	ALL
	2	D	W1026	025	12		24-51-11	ALL
C04266		P006-03/ /J016		CB-CAPT PRIM INSTR BUS PH C				ALL
	1	D	W1026	052	20		24-51-42	ALL
	2	D	W1026	026	12		24-51-11	ALL
C04267		P006-04/ /L020		CB-F/O PRIM INSTR BUS PH A				ALL
	1	D	W0048	077	20		24-51-43	ALL
	2	D	W1030	048	12		24-51-21	ALL
C04268		P006-04/ /L021		CB-F/O PRIM INSTR BUS PH B				ALL
	1	D	W0048	078	20		24-51-43	ALL
	2	D	W1030	049	12		24-51-21	ALL
C04269		P006-04/ /L022		CB-F/O PRIM INSTR BUS PH C				ALL
	1	D	W0048	076	20		24-51-43	ALL
	2	D	W1030	050	12		24-51-21	ALL
C04280		P011-03/ /P007		CB-GLARESHIELD FLOODLIGHT				ALL
	1	D	W0040	750	24		33-11-13	ALL

HOOKUP LIST

D280T132

91-21-51

Section C04200

Page 2

May 20/2005



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C04280		P011-03/ /P007		CB-GLARESHIELD FLOODLIGHT (continued)				ALL
	2	D	W0036	123	12		24-51-11	050-099, 150-199
	2	D	W0036	005	12		24-51-11	ALL
	2	D	W0036	195	12		24-51-11	275-299

HOOKUP LIST

D280T132

91-21-51

Section C04200

Page 3 End

May 20/2005



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C04423		P011-01/ /F011		CB-ATC ANTENNA SW				050-099, 155-199, 275-299
C04423		P011-01/ /F011		CB-ATC ANTENNA SW (SB 34-0082)				150-154
	1	D	W0040	508	24		34-53-13	ALL
	2	D	W0036	120	10		24-54-11	050-099, 275-299
	2	D	W0036	910	10		24-54-11	150, 152-199, 275-299
	2	D	W0036	196	10		24-54-11	150-199

HOOKUP LIST

D280T132

91-21-51

Section C04400

Page 1 End

May 20/2005



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C09000		P37/ /D005		CB RADVR (MTO-230718)				150, 152-199
	1	D	W1046	901	20		23-32-21	150, 152-156, 162-199
	2	D	W0192	903	12		24-54-21	150, 152-157
	2	D	W1046	903	12		24-54-21	162-199
	D5	D	W1046	901	20		23-32-21	157
C09001		P037-00/ /D005		CB RADVR (MTO-230718)				150, 152-157, 164-199
C09001		P011-02/ /H009		CB-2.5 AMP SATCOM DC (MTO-238591/2/3)				162-163
C09001		0433/300/L019		CB-FWD ZONAL DRYER (CI#6421)				275-299
	A1	D	W1232	557	12		21-73-11	275-299
	A2	D	W1232	318R	16		21-73-11	275-299
	B1	D	W1232	558	12		21-73-11	275-299
	B2	D	W1232	318B	16		21-73-11	275-299
	C1	D	W1232	559	12		21-73-11	275-299
	C2	D	W1232	318Y	16		21-73-11	275-299
C09002		P37/ /D005		CB RADVR (MTO-230718)				150, 152-199
C09002		0433/300/L019		CB-MID ZONAL DRYER (CI#6421)				275-299
	1	D	W1046	900	20		23-32-21	150, 152-156, 162-199
	1	D	W1046	902	12		24-51-22	150, 152-199
	A2	D	W1232	319R	16		21-73-11	275-299
	B2	D	W1232	319B	16		21-73-11	275-299
	C2	D	W1232	319Y	16		21-73-11	275-299
	D4	D	W1046	900	20		23-32-21	157
C09003		0433/300/L019		CB-AFT ZONAL DRYER (CI#6421)				275-299
	A2	D	W1232	320R	16		21-73-11	275-299
	B2	D	W1232	320B	16		21-73-11	275-299
	C2	D	W1232	320Y	16		21-73-11	275-299
C09004		433/300/L019		CB-FWD ZONAL DRYER (CI#6421)				275-299
	1	D	W1232	560	20		21-73-11	275-299
	2	D	W1232	570	20		21-73-11	275-299
C09005		0433/300/L019		CB-MID ZONAL DRYER (CI#6421)				275-299
	2	D	W1232	571	20		21-73-11	275-299
C09006		433/300/L019		CB-AFT ZONAL DRYER (CI#6421)				275-299
	2	D	W1232	572	20		21-73-11	275-299

HOOKUP LIST

D280T132

91-21-51

Section C09000

Page 1

May 20/2005



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C09007		P011-01/ /		CB-TERR DISPL (MTO-340961)				150, 152-199, 275-299
	1	D	W0040	911	22		34-46-13	150, 152-199, 275-299
	2	D	W0036	910	10		24-54-11	150, 152-199, 275-299
I C09033		P036-00/ /		TRU-PASSENGER SEAT 28V DC (MTO 240500)				150, 153-199
	A1	D	W1044	907	16		24-51-13	150, 153-199
	B1	D	W1044	908	16		24-51-13	150, 153-199
	C1	D	W1044	909	16		24-51-13	150, 153-199
	A02	D	W9007	001	16		25-25-23	150, 153-199
	B02	D	W9007	002	16		25-25-23	150, 153-199
	C02	D	W9007	003	16		25-25-23	150, 153-199
C09034		SHELF/E02/06		CB-PASSENGER SEAT PWR (MTO 240500)				150, 153-199
	1	D	W9008	001	06		25-25-23	150, 153-199
	1	D	W9008	ZZA01	03		25-25-23	150, 153-199
	1	D	W9008	ZZA02	00		25-25-23	150, 153-199
	2	D	W9008	003	16		25-25-23	150, 153-199
	2	D	W9008	015	16		25-25-23	150, 153-199
C09035		SHELF/E02/06		CB-PASSENGER SEAT PWR (MTO 240500)				150, 153-199
	1	D	W9008	ZZA02	00		25-25-23	150, 153-199
	1	D	W9008	ZZA03	00		25-25-23	150, 153-199
	2	D	W9008	005	16		25-25-23	150, 153-199
C09036		SHELF/E02/06		CB-PASSENGER SEAT PWR (MTO 240500)				150, 153-199
	1	D	W9008	ZZA01	03		25-25-23	150, 153-199
	1	D	W9008	ZZA03	00		25-25-23	150, 153-199
	2	D	W9008	007	16		25-25-23	150, 153-199
C09037		SHELF/E02/06		CB-PASSENGER SEAT PWR (MTO 240500)				150, 153-199
	1	D	W9008	ZZA05	03		25-25-24	150, 153-199
	1	D	W9008	ZZA06	00		25-25-24	150, 153-199
	2	D	W9008	009	16		25-25-24	150, 153-199
C09038		SHELF/E02/06		CB-PASSENGER SEAT PWR (MTO 240500)				150, 153-199
	1	D	W9008	ZZA06	00		25-25-24	150, 153-199
	1	D	W9008	ZZA07	00		25-25-24	150, 153-199
	2	D	W9008	011	16		25-25-24	150, 153-199

HOOKUP LIST

D280T132

91-21-51

Section C09000

Page 2

Aug 05/2009



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C09039		SHELF/E02/06		CB-PASSENGER SEAT PWR (MTO 240500)				150, 153-199
	1	D	W9008	ZZA05	03		25-25-24	150, 153-199
	1	D	W9008	ZZA07	00		25-25-24	150, 153-199
	2	D	W9008	013	16		25-25-24	150, 153-199
C09040 C09040		P036-00/ / P036-00/ /		CB-PASSENGER TELEPHONE-AC (MTO_230695) CB-PASSENGER TELEPHONE-AC (MTO_230596)				150 152-199
	A2	D	W9042	901W	10		23-19-11	150, 152-199
	B2	D	W9042	901B	10		23-19-11	150, 152-199
	C2	D	W9042	901O	10		23-19-11	150, 152-199
	A01	D	W9041	001W	10		24-51-13	150, 152-199
	B01	D	W9041	001B	10		24-51-13	150, 152-199
	C01	D	W9041	001O	10		24-51-13	150, 152-199
C09041 C09041		P006-02/ / P006-02/ /		CB-PASSENGER TELEPHONE-DC (MTO-230695) CB-PASSENGER TELEPHONE-DC (MTO-230596)				150 152-199
	1	D	W9046	901	20		23-19-11	150, 152-199
	2	D	W9045	901	10		24-32-11	150, 152-199
C09042		P036-00/ /		CB-EMPOWER SYSTEM (EAD 89-0704-00)				150, 153, 157, 165-199
	A01	D	W9158	001	12		24-51-13	150, 153, 157, 165-199
	A02	D	W9158	004	12		25-25-23	150, 153, 157, 165-199
	B01	D	W9158	002	12		24-51-13	150, 153, 157, 165-199
	B02	D	W9158	005	12		25-25-23	150, 153, 157, 165-199
	C01	D	W9158	003	12		24-51-13	150, 153, 157, 165-199
	C02	D	W9158	006	12		25-25-23	150, 153, 157, 165-199

HOOKUP LIST

D280T132

91-21-51

Section C09000

Page 3 End

May 20/2005



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00001		F 282/ /LE		PLUG-COAX,HF L COUPLER,ANT.				ALL
	= A1		W0377	01CX			23-11-11	ALL
	= C1		W0377	01CO			23-11-11	ALL
D00002		0290/210/L090		OUTLET-SVCE				ALL
	BLK	D	W0616	024	18		25-29-11	ALL
	WHT	D	W0616	022	18		25-29-11	ALL
	= GRN	D	W0616	023	18		25-29-11	ALL
D00003		F 271/ /LE		PLUG-COAX,HF R COUPLER,ANT.				ALL
	= A1		W0379	01CX			23-11-21	ALL
	= C1		W0379	01CO			23-11-21	ALL
D00004		1537/213/L090		OUTLET-SVCE				ALL
	BLK	D	W0616	026	18		25-29-11	ALL
	WHT	D	W0616	027	18		25-29-11	ALL
	= GRN	D	W0616	028	18		25-29-11	ALL
D00005		0667/319/0000		PLUG-COAX,VHF-L ANT.				050-099
D00005		0654+33/319/0000		PLUG-COAX,VHF-L ANT.				150-199, 275-299
	= A1		W0251	01CX			23-12-11	ALL
	= C1		W0251	01CO			23-12-11	ALL
D00006		0300/170/R003		OUTLET-SVCE				ALL
	= GRN	D	W0624	057	18		25-29-11	ALL
	= WHT	D	W0624	056	18		25-29-11	ALL
	= YEL	D	W0624	055	18		25-29-11	ALL
D00007		0513/102/0000		PLUG-COAX				ALL
	= A1		W0253	01CX			23-12-21	ALL
	= C1		W0253	01CO			23-12-21	ALL
D00008		P006-02/ /		OUTLET-SVCE				ALL
	DED		W0028	151Z			25-29-11	ALL
	DED		W0028	154Z			25-29-11	ALL
	= GRN	D	W0028	155	18		25-29-11	ALL
	= WHT	D	W0028	154	18		25-29-11	ALL
	= YEL	D	W0028	151	18		25-29-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00000

Page 1

May 20/2005



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00009		1320/102/0000		PLUG-COAX,VHF-C ANT.				050-099
D00009		1197+99/102/0000		PLUG-COAX,VHF-C ANT.				150-199, 275-299
	= A1		W0259	01CX			23-12-31	ALL
	= C1		W0259	01CO			23-12-31	ALL
D00010		P006-02/ /		OUTLET-SVCE				ALL
	W	C	W0028	156	20		25-29-11	ALL
	X	C	W0028	153	20		25-29-11	ALL
	Y	C	W0028	152	22		25-29-11	ALL
	DED		W0028	152Z			25-29-11	ALL
	DED		W0028	153Z			25-29-11	ALL
D00011		0126/179/L005		PLUG-COAX,D LOC,ILS L				ALL
	= A1		W0261	01CX			34-31-11	ALL
	= C1		W0261	01CO			34-31-11	ALL
D00013		0126/214/L007		PLUG-COAX,D LOC,ILS C+R				ALL
	= A1		W0269	01CX			34-31-21	ALL
	= C1		W0269	01CO			34-31-21	ALL
D00015		0126/214/0000		PLUG-COAX,D LOC,ILS C+R				ALL
	= A1		W0277	01CX			34-31-31	ALL
	= C1		W0277	01CO			34-31-31	ALL
D00017		0126/167/0000		PLUG-COAX,D G/S,ILS L				ALL
	= A1		W0265	01CX			34-31-11	ALL
	= C1		W0265	01CO			34-31-11	ALL
D00019		0126/171/0000		PLUG-COAX,D G/S,ILS C+R				ALL
	= A1		W0281	01CX			34-31-31	ALL
	= C1		W0281	01CO			34-31-31	ALL
D00020		1090/210/L090		OUTLET-SVCE				050-099
D00020		0992/210/L090		OUTLET-SVCE				150-199
D00020		1005/210/L090		OUTLET-SVCE				275-299
	BLK	D	W0616	029	18		25-29-11	ALL
	WHT	D	W0616	021	18		25-29-11	ALL
	= GRN	D	W0616	041	18		25-29-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00000

Page 2

May 20/2005



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00021		0126/171/L005		PLUG-COAX,DUAL G/S IRS C+R				ALL
	= A1		W0273	01CX			34-31-21	ALL
	= C1		W0273	01CO			34-31-21	ALL
D00022		NL210/150/L005		PLUG-STRUT				ALL
	1		W0356	061	18		36-11-51	ALL
	2		W0356	068	18		36-11-51	ALL
	3		W0356	062	18		36-11-51	ALL
	4		W0356	069	18		36-11-51	ALL
	5		W0356	063	18		36-11-51	ALL
	6		W0356	064	18		36-11-51	ALL
	7		W0356	065	18		36-11-51	ALL
	8		W0356	066	18		36-11-51	ALL
	9		W0356	070	18		36-11-51	ALL
	10		W0356	067	18		36-11-51	ALL
	11		W0356	071	18		36-11-51	ALL
	12		W0356	075	18		36-11-51	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
D00023		0577/107/L007		PLUG-COAX,ANT.,RAD ALTM XMTR L				ALL
	= A1		W0285	01CX			34-33-11	ALL
	= C1		W0285	01CO			34-33-11	ALL
D00025		0621/107/L007		PLUG-COAX,ANT.,RAD ALTM RCVR L				ALL
	= A1		W0285	02CX			34-33-11	ALL
	= C1		W0285	02CO			34-33-11	ALL
D00027		0577/107/R007		PLUG-COAX,ANT.,RAD ALTM XMTR R				ALL
	= A1		W0293	01CX			34-33-21	ALL
	= C1		W0293	01CO			34-33-21	ALL
D00029		0621/107/R007		PLUG-COAX,ANT.,RAD ALTM RCVR R				ALL
	= A1		W0293	02CX			34-33-21	ALL
	= C1		W0293	02CO			34-33-21	ALL
D00030		NR210/150/R005		PLUG-STRUT				ALL
	1		W0356	079	18		36-23-11	ALL
	2		W0356	072	18		36-23-11	ALL
	3		W0356	083	18		36-23-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00000

Page 3

May 20/2005



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00030		NR210/150/R005		PLUG-STRUT (continued)				ALL
	4		W0356	073	18		36-23-11	ALL
	5		W0356	301B	20		36-23-11	ALL
	6		W0356	301R	20		36-23-11	ALL
	7		W0356	301Y	20		36-23-11	ALL
	8		W0356	084	18		36-23-11	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	DED		W0356	301Z			36-23-11	ALL
D00031		0577/107/0000		PLUG-COAX,ANT.,RAD ALTM XMTR C				ALL
	= A1		W0301	01CX			34-33-31	ALL
	= C1		W0301	01CO			34-33-31	ALL
D00033		0621/107/0000		PLUG-COAX,ANT.,RAD ALTM RCVR C				ALL
	= A1		W0301	02CX			34-33-31	ALL
	= C1		W0301	02CO			34-33-31	ALL
D00034		L0429/14/ET		PLUG-				ALL
	1		W0450	301B	20		29-31-11	ALL
	2		W0450	301R	20		29-31-11	ALL
	3		W0450	301Y	20		29-31-11	ALL
D00035		FSS 430/633/FS		RCPT-COAX,VOR L				ALL
	= A1		W0313	01CX			34-51-11	ALL
	= C1		W0313	01CO			34-51-11	ALL
D00036		NL264/170/		PLUG-				ALL
	1		W0390	020	18		29-32-11	ALL
	2		W0390	019	18		29-32-11	ALL
	3		W0390	026	18		29-32-11	ALL
D00037		FSS 430/630/FS		RCPT-COAX,VOR R				ALL
	= A1		W0317	01CX			34-51-21	ALL
	= C1		W0317	01CO			34-51-21	ALL
D00038		NL250/150/		PLUG-				ALL
	1		W0390	FRA			29-33-11	ALL
	2		W0390	015	18		29-33-11	ALL
	3		W0390	013	18		29-33-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00000

Page 4

May 20/2005



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00038		NL250/150/		PLUG- (continued)				ALL
	4		W0390	014	18		29-33-11	ALL
	5		W0390	012	18		29-33-11	ALL
	6		W0390	FRB			29-33-11	ALL
	7		W0390	011	20		29-33-11	ALL
			W0390	011Z			29-33-11	ALL
			W0390	FRA			29-33-11	ALL
			W0390	FRB			29-33-11	ALL
D00041		0448/108/0000		PLUG-COAX,ATC R,BOTTOM				ALL
	= A1		W0325	01CX			34-53-13	ALL
	= C1		W0325	01CO			34-53-13	ALL
D00045		0448/320/0000		PLUG-COAX,ATC R, TOP				ALL
	= A1		W0335	01CX			34-53-13	ALL
	= C1		W0335	01CO			34-53-13	ALL
D00047		0564/114/R003		PLUG-COAX,ANT.,DME L				050-099
D00047		0564/107/R003		PLUG-COAX,ANT.,DME L				150-199, 275-299
	= A1		W0339	01CX			34-55-11	ALL
	= C1		W0339	01CO			34-55-11	ALL
D00048		NR264/154/		PLUG-				ALL
	1		W0394	020	18		29-32-11	ALL
	2		W0394	019	18		29-32-11	ALL
	3		W0394	026	18		29-32-11	ALL
D00049		0665/106/0000		PLUG-COAX,ANT.,DME R				050-099
D00049		0654+11/106/0000		PLUG-COAX,ANT.,DME R				150-199, 275-299
	= A1		W0343	01CX			34-55-21	ALL
	= C1		W0343	01CO			34-55-21	ALL
D00051		1115/319/0000		PLUG-ANT.,ADF L				ALL
	1		W0345	WRD	24		34-57-11	ALL
	2		W0345	WBU	24		34-57-11	ALL
	3	UNUSED						ALL
	4		W0345	WYL	24		34-57-11	ALL
	5		W0345	WGR	24		34-57-11	ALL
	6	UNUSED						ALL
	7		W0345	WVI	24		34-57-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00000

Page 5

May 20/2005



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00051		1115/319/0000		PLUG-ANT.,ADF L (continued)				ALL
	8		W0345	WBK	24		34-57-11	ALL
	9	UNUSED						ALL
	10		W0345	WOR	22		34-57-11	ALL
	11		W0345	WBN	22		34-57-11	ALL
	12		W0345	WHT	20		34-57-11	ALL
	13	UNUSED						ALL
	14		W0345	003	20		34-57-11	ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
			W0345	002	20		34-57-11	ALL
			W0345	004	20		34-57-11	ALL
			W0345	WRDZ			34-57-11	ALL
			W0345	WVIZ			34-57-11	ALL
			W0345	WYLZ			34-57-11	ALL
			W0345	YAA			34-57-11	ALL
D00052		NL300/150/		PLUG-				ALL
	1	UNUSED						ALL
	2		W0398	007	18		29-11-12	ALL
	3		W0398	006	18		29-11-12	ALL
D00054		NL255/170/		PLUG-				ALL
	1	UNUSED						ALL
	2		W0390	021	18		29-11-12	ALL
	3		W0390	022	18		29-11-12	ALL
D00056		NL245/155/		PLUG-				ALL
	1		W0398	001	18		29-11-12	ALL
	2		W0398	003	18		29-11-12	ALL
	3		W0398	002	18		29-11-12	ALL
D00058		R0430/14/TE		PLUG-				ALL
	1		W0452	301B	20		29-31-11	ALL
	2		W0452	301R	20		29-31-11	ALL
	3		W0452	301Y	20		29-31-11	ALL
D00060		NR250/140/		PLUG-				ALL
	1		W0394	FRA			29-33-11	ALL
	2		W0394	015	18		29-33-11	ALL
	3		W0394	013	18		29-33-11	ALL

HOOKUP LIST
D280T132

91-21-51
Section D00000
Page 6
May 20/2005



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00060		NR250/140/		PLUG- (continued)				ALL
	4		W0394	014	18		29-33-11	ALL
	5		W0394	012	18		29-33-11	ALL
	6		W0394	FRB			29-33-11	ALL
	7		W0394	011	20		29-33-11	ALL
			W0394	011Z			29-33-11	ALL
			W0394	FRA			29-33-11	ALL
			W0394	FRB			29-33-11	ALL
D00064		NL210/150/L005		PLUG-STRUT				ALL
	1		W0376	061	18		36-11-52	ALL
	2		W0376	068	18		36-11-52	ALL
	3		W0376	062	18		36-11-52	ALL
	4		W0376	069	18		36-11-52	ALL
	5		W0376	063	18		36-11-52	ALL
	6		W0376	064	18		36-11-52	ALL
	7		W0376	065	18		36-11-52	ALL
	8		W0376	066	18		36-11-52	ALL
	9		W0376	070	18		36-11-52	ALL
	10		W0376	067	18		36-11-52	ALL
	11		W0376	071	18		36-11-52	ALL
	12		W0376	075	18		36-11-52	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
D00068		NR210/150/L5 D		PLUG-STRUT				ALL
	1		W0376	079	18		36-23-21	ALL
	2		W0376	072	18		36-23-21	ALL
	3		W0376	083	18		36-23-21	ALL
	4		W0376	073	18		36-23-21	ALL
	5		W0376	301B	20		36-23-21	ALL
	6		W0376	301R	20		36-23-21	ALL
	7		W0376	301Y	20		36-23-21	ALL
	8		W0376	084	18		36-23-21	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	DED		W0376	301Z			36-23-21	ALL
D00072		NR295/170/		PLUG-				ALL
	1	UNUSED						ALL
	2		W0400	007	18		29-11-22	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00000

Page 7

May 20/2005



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00072		NR295/170/		PLUG- (continued)				ALL
	3		W0400	006	18		29-11-22	ALL
D00074		NR250/150/		PLUG-				ALL
	1	UNUSED						ALL
	2		W0394	021	18		29-11-22	ALL
	3		W0394	022	18		29-11-22	ALL
D00076		NR255/150/		PLUG-				ALL
	1		W0400	001	18		29-11-22	ALL
	2		W0400	003	18		29-11-22	ALL
	3		W0400	002	18		29-11-22	ALL
D00082		P025-00/ /		RELAY SOCKET-				ALL
	A1		W1064	080	22		33-22-42	050-099, 275-299
	A1		W1064	080	20		33-22-42	150-199
	A2		W1064	089	22		33-22-42	050-099, 150-199
	A2		W1064	078	22		33-22-42	275-299
	A3	UNUSED						ALL
	B1	UNUSED						ALL
	B2	UNUSED						ALL
	B3	UNUSED						ALL
	X1		W1064	077	20		33-22-42	050-099, 150-199
	X1		W1064	079	22		33-22-42	275-299
	X2		W1064	082	22		33-22-42	ALL
D00083		0680/102/0		PLUG-COAX,ANT.,MKR BCN				050-099
D00083		0654+33/102/0000		PLUG-COAX,ANT.,MKR BCN				150-199, 275-299
	= A1		W0375	01CX			34-32-11	ALL
	= C1		W0375	01CO			34-32-11	ALL
D00084		P025-00/ /		RELAY SOCKET-				ALL
	A1		W1064	092	22		33-22-42	ALL
	A2		W1064	090	22		33-22-42	ALL
	A3		W1064	500	22		33-22-42	050-099
	A3	UNUSED						150-199, 275-299
	B1	UNUSED						050-099, 151, 280-299
	B1		W1064	901	22		33-22-42	150, 152-199
	B1		W1064	087	22		33-22-42	275-278
	B2	UNUSED						050-099, 151, 280-299
	B2		W1064	900	22		33-22-42	150, 152-199

HOOKUP LIST
D280T132

91-21-51
Section D00000
Page 8
May 20/2005



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00084		P025-00/ /		RELAY SOCKET- (continued)				ALL
	B2		W1064	085	22		33-22-42	275-278
	B3	UNUSED						050-099, 150-199, 280-299
	B3		W1064	705	22		33-22-42	275-278
	X1		W1064	503	22		33-22-42	050-099, 150-199
	X1		W1064	089	22		33-22-42	275-299
	X2		W1064	624	22		33-22-42	050-099, 150-199
	X2		W1064	091	22		33-22-42	275-299
D00085		F 282/ /LE		PLUG-				ALL
	A		W0777	006	20		23-11-11	ALL
	B	UNUSED						ALL
	C	UNUSED						ALL
	D	DK	W0777	009	18		23-11-11	ALL
	E	UNUSED						ALL
	F		W0777	001	20		23-11-11	ALL
	G	DK	W0777	012	18		23-11-11	ALL
	H		W0777	002	20		23-11-11	ALL
	J	UNUSED						ALL
	K		W0777	005	20		23-11-11	ALL
	L		W0777	003	20		23-11-11	ALL
	M	UNUSED						ALL
	N	UNUSED						ALL
	P	UNUSED						ALL
	R	UNUSED						ALL
	S		W0777	004	20		23-11-11	ALL
	T	UNUSED						ALL
	U	UNUSED						ALL
	V	UNUSED						ALL
	W	UNUSED						ALL
	X		W0777	010	20		23-11-11	ALL
	Y		W0777	011	20		23-11-11	ALL
	Z	UNUSED						ALL
	A-	UNUSED						ALL
	B-	UNUSED						ALL
	C-	UNUSED						ALL
D00086		P025-00/ /		RELAY SOCKET-				275-299
	A1		W1064	096	22		33-22-42	275-299
	A2		W1064	094	22		33-22-42	275-299
	A3	UNUSED						275-299

HOOKUP LIST
D280T132

91-21-51
Section D00000
Page 9
May 20/2005



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00086		P025-00/ /		RELAY SOCKET- (continued)				275-299
	B1	UNUSED						275-299
	B2	UNUSED						275-299
	B3	UNUSED						275-299
	X1		W1064	093	22		33-22-42	275-299
	X2		W1064	095	22		33-22-42	275-299
D00087		F 271/ /LE		PLUG-				ALL
	A		W0775	006	20		23-11-21	ALL
	B	UNUSED						ALL
	C	UNUSED						ALL
	D	DK	W0775	009	18		23-11-21	ALL
	E	UNUSED						ALL
	F		W0775	001	20		23-11-21	ALL
	G	DK	W0775	012	18		23-11-21	ALL
	H		W0775	002	20		23-11-21	ALL
	J	UNUSED						ALL
	K		W0775	005	20		23-11-21	ALL
	L		W0775	003	20		23-11-21	ALL
	M	UNUSED						ALL
	N	UNUSED						ALL
	P	UNUSED						ALL
	R	UNUSED						ALL
	S		W0775	004	20		23-11-21	ALL
	T	UNUSED						ALL
	U	UNUSED						ALL
	V	UNUSED						ALL
	W	UNUSED						ALL
	X		W0775	010	20		23-11-11	ALL
	Y		W0775	011	20		23-11-11	ALL
	Z	UNUSED						ALL
	A-	UNUSED						ALL
	B-	UNUSED						ALL
	C-	UNUSED						ALL
D00090		P025-00/ /		RELAY SOCKET-				ALL
	A1		W1064	108	20		33-27-11	ALL
	A2		W1064	107	20		33-27-11	ALL
	A3	UNUSED						ALL
	B1		W1064	106	22		33-27-11	ALL
	B2		W1064	109	22		33-27-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00000

Page 10

May 20/2005



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00090		P025-00/ /		RELAY SOCKET- (continued)				ALL
	B3	UNUSED						ALL
	C1	UNUSED						050-099
	C1		W1064	618	18		33-27-11	150-199
	C2	UNUSED						050-099
	C2		W1064	026	18		33-27-11	150-199
	C3	UNUSED						050-099, 150-199
	D1	UNUSED						050-099, 150-199
	D2	UNUSED						050-099, 150-199
	D3	UNUSED						050-099, 150-199
	X1		W1064	110	22		33-27-11	ALL
	X2		W1064	111	22		33-27-11	ALL
	DED		W1064	107Z			33-27-11	050-099
	DED		W1064	108Z			33-27-11	050-099
D00092		P019-00/ /		RELAY SOCKET-				ALL
	A1		W1104	006	20		33-21-11	ALL
	A2		W1104	002	20		33-21-11	ALL
	A3	UNUSED						ALL
	B1		W1104	024	20		33-21-11	050-099, 275-299
	B1		W1104	728	20		33-21-11	150-199
	B2		W1104	165	20		33-21-11	050-099, 150-199
	B2		W1104	619	20		33-21-11	275-299
	B3	UNUSED						ALL
	X1		W1104	003	24		33-21-11	ALL
	X2		W1104	004	24		33-21-11	ALL
D00094		P019-00/ /		RELAY SOCKET-				ALL
	A1		W1104	007	20		33-21-11	ALL
	A2		W1104	008	20		33-21-11	ALL
	A3	UNUSED						ALL
	B1		W1104	036	20		33-21-11	050-099
	B1		W1104	045	20		33-21-11	150-199, 275-299
	B2		W1104	598	20		33-21-11	050-099, 150-199
	B2		W1104	618	20		33-21-11	275-299
	B3	UNUSED						ALL
	X1		W1104	009	24		33-21-11	ALL
	X2		W1104	732	20		33-21-11	050-099, 150-199
	X2		W1104	010	24		33-21-11	275-299

HOOKUP LIST

D280T132

91-21-51

Section D00000

Page 11

May 20/2005



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00096		P019-00/ /		RELAY SOCKET-				275-299
	A1		W1104	015	20		33-21-11	275-299
	A2		W1104	012	20		33-21-11	275-299
	A3	UNUSED						275-299
	B1	UNUSED						275-299
	B2		W1104	165	20		33-21-11	275-277, 280-299
	B2		W1104	165	20		SPARE	278
	B3	UNUSED						275-299
	X1		W1104	013	24		33-21-11	275-299
	X2		W1104	016	24		33-21-11	275-299

HOOKUP LIST

D280T132

91-21-51

Section D00000

Page 12 End

May 20/2005



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00100		P019-00/ /		RELAY SOCKET-				275-299
	A1		W1104	036	20		33-21-11	275-299
	A2		W1104	033	20		33-21-11	275-299
	A3	UNUSED						275-299
	B1		W1104	128	20		33-21-11	275-299
	B2		W1104	598	20		33-21-11	275-299
	B3	UNUSED						275-299
	X1		W1104	034	24		33-21-11	275-299
	X2		W1104	035	24		33-21-11	275-299
D00101		P001-01/ /		PLUG-				ALL
	1		W0011	118	20		33-13-11	050-099, 150-199, 275-278
	1	UNUSED						280-299
	2		W0011	119	20		33-13-11	050-099, 150-199, 275-278
	2	UNUSED						280-299
	3		W0011	047	22		34-13-11	ALL
	4		W0011	046	20		34-13-11	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W0011	045	20		34-13-11	ALL
	8		W0011	144	22		34-13-11	ALL
	9	UNUSED						ALL
	10		W0011	044	20		34-13-11	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24		W0011	228R	24		22-14-11	ALL
	25		W0011	228B	24		22-14-11	ALL
	26		W0011	248R	24		34-13-11	ALL
	27		W0011	248B	24		34-13-11	ALL
	28	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00100

Page 1

May 20/2005



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00101		P001-01/ /		PLUG- (continued)				ALL
	29	UNUSED						ALL
	30		W0011	232R	24		34-13-11	ALL
	31		W0011	232B	24		34-13-11	ALL
	DED		W0011	228Z			22-14-11	ALL
	DED		W0011	232Z			34-13-11	ALL
	DED		W0011	248Z			34-13-11	ALL
D00103		P001-03/ /		PLUG-				ALL
	1		W0011	716	20		33-13-11	ALL
	2		W0011	115	20		33-13-11	ALL
	3		W0011	057	24		31-25-11	ALL
	4		W0011	059	20		31-25-11	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W0011	058	20		31-25-11	ALL
	8		W0011	056	24		31-25-11	ALL
	9		W0011	060	20		31-25-11	ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13		W0011	301R	24		31-25-11	ALL
	14		W0011	301B	24		31-25-11	ALL
	15		W0011	301Y	24		31-25-11	ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23		W0011	235B	24		31-25-11	ALL
	24		W0011	235R	24		31-25-11	ALL
	DED		W0011	235Z			31-25-11	ALL
	REF		W0011	301	20		31-25-11	275-299
	REF		W0011	301Z			31-25-11	275-299
			W0011	301	20		31-25-11	050-099, 150-199
			W0011	301Z			31-25-11	050-099, 150-199
D00104		P019-00/ /		RELAY SOCKET-				ALL
	A1		W1104	090	18		33-21-31	050-099

HOOKUP LIST
D280T132

91-21-51
Section D00100
Page 2
May 20/2005



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00104		P019-00/ /		RELAY SOCKET- (continued)				ALL
	A1		W1104	090	16		33-21-31	150-199, 275-299
	A2		W1104	094	18		33-21-31	050-099
	A2		W1104	094	16		33-21-31	150-199, 275-299
	A3	UNUSED						ALL
	B1		W1104	160	20		33-21-31	050-099, 150-154, 157-165, 167-199
	B1		W1104	804	20		33-21-31	155-156, 166
	B1		W1104	091	20		33-21-31	275-299
	B2		W1104	095	20		33-21-31	ALL
	B3	UNUSED						ALL
	C1		W1104	092	20		33-21-31	ALL
	C2		W1104	096	20		33-21-31	ALL
	C3	UNUSED						ALL
	D1	UNUSED						050-099
	D1		W1104	700	20		33-21-31	150-154, 157-165, 167-199
	D1		W1104	806	20		33-21-31	155-156, 166
	D1		W1104	093	20		33-21-31	275-299
	D2	UNUSED						050-099
	D2		W1104	097	20		33-21-31	150-165, 167-199, 275-299
	D2		W1104	061	20		33-21-31	166
	D3	UNUSED						ALL
	X1		W1104	100	24		33-21-31	ALL
	X2		W1104	723	24		33-21-31	050-099, 150-199
	X2		W1104	101	24		33-21-31	275-299
D00106		P019-00/ /		RELAY SOCKET-				ALL
	A1		W1104	065	20		33-21-31	050-099, 150-154, 157-165, 167-199, 275-299
	A1		W1104	800	20		33-21-31	155-156, 166
	A2		W1104	059	20		33-21-31	ALL
	A3	UNUSED						ALL
	B1		W1104	070	20		33-21-31	050-099, 150-199
	B1		W1104	066	20		33-21-31	275-299
	B2		W1104	060	20		33-21-31	ALL
	B3	UNUSED						ALL
	C1	UNUSED						050-099, 150-199
	C1		W1104	067	16		33-21-31	275-299
	C2	UNUSED						050-099, 150-199
	C2		W1104	061	16		33-21-31	275-299
	C3	UNUSED						ALL
	D1		W1104	068	20		33-21-31	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00100

Page 3

May 20/2005



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00106		P019-00/ /		RELAY SOCKET- (continued)				ALL
	D2		W1104	062	20		33-21-31	ALL
	D3	UNUSED						ALL
	X1		W1104	063	24		33-21-31	ALL
	X2		W1104	064	24		33-21-31	ALL
D00107		P001-02/ /		PLUG-P1-2				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W0731	015	24		34-22-16	ALL
	7		W0731	014	20		34-22-16	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12		W0731	201R	24		34-22-14	ALL
	13		W0731	201B	24		34-22-14	ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17		W0731	013	20		34-22-16	ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22		W0731	003	24		34-22-14	ALL
	23		W0731	004	24		34-22-14	ALL
	24		W0731	005	24		34-22-14	ALL
	25	UNUSED						ALL
	26		W0731	202R	24		34-22-14	ALL
	27		W0731	202B	24		34-22-14	ALL
	28		W0731	203R	24		34-22-14	ALL
	29		W0731	203B	24		34-22-14	ALL
	30		W0731	301R	24		34-22-14	ALL
	31		W0731	301B	24		34-22-14	ALL
	32		W0731	301Y	24		34-22-14	ALL
	33	UNUSED						ALL
	34	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D00100
Page 4
May 20/2005



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00107		P001-02/ /		PLUG-P1-2 (continued)				ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49		W0731	204WN	24		34-22-14	ALL
	50		W0731	204W	24		34-22-14	ALL
	51		W0731	205WN	24		34-22-14	ALL
	52		W0731	205W	24		34-22-14	ALL
	53		W0731	206WN	24		34-22-14	ALL
	54		W0731	206W	24		34-22-14	ALL
	55		W0731	207WN	24		34-22-14	ALL
	56		W0731	207W	24		34-22-14	ALL
	57		W0731	208WN	24		34-22-14	ALL
	58		W0731	208W	24		34-22-14	ALL
	59		W0731	209WN	24		34-22-14	ALL
	60		W0731	209W	24		34-22-14	ALL
	61		W0731	210WN	24		34-22-14	ALL
	62		W0731	210W	24		34-22-14	ALL
	63		W0731	211WN	24		34-22-14	ALL
	64		W0731	211W	24		34-22-14	ALL
	65		W0731	212WN	24		34-22-14	ALL
	66		W0731	212W	24		34-22-14	ALL
	67		W0731	002	24		34-22-14	ALL
D00108		P019-00/ /		RELAY SOCKET-P19				050-099
D00108		P019-00/ /		RELAY SOCKET				150-199, 275-299
	A1		W1060	034	22		33-22-11	050-099
	A1		W1060	034	20		33-22-11	150-199, 275-299
	A2		W1060	036	22		33-22-11	050-099
	A2		W1060	036	20		33-22-11	150-199, 275-299

HOOKUP LIST

D280T132

91-21-51

Section D00100

Page 5

May 20/2005



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00108		P019-00/ /		RELAY SOCKET-P19 (continued)				050-099
D00108		P019-00/ /		RELAY SOCKET (continued)				150-199, 275-299
	A3	UNUSED						ALL
	B1	UNUSED						ALL
	B2	UNUSED						ALL
	B3	UNUSED						ALL
	X1		W1060	038	20		33-22-11	ALL
	X2		W1060	037	20		33-22-11	ALL
	DED		W1060	034Z			33-22-11	155-156, 166
	DED		W1060	036Z			33-22-11	155-156, 166
D00109		P001-02/ /		PLUG-P1-2				ALL
	1		W0731	025	24		34-22-15	ALL
	2		W0731	026	24		34-22-15	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W0731	036	24		34-22-16	ALL
	7		W0731	035	20		34-22-16	ALL
	8		W0731	027	24		34-22-15	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12		W0731	202R	24		34-22-14	ALL
	13		W0731	202B	24		34-22-14	ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17		W0731	034	20		34-22-16	ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22		W0731	022	24		34-22-15	ALL
	23		W0731	023	24		34-22-15	ALL
	24		W0731	024	24		34-22-15	ALL
	25	UNUSED						ALL
	26		W0731	201R	24		34-22-14	ALL
	27		W0731	201B	24		34-22-14	ALL
	28		W0731	214R	24		34-22-15	ALL
	29		W0731	214B	24		34-22-15	ALL

HOOKUP LIST
D280T132

91-21-51
Section D00100
Page 6
May 20/2005



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00109		P001-02/ /		PLUG-P1-2 (continued)				ALL
	30		W0731	303R	24		34-22-15	ALL
	31		W0731	303B	24		34-22-15	ALL
	32		W0731	303Y	24		34-22-15	ALL
	33		W0731	302R	24		34-22-15	ALL
	34		W0731	302B	24		34-22-15	ALL
	35		W0731	302Y	24		34-22-15	ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49		W0731	215WN	24		34-22-15	ALL
	50		W0731	215W	24		34-22-15	ALL
	51		W0731	216WN	24		34-22-15	ALL
	52		W0731	216W	24		34-22-15	ALL
	53		W0731	217WN	24		34-22-15	ALL
	54		W0731	217W	24		34-22-15	ALL
	55		W0731	218WN	24		34-22-15	ALL
	56		W0731	218W	24		34-22-15	ALL
	57		W0731	219WN	24		34-22-15	ALL
	58		W0731	219W	24		34-22-15	ALL
	59		W0731	220WN	24		34-22-15	ALL
	60		W0731	220W	24		34-22-15	ALL
	61		W0731	221WN	24		34-22-15	ALL
	62		W0731	221W	24		34-22-15	ALL
	63		W0731	222WN	24		34-22-15	ALL
	64		W0731	222W	24		34-22-15	ALL
	65		W0731	223WN	24		34-22-15	ALL
	66		W0731	223W	24		34-22-15	ALL
	67		W0731	021	24		34-22-15	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00100

Page 7

May 20/2005



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00111		P001-03/ /		PLUG-				ALL
	1		W0011	110	20		33-13-11	ALL
	2		W0011	111	20		33-13-11	ALL
	3		W0011	048	22		34-13-11	ALL
	4		W0011	049	20		34-13-11	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W0011	051	20		34-13-11	ALL
	8		W0011	146	22		34-13-11	ALL
	9		W0011	088	22		33-16-13	ALL
	10		W0011	050	20		34-13-11	ALL
	11		W0011	087	22		33-16-13	ALL
	12		W0011	040	24		34-13-21	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19		W0011	302R	24		34-12-11	ALL
	20		W0011	302B	24		34-12-11	ALL
	21		W0011	302Y	24		34-12-11	ALL
	22		W0011	236R	22		34-12-11	ALL
	23		W0011	236B	22		34-12-11	ALL
	24		W0011	308R	24		34-12-21	ALL
	25		W0011	308B	24		34-12-21	ALL
	26		W0011	308Y	24		34-12-21	ALL
	27		W0011	204R	22		34-12-21	ALL
	28		W0011	204B	22		34-12-21	ALL
	29	UNUSED						ALL
	30		W0011	233R	24		34-13-11	ALL
	31		W0011	233B	24		34-13-11	ALL
	32	UNUSED						ALL
	33		W0011	249R	24		34-13-11	ALL
	34		W0011	249B	24		34-13-11	ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00100

Page 8

May 20/2005



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00111		P001-03/ /		PLUG- (continued)				ALL
	41	UNUSED						ALL
	DED		W0011	087Z			33-16-13	ALL
	DED		W0011	233Z			34-13-11	ALL
	DED		W0011	236Z			34-12-11	ALL
	DED		W0011	249Z			34-13-11	ALL
D00113		P001-03/ /		PLUG- (MTO 340652)				050-099, 150-152, 155-199, 275-299
D00113		P001-03/ /		PLUG-				050-099, 153-154
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						050-099
	18		W0011	901	22		34-22-82	150-199, 275-299
	19	UNUSED						ALL
	20		W0011	003	20		34-22-82	ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25		W0011	282R	24		34-45-14	ALL
	26		W0011	209R	24		34-22-82	ALL
	27	UNUSED						ALL
	28		W0011	880	22		34-45-14	ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						050-099

HOOKUP LIST

D280T132

91-21-51

Section D00100

Page 9

May 20/2005



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00113		P001-03/ /		PLUG- (MTO 340652) (continued)				050-099, 150-152, 155-199, 275-299
D00113		P001-03/ /		PLUG- (continued)				050-099, 153-154
	31		W0011	005	24		34-22-82	150-199, 275-299
	32	UNUSED						ALL
	33	UNUSED						ALL
	34		W0011	005	24		34-22-82	050-099
	34	UNUSED						150-199, 275-299
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						050-099
	37		W0011	901	22		34-22-82	150-199, 275-299
	38		W0011	002	20		34-22-82	ALL
	39	UNUSED						ALL
	40		W0011	001	22		34-22-82	ALL
	41	UNUSED						ALL
	42		W0011	112	20		33-13-11	ALL
	43		W0011	113	20		33-13-11	ALL
	44		W0011	282B	24		34-45-14	ALL
	45		W0011	209B	24		34-22-82	ALL
	46	UNUSED						153-154
	47		W0011	202R	24		34-22-82	ALL
	48		W0011	202B	24		34-22-82	ALL
	49	UNUSED						153-154
	50	UNUSED						153-154
	51	UNUSED						153-154
	52	UNUSED						153-154
	53	UNUSED						153-154
	54	UNUSED						153-154
	=C27	UNUSED						153-154
	CAP	Y	W0011	879	22		34-45-14	050-099, 150-156, 162-166, 275-276
	CAP	Y	W0011	004	20		34-22-82	ALL
	DED		W0011	202Z			34-22-82	ALL
	DED		W0011	209Z			34-22-82	ALL
	DED		W0011	282Z			34-45-14	ALL
D00117		0192/202/L075		PLUG-				ALL
	1		W0431	201R	22		34-12-11	ALL
	2		W0431	201B	22		34-12-11	ALL
	3		W0431	301R	24		34-12-11	ALL
	4		W0431	301B	24		34-12-11	ALL
	5		W0431	301Y	24		34-12-11	ALL

HOOKUP LIST
D280T132

91-21-51
Section D00100
Page 10
May 20/2005



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00117		0192/202/L075		PLUG- (continued)				ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8		W0431	010	22		30-32-11	ALL
	9		W0431	009	20		30-32-11	ALL
	10		W0431	008	22		30-32-11	ALL
	11	UNUSED						ALL
	12		W0431	012	20		34-12-11	ALL
D00121		0192/202/L075		PLUG-				ALL
	1		W0431	202R	22		34-12-11	ALL
	2		W0431	202B	22		34-12-11	ALL
	3		W0431	302R	24		34-12-11	ALL
	4		W0431	302B	24		34-12-11	ALL
	5		W0431	302Y	24		34-12-11	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D00123		0192/202/R075		PLUG-				ALL
	1		W0441	202R	22		34-12-21	ALL
	2		W0441	202B	22		34-12-21	ALL
	3		W0441	302R	24		34-12-21	ALL
	4		W0441	302B	24		34-12-21	ALL
	5		W0441	302Y	24		34-12-21	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8		W0441	010	22		30-32-21	ALL
	9		W0441	009	20		30-32-21	ALL
	10		W0441	008	22		30-32-21	ALL
	11	UNUSED						ALL
	12		W0441	012	20		34-12-21	ALL
D00127		0192/202/R075		PLUG-				ALL
	1		W0441	201R	22		34-12-21	ALL
	2		W0441	201B	22		34-12-21	ALL
	3		W0441	301R	24		34-12-21	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00100

Page 11

May 20/2005



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00127		0192/202/R075		PLUG- (continued)				ALL
	4		W0441	301B	24		34-12-21	ALL
	5		W0441	301Y	24		34-12-21	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D00130		P025-00/ /		RELAY SOCKET-				ALL
	A1	UNUSED						050-099
	A1		W1108	029	20		33-21-12	150-199
	A1		W1108	651	20		33-21-12	275-299
	A2	UNUSED						050-099
	A2		W1108	021	20		33-21-12	150-199
	A2		W1108	650	20		33-21-12	275-299
	A3	UNUSED						ALL
	B1		W1108	026	20		33-21-12	ALL
	B2		W1108	020	20		33-21-12	ALL
	B3	UNUSED						ALL
	C1	UNUSED						050-099, 150-199
	C1		W1108	028	20		33-21-12	275-299
	C2	UNUSED						050-099, 150-199
	C2		W1108	019	20		33-21-12	275-299
	C3	UNUSED						ALL
	D1		W1108	024	20		33-21-12	ALL
	D2		W1108	018	20		33-21-12	ALL
	D3	UNUSED						ALL
	X1		W1108	022	24		33-21-12	ALL
	X2		W1108	628	24		33-21-12	050-099, 150-199
	X2		W1108	023	24		33-21-12	275-299
D00132		P025-00/ /		RELAY SOCKET-				ALL
	A1	UNUSED						050-099
	A1		W1108	004	20		33-21-12	150-199
	A1		W1108	649	20		33-21-12	275-299
	A2	UNUSED						050-099
	A2		W1108	009	20		33-21-12	150-199
	A2		W1108	648	20		33-21-12	275-299

HOOKUP LIST
D280T132

91-21-51
Section D00100
Page 12
May 20/2005



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00132		P025-00/ /		RELAY SOCKET- (continued)				ALL
	A3	UNUSED						ALL
	B1		W1108	012	20		33-21-12	ALL
	B2		W1108	008	20		33-21-12	ALL
	B3	UNUSED						ALL
	C1	UNUSED						050-099, 150-199
	C1		W1108	003	20		33-21-12	275-299
	C2	UNUSED						050-099, 150-199
	C2		W1108	007	20		33-21-12	275-299
	C3	UNUSED						ALL
	D1		W1108	011	20		33-21-12	ALL
	D2		W1108	006	20		33-21-12	ALL
	D3	UNUSED						ALL
	X1		W1108	010	24		33-21-12	ALL
	X2		W1108	629	24		33-21-12	050-099, 150-199
	X2		W1108	030	24		33-21-12	275-299
D00133		AE0106/ /		RCPT-				050-099, 150-199
	1		W0465	008	20		31-31-25	050-099, 150-199
	2		W0465	007	22		31-31-25	050-099, 150-199
	3	UNUSED						050-099, 150-199
	4	UNUSED						050-099, 150-199
	5		W0465	009	20		31-31-25	050-099, 150-199
	6	UNUSED						050-099, 150-199
	7	UNUSED						050-099, 150-199
	8	UNUSED						050-099, 150-199
	9		W0465	204B	22		31-31-25	050-099, 150-199
	10		W0465	204R	22		31-31-25	050-099, 150-199
	11	UNUSED						050-099, 150-199
	12	UNUSED						050-099, 150-199
D00134		P019-00/ /		RELAY SOCKET-				ALL
	1		W1110	006	22		35-21-11	ALL
	2		W1110	014	20		35-21-11	ALL
	3		W1110	016	24		35-21-11	ALL
	4	UNUSED						ALL
	5		W1110	015	24		35-21-11	ALL
	6		W1110	013	20		35-21-11	ALL
	7		W1110	011	24		35-21-11	ALL
	8	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D00100
Page 13
May 20/2005



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00135		AE0105/ /		RCPT-				050-099, 150-199
	1		W0465	011	20		31-31-25	050-099, 150-199
	2		W0465	010	22		31-31-25	050-099, 150-199
	3	UNUSED						050-099, 150-199
	4	UNUSED						050-099, 150-199
	5		W0465	012	20		31-31-25	050-099, 150-199
	6	UNUSED						050-099, 150-199
	7	UNUSED						050-099, 150-199
	8	UNUSED						050-099, 150-199
	9		W0465	205B	22		31-31-25	050-099, 150-199
	10		W0465	205R	22		31-31-25	050-099, 150-199
	11	UNUSED						050-099, 150-199
	12	UNUSED						050-099, 150-199
D00136		P019-00/ /		RELAY SOCKET-				ALL
	A1		W1110	039	16		35-21-12	ALL
	A2		W1110	038	16		35-21-12	ALL
	A3	UNUSED						ALL
	B1		W1110	055	16		35-21-14	ALL
	B2		W1110	054	16		35-21-14	ALL
	B3	UNUSED						ALL
	C1		W1110	047	16		35-21-13	ALL
	C2		W1110	046	16		35-21-13	ALL
	C3	UNUSED						ALL
	D1		W1110	007	24		35-21-11	ALL
	D2		W1110	004	24		35-21-11	ALL
	D3	UNUSED						ALL
	X1		W1110	005	24		35-21-11	ALL
	X2		W1110	006	22		35-21-11	ALL
D00137		AE0217/ /		RCPT-				050-099, 150-199
	1		W0465	014	20		31-31-25	050-099, 150-199
	2		W0465	013	22		31-31-25	050-099, 150-199
	3	UNUSED						050-099, 150-199
	4	UNUSED						050-099, 150-199
	5		W0465	015	20		31-31-25	050-099, 150-199
	6	UNUSED						050-099, 150-199
	7	UNUSED						050-099, 150-199
	8	UNUSED						050-099, 150-199
	9		W0465	206B	22		31-31-25	050-099, 150-199

HOOKUP LIST
D280T132

91-21-51
Section D00100
Page 14
May 20/2005



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00137		AE0217/ /		RCPT- (continued)				050-099, 150-199
	10		W0465	206R	22		31-31-25	050-099, 150-199
	11	UNUSED						050-099, 150-199
	12	UNUSED						050-099, 150-199
D00138		P019-00/ /		RELAY SOCKET-				ALL
	A1		W1110	040	16		35-21-12	ALL
	A2		W1110	041	16		35-21-12	ALL
	A3	UNUSED						ALL
	B1		W1110	057	16		35-21-14	ALL
	B2		W1110	056	16		35-21-14	ALL
	B3	UNUSED						ALL
	C1		W1110	049	16		35-21-13	ALL
	C2		W1110	048	16		35-21-13	ALL
	C3	UNUSED						ALL
	D1		W1110	008	24		35-21-11	ALL
	D2		W1110	010	24		35-21-11	ALL
	D3	UNUSED						ALL
	X1		W1110	009	24		35-21-11	ALL
	X2		W1110	020	24		35-21-11	ALL
D00140		P019-00/ /		RELAY SOCKET-				ALL
	1	UNUSED						ALL
	2		W1110	019	24		35-21-11	ALL
	3		W1110	022	24		35-21-11	ALL
	4	UNUSED						ALL
	5		W1110	020	24		35-21-11	ALL
	6	UNUSED						ALL
	7		W1110	021	24		35-21-11	ALL
	8	UNUSED						ALL
D00142		P019-00/ /		RELAY SOCKET-				ALL
	A1		W1110	029	20		35-21-11	ALL
	A2		W1110	031	22		35-21-11	ALL
	A3	UNUSED						ALL
	B1		W1110	033	24		35-21-11	ALL
	B2		W1110	032	24		35-21-11	ALL
	B3	UNUSED						ALL
	C1		W1110	064	20		23-31-13	ALL
	C2		W1110	063	24		23-31-13	ALL
	C3	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00100

Page 15

May 20/2005



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00142		P019-00/ /		RELAY SOCKET- (continued)				ALL
	D1	UNUSED						ALL
	D2	UNUSED						ALL
	D3	UNUSED						ALL
	X1		W1110	034	24		35-21-11	ALL
	X2		W1110	030	20		35-21-11	ALL
D00144		P019-00/ /		RELAY SOCKET-				ALL
	A1		W1110	025	24		35-21-11	ALL
	A2		W1110	024	24		35-21-11	ALL
	A3	UNUSED						ALL
	B1		W1110	027	20		35-21-11	ALL
	B2		W1110	023	22		35-21-11	ALL
	B3	UNUSED						ALL
	C1		W1110	062	20		23-31-13	ALL
	C2		W1110	061	24		23-31-13	ALL
	C3	UNUSED						ALL
	D1	UNUSED						050-099, 151-152, 154-156, 162-164, 275-299
	D1		W9167	001	20		25-25-23	150, 153, 157, 165-199
	D2	UNUSED						050-099, 151-152, 154-156, 162-164, 275-299
	D2		W9167	002	20		25-25-23	150, 153, 157, 165-199
	D3	UNUSED						ALL
	X1		W1110	026	24		35-21-11	ALL
	X2		W1110	028	20		35-21-11	ALL
	DED		W9167	001Z			25-25-23	150, 153, 157, 165-199
D00146		0429/270/L075		RCPT-				050-099
D00146		0427/270/L075		RCPT-				150-199, 275-278
D00146		0428/270/L073		RCPT-				280-299
	1		W0718	004	20		35-21-12	ALL
	2		W0718	005	20		35-21-12	ALL
D00148		0493/270/L075		RCPT-				050-099, 150-199, 275-278
D00148		0494/270/L073		RCPT-				280-299
	1		W0718	013	20		35-21-12	ALL
	2		W0718	014	20		35-21-12	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00100

Page 16

May 20/2005



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00150		0522/270/L075		RCPT-				050-099, 150-199, 275-278
D00150		0523/270/L073		RCPT-				280-299
	1		W0718	016	20		35-21-12	ALL
	2		W0718	017	20		35-21-12	ALL
D00152		0551/270/L075		RCPT-				050-099, 150-199, 275-278
D00152		0552/270/L073		RCPT-				280-299
	1		W0718	018	20		35-21-12	ALL
	2		W0718	019	20		35-21-12	ALL
D00154		0581/270/L075		RCPT-				050-099, 150-199, 275-278
D00154		0582/270/L073		RCPT-				280-299
	1		W0718	021	20		35-21-12	ALL
	2		W0718	022	20		35-21-12	ALL
D00155		P008-00/ /		PLUG-P8 ILS L CONT PNL				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W0481	001	20		34-31-11	ALL
	6	UNUSED						ALL
	7		W0481	002	20		34-31-11	ALL
	8		W0481	201B	22		34-31-11	ALL
	9		W0481	201R	22		34-31-11	ALL
	10	UNUSED						ALL
	11		W0481	003	22		34-31-11	ALL
	12		W0481	202Z			34-31-11	ALL
	13		W0481	202B	24		34-31-11	ALL
	14		W0481	202R	24		34-31-11	ALL
	15	UNUSED						ALL
D00156		MULTI/ /		PLUG-				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W1266	001	20		33-24-13	050-099, 150-199
	3		W1266	001	20		33-24-11	275-299
	4		W1266	002	20		33-24-13	050-099, 150-199
	4		W1266	002	20		MULTI	275-299
	5		W1266	003	20		33-24-13	050-099, 150-199

HOOKUP LIST

D280T132

91-21-51

Section D00100

Page 17

May 20/2005



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00156		MULTI / /		PLUG- (continued)				ALL
	5		W1266	003	20		MULTI	275-299
	6	UNUSED						050-099, 150-199
	7	UNUSED						050-099, 150-199
	8	UNUSED						050-099, 150-199
	9	UNUSED						050-099, 150-199
	10	UNUSED						050-099, 150-199
	11	UNUSED						050-099, 150-199
	12	UNUSED						050-099, 150-199
D00157		P055-00/ /		PLUG-P55				ALL
	1		W0011	520R	22		34-51-11	ALL
	2		W0011	520B	22		34-51-11	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W0011	773	22		34-51-11	ALL
	7		W0011	775	24		34-55-11	ALL
	8		W0011	517R	24		34-51-11	ALL
	9	UNUSED						ALL
	10		W0011	519R	24		34-51-11	ALL
	11	UNUSED						ALL
	12		W0011	351Y	24		23-51-12	ALL
	13	UNUSED						ALL
	14		W0011	774	20		34-51-11	ALL
	15	UNUSED						ALL
	16		W0011	516R	24		34-55-11	ALL
	17	UNUSED						ALL
	18		W0011	518R	24		34-51-11	ALL
	19	UNUSED						ALL
	20		W0011	517Z			34-51-11	ALL
	21		W0011	517B	24		34-51-11	ALL
	22		W0011	519B	24		34-51-11	ALL
	23		W0011	519Z			34-51-11	ALL
	24		W0011	351R	24		23-51-12	ALL
	25		W0011	351B	24		23-51-12	ALL
	26		W0011	077	24		34-22-18	ALL
	27		W0011	076	24		34-22-18	ALL
	28		W0011	516Z			34-55-11	ALL
	29		W0011	516B	24		34-55-11	ALL
	30		W0011	518Z			34-51-11	ALL

HOOKUP LIST
D280T132

91-21-51
Section D00100
Page 18
May 20/2005



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00157		P055-00/ /		PLUG-P55 (continued)				ALL
	31		W0011	518B	24		34-51-11	ALL
	DED		W0011	351Z			23-51-12	ALL
D00158		MULTI/ /		PLUG-				ALL
	1		W1268	201R	22		23-31-16	050-099, 150-199
	1		W1268	201R	22		23-31-15	275-299
	2		W1268	201B	22		23-31-16	050-099, 150-199
	2		W1268	201B	22		23-31-15	275-299
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						050-099, 150-199
	7	UNUSED						050-099, 150-199
	8	UNUSED						050-099, 150-199
	9	UNUSED						050-099, 150-199
	10	UNUSED						050-099, 150-199
	11	UNUSED						050-099, 150-199
	12	UNUSED						050-099, 150-199
D00159		P055-00/ /		PLUG-P55				ALL
	1		W0031	520R	22		34-51-21	ALL
	2		W0031	520B	22		34-51-21	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W0031	773	22		34-51-21	ALL
	7		W0031	775	24		34-55-21	ALL
	8		W0031	517R	24		34-51-21	ALL
	9	UNUSED						ALL
	10		W0031	519R	24		34-51-21	ALL
	11	UNUSED						ALL
	12		W0031	351Y	24		23-51-12	ALL
	13	UNUSED						ALL
	14		W0031	774	20		34-51-21	ALL
	15	UNUSED						ALL
	16		W0031	516R	24		34-55-21	ALL
	17	UNUSED						ALL
	18		W0031	518R	24		34-51-21	ALL
	19	UNUSED						ALL
	20		W0031	517Z			34-51-21	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00100

Page 19

May 20/2005



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00159		P055-00/ /		PLUG-P55 (continued)				ALL
	21		W0031	517B	24		34-51-21	ALL
	22		W0031	519B	24		34-51-21	ALL
	23		W0031	519Z			34-51-21	ALL
	24		W0031	351R	24		23-51-12	ALL
	25		W0031	351B	24		23-51-12	ALL
	26		W0031	072	24		34-22-28	ALL
	27		W0031	064	24		34-22-28	ALL
	28		W0031	516Z			34-55-21	ALL
	29		W0031	516B	24		34-55-21	ALL
	30		W0031	518Z			34-51-21	ALL
	31		W0031	518B	24		34-51-21	ALL
	DED		W0031	351Z			23-51-12	ALL
D00160		0401/280/L005		PLUG-				050-099, 162-199, 280-299
	1		W1272	201R	22		23-31-15	050-099, 162-199, 280-299
	2		W1272	201B	22		23-31-15	050-099, 162-199, 280-299
	3	UNUSED						050-099, 162-199, 280-299
	4	UNUSED						050-099, 162-199, 280-299
	5	UNUSED						050-099, 162-199, 280-299
	6	UNUSED						050-099, 162-199
	7	UNUSED						050-099, 162-199
	8	UNUSED						050-099, 162-199
	9	UNUSED						050-099, 162-199
	10	UNUSED						050-099, 162-199
	11	UNUSED						050-099, 162-199
	12	UNUSED						050-099, 162-199
D00161		MULTI/ /		PLUG-				ALL
	1		W1349	WRD	18		27-61-18	ALL
	2		W1349	WBU	18		27-61-18	ALL
	3		W1349	WYL	18		27-61-18	ALL
	4		W1349	WGR	18		27-61-18	ALL
	5		W1349	WOR	18		27-61-18	ALL
	6		W1349	WBN	18		27-61-18	ALL
	7		W1349	WRB	18		27-61-18	ALL
	8		W1349	WBK	18		27-61-18	ALL
	9		W1349	WVI	18		27-61-18	ALL
	10		W1349	WOB	18		27-61-18	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00100

Page 20

May 20/2005



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00162		MULTI/270/R072		PLUG-				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W1278	001	22		33-24-14	ALL
	4		W1278	002	22		33-24-14	ALL
	5		W1278	003	22		33-24-14	ALL
	6	UNUSED						050-099, 150-199
	7	UNUSED						050-099, 150-199
	8	UNUSED						050-099, 150-199
	9	UNUSED						050-099, 150-199
	10	UNUSED						050-099, 150-199
	11	UNUSED						050-099, 150-199
	12	UNUSED						050-099, 150-199
D00168		0390/305/L030		PLUG-				050-099
D00168		0390/305/L030		RCPT-				150-199, 275-299
	1		W1230	030	24		33-24-11	ALL
	2		W1230	029	20		33-24-11	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
D00170		1384/204/R094		PLUG-				ALL
	1		W0790	005	20		33-51-11	ALL
	2		W0790	648	20		33-51-11	050-099, 150-199
	2		W0790	004	20		33-51-11	275-299
	3		W0790	650	22		33-51-11	050-099, 150-199
	3		W0790	008	22		33-51-11	275-299
	4		W0790	649	22		33-51-11	050-099, 150-199
	4		W0790	007	22		33-51-11	275-299
	5		W0790	003	22		33-51-11	ALL
	6		W0790	003	22		33-51-11	ALL
	7		W0790	006	20		33-51-11	ALL
	8		W0790	009	22		33-51-11	ALL
	9		W0790	017	20		33-51-12	ALL
	10		W0790	016	22		33-51-12	ALL
	11	DK	W0790	015	18		33-51-12	ALL
	12	DK	W0790	014	18		33-51-12	ALL
	13	FM	W0790	013	16		33-51-12	050-099
	13	DK	W0790	013	18		33-51-12	150-199, 275-299

HOOKUP LIST

D280T132

91-21-51

Section D00100

Page 21

May 20/2005



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00170		1384/204/R094		PLUG- (continued)				ALL
	14		W0790	012	22		33-51-12	ALL
	15	UNUSED						050-099
	15	FM	W0790	011	16		33-51-12	150-199, 275-299
	16	UNUSED						050-099
	16		W0790	070	22		33-51-12	150-199, 275-299
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20		W0790	058	22		33-51-12	ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24		W0790	058	22		33-51-12	ALL
D00175		1730/180/L020		PLUG-				ALL
	1		W0539	203B	20		27-58-21	ALL
	2		W0539	302B	20		27-58-21	ALL
	3		W0539	302R	20		27-58-21	ALL
	4		W0539	302Y	20		27-58-21	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W0539	203R	20		27-58-21	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22		W0539	001	20		31-51-41	ALL
	23	DK	W0539	002	18		31-51-41	ALL
	24	UNUSED						ALL
	25	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00100

Page 22

May 20/2005



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00175		1730/180/L020		PLUG- (continued)				ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	DK	W0539	004	18		27-58-21	ALL
D00179		F 085/ /RS		PLUG-				ALL
	1		W0593	009	18		22-11-12	ALL
	2		W0593	006	20		22-11-12	ALL
	3		W0593	212R	20		22-13-11	ALL
	4		W0593	212B	20		22-13-11	ALL
	5		W0593	211R	20		22-13-11	ALL
	6		W0593	211B	20		22-13-11	ALL
	7		W0593	205B	20		22-11-11	ALL
	8		W0593	205R	20		22-11-11	ALL
	9		W0593	304Y	20		22-13-11	ALL
	10		W0593	304B	20		22-13-11	ALL
	11		W0593	304R	20		22-13-11	ALL
	12		W0593	206B	20		22-11-11	ALL
	13		W0593	206R	20		22-11-11	ALL
	14		W0593	303Y	20		22-13-11	ALL
	15		W0593	303B	20		22-13-11	ALL
	16		W0593	303R	20		22-13-11	ALL
	17		W0593	008	18		22-11-12	ALL
	18		W0593	007	20		22-11-12	ALL
	19		W0593	010	18		22-11-12	ALL
D00181		1820/240/L020		PLUG-				ALL
	1		W0591	004	18		22-11-12	ALL
	2		W0591	001	20		22-11-12	ALL
	3		W0591	208B	20		22-12-11	ALL
	4		W0591	208R	20		22-12-11	ALL
	5		W0591	209B	20		22-12-11	ALL
	6		W0591	209R	20		22-12-11	ALL
	7		W0591	203B	20		22-11-11	ALL
	8		W0591	203R	20		22-11-11	ALL
	9		W0591	302R	20		22-12-11	ALL
	10		W0591	302B	20		22-12-11	ALL
	11		W0591	302Y	20		22-12-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00100

Page 23

May 20/2005



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00181		1820/240/L020		PLUG- (continued)				ALL
	12		W0591	204B	20		22-11-11	ALL
	13		W0591	204R	20		22-11-11	ALL
	14		W0591	301R	20		22-12-11	ALL
	15		W0591	301B	20		22-12-11	ALL
	16		W0591	301Y	20		22-12-11	ALL
	17		W0591	003	18		22-11-12	ALL
	18		W0591	002	20		22-11-12	ALL
	19		W0591	005	18		22-11-12	ALL
D00185		L0250/12/RS		PLUG-				ALL
	1		W0507	001	18		22-11-12	ALL
	2		W0507	002	20		22-11-12	ALL
	3		W0507	206B	20		22-13-11	ALL
	4		W0507	206R	20		22-13-11	ALL
	5		W0507	205B	20		22-13-11	ALL
	6		W0507	205R	20		22-13-11	ALL
	7		W0507	203B	20		22-11-11	ALL
	8		W0507	203R	20		22-11-11	ALL
	9		W0507	302R	20		22-13-11	ALL
	10		W0507	302B	20		22-13-11	ALL
	11		W0507	302Y	20		22-13-11	ALL
	12		W0507	202B	20		22-11-11	ALL
	13		W0507	202R	20		22-11-11	ALL
	14		W0507	301R	20		22-13-11	ALL
	15		W0507	301B	20		22-13-11	ALL
	16		W0507	301Y	20		22-13-11	ALL
	17		W0507	003	18		22-11-12	ALL
	18		W0507	004	20		22-11-12	ALL
	19		W0507	019	18		22-11-12	ALL
D00187		F 085/ /RS		PLUG-				ALL
	1		W0597	009	18		22-11-32	ALL
	2		W0597	006	20		22-11-32	ALL
	3		W0597	212R	20		22-13-31	ALL
	4		W0597	212B	20		22-13-31	ALL
	5		W0597	211R	20		22-13-31	ALL
	6		W0597	211B	20		22-13-31	ALL
	7		W0597	205B	20		22-11-31	ALL
	8		W0597	205R	20		22-11-31	ALL
	9		W0597	304Y	20		22-13-31	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00100

Page 24

May 20/2005



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00187		F 085/ /RS		PLUG- (continued)				ALL
	10		W0597	304B	20		22-13-31	ALL
	11		W0597	304R	20		22-13-31	ALL
	12		W0597	206B	20		22-11-31	ALL
	13		W0597	206R	20		22-11-31	ALL
	14		W0597	303Y	20		22-13-31	ALL
	15		W0597	303B	20		22-13-31	ALL
	16		W0597	303R	20		22-13-31	ALL
	17		W0597	008	18		22-11-32	ALL
	18		W0597	007	20		22-11-32	ALL
	19		W0597	010	18		22-11-32	ALL
D00189		1820/250/R020		PLUG-				ALL
	1		W0611	004	18		22-11-32	ALL
	2		W0611	001	20		22-11-32	ALL
	3		W0611	208B	20		22-12-31	ALL
	4		W0611	208R	20		22-12-31	ALL
	5		W0611	209B	20		22-12-31	ALL
	6		W0611	209R	20		22-12-31	ALL
	7		W0611	203B	20		22-11-31	ALL
	8		W0611	203R	20		22-11-31	ALL
	9		W0611	302R	20		22-12-31	ALL
	10		W0611	302B	20		22-12-31	ALL
	11		W0611	302Y	20		22-12-31	ALL
	12		W0611	204B	20		22-11-31	ALL
	13		W0611	204R	20		22-11-31	ALL
	14		W0611	301R	20		22-12-31	ALL
	15		W0611	301B	20		22-12-31	ALL
	16		W0611	301Y	20		22-12-31	ALL
	17		W0611	003	18		22-11-32	ALL
	18		W0611	002	20		22-11-32	ALL
	19		W0611	005	18		22-11-32	ALL
D00192		MULTI/288/025		PLUG-				162-199
	1		W0124	B-A			33-27-11	162-199
	2		W0124	B-B			33-27-11	162-199
	3		W0124	B-C			33-27-11	162-199
	4		W0124	B-D			33-27-11	162-199
	5		W0124	005	22		33-27-11	162-199
	6	UNUSED						162-199
	7		W0124	007	22		33-27-11	162-199

HOOKUP LIST

D280T132

91-21-51

Section D00100

Page 25

May 20/2005



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00192		MULTI/288/025		PLUG- (continued)				162-199
	8		W0124	018	22		33-27-11	162-199
	9		W0124	009	22		33-27-11	162-199
	10		W0124	010	22		33-27-11	162-199
	11		W0124	021	22		33-27-11	162-199
	12		W0124	022	22		33-27-11	162-199
D00193		R0232/12/TE		PLUG-				ALL
	1		W1727	001	18		22-11-32	ALL
	2		W1727	002	20		22-11-32	ALL
	3		W1727	206R	20		22-13-31	ALL
	4		W1727	206B	20		22-13-31	ALL
	5		W1727	205R	20		22-13-31	ALL
	6		W1727	205B	20		22-13-31	ALL
	7		W1727	203B	20		22-11-31	ALL
	8		W1727	203R	20		22-11-31	ALL
	9		W1727	302Y	20		22-13-31	ALL
	10		W1727	302B	20		22-13-31	ALL
	11		W1727	302R	20		22-13-31	ALL
	12		W1727	202B	20		22-11-31	ALL
	13		W1727	202R	20		22-11-31	ALL
	14		W1727	301Y	20		22-13-31	ALL
	15		W1727	301B	20		22-13-31	ALL
	16		W1727	301R	20		22-13-31	ALL
	17		W1727	003	18		22-11-32	ALL
	18		W1727	004	20		22-11-32	ALL
	19		W1727	019	18		22-11-32	ALL
D00195		F 092/ /RS		PLUG-				ALL
	1		W0599	009	18		22-11-22	ALL
	2		W0599	006	20		22-11-22	ALL
	3		W0599	212R	20		22-13-21	ALL
	4		W0599	212B	20		22-13-21	ALL
	5		W0599	211R	20		22-13-21	ALL
	6		W0599	211B	20		22-13-21	ALL
	7		W0599	205B	20		22-11-21	ALL
	8		W0599	205R	20		22-11-21	ALL
	9		W0599	304Y	20		22-13-21	ALL
	10		W0599	304B	20		22-13-21	ALL
	11		W0599	304R	20		22-13-21	ALL
	12		W0599	206B	20		22-11-21	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00100

Page 26

May 20/2005



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00195		F 092/ /RS		PLUG- (continued)				ALL
	13		W0599	206R	20		22-11-21	ALL
	14		W0599	303Y	20		22-13-21	ALL
	15		W0599	303B	20		22-13-21	ALL
	16		W0599	303R	20		22-13-21	ALL
	17		W0599	008	18		22-11-22	ALL
	18		W0599	007	20		22-11-22	ALL
	19		W0599	010	18		22-11-22	ALL
D00197		1820/250/R030		PLUG-				ALL
	1		W0603	004	18		22-11-22	ALL
	2		W0603	001	20		22-11-22	ALL
	3		W0603	208B	20		22-12-21	ALL
	4		W0603	208R	20		22-12-21	ALL
	5		W0603	209B	20		22-12-21	ALL
	6		W0603	209R	20		22-12-21	ALL
	7		W0603	203B	20		22-11-21	ALL
	8		W0603	203R	20		22-11-21	ALL
	9		W0603	302R	20		22-12-21	ALL
	10		W0603	302B	20		22-12-21	ALL
	11		W0603	302Y	20		22-12-21	ALL
	12		W0603	204B	20		22-11-21	ALL
	13		W0603	204R	20		22-11-21	ALL
	14		W0603	301R	20		22-12-21	ALL
	15		W0603	301B	20		22-12-21	ALL
	16		W0603	301Y	20		22-12-21	ALL
	17		W0603	003	18		22-11-22	ALL
	18		W0603	002	20		22-11-22	ALL
	19		W0603	005	18		22-11-22	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00100

Page 27 End

May 20/2005



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00201		L0254/12/RS		PLUG-				ALL
	1		W1731	001	18		22-11-22	ALL
	2		W1731	002	20		22-11-22	ALL
	3		W1731	205B	20		22-13-21	ALL
	4		W1731	205R	20		22-13-21	ALL
	5		W1731	206B	20		22-13-21	ALL
	6		W1731	206R	20		22-13-21	ALL
	7		W1731	203B	20		22-11-21	ALL
	8		W1731	203R	20		22-11-21	ALL
	9		W1731	302R	20		22-13-21	ALL
	10		W1731	302B	20		22-13-21	ALL
	11		W1731	302Y	20		22-13-21	ALL
	12		W1731	202B	20		22-11-21	ALL
	13		W1731	202R	20		22-11-21	ALL
	14		W1731	301R	20		22-13-21	ALL
	15		W1731	301B	20		22-13-21	ALL
	16		W1731	301Y	20		22-13-21	ALL
	17		W1731	003	18		22-11-22	ALL
	18		W1731	004	20		22-11-22	ALL
	19		W1731	019	18		22-11-22	ALL
D00202		0372/280/L005		RCPT-				050-099, 276-299
D00202		0373/280/L005		RCPT-				150-199, 275
	1		W1160	101	20		35-21-14	050-099, 276-299
	1		W1160	001	20		35-21-14	150-199, 275
	2		W1160	102	20		35-21-14	050-099, 276-299
	2		W1160	002	20		35-21-14	150-199, 275
D00203		0167/200/0000		PLUG-				050-099
D00203		0156/194/0000		PLUG-				150-199, 275-299
	A		W0481	301Y	20		22-32-13	ALL
	B		W0481	039	20		22-32-13	ALL
	C		W0481	038	20		22-32-13	ALL
	D		W0481	301R	20		22-32-13	ALL
	E	UNUSED						ALL
	F	UNUSED						ALL
	G	UNUSED						ALL
	H	UNUSED						ALL
	J	UNUSED						ALL
	K	UNUSED						ALL
	L	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00200

Page 1

May 20/2005



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00203		0167/200/0000		PLUG- (continued)				050-099
D00203		0156/194/0000		PLUG- (continued)				150-199, 275-299
	M		W0481	205B	24		22-32-13	ALL
	N		W0481	205R	24		22-32-13	ALL
	P	UNUSED						ALL
	R	UNUSED						ALL
	S	UNUSED						ALL
	T	UNUSED						ALL
	U	UNUSED						ALL
	V	UNUSED						ALL
	W	UNUSED						ALL
	X		W0481	014	24		22-31-11	ALL
	Y		W0481	013	20		22-31-11	ALL
	Z		W0481	015	20		22-31-11	ALL
	A-		W0481	016	20		22-31-11	ALL
	B-		W0481	040	20		22-31-11	ALL
	C-	UNUSED						ALL
D00205		P002-00/ /		PLUG				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W1435	001	22		31-41-11	ALL
	7		W1435	002	20		31-41-11	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12		W1435	203R	24		31-41-14	ALL
	13		W1435	203B	24		31-41-14	ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17		W1435	003	20		31-41-11	ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22		W1435	004	24		31-41-12	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00200

Page 2

May 20/2005



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00205		P002-00/ /		PLUG (continued)				ALL
	23		W1435	005	24		31-41-12	ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26		W1435	204R	24		31-41-14	ALL
	27		W1435	204B	24		31-41-14	ALL
	28		W1435	202R	24		31-41-14	ALL
	29		W1435	202B	24		31-41-14	ALL
	30		W1435	301R	24		31-41-14	ALL
	31		W1435	301B	24		31-41-14	ALL
	32		W1435	301Y	24		31-41-14	ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49		W1435	205WN	24		31-41-21	ALL
	50		W1435	205W	24		31-41-21	ALL
	51		W1435	206WN	24		31-41-21	ALL
	52		W1435	206W	24		31-41-21	ALL
	53		W1435	207WN	24		31-41-21	ALL
	54		W1435	207W	24		31-41-21	ALL
	55		W1435	209WN	24		31-41-22	ALL
	56		W1435	209W	24		31-41-22	ALL
	57		W1435	210WN	24		31-41-22	ALL
	58		W1435	210W	24		31-41-22	ALL
	59		W1435	212WN	24		31-41-22	ALL
	60		W1435	212W	24		31-41-22	ALL
	61		W1435	211W	24		31-41-22	ALL
	62		W1435	211WN	24		31-41-22	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00200

Page 3

May 20/2005



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00205		P002-00/ /		PLUG (continued)				ALL
	63		W1435	208WN	24		31-41-21	ALL
	64		W1435	208W	24		31-41-21	ALL
	65	UNUSED						ALL
	66	UNUSED						ALL
	67	UNUSED						ALL
D00206		0320/280/L011		RCPT-				275-299
	1		W0714	023	20		35-21-14	275-299
	2		W0714	030	20		35-21-14	275-299
D00207		P002-00/ /		PLUG				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W1437	001	22		31-41-11	ALL
	7		W1437	002	20		31-41-11	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12		W1437	204R	24		31-41-14	ALL
	13		W1437	204B	24		31-41-14	ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17		W1437	003	20		31-41-11	ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22		W1437	004	24		31-41-12	ALL
	23		W1437	005	24		31-41-12	ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26		W1437	203R	24		31-41-14	ALL
	27		W1437	203B	24		31-41-14	ALL
	28		W1437	202R	24		31-41-14	ALL
	29		W1437	202B	24		31-41-14	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00200

Page 4

May 20/2005



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00207		P002-00/ /		PLUG (continued)				ALL
	30		W1437	301R	24		31-41-14	ALL
	31		W1437	301B	24		31-41-14	ALL
	32		W1437	301Y	24		31-41-14	ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49		W1437	205WN	24		31-41-23	ALL
	50		W1437	205W	24		31-41-23	ALL
	51		W1437	206WN	24		31-41-23	ALL
	52		W1437	206W	24		31-41-23	ALL
	53		W1437	207WN	24		31-41-23	ALL
	54		W1437	207W	24		31-41-23	ALL
	55		W1437	209WN	24		31-41-24	ALL
	56		W1437	209W	24		31-41-24	ALL
	57		W1437	210WN	24		31-41-24	ALL
	58		W1437	210W	24		31-41-24	ALL
	59		W1437	212WN	24		31-41-24	ALL
	60		W1437	212W	24		31-41-24	ALL
	61		W1437	211W	24		31-41-24	ALL
	62		W1437	211WN	24		31-41-24	ALL
	63		W1437	208WN	24		31-41-23	ALL
	64		W1437	208W	24		31-41-23	ALL
	65	UNUSED						ALL
	66	UNUSED						ALL
	67	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00200

Page 5

May 20/2005



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00209		P009-00/ /		PLUG-				ALL
	1		W1711	006	22		31-41-12	ALL
	2		W1711	007	22		31-41-12	ALL
	3		W1711	022	24		31-41-13	ALL
	4		W1711	015	24		31-41-13	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8		W1711	026	22		31-41-17	ALL
	9		W1711	025	22		31-41-17	ALL
	10	UNUSED						ALL
	11		W1711	302R	24		31-41-14	ALL
	12		W1711	302B	24		31-41-14	ALL
	13		W1711	302Y	24		31-41-14	ALL
	14		W1711	301R	24		31-41-14	ALL
	15		W1711	301B	24		31-41-14	ALL
	16		W1711	301Y	24		31-41-14	ALL
	17		W1711	202R	24		31-41-12	ALL
	18		W1711	202B	24		31-41-12	ALL
	19		W1711	201R	24		31-41-12	ALL
	20		W1711	201B	24		31-41-12	ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26		W1711	018	24		31-41-13	ALL
	27		W1711	011	24		31-41-13	ALL
	28		W1711	014	24		31-41-13	ALL
	29		W1711	019	24		31-41-13	ALL
	30	UNUSED						ALL
	31		W1711	012	24		31-41-13	ALL
	32		W1711	013	24		31-41-13	ALL
	33		W1711	036	24		31-41-13	ALL
	34		W1711	020	24		31-41-13	ALL
	35		W1711	021	24		31-41-13	ALL
	36		W1711	005	20		31-41-12	ALL
	37		W1711	003	20		31-41-11	ALL
	38		W1711	001	22		31-41-11	ALL
	39		W1711	002	20		31-41-11	ALL
	40	DK	W1711	034	18		33-13-18	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00200

Page 6

May 20/2005



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00209		P009-00/ /		PLUG- (continued)				ALL
	41	DK	W1711	035	18		33-13-18	ALL
D00210		0153/210/0000		PLUG-				ALL
	1		W0051	305Y	24		33-13-11	ALL
	2	FM	W0051	043	16		33-13-11	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W0051	305B	24		33-13-11	ALL
	6		W0051	305R	24		33-13-11	ALL
	7		W0051	046	20		33-13-11	ALL
	8	DK	W0051	042	18		33-13-11	ALL
	9	FM	W0051	041	16		33-13-11	ALL
	10	UNUSED						ALL
	11	FM	W0051	045	16		33-13-11	ALL
	12		W0051	044	24		33-13-11	ALL
D00212		0153/211/L007		RELAY SOCKET-				ALL
	A1		W0051	053	24		33-13-11	ALL
	A2		W0051	044	24		33-13-11	ALL
	A3		W0051	113	24		33-13-11	ALL
	B1		W0051	130	16		33-13-13	ALL
	B2		W0051	042	18		33-13-11	ALL
	B3	UNUSED						ALL
	C1		W0051	054	20		33-13-11	ALL
	C2		W0051	052	18		33-13-11	ALL
	C3	UNUSED						ALL
	D1		W0051	038	16		33-13-11	ALL
	D2		W0051	100	16		33-13-11	ALL
	D3		W0051	034	16		33-13-11	ALL
	G1		W0051	PA1			99-99-99	ALL
	G2	UNUSED						ALL
	G3		W0051	PA1			99-99-99	ALL
	X1		W0051	057	24		33-13-11	ALL
	X2		W0051	058	20		33-13-11	ALL
D00216		P001-03/ /		PLUG-				ALL
	1		W0051	064	20		33-13-11	ALL
	2		W0051	065	20		33-13-11	ALL
	3		W0051	301R	24		34-24-11	ALL
	4		W0051	301B	24		34-24-11	ALL

HOOKUP LIST

D280T132

91-21-51
Section D00200
Page 7
May 20/2005



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00216		P001-03/ /		PLUG- (continued)				ALL
	5		W0051	301Y	24		34-24-11	ALL
	6	UNUSED						ALL
	7		W0051	202R	24		34-24-11	ALL
	8		W0051	202B	24		34-24-11	ALL
	9		W0051	203R	24		34-24-11	ALL
	10		W0051	203B	24		34-24-11	ALL
	11		W0051	205R	24		34-24-11	ALL
	12		W0051	205B	24		34-24-11	ALL
	13		W0051	204R	24		34-24-11	ALL
	14		W0051	204B	24		34-24-11	ALL
	15		W0051	011	24		34-24-11	ALL
	16		W0051	012	24		34-24-11	ALL
	17		W0051	013	24		34-24-11	ALL
	18		W0051	010	24		34-24-11	ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21		W0051	201R	24		34-24-11	ALL
	22		W0051	201B	24		34-24-11	ALL
	23	UNUSED						ALL
	24		W0051	009	20		34-24-11	ALL
D00218		P001-03/ /		PLUG-				ALL
	1		W0051	066	20		33-13-11	ALL
	2		W0051	067	20		33-13-11	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W0051	007	20		34-13-11	ALL
D00220		P001-03/ /		PLUG-				ALL
	1		W0051	068	20		33-13-11	ALL
	2		W0051	069	20		33-13-11	ALL
	3		W0051	004	22		34-13-11	ALL
	4		W0051	005	20		34-13-11	ALL
	5		W0051	006	20		34-13-11	ALL
D00223		1720/285/L005		PLUG				150-154
	1	UNUSED						150-154
	2	UNUSED						150-154
	3	UNUSED						150-154
	4	UNUSED						150-154

HOOKUP LIST

D280T132

91-21-51

Section D00200

Page 8

May 20/2005



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00223		1720/285/L005		PLUG (continued)				150-154
	5	UNUSED						150-154
	6	DK	W0575	013Y	18		27-41-11	150-154
	7	DK	W0575	007Y	18		27-41-11	150-154
	8		W0575	006Y	20		27-41-11	150-154
	9	UNUSED						150-154
	10	UNUSED						150-154
	11	UNUSED						150-154
	12	DK	W0575	005Y	18		27-41-11	150-154
	13		W0575	004Y	20		27-41-11	150-154
	14	UNUSED						150-154
	15	UNUSED						150-154
D00224		P001-03/ /		PLUG-				ALL
	1		W0031	627	24		32-42-12	ALL
	2		W0031	105	24		31-31-18	ALL
	3		W0031	101	24		31-31-18	ALL
	4		W0031	106	24		31-31-18	ALL
	5		W0031	102	24		31-31-18	ALL
	6		W0031	107	24		31-31-18	ALL
	7		W0031	103	24		31-31-18	ALL
	8		W0031	108	24		31-31-18	ALL
	9		W0031	654	24		32-42-12	ALL
	10	UNUSED						ALL
	11		W0031	628	24		32-42-12	ALL
	12		W0031	629	24		32-42-12	ALL
	13	UNUSED						ALL
	14		W0031	642	24		32-42-12	ALL
	15		W0031	643	24		32-42-12	ALL
	16		W0031	656	24		32-42-12	ALL
	17		W0031	660	24		32-42-12	ALL
	18		W0031	661	24		32-42-12	ALL
	19		W0031	655	24		32-42-12	ALL
	20		W0031	104	24		31-31-18	ALL
	21		W0031	109	22		31-31-18	ALL
	22	UNUSED						ALL
	23		W0031	640	24		32-42-12	ALL
	24		W0031	662	24		32-42-12	ALL
	25	UNUSED						ALL
	26		W0031	630	24		32-42-12	ALL
	27		W0031	631	24		32-42-12	ALL

HOOKUP LIST
D280T132

91-21-51
Section D00200
Page 9
May 20/2005



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00224		P001-03/ /		PLUG- (continued)				ALL
	28		W0031	632	24		32-42-12	ALL
	29	UNUSED						ALL
	30		W0031	644	24		32-42-12	ALL
	31		W0031	645	24		32-42-12	ALL
	32		W0031	646	24		32-42-12	ALL
	33		W0031	657	24		32-42-12	ALL
	34		W0031	663	24		32-42-12	ALL
	35		W0031	641	24		32-42-12	ALL
	36		W0031	639	24		32-42-12	ALL
	37		W0031	634	24		32-42-12	ALL
	38		W0031	635	24		32-42-12	ALL
	39		W0031	636	24		32-42-12	ALL
	40		W0031	637	24		32-42-12	ALL
	41		W0031	638	24		32-42-12	ALL
D00225		1725/188/L030		PLUG-				050-099, 155-199, 275-299
D00225		1735/185/L030		PLUG-				150-154
	1		W0575	201B	20		27-58-21	ALL
	2		W0575	301B	20		27-58-21	ALL
	3		W0575	301R	20		27-58-21	ALL
	4		W0575	301Y	20		27-58-21	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W0575	201R	20		27-58-21	ALL
	8		W0575	019	20		27-48-11	050-099, 150-154, 162-164, 275-276
	8		W0575	302R	20		27-48-11	155-157, 165-199, 277-299
	9		W0575	018	20		27-48-11	050-099, 150-154, 162-164, 275-276
	9		W0575	302B	20		27-48-11	155-157, 165-199, 277-299
	10	DK	W0575	015	18		27-48-11	050-099, 150-156, 162-166, 275-276
	10		W0575	302Y	20		27-48-11	157, 167-199, 277-299
	11		W0575	017	20		27-48-11	050-099, 150-154, 157-164, 167-199, 275-299
	11		W0575	302Y	20		27-48-11	155-156, 165-166
	12	DK	W0575	016	18		27-48-11	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16		W0575	012Y	20		27-41-11	050-099
	16		W0575	011Y	20		27-41-11	150-199, 275-299
	17		W0575	004Y	20		27-41-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00200

Page 10

May 20/2005



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00225		1725/188/L030		PLUG- (continued)				050-099, 155-199, 275-299
D00225		1735/185/L030		PLUG- (continued)				150-154
	18		W0575	021Y	20		27-41-11	ALL
	19		W0575	011Y	20		27-41-11	050-099
	19	UNUSED						150-199, 275-299
	20		W0575	010Y	20		27-41-11	ALL
	21		W0575	006Y	20		27-41-11	ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	DK	W0575	020	18		27-58-21	ALL
D00227		1720/280/L007		PLUG				150-154
	1		W0587	001	20		27-41-11	150-154
	2	DK	W0587	002	18		27-41-11	150-154
	3	UNUSED						150-154
	4	UNUSED						150-154
	5	UNUSED						150-154
D00229		1720/285/L005		PLUG				150-154
	1	DK	W0575	003	18		27-41-11	150-154
	2		W0575	002	20		27-41-11	150-154
	3		W0575	001	20		27-41-11	150-154
	4	UNUSED						150-154
	5	UNUSED						150-154
	6	UNUSED						150-154
	7	UNUSED						150-154
	8	DK	W0575	009	18		27-41-11	150-154
	9	UNUSED						150-154
	10	UNUSED						150-154
	11	UNUSED						150-154
	12	UNUSED						150-154
	13	UNUSED						150-154
	14	UNUSED						150-154
	15	UNUSED						150-154

HOOKUP LIST

D280T132

91-21-51

Section D00200

Page 11

May 20/2005



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00231		F 126/ /RS		PLUG-				ALL
	1	UNUSED						ALL
	2		W0579	002	20		27-21-12	ALL
	3		W0579	003	18		27-21-12	ALL
	4	UNUSED						ALL
	5		W0579	202R	20		27-21-12	ALL
	6		W0579	202B	20		27-21-12	ALL
	7		W0579	007	18		27-21-12	ALL
D00232		P003-01/ /		PLUG-P3-1				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W0031	619	22		32-31-11	ALL
	4		W0031	620	22		32-31-11	ALL
	5		W0031	618	20		33-42-11	ALL
	6		W0031	665	24		32-61-14	ALL
	7		W0031	667	20		32-61-14	ALL
	8		W0031	796	24		32-61-14	ALL
	9		W0031	666	24		32-61-14	ALL
	10	UNUSED						ALL
	11		W0031	668	20		32-61-14	ALL
	12	UNUSED						ALL
	13		W0031	188	24		31-31-19	ALL
	14		W0031	189	24		31-31-19	ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	DED		W0031	665Z			32-61-14	ALL
D00233		F 158/ /RS		PLUG				ALL
	1		W0583	005	18		22-21-21	ALL
	2		W0583	004	18		22-21-21	ALL
	3		W0583	203B	20		22-21-21	ALL
	4		W0583	203R	20		22-21-21	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00200

Page 12

May 20/2005



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00233		F 158/ /RS		PLUG (continued)				ALL
	5		W0583	204R	20		22-21-21	ALL
	6		W0583	204B	20		22-21-21	ALL
	7		W0583	302Y	20		22-21-21	ALL
	8		W0583	302R	20		22-21-21	ALL
	9		W0583	302B	20		22-21-21	ALL
	10		W0583	006	18		22-21-21	ALL
D00237		1725/280/R005		PLUG				150-154
	1	UNUSED						150-154
	2	UNUSED						150-154
	3	UNUSED						150-154
	4	UNUSED						150-154
	5	UNUSED						150-154
	6	DK	W0581	013Y	18		27-41-21	150-154
	7	DK	W0581	007Y	18		27-41-21	150-154
	8		W0581	006Y	20		27-41-21	150-154
	9	UNUSED						150-154
	10	UNUSED						150-154
	11	UNUSED						150-154
	12	DK	W0581	005Y	18		27-41-21	150-154
	13		W0581	004Y	20		27-41-21	150-154
	14	UNUSED						150-154
	15	UNUSED						150-154
D00238		P003-01/ /		PLUG-				ALL
	1		W0031	140	20		33-13-13	050-099, 151
	1		W0031	927	20		33-13-13	150, 152-199, 275-299
	2		W0031	141	20		33-13-13	ALL
	3		W0031	624	24		32-41-11	ALL
	4		W0031	625	24		32-41-11	ALL
	5		W0031	626	20		32-41-11	ALL
	6		W0031	623	24		32-41-11	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D00200
Page 13
May 20/2005



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00239		1735/180/L007		PLUG-				ALL
	1		W0581	201B	20		27-58-21	ALL
	2		W0581	301B	20		27-58-21	ALL
	3		W0581	301R	20		27-58-21	ALL
	4		W0581	301Y	20		27-58-21	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W0581	201R	20		27-58-21	ALL
	8		W0581	019	20		27-48-11	050-099, 150-154, 162-164, 275-276
	8		W0581	302R	20		27-48-11	155-157, 165-199, 277-299
	9		W0581	018	20		27-48-11	050-099, 150-154, 162-164, 275-276
	9		W0581	302B	20		27-48-11	155-157, 165-199, 277-299
	10	DK	W0581	015	18		27-48-11	050-099, 150-156, 162-166, 275-276
	10		W0581	302Y	20		27-48-11	157, 167-199, 277-299
	11		W0581	017	20		27-48-11	050-099, 150-154, 157-164, 167-199, 275-299
	11		W0581	302Y	20		27-48-11	155-156, 165-166
	12	DK	W0581	016	18		27-48-11	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16		W0581	012Y	20		27-41-21	050-099
	16		W0581	011Y	20		27-41-21	150-199, 275-299
	17		W0581	004Y	20		27-41-21	ALL
	18		W0581	021Y	20		27-41-21	ALL
	19		W0581	011Y	20		27-41-21	050-099
	19	UNUSED						150-199, 275-299
	20		W0581	010Y	20		27-41-21	ALL
	21		W0581	006Y	20		27-41-21	ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	DK	W0581	020	18		27-58-21	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00200

Page 14

May 20/2005



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00240		P003-01/ /		PLUG-				ALL
	1		W0011	666	20		33-13-13	ALL
	2		W0011	670	20		33-13-13	ALL
	3		W0011	742	24		27-58-11	ALL
	4		W0011	746	20		27-58-11	ALL
	5		W0011	750	20		27-58-11	ALL
	6		W0011	743	24		27-58-11	ALL
	7		W0011	749	24		27-58-11	ALL
	8		W0011	747	24		27-58-11	ALL
	9		W0011	745	24		27-58-11	ALL
	10		W0011	744	24		27-58-11	ALL
	11	UNUSED						ALL
	12		W0011	748	20		27-58-11	ALL
D00241		1725/280/R007		PLUG				150-154
	1		W0589	001	20		27-41-21	150-154
	2	DK	W0589	002	18		27-41-21	150-154
	3	UNUSED						150-154
	4	UNUSED						150-154
	5	UNUSED						150-154
D00243		F 126/ /RS		PLUG-				ALL
	1		W0583	202R	20		27-21-22	ALL
	2		W0583	202B	20		27-21-22	ALL
	3	UNUSED						ALL
D00245		F 158/ /RS		PLUG				ALL
	1		W0579	004	18		22-21-11	ALL
	2		W0579	005	18		22-21-11	ALL
	3		W0579	203B	20		22-21-11	ALL
	4		W0579	203R	20		22-21-11	ALL
	5		W0579	204R	20		22-21-11	ALL
	6		W0579	204B	20		22-21-11	ALL
	7		W0579	302Y	20		22-21-11	ALL
	8		W0579	302R	20		22-21-11	ALL
	9		W0579	302B	20		22-21-11	ALL
	10		W0579	006	18		22-21-11	ALL
D00247		1725/280/R005		PLUG				150-154
	1	DK	W0581	003	18		27-41-21	150-154

HOOKUP LIST
D280T132

91-21-51
Section D00200
Page 15
May 20/2005



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00247		1725/280/R005		PLUG (continued)				150-154
	2		W0581	002	20		27-41-21	150-154
	3		W0581	001	20		27-41-21	150-154
	4	UNUSED						150-154
	5	UNUSED						150-154
	6	UNUSED						150-154
	7	UNUSED						150-154
	8	DK	W0581	009	18		27-41-21	150-154
	9	UNUSED						150-154
	10	UNUSED						150-154
	11	UNUSED						150-154
	12	UNUSED						150-154
	13	UNUSED						150-154
	14	UNUSED						150-154
	15	UNUSED						150-154
D00248A		//		PLUG-				ALL
	A01		W1092	114	24		24-22-11	ALL
	A02		W1092	096	24		24-11-11	ALL
	A03		W1092	648	24		24-11-11	ALL
	A04		W1092	266B	24		24-11-11	ALL
	A05		W1092	110	24		24-22-11	ALL
	A06		W1092	536	24		24-22-12	ALL
	A07		W1092	119	22		24-22-11	ALL
	A08		W1092	540	24		24-22-12	ALL
	A09		W1092	264B	24		24-11-11	ALL
	A10		W1092	135	24		24-28-21	ALL
	A11	UNUSED						ALL
	A12		W1092	621R	24		24-22-12	ALL
	A13	UNUSED						ALL
	A14	UNUSED						ALL
	A15	UNUSED						ALL
	B01		W1092	115	22		24-22-11	ALL
	B02		W1092	134	24		24-28-21	ALL
	B03		W1092	650	24		24-11-11	ALL
	B04		W1092	266R	24		24-11-11	ALL
	B05		W1092	107	24		24-22-11	ALL
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09		W1092	264R	24		24-11-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00200

Page 16

May 20/2005



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00248A		//		PLUG- (continued)				ALL
	B10	UNUSED						ALL
	B11		W1092	621Z			24-22-12	ALL
	B12		W1092	621B	24		24-22-12	ALL
	B13	UNUSED						ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	C01		W1092	117	22		24-22-11	ALL
	C02		W1092	109	24		24-22-11	ALL
	C03	UNUSED						ALL
	C04		W1092	097	24		24-11-11	ALL
	C05		W1092	113	24		24-22-11	ALL
	C06		W1092	101	24		24-11-11	ALL
	C07		W1092	542	22		24-22-12	ALL
	C08		W1092	543	22		24-22-12	ALL
	C09	UNUSED						ALL
	C10	UNUSED						ALL
	C11		W1092	266Z			24-11-11	ALL
	C12	UNUSED						ALL
	C13	UNUSED						ALL
	C14	UNUSED						ALL
	C15		W1092	535	22		24-22-11	ALL
	D01		W1092	265R	24		24-11-11	ALL
	D02		W1092	098	22		24-11-11	ALL
	D03		W1092	265B	24		24-11-11	ALL
	D04		W1092	546	24		24-22-11	ALL
	D05		W1092	112	24		24-22-12	ALL
	D06		W1092	111	24		24-22-11	ALL
	D07		W1092	070	24		24-27-11	ALL
	D08		W1092	537	24		24-22-12	ALL
	D09	UNUSED						ALL
	D10		W1092	598	24		24-11-11	ALL
	D11	UNUSED						ALL
	D12	UNUSED						ALL
	D13		W1092	815	24		24-11-11	ALL
	D14	UNUSED						ALL
	D15		W1092	544	22		24-22-12	ALL
D00248B		//		PLUG-				ALL
	A01		W1092	267B	22		24-21-11	ALL
	A02	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D00200
Page 17
Jun 06/2008



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00248B		//		PLUG- (continued)				ALL
	A03		W1092	102	22		24-11-11	ALL
	A04	UNUSED						ALL
	A05	UNUSED						ALL
	A06	UNUSED						ALL
	A07	UNUSED						ALL
	A08		W1092	531	22		24-11-11	ALL
	A09	UNUSED						ALL
	A10		W1092	405B	24		24-23-11	ALL
	A11		W1092	403B	24		24-23-11	ALL
	A12		W1092	404B	24		24-23-11	ALL
	A13		W1092	402B	24		24-21-11	ALL
	A14	UNUSED						ALL
	A15		W1092	103	22		24-21-11	ALL
	B01		W1092	267R	22		24-21-11	ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04	UNUSED						ALL
	B05	UNUSED						ALL
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09	UNUSED						ALL
	B10		W1092	405G	24		24-23-11	ALL
	B11		W1092	403G	24		24-23-11	ALL
	B12		W1092	404G	24		24-23-11	ALL
	B13		W1092	402R	24		24-21-11	ALL
	B14	UNUSED						ALL
	B15		W1092	104	22		24-21-11	ALL
	C01		W1092	267Z			24-21-11	ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05	UNUSED						ALL
	C06	UNUSED						ALL
	C07	UNUSED						ALL
	C08	UNUSED						ALL
	C09	UNUSED						ALL
	C10		W1092	405R	24		24-23-11	ALL
	C11		W1092	403R	24		24-23-11	ALL
	C12		W1092	404R	24		24-23-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00200

Page 18

May 20/2005



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00248B		//		PLUG- (continued)				ALL
	C13		W1092	402Y	24		24-21-11	ALL
	C14	UNUSED						ALL
	C15		W1092	105	22		24-21-11	ALL
	D01	UNUSED						ALL
	D02		W1092	106	22		24-22-11	ALL
	D03	UNUSED						ALL
	D04	UNUSED						ALL
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	D08		W1092	094	24		24-11-11	ALL
	D09	UNUSED						ALL
	D10		W1092	405Y	24		24-23-11	ALL
	D11		W1092	403Y	24		24-23-11	ALL
	D12		W1092	404Y	24		24-23-11	ALL
	D13		W1092	402G	24		24-21-11	ALL
	D14	UNUSED						ALL
	D15		W1092	093	22		24-11-11	ALL
	DED		W1092	102Z			24-11-11	ALL
D00248C		//		PLUG-				ALL
	1	UNUSED						ALL
	2		W1092	301B	18		24-21-11	ALL
	3		W1092	301R	18		24-21-11	ALL
	4		W1092	301Y	18		24-21-11	ALL
	5	UNUSED						ALL
	= C1	UNUSED						ALL
	= C5	UNUSED						ALL
D00252		P031-00/ /		PLUG-P31				ALL
	1		W0022	137	24		24-27-11	ALL
	2		W0022	019	24		24-27-11	ALL
	3		W0022	003	24		24-22-11	ALL
	4		W0022	056	20		24-22-11	ALL
	5		W0022	029	24		24-27-21	ALL
	6		W0022	028	24		24-27-21	ALL
	7		W0022	047	24		24-22-12	ALL
	8		W0022	057	20		24-22-12	ALL
	9		W0022	139	24		24-27-11	ALL
	10		W0022	020	20		24-27-11	ALL

HOOKUP LIST
D280T132

91-21-51
Section D00200
Page 19
May 20/2005



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00252		P031-00/ /		PLUG-P31 (continued)				ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13		W0022	100	20		24-22-12	ALL
	14		W0022	087	20		24-22-12	ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17		W0022	104	20		24-22-22	ALL
	18		W0022	105	20		24-22-22	ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21		W0022	086	24		24-22-11	ALL
	22		W0022	101	24		24-22-12	ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25		W0022	038	24		24-51-71	ALL
	26		W0022	041	24		24-51-71	ALL
	27		W0022	092	24		24-51-31	ALL
	28		W0022	090	24		24-51-31	ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37		W0022	007	20		24-22-11	ALL
	38	UNUSED						ALL
	39		W0022	004	20		24-22-11	ALL
	40		W0022	006	20		24-22-11	ALL
	41		W0022	008	20		24-22-11	ALL
D00253		P008-00/ /		PLUG-				ALL
	1		W0655	0WRB	20		23-51-11	ALL
	2		W0655	0BLU	24		23-51-11	ALL
	3		W0655	0YEL	24		23-51-11	ALL
	4		W0655	0GRN	24		23-51-11	ALL
	5		W0655	0BLK	24		23-51-11	ALL
	6		W0655	0PUR	24		23-51-11	ALL
	7		W0655	0ORG	24		23-51-13	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00200

Page 20

May 20/2005



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00253		P008-00/ /		PLUG- (continued)				ALL
	8		W0655	OBRN	24		23-51-14	ALL
	9		W0655	OPNK	24		23-51-14	ALL
	10		W0655	OWHT	24		23-51-14	ALL
	11		W0655	OWRD	24		23-51-14	ALL
	12		W0655	OWBU	24		23-51-14	ALL
	13		W0655	OWYL	24		23-51-14	ALL
	14		W0655	OWGR	24		23-51-14	ALL
	15		W0655	OWBK	24		23-51-14	ALL
	16		W0655	OWPR	24		23-51-14	ALL
	17		W0655	OWOR	24		23-51-14	ALL
	18		W0655	OWBN	24		23-51-11	ALL
	19		W0655	OWBY	24		23-51-11	ALL
	20		W0655	OUNI	20		23-51-11	ALL
	21		W0655	ORYL	24		23-51-14	ALL
	22		W0655	ORGR	24		23-51-14	ALL
	23		W0655	ORBK	24		23-51-14	ALL
	24		W0655	ORPR	24		23-51-14	ALL
	25		W0655	OROR	24		23-51-14	ALL
	26		W0655	ORBR	24		23-51-11	ALL
	27		W0655	ORYG	24		23-51-12	ALL
	28		W0655	OBLY	24		23-51-13	ALL
	29		W0655	OBLG	24		23-51-12	ALL
	30		W0655	OBBK	24		23-51-12	ALL
	31		W0655	OBPR	24		23-51-12	ALL
	32		W0655	OBOR	24		23-51-13	ALL
	33		W0655	OBBN	24		23-51-13	ALL
	34		W0655	OBGK	24		23-51-13	ALL
	35		W0655	OYGR	24		23-51-12	ALL
	36		W0655	OYBK	24		23-51-12	ALL
	37		W0655	OYPR	24		23-51-12	ALL
	38		W0655	OYOR	24		23-51-13	ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
D00254		P031-00/ /		PLUG-P31				ALL
	1		W0022	017	24		24-27-11	ALL
	2		W0022	014	20		24-27-11	ALL
	3		W0022	001	24		24-22-12	ALL
	4		W0022	055	20		24-22-12	ALL

HOOKUP LIST
D280T132

91-21-51
Section D00200
Page 21
May 20/2005



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00254		P031-00/ /		PLUG-P31 (continued)				ALL
	5		W0022	134	24		24-51-71	ALL
	6		W0022	133	24		24-51-71	ALL
	7		W0022	049	24		24-22-12	ALL
	8		W0022	058	20		24-22-12	ALL
	9		W0022	016	24		24-22-12	ALL
	10		W0022	015	20		24-22-12	ALL
	11		W0022	164	20		24-51-72	050-099, 162-164, 276
	11	UNUSED						150-157, 165-199, 275, 277-299
	12		W0022	165	20		24-51-72	050-099, 162-164, 276
	12	UNUSED						150-157, 165-199, 275, 277-299
	13	UNUSED						ALL
	14	UNUSED						ALL
	15		W0022	018	24		24-27-11	ALL
	16		W0022	013	24		24-27-11	ALL
	17		W0022	111	24		29-11-31	ALL
	18		W0022	112	24		29-11-31	ALL
	19		W0022	113	24		29-11-31	ALL
	20		W0022	114	24		29-11-31	ALL
	21		W0022	027	24		24-27-21	ALL
	22		W0022	025	24		24-27-21	ALL
	23		W0022	028	24		24-27-21	ALL
	24		W0022	026	24		24-27-21	ALL
	25		W0022	089	24		24-51-31	ALL
	26		W0022	122	24		24-51-31	ALL
	27		W0022	102	24		24-51-31	ALL
	28		W0022	103	24		24-51-31	ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37		W0022	050	20		24-22-12	ALL
	38	UNUSED						ALL
	39		W0022	054	20		24-22-12	ALL
	40		W0022	052	20		24-22-12	ALL
	41		W0022	053	20		24-22-12	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00200

Page 22

May 20/2005



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00255		0187/220/0000		PLUG-				ALL
	1		W0657	0WRB	20		23-51-21	ALL
	2		W0657	0BLU	24		23-51-21	ALL
	3		W0657	0YEL	24		23-51-21	ALL
	4		W0657	0GRN	24		23-51-21	ALL
	5		W0657	0BLK	24		23-51-21	ALL
	6		W0657	0PUR	24		23-51-21	ALL
	7		W0657	0ORG	24		23-51-21	ALL
	8		W0657	0BRN	24		23-51-21	ALL
	9		W0657	0PNK	24		23-51-21	ALL
	10		W0657	0WHT	24		23-51-21	ALL
	11		W0657	0WRD	24		23-51-21	ALL
	12		W0657	0WBU	24		23-51-21	ALL
	13		W0657	0WYL	24		23-51-21	ALL
	14		W0657	0WGR	24		23-51-21	ALL
	15		W0657	0WBK	24		23-51-21	ALL
	16		W0657	0WPR	24		23-51-21	ALL
	17		W0657	0WOR	24		23-51-21	ALL
	18		W0657	0WBN	24		23-51-21	ALL
	19		W0657	0WBY	24		23-51-21	ALL
	20		W0657	0UNI	20		23-51-21	ALL
	21		W0657	0RYL	24		23-51-21	ALL
	22		W0657	0RGR	24		23-51-21	ALL
	23		W0657	0RBK	24		23-51-21	ALL
	24		W0657	0RPR	24		23-51-21	ALL
	25		W0657	0ROR	24		23-51-21	ALL
	26		W0657	0RBR	24		23-51-21	ALL
	27		W0657	0RYG	24		23-51-21	ALL
	28		W0657	0BLY	24		23-51-21	ALL
	29		W0657	0BLG	24		23-51-21	ALL
	30		W0657	0BBK	24		23-51-21	ALL
	31		W0657	0BPR	24		23-51-21	ALL
	32		W0657	0BOR	24		23-51-21	ALL
	33		W0657	0BBN	24		23-51-21	ALL
	34		W0657	0BGK	24		23-51-21	ALL
	35		W0657	0YGR	24		23-51-21	ALL
	36		W0657	0YBK	24		23-51-21	ALL
	37		W0657	0YPR	24		23-51-21	ALL
	38		W0657	0YOR	24		23-51-21	ALL
	39	UNUSED						ALL
	40	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00200

Page 23

May 20/2005



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00255		0187/220/0000		PLUG- (continued)				ALL
	41	UNUSED						ALL
D00256A		//		PLUG-PART OF D00256				ALL
	A01		W0016	046	24		24-22-21	ALL
	A02		W0016	023	24		24-11-11	ALL
	A03		W0016	180	24		24-11-21	ALL
	A04		W0016	206B	24		24-11-21	ALL
	A05		W0016	043	24		24-22-21	ALL
	A06		W0016	125	24		24-22-11	ALL
	A07		W0016	047	22		24-22-21	ALL
	A08		W0016	109	24		24-22-22	ALL
	A09		W0016	207B	24		24-11-21	ALL
	A10		W0016	061	24		24-28-21	ALL
	A11	UNUSED						ALL
	A12		W0016	210R	22		24-22-22	ALL
	A13	UNUSED						ALL
	A14	UNUSED						ALL
	A15	UNUSED						ALL
	B01		W0016	105	22		24-22-21	ALL
	B02		W0016	060	24		24-28-21	ALL
	B03		W0016	183	24		24-11-21	ALL
	B04		W0016	206R	24		24-11-21	ALL
	B05		W0016	039	24		24-22-21	ALL
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09		W0016	207R	24		24-11-21	ALL
	B10	UNUSED						ALL
	B11		W0016	210Z			24-22-22	ALL
	B12		W0016	210B	22		24-22-22	ALL
	B13	UNUSED						ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	C01		W0016	106	22		24-22-21	ALL
	C02		W0016	042	24		24-22-21	ALL
	C03	UNUSED						050-099, 275-299
	C03		W0016	098	24		24-11-21	150-199
	C04		W0016	026	24		24-11-21	ALL
	C05		W0016	104	24		24-22-21	ALL
	C06		W0016	030	24		24-11-21	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00200

Page 24

May 20/2005



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00256A		//		PLUG-PART OF D00256 (continued)				ALL
	C07		W0016	110	22		24-22-22	ALL
	C08		W0016	111	22		24-22-22	ALL
	C09	UNUSED						ALL
	C10	UNUSED						ALL
	C11		W0016	206Z			24-11-21	ALL
	C12	UNUSED						ALL
	C13	UNUSED						ALL
	C14	UNUSED						ALL
	C15		W0016	108	22		24-22-21	ALL
	D01		W0016	208R	24		24-11-21	ALL
	D02		W0016	027	22		24-11-21	ALL
	D03		W0016	208B	24		24-11-21	ALL
	D04		W0016	037	24		24-22-21	ALL
	D05		W0016	045	24		24-22-22	ALL
	D06		W0016	044	24		24-22-21	ALL
	D07		W0016	058	24		24-27-21	ALL
	D08		W0016	052	24		24-22-22	ALL
	D09	UNUSED						ALL
	D10		W0016	169	24		24-11-21	ALL
	D11	UNUSED						ALL
	D12	UNUSED						ALL
	D13		W0016	511	24		24-11-21	ALL
	D14	UNUSED						ALL
	D15		W0016	113	22		24-22-22	ALL
	DED		W0016	027Z			24-11-21	ALL
	DED		W0016	125Z			24-22-11	ALL
D00256B		//		PLUG-PART OF D00256				ALL
	A01		W0016	209B	22		24-21-21	ALL
	A02	UNUSED						ALL
	A03		W0016	020	22		24-11-21	ALL
	A04	UNUSED						ALL
	A05	UNUSED						ALL
	A06	UNUSED						ALL
	A07	UNUSED						ALL
	A08		W0016	022	22		24-11-21	ALL
	A09	UNUSED						ALL
	A10		W0016	403B	24		24-23-11	ALL
	A11		W0016	402B	24		24-23-11	ALL
	A12		W0016	404B	24		24-23-11	ALL

HOOKUP LIST
D280T132

91-21-51
Section D00200
Page 25
Jun 06/2008



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00256B		//		PLUG-PART OF D00256 (continued)				ALL
	A13		W0016	401B	24		24-21-21	ALL
	A14	UNUSED						ALL
	A15		W0016	100	22		24-21-21	ALL
	B01		W0016	209R	22		24-21-21	ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04	UNUSED						ALL
	B05	UNUSED						ALL
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09	UNUSED						ALL
	B10		W0016	403R	24		24-23-11	ALL
	B11		W0016	402R	24		24-23-11	ALL
	B12		W0016	404R	24		24-23-11	ALL
	B13		W0016	401R	24		24-21-21	ALL
	B14	UNUSED						ALL
	B15		W0016	101	22		24-21-21	ALL
	C01		W0016	209Z			24-21-21	ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05	UNUSED						ALL
	C06	UNUSED						ALL
	C07	UNUSED						ALL
	C08	UNUSED						ALL
	C09	UNUSED						ALL
	C10		W0016	403Y	24		24-23-11	ALL
	C11		W0016	402Y	24		24-23-11	ALL
	C12		W0016	404Y	24		24-23-11	ALL
	C13		W0016	401Y	24		24-21-21	ALL
	C14	UNUSED						ALL
	C15		W0016	102	22		24-21-21	ALL
	D01	UNUSED						ALL
	D02		W0016	103	22		24-22-21	ALL
	D03	UNUSED						ALL
	D04	UNUSED						ALL
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00200

Page 26

May 20/2005



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00256B		//		PLUG-PART OF D00256 (continued)				ALL
	D08		W0016	025	24		24-11-21	ALL
	D09	UNUSED						ALL
	D10		W0016	403G	24		24-23-11	ALL
	D11		W0016	402G	24		24-23-11	ALL
	D12		W0016	404G	24		24-23-11	ALL
	D13		W0016	401G	24		24-21-21	ALL
	D14	UNUSED						ALL
	D15		W0016	021	22		24-11-21	ALL
D00256C		//		PLUG-PART OF D00256				ALL
	1	UNUSED						ALL
	2		W0016	301B	18		24-21-21	ALL
	3		W0016	301R	18		24-21-21	ALL
	4		W0016	301Y	18		24-21-21	ALL
	5	UNUSED						ALL
	= C1	UNUSED						ALL
	= C5	UNUSED						ALL
D00257		P008-00/ /		PLUG-				ALL
	1	DK	W0629	014	18		33-13-18	050-099, 150-155, 162-165, 275-276
	1	DK	W0629	206R	18		33-13-18	156-157, 166-199, 277-299
	2	DK	W0629	015	18		33-13-18	050-099, 150-155, 162-165, 275-276
	2	DK	W0629	206B	18		33-13-18	156-157, 166-199, 277-299
	3		W0629	001	22		23-51-11	ALL
	4		W0629	005	20		23-51-11	ALL
	5		W0629	002	24		23-51-11	ALL
	6		W0629	003	24		23-51-11	ALL
	7		W0629	004	24		23-51-11	ALL
	8		W0629	013Z			23-51-11	ALL
	9		W0629	013	24		23-51-11	ALL
	10		W0629	203R	24		23-51-11	ALL
	11		W0629	203Z			23-51-11	050-099, 150
	11		W0629	FRB			23-51-11	151-199, 275-299
	12		W0629	203B	24		23-51-11	ALL
	13		W0629	201B	24		23-51-11	ALL
	14		W0629	201R	24		23-51-11	ALL
	15		W0629	012Z			23-51-11	ALL
	16		W0629	012	24		23-51-11	ALL
	17		W0629	007Z			23-51-11	ALL
	18		W0629	007	24		23-51-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00200

Page 27

May 20/2005



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00257		P008-00/ /		PLUG- (continued)				ALL
	19		W0629	008	24		23-51-11	ALL
	20		W0629	009	24		23-51-11	ALL
	21		W0629	010	24		23-51-11	ALL
	22	UNUSED						ALL
	23		W0629	011	24		23-51-11	ALL
	24		W0629	011	24		23-51-11	ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29		W0629	024	24		23-51-11	050-099, 150, 153-199, 275-299
	29	UNUSED						151-152
	30	UNUSED						ALL
	31		W0629	025	24		23-51-11	ALL
	REF		W0629	024Z			23-51-11	151-152
	REF		W0629	203Z			23-51-11	151-199, 275-299
	REF		W0629	FRB			23-51-11	151-199, 275-299
D00258		1086/290/L056		PLUG-				050-099
D00258		996/290/L056		PLUG-				150-199
D00258		1042/290/L056		PLUG-				275-299
	1	UNUSED						ALL
	2		W0816	585	22		33-21-14	050-099
	2		W0816	585	20		33-21-14	150-199, 275-299
	3		W0816	586	22		33-21-14	050-099
	3		W0816	586	20		33-21-14	150-199, 275-299
	4	UNUSED						ALL
	5		W0816	587	20		33-21-14	ALL
	6	UNUSED						ALL
	7		W0816	588	20		33-21-14	ALL
	8		W0816	589	20		33-21-14	ALL
	9		W0816	590	22		33-21-14	050-099
	9		W0816	590	20		33-21-14	150-199, 275-299
	10		W0816	591	22		33-21-14	050-099
	10		W0816	591	20		33-21-14	150-199, 275-299
	11		W0816	592	22		33-21-14	050-099
	11		W0816	592	20		33-21-14	150-199, 275-299
	12		W0816	593	22		33-21-14	050-099
	12		W0816	593	20		33-21-14	150-199, 275-299

HOOKUP LIST

D280T132

91-21-51

Section D00200

Page 28

May 20/2005



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00259		P008-00/ /		PLUG-				ALL
	1	DK	W0631	016	18		33-13-18	050-099, 150-155, 162-165, 275-276
	1	DK	W0631	205R	18		33-13-18	156-157, 166-199, 277-299
	2	DK	W0631	017	18		33-13-18	050-099, 150-155, 162-165, 275-276
	2	DK	W0631	205B	18		33-13-18	156-157, 166-199, 277-299
	3		W0631	001	22		23-51-21	ALL
	4		W0631	005	20		23-51-21	ALL
	5		W0631	002	24		23-51-21	ALL
	6		W0631	003	24		23-51-21	ALL
	7		W0631	004	24		23-51-21	ALL
	8		W0631	014Z			23-51-21	ALL
	9		W0631	014	24		23-51-21	ALL
	10		W0631	203R	24		23-51-21	ALL
	11		W0631	203Z			23-51-21	050-099, 150
	11		W0631	FRB			23-51-21	151-199, 275-299
	12		W0631	203B	24		23-51-21	ALL
	13		W0631	201B	24		23-51-21	ALL
	14		W0631	201R	24		23-51-21	ALL
	15		W0631	012Z			23-51-21	ALL
	16		W0631	012	24		23-51-21	ALL
	17		W0631	007Z			23-51-21	ALL
	18		W0631	007	24		23-51-21	ALL
	19		W0631	008	24		23-51-21	ALL
	20		W0631	009	24		23-51-21	ALL
	21		W0631	010	24		23-51-21	ALL
	22	UNUSED						ALL
	23		W0631	011	24		23-51-21	ALL
	24		W0631	011	24		23-51-21	ALL
	25		W0631	013Z			23-51-21	ALL
	26		W0631	013	24		23-51-21	ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29		W0631	024	24		23-51-21	050-099, 150, 153-199, 275-299
	29	UNUSED						151-152
	30	UNUSED						ALL
	31		W0631	030	24		23-51-21	ALL
	REF		W0631	024Z			23-51-21	151-152
	REF		W0631	203Z			23-51-21	151-199, 275-299
	REF		W0631	FRB			23-51-21	151-199, 275-299

HOOKUP LIST

D280T132

91-21-51

Section D00200

Page 29

May 20/2005



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00260		P032-00/ /		PLUG-P32				ALL
	1		W0024	150	24		24-27-21	ALL
	2		W0024	031	24		24-27-21	ALL
	3		W0024	004	24		24-22-21	ALL
	4		W0024	005	20		24-22-21	ALL
	5		W0024	021	24		24-27-11	ALL
	6		W0024	022	24		24-27-11	ALL
	7		W0024	012	24		24-22-22	ALL
	8		W0024	011	20		24-22-22	ALL
	9		W0024	148	24		24-27-21	ALL
	10		W0024	029	20		24-27-21	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13		W0024	102	20		24-22-12	ALL
	14		W0024	098	20		24-22-12	ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17		W0024	110	20		24-22-22	ALL
	18		W0024	109	20		24-22-22	ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21		W0024	103	24		24-22-12	ALL
	22		W0024	101	24		24-22-12	ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25		W0024	145	24		24-51-71	ALL
	26		W0024	146	24		24-51-71	ALL
	27		W0024	111	24		24-51-31	ALL
	28		W0024	108	24		24-51-31	ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37		W0024	010	20		24-22-21	ALL
	38	UNUSED						ALL
	39		W0024	006	20		24-22-21	ALL
	40		W0024	007	20		24-22-21	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00200

Page 30

May 20/2005



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00260		P032-00/ /		PLUG-P32 (continued)				ALL
	41		W0024	008	20		24-22-21	ALL
D00261		0164/225/L036		PLUG-				ALL
	1		W0629	007	24		23-51-11	ALL
	2		W0629	007Z			23-51-11	ALL
	3	UNUSED						ALL
	4		W0629	009	24		23-51-11	ALL
	5	UNUSED						ALL
	6		W0629	008	24		23-51-11	ALL
	7		W0629	010	24		23-51-11	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D00262		P032-00/ /		PLUG-P32				ALL
	1		W0024	032	24		24-27-21	ALL
	2		W0024	036	20		24-27-21	ALL
	3		W0024	001	24		24-22-22	ALL
	4		W0024	002	20		24-22-22	ALL
	5		W0024	143	24		24-51-71	ALL
	6		W0024	144	24		24-51-71	ALL
	7		W0024	014	24		24-22-22	ALL
	8		W0024	013	20		24-22-22	ALL
	9		W0024	141	24		24-22-22	ALL
	10		W0024	142	20		24-22-22	ALL
	11		W0024	188	20		24-51-72	050-099, 162-164, 276 150-157, 165-199, 275, 277-299
	11	UNUSED						
	12		W0024	189	20		24-51-72	050-099, 162-164, 276 150-157, 165-199, 275, 277-299
	12	UNUSED						
	13	UNUSED						ALL
	14	UNUSED						ALL
	15		W0024	033	24		24-27-21	ALL
	16		W0024	034	24		24-27-21	ALL
	17		W0024	120	24		29-11-31	ALL
	18		W0024	121	24		29-11-31	ALL
	19		W0024	123	24		29-11-31	ALL
	20		W0024	122	24		29-11-31	ALL
	21		W0024	023	24		24-27-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00200

Page 31

May 20/2005



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00262		P032-00/ /		PLUG-P32 (continued)				ALL
	22		W0024	025	24		24-27-11	ALL
	23		W0024	022	24		24-27-11	ALL
	24		W0024	026	24		24-27-11	ALL
	25		W0024	107	24		24-51-31	ALL
	26		W0024	133	24		24-51-31	ALL
	27		W0024	104	24		24-51-31	ALL
	28		W0024	105	24		24-51-31	ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37		W0024	017	20		24-22-22	ALL
	38	UNUSED						ALL
	39		W0024	019	20		24-22-22	ALL
	40		W0024	020	20		24-22-22	ALL
	41		W0024	018	20		24-22-22	ALL
D00263		0199/234/R036		PLUG-				ALL
	1		W0631	007	24		23-51-21	ALL
	2		W0631	007Z			23-51-21	ALL
	3	UNUSED						ALL
	4		W0631	009	24		23-51-21	ALL
	5	UNUSED						ALL
	6		W0631	008	24		23-51-21	ALL
	7		W0631	010	24		23-51-21	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D00264A		//		PLUG-PART OF D00264				ALL
	A01		W0018	007	24		24-22-41	ALL
	A02	UNUSED						ALL
	A03	UNUSED						ALL
	A04	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00200

Page 32

May 20/2005



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00264A		//		PLUG-PART OF D00264 (continued)				ALL
	A05		W0018	012	24		24-22-41	ALL
	A06		W0018	014	24		24-22-41	ALL
	A07	UNUSED						ALL
	A08	UNUSED						ALL
	A09	UNUSED						ALL
	A10		W0018	028	24		24-28-21	ALL
	A11		W0018	046	22		24-22-41	ALL
	A12		W0018	204R	24		24-41-11	ALL
	A13	UNUSED						ALL
	A14	UNUSED						ALL
	A15	UNUSED						ALL
	B01		W0018	042	22		24-22-41	ALL
	B02		W0018	030	24		24-28-21	ALL
	B03	UNUSED						ALL
	B04	UNUSED						ALL
	B05		W0018	008	24		24-22-41	ALL
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11		W0018	204Z			24-41-11	ALL
	B12		W0018	204B	24		24-41-11	ALL
	B13	UNUSED						ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	C01		W0018	043	22		24-22-41	ALL
	C02		W0018	011	24		24-22-41	ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05		W0018	041	22		24-22-41	ALL
	C06	UNUSED						ALL
	C07	UNUSED						ALL
	C08	UNUSED						ALL
	C09	UNUSED						ALL
	C10	UNUSED						ALL
	C11	UNUSED						ALL
	C12	UNUSED						ALL
	C13	UNUSED						ALL
	C14	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D00200
Page 33
May 20/2005



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00264A		//		PLUG-PART OF D00264 (continued)				ALL
	C15		W0018	045	22		24-22-41	ALL
	D01	UNUSED						ALL
	D02	UNUSED						ALL
	D03	UNUSED						ALL
	D04		W0018	087	24		24-22-41	ALL
	D05	UNUSED						ALL
	D06		W0018	013	24		24-22-41	ALL
	D07		W0018	061	24		24-41-11	ALL
	D08	UNUSED						ALL
	D09	UNUSED						ALL
	D10	UNUSED						ALL
	D11	UNUSED						ALL
	D12	UNUSED						ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15	UNUSED						ALL
D00264B		//		PLUG-PART OF D00264				ALL
	A01		W0018	203B	22		24-21-41	ALL
	A02	UNUSED						ALL
	A03		W0018	039	22		24-22-41	ALL
	A04	UNUSED						ALL
	A05	UNUSED						ALL
	A06	UNUSED						ALL
	A07	UNUSED						ALL
	A08		W0018	085	22		24-22-41	ALL
	A09	UNUSED						ALL
	A10	UNUSED						ALL
	A11	UNUSED						ALL
	A12		W0018	403B	24		24-23-11	ALL
	A13		W0018	401B	24		24-21-41	ALL
	A14	UNUSED						ALL
	A15		W0018	036	22		24-21-41	ALL
	B01		W0018	203R	22		24-21-41	ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04	UNUSED						ALL
	B05	UNUSED						ALL
	B06	UNUSED						ALL
	B07	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00200

Page 34

May 20/2005



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00264B		//		PLUG-PART OF D00264 (continued)				ALL
	B08	UNUSED						ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12		W0018	403G	24		24-23-11	ALL
	B13		W0018	401G	24		24-21-41	ALL
	B14	UNUSED						ALL
	B15		W0018	037	22		24-21-41	ALL
	C01		W0018	203Z			24-21-41	ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05	UNUSED						ALL
	C06	UNUSED						ALL
	C07	UNUSED						ALL
	C08	UNUSED						ALL
	C09	UNUSED						ALL
	C10	UNUSED						ALL
	C11	UNUSED						ALL
	C12		W0018	403R	24		24-23-11	ALL
	C13		W0018	401R	24		24-21-41	ALL
	C14	UNUSED						ALL
	C15		W0018	038	22		24-21-41	ALL
	D01	UNUSED						ALL
	D02		W0018	040	22		24-22-41	ALL
	D03	UNUSED						ALL
	D04	UNUSED						ALL
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	D08	UNUSED						ALL
	D09	UNUSED						ALL
	D10	UNUSED						ALL
	D11	UNUSED						ALL
	D12		W0018	403Y	24		24-23-11	ALL
	D13		W0018	401Y	24		24-21-41	ALL
	D14	UNUSED						ALL
	D15		W0018	084	22		24-22-41	ALL
	DED		W0018	039Z			24-22-41	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00200

Page 35

May 20/2005



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00264C		//		PLUG-PART OF D00264				ALL
	1	UNUSED						ALL
	2		W0018	301B	18		24-21-41	ALL
	3		W0018	301R	18		24-21-41	ALL
	4		W0018	301Y	18		24-21-41	ALL
	5	UNUSED						ALL
	=C1	UNUSED						ALL
	=C5	UNUSED						ALL
D00268		P034-00/ /		PLUG-P34				ALL
	1		W0026	042	24		24-27-21	ALL
	2		W0026	069	24		24-27-21	ALL
	3		W0026	034	24		24-22-41	ALL
	4		W0026	065	20		24-22-41	ALL
	5		W0026	011	24		24-27-11	ALL
	6		W0026	068	24		24-27-11	ALL
	7		W0026	035	24		24-41-11	ALL
	8		W0026	074	20		24-41-11	ALL
	9		W0026	101	24		24-27-41	ALL
	10		W0026	103	24		24-27-41	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13		W0026	076	20		24-22-12	ALL
	14		W0026	078	20		24-22-12	ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17		W0026	079	20		24-22-22	ALL
	18		W0026	081	20		24-22-22	ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21		W0026	075	24		24-22-12	ALL
	22		W0026	085	24		24-41-11	ALL
	23		W0026	111	24		24-51-71	ALL
	24		W0026	109	24		24-51-71	ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00200

Page 36

May 20/2005



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00268		P034-00/ /		PLUG-P34 (continued)				ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37		W0026	029	20		24-22-41	ALL
	38	UNUSED						ALL
	39		W0026	043	20		24-22-41	ALL
	40		W0026	066	20		24-22-41	ALL
	41		W0026	044	20		24-22-41	ALL
D00270		1168/290/L056		PLUG-				050-099
D00270		1130/290/L056		PLUG-				150-199, 275-299
	1	UNUSED						ALL
	2		W0816	600	22		33-21-14	050-099
	2		W0816	600	20		33-21-14	150-199, 275-299
	3		W0816	601	22		33-21-14	050-099
	3		W0816	601	20		33-21-14	150-199, 275-299
	4	UNUSED						ALL
	5		W0816	602	20		33-21-14	ALL
	6	UNUSED						ALL
	7		W0816	603	20		33-21-14	ALL
	8		W0816	604	20		33-21-14	ALL
	9		W0816	605	22		33-21-14	050-099
	9		W0816	605	20		33-21-14	150-199, 275-299
	10		W0816	606	22		33-21-14	050-099
	10		W0816	606	20		33-21-14	150-199, 275-299
	11		W0816	607	22		33-21-14	050-099
	11		W0816	607	20		33-21-14	150-199, 275-299
	12		W0816	608	22		33-21-14	050-099
	12		W0816	608	20		33-21-14	150-199, 275-299
D00273		1562/287/L030		PLUG-E7				ALL
	1	UNUSED						ALL
	2		W0649	002	22		23-71-11	ALL
	3		W0649	003	20		23-71-11	ALL
	4	UNUSED						ALL
	5		W0649	006Z			23-71-11	ALL
	6		W0649	006	24		23-71-11	ALL
	7		W0649	007	24		23-71-11	ALL

HOOKUP LIST
D280T132

91-21-51
Section D00200
Page 37
May 20/2005



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00273		1562/287/L030		PLUG-E7 (continued)				ALL
	8		W0649	007	24		23-71-11	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12		W0649	012	24		23-71-11	ALL
	13		W0649	013	24		23-71-11	ALL
	14		W0649	014	22		23-71-11	ALL
	15		W0649	015	24		23-71-11	ALL
	16		W0649	016	24		23-71-11	ALL
	17		W0649	017	20		23-71-11	ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23		W0649	023	24		23-71-11	ALL
	24		W0649	024	24		23-71-11	ALL
	25		W0649	025	24		23-71-11	ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30		W0649	018Z			23-51-41	ALL
	31	UNUSED						ALL
	32		W0649	018	24		23-51-41	ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35		W0649	020Z			23-51-21	ALL
	36	UNUSED						ALL
	37		W0649	020	24		23-51-21	ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41		W0649	026Z			23-51-13	ALL
	42	UNUSED						ALL
	43		W0649	026	24		23-51-13	ALL
	44	UNUSED						ALL
	45		W0649	010Z			23-71-11	ALL
	46	UNUSED						ALL
	47		W0649	010	24		23-71-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00200

Page 38

May 20/2005



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00273		1562/287/L030		PLUG-E7 (continued)				ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55		W0649	009	24		23-71-11	ALL
	56	UNUSED						ALL
	57		W0649	008	24		23-71-11	ALL
D00274		P034-00/ /		PLUG-P34				ALL
	1		W0026	059	20		24-41-12	ALL
	2		W0026	010	24		24-41-12	ALL
	3		W0026	019	24		24-41-12	ALL
	4		W0026	060	20		24-41-12	ALL
	5		W0026	069	24		24-27-21	ALL
	6		W0026	070	20		24-27-21	ALL
	7		W0026	036	24		24-41-11	ALL
	8		W0026	072	20		24-41-11	ALL
	9		W0026	068	24		24-27-11	ALL
	10		W0026	067	20		24-27-11	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13		W0026	078	20		24-22-12	ALL
	14		W0026	077	20		24-22-12	ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17		W0026	081	20		24-22-22	ALL
	18		W0026	080	20		24-22-22	ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21		W0026	085	24		24-41-11	ALL
	22		W0026	084	24		24-41-11	ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25		W0026	106	24		24-27-41	ALL
	26		W0026	105	24		24-27-41	ALL
	27	UNUSED						ALL
	28	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D00200
Page 39
May 20/2005



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00274		P034-00/ /		PLUG-P34 (continued)				ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40		W0026	046	20		24-41-11	ALL
	41		W0026	073	20		24-41-11	ALL
D00276		1256/290/L056		PLUG-				050-099
D00276		1262/290/L056		PLUG-				150-199
D00276		1270/290/L056		PLUG-				275-299
	1	UNUSED						ALL
	2		W0816	613	22		33-21-14	050-099
	2		W0816	613	20		33-21-14	150-199, 275-299
	3		W0816	614	22		33-21-14	050-099
	3		W0816	614	20		33-21-14	150-199, 275-299
	4	UNUSED						ALL
	5		W0816	615	20		33-21-14	ALL
	6	UNUSED						ALL
	7		W0816	616	20		33-21-14	ALL
	8		W0816	617	20		33-21-14	ALL
	9		W0816	618	22		33-21-14	050-099
	9		W0816	618	20		33-21-14	150-199, 275-299
	10		W0816	619	22		33-21-14	050-099
	10		W0816	619	20		33-21-14	150-199, 275-299
	11		W0816	620	22		33-21-14	050-099
	11		W0816	620	20		33-21-14	150-199, 275-299
	12		W0816	621	22		33-21-14	050-099
	12		W0816	621	20		33-21-14	150-199, 275-299
D00278A		//		PLUG-PART OF D00278				ALL
	A01		W0018	402G	24		24-41-11	ALL
	A02		W0018	406R	24		24-23-12	ALL
	A03		W0018	002	24		24-22-12	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00200

Page 40

May 20/2005



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00278A		//		PLUG-PART OF D00278 (continued)				ALL
	A04		W0018	021	24		24-41-11	ALL
	A05		W0018	407B	24		24-23-12	ALL
	A06		W0018	405B	24		24-23-12	ALL
	A07		W0018	404B	24		24-23-12	ALL
	A08	UNUSED						ALL
	A09	UNUSED						ALL
	A10	UNUSED						ALL
	A11	UNUSED						ALL
	A12		W0018	201R	24		24-22-12	ALL
	A13		W0018	204R	24		24-41-11	ALL
	A14		W0018	FRA			24-22-22	ALL
	A15	UNUSED						ALL
	B01		W0018	402R	24		24-41-11	ALL
	B02		W0018	406G	24		24-23-12	ALL
	B03		W0018	005	24		24-22-22	ALL
	B04		W0018	003	24		24-22-12	ALL
	B05		W0018	407G	24		24-23-12	ALL
	B06		W0018	405G	24		24-23-12	ALL
	B07		W0018	404G	24		24-23-12	ALL
	B08	UNUSED						ALL
	B09	UNUSED						ALL
	B10		W0018	047	24		24-41-11	ALL
	B11	UNUSED						ALL
	B12		W0018	201B	24		24-22-12	ALL
	B13		W0018	204B	24		24-41-11	ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	C01		W0018	402Y	24		24-41-11	ALL
	C02		W0018	406B	24		24-23-12	ALL
	C03		W0018	004	24		24-22-22	ALL
	C04		W0018	006	24		24-22-22	ALL
	C05		W0018	407R	24		24-23-12	ALL
	C06		W0018	405R	24		24-23-12	ALL
	C07		W0018	404R	24		24-23-12	ALL
	C08	UNUSED						ALL
	C09		W0018	073	22		25-31-21	ALL
	C10		W0018	080	22		24-51-51	ALL
	C11	UNUSED						ALL
	C12		W0018	202R	22		24-22-22	ALL
	C13	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00200

Page 41

May 20/2005



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00278A		//		PLUG-PART OF D00278 (continued)				ALL
	C14	UNUSED						ALL
	C15	UNUSED						ALL
	D01		W0018	402B	24		24-41-11	ALL
	D02		W0018	406Y	24		24-23-12	ALL
	D03		W0018	020	24		24-41-11	ALL
	D04		W0018	063	24		24-28-21	ALL
	D05		W0018	407Y	24		24-23-12	ALL
	D06		W0018	405Y	24		24-23-12	ALL
	D07		W0018	404Y	24		24-23-12	ALL
	D08	UNUSED						ALL
	D09		W0018	068	22		25-31-11	ALL
	D10		W0018	083	24		24-51-31	ALL
	D11	UNUSED						ALL
	D12		W0018	202B	22		24-22-22	ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15	UNUSED						ALL
			W0018	201Z			24-22-12	ALL
			W0018	202Z			24-22-22	ALL
			W0018	204Z			24-41-11	ALL
			W0018	FRA			24-22-22	ALL
D00278B		//		PLUG-PART OF D00278				ALL
	A01		W0018	079	24		24-41-11	ALL
	A02		W0018	018	24		24-41-11	ALL
	A03		W0018	029	24		24-41-12	ALL
	A04	UNUSED						ALL
	A05	UNUSED						ALL
	A06	UNUSED						ALL
	A07		W0018	015	24		24-41-11	ALL
	A08	UNUSED						ALL
	A09	UNUSED						ALL
	A10		W0018	024	24		24-51-71	ALL
	A11		W0018	081	24		24-51-61	ALL
	A12		W0018	052	22		24-41-11	ALL
	A13	UNUSED						ALL
	A14	UNUSED						ALL
	A15	UNUSED						ALL
	B01		W0018	048	22		24-41-11	ALL
	B02		W0018	019	24		24-41-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00200

Page 42

May 20/2005



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00278B		//		PLUG-PART OF D00278 (continued)				ALL
	B03	UNUSED						ALL
	B04	UNUSED						ALL
	B05	UNUSED						ALL
	B06	UNUSED						ALL
	B07		W0018	016	24		24-41-11	ALL
	B08		W0018	050	22		24-41-11	ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11		W0018	082	24		24-51-61	ALL
	B12		W0018	072	22		25-31-21	050-099, 150-199
	B12		W0018	089	22		25-31-21	275-299
	B13	UNUSED						ALL
	B14		W0018	064	22		24-51-13	ALL
	B15	UNUSED						ALL
	C01	UNUSED						ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05	UNUSED						ALL
	C06	UNUSED						ALL
	C07		W0018	017	24		24-41-11	ALL
	C08	UNUSED						ALL
	C09	UNUSED						ALL
	C10	UNUSED						ALL
	C11		W0018	078	24		24-51-51	ALL
	C12		W0018	069	22		25-31-11	ALL
	C13	UNUSED						ALL
	C14		W0018	066	24		24-51-23	ALL
	C15	UNUSED						ALL
	D01	UNUSED						ALL
	D02	UNUSED						ALL
	D03		W0018	035	22		33-16-22	ALL
	D04		W0018	090	24		24-28-21	ALL
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	D08		W0018	051	22		24-41-11	ALL
	D09	UNUSED						ALL
	D10	UNUSED						ALL
	D11		W0018	077	24		24-51-51	ALL

HOOKUP LIST
D280T132

91-21-51
Section D00200
Page 43
May 20/2005



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00278B		//		PLUG-PART OF D00278 (continued)				ALL
	D12	UNUSED						ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15	UNUSED						ALL
	DED		W0018	064Z			24-51-13	ALL
	DED		W0018	066Z			24-51-23	ALL
D00278C		//		PLUG-PART OF D00278				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W0018	049	20		24-41-11	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	= C1	UNUSED						ALL
	= C5	UNUSED						ALL
	DED		W0018	049Z			24-41-11	ALL
D00280		P031-00/ /		PLUG-P31				ALL
	1		W0022	401B	24		24-23-11	ALL
	2		W0022	401G	24		24-23-11	ALL
	3		W0022	401R	24		24-23-11	ALL
	4		W0022	401Y	24		24-23-11	ALL
	5	UNUSED						ALL
D00282		P031-00/ /		PLUG-P31				ALL
	1		W0022	403B	24		24-23-12	ALL
	2		W0022	403G	24		24-23-12	ALL
	3		W0022	403R	24		24-23-12	ALL
	4		W0022	403Y	24		24-23-12	ALL
	5	UNUSED						ALL
D00284		P032-00/ /		PLUG-P32				ALL
	1		W0024	401B	24		24-23-11	ALL
	2		W0024	401R	24		24-23-11	ALL
	3		W0024	401Y	24		24-23-11	ALL
	4		W0024	401G	24		24-23-11	ALL
	5	UNUSED						ALL
D00286		P032-00/ /		PLUG-P32				ALL
	1		W0024	403B	24		24-23-12	ALL

HOOKUP LIST
D280T132



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00286		P032-00/ /		PLUG-P32 (continued)				ALL
	2		W0024	403G	24		24-23-12	ALL
	3		W0024	403R	24		24-23-12	ALL
	4		W0024	403Y	24		24-23-12	ALL
	5	UNUSED						ALL
D00288		P034-00/ /		PLUG-P34				ALL
	1		W0026	403B	24		24-23-12	ALL
	2		W0026	403G	24		24-23-12	ALL
	3		W0026	403R	24		24-23-12	ALL
	4		W0026	403Y	24		24-23-12	ALL
	5	UNUSED						ALL
D00290		P034-00/ /		PLUG-P34				ALL
	1		W0026	404B	24		24-23-12	ALL
	2		W0026	404G	24		24-23-12	ALL
	3		W0026	404R	24		24-23-12	ALL
	4		W0026	404Y	24		24-23-12	ALL
	5	UNUSED						ALL
D00296		1342/290/L056		PLUG-				050-099
D00296		1350/290/L056		PLUG-				150-199, 275-299
	1	UNUSED						ALL
	2		W0816	626	22		33-21-14	050-099
	2		W0816	626	20		33-21-14	150-199, 275-299
	3		W0816	627	22		33-21-14	050-099
	3		W0816	627	20		33-21-14	150-199, 275-299
	4	UNUSED						ALL
	5		W0816	628	20		33-21-14	ALL
	6	UNUSED						ALL
	7		W0816	630	20		33-21-14	ALL
	8		W0816	632	20		33-21-14	ALL
	9		W0816	633	22		33-21-14	050-099
	9		W0816	633	20		33-21-14	150-199, 275-299
	10		W0816	634	22		33-21-14	050-099
	10		W0816	634	20		33-21-14	150-199, 275-299
	11		W0816	635	22		33-21-14	050-099
	11		W0816	635	20		33-21-14	150-199, 275-299
	12		W0816	636	22		33-21-14	050-099
	12		W0816	636	20		33-21-14	150-199, 275-299

HOOKUP LIST
D280T132

91-21-51
Section D00200
Page 45
May 20/2005



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00298		SHELF/E06/01		PLUG-E6-1				ALL
	1		W1038	007	24		24-31-41	ALL
	2		W1038	006	20		24-31-41	ALL
	3		W1038	008	24		24-31-41	ALL
	4		W1038	004	18		24-31-41	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W1038	003	18		24-31-41	ALL
	8		W1038	005	20		24-31-41	ALL
	9	UNUSED						ALL
	10		W1038	002	18		24-31-41	ALL
	11		W1038	009	24		24-31-41	ALL
	12		W1038	010	24		24-31-41	ALL
D00299		0143/228/L028		PLUG-				ALL
	1		W0011	134	22		30-33-11	ALL
	2		W0011	252R	20		34-12-21	ALL
	3		W0011	246R	20		34-12-11	ALL
	4		W0011	246B	20		34-12-11	ALL
	5		W0011	252B	20		34-12-21	ALL
	6		W0011	135	22		30-33-11	ALL
	7		W0011	136	20		34-12-11	ALL
	DED		W0011	246Z			34-12-11	ALL
	DED		W0011	252Z			34-12-21	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00200

Page 46 End

May 20/2005



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00300		SHELF/E06/		PLUG-E6				ALL
	+	Q	W1048	003	*1		24-31-41	ALL
	-	Q	W1048	007	*1		24-31-41	ALL
D00302		SHELF/E06/01		PLUG-E6-1				ALL
	1		W1038	007	24		24-31-41	ALL
	2	UNUSED						ALL
	3		W1038	008	24		24-31-41	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8		W1038	012	24		24-31-41	ALL
	9		W1038	011	20		24-31-41	ALL
	10	UNUSED						ALL
	11		W1038	009	24		24-31-41	ALL
	12		W1038	010	24		24-31-41	ALL
D00303		P008-00/ /		PLUG-ATC CONT PNL L				ALL
	1		W0685	001	20		33-13-18	050-099, 150-155, 162-165, 275-276
	1		W0685	203R	20		33-13-18	156-157, 166-199, 277-299
	2		W0685	002	20		33-13-18	050-099, 150-155, 162-165, 275-276
	2		W0685	203B	20		33-13-18	156-157, 166-199, 277-299
	3		W0685	003	22		34-53-11	ALL
	4		W0685	004	20		34-53-11	ALL
	5	UNUSED						ALL
	6		W0685	017	20		34-53-11	ALL
	7		W0685	012	24		34-53-11	ALL
	8		W0685	008	20		34-53-11	ALL
	9		W0685	009	24		34-53-11	050-099, 150-156, 162-166, 275-276
	9	UNUSED						157, 167-199, 277-299
	10		W0685	010	24		34-53-11	ALL
	11	UNUSED						050-099, 150-156, 162-166, 275-276
	11		W0685	025	24		34-53-11	157, 167-199, 277-299
	12		W0685	022	24		34-53-11	050-099, 150-152, 155-199, 275-299
	12	UNUSED						153-154
	13	UNUSED						ALL
	14	UNUSED						ALL
	15		W0685	016	24		34-53-11	ALL
	16	UNUSED						ALL
	17	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D00300
Page 1
May 20/2005



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00303		P008-00/ /		PLUG-ATC CONT PNL L (continued)				ALL
	18		W0685	018	22		33-16-18	ALL
	19	UNUSED						ALL
	20		W0685	007	24		34-53-11	ALL
	21		W0685	021	22		33-16-18	ALL
	22		W0685	201R	24		34-53-11	ALL
	23		W0685	201B	24		34-53-11	ALL
	24		W0685	024	24		34-53-11	ALL
	REF	JW	W0685	026	24		SPARE	157, 167-199, 277-299
	REF	JW	W0685	027	24		SPARE	157, 167-199, 277-299
	REF		W0685	201	20		34-53-11	275-299
	REF		W0685	201Z			34-53-11	275-299
			W0685	201	20		34-53-11	050-099, 150-199
			W0685	201Z			34-53-11	050-099, 150-199
D00304		P006-00/ /		PLUG-P6				ALL
	1		W0048	401B	24		24-23-11	ALL
	2		W0048	401R	24		24-23-11	ALL
	3		W0048	401Y	24		24-23-11	ALL
	4		W0048	401G	24		24-23-11	ALL
	5	UNUSED						ALL
D00305		P008-00/ /		PLUG-ATC CONT PNL R				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W0687	003	22		34-53-21	ALL
	4		W0687	004	20		34-53-21	ALL
	5		W0687	005	22		34-53-13	ALL
	6		W0687	010	20		34-53-21	ALL
	7		W0687	012	24		34-53-21	ALL
	8		W0687	008	20		34-53-21	ALL
	9		W0687	009	24		34-53-21	050-099, 150-156, 162-166, 275-276
	9	UNUSED						157, 167-199, 277-299
	10	UNUSED						ALL
	11	UNUSED						050-099, 150-156, 162-166, 275-276
	11		W0687	016	24		34-53-21	157, 167-199, 277-299
	12		W0687	013	24		34-53-21	050-099, 150-152, 155-199, 275-299
	12	UNUSED						153-154
	13	UNUSED						ALL
	14	UNUSED						ALL
	15		W0687	015	24		34-53-21	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00300

Page 2

May 20/2005



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00305		P008-00/ /		PLUG-ATC CONT PNL R (continued)				ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						050-099, 155-199, 276-299
	18		W0687	018	22		33-16-18	150-154, 275
	19	UNUSED						ALL
	20		W0687	007	24		34-53-21	ALL
	21	UNUSED						ALL
	22		W0687	201R	24		34-53-21	ALL
	23		W0687	201B	24		34-53-21	ALL
	24		W0687	024	24		34-53-21	ALL
	CAP	Y	W0687	018	22		33-16-18	276-278
	REF		W0687	201	20		34-53-21	ALL
	REF		W0687	201Z			34-53-21	ALL
	REF	JW	W0687	017	24		SPARE	157, 167-199, 277-299
	REF	JW	W0687	019	24		SPARE	157, 167-199, 277-299
D00306		P032-00/ /		PLUG-P32				ALL
	1		W0024	402B	24		24-23-11	ALL
	2		W0024	402R	24		24-23-11	ALL
	3		W0024	402Y	24		24-23-11	ALL
	4		W0024	402G	24		24-23-11	ALL
	5	UNUSED						ALL
D00307A		//		PLUG-PART OF D00307				ALL
	1		W0713	002	22		31-31-11	ALL
	2		W0713	006	20		31-31-11	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W0713	007	20		31-31-11	ALL
	7		W0713	202R	24		31-31-11	ALL
	8		W0713	202B	24		31-31-11	ALL
	9		W0713	203R	24		31-31-11	ALL
	10		W0713	203B	24		31-31-11	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D00300
Page 3
May 20/2005



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00307A		//		PLUG-PART OF D00307 (continued)				ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21		W0713	004	24		31-31-11	ALL
	22		W0713	005	24		31-31-11	ALL
	23		W0713	001	22		31-31-11	ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
	56	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00300

Page 4

May 20/2005



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00307A		//		PLUG-PART OF D00307 (continued)				ALL
	57	UNUSED						ALL
	CAP	Y	W0713	009	22		SPARE	ALL
	CAP	Y	W0713	010	22		SPARE	ALL
	REF		W0713	202	20		31-31-11	050-099
	REF		W0713	202Z			31-31-11	050-099
	REF		W0713	203	20		31-31-11	050-099
	REF		W0713	203Z			31-31-11	050-099
			W0713	202	20		31-31-11	150-199, 275-299
			W0713	202Z			31-31-11	150-199, 275-299
			W0713	203	20		31-31-11	150-199, 275-299
			W0713	203Z			31-31-11	150-199, 275-299
D00310		P006-00/ /		PLUG-P6				ALL
	1		W0046	401B	24		24-23-11	ALL
	2		W0046	401G	24		24-23-11	ALL
	3		W0046	401R	24		24-23-11	ALL
	4		W0046	401Y	24		24-23-11	ALL
	5	UNUSED						ALL
D00312		P031-00/ /		PLUG-P31				ALL
	1		W0022	402B	24		24-23-11	ALL
	2		W0022	402G	24		24-23-11	ALL
	3		W0022	402R	24		24-23-11	ALL
	4		W0022	402Y	24		24-23-11	ALL
	5	UNUSED						ALL
D00314		P034-00/ /		PLUG-P34				ALL
	1		W0026	401B	24		24-23-11	ALL
	2		W0026	401G	24		24-23-11	ALL
	3		W0026	401R	24		24-23-11	ALL
	4		W0026	401Y	24		24-23-11	ALL
	5	UNUSED						ALL
D00316		1851/229/L005		PLUG-				ALL
	1		W0270	301B	18		24-21-41	ALL
	2	UNUSED						ALL
	3		W0270	401Y	18		24-21-41	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W0270	301R	18		24-21-41	ALL

HOOKUP LIST
D280T132

91-21-51
Section D00300
Page 5
May 20/2005



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00316		1851/229/L005		PLUG- (continued)				ALL
	7		W0270	301Y	18		24-21-41	ALL
	8	UNUSED						ALL
	9		W0270	201B	20		24-21-41	ALL
	10		W0270	201R	20		24-21-41	ALL
	11	UNUSED						ALL
	12		W0270	401B	18		24-21-41	ALL
	13		W0270	401G	18		24-21-41	ALL
	14		W0270	401R	18		24-21-41	ALL
	DED		W0270	201Z			24-21-41	ALL
D00318		1382/295/L056		PLUG-				050-099, 162-199
D00318		1422/295/L056		PLUG-				150-157, 275-299
	1	UNUSED						ALL
	2		W0816	641	22		33-21-14	050-099
	2		W0816	641	20		33-21-14	150-199, 275-299
	3		W0816	642	22		33-21-14	050-099
	3		W0816	642	20		33-21-14	150-199, 275-299
	4	UNUSED						ALL
	5		W0816	643	20		33-21-14	ALL
	6	UNUSED						ALL
	7		W0816	644	20		33-21-14	ALL
	8		W0816	645	20		33-21-14	ALL
	9		W0816	646	22		33-21-14	050-099
	9		W0816	646	20		33-21-14	150-199, 275-299
	10		W0816	647	22		33-21-14	050-099
	10		W0816	647	20		33-21-14	150-199, 275-299
	11		W0816	648	22		33-21-14	050-099
	11		W0816	648	20		33-21-14	150-199, 275-299
	12		W0816	649	22		33-21-14	050-099
	12		W0816	649	20		33-21-14	150-199, 275-299
D00320		SHELF/E03/03		PLUG-				ALL
	1		W0256	007	24		24-31-11	ALL
	2		W0256	002	20		24-31-11	ALL
	3		W0256	008	24		24-31-11	ALL
	4		W0256	301B	20		24-31-11	ALL
	5		W0256	022	22		24-31-11	ALL
	6		W0256	022	22		24-31-11	ALL
	7		W0256	301R	20		24-31-11	ALL
	8		W0256	001	24		24-31-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00300

Page 6

May 20/2005



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00320		SHELF/E03/03		PLUG- (continued)				ALL
	9		W0256	011	24		24-34-11	ALL
	10		W0256	301Y	20		24-31-11	ALL
	11		W0256	005	24		24-31-11	ALL
	12		W0256	006	24		24-31-11	ALL
	DED		W0256	301Z			24-31-11	ALL
D00321		0974/160/L001		PLUG-				ALL
	A		W0533	204R	20		31-31-13	ALL
	B		W0533	204B	20		31-31-13	ALL
	C		W0533	201R	20		31-31-13	ALL
	D		W0533	201B	20		31-31-13	ALL
	E		W0533	202R	20		31-31-13	ALL
	F		W0533	202B	20		31-31-13	ALL
	G		W0533	203R	20		31-31-13	ALL
	H		W0533	203B	20		31-31-13	ALL
	J	UNUSED						ALL
	K	UNUSED						ALL
	DED		W0533	201Z			31-31-13	ALL
	DED		W0533	202Z			31-31-13	ALL
	DED		W0533	203Z			31-31-13	ALL
D00323A		//		PLUG-PART OF D00323				ALL
	A01		W0133	214R	24		34-61-12	ALL
	A02	UNUSED						ALL
	A03		W0133	217R	24		34-61-12	ALL
	A04	UNUSED						ALL
	A05		W0133	227R	24		34-61-14	ALL
	A06	UNUSED						ALL
	A07	UNUSED						ALL
	A08	UNUSED						ALL
	A09		W0133	207R	24		34-61-11	ALL
	A10	UNUSED						ALL
	A11		W0133	283R	24		34-61-15	ALL
	A12	UNUSED						ALL
	A13		W0133	202R	24		34-61-11	ALL
	A14	UNUSED						ALL
	A15	UNUSED						ALL
	B01		W0133	214B	24		34-61-12	ALL
	B02	UNUSED						ALL
	B03		W0133	217B	24		34-61-12	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00300

Page 7

May 20/2005



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00323A		//		PLUG-PART OF D00323 (continued)				ALL
	B04	UNUSED						ALL
	B05		W0133	227B	24		34-61-14	ALL
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09		W0133	207B	24		34-61-11	ALL
	B10	UNUSED						ALL
	B11		W0133	283B	24		34-61-15	ALL
	B12	UNUSED						ALL
	B13		W0133	202B	24		34-61-11	ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	C01	UNUSED						ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05	UNUSED						ALL
	C06	UNUSED						ALL
	C07	UNUSED						ALL
	C08	UNUSED						ALL
	C09	UNUSED						ALL
	C10	UNUSED						ALL
	C11	UNUSED						ALL
	C12	UNUSED						ALL
	C13	UNUSED						ALL
	C14	UNUSED						ALL
	C15	UNUSED						ALL
	D01		W0133	215R	24		34-61-12	ALL
	D02	UNUSED						ALL
	D03	UNUSED						ALL
	D04	UNUSED						ALL
	D05		W0133	225R	24		34-61-14	ALL
	D06	UNUSED						ALL
	D07		W0133	213R	24		34-61-12	ALL
	D08	UNUSED						ALL
	D09		W0133	784R	24		34-61-15	ALL
	D10	UNUSED						ALL
	D11		W0133	206R	24		34-61-11	ALL
	D12	UNUSED						ALL
	D13		W0133	775R	24		34-61-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00300

Page 8

May 20/2005



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00323A		//		PLUG-PART OF D00323 (continued)				ALL
	D14	UNUSED						ALL
	D15		W0133	216R	24		34-61-12	ALL
	E01		W0133	215B	24		34-61-12	ALL
	E02	UNUSED						ALL
	E03	UNUSED						ALL
	E04	UNUSED						ALL
	E05		W0133	225B	24		34-61-14	ALL
	E06	UNUSED						ALL
	E07		W0133	213B	24		34-61-12	ALL
	E08	UNUSED						ALL
	E09		W0133	784B	24		34-61-15	ALL
	E10	UNUSED						ALL
	E11		W0133	206B	24		34-61-11	ALL
	E12	UNUSED						ALL
	E13		W0133	775B	24		34-61-11	ALL
	E14	UNUSED						ALL
	E15		W0133	216B	24		34-61-12	ALL
	F01	UNUSED						ALL
	F02	UNUSED						ALL
	F03	UNUSED						ALL
	F04	UNUSED						ALL
	F05	UNUSED						ALL
	F06	UNUSED						ALL
	F07	UNUSED						ALL
	F08	UNUSED						ALL
	F09		W0133	162	24		34-61-14	ALL
	F10	UNUSED						ALL
	F11	UNUSED						ALL
	F12	UNUSED						ALL
	F13	UNUSED						ALL
	F14	UNUSED						ALL
	F15	UNUSED						ALL
	G01		W0133	209R	24		34-61-12	ALL
	G02	UNUSED						ALL
	G03		W0133	222R	24		34-61-14	ALL
	G04	UNUSED						ALL
	G05		W0133	210R	24		34-61-12	ALL
	G06	UNUSED						ALL
	G07		W0133	226R	24		34-61-14	ALL
	G08	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D00300
Page 9
May 20/2005



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00323A		//		PLUG-PART OF D00323 (continued)				ALL
	G09		W0133	234R	24		34-61-15	ALL
	G10	UNUSED						ALL
	G11		W0133	782R	24		34-61-15	ALL
	G12	UNUSED						ALL
	G13	UNUSED						ALL
	G14	UNUSED						ALL
	G15	UNUSED						ALL
	H01		W0133	209B	24		34-61-12	ALL
	H02	UNUSED						ALL
	H03		W0133	222B	24		34-61-14	ALL
	H04	UNUSED						ALL
	H05		W0133	210B	24		34-61-12	ALL
	H06	UNUSED						ALL
	H07		W0133	226B	24		34-61-14	ALL
	H08	UNUSED						ALL
	H09		W0133	234B	24		34-61-15	ALL
	H10	UNUSED						ALL
	H11		W0133	782B	24		34-61-15	ALL
	H12	UNUSED						ALL
	H13	UNUSED						ALL
	H14	UNUSED						ALL
	H15	UNUSED						ALL
	J01	UNUSED						ALL
	J02	UNUSED						ALL
	J03	UNUSED						ALL
	J04	UNUSED						ALL
	J05	UNUSED						ALL
	J06	UNUSED						ALL
	J07	UNUSED						ALL
	J08	UNUSED						ALL
	J09	UNUSED						ALL
	J10	UNUSED						ALL
	J11	UNUSED						ALL
	J12	UNUSED						ALL
	J13	UNUSED						ALL
	J14	UNUSED						ALL
	J15	UNUSED						ALL
	K01		W0133	161	24		34-61-14	ALL
	K02	UNUSED						ALL
	K03	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00300

Page 10

May 20/2005



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00323A		//		PLUG-PART OF D00323 (continued)				ALL
	K04		W0133	191	22		34-61-14	ALL
	K05	UNUSED						ALL
	K06		W0133	797	24		34-61-14	050-099, 150-199, 276-299
	K06	UNUSED						275
	K07	UNUSED						ALL
	K08		W0133	781	24		34-61-15	ALL
	K09		W0133	012	24		34-61-13	ALL
	K10	UNUSED						ALL
	K11		W0133	010	24		34-61-13	ALL
	K12	UNUSED						ALL
	K13		W0133	711	24		34-61-15	ALL
	K14	UNUSED						ALL
	K15	UNUSED						050-099, 150-156, 162-166, 275-276
	K15		W0133	824	24		34-61-27	157, 167-199, 277-299
	DED		W0133	010Z			34-61-13	ALL
	DED		W0133	206Z			34-61-11	ALL
	DED		W0133	207Z			34-61-11	ALL
	DED		W0133	213Z			34-61-12	ALL
	DED		W0133	214Z			34-61-12	ALL
	DED		W0133	215Z			34-61-12	ALL
	DED		W0133	216Z			34-61-12	ALL
	DED		W0133	217Z			34-61-12	ALL
	DED		W0133	234Z			34-61-15	ALL
	DED		W0133	283Z			34-61-15	ALL
	DED		W0133	784Z			34-61-15	ALL
	DED		W0133	775Z			34-61-11	050-099, 155-199, 275-299
	REF		W0133	202	20		34-61-11	ALL
	REF		W0133	202Z			34-61-11	ALL
	REF		W0133	209	20		34-61-12	ALL
	REF		W0133	209Z			34-61-12	ALL
	REF		W0133	210	20		34-61-12	ALL
	REF		W0133	210Z			34-61-12	ALL
	REF		W0133	222	20		34-61-14	ALL
	REF		W0133	222Z			34-61-14	ALL
	REF		W0133	225	20		34-61-14	ALL
	REF		W0133	225Z			34-61-14	ALL
	REF		W0133	226	20		34-61-14	ALL
	REF		W0133	226Z			34-61-14	ALL
	REF		W0133	227	20		34-61-14	ALL
	REF		W0133	227Z			34-61-14	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00300

Page 11

May 20/2005



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00323A		//		PLUG-PART OF D00323 (continued)				ALL
	REF		W0133	782	20		34-61-15	ALL
	REF		W0133	782Z			34-61-15	ALL
	REF		W0133	775	20		34-61-11	150-154
	REF		W0133	775Z			34-61-11	150-154
D00323B		//		PLUG-PART OF D00323				ALL
	A01	UNUSED						ALL
	A02	UNUSED						ALL
	A03		W0133	221R	24		34-61-13	ALL
	A04	UNUSED						ALL
	A05	UNUSED						050-099, 150-156, 162-166
	A05		W0133	258R	24		34-61-14	157, 167-199, 275-299
	A06	UNUSED						ALL
	A07	UNUSED						ALL
	A08	UNUSED						ALL
	A09	UNUSED						050-099, 150-166
	A09		W0133	504R	24		34-61-15	167-199, 275-299
	A10	UNUSED						ALL
	A11		W0133	780	24		34-61-15	ALL
	A12	UNUSED						ALL
	A13		W0133	011	22		34-61-13	ALL
	A14		W0133	038	24		34-61-13	ALL
	A15		W0133	027	22		34-61-13	ALL
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03		W0133	221B	24		34-61-13	ALL
	B04	UNUSED						ALL
	B05	UNUSED						050-099, 150-156, 162-166
	B05		W0133	258B	24		34-61-14	157, 167-199, 275-299
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09	UNUSED						050-099, 150-166
	B09		W0133	504B	24		34-61-15	167-199, 275-299
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13		W0133	163	22		34-61-13	050-099, 150-199
	B13	UNUSED						275-299
	B14		W0133	032	24		34-61-13	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00300

Page 12

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00323B		//		PLUG-PART OF D00323 (continued)				ALL
	B15	UNUSED						050-099, 150-156, 162-166
	B15		W0133	030	22		34-61-13	157, 167-199, 275-299
	C01	UNUSED						ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05	UNUSED						ALL
	C06	UNUSED						ALL
	C07	UNUSED						ALL
	C08	UNUSED						ALL
	C09	UNUSED						ALL
	C10	UNUSED						ALL
	C11	UNUSED						ALL
	C12	UNUSED						ALL
	C13	UNUSED						050-099, 150-199
	C13		W0133	194	22		34-61-13	275-299
	C14		W0133	033	24		34-61-13	ALL
	C15	UNUSED						050-099, 150, 152-165, 167-199, 275-299
	C15		W0133	198	22		34-61-14	151, 166
	D01		W0133	218R	24		34-61-13	ALL
	D02	UNUSED						ALL
	D03		W0133	230R	24		34-61-14	ALL
	D04	UNUSED						ALL
	D05		W0133	220R	24		34-61-13	ALL
	D06	UNUSED						ALL
	D07		W0133	233R	24		34-61-15	ALL
	D08	UNUSED						ALL
	D09		W0133	598R	24		34-61-14	ALL
	D10	UNUSED						ALL
	D11	UNUSED						050-099, 150, 152-165, 167-199, 275-299
	D11		W0133	043	22		34-61-14	151, 166
	D12	UNUSED						ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15	UNUSED						ALL
	E01		W0133	218B	24		34-61-13	ALL
	E02	UNUSED						ALL
	E03		W0133	230B	24		34-61-14	ALL
	E04	UNUSED						ALL
	E05		W0133	220B	24		34-61-13	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00300

Page 13

Aug 15/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00323B		//		PLUG-PART OF D00323 (continued)				ALL
	E06	UNUSED						ALL
	E07		W0133	233B	24		34-61-15	ALL
	E08	UNUSED						ALL
	E09		W0133	598B	24		34-61-14	ALL
	E10	UNUSED						ALL
	E11	UNUSED						ALL
	E12	UNUSED						ALL
	E13		W0133	039	24		34-61-13	ALL
	E14	UNUSED						ALL
	E15	UNUSED						ALL
	F01	UNUSED						ALL
	F02	UNUSED						ALL
	F03	UNUSED						ALL
	F04	UNUSED						ALL
	F05	UNUSED						ALL
	F06	UNUSED						ALL
	F07	UNUSED						ALL
	F08	UNUSED						ALL
	F09	UNUSED						ALL
	F10	UNUSED						ALL
	F11	UNUSED						ALL
	F12	UNUSED						ALL
	F13		W0133	041	24		34-61-13	ALL
	F14		W0133	034	24		34-61-13	ALL
	F15	UNUSED						ALL
	G01		W0133	201R	24		34-61-11	ALL
	G02		W0133	747R	24		34-61-16	ALL
	G03	UNUSED						050-099, 150-199 275-299
	G03		W0133	505R	24		34-61-15	ALL
	G04	UNUSED						ALL
	G05		W0133	593R	24		31-36-11	ALL
	G06	UNUSED						ALL
	G07		W0133	219R	24		34-61-13	ALL
	G08	UNUSED						ALL
	G09	UNUSED						050-099, 150-156, 162-199
	G09	**	W0133	259R	24		34-61-15	157
	G09		W0133	259R	24		34-61-15	275-299
	G10	UNUSED						ALL
	G11	UNUSED						050-099, 151, 166
	G11		W0133	198	22		34-61-14	150, 152-165, 167-199, 275-299

HOOKUP LIST

D280T132

91-21-51

Section D00300

Page 14

Aug 15/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00323B		//		PLUG-PART OF D00323 (continued)				ALL
	G12	UNUSED						ALL
	G13		W0133	035	24		34-61-13	ALL
	G14		W0133	040	24		34-61-13	ALL
	G15		W0133	778	24		34-61-15	ALL
	H01		W0133	201B	24		34-61-11	ALL
	H02		W0133	747B	24		34-61-16	ALL
	H03	UNUSED						050-099, 150-199
	H03		W0133	505B	24		34-61-15	275-299
	H04	UNUSED						ALL
	H05		W0133	593B	24		31-36-11	ALL
	H06	UNUSED						ALL
	H07		W0133	219B	24		34-61-13	ALL
	H08	UNUSED						ALL
	H09	UNUSED						050-099, 150-156, 162-199
	H09	**	W0133	259B	24		34-61-15	157
	H09		W0133	259B	24		34-61-15	275-299
	H10	UNUSED						ALL
	H11	UNUSED						050-099, 151, 166
	H11		W0133	043	22		34-61-14	150, 152-165, 167-199, 275-299
	H12	UNUSED						ALL
	H13	UNUSED						ALL
	H14	UNUSED						ALL
	H15	UNUSED						ALL
	J01	UNUSED						ALL
	J02	UNUSED						ALL
	J03	UNUSED						ALL
	J04	UNUSED						ALL
	J05	UNUSED						ALL
	J06	UNUSED						ALL
	J07	UNUSED						ALL
	J08	UNUSED						ALL
	J09	UNUSED						050-099, 150-156, 162-199
	J09		W0133	790	24		34-61-16	157, 275-299
	J10	UNUSED						ALL
	J11		W0133	199	22		34-61-14	ALL
	J12	UNUSED						ALL
	J13		W0133	037	24		34-61-13	ALL
	J14		W0133	036	24		34-61-13	ALL
	J15		W0133	656	22		34-61-14	050-099, 150-156, 162-199
	J15		W0133	656	22		34-61-13	157

HOOKUP LIST

D280T132

91-21-51

Section D00300

Page 15

Aug 15/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00323B		//		PLUG-PART OF D00323 (continued)				ALL
	J15	UNUSED						275-299
	K01		W0133	016	22		34-61-14	ALL
	K02	UNUSED						ALL
	K03	UNUSED						ALL
	K04	UNUSED						050-099, 150-156, 162-166
	K04		W0133	832	24		34-61-17	157, 167-199, 275-299
	K05		W0133	015	22		34-61-14	ALL
	K06	UNUSED						050-099, 150-156, 162-166
	K06		W0133	831	24		34-61-17	157, 167-199, 275-299
	K07		W0133	734	24		34-61-15	ALL
	K08	UNUSED						ALL
	K09	UNUSED						050-099, 150-156, 162-199
	K09		W0133	789	24		34-61-26	157, 275-299
	K10	UNUSED						ALL
	K11	UNUSED						050-099, 275-299
	K11		W0133	01B	22		34-61-13	150-199
	K12	UNUSED						ALL
	K13	UNUSED						050-099, 150-156, 162-199, 275-276
	K13	**	W0133	821	24		34-61-17	157
	K13		W0133	821	24		34-61-17	277-299
	K14	UNUSED						050-099, 150-156, 162-166
	K14		W0133	874	22		34-61-13	157, 167-199, 275-299
	K15	UNUSED						ALL
	CAP	Y	W0133	789	24		34-61-26	050-099, 155-156, 162-166
	CAP	Y	W0133	790	24		34-61-16	050-099, 155-156, 162-166
	DED		W0133	027Z			34-61-13	ALL
	DED		W0133	032Z			34-61-13	ALL
	DED		W0133	033Z			34-61-13	ALL
	DED		W0133	034Z			34-61-13	ALL
	DED		W0133	035Z			34-61-13	ALL
	DED		W0133	036Z			34-61-13	ALL
	DED		W0133	201Z			34-61-11	ALL
	DED		W0133	218Z			34-61-13	ALL
	DED		W0133	219Z			34-61-13	ALL
	DED		W0133	220Z			34-61-13	ALL
	DED		W0133	221Z			34-61-13	ALL
	DED		W0133	230Z			34-61-14	ALL
	DED		W0133	233Z			34-61-15	ALL
	DED		W0133	593Z			31-36-11	ALL
	DED		W0133	598Z			34-61-14	050-099, 155-199, 275-276

HOOKUP LIST

D280T132

91-21-51

Section D00300

Page 16

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00323B		//		PLUG-PART OF D00323 (continued)				ALL
	DED		W0133	259Z			34-61-15	157, 167-199, 275-299
	REF	**	W0133	504B	24		34-61-15	050-099, 150-166
	REF	**	W0133	504R	24		34-61-15	050-099, 150-166
	REF	**	W0133	505B	24		34-61-15	050-099, 150-199
	REF	**	W0133	505R	24		34-61-15	050-099, 150-199
	REF		W0133	504	20		34-61-15	ALL
	REF		W0133	504Z			34-61-15	ALL
	REF		W0133	505	20		34-61-15	ALL
	REF		W0133	505Z			34-61-15	ALL
	REF		W0133	747	20		34-61-16	ALL
	REF		W0133	747Z			34-61-16	ALL
	REF		W0133	598	20		34-61-14	150-154, 277-299
	REF		W0133	598Z			34-61-14	150-154, 277-299
	REF		W0133	258	20		34-61-14	157, 167-199, 275-299
	REF		W0133	258Z			34-61-14	157, 167-199, 275-299
	REF	**	W0133	259B	24		34-61-15	167-199
	REF	**	W0133	259R	24		34-61-15	167-199
	REF	**	W0133	789	24		34-61-26	167-199
	REF	**	W0133	790	24		34-61-16	167-199
	REF	**	W0133	821	24		34-61-17	167-199
D00323C		//		PLUG-PART OF D00323				ALL
	1		W0133	001	22		34-61-11	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W0133	007	20		34-61-11	ALL
	8		W0133	008	20		34-61-11	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	= C12	UNUSED						ALL
	= C13	UNUSED						ALL
	DED		W0133	001Z			34-61-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00300

Page 17

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00324		P006-00/ /		PLUG-				ALL
	1	DK	W1040	028	18		24-33-11	ALL
	2		W1040	033	20		24-33-11	ALL
	3	UNUSED						ALL
	4		W1040	027	18		24-33-11	ALL
	5		W1040	045	24		24-33-11	ALL
	6		W1040	046	24		24-33-11	ALL
	7		W1040	024	16		24-33-11	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10		W1040	025	16		24-33-11	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D00326		P049-00/ /		RELAY SOCKET				ALL
	A1		W1050	021	24		49-15-11	ALL
	A2		W1050	022	24		49-15-11	ALL
	A3		W1050	020	22		49-15-11	ALL
	B1		W1050	019	16		49-15-11	ALL
	B2		W1050	043	16		49-15-11	ALL
	B3		W1050	018	16		49-15-11	ALL
	X1		W1050	035	22		49-61-11	ALL
	X2		W1050	034	22		49-61-11	ALL
D00327A		//		PLUG-PART OF D00327				ALL
	A01		W0135	080	24		31-31-17	ALL
	A02	UNUSED						ALL
	A03		W0135	185	24		31-31-22	ALL
	A04	UNUSED						ALL
	A05		W0135	748	24		31-31-22	ALL
	A06	UNUSED						ALL
	A07		W0135	797	24		31-31-19	ALL
	A08	UNUSED						ALL
	A09		W0135	223R	24		31-31-11	ALL
	A10	UNUSED						ALL
	A11		W0135	020	24		31-31-11	ALL
	A12	UNUSED						ALL
	A13		W0135	227R	24		31-31-14	ALL
	A14		W0135	230R	24		31-31-12	ALL
	A15		W0135	565R	24		31-31-20	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00300

Page 18

May 20/2005



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00327A		//		PLUG-PART OF D00327 (continued)				ALL
	B01		W0135	081	24		31-31-17	ALL
	B02	UNUSED						ALL
	B03		W0135	092	24		31-31-13	ALL
	B04	UNUSED						ALL
	B05		W0135	182	24		31-31-22	ALL
	B06	UNUSED						ALL
	B07		W0135	819	24		31-31-26	ALL
	B08	UNUSED						ALL
	B09		W0135	223B	24		31-31-11	ALL
	B10	UNUSED						ALL
	B11		W0135	030	24		31-31-11	ALL
	B12	UNUSED						ALL
	B13		W0135	227B	24		31-31-14	ALL
	B14		W0135	230B	24		31-31-12	ALL
	B15		W0135	565B	24		31-31-20	ALL
	C01		W0135	082	24		31-31-17	ALL
	C02	UNUSED						ALL
	C03		W0135	047	24		31-31-18	ALL
	C04	UNUSED						ALL
	C05		W0135	152	24		31-31-18	ALL
	C06	UNUSED						ALL
	C07		W0135	722	24		31-31-21	ALL
	C08	UNUSED						ALL
	C09	UNUSED						ALL
	C10	UNUSED						ALL
	C11	UNUSED						ALL
	C12	UNUSED						ALL
	C13		W0135	523R	24		31-31-20	ALL
	C14		W0135	570R	24		31-31-20	ALL
	C15		W0135	575R	24		31-31-20	ALL
	D01		W0135	811	24		31-31-26	ALL
	D02	UNUSED						ALL
	D03		W0135	138	24		31-31-22	ALL
	D04	UNUSED						ALL
	D05		W0135	149	24		31-31-18	ALL
	D06	UNUSED						ALL
	D07		W0135	818	24		31-31-26	ALL
	D08	UNUSED						ALL
	D09	UNUSED						ALL
	D10	UNUSED						ALL

HOOKUP LIST
D280T132



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00327A		//		PLUG-PART OF D00327 (continued)				ALL
	D11	UNUSED						ALL
	D12	UNUSED						ALL
	D13		W0135	523B	24		31-31-20	ALL
	D14		W0135	570B	24		31-31-20	ALL
	D15		W0135	575B	24		31-31-20	ALL
	E01		W0135	084	24		31-31-13	ALL
	E02	UNUSED						ALL
	E03		W0135	173	24		31-31-19	ALL
	E04	UNUSED						ALL
	E05		W0135	150	24		31-31-18	ALL
	E06	UNUSED						ALL
	E07		W0135	657	22		31-31-18	ALL
	E08	UNUSED						ALL
	E09	UNUSED						ALL
	E10	UNUSED						ALL
	E11	UNUSED						ALL
	E12		W0135	174	24		SPARE	ALL
	E13		W0135	228R	24		31-31-12	ALL
	E14		W0135	225R	24		31-31-14	ALL
	E15	UNUSED						ALL
	F01		W0135	085	24		31-31-13	ALL
	F02	UNUSED						ALL
	F03		W0135	050	24		31-31-12	ALL
	F04	UNUSED						ALL
	F05		W0135	151	24		31-31-18	ALL
	F06	UNUSED						ALL
	F07		W0135	169	24		31-31-15	ALL
	F08	UNUSED						ALL
	F09	UNUSED						ALL
	F10	UNUSED						ALL
	F11	UNUSED						ALL
	F12	UNUSED						ALL
	F13		W0135	228B	24		31-31-12	ALL
	F14		W0135	225B	24		31-31-14	ALL
	F15	UNUSED						ALL
	G01		W0135	108	24		31-31-12	ALL
	G02	UNUSED						ALL
	G03		W0135	751	24		31-31-22	ALL
	G04	UNUSED						ALL
	G05		W0135	823	24		31-31-26	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00300

Page 20

May 20/2005



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00327A		//		PLUG-PART OF D00327 (continued)				ALL
	G06	UNUSED						ALL
	G07		W0135	006	22		31-31-11	ALL
	G08	UNUSED						ALL
	G09		W0135	222R	24		31-31-11	ALL
	G10	UNUSED						ALL
	G11		W0135	220R	24		31-31-11	ALL
	G12	UNUSED						ALL
	G13		W0135	229R	24		31-25-11	ALL
	G14		W0135	577R	24		31-31-20	ALL
	G15		W0135	021	24		31-31-11	ALL
	H01		W0135	090	24		31-31-13	ALL
	H02	UNUSED						ALL
	H03		W0135	097	24		31-31-11	ALL
	H04	UNUSED						ALL
	H05		W0135	055	22		31-31-18	ALL
	H06	UNUSED						ALL
	H07		W0135	816	24		31-31-26	ALL
	H08	UNUSED						ALL
	H09		W0135	222B	24		31-31-11	ALL
	H10	UNUSED						ALL
	H11		W0135	220B	24		31-31-11	ALL
	H12		W0135	176	24		31-31-19	ALL
	H13		W0135	229B	24		31-25-11	ALL
	H14		W0135	577B	24		31-31-20	ALL
	H15	UNUSED						ALL
	J01		W0135	091	24		31-31-13	ALL
	J02	UNUSED						ALL
	J03		W0135	131	24		31-31-13	ALL
	J04	UNUSED						ALL
	J05		W0135	054	22		31-31-18	ALL
	J06	UNUSED						ALL
	J07		W0135	183	24		31-31-22	ALL
	J08	UNUSED						ALL
	J09		W0135	221R	24		31-31-11	ALL
	J10	UNUSED						ALL
	J11		W0135	224R	24		31-31-11	ALL
	J12		W0135	813	24		31-31-26	ALL
	J13		W0135	535R	24		31-31-14	ALL
	J14		W0135	567R	24		31-31-20	ALL
	J15		W0135	029	22		31-31-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00300

Page 21

May 20/2005



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00327A		//		PLUG-PART OF D00327 (continued)				ALL
	K01		W0135	160	24		31-31-14	ALL
	K02	UNUSED						ALL
	K03		W0135	192	22		31-31-14	ALL
	K04	UNUSED						ALL
	K05		W0135	053	22		31-31-18	ALL
	K06	UNUSED						ALL
	K07		W0135	796	22		31-31-18	ALL
	K08	UNUSED						ALL
	K09		W0135	221B	24		31-31-11	ALL
	K10	UNUSED						ALL
	K11		W0135	224B	24		31-31-11	ALL
	K12	UNUSED						ALL
	K13		W0135	535B	24		31-31-14	ALL
	K14		W0135	567B	24		31-31-20	ALL
	K15		W0135	028	22		31-31-11	ALL
	DED		W0135	080Z			31-31-17	ALL
	DED		W0135	081Z			31-31-17	ALL
	DED		W0135	082Z			31-31-17	ALL
	DED		W0135	097Z			31-31-11	ALL
	DED		W0135	192Z			31-31-14	ALL
	DED		W0135	223Z			31-31-11	ALL
	DED		W0135	228Z			31-31-12	ALL
	DED		W0135	230Z			31-31-12	ALL
	DED		W0135	565Z			31-31-20	ALL
	DED		W0135	567Z			31-31-20	ALL
	DED		W0135	570Z			31-31-20	ALL
	DED		W0135	575Z			31-31-20	ALL
	DED		W0135	577Z			31-31-20	ALL
	REF		W0135	220	20		31-31-11	ALL
	REF		W0135	220Z			31-31-11	ALL
	REF		W0135	221	20		31-31-11	ALL
	REF		W0135	221Z			31-31-11	ALL
	REF		W0135	222	20		31-31-11	ALL
	REF		W0135	222Z			31-31-11	ALL
	REF		W0135	224	20		31-31-11	ALL
	REF		W0135	224Z			31-31-11	ALL
	REF		W0135	225	20		31-31-14	ALL
	REF		W0135	225Z			31-31-14	ALL
	REF		W0135	227	20		31-31-14	ALL
	REF		W0135	227Z			31-31-14	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00300

Page 22

May 20/2005



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00327A		//		PLUG-PART OF D00327 (continued)				ALL
	REF		W0135	229	20		31-25-11	ALL
	REF		W0135	229Z			31-25-11	ALL
	REF		W0135	523	20		31-31-20	ALL
	REF		W0135	523Z			31-31-20	ALL
	REF		W0135	535	20		31-31-14	ALL
	REF		W0135	535Z			31-31-14	ALL
D00327B		//		PLUG-PART OF D00327				ALL
	A01		W0135	240R	24		31-31-13	ALL
	A02		W0135	240B	24		31-31-13	ALL
	A03	UNUSED						ALL
	A04		W0135	242R	24		31-31-13	ALL
	A05		W0135	242B	24		31-31-13	ALL
	A06	UNUSED						ALL
	A07		W0135	512R	24		31-31-15	ALL
	A08		W0135	666	22		31-31-15	ALL
	A09		W0135	512B	24		31-31-15	ALL
	A10		W0135	590R	24		31-31-22	ALL
	A11		W0135	590B	24		31-31-22	ALL
	A12		W0135	181	22		31-31-22	ALL
	A13		W0135	586R	24		31-31-22	ALL
	A14		W0135	586B	24		31-31-22	ALL
	A15		W0135	177	22		31-31-22	ALL
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04		W0135	241R	24		31-31-13	ALL
	B05		W0135	241B	24		31-31-13	ALL
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09	UNUSED						ALL
	B10		W0135	237R	24		31-31-13	ALL
	B11		W0135	059	22		31-31-13	ALL
	B12		W0135	237B	24		31-31-13	ALL
	B13	UNUSED						ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	C01		W0135	252R	24		31-31-13	ALL
	C02		W0135	098	22		31-31-13	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00300

Page 23

May 20/2005



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00327B		//		PLUG-PART OF D00327 (continued)				ALL
	C03		W0135	252B	24		31-31-13	ALL
	C04		W0135	302Y	24		31-31-19	ALL
	C05		W0135	302R	24		31-31-19	ALL
	C06		W0135	302B	24		31-31-19	ALL
	C07	UNUSED						ALL
	C08	UNUSED						ALL
	C09	UNUSED						ALL
	C10		W0135	744	24		31-31-21	ALL
	C11		W0135	746	24		31-31-21	ALL
	C12	UNUSED						ALL
	C13		W0135	596R	22		31-31-25	050-099, 150-199 275-299
	C13	UNUSED						275-299
	C14		W0135	596B	22		31-31-25	050-099, 150-199 275-299
	C14	UNUSED						275-299
	C15		W0135	789	22		31-31-25	050-099, 150-199 275-299
	C15	UNUSED						275-299
	D01		W0135	212R	24		31-31-15	ALL
	D02		W0135	212B	24		31-31-15	ALL
	D03	UNUSED						ALL
	D04	UNUSED						ALL
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	D08	UNUSED						ALL
	D09	UNUSED						ALL
	D10	UNUSED						ALL
	D11	UNUSED						ALL
	D12	UNUSED						ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15	UNUSED						ALL
	E01	UNUSED						ALL
	E02	UNUSED						ALL
	E03	UNUSED						ALL
	E04	UNUSED						ALL
	E05	UNUSED						ALL
	E06	UNUSED						ALL
	E07		W0135	592B	22		31-31-25	ALL
	E08		W0135	593R	22		31-31-25	ALL
	E09	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00300

Page 24

May 20/2005



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00327B		//		PLUG-PART OF D00327 (continued)				ALL
	E10		W0135	592R	22		31-31-25	ALL
	E11	UNUSED						ALL
	E12	UNUSED						ALL
	E13	UNUSED						ALL
	E14	UNUSED						ALL
	E15		W0135	593B	22		31-31-25	ALL
	F01	UNUSED						ALL
	F02	UNUSED						ALL
	F03	UNUSED						ALL
	F04	UNUSED						ALL
	F05		W0135	509R	24		31-31-15	ALL
	F06		W0135	664	22		31-31-15	ALL
	F07		W0135	509B	24		31-31-15	ALL
	F08	UNUSED						ALL
	F09	UNUSED						ALL
	F10	UNUSED						ALL
	F11	UNUSED						ALL
	F12	UNUSED						ALL
	F13	UNUSED						ALL
	F14		W0135	243R	24		31-31-13	ALL
	F15		W0135	243B	24		31-31-13	ALL
	G01	UNUSED						ALL
	G02	UNUSED						ALL
	G03	UNUSED						ALL
	G04	UNUSED						ALL
	G05	UNUSED						ALL
	G06	UNUSED						ALL
	G07	UNUSED						ALL
	G08	UNUSED						ALL
	G09	UNUSED						ALL
	G10	UNUSED						ALL
	G11	UNUSED						ALL
	G12	UNUSED						ALL
	G13	UNUSED						ALL
	G14	UNUSED						ALL
	G15	UNUSED						ALL
	H01	UNUSED						ALL
	H02	UNUSED						ALL
	H03	UNUSED						ALL
	H04		W0135	061	24		31-31-13	ALL

HOOKUP LIST
D280T132

91-21-51
Section D00300
Page 25
May 20/2005

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00327B		//		PLUG-PART OF D00327 (continued)				ALL
	H05	UNUSED						ALL
	H06	UNUSED						ALL
	H07	UNUSED						ALL
	H08	UNUSED						ALL
	H09	UNUSED						ALL
	H10	UNUSED						ALL
	H11	UNUSED						ALL
	H12	UNUSED						ALL
	H13	UNUSED						ALL
	H14	UNUSED						ALL
	H15	UNUSED						ALL
	J01	UNUSED						ALL
	J02	UNUSED						ALL
	J03	UNUSED						ALL
	J04	UNUSED						ALL
	J05	UNUSED						ALL
	J06	UNUSED						ALL
	J07	UNUSED						ALL
	J08	UNUSED						ALL
	J09	UNUSED						ALL
	J10	UNUSED						ALL
	J11	UNUSED						ALL
	J12	UNUSED						ALL
	J13	UNUSED						ALL
	J14	UNUSED						ALL
	J15	UNUSED						ALL
	K01	UNUSED						ALL
	K02	UNUSED						ALL
	K03	UNUSED						ALL
	K04	UNUSED						ALL
	K05	UNUSED						ALL
	K06	UNUSED						ALL
	K07	UNUSED						ALL
	K08	UNUSED						ALL
	K09	UNUSED						ALL
	K10	UNUSED						ALL
	K11	UNUSED						ALL
	K12	UNUSED						ALL
	K13	UNUSED						ALL
	K14	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00300

Page 26

May 20/2005



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00327B		//		PLUG-PART OF D00327 (continued)				ALL
	K15	UNUSED						ALL
	DED		W0135	212Z			31-31-15	ALL
	DED		W0135	586Z			31-31-22	ALL
	DED		W0135	590Z			31-31-22	ALL
	REF		W0135	240	20		31-31-13	ALL
	REF		W0135	240Z			31-31-13	ALL
	REF		W0135	241	20		31-31-13	ALL
	REF		W0135	241Z			31-31-13	ALL
	REF		W0135	242	20		31-31-13	ALL
	REF		W0135	242Z			31-31-13	ALL
	REF		W0135	302	20		31-31-19	ALL
	REF		W0135	302Z			31-31-19	ALL
D00327C		//		PLUG-PART OF D00327				ALL
	1		W0135	022	22		31-31-11	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W0135	027	20		31-31-11	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	= C12	UNUSED						ALL
	= C13	UNUSED						ALL
D00327D		//		PLUG-PART OF D00327				ALL
	A01		W0135	660	24		31-31-19	ALL
	A02	UNUSED						ALL
	A03		W0135	163	24		31-31-14	ALL
	A04	UNUSED						ALL
	A05		W0135	136	24		31-31-22	ALL
	A06	UNUSED						ALL
	A07	UNUSED						ALL
	A08	UNUSED						ALL
	A09		W0135	614	24		31-31-16	ALL

HOOKUP LIST
D280T132

91-21-51
Section D00300
Page 27
May 20/2005



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00327D		//		PLUG-PART OF D00327 (continued)				ALL
	A10	UNUSED						ALL
	A11		W0135	605	24		31-31-16	050, 150, 152, 154, 156, 162, 164, 166, 275, 277
	A11	UNUSED						051-099, 151, 153, 155, 157, 163, 165, 167-199, 276, 278-299
	A12	UNUSED						ALL
	A13		W0135	226R	24		31-31-14	ALL
	A14		W0135	514R	24		31-31-14	ALL
	A15		W0135	574R	24		31-31-20	ALL
	B01		W0135	079	24		31-31-17	ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04	UNUSED						ALL
	B05		W0135	045	24		31-31-18	ALL
	B06	UNUSED						ALL
	B07		W0135	187	24		31-31-22	ALL
	B08	UNUSED						ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11	UNUSED						050, 150, 153-154, 157-162, 165-166, 275, 278
	B11		W0135	606	24		31-31-17	051-099
	B11		W0135	606	24		31-31-16	151-152, 155-156, 163-164, 167-199, 276-277, 280-299
	B12	UNUSED						ALL
	B13		W0135	226B	24		31-31-14	ALL
	B14		W0135	514B	24		31-31-14	ALL
	B15		W0135	574B	24		31-31-20	ALL
	C01		W0135	088	24		31-31-13	ALL
	C02	UNUSED						ALL
	C03		W0135	089	24		31-31-13	ALL
	C04	UNUSED						ALL
	C05		W0135	184	24		31-31-22	ALL
	C06	UNUSED						ALL
	C07		W0135	728	24		31-31-21	ALL
	C08	UNUSED						ALL
	C09	UNUSED						ALL
	C10	UNUSED						ALL
	C11	UNUSED						050-099, 150-152, 157, 165-199, 275-277
	C11		W0135	607	24		31-31-16	153-156, 162-164, 278-299

HOOKUP LIST

D280T132

91-21-51

Section D00300

Page 28

May 20/2005



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00327D		//		PLUG-PART OF D00327 (continued)				ALL
	C12	UNUSED						ALL
	C13		W0135	293R	24		31-31-14	ALL
	C14		W0135	275R	24		31-31-13	ALL
	C15		W0135	576R	24		31-31-20	ALL
	D01		W0135	083	24		31-31-17	ALL
	D02	UNUSED						ALL
	D03		W0135	046	24		31-31-18	ALL
	D04	UNUSED						ALL
	D05		W0135	153	24		31-31-18	ALL
	D06	UNUSED						ALL
	D07		W0135	725	24		31-31-21	ALL
	D08	UNUSED						ALL
	D09	UNUSED						ALL
	D10	UNUSED						ALL
	D11	UNUSED						050-099, 150-156, 165-199, 275-278
	D11		W0135	608	24		31-31-16	157-164, 280-299
	D12	UNUSED						ALL
	D13		W0135	293B	24		31-31-14	ALL
	D14		W0135	275B	24		31-31-13	ALL
	D15		W0135	576B	24		31-31-20	ALL
	E01		W0135	652	24		31-31-19	ALL
	E02	UNUSED						ALL
	E03		W0135	747	24		31-31-22	ALL
	E04	UNUSED						ALL
	E05		W0135	154	24		31-31-18	ALL
	E06	UNUSED						ALL
	E07		W0135	820	24		31-31-26	ALL
	E08	UNUSED						ALL
	E09	UNUSED						050-099
	E09		W0135	618	24		31-31-16	150-199, 275-299
	E10	UNUSED						ALL
	E11	UNUSED						050-099, 150-164, 275-299
	E11		W0135	609	24		31-31-16	165-199
	E12	UNUSED						ALL
	E13		W0135	525R	24		31-31-20	ALL
	E14		W0135	572R	24		31-31-20	ALL
	E15	UNUSED						ALL
	F01		W0135	653	24		31-31-19	ALL
	F02	UNUSED						ALL
	F03		W0135	139	24		31-31-22	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00300

Page 29

May 20/2005



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00327D		//		PLUG-PART OF D00327 (continued)				ALL
	F04	UNUSED						ALL
	F05		W0135	155	24		31-31-18	ALL
	F06	UNUSED						ALL
	F07		W0135	658	22		31-31-18	ALL
	F08	UNUSED						ALL
	F09	UNUSED						ALL
	F10	UNUSED						ALL
	F11	UNUSED						ALL
	F12	UNUSED						ALL
	F13		W0135	525B	24		31-31-20	ALL
	F14		W0135	572B	24		31-31-20	ALL
	F15	UNUSED						ALL
	G01		W0135	706	24		31-31-19	ALL
	G02	UNUSED						ALL
	G03		W0135	810	24		31-31-26	ALL
	G04	UNUSED						ALL
	G05		W0135	156	24		31-31-18	ALL
	G06	UNUSED						ALL
	G07		W0135	815	24		31-31-26	ALL
	G08	UNUSED						ALL
	G09		W0135	601	24		31-31-16	050, 275-299
	G09	UNUSED						051-099, 150-199
	G10	UNUSED						ALL
	G11	UNUSED						ALL
	G12	UNUSED						ALL
	G13		W0135	564R	24		31-31-20	ALL
	G14		W0135	573R	24		31-31-20	ALL
	G15		W0135	812	24		31-31-26	ALL
	H01		W0135	655	24		31-31-19	ALL
	H02	UNUSED						ALL
	H03		W0135	749	24		31-31-22	ALL
	H04	UNUSED						ALL
	H05		W0135	058	22		31-31-18	ALL
	H06	UNUSED						ALL
	H07		W0135	005	22		31-31-11	ALL
	H08	UNUSED						ALL
	H09		W0135	602	24		31-31-16	050-099
	H09	UNUSED						150-199, 275-299
	H10	UNUSED						ALL
	H11	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00300

Page 30

May 20/2005



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00327D		//		PLUG-PART OF D00327 (continued)				ALL
	H12	UNUSED						ALL
	H13		W0135	564B	24		31-31-20	ALL
	H14		W0135	573B	24		31-31-20	ALL
	H15		W0135	798	24		31-31-13	ALL
	J01		W0135	086	24		31-31-13	ALL
	J02	UNUSED						ALL
	J03		W0135	643	24		31-31-19	ALL
	J04	UNUSED						ALL
	J05		W0135	057	22		31-31-18	ALL
	J06	UNUSED						ALL
	J07		W0135	822	24		31-31-26	ALL
	J08	UNUSED						ALL
	J09	UNUSED						ALL
	J10	UNUSED						ALL
	J11		W0135	817	24		31-31-26	ALL
	J12	UNUSED						ALL
	J13		W0135	518R	24		34-46-11	ALL
	J14		W0135	563R	24		31-31-20	ALL
	J15		W0135	025	22		31-31-11	ALL
	K01		W0135	087	24		31-31-13	ALL
	K02	UNUSED						ALL
	K03		W0135	191	22		31-31-14	ALL
	K04	UNUSED						ALL
	K05		W0135	056	22		31-31-18	ALL
	K06	UNUSED						ALL
	K07		W0135	795	22		31-31-18	ALL
	K08	UNUSED						ALL
	K09	UNUSED						ALL
	K10	UNUSED						ALL
	K11		W0135	613	24		31-31-16	ALL
	K12	UNUSED						ALL
	K13		W0135	518B	24		34-46-11	ALL
	K14		W0135	563B	24		31-31-20	ALL
	K15		W0135	026	22		31-31-11	ALL
	DED		W0135	005Z			31-31-11	ALL
	DED		W0135	079Z			31-31-17	ALL
	DED		W0135	083Z			31-31-17	ALL
	DED		W0135	226Z			31-31-14	ALL
	DED		W0135	275Z			31-31-13	ALL
	DED		W0135	293Z			31-31-14	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00300

Page 31

May 20/2005



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00327D		//		PLUG-PART OF D00327 (continued)				ALL
	DED		W0135	514Z			31-31-14	ALL
	DED		W0135	525Z			31-31-20	ALL
	DED		W0135	563Z			31-31-20	ALL
	DED		W0135	572Z			31-31-20	ALL
	DED		W0135	573Z			31-31-20	ALL
	DED		W0135	574Z			31-31-20	ALL
	DED		W0135	576Z			31-31-20	ALL
	REF		W0135	518	20		34-46-11	ALL
	REF		W0135	518Z			34-46-11	ALL
	REF		W0135	564	20		31-31-20	ALL
	REF		W0135	564Z			31-31-20	ALL
D00327E		//		PLUG-PART OF D00327				ALL
	A01	UNUSED						ALL
	A02	UNUSED						ALL
	A03	UNUSED						ALL
	A04	UNUSED						ALL
	A05	UNUSED						ALL
	A06	UNUSED						ALL
	A07		W0135	513R	24		31-31-15	ALL
	A08		W0135	668	22		31-31-15	ALL
	A09		W0135	513B	24		31-31-15	ALL
	A10		W0135	588R	24		31-31-22	ALL
	A11		W0135	588B	24		31-31-22	ALL
	A12		W0135	179	22		31-31-22	ALL
	A13		W0135	538R	24		31-31-22	ALL
	A14		W0135	538B	24		31-31-22	ALL
	A15		W0135	774	22		31-31-22	ALL
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04		W0135	519R	24		31-31-19	ALL
	B05		W0135	519B	24		31-31-19	ALL
	B06	UNUSED						ALL
	B07		W0135	238R	24		31-31-13	ALL
	B08		W0135	062	22		31-31-13	ALL
	B09		W0135	238B	24		31-31-13	ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00300

Page 32

May 20/2005



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00327E		//		PLUG-PART OF D00327 (continued)				ALL
	B13	UNUSED						ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	C01	UNUSED						ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05	UNUSED						ALL
	C06	UNUSED						ALL
	C07		W0135	740	24		31-31-21	ALL
	C08		W0135	743	24		31-31-21	ALL
	C09	UNUSED						ALL
	C10		W0135	595R	22		31-31-25	050-099, 150-199
	C10	UNUSED						275-299
	C11		W0135	595B	22		31-31-25	050-099, 150-199
	C11	UNUSED						275-299
	C12		W0135	787	22		31-31-25	050-099, 150-199
	C12	UNUSED						275-299
	C13		W0135	594R	22		31-31-25	050-099, 150-199
	C13	UNUSED						275-299
	C14		W0135	594B	22		31-31-25	050-099, 150-199
	C14	UNUSED						275-299
	C15		W0135	785	22		31-31-25	050-099, 150-199
	C15	UNUSED						275-299
	D01	UNUSED						ALL
	D02	UNUSED						ALL
	D03	UNUSED						ALL
	D04	UNUSED						ALL
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	D08	UNUSED						ALL
	D09	UNUSED						ALL
	D10	UNUSED						ALL
	D11	UNUSED						ALL
	D12	UNUSED						ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15	UNUSED						ALL
	E01	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00300

Page 33

May 20/2005



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00327E		//		PLUG-PART OF D00327 (continued)				ALL
	E02	UNUSED						ALL
	E03	UNUSED						ALL
	E04	UNUSED						ALL
	E05	UNUSED						ALL
	E06	UNUSED						ALL
	E07	UNUSED						ALL
	E08	UNUSED						ALL
	E09	UNUSED						ALL
	E10	UNUSED						ALL
	E11	UNUSED						ALL
	E12	UNUSED						ALL
	E13	UNUSED						ALL
	E14	UNUSED						ALL
	E15	UNUSED						ALL
	F01	UNUSED						ALL
	F02	UNUSED						ALL
	F03	UNUSED						ALL
	F04	UNUSED						ALL
	F05	UNUSED						ALL
	F06	UNUSED						ALL
	F07	UNUSED						ALL
	F08	UNUSED						ALL
	F09	UNUSED						ALL
	F10	UNUSED						ALL
	F11	UNUSED						ALL
	F12	UNUSED						ALL
	F13	UNUSED						ALL
	F14	UNUSED						ALL
	F15	UNUSED						ALL
	G01	UNUSED						ALL
	G02	UNUSED						ALL
	G03	UNUSED						ALL
	G04	UNUSED						ALL
	G05	UNUSED						ALL
	G06	UNUSED						ALL
	G07	UNUSED						ALL
	G08	UNUSED						ALL
	G09	UNUSED						ALL
	G10	UNUSED						ALL
	G11	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00300

Page 34

May 20/2005



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00327E		//		PLUG-PART OF D00327 (continued)				ALL
	G12	UNUSED						ALL
	G13	UNUSED						ALL
	G14	UNUSED						ALL
	G15	UNUSED						ALL
	H01	UNUSED						ALL
	H02	UNUSED						ALL
	H03	UNUSED						ALL
	H04	UNUSED						ALL
	H05		W0135	560R	24		31-35-11	ALL
	H06		W0135	560B	24		31-35-11	ALL
	H07	UNUSED						ALL
	H08	UNUSED						ALL
	H09	UNUSED						ALL
	H10	UNUSED						ALL
	H11	UNUSED						ALL
	H12	UNUSED						ALL
	H13	UNUSED						ALL
	H14	UNUSED						ALL
	H15	UNUSED						ALL
	J01	UNUSED						ALL
	J02	UNUSED						ALL
	J03	UNUSED						ALL
	J04	UNUSED						ALL
	J05	UNUSED						ALL
	J06	UNUSED						ALL
	J07	UNUSED						ALL
	J08	UNUSED						ALL
	J09	UNUSED						ALL
	J10	UNUSED						ALL
	J11	UNUSED						ALL
	J12	UNUSED						ALL
	J13	UNUSED						ALL
	J14	UNUSED						ALL
	J15	UNUSED						ALL
	K01	UNUSED						ALL
	K02	UNUSED						ALL
	K03	UNUSED						ALL
	K04	UNUSED						ALL
	K05	UNUSED						ALL
	K06	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00300

Page 35

May 20/2005



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00327E		//		PLUG-PART OF D00327 (continued)				ALL
	K07	UNUSED						ALL
	K08	UNUSED						ALL
	K09	UNUSED						ALL
	K10	UNUSED						ALL
	K11	UNUSED						ALL
	K12	UNUSED						ALL
	K13	UNUSED						ALL
	K14	UNUSED						ALL
	K15	UNUSED						ALL
	DED		W0135	538Z			31-31-22	ALL
	DED		W0135	588Z			31-31-22	ALL
	REF		W0135	519	20		31-31-19	ALL
	REF		W0135	519Z			31-31-19	ALL
	REF		W0135	560	20		31-35-11	ALL
	REF		W0135	560Z			31-35-11	ALL
D00327F		//		PLUG-PART OF D00327				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	=C12	UNUSED						ALL
	=C13	UNUSED						ALL
D00328		P006-00/ /		RELAY SOCKET-P6				ALL
	A1		W0028	096	18		24-51-31	ALL
	A2		W0028	135	18		24-51-31	ALL
	A3		W0028	095	18		24-51-31	ALL
	B1		W0028	098	22		24-51-31	ALL
	B2		W0028	136	22		24-51-31	ALL
	B3		W0028	097	22		24-51-31	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00300

Page 36

May 20/2005



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00328		P006-00/ /		RELAY SOCKET-P6 (continued)				ALL
	C1		W0028	089	22		24-51-31	ALL
	C2		W0028	136	22		24-51-31	ALL
	C3		W0028	088	22		24-51-31	ALL
	D1		W0028	194	24		24-51-31	ALL
	D2		W0028	193	24		24-51-43	ALL
	D3		W0028	137	24		24-51-31	ALL
	X1		W0028	100	18		24-51-31	ALL
	X2		W0028	099	20		24-51-31	050-099, 155-199, 277-299
	X2		W0028	099	18		24-51-31	150-154, 275-276
	DED		W0028	095Z			24-51-31	ALL
	DED		W0028	097Z			24-51-31	ALL
D00329A		//		PLUG-PART OF D00329				ALL
	A01	UNUSED						ALL
	A02	UNUSED						ALL
	A03	UNUSED						ALL
	A04	UNUSED						ALL
	A05	UNUSED						ALL
	A06	UNUSED						ALL
	A07	UNUSED						ALL
	A08	UNUSED						ALL
	A09	UNUSED						ALL
	A10	UNUSED						ALL
	A11	UNUSED						ALL
	A12	UNUSED						ALL
	A13	UNUSED						ALL
	A14	UNUSED						ALL
	A15	UNUSED						ALL
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04	UNUSED						ALL
	B05	UNUSED						ALL
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00300

Page 37

May 20/2005



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00329A		//		PLUG-PART OF D00329 (continued)				ALL
	B13	UNUSED						ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	C01	UNUSED						ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05	UNUSED						ALL
	C06	UNUSED						ALL
	C07	UNUSED						ALL
	C08	UNUSED						ALL
	C09	UNUSED						ALL
	C10	UNUSED						ALL
	C11	UNUSED						ALL
	C12	UNUSED						ALL
	C13	UNUSED						ALL
	C14	UNUSED						ALL
	C15	UNUSED						ALL
	D01	UNUSED						ALL
	D02	UNUSED						ALL
	D03	UNUSED						ALL
	D04	UNUSED						ALL
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	D08	UNUSED						ALL
	D09	UNUSED						ALL
	D10	UNUSED						ALL
	D11	UNUSED						ALL
	D12	UNUSED						ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15	UNUSED						ALL
D00329B		//		PLUG-PART OF D00329				ALL
	A01	UNUSED						ALL
	A02	UNUSED	W0133	175	22		34-32-11	ALL
	A03	UNUSED						ALL
	A04	UNUSED	W0133	261R	24		34-51-11	ALL
	A05	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00300

Page 38

May 20/2005



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00329B		//		PLUG-PART OF D00329 (continued)				ALL
	A06	UNUSED						ALL
	A07	UNUSED						ALL
	A08	UNUSED						ALL
	A09	UNUSED						ALL
	A10	UNUSED						ALL
	A11		W0133	054	22		34-51-11	ALL
	A12	UNUSED						ALL
	A13	UNUSED						ALL
	A14	UNUSED						ALL
	A15		W0133	055	24		34-51-11	ALL
	B01	UNUSED						ALL
	B02		W0133	176	22		34-32-11	ALL
	B03	UNUSED						ALL
	B04		W0133	261B	24		34-51-11	ALL
	B05	UNUSED						ALL
	B06	UNUSED						ALL
	B07		W0133	265R	24		23-51-12	ALL
	B08	UNUSED						ALL
	B09		W0133	264R	24		34-51-11	ALL
	B10	UNUSED						ALL
	B11		W0133	262R	24		34-51-11	ALL
	B12	UNUSED						ALL
	B13		W0133	267R	24		34-22-19	050-099, 150-199, 275-276
	B13		W0133	280R	24		34-51-11	277-299
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	C01	UNUSED						ALL
	C02		W0133	177	22		34-32-11	ALL
	C03	UNUSED						ALL
	C04		W0133	266R	24		23-51-12	ALL
	C05	UNUSED						ALL
	C06	UNUSED						ALL
	C07		W0133	265B	24		23-51-12	ALL
	C08	UNUSED						ALL
	C09		W0133	264B	24		34-51-11	ALL
	C10	UNUSED						ALL
	C11		W0133	262B	24		34-51-11	ALL
	C12	UNUSED						ALL
	C13		W0133	267B	24		34-22-19	050-099, 150-199, 275-276
	C13		W0133	280B	24		34-51-11	277-299

HOOKUP LIST

D280T132

91-21-51

Section D00300

Page 39

May 20/2005



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00329B		//		PLUG-PART OF D00329 (continued)				ALL
	C14	UNUSED						ALL
	C15		W0133	263R	22		34-51-11	ALL
	D01	UNUSED						ALL
	D02	UNUSED						ALL
	D03	UNUSED						ALL
	D04		W0133	266B	24		23-51-12	ALL
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	D08	UNUSED						ALL
	D09	UNUSED						ALL
	D10	UNUSED						ALL
	D11	UNUSED						ALL
	D12	UNUSED						ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15		W0133	263B	22		34-51-11	ALL
	DED		W0133	267Z			34-22-19	050-099, 150-199, 275-276
	DED		W0133	261Z			34-51-11	ALL
	DED		W0133	264Z			34-51-11	ALL
	DED		W0133	280Z			34-51-11	277-299
	REF		W0133	262	20		34-51-11	ALL
	REF		W0133	262Z			34-51-11	ALL
D00329C		//		PLUG-PART OF D00329				ALL
	1		W1085	01CX			34-51-11	ALL
	2		W0133	051	20		34-51-11	ALL
	3		W0133	052	20		34-51-11	ALL
	4		W0133	053	20		34-51-11	ALL
	5		W1083	01CX			34-32-11	ALL
	= C1		W1085	01CO			34-51-11	ALL
	= C5		W1083	01CO			34-32-11	ALL
	DED		W0133	051Z			34-51-11	ALL
D00331A		//		PLUG-PART OF D00331				ALL
	71		W1063	01CX			34-53-13	ALL
	A01	UNUSED						ALL
	A02	UNUSED						ALL
	A03	UNUSED						ALL
	A04	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00300

Page 40

May 20/2005



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00331A		//		PLUG-PART OF D00331 (continued)				ALL
	A05	UNUSED						ALL
	A06	UNUSED						050-099, 150-199
	A06		W0133	902R	24		34-53-11	275-299
	A07	UNUSED						050-099, 150-199
	A07		W0133	905R	24		34-53-11	275-299
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03		W0133	809	24		34-53-11	050-099, 150-152, 155-199, 275-299
	B03	UNUSED						153-154
	B04	UNUSED						ALL
	B05	UNUSED						ALL
	B06	UNUSED						050-099, 150-199
	B06		W0133	902B	24		34-53-11	275-299
	B07	UNUSED						050-099, 150-199
	B07		W0133	905B	24		34-53-11	275-299
	C01	UNUSED						ALL
	C02	UNUSED						050-099, 150-199
	C02		W0133	904R	24		34-53-11	275-299
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05		W0133	661	24		34-53-12	ALL
	C06	UNUSED						ALL
	C07	UNUSED						ALL
	D01	UNUSED						ALL
	D02	UNUSED						050-099, 150-199
	D02		W0133	904B	24		34-53-11	275-299
	D03	UNUSED						ALL
	D04	UNUSED						ALL
	D05		W0133	694	24		34-53-12	ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	E01	UNUSED						ALL
	E02	UNUSED						ALL
	E03	UNUSED						ALL
	E04	UNUSED						ALL
	E05	UNUSED						050-099, 155-156, 162-166
	E05		W0133	748R	24		34-45-12	150-154, 157, 167-199, 275-299
	E06	UNUSED						ALL
	E07		W0133	275R	24		34-53-11	ALL
	F01	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D00300
Page 41
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00331A		//		PLUG-PART OF D00331 (continued)				ALL
	F02	UNUSED						ALL
	F03	UNUSED						ALL
	F04	UNUSED						ALL
	F05	UNUSED						050-099, 155-156, 162-166
	F05		W0133	748B	24		34-45-12	150-154, 157, 167-199, 275-299
	F06	UNUSED						ALL
	F07		W0133	275B	24		34-53-11	ALL
	G01	UNUSED						ALL
	G02	UNUSED						ALL
	G03	UNUSED						ALL
	G04	UNUSED						ALL
	G05	UNUSED						050-099, 155-156, 162-166
	G05		W0133	749R	24		34-45-12	150-154, 157, 167-199, 275-299
	G06	UNUSED						ALL
	G07		W0133	079	24		34-53-11	ALL
	H01	UNUSED						ALL
	H02	UNUSED						ALL
	H03	UNUSED						ALL
	H04	UNUSED						ALL
	H05	UNUSED						050-099, 155-156, 162-166
	H05		W0133	749B	24		34-45-12	150-154, 157, 167-199, 275-299
	H06	UNUSED						ALL
	H07		W0133	278R	24		34-53-11	ALL
	J01	UNUSED						ALL
	J02	UNUSED						ALL
	J03	UNUSED						ALL
	J04	UNUSED						ALL
	J05		W0133	081	24		34-53-11	ALL
	J06	UNUSED						ALL
	J07		W0133	278B	24		34-53-11	ALL
	K01	UNUSED						ALL
	K02	UNUSED						ALL
	K03	UNUSED						ALL
	K04	UNUSED						ALL
	K05	UNUSED						050-099, 150-156, 162-166, 275-276
	K05		W0133	842	24		34-53-11	157, 167-199, 277-299
	K06	UNUSED						ALL
	K07	UNUSED						ALL
	= C71		W1063	01CO			34-53-13	ALL
	DED		W0133	278Z			34-53-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00300

Page 42

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00331A		//		PLUG-PART OF D00331 (continued)				ALL
	REF		W0133	275	20		34-53-11	ALL
	REF		W0133	275Z			34-53-11	ALL
	REF		W0133	748	20		34-45-12	150-154, 157, 167-199, 275-299
	REF		W0133	748Z			34-45-12	150-154, 157, 167-199, 275-299
	REF		W0133	749	20		34-45-12	150-154, 157, 167-199, 275-299
	REF		W0133	749Z			34-45-12	150-154, 157, 167-199, 275-299
			W0133	900	20		34-53-11	275-299
			W0133	902	20		34-53-11	275-299
			W0133	902Z			34-53-11	275-299
			W0133	903	20		34-53-11	275-299
			W0133	904Z			34-53-11	275-299
			W0133	905Z			34-53-11	275-299
D00331B		//		PLUG-PART OF D00331				ALL
	71		W1065	01CX			34-53-13	ALL
	A01		W0133	601	24		34-53-12	ALL
	A02		W0133	611	24		34-53-12	ALL
	A03		W0133	621	24		34-53-12	ALL
	A04	UNUSED						ALL
	A05		W0133	279R	24		34-53-11	ALL
	A06	UNUSED						ALL
	A07	UNUSED						ALL
	B01		W0133	602	24		34-53-12	ALL
	B02		W0133	612	24		34-53-12	ALL
	B03		W0133	622	24		34-53-12	ALL
	B04	UNUSED						ALL
	B05		W0133	279B	24		34-53-11	ALL
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	C01		W0133	603	24		34-53-12	ALL
	C02		W0133	613	24		34-53-12	ALL
	C03		W0133	623	24		34-53-12	ALL
	C04	UNUSED						ALL
	C05	UNUSED						ALL
	C06	UNUSED						ALL
	C07	UNUSED						ALL
	D01		W0133	604	24		34-53-12	ALL
	D02		W0133	614	24		34-53-12	ALL
	D03		W0133	624	24		34-53-12	ALL
	D04	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00300

Page 43

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00331B		//		PLUG-PART OF D00331 (continued)				ALL
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	E01		W0133	605	24		34-53-12	ALL
	E02		W0133	615	24		34-53-12	ALL
	E03		W0133	625	24		34-53-12	ALL
	E04	UNUSED						ALL
	E05		W0133	748R	24		34-45-12	050-099, 155-156, 162-166
	E05	UNUSED						150-154, 157, 167-199, 275-299
	E06		W0133	692	24		34-53-11	ALL
	E07	UNUSED						ALL
	F01		W0133	606	24		34-53-12	ALL
	F02		W0133	616	24		34-53-12	ALL
	F03	UNUSED						ALL
	F04	UNUSED						ALL
	F05		W0133	748B	24		34-45-12	050-099, 155-156, 162-166
	F05	UNUSED						150-154, 157, 167-199, 275-299
	F06	UNUSED						ALL
	F07	UNUSED						ALL
	G01		W0133	607	24		34-53-12	ALL
	G02		W0133	617	24		34-53-12	ALL
	G03	UNUSED						ALL
	G04	UNUSED						ALL
	G05		W0133	749R	24		34-45-12	050-099, 155-156, 162-166
	G05	UNUSED						150-154, 157, 167-199
	G05	DL	W0133	901	20		34-53-11	275-299
	G06	UNUSED						ALL
	G07	UNUSED						ALL
	H01		W0133	608	24		34-53-12	ALL
	H02		W0133	618	24		34-53-12	ALL
	H03		W0133	068	24		34-53-11	050-099, 150-156, 162-166, 275-276
	H03	UNUSED						157, 167-199, 277-299
	H04	UNUSED						ALL
	H05		W0133	749B	24		34-45-12	050-099, 155-156, 162-166
	H05	UNUSED						150-154, 157, 167-199, 275-299
	H06	UNUSED						ALL
	H07	UNUSED						ALL
	J01		W0133	609	24		34-53-12	ALL
	J02		W0133	619	24		34-53-12	ALL
	J03	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00300

Page 44

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00331B		//		PLUG-PART OF D00331 (continued)				ALL
	J04	UNUSED						ALL
	J05		W0133	693	24		34-53-12	ALL
	J06	UNUSED						ALL
	J07	UNUSED						ALL
	K01		W0133	610	24		34-53-12	ALL
	K02		W0133	620	24		34-53-12	ALL
	K03		W0133	070	24		34-53-11	ALL
	K04	UNUSED						ALL
	K05	UNUSED						ALL
	K06	UNUSED						ALL
	K07	UNUSED						ALL
	= C71		W1065	01CO			34-53-13	ALL
	CAP	Y	W0133	276B	24		SPARE	150-154
	CAP	Y	W0133	276R	24		SPARE	150-154
	CAP	Y	W0133	277B	24		SPARE	150-154
	CAP	Y	W0133	277R	24		SPARE	150-154
	REF		W0133	279	20		34-53-11	ALL
	REF		W0133	279Z			34-53-11	ALL
	REF		W0133	748	20		34-45-12	050-099, 155-156, 162-166
	REF		W0133	748Z			34-45-12	050-099, 155-156, 162-166
	REF		W0133	749	20		34-45-12	050-099, 155-156, 162-166
	REF		W0133	749Z			34-45-12	050-099, 155-156, 162-166
	REF		W0133	276	20		SPARE	150-154
	REF		W0133	276Z			SPARE	150-154
	REF		W0133	277	20		SPARE	150-154
	REF		W0133	277Z			SPARE	150-154
D00331C		//		PLUG-PART OF D00331				ALL
	1		W0133	078	22		34-53-11	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W0133	072	20		34-53-11	ALL
	8	UNUSED						050-099, 150-156, 162-166, 275-276
	8		W0133	844	20		34-53-11	157, 167-199, 277-299
	9	UNUSED						ALL
	10	UNUSED						ALL
	11		W0133	073	20		34-53-11	ALL

HOOKUP LIST
D280T132

91-21-51
Section D00300
Page 45
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00331C		//		PLUG-PART OF D00331 (continued)				ALL
	12		W1089	01CX			34-53-11	ALL
	13	UNUSED						ALL
	=C12		W1089	01CO			34-53-11	ALL
	=C13	UNUSED						ALL
D00333A		//		PLUG-PART OF D00333				ALL
	A01	UNUSED						ALL
	A02	UNUSED						ALL
	A03	UNUSED						ALL
	A04	UNUSED						ALL
	A05	UNUSED						ALL
	A06	UNUSED						ALL
	A07	UNUSED						ALL
	A08	UNUSED						ALL
	A09	UNUSED						ALL
	A10	UNUSED						ALL
	A11	UNUSED						ALL
	A12	UNUSED						ALL
	A13	UNUSED						ALL
	A14	UNUSED						ALL
	A15	UNUSED						ALL
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04	UNUSED						ALL
	B05	UNUSED						ALL
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13	UNUSED						ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	C01	UNUSED						ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00300

Page 46

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00333A		//		PLUG-PART OF D00333 (continued)				ALL
	C05	UNUSED						ALL
	C06	UNUSED						ALL
	C07	UNUSED						ALL
	C08	UNUSED						ALL
	C09	UNUSED						ALL
	C10	UNUSED						ALL
	C11	UNUSED						ALL
	C12	UNUSED						ALL
	C13	UNUSED						ALL
	C14	UNUSED						ALL
	C15	UNUSED						ALL
	D01	UNUSED						ALL
	D02	UNUSED						ALL
	D03	UNUSED						ALL
	D04	UNUSED						ALL
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	D08	UNUSED						ALL
	D09	UNUSED						ALL
	D10	UNUSED						ALL
	D11	UNUSED						ALL
	D12	UNUSED						ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15	UNUSED						ALL
	E01	UNUSED						ALL
	E02	UNUSED						ALL
	E03	UNUSED						ALL
	E04	UNUSED						ALL
	E05	UNUSED						ALL
	E06	UNUSED						ALL
	E07	UNUSED						ALL
	E08	UNUSED						ALL
	E09	UNUSED						ALL
	E10	UNUSED						ALL
	E11	UNUSED						ALL
	E12	UNUSED						ALL
	E13	UNUSED						ALL
	E14	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00300

Page 47

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00333A		//		PLUG-PART OF D00333 (continued)				ALL
	E15	UNUSED						ALL
	F01	UNUSED						ALL
	F02	UNUSED						ALL
	F03	UNUSED						ALL
	F04	UNUSED						ALL
	F05	UNUSED						ALL
	F06	UNUSED						ALL
	F07	UNUSED						ALL
	F08	UNUSED						ALL
	F09	UNUSED						ALL
	F10	UNUSED						ALL
	F11	UNUSED						ALL
	F12	UNUSED						ALL
	F13	UNUSED						ALL
	F14	UNUSED						ALL
	F15	UNUSED						ALL
	G01	UNUSED						ALL
	G02	UNUSED						ALL
	G03	UNUSED						ALL
	G04	UNUSED						ALL
	G05	UNUSED						ALL
	G06	UNUSED						ALL
	G07	UNUSED						ALL
	G08	UNUSED						ALL
	G09	UNUSED						ALL
	G10	UNUSED						ALL
	G11	UNUSED						ALL
	G12	UNUSED						ALL
	G13	UNUSED						ALL
	G14	UNUSED						ALL
	G15	UNUSED						ALL
	H01	UNUSED						ALL
	H02	UNUSED						ALL
	H03	UNUSED						ALL
	H04	UNUSED						ALL
	H05	UNUSED						ALL
	H06	UNUSED						ALL
	H07	UNUSED						ALL
	H08	UNUSED						ALL
	H09	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00300

Page 48

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00333A		//		PLUG-PART OF D00333 (continued)				ALL
	H10	UNUSED						ALL
	H11	UNUSED						ALL
	H12	UNUSED						ALL
	H13	UNUSED						ALL
	H14	UNUSED						ALL
	H15	UNUSED						ALL
	J01	UNUSED						ALL
	J02	UNUSED						ALL
	J03	UNUSED						ALL
	J04	UNUSED						ALL
	J05	UNUSED						ALL
	J06	UNUSED						ALL
	J07	UNUSED						ALL
	J08	UNUSED						ALL
	J09	UNUSED						ALL
	J10	UNUSED						ALL
	J11	UNUSED						ALL
	J12	UNUSED						ALL
	J13	UNUSED						ALL
	J14	UNUSED						ALL
	J15	UNUSED						ALL
	K01	UNUSED						ALL
	K02	UNUSED						ALL
	K03	UNUSED						ALL
	K04	UNUSED						ALL
	K05	UNUSED						ALL
	K06	UNUSED						ALL
	K07	UNUSED						ALL
	K08	UNUSED						ALL
	K09	UNUSED						ALL
	K10	UNUSED						ALL
	K11	UNUSED						ALL
	K12	UNUSED						ALL
	K13	UNUSED						ALL
	K14	UNUSED						ALL
	K15	UNUSED						ALL
D00333B		//		PLUG-PART OF D00333				ALL
	71		W1067	01CX			34-55-11	ALL
	A01		W0133	293R	24		23-51-12	ALL

HOOKUP LIST
D280T132

91-21-51
Section D00300
Page 49
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00333B		//		PLUG-PART OF D00333 (continued)				ALL
	A02	UNUSED						ALL
	A03		W0133	291R	24		34-55-11	ALL
	A04	UNUSED						ALL
	A05	UNUSED						ALL
	A06	UNUSED						ALL
	A07	UNUSED						ALL
	B01		W0133	293B	24		23-51-12	ALL
	B02	UNUSED						ALL
	B03		W0133	291B	24		34-55-11	ALL
	B04	UNUSED						ALL
	B05		W0133	088	24		34-55-11	ALL
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	C01	UNUSED						ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05	UNUSED						ALL
	C06	UNUSED						ALL
	C07	UNUSED						ALL
	D01	UNUSED						ALL
	D02	UNUSED						ALL
	D03		W0133	290R	24		34-55-11	ALL
	D04	UNUSED						ALL
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	E01	UNUSED						ALL
	E02	UNUSED						ALL
	E03		W0133	290B	24		34-55-11	ALL
	E04	UNUSED						ALL
	E05	UNUSED						ALL
	E06	UNUSED						ALL
	E07	UNUSED						ALL
	F01	UNUSED						ALL
	F02	UNUSED						ALL
	F03	UNUSED						ALL
	F04	UNUSED						ALL
	F05	UNUSED						ALL
	F06	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00300

Page 50

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00333B		//		PLUG-PART OF D00333 (continued)				ALL
	F07	UNUSED						ALL
	G01		W0133	292R	24		34-61-12	ALL
	G02	UNUSED						ALL
	G03		W0133	281R	24		34-55-11	ALL
	G04	UNUSED						ALL
	G05	UNUSED						ALL
	G06	UNUSED						ALL
	G07	UNUSED						ALL
	H01		W0133	292B	24		34-61-12	ALL
	H02	UNUSED						ALL
	H03		W0133	281B	24		34-55-11	ALL
	H04	UNUSED						ALL
	H05	UNUSED						ALL
	H06	UNUSED						ALL
	H07	UNUSED						ALL
	J01	UNUSED						ALL
	J02	UNUSED						ALL
	J03	UNUSED						ALL
	J04	UNUSED						ALL
	J05	UNUSED						ALL
	J06	UNUSED						ALL
	J07	UNUSED						ALL
	K01	UNUSED						ALL
	K02	UNUSED						ALL
	K03	UNUSED						ALL
	K04	UNUSED						ALL
	K05		W0133	089	24		34-55-11	ALL
	K06	UNUSED						ALL
	K07	UNUSED						ALL
	=C71		W1067	01CO			34-55-11	ALL
	DED		W0133	281Z			34-55-11	ALL
	DED		W0133	291Z			34-55-11	ALL
	DED		W0133	292Z			34-61-12	ALL
	REF		W0133	290	20		34-55-11	ALL
	REF		W0133	290Z			34-55-11	ALL
D00333C		//		PLUG-PART OF D00333				ALL
	1		W0133	085	22		34-55-11	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D00300
Page 51
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00333C		//		PLUG-PART OF D00333 (continued)				ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W0133	086	20		34-55-11	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11		W0133	087	20		34-55-11	ALL
	12		W1091	01CX			34-55-11	ALL
	13	UNUSED						ALL
	= C12		W1091	01CO			34-55-11	ALL
	= C13	UNUSED						ALL
	DED		W0133	085Z			34-55-11	ALL
D00340		P036-00/ /		RELAY SOCKET-P36				ALL
	A1		W0176	793	18		28-41-12	ALL
	A2		W0176	826	18		28-41-12	ALL
	A3		W0176	759	18		28-41-12	ALL
	B1		W0176	795	18		28-41-12	ALL
	B2		W0176	827	18		28-41-12	ALL
	B3		W0176	794	18		28-41-12	ALL
	C1		W0176	245R	24		28-41-11	ALL
	C2		W0176	245B	24		28-41-11	ALL
	C3	UNUSED						ALL
	D1	UNUSED						ALL
	D2	UNUSED						ALL
	D3	UNUSED						ALL
	X1		W0176	825	22		28-41-12	ALL
	X2		W0176	824	20		28-41-12	ALL
	DED		W0176	759Z			28-41-12	ALL
	DED		W0176	794Z			28-41-12	ALL
	DED		W0176	795Z			28-41-12	ALL
	DED		W0176	826Z			28-41-12	ALL
	DED		W0176	827Z			28-41-12	ALL
D00341		1720/280/L007		PLUG				150-154
	1	UNUSED						150-154
	2	UNUSED						150-154
	3	UNUSED						150-154
	4	UNUSED						150-154

HOOKUP LIST

D280T132

91-21-51

Section D00300

Page 52

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00341		1720/280/L007		PLUG (continued)				150-154
	5	UNUSED						150-154
	6	DK	W0587	007Y	18		27-41-11	150-154
	7	DK	W0587	003Y	18		27-41-11	150-154
	8		W0587	004Y	20		27-41-11	150-154
	9	UNUSED						150-154
	10	UNUSED						150-154
	11	UNUSED						150-154
	12	DK	W0587	006Y	18		27-41-11	150-154
	13		W0587	005Y	20		27-41-11	150-154
	14	UNUSED						150-154
	15	UNUSED						150-154
D00342		P033-00/ /		RELAY SOCKET-P33				ALL
	A1	UNUSED						ALL
	A2		W0142	684	20		24-31-11	ALL
	A3		W0142	759	20		24-31-11	ALL
	B1	UNUSED						ALL
	B2		W0142	685	20		24-31-11	ALL
	B3		W0142	760	20		24-31-11	ALL
	C1	UNUSED						ALL
	C2		W0142	686	20		24-31-11	ALL
	C3		W0142	761	20		24-31-11	ALL
	D1	UNUSED						ALL
	D2	UNUSED						ALL
	D3	UNUSED						ALL
	X1		W0142	719	24		24-31-11	ALL
	X2		W0142	720	24		24-31-11	ALL
D00344		P006-00/ /		RELAY SOCKET-P6				ALL
	A1	UNUSED						ALL
	A2		W0028	130	18		24-33-11	ALL
	A3		W0028	007	18		24-33-11	ALL
	B1	UNUSED						ALL
	B2		W0028	161	24		24-34-11	ALL
	B3		W0028	145	24		24-34-11	ALL
	C1		W0028	105	18		24-51-31	ALL
	C2		W0028	079	18		24-51-31	ALL
	C3		W0028	111	18		34-21-21	ALL
	D1		W0028	192	24		24-51-42	ALL
	D2		W0028	071	24		24-32-11	ALL

HOOKUP LIST
D280T132



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00344		P006-00/ /		RELAY SOCKET-P6 (continued)				ALL
	D3		W0028	072	24		24-32-11	ALL
	X1		W0028	109	24		24-51-31	ALL
	X2		W0028	110	20		24-51-31	ALL
D00345		1725/280/R007		PLUG				150-154
	1	UNUSED						150-154
	2	UNUSED						150-154
	3	UNUSED						150-154
	4	UNUSED						150-154
	5	UNUSED						150-154
	6	DK	W0589	007Y	18		27-41-21	150-154
	7	DK	W0589	003Y	18		27-41-21	150-154
	8		W0589	004Y	20		27-41-21	150-154
	9	UNUSED						150-154
	10	UNUSED						150-154
	11	UNUSED						150-154
	12	DK	W0589	006Y	18		27-41-21	150-154
	13		W0589	005Y	20		27-41-21	150-154
	14	UNUSED						150-154
	15	UNUSED						150-154
D00348		P006-00/ /		RELAY SOCKET-P6				ALL
	A1	UNUSED						ALL
	A2		W0028	196	16		34-21-21	ALL
	A3		W0028	198	16		34-21-21	ALL
	B1	UNUSED						ALL
	B2	UNUSED						ALL
	B3	UNUSED						ALL
	C1	UNUSED						ALL
	C2	UNUSED						ALL
	C3	UNUSED						ALL
	D1	UNUSED						ALL
	D2	UNUSED						ALL
	D3	UNUSED						ALL
	X1		W0028	111	18		34-21-21	ALL
	X2		W0028	112	18		34-21-21	ALL
D00351A		//		PLUG-PART OF D00351				ALL
	A01	UNUSED						ALL
	A02	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00300

Page 54

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00351A		//		PLUG-PART OF D00351 (continued)				ALL
	A03	UNUSED						ALL
	A04	UNUSED						ALL
	A05	UNUSED						ALL
	A06	UNUSED						ALL
	A07	UNUSED						ALL
	A08	UNUSED						ALL
	A09	UNUSED						ALL
	A10	UNUSED						ALL
	A11	UNUSED						ALL
	A12	UNUSED						ALL
	A13	UNUSED						ALL
	A14	UNUSED						ALL
	A15	UNUSED						ALL
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04	UNUSED						ALL
	B05	UNUSED						ALL
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13	UNUSED						ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	C01	UNUSED						ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05	UNUSED						ALL
	C06	UNUSED						ALL
	C07	UNUSED						ALL
	C08	UNUSED						ALL
	C09	UNUSED						ALL
	C10	UNUSED						ALL
	C11	UNUSED						ALL
	C12	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00300

Page 55

Mar 14/2007

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00351A		//		PLUG-PART OF D00351 (continued)				ALL
	C13	UNUSED						ALL
	C14	UNUSED						ALL
	C15	UNUSED						ALL
	D01	UNUSED						ALL
	D02	UNUSED						ALL
	D03	UNUSED						ALL
	D04	UNUSED						ALL
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	D08	UNUSED						ALL
	D09	UNUSED						ALL
	D10	UNUSED						ALL
	D11	UNUSED						ALL
	D12	UNUSED						ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15	UNUSED						ALL
	E01	UNUSED						ALL
	E02	UNUSED						ALL
	E03	UNUSED						ALL
	E04	UNUSED						ALL
	E05	UNUSED						ALL
	E06	UNUSED						ALL
	E07	UNUSED						ALL
	E08	UNUSED						ALL
	E09	UNUSED						ALL
	E10	UNUSED						ALL
	E11	UNUSED						ALL
	E12	UNUSED						ALL
	E13	UNUSED						ALL
	E14	UNUSED						ALL
	E15	UNUSED						ALL
	F01	UNUSED						ALL
	F02	UNUSED						ALL
	F03	UNUSED						ALL
	F04	UNUSED						ALL
	F05	UNUSED						ALL
	F06	UNUSED						ALL
	F07	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00300

Page 56

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00351A		//		PLUG-PART OF D00351 (continued)				ALL
	F08	UNUSED						ALL
	F09	UNUSED						ALL
	F10	UNUSED						ALL
	F11	UNUSED						ALL
	F12	UNUSED						ALL
	F13	UNUSED						ALL
	F14	UNUSED						ALL
	F15	UNUSED						ALL
	G01	UNUSED						ALL
	G02	UNUSED						ALL
	G03	UNUSED						ALL
	G04	UNUSED						ALL
	G05	UNUSED						ALL
	G06	UNUSED						ALL
	G07	UNUSED						ALL
	G08	UNUSED						ALL
	G09	UNUSED						ALL
	G10	UNUSED						ALL
	G11	UNUSED						ALL
	G12	UNUSED						ALL
	G13	UNUSED						ALL
	G14	UNUSED						ALL
	G15	UNUSED						ALL
	H01	UNUSED						ALL
	H02	UNUSED						ALL
	H03	UNUSED						ALL
	H04	UNUSED						ALL
	H05	UNUSED						ALL
	H06	UNUSED						ALL
	H07	UNUSED						ALL
	H08	UNUSED						ALL
	H09	UNUSED						ALL
	H10	UNUSED						ALL
	H11	UNUSED						ALL
	H12	UNUSED						ALL
	H13	UNUSED						ALL
	H14	UNUSED						ALL
	H15	UNUSED						ALL
	J01	UNUSED						ALL
	J02	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00300

Page 57

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00351A		//		PLUG-PART OF D00351 (continued)				ALL
	J03	UNUSED						ALL
	J04	UNUSED						ALL
	J05	UNUSED						ALL
	J06	UNUSED						ALL
	J07	UNUSED						ALL
	J08	UNUSED						ALL
	J09	UNUSED						ALL
	J10	UNUSED						ALL
	J11	UNUSED						ALL
	J12	UNUSED						ALL
	J13	UNUSED						ALL
	J14	UNUSED						ALL
	J15	UNUSED						ALL
	K01	UNUSED						ALL
	K02	UNUSED						ALL
	K03	UNUSED						ALL
	K04	UNUSED						ALL
	K05	UNUSED						ALL
	K06	UNUSED						ALL
	K07	UNUSED						ALL
	K08	UNUSED						ALL
	K09	UNUSED						ALL
	K10	UNUSED						ALL
	K11	UNUSED						ALL
	K12	UNUSED						ALL
	K13	UNUSED						ALL
	K14	UNUSED						ALL
	K15	UNUSED						ALL
D00351B		//		PLUG-PART OF D00351				ALL
	A01	UNUSED						ALL
	A02	UNUSED	W0145	505R	24		34-12-22	ALL
	A03	UNUSED	W0145	513R	24		34-12-22	ALL
	A04	UNUSED	W0145	512R	24		34-12-62	ALL
	A05	UNUSED	W0145	512R	24		34-12-62	ALL
	A06	UNUSED	W0145	512R	24		34-12-62	ALL
	A07	UNUSED	W0145	511R	24		34-12-22	ALL
	A08	UNUSED	W0145	511R	24		34-12-22	ALL
	A09	UNUSED						ALL
	A10	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00300

Page 58

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00351B		//		PLUG-PART OF D00351 (continued)				ALL
	A11	UNUSED						ALL
	A12	UNUSED						ALL
	A13	UNUSED						ALL
	A14	UNUSED						ALL
	A15	UNUSED						ALL
	B01	UNUSED						ALL
	B02		W0145	505B	24		34-12-22	ALL
	B03	UNUSED						ALL
	B04		W0145	513B	24		34-12-22	ALL
	B05	UNUSED						ALL
	B06		W0145	512B	24		34-12-62	ALL
	B07	UNUSED						ALL
	B08		W0145	511B	24		34-12-22	ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13	UNUSED						ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	C01	UNUSED						ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05	UNUSED						ALL
	C06	UNUSED						ALL
	C07	UNUSED						ALL
	C08	UNUSED						ALL
	C09	UNUSED						ALL
	C10	UNUSED						ALL
	C11	UNUSED						ALL
	C12	UNUSED						ALL
	C13	UNUSED						ALL
	C14	UNUSED						ALL
	C15	UNUSED						ALL
	D01	UNUSED						ALL
	D02		W0145	855	22		34-12-22	ALL
	D03	UNUSED						ALL
	D04	UNUSED						ALL
	D05	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D00300
Page 59
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00351B		//		PLUG-PART OF D00351 (continued)				ALL
	D06	UNUSED						ALL
	D07		W0145	824	22		34-12-22	ALL
	D08	UNUSED						ALL
	D09	UNUSED						ALL
	D10	UNUSED						ALL
	D11	UNUSED						ALL
	D12	UNUSED						ALL
	D13	UNUSED						ALL
	D14		W0145	806	22		34-12-22	ALL
	D15	UNUSED						ALL
	E01	UNUSED						ALL
	E02	UNUSED						ALL
	E03		W0145	857	24		34-12-22	ALL
	E04	UNUSED						ALL
	E05	UNUSED						ALL
	E06	UNUSED						ALL
	E07		W0145	164	24		SPARE	050-099
	E07	UNUSED	W0145	164	24		34-12-22	150-199
	E07		W0145	164	24		34-12-22	275-299
	E08	UNUSED						ALL
	E09	UNUSED						ALL
	E10		W0145	813	24		34-12-22	ALL
	E11	UNUSED						ALL
	E12	UNUSED						ALL
	E13	UNUSED						ALL
	E14	UNUSED						ALL
	E15	UNUSED						ALL
	F01	UNUSED						ALL
	F02		W0145	812	24		34-12-22	ALL
	F03	UNUSED						ALL
	F04	UNUSED						ALL
	F05		W0145	850	22		34-12-22	ALL
	F06	UNUSED						ALL
	F07	UNUSED						ALL
	F08	UNUSED						ALL
	F09		W0145	818	24		34-12-22	ALL
	F10		W0145	821	24		34-12-22	ALL
	F11		W0145	827	24		34-12-12	ALL
	F12	UNUSED						ALL
	F13	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00300

Page 60

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00351B		//		PLUG-PART OF D00351 (continued)				ALL
	F14	UNUSED						ALL
	F15		W0145	823	22		34-12-22	ALL
	G01	UNUSED						ALL
	G02	UNUSED						ALL
	G03		W0145	856	22		34-12-22	ALL
	G04	UNUSED						ALL
	G05	UNUSED						ALL
	G06	UNUSED						ALL
	G07	UNUSED						ALL
	G08	UNUSED						ALL
	G09	UNUSED						ALL
	G10	UNUSED						ALL
	G11	UNUSED						ALL
	G12	UNUSED						ALL
	G13	UNUSED						ALL
	G14	UNUSED						ALL
	G14		W0145	806	22		34-12-22	050-099
	G15		W0145	825	22		34-12-22	150-199, 275-299
	H01	UNUSED						ALL
	H02		W0145	371R	24		34-12-21	ALL
	H03	UNUSED						ALL
	H04		W0145	374R	24		34-12-21	ALL
	H05	UNUSED						ALL
	H06	UNUSED						ALL
	H07	UNUSED						ALL
	H08		W0145	585R	22		34-12-21	ALL
	H09	UNUSED						ALL
	H10		W0145	376R	24		34-12-21	ALL
	H11		W0145	375R	24		34-12-21	ALL
	H12		W0145	377R	24		34-12-21	ALL
	H13	UNUSED						ALL
	H14	UNUSED						ALL
	H15	UNUSED						ALL
	J01	UNUSED						ALL
	J02		W0145	371B	24		34-12-21	ALL
	J03	UNUSED						ALL
	J04		W0145	374B	24		34-12-21	ALL
	J05	UNUSED						ALL
	J06		W0145	811	22		34-12-22	ALL
	J07	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00300

Page 61

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00351B		//		PLUG-PART OF D00351 (continued)				ALL
	J08		W0145	585B	22		34-12-21	ALL
	J09	UNUSED						ALL
	J10		W0145	376B	24		34-12-21	ALL
	J11		W0145	375B	24		34-12-21	ALL
	J12		W0145	377B	24		34-12-21	ALL
	J13	UNUSED						ALL
	J14	UNUSED						ALL
	J15	UNUSED						ALL
	K01	UNUSED						ALL
	K02		W0145	371Y	24		34-12-21	ALL
	K03	UNUSED						ALL
	K04		W0145	374Y	24		34-12-21	ALL
	K05	UNUSED						ALL
	K06	UNUSED						ALL
	K07	UNUSED						ALL
	K08		W0145	585Z			34-12-21	ALL
	K09	UNUSED						ALL
	K10		W0145	376Y	24		34-12-21	ALL
	K11		W0145	375Y	24		34-12-21	ALL
	K12		W0145	377Y	24		34-12-21	ALL
	K13	UNUSED						ALL
	K14		W0145	806	22		34-12-22	050-099
	K14	UNUSED						150-199, 275-299
	K15		W0145	865	22		34-12-22	050-099
	K15	UNUSED						150-199, 275-299
	DED		W0145	505Z			34-12-22	ALL
	DED		W0145	511Z			34-12-22	ALL
	DED		W0145	513Z			34-12-22	ALL
	DED		W0145	827Z			34-12-12	ALL
	REF		W0145	512	20		34-12-62	ALL
	REF		W0145	512Z			34-12-62	ALL
D00351C		//		PLUG-PART OF D00351				ALL
	1		W0145	801	20		34-12-21	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W0145	504R	20		34-12-21	ALL
	5		W0145	509R	20		34-12-21	ALL
	6		W0145	504B	20		34-12-21	ALL
	7		W0145	807	16		34-12-21	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00300

Page 62

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00351C		//		PLUG-PART OF D00351 (continued)				ALL
	8		W0145	808	16		34-12-21	ALL
	9		W0145	509B	20		34-12-21	ALL
	10		W0145	510R	20		34-12-21	ALL
	11		W0145	510B	20		34-12-21	ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	= C12	UNUSED						ALL
	= C13	UNUSED						ALL
	DED		W0145	801Z			34-12-21	ALL
D00352		1175/148/L080		PLUG-				ALL
	1		W0596	183	18		29-11-32	ALL
	2		W0596	099	18		29-11-32	ALL
	3		W0596	100	18		29-11-32	ALL
D00353A		//		PLUG-PART OF D00353				ALL
	A01		W0145	214R	24		34-61-23	ALL
	A02	UNUSED						ALL
	A03		W0145	217R	24		34-61-23	ALL
	A04	UNUSED						ALL
	A05		W0145	227R	24		34-61-24	ALL
	A06	UNUSED						ALL
	A07	UNUSED						ALL
	A08	UNUSED						ALL
	A09		W0145	222R	24		34-61-21	ALL
	A10	UNUSED						ALL
	A11		W0145	248R	24		34-61-25	ALL
	A12	UNUSED						ALL
	A13		W0145	202R	24		34-61-11	ALL
	A14	UNUSED						ALL
	A15	UNUSED						ALL
	B01		W0145	214B	24		34-61-23	ALL
	B02	UNUSED						ALL
	B03		W0145	217B	24		34-61-23	ALL
	B04	UNUSED						ALL
	B05		W0145	227B	24		34-61-24	ALL
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09		W0145	222B	24		34-61-21	ALL

HOOKUP LIST
D280T132

91-21-51
Section D00300
Page 63
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00353A		//		PLUG-PART OF D00353 (continued)				ALL
	B10	UNUSED						ALL
	B11		W0145	248B	24		34-61-25	ALL
	B12	UNUSED						ALL
	B13		W0145	202B	24		34-61-11	ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	C01	UNUSED						ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05	UNUSED						ALL
	C06	UNUSED						ALL
	C07	UNUSED						ALL
	C08	UNUSED						ALL
	C09	UNUSED						ALL
	C10	UNUSED						ALL
	C11	UNUSED						ALL
	C12	UNUSED						ALL
	C13	UNUSED						ALL
	C14	UNUSED						ALL
	C15	UNUSED						ALL
	D01		W0145	215R	24		34-61-23	ALL
	D02	UNUSED						ALL
	D03	UNUSED						ALL
	D04	UNUSED						ALL
	D05		W0145	225R	24		34-61-24	ALL
	D06	UNUSED						ALL
	D07		W0145	213R	24		34-61-23	ALL
	D08	UNUSED						ALL
	D09		W0145	595R	24		34-61-15	ALL
	D10	UNUSED						ALL
	D11		W0145	206R	24		34-61-11	ALL
	D12	UNUSED						ALL
	D13		W0145	299R	24		34-61-21	ALL
	D14	UNUSED						ALL
	D15		W0145	216R	24		34-61-22	ALL
	E01		W0145	215B	24		34-61-23	ALL
	E02	UNUSED						ALL
	E03	UNUSED						ALL
	E04	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00300

Page 64

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00353A		//		PLUG-PART OF D00353 (continued)				ALL
	E05		W0145	225B	24		34-61-24	ALL
	E06	UNUSED						ALL
	E07		W0145	213B	24		34-61-23	ALL
	E08	UNUSED						ALL
	E09		W0145	595B	24		34-61-15	ALL
	E10	UNUSED						ALL
	E11		W0145	206B	24		34-61-11	ALL
	E12	UNUSED						ALL
	E13		W0145	299B	24		34-61-21	ALL
	E14	UNUSED						ALL
	E15		W0145	216B	24		34-61-22	ALL
	F01	UNUSED						ALL
	F02	UNUSED						ALL
	F03	UNUSED						ALL
	F04	UNUSED						ALL
	F05	UNUSED						ALL
	F06	UNUSED						ALL
	F07	UNUSED						ALL
	F08	UNUSED						ALL
	F09		W0145	162	24		34-61-24	ALL
	F10	UNUSED						ALL
	F11	UNUSED						ALL
	F12	UNUSED						ALL
	F13	UNUSED						ALL
	F14	UNUSED						ALL
	F15	UNUSED						ALL
	G01		W0145	209R	24		34-61-22	ALL
	G02	UNUSED						ALL
	G03		W0145	223R	24		34-61-24	ALL
	G04	UNUSED						ALL
	G05		W0145	210R	24		34-61-22	ALL
	G06	UNUSED						ALL
	G07		W0145	226R	24		34-61-24	ALL
	G08	UNUSED						ALL
	G09		W0145	234R	24		34-61-25	ALL
	G10	UNUSED						ALL
	G11		W0145	596R	24		34-61-15	ALL
	G12	UNUSED						ALL
	G13	UNUSED						ALL
	G14	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00300

Page 65

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00353A		//		PLUG-PART OF D00353 (continued)				ALL
	G15	UNUSED						ALL
	H01		W0145	209B	24		34-61-22	ALL
	H02	UNUSED						ALL
	H03		W0145	223B	24		34-61-24	ALL
	H04	UNUSED						ALL
	H05		W0145	210B	24		34-61-22	ALL
	H06	UNUSED						ALL
	H07		W0145	226B	24		34-61-24	ALL
	H08	UNUSED						ALL
	H09		W0145	234B	24		34-61-25	ALL
	H10	UNUSED						ALL
	H11		W0145	596B	24		34-61-15	ALL
	H12	UNUSED						ALL
	H13	UNUSED						ALL
	H14	UNUSED						ALL
	H15	UNUSED						ALL
	J01	UNUSED						ALL
	J02	UNUSED						ALL
	J03	UNUSED						ALL
	J04	UNUSED						ALL
	J05	UNUSED						ALL
	J06	UNUSED						ALL
	J07	UNUSED						ALL
	J08	UNUSED						ALL
	J09	UNUSED						ALL
	J10	UNUSED						ALL
	J11	UNUSED						ALL
	J12	UNUSED						ALL
	J13	UNUSED						ALL
	J14	UNUSED						ALL
	J15	UNUSED						ALL
	K01		W0145	161	24		34-61-24	ALL
	K02	UNUSED						ALL
	K03	UNUSED						ALL
	K04		W0145	192	22		34-61-24	ALL
	K05	UNUSED						ALL
	K06		W0145	695	24		34-61-24	050-099, 155-199, 276-299 150-154, 275
	K06	UNUSED						
	K07		W0145	030	22		34-61-24	ALL
	K08		W0145	688	24		34-61-15	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00300

Page 66

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00353A		//		PLUG-PART OF D00353 (continued)				ALL
	K09		W0145	012	24		34-61-23	ALL
	K10	UNUSED						ALL
	K11		W0145	010	24		34-61-23	ALL
	K12	UNUSED						ALL
	K13		W0145	174	24		34-61-25	ALL
	K14	UNUSED						ALL
	K15	UNUSED						050-099, 150-156, 162-166, 275-276
	K15		W0145	714	24		34-61-27	157, 167-199, 277-299
	DED		W0145	012Z			34-61-23	ALL
	DED		W0145	206Z			34-61-11	ALL
	DED		W0145	213Z			34-61-23	ALL
	DED		W0145	214Z			34-61-23	ALL
	DED		W0145	215Z			34-61-23	ALL
	DED		W0145	216Z			34-61-22	ALL
	DED		W0145	217Z			34-61-23	ALL
	DED		W0145	222Z			34-61-21	ALL
	DED		W0145	234Z			34-61-25	ALL
	DED		W0145	248Z			34-61-25	ALL
	DED		W0145	596Z			34-61-15	ALL
	DED		W0145	223Z			34-61-24	275-299
	REF		W0145	223	20		34-61-24	050-099, 150-199
	REF		W0145	223Z			34-61-24	050-099, 150-199
	REF		W0145	202	20		34-61-11	ALL
	REF		W0145	202Z			34-61-11	ALL
	REF		W0145	209	20		34-61-22	ALL
	REF		W0145	209Z			34-61-22	ALL
	REF		W0145	210	20		34-61-22	ALL
	REF		W0145	210Z			34-61-22	ALL
	REF		W0145	225	20		34-61-24	ALL
	REF		W0145	225Z			34-61-24	ALL
	REF		W0145	226	20		34-61-24	ALL
	REF		W0145	226Z			34-61-24	ALL
	REF		W0145	227	20		34-61-24	ALL
	REF		W0145	227Z			34-61-24	ALL
	REF		W0145	299	20		34-61-21	ALL
	REF		W0145	299Z			34-61-21	ALL
	REF		W0145	595	20		34-61-15	ALL
	REF		W0145	595Z			34-61-15	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00300

Page 67

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00353B		//		PLUG-PART OF D00353				ALL
	A01	UNUSED						ALL
	A02	UNUSED						ALL
	A03		W0145	221R	24		34-61-22	ALL
	A04	UNUSED						ALL
	A05	UNUSED						050-099, 150-156, 162-166
	A05		W0145	641R	24		34-61-24	157, 167-199, 275-299
	A06	UNUSED						ALL
	A07	UNUSED						ALL
	A08	UNUSED						ALL
	A09	**	W0145	539R	24		34-61-25	050-099, 150-166
	A09		W0145	539R	24		34-61-25	167-199, 275-299
	A10	UNUSED						ALL
	A11		W0145	687	24		34-61-15	ALL
	A12	UNUSED						ALL
	A13		W0145	011	22		34-61-23	ALL
	A14		W0145	038	24		34-61-23	ALL
	A15		W0145	027	22		34-61-23	ALL
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03		W0145	221B	24		34-61-22	ALL
	B04	UNUSED						ALL
	B05	UNUSED						050-099, 150-156, 162-166
	B05		W0145	641B	24		34-61-24	157, 167-199, 275-299
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09	**	W0145	539B	24		34-61-25	050-099, 150-166
	B09		W0145	539B	24		34-61-25	167-199, 275-299
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13		W0145	163	22		34-61-23	050-099, 150-199
	B13	UNUSED						275-299
	B14		W0145	032	24		34-61-23	ALL
	B15	UNUSED						050-099, 150-156, 162-166
	B15		W0145	029	22		34-61-23	157, 167-199, 275-299
	C01	UNUSED						ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00300

Page 68

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00353B		//		PLUG-PART OF D00353 (continued)				ALL
	C05	UNUSED						ALL
	C06	UNUSED						ALL
	C07	UNUSED						ALL
	C08	UNUSED						ALL
	C09	UNUSED						ALL
	C10	UNUSED						ALL
	C11	UNUSED						ALL
	C12	UNUSED						ALL
	C13	UNUSED						050-099, 150-199
	C13		W0145	194	22		34-61-23	275-299
	C14		W0145	033	24		34-61-23	ALL
	C15	UNUSED						050-099, 150, 152-165, 167-199, 275-299
	C15		W0145	198	22		34-61-24	151, 166
	D01		W0145	218R	24		34-61-22	ALL
	D02	UNUSED						ALL
	D03		W0145	230R	24		34-61-24	ALL
	D04	UNUSED						ALL
	D05		W0145	220R	24		34-61-22	ALL
	D06	UNUSED						ALL
	D07		W0145	233R	24		34-61-25	ALL
	D08	UNUSED						ALL
	D09		W0145	288R	24		34-61-24	ALL
	D10	UNUSED						ALL
	D11	UNUSED						050-099, 150, 152-165, 167-199, 275-299
	D11		W0145	043	22		34-61-24	151, 166
	D12	UNUSED						ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15	UNUSED						ALL
	E01		W0145	218B	24		34-61-22	ALL
	E02	UNUSED						ALL
	E03		W0145	230B	24		34-61-24	ALL
	E04	UNUSED						ALL
	E05		W0145	220B	24		34-61-22	ALL
	E06	UNUSED						ALL
	E07		W0145	233B	24		34-61-25	ALL
	E08	UNUSED						ALL
	E09		W0145	288B	24		34-61-24	ALL
	E10	UNUSED						ALL
	E11	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D00300
Page 69
Aug 15/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00353B		//		PLUG-PART OF D00353 (continued)				ALL
	E12	UNUSED						ALL
	E13		W0145	039	24		34-61-23	ALL
	E14	UNUSED						ALL
	E15	UNUSED						ALL
	F01	UNUSED						ALL
	F02	UNUSED						ALL
	F03	UNUSED						ALL
	F04	UNUSED						ALL
	F05	UNUSED						ALL
	F06	UNUSED						ALL
	F07	UNUSED						ALL
	F08	UNUSED						ALL
	F09	UNUSED						ALL
	F10	UNUSED						ALL
	F11	UNUSED						ALL
	F12	UNUSED						ALL
	F13		W0145	041	24		34-61-23	ALL
	F14		W0145	034	24		34-61-23	ALL
	F15	UNUSED						ALL
	G01		W0145	201R	24		34-61-11	ALL
	G02		W0145	594R	24		34-61-26	ALL
	G03	**	W0145	541R	24		34-61-25	050-099, 150-166
	G03	UNUSED						167-199
	G03		W0145	541R	24		34-61-25	275-299
	G04	UNUSED						ALL
	G05		W0145	270R	24		31-36-11	ALL
	G06	UNUSED						ALL
	G07		W0145	219R	24		34-61-22	ALL
	G08	UNUSED						ALL
	G09	UNUSED						050-099, 150-156, 162-199
	G09	**	W0145	709R	24		34-61-25	157
	G09		W0145	709R	24		34-61-25	275-299
	G10	UNUSED						ALL
	G11	UNUSED						050-099, 151, 166
	G11		W0145	198	22		34-61-24	150, 152-165, 167-199, 275-299
	G12	UNUSED						ALL
	G13		W0145	035	24		34-61-23	ALL
	G14		W0145	040	24		34-61-23	ALL
	G15		W0145	686	24		34-61-15	ALL
	H01		W0145	201B	24		34-61-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00300

Page 70

Aug 15/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00353B		//		PLUG-PART OF D00353 (continued)				ALL
	H02		W0145	594B	24		34-61-26	ALL
	H03	**	W0145	541B	24		34-61-25	050-099, 150-166
	H03	UNUSED						167-199
	H03		W0145	541B	24		34-61-25	275-299
	H04	UNUSED						ALL
	H05		W0145	270B	24		31-36-11	ALL
	H06	UNUSED						ALL
	H07		W0145	219B	24		34-61-22	ALL
	H08	UNUSED						ALL
	H09	UNUSED						050-099, 150-156, 162-199
	H09	**	W0145	709B	24		34-61-25	157
	H09		W0145	709B	24		34-61-25	275-299
	H10	UNUSED						ALL
	H11	UNUSED						050-099, 151, 166
	H11		W0145	043	22		34-61-24	150, 152-165, 167-199, 275-299
	H12	UNUSED						ALL
	H13	UNUSED						ALL
	H14	UNUSED						ALL
	H15	UNUSED						ALL
	J01	UNUSED						ALL
	J02	UNUSED						ALL
	J03	UNUSED						ALL
	J04	UNUSED						ALL
	J05	UNUSED						ALL
	J06	UNUSED						ALL
	J07	UNUSED						ALL
	J08	UNUSED						ALL
	J09	UNUSED						050-099, 150-156, 162-199
	J09		W0145	689	24		34-61-26	157, 275-299
	J10	UNUSED						ALL
	J11		W0145	199	22		34-61-24	ALL
	J12	UNUSED						ALL
	J13		W0145	037	24		34-61-23	ALL
	J14		W0145	036	24		34-61-23	ALL
	J15		W0145	656	22		34-61-24	050-099, 150-156, 162-199
	J15		W0145	656	22		34-61-23	157
	J15	UNUSED						275-299
	K01	UNUSED						ALL
	K02	UNUSED						ALL
	K03		W0145	016	22		34-61-24	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00300

Page 71

Aug 15/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00353B		//		PLUG-PART OF D00353 (continued)				ALL
	K04	UNUSED						050-099, 150-156, 162-166
	K04		W0145	719	24		34-61-27	157, 167-199, 275-299
	K05		W0145	015	22		34-61-24	ALL
	K06	UNUSED						050-099, 150-156, 162-166
	K06		W0145	721	24		34-61-27	157, 167-199, 275-299
	K07		W0145	172	24		34-61-25	ALL
	K08	UNUSED						ALL
	K09	UNUSED						050-099, 150-156, 162-199
	K09		W0145	690	24		34-61-16	157, 275-299
	K10	UNUSED						ALL
	K11	UNUSED						050-099, 275-299
	K11		W0145	01R	22		34-61-23	150-199
	K12	UNUSED						ALL
	K13	UNUSED						050-099, 150-156, 162-199, 275-276
	K13	**	W0145	720	24		34-61-27	157
	K13		W0145	720	24		34-61-27	277-299
	K14	UNUSED						050-099, 150-156, 162-166
	K14		W0145	874	22		34-61-23	157, 167-199, 275-299
	K15	UNUSED						ALL
	CAP	Y	W0145	689	24		34-61-26	050-099, 155-156, 162-166
	CAP	Y	W0145	690	24		34-61-16	050-099, 155-156, 162-166
	DED		W0145	011Z			34-61-23	ALL
	DED		W0145	037Z			34-61-23	ALL
	DED		W0145	038Z			34-61-23	ALL
	DED		W0145	039Z			34-61-23	ALL
	DED		W0145	040Z			34-61-23	ALL
	DED		W0145	041Z			34-61-23	ALL
	DED		W0145	201Z			34-61-11	ALL
	DED		W0145	218Z			34-61-22	ALL
	DED		W0145	219Z			34-61-22	ALL
	DED		W0145	220Z			34-61-22	ALL
	DED		W0145	221Z			34-61-22	ALL
	DED		W0145	233Z			34-61-25	ALL
	DED		W0145	288Z			34-61-24	ALL
	DED		W0145	641Z			34-61-24	157, 167-199, 275-299
	DED		W0145	709Z			34-61-25	157, 167-199, 275-299
	REF		W0145	230	20		34-61-24	ALL
	REF		W0145	230Z			34-61-24	ALL
	REF		W0145	270	20		31-36-11	ALL
	REF		W0145	270Z			31-36-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00300

Page 72

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00353B		//		PLUG-PART OF D00353 (continued)				ALL
	REF		W0145	594	20		34-61-26	ALL
	REF		W0145	594Z			34-61-26	ALL
	REF	**	W0145	541B	24		34-61-25	167-199
	REF	**	W0145	541R	24		34-61-25	167-199
	REF	**	W0145	689	24		34-61-26	167-199
	REF	**	W0145	690	24		34-61-16	167-199
	REF	**	W0145	709B	24		34-61-25	167-199
	REF	**	W0145	709R	24		34-61-25	167-199
	REF	**	W0145	720	24		34-61-27	167-199
			W0145	539	20		34-61-25	ALL
			W0145	539Z			34-61-25	ALL
			W0145	541	20		34-61-25	ALL
			W0145	541Z			34-61-25	ALL
D00353C		//		PLUG-PART OF D00353				ALL
	1		W0145	001	22		34-61-21	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W0145	007	20		34-61-21	ALL
	8		W0145	008	20		34-61-21	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	= C12	UNUSED						ALL
	= C13	UNUSED						ALL
	DED		W0145	001Z			34-61-21	ALL
D00356		P006-00/ /		RELAY SOCKET-P6				ALL
	A1	UNUSED						ALL
	A2		W0028	083	24		24-33-11	ALL
	A3		W0028	020	24		24-33-11	ALL
	B1		W0028	195	24		24-51-31	ALL
	B2		W0028	177	24		24-51-31	ALL
	B3	UNUSED						ALL
	X1		W0028	104	22		24-51-31	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00300

Page 73

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00356		P006-00/ /		RELAY SOCKET-P6 (continued)				ALL
	X2		W0028	058	24		22-11-32	ALL
D00357A		//		PLUG-PART OF D00357				ALL
	A01	UNUSED						ALL
	A02	UNUSED						ALL
	A03	UNUSED						ALL
	A04	UNUSED						ALL
	A05	UNUSED						ALL
	A06	UNUSED						ALL
	A07	UNUSED						ALL
	A08	UNUSED						ALL
	A09	UNUSED						ALL
	A10	UNUSED						ALL
	A11	UNUSED						ALL
	A12	UNUSED						ALL
	A13	UNUSED						ALL
	A14	UNUSED						ALL
	A15	UNUSED						ALL
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04	UNUSED						ALL
	B05	UNUSED						ALL
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13	UNUSED						ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	C01	UNUSED						ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05	UNUSED						ALL
	C06	UNUSED						ALL
	C07	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00300

Page 74

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00357A		//		PLUG-PART OF D00357 (continued)				ALL
	C08	UNUSED						ALL
	C09	UNUSED						ALL
	C10	UNUSED						ALL
	C11	UNUSED						ALL
	C12	UNUSED						ALL
	C13	UNUSED						ALL
	C14	UNUSED						ALL
	C15	UNUSED						ALL
	D01	UNUSED						ALL
	D02	UNUSED						ALL
	D03	UNUSED						ALL
	D04	UNUSED						ALL
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	D08	UNUSED						ALL
	D09	UNUSED						ALL
	D10	UNUSED						ALL
	D11	UNUSED						ALL
	D12	UNUSED						ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15	UNUSED						ALL
D00357B		//		PLUG-PART OF D00357				ALL
	A01	UNUSED						ALL
	A02	UNUSED						ALL
	A03	UNUSED						ALL
	A04	UNUSED	W0145	261R	24		34-51-21	ALL
	A05	UNUSED						ALL
	A06	UNUSED						ALL
	A07	UNUSED						ALL
	A08	UNUSED						ALL
	A09	UNUSED						ALL
	A10	UNUSED						ALL
	A11	UNUSED	W0145	054	22		34-51-21	ALL
	A12	UNUSED						ALL
	A13	UNUSED						ALL
	A14	UNUSED						ALL
	A15	UNUSED	W0145	055	24		34-51-21	ALL

HOOKUP LIST
D280T132

91-21-51
Section D00300
Page 75
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00357B		//		PLUG-PART OF D00357 (continued)				ALL
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04		W0145	261B	24		34-51-21	ALL
	B05	UNUSED						ALL
	B06	UNUSED						ALL
	B07		W0145	265R	24		23-51-12	ALL
	B08	UNUSED						ALL
	B09		W0145	264R	24		34-51-21	ALL
	B10	UNUSED						ALL
	B11		W0145	262R	24		34-51-21	ALL
	B12	UNUSED						ALL
	B13		W0145	267R	24		34-51-21	ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	C01	UNUSED						ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05	UNUSED						ALL
	C06	UNUSED						ALL
	C07		W0145	265B	24		23-51-12	ALL
	C08	UNUSED						ALL
	C09		W0145	264B	24		34-51-21	ALL
	C10	UNUSED						ALL
	C11		W0145	262B	24		34-51-21	ALL
	C12	UNUSED						ALL
	C13		W0145	267B	24		34-51-21	ALL
	C14	UNUSED						ALL
	C15		W0145	263R	22		34-51-21	ALL
	D01	UNUSED						ALL
	D02		W0145	057	22		34-51-21	ALL
	D03	UNUSED						ALL
	D04	UNUSED						ALL
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	D08	UNUSED						ALL
	D09	UNUSED						ALL
	D10	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00300

Page 76

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00357B		//		PLUG-PART OF D00357 (continued)				ALL
	D11	UNUSED						ALL
	D12	UNUSED						ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15		W0145	263B	22		34-51-21	ALL
	DED		W0145	261Z			34-51-21	ALL
	DED		W0145	264Z			34-51-21	ALL
	DED		W0145	267Z			34-51-21	ALL
	REF		W0145	262	20		34-51-21	ALL
	REF		W0145	262Z			34-51-21	ALL
D00357C		//		PLUG-PART OF D00357				ALL
	1		W1087	01CX			34-51-21	ALL
	2		W0145	051	20		34-51-21	ALL
	3		W0145	052	20		34-51-21	ALL
	4		W0145	053	20		34-51-21	ALL
	5	UNUSED						ALL
	= C1		W1087	01CO			34-51-21	ALL
	= C5	UNUSED						ALL
	DED		W0145	051Z			34-51-21	ALL
D00358		SHELF/E03/02		PLUG-				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W0252	201B	18		24-34-11	ALL
	4		W0252	201R	18		24-34-11	ALL
	5		W0252	006	14		24-32-11	ALL
	6		W0252	003	14		24-32-11	ALL
	7		W0252	002	14		24-32-11	ALL
	8		W0252	001	14		24-32-11	ALL
D00359A		//		PLUG-PART OF D00359				ALL
	71		W1099	01CX			34-53-13	ALL
	A01	UNUSED						ALL
	A02	UNUSED						ALL
	A03	UNUSED						ALL
	A04	UNUSED						ALL
	A05	UNUSED						ALL
	A06	UNUSED						050-099, 150-199
	A06		W0145	903R	24		34-53-21	275-299

HOOKUP LIST
D280T132

91-21-51
Section D00300
Page 77
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00359A		//		PLUG-PART OF D00359 (continued)				ALL
	A07	UNUSED						050-099, 150-199
	A07		W0145	913R	24		34-53-21	275-299
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03		W0145	697	24		34-53-21	050-099, 150-152, 155-199, 275-299
	B03	UNUSED						153-154
	B04	UNUSED						ALL
	B05	UNUSED						ALL
	B06	UNUSED						050-099, 150-199
	B06		W0145	903B	24		34-53-21	275-299
	B07	UNUSED						050-099, 150-199
	B07		W0145	913B	24		34-53-21	275-299
	C01	UNUSED						ALL
	C02	UNUSED						050-099, 150-199
	C02		W0145	904R	24		34-53-21	275-299
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05		W0145	651	24		34-53-22	ALL
	C06	UNUSED						ALL
	C07	UNUSED						ALL
	D01	UNUSED						ALL
	D02	UNUSED						050-099, 150-199
	D02		W0145	904B	24		34-53-21	275-299
	D03	UNUSED						ALL
	D04	UNUSED						ALL
	D05		W0145	668	24		34-53-22	ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	E01	UNUSED						ALL
	E02	UNUSED						ALL
	E03	UNUSED						ALL
	E04	UNUSED						ALL
	E05	UNUSED						050-099, 155-156, 162-166
	E05		W0145	675R	24		34-45-12	150-154, 157, 167-199, 275-299
	E06	UNUSED						ALL
	E07		W0145	275R	24		34-53-21	ALL
	F01	UNUSED						ALL
	F02	UNUSED						ALL
	F03	UNUSED						ALL
	F04	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00300

Page 78

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00359A		//		PLUG-PART OF D00359 (continued)				ALL
	F05	UNUSED						050-099, 155-156, 162-166
	F05		W0145	675B	24		34-45-12	150-154, 157, 167-199, 275-299
	F06	UNUSED						ALL
	F07		W0145	275B	24		34-53-21	ALL
	G01	UNUSED						ALL
	G02	UNUSED						ALL
	G03	UNUSED						ALL
	G04	UNUSED						ALL
	G05	UNUSED						050-099, 155-156, 162-166
	G05		W0145	676R	24		34-45-12	150-154, 157, 167-199, 275-299
	G06	UNUSED						ALL
	G07		W0145	078	24		34-53-21	ALL
	H01	UNUSED						ALL
	H02	UNUSED						ALL
	H03	UNUSED						ALL
	H04	UNUSED						ALL
	H05	UNUSED						050-099, 155-156, 162-166
	H05		W0145	676B	24		34-45-12	150-154, 157, 167-199, 275-299
	H06	UNUSED						ALL
	H07		W0145	278R	24		34-53-21	ALL
	J01	UNUSED						ALL
	J02	UNUSED						ALL
	J03	UNUSED						ALL
	J04	UNUSED						ALL
	J05		W0145	079	24		34-53-21	ALL
	J06	UNUSED						ALL
	J07		W0145	278B	24		34-53-21	ALL
	K01	UNUSED						ALL
	K02	UNUSED						ALL
	K03	UNUSED						ALL
	K04	UNUSED						ALL
	K05	UNUSED						050-099, 150-156, 162-166, 275-276
	K05		W0145	878	24		34-53-21	157, 167-199, 277-299
	K06	UNUSED						ALL
	K07	UNUSED						ALL
	= C71		W1099	01CO			34-53-13	ALL
	DED		W0145	278Z			34-53-21	ALL
	DED		W0145	675Z			34-45-12	150-154, 157, 167-199, 275-299
	DED		W0145	676Z			34-45-12	150-154, 157, 167-199, 275-299
	REF		W0145	275	20		34-53-21	ALL

HOOKUP LIST
D280T132

91-21-51
Section D00300
Page 79
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00359A		//		PLUG-PART OF D00359 (continued)				ALL
	REF		W0145	275Z			34-53-21	ALL
			W0145	900	20		34-53-21	275-299
			W0145	902	20		34-53-21	275-299
			W0145	903	20		34-53-21	275-299
			W0145	903Z			34-53-21	275-299
			W0145	904Z			34-53-21	275-299
			W0145	913Z			34-53-21	275-299
D00359B		//		PLUG-PART OF D00359				ALL
	71		W1069	01CX			34-53-13	ALL
	A01		W0145	601	24		34-53-22	ALL
	A02		W0145	611	24		34-53-22	ALL
	A03		W0145	621	24		34-53-22	ALL
	A04	UNUSED						ALL
	A05		W0145	279R	24		34-53-21	ALL
	A06	UNUSED						ALL
	A07	UNUSED						ALL
	B01		W0145	602	24		34-53-22	ALL
	B02		W0145	612	24		34-53-22	ALL
	B03		W0145	622	24		34-53-22	ALL
	B04	UNUSED						ALL
	B05		W0145	279B	24		34-53-21	ALL
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	C01		W0145	603	24		34-53-22	ALL
	C02		W0145	613	24		34-53-22	ALL
	C03		W0145	623	24		34-53-22	ALL
	C04	UNUSED						ALL
	C05	UNUSED						ALL
	C06	UNUSED						ALL
	C07	UNUSED						ALL
	D01		W0145	604	24		34-53-22	ALL
	D02		W0145	614	24		34-53-22	ALL
	D03		W0145	624	24		34-53-22	ALL
	D04	UNUSED						ALL
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	E01		W0145	605	24		34-53-22	ALL
	E02		W0145	615	24		34-53-22	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00300

Page 80

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00359B		//		PLUG-PART OF D00359 (continued)				ALL
	E03		W0145	625	24		34-53-22	ALL
	E04	UNUSED						ALL
	E05		W0145	675R	24		34-45-12	050-099, 155-156, 162-166
	E06	UNUSED						150-154, 157, 167-199, 275-299
	E07	UNUSED	W0145	669	24		34-53-21	ALL
	F01		W0145	606	24		34-53-22	ALL
	F02		W0145	616	24		34-53-22	ALL
	F03	UNUSED						ALL
	F04	UNUSED						ALL
	F05		W0145	675B	24		34-45-12	050-099, 155-156, 162-166
	F06	UNUSED						150-154, 157, 167-199, 275-299
	F07	UNUSED						ALL
	G01		W0145	607	24		34-53-22	ALL
	G02		W0145	617	24		34-53-22	ALL
	G03	UNUSED						ALL
	G04	UNUSED						ALL
	G05		W0145	676R	24		34-45-12	050-099, 155-156, 162-166
	G05	UNUSED						150-154, 157, 167-199
	G05	DL	W0145	901	20		34-53-21	275-299
	G06	UNUSED						ALL
	G07	UNUSED						ALL
	H01		W0145	608	24		34-53-22	ALL
	H02		W0145	618	24		34-53-22	ALL
	H03		W0145	068	24		34-53-21	050-099, 150-156, 162-166, 275-276
	H03	UNUSED						157, 167-199, 277-299
	H04	UNUSED						ALL
	H05		W0145	676B	24		34-45-12	050-099, 155-156, 162-166
	H05	UNUSED						150-154, 157, 167-199, 275-299
	H06	UNUSED						ALL
	H07	UNUSED						ALL
	J01		W0145	609	24		34-53-22	ALL
	J02		W0145	619	24		34-53-22	ALL
	J03	UNUSED						ALL
	J04	UNUSED						ALL
	J05		W0145	667	24		34-53-22	ALL
	J06	UNUSED						ALL
	J07	UNUSED						ALL
	K01		W0145	610	24		34-53-22	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00300

Page 81

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00359B		//		PLUG-PART OF D00359 (continued)				ALL
	K02		W0145	620	24		34-53-22	ALL
	K03		W0145	070	24		34-53-21	ALL
	K04	UNUSED						ALL
	K05	UNUSED						ALL
	K06	UNUSED						ALL
	K07	UNUSED						ALL
	=C71		W1069	01CO			34-53-13	ALL
	CAP	Y	W0145	276B	24		SPARE	150-154
	CAP	Y	W0145	276R	24		SPARE	150-154
	CAP	Y	W0145	277B	24		SPARE	150-154
	CAP	Y	W0145	277R	24		SPARE	150-154
	DED		W0145	675Z			34-45-12	050-099, 155-156, 162-166
	DED		W0145	676Z			34-45-12	050-099, 155-156, 162-166
	REF		W0145	279	20		34-53-21	ALL
	REF		W0145	279Z			34-53-21	ALL
	REF		W0145	276	20		SPARE	150-154
	REF		W0145	276Z			SPARE	150-154
	REF		W0145	277	20		SPARE	150-154
	REF		W0145	277Z			SPARE	150-154
D00359C		//		PLUG-PART OF D00359				ALL
	1		W0145	076	22		34-53-21	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W0145	072	20		34-53-21	ALL
	8	UNUSED						050-099, 150-156, 162-166, 275-276
	8		W0145	724	20		34-53-21	157, 167-199, 277-299
	9	UNUSED						ALL
	10	UNUSED						ALL
	11		W0145	073	20		34-53-21	ALL
	12		W1093	01CX			34-53-21	ALL
	13	UNUSED						ALL
	=C12		W1093	01CO			34-53-21	ALL
	=C13	UNUSED						ALL
D00360		SHELF/E03/02		PLUG-				ALL
	1	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00300

Page 82

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00360		SHELF/E03/02		PLUG- (continued)				ALL
	2	UNUSED						ALL
	3		W0254	201B	18		24-34-11	ALL
	4		W0254	201R	18		24-34-11	ALL
	5		W0254	006	14		24-32-11	ALL
	6		W0254	003	14		24-32-11	ALL
	7		W0254	002	14		24-32-11	ALL
	8		W0254	001	14		24-32-11	ALL
D00361A		//		PLUG-PART OF D00361				ALL
	A01	UNUSED						ALL
	A02	UNUSED						ALL
	A03	UNUSED						ALL
	A04	UNUSED						ALL
	A05	UNUSED						ALL
	A06	UNUSED						ALL
	A07	UNUSED						ALL
	A08	UNUSED						ALL
	A09	UNUSED						ALL
	A10	UNUSED						ALL
	A11	UNUSED						ALL
	A12	UNUSED						ALL
	A13	UNUSED						ALL
	A14	UNUSED						ALL
	A15	UNUSED						ALL
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04	UNUSED						ALL
	B05	UNUSED						ALL
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13	UNUSED						ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	C01	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00300

Page 83

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00361A		//		PLUG-PART OF D00361 (continued)				ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05	UNUSED						ALL
	C06	UNUSED						ALL
	C07	UNUSED						ALL
	C08	UNUSED						ALL
	C09	UNUSED						ALL
	C10	UNUSED						ALL
	C11	UNUSED						ALL
	C12	UNUSED						ALL
	C13	UNUSED						ALL
	C14	UNUSED						ALL
	C15	UNUSED						ALL
	D01	UNUSED						ALL
	D02	UNUSED						ALL
	D03	UNUSED						ALL
	D04	UNUSED						ALL
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	D08	UNUSED						ALL
	D09	UNUSED						ALL
	D10	UNUSED						ALL
	D11	UNUSED						ALL
	D12	UNUSED						ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15	UNUSED						ALL
	E01	UNUSED						ALL
	E02	UNUSED						ALL
	E03	UNUSED						ALL
	E04	UNUSED						ALL
	E05	UNUSED						ALL
	E06	UNUSED						ALL
	E07	UNUSED						ALL
	E08	UNUSED						ALL
	E09	UNUSED						ALL
	E10	UNUSED						ALL
	E11	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00300

Page 84

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00361A		//		PLUG-PART OF D00361 (continued)				ALL
	E12	UNUSED						ALL
	E13	UNUSED						ALL
	E14	UNUSED						ALL
	E15	UNUSED						ALL
	F01	UNUSED						ALL
	F02	UNUSED						ALL
	F03	UNUSED						ALL
	F04	UNUSED						ALL
	F05	UNUSED						ALL
	F06	UNUSED						ALL
	F07	UNUSED						ALL
	F08	UNUSED						ALL
	F09	UNUSED						ALL
	F10	UNUSED						ALL
	F11	UNUSED						ALL
	F12	UNUSED						ALL
	F13	UNUSED						ALL
	F14	UNUSED						ALL
	F15	UNUSED						ALL
	G01	UNUSED						ALL
	G02	UNUSED						ALL
	G03	UNUSED						ALL
	G04	UNUSED						ALL
	G05	UNUSED						ALL
	G06	UNUSED						ALL
	G07	UNUSED						ALL
	G08	UNUSED						ALL
	G09	UNUSED						ALL
	G10	UNUSED						ALL
	G11	UNUSED						ALL
	G12	UNUSED						ALL
	G13	UNUSED						ALL
	G14	UNUSED						ALL
	G15	UNUSED						ALL
	H01	UNUSED						ALL
	H02	UNUSED						ALL
	H03	UNUSED						ALL
	H04	UNUSED						ALL
	H05	UNUSED						ALL
	H06	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D00300
Page 85
Mar 14/2007

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00361A		//		PLUG-PART OF D00361 (continued)				ALL
	H07	UNUSED						ALL
	H08	UNUSED						ALL
	H09	UNUSED						ALL
	H10	UNUSED						ALL
	H11	UNUSED						ALL
	H12	UNUSED						ALL
	H13	UNUSED						ALL
	H14	UNUSED						ALL
	H15	UNUSED						ALL
	J01	UNUSED						ALL
	J02	UNUSED						ALL
	J03	UNUSED						ALL
	J04	UNUSED						ALL
	J05	UNUSED						ALL
	J06	UNUSED						ALL
	J07	UNUSED						ALL
	J08	UNUSED						ALL
	J09	UNUSED						ALL
	J10	UNUSED						ALL
	J11	UNUSED						ALL
	J12	UNUSED						ALL
	J13	UNUSED						ALL
	J14	UNUSED						ALL
	J15	UNUSED						ALL
	K01	UNUSED						ALL
	K02	UNUSED						ALL
	K03	UNUSED						ALL
	K04	UNUSED						ALL
	K05	UNUSED						ALL
	K06	UNUSED						ALL
	K07	UNUSED						ALL
	K08	UNUSED						ALL
	K09	UNUSED						ALL
	K10	UNUSED						ALL
	K11	UNUSED						ALL
	K12	UNUSED						ALL
	K13	UNUSED						ALL
	K14	UNUSED						ALL
	K15	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00300

Page 86

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00361B		//		PLUG-PART OF D00361				ALL
	71		W1071	01CX			34-55-21	ALL
	A01		W0145	293R	24		23-51-12	ALL
	A02	UNUSED						ALL
	A03		W0145	291R	24		34-55-21	ALL
	A04	UNUSED						ALL
	A05	UNUSED						ALL
	A06	UNUSED						ALL
	A07	UNUSED						ALL
	B01		W0145	293B	24		23-51-12	ALL
	B02	UNUSED						ALL
	B03		W0145	291B	24		34-55-21	ALL
	B04	UNUSED						ALL
	B05		W0145	088	24		34-55-21	ALL
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	C01	UNUSED						ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05	UNUSED						ALL
	C06	UNUSED						ALL
	C07	UNUSED						ALL
	D01	UNUSED						ALL
	D02	UNUSED						ALL
	D03		W0145	290R	24		34-55-21	ALL
	D04	UNUSED						ALL
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	E01	UNUSED						ALL
	E02	UNUSED						ALL
	E03		W0145	290B	24		34-55-21	ALL
	E04	UNUSED						ALL
	E05	UNUSED						ALL
	E06	UNUSED						ALL
	E07	UNUSED						ALL
	F01	UNUSED						ALL
	F02	UNUSED						ALL
	F03	UNUSED						ALL
	F04	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D00300
Page 87
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00361B		//		PLUG-PART OF D00361 (continued)				ALL
	F05	UNUSED						ALL
	F06	UNUSED						ALL
	F07	UNUSED						ALL
	G01		W0145	292R	24		34-61-22	ALL
	G02	UNUSED						ALL
	G03		W0145	281R	24		34-55-21	ALL
	G04	UNUSED						ALL
	G05	UNUSED						ALL
	G06	UNUSED						ALL
	G07	UNUSED						ALL
	H01		W0145	292B	24		34-61-22	ALL
	H02	UNUSED						ALL
	H03		W0145	281B	24		34-55-21	ALL
	H04	UNUSED						ALL
	H05	UNUSED						ALL
	H06	UNUSED						ALL
	H07	UNUSED						ALL
	J01	UNUSED						ALL
	J02	UNUSED						ALL
	J03	UNUSED						ALL
	J04	UNUSED						ALL
	J05	UNUSED						ALL
	J06	UNUSED						ALL
	J07	UNUSED						ALL
	K01	UNUSED						ALL
	K02	UNUSED						ALL
	K03	UNUSED						ALL
	K04	UNUSED						ALL
	K05		W0145	089	24		34-55-21	ALL
	K06	UNUSED						ALL
	K07	UNUSED						ALL
	=C71		W1071	01CO			34-55-21	ALL
	DED		W0145	281Z			34-55-21	ALL
	DED		W0145	291Z			34-55-21	ALL
	DED		W0145	292Z			34-61-22	ALL
	REF		W0145	290	20		34-55-21	ALL
	REF		W0145	290Z			34-55-21	ALL
D00361C		//		PLUG-PART OF D00361				ALL
	1		W0145	085	22		34-55-21	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00300

Page 88

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00361C		//		PLUG-PART OF D00361 (continued)				ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W0145	086	20		34-55-21	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11		W0145	087	20		34-55-21	ALL
	12		W1095	01CX			34-55-21	ALL
	13	UNUSED						ALL
	=C12		W1095	01CO			34-55-21	ALL
	=C13	UNUSED						ALL
	DED		W0145	085Z			34-55-21	ALL
D00362		SHELF/E03/02		PLUG-				ALL
	1		W0256	010	14		24-33-11	ALL
	2		W0256	013	14		24-33-11	ALL
	3		W0256	012	14		24-33-11	ALL
	4	UNUSED						ALL
	DED		W0256	010Z			24-33-11	ALL
D00364		0287/123/R005		PLUG-				ALL
	1		W0256	007	24		24-31-11	ALL
	2	UNUSED						ALL
	3		W0256	008	24		24-31-11	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8		W0256	014	24		24-31-11	ALL
	9		W0256	015	20		24-31-11	ALL
	10	UNUSED						ALL
	11		W0256	005	24		24-31-11	ALL
	12		W0256	006	24		24-31-11	ALL
D00366		0286/126/R010		PLUG-				ALL
	+	Q	W0258	001	*1		24-31-11	ALL
	-	Q	W0258	002	*1		24-31-11	ALL

HOOKUP LIST
D280T132

91-21-51
Section D00300
Page 89
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00367A		//		PLUG-PART OF D00367				ALL
	A01	UNUSED						ALL
	A02	UNUSED						ALL
	A03	UNUSED						ALL
	A04	UNUSED						ALL
	A05	UNUSED						ALL
	A06	UNUSED						ALL
	A07	UNUSED						ALL
	A08	UNUSED						ALL
	A09	UNUSED						ALL
	A10	UNUSED						ALL
	A11	UNUSED						ALL
	A12	UNUSED						ALL
	A13	UNUSED						ALL
	A14	UNUSED						ALL
	A15	UNUSED						ALL
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04	UNUSED						ALL
	B05	UNUSED						ALL
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13	UNUSED						ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	C01	UNUSED						ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05	UNUSED						ALL
	C06	UNUSED						ALL
	C07	UNUSED						ALL
	C08	UNUSED						ALL
	C09	UNUSED						ALL
	C10	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00300

Page 90

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00367A		//		PLUG-PART OF D00367 (continued)				ALL
	C11	UNUSED						ALL
	C12	UNUSED						ALL
	C13	UNUSED						ALL
	C14	UNUSED						ALL
	C15	UNUSED						ALL
	D01	UNUSED						ALL
	D02	UNUSED						ALL
	D03	UNUSED						ALL
	D04	UNUSED						ALL
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	D08	UNUSED						ALL
	D09	UNUSED						ALL
	D10	UNUSED						ALL
	D11	UNUSED						ALL
	D12	UNUSED						ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15	UNUSED						ALL
	E01	UNUSED						ALL
	E02	UNUSED						ALL
	E03	UNUSED						ALL
	E04	UNUSED						ALL
	E05	UNUSED						ALL
	E06	UNUSED						ALL
	E07	UNUSED						ALL
	E08	UNUSED						ALL
	E09	UNUSED						ALL
	E10	UNUSED						ALL
	E11	UNUSED						ALL
	E12	UNUSED						ALL
	E13	UNUSED						ALL
	E14	UNUSED						ALL
	E15	UNUSED						ALL
	F01	UNUSED						ALL
	F02	UNUSED						ALL
	F03	UNUSED						ALL
	F04	UNUSED						ALL
	F05	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00300

Page 91

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00367A		//		PLUG-PART OF D00367 (continued)				ALL
	F06	UNUSED						ALL
	F07	UNUSED						ALL
	F08	UNUSED						ALL
	F09	UNUSED						ALL
	F10	UNUSED						ALL
	F11	UNUSED						ALL
	F12	UNUSED						ALL
	F13	UNUSED						ALL
	F14	UNUSED						ALL
	F15	UNUSED						ALL
	G01	UNUSED						ALL
	G02	UNUSED						ALL
	G03	UNUSED						ALL
	G04	UNUSED						ALL
	G05	UNUSED						ALL
	G06	UNUSED						ALL
	G07	UNUSED						ALL
	G08	UNUSED						ALL
	G09	UNUSED						ALL
	G10	UNUSED						ALL
	G11	UNUSED						ALL
	G12	UNUSED						ALL
	G13	UNUSED						ALL
	G14	UNUSED						ALL
	G15	UNUSED						ALL
	H01	UNUSED						ALL
	H02	UNUSED						ALL
	H03	UNUSED						ALL
	H04	UNUSED						ALL
	H05	UNUSED						ALL
	H06	UNUSED						ALL
	H07	UNUSED						ALL
	H08	UNUSED						ALL
	H09	UNUSED						ALL
	H10	UNUSED						ALL
	H11	UNUSED						ALL
	H12	UNUSED						ALL
	H13	UNUSED						ALL
	H14	UNUSED						ALL
	H15	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00300

Page 92

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00367A		//		PLUG-PART OF D00367 (continued)				ALL
	J01	UNUSED						ALL
	J02	UNUSED						ALL
	J03	UNUSED						ALL
	J04	UNUSED						ALL
	J05	UNUSED						ALL
	J06	UNUSED						ALL
	J07	UNUSED						ALL
	J08	UNUSED						ALL
	J09	UNUSED						ALL
	J10	UNUSED						ALL
	J11	UNUSED						ALL
	J12	UNUSED						ALL
	J13	UNUSED						ALL
	J14	UNUSED						ALL
	J15	UNUSED						ALL
	K01	UNUSED						ALL
	K02	UNUSED						ALL
	K03	UNUSED						ALL
	K04	UNUSED						ALL
	K05	UNUSED						ALL
	K06	UNUSED						ALL
	K07	UNUSED						ALL
	K08	UNUSED						ALL
	K09	UNUSED						ALL
	K10	UNUSED						ALL
	K11	UNUSED						ALL
	K12	UNUSED						ALL
	K13	UNUSED						ALL
	K14	UNUSED						ALL
	K15	UNUSED						ALL
D00367B		//		PLUG-PART OF D00367				ALL
	A01		W0161	080	24		34-21-11	050-099, 150-199
	A01		W0161	010	24		34-21-11	275-299
	A02		W0161	081	24		34-21-11	ALL
	A03	UNUSED						ALL
	A04	UNUSED						ALL
	A05	UNUSED						ALL
	A06	UNUSED						ALL
	A07	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D00300
Page 93
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00367B		//		PLUG-PART OF D00367 (continued)				ALL
	A08		W0161	207R	24		34-21-11	ALL
	A09		W0161	207B	24		34-21-11	ALL
	A10	UNUSED						ALL
	A11	UNUSED						ALL
	A12	UNUSED						ALL
	A13		W0161	208R	24		34-21-11	ALL
	A14		W0161	208B	24		34-21-11	ALL
	A15	UNUSED						ALL
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04	UNUSED						ALL
	B05	UNUSED						ALL
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13	UNUSED						ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	C01	UNUSED						ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05		W0161	203R	24		34-21-11	ALL
	C06		W0161	203B	24		34-21-11	ALL
	C07	UNUSED						ALL
	C08	UNUSED						ALL
	C09	UNUSED						ALL
	C10		W0161	204R	24		34-21-11	ALL
	C11		W0161	204B	24		34-21-11	ALL
	C12	UNUSED						ALL
	C13	UNUSED						ALL
	C14	UNUSED						ALL
	C15	UNUSED						ALL
	D01		W0161	003	22		34-21-11	ALL
	D02		W0161	004	22		34-21-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00300

Page 94

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00367B		//		PLUG-PART OF D00367 (continued)				ALL
	D03		W0161	005	22		34-21-11	ALL
	D04	UNUSED						ALL
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	D08	UNUSED						ALL
	D09	UNUSED						ALL
	D10	UNUSED						ALL
	D11	UNUSED						ALL
	D12	UNUSED						ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15	UNUSED						ALL
	E01	UNUSED						ALL
	E02	UNUSED						ALL
	E03	UNUSED						ALL
	E04	UNUSED						ALL
	E05		W0161	209R	24		34-21-11	ALL
	E06		W0161	209B	24		34-21-11	ALL
	E07	UNUSED						ALL
	E08		W0161	048	22		33-16-17	ALL
	E09		W0161	022	22		34-21-11	ALL
	E10		W0161	020	22		34-21-11	ALL
	E11		W0161	019	22		34-21-11	ALL
	E12		W0161	018	22		34-21-11	ALL
	E13		W0161	014	22		34-21-11	ALL
	E14	UNUSED						ALL
	E15	UNUSED						ALL
	F01		W0161	012	24		34-21-11	ALL
	F02		W0161	013	24		34-21-11	ALL
	F03	UNUSED						ALL
	F04	UNUSED						ALL
	F05	UNUSED						ALL
	F06	UNUSED						ALL
	F07	UNUSED						ALL
	F08	UNUSED						ALL
	F09	UNUSED						ALL
	F10	UNUSED						ALL
	F11	UNUSED						ALL
	F12	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00300

Page 95

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00367B		//		PLUG-PART OF D00367 (continued)				ALL
	F13	UNUSED						ALL
	F14	UNUSED						ALL
	F15	UNUSED						ALL
	G01	UNUSED						ALL
	G02	UNUSED						ALL
	G03	UNUSED						ALL
	G04	UNUSED						ALL
	G05	UNUSED						ALL
	G06	UNUSED						ALL
	G07		W0161	210R	24		34-21-11	ALL
	G08		W0161	210B	24		34-21-11	ALL
	G09	UNUSED						ALL
	G10	UNUSED						ALL
	G11	UNUSED						ALL
	G12	UNUSED						ALL
	G13	UNUSED						ALL
	G14	UNUSED						ALL
	G15	UNUSED						ALL
	H01	UNUSED						ALL
	H02	UNUSED						ALL
	H03	UNUSED						ALL
	H04	UNUSED						ALL
	H05	UNUSED						ALL
	H06	UNUSED						ALL
	H07	UNUSED						ALL
	H08	UNUSED						ALL
	H09	UNUSED						ALL
	H10	UNUSED						ALL
	H11	UNUSED						ALL
	H12	UNUSED						ALL
	H13	UNUSED						ALL
	H14	UNUSED						ALL
	H15	UNUSED						ALL
	J01	UNUSED						ALL
	J02	UNUSED						ALL
	J03	UNUSED						ALL
	J04	UNUSED						ALL
	J05	UNUSED						ALL
	J06	UNUSED						ALL
	J07	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00300

Page 96

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00367B		//		PLUG-PART OF D00367 (continued)				ALL
	J08	UNUSED						ALL
	J09	UNUSED						ALL
	J10		W0161	216R	24		34-21-11	ALL
	J11		W0161	216B	24		34-21-11	ALL
	J12	UNUSED						ALL
	J13		W0161	036	24		34-21-11	ALL
	J14	UNUSED						ALL
	J15	UNUSED						ALL
	K01	UNUSED						ALL
	K02	UNUSED						ALL
	K03	UNUSED						050-099
	K03		W0161	083	24		34-21-11	150-199, 275-299
	K04		W0161	205R	24		34-21-11	ALL
	K05		W0161	205B	24		34-21-11	ALL
	K06	UNUSED						ALL
	K07	UNUSED						ALL
	K08	UNUSED						ALL
	K09		W0161	082	24		34-21-11	050-099, 150-199
	K09	UNUSED						275-299
	K10	UNUSED						ALL
	K11	UNUSED						ALL
	K12	UNUSED						ALL
	K13	UNUSED						ALL
	K14	UNUSED						ALL
	K15	UNUSED						ALL
	DED		W0161	203Z			34-21-11	ALL
	DED		W0161	204Z			34-21-11	ALL
	DED		W0161	205Z			34-21-11	ALL
	DED		W0161	208Z			34-21-11	ALL
	DED		W0161	209Z			34-21-11	ALL
	DED		W0161	210Z			34-21-11	ALL
	DED		W0161	216Z			34-21-11	ALL
	DED		W0161	207	20		34-21-11	ALL
	DED		W0161	207Z			34-21-11	ALL
D00367C		//		PLUG-PART OF D00367				ALL
	1		W0161	006	24		34-21-11	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D00300
Page 97
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00367C		//		PLUG-PART OF D00367 (continued)				ALL
	5		W0161	007	20		34-21-11	ALL
	6	UNUSED						ALL
	7		W0161	021	12		34-21-11	ALL
	8		W0161	008	16		34-21-11	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11		W0161	009	16		34-21-11	ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	= C12	UNUSED						ALL
	= C13	UNUSED						ALL
	DED		W0161	006Z			34-21-11	ALL
D00369A		//		PLUG-PART OF D00369				ALL
	A01	UNUSED						ALL
	A02	UNUSED						ALL
	A03	UNUSED						ALL
	A04	UNUSED						ALL
	A05	UNUSED						ALL
	A06	UNUSED						ALL
	A07	UNUSED						ALL
	A08	UNUSED						ALL
	A09	UNUSED						ALL
	A10	UNUSED						ALL
	A11	UNUSED						ALL
	A12	UNUSED						ALL
	A13	UNUSED						ALL
	A14	UNUSED						ALL
	A15	UNUSED						ALL
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04	UNUSED						ALL
	B05	UNUSED						ALL
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00300

Page 98

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00369A		//		PLUG-PART OF D00369 (continued)				ALL
	B12	UNUSED						ALL
	B13	UNUSED						ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	C01	UNUSED						ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05	UNUSED						ALL
	C06	UNUSED						ALL
	C07	UNUSED						ALL
	C08	UNUSED						ALL
	C09	UNUSED						ALL
	C10	UNUSED						ALL
	C11	UNUSED						ALL
	C12	UNUSED						ALL
	C13	UNUSED						ALL
	C14	UNUSED						ALL
	C15	UNUSED						ALL
	D01	UNUSED						ALL
	D02	UNUSED						ALL
	D03	UNUSED						ALL
	D04	UNUSED						ALL
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	D08	UNUSED						ALL
	D09	UNUSED						ALL
	D10	UNUSED						ALL
	D11	UNUSED						ALL
	D12	UNUSED						ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15	UNUSED						ALL
	E01	UNUSED						ALL
	E02	UNUSED						ALL
	E03	UNUSED						ALL
	E04	UNUSED						ALL
	E05	UNUSED						ALL
	E06	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00300

Page 99

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00369A		//		PLUG-PART OF D00369 (continued)				ALL
	E07	UNUSED						ALL
	E08	UNUSED						ALL
	E09	UNUSED						ALL
	E10	UNUSED						ALL
	E11	UNUSED						ALL
	E12	UNUSED						ALL
	E13	UNUSED						ALL
	E14	UNUSED						ALL
	E15	UNUSED						ALL
	F01	UNUSED						ALL
	F02	UNUSED						ALL
	F03	UNUSED						ALL
	F04	UNUSED						ALL
	F05	UNUSED						ALL
	F06	UNUSED						ALL
	F07	UNUSED						ALL
	F08	UNUSED						ALL
	F09	UNUSED						ALL
	F10	UNUSED						ALL
	F11	UNUSED						ALL
	F12	UNUSED						ALL
	F13	UNUSED						ALL
	F14	UNUSED						ALL
	F15	UNUSED						ALL
	G01	UNUSED						ALL
	G02	UNUSED						ALL
	G03	UNUSED						ALL
	G04	UNUSED						ALL
	G05	UNUSED						ALL
	G06	UNUSED						ALL
	G07	UNUSED						ALL
	G08	UNUSED						ALL
	G09	UNUSED						ALL
	G10	UNUSED						ALL
	G11	UNUSED						ALL
	G12	UNUSED						ALL
	G13	UNUSED						ALL
	G14	UNUSED						ALL
	G15	UNUSED						ALL
	H01	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00300

Page 100

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00369A		//		PLUG-PART OF D00369 (continued)				ALL
	H02	UNUSED						ALL
	H03	UNUSED						ALL
	H04	UNUSED						ALL
	H05	UNUSED						ALL
	H06	UNUSED						ALL
	H07	UNUSED						ALL
	H08	UNUSED						ALL
	H09	UNUSED						ALL
	H10	UNUSED						ALL
	H11	UNUSED						ALL
	H12	UNUSED						ALL
	H13	UNUSED						ALL
	H14	UNUSED						ALL
	H15	UNUSED						ALL
	J01	UNUSED						ALL
	J02	UNUSED						ALL
	J03	UNUSED						ALL
	J04	UNUSED						ALL
	J05	UNUSED						ALL
	J06	UNUSED						ALL
	J07	UNUSED						ALL
	J08	UNUSED						ALL
	J09	UNUSED						ALL
	J10	UNUSED						ALL
	J11	UNUSED						ALL
	J12	UNUSED						ALL
	J13	UNUSED						ALL
	J14	UNUSED						ALL
	J15	UNUSED						ALL
	K01	UNUSED						ALL
	K02	UNUSED						ALL
	K03	UNUSED						ALL
	K04	UNUSED						ALL
	K05	UNUSED						ALL
	K06	UNUSED						ALL
	K07	UNUSED						ALL
	K08	UNUSED						ALL
	K09	UNUSED						ALL
	K10	UNUSED						ALL
	K11	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00300

Page 101

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00369A		//		PLUG-PART OF D00369 (continued)				ALL
	K12	UNUSED						ALL
	K13	UNUSED						ALL
	K14	UNUSED						ALL
	K15	UNUSED						ALL
D00369B		//		PLUG-PART OF D00369				ALL
	A01		W0181	080	24		34-21-31	ALL
	A02		W0181	081	24		34-21-31	050-099, 150-199
	A02		W0181	010	24		34-21-31	275-299
	A03	UNUSED						ALL
	A04	UNUSED						ALL
	A05	UNUSED						ALL
	A06	UNUSED						ALL
	A07	UNUSED						ALL
	A08		W0181	207R	24		34-21-31	ALL
	A09		W0181	207B	24		34-21-31	ALL
	A10	UNUSED						ALL
	A11	UNUSED						ALL
	A12	UNUSED						ALL
	A13		W0181	208R	24		34-21-31	ALL
	A14		W0181	208B	24		34-21-31	ALL
	A15	UNUSED						ALL
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04	UNUSED						ALL
	B05	UNUSED						ALL
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13	UNUSED						ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	C01	UNUSED						ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00300

Page 102

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00369B		//		PLUG-PART OF D00369 (continued)				ALL
	C04	UNUSED						ALL
	C05		W0181	203R	24		34-21-31	ALL
	C06		W0181	203B	24		34-21-31	ALL
	C07	UNUSED						ALL
	C08	UNUSED						ALL
	C09	UNUSED						ALL
	C10		W0181	204R	24		34-21-31	ALL
	C11		W0181	204B	24		34-21-31	ALL
	C12	UNUSED						ALL
	C13	UNUSED						ALL
	C14	UNUSED						ALL
	C15	UNUSED						ALL
	D01		W0181	003	22		34-21-31	ALL
	D02		W0181	004	22		34-21-31	ALL
	D03		W0181	005	22		34-21-31	ALL
	D04	UNUSED						ALL
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	D08	UNUSED						ALL
	D09	UNUSED						ALL
	D10	UNUSED						ALL
	D11	UNUSED						ALL
	D12	UNUSED						ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15	UNUSED						ALL
	E01	UNUSED						ALL
	E02	UNUSED						ALL
	E03	UNUSED						ALL
	E04	UNUSED						ALL
	E05		W0181	209R	24		34-22-38	ALL
	E06		W0181	209B	24		34-22-38	ALL
	E07	UNUSED						ALL
	E08		W0181	048	22		33-16-17	ALL
	E09		W0181	022	22		34-21-31	ALL
	E10		W0181	020	22		34-21-31	ALL
	E11		W0181	019	22		34-21-31	ALL
	E12		W0181	018	22		34-21-31	ALL
	E13		W0181	014	22		34-21-31	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00300

Page 103

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00369B		//		PLUG-PART OF D00369 (continued)				ALL
	E14	UNUSED						ALL
	E15	UNUSED						ALL
	F01		W0181	012	24		34-21-31	ALL
	F02		W0181	013	24		34-21-31	ALL
	F03	UNUSED						ALL
	F04	UNUSED						ALL
	F05	UNUSED						ALL
	F06	UNUSED						ALL
	F07	UNUSED						ALL
	F08	UNUSED						ALL
	F09	UNUSED						ALL
	F10	UNUSED						ALL
	F11	UNUSED						ALL
	F12	UNUSED						ALL
	F13	UNUSED						ALL
	F14	UNUSED						ALL
	F15	UNUSED						ALL
	G01	UNUSED						ALL
	G02	UNUSED						ALL
	G03	UNUSED						ALL
	G04	UNUSED						ALL
	G05	UNUSED						ALL
	G06	UNUSED						ALL
	G07		W0181	211R	24		34-21-31	ALL
	G08		W0181	211B	24		34-21-31	ALL
	G09	UNUSED						ALL
	G10	UNUSED						ALL
	G11	UNUSED						ALL
	G12	UNUSED						ALL
	G13	UNUSED						ALL
	G14	UNUSED						ALL
	G15	UNUSED						ALL
	H01	UNUSED						ALL
	H02	UNUSED						ALL
	H03	UNUSED						ALL
	H04	UNUSED						ALL
	H05	UNUSED						ALL
	H06	UNUSED						ALL
	H07	UNUSED						ALL
	H08	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00300

Page 104

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00369B		//		PLUG-PART OF D00369 (continued)				ALL
	H09	UNUSED						ALL
	H10	UNUSED						ALL
	H11	UNUSED						ALL
	H12	UNUSED						ALL
	H13	UNUSED						ALL
	H14	UNUSED						ALL
	H15	UNUSED						ALL
	J01	UNUSED						ALL
	J02	UNUSED						ALL
	J03	UNUSED						ALL
	J04	UNUSED						ALL
	J05	UNUSED						ALL
	J06	UNUSED						ALL
	J07	UNUSED						ALL
	J08	UNUSED						ALL
	J09	UNUSED						ALL
	J10		W0181	205R	24		34-21-31	ALL
	J11		W0181	205B	24		34-21-31	ALL
	J12	UNUSED						ALL
	J13		W0181	036	24		34-21-31	ALL
	J14	UNUSED						ALL
	J15	UNUSED						ALL
	K01	UNUSED						ALL
	K02	UNUSED						ALL
	K03	UNUSED						050-099
	K03		W0181	083	24		34-21-31	150-199, 275-299
	K04		W0181	219R	24		34-21-31	ALL
	K05		W0181	219B	24		34-21-31	ALL
	K06	UNUSED						ALL
	K07	UNUSED						ALL
	K08	UNUSED						ALL
	K09		W0181	082	24		34-21-31	050-099, 150-199
	K09	UNUSED						275-299
	K10	UNUSED						ALL
	K11	UNUSED						ALL
	K12	UNUSED						ALL
	K13	UNUSED						ALL
	K14	UNUSED						ALL
	K15	UNUSED						ALL
	DED		W0181	203Z			34-21-31	ALL

HOOKUP LIST
D280T132

91-21-51
Section D00300
Page 105
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00369B		//		PLUG-PART OF D00369 (continued)				ALL
	DED		W0181	204Z			34-21-31	ALL
	DED		W0181	205Z			34-21-31	ALL
	DED		W0181	207Z			34-21-31	ALL
	DED		W0181	208Z			34-21-31	ALL
	DED		W0181	211Z			34-21-31	ALL
	DED		W0181	219Z			34-21-31	ALL
			W0181	209	20		34-22-38	ALL
			W0181	209Z			34-22-38	ALL
D00369C		//		PLUG-PART OF D00369				ALL
	1		W0181	006	24		34-21-31	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W0181	007	20		34-21-31	ALL
	6	UNUSED						ALL
	7		W0181	021	12		34-21-31	ALL
	8		W0181	008	16		34-21-31	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11		W0181	009	16		34-21-31	ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	=C12	UNUSED						ALL
	=C13	UNUSED						ALL
	DED		W0181	006Z			34-21-31	ALL
D00370		1142/280/L020		PLUG-				050-099
D00370		1136/290/L020		PLUG-				150-199, 275-299
	1	UNUSED						ALL
	2		W0824	001	22		33-21-14	050-099
	2		W0824	001	20		33-21-14	150-199, 275-299
	3		W0824	002	22		33-21-14	050-099
	3		W0824	002	20		33-21-14	150-199, 275-299
	4	UNUSED						ALL
	5		W0824	003	20		33-21-14	ALL
	6	UNUSED						ALL
	7		W0824	004	20		33-21-14	ALL
	8		W0824	005	20		33-21-14	ALL
	9		W0824	006	22		33-21-14	050-099

HOOKUP LIST

D280T132

91-21-51

Section D00300

Page 106

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00370		1142/280/L020		PLUG- (continued)				050-099
D00370		1136/290/L020		PLUG- (continued)				150-199, 275-299
	9		W0824	006	20		33-21-14	150-199, 275-299
	10		W0824	007	22		33-21-14	050-099
	10		W0824	007	20		33-21-14	150-199, 275-299
	11		W0824	008	22		33-21-14	050-099
	11		W0824	008	20		33-21-14	150-199, 275-299
	12		W0824	009	22		33-21-14	050-099
	12		W0824	009	20		33-21-14	150-199, 275-299
D00371A		//		PLUG-PART OF D00371				ALL
	A01	UNUSED						ALL
	A02	UNUSED						ALL
	A03	UNUSED						ALL
	A04	UNUSED						ALL
	A05	UNUSED						ALL
	A06	UNUSED						ALL
	A07	UNUSED						ALL
	A08	UNUSED						ALL
	A09	UNUSED						ALL
	A10	UNUSED						ALL
	A11	UNUSED						ALL
	A12	UNUSED						ALL
	A13	UNUSED						ALL
	A14	UNUSED						ALL
	A15	UNUSED						ALL
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04	UNUSED						ALL
	B05	UNUSED						ALL
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13	UNUSED						ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00300

Page 107

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00371A		//		PLUG-PART OF D00371 (continued)				ALL
	C01	UNUSED						ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05	UNUSED						ALL
	C06	UNUSED						ALL
	C07	UNUSED						ALL
	C08	UNUSED						ALL
	C09	UNUSED						ALL
	C10	UNUSED						ALL
	C11	UNUSED						ALL
	C12	UNUSED						ALL
	C13	UNUSED						ALL
	C14	UNUSED						ALL
	C15	UNUSED						ALL
	D01	UNUSED						ALL
	D02	UNUSED						ALL
	D03	UNUSED						ALL
	D04	UNUSED						ALL
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	D08	UNUSED						ALL
	D09	UNUSED						ALL
	D10	UNUSED						ALL
	D11	UNUSED						ALL
	D12	UNUSED						ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15	UNUSED						ALL
	E01	UNUSED						ALL
	E02	UNUSED						ALL
	E03	UNUSED						ALL
	E04	UNUSED						ALL
	E05	UNUSED						ALL
	E06	UNUSED						ALL
	E07	UNUSED						ALL
	E08	UNUSED						ALL
	E09	UNUSED						ALL
	E10	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00300

Page 108

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00371A		//		PLUG-PART OF D00371 (continued)				ALL
	E11	UNUSED						ALL
	E12	UNUSED						ALL
	E13	UNUSED						ALL
	E14	UNUSED						ALL
	E15	UNUSED						ALL
	F01	UNUSED						ALL
	F02	UNUSED						ALL
	F03	UNUSED						ALL
	F04	UNUSED						ALL
	F05	UNUSED						ALL
	F06	UNUSED						ALL
	F07	UNUSED						ALL
	F08	UNUSED						ALL
	F09	UNUSED						ALL
	F10	UNUSED						ALL
	F11	UNUSED						ALL
	F12	UNUSED						ALL
	F13	UNUSED						ALL
	F14	UNUSED						ALL
	F15	UNUSED						ALL
	G01	UNUSED						ALL
	G02	UNUSED						ALL
	G03	UNUSED						ALL
	G04	UNUSED						ALL
	G05	UNUSED						ALL
	G06	UNUSED						ALL
	G07	UNUSED						ALL
	G08	UNUSED						ALL
	G09	UNUSED						ALL
	G10	UNUSED						ALL
	G11	UNUSED						ALL
	G12	UNUSED						ALL
	G13	UNUSED						ALL
	G14	UNUSED						ALL
	G15	UNUSED						ALL
	H01	UNUSED						ALL
	H02	UNUSED						ALL
	H03	UNUSED						ALL
	H04	UNUSED						ALL
	H05	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00300

Page 109

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00371A		//		PLUG-PART OF D00371 (continued)				ALL
	H06	UNUSED						ALL
	H07	UNUSED						ALL
	H08	UNUSED						ALL
	H09	UNUSED						ALL
	H10	UNUSED						ALL
	H11	UNUSED						ALL
	H12	UNUSED						ALL
	H13	UNUSED						ALL
	H14	UNUSED						ALL
	H15	UNUSED						ALL
	J01	UNUSED						ALL
	J02	UNUSED						ALL
	J03	UNUSED						ALL
	J04	UNUSED						ALL
	J05	UNUSED						ALL
	J06	UNUSED						ALL
	J07	UNUSED						ALL
	J08	UNUSED						ALL
	J09	UNUSED						ALL
	J10	UNUSED						ALL
	J11	UNUSED						ALL
	J12	UNUSED						ALL
	J13	UNUSED						ALL
	J14	UNUSED						ALL
	J15	UNUSED						ALL
	K01	UNUSED						ALL
	K02	UNUSED						ALL
	K03	UNUSED						ALL
	K04	UNUSED						ALL
	K05	UNUSED						ALL
	K06	UNUSED						ALL
	K07	UNUSED						ALL
	K08	UNUSED						ALL
	K09	UNUSED						ALL
	K10	UNUSED						ALL
	K11	UNUSED						ALL
	K12	UNUSED						ALL
	K13	UNUSED						ALL
	K14	UNUSED						ALL
	K15	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00300

Page 110

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00371B		//		PLUG-PART OF D00371				ALL
	A01		W0171	080	24		34-21-21	ALL
	A02		W0171	081	24		34-21-21	050-099, 150-199
	A02		W0171	010	24		34-21-21	275-299
	A03	UNUSED						ALL
	A04	UNUSED						ALL
	A05	UNUSED						ALL
	A06	UNUSED						ALL
	A07	UNUSED						ALL
	A08		W0171	207R	24		34-21-21	ALL
	A09		W0171	207B	24		34-21-21	ALL
	A10	UNUSED						ALL
	A11	UNUSED						ALL
	A12	UNUSED						ALL
	A13		W0171	224R	24		34-21-21	ALL
	A14		W0171	224B	24		34-21-21	ALL
	A15	UNUSED						ALL
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04	UNUSED						ALL
	B05	UNUSED						ALL
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13	UNUSED						ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	C01	UNUSED						ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05		W0171	203R	24		34-21-21	ALL
	C06		W0171	203B	24		34-21-21	ALL
	C07	UNUSED						ALL
	C08	UNUSED						ALL
	C09	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00300

Page 111

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00371B		//		PLUG-PART OF D00371 (continued)				ALL
	C10		W0171	204R	24		34-21-21	ALL
	C11		W0171	204B	24		34-21-21	ALL
	C12	UNUSED						ALL
	C13	UNUSED						ALL
	C14	UNUSED						ALL
	C15	UNUSED						ALL
	D01		W0171	003	22		34-21-21	ALL
	D02		W0171	004	22		34-21-21	ALL
	D03		W0171	005	22		34-21-21	ALL
	D04	UNUSED						ALL
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	D08	UNUSED						ALL
	D09	UNUSED						ALL
	D10	UNUSED						ALL
	D11	UNUSED						ALL
	D12	UNUSED						ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15	UNUSED						ALL
	E01	UNUSED						ALL
	E02	UNUSED						ALL
	E03	UNUSED						ALL
	E04	UNUSED						ALL
	E05		W0171	225R	24		34-21-21	ALL
	E06		W0171	225B	24		34-21-21	ALL
	E07	UNUSED						ALL
	E08		W0171	048	22		33-16-17	ALL
	E09		W0171	022	22		34-21-21	ALL
	E10		W0171	020	22		34-21-21	ALL
	E11		W0171	019	22		34-21-21	ALL
	E12		W0171	018	22		34-21-21	ALL
	E13		W0171	014	22		34-21-21	ALL
	E14	UNUSED						ALL
	E15	UNUSED						ALL
	F01		W0171	012	24		34-21-21	ALL
	F02		W0171	013	24		34-21-21	ALL
	F03	UNUSED						ALL
	F04	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00300

Page 112

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00371B		//		PLUG-PART OF D00371 (continued)				ALL
	F05	UNUSED						ALL
	F06	UNUSED						ALL
	F07	UNUSED						ALL
	F08	UNUSED						ALL
	F09	UNUSED						ALL
	F10	UNUSED						ALL
	F11	UNUSED						ALL
	F12	UNUSED						ALL
	F13	UNUSED						ALL
	F14	UNUSED						ALL
	F15	UNUSED						ALL
	G01	UNUSED						ALL
	G02	UNUSED						ALL
	G03	UNUSED						ALL
	G04	UNUSED						ALL
	G05	UNUSED						ALL
	G06	UNUSED						ALL
	G07		W0171	226R	24		34-21-21	ALL
	G08		W0171	226B	24		34-21-21	ALL
	G09	UNUSED						ALL
	G10	UNUSED						ALL
	G11	UNUSED						ALL
	G12	UNUSED						ALL
	G13	UNUSED						ALL
	G14	UNUSED						ALL
	G15	UNUSED						ALL
	H01	UNUSED						ALL
	H02	UNUSED						ALL
	H03	UNUSED						ALL
	H04	UNUSED						ALL
	H05	UNUSED						ALL
	H06	UNUSED						ALL
	H07	UNUSED						ALL
	H08	UNUSED						ALL
	H09	UNUSED						ALL
	H10	UNUSED						ALL
	H11	UNUSED						ALL
	H12	UNUSED						ALL
	H13	UNUSED						ALL
	H14	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D00300
Page 113
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00371B		//		PLUG-PART OF D00371 (continued)				ALL
	H15	UNUSED						ALL
	J01	UNUSED						ALL
	J02	UNUSED						ALL
	J03	UNUSED						ALL
	J04	UNUSED						ALL
	J05	UNUSED						ALL
	J06	UNUSED						ALL
	J07	UNUSED						ALL
	J08	UNUSED						ALL
	J09	UNUSED						ALL
	J10		W0171	216R	24		34-21-21	ALL
	J11		W0171	216B	24		34-21-21	ALL
	J12	UNUSED						ALL
	J13		W0171	036	24		34-21-21	ALL
	J14	UNUSED						ALL
	J15	UNUSED						ALL
	K01	UNUSED						ALL
	K02	UNUSED						ALL
	K03	UNUSED						050-099
	K03		W0171	083	24		34-21-21	150-199, 275-299
	K04		W0171	205R	24		34-21-21	ALL
	K05		W0171	205B	24		34-21-21	ALL
	K06	UNUSED						ALL
	K07	UNUSED						ALL
	K08	UNUSED						ALL
	K09		W0171	082	24		34-21-21	050-099, 150-199
	K09	UNUSED						275-299
	K10	UNUSED						ALL
	K11	UNUSED						ALL
	K12	UNUSED						ALL
	K13	UNUSED						ALL
	K14	UNUSED						ALL
	K15	UNUSED						ALL
	DED		W0171	203Z			34-21-21	ALL
	DED		W0171	204Z			34-21-21	ALL
	DED		W0171	205Z			34-21-21	ALL
	DED		W0171	207Z			34-21-21	ALL
	DED		W0171	216Z			34-21-21	ALL
	DED		W0171	224Z			34-21-21	ALL
	DED		W0171	225Z			34-21-21	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00300

Page 114

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00371B		//		PLUG-PART OF D00371 (continued)				ALL
	DED		W0171	226Z			34-21-21	ALL
D00371C		//		PLUG-PART OF D00371				ALL
	1		W0171	006	24		34-21-21	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W0171	007	20		34-21-21	ALL
	6	UNUSED						ALL
	7		W0171	021	12		34-21-21	ALL
	8		W0171	008	16		34-21-21	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11		W0171	009	16		34-21-21	ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	=C12	UNUSED						ALL
	=C13	UNUSED						ALL
	DED		W0171	006Z			34-21-21	ALL
D00372		P030-00/ /		RCPT-EXT PWR				ALL
	A	H	W0232	001	*1		24-41-11	ALL
	B	H	W0232	002	*1		24-41-11	ALL
	C	H	W0232	003	*1		24-41-11	ALL
	E	E	W0248	037	24		24-41-11	ALL
	F	E	W0248	038	24		24-41-11	ALL
	N	H	W0232	004	*1		24-41-11	ALL
D00373A		//		PLUG-PART OF D00373				ALL
	A01		W1119	236R	24		22-12-11	ALL
	A02	UNUSED						ALL
	A03		W1119	223R	24		34-22-28	ALL
	A04	UNUSED						ALL
	A05	UNUSED						ALL
	A06	UNUSED						ALL
	A07	UNUSED						ALL
	A08	UNUSED						ALL
	A09		W1119	029	24		34-22-24	ALL
	A10	UNUSED						ALL
	A11	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00300

Page 115

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00373A		//		PLUG-PART OF D00373 (continued)				ALL
	A12	UNUSED						ALL
	A13	UNUSED						ALL
	A14	UNUSED						ALL
	A15	UNUSED						ALL
	B01		W1119	236B	24		22-12-11	ALL
	B02	UNUSED						ALL
	B03		W1119	223B	24		34-22-28	ALL
	B04	UNUSED						ALL
	B05	UNUSED						ALL
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09		W1119	028	24		34-22-24	ALL
	B10	UNUSED						050-099, 150-152, 155-156, 162-166, 275-276
	B10		W1119	608	22		34-22-26	153-154, 157, 167-199, 277-299
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13	UNUSED						ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	C01	UNUSED						ALL
	C02		W1119	243R	24		34-22-23	ALL
	C03	UNUSED						ALL
	C04		W1119	227R	24		34-22-29	ALL
	C05	UNUSED						ALL
	C06	UNUSED						ALL
	C07	UNUSED						ALL
	C08	UNUSED						ALL
	C09		W1119	027	24		34-22-24	ALL
	C10	UNUSED						ALL
	C11	UNUSED						ALL
	C12	UNUSED						ALL
	C13	UNUSED						ALL
	C14		W1119	112	24		34-22-26	ALL
	C15	UNUSED						ALL
	D01	UNUSED						ALL
	D02		W1119	243B	24		34-22-23	ALL
	D03	UNUSED						ALL
	D04		W1119	227B	24		34-22-29	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00300

Page 116

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00373A		//		PLUG-PART OF D00373 (continued)				ALL
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	D08	UNUSED						ALL
	D09	UNUSED						ALL
	D10	UNUSED						ALL
	D11	UNUSED						ALL
	D12	UNUSED						ALL
	D13	UNUSED						ALL
	D14		W1119	128	22		34-22-26	ALL
	D15	UNUSED						ALL
	E01	UNUSED						ALL
	E02	UNUSED						ALL
	E03		W1119	235W	24		34-43-21	ALL
	E04	UNUSED						ALL
	E05	UNUSED						ALL
	E06	UNUSED						ALL
	E07	UNUSED						ALL
	E08	UNUSED						ALL
	E09	UNUSED						ALL
	E10	UNUSED						ALL
	E11	UNUSED						ALL
	E12		W1119	016	22		34-31-21	ALL
	E13	UNUSED						ALL
	E14	UNUSED						ALL
	E15	UNUSED						ALL
	F01	UNUSED						ALL
	F02	UNUSED						ALL
	F03		W1119	235WB	24		34-43-21	ALL
	F04	UNUSED						ALL
	F05	UNUSED						ALL
	F06	UNUSED						ALL
	F07	UNUSED						ALL
	F08	UNUSED						ALL
	F09		W1119	030	24		34-22-24	ALL
	F10	UNUSED						ALL
	F11	UNUSED						ALL
	F12		W1119	073	24		34-22-27	ALL
	F13	UNUSED						ALL
	F14	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D00300
Page 117
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00373A		//		PLUG-PART OF D00373 (continued)				ALL
	F15	UNUSED						ALL
	G01	UNUSED						ALL
	G02	UNUSED						ALL
	G03	UNUSED						ALL
	G04	UNUSED						ALL
	G05	UNUSED						ALL
	G06		W1119	241R	24		34-22-28	ALL
	G07	UNUSED						ALL
	G08	UNUSED						ALL
	G09		W1119	031	24		34-22-24	ALL
	G10	UNUSED						ALL
	G11	UNUSED						ALL
	G12		W1119	023	22		34-22-27	ALL
	G13	UNUSED						ALL
	G14	UNUSED						ALL
	G15	UNUSED						ALL
	H01	UNUSED						ALL
	H02	UNUSED						ALL
	H03	UNUSED						ALL
	H04	UNUSED						ALL
	H05	UNUSED						ALL
	H06		W1119	241B	24		34-22-28	ALL
	H07	UNUSED						ALL
	H08	UNUSED						ALL
	H09		W1119	032	24		34-22-24	ALL
	H10	UNUSED						ALL
	H11	UNUSED						ALL
	H12	UNUSED						ALL
	H13	UNUSED						ALL
	H14	UNUSED						ALL
	H15	UNUSED						ALL
	J01		W1119	233R	24		34-22-29	ALL
	J02	UNUSED						ALL
	J03	UNUSED						ALL
	J04	UNUSED						ALL
	J05		W1119	228R	24		34-22-29	ALL
	J06	UNUSED						ALL
	J07	UNUSED						ALL
	J08	UNUSED						ALL
	J09		W1119	560R	24		34-45-14	050-099, 150-156, 162-166, 275-276

HOOKUP LIST
D280T132

91-21-51
Section D00300
Page 118
Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00373A		//		PLUG-PART OF D00373 (continued)				ALL
	J09	UNUSED						157, 167-199, 277-299
	J10	UNUSED						ALL
	J11	UNUSED						ALL
	J12	UNUSED						ALL
	J13	UNUSED						ALL
	J14	UNUSED						ALL
	J15	UNUSED						ALL
	K01		W1119	233B	24		34-22-29	ALL
	K02	UNUSED						ALL
	K03	UNUSED						ALL
	K04	UNUSED						ALL
	K05		W1119	228B	24		34-22-29	ALL
	K06	UNUSED						ALL
	K07	UNUSED						ALL
	K08	UNUSED						ALL
	K09		W1119	560B	24		34-45-14	050-099, 150-156, 162-166, 275-276
	K09	UNUSED						157, 167-199, 277-299
	K10	UNUSED						ALL
	K11	UNUSED						ALL
	K12	UNUSED						ALL
	K13		W1119	107	24		34-22-26	ALL
	K14	UNUSED						ALL
	K15	UNUSED						ALL
	DED		W1119	560Z			34-45-14	050-099, 150-156, 162-166, 275-276
	DED		W1119	223Z			34-22-28	ALL
	DED		W1119	227Z			34-22-29	ALL
	DED		W1119	228Z			34-22-29	ALL
	DED		W1119	233Z			34-22-29	ALL
	DED		W1119	235Z			34-43-21	ALL
	DED		W1119	236Z			22-12-11	ALL
	DED		W1119	241Z			34-22-28	ALL
			W1119	243	20		34-22-23	ALL
			W1119	243Z			34-22-23	ALL
D00373B		//		PLUG-PART OF D00373				ALL
	A01		W1119	234R	24		22-12-31	ALL
	A02	UNUSED						ALL
	A03	UNUSED						ALL
	A04	UNUSED						ALL
	A05		W1119	221R	24		34-22-28	ALL

HOOKUP LIST
D280T132

91-21-51
Section D00300
Page 119
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00373B		//		PLUG-PART OF D00373 (continued)				ALL
	A06	UNUSED						ALL
	A07		W1119	501WN	26		34-22-34	ALL
	A08		W1119	502WN	26		34-22-34	ALL
	A09		W1119	503WN	26		34-22-34	ALL
	A10		W1119	504WN	26		34-22-34	ALL
	A11		W1119	505WN	26		34-22-34	ALL
	A12		W1119	506WN	26		34-22-34	ALL
	A13		W1119	507WN	26		34-22-34	ALL
	A14		W1119	508WN	26		34-22-34	ALL
	A15		W1119	509WN	26		34-22-34	ALL
	B01		W1119	234B	24		22-12-31	ALL
	B02	UNUSED						050-099, 150-152, 155-199, 275-299
	B02		W1119	609	22		34-22-26	153-154
	B03	UNUSED						ALL
	B04		W1119	125	22		34-22-26	ALL
	B05		W1119	221B	24		34-22-28	ALL
	B06	UNUSED						ALL
	B07		W1119	501W	26		34-22-34	ALL
	B08		W1119	502W	26		34-22-34	ALL
	B09		W1119	503W	26		34-22-34	ALL
	B10		W1119	504W	26		34-22-34	ALL
	B11		W1119	505W	26		34-22-34	ALL
	B12		W1119	506W	26		34-22-34	ALL
	B13		W1119	507W	26		34-22-34	ALL
	B14		W1119	508W	26		34-22-34	ALL
	B15		W1119	509W	26		34-22-34	ALL
	C01	UNUSED						ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05	UNUSED						ALL
	C06	UNUSED						ALL
	C07	UNUSED						ALL
	C08	UNUSED						ALL
	C09	UNUSED						ALL
	C10	UNUSED						ALL
	C11	UNUSED						ALL
	C12	UNUSED						ALL
	C13	UNUSED						ALL
	C14	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00300

Page 120

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00373B		//		PLUG-PART OF D00373 (continued)				ALL
	C15	UNUSED						ALL
	D01	UNUSED						ALL
	D02	UNUSED						ALL
	D03	UNUSED						ALL
	D04	UNUSED						ALL
	D05		W1119	109	22		34-22-26	ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	D08		W1119	094	22		34-22-26	ALL
	D09	UNUSED						ALL
	D10		W1119	097	22		34-22-26	ALL
	D11		W1119	102	22		34-22-26	ALL
	D12		W1119	098	22		34-22-26	ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15	UNUSED						ALL
	E01	UNUSED						ALL
	E02	UNUSED						ALL
	E03	UNUSED						ALL
	E04	UNUSED						ALL
	E05	UNUSED						ALL
	E06	UNUSED						ALL
	E07	UNUSED						ALL
	E08	UNUSED						ALL
	E09	UNUSED						ALL
	E10		W1119	056	22		34-22-26	ALL
	E11	UNUSED						ALL
	E12	UNUSED						ALL
	E13	UNUSED						ALL
	E14	UNUSED						ALL
	E15	UNUSED						ALL
	F01	UNUSED						ALL
	F02	UNUSED						ALL
	F03	UNUSED						ALL
	F04	UNUSED						ALL
	F05	UNUSED						ALL
	F06		W1119	123	22		34-22-26	ALL
	F07	UNUSED						ALL
	F08		W1119	015	22		34-22-26	ALL
	F09		W1119	091	22		34-22-26	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00300

Page 121

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00373B		//		PLUG-PART OF D00373 (continued)				ALL
	F10	UNUSED						ALL
	F11	UNUSED						ALL
	F12	UNUSED						ALL
	F13	UNUSED						ALL
	F14	UNUSED						ALL
	F15	UNUSED						ALL
	G01	UNUSED						ALL
	G02	UNUSED						ALL
	G03		W1119	604	22		34-22-26	ALL
	G04		W1119	229R	24		34-22-29	ALL
	G05	UNUSED						ALL
	G06		W1119	126	22		34-22-26	ALL
	G07	UNUSED						ALL
	G08	UNUSED						ALL
	G09		W1119	092	22		34-22-26	ALL
	G10	UNUSED						ALL
	G11	UNUSED						ALL
	G12		W1119	605	22		34-22-26	ALL
	G13	UNUSED						ALL
	G14	UNUSED						ALL
	G15	UNUSED						ALL
	H01	UNUSED						ALL
	H02	UNUSED						ALL
	H03	UNUSED						050-099, 150-152, 155-156, 162-166, 275-276
	H03		W1119	606	22		34-22-26	153-154, 157, 167-199, 277-299
	H04		W1119	229B	24		34-22-29	ALL
	H05	UNUSED						ALL
	H06	UNUSED						ALL
	H07	UNUSED						ALL
	H08	UNUSED						ALL
	H09	UNUSED						ALL
	H10	UNUSED						ALL
	H11	UNUSED						ALL
	H12	UNUSED						ALL
	H13	UNUSED						ALL
	H14	UNUSED						ALL
	H15	UNUSED						ALL
	J01	UNUSED						ALL
	J02	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00300

Page 122

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00373B		//		PLUG-PART OF D00373 (continued)				ALL
	J03	UNUSED						ALL
	J04	UNUSED						050-099, 150-152, 155-156, 162-166, 275-276
	J04		W1119	607	22		34-22-26	153-154, 157, 167-199, 277-299
	J05		W1119	136	22		34-22-26	ALL
	J06	UNUSED						ALL
	J07		W1119	510WN	26		34-22-34	ALL
	J08		W1119	511WN	26		34-22-34	ALL
	J09		W1119	512WN	26		34-22-34	ALL
	J10		W1119	513WN	26		34-22-34	ALL
	J11		W1119	514WN	26		34-22-34	ALL
	J12		W1119	515WN	26		34-22-34	ALL
	J13		W1119	516WN	26		34-22-34	ALL
	J14		W1119	517WN	26		34-22-34	ALL
	J15		W1119	518WN	26		34-22-34	ALL
	K01	UNUSED						ALL
	K02	UNUSED						ALL
	K03	UNUSED						ALL
	K04	UNUSED						050-099, 150-155, 162-165, 275-276
	K04		W1119	115	22		34-22-26	156-157, 166-199, 277-299
	K05	UNUSED						ALL
	K06	UNUSED						ALL
	K07		W1119	510W	26		34-22-34	ALL
	K08		W1119	511W	26		34-22-34	ALL
	K09		W1119	512W	26		34-22-34	ALL
	K10		W1119	513W	26		34-22-34	ALL
	K11		W1119	514W	26		34-22-34	ALL
	K12		W1119	515W	26		34-22-34	ALL
	K13		W1119	516W	26		34-22-34	ALL
	K14		W1119	517W	26		34-22-34	ALL
	K15		W1119	518W	26		34-22-34	ALL
	DED		W1119	221Z			34-22-28	ALL
	DED		W1119	229Z			34-22-29	ALL
	DED		W1119	234Z			22-12-31	ALL
	REF	Y	W1119	041	20		34-22-26	162-199
	REF	Y	W1119	042	20		34-22-26	162-199
D00373C		//		PLUG-PART OF D00373				ALL
	1		W1119	012	24		34-22-26	ALL
	2	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00300

Page 123

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00373C		//		PLUG-PART OF D00373 (continued)				ALL
	3	UNUSED						ALL
	4		W1119	013	20		34-22-26	ALL
	5	UNUSED						ALL
	6		W1119	014	20		34-22-26	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	= C12	UNUSED						ALL
	= C13	UNUSED						ALL
	DED		W1119	012Z			34-22-26	ALL
D00373D		//		PLUG-PART OF D00373				ALL
	A01		W1119	237R	24		22-12-21	ALL
	A02	UNUSED						ALL
	A03		W1119	220R	24		34-22-28	ALL
	A04	UNUSED						ALL
	A05		W1119	222R	24		34-22-28	ALL
	A06	UNUSED						ALL
	A07		W1119	231R	24		34-22-29	ALL
	A08	UNUSED						ALL
	A09		W1119	024	24		34-22-24	ALL
	A10	UNUSED						ALL
	A11		W1119	104	24		34-22-27	ALL
	A12		W1119	020	22		34-22-27	ALL
	A13	UNUSED						ALL
	A14	UNUSED						ALL
	A15	UNUSED						ALL
	B01		W1119	237B	24		22-12-21	ALL
	B02	UNUSED						ALL
	B03		W1119	220B	24		34-22-28	ALL
	B04	UNUSED						ALL
	B05		W1119	222B	24		34-22-28	ALL
	B06	UNUSED						ALL
	B07		W1119	231B	24		34-22-29	ALL
	B08	UNUSED						ALL
	B09		W1119	025	24		34-22-24	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00300

Page 124

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00373D		//		PLUG-PART OF D00373 (continued)				ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12		W1119	018	24		33-16-14	ALL
	B13	UNUSED						ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	C01	UNUSED						ALL
	C02		W1119	244R	24		34-22-23	ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05	UNUSED						ALL
	C06	UNUSED						ALL
	C07	UNUSED						ALL
	C08	UNUSED						ALL
	C09		W1119	026	24		34-22-24	ALL
	C10	UNUSED						ALL
	C11		W1119	022	22		34-22-27	ALL
	C12	UNUSED						ALL
	C13	UNUSED						ALL
	C14	UNUSED						ALL
	C15	UNUSED						ALL
	D01	UNUSED						ALL
	D02		W1119	244B	24		34-22-23	ALL
	D03	UNUSED						ALL
	D04	UNUSED						ALL
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	D08	UNUSED						ALL
	D09	UNUSED						ALL
	D10	UNUSED						ALL
	D11	UNUSED						ALL
	D12		W1119	106	22		34-22-26	ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15	UNUSED						ALL
	E01	UNUSED						ALL
	E02	UNUSED						ALL
	E03		W1119	238W	24		34-43-21	ALL
	E04	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D00300
Page 125
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00373D		//		PLUG-PART OF D00373 (continued)				ALL
	E05		W1119	201R	24		34-22-24	ALL
	E06	UNUSED						ALL
	E07	UNUSED						ALL
	E08	UNUSED						ALL
	E09	UNUSED						ALL
	E10	UNUSED						ALL
	E11		W1119	008	24		34-22-27	ALL
	E12	UNUSED						ALL
	E13	UNUSED						ALL
	E14	UNUSED						ALL
	E15	UNUSED						ALL
	F01	UNUSED						ALL
	F02	UNUSED						ALL
	F03		W1119	238WB	24		34-43-21	ALL
	F04	UNUSED						ALL
	F05		W1119	201B	24		34-22-24	ALL
	F06	UNUSED						ALL
	F07	UNUSED						ALL
	F08	UNUSED						ALL
	F09		W1119	033	24		34-22-25	ALL
	F10	UNUSED						ALL
	F11	UNUSED						ALL
	F12	UNUSED						ALL
	F13		W1119	017	22		34-22-23	ALL
	F14	UNUSED						ALL
	F15	UNUSED						ALL
	G01	UNUSED						ALL
	G02		W1119	225R	24		34-22-29	ALL
	G03	UNUSED						ALL
	G04	UNUSED						ALL
	G05	UNUSED						ALL
	G06		W1119	242R	24		34-22-28	ALL
	G07	UNUSED						ALL
	G08	UNUSED						ALL
	G09		W1119	034	24		34-22-25	ALL
	G10	UNUSED						ALL
	G11		W1119	009	24		34-22-27	ALL
	G12		W1119	601	22		34-22-26	ALL
	G13	UNUSED						ALL
	G14	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00300

Page 126

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00373D		//		PLUG-PART OF D00373 (continued)				ALL
	G15	UNUSED						ALL
	H01	UNUSED						ALL
	H02		W1119	225B	24		34-22-29	ALL
	H03	UNUSED						ALL
	H04	UNUSED						ALL
	H05	UNUSED						ALL
	H06		W1119	242B	24		34-22-28	ALL
	H07	UNUSED						ALL
	H08	UNUSED						ALL
	H09		W1119	035	24		34-22-25	ALL
	H10	UNUSED						ALL
	H11	UNUSED						ALL
	H12	UNUSED						ALL
	H13	UNUSED						ALL
	H14	UNUSED						ALL
	H15	UNUSED						ALL
	J01		W1119	232R	24		34-22-29	ALL
	J02	UNUSED						ALL
	J03		W1119	224R	24		34-22-29	ALL
	J04	UNUSED						ALL
	J05	UNUSED						ALL
	J06	UNUSED						ALL
	J07	UNUSED						ALL
	J08	UNUSED						ALL
	J09	UNUSED						050-099, 150-156, 162-166, 275-276
	J09		W1119	560R	24		34-45-14	157, 167-199, 277-299
	J10	UNUSED						ALL
	J11		W1119	019	22		34-22-27	ALL
	J12		W1119	010	24		34-22-27	ALL
	J13		W1119	105	22		34-22-27	ALL
	J14	UNUSED						ALL
	J15	UNUSED						ALL
	K01		W1119	232B	24		34-22-29	ALL
	K02	UNUSED						ALL
	K03		W1119	224B	24		34-22-29	ALL
	K04	UNUSED						ALL
	K05	UNUSED						ALL
	K06	UNUSED						ALL
	K07	UNUSED						ALL
	K08	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00300

Page 127

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00373D		//		PLUG-PART OF D00373 (continued)				ALL
	K09	UNUSED						050-099, 150-156, 162-166, 275-276
	K09		W1119	560B	24		34-45-14	157, 167-199, 277-299
	K10	UNUSED						ALL
	K11	UNUSED						ALL
	K12		W1119	011	24		34-22-27	ALL
	K13	UNUSED						ALL
	K14	UNUSED						ALL
	K15	UNUSED						ALL
	DED		W1119	201Z			34-22-24	ALL
	DED		W1119	220Z			34-22-28	ALL
	DED		W1119	222Z			34-22-28	ALL
	DED		W1119	224Z			34-22-29	ALL
	DED		W1119	225Z			34-22-29	ALL
	DED		W1119	231Z			34-22-29	ALL
	DED		W1119	232Z			34-22-29	ALL
	DED		W1119	237Z			22-12-21	ALL
	DED		W1119	238Z			34-43-21	ALL
	DED		W1119	242Z			34-22-28	ALL
	DED		W1119	560Z			34-45-14	157, 167-199, 277-299
			W1119	244	20		34-22-23	ALL
			W1119	244Z			34-22-23	ALL
D00373E		//		PLUG-PART OF D00373				ALL
	A01		W1119	202WN	26		34-22-24	ALL
	A02		W1119	203WN	26		34-22-24	ALL
	A03		W1119	204WN	26		34-22-24	ALL
	A04		W1119	205WN	26		34-22-24	ALL
	A05		W1119	206WN	26		34-22-24	ALL
	A06		W1119	207WN	26		34-22-24	ALL
	A07		W1119	208WN	26		34-22-24	ALL
	A08		W1119	209WN	26		34-22-24	ALL
	A09		W1119	210WN	26		34-22-24	ALL
	A10	UNUSED						ALL
	A11		W1119	101	24		34-46-12	050-099, 150-199, 275-278
	A11	UNUSED						280-299
	A12	UNUSED						ALL
	A13		W1119	239R	24		34-22-23	ALL
	A14	UNUSED						ALL
	A15	UNUSED						ALL
	B01		W1119	202W	26		34-22-24	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00300

Page 128

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00373E		//		PLUG-PART OF D00373 (continued)				ALL
	B02		W1119	203W	26		34-22-24	ALL
	B03		W1119	204W	26		34-22-24	ALL
	B04		W1119	205W	26		34-22-24	ALL
	B05		W1119	206W	26		34-22-24	ALL
	B06		W1119	207W	26		34-22-24	ALL
	B07		W1119	208W	26		34-22-24	ALL
	B08		W1119	209W	26		34-22-24	ALL
	B09		W1119	210W	26		34-22-24	ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13		W1119	239B	24		34-22-23	ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	C01		W1119	211WN	26		34-22-25	ALL
	C02		W1119	212WN	26		34-22-25	ALL
	C03		W1119	213WN	26		34-22-25	ALL
	C04		W1119	214WN	26		34-22-25	ALL
	C05		W1119	215WN	26		34-22-25	ALL
	C06		W1119	216WN	26		34-22-25	ALL
	C07		W1119	217WN	26		34-22-25	ALL
	C08		W1119	218WN	26		34-22-25	ALL
	C09		W1119	219WN	26		34-22-25	ALL
	C10	UNUSED						ALL
	C11	UNUSED						ALL
	C12	UNUSED						ALL
	C13	UNUSED						ALL
	C14	UNUSED						ALL
	C15	UNUSED						ALL
	D01		W1119	211W	26		34-22-25	ALL
	D02		W1119	212W	26		34-22-25	ALL
	D03		W1119	213W	26		34-22-25	ALL
	D04		W1119	214W	26		34-22-25	ALL
	D05		W1119	215W	26		34-22-25	ALL
	D06		W1119	216W	26		34-22-25	ALL
	D07		W1119	217W	26		34-22-25	ALL
	D08		W1119	218W	26		34-22-25	ALL
	D09		W1119	219W	26		34-22-25	ALL
	D10	UNUSED						ALL
	D11	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00300

Page 129

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00373E		//		PLUG-PART OF D00373 (continued)				ALL
	D12	UNUSED						ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15	UNUSED						ALL
	E01	UNUSED						ALL
	E02	UNUSED						ALL
	E03	UNUSED						ALL
	E04	UNUSED						ALL
	E05	UNUSED						ALL
	E06	UNUSED						ALL
	E07	UNUSED						ALL
	E08	UNUSED						ALL
	E09	UNUSED						ALL
	E10	UNUSED						ALL
	E11	UNUSED						ALL
	E12	UNUSED						ALL
	E13	UNUSED						ALL
	E14	UNUSED						ALL
	E15	UNUSED						ALL
	F01	UNUSED						ALL
	F02	UNUSED						ALL
	F03	UNUSED						ALL
	F04	UNUSED						ALL
	F05	UNUSED						ALL
	F06	UNUSED						ALL
	F07	UNUSED						ALL
	F08	UNUSED						ALL
	F09	UNUSED						ALL
	F10	UNUSED						ALL
	F11	UNUSED						ALL
	F12	UNUSED						ALL
	F13	UNUSED						ALL
	F14	UNUSED						ALL
	F15	UNUSED						ALL
	G01	UNUSED						ALL
	G02	UNUSED						ALL
	G03	UNUSED						ALL
	G04	UNUSED						ALL
	G05	UNUSED						ALL
	G06	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00300

Page 130

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00373E		//		PLUG-PART OF D00373 (continued)				ALL
	G07	UNUSED						ALL
	G08	UNUSED						ALL
	G09	UNUSED						ALL
	G10	UNUSED						ALL
	G11	UNUSED						050-099, 150-156, 162-166, 275-276
	G11		W1119	043	22		34-45-14	157, 167-199, 277-299
	G12	UNUSED						ALL
	G13	UNUSED						ALL
	G14	UNUSED						ALL
	G15	UNUSED						ALL
	H01	UNUSED						ALL
	H02	UNUSED						ALL
	H03	UNUSED						ALL
	H04	UNUSED						ALL
	H05	UNUSED						ALL
	H06	UNUSED						ALL
	H07	UNUSED						ALL
	H08	UNUSED						ALL
	H09	UNUSED						ALL
	H10	UNUSED						ALL
	H11	UNUSED						ALL
	H12	UNUSED						ALL
	H13	UNUSED						ALL
	H14	UNUSED						ALL
	H15	UNUSED						ALL
	J01	UNUSED						ALL
	J02	UNUSED						ALL
	J03	UNUSED						ALL
	J04	UNUSED						ALL
	J05	UNUSED						ALL
	J06	UNUSED						ALL
	J07	UNUSED						ALL
	J08	UNUSED						ALL
	J09	UNUSED						ALL
	J10	UNUSED						ALL
	J11	UNUSED						ALL
	J12	UNUSED						ALL
	J13	UNUSED						ALL
	J14	UNUSED						ALL
	J15	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00300

Page 131

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00373E		//		PLUG-PART OF D00373 (continued)				ALL
	K01	UNUSED						ALL
	K02	UNUSED						ALL
	K03	UNUSED						ALL
	K04	UNUSED						ALL
	K05	UNUSED						ALL
	K06	UNUSED						ALL
	K07	UNUSED						ALL
	K08	UNUSED						ALL
	K09	UNUSED						ALL
	K10	UNUSED						ALL
	K11	UNUSED						ALL
	K12	UNUSED						ALL
	K13	UNUSED						ALL
	K14	UNUSED						ALL
	K15	UNUSED						ALL
			W1119	239	20		34-22-23	ALL
			W1119	239Z			34-22-23	ALL
D00373F		//		PLUG-PART OF D00373				ALL
	1		W1119	074	22		34-22-26	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W1119	075	22		34-22-26	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	= C12	UNUSED						ALL
	= C13	UNUSED						ALL
	DED		W1119	074Z			34-22-26	ALL
D00376		P034-00/ /		PLUG-P34				ALL
	1		W0026	402Y	24		24-41-11	ALL
	2		W0026	402R	24		24-41-11	ALL
	3		W0026	402G	24		24-41-11	ALL

HOOKUP LIST
D280T132

91-21-51
Section D00300
Page 132
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00376		P034-00/ /		PLUG-P34 (continued)				ALL
	4		W0026	402B	24		24-41-11	ALL
	5	UNUSED						ALL
D00377A		//		PLUG-PART OF D00377				ALL
	A01	UNUSED						ALL
	A02	UNUSED						ALL
	A03	UNUSED						ALL
	A04	UNUSED						ALL
	A05	UNUSED						ALL
	A06	UNUSED						ALL
	A07	UNUSED						ALL
	A08	UNUSED						ALL
	A09	UNUSED						ALL
	A10	UNUSED						ALL
	A11	UNUSED						ALL
	A12	UNUSED						ALL
	A13	UNUSED						ALL
	A14	UNUSED						ALL
	A15	UNUSED						ALL
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04	UNUSED						ALL
	B05	UNUSED						ALL
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13	UNUSED						ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	C01	UNUSED						ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05	UNUSED						ALL
	C06	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00300

Page 133

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00377A		//		PLUG-PART OF D00377 (continued)				ALL
	C07	UNUSED						ALL
	C08	UNUSED						ALL
	C09	UNUSED						ALL
	C10	UNUSED						ALL
	C11	UNUSED						ALL
	C12	UNUSED						ALL
	C13	UNUSED						ALL
	C14	UNUSED						ALL
	C15	UNUSED						ALL
	D01	UNUSED						ALL
	D02	UNUSED						ALL
	D03	UNUSED						ALL
	D04	UNUSED						ALL
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	D08	UNUSED						ALL
	D09	UNUSED						ALL
	D10	UNUSED						ALL
	D11	UNUSED						ALL
	D12	UNUSED						ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15	UNUSED						ALL
D00377B		//		PLUG-PART OF D00377				ALL
	A01		W0119	251R	24		23-51-13	ALL
	A02	UNUSED						ALL
	A03	UNUSED						ALL
	A04	UNUSED						ALL
	A05	UNUSED						ALL
	A06	UNUSED						ALL
	A07	UNUSED						ALL
	A08	UNUSED						ALL
	A09	UNUSED						ALL
	A10	UNUSED						ALL
	A11	UNUSED						ALL
	A12	UNUSED						ALL
	A13	UNUSED						ALL
	A14	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D00300
Page 134
Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00377B		//		PLUG-PART OF D00377 (continued)				ALL
	A15	UNUSED						ALL
	B01		W0119	251B	24		23-51-13	ALL
	B02	UNUSED						ALL
	B03		W0119	104	24		34-31-21	ALL
	B04	UNUSED						ALL
	B05		W0119	105	24		34-31-21	ALL
	B06	UNUSED						ALL
	B07		W0119	224R	24		22-13-21	ALL
	B08	UNUSED						ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11		W0119	252R	24		34-31-21	ALL
	B12	UNUSED						ALL
	B13		W0119	258R	24		34-31-21	ALL
	B14	UNUSED						ALL
	B15		W0119	254R	22		34-31-21	ALL
	C01		W0119	112	24		22-13-21	ALL
	C02	UNUSED						ALL
	C03		W0119	104	24		34-31-21	ALL
	C04	UNUSED						ALL
	C05		W0119	105	24		34-31-21	ALL
	C06	UNUSED						ALL
	C07		W0119	224B	24		22-13-21	ALL
	C08	UNUSED						ALL
	C09	UNUSED						ALL
	C10	UNUSED						ALL
	C11		W0119	252B	24		34-31-21	ALL
	C12	UNUSED						ALL
	C13		W0119	258B	24		34-31-21	ALL
	C14	UNUSED						ALL
	C15		W0119	254B	22		34-31-21	ALL
	D01	UNUSED						ALL
	D02	UNUSED						ALL
	D03	UNUSED						ALL
	D04	UNUSED						ALL
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	D08	UNUSED						ALL
	D09	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00300

Page 135

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00377B		//		PLUG-PART OF D00377 (continued)				ALL
	D10	UNUSED						ALL
	D11	UNUSED						ALL
	D12	UNUSED						ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15		W0119	108	22		34-31-21	ALL
	DED		W0119	252Z			34-31-21	ALL
	DED		W0119	258Z			34-31-21	ALL
			W0119	224	20		22-13-21	ALL
			W0119	224Z			22-13-21	ALL
D00377C		//		PLUG-PART OF D00377				ALL
	1		W1059	01CX			34-31-21	ALL
	2		W0119	101	20		34-31-21	ALL
	3		W0119	102	20		34-31-21	ALL
	4		W0119	103	20		34-31-21	ALL
	5		W1061	01CX			34-31-21	ALL
	=C1		W1059	01CO			34-31-21	ALL
	=C5		W1061	01CO			34-31-21	ALL
D00378		P032-00/ /		PLUG-P32				ALL
	1		W0024	072	24		25-31-11	ALL
	2		W0024	073	24		25-31-11	ALL
	3		W0024	074	24		25-31-11	ALL
	4		W0024	075	24		25-31-11	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8		W0024	078	20		25-31-11	050-099, 150-199
	8		W0024	079	20		25-31-11	275-278
	8	DK	W0024	079	18		25-31-11	280-299
	9		W0024	151	22		25-31-11	050-099, 150-199
	9		W0024	084	22		25-31-11	275-278
	9		W0024	081	22		25-31-11	280-299
	10		W0024	127	20		25-31-11	ALL
	11		W0024	076	22		25-31-11	ALL
	12	UNUSED						ALL
	13		W0024	076	22		25-31-11	050-099, 150-199
	13	UNUSED						275-299
	14	UNUSED						050-099, 150-199

HOOKUP LIST

D280T132

91-21-51

Section D00300

Page 136

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00378		P032-00/ /		PLUG-P32 (continued)				ALL
	14		W0024	076	22		25-31-11	275-299
	15		W0024	128	20		25-31-11	ALL
	16		W0024	136	22		25-31-11	ALL
	17		W0024	136	22		25-31-11	ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D00380		1274/280/L020		PLUG-				050-099
D00380		1357/295/L020		PLUG-				150-199
D00380		1274/290/L020		PLUG-				275-299
	1	UNUSED						ALL
	2		W0824	028	22		33-21-14	050-099
	2		W0824	028	20		33-21-14	150-199, 275-299
	3		W0824	029	22		33-21-14	050-099
	3		W0824	029	20		33-21-14	150-199, 275-299
	4	UNUSED						ALL
	5		W0824	030	20		33-21-14	ALL
	6	UNUSED						ALL
	7		W0824	031	20		33-21-14	ALL
	8		W0824	032	20		33-21-14	ALL
	9		W0824	033	22		33-21-14	050-099
	9		W0824	033	20		33-21-14	150-199, 275-299
	10		W0824	034	22		33-21-14	050-099
	10		W0824	034	20		33-21-14	150-199, 275-299
	11		W0824	035	22		33-21-14	050-099
	11		W0824	035	20		33-21-14	150-199, 275-299
	12		W0824	036	22		33-21-14	050-099
	12		W0824	036	20		33-21-14	150-199, 275-299
D00381A		//		PLUG-PART OF D00381				ALL
	A01		W0119	239R	24		22-41-12	ALL
	A02		W0119	239B	24		22-41-12	ALL
	A03		W0119	093	24		22-41-11	ALL
	A04		W0119	027	22		22-11-22	ALL
	A05	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00300

Page 137

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00381A		//		PLUG-PART OF D00381 (continued)				ALL
	A06	UNUSED						ALL
	A07	UNUSED						ALL
	A08	UNUSED						ALL
	A09		W0119	223R	24		22-13-21	ALL
	A10		W0119	215R	24		22-12-21	ALL
	A11	UNUSED						ALL
	A12	UNUSED						ALL
	A13	UNUSED						ALL
	A14	UNUSED						ALL
	A15		W0119	026	22		22-11-22	ALL
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04	UNUSED						ALL
	B05	UNUSED						ALL
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09		W0119	223B	24		22-13-21	ALL
	B10		W0119	215B	24		22-12-21	ALL
	B11		W0119	605	24		22-11-22	050-099
	B11	UNUSED						150-199, 275-299
	B12		W0119	605	24		22-11-22	050-099
	B12	UNUSED						150-199, 275-299
	B13		W0119	017	24		22-11-22	ALL
	B14		W0119	017	24		22-11-22	ALL
	B15	UNUSED						ALL
	C01	UNUSED						ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05	UNUSED						ALL
	C06	UNUSED						ALL
	C07	UNUSED						ALL
	C08	UNUSED						ALL
	C09		W0119	213R	24		34-61-26	ALL
	C10	UNUSED						ALL
	C11		W0119	632	24		22-11-22	ALL
	C12		W0119	632	24		22-11-22	ALL
	C13		W0119	060	22		22-14-21	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00300

Page 138

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00381A		//		PLUG-PART OF D00381 (continued)				ALL
	C14	UNUSED						ALL
	C15		W0119	024	22		22-11-22	ALL
	D01		W0119	231R	24		22-15-11	ALL
	D02	UNUSED						ALL
	D03	UNUSED						ALL
	D04		W0119	607	24		22-11-22	ALL
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	D08	UNUSED						ALL
	D09		W0119	213B	24		34-61-26	ALL
	D10	UNUSED						ALL
	D11	UNUSED						ALL
	D12	UNUSED						ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15	UNUSED						ALL
	E01		W0119	231B	24		22-15-11	ALL
	E02	UNUSED						ALL
	E03		W0119	077	24		22-15-12	ALL
	E04	UNUSED						ALL
	E05	UNUSED						ALL
	E06	UNUSED						ALL
	E07	UNUSED						ALL
	E08	UNUSED						ALL
	E09	UNUSED						ALL
	E10	UNUSED						ALL
	E11	UNUSED						ALL
	E12		W0119	055	24		22-14-21	ALL
	E13	UNUSED						ALL
	E14	UNUSED						ALL
	E15	UNUSED						ALL
	F01		W0119	056	22		22-14-21	ALL
	F02	UNUSED						ALL
	F03	UNUSED						ALL
	F04	UNUSED						ALL
	F05	UNUSED						ALL
	F06	UNUSED						ALL
	F07	UNUSED						ALL
	F08	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00300

Page 139

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00381A		//		PLUG-PART OF D00381 (continued)				ALL
	F09		W0119	120	24		22-15-12	ALL
	F10	UNUSED						ALL
	F11	UNUSED						ALL
	F12		W0119	088	24		22-12-21	ALL
	F13	UNUSED						ALL
	F14	UNUSED						ALL
	F15		W0119	032	22		22-12-21	ALL
	G01		W0119	094	24		22-15-12	ALL
	G02	UNUSED						ALL
	G03		W0119	233R	24		22-15-11	ALL
	G04	UNUSED						ALL
	G05	UNUSED						ALL
	G06	UNUSED						ALL
	G07	UNUSED						ALL
	G08	UNUSED						ALL
	G09		W0119	090	24		22-12-21	ALL
	G10		W0119	085	24		22-15-12	ALL
	G11		W0119	028	22		22-11-22	ALL
	G12		W0119	064	24		22-14-21	ALL
	G13	UNUSED						ALL
	G14	UNUSED						ALL
	G15	UNUSED						ALL
	H01	UNUSED						ALL
	H02	UNUSED						ALL
	H03		W0119	233B	24		22-15-11	ALL
	H04	UNUSED						ALL
	H05		W0119	308Y	22		22-13-21	ALL
	H06		W0119	308R	22		22-13-21	ALL
	H07	UNUSED						ALL
	H08	UNUSED						ALL
	H09		W0119	302Y	22		22-12-21	ALL
	H10		W0119	302B	22		22-12-21	ALL
	H11	UNUSED						ALL
	H12	UNUSED						ALL
	H13	UNUSED						ALL
	H14	UNUSED						ALL
	H15		W0119	012	22		22-11-22	ALL
	J01	UNUSED						ALL
	J02	UNUSED						ALL
	J03	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00300

Page 140

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00381A		//		PLUG-PART OF D00381 (continued)				ALL
	J04	UNUSED						ALL
	J05		W0119	306R	22		22-13-21	ALL
	J06		W0119	308B	22		22-13-21	ALL
	J07	UNUSED						ALL
	J08	UNUSED						ALL
	J09		W0119	302R	22		22-12-21	ALL
	J10	UNUSED						ALL
	J11	UNUSED						ALL
	J12	UNUSED						ALL
	J13	UNUSED						ALL
	J14	UNUSED						ALL
	J15	UNUSED						ALL
	K01		W0119	083	24		22-15-12	ALL
	K02	UNUSED						ALL
	K03		W0119	087	24		22-15-12	ALL
	K04	UNUSED						ALL
	K05		W0119	306Y	22		22-13-21	ALL
	K06		W0119	306B	22		22-13-21	ALL
	K07	UNUSED						ALL
	K08	UNUSED						ALL
	K09	UNUSED						ALL
	K10	UNUSED						ALL
	K11	UNUSED						ALL
	K12	UNUSED						ALL
	K13	UNUSED						ALL
	K14	UNUSED						ALL
	K15		W0119	031	22		22-11-22	ALL
	DED		W0119	064Z			22-14-21	ALL
	DED		W0119	077Z			22-15-12	ALL
	DED		W0119	093Z			22-41-11	ALL
	DED		W0119	094Z			22-15-12	ALL
	DED		W0119	215Z			22-12-21	ALL
	DED		W0119	223Z			22-13-21	ALL
	DED		W0119	231Z			22-15-11	ALL
	DED		W0119	233Z			22-15-11	ALL
	DED		W0119	239Z			22-41-12	ALL
	DED		W0119	213	20		34-61-26	ALL
	DED		W0119	213Z			34-61-26	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00300

Page 141

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00381B		//		PLUG-PART OF D00381				ALL
	A01		W0119	224R	24		22-13-21	ALL
	A02		W0119	224B	24		22-13-21	ALL
	A03		W0119	020	24		22-11-22	ALL
	A04		W0119	607	24		22-11-22	ALL
	A05	UNUSED						ALL
	A06		W0119	021	24		22-11-22	ALL
	A07	UNUSED						ALL
	A08	UNUSED						ALL
	A09	UNUSED						ALL
	A10	UNUSED						ALL
	A11	UNUSED						ALL
	A12		W0119	621	24		22-11-22	ALL
	A13	UNUSED						ALL
	A14	UNUSED						ALL
	A15		W0119	025	22		22-11-22	ALL
	B01		W0119	218R	24		22-12-21	ALL
	B02		W0119	218B	24		22-12-21	ALL
	B03		W0119	208R	24		22-12-21	ALL
	B04		W0119	208B	24		22-12-21	ALL
	B05	UNUSED						ALL
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12		W0119	620	24		22-11-22	ALL
	B13	UNUSED						ALL
	B14	UNUSED						ALL
	B15		W0119	621	24		22-11-22	ALL
	C01		W0119	212R	24		22-12-21	ALL
	C02		W0119	212B	24		22-12-21	ALL
	C03		W0119	238R	24		22-41-11	ALL
	C04		W0119	238B	24		22-41-11	ALL
	C05	UNUSED						ALL
	C06		W0119	092	24		22-41-11	ALL
	C07		W0119	022	24		22-11-22	ALL
	C08	UNUSED						ALL
	C09		W0119	036	24		22-12-21	ALL
	C10	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00300

Page 142

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00381B		//		PLUG-PART OF D00381 (continued)				ALL
	C11	UNUSED						ALL
	C12	UNUSED						ALL
	C13	UNUSED						050-099, 275-276
	C13		W0119	058	24		22-11-22	150-199, 277-299
	C14	UNUSED						ALL
	C15		W0119	023	22		22-11-22	ALL
	D01		W0119	544R	24		31-35-13	ALL
	D02		W0119	544B	24		31-35-13	ALL
	D03		W0119	139	24		22-11-22	ALL
	D04	UNUSED						ALL
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	D08		W0119	035	24		22-12-21	ALL
	D09		W0119	038	24		22-12-21	ALL
	D10		W0119	037	24		22-12-21	ALL
	D11		W0119	211B	22		22-12-21	ALL
	D12	UNUSED						ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15		W0119	620	24		22-11-22	ALL
	E01		W0119	225R	24		22-13-21	ALL
	E02		W0119	225B	24		22-13-21	ALL
	E03		W0119	232R	24		22-15-11	ALL
	E04		W0119	020	24		22-11-22	ALL
	E05	UNUSED						ALL
	E06		W0119	226B	22		22-13-21	ALL
	E07		W0119	227B	22		22-13-21	ALL
	E08	UNUSED						ALL
	E09		W0119	033	22		22-12-21	ALL
	E10		W0119	034	24		22-12-21	ALL
	E11		W0119	211R	22		22-12-21	ALL
	E12		W0119	053	24		22-14-21	ALL
	E13		W0119	248R	24		22-12-21	ALL
	E14	UNUSED						ALL
	E15	UNUSED						ALL
	F01		W0119	230R	24		22-15-11	ALL
	F02		W0119	230B	24		22-15-11	ALL
	F03		W0119	232B	24		22-15-11	ALL
	F04	UNUSED						050-099, 275-276

HOOKUP LIST

D280T132

91-21-51

Section D00300

Page 143

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00381B		//		PLUG-PART OF D00381 (continued)				ALL
	F04		W0119	058	24		22-11-22	150-199, 277-299
	F05	UNUSED						ALL
	F06		W0119	226R	22		22-13-21	ALL
	F07		W0119	227R	22		22-13-21	ALL
	F08	UNUSED						ALL
	F09		W0119	081	24		22-41-13	ALL
	F10		W0119	080	24		22-41-13	ALL
	F11		W0119	144	24		22-11-22	050-099, 150-199, 277-299
	F11	UNUSED						275-276
	F12	UNUSED						ALL
	F13		W0119	248B	24		22-12-21	ALL
	F14	UNUSED						ALL
	F15		W0119	015	22		22-11-22	ALL
	G01	UNUSED						ALL
	G02	UNUSED						ALL
	G03	UNUSED						ALL
	G04	UNUSED						ALL
	G05	UNUSED						ALL
	G06	UNUSED						ALL
	G07	UNUSED						ALL
	G08	UNUSED						ALL
	G09		W0119	089	24		22-12-21	ALL
	G10	UNUSED						ALL
	G11	UNUSED						ALL
	G12		W0119	062	24		22-14-21	ALL
	G13	UNUSED						ALL
	G14	UNUSED						ALL
	G15	UNUSED						ALL
	H01	UNUSED						ALL
	H02		W0119	095	24		22-13-21	ALL
	H03		W0119	045	24		22-13-21	ALL
	H04	UNUSED						ALL
	H05		W0119	307Y	22		22-13-21	ALL
	H06		W0119	307R	22		22-13-21	ALL
	H07	UNUSED						ALL
	H08	UNUSED						ALL
	H09		W0119	303Y	22		22-12-21	ALL
	H10		W0119	303B	22		22-12-21	ALL
	H11		W0119	018	22		22-11-22	ALL
	H12	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00300

Page 144

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00381B		//		PLUG-PART OF D00381 (continued)				ALL
	H13	UNUSED						ALL
	H14	UNUSED						ALL
	H15		W0119	013	22		22-11-22	ALL
	J01	UNUSED						ALL
	J02		W0119	634	24		22-11-22	ALL
	J03	UNUSED						ALL
	J04		W0119	634	24		22-11-22	ALL
	J05		W0119	305R	22		22-13-21	ALL
	J06		W0119	307B	22		22-13-21	ALL
	J07	UNUSED						ALL
	J08	UNUSED						ALL
	J09		W0119	303R	22		22-12-21	ALL
	J10	UNUSED						ALL
	J11		W0119	057	24		22-14-21	ALL
	J12		W0119	059	24		22-14-21	ALL
	J13	UNUSED						ALL
	J14	UNUSED						ALL
	J15	UNUSED						ALL
	K01	UNUSED						ALL
	K02		W0119	063	24		22-14-21	ALL
	K03		W0119	050	24		22-14-21	ALL
	K04		W0119	139	24		22-11-22	ALL
	K05		W0119	305Y	22		22-13-21	ALL
	K06		W0119	305B	22		22-13-21	ALL
	K07	UNUSED						ALL
	K08	UNUSED						ALL
	K09		W0119	144	24		22-11-22	050-099, 150-199, 277-299
	K09	UNUSED						275-276
	K10		W0119	048	24		22-14-21	ALL
	K11		W0119	049	24		22-14-21	ALL
	K12		W0119	051	24		22-14-21	ALL
	K13		W0119	061	24		22-11-22	ALL
	K14		W0119	061	24		22-11-22	ALL
	K15		W0119	030	22		22-11-22	ALL
	DED		W0119	208Z			22-12-21	ALL
	DED		W0119	218Z			22-12-21	ALL
	DED		W0119	224Z			22-13-21	ALL
	REF		W0119	544	20		31-35-13	ALL
	REF		W0119	544Z			31-35-13	ALL
			W0119	212	20		22-12-21	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00300

Page 145

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00381B		//		PLUG-PART OF D00381 (continued)				ALL
			W0119	212Z			22-12-21	ALL
			W0119	225	20		22-13-21	ALL
			W0119	225Z			22-13-21	ALL
			W0119	230	20		22-15-11	ALL
			W0119	230Z			22-15-11	ALL
			W0119	232	20		22-15-11	ALL
			W0119	232Z			22-15-11	ALL
			W0119	238	20		22-41-11	ALL
			W0119	238Z			22-41-11	ALL
D00381C		//		PLUG-PART OF D00381				ALL
	1		W0119	001	22		22-11-22	ALL
	2		W0119	002	20		22-11-22	ALL
	3	UNUSED						ALL
	4		W0119	004	20		22-11-21	ALL
	5		W0119	005	22		22-11-22	ALL
	6		W0119	006	22		22-11-21	ALL
	7		W0119	007	20		22-11-21	ALL
	8	UNUSED						ALL
	9		W0119	009	20		22-11-22	ALL
	10		W0119	204R	20		22-11-21	ALL
	11		W0119	204B	20		22-11-21	ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	= C12	UNUSED						ALL
	= C13	UNUSED						ALL
	DED		W0119	001Z			22-11-22	ALL
	DED		W0119	002Z			22-11-22	ALL
	DED		W0119	005Z			22-11-22	ALL
D00388		1406/280/L005		PLUG-				050-099
D00388		1400/290/L020		PLUG-				150-199, 275-299
	1	UNUSED						ALL
	2		W0824	041	22		33-21-14	050-099
	2		W0824	041	20		33-21-14	150-199, 275-299
	3		W0824	042	22		33-21-14	050-099
	3		W0824	042	20		33-21-14	150-199, 275-299
	4	UNUSED						ALL
	5		W0824	043	20		33-21-14	ALL
	6	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00300

Page 146

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00388		1406/280/L005		PLUG- (continued)				050-099
D00388		1400/290/L020		PLUG- (continued)				150-199, 275-299
	7		W0824	044	20		33-21-14	ALL
	8		W0824	045	20		33-21-14	ALL
	9		W0824	046	22		33-21-14	050-099
	9		W0824	046	20		33-21-14	150-199, 275-299
	10		W0824	047	22		33-21-14	050-099
	10		W0824	047	20		33-21-14	150-199, 275-299
	11		W0824	048	22		33-21-14	050-099
	11		W0824	048	20		33-21-14	150-199, 275-299
	12		W0824	049	22		33-21-14	050-099
	12		W0824	049	20		33-21-14	150-199, 275-299
D00390		P031-00/ /		PLUG-P31				ALL
	1		W0022	032	24		25-31-21	ALL
	2		W0022	033	24		25-31-21	ALL
	3		W0022	034	24		25-31-21	ALL
	4		W0022	035	24		25-31-21	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8		W0022	040	20		25-31-21	050-099, 150-199
	8	DK	W0022	040	18		25-31-21	275-278
	8	DK	W0022	042	18		25-31-21	280-299
	9		W0022	044	22		25-31-21	050-099
	9		W0022	171	22		25-31-21	150-199, 275-299
	10		W0022	119	20		25-31-21	ALL
	11		W0022	036	22		25-31-21	ALL
	12	UNUSED						ALL
	13	UNUSED						050-099, 150-199
	13		W0022	036	22		25-31-21	275-299
	14		W0022	036	22		25-31-21	050-099, 150-199
	14	UNUSED						275-299
	15		W0022	120	20		25-31-21	ALL
	16		W0022	126	22		25-31-21	ALL
	17		W0022	126	22		25-31-21	ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D00300
Page 147
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00390		P031-00/ /		PLUG-P31 (continued)				ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D00391A		//		PLUG-PART OF D00391				ALL
	A1	UNUSED						ALL
	C1	UNUSED						ALL
D00391B		//		PLUG-PART OF D00391				ALL
	A01	UNUSED						ALL
	A02	UNUSED						ALL
	A03	UNUSED						ALL
	A04	UNUSED						ALL
	A05	UNUSED						ALL
	A06	UNUSED						ALL
	A07	UNUSED						ALL
	A08	UNUSED						ALL
	A09	UNUSED						ALL
	A10		W0779	303R	22		34-43-12	ALL
	A11		W0779	303B	22		34-43-12	ALL
	A12		W0779	303Y	22		34-43-12	ALL
	A13		W0779	203R	22		34-43-12	ALL
	A14		W0779	203B	22		34-43-12	ALL
	A15		W0779	205R	22		34-43-12	ALL
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03		W0779	206R	24		34-43-11	ALL
	B04		W0779	206B	24		34-43-11	ALL
	B05	UNUSED						ALL
	B06		W0779	012	24		34-43-12	ALL
	B07		W0779	214R	24		34-43-12	ALL
	B08		W0779	214B	24		34-43-12	ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13	UNUSED						ALL
	B14	UNUSED						ALL
	B15		W0779	205B	22		34-43-12	ALL
	C01	UNUSED						ALL
	C02	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00300

Page 148

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00391B		//		PLUG-PART OF D00391 (continued)				ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05	UNUSED						ALL
	C06		W0779	009	24		34-43-12	ALL
	C07	UNUSED						ALL
	C08	UNUSED						ALL
	C09	UNUSED						ALL
	C10		W0779	301R	22		34-43-12	ALL
	C11		W0779	301B	22		34-43-12	ALL
	C12		W0779	301Y	22		34-43-12	ALL
	C13		W0779	201R	22		34-43-12	ALL
	C14		W0779	201B	22		34-43-12	ALL
	C15	UNUSED						ALL
	D01	UNUSED						ALL
	D02		W0779	207W	24		34-43-11	ALL
	D03		W0779	207WB	24		34-43-11	ALL
	D04	UNUSED						ALL
	D05	UNUSED						ALL
	D06		W0779	010	24		34-43-12	ALL
	D07		W0779	011	24		34-43-12	ALL
	D08		W0779	015	24		34-43-12	ALL
	D09	UNUSED						ALL
	D10	UNUSED						ALL
	D11		W0779	007	22		34-43-12	ALL
	D12	UNUSED						ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15		W0779	204B	22		34-43-12	ALL
	E01	UNUSED						ALL
	E02	UNUSED						ALL
	E03	UNUSED						ALL
	E04	UNUSED						ALL
	E05	UNUSED						ALL
	E06		W0779	013	24		34-43-12	ALL
	E07		W0779	014	24		34-43-12	ALL
	E08	UNUSED						ALL
	E09	UNUSED						ALL
	E10		W0779	302R	22		34-43-12	ALL
	E11		W0779	302B	22		34-43-12	ALL
	E12		W0779	302Y	22		34-43-12	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00300

Page 149

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00391B		//		PLUG-PART OF D00391 (continued)				ALL
	E13		W0779	202R	22		34-43-12	ALL
	E14		W0779	202B	22		34-43-12	ALL
	E15		W0779	204R	22		34-43-12	ALL
	F01	UNUSED						ALL
	F02	UNUSED						ALL
	F03	UNUSED						ALL
	F04	UNUSED						ALL
	F05	UNUSED						ALL
	F06	UNUSED						ALL
	F07	UNUSED						ALL
	F08	UNUSED						ALL
	F09	UNUSED						ALL
	F10	UNUSED						ALL
	F11	UNUSED						ALL
	F12	UNUSED						ALL
	F13	UNUSED						ALL
	F14	UNUSED						ALL
	F15	UNUSED						ALL
	G01	UNUSED						ALL
	G02		W0779	209W	24		34-43-11	ALL
	G03		W0779	209WB	24		34-43-11	ALL
	G04	UNUSED						ALL
	G05	UNUSED						ALL
	G06	UNUSED						ALL
	G07	UNUSED						ALL
	G08	UNUSED						ALL
	G09	UNUSED						ALL
	G10	UNUSED						ALL
	G11	UNUSED						ALL
	G12		W0779	213R	24		34-43-11	ALL
	G13		W0779	213B	24		34-43-11	ALL
	G14		W0779	008	24		34-43-11	ALL
	G15	UNUSED						ALL
	H01	UNUSED						ALL
	H02	UNUSED						ALL
	H03	UNUSED						ALL
	H04	UNUSED						ALL
	H05	UNUSED						ALL
	H06	UNUSED						ALL
	H07	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00300

Page 150

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00391B		//		PLUG-PART OF D00391 (continued)				ALL
	H08	UNUSED						ALL
	H09	UNUSED						ALL
	H10	UNUSED						ALL
	H11	UNUSED						ALL
	H12	UNUSED						ALL
	H13	UNUSED						ALL
	H14	UNUSED						ALL
	H15	UNUSED						ALL
	J01	UNUSED						ALL
	J02	UNUSED						ALL
	J03		W0779	211R	24		34-43-11	ALL
	J04		W0779	211B	24		34-43-11	ALL
	J05	UNUSED						ALL
	J06	UNUSED						ALL
	J07	UNUSED						ALL
	J08	UNUSED						ALL
	J09	UNUSED						ALL
	J10	UNUSED						ALL
	J11		W0779	212R	24		34-43-11	ALL
	J12		W0779	212B	24		34-43-11	ALL
	J13	UNUSED						ALL
	J14	UNUSED						ALL
	J15	UNUSED						ALL
	K01	UNUSED						ALL
	K02	UNUSED						ALL
	K03	UNUSED						ALL
	K04	UNUSED						ALL
	K05	UNUSED						ALL
	K06	UNUSED						ALL
	K07	UNUSED						ALL
	K08	UNUSED						ALL
	K09	UNUSED						ALL
	K10	UNUSED						ALL
	K11	UNUSED						ALL
	K12	UNUSED						ALL
	K13	UNUSED						ALL
	K14	UNUSED						ALL
	K15	UNUSED						ALL
	DED		W0779	207Z			34-43-11	ALL
	DED		W0779	209Z			34-43-11	ALL

HOOKUP LIST
D280T132

91-21-51
Section D00300
Page 151
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00391B		//		PLUG-PART OF D00391 (continued)				ALL
			W0779	201	20		34-43-12	ALL
			W0779	201Z			34-43-12	ALL
			W0779	202Z			34-43-12	ALL
			W0779	203Z			34-43-12	ALL
			W0779	204Z			34-43-12	ALL
			W0779	205	20		34-43-12	ALL
			W0779	205Z			34-43-12	ALL
			W0779	206	20		34-43-11	ALL
			W0779	206Z			34-43-11	ALL
			W0779	211	20		34-43-11	ALL
			W0779	211Z			34-43-11	ALL
			W0779	212	20		34-43-11	ALL
			W0779	212Z			34-43-11	ALL
			W0779	213	20		34-43-11	ALL
			W0779	213Z			34-43-11	ALL
			W0779	214	20		34-43-12	ALL
			W0779	214Z			34-43-12	ALL
			W0779	301Z			34-43-12	ALL
			W0779	302Z			34-43-12	ALL
			W0779	303Z			34-43-12	ALL
D00391C		//		PLUG-PART OF D00391				ALL
	1	UNUSED						ALL
	2		W0779	001	20		34-43-12	ALL
	3		W0779	004	20		34-43-12	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W0779	002	20		34-43-12	ALL
	8		W0779	005	20		34-43-12	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11		W0779	003	20		34-43-12	ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	= C12	UNUSED						ALL
	= C13	UNUSED						ALL
D00392		P031-00/ /		PLUG-P31				275-299
	1		W0022	157	24		25-31-31	275-299

HOOKUP LIST
D280T132

91-21-51
Section D00300
Page 152
Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00392		P031-00/ /		PLUG-P31 (continued)				275-299
	2		W0022	158	24		25-31-31	275-299
	3		W0022	159	24		25-31-31	275-299
	4		W0022	160	24		25-31-31	275-299
	5	UNUSED						275-299
	6	UNUSED						275-299
	7	UNUSED						275-299
	8	DK	W0022	153	18		25-31-31	275-276
	8	DK	W0022	151	18		25-31-31	277-299
	9		W0022	179	22		25-31-31	275-299
	10		W0022	154	20		25-31-31	275-299
	11		W0022	161	22		25-31-31	275-299
	12		W0022	161	22		25-31-31	275-299
	13	UNUSED						275-299
	14	UNUSED						275-299
	15		W0022	155	20		25-31-31	275-299
	16		W0022	156	22		25-31-31	275-299
	17		W0022	156	22		25-31-31	275-299
	18	UNUSED						275-299
	19	UNUSED						275-299
	20	UNUSED						275-299
	21	UNUSED						275-299
	22	UNUSED						275-299
	23	UNUSED						275-299
	24	UNUSED						275-299
D00393A		//		PLUG-PART OF D00393				ALL
	A1	UNUSED						ALL
	C1	UNUSED						ALL
D00393B		//		PLUG-PART OF D00393				ALL
	A01	UNUSED						ALL
	A02	UNUSED						ALL
	A03	UNUSED						ALL
	A04	UNUSED						ALL
	A05	UNUSED						ALL
	A06	UNUSED						ALL
	A07	UNUSED						ALL
	A08	UNUSED						ALL
	A09	UNUSED						ALL
	A10		W0803	303R	22		34-43-22	ALL

HOOKUP LIST
D280T132

91-21-51
Section D00300
Page 153
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00393B		//		PLUG-PART OF D00393 (continued)				ALL
	A11		W0803	303B	22		34-43-22	ALL
	A12		W0803	303Y	22		34-43-22	ALL
	A13		W0803	203R	22		34-43-22	ALL
	A14		W0803	203B	22		34-43-22	ALL
	A15		W0803	205R	22		34-43-22	ALL
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03		W0803	211R	24		34-43-21	ALL
	B04		W0803	211B	24		34-43-21	ALL
	B05	UNUSED						ALL
	B06		W0803	012	24		34-43-22	050-099, 151
	B06		W0803	901	24		34-43-22	150, 152-199, 275-299
	B07		W0803	214R	24		34-43-22	ALL
	B08		W0803	214B	24		34-43-22	ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13	UNUSED						ALL
	B14	UNUSED						ALL
	B15		W0803	205B	22		34-43-22	ALL
	C01	UNUSED						ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05	UNUSED						ALL
	C06		W0803	009	24		34-43-22	ALL
	C07	UNUSED						ALL
	C08	UNUSED						ALL
	C09	UNUSED						ALL
	C10		W0803	301R	22		34-43-22	ALL
	C11		W0803	301B	22		34-43-22	ALL
	C12		W0803	301Y	22		34-43-22	ALL
	C13		W0803	201R	22		34-43-22	ALL
	C14		W0803	201B	22		34-43-22	ALL
	C15	UNUSED						ALL
	D01	UNUSED						ALL
	D02		W0803	209W	24		34-43-21	ALL
	D03		W0803	209WB	24		34-43-21	ALL
	D04	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00300

Page 154

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00393B		//		PLUG-PART OF D00393 (continued)				ALL
	D05	UNUSED						ALL
	D06		W0803	010	24		34-43-22	ALL
	D07		W0803	011	24		34-43-22	ALL
	D08		W0803	015	24		34-43-22	ALL
	D09	UNUSED						ALL
	D10	UNUSED						ALL
	D11		W0803	007	22		34-43-22	ALL
	D12	UNUSED						ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15		W0803	204B	22		34-43-22	ALL
	E01	UNUSED						ALL
	E02	UNUSED						ALL
	E03	UNUSED						ALL
	E04	UNUSED						ALL
	E05	UNUSED						ALL
	E06		W0803	013	24		34-43-22	ALL
	E07		W0803	014	24		34-43-22	ALL
	E08	UNUSED						ALL
	E09	UNUSED						ALL
	E10		W0803	302R	22		34-43-22	ALL
	E11		W0803	302B	22		34-43-22	ALL
	E12		W0803	302Y	22		34-43-22	ALL
	E13		W0803	202R	22		34-43-22	ALL
	E14		W0803	202B	22		34-43-22	ALL
	E15		W0803	204R	22		34-43-22	ALL
	F01	UNUSED						ALL
	F02	UNUSED						ALL
	F03	UNUSED						ALL
	F04	UNUSED						ALL
	F05	UNUSED						ALL
	F06	UNUSED						ALL
	F07	UNUSED						ALL
	F08	UNUSED						ALL
	F09	UNUSED						ALL
	F10	UNUSED						ALL
	F11	UNUSED						ALL
	F12	UNUSED						ALL
	F13	UNUSED						ALL
	F14	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00300

Page 155

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00393B		//		PLUG-PART OF D00393 (continued)				ALL
	F15	UNUSED						ALL
	G01	UNUSED						ALL
	G02		W0803	207W	24		34-43-21	ALL
	G03		W0803	207WB	24		34-43-21	ALL
	G04	UNUSED						ALL
	G05	UNUSED						ALL
	G06	UNUSED						ALL
	G07	UNUSED						ALL
	G08	UNUSED						ALL
	G09	UNUSED						ALL
	G10	UNUSED						ALL
	G11	UNUSED						ALL
	G12		W0803	213R	24		34-43-21	ALL
	G13		W0803	213B	24		34-43-21	ALL
	G14		W0803	008	24		34-43-21	ALL
	G15	UNUSED						ALL
	H01	UNUSED						ALL
	H02	UNUSED						ALL
	H03	UNUSED						ALL
	H04	UNUSED						ALL
	H05	UNUSED						ALL
	H06	UNUSED						ALL
	H07	UNUSED						ALL
	H08	UNUSED						ALL
	H09	UNUSED						ALL
	H10	UNUSED						ALL
	H11	UNUSED						ALL
	H12	UNUSED						ALL
	H13	UNUSED						ALL
	H14	UNUSED						ALL
	H15	UNUSED						ALL
	J01	UNUSED						ALL
	J02	UNUSED						ALL
	J03		W0803	206R	24		34-43-21	ALL
	J04		W0803	206B	24		34-43-21	ALL
	J05	UNUSED						ALL
	J06	UNUSED						ALL
	J07	UNUSED						ALL
	J08	UNUSED						ALL
	J09	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00300

Page 156

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00393B		//		PLUG-PART OF D00393 (continued)				ALL
	J10	UNUSED						ALL
	J11		W0803	212R	24		34-43-21	ALL
	J12		W0803	212B	24		34-43-21	ALL
	J13	UNUSED						ALL
	J14	UNUSED						ALL
	J15	UNUSED						ALL
	K01	UNUSED						ALL
	K02	UNUSED						ALL
	K03	UNUSED						ALL
	K04	UNUSED						ALL
	K05	UNUSED						ALL
	K06	UNUSED						ALL
	K07	UNUSED						ALL
	K08	UNUSED						ALL
	K09	UNUSED						ALL
	K10	UNUSED						ALL
	K11	UNUSED						ALL
	K12	UNUSED						ALL
	K13	UNUSED						ALL
	K14	UNUSED						ALL
	K15	UNUSED						ALL
	DED		W0803	207Z			34-43-21	ALL
	DED		W0803	209Z			34-43-21	ALL
			W0803	201	20		34-43-22	ALL
			W0803	201Z			34-43-22	ALL
			W0803	202Z			34-43-22	ALL
			W0803	203Z			34-43-22	ALL
			W0803	204Z			34-43-22	ALL
			W0803	205	20		34-43-22	ALL
			W0803	205Z			34-43-22	ALL
			W0803	206	20		34-43-21	ALL
			W0803	206Z			34-43-21	ALL
			W0803	211	20		34-43-21	ALL
			W0803	211Z			34-43-21	ALL
			W0803	212	20		34-43-21	ALL
			W0803	212Z			34-43-21	ALL
			W0803	213	20		34-43-21	ALL
			W0803	213Z			34-43-21	ALL
			W0803	214	20		34-43-22	ALL
			W0803	214Z			34-43-22	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00300

Page 157

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00393B		//		PLUG-PART OF D00393 (continued)				ALL
			W0803	301Z			34-43-22	ALL
			W0803	302Z			34-43-22	ALL
			W0803	303Z			34-43-22	ALL
D00393C		//		PLUG-PART OF D00393				ALL
	1	UNUSED						ALL
	2		W0803	001	20		34-43-22	ALL
	3		W0803	004	20		34-43-22	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W0803	002	20		34-43-22	ALL
	8		W0803	005	20		34-43-22	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11		W0803	003	20		34-43-22	ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	=C12	UNUSED						ALL
	=C13	UNUSED						ALL
D00395		P008-00/ /		PLUG-				ALL
	A		W0779	020	20		34-43-12	ALL
	B	UNUSED						ALL
	C	UNUSED						ALL
	D		W0779	018	24		34-43-12	ALL
	E		W0779	017	24		34-43-12	ALL
	F	UNUSED						ALL
	G		W0779	025	20		34-43-12	ALL
	H	UNUSED						ALL
	J	UNUSED						ALL
	K		W0779	009	24		34-43-12	ALL
	L		W0779	010	24		34-43-12	ALL
	M		W0779	011	24		34-43-12	ALL
	N	UNUSED						ALL
	P		W0779	021	20		33-13-18	050-099, 150-155, 162-165, 275-276
	P		W0779	225R	20		33-13-18	156-157, 166-199, 277-299
	R	UNUSED						ALL
	S	UNUSED						ALL
	T	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00300

Page 158

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00395		P008-00/ /		PLUG- (continued)				ALL
	U		W0779	013	24		34-43-12	ALL
	V		W0779	012	24		34-43-12	ALL
	W	UNUSED						ALL
	X	UNUSED						ALL
	Y	UNUSED						ALL
	Z	UNUSED						ALL
			W0779	026	20		34-43-12	ALL
			W0779	214Z			34-43-12	ALL
	A-	UNUSED						ALL
	B-	UNUSED						ALL
	C-	UNUSED						ALL
	D-	UNUSED						ALL
	E-		W0779	022	20		33-13-18	050-099, 150-155, 162-165, 275-276
	E-		W0779	225B	20		33-13-18	156-157, 166-199, 277-299
	F-		W0779	014	24		34-43-12	ALL
	G-	UNUSED						ALL
	H-		W0779	214R	24		34-43-12	ALL
	J-		W0779	214B	24		34-43-12	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00300

Page 159 End

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00401A		//		PLUG-PART OF D00401				ALL
	71		W0285	02CX			34-33-11	ALL
	A01	UNUSED						ALL
	A02	UNUSED						ALL
	A03	UNUSED						ALL
	A04	UNUSED						ALL
	A05	UNUSED						ALL
	A06	UNUSED						ALL
	A07	UNUSED						ALL
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04	UNUSED						ALL
	B05	UNUSED						ALL
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	C01	UNUSED						ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05	UNUSED						ALL
	C06	UNUSED						ALL
	C07	UNUSED						ALL
	D01	UNUSED						ALL
	D02	UNUSED						ALL
	D03	UNUSED						ALL
	D04	UNUSED						ALL
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	E01	UNUSED						ALL
	E02	UNUSED						ALL
	E03	UNUSED						ALL
	E04	UNUSED						ALL
	E05	UNUSED						ALL
	E06	UNUSED						ALL
	E07	UNUSED						ALL
	F01	UNUSED						ALL
	F02	UNUSED						ALL
	F03	UNUSED						ALL
	F04	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00400

Page 1

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00401A		//		PLUG-PART OF D00401 (continued)				ALL
	F05	UNUSED						ALL
	F06	UNUSED						ALL
	F07	UNUSED						ALL
	G01	UNUSED						ALL
	G02	UNUSED						ALL
	G03	UNUSED						ALL
	G04	UNUSED						ALL
	G05	UNUSED						ALL
	G06	UNUSED						ALL
	G07	UNUSED						ALL
	H01	UNUSED						ALL
	H02	UNUSED						ALL
	H03	UNUSED						ALL
	H04	UNUSED						ALL
	H05	UNUSED						ALL
	H06	UNUSED						ALL
	H07	UNUSED						ALL
	J01	UNUSED						ALL
	J02	UNUSED						ALL
	J03	UNUSED						ALL
	J04	UNUSED						ALL
	J05	UNUSED						ALL
	J06	UNUSED						ALL
	J07	UNUSED						ALL
	K01	UNUSED						ALL
	K02	UNUSED						ALL
	K03	UNUSED						ALL
	K04	UNUSED						ALL
	K05	UNUSED						ALL
	K06	UNUSED						ALL
	K07	UNUSED						ALL
	=C71		W0285	02CO			34-33-11	ALL
D00401B		//		PLUG-PART OF D00401				ALL
	71		W0285	01CX			34-33-11	ALL
	A01	UNUSED						ALL
	A02	UNUSED						ALL
	A03	UNUSED						ALL
	A04	UNUSED						ALL
	A05	UNUSED						ALL



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00401B		//		PLUG-PART OF D00401 (continued)				ALL
	A06	UNUSED						ALL
	A07	UNUSED						ALL
	B01	UNUSED						ALL
	B02		W0165	202R	24		22-12-11	ALL
	B03		W0165	202B	24		22-12-11	ALL
	B04	UNUSED						ALL
	B05		W0165	005	24		34-33-11	ALL
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	C01	UNUSED						ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05		W0165	005	24		34-33-11	ALL
	C06	UNUSED						ALL
	C07	UNUSED						ALL
	D01	UNUSED						ALL
	D02	UNUSED						ALL
	D03	UNUSED						ALL
	D04	UNUSED						ALL
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	E01	UNUSED						ALL
	E02	UNUSED						ALL
	E03	UNUSED						ALL
	E04	UNUSED						ALL
	E05	UNUSED						ALL
	E06	UNUSED						ALL
	E07	UNUSED						ALL
	F01	UNUSED						ALL
	F02		W0165	009	24		34-33-11	ALL
	F03		W0165	009	24		34-33-11	ALL
	F04		W0165	025	24		34-33-11	ALL
	F05		W0165	028	24		34-33-11	ALL
	F06		W0165	029	24		34-33-11	ALL
	F07	UNUSED						ALL
	G01	UNUSED						ALL
	G02		W0165	201R	24		34-33-11	ALL
	G03		W0165	201B	24		34-33-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00400

Page 3

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00401B		//		PLUG-PART OF D00401 (continued)				ALL
	G04	UNUSED						ALL
	G05		W0165	007	24		34-33-11	ALL
	G06	UNUSED						ALL
	G07	UNUSED						ALL
	H01	UNUSED						ALL
	H02	UNUSED						ALL
	H03	UNUSED						ALL
	H04	UNUSED						ALL
	H05	UNUSED						ALL
	H06	UNUSED						ALL
	H07	UNUSED						ALL
	J01	UNUSED						ALL
	J02	UNUSED						ALL
	J03	UNUSED						ALL
	J04		W0165	004	24		34-33-11	ALL
	J05	UNUSED						ALL
	J06		W0165	004	24		34-33-11	ALL
	J07	UNUSED						ALL
	K01	UNUSED						ALL
	K02	UNUSED						ALL
	K03	UNUSED						ALL
	K04	UNUSED						ALL
	K05	UNUSED						ALL
	K06		W0165	006	24		22-12-11	ALL
	K07	UNUSED						ALL
	= C71		W0285	01CO			34-33-11	ALL
	REF		W0165	201	20		34-33-11	ALL
	REF		W0165	201Z			34-33-11	ALL
	REF		W0165	202	20		22-12-11	ALL
	REF		W0165	202Z			22-12-11	ALL
D00401C		//		PLUG-PART OF D00401				ALL
	1	UNUSED						ALL
	2		W0165	002	20		34-33-11	ALL
	3		W0165	003	20		34-33-11	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8		W0165	008	20		34-33-11	ALL

HOOKUP LIST
D280T132

91-21-51
Section D00400
Page 4
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00401C		//		PLUG-PART OF D00401 (continued)				ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	= C12	UNUSED						ALL
	= C13	UNUSED						ALL
	DED		W0165	008Z			34-33-11	ALL
D00402		SHELF/E06/		RELAY SOCKET-E6-1				ALL
	A1	UNUSED						ALL
	A2		W0030	057	18		24-31-41	ALL
	A3		W0030	066	18		24-31-41	ALL
	B1	UNUSED						ALL
	B2		W0030	058	18		24-31-41	ALL
	B3		W0030	065	18		24-31-41	ALL
	C1	UNUSED						ALL
	C2		W0030	075	18		24-31-41	ALL
	C3		W0030	064	18		24-31-41	ALL
	D1	UNUSED						ALL
	D2	UNUSED						ALL
	D3	UNUSED						ALL
	X1		W0030	063	24		24-31-41	ALL
	X2		W0030	062	24		24-31-41	ALL
D00403A		//		PLUG-PART OF D00403				ALL
	71		W0293	02CX			34-33-21	ALL
	A01	UNUSED						ALL
	A02	UNUSED						ALL
	A03	UNUSED						ALL
	A04	UNUSED						ALL
	A05	UNUSED						ALL
	A06	UNUSED						ALL
	A07	UNUSED						ALL
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04	UNUSED						ALL
	B05	UNUSED						ALL
	B06	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00400

Page 5

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00403A		//		PLUG-PART OF D00403 (continued)				ALL
	B07	UNUSED						ALL
	C01	UNUSED						ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05	UNUSED						ALL
	C06	UNUSED						ALL
	C07	UNUSED						ALL
	D01	UNUSED						ALL
	D02	UNUSED						ALL
	D03	UNUSED						ALL
	D04	UNUSED						ALL
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	E01	UNUSED						ALL
	E02	UNUSED						ALL
	E03	UNUSED						ALL
	E04	UNUSED						ALL
	E05	UNUSED						ALL
	E06	UNUSED						ALL
	E07	UNUSED						ALL
	F01	UNUSED						ALL
	F02	UNUSED						ALL
	F03	UNUSED						ALL
	F04	UNUSED						ALL
	F05	UNUSED						ALL
	F06	UNUSED						ALL
	F07	UNUSED						ALL
	G01	UNUSED						ALL
	G02	UNUSED						ALL
	G03	UNUSED						ALL
	G04	UNUSED						ALL
	G05	UNUSED						ALL
	G06	UNUSED						ALL
	G07	UNUSED						ALL
	H01	UNUSED						ALL
	H02	UNUSED						ALL
	H03	UNUSED						ALL
	H04	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00400

Page 6

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00403A		//		PLUG-PART OF D00403 (continued)				ALL
	H05	UNUSED						ALL
	H06	UNUSED						ALL
	H07	UNUSED						ALL
	J01	UNUSED						ALL
	J02	UNUSED						ALL
	J03	UNUSED						ALL
	J04	UNUSED						ALL
	J05	UNUSED						ALL
	J06	UNUSED						ALL
	J07	UNUSED						ALL
	K01	UNUSED						ALL
	K02	UNUSED						ALL
	K03	UNUSED						ALL
	K04	UNUSED						ALL
	K05	UNUSED						ALL
	K06	UNUSED						ALL
	K07	UNUSED						ALL
	=C71		W0293	02CO			34-33-21	ALL
D00403B		//		PLUG-PART OF D00403				ALL
	71		W0293	01CX			34-33-21	ALL
	A01	UNUSED						ALL
	A02	UNUSED						ALL
	A03	UNUSED						ALL
	A04	UNUSED						ALL
	A05	UNUSED						ALL
	A06	UNUSED						ALL
	A07	UNUSED						ALL
	B01	UNUSED						ALL
	B02		W0175	202R	24		22-12-21	ALL
	B03		W0175	202B	24		22-12-21	ALL
	B04	UNUSED						ALL
	B05	UNUSED						ALL
	B06		W0175	005	24		34-33-21	ALL
	B07	UNUSED						ALL
	C01	UNUSED						ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05		W0175	005	24		34-33-21	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00400

Page 7

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00403B		//		PLUG-PART OF D00403 (continued)				ALL
	C06	UNUSED						ALL
	C07	UNUSED						ALL
	D01	UNUSED						ALL
	D02	UNUSED						ALL
	D03	UNUSED						ALL
	D04	UNUSED						ALL
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	E01	UNUSED						ALL
	E02	UNUSED						ALL
	E03	UNUSED						ALL
	E04	UNUSED						ALL
	E05	UNUSED						ALL
	E06	UNUSED						ALL
	E07	UNUSED						ALL
	F01	UNUSED						ALL
	F02		W0175	009	24		34-33-21	ALL
	F03		W0175	009	24		34-33-21	ALL
	F04		W0175	011	24		34-33-21	ALL
	F05		W0175	028	24		34-33-21	ALL
	F06		W0175	029	24		34-33-21	ALL
	F07	UNUSED						ALL
	G01	UNUSED						ALL
	G02		W0175	201R	24		34-33-21	ALL
	G03		W0175	201B	24		34-33-21	ALL
	G04	UNUSED						ALL
	G05		W0175	007	24		34-33-21	ALL
	G06	UNUSED						ALL
	G07	UNUSED						ALL
	H01	UNUSED						ALL
	H02	UNUSED						ALL
	H03	UNUSED						ALL
	H04	UNUSED						ALL
	H05	UNUSED						ALL
	H06	UNUSED						ALL
	H07	UNUSED						ALL
	J01	UNUSED						ALL
	J02	UNUSED						ALL
	J03	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D00400
Page 8
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00403B		//		PLUG-PART OF D00403 (continued)				ALL
	J04		W0175	004	24		34-33-21	ALL
	J05	UNUSED						ALL
	J06		W0175	004	24		34-33-21	ALL
	J07	UNUSED						ALL
	K01	UNUSED						ALL
	K02	UNUSED						ALL
	K03	UNUSED						ALL
	K04	UNUSED						ALL
	K05	UNUSED						ALL
	K06		W0175	006	24		22-12-21	ALL
	K07	UNUSED						ALL
	= C71		W0293	01CO			34-33-21	ALL
	REF		W0175	201	20		34-33-21	ALL
	REF		W0175	201Z			34-33-21	ALL
	REF		W0175	202	20		22-12-21	ALL
	REF		W0175	202Z			22-12-21	ALL
D00403C		//		PLUG-PART OF D00403				ALL
	1	UNUSED						ALL
	2		W0175	002	20		34-33-21	ALL
	3		W0175	003	20		34-33-21	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8		W0175	030	20		34-33-21	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	= C12	UNUSED						ALL
	= C13	UNUSED						ALL
	DED		W0175	030Z			34-33-21	ALL
D00405A		//		PLUG-PART OF D00405				ALL
	71		W0301	02CX			34-33-31	ALL
	A01	UNUSED						ALL
	A02	UNUSED						ALL
	A03	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00400

Page 9

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00405A		//		PLUG-PART OF D00405 (continued)				ALL
	A04	UNUSED						ALL
	A05	UNUSED						ALL
	A06	UNUSED						ALL
	A07	UNUSED						ALL
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04	UNUSED						ALL
	B05	UNUSED						ALL
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	C01	UNUSED						ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05	UNUSED						ALL
	C06	UNUSED						ALL
	C07	UNUSED						ALL
	D01	UNUSED						ALL
	D02	UNUSED						ALL
	D03	UNUSED						ALL
	D04	UNUSED						ALL
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	E01	UNUSED						ALL
	E02	UNUSED						ALL
	E03	UNUSED						ALL
	E04	UNUSED						ALL
	E05	UNUSED						ALL
	E06	UNUSED						ALL
	E07	UNUSED						ALL
	F01	UNUSED						ALL
	F02	UNUSED						ALL
	F03	UNUSED						ALL
	F04	UNUSED						ALL
	F05	UNUSED						ALL
	F06	UNUSED						ALL
	F07	UNUSED						ALL
	G01	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00400

Page 10

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00405A		//		PLUG-PART OF D00405 (continued)				ALL
	G02	UNUSED						ALL
	G03	UNUSED						ALL
	G04	UNUSED						ALL
	G05	UNUSED						ALL
	G06	UNUSED						ALL
	G07	UNUSED						ALL
	H01	UNUSED						ALL
	H02	UNUSED						ALL
	H03	UNUSED						ALL
	H04	UNUSED						ALL
	H05	UNUSED						ALL
	H06	UNUSED						ALL
	H07	UNUSED						ALL
	J01	UNUSED						ALL
	J02	UNUSED						ALL
	J03	UNUSED						ALL
	J04	UNUSED						ALL
	J05	UNUSED						ALL
	J06	UNUSED						ALL
	J07	UNUSED						ALL
	K01	UNUSED						ALL
	K02	UNUSED						ALL
	K03	UNUSED						ALL
	K04	UNUSED						ALL
	K05	UNUSED						ALL
	K06	UNUSED						ALL
	K07	UNUSED						ALL
	=C71		W0301	02CO			34-33-31	ALL
D00405B		//		PLUG-PART OF D00405				ALL
	71		W0301	01CX			34-33-31	ALL
	A01	UNUSED						ALL
	A02	UNUSED						ALL
	A03	UNUSED						ALL
	A04	UNUSED						ALL
	A05	UNUSED						ALL
	A06	UNUSED						ALL
	A07	UNUSED						ALL
	B01	UNUSED						ALL
	B02		W0185	202R	24		22-12-31	ALL

HOOKUP LIST
D280T132

91-21-51
Section D00400
Page 11
Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00405B		//		PLUG-PART OF D00405 (continued)				ALL
	B03		W0185	202B	24		22-12-31	ALL
	B04	UNUSED						ALL
	B05	UNUSED						ALL
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	C01	UNUSED						ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05		W0185	005	24		34-33-31	ALL
	C06		W0185	005	24		34-33-31	ALL
	C07	UNUSED						ALL
	D01	UNUSED						ALL
	D02	UNUSED						ALL
	D03	UNUSED						ALL
	D04	UNUSED						ALL
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	E01	UNUSED						ALL
	E02	UNUSED						ALL
	E03	UNUSED						ALL
	E04	UNUSED						ALL
	E05	UNUSED						ALL
	E06	UNUSED						ALL
	E07	UNUSED						ALL
	F01	UNUSED						ALL
	F02		W0185	009	24		34-33-31	ALL
	F03		W0185	009	24		34-33-31	ALL
	F04		W0185	010	24		34-33-31	ALL
	F05		W0185	028	24		34-33-31	ALL
	F06		W0185	029	24		34-33-31	ALL
	F07	UNUSED						ALL
	G01	UNUSED						ALL
	G02		W0185	201R	24		34-22-39	ALL
	G03		W0185	201B	24		34-22-39	ALL
	G04	UNUSED						ALL
	G05		W0185	007	24		34-33-31	ALL
	G06	UNUSED						ALL
	G07	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D00400
Page 12
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00405B		//		PLUG-PART OF D00405 (continued)				ALL
	H01	UNUSED						ALL
	H02	UNUSED						ALL
	H03	UNUSED						ALL
	H04	UNUSED						ALL
	H05	UNUSED						ALL
	H06	UNUSED						ALL
	H07	UNUSED						ALL
	J01	UNUSED						ALL
	J02	UNUSED						ALL
	J03	UNUSED						ALL
	J04		W0185	004	24		34-33-31	ALL
	J05	UNUSED						ALL
	J06		W0185	004	24		34-33-31	ALL
	J07	UNUSED						ALL
	K01	UNUSED						ALL
	K02	UNUSED						ALL
	K03	UNUSED						ALL
	K04	UNUSED						ALL
	K05	UNUSED						ALL
	K06		W0185	006	24		22-12-31	ALL
	K07	UNUSED						ALL
	= C71		W0301	01CO			34-33-31	ALL
	REF		W0185	201	20		34-22-39	ALL
	REF		W0185	201Z			34-22-39	ALL
	REF		W0185	202	20		22-12-31	ALL
	REF		W0185	202Z			22-12-31	ALL
D00405C		//		PLUG-PART OF D00405				ALL
	1	UNUSED						ALL
	2		W0185	002	20		34-33-31	ALL
	3		W0185	003	20		34-33-31	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8		W0185	030	20		34-33-31	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D00400
Page 13
Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00405C		//		PLUG-PART OF D00405 (continued)				ALL
	13	UNUSED						ALL
	= C12	UNUSED						ALL
	= C13	UNUSED						ALL
	DED		W0185	030Z			34-33-31	ALL
D00407		P008-00/ /		PLUG-P8				ALL
	1	DK	W0843	001	18		33-13-18	050-099, 150-155, 162-165, 275-276
	1	DK	W0843	204R	18		33-13-18	156-157, 166-199, 277-299
	2	DK	W0843	002	18		33-13-18	050-099, 150-155, 162-165, 275-276
	2	DK	W0843	204B	18		33-13-18	156-157, 166-199, 277-299
	3	UNUSED						ALL
	4	UNUSED						050-099, 151
	4		W0843	900	20		23-12-11	150, 152-199, 275-299
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	DK	W0843	004	18		23-12-11	ALL
	14		W0843	014	20		23-12-11	ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17		W0843	201R	24		23-12-11	ALL
	18		W0843	201B	24		23-12-11	ALL
	19		W0843	201Z			23-12-11	ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D00408A		//		PLUG-PART OF D00408				ALL
	A01	UNUSED						ALL
	A02	UNUSED						ALL
	A03	UNUSED						ALL
	A04	UNUSED						ALL
	A05	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00400

Page 14

Mar 14/2007

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00408A		//		PLUG-PART OF D00408 (continued)				ALL
	A06	UNUSED						ALL
	A07	UNUSED						ALL
	A08	UNUSED						ALL
	A09	UNUSED						ALL
	A10	UNUSED						ALL
	A11	UNUSED						ALL
	A12	UNUSED						ALL
	A13	UNUSED						ALL
	A14	UNUSED						ALL
	A15	UNUSED						ALL
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04	UNUSED						ALL
	B05	UNUSED						ALL
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13	UNUSED						ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	C01	UNUSED						ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05	UNUSED						ALL
	C06	UNUSED						ALL
	C07	UNUSED						ALL
	C08	UNUSED						ALL
	C09	UNUSED						ALL
	C10	UNUSED						ALL
	C11	UNUSED						ALL
	C12	UNUSED						ALL
	C13	UNUSED						ALL
	C14	UNUSED						ALL
	C15	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00400

Page 15

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00408A		//		PLUG-PART OF D00408 (continued)				ALL
	D01	UNUSED						ALL
	D02	UNUSED						ALL
	D03	UNUSED						ALL
	D04	UNUSED						ALL
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	D08	UNUSED						ALL
	D09	UNUSED						ALL
	D10	UNUSED						ALL
	D11	UNUSED						ALL
	D12	UNUSED						ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15	UNUSED						ALL
	E01	UNUSED						ALL
	E02	UNUSED						ALL
	E03	UNUSED						ALL
	E04	UNUSED						ALL
	E05	UNUSED						ALL
	E06	UNUSED						ALL
	E07	UNUSED						ALL
	E08	UNUSED						ALL
	E09	UNUSED						ALL
	E10	UNUSED						ALL
	E11	UNUSED						ALL
	E12	UNUSED						ALL
	E13	UNUSED						ALL
	E14	UNUSED						ALL
	E15	UNUSED						ALL
	F01	UNUSED						ALL
	F02	UNUSED						ALL
	F03	UNUSED						ALL
	F04	UNUSED						ALL
	F05	UNUSED						ALL
	F06	UNUSED						ALL
	F07	UNUSED						ALL
	F08	UNUSED						ALL
	F09	UNUSED						ALL
	F10	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00400

Page 16

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00408A		//		PLUG-PART OF D00408 (continued)				ALL
	F11	UNUSED						ALL
	F12	UNUSED						ALL
	F13	UNUSED						ALL
	F14	UNUSED						ALL
	F15	UNUSED						ALL
	G01	UNUSED						ALL
	G02	UNUSED						ALL
	G03	UNUSED						ALL
	G04	UNUSED						ALL
	G05	UNUSED						ALL
	G06	UNUSED						ALL
	G07	UNUSED						ALL
	G08	UNUSED						ALL
	G09	UNUSED						ALL
	G10	UNUSED						ALL
	G11	UNUSED						ALL
	G12	UNUSED						ALL
	G13	UNUSED						ALL
	G14	UNUSED						ALL
	G15	UNUSED						ALL
	H01	UNUSED						ALL
	H02	UNUSED						ALL
	H03	UNUSED						ALL
	H04	UNUSED						ALL
	H05	UNUSED						ALL
	H06	UNUSED						ALL
	H07	UNUSED						ALL
	H08	UNUSED						ALL
	H09	UNUSED						ALL
	H10	UNUSED						ALL
	H11	UNUSED						ALL
	H12	UNUSED						ALL
	H13	UNUSED						ALL
	H14	UNUSED						ALL
	H15	UNUSED						ALL
	J01	UNUSED						ALL
	J02	UNUSED						ALL
	J03	UNUSED						ALL
	J04	UNUSED						ALL
	J05	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00400

Page 17

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00408A		//		PLUG-PART OF D00408 (continued)				ALL
	J06	UNUSED						ALL
	J07	UNUSED						ALL
	J08	UNUSED						ALL
	J09	UNUSED						ALL
	J10	UNUSED						ALL
	J11	UNUSED						ALL
	J12	UNUSED						ALL
	J13	UNUSED						ALL
	J14	UNUSED						ALL
	J15	UNUSED						ALL
	K01	UNUSED						ALL
	K02	UNUSED						ALL
	K03	UNUSED						ALL
	K04	UNUSED						ALL
	K05	UNUSED						ALL
	K06	UNUSED						ALL
	K07	UNUSED						ALL
	K08	UNUSED						ALL
	K09	UNUSED						ALL
	K10	UNUSED						ALL
	K11	UNUSED						ALL
	K12	UNUSED						ALL
	K13	UNUSED						ALL
	K14	UNUSED						ALL
	K15	UNUSED						ALL
D00408B		//		PLUG-PART OF D00408				ALL
	A01		W0020	210R	24		49-14-11	ALL
	A02		W0020	210B	24		49-14-11	ALL
	A03		W0020	209R	22		49-14-11	ALL
	A04		W0020	209B	22		49-14-11	ALL
	A05		W0020	025	22		49-61-11	ALL
	A06	63	W0020	454G	22		49-14-11	050, 155-199, 277-299
	A06		W0020	454G	22		49-14-11	051-099, 150-154, 275-276
	A07	62	W0020	454W	22		49-14-11	050, 155-199, 277-299
	A07		W0020	454W	22		49-14-11	051-099, 150-154, 275-276
	A08	63	W0020	453G	22		49-14-11	050, 155-199, 277-299
	A08		W0020	453G	22		49-14-11	051-099, 150-154, 275-276
	A09	62	W0020	453W	22		49-14-11	050, 155-199, 277-299
	A09		W0020	453W	22		49-14-11	051-099, 150-154, 275-276

HOOKUP LIST
D280T132

91-21-51
Section D00400
Page 18
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00408B		//		PLUG-PART OF D00408 (continued)				ALL
	A10		W0020	205R	24		49-14-11	ALL
	A11		W0020	205B	24		49-14-11	ALL
	A12	UNUSED						ALL
	A13	UNUSED						ALL
	A14	UNUSED						ALL
	A15	UNUSED						ALL
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03		W0020	211R	24		49-14-11	ALL
	B04		W0020	211B	24		49-14-11	ALL
	B05		W0020	204R	24		49-14-11	ALL
	B06		W0020	204B	24		49-14-11	ALL
	B07		W0020	050	24		49-15-11	ALL
	B08		W0020	024	22		49-61-11	ALL
	B09	UNUSED						ALL
	B10		W0020	059	24		49-14-11	ALL
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13	UNUSED						ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	C01	UNUSED						ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05		W0020	009	24		49-14-11	ALL
	C06	UNUSED						ALL
	C07	UNUSED						ALL
	C08		W0020	212R	24		49-14-11	ALL
	C09		W0020	212B	24		49-14-11	ALL
	C10	UNUSED						ALL
	C11	UNUSED						ALL
	C12	UNUSED						ALL
	C13	UNUSED						ALL
	C14	UNUSED						ALL
	C15	UNUSED						ALL
	D01	UNUSED						ALL
	D02	UNUSED						ALL
	D03		W0020	031	24		36-11-41	ALL
	D04		W0020	039	24		29-11-32	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00400

Page 19

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00408B		//		PLUG-PART OF D00408 (continued)				ALL
	D05		W0020	038	24		73-21-15	ALL
	D06		W0020	028	22		49-61-11	ALL
	D07		W0020	066	22		80-11-11	ALL
	D08		W0020	208B	22		21-61-51	ALL
	D09		W0020	208R	22		21-61-51	ALL
	D10	UNUSED						ALL
	D11		W0020	004	24		49-14-11	ALL
	D12	UNUSED						ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15	UNUSED						ALL
	E01	UNUSED						ALL
	E02	UNUSED						ALL
	E03	UNUSED						ALL
	E04		W0020	213R	24		49-14-11	ALL
	E05		W0020	213B	24		49-14-11	ALL
	E06	63	W0020	452G	22		49-14-11	050, 155-199, 277-299
	E06		W0020	452G	22		49-14-11	051-099, 150-154, 275-276
	E07	62	W0020	452W	22		49-14-11	050, 155-199, 277-299
	E07		W0020	452W	22		49-14-11	051-099, 150-154, 275-276
	E08	UNUSED						ALL
	E09	UNUSED						ALL
	E10	UNUSED						ALL
	E11	UNUSED						ALL
	E12	UNUSED						ALL
	E13	UNUSED						ALL
	E14	UNUSED						ALL
	E15	UNUSED						ALL
	F01	UNUSED						ALL
	F02	UNUSED						ALL
	F03		W0020	063	22		49-61-11	ALL
	F04	UNUSED						ALL
	F05	UNUSED						ALL
	F06		W0020	005	24		49-14-11	ALL
	F07		W0020	003	24		49-14-11	ALL
	F08		W0020	214R	24		49-14-11	ALL
	F09		W0020	215B	24		49-14-11	ALL
	F10		W0020	215R	24		49-14-11	ALL
	F11		W0020	214B	24		49-14-11	ALL
	F12	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00400

Page 20

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00408B		//		PLUG-PART OF D00408 (continued)				ALL
	F13	UNUSED						ALL
	F14	UNUSED						ALL
	F15	UNUSED						ALL
	G01	UNUSED						ALL
	G02	UNUSED						ALL
	G03	UNUSED						ALL
	G04	UNUSED						ALL
	G05		W0020	074	22		49-61-11	050-099, 162-199, 275-299
	G05		W0020	030	24		36-11-41	150-157
	G06		W0020	203R	24		49-14-11	ALL
	G07		W0020	203B	24		49-14-11	ALL
	G08		W0020	202R	24		49-14-11	ALL
	G09		W0020	202B	24		49-14-11	ALL
	G10	UNUSED						ALL
	G11	UNUSED						ALL
	G12	UNUSED						ALL
	G13	UNUSED						ALL
	G14	UNUSED						ALL
	G15	UNUSED						ALL
	H01	UNUSED						ALL
	H02	UNUSED						ALL
	H03	UNUSED						ALL
	H04	UNUSED						ALL
	H05	UNUSED						ALL
	H06	UNUSED						ALL
	H07		W0020	026	22		49-61-11	ALL
	H08		W0020	033	22		49-61-11	ALL
	H09	UNUSED						ALL
	H10		W0020	201R	24		49-14-11	ALL
	H11		W0020	201B	24		49-14-11	ALL
	H12	UNUSED						ALL
	H13	UNUSED						ALL
	H14	UNUSED						ALL
	H15	UNUSED						ALL
	J01	UNUSED						ALL
	J02	UNUSED						ALL
	J03	UNUSED						ALL
	J04		W0020	002	24		49-14-11	ALL
	J05		W0020	001	24		49-14-11	ALL
	J06		W0020	027	24		24-22-41	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00400

Page 21

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00408B		//		PLUG-PART OF D00408 (continued)				ALL
	J07		W0020	010	24		49-14-11	ALL
	J08		W0020	008	24		49-14-11	ALL
	J09		W0020	FRA			49-14-11	ALL
	J10		W0020	061	24		49-14-11	ALL
	J11	UNUSED						ALL
	J12	UNUSED						ALL
	J13	UNUSED						ALL
	J14	UNUSED						ALL
	J15	UNUSED						ALL
	K01	UNUSED						ALL
	K02	UNUSED						ALL
	K03	UNUSED						ALL
	K04		W0020	068	24		49-71-11	ALL
	K05	UNUSED						ALL
	K06		W0020	065	22		49-61-11	ALL
	K07		W0020	072	24		49-73-11	ALL
	K08	UNUSED						ALL
	K09	UNUSED						ALL
	K10	UNUSED						ALL
	K11	UNUSED						ALL
	K12	UNUSED						ALL
	K13	UNUSED						ALL
	K14	UNUSED						ALL
	K15	UNUSED						ALL
			W0020	201Z			49-14-11	ALL
			W0020	202Z			49-14-11	ALL
			W0020	203Z			49-14-11	ALL
			W0020	204Z			49-14-11	ALL
			W0020	205Z			49-14-11	ALL
			W0020	209Z			49-14-11	ALL
			W0020	210Z			49-14-11	ALL
			W0020	211Z			49-14-11	ALL
			W0020	212Z			49-14-11	ALL
			W0020	213Z			49-14-11	ALL
			W0020	214Z			49-14-11	ALL
			W0020	215Z			49-14-11	ALL
			W0020	452Z			49-14-11	ALL
			W0020	453Z			49-14-11	ALL
			W0020	454Z			49-14-11	ALL
			W0020	FRA			49-14-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00400

Page 22

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00408C		//		PLUG-PART OF D00408				ALL
	1		W0020	032	24		49-41-11	ALL
	2		W0020	036	16		49-61-11	ALL
	3	UNUSED						ALL
	4		W0020	011	20		49-14-11	ALL
	5	UNUSED						ALL
	6		W0020	058	20		49-14-11	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9		W0020	034	16		49-61-11	ALL
	10	UNUSED						ALL
	11		W0020	035	16		49-61-11	ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	= C12	UNUSED						ALL
	= C13	UNUSED						ALL
D00409		P008-00/ /		PLUG-P8				ALL
	1	DK	W0845	001	18		33-13-18	050-099, 150-155, 162-165, 275-276
	1	DK	W0845	203R	18		33-13-18	156-157, 166-199, 277-299
	2	DK	W0845	002	18		33-13-18	050-099, 150-155, 162-165, 275-276
	2	DK	W0845	203B	18		33-13-18	156-157, 166-199, 277-299
	3	UNUSED						ALL
	4	UNUSED						050-099, 151
	4		W0845	900	20		23-12-21	150, 152-199, 275-299
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	DK	W0845	004	18		23-12-21	ALL
	14		W0845	014	20		23-12-21	ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17		W0845	201R	24		23-12-21	ALL
	18		W0845	201B	24		23-12-21	ALL
	19		W0845	201Z			23-12-21	ALL
	20	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00400

Page 23

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00409		P008-00/ /		PLUG-P8 (continued)				ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D00411		P008-00/ /		PLUG-				ALL
	1	DK	W0847	001	18		33-13-18	050-099, 150-155, 162-165, 275-276
	1	DK	W0847	203B	18		33-13-18	156-157, 166-199
	1	DK	W0847	203R	18		33-13-18	277-299
	2	DK	W0847	002	18		33-13-18	050-099, 150-155, 162-165, 275-276
	2	DK	W0847	203R	18		33-13-18	156-157, 166-199
	2	DK	W0847	203B	18		33-13-18	277-299
	3	UNUSED						ALL
	4	UNUSED						050-099, 151
	4		W0847	900	20		23-12-31	150, 152-199, 275-299
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	DK	W0847	004	18		23-12-31	ALL
	14		W0847	014	20		23-12-31	ALL
	15	UNUSED						050-099, 150-166, 275-299
	15		W0847	005	24		23-22-12	167-199
	16	UNUSED						050-099, 150-166, 275-299
	16		W0847	003	24		23-22-12	167-199
	17		W0847	201R	24		23-12-31	ALL
	18		W0847	201B	24		23-12-31	ALL
	19		W0847	201Z			23-12-31	ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	CAP	Y	W0847	016	22		SPARE	167-199
	CAP	Y	W0847	017	22		SPARE	167-199

HOOKUP LIST

D280T132

91-21-51

Section D00400

Page 24

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00413A		//		PLUG-PART OF D00413				ALL
	A01		W1127	260R	24		22-12-11	ALL
	A02	UNUSED						ALL
	A03		W1127	255R	24		34-22-38	ALL
	A04	UNUSED						ALL
	A05		W1127	239R	24		34-22-38	ALL
	A06	UNUSED						ALL
	A07		W1127	258R	24		34-22-39	ALL
	A08	UNUSED						ALL
	A09		W1127	001	24		34-22-35	ALL
	A10	UNUSED						ALL
	A11		W1127	106	24		34-22-37	ALL
	A12	UNUSED						ALL
	A13	UNUSED						ALL
	A14	UNUSED						ALL
	A15	UNUSED						ALL
	B01		W1127	260B	24		22-12-11	ALL
	B02	UNUSED						ALL
	B03		W1127	255B	24		34-22-38	ALL
	B04	UNUSED						ALL
	B05		W1127	239B	24		34-22-38	ALL
	B06	UNUSED						ALL
	B07		W1127	258B	24		34-22-39	ALL
	B08	UNUSED						ALL
	B09		W1127	002	24		34-22-35	ALL
	B10	UNUSED						050-099, 150-152, 155-156, 162-166, 275-276
	B10		W1127	608	22		34-22-36	153-154, 157, 167-199, 277-299
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13	UNUSED						ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	C01	UNUSED						ALL
	C02		W1127	268R	24		34-22-33	ALL
	C03	UNUSED						ALL
	C04		W1127	247R	24		34-22-39	ALL
	C05	UNUSED						ALL
	C06	UNUSED						ALL
	C07	UNUSED						ALL
	C08	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00400

Page 25

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00413A		//		PLUG-PART OF D00413 (continued)				ALL
	C09		W1127	003	24		34-22-35	ALL
	C10	UNUSED						ALL
	C11	UNUSED						ALL
	C12	UNUSED						ALL
	C13	UNUSED						ALL
	C14		W1127	112	24		34-22-36	ALL
	C15	UNUSED						ALL
	D01	UNUSED						ALL
	D02		W1127	268B	24		34-22-33	ALL
	D03	UNUSED						ALL
	D04		W1127	247B	24		34-22-39	ALL
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	D08	UNUSED						ALL
	D09	UNUSED						ALL
	D10	UNUSED						ALL
	D11	UNUSED						ALL
	D12	UNUSED						ALL
	D13	UNUSED						ALL
	D14		W1127	128	22		34-22-36	ALL
	D15	UNUSED						ALL
	E01		W1127	256W	24		34-43-11	ALL
	E02	UNUSED						ALL
	E03		W1127	253W	24		34-43-21	ALL
	E04	UNUSED						ALL
	E05		W1127	201R	24		34-22-35	ALL
	E06	UNUSED						ALL
	E07	UNUSED						ALL
	E08	UNUSED						ALL
	E09	UNUSED						ALL
	E10	UNUSED						ALL
	E11		W1127	027	24		34-22-37	ALL
	E12		W1127	033	22		34-31-31	ALL
	E13	UNUSED						ALL
	E14	UNUSED						ALL
	E15	UNUSED						ALL
	F01		W1127	256WB	24		34-43-11	ALL
	F02	UNUSED						ALL
	F03		W1127	253WB	24		34-43-21	ALL

HOOKUP LIST
D280T132

91-21-51
Section D00400
Page 26
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00413A		//		PLUG-PART OF D00413 (continued)				ALL
	F04	UNUSED						ALL
	F05		W1127	201B	24		34-22-35	ALL
	F06	UNUSED						ALL
	F07	UNUSED						ALL
	F08	UNUSED						ALL
	F09		W1127	005	24		34-22-35	ALL
	F10	UNUSED						ALL
	F11	UNUSED						ALL
	F12		W1127	024	24		34-22-37	ALL
	F13	UNUSED						ALL
	F14	UNUSED						ALL
	F15	UNUSED						ALL
	G01	UNUSED						ALL
	G02		W1127	251R	24		34-22-39	ALL
	G03	UNUSED						ALL
	G04	UNUSED						ALL
	G05	UNUSED						ALL
	G06		W1127	263R	24		34-22-38	ALL
	G07	UNUSED						ALL
	G08	UNUSED						ALL
	G09		W1127	006	24		34-22-35	ALL
	G10	UNUSED						ALL
	G11		W1127	028	24		34-22-37	ALL
	G12		W1127	019	24		34-22-38	ALL
	G13	UNUSED						ALL
	G14	UNUSED						ALL
	G15	UNUSED						ALL
	H01	UNUSED						ALL
	H02		W1127	251B	24		34-22-39	ALL
	H03	UNUSED						ALL
	H04	UNUSED						ALL
	H05	UNUSED						ALL
	H06		W1127	263B	24		34-22-38	ALL
	H07	UNUSED						ALL
	H08	UNUSED						ALL
	H09		W1127	007	24		34-22-35	ALL
	H10	UNUSED						ALL
	H11	UNUSED						ALL
	H12	UNUSED						ALL
	H13	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00400

Page 27

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00413A		//		PLUG-PART OF D00413 (continued)				ALL
	H14	UNUSED						ALL
	H15	UNUSED						ALL
	J01		W1127	265R	24		34-22-39	ALL
	J02	UNUSED						ALL
	J03		W1127	250R	24		34-22-39	ALL
	J04	UNUSED						ALL
	J05		W1127	248R	24		34-22-39	ALL
	J06	UNUSED						ALL
	J07	UNUSED						ALL
	J08	UNUSED						ALL
	J09		W1127	278R	24		34-45-14	050-099, 150-199, 277-299
	J09	UNUSED						275-276
	J10	UNUSED						ALL
	J11	UNUSED						ALL
	J12		W1127	025	24		34-22-37	ALL
	J13	UNUSED						ALL
	J14	UNUSED						ALL
	J15	UNUSED						ALL
	K01		W1127	265B	24		34-22-39	ALL
	K02	UNUSED						ALL
	K03		W1127	250B	24		34-22-39	ALL
	K04	UNUSED						ALL
	K05		W1127	248B	24		34-22-39	ALL
	K06	UNUSED						ALL
	K07	UNUSED						ALL
	K08	UNUSED						ALL
	K09		W1127	278B	24		34-45-14	050-099, 150-199, 277-299
	K09	UNUSED						275-276
	K10	UNUSED						ALL
	K11	UNUSED						ALL
	K12		W1127	026	24		34-22-37	ALL
	K13		W1127	107	24		34-22-36	ALL
	K14	UNUSED						ALL
	K15	UNUSED						ALL
	DED		W1127	019Z			34-22-38	ALL
	DED		W1127	024Z			34-22-37	ALL
	DED		W1127	025Z			34-22-37	ALL
	DED		W1127	026Z			34-22-37	ALL
	DED		W1127	027Z			34-22-37	ALL
	DED		W1127	028Z			34-22-37	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00400

Page 28

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00413A		//		PLUG-PART OF D00413 (continued)				ALL
	DED		W1127	033Z			34-31-31	ALL
	DED		W1127	201Z			34-22-35	ALL
	DED		W1127	239Z			34-22-38	ALL
	DED		W1127	247Z			34-22-39	ALL
	DED		W1127	248Z			34-22-39	ALL
	DED		W1127	250Z			34-22-39	ALL
	DED		W1127	251Z			34-22-39	ALL
	DED		W1127	253Z			34-43-21	ALL
	DED		W1127	255Z			34-22-38	ALL
	DED		W1127	256Z			34-43-11	ALL
	DED		W1127	258Z			34-22-39	ALL
	DED		W1127	260Z			22-12-11	ALL
	DED		W1127	263Z			34-22-38	ALL
	DED		W1127	265Z			34-22-39	ALL
	DED		W1127	268Z			34-22-33	ALL
	DED		W1127	278Z			34-45-14	050-099, 150-199, 277-299
D00413B		//		PLUG-PART OF D00413				ALL
	A01		W1127	254R	24		22-12-31	ALL
	A02	UNUSED						ALL
	A03	UNUSED						ALL
	A04	UNUSED						ALL
	A05		W1127	241R	24		34-22-38	ALL
	A06	UNUSED						ALL
	A07	UNUSED						ALL
	A08	UNUSED						ALL
	A09	UNUSED						ALL
	A10	UNUSED						ALL
	A11	UNUSED						ALL
	A12	UNUSED						ALL
	A13	UNUSED						ALL
	A14	UNUSED						ALL
	A15	UNUSED						ALL
	B01		W1127	254B	24		22-12-31	ALL
	B02	UNUSED						050-099, 150-152, 155-199, 275-299
	B02		W1127	609	22		34-22-36	153-154
	B03	UNUSED						ALL
	B04		W1127	125	22		34-22-36	ALL
	B05		W1127	241B	24		34-22-38	ALL
	B06	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00400

Page 29

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00413B		//		PLUG-PART OF D00413 (continued)				ALL
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13	UNUSED						ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	C01	UNUSED						ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05	UNUSED						ALL
	C06	UNUSED						ALL
	C07	UNUSED						ALL
	C08	UNUSED						ALL
	C09	UNUSED						ALL
	C10	UNUSED						ALL
	C11	UNUSED						ALL
	C12	UNUSED						ALL
	C13	UNUSED						ALL
	C14	UNUSED						ALL
	C15	UNUSED						ALL
	D01	UNUSED						ALL
	D02	UNUSED						ALL
	D03	UNUSED						ALL
	D04	UNUSED						ALL
	D05		W1127	109	22		34-22-36	ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	D08		W1127	094	22		34-22-36	ALL
	D09	UNUSED						ALL
	D10		W1127	097	22		34-22-36	ALL
	D11		W1127	102	22		34-22-36	ALL
	D12		W1127	098	22		34-22-36	ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15	UNUSED						ALL
	E01	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00400

Page 30

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00413B		//		PLUG-PART OF D00413 (continued)				ALL
	E02	UNUSED						ALL
	E03	UNUSED						ALL
	E04	UNUSED						ALL
	E05	UNUSED						ALL
	E06	UNUSED						ALL
	E07	UNUSED						ALL
	E08	UNUSED						ALL
	E09	UNUSED						ALL
	E10		W1127	056	22		34-22-36	ALL
	E11	UNUSED						ALL
	E12	UNUSED						ALL
	E13	UNUSED						ALL
	E14	UNUSED						ALL
	E15	UNUSED						ALL
	F01	UNUSED						ALL
	F02	UNUSED						ALL
	F03	UNUSED						ALL
	F04	UNUSED						ALL
	F05	UNUSED						ALL
	F06		W1127	123	22		34-22-36	ALL
	F07	UNUSED						ALL
	F08	UNUSED						ALL
	F09		W1127	091	22		34-22-36	ALL
	F10	UNUSED						ALL
	F11	UNUSED						ALL
	F12	UNUSED						ALL
	F13	UNUSED						ALL
	F14	UNUSED						ALL
	F15	UNUSED						ALL
	G01	UNUSED						ALL
	G02	UNUSED						ALL
	G03		W1127	604	22		34-22-36	050-099, 150-199, 277-299
	G03	UNUSED						275-276
	G04		W1127	243R	24		34-22-39	ALL
	G05	UNUSED						ALL
	G06		W1127	126	22		34-22-36	ALL
	G07	UNUSED						ALL
	G08	UNUSED						ALL
	G09		W1127	092	22		34-22-36	ALL
	G10	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00400

Page 31

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00413B		//		PLUG-PART OF D00413 (continued)				ALL
	G11	UNUSED						ALL
	G12		W1127	605	22		34-22-36	050-099, 150-199, 277-299
	G12	UNUSED						275-276
	G13	UNUSED						ALL
	G14	UNUSED						ALL
	G15	UNUSED						ALL
	H01	UNUSED						ALL
	H02	UNUSED						ALL
	H03	UNUSED						050-099, 150-152, 155-156, 162-166, 275-276
	H03		W1127	606	22		34-22-36	153-154, 157, 167-199, 277-299
	H04		W1127	243B	24		34-22-39	ALL
	H05	UNUSED						ALL
	H06	UNUSED						ALL
	H07	UNUSED						ALL
	H08	UNUSED						ALL
	H09	UNUSED						ALL
	H10	UNUSED						ALL
	H11	UNUSED						ALL
	H12	UNUSED						ALL
	H13	UNUSED						ALL
	H14	UNUSED						ALL
	H15	UNUSED						ALL
	J01	UNUSED						ALL
	J02	UNUSED						ALL
	J03	UNUSED						ALL
	J04	UNUSED						050-099, 150-152, 155-156, 162-166, 275-276
	J04		W1127	607	22		34-22-36	153-154, 157, 167-199, 277-299
	J05		W1127	136	22		34-22-36	ALL
	J06	UNUSED						ALL
	J07	UNUSED						ALL
	J08	UNUSED						ALL
	J09	UNUSED						ALL
	J10	UNUSED						ALL
	J11	UNUSED						ALL
	J12	UNUSED						ALL
	J13	UNUSED						ALL
	J14	UNUSED						ALL
	J15	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00400

Page 32

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00413B		//		PLUG-PART OF D00413 (continued)				ALL
	K01	UNUSED						ALL
	K02	UNUSED						ALL
	K03	UNUSED						ALL
	K04	UNUSED						050-099, 150-155, 162-165, 275-276
	K04		W1127	115	22		34-22-36	156-157, 166-199, 277-299
	K05	UNUSED						ALL
	K06	UNUSED						ALL
	K07	UNUSED						ALL
	K08	UNUSED						ALL
	K09	UNUSED						ALL
	K10	UNUSED						ALL
	K11	UNUSED						ALL
	K12	UNUSED						ALL
	K13	UNUSED						ALL
	K14	UNUSED						ALL
	K15	UNUSED						ALL
	DED		W1127	241Z			34-22-38	ALL
	DED		W1127	243Z			34-22-39	ALL
	DED		W1127	254Z			22-12-31	ALL
	REF	Y	W1127	035	20		34-22-36	162-199
	REF	Y	W1127	036	20		34-22-36	162-199
D00413C		//		PLUG-PART OF D00413				ALL
	1		W1127	016	24		34-22-36	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W1127	017	20		34-22-36	ALL
	5	UNUSED						ALL
	6		W1127	018	20		34-22-36	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	= C12	UNUSED						ALL
	= C13	UNUSED						ALL
	DED		W1127	016Z			34-22-36	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00400

Page 33

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00413D		//		PLUG-PART OF D00413				ALL
	A01		W1127	261R	24		22-12-21	ALL
	A02	UNUSED						ALL
	A03		W1127	242R	24		34-22-38	ALL
	A04	UNUSED						ALL
	A05		W1127	240R	24		34-22-38	ALL
	A06	UNUSED						ALL
	A07		W1127	259R	24		34-22-39	ALL
	A08	UNUSED						ALL
	A09		W1127	008	24		34-22-34	ALL
	A10	UNUSED						ALL
	A11		W1127	104	24		34-22-37	ALL
	A12		W1127	021	22		34-22-37	ALL
	A13	UNUSED						ALL
	A14	UNUSED						ALL
	A15	UNUSED						ALL
	B01		W1127	261B	24		22-12-21	ALL
	B02	UNUSED						ALL
	B03		W1127	242B	24		34-22-38	ALL
	B04	UNUSED						ALL
	B05		W1127	240B	24		34-22-38	ALL
	B06	UNUSED						ALL
	B07		W1127	259B	24		34-22-39	ALL
	B08	UNUSED						ALL
	B09		W1127	009	24		34-22-34	ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12		W1127	034	24		33-16-14	ALL
	B13	UNUSED						ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	C01	UNUSED						ALL
	C02		W1127	269R	24		34-22-33	ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05	UNUSED						ALL
	C06	UNUSED						ALL
	C07	UNUSED						ALL
	C08	UNUSED						ALL
	C09		W1127	010	24		34-22-34	ALL
	C10	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D00400
Page 34
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00413D		//		PLUG-PART OF D00413 (continued)				ALL
	C11		W1127	023	22		34-22-37	ALL
	C12	UNUSED						ALL
	C13	UNUSED						ALL
	C14	UNUSED						ALL
	C15	UNUSED						ALL
	D01	UNUSED						ALL
	D02		W1127	269B	24		34-22-33	ALL
	D03	UNUSED						ALL
	D04	UNUSED						ALL
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	D08	UNUSED						ALL
	D09	UNUSED						ALL
	D10	UNUSED						ALL
	D11	UNUSED						ALL
	D12		W1127	108	22		34-22-36	ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15	UNUSED						ALL
	E01		W1127	257W	24		34-43-11	ALL
	E02	UNUSED						ALL
	E03		W1127	252W	24		34-43-21	ALL
	E04	UNUSED						ALL
	E05		W1127	220R	24		34-22-34	ALL
	E06	UNUSED						ALL
	E07	UNUSED						ALL
	E08	UNUSED						ALL
	E09	UNUSED						ALL
	E10	UNUSED						ALL
	E11		W1127	030	24		34-22-37	ALL
	E12	UNUSED						ALL
	E13	UNUSED						ALL
	E14	UNUSED						ALL
	E15	UNUSED						ALL
	F01		W1127	257WB	24		34-43-11	ALL
	F02	UNUSED						ALL
	F03		W1127	252WB	24		34-43-21	ALL
	F04	UNUSED						ALL
	F05		W1127	220B	24		34-22-34	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00400

Page 35

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00413D		//		PLUG-PART OF D00413 (continued)				ALL
	F06	UNUSED						ALL
	F07	UNUSED						ALL
	F08	UNUSED						ALL
	F09		W1127	012	24		34-22-34	ALL
	F10	UNUSED						ALL
	F11	UNUSED						ALL
	F12	UNUSED						ALL
	F13		W1127	042	22		34-22-13	ALL
	F14	UNUSED						ALL
	F15	UNUSED						ALL
	G01	UNUSED						ALL
	G02		W1127	244R	24		34-22-39	ALL
	G03	UNUSED						ALL
	G04	UNUSED						ALL
	G05	UNUSED						ALL
	G06		W1127	264R	24		34-22-38	ALL
	G07	UNUSED						ALL
	G08	UNUSED						ALL
	G09		W1127	013	24		34-22-34	ALL
	G10	UNUSED						ALL
	G11		W1127	032	24		34-22-37	ALL
	G12		W1127	601	22		34-22-36	ALL
	G13	UNUSED						ALL
	G14	UNUSED						ALL
	G15	UNUSED						ALL
	H01	UNUSED						ALL
	H02		W1127	244B	24		34-22-39	ALL
	H03	UNUSED						ALL
	H04	UNUSED						ALL
	H05	UNUSED						ALL
	H06		W1127	264B	24		34-22-38	ALL
	H07	UNUSED						ALL
	H08	UNUSED						ALL
	H09		W1127	014	24		34-22-34	ALL
	H10	UNUSED						ALL
	H11	UNUSED						ALL
	H12	UNUSED						ALL
	H13	UNUSED						ALL
	H14	UNUSED						ALL
	H15	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00400

Page 36

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00413D		//		PLUG-PART OF D00413 (continued)				ALL
	J01		W1127	266R	24		34-22-39	ALL
	J02	UNUSED						ALL
	J03		W1127	245R	24		34-22-39	ALL
	J04	UNUSED						ALL
	J05	UNUSED						ALL
	J06	UNUSED						ALL
	J07	UNUSED						ALL
	J08	UNUSED						ALL
	J09	UNUSED						050-099, 150-156, 162-166, 275-276
	J09		W1127	279R	24		34-45-14	157, 167-199, 277-299
	J10	UNUSED						ALL
	J11		W1127	020	22		34-22-37	ALL
	J12		W1127	029	24		34-22-37	ALL
	J13		W1127	105	22		34-22-37	ALL
	J14	UNUSED						ALL
	J15	UNUSED						ALL
	K01		W1127	266B	24		34-22-39	ALL
	K02	UNUSED						ALL
	K03		W1127	245B	24		34-22-39	ALL
	K04	UNUSED						ALL
	K05	UNUSED						ALL
	K06	UNUSED						ALL
	K07	UNUSED						ALL
	K08	UNUSED						ALL
	K09	UNUSED						050-099, 150-156, 162-166, 275-276
	K09		W1127	279B	24		34-45-14	157, 167-199, 277-299
	K10	UNUSED						ALL
	K11	UNUSED						ALL
	K12		W1127	031	24		34-22-37	ALL
	K13	UNUSED						ALL
	K14	UNUSED						ALL
	K15	UNUSED						ALL
	DED		W1127	029Z			34-22-37	ALL
	DED		W1127	030Z			34-22-37	ALL
	DED		W1127	031Z			34-22-37	ALL
	DED		W1127	032Z			34-22-37	ALL
	DED		W1127	220Z			34-22-34	ALL
	DED		W1127	240Z			34-22-38	ALL
	DED		W1127	244Z			34-22-39	ALL
	DED		W1127	245Z			34-22-39	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00400

Page 37

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00413D		//		PLUG-PART OF D00413 (continued)				ALL
	DED		W1127	252Z			34-43-21	ALL
	DED		W1127	257Z			34-43-11	ALL
	DED		W1127	259Z			34-22-39	ALL
	DED		W1127	261Z			22-12-21	ALL
	DED		W1127	264Z			34-22-38	ALL
	DED		W1127	266Z			34-22-39	ALL
	DED		W1127	269Z			34-22-33	ALL
	DED		W1127	279Z			34-45-14	157, 167-199, 277-299
	REF		W1127	242	20		34-22-38	ALL
	REF		W1127	242Z			34-22-38	ALL
D00413E		//		PLUG-PART OF D00413				ALL
	A01		W1127	202WN	26		34-22-35	ALL
	A02		W1127	203WN	26		34-22-35	ALL
	A03		W1127	204WN	26		34-22-35	ALL
	A04		W1127	205WN	26		34-22-35	ALL
	A05		W1127	206WN	26		34-22-35	ALL
	A06		W1127	207WN	26		34-22-35	ALL
	A07		W1127	208WN	26		34-22-35	ALL
	A08		W1127	209WN	26		34-22-35	ALL
	A09		W1127	210WN	26		34-22-35	ALL
	A10	UNUSED						ALL
	A11		W1127	111	24		34-46-12	050-099, 150-199, 275-278 280-299
	A11	UNUSED						ALL
	A12	UNUSED						ALL
	A13		W1127	262R	24		31-31-12	ALL
	A14	UNUSED						ALL
	A15	UNUSED						ALL
	B01		W1127	202W	26		34-22-35	ALL
	B02		W1127	203W	26		34-22-35	ALL
	B03		W1127	204W	26		34-22-35	ALL
	B04		W1127	205W	26		34-22-35	ALL
	B05		W1127	206W	26		34-22-35	ALL
	B06		W1127	207W	26		34-22-35	ALL
	B07		W1127	208W	26		34-22-35	ALL
	B08		W1127	209W	26		34-22-35	ALL
	B09		W1127	210W	26		34-22-35	ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00400

Page 38

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00413E		//		PLUG-PART OF D00413 (continued)				ALL
	B13		W1127	262B	24		31-31-12	ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	C01		W1127	211WN	26		34-22-35	ALL
	C02		W1127	212WN	26		34-22-35	ALL
	C03		W1127	213WN	26		34-22-35	ALL
	C04		W1127	214WN	26		34-22-35	ALL
	C05		W1127	215WN	26		34-22-35	ALL
	C06		W1127	216WN	26		34-22-35	ALL
	C07		W1127	217WN	26		34-22-35	ALL
	C08		W1127	218WN	26		34-22-35	ALL
	C09		W1127	219WN	26		34-22-35	ALL
	C10	UNUSED						ALL
	C11	UNUSED						ALL
	C12	UNUSED						ALL
	C13	UNUSED						ALL
	C14	UNUSED						ALL
	C15	UNUSED						ALL
	D01		W1127	211W	26		34-22-35	ALL
	D02		W1127	212W	26		34-22-35	ALL
	D03		W1127	213W	26		34-22-35	ALL
	D04		W1127	214W	26		34-22-35	ALL
	D05		W1127	215W	26		34-22-35	ALL
	D06		W1127	216W	26		34-22-35	ALL
	D07		W1127	217W	26		34-22-35	ALL
	D08		W1127	218W	26		34-22-35	ALL
	D09		W1127	219W	26		34-22-35	ALL
	D10	UNUSED						ALL
	D11	UNUSED						ALL
	D12	UNUSED						ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15	UNUSED						ALL
	E01	UNUSED						ALL
	E02	UNUSED						ALL
	E03	UNUSED						ALL
	E04	UNUSED						ALL
	E05	UNUSED						ALL
	E06	UNUSED						ALL
	E07	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00400

Page 39

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00413E		//		PLUG-PART OF D00413 (continued)				ALL
	E08	UNUSED						ALL
	E09	UNUSED						ALL
	E10	UNUSED						ALL
	E11	UNUSED	W1127	068	22		34-45-14	050-099, 150-156, 162-166, 275-276 157, 167-199, 277-299
	E12	UNUSED						ALL
	E13	UNUSED						ALL
	E14	UNUSED						ALL
	E15	UNUSED						ALL
	F01	UNUSED						ALL
	F02	UNUSED						ALL
	F03	UNUSED						ALL
	F04	UNUSED						ALL
	F05	UNUSED						ALL
	F06	UNUSED						ALL
	F07	UNUSED						ALL
	F08	UNUSED						ALL
	F09	UNUSED						ALL
	F10	UNUSED						ALL
	F11	UNUSED						ALL
	F12	UNUSED						ALL
	F13	UNUSED						ALL
	F14	UNUSED						ALL
	F15	UNUSED						ALL
	G01		W1127	230WN	26		34-22-34	ALL
	G02		W1127	231WN	26		34-22-34	ALL
	G03		W1127	232WN	26		34-22-34	ALL
	G04		W1127	233WN	26		34-22-34	ALL
	G05		W1127	234WN	26		34-22-34	ALL
	G06		W1127	235WN	26		34-22-34	ALL
	G07		W1127	236WN	26		34-22-34	ALL
	G08		W1127	237WN	26		34-22-34	ALL
	G09		W1127	238WN	26		34-22-34	ALL
	G10	UNUSED						ALL
	G11	UNUSED	W1127	067	22		34-45-14	050-099, 150-156, 162-166, 275-276 157, 167-199, 277-299
	G12	UNUSED						ALL
	G13	UNUSED						ALL
	G14	UNUSED						ALL
	G15	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00400

Page 40

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00413E		//		PLUG-PART OF D00413 (continued)				ALL
	H01		W1127	230W	26		34-22-34	ALL
	H02		W1127	231W	26		34-22-34	ALL
	H03		W1127	232W	26		34-22-34	ALL
	H04		W1127	233W	26		34-22-34	ALL
	H05		W1127	234W	26		34-22-34	ALL
	H06		W1127	235W	26		34-22-34	ALL
	H07		W1127	236W	26		34-22-34	ALL
	H08		W1127	237W	26		34-22-34	ALL
	H09		W1127	238W	26		34-22-34	ALL
	H10	UNUSED						ALL
	H11	UNUSED						ALL
	H12	UNUSED						ALL
	H13	UNUSED						ALL
	H14	UNUSED						ALL
	H15	UNUSED						ALL
	J01		W1127	221WN	26		34-22-34	ALL
	J02		W1127	222WN	26		34-22-34	ALL
	J03		W1127	223WN	26		34-22-34	ALL
	J04		W1127	224WN	26		34-22-34	ALL
	J05		W1127	225WN	26		34-22-34	ALL
	J06		W1127	226WN	26		34-22-34	ALL
	J07		W1127	227WN	26		34-22-34	ALL
	J08		W1127	228WN	26		34-22-34	ALL
	J09		W1127	229WN	26		34-22-34	ALL
	J10	UNUSED						ALL
	J11	UNUSED						ALL
	J12	UNUSED						ALL
	J13	UNUSED						ALL
	J14	UNUSED						ALL
	J15	UNUSED						ALL
	K01		W1127	221W	26		34-22-34	ALL
	K02		W1127	222W	26		34-22-34	ALL
	K03		W1127	223W	26		34-22-34	ALL
	K04		W1127	224W	26		34-22-34	ALL
	K05		W1127	225W	26		34-22-34	ALL
	K06		W1127	226W	26		34-22-34	ALL
	K07		W1127	227W	26		34-22-34	ALL
	K08		W1127	228W	26		34-22-34	ALL
	K09		W1127	229W	26		34-22-34	ALL
	K10	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00400

Page 41

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00413E		//		PLUG-PART OF D00413 (continued)				ALL
	K11	UNUSED						ALL
	K12	UNUSED						ALL
	K13	UNUSED						ALL
	K14	UNUSED						ALL
	K15	UNUSED						ALL
	DED		W1127	262Z			31-31-12	ALL
D00413F		//		PLUG-PART OF D00413				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	= C12	UNUSED						ALL
	= C13	UNUSED						ALL
D00416		P032-00/ /		RELAY SOCKET-P32				ALL
	A1	UNUSED						ALL
	A2		W0024	115	20		24-22-22	ALL
	A3		W0024	106	20		24-22-22	ALL
	B1		W0024	134	24		24-51-31	ALL
	B2		W0024	114	24		24-51-31	ALL
	B3	UNUSED						ALL
	C1	UNUSED						ALL
	C2	UNUSED						ALL
	C3	UNUSED						ALL
	D1	UNUSED						ALL
	D2	UNUSED						ALL
	D3	UNUSED						ALL
	X1		W0024	113	24		24-51-31	ALL
	X2		W0024	112	20		24-51-31	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00400

Page 42

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00417A		//		PLUG-PART OF D00417				ALL
	A01	UNUSED						ALL
	A02	UNUSED						ALL
	A03	UNUSED						ALL
	A04	UNUSED						ALL
	A05	UNUSED						ALL
	A06	UNUSED						ALL
	A07	UNUSED						ALL
	A08	UNUSED						ALL
	A09	UNUSED						ALL
	A10	UNUSED						ALL
	A11	UNUSED						ALL
	A12	UNUSED						ALL
	A13	UNUSED						ALL
	A14	UNUSED						ALL
	A15	UNUSED						ALL
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04	UNUSED						ALL
	B05	UNUSED						ALL
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13	UNUSED						ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	C01	UNUSED						ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05	UNUSED						ALL
	C06	UNUSED						ALL
	C07	UNUSED						ALL
	C08	UNUSED						ALL
	C09	UNUSED						ALL
	C10	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00400

Page 43

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00417A		//		PLUG-PART OF D00417 (continued)				ALL
	C11	UNUSED						ALL
	C12	UNUSED						ALL
	C13	UNUSED						ALL
	C14	UNUSED						ALL
	C15	UNUSED						ALL
	D01	UNUSED						ALL
	D02	UNUSED						ALL
	D03	UNUSED						ALL
	D04	UNUSED						ALL
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	D08	UNUSED						ALL
	D09	UNUSED						ALL
	D10	UNUSED						ALL
	D11	UNUSED						ALL
	D12	UNUSED						ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15	UNUSED						ALL
D00417B		//		PLUG-PART OF D00417				ALL
	A01		W0127	251R	24		23-51-13	ALL
	A02	UNUSED						ALL
	A03	UNUSED						ALL
	A04	UNUSED						ALL
	A05	UNUSED						ALL
	A06	UNUSED						ALL
	A07	UNUSED						ALL
	A08	UNUSED						ALL
	A09	UNUSED						ALL
	A10	UNUSED						ALL
	A11	UNUSED						ALL
	A12	UNUSED						ALL
	A13	UNUSED						ALL
	A14	UNUSED						ALL
	A15	UNUSED						ALL
	B01		W0127	251B	24		23-51-13	ALL
	B02	UNUSED						ALL
	B03		W0127	104	22		34-31-31	ALL

HOOKUP LIST
D280T132

91-21-51
Section D00400
Page 44
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00417B		//		PLUG-PART OF D00417 (continued)				ALL
	B04	UNUSED						ALL
	B05		W0127	105	22		34-31-31	ALL
	B06	UNUSED						ALL
	B07		W0127	224R	24		22-13-31	ALL
	B08	UNUSED						ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11		W0127	252R	24		34-31-31	ALL
	B12	UNUSED						ALL
	B13		W0127	255R	24		34-31-31	ALL
	B14	UNUSED						ALL
	B15		W0127	254R	22		34-31-31	ALL
	C01		W0127	112	24		22-13-31	ALL
	C02	UNUSED						ALL
	C03		W0127	104	22		34-31-31	ALL
	C04	UNUSED						ALL
	C05		W0127	105	22		34-31-31	ALL
	C06	UNUSED						ALL
	C07		W0127	224B	24		22-13-31	ALL
	C08	UNUSED						ALL
	C09	UNUSED						ALL
	C10	UNUSED						ALL
	C11		W0127	252B	24		34-31-31	ALL
	C12	UNUSED						ALL
	C13		W0127	255B	24		34-31-31	ALL
	C14	UNUSED						ALL
	C15		W0127	254B	22		34-31-31	ALL
	D01	UNUSED						ALL
	D02	UNUSED						ALL
	D03	UNUSED						ALL
	D04	UNUSED						ALL
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	D08	UNUSED						ALL
	D09	UNUSED						ALL
	D10	UNUSED						ALL
	D11	UNUSED						ALL
	D12	UNUSED						ALL
	D13	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00400

Page 45

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00417B		//		PLUG-PART OF D00417 (continued)				ALL
	D14	UNUSED						ALL
	D15		W0127	110	24		34-31-31	ALL
	DED		W0127	252Z			34-31-31	ALL
			W0127	224	20		22-13-31	ALL
			W0127	224Z			22-13-31	ALL
			W0127	255	20		34-31-31	ALL
			W0127	255Z			34-31-31	ALL
D00417C		//		PLUG-PART OF D00417				ALL
	1		W1055	01CX			34-31-31	ALL
	2		W0127	101	20		34-31-31	ALL
	3		W0127	102	20		34-31-31	ALL
	4		W0127	103	20		34-31-31	ALL
	5		W1057	01CX			34-31-31	ALL
	= C1		W1055	01CO			34-31-31	ALL
	= C5		W1057	01CO			34-31-31	ALL
D00418		0962/158/L020		PLUG-				ALL
	1		W0922	005	20		36-11-31	ALL
	2		W0922	004	20		36-11-31	ALL
	3		W0922	007	20		36-11-31	ALL
	4		W0922	003	20		36-11-31	ALL
	5		W0922	006	20		36-11-31	ALL
	6		W0922	001	20		36-11-31	ALL
	7		W0922	002	20		36-11-31	ALL
D00419		P061-00/ /		PLUG-P61				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W0062	18J	24		31-41-13	ALL
	8		W0062	18K	24		31-41-13	ALL
	9		W0062	17J	24		31-41-13	ALL
	10		W0062	17K	24		31-41-13	ALL
	11		W0062	17L	24		31-41-13	ALL
	12		W0062	17M	24		31-41-13	ALL
	13		W0062	17N	24		31-41-13	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00400

Page 46

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00419		P061-00/ /		PLUG-P61 (continued)				ALL
	14		W0062	17P	24		31-41-13	ALL
	15		W0062	17R	24		31-41-13	ALL
	16		W0062	17S	24		31-41-13	ALL
	17		W0062	17T	24		31-41-13	ALL
	18		W0062	17U	24		31-41-13	ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23		W0062	17Z	20		31-41-13	ALL
	24		W0062	18A	24		31-41-13	ALL
	25		W0062	18B	20		31-41-13	ALL
	26		W0062	18C	24		31-41-13	ALL
	27		W0062	18D	20		31-41-13	ALL
	28		W0062	18E	24		31-41-13	ALL
	29		W0062	18F	24		31-41-13	ALL
	30		W0062	18G	24		31-41-13	ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34		W0062	18L	20		31-41-13	ALL
	35		W0062	18M	24		31-41-13	ALL
	36		W0062	18N	24		31-41-13	ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
D00420		1266/280/L020		PLUG-				050-099
D00420		1266/290/L020		PLUG-				150-199, 275-299
	1	UNUSED						ALL
	2		W0824	014	22		33-21-14	050-099
	2		W0824	014	20		33-21-14	150-199, 275-299
	3		W0824	015	22		33-21-14	050-099
	3		W0824	015	20		33-21-14	150-199, 275-299
	4	UNUSED						ALL
	5		W0824	016	20		33-21-14	ALL
	6	UNUSED						ALL
	7		W0824	017	20		33-21-14	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00400

Page 47

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00420		1266/280/L020		PLUG- (continued)				050-099
D00420		1266/290/L020		PLUG- (continued)				150-199, 275-299
	8		W0824	018	20		33-21-14	ALL
	9		W0824	019	22		33-21-14	050-099
	9		W0824	019	20		33-21-14	150-199, 275-299
	10		W0824	020	22		33-21-14	050-099
	10		W0824	020	20		33-21-14	150-199, 275-299
	11		W0824	021	22		33-21-14	050-099
	11		W0824	021	20		33-21-14	150-199, 275-299
	12		W0824	022	22		33-21-14	050-099
	12		W0824	022	20		33-21-14	150-199, 275-299
D00421A		//		PLUG-PART OF D00421				ALL
	A01		W0127	239R	24		22-41-12	ALL
	A02		W0127	239B	24		22-41-12	ALL
	A03		W0127	087	24		22-41-11	ALL
	A04		W0127	031	22		22-11-32	ALL
	A05	UNUSED						ALL
	A06	UNUSED						ALL
	A07	UNUSED						ALL
	A08	UNUSED						ALL
	A09		W0127	223R	24		22-13-31	ALL
	A10		W0127	219R	24		22-12-31	ALL
	A11	UNUSED						ALL
	A12	UNUSED						ALL
	A13		W0127	022	24		22-11-32	ALL
	A14		W0127	022	24		22-11-32	ALL
	A15		W0127	029	22		22-11-32	ALL
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04	UNUSED						ALL
	B05	UNUSED						ALL
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09		W0127	223B	24		22-13-31	ALL
	B10		W0127	219B	24		22-12-31	ALL
	B11		W0127	605	24		22-11-32	050-099
	B11	UNUSED						150-199, 275-299
	B12		W0127	605	24		22-11-32	050-099

HOOKUP LIST

D280T132

91-21-51

Section D00400

Page 48

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00421A		//		PLUG-PART OF D00421 (continued)				ALL
	B12	UNUSED						150-199, 275-299
	B13		W0127	030	24		22-11-32	ALL
	B14		W0127	030	24		22-11-32	ALL
	B15	UNUSED						ALL
	C01	UNUSED						ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05	UNUSED						ALL
	C06	UNUSED						ALL
	C07	UNUSED						ALL
	C08	UNUSED						ALL
	C09		W0127	213R	24		22-12-31	ALL
	C10	UNUSED						ALL
	C11		W0127	632	24		22-11-32	ALL
	C12		W0127	632	24		22-11-32	ALL
	C13	UNUSED						ALL
	C14	UNUSED						ALL
	C15		W0127	026	22		22-11-32	ALL
	D01		W0127	232R	24		22-15-11	ALL
	D02	UNUSED						ALL
	D03	UNUSED						ALL
	D04		W0127	607	24		22-11-32	ALL
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	D08	UNUSED						ALL
	D09		W0127	213B	24		22-12-31	ALL
	D10	UNUSED						ALL
	D11	UNUSED						ALL
	D12	UNUSED						ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15	UNUSED						ALL
	E01		W0127	232B	24		22-15-11	ALL
	E02	UNUSED						ALL
	E03		W0127	090	24		22-15-12	ALL
	E04	UNUSED						ALL
	E05	UNUSED						ALL
	E06	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00400

Page 49

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00421A		//		PLUG-PART OF D00421 (continued)				ALL
	E07	UNUSED						ALL
	E08	UNUSED						ALL
	E09	UNUSED						ALL
	E10	UNUSED						ALL
	E11	UNUSED						ALL
	E12		W0127	066	24		22-14-31	ALL
	E13	UNUSED						ALL
	E14	UNUSED						ALL
	E15	UNUSED						ALL
	F01		W0127	069	22		22-14-31	ALL
	F02	UNUSED						ALL
	F03		W0127	062	22		22-14-31	ALL
	F04	UNUSED						ALL
	F05	UNUSED						ALL
	F06	UNUSED						ALL
	F07	UNUSED						ALL
	F08	UNUSED						ALL
	F09		W0127	014	24		22-15-12	ALL
	F10	UNUSED						ALL
	F11	UNUSED						ALL
	F12		W0127	082	24		22-12-31	ALL
	F13	UNUSED						ALL
	F14	UNUSED						ALL
	F15		W0127	039	22		22-12-31	ALL
	G01		W0127	084	24		22-15-12	ALL
	G02	UNUSED						ALL
	G03		W0127	230R	24		22-15-11	ALL
	G04	UNUSED						ALL
	G05	UNUSED						ALL
	G06	UNUSED						ALL
	G07	UNUSED						ALL
	G08	UNUSED						ALL
	G09		W0127	085	24		22-12-31	ALL
	G10		W0127	076	24		22-15-12	ALL
	G11		W0127	032	22		22-11-32	ALL
	G12		W0127	061	24		22-14-31	ALL
	G13	UNUSED						ALL
	G14	UNUSED						ALL
	G15	UNUSED						ALL
	H01	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D00400
Page 50
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00421A		//		PLUG-PART OF D00421 (continued)				ALL
	H02	UNUSED						ALL
	H03		W0127	230B	24		22-15-11	ALL
	H04	UNUSED						ALL
	H05		W0127	308Y	22		22-13-31	ALL
	H06		W0127	308R	22		22-13-31	ALL
	H07	UNUSED						ALL
	H08	UNUSED						ALL
	H09		W0127	302Y	22		22-12-31	ALL
	H10		W0127	302B	22		22-12-31	ALL
	H11	UNUSED						ALL
	H12	UNUSED						ALL
	H13	UNUSED						ALL
	H14	UNUSED						ALL
	H15		W0127	013	22		22-11-32	ALL
	J01	UNUSED						ALL
	J02	UNUSED						ALL
	J03	UNUSED						ALL
	J04	UNUSED						ALL
	J05		W0127	306R	22		22-13-31	ALL
	J06		W0127	308B	22		22-13-31	ALL
	J07	UNUSED						ALL
	J08	UNUSED						ALL
	J09		W0127	302R	22		22-12-31	ALL
	J10	UNUSED						ALL
	J11	UNUSED						ALL
	J12	UNUSED						ALL
	J13	UNUSED						ALL
	J14	UNUSED						ALL
	J15	UNUSED						ALL
	K01		W0127	081	24		22-15-12	ALL
	K02	UNUSED						ALL
	K03		W0127	079	24		22-15-12	ALL
	K04	UNUSED						ALL
	K05		W0127	306Y	22		22-13-31	ALL
	K06		W0127	306B	22		22-13-31	ALL
	K07	UNUSED						ALL
	K08	UNUSED						ALL
	K09	UNUSED						ALL
	K10	UNUSED						ALL
	K11	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00400

Page 51

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00421A		//		PLUG-PART OF D00421 (continued)				ALL
	K12	UNUSED						ALL
	K13	UNUSED						ALL
	K14	UNUSED						ALL
	K15		W0127	035	22		22-11-32	ALL
	DED		W0127	084Z			22-15-12	ALL
	DED		W0127	090Z			22-15-12	ALL
	DED		W0127	213Z			22-12-31	ALL
	DED		W0127	219Z			22-12-31	ALL
	DED		W0127	223Z			22-13-31	ALL
	DED		W0127	230Z			22-15-11	ALL
	DED		W0127	232Z			22-15-11	ALL
	DED		W0127	239Z			22-41-12	ALL
D00421B		//		PLUG-PART OF D00421				ALL
	A01		W0127	224R	24		22-13-31	ALL
	A02		W0127	224B	24		22-13-31	ALL
	A03		W0127	020	24		22-11-32	ALL
	A04		W0127	607	24		22-11-32	ALL
	A05	UNUSED						ALL
	A06		W0127	024	24		22-11-32	ALL
	A07	UNUSED						ALL
	A08	UNUSED						ALL
	A09	UNUSED						ALL
	A10	UNUSED						ALL
	A11	UNUSED						ALL
	A12		W0127	621	24		22-11-32	ALL
	A13	UNUSED						ALL
	A14	UNUSED						ALL
	A15		W0127	028	22		22-11-32	ALL
	B01		W0127	216R	24		22-12-31	ALL
	B02		W0127	216B	24		22-12-31	ALL
	B03		W0127	208R	24		22-12-31	ALL
	B04		W0127	208B	24		22-12-31	ALL
	B05	UNUSED						ALL
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D00400
Page 52
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00421B		//		PLUG-PART OF D00421 (continued)				ALL
	B12		W0127	620	24		22-11-32	ALL
	B13	UNUSED						ALL
	B14	UNUSED						ALL
	B15		W0127	621	24		22-11-32	ALL
	C01		W0127	212R	24		22-12-31	ALL
	C02		W0127	212B	24		22-12-31	ALL
	C03		W0127	238R	24		22-41-11	ALL
	C04		W0127	238B	24		22-41-11	ALL
	C05	UNUSED						ALL
	C06		W0127	086	24		22-41-11	ALL
	C07		W0127	025	24		22-11-32	ALL
	C08	UNUSED						ALL
	C09		W0127	044	24		22-12-31	ALL
	C10	UNUSED						ALL
	C11	UNUSED						ALL
	C12	UNUSED						ALL
	C13		W0127	074	24		22-11-32	050-099, 275-276
	C13	UNUSED						150-199, 277-299
	C14	UNUSED						ALL
	C15		W0127	027	22		22-11-32	ALL
	D01		W0127	250R	24		31-35-13	ALL
	D02		W0127	250B	24		31-35-13	ALL
	D03		W0127	139	24		22-11-32	ALL
	D04	UNUSED						ALL
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	D08		W0127	043	24		22-12-31	ALL
	D09		W0127	046	24		22-12-31	ALL
	D10		W0127	045	24		22-12-31	ALL
	D11		W0127	211B	22		22-12-31	ALL
	D12	UNUSED						ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15		W0127	620	24		22-11-32	ALL
	E01		W0127	225R	24		22-13-31	ALL
	E02		W0127	225B	24		22-13-31	ALL
	E03		W0127	231R	24		22-15-11	ALL
	E04		W0127	020	24		22-11-32	ALL
	E05	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00400

Page 53

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00421B		//		PLUG-PART OF D00421 (continued)				ALL
	E06		W0127	226B	22		22-13-31	ALL
	E07		W0127	227B	22		22-13-31	ALL
	E08	UNUSED						ALL
	E09		W0127	041	22		22-12-31	ALL
	E10		W0127	047	24		22-12-31	ALL
	E11		W0127	211R	22		22-12-31	ALL
	E12		W0127	067	24		22-14-31	ALL
	E13		W0127	248R	24		22-12-31	ALL
	E14	UNUSED						ALL
	E15	UNUSED						ALL
	F01		W0127	233R	24		22-15-11	ALL
	F02		W0127	233B	24		22-15-11	ALL
	F03		W0127	231B	24		22-15-11	ALL
	F04		W0127	074	24		22-11-32	050-099, 275-276
	F04	UNUSED						150-199, 277-299
	F05	UNUSED						ALL
	F06		W0127	226R	22		22-13-31	ALL
	F07		W0127	227R	22		22-13-31	ALL
	F08	UNUSED						ALL
	F09		W0127	096	24		22-41-13	ALL
	F10		W0127	095	24		22-41-13	ALL
	F11		W0127	144	24		22-11-32	050-099, 150-199, 277-299
	F11	UNUSED						275-276
	F12	UNUSED						ALL
	F13		W0127	248B	24		22-12-31	ALL
	F14	UNUSED						ALL
	F15		W0127	015	22		22-11-32	ALL
	G01	UNUSED						ALL
	G02	UNUSED						ALL
	G03	UNUSED						ALL
	G04	UNUSED						ALL
	G05	UNUSED						ALL
	G06	UNUSED						ALL
	G07	UNUSED						ALL
	G08	UNUSED						ALL
	G09		W0127	083	24		22-12-31	ALL
	G10	UNUSED						ALL
	G11	UNUSED						ALL
	G12		W0127	070	24		22-14-31	ALL
	G13	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00400

Page 54

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00421B		//		PLUG-PART OF D00421 (continued)				ALL
	G14	UNUSED						ALL
	G15	UNUSED						ALL
	H01	UNUSED						ALL
	H02		W0127	117	24		22-13-31	ALL
	H03		W0127	048	24		22-13-31	ALL
	H04	UNUSED						ALL
	H05		W0127	307Y	22		22-13-31	ALL
	H06		W0127	307R	22		22-13-31	ALL
	H07	UNUSED						ALL
	H08	UNUSED						ALL
	H09		W0127	303Y	22		22-12-31	ALL
	H10		W0127	303B	22		22-12-31	ALL
	H11		W0127	018	22		22-11-32	ALL
	H12	UNUSED						ALL
	H13	UNUSED						ALL
	H14	UNUSED						ALL
	H15		W0127	012	22		22-11-32	ALL
	J01	UNUSED						ALL
	J02		W0127	634	24		22-11-32	ALL
	J03	UNUSED						ALL
	J04		W0127	634	24		22-11-32	ALL
	J05		W0127	305R	22		22-13-31	ALL
	J06		W0127	307B	22		22-13-31	ALL
	J07	UNUSED						ALL
	J08	UNUSED						ALL
	J09		W0127	303R	22		22-12-31	ALL
	J10	UNUSED						ALL
	J11		W0127	065	24		22-14-31	ALL
	J12		W0127	064	24		22-14-31	ALL
	J13	UNUSED						ALL
	J14	UNUSED						ALL
	J15	UNUSED						ALL
	K01	UNUSED						ALL
	K02		W0127	068	24		22-14-31	ALL
	K03		W0127	071	24		22-14-31	ALL
	K04		W0127	139	24		22-11-32	ALL
	K05		W0127	305Y	22		22-13-31	ALL
	K06		W0127	305B	22		22-13-31	ALL
	K07	UNUSED						ALL
	K08	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00400

Page 55

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00421B		//		PLUG-PART OF D00421 (continued)				ALL
	K09		W0127	144	24		22-11-32	050-099, 150-199, 277-299
	K09	UNUSED						275-276
	K10		W0127	060	24		22-14-31	ALL
	K11		W0127	072	24		22-14-31	ALL
	K12		W0127	073	24		22-14-31	ALL
	K13		W0127	063	24		22-11-32	ALL
	K14		W0127	063	24		22-11-32	ALL
	K15		W0127	034	22		22-11-32	ALL
	DED		W0127	208Z			22-12-31	ALL
	DED		W0127	216Z			22-12-31	ALL
	DED		W0127	224Z			22-13-31	ALL
	DED		W0127	225Z			22-13-31	ALL
	REF		W0127	250	20		31-35-13	ALL
	REF		W0127	250Z			31-35-13	ALL
			W0127	212	20		22-12-31	ALL
			W0127	212Z			22-12-31	ALL
			W0127	231	20		22-15-11	ALL
			W0127	231Z			22-15-11	ALL
			W0127	233	20		22-15-11	ALL
			W0127	233Z			22-15-11	ALL
			W0127	238	20		22-41-11	ALL
			W0127	238Z			22-41-11	ALL
D00421C		//		PLUG-PART OF D00421				ALL
	1		W0127	001	22		22-11-32	ALL
	2		W0127	002	20		22-11-32	ALL
	3	UNUSED						ALL
	4		W0127	004	20		22-11-31	ALL
	5		W0127	005	22		22-11-32	ALL
	6		W0127	006	22		22-11-31	ALL
	7		W0127	007	20		22-11-31	ALL
	8	UNUSED						ALL
	9		W0127	009	20		22-11-32	ALL
	10		W0127	204R	20		22-11-31	ALL
	11		W0127	204B	20		22-11-31	ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	= C12	UNUSED						ALL
	= C13	UNUSED						ALL
	DED		W0127	001Z			22-11-32	ALL

HOOKUP LIST
D280T132

91-21-51
Section D00400
Page 56
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00421C		//		PLUG-PART OF D00421 (continued)				ALL
	DED		W0127	002Z			22-11-32	ALL
	DED		W0127	005Z			22-11-32	ALL
	DED		W0127	009Z			22-11-32	ALL
D00422		P031-00/ /		RELAY SOCKET-P31				ALL
	A1	UNUSED						ALL
	A2		W0022	098	20		24-22-12	ALL
	A3		W0022	097	20		24-22-12	ALL
	B1		W0022	123	24		24-51-31	ALL
	B2		W0022	094	24		24-51-31	ALL
	B3	UNUSED						ALL
	C1	UNUSED						ALL
	C2	UNUSED						ALL
	C3	UNUSED						ALL
	D1	UNUSED						ALL
	D2	UNUSED						ALL
	D3	UNUSED						ALL
	X1		W0022	095	24		24-51-31	ALL
	X2		W0022	096	20		24-51-31	ALL
D00423A		//		PLUG-PART OF D00423				ALL
	A01	UNUSED						ALL
	A02	UNUSED						ALL
	A03	UNUSED						ALL
	A04	UNUSED						ALL
	A05	UNUSED						ALL
	A06	UNUSED						ALL
	A07	UNUSED						ALL
	A08	UNUSED						ALL
	A09	UNUSED						ALL
	A10	UNUSED						ALL
	A11	UNUSED						ALL
	A12	UNUSED						ALL
	A13	UNUSED						ALL
	A14	UNUSED						ALL
	A15	UNUSED						ALL
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00400

Page 57

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00423A		//		PLUG-PART OF D00423 (continued)				ALL
	B05	UNUSED						ALL
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13	UNUSED						ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	C01	UNUSED						ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05	UNUSED						ALL
	C06	UNUSED						ALL
	C07	UNUSED						ALL
	C08	UNUSED						ALL
	C09	UNUSED						ALL
	C10	UNUSED						ALL
	C11	UNUSED						ALL
	C12	UNUSED						ALL
	C13	UNUSED						ALL
	C14	UNUSED						ALL
	C15	UNUSED						ALL
	D01	UNUSED						ALL
	D02	UNUSED						ALL
	D03	UNUSED						ALL
	D04	UNUSED						ALL
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	D08	UNUSED						ALL
	D09	UNUSED						ALL
	D10	UNUSED						ALL
	D11	UNUSED						ALL
	D12	UNUSED						ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00400

Page 58

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00423A		//		PLUG-PART OF D00423 (continued)				ALL
	D15	UNUSED						ALL
	E01	UNUSED						ALL
	E02	UNUSED						ALL
	E03	UNUSED						ALL
	E04	UNUSED						ALL
	E05	UNUSED						ALL
	E06	UNUSED						ALL
	E07	UNUSED						ALL
	E08	UNUSED						ALL
	E09	UNUSED						ALL
	E10	UNUSED						ALL
	E11	UNUSED						ALL
	E12	UNUSED						ALL
	E13	UNUSED						ALL
	E14	UNUSED						ALL
	E15	UNUSED						ALL
	F01	UNUSED						ALL
	F02	UNUSED						ALL
	F03	UNUSED						ALL
	F04	UNUSED						ALL
	F05	UNUSED						ALL
	F06	UNUSED						ALL
	F07	UNUSED						ALL
	F08	UNUSED						ALL
	F09	UNUSED						ALL
	F10	UNUSED						ALL
	F11	UNUSED						ALL
	F12	UNUSED						ALL
	F13	UNUSED						ALL
	F14	UNUSED						ALL
	F15	UNUSED						ALL
	G01	UNUSED						ALL
	G02	UNUSED						ALL
	G03	UNUSED						ALL
	G04	UNUSED						ALL
	G05	UNUSED						ALL
	G06	UNUSED						ALL
	G07	UNUSED						ALL
	G08	UNUSED						ALL
	G09	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00400

Page 59

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00423A		//		PLUG-PART OF D00423 (continued)				ALL
	G10	UNUSED						ALL
	G11	UNUSED						ALL
	G12	UNUSED						ALL
	G13	UNUSED						ALL
	G14	UNUSED						ALL
	G15	UNUSED						ALL
	H01	UNUSED						ALL
	H02	UNUSED						ALL
	H03	UNUSED						ALL
	H04	UNUSED						ALL
	H05	UNUSED						ALL
	H06	UNUSED						ALL
	H07	UNUSED						ALL
	H08	UNUSED						ALL
	H09	UNUSED						ALL
	H10	UNUSED						ALL
	H11	UNUSED						ALL
	H12	UNUSED						ALL
	H13	UNUSED						ALL
	H14	UNUSED						ALL
	H15	UNUSED						ALL
	J01	UNUSED						ALL
	J02	UNUSED						ALL
	J03	UNUSED						ALL
	J04	UNUSED						ALL
	J05	UNUSED						ALL
	J06	UNUSED						ALL
	J07	UNUSED						ALL
	J08	UNUSED						ALL
	J09	UNUSED						ALL
	J10	UNUSED						ALL
	J11	UNUSED						ALL
	J12	UNUSED						ALL
	J13	UNUSED						ALL
	J14	UNUSED						ALL
	J15	UNUSED						ALL
	K01	UNUSED						ALL
	K02	UNUSED						ALL
	K03	UNUSED						ALL
	K04	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00400

Page 60

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00423A		//		PLUG-PART OF D00423 (continued)				ALL
	K05	UNUSED						ALL
	K06	UNUSED						ALL
	K07	UNUSED						ALL
	K08	UNUSED						ALL
	K09	UNUSED						ALL
	K10	UNUSED						ALL
	K11	UNUSED						ALL
	K12	UNUSED						ALL
	K13	UNUSED						ALL
	K14	UNUSED						ALL
	K15	UNUSED						ALL
D00423B		//		PLUG-PART OF D00423				ALL
	A01	UNUSED						ALL
	A02	UNUSED	W0105	510R	24		34-12-12	ALL
	A03	UNUSED						ALL
	A04	UNUSED	W0105	513R	24		34-12-12	ALL
	A05	UNUSED						ALL
	A06	UNUSED	W0105	518R	24		34-12-61	ALL
	A07	UNUSED						ALL
	A08	UNUSED	W0105	511R	24		34-12-12	ALL
	A09	UNUSED						ALL
	A10	UNUSED						ALL
	A11	UNUSED						ALL
	A12	UNUSED						ALL
	A13	UNUSED						ALL
	A14	UNUSED						ALL
	A15	UNUSED						ALL
	B01	UNUSED						ALL
	B02	UNUSED	W0105	510B	24		34-12-12	ALL
	B03	UNUSED						ALL
	B04	UNUSED	W0105	513B	24		34-12-12	ALL
	B05	UNUSED						ALL
	B06	UNUSED	W0105	518B	24		34-12-61	ALL
	B07	UNUSED						ALL
	B08	UNUSED	W0105	511B	24		34-12-12	ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00400

Page 61

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00423B		//		PLUG-PART OF D00423 (continued)				ALL
	B13	UNUSED						ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	C01	UNUSED						ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05	UNUSED						ALL
	C06	UNUSED						ALL
	C07	UNUSED						ALL
	C08	UNUSED						ALL
	C09	UNUSED						ALL
	C10	UNUSED						ALL
	C11	UNUSED						ALL
	C12	UNUSED						ALL
	C13	UNUSED						ALL
	C14	UNUSED						ALL
	C15	UNUSED						ALL
	D01	UNUSED						ALL
	D02		W0105	863	22		34-12-12	ALL
	D03	UNUSED						ALL
	D04	UNUSED						ALL
	D05	UNUSED						ALL
	D06		W0105	832	22		34-12-12	ALL
	D07	UNUSED						ALL
	D08	UNUSED						ALL
	D09	UNUSED						ALL
	D10	UNUSED						ALL
	D11	UNUSED						ALL
	D12	UNUSED						ALL
	D13	UNUSED						ALL
	D14		W0105	816	22		34-12-12	ALL
	D15	UNUSED						ALL
	E01	UNUSED						ALL
	E02	UNUSED						ALL
	E03		W0105	817	24		34-12-12	ALL
	E04	UNUSED						ALL
	E05	UNUSED						ALL
	E06	UNUSED						ALL
	E07	UNUSED						050-099, 150-199

HOOKUP LIST
D280T132

91-21-51
Section D00400
Page 62
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00423B		//		PLUG-PART OF D00423 (continued)				ALL
	E07		W0105	190	24		34-12-12	275-299
	E08	UNUSED						ALL
	E09		W0105	814	24		34-12-12	ALL
	E10		W0105	818	24		34-12-12	ALL
	E11	UNUSED						ALL
	E12	UNUSED						ALL
	E13	UNUSED						ALL
	E14	UNUSED						ALL
	E15	UNUSED						ALL
	F01	UNUSED						ALL
	F02		W0105	812	24		34-12-12	ALL
	F03	UNUSED						ALL
	F04	UNUSED						ALL
	F05		W0105	850	22		34-12-12	ALL
	F06	UNUSED						ALL
	F07	UNUSED						ALL
	F08	UNUSED						ALL
	F09	UNUSED						ALL
	F10		W0105	829	24		34-12-12	ALL
	F11		W0105	828	24		34-12-12	ALL
	F12	UNUSED						ALL
	F13	UNUSED						ALL
	F14	UNUSED						ALL
	F15		W0105	831	22		34-12-12	ALL
	G01	UNUSED						ALL
	G02	UNUSED						ALL
	G03		W0105	864	22		34-12-12	ALL
	G04	UNUSED						ALL
	G05	UNUSED						ALL
	G06	UNUSED						ALL
	G07	UNUSED						ALL
	G08	UNUSED						ALL
	G09	UNUSED						ALL
	G10	UNUSED						ALL
	G11	UNUSED						ALL
	G12	UNUSED						ALL
	G13	UNUSED						ALL
	G14	UNUSED						050-099
	G14		W0105	816	22		34-12-12	150-199, 275-299
	G15	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00400

Page 63

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00423B		//		PLUG-PART OF D00423 (continued)				ALL
	H01	UNUSED						ALL
	H02		W0105	372R	24		34-12-11	ALL
	H03	UNUSED						ALL
	H04		W0105	373R	24		34-12-11	ALL
	H05	UNUSED						ALL
	H06	UNUSED						ALL
	H07	UNUSED						ALL
	H08		W0105	508R	22		34-12-11	ALL
	H09	UNUSED						ALL
	H10		W0105	376R	24		34-12-11	ALL
	H11		W0105	375R	24		34-12-11	ALL
	H12		W0105	377R	24		34-12-11	ALL
	H13	UNUSED						ALL
	H14	UNUSED						ALL
	H15		W0105	822	22		34-12-12	ALL
	J01	UNUSED						ALL
	J02		W0105	372B	24		34-12-11	ALL
	J03	UNUSED						ALL
	J04		W0105	373B	24		34-12-11	ALL
	J05	UNUSED						ALL
	J06		W0105	811	22		34-12-12	ALL
	J07	UNUSED						ALL
	J08		W0105	508B	22		34-12-11	ALL
	J09	UNUSED						ALL
	J10		W0105	376B	24		34-12-11	ALL
	J11		W0105	375B	24		34-12-11	ALL
	J12		W0105	377B	24		34-12-11	ALL
	J13	UNUSED						ALL
	J14	UNUSED						ALL
	J15	UNUSED						ALL
	K01	UNUSED						ALL
	K02		W0105	372Y	24		34-12-11	ALL
	K03	UNUSED						ALL
	K04		W0105	373Y	24		34-12-11	ALL
	K05	UNUSED						ALL
	K06	UNUSED						ALL
	K07	UNUSED						ALL
	K08		W0105	508Z			34-12-11	ALL
	K09	UNUSED						ALL
	K10		W0105	376Y	24		34-12-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00400

Page 64

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00423B		//		PLUG-PART OF D00423 (continued)				ALL
	K11		W0105	375Y	24		34-12-11	ALL
	K12		W0105	377Y	24		34-12-11	ALL
	K13	UNUSED						ALL
	K14		W0105	816	22		34-12-12	050-099
	K14	UNUSED						150-199, 275-299
	K15		W0105	865	22		34-12-12	050-099
	K15	UNUSED						150-199, 275-299
	DED		W0105	510Z			34-12-12	ALL
	DED		W0105	511Z			34-12-12	ALL
	DED		W0105	513Z			34-12-12	ALL
	DED		W0105	518Z			34-12-61	ALL
D00423C		//		PLUG-PART OF D00423				ALL
	1		W0105	802	20		34-12-11	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W0105	502R	20		34-12-11	ALL
	5		W0105	504R	20		34-12-11	ALL
	6		W0105	502B	20		34-12-11	ALL
	7		W0105	803	16		34-12-11	ALL
	8		W0105	804	16		34-12-11	ALL
	9		W0105	504B	20		34-12-11	ALL
	10		W0105	503R	20		34-12-11	ALL
	11		W0105	503B	20		34-12-11	ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	= C12	UNUSED						ALL
	= C13	UNUSED						ALL
	DED		W0105	502Z			34-12-11	ALL
	DED		W0105	503Z			34-12-11	ALL
	DED		W0105	504Z			34-12-11	ALL
	DED		W0105	802Z			34-12-11	ALL
D00424		0922/294/L020		PLUG-				050-099
	1	UNUSED						050-099
	2		W0822	134	20		33-21-13	050-099
	3		W0822	135	20		33-21-13	050-099
	4	UNUSED						050-099
	5		W0822	136	20		33-21-13	050-099
	6	UNUSED						050-099

HOOKUP LIST

D280T132

91-21-51

Section D00400

Page 65

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00424		0922/294/L020		PLUG- (continued)				050-099
	7		W0822	137	20		33-21-13	050-099
	8		W0822	138	20		33-21-13	050-099
	9		W0822	139	20		33-21-13	050-099
	10		W0822	140	20		33-21-13	050-099
	11		W0822	141	20		33-21-13	050-099
	12		W0822	142	20		33-21-13	050-099
D00425A		//		PLUG-PART OF D00425				ALL
	A01		W1103	236R	24		22-12-11	ALL
	A02	UNUSED						ALL
	A03		W1103	220R	24		34-22-18	ALL
	A04	UNUSED						ALL
	A05		W1103	222R	24		34-22-18	ALL
	A06	UNUSED						ALL
	A07		W1103	233R	24		34-22-19	ALL
	A08	UNUSED						ALL
	A09		W1103	019	24		34-22-14	ALL
	A10	UNUSED						ALL
	A11		W1103	104	24		34-22-17	ALL
	A12	UNUSED						ALL
	A13	UNUSED						ALL
	A14	UNUSED						ALL
	A15	UNUSED						ALL
	B01		W1103	236B	24		22-12-11	ALL
	B02	UNUSED						ALL
	B03		W1103	220B	24		34-22-18	ALL
	B04	UNUSED						ALL
	B05		W1103	222B	24		34-22-18	ALL
	B06	UNUSED						ALL
	B07		W1103	233B	24		34-22-19	ALL
	B08	UNUSED						ALL
	B09		W1103	020	24		34-22-14	ALL
	B10	UNUSED						050-099, 150-152, 155-156, 162-166, 275-276
	B10		W1103	608	22		34-22-16	153-154, 157, 167-199, 277-299
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13	UNUSED						ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00400

Page 66

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00425A		//		PLUG-PART OF D00425 (continued)				ALL
	C01	UNUSED						ALL
	C02		W1103	270R	24		34-22-13	ALL
	C03	UNUSED						ALL
	C04		W1103	227R	24		34-22-19	ALL
	C05	UNUSED						ALL
	C06	UNUSED						ALL
	C07	UNUSED						ALL
	C08	UNUSED						ALL
	C09		W1103	021	24		34-22-14	ALL
	C10	UNUSED						ALL
	C11	UNUSED						ALL
	C12	UNUSED						ALL
	C13	UNUSED						ALL
	C14		W1103	112	24		34-22-16	ALL
	C15	UNUSED						ALL
	D01	UNUSED						ALL
	D02		W1103	270B	24		34-22-13	ALL
	D03	UNUSED						ALL
	D04		W1103	227B	24		34-22-19	ALL
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	D08	UNUSED						ALL
	D09	UNUSED						ALL
	D10	UNUSED						ALL
	D11	UNUSED						ALL
	D12	UNUSED						ALL
	D13	UNUSED						ALL
	D14		W1103	128	22		34-22-16	ALL
	D15	UNUSED						ALL
	E01		W1103	238W	24		34-43-11	ALL
	E02	UNUSED						ALL
	E03	UNUSED						ALL
	E04	UNUSED						ALL
	E05		W1103	201R	24		34-22-14	ALL
	E06	UNUSED						ALL
	E07	UNUSED						ALL
	E08	UNUSED						ALL
	E09	UNUSED						ALL
	E10	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00400

Page 67

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00425A		//		PLUG-PART OF D00425 (continued)				ALL
	E11		W1103	008	24		34-22-17	ALL
	E12		W1103	016	22		34-31-11	ALL
	E13	UNUSED						ALL
	E14	UNUSED						ALL
	E15	UNUSED						ALL
	F01		W1103	238WB	24		34-43-11	ALL
	F02	UNUSED						ALL
	F03	UNUSED						ALL
	F04	UNUSED						ALL
	F05		W1103	201B	24		34-22-14	ALL
	F06	UNUSED						ALL
	F07	UNUSED						ALL
	F08	UNUSED						ALL
	F09		W1103	025	24		34-22-15	ALL
	F10	UNUSED						ALL
	F11	UNUSED						ALL
	F12		W1103	073	24		34-22-17	ALL
	F13	UNUSED						ALL
	F14	UNUSED						ALL
	F15	UNUSED						ALL
	G01	UNUSED						ALL
	G02		W1103	225R	24		34-22-19	ALL
	G03	UNUSED						ALL
	G04	UNUSED						ALL
	G05	UNUSED						ALL
	G06		W1103	239R	24		34-22-18	ALL
	G07	UNUSED						ALL
	G08	UNUSED						ALL
	G09		W1103	026	24		34-22-15	ALL
	G10	UNUSED						ALL
	G11		W1103	009	24		34-22-17	ALL
	G12	UNUSED						ALL
	G13	UNUSED						ALL
	G14	UNUSED						ALL
	G15	UNUSED						ALL
	H01	UNUSED						ALL
	H02		W1103	225B	24		34-22-19	ALL
	H03	UNUSED						ALL
	H04	UNUSED						ALL
	H05	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00400

Page 68

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00425A		//		PLUG-PART OF D00425 (continued)				ALL
	H06		W1103	239B	24		34-22-18	ALL
	H07	UNUSED						ALL
	H08	UNUSED						ALL
	H09		W1103	027	24		34-22-15	ALL
	H10	UNUSED						ALL
	H11	UNUSED						ALL
	H12	UNUSED						ALL
	H13	UNUSED						ALL
	H14	UNUSED						ALL
	H15	UNUSED						ALL
	J01		W1103	242R	24		34-22-19	ALL
	J02	UNUSED						ALL
	J03		W1103	224R	24		34-22-19	ALL
	J04	UNUSED						ALL
	J05		W1103	228R	24		34-22-19	ALL
	J06	UNUSED						ALL
	J07	UNUSED						ALL
	J08	UNUSED						ALL
	J09		W1103	298R	24		34-45-14	ALL
	J10	UNUSED						ALL
	J11	UNUSED						ALL
	J12		W1103	010	24		34-22-17	ALL
	J13	UNUSED						ALL
	J14	UNUSED						ALL
	J15	UNUSED						ALL
	K01		W1103	242B	24		34-22-19	ALL
	K02	UNUSED						ALL
	K03		W1103	224B	24		34-22-19	ALL
	K04	UNUSED						ALL
	K05		W1103	228B	24		34-22-19	ALL
	K06	UNUSED						ALL
	K07	UNUSED						ALL
	K08	UNUSED						ALL
	K09		W1103	298B	24		34-45-14	ALL
	K10	UNUSED						ALL
	K11	UNUSED						ALL
	K12		W1103	011	24		34-22-17	ALL
	K13		W1103	105	24		34-22-16	ALL
	K14	UNUSED						ALL
	K15	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00400

Page 69

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00425A		//		PLUG-PART OF D00425 (continued)				ALL
	DED		W1103	201Z			34-22-14	ALL
	DED		W1103	220Z			34-22-18	ALL
	DED		W1103	222Z			34-22-18	ALL
	DED		W1103	224Z			34-22-19	ALL
	DED		W1103	225Z			34-22-19	ALL
	DED		W1103	238Z			34-43-11	ALL
	DED		W1103	298Z			34-45-14	ALL
	REF		W1103	227	20		34-22-19	ALL
	REF		W1103	227Z			34-22-19	ALL
	REF		W1103	228	20		34-22-19	ALL
	REF		W1103	228Z			34-22-19	ALL
	REF		W1103	236	20		22-12-11	ALL
	REF		W1103	236Z			22-12-11	ALL
			W1103	233	20		34-22-19	ALL
			W1103	233Z			34-22-19	ALL
			W1103	239	20		34-22-18	ALL
			W1103	239Z			34-22-18	ALL
			W1103	242	20		34-22-19	ALL
			W1103	242Z			34-22-19	ALL
			W1103	270	20		34-22-13	ALL
			W1103	270Z			34-22-13	ALL
D00425B		//		PLUG-PART OF D00425				ALL
	A01		W1103	234R	24		22-12-31	ALL
	A02	UNUSED						ALL
	A03	UNUSED						ALL
	A04	UNUSED						ALL
	A05		W1103	221R	24		34-22-18	ALL
	A06	UNUSED						ALL
	A07		W1103	501WN	26		34-22-35	ALL
	A08		W1103	502WN	26		34-22-35	ALL
	A09		W1103	503WN	26		34-22-35	ALL
	A10		W1103	504WN	26		34-22-35	ALL
	A11		W1103	505WN	26		34-22-35	ALL
	A12		W1103	506WN	26		34-22-35	ALL
	A13		W1103	507WN	26		34-22-35	ALL
	A14		W1103	508WN	26		34-22-35	ALL
	A15		W1103	509WN	26		34-22-35	ALL
	B01		W1103	234B	24		22-12-31	ALL
	B02	UNUSED						050-099, 150-152, 155-199, 275-299

HOOKUP LIST

D280T132

91-21-51

Section D00400

Page 70

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00425B		//		PLUG-PART OF D00425 (continued)				ALL
	B02		W1103	609	22		34-22-16	153-154
	B03	UNUSED						ALL
	B04		W1103	125	22		34-22-16	ALL
	B05		W1103	221B	24		34-22-18	ALL
	B06	UNUSED						ALL
	B07		W1103	501W	26		34-22-35	ALL
	B08		W1103	502W	26		34-22-35	ALL
	B09		W1103	503W	26		34-22-35	ALL
	B10		W1103	504W	26		34-22-35	ALL
	B11		W1103	505W	26		34-22-35	ALL
	B12		W1103	506W	26		34-22-35	ALL
	B13		W1103	507W	26		34-22-35	ALL
	B14		W1103	508W	26		34-22-35	ALL
	B15		W1103	509W	26		34-22-35	ALL
	C01	UNUSED						ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05	UNUSED						ALL
	C06	UNUSED						ALL
	C07	UNUSED						ALL
	C08	UNUSED						ALL
	C09	UNUSED						ALL
	C10	UNUSED						ALL
	C11	UNUSED						ALL
	C12	UNUSED						ALL
	C13	UNUSED						ALL
	C14	UNUSED						ALL
	C15	UNUSED						ALL
	D01	UNUSED						ALL
	D02	UNUSED						ALL
	D03	UNUSED						ALL
	D04	UNUSED						ALL
	D05		W1103	109	22		34-22-16	ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	D08		W1103	094	22		34-22-16	ALL
	D09	UNUSED						ALL
	D10		W1103	097	22		34-22-16	ALL
	D11		W1103	102	22		34-22-16	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00400

Page 71

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00425B		//		PLUG-PART OF D00425 (continued)				ALL
	D12		W1103	098	22		34-22-16	ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15	UNUSED						ALL
	E01	UNUSED						ALL
	E02	UNUSED						ALL
	E03	UNUSED						ALL
	E04	UNUSED						ALL
	E05	UNUSED						ALL
	E06	UNUSED						ALL
	E07	UNUSED						ALL
	E08	UNUSED						ALL
	E09	UNUSED						ALL
	E10		W1103	056	22		34-22-16	ALL
	E11	UNUSED						ALL
	E12	UNUSED						ALL
	E13	UNUSED						ALL
	E14	UNUSED						ALL
	E15	UNUSED						ALL
	F01	UNUSED						ALL
	F02	UNUSED						ALL
	F03	UNUSED						ALL
	F04	UNUSED						ALL
	F05	UNUSED						ALL
	F06		W1103	123	22		34-22-16	ALL
	F07	UNUSED						ALL
	F08	UNUSED						ALL
	F09		W1103	091	22		34-22-16	ALL
	F10	UNUSED						ALL
	F11	UNUSED						ALL
	F12	UNUSED						ALL
	F13	UNUSED						ALL
	F14	UNUSED						ALL
	F15	UNUSED						ALL
	G01	UNUSED						ALL
	G02	UNUSED						ALL
	G03		W1103	604	22		34-22-16	050-099, 150-152, 155-199, 275-299 153-154
	G03	UNUSED						
	G04		W1103	229R	24		34-22-19	ALL
	G05	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00400

Page 72

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00425B		//		PLUG-PART OF D00425 (continued)				ALL
	G06		W1103	126	22		34-22-16	ALL
	G07	UNUSED						ALL
	G08		W1103	015	22		34-22-16	ALL
	G09		W1103	092	22		34-22-16	ALL
	G10	UNUSED						ALL
	G11	UNUSED						ALL
	G12		W1103	605	22		34-22-16	050-099, 150-152, 155-199, 275-299
	G12	UNUSED						153-154
	G13	UNUSED						ALL
	G14	UNUSED						ALL
	G15	UNUSED						ALL
	H01	UNUSED						ALL
	H02	UNUSED						ALL
	H03	UNUSED						050-099, 150-152, 155-156, 162-166, 275-276
	H03		W1103	606	22		34-22-16	153-154, 157, 167-199, 277-299
	H04		W1103	229B	24		34-22-19	ALL
	H05	UNUSED						ALL
	H06	UNUSED						ALL
	H07	UNUSED						ALL
	H08	UNUSED						ALL
	H09	UNUSED						ALL
	H10	UNUSED						ALL
	H11	UNUSED						ALL
	H12	UNUSED						ALL
	H13	UNUSED						ALL
	H14	UNUSED						ALL
	H15	UNUSED						ALL
	J01	UNUSED						ALL
	J02	UNUSED						ALL
	J03	UNUSED						ALL
	J04	UNUSED						050-099, 150-152, 155-156, 162-166, 275-276
	J04		W1103	607	22		34-22-16	153-154, 157, 167-199, 277-299
	J05		W1103	136	22		34-22-16	ALL
	J06	UNUSED						ALL
	J07		W1103	510WN	26		34-22-35	ALL
	J08		W1103	511WN	26		34-22-35	ALL
	J09		W1103	512WN	26		34-22-35	ALL
	J10		W1103	513WN	26		34-22-35	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00400

Page 73

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00425B		//		PLUG-PART OF D00425 (continued)				ALL
	J11		W1103	514WN	26		34-22-35	ALL
	J12		W1103	515WN	26		34-22-35	ALL
	J13		W1103	516WN	26		34-22-35	ALL
	J14		W1103	517WN	26		34-22-35	ALL
	J15		W1103	518WN	26		34-22-35	ALL
	K01	UNUSED						ALL
	K02	UNUSED						ALL
	K03	UNUSED						ALL
	K04	UNUSED						ALL
	K04		W1103	115	22		34-22-16	050-099, 150-155, 162-165, 275-276 156-157, 166-199, 277-299
	K05	UNUSED						ALL
	K06	UNUSED						ALL
	K07		W1103	510W	26		34-22-35	ALL
	K08		W1103	511W	26		34-22-35	ALL
	K09		W1103	512W	26		34-22-35	ALL
	K10		W1103	513W	26		34-22-35	ALL
	K11		W1103	514W	26		34-22-35	ALL
	K12		W1103	515W	26		34-22-35	ALL
	K13		W1103	516W	26		34-22-35	ALL
	K14		W1103	517W	26		34-22-35	ALL
	K15		W1103	518W	26		34-22-35	ALL
	DED		W1103	221Z			34-22-18	ALL
	DED		W1103	229Z			34-22-19	ALL
	DED		W1103	234Z			22-12-31	ALL
D00425C		//		PLUG-PART OF D00425				ALL
	1		W1103	012	24		34-22-16	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W1103	013	20		34-22-16	ALL
	5	UNUSED						ALL
	6		W1103	014	20		34-22-16	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	= C12	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D00400
Page 74
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00425C		//		PLUG-PART OF D00425 (continued)				ALL
	=C13	UNUSED						ALL
D00425D		//		PLUG-PART OF D00425				ALL
	A01		W1103	237R	24		22-12-21	ALL
	A02	UNUSED						ALL
	A03		W1103	223R	24		34-61-16	ALL
	A04	UNUSED						ALL
	A05	UNUSED						ALL
	A06	UNUSED						ALL
	A07	UNUSED						ALL
	A08	UNUSED						ALL
	A09		W1103	030	24		34-22-14	ALL
	A10	UNUSED						ALL
	A11	UNUSED						ALL
	A12	UNUSED						ALL
	A13	UNUSED						ALL
	A14	UNUSED						ALL
	A15	UNUSED						ALL
	B01		W1103	237B	24		22-12-21	ALL
	B02	UNUSED						ALL
	B03		W1103	223B	24		34-61-16	ALL
	B04	UNUSED						ALL
	B05	UNUSED						ALL
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09		W1103	029	24		34-22-14	ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12		W1103	018	24		33-16-14	ALL
	B13	UNUSED						ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	C01	UNUSED						ALL
	C02		W1103	269R	24		34-22-13	ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05	UNUSED						ALL
	C06	UNUSED						ALL
	C07	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00400

Page 75

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00425D		//		PLUG-PART OF D00425 (continued)				ALL
	C08	UNUSED						ALL
	C09		W1103	028	24		34-22-14	ALL
	C10	UNUSED						ALL
	C11	UNUSED						ALL
	C12	UNUSED						ALL
	C13	UNUSED						ALL
	C14	UNUSED						ALL
	C15	UNUSED						ALL
	D01	UNUSED						ALL
	D02		W1103	269B	24		34-22-13	ALL
	D03	UNUSED						ALL
	D04	UNUSED						ALL
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	D08	UNUSED						ALL
	D09	UNUSED						ALL
	D10	UNUSED						ALL
	D11	UNUSED						ALL
	D12		W1103	106	22		34-22-16	ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15	UNUSED						ALL
	E01		W1103	235W	24		34-43-11	ALL
	E02	UNUSED						ALL
	E03	UNUSED						ALL
	E04	UNUSED						ALL
	E05	UNUSED						ALL
	E06	UNUSED						ALL
	E07	UNUSED						ALL
	E08	UNUSED						ALL
	E09	UNUSED						ALL
	E10	UNUSED						ALL
	E11	UNUSED						ALL
	E12	UNUSED						ALL
	E13	UNUSED						ALL
	E14	UNUSED						ALL
	E15	UNUSED						ALL
	F01		W1103	235WB	24		34-43-11	ALL
	F02	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D00400
Page 76
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00425D		//		PLUG-PART OF D00425 (continued)				ALL
	F03	UNUSED						ALL
	F04	UNUSED						ALL
	F05	UNUSED						ALL
	F06	UNUSED						ALL
	F07	UNUSED						ALL
	F08	UNUSED						ALL
	F09		W1103	022	24		34-22-14	ALL
	F10	UNUSED						ALL
	F11	UNUSED						ALL
	F12	UNUSED						ALL
	F13		W1103	095	22		34-22-13	ALL
	F14	UNUSED						ALL
	F15	UNUSED						ALL
	G01	UNUSED						ALL
	G02	UNUSED						ALL
	G03	UNUSED						ALL
	G04	UNUSED						ALL
	G05	UNUSED						ALL
	G06		W1103	240R	24		34-22-18	ALL
	G07	UNUSED						ALL
	G08	UNUSED						ALL
	G09		W1103	023	24		34-22-14	ALL
	G10	UNUSED						ALL
	G11	UNUSED						ALL
	G12		W1103	601	22		34-22-16	ALL
	G13	UNUSED						ALL
	G14	UNUSED						ALL
	G15	UNUSED						ALL
	H01	UNUSED						ALL
	H02	UNUSED						ALL
	H03	UNUSED						ALL
	H04	UNUSED						ALL
	H05	UNUSED						ALL
	H06		W1103	240B	24		34-22-18	ALL
	H07	UNUSED						ALL
	H08	UNUSED						ALL
	H09		W1103	024	24		34-22-14	ALL
	H10	UNUSED						ALL
	H11	UNUSED						ALL
	H12	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D00400
Page 77
Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00425D		//		PLUG-PART OF D00425 (continued)				ALL
	H13	UNUSED						ALL
	H14	UNUSED						ALL
	H15	UNUSED						ALL
	J01		W1103	243R	24		34-22-19	ALL
	J02	UNUSED						ALL
	J03	UNUSED						ALL
	J04	UNUSED						ALL
	J05	UNUSED						ALL
	J06	UNUSED						ALL
	J07	UNUSED						ALL
	J08	UNUSED						ALL
	J09	UNUSED						ALL
	J10	UNUSED						ALL
	J11	UNUSED						ALL
	J12	UNUSED						ALL
	J13	UNUSED						ALL
	J14	UNUSED						ALL
	J15	UNUSED						ALL
	K01		W1103	243B	24		34-22-19	ALL
	K02	UNUSED						ALL
	K03	UNUSED						ALL
	K04	UNUSED						ALL
	K05	UNUSED						ALL
	K06	UNUSED						ALL
	K07	UNUSED						ALL
	K08	UNUSED						ALL
	K09	UNUSED						ALL
	K10	UNUSED						ALL
	K11	UNUSED						ALL
	K12	UNUSED						ALL
	K13	UNUSED						ALL
	K14	UNUSED						ALL
	K15	UNUSED						ALL
	DED		W1103	223Z			34-61-16	ALL
	DED		W1103	235Z			34-43-11	ALL
	DED		W1103	237Z			22-12-21	ALL
	DED		W1103	240Z			34-22-18	ALL
	DED		W1103	243Z			34-22-19	ALL
			W1103	269	20		34-22-13	ALL
			W1103	269Z			34-22-13	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00400

Page 78

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00425E		//		PLUG-PART OF D00425				ALL
	A01		W1103	202WN	26		34-22-14	ALL
	A02		W1103	203WN	26		34-22-14	ALL
	A03		W1103	204WN	26		34-22-14	ALL
	A04		W1103	205WN	26		34-22-14	ALL
	A05		W1103	206WN	26		34-22-14	ALL
	A06		W1103	207WN	26		34-22-14	ALL
	A07		W1103	208WN	26		34-22-14	ALL
	A08		W1103	209WN	26		34-22-14	ALL
	A09		W1103	210WN	26		34-22-14	ALL
	A10	UNUSED						ALL
	A11		W1103	017	24		34-46-12	050-099, 150-199, 275-278 280-299
	A11	UNUSED						
	A12	UNUSED						ALL
	A13		W1103	271R	24		31-31-12	ALL
	A14	UNUSED						ALL
	A15	UNUSED						ALL
	B01		W1103	202W	26		34-22-14	ALL
	B02		W1103	203W	26		34-22-14	ALL
	B03		W1103	204W	26		34-22-14	ALL
	B04		W1103	205W	26		34-22-14	ALL
	B05		W1103	206W	26		34-22-14	ALL
	B06		W1103	207W	26		34-22-14	ALL
	B07		W1103	208W	26		34-22-14	ALL
	B08		W1103	209W	26		34-22-14	ALL
	B09		W1103	210W	26		34-22-14	ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13		W1103	271B	24		31-31-12	ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	C01		W1103	211WN	26		34-22-15	ALL
	C02		W1103	212WN	26		34-22-15	ALL
	C03		W1103	213WN	26		34-22-15	ALL
	C04		W1103	214WN	26		34-22-15	ALL
	C05		W1103	215WN	26		34-22-15	ALL
	C06		W1103	216WN	26		34-22-15	ALL
	C07		W1103	217WN	26		34-22-15	ALL
	C08		W1103	218WN	26		34-22-15	ALL
	C09		W1103	219WN	26		34-22-15	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00400

Page 79

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00425E		//		PLUG-PART OF D00425 (continued)				ALL
	C10	UNUSED						ALL
	C11	UNUSED						ALL
	C12	UNUSED						ALL
	C13	UNUSED						ALL
	C14	UNUSED						ALL
	C15	UNUSED						ALL
	D01		W1103	211W	26		34-22-15	ALL
	D02		W1103	212W	26		34-22-15	ALL
	D03		W1103	213W	26		34-22-15	ALL
	D04		W1103	214W	26		34-22-15	ALL
	D05		W1103	215W	26		34-22-15	ALL
	D06		W1103	216W	26		34-22-15	ALL
	D07		W1103	217W	26		34-22-15	ALL
	D08		W1103	218W	26		34-22-15	ALL
	D09		W1103	219W	26		34-22-15	ALL
	D10	UNUSED						ALL
	D11	UNUSED						ALL
	D12	UNUSED						ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15	UNUSED						ALL
	E01	UNUSED						ALL
	E02	UNUSED						ALL
	E03	UNUSED						ALL
	E04	UNUSED						ALL
	E05	UNUSED						ALL
	E06	UNUSED						ALL
	E07	UNUSED						ALL
	E08	UNUSED						ALL
	E09	UNUSED						ALL
	E10	UNUSED						ALL
	E11	UNUSED						050-099, 150-156, 162-166, 275-276
	E11		W1103	602	22		34-45-14	157, 167-199, 277-299
	E12	UNUSED						ALL
	E13	UNUSED						ALL
	E14	UNUSED						ALL
	E15	UNUSED						ALL
	F01	UNUSED						ALL
	F02	UNUSED						ALL
	F03	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00400

Page 80

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00425E		//		PLUG-PART OF D00425 (continued)				ALL
	F04	UNUSED						ALL
	F05	UNUSED						ALL
	F06	UNUSED						ALL
	F07	UNUSED						ALL
	F08	UNUSED						ALL
	F09	UNUSED						ALL
	F10	UNUSED						ALL
	F11	UNUSED						ALL
	F12	UNUSED						ALL
	F13	UNUSED						ALL
	F14	UNUSED						ALL
	F15	UNUSED						ALL
	G01	UNUSED						ALL
	G02	UNUSED						ALL
	G03	UNUSED						ALL
	G04	UNUSED						ALL
	G05	UNUSED						ALL
	G06	UNUSED						ALL
	G07	UNUSED						ALL
	G08	UNUSED						ALL
	G09	UNUSED						ALL
	G10	UNUSED						ALL
	G11	UNUSED						ALL
	G12	UNUSED						ALL
	G13	UNUSED						ALL
	G14	UNUSED						ALL
	G15	UNUSED						ALL
	H01	UNUSED						ALL
	H02	UNUSED						ALL
	H03	UNUSED						ALL
	H04	UNUSED						ALL
	H05	UNUSED						ALL
	H06	UNUSED						ALL
	H07	UNUSED						ALL
	H08	UNUSED						ALL
	H09	UNUSED						ALL
	H10	UNUSED						ALL
	H11	UNUSED						ALL
	H12	UNUSED						ALL
	H13	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00400

Page 81

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00425E		//		PLUG-PART OF D00425 (continued)				ALL
	H14	UNUSED						ALL
	H15	UNUSED						ALL
	J01	UNUSED						ALL
	J02	UNUSED						ALL
	J03	UNUSED						ALL
	J04	UNUSED						ALL
	J05	UNUSED						ALL
	J06	UNUSED						ALL
	J07	UNUSED						ALL
	J08	UNUSED						ALL
	J09	UNUSED						ALL
	J10	UNUSED						ALL
	J11	UNUSED						ALL
	J12	UNUSED						ALL
	J13	UNUSED						ALL
	J14	UNUSED						ALL
	J15	UNUSED						ALL
	K01	UNUSED						ALL
	K02	UNUSED						ALL
	K03	UNUSED						ALL
	K04	UNUSED						ALL
	K05	UNUSED						ALL
	K06	UNUSED						ALL
	K07	UNUSED						ALL
	K08	UNUSED						ALL
	K09	UNUSED						ALL
	K10	UNUSED						ALL
	K11	UNUSED						ALL
	K12	UNUSED						ALL
	K13	UNUSED						ALL
	K14	UNUSED						ALL
	K15	UNUSED						ALL
	DED		W1103	271Z			31-31-12	ALL
D00425F		//		PLUG-PART OF D00425				ALL
	1		W1103	148	22		34-22-16	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W1103	139	22		34-22-16	ALL
	5	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D00400
Page 82
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00425F		//		PLUG-PART OF D00425 (continued)				ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	= C12	UNUSED						ALL
	= C13	UNUSED						ALL
D00426		0909/290/L056		PLUG-				050-099
	1	UNUSED						050-099
	2		W0812	710	20		33-21-13	050-099
	3		W0812	711	20		33-21-13	050-099
	4	UNUSED						050-099
	5		W0812	712	20		33-21-13	050-099
	6	UNUSED						050-099
	7		W0812	713	20		33-21-13	050-099
	8		W0812	714	20		33-21-13	050-099
	9		W0812	715	20		33-21-13	050-099
	10		W0812	716	20		33-21-13	050-099
	11		W0812	717	20		33-21-13	050-099
	12		W0812	718	20		33-21-13	050-099
D00427A		//		PLUG-PART OF D00427				ALL
	A01	UNUSED						ALL
	A02	UNUSED						ALL
	A03	UNUSED						ALL
	A04	UNUSED						ALL
	A05	UNUSED						ALL
	A06		W0105	662B	24		22-32-11	ALL
	A07		W0105	662R	24		22-32-11	ALL
	A08		W0105	661R	24		22-32-11	ALL
	A09		W0105	661B	24		22-32-11	ALL
	A10		W0105	354Y	22		22-32-13	ALL
	A11		W0105	354B	22		22-32-13	ALL
	A12		W0105	354R	22		22-32-13	ALL
	A13		W0105	653B	22		22-31-12	ALL
	A14		W0105	653R	22		22-31-12	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00400

Page 83

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00427A		//		PLUG-PART OF D00427 (continued)				ALL
	A15		W0105	652B	24		22-31-12	ALL
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04	UNUSED						ALL
	B05		W0105	531R	24		22-33-11	ALL
	B06		W0105	531B	24		22-33-11	ALL
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11		W0105	776	22		22-32-14	ALL
	B12	UNUSED						ALL
	B13	UNUSED						ALL
	B14	UNUSED						ALL
	B15		W0105	652R	24		22-31-12	ALL
	C01	UNUSED						ALL
	C02		W0105	666R	24		22-32-11	ALL
	C03		W0105	666B	24		22-32-11	ALL
	C04		W0105	534R	24		22-32-12	ALL
	C05		W0105	534B	24		22-32-12	ALL
	C06	UNUSED						ALL
	C07	UNUSED						ALL
	C08	UNUSED						ALL
	C09	UNUSED						ALL
	C10	UNUSED						ALL
	C11		W0105	774	22		22-32-14	ALL
	C12	UNUSED						ALL
	C13	UNUSED						ALL
	C14	UNUSED						ALL
	C15	UNUSED						ALL
	D01		W0105	759	24		22-32-15	ALL
	D02	UNUSED						ALL
	D03		W0105	648R	24		22-32-12	ALL
	D04		W0105	648B	24		22-32-12	ALL
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	D08	UNUSED						ALL
	D09	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00400

Page 84

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00427A		//		PLUG-PART OF D00427 (continued)				ALL
	D10		W0105	775	22		22-32-14	ALL
	D11		W0105	773	22		22-32-14	ALL
	D12		W0105	768	22		22-32-14	ALL
	D13		W0105	725	22		22-32-14	ALL
	D14	UNUSED						ALL
	D15	UNUSED						ALL
	E01	UNUSED						ALL
	E02	UNUSED						ALL
	E03		W0105	154	24		22-32-13	ALL
	E04	UNUSED						ALL
	E05	UNUSED						ALL
	E06	UNUSED						ALL
	E07	UNUSED						ALL
	E08	UNUSED						ALL
	E09	UNUSED						ALL
	E10	UNUSED						ALL
	E11	UNUSED						ALL
	E12	UNUSED						ALL
	E13	UNUSED						ALL
	E14		W0105	777	22		22-32-14	ALL
	E15		W0105	724	22		22-32-14	ALL
	F01		W0105	692B	24		22-41-12	ALL
	F02		W0105	692R	24		22-41-12	ALL
	F03		W0105	743	22		22-32-14	ALL
	F04		W0105	737	24		22-32-13	ALL
	F05		W0105	736	24		22-32-13	ALL
	F06	UNUSED						ALL
	F07		W0105	726	22		22-32-14	ALL
	F08	UNUSED						ALL
	F09		W0105	727	22		22-32-14	ALL
	F10	UNUSED						ALL
	F11	UNUSED						ALL
	F12	UNUSED						ALL
	F13	UNUSED						ALL
	F14	UNUSED						ALL
	F15	UNUSED						ALL
	G01	UNUSED						ALL
	G02	UNUSED						ALL
	G03	UNUSED						ALL
	G04		W0105	155	24		22-32-13	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00400

Page 85

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00427A		//		PLUG-PART OF D00427 (continued)				ALL
	G05	UNUSED						ALL
	G06	UNUSED						ALL
	G07	UNUSED						ALL
	G08		W0105	772	22		22-32-14	ALL
	G09	UNUSED						ALL
	G10	UNUSED						ALL
	G11		W0105	153	24		22-32-13	ALL
	G12	UNUSED						ALL
	G13	UNUSED						ALL
	G14	UNUSED						ALL
	G15		W0105	747	24		22-32-15	ALL
	H01	UNUSED						ALL
	H02	UNUSED						ALL
	H03	UNUSED						ALL
	H04	UNUSED						ALL
	H05	UNUSED						ALL
	H06		W0105	742	22		22-32-14	ALL
	H07	UNUSED						ALL
	H08	UNUSED						ALL
	H09	UNUSED						ALL
	H10	UNUSED						ALL
	H11	UNUSED						ALL
	H12	UNUSED						ALL
	H13	UNUSED						ALL
	H14	UNUSED						ALL
	H15		W0105	781	22		22-32-14	ALL
	J01		W0105	659B	24		22-32-11	ALL
	J02		W0105	659R	24		22-32-11	ALL
	J03		W0105	739	24		22-32-13	ALL
	J04	UNUSED						ALL
	J05	UNUSED						ALL
	J06	UNUSED						ALL
	J07	UNUSED						ALL
	J08	UNUSED						ALL
	J09		W0105	671R	24		22-32-13	ALL
	J10		W0105	837	22		22-32-14	ALL
	J11	UNUSED						ALL
	J12		W0105	744	22		22-32-14	ALL
	J13	UNUSED						ALL
	J14	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00400

Page 86

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00427A		//		PLUG-PART OF D00427 (continued)				ALL
	J15	UNUSED						ALL
	K01	UNUSED						ALL
	K02		W0105	738	24		22-32-13	ALL
	K03		W0105	711	22		22-31-12	ALL
	K04	UNUSED						ALL
	K05		W0105	728	22		22-32-14	ALL
	K06		W0105	748	24		22-32-15	ALL
	K07	UNUSED						ALL
	K08	UNUSED						ALL
	K09		W0105	671B	24		22-32-13	ALL
	K10		W0105	740	24		22-32-13	ALL
	K11	UNUSED						ALL
	K12	UNUSED						ALL
	K13	UNUSED						ALL
	K14	UNUSED						ALL
	K15	UNUSED						ALL
	DED		W0105	531Z			22-33-11	ALL
	DED		W0105	534Z			22-32-12	ALL
	DED		W0105	648Z			22-32-12	ALL
	DED		W0105	662Z			22-32-11	ALL
	DED		W0105	692Z			22-41-12	ALL
	REF		W0105	659	20		22-32-11	ALL
	REF		W0105	659Z			22-32-11	ALL
			W0105	661	20		22-32-11	ALL
			W0105	661Z			22-32-11	ALL
			W0105	666	20		22-32-11	ALL
			W0105	666Z			22-32-11	ALL
D00427B		//		PLUG-PART OF D00427				ALL
	A01	UNUSED						ALL
	A02		W0105	697R	24		22-31-12	ALL
	A03		W0105	697B	24		22-31-12	ALL
	A04	UNUSED						ALL
	A05	UNUSED						ALL
	A06	UNUSED						ALL
	A07	UNUSED						ALL
	A08	UNUSED						ALL
	A09	UNUSED						ALL
	A10	UNUSED						ALL
	A11		W0105	677R	24		22-33-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00400

Page 87

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00427B		//		PLUG-PART OF D00427 (continued)				ALL
	A12		W0105	677B	24		22-33-11	ALL
	A13		W0105	657R	24		22-32-11	ALL
	A14		W0105	656R	24		22-32-11	ALL
	A15		W0105	658B	24		22-32-11	ALL
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03		W0105	764	22		22-34-11	ALL
	B04	UNUSED						ALL
	B05	UNUSED						ALL
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09		W0105	246R	24		22-33-11	ALL
	B10		W0105	246B	24		22-33-11	ALL
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13		W0105	657B	24		22-32-11	ALL
	B14		W0105	656B	24		22-32-11	ALL
	B15		W0105	658R	24		22-32-11	ALL
	C01		W0105	723	22		22-32-14	ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05	UNUSED						ALL
	C06	UNUSED						ALL
	C07		W0105	761	24		22-32-15	ALL
	C08	UNUSED						ALL
	C09	UNUSED						ALL
	C10	UNUSED						ALL
	C11	UNUSED						ALL
	C12	UNUSED						ALL
	C13	UNUSED						ALL
	C14	UNUSED						ALL
	C15		W0105	769	22		22-32-12	ALL
	D01	UNUSED						ALL
	D02	UNUSED						ALL
	D03	UNUSED						ALL
	D04		W0105	156	24		22-32-13	ALL
	D05		W0105	735	24		22-32-13	ALL
	D06		W0105	733	24		22-32-13	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00400

Page 88

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00427B		//		PLUG-PART OF D00427 (continued)				ALL
	D07	UNUSED						ALL
	D08		W0105	766	24		22-34-11	ALL
	D09		W0105	765	24		22-34-11	ALL
	D10		W0105	720	22		22-32-14	ALL
	D11	UNUSED						ALL
	D12	UNUSED						ALL
	D13		W0105	763	22		22-34-11	ALL
	D14	UNUSED						ALL
	D15		W0105	312Y	24		22-32-12	ALL
	E01	UNUSED						ALL
	E02		W0105	159	22		22-32-13	ALL
	E03	UNUSED						ALL
	E04	UNUSED						ALL
	E05	UNUSED						ALL
	E06	UNUSED						ALL
	E07	UNUSED						ALL
	E08		W0105	862	22		22-32-13	ALL
	E09		W0105	312R	24		22-32-12	ALL
	E10		W0105	157	22		22-32-13	ALL
	E11	UNUSED						ALL
	E12	UNUSED						ALL
	E13	UNUSED						ALL
	E14	UNUSED						ALL
	E15	UNUSED						ALL
	F01		W0105	758	24		22-32-15	ALL
	F02		W0105	712	22		22-32-14	ALL
	F03	UNUSED						ALL
	F04		W0105	778	22		22-32-14	ALL
	F05		W0105	746	24		22-32-15	ALL
	F06		W0105	721	22		22-32-14	ALL
	F07	UNUSED						ALL
	F08	UNUSED						ALL
	F09	UNUSED						ALL
	F10	UNUSED						ALL
	F11	UNUSED						ALL
	F12	UNUSED						ALL
	F13	UNUSED						ALL
	F14	UNUSED						ALL
	F15	UNUSED						ALL
	G01	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00400

Page 89

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00427B		//		PLUG-PART OF D00427 (continued)				ALL
	G02		W0105	745	24		22-32-13	ALL
	G03	UNUSED						ALL
	G04	UNUSED						ALL
	G05	UNUSED						ALL
	G06		W0105	689B	24		22-32-12	ALL
	G07	UNUSED						ALL
	G08	UNUSED						ALL
	G09	UNUSED						ALL
	G10	UNUSED						ALL
	G11		W0105	722	22		22-32-14	ALL
	G12		W0105	312B	24		22-32-12	ALL
	G13	UNUSED						ALL
	G14	UNUSED						ALL
	G15	UNUSED						ALL
	H01	UNUSED						ALL
	H02		W0105	734	24		22-32-13	ALL
	H03	UNUSED						ALL
	H04	UNUSED						ALL
	H05	UNUSED						ALL
	H06		W0105	689R	24		22-32-12	ALL
	H07		W0105	715	24		22-32-13	ALL
	H08		W0105	741	24		22-32-13	ALL
	H09		W0105	717	24		22-32-13	ALL
	H10		W0105	729	22		22-32-14	ALL
	H11	UNUSED						ALL
	H12	UNUSED						ALL
	H13	UNUSED						ALL
	H14	UNUSED						ALL
	H15	UNUSED						ALL
	J01		W0105	158	22		22-32-13	ALL
	J02	UNUSED						050-099, 275-299
	J02		W0105	678B	24		SPARE	150-199
	J03	UNUSED						050-099, 275-299
	J03		W0105	678R	24		SPARE	150-199
	J04		W0105	673B	24		22-32-13	ALL
	J05	UNUSED						ALL
	J06	UNUSED						ALL
	J07	UNUSED						ALL
	J08		W0105	655B	24		22-32-11	ALL
	J09	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D00400
Page 90
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00427B		//		PLUG-PART OF D00427 (continued)				ALL
	J10	UNUSED						ALL
	J11		W0105	679R	24		22-33-11	ALL
	J12		W0105	664R	24		22-32-12	ALL
	J13		W0105	664B	24		22-32-12	ALL
	J14		W0105	663B	24		22-32-12	ALL
	J15		W0105	663R	24		22-32-12	ALL
	K01	UNUSED						ALL
	K02	UNUSED						ALL
	K03	UNUSED						ALL
	K04		W0105	673R	24		22-32-13	ALL
	K05	UNUSED						ALL
	K06	UNUSED						ALL
	K07	UNUSED						ALL
	K08		W0105	655R	24		22-32-11	ALL
	K09	UNUSED						ALL
	K10	UNUSED						ALL
	K11		W0105	679B	24		22-33-11	ALL
	K12	UNUSED						ALL
	K13	UNUSED						ALL
	K14	UNUSED						ALL
	K15	UNUSED						ALL
	DED		W0105	246Z			22-33-11	ALL
	DED		W0105	312Z			22-32-12	ALL
	DED		W0105	655Z			22-32-11	ALL
	DED		W0105	657Z			22-32-11	ALL
	DED		W0105	658Z			22-32-11	ALL
	DED		W0105	664Z			22-32-12	ALL
	DED		W0105	689Z			22-32-12	ALL
	REF		W0105	656	20		22-32-11	ALL
	REF		W0105	656Z			22-32-11	ALL
	REF		W0105	663	20		22-32-12	ALL
	REF		W0105	663Z			22-32-12	ALL
	REF		W0105	677	20		22-33-11	ALL
	REF		W0105	677Z			22-33-11	ALL
	REF		W0105	679	20		22-33-11	ALL
	REF		W0105	679Z			22-33-11	ALL
D00427C		//		PLUG-PART OF D00427				ALL
	1		W0105	750	24		22-32-15	ALL
	2		W0105	129	20		22-31-12	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00400

Page 91

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00427C		//		PLUG-PART OF D00427 (continued)				ALL
	3		W0105	705	20		22-31-11	ALL
	4	UNUSED						ALL
	5		W0105	709	20		22-31-12	ALL
	6		W0105	703	20		22-31-11	ALL
	7		W0105	770	20		22-31-12	ALL
	8		W0105	704	20		22-31-11	ALL
	9		W0105	130	20		22-31-12	ALL
	10		W0105	702	20		22-31-11	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	= C12	UNUSED						ALL
	= C13	UNUSED						ALL
	DED		W0105	129Z			22-31-12	ALL
	DED		W0105	130Z			22-31-12	ALL
D00428		P037-00/ /		PLUG-P37				ALL
	1		W0198	077	24		28-25-11	ALL
	2		W0198	080	24		28-25-11	ALL
	3		W0198	093	24		28-25-11	ALL
	4	UNUSED						ALL
	5		W0198	076	24		28-25-11	ALL
	6		W0198	078	24		28-25-11	ALL
	7		W0198	111	24		28-22-11	ALL
	8		W0198	075	24		28-25-11	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12		W0198	079	24		28-25-11	ALL
	13	UNUSED						ALL
	14		W0198	112	24		28-22-11	ALL
D00429A		//		PLUG-PART OF D00429				ALL
	A01	UNUSED						ALL
	A02	UNUSED						ALL
	A03	UNUSED						ALL
	A04	UNUSED						ALL
	A05	UNUSED						ALL
	A06	UNUSED						ALL
	A07	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00400

Page 92

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00429A		//		PLUG-PART OF D00429 (continued)				ALL
	A08	UNUSED						ALL
	A09	UNUSED						ALL
	A10	UNUSED						ALL
	A11	UNUSED						ALL
	A12	UNUSED						ALL
	A13	UNUSED						ALL
	A14	UNUSED						ALL
	A15	UNUSED						ALL
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04	UNUSED						ALL
	B05	UNUSED						ALL
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13	UNUSED						ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	C01	UNUSED						ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05	UNUSED						ALL
	C06	UNUSED						ALL
	C07	UNUSED						ALL
	C08	UNUSED						ALL
	C09	UNUSED						ALL
	C10	UNUSED						ALL
	C11	UNUSED						ALL
	C12	UNUSED						ALL
	C13	UNUSED						ALL
	C14	UNUSED						ALL
	C15	UNUSED						ALL
	D01	UNUSED						ALL
	D02	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00400

Page 93

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00429A		//		PLUG-PART OF D00429 (continued)				ALL
	D03	UNUSED						ALL
	D04	UNUSED						ALL
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	D08	UNUSED						ALL
	D09	UNUSED						ALL
	D10	UNUSED						ALL
	D11	UNUSED						ALL
	D12	UNUSED						ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15	UNUSED						ALL
D00429B		//		PLUG-PART OF D00429				ALL
	A01		W0105	251R	24		23-51-13	ALL
	A02	UNUSED						ALL
	A03	UNUSED						ALL
	A04	UNUSED						ALL
	A05	UNUSED						ALL
	A06	UNUSED						ALL
	A07	UNUSED						ALL
	A08	UNUSED						ALL
	A09	UNUSED						ALL
	A10	UNUSED						ALL
	A11	UNUSED						ALL
	A12	UNUSED						ALL
	A13	UNUSED						ALL
	A14	UNUSED						ALL
	A15	UNUSED						ALL
	B01		W0105	251B	24		23-51-13	ALL
	B02	UNUSED						ALL
	B03		W0105	104	24		34-31-11	ALL
	B04	UNUSED						ALL
	B05		W0105	105	24		34-31-11	ALL
	B06	UNUSED						ALL
	B07		W0105	224R	24		22-13-11	ALL
	B08	UNUSED						ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00400

Page 94

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00429B		//		PLUG-PART OF D00429 (continued)				ALL
	B11		W0105	252R	24		34-31-11	ALL
	B12	UNUSED						ALL
	B13		W0105	255R	24		34-31-11	ALL
	B14	UNUSED						ALL
	B15		W0105	254R	22		34-31-11	ALL
	C01		W0105	109	24		22-13-11	ALL
	C02	UNUSED						ALL
	C03		W0105	104	24		34-31-11	ALL
	C04	UNUSED						ALL
	C05		W0105	105	24		34-31-11	ALL
	C06	UNUSED						ALL
	C07		W0105	224B	24		22-13-11	ALL
	C08	UNUSED						ALL
	C09	UNUSED						ALL
	C10	UNUSED						ALL
	C11		W0105	252B	24		34-31-11	ALL
	C12	UNUSED						ALL
	C13		W0105	255B	24		34-31-11	ALL
	C14	UNUSED						ALL
	C15		W0105	254B	22		34-31-11	ALL
	D01	UNUSED						ALL
	D02	UNUSED						ALL
	D03	UNUSED						ALL
	D04	UNUSED						ALL
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	D08	UNUSED						ALL
	D09	UNUSED						ALL
	D10	UNUSED						ALL
	D11	UNUSED						ALL
	D12	UNUSED						ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15		W0105	110	24		34-31-11	ALL
	DED		W0105	252Z			34-31-11	ALL
	DED		W0105	255Z			34-31-11	ALL
			W0105	224	20		22-13-11	ALL
			W0105	224Z			22-13-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00400

Page 95

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00429C		//		PLUG-PART OF D00429				ALL
	1		W1051	01CX			34-31-11	ALL
	2		W0105	101	20		34-31-11	ALL
	3		W0105	102	20		34-31-11	ALL
	4		W0105	103	20		34-31-11	ALL
	5		W1053	01CX			34-31-11	ALL
	=C1		W1051	01CO			34-31-11	ALL
	=C5		W1053	01CO			34-31-11	ALL
D00430		P037-00/ /		PLUG-P37				ALL
	A1	UNUSED						ALL
	A2		W0198	081	24		28-25-11	ALL
	A3		W0198	086	24		28-25-11	ALL
	B1	UNUSED						ALL
	B2	UNUSED						ALL
	B3	UNUSED						ALL
	C1	UNUSED						ALL
	C2	UNUSED						ALL
	C3	UNUSED						ALL
	D1	UNUSED						ALL
	D2	UNUSED						ALL
	D3	UNUSED						ALL
	X1		W0198	085	24		28-25-11	ALL
	X2		W0198	083	24		28-25-11	ALL
D00432		1725/250/L050		PLUG-				ALL
	1	DK	W0502	018	18		27-31-11	ALL
	2	DK	W0502	016	18		27-31-11	ALL
	3	DK	W0502	019	18		27-31-11	ALL
	4	DK	W0502	017	18		27-31-11	ALL
	5	UNUSED						ALL
D00433A		//		PLUG-PART OF D00433				ALL
	A01		W0105	238R	24		22-41-12	ALL
	A02		W0105	238B	24		22-41-12	ALL
	A03		W0105	085	24		22-41-11	ALL
	A04		W0105	031	22		22-11-12	ALL
	A05	UNUSED						ALL
	A06	UNUSED						ALL
	A07	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D00400
Page 96
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00433A		//		PLUG-PART OF D00433 (continued)				ALL
	A08	UNUSED						ALL
	A09		W0105	223R	24		22-13-11	ALL
	A10		W0105	218R	24		22-12-11	ALL
	A11	UNUSED						ALL
	A12	UNUSED						ALL
	A13		W0105	030	24		22-11-12	ALL
	A14		W0105	030	24		22-11-12	ALL
	A15		W0105	029	22		22-11-12	ALL
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04	UNUSED						ALL
	B05	UNUSED						ALL
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09		W0105	223B	24		22-13-11	ALL
	B10		W0105	218B	24		22-12-11	ALL
	B11		W0105	602	24		22-11-12	050-099
	B11	UNUSED						150-199, 275-299
	B12		W0105	602	24		22-11-12	050-099
	B12	UNUSED						150-199, 275-299
	B13	UNUSED						ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	C01	UNUSED						ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05	UNUSED						ALL
	C06	UNUSED						ALL
	C07	UNUSED						ALL
	C08	UNUSED						ALL
	C09		W0105	213R	24		22-12-11	ALL
	C10	UNUSED						ALL
	C11		W0105	632	24		22-11-12	ALL
	C12		W0105	632	24		22-11-12	ALL
	C13		W0105	060	22		22-14-11	ALL
	C14	UNUSED						ALL
	C15		W0105	026	22		22-11-12	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00400

Page 97

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00433A		//		PLUG-PART OF D00433 (continued)				ALL
	D01		W0105	231R	24		22-15-11	ALL
	D02	UNUSED						ALL
	D03	UNUSED						ALL
	D04		W0105	607	24		22-11-12	ALL
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	D08	UNUSED						ALL
	D09		W0105	213B	24		22-12-11	ALL
	D10	UNUSED						ALL
	D11	UNUSED						ALL
	D12	UNUSED						ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15	UNUSED						ALL
	E01		W0105	231B	24		22-15-11	ALL
	E02	UNUSED						ALL
	E03		W0105	065	24		22-15-12	ALL
	E04	UNUSED						ALL
	E05	UNUSED						ALL
	E06	UNUSED						ALL
	E07	UNUSED						ALL
	E08	UNUSED						ALL
	E09	UNUSED						ALL
	E10	UNUSED						ALL
	E11	UNUSED						ALL
	E12		W0105	055	24		22-14-11	ALL
	E13	UNUSED						ALL
	E14	UNUSED						ALL
	E15	UNUSED						ALL
	F01	UNUSED						ALL
	F02	UNUSED						ALL
	F03		W0105	046	22		22-14-11	ALL
	F04	UNUSED						ALL
	F05	UNUSED						ALL
	F06	UNUSED						ALL
	F07	UNUSED						ALL
	F08	UNUSED						ALL
	F09		W0105	160	24		22-15-12	ALL
	F10	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00400

Page 98

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00433A		//		PLUG-PART OF D00433 (continued)				ALL
	F11	UNUSED						ALL
	F12		W0105	080	24		22-12-11	ALL
	F13	UNUSED						ALL
	F14	UNUSED						ALL
	F15		W0105	039	22		22-12-11	ALL
	G01		W0105	163	24		22-15-12	ALL
	G02	UNUSED						ALL
	G03		W0105	233R	24		22-15-11	ALL
	G04	UNUSED						ALL
	G05	UNUSED						ALL
	G06	UNUSED						ALL
	G07	UNUSED						ALL
	G08	UNUSED						ALL
	G09		W0105	083	24		22-12-11	ALL
	G10		W0105	075	24		22-15-12	ALL
	G11		W0105	032	22		22-11-12	ALL
	G12		W0105	063	24		22-14-11	ALL
	G13	UNUSED						ALL
	G14	UNUSED						ALL
	G15	UNUSED						ALL
	H01	UNUSED						ALL
	H02	UNUSED						ALL
	H03		W0105	233B	24		22-15-11	ALL
	H04	UNUSED						ALL
	H05		W0105	308Y	22		22-13-11	ALL
	H06		W0105	308R	22		22-13-11	ALL
	H07	UNUSED						ALL
	H08	UNUSED						ALL
	H09		W0105	302Y	22		22-12-11	ALL
	H10		W0105	302B	22		22-12-11	ALL
	H11	UNUSED						ALL
	H12	UNUSED						ALL
	H13	UNUSED						ALL
	H14	UNUSED						ALL
	H15		W0105	012	22		22-11-12	ALL
	J01	UNUSED						ALL
	J02	UNUSED						ALL
	J03	UNUSED						ALL
	J04	UNUSED						ALL
	J05		W0105	306R	22		22-13-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00400

Page 99

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00433A		//		PLUG-PART OF D00433 (continued)				ALL
	J06		W0105	308B	22		22-13-11	ALL
	J07	UNUSED						ALL
	J08	UNUSED						ALL
	J09		W0105	302R	22		22-12-11	ALL
	J10	UNUSED						ALL
	J11	UNUSED						ALL
	J12	UNUSED						ALL
	J13	UNUSED						ALL
	J14	UNUSED						ALL
	J15	UNUSED						ALL
	K01		W0105	074	24		22-15-12	ALL
	K02	UNUSED						ALL
	K03		W0105	078	24		22-15-12	ALL
	K04	UNUSED						ALL
	K05		W0105	306Y	22		22-13-11	ALL
	K06		W0105	306B	22		22-13-11	ALL
	K07	UNUSED						ALL
	K08	UNUSED						ALL
	K09	UNUSED						ALL
	K10	UNUSED						ALL
	K11	UNUSED						ALL
	K12	UNUSED						ALL
	K13	UNUSED						ALL
	K14	UNUSED						ALL
	K15		W0105	035	22		22-11-12	ALL
	DED		W0105	065Z			22-15-12	ALL
	DED		W0105	163Z			22-15-12	ALL
	DED		W0105	213Z			22-12-11	ALL
	DED		W0105	218Z			22-12-11	ALL
	DED		W0105	223Z			22-13-11	ALL
	DED		W0105	231Z			22-15-11	ALL
	DED		W0105	233Z			22-15-11	ALL
	DED		W0105	238Z			22-41-12	ALL
D00433B		//		PLUG-PART OF D00433				ALL
	A01		W0105	224R	24		22-13-11	ALL
	A02		W0105	224B	24		22-13-11	ALL
	A03		W0105	020	24		22-11-12	ALL
	A04		W0105	607	24		22-11-12	ALL
	A05	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00400

Page 100

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00433B		//		PLUG-PART OF D00433 (continued)				ALL
	A06		W0105	024	24		22-11-12	ALL
	A07	UNUSED						ALL
	A08	UNUSED						ALL
	A09	UNUSED						ALL
	A10	UNUSED						ALL
	A11	UNUSED						ALL
	A12		W0105	621	24		22-11-12	ALL
	A13	UNUSED						ALL
	A14	UNUSED						ALL
	A15		W0105	028	22		22-11-12	ALL
	B01		W0105	216R	24		22-12-11	ALL
	B02		W0105	216B	24		22-12-11	ALL
	B03		W0105	208R	24		22-12-11	ALL
	B04		W0105	208B	24		22-12-11	ALL
	B05	UNUSED						ALL
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12		W0105	620	24		22-11-12	ALL
	B13	UNUSED						ALL
	B14	UNUSED						ALL
	B15		W0105	621	24		22-11-12	ALL
	C01		W0105	212R	24		22-12-11	ALL
	C02		W0105	212B	24		22-12-11	ALL
	C03		W0105	237R	24		22-41-11	ALL
	C04		W0105	237B	24		22-41-11	ALL
	C05	UNUSED						ALL
	C06		W0105	084	24		22-41-11	ALL
	C07		W0105	025	24		22-11-12	ALL
	C08	UNUSED						ALL
	C09		W0105	090	24		22-12-11	ALL
	C10	UNUSED						ALL
	C11	UNUSED						ALL
	C12	UNUSED						ALL
	C13	UNUSED						050-099, 275-276
	C13		W0105	048	24		22-11-12	150-199, 277-299
	C14	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00400

Page 101

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00433B		//		PLUG-PART OF D00433 (continued)				ALL
	C15		W0105	027	22		22-11-12	ALL
	D01		W0105	229R	24		31-31-14	ALL
	D02		W0105	229B	24		31-31-14	ALL
	D03		W0105	139	24		22-11-12	ALL
	D04	UNUSED						ALL
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	D08		W0105	089	24		22-12-11	ALL
	D09		W0105	115	24		22-12-11	ALL
	D10		W0105	114	24		22-12-11	ALL
	D11		W0105	211B	22		22-12-11	ALL
	D12	UNUSED						ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15		W0105	620	24		22-11-12	ALL
	E01		W0105	225R	24		22-13-11	ALL
	E02		W0105	225B	24		22-13-11	ALL
	E03		W0105	232R	24		22-15-11	ALL
	E04		W0105	020	24		22-11-12	ALL
	E05	UNUSED						ALL
	E06		W0105	226B	22		22-13-11	ALL
	E07		W0105	227B	22		22-13-11	ALL
	E08	UNUSED						ALL
	E09		W0105	041	22		22-12-11	ALL
	E10		W0105	043	24		22-12-11	ALL
	E11		W0105	211R	22		22-12-11	ALL
	E12		W0105	053	24		22-14-11	ALL
	E13		W0105	248R	24		22-12-11	ALL
	E14	UNUSED						ALL
	E15	UNUSED						ALL
	F01		W0105	230R	24		22-15-11	ALL
	F02		W0105	230B	24		22-15-11	ALL
	F03		W0105	232B	24		22-15-11	ALL
	F04	UNUSED						050-099, 275-276
	F04		W0105	048	24		22-11-12	150-199, 277-299
	F05	UNUSED						ALL
	F06		W0105	226R	22		22-13-11	ALL
	F07		W0105	227R	22		22-13-11	ALL
	F08	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00400

Page 102

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00433B		//		PLUG-PART OF D00433 (continued)				ALL
	F09		W0105	096	24		22-41-13	ALL
	F10		W0105	095	24		22-41-13	ALL
	F11		W0105	144	24		22-11-12	050-099, 150-199, 277-299
	F11	UNUSED						275-276
	F12	UNUSED						ALL
	F13		W0105	248B	24		22-12-11	ALL
	F14	UNUSED						ALL
	F15		W0105	015	22		22-11-12	ALL
	G01	UNUSED						ALL
	G02	UNUSED						ALL
	G03	UNUSED						ALL
	G04	UNUSED						ALL
	G05	UNUSED						ALL
	G06	UNUSED						ALL
	G07	UNUSED						ALL
	G08	UNUSED						ALL
	G09		W0105	082	24		22-12-11	ALL
	G10	UNUSED						ALL
	G11	UNUSED						ALL
	G12		W0105	062	24		22-14-11	ALL
	G13	UNUSED						ALL
	G14	UNUSED						ALL
	G15	UNUSED						ALL
	H01	UNUSED						ALL
	H02		W0105	093	24		22-13-11	ALL
	H03		W0105	045	24		22-13-11	ALL
	H04	UNUSED						ALL
	H05		W0105	307Y	22		22-13-11	ALL
	H06		W0105	307R	22		22-13-11	ALL
	H07	UNUSED						ALL
	H08	UNUSED						ALL
	H09		W0105	303Y	22		22-12-11	ALL
	H10		W0105	303B	22		22-12-11	ALL
	H11		W0105	018	22		22-11-12	ALL
	H12	UNUSED						ALL
	H13	UNUSED						ALL
	H14	UNUSED						ALL
	H15		W0105	013	22		22-11-12	ALL
	J01	UNUSED						ALL
	J02		W0105	634	24		22-11-12	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00400

Page 103

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00433B		//		PLUG-PART OF D00433 (continued)				ALL
	J03	UNUSED						ALL
	J04		W0105	634	24		22-11-12	ALL
	J05		W0105	305R	22		22-13-11	ALL
	J06		W0105	307B	22		22-13-11	ALL
	J07	UNUSED						ALL
	J08	UNUSED						ALL
	J09		W0105	303R	22		22-12-11	ALL
	J10	UNUSED						ALL
	J11		W0105	057	24		22-14-11	ALL
	J12		W0105	059	24		22-14-11	ALL
	J13	UNUSED						ALL
	J14	UNUSED						ALL
	J15	UNUSED						ALL
	K01	UNUSED						ALL
	K02		W0105	058	24		22-14-11	ALL
	K03		W0105	050	24		22-14-11	ALL
	K04		W0105	139	24		22-11-12	ALL
	K05		W0105	305Y	22		22-13-11	ALL
	K06		W0105	305B	22		22-13-11	ALL
	K07	UNUSED						ALL
	K08	UNUSED						ALL
	K09		W0105	144	24		22-11-12	050-099, 150-199, 277-299
	K09	UNUSED						275-276
	K10		W0105	044	24		22-14-11	ALL
	K11		W0105	049	24		22-14-11	ALL
	K12		W0105	051	24		22-14-11	ALL
	K13		W0105	061	24		22-11-12	ALL
	K14		W0105	061	24		22-11-12	ALL
	K15		W0105	034	22		22-11-12	ALL
	DED		W0105	208Z			22-12-11	ALL
	DED		W0105	212Z			22-12-11	ALL
	DED		W0105	216Z			22-12-11	ALL
	DED		W0105	224Z			22-13-11	ALL
			W0105	225	20		22-13-11	ALL
			W0105	225Z			22-13-11	ALL
			W0105	229	20		31-31-14	ALL
			W0105	229Z			31-31-14	ALL
			W0105	230	20		22-15-11	ALL
			W0105	230Z			22-15-11	ALL
			W0105	232	20		22-15-11	ALL

HOOKUP LIST
D280T132

91-21-51
Section D00400
Page 104
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00433B		//		PLUG-PART OF D00433 (continued)				ALL
			W0105	232Z			22-15-11	ALL
			W0105	237	20		22-41-11	ALL
			W0105	237Z			22-41-11	ALL
D00433C		//		PLUG-PART OF D00433				ALL
	1		W0105	001	22		22-11-12	ALL
	2		W0105	002	20		22-11-12	ALL
	3	UNUSED						ALL
	4		W0105	004	20		22-11-11	ALL
	5		W0105	005	22		22-11-12	ALL
	6		W0105	006	22		22-11-11	ALL
	7		W0105	007	20		22-11-11	ALL
	8	UNUSED						ALL
	9		W0105	009	20		22-11-12	ALL
	10		W0105	204R	20		22-11-11	ALL
	11		W0105	204B	20		22-11-11	ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	= C12	UNUSED						ALL
	= C13	UNUSED						ALL
	DED		W0105	001Z			22-11-12	ALL
	DED		W0105	002Z			22-11-12	ALL
	DED		W0105	005Z			22-11-12	ALL
D00434		P006-00/ /		RELAY SOCKET-P6				ALL
	A1	UNUSED						ALL
	A2		W0028	012	24		24-33-11	ALL
	A3		W0028	087	20		24-33-11	ALL
	B1	UNUSED						ALL
	B2	UNUSED						ALL
	B3	UNUSED						ALL
	X1		W0028	085	24		24-33-11	ALL
	X2		W0028	086	20		24-33-11	ALL
D00435A		//		PLUG-PART OF D00435				ALL
	A01	UNUSED						050-099, 151
	A01		W0109	965	22		34-46-13	150, 152-199, 275-299
	A02	UNUSED						ALL
	A03	UNUSED						050-099, 151
	A03		W0109	901W	24		34-46-13	150, 152-199, 275-299

HOOKUP LIST

D280T132

91-21-51

Section D00400

Page 105

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00435A		//		PLUG-PART OF D00435 (continued)				ALL
	A04	UNUSED						ALL
	A05	UNUSED						ALL
	A06	UNUSED						ALL
	A07	UNUSED						ALL
	A08	UNUSED						050-099, 151
	A08		W0109	9016R	24		34-46-13	150, 152-199, 275-299
	A09	UNUSED						ALL
	A10		W0109	104	22		34-46-12	050-099, 151
	A10		W0109	912	22		34-46-13	150, 152-199, 275-299
	A11		W0109	106	22		34-46-12	050-099, 151
	A11		W0109	922	22		34-46-13	150, 152-199, 275-299
	A12		W0109	108	22		34-46-11	050-099, 151
	A12		W0109	909	22		34-46-13	150, 152-199, 275-299
	A13	UNUSED						ALL
	A14	UNUSED						ALL
	A15	UNUSED						ALL
	B01	UNUSED						050-099, 151
	B01		W0109	982	22		34-46-13	150, 152-199, 275-299
	B02	UNUSED						ALL
	B03	UNUSED						050-099, 151
	B03		W0109	901WB	24		34-46-13	150, 152-199, 275-299
	B04	UNUSED						ALL
	B05	UNUSED						050-099, 151
	B05		W0109	908	22		34-46-13	150, 152-199, 275-299
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	B08	UNUSED						050-099, 151
	B08		W0109	9016B	24		34-46-13	150, 152-199, 275-299
	B09	UNUSED						ALL
	B10	UNUSED						050-099
	B10		W0109	941	22		34-46-13	150, 152-199, 275-299
	B10		W0109	111	22		34-46-12	151
	B11	UNUSED						050-099, 151
	B11		W0109	987	22		34-46-12	150, 152-199, 275-299
	B12	UNUSED						050-099, 151
	B12		W0109	927	22		34-46-13	150, 152-199, 275-299
	B13	UNUSED						ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	C01	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00400

Page 106

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00435A		//		PLUG-PART OF D00435 (continued)				ALL
	C02	UNUSED						050-099, 151
	C02		W0109	907	22		34-46-13	150, 152-199, 275-299
	C03	UNUSED						050-099, 151
	C03		W0109	908W	24		34-46-13	150, 152-199, 275-299
	C04	UNUSED						ALL
	C05	UNUSED						050-099, 151
	C05		W0109	9015R	24		34-46-13	150, 152-199, 275-299
	C06	UNUSED						ALL
	C07	UNUSED						ALL
	C08	UNUSED						ALL
	C09		W0109	207R	24		34-46-12	ALL
	C10	UNUSED						050-099, 151
	C10		W0109	943	22		34-46-13	150, 152-199, 275-299
	C11	UNUSED						ALL
	C12		W0109	728	22		34-46-11	050-099, 151
	C12		W0109	919	22		34-46-13	150, 152-199, 275-299
	C13	UNUSED						ALL
	C14	UNUSED						ALL
	C15	UNUSED						ALL
	D01	UNUSED						ALL
	D02	UNUSED						ALL
	D03	UNUSED						050-099, 151
	D03		W0109	908WB	24		34-46-13	150, 152-199, 275-299
	D04	UNUSED						050-099, 151
	D04		W0109	914	22		34-46-13	150, 152-199, 275-299
	D05	UNUSED						050-099, 151
	D05		W0109	9015B	24		34-46-13	150, 152-199, 275-299
	D06	UNUSED						050-099, 151
	D06		W0109	939	22		34-46-13	150, 152-199, 275-299
	D07	UNUSED						ALL
	D08	UNUSED						ALL
	D09		W0109	207B	24		34-46-12	ALL
	D10	UNUSED						050-099, 151
	D10		W0109	966	22		34-46-13	150, 152-199, 275-299
	D11		W0109	900	22		34-46-11	050-099, 151
	D11	UNUSED						150, 152-199, 275-299
	D12		W0109	608	24		34-46-12	050-099, 151
	D12		W0109	983	22		34-46-13	150, 152-199, 275-299
	D13	UNUSED						ALL
	D14	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00400

Page 107

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00435A		//		PLUG-PART OF D00435 (continued)				ALL
	D15 DED	UNUSED						ALL
			W0109	207Z			34-46-12	ALL
			W0109	9001	20		34-46-13	150, 152-199, 275-299
			W0109	9008	20		34-46-13	150, 152-199, 275-299
			W0109	9015	20		34-46-13	150, 152-199, 275-299
			W0109	9016	20		34-46-13	150, 152-199, 275-299
			W0109	901Z			34-46-13	150, 152-199, 275-299
			W0109	908Z			34-46-13	150, 152-199, 275-299
			W0109	915Z			34-46-13	150, 152-199, 275-299
			W0109	916Z			34-46-13	150, 152-199, 275-299
D00435B		//		PLUG-PART OF D00435				ALL
	A01		W0109	002	24		34-46-12	ALL
	A02	UNUSED						050-099, 151
	A02		W0109	935	22		34-46-13	150, 152-199, 275-299
	A03		W0109	109	22		34-46-11	050-099, 151
	A03		W0109	934	22		34-46-13	150, 152-199, 275-299
	A04		W0109	902	22		34-46-11	050-099, 151
	A04		W0109	957	22		34-46-13	150, 152-199, 275-299
	A05	UNUSED						050-099, 151
	A05		W0109	959	22		34-46-13	150, 152-199, 275-299
	A06		W0109	602R	24		34-46-11	ALL
	A07	UNUSED						050-099, 151
	A07		W0109	979	22		34-46-13	150, 152-199, 275-299
	A08	UNUSED						050-099, 151
	A08		W0109	932	22		34-46-13	150, 152-199, 275-299
	A09		W0109	708	24		34-46-12	ALL
	A10		W0109	906R	24		34-46-11	050-099, 150-166, 275-299
	A10	UNUSED						167-199
	A11		W0109	603R	24		34-46-12	ALL
	A12	UNUSED						050-099, 151
	A12		W0109	9018R	24		34-46-13	150, 152-199, 275-299
	A13		W0109	605R	24		34-46-11	ALL
	A14	UNUSED						050-099, 151
	A14		W0109	964	22		34-46-13	150, 152-199, 275-299
	A15	UNUSED						050-099, 151
	A15		W0109	961	22		34-46-13	150, 152-199, 275-299
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00400

Page 108

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00435B		//		PLUG-PART OF D00435 (continued)				ALL
	B04	UNUSED						050-099, 151
	B04		W0109	954	22		34-46-13	150, 152-199, 275-299
	B05	UNUSED						050-099, 151
	B05		W0109	948	22		34-46-13	150, 152-199, 275-299
	B06		W0109	602B	24		34-46-11	ALL
	B07		W0109	719	22		34-46-11	050-099, 151
	B07		W0109	951	22		34-46-13	150, 152-199, 275-299
	B08	UNUSED						050-099, 151
	B08		W0109	960	22		34-46-13	150, 152-199, 275-299
	B09		W0109	706	24		34-46-12	ALL
	B10		W0109	906B	24		34-46-11	050-099, 150-166, 275-299
	B10	UNUSED						167-199
	B11		W0109	603B	24		34-46-12	ALL
	B12	UNUSED						050-099, 151
	B12		W0109	9018B	24		34-46-13	150, 152-199, 275-299
	B13		W0109	605B	24		34-46-11	ALL
	B14	UNUSED						050-099, 151
	B14		W0109	981	22		34-46-13	150, 152-199, 275-299
	B15	UNUSED						050-099, 151
	B15		W0109	962	22		34-46-13	150, 152-199, 275-299
	C01		W0109	601R	24		34-46-11	ALL
	C02		W0109	901	22		34-46-11	050-099, 151
	C02		W0109	956	22		34-46-13	150, 152-199, 275-299
	C03	UNUSED						ALL
	C04	UNUSED						050-099, 151
	C04		W0109	958	22		34-46-13	150, 152-199, 275-299
	C05	UNUSED						ALL
	C06	UNUSED						ALL
	C07		W0109	609	24		34-46-12	ALL
	C08		W0109	741	22		34-46-11	050-099, 151
	C08		W0109	937	22		34-46-13	150, 152-199, 275-299
	C09		W0109	716	24		34-46-12	ALL
	C10		W0109	607R	24		34-46-11	ALL
	C11		W0109	604R	24		34-46-12	ALL
	C12		W0109	208R	24		34-46-12	ALL
	C13		W0109	606R	24		34-46-11	ALL
	C14		W0109	903	22		34-46-11	050-099, 151
	C14		W0109	984	22		34-46-13	150, 152-199, 275-299
	C15	UNUSED						050-099, 151
	C15		W0109	963	22		34-46-13	150, 152-199, 275-299

HOOKUP LIST

D280T132

91-21-51

Section D00400

Page 109

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00435B		//		PLUG-PART OF D00435 (continued)				ALL
	D01		W0109	601B	24		34-46-11	ALL
	D02	UNUSED						050-099, 151
	D02		W0109	980	22		34-46-13	150, 152-199, 275-299
	D03		W0109	703	22		34-46-11	050-099, 151
	D03		W0109	945	22		34-46-13	150, 152-199, 275-299
	D04	UNUSED						050-099, 151
	D04		W0109	930	22		34-46-13	150, 152-199, 275-299
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	D08	UNUSED						ALL
	D09		W0109	704	24		34-46-11	ALL
	D10		W0109	607B	24		34-46-11	ALL
	D11		W0109	604B	24		34-46-12	ALL
	D12		W0109	208B	24		34-46-12	ALL
	D13		W0109	606B	24		34-46-11	ALL
	D14		W0109	720	22		34-46-11	050-099, 151
	D14		W0109	928	22		34-46-13	150, 152-199, 275-299
	D15	UNUSED						050-099, 151
	D15		W0109	950	22		34-46-13	150, 152-199, 275-299
	CAP	Y	W0109	731	24		34-46-12	050-099, 151
	DED		W0109	208Z			34-46-12	ALL
	DED		W0109	603Z			34-46-12	ALL
			W0109	906	20		34-46-11	050-099, 150-166, 275-299
			W0109	906Z			34-46-11	050-099, 150-166, 275-299
			W0109	601	20		34-46-11	ALL
			W0109	601Z			34-46-11	ALL
			W0109	602	20		34-46-11	ALL
			W0109	602Z			34-46-11	ALL
			W0109	604	20		34-46-12	ALL
			W0109	604Z			34-46-12	ALL
			W0109	605	20		34-46-11	ALL
			W0109	605Z			34-46-11	ALL
			W0109	606	20		34-46-11	ALL
			W0109	606Z			34-46-11	ALL
			W0109	607	20		34-46-11	ALL
			W0109	607Z			34-46-11	ALL
			W0109	9018	20		34-46-13	150, 152-199, 275-299
			W0109	918Z			34-46-13	150, 152-199, 275-299

HOOKUP LIST

D280T132

91-21-51

Section D00400

Page 110

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00435C		//		PLUG-PART OF D00435				ALL
	1	UNUSED						050-099, 151
	2		W0109	702	20		34-46-11	ALL
	3		W0109	713	20		34-46-11	ALL
	4		W0109	714	20		34-46-11	ALL
	5	UNUSED						ALL
	=1		W9091	01CX			34-46-11	150, 152-199, 275-299
	=C1	UNUSED						050-099, 151
	=C1		W9091	01CO			34-46-11	150, 152-199, 275-299
	=C5	UNUSED						ALL
D00438		P006-00/ /		RELAY SOCKET-P6				ALL
	A1	UNUSED						ALL
	A2		W0028	014	24		24-33-11	ALL
	A3		W0028	093	20		24-33-11	ALL
	B1	UNUSED						ALL
	B2	UNUSED						ALL
	B3	UNUSED						ALL
	X1		W0028	091	24		24-33-11	ALL
	X2		W0028	092	20		24-33-11	ALL
D00439A		//		PLUG-PART OF D00439				ALL
	A01	UNUSED						ALL
	A02	UNUSED						ALL
	A03	UNUSED						ALL
	A04	UNUSED						ALL
	A05	UNUSED						ALL
	A06	UNUSED						ALL
	A07	UNUSED						ALL
	A08	UNUSED						ALL
	A09	UNUSED						ALL
	A10	UNUSED						ALL
	A11	UNUSED						ALL
	A12	UNUSED						ALL
	A13	UNUSED						ALL
	A14	UNUSED						ALL
	A15	UNUSED						ALL
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00400

Page 111

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00439A		//		PLUG-PART OF D00439 (continued)				ALL
	B04	UNUSED						ALL
	B05	UNUSED						ALL
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13	UNUSED						ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	C01	UNUSED						ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05	UNUSED						ALL
	C06	UNUSED						ALL
	C07	UNUSED						ALL
	C08	UNUSED						ALL
	C09	UNUSED						ALL
	C10	UNUSED						ALL
	C11	UNUSED						ALL
	C12	UNUSED						ALL
	C13	UNUSED						ALL
	C14	UNUSED						ALL
	C15	UNUSED						ALL
	D01	UNUSED						ALL
	D02	UNUSED						ALL
	D03	UNUSED						ALL
	D04	UNUSED						ALL
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	D08	UNUSED						ALL
	D09	UNUSED						ALL
	D10	UNUSED						ALL
	D11	UNUSED						ALL
	D12	UNUSED						ALL
	D13	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D00400
Page 112
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00439A		//		PLUG-PART OF D00439 (continued)				ALL
	D14	UNUSED						ALL
	D15	UNUSED						ALL
D00439B		//		PLUG-PART OF D00439				ALL
	A01		W0139	303R	24		23-51-14	ALL
	A02	UNUSED						ALL
	A03	UNUSED						ALL
	A04	UNUSED						ALL
	A05	UNUSED						ALL
	A06	UNUSED						ALL
	A07		W0139	201R	24		23-12-11	ALL
	A08	UNUSED						ALL
	A09	UNUSED						ALL
	A10	UNUSED						ALL
	A11	UNUSED						ALL
	A12	UNUSED						ALL
	A13		W0139	203R	24		23-21-11	ALL
	A14	UNUSED						ALL
	A15		W0139	231R	24		23-51-14	ALL
	B01		W0139	303B	24		23-51-14	ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04	UNUSED						ALL
	B05	UNUSED						ALL
	B06	UNUSED						ALL
	B07		W0139	201B	24		23-12-11	ALL
	B08	UNUSED						ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13		W0139	203B	24		23-21-11	ALL
	B14		W0139	751	24		23-12-11	ALL
	B15		W0139	231B	24		23-51-14	ALL
	C01		W0139	303Y	24		23-51-14	ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05	UNUSED						ALL
	C06	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00400

Page 113

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00439B		//		PLUG-PART OF D00439 (continued)				ALL
	C07	UNUSED						ALL
	C08	UNUSED						ALL
	C09	UNUSED						ALL
	C10	UNUSED						ALL
	C11	UNUSED						ALL
	C12	UNUSED						ALL
	C13	UNUSED						ALL
	C14	UNUSED						ALL
	C15	UNUSED						ALL
	D01		W0139	051	24		23-12-11	ALL
	D02	UNUSED						ALL
	D03		W0139	006	22		23-12-11	ALL
	D04	UNUSED						ALL
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	D08	UNUSED						ALL
	D09	UNUSED						ALL
	D10	UNUSED						ALL
	D11	UNUSED						ALL
	D12	UNUSED						ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15	UNUSED						ALL
			W0139	201	20		23-12-11	ALL
			W0139	201Z			23-12-11	ALL
D00439C		//		PLUG-PART OF D00439				ALL
	1		W1073	01CX			23-12-11	ALL
	2		W0139	001	16		23-12-11	ALL
	3	UNUSED						ALL
	4		W0139	005	16		23-12-11	ALL
	5	UNUSED						ALL
	= C1		W1073	01CO			23-12-11	ALL
	= C5	UNUSED						ALL
D00440		P006-00/ /		PLUG-P6				ALL
	1		W0028	077	24		24-33-11	ALL
	2		W0028	075	20		24-33-11	ALL
	3	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D00400
Page 114
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00440		P006-00/ /		PLUG-P6 (continued)				ALL
	4	UNUSED						ALL
	5		W0028	128	24		24-33-11	ALL
	6		W0028	127	24		24-33-11	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D00441A		//		PLUG-PART OF D00441				ALL
	A01	UNUSED						ALL
	A02	UNUSED						ALL
	A03	UNUSED						ALL
	A04	UNUSED						ALL
	A05	UNUSED						ALL
	A06	UNUSED						ALL
	A07	UNUSED						ALL
	A08	UNUSED						ALL
	A09	UNUSED						ALL
	A10	UNUSED						ALL
	A11	UNUSED						ALL
	A12	UNUSED						ALL
	A13	UNUSED						ALL
	A14	UNUSED						ALL
	A15	UNUSED						ALL
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04	UNUSED						ALL
	B05	UNUSED						ALL
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13	UNUSED						ALL
	B14	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00400

Page 115

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00441A		//		PLUG-PART OF D00441 (continued)				ALL
	B15	UNUSED						ALL
	C01	UNUSED						ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05	UNUSED						ALL
	C06	UNUSED						ALL
	C07	UNUSED						ALL
	C08	UNUSED						ALL
	C09	UNUSED						ALL
	C10	UNUSED						ALL
	C11	UNUSED						ALL
	C12	UNUSED						ALL
	C13	UNUSED						ALL
	C14	UNUSED						ALL
	C15	UNUSED						ALL
	D01	UNUSED						ALL
	D02	UNUSED						ALL
	D03	UNUSED						ALL
	D04	UNUSED						ALL
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	D08	UNUSED						ALL
	D09	UNUSED						ALL
	D10	UNUSED						ALL
	D11	UNUSED						ALL
	D12	UNUSED						ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15	UNUSED						ALL
D00441B		//		PLUG-PART OF D00441				ALL
	A01		W0139	020	24		23-21-11	ALL
	A02		W0139	034	24		23-21-11	ALL
	A03		W0139	204R	24		23-21-11	ALL
	A04		W0139	025	22		23-21-11	ALL
	A05		W0139	248R	24		23-21-11	ALL
	A06		W0139	206R	24		23-21-11	ALL
	A07		W0139	023	24		23-21-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00400

Page 116

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00441B		//		PLUG-PART OF D00441 (continued)				ALL
	A08		W0139	024	22		23-21-11	ALL
	A09	UNUSED						ALL
	A10		W0139	881	24		23-21-12	050-099, 150-151, 153-154, 156, 162-165, 280-299
	A10	UNUSED						152, 155, 157, 166-199, 275-278
	A11		W0139	885	24		23-21-12	050-099, 151-154, 157-165, 275-276
	A11	UNUSED						150, 155-156, 166-199, 277-299
	A12	UNUSED						ALL
	A13	UNUSED						050-099, 151, 153-154, 164-199, 277, 280-299
	A13		W0139	889	24		23-21-12	150, 152, 155-163, 275-276, 278
	A14	UNUSED						ALL
	A15		W0139	893	24		23-21-12	050-099, 153, 155-156, 164, 166, 275, 277-278
	A15	UNUSED						150-152, 154, 157-163, 165, 167-199, 276, 280-299
	B01		W0139	021	24		23-21-11	ALL
	B02		W0139	203R	24		23-21-11	ALL
	B03		W0139	204B	24		23-21-11	ALL
	B04		W0139	026	24		23-21-11	ALL
	B05		W0139	248B	24		23-21-11	ALL
	B06		W0139	206B	24		23-21-11	ALL
	B07		W0139	027	24		23-21-11	ALL
	B08		W0139	205R	24		23-21-11	ALL
	B09		W0139	897	24		23-21-12	ALL
	B10	UNUSED						050-099, 150-154, 156, 162-165, 167-199, 275-276, 278-299
	B10		W0139	882	24		23-21-12	155, 157, 166, 277
	B11	UNUSED						050-099, 150, 153-154, 156, 162-199, 275-277
	B11		W0139	886	24		23-21-12	151-152, 155, 157, 278-299
	B12	UNUSED						ALL
	B13	UNUSED						050-099, 151-154, 157, 164, 166, 275-278
	B13		W0139	890	24		23-21-12	150, 155-156, 162-163, 165, 167-199, 280-299
	B14	UNUSED						ALL
	B15	UNUSED						050, 151-152, 154, 163-164, 167-199, 280-299
	B15		W0139	894	24		23-21-12	051-099, 150, 153, 155-162, 165-166, 275-278

HOOKUP LIST

D280T132

91-21-51

Section D00400

Page 117

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00441B		//		PLUG-PART OF D00441 (continued)				ALL
	C01		W0139	784	24		23-21-11	050-099, 150, 152-199, 277-299
	C01		W0139	032	24		23-21-11	151, 275-276
	C02		W0139	203B	24		23-21-11	ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05	UNUSED						ALL
	C06	UNUSED						ALL
	C07		W0139	028	24		23-21-11	ALL
	C08		W0139	205B	24		23-21-11	ALL
	C09	UNUSED						ALL
	C10		W0139	883	24		23-21-12	050-099, 150-154, 162-199, 275-299
	C10	UNUSED						155-157
	C11	UNUSED						050-099, 151-154, 162-165, 167-199, 275-278
	C11		W0139	887	24		23-21-12	150, 155-157, 166, 280-299
	C12	UNUSED						ALL
	C13		W0139	891	24		23-21-12	050-099, 150, 152-154, 164, 166-199, 275-278
	C13	UNUSED						151, 155-163, 165, 280-299
	C14	UNUSED						ALL
	C15		W0139	895	24		23-21-12	050, 150-152, 155, 157, 163-199, 275-276, 278
	C15	UNUSED						051-099, 153-154, 156, 162, 277, 280-299
	D01		W0139	033	24		23-21-11	ALL
	D02	UNUSED						ALL
	D03	UNUSED						ALL
	D04	UNUSED						ALL
	D05	UNUSED						ALL
	D06		W0139	022	24		23-21-11	ALL
	D07		W0139	029	24		23-21-11	ALL
	D08	UNUSED						ALL
	D09	UNUSED						ALL
	D10		W0139	884	24		23-21-12	050-099, 150-165, 167-199, 275-299
	D10	UNUSED						166
	D11		W0139	888	24		23-21-12	050-099, 150, 152-154, 162-165, 167-199, 278
	D11	UNUSED						151, 155-157, 166, 275-277, 280-299
	D12	UNUSED						ALL
	D13		W0139	892	24		23-21-12	050-099, 151-166, 275-276, 278
	D13	UNUSED						150, 167-199, 277, 280-299

HOOKUP LIST
D280T132

91-21-51
Section D00400
Page 118
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00441B		//		PLUG-PART OF D00441 (continued)				ALL
	D14	UNUSED						ALL
	D15	UNUSED						050-099, 150-152, 155-157, 163-199, 275-277, 280-299
	D15		W0139	896	24		23-21-12	153-154, 162, 278
D00441C		//		PLUG-PART OF D00441				ALL
	1	UNUSED						ALL
	2		W0139	015	20		23-21-11	ALL
	3		W0139	016	20		23-21-11	ALL
	4		W0139	017	20		23-21-11	ALL
	5	UNUSED						ALL
	= C1	UNUSED						ALL
	= C5	UNUSED						ALL
D00443A		//		PLUG-PART OF D00443				ALL
	A01	UNUSED						ALL
	A02	UNUSED						ALL
	A03	UNUSED						ALL
	A04	UNUSED						ALL
	A05	UNUSED						ALL
	A06	UNUSED						ALL
	A07	UNUSED						ALL
	A08	UNUSED						ALL
	A09	UNUSED						ALL
	A10	UNUSED						ALL
	A11	UNUSED						ALL
	A12	UNUSED						ALL
	A13	UNUSED						ALL
	A14	UNUSED						ALL
	A15	UNUSED						ALL
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04	UNUSED						ALL
	B05	UNUSED						ALL
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00400

Page 119

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00443A		//		PLUG-PART OF D00443 (continued)				ALL
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13	UNUSED						ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	C01	UNUSED						ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05	UNUSED						ALL
	C06	UNUSED						ALL
	C07	UNUSED						ALL
	C08	UNUSED						ALL
	C09	UNUSED						ALL
	C10	UNUSED						ALL
	C11	UNUSED						ALL
	C12	UNUSED						ALL
	C13	UNUSED						ALL
	C14	UNUSED						ALL
	C15	UNUSED						ALL
	D01	UNUSED						ALL
	D02	UNUSED						ALL
	D03	UNUSED						ALL
	D04	UNUSED						ALL
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	D08	UNUSED						ALL
	D09	UNUSED						ALL
	D10	UNUSED						ALL
	D11	UNUSED						ALL
	D12	UNUSED						ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15	UNUSED						ALL
D00443B		//		PLUG-PART OF D00443				ALL
	A01		W0139	302R	24		23-51-14	ALL
	A02	UNUSED						ALL
	A03	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00400

Page 120

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00443B		//		PLUG-PART OF D00443 (continued)				ALL
	A04	UNUSED						ALL
	A05	UNUSED						ALL
	A06	UNUSED						ALL
	A07		W0139	202R	24		23-12-21	ALL
	A08	UNUSED						ALL
	A09	UNUSED						ALL
	A10	UNUSED						ALL
	A11	UNUSED						ALL
	A12	UNUSED						ALL
	A13		W0139	204R	24		23-21-11	ALL
	A14	UNUSED						ALL
	A15		W0139	230R	24		23-51-14	ALL
	B01		W0139	302B	24		23-51-14	ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04	UNUSED						ALL
	B05	UNUSED						ALL
	B06	UNUSED						ALL
	B07		W0139	202B	24		23-12-21	ALL
	B08	UNUSED						ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13		W0139	204B	24		23-21-11	ALL
	B14		W0139	752	24		23-12-21	ALL
	B15		W0139	230B	24		23-51-14	ALL
	C01		W0139	302Y	24		23-51-14	ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05	UNUSED						ALL
	C06	UNUSED						ALL
	C07	UNUSED						ALL
	C08	UNUSED						ALL
	C09	UNUSED						ALL
	C10	UNUSED						ALL
	C11	UNUSED						ALL
	C12	UNUSED						ALL
	C13	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00400

Page 121

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00443B		//		PLUG-PART OF D00443 (continued)				ALL
	C14	UNUSED						ALL
	C15	UNUSED						ALL
	D01		W0139	052	24		23-12-21	ALL
	D02	UNUSED						ALL
	D03		W0139	014	22		23-12-21	ALL
	D04	UNUSED						ALL
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	D08	UNUSED						ALL
	D09	UNUSED						ALL
	D10	UNUSED						ALL
	D11	UNUSED						ALL
	D12	UNUSED						ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15	UNUSED						ALL
			W0139	202	20		23-12-21	ALL
			W0139	202Z			23-12-21	ALL
D00443C		//		PLUG-PART OF D00443				ALL
	1		W1075	01CX			23-12-21	ALL
	2		W0139	007	16		23-12-21	ALL
	3	UNUSED						ALL
	4		W0139	013	16		23-12-21	ALL
	5	UNUSED						ALL
	= C1		W1075	01CO			23-12-21	ALL
	= C5	UNUSED						ALL
D00445A		//		PLUG-PART OF D00445				ALL
	A01	UNUSED						ALL
	A02	UNUSED						ALL
	A03	UNUSED						ALL
	A04	UNUSED						ALL
	A05	UNUSED						ALL
	A06	UNUSED						ALL
	A07	UNUSED						ALL
	A08	UNUSED						ALL
	A09	UNUSED						ALL
	A10	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D00400
Page 122
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00445A		//		PLUG-PART OF D00445 (continued)				ALL
	A11	UNUSED						ALL
	A12	UNUSED						ALL
	A13	UNUSED						ALL
	A14	UNUSED						ALL
	A15	UNUSED						ALL
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04	UNUSED						ALL
	B05	UNUSED						ALL
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13	UNUSED						ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	C01	UNUSED						ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05	UNUSED						ALL
	C06	UNUSED						ALL
	C07	UNUSED						ALL
	C08	UNUSED						ALL
	C09	UNUSED						ALL
	C10	UNUSED						ALL
	C11	UNUSED						ALL
	C12	UNUSED						ALL
	C13	UNUSED						ALL
	C14	UNUSED						ALL
	C15	UNUSED						ALL
	D01	UNUSED						ALL
	D02	UNUSED						ALL
	D03	UNUSED						ALL
	D04	UNUSED						ALL
	D05	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00400

Page 123

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00445A		//		PLUG-PART OF D00445 (continued)				ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	D08	UNUSED						ALL
	D09	UNUSED						ALL
	D10	UNUSED						ALL
	D11	UNUSED						ALL
	D12	UNUSED						ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15	UNUSED						ALL
D00445B		//		PLUG-PART OF D00445				ALL
	A01		W0139	307R	24		23-51-14	ALL
	A02	UNUSED						ALL
	A03	UNUSED						ALL
	A04	UNUSED						ALL
	A05		W0139	223R	24		23-22-12	ALL
	A06	UNUSED						ALL
	A07		W0139	242R	24		23-12-31	ALL
	A08	UNUSED						ALL
	A09	UNUSED						ALL
	A10	UNUSED						ALL
	A11		W0139	224R	24		23-22-12	ALL
	A12	UNUSED						ALL
	A13		W0139	222R	24		23-21-11	ALL
	A14	UNUSED						ALL
	A15		W0139	216R	24		23-51-14	ALL
	B01		W0139	307B	24		23-51-14	ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04	UNUSED						ALL
	B05		W0139	223B	24		23-22-12	ALL
	B06	UNUSED						ALL
	B07		W0139	242B	24		23-12-31	ALL
	B08	UNUSED						ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11		W0139	224B	24		23-22-12	ALL
	B12	UNUSED						ALL
	B13		W0139	222B	24		23-21-11	ALL

HOOKUP LIST
D280T132

91-21-51
Section D00400
Page 124
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00445B		//		PLUG-PART OF D00445 (continued)				ALL
	B14		W0139	753	24		23-12-31	ALL
	B15		W0139	216B	24		23-51-14	ALL
	C01		W0139	307Y	24		23-51-14	ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05	UNUSED						ALL
	C06	UNUSED						ALL
	C07		W0139	183	24		23-22-12	ALL
	C08	UNUSED						ALL
	C09	UNUSED						ALL
	C10	UNUSED						ALL
	C11	UNUSED						ALL
	C12	UNUSED						ALL
	C13	UNUSED						ALL
	C14	UNUSED						ALL
	C15	UNUSED						ALL
	D01		W0139	053	24		23-12-31	ALL
	D02	UNUSED						ALL
	D03		W0139	107	22		23-12-31	ALL
	D04	UNUSED						ALL
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07		W0139	092	24		23-22-12	ALL
	D08		W0139	093	24		23-22-12	ALL
	D09	UNUSED						ALL
	D10	UNUSED						ALL
	D11		W0139	091	24		23-22-12	ALL
	D12	UNUSED						ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15	UNUSED						ALL
			W0139	224	20		23-22-12	ALL
			W0139	224Z			23-22-12	ALL
			W0139	242	20		23-12-31	ALL
			W0139	242Z			23-12-31	ALL
D00445C		//		PLUG-PART OF D00445				ALL
	1		W1077	01CX			23-12-31	ALL
	2		W0139	104	16		23-12-31	ALL

HOOKUP LIST
D280T132

91-21-51
Section D00400
Page 125
Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00445C		//		PLUG-PART OF D00445 (continued)				ALL
	3	UNUSED						ALL
	4		W0139	106	16		23-12-31	ALL
	5	UNUSED						ALL
	= C1		W1077	01CO			23-12-31	ALL
	= C5	UNUSED						ALL
D00446		0398/187/L075		PLUG-				ALL
	1		W0986	025	12		21-58-14	ALL
	2		W0986	026	12		21-58-14	ALL
	3		W0986	027	12		21-58-14	ALL
	4	UNUSED						ALL
	5		W0986	030	18		21-58-14	ALL
	6		W0986	031	18		21-58-14	ALL
	7		W0986	029	16		21-58-14	ALL
	8	UNUSED						ALL
D00447A		//		PLUG-PART OF D00447				050-099
D00447A		SHELF/E02/-05		PLUG				150, 152-199
D00447A		SHELF/E02/-05		PLUG-PART OF D00447				151, 275-299
	A01	UNUSED						050-099, 151, 275-299
	A02	UNUSED						050-099, 151, 275-299
	A03	UNUSED						050-099, 151, 275-299
	A04	UNUSED						050-099, 151, 275-299
	A05	UNUSED						050-099, 151, 275-299
	A06	UNUSED						050-099, 151, 275-299
	A07		W0139	224R	24		23-22-12	ALL
	A08	UNUSED						050-099, 151, 275-299
	A09		W0139	223R	24		23-22-12	ALL
	A10	UNUSED						050-099, 151, 275-299
	A11	UNUSED						050-099, 151, 275-299
	A12	UNUSED						050-099, 151, 275-299
	A13	UNUSED						050-099, 151, 275-299
	A14		W0139	578	24		23-22-12	ALL
	A15	UNUSED						050-099, 151, 275-299
	B01	UNUSED						050-099, 151, 275-299
	B02	UNUSED						050-099, 151, 275-299
	B03	UNUSED						050-099, 151, 275-299
	B04	UNUSED						050-099, 151, 275-299
	B05	UNUSED						050-099, 151, 275-299
	B06	UNUSED						050-099, 151, 275-299

HOOKUP LIST

D280T132

91-21-51

Section D00400

Page 126

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00447A		//		PLUG-PART OF D00447 (continued)				050-099
D00447A		SHELF/E02/-05		PLUG (continued)				150, 152-199
D00447A		SHELF/E02/-05		PLUG-PART OF D00447 (continued)				151, 275-299
	B07		W0139	224B	24		23-22-12	ALL
	B08	UNUSED						050-099, 151, 275-299
	B09		W0139	223B	24		23-22-12	ALL
	B10	UNUSED						050-099, 151, 275-299
	B11		W0139	754	24		23-22-12	ALL
	B12	UNUSED						050-099, 151, 275-299
	B13	UNUSED						050-099, 151, 275-299
	B14		W0139	579	24		23-22-12	ALL
	B15	UNUSED						050-099, 151, 275-299
	C01	UNUSED						050-099, 151, 275-299
	C02	UNUSED						050-099, 151, 275-276
	C02		W0139	669R	22		23-25-13	150, 153-155, 162-165
	C02		W0139	669R	24		23-25-13	156-157, 166-199, 277-299
	C03	UNUSED						050-099, 151, 275-299
	C04	UNUSED						050-099, 151, 275-299
	C05	UNUSED						050-099, 151, 275-299
	C06	UNUSED						050-099, 151, 275-299
	C07		W0139	091	24		23-22-12	050-099, 150-166, 275-299
	C07		W0139	637	24		23-22-12	167-199
	C08	UNUSED						050-099, 151, 275-299
	C09		W0139	221R	24		23-22-12	ALL
	C10	UNUSED						050-099, 151, 275-299
	C11	UNUSED						050-099, 151, 275-299
	C12	UNUSED						050-099, 151, 275-299
	C13	UNUSED						050-099, 151, 275-299
	C14		W0139	617	24		23-22-12	ALL
	C15	UNUSED						050-099, 151, 275-299
	D01	UNUSED						050-099, 151, 275-299
	D02	UNUSED						050-099, 151, 275-276
	D02		W0139	669B	22		23-25-13	150, 153-155, 162-165
	D02		W0139	669B	24		23-25-13	156-157, 166-199, 277-299
	D03	UNUSED						050-099, 151, 275-299
	D04	UNUSED						050-099, 151, 275-299
	D05		W0139	658R	24		23-22-15	ALL
	D06	UNUSED						050-099, 151, 275-299
	D07		W0139	586	24		23-22-12	ALL
	D08	UNUSED						050-099, 151, 275-299
	D09		W0139	221B	24		23-22-12	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00400

Page 127

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00447A		//		PLUG-PART OF D00447 (continued)				050-099
D00447A		SHELF/E02/-05		PLUG (continued)				150, 152-199
D00447A		SHELF/E02/-05		PLUG-PART OF D00447 (continued)				151, 275-299
	D10	UNUSED						050-099, 151, 275-299
	D11	UNUSED	W0139	756	24		23-22-12	ALL
	D12	UNUSED						050-099, 151, 275-299
	D13	UNUSED						050-099, 151, 275-299
	D14	UNUSED	W0139	581	24		23-22-12	ALL
	D15	UNUSED						050-099, 151, 275-299
	E01	UNUSED						050-099, 151, 275-299
	E02	UNUSED						050-099, 151, 275-299
	E03	UNUSED						050-099, 151, 275-299
	E04	UNUSED						050-099, 151, 275-299
	E05	UNUSED	W0139	658B	24		23-22-15	ALL
	E06	UNUSED	W0139	654	24		23-22-15	ALL
	E07	UNUSED	W0139	708	24		23-22-12	ALL
	E08	UNUSED						050-099, 151, 275-299
	E09	UNUSED						050-099, 151, 275-299
	E10	UNUSED						050-099, 151, 275-299
	E11	UNUSED						050-099, 151, 275-299
	E12	UNUSED						050-099, 151, 275-299
	E13	UNUSED						050-099, 151, 275-299
	E14	UNUSED						050-099, 151, 275-299
	E15	UNUSED						050-099, 151, 275-299
	F01	UNUSED						050-099, 151, 275-299
	F02	UNUSED						050-099, 151, 275-299
	F03	UNUSED						050-099, 151, 275-299
	F04	UNUSED						050-099, 151, 275-299
	F05	UNUSED						050-099, 151, 275-299
	F06	UNUSED	W0139	657R	24		23-22-15	ALL
	F07	UNUSED	W0139	088	24		23-22-12	ALL
	F08	UNUSED						050-099, 151, 275-299
	F09	UNUSED						050-099, 151, 275-299
	F10	UNUSED						050-099, 151, 275-299
	F11	UNUSED						050-099, 151, 275-299
	F12	UNUSED						050-099, 151, 275-299
	F13	UNUSED						050-099, 151, 275-299
	F14	UNUSED						050-099, 151, 275-299
	F15	UNUSED						050-099, 151, 275-299
	G01	UNUSED						050-099, 151, 275-299
	G02	UNUSED						050-099, 151, 275-299

HOOKUP LIST

D280T132

91-21-51

Section D00400

Page 128

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00447A		//		PLUG-PART OF D00447 (continued)				050-099
D00447A		SHELF/E02/-05		PLUG (continued)				150, 152-199
D00447A		SHELF/E02/-05		PLUG-PART OF D00447 (continued)				151, 275-299
	G03	UNUSED						050-099, 151, 275-299
	G04	UNUSED						050-099, 151, 275-299
	G05	UNUSED						050-099, 151, 275-299
	G06		W0139	657B	24		23-22-15	ALL
	G07	UNUSED						050-099, 151, 275-276
	G07		W0139	668R	22		23-25-13	150, 153-155, 162-165
	G07		W0139	668R	24		23-25-13	156-157, 166-199, 277-299
	G08	UNUSED						050-099, 151, 275-299
	G09		W0139	790	24		23-22-11	ALL
	G10	UNUSED						050-099, 151, 275-299
	G11	UNUSED						050-099, 151, 275-299
	G12	UNUSED						050-099, 151, 275-299
	G13	UNUSED						050-099, 151, 275-299
	G14		W0139	577	24		23-22-12	ALL
	G15	UNUSED						050-099, 151, 275-299
	H01	UNUSED						050-099, 151, 275-299
	H02	UNUSED						050-099, 151, 275-299
	H03	UNUSED						050-099, 151, 275-299
	H04	UNUSED						050-099, 151, 275-299
	H05		W0139	092	24		23-22-12	ALL
	H06	UNUSED						050-099, 151, 275-299
	H07	UNUSED						050-099, 151, 275-276
	H07		W0139	668B	22		23-25-13	150, 153-155, 162-165
	H07		W0139	668B	24		23-25-13	156-157, 166-199, 277-299
	H08	UNUSED						050-099, 151, 275-299
	H09		W0139	791	22		23-22-11	050-099, 150, 152-199, 275-299
	H09	UNUSED						151
	H10	UNUSED						050-099, 151, 275-299
	H11	UNUSED						050-099, 151, 275-299
	H12	UNUSED						050-099, 151, 275-299
	H13	UNUSED						050-099, 151, 275-299
	H14	UNUSED						050-099, 151, 275-299
	H15	UNUSED						050-099, 151, 275-299
	J01	UNUSED						050-099, 151, 275-299
	J02	UNUSED						050-099, 151, 275-299
	J03	UNUSED						050-099, 151, 275-299
	J04	UNUSED						050-099, 151, 275-299
	J05	UNUSED						050-099, 151

HOOKUP LIST

D280T132

91-21-51

Section D00400

Page 129

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00447A		//		PLUG-PART OF D00447 (continued)				050-099
D00447A		SHELF/E02/-05		PLUG (continued)				150, 152-199
D00447A		SHELF/E02/-05		PLUG-PART OF D00447 (continued)				151, 275-299
	J05		W0139	012	24		23-22-12	167-199
	J05		W0139	012	22		23-22-12	275-299
	J06	UNUSED						050-099, 151, 275-299
	J07	UNUSED						050-099, 151, 275-299
	J08	UNUSED						050-099, 151, 275-299
	J09	UNUSED						050-099, 151, 275-299
	J10	UNUSED						050-099, 151, 275-299
	J11	UNUSED						050-099, 151, 275-299
	J12	UNUSED						050-099, 151, 275-299
	J13	UNUSED						050-099, 151, 275-299
	J14	UNUSED						050-099, 151, 275-299
	J15	UNUSED						050-099, 151, 275-299
	K01	UNUSED						050-099, 151, 275-299
	K02	UNUSED						050-099, 151, 275-299
	K03	UNUSED						050-099, 151, 275-299
	K04	UNUSED						050-099, 151, 275-299
	K05	UNUSED						050-099, 151, 275-299
	K06	UNUSED						050-099, 151, 275-299
	K07		W0139	093	24		23-22-12	ALL
	K08	UNUSED						050-099, 151, 275-299
	K09	UNUSED						050-099, 151, 275-299
	K10	UNUSED						050-099, 151, 275-299
	K11	UNUSED						050-099, 151, 275-299
	K12	UNUSED						050-099, 151, 275-299
	K13	UNUSED						050-099, 151, 275-299
	K14	UNUSED						050-099, 151, 275-299
	K15	UNUSED						050-099, 151, 275-299
	DED		W0139	224Z			23-22-12	ALL
			W0139	657	20		23-22-15	ALL
			W0139	657Z			23-22-15	ALL
			W0139	658	20		23-22-15	ALL
			W0139	658Z			23-22-15	ALL
			W0139	668	20		23-25-13	150, 153-199, 277-299
			W0139	668Z			23-25-13	150, 153-199, 277-299
			W0139	669	20		23-25-13	150, 153-199, 277-299
			W0139	669Z			23-25-13	150, 153-199, 277-299

HOOKUP LIST

D280T132

91-21-51

Section D00400

Page 130

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00447B		//		PLUG-PART OF D00447				050-099
D00447B		SHELF/E02/-05		PLUG				150, 152-199
D00447B		SHELF/E02/-05		PLUG-PART OF D00447				151, 275-299
	A01	UNUSED						050-099, 151, 275-299
	A02		W0139	801	24		23-22-13	050-099, 151, 165, 275-299
	A03	UNUSED						050, 275-299
	A03		W0139	811	24		23-22-13	051-099, 151, 163, 165, 167-199
	A04	UNUSED						050-099, 151, 275-299
	A04		W0139	821	24		23-22-13	150, 152-164, 166-199
	A05	UNUSED						050-099, 151, 275-299
	A05		W0139	831	24		23-22-13	150, 153-154, 156-162, 167-199
	A06	UNUSED						050
	A06		W0139	841	24		23-22-13	051-099, 151, 163, 165, 275-299
	A07		W0139	851	24		23-22-13	050-099, 151, 165, 275-299
	A08	UNUSED						050-099, 151, 275-299
	A09	UNUSED						050-099, 151, 275-299
	A10	UNUSED						050-099, 151, 275-299
	A11	UNUSED						050-099, 151, 275-299
	A12	UNUSED						050-099, 151, 275-299
	A13	UNUSED						050-099, 151, 275-299
	A14		W0139	287R	24		23-22-11	ALL
	A15	UNUSED						050-099, 151, 275-299
	B01	UNUSED						050-099, 151, 275-299
	B02	UNUSED						050-099, 151, 275-299
	B02		W0139	802	24		23-22-13	150, 152-164, 166-199
	B03		W0139	812	24		23-22-13	050-099, 151, 165, 275-299
	B04	UNUSED						050-099, 151, 275-299
	B04		W0139	822	24		23-22-13	150, 152-164, 166-199
	B05	UNUSED						050-099, 151, 275-299
	B05		W0139	832	24		23-22-13	150, 153-154, 156-162, 167-199
	B06		W0139	842	24		23-22-13	050-099, 151, 165, 275-299
	B07	UNUSED						050-099, 151
	B07		W0139	852	24		23-22-13	150, 152-162, 164, 166-199, 275-299
	B08	UNUSED						050-099, 151, 275-299
	B09	UNUSED						050-099, 151, 275-299
	B10	UNUSED						050-099, 151, 275-299
	B11	UNUSED						050-099, 151, 275-299
	B12	UNUSED						050-099, 151, 275-299
	B13	UNUSED						050-099, 151, 275-299
	B14		W0139	287B	24		23-22-11	ALL
	B15	UNUSED						050-099, 151, 275-299

HOOKUP LIST

D280T132

91-21-51

Section D00400

Page 131

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00447B		//		PLUG-PART OF D00447 (continued)				050-099
D00447B		SHELF/E02/-05		PLUG (continued)				150, 152-199
D00447B		SHELF/E02/-05		PLUG-PART OF D00447 (continued)				151, 275-299
	C01	UNUSED						050-099, 151, 275-299
	C02	UNUSED						050-099, 151, 275-299
	C02		W0139	803	24		23-22-13	150, 152-164, 166-199
	C03	UNUSED						050
	C03		W0139	813	24		23-22-13	051-099, 151-152, 155, 164-199, 275-299
	C04		W0139	823	24		23-22-13	050-099, 151, 165, 275-299
	C05		W0139	833	24		23-22-13	050-099, 151-152, 155, 164-199, 275-299
	C06	UNUSED						050-099, 151, 275-299
	C06		W0139	843	24		23-22-13	150, 152-164, 166-199
	C07		W0139	853	24		23-22-13	050-099, 151, 163, 165
	C07	UNUSED						275-299
	C08	UNUSED						050-099, 151, 275-299
	C09		W0139	793	24		23-22-11	050-099, 150, 152-199, 275-299
	C09	UNUSED						151
	C10	UNUSED						050-099, 151, 275-299
	C11	UNUSED						050-099, 151, 275-299
	C12		W0139	271R	24		23-22-12	050-099, 150-199, 275-278
	C12	UNUSED						280-299
	C13	UNUSED						050-099, 151, 275-299
	C14		W0139	288R	24		23-22-11	ALL
	C15	UNUSED						050-099, 151, 275-299
	D01	UNUSED						050-099, 151, 275-299
	D02	UNUSED						050-099, 151, 275-299
	D02		W0139	804	24		23-22-13	150, 152-164, 166-199
	D03		W0139	814	24		23-22-13	050, 150, 153-154, 156-162, 275-299
	D03	UNUSED						051-099, 151
	D04	UNUSED						050-099, 151, 275-299
	D04		W0139	824	24		23-22-13	150, 152-164, 166-199
	D05	UNUSED						050
	D05		W0139	834	24		23-22-13	051-099, 151, 163, 165, 167-199, 275-299
	D06	UNUSED						050-099, 151
	D06		W0139	844	24		23-22-13	150, 152-164, 166-199, 275-299
	D07		W0139	854	24		23-22-13	050-099, 151, 165, 275-299
	D08	UNUSED						050-099, 151, 275-299
	D09	UNUSED						050-099, 151, 275-299
	D10	UNUSED						050-099, 151, 275-299
	D11	UNUSED						050-099, 151, 275-299
	D12		W0139	271B	24		23-22-12	050-099, 150-199, 275-278

HOOKUP LIST

D280T132

91-21-51

Section D00400

Page 132

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00447B		//		PLUG-PART OF D00447 (continued)				050-099
D00447B		SHELF/E02/-05		PLUG (continued)				150, 152-199
D00447B		SHELF/E02/-05		PLUG-PART OF D00447 (continued)				151, 275-299
	D12	UNUSED						280-299
	D13	UNUSED						050-099, 151, 275-299
	D14		W0139	288B	24		23-22-11	ALL
	D15	UNUSED						050-099, 151, 275-299
	E01	UNUSED						050-099, 151, 275-299
	E02		W0139	805	24		23-22-13	050-099, 151, 165, 275-299
	E03	UNUSED						050-099, 151
	E03		W0139	815	24		23-22-13	150, 153-154, 156-162, 167-199, 275-299
	E04		W0139	825	24		23-22-13	050-099, 151-152, 155, 163-166
	E04	UNUSED						275-299
	E05		W0139	835	24		23-22-13	050-099, 151, 165, 275-299
	E06		W0139	845	24		23-22-13	050-099, 151, 163, 165
	E06	UNUSED						275-299
	E07		W0139	855	24		23-22-13	ALL
	E08	UNUSED						050-099, 151, 275-299
	E09	UNUSED						050-099, 151, 275-299
	E10	UNUSED						050-099, 151, 275-299
	E11	UNUSED						050-099, 151, 275-299
	E12		W0139	272R	24		23-22-12	050-099, 150-199, 275-278
	E12	UNUSED						280-299
	E13	UNUSED						050-099, 151, 275-299
	E14		W0139	289R	24		23-22-11	ALL
	E15		W0139	282R	24		23-22-12	ALL
	F01	UNUSED						050-099, 151, 275-299
	F02	UNUSED						050-099, 151, 275-299
	F02		W0139	806	24		23-22-13	150, 152-164, 166-199
	F03		W0139	816	24		23-22-13	050, 150, 152-164, 166
	F03	UNUSED						051-099, 151, 275-299
	F04		W0139	826	24		23-22-13	050, 150, 152-162, 164, 166, 275-299
	F04	UNUSED						051-099, 151
	F05		W0139	836	24		23-22-13	050-099, 151, 165, 275-299
	F06		W0139	846	24		23-22-13	050-099, 151, 163, 165
	F06	UNUSED						275-299
	F07	UNUSED						050-099, 151, 275-299
	F08	UNUSED						050-099, 151, 275-299
	F09	UNUSED						050-099, 151, 275-276, 280-299
	F09		W0139	792	24		23-22-11	150, 152-199
	F09		W0139	633	24		23-22-11	277-278

HOOKUP LIST

D280T132

91-21-51

Section D00400

Page 133

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00447B		//		PLUG-PART OF D00447 (continued)				050-099
D00447B		SHELF/E02/-05		PLUG (continued)				150, 152-199
D00447B		SHELF/E02/-05		PLUG-PART OF D00447 (continued)				151, 275-299
	F10	UNUSED						050-099, 151, 275-299
	F11	UNUSED						050-099, 151, 275-299
	F12		W0139	272B	24		23-22-12	050-099, 150-199, 275-278
	F12	UNUSED						280-299
	F13	UNUSED						050-099, 151, 275-299
	F14		W0139	289B	24		23-22-11	ALL
	F15		W0139	282B	24		23-22-12	ALL
	G01	UNUSED						050-099, 151, 275-299
	G02	UNUSED						050
	G02		W0139	807	24		23-22-13	051-099, 151-152, 155, 164-199, 275-299
	G03		W0139	817	24		23-22-13	050-099, 151-152, 155, 164-166, 275-299
	G04	UNUSED						050, 275-299
	G04		W0139	827	24		23-22-13	051-099, 151, 165, 167-199
	G05		W0139	837	24		23-22-13	050, 151, 153-154, 156, 162, 165-199, 276, 280-299
	G05	UNUSED						051-099, 275, 277-278
	G06	UNUSED						050-099, 151
	G06		W0139	847	24		23-22-13	150, 152-162, 164, 166-199, 275-299
	G07	UNUSED						050-099, 151, 275-299
	G08	UNUSED						050-099, 151, 275-299
	G09	UNUSED						050-099, 151, 275-276, 280-299
	G09		W0139	587	22		23-22-11	150, 152-199, 277-278
	G10	UNUSED						050-099, 151, 275-299
	G11	UNUSED						050-099, 151, 275-299
	G12	UNUSED						050-099, 151, 275-299
	G13	UNUSED						050-099
	G13		W0139	260R	24		34-61-15	150-199, 275-299
	G14	UNUSED						050-099, 151, 275-299
	G15		W0139	283R	24		23-22-12	ALL
	H01	UNUSED						050-099, 151, 275-299
	H02	UNUSED						050
	H02		W0139	808	24		23-22-13	051-099, 151-152, 155, 164-199, 275-299
	H03		W0139	818	24		23-22-13	050-099, 151, 165, 275-299
	H04		W0139	828	24		23-22-13	050-099, 151-152, 155, 164-166
	H04	UNUSED						275-299
	H05		W0139	838	24		23-22-13	050, 153, 156, 164, 167-199, 276-299
	H05	UNUSED						051-099, 151, 275
	H06		W0139	848	24		23-22-13	050-099, 151, 165, 275-299

HOOKUP LIST

D280T132

91-21-51

Section D00400

Page 134

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00447B		//		PLUG-PART OF D00447 (continued)				050-099
D00447B		SHELF/E02/-05		PLUG (continued)				150, 152-199
D00447B		SHELF/E02/-05		PLUG-PART OF D00447 (continued)				151, 275-299
	H07	UNUSED						050-099, 151, 275-299
	H08	UNUSED						050-099, 151, 275-299
	H09	UNUSED						050-099, 151, 275-299
	H10	UNUSED						050-099, 151, 275-299
	H11	UNUSED						050-099, 151, 275-299
	H12	UNUSED						050-099, 151, 275-299
	H13	UNUSED						050-099
	H13		W0139	260B	24		34-61-15	150-199, 275-299
	H14	UNUSED						050-099, 151, 275-299
	H15		W0139	283B	24		23-22-12	ALL
	J01	UNUSED						050-099, 151, 275-299
	J02		W0139	809	24		23-22-13	050, 150, 152-162, 164, 166, 275-299
	J02	UNUSED						051-099, 151
	J03	UNUSED						050-099, 151, 275-299
	J03		W0139	819	24		23-22-13	150, 152-164, 166-199
	J04		W0139	829	24		23-22-13	050, 150, 153-154, 156-162, 275-299
	J04	UNUSED						051-099, 151
	J05		W0139	839	24		23-22-13	050-099, 151, 153, 155, 157-162, 164, 166, 276-277
	J05	UNUSED						275, 278-299
	J06	UNUSED						050-099, 151
	J06		W0139	849	24		23-22-13	150, 152-162, 164, 166-199, 275-299
	J07		W0139	220R	24		31-35-11	ALL
	J08	UNUSED						050-099, 151, 275-299
	J09	UNUSED						050-099, 151, 275-299
	J10	UNUSED						050-099, 151, 275-299
	J11	UNUSED						050-099, 151, 275-299
	J12		W0139	281R	24		31-36-11	ALL
	J13		W0139	262R	24		34-61-25	ALL
	J14	UNUSED						050-099, 151, 275-299
	J15	UNUSED						050-099, 151
	J15		W0139	900R	24		23-22-11	275-299
	K01	UNUSED						050-099, 151, 275-299
	K02		W0139	810	24		23-22-13	050, 150, 152-162, 164, 166, 275-299
	K02	UNUSED						051-099, 151
	K03		W0139	820	24		23-22-13	050-099, 151, 165, 275-299
	K04		W0139	830	24		23-22-13	050-099, 151, 165, 275-299
	K05		W0139	840	24		23-22-13	050-099, 150-152, 154-157, 163-166, 275

HOOKUP LIST

D280T132

91-21-51

Section D00400

Page 135

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00447B		//		PLUG-PART OF D00447 (continued)				050-099
D00447B		SHELF/E02/-05		PLUG (continued)				150, 152-199
D00447B		SHELF/E02/-05		PLUG-PART OF D00447 (continued)				151, 275-299
	K05	UNUSED						276-299
	K06	UNUSED						050-099, 151
	K06		W0139	850	24		23-22-13	150, 152-164, 166-199, 275-299
	K07		W0139	220B	24		31-35-11	ALL
	K08	UNUSED						050-099, 151, 275-299
	K09	UNUSED						050-099, 151, 275-299
	K10	UNUSED						050-099, 151, 275-299
	K11	UNUSED						050-099, 151, 275-299
	K12		W0139	281B	24		31-36-11	ALL
	K13		W0139	262B	24		34-61-25	ALL
	K14	UNUSED						050-099, 151, 275-299
	K15	UNUSED						050-099, 151
	K15		W0139	900B	24		23-22-11	275-299
	12C		W0139	925R	22		23-32-21	150, 152-199
	12D		W0139	925B	22		23-32-21	150, 152-199
	12E		W0139	924R	22		23-32-21	150, 152-199
	12F		W0139	924B	22		23-32-21	150, 152-199
	DED		W0139	282Z			23-22-12	ALL
	DED		W0139	283Z			23-22-12	ALL
	DED		W0139	924Z			23-32-21	150, 152-199
			W0139	271	20		23-22-12	050-099, 150-199, 275-278
			W0139	271Z			23-22-12	050-099, 150-199, 275-278
			W0139	272	20		23-22-12	050-099, 150-199, 275-278
			W0139	272Z			23-22-12	050-099, 150-199, 275-278
			W0139	220	20		31-35-11	ALL
			W0139	220Z			31-35-11	ALL
			W0139	262	20		34-61-25	ALL
			W0139	262Z			34-61-25	ALL
			W0139	281	20		31-36-11	ALL
			W0139	281Z			31-36-11	ALL
			W0139	287	20		23-22-11	ALL
			W0139	287Z			23-22-11	ALL
			W0139	288	20		23-22-11	ALL
			W0139	288Z			23-22-11	ALL
			W0139	289	20		23-22-11	ALL
			W0139	289Z			23-22-11	ALL
			W0139	925Z			23-32-21	150, 152-199
			W0139	926	22		23-32-21	150, 152-199

HOOKUP LIST

D280T132

91-21-51

Section D00400

Page 136

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00447B		//		PLUG-PART OF D00447 (continued)				050-099
D00447B		SHELF/E02/-05		PLUG (continued)				150, 152-199
D00447B		SHELF/E02/-05		PLUG-PART OF D00447 (continued)				151, 275-299
			W0139	260	20		34-61-15	150-199, 275-299
			W0139	260Z			34-61-15	150-199, 275-299
			W0139	900	20		23-22-11	275-299
			W0139	900Z			23-22-11	275-299
D00447C		//		PLUG-PART OF D00447				050-099
D00447C		SHELF/E02/-05		PLUG-PART OF D00447				150-199, 275-299
	1		W0139	269R	22		23-22-11	ALL
	2	UNUSED						050-099, 151, 275-299
	3	UNUSED						050-099, 151, 275-299
	4	UNUSED						050-099, 151, 275-299
	5	UNUSED						050-099, 151, 275-299
	6	UNUSED						050-099, 151, 275-299
	7		W0139	269B	22		23-22-11	ALL
	8		W0139	057	20		23-22-11	ALL
	9	UNUSED						050-099, 151, 275-299
	10		W0139	058	20		23-22-11	050-099, 151, 275-276
	10		W0139	901	20		23-22-11	150, 152-199
	10		W0139	553	20		23-22-11	277-299
	11		W0139	056	20		23-22-11	ALL
	12	UNUSED						050-099, 151, 275-299
	13	UNUSED						050-099, 151, 275-299
	= C12	UNUSED						050-099, 151, 275-299
	= C13	UNUSED						050-099, 151, 275-299
	DED		W0139	058Z			23-22-11	050-099, 151, 275-276
	DED		W0139	901Z			23-22-11	150, 152-199
	DED		W0139	553Z			23-22-11	277-299
D00447D		SHELF/E02/-05		PLUG-ARINC 600(BACC66H21C09AA01)(D00447)				150, 152-166
	J05		W0139	904	22		23-22-12	150, 152-166
D00448		0750/124/L044		PLUG-				ALL
	1	UNUSED						ALL
	2		W0578	002	12		21-25-11	ALL
	3		W0578	003	12		21-25-11	ALL
	4		W0578	004	12		21-25-11	ALL
	5		W0578	005	18		21-25-11	ALL
	6		W0578	006	18		21-25-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00400

Page 137

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00448		0750/124/L044		PLUG- (continued)				ALL
	7		W0578	007	12		21-25-11	ALL
	8	UNUSED						ALL
D00449		SHELF/E02/05		PLUG-				ALL
	1		W0149	248R	22		23-34-11	ALL
	2		W0149	082	20		23-34-11	ALL
	3		W0149	248B	22		23-34-11	ALL
	4		W0149	077	22		23-34-12	050-099
	4		W0149	077	24		23-34-12	150-199, 275-299
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W0149	083	20		23-34-11	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10		W0149	230R	24		23-34-14	ALL
	11		W0149	224R	24		23-34-14	ALL
	12		W0149	227R	24		23-34-14	ALL
	13		W0149	226R	24		23-34-14	ALL
	14		W0149	225R	24		23-34-14	ALL
	15		W0149	228R	24		23-34-14	ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18		W0149	230B	24		23-34-14	ALL
	19		W0149	224B	24		23-34-14	ALL
	20		W0149	227B	24		23-34-14	ALL
	21		W0149	226B	24		23-34-14	ALL
	22		W0149	225B	24		23-34-14	ALL
	23		W0149	228B	24		23-34-14	ALL
	24	UNUSED						ALL
	25		W0149	233R	24		23-34-14	ALL
	26		W0149	233B	24		23-34-14	ALL
	27		W0149	232R	24		23-34-14	ALL
	28		W0149	232B	24		23-34-14	ALL
	29		W0149	231R	24		23-34-14	ALL
	30		W0149	231B	24		23-34-14	ALL
	31		W0149	229R	24		23-34-14	ALL
	32		W0149	229B	24		23-34-14	ALL
	DED		W0149	077Z			23-34-12	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00400

Page 138

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00450		1551/149/R013		PLUG-				ALL
	1		W1358	10A	16		21-26-11	ALL
	2		W1358	101	24		21-26-11	ALL
	3		W1358	10C	20		21-26-11	ALL
	4		W1358	116	16		21-26-11	ALL
	5	UNUSED						ALL
	6		W1358	118	16		21-26-11	ALL
	7		W1358	114	16		21-26-11	ALL
D00451		SHELF/E02/05		PLUG-				ALL
	1		W0149	247R	22		23-34-11	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10		W0149	247B	22		23-34-11	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14		W0149	306R	24		23-31-12	050-099
	14	UNUSED						150-199, 275-299
	15		W0149	306Y	24		23-31-12	050-099
	15	UNUSED						150-199, 275-299
	16		W0149	084	20		23-34-11	ALL
	17	UNUSED						ALL
	18		W0149	306B	24		23-31-12	050-099
	18	UNUSED						150-199, 275-299
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22		W0149	238R	24		23-34-14	ALL
	23		W0149	238B	24		23-34-14	ALL
	24		W0149	233R	24		23-34-14	ALL
	25		W0149	233B	24		23-34-14	ALL
	26		W0149	239R	24		23-34-14	ALL
	27		W0149	239B	24		23-34-14	ALL
	28		W0149	232R	24		23-34-14	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00400

Page 139

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00451		SHELF/E02/05		PLUG- (continued)				ALL
	29		W0149	232B	24		23-34-14	ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41		W0149	234R	24		23-31-12	050-099
	41	UNUSED						150-199, 275-299
	42		W0149	234B	24		23-31-12	050-099
	42	UNUSED						150-199, 275-299
	43	UNUSED						ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47		W0149	231R	24		23-34-14	ALL
	48		W0149	231B	24		23-34-14	ALL
	49		W0149	230R	24		23-34-14	ALL
	50		W0149	230B	24		23-34-14	ALL
	51		W0149	229R	24		23-34-14	ALL
	52		W0149	229B	24		23-34-14	ALL
	53		W0149	224R	24		23-34-14	ALL
	54		W0149	224B	24		23-34-14	ALL
	55	UNUSED						ALL
	56		W0149	528	24		23-31-12	050-099, 150-199
	56		W0149	018	24		23-31-12	275-299
	57	UNUSED						ALL
	58	UNUSED						ALL
	59	UNUSED						ALL
	60		W0149	227R	24		23-34-14	ALL
	61		W0149	227B	24		23-34-14	ALL
	62		W0149	225R	24		23-34-14	ALL
	63		W0149	225B	24		23-34-14	ALL
	64		W0149	226R	24		23-34-14	ALL
	65		W0149	226B	24		23-34-14	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00400

Page 140

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00451		SHELF/E02/05		PLUG- (continued)				ALL
	66		W0149	228R	24		23-34-14	ALL
	67		W0149	228B	24		23-34-14	ALL
	DED		W0149	234Z			23-31-12	050-099
D00454		0752/131/R030		PLUG-				ALL
	1	UNUSED						ALL
	2		W0580	002	12		21-25-21	ALL
	3		W0580	003	12		21-25-21	ALL
	4		W0580	004	12		21-25-21	ALL
	5		W0580	005	18		21-25-21	ALL
	6		W0580	006	18		21-25-21	ALL
	7		W0580	007	12		21-25-21	ALL
	8	UNUSED						ALL
D00455A		//		PLUG-PART OF D00455				ALL
	A01	UNUSED						ALL
	A02	UNUSED						ALL
	A03	UNUSED						ALL
	A04	UNUSED						ALL
	A05	UNUSED						ALL
	A06	UNUSED						ALL
	A07	UNUSED						ALL
	A08	UNUSED						ALL
	A09	UNUSED						ALL
	A10	UNUSED						ALL
	A11	UNUSED						ALL
	A12	UNUSED						ALL
	A13	UNUSED						ALL
	A14	UNUSED						ALL
	A15	UNUSED						ALL
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04	UNUSED						ALL
	B05	UNUSED						ALL
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00400

Page 141

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00455A		//		PLUG-PART OF D00455 (continued)				ALL
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13	UNUSED						ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	C01	UNUSED						ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05	UNUSED						ALL
	C06	UNUSED						ALL
	C07	UNUSED						ALL
	C08	UNUSED						ALL
	C09	UNUSED						ALL
	C10	UNUSED						ALL
	C11	UNUSED						ALL
	C12	UNUSED						ALL
	C13	UNUSED						ALL
	C14	UNUSED						ALL
	C15	UNUSED						ALL
	D01	UNUSED						ALL
	D02	UNUSED						ALL
	D03	UNUSED						ALL
	D04	UNUSED						ALL
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	D08	UNUSED						ALL
	D09	UNUSED						ALL
	D10	UNUSED						ALL
	D11	UNUSED						ALL
	D12	UNUSED						ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15	UNUSED						ALL
D00455B		//		PLUG-PART OF D00455				ALL
	A01		W0149	303R	24		23-51-11	ALL
	A02		W0149	043	24		23-31-11	ALL
	A03	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00400

Page 142

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00455B		//		PLUG-PART OF D00455 (continued)				ALL
	A04		W0149	030	24		23-32-12	050-099, 150-199
	A04		W0149	147	24		23-31-12	275-299
	A05		W0149	234R	24		23-31-12	ALL
	A06	UNUSED						ALL
	A07	UNUSED						ALL
	A08	UNUSED						ALL
	A09		W0149	022	24		23-31-13	ALL
	A10	UNUSED						ALL
	A11		W0149	056	24		23-34-13	050-099
	A11	UNUSED						150-199, 275-299
	A12	UNUSED						ALL
	A13		W0149	208R	22		23-31-14	050-099
	A13	UNUSED						150-199, 275-299
	A14		W0149	237R	24		23-51-11	ALL
	A15		W0149	245R	22		23-31-14	ALL
	B01		W0149	303B	24		23-51-11	ALL
	B02		W0149	044	22		23-31-11	ALL
	B03	UNUSED						ALL
	B04		W0149	030Z			23-32-12	050-099, 150-199
	B04		W0149	147Z			23-31-12	275-299
	B05		W0149	234B	24		23-31-12	ALL
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09		W0149	023	24		23-31-13	ALL
	B10		W0149	126	24		23-31-13	050-099
	B10	UNUSED						150-199, 275-299
	B11		W0149	024	24		23-31-13	050-099
	B11	UNUSED						150-199, 275-299
	B12	UNUSED						ALL
	B13		W0149	208B	22		23-31-14	050-099
	B13	UNUSED						150-199, 275-299
	B14		W0149	237B	24		23-51-11	ALL
	B15		W0149	245B	22		23-31-14	ALL
	C01		W0149	303Y	24		23-51-11	ALL
	C02		W0149	007	24		23-31-11	ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05	UNUSED						ALL
	C06	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00400

Page 143

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00455B		//		PLUG-PART OF D00455 (continued)				ALL
	C07	UNUSED						ALL
	C08	UNUSED						ALL
	C09		W0149	020	24		23-31-13	ALL
	C10		W0149	126	24		23-31-13	050-099
	C10	UNUSED						150-199, 275-299
	C11		W0149	041	22		23-31-11	ALL
	C12	UNUSED						ALL
	C13		W0149	027	24		23-31-13	ALL
	C14	UNUSED						ALL
	C15	UNUSED						ALL
	D01	UNUSED						ALL
	D02	UNUSED						ALL
	D03	UNUSED						ALL
	D04		W0149	008	24		23-31-11	ALL
	D05		W0149	011	24		23-31-12	ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	D08	UNUSED						ALL
	D09		W0149	021	24		23-31-13	ALL
	D10		W0149	025	24		23-31-13	ALL
	D11		W0149	042	22		23-31-11	ALL
	D12	UNUSED						ALL
	D13		W0149	026	24		23-31-13	ALL
	D14	UNUSED						ALL
	D15	UNUSED						ALL
	DED		W0149	234Z			23-31-12	150-199, 275-299
D00455C		//		PLUG-PART OF D00455				ALL
	1	UNUSED						ALL
	2		W0149	004	20		23-31-11	ALL
	3	UNUSED						ALL
	4		W0149	009	20		23-31-11	ALL
	5	UNUSED						ALL
	= C1	UNUSED						ALL
	= C5	UNUSED						ALL
	DED		W0149	004Z			23-31-11	ALL
D00456		1551/153/R035		PLUG-				ALL
	1		W1354	006	16		21-26-11	ALL
	2		W1354	004	24		21-26-11	ALL

HOOKUP LIST
D280T132

91-21-51
Section D00400
Page 144
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00456		1551/153/R035		PLUG- (continued)				ALL
	3		W1354	005	20		21-26-11	ALL
	4		W1354	002	16		21-26-11	ALL
	5	UNUSED						ALL
	6		W1354	001	16		21-26-11	ALL
	7		W1354	003	16		21-26-11	ALL
	DED		W1354	004Z			21-26-11	ALL
	DED		W1354	005Z			21-26-11	ALL
D00459A		//		PLUG-PART OF D00459				ALL
	A01		W0149	406R	24		23-42-11	ALL
	A02		W0149	406B	24		23-42-11	ALL
	A03		W0149	406Y	24		23-42-11	ALL
	A04		W0149	406G	24		23-42-11	ALL
	A05		W0149	404R	24		23-42-11	ALL
	A06		W0149	404B	24		23-42-11	ALL
	A07		W0149	404Y	24		23-42-11	ALL
	A08		W0149	404G	24		23-42-11	ALL
	A09		W0149	402R	24		23-42-11	ALL
	A10		W0149	402B	24		23-42-11	ALL
	A11		W0149	402Y	24		23-42-11	ALL
	A12		W0149	402G	24		23-42-11	ALL
	A13		W0149	072	24		31-51-33	ALL
	A14	UNUSED						050-099, 275-299
	A14		W0149	407R	24		SPARE	150-199
	A15	UNUSED						050-099, 275-299
	A15		W0149	407B	24		SPARE	150-199
	B01		W0149	116	22		23-51-11	ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04	UNUSED						ALL
	B05	UNUSED						ALL
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	B08		W0149	216R	24		23-41-11	ALL
	B09		W0149	216B	24		23-41-11	ALL
	B10		W0149	246R	24		23-41-11	ALL
	B11		W0149	246B	24		23-41-11	ALL
	B12		W0149	093	22		23-42-11	ALL
	B13		W0149	093Z			23-42-11	ALL
	B14	UNUSED						050-099, 275-299

HOOKUP LIST

D280T132

91-21-51

Section D00400

Page 145

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00459A		//		PLUG-PART OF D00459 (continued)				ALL
	B14		W0149	407Y	24		SPARE	150-199
	B15	UNUSED						050-099, 275-299
	B15		W0149	407G	24		SPARE	150-199
	C01	UNUSED						050-099
	C01		W0149	058	24		23-42-12	150-199, 275-299
	C02	UNUSED						050-099
	C02		W0149	059	24		23-42-12	150-199, 275-299
	C03	UNUSED						050-099
	C03		W0149	060	24		23-42-12	150-199, 275-299
	C04		W0149	206B	24		23-41-11	ALL
	C05		W0149	037	24		23-41-11	ALL
	C06		W0149	037	24		23-41-11	ALL
	C07		W0149	206R	24		23-41-11	ALL
	C08		W0149	089	22		23-42-11	ALL
	C09		W0149	090	22		23-42-11	ALL
	C10		W0149	091	22		23-42-11	ALL
	C11		W0149	092	22		23-42-11	ALL
	C12		W0149	108	22		23-42-11	ALL
	C13		W0149	103	22		23-42-11	ALL
	C14		W0149	105	22		23-42-11	ALL
	C15	UNUSED						ALL
	D01		W0149	087	22		23-42-11	ALL
	D02		W0149	088	22		23-42-11	ALL
	D03	UNUSED						ALL
	D04		W0149	405R	24		23-42-11	ALL
	D05		W0149	405B	24		23-42-11	ALL
	D06		W0149	405Y	24		23-42-11	ALL
	D07		W0149	405G	24		23-42-11	ALL
	D08		W0149	403R	24		23-42-11	ALL
	D09		W0149	403B	24		23-42-11	ALL
	D10		W0149	403Y	24		23-42-11	ALL
	D11		W0149	403G	24		23-42-11	ALL
	D12		W0149	401R	24		23-42-11	ALL
	D13		W0149	401B	24		23-42-11	ALL
	D14		W0149	401Y	24		23-42-11	ALL
	D15		W0149	401G	24		23-42-11	ALL
	DED		W0149	087Z			23-42-11	ALL
			W0149	401	20		23-42-11	ALL
			W0149	401Z			23-42-11	ALL
			W0149	402	20		23-42-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00400

Page 146

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00459A		//		PLUG-PART OF D00459 (continued)				ALL
			W0149	402Z			23-42-11	ALL
			W0149	403	20		23-42-11	ALL
			W0149	403Z			23-42-11	ALL
			W0149	404	20		23-42-11	ALL
			W0149	404Z			23-42-11	ALL
			W0149	405	20		23-42-11	ALL
			W0149	405Z			23-42-11	ALL
			W0149	406	20		23-42-11	ALL
			W0149	406Z			23-42-11	ALL
			W0149	407	20		SPARE	150-199
			W0149	407Z			SPARE	150-199
D00459B		//		PLUG-PART OF D00459				ALL
	A01		W0149	113	22		23-51-11	ALL
	A02		W0149	114	22		23-51-11	ALL
	A03	UNUSED						ALL
	A04		W0149	236B	24		23-51-11	ALL
	A05		W0149	243B	24		23-51-21	ALL
	A06		W0149	205B	24		23-51-11	ALL
	A07		W0149	047	24		23-31-11	ALL
	A08	UNUSED						ALL
	A09		W0149	523	24		23-31-11	050-099, 150-199
	A09		W0149	043	24		23-31-11	275-299
	A10	UNUSED						ALL
	A11	UNUSED						ALL
	A12	UNUSED						ALL
	A13	UNUSED						ALL
	A14		W0149	207B	24		23-31-13	ALL
	A15		W0149	207R	24		23-31-13	ALL
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03		W0149	236R	24		23-51-11	ALL
	B04		W0149	243R	24		23-51-21	ALL
	B05	UNUSED						ALL
	B06		W0149	122	24		23-51-41	ALL
	B07		W0149	205R	24		23-51-11	ALL
	B08		W0149	022	24		23-31-13	ALL
	B09		W0149	023	24		23-31-13	ALL
	B10		W0149	027	24		23-31-13	ALL
	B11		W0149	026	24		23-31-13	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00400

Page 147

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00459B		//		PLUG-PART OF D00459 (continued)				ALL
	B12	UNUSED						ALL
	B13	UNUSED						ALL
	B14		W0149	244B	22		23-31-14	ALL
	B15		W0149	244R	22		23-31-14	ALL
	C01		W0149	071	22		23-42-11	ALL
	C02		W0149	115	22		23-51-11	ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05	UNUSED						ALL
	C06	UNUSED						ALL
	C07	UNUSED						ALL
	C08	UNUSED						ALL
	C09	UNUSED						ALL
	C10		W0149	024	24		23-31-13	050-099
	C10	UNUSED						150-199, 275-299
	C11		W0149	025	24		23-31-13	ALL
	C12	UNUSED						ALL
	C13	UNUSED						ALL
	C14	UNUSED						ALL
	C15	UNUSED						ALL
	D01	UNUSED						ALL
	D02	UNUSED						ALL
	D03	UNUSED						ALL
	D04	UNUSED						ALL
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	D08		W0149	134	22		23-31-11	ALL
	D09		W0149	010	22		23-31-11	ALL
	D10		W0149	006	24		23-31-11	ALL
	D11		W0149	515	24		23-31-11	050-099, 150-199
	D11		W0149	177	24		23-31-11	275-299
	D12	UNUSED						050-099, 150-199
	D12		W0149	129	24		23-31-11	275-299
	D13	UNUSED						050-099, 150-199, 275-278
	D13		W0149	100	22		23-42-11	280-299
	D14		W0149	018	24		23-31-12	ALL
	D15	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00400

Page 148

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00459C		//		PLUG-PART OF D00459				ALL
	1	UNUSED						ALL
	2		W0149	102	20		23-42-11	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	= C1	UNUSED						ALL
	= C5	UNUSED						ALL
D00462A		//		PLUG-PART OF D00462				ALL
	A01		W1092	401Y	22		21-31-11	ALL
	A02		W1092	018	24		21-31-11	ALL
	A03	UNUSED						ALL
	A04	UNUSED						ALL
	A05		W1092	201B	24		21-31-11	ALL
	A06	UNUSED						ALL
	A07		W1092	205R	24		21-31-11	ALL
	A08		W1092	205B	24		21-31-11	ALL
	A09	UNUSED						ALL
	A10		W1092	208R	24		21-31-11	ALL
	A11		W1092	208B	24		21-31-11	ALL
	A12	UNUSED						ALL
	A13	UNUSED						ALL
	A14	UNUSED						ALL
	A15		W1092	019	22		21-31-11	ALL
	B01		W1092	401R	22		21-31-11	ALL
	B02		W1092	017	24		21-31-11	ALL
	B03	UNUSED						ALL
	B04	UNUSED						ALL
	B05	UNUSED						ALL
	B06		W1092	201R	24		21-31-11	ALL
	B07	UNUSED						ALL
	B08		W1092	022	24		21-31-11	ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11		W1092	206R	24		21-31-11	ALL
	B12		W1092	037	22		21-31-11	ALL
	B13		W1092	627B	22		21-31-11	ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	C01		W1092	401G	22		21-31-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00400

Page 149

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00462A		//		PLUG-PART OF D00462 (continued)				ALL
	C02	UNUSED						ALL
	C03		W1092	204R	24		21-31-11	ALL
	C04		W1092	204B	24		21-31-11	ALL
	C05		W1092	202B	24		21-31-11	ALL
	C06		W1092	599	24		21-31-11	ALL
	C07	UNUSED						ALL
	C08	UNUSED						ALL
	C09	UNUSED						ALL
	C10	UNUSED						ALL
	C11		W1092	206B	24		21-31-11	ALL
	C12		W1092	552	22		21-31-11	ALL
	C13		W1092	627R	22		21-31-11	ALL
	C14	UNUSED						ALL
	C15	UNUSED						ALL
	D01		W1092	401B	22		21-31-11	ALL
	D02		W1092	015	24		21-31-11	ALL
	D03		W1092	203R	24		21-31-11	ALL
	D04		W1092	203B	24		21-31-11	ALL
	D05		W1092	599	24		21-31-11	ALL
	D06		W1092	202R	24		21-31-11	ALL
	D07	UNUSED						ALL
	D08	UNUSED						ALL
	D09	UNUSED						ALL
	D10		W1092	565	24		21-31-11	ALL
	D11		W1092	565	24		21-31-11	ALL
	D12	UNUSED						ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15		W1092	012	22		21-31-11	ALL
			W1092	011	20		21-31-11	ALL
			W1092	201Z			21-31-11	ALL
			W1092	202Z			21-31-11	ALL
			W1092	206Z			21-31-11	ALL
			W1092	401Z			21-31-11	ALL
			W1092	553	20		21-31-11	ALL
D00463A		//		PLUG-PART OF D00463				ALL
	A01	UNUSED						ALL
	A02	UNUSED						ALL
	A03	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D00400
Page 150
Mar 14/2007

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00463A		//		PLUG-PART OF D00463 (continued)				ALL
	A04	UNUSED						ALL
	A05	UNUSED						ALL
	A06	UNUSED						ALL
	A07	UNUSED						ALL
	A08	UNUSED						ALL
	A09	UNUSED						ALL
	A10	UNUSED						ALL
	A11	UNUSED						ALL
	A12	UNUSED						ALL
	A13	UNUSED						ALL
	A14	UNUSED						ALL
	A15	UNUSED						ALL
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04	UNUSED						ALL
	B05	UNUSED						ALL
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13	UNUSED						ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	C01	UNUSED						ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05	UNUSED						ALL
	C06	UNUSED						ALL
	C07	UNUSED						ALL
	C08	UNUSED						ALL
	C09	UNUSED						ALL
	C10	UNUSED						ALL
	C11	UNUSED						ALL
	C12	UNUSED						ALL
	C13	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00400

Page 151

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00463A		//		PLUG-PART OF D00463 (continued)				ALL
	C14	UNUSED						ALL
	C15	UNUSED						ALL
	D01	UNUSED						ALL
	D02	UNUSED						ALL
	D03	UNUSED						ALL
	D04	UNUSED						ALL
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	D08	UNUSED						ALL
	D09	UNUSED						ALL
	D10	UNUSED						ALL
	D11	UNUSED						ALL
	D12	UNUSED						ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15	UNUSED						ALL
D00463B		//		PLUG-PART OF D00463				ALL
	A01	UNUSED						ALL
	A02	UNUSED						ALL
	A03	UNUSED						ALL
	A04	UNUSED						ALL
	A05	UNUSED						ALL
	A06	UNUSED						ALL
	A07	UNUSED						ALL
	A08	UNUSED						ALL
	A09	UNUSED						ALL
	A10	UNUSED						ALL
	A11	UNUSED						ALL
	A12	UNUSED						ALL
	A13	UNUSED						ALL
	A14	UNUSED						ALL
	A15	UNUSED						ALL
	B01		W0165	208R	24		23-51-13	ALL
	B02		W0165	208B	24		23-51-13	ALL
	B03	UNUSED						ALL
	B04	UNUSED						ALL
	B05	UNUSED						ALL
	B06	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D00400
Page 152
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00463B		//		PLUG-PART OF D00463 (continued)				ALL
	B07		W0165	221R	24		34-57-11	ALL
	B08		W0165	221B	24		34-57-11	ALL
	B09	UNUSED						ALL
	B10		W0165	230R	24		34-22-81	ALL
	B11		W0165	230B	24		34-22-81	ALL
	B12	UNUSED						ALL
	B13		W0165	228R	24		34-22-18	ALL
	B14		W0165	228B	24		34-22-18	ALL
	B15		W0165	026	24		34-57-11	ALL
	C01	UNUSED						ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05		W0165	031	24		34-57-11	ALL
	C06	UNUSED						ALL
	C07		W0165	032	24		34-57-11	ALL
	C08	UNUSED						ALL
	C09		W0165	033	24		34-57-11	ALL
	C10		W0165	225R	22		34-57-11	ALL
	C11		W0165	225B	22		34-57-11	ALL
	C12		W0165	024	22		34-57-11	ALL
	C13		W0165	023	22		34-57-11	ALL
	C14	UNUSED						ALL
	C15	UNUSED						ALL
	D01		W0165	222BN	24		34-57-11	ALL
	D02		W0165	222B	24		34-57-11	ALL
	D03	UNUSED						ALL
	D04	UNUSED						ALL
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07		W0165	223BN	24		34-57-11	ALL
	D08		W0165	223B	24		34-57-11	ALL
	D09	UNUSED						ALL
	D10	UNUSED						ALL
	D11	UNUSED						ALL
	D12	UNUSED						ALL
	D13	UNUSED						ALL
	D14		W0165	224BN	24		34-57-11	ALL
	D15		W0165	224B	24		34-57-11	ALL
	DED		W0165	221Z			34-57-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00400

Page 153

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00463B		//		PLUG-PART OF D00463 (continued)				ALL
	DED		W0165	230Z			34-22-81	ALL
	REF		W0165	222	20		34-57-11	ALL
	REF		W0165	222Z			34-57-11	ALL
	REF		W0165	223	20		34-57-11	ALL
	REF		W0165	223Z			34-57-11	ALL
	REF		W0165	224	20		34-57-11	ALL
	REF		W0165	224Z			34-57-11	ALL
	REF		W0165	228	20		34-22-18	150-199, 275-299
	REF		W0165	228Z			34-22-18	150-199, 275-299
	REF		W0165	228	20		34-22-18	050-099
	REF		W0165	228Z			34-22-18	050-099
D00463C		//		PLUG-PART OF D00463				ALL
	1	UNUSED						ALL
	2		W0165	020	20		34-57-11	ALL
	3		W0165	022	20		34-57-11	ALL
	4		W0165	021	20		34-57-11	ALL
	5	UNUSED						ALL
	= C1	UNUSED						ALL
	= C5	UNUSED						ALL
	DED		W0165	020Z			34-57-11	ALL
D00464		1060/180/L005		PLUG-				ALL
	1	UNUSED						ALL
	2		W1212	016	18		29-11-32	ALL
	3		W1212	015	18		29-11-32	ALL
D00465		P009-00/ /		PLUG-L FLT MNG COMPUTER CONT DSPL UNIT				ALL
	1	UNUSED						ALL
	2		W0517	201R	24		34-61-11	ALL
	3		W0517	201B	24		34-61-11	ALL
	4	UNUSED						ALL
	5		W0517	202R	24		34-61-11	ALL
	6		W0517	202B	24		34-61-11	ALL
	7	UNUSED						ALL
	8		W0517	205R	24		23-22-11	ALL
	9		W0517	205B	24		23-22-11	ALL
	10	UNUSED						ALL
	11	UNUSED						050-099, 151-152, 275-276
	11		W9012	208R	22		23-25-13	150, 153-155, 162-165

HOOKUP LIST
D280T132

91-21-51
Section D00400
Page 154
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00465		P009-00/ /		PLUG-L FLT MNG COMPUTER CONT DSPL UNIT (continued)				ALL
	11		W0517	210R	24		23-25-13	156-157, 166-199, 277-299
	12	UNUSED						050-099, 151-152, 275-276
	12		W9012	208B	22		23-25-13	150, 153-155, 162-165
	12		W0517	210B	24		23-25-13	156-157, 166-199, 277-299
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24		W0517	204R	24		31-35-11	ALL
	25		W0517	204B	24		31-35-11	ALL
	26	UNUSED						ALL
	27		W0517	203R	24		34-61-11	ALL
	28		W0517	203B	24		34-61-11	ALL
	29		W0517	010	24		34-61-11	ALL
	30		W0517	012	20		34-61-11	ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33		W0517	023	22		33-16-18	ALL
	34		W0517	025	20		34-61-11	ALL
	35		W0517	027	22		33-16-18	ALL
	36		W0517	026	20		34-61-11	ALL
	37	DK	W0517	028	18		33-13-18	ALL
	38	DK	W0517	029	18		33-13-18	ALL
	39	UNUSED						ALL
	40		W0517	030	24		34-61-11	ALL
	41		W0517	031	20		34-61-11	ALL
D00466		1060/180/L005		PLUG-				ALL
	1		W1212	019	20		29-11-32	ALL
	2		W1212	018	20		29-11-32	ALL
	3		W1212	017	20		29-11-32	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00400

Page 155

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00467		P009-00/ /		PLUG-R FLT MNG COMPUTER CONT DSPL UNIT				ALL
	1	UNUSED						ALL
	2		W0519	201R	24		34-61-21	ALL
	3		W0519	201B	24		34-61-21	ALL
	4	UNUSED						ALL
	5		W0519	202R	24		34-61-11	ALL
	6		W0519	202B	24		34-61-11	ALL
	7	UNUSED						ALL
	8		W0519	205R	24		23-22-11	ALL
	9		W0519	205B	24		23-22-11	ALL
	10	UNUSED						ALL
	11	UNUSED						050-099, 151-152, 275-276
	11		W9012	201R	22		23-25-13	150, 153-155, 162-165
	11		W0519	210R	24		23-25-13	156-157, 166-199, 277-299
	12	UNUSED						050-099, 151-152, 275-276
	12		W9012	201B	22		23-25-13	150, 153-155, 162-165
	12		W0519	210B	24		23-25-13	156-157, 166-199, 277-299
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24		W0519	204R	24		31-35-11	ALL
	25		W0519	204B	24		31-35-11	ALL
	26	UNUSED						ALL
	27		W0519	203R	24		34-61-21	ALL
	28		W0519	203B	24		34-61-21	ALL
	29		W0519	010	24		34-61-21	ALL
	30	UNUSED						ALL
	31		W0519	012	20		34-61-21	ALL
	32	UNUSED						ALL
	33		W0519	023	22		33-16-18	ALL
	34		W0519	025	20		34-61-21	ALL
	35		W0519	027	22		33-16-18	ALL
	36		W0519	026	20		34-61-21	ALL

HOOKUP LIST
D280T132

91-21-51
Section D00400
Page 156
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00467		P009-00/ /		PLUG-R FLT MNG COMPUTER CONT DSPL UNIT (continued)				ALL
	37	DK	W0519	028	18		33-13-18	ALL
	38	DK	W0519	029	18		33-13-18	ALL
	39	UNUSED						ALL
	40		W0519	030	24		34-61-21	ALL
	41		W0519	031	20		34-61-21	ALL
D00468		P033-00/ /		RELAY SOCKET				ALL
	A1	UNUSED						ALL
	A2		W0142	002	24		34-12-22	ALL
	A3	UNUSED						ALL
	B1		W0142	846	20		30-32-21	ALL
	B2		W0142	847	20		30-32-21	ALL
	B3	UNUSED						ALL
	C1		W0142	848	22		30-32-21	ALL
	C2	UNUSED						ALL
	C3		W0142	08C	20		34-12-22	ALL
	D1		W0142	873	20		30-32-21	ALL
	D2		W0142	850	22		30-32-21	ALL
	D3	UNUSED						ALL
	X1		W0142	843	24		30-32-21	ALL
	X2		W0142	844	20		30-32-21	ALL
	DED		W0142	847Z			30-32-21	ALL
	DED		W0142	850Z			30-32-21	ALL
D00469		P010-00/ /		PLUG-P10				ALL
	1	FM	W0731	072	16		33-13-18	ALL
	2	FM	W0731	073	16		33-13-18	ALL
	3		W0731	039	24		34-22-16	ALL
	4		W0731	040	20		34-22-16	ALL
	5		W0731	042	20		34-22-16	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14		W0731	051	20		34-43-11	ALL
	15	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00400

Page 157

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00469		P010-00/ /		PLUG-P10 (continued)				ALL
	16		W0731	048	20		34-22-18	ALL
	17		W0731	045	24		34-22-18	ALL
	18		W0731	047	24		34-22-18	ALL
	19	UNUSED						ALL
	20		W0731	046	24		34-22-18	ALL
	21		W0731	044	24		34-22-18	ALL
	22	UNUSED						ALL
	23		W0731	021	24		34-22-15	ALL
	24		W0731	002	24		34-22-14	ALL
	25		W0731	303Y	24		34-22-15	ALL
	26		W0731	303B	24		34-22-15	ALL
	27		W0731	303R	24		34-22-15	ALL
	28		W0731	302Y	24		34-22-15	ALL
	29		W0731	302B	24		34-22-15	ALL
	30		W0731	302R	24		34-22-15	ALL
	31		W0731	301Y	24		34-22-14	ALL
	32		W0731	301B	24		34-22-14	ALL
	33		W0731	301R	24		34-22-14	ALL
	34		W0731	041	20		34-22-16	ALL
	35		W0731	213B	24		34-22-14	ALL
	36		W0731	213R	24		34-22-14	ALL
	37	UNUSED						ALL
	38		W0731	043	20		34-22-16	ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	REF		W0731	213	20		34-22-14	ALL
	REF		W0731	213Z			34-22-14	ALL
D00471		P010-00/ /		PLUG-P10				ALL
	1	FM	W0733	072	16		33-13-18	ALL
	2	FM	W0733	073	16		33-13-18	ALL
	3		W0733	039	24		34-22-26	ALL
	4		W0733	040	20		34-22-26	ALL
	5		W0733	042	20		34-22-26	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00400

Page 158

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00471		P010-00/ /		PLUG-P10 (continued)				ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14		W0733	051	20		34-43-11	ALL
	15	UNUSED						ALL
	16		W0733	048	20		34-22-28	ALL
	17		W0733	045	24		34-22-28	ALL
	18		W0733	047	24		34-22-28	ALL
	19	UNUSED						ALL
	20		W0733	046	24		34-22-28	ALL
	21		W0733	044	24		34-22-28	ALL
	22	UNUSED						ALL
	23		W0733	024	24		34-22-25	ALL
	24		W0733	002	24		34-22-24	ALL
	25		W0733	303Y	24		34-22-25	ALL
	26		W0733	303B	24		34-22-25	ALL
	27		W0733	303R	24		34-22-25	ALL
	28		W0733	302Y	24		34-22-25	ALL
	29		W0733	302B	24		34-22-25	ALL
	30		W0733	302R	24		34-22-25	ALL
	31		W0733	301Y	24		34-22-24	ALL
	32		W0733	301B	24		34-22-24	ALL
	33		W0733	301R	24		34-22-24	ALL
	34		W0733	041	20		34-22-26	ALL
	35		W0733	213B	24		34-22-24	ALL
	36		W0733	213R	24		34-22-24	ALL
	37	UNUSED						ALL
	38		W0733	043	20		34-22-26	ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	REF		W0733	213	20		34-22-24	ALL
	REF		W0733	213Z			34-22-24	ALL
D00474		0981/157/R005		PLUG-				ALL
	1	UNUSED						ALL
	2		W1210	002	18		29-11-31	ALL
	3		W1210	003	18		29-11-31	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00400

Page 159

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00475		P055-00/ /		PLUG-P55				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W0011	093	22		33-16-16	ALL
	4	UNUSED						ALL
	5		W0011	762	22		22-11-12	ALL
	6	UNUSED						ALL
	7		W0011	763	22		22-11-12	ALL
	8		W0011	767	24		22-32-15	ALL
	9		W0011	094	22		33-16-16	ALL
	10	UNUSED						ALL
	11		W0011	818	20		22-11-12	ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18		W0011	765	20		22-11-12	ALL
	19		W0011	766	20		22-11-12	ALL
	20		W0011	512R	24		22-12-11	ALL
	21		W0011	512B	24		22-12-11	ALL
	22	UNUSED						ALL
	23		W0011	514B	24		22-14-11	ALL
	24		W0011	514R	24		22-14-11	ALL
	25		W0011	768	24		22-32-15	ALL
	26		W0011	229R	24		22-14-11	ALL
	27		W0011	229B	24		22-14-11	ALL
	28		W0011	513R	24		22-13-11	ALL
	29		W0011	513B	24		22-13-11	ALL
	30		W0011	764	22		22-11-12	ALL
	31	UNUSED						ALL
	DED		W0011	093Z			33-16-16	ALL
			W0011	229	20		22-14-11	ALL
			W0011	229Z			22-14-11	ALL
			W0011	512	20		22-12-11	ALL
			W0011	512Z			22-12-11	ALL
			W0011	513	20		22-13-11	ALL
			W0011	513Z			22-13-11	ALL
			W0011	514	20		22-14-11	ALL
			W0011	514Z			22-14-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00400

Page 160

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00476		1025/157/R005		PLUG-				ALL
	1	UNUSED						ALL
	2		W0964	015	18		29-11-31	ALL
	3		W0964	014	18		29-11-31	ALL
D00477		P055-00/ /		PLUG-P55				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W0031	615	22		33-16-16	ALL
	4	UNUSED						ALL
	5		W0031	762	22		22-11-22	ALL
	6	UNUSED						ALL
	7		W0031	763	22		22-11-22	ALL
	8	UNUSED						ALL
	9		W0031	617	22		33-16-16	ALL
	10	UNUSED						ALL
	11		W0031	818	20		22-11-22	ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18		W0031	765	20		22-11-22	ALL
	19		W0031	766	20		22-11-22	ALL
	20		W0031	512R	24		22-12-21	ALL
	21		W0031	512B	24		22-12-21	ALL
	22	UNUSED						ALL
	23		W0031	514B	24		22-14-21	ALL
	24		W0031	514R	24		22-14-21	ALL
	25	UNUSED						ALL
	26		W0031	230R	24		22-14-21	ALL
	27		W0031	230B	24		22-14-21	ALL
	28		W0031	513R	24		22-13-21	ALL
	29		W0031	513B	24		22-13-21	ALL
	30		W0031	764	22		22-11-22	ALL
	31	UNUSED						ALL
	DED		W0031	615Z			33-16-16	ALL
			W0031	230	20		22-14-21	ALL
			W0031	230Z			22-14-21	ALL
			W0031	512	20		22-12-21	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00400

Page 161

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00477		P055-00/ /		PLUG-P55 (continued)				ALL
			W0031	512Z			22-12-21	ALL
			W0031	513	20		22-13-21	ALL
			W0031	513Z			22-13-21	ALL
			W0031	514	20		22-14-21	ALL
			W0031	514Z			22-14-21	ALL
D00478		1002/152/R006		PLUG-				ALL
	1	UNUSED						ALL
	2		W0680	008	18		29-11-32	ALL
	3		W0680	009	18		29-11-32	ALL
D00479		P055-00/ /		PLUG-P55				ALL
	1	DK	W0011	787	18		33-13-17	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	DK	W0011	786	18		33-13-17	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W0011	769	22		22-11-32	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18		W0011	772	20		22-11-32	ALL
	19		W0011	771	20		22-11-32	ALL
	20		W0011	515R	24		22-12-31	ALL
	21		W0011	515B	24		22-12-31	ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D00400
Page 162
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00479		P055-00/ /		PLUG-P55 (continued)				ALL
	29	UNUSED						ALL
	30		W0011	770	22		22-11-32	ALL
	31	UNUSED						ALL
	DED		W0011	769Z			22-11-32	ALL
	DED		W0011	770Z			22-11-32	ALL
			W0011	515	20		22-12-31	ALL
			W0011	515Z			22-12-31	ALL
D00480		NL255/155/		PLUG-				ALL
	A		W0290	001	08		29-11-12	ALL
	B		W0290	002	08		29-11-12	ALL
	C		W0290	003	08		29-11-12	ALL
	D		W0290	007	08		29-11-12	ALL
D00481		SHELF/E02/05		PLUG-COAX				ALL
	= A1		W0149	01CX			23-34-14	ALL
	= C1		W0149	01CO			23-34-14	ALL
D00482		0999/145/R005		PLUG-				ALL
	A		W0202	004	08		29-11-31	ALL
	B		W0202	005	08		29-11-31	ALL
	C		W0202	006	08		29-11-31	ALL
	D		W0202	021	08		29-11-31	ALL
D00483		0140/160/R020		PLUG-				ALL
	A		W0779	018	24		34-43-12	ALL
	B		W0779	024	20		34-43-22	ALL
	C		W0779	015	24		34-43-12	ALL
	D		W0779	023	24		34-43-22	ALL
	E		W0779	016	24		34-43-12	ALL
	F		W0779	019	20		34-43-12	ALL
D00484		1043/145/R005		PLUG-				ALL
	A		W0206	004	08		29-11-31	ALL
	B		W0206	005	08		29-11-31	ALL
	C		W0206	006	08		29-11-31	ALL
	D		W0206	034	08		29-11-31	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00400

Page 163

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00486		NR270/155/		PLUG-				ALL
	A		W0288	001	08		29-11-22	ALL
	B		W0288	002	08		29-11-22	ALL
	C		W0288	003	08		29-11-22	ALL
	D		W0288	014	10		29-11-22	ALL
D00488		1125/141/L083		PLUG-				ALL
	1		W0596	083	18		29-11-32	ALL
	2		W0596	215Z			29-11-32	ALL
	3		W0596	082	18		29-11-32	ALL
	4		W0596	084	18		29-11-32	ALL
	5		W0596	182	18		29-11-32	ALL
	6		W0596	180	18		29-11-32	ALL
	7		W0596	181	18		29-11-32	ALL
	8	UNUSED						ALL
	9		W0596	215R	20		29-11-32	ALL
	10		W0596	215B	20		29-11-32	ALL
	11	UNUSED						ALL
	12		W0596	178	18		29-11-32	ALL
	13		W0596	179	18		29-11-32	ALL
	14	UNUSED						ALL
D00489		126/198/L007		PLUG-WX RADAR ANT.				ALL
	A		W0805	302R	20		34-43-22	ALL
	B		W0805	302B	20		34-43-22	ALL
	C		W0805	302Y	20		34-43-22	ALL
	D		W0805	301R	20		34-43-22	ALL
	E		W0805	301B	20		34-43-22	ALL
	F		W0805	301Y	20		34-43-22	ALL
	G		W0805	303R	20		34-43-22	ALL
	H		W0805	303B	20		34-43-22	ALL
	J		W0805	303Y	20		34-43-22	ALL
	K	UNUSED						ALL
	L	UNUSED						ALL
	M	UNUSED						ALL
	N	UNUSED						ALL
	P	UNUSED						ALL
	R	UNUSED						ALL
	S	UNUSED						ALL
	T	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00400

Page 164

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00489		126/198/L007		PLUG-WX RADAR ANT. (continued)				ALL
	U	UNUSED						ALL
	V	UNUSED						ALL
	W		W0805	302Z			34-43-22	ALL
	X		W0805	204R	20		34-43-22	ALL
	Y		W0805	204B	20		34-43-22	ALL
	Z	UNUSED						ALL
	AA	UNUSED						ALL
	BB		W0805	202Z			34-43-22	ALL
	CC	UNUSED						ALL
	DD		W0805	201Z			34-43-22	ALL
	EE		W0805	203Z			34-43-22	ALL
	FF	UNUSED						ALL
	GG	UNUSED						ALL
	HH		W0805	007	20		34-43-22	ALL
	REF		W0805	YAA			34-43-22	ALL
	A-		W0805	301Z			34-43-22	ALL
	B-	UNUSED						ALL
	C-	UNUSED						ALL
	D-		W0805	303Z			34-43-22	ALL
	E-		W0805	205R	20		34-43-22	ALL
	F-		W0805	205B	20		34-43-22	ALL
	G-	UNUSED						ALL
	H-	UNUSED						ALL
	I-		W0805	004	20		34-43-22	ALL
	J-	UNUSED						ALL
	K-	UNUSED						ALL
	M-	UNUSED						ALL
	N-		W0805	006	20		34-43-22	ALL
	P-		W0805	202R	20		34-43-22	ALL
	Q-		W0805	202B	20		34-43-22	ALL
	R-		W0805	204Z			34-43-22	ALL
	S-		W0805	201R	20		34-43-22	ALL
	T-		W0805	201B	20		34-43-22	ALL
	U-		W0805	203R	20		34-43-22	ALL
	V-		W0805	203B	20		34-43-22	ALL
	W-		W0805	205Z			34-43-22	ALL
	X-	UNUSED						ALL
	Y-	UNUSED						ALL
	Z-		W0805	005	20		34-43-22	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00400

Page 165

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00490		P005-00/ /		PLUG-P5				ALL
	1		W0066	301B	24		21-61-11	ALL
	2		W0066	301R	24		21-61-11	ALL
	3		W0066	301Y	24		21-61-11	ALL
	4		W0066	044	24		21-61-11	ALL
	5		W0066	201R	24		21-61-11	ALL
	6		W0066	046	24		21-61-11	ALL
	7		W0066	201B	24		21-61-11	ALL
	8		W0066	048	24		21-61-11	ALL
	9		W0066	049	24		21-61-11	ALL
	10		W0066	050	24		21-61-11	ALL
	11	UNUSED						ALL
	12		W0066	042	20		21-61-11	ALL
D00491		126/198/0000		PLUG-WX RADAR ANT				ALL
	A		W0781	302R	20		34-43-12	ALL
	B		W0781	302B	20		34-43-12	ALL
	C		W0781	302Y	20		34-43-12	ALL
	D		W0781	301R	20		34-43-12	ALL
	E		W0781	301B	20		34-43-12	ALL
	F		W0781	301Y	20		34-43-12	ALL
	G		W0781	303R	20		34-43-12	ALL
	H		W0781	303B	20		34-43-12	ALL
	J		W0781	303Y	20		34-43-12	ALL
	K	UNUSED						ALL
	L	UNUSED						ALL
	M	UNUSED						ALL
	N	UNUSED						ALL
	P	UNUSED						ALL
	R	UNUSED						ALL
	S	UNUSED						ALL
	T	UNUSED						ALL
	U	UNUSED						ALL
	V	UNUSED						ALL
	W		W0781	302Z			34-43-12	ALL
	X		W0781	204R	20		34-43-12	ALL
	Y		W0781	204B	20		34-43-12	ALL
	Z	UNUSED						ALL
	AA	UNUSED						ALL
	BB		W0781	202Z			34-43-12	ALL
	CC	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00400

Page 166

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00491		126/198/0000		PLUG-WX RADAR ANT (continued)				ALL
	DD		W0781	201Z			34-43-12	ALL
	EE		W0781	203Z			34-43-12	ALL
	FF	UNUSED						ALL
	GG	UNUSED						ALL
	HH		W0781	007	20		34-43-12	ALL
	REF		W0781	YAA			34-43-12	ALL
	A-		W0781	301Z			34-43-12	ALL
	B-	UNUSED						ALL
	C-	UNUSED						ALL
	D-		W0781	303Z			34-43-12	ALL
	E-		W0781	205R	20		34-43-12	ALL
	F-		W0781	205B	20		34-43-12	ALL
	G-	UNUSED						ALL
	H-	UNUSED						ALL
	I-		W0781	004	20		34-43-12	ALL
	J-	UNUSED						ALL
	K-	UNUSED						ALL
	M-	UNUSED						ALL
	N-		W0781	006	20		34-43-12	ALL
	P-		W0781	202R	20		34-43-12	ALL
	Q-		W0781	202B	20		34-43-12	ALL
	R-		W0781	204Z			34-43-12	ALL
	S-		W0781	201R	20		34-43-12	ALL
	T-		W0781	201B	20		34-43-12	ALL
	U-		W0781	203R	20		34-43-12	ALL
	V-		W0781	203B	20		34-43-12	ALL
	W-		W0781	205Z			34-43-12	ALL
	X-	UNUSED						ALL
	Y-	UNUSED						ALL
	Z-		W0781	005	20		34-43-12	ALL
D00492		P005-00/ /		PLUG-P5				ALL
	1		W0066	302B	24		21-61-21	ALL
	2		W0066	302R	24		21-61-21	ALL
	3		W0066	302Y	24		21-61-21	ALL
	4		W0066	338B	24		21-61-61	ALL
	5		W0066	338R	24		21-61-61	ALL
	6		W0066	338Y	24		21-61-61	ALL
	7		W0066	052	20		21-61-21	ALL
	8	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00400

Page 167

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00492		P005-00/ /		PLUG-P5 (continued)				ALL
	9		W0066	060	24		21-61-21	ALL
	10		W0066	059	20		21-61-21	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D00493		P061-00/ /		PLUG-				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W0065	023	22		33-16-26	ALL
	4		W0065	024	22		33-16-26	ALL
	5		W0065	012	22		31-31-11	ALL
	6		W0065	006	24		31-31-11	ALL
	7		W0065	013	20		31-31-11	ALL
	8		W0065	011	22		31-31-11	ALL
	9		W0065	005	24		31-31-11	ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12		W0065	002	22		31-31-11	ALL
	13		W0065	001	22		31-31-11	ALL
	14		W0065	015	20		31-31-11	ALL
	15		W0065	018	24		31-31-11	ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	DED		W0065	023Z			33-16-26	ALL
	DED		W0065	024Z			33-16-26	ALL
D00494		NL230/155/		PLUG-				ALL
	A		W0390	201B	20		29-11-11	ALL
	B		W0390	201R	20		29-11-11	ALL
	C	UNUSED						ALL
	D	UNUSED						ALL
	E		W0390	018	18		29-11-11	ALL
	DED		W0390	201Z			29-11-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00400

Page 168

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00495		P008-00/ /		PLUG-				ALL
	A		W0803	020	20		34-43-22	ALL
	B	UNUSED						ALL
	C	UNUSED						ALL
	D	UNUSED						ALL
	E		W0803	017	24		34-43-22	ALL
	F	UNUSED						ALL
	G		W0803	025	20		34-43-22	ALL
	H	UNUSED						ALL
	J	UNUSED						ALL
	K		W0803	009	24		34-43-22	ALL
	L		W0803	010	24		34-43-22	ALL
	M		W0803	011	24		34-43-22	ALL
	N	UNUSED						ALL
	P	UNUSED						ALL
	R	UNUSED						ALL
	S	UNUSED						ALL
	T	UNUSED						ALL
	U		W0803	013	24		34-43-22	ALL
	V		W0803	012	24		34-43-22	ALL
	W	UNUSED						ALL
	X	UNUSED						ALL
	Y	UNUSED						ALL
	Z	UNUSED						ALL
			W0803	026	20		34-43-22	ALL
			W0803	214Z			34-43-22	ALL
	A-	UNUSED						ALL
	B-	UNUSED						ALL
	C-	UNUSED						ALL
	D-	UNUSED						ALL
	E-	UNUSED						ALL
	F-		W0803	014	24		34-43-22	ALL
	G-	UNUSED						ALL
	H-		W0803	214R	24		34-43-22	ALL
	J-		W0803	214B	24		34-43-22	ALL
D00496		NR240/155/		PLUG-				ALL
	A		W0394	201B	20		29-11-21	ALL
	B		W0394	201R	20		29-11-21	ALL
	C	UNUSED						ALL
	D	UNUSED						ALL

HOOKUP LIST
D280T132



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00496		NR240/155/		PLUG- (continued)				ALL
	E		W0394	018	18		29-11-21	ALL
	DED		W0394	201Z			29-11-21	ALL
D00497		0310/195/R045		PLUG-				ALL
	1		W1379	305R	24		23-34-15	050-099, 162-199
	1		W1379	301R	24		23-34-15	150-157, 275-299
	2		W1379	305B	24		23-34-15	050-099, 162-199
	2		W1379	301B	24		23-34-15	150-157, 275-299
	3		W1379	305Y	24		23-34-15	050-099, 162-199
	3		W1379	301Y	24		23-34-15	150-157, 275-299
	4	UNUSED						ALL
	5	UNUSED						ALL
D00498		NL255/150/		PLUG-				ALL
	1		W0390	004	18		29-32-11	ALL
	2		W0390	006	18		29-32-11	ALL
	3		W0390	027	18		29-32-11	ALL
D00499		0310/195/R045		PLUG-				ALL
	1		W0873	303R	24		23-34-15	050-099, 162-199
	1		W0873	301R	24		23-34-15	150-157, 275-299
	2		W0873	303B	24		23-34-15	050-099, 162-199
	2		W0873	301B	24		23-34-15	150-157, 275-299
	3		W0873	303Y	24		23-34-15	050-099, 162-199
	3		W0873	301Y	24		23-34-15	150-157, 275-299
	4		W0873	203R	20		23-34-15	050-099, 162-199
	4		W0873	201R	20		23-34-15	150-157, 275-299
	5		W0873	203B	20		23-34-15	050-099, 162-199
	5		W0873	201B	20		23-34-15	150-157, 275-299

HOOKUP LIST
D280T132

91-21-51
Section D00400
Page 170 End
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00500		NR250/145/		PLUG-				ALL
	1		W0394	004	18		29-32-11	ALL
	2		W0394	006	18		29-32-11	ALL
	3		W0394	027	18		29-32-11	ALL
D00501		0310/195/R045		PLUG-				ALL
	1		W1381	301R	24		23-34-17	ALL
	2		W1381	301B	24		23-34-17	ALL
	3		W1381	301Y	24		23-34-17	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
D00502		1738/290/R035		PLUG-				ALL
	1		W0242	020	20		49-15-11	ALL
	2		W0242	038	20		49-15-11	ALL
	3		W0242	022	16		49-15-11	ALL
	4		W0242	023	20		49-15-11	ALL
	5		W0242	018	16		49-15-11	ALL
	6		W0242	024	16		49-15-11	ALL
	7		W0242	019	16		49-15-11	ALL
	8		W0242	025	20		49-15-11	ALL
	9		W0242	057	20		49-15-11	ALL
	10		W0242	021	20		49-15-11	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
D00503		0310/195/R045		PLUG-				ALL
	1		W0875	301R	24		23-34-17	ALL
	2		W0875	301B	24		23-34-17	ALL
	3		W0875	301Y	24		23-34-17	ALL
	4		W0875	201R	20		23-34-17	ALL
	5		W0875	201B	20		23-34-17	ALL
D00504		1514/170/R067		PLUG-				ALL
	1		W1356	019	24		21-44-21	ALL
	2		W1356	19B	20		21-44-21	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00500

Page 1

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00505		0310/195/R045		PLUG-				ALL
	1		W1383	301R	24		23-34-16	ALL
	2		W1383	301B	24		23-34-16	ALL
	3		W1383	301Y	24		23-34-16	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
D00506		1845/242/R005		PLUG-				ALL
	=S		W0250	455R	16		26-15-11	ALL
D00507		0310/195/R045		PLUG-				ALL
	1		W0877	301R	24		23-34-16	ALL
	2		W0877	301B	24		23-34-16	ALL
	3		W0877	301Y	24		23-34-16	ALL
	4		W0877	201R	20		23-34-16	ALL
	5		W0877	201B	20		23-34-16	ALL
D00508		1844/202/L006		PLUG-				ALL
	=S		W0250	452R	16		26-15-11	ALL
D00509		0310/195/R045		PLUG-				ALL
	1	FM	W0645	034	16		23-34-11	ALL
	2		W0645	032	20		23-34-11	ALL
	3		W0645	033	20		23-34-11	ALL
	4		W0645	036	24		23-34-12	ALL
	5		W0645	037	24		23-34-12	ALL
	6		W0645	035	24		23-34-12	ALL
	7		W0645	120	24		23-34-12	ALL
	8		W0645	038	24		23-34-13	ALL
	9		W0645	026	24		23-34-13	ALL
	10		W0645	040	22		23-34-11	ALL
	11		W0645	039	24		23-34-13	ALL
	12		W0645	027	24		23-34-13	ALL
	13		W0645	121	24		23-34-12	ALL
	14	UNUSED						ALL
	15		W0645	122	24		23-34-12	ALL
D00510		1844/202/L006		PLUG-				ALL
	=P		W0260	452R	16		26-15-11	ALL

HOOKUP LIST
D280T132

91-21-51
Section D00500
Page 2
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00511		0320/195/R045		PLUG-				ALL
	1		W1379	303R	24		23-34-15	ALL
	2		W1379	303B	24		23-34-15	ALL
	3		W1379	303Y	24		23-34-15	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
D00512		1845/242/R005		PLUG-				ALL
	= P		W0260	455R	16		26-15-11	ALL
D00513		0320/195/R045		PLUG-				ALL
	1		W0879	301R	24		23-34-15	ALL
	2		W0879	301B	24		23-34-15	ALL
	3		W0879	301Y	24		23-34-15	ALL
	4		W0879	201R	20		23-34-15	ALL
	5		W0879	201B	20		23-34-15	ALL
D00514		1910/238/L018		PLUG				ALL
	= P		W0250	453R	16		26-15-11	ALL
D00515		0320/195/R045		PLUG-				ALL
	1		W1381	303R	24		23-34-17	ALL
	2		W1381	303B	24		23-34-17	ALL
	3		W1381	303Y	24		23-34-17	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
D00516		1898/214/L006		PLUG				ALL
	= P		W0250	453R	16		26-15-11	ALL
D00517		0320/195/R045		PLUG-				ALL
	1		W0881	301R	24		23-34-17	ALL
	2		W0881	301B	24		23-34-17	ALL
	3		W0881	301Y	24		23-34-17	ALL
	4		W0881	201R	20		23-34-17	050-099, 150-199
	4	FL	W0881	201R	16		23-34-17	275-299
	5		W0881	201B	20		23-34-17	050-099, 150-199
	5	FL	W0881	201B	16		23-34-17	275-299

HOOKUP LIST

D280T132

91-21-51

Section D00500

Page 3

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00518		1910/238/L031		PLUG				ALL
	= S		W0260	453R	16		26-15-11	ALL
D00519		0320/195/R045		PLUG-				ALL
	1		W1383	303R	24		23-34-16	ALL
	2		W1383	303B	24		23-34-16	ALL
	3		W1383	303Y	24		23-34-16	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
D00520		1898/202/L006		PLUG				ALL
	= S		W0260	453R	16		26-15-11	ALL
D00521		0320/195/R045		PLUG-				ALL
	1		W0883	301R	24		23-34-16	ALL
	2		W0883	301B	24		23-34-16	ALL
	3		W0883	301Y	24		23-34-16	ALL
	4		W0883	201R	20		23-34-16	ALL
	5		W0883	201B	20		23-34-16	ALL
D00523		0320/195/R045		PLUG-				ALL
	1	FM	W0645	095	16		23-34-11	ALL
	2		W0645	043	20		23-34-11	ALL
	3		W0645	041	20		23-34-11	ALL
	4		W0645	048	24		23-34-12	ALL
	5		W0645	049	24		23-34-12	ALL
	6		W0645	047	24		23-34-12	ALL
	7		W0645	118	24		23-34-12	ALL
	8		W0645	045	24		23-34-13	ALL
	9		W0645	050	24		23-34-13	ALL
	10		W0645	044	22		23-34-11	ALL
	11		W0645	046	24		23-34-13	ALL
	12		W0645	051	24		23-34-13	ALL
	13		W0645	119	24		23-34-12	ALL
	14	UNUSED						ALL
	15		W0645	123	24		23-34-12	ALL
D00524		1514/170/R067		PLUG-				ALL
	1		W1356	020	24		21-44-21	ALL
	2		W1356	20B	20		21-44-21	ALL

HOOKUP LIST
D280T132

91-21-51
Section D00500
Page 4
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00524		1514/170/R067		PLUG- (continued)				ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
D00525		0305/195/R035		PLUG-COAXIAL				ALL
	= A1		W0873	01CX			23-34-15	ALL
	= C1		W0873	01CO			23-34-15	ALL
D00527		0305/195/R035		PLUG-COAXIAL				ALL
	= A1		W0875	01CX			23-34-17	ALL
	= C1		W0875	01CO			23-34-17	ALL
D00529		0305/195/R035		PLUG-COAXIAL				ALL
	= A1		W0877	01CX			23-34-16	ALL
	= C1		W0877	01CO			23-34-16	ALL
D00531		0305/195/R035		PLUG-COAXIAL				ALL
	= A1		W0857	01CX			23-34-14	ALL
	= C1		W0857	01CO			23-34-14	ALL
D00533		0305/195/R035		PLUG-				ALL
	1		W0645	201R	24		23-31-13	ALL
	2		W0645	201B	24		23-31-13	ALL
	3		W0645	061	24		23-34-14	ALL
	4		W0645	052	20		23-34-11	ALL
	5		W0645	190	24		23-34-14	050-099, 150-199
	5		W0645	066R	24		23-32-12	275-299
	6		W0645	190Z			23-34-14	050-099, 150-199
	6		W0645	066B	24		23-32-12	275-299
	7		W0645	189	24		23-34-14	050-099, 150-199
	7		W0645	065R	24		23-32-12	275-299
	8		W0645	189Z			23-34-14	050-099, 150-199
	8		W0645	065B	24		23-32-12	275-299
	9	UNUSED						ALL
	10		W0645	053	20		23-34-11	ALL
	11		W0645	096	22		23-34-11	ALL
	12	UNUSED						ALL
	13		W0645	061Z			23-34-14	ALL
	14		W0645	054	24		23-34-14	ALL
	15		W0645	054Z			23-34-14	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00500

Page 5

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00533		0305/195/R035		PLUG- (continued)				ALL
	DED		W0645	065Z			23-32-12	275-299
	DED		W0645	066Z			23-32-12	275-299
D00535		0305/195/R035		PLUG-COAXIAL				ALL
	= A1		W1377	01CX			23-34-14	ALL
	= C1		W1377	01CO			23-34-14	ALL
D00539		0310/195/R035		PLUG-COAXIAL				ALL
	= A1		W0879	01CX			23-34-15	ALL
	= C1		W0879	01CO			23-34-15	ALL
D00541		0310/195/R035		PLUG-COAXIAL				ALL
	= A1		W0881	01CX			23-34-17	ALL
	= C1		W0881	01CO			23-34-17	ALL
D00542		P033-00/ /		RELAY SOCKET-				ALL
	A1		W0144	122	22		30-31-13	ALL
	A2		W0144	715	22		30-31-13	ALL
	A3		W0144	116	22		30-31-13	ALL
	B1	UNUSED						ALL
	B2		W0144	119	24		30-31-13	ALL
	B3		W0144	123	24		30-31-13	ALL
	C1		W0144	128	22		30-31-23	ALL
	C2		W0144	129	22		30-31-23	ALL
	C3	UNUSED						ALL
	D1		W0144	118	22		30-31-13	ALL
	D1		W0144	712	22		30-31-13	ALL
	D2		W0144	715	22		30-31-13	ALL
	D3		W0144	712	22		30-31-13	ALL
	X1		W0144	083	24		32-09-13	ALL
	X2		W0144	084	24		32-09-13	ALL
	DED		W0144	119Z			30-31-13	ALL
	DED		W0144	123Z			30-31-13	ALL
	DED		W0144	128Z			30-31-23	ALL
	DED		W0144	129Z			30-31-23	ALL
D00543		0310/195/R035		PLUG-COAXIAL				ALL
	= A1		W0883	01CX			23-34-16	ALL
	= C1		W0883	01CO			23-34-16	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00500

Page 6

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00544		0370/155/R070		PLUG-				ALL
	1		W0506	151	12		21-58-15	ALL
	2		W0506	150	12		21-58-15	ALL
	3		W0506	149	12		21-58-15	ALL
	4	UNUSED						ALL
	5		W0506	142	18		21-58-15	ALL
	6		W0506	153	18		21-58-15	ALL
	7		W0506	152	16		21-58-15	ALL
	8	UNUSED						ALL
D00545		0310/195/R035		PLUG-				ALL
	1		W0645	202R	24		23-31-13	ALL
	2		W0645	202B	24		23-31-13	ALL
	3		W0645	188	24		23-34-14	050-099, 150-199
	3		W0645	131	24		23-34-14	275-299
	4		W0645	056	20		23-34-11	ALL
	5		W0645	185	24		23-34-14	050-099, 150-199
	5		W0645	068R	24		23-32-12	275-299
	6		W0645	185Z			23-34-14	050-099, 150-199
	6		W0645	068B	24		23-32-12	275-299
	7		W0645	184	24		23-34-14	050-099, 150-199
	7		W0645	067R	24		23-32-12	275-299
	8		W0645	184Z			23-34-14	050-099, 150-199
	8		W0645	067B	24		23-32-12	275-299
	9	UNUSED						ALL
	10		W0645	057	20		23-34-11	ALL
	11		W0645	097	22		23-34-11	ALL
	12	UNUSED						ALL
	13		W0645	188Z			23-34-14	050-099, 150-199
	13		W0645	131Z			23-34-14	275-299
	14		W0645	187	24		23-34-14	050-099, 150-199
	14		W0645	130	24		23-34-14	275-299
	15		W0645	187Z			23-34-14	050-099, 150-199
	15		W0645	130Z			23-34-14	275-299
	DED		W0645	067Z			23-32-12	275-299
	DED		W0645	068Z			23-32-12	275-299
D00546		P033-00/ /		RELAY SOCKET-				ALL
	A1	UNUSED						ALL
	A2		W0142	02S	22		30-32-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00500

Page 7

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00546		P033-00/ /		RELAY SOCKET- (continued)				ALL
	A3		W0142	02R	22		30-32-11	ALL
	B1	UNUSED						ALL
	B2		W0142	860	22		30-33-11	ALL
	B3		W0142	861	22		30-33-11	ALL
	C1		W0142	80C	20		30-81-11	050-099, 150-199
	C1	UNUSED						275-299
	C2		W0142	80B	20		30-81-11	050-099, 150-199
	C2	UNUSED						275-299
	C3	UNUSED						ALL
	D1	UNUSED						ALL
	D2	UNUSED						ALL
	D3	UNUSED						ALL
	X1		W0142	080	24		32-09-13	ALL
	X2		W0142	079	24		32-09-13	ALL
	DED		W0142	02RZ			30-32-11	ALL
	DED		W0142	02SZ			30-32-11	ALL
	DED		W0142	860Z			30-33-11	ALL
	DED		W0142	861Z			30-33-11	ALL
D00547		0310/195/R035		PLUG-COAXIAL				ALL
	= A1		W1377	01CX			23-34-14	ALL
	= C1		W1377	01CO			23-34-14	ALL
D00548		P005-00/ /		PLUG-P5				ALL
	1		W0062	309Y	24		33-13-16	ALL
	2	DK	W0062	651	18		33-13-16	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W0062	309B	24		33-13-16	ALL
	6		W0062	309R	24		33-13-16	ALL
	7		W0062	11G	20		33-13-16	ALL
	8	FM	W0062	11H	16		33-13-16	ALL
	9	DK	W0062	001	18		33-13-16	ALL
	10	UNUSED						ALL
	11	FM	W0062	11L	16		33-13-16	ALL
	12		W0062	11M	22		33-13-16	ALL
D00549		0217/225/R050		PLUG				ALL
	1		W0659	0WRB	20		23-51-41	ALL
	2		W0659	0BLU	24		23-51-41	ALL

HOOKUP LIST
D280T132

91-21-51
Section D00500
Page 8
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00549		0217/225/R050		PLUG (continued)				ALL
	3		W0659	0YEL	24		23-51-41	ALL
	4		W0659	0GRN	24		23-51-41	ALL
	5		W0659	0BLK	24		23-51-41	ALL
	6		W0659	0PUR	24		23-51-41	ALL
	7		W0659	0ORG	24		23-51-41	ALL
	8		W0659	0BRN	24		23-51-41	ALL
	9		W0659	0PNK	24		23-51-41	ALL
	10		W0659	0WHT	24		23-51-41	ALL
	11		W0659	0WRD	24		23-51-41	ALL
	12		W0659	0WBU	24		23-51-41	ALL
	13		W0659	0WYL	24		23-51-41	ALL
	14		W0659	0WGR	24		23-51-41	ALL
	15		W0659	0WBK	24		23-51-41	ALL
	16		W0659	0WPR	24		23-51-41	ALL
	17		W0659	0WOR	24		23-51-41	ALL
	18		W0659	0WBN	24		23-51-41	ALL
	19		W0659	0WBY	24		23-51-41	ALL
	20		W0659	0UNI	20		23-51-41	ALL
	21		W0659	0RYL	24		23-51-41	ALL
	22		W0659	0RGR	24		23-51-41	ALL
	23		W0659	0RBK	24		23-51-41	ALL
	24		W0659	0RPR	24		23-51-41	ALL
	25		W0659	0ROR	24		23-51-41	ALL
	26		W0659	0RBR	24		23-51-41	ALL
	27		W0659	0RYG	24		23-51-41	ALL
	28		W0659	0BLY	24		23-51-41	ALL
	29		W0659	0BLG	24		23-51-41	ALL
	30		W0659	0BBK	24		23-51-41	ALL
	31		W0659	0BPR	24		23-51-41	ALL
	32		W0659	0BOR	24		23-51-41	ALL
	33		W0659	0BBN	24		23-51-41	ALL
	34		W0659	0BGK	24		23-51-41	ALL
	35		W0659	0YGR	24		23-51-41	ALL
	36		W0659	0YBK	24		23-51-41	ALL
	37		W0659	0YPR	24		23-51-41	ALL
	38		W0659	0YOR	24		23-51-41	ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00500

Page 9

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00550		P005-00/ /		PLUG-P5				ALL
	1		W0062	310Y	24		33-13-16	ALL
	2	FM	W0062	12B	16		33-13-16	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W0062	310B	24		33-13-16	ALL
	6		W0062	310R	24		33-13-16	ALL
	7		W0062	12G	20		33-13-16	ALL
	8	DK	W0062	01A	18		33-13-16	ALL
	9	FM	W0062	12J	16		33-13-16	ALL
	10	UNUSED						ALL
	11	FM	W0062	12L	16		33-13-16	ALL
	12		W0062	12T	22		33-13-16	ALL
	DED		W0062	12TZ			33-13-16	ALL
D00551		P061-00/ /		PLUG-P61				ALL
	1	DK	W0062	80A	18		33-13-21	ALL
	2	DK	W0062	80B	18		33-13-21	ALL
	3		W0062	80C	22		23-51-41	ALL
	4		W0062	80D	20		23-51-41	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8		W0062	80JZ			23-51-41	ALL
	9		W0062	80J	24		23-51-41	ALL
	10		W0062	227R	24		23-51-41	ALL
	11		W0062	227Z			23-51-41	050-099
	11		W0062	FRZ			23-51-41	150-199, 275-299
	12		W0062	227B	24		23-51-41	ALL
	13		W0062	226B	24		23-51-41	ALL
	14		W0062	226R	24		23-51-41	ALL
	15		W0062	80SZ			23-51-41	ALL
	16		W0062	80S	24		23-51-41	ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23		W0062	80Z	24		23-51-41	ALL
	24		W0062	80Z	24		23-51-41	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00500

Page 10

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00551		P061-00/ /		PLUG-P61 (continued)				ALL
	25		W0062	81GZ			23-51-41	ALL
	26		W0062	81G	24		23-51-41	ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29		W0062	81K	24		23-51-41	050-099, 153-199, 275-299
	29		W0062	147	24		23-51-41	150-152
	30	UNUSED						ALL
	31		W0062	81B	24		23-51-41	ALL
			W0062	147Z			23-51-41	150-152
			W0062	227Z			23-51-41	150-199, 275-299
			W0062	FRZ			23-51-41	150-199, 275-299
D00552		1010/170/0010		RCPT-				ALL
	1		W0968	001	18		29-32-11	ALL
	2		W0968	003	18		29-32-11	ALL
	3		W0968	012	18		29-32-11	ALL
D00554		0965/171/R010		PLUG-				ALL
	1		W0838	010	20		29-31-11	ALL
	2		W0838	201R	22		29-31-11	ALL
	3		W0838	201B	22		29-31-11	ALL
D00556		1010/170/0010		PLUG-				ALL
	1		W0968	011	20		29-33-11	ALL
	2		W0968	004	20		29-33-11	ALL
	3		W0968	009	20		29-33-11	ALL
	4		W0968	010	20		29-33-11	ALL
	5		W0968	008	20		29-33-11	ALL
	6		W0968	FRA			29-33-11	ALL
	7		W0968	007	20		29-33-11	ALL
			W0968	007Z			29-33-11	ALL
			W0968	011	20		29-33-11	ALL
			W0968	FRA			29-33-11	ALL
D00557		P061-00/ /		PLUG-P61				ALL
	1	DK	W0062	81D	18		33-13-21	ALL
	2	DK	W0062	81E	18		33-13-21	ALL
	3		W0062	227B	24		23-51-41	ALL
	4		W0062	227R	24		23-51-41	ALL
	5		W0062	227Z			23-51-41	050-099

HOOKUP LIST

D280T132

91-21-51

Section D00500

Page 11

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00557		P061-00/ /		PLUG-P61 (continued)				ALL
	5		W0062	FRY			23-51-41	150-199, 275-299
	6	UNUSED						ALL
	7		W0062	81C	24		23-51-41	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11		W0062	81J	20		23-51-41	ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16		W0062	80S	24		23-51-41	ALL
	17		W0062	80SZ			23-51-41	ALL
	18		W0062	226R	24		23-51-41	ALL
	19		W0062	226B	24		23-51-41	ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
			W0062	147Z			23-51-41	150-152
			W0062	227Z			23-51-41	150-199, 275-299
			W0062	FRY			23-51-41	150-199, 275-299
D00558		P005-00/ /		PLUG-				ALL
	1		W0062	311Y	24		33-13-16	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W0062	311B	24		33-13-16	ALL
	6		W0062	311R	24		33-13-16	ALL
	7		W0062	13G	20		33-13-16	ALL
	8	FM	W0062	13H	16		33-13-16	ALL
	9	FM	W0062	13J	16		33-13-16	ALL
	10	UNUSED						ALL
	11	FM	W0062	13L	16		33-13-16	ALL
	12		W0062	10S	22		33-13-16	ALL
D00560		1825/220/L024		PLUG-				ALL
	1		W0242	056	20		36-11-41	ALL

HOOKUP LIST
D280T132

91-21-51
Section D00500
Page 12
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00560		1825/220/L024		PLUG- (continued)				ALL
	2		W0242	055	20		36-11-41	ALL
	3		W0242	035	18		36-11-41	ALL
	4		W0242	006	20		36-11-41	ALL
	5		W0242	036	18		36-11-41	ALL
	6		W0242	037	18		36-11-41	ALL
	7		W0242	007	20		36-11-41	ALL
D00562		0142/237/L006		PLUG-				ALL
	1		W0974	012	16		30-42-11	ALL
	2		W0974	008	18		30-42-11	ALL
	3		W0974	007	18		30-42-11	ALL
	4	UNUSED						ALL
	5		W0974	009	16		30-42-11	ALL
	6		W0974	011	16		30-42-11	ALL
	7	UNUSED						ALL
D00564		0137/232/L013		PLUG-				ALL
	1		W0974	001	22		30-43-11	ALL
	2		W0974	003	20		30-43-11	ALL
	3		W0974	002	20		30-43-11	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
D00566		1513/173/R064		PLUG-				ALL
	1		W0978	002	20		21-44-21	ALL
	2		W0978	003	20		21-44-21	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
D00568		0201/182/R065		PLUG-				ALL
	A		W0756	537	22		30-31-13	ALL
	B		W0756	538	22		30-31-13	ALL
D00570		0142/237/R006		PLUG-				ALL
	1		W0976	012	16		30-42-11	ALL
	2		W0976	008	18		30-42-11	ALL
	3		W0976	007	18		30-42-11	ALL
	4	UNUSED						ALL
	5		W0976	009	16		30-42-11	ALL

HOOKUP LIST
D280T132

91-21-51
Section D00500
Page 13
Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00570		0142/237/R006		PLUG- (continued)				ALL
	6		W0976	011	16		30-42-11	ALL
	7	UNUSED						ALL
D00572		0137/230/R013		PLUG-				ALL
	1		W0976	001	22		30-43-11	ALL
	2		W0976	003	20		30-43-11	ALL
	3		W0976	002	20		30-43-11	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
D00574		0201/212/R069		PLUG				ALL
	A		W0624	009	22		30-31-21	ALL
	B		W0624	010	22		30-31-21	ALL
D00576		1365/172/L075		PLUG-				ALL
	1		W0578	044	22		21-44-21	ALL
	2		W0578	043	22		21-44-21	ALL
	3		W0578	046	20		21-44-21	ALL
	4		W0578	047	22		21-44-21	ALL
	5		W0578	045	22		21-44-21	ALL
	6		W0578	088	20		21-44-21	ALL
	7		W0578	087	22		21-44-21	ALL
D00578		P036-00/ /		RELAY SOCKET-P36				ALL
	A1		W0176	061	22		52-11-12	050-099, 150-199
	A1		W0176	061	20		52-11-12	275-299
	A2		W0176	064	22		52-11-12	050-099, 150-199
	A2		W0176	064	20		52-11-12	275-299
	A3		W0176	04L	22		52-11-12	050-099, 150-199
	A3		W0176	04L	20		52-11-12	275-299
	B1	UNUSED						ALL
	B2	UNUSED						ALL
	B3	UNUSED						ALL
	X1		W0176	065	22		52-11-12	ALL
	X2		W0176	063	20		52-11-12	ALL
D00582		P36/ /		RELAY SOCKET-				050-099
D00582		P036-00/ /		RELAY SOCKET-				150-199, 275-299
	A1	UNUSED						ALL
	A2	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D00500
Page 14
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00582		P36/ /		RELAY SOCKET- (continued)				050-099
D00582		P036-00/ /		RELAY SOCKET- (continued)				150-199, 275-299
	A3	UNUSED						ALL
	B1		W0182	110	22		21-44-21	ALL
	B2		W0182	105	24		21-44-21	ALL
	B3		W0182	109	22		21-44-21	ALL
	X1		W0182	106	24		21-44-21	ALL
	X2		W0182	107	24		21-44-21	ALL
D00584		P007-00/ /		PLUG-				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W1052	203B	24		33-11-11	ALL
	5		W1052	203R	24		33-11-11	ALL
	6		W1052	015	20		33-11-11	ALL
	7		W1052	205B	24		33-11-11	ALL
	8		W1052	205R	24		33-11-11	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11		W1052	204B	24		33-11-11	ALL
	12		W1052	204R	24		33-11-11	ALL
D00586		P007-00/ /		PLUG-				ALL
	1		W1052	209B	24		33-11-11	ALL
	2		W1052	209R	24		33-11-11	ALL
	3		W1052	208B	24		33-11-11	ALL
	4		W1052	208R	24		33-11-11	ALL
	5		W1052	023	20		33-11-11	ALL
D00588		P007-00/ /		PLUG-				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W1054	203B	24		33-11-11	ALL
	5		W1054	203R	24		33-11-11	ALL
	6		W1054	015	20		33-11-11	ALL
	7		W1054	205B	24		33-11-11	ALL
	8		W1054	205R	24		33-11-11	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00500

Page 15

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00588		P007-00/ /		PLUG- (continued)				ALL
	11		W1054	204B	24		33-11-11	ALL
	12		W1054	204R	24		33-11-11	ALL
D00589		0219/202/L021		RCPT-				ALL
	1		W1281	202B	22		27-61-15	ALL
	2		W1281	202R	22		27-61-15	ALL
	3		W1281	301R	22		27-61-15	ALL
	4		W1281	301B	22		27-61-15	ALL
	5		W1281	301Y	22		27-61-15	ALL
	6		W1281	001	20		27-61-15	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D00590		1559/282/L062		RCPT-A2				050-099, 150-199
D00590		1559/282/L062		RCPT-A2 GALLEY				275-278
D00590		1559/283/L062		RCPT-A2 GALLEY				280-299
	A		W0226	005	04		25-31-21	050-099, 150-199
	A		W0226	005	06		25-31-21	275-299
	B		W0226	006	04		25-31-21	050-099, 150-199
	B		W0226	006	06		25-31-21	275-299
	C		W0226	007	04		25-31-21	050-099, 150-199
	C		W0226	007	06		25-31-21	275-299
	D		W0226	008	04		25-31-21	050-099, 150-199
	D		W0226	008	06		25-31-21	275-299
D00591		0219/202/L021		RCPT-				ALL
	1		W1283	202B	22		27-61-14	ALL
	2		W1283	202R	22		27-61-14	ALL
	3		W1283	301R	22		27-61-14	ALL
	4		W1283	301B	22		27-61-14	ALL
	5		W1283	301Y	22		27-61-14	ALL
	6		W1283	001	20		27-61-14	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00500

Page 16

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00591		0219/202/L021		RCPT- (continued)				ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D00592		1559/282/L062		RCPT-				050-099, 150-199
D00592		1559/282/L062		RCPT-A2 GALLEY				275-278
D00592		1557/284/L062		RCPT-A2 GALLEY				280-299
	1		W0216	104	20		33-24-12	050-099, 150-199
	1	DK	W0216	002	18		33-51-13	275-299
	2		W0216	102	20		33-24-12	050-099, 150-199
	2	DK	W0216	003	18		33-51-13	275-299
	3		W0216	103	20		33-24-12	050-099, 150-199
	3	UNUSED						275-299
	4		W0216	042	24		25-31-21	050-099, 150-199
	4		W0216	004	24		25-31-21	275-299
	5		W0216	043	24		25-31-21	050-099, 150-199
	5		W0216	005	24		25-31-21	275-299
	6		W0216	044	24		25-31-21	050-099, 150-199
	6		W0216	006	24		25-31-21	275-299
	7		W0216	045	24		25-31-21	050-099, 150-199
	7		W0216	007	24		25-31-21	275-299
	8	UNUSED						050-099, 150-199
	8		W0216	035	20		33-24-14	275-299
	9		W0216	008	20		25-31-21	050-099, 150-199
	9	FM	W0216	008	16		25-31-21	275-299
	10		W0216	012	20		25-31-21	050-099, 150-199
	10	FM	W0216	012	16		25-31-21	275-299
	11	DK	W0216	053	18		30-71-25	050-099, 150-199
	11		W0216	037	20		33-24-14	275-299
	12	DK	W0216	054	18		30-71-25	050-099, 150-199
	12		W0216	036	20		33-24-14	275-299
	13	UNUSED						050-099, 150-199, 275-278
	13	DK	W0216	087	18		SPARE	280-299
	14	UNUSED						050-099, 150-199, 275-278
	14	DK	W0216	031	18		SPARE	280-299
	15	UNUSED						ALL
	DED		W0216	035Z			33-24-14	277-299
	DED		W0216	036Z			33-24-14	277-299
	DED		W0216	037Z			33-24-14	277-299

HOOKUP LIST

D280T132

91-21-51

Section D00500

Page 17

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00593		0219/202/L021		RCPT-				ALL
	1		W1285	202B	22		27-61-16	ALL
	2		W1285	202R	22		27-61-16	ALL
	3		W1285	301R	22		27-61-16	ALL
	4		W1285	301B	22		27-61-16	ALL
	5		W1285	301Y	22		27-61-16	ALL
	6		W1285	001	20		27-61-16	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D00594		1562/281/R065		RCPT-A3				050-099, 150-199
D00594		1562/281/R065		RCPT-A3 GALLEY				275-278
D00594		1559/282/R062		RCPT-A3 GALLEY				280-299
	A		W0308	004	04		25-31-31	050-099, 150-199
	A		W0308	004	08		25-31-31	275-299
	B		W0308	005	04		25-31-31	050-099, 150-199
	B		W0308	005	08		25-31-31	275-299
	C		W0308	006	04		25-31-31	050-099, 150-199
	C		W0308	006	08		25-31-31	275-299
	D		W0308	007	04		25-31-31	050-099, 150-199
	D		W0308	007	08		25-31-31	275-299
D00595		0219/205/R040		RCPT-				ALL
	1		W1291	202B	22		27-61-17	ALL
	2		W1291	202R	22		27-61-17	ALL
	3		W1291	301R	22		27-61-17	ALL
	4		W1291	301B	22		27-61-17	ALL
	5		W1291	301Y	22		27-61-17	ALL
	6		W1291	001	20		27-61-17	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00500

Page 18

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00596		1562/281/R065		RCPT-				050-099, 150-199
D00596		1562/281/R065		RCPT-A3 GALLEY				275-278
D00596		1557/284/R062		RCPT-A3 GALLEY				280-299
	1	UNUSED						050-099, 150-199
	1	FM	W0304	020	16		33-51-12	275-299
	2	UNUSED						050-099, 150-199
	2	FM	W0304	021	16		33-51-12	275-299
	3	UNUSED						ALL
	4		W0304	001	24		25-31-31	ALL
	5		W0304	002	24		25-31-31	ALL
	6		W0304	003	24		25-31-31	ALL
	7		W0304	004	24		25-31-31	ALL
	8	UNUSED						050-099, 150-199
	8		W0304	008	22		33-27-11	275-299
	9		W0304	005	20		25-31-31	050-099, 150-199
	9	FM	W0304	012	16		25-31-31	275-299
	10		W0304	007	20		25-31-31	050-099, 150-199
	10	FM	W0304	011	16		25-31-31	275-299
	11	DK	W0304	016	18		30-71-25	050-099, 150-199
	11		W0304	009	22		33-27-11	275-299
	12	DK	W0304	017	18		30-71-25	050-099, 150-199
	12		W0304	010	20		33-27-11	275-299
	CAP	Y	W0304	024	18		SPARE	280-299
	CAP	Y	W0304	036	18		SPARE	280-299
D00597		0223/202/R021		RCPT-				ALL
	1		W1293	202B	22		27-61-13	ALL
	2		W1293	202R	22		27-61-13	ALL
	3		W1293	301R	22		27-61-13	ALL
	4		W1293	301B	22		27-61-13	ALL
	5		W1293	301Y	22		27-61-13	ALL
	6		W1293	001	20		27-61-13	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00500

Page 19

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00598		P036-00/ /		RELAY SOCKET-P36				ALL
	1		W0176	174	24		36-23-21	ALL
	2		W0176	180	20		36-23-21	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W0176	003	24		32-09-11	ALL
	7		W0176	08N	22		29-21-32	ALL
	8		W0176	08M	22		29-21-32	ALL
	9	UNUSED						ALL
	10		W0176	077	24		34-55-11	ALL
	11		W0176	078	20		34-55-11	ALL
	12		W0176	004	24		32-09-11	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
D00599		0228/202/R021		RCPT-				ALL
	1		W1295	202B	22		27-61-18	ALL
	2		W1295	202R	22		27-61-18	ALL
	3		W1295	301R	22		27-61-18	ALL
	4		W1295	301B	22		27-61-18	ALL
	5		W1295	301Y	22		27-61-18	ALL
	6		W1295	001	20		27-61-18	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D00500
Page 20 End
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00600		P033-00/ /		RELAY SOCKET-P33				ALL
	A1		W0144	03Y	24		29-11-22	ALL
	A2		W0144	03W	24		29-11-22	ALL
	A3	UNUSED						ALL
	B1		W0144	04A	24		29-11-22	ALL
	B2		W0144	03U	24		29-11-22	ALL
	B3	UNUSED						ALL
	C1		W0144	03X	22		29-11-22	ALL
	C2		W0144	03S	22		29-11-22	ALL
	C3		W0144	04B	22		29-11-22	ALL
	D1	UNUSED						ALL
	D2	UNUSED						ALL
	D3	UNUSED						ALL
	X1		W0144	03T	24		29-11-22	ALL
	X2		W0144	03V	24		29-11-22	ALL
D00601		P008-00/ /		PLUG-P8 ILS R CONT PNL				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W0485	001	20		34-31-21	ALL
	6	UNUSED						ALL
	7		W0485	002	20		34-31-21	ALL
	8		W0485	201B	22		34-31-21	ALL
	9		W0485	201R	22		34-31-21	ALL
	10	UNUSED						ALL
	11		W0485	003	22		34-31-21	ALL
	12		W0485	202Z			34-31-21	ALL
	13		W0485	202B	24		34-31-21	ALL
	14		W0485	202R	24		34-31-21	ALL
	15	UNUSED						ALL
D00602		P033-00/ /		RELAY SOCKET-P33				ALL
	A1		W0144	04E	22		29-11-22	ALL
	A2		W0144	04D	22		29-11-22	ALL
	A3		W0144	04K	22		29-11-22	ALL
	B1	UNUSED						ALL
	B2		W0144	04G	24		29-11-22	ALL
	B3		W0144	04I	24		29-11-22	ALL
	X1		W0144	04H	24		29-11-22	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00600

Page 1

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00602		P033-00/ /		RELAY SOCKET-P33 (continued)				ALL
	X2		W0144	04J	24		29-11-22	ALL
D00603		P008-00/ /		PLUG-				ALL
	1	DK	W0483	010	18		33-13-18	050-099, 150-155, 162-165, 275-276
	1	DK	W0483	208R	18		33-13-18	156-157, 166-199, 277-299
	2		W0483	011	20		33-13-18	050-099, 150-155, 162-165, 275-276
	2	DK	W0483	208B	18		33-13-18	156-157, 166-199, 277-299
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W0483	001	22		34-31-31	ALL
	6	UNUSED						ALL
	7		W0483	002	20		34-31-31	ALL
	8		W0483	201B	22		34-31-31	ALL
	9		W0483	201R	22		34-31-31	ALL
	10	UNUSED						ALL
	11		W0483	003	22		34-31-31	ALL
	12		W0483	202Z			34-31-31	ALL
	13		W0483	202B	24		34-31-31	ALL
	14		W0483	202R	24		34-31-31	ALL
	15	UNUSED						ALL
D00604		P033-00/ /		RELAY SOCKET-P33				ALL
	A1	UNUSED						ALL
	A2		W0144	03Y	24		29-11-22	ALL
	A3		W0144	04X	24		29-11-22	ALL
	B1	UNUSED						ALL
	B2		W0144	04M	24		29-11-22	ALL
	B3		W0144	04V	24		29-11-22	ALL
	X1		W0144	04I	24		29-11-22	ALL
	X2		W0144	04W	24		29-11-22	ALL
D00605		0423/210/R090		RCPT-				050-099, 150-157, 276-299
D00605		0472/210/R090		RCPT-				162-199
D00605		0383/210/R090		RCPT-				275
	A		W0873	201R	20		23-34-15	ALL
	B		W0873	201B	20		23-34-15	ALL
	C		W0873	301Y	24		23-34-15	ALL
	D		W0873	301B	24		23-34-15	ALL
	E		W0873	301R	24		23-34-15	ALL
	F		W0873	01CX			23-34-15	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00600

Page 2

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00605		0423/210/R090		RCPT- (continued)				050-099, 150-157, 276-299
D00605		0472/210/R090		RCPT- (continued)				162-199
D00605		0383/210/R090		RCPT- (continued)				275
	= CF		W0873	01CO			23-34-15	ALL
D00606		1360/180/L075		PLUG-				ALL
	1		W0580	115	22		21-44-21	ALL
	2		W0580	116	22		21-44-21	ALL
	3		W0580	118	20		21-44-21	ALL
	4		W0580	119	20		21-44-21	ALL
	5		W0580	120	22		21-44-21	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
D00607		0588/197/L011		RCPT-				050-099, 162-199
D00607		0434/197/L011		RCPT-				150-157, 275-299
	A		W0875	201R	20		23-34-17	ALL
	B		W0875	201B	20		23-34-17	ALL
	C		W0875	301Y	24		23-34-17	ALL
	D		W0875	301B	24		23-34-17	ALL
	E		W0875	301R	24		23-34-17	ALL
	F		W0875	01CX			23-34-17	ALL
	= CF		W0875	01CO			23-34-17	ALL
D00608		1450/195/R040		PLUG-				ALL
	1	UNUSED						ALL
	2		W1358	103	22		21-26-21	ALL
	3		W1358	104	22		21-26-21	ALL
	4		W1358	105	22		21-26-21	ALL
	5		W1358	102	24		21-26-21	ALL
	6		W1358	11F	20		21-26-21	ALL
	7		W1358	11G	20		21-26-21	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00600

Page 3

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00608		1450/195/R040		PLUG- (continued)				ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
D00609		0503/210/L090		RCPT-				050-099
D00609		0472/210/L090		RCPT-				150-199
D00609		0383/210/L090		RCPT-				275
D00609		0423/210/L090		RCPT-				276-299
	A		W0877	201R	20		23-34-16	ALL
	B		W0877	201B	20		23-34-16	ALL
	C		W0877	301Y	24		23-34-16	ALL
	D		W0877	301B	24		23-34-16	ALL
	E		W0877	301R	24		23-34-16	ALL
	F		W0877	01CX			23-34-16	ALL
	= CF		W0877	01CO			23-34-16	ALL
D00612		1566/160/L029		PLUG-				050-099, 150-155, 162-165, 275-276
D00612		1568/160/L029		PLUG-				156-157, 166-199, 277-299
	1	DK	W0966	037	18		38-32-11	ALL
	2	DK	W0966	039	18		38-32-11	ALL
	3		W0966	089	20		38-32-11	050-099, 150-155, 162-165
	3		W0966	089	20		38-32-15	156-157, 166-199, 277-299
	3		W0966	089	20		38-32-14	275-276
	4		W0966	060	20		38-32-11	050-099, 155-199, 277-299
	4	UNUSED						150-154
	4		W0966	060	20		38-32-14	275-276
	5	UNUSED						ALL
	6		W0966	034	22		38-32-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00600

Page 4

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00612		1566/160/L029		PLUG- (continued)				050-099, 150-155, 162-165, 275-276
D00612		1568/160/L029		PLUG- (continued)				156-157, 166-199, 277-299
	7		W0966	030	20		38-32-11	ALL
	8		W0966	033	22		38-32-11	ALL
	9		W0966	029	22		38-32-11	ALL
	10		W0966	031	20		38-32-11	ALL
	11		W0966	061	20		38-32-11	050-099, 155, 162-165
	11	UNUSED						150-154, 156-157, 166-199, 275-299
	12	UNUSED						050-099, 150-155, 162-165
	12		W0966	077	22		38-32-11	156-157, 166-199, 275-299
	13	UNUSED						156-157, 166-199, 275-299
	14	UNUSED						156-157, 166-199, 275-299
	15	UNUSED						156-157, 166-199, 275-299
	16	UNUSED						156-157, 166-199, 275-299
	17	UNUSED						156-157, 166-199, 275-299
	18		W0966	023	20		38-32-11	156-157, 166-199, 275-299
	19	UNUSED						156-157, 166-199, 275-299
	20	UNUSED						156-157, 166-199, 275-299
	21	UNUSED						156-157, 166-199, 275-299
	22	UNUSED						156-157, 166-199, 275-299
	23	UNUSED						156-157, 166-199, 275-299
	24	UNUSED						156-157, 166-199, 275-299
	CAP	Y	W0966	023	20		38-32-11	050-099, 150-155, 162-165
	CAP	Y	W9510	002	20		38-32-11	276
D00614		P037-00/ /		RELAY SOCKET-				ALL
	A1		W0192	719	24		29-11-12	ALL
	A2		W0192	796	22		29-11-12	ALL
	A3	UNUSED						ALL
	B1		W0192	714	24		29-11-12	ALL
	B2		W0192	715	24		29-11-12	ALL
	B3	UNUSED						ALL
	C1		W0192	834	22		29-11-12	ALL
	C2		W0192	885	22		29-11-12	ALL
	C3		W0192	716	22		29-11-12	ALL
	D1	UNUSED						ALL
	D2	UNUSED						ALL
	D3	UNUSED						ALL
	X1		W0192	717	24		29-11-12	ALL
	X2		W0192	718	24		29-11-12	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00600

Page 5

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00616		P037-00/ /		RELAY SOCKET-				ALL
	A1		W0192	876	22		29-11-12	ALL
	A2		W0192	790	22		29-11-12	ALL
	A3		W0192	793	22		29-11-12	ALL
	B1	UNUSED						ALL
	B2		W0192	789	24		29-11-12	ALL
	B3		W0192	792	24		29-11-12	ALL
	X1		W0192	791	24		29-11-12	ALL
	X2		W0192	794	24		29-11-12	ALL
D00617		0915/205/R090		RCPT-				050-099
D00617		731/205/R090		RCPT-				150-199
D00617		0476/205/R090		RCPT-				275-278
D00617		0474/205/R090		RCPT-				280-299
	A		W0879	201R	20		23-34-15	ALL
	B		W0879	201B	20		23-34-15	ALL
	C		W0879	301Y	24		23-34-15	ALL
	D		W0879	301B	24		23-34-15	ALL
	E		W0879	301R	24		23-34-15	ALL
	F		W0879	01CX			23-34-15	ALL
	= CF		W0879	01CO			23-34-15	ALL
D00618		P037-00/ /		RELAY SOCKET-				ALL
	A1	UNUSED						ALL
	A2		W0192	719	24		29-11-12	ALL
	A3		W0192	094	24		29-11-12	ALL
	B1	UNUSED						ALL
	B2		W0192	720	24		29-11-12	ALL
	B3		W0192	721	22		29-11-12	ALL
	X1		W0192	792	24		29-11-12	ALL
	X2		W0192	722	24		29-11-12	ALL
D00619		1005/198/L015		RCPT-				050-099
D00619		0596/198/L011		RCPT-				150-199, 275-299
	A		W0881	201R	20		23-34-17	050-099, 150-199
	A	FM	W0881	201R	16		23-34-17	275-299
	B		W0881	201B	20		23-34-17	050-099, 150-199
	B	FM	W0881	201B	16		23-34-17	275-299
	C		W0881	301Y	24		23-34-17	ALL
	D		W0881	301B	24		23-34-17	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00600

Page 6

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00619		1005/198/L015		RCPT- (continued)				050-099
D00619		0596/198/L011		RCPT- (continued)				150-199, 275-299
	E		W0881	301R	24		23-34-17	ALL
	F		W0881	01CX			23-34-17	ALL
	=CF		W0881	01CO			23-34-17	ALL
D00621		0915/205/L090		RCPT-				050-099
D00621		0731/205/L090		RCPT-				150-199
D00621		0476/205/L090		RCPT-				275-278
D00621		0474/205/L090		RCPT-				280-299
	A		W0883	201R	20		23-34-16	ALL
	B		W0883	201B	20		23-34-16	ALL
	C		W0883	301Y	24		23-34-16	ALL
	D		W0883	301B	24		23-34-16	ALL
	E		W0883	301R	24		23-34-16	ALL
	F		W0883	01CX			23-34-16	ALL
	=CF		W0883	01CO			23-34-16	ALL
D00624		P033-00/ /		RELAY SOCKET-				ALL
	A1		W0142	667	22		30-31-23	ALL
	A2		W0142	178	22		30-31-23	ALL
	A3		W0142	868	22		30-31-23	ALL
	B1	UNUSED						ALL
	B2		W0142	649	24		30-31-23	ALL
	B3		W0142	657	24		30-31-23	ALL
	C1		W0142	671	22		30-31-13	ALL
	C2		W0142	672	22		30-31-13	ALL
	C3	UNUSED						ALL
	D1		W0142	177	22		30-31-23	ALL
	D2		W0142	178	22		30-31-23	ALL
	D3		W0142	177	22		30-31-23	ALL
	D3		W0142	664	22		30-31-23	ALL
	X1		W0142	143	24		32-09-13	ALL
	X2		W0142	069	24		32-09-13	ALL
	DED		W0142	649Z			30-31-23	ALL
	DED		W0142	657Z			30-31-23	ALL
	DED		W0142	671Z			30-31-13	ALL
	DED		W0142	672Z			30-31-13	ALL
D00628		P033-00/ /		RELAY SOCKET-				ALL
	A1	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00600

Page 7

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00628		P033-00/ /		RELAY SOCKET- (continued)				ALL
	A2		W0142	856	22		30-32-21	ALL
	A3		W0142	855	22		30-32-21	ALL
	B1	UNUSED						ALL
	B2	UNUSED						ALL
	B3	UNUSED						ALL
	C1		W0142	841	22		30-33-11	ALL
	C2		W0142	626	22		30-33-11	ALL
	C3		W0142	842	22		30-33-11	ALL
	D1	UNUSED						ALL
	D2		W0142	659	22		30-34-21	ALL
	D3		W0142	578	22		30-34-21	ALL
	X1		W0142	145	24		32-09-13	ALL
	X2		W0142	146	24		32-09-13	ALL
D00630		P033-00/ /		RELAY SOCKET-				ALL
	A1		W0142	50C	24		73-21-16	050-099, 150-199 275-299
	A1	UNUSED						275-299
	A2		W0142	179	24		73-21-16	050-099, 150-199 275-299
	A2	UNUSED						275-299
	A3	UNUSED						ALL
	B1		W0142	806	22		27-62-11	ALL
	B2		W0142	805	22		27-62-11	ALL
	B3		W0142	185	22		27-62-11	ALL
	C1		W0142	808	20		27-09-12	ALL
	C2		W0142	807	22		27-09-12	ALL
	C3	UNUSED						ALL
	D1		W0142	154	24		32-09-13	ALL
	D2		W0142	150	20		32-09-13	ALL
	D3	UNUSED						ALL
	X1		W0142	147	24		32-09-13	ALL
	X2		W0142	148	24		32-09-13	ALL
	DED		W0142	185Z			27-62-11	ALL
	DED		W0142	805Z			27-62-11	ALL
	DED		W0142	806Z			27-62-11	ALL
D00631		1153/195/L011		RCPT				050-099
D00631		1005/195/L011		RCPT				150-199
D00631		980/195/L011		RCPT				275-278
D00631		0980/195/L011		RCPT				280-299
	A	FM	W1423	201R	16		23-34-19	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00600

Page 8

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00631		1153/195/L011		RCPT (continued)				050-099
D00631		1005/195/L011		RCPT (continued)				150-199
D00631		980/195/L011		RCPT (continued)				275-278
D00631		0980/195/L011		RCPT (continued)				280-299
	B	FM	W1423	201B	16		23-34-19	ALL
	C		W1423	301Y	24		23-34-19	ALL
	D		W1423	301B	24		23-34-19	ALL
	E		W1423	301R	24		23-34-19	ALL
	F		W1423	01CX			23-34-19	ALL
	=CF		W1423	01CO			23-34-19	ALL
D00633		P001-03/ /		PLUG-				ALL
	1		W0011	062	22		22-14-11	ALL
	2		W0011	704	24		22-14-11	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W0011	035	24		22-14-11	ALL
	6	UNUSED						ALL
	7		W0011	028	24		22-14-11	ALL
	8		W0011	703	24		22-14-11	ALL
	9		W0011	702	24		22-14-11	ALL
	10	UNUSED						ALL
	11		W0011	071	20		22-14-11	ALL
	12	UNUSED						ALL
D00635		P003-01/ /		PLUG-				ALL
	1		W0031	060	22		22-14-21	ALL
	2		W0031	704	24		22-14-21	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W0031	033	24		22-14-21	ALL
	6	UNUSED						ALL
	7		W0031	027	24		22-14-21	ALL
	8		W0031	703	24		22-14-21	ALL
	9		W0031	702	24		22-14-21	ALL
	10	UNUSED						ALL
	11		W0031	031	20		22-14-21	ALL
	12	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00600

Page 9

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00636		P005-00/ /		PLUG-P5				ALL
	A		W0070	851	20		25-63-11	ALL
	B		W0070	852	20		25-63-11	ALL
	C		W0070	853	20		25-63-11	ALL
	D		W0070	854	20		25-63-11	ALL
	E		W0070	855	20		33-13-16	ALL
	F		W0070	856	20		33-13-16	ALL
D00638		0569/120/R048		RCPT-				ALL
	1		W0702	121	20		25-53-17	ALL
	2		W0702	122	20		25-53-17	ALL
	3		W0702	123	20		25-53-17	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12		W0702	124	20		25-53-17	ALL
	13	UNUSED						ALL
	14		W0702	125	20		25-53-17	ALL
	15	UNUSED						ALL
D00640		P037-00/ /		RELAY SOCKET-				ALL
	1		W0192	123	22		49-61-11	ALL
	2		W0192	121	22		49-61-11	ALL
	3		W0192	608	24		77-35-11	ALL
	4	UNUSED						ALL
	5		W0192	609	20		77-35-11	ALL
	6		W0192	585	24		32-09-12	ALL
	7		W0192	120	24		23-12-21	ALL
	8		W0192	162	20		23-12-21	ALL
	9		W0192	67T	20		73-21-11	ALL
	10		W0192	67V	20		73-21-11	ALL
	11		W0192	67U	20		73-21-11	ALL
	12		W0192	586	24		32-09-12	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00600

Page 10

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00641A		//		PLUG-PART OF D00641				ALL
	A01	UNUSED						ALL
	A02	UNUSED						ALL
	A03	UNUSED						ALL
	A04	UNUSED						ALL
	A05	UNUSED						ALL
	A06	UNUSED						ALL
	A07	UNUSED						ALL
	A08	UNUSED						ALL
	A09	UNUSED						ALL
	A10	UNUSED						ALL
	A11	UNUSED						ALL
	A12	UNUSED						ALL
	A13	UNUSED						ALL
	A14	UNUSED						ALL
	A15	UNUSED						ALL
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04	UNUSED						ALL
	B05	UNUSED						ALL
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13	UNUSED						ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	C01	UNUSED						ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05	UNUSED						ALL
	C06	UNUSED						ALL
	C07	UNUSED						ALL
	C08	UNUSED						ALL
	C09	UNUSED						ALL
	C10	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00600

Page 11

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00641A		//		PLUG-PART OF D00641 (continued)				ALL
	C11	UNUSED						ALL
	C12	UNUSED						ALL
	C13	UNUSED						ALL
	C14	UNUSED						ALL
	C15	UNUSED						ALL
	D01	UNUSED						ALL
	D02	UNUSED						ALL
	D03	UNUSED						ALL
	D04	UNUSED						ALL
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	D08	UNUSED						ALL
	D09	UNUSED						ALL
	D10	UNUSED						ALL
	D11	UNUSED						ALL
	D12	UNUSED						ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15	UNUSED						ALL
	E01	UNUSED						ALL
	E02	UNUSED						ALL
	E03	UNUSED						ALL
	E04	UNUSED						ALL
	E05	UNUSED						ALL
	E06	UNUSED						ALL
	E07	UNUSED						ALL
	E08	UNUSED						ALL
	E09	UNUSED						ALL
	E10	UNUSED						ALL
	E11	UNUSED						ALL
	E12	UNUSED						ALL
	E13	UNUSED						ALL
	E14	UNUSED						ALL
	E15	UNUSED						ALL
	F01	UNUSED						ALL
	F02	UNUSED						ALL
	F03	UNUSED						ALL
	F04	UNUSED						ALL
	F05	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00600

Page 12

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00641A		//		PLUG-PART OF D00641 (continued)				ALL
	F06	UNUSED						ALL
	F07	UNUSED						ALL
	F08	UNUSED						ALL
	F09	UNUSED						ALL
	F10	UNUSED						ALL
	F11	UNUSED						ALL
	F12	UNUSED						ALL
	F13	UNUSED						ALL
	F14	UNUSED						ALL
	F15	UNUSED						ALL
	G01	UNUSED						ALL
	G02	UNUSED						ALL
	G03	UNUSED						ALL
	G04	UNUSED						ALL
	G05	UNUSED						ALL
	G06	UNUSED						ALL
	G07	UNUSED						ALL
	G08	UNUSED						ALL
	G09	UNUSED						ALL
	G10	UNUSED						ALL
	G11	UNUSED						ALL
	G12	UNUSED						ALL
	G13	UNUSED						ALL
	G14	UNUSED						ALL
	G15	UNUSED						ALL
	H01	UNUSED						ALL
	H02	UNUSED						ALL
	H03	UNUSED						ALL
	H04	UNUSED						ALL
	H05	UNUSED						ALL
	H06	UNUSED						ALL
	H07	UNUSED						ALL
	H08	UNUSED						ALL
	H09	UNUSED						ALL
	H10	UNUSED						ALL
	H11	UNUSED						ALL
	H12	UNUSED						ALL
	H13	UNUSED						ALL
	H14	UNUSED						ALL
	H15	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00600

Page 13

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00641A		//		PLUG-PART OF D00641 (continued)				ALL
	J01	UNUSED						ALL
	J02	UNUSED						ALL
	J03	UNUSED						ALL
	J04	UNUSED						ALL
	J05	UNUSED						ALL
	J06	UNUSED						ALL
	J07	UNUSED						ALL
	J08	UNUSED						ALL
	J09	UNUSED						ALL
	J10	UNUSED						ALL
	J11	UNUSED						ALL
	J12	UNUSED						ALL
	J13	UNUSED						ALL
	J14	UNUSED						ALL
	J15	UNUSED						ALL
	K01	UNUSED						ALL
	K02	UNUSED						ALL
	K03	UNUSED						ALL
	K04	UNUSED						ALL
	K05	UNUSED						ALL
	K06	UNUSED						ALL
	K07	UNUSED						ALL
	K08	UNUSED						ALL
	K09	UNUSED						ALL
	K10	UNUSED						ALL
	K11	UNUSED						ALL
	K12	UNUSED						ALL
	K13	UNUSED						ALL
	K14	UNUSED						ALL
	K15	UNUSED						ALL
D00641B		//		PLUG-PART OF D00641				ALL
	71		W1079	01CX			23-11-11	ALL
	A01		W0163	301R	24		23-51-14	050-099, 151-152, 275-276
	A01		W0163	058	22		23-25-14	150, 153-155, 162-165
	A01		W0163	058	24		23-25-14	156-157, 166-199, 277-299
	A02	UNUSED						ALL
	A03	UNUSED						ALL
	A04	UNUSED						ALL
	A05	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D00600
Page 14
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00641B		//		PLUG-PART OF D00641 (continued)				ALL
	A06	UNUSED						ALL
	A07	UNUSED						ALL
	B01		W0163	301B	24		23-51-14	050-099, 151-152, 275-276
	B01		W0163	FRC			23-25-14	150, 153-199
	B01		W0163	058Z			23-25-14	277-299
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04	UNUSED						ALL
	B05		W0163	001	24		23-11-11	ALL
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	C01		W0163	301Y	24		23-51-14	050-099, 151-152, 275-276
	C01		W0163	057	22		23-25-14	150, 153-155, 162-165
	C01		W0163	057	24		23-25-14	156-157, 166-199, 277-299
	C02	UNUSED						ALL
	C03		W0163	202R	24		23-21-11	ALL
	C04	UNUSED						ALL
	C05		W0163	002	24		23-11-11	ALL
	C06	UNUSED						ALL
	C07	UNUSED						ALL
	D01		W0163	203R	24		23-51-14	050-099, 151-152, 275-276
	D01		W0163	059	22		23-25-14	150, 153-155, 162-165
	D01		W0163	059	24		23-25-14	156-157, 166-199, 277-299
	D02	UNUSED						ALL
	D03		W0163	202B	24		23-21-11	ALL
	D04	UNUSED						ALL
	D05		W0163	017	24		23-11-11	ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	E01		W0163	203B	24		23-51-14	050-099, 151-152, 275-276
	E01		W0163	FRA			23-25-14	150, 153-199
	E01		W0163	059Z			23-25-14	277-299
	E02		W0163	006	24		23-11-11	ALL
	E03	UNUSED						ALL
	E04	UNUSED						ALL
	E05		W0163	014	24		23-11-11	ALL
	E06	UNUSED						ALL
	E07	UNUSED						ALL
	F01	UNUSED						ALL
	F02	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00600

Page 15

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00641B		//		PLUG-PART OF D00641 (continued)				ALL
	F03	UNUSED						ALL
	F04	UNUSED						ALL
	F05		W0163	013	24		23-11-11	ALL
	F06	UNUSED						ALL
	F07	UNUSED						ALL
	G01	UNUSED						ALL
	G02	UNUSED						ALL
	G03		W0163	201R	24		23-11-11	ALL
	G04	UNUSED						ALL
	G05	UNUSED						ALL
	G06	UNUSED						ALL
	G07	UNUSED						ALL
	H01	UNUSED						ALL
	H02	UNUSED						ALL
	H03		W0163	201B	24		23-11-11	ALL
	H04	UNUSED						ALL
	H05		W0163	004	24		23-11-11	ALL
	H06	UNUSED						ALL
	H07	UNUSED						ALL
	J01	UNUSED						ALL
	J02	UNUSED						ALL
	J03	UNUSED						ALL
	J04	UNUSED						ALL
	J05	UNUSED						ALL
	J06	UNUSED						ALL
	J07	UNUSED						ALL
	K01	UNUSED						ALL
	K02	UNUSED						ALL
	K03	UNUSED						ALL
	K04	UNUSED						ALL
	K05	UNUSED						ALL
	K06	UNUSED						ALL
	K07	UNUSED						ALL
	= C71		W1079	01CO			23-11-11	ALL
			W0163	201	20		23-11-11	ALL
			W0163	201Z			23-11-11	ALL
			W0163	051B	22		23-25-14	150, 153-199
			W0163	058Z			23-25-14	150, 153-199
			W0163	059Z			23-25-14	150, 153-199
			W0163	958	22		23-25-14	150, 153-199

HOOKUP LIST

D280T132

91-21-51

Section D00600

Page 16

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00641B		//		PLUG-PART OF D00641 (continued)				ALL
			W0163	FRA			23-25-14	150, 153-199
			W0163	FRC			23-25-14	150, 153-199
D00641C		//		PLUG-PART OF D00641				ALL
	1		W0163	003	24		23-11-11	ALL
	2		W0163	007	20		23-11-11	ALL
	3		W0163	008	20		23-11-11	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W0163	011	20		23-11-11	ALL
	8		W0163	012	20		23-11-11	ALL
	9		W0163	009	20		23-11-11	ALL
	10		W0163	015	20		23-11-11	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	= C12	UNUSED						ALL
	= C13	UNUSED						ALL
	DED		W0163	007Z			23-11-11	ALL
	DED		W0163	008Z			23-11-11	ALL
	DED		W0163	009Z			23-11-11	ALL
	DED		W0163	011Z			23-11-11	ALL
D00642		0167/257/0000		PLUG-				ALL
	= A1		W0636	001	18		33-13-11	ALL
	= C1		W0636	001Z			33-13-11	ALL
D00643A		//		PLUG-PART OF D00643				ALL
	A01	UNUSED						ALL
	A02	UNUSED						ALL
	A03	UNUSED						ALL
	A04	UNUSED						ALL
	A05	UNUSED						ALL
	A06	UNUSED						ALL
	A07	UNUSED						ALL
	A08	UNUSED						ALL
	A09	UNUSED						ALL
	A10	UNUSED						ALL
	A11	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00600

Page 17

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00643A		//		PLUG-PART OF D00643 (continued)				ALL
	A12	UNUSED						ALL
	A13	UNUSED						ALL
	A14	UNUSED						ALL
	A15	UNUSED						ALL
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04	UNUSED						ALL
	B05	UNUSED						ALL
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13	UNUSED						ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	C01	UNUSED						ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05	UNUSED						ALL
	C06	UNUSED						ALL
	C07	UNUSED						ALL
	C08	UNUSED						ALL
	C09	UNUSED						ALL
	C10	UNUSED						ALL
	C11	UNUSED						ALL
	C12	UNUSED						ALL
	C13	UNUSED						ALL
	C14	UNUSED						ALL
	C15	UNUSED						ALL
	D01	UNUSED						ALL
	D02	UNUSED						ALL
	D03	UNUSED						ALL
	D04	UNUSED						ALL
	D05	UNUSED						ALL
	D06	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00600

Page 18

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00643A		//		PLUG-PART OF D00643 (continued)				ALL
	D07	UNUSED						ALL
	D08	UNUSED						ALL
	D09	UNUSED						ALL
	D10	UNUSED						ALL
	D11	UNUSED						ALL
	D12	UNUSED						ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15	UNUSED						ALL
	E01	UNUSED						ALL
	E02	UNUSED						ALL
	E03	UNUSED						ALL
	E04	UNUSED						ALL
	E05	UNUSED						ALL
	E06	UNUSED						ALL
	E07	UNUSED						ALL
	E08	UNUSED						ALL
	E09	UNUSED						ALL
	E10	UNUSED						ALL
	E11	UNUSED						ALL
	E12	UNUSED						ALL
	E13	UNUSED						ALL
	E14	UNUSED						ALL
	E15	UNUSED						ALL
	F01	UNUSED						ALL
	F02	UNUSED						ALL
	F03	UNUSED						ALL
	F04	UNUSED						ALL
	F05	UNUSED						ALL
	F06	UNUSED						ALL
	F07	UNUSED						ALL
	F08	UNUSED						ALL
	F09	UNUSED						ALL
	F10	UNUSED						ALL
	F11	UNUSED						ALL
	F12	UNUSED						ALL
	F13	UNUSED						ALL
	F14	UNUSED						ALL
	F15	UNUSED						ALL
	G01	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00600

Page 19

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00643A		//		PLUG-PART OF D00643 (continued)				ALL
	G02	UNUSED						ALL
	G03	UNUSED						ALL
	G04	UNUSED						ALL
	G05	UNUSED						ALL
	G06	UNUSED						ALL
	G07	UNUSED						ALL
	G08	UNUSED						ALL
	G09	UNUSED						ALL
	G10	UNUSED						ALL
	G11	UNUSED						ALL
	G12	UNUSED						ALL
	G13	UNUSED						ALL
	G14	UNUSED						ALL
	G15	UNUSED						ALL
	H01	UNUSED						ALL
	H02	UNUSED						ALL
	H03	UNUSED						ALL
	H04	UNUSED						ALL
	H05	UNUSED						ALL
	H06	UNUSED						ALL
	H07	UNUSED						ALL
	H08	UNUSED						ALL
	H09	UNUSED						ALL
	H10	UNUSED						ALL
	H11	UNUSED						ALL
	H12	UNUSED						ALL
	H13	UNUSED						ALL
	H14	UNUSED						ALL
	H15	UNUSED						ALL
	J01	UNUSED						ALL
	J02	UNUSED						ALL
	J03	UNUSED						ALL
	J04	UNUSED						ALL
	J05	UNUSED						ALL
	J06	UNUSED						ALL
	J07	UNUSED						ALL
	J08	UNUSED						ALL
	J09	UNUSED						ALL
	J10	UNUSED						ALL
	J11	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00600

Page 20

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00643A		//		PLUG-PART OF D00643 (continued)				ALL
	J12	UNUSED						ALL
	J13	UNUSED						ALL
	J14	UNUSED						ALL
	J15	UNUSED						ALL
	K01	UNUSED						ALL
	K02	UNUSED						ALL
	K03	UNUSED						ALL
	K04	UNUSED						ALL
	K05	UNUSED						ALL
	K06	UNUSED						ALL
	K07	UNUSED						ALL
	K08	UNUSED						ALL
	K09	UNUSED						ALL
	K10	UNUSED						ALL
	K11	UNUSED						ALL
	K12	UNUSED						ALL
	K13	UNUSED						ALL
	K14	UNUSED						ALL
	K15	UNUSED						ALL
D00643B		//		PLUG-PART OF D00643				ALL
	71		W1081	01CX			23-11-21	ALL
	A01		W0173	301R	24		23-51-14	050-099, 151-152, 275-276
	A01		W0173	049	22		23-25-14	150, 153-155, 162-165
	A01		W0173	049	24		23-25-14	156-157, 166-199, 277-299
	A02	UNUSED						ALL
	A03	UNUSED						ALL
	A04	UNUSED						ALL
	A05	UNUSED						ALL
	A06	UNUSED						ALL
	A07	UNUSED						ALL
	B01		W0173	301B	24		23-51-14	050-099, 151-152, 275-276
	B01		W0173	FRA			23-25-14	150, 153-199
	B01		W0173	049Z			23-25-14	277-299
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04	UNUSED						ALL
	B05		W0173	001	24		23-11-21	ALL
	B06	UNUSED						ALL
	B07	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00600

Page 21

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00643B		//		PLUG-PART OF D00643 (continued)				ALL
	C01		W0173	301Y	24		23-51-14	050-099, 151-152, 275-276
	C01		W0173	050	22		23-25-14	150, 153-155, 162-165
	C01		W0173	050	24		23-25-14	156-157, 166-199, 277-299
	C02	UNUSED						ALL
	C03		W0173	202R	24		23-21-11	ALL
	C04	UNUSED						ALL
	C05		W0173	002	24		23-11-21	ALL
	C06	UNUSED						ALL
	C07	UNUSED						ALL
	D01		W0173	203R	24		23-51-14	050-099, 151-152, 275-276
	D01		W0173	048	22		23-25-14	150, 153-155, 162-165
	D01		W0173	048	24		23-25-14	156-157, 166-199, 277-299
	D02	UNUSED						ALL
	D03		W0173	202B	24		23-21-11	ALL
	D04	UNUSED						ALL
	D05		W0173	017	24		23-11-21	ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	E01		W0173	203B	24		23-51-14	050-099, 151-152, 275-276
	E01		W0173	FRB			23-25-14	150, 153-199
	E01		W0173	048Z			23-25-14	277-299
	E02		W0173	006	24		23-11-21	ALL
	E03	UNUSED						ALL
	E04	UNUSED						ALL
	E05		W0173	014	24		23-11-21	ALL
	E06	UNUSED						ALL
	E07	UNUSED						ALL
	F01	UNUSED						ALL
	F02	UNUSED						ALL
	F03	UNUSED						ALL
	F04	UNUSED						ALL
	F05		W0173	013	24		23-11-21	ALL
	F06	UNUSED						ALL
	F07	UNUSED						ALL
	G01	UNUSED						ALL
	G02	UNUSED						ALL
	G03		W0173	201R	24		23-11-21	ALL
	G04	UNUSED						ALL
	G05	UNUSED						ALL
	G06	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D00600
Page 22
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00643B		//		PLUG-PART OF D00643 (continued)				ALL
	G07	UNUSED						ALL
	H01	UNUSED						ALL
	H02	UNUSED						ALL
	H03		W0173	201B	24		23-11-21	ALL
	H04	UNUSED						ALL
	H05		W0173	004	24		23-11-21	ALL
	H06	UNUSED						ALL
	H07	UNUSED						ALL
	J01	UNUSED						ALL
	J02	UNUSED						ALL
	J03	UNUSED						ALL
	J04	UNUSED						ALL
	J05	UNUSED						ALL
	J06	UNUSED						ALL
	J07	UNUSED						ALL
	K01	UNUSED						ALL
	K02	UNUSED						ALL
	K03	UNUSED						ALL
	K04	UNUSED						ALL
	K05	UNUSED						ALL
	K06	UNUSED						ALL
	K07	UNUSED						ALL
	=C71		W1081	01CO			23-11-21	ALL
			W0173	201	20		23-11-21	ALL
			W0173	201Z			23-11-21	ALL
			W0173	949	22		23-25-14	150, 153-155, 162-165
			W0173	048Z			23-25-14	150, 153-199
			W0173	049Z			23-25-14	150, 153-199
			W0173	055B	22		23-25-14	150, 153-199
			W0173	FRA			23-25-14	150, 153-199
			W0173	FRB			23-25-14	150, 153-199
			W0173	949	24		23-25-14	156-157, 166-199
D00643C		//		PLUG-PART OF D00643				ALL
	1		W0173	003	24		23-11-21	ALL
	2		W0173	007	20		23-11-21	ALL
	3		W0173	008	20		23-11-21	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00600

Page 23

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00643C		//		PLUG-PART OF D00643 (continued)				ALL
	7		W0173	011	20		23-11-21	ALL
	8		W0173	012	20		23-11-21	ALL
	9		W0173	009	20		23-11-21	ALL
	10		W0173	015	20		23-11-21	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	= C12	UNUSED						ALL
	= C13	UNUSED						ALL
	DED		W0173	007Z			23-11-21	ALL
	DED		W0173	008Z			23-11-21	ALL
	DED		W0173	009Z			23-11-21	ALL
	DED		W0173	011Z			23-11-21	ALL
D00644		0387/120/L020		PLUG-				ALL
	1		W0986	032	24		21-58-11	ALL
	2		W0986	033	20		21-58-11	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
D00645		P001-01/ /		PLUG-				ALL
	1	FM	W0011	120	16		33-13-11	ALL
	2	FM	W0011	121	16		33-13-11	ALL
	3		W0011	010	20		34-22-81	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W0011	009	20		34-22-81	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9		W0011	220R	24		34-22-81	ALL
	10		W0011	220B	24		34-22-81	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13		W0011	218R	24		34-22-81	ALL
	14		W0011	218B	24		34-22-81	ALL
	15	UNUSED						ALL
	16		W0011	754	22		34-22-81	ALL
	17		W0011	809	22		34-22-36	ALL
	18		W0011	211R	24		34-22-81	ALL

HOOKUP LIST
D280T132

91-21-51
Section D00600
Page 24
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00645		P001-01/ /		PLUG- (continued)				ALL
	19		W0011	211B	24		34-22-81	ALL
	20	UNUSED						ALL
	21		W0011	065	24		34-22-81	ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28		W0011	011	20		34-22-81	ALL
	29		W0011	066	24		34-22-81	ALL
	30	UNUSED						ALL
	31		W0011	253R	24		34-22-81	ALL
	32		W0011	253B	24		34-22-81	ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38		W0011	217R	24		34-22-81	ALL
	39		W0011	217B	24		34-22-81	ALL
	40	UNUSED						ALL
	41		W0011	214R	24		34-22-81	ALL
	42		W0011	214B	24		34-22-81	ALL
	43	UNUSED						ALL
	44		W0011	215R	24		34-22-81	ALL
	45		W0011	215B	24		34-22-81	ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48		W0011	219R	24		34-22-81	ALL
	49		W0011	219B	24		34-22-81	ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54		W0011	007	24		34-22-81	ALL
	55		W0011	008	20		34-22-81	ALL
	DED		W0011	007Z			34-22-81	ALL
	DED		W0011	066Z			34-22-81	ALL
	DED		W0011	211Z			34-22-81	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00600

Page 25

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00645		P001-01/ /		PLUG- (continued)				ALL
	DED		W0011	214Z			34-22-81	ALL
	DED		W0011	215Z			34-22-81	ALL
	DED		W0011	217Z			34-22-81	ALL
	DED		W0011	218Z			34-22-81	ALL
	DED		W0011	219Z			34-22-81	ALL
	DED		W0011	220Z			34-22-81	ALL
	DED		W0011	253Z			34-22-81	ALL
D00646		1358/172/L075		PLUG-				ALL
	1		W0578	021	24		21-44-11	ALL
	2		W0578	020	24		21-44-11	ALL
	3		W0578	024	20		21-44-11	ALL
	4		W0578	025	22		21-44-11	ALL
	5		W0578	019	22		21-44-11	ALL
	6		W0578	086	20		21-44-11	ALL
	7		W0578	085	24		21-44-11	ALL
D00647		P003-01/ /		PLUG-				ALL
	1		W0011	782	20		33-13-13	ALL
	2		W0011	783	20		33-13-13	ALL
	3		W0011	613	20		34-22-91	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W0011	614	20		34-22-91	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9		W0011	206R	24		34-22-91	ALL
	10		W0011	206B	24		34-22-91	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13		W0011	267R	24		34-22-91	ALL
	14		W0011	267B	24		34-22-91	ALL
	15	UNUSED						ALL
	16		W0011	079	24		34-22-91	ALL
	17		W0011	813	22		34-22-36	ALL
	18		W0011	205R	24		34-22-91	ALL
	19		W0011	205B	24		34-22-91	ALL
	20	UNUSED						ALL
	21		W0011	063	24		34-22-81	ALL
	22	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00600

Page 26

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00647		P003-01/ /		PLUG- (continued)				ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28		W0011	615	20		34-22-91	ALL
	29		W0011	610	24		34-22-81	ALL
	30	UNUSED						ALL
	31		W0011	265R	24		34-22-91	ALL
	32		W0011	265B	24		34-22-91	ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38		W0011	207R	24		34-22-91	ALL
	39		W0011	207B	24		34-22-91	ALL
	40	UNUSED						ALL
	41		W0011	201R	24		34-22-91	ALL
	42		W0011	201B	24		34-22-91	ALL
	43	UNUSED						ALL
	44		W0011	241R	24		34-22-91	ALL
	45		W0011	241B	24		34-22-91	ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48		W0011	269R	24		34-22-91	ALL
	49		W0011	269B	24		34-22-91	ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54		W0011	611	24		34-22-91	ALL
	55		W0011	612	20		34-22-91	ALL
	DED		W0011	201Z			34-22-91	ALL
	DED		W0011	205Z			34-22-91	ALL
	DED		W0011	206Z			34-22-91	ALL
	DED		W0011	207Z			34-22-91	ALL
	DED		W0011	241Z			34-22-91	ALL
	DED		W0011	265Z			34-22-91	ALL
	DED		W0011	267Z			34-22-91	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00600

Page 27

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00647		P003-01/ /		PLUG- (continued)				ALL
	DED		W0011	269Z			34-22-91	ALL
	DED		W0011	610Z			34-22-81	ALL
	DED		W0011	611Z			34-22-91	ALL
	DED		W0011	782Z			33-13-13	ALL
	DED		W0011	783Z			33-13-13	ALL
D00648		1251/123/L001		PLUG-				ALL
	1		W0934	001	24		21-44-11	ALL
	2		W0934	004	20		21-44-11	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
D00652		0440/120/L020		PLUG-				050-099
D00652		418/120/L020		PLUG-				150-199, 275-278
D00652		440/120/L020		PLUG-				280-299
	1		W0986	052	24		21-58-12	ALL
	2		W0986	053	24		21-58-12	ALL
	3		W0986	056	20		21-58-12	ALL
	4		W0986	057	20		21-58-12	ALL
	5		W0986	050	20		21-58-12	ALL
	6		W0986	051	24		21-58-12	ALL
	7		W0986	054	24		21-58-12	ALL
	8		W0986	055	20		21-58-12	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	DED		W0986	052Z			21-58-12	ALL
	DED		W0986	053Z			21-58-12	ALL
	DED		W0986	056Z			21-58-12	ALL
D00654		0478/107/L010		PLUG-				ALL
	1		W0986	008	20		21-58-13	ALL
	2		W0986	003	24		21-58-13	ALL
	3		W0986	004	24		21-58-13	ALL
	4		W0986	002	24		21-58-13	ALL

HOOKUP LIST
D280T132

91-21-51
Section D00600
Page 28
Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00654		0478/107/L010		PLUG- (continued)				ALL
	5		W0986	005	24		21-58-13	ALL
	6		W0986	006	20		21-58-13	ALL
	7		W0986	007	20		21-58-13	ALL
	8	DK	W0986	001	18		21-58-13	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D00660		P033-00/ /		RELAY SOCKET-				ALL
	A1		W0142	40S	22		30-81-11	050-099, 150-199
	A1		W0142	589	22		30-11-11	275-299
	A2		W0142	40P	20		30-81-11	050-099, 150-199
	A2		W0142	597	22		30-11-11	275-299
	A3		W0142	40R	22		30-81-11	050-099, 150-199
	A3		W0142	583	22		30-11-11	275-299
	B1		W0142	609	22		30-11-11	ALL
	B2		W0142	582	22		30-11-11	050-099, 150-199
	B2		W0142	585	22		30-11-11	275-299
	B3	UNUSED						050-099, 150-199
	B3		W0142	584	22		30-11-11	275-299
	C1		W0142	42P	22		30-11-11	050-099, 150-199
	C1		W0142	582	22		30-11-11	275-299
	C2		W0142	591	20		30-11-11	050-099, 150-199
	C2		W0142	605	22		30-11-11	275-299
	C3		W0142	581	22		30-11-11	ALL
	D1		W0142	11Y	20		78-34-11	ALL
	D2		W0142	11X	20		78-34-11	ALL
	D3		W0142	11Q	20		78-34-11	ALL
	X1		W0142	152	24		32-09-13	ALL
	X2		W0142	151	24		32-09-13	ALL
	DED		W0142	11XZ			78-34-11	ALL
	DED		W0142	11YZ			78-34-11	ALL
D00665A		//		PLUG-PART A OF D00665				ALL
	A01		W0101	183	22		27-61-16	ALL
	A02	UNUSED						ALL
	A03	UNUSED						ALL
	A04		W0101	014	22		27-41-11	ALL
	A05		W0101	016	22		27-41-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00600

Page 29

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00665A		//		PLUG-PART A OF D00665 (continued)				ALL
	A06		W0101	134	22		22-24-11	ALL
	A07		W0111	002	22		27-11-12	ALL
	A08		W0111	001	22		27-11-12	ALL
	A09		W0111	146	22		22-24-11	ALL
	A10	UNUSED						ALL
	A11		W0111	221R	24		27-11-12	ALL
	A12		W0111	221B	24		27-11-12	ALL
	A13		W0111	155	22		27-41-11	ALL
	A14		W0111	157	22		27-41-11	ALL
	A15		W0111	191	22		27-61-16	ALL
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04		W0101	013	22		27-41-11	ALL
	B05		W0101	015	22		27-41-11	ALL
	B06		W0101	018	22		27-41-31	050-099, 155-199, 275-299
	B06		W0101	018	22		27-41-11	150-154
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13		W0111	189	22		27-41-11	ALL
	B14		W0111	190	22		27-41-11	ALL
	B15	UNUSED						ALL
	C01	UNUSED						ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04		W0101	175	22		27-41-11	ALL
	C05		W0101	170	22		27-41-11	ALL
	C06	UNUSED						ALL
	C07		W0111	152	22		27-41-11	ALL
	C08		W0111	151	22		27-41-11	ALL
	C09		W0111	153	22		27-41-11	ALL
	C10	UNUSED						ALL
	C11		W0111	145	22		22-24-11	ALL
	C12		W0111	159	22		27-41-11	ALL
	C13	UNUSED						ALL
	C14		W0111	147	22		22-24-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00600

Page 30

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00665A		//		PLUG-PART A OF D00665 (continued)				ALL
	C15	UNUSED						ALL
	D01	UNUSED						ALL
	D02	UNUSED						ALL
	D03	UNUSED						ALL
	D04		W0101	149	22		27-41-11	ALL
	D05		W0101	165	22		27-41-11	ALL
	D06		W0101	074	22		27-09-12	ALL
	D07		W0101	205R	24		22-22-11	ALL
	D08		W0101	205B	24		22-22-11	ALL
	D09		W0101	707	22		22-22-11	ALL
	D10		W0101	706	22		22-22-11	ALL
	D11		W0101	222R	24		27-11-12	ALL
	D12		W0101	222B	24		27-11-12	ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15	UNUSED						ALL
	E01	UNUSED						ALL
	E02	UNUSED						ALL
	E03	UNUSED						ALL
	E04		W0101	172	22		27-41-11	ALL
	E05		W0101	173	22		27-41-11	ALL
	E06	UNUSED						ALL
	E07		W0101	001	22		27-11-12	ALL
	E08		W0101	002	22		27-11-12	ALL
	E09		W0101	219R	22		27-41-11	ALL
	E10		W0101	219B	22		27-41-11	ALL
	E11		W0101	141	22		22-24-11	ALL
	E12		W0101	177	22		27-41-11	ALL
	E13	UNUSED						ALL
	E14		W0111	079	22		27-09-12	ALL
	E15	UNUSED						ALL
	F01	UNUSED						ALL
	F02	UNUSED						ALL
	F03	UNUSED						ALL
	F04		W0101	320R	22		27-41-11	ALL
	F05		W0101	320B	22		27-41-11	ALL
	F06		W0101	320Y	22		27-41-11	ALL
	F07		W0101	151	22		27-41-11	ALL
	F08		W0101	152	22		27-41-11	ALL
	F09		W0101	153	22		27-41-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00600

Page 31

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00665A		//		PLUG-PART A OF D00665 (continued)				ALL
	F10		W0101	154	22		27-41-11	ALL
	F11		W0101	140	22		22-24-11	ALL
	F12		W0101	169	22		27-41-11	ALL
	F13	UNUSED						ALL
	F14	UNUSED						ALL
	F15	UNUSED						ALL
	G01	UNUSED						ALL
	G02	UNUSED						ALL
	G03	UNUSED						ALL
	G04		W0101	321R	22		27-41-11	ALL
	G05		W0101	321B	22		27-41-11	ALL
	G06		W0101	321Y	22		27-41-11	ALL
	G07	UNUSED						ALL
	G08	UNUSED						ALL
	G09	UNUSED						ALL
	G10	UNUSED						ALL
	G11	UNUSED						ALL
	G12		W0101	176	22		22-22-11	ALL
	G13		W0111	160	22		27-41-11	ALL
	G14		W0111	161	22		27-41-11	ALL
	G15	UNUSED						ALL
	H01	UNUSED						ALL
	H02	UNUSED						ALL
	H03	UNUSED						ALL
	H04		W0101	318R	22		27-41-11	ALL
	H05		W0101	318B	22		27-41-11	ALL
	H06		W0101	318Y	22		27-41-11	ALL
	H07	UNUSED						ALL
	H08	UNUSED						ALL
	H09	UNUSED						ALL
	H10	UNUSED						ALL
	H11	UNUSED						ALL
	H12	UNUSED						ALL
	H13	UNUSED						ALL
	H14	UNUSED						ALL
	H15	UNUSED						ALL
	J01	UNUSED						ALL
	J02	UNUSED						ALL
	J03	UNUSED						ALL
	J04		W0101	319R	22		27-41-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00600

Page 32

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00665A		//		PLUG-PART A OF D00665 (continued)				ALL
	J05		W0101	319B	22		27-41-11	ALL
	J06		W0101	319Y	22		27-41-11	ALL
	J07	UNUSED						ALL
	J08	UNUSED						ALL
	J09	UNUSED						ALL
	J10	UNUSED						ALL
	J11	UNUSED						ALL
	J12		W0121	116	22		22-22-11	ALL
	J13		W0111	163	22		27-41-11	ALL
	J14		W0111	164	22		27-41-11	ALL
	J15	UNUSED						ALL
	K01	UNUSED						ALL
	K02	UNUSED						ALL
	K03	UNUSED						ALL
	K04		W0101	223R	22		27-21-12	ALL
	K05		W0101	223B	22		27-21-12	ALL
	K06	UNUSED						ALL
	K07	UNUSED						ALL
	K08	UNUSED						ALL
	K09	UNUSED						ALL
	K10	UNUSED						ALL
	K11	UNUSED						ALL
	K12	UNUSED						ALL
	K13		W0111	227R	22		27-21-12	ALL
	K14		W0111	227B	22		27-21-12	ALL
	K15		W0111	121	22		27-21-12	ALL
	DED		W0101	151Z			27-41-11	ALL
	DED		W0101	152Z			27-41-11	ALL
	DED		W0101	205Z			22-22-11	ALL
	DED		W0101	222Z			27-11-12	ALL
	DED		W0111	221Z			27-11-12	ALL
	DED		W0101	018Z			27-41-31	050-099, 155-199, 275-299
D00665B		//		PLUG-PART B OF D00665				ALL
	A01		W1101	035	22		27-11-12	ALL
	A02	UNUSED						ALL
	A03		W1101	039	22		27-11-12	ALL
	A04		W1101	036	22		27-11-12	ALL
	A05	UNUSED						ALL
	A06	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00600

Page 33

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00665B		//		PLUG-PART B OF D00665 (continued)				ALL
	A07	UNUSED						ALL
	A08	UNUSED						ALL
	A09	UNUSED						ALL
	A10	UNUSED						ALL
	A11		W1101	050	22		27-11-12	ALL
	A12	UNUSED						ALL
	A13	UNUSED						ALL
	A14	UNUSED						ALL
	A15		W1101	025	22		27-09-14	ALL
	B01		W1101	034	22		27-11-12	ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04	UNUSED						ALL
	B05		W1101	010	22		22-22-11	ALL
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12		W1101	042	22		27-11-12	ALL
	B13		W1101	048	22		27-11-12	ALL
	B14		W1101	045	22		27-11-12	ALL
	B15		W1101	049	22		27-11-12	ALL
	C01	UNUSED						ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05	UNUSED						ALL
	C06	UNUSED						ALL
	C07	UNUSED						ALL
	C08	UNUSED						ALL
	C09	UNUSED						ALL
	C10	UNUSED						ALL
	C11		W1101	058	22		27-41-11	ALL
	C12	UNUSED						ALL
	C13		W1101	062	22		27-41-11	ALL
	C14	UNUSED						ALL
	C15	UNUSED						ALL
	D01	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00600

Page 34

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00665B		//		PLUG-PART B OF D00665 (continued)				ALL
	D02	UNUSED						ALL
	D03	UNUSED						ALL
	D04	UNUSED						ALL
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	D08	UNUSED						ALL
	D09	UNUSED						ALL
	D10	UNUSED						ALL
	D11	UNUSED						ALL
	D12	UNUSED						ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15	UNUSED						ALL
	E01	UNUSED						ALL
	E02	UNUSED						ALL
	E03	UNUSED						ALL
	E04	UNUSED						ALL
	E05	UNUSED	W0111	170	22		22-22-11	ALL
	E06	UNUSED						ALL
	E07	UNUSED						ALL
	E08	UNUSED						ALL
	E09	UNUSED						ALL
	E10	UNUSED						050-099
	E10	UNUSED	W0121	134	22		27-41-11	150-199, 275-299
	E11	UNUSED						050-099
	E11	UNUSED	W0121	100	22		27-41-11	150-199, 275-299
	E12	UNUSED						050-099
	E12	UNUSED	W0121	162	22		27-41-11	150-199, 275-299
	E13	UNUSED						ALL
	E14	UNUSED						ALL
	E15	UNUSED						ALL
	F01	UNUSED						ALL
	F02	UNUSED						ALL
	F03	UNUSED						ALL
	F04	UNUSED						ALL
	F05	UNUSED	W0121	013	22		27-09-13	ALL
	F06	UNUSED	W0121	012	22		27-09-13	ALL
	F07	UNUSED						ALL
	F08	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00600

Page 35

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00665B		//		PLUG-PART B OF D00665 (continued)				ALL
	F09	UNUSED						ALL
	F10	UNUSED						ALL
	F11	UNUSED						ALL
	F12	UNUSED						ALL
	F13	UNUSED						ALL
	F14	UNUSED						ALL
	F15	UNUSED						ALL
	G01	UNUSED						ALL
	G02		W0111	322R	22		27-41-11	ALL
	G03		W0111	322B	22		27-41-11	ALL
	G04		W0111	322Y	22		27-41-11	ALL
	G05	UNUSED						ALL
	G06	UNUSED						ALL
	G07	UNUSED						ALL
	G08		W0121	170	22		27-41-11	ALL
	G09		W0121	171	22		27-41-11	ALL
	G10		W0121	172	22		27-41-11	ALL
	G11		W0121	173	22		27-41-11	ALL
	G12		W0121	174	22		27-41-11	ALL
	G13		W0121	175	22		27-41-11	ALL
	G14		W0121	176	22		27-41-11	ALL
	G15		W0121	177	22		27-41-11	ALL
	H01	UNUSED						ALL
	H02		W0111	321R	22		27-41-11	ALL
	H03		W0111	321B	22		27-41-11	ALL
	H04		W0111	321Y	22		27-41-11	ALL
	H05		W0111	084	22		27-09-13	ALL
	H06		W0111	085	22		27-09-13	ALL
	H07	UNUSED						ALL
	H08		W0121	099	22		27-41-11	ALL
	H09	UNUSED						ALL
	H10		W0121	102	22		27-41-11	ALL
	H11		W0121	181	22		27-41-11	ALL
	H12		W0121	103	22		27-41-11	050-099
	H12	UNUSED						150-199, 275-299
	H13	UNUSED						ALL
	H14	UNUSED						ALL
	H15		W0121	097	22		22-24-11	ALL
	J01	UNUSED						ALL
	J02		W0111	320R	22		27-41-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00600

Page 36

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00665B		//		PLUG-PART B OF D00665 (continued)				ALL
	J03		W0111	320B	22		27-41-11	ALL
	J04		W0111	320Y	22		27-41-11	ALL
	J05	UNUSED						ALL
	J06	UNUSED						ALL
	J07	UNUSED						ALL
	J08	UNUSED						ALL
	J09	UNUSED						ALL
	J10	UNUSED						ALL
	J11	UNUSED						ALL
	J12		W0121	180	22		27-61-16	ALL
	J13	UNUSED						ALL
	J14		W0121	007	22		22-22-11	ALL
	J15		W0121	004	22		22-22-11	ALL
	K01	UNUSED						ALL
	K02		W0111	319R	22		27-41-11	ALL
	K03		W0111	319B	22		27-41-11	ALL
	K04		W0111	319Y	22		27-41-11	ALL
	K05	UNUSED						ALL
	K06	UNUSED						ALL
	K07	UNUSED						ALL
	K08	UNUSED						ALL
	K09	UNUSED						ALL
	K10	UNUSED						ALL
	K11	UNUSED						ALL
	K12		W0121	073	22		27-09-12	ALL
	K13	UNUSED						ALL
	K14		W0121	216R	24		22-22-11	ALL
	K15		W0121	216B	24		22-22-11	ALL
	DED		W0121	216Z			22-22-11	ALL
	DED		W1101	034Z			27-11-12	ALL
	DED		W1101	035Z			27-11-12	ALL
D00665C		//		PLUG-PART C OF D00665				ALL
	1	UNUSED						ALL
	2		W0121	109	16		27-41-11	ALL
	3		W0121	108	16		27-41-11	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W0121	112	16		27-41-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00600

Page 37

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00665C		//		PLUG-PART C OF D00665 (continued)				ALL
	8		W0121	111	16		27-41-11	ALL
	9		W0121	196	16		27-11-12	ALL
	10		W0121	113	16		27-41-11	ALL
	11		W0121	110	16		27-41-11	ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	= C12	UNUSED						ALL
	= C13	UNUSED						ALL
D00666		P037-00/ /		RELAY SOCKET-				ALL
	A1		W0192	236R	24		32-42-11	ALL
	A2		W0192	238R	24		32-42-11	ALL
	A3		W0192	237R	24		32-42-11	ALL
	B1		W0192	236B	24		32-42-11	ALL
	B2		W0192	238B	24		32-42-11	ALL
	B3		W0192	237B	24		32-42-11	ALL
	X1		W0192	856	24		32-42-11	ALL
	X2		W0192	855	24		32-42-11	ALL
			W0192	236Z			32-42-11	ALL
			W0192	237Z			32-42-11	ALL
			W0192	238Z			32-42-11	ALL
			W0192	854	20		32-42-11	ALL
D00667A		//		PLUG-PART A OF D00667				ALL
	A01		W0131	139	22		27-61-17	ALL
	A02	UNUSED						ALL
	A03	UNUSED						ALL
	A04		W0131	085	22		27-41-21	ALL
	A05		W0131	090	22		27-41-21	ALL
	A06		W0131	024	22		22-24-21	ALL
	A07		W0131	065	22		27-11-22	ALL
	A08		W0131	066	22		27-11-22	ALL
	A09		W0131	023	22		22-24-21	ALL
	A10	UNUSED						ALL
	A11		W0131	206R	24		27-11-22	ALL
	A12		W0131	206B	24		27-11-22	ALL
	A13		W0141	106	22		27-41-21	ALL
	A14		W0141	107	22		27-41-21	ALL
	A15		W0141	195	22		27-61-17	ALL
	B01	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00600

Page 38

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00667A		//		PLUG-PART A OF D00667 (continued)				ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04		W0131	084	22		27-41-21	ALL
	B05		W0131	089	22		27-41-21	ALL
	B06		W1131	014	22		27-41-31	050-099, 155-199, 275-299
	B06		W0131	025	22		27-41-21	150-154
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13		W0141	189	22		27-41-21	ALL
	B14		W0141	190	22		27-41-21	ALL
	B15	UNUSED						ALL
	C01	UNUSED						ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04		W0131	082	22		27-41-21	ALL
	C05		W0131	083	22		27-41-21	ALL
	C06	UNUSED						ALL
	C07		W0131	075	22		27-41-21	ALL
	C08		W0131	074	22		27-41-21	ALL
	C09		W0131	076	22		27-41-21	ALL
	C10	UNUSED						ALL
	C11		W0131	022	22		22-24-21	ALL
	C12		W0131	081	22		27-41-21	ALL
	C13	UNUSED						ALL
	C14		W0141	030	22		22-24-21	ALL
	C15	UNUSED						ALL
	D01	UNUSED						ALL
	D02	UNUSED						ALL
	D03	UNUSED						ALL
	D04		W0131	079	22		27-41-21	ALL
	D05		W0131	080	22		27-41-21	ALL
	D06		W0131	054	22		27-09-12	ALL
	D07		W0141	201R	24		22-22-21	ALL
	D08		W0141	201B	24		22-22-21	ALL
	D09		W0141	003	22		22-22-21	ALL
	D10		W0141	002	22		22-22-21	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00600

Page 39

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00667A		//		PLUG-PART A OF D00667 (continued)				ALL
	D11		W0141	207R	24		27-11-22	ALL
	D12		W0141	207B	24		27-11-22	ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15	UNUSED						ALL
	E01	UNUSED						ALL
	E02	UNUSED						ALL
	E03	UNUSED						ALL
	E04		W0131	087	22		27-41-21	ALL
	E05		W0131	088	22		27-41-21	ALL
	E06	UNUSED						ALL
	E07		W0141	099	22		27-11-22	ALL
	E08		W0141	100	22		27-11-22	ALL
	E09		W0141	209R	22		27-41-21	ALL
	E10		W0141	209B	22		27-41-21	ALL
	E11		W0141	032	22		22-24-21	ALL
	E12		W0141	181	22		27-41-21	ALL
	E13	UNUSED						ALL
	E14		W0141	070	22		27-09-12	ALL
	E15	UNUSED						ALL
	F01	UNUSED						ALL
	F02	UNUSED						ALL
	F03	UNUSED						ALL
	F04		W0131	321R	22		27-41-21	ALL
	F05		W0131	321B	22		27-41-21	ALL
	F06		W0131	321Y	22		27-41-21	ALL
	F07		W0141	103	22		27-41-21	ALL
	F08		W0141	104	22		27-41-21	ALL
	F09		W0141	101	22		27-41-21	ALL
	F10		W0141	102	22		27-41-21	ALL
	F11		W0141	031	22		22-24-21	ALL
	F12		W0141	108	22		27-41-21	ALL
	F13	UNUSED						ALL
	F14	UNUSED						ALL
	F15	UNUSED						ALL
	G01	UNUSED						ALL
	G02	UNUSED						ALL
	G03	UNUSED						ALL
	G04		W0131	322R	22		27-41-21	ALL
	G05		W0131	322B	22		27-41-21	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00600

Page 40

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00667A		//		PLUG-PART A OF D00667 (continued)				ALL
	G06		W0131	322Y	22		27-41-21	ALL
	G07	UNUSED						ALL
	G08	UNUSED						ALL
	G09	UNUSED						ALL
	G10	UNUSED						ALL
	G11	UNUSED						ALL
	G12		W0151	001	22		22-22-21	ALL
	G13		W0141	109	22		27-41-21	ALL
	G14		W0141	110	22		27-41-21	ALL
	G15	UNUSED						ALL
	H01	UNUSED						ALL
	H02	UNUSED						ALL
	H03	UNUSED						ALL
	H04		W0131	319R	22		27-41-21	ALL
	H05		W0131	319B	22		27-41-21	ALL
	H06		W0131	319Y	22		27-41-21	ALL
	H07	UNUSED						ALL
	H08	UNUSED						ALL
	H09	UNUSED						ALL
	H10	UNUSED						ALL
	H11	UNUSED						ALL
	H12	UNUSED						ALL
	H13	UNUSED						ALL
	H14	UNUSED						ALL
	H15	UNUSED						ALL
	J01	UNUSED						ALL
	J02	UNUSED						ALL
	J03	UNUSED						ALL
	J04		W0131	320R	22		27-41-21	ALL
	J05		W0131	320B	22		27-41-21	ALL
	J06		W0131	320Y	22		27-41-21	ALL
	J07	UNUSED						ALL
	J08	UNUSED						ALL
	J09	UNUSED						ALL
	J10	UNUSED						ALL
	J11	UNUSED						ALL
	J12		W0131	001	22		22-22-21	ALL
	J13		W0141	112	22		27-41-21	ALL
	J14		W0141	113	22		27-41-21	ALL
	J15	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00600

Page 41

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00667A		//		PLUG-PART A OF D00667 (continued)				ALL
	K01	UNUSED						ALL
	K02	UNUSED						ALL
	K03	UNUSED						ALL
	K04		W0131	229R	22		27-21-22	ALL
	K05		W0131	229B	22		27-21-22	ALL
	K06	UNUSED						ALL
	K07	UNUSED						ALL
	K08	UNUSED						ALL
	K09	UNUSED						ALL
	K10	UNUSED						ALL
	K11	UNUSED						ALL
	K12	UNUSED						ALL
	K13		W0141	225R	22		27-21-22	ALL
	K14		W0141	225B	22		27-21-22	ALL
	K15		W0141	187	22		27-21-22	ALL
	DED		W0131	074Z			27-41-21	ALL
	DED		W0131	075Z			27-41-21	ALL
	DED		W0131	206Z			27-11-22	ALL
	DED		W0141	101Z			27-41-21	ALL
	DED		W0141	102Z			27-41-21	ALL
	DED		W0141	201Z			22-22-21	ALL
	DED		W0141	207Z			27-11-22	ALL
	DED		W1131	014Z			27-41-31	050-099, 155-199, 275-299
D00667B		//		PLUG-PART B OF D00667				ALL
	A01		W1131	026	22		27-11-22	ALL
	A02	UNUSED						ALL
	A03		W1131	031	22		27-11-22	ALL
	A04		W1131	028	22		27-11-22	ALL
	A05	UNUSED						ALL
	A06	UNUSED						ALL
	A07	UNUSED						ALL
	A08	UNUSED						ALL
	A09	UNUSED						ALL
	A10	UNUSED						ALL
	A11		W1131	042	22		27-11-22	ALL
	A12	UNUSED						ALL
	A13	UNUSED						ALL
	A14	UNUSED						ALL
	A15		W1131	019	22		27-09-14	ALL

HOOKUP LIST
D280T132

91-21-51
Section D00600
Page 42
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00667B		//		PLUG-PART B OF D00667 (continued)				ALL
	B01		W1131	025	22		27-11-22	ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04	UNUSED						ALL
	B05		W0141	001	22		22-22-21	ALL
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12		W1131	040	22		27-11-22	ALL
	B13		W1131	034	22		27-11-22	ALL
	B14		W1131	041	22		27-11-22	ALL
	B15		W1131	037	22		27-11-22	ALL
	C01	UNUSED						ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05	UNUSED						ALL
	C06	UNUSED						ALL
	C07	UNUSED						ALL
	C08	UNUSED						ALL
	C09	UNUSED						ALL
	C10	UNUSED						ALL
	C11		W1131	044	22		27-41-21	ALL
	C12	UNUSED						ALL
	C13		W1131	045	22		27-41-21	ALL
	C14	UNUSED						ALL
	C15	UNUSED						ALL
	D01	UNUSED						ALL
	D02	UNUSED						ALL
	D03	UNUSED						ALL
	D04	UNUSED						ALL
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	D08	UNUSED						ALL
	D09	UNUSED						ALL
	D10	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00600

Page 43

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00667B		//		PLUG-PART B OF D00667 (continued)				ALL
	D11	UNUSED						ALL
	D12	UNUSED						ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15	UNUSED						ALL
	E01	UNUSED						ALL
	E02	UNUSED						ALL
	E03	UNUSED						ALL
	E04	UNUSED						ALL
	E05		W1131	001	22		22-22-21	ALL
	E06	UNUSED						ALL
	E07	UNUSED						ALL
	E08	UNUSED						ALL
	E09	UNUSED						ALL
	E10	UNUSED						050-099
	E10		W0151	048	22		27-41-21	150-199, 275-299
	E11	UNUSED						050-099
	E11		W0151	169	22		27-41-21	150-199, 275-299
	E12	UNUSED						ALL
	E13	UNUSED						050-099
	E13		W0151	180	22		27-41-21	150-199, 275-299
	E14	UNUSED						ALL
	E15	UNUSED						ALL
	F01	UNUSED						ALL
	F02	UNUSED						ALL
	F03	UNUSED						ALL
	F04	UNUSED						ALL
	F05		W0141	078	22		27-09-13	ALL
	F06		W0141	085	22		27-09-13	ALL
	F07	UNUSED						ALL
	F08	UNUSED						ALL
	F09	UNUSED						ALL
	F10	UNUSED						ALL
	F11	UNUSED						ALL
	F12	UNUSED						ALL
	F13	UNUSED						ALL
	F14	UNUSED						ALL
	F15	UNUSED						ALL
	G01	UNUSED						ALL
	G02		W0141	319R	22		27-41-21	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00600

Page 44

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00667B		//		PLUG-PART B OF D00667 (continued)				ALL
	G03		W0141	319B	22		27-41-21	ALL
	G04		W0141	319Y	22		27-41-21	ALL
	G05	UNUSED						ALL
	G06	UNUSED						ALL
	G07	UNUSED						ALL
	G08		W0151	170	22		27-41-21	ALL
	G09		W0151	171	22		27-41-21	ALL
	G10		W0151	172	22		27-41-21	ALL
	G11		W0151	173	22		27-41-21	ALL
	G12		W0151	174	22		27-41-21	ALL
	G13		W0151	175	22		27-41-21	ALL
	G14		W0151	176	22		27-41-21	ALL
	G15		W0151	177	22		27-41-21	ALL
	H01	UNUSED						ALL
	H02		W0141	318R	22		27-41-21	ALL
	H03		W0141	318B	22		27-41-21	ALL
	H04		W0141	318Y	22		27-41-21	ALL
	H05		W0151	032	22		27-09-13	ALL
	H06		W0151	033	22		27-09-13	ALL
	H07	UNUSED						ALL
	H08		W0151	116	22		27-41-21	ALL
	H09	UNUSED						ALL
	H10		W0151	118	22		27-41-21	ALL
	H11		W0151	179	22		27-41-21	ALL
	H12	UNUSED						ALL
	H13		W0151	067	22		27-41-21	050-099
	H13	UNUSED						150-199, 275-299
	H14	UNUSED						ALL
	H15		W0151	005	22		22-24-21	ALL
	J01	UNUSED						ALL
	J02		W0141	317R	22		27-41-21	ALL
	J03		W0141	317B	22		27-41-21	ALL
	J04		W0141	317Y	22		27-41-21	ALL
	J05	UNUSED						ALL
	J06	UNUSED						ALL
	J07	UNUSED						ALL
	J08	UNUSED						ALL
	J09	UNUSED						ALL
	J10	UNUSED						ALL
	J11	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00600

Page 45

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00667B		//		PLUG-PART B OF D00667 (continued)				ALL
	J12		W0151	178	22		27-61-17	ALL
	J13	UNUSED						ALL
	J14		W0151	003	22		22-22-21	ALL
	J15		W0151	002	22		22-22-21	ALL
	K01	UNUSED						ALL
	K02		W0141	316R	22		27-41-21	ALL
	K03		W0141	316B	22		27-41-21	ALL
	K04		W0141	316Y	22		27-41-21	ALL
	K05	UNUSED						ALL
	K06	UNUSED						ALL
	K07	UNUSED						ALL
	K08	UNUSED						ALL
	K09	UNUSED						ALL
	K10	UNUSED						ALL
	K11	UNUSED						ALL
	K12		W0151	023	22		27-09-12	ALL
	K13	UNUSED						ALL
	K14		W0151	201R	24		22-22-21	ALL
	K15		W0151	201B	24		22-22-21	ALL
	DED		W0151	201Z			22-22-21	ALL
	DED		W1131	025Z			27-11-22	ALL
	DED		W1131	026Z			27-11-22	ALL
D00667C		//		PLUG-PART C OF D00667				ALL
	1	UNUSED						ALL
	2		W0151	125	16		27-41-21	ALL
	3		W0151	124	16		27-41-21	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W0151	128	16		27-41-21	ALL
	8		W0151	127	16		27-41-21	ALL
	9		W0151	196	16		27-11-22	ALL
	10		W0151	129	16		27-41-21	ALL
	11		W0151	126	16		27-41-21	ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	= C12	UNUSED						ALL
	= C13	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00600

Page 46

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00668		0810/123/R035		PLUG-				ALL
	1		W0952	011	18		21-51-21	ALL
	2		W0952	010	20		21-51-21	ALL
D00670		0805/122/L027		PLUG-				ALL
	1		W0508	002	18		21-51-11	ALL
	2		W0508	001	20		21-51-11	ALL
D00674		0839/121/L060		PLUG-				ALL
	1	DK	W0938	009	18		21-53-11	ALL
	2		W0938	004	20		21-53-11	ALL
	3		W0938	003	20		21-53-11	ALL
	4		W0938	305Y	20		21-51-12	ALL
	5		W0938	305R	20		21-51-12	ALL
	6		W0938	305B	20		21-51-12	ALL
	7		W0938	304B	20		21-52-11	ALL
	8		W0938	304R	20		21-52-11	ALL
	9		W0938	304Y	20		21-52-11	ALL
	10		W0938	303B	20		21-53-11	ALL
	11		W0938	303R	20		21-53-11	ALL
	12		W0938	303Y	20		21-53-11	ALL
	13		W0938	015	20		21-53-12	ALL
	14	UNUSED						ALL
	15	DK	W0938	016	18		21-53-12	ALL
	16		W0938	017	20		21-53-12	ALL
	17	UNUSED						ALL
	18	DK	W0938	018	18		21-53-12	ALL
	19	DK	W0938	019	18		21-53-12	ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D00676		0875/120/L045		PLUG-				ALL
	1		W0938	005	20		21-53-11	ALL
	2		W0938	006	20		21-53-11	ALL
	3	DK	W0938	007	18		21-53-11	ALL
	4		W0938	301R	20		21-53-11	ALL
	5		W0938	301B	20		21-53-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00600

Page 47

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00676		0875/120/L045		PLUG- (continued)				ALL
	6		W0938	010	20		21-53-12	ALL
	7	UNUSED						ALL
	8	DK	W0938	011	18		21-53-12	ALL
	9		W0938	012	20		21-53-12	ALL
	10	UNUSED						ALL
	11	DK	W0938	013	18		21-53-12	ALL
	12		W0938	301Y	20		21-53-11	ALL
	13	DK	W0938	014	18		21-53-12	ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
D00678		0879/130/L040		PLUG-				ALL
	1		W0508	305B	20		21-52-11	ALL
	2		W0508	302B	20		21-51-12	ALL
	3		W0508	305R	20		21-52-11	ALL
	4		W0508	302R	20		21-51-12	ALL
	5		W0508	305Y	20		21-52-11	ALL
	6		W0508	302Y	20		21-51-12	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D00680		0805/124/L030		PLUG-				ALL
	A		W0508	201B	20		21-52-31	ALL
	B		W0508	004	20		21-52-31	ALL
D00682		0935/119/L035		PLUG-				ALL
	1	DK	W0938	008	18		21-53-11	ALL
	2		W0938	002	20		21-53-11	ALL
	3		W0938	001	20		21-53-11	ALL
	4		W0938	306Y	20		21-51-12	ALL
	5		W0938	306R	20		21-51-12	ALL
	6		W0938	306B	20		21-51-12	ALL
	7		W0938	307B	20		21-52-11	ALL
	8		W0938	307R	20		21-52-11	ALL
	9		W0938	307Y	20		21-52-11	ALL
	10		W0938	302B	20		21-53-11	ALL

HOOKUP LIST
D280T132

91-21-51
Section D00600
Page 48
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00682		0935/119/L035		PLUG- (continued)				ALL
	11		W0938	302R	20		21-53-11	ALL
	12		W0938	302Y	20		21-53-11	ALL
	13		W0938	020	20		21-53-12	ALL
	14	UNUSED						ALL
	15	DK	W0938	021	18		21-53-12	ALL
	16		W0938	022	20		21-53-12	ALL
	17	UNUSED						ALL
	18	DK	W0938	023	18		21-53-12	ALL
	19	DK	W0938	024	18		21-53-12	ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D00688		0879/125/L040		PLUG-				ALL
	1		W0508	202B	20		21-51-12	ALL
	2		W0508	202R	20		21-51-12	ALL
D00690		0588/120/R048		RCPT-				ALL
	1		W0702	131	20		25-53-17	ALL
	2		W0702	132	20		25-53-17	ALL
	3		W0702	133	20		25-53-17	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12		W0702	134	20		25-53-17	ALL
	13	UNUSED						ALL
	14		W0702	135	20		25-53-17	ALL
	15	UNUSED						ALL
D00692		P049-00/ /		RELAY SOCKET-E6-1				ALL
	A1		W0030	003	24		38-15-11	ALL
	A2		W0030	020	24		38-15-11	ALL
	A3		W0030	002	24		38-15-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00600

Page 49

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00692		P049-00/ /		RELAY SOCKET-E6-1 (continued)				ALL
	B1	UNUSED						ALL
	B2	UNUSED						ALL
	B3	UNUSED						ALL
	X1		W0030	004	24		38-15-11	ALL
	X2		W0030	005	20		38-15-11	ALL
D00694		P049-00/ /		RELAY SOCKET-E6-1				ALL
	A1		W0030	038	24		21-44-11	ALL
	A2		W0030	014	22		21-44-11	ALL
	A3	UNUSED						ALL
	B1		W0030	031	24		21-44-11	ALL
	B2		W0030	015	24		21-44-11	ALL
	B3		W0030	032	24		21-44-11	ALL
	X1		W0030	091	24		21-44-11	ALL
	X2		W0030	030	24		21-44-11	ALL
	DED		W0030	030Z			21-44-11	ALL
D00695		0180/190/L015		PLUG-				ALL
	A	\$D	W1297	001	20		27-32-11	ALL
	B	\$D	W1297	002	20		27-32-11	ALL
D00696		0845/123/L060		PLUG-				ALL
	1		W0508	203R	20		21-52-41	ALL
	2		W0508	203B	20		21-52-41	ALL
	3		W0508	401Y	20		21-52-41	ALL
	4		W0508	401G	20		21-52-41	ALL
	5		W0508	401B	20		21-52-41	ALL
	6		W0508	401R	20		21-52-41	ALL
	7	UNUSED						ALL
	8		W0508	206R	20		21-52-41	ALL
	9		W0508	206B	20		21-52-41	ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	DK	W0508	007	18		21-52-41	ALL
D00697		0200/280/0000		PLUG-				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W0459	306R	24		31-51-31	ALL
	4		W0459	014	24		31-51-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00600

Page 50

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00697		0200/280/0000		PLUG- (continued)				ALL
	5		W0459	306B	24		31-51-31	ALL
	6		W0459	306Y	24		31-51-31	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	DED		W0459	306Z			31-51-31	ALL
D00698		0823/113/L015		PLUG-				ALL
	1		W0508	008	20		21-61-11	ALL
	2		W0508	051	20		21-61-11	ALL
	3		W0508	010	20		21-61-11	ALL
	4		W0508	303B	20		21-61-11	ALL
	5		W0508	303R	20		21-61-11	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10		W0508	009	20		21-61-11	ALL
	11		W0508	052	20		21-61-11	ALL
	12		W0508	303Y	20		21-61-11	ALL
	13		W0508	011	20		21-61-11	ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
D00699		0200/280/R020		PLUG-				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W0449	302R	24		31-51-32	ALL
	4		W0449	004	24		31-51-12	ALL
	5		W0449	302B	24		31-51-32	ALL
	6		W0449	302Y	24		31-51-32	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00600

Page 51

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00699		0200/280/R020		PLUG- (continued)				ALL
	DED		W0449	302Z			31-51-32	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00600
Page 52 End
Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00700		0827/118/L015		PLUG-				050-099
D00700		0823/120/L015		PLUG-				150-199, 275-299
	1		W0508	016	20		21-61-31	ALL
	2		W0508	056	20		21-61-31	ALL
	3		W0508	018	20		21-61-31	ALL
	4		W0508	306B	20		21-61-31	ALL
	5		W0508	306R	20		21-61-31	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10		W0508	017	20		21-61-31	ALL
	11		W0508	055	20		21-61-31	ALL
	12		W0508	306Y	20		21-61-31	ALL
	13		W0508	019	20		21-61-31	ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
D00702		0869/120/L010		PLUG-				ALL
	1		W0938	033	20		21-61-51	ALL
	2	DK	W0938	034	18		21-61-51	ALL
	3	DK	W0938	035	18		21-61-51	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
D00704		1550/148/L049		PLUG-				ALL
	1		W0978	301Y	22		21-31-31	ALL
	2		W0978	301R	22		21-31-31	ALL
	3		W0978	301B	22		21-31-31	ALL
	4	UNUSED						ALL
	5		W0978	201R	24		21-31-11	ALL
	6		W0978	201B	24		21-31-11	ALL
	7	UNUSED						ALL
	8		W0978	202R	24		21-31-21	ALL
	9		W0978	202B	24		21-31-21	ALL
	10	UNUSED						ALL
	11		W0978	001	20		21-31-11	ALL
	12	UNUSED						ALL
D00706		1358/180/L075		PLUG-				ALL
	1		W0580	108	24		21-44-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00700

Page 1

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00706		1358/180/L075		PLUG- (continued)				ALL
	2		W0580	109	24		21-44-11	ALL
	3		W0580	091	20		21-44-11	ALL
	4		W0580	090	20		21-44-11	ALL
	5		W0580	092	22		21-44-11	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
D00708		1251/123/R001		PLUG-				ALL
	1		W0934	002	24		21-44-11	ALL
	2		W0934	003	20		21-44-11	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
D00710		0823/129/L015		PLUG-				050-099
D00710		0823/127/L015		PLUG-				150-199, 275-299
	1		W0508	012	20		21-61-21	ALL
	2		W0508	053	20		21-61-21	ALL
	3		W0508	014	20		21-61-21	ALL
	4		W0508	304B	20		21-61-21	ALL
	5		W0508	304R	20		21-61-21	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10		W0508	013	20		21-61-21	ALL
	11		W0508	054	20		21-61-21	ALL
	12		W0508	304Y	20		21-61-21	ALL
	13		W0508	015	20		21-61-21	ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
D00711		P003-01/ /		PLUG-				ALL
	1		W0031	144	20		33-13-13	050-099, 150-199, 275-278
	1	UNUSED						280-299
	2		W0031	145	20		33-13-13	050-099, 150-199, 275-278
	2	UNUSED						280-299
	3		W0031	039	22		34-13-21	ALL
	4		W0031	038	20		34-13-21	ALL
	5	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D00700
Page 2
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00711		P003-01/ /		PLUG- (continued)				ALL
	6	UNUSED						ALL
	7		W0031	037	20		34-13-21	ALL
	8		W0031	166	22		34-13-21	ALL
	9	UNUSED						ALL
	10		W0031	036	20		34-13-21	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24		W0031	231R	24		22-14-21	ALL
	25		W0031	231B	24		22-14-21	ALL
	26		W0031	241R	24		34-13-21	ALL
	27		W0031	241B	24		34-13-21	ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30		W0031	225R	24		34-13-21	ALL
	31		W0031	225B	24		34-13-21	ALL
	DED		W0031	225Z			34-13-21	ALL
	DED		W0031	231Z			22-14-21	ALL
	DED		W0031	241Z			34-13-21	ALL
D00712		P049-00/ /		RELAY SOCKET-				ALL
	A1		W0030	029	18		38-15-11	ALL
	A2		W0030	012	18		38-15-11	ALL
	A3	UNUSED						ALL
	B1		W0030	028	18		38-15-11	ALL
	B2		W0030	011	18		38-15-11	ALL
	B3	UNUSED						ALL
	C1		W0030	027	18		38-15-11	ALL
	C2		W0030	010	18		38-15-11	ALL
	C3	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00700

Page 3

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00712		P049-00/ /		RELAY SOCKET- (continued)				ALL
	D1	UNUSED						ALL
	D2	UNUSED						ALL
	D3	UNUSED						ALL
	G1	UNUSED						ALL
	G2		W0030	PA1			99-99-99	ALL
	G3		W0030	PA1			99-99-99	ALL
	X1		W0030	025	22		38-15-11	ALL
	X2		W0030	026	22		38-15-11	ALL
D00715		P003-03/ /		PLUG-				ALL
	1		W0031	132	20		33-13-13	ALL
	2		W0031	133	20		33-13-13	ALL
	3		W0031	047	22		34-13-21	ALL
	4		W0031	046	20		34-13-21	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W0031	045	20		34-13-21	ALL
	8		W0031	165	22		34-13-21	ALL
	9		W0031	086	22		33-16-15	ALL
	10		W0031	044	20		34-13-21	ALL
	11		W0031	085	22		33-16-15	ALL
	12		W0031	048	24		34-13-21	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19		W0031	301R	24		34-12-21	ALL
	20		W0031	301B	24		34-12-21	ALL
	21		W0031	301Y	24		34-12-21	ALL
	22		W0031	224R	22		34-12-21	ALL
	23		W0031	224B	22		34-12-21	ALL
	24		W0031	308R	24		34-12-11	ALL
	25		W0031	308B	24		34-12-11	ALL
	26		W0031	308Y	24		34-12-11	ALL
	27		W0031	204R	22		34-12-11	ALL
	28		W0031	204B	22		34-12-11	ALL
	29	UNUSED						ALL
	30		W0031	228R	24		34-13-21	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00700

Page 4

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00715		P003-03/ /		PLUG- (continued)				ALL
	31		W0031	228B	24		34-13-21	ALL
	32	UNUSED						ALL
	33		W0031	242R	24		34-13-21	ALL
	34		W0031	242B	24		34-13-21	ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38		W0031	167	20		34-13-21	ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	DED		W0031	085Z			33-16-15	ALL
	DED		W0031	086Z			33-16-15	ALL
	DED		W0031	204Z			34-12-11	ALL
	DED		W0031	228Z			34-13-21	ALL
	DED		W0031	242Z			34-13-21	ALL
D00716		P011-00/ /		RELAY SOCKET				ALL
	A1		W0040	714	22		74-31-21	ALL
	A2		W0040	718	22		74-31-21	ALL
	A3		W0040	713	22		74-31-11	ALL
	B1		W0040	712	22		74-31-21	ALL
	B2		W0040	718	22		74-31-21	ALL
	B3		W0040	711	22		74-31-21	ALL
	C1	UNUSED						ALL
	C2	UNUSED						ALL
	C3	UNUSED						ALL
	D1	UNUSED						ALL
	D2		W0040	717	24		74-31-11	ALL
	D3		W0040	710	20		74-31-11	ALL
	X1		W0040	715	24		74-31-11	ALL
	X2		W0040	716	20		74-31-11	ALL
	DED		W0040	711Z			74-31-21	ALL
	DED		W0040	712Z			74-31-21	ALL
	DED		W0040	714Z			74-31-21	ALL
	DED		W0040	718Z			74-31-21	ALL
D00717		P003-03/ /		PLUG-				050-099, 153-154
D00717		P003-03/ /		PLUG- (MTO 340652)				150-152, 155-199, 275-299
	1	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00700

Page 5

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00717		P003-03/ /		PLUG- (continued)				050-099, 153-154
D00717		P003-03/ /		PLUG- (MTO 340652) (continued)				150-152, 155-199, 275-299
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8		W0031	005	24		34-22-92	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18		W0011	901	22		34-22-92	050-099
	18		W0031	901	22		34-22-92	050-099, 150-152, 155-199, 275-299
	18	UNUSED						153-154
	19	UNUSED						ALL
	20		W0031	003	20		34-22-92	ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25		W0031	259R	24		34-45-14	ALL
	26		W0031	209R	24		34-22-92	ALL
	27	UNUSED						ALL
	28		W0031	757	22		34-45-14	ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37		W0011	901	22		34-22-92	050-099
	37		W0031	901	22		34-22-92	050-099, 150-152, 155-199, 275-299

HOOKUP LIST
D280T132

91-21-51
Section D00700
Page 6
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00717		P003-03/ /		PLUG- (continued)				050-099, 153-154
D00717		P003-03/ /		PLUG- (MTO 340652) (continued)				150-152, 155-199, 275-299
	37	UNUSED						153-154
	38		W0031	002	20		34-22-92	ALL
	39	UNUSED						ALL
	40		W0031	001	22		34-22-92	ALL
	41	UNUSED						ALL
	42		W0031	134	20		33-13-13	ALL
	43		W0031	135	20		33-13-13	ALL
	44		W0031	259B	24		34-45-14	ALL
	45		W0031	209B	24		34-22-92	ALL
	46	UNUSED						050-099, 153-154
	47		W0031	202R	24		34-22-92	ALL
	48		W0031	202B	24		34-22-92	ALL
	49	UNUSED						050-099, 153-154
	50	UNUSED						050-099, 153-154
	51	UNUSED						050-099, 153-154
	52	UNUSED						050-099, 153-154
	53	UNUSED						050-099, 153-154
	54	UNUSED						050-099, 153-154
	= C27	UNUSED						050-099, 153-154
	CAP	Y	W0031	004	20		34-22-92	ALL
	DED		W0031	202Z			34-22-92	ALL
	DED		W0031	209Z			34-22-92	ALL
	DED		W0031	259Z			34-45-14	ALL
D00718		0836/121/R032		PLUG-				ALL
	1	DK	W0612	009	18		21-53-21	ALL
	2		W0612	004	20		21-53-21	ALL
	3		W0612	003	20		21-53-21	ALL
	4		W0612	306Y	20		21-51-22	ALL
	5		W0612	306R	20		21-51-22	ALL
	6		W0612	306B	20		21-51-22	ALL
	7		W0612	305B	20		21-52-21	ALL
	8		W0612	305R	20		21-52-21	ALL
	9		W0612	305Y	20		21-52-21	ALL
	10		W0612	303B	20		21-53-21	ALL
	11		W0612	303R	20		21-53-21	ALL
	12		W0612	303Y	20		21-53-21	ALL
	13		W0612	015	20		21-53-22	ALL
	14	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00700

Page 7

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00718		0836/121/R032		PLUG- (continued)				ALL
	15	DK	W0612	016	18		21-53-22	ALL
	16		W0612	017	20		21-53-22	ALL
	17	UNUSED						ALL
	18	DK	W0612	018	18		21-53-22	ALL
	19	DK	W0612	019	18		21-53-22	ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D00719		P003-03/ /		PLUG-				ALL
	1		W0031	136	20		33-13-13	ALL
	2		W0031	137	20		33-13-13	ALL
	3		W0031	054	24		31-25-11	ALL
	4		W0031	056	20		31-25-11	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W0031	055	20		31-25-11	ALL
	8		W0031	058	24		31-25-11	ALL
	9		W0031	057	20		31-25-11	ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13		W0031	302R	24		31-25-11	ALL
	14		W0031	302B	24		31-25-11	ALL
	15		W0031	302Y	24		31-25-11	ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23		W0031	232B	24		34-61-24	ALL
	24		W0031	232R	24		34-61-24	ALL
	DED		W0031	232Z			34-61-24	ALL
	REF		W0031	302	20		31-25-11	275-299
	REF		W0031	302Z			31-25-11	275-299
			W0031	302	20		31-25-11	050-099, 150-199

HOOKUP LIST

D280T132

91-21-51

Section D00700

Page 8

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00719		P003-03/ /		PLUG- (continued)				ALL
			W0031	302Z			31-25-11	050-099, 150-199
D00722		0869/126/R043		PLUG-				ALL
	1		W0612	005	20		21-53-21	ALL
	2		W0612	006	20		21-53-21	ALL
	3	DK	W0612	007	18		21-53-21	ALL
	4		W0612	301R	20		21-53-21	ALL
	5		W0612	301B	20		21-53-21	ALL
	6		W0612	010	20		21-53-22	ALL
	7	UNUSED						ALL
	8	DK	W0612	011	18		21-53-22	ALL
	9		W0612	012	20		21-53-22	ALL
	10	UNUSED						ALL
	11	DK	W0612	013	18		21-53-22	ALL
	12		W0612	301Y	20		21-53-21	ALL
	13	DK	W0612	014	18		21-53-22	ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
D00723		P005-00/ /		PLUG				ALL
	1		W1307	055	20		33-13-16	ALL
	2		W1307	056	20		33-13-16	ALL
	3		W1307	030	22		33-16-17	ALL
	4		W1307	031	22		33-16-17	ALL
	5		W1307	001	20		22-21-11	ALL
	6		W1307	009	20		22-21-11	ALL
	7		W1307	002	22		22-21-11	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12		W1307	032	20		22-21-11	ALL
D00724		0875/124/R043		PLUG-				ALL
	1		W0952	301B	20		21-52-21	ALL
	2		W0952	302B	20		21-51-22	ALL
	3		W0952	301R	20		21-52-21	ALL
	4		W0952	302R	20		21-51-22	ALL
	5		W0952	301Y	20		21-52-21	ALL
	6		W0952	302Y	20		21-51-22	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00700

Page 9

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00724		0875/124/R043		PLUG- (continued)				ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D00725		P005-00/ /		PLUG-				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W1309	006	22		33-16-17	ALL
	4		W1309	007	22		33-16-17	ALL
	5		W1309	002	20		22-21-21	ALL
	6		W1309	001	20		22-21-21	ALL
	7		W1309	003	22		22-21-21	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12		W1309	010	20		22-21-21	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
D00726		0807/126/R026		PLUG-				ALL
	A		W0952	201B	20		21-52-31	ALL
	B		W0952	013	20		21-52-31	ALL
D00728		0935/115/R043		PLUG-				ALL
	1	DK	W0612	008	18		21-53-21	ALL
	2		W0612	002	20		21-53-21	ALL
	3		W0612	001	20		21-53-21	ALL
	4		W0612	307Y	20		21-51-22	ALL
	5		W0612	307R	20		21-51-22	ALL
	6		W0612	307B	20		21-51-22	ALL
	7		W0612	308B	20		21-52-21	ALL
	8		W0612	308R	20		21-52-21	ALL
	9		W0612	308Y	20		21-52-21	ALL
	10		W0612	302B	20		21-53-21	ALL
	11		W0612	302R	20		21-53-21	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00700

Page 10

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00728		0935/115/R043		PLUG- (continued)				ALL
	12		W0612	302Y	20		21-53-21	ALL
	13		W0612	020	20		21-53-22	ALL
	14	UNUSED						ALL
	15	DK	W0612	021	18		21-53-22	ALL
	16		W0612	022	20		21-53-22	ALL
	17	UNUSED						ALL
	18	DK	W0612	023	18		21-53-22	ALL
	19	DK	W0612	024	18		21-53-22	ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D00731		P005-00/ I		PLUG-P5				ALL
	A		W0627	012	24		23-71-11	ALL
	B		W0627	013	24		23-71-11	ALL
	C		W0627	014	22		23-71-11	ALL
	D		W0627	015	24		23-71-11	ALL
	E		W0627	016	24		23-71-11	ALL
	F		W0627	004	20		23-71-11	ALL
	G		W0627	009	24		23-71-11	ALL
	H		W0627	008	24		23-71-11	ALL
	J	UNUSED						ALL
	K		W0627	010Z			23-71-11	ALL
	L		W0627	010	24		23-71-11	ALL
	M		W0627	201Z			23-71-11	ALL
	N		W0627	201R	24		23-71-11	ALL
	P		W0627	201B	24		23-71-11	ALL
	R	UNUSED						ALL
	S	UNUSED						ALL
	T	UNUSED						ALL
	U	UNUSED						ALL
	V		W0627	006Z			23-71-11	ALL
	W		W0627	006	24		23-71-11	ALL
	X	UNUSED						ALL
	Y		W0627	011	20		33-13-16	ALL
	Z		W0627	017	20		33-13-16	ALL
	DED		W0627	201Z			23-71-11	ALL
	A-	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00700

Page 11

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00731		P005-00/ /		PLUG-P5 (continued)				ALL
	B-	UNUSED						ALL
	C-	UNUSED						ALL
	D-	UNUSED						ALL
	E-	UNUSED						ALL
	F-		W0627	201R	24		23-71-11	ALL
	G-		W0627	201B	24		23-71-11	ALL
	H-		W0627	023	24		23-71-11	ALL
	I-		W0627	024	24		23-71-11	ALL
	J-		W0627	022	24		23-71-11	ALL
	K-	UNUSED						ALL
	M-	UNUSED						ALL
	N-	UNUSED						ALL
	P-		W0627	003	24		23-71-11	ALL
	Q-		W0627	002	24		23-71-11	ALL
	R-		W0627	001	24		23-71-11	ALL
	S-	UNUSED						ALL
	T-	UNUSED						ALL
D00733		P005-00/ /		PLUG-				ALL
	1	DK	W0683	001	18		33-13-16	ALL
	2	DK	W0683	002	18		33-13-16	ALL
	3		W0683	003	22		23-11-11	ALL
	4		W0683	004	20		23-11-11	ALL
	5		W0683	005	24		23-11-11	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9		W0683	201R	24		23-11-11	ALL
	10		W0683	201B	24		23-11-11	ALL
	11		W0683	FRA			23-11-11	ALL
	12	UNUSED						ALL
	13		W0683	013	24		23-11-11	ALL
	14		W0683	014	24		23-11-11	ALL
	15		W0683	FRB			23-11-11	ALL
			W0683	201	20		23-11-11	ALL
			W0683	201Z			23-11-11	ALL
			W0683	FRA			23-11-11	ALL
			W0683	FRB			23-11-11	ALL

HOOKUP LIST
D280T132

91-21-51
Section D00700
Page 12
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00734		0870/123/R064		PLUG-				ALL
	1		W0952	202R	20		21-52-41	ALL
	2		W0952	202B	20		21-52-41	ALL
	3		W0952	401Y	20		21-52-41	ALL
	4		W0952	401G	20		21-52-41	ALL
	5		W0952	401B	20		21-52-41	ALL
	6		W0952	401R	20		21-52-41	ALL
	7	UNUSED						ALL
	8		W0952	206R	20		21-52-41	ALL
	9		W0952	206B	20		21-52-41	ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	DK	W0952	015	18		21-52-41	ALL
D00735		P005-00/ /		PLUG-				ALL
	1		W0863	034	20		33-13-16	ALL
	2		W0863	035	20		33-13-16	ALL
	3		W0863	019	24		23-21-11	ALL
	4		W0863	020	24		23-21-11	ALL
	5	UNUSED						ALL
	6		W0863	022	24		23-21-11	ALL
	7		W0863	023	24		23-21-11	ALL
	8		W0863	029	24		23-21-11	ALL
	9		W0863	030	24		23-21-11	ALL
	10	UNUSED						ALL
	11		W0863	032	24		23-21-11	ALL
	12		W0863	033	24		23-21-11	ALL
	13		W0863	024	24		23-21-11	ALL
	14		W0863	025	24		23-21-11	ALL
	15	UNUSED						ALL
	16		W0863	027	24		23-21-11	ALL
	17		W0863	028	24		23-21-11	ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20		W0863	001	22		23-42-11	ALL
	21		W0863	005	22		23-42-11	ALL
	22	UNUSED						ALL
	23		W0863	002	22		23-42-11	ALL
	24		W0863	005Z			23-42-11	ALL
	25	UNUSED						ALL
	26		W0863	003	22		23-42-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00700

Page 13

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00735		P005-00/ /		PLUG- (continued)				ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29		W0863	004	22		23-42-11	ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32		W0863	014	22		31-51-33	ALL
	33		W0863	018	22		23-43-11	ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						050-099, 150-199, 275-278
	36		W0863	012	22		23-42-11	280-299
	37		W0863	013	20		23-43-11	ALL
	38		W0863	017	22		23-43-11	ALL
	39		W0863	015	22		23-43-11	ALL
	40		W0863	036	22		33-16-17	ALL
	41		W0863	037	22		33-16-17	ALL
	42		W0863	007	24		21-58-11	ALL
	43	UNUSED						ALL
	44		W0863	016	22		23-43-11	ALL
	45		W0863	006	24		21-58-11	ALL
	46		W0863	046	22		23-42-11	ALL
	47		W0863	068	22		23-42-11	050-099, 162-199
	47	UNUSED						150-157, 275-299
	48		W0863	048	24		23-21-11	ALL
	49		W0863	049	24		23-21-11	ALL
	50		W0863	038	24		23-22-11	ALL
	51		W0863	051	24		23-21-11	ALL
	52		W0863	069	22		23-42-11	050-099, 162-199
	52	UNUSED						150-157, 275-299
	53		W0863	070	22		23-42-11	050-099, 162-199
	53	UNUSED						150-157, 275-299
	54		W0863	071	22		23-42-11	050-099, 162-199
	54	UNUSED						150-157, 275-299
	55	UNUSED						ALL
	DED		W0863	006Z			21-58-11	ALL
	DED		W0863	036Z			33-16-17	ALL
	DED		W0863	037Z			33-16-17	ALL
D00736		0890/124/R044		PLUG-				ALL
	1		W0952	203B	20		21-51-22	ALL

HOOKUP LIST
D280T132

91-21-51
Section D00700
Page 14
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00736		0890/124/R044		PLUG- (continued)				ALL
	2		W0952	203R	20		21-51-22	ALL
D00737		P005-00/ /		PLUG-P5				ALL
	1		W0675	001	20		33-13-16	ALL
	2		W0675	002	20		33-13-16	ALL
	3		W0675	003	22		23-11-21	ALL
	4		W0675	004	20		23-11-21	ALL
	5		W0675	005	24		23-11-21	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9		W0675	201R	24		23-11-21	ALL
	10		W0675	201B	24		23-11-21	ALL
	11		W0675	FRA			23-11-21	ALL
	12	UNUSED						ALL
	13		W0675	013	24		23-11-21	ALL
	14		W0675	014	24		23-11-21	ALL
	15		W0675	FRB			23-11-21	ALL
			W0675	201	20		23-11-21	ALL
			W0675	201Z			23-11-21	ALL
			W0675	FRA			23-11-21	ALL
			W0675	FRB			23-11-21	ALL
D00739		P005-00/ /		PLUG-IRS-L SEL PNL				ALL
	1		W0751	001	20		33-13-16	ALL
	2		W0751	002	20		33-13-16	ALL
	3		W0751	003	20		34-21-11	ALL
	4		W0751	004	20		34-21-11	ALL
	5		W0751	005	20		34-21-11	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8		W0751	008	20		34-21-11	ALL
	9	UNUSED						ALL
	10		W0751	010	22		33-16-17	ALL
	11		W0751	019	22		33-16-17	ALL
	12		W0751	012	24		34-21-11	ALL
	13		W0751	013	24		34-21-11	ALL
	14		W0751	014	22		34-21-11	ALL
	15		W0751	015	22		34-21-11	ALL
	16		W0751	016	22		34-21-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00700

Page 15

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00739		P005-00/ /		PLUG-IRS-L SEL PNL (continued)				ALL
	17		W0751	017	22		34-21-11	ALL
	18		W0751	018	22		33-16-17	ALL
	19		W0751	021	24		21-58-11	ALL
	20		W0751	020	24		21-58-11	ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24		W0751	202R	24		34-21-11	ALL
	25		W0751	202B	24		34-21-11	ALL
	26		W0751	201R	24		34-21-11	ALL
	27		W0751	201B	24		34-21-11	ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	REF		W0751	201	20		34-21-11	ALL
	REF		W0751	201Z			34-21-11	ALL
	REF		W0751	202	20		34-21-11	ALL
	REF		W0751	202Z			34-21-11	ALL
D00741		P005-00/ /		PLUG-IRS-R SEL PNL				ALL
	1		W0725	023	20		33-13-16	ALL
	2		W0725	022	20		33-13-16	ALL
	3		W0725	003	20		34-21-21	ALL
	4		W0725	004	20		34-21-21	ALL
	5		W0725	005	20		34-21-21	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8		W0725	008	20		34-21-21	ALL
	9	UNUSED						ALL
	10		W0725	010	22		33-16-17	ALL
	11		W0725	019	22		33-16-17	ALL
	12		W0725	012	24		34-21-21	ALL
	13		W0725	013	24		34-21-21	ALL
	14		W0725	014	22		34-21-21	ALL
	15		W0725	015	22		34-21-21	ALL
	16		W0725	016	22		34-21-21	ALL
	17		W0725	017	22		34-21-21	ALL
	18		W0725	018	22		33-16-17	ALL
	19		W0725	021	24		21-58-11	ALL

HOOKUP LIST
D280T132

91-21-51
Section D00700
Page 16
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00741		P005-00/ /		PLUG-IRS-R SEL PNL (continued)				ALL
	20		W0725	020	24		21-58-11	ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24		W0725	202R	24		34-21-21	ALL
	25		W0725	202B	24		34-21-21	ALL
	26		W0725	201R	24		34-21-21	ALL
	27		W0725	201B	24		34-21-21	ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	DED		W0725	010Z			33-16-17	150-154, 275-299
	DED		W0725	019Z			33-16-17	150-154, 275-299
	REF		W0725	201	20		34-21-21	ALL
	REF		W0725	201Z			34-21-21	ALL
	REF		W0725	202	20		34-21-21	ALL
	REF		W0725	202Z			34-21-21	ALL
D00742		NL180/160/L8 D		PLUG-STRUT				ALL
	1		W0376	100	18		30-21-11	ALL
	2		W0376	101	18		30-21-11	ALL
	3	UNUSED						ALL
D00743		P005-00/ /		PLUG-IRS-C, SEL PNL				ALL
	1		W0723	023	20		33-13-16	ALL
	2		W0723	022	20		33-13-16	ALL
	3		W0723	003	20		34-21-31	ALL
	4		W0723	004	20		34-21-31	ALL
	5		W0723	005	20		34-21-31	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8		W0723	008	20		34-21-31	ALL
	9	UNUSED						ALL
	10		W0723	010	22		33-16-17	ALL
	11		W0723	019	22		33-16-17	ALL
	12		W0723	012	24		34-21-31	ALL
	13		W0723	013	24		34-21-31	ALL
	14		W0723	014	22		34-21-31	ALL
	15		W0723	015	22		34-21-31	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00700

Page 17

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00743		P005-00/ /		PLUG-IRS-C, SEL PNL (continued)				ALL
	16		W0723	016	22		34-21-31	ALL
	17		W0723	017	22		34-21-31	ALL
	18		W0723	018	22		33-16-17	ALL
	19		W0723	021	24		21-58-11	ALL
	20		W0723	020	24		21-58-11	ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24		W0723	202R	24		34-21-31	ALL
	25		W0723	202B	24		34-21-31	ALL
	26		W0723	201R	24		34-21-31	ALL
	27		W0723	201B	24		34-21-31	ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	DED		W0723	010Z			33-16-17	ALL
	DED		W0723	019Z			33-16-17	ALL
	REF		W0723	201	20		34-21-31	ALL
	REF		W0723	201Z			34-21-31	ALL
	REF		W0723	202	20		34-21-31	ALL
	REF		W0723	202Z			34-21-31	ALL
D00744		1550/148/L049		PLUG-				ALL
	1		W0998	001	20		21-31-31	ALL
	2		W0998	002	20		21-31-31	ALL
	3		W0998	003	20		21-31-31	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
D00745A		//		PLUG-PART OF D00745				ALL
	A01		W1103	288R	24		22-41-11	ALL
	A02	UNUSED						ALL
	A03		W1103	282R	24		22-32-12	ALL
	A04		W1103	284R	24		22-41-11	ALL
	A05	UNUSED						ALL
	A06	UNUSED						ALL
	A07	UNUSED						ALL
	A08	UNUSED						ALL
	A09		W1103	286R	24		22-41-12	ALL

HOOKUP LIST
D280T132

91-21-51
Section D00700
Page 18
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00745A		//		PLUG-PART OF D00745 (continued)				ALL
	A10		W1103	287R	24		22-41-12	ALL
	A11		W1103	281R	24		22-41-12	ALL
	A12	UNUSED						ALL
	A13	UNUSED						ALL
	A14	UNUSED						ALL
	A15		W1103	280R	24		22-41-11	ALL
	B01		W1103	288B	24		22-41-11	ALL
	B02	UNUSED						ALL
	B03		W1103	282B	24		22-32-12	ALL
	B04		W1103	284B	24		22-41-11	ALL
	B05	UNUSED						ALL
	B06		W1103	088	24		22-41-11	ALL
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09		W1103	286B	24		22-41-12	ALL
	B10		W1103	287B	24		22-41-12	ALL
	B11		W1103	281B	24		22-41-12	ALL
	B12	UNUSED						ALL
	B13	UNUSED						ALL
	B14		W1103	088	24		22-41-11	ALL
	B15		W1103	280B	24		22-41-11	ALL
	C01	UNUSED						ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05	UNUSED						ALL
	C06	UNUSED						ALL
	C07	UNUSED						ALL
	C08	UNUSED						ALL
	C09		W1103	064	24		22-41-11	ALL
	C10		W1103	067	24		22-41-11	ALL
	C11		W1103	060	24		22-41-11	ALL
	C12	UNUSED						ALL
	C13	UNUSED						ALL
	C14	UNUSED						ALL
	C15	UNUSED						ALL
	D01	UNUSED						ALL
	D02	UNUSED						ALL
	D03	UNUSED						ALL
	D04		W1103	062	22		22-41-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00700

Page 19

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00745A		//		PLUG-PART OF D00745 (continued)				ALL
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	D08	UNUSED						ALL
	D09	UNUSED						ALL
	D10	UNUSED						ALL
	D11	UNUSED						ALL
	D12	UNUSED						ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15	UNUSED						ALL
	E01	UNUSED						ALL
	E02	UNUSED						ALL
	E03	UNUSED						ALL
	E04	UNUSED						ALL
	E05	UNUSED						ALL
	E06	UNUSED						ALL
	E07	UNUSED						ALL
	E08	UNUSED						ALL
	E09	UNUSED						ALL
	E10	UNUSED						ALL
	E11	UNUSED						ALL
	E12	UNUSED						ALL
	E13	UNUSED						ALL
	E14	UNUSED	W1103	061	22		22-32-12	ALL
	E15	UNUSED						ALL
	F01	UNUSED						ALL
	F02	UNUSED						ALL
	F03	UNUSED						ALL
	F04	UNUSED						ALL
	F05	UNUSED						ALL
	F06	UNUSED	W1103	144	24		22-41-11	ALL
	F07	UNUSED						ALL
	F08	UNUSED						ALL
	F09	UNUSED						ALL
	F10	UNUSED						ALL
	F11	UNUSED						ALL
	F12	UNUSED						ALL
	F13	UNUSED						ALL
	F14	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00700

Page 20

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00745A		//		PLUG-PART OF D00745 (continued)				ALL
	F15	UNUSED						ALL
	G01	UNUSED						ALL
	G02	UNUSED						ALL
	G03	UNUSED						ALL
	G04	UNUSED						ALL
	G05	UNUSED						ALL
	G06	UNUSED						ALL
	G07	UNUSED						ALL
	G08	UNUSED						ALL
	G09	UNUSED						ALL
	G10	UNUSED						ALL
	G11	UNUSED						ALL
	G12	UNUSED						ALL
	G13	UNUSED						ALL
	G14	UNUSED						ALL
	G15	UNUSED						ALL
	H01	UNUSED						ALL
	H02	UNUSED						ALL
	H03	UNUSED						ALL
	H04		W1103	063	22		22-41-11	ALL
	H05	UNUSED						ALL
	H06	UNUSED						ALL
	H07	UNUSED						ALL
	H08	UNUSED						ALL
	H09	UNUSED						ALL
	H10	UNUSED						ALL
	H11	UNUSED						ALL
	H12	UNUSED						ALL
	H13	UNUSED						ALL
	H14		W1103	089	24		22-41-11	ALL
	H15		W1103	144	24		22-41-11	ALL
	J01		W1103	285R	24		22-41-11	ALL
	J02	UNUSED						ALL
	J03	UNUSED						ALL
	J04		W1103	283R	24		22-41-11	ALL
	J05	UNUSED						ALL
	J06	UNUSED						ALL
	J07	UNUSED						ALL
	J08	UNUSED						ALL
	J09	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00700

Page 21

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00745A		//		PLUG-PART OF D00745 (continued)				ALL
	J10	UNUSED						ALL
	J11	UNUSED						ALL
	J12		W1103	079	24		22-41-13	ALL
	J13		W1103	078	24		22-41-13	ALL
	J14		W1103	076	24		22-41-13	ALL
	J15		W1103	519R	24		22-41-13	ALL
	K01		W1103	285B	24		22-41-11	ALL
	K02	UNUSED						ALL
	K03	UNUSED						ALL
	K04		W1103	283B	24		22-41-11	ALL
	K05	UNUSED						ALL
	K06		W1103	089	24		22-41-11	ALL
	K07	UNUSED						ALL
	K08	UNUSED						ALL
	K09	UNUSED						ALL
	K10	UNUSED						ALL
	K11		W1103	084	24		22-41-13	ALL
	K12		W1103	080	24		22-41-13	ALL
	K13		W1103	077	24		22-41-13	ALL
	K14		W1103	085	24		22-41-13	ALL
	K15		W1103	519B	24		22-41-13	ALL
	DED		W1103	063Z			22-41-11	ALL
	DED		W1103	283Z			22-41-11	ALL
	DED		W1103	285Z			22-41-11	ALL
	DED		W1103	288Z			22-41-11	ALL
	DED		W1103	519Z			22-41-13	ALL
	REF		W1103	280	20		22-41-11	ALL
	REF		W1103	280Z			22-41-11	ALL
	REF		W1103	281	20		22-41-12	ALL
	REF		W1103	281Z			22-41-12	ALL
	REF		W1103	282	20		22-32-12	ALL
	REF		W1103	282Z			22-32-12	ALL
	REF		W1103	284	20		22-41-11	ALL
	REF		W1103	284Z			22-41-11	ALL
	REF		W1103	286	20		22-41-12	ALL
	REF		W1103	286Z			22-41-12	ALL
	REF		W1103	287	20		22-41-12	ALL
	REF		W1103	287Z			22-41-12	ALL

HOOKUP LIST

D280T132



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00745B		//		PLUG-PART OF D00745				ALL
	A01	UNUSED						ALL
	A02	UNUSED						ALL
	A03	UNUSED						ALL
	A04	UNUSED						ALL
	A05	UNUSED						ALL
	A06	UNUSED						ALL
	A07	UNUSED						ALL
	A08	UNUSED						ALL
	A09	UNUSED						ALL
	A10	UNUSED						ALL
	A11	UNUSED						ALL
	A12	UNUSED						ALL
	A13	UNUSED						ALL
	A14	UNUSED						ALL
	A15	UNUSED						ALL
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04	UNUSED						ALL
	B05	UNUSED						ALL
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13	UNUSED						ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	C01	UNUSED						ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05	UNUSED						ALL
	C06	UNUSED						ALL
	C07	UNUSED						ALL
	C08	UNUSED						ALL
	C09	UNUSED						ALL
	C10	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00700

Page 23

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00745B		//		PLUG-PART OF D00745 (continued)				ALL
	C11	UNUSED						ALL
	C12	UNUSED						ALL
	C13	UNUSED						ALL
	C14	UNUSED						ALL
	C15	UNUSED						ALL
	D01	UNUSED						ALL
	D02	UNUSED						ALL
	D03	UNUSED						ALL
	D04	UNUSED						ALL
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	D08	UNUSED						ALL
	D09	UNUSED						ALL
	D10	UNUSED						ALL
	D11	UNUSED						ALL
	D12	UNUSED						ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15	UNUSED						ALL
	E01	UNUSED						ALL
	E02	UNUSED						ALL
	E03	UNUSED						ALL
	E04	UNUSED						ALL
	E05	UNUSED						ALL
	E06	UNUSED						ALL
	E07	UNUSED						ALL
	E08	UNUSED						ALL
	E09	UNUSED						ALL
	E10	UNUSED						ALL
	E11	UNUSED						ALL
	E12	UNUSED						ALL
	E13	UNUSED						ALL
	E14	UNUSED						ALL
	E15	UNUSED						ALL
	F01	UNUSED						ALL
	F02	UNUSED						ALL
	F03	UNUSED						ALL
	F04	UNUSED						ALL
	F05	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00700

Page 24

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00745B		//		PLUG-PART OF D00745 (continued)				ALL
	F06	UNUSED						ALL
	F07	UNUSED						ALL
	F08	UNUSED						ALL
	F09	UNUSED						ALL
	F10	UNUSED						ALL
	F11	UNUSED						ALL
	F12	UNUSED						ALL
	F13	UNUSED						ALL
	F14	UNUSED						ALL
	F15	UNUSED						ALL
	G01	UNUSED						ALL
	G02	UNUSED						ALL
	G03	UNUSED						ALL
	G04	UNUSED						ALL
	G05	UNUSED						ALL
	G06	UNUSED						ALL
	G07	UNUSED						ALL
	G08	UNUSED						ALL
	G09	UNUSED						ALL
	G10	UNUSED						ALL
	G11	UNUSED						ALL
	G12	UNUSED						ALL
	G13	UNUSED						ALL
	G14	UNUSED						ALL
	G15	UNUSED						ALL
	H01	UNUSED						ALL
	H02	UNUSED						ALL
	H03	UNUSED						ALL
	H04	UNUSED						ALL
	H05	UNUSED						ALL
	H06	UNUSED						ALL
	H07	UNUSED						ALL
	H08	UNUSED						ALL
	H09	UNUSED						ALL
	H10	UNUSED						ALL
	H11	UNUSED						ALL
	H12	UNUSED						ALL
	H13	UNUSED						ALL
	H14	UNUSED						ALL
	H15	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00700

Page 25

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00745B		//		PLUG-PART OF D00745 (continued)				ALL
	J01	UNUSED						ALL
	J02	UNUSED						ALL
	J03	UNUSED						ALL
	J04	UNUSED						ALL
	J05	UNUSED						ALL
	J06	UNUSED						ALL
	J07	UNUSED						ALL
	J08	UNUSED						ALL
	J09	UNUSED						ALL
	J10	UNUSED						ALL
	J11	UNUSED						ALL
	J12	UNUSED						ALL
	J13	UNUSED						ALL
	J14	UNUSED						ALL
	J15	UNUSED						ALL
	K01	UNUSED						ALL
	K02	UNUSED						ALL
	K03	UNUSED						ALL
	K04	UNUSED						ALL
	K05	UNUSED						ALL
	K06	UNUSED						ALL
	K07	UNUSED						ALL
	K08	UNUSED						ALL
	K09	UNUSED						ALL
	K10	UNUSED						ALL
	K11	UNUSED						ALL
	K12	UNUSED						ALL
	K13	UNUSED						ALL
	K14	UNUSED						ALL
	K15	UNUSED						ALL
D00745C		//		PLUG-PART OF D00745				ALL
	1	UNUSED						ALL
	2		W1103	069	20		22-41-12	ALL
	3		W1103	068	20		22-41-12	ALL
	4	UNUSED						ALL
	5		W1103	070	20		22-41-12	ALL
	6	UNUSED						ALL
	7		W1103	065	20		22-41-11	ALL
	8	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D00700
Page 26
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00745C		//		PLUG-PART OF D00745 (continued)				ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11		W1103	066	20		22-41-11	ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	= C12	UNUSED						ALL
	= C13	UNUSED						ALL
D00746		0852/123/L060		PLUG-				ALL
	1		W0944	001	20		21-51-11	ALL
	2	DK	W0944	002	18		21-51-11	ALL
	3	DK	W0944	003	18		21-51-11	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
D00748		0852/123/L060		PLUG-				ALL
	1		W0944	005	20		21-51-11	ALL
	2	DK	W0944	007	18		21-51-11	ALL
	3	DK	W0944	006	18		21-51-11	ALL
	4	UNUSED						ALL
	5		W0944	004	20		21-51-11	ALL
D00752		0245/170/R060		PLUG-				ALL
	A		W0600	007	24		35-11-13	ALL
	B		W0600	201B	24		35-11-13	ALL
	C		W0600	201R	24		35-11-13	ALL
	D		W0600	012	20		35-11-13	ALL
	E	UNUSED						ALL
	F	UNUSED						ALL
D00754		1002/294/L020		PLUG-				050-099
D00754		0835/295/L020		PLUG-				150-199
D00754		0916/294/L020		PLUG-				275-299
	1	UNUSED						ALL
	2		W0822	121	20		33-21-13	ALL
	3		W0822	122	20		33-21-13	ALL
	4	UNUSED						ALL
	5		W0822	123	20		33-21-13	ALL
	6	UNUSED						ALL
	7		W0822	124	20		33-21-13	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00700

Page 27

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00754		1002/294/L020		PLUG- (continued)				050-099
D00754		0835/295/L020		PLUG- (continued)				150-199
D00754		0916/294/L020		PLUG- (continued)				275-299
	8		W0822	125	20		33-21-13	ALL
	9		W0822	126	20		33-21-13	ALL
	10		W0822	127	20		33-21-13	ALL
	11		W0822	128	20		33-21-13	ALL
	12		W0822	129	20		33-21-13	ALL
D00756		1002/294/L020		PLUG-				050-099
D00756		1004/295/L020		PLUG-				150-199, 275-299
	1	UNUSED						ALL
	2		W0824	055	22		33-21-14	050-099
	2		W0824	055	20		33-21-14	150-199, 275-299
	3		W0824	056	22		33-21-14	050-099
	3		W0824	056	20		33-21-14	150-199, 275-299
	4	UNUSED						ALL
	5		W0824	067	20		33-21-14	ALL
	6	UNUSED						ALL
	7		W0824	065	20		33-21-14	ALL
	8		W0824	066	20		33-21-14	ALL
	9		W0824	057	22		33-21-14	050-099
	9		W0824	057	20		33-21-14	150-199, 275-299
	10		W0824	058	22		33-21-14	050-099
	10		W0824	058	20		33-21-14	150-199, 275-299
	11		W0824	060	22		33-21-14	050-099
	11		W0824	060	20		33-21-14	150-199, 275-299
	12		W0824	059	22		33-21-14	050-099
	12		W0824	059	20		33-21-14	150-199, 275-299
D00758		NL180/160/L008		PLUG-STRUT				ALL
	1		W0356	100	18		30-21-11	ALL
	2		W0356	101	18		30-21-11	ALL
	3	UNUSED						ALL
D00770A		//		PLUG-PART OF D00770				ALL
	A01		W0084	308B	24		21-61-11	ALL
	A02		W0084	308R	24		21-61-11	ALL
	A03		W0084	308Y	24		21-61-11	ALL
	A04		W0084	207B	24		21-61-11	ALL
	A05		W0084	207R	24		21-61-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00700

Page 28

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00770A		//		PLUG-PART OF D00770 (continued)				ALL
	A06		W0084	206B	24		21-61-11	ALL
	A07		W0084	206R	24		21-61-11	ALL
	A08	UNUSED						ALL
	A09	UNUSED						ALL
	A10		W0084	309B	24		21-61-11	ALL
	A11		W0084	309R	24		21-61-11	ALL
	A12		W0084	309Y	24		21-61-11	ALL
	A13	UNUSED						ALL
	A14	UNUSED						ALL
	A15	UNUSED						ALL
	B01		W0084	311B	24		21-61-21	ALL
	B02		W0084	311R	24		21-61-21	ALL
	B03		W0084	311Y	24		21-61-21	ALL
	B04		W0084	209B	24		21-61-21	ALL
	B05		W0084	209R	24		21-61-21	ALL
	B06		W0084	210B	24		21-61-21	ALL
	B07		W0084	210R	24		21-61-21	ALL
	B08	UNUSED						ALL
	B09	UNUSED						ALL
	B10		W0084	310B	24		21-61-21	ALL
	B11		W0084	310R	24		21-61-21	ALL
	B12		W0084	310Y	24		21-61-21	ALL
	B13	UNUSED						ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	C01		W0084	313B	24		21-61-31	ALL
	C02		W0084	313R	24		21-61-31	ALL
	C03		W0084	313Y	24		21-61-31	ALL
	C04		W0084	212B	24		21-61-31	ALL
	C05		W0084	212R	24		21-61-31	ALL
	C06		W0084	213B	24		21-61-31	ALL
	C07		W0084	213R	24		21-61-31	ALL
	C08	UNUSED						ALL
	C09	UNUSED						ALL
	C10		W0084	312B	24		21-61-31	ALL
	C11		W0084	312R	24		21-61-31	ALL
	C12		W0084	312Y	24		21-61-31	ALL
	C13	UNUSED						ALL
	C14	UNUSED						ALL
	C15		W0084	010	22		21-61-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00700

Page 29

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00770A		//		PLUG-PART OF D00770 (continued)				ALL
	D01		W0084	316B	24		21-61-41	ALL
	D02		W0084	316R	24		21-61-41	ALL
	D03		W0084	316Y	24		21-61-41	ALL
	D04		W0084	240B	24		21-61-41	ALL
	D05		W0084	240R	24		21-61-41	ALL
	D06		W0084	239B	24		21-61-41	ALL
	D07		W0084	239R	24		21-61-41	ALL
	D08	UNUSED						ALL
	D09	UNUSED						ALL
	D10		W0084	317B	24		21-61-41	ALL
	D11		W0084	317R	24		21-61-41	ALL
	D12		W0084	317Y	24		21-61-41	ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15	UNUSED						ALL
D00770B		//		PLUG-PART OF D00770				ALL
	A01		W0084	219B	24		21-61-51	ALL
	A02		W0084	219R	24		21-61-51	ALL
	A03		W0084	220B	24		21-61-51	ALL
	A04		W0084	220R	24		21-61-51	ALL
	A05		W0084	228B	24		21-61-51	ALL
	A06		W0084	228R	24		21-61-51	ALL
	A07		W0084	216B	24		21-61-51	ALL
	A08		W0084	216R	24		21-61-51	ALL
	A09		W0084	110	22		21-61-11	ALL
	A10	UNUSED						ALL
	A11		W0084	023	24		21-61-11	ALL
	A12		W0084	024	24		21-61-11	ALL
	A13		W0084	208B	24		21-61-11	ALL
	A14	UNUSED						ALL
	A15		W0084	208R	24		21-61-11	ALL
	B01		W0084	225B	24		21-61-51	ALL
	B02		W0084	225R	24		21-61-51	ALL
	B03		W0084	226B	24		21-61-51	ALL
	B04		W0084	226R	24		21-61-51	ALL
	B05		W0084	227B	24		21-61-51	ALL
	B06		W0084	227R	24		21-61-51	ALL
	B07		W0084	224B	24		21-61-51	ALL
	B08		W0084	224R	24		21-61-51	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00700

Page 30

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00770B		//		PLUG-PART OF D00770 (continued)				ALL
	B09		W0084	112	24		21-61-21	ALL
	B10	UNUSED						ALL
	B11		W0084	025	24		21-61-21	ALL
	B12		W0084	026	24		21-61-21	ALL
	B13		W0084	211B	24		21-61-21	ALL
	B14	UNUSED						ALL
	B15		W0084	211R	24		21-61-21	ALL
	C01		W0084	222B	22		21-61-51	ALL
	C02		W0084	222R	22		21-61-51	ALL
	C03		W0084	012	24		21-61-51	ALL
	C04		W0084	111	22		21-61-11	ALL
	C05	UNUSED						ALL
	C06	UNUSED						ALL
	C07		W0084	215B	24		21-61-51	ALL
	C08		W0084	215R	24		21-61-51	ALL
	C09		W0084	113	24		21-61-31	ALL
	C10	UNUSED						ALL
	C11		W0084	031	24		21-61-31	ALL
	C12		W0084	032	24		21-61-31	ALL
	C13		W0084	214B	24		21-61-31	ALL
	C14	UNUSED						ALL
	C15		W0084	214R	24		21-61-31	ALL
	D01	UNUSED						ALL
	D02	UNUSED						ALL
	D03		W0084	221B	24		21-61-51	ALL
	D04		W0084	221R	24		21-61-51	ALL
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07		W0084	223B	24		21-61-51	ALL
	D08		W0084	223R	24		21-61-51	ALL
	D09		W0084	123	24		21-61-41	ALL
	D10	UNUSED						ALL
	D11		W0084	122	24		21-61-41	ALL
	D12		W0084	121	24		21-61-41	ALL
	D13		W0084	238B	24		21-61-41	ALL
	D14	UNUSED						ALL
	D15		W0084	238R	24		21-61-41	ALL
D00770C		//		PLUG-PART OF D00770				ALL
	1	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00700

Page 31

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00770C		//		PLUG-PART OF D00770 (continued)				ALL
	2		W0084	035	18		21-61-51	ALL
	3	UNUSED						ALL
	4		W0084	102	20		21-61-51	ALL
	5	UNUSED						ALL
	= C1	UNUSED						ALL
	= C5	UNUSED						ALL
	DED		W0084	035Z			21-61-51	ALL
	DED		W0084	102Z			21-61-51	ALL
D00792		P033-00/ /		RELAY SOCKET-				ALL
	A1		W0142	599	22		30-11-11	ALL
	A2		W0142	601	22		30-11-11	ALL
	A3	UNUSED						ALL
	B1		W0142	180	24		73-21-16	050-099, 150-199 275-299
	B1	UNUSED						050-099, 150-199 275-299
	B2		W0142	598	20		73-21-16	050-099, 150-199 275-299
	B2	UNUSED						050-099, 150-199 275-299
	B3	UNUSED						ALL
	C1		W0142	42S	24		21-51-11	050-099, 150-199 275-299
	C1	UNUSED						050-099, 150-199 275-299
	C2		W0142	42T	20		21-51-11	050-099, 150-199 275-299
	C2	UNUSED						050-099, 150-199 275-299
	C3	UNUSED						ALL
	D1	UNUSED						050-099, 150-199
	D1		W0142	180	24		73-21-16	050-099, 150-199 275-299
	D2	UNUSED						050-099, 150-199 275-299
	D2		W0142	598	20		73-21-16	050-099, 150-199 275-299
	D3	UNUSED						ALL
	G1	UNUSED						ALL
	G2		W0142	PA1			99-99-99	ALL
	G3		W0142	PA1			99-99-99	ALL
	X1		W0142	603	22		30-11-11	ALL
	X2		W0142	602	20		30-11-11	ALL

HOOKUP LIST
D280T132

91-21-51
Section D00700
Page 32 End
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00800		P011-00/ /		RELAY SOCKET				ALL
	A1		W0042	705	22		74-31-11	ALL
	A2		W0042	709	22		74-31-11	ALL
	A3		W0042	704	22		74-31-11	ALL
	B1		W0042	703	22		74-31-11	ALL
	B2		W0042	709	22		74-31-11	ALL
	B3		W0042	702	22		74-31-11	ALL
	C1	UNUSED						ALL
	C2	UNUSED						ALL
	C3	UNUSED						ALL
	D1	UNUSED						ALL
	D2		W0042	708	24		74-31-11	ALL
	D3		W0042	701	20		74-31-11	ALL
	X1		W0042	706	24		74-31-11	ALL
	X2		W0042	707	20		74-31-11	ALL
D00803		F 089/ /RS		RCPT-				ALL
	1		W0579	001	18		27-21-12	ALL
	2		W0579	301R	20		27-21-12	ALL
	3		W0579	301B	20		27-21-12	ALL
	4		W0579	301Y	20		27-21-12	ALL
	5	UNUSED						ALL
	6		W0579	201R	20		27-21-12	ALL
	7		W0579	201B	20		27-21-12	ALL
D00805		F 118/ /TE		RCPT-				ALL
	1		W0583	001	18		27-21-22	ALL
	2		W0583	301R	20		27-21-22	ALL
	3		W0583	301B	20		27-21-22	ALL
	4		W0583	301Y	20		27-21-22	ALL
	5	UNUSED						ALL
	6		W0583	201R	20		27-21-22	ALL
	7		W0583	201B	20		27-21-22	ALL
D00807		P003-02/ /		PLUG-P3-2				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W0733	013	24		34-22-26	ALL

HOOKUP LIST
D280T132

91-21-51
Section D00800
Page 1
Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00807		P003-02/ /		PLUG-P3-2 (continued)				ALL
	7		W0733	014	20		34-22-26	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12		W0733	201R	24		34-22-24	ALL
	13		W0733	201B	24		34-22-24	ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17		W0733	015	20		34-22-26	ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22		W0733	003	24		34-22-24	ALL
	23		W0733	004	24		34-22-24	ALL
	24		W0733	005	24		34-22-24	ALL
	25	UNUSED						ALL
	26		W0733	202R	24		34-22-24	ALL
	27		W0733	202B	24		34-22-24	ALL
	28		W0733	203R	24		34-22-24	ALL
	29		W0733	203B	24		34-22-24	ALL
	30		W0733	301R	24		34-22-24	ALL
	31		W0733	301B	24		34-22-24	ALL
	32		W0733	301Y	24		34-22-24	ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00800

Page 2

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00807		P003-02/ /		PLUG-P3-2 (continued)				ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49		W0733	204WN	24		34-22-24	ALL
	50		W0733	204W	24		34-22-24	ALL
	51		W0733	205WN	24		34-22-24	ALL
	52		W0733	205W	24		34-22-24	ALL
	53		W0733	206WN	24		34-22-24	ALL
	54		W0733	206W	24		34-22-24	ALL
	55		W0733	207WN	24		34-22-24	ALL
	56		W0733	207W	24		34-22-24	ALL
	57		W0733	208WN	24		34-22-24	ALL
	58		W0733	208W	24		34-22-24	ALL
	59		W0733	209WN	24		34-22-24	ALL
	60		W0733	209W	24		34-22-24	ALL
	61		W0733	210WN	24		34-22-24	ALL
	62		W0733	210W	24		34-22-24	ALL
	63		W0733	211WN	24		34-22-24	ALL
	64		W0733	211W	24		34-22-24	ALL
	65		W0733	212WN	24		34-22-24	ALL
	66		W0733	212W	24		34-22-24	ALL
	67		W0733	002	24		34-22-24	ALL
D00808		0320/280/L060		PLUG-				050-099
D00808		282/277/L056		PLUG-				150-199, 275-299
	1		W0820	011	20		33-26-11	ALL
	2		W0820	010	16		38-13-11	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W0820	201B	22		23-31-14	ALL
	6		W0820	007	18		33-26-11	ALL
	7		W0820	014	22		33-25-11	ALL
	8		W0820	013	16		38-13-11	ALL
	9		W0820	015	22		33-25-11	ALL
	10		W0820	012	18		33-26-21	050-099, 150-199
	10		W0820	012	20		33-26-21	275-299
	11	UNUSED						ALL
	12		W0820	024	20		33-24-11	ALL
	13		W0820	001	20		33-26-21	ALL
	14	UNUSED						ALL
	15		W0820	008	22		33-26-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00800

Page 3

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00808		0320/280/L060		PLUG- (continued)				050-099
D00808		282/277/L056		PLUG- (continued)				150-199, 275-299
	16		W0820	201R	22		23-31-14	ALL
	17		W0820	009	20		33-26-11	ALL
	18		W0820	020	20		38-32-12	050-099, 150-156, 162-165, 275-276
	18		W0820	020	20		38-32-16	157, 166-199, 277-299
	19		W0820	021	20		38-32-12	050-099, 150-156, 162-165, 275-276
	19		W0820	021	20		38-32-16	157, 166-199, 277-299
	20	DK	W0820	018	18		38-32-12	050-099, 150-156, 162-165, 275-276
	20	DK	W0820	018	18		38-32-16	157, 166-199, 277-299
	21		W0820	019	22		38-32-12	050-099, 275-276
	21		W0820	019	20		38-32-12	150-156, 162-165
	21		W0820	019	20		38-32-16	157, 166-199
	21		W0820	019	22		38-32-16	277-299
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25		W0820	060	22		33-25-11	050-099, 150-199
	25		W0820	016	22		33-25-11	275-299
	26		W0820	017	20		33-25-11	ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						050-099, 150-199
	29		W0820	045	20		25-42-11	275-299
	30		W0820	031	20		33-24-11	ALL
	31	UNUSED						ALL
	32		W0820	032	20		33-24-11	ALL
	DED		W0820	031Z			33-24-11	277-299
	DED		W0820	032Z			33-24-11	277-299
D00809		P003-02/ /		PLUG-P3-2				ALL
	1		W0733	021	24		34-22-25	ALL
	2		W0733	022	24		34-22-25	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W0733	031	24		34-22-26	ALL
	7		W0733	032	20		34-22-26	ALL
	8		W0733	023	24		34-22-25	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D00800
Page 4
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00809		P003-02/ /		PLUG-P3-2 (continued)				ALL
	11	UNUSED						ALL
	12		W0733	202R	24		34-22-24	ALL
	13		W0733	202B	24		34-22-24	ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17		W0733	033	20		34-22-26	ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22		W0733	025	24		34-22-25	ALL
	23		W0733	026	24		34-22-25	ALL
	24		W0733	027	24		34-22-25	ALL
	25	UNUSED						ALL
	26		W0733	201R	24		34-22-24	ALL
	27		W0733	201B	24		34-22-24	ALL
	28		W0733	214R	24		34-22-25	ALL
	29		W0733	214B	24		34-22-25	ALL
	30		W0733	303R	24		34-22-25	ALL
	31		W0733	303B	24		34-22-25	ALL
	32		W0733	303Y	24		34-22-25	ALL
	33		W0733	302R	24		34-22-25	ALL
	34		W0733	302B	24		34-22-25	ALL
	35		W0733	302Y	24		34-22-25	ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49		W0733	215WN	24		34-22-25	ALL
	50		W0733	215W	24		34-22-25	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00800

Page 5

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00809		P003-02/ /		PLUG-P3-2 (continued)				ALL
	51		W0733	216WN	24		34-22-25	ALL
	52		W0733	216W	24		34-22-25	ALL
	53		W0733	217WN	24		34-22-25	ALL
	54		W0733	217W	24		34-22-25	ALL
	55		W0733	218WN	24		34-22-25	ALL
	56		W0733	218W	24		34-22-25	ALL
	57		W0733	219WN	24		34-22-25	ALL
	58		W0733	219W	24		34-22-25	ALL
	59		W0733	220WN	24		34-22-25	ALL
	60		W0733	220W	24		34-22-25	ALL
	61		W0733	221WN	24		34-22-25	ALL
	62		W0733	221W	24		34-22-25	ALL
	63		W0733	222WN	24		34-22-25	ALL
	64		W0733	222W	24		34-22-25	ALL
	65		W0733	223WN	24		34-22-25	ALL
	66		W0733	223W	24		34-22-25	ALL
	67		W0733	024	24		34-22-25	ALL
D00810		0839/278/L060		PLUG-				050-099
D00810		0654+121/ /L060		PLUG				150-199
D00810		0833/280/L060		PLUG-				275-299
	1		W0792	101	20		33-26-11	050-099
	1		W0792	006	20		33-26-11	150-199
	1		W0792	052	20		33-26-11	275-299
	2		W0792	053	16		38-13-11	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W0792	202B	22		23-31-14	ALL
	6		W0792	106	18		33-26-11	050-099
	6		W0792	002	18		33-26-11	150-199
	6		W0792	011	18		33-26-11	275-299
	7		W0792	174	22		33-25-11	050-099, 150-199
	7		W0792	066	22		33-25-11	275-299
	8		W0792	058	16		38-13-11	ALL
	9		W0792	171	22		33-25-11	050-099, 150-199
	9		W0792	067	22		33-25-11	275-299
	10		W0792	196	20		33-26-21	050-099, 150-199
	10		W0792	039	20		33-26-21	275-299
	11	UNUSED						ALL
	12		W0792	091	20		33-24-11	050-099, 150-199

HOOKUP LIST

D280T132

91-21-51

Section D00800

Page 6

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00810		0839/278/L060		PLUG- (continued)				050-099
D00810		0654+121/ /L060		PLUG (continued)				150-199
D00810		0833/280/L060		PLUG- (continued)				275-299
	12		W0792	090	20		33-24-11	275-299
	13		W0792	034	20		33-26-21	050-099, 275-299
	13		W0792	197	20		33-26-21	150-199
	14	UNUSED						ALL
	15		W0792	115	22		33-26-11	050-099
	15		W0792	176	20		33-26-11	150-199
	15		W0792	055	22		33-26-11	275-299
	16		W0792	202R	22		23-31-14	ALL
	17		W0792	056	20		33-26-11	050-099, 275-299
	17		W0792	180	22		33-26-11	150-199
	18		W0792	048	20		38-32-12	050-099, 150-156, 162-165, 275-276
	18		W0792	048	20		38-32-16	157, 166-199, 277-299
	19		W0792	047	20		38-32-12	050-099, 150-156, 162-165, 275-276
	19		W0792	047	20		38-32-16	157, 166-199, 277-299
	20	DK	W0792	049	18		38-32-12	050-099, 150-156, 162-165, 275-276
	20	DK	W0792	049	18		38-32-16	157, 166-199, 277-299
	21		W0792	050	20		38-32-12	050-099, 150-156, 162-165, 275-276
	21		W0792	050	20		38-32-16	157, 166-199, 277-299
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25		W0792	172	22		33-25-11	050-099, 150-199
	25		W0792	068	22		33-25-11	275-299
	26		W0792	173	20		33-25-11	050-099, 150-199
	26		W0792	069	20		33-25-11	275-299
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						050-099, 150-199
	29		W0792	147	20		25-42-11	275-299
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
D00811		0265/180/R036		RCPT-				ALL
	1		W0045	608	24		31-51-11	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W0045	607	24		31-51-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00800

Page 7

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00811		0265/180/R036		RCPT- (continued)				ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W0045	303R	22		31-51-11	ALL
	8		W0045	303B	22		31-51-11	ALL
	9		W0045	303Y	22		31-51-11	ALL
	10		W0045	054	24		31-51-11	ALL
	11		W0045	047	24		31-51-11	ALL
	12		W0045	036	24		31-51-11	ALL
	13		W0045	009	24		31-51-11	ALL
	14		W0045	877	24		31-51-11	ALL
	15		W0045	055	24		31-51-11	ALL
	16		W0045	048	24		31-51-11	ALL
	17		W0045	037	24		31-51-11	ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20		W0045	056	24		31-51-11	ALL
	21		W0045	049	24		31-51-11	ALL
	22		W0045	038	24		31-51-11	ALL
	23		W0045	879	24		31-51-11	ALL
	24		W0045	304R	22		31-51-11	ALL
	25		W0045	304B	22		31-51-11	ALL
	26		W0045	003	24		31-51-11	ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33		W0045	034	24		31-51-11	ALL
	34		W0045	033	24		31-51-11	ALL
	35		W0045	005	24		31-51-11	ALL
	36		W0045	069	24		31-51-11	ALL
	37		W0045	304Y	22		31-51-11	ALL
	38		W0045	301R	22		31-51-11	ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41		W0045	302R	22		31-51-11	ALL
	42		W0045	302B	22		31-51-11	ALL
	43		W0045	302Y	22		31-51-11	ALL
	44	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00800

Page 8

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00811		0265/180/R036		RCPT- (continued)				ALL
	45		W0045	067	24		31-51-11	ALL
	46		W0045	029	24		31-51-11	ALL
	47		W0045	064	24		31-51-11	ALL
	48		W0045	878	24		31-51-11	ALL
	49		W0045	004	24		31-51-11	ALL
	50		W0045	068	24		31-51-11	ALL
	51		W0045	058	24		31-51-11	ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
	56	UNUSED						ALL
	57		W0045	301B	22		31-51-11	ALL
	58		W0045	301Y	22		31-51-11	ALL
	59		W0045	FRD			31-51-11	ALL
	60		W0045	001	22		31-51-11	ALL
	61	UNUSED						ALL
	62	UNUSED						ALL
	63		W0045	040	24		31-51-11	ALL
	64		W0045	061	24		31-51-11	ALL
	65		W0045	007	24		31-51-11	ALL
	66	UNUSED						ALL
	67	UNUSED						ALL
	68		W0045	225R	22		31-51-11	ALL
	69		W0045	225B	22		31-51-11	ALL
	70		W0045	065	24		31-51-11	ALL
	71	UNUSED						ALL
	72	UNUSED						ALL
	73	UNUSED						ALL
	74		W0045	059	24		31-51-11	ALL
	75		W0045	027	22		31-51-11	ALL
	76	UNUSED						ALL
	77	UNUSED						ALL
	78	UNUSED						ALL
	DED		W0045	003Z			31-51-11	ALL
	DED		W0045	004Z			31-51-11	ALL
	DED		W0045	005Z			31-51-11	ALL
	DED		W0045	009Z			31-51-11	ALL
	DED		W0045	027Z			31-51-11	ALL
	DED		W0045	029Z			31-51-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00800

Page 9

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00811		0265/180/R036		RCPT- (continued)				ALL
	DED		W0045	036Z			31-51-11	ALL
	DED		W0045	037Z			31-51-11	ALL
	DED		W0045	038Z			31-51-11	ALL
	DED		W0045	047Z			31-51-11	ALL
	DED		W0045	048Z			31-51-11	ALL
	DED		W0045	049Z			31-51-11	ALL
	DED		W0045	054Z			31-51-11	ALL
	DED		W0045	055Z			31-51-11	ALL
	DED		W0045	056Z			31-51-11	ALL
	DED		W0045	058Z			31-51-11	ALL
	DED		W0045	059Z			31-51-11	ALL
	DED		W0045	064Z			31-51-11	ALL
	DED		W0045	065Z			31-51-11	ALL
	DED		W0045	067Z			31-51-11	ALL
	DED		W0045	068Z			31-51-11	ALL
	DED		W0045	069Z			31-51-11	ALL
	DED		W0045	225Z			31-51-11	ALL
	DED		W0045	301Z			31-51-11	ALL
	DED		W0045	302Z			31-51-11	ALL
	DED		W0045	303Z			31-51-11	ALL
	DED		W0045	304Z			31-51-11	ALL
	DED		W0045	877Z			31-51-11	ALL
	DED		W0045	878Z			31-51-11	ALL
	DED		W0045	879Z			31-51-11	ALL
	DED		W0045	607Z			31-51-11	ALL
	DED		W0045	608Z			31-51-11	ALL
	DED		W0045	FRD			31-51-11	ALL
D00812		0839/278/R050		PLUG				050-099
D00812		0654+121/280/R050		PLUG-				150-199
D00812		0833/278/R060		PLUG-				275-299
	1		W0814	184	20		33-26-11	ALL
	2		W0814	183	16		38-13-11	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W0814	201B	22		23-31-14	ALL
	6		W0814	179	18		33-26-11	ALL
	7		W0814	818	22		33-25-11	050-099, 150-199
	7		W0814	189	22		33-25-11	275-299
	8		W0814	003	16		38-13-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00800

Page 10

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00812		0839/278/R050		PLUG (continued)				050-099
D00812		0654+121/280/R050		PLUG- (continued)				150-199
D00812		0833/278/R060		PLUG- (continued)				275-299
	9		W0814	825	22		33-25-11	050-099, 150-199
	9		W0814	190	22		33-25-11	275-299
	10		W0814	812	20		33-26-21	050-099, 150-199
	10		W0814	177	20		33-26-21	275-299
	11	UNUSED						ALL
	12		W0814	178	20		33-24-11	050-099, 275-299
	12		W0814	801	20		33-24-11	150-199
	13		W0814	620	20		33-26-21	050-099, 150-199
	13		W0814	175	20		33-26-21	275-299
	14	UNUSED						ALL
	15		W0814	181	22		33-26-11	050-099, 275-299
	15		W0814	870	22		33-26-11	150-199
	16		W0814	201R	22		23-31-14	ALL
	17		W0814	182	20		33-26-11	ALL
	18		W0814	670	20		38-32-13	050-099, 150-156, 162-165
	18		W0814	670	20		38-32-16	157, 166-199
	18		W0814	185	20		38-32-13	275-276
	18		W0814	185	20		38-32-16	277-299
	19		W0814	676	20		38-32-13	050-099, 150-156, 162-165
	19		W0814	676	20		38-32-16	157, 166-199
	19		W0814	186	20		38-32-13	275-276
	19		W0814	186	20		38-32-16	277-299
	20	DK	W0814	677	18		38-32-13	050-099, 150-156, 162-165
	20	DK	W0814	677	18		38-32-16	157, 166-199
	20	DK	W0814	187	18		38-32-13	275-276
	20	DK	W0814	187	18		38-32-16	277-299
	21		W0814	678	22		38-32-13	050-099, 150-156, 162-165
	21		W0814	678	22		38-32-16	157, 166-199
	21		W0814	188	20		38-32-13	275-276
	21		W0814	188	20		38-32-16	277-299
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25		W0814	013	22		33-25-11	050-099, 150-199
	25		W0814	191	22		33-25-11	275-299
	26		W0814	819	20		33-25-11	050-099, 155-199
	26		W0814	819	22		33-25-11	150-154
	26		W0814	192	20		33-25-11	275-299

HOOKUP LIST

D280T132

91-21-51

Section D00800

Page 11

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00812		0839/278/R050		PLUG (continued)				050-099
D00812		0654+121/280/R050		PLUG- (continued)				150-199
D00812		0833/278/R060		PLUG- (continued)				275-299
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						050-099, 150-199
	29		W0814	695	20		25-42-11	275-299
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
D00813		0265/180/R036		RCPT-				ALL
	1		W0045	605	24		31-51-12	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W0045	604	24		31-51-12	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W0045	305R	22		31-51-12	ALL
	8		W0045	305B	22		31-51-12	ALL
	9		W0045	305Y	22		31-51-12	ALL
	10		W0045	148	24		31-51-12	ALL
	11		W0045	131	24		31-51-12	ALL
	12		W0045	144	24		31-51-12	ALL
	13		W0045	093	24		31-51-12	ALL
	14		W0045	880	24		31-51-12	ALL
	15		W0045	126	24		31-51-12	ALL
	16		W0045	132	24		31-51-12	ALL
	17		W0045	146	24		31-51-12	ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20		W0045	127	24		31-51-12	ALL
	21		W0045	133	24		31-51-12	ALL
	22		W0045	147	24		31-51-12	ALL
	23		W0045	882	24		31-51-12	ALL
	24		W0045	306R	22		31-51-12	ALL
	25		W0045	306B	22		31-51-12	ALL
	26		W0045	081	24		31-51-12	ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00800

Page 12

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00813		0265/180/R036		RCPT- (continued)				ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33		W0045	142	24		31-51-12	ALL
	34		W0045	143	24		31-51-12	ALL
	35		W0045	083	24		31-51-12	ALL
	36		W0045	140	24		31-51-12	ALL
	37		W0045	306Y	22		31-51-12	ALL
	38		W0045	307R	22		31-51-12	ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41		W0045	308R	22		31-51-12	ALL
	42		W0045	308B	22		31-51-12	ALL
	43		W0045	308Y	22		31-51-12	ALL
	44	UNUSED						ALL
	45		W0045	138	24		31-51-12	ALL
	46		W0045	097	24		31-51-12	ALL
	47		W0045	135	24		31-51-12	ALL
	48		W0045	881	24		31-51-12	ALL
	49		W0045	082	24		31-51-12	ALL
	50		W0045	139	24		31-51-12	ALL
	51		W0045	129	24		31-51-12	ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
	56	UNUSED						ALL
	57		W0045	307B	22		31-51-12	ALL
	58		W0045	307Y	22		31-51-12	ALL
	59		W0045	FRB			31-51-12	ALL
	60		W0045	079	22		31-51-12	ALL
	61	UNUSED						ALL
	62	UNUSED						ALL
	63		W0045	117	24		31-51-12	ALL
	64		W0045	122	24		31-51-12	ALL
	65		W0045	085	24		31-51-12	ALL
	66	UNUSED						ALL
	67	UNUSED						ALL
	68		W0045	226R	22		31-51-12	ALL
	69		W0045	226B	22		31-51-12	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00800

Page 13

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00813		0265/180/R036		RCPT- (continued)				ALL
	70		W0045	136	24		31-51-12	ALL
	71	UNUSED						ALL
	72	UNUSED						ALL
	73	UNUSED						ALL
	74		W0045	130	24		31-51-12	ALL
	75		W0045	095	24		31-51-12	ALL
	76	UNUSED						ALL
	77	UNUSED						ALL
	78	UNUSED						ALL
	DED		W0045	081Z			31-51-12	ALL
	DED		W0045	082Z			31-51-12	ALL
	DED		W0045	083Z			31-51-12	ALL
	DED		W0045	093Z			31-51-12	ALL
	DED		W0045	095Z			31-51-12	ALL
	DED		W0045	097Z			31-51-12	ALL
	DED		W0045	126Z			31-51-12	ALL
	DED		W0045	127Z			31-51-12	ALL
	DED		W0045	129Z			31-51-12	ALL
	DED		W0045	130Z			31-51-12	ALL
	DED		W0045	131Z			31-51-12	ALL
	DED		W0045	132Z			31-51-12	ALL
	DED		W0045	133Z			31-51-12	ALL
	DED		W0045	135Z			31-51-12	ALL
	DED		W0045	136Z			31-51-12	ALL
	DED		W0045	138Z			31-51-12	ALL
	DED		W0045	139Z			31-51-12	ALL
	DED		W0045	140Z			31-51-12	ALL
	DED		W0045	144Z			31-51-12	ALL
	DED		W0045	146Z			31-51-12	ALL
	DED		W0045	147Z			31-51-12	ALL
	DED		W0045	148Z			31-51-12	ALL
	DED		W0045	226Z			31-51-12	ALL
	DED		W0045	305Z			31-51-12	ALL
	DED		W0045	306Z			31-51-12	ALL
	DED		W0045	307Z			31-51-12	ALL
	DED		W0045	308Z			31-51-12	ALL
	DED		W0045	880Z			31-51-12	ALL
	DED		W0045	881Z			31-51-12	ALL
	DED		W0045	882Z			31-51-12	ALL
	DED		W0045	604Z			31-51-12	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00800

Page 14

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00813		0265/180/R036		RCPT- (continued)				ALL
			W0045	605Z			31-51-12	ALL
			W0045	FRB			31-51-12	ALL
D00814		1446/280/L060		PLUG-				ALL
	1		W0828	018	20		33-26-11	050-099, 275-299
	1	UNUSED						150-199
	2		W0828	019	16		38-13-11	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W0828	203B	22		23-31-14	ALL
	6		W0828	012	18		33-26-11	050-099, 275-299
	6		W0828	106	20		33-26-11	150-199
	7		W0828	027	22		33-25-11	ALL
	8		W0828	025	16		38-13-11	050-099, 275-299
	8		W0828	115	16		38-13-11	150-199
	9		W0828	028	22		33-25-11	ALL
	10		W0828	500	20		33-26-21	050-099
	10	UNUSED						150-157
	10		W0828	501	20		33-26-21	162-199
	10		W0828	003	20		33-26-21	275-299
	11	UNUSED						ALL
	12		W0828	047	20		33-24-11	ALL
	13		W0828	501	20		33-26-21	050-099
	13	UNUSED						150-199
	13		W0828	007	20		33-26-21	275-299
	14	UNUSED						ALL
	15		W0828	021	22		33-26-11	050-099, 275-299
	15		W0828	105	20		33-26-11	150-199
	16		W0828	203R	22		23-31-14	ALL
	17		W0828	022	20		33-26-11	050-099, 275-299
	17		W0828	156	20		33-26-11	150-199
	18		W0828	043	20		38-32-13	050-099, 150-156, 162-165, 275-276
	18		W0828	043	20		38-32-16	157, 166-199, 277-299
	19		W0828	044	20		38-32-13	050-099, 150-156, 162-165, 275-276
	19		W0828	044	20		38-32-16	157, 166-199, 277-299
	20	DK	W0828	041	18		38-32-13	050-099, 150-156, 162-165, 275-276
	20	DK	W0828	041	18		38-32-16	157, 166-199, 277-299
	21		W0828	042	22		38-32-13	050-099, 150-156, 162-165, 275-276
	21		W0828	042	22		38-32-16	157, 166-199, 277-299
	22	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00800

Page 15

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00814		1446/280/L060		PLUG- (continued)				ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25		W0828	029	22		33-25-11	ALL
	26		W0828	030	20		33-25-11	ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						050-099, 150-199
	29		W0828	108	20		25-42-11	275-299
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
D00815		0265/180/R036		RCPT-				ALL
	1		W0045	193	24		31-51-21	ALL
	2		W0045	187	24		31-51-21	ALL
	3	UNUSED						ALL
	4		W0045	182	24		31-51-21	ALL
	5	UNUSED						ALL
	6		W0045	693	24		31-51-21	ALL
	7		W0045	621	24		31-51-21	ALL
	8		W0045	624	24		31-51-21	ALL
	9	UNUSED						ALL
	10		W0045	179	24		31-51-21	ALL
	11		W0045	183	24		31-51-21	ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14		W0045	035	22		31-51-11	ALL
	15		W0045	112	22		31-51-12	ALL
	16		W0045	702	24		31-51-21	ALL
	17		W0045	038	24		31-51-11	ALL
	18	UNUSED						ALL
	19		W0045	205B	24		31-51-21	ALL
	20	UNUSED						ALL
	21		W0045	116	24		31-51-12	ALL
	22		W0045	701	24		31-51-21	ALL
	23	UNUSED						ALL
	24		W0045	147	24		31-51-12	ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27		W0045	036	24		31-51-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00800

Page 16

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00815		0265/180/R036		RCPT- (continued)				ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30		W0045	144	24		31-51-12	ALL
	31	UNUSED						ALL
	32		W0045	037	24		31-51-11	ALL
	33		W0045	146	24		31-51-12	ALL
	34		W0045	177	24		31-51-21	ALL
	35		W0045	189	24		31-51-21	ALL
	36		W0045	195	24		31-51-21	ALL
	37		W0045	184	22		31-51-21	ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41		W0045	797	24		31-51-21	ALL
	42		W0045	185	22		31-51-21	ALL
	43		W0045	178	24		31-51-21	ALL
	44		W0045	191	24		31-51-21	ALL
	45		W0045	197	24		31-51-21	ALL
	46		W0045	198	24		31-51-21	ALL
	47		W0045	PA1			99-99-99	ALL
	48		W0045	702	24		31-51-21	ALL
	49		W0045	701	24		31-51-21	ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52		W0045	205R	24		31-51-21	ALL
	53	UNUSED						ALL
	54		W0045	039	24		31-51-11	ALL
	55	UNUSED						ALL
	56	UNUSED						ALL
	57	UNUSED						ALL
	58	UNUSED						ALL
	59	UNUSED						ALL
	60	UNUSED						ALL
	61	UNUSED						ALL
	62	UNUSED						ALL
	63		W0045	PA1			99-99-99	ALL
	64	UNUSED						ALL
	65	UNUSED						ALL
	66		W0045	181	24		31-51-21	ALL
	DED		W0045	205Z			31-51-21	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00800

Page 17

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00815		0265/180/R036		RCPT- (continued)				ALL
	DED		W0045	797Z			31-51-21	ALL
			W0045	023	20		31-51-11	ALL
			W0045	036Z			31-51-11	ALL
			W0045	037Z			31-51-11	ALL
			W0045	038Z			31-51-11	ALL
			W0045	106	20		31-51-12	ALL
			W0045	144Z			31-51-12	ALL
			W0045	146Z			31-51-12	ALL
			W0045	147Z			31-51-12	ALL
D00816		1463/280/R050		PLUG-				050-099
D00816		1442/280/R060		PLUG-				150-199
D00816		1442/277/R058		PLUG-				275-299
	1		W0828	111	20		33-26-11	050-099
	1		W0828	107	20		33-26-11	150-199
	1		W1276	006	20		33-26-11	275-299
	2		W0828	112	16		38-13-11	050-099
	2		W0828	126	16		38-13-11	150-199
	2		W1276	005	16		38-13-11	275-299
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W0828	202B	22		23-31-14	050-099, 150-199
	5		W1276	201B	22		23-31-14	275-299
	6		W0828	116	18		33-26-11	050-099
	6		W0828	022	20		33-26-11	150-199
	6		W1276	002	18		33-26-11	275-299
	7		W0828	024	22		33-25-11	050-099, 150-199
	7		W1276	011	22		33-25-11	275-299
	8		W0828	118	16		38-13-11	050-099
	8		W0828	121	16		38-13-11	150-199
	8		W1276	010	16		38-13-11	275-299
	9		W0828	119	22		33-25-11	050-099, 150-199
	9		W1276	012	22		33-25-11	275-299
	10		W0828	501	20		33-26-21	050-099
	10	UNUSED						150-157
	10		W0828	500	20		33-26-21	162-199
	10		W1276	007	20		33-26-21	275-299
	11	UNUSED						ALL
	12		W0828	122	20		33-24-11	050-099, 150-199
	12		W1276	009	20		33-24-11	275-299

HOOKUP LIST

D280T132

91-21-51

Section D00800

Page 18

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00816		1463/280/R050		PLUG- (continued)				050-099
D00816		1442/280/R060		PLUG- (continued)				150-199
D00816		1442/277/R058		PLUG- (continued)				275-299
	13	UNUSED						050-099, 150-157
	13		W0828	501	20		33-26-21	162-199
	13		W1276	008	20		33-26-21	275-299
	14	UNUSED						ALL
	15		W0828	013	22		33-26-11	050-099
	15		W0828	021	22		33-26-11	150-199
	15		W1276	003	22		33-26-11	275-299
	16		W0828	202R	22		23-31-14	050-099, 150-199
	16		W1276	201R	22		23-31-14	275-299
	17		W0828	070	20		33-26-11	050-099
	17		W0828	099	22		33-26-11	150-199
	17		W1276	004	20		33-26-11	275-299
	18		W0828	128	20		38-32-12	050-099, 150-156, 162-165
	18		W0828	128	20		38-32-16	157, 166-199
	18		W1276	017	20		38-32-12	275-276
	18		W1276	017	20		38-32-16	277-299
	19		W0828	129	20		38-32-12	050-099, 150-156, 162-165
	19		W0828	129	20		38-32-16	157, 166-199
	19		W1276	018	20		38-32-12	275-276
	19		W1276	018	20		38-32-16	277-299
	20	DK	W0828	130	18		38-32-12	050-099, 150-156, 162-165
	20	DK	W0828	017	18		38-32-16	157, 166-199
	20	DK	W1276	015	18		38-32-12	275-276
	20	DK	W1276	015	18		38-32-16	277-299
	21		W0828	131	22		38-32-12	050-099
	21		W0828	131	20		38-32-12	150-156, 162-165
	21		W0828	131	20		38-32-16	157, 166-199
	21		W1276	016	22		38-32-12	275-276
	21		W1276	016	22		38-32-16	277-299
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25		W0828	135	22		33-25-11	050-099, 150-199
	25		W1276	013	22		33-25-11	275-299
	26		W0828	175	20		33-25-11	050-099, 150-199
	26		W1276	014	20		33-25-11	275-299
	27	UNUSED						ALL
	28	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00800

Page 19

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00816		1463/280/R050		PLUG- (continued)				050-099
D00816		1442/280/R060		PLUG- (continued)				150-199
D00816		1442/277/R058		PLUG- (continued)				275-299
	29	UNUSED						050-099, 150-199
	29		W1276	021	20		25-42-11	275-299
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
D00817		0265/180/R036		RCPT-				ALL
	1		W0045	764	24		31-51-32	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8		W0045	PA2			99-99-99	ALL
	9		W0045	631	24		31-51-32	ALL
	10		W0045	762	24		31-51-32	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13		W0045	768	24		31-51-32	ALL
	14		W0045	057	22		31-51-11	ALL
	15		W0045	128	22		31-51-12	ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19		W0045	767	24		31-51-32	ALL
	20		W0045	634	22		31-51-32	ALL
	21		W0045	636	22		31-51-32	ALL
	22		W0045	772	24		31-51-32	ALL
	23		W0045	216R	24		31-51-32	ALL
	24		W0045	216B	24		31-51-32	ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27		W0045	058	24		31-51-11	ALL
	28		W0045	242R	24		31-51-32	ALL
	29	UNUSED						ALL
	30		W0045	129	24		31-51-12	ALL
	31	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00800

Page 20

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00817		0265/180/R036		RCPT- (continued)				ALL
	32		W0045	059	24		31-51-11	ALL
	33		W0045	130	24		31-51-12	ALL
	34		W0045	774	24		31-51-32	ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45		W0045	060	24		31-51-11	ALL
	46		W0045	763	24		31-51-32	ALL
	47		W0045	769	24		31-51-32	ALL
	48	UNUSED						ALL
	49		W0045	766	24		31-51-32	ALL
	50		W0045	765	24		31-51-32	ALL
	51		W0045	770	24		31-51-32	ALL
	52		W0045	615	24		31-51-32	ALL
	53		W0045	635	22		31-51-32	ALL
	54	UNUSED						ALL
	55		W0045	773	24		31-51-32	ALL
	56		W0045	121	24		31-51-12	ALL
	57		W0045	PA2			99-99-99	ALL
	58	UNUSED						ALL
	59	UNUSED						ALL
	60		W0045	242B	24		31-51-32	ALL
	61	UNUSED						ALL
	62		W0045	273R	24		31-51-32	ALL
	63		W0045	273B	24		31-51-32	ALL
	64	UNUSED						ALL
	65	UNUSED						ALL
	66		W0045	775	24		31-51-32	ALL
	DED		W0045	764Z			31-51-32	ALL
	DED		W0045	766Z			31-51-32	ALL
			W0045	058Z			31-51-11	ALL
			W0045	059Z			31-51-11	ALL
			W0045	073	20		31-51-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00800

Page 21

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00817		0265/180/R036		RCPT- (continued)				ALL
			W0045	109	20		31-51-12	ALL
			W0045	129Z			31-51-12	ALL
			W0045	130Z			31-51-12	ALL
D00818		P024-00/ /		PLUG-				ALL
	1		W0700	011	20		25-53-11	ALL
	2		W0700	012	20		25-53-11	ALL
	3		W0700	013	20		25-53-13	ALL
	4		W0700	014	20		25-53-14	ALL
	5		W0700	015	20		25-53-14	ALL
	6		W0700	016	20		25-53-13	ALL
	7		W0700	017	20		25-53-13	ALL
	8		W0700	018	20		25-53-15	050-099
	8		W0700	018	20		25-53-14	150-199, 275-299
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D00819		0265/160/R036		RCPT-				ALL
	1		W0045	729	24		31-51-41	ALL
	2		W0045	731	24		31-51-41	ALL
	3		W0045	086	24		31-51-12	ALL
	4	UNUSED						ALL
	5		W0045	179	24		31-51-21	ALL
	6		W0045	703	24		31-51-41	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9		W0045	708	24		31-51-41	ALL
	10		W0045	706	24		31-51-41	ALL
	11		W0045	793	24		31-51-41	ALL
	12		W0045	711	24		31-51-41	ALL
	13	UNUSED						ALL
	14		W0045	010	22		31-51-11	ALL
	15		W0045	092	22		31-51-12	ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20		W0045	713	24		31-51-41	ALL

HOOKUP LIST
D280T132

91-21-51
Section D00800
Page 22
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00819		0265/160/R036		RCPT- (continued)				ALL
	21		W0045	707	24		31-51-41	ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27		W0045	009	24		31-51-11	ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30		W0045	093	24		31-51-12	ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35		W0045	728	24		31-51-41	ALL
	36		W0045	730	24		31-51-41	ALL
	37		W0045	008	24		31-51-11	ALL
	38	UNUSED						ALL
	39		W0045	709	24		31-51-41	ALL
	40	UNUSED						ALL
	41		W0045	PA3			99-99-99	ALL
	42	UNUSED						ALL
	43		W0045	710	24		31-51-41	ALL
	44		W0045	714	24		31-51-41	ALL
	45		W0045	705	24		31-51-41	ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53		W0045	712	24		31-51-41	ALL
	54	UNUSED						ALL
	55		W0045	PA3			99-99-99	ALL
	56	UNUSED						ALL
	57	UNUSED						ALL
	58	UNUSED						ALL
	59	UNUSED						ALL
	60	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00800

Page 23

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00819		0265/160/R036		RCPT- (continued)				ALL
	61	UNUSED						ALL
	62	UNUSED						ALL
	63	UNUSED						ALL
	64	UNUSED						ALL
	65	UNUSED						ALL
	66	UNUSED						ALL
			W0045	009Z			31-51-11	ALL
			W0045	018	20		31-51-11	ALL
			W0045	093Z			31-51-12	ALL
			W0045	102	20		31-51-12	ALL
D00820		P024-00/ /		PLUG-				ALL
	1		W0700	001	20		25-53-11	ALL
	2		W0700	002	20		25-53-11	ALL
	3		W0700	033	20		25-53-11	ALL
	4		W0700	004	20		25-53-13	ALL
	5		W0700	005	20		25-53-16	ALL
	6		W0700	006	20		25-53-16	ALL
	7		W0700	007	20		25-53-17	ALL
	8		W0700	008	20		25-53-17	ALL
	9		W0700	010	20		25-53-13	050-099
	9		W0700	009	20		25-53-13	150-199, 275-299
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13		W0700	023	20		25-53-17	ALL
	14		W0700	024	20		25-53-17	ALL
	15		W0700	022	20		25-53-16	ALL
D00821		0265/180/R036		RCPT-				ALL
	1		W0045	213R	24		34-16-11	ALL
	2		W0045	208R	24		34-16-11	ALL
	3		W0045	214R	24		34-16-11	ALL
	4		W0045	223R	24		34-16-11	ALL
	5	UNUSED						ALL
	6		W0045	739	24		34-16-11	ALL
	7		W0045	738	24		34-16-11	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D00800
Page 24
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00821		0265/180/R036		RCPT- (continued)				ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14		W0045	002	22		31-51-11	ALL
	15		W0045	080	22		31-51-12	ALL
	16	UNUSED						ALL
	17		W0045	005	24		31-51-11	ALL
	18		W0045	741	24		34-16-11	ALL
	19		W0045	084	24		31-51-12	ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22		W0045	741	24		34-16-11	ALL
	23	UNUSED						ALL
	24		W0045	083	24		31-51-12	ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27		W0045	003	24		31-51-11	ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30		W0045	081	24		31-51-12	ALL
	31		W0045	737	24		34-16-11	ALL
	32		W0045	004	24		31-51-11	ALL
	33		W0045	082	24		31-51-12	ALL
	34		W0045	735	24		34-16-11	ALL
	35		W0045	213B	24		34-16-11	ALL
	36		W0045	208B	24		34-16-11	ALL
	37		W0045	214B	24		34-16-11	ALL
	38		W0045	223B	24		34-16-11	ALL
	39	UNUSED						ALL
	40		W0045	740	24		34-16-11	050-099, 150-199
	40		W0045	648	24		34-16-11	275-299
	41	UNUSED						ALL
	42	UNUSED						ALL
	43		W0045	PA4			99-99-99	ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48		W0045	742	24		34-16-11	ALL
	49	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00800

Page 25

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00821		0265/180/R036		RCPT- (continued)				ALL
	50		W0045	742	24		34-16-11	ALL
	51		W0045	006	24		31-51-11	ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
	56	UNUSED						ALL
	57	UNUSED						ALL
	58	UNUSED						ALL
	59	UNUSED						ALL
	60		W0045	PA4			99-99-99	ALL
	61	UNUSED						ALL
	62	UNUSED						ALL
	63	UNUSED						ALL
	64	UNUSED						ALL
	65		W0045	733	24		34-16-11	ALL
	66		W0045	736	24		34-16-11	ALL
	DED		W0045	208Z			34-16-11	ALL
	DED		W0045	213Z			34-16-11	ALL
	DED		W0045	214Z			34-16-11	ALL
	DED		W0045	223Z			34-16-11	ALL
			W0045	003Z			31-51-11	ALL
			W0045	004Z			31-51-11	ALL
			W0045	005Z			31-51-11	ALL
			W0045	017	20		31-51-11	ALL
			W0045	081Z			31-51-12	ALL
			W0045	082Z			31-51-12	ALL
			W0045	083Z			31-51-12	ALL
			W0045	101	20		31-51-12	ALL
D00822		P027-00/ /		PLUG-P27				ALL
	1		W0706	011	20		25-53-21	ALL
	2		W0706	012	20		25-53-21	ALL
	3		W0706	013	20		25-53-23	ALL
	4		W0706	014	20		25-53-24	ALL
	5		W0706	015	20		25-53-24	ALL
	6		W0706	016	20		25-53-23	ALL
	7		W0706	017	20		25-53-23	ALL
	8		W0706	018	20		25-53-25	050-099
	8		W0706	018	20		25-53-24	150-199, 275-299

HOOKUP LIST
D280T132

91-21-51
Section D00800
Page 26
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00822		P027-00/ /		PLUG-P27 (continued)				ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D00823		0265/160/R034		RCPT-				ALL
	1		W0045	118	24		31-51-12	ALL
	2		W0045	162	24		27-32-11	ALL
	3		W0045	160	24		27-32-11	ALL
	4		W0045	158	24		27-32-11	ALL
	5	UNUSED						ALL
	6		W0045	843	24		27-32-12	ALL
	7	UNUSED						ALL
	8		W0045	686	24		27-32-11	ALL
	9		W0045	839	24		27-32-12	050-099
	9	UNUSED						150-199, 275-299
	10	UNUSED						ALL
	11		W0045	618	24		27-32-12	ALL
	12		W0045	237R	24		27-32-11	ALL
	13		W0045	237B	24		27-32-11	ALL
	14		W0045	052	22		31-51-11	ALL
	15		W0045	124	22		31-51-12	ALL
	16		W0045	204R	24		27-32-11	ALL
	17		W0045	056	24		31-51-11	ALL
	18		W0045	204B	24		27-32-11	ALL
	19		W0045	245R	24		27-32-11	ALL
	20		W0045	245B	24		27-32-11	ALL
	21		W0045	818	24		27-32-12	ALL
	22	UNUSED						ALL
	23		W0045	236R	24		27-32-11	ALL
	24		W0045	127	24		31-51-12	ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27		W0045	054	24		31-51-11	ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30		W0045	148	24		31-51-12	ALL
	31		W0045	153	24		27-32-11	ALL
	32		W0045	055	24		31-51-11	ALL
	33		W0045	126	24		31-51-12	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00800

Page 27

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00823		0265/160/R034		RCPT- (continued)				ALL
	34		W0045	150	22		27-32-11	ALL
	35		W0045	041	24		31-51-11	ALL
	36		W0045	159	24		27-32-11	ALL
	37		W0045	610	24		27-32-11	ALL
	38		W0045	156	24		27-32-11	ALL
	39		W0045	151	24		27-32-11	ALL
	40		W0045	152	24		27-32-11	ALL
	41	UNUSED						ALL
	42	UNUSED						050-099
	42		W0045	837	24		27-32-12	150-199, 275-299
	43		W0045	161	24		27-32-11	ALL
	44	UNUSED						ALL
	45		W0045	619	24		27-32-12	ALL
	46		W0045	823	24		27-32-12	ALL
	47		W0045	822	24		27-32-12	ALL
	48		W0045	053	22		31-51-11	ALL
	49		W0045	821	24		27-32-12	ALL
	50		W0045	820	24		27-32-12	ALL
	51		W0045	819	24		27-32-12	ALL
	52		W0045	PA5			99-99-99	ALL
	53		W0045	824	24		27-32-12	ALL
	54		W0045	236B	24		27-32-11	ALL
	55		W0045	817	24		27-32-12	ALL
	56		W0045	617	24		27-32-12	ALL
	57	UNUSED						ALL
	58		W0045	685	24		27-32-12	ALL
	59	UNUSED						ALL
	60	UNUSED						ALL
	61	UNUSED						ALL
	62		W0045	825	24		27-32-12	ALL
	63	UNUSED						ALL
	64		W0045	687	24		27-32-11	ALL
	65		W0045	PA5			99-99-99	ALL
	66		W0045	644	22		27-32-31	ALL
	DED		W0045	204Z			27-32-11	ALL
	DED		W0045	236Z			27-32-11	ALL
	DED		W0045	237Z			27-32-11	ALL
	DED		W0045	245Z			27-32-11	ALL
	DED		W0045	644Z			27-32-31	ALL
			W0045	054Z			31-51-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00800

Page 28

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00823		0265/160/R034		RCPT- (continued)				ALL
			W0045	055Z			31-51-11	ALL
			W0045	056Z			31-51-11	ALL
			W0045	072	20		31-51-11	ALL
			W0045	125	20		31-51-12	ALL
			W0045	126Z			31-51-12	ALL
			W0045	127Z			31-51-12	ALL
			W0045	148Z			31-51-12	ALL
D00824		P027-00/ /		PLUG-P27				ALL
	1		W0706	001	20		25-53-21	ALL
	2		W0706	002	20		25-53-21	ALL
	3		W0706	033	20		25-53-21	ALL
	4		W0706	004	20		25-53-23	ALL
	5		W0706	005	20		25-53-26	ALL
	6		W0706	006	20		25-53-26	ALL
	7		W0706	007	20		25-53-27	050-099, 150-199
	7	UNUSED						275-299
	8		W0706	008	20		25-53-27	050-099, 150-199
	8	UNUSED						275-299
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13		W0706	023	20		25-53-27	050-099, 150-199
	13	UNUSED						275-299
	14		W0706	024	20		25-53-27	050-099, 150-199
	14	UNUSED						275-299
	15		W0706	022	20		25-53-26	ALL
D00825A		//		PLUG-PART A OF D00825				ALL
	A01	UNUSED						ALL
	A02	UNUSED						ALL
	A03	UNUSED						ALL
	A04	UNUSED						ALL
	A05	UNUSED						ALL
	A06	UNUSED						ALL
	A07	UNUSED						ALL
	A08		W0101	046	22		27-61-14	ALL
	A09	UNUSED						ALL
	A10	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00800

Page 29

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00825A		//		PLUG-PART A OF D00825 (continued)				ALL
	A11	UNUSED						ALL
	A12		W0111	088	22		27-09-13	ALL
	A13	UNUSED						ALL
	A14	UNUSED						ALL
	A15		W0111	015	22		27-61-14	ALL
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04	UNUSED						ALL
	B05		W0101	097	22		27-61-14	ALL
	B06		W0101	097	22		27-61-14	ALL
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13		W0111	112	22		27-61-12	ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	C01	UNUSED						ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05	UNUSED						ALL
	C06	UNUSED						ALL
	C07		W0101	046	22		27-61-14	ALL
	C08	UNUSED						ALL
	C09	UNUSED						ALL
	C10	UNUSED						ALL
	C11	UNUSED						ALL
	C12	UNUSED						ALL
	C13		W0111	103	22		27-09-14	ALL
	C14		W1101	069	22		27-61-12	ALL
	C15		W1101	067	22		27-61-12	ALL
	D01		W0101	077	22		27-09-12	ALL
	D02	UNUSED						ALL
	D03	UNUSED						ALL
	D04	UNUSED						ALL
	D05		W0101	096	22		27-61-14	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00800

Page 30

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00825A		//		PLUG-PART A OF D00825 (continued)				ALL
	D06		W0101	096	22		27-61-14	ALL
	D07	UNUSED						ALL
	D08	UNUSED						ALL
	D09	UNUSED						ALL
	D10	UNUSED						ALL
	D11	UNUSED						ALL
	D12	UNUSED						ALL
	D13		W1101	093	22		27-61-12	ALL
	D14		W1101	095	22		27-61-12	ALL
	D15		W1101	091	22		27-61-12	ALL
	E01		W0101	114	22		27-61-11	ALL
	E02	UNUSED						ALL
	E03	UNUSED						ALL
	E04	UNUSED						ALL
	E05	UNUSED						ALL
	E06	UNUSED						ALL
	E07	UNUSED						ALL
	E08	UNUSED						ALL
	E09	UNUSED						ALL
	E10	UNUSED						ALL
	E11		W0101	198	22		27-61-14	ALL
	E12		W0101	044	22		27-61-14	ALL
	E13		W1101	087	22		27-61-12	ALL
	E14		W1101	089	22		27-61-12	ALL
	E15		W1101	097	22		27-61-12	ALL
	F01	UNUSED						ALL
	F02	UNUSED						ALL
	F03		W0101	038	22		27-61-14	ALL
	F04	UNUSED						ALL
	F05		W0101	037	22		27-61-14	ALL
	F06	UNUSED						ALL
	F07	UNUSED						ALL
	F08	UNUSED						ALL
	F09	UNUSED						ALL
	F10	UNUSED						ALL
	F11	UNUSED						ALL
	F12	UNUSED						ALL
	F13		W1101	094	22		27-61-12	ALL
	F14		W1101	096	22		27-61-12	ALL
	F15		W1101	098	22		27-61-12	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00800

Page 31

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00825A		//		PLUG-PART A OF D00825 (continued)				ALL
	G01	UNUSED						ALL
	G02	UNUSED						ALL
	G03		W0101	039	22		27-61-14	ALL
	G04	UNUSED						ALL
	G05		W0101	040	22		27-61-14	ALL
	G06	UNUSED						ALL
	G07	UNUSED						ALL
	G08		W0101	206B	22		27-61-14	ALL
	G09		W0101	206R	22		27-61-14	ALL
	G10		W0101	207R	22		27-61-14	ALL
	G11		W0101	207B	22		27-61-14	ALL
	G12	UNUSED						ALL
	G13		W1101	088	22		27-61-12	ALL
	G14		W1101	090	22		27-61-12	ALL
	G15		W1101	092	22		27-61-12	ALL
	H01	UNUSED						ALL
	H02	UNUSED						ALL
	H03	UNUSED						ALL
	H04	UNUSED						ALL
	H05	UNUSED						ALL
	H06	UNUSED						ALL
	H07	UNUSED						ALL
	H08	UNUSED						ALL
	H09	UNUSED						ALL
	H10	UNUSED						ALL
	H11	UNUSED						ALL
	H12	UNUSED						ALL
	H13		W1101	101	22		27-61-12	ALL
	H14		W1101	031	22		27-09-14	ALL
	H15		W1101	074	22		27-61-12	ALL
	J01	UNUSED						ALL
	J02	UNUSED						ALL
	J03		W0101	302R	22		27-61-14	ALL
	J04		W0101	302Y	22		27-61-14	ALL
	J05		W0101	302B	22		27-61-14	ALL
	J06		W0101	211B	22		27-61-14	ALL
	J07	UNUSED						ALL
	J08		W0101	305R	22		27-61-14	ALL
	J09		W0101	305Y	22		27-61-14	ALL
	J10		W0101	305B	22		27-61-14	ALL

HOOKUP LIST
D280T132

91-21-51
Section D00800
Page 32
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00825A		//		PLUG-PART A OF D00825 (continued)				ALL
	J11		W0101	208B	22		27-61-14	ALL
	J12	UNUSED						ALL
	J13		W0101	083	22		27-09-13	ALL
	J14	UNUSED						ALL
	J15	UNUSED						ALL
	K01	UNUSED						ALL
	K02	UNUSED						ALL
	K03		W0101	303R	22		27-61-14	ALL
	K04		W0101	303Y	22		27-61-14	ALL
	K05		W0101	303B	22		27-61-14	ALL
	K06		W0101	211R	22		27-61-14	ALL
	K07	UNUSED						ALL
	K08		W0101	304R	22		27-61-14	ALL
	K09		W0101	304Y	22		27-61-14	ALL
	K10		W0101	304B	22		27-61-14	ALL
	K11		W0101	208R	22		27-61-14	ALL
	K12	UNUSED						ALL
	K13		W0101	082	22		27-09-13	ALL
	K14	UNUSED						ALL
	K15		W1101	109	22		27-61-14	ALL
	DED		W0111	015Z			27-61-14	ALL
	DED		W1101	109Z			27-61-14	ALL
D00825B		//		PLUG-PART B OF D00825				ALL
	A01	UNUSED						ALL
	A02	UNUSED						ALL
	A03	UNUSED						ALL
	A04	UNUSED						ALL
	A05	UNUSED						ALL
	A06	UNUSED						ALL
	A07	UNUSED						ALL
	A08	UNUSED						ALL
	A09	UNUSED						ALL
	A10	UNUSED						ALL
	A11	UNUSED						ALL
	A12	UNUSED						ALL
	A13	UNUSED						ALL
	A14	UNUSED						ALL
	A15	UNUSED						ALL
	B01	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00800

Page 33

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00825B		//		PLUG-PART B OF D00825 (continued)				ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04	UNUSED						ALL
	B05	UNUSED						ALL
	B06		W0111	056	22		27-61-14	ALL
	B07		W0111	056	22		27-61-14	ALL
	B08	UNUSED						ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13	UNUSED						ALL
	B14		W0121	139	22		27-61-14	ALL
	B15		W0121	139	22		27-61-14	ALL
	C01	UNUSED						ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05	UNUSED						ALL
	C06	UNUSED						ALL
	C07	UNUSED						ALL
	C08	UNUSED						ALL
	C09	UNUSED						ALL
	C10	UNUSED						ALL
	C11	UNUSED						ALL
	C12	UNUSED						ALL
	C13	UNUSED						ALL
	C14	UNUSED						ALL
	C15	UNUSED						ALL
	D01	UNUSED						ALL
	D02		W0111	076	22		27-09-12	ALL
	D03	UNUSED						ALL
	D04	UNUSED						ALL
	D05	UNUSED						ALL
	D06		W0111	055	22		27-61-14	ALL
	D07		W0111	055	22		27-61-14	ALL
	D08	UNUSED						ALL
	D09	UNUSED						ALL
	D10		W0121	070	22		27-09-12	ALL
	D11	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D00800
Page 34
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00825B		//		PLUG-PART B OF D00825 (continued)				ALL
	D12	UNUSED						ALL
	D13	UNUSED						ALL
	D14		W0121	138	22		27-61-14	ALL
	D15		W0121	138	22		27-61-14	ALL
	E01	UNUSED						ALL
	E02		W0111	106	22		27-61-11	ALL
	E03	UNUSED						ALL
	E04	UNUSED						ALL
	E05	UNUSED						ALL
	E06	UNUSED						ALL
	E07	UNUSED						ALL
	E08	UNUSED						ALL
	E09	UNUSED						ALL
	E10		W0121	087	22		27-61-11	ALL
	E11	UNUSED						ALL
	E12	UNUSED						ALL
	E13	UNUSED						ALL
	E14	UNUSED						ALL
	E15	UNUSED						ALL
	F01	UNUSED						ALL
	F02	UNUSED						ALL
	F03	UNUSED						ALL
	F04		W0111	023	22		27-61-14	ALL
	F05	UNUSED						ALL
	F06		W0111	022	22		27-61-14	ALL
	F07	UNUSED						ALL
	F08	UNUSED						ALL
	F09	UNUSED						ALL
	F10	UNUSED						ALL
	F11	UNUSED						ALL
	F12		W0121	026	22		27-61-14	ALL
	F13	UNUSED						ALL
	F14		W0121	025	22		27-61-14	ALL
	F15	UNUSED						ALL
	G01	UNUSED						ALL
	G02	UNUSED						ALL
	G03	UNUSED						ALL
	G04		W0111	020	22		27-61-14	ALL
	G05	UNUSED						ALL
	G06		W0111	019	22		27-61-14	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00800

Page 35

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00825B		//		PLUG-PART B OF D00825 (continued)				ALL
	G07	UNUSED						ALL
	G08	UNUSED						ALL
	G09	UNUSED						ALL
	G10	UNUSED						ALL
	G11	UNUSED						ALL
	G12		W0121	028	22		27-61-14	ALL
	G13	UNUSED						ALL
	G14		W0121	027	22		27-61-14	ALL
	G15	UNUSED						ALL
	H01	UNUSED						ALL
	H02	UNUSED						ALL
	H03	UNUSED						ALL
	H04	UNUSED						ALL
	H05	UNUSED						ALL
	H06	UNUSED						ALL
	H07	UNUSED						ALL
	H08	UNUSED						ALL
	H09	UNUSED						ALL
	H10	UNUSED						ALL
	H11	UNUSED						ALL
	H12		W0121	178	22		27-61-14	ALL
	H13	UNUSED						ALL
	H14	UNUSED						ALL
	H15	UNUSED						ALL
	J01	UNUSED						ALL
	J02	UNUSED						ALL
	J03	UNUSED						ALL
	J04		W0111	306R	22		27-61-14	ALL
	J05		W0111	306Y	22		27-61-14	ALL
	J06		W0111	306B	22		27-61-14	ALL
	J07		W0111	208B	22		27-61-14	ALL
	J08	UNUSED						ALL
	J09	UNUSED						ALL
	J10	UNUSED						ALL
	J11	UNUSED						ALL
	J12		W0121	301R	22		27-61-14	ALL
	J13		W0121	301Y	22		27-61-14	ALL
	J14		W0121	301B	22		27-61-14	ALL
	J15		W0121	201B	22		27-61-14	ALL
	K01	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00800

Page 36

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00825B		//		PLUG-PART B OF D00825 (continued)				ALL
	K02	UNUSED						ALL
	K03	UNUSED						ALL
	K04		W0111	307R	22		27-61-14	ALL
	K05		W0111	307Y	22		27-61-14	ALL
	K06		W0111	307B	22		27-61-14	ALL
	K07		W0111	208R	22		27-61-14	ALL
	K08	UNUSED						ALL
	K09	UNUSED						ALL
	K10	UNUSED						ALL
	K11	UNUSED						ALL
	K12		W0121	302R	22		27-61-14	ALL
	K13		W0121	302Y	22		27-61-14	ALL
	K14		W0121	302B	22		27-61-14	ALL
	K15		W0121	201R	22		27-61-14	ALL
D00825C		//		PLUG-PART C OF D00825				ALL
	1	UNUSED						ALL
	2		W0121	128	16		27-61-14	ALL
	3		W0121	023	16		27-61-14	ALL
	4		W0121	119	20		27-61-12	ALL
	5		W0121	157	20		27-61-14	ALL
	6		W0121	130	20		27-61-14	ALL
	7		W0121	129	16		27-61-14	ALL
	8		W0121	022	16		27-61-14	ALL
	9		W0121	029	16		27-61-14	ALL
	10		W0121	024	16		27-61-14	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	= C12	UNUSED						ALL
	= C13	UNUSED						ALL
D00827A		//		PLUG-PART A OF D00827				ALL
	A01	UNUSED						ALL
	A02	UNUSED						ALL
	A03	UNUSED						ALL
	A04	UNUSED						ALL
	A05	UNUSED						ALL
	A06	UNUSED						ALL
	A07	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00800

Page 37

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00827A		//		PLUG-PART A OF D00827 (continued)				ALL
	A08		W0121	046	22		27-61-15	ALL
	A09	UNUSED						ALL
	A10	UNUSED						ALL
	A11	UNUSED						ALL
	A12		W0111	093	22		27-09-13	ALL
	A13	UNUSED						ALL
	A14	UNUSED						ALL
	A15		W0111	030	22		27-61-15	ALL
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04	UNUSED						ALL
	B05		W0121	145	22		27-61-15	ALL
	B06		W0121	145	22		27-61-15	ALL
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13		W0111	111	22		27-61-12	ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	C01	UNUSED						ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05	UNUSED						ALL
	C06	UNUSED						ALL
	C07		W0121	046	22		27-61-15	ALL
	C08	UNUSED						ALL
	C09	UNUSED						ALL
	C10	UNUSED						ALL
	C11	UNUSED						ALL
	C12	UNUSED						ALL
	C13		W0111	102	22		27-09-14	ALL
	C14		W1101	068	22		27-61-12	ALL
	C15		W1101	069	22		27-61-12	ALL
	D01		W0121	071	22		27-09-12	ALL
	D02	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00800

Page 38

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00827A		//		PLUG-PART A OF D00827 (continued)				ALL
	D03	UNUSED						ALL
	D04	UNUSED						ALL
	D05		W0121	144	22		27-61-15	ALL
	D06		W0121	144	22		27-61-15	ALL
	D07	UNUSED						ALL
	D08	UNUSED						ALL
	D09	UNUSED						ALL
	D10	UNUSED						ALL
	D11	UNUSED						ALL
	D12	UNUSED						ALL
	D13		W1101	081	22		27-61-12	ALL
	D14		W1101	083	22		27-61-12	ALL
	D15		W1101	098	22		27-61-12	ALL
	E01		W0121	086	22		27-61-11	ALL
	E02	UNUSED						ALL
	E03	UNUSED						ALL
	E04	UNUSED						ALL
	E05	UNUSED						ALL
	E06	UNUSED						ALL
	E07	UNUSED						ALL
	E08	UNUSED						ALL
	E09	UNUSED						ALL
	E10	UNUSED						ALL
	E11		W0121	089	22		27-61-15	ALL
	E12		W0121	091	22		27-61-15	ALL
	E13		W1101	094	22		27-61-12	ALL
	E14		W1101	096	22		27-61-12	ALL
	E15		W1101	085	22		27-61-12	ALL
	F01	UNUSED						ALL
	F02	UNUSED						ALL
	F03		W0121	040	22		27-61-15	ALL
	F04	UNUSED						ALL
	F05		W0121	039	22		27-61-15	ALL
	F06	UNUSED						ALL
	F07	UNUSED						ALL
	F08	UNUSED						ALL
	F09	UNUSED						ALL
	F10	UNUSED						ALL
	F11	UNUSED						ALL
	F12	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00800

Page 39

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00827A		//		PLUG-PART A OF D00827 (continued)				ALL
	F13		W1101	082	22		27-61-12	ALL
	F14		W1101	084	22		27-61-12	ALL
	F15		W1101	086	22		27-61-12	ALL
	G01	UNUSED						ALL
	G02	UNUSED						ALL
	G03		W0121	033	22		27-61-15	ALL
	G04	UNUSED						ALL
	G05		W0121	034	22		27-61-15	ALL
	G06	UNUSED						ALL
	G07	UNUSED						ALL
	G08		W0121	202B	22		27-61-15	ALL
	G09		W0121	202R	22		27-61-15	ALL
	G10		W0121	204R	22		27-61-15	ALL
	G11		W0121	204B	22		27-61-15	ALL
	G12	UNUSED						ALL
	G13		W1101	093	22		27-61-12	ALL
	G14		W1101	095	22		27-61-12	ALL
	G15		W1101	097	22		27-61-12	ALL
	H01	UNUSED						ALL
	H02	UNUSED						ALL
	H03	UNUSED						ALL
	H04	UNUSED						ALL
	H05	UNUSED						ALL
	H06	UNUSED						ALL
	H07	UNUSED						ALL
	H08	UNUSED						ALL
	H09	UNUSED						ALL
	H10	UNUSED						ALL
	H11	UNUSED						ALL
	H12	UNUSED						ALL
	H13		W1101	100	22		27-61-12	ALL
	H14		W1101	030	22		27-09-14	ALL
	H15		W1101	073	22		27-61-12	ALL
	J01	UNUSED						ALL
	J02	UNUSED						ALL
	J03		W0121	303R	22		27-61-15	ALL
	J04		W0121	303Y	22		27-61-15	ALL
	J05		W0121	303B	22		27-61-15	ALL
	J06		W0121	207B	22		27-61-15	ALL
	J07	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00800

Page 40

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00827A		//		PLUG-PART A OF D00827 (continued)				ALL
	J08		W0121	306R	22		27-61-15	ALL
	J09		W0121	306Y	22		27-61-15	ALL
	J10		W0121	306B	22		27-61-15	ALL
	J11		W0121	203B	22		27-61-15	ALL
	J12	UNUSED						ALL
	J13		W0121	082	22		27-09-13	ALL
	J14	UNUSED						ALL
	J15	UNUSED						ALL
	K01	UNUSED						ALL
	K02	UNUSED						ALL
	K03		W0121	304R	22		27-61-15	ALL
	K04		W0121	304Y	22		27-61-15	ALL
	K05		W0121	304B	22		27-61-15	ALL
	K06		W0121	207R	22		27-61-15	ALL
	K07	UNUSED						ALL
	K08		W0121	305R	22		27-61-15	ALL
	K09		W0121	305Y	22		27-61-15	ALL
	K10		W0121	305B	22		27-61-15	ALL
	K11		W0121	203R	22		27-61-15	ALL
	K12	UNUSED						ALL
	K13		W0121	081	22		27-09-13	ALL
	K14	UNUSED						ALL
	K15		W1101	111	22		27-61-15	ALL
	DED		W0111	030Z			27-61-15	ALL
	DED		W1101	111Z			27-61-15	ALL
D00827B		//		PLUG-PART B OF D00827				ALL
	A01	UNUSED						ALL
	A02	UNUSED						ALL
	A03	UNUSED						ALL
	A04	UNUSED						ALL
	A05	UNUSED						ALL
	A06	UNUSED						ALL
	A07	UNUSED						ALL
	A08	UNUSED						ALL
	A09	UNUSED						ALL
	A10	UNUSED						ALL
	A11	UNUSED						ALL
	A12	UNUSED						ALL
	A13	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00800

Page 41

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00827B		//		PLUG-PART B OF D00827 (continued)				ALL
	A14	UNUSED						ALL
	A15	UNUSED						ALL
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04	UNUSED						ALL
	B05	UNUSED						ALL
	B06		W0101	034	22		27-61-15	ALL
	B07		W0101	034	22		27-61-15	ALL
	B08	UNUSED						ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13	UNUSED						ALL
	B14		W0111	064	22		27-61-15	ALL
	B15		W0111	064	22		27-61-15	ALL
	C01	UNUSED						ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05	UNUSED						ALL
	C06	UNUSED						ALL
	C07	UNUSED						ALL
	C08	UNUSED						ALL
	C09	UNUSED						ALL
	C10	UNUSED						ALL
	C11	UNUSED						ALL
	C12	UNUSED						ALL
	C13	UNUSED						ALL
	C14	UNUSED						ALL
	C15	UNUSED						ALL
	D01	UNUSED						ALL
	D02		W0101	076	22		27-09-12	ALL
	D03	UNUSED						ALL
	D04	UNUSED						ALL
	D05	UNUSED						ALL
	D06		W0101	033	22		27-61-15	ALL
	D07		W0101	033	22		27-61-15	ALL
	D08	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00800

Page 42

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00827B		//		PLUG-PART B OF D00827 (continued)				ALL
	D09	UNUSED						ALL
	D10		W0111	077	22		27-09-12	ALL
	D11	UNUSED						ALL
	D12	UNUSED						ALL
	D13	UNUSED						ALL
	D14		W0111	063	22		27-61-15	ALL
	D15		W0111	063	22		27-61-15	ALL
	E01	UNUSED						ALL
	E02		W0101	113	22		27-61-11	ALL
	E03	UNUSED						ALL
	E04	UNUSED						ALL
	E05	UNUSED						ALL
	E06	UNUSED						ALL
	E07	UNUSED						ALL
	E08	UNUSED						ALL
	E09	UNUSED						ALL
	E10		W0111	107	22		27-61-11	ALL
	E11	UNUSED						ALL
	E12	UNUSED						ALL
	E13	UNUSED						ALL
	E14	UNUSED						ALL
	E15	UNUSED						ALL
	F01	UNUSED						ALL
	F02	UNUSED						ALL
	F03	UNUSED						ALL
	F04		W0101	055	22		27-61-15	ALL
	F05	UNUSED						ALL
	F06		W0101	054	22		27-61-15	ALL
	F07	UNUSED						ALL
	F08	UNUSED						ALL
	F09	UNUSED						ALL
	F10	UNUSED						ALL
	F11	UNUSED						ALL
	F12		W0111	036	22		27-61-15	ALL
	F13	UNUSED						ALL
	F14		W0111	035	22		27-61-15	ALL
	F15	UNUSED						ALL
	G01	UNUSED						ALL
	G02	UNUSED						ALL
	G03	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00800

Page 43

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00827B		//		PLUG-PART B OF D00827 (continued)				ALL
	G04		W0101	058	22		27-61-15	ALL
	G05	UNUSED						ALL
	G06		W0101	057	22		27-61-15	ALL
	G07	UNUSED						ALL
	G08	UNUSED						ALL
	G09	UNUSED						ALL
	G10	UNUSED						ALL
	G11	UNUSED						ALL
	G12		W0111	034	22		27-61-15	ALL
	G13	UNUSED						ALL
	G14		W0111	033	22		27-61-15	ALL
	G15	UNUSED						ALL
	H01	UNUSED						ALL
	H02	UNUSED						ALL
	H03	UNUSED						ALL
	H04	UNUSED						ALL
	H05	UNUSED						ALL
	H06	UNUSED						ALL
	H07	UNUSED						ALL
	H08	UNUSED						ALL
	H09	UNUSED						ALL
	H10	UNUSED						ALL
	H11	UNUSED						ALL
	H12		W0111	192	22		27-61-15	ALL
	H13	UNUSED						ALL
	H14	UNUSED						ALL
	H15	UNUSED						ALL
	J01	UNUSED						ALL
	J02	UNUSED						ALL
	J03	UNUSED						ALL
	J04		W0101	312R	22		27-61-15	ALL
	J05		W0101	312Y	22		27-61-15	ALL
	J06		W0101	312B	22		27-61-15	ALL
	J07		W0101	215B	22		27-61-15	ALL
	J08	UNUSED						ALL
	J09	UNUSED						ALL
	J10	UNUSED						ALL
	J11	UNUSED						ALL
	J12		W0111	308R	22		27-61-15	ALL
	J13		W0111	308Y	22		27-61-15	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00800

Page 44

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00827B		//		PLUG-PART B OF D00827 (continued)				ALL
	J14		W0111	308B	22		27-61-15	ALL
	J15		W0111	209B	22		27-61-15	ALL
	K01	UNUSED						ALL
	K02	UNUSED						ALL
	K03	UNUSED						ALL
	K04		W0101	313R	22		27-61-15	ALL
	K05		W0101	313Y	22		27-61-15	ALL
	K06		W0101	313B	22		27-61-15	ALL
	K07		W0101	215R	22		27-61-15	ALL
	K08	UNUSED						ALL
	K09	UNUSED						ALL
	K10	UNUSED						ALL
	K11	UNUSED						ALL
	K12		W0111	309R	22		27-61-15	ALL
	K13		W0111	309Y	22		27-61-15	ALL
	K14		W0111	309B	22		27-61-15	ALL
	K15		W0111	209R	22		27-61-15	ALL
D00827C		//		PLUG-PART C OF D00827				ALL
	1	UNUSED						ALL
	2		W0121	037	16		27-61-15	ALL
	3		W0121	090	16		27-61-15	ALL
	4		W0121	061	20		27-61-12	ALL
	5		W0121	159	20		27-61-15	ALL
	6		W0121	140	20		27-61-15	ALL
	7		W0121	031	16		27-61-15	ALL
	8		W0121	030	16		27-61-15	ALL
	9		W0121	036	16		27-61-15	ALL
	10		W0121	032	16		27-61-15	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	= C12	UNUSED						ALL
	= C13	UNUSED						ALL
D00829A		//		PLUG-PART A OF D00829				ALL
	A01	UNUSED						ALL
	A02	UNUSED						ALL
	A03	UNUSED						ALL
	A04	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00800

Page 45

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00829A		//		PLUG-PART A OF D00829 (continued)				ALL
	A05	UNUSED						ALL
	A06	UNUSED						ALL
	A07	UNUSED						ALL
	A08		W0111	046	22		27-61-16	ALL
	A09	UNUSED						ALL
	A10	UNUSED						ALL
	A11	UNUSED						ALL
	A12		W0111	092	22		27-09-13	ALL
	A13	UNUSED						ALL
	A14	UNUSED						ALL
	A15		W0111	047	22		27-61-16	ALL
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04	UNUSED						ALL
	B05		W0111	066	22		27-61-16	ALL
	B06		W0111	066	22		27-61-16	ALL
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13		W0111	110	22		27-61-12	ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	C01		W0111	191	22		27-61-16	ALL
	C02		W0111	167	22		27-61-16	ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05	UNUSED						ALL
	C06	UNUSED						ALL
	C07		W0111	046	22		27-61-16	ALL
	C08	UNUSED						ALL
	C09	UNUSED						ALL
	C10	UNUSED						ALL
	C11	UNUSED						ALL
	C12	UNUSED						ALL
	C13		W0111	101	22		27-09-14	ALL
	C14		W1101	067	22		27-61-12	ALL

HOOKUP LIST
D280T132

91-21-51
Section D00800
Page 46
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00829A		//		PLUG-PART A OF D00829 (continued)				ALL
	C15		W1101	068	22		27-61-12	ALL
	D01		W0111	078	22		27-09-12	ALL
	D02		W0111	167	22		27-61-16	ALL
	D03	UNUSED						ALL
	D04	UNUSED						ALL
	D05		W0111	065	22		27-61-16	ALL
	D06		W0111	065	22		27-61-16	ALL
	D07	UNUSED						ALL
	D08	UNUSED						ALL
	D09	UNUSED						ALL
	D10	UNUSED						ALL
	D11	UNUSED						ALL
	D12	UNUSED						ALL
	D13		W1101	088	22		27-61-12	ALL
	D14		W1101	090	22		27-61-12	ALL
	D15		W1101	086	22		27-61-12	ALL
	E01		W0111	108	22		27-61-11	ALL
	E02	UNUSED						ALL
	E03	UNUSED						ALL
	E04	UNUSED						ALL
	E05	UNUSED						ALL
	E06	UNUSED						ALL
	E07	UNUSED						ALL
	E08	UNUSED						ALL
	E09	UNUSED						ALL
	E10	UNUSED						ALL
	E11		W0111	039	22		27-61-16	ALL
	E12		W0111	187	22		27-61-16	ALL
	E13		W1101	082	22		27-61-12	ALL
	E14		W1101	084	22		27-61-12	ALL
	E15		W1101	092	22		27-61-12	ALL
	F01	UNUSED						ALL
	F02	UNUSED						ALL
	F03		W0111	051	22		27-61-16	ALL
	F04	UNUSED						ALL
	F05		W0111	050	22		27-61-16	ALL
	F06	UNUSED						ALL
	F07	UNUSED						ALL
	F08	UNUSED						ALL
	F09	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00800

Page 47

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00829A		//		PLUG-PART A OF D00829 (continued)				ALL
	F10	UNUSED						ALL
	F11	UNUSED						ALL
	F12	UNUSED						ALL
	F13		W1101	087	22		27-61-12	ALL
	F14		W1101	089	22		27-61-12	ALL
	F15		W1101	091	22		27-61-12	ALL
	G01	UNUSED						ALL
	G02	UNUSED						ALL
	G03		W0111	041	22		27-61-16	ALL
	G04	UNUSED						ALL
	G05		W0111	042	22		27-61-16	ALL
	G06	UNUSED						ALL
	G07	UNUSED						ALL
	G08		W0111	210B	22		27-61-16	ALL
	G09		W0111	210R	22		27-61-16	ALL
	G10		W0111	212R	22		27-61-16	ALL
	G11		W0111	212B	22		27-61-16	ALL
	G12	UNUSED						ALL
	G13		W1101	081	22		27-61-12	ALL
	G14		W1101	083	22		27-61-12	ALL
	G15		W1101	085	22		27-61-12	ALL
	H01	UNUSED						ALL
	H02	UNUSED						ALL
	H03	UNUSED						ALL
	H04	UNUSED						ALL
	H05	UNUSED						ALL
	H06	UNUSED						ALL
	H07	UNUSED						ALL
	H08	UNUSED						ALL
	H09	UNUSED						ALL
	H10	UNUSED						ALL
	H11	UNUSED						ALL
	H12	UNUSED						ALL
	H13		W1101	099	22		27-61-12	ALL
	H14		W1101	026	22		27-09-14	ALL
	H15		W1101	072	22		27-61-12	ALL
	J01	UNUSED						ALL
	J02	UNUSED						ALL
	J03		W0111	312R	22		27-61-16	ALL
	J04		W0111	312Y	22		27-61-16	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00800

Page 48

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00829A		//		PLUG-PART A OF D00829 (continued)				ALL
	J05		W0111	312B	22		27-61-16	ALL
	J06		W0111	215B	22		27-61-16	ALL
	J07	UNUSED						ALL
	J08		W0111	311R	22		27-61-16	ALL
	J09		W0111	311Y	22		27-61-16	ALL
	J10		W0111	311B	22		27-61-16	ALL
	J11		W0111	211B	22		27-61-16	ALL
	J12	UNUSED						ALL
	J13		W0121	011	22		27-09-13	ALL
	J14	UNUSED						ALL
	J15	UNUSED						ALL
	K01	UNUSED						ALL
	K02	UNUSED						ALL
	K03		W0111	313R	22		27-61-16	ALL
	K04		W0111	313Y	22		27-61-16	ALL
	K05		W0111	313B	22		27-61-16	ALL
	K06		W0111	215R	22		27-61-16	ALL
	K07	UNUSED						ALL
	K08		W0111	310R	22		27-61-16	ALL
	K09		W0111	310Y	22		27-61-16	ALL
	K10		W0111	310B	22		27-61-16	ALL
	K11		W0111	211R	22		27-61-16	ALL
	K12	UNUSED						ALL
	K13		W0121	010	22		27-09-13	ALL
	K14	UNUSED						ALL
	K15		W1101	113	22		27-61-16	ALL
	DED		W0111	047Z			27-61-16	ALL
	DED		W1101	113Z			27-61-16	ALL
D00829B		//		PLUG-PART B OF D00829				ALL
	A01	UNUSED						ALL
	A02	UNUSED						ALL
	A03	UNUSED						ALL
	A04	UNUSED						ALL
	A05	UNUSED						ALL
	A06	UNUSED						ALL
	A07	UNUSED						ALL
	A08	UNUSED						ALL
	A09	UNUSED						ALL
	A10	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00800

Page 49

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00829B		//		PLUG-PART B OF D00829 (continued)				ALL
	A11	UNUSED						ALL
	A12	UNUSED						ALL
	A13	UNUSED						ALL
	A14	UNUSED						ALL
	A15	UNUSED						ALL
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04	UNUSED						ALL
	B05	UNUSED						ALL
	B06		W0121	155	22		27-61-16	ALL
	B07		W0121	155	22		27-61-16	ALL
	B08	UNUSED						ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13	UNUSED						ALL
	B14		W0101	102	22		27-61-16	ALL
	B15		W0101	102	22		27-61-16	ALL
	C01	UNUSED						ALL
	C02		W0121	180	22		27-61-16	ALL
	C03		W0121	160	22		27-61-16	ALL
	C04	UNUSED						ALL
	C05	UNUSED						ALL
	C06	UNUSED						ALL
	C07	UNUSED						ALL
	C08	UNUSED						ALL
	C09	UNUSED						ALL
	C10		W0101	183	22		27-61-16	ALL
	C11		W0101	180	22		27-61-16	ALL
	C12	UNUSED						ALL
	C13	UNUSED						ALL
	C14	UNUSED						ALL
	C15	UNUSED						ALL
	D01	UNUSED						ALL
	D02		W0121	072	22		27-09-12	ALL
	D03		W0121	160	22		27-61-16	ALL
	D04	UNUSED						ALL
	D05	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00800

Page 50

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00829B		//		PLUG-PART B OF D00829 (continued)				ALL
	D06		W0121	154	22		27-61-16	ALL
	D07		W0121	154	22		27-61-16	ALL
	D08	UNUSED						ALL
	D09	UNUSED						ALL
	D10		W0101	075	22		27-09-12	ALL
	D11		W0101	180	22		27-61-16	ALL
	D12	UNUSED						ALL
	D13	UNUSED						ALL
	D14		W0101	101	22		27-61-16	ALL
	D15		W0101	101	22		27-61-16	ALL
	E01	UNUSED						ALL
	E02		W0121	085	22		27-61-11	ALL
	E03	UNUSED						ALL
	E04	UNUSED						ALL
	E05	UNUSED						ALL
	E06	UNUSED						ALL
	E07	UNUSED						ALL
	E08	UNUSED						ALL
	E09	UNUSED						ALL
	E10		W0101	112	22		27-61-11	ALL
	E11	UNUSED						ALL
	E12	UNUSED						ALL
	E13	UNUSED						ALL
	E14	UNUSED						ALL
	E15	UNUSED						ALL
	F01	UNUSED						ALL
	F02	UNUSED						ALL
	F03	UNUSED						ALL
	F04		W0121	052	22		27-61-16	ALL
	F05	UNUSED						ALL
	F06		W0121	051	22		27-61-16	ALL
	F07	UNUSED						ALL
	F08	UNUSED						ALL
	F09	UNUSED						ALL
	F10	UNUSED						ALL
	F11	UNUSED						ALL
	F12		W0101	087	22		27-61-16	ALL
	F13	UNUSED						ALL
	F14		W0101	086	22		27-61-16	ALL
	F15	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00800

Page 51

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00829B		//		PLUG-PART B OF D00829 (continued)				ALL
	G01	UNUSED						ALL
	G02	UNUSED						ALL
	G03	UNUSED						ALL
	G04		W0121	049	22		27-61-16	ALL
	G05	UNUSED						ALL
	G06		W0121	048	22		27-61-16	ALL
	G07	UNUSED						ALL
	G08	UNUSED						ALL
	G09	UNUSED						ALL
	G10	UNUSED						ALL
	G11	UNUSED						ALL
	G12		W0101	092	22		27-61-16	ALL
	G13	UNUSED						ALL
	G14		W0101	091	22		27-61-16	ALL
	G15	UNUSED						ALL
	H01	UNUSED						ALL
	H02	UNUSED						ALL
	H03	UNUSED						ALL
	H04	UNUSED						ALL
	H05	UNUSED						ALL
	H06	UNUSED						ALL
	H07	UNUSED						ALL
	H08	UNUSED						ALL
	H09	UNUSED						ALL
	H10	UNUSED						ALL
	H11	UNUSED						ALL
	H12		W0101	181	22		27-61-16	ALL
	H13	UNUSED						ALL
	H14	UNUSED						ALL
	H15	UNUSED						ALL
	J01	UNUSED						ALL
	J02	UNUSED						ALL
	J03	UNUSED						ALL
	J04		W0121	309R	22		27-61-16	ALL
	J05		W0121	309Y	22		27-61-16	ALL
	J06		W0121	309B	22		27-61-16	ALL
	J07		W0121	211B	22		27-61-16	ALL
	J08	UNUSED						ALL
	J09	UNUSED						ALL
	J10	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00800

Page 52

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00829B		//		PLUG-PART B OF D00829 (continued)				ALL
	J11	UNUSED						ALL
	J12		W0101	308R	22		27-61-16	ALL
	J13		W0101	308Y	22		27-61-16	ALL
	J14		W0101	308B	22		27-61-16	ALL
	J15		W0101	216B	22		27-61-16	ALL
	K01	UNUSED						ALL
	K02	UNUSED						ALL
	K03	UNUSED						ALL
	K04		W0121	310R	22		27-61-16	ALL
	K05		W0121	310Y	22		27-61-16	ALL
	K06		W0121	310B	22		27-61-16	ALL
	K07		W0121	211R	22		27-61-16	ALL
	K08	UNUSED						ALL
	K09	UNUSED						ALL
	K10	UNUSED						ALL
	K11	UNUSED						ALL
	K12		W0101	309R	22		27-61-16	ALL
	K13		W0101	309Y	22		27-61-16	ALL
	K14		W0101	309B	22		27-61-16	ALL
	K15		W0101	216R	22		27-61-16	ALL
D00829C		//		PLUG-PART C OF D00829				ALL
	1	UNUSED						ALL
	2		W0121	148	16		27-61-16	ALL
	3		W0121	147	16		27-61-16	ALL
	4		W0121	053	20		27-61-12	ALL
	5		W0121	161	20		27-61-16	ALL
	6		W0121	044	20		27-61-16	ALL
	7		W0121	149	16		27-61-16	ALL
	8		W0121	146	16		27-61-16	ALL
	9		W0121	150	16		27-61-16	ALL
	10		W0121	043	16		27-61-16	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	= C12	UNUSED						ALL
	= C13	UNUSED						ALL
D00831A		//		PLUG-PART A OF D00831				ALL
	A01	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00800

Page 53

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00831A		//		PLUG-PART A OF D00831 (continued)				ALL
	A02	UNUSED						ALL
	A03	UNUSED						ALL
	A04	UNUSED						ALL
	A05	UNUSED						ALL
	A06	UNUSED						ALL
	A07	UNUSED						ALL
	A08		W0131	046	22		27-61-13	ALL
	A09	UNUSED						ALL
	A10	UNUSED						ALL
	A11	UNUSED						ALL
	A12		W0141	086	22		27-09-13	ALL
	A13		W0141	079	22		27-09-13	ALL
	A14	UNUSED						ALL
	A15		W0141	129	22		27-61-13	ALL
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04	UNUSED						ALL
	B05		W0131	038	22		27-61-13	ALL
	B06		W0131	038	22		27-61-13	ALL
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13		W0141	124	22		27-61-12	ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	C01	UNUSED						ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05	UNUSED						ALL
	C06	UNUSED						ALL
	C07		W0131	046	22		27-61-13	ALL
	C08	UNUSED						ALL
	C09	UNUSED						ALL
	C10	UNUSED						ALL
	C11	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00800

Page 54

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00831A		//		PLUG-PART A OF D00831 (continued)				ALL
	C12	UNUSED						ALL
	C13		W0141	097	22		27-09-14	ALL
	C14		W1131	050	22		27-61-12	ALL
	C15		W1131	093	22		27-61-12	ALL
	D01		W0131	057	22		27-09-12	ALL
	D02	UNUSED						ALL
	D03	UNUSED						ALL
	D04	UNUSED						ALL
	D05		W0131	037	22		27-61-13	ALL
	D06		W0131	037	22		27-61-13	ALL
	D07	UNUSED						ALL
	D08	UNUSED						ALL
	D09	UNUSED						ALL
	D10	UNUSED						ALL
	D11	UNUSED						ALL
	D12	UNUSED						ALL
	D13		W1131	071	22		27-61-12	ALL
	D14		W1131	073	22		27-61-12	ALL
	D15		W1131	069	22		27-61-12	ALL
	E01		W0131	095	22		27-61-11	ALL
	E02	UNUSED						ALL
	E03	UNUSED						ALL
	E04	UNUSED						ALL
	E05	UNUSED						ALL
	E06	UNUSED						ALL
	E07	UNUSED						ALL
	E08	UNUSED						ALL
	E09	UNUSED						ALL
	E10	UNUSED						ALL
	E11		W0131	101	22		27-61-13	ALL
	E12		W0131	104	22		27-61-13	ALL
	E13		W1131	065	22		27-61-12	ALL
	E14		W1131	067	22		27-61-12	ALL
	E15		W1131	075	22		27-61-12	ALL
	F01	UNUSED						ALL
	F02	UNUSED						ALL
	F03		W0131	105	22		27-61-13	ALL
	F04	UNUSED						ALL
	F05		W0131	106	22		27-61-13	ALL
	F06	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00800

Page 55

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00831A		//		PLUG-PART A OF D00831 (continued)				ALL
	F07	UNUSED						ALL
	F08	UNUSED						ALL
	F09	UNUSED						ALL
	F10	UNUSED						ALL
	F11	UNUSED						ALL
	F12	UNUSED						ALL
	F13		W1131	072	22		27-61-12	ALL
	F14		W1131	074	22		27-61-12	ALL
	F15		W1131	076	22		27-61-12	ALL
	G01	UNUSED						ALL
	G02	UNUSED						ALL
	G03		W0131	098	22		27-61-13	ALL
	G04	UNUSED						ALL
	G05		W0131	099	22		27-61-13	ALL
	G06	UNUSED						ALL
	G07	UNUSED						ALL
	G08		W0131	209B	22		27-61-13	ALL
	G09		W0131	209R	22		27-61-13	ALL
	G10		W0131	212R	22		27-61-13	ALL
	G11		W0131	212B	22		27-61-13	ALL
	G12	UNUSED						ALL
	G13		W1131	066	22		27-61-12	ALL
	G14		W1131	068	22		27-61-12	ALL
	G15		W1131	070	22		27-61-12	ALL
	H01	UNUSED						ALL
	H02	UNUSED						ALL
	H03	UNUSED						ALL
	H04	UNUSED						ALL
	H05	UNUSED						ALL
	H06	UNUSED						ALL
	H07	UNUSED						ALL
	H08	UNUSED						ALL
	H09	UNUSED						ALL
	H10	UNUSED						ALL
	H11	UNUSED						ALL
	H12	UNUSED						ALL
	H13		W1131	054	22		27-61-12	ALL
	H14		W1131	023	22		27-09-14	ALL
	H15		W1131	049	22		27-61-12	ALL
	J01	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D00800
Page 56
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00831A		//		PLUG-PART A OF D00831 (continued)				ALL
	J02	UNUSED						ALL
	J03		W0131	303R	22		27-61-13	ALL
	J04		W0131	303Y	22		27-61-13	ALL
	J05		W0131	303B	22		27-61-13	ALL
	J06		W0131	208B	22		27-61-13	ALL
	J07	UNUSED						ALL
	J08		W0131	304R	22		27-61-13	ALL
	J09		W0131	304Y	22		27-61-13	ALL
	J10		W0131	304B	22		27-61-13	ALL
	J11		W0131	213B	22		27-61-13	ALL
	J12	UNUSED						ALL
	J13	UNUSED						ALL
	J14	UNUSED						ALL
	J15	UNUSED						ALL
	K01	UNUSED						ALL
	K02	UNUSED						ALL
	K03		W0131	302R	22		27-61-13	ALL
	K04		W0131	302Y	22		27-61-13	ALL
	K05		W0131	302B	22		27-61-13	ALL
	K06		W0131	208R	22		27-61-13	ALL
	K07	UNUSED						ALL
	K08		W0131	305R	22		27-61-13	ALL
	K09		W0131	305Y	22		27-61-13	ALL
	K10		W0131	305B	22		27-61-13	ALL
	K11		W0131	213R	22		27-61-13	ALL
	K12	UNUSED						ALL
	K13		W0131	063	22		27-09-13	ALL
	K14	UNUSED						ALL
	K15		W0131	107	22		27-61-13	ALL
D00831B		//		PLUG-PART B OF D00831				ALL
	A01	UNUSED						ALL
	A02	UNUSED						ALL
	A03	UNUSED						ALL
	A04	UNUSED						ALL
	A05	UNUSED						ALL
	A06	UNUSED						ALL
	A07	UNUSED						ALL
	A08	UNUSED						ALL
	A09	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00800

Page 57

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00831B		//		PLUG-PART B OF D00831 (continued)				ALL
	A10	UNUSED						ALL
	A11	UNUSED						ALL
	A12	UNUSED						ALL
	A13	UNUSED						ALL
	A14	UNUSED						ALL
	A15	UNUSED						ALL
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04	UNUSED						ALL
	B05	UNUSED						ALL
	B06		W0141	037	22		27-61-13	ALL
	B07		W0141	037	22		27-61-13	ALL
	B08	UNUSED						ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13	UNUSED						ALL
	B14		W0151	149	22		27-61-13	ALL
	B15		W0151	149	22		27-61-13	ALL
	C01	UNUSED						ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05	UNUSED						ALL
	C06	UNUSED						ALL
	C07	UNUSED						ALL
	C08	UNUSED						ALL
	C09	UNUSED						ALL
	C10	UNUSED						ALL
	C11	UNUSED						ALL
	C12	UNUSED						ALL
	C13	UNUSED						ALL
	C14	UNUSED						ALL
	C15	UNUSED						ALL
	D01	UNUSED						ALL
	D02		W0141	073	22		27-09-12	ALL
	D03	UNUSED						ALL
	D04	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D00800
Page 58
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00831B		//		PLUG-PART B OF D00831 (continued)				ALL
	D05	UNUSED						ALL
	D06		W0141	036	22		27-61-13	ALL
	D07		W0141	036	22		27-61-13	ALL
	D08	UNUSED						ALL
	D09	UNUSED						ALL
	D10		W0151	026	22		27-09-12	ALL
	D11	UNUSED						ALL
	D12	UNUSED						ALL
	D13	UNUSED						ALL
	D14		W0151	148	22		27-61-13	ALL
	D15		W0151	148	22		27-61-13	ALL
	E01	UNUSED						ALL
	E02		W0141	119	22		27-61-11	ALL
	E03	UNUSED						ALL
	E04	UNUSED						ALL
	E05	UNUSED						ALL
	E06	UNUSED						ALL
	E07	UNUSED						ALL
	E08	UNUSED						ALL
	E09	UNUSED						ALL
	E10		W0151	046	22		27-61-11	ALL
	E11	UNUSED						ALL
	E12	UNUSED						ALL
	E13	UNUSED						ALL
	E14	UNUSED						ALL
	E15	UNUSED						ALL
	F01	UNUSED						ALL
	F02	UNUSED						ALL
	F03	UNUSED						ALL
	F04		W0141	136	22		27-61-13	ALL
	F05	UNUSED						ALL
	F06		W0141	135	22		27-61-13	ALL
	F07	UNUSED						ALL
	F08	UNUSED						ALL
	F09	UNUSED						ALL
	F10	UNUSED						ALL
	F11	UNUSED						ALL
	F12		W0151	060	22		27-61-13	ALL
	F13	UNUSED						ALL
	F14		W0151	059	22		27-61-13	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00800

Page 59

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00831B		//		PLUG-PART B OF D00831 (continued)				ALL
	F15	UNUSED						ALL
	G01	UNUSED						ALL
	G02	UNUSED						ALL
	G03	UNUSED						ALL
	G04		W0141	133	22		27-61-13	ALL
	G05	UNUSED						ALL
	G06		W0141	132	22		27-61-13	ALL
	G07	UNUSED						ALL
	G08	UNUSED						ALL
	G09	UNUSED						ALL
	G10	UNUSED						ALL
	G11	UNUSED						ALL
	G12		W0151	062	22		27-61-13	ALL
	G13	UNUSED						ALL
	G14		W0151	061	22		27-61-13	ALL
	G15	UNUSED						ALL
	H01	UNUSED						ALL
	H02	UNUSED						ALL
	H03	UNUSED						ALL
	H04	UNUSED						ALL
	H05	UNUSED						ALL
	H06	UNUSED						ALL
	H07	UNUSED						ALL
	H08	UNUSED						ALL
	H09	UNUSED						ALL
	H10	UNUSED						ALL
	H11	UNUSED						ALL
	H12		W0141	601	24		27-32-21	ALL
	H13	UNUSED						ALL
	H14	UNUSED						ALL
	H15	UNUSED						ALL
	J01	UNUSED						ALL
	J02	UNUSED						ALL
	J03	UNUSED						ALL
	J04		W0141	302R	22		27-61-13	ALL
	J05		W0141	302Y	22		27-61-13	ALL
	J06		W0141	302B	22		27-61-13	ALL
	J07		W0141	213B	22		27-61-13	ALL
	J08	UNUSED						ALL
	J09	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00800

Page 60

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00831B		//		PLUG-PART B OF D00831 (continued)				ALL
	J10	UNUSED						ALL
	J11	UNUSED						ALL
	J12		W0151	301R	22		27-61-13	ALL
	J13		W0151	301Y	22		27-61-13	ALL
	J14		W0151	301B	22		27-61-13	ALL
	J15		W0151	203B	22		27-61-13	ALL
	K01	UNUSED						ALL
	K02	UNUSED						ALL
	K03	UNUSED						ALL
	K04		W0141	304R	22		27-61-13	ALL
	K05		W0141	304Y	22		27-61-13	ALL
	K06		W0141	304B	22		27-61-13	ALL
	K07		W0141	213R	22		27-61-13	ALL
	K08	UNUSED						ALL
	K09	UNUSED						ALL
	K10	UNUSED						ALL
	K11	UNUSED						ALL
	K12		W0151	302R	22		27-61-13	ALL
	K13		W0151	302Y	22		27-61-13	ALL
	K14		W0151	302B	22		27-61-13	ALL
	K15		W0151	203R	22		27-61-13	ALL
D00831C		//		PLUG-PART C OF D00831				ALL
	1	UNUSED						ALL
	2		W0151	150	16		27-61-13	ALL
	3		W0151	056	16		27-61-13	ALL
	4		W0151	135	20		27-61-12	ALL
	5		W0151	166	20		27-61-13	ALL
	6		W0151	152	20		27-61-13	ALL
	7		W0151	151	16		27-61-13	ALL
	8		W0151	055	16		27-61-13	ALL
	9		W0151	058	16		27-61-13	ALL
	10		W0151	057	16		27-61-13	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	= C12	UNUSED						ALL
	= C13	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00800

Page 61

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00832		P005-00/ /		PLUG-P5				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W0062	584	18		30-42-11	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W0062	587	18		30-42-11	ALL
	8		W0062	588	22		30-43-11	ALL
	9		W0062	589	22		30-43-11	ALL
	10		W0062	590	18		30-42-11	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D00833A		//		PLUG-PART A OF D00833				ALL
	A01	UNUSED						ALL
	A02	UNUSED						ALL
	A03	UNUSED						ALL
	A04	UNUSED						ALL
	A05	UNUSED						ALL
	A06	UNUSED						ALL
	A07	UNUSED						ALL
	A08	UNUSED						ALL
	A09	UNUSED						ALL
	A10	UNUSED						ALL
	A11	UNUSED						ALL
	A12		W0141	065	22		27-09-13	ALL
	A13	UNUSED						ALL
	A14	UNUSED						ALL
	A15		W0141	139	22		27-61-17	ALL
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04		W0151	158	22		27-61-17	ALL
	B05		W0151	158	22		27-61-17	ALL
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D00800
Page 62
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00833A		//		PLUG-PART A OF D00833 (continued)				ALL
	B12	UNUSED						ALL
	B13		W0141	123	22		27-61-12	ALL
	B14		W1131	092	22		27-61-12	ALL
	B15	UNUSED						ALL
	C01		W0151	178	22		27-61-17	ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05	UNUSED						ALL
	C06	UNUSED						ALL
	C07	UNUSED						ALL
	C08	UNUSED						ALL
	C09	UNUSED						ALL
	C10	UNUSED						ALL
	C11	UNUSED						ALL
	C12	UNUSED						ALL
	C13		W0141	096	22		27-09-14	ALL
	C14	UNUSED						ALL
	C15		W1131	050	22		27-61-12	ALL
	D01		W0151	025	22		27-09-12	ALL
	D02		W0151	153	22		27-61-17	ALL
	D03		W0151	153	22		27-61-17	ALL
	D04		W0151	157	22		27-61-17	ALL
	D05		W0151	157	22		27-61-17	ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	D08	UNUSED						ALL
	D09	UNUSED						ALL
	D10	UNUSED						ALL
	D11	UNUSED						ALL
	D12	UNUSED						ALL
	D13		W1131	059	22		27-61-12	ALL
	D14		W1131	061	22		27-61-12	ALL
	D15		W1131	076	22		27-61-12	ALL
	E01		W0151	045	22		27-61-11	ALL
	E02	UNUSED						ALL
	E03	UNUSED						ALL
	E04	UNUSED						ALL
	E05	UNUSED						ALL
	E06	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00800

Page 63

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00833A		//		PLUG-PART A OF D00833 (continued)				ALL
	E07	UNUSED						ALL
	E08	UNUSED						ALL
	E09	UNUSED						ALL
	E10	UNUSED						ALL
	E11		W0151	049	22		27-61-17	ALL
	E12		W0151	050	22		27-61-17	ALL
	E13		W1131	072	22		27-61-12	ALL
	E14		W1131	074	22		27-61-12	ALL
	E15		W1131	063	22		27-61-12	ALL
	F01	UNUSED						ALL
	F02	UNUSED						ALL
	F03		W0151	077	22		27-61-17	ALL
	F04	UNUSED						ALL
	F05		W0151	076	22		27-61-17	ALL
	F06	UNUSED						ALL
	F07	UNUSED						ALL
	F08	UNUSED						ALL
	F09	UNUSED						ALL
	F10	UNUSED						ALL
	F11	UNUSED						ALL
	F12	UNUSED						ALL
	F13		W1131	060	22		27-61-12	ALL
	F14		W1131	062	22		27-61-12	ALL
	F15		W1131	064	22		27-61-12	ALL
	G01	UNUSED						ALL
	G02	UNUSED						ALL
	G03		W0151	070	22		27-61-17	ALL
	G04	UNUSED						ALL
	G05		W0151	071	22		27-61-17	ALL
	G06	UNUSED						ALL
	G07	UNUSED						ALL
	G08		W0151	204B	22		27-61-17	ALL
	G09		W0151	204R	22		27-61-17	ALL
	G10		W0151	206R	22		27-61-17	ALL
	G11		W0151	206B	22		27-61-17	ALL
	G12	UNUSED						ALL
	G13		W1131	071	22		27-61-12	ALL
	G14		W1131	073	22		27-61-12	ALL
	G15		W1131	075	22		27-61-12	ALL
	H01	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D00800
Page 64
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00833A		//		PLUG-PART A OF D00833 (continued)				ALL
	H02	UNUSED						ALL
	H03	UNUSED						ALL
	H04	UNUSED						ALL
	H05	UNUSED						ALL
	H06	UNUSED						ALL
	H07	UNUSED						ALL
	H08	UNUSED						ALL
	H09	UNUSED						ALL
	H10	UNUSED						ALL
	H11	UNUSED						ALL
	H12	UNUSED						ALL
	H13		W1131	053	22		27-61-12	ALL
	H14		W1131	021	22		27-09-14	ALL
	H15		W1131	048	22		27-61-12	ALL
	J01	UNUSED						ALL
	J02	UNUSED						ALL
	J03		W0151	303R	22		27-61-17	ALL
	J04		W0151	303Y	22		27-61-17	ALL
	J05		W0151	303B	22		27-61-17	ALL
	J06		W0151	207B	22		27-61-17	ALL
	J07	UNUSED						ALL
	J08		W0151	306R	22		27-61-17	ALL
	J09		W0151	306Y	22		27-61-17	ALL
	J10		W0151	306B	22		27-61-17	ALL
	J11		W0151	205B	22		27-61-17	ALL
	J12	UNUSED						ALL
	J13		W0151	030	22		27-09-13	ALL
	J14	UNUSED						ALL
	J15	UNUSED						ALL
	K01	UNUSED						ALL
	K02	UNUSED						ALL
	K03		W0151	304R	22		27-61-17	ALL
	K04		W0151	304Y	22		27-61-17	ALL
	K05		W0151	304B	22		27-61-17	ALL
	K06		W0151	207R	22		27-61-17	ALL
	K07	UNUSED						ALL
	K08		W0151	305R	22		27-61-17	ALL
	K09		W0151	305Y	22		27-61-17	ALL
	K10		W0151	305B	22		27-61-17	ALL
	K11		W0151	205R	22		27-61-17	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00800

Page 65

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00833A		//		PLUG-PART A OF D00833 (continued)				ALL
	K12	UNUSED						ALL
	K13		W0151	031	22		27-09-13	ALL
	K14	UNUSED						ALL
	K15		W0131	111	22		27-61-17	ALL
D00833B		//		PLUG-PART B OF D00833				ALL
	A01	UNUSED						ALL
	A02	UNUSED						ALL
	A03	UNUSED						ALL
	A04	UNUSED						ALL
	A05	UNUSED						ALL
	A06	UNUSED						ALL
	A07	UNUSED						ALL
	A08	UNUSED						ALL
	A09	UNUSED						ALL
	A10	UNUSED						ALL
	A11	UNUSED						ALL
	A12	UNUSED						ALL
	A13	UNUSED						ALL
	A14	UNUSED						ALL
	A15	UNUSED						ALL
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04	UNUSED						ALL
	B05		W0131	031	22		27-61-17	ALL
	B06		W0131	031	22		27-61-17	ALL
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13		W0141	043	22		27-61-17	ALL
	B14		W0141	043	22		27-61-17	ALL
	B15	UNUSED						ALL
	C01	UNUSED						ALL
	C02		W0131	139	22		27-61-17	ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00800

Page 66

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00833B		//		PLUG-PART B OF D00833 (continued)				ALL
	C05	UNUSED						ALL
	C06	UNUSED						ALL
	C07	UNUSED						ALL
	C08	UNUSED						ALL
	C09	UNUSED						ALL
	C10		W0141	195	22		27-61-17	ALL
	C11	UNUSED						ALL
	C12	UNUSED						ALL
	C13	UNUSED						ALL
	C14	UNUSED						ALL
	C15	UNUSED						ALL
	D01	UNUSED						ALL
	D02		W0131	056	22		27-09-12	ALL
	D03		W0131	026	22		27-61-17	ALL
	D04		W0131	026	22		27-61-17	ALL
	D05		W0131	030	22		27-61-17	ALL
	D06		W0131	030	22		27-61-17	ALL
	D07	UNUSED						ALL
	D08	UNUSED						ALL
	D09	UNUSED						ALL
	D10		W0141	072	22		27-09-12	ALL
	D11		W0141	038	22		27-61-17	ALL
	D12		W0141	038	22		27-61-17	ALL
	D13		W0141	042	22		27-61-17	ALL
	D14		W0141	042	22		27-61-17	ALL
	D15	UNUSED						ALL
	E01	UNUSED						ALL
	E02		W0131	094	22		27-61-11	ALL
	E03	UNUSED						ALL
	E04	UNUSED						ALL
	E05	UNUSED						ALL
	E06	UNUSED						ALL
	E07	UNUSED						ALL
	E08	UNUSED						ALL
	E09	UNUSED						ALL
	E10		W0141	118	22		27-61-11	ALL
	E11	UNUSED						ALL
	E12	UNUSED						ALL
	E13	UNUSED						ALL
	E14	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00800

Page 67

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00833B		//		PLUG-PART B OF D00833 (continued)				ALL
	E15	UNUSED						ALL
	F01	UNUSED						ALL
	F02	UNUSED						ALL
	F03	UNUSED						ALL
	F04		W0131	113	22		27-61-17	ALL
	F05	UNUSED						ALL
	F06		W0131	112	22		27-61-17	ALL
	F07	UNUSED						ALL
	F08	UNUSED						ALL
	F09	UNUSED						ALL
	F10	UNUSED						ALL
	F11	UNUSED						ALL
	F12		W0141	145	22		27-61-17	ALL
	F13	UNUSED						ALL
	F14		W0141	144	22		27-61-17	ALL
	F15	UNUSED						ALL
	G01	UNUSED						ALL
	G02	UNUSED						ALL
	G03	UNUSED						ALL
	G04		W0131	110	22		27-61-17	ALL
	G05	UNUSED						ALL
	G06		W0131	109	22		27-61-17	ALL
	G07	UNUSED						ALL
	G08	UNUSED						ALL
	G09	UNUSED						ALL
	G10	UNUSED						ALL
	G11	UNUSED						ALL
	G12		W0141	142	22		27-61-17	ALL
	G13	UNUSED						ALL
	G14		W0141	141	22		27-61-17	ALL
	G15	UNUSED						ALL
	H01	UNUSED						ALL
	H02	UNUSED						ALL
	H03	UNUSED						ALL
	H04	UNUSED						ALL
	H05	UNUSED						ALL
	H06	UNUSED						ALL
	H07	UNUSED						ALL
	H08	UNUSED						ALL
	H09	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00800

Page 68

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00833B		//		PLUG-PART B OF D00833 (continued)				ALL
	H10	UNUSED						ALL
	H11	UNUSED						ALL
	H12		W0141	193	22		27-61-17	ALL
	H13	UNUSED						ALL
	H14	UNUSED						ALL
	H15	UNUSED						ALL
	J01	UNUSED						ALL
	J02	UNUSED						ALL
	J03	UNUSED						ALL
	J04		W0131	306R	22		27-61-17	ALL
	J05		W0131	306Y	22		27-61-17	ALL
	J06		W0131	306B	22		27-61-17	ALL
	J07		W0131	214B	22		27-61-17	ALL
	J08	UNUSED						ALL
	J09	UNUSED						ALL
	J10	UNUSED						ALL
	J11	UNUSED						ALL
	J12		W0141	306R	22		27-61-17	ALL
	J13		W0141	306Y	22		27-61-17	ALL
	J14		W0141	306B	22		27-61-17	ALL
	J15		W0141	214B	22		27-61-17	ALL
	K01	UNUSED						ALL
	K02	UNUSED						ALL
	K03	UNUSED						ALL
	K04		W0131	309R	22		27-61-17	ALL
	K05		W0131	309Y	22		27-61-17	ALL
	K06		W0131	309B	22		27-61-17	ALL
	K07		W0131	214R	22		27-61-17	ALL
	K08	UNUSED						ALL
	K09	UNUSED						ALL
	K10	UNUSED						ALL
	K11	UNUSED						ALL
	K12		W0141	305R	22		27-61-17	ALL
	K13		W0141	305Y	22		27-61-17	ALL
	K14		W0141	305B	22		27-61-17	ALL
	K15		W0141	214R	22		27-61-17	ALL
D00833C		//		PLUG-PART C OF D00833				ALL
	1	UNUSED						ALL
	2		W0151	074	16		27-61-17	ALL

HOOKUP LIST
D280T132

91-21-51
Section D00800
Page 69
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00833C		//		PLUG-PART C OF D00833 (continued)				ALL
	3		W0151	073	16		27-61-17	ALL
	4		W0151	014	20		27-61-12	ALL
	5		W0151	167	20		27-61-17	ALL
	6		W0151	064	20		27-61-17	ALL
	7		W0151	083	16		27-61-17	ALL
	8		W0151	068	16		27-61-17	ALL
	9		W0151	063	16		27-61-17	ALL
	10		W0151	069	16		27-61-17	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	= C12	UNUSED						ALL
	= C13	UNUSED						ALL
D00835A		//		PLUG-PART A OF D00835				ALL
	A01	UNUSED						ALL
	A02	UNUSED						ALL
	A03	UNUSED						ALL
	A04	UNUSED						ALL
	A05	UNUSED						ALL
	A06	UNUSED						ALL
	A07	UNUSED						ALL
	A08	UNUSED						ALL
	A09	UNUSED						ALL
	A10	UNUSED						ALL
	A11	UNUSED						ALL
	A12		W0141	082	22		27-09-13	ALL
	A13		W0141	075	22		27-09-13	ALL
	A14	UNUSED						ALL
	A15		W0141	167	22		27-61-18	ALL
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04		W0141	158	22		27-61-18	ALL
	B05		W0141	158	22		27-61-18	ALL
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00835A		//		PLUG-PART A OF D00835 (continued)				ALL
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13		W0141	122	22		27-61-12	ALL
	B14		W1131	093	22		27-61-12	ALL
	B15	UNUSED						ALL
	C01	UNUSED						ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05	UNUSED						ALL
	C06	UNUSED						ALL
	C07	UNUSED						ALL
	C08	UNUSED						ALL
	C09	UNUSED						ALL
	C10	UNUSED						ALL
	C11	UNUSED						ALL
	C12	UNUSED						ALL
	C13		W0141	094	22		27-09-14	ALL
	C14	UNUSED						ALL
	C15		W1131	092	22		27-61-12	ALL
	D01		W0141	071	22		27-09-12	ALL
	D02		W0141	153	22		27-61-18	ALL
	D03		W0141	153	22		27-61-18	ALL
	D04		W0141	157	22		27-61-18	ALL
	D05		W0141	157	22		27-61-18	ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	D08	UNUSED						ALL
	D09	UNUSED						ALL
	D10	UNUSED						ALL
	D11	UNUSED						ALL
	D12	UNUSED						ALL
	D13		W1131	066	22		27-61-12	ALL
	D14		W1131	068	22		27-61-12	ALL
	D15		W1131	064	22		27-61-12	ALL
	E01		W0141	117	22		27-61-11	ALL
	E02	UNUSED						ALL
	E03	UNUSED						ALL
	E04	UNUSED						ALL
	E05	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00800

Page 71

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00835A		//		PLUG-PART A OF D00835 (continued)				ALL
	E06	UNUSED						ALL
	E07	UNUSED						ALL
	E08	UNUSED						ALL
	E09	UNUSED						ALL
	E10	UNUSED						ALL
	E11		W0141	163	22		27-61-18	ALL
	E12		W0141	171	22		27-61-18	ALL
	E13		W1131	060	22		27-61-12	ALL
	E14		W1131	062	22		27-61-12	ALL
	E15		W1131	070	22		27-61-12	ALL
	F01	UNUSED						ALL
	F02	UNUSED						ALL
	F03		W0141	172	22		27-61-18	ALL
	F04	UNUSED						ALL
	F05		W0141	173	22		27-61-18	ALL
	F06	UNUSED						ALL
	F07	UNUSED						ALL
	F08	UNUSED						ALL
	F09	UNUSED						ALL
	F10	UNUSED						ALL
	F11	UNUSED						ALL
	F12	UNUSED						ALL
	F13		W1131	065	22		27-61-12	ALL
	F14		W1131	067	22		27-61-12	ALL
	F15		W1131	069	22		27-61-12	ALL
	G01	UNUSED						ALL
	G02	UNUSED						ALL
	G03		W0141	164	22		27-61-18	ALL
	G04	UNUSED						ALL
	G05		W0141	165	22		27-61-18	ALL
	G06	UNUSED						ALL
	G07	UNUSED						ALL
	G08		W0141	218B	22		27-61-18	ALL
	G09		W0141	218R	22		27-61-18	ALL
	G10		W0141	219R	22		27-61-18	ALL
	G11		W0141	219B	22		27-61-18	ALL
	G12	UNUSED						ALL
	G13		W1131	059	22		27-61-12	ALL
	G14		W1131	061	22		27-61-12	ALL
	G15		W1131	063	22		27-61-12	ALL

HOOKUP LIST
D280T132

91-21-51
Section D00800
Page 72
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00835A		//		PLUG-PART A OF D00835 (continued)				ALL
	H01	UNUSED						ALL
	H02	UNUSED						ALL
	H03	UNUSED						ALL
	H04	UNUSED						ALL
	H05	UNUSED						ALL
	H06	UNUSED						ALL
	H07	UNUSED						ALL
	H08	UNUSED						ALL
	H09	UNUSED						ALL
	H10	UNUSED						ALL
	H11	UNUSED						ALL
	H12	UNUSED						ALL
	H13		W1131	052	22		27-61-12	ALL
	H14		W1131	020	22		27-09-14	ALL
	H15		W1131	047	22		27-61-12	ALL
	J01	UNUSED						ALL
	J02	UNUSED						ALL
	J03		W0141	308R	22		27-61-18	ALL
	J04		W0141	308Y	22		27-61-18	ALL
	J05		W0141	308B	22		27-61-18	ALL
	J06		W0141	220B	22		27-61-18	ALL
	J07	UNUSED						ALL
	J08		W0141	309R	22		27-61-18	ALL
	J09		W0141	309Y	22		27-61-18	ALL
	J10		W0141	309B	22		27-61-18	ALL
	J11		W0141	216B	22		27-61-18	ALL
	J12	UNUSED						ALL
	J13		W0131	059	22		27-09-13	ALL
	J14	UNUSED						ALL
	J15	UNUSED						ALL
	K01	UNUSED						ALL
	K02	UNUSED						ALL
	K03		W0141	307R	22		27-61-18	ALL
	K04		W0141	307Y	22		27-61-18	ALL
	K05		W0141	307B	22		27-61-18	ALL
	K06		W0141	220R	22		27-61-18	ALL
	K07	UNUSED						ALL
	K08		W0141	310R	22		27-61-18	ALL
	K09		W0141	310Y	22		27-61-18	ALL
	K10		W0141	310B	22		27-61-18	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00800

Page 73

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00835A		//		PLUG-PART A OF D00835 (continued)				ALL
	K11		W0141	216R	22		27-61-18	ALL
	K12	UNUSED						ALL
	K13		W0131	060	22		27-09-13	ALL
	K14	UNUSED						ALL
	K15		W0131	127	22		27-61-18	ALL
D00835B		//		PLUG-PART B OF D00835				ALL
	A01	UNUSED						ALL
	A02	UNUSED						ALL
	A03	UNUSED						ALL
	A04	UNUSED						ALL
	A05	UNUSED						ALL
	A06	UNUSED						ALL
	A07	UNUSED						ALL
	A08	UNUSED						ALL
	A09	UNUSED						ALL
	A10	UNUSED						ALL
	A11	UNUSED						ALL
	A12	UNUSED						ALL
	A13	UNUSED						ALL
	A14	UNUSED						ALL
	A15	UNUSED						ALL
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04	UNUSED						ALL
	B05		W0151	164	22		27-61-18	ALL
	B06		W0151	164	22		27-61-18	ALL
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13		W0131	045	22		27-61-18	ALL
	B14		W0131	045	22		27-61-18	ALL
	B15	UNUSED						ALL
	C01	UNUSED						ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00800

Page 74

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00835B		//		PLUG-PART B OF D00835 (continued)				ALL
	C04	UNUSED						ALL
	C05	UNUSED						ALL
	C06	UNUSED						ALL
	C07	UNUSED						ALL
	C08	UNUSED						ALL
	C09	UNUSED						ALL
	C10	UNUSED						ALL
	C11	UNUSED						ALL
	C12	UNUSED						ALL
	C13	UNUSED						ALL
	C14	UNUSED						ALL
	C15	UNUSED						ALL
	D01	UNUSED						ALL
	D02		W0151	024	22		27-09-12	ALL
	D03		W0151	159	22		27-61-18	ALL
	D04		W0151	159	22		27-61-18	ALL
	D05		W0151	163	22		27-61-18	ALL
	D06		W0151	163	22		27-61-18	ALL
	D07	UNUSED						ALL
	D08	UNUSED						ALL
	D09	UNUSED						ALL
	D10		W0131	055	22		27-09-12	ALL
	D11		W0131	040	22		27-61-18	ALL
	D12		W0131	040	22		27-61-18	ALL
	D13		W0131	044	22		27-61-18	ALL
	D14		W0131	044	22		27-61-18	ALL
	D15	UNUSED						ALL
	E01	UNUSED						ALL
	E02		W0151	044	22		27-61-11	ALL
	E03	UNUSED						ALL
	E04	UNUSED						ALL
	E05	UNUSED						ALL
	E06	UNUSED						ALL
	E07	UNUSED						ALL
	E08	UNUSED						ALL
	E09	UNUSED						ALL
	E10		W0131	093	22		27-61-11	ALL
	E11	UNUSED						ALL
	E12	UNUSED						ALL
	E13	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00800

Page 75

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00835B		//		PLUG-PART B OF D00835 (continued)				ALL
	E14	UNUSED						ALL
	E15	UNUSED						ALL
	F01	UNUSED						ALL
	F02	UNUSED						ALL
	F03	UNUSED						ALL
	F04		W0151	091	22		27-61-18	ALL
	F05	UNUSED						ALL
	F06		W0151	090	22		27-61-18	ALL
	F07	UNUSED						ALL
	F08	UNUSED						ALL
	F09	UNUSED						ALL
	F10	UNUSED						ALL
	F11	UNUSED						ALL
	F12		W0131	126	22		27-61-18	ALL
	F13	UNUSED						ALL
	F14		W0131	125	22		27-61-18	ALL
	F15	UNUSED						ALL
	G01	UNUSED						ALL
	G02	UNUSED						ALL
	G03	UNUSED						ALL
	G04		W0151	088	22		27-61-18	ALL
	G05	UNUSED						ALL
	G06		W0151	087	22		27-61-18	ALL
	G07	UNUSED						ALL
	G08	UNUSED						ALL
	G09	UNUSED						ALL
	G10	UNUSED						ALL
	G11	UNUSED						ALL
	G12		W0131	123	22		27-61-18	ALL
	G13	UNUSED						ALL
	G14		W0131	122	22		27-61-18	ALL
	G15	UNUSED						ALL
	H01	UNUSED						ALL
	H02	UNUSED						ALL
	H03	UNUSED						ALL
	H04	UNUSED						ALL
	H05	UNUSED						ALL
	H06	UNUSED						ALL
	H07	UNUSED						ALL
	H08	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D00800
Page 76
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00835B		//		PLUG-PART B OF D00835 (continued)				ALL
	H09	UNUSED						ALL
	H10	UNUSED						ALL
	H11	UNUSED						ALL
	H12	UNUSED						ALL
	H13	UNUSED						ALL
	H14	UNUSED						ALL
	H15	UNUSED						ALL
	J01	UNUSED						ALL
	J02	UNUSED						ALL
	J03	UNUSED						ALL
	J04		W0151	309R	22		27-61-18	ALL
	J05		W0151	309Y	22		27-61-18	ALL
	J06		W0151	309B	22		27-61-18	ALL
	J07		W0151	213B	22		27-61-18	ALL
	J08	UNUSED						ALL
	J09	UNUSED						ALL
	J10	UNUSED						ALL
	J11	UNUSED						ALL
	J12		W0131	310R	22		27-61-18	ALL
	J13		W0131	310Y	22		27-61-18	ALL
	J14		W0131	310B	22		27-61-18	ALL
	J15		W0131	218B	22		27-61-18	ALL
	K01	UNUSED						ALL
	K02	UNUSED						ALL
	K03	UNUSED						ALL
	K04		W0151	310R	22		27-61-18	ALL
	K05		W0151	310Y	22		27-61-18	ALL
	K06		W0151	310B	22		27-61-18	ALL
	K07		W0151	213R	22		27-61-18	ALL
	K08	UNUSED						ALL
	K09	UNUSED						ALL
	K10	UNUSED						ALL
	K11	UNUSED						ALL
	K12		W0131	311R	22		27-61-18	ALL
	K13		W0131	311Y	22		27-61-18	ALL
	K14		W0131	311B	22		27-61-18	ALL
	K15		W0131	218R	22		27-61-18	ALL
D00835C		//		PLUG-PART C OF D00835				ALL
	1	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00800

Page 77

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00835C		//		PLUG-PART C OF D00835 (continued)				ALL
	2		W0151	080	16		27-61-18	ALL
	3		W0151	079	16		27-61-18	ALL
	4		W0151	013	20		27-61-12	ALL
	5		W0151	168	20		27-61-18	ALL
	6		W0151	133	20		27-61-18	ALL
	7		W0151	081	16		27-61-18	ALL
	8		W0151	078	16		27-61-18	ALL
	9		W0151	082	16		27-61-18	ALL
	10		W0151	132	16		27-61-18	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	= C12	UNUSED						ALL
	= C13	UNUSED						ALL
D00836		P008-00/ /		PLUG-				ALL
	1		W0614	553	22		33-16-18	ALL
	2		W0614	182R	22		26-11-11	ALL
	3	FM	W0614	521	16		78-34-11	ALL
	4		W0614	549	24		31-51-33	ALL
	5	UNUSED						ALL
	6		W0614	512	20		76-11-11	ALL
	7		W0614	513	20		76-11-11	ALL
	8		W0614	198R	20		26-21-11	ALL
	9		W0614	197R	20		26-21-11	ALL
	10		W0614	180R	22		26-11-11	ALL
	11	DK	W0614	500	18		78-34-11	ALL
	12	FM	W0614	522	16		78-34-11	ALL
	13		W0614	544	22		29-11-11	ALL
	14	UNUSED						ALL
	15		W0614	515	20		31-51-33	ALL
	16		W0614	556	20		28-22-21	ALL
	17		W0614	517	20		36-11-51	ALL
	18		W0614	518	22		29-11-11	ALL
	19		W0614	519	20		76-11-11	ALL
	20		W0614	520	24		78-34-11	ALL
	21		W0614	501	24		24-22-11	ALL
	22		W0614	196R	20		26-21-11	ALL
	23		W0614	083R	20		26-21-11	ALL
	24		W0614	181R	20		26-11-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00800

Page 78

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00836		P008-00/ /		PLUG- (continued)				ALL
	25		W0614	185R	22		26-11-11	ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28		W0614	545	22		29-11-11	ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32		W0614	019	20		28-22-21	ALL
	33		W0614	557	20		28-22-21	ALL
	34	UNUSED						ALL
	35		W0614	505	24		36-11-51	ALL
	36		W0614	506	22		29-11-11	ALL
	37		W0614	507	22		29-11-11	ALL
	38	UNUSED						ALL
	39		W0614	509	24		78-34-11	ALL
	40		W0614	510	24		24-22-11	ALL
	41	UNUSED						ALL
	DED		W0614	019Z			28-22-21	ALL
	DED		W0614	544Z			29-11-11	ALL
	DED		W0614	545Z			29-11-11	ALL
D00837		0280/240/L060		RCPT-P21				ALL
	1		W0645	301R	24		23-31-12	050-099
	1	UNUSED						150-199, 275-299
	2		W0645	301Y	24		23-31-12	050-099
	2	UNUSED						150-199, 275-299
	3		W0645	301B	24		23-31-12	050-099
	3	UNUSED						150-199, 275-299
	4		W0645	004	24		23-31-12	050-099
	4	UNUSED						150-199, 275-299
	5		W0645	005	20		23-31-12	050-099
	5	UNUSED						150-199, 275-299
	6		W0645	901	24		23-31-11	050-099
	6	UNUSED						150-199, 275-299
	7		W0645	902	24		23-31-11	050-099
	7	UNUSED						150-199, 275-299
	8		W0645	903R	24		23-31-11	050-099
	8	UNUSED						150-199, 275-299
	9		W0645	903B	24		23-31-11	050-099
	9	UNUSED						150-199, 275-299

HOOKUP LIST
D280T132

91-21-51
Section D00800
Page 79
Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00837		0280/240/L060		RCPT-P21 (continued)				ALL
	10		W0645	903Z			23-31-11	050-099
	10	UNUSED						150-199
	10		W0645	507	24		23-34-13	275-299
	11		W0645	011	22		23-34-11	ALL
	12		W0645	012	24		23-34-12	ALL
	13		W0645	107	22		23-34-11	ALL
	14		W0645	014	22		23-34-11	ALL
	15		W0645	115	24		23-34-12	ALL
	16		W0645	117	24		23-34-12	ALL
	17		W0645	017	24		23-34-12	ALL
	18		W0645	018	24		23-34-12	ALL
	19		W0645	019	24		23-34-12	ALL
	20		W0645	020	20		23-34-12	ALL
	21		W0645	116	24		23-34-12	ALL
	22	UNUSED						ALL
	23		W0645	109	24		23-34-12	ALL
	24	UNUSED						ALL
D00837P		P21/ /		PLUG-P21				050-099
	1		W9006	301R	24		23-31-12	050-099
	2		W9006	301Y	24		23-31-12	050-099
	3		W9006	301B	24		23-31-12	050-099
	4		W9006	004	24		23-31-12	050-099
	5		W9006	005	24		23-31-12	050-099
	6		W9006	002	24		23-31-11	050-099
	7		W9006	003	24		23-31-11	050-099
	8		W9006	001R	24		23-31-11	050-099
	9		W9006	001B	24		23-31-11	050-099
	10		W9006	001Z			23-31-11	050-099
	11	UNUSED						050-099
	12	UNUSED						050-099
	13	UNUSED						050-099
	14	UNUSED						050-099
	15	UNUSED						050-099
	16	UNUSED						050-099
	17	UNUSED						050-099
	18	UNUSED						050-099
	19	UNUSED						050-099
	20	UNUSED						050-099
	21	UNUSED						050-099

HOOKUP LIST

D280T132

91-21-51

Section D00800

Page 80

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00837P		P21/ /		PLUG-P21 (continued)				050-099
	22	UNUSED						050-099
	23	UNUSED						050-099
	24	UNUSED						050-099
	25	UNUSED						050-099
	26	UNUSED						050-099
	27	UNUSED						050-099
	28	UNUSED						050-099
	29	UNUSED						050-099
	30	UNUSED						050-099
	31	UNUSED						050-099
	32	UNUSED						050-099
	33	UNUSED						050-099
	34	UNUSED						050-099
	35	UNUSED						050-099
	36	UNUSED						050-099
	37	UNUSED						050-099
	38	UNUSED						050-099
	39	UNUSED						050-099
	40	UNUSED						050-099
	41	UNUSED						050-099
	42	UNUSED						050-099
	43	UNUSED						050-099
	44	UNUSED						050-099
	45	UNUSED						050-099
	46	UNUSED						050-099
	47	UNUSED						050-099
	48	UNUSED						050-099
	49	UNUSED						050-099
	50	UNUSED						050-099
	51	UNUSED						050-099
	52	UNUSED						050-099
	53	UNUSED						050-099
	54	UNUSED						050-099
	= C27	UNUSED						050-099
D00838		P005-00/ /		PLUG-P5				ALL
	1		W0070	651	20		33-13-16	ALL
	2		W0070	652	20		33-13-16	ALL
	3		W0070	653	22		33-16-17	ALL
	4		W0070	654	22		33-16-17	ALL

HOOKUP LIST
D280T132

91-21-51
Section D00800
Page 81
Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00838		P005-00/ /		PLUG-P5 (continued)				ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8		W0070	658	22		35-21-11	ALL
	9		W0070	659	24		35-21-11	ALL
	10		W0070	660	20		35-21-11	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D00840		P005-00/ /		PLUG-P5				ALL
	1		W0070	611	20		33-13-16	ALL
	2		W0070	612	20		33-13-16	ALL
	3		W0070	613	20		33-11-13	ALL
	4		W0070	614	20		33-11-13	ALL
	5		W0070	615	24		33-11-15	ALL
	6		W0070	616	24		33-11-15	ALL
	7		W0070	302R	24		33-11-13	ALL
	8		W0070	302Y	24		33-11-13	ALL
	9		W0070	302B	24		33-11-13	ALL
	10		W0070	620	24		33-42-21	ALL
	11		W0070	621	24		33-42-21	ALL
	12		W0070	622	20		33-42-21	050-099
	12	DK	W0070	622	18		33-42-21	150-199, 275-299
	13		W0070	623	20		33-42-21	050-099
	13	DK	W0070	623	18		33-42-21	150-199, 275-299
	14	UNUSED						ALL
	15	UNUSED						ALL
D00842		P005-00/ /		PLUG-P5				ALL
	1		W0066	631	20		33-42-21	050-099
	1	DK	W0066	631	18		33-42-21	150-199, 275-299
	2		W0066	632	20		33-42-21	050-099
	2	DK	W0066	632	18		33-42-21	150-199, 275-299
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W0066	307B	24		33-13-17	ALL
	8		W0066	307R	24		33-13-17	ALL
	9		W0066	313R	24		33-13-18	ALL

HOOKUP LIST
D280T132

91-21-51
Section D00800
Page 82
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00842		P005-00/ /		PLUG-P5 (continued)				ALL
	10		W0066	307Y	24		33-13-17	ALL
	11		W0066	313Y	24		33-13-18	ALL
	12		W0066	313B	24		33-13-18	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
D00846		P008-00/ /		PLUG-				ALL
	1		W0606	560	22		33-16-18	ALL
	2		W0606	541R	22		26-15-11	ALL
	3	UNUSED						ALL
	4		W0606	549	24		31-51-33	ALL
	5	UNUSED						ALL
	6		W0606	546	22		49-61-11	ALL
	7		W0606	547	22		49-61-11	ALL
	8		W0606	526R	20		26-22-21	050-099, 150-199
	8		W0606	144R	20		26-22-21	275-299
	9		W0606	527R	20		26-22-21	ALL
	10		W0606	534R	22		26-15-11	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15		W0606	535	20		31-51-33	ALL
	16		W0606	565	22		28-25-21	050-099
	16		W0606	565	20		28-25-21	150-199, 275-299
	17		W0606	537	24		36-11-41	ALL
	18	UNUSED						ALL
	19		W0606	548	22		49-61-11	ALL
	20		W0606	111R	22		26-15-12	ALL
	21		W0606	523	24		24-22-41	ALL
	22		W0606	528R	20		26-22-21	050-099, 150-199
	22		W0606	008R	20		26-22-21	275-299
	23		W0606	529R	20		26-22-21	050-099, 150-199
	23		W0606	004R	20		26-22-21	275-299
	24		W0606	542R	20		26-15-11	ALL
	25		W0606	540R	22		26-15-11	ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00800

Page 83

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00846		P008-00/ /		PLUG- (continued)				ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32		W0606	564	20		28-25-21	ALL
	33		W0606	566	22		28-25-21	050-099
	33		W0606	566	20		28-25-21	150-199, 275-299
	34	UNUSED						ALL
	35		W0606	525	24		36-11-41	ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39		W0606	173R	22		26-15-12	ALL
	40		W0606	524	24		24-22-41	ALL
	41	UNUSED						ALL
	DED		W0606	564Z			28-25-21	ALL
D00848		P005-00/ /		PLUG-P5				ALL
	1	DK	W0062	561	18		33-13-16	ALL
	2	DK	W0062	562	18		33-13-16	ALL
	3	UNUSED						ALL
	4		W0062	564	22		74-31-11	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8		W0062	568	24		80-11-11	ALL
	9	UNUSED						ALL
	10		W0062	570	22		74-31-11	ALL
	11	UNUSED						ALL
	12		W0062	572	22		74-31-11	ALL
	CAP	Y	W0062	571	22		SPARE	ALL
D00849		P008-00/ /		RCPT-P8				ALL
	1	\$D	W0843	401R	24		23-42-11	ALL
	2	\$D	W0843	401Z			23-42-11	ALL
	3	\$D	W0843	401B	24		23-42-11	ALL
	4	\$D	W0843	401Y	24		23-42-11	ALL
	5	\$D	W0843	401G	24		23-42-11	ALL
D00850		P005-00/ /		PLUG-P5				ALL
	1	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D00800
Page 84
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00850		P005-00/ /		PLUG-P5 (continued)				ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W0066	564	22		74-31-21	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8		W0066	568	24		80-11-21	ALL
	9	UNUSED						ALL
	10		W0066	570	22		74-31-21	ALL
	11	UNUSED						ALL
	12		W0066	572	22		74-31-21	ALL
	CAP	Y	W0066	571	22		SPARE	ALL
D00851		0835/243/R010		RCPT-				050-099
D00851		0920/260/0000		RCPT-				150-199
D00851		0801/243/L014		RCPT-				275-299
	1	\$D	W0041	401R	24		23-42-11	ALL
	2	\$D	W0041	401Z			23-42-11	ALL
	3	\$D	W0041	401B	24		23-42-11	ALL
	4	\$D	W0041	401Y	24		23-42-11	ALL
	5	\$D	W0041	401G	24		23-42-11	ALL
D00852		P005-00/ /		PLUG-P5				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W0070	133	22		33-16-17	ALL
	4		W0070	134	22		33-16-17	ALL
	5		W0070	135	22		74-31-21	ALL
	6	UNUSED						ALL
	7		W0070	137	22		74-31-21	ALL
	8		W0070	138	22		74-31-21	ALL
	9		W0070	139	24		74-31-21	ALL
	10	DK	W0070	140	18		80-11-21	ALL
	11	DK	W0070	141	18		80-11-21	ALL
	12		W0070	142	24		80-11-21	ALL
	13	UNUSED						ALL
	14		W0070	144	24		29-21-31	ALL
	15		W0070	145	24		29-21-31	ALL
	16		W0070	146	24		29-21-31	ALL
	17		W0070	147	24		29-21-31	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00800

Page 85

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00852		P005-00/ /		PLUG-P5 (continued)				ALL
	18		W0070	148	24		29-21-31	ALL
	19		W0070	149	24		29-21-31	ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23		W0070	136	22		74-31-21	ALL
	24	UNUSED						ALL
	DED		W0070	133Z			33-16-17	ALL
	DED		W0070	135Z			74-31-21	ALL
	DED		W0070	136Z			74-31-21	ALL
	DED		W0070	137Z			74-31-21	ALL
	DED		W0070	138Z			74-31-21	ALL
	DED		W0070	139Z			74-31-21	ALL
D00853		1537/243/R056		RCPT-				ALL
	1	\$D	W0647	401R	24		23-42-11	ALL
	2	\$D	W0647	401Z			23-42-11	ALL
	3	\$D	W0647	401B	24		23-42-11	ALL
	4	\$D	W0647	401Y	24		23-42-11	ALL
	5	\$D	W0647	401G	24		23-42-11	ALL
D00854		P005-00/ /		PLUG-P5				ALL
	1		W0066	03A	20		33-13-16	ALL
	2		W0066	03B	20		33-13-16	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W0066	03E	20		33-24-11	ALL
	6		W0066	03F	24		33-24-11	ALL
	7		W0066	03G	24		33-24-11	ALL
	8		W0066	03H	20		33-24-11	ALL
	9	UNUSED						ALL
	10		W0066	03K	24		33-24-11	ALL
	11		W0066	03L	24		33-24-11	ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00800

Page 86

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00855		1537/260/L060		RCPT-				050-099
D00855		1537/243/L060		RCPT-				150-199, 275-299
	1	\$D	W0647	402R	24		23-42-11	ALL
	2	\$D	W0647	402Z			23-42-11	ALL
	3	\$D	W0647	402B	24		23-42-11	ALL
	4	\$D	W0647	402Y	24		23-42-11	ALL
	5	\$D	W0647	402G	24		23-42-11	ALL
D00856		P005-00/ /		PLUG-P5				ALL
	1	DK	W0062	721	18		33-13-16	ALL
	2	DK	W0062	722	18		33-13-16	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W0062	725	20		33-44-21	ALL
	6	DK	W0062	726	18		33-44-21	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	DK	W0062	730	18		33-42-11	050-099
	10	FM	W0062	730	16		33-42-11	150-199, 275-299
	11	DK	W0062	731	18		33-42-11	050-099
	11	FM	W0062	731	16		33-42-11	150-199, 275-299
	12		W0062	732	24		33-42-11	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15		W0062	735	24		33-42-11	ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18		W0062	738	20		33-43-11	050-099
	18	DK	W0062	738	18		33-43-11	150-199, 275-299
	19		W0062	739	20		33-43-11	050-099
	19	DK	W0062	739	18		33-43-11	150-199, 275-299
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00800

Page 87

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00857		0360/280/R 60		PLUG-				050-099, 150-199
D00857		AP0301B/ /		RCPT-				275-299
	1		W0645	401R	24		23-42-11	ALL
	2		W0645	401Z			23-42-11	ALL
	3		W0645	401B	24		23-42-11	ALL
	4		W0645	401Y	24		23-42-11	ALL
	5		W0645	401G	24		23-42-11	ALL
D00858		P005-00/ /		PLUG-P5				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W0066	725	20		33-44-11	ALL
	6		W0066	726	20		33-44-11	ALL
	7		W0066	727	20		33-41-11	050-099
	7	DK	W0066	727	18		33-41-11	150-199, 275-299
	8		W0066	728	20		33-41-11	050-099
	8	DK	W0066	728	18		33-41-11	150-199, 275-299
	9		W0066	729	20		33-41-11	050-099
	9	DK	W0066	729	18		33-41-11	150-199, 275-299
	10	DK	W0066	730	18		33-42-11	050-099
	10	FM	W0066	730	16		33-42-11	150-199, 275-299
	11	DK	W0066	731	18		33-42-11	050-099
	11	FM	W0066	731	16		33-42-11	150-199, 275-299
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16		W0066	736	20		33-43-11	050-099
	16	DK	W0066	736	18		33-43-11	150-199, 275-299
	17		W0066	737	20		33-43-11	050-099
	17	DK	W0066	737	18		33-43-11	150-199, 275-299
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00800

Page 88

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00859		0284/240/L060		RCPT-				ALL
	1		W0645	405R	24		23-42-11	050-099, 150-199
	1	\$D	W0645	402R	24		23-42-11	275-299
	2		W0645	405Z			23-42-11	050-099, 150-199
	2	\$D	W0645	402Z			23-42-11	275-299
	3		W0645	405B	24		23-42-11	050-099, 150-199
	3	\$D	W0645	402B	24		23-42-11	275-299
	4		W0645	405Y	24		23-42-11	050-099, 150-199
	4	\$D	W0645	402Y	24		23-42-11	275-299
	5		W0645	405G	24		23-42-11	050-099, 150-199
	5	\$D	W0645	402G	24		23-42-11	275-299
D00860		P005-00/ /		PLUG-P5				ALL
	1		W0070	631	20		33-13-16	ALL
	2		W0070	632	20		33-13-16	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W0070	635	20		33-16-11	ALL
	6		W0070	636	24		33-16-11	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11		W0070	641	22		33-11-16	ALL
	12	DK	W0070	642	18		33-11-16	ALL
	13		W0070	643	20		33-11-16	ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00800

Page 89

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00860		P005-00/ /		PLUG-P5 (continued)				ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
D00861		0172/207/L032		RCPT-				ALL
	1	\$D	W0629	201R	24		23-51-11	ALL
	2	\$D	W0629	201B	24		23-51-11	ALL
	3	\$D	W0629	012	24		23-51-11	ALL
	4	\$D	W0629	012Z			23-51-11	ALL
D00862		P008-00/ /		PLUG-				ALL
	1		W0606	553	22		33-16-18	ALL
	2		W0606	182R	22		26-11-21	ALL
	3	DK	W0606	194	18		78-34-21	ALL
	4		W0606	550	24		31-51-33	ALL
	5	UNUSED						ALL
	6		W0606	512	20		76-11-11	ALL
	7		W0606	513	20		76-11-11	ALL
	8		W0606	084R	20		26-21-11	ALL
	9		W0606	195R	20		26-21-11	ALL
	10		W0606	180R	22		26-11-21	ALL
	11	DK	W0606	516	18		78-34-21	ALL
	12	DK	W0606	099	18		78-34-21	ALL
	13		W0606	544	22		29-11-21	ALL
	14	UNUSED						ALL
	15		W0606	515	20		31-51-33	ALL
	16		W0606	556	20		28-22-21	ALL
	17		W0606	517	20		36-11-52	ALL
	18		W0606	518	22		29-11-21	ALL
	19		W0606	519	20		76-11-11	ALL
	20		W0606	520	24		78-34-21	ALL
	21		W0606	501	24		24-22-21	ALL
	22		W0606	197R	20		26-21-11	ALL
	23		W0606	198R	20		26-21-11	ALL
	24		W0606	181R	20		26-11-21	ALL
	25		W0606	185R	22		26-11-21	ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28		W0606	545	22		29-11-21	ALL
	29	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00800

Page 90

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00862		P008-00/ /		PLUG- (continued)				ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32		W0606	019	20		28-22-21	ALL
	33		W0606	557	20		28-22-21	ALL
	34	UNUSED						ALL
	35		W0606	505	24		36-11-52	ALL
	36		W0606	506	22		29-11-21	ALL
	37		W0606	507	22		29-11-21	ALL
	38	UNUSED						ALL
	39		W0606	509	24		78-34-21	ALL
	40		W0606	510	24		24-22-21	ALL
	41	UNUSED						ALL
	DED		W0606	019Z			28-22-21	ALL
	DED		W0606	544Z			29-11-21	ALL
	DED		W0606	545Z			29-11-21	ALL
D00863		0172/207/R032		RCPT-				ALL
	1	\$D	W0631	201R	24		23-51-21	ALL
	2	\$D	W0631	201B	24		23-51-21	ALL
	3	\$D	W0631	012	24		23-51-21	ALL
	4	\$D	W0631	012Z			23-51-21	ALL
D00864		P008-00/ /		PLUG-				ALL
	1	DK	W0614	007	18		33-13-18	050-099, 150-155, 162-165, 275-276
	1	DK	W0614	203R	18		33-13-18	156-157, 166-199, 277-299
	2	DK	W0614	008	18		33-13-18	050-099, 150-155, 162-165, 275-276
	2	DK	W0614	203B	18		33-13-18	156-157, 166-199, 277-299
	3		W0614	554	22		33-16-18	ALL
	4		W0614	555	22		33-16-18	ALL
	5		W0614	096R	20		26-23-11	ALL
	6		W0614	558	24		21-43-11	ALL
	7	UNUSED						ALL
	8		W0614	559	24		21-43-11	ALL
	9	UNUSED						ALL
	10		W0614	176	20		21-25-11	ALL
	11	UNUSED						050-099
	11		W0614	613R	20		26-23-12	150-199, 275-299
	12		W0614	033R	22		26-16-11	ALL
	13		W0614	177	24		21-25-11	ALL
	14	UNUSED						050-099, 150-154

HOOKUP LIST

D280T132

91-21-51

Section D00800

Page 91

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00864		P008-00/ /		PLUG- (continued)				ALL
	14		W0614	614R	20		26-23-12	155-199, 275-299
	15		W0614	179R	20		26-23-11	ALL
	16		W0614	080R	20		26-23-11	ALL
	17		W0614	076R	20		26-23-11	ALL
	18	UNUSED						ALL
	19	UNUSED						050-099, 150-199
	19		W0614	013R	20		26-22-21	275-299
	20		W0614	081R	20		26-23-11	ALL
	21		W0614	562	24		31-51-33	ALL
	22		W0614	093R	20		26-23-11	ALL
	23		W0614	178R	20		26-23-11	ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29		W0614	613R	20		26-23-12	050-099
	29	UNUSED						150-199, 275-299
	30	UNUSED						ALL
	31	UNUSED						ALL
D00866		P008-00/ /		PLUG-				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W0606	554	22		33-16-18	ALL
	4		W0606	555	22		33-16-18	ALL
	5		W0606	626R	20		26-23-12	ALL
	6	UNUSED						ALL
	7		W0606	559	24		21-44-11	ALL
	8		W0606	558	24		21-44-11	ALL
	9	UNUSED						ALL
	10		W0606	176	20		21-25-11	ALL
	11	UNUSED						050-099
	11		W0606	633R	20		26-23-12	150-199, 275-299
	12		W0606	033R	22		26-16-11	ALL
	13		W0606	177	24		21-25-11	ALL
	14	UNUSED						050-099, 150-154
	14		W0606	636R	20		26-23-12	155-199, 275-299
	15		W0606	179R	20		26-23-12	ALL
	16		W0606	080R	20		26-23-12	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00800

Page 92

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00866		P008-00/ /		PLUG- (continued)				ALL
	17		W0606	076R	20		26-23-12	ALL
	18	UNUSED						ALL
	19		W0606	009R	20		26-22-21	ALL
	20		W0606	081R	20		26-23-12	ALL
	21		W0606	562	24		31-51-33	ALL
	22		W0606	625R	20		26-23-12	ALL
	23		W0606	178R	20		26-23-12	ALL
	24	UNUSED						050-099, 150-199, 277-299
	24		W0606	729	24		21-44-21	275-276
	25	UNUSED						ALL
	26	UNUSED						050-099, 150-199, 277-299
	26		W0606	730	24		21-44-21	275-276
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	CAP	Y	W0606	729	24		SPARE	051-099, 150-154
	CAP	Y	W0606	730	24		SPARE	051-099, 150-154
D00868		P005-00/ /		PLUG-P5				ALL
	1		W0070	661	22		33-51-11	ALL
	2		W0070	662	22		33-51-11	ALL
	3		W0070	663	22		33-51-11	ALL
	4	UNUSED						ALL
	5		W0070	665	22		33-51-11	ALL
	6		W0070	666	22		33-51-11	ALL
	7		W0070	667	22		33-51-11	ALL
	8		W0070	668	22		33-51-11	ALL
	9		W0070	669	20		33-51-11	ALL
	10		W0070	670	20		33-51-11	ALL
	11		W0070	671	22		33-51-11	ALL
	12		W0070	672	24		33-51-11	ALL
	13		W0070	673	20		33-51-11	ALL
	14		W0070	674	22		33-51-11	ALL
	15		W0070	675	22		33-51-11	ALL
	16		W0070	676	22		33-51-11	ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00800

Page 93

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00868		P005-00/ /		PLUG-P5 (continued)				ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D00869		P055-00/ /		PLUG-P55				ALL
	1	DK	W0011	784	18		33-13-17	ALL
	2	DK	W0011	785	18		33-13-17	ALL
	3	UNUSED						ALL
	4		W0011	095	22		33-16-16	ALL
	5		W0011	096	22		33-16-16	ALL
	6		W0011	776	20		34-55-11	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12		W0011	777	20		34-55-11	ALL
	DED		W0011	095Z			33-16-16	ALL
	DED		W0011	096Z			33-16-16	ALL
D00871		P055-00/ /		PLUG-P55				ALL
	1	DK	W0031	781	18		33-13-17	ALL
	2	DK	W0031	782	18		33-13-17	ALL
	3	UNUSED						ALL
	4		W0031	791	22		33-16-16	ALL
	5		W0031	616	22		33-16-16	ALL
	6		W0031	776	20		34-55-21	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12		W0031	777	20		34-55-21	ALL
	DED		W0031	791Z			33-16-16	ALL
D00872		0212/268/L060		PLUG-				ALL
	=1		W0624	A-I			30-41-12	ALL
	=2	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D00800
Page 94
Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00874		P005-00/ /		PLUG-P5				050-099, 150-151, 153, 155-157, 163-165
D00874		P005-00/ /		PLUG-P5 (SB 25-0325)				151, 162, 166-199
D00874		//		PLUG-P5 (SB 25-0325)				152, 154, 276-299
D00874		//		PLUG-P5 (SB 25-0332)				275
	1		W0062	303R	24		33-13-16	ALL
	2		W0062	303Y	24		33-13-16	ALL
	3		W0062	633	22		33-16-17	ALL
	4		W0062	634	22		33-16-17	ALL
	5	FM	W0062	635	16		33-11-14	ALL
	6		W0062	312B	24		33-13-19	ALL
	7		W2214	009	24		52-51-11	050-099, 150-163, 166-199, 275-299
	7	UNUSED						164-165
	8		W0062	08B	22		52-51-11	ALL
	9		W2214	010	24		52-51-11	050-099, 150-163, 166-199, 275-299
	9	UNUSED						164-165
	10		W0062	312R	24		33-13-19	ALL
	11		W0062	312Y	24		33-13-19	ALL
	12		W2214	019	24		52-51-11	050-099, 150-163, 166-199, 275-299
	12	UNUSED						164-165
	13		W0062	643	20		33-11-14	ALL
	14		W2214	021	24		52-51-11	050-099, 150-163, 166-199, 275-299
	14	UNUSED						164-165
	15	FM	W0062	645	16		33-11-14	ALL
	16		W0062	303B	24		33-13-16	ALL
	17	UNUSED						ALL
	18		W0062	648	20		33-16-11	ALL
	19		W0062	649	24		33-16-11	ALL
	20	UNUSED						ALL
	21		W0062	75A	22		33-45-11	ALL
	22		W0062	75B	20		33-45-11	ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	CAP	Y	W0062	637	24		SPARE	152, 154, 156, 162, 166-199
	CAP	Y	W0062	638	24		SPARE	152, 154, 156, 162, 166-199

HOOKUP LIST

D280T132

91-21-51

Section D00800

Page 95

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00874		P005-00/ /		PLUG-P5 (continued)				050-099, 150-151, 153, 155-157, 163-165
D00874		P005-00/ /		PLUG-P5 (SB 25-0325) (continued)				151, 162, 166-199
D00874		//		PLUG-P5 (SB 25-0325) (continued)				152, 154, 276-299
D00874		//		PLUG-P5 (SB 25-0332) (continued)				275
	CAP	Y	W0062	642	22		SPARE	152, 154, 156, 162, 166-199
	DED		W0062	633Z			33-16-17	ALL
D00875		SHELF/E08/		PLUG-				ALL
	1		W1035	202WN	26		31-41-21	ALL
	2		W1035	202W	26		31-41-21	ALL
	3		W1035	210WN	26		31-41-21	ALL
	4		W1035	210W	26		31-41-21	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W1035	203WN	26		31-41-21	ALL
	8		W1035	203W	26		31-41-21	ALL
	9		W1035	211WN	26		31-41-21	ALL
	10		W1035	211W	26		31-41-21	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13		W1035	204WN	26		31-41-21	ALL
	14		W1035	204W	26		31-41-21	ALL
	15		W1035	212WN	26		31-41-21	ALL
	16		W1035	212W	26		31-41-21	ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19		W1035	205WN	26		31-41-21	ALL
	20		W1035	205W	26		31-41-21	ALL
	21		W1035	213WN	26		31-41-21	ALL
	22		W1035	213W	26		31-41-21	ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25		W1035	215WN	26		31-41-22	ALL
	26		W1035	215W	26		31-41-22	ALL
	27		W1035	223WN	26		31-41-22	ALL
	28		W1035	223W	26		31-41-22	ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31		W1035	216WN	26		31-41-22	ALL
	32		W1035	216W	26		31-41-22	ALL
	33		W1035	224WN	26		31-41-22	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00800

Page 96

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00875		SHELF/E08/		PLUG- (continued)				ALL
	34		W1035	224W	26		31-41-22	ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37		W1035	217WN	26		31-41-22	ALL
	38		W1035	217W	26		31-41-22	ALL
	39		W1035	225WN	26		31-41-22	ALL
	40		W1035	225W	26		31-41-22	ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43		W1035	214WN	26		31-41-22	ALL
	44		W1035	214W	26		31-41-22	ALL
	45		W1035	222WN	26		31-41-22	ALL
	46		W1035	222W	26		31-41-22	ALL
	47		W1035	060	24		31-41-17	ALL
	48		W1035	061	24		31-41-17	ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
	56	UNUSED						ALL
	57		W1035	066	22		31-41-17	ALL
	58	UNUSED						ALL
	59		W1035	206WN	26		31-41-21	ALL
	60		W1035	206W	26		31-41-21	ALL
	61	UNUSED						ALL
	62	UNUSED						ALL
	63	UNUSED						ALL
	64	UNUSED						ALL
	65		W1035	207WN	26		31-41-21	ALL
	66		W1035	207W	26		31-41-21	ALL
	67	UNUSED						ALL
	68	UNUSED						ALL
	69	UNUSED						ALL
	70	UNUSED						ALL
	71		W1035	208WN	26		31-41-21	ALL
	72		W1035	208W	26		31-41-21	ALL
	73	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00800

Page 97

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00875		SHELF/E08/		PLUG- (continued)				ALL
	74	UNUSED						ALL
	75	UNUSED						ALL
	76	UNUSED						ALL
	77		W1035	209WN	26		31-41-21	ALL
	78		W1035	209W	26		31-41-21	ALL
	79	UNUSED						ALL
	80	UNUSED						ALL
	81	UNUSED						ALL
	82	UNUSED						ALL
	83		W1035	219WN	26		31-41-22	ALL
	84		W1035	219W	26		31-41-22	ALL
	85	UNUSED						ALL
	86	UNUSED						ALL
	87	UNUSED						ALL
	88	UNUSED						ALL
	89		W1035	220WN	26		31-41-22	ALL
	90		W1035	220W	26		31-41-22	ALL
	91	UNUSED						ALL
	92	UNUSED						ALL
	93	UNUSED						ALL
	94	UNUSED						ALL
	95		W1035	221WN	26		31-41-22	ALL
	96		W1035	221W	26		31-41-22	ALL
	97	UNUSED						ALL
	98	UNUSED						ALL
	99	UNUSED						ALL
	100	UNUSED						ALL
	101		W1035	218WN	26		31-41-22	ALL
	102		W1035	218W	26		31-41-22	ALL
	103	UNUSED						ALL
	104	UNUSED						ALL
	105	UNUSED						ALL
	106	UNUSED						ALL
	107	UNUSED						ALL
	108	UNUSED						ALL
	109	UNUSED						ALL
	110	UNUSED						ALL
	111	UNUSED						ALL
	112	UNUSED						ALL
	113	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00800

Page 98

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00875		SHELF/E08/		PLUG- (continued)				ALL
	114	UNUSED						ALL
	A	UNUSED						ALL
	B	UNUSED						ALL
	C	UNUSED						ALL
	D	UNUSED						ALL
	E	UNUSED						ALL
	F	UNUSED						ALL
	H	UNUSED						ALL
	DED		W1035	060Z			31-41-17	ALL
			W1035	202Z			31-41-21	ALL
			W1035	203Z			31-41-21	ALL
			W1035	204Z			31-41-21	ALL
			W1035	205Z			31-41-21	ALL
			W1035	206Z			31-41-21	ALL
			W1035	207Z			31-41-21	ALL
			W1035	208Z			31-41-21	ALL
			W1035	209Z			31-41-21	ALL
			W1035	210Z			31-41-21	ALL
			W1035	211Z			31-41-21	ALL
			W1035	212Z			31-41-21	ALL
			W1035	213Z			31-41-21	ALL
			W1035	214Z			31-41-22	ALL
			W1035	215Z			31-41-22	ALL
			W1035	216Z			31-41-22	ALL
			W1035	217Z			31-41-22	ALL
			W1035	218Z			31-41-22	ALL
			W1035	219Z			31-41-22	ALL
			W1035	220Z			31-41-22	ALL
			W1035	221Z			31-41-22	ALL
			W1035	222Z			31-41-22	ALL
			W1035	223Z			31-41-22	ALL
			W1035	224Z			31-41-22	ALL
			W1035	225Z			31-41-22	ALL
D00876		P005-00/ /		PLUG-P5				ALL
	1	DK	W0062	701	18		33-13-16	ALL
	2	DK	W0062	702	18		33-13-16	ALL
	3		W0062	703	22		33-16-17	ALL
	4		W0062	704	22		33-16-17	ALL
	5		W0062	705	20		30-41-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00800

Page 99

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00876		P005-00/ /		PLUG-P5 (continued)				ALL
	6		W0062	706	20		30-41-11	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9		W0062	709	22		30-41-11	ALL
	10		W0062	710	22		30-41-11	ALL
	11		W0062	711	24		30-41-11	ALL
	12		W0062	712	24		30-41-11	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	DED		W0062	703Z			33-16-17	ALL
D00877		SHELF/E08/		PLUG-				ALL
	1		W1037	202WN	26		31-41-23	ALL
	2		W1037	202W	26		31-41-23	ALL
	3		W1037	210WN	26		31-41-23	ALL
	4		W1037	210W	26		31-41-23	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W1037	203WN	26		31-41-23	ALL
	8		W1037	203W	26		31-41-23	ALL
	9		W1037	211WN	26		31-41-23	ALL
	10		W1037	211W	26		31-41-23	ALL
	11	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00800

Page 100

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00877		SHELF/E08/		PLUG- (continued)				ALL
	12	UNUSED						ALL
	13		W1037	204WN	26		31-41-23	ALL
	14		W1037	204W	26		31-41-23	ALL
	15		W1037	212WN	26		31-41-23	ALL
	16		W1037	212W	26		31-41-23	ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19		W1037	205WN	26		31-41-23	ALL
	20		W1037	205W	26		31-41-23	ALL
	21		W1037	213WN	26		31-41-23	ALL
	22		W1037	213W	26		31-41-23	ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25		W1037	215WN	26		31-41-24	ALL
	26		W1037	215W	26		31-41-24	ALL
	27		W1037	223WN	26		31-41-24	ALL
	28		W1037	223W	26		31-41-24	ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31		W1037	216WN	26		31-41-24	ALL
	32		W1037	216W	26		31-41-24	ALL
	33		W1037	224WN	26		31-41-24	ALL
	34		W1037	224W	26		31-41-24	ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37		W1037	217WN	26		31-41-24	ALL
	38		W1037	217W	26		31-41-24	ALL
	39		W1037	225WN	26		31-41-24	ALL
	40		W1037	225W	26		31-41-24	ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43		W1037	214WN	26		31-41-24	ALL
	44		W1037	214W	26		31-41-24	ALL
	45		W1037	222WN	26		31-41-24	ALL
	46		W1037	222W	26		31-41-24	ALL
	47		W1037	051	24		31-41-17	ALL
	48		W1037	052	24		31-41-17	ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00800

Page 101

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00877		SHELF/E08/		PLUG- (continued)				ALL
	52		W1037	226R	24		31-31-13	ALL
	53		W1037	226B	24		31-31-13	ALL
	54		W1037	228R	24		31-31-13	ALL
	55		W1037	228B	24		31-31-13	ALL
	56	UNUSED						ALL
	57		W1037	054	22		31-41-17	ALL
	58	UNUSED						ALL
	59		W1037	206WN	26		31-41-23	ALL
	60		W1037	206W	26		31-41-23	ALL
	61	UNUSED						ALL
	62	UNUSED						ALL
	63	UNUSED						ALL
	64	UNUSED						ALL
	65		W1037	207WN	26		31-41-23	ALL
	66		W1037	207W	26		31-41-23	ALL
	67	UNUSED						ALL
	68	UNUSED						ALL
	69	UNUSED						ALL
	70	UNUSED						ALL
	71		W1037	208WN	26		31-41-23	ALL
	72		W1037	208W	26		31-41-23	ALL
	73	UNUSED						ALL
	74	UNUSED						ALL
	75	UNUSED						ALL
	76	UNUSED						ALL
	77		W1037	209WN	26		31-41-23	ALL
	78		W1037	209W	26		31-41-23	ALL
	79	UNUSED						ALL
	80	UNUSED						ALL
	81	UNUSED						ALL
	82	UNUSED						ALL
	83		W1037	219WN	26		31-41-24	ALL
	84		W1037	219W	26		31-41-24	ALL
	85	UNUSED						ALL
	86	UNUSED						ALL
	87	UNUSED						ALL
	88	UNUSED						ALL
	89		W1037	220WN	26		31-41-24	ALL
	90		W1037	220W	26		31-41-24	ALL
	91	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00800

Page 102

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00877		SHELF/E08/		PLUG- (continued)				ALL
	92	UNUSED						ALL
	93	UNUSED						ALL
	94	UNUSED						ALL
	95		W1037	221WN	26		31-41-24	ALL
	96		W1037	221W	26		31-41-24	ALL
	97	UNUSED						ALL
	98	UNUSED						ALL
	99	UNUSED						ALL
	100	UNUSED						ALL
	101		W1037	218WN	26		31-41-24	ALL
	102		W1037	218W	26		31-41-24	ALL
	103	UNUSED						ALL
	104	UNUSED						ALL
	105	UNUSED						ALL
	106	UNUSED						ALL
	107		W1037	227R	24		31-31-13	ALL
	108		W1037	227B	24		31-31-13	ALL
	109	UNUSED						ALL
	110	UNUSED						ALL
	111	UNUSED						ALL
	112	UNUSED						ALL
	113	UNUSED						ALL
	114	UNUSED						ALL
	A	UNUSED						ALL
	B	UNUSED						ALL
	C	UNUSED						ALL
	D	UNUSED						ALL
	E	UNUSED						ALL
	F	UNUSED						ALL
	H	UNUSED						ALL
	REF		W1037	226Z			31-31-13	275-299
	REF		W1037	227Z			31-31-13	275-299
	REF		W1037	228Z			31-31-13	275-299
			W1037	226Z			31-31-13	050-099, 150-199
			W1037	227Z			31-31-13	050-099, 150-199
			W1037	228Z			31-31-13	050-099, 150-199
			W1037	202Z			31-41-23	ALL
			W1037	203Z			31-41-23	ALL
			W1037	204Z			31-41-23	ALL
			W1037	205Z			31-41-23	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00800

Page 103

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00877		SHELF/E08/		PLUG- (continued)				ALL
			W1037	206Z			31-41-23	ALL
			W1037	207Z			31-41-23	ALL
			W1037	208Z			31-41-23	ALL
			W1037	209Z			31-41-23	ALL
			W1037	210Z			31-41-23	ALL
			W1037	211Z			31-41-23	ALL
			W1037	212Z			31-41-23	ALL
			W1037	213Z			31-41-23	ALL
			W1037	214Z			31-41-24	ALL
			W1037	215Z			31-41-24	ALL
			W1037	216Z			31-41-24	ALL
			W1037	217Z			31-41-24	ALL
			W1037	218Z			31-41-24	ALL
			W1037	219Z			31-41-24	ALL
			W1037	220Z			31-41-24	ALL
			W1037	221Z			31-41-24	ALL
			W1037	222Z			31-41-24	ALL
			W1037	223Z			31-41-24	ALL
			W1037	224Z			31-41-24	ALL
			W1037	225Z			31-41-24	ALL
D00878		P005-00/ /		PLUG-P5				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W0066	703	22		33-16-17	ALL
	4		W0066	704	22		33-16-17	ALL
	5		W0066	705	20		30-41-12	ALL
	6		W0066	706	20		30-41-12	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10		W0066	710	22		30-41-12	ALL
	11		W0066	711	22		30-41-12	ALL
	12		W0066	712	24		30-41-12	ALL
	13		W0066	713	24		30-41-12	ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00800

Page 104

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00878		P005-00/ /		PLUG-P5 (continued)				ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
D00881A		//		PLUG-PART A OF D00881				ALL
	A01		W1037	215WN	26		31-41-24	ALL
	A02		W1037	215W	26		31-41-24	ALL
	A03	UNUSED						ALL
	A04		W1035	203W	26		31-41-21	ALL
	A05		W1035	205W	26		31-41-21	ALL
	A06	UNUSED						ALL
	A07	UNUSED						ALL
	A08	UNUSED						ALL
	A09	UNUSED						ALL
	A10	UNUSED						ALL
	A11		W1037	214W	26		31-41-24	ALL
	A12		W1037	202W	26		31-41-23	ALL
	A13		W1037	204W	26		31-41-23	ALL
	A14		W1037	203W	26		31-41-23	ALL
	A15		W1037	205W	26		31-41-23	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00800

Page 105

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00881A		//		PLUG-PART A OF D00881 (continued)				ALL
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03		W1035	007	24		31-41-12	ALL
	B04		W1035	203WN	26		31-41-21	ALL
	B05		W1035	205WN	26		31-41-21	ALL
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11		W1037	214WN	26		31-41-24	ALL
	B12		W1037	202WN	26		31-41-23	ALL
	B13		W1037	204WN	26		31-41-23	ALL
	B14		W1037	203WN	26		31-41-23	ALL
	B15		W1037	205WN	26		31-41-23	ALL
	C01		W1035	215WN	26		31-41-22	ALL
	C02		W1035	215W	26		31-41-22	ALL
	C03		W1035	008	24		31-41-12	ALL
	C04		W1037	007	24		31-41-12	ALL
	C05		W1037	008	24		31-41-12	ALL
	C06	UNUSED						ALL
	C07	UNUSED						ALL
	C08	UNUSED						ALL
	C09	UNUSED						ALL
	C10		W1035	214WN	26		31-41-22	ALL
	C11		W1035	214W	26		31-41-22	ALL
	C12		W1035	202WN	26		31-41-21	ALL
	C13		W1035	202W	26		31-41-21	ALL
	C14		W1035	204WN	26		31-41-21	ALL
	C15		W1035	204W	26		31-41-21	ALL
	D01		W2002	FL05	24		30-31-23	ALL
	D02		W2000	HK07	24		30-41-11	ALL
	D03		W2002	QL11	24		32-42-11	ALL
	D04		W2002	PK10	24		24-33-11	ALL
	D05		W2000	FL13	24		21-51-21	ALL
	D06		W2000	NK02	24		21-25-21	ALL
	D07		W2000	TK09	24		22-21-21	ALL
	D08		W2000	FK12	24		21-51-11	ALL
	D09	UNUSED						ALL
	D10		W2000	SK05	24		32-61-14	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00800

Page 106

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00881A		//		PLUG-PART A OF D00881 (continued)				ALL
	D11		W2002	RK08	24		27-41-11	ALL
	D12	UNUSED						ALL
	D13		W2002	DL03	24		52-71-11	ALL
	D14		W2002	DL02	24		52-71-11	ALL
	D15		W2000	DK19	24		21-52-31	ALL
	E01	UNUSED						050-099
	E01		W2002	DK12	24		52-71-12	150-199, 275-299
	E02		W2002	BK12	24		32-46-11	ALL
	E03		W2002	LK12	24		21-26-21	ALL
	E04	UNUSED						050-099
	E04		W2002	DL07	24		52-71-12	150-199, 275-299
	E05		W2000	CK04	24		24-51-13	ALL
	E06		W2000	FK13	24		21-28-11	050-099, 155-199, 277-299
	E06		W2000	FK13	24		21-51-11	150-154, 275-276
	E07		W2000	GK02	24		21-25-11	ALL
	E08		W2000	DK13	24		73-21-14	ALL
	E09		W1035	065	24		31-41-17	ALL
	E10		W2002	CK02	24		31-41-16	ALL
	E11		W2000	FK18	24		21-58-14	ALL
	E12		W2004	207R	24		31-41-32	ALL
	E13		W2000	FL17	24		21-51-11	050, 150-154, 275-276
	E13	UNUSED						051-099, 155-199, 277-299
	E14		W2000	DL16	24		21-52-31	ALL
	E15		W2000	DK18	24		21-52-31	ALL
	F01	UNUSED						ALL
	F02	UNUSED						ALL
	F03		W2000	BK03	24		29-33-11	ALL
	F04		W2000	BK04	24		29-33-11	ALL
	F05		W2000	NK10	24		29-33-11	ALL
	F06		W2000	FK08	24		21-52-31	ALL
	F07		W2000	FK09	24		21-52-31	ALL
	F08		W1035	017	24		31-41-16	ALL
	F09		W2002	PL15	24		35-11-13	ALL
	F10		W2002	BK11	24		32-46-11	ALL
	F11	UNUSED						ALL
	F12		W2004	207B	24		31-41-32	ALL
	F13		W2002	EK15	24		21-33-11	ALL
	F14		W2000	DL15	24		21-52-31	ALL
	F15	UNUSED						ALL
	G01		W2002	CL15	24		34-21-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00800

Page 107

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00881A		//		PLUG-PART A OF D00881 (continued)				ALL
	G02		W2002	QK04	24		26-11-21	ALL
	G03		W2002	QL12	24		32-44-11	ALL
	G04		W2002	QK03	24		26-11-12	ALL
	G05		W2002	CL14	24		34-21-11	ALL
	G06		W2002	LL09	24		32-42-12	ALL
	G07	UNUSED						ALL
	G08		W2002	CL13	24		34-21-11	ALL
	G09		W2002	FL02	24		27-62-11	ALL
	G10		W2000	FL12	24		21-51-21	ALL
	G11		W2000	CK07	24		29-11-31	ALL
	G12		W2000	SK10	24		32-61-14	ALL
	G13		W2000	TL02	24		34-61-25	ALL
	G14		W2000	FL15	24		21-26-11	ALL
	G15		W2002	CL07	24		31-51-41	ALL
	H01		W2002	QK15	24		27-23-11	ALL
	H02		W2002	FL17	24		28-42-13	050-099, 155-199, 276-299
	H02	UNUSED						150-154, 275
	H03		W2000	EK11	24		79-33-11	ALL
	H04		W2000	GK19	24		79-35-11	ALL
	H05	UNUSED						ALL
	H06		W2002	QL17	24		26-16-11	ALL
	H07	UNUSED						ALL
	H08		W2000	GK14	24		27-23-11	ALL
	H09		W2000	CK19	24		28-31-11	050-099, 155-199, 276-299
	H09	UNUSED						150-154, 275
	H10	UNUSED						050-099, 275-299
	H10		W2000	AK09	24		SPARE	150-199
	H11	UNUSED						050-099, 275-299
	H11		W2000	AK08	24		SPARE	150-199
	H12	UNUSED						ALL
	H13	UNUSED						ALL
	H14		W2002	RK13	24		27-09-14	ALL
	H15		W2002	CL06	24		31-51-41	ALL
	J01	UNUSED						ALL
	J02	UNUSED						ALL
	J03		W2002	QL15	24		73-21-14	ALL
	J04		W2002	QL14	24		73-21-14	ALL
	J05		W2000	EK16	24		77-12-12	ALL
	J06		W2000	EK17	24		77-12-12	ALL
	J07		W2000	AK04	24		73-31-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00800

Page 108

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00881A		//		PLUG-PART A OF D00881 (continued)				ALL
	J08		W2000	AK02	24		73-31-11	ALL
	J09		W2000	AK03	24		73-31-11	ALL
	J10		W2000	EK08	24		73-33-11	ALL
	J11		W2000	AK11	24		73-34-11	ALL
	J12	UNUSED						ALL
	J13		W2000	FL11	24		21-58-15	ALL
	J14		W2002	QK17	24		31-31-13	ALL
	J15	UNUSED						ALL
	K01		W1035	039	24		SPARE	ALL
	K02		W2000	NK16	24		29-11-12	ALL
	K03		W2002	LL04	24		29-32-11	ALL
	K04		W2000	LK02	24		29-32-11	ALL
	K05		W2002	PK18	24		29-11-32	ALL
	K06		W2002	DK16	24		32-61-14	ALL
	K07	UNUSED						050-099, 275-299
	K07		W2002	PK14	24		73-14-11	150-199
	K08		W2000	CK12	24		29-32-11	ALL
	K09		W1035	040	24		SPARE	ALL
	K10	UNUSED						ALL
	K11		W2002	LK06	24		29-11-12	ALL
	K12	UNUSED						ALL
	K13		W2000	NK03	24		27-81-11	ALL
	K14		W2000	FL16	24		21-26-11	ALL
	K15		W2004	021	22		31-41-11	ALL
	CAP	Y	W2002	HL05	24		SPARE	ALL
	REF	**	W2000	TL08	24		SPARE	050-099
	REF	**	W2002	DK04	24		SPARE	050-099
	REF	**	W2002	DK12	24		SPARE	050-099
	REF	**	W2002	DK13	24		SPARE	050-099
	REF		W2002	AK01	24		99-99-99	050-099, 150-154, 275-276
	REF		W2002	AK20	24		99-99-99	050-099, 150-154, 275-276
	REF		W2002	BK20	24		99-99-99	050-099, 150-154, 275-276
	REF		W2002	CK01	24		99-99-99	050-099, 150-154, 275-276
	REF		W2002	CK20	24		99-99-99	050-099, 150-154, 275-276
	REF		W2002	CL01	24		99-99-99	050-099, 150-154, 275-276
	REF		W2002	DK20	24		99-99-99	050-099, 150-154, 275-276
	REF		W2002	DL20	24		99-99-99	050-099, 150-154, 275-276
	REF		W2002	EK01	24		99-99-99	050-099, 150-154, 275-276
	REF		W2002	EK20	24		99-99-99	050-099, 150-154, 275-276
	REF		W2002	FK20	24		99-99-99	050-099, 150-154, 275-276

HOOKUP LIST

D280T132

91-21-51

Section D00800

Page 109

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00881A		//		PLUG-PART A OF D00881 (continued)				ALL
REF			W2002	FL20	24		99-99-99	050-099, 150-154, 275-276
REF			W2002	HK20	24		99-99-99	050-099, 150-154, 275-276
REF			W2002	HL20	24		99-99-99	050-099, 150-154, 275-276
REF			W2002	LK01	24		99-99-99	050-099, 150-154, 275-276
REF			W2002	LK20	24		99-99-99	050-099, 150-154, 275-276
REF			W2002	LL01	24		99-99-99	050-099, 150-154, 275-276
REF			W2002	LL20	24		99-99-99	050-099, 150-154, 275-276
REF			W2002	MK20	24		99-99-99	050-099, 150-154, 275-276
REF			W2002	NK01	24		99-99-99	050-099, 150-154, 275-276
REF			W2002	NK20	24		99-99-99	050-099, 150-154, 275-276
REF			W2002	PK20	24		99-99-99	050-099, 150-154, 275-276
REF			W2002	PL20	24		99-99-99	050-099, 150-154, 275-276
REF			W2002	QK01	24		99-99-99	050-099, 150-154, 275-276
REF			W2002	QK20	24		99-99-99	050-099, 150-154, 275-276
REF			W2002	QL01	24		99-99-99	050-099, 150-154, 275-276
REF			W2002	QL20	24		99-99-99	050-099, 150-154, 275-276
REF			W2002	RK20	24		99-99-99	050-099, 150-154, 275-276
REF	**		W2000	CK15	24		SPARE	050-099, 150-199
REF	**		W2002	HK19	24		SPARE	050-099, 150-199
REF	**		W2002	LL15	24		SPARE	050-099, 150-199
REF			W2000	AK01	24		99-99-99	ALL
REF			W2000	AK20	24		99-99-99	ALL
REF			W2000	BK20	24		99-99-99	ALL
REF			W2000	CK01	24		99-99-99	ALL
REF			W2000	DK20	24		99-99-99	ALL
REF			W2000	DL20	24		99-99-99	ALL
REF			W2000	EK01	24		99-99-99	ALL
REF			W2000	EK20	24		99-99-99	ALL
REF			W2000	FK20	24		99-99-99	ALL
REF			W2000	FL20	24		99-99-99	ALL
REF			W2000	GK01	24		99-99-99	ALL
REF			W2000	GK20	24		99-99-99	ALL
REF			W2000	GL01	24		99-99-99	ALL
REF			W2000	GL20	24		99-99-99	ALL
REF			W2000	HK20	24		99-99-99	ALL
REF			W2000	LK01	24		99-99-99	ALL
REF			W2000	LK20	24		99-99-99	ALL
REF			W2000	MK20	24		99-99-99	ALL
REF			W2000	NK01	24		99-99-99	ALL
REF			W2000	NK20	24		99-99-99	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00800

Page 110

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00881A		//		PLUG-PART A OF D00881 (continued)				ALL
	REF		W2000	NL01	24		99-99-99	ALL
	REF		W2000	NL20	24		99-99-99	ALL
	REF		W2000	PK20	24		99-99-99	ALL
	REF		W2000	PL20	24		99-99-99	ALL
	REF		W2000	QK01	24		99-99-99	ALL
	REF		W2000	QK20	24		99-99-99	ALL
	REF		W2000	RK20	24		99-99-99	ALL
	REF		W2000	SK01	24		99-99-99	ALL
	REF		W2000	SK20	24		99-99-99	ALL
	REF		W2000	TK20	24		99-99-99	ALL
	REF		W2000	TL20	24		99-99-99	ALL
	REF	**	W2000	AK12	24		SPARE	ALL
	REF	**	W2000	AK13	24		SPARE	ALL
	REF	**	W2000	AK14	24		SPARE	ALL
	REF	**	W2000	AK18	24		SPARE	ALL
	REF	**	W2000	AK19	24		SPARE	ALL
	REF	**	W2000	BK02	24		SPARE	ALL
	REF	**	W2000	BK09	24		SPARE	ALL
	REF	**	W2000	BK10	24		SPARE	ALL
	REF	**	W2000	BK11	24		SPARE	ALL
	REF	**	W2000	BK17	24		SPARE	ALL
	REF	**	W2000	BK18	24		SPARE	ALL
	REF	**	W2000	CK08	24		SPARE	ALL
	REF	**	W2000	CK10	24		SPARE	ALL
	REF	**	W2000	CK16	24		SPARE	ALL
	REF	**	W2000	CK17	24		SPARE	ALL
	REF	**	W2000	CK18	24		SPARE	ALL
	REF	**	W2000	DK11	24		SPARE	ALL
	REF	**	W2000	DL17	24		SPARE	ALL
	REF	**	W2000	DL18	24		SPARE	ALL
	REF	**	W2000	DL19	24		SPARE	ALL
	REF	**	W2000	EK05	24		SPARE	ALL
	REF	**	W2000	EK13	24		SPARE	ALL
	REF	**	W2000	EK14	24		SPARE	ALL
	REF	**	W2000	EK19	24		SPARE	ALL
	REF	**	W2000	FL08	24		SPARE	ALL
	REF	**	W2000	FL09	24		SPARE	ALL
	REF	**	W2000	FL10	24		SPARE	ALL
	REF	**	W2000	GK03	24		SPARE	ALL
	REF	**	W2000	GL09	24		SPARE	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00800

Page 111

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00881A		//		PLUG-PART A OF D00881 (continued)				ALL
	REF	**	W2000	HK13	24		SPARE	ALL
	REF	**	W2000	HK14	24		SPARE	ALL
	REF	**	W2000	HK15	24		SPARE	ALL
	REF	**	W2000	HK16	24		SPARE	ALL
	REF	**	W2000	HK17	24		SPARE	ALL
	REF	**	W2000	HK18	24		SPARE	ALL
	REF	**	W2000	HK19	24		SPARE	ALL
	REF	**	W2000	LK04	24		SPARE	ALL
	REF	**	W2000	LK07	24		SPARE	ALL
	REF	**	W2000	LK09	24		SPARE	ALL
	REF	**	W2000	LK10	24		SPARE	ALL
	REF	**	W2000	LK13	24		SPARE	ALL
	REF	**	W2000	MK06	24		SPARE	ALL
	REF	**	W2000	MK08	24		SPARE	ALL
	REF	**	W2000	MK09	24		SPARE	ALL
	REF	**	W2000	MK14	24		SPARE	ALL
	REF	**	W2000	MK15	24		SPARE	ALL
	REF	**	W2000	MK17	24		SPARE	ALL
	REF	**	W2000	MK18	24		SPARE	ALL
	REF	**	W2000	MK19	24		SPARE	ALL
	REF	**	W2000	NK08	24		SPARE	ALL
	REF	**	W2000	NK17	24		SPARE	ALL
	REF	**	W2000	NK18	24		SPARE	ALL
	REF	**	W2000	NL02	24		SPARE	ALL
	REF	**	W2000	NL03	24		SPARE	ALL
	REF	**	W2000	NL08	24		SPARE	ALL
	REF	**	W2000	NL09	24		SPARE	ALL
	REF	**	W2000	NL11	24		SPARE	ALL
	REF	**	W2000	NL12	24		SPARE	ALL
	REF	**	W2000	NL17	24		SPARE	ALL
	REF	**	W2000	PK02	24		SPARE	ALL
	REF	**	W2000	PK03	24		SPARE	ALL
	REF	**	W2000	PK04	24		SPARE	ALL
	REF	**	W2000	PK05	24		SPARE	ALL
	REF	**	W2000	PK06	24		SPARE	ALL
	REF	**	W2000	PK07	24		SPARE	ALL
	REF	**	W2000	PK08	24		SPARE	ALL
	REF	**	W2000	PK09	24		SPARE	ALL
	REF	**	W2000	PK10	24		SPARE	ALL
	REF	**	W2000	PK11	24		SPARE	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00800

Page 112

Jun 06/2008



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00881A		//		PLUG-PART A OF D00881 (continued)				ALL
	REF	**	W2000	PK12	24		SPARE	ALL
	REF	**	W2000	PK13	24		SPARE	ALL
	REF	**	W2000	PK15	24		SPARE	ALL
	REF	**	W2000	PK16	24		SPARE	ALL
	REF	**	W2000	PK17	24		SPARE	ALL
	REF	**	W2000	PK18	24		SPARE	ALL
	REF	**	W2000	PK19	24		SPARE	ALL
	REF	**	W2000	PL04	24		SPARE	ALL
	REF	**	W2000	PL05	24		SPARE	ALL
	REF	**	W2000	PL06	24		SPARE	ALL
	REF	**	W2000	PL07	24		SPARE	ALL
	REF	**	W2000	PL08	24		SPARE	ALL
	REF	**	W2000	PL09	24		SPARE	ALL
	REF	**	W2000	PL10	24		SPARE	ALL
	REF	**	W2000	PL11	24		SPARE	ALL
	REF	**	W2000	PL12	24		SPARE	ALL
	REF	**	W2000	PL13	24		SPARE	ALL
	REF	**	W2000	PL15	24		SPARE	ALL
	REF	**	W2000	PL16	24		SPARE	ALL
	REF	**	W2000	PL17	24		SPARE	ALL
	REF	**	W2000	PL18	24		SPARE	ALL
	REF	**	W2000	PL19	24		SPARE	ALL
	REF	**	W2000	QK08	24		SPARE	ALL
	REF	**	W2000	QK19	24		SPARE	ALL
	REF	**	W2000	QL06	24		SPARE	ALL
	REF	**	W2000	QL07	24		SPARE	ALL
	REF	**	W2000	QL08	24		SPARE	ALL
	REF	**	W2000	QL09	24		SPARE	ALL
	REF	**	W2000	QL10	24		SPARE	ALL
	REF	**	W2000	QL11	24		SPARE	ALL
	REF	**	W2000	QL12	24		SPARE	ALL
	REF	**	W2000	QL13	24		SPARE	ALL
	REF	**	W2000	QL14	24		SPARE	ALL
	REF	**	W2000	QL15	24		SPARE	ALL
	REF	**	W2000	QL16	24		SPARE	ALL
	REF	**	W2000	QL17	24		SPARE	ALL
	REF	**	W2000	QL18	24		SPARE	ALL
	REF	**	W2000	QL19	24		SPARE	ALL
	REF	**	W2000	RK06	24		SPARE	ALL
	REF	**	W2000	RK07	24		SPARE	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00800

Page 113

Jun 06/2008



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00881A		//		PLUG-PART A OF D00881 (continued)				ALL
	REF	**	W2000	RK11	24		SPARE	ALL
	REF	**	W2000	RK12	24		SPARE	ALL
	REF	**	W2000	RK13	24		SPARE	ALL
	REF	**	W2000	RK14	24		SPARE	ALL
	REF	**	W2000	RK15	24		SPARE	ALL
	REF	**	W2000	RK16	24		SPARE	ALL
	REF	**	W2000	RK17	24		SPARE	ALL
	REF	**	W2000	SK03	24		SPARE	ALL
	REF	**	W2000	SK04	24		SPARE	ALL
	REF	**	W2000	SK13	24		SPARE	ALL
	REF	**	W2000	SK14	24		SPARE	ALL
	REF	**	W2000	SK15	24		SPARE	ALL
	REF	**	W2000	SK16	24		SPARE	ALL
	REF	**	W2000	SK17	24		SPARE	ALL
	REF	**	W2000	TK03	24		SPARE	ALL
	REF	**	W2000	TK04	24		SPARE	ALL
	REF	**	W2000	TK05	24		SPARE	ALL
	REF	**	W2000	TK06	24		SPARE	ALL
	REF	**	W2000	TK07	24		SPARE	ALL
	REF	**	W2000	TK08	24		SPARE	ALL
	REF	**	W2000	TK10	24		SPARE	ALL
	REF	**	W2000	TK15	24		SPARE	ALL
	REF	**	W2000	TK19	24		SPARE	ALL
	REF	**	W2000	TL04	24		SPARE	ALL
	REF	**	W2000	TL05	24		SPARE	ALL
	REF	**	W2000	TL06	24		SPARE	ALL
	REF	**	W2000	TL09	24		SPARE	ALL
	REF	**	W2000	TL10	24		SPARE	ALL
	REF	**	W2000	TL11	24		SPARE	ALL
	REF	**	W2000	TL12	24		SPARE	ALL
	REF	**	W2000	TL13	24		SPARE	ALL
	REF	**	W2000	TL16	24		SPARE	ALL
	REF	**	W2000	TL17	24		SPARE	ALL
	REF	**	W2000	TL18	24		SPARE	ALL
	REF	**	W2000	TL19	24		SPARE	ALL
	REF	**	W2002	AK10	24		SPARE	ALL
	REF	**	W2002	AK11	24		SPARE	ALL
	REF	**	W2002	AK12	24		SPARE	ALL
	REF	**	W2002	AK13	24		SPARE	ALL
	REF	**	W2002	BK06	24		SPARE	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00800

Page 114

Jun 06/2008



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00881A		//		PLUG-PART A OF D00881 (continued)				ALL
	REF	**	W2002	BK09	24		SPARE	ALL
	REF	**	W2002	CK11	24		SPARE	ALL
	REF	**	W2002	DK03	24		SPARE	ALL
	REF	**	W2002	DK19	24		SPARE	ALL
	REF	**	W2002	DL17	24		SPARE	ALL
	REF	**	W2002	DL18	24		SPARE	ALL
	REF	**	W2002	DL19	24		SPARE	ALL
	REF	**	W2002	EK02	24		SPARE	ALL
	REF	**	W2002	EK08	24		SPARE	ALL
	REF	**	W2002	EK09	24		SPARE	ALL
	REF	**	W2002	EK10	24		SPARE	ALL
	REF	**	W2002	FK16	24		SPARE	ALL
	REF	**	W2002	FK17	24		SPARE	ALL
	REF	**	W2002	FL08	24		SPARE	ALL
	REF	**	W2002	FL10	24		SPARE	ALL
	REF	**	W2002	FL11	24		SPARE	ALL
	REF	**	W2002	FL12	24		SPARE	ALL
	REF	**	W2002	FL13	24		SPARE	ALL
	REF	**	W2002	FL14	24		SPARE	ALL
	REF	**	W2002	FL18	24		SPARE	ALL
	REF	**	W2002	FL19	24		SPARE	ALL
	REF	**	W2002	HK08	24		SPARE	ALL
	REF	**	W2002	HK12	24		SPARE	ALL
	REF	**	W2002	HK16	24		SPARE	ALL
	REF	**	W2002	HK17	24		SPARE	ALL
	REF	**	W2002	HK18	24		SPARE	ALL
	REF	**	W2002	HL06	24		SPARE	ALL
	REF	**	W2002	HL13	24		SPARE	ALL
	REF	**	W2002	HL14	24		SPARE	ALL
	REF	**	W2002	HL15	24		SPARE	ALL
	REF	**	W2002	HL16	24		SPARE	ALL
	REF	**	W2002	HL17	24		SPARE	ALL
	REF	**	W2002	LK15	24		SPARE	ALL
	REF	**	W2002	LK16	24		SPARE	ALL
	REF	**	W2002	LK17	24		SPARE	ALL
	REF	**	W2002	LK18	24		SPARE	ALL
	REF	**	W2002	LL08	24		SPARE	ALL
	REF	**	W2002	LL10	24		SPARE	ALL
	REF	**	W2002	LL11	24		SPARE	ALL
	REF	**	W2002	LL12	24		SPARE	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00800

Page 115

Jun 06/2008



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00881A		//		PLUG-PART A OF D00881 (continued)				ALL
REF	**		W2002	LL13	24		SPARE	ALL
REF	**		W2002	LL19	24		SPARE	ALL
REF	**		W2002	MK05	24		SPARE	ALL
REF	**		W2002	MK06	24		SPARE	ALL
REF	**		W2002	MK07	24		SPARE	ALL
REF	**		W2002	MK08	24		SPARE	ALL
REF	**		W2002	MK10	24		SPARE	ALL
REF	**		W2002	MK11	24		SPARE	ALL
REF	**		W2002	MK12	24		SPARE	ALL
REF	**		W2002	MK13	24		SPARE	ALL
REF	**		W2002	MK14	24		SPARE	ALL
REF	**		W2002	MK15	24		SPARE	ALL
REF	**		W2002	MK16	24		SPARE	ALL
REF	**		W2002	MK17	24		SPARE	ALL
REF	**		W2002	MK18	24		SPARE	ALL
REF	**		W2002	MK19	24		SPARE	ALL
REF	**		W2002	NK10	24		SPARE	ALL
REF	**		W2002	NK11	24		SPARE	ALL
REF	**		W2002	NK16	24		SPARE	ALL
REF	**		W2002	NK17	24		SPARE	ALL
REF	**		W2002	NK18	24		SPARE	ALL
REF	**		W2002	NK19	24		SPARE	ALL
REF	**		W2002	PK02	24		SPARE	ALL
REF	**		W2002	PK12	24		SPARE	ALL
REF	**		W2002	PK13	24		SPARE	ALL
REF	**		W2002	PK17	24		SPARE	ALL
REF	**		W2002	PK19	24		SPARE	ALL
REF	**		W2002	QK09	24		SPARE	ALL
REF	**		W2002	QK13	24		SPARE	ALL
REF	**		W2002	QL19	24		SPARE	ALL
REF	**		W2002	RK03	24		SPARE	ALL
REF	**		W2002	RK11	24		SPARE	ALL
REF	**		W2002	RK12	24		SPARE	ALL
REF	**		W2002	RK17	24		SPARE	ALL
REF	**		W2002	RK18	24		SPARE	ALL
REF	**		W2002	RK19	24		SPARE	ALL
REF			W2000	QL01	24		99-99-99	050-099, 150-199, 277-299
REF			W2000	QL20	24		99-99-99	050-099, 150-199, 277-299
REF			W2002	CL20	24		34-46-12	050-099, 151
REF	**		W2000	BK15	24		SPARE	050-099, 155-199, 276-299

HOOKUP LIST

D280T132

91-21-51

Section D00800

Page 116

Jun 06/2008



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00881A		//		PLUG-PART A OF D00881 (continued)				ALL
	REF	**	W2000	GK08	24		SPARE	050-099, 162-199, 275-299
	REF	**	W2000	AK08	24		SPARE	050-099, 275-299
	REF	**	W2000	AK09	24		SPARE	050-099, 275-299
	REF	**	W2000	DK10	24		SPARE	050-099, 275-299
	REF	**	W2000	LK03	24		SPARE	050-099, 275-299
	REF	**	W2000	NL04	24		SPARE	050-099, 275-299
	REF	**	W2000	QK10	24		SPARE	050-099, 275-299
	REF	**	W2000	RK18	24		SPARE	050-099, 275-299
	REF	**	W2000	RK19	24		SPARE	050-099, 275-299
	REF	**	W2002	EK19	24		SPARE	050-099, 275-299
	REF	**	W2002	HK06	24		SPARE	050-099, 275-299
	REF	**	W2002	LK08	24		SPARE	050-099, 275-299
	REF	**	W2002	LK09	24		SPARE	050-099, 275-299
	REF	**	W2002	LK10	24		SPARE	050-099, 275-299
	REF	**	W2002	LK19	24		SPARE	050-099, 275-299
	REF	**	W2002	PK14	24		SPARE	050-099, 275-299
	REF	**	W2002	PK15	24		SPARE	050-099, 275-299
	REF	**	W2000	FL17	24		SPARE	051-099, 155-199, 277-299
	REF	**	W2000	TL15	24		SPARE	150-152, 275-276
	REF	**	W2000	BK19	24		SPARE	150-154, 275
	REF	**	W2000	CK19	24		SPARE	150-154, 275
	REF	**	W2000	LK15	24		SPARE	150-154, 275
	REF	**	W2000	LK16	24		SPARE	150-154, 275
	REF	**	W2002	FK19	24		SPARE	150-154, 275
	REF	**	W2002	FL17	24		SPARE	150-154, 275
	REF	**	W2000	DK15	24		SPARE	150-199, 275-299
	REF		W2000	CK20	24		99-99-99	155-199, 277-299
	REF		W2002	AK01	24		SPARE	155-199, 277-299
	REF		W2002	AK20	24		SPARE	155-199, 277-299
	REF		W2002	BK20	24		SPARE	155-199, 277-299
	REF		W2002	CK01	24		SPARE	155-199, 277-299
	REF		W2002	CK20	24		SPARE	155-199, 277-299
	REF		W2002	CL01	24		SPARE	155-199, 277-299
	REF		W2002	DK20	24		SPARE	155-199, 277-299
	REF		W2002	DL20	24		SPARE	155-199, 277-299
	REF		W2002	EK01	24		SPARE	155-199, 277-299
	REF		W2002	EK20	24		SPARE	155-199, 277-299
	REF		W2002	FK20	24		SPARE	155-199, 277-299
	REF		W2002	FL20	24		SPARE	155-199, 277-299
	REF		W2002	HK20	24		SPARE	155-199, 277-299

HOOKUP LIST

D280T132

91-21-51

Section D00800

Page 117

Jun 06/2008



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00881A		//		PLUG-PART A OF D00881 (continued)				ALL
REF			W2002	HL20	24		SPARE	155-199, 277-299
REF			W2002	LK01	24		SPARE	155-199, 277-299
REF			W2002	LK20	24		SPARE	155-199, 277-299
REF			W2002	LL01	24		SPARE	155-199, 277-299
REF			W2002	LL20	24		SPARE	155-199, 277-299
REF			W2002	MK20	24		SPARE	155-199, 277-299
REF			W2002	NK01	24		SPARE	155-199, 277-299
REF			W2002	NK20	24		SPARE	155-199, 277-299
REF			W2002	PK20	24		SPARE	155-199, 277-299
REF			W2002	PL20	24		SPARE	155-199, 277-299
REF			W2002	QK01	24		SPARE	155-199, 277-299
REF			W2002	QK20	24		SPARE	155-199, 277-299
REF			W2002	QL01	24		SPARE	155-199, 277-299
REF			W2002	QL20	24		SPARE	155-199, 277-299
REF			W2002	RK20	24		SPARE	155-199, 277-299
REF	**		W2000	GK04	24		SPARE	155-157, 166-199, 277-299
REF	**		W2000	GK07	24		SPARE	155-157, 166-199, 277-299
REF	**		W2002	FK04	24		SPARE	155-157, 166-199, 277-299
REF	**		W2002	FK08	24		SPARE	155-157, 166-199, 277-299
REF	**		W2000	QL01	24		99-99-99	275-276
REF	**		W2000	GL06	24		SPARE	275-299
REF	**		W2000	GL07	24		SPARE	275-299
REF	**		W2000	GL08	24		SPARE	275-299
REF	**		W2000	LK12	24		SPARE	275-299
REF	**		W2000	NK07	24		SPARE	275-299
REF	**		W2000	QL02	24		SPARE	275-299
REF	**		W2000	QL03	24		SPARE	275-299
REF	**		W2002	FK09	24		SPARE	275-299
REF	**		W2002	FK10	24		SPARE	275-299
REF	**		W2000	CK09	24		SPARE	277-299
D00881B		//		PLUG-PART B OF D00881				ALL
A01			W1035	216WN	26		31-41-22	ALL
A02			W1035	217WN	26		31-41-22	ALL
A03			W1037	216WN	26		31-41-24	ALL
A04			W1037	217W	26		31-41-24	ALL
A05		UNUSED						ALL
A06			W2002	DL12	24		52-71-14	ALL
A07			W2002	DL13	24		52-71-13	ALL
A08		UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D00800
Page 118
Jun 06/2008



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00881B		//		PLUG-PART B OF D00881 (continued)				ALL
	A09		W1037	226R	24		31-31-13	ALL
	A10		W2002	DL05	24		52-71-11	ALL
	A11	UNUSED						ALL
	A12		W2002	DL10	24		52-71-12	ALL
	A13		W2002	HL09	24		49-61-11	ALL
	A14		W2000	GL02	24		73-21-14	ALL
	A15	UNUSED						ALL
	B01		W1035	216W	26		31-41-22	ALL
	B02		W1035	217W	26		31-41-22	ALL
	B03		W1037	216W	26		31-41-24	ALL
	B04		W1037	217WN	26		31-41-24	ALL
	B05		W2002	EK18	24		24-11-11	ALL
	B06		W1035	035	24		SPARE	ALL
	B07		W2002	DL11	24		52-71-14	ALL
	B08	UNUSED						ALL
	B09		W1037	226B	24		31-31-13	ALL
	B10		W2002	DL08	24		52-71-12	ALL
	B11	UNUSED						ALL
	B12		W2002	DL09	24		52-71-12	050-099
	B12	UNUSED						150-199, 275-299
	B13		W2002	FK10	24		30-81-11	050-099, 150-199
	B13	UNUSED						275-299
	B14		W2000	GL03	24		73-21-14	ALL
	B15	UNUSED						ALL
	C01	UNUSED						ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05		W2002	DL04	24		52-71-13	ALL
	C06		W1035	032	24		SPARE	ALL
	C07	UNUSED						ALL
	C08		W2000	TK14	24		31-51-11	ALL
	C09		W1035	031	24		31-41-15	ALL
	C10		W2002	AK02	24		34-61-14	ALL
	C11		W2002	AK03	24		34-61-14	ALL
	C12		W2004	205R	24		31-41-32	ALL
	C13		W2004	205B	24		31-41-32	ALL
	C14		W2002	AK19	24		31-51-43	ALL
	C15		W2000	TK02	24		34-12-22	ALL
	D01		W2002	QK11	24		77-12-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00800

Page 119

Jun 06/2008



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00881B		//		PLUG-PART B OF D00881 (continued)				ALL
	D02		W2002	QK12	24		77-12-11	ALL
	D03		W1035	033	24		SPARE	ALL
	D04		W1037	053	24		31-41-17	ALL
	D05		W2002	DL07	24		52-71-12	050-099
	D05	UNUSED						150-199, 275-299
	D06		W2002	PL03	24		24-34-11	ALL
	D07		W2002	PL02	24		24-34-11	ALL
	D08		W2002	CK15	24		22-34-11	ALL
	D09		W2002	PL05	24		24-34-11	ALL
	D10		W2002	PL04	24		24-34-11	ALL
	D11		W1035	034	24		SPARE	ALL
	D12		W2002	PL07	24		24-34-11	ALL
	D13		W2002	PL06	24		24-34-11	ALL
	D14		W2002	FL09	24		76-11-11	ALL
	D15		W2002	QL07	24		76-11-11	ALL
	E01		W2002	PL09	24		24-34-11	ALL
	E02		W2002	BK14	24		32-46-11	ALL
	E03		W2002	BK13	24		32-46-11	ALL
	E04		W2002	QK07	24		26-11-11	ALL
	E05		W2002	QK08	24		26-11-12	ALL
	E06		W2002	NK03	24		26-11-12	ALL
	E07		W2000	QK17	24		28-42-12	ALL
	E08		W2002	FK19	24		28-31-12	050-099, 155-199, 276-299
	E08	UNUSED						150-154, 275
	E09		W2002	NK04	24		26-11-21	ALL
	E10		W2002	LL18	24		21-65-11	ALL
	E11		W2002	LL17	24		21-65-11	ALL
	E12		W2002	DL06	24		52-71-11	ALL
	E13		W1035	036	24		SPARE	ALL
	E14		W2002	CL12	24		34-16-11	ALL
	E15		W2000	SK09	24		32-61-14	ALL
	F01		W2002	DK07	24		32-61-14	ALL
	F02		W1035	026	24		31-41-15	ALL
	F03		W2000	MK13	24		78-36-11	ALL
	F04		W2002	FK13	24		26-18-11	ALL
	F05	UNUSED						050-099, 275-299
	F05		W2000	CK09	24		73-14-11	150-199
	F06		W1035	028	24		31-41-15	ALL
	F07		W1035	025	24		31-41-15	ALL
	F08		W2000	FL18	24		21-51-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00800

Page 120

Jun 06/2008



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00881B		//		PLUG-PART B OF D00881 (continued)				ALL
	F09		W2002	DK06	24		32-61-14	ALL
	F10		W1035	027	24		31-41-15	ALL
	F11		W1035	024	24		31-41-15	ALL
	F12	UNUSED						ALL
	F13		W2000	AK17	24		76-11-11	ALL
	F14		W2002	DK11	24		32-61-14	ALL
	F15		W2002	QL10	24		32-42-11	ALL
	G01		W2000	AK07	24		79-32-11	ALL
	G02	UNUSED						ALL
	G03		W2000	MK12	24		78-36-11	ALL
	G04	UNUSED						050-099, 275-299
	G04		W2002	LK08	24		SPARE	150-199
	G05		W2002	NK13	24		26-16-11	ALL
	G06	UNUSED						ALL
	G07		W2002	LK11	24		36-11-21	ALL
	G08		W2002	PL12	24		21-58-16	ALL
	G09		W2000	SK06	24		32-61-14	ALL
	G10	UNUSED						050-099, 275-299
	G10		W2000	QK10	24		SPARE	150-199
	G11		W2002	EK11	24		36-11-11	ALL
	G12	UNUSED						ALL
	G13		W2000	CK11	24		36-11-31	ALL
	G13		W2002	CL20	24		34-46-12	150, 152-199, 275-299
	G14		W2002	CL11	24		31-51-42	ALL
	G15		W2000	SK07	24		32-61-14	ALL
	H01		W2000	NL14	24		32-09-12	ALL
	H02		W2000	AK05	24		79-32-11	ALL
	H03		W2000	GK12	24		29-31-11	ALL
	H04		W2000	BK12	24		29-31-11	ALL
	H05		W2000	GL05	24		75-23-11	ALL
	H06	UNUSED						050-099, 275-299
	H06		W2000	DK10	24		SPARE	150-199
	H07		W2002	FK02	24		78-36-11	ALL
	H08		W2000	QL03	24		30-81-11	050-099, 150-199
	H08	UNUSED						275-299
	H09		W2000	DL02	24		36-11-61	ALL
	H10	UNUSED						ALL
	H11		W2002	EK06	24		80-11-11	ALL
	H12		W2000	GL08	24		30-21-11	050-099, 150-199
	H12		W2000	CK15	24		30-21-11	275-299

HOOKUP LIST

D280T132

91-21-51

Section D00800

Page 121

Jun 06/2008



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00881B		//		PLUG-PART B OF D00881 (continued)				ALL
	H13	UNUSED						ALL
	H14		W2002	LL02	24		24-51-43	ALL
	H15		W2002	EK16	24		74-31-11	ALL
	J01		W2002	CL19	24		34-46-12	ALL
	J02		W2002	CK09	24		22-14-31	ALL
	J03		W2002	QL06	24		76-11-11	ALL
	J04		W2000	GK17	24		29-32-11	ALL
	J05		W2000	GK18	24		29-32-11	ALL
	J06	UNUSED						ALL
	J07	UNUSED						ALL
	J08		W2000	GL10	24		79-31-11	ALL
	J09	UNUSED						ALL
	J10		W2000	GK15	24		78-36-11	ALL
	J11		W2002	AK17	24		31-41-16	ALL
	J12		W2000	FL14	24		36-11-62	ALL
	J13		W2000	NL13	24		32-09-12	ALL
	J14		W2002	EK17	24		24-51-42	ALL
	J15		W1035	016	24		31-41-16	ALL
	K01		W2000	TL03	24		34-61-25	ALL
	K02		W2002	PK16	24		74-31-11	ALL
	K03	UNUSED						ALL
	K04	UNUSED						ALL
	K05		W2002	AK15	24		34-12-62	ALL
	K06		W1035	042	24		SPARE	ALL
	K07		W2002	LL03	24		29-32-11	ALL
	K08		W2000	CK13	24		29-32-11	ALL
	K09		W1035	041	24		SPARE	ALL
	K10	UNUSED						ALL
	K11	UNUSED						ALL
	K12	UNUSED						ALL
	K13		W2000	GK05	24		27-13-11	ALL
	K14		W2000	LK05	24		SPARE	050-099, 150-199
	K14	UNUSED						275-299
	K15		W2004	022	22		31-41-11	ALL
	REF	**	W2000	CK09	24		SPARE	050-099, 275-276
D00881C		//		PLUG-PART C OF D00881				ALL
	1		W2004	001	22		31-41-11	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00800

Page 122

Jun 06/2008



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00881C		//		PLUG-PART C OF D00881 (continued)				ALL
	4		W2004	004	20		31-41-11	ALL
	5		W2004	005	20		31-41-11	ALL
	6		W2004	006	20		31-41-11	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	= C12	UNUSED						ALL
	= C13	UNUSED						ALL
D00881D		//		PLUG-PART D OF D00881				ALL
	A01		W2000	RK02	24		24-11-21	ALL
	A02		W2000	DK15	24		SPARE	050-099
	A02	UNUSED						150-199, 275-299
	A03		W2000	DK17	24		21-58-11	ALL
	A04		W2000	DL14	24		21-58-11	ALL
	A05	UNUSED						ALL
	A06		W2002	RK02	24		22-21-11	ALL
	A07	UNUSED						ALL
	A08		W2000	QK18	24		27-51-11	ALL
	A09	UNUSED						050-099
	A09		W2002	DK13	24		52-71-12	150-199, 275-299
	A10		W2000	HK02	24		24-11-11	ALL
	A11	UNUSED						ALL
	A12		W2000	RK08	24		24-27-21	ALL
	A13		W2002	LK03	24		21-61-51	ALL
	A14		W2000	NK04	24		21-61-11	ALL
	A15		W2002	CL10	24		31-51-41	ALL
	B01		W2000	HK08	24		24-27-11	ALL
	B02		W2000	RK09	24		24-27-21	ALL
	B03		W2000	HK09	24		24-27-11	ALL
	B04		W2002	PK11	24		24-33-11	ALL
	B05		W2000	QK07	24		30-32-11	ALL
	B06		W2000	BK06	24		29-33-11	ALL
	B07		W2002	DK10	24		32-61-14	ALL
	B08		W2000	PK14	24		21-61-51	ALL
	B09		W2000	QK05	24		30-31-13	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00800

Page 123

Jun 06/2008



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00881D		//		PLUG-PART D OF D00881 (continued)				ALL
	B10		W2002	NK15	24		26-17-11	ALL
	B11		W2002	CK10	24		77-35-11	ALL
	B12		W2002	QL13	24		32-42-11	ALL
	B13		W2000	NK09	24		21-61-41	ALL
	B14		W2002	DL16	24		27-88-11	ALL
	B15		W2002	BK04	24		27-51-51	ALL
	C01		W2000	RK10	24		24-27-21	ALL
	C02		W2002	FK15	24		26-18-31	ALL
	C03		W2002	RK06	24		27-11-12	ALL
	C04		W2000	GL19	24		27-31-11	ALL
	C05	UNUSED						050-099
	C05		W2002	DL09	24		52-71-12	150-199, 275-299
	C06		W2000	HK10	24		24-27-11	ALL
	C07		W2002	HK02	24		24-27-41	ALL
	C08		W2002	LK04	24		24-51-23	ALL
	C09		W2002	HL10	24		26-22-21	050-099, 150-199
	C09	UNUSED						275-299
	C10	UNUSED						050-099, 275-299
	C10		W2002	LK10	24		SPARE	150-199
	C11		W2002	RK09	24		27-61-12	ALL
	C12		W2002	DK05	24		32-61-14	ALL
	C13		W2002	RK10	24		27-21-12	ALL
	C14		W2000	QL05	24		28-22-31	ALL
	C15	UNUSED						ALL
	D01		W2002	HL11	24		26-23-11	ALL
	D02		W2000	FK19	24		21-43-12	ALL
	D03		W2000	FK15	24		21-43-12	ALL
	D04		W2000	BK07	24		29-32-11	ALL
	D05		W2000	BK08	24		29-32-11	ALL
	D06		W2002	BK15	24		32-46-11	ALL
	D07		W2002	BK16	24		32-46-11	ALL
	D08		W1035	038	24		SPARE	ALL
	D09		W2000	GL07	24		21-44-22	050-099, 150-199
	D09	UNUSED						275-299
	D10		W2000	GL06	24		21-44-22	050-099, 150-199
	D10	UNUSED						275-299
	D11		W2002	LK13	24		21-65-11	ALL
	D12		W2002	LK14	24		21-65-11	ALL
	D13		W2000	DL09	24		21-52-31	ALL
	D14		W2000	DL10	24		21-52-31	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00800

Page 124

Jun 06/2008



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00881D		//		PLUG-PART D OF D00881 (continued)				ALL
	D15		W2002	BK17	24		32-46-11	ALL
	E01		W2000	NL18	24		21-44-11	ALL
	E02		W2000	TK17	24		34-21-21	ALL
	E03		W1035	023	24		31-41-15	ALL
	E04		W1035	020	24		31-41-15	ALL
	E05		W2000	TK18	24		34-21-21	ALL
	E06		W1035	021	24		31-41-15	ALL
	E07		W2002	DK08	24		32-61-14	ALL
	E08	UNUSED						ALL
	E09		W2000	TK16	24		34-21-21	ALL
	E10		W1035	019	24		31-41-15	ALL
	E11		W1035	022	24		31-41-15	ALL
	E12	UNUSED						ALL
	E13	UNUSED						050-099, 275-299
	E13		W2000	NL04	24		SPARE	150-199
	E14		W2000	NK15	24		29-11-12	ALL
	E15		W2000	GK09	24		21-58-16	ALL
	F01		W2002	QL18	24		26-16-11	ALL
	F02	UNUSED						050-099, 150-199
	F02		W2002	HL10	24		26-22-21	275-299
	F03		W2002	FK06	24		27-51-61	ALL
	F04		W2002	QK06	24		26-15-11	ALL
	F05	UNUSED						ALL
	F06		W2002	DK02	24		32-61-14	ALL
	F07		W2002	QL16	24		26-16-11	ALL
	F08		W2002	DK18	24		32-61-14	ALL
	F09		W2002	DK09	24		32-61-14	ALL
	F10	UNUSED						050-099, 275-299
	F10		W2002	PK15	24		73-14-11	150-199
	F11		W2000	PL14	24		21-51-21	ALL
	F12		W2002	DK15	24		78-36-21	ALL
	F13	UNUSED						ALL
	F14		W2002	DK14	24		78-36-21	ALL
	F15		W2000	MK07	24		79-32-11	ALL
	G01	UNUSED						ALL
	G02		W2002	QL02	24		26-21-11	ALL
	G03		W2002	NK07	24		26-11-21	ALL
	G04		W2002	FK14	24		26-18-21	ALL
	G05		W2002	NK08	24		26-11-22	ALL
	G06		W2002	QK02	24		26-11-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00800

Page 125

Jun 06/2008



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00881D		//		PLUG-PART D OF D00881 (continued)				ALL
	G07		W2002	MK09	24		22-14-31	ALL
	G08		W2002	FK05	24		28-42-12	ALL
	G09		W2002	QK05	24		26-11-22	ALL
	G10	UNUSED						ALL
	G11		W2002	QL08	24		26-16-21	ALL
	G12		W2000	MK11	24		73-34-11	050-099, 150-199, 277-299
	G12		W2000	MK11	24		74-34-11	275-276
	G13		W2002	DK17	24		32-61-14	ALL
	G14		W2000	LK08	24		73-33-11	ALL
	G15		W2002	BK03	24		27-51-41	ALL
	H01		W2000	MK04	24		73-31-11	ALL
	H02		W2002	FK18	24		26-18-12	ALL
	H03		W2002	FK11	24		28-42-11	ALL
	H04	UNUSED						ALL
	H05		W2000	FL19	24		26-18-22	ALL
	H06		W2002	LK07	24		28-42-12	ALL
	H07		W2000	QK02	24		78-36-21	ALL
	H08		W2000	GK11	24		28-42-11	ALL
	H09	UNUSED						050-099, 275-299
	H09		W2000	RK18	24		SPARE	150-199
	H10	UNUSED						050-099, 275-299
	H10		W2000	RK19	24		SPARE	150-199
	H11	UNUSED						ALL
	H12	UNUSED						ALL
	H13		W2000	DK06	24		36-21-11	ALL
	H14		W2000	EK10	24		36-22-21	ALL
	H15		W2000	EK09	24		36-22-21	ALL
	J01		W2000	MK02	24		73-31-11	ALL
	J02	UNUSED						050-099, 275-299
	J02		W2000	LK03	24		SPARE	150-199
	J03		W2002	FK12	24		78-36-21	ALL
	J04		W2000	LK19	24		73-21-14	ALL
	J05		W2000	LK18	24		73-21-14	ALL
	J06	UNUSED						ALL
	J07	UNUSED						ALL
	J08		W2000	SK19	24		77-12-12	ALL
	J09		W2000	SK18	24		77-12-12	ALL
	J10		W2002	QK18	24		29-11-32	ALL
	J11		W2002	LL07	24		29-11-31	ALL
	J12		W1035	044	24		SPARE	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00800

Page 126

Jun 06/2008



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00881D		//		PLUG-PART D OF D00881 (continued)				ALL
	J13		W2000	NK07	24		30-21-11	050-099, 150-199
	J13		W2002	LL15	24		30-21-11	275-299
	J14	UNUSED						ALL
	J15	UNUSED						ALL
	K01		W2000	MK03	24		73-31-11	ALL
	K02		W2002	PK06	24		80-11-21	ALL
	K03		W2000	NK19	24		79-35-11	ALL
	K04		W2000	LK16	24		28-42-13	050-099, 155-199, 276-299
	K04	UNUSED						150-154, 275
	K05		W2000	LK15	24		28-31-11	050-099, 155-199, 276-299
	K05	UNUSED						150-154, 275
	K06		W2000	TL14	24		31-41-16	ALL
	K07		W1035	106	24		SPARE	050-099, 150-199
	K07	UNUSED						275-299
	K08		W2000	NK14	24		27-23-11	ALL
	K09		W1035	105	24		SPARE	ALL
	K10		W2000	LK11	24		79-33-11	ALL
	K11	UNUSED						ALL
	K12		W1035	043	24		SPARE	ALL
	K13		W2002	FL15	24		29-11-22	ALL
	K14		W2000	NK12	24		29-31-11	ALL
	K15		W2004	023	22		31-41-11	ALL
D00881E		//		PLUG-PART E OF D00881				ALL
	A01		W2002	CL09	24		31-51-41	ALL
	A02		W2002	QK10	24		26-11-11	ALL
	A03		W2000	BK05	24		29-33-11	ALL
	A04		W2000	QK09	24		30-33-11	ALL
	A05		W2002	LL14	24		30-21-11	ALL
	A06		W2002	FL04	24		30-31-21	ALL
	A07		W2002	FL07	24		30-32-21	ALL
	A08		W2000	EK07	24		77-35-11	ALL
	A09		W2002	AK14	24		22-14-31	ALL
	A10		W2002	RK05	24		27-09-14	ALL
	A11		W2002	LK02	24		33-51-11	ALL
	A12		W2002	PL11	24		24-34-11	ALL
	A13		W2002	AK09	24		34-53-11	ALL
	A14		W2000	NL06	24		77-12-11	ALL
	A15	UNUSED						ALL
	B01		W2002	DL15	24		27-88-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00800

Page 127

Jun 06/2008



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00881E		//		PLUG-PART E OF D00881 (continued)				ALL
	B02		W2002	BK08	24		77-31-11	ALL
	B03		W2002	BK07	24		77-31-11	ALL
	B04		W2002	CK16	24		22-41-13	ALL
	B05		W2002	CK17	24		22-41-13	ALL
	B06		W2002	CK12	24		22-32-12	ALL
	B07		W2002	CK13	24		22-32-12	ALL
	B08		W2002	AK05	24		34-61-15	ALL
	B09		W2002	AK06	24		34-61-15	ALL
	B10		W2002	CK06	24		31-41-31	ALL
	B11		W2002	CK07	24		31-41-31	ALL
	B12		W2002	RK07	24		27-41-11	ALL
	B13		W2004	009	24		24-25-13	ALL
	B14		W2000	NL07	24		77-12-11	ALL
	B15	UNUSED						ALL
	C01		W2000	LK06	24		28-22-21	ALL
	C02		W2002	PK04	24		28-22-31	ALL
	C03		W2000	QK03	24		30-31-11	ALL
	C04		W2002	LL05	24		30-41-12	ALL
	C05		W2002	LL06	24		30-41-12	ALL
	C06		W2000	HK06	24		30-41-11	ALL
	C07		W2000	NL19	24		29-33-11	ALL
	C08	UNUSED						ALL
	C09		W2000	QK16	24		21-44-21	ALL
	C10		W2002	CK19	24		31-31-11	ALL
	C11		W2002	QL09	24		26-16-21	ALL
	C12	UNUSED						ALL
	C13	UNUSED						ALL
	C14		W2000	CK14	24		30-21-11	ALL
	C15		W2002	PL13	24		24-34-11	ALL
	D01		W2002	BK05	24		27-58-31	ALL
	D02		W2002	CL08	24		31-51-41	ALL
	D03		W2002	EK04	24		28-41-13	ALL
	D04		W2002	BK02	24		28-41-11	ALL
	D05		W2000	EK06	24		28-22-21	ALL
	D06		W2002	FK09	24		30-81-11	050-099, 150-199
	D06	UNUSED						275-299
	D07		W2000	QL02	24		30-81-11	050-099, 150-199
	D07	UNUSED						275-299
	D08		W2000	NL15	24		24-11-21	ALL
	D09		W2000	GK06	24		30-21-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00800

Page 128

Jun 06/2008



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00881E		//		PLUG-PART E OF D00881 (continued)				ALL
	D10		W2000	GL17	24		21-43-11	ALL
	D11		W2000	SK12	24		32-61-14	ALL
	D12		W2000	GL18	24		21-44-11	ALL
	D13		W2002	BK19	24		28-41-13	ALL
	D14	UNUSED						ALL
	D15	UNUSED						ALL
	E01	UNUSED						ALL
	E02		W2000	FK10	24		21-52-41	ALL
	E03	UNUSED						ALL
	E04		W2004	029	22		31-41-34	ALL
	E05		W2000	BK19	24		21-64-11	050-099, 155-199, 276-299
	E05		W2000	BK15	24		21-64-11	150-154, 275
	E06		W2002	PL16	24		35-11-13	ALL
	E07		W2000	HK03	24		24-11-11	ALL
	E08		W2000	RK03	24		24-11-21	ALL
	E09		W2000	HK05	24		24-28-21	ALL
	E10		W2002	HK15	24		24-28-21	ALL
	E11		W2002	HK13	24		24-28-21	ALL
	E12		W2002	HK14	24		24-28-21	ALL
	E13		W2000	PL03	24		73-21-14	ALL
	E14		W2000	PL02	24		73-21-14	ALL
	E15	UNUSED						ALL
	F01		W2002	HL19	24		31-41-35	ALL
	F02		W2002	HL18	24		31-41-35	ALL
	F03		W2002	CK03	24		31-41-31	ALL
	F04		W2002	CK04	24		31-41-31	ALL
	F05		W2004	209R	24		31-41-34	ALL
	F06		W2004	209B	24		31-41-34	ALL
	F07		W1035	201R	24		31-41-12	ALL
	F08		W1035	201B	24		31-41-12	ALL
	F09	UNUSED						ALL
	F10	UNUSED						ALL
	F11		W2004	201R	24		31-41-31	ALL
	F12		W2004	201B	24		31-41-31	ALL
	F13		W2000	CK03	24		21-31-21	ALL
	F14		W2002	EK03	24		21-31-11	ALL
	F15	UNUSED						ALL
	G01		W1035	037	24		SPARE	ALL
	G02		W2002	NK14	24		26-16-11	ALL
	G03		W2000	FK16	24		21-58-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00800

Page 129

Jun 06/2008



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00881E		//		PLUG-PART E OF D00881 (continued)				ALL
	G04		W2002	NK02	24		26-11-11	ALL
	G05	UNUSED						ALL
	G06		W2002	NK05	24		26-11-22	ALL
	G07	UNUSED						050-099, 275-299
	G07		W2002	LK09	24		SPARE	150-199
	G08		W2002	HK03	24		24-28-11	ALL
	G09		W2000	HK04	24		24-28-11	ALL
	G10		W2000	RK04	24		24-28-11	ALL
	G11		W2002	PK09	24		24-28-11	ALL
	G12		W2002	HK04	24		24-28-11	ALL
	G13		W2000	NL10	24		79-31-11	ALL
	G14		W2002	PL08	24		24-34-11	ALL
	G15		W2000	LK12	24		30-21-11	050-099, 150-199
	G15		W2000	LK05	24		30-21-11	275-299
	H01		W2002	BK18	24		32-46-11	ALL
	H02		W2000	GK04	24		27-18-11	050-099, 150-154, 162-165, 275-276
	H02		W2006	039	24		27-18-11	155-157, 166-199, 277-299
	H03		W2002	FK04	24		27-18-11	050-099, 150-154, 162-165, 275-276
	H03		W2006	038	24		27-18-11	155-157, 166-199, 277-299
	H04		W2000	GK07	24		27-18-11	050-099, 150-154, 162-165, 275-276
	H04		W2006	040	24		27-18-11	155-157, 166-199, 277-299
	H05		W2002	FK08	24		27-18-11	050-099, 150-154, 162-165, 275-276
	H05		W2006	036	24		27-18-11	155-157, 166-199, 277-299
	H06		W2000	EK02	24		27-38-11	ALL
	H07		W2000	EK04	24		27-38-11	ALL
	H08	UNUSED						ALL
	H09	UNUSED						ALL
	H10		W2000	GL15	24		27-28-11	ALL
	H11		W2000	MK05	24		79-32-11	ALL
	H12		W2002	QK19	24		32-41-11	ALL
	H13		W2000	FK03	24		21-52-11	ALL
	H14		W2000	DL03	24		21-28-11	ALL
	H15		W2000	DL04	24		21-28-11	ALL
	J01		W1035	050	24		31-41-15	ALL
	J02		W2002	LK05	24		27-13-11	ALL
	J03		W2000	NL05	24		75-23-11	ALL
	J04		W1035	049	24		31-41-15	ALL
	J05		W2000	DK16	24		32-42-11	ALL
	J06		W2000	CK05	24		27-13-11	ALL
	J07		W2000	SK08	24		32-61-14	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00800

Page 130

Jun 06/2008



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00881E		//		PLUG-PART E OF D00881 (continued)				ALL
	J08		W1035	046	24		SPARE	ALL
	J09		W2000	DL12	24		21-52-11	ALL
	J10		W2000	NK06	24		21-61-31	ALL
	J11		W2002	RK15	24		27-09-14	ALL
	J12		W2000	FK06	24		21-52-11	ALL
	J13	UNUSED						ALL
	J14		W2002	PL14	24		24-34-11	ALL
	J15		W2002	BK10	24		32-46-11	ALL
	K01		W1035	045	24		SPARE	ALL
	K02		W2000	DK08	24		36-11-62	ALL
	K03		W2000	DK02	24		36-11-51	ALL
	K04	UNUSED						050-099, 275-299
	K04		W2002	HK06	24		SPARE	150-199
	K05		W2002	FL06	24		30-31-23	ALL
	K06		W2000	DK03	24		36-11-52	ALL
	K07		W2000	DK04	24		36-22-11	ALL
	K08		W2000	QK06	24		30-31-13	ALL
	K09		W2002	RK16	24		27-09-14	ALL
	K10		W2000	DK09	24		36-11-61	ALL
	K11		W2000	DK05	24		36-22-11	ALL
	K12		W2002	FL03	24		30-31-21	ALL
	K13		W2002	RK14	24		27-09-14	ALL
	K14		W2002	AK08	24		34-61-15	ALL
	K15		W2004	024	22		31-41-11	ALL
D00881F		//		PLUG-PART F OF D00881				ALL
	A01	UNUSED						ALL
	A02	UNUSED						ALL
	A03		W2002	HK09	24		24-34-11	ALL
	A04		W2002	PL10	24		24-34-11	ALL
	A05		W2002	HK05	24		49-71-11	ALL
	A06		W2002	HK07	24		49-73-11	ALL
	A07		W2000	DL05	24		21-52-31	ALL
	A08		W2000	DL06	24		21-52-31	ALL
	A09		W2002	AK18	24		34-22-38	ALL
	A10		W2002	HL04	24		28-25-21	ALL
	B01		W2002	HK11	24		24-34-11	ALL
	B02		W2002	HK10	24		24-34-11	ALL
	B03	UNUSED						ALL
	B04		W1035	104	24		SPARE	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00800

Page 131

Jun 06/2008



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00881F		//		PLUG-PART F OF D00881 (continued)				ALL
	B05		W2002	PK05	24		80-11-21	ALL
	B06		W2002	HL08	24		49-61-11	ALL
	B07		W1035	029	24		31-41-15	ALL
	B08		W2000	QK04	24		30-31-11	ALL
	B09		W2002	EK13	24		21-64-11	ALL
	B10		W2000	LK14	24		73-21-18	ALL
	C01		W2000	DL07	24		21-52-31	ALL
	C02		W2000	SK11	24		32-61-14	ALL
	C03		W2002	MK02	24		34-21-31	ALL
	C04		W2002	MK03	24		34-21-31	ALL
	C05	UNUSED						050-099
	C05		W2002	DK04	24		32-71-11	150-199, 275-299
	C06		W2000	DK12	24		21-44-21	ALL
	C07		W2000	SK02	24		32-61-14	ALL
	C08		W2002	QL03	24		26-23-12	ALL
	C09		W2002	FL16	24		29-11-22	ALL
	C10	UNUSED						ALL
	D01		W2000	DL08	24		21-52-31	ALL
	D02		W2000	FK14	24		21-51-11	ALL
	D03		W2002	RK04	24		27-09-14	ALL
	D04		W2002	NK06	24		26-15-11	ALL
	D05		W2002	MK04	24		34-21-31	ALL
	D06		W2000	QL04	24		28-22-31	ALL
	D07		W2000	GK13	24		24-11-11	ALL
	D08		W1035	030	24		31-41-15	ALL
	D09		W2002	EK05	24		80-11-11	ALL
	D10		W2002	QK16	24		28-42-21	ALL
	E01		W2002	HL12	24		49-15-11	ALL
	E02	UNUSED						ALL
	E03		W2002	HL02	24		26-21-11	ALL
	E04	UNUSED						ALL
	E05		W2002	AK16	24		34-12-12	ALL
	E06	UNUSED						ALL
	E07		W2002	HL03	24		26-16-21	ALL
	E08	UNUSED						ALL
	E09		W2000	GL13	24		32-09-11	ALL
	E10		W2002	PK07	24		29-32-11	ALL
	F01		W2002	HL07	24		36-11-41	ALL
	F02		W2002	NK09	24		26-15-11	ALL
	F03		W2000	FK17	24		21-58-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00800

Page 132

Jun 06/2008



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00881F		//		PLUG-PART F OF D00881 (continued)				ALL
	F04		W2002	DL14	24		52-71-13	ALL
	F05		W2002	LL16	24		21-58-16	ALL
	F06		W2002	PK03	24		35-21-11	ALL
	F07		W2002	NK12	24		26-16-11	ALL
	F08		W2000	GL14	24		32-09-11	ALL
	F09	UNUSED						050-099, 150-199
	F09		W2002	HK19	24		26-22-21	275-299
	F10		W2002	PL17	24		49-94-14	ALL
	G01		W2000	HK12	24		24-11-11	ALL
	G02	UNUSED						050-099, 275-299
	G02		W2002	EK19	24		SPARE	150-199
	G03		W2000	RK05	24		24-11-21	ALL
	G04		W2000	EK12	24		29-32-11	ALL
	G05		W2000	GK16	24		30-21-11	ALL
	G06	UNUSED						ALL
	G07		W2000	QK12	24		30-11-11	ALL
	G08		W2000	NL16	24		30-21-11	ALL
	G09		W2000	FL06	24		21-64-11	ALL
	G10		W2004	025	22		31-41-32	ALL
	H01		W2000	QK15	24		30-11-11	ALL
	H02	UNUSED						ALL
	H03	UNUSED						ALL
	H04		W2002	QK14	24		28-22-31	ALL
	H05		W1035	048	24		31-41-15	ALL
	H06	UNUSED						ALL
	H07	UNUSED						ALL
	H08		W2000	QK11	24		28-42-11	ALL
	H09		W2000	NK11	24		28-42-11	ALL
	H10		W2002	PK08	24		32-42-11	ALL
	J01	UNUSED						050-099, 275-299
	J01		W2002	LK19	24		SPARE	150-199
	J02		W2000	QK14	24		30-11-11	ALL
	J03	UNUSED						ALL
	J04		W2004	038	24		24-25-13	ALL
	J05		W1035	047	24		SPARE	ALL
	J06	UNUSED						ALL
	J07	UNUSED						ALL
	J08	UNUSED						ALL
	J09		W2002	EK07	24		28-42-12	ALL
	J10		W2000	DK14	24		73-21-18	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00800

Page 133

Jun 06/2008



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00881F		//		PLUG-PART F OF D00881 (continued)				ALL
	K01		W2000	QK13	24		30-11-11	ALL
	K02		W2000	CK06	24		29-11-22	ALL
	K03		W2000	TL15	24		34-45-13	050-099, 153-199, 277-299
	K03	UNUSED						150-152, 275-276
	K04	UNUSED						ALL
	K05	UNUSED						ALL
	K06		W2002	QL04	24		29-21-31	ALL
	K07	UNUSED						ALL
	K08	UNUSED						ALL
	K09		W2000	NK05	24		21-61-21	ALL
	K10		W2000	CK02	24		29-21-32	ALL
	REF	**	W2000	TL08	24		34-61-16	150-199, 275-299
D00883A		//		PLUG-PART A OF D00883				ALL
	A01		W1037	219WN	26		31-41-24	ALL
	A02		W1037	219W	26		31-41-24	ALL
	A03	UNUSED						ALL
	A04		W1035	207W	26		31-41-21	ALL
	A05		W1035	209W	26		31-41-21	ALL
	A06	UNUSED						ALL
	A07	UNUSED						ALL
	A08	UNUSED						ALL
	A09	UNUSED						ALL
	A10	UNUSED						ALL
	A11		W1037	218W	26		31-41-24	ALL
	A12		W1037	206W	26		31-41-23	ALL
	A13		W1037	208W	26		31-41-23	ALL
	A14		W1037	207W	26		31-41-23	ALL
	A15		W1037	209W	26		31-41-23	ALL
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03		W1035	004	24		31-41-12	ALL
	B04		W1035	207WN	26		31-41-21	ALL
	B05		W1035	209WN	26		31-41-21	ALL
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11		W1037	218WN	26		31-41-24	ALL

HOOKUP LIST
D280T132

91-21-51
Section D00800
Page 134
Jun 06/2008



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00883A		//		PLUG-PART A OF D00883 (continued)				ALL
	B12		W1037	206WN	26		31-41-23	ALL
	B13		W1037	208WN	26		31-41-23	ALL
	B14		W1037	207WN	26		31-41-23	ALL
	B15		W1037	209WN	26		31-41-23	ALL
	C01		W1035	219WN	26		31-41-22	ALL
	C02		W1035	219W	26		31-41-22	ALL
	C03		W1035	005	24		31-41-12	ALL
	C04		W1037	004	24		31-41-12	ALL
	C05		W1037	005	24		31-41-12	ALL
	C06	UNUSED						ALL
	C07	UNUSED						ALL
	C08	UNUSED						ALL
	C09	UNUSED						ALL
	C10		W1035	218WN	26		31-41-22	ALL
	C11		W1035	218W	26		31-41-22	ALL
	C12		W1035	206WN	26		31-41-21	ALL
	C13		W1035	206W	26		31-41-21	ALL
	C14		W1035	208WN	26		31-41-21	ALL
	C15		W1035	208W	26		31-41-21	ALL
	D01		W2002	FN05	24		30-31-23	ALL
	D02		W2000	HM07	24		30-41-11	ALL
	D03		W2002	QN11	24		32-42-11	ALL
	D04		W2002	PM10	24		24-33-11	ALL
	D05		W2000	FN13	24		21-51-21	ALL
	D06		W2000	NM02	24		21-25-21	ALL
	D07		W2000	TM09	24		22-21-21	ALL
	D08		W2000	FM12	24		21-51-11	ALL
	D09	UNUSED						ALL
	D10		W2000	SM05	24		32-61-14	ALL
	D11		W2002	RM08	24		27-41-11	ALL
	D12	UNUSED						ALL
	D13		W2002	DN03	24		52-71-11	ALL
	D14		W2002	DN02	24		52-71-11	ALL
	D15		W2000	PM19	24		21-52-31	ALL
	E01	UNUSED						050-099
	E01		W2002	DM12	24		52-71-12	150-199, 275-299
	E02		W2002	BM12	24		32-46-11	ALL
	E03		W2002	LM12	24		21-26-21	ALL
	E04	UNUSED						050-099
	E04		W2002	DN07	24		52-71-12	150-199, 275-299

HOOKUP LIST

D280T132

91-21-51

Section D00800

Page 135

Jun 06/2008



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00883A		//		PLUG-PART A OF D00883 (continued)				ALL
	E05		W2000	CM04	24		24-51-13	ALL
	E06		W2000	FM13	24		21-28-11	050-099, 155-199, 277-299
	E06		W2000	FM13	24		21-51-11	150-154, 275-276
	E07		W2000	GM02	24		21-25-11	ALL
	E08		W2000	PM15	24		73-21-14	ALL
	E09		W1037	053	24		31-41-17	ALL
	E10		W2000	TN13	24		31-41-16	ALL
	E11		W2000	FM18	24		21-58-14	ALL
	E12		W2006	207R	24		31-41-34	ALL
	E13		W2000	FN17	24		21-51-11	050, 150-154, 275-276
	E13	UNUSED						051-099, 155-199, 277-299
	E14		W2000	PN16	24		21-52-31	ALL
	E15		W2000	PM18	24		21-52-31	ALL
	F01	UNUSED						ALL
	F02	UNUSED						ALL
	F03		W2000	BM03	24		29-33-11	ALL
	F04		W2000	BM04	24		29-33-11	ALL
	F05		W2000	NM10	24		29-33-11	ALL
	F06		W2000	PM08	24		21-52-31	ALL
	F07		W2000	PM09	24		21-52-31	ALL
	F08		W1035	010	24		31-41-16	ALL
	F09		W2002	PN15	24		35-11-13	ALL
	F10		W2002	BM11	24		32-46-11	ALL
	F11	UNUSED						ALL
	F12		W2006	207B	24		31-41-34	ALL
	F13		W2002	EM15	24		21-33-11	ALL
	F14		W2000	PN15	24		21-52-31	ALL
	F15	UNUSED						ALL
	G01		W2002	CN15	24		34-21-11	ALL
	G02		W2002	QM04	24		26-11-21	ALL
	G03		W2002	QN12	24		32-44-11	ALL
	G04		W2002	QM03	24		26-11-12	ALL
	G05		W2002	CN14	24		34-21-11	ALL
	G06		W2002	LN09	24		32-42-12	ALL
	G07	UNUSED						ALL
	G08		W2002	CN13	24		34-21-11	ALL
	G09		W2002	FN02	24		27-62-11	ALL
	G10		W2000	FN12	24		21-51-21	ALL
	G11		W2000	CM07	24		29-11-31	ALL
	G12		W2000	SM10	24		32-61-14	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00800

Page 136

Jun 06/2008



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00883A		//		PLUG-PART A OF D00883 (continued)				ALL
	G13		W2000	TN02	24		34-61-25	ALL
	G14		W2000	FN15	24		21-26-11	ALL
	G15		W2002	CN07	24		31-51-41	ALL
	H01		W2002	QM15	24		27-23-11	ALL
	H02		W2002	FN17	24		28-42-13	050-099, 155-199, 276-299
	H02	UNUSED						150-154, 275
	H03		W2000	EM11	24		79-33-11	ALL
	H04		W2000	GM19	24		79-35-11	ALL
	H05	UNUSED						ALL
	H06		W2002	QN17	24		26-16-11	ALL
	H07	UNUSED						ALL
	H08		W2000	GM14	24		27-23-11	ALL
	H09		W2000	CM19	24		28-31-11	050-099, 155-199, 276-299
	H09	UNUSED						150-154, 275
	H10	UNUSED						050-099, 275-299
	H10		W2000	AM13	24		SPARE	150-199
	H11	UNUSED						050-099, 275-299
	H11		W2000	AM12	24		SPARE	150-199
	H12	UNUSED						ALL
	H13	UNUSED						ALL
	H14		W2000	TM11	24		27-09-14	ALL
	H15		W2000	TM15	24		31-51-41	ALL
	J01	UNUSED						ALL
	J02	UNUSED						ALL
	J03		W2002	QN15	24		73-21-14	ALL
	J04		W2002	QN14	24		73-21-14	ALL
	J05		W2000	EM16	24		77-12-12	ALL
	J06		W2000	EM17	24		77-12-12	ALL
	J07		W2000	AM04	24		73-31-11	ALL
	J08		W2000	AM02	24		73-31-11	ALL
	J09		W2000	AM03	24		73-31-11	ALL
	J10		W2000	EM08	24		73-33-11	ALL
	J11		W2000	AM11	24		73-34-11	ALL
	J12	UNUSED						ALL
	J13		W2000	FN11	24		21-58-15	ALL
	J14		W2002	QM17	24		31-31-13	ALL
	J15	UNUSED						ALL
	K01		W1037	030	24		SPARE	ALL
	K02		W2000	NM16	24		29-11-12	ALL
	K03		W2002	LN04	24		29-32-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00800

Page 137

Jun 06/2008



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00883A		//		PLUG-PART A OF D00883 (continued)				ALL
	K03		W2000	TN15	24		34-45-13	150-152
	K04		W2000	LM02	24		29-32-11	ALL
	K05		W2002	PM18	24		29-11-32	ALL
	K06		W2002	DM16	24		32-61-14	ALL
	K07	UNUSED						050-099, 275-299
	K07		W2002	PM14	24		73-14-11	150-199
	K08		W2000	CM12	24		29-32-11	ALL
	K09		W1037	031	24		SPARE	ALL
	K10	UNUSED						ALL
	K11		W2002	LM06	24		29-11-12	ALL
	K12	UNUSED						ALL
	K13		W2000	NM03	24		27-81-11	ALL
	K14		W2000	FN16	24		21-26-11	ALL
	K15		W2006	021	22		31-41-11	ALL
	CAP	Y	W2002	HN05	24		SPARE	ALL
	REF	**	W2000	LM07	24		SPARE	050-099
	REF	**	W2000	TN08	24		34-61-16	050-099
	REF	**	W2002	CN16	24		SPARE	050-099
	REF	**	W2002	DM04	24		SPARE	050-099
	REF	**	W2002	DM12	24		SPARE	050-099
	REF	**	W2002	DM13	24		SPARE	050-099
	REF		W2002	AM20	24		99-99-99	050-099, 150-154, 275-276
	REF		W2002	BM01	24		99-99-99	050-099, 150-154, 275-276
	REF		W2002	BM20	24		99-99-99	050-099, 150-154, 275-276
	REF		W2002	CM20	24		99-99-99	050-099, 150-154, 275-276
	REF		W2002	DM20	24		99-99-99	050-099, 150-154, 275-276
	REF		W2002	DN20	24		99-99-99	050-099, 150-154, 275-276
	REF		W2002	EM20	24		99-99-99	050-099, 150-154, 275-276
	REF		W2002	FM01	24		99-99-99	050-099, 150-154, 275-276
	REF		W2002	FM20	24		99-99-99	050-099, 150-154, 275-276
	REF		W2002	FN01	24		99-99-99	050-099, 150-154, 275-276
	REF		W2002	FN20	24		99-99-99	050-099, 150-154, 275-276
	REF		W2002	HM01	24		99-99-99	050-099, 150-154, 275-276
	REF		W2002	HM20	24		99-99-99	050-099, 150-154, 275-276
	REF		W2002	HN01	24		99-99-99	050-099, 150-154, 275-276
	REF		W2002	HN20	24		99-99-99	050-099, 150-154, 275-276
	REF		W2002	LM20	24		99-99-99	050-099, 150-154, 275-276
	REF		W2002	LN20	24		99-99-99	050-099, 150-154, 275-276
	REF		W2002	MM01	24		99-99-99	050-099, 150-154, 275-276
	REF		W2002	MM20	24		99-99-99	050-099, 150-154, 275-276

HOOKUP LIST

D280T132

91-21-51

Section D00800

Page 138

Jun 06/2008



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00883A		//		PLUG-PART A OF D00883 (continued)				ALL
	REF		W2002	NM20	24		99-99-99	050-099, 150-154, 275-276
	REF		W2002	PM01	24		99-99-99	050-099, 150-154, 275-276
	REF		W2002	PM20	24		99-99-99	050-099, 150-154, 275-276
	REF		W2002	PN01	24		99-99-99	050-099, 150-154, 275-276
	REF		W2002	PN20	24		99-99-99	050-099, 150-154, 275-276
	REF		W2002	QM20	24		99-99-99	050-099, 150-154, 275-276
	REF		W2002	QN20	24		99-99-99	050-099, 150-154, 275-276
	REF		W2002	RM01	24		99-99-99	050-099, 150-154, 275-276
	REF		W2002	RM20	24		99-99-99	050-099, 150-154, 275-276
	REF	**	W2000	CM15	24		SPARE	050-099, 150-199
	REF	**	W2002	HM19	24		SPARE	050-099, 150-199
	REF	**	W2002	LN15	24		SPARE	050-099, 150-199
	REF		W2000	AM20	24		99-99-99	ALL
	REF		W2000	BM01	24		99-99-99	ALL
	REF		W2000	CM20	24		99-99-99	ALL
	REF		W2000	DM01	24		99-99-99	ALL
	REF		W2000	DM20	24		99-99-99	ALL
	REF		W2000	DN01	24		99-99-99	ALL
	REF		W2000	DN20	24		99-99-99	ALL
	REF		W2000	EM20	24		99-99-99	ALL
	REF		W2000	FM01	24		99-99-99	ALL
	REF		W2000	FM20	24		99-99-99	ALL
	REF		W2000	FN01	24		99-99-99	ALL
	REF		W2000	GM20	24		99-99-99	ALL
	REF		W2000	GN20	24		99-99-99	ALL
	REF		W2000	HM01	24		99-99-99	ALL
	REF		W2000	LM20	24		99-99-99	ALL
	REF		W2000	MM01	24		99-99-99	ALL
	REF		W2000	MM20	24		99-99-99	ALL
	REF		W2000	NM20	24		99-99-99	ALL
	REF		W2000	NN20	24		99-99-99	ALL
	REF		W2000	PM01	24		99-99-99	ALL
	REF		W2000	PM20	24		99-99-99	ALL
	REF		W2000	PN01	24		99-99-99	ALL
	REF		W2000	PN20	24		99-99-99	ALL
	REF		W2000	QM20	24		99-99-99	ALL
	REF		W2000	RM01	24		99-99-99	ALL
	REF		W2000	RM20	24		99-99-99	ALL
	REF		W2000	SM20	24		99-99-99	ALL
	REF		W2000	TM01	24		99-99-99	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00800

Page 139

Jun 06/2008



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00883A		//		PLUG-PART A OF D00883 (continued)				ALL
	REF		W2000	TM20	24		99-99-99	ALL
	REF		W2000	TN01	24		99-99-99	ALL
	REF		W2000	TN20	24		99-99-99	ALL
	REF		W2002	DM01	24		99-99-99	ALL
	REF		W2002	DN01	24		99-99-99	ALL
	REF	**	W2000	AM06	24		SPARE	ALL
	REF	**	W2000	AM08	24		SPARE	ALL
	REF	**	W2000	AM09	24		SPARE	ALL
	REF	**	W2000	AM14	24		SPARE	ALL
	REF	**	W2000	AM15	24		SPARE	ALL
	REF	**	W2000	AM16	24		SPARE	ALL
	REF	**	W2000	AM18	24		SPARE	ALL
	REF	**	W2000	AM19	24		SPARE	ALL
	REF	**	W2000	BM02	24		SPARE	ALL
	REF	**	W2000	BM07	24		SPARE	ALL
	REF	**	W2000	BM08	24		SPARE	ALL
	REF	**	W2000	BM09	24		SPARE	ALL
	REF	**	W2000	BM10	24		SPARE	ALL
	REF	**	W2000	BM11	24		SPARE	ALL
	REF	**	W2000	BM13	24		SPARE	ALL
	REF	**	W2000	BM14	24		SPARE	ALL
	REF	**	W2000	BM16	24		SPARE	ALL
	REF	**	W2000	CM08	24		SPARE	ALL
	REF	**	W2000	CM10	24		SPARE	ALL
	REF	**	W2000	CM16	24		SPARE	ALL
	REF	**	W2000	CM17	24		SPARE	ALL
	REF	**	W2000	CM18	24		SPARE	ALL
	REF	**	W2000	DM06	24		SPARE	ALL
	REF	**	W2000	DM07	24		SPARE	ALL
	REF	**	W2000	DM11	24		SPARE	ALL
	REF	**	W2000	DM13	24		SPARE	ALL
	REF	**	W2000	DM18	24		SPARE	ALL
	REF	**	W2000	DM19	24		SPARE	ALL
	REF	**	W2000	DN05	24		SPARE	ALL
	REF	**	W2000	DN06	24		SPARE	ALL
	REF	**	W2000	DN07	24		SPARE	ALL
	REF	**	W2000	DN08	24		SPARE	ALL
	REF	**	W2000	DN09	24		SPARE	ALL
	REF	**	W2000	DN10	24		SPARE	ALL
	REF	**	W2000	DN11	24		SPARE	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00800

Page 140

Jun 06/2008



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00883A		//		PLUG-PART A OF D00883 (continued)				ALL
	REF	**	W2000	DN12	24		SPARE	ALL
	REF	**	W2000	DN13	24		SPARE	ALL
	REF	**	W2000	DN15	24		SPARE	ALL
	REF	**	W2000	DN16	24		SPARE	ALL
	REF	**	W2000	EM03	24		SPARE	ALL
	REF	**	W2000	EM09	24		SPARE	ALL
	REF	**	W2000	EM10	24		SPARE	ALL
	REF	**	W2000	EM13	24		SPARE	ALL
	REF	**	W2000	EM14	24		SPARE	ALL
	REF	**	W2000	EM15	24		SPARE	ALL
	REF	**	W2000	EM18	24		SPARE	ALL
	REF	**	W2000	EM19	24		SPARE	ALL
	REF	**	W2000	FM02	24		SPARE	ALL
	REF	**	W2000	FM03	24		SPARE	ALL
	REF	**	W2000	FM04	24		SPARE	ALL
	REF	**	W2000	FM05	24		SPARE	ALL
	REF	**	W2000	FM06	24		SPARE	ALL
	REF	**	W2000	FM07	24		SPARE	ALL
	REF	**	W2000	FM08	24		SPARE	ALL
	REF	**	W2000	FM09	24		SPARE	ALL
	REF	**	W2000	FM10	24		SPARE	ALL
	REF	**	W2000	FM11	24		SPARE	ALL
	REF	**	W2000	FM15	24		SPARE	ALL
	REF	**	W2000	FM19	24		SPARE	ALL
	REF	**	W2000	FN02	24		SPARE	ALL
	REF	**	W2000	FN03	24		SPARE	ALL
	REF	**	W2000	FN04	24		SPARE	ALL
	REF	**	W2000	FN05	24		SPARE	ALL
	REF	**	W2000	FN06	24		SPARE	ALL
	REF	**	W2000	FN07	24		SPARE	ALL
	REF	**	W2000	GM10	24		SPARE	ALL
	REF	**	W2000	GM17	24		SPARE	ALL
	REF	**	W2000	GM18	24		SPARE	ALL
	REF	**	W2000	GN04	24		SPARE	ALL
	REF	**	W2000	GN06	24		SPARE	ALL
	REF	**	W2000	GN07	24		SPARE	ALL
	REF	**	W2000	GN11	24		SPARE	ALL
	REF	**	W2000	GN12	24		SPARE	ALL
	REF	**	W2000	GN16	24		SPARE	ALL
	REF	**	W2000	HM11	24		SPARE	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00800

Page 141

Jun 06/2008



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00883A		//		PLUG-PART A OF D00883 (continued)				ALL
REF	**		W2000	HM13	24		SPARE	ALL
REF	**		W2000	HM14	24		SPARE	ALL
REF	**		W2000	HM15	24		SPARE	ALL
REF	**		W2000	HM16	24		SPARE	ALL
REF	**		W2000	HM17	24		SPARE	ALL
REF	**		W2000	HM18	24		SPARE	ALL
REF	**		W2000	HM19	24		SPARE	ALL
REF	**		W2000	LM04	24		SPARE	ALL
REF	**		W2000	LM17	24		SPARE	ALL
REF	**		W2000	MM14	24		SPARE	ALL
REF	**		W2000	MM16	24		SPARE	ALL
REF	**		W2000	MM17	24		SPARE	ALL
REF	**		W2000	MM18	24		SPARE	ALL
REF	**		W2000	MM19	24		SPARE	ALL
REF	**		W2000	NM08	24		SPARE	ALL
REF	**		W2000	NM13	24		SPARE	ALL
REF	**		W2000	NN02	24		SPARE	ALL
REF	**		W2000	NN03	24		SPARE	ALL
REF	**		W2000	NN08	24		SPARE	ALL
REF	**		W2000	NN09	24		SPARE	ALL
REF	**		W2000	NN17	24		SPARE	ALL
REF	**		W2000	PM12	24		SPARE	ALL
REF	**		W2000	PM13	24		SPARE	ALL
REF	**		W2000	PN17	24		SPARE	ALL
REF	**		W2000	PN18	24		SPARE	ALL
REF	**		W2000	PN19	24		SPARE	ALL
REF	**		W2000	QM08	24		SPARE	ALL
REF	**		W2000	QM19	24		SPARE	ALL
REF	**		W2000	QN06	24		SPARE	ALL
REF	**		W2000	QN07	24		SPARE	ALL
REF	**		W2000	QN08	24		SPARE	ALL
REF	**		W2000	QN09	24		SPARE	ALL
REF	**		W2000	QN10	24		SPARE	ALL
REF	**		W2000	QN11	24		SPARE	ALL
REF	**		W2000	QN12	24		SPARE	ALL
REF	**		W2000	QN13	24		SPARE	ALL
REF	**		W2000	QN14	24		SPARE	ALL
REF	**		W2000	QN15	24		SPARE	ALL
REF	**		W2000	QN16	24		SPARE	ALL
REF	**		W2000	QN17	24		SPARE	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00800

Page 142

Jun 06/2008



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00883A		//		PLUG-PART A OF D00883 (continued)				ALL
	REF	**	W2000	QN18	24		SPARE	ALL
	REF	**	W2000	QN19	24		SPARE	ALL
	REF	**	W2000	QN20	24		99-99-99	ALL
	REF	**	W2000	RM06	24		SPARE	ALL
	REF	**	W2000	RM07	24		SPARE	ALL
	REF	**	W2000	RM12	24		SPARE	ALL
	REF	**	W2000	RM13	24		SPARE	ALL
	REF	**	W2000	RM14	24		SPARE	ALL
	REF	**	W2000	RM15	24		SPARE	ALL
	REF	**	W2000	RM16	24		SPARE	ALL
	REF	**	W2000	RM17	24		SPARE	ALL
	REF	**	W2000	RM18	24		SPARE	ALL
	REF	**	W2000	RM19	24		SPARE	ALL
	REF	**	W2000	SM03	24		SPARE	ALL
	REF	**	W2000	SM04	24		SPARE	ALL
	REF	**	W2000	SM13	24		SPARE	ALL
	REF	**	W2000	SM14	24		SPARE	ALL
	REF	**	W2000	SM15	24		SPARE	ALL
	REF	**	W2000	SM16	24		SPARE	ALL
	REF	**	W2000	TM10	24		SPARE	ALL
	REF	**	W2000	TM19	24		SPARE	ALL
	REF	**	W2000	TN16	24		SPARE	ALL
	REF	**	W2000	TN17	24		SPARE	ALL
	REF	**	W2000	TN18	24		SPARE	ALL
	REF	**	W2000	TN19	24		SPARE	ALL
	REF	**	W2002	AM02	24		SPARE	ALL
	REF	**	W2002	AM03	24		SPARE	ALL
	REF	**	W2002	AM04	24		SPARE	ALL
	REF	**	W2002	AM05	24		SPARE	ALL
	REF	**	W2002	AM06	24		SPARE	ALL
	REF	**	W2002	AM10	24		SPARE	ALL
	REF	**	W2002	AM11	24		SPARE	ALL
	REF	**	W2002	AM12	24		SPARE	ALL
	REF	**	W2002	AM13	24		SPARE	ALL
	REF	**	W2002	CM02	24		SPARE	ALL
	REF	**	W2002	CM03	24		SPARE	ALL
	REF	**	W2002	CM04	24		SPARE	ALL
	REF	**	W2002	CM05	24		SPARE	ALL
	REF	**	W2002	CM06	24		SPARE	ALL
	REF	**	W2002	CM07	24		SPARE	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00800

Page 143

Jun 06/2008



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00883A		//		PLUG-PART A OF D00883 (continued)				ALL
REF	**		W2002	CM08	24		SPARE	ALL
REF	**		W2002	CM11	24		SPARE	ALL
REF	**		W2002	CN02	24		SPARE	ALL
REF	**		W2002	CN03	24		SPARE	ALL
REF	**		W2002	CN05	24		SPARE	ALL
REF	**		W2002	CN06	24		SPARE	ALL
REF	**		W2002	DM03	24		SPARE	ALL
REF	**		W2002	DM19	24		SPARE	ALL
REF	**		W2002	DN17	24		SPARE	ALL
REF	**		W2002	DN18	24		SPARE	ALL
REF	**		W2002	DN19	24		SPARE	ALL
REF	**		W2002	EM12	24		SPARE	ALL
REF	**		W2002	EM14	24		SPARE	ALL
REF	**		W2002	FM03	24		SPARE	ALL
REF	**		W2002	FM07	24		SPARE	ALL
REF	**		W2002	FM16	24		SPARE	ALL
REF	**		W2002	FM17	24		SPARE	ALL
REF	**		W2002	FN08	24		SPARE	ALL
REF	**		W2002	FN10	24		SPARE	ALL
REF	**		W2002	FN11	24		SPARE	ALL
REF	**		W2002	FN12	24		SPARE	ALL
REF	**		W2002	FN13	24		SPARE	ALL
REF	**		W2002	FN14	24		SPARE	ALL
REF	**		W2002	FN18	24		SPARE	ALL
REF	**		W2002	FN19	24		SPARE	ALL
REF	**		W2002	HM03	24		SPARE	ALL
REF	**		W2002	HM08	24		SPARE	ALL
REF	**		W2002	HM09	24		SPARE	ALL
REF	**		W2002	HM12	24		SPARE	ALL
REF	**		W2002	HM16	24		SPARE	ALL
REF	**		W2002	HM17	24		SPARE	ALL
REF	**		W2002	HM18	24		SPARE	ALL
REF	**		W2002	HN06	24		SPARE	ALL
REF	**		W2002	HN13	24		SPARE	ALL
REF	**		W2002	HN15	24		SPARE	ALL
REF	**		W2002	HN16	24		SPARE	ALL
REF	**		W2002	HN17	24		SPARE	ALL
REF	**		W2002	LM13	24		SPARE	ALL
REF	**		W2002	LM14	24		SPARE	ALL
REF	**		W2002	LN08	24		SPARE	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00800

Page 144

Jun 06/2008



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00883A		//		PLUG-PART A OF D00883 (continued)				ALL
	REF	**	W2002	LN10	24		SPARE	ALL
	REF	**	W2002	LN11	24		SPARE	ALL
	REF	**	W2002	LN12	24		SPARE	ALL
	REF	**	W2002	LN13	24		SPARE	ALL
	REF	**	W2002	LN17	24		SPARE	ALL
	REF	**	W2002	LN18	24		SPARE	ALL
	REF	**	W2002	LN19	24		SPARE	ALL
	REF	**	W2002	MM05	24		SPARE	ALL
	REF	**	W2002	MM06	24		SPARE	ALL
	REF	**	W2002	MM07	24		SPARE	ALL
	REF	**	W2002	MM08	24		SPARE	ALL
	REF	**	W2002	MM10	24		SPARE	ALL
	REF	**	W2002	MM11	24		SPARE	ALL
	REF	**	W2002	MM12	24		SPARE	ALL
	REF	**	W2002	MM13	24		SPARE	ALL
	REF	**	W2002	MM14	24		SPARE	ALL
	REF	**	W2002	MM15	24		SPARE	ALL
	REF	**	W2002	MM16	24		SPARE	ALL
	REF	**	W2002	MM17	24		SPARE	ALL
	REF	**	W2002	MM18	24		SPARE	ALL
	REF	**	W2002	MM19	24		SPARE	ALL
	REF	**	W2002	NM10	24		SPARE	ALL
	REF	**	W2002	NM11	24		SPARE	ALL
	REF	**	W2002	NM16	24		SPARE	ALL
	REF	**	W2002	NM17	24		SPARE	ALL
	REF	**	W2002	NM18	24		SPARE	ALL
	REF	**	W2002	NM19	24		SPARE	ALL
	REF	**	W2002	PM02	24		SPARE	ALL
	REF	**	W2002	PM12	24		SPARE	ALL
	REF	**	W2002	PM13	24		SPARE	ALL
	REF	**	W2002	PM17	24		SPARE	ALL
	REF	**	W2002	PM19	24		SPARE	ALL
	REF	**	W2002	PN18	24		SPARE	ALL
	REF	**	W2002	PN19	24		SPARE	ALL
	REF	**	W2002	QM09	24		SPARE	ALL
	REF	**	W2002	QN05	24		SPARE	ALL
	REF	**	W2002	QN19	24		SPARE	ALL
	REF	**	W2002	RM03	24		SPARE	ALL
	REF	**	W2002	RM11	24		SPARE	ALL
	REF	**	W2002	RM12	24		SPARE	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00800

Page 145

Jun 06/2008



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00883A		//		PLUG-PART A OF D00883 (continued)				ALL
REF	**		W2002	RM17	24		SPARE	ALL
REF	**		W2002	RM18	24		SPARE	ALL
REF	**		W2002	RM19	24		SPARE	ALL
REF	**		W2002	CN20	24		34-46-12	050-099, 151
REF	**		W2000	BM19	24		SPARE	050-099, 155-199, 276-299
REF	**		W2000	GN09	24		SPARE	050-099, 162-199, 275-299
REF	**		W2000	AM12	24		SPARE	050-099, 275-299
REF	**		W2000	AM13	24		SPARE	050-099, 275-299
REF	**		W2000	CM09	24		SPARE	050-099, 275-299
REF	**		W2000	DM10	24		SPARE	050-099, 275-299
REF	**		W2000	LM03	24		SPARE	050-099, 275-299
REF	**		W2000	MM08	24		SPARE	050-099, 275-299
REF	**		W2000	MM09	24		SPARE	050-099, 275-299
REF	**		W2000	NN04	24		SPARE	050-099, 275-299
REF	**		W2000	QM10	24		SPARE	050-099, 275-299
REF	**		W2002	EM19	24		SPARE	050-099, 275-299
REF	**		W2002	HM06	24		SPARE	050-099, 275-299
REF	**		W2002	LM08	24		SPARE	050-099, 275-299
REF	**		W2002	LM09	24		SPARE	050-099, 275-299
REF	**		W2002	LM10	24		SPARE	050-099, 275-299
REF	**		W2002	LM19	24		SPARE	050-099, 275-299
REF	**		W2002	PM14	24		SPARE	050-099, 275-299
REF	**		W2002	PM15	24		SPARE	050-099, 275-299
REF	**		W2000	FN17	24		SPARE	051-099, 155-199, 277-299
REF	**		W2000	BM15	24		SPARE	150-154, 275
REF	**		W2000	CM19	24		SPARE	150-154, 275
REF	**		W2000	LM15	24		SPARE	150-154, 275
REF	**		W2000	LM16	24		SPARE	150-154, 275
REF	**		W2002	FM19	24		SPARE	150-154, 275
REF	**		W2002	FN17	24		SPARE	150-154, 275
REF	**		W2000	DM15	24		SPARE	150-199, 275-299
REF	**		W2000	LM13	24		SPARE	150-199, 275-299
REF	**		W2000	MM15	24		SPARE	150-199, 275-299
REF	**		W2002	HN14	24		SPARE	150-199, 277-299
REF	**		W2000	BM20	24		99-99-99	155-199, 277-299
REF	**		W2000	FN20	24		99-99-99	155-199, 277-299
REF	**		W2000	HM20	24		99-99-99	155-199, 277-299
REF	**		W2002	AM20	24		SPARE	155-199, 277-299
REF	**		W2002	BM01	24		SPARE	155-199, 277-299
REF	**		W2002	BM20	24		SPARE	155-199, 277-299

HOOKUP LIST

D280T132

91-21-51

Section D00800

Page 146

Jun 06/2008



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00883A		//		PLUG-PART A OF D00883 (continued)				ALL
REF			W2002	CM20	24		SPARE	155-199, 277-299
REF			W2002	DM20	24		SPARE	155-199, 277-299
REF			W2002	DN20	24		SPARE	155-199, 277-299
REF			W2002	EM20	24		SPARE	155-199, 277-299
REF			W2002	FM01	24		SPARE	155-199, 277-299
REF			W2002	FM20	24		SPARE	155-199, 277-299
REF			W2002	FN01	24		SPARE	155-199, 277-299
REF			W2002	FN20	24		SPARE	155-199, 277-299
REF			W2002	HM01	24		SPARE	155-199, 277-299
REF			W2002	HM20	24		SPARE	155-199, 277-299
REF			W2002	HN01	24		SPARE	155-199, 277-299
REF			W2002	HN20	24		SPARE	155-199, 277-299
REF			W2002	LM20	24		SPARE	155-199, 277-299
REF			W2002	LN20	24		SPARE	155-199, 277-299
REF			W2002	MM01	24		SPARE	155-199, 277-299
REF			W2002	MM20	24		SPARE	155-199, 277-299
REF			W2002	NM20	24		SPARE	155-199, 277-299
REF			W2002	PM01	24		SPARE	155-199, 277-299
REF			W2002	PM20	24		SPARE	155-199, 277-299
REF			W2002	PN01	24		SPARE	155-199, 277-299
REF			W2002	PN20	24		SPARE	155-199, 277-299
REF			W2002	QM20	24		SPARE	155-199, 277-299
REF			W2002	QN20	24		SPARE	155-199, 277-299
REF			W2002	RM01	24		SPARE	155-199, 277-299
REF			W2002	RM20	24		SPARE	155-199, 277-299
REF	**		W2000	GM04	24		SPARE	155-157, 166-199, 277-299
REF	**		W2000	GM07	24		SPARE	155-157, 166-199, 277-299
REF	**		W2002	FM04	24		SPARE	155-157, 166-199, 277-299
REF	**		W2002	FM08	24		SPARE	155-157, 166-199, 277-299
REF	**		W2000	TN15	24		SPARE	275-276
REF	**		W2000	GN08	24		SPARE	275-299
REF	**		W2000	LM12	24		SPARE	275-299
REF	**		W2000	NM07	24		SPARE	275-299
REF	**		W2000	QN02	24		SPARE	275-299
REF	**		W2000	QN03	24		SPARE	275-299
REF	**		W2002	FM09	24		SPARE	275-299
REF	**		W2002	FM10	24		SPARE	275-299
D00883B		//		PLUG-PART B OF D00883				ALL
	A01		W1035	220WN	26		31-41-22	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00800

Page 147

Jun 06/2008



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00883B		//		PLUG-PART B OF D00883 (continued)				ALL
	A02		W1035	221WN	26		31-41-22	ALL
	A03		W1037	220WN	26		31-41-24	ALL
	A04		W1037	221W	26		31-41-24	ALL
	A05	UNUSED						ALL
	A06		W2002	DN12	24		52-71-14	ALL
	A07		W2002	DN13	24		52-71-13	ALL
	A08	UNUSED						ALL
	A09		W1037	227R	24		31-31-13	ALL
	A10		W2002	DN05	24		52-71-11	ALL
	A11	UNUSED						ALL
	A12		W2002	DN10	24		52-71-12	ALL
	A13		W2002	HN09	24		49-61-11	ALL
	A14		W2000	GN02	24		73-21-14	ALL
	A15	UNUSED						ALL
	B01		W1035	220W	26		31-41-22	ALL
	B02		W1035	221W	26		31-41-22	ALL
	B03		W1037	220W	26		31-41-24	ALL
	B04		W1037	221WN	26		31-41-24	ALL
	B05		W2002	EM18	24		24-11-11	ALL
	B06		W1037	026	24		SPARE	ALL
	B07		W2002	DN11	24		52-71-14	ALL
	B08	UNUSED						ALL
	B09		W1037	227B	24		31-31-13	ALL
	B10		W2002	DN08	24		52-71-12	ALL
	B11	UNUSED						ALL
	B12		W2002	DN09	24		52-71-12	050-099
	B12	UNUSED						150-199, 275-299
	B13		W2002	FM10	24		30-81-11	050-099, 150-199
	B13	UNUSED						275-299
	B14		W2000	GN03	24		73-21-14	ALL
	B15	UNUSED						ALL
	C01	UNUSED						ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05		W2002	DN04	24		52-71-13	ALL
	C06		W1037	023	24		SPARE	ALL
	C07	UNUSED						ALL
	C08		W2000	TM14	24		31-51-11	ALL
	C09		W1037	022	24		31-41-15	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00800

Page 148

Jun 06/2008



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00883B		//		PLUG-PART B OF D00883 (continued)				ALL
	C10		W2000	TN10	24		34-61-24	ALL
	C11		W2000	TN11	24		34-61-24	ALL
	C12		W2006	205R	24		31-41-34	ALL
	C13		W2006	205B	24		31-41-34	ALL
	C14		W2002	AM19	24		31-51-43	ALL
	C15		W2000	TM02	24		34-12-22	ALL
	D01		W2002	QM11	24		77-12-11	ALL
	D02		W2002	QM12	24		77-12-11	ALL
	D03		W1037	024	24		SPARE	ALL
	D04		W1035	064	24		31-41-17	ALL
	D05		W2002	DN07	24		52-71-12	050-099
	D05	UNUSED						150-199, 275-299
	D06		W2002	PN03	24		24-34-11	ALL
	D07		W2002	PN02	24		24-34-11	ALL
	D08		W2002	CM15	24		22-34-11	ALL
	D09		W2002	PN05	24		24-34-11	ALL
	D10		W2002	PN04	24		24-34-11	ALL
	D11		W1037	025	24		SPARE	ALL
	D12		W2002	PN07	24		24-34-11	ALL
	D13		W2002	PN06	24		24-34-11	ALL
	D14		W2002	FN09	24		76-11-11	ALL
	D15		W2002	QN07	24		76-11-11	ALL
	E01		W2002	PN09	24		24-34-11	ALL
	E02		W2002	BM14	24		32-46-11	ALL
	E03		W2002	BM13	24		32-46-11	ALL
	E04		W2002	QM07	24		26-11-11	ALL
	E05		W2002	QM08	24		26-11-12	ALL
	E06		W2002	NM03	24		26-11-12	ALL
	E07		W2000	QM17	24		28-42-12	ALL
	E08		W2002	FM19	24		28-31-12	050-099, 155-199, 276-299
	E08	UNUSED						150-154, 275
	E09		W2002	NM04	24		26-11-21	ALL
	E10		W2002	EM02	24		21-65-11	ALL
	E11		W2002	EM08	24		21-65-11	ALL
	E12		W2002	DN06	24		52-71-11	ALL
	E13		W1037	027	24		SPARE	ALL
	E14		W2002	CN12	24		34-16-11	ALL
	E15		W2000	SM09	24		32-61-14	ALL
	F01		W2002	DM07	24		32-61-14	ALL
	F02		W1037	017	24		31-41-15	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00800

Page 149

Jun 06/2008



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00883B		//		PLUG-PART B OF D00883 (continued)				ALL
	F03		W2000	MM13	24		78-36-11	ALL
	F04		W2002	FM13	24		26-18-11	ALL
	F05	UNUSED						050-099, 275-299
	F05		W2000	CM09	24		73-14-11	150-199
	F06		W1037	019	24		31-41-15	ALL
	F07		W1037	016	24		31-41-15	ALL
	F08		W2000	FN18	24		21-51-11	ALL
	F09		W2002	DM06	24		32-61-14	ALL
	F10		W1037	018	24		31-41-15	ALL
	F11		W1037	015	24		31-41-15	ALL
	F12	UNUSED						ALL
	F13		W2000	AM17	24		76-11-11	ALL
	F14		W2002	DM11	24		32-61-14	ALL
	F15		W2002	QN10	24		32-42-11	ALL
	G01		W2000	AM10	24		79-32-11	ALL
	G02	UNUSED						ALL
	G03		W2000	MM12	24		78-36-11	ALL
	G04	UNUSED						050-099, 275-299
	G04		W2002	LM08	24		SPARE	150-199
	G05		W2002	NM13	24		26-16-11	ALL
	G06	UNUSED						ALL
	G07		W2002	LM11	24		36-11-21	ALL
	G08		W2002	PN12	24		21-58-16	ALL
	G09		W2000	SM06	24		32-61-14	ALL
	G10	UNUSED						050-099, 275-299
	G10		W2000	QM10	24		SPARE	150-199
	G11		W2002	EM11	24		36-11-11	ALL
	G12	UNUSED						ALL
	G13		W2000	CM11	24		36-11-31	ALL
	G13		W2002	CN20	24		34-46-12	150, 152-199, 275-299
	G14		W2002	CN11	24		31-51-42	ALL
	G15		W2000	SM07	24		32-61-14	ALL
	H01		W2000	NN14	24		32-09-12	ALL
	H02		W2000	AM05	24		79-32-11	ALL
	H03		W2000	GM12	24		29-31-11	ALL
	H04		W2000	BM12	24		29-31-11	ALL
	H05		W2000	GN05	24		75-23-11	ALL
	H06	UNUSED						050-099, 275-299
	H06		W2000	DM10	24		SPARE	150-199
	H07		W2002	FM02	24		78-36-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00800

Page 150

Jun 06/2008



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00883B		//		PLUG-PART B OF D00883 (continued)				ALL
	H08		W2000	QN03	24		30-81-11	050-099, 150-199
	H08	UNUSED						275-299
	H09		W2000	DN02	24		36-11-61	ALL
	H10	UNUSED						ALL
	H11		W2002	EM06	24		80-11-11	ALL
	H12		W2000	GN08	24		30-21-11	050-099, 150-199
	H12		W2000	CM15	24		30-21-11	275-299
	H13	UNUSED						ALL
	H14		W2002	LN02	24		24-51-43	ALL
	H15		W2002	EM16	24		74-31-11	ALL
	J01		W2002	CN19	24		34-46-12	ALL
	J02		W2002	CM09	24		22-14-31	ALL
	J03		W2002	QN06	24		76-11-11	ALL
	J04		W2000	NM17	24		29-32-11	ALL
	J05		W2000	NM18	24		29-32-11	ALL
	J06	UNUSED						ALL
	J07	UNUSED						ALL
	J08		W2000	GN10	24		79-31-11	ALL
	J09	UNUSED						ALL
	J10		W2000	GM15	24		78-36-11	ALL
	J11		W2002	AM17	24		31-41-16	ALL
	J12		W2000	FN14	24		36-11-62	ALL
	J13		W2000	NN13	24		32-09-12	ALL
	J14		W2002	EM17	24		24-51-42	ALL
	J15		W1035	012	24		31-41-16	ALL
	K01		W2000	TN03	24		34-61-25	ALL
	K02		W2002	PM16	24		74-31-11	ALL
	K03	UNUSED						ALL
	K04	UNUSED						ALL
	K05		W2002	AM15	24		34-12-62	ALL
	K06		W1037	033	24		SPARE	ALL
	K07		W2002	LN03	24		29-32-11	ALL
	K08		W2000	CM13	24		29-32-11	ALL
	K09		W1037	032	24		SPARE	ALL
	K10	UNUSED						ALL
	K11	UNUSED						ALL
	K12	UNUSED						ALL
	K13		W2000	GM05	24		27-13-11	ALL
	K14		W2000	LM05	24		SPARE	050-099, 150-199
	K14	UNUSED						275-299

HOOKUP LIST

D280T132

91-21-51

Section D00800

Page 151

Jun 06/2008



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00883B		//		PLUG-PART B OF D00883 (continued)				ALL
	K15		W2006	022	22		31-41-11	ALL
D00883C		//		PLUG-PART C OF D00883				ALL
	1		W2006	001	22		31-41-11	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W2006	004	20		31-41-11	ALL
	5		W2006	005	20		31-41-11	ALL
	6		W2006	006	20		31-41-11	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	= C12	UNUSED						ALL
	= C13	UNUSED						ALL
D00883D		//		PLUG-PART D OF D00883				ALL
	A01		W2000	RM02	24		24-11-21	ALL
	A02		W2000	DM15	24		SPARE	050-099
	A02	UNUSED						150-199, 275-299
	A03		W2000	DM17	24		21-58-11	ALL
	A04		W2000	DN14	24		21-58-11	ALL
	A05	UNUSED						ALL
	A06		W2002	RM02	24		22-21-11	ALL
	A07	UNUSED						ALL
	A08		W2000	QM18	24		27-51-11	ALL
	A09	UNUSED						050-099
	A09		W2002	DM13	24		52-71-12	150-199, 275-299
	A10		W2000	HM02	24		24-11-11	ALL
	A11	UNUSED						ALL
	A12		W2000	RM08	24		24-27-21	ALL
	A13		W2002	LM03	24		21-61-51	ALL
	A14		W2000	NM04	24		21-61-11	ALL
	A15		W2002	CN10	24		31-51-41	ALL
	B01		W2000	HM08	24		24-27-11	ALL
	B02		W2000	RM09	24		24-27-21	ALL
	B03		W2000	HM09	24		24-27-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00800

Page 152

Jun 06/2008



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00883D		//		PLUG-PART D OF D00883 (continued)				ALL
	B04		W2002	PM11	24		24-33-11	ALL
	B05		W2000	QM07	24		30-32-11	ALL
	B06		W2000	BM06	24		29-33-11	ALL
	B07		W2002	DM10	24		32-61-14	ALL
	B08		W2000	PM14	24		21-61-51	ALL
	B09		W2000	QM05	24		30-31-13	ALL
	B10		W2002	NM15	24		26-17-11	ALL
	B11		W2002	CM10	24		77-35-11	ALL
	B12		W2002	QN13	24		32-42-11	ALL
	B13		W2000	NM09	24		21-61-41	ALL
	B14		W2002	DN16	24		27-88-11	ALL
	B15		W2002	BM04	24		27-51-51	ALL
	C01		W2000	RM10	24		24-27-21	ALL
	C02		W2002	FM15	24		26-18-31	ALL
	C03		W2002	RM06	24		27-11-12	ALL
	C04		W2000	GN19	24		27-31-11	ALL
	C05	UNUSED						050-099
	C05		W2002	DN09	24		52-71-12	150-199, 275-299
	C06		W2000	HM10	24		24-27-11	ALL
	C07		W2002	HM02	24		24-27-41	ALL
	C08		W2002	LM04	24		24-51-23	ALL
	C09		W2002	HN10	24		26-22-21	050-099, 150-199
	C09	UNUSED						275-299
	C10	UNUSED						050-099, 275-299
	C10		W2002	LM10	24		SPARE	150-199
	C11		W2002	RM09	24		27-61-12	ALL
	C12		W2002	DM05	24		32-61-14	ALL
	C13		W2002	RM10	24		27-21-12	ALL
	C14		W2000	QN05	24		28-22-31	ALL
	C15	UNUSED						ALL
	D01		W2002	HN11	24		26-23-11	ALL
	D02	UNUSED						ALL
	D03	UNUSED						ALL
	D04		W2002	EM10	24		21-65-11	ALL
	D05		W2002	EM09	24		21-65-11	ALL
	D06		W2002	BM15	24		32-46-11	ALL
	D07		W2002	BM16	24		32-46-11	ALL
	D08		W1037	029	24		SPARE	ALL
	D09		W2002	LM15	24		21-65-11	ALL
	D10		W2002	LM16	24		21-65-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00800

Page 153

Jun 06/2008



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00883D		//		PLUG-PART D OF D00883 (continued)				ALL
	D11		W2002	LM17	24		21-65-11	ALL
	D12		W2002	LM18	24		21-65-11	ALL
	D13		W2000	PN09	24		21-52-31	ALL
	D14		W2000	PN10	24		21-52-31	ALL
	D15		W2002	BM17	24		32-46-11	ALL
	E01		W2000	NN18	24		21-44-11	ALL
	E02		W2000	TM17	24		34-21-21	ALL
	E03		W1037	014	24		31-41-15	ALL
	E04		W1037	011	24		31-41-15	ALL
	E05		W2000	TM18	24		34-21-21	ALL
	E06		W1037	012	24		31-41-15	ALL
	E07		W2002	DM08	24		32-61-14	ALL
	E08	UNUSED						ALL
	E09		W2000	TM16	24		34-21-21	ALL
	E10		W1037	010	24		31-41-15	ALL
	E11		W1037	013	24		31-41-15	ALL
	E12	UNUSED						ALL
	E13	UNUSED						050-099, 275-299
	E13		W2000	NN04	24		SPARE	150-199
	E14		W2000	NM15	24		29-11-12	ALL
	E15		W2000	GM09	24		21-58-16	ALL
	F01		W2002	QN18	24		26-16-11	ALL
	F02	UNUSED						050-099, 150-199
	F02		W2002	HN10	24		26-22-21	275-299
	F03		W2002	FM06	24		27-51-61	ALL
	F04		W2002	QM06	24		26-15-11	ALL
	F05	UNUSED						ALL
	F06		W2002	DM02	24		32-61-14	ALL
	F07		W2002	QN16	24		26-16-11	ALL
	F08		W2002	DM18	24		32-61-14	ALL
	F09		W2002	DM09	24		32-61-14	ALL
	F10	UNUSED						050-099, 275-299
	F10		W2002	PM15	24		73-14-11	150-199
	F11		W2000	PN14	24		21-51-21	ALL
	F12		W2002	DM15	24		78-36-21	ALL
	F13	UNUSED						ALL
	F14		W2002	DM14	24		78-36-21	ALL
	F15		W2000	MM10	24		79-32-11	ALL
	G01	UNUSED						ALL
	G02		W2002	QN02	24		26-21-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00800

Page 154

Jun 06/2008



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00883D		//		PLUG-PART D OF D00883 (continued)				ALL
	G03		W2002	NM07	24		26-11-21	ALL
	G04		W2002	FM14	24		26-18-21	ALL
	G05		W2002	NM08	24		26-11-22	ALL
	G06		W2002	QM02	24		26-11-11	ALL
	G07		W2002	MM09	24		22-14-31	ALL
	G08		W2002	FM05	24		28-42-12	ALL
	G09		W2002	QM05	24		26-11-22	ALL
	G10	UNUSED						ALL
	G11		W2002	QN08	24		26-16-21	ALL
	G12		W2000	MM11	24		73-34-11	ALL
	G13		W2002	DM17	24		32-61-14	ALL
	G14		W2000	LM08	24		73-33-11	ALL
	G15		W2002	BM03	24		27-51-41	ALL
	H01		W2000	MM04	24		73-31-11	ALL
	H02		W2002	FM18	24		26-18-12	ALL
	H03		W2002	FM11	24		28-42-11	ALL
	H04	UNUSED						ALL
	H05		W2000	FN19	24		26-18-22	ALL
	H06		W2002	LM07	24		28-42-12	ALL
	H07		W2000	QM02	24		78-36-21	ALL
	H08		W2000	GM11	24		28-42-11	ALL
	H09	UNUSED						050-099, 275-299
	H09		W2000	MM08	24		SPARE	150-199
	H10	UNUSED						050-099, 275-299
	H10		W2000	MM09	24		SPARE	150-199
	H11	UNUSED						ALL
	H12	UNUSED						ALL
	H13		W2000	PM16	24		36-21-11	ALL
	H14		W2000	LM10	24		36-22-21	ALL
	H15		W2000	LM09	24		36-22-21	ALL
	J01		W2000	MM02	24		73-31-11	ALL
	J02	UNUSED						050-099, 275-299
	J02		W2000	LM03	24		SPARE	150-199
	J03		W2002	FM12	24		78-36-21	ALL
	J04		W2000	LM19	24		73-21-14	ALL
	J05		W2000	LM18	24		73-21-14	ALL
	J06	UNUSED						ALL
	J07	UNUSED						ALL
	J08		W2000	SM19	24		77-12-12	ALL
	J09		W2000	SM18	24		77-12-12	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00800

Page 155

Jun 06/2008



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00883D		//		PLUG-PART D OF D00883 (continued)				ALL
	J10		W2002	QM18	24		29-11-32	ALL
	J11		W2002	LN07	24		29-11-31	ALL
	J12		W1037	035	24		SPARE	ALL
	J13		W2000	NM07	24		30-21-11	050-099, 150-199
	J13		W2002	LN15	24		30-21-11	275-299
	J14	UNUSED						ALL
	J15	UNUSED						ALL
	K01		W2000	MM03	24		73-31-11	ALL
	K02		W2002	PM06	24		80-11-21	ALL
	K03		W2000	NM19	24		79-35-11	ALL
	K04		W2000	LM16	24		28-42-13	050-099, 155-199, 276-299
	K04	UNUSED						150-154, 275
	K05		W2000	LM15	24		28-31-11	050-099, 155-199, 276-299
	K05	UNUSED						150-154, 275
	K06		W2000	TN14	24		31-41-16	ALL
	K07		W1037	085	24		SPARE	050-099, 150-199
	K07	UNUSED						275-299
	K08		W2000	NM14	24		27-23-11	ALL
	K09		W1037	084	24		SPARE	ALL
	K10		W2000	LM11	24		79-33-11	ALL
	K11	UNUSED						ALL
	K12		W1037	034	24		SPARE	ALL
	K13		W2002	FN15	24		29-11-22	ALL
	K14		W2000	NM12	24		29-31-11	ALL
	K15		W2006	023	22		31-41-11	ALL
	REF	**	W2002	HN14	24		SPARE	050-099, 275-276
D00883E		//		PLUG-PART E OF D00883				ALL
	A01		W2002	CN09	24		31-51-41	ALL
	A02		W2002	QM10	24		26-11-11	ALL
	A03		W2000	BM05	24		29-33-11	ALL
	A04		W2000	QM09	24		30-33-11	ALL
	A05		W2002	LN14	24		30-21-11	ALL
	A06		W2002	FN04	24		30-31-21	ALL
	A07		W2002	FN07	24		30-32-21	ALL
	A08		W2000	EM07	24		77-35-11	ALL
	A09		W2002	AM14	24		22-14-31	ALL
	A10		W2000	TM13	24		27-09-14	ALL
	A11		W2002	LM02	24		33-51-11	ALL
	A12		W2002	PN11	24		24-34-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00800

Page 156

Jun 06/2008



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00883E		//		PLUG-PART E OF D00883 (continued)				ALL
	A13		W2002	AM09	24		34-53-11	ALL
	A14		W2000	NN06	24		77-12-11	ALL
	A15	UNUSED						ALL
	B01		W2002	DN15	24		27-88-11	ALL
	B02		W2002	BM08	24		77-31-11	ALL
	B03		W2002	BM07	24		77-31-11	ALL
	B04		W2002	CM16	24		22-41-13	ALL
	B05		W2002	CM17	24		22-41-13	ALL
	B06		W2002	CM12	24		22-32-12	ALL
	B07		W2002	CM13	24		22-32-12	ALL
	B08		W2000	TN04	24		34-61-25	ALL
	B09		W2000	TN05	24		34-61-25	ALL
	B10		W2000	TM06	24		31-41-33	ALL
	B11		W2000	TM07	24		31-41-33	ALL
	B12		W2002	RM07	24		27-41-11	ALL
	B13		W2004	039	24		24-25-13	ALL
	B14		W2000	NN07	24		77-12-11	ALL
	B15	UNUSED						ALL
	C01		W2000	LM06	24		28-22-21	ALL
	C02		W2002	PM04	24		28-22-31	ALL
	C03		W2000	QM03	24		30-31-11	ALL
	C04		W2002	LN05	24		30-41-12	ALL
	C05		W2002	LN06	24		30-41-12	ALL
	C06		W2000	HM06	24		30-41-11	ALL
	C07		W2000	NN19	24		29-33-11	ALL
	C08	UNUSED						ALL
	C09		W2000	QM16	24		21-44-21	ALL
	C10		W2002	CM19	24		31-31-11	ALL
	C11		W2002	QN09	24		26-16-21	ALL
	C12	UNUSED						ALL
	C13	UNUSED						ALL
	C14		W2000	CM14	24		30-21-11	ALL
	C15		W2002	PN13	24		24-34-11	ALL
	D01		W2002	BM05	24		27-58-31	ALL
	D02		W2002	CN08	24		31-51-41	ALL
	D03		W2002	EM04	24		28-41-13	ALL
	D04		W2002	BM02	24		28-41-11	ALL
	D05		W2000	EM06	24		28-22-21	ALL
	D06		W2002	FM09	24		30-81-11	050-099, 150-199
	D06	UNUSED						275-299

HOOKUP LIST

D280T132

91-21-51

Section D00800

Page 157

Jun 06/2008



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00883E		//		PLUG-PART E OF D00883 (continued)				ALL
	D07		W2000	QN02	24		30-81-11	050-099, 150-199 275-299
	D07	UNUSED						ALL
	D08		W2000	NN15	24		24-11-21	ALL
	D09		W2000	GM06	24		30-21-11	ALL
	D10		W2000	GN17	24		21-43-11	ALL
	D11		W2000	SM12	24		32-61-14	ALL
	D12		W2000	GN18	24		21-44-11	ALL
	D13		W2002	BM19	24		28-41-13	ALL
	D14	UNUSED						ALL
	D15	UNUSED						ALL
	E01	UNUSED						ALL
	E02		W2000	PM10	24		21-52-41	ALL
	E03	UNUSED						ALL
	E04		W2006	029	22		31-41-34	ALL
	E05		W2000	BM15	24		21-64-11	050-099, 155-199, 276-299
	E05		W2000	BM19	24		21-64-11	150-154, 275
	E06		W2002	PN16	24		35-11-13	ALL
	E07		W2000	HM03	24		24-11-11	ALL
	E08		W2000	RM03	24		24-11-21	ALL
	E09		W2000	HM05	24		24-28-21	ALL
	E10		W2002	HM15	24		24-28-21	ALL
	E11		W2002	HM13	24		24-28-21	ALL
	E12		W2002	HM14	24		24-28-21	ALL
	E13		W2000	PN03	24		73-21-14	ALL
	E14		W2000	PN02	24		73-21-14	ALL
	E15	UNUSED						ALL
	F01		W2002	HN19	24		31-41-35	ALL
	F02		W2002	HN18	24		31-41-35	ALL
	F03		W2000	TM03	24		31-41-33	ALL
	F04		W2000	TM04	24		31-41-33	ALL
	F05		W2006	209R	24		31-41-32	ALL
	F06		W2006	209B	24		31-41-32	ALL
	F07		W1037	201R	24		31-41-12	ALL
	F08		W1037	201B	24		31-41-12	ALL
	F09	UNUSED						ALL
	F10	UNUSED						ALL
	F11		W2006	201R	24		31-41-33	ALL
	F12		W2006	201B	24		31-41-33	ALL
	F13		W2000	CM03	24		21-31-21	ALL
	F14		W2002	EM03	24		21-31-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00800

Page 158

Jun 06/2008



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00883E		//		PLUG-PART E OF D00883 (continued)				ALL
	F15	UNUSED						ALL
	G01		W1037	028	24		SPARE	ALL
	G02		W2002	NM14	24		26-16-11	ALL
	G03		W2000	FM16	24		21-58-11	ALL
	G04		W2002	NM02	24		26-11-11	ALL
	G05	UNUSED						ALL
	G06		W2002	NM05	24		26-11-22	ALL
	G07	UNUSED						050-099, 275-299
	G07		W2002	LM09	24		SPARE	150-199
	G08		W2004	017	24		24-25-13	ALL
	G09		W2000	HM04	24		24-28-11	ALL
	G10		W2000	RM04	24		24-28-11	ALL
	G11		W2002	PM09	24		24-28-11	ALL
	G12		W2002	HM04	24		24-28-11	ALL
	G13		W2000	NN10	24		79-31-11	ALL
	G14		W2002	PN08	24		24-34-11	ALL
	G15		W2000	LM12	24		30-21-11	050-099, 150-199
	G15		W2000	LM05	24		30-21-11	275-299
	H01		W2002	BM18	24		32-46-11	ALL
	H02		W2000	GM04	24		27-18-11	050-099, 150-154, 162-165, 275-276
	H02		W2006	043	24		27-18-11	155-157, 166-199, 277-299
	H03		W2002	FM04	24		27-18-11	050-099, 150-154, 162-165, 275-276
	H03		W2006	042	24		27-18-11	155-157, 166-199, 277-299
	H04		W2000	GM07	24		27-18-11	050-099, 150-154, 162-165, 275-276
	H04		W2006	045	24		27-18-11	155-157, 166-199, 277-299
	H05		W2002	FM08	24		27-18-11	050-099, 150-154, 162-165, 275-276
	H05		W2006	041	24		27-18-11	155-157, 166-199, 277-299
	H06		W2000	EM02	24		27-38-11	ALL
	H07		W2000	EM04	24		27-38-11	ALL
	H08	UNUSED						ALL
	H09	UNUSED						ALL
	H10		W2000	GN15	24		27-28-11	ALL
	H11		W2000	MM05	24		79-32-11	ALL
	H12		W2002	QM19	24		32-41-11	ALL
	H13		W2000	PM03	24		21-52-21	ALL
	H14		W2000	DN03	24		21-28-11	ALL
	H15		W2000	DN04	24		21-28-11	ALL
	J01		W1037	041	24		31-41-15	ALL
	J02		W2002	LM05	24		27-13-11	ALL
	J03		W2000	NN05	24		75-23-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00800

Page 159

Jun 06/2008



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00883E		//		PLUG-PART E OF D00883 (continued)				ALL
	J04		W1037	040	24		31-41-15	ALL
	J05		W2000	DM16	24		32-42-11	ALL
	J06		W2000	CM05	24		27-13-11	ALL
	J07		W2000	SM08	24		32-61-14	ALL
	J08		W1037	037	24		SPARE	ALL
	J09		W2000	PN12	24		21-52-21	ALL
	J10		W2000	NM06	24		21-61-31	ALL
	J11		W2002	RM15	24		27-09-14	ALL
	J12		W2000	PM06	24		21-52-21	ALL
	J13	UNUSED						ALL
	J14		W2002	PN14	24		24-34-11	ALL
	J15		W2002	BM10	24		32-46-11	ALL
	K01		W1037	036	24		SPARE	ALL
	K02		W2000	DM08	24		36-11-62	ALL
	K03		W2000	DM02	24		36-11-51	ALL
	K04	UNUSED						050-099, 275-299
	K04		W2002	HM06	24		SPARE	150-199
	K05		W2002	FN06	24		30-31-23	ALL
	K06		W2000	DM03	24		36-11-52	ALL
	K07		W2000	DM04	24		36-22-11	ALL
	K08		W2000	QM06	24		30-31-13	ALL
	K09		W2000	TN07	24		27-09-14	ALL
	K10		W2000	DM09	24		36-11-61	ALL
	K11		W2000	DM05	24		36-22-11	ALL
	K12		W2002	FN03	24		30-31-21	ALL
	K13		W2002	RM14	24		27-09-14	ALL
	K14		W2002	AM08	24		34-61-15	ALL
	K15		W2006	024	22		31-41-11	ALL
D00883F		//		PLUG-PART F OF D00883				ALL
	A01	UNUSED						ALL
	A02	UNUSED						ALL
	A03		W2004	016	24		24-25-13	ALL
	A04		W2002	PN10	24		24-34-11	ALL
	A05		W2006	031	22		49-71-11	ALL
	A06		W2006	033	22		49-73-11	ALL
	A07		W2000	PN05	24		21-52-31	ALL
	A08		W2000	PN06	24		21-52-31	ALL
	A09		W2002	AM18	24		34-22-38	ALL
	A10		W2002	HN04	24		28-25-21	ALL

HOOKUP LIST
D280T132

91-21-51
Section D00800
Page 160
Jun 06/2008



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00883F		//		PLUG-PART F OF D00883 (continued)				ALL
	B01		W2002	HM11	24		24-34-11	ALL
	B02		W2002	HM10	24		24-34-11	ALL
	B03	UNUSED						ALL
	B04		W1037	083	24		SPARE	ALL
	B05		W2002	PM05	24		80-11-21	ALL
	B06		W2002	HN08	24		49-61-11	ALL
	B07		W1037	020	24		31-41-15	ALL
	B08		W2000	QM04	24		30-31-11	ALL
	B09		W2000	FN09	24		21-64-11	ALL
	B10		W2000	LM14	24		73-21-18	ALL
	C01		W2000	PN07	24		21-52-31	ALL
	C02		W2000	SM11	24		32-61-14	ALL
	C03		W2002	MM02	24		34-21-31	ALL
	C04		W2002	MM03	24		34-21-31	ALL
	C05	UNUSED						050-099
	C05		W2002	DM04	24		32-71-11	150-199, 275-299
	C06		W2000	DM12	24		21-44-21	ALL
	C07		W2000	SM02	24		32-61-14	ALL
	C08		W2002	QN03	24		26-23-12	ALL
	C09		W2002	FN16	24		29-11-22	ALL
	C10	UNUSED						ALL
	D01		W2000	PN08	24		21-52-31	ALL
	D02		W2000	FM14	24		21-51-11	ALL
	D03		W2000	TM12	24		27-09-14	ALL
	D04		W2002	NM06	24		26-15-11	ALL
	D05		W2002	MM04	24		34-21-31	ALL
	D06		W2000	QN04	24		28-22-31	ALL
	D07		W2000	GM13	24		24-11-11	ALL
	D08		W1037	021	24		31-41-15	ALL
	D09		W2002	EM05	24		80-11-11	ALL
	D10		W2002	QM16	24		28-42-21	ALL
	E01		W2002	HN12	24		49-15-11	ALL
	E02	UNUSED						ALL
	E03		W2002	HN02	24		26-21-11	ALL
	E04	UNUSED						ALL
	E05		W2002	AM16	24		34-12-12	ALL
	E06	UNUSED						ALL
	E07		W2002	HN03	24		26-16-21	ALL
	E08	UNUSED						ALL
	E09		W2000	GN13	24		32-09-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00800

Page 161

Jun 06/2008



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00883F		//		PLUG-PART F OF D00883 (continued)				ALL
	E10		W2002	PM07	24		29-32-11	ALL
	F01		W2002	HN07	24		36-11-41	ALL
	F02		W2002	NM09	24		26-15-11	ALL
	F03		W2000	FM17	24		21-58-11	ALL
	F04		W2002	DN14	24		52-71-13	ALL
	F05		W2002	LN16	24		21-58-16	ALL
	F06		W2002	PM03	24		35-21-11	ALL
	F07		W2002	NM12	24		26-16-11	ALL
	F08		W2000	GN14	24		32-09-11	ALL
	F09	UNUSED						050-099, 150-199
	F09		W2002	HM19	24		26-22-21	275-299
	F10		W2002	PN17	24		49-94-14	ALL
	G01		W2000	HM12	24		24-11-11	ALL
	G02	UNUSED						050-099, 275-299
	G02		W2002	EM19	24		SPARE	150-199
	G03		W2000	RM05	24		24-11-21	ALL
	G04		W2000	EM12	24		29-32-11	ALL
	G05		W2000	GM16	24		30-21-11	ALL
	G06	UNUSED						ALL
	G07		W2000	QM12	24		30-11-11	ALL
	G08		W2000	NN16	24		30-21-11	ALL
	G09		W2000	DN19	24		21-64-11	ALL
	G10		W2006	025	22		31-41-32	ALL
	H01		W2000	QM15	24		30-11-11	ALL
	H02	UNUSED						ALL
	H03	UNUSED						ALL
	H04		W2002	QM14	24		28-22-31	ALL
	H05		W1037	039	24		31-41-15	ALL
	H06	UNUSED						ALL
	H07	UNUSED						ALL
	H08		W2000	QM11	24		28-42-11	ALL
	H09		W2000	NM11	24		28-42-11	ALL
	H10		W2002	PM08	24		32-42-11	ALL
	J01	UNUSED						050-099, 275-299
	J01		W2002	LM19	24		SPARE	150-199
	J02		W2000	QM14	24		30-11-11	ALL
	J03	UNUSED						ALL
	J04		W2004	008	24		24-25-13	ALL
	J05		W1037	038	24		SPARE	ALL
	J06	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00800

Page 162

Jun 06/2008



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00883F		//		PLUG-PART F OF D00883 (continued)				ALL
	J07	UNUSED						ALL
	J08	UNUSED						ALL
	J09		W2002	EM07	24		28-42-12	ALL
	J10		W2000	DM14	24		73-21-18	ALL
	K01		W2000	QM13	24		30-11-11	ALL
	K02		W2000	CM06	24		29-11-22	ALL
	K03		W2000	TN15	24		34-45-13	050-099, 153-199, 277-299
	K03	UNUSED						150-152, 275-276
	K04	UNUSED						ALL
	K05	UNUSED						ALL
	K06		W2002	QN04	24		29-21-31	ALL
	K07	UNUSED						ALL
	K08	UNUSED						ALL
	K09		W2000	NM05	24		21-61-21	ALL
	K10		W2000	CM02	24		29-21-32	ALL
	REF	**	W2000	TN08	24		34-61-16	150-199, 275-299
D00884		P005-00/ /		PLUG-P5				ALL
	1		W0066	581	20		33-13-16	ALL
	2		W0066	582	20		33-13-16	ALL
	3	UNUSED						ALL
	4		W0066	584	18		30-42-11	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W0066	587	18		30-42-11	ALL
	8		W0066	588	22		30-43-11	ALL
	9		W0066	589	22		30-43-11	ALL
	10		W0066	590	18		30-42-11	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D00886		P005-00/ /		PLUG-P5				ALL
	1	UNUSED						ALL
	2		W0070	106	22		74-31-11	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W0070	105	22		74-31-11	ALL
	6	UNUSED						ALL
	7		W0070	107	22		74-31-11	ALL
	8		W0070	108	22		74-31-11	ALL

HOOKUP LIST
D280T132

91-21-51
Section D00800
Page 163
Jun 06/2008



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00886		P005-00/ /		PLUG-P5 (continued)				ALL
	9		W0070	109	24		74-31-11	ALL
	10	DK	W0070	110	18		80-11-11	ALL
	11	DK	W0070	111	18		80-11-11	ALL
	12		W0070	112	24		80-11-11	ALL
	DED		W0070	110Z			80-11-11	ALL
	DED		W0070	112Z			80-11-11	ALL
D00888		P005-00/ /		PLUG-P5				ALL
	1	UNUSED						050-099, 150-199
	1		W0062	841	22		30-21-11	275-299
	2		W0062	851	22		30-21-11	050-099, 150-199
	2		W0062	842	22		30-11-11	275-299
	3		W0062	843	22		33-16-17	ALL
	4		W0062	844	22		33-16-17	ALL
	5	UNUSED						ALL
	6		W0062	820	22		30-21-11	050-099, 150-199
	6	UNUSED						275-299
	7		W0062	871	22		30-21-11	050-099, 150-199
	7		W0062	847	24		30-21-11	275-299
	8	UNUSED						050-099, 150-199
	8		W0062	848	24		30-21-11	275-299
	9		W0062	857	24		30-21-11	050-099, 150-199
	9		W0062	849	24		73-21-16	275-299
	10		W0062	872	22		30-21-11	050-099, 150-199
	10		W0062	850	20		73-21-16	275-299
	11	UNUSED						050-099, 150-199
	11		W0062	851	22		30-21-11	275-299
	12	UNUSED						050-099, 150-199
	12		W0062	852	22		30-21-11	275-299
	13		W0062	853	22		30-21-11	ALL
	14	UNUSED						ALL
	15		W0062	863	22		30-21-11	050-099, 150-199
	15	UNUSED						275-299
	16		W0062	852	22		30-21-11	050-099, 150-199
	17	UNUSED						050-099, 150-199
	18	UNUSED						050-099, 150-199
	19	UNUSED						050-099, 150-199
	20	UNUSED						050-099, 150-199
	21	UNUSED						050-099, 150-199
	22	UNUSED						050-099, 150-199

HOOKUP LIST

D280T132

91-21-51

Section D00800

Page 164

Jun 06/2008



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00888		P005-00/ /		PLUG-P5 (continued)				ALL
	23	UNUSED						050-099, 150-199
	24	UNUSED						050-099, 150-199
	CAP	Y	W0062	79F	20		SPARE	050-099, 155-199
	CAP	Y	W0062	79G	20		SPARE	050-099, 155-199
	DED		W0062	843Z			33-16-17	ALL
D00890		P005-00/ /		PLUG-P5				ALL
	1	UNUSED						050-099, 150-199
	1	DK	W0066	841	18		33-13-16	275-299
	2		W0066	829	24		30-21-11	050-099, 150-199
	2	DK	W0066	842	18		33-13-16	275-299
	3		W0066	843	22		33-16-17	ALL
	4		W0066	844	22		33-16-17	ALL
	5		W0066	845	22		30-21-11	ALL
	6		W0066	846	22		30-21-11	ALL
	7		W0066	830	24		30-21-11	050-099, 150-199
	7		W0066	847	24		30-21-11	275-299
	8	UNUSED						050-099, 150-199
	8		W0066	848	24		30-21-11	275-299
	9	UNUSED						ALL
	10		W0066	832	22		30-21-11	050-099, 150-199
	10	UNUSED						275-299
	11		W0066	851	22		30-21-11	ALL
	12	UNUSED						050-099, 150-199
	12		W0066	852	22		30-11-11	275-299
	13		W0066	828	22		30-21-11	050-099, 150-199
	13		W0066	849	24		73-21-16	275-299
	14	UNUSED						050-099, 150-199
	14		W0066	850	20		73-21-16	275-299
	15		W0066	802	22		30-21-11	050-099, 150-199
	15		W0066	855	22		30-21-11	275-299
	16	UNUSED						050-099, 150-199
	17	UNUSED						050-099, 150-199
	18	UNUSED						050-099, 150-199
	19	UNUSED						050-099, 150-199
	20	UNUSED						050-099, 150-199
	21	UNUSED						050-099, 150-199
	22	UNUSED						050-099, 150-199
	23	UNUSED						050-099, 150-199
	24	UNUSED						050-099, 150-199

HOOKUP LIST

D280T132

91-21-51

Section D00800

Page 165

Jun 06/2008



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00890		P005-00/ /		PLUG-P5 (continued)				ALL
	CAP	Y	W0066	79D	20		SPARE	050-099, 155-199
	CAP	Y	W0066	79E	20		SPARE	050-099, 155-199
	DED		W0066	843Z			33-16-17	ALL
D00892		0212/268/R060		PLUG-				ALL
	=1		W0622	A-R			30-41-11	ALL
	=2	UNUSED						ALL
D00894		P006-00/ /		PLUG-				ALL
	1		W1026	056	24		24-51-42	ALL
	2		W1026	043	20		24-51-42	ALL
	3		W1026	046	24		24-51-42	ALL
	4		W1026	075	20		24-51-42	ALL
	5		W1026	039	24		22-11-32	ALL
	6		W1026	053	20		24-51-42	ALL
	7		W1026	055	20		24-51-42	ALL
	8		W1026	045	20		24-51-42	ALL
	9		W1026	041	20		24-51-42	ALL
	10		W1026	048	22		24-51-42	ALL
	11	UNUSED						ALL
	12		W1026	076	20		24-51-42	ALL
	13		W1026	074	20		24-51-42	ALL
	14		W1026	050	24		24-51-42	ALL
	15		W1026	051	20		24-51-42	ALL
	16		W1026	054	20		24-51-42	ALL
	17		W1026	052	20		24-51-42	ALL
	18		W1026	047	20		24-51-42	ALL
	19		W1026	049	20		24-51-42	ALL
D00896		P005-00/ /		PLUG-P5				ALL
	1		W0062	308Y	24		33-13-16	ALL
	2	FM	W0062	09B	16		33-13-16	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W0062	308B	24		33-13-16	ALL
	6		W0062	308R	24		33-13-16	ALL
	7		W0062	09G	20		33-13-16	ALL
	8	FM	W0062	09H	16		33-13-16	ALL
	9	FM	W0062	09J	16		33-13-16	ALL
	10	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00800

Page 166

Jun 06/2008



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00896		P005-00/ /		PLUG-P5 (continued)				ALL
	11	FM	W0062	09L	16		33-13-16	ALL
	12		W0062	09M	22		33-13-16	ALL
D00898		P005-00/ /		PLUG-P5				ALL
	1		W0062	307Y	24		33-13-16	ALL
	2	FM	W0062	10B	16		33-13-16	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W0062	307B	24		33-13-16	ALL
	6		W0062	307R	24		33-13-16	ALL
	7		W0062	10G	20		33-13-16	ALL
	8	UNUSED						ALL
	9	FM	W0062	10J	16		33-13-16	ALL
	10	UNUSED						ALL
	11	FM	W0062	10L	16		33-13-16	ALL
	12		W0062	10P	22		33-13-16	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00800

Page 167 End

Jun 06/2008



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00904		360/280/R060		RCPT-F1				050-099
D00904		360/280/R060		PLUG-F3				150-199
D00904		264/283/R055		RCPT-F1 GALLEY				275-278
D00904		260/280/R055		RCPT-F1 GALLEY				280-299
	A		W0220	005	06		25-31-11	050-099, 150-199
	A		W0220	005	04		25-31-11	275-299
	B		W0220	006	06		25-31-11	050-099, 150-199
	B		W0220	006	04		25-31-11	275-299
	C		W0220	007	06		25-31-11	050-099, 150-199
	C		W0220	007	04		25-31-11	275-299
	D		W0220	004	06		25-31-11	050-099, 150-199
	D		W0220	004	04		25-31-11	275-299
D00906		0355/279/R060		PLUG-F1				050-099
D00906		0360/280/R060		PLUG-F1				150-199
D00906		0264/283/R055		RCPT-F1 GALLEY				275-278
D00906		0260/280/R055		RCPT-F1 GALLEY				280-299
	1		W0222	165	20		33-22-31	050-099, 150-199
	1	UNUSED						275-299
	2		W0222	166	20		33-22-31	050-099, 150-199
	2	UNUSED						275-299
	3	UNUSED						ALL
	4		W0222	013	24		25-31-11	ALL
	5		W0222	014	24		25-31-11	ALL
	6		W0222	015	24		25-31-11	ALL
	7		W0222	016	24		25-31-11	ALL
	8	UNUSED						050-099, 150-199
	8		W0222	072	22		33-27-11	275-299
	9		W0222	033	20		25-31-11	050-099, 150-199, 275-278
	9	FM	W0222	033	16		25-31-11	280-299
	10		W0222	026	20		25-31-11	050-099
	10	FM	W0222	026	20		25-31-11	150-199
	10	FO	W0222	131	16		25-31-11	275-299
	11	DK	W0222	178	18		30-71-25	050-099, 150-199
	11		W0222	073	22		33-27-11	275-299
	12	DK	W0222	179	18		30-71-25	050-099, 150-199
	12		W0222	074	20		33-27-11	275-299
	13		W0222	169	20		35-21-13	050-099, 150-199
	14		W0222	170	20		35-21-13	050-099, 150-199
	15	UNUSED						050-099, 150-199

HOOKUP LIST

D280T132

91-21-51

Section D00900

Page 1

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00910		0172/208/L034		RCPT-				ALL
	1		W0622	011	22		25-11-11	ALL
	2		W0622	012	22		25-11-11	ALL
	3		W0622	013	22		25-11-11	ALL
	4	UNUSED						ALL
	5		W0622	014	20		25-11-11	ALL
D00912		0172/208/R034		RCPT-				ALL
	1		W0624	001	22		25-11-21	ALL
	2		W0624	002	22		25-11-21	ALL
	3		W0624	003	22		25-11-21	ALL
	4	UNUSED						ALL
	5		W0624	004	20		25-11-21	ALL
D00914		P033-00/ /		RELAY SOCKET-				ALL
	A1		W0142	592	22		30-11-11	ALL
	A2		W0142	604	22		30-11-11	ALL
	A3	UNUSED						ALL
	B1		W0142	594	22		30-11-11	ALL
	B2		W0142	890	22		30-11-11	ALL
	B3		W0142	593	22		30-11-11	ALL
	C1		W0142	596	22		30-11-11	ALL
	C2		W0142	891	22		30-11-11	ALL
	C3		W0142	595	22		30-11-11	ALL
	D1		W0142	864	22		30-11-11	ALL
	D2		W0142	600	22		30-11-11	ALL
	D3		W0142	606	22		30-11-11	050-099, 150-199
	D3	UNUSED						275-299
	X1		W0142	605	22		30-11-11	ALL
	X2		W0142	591	20		30-11-11	ALL
D00916		NL255/155/		PLUG-				ALL
	1		W0398	201B	18		29-11-12	ALL
	2		W0398	201R	18		29-11-12	ALL
	3		W0398	011	18		29-32-11	ALL
D00918		0999/145/R005		PLUG-				ALL
	1		W1210	301B	18		29-11-31	ALL
	2		W1210	301R	18		29-11-31	ALL
	3		W1210	301Y	18		29-11-31	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00900

Page 2

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00920		1043/145/R005		PLUG-				ALL
	1		W1308	301R	18		29-11-31	ALL
	2		W1308	301B	18		29-11-31	ALL
	3		W1308	301Y	18		29-11-31	ALL
D00922		NR265/155/		PLUG-				ALL
	1		W0400	201B	18		29-11-22	ALL
	2		W0400	201R	18		29-11-22	ALL
	3		W0400	011	18		29-32-11	ALL
D00926		0967/288/R056		PLUG-				275-299
	1	UNUSED						275-299
	2		W0814	063	22		33-21-35	275-299
	3		W0814	064	22		33-21-35	275-299
	4	UNUSED						275-299
	5		W0814	050	20		33-21-35	275-299
	6	UNUSED						275-299
	7		W0814	051	20		33-21-35	275-299
	8		W0814	052	20		33-21-35	275-299
	9		W0814	061	22		33-21-35	275-299
	10		W0814	062	22		33-21-35	275-299
	11		W0814	071	22		33-21-35	275-299
	12		W0814	072	22		33-21-35	275-299
D00928		P036-00/ /		PLUG-				ALL
	1		W0184	007	20		27-58-21	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W0184	004	24		27-58-21	ALL
	5		W0184	005	22		27-58-21	ALL
	6		W0184	003	20		27-58-21	ALL
	7	UNUSED						ALL
D00930		P033-00/ /		RELAY SOCKET-				ALL
	A1		W0142	810	24		28-25-11	ALL
	A2		W0142	811	20		28-25-11	ALL
	A3	UNUSED						ALL
	B1	UNUSED						ALL
	B2	UNUSED						ALL
	B3	UNUSED						ALL
	X1		W0142	072	18		28-22-11	ALL

HOOKUP LIST
D280T132

91-21-51
Section D00900
Page 3
Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00930		P033-00/ /		RELAY SOCKET- (continued)				ALL
	X2		W0142	812	20		28-22-11	ALL
D00934		0262/287/L070		RCPT-				ALL
	1		W0714	010	20		35-21-12	ALL
	2		W0714	011	20		35-21-12	ALL
D00936		0298/280/L035		RCPT-				ALL
	1		W0714	008	20		35-21-12	ALL
	2		W0714	009	20		35-21-12	ALL
D00938		345/280/L048		RCPT-				280-299
	1		W0714	035	20		35-21-12	280-299
	2		W0714	036	20		35-21-12	280-299
D00940		0397/270/L075		RCPT-				275-278
D00940		0398/270/L073		RCPT-				280-299
	1		W0718	068	20		35-21-12	275-299
	2		W0718	069	20		35-21-12	275-299
D00942		AL1011/ /		PLUG-				ALL
	=1		W0626	001R	18		26-17-11	ALL
D00944		AL1011/ /		PLUG-				ALL
	=1		W0626	002R	18		26-17-11	ALL
D00946		1021/185/R050		PLUG-				ALL
	=1		W0964	018R	18		26-17-11	ALL
D00948		1021/185/R050		PLUG-				ALL
	=1		W0964	019R	18		26-17-11	ALL
D00952		0375/270/R073		RCPT-				275-278
D00952		0395/270/R073		RCPT-				280-299
	1		W0722	067	20		35-21-13	275-299
	2		W0722	068	20		35-21-13	275-299
D00958A		//		PLUG-PART OF D00958				ALL
	A01		W0082	304B	22		21-51-12	ALL
	A02		W0082	304R	22		21-51-12	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00900

Page 4

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00958A		//		PLUG-PART OF D00958 (continued)				ALL
	A03		W0082	304Y	22		21-51-12	ALL
	A04		W0082	204B	22		21-51-12	ALL
	A05		W0082	204R	22		21-51-12	ALL
	A06	UNUSED						ALL
	A07	UNUSED						ALL
	A08	UNUSED						ALL
	A09	UNUSED						ALL
	A10		W0082	306R	24		21-53-11	ALL
	A11		W0082	306B	24		21-53-11	ALL
	A12		W0082	306Y	24		21-53-11	ALL
	A13	UNUSED						ALL
	A14	UNUSED						ALL
	A15	UNUSED						ALL
	B01		W0082	302B	22		21-51-12	ALL
	B02		W0082	302R	22		21-51-12	ALL
	B03		W0082	302Y	22		21-51-12	ALL
	B04		W0082	202B	22		21-51-12	ALL
	B05		W0082	202R	22		21-51-12	ALL
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09	UNUSED						ALL
	B10		W0082	308R	24		21-53-11	ALL
	B11		W0082	308B	24		21-53-11	ALL
	B12		W0082	308Y	24		21-53-11	ALL
	B13	UNUSED						ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	C01		W0082	303B	22		21-51-12	ALL
	C02		W0082	303R	22		21-51-12	ALL
	C03		W0082	303Y	22		21-51-12	ALL
	C04		W0082	203B	22		21-51-12	ALL
	C05		W0082	203R	22		21-51-12	ALL
	C06	UNUSED						ALL
	C07	UNUSED						ALL
	C08	UNUSED						ALL
	C09	UNUSED						ALL
	C10		W0082	307R	24		21-53-11	ALL
	C11		W0082	307B	24		21-53-11	ALL
	C12		W0082	307Y	24		21-53-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00900

Page 5

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00958A		//		PLUG-PART OF D00958 (continued)				ALL
	C13	UNUSED						ALL
	C14	UNUSED						ALL
	C15		W0082	021	22		21-51-12	ALL
	D01	UNUSED						ALL
	D02	UNUSED						ALL
	D03	UNUSED						ALL
	D04		W0082	205B	22		21-51-12	ALL
	D05		W0082	205R	22		21-51-12	ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	D08	UNUSED						ALL
	D09	UNUSED						ALL
	D10	UNUSED						ALL
	D11	UNUSED						ALL
	D12	UNUSED						ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15	UNUSED						ALL
D00958B		//		PLUG-PART OF D00958				ALL
	A01		W0082	235B	24		21-61-51	ALL
	A02		W0082	235R	24		21-61-51	ALL
	A03		W0082	213B	24		21-61-51	ALL
	A04		W0082	213R	24		21-61-51	ALL
	A05		W0082	234B	24		21-61-51	ALL
	A06		W0082	234R	24		21-61-51	ALL
	A07		W0082	216B	24		21-61-51	ALL
	A08		W0082	216R	24		21-61-51	ALL
	A09		W0082	551	24		21-51-12	050-099, 151-199, 275-299
	A09		W0082	301Y	24		21-51-12	150
	A10		W0082	551	24		21-51-12	050-099, 151-199, 275-299
	A10		W0082	301B	24		21-51-12	150
	A11	UNUSED						050-099, 151-199, 275-299
	A11		W0082	301R	24		21-51-12	150
	A12	UNUSED						ALL
	A13		W0082	003	24		21-53-11	ALL
	A14	UNUSED						ALL
	A15		W0082	002	24		21-53-11	ALL
	B01		W0082	225B	24		21-51-11	ALL
	B02		W0082	225R	24		21-51-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00900

Page 6

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00958B		//		PLUG-PART OF D00958 (continued)				ALL
	B03	UNUSED						050-099
	B03		W0082	128	24		21-51-11	150-199, 275-299
	B04	UNUSED						050-099
	B04		W0082	128	24		21-51-11	150-199, 275-299
	B05		W0082	028	24		21-51-12	ALL
	B06		W0082	028	24		21-51-12	ALL
	B07		W0082	215B	24		21-61-51	ALL
	B08		W0082	215R	24		21-61-51	ALL
	B09		W0082	130	24		21-51-11	ALL
	B10	UNUSED						ALL
	B11	UNUSED						050-099
	B11		W0082	135	24		21-51-11	150-199, 275-299
	B12	UNUSED						050-099
	B12		W0082	136	24		21-51-11	150-199, 275-299
	B13		W0082	005	24		21-53-11	ALL
	B14	UNUSED						ALL
	B15		W0082	004	24		21-53-11	ALL
	C01		W0082	226B	22		21-51-12	ALL
	C02		W0082	226R	22		21-51-12	ALL
	C03		W0082	217R	24		21-61-51	ALL
	C04		W0082	217B	24		21-61-51	ALL
	C05		W0082	117	22		21-51-11	ALL
	C06	UNUSED						ALL
	C07		W0082	116	24		21-51-11	ALL
	C08	UNUSED						ALL
	C09		W0082	229R	24		21-51-12	ALL
	C10		W0082	229B	24		21-51-12	ALL
	C11	UNUSED						ALL
	C12	UNUSED						ALL
	C13		W0082	007	24		21-53-11	ALL
	C14	UNUSED						ALL
	C15		W0082	006	24		21-53-11	ALL
	D01		W0082	227B	24		21-51-12	ALL
	D02		W0082	227R	24		21-51-12	ALL
	D03		W0082	218R	24		21-61-51	ALL
	D04		W0082	218B	24		21-61-51	ALL
	D05		W0082	201R	24		21-51-12	ALL
	D06		W0082	201B	24		21-51-12	ALL
	D07		W0082	113	24		21-53-11	ALL
	D08	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D00900

Page 7

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00958B		//		PLUG-PART OF D00958 (continued)				ALL
	D09		W0082	230R	24		21-51-12	ALL
	D10		W0082	230B	24		21-51-12	ALL
	D11	UNUSED						ALL
	D12	UNUSED						ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15	UNUSED						ALL
D00958C		//		PLUG-PART OF D00958				ALL
	1	UNUSED						ALL
	2		W0082	001	20		21-53-11	ALL
	3		W0082	112	14		21-53-11	ALL
	4		W0082	008	20		21-53-11	ALL
	5	UNUSED						ALL
	= C1	UNUSED						ALL
	= C5	UNUSED						ALL
	DED		W0082	001Z			21-53-11	ALL
D00964		0395/305/L030		PLUG-				ALL
	1		W0712	008	24		35-21-11	ALL
	2		W0712	009	20		35-21-11	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
D00976		P037-00/ /		RELAY SOCKET-				ALL
	A1		W1118	077	22		21-26-21	ALL
	A2		W1118	073	22		21-26-21	ALL
	A3	UNUSED						ALL
	B1		W1118	076	22		21-26-21	ALL
	B2		W1118	072	22		21-26-21	ALL
	B3	UNUSED						ALL
	C1		W1118	075	22		21-26-21	ALL
	C2		W1118	071	22		21-26-21	ALL
	C3	UNUSED						ALL
	D1	UNUSED						ALL
	D2	UNUSED						ALL
	D3	UNUSED						ALL
	X1		W1118	074	24		21-26-21	ALL
	X2		W1118	157	24		21-26-21	ALL

HOOKUP LIST

D280T132

91-21-51

Section D00900

Page 8

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00978		659/280/L005		RCPT-				050-099
D00978		0654+011/280/L005		RCPT-				150-199
D00978		0654+006/280/L005		RCPT-				275-299
	1		W1282	111	20		35-21-14	050-099
	1		W1282	061	20		35-21-14	150-199
	1		W1164	008	20		35-21-14	275
	1		W1164	111	20		35-21-14	276-299
	2		W1282	112	20		35-21-14	050-099
	2		W1282	062	20		35-21-14	150-199
	2		W1164	009	20		35-21-14	275
	2		W1164	112	20		35-21-14	276-299
D00980		690/280/L005		RCPT-				050-099
D00980		0654+040/280/L005		RCPT-				150-199
D00980		0654+037/280/L005		RCPT-				275-299
	1		W1282	121	20		35-21-14	050-099
	1		W1282	039	20		35-21-14	150-199
	1		W1164	011	20		35-21-14	275
	1		W1164	121	20		35-21-14	276-299
	2		W1282	122	20		35-21-14	050-099
	2		W1282	040	20		35-21-14	150-199
	2		W1164	012	20		35-21-14	275
	2		W1164	122	20		35-21-14	276-299
D00982		0845/280/L002		RCPT-				150-199
D00982		0852/280/L002		RCPT-				275-299
	1		W1282	012	20		35-21-14	150-199, 275-278
	1		W1282	601	20		35-21-14	280-299
	2		W1282	013	20		35-21-14	150-199, 275-278
	2		W1282	602	20		35-21-14	280-299
D00984		0870/280/L005		RCPT-				050-099
D00984		870/280/L005		RCPT-				150-199
D00984		AP0703/280/L5		RCPT-				275-278
D00984		0883/280/L005		RCPT-				280-299
	1		W1282	191	20		35-21-14	050-099
	1		W1282	015	20		35-21-14	150-199
	1		W1282	006	20		35-21-14	275-278
	1		W1282	611	20		35-21-14	280-299
	2		W1282	192	20		35-21-14	050-099
	2		W1282	016	20		35-21-14	150-199

HOOKUP LIST

D280T132

91-21-51

Section D00900

Page 9

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00984		0870/280/L005		RCPT- (continued)				050-099
D00984		870/280/L005		RCPT- (continued)				150-199
D00984		AP0703/280/L5		RCPT- (continued)				275-278
D00984		0883/280/L005		RCPT- (continued)				280-299
	2		W1282	007	20		35-21-14	275-278
	2		W1282	612	20		35-21-14	280-299
D00986		0917/280/L005		RCPT-				050-099, 275-299
	1		W1166	111	20		35-21-14	050-099
	1		W1282	069	20		35-21-14	275-278
	1		W1282	651	20		35-21-14	280-299
	2		W1166	112	20		35-21-14	050-099
	2		W1282	070	20		35-21-14	275-278
	2		W1282	652	20		35-21-14	280-299
D00998		P049-00/ /		RELAY SOCKET-P49				275-299
	A1		W1050	060	20		24-32-41	275-299
	A2		W1050	024	22		49-41-11	275-299
	A3		W1050	030	22		49-41-11	275-299
	B1	UNUSED						275-299
	B2	UNUSED						275-299
	B3	UNUSED						275-299
	X1		W1050	058	20		24-32-41	275-299
	X2		W1050	059	20		24-32-41	275-299

HOOKUP LIST

D280T132

91-21-51

Section D00900

Page 10 End

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01000		P049-00/ /		RELAY SOCKET-P49				275-299
	A1		W1050	001	20		24-32-41	275-299
	A2		W1050	010	20		24-32-41	275-299
	A3	UNUSED						275-299
	B1		W1050	002	20		24-32-41	275-299
	B2		W1050	011	20		24-32-41	275-299
	B3	UNUSED						275-299
	C1		W1050	003	20		24-32-41	275-299
	C2		W1050	012	20		24-32-41	275-299
	C3	UNUSED						275-299
	D1		W1050	004	20		24-32-41	275-299
	D2		W1050	067	20		24-32-41	275-299
	D3	UNUSED						275-299
	G1		W1050	PA1			99-99-99	275-299
	G2	UNUSED						275-299
	G3		W1050	PA1			99-99-99	275-299
	X1		W1050	013	20		24-32-41	275-299
	X2		W1050	068	20		24-32-41	275-299
D01002		429/270/R073		RCPT-				150-157
D01002		0405/270/R073		RCPT-				275-299
	1		W0722	004	20		35-21-13	150-157, 275-299
	2		W0722	005	20		35-21-13	150-157, 275-299
D01004		0727/270/R073		RCPT-				050-099
D01004		0737/270/R073		RCPT-				150-199
D01004		0712/270/R073		RCPT-				275-278
D01004		0714/270/R073		RCPT-				280-299
	1		W0722	037	20		35-21-13	050-099, 150-199
	1		W0728	076	20		35-21-13	275-299
	2		W0722	038	20		35-21-13	050-099, 150-199
	2		W0728	077	20		35-21-13	275-299
D01006		P037-00/ /		RELAY SOCKET-P37				ALL
	A1	UNUSED						ALL
	A2	UNUSED						ALL
	A3	UNUSED						ALL
	B1		W0192	177	22		21-26-21	ALL
	B2		W0192	80H	24		21-26-21	050-099, 155-199, 276-299
	B2		W0192	667	20		21-26-21	150-154, 275
	B3	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D01000

Page 1

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01006		P037-00/ /		RELAY SOCKET-P37 (continued)				ALL
	C1		W0192	01P	22		21-26-21	ALL
	C2	UNUSED						ALL
	C3	UNUSED						ALL
	D1	UNUSED						ALL
	D2		W0192	661	22		21-26-21	ALL
	D3	UNUSED						ALL
	X1		W0192	664	24		21-26-21	ALL
	X2		W0192	01T	20		21-26-21	ALL
D01008		P049-00/ /		RELAY SOCKET-P49				275-299
	A1	UNUSED						275-299
	A2		W1050	056	20		24-32-41	275-299
	A3		W1050	058	20		24-32-41	275-299
	B1		W1050	101	20		24-32-41	275-299
	B2		W1050	104	20		24-32-41	275-299
	B3	UNUSED						275-299
	X1		W1050	057	20		24-32-41	275-299
	X2		W1050	102	20		24-32-41	275-299
D01010		0200/212/L069		PLUG-				ALL
	A		W0622	015	22		30-31-11	ALL
	B		W0622	017	22		30-31-11	ALL
D01012		0201/182/L068		PLUG				ALL
	A		W0624	025	22		30-31-23	ALL
	B		W0624	016	22		30-31-23	ALL
D01018		1146/270/L073		RCPT-				050-099
D01018		1159/270/L073		RCPT-				150-199, 275-299
	1		W0724	014	20		35-21-12	ALL
	2		W0724	015	20		35-21-12	ALL
D01020		1175/270/L073		RCPT-				050-099
D01020		1189/270/L073		RCPT-				150-199, 275-299
	1		W0724	017	20		35-21-12	ALL
	2		W0724	018	20		35-21-12	ALL
D01022		1204/270/L073		RCPT-				ALL
	1		W0724	020	20		35-21-12	ALL

HOOKUP LIST

D280T132

91-21-51

Section D01000

Page 2

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01022		1204/270/L073		RCPT- (continued)				ALL
	2		W0724	021	20		35-21-12	ALL
D01024		1234/270/L073		RCPT-				ALL
	1		W0724	023	20		35-21-12	ALL
	2		W0724	024	20		35-21-12	ALL
D01026		1263/270/L073		RCPT-				ALL
	1		W0724	027	20		35-21-12	ALL
	2		W0724	028	20		35-21-12	ALL
D01028		1292/270/L073		RCPT-				ALL
	1		W0724	030	20		35-21-12	ALL
	2		W0724	031	20		35-21-12	ALL
D01030		1322/270/L073		RCPT-				ALL
	1		W0724	033	20		35-21-12	ALL
	2		W0724	034	20		35-21-12	ALL
D01032		1351/270/L073		RCPT-				ALL
	1		W0724	035	20		35-21-12	ALL
	2		W0724	036	20		35-21-12	ALL
D01034		1380/270/L073		RCPT-				ALL
	1		W0724	038	20		35-21-12	ALL
	2		W0724	039	20		35-21-12	ALL
D01036		1406/270/L073		RCPT-				050-099
D01036		1410/270/L073		RCPT-				150-199, 275-299
	1		W0724	041	20		35-21-12	ALL
	2		W0724	042	20		35-21-12	ALL
D01038		1436/270/L073		RCPT-				050-099
D01038		1428/270/L073		RCPT-				150-199, 275-299
	1		W0724	044	20		35-21-12	ALL
	2		W0724	045	20		35-21-12	ALL
D01040		1506/280/L030		RCPT-				150-199, 275-299
	1		W0724	050	20		35-21-12	150-199, 275-299
	2		W0724	051	20		35-21-12	150-199, 275-299

HOOKUP LIST

D280T132

91-21-51

Section D01000

Page 3

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01042		1025/280/L005		RCPT-				ALL
	1		W1168	101	20		35-21-14	050-099, 276-299
	1		W1168	003	20		35-21-14	150-199, 275
	2		W1168	102	20		35-21-14	050-099, 276-299
	2		W1168	004	20		35-21-14	150-199, 275
D01044		0434/270/L075		RCPT-				050-099
D01044		0444/270/L075		RCPT-				150-199
D01044		456/270/L075		RCPT-				275-278
D01044		445/270/L073		RCPT-				280-299
	1		W0718	007	20		35-21-12	ALL
	2		W0718	008	20		35-21-12	ALL
D01046		0463/270/R073		RCPT-				ALL
	1		W0722	010	20		35-21-13	ALL
	2		W0722	011	20		35-21-13	ALL
D01048		0493/270/R073		RCPT-				ALL
	1		W0722	013	20		35-21-13	ALL
	2		W0722	014	20		35-21-13	ALL
D01050		0522/270/R073		RCPT-				ALL
	1		W0722	016	20		35-21-13	ALL
	2		W0722	017	20		35-21-13	ALL
D01052		0551/270/R073		RCPT-				ALL
	1		W0722	018	20		35-21-13	ALL
	2		W0722	019	20		35-21-13	ALL
D01054		0581/270/R073		RCPT-				ALL
	1		W0722	021	20		35-21-13	ALL
	2		W0722	022	20		35-21-13	ALL
D01056		0610/270/R073		RCPT-				ALL
	1		W0722	024	20		35-21-13	ALL
	2		W0722	025	20		35-21-13	ALL
D01058		0639/270/R073		RCPT-				050-099, 150-199, 275-278
D01058		0630/270/R073		RCPT-				280-299
	1		W0722	027	20		35-21-13	ALL

HOOKUP LIST

D280T132

91-21-51

Section D01000

Page 4

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01058		0639/270/R073		RCPT- (continued)				050-099, 150-199, 275-278
D01058		0630/270/R073		RCPT- (continued)				280-299
	2		W0722	028	20		35-21-13	ALL
D01060		0669/270/R073		RCPT-				050-099
D01060		0656/270/R073		RCPT-				275-278
D01060		0665/270/R073		RCPT-				280-299
	1		W0722	031	20		35-21-13	050-099, 275-299
	2		W0722	032	20		35-21-13	050-099, 275-299
D01062		0698/270/R073		RCPT-				050-099
D01062		0700/270/R073		RCPT-				150-199
D01062		0682/270/R073		RCPT-				275-278
D01062		0684/270/R073		RCPT-				280-299
	1		W0722	034	20		35-21-13	050-099, 150-199
	1		W0728	073	20		35-21-13	275-299
	2		W0722	035	20		35-21-13	050-099, 150-199
	2		W0728	074	20		35-21-13	275-299
D01067E		270/ I		PLUG				150, 153, 157, 165-199
	1		W9159	001	12		25-25-23	150, 153, 157, 165-199
	2		W9159	002	12		25-25-23	150, 153, 157, 165-199
	3		W9159	003	12		25-25-23	150, 153, 157, 165-199
	4		W9159	004	12		25-25-23	150, 153, 157, 165-199
	5		W9159	005	12		25-25-23	150, 153, 157, 165-199
D01067F		270/ I		PLUG				150, 153, 157, 165-199
	2		W9160	104	20		25-25-23	150, 153, 157, 165-199
	2		W9160	108	20		25-25-23	150, 153, 157, 165-199
	4		W9160	107	20		25-25-23	150, 153, 157, 165-199
	5		W9160	103	20		25-25-23	150, 153, 157, 165-199
	18		W9160	101	20		25-25-23	150, 153, 157, 165-199
	20		W9160	105	20		25-25-23	150, 153, 157, 165-199
	20		W9160	106	20		25-25-23	150, 153, 157, 165-199
= CC		D	W9160	FRA			25-25-23	150, 153, 157, 165-199
			W9160	101Z			25-25-23	150, 153, 157, 165-199
			W9160	103Z			25-25-23	150, 153, 157, 165-199
			W9160	104Z			25-25-23	150, 153, 157, 165-199
			W9160	105Z			25-25-23	150, 153, 157, 165-199
			W9160	106Z			25-25-23	150, 153, 157, 165-199
			W9160	107Z			25-25-23	150, 153, 157, 165-199

HOOKUP LIST

D280T132

91-21-51

Section D01000

Page 5

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01067F		270/ /		PLUG (continued)				150, 153, 157, 165-199
			W9160	108Z			25-25-23	150, 153, 157, 165-199
			W9160	FRA			25-25-23	150, 153, 157, 165-199
D01068		P005-00/ /		PLUG-P5				ALL
	1		W0066	303B	24		21-61-31	ALL
	2		W0066	303R	24		21-61-31	ALL
	3		W0066	303Y	24		21-61-31	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9		W0066	069	20		21-61-31	ALL
	10		W0066	070	24		21-61-31	ALL
	11	UNUSED						ALL
	12		W0066	062	20		21-61-31	ALL
D01074		P049-00/ /		RELAY SOCKET-P49				275-299
	A1		W1050	055	20		24-32-41	275-299
	A2		W1050	054	20		24-32-41	275-299
	A3	UNUSED						275-299
	B1	UNUSED						275-299
	B2	UNUSED						275-299
	B3	UNUSED						275-299
	X1		W1050	025	20		24-32-41	275-299
	X2		W1050	053	20		24-32-41	275-299
D01076		P049-00/ /		PLUG-E6				275-299
	A		W1050	001	20		24-32-41	275-299
	B		W1050	002	20		24-32-41	275-299
	C		W1050	003	20		24-32-41	275-299
	D		W1050	008	08		24-32-41	275-299
	E		W1050	007	08		24-32-41	275-299
	F		W1050	006	08		24-32-41	275-299
	G		W1050	004	20		24-32-41	275-299
	H		W1050	005	20		24-32-41	275-299
	I		W1050	009	20		24-32-41	275-299

HOOKUP LIST

D280T132

91-21-51

Section D01000

Page 6

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01080		0577/203/L092		PLUG-				050-099
D01080		0511/203/L092		PLUG-				150-199
D01080		0467/203/L092		PLUG-				275-299
	1		W0788	074	20		33-51-21	ALL
	2		W0788	065	20		33-51-21	ALL
	3		W0788	068	22		33-51-21	ALL
	4		W0788	066	22		33-51-21	ALL
	5		W0788	069	22		33-51-21	ALL
	6		W0788	069	22		33-51-21	ALL
	7		W0788	073	20		33-51-21	ALL
	8		W0788	070	22		33-51-21	ALL
	9		W0788	082	20		33-51-21	ALL
	10		W0788	081	20		33-51-21	ALL
	11		W0788	077	20		33-51-21	ALL
	12		W0788	080	20		33-51-21	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20		W0788	067	22		33-51-21	ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24		W0788	067	22		33-51-21	ALL
D01082		0880/208/R090		PLUG-				050-099
D01082		1032/208/R90		PLUG-				150-199
D01082		0966/210/R080		PLUG-				275-299
	1	DK	W0786	046	18		25-65-12	ALL
	2		W0786	047	22		25-65-12	ALL
	3		W0786	059	20		25-65-12	ALL
	4		W0786	058	20		25-65-12	ALL
	5		W0786	044	22		25-65-12	ALL
	6		W0786	044	22		25-65-12	ALL
	7		W0786	045	20		25-65-12	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D01000

Page 7

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01082		0880/208/R090		PLUG- (continued)				050-099
D01082		1032/208/R90		PLUG- (continued)				150-199
D01082		0966/210/R080		PLUG- (continued)				275-299
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	DK	W0786	042	18		25-65-12	ALL
	14	UNUSED						ALL
	15	DK	W0786	041	18		25-65-11	ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18		W0786	043	22		25-65-12	ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24		W0786	043	22		25-65-12	ALL
D01084		0511/203/L092		PLUG-				050-099
D01084		0489/203/L092		PLUG-				150-199
D01084		0445/203/L092		PLUG-				275-299
	1		W0784	016	20		33-51-11	ALL
	2		W0784	004	20		33-51-11	ALL
	3		W0784	007	22		33-51-11	ALL
	4		W0784	005	22		33-51-11	ALL
	5		W0784	015	22		33-51-11	ALL
	6		W0784	015	22		33-51-11	ALL
	7		W0784	014	20		33-51-11	ALL
	8		W0784	011	22		33-51-11	ALL
	9		W0784	119	22		33-51-13	050-099, 150-157
	9	DK	W0784	119	18		33-51-13	162-199
	9		W0784	119	20		33-51-17	275-299
	10		W0784	031	22		33-51-13	050-099, 150-157, 275-299
	10		W0784	031	20		33-51-13	162-199
	11		W0784	030	20		33-51-13	050-099, 162-199
	11		W0784	030	22		33-51-13	150-157, 275-299
	12	DK	W0784	029	18		33-51-13	ALL
	13	DK	W0784	028	18		33-51-13	050-099, 150-157
	13	DK	W0784	028	20		33-51-13	162-199
	13		W0784	028	22		33-51-13	275-299
	14		W0784	027	22		33-51-13	ALL

HOOKUP LIST

D280T132

91-21-51

Section D01000

Page 8

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01084		0511/203/L092		PLUG- (continued)				050-099
D01084		0489/203/L092		PLUG- (continued)				150-199
D01084		0445/203/L092		PLUG- (continued)				275-299
	15		W0784	026	20		33-51-13	ALL
	16	UNUSED						050-099
	16		W0784	025	20		33-51-13	150-199, 275-299
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20		W0784	077	22		33-51-13	ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24		W0784	077	22		33-51-13	ALL
D01086		0880/208/L090		PLUG-				050-099
D01086		1010/208/L090		PLUG-				150-199
D01086		0975/210/L090		PLUG-				275-299
	1	DK	W0786	053	18		25-65-11	ALL
	2		W0786	054	22		25-65-11	ALL
	3		W0786	061	20		25-65-11	ALL
	4		W0786	060	20		25-65-11	ALL
	5		W0786	051	22		25-65-11	ALL
	6		W0786	051	22		25-65-11	ALL
	7		W0786	052	20		25-65-11	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	DK	W0786	049	18		25-65-11	ALL
	14	UNUSED						ALL
	15	DK	W0786	048	18		25-65-12	ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18		W0786	050	22		25-65-11	ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D01000
Page 9
Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01086		0880/208/L090		PLUG- (continued)				050-099
D01086		1010/208/L090		PLUG- (continued)				150-199
D01086		0975/210/L090		PLUG- (continued)				275-299
	24		W0786	050	22		25-65-11	ALL
D01088		0922/203/L092		PLUG-				050-099
D01088		1032/203/L092		PLUG-				150-199
D01088		0988/203/L092		PLUG-				275-299
	1		W0790	029	20		33-51-11	ALL
	2		W0790	652	20		33-51-11	050-099, 150-199
	2		W0790	031	20		33-51-11	275-299
	3		W0790	032	22		33-51-11	ALL
	4		W0790	651	22		33-51-11	050-099, 150-199
	4		W0790	033	22		33-51-11	275-299
	5		W0790	034	22		33-51-11	ALL
	6		W0790	034	22		33-51-11	ALL
	7		W0790	028	20		33-51-11	ALL
	8		W0790	030	22		33-51-11	ALL
	9		W0790	056	20		33-51-13	050-099
	9	DK	W0790	056	18		33-51-13	150-199, 275-299
	10	DK	W0790	036	18		33-51-13	ALL
	11	DK	W0790	037	18		33-51-13	ALL
	12	DK	W0790	048	18		33-51-13	ALL
	13	DK	W0790	119	18		33-51-13	050-099, 150-199
	13		W0790	119	20		33-51-17	275-299
	14	FM	W0790	044	16		33-51-13	050-099
	14	UNUSED						150-199, 275-299
	15		W0790	043	20		33-51-13	ALL
	16	UNUSED						050-099
	16	DK	W0790	042	18		33-51-13	150-199, 275-299
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20		W0790	047	22		33-51-13	ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24		W0790	047	22		33-51-13	ALL
D01090		P036-00/ /		RELAY SOCKET-				ALL
	A1		W0184	135	22		28-21-12	ALL

HOOKUP LIST

D280T132

91-21-51

Section D01000

Page 10

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01090		P036-00/ /		RELAY SOCKET- (continued)				ALL
	A2		W0184	134	22		28-21-12	ALL
	A3	UNUSED						ALL
	B1		W0184	145	20		28-21-13	ALL
	B2		W0184	144	20		28-21-13	ALL
	B3	UNUSED						ALL
	X1		W0184	113	22		28-21-12	ALL
	X2		W0184	133	22		28-21-12	ALL
D01094		0757/270/R073		RCPT-				050-099
D01094		0742/270/R073		RCPT-				275-278
D01094		0743/270/R073		RCPT-				280-299
	1		W0722	040	20		35-21-13	050-099
	1		W0728	078	20		35-21-13	275-299
	2		W0722	041	20		35-21-13	050-099
	2		W0728	079	20		35-21-13	275-299
D01096		0787/270/R073		RCPT-				050-099
D01096		0798/270/R073		RCPT-				150-199, 275-278
D01096		0800/270/R073		RCPT-				280-299
	1		W0722	043	20		35-21-13	050-099
	1		W0728	083	20		35-21-13	150-199, 275-299
	2		W0722	044	20		35-21-13	050-099
	2		W0728	084	20		35-21-13	150-199, 275-299
D01098		830/270/R073		RCPT-				150-199
	1		W0728	088	20		35-21-13	150-199
	2		W0728	089	20		35-21-13	150-199

HOOKUP LIST

D280T132

91-21-51

Section D01000

Page 11 End

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01100		0840/270/R073		RCPT-				050-099
D01100		0845/270/R073		RCPT-				275-299
	1		W0722	048	20		35-21-13	050-099
	1		W0728	088	20		35-21-13	275-299
	2		W0722	049	20		35-21-13	050-099
	2		W0728	089	20		35-21-13	275-299
D01102		0875/270/R073		RCPT-				ALL
	1		W0722	051	20		35-21-13	050-099
	1		W0728	091	20		35-21-13	150-199, 275-299
	2		W0722	052	20		35-21-13	050-099
	2		W0728	092	20		35-21-13	150-199, 275-299
D01104		0893/270/R073		RCPT-				050-099
D01104		0896/270/R073		RCPT-				150-199, 275-299
	1		W0722	054	20		35-21-13	050-099
	1		W0728	093	20		35-21-13	150-199, 275-299
	2		W0722	055	20		35-21-13	050-099
	2		W0728	094	20		35-21-13	150-199, 275-299
D01106		0926/270/R073		RCPT-				ALL
	1		W0722	057	20		35-21-13	050-099
	1		W0728	096	20		35-21-13	150-199, 275-299
	2		W0722	058	20		35-21-13	050-099
	2		W0728	097	20		35-21-13	150-199, 275-299
D01108		0940/270/R073		RCPT-				050-099
D01108		969/270/R073		RCPT-				150-199
D01108		0955/270/R073		RCPT-				275-299
	1		W0722	061	20		35-21-13	050-099
	1		W0728	098	20		35-21-13	150-199, 275-299
	2		W0722	062	20		35-21-13	050-099
	2		W0728	099	20		35-21-13	150-199, 275-299
D01110		0970/270/R073		RCPT-				050-099
D01110		0983/270/R073		RCPT-				275-299
	1		W0722	063	20		35-21-13	050-099
	1		W0728	100	20		35-21-13	275-299
	2		W0722	064	20		35-21-13	050-099
	2		W0728	101	20		35-21-13	275-299

HOOKUP LIST

D280T132

91-21-51

Section D01100

Page 1

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01112		0999/279/R073		RCPT-				050-099
D01112		1013/270/R073		RCPT-				150-199, 275-299
	1		W0722	065	20		35-21-13	050-099
	1		W0728	103	20		35-21-13	150-199, 275-299
	2		W0722	066	20		35-21-13	050-099
	2		W0728	104	20		35-21-13	150-199, 275-299
D01114		1043/270/L073		RCPT-				275-299
	1		W0724	003	20		35-21-12	275-299
	2		W0724	004	20		35-21-12	275-299
D01116		1047/270/L073		RCPT-				050-099
D01116		1071/270/L073		RCPT-				150-199, 275-299
	1		W0724	006	20		35-21-12	ALL
	2		W0724	007	20		35-21-12	ALL
D01118		1097/270/L073		RCPT-				050-099
D01118		1101/270/L073		RCPT-				150-199, 275-299
	1		W0724	009	20		35-21-12	ALL
	2		W0724	010	20		35-21-12	ALL
D01120		1116/270/L073		RCPT-				050-099
D01120		1131/270/L073		RCPT-				150-199, 275-299
	1		W0724	011	20		35-21-12	ALL
	2		W0724	012	20		35-21-12	ALL
D01122		0555/203/R092		PLUG-				050-099
D01122		0555/206/R090		PLUG-				150-199
D01122		0423/206/R090		PLUG-				275-299
	1		W0786	030	20		33-51-21	ALL
	2		W0786	032	22		33-51-21	ALL
	3		W0786	033	22		33-51-21	ALL
	4		W0786	034	22		33-51-21	ALL
	5		W0786	035	22		33-51-21	ALL
	6		W0786	035	22		33-51-21	ALL
	7		W0786	029	20		33-51-21	ALL
	8		W0786	031	22		33-51-21	ALL
	9	FM	W0786	036	16		33-51-21	ALL
	10		W0786	038	20		33-51-21	ALL
	11		W0786	062	20		33-51-21	ALL

HOOKUP LIST

D280T132

91-21-51

Section D01100

Page 2

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01122		0555/203/R092		PLUG- (continued)				050-099
D01122		0555/206/R090		PLUG- (continued)				150-199
D01122		0423/206/R090		PLUG- (continued)				275-299
	12		W0786	063	20		33-51-21	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20		W0786	056	22		33-51-21	ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24		W0786	056	22		33-51-21	ALL
D01124		L0330/14/ET		PLUG-				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W0450	201B	18		25-65-11	ALL
	4		W0450	201R	18		25-65-11	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
D01126		1010/203/R092		PLUG-				ALL
	1		W1222	055	20		33-51-11	ALL
	2		W1222	647	22		33-51-11	050-099, 150-199
	2		W1222	053	22		33-51-11	275-299
	3		W1222	649	22		33-51-11	050-099, 150-199
	3		W1222	056	22		33-51-11	275-299
	4		W1222	648	22		33-51-11	050-099, 150-199
	4		W1222	054	22		33-51-11	275-299
	5		W1222	059	22		33-51-11	ALL
	6		W1222	059	22		33-51-11	ALL
	7		W1222	057	20		33-51-11	ALL
	8		W1222	058	22		33-51-11	ALL
	9	FM	W1222	068	16		33-51-12	050-099
	9	DK	W1222	068	18		33-51-12	150-199, 275-299
	10		W1222	511	20		33-51-12	050-099

HOOKUP LIST

D280T132

91-21-51

Section D01100

Page 3

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01126		1010/203/R092		PLUG- (continued)				ALL
	10		W1222	067	20		33-51-12	150-199, 275-299
	11		W1222	066	20		33-51-12	ALL
	12	UNUSED						050-099
	12	FM	W1222	065	16		33-51-12	150-199, 275-299
	13	UNUSED						050-099
	13	DK	W1222	118	20		33-51-12	150-199
	13		W1222	118	20		33-51-16	275-299
	14	UNUSED						050-099
	14	DK	W1222	082	18		33-51-12	150-199, 275-299
	15		W1222	062	22		33-51-12	ALL
	16		W1222	061	20		33-51-12	ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20		W1222	063	22		33-51-12	ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24		W1222	063	22		33-51-12	ALL
D01128		1153/170/R080		PLUG-				ALL
	A	FM	W0658	022	16		25-65-12	ALL
	B	FM	W0658	024	16		25-65-12	ALL
	C	UNUSED						ALL
	D	UNUSED						ALL
	E	UNUSED						ALL
	F	UNUSED						ALL
D01130		1153/170/L080		PLUG-				ALL
	A	FM	W0596	135	16		25-65-11	ALL
	B	FM	W0596	136	16		25-65-11	ALL
	C	UNUSED						ALL
	D	UNUSED						ALL
	E	UNUSED						ALL
	F	UNUSED						ALL
D01134		0463/270/L075		RCPT-				050-099, 150-199, 275-278
D01134		0464/270/L073		RCPT-				280-299
	1		W0718	010	20		35-21-12	ALL
	2		W0718	011	20		35-21-12	ALL

HOOKUP LIST
D280T132

91-21-51
Section D01100
Page 4
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01136		0352/184/L067		PLUG-				ALL
	1		W0606	121	20		26-16-21	ALL
	2		W0606	122	20		26-16-21	ALL
	3		W0606	155	20		26-16-21	ALL
D01138		352/163/L067		PLUG-				ALL
	1		W0692	001	20		26-16-21	ALL
	2		W0692	002	20		26-16-21	ALL
	3		W0692	003	20		26-16-21	ALL
D01140		1406/137/L071		PLUG-				ALL
	1		W0606	131	20		26-16-21	ALL
	2		W0606	132	20		26-16-21	ALL
	3		W0606	157	20		26-16-21	ALL
D01142		1406/137/L071		PLUG-				ALL
	1		W0694	001	20		26-16-21	ALL
	2		W0694	002	20		26-16-21	ALL
	3		W0694	003	20		26-16-21	ALL
D01144		0610/270/L075		RCPT-				050-099, 150-199, 275-278
D01144		0611/270/L073		RCPT-				280-299
	1		W0718	024	20		35-21-12	ALL
	2		W0718	025	20		35-21-12	ALL
D01146		0639/270/L075		RCPT-				050-099, 150-199, 275-278
D01146		0640/270/L073		RCPT-				280-299
	1		W0718	027	20		35-21-12	ALL
	2		W0718	028	20		35-21-12	ALL
D01148		0669/270/L075		RCPT-				050-099
D01148		0656/270/L075		RCPT-				275-278
D01148		0666/270/L073		RCPT-				280-299
	1		W0718	030	20		35-21-12	050-099, 275-299
	2		W0718	031	20		35-21-12	050-099, 275-299
D01150		0698/270/L075		RCPT-				050-099
D01150		0700/270/L075		RCPT-				150-199
D01150		0682/270/L073		RCPT-				275-299
	1		W0718	033	20		35-21-12	050-099, 150-199

HOOKUP LIST

D280T132

91-21-51

Section D01100

Page 5

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01150		0698/270/L075		RCPT- (continued)				050-099
D01150		0700/270/L075		RCPT- (continued)				150-199
D01150		0682/270/L073		RCPT- (continued)				275-299
	1		W0724	073	20		35-21-12	275-299
	2		W0718	034	20		35-21-12	050-099, 150-199
	2		W0724	074	20		35-21-12	275-299
D01152		0727/270/L075		RCPT-				050-099
D01152		0737/270/L075		RCPT-				150-199
D01152		0712/270/L073		RCPT-				275-278
D01152		0714/270/L073		RCPT-				280-299
	1		W0718	036	20		35-21-12	050-099, 150-199
	1		W0724	076	20		35-21-12	275-299
	2		W0718	037	20		35-21-12	050-099, 150-199
	2		W0724	077	20		35-21-12	275-299
D01154		0757/270/L075		RCPT-				050-099
D01154		0742/270/L073		RCPT-				275-278
D01154		0743/270/L073		RCPT-				280-299
	1		W0718	039	20		35-21-12	050-099
	1		W0724	078	20		35-21-12	275-299
	2		W0718	040	20		35-21-12	050-099
	2		W0724	079	20		35-21-12	275-299
D01156		0786/270/L075		RCPT-				050-099
D01156		801/270/L073		RCPT-				150-199
D01156		0797/270/L073		RCPT-				275-278
D01156		0800/270/L073		RCPT-				280-299
	1		W0718	042	20		35-21-12	050-099
	1		W0724	083	20		35-21-12	150-199, 275-299
	2		W0718	043	20		35-21-12	050-099
	2		W0724	084	20		35-21-12	150-199, 275-299
D01158		830/270/L073		RCPT-				150-199
	1		W0724	088	20		35-21-12	150-199
	2		W0724	089	20		35-21-12	150-199
D01160		0840/270/L075		RCPT-				050-099
D01160		0845/270/L073		RCPT-				275-299
	1		W0718	047	20		35-21-12	050-099

HOOKUP LIST

D280T132

91-21-51

Section D01100

Page 6

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01160		0840/270/L075		RCPT- (continued)				050-099
D01160		0845/270/L073		RCPT- (continued)				275-299
	1		W0724	088	20		35-21-12	275-299
	2		W0718	048	20		35-21-12	050-099
	2		W0724	089	20		35-21-12	275-299
D01162		0946/127/L065		PLUG-				ALL
	1		W0938	037	20		36-11-11	ALL
	2		W0938	038	20		36-11-11	ALL
	3		W0938	043	18		36-11-11	ALL
	4		W0938	039	20		36-11-11	ALL
	5		W0938	041	18		36-11-11	ALL
	6		W0938	042	18		36-11-11	ALL
	7		W0938	040	20		36-11-11	ALL
D01164		P061-00/ /		PLUG-P61				ALL
	1	UNUSED						ALL
	2		W0066	04B	20		25-65-12	ALL
	3		W0066	04C	22		25-65-12	ALL
	4	UNUSED						ALL
	5		W0066	04E	22		25-65-12	ALL
	6		W0066	04F	22		25-65-11	ALL
	7		W0066	04G	22		25-65-12	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10		W0066	04K	20		25-65-12	ALL
	11	UNUSED						ALL
	12		W0066	04M	22		25-65-12	ALL
D01166		R0344/12/TE		PLUG-				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W0452	201B	18		25-65-12	ALL
	4		W0452	201R	18		25-65-12	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
D01172		P036-00/ /		RELAY SOCKET-P36				ALL
	A1		W0176	224R	24		32-42-11	ALL
	A2		W0176	226R	24		32-42-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D01100

Page 7

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01172		P036-00/ /		RELAY SOCKET-P36 (continued)				ALL
	A3		W0176	225R	24		32-42-11	ALL
	B1		W0176	224B	24		32-42-11	ALL
	B2		W0176	226B	24		32-42-11	ALL
	B3		W0176	225B	24		32-42-11	ALL
	X1		W0176	708	24		32-42-11	ALL
	X2		W0176	707	24		32-42-11	ALL
			W0176	224Z			32-42-11	ALL
			W0176	225Z			32-42-11	ALL
			W0176	226Z			32-42-11	ALL
			W0176	713	20		32-42-11	ALL
D01174A		//		PLUG-PART OF D01174				ALL
	A01		W0082	224B	24		21-52-41	ALL
	A02		W0082	224R	24		21-52-41	ALL
	A03	UNUSED						ALL
	A04	UNUSED						ALL
	A05		W0082	401B	24		21-52-41	ALL
	A06		W0082	401R	24		21-52-41	ALL
	A07	UNUSED						ALL
	A08	UNUSED						ALL
	A09	UNUSED						ALL
	A10	UNUSED						ALL
	A11	UNUSED						ALL
	A12	UNUSED						ALL
	A13	UNUSED						ALL
	A14	UNUSED						ALL
	A15	UNUSED						ALL
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04	UNUSED						ALL
	B05		W0082	219R	24		21-52-41	ALL
	B06		W0082	219B	24		21-52-41	ALL
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D01100

Page 8

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01174A		//		PLUG-PART OF D01174 (continued)				ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	C01	UNUSED						ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05		W0082	220R	24		21-52-41	ALL
	C06		W0082	220B	24		21-52-41	ALL
	C07	UNUSED						ALL
	C08	UNUSED						ALL
	C09	UNUSED						ALL
	C10	UNUSED						ALL
	C11	UNUSED						ALL
	C12	UNUSED						ALL
	C13	UNUSED						ALL
	C14	UNUSED						ALL
	C15	UNUSED						ALL
	D01	UNUSED						ALL
	D02	UNUSED						ALL
	D03	UNUSED						ALL
	D04	UNUSED						ALL
	D05		W0082	401Y	24		21-52-41	ALL
	D06		W0082	401G	24		21-52-41	ALL
	D07	UNUSED						ALL
	D08	UNUSED						ALL
	D09	UNUSED						ALL
	D10	UNUSED						ALL
	D11	UNUSED						ALL
	D12	UNUSED						ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15		W0082	106	22		21-52-41	ALL
	DED		W0082	106Z			21-52-41	ALL
	DED		W0082	219Z			21-52-41	ALL
	DED		W0082	220Z			21-52-41	ALL
	DED		W0082	224Z			21-52-41	ALL
	DED		W0082	401Z			21-52-41	ALL
D01174B		//		PLUG-PART OF D01174				ALL
	A01		W0082	223B	24		21-52-41	ALL

HOOKUP LIST

D280T132

91-21-51

Section D01100

Page 9

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01174B		//		PLUG-PART OF D01174 (continued)				ALL
	A02		W0082	223R	24		21-52-41	ALL
	A03	UNUSED						ALL
	A04	UNUSED						ALL
	A05		W0082	402B	24		21-52-41	ALL
	A06		W0082	402R	24		21-52-41	ALL
	A07	UNUSED						ALL
	A08	UNUSED						ALL
	A09	UNUSED						ALL
	A10	UNUSED						ALL
	A11	UNUSED						ALL
	A12	UNUSED						ALL
	A13	UNUSED						ALL
	A14	UNUSED						ALL
	A15		W0082	105	22		21-52-41	ALL
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04	UNUSED						ALL
	B05		W0082	221R	24		21-52-41	ALL
	B06		W0082	221B	24		21-52-41	ALL
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13	UNUSED						ALL
	B14		W0082	104	24		21-52-41	ALL
	B15	UNUSED						ALL
	C01	UNUSED						ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05		W0082	222R	24		21-52-41	ALL
	C06		W0082	222B	24		21-52-41	ALL
	C07	UNUSED						ALL
	C08	UNUSED						ALL
	C09	UNUSED						ALL
	C10	UNUSED						ALL
	C11	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D01100

Page 10

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01174B		//		PLUG-PART OF D01174 (continued)				ALL
	C12	UNUSED						ALL
	C13	UNUSED						ALL
	C14	UNUSED						ALL
	C15	UNUSED						ALL
	D01	UNUSED						ALL
	D02	UNUSED						ALL
	D03	UNUSED						ALL
	D04	UNUSED						ALL
	D05		W0082	402Y	24		21-52-41	ALL
	D06		W0082	402G	24		21-52-41	ALL
	D07	UNUSED						ALL
	D08	UNUSED						ALL
	D09	UNUSED						ALL
	D10	UNUSED						ALL
	D11	UNUSED						ALL
	D12	UNUSED						ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15	UNUSED						ALL
	DED		W0082	104Z			21-52-41	ALL
D01174C		//		PLUG-PART OF D01174				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	= C1	UNUSED						ALL
	= C5	UNUSED						ALL
D01176		P022-00/ /		RCPT-				050-099
D01176		P022-00/ /		RCPT-P22				150-199, 275-299
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W0966	203R	24		38-14-11	ALL
	7		W0966	203B	24		38-14-11	ALL
	8		W0966	025	20		38-32-11	ALL

HOOKUP LIST
D280T132

91-21-51
Section D01100
Page 11
Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01176		P022-00/ /		RCPT- (continued)				050-099
D01176		P022-00/ /		RCPT-P22 (continued)				150-199, 275-299
	9		W0966	026	22		38-32-11	050-099, 275-299
	9		W0966	026	20		38-32-11	150-199
	10		W0966	036	20		38-32-11	ALL
	11		W0966	033	22		38-32-11	ALL
	12		W0966	029	22		38-32-11	ALL
	13		W0966	028	22		38-32-11	050-099, 275-299
	13		W0966	028	20		38-32-11	150-199
	14		W0966	015	20		38-14-11	ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17		W0966	057	20		38-32-11	ALL
	18		W0966	058	20		38-32-11	050-099, 150-154, 162-165
	18		W0966	058	20		38-32-15	155-157, 166-199, 277-299
	18		W0966	058	20		38-32-14	275-276
	19		W0966	056	20		38-32-11	ALL
	20		W0966	054	20		38-32-11	ALL
	21		W0966	055	20		38-32-11	050-099, 150-155, 162-165
	21		W0966	055	20		38-32-15	156-157, 166-199, 277-299
	21		W0966	055	20		38-32-14	275-276
	22		W0966	023	20		38-32-11	ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						050-099, 155, 162-165
	25		W0966	079	20		38-32-11	156-157, 166-199, 275-299
	26	UNUSED						050-099, 155, 162-165
	26		W0966	082	22		38-32-11	156-157, 166-199, 275-299
	27	UNUSED						050-099, 155, 162-165
	27		W0966	077	22		38-32-11	156-157, 166-199, 275-299
	28	UNUSED						050-099, 155, 162-165
	28		W0966	081	22		38-32-11	156-157, 166-199, 275-299
	29	UNUSED						050-099, 155, 162-165
	29		W0966	080	22		38-32-11	156-157, 166-199, 275-299
	30	UNUSED						050-099, 155, 162-165
	30		W0966	076	22		38-32-11	156-157, 166-199, 275-299
	31	UNUSED						050-099, 155, 162-165
	31		W0966	075	22		38-32-11	156-157, 166-199, 275-299
	DED		W0966	058Z			38-32-11	050-099, 155, 162-165
	DED		W0966	057Z			38-32-11	050-099, 155-199, 275-299
	DED		W0966	080Z			38-32-11	156-157, 166-199, 275-299

HOOKUP LIST

D280T132

91-21-51

Section D01100

Page 12

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01176		P022-00/ /		RCPT- (continued)				050-099
D01176		P022-00/ /		RCPT-P22 (continued)				150-199, 275-299
	DED		W0966	082Z			38-32-11	156-157, 166-199, 275-299
	DED		W0966	058Z			38-32-15	156-157, 166-199, 277-299
	DED		W0966	058Z			38-32-14	275-276
D01178		P037-00/ /		RELAY SOCKET-				ALL
	1		W0198	562R	22		26-17-11	ALL
	2		W0198	566R	20		26-17-11	ALL
	3	UNUSED						ALL
	4		W0198	565R	20		26-17-11	ALL
	5		W0198	569R	22		26-17-11	ALL
	6		W0198	563R	22		26-17-11	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12		W0198	564R	22		26-17-11	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
D01180		0875/270/L075		RCPT-				050-099
D01180		859/270/L073		RCPT-				150-199
D01180		0875/270/L073		RCPT-				275-299
	1		W0718	050	20		35-21-12	050-099
	1		W0724	091	20		35-21-12	150-199, 275-299
	2		W0718	051	20		35-21-12	050-099
	2		W0724	092	20		35-21-12	150-199, 275-299
D01182		0893/270/L075		RCPT-				050-099
D01182		889/270/L073		RCPT-				150-199
D01182		0896/270/L073		RCPT-				275-299
	1		W0718	053	20		35-21-12	050-099
	1		W0724	093	20		35-21-12	150-199, 275-299
	2		W0718	054	20		35-21-12	050-099
	2		W0724	094	20		35-21-12	150-199, 275-299

HOOKUP LIST

D280T132

91-21-51

Section D01100

Page 13

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01184		0926/270/L075		RCPT-				050-099
D01184		919/270/L073		RCPT-				150-199
D01184		0926/270/L073		RCPT-				275-299
	1		W0718	056	20		35-21-12	050-099
	1		W0724	096	20		35-21-12	150-199, 275-299
	2		W0718	057	20		35-21-12	050-099
	2		W0724	097	20		35-21-12	150-199, 275-299
D01186		0940/270/L075		RCPT-				050-099
D01186		969/270/L073		RCPT-				150-199
D01186		0955/270/L073		RCPT-				275-299
	1		W0718	059	20		35-21-12	050-099
	1		W0724	098	20		35-21-12	150-199, 275-299
	2		W0718	060	20		35-21-12	050-099
	2		W0724	099	20		35-21-12	150-199, 275-299
D01188		0970/270/L075		RCPT-				050-099
D01188		0983/270/L073		RCPT-				275-299
	1		W0718	062	20		35-21-12	050-099
	1		W0724	100	20		35-21-12	275-299
	2		W0718	063	20		35-21-12	050-099
	2		W0724	101	20		35-21-12	275-299
D01190		0999/270/L075		RCPT-				050-099
D01190		1007/270/L073		RCPT-				150-199
D01190		1013/270/L073		RCPT-				275-299
	1	FM	W0718	066	16		35-21-12	050-099
	1		W0724	102	20		35-21-12	150-199, 275-299
	2		W0718	064	20		35-21-12	050-099
	2		W0724	103	20		35-21-12	150-199, 275-299
D01192		0396/280/L005		RCPT-				ALL
	1		W1160	111	20		35-21-14	050-099, 276-299
	1		W1160	006	20		35-21-14	150-199, 275
	2		W1160	112	20		35-21-14	050-099, 276-299
	2		W1160	007	20		35-21-14	150-199, 275
D01194		0427/280/L005		RCPT-				ALL
	1		W1160	121	20		35-21-14	050-099, 276-299
	1		W1160	009	20		35-21-14	150-199, 275

HOOKUP LIST

D280T132

91-21-51

Section D01100

Page 14

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01194		0427/280/L005		RCPT- (continued)				ALL
	2		W1160	122	20		35-21-14	050-099, 276-299
	2		W1160	010	20		35-21-14	150-199, 275
D01196		0453/280/L005		RCPT-				ALL
	1		W1160	131	20		35-21-14	050-099, 276-299
	1		W1160	012	20		35-21-14	150-199, 275
	2		W1160	132	20		35-21-14	050-099, 276-299
	2		W1160	013	20		35-21-14	150-199, 275
D01198		0480/280/L005		RCPT-				ALL
	1		W1160	141	20		35-21-14	050-099, 276-299
	1		W1160	015	20		35-21-14	150-199, 275
	2		W1160	142	20		35-21-14	050-099, 276-299
	2		W1160	016	20		35-21-14	150-199, 275

HOOKUP LIST
D280T132

91-21-51
Section D01100
Page 15 End
Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01200		0504/280/L005		RCPT-				ALL
	1		W1162	101	20		35-21-14	050-099, 276-299
	1		W1162	003	20		35-21-14	150-199, 275
	2		W1162	102	20		35-21-14	050-099, 276-299
	2		W1162	004	20		35-21-14	150-199, 275
D01202		0528/280/L005		RCPT-				ALL
	1		W1162	111	20		35-21-14	050-099, 276-299
	1		W1162	006	20		35-21-14	150-199, 275
	2		W1162	112	20		35-21-14	050-099, 276-299
	2		W1162	007	20		35-21-14	150-199, 275
D01204		0559/280/L005		RCPT-				ALL
	1		W1162	121	20		35-21-14	050-099, 276-299
	1		W1162	008	20		35-21-14	150-199, 275
	2		W1162	122	20		35-21-14	050-099, 276-299
	2		W1162	009	20		35-21-14	150-199, 275
D01205		AP0002/ /		RECP-MOA PER DWG REF BACC45FN20-28S				050-099, 150-199
	1		W0047	051	24		23-32-12	050-099, 150-199
	2		W0047	052	24		23-32-12	050-099, 150-199
	3		W0047	FRB			23-32-12	050-099, 150-199
	4		W0047	054	24		23-32-12	050-099, 150-199
	5		W0047	055	24		23-32-12	050-099, 150-199
	6		W0047	056	24		23-32-12	050-099, 150-199
	7		W0047	057	24		23-32-12	050-099, 150-199
	8	UNUSED						050-099, 150-199
	9		W0047	059	24		23-32-12	050-099, 150-199
	10		W0047	059Z			23-32-12	050-099, 150-199
	11		W0047	061	24		23-32-12	050-099, 150-199
	12		W0047	538	20		23-32-11	050-099, 150-199
	13		W0047	539	20		23-32-11	050-099, 150-199
	14	UNUSED						050-099, 150-199
	15		W0047	065	14		23-32-11	050-099, 150-199
	16		W0047	066	24		23-32-12	050-099, 150-199
	17		W0047	067	20		23-32-11	050-099, 150-199
	18		W0047	507	20		23-32-12	050-099, 150-199
	19		W0047	069	16		23-32-11	050-099, 150-199
	20	UNUSED						050-099, 150, 153-199
	20		W0047	506	24		23-32-12	151-152
	21	UNUSED						050-099, 150, 153-199

HOOKUP LIST

D280T132

91-21-51

Section D01200

Page 1

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01205		AP0002/ /		RECP-MOA PER DWG REF BACC45FN20-28S (continued)				050-099, 150-199
	21		W0047	505	24		23-32-12	151-152
	22	UNUSED						050-099, 150-199
	23	UNUSED						050-099
	23		W0047	10CX			23-32-21	150, 152-199
	23		W0047	25CX			23-32-13	151-152
	24	UNUSED						050-099, 150, 153-199
	24		W0047	503	22		23-32-12	151-152
	25	UNUSED						050-099, 150-199
	26	UNUSED						050-099, 150-199
	27		W0047	09CX			23-32-21	050-099, 151
	27	UNUSED						150, 152-199
	28	UNUSED						050-099, 150-199
	C15	UNUSED						050-099, 150-199
	C19	UNUSED						050-099, 150-199
	C23	UNUSED						050-099
	C27	UNUSED						150, 152-199
	= C23		W0047	10CO			23-32-21	150, 152-199
	= C23		W0047	25CO			23-32-13	151-152
	= C27		W0047	09CO			23-32-21	050-099, 151
	DED		W0047	538Z			23-32-11	050-099, 150-199
			W0047	051Z			23-32-12	050-099, 150-199
			W0047	052Z			23-32-12	050-099, 150-199
			W0047	054Z			23-32-12	050-099, 150-199
			W0047	055Z			23-32-12	050-099, 150-199
			W0047	056Z			23-32-12	050-099, 150-199
			W0047	057Z			23-32-12	050-099, 150-199
			W0047	FRB			23-32-12	050-099, 150-199
D01206		0585/280/L005		RCPT-				ALL
	1		W1162	131	20		35-21-14	050-099, 276-299
	1		W1162	011	20		35-21-14	150-199, 275
	2		W1162	132	20		35-21-14	050-099, 276-299
	2		W1162	012	20		35-21-14	150-199, 275
D01207		AP0002/ /		RECP-MOA PER DWG REF BACC45FN20-28S6				050-099, 150-199
	1		W0047	071	20		23-32-13	050-099, 150-199
	2		W0047	072	24		23-32-13	050-099, 150-199
	3		W0047	073	24		23-32-13	050-099, 150-199
	4		W0047	074	24		23-32-13	050-099, 150-199
	5		W0047	075	20		23-32-13	050-099, 150-199

HOOKUP LIST

D280T132

91-21-51

Section D01200

Page 2

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01207		AP0002/ /		RECP-MOA PER DWG REF BACC45FN20-28S6 (continued)				050-099, 150-199
	6		W0047	076	24		23-32-13	050-099, 150-199
	7		W0047	077	24		23-32-13	050-099, 150-199
	8		W0047	078	24		23-32-13	050-099, 150-199
	9		W0047	079	20		23-32-13	050-099, 150-199
	10		W0047	080	24		23-32-13	050-099, 150-199
	11		W0047	081	24		23-32-13	050-099, 150-199
	12		W0047	082	24		23-32-13	050-099, 150-199
	13	UNUSED						050-099, 150-199
	14	UNUSED						050-099, 150-199
	15	UNUSED						050-099, 150-199
	16	UNUSED						050-099, 150-199
	17	UNUSED						050-099, 150-199
	18	UNUSED						050-099
	18		W0047	401R	20		23-32-13	150-199
	19		W0047	04CX			23-32-13	050-099, 150-199
	20	UNUSED						050-099
	20		W0047	401G	20		23-32-13	150-199
	21	UNUSED						050-099
	21		W0047	401B	20		23-32-13	150-199
	22	UNUSED						050-099
	22		W0047	401Y	20		23-32-13	150-199
	23		W0047	05CX			23-32-13	050-099, 150-199
	24		W0047	533	22		23-32-12	050-099, 150-199
	25		W0047	534	22		23-32-12	050-099, 150-199
	26		W0047	535	22		23-32-12	050-099, 150-199
	27		W0047	08CX			23-32-13	050-099, 150-199
	28	UNUSED						050-099, 150-199
	C15	UNUSED						050-099, 150-199
	= C19		W0047	04CO			23-32-13	050-099, 150-199
	= C23		W0047	05CO			23-32-13	050-099, 150-199
	= C27		W0047	08CO			23-32-13	050-099, 150-199
D01208		0612/280/L005		RCPT-				ALL
	1		W1162	141	20		35-21-14	050-099, 276-299
	1		W1162	015	20		35-21-14	150-199, 275
	2		W1162	142	20		35-21-14	050-099, 276-299
	2		W1162	016	20		35-21-14	150-199, 275
D01209		AP0002/250/R009		RECP-MOA PER DWG REF BACC45FN20-28S7				050-099, 150-199
	1		W0047	042	22		23-32-12	050-099, 151-152

HOOKUP LIST
D280T132

91-21-51
Section D01200
Page 3
Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01209		AP0002/250/R009		RECP-MOA PER DWG REF BACC45FN20-28S7 (continued)				050-099, 150-199
	1		W0047	003	22		23-32-12	150, 153-199
	2		W0047	044	24		23-32-12	050-099, 151-152
	2		W0047	006	24		23-32-12	150, 153-199
	3		W0047	043	24		23-32-12	050-099, 151-152
	3		W0047	007	24		23-32-12	150, 153-199
	4	UNUSED						050-099, 150-199
	5		W0047	008	24		23-32-12	050-099, 150-199
	6		W0047	008Z			23-32-12	050-099, 150-199
	7		W0047	010	24		23-32-12	050-099, 150-199
	8		W0047	010Z			23-32-12	050-099, 150-199
	9	UNUSED						050-099
	9		W0047	905R	20		23-32-21	150, 152-156, 162-199
	9		W0047	501	24		23-32-12	151-152
	9		W0047	905R	22		23-32-21	157
	10	UNUSED						050-099
	10		W0047	905B	20		23-32-21	150, 152-156, 162-199
	10		W0047	501Z			23-32-12	151-152
	10		W0047	905B	22		23-32-21	157
	11	UNUSED						050-099
	11		W0047	904R	20		23-32-21	150, 152-156, 162-199
	11		W0047	502	24		23-32-12	151-152
	11		W0047	904R	22		23-32-21	157
	12		W0047	018	24		23-32-12	050-099, 150-199
	13		W0047	018Z			23-32-12	050-099, 150-199
	14		W0047	013	22		23-32-12	050-099, 150-199
	15		W0047	01CX			23-32-13	050-099, 150-199
	16		W0047	020	24		23-32-12	050-099, 150-199
	17		W0047	020Z			23-32-12	050-099, 150-199
	18	UNUSED						050-099
	18		W0047	904B	20		23-32-21	150, 152-156, 162-199
	18		W0047	502Z			23-32-12	151-152
	18		W0047	904B	22		23-32-21	157
	19		W0047	02CX			23-32-13	050-099, 150-199
	20		W0047	016	24		23-32-12	050-099, 150-199
	21		W0047	017	24		23-32-12	050-099, 150-199
	22	UNUSED						050-099, 150-199
	23	UNUSED						050-099, 150-199
	24	UNUSED						050-099, 150, 153-199
	24		W0047	037	24		23-32-12	151-152
	25	UNUSED						050-099, 150, 153-199

HOOKUP LIST

D280T132

91-21-51

Section D01200

Page 4

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01209		AP0002/250/R009		RECP-MOA PER DWG REF BACC45FN20-28S7 (continued)				050-099, 150-199
	25		W0047	037Z			23-32-12	151-152
	26	UNUSED						050-099, 150-199
	27	UNUSED						050-099, 150, 153-199
	27		W0047	06CX			23-32-13	151-152
	28	UNUSED						050-099, 150-199
	C23	UNUSED						050-099, 150-199
	C27	UNUSED						050-099, 150, 153-199
	=C15		W0047	01CO			23-32-13	050-099, 150-199
	=C19		W0047	02CO			23-32-13	050-099, 150-199
	=C27		W0047	06CO			23-32-13	151-152
			W0047	904Z			23-32-21	150, 152-199
			W0047	905Z			23-32-21	150, 152-199
D01210		636/280/L005		RCPT-				050-099
D01210		0636/280/L005		RCPT-				150-199, 275-299
	1		W1282	101	20		35-21-14	050-099
	1		W1282	003	20		35-21-14	150-199
	1		W1164	005	20		35-21-14	275
	1		W1164	101	20		35-21-14	276-299
	2		W1282	102	20		35-21-14	050-099
	2		W1282	004	20		35-21-14	150-199
	2		W1164	006	20		35-21-14	275
	2		W1164	102	20		35-21-14	276-299
D01212		0403/122/L029		RCPT-				ALL
	1		W0704	111	20		25-53-14	ALL
	2		W0704	112	20		25-53-14	ALL
	3		W0704	016	20		25-53-14	050-099
	3		W0704	013	20		25-53-14	150-199, 275-299
	4		W0704	311B	20		25-53-12	ALL
	5	DK	W0704	015	18		25-53-12	ALL
	6		W0704	013	20		25-53-14	050-099
	6		W0704	016	20		25-53-14	150-199, 275-299
	7		W0704	311R	20		25-53-12	ALL
	8		W0704	018	20		25-53-12	ALL
	9		W0704	019	20		25-53-12	ALL
	10		W0704	311Y	20		25-53-12	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D01200

Page 5

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01214		0403/122/R029		RCPT-				ALL
	1		W0704	011	20		25-53-14	ALL
	2		W0704	012	20		25-53-14	ALL
	3		W0704	113	20		25-53-14	ALL
	4		W0704	321B	20		25-53-12	ALL
	5	DK	W0704	115	18		25-53-12	ALL
	6		W0704	116	20		25-53-14	ALL
	7		W0704	321R	20		25-53-12	ALL
	8		W0704	118	20		25-53-12	ALL
	9		W0704	119	20		25-53-12	ALL
	10		W0704	321Y	20		25-53-12	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D01216		0442/122/L029		RCPT-				050-099
D01216		706/122/L029		RCPT-				150-199, 275-299
	1		W0704	021	20		25-53-14	ALL
	2		W0704	022	20		25-53-14	ALL
	3		W0704	023	20		25-53-14	ALL
	4		W0704	312B	20		25-53-12	050-099
	4		W0704	350B	20		25-53-12	150-199, 275-299
	5	DK	W0704	025	18		25-53-12	050-099
	5	DK	W0704	623	18		25-53-12	150-199, 275-299
	6		W0704	026	20		25-53-14	ALL
	7		W0704	312R	20		25-53-12	050-099
	7		W0704	350R	20		25-53-12	150-199, 275-299
	8		W0704	028	20		25-53-12	050-099
	8		W0704	624	20		25-53-12	150-199, 275-299
	9		W0704	029	20		25-53-12	050-099
	9		W0704	625	20		25-53-12	150-199, 275-299
	10		W0704	312Y	20		25-53-12	050-099
	10		W0704	350Y	20		25-53-12	150-199, 275-299
	11	UNUSED						ALL
	12	UNUSED						ALL
D01218		0442/122/R029		RCPT-				ALL
	1		W0704	121	20		25-53-14	ALL
	2		W0704	122	20		25-53-14	ALL
	3		W0704	123	20		25-53-14	ALL
	4		W0704	322B	20		25-53-12	ALL

HOOKUP LIST

D280T132

91-21-51

Section D01200

Page 6

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01218		0442/122/R029		RCPT- (continued)				ALL
	5	DK	W0704	125	18		25-53-12	ALL
	6		W0704	126	20		25-53-14	ALL
	7		W0704	322R	20		25-53-12	ALL
	8		W0704	128	20		25-53-12	ALL
	9		W0704	129	20		25-53-12	ALL
	10		W0704	322Y	20		25-53-12	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D01219		FIN 295/ /		PLUG-COAXIAL				ALL
	= A1		W1413	01CX			23-32-13	ALL
	= C1		W1413	01CO			23-32-13	ALL
D01220		0517/122/R009		RCPT-				050-099
D01220		0474/122/L029		RCPT-				150-199, 275-299
	1		W0704	031	20		25-53-14	ALL
	2		W0704	032	20		25-53-14	ALL
	3		W0704	033	20		25-53-14	ALL
	4		W0704	313B	20		25-53-12	050-099
	4		W0704	317B	20		25-53-12	150-199, 275-299
	5	DK	W0704	035	18		25-53-12	050-099
	5	DK	W0704	075	18		25-53-12	150-199, 275-299
	6		W0704	036	20		25-53-14	ALL
	7		W0704	313R	20		25-53-12	050-099
	7		W0704	317R	20		25-53-12	150-199, 275-299
	8		W0704	038	20		25-53-12	050-099
	8		W0704	078	20		25-53-12	150-199, 275-299
	9		W0704	039	20		25-53-12	050-099
	9		W0704	079	20		25-53-12	150-199, 275-299
	10		W0704	313Y	20		25-53-12	050-099
	10		W0704	317Y	20		25-53-12	150-199, 275-299
	11	UNUSED						ALL
	12	UNUSED						ALL
D01221		F 295/ /0000		PLUG-				ALL
	1		W1415	401R	20		23-32-13	ALL
	2	DK	W1415	002	18		23-32-13	ALL
	3		W1415	401G	20		23-32-13	ALL
	4		W1415	401B	20		23-32-13	ALL
	5		W1415	401Y	20		23-32-13	ALL

HOOKUP LIST
D280T132

91-21-51
Section D01200
Page 7
Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01222		0474/122/R029		RCPT-				ALL
	1		W0704	505	20		25-53-14	050-099
	1		W0704	131	20		25-53-14	150-199, 275-299
	2		W0704	504	20		25-53-14	050-099
	2		W0704	132	20		25-53-14	150-199, 275-299
	3		W0704	507	20		25-53-14	050-099
	3		W0704	133	20		25-53-14	150-199, 275-299
	4		W0704	323B	20		25-53-12	ALL
	5	DK	W0704	135	18		25-53-12	ALL
	6		W0704	506	20		25-53-14	050-099
	6		W0704	136	20		25-53-14	150-199, 275-299
	7		W0704	323R	20		25-53-12	ALL
	8		W0704	138	20		25-53-12	ALL
	9		W0704	139	20		25-53-12	ALL
	10		W0704	323Y	20		25-53-12	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D01224		0530/122/L029		RCPT-				050-099
D01224		0579/122/R009		RCPT-				150-199, 275-299
	1		W0704	526	20		25-53-14	050-099
	1		W0704	041	20		25-53-14	150-199, 275-299
	2		W0704	525	20		25-53-14	050-099
	2		W0704	042	20		25-53-14	150-199, 275-299
	3		W0704	528	20		25-53-14	050-099
	3		W0704	043	20		25-53-14	150-199, 275-299
	4		W0704	314B	20		25-53-12	050-099
	4		W0704	315B	20		25-53-12	150-199, 275-299
	5	DK	W0704	045	18		25-53-12	050-099
	5	DK	W0704	636	18		25-53-12	150-199, 275-299
	6		W0704	527	20		25-53-14	050-099
	6		W0704	046	20		25-53-14	150-199, 275-299
	7		W0704	314R	20		25-53-12	050-099
	7		W0704	315R	20		25-53-12	150-199, 275-299
	8		W0704	048	20		25-53-12	050-099
	8		W0704	637	20		25-53-12	150-199, 275-299
	9		W0704	049	20		25-53-12	050-099
	9		W0704	638	20		25-53-12	150-199, 275-299
	10		W0704	314Y	20		25-53-12	050-099
	10		W0704	315Y	20		25-53-12	150-199, 275-299
	11	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D01200

Page 8

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01224		0530/122/L029		RCPT- (continued)				050-099
D01224		0579/122/R009		RCPT- (continued)				150-199, 275-299
	12	UNUSED						ALL
D01226		0639/122/R029		RCPT-				050-099
D01226		0517/122/R009		RCPT-				150-199, 275-299
	1		W0704	181	20		25-53-14	050-099
	1		W0704	141	20		25-53-14	150-199, 275-299
	2		W0704	182	20		25-53-14	050-099
	2		W0704	142	20		25-53-14	150-199, 275-299
	3		W0704	183	20		25-53-14	050-099
	3		W0704	143	20		25-53-14	150-199, 275-299
	4		W0704	324B	20		25-53-12	050-099
	4		W0704	345B	20		25-53-12	150-199, 275-299
	5	DK	W0704	145	18		25-53-12	050-099
	5	DK	W0704	195	18		25-53-12	150-199, 275-299
	6		W0704	186	20		25-53-14	050-099
	6		W0704	146	20		25-53-14	150-199, 275-299
	7		W0704	324R	20		25-53-12	050-099
	7		W0704	345R	20		25-53-12	150-199, 275-299
	8		W0704	148	20		25-53-12	050-099
	8		W0704	198	20		25-53-12	150-199, 275-299
	9		W0704	149	20		25-53-12	050-099
	9		W0704	199	20		25-53-12	150-199, 275-299
	10		W0704	324Y	20		25-53-12	050-099
	10		W0704	345Y	20		25-53-12	150-199, 275-299
	11	UNUSED						ALL
	12	UNUSED						ALL
D01228		0579/122/R009		RCPT-				050-099
D01228		502/122/L029		RCPT-				150-199, 275-299
	1		W0704	661	20		25-53-14	050-099
	1		W0704	051	20		25-53-14	150-199, 275-299
	2		W0704	662	20		25-53-14	050-099
	2		W0704	052	20		25-53-14	150-199, 275-299
	3		W0704	663	20		25-53-14	050-099
	3		W0704	053	20		25-53-14	150-199, 275-299
	4		W0704	315B	20		25-53-12	050-099
	4		W0704	316B	20		25-53-12	150-199, 275-299
	5	DK	W0704	055	18		25-53-12	050-099
	5	DK	W0704	065	18		25-53-12	150-199, 275-299

HOOKUP LIST

D280T132

91-21-51

Section D01200

Page 9

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01228		0579/122/R009		RCPT- (continued)				050-099
D01228		502/122/L029		RCPT- (continued)				150-199, 275-299
	6		W0704	666	20		25-53-14	050-099
	6		W0704	056	20		25-53-14	150-199, 275-299
	7		W0704	315R	20		25-53-12	050-099
	7		W0704	316R	20		25-53-12	150-199, 275-299
	8		W0704	058	20		25-53-12	050-099
	8		W0704	068	20		25-53-12	150-199, 275-299
	9		W0704	059	20		25-53-12	050-099
	9		W0704	069	20		25-53-12	150-199, 275-299
	10		W0704	315Y	20		25-53-12	050-099
	10		W0704	316Y	20		25-53-12	150-199, 275-299
	11	UNUSED						ALL
	12	UNUSED						ALL
D01230		0517/122/R029		RCPT-				050-099
D01230		502/122/R030		RCPT-				150-199, 275-299
	1		W0704	041	20		25-53-14	050-099
	1		W0704	151	20		25-53-14	150-199, 275-299
	2		W0704	042	20		25-53-14	050-099
	2		W0704	152	20		25-53-14	150-199, 275-299
	3		W0704	043	20		25-53-14	050-099
	3		W0704	153	20		25-53-14	150-199, 275-299
	4		W0704	325B	20		25-53-12	050-099
	4		W0704	326B	20		25-53-12	150-199, 275-299
	5	DK	W0704	155	18		25-53-12	050-099
	5	DK	W0704	165	18		25-53-12	150-199, 275-299
	6		W0704	046	20		25-53-14	050-099
	6		W0704	156	20		25-53-14	150-199, 275-299
	7		W0704	325R	20		25-53-12	050-099
	7		W0704	326R	20		25-53-12	150-199, 275-299
	8		W0704	158	20		25-53-12	050-099
	8		W0704	168	20		25-53-12	150-199, 275-299
	9		W0704	159	20		25-53-12	050-099
	9		W0704	169	20		25-53-12	150-199, 275-299
	10		W0704	325Y	20		25-53-12	050-099
	10		W0704	326Y	20		25-53-12	150-199, 275-299
	11	UNUSED						ALL
	12	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D01200

Page 10

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01231		1125/280/0000		PLUG-				050-099
D01231		1070/280/0000		PLUG				150-199
	1		W1417	004	20		23-32-11	050-099
	1		W1577	007	20		23-32-11	150-199
	2		W1417	032	20		23-32-13	050-099
	2		W1577	004	20		23-32-13	150-199
	3		W1417	033	20		23-32-13	050-099
	3		W1577	005	20		23-32-13	150-199
	4		W1417	010	20		23-32-11	050-099
	4		W1577	008	20		23-32-11	150-199
	5		W1417	034	20		23-32-13	050-099
	5		W1577	006	20		23-32-13	150-199
	6		W1417	029	24		23-32-13	050-099
	6		W1577	001	24		23-32-13	150-199
	7		W1417	030	24		23-32-13	050-099
	7		W1577	002	24		23-32-13	150-199
	8		W1417	031	24		23-32-13	050-099
	8		W1577	003	24		23-32-13	150-199
	9	UNUSED						050-099, 150-199
	10	UNUSED						050-099, 150-199
	11	UNUSED						050-099, 150-199
	12	UNUSED						050-099, 150-199
D01232		0579/122/L029		RCPT-				050-099
D01232		0578/122/L021		RCPT-				150-199, 275-299
	1		W0704	061	20		25-53-14	ALL
	2		W0704	062	20		25-53-14	ALL
	3		W0704	063	20		25-53-14	ALL
	4		W0704	316B	20		25-53-12	050-099
	4		W0704	332B	20		25-53-12	150-199, 275-299
	5	DK	W0704	065	18		25-53-12	050-099
	5	DK	W0704	045	18		25-53-12	150-199, 275-299
	6		W0704	066	20		25-53-14	ALL
	7		W0704	316R	20		25-53-12	050-099
	7		W0704	332R	20		25-53-12	150-199, 275-299
	8		W0704	068	20		25-53-12	050-099
	8		W0704	048	20		25-53-12	150-199, 275-299
	9		W0704	069	20		25-53-12	050-099
	9		W0704	049	20		25-53-12	150-199, 275-299
	10		W0704	316Y	20		25-53-12	050-099
	10		W0704	332Y	20		25-53-12	150-199, 275-299

HOOKUP LIST

D280T132

91-21-51

Section D01200

Page 11

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01232		0579/122/L029		RCPT- (continued)				050-099
D01232		0578/122/L021		RCPT- (continued)				150-199, 275-299
	11	UNUSED						ALL
	12	UNUSED						ALL
D01233		1125/280/0000		PLUG-COAXIAL				050-099
D01233		1070/280/0000		PLUG-COAXIAL				150-199
	= A1		W1417	03CX			23-32-13	050-099
	= A1		W1577	01CX			23-32-13	150-199
	= C1		W1417	03CO			23-32-13	050-099
	= C1		W1577	01CO			23-32-13	150-199
D01234		0596/122/R029		RCPT-				050-099
D01234		0517/122/R036		RCPT-				150-199, 275-299
	1		W0704	171	20		25-53-14	050-099
	1		W0704	661	20		25-53-14	150-199, 275-299
	2		W0704	172	20		25-53-14	050-099
	2		W0704	662	20		25-53-14	150-199, 275-299
	3		W0704	173	20		25-53-14	050-099
	3		W0704	663	20		25-53-14	150-199, 275-299
	4		W0704	336B	20		25-53-12	050-099
	4		W0704	329B	20		25-53-12	150-199, 275-299
	5	DK	W0704	665	18		25-53-12	050-099
	5	DK	W0704	155	18		25-53-12	150-199, 275-299
	6		W0704	176	20		25-53-14	050-099
	6		W0704	666	20		25-53-14	150-199, 275-299
	7		W0704	336R	20		25-53-12	050-099
	7		W0704	329R	20		25-53-12	150-199, 275-299
	8		W0704	668	20		25-53-12	050-099
	8		W0704	158	20		25-53-12	150-199, 275-299
	9		W0704	669	20		25-53-12	050-099
	9		W0704	159	20		25-53-12	150-199, 275-299
	10		W0704	336Y	20		25-53-12	050-099
	10		W0704	329Y	20		25-53-12	150-199, 275-299
	11	UNUSED						ALL
	12	UNUSED						ALL
D01235		F 295/ /FS		PLUG-COAXIAL				ALL
	= A1		W1429	01CX			23-32-13	ALL
	= C1		W1429	01CO			23-32-13	ALL

HOOKUP LIST

D280T132

91-21-51

Section D01200

Page 12

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01236		0579/122/R029		RCPT-				050-099
D01236		0639/122/R038		RCPT-				150-199, 275-299
	1		W0704	161	20		25-53-14	050-099
	1		W0704	591	20		25-53-14	150-199, 275-299
	2		W0704	162	20		25-53-14	050-099
	2		W0704	592	20		25-53-14	150-199, 275-299
	3		W0704	163	20		25-53-14	ALL
	4		W0704	326B	20		25-53-12	050-099
	4		W0704	331B	20		25-53-12	150-199, 275-299
	5	DK	W0704	165	18		25-53-12	050-099
	5	DK	W0704	145	18		25-53-12	150-199, 275-299
	6		W0704	166	20		25-53-14	ALL
	7		W0704	326R	20		25-53-12	050-099
	7		W0704	331R	20		25-53-12	150-199, 275-299
	8		W0704	168	20		25-53-12	050-099
	8		W0704	148	20		25-53-12	150-199, 275-299
	9		W0704	169	20		25-53-12	050-099
	9		W0704	149	20		25-53-12	150-199, 275-299
	10		W0704	326Y	20		25-53-12	050-099
	10		W0704	331Y	20		25-53-12	150-199, 275-299
	11	UNUSED						ALL
	12	UNUSED						ALL
D01237		F 395/ /FS		PLUG-COAXIAL				ALL
	=A1		W1429	01CX			23-32-13	ALL
	=C1		W1429	01CO			23-32-13	ALL
D01238		0558/122/L029		RCPT-				050-099
D01238		0596/122/L029		RCPT-				150-199, 275-299
	1		W0704	052	20		25-53-14	050-099
	1		W0704	072	20		25-53-14	150-199, 275-299
	2		W0704	051	20		25-53-14	050-099
	2		W0704	071	20		25-53-14	150-199, 275-299
	3		W0704	053	20		25-53-14	050-099
	3		W0704	073	20		25-53-14	150-199, 275-299
	4		W0704	317B	20		25-53-12	050-099
	4		W0704	343B	20		25-53-12	150-199, 275-299
	5	DK	W0704	075	18		25-53-12	050-099
	5	DK	W0704	583	18		25-53-12	150-199, 275-299
	6		W0704	056	20		25-53-14	050-099

HOOKUP LIST

D280T132

91-21-51

Section D01200

Page 13

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01238		0558/122/L029		RCPT- (continued)				050-099
D01238		0596/122/L029		RCPT- (continued)				150-199, 275-299
	6		W0704	076	20		25-53-14	150-199, 275-299
	7		W0704	317R	20		25-53-12	050-099
	7		W0704	343R	20		25-53-12	150-199, 275-299
	8		W0704	078	20		25-53-12	050-099
	8		W0704	584	20		25-53-12	150-199, 275-299
	9		W0704	079	20		25-53-12	050-099
	9		W0704	585	20		25-53-12	150-199, 275-299
	10		W0704	317Y	20		25-53-12	050-099
	10		W0704	343Y	20		25-53-12	150-199, 275-299
	11	UNUSED						ALL
	12	UNUSED						ALL
D01239		F 295/ /FS		PLUG-COAXIAL				ALL
	= A1		W1433	01CX			23-32-13	ALL
	= C1		W1433	01CO			23-32-13	ALL
D01240		0569/122/R029		RCPT-				050-099
D01240		0596/122/R010		RCPT-				150-199, 275-299
	1		W0704	152	20		25-53-14	050-099
	1		W0704	172	20		25-53-14	150-199, 275-299
	2		W0704	151	20		25-53-14	050-099
	2		W0704	171	20		25-53-14	150-199, 275-299
	3		W0704	153	20		25-53-14	050-099
	3		W0704	173	20		25-53-14	150-199, 275-299
	4		W0704	327B	20		25-53-12	050-099
	4		W0704	341B	20		25-53-12	150-199, 275-299
	5	DK	W0704	175	18		25-53-12	050-099
	5	DK	W0704	577	18		25-53-12	150-199, 275-299
	6		W0704	156	20		25-53-14	050-099
	6		W0704	176	20		25-53-14	150-199, 275-299
	7		W0704	327R	20		25-53-12	050-099
	7		W0704	341R	20		25-53-12	150-199, 275-299
	8		W0704	178	20		25-53-12	050-099
	8		W0704	578	20		25-53-12	150-199, 275-299
	9		W0704	179	20		25-53-12	050-099
	9		W0704	579	20		25-53-12	150-199, 275-299
	10		W0704	327Y	20		25-53-12	050-099
	10		W0704	341Y	20		25-53-12	150-199, 275-299
	11	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D01200

Page 14

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01240		0569/122/R029		RCPT- (continued)				050-099
D01240		0596/122/R010		RCPT- (continued)				150-199, 275-299
	12	UNUSED						ALL
D01241		F 395/ /FS		PLUG-COAXIAL				ALL
	= A1		W1433	01CX			23-32-13	ALL
	= C1		W1433	01CO			23-32-13	ALL
D01242		0639/122/L029		RCPT-				050-099
D01242		0661/122/L029		RCPT-				150-199, 275-299
	1		W0704	081	20		25-53-14	ALL
	2		W0704	082	20		25-53-14	ALL
	3		W0704	083	20		25-53-14	ALL
	4		W0704	318B	20		25-53-12	050-099
	4		W0704	349B	20		25-53-12	150-199, 275-299
	5	DK	W0704	085	18		25-53-12	050-099
	5	DK	W0704	617	18		25-53-12	150-199, 275-299
	6		W0704	086	20		25-53-14	ALL
	7		W0704	318R	20		25-53-12	050-099
	7		W0704	349R	20		25-53-12	150-199, 275-299
	8		W0704	088	20		25-53-12	050-099
	8		W0704	618	20		25-53-12	150-199, 275-299
	9		W0704	089	20		25-53-12	050-099
	9		W0704	619	20		25-53-12	150-199, 275-299
	10		W0704	318Y	20		25-53-12	050-099
	10		W0704	349Y	20		25-53-12	150-199, 275-299
	11	UNUSED						ALL
	12	UNUSED						ALL
D01243		F 295/ /FS		PLUG-COAXIAL				ALL
	= A1		W1427	01CX			23-32-13	ALL
	= C1		W1427	01CO			23-32-13	ALL
D01244		0530/122/R029		RCPT-				050-099
D01244		654+121/122/R029		RCPT-				150-199, 275-299
	1		W0704	142	20		25-53-14	050-099
	1		W0704	181	20		25-53-14	150-199, 275-299
	2		W0704	141	20		25-53-14	050-099
	2		W0704	182	20		25-53-14	150-199, 275-299
	3		W0704	143	20		25-53-14	050-099
	3		W0704	183	20		25-53-14	150-199, 275-299

HOOKUP LIST

D280T132

91-21-51

Section D01200

Page 15

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01244		0530/122/R029		RCPT- (continued)				050-099
D01244		654+121/122/R029		RCPT- (continued)				150-199, 275-299
	4		W0704	328B	20		25-53-12	050-099
	4		W0704	348B	20		25-53-12	150-199, 275-299
	5	DK	W0704	185	18		25-53-12	050-099
	5	DK	W0704	620	18		25-53-12	150-199, 275-299
	6		W0704	146	20		25-53-14	050-099
	6		W0704	186	20		25-53-14	150-199, 275-299
	7		W0704	328R	20		25-53-12	050-099
	7		W0704	348R	20		25-53-12	150-199, 275-299
	8		W0704	188	20		25-53-12	050-099
	8		W0704	621	20		25-53-12	150-199, 275-299
	9		W0704	189	20		25-53-12	050-099
	9		W0704	622	20		25-53-12	150-199, 275-299
	10		W0704	328Y	20		25-53-12	050-099
	10		W0704	348Y	20		25-53-12	150-199, 275-299
	11	UNUSED						ALL
	12	UNUSED						ALL
D01245		F 333/ /FS		PLUG-COAXIAL				ALL
	= A1		W1427	01CX			23-32-13	ALL
	= C1		W1427	01CO			23-32-13	ALL
D01246		0502/122/L029		RCPT-				050-099
D01246		0517/122/L020		RCPT-				150-199, 275-299
	1		W0704	530	20		25-53-14	050-099
	1		W0704	091	20		25-53-14	150-199, 275-299
	2		W0704	533	20		25-53-14	050-099
	2		W0704	092	20		25-53-14	150-199, 275-299
	3		W0704	529	20		25-53-14	050-099
	3		W0704	093	20		25-53-14	150-199, 275-299
	4		W0704	319B	20		25-53-12	050-099
	4		W0704	335B	20		25-53-12	150-199, 275-299
	5	DK	W0704	095	18		25-53-12	ALL
	6		W0704	534	20		25-53-14	050-099
	6		W0704	096	20		25-53-14	150-199, 275-299
	7		W0704	319R	20		25-53-12	050-099
	7		W0704	335R	20		25-53-12	150-199, 275-299
	8		W0704	098	20		25-53-12	ALL
	9		W0704	099	20		25-53-12	ALL
	10		W0704	319Y	20		25-53-12	050-099

HOOKUP LIST

D280T132

91-21-51

Section D01200

Page 16

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01246		0502/122/L029		RCPT- (continued)				050-099
D01246		0517/122/L020		RCPT- (continued)				150-199, 275-299
	10		W0704	335Y	20		25-53-12	150-199, 275-299
	11	UNUSED						ALL
	12	UNUSED						ALL
D01247		F 295/ /FS		PLUG-COAXIAL				ALL
	= A1		W1431	01CX			23-32-13	ALL
	= C1		W1431	01CO			23-32-13	ALL
D01248		0502/122/R029		RCPT-				050-099
D01248		0530/122/R029		RCPT-				150-199, 275-299
	1		W0704	131	20		25-53-14	050-099
	1		W0704	192	20		25-53-14	150-199, 275-299
	2		W0704	132	20		25-53-14	050-099
	2		W0704	191	20		25-53-14	150-199, 275-299
	3		W0704	133	20		25-53-14	050-099
	3		W0704	193	20		25-53-14	150-199, 275-299
	4		W0704	329B	20		25-53-12	050-099
	4		W0704	336B	20		25-53-12	150-199, 275-299
	5	DK	W0704	195	18		25-53-12	050-099
	5	DK	W0704	665	18		25-53-12	150-199, 275-299
	6		W0704	136	20		25-53-14	050-099
	6		W0704	196	20		25-53-14	150-199, 275-299
	7		W0704	329R	20		25-53-12	050-099
	7		W0704	336R	20		25-53-12	150-199, 275-299
	8		W0704	198	20		25-53-12	050-099
	8		W0704	668	20		25-53-12	150-199, 275-299
	9		W0704	199	20		25-53-12	050-099
	9		W0704	669	20		25-53-12	150-199, 275-299
	10		W0704	329Y	20		25-53-12	050-099
	10		W0704	336Y	20		25-53-12	150-199, 275-299
	11	UNUSED						ALL
	12	UNUSED						ALL
D01249		F 333/ /FS		PLUG-COAXIAL				ALL
	= A1		W1431	01CX			23-32-13	ALL
	= C1		W1431	01CO			23-32-13	ALL

HOOKUP LIST

D280T132

91-21-51

Section D01200

Page 17

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01250		0683/122/L029		RCPT-				050-099
D01250		559/122/L029		RCPT-				150-199, 275-299
	1		W0704	101	20		25-53-14	ALL
	2		W0704	102	20		25-53-14	ALL
	3		W0704	103	20		25-53-14	ALL
	4		W0704	320B	20		25-53-12	ALL
	5	DK	W0704	105	18		25-53-12	ALL
	6		W0704	106	20		25-53-14	ALL
	7		W0704	320R	20		25-53-12	ALL
	8		W0704	108	20		25-53-12	ALL
	9		W0704	109	20		25-53-12	ALL
	10		W0704	320Y	20		25-53-12	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D01251A		//		PLUG-PART A OF D01251				ALL
	A01		W0101	214R	22		27-61-15	ALL
	A02	UNUSED						ALL
	A03	UNUSED						ALL
	A04	UNUSED						ALL
	A05		W0101	198	22		27-61-14	ALL
	A06	UNUSED						ALL
	A07		W0101	170	22		27-41-11	ALL
	A08		W0101	066	22		27-21-12	ALL
	A09	UNUSED						ALL
	A10	UNUSED						ALL
	A11	UNUSED						ALL
	A12		W0111	223R	22		27-21-12	ALL
	A13	UNUSED						ALL
	A14		W0111	161	22		27-41-11	ALL
	A15		W0111	095	22		27-21-12	ALL
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04	UNUSED						ALL
	B05		W0101	013	22		27-41-11	ALL
	B06	UNUSED						ALL
	B07		W0101	091	22		27-61-16	ALL
	B08		W0101	129	22		22-21-11	ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D01200

Page 18

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01251A		//		PLUG-PART A OF D01251 (continued)				ALL
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13	UNUSED						ALL
	B14		W0111	042	22		27-61-16	ALL
	B15		W0111	126	22		22-21-11	ALL
	C01		W0101	214B	22		27-61-15	ALL
	C02	UNUSED						ALL
	C03		W0101	051	22		27-61-15	ALL
	C04	UNUSED						ALL
	C05		W0101	131	22		22-21-11	ALL
	C06	UNUSED						ALL
	C07		W0101	040	22		27-61-14	ALL
	C08		W0101	057	22		27-61-15	ALL
	C09	UNUSED						ALL
	C10		W0111	117	22		27-21-12	ALL
	C11	UNUSED						ALL
	C12		W0111	223B	22		27-21-12	ALL
	C13	UNUSED						ALL
	C14		W0111	019	22		27-61-14	ALL
	C15		W0111	033	22		27-61-15	ALL
	D01	UNUSED						ALL
	D02	UNUSED						ALL
	D03	UNUSED						ALL
	D04	UNUSED						ALL
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	D08	UNUSED						ALL
	D09	UNUSED						ALL
	D10	UNUSED						ALL
	D11	UNUSED						ALL
	D12	UNUSED						ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15	UNUSED						ALL
	E01	UNUSED						ALL
	E02		W0101	014	22		27-41-11	ALL
	E03		W0101	132	22		22-21-11	ALL
	E04	UNUSED						ALL
	E05	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D01200

Page 19

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01251A		//		PLUG-PART A OF D01251 (continued)				ALL
	E06	UNUSED						ALL
	E07	UNUSED						ALL
	E08	UNUSED						ALL
	E09	UNUSED						ALL
	E10	UNUSED						ALL
	E11	UNUSED						ALL
	E12	UNUSED						ALL
	E13	UNUSED						ALL
	E14	UNUSED						ALL
	E15	UNUSED						ALL
	F01	UNUSED						ALL
	F02	UNUSED						ALL
	F03	UNUSED						ALL
	F04	UNUSED						ALL
	F05	UNUSED						ALL
	F06	UNUSED						ALL
	F07	UNUSED						ALL
	F08	UNUSED						ALL
	F09	UNUSED						ALL
	F10	UNUSED						ALL
	F11	UNUSED						ALL
	F12	UNUSED						ALL
	F13		W0111	039	22		27-61-16	ALL
	F14	UNUSED						ALL
	F15	UNUSED						ALL
	G01		W0101	128	22		22-21-11	ALL
	G02		W0101	175	22		27-41-11	ALL
	G03		W0101	065	22		27-21-12	ALL
	G04	UNUSED						ALL
	G05		W0101	318Y	22		27-41-11	ALL
	G06		W0101	319B	22		27-41-11	ALL
	G07		W0101	319Y	22		27-41-11	ALL
	G08		W0111	319Y	22		27-41-11	ALL
	G09		W0111	320B	22		27-41-11	ALL
	G10		W0111	320Y	22		27-41-11	ALL
	G11	UNUSED						ALL
	G12	UNUSED						ALL
	G13	UNUSED						ALL
	G14	UNUSED						ALL
	G15	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D01200

Page 20

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01251A		//		PLUG-PART A OF D01251 (continued)				ALL
	H01		W0101	039	22		27-61-14	ALL
	H02		W0101	058	22		27-61-15	ALL
	H03		W0101	092	22		27-61-16	ALL
	H04	UNUSED						ALL
	H05		W0101	318R	22		27-41-11	ALL
	H06		W0101	318B	22		27-41-11	ALL
	H07		W0101	319R	22		27-41-11	ALL
	H08		W0111	319R	22		27-41-11	ALL
	H09		W0111	319B	22		27-41-11	ALL
	H10		W0111	320R	22		27-41-11	ALL
	H11	UNUSED						ALL
	H12		W0111	160	22		27-41-11	ALL
	H13		W0111	094	22		27-21-12	ALL
	H14	UNUSED						ALL
	H15	UNUSED						ALL
	J01	UNUSED						ALL
	J02	UNUSED						ALL
	J03	UNUSED						ALL
	J04	UNUSED						ALL
	J05		W0101	314Y	22		22-21-11	ALL
	J06		W0101	315B	22		22-21-11	ALL
	J07		W0101	315Y	22		22-21-11	ALL
	J08		W0111	315Y	22		22-21-11	ALL
	J09		W0111	316B	22		22-21-11	ALL
	J10		W0111	316Y	22		22-21-11	ALL
	J11	UNUSED						ALL
	J12		W0111	041	22		27-61-16	ALL
	J13		W0111	127	22		22-21-11	ALL
	J14	UNUSED						ALL
	J15	UNUSED						ALL
	K01	UNUSED						ALL
	K02	UNUSED						ALL
	K03	UNUSED						ALL
	K04	UNUSED						ALL
	K05		W0101	314R	22		22-21-11	ALL
	K06		W0101	314B	22		22-21-11	ALL
	K07		W0101	315R	22		22-21-11	ALL
	K08		W0111	315R	22		22-21-11	ALL
	K09		W0111	315B	22		22-21-11	ALL
	K10		W0111	316R	22		22-21-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D01200

Page 21

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01251A		//		PLUG-PART A OF D01251 (continued)				ALL
	K11	UNUSED						ALL
	K12		W0111	020	22		27-61-14	ALL
	K13		W0111	034	22		27-61-15	ALL
	K14	UNUSED						ALL
	K15	UNUSED						ALL
D01251B		//		PLUG-PART B OF D01251				ALL
	A01		W0111	207R	22		27-61-14	ALL
	A02	UNUSED						ALL
	A03	UNUSED						ALL
	A04	UNUSED						ALL
	A05		W0121	210R	22		27-61-16	ALL
	A06	UNUSED						ALL
	A07	UNUSED						ALL
	A08	UNUSED						ALL
	A09	UNUSED						ALL
	A10		W1121	201B	22		27-09-11	ALL
	A11	UNUSED						ALL
	A12	UNUSED						ALL
	A13		W0111	097	22		27-09-14	ALL
	A14	UNUSED						ALL
	A15		W0111	072	22		27-09-11	ALL
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04	UNUSED						ALL
	B05	UNUSED						ALL
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13	UNUSED						ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	C01		W0111	207B	22		27-61-14	ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D01200

Page 22

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01251B		//		PLUG-PART B OF D01251 (continued)				ALL
	C04	UNUSED						ALL
	C05		W0121	210B	22		27-61-16	ALL
	C06	UNUSED						ALL
	C07		W0121	045	22		27-61-16	ALL
	C08	UNUSED						ALL
	C09	UNUSED						ALL
	C10		W1121	201R	22		27-09-11	ALL
	C11	UNUSED						ALL
	C12	UNUSED						ALL
	C13	UNUSED						ALL
	C14	UNUSED						ALL
	C15	UNUSED						ALL
	D01	UNUSED						ALL
	D02	UNUSED						ALL
	D03	UNUSED						ALL
	D04	UNUSED						ALL
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	D08	UNUSED						ALL
	D09	UNUSED						ALL
	D10	UNUSED						ALL
	D11	UNUSED						ALL
	D12	UNUSED						ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15	UNUSED						ALL
	E01	UNUSED						ALL
	E02	UNUSED						ALL
	E03	UNUSED						ALL
	E04	UNUSED						ALL
	E05	UNUSED						ALL
	E06	UNUSED						ALL
	E07	UNUSED						ALL
	E08	UNUSED						ALL
	E09	UNUSED						ALL
	E10	UNUSED						ALL
	E11	UNUSED						ALL
	E12	UNUSED						ALL
	E13	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D01200

Page 23

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01251B		//		PLUG-PART B OF D01251 (continued)				ALL
	E14	UNUSED						ALL
	E15		W1101	020	22		27-09-11	ALL
	F01	UNUSED						ALL
	F02	UNUSED						ALL
	F03		W0121	028	22		27-61-14	ALL
	F04		W0121	033	22		27-61-15	ALL
	F05		W0121	049	22		27-61-16	ALL
	F06	UNUSED						ALL
	F07	UNUSED						ALL
	F08	UNUSED						ALL
	F09	UNUSED						ALL
	F10	UNUSED						ALL
	F11	UNUSED						ALL
	F12	UNUSED						ALL
	F13	UNUSED						ALL
	F14	UNUSED						ALL
	F15	UNUSED						ALL
	G01		W0111	011	22		27-61-14	ALL
	G02	UNUSED						ALL
	G03	UNUSED						ALL
	G04	UNUSED						ALL
	G05	UNUSED						ALL
	G06	UNUSED						ALL
	G07	UNUSED						ALL
	G08	UNUSED						ALL
	G09	UNUSED						ALL
	G10	UNUSED						ALL
	G11	UNUSED						ALL
	G12	UNUSED						ALL
	G13	UNUSED						ALL
	G14	UNUSED						ALL
	G15	UNUSED						ALL
	H01	UNUSED						ALL
	H02	UNUSED						ALL
	H03		W0121	027	22		27-61-14	ALL
	H04		W0121	034	22		27-61-15	ALL
	H05		W0121	048	22		27-61-16	ALL
	H06	UNUSED						ALL
	H07	UNUSED						ALL
	H08	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D01200

Page 24

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01251B		//		PLUG-PART B OF D01251 (continued)				ALL
	H09	UNUSED						ALL
	H10	UNUSED						ALL
	H11	UNUSED						ALL
	H12	UNUSED						ALL
	H13	UNUSED						ALL
	H14	UNUSED						ALL
	H15	UNUSED						ALL
	J01	UNUSED						ALL
	J02	UNUSED						ALL
	J03	UNUSED						ALL
	J04	UNUSED						ALL
	J05	UNUSED						ALL
	J06	UNUSED						ALL
	J07	UNUSED						ALL
	J08	UNUSED						ALL
	J09	UNUSED						ALL
	J10	UNUSED						ALL
	J11	UNUSED						ALL
	J12	UNUSED						ALL
	J13	UNUSED						ALL
	J14	UNUSED						ALL
	J15	UNUSED						ALL
	K01		W0121	089	22		27-61-15	ALL
	K02	UNUSED						ALL
	K03	UNUSED						ALL
	K04	UNUSED						ALL
	K05	UNUSED						ALL
	K06	UNUSED						ALL
	K07	UNUSED						ALL
	K08	UNUSED						ALL
	K09	UNUSED						ALL
	K10	UNUSED						ALL
	K11	UNUSED						ALL
	K12	UNUSED						ALL
	K13		W1101	022	22		27-09-14	ALL
	K14	UNUSED						ALL
	K15		W1101	018	22		27-09-11	ALL
	DED		W0111	072Z			27-09-11	ALL
	DED		W1101	018Z			27-09-11	ALL
	DED		W1101	020Z			27-09-11	ALL

HOOKUP LIST
D280T132

91-21-51
Section D01200
Page 25
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01251C		//		PLUG-PART C OF D01251				ALL
	1	UNUSED						ALL
	2		W0121	055	16		27-09-11	ALL
	3		W0121	054	16		27-09-11	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W0121	057	16		27-09-11	ALL
	8		W0121	056	16		27-09-11	ALL
	9		W0121	059	16		27-09-11	ALL
	10		W0121	058	16		27-09-11	ALL
	11		W0121	060	16		27-09-11	ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	= C12	UNUSED						ALL
	= C13	UNUSED						ALL
D01252		0683/122/R029		RCPT-				050-099
D01252		559/122/R029		RCPT-				150-199, 275-299
	1		W0704	001	20		25-53-14	ALL
	2		W0704	002	20		25-53-14	050-099
	2		W0704	639	20		25-53-14	150-199, 275-299
	3		W0704	003	20		25-53-14	ALL
	4		W0704	330B	20		25-53-12	ALL
	5	DK	W0704	005	18		25-53-12	ALL
	6		W0704	006	20		25-53-14	050-099
	6		W0704	640	20		25-53-14	150-199, 275-299
	7		W0704	330R	20		25-53-12	ALL
	8		W0704	008	20		25-53-12	ALL
	9		W0704	009	20		25-53-12	ALL
	10		W0704	330Y	20		25-53-12	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D01253A		//		PLUG-PART A OF D01253				ALL
	A01	UNUSED						ALL
	A02	UNUSED						ALL
	A03		W0101	051	22		27-61-15	ALL
	A04	UNUSED						ALL
	A05		W0101	044	22		27-61-14	ALL
	A06	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D01200

Page 26

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01253A		//		PLUG-PART A OF D01253 (continued)				ALL
	A07		W0101	173	22		27-41-11	ALL
	A08		W0101	050	22		27-21-12	ALL
	A09	UNUSED						ALL
	A10		W0111	117	22		27-21-12	ALL
	A11	UNUSED						ALL
	A12	UNUSED						ALL
	A13	UNUSED						ALL
	A14		W0111	164	22		27-41-11	ALL
	A15		W0111	091	22		27-21-12	ALL
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04	UNUSED						ALL
	B05		W0101	015	22		27-41-11	ALL
	B06	UNUSED						ALL
	B07		W0101	086	22		27-61-16	ALL
	B08		W0101	026	22		22-21-11	ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13	UNUSED						ALL
	B14		W0111	050	22		27-61-16	ALL
	B15		W0111	124	22		22-21-11	ALL
	C01		W0101	052	22		27-61-15	ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05		W0101	061	22		22-21-11	ALL
	C06	UNUSED						ALL
	C07		W0101	037	22		27-61-14	ALL
	C08		W0101	054	22		27-61-15	ALL
	C09	UNUSED						ALL
	C10	UNUSED						ALL
	C11	UNUSED						ALL
	C12		W0111	118	22		27-21-12	ALL
	C13	UNUSED						ALL
	C14		W0111	022	22		27-61-14	ALL
	C15		W0111	035	22		27-61-15	ALL
	D01	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D01200

Page 27

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01253A		//		PLUG-PART A OF D01253 (continued)				ALL
	D02	UNUSED						ALL
	D03	UNUSED						ALL
	D04	UNUSED						ALL
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	D08	UNUSED						ALL
	D09	UNUSED						ALL
	D10	UNUSED						ALL
	D11	UNUSED						ALL
	D12	UNUSED						ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15	UNUSED						ALL
	E01	UNUSED						ALL
	E02		W0101	016	22		27-41-11	ALL
	E03		W0101	062	22		22-21-11	ALL
	E04	UNUSED						ALL
	E05	UNUSED						ALL
	E06	UNUSED						ALL
	E07	UNUSED						ALL
	E08	UNUSED						ALL
	E09	UNUSED						ALL
	E10	UNUSED						ALL
	E11	UNUSED						ALL
	E12	UNUSED						ALL
	E13	UNUSED						ALL
	E14	UNUSED						ALL
	E15	UNUSED						ALL
	F01	UNUSED						ALL
	F02	UNUSED						ALL
	F03	UNUSED						ALL
	F04	UNUSED						ALL
	F05	UNUSED						ALL
	F06	UNUSED						ALL
	F07	UNUSED						ALL
	F08	UNUSED						ALL
	F09	UNUSED						ALL
	F10	UNUSED						ALL
	F11	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D01200

Page 28

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01253A		//		PLUG-PART A OF D01253 (continued)				ALL
	F12	UNUSED						ALL
	F13		W0111	187	22		27-61-16	ALL
	F14	UNUSED						ALL
	F15	UNUSED						ALL
	G01		W0101	025	22		22-21-11	ALL
	G02		W0101	172	22		27-41-11	ALL
	G03		W0101	049	22		27-21-12	ALL
	G04	UNUSED						ALL
	G05		W0101	320Y	22		27-41-11	ALL
	G06		W0101	321B	22		27-41-11	ALL
	G07		W0101	321Y	22		27-41-11	ALL
	G08		W0111	321Y	22		27-41-11	ALL
	G09		W0111	322B	22		27-41-11	ALL
	G10		W0111	322Y	22		27-41-11	ALL
	G11	UNUSED						ALL
	G12	UNUSED						ALL
	G13	UNUSED						ALL
	G14	UNUSED						ALL
	G15	UNUSED						ALL
	H01		W0101	038	22		27-61-14	ALL
	H02		W0101	055	22		27-61-15	ALL
	H03		W0101	087	22		27-61-16	ALL
	H04	UNUSED						ALL
	H05		W0101	320R	22		27-41-11	ALL
	H06		W0101	320B	22		27-41-11	ALL
	H07		W0101	321R	22		27-41-11	ALL
	H08		W0111	321R	22		27-41-11	ALL
	H09		W0111	321B	22		27-41-11	ALL
	H10		W0111	322R	22		27-41-11	ALL
	H11	UNUSED						ALL
	H12		W0111	163	22		27-41-11	ALL
	H13		W0111	090	22		27-21-12	ALL
	H14	UNUSED						ALL
	H15	UNUSED						ALL
	J01	UNUSED						ALL
	J02	UNUSED						ALL
	J03	UNUSED						ALL
	J04	UNUSED						ALL
	J05		W0101	316Y	22		22-21-11	ALL
	J06		W0101	317B	22		22-21-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D01200

Page 29

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01253A		//		PLUG-PART A OF D01253 (continued)				ALL
	J07		W0101	317Y	22		22-21-11	ALL
	J08		W0111	317Y	22		22-21-11	ALL
	J09		W0111	318B	22		22-21-11	ALL
	J10		W0111	318Y	22		22-21-11	ALL
	J11	UNUSED						ALL
	J12		W0111	051	22		27-61-16	ALL
	J13		W0111	122	22		22-21-11	ALL
	J14	UNUSED						ALL
	J15	UNUSED						ALL
	K01	UNUSED						ALL
	K02	UNUSED						ALL
	K03	UNUSED						ALL
	K04	UNUSED						ALL
	K05		W0101	316R	22		22-21-11	ALL
	K06		W0101	316B	22		22-21-11	ALL
	K07		W0101	317R	22		22-21-11	ALL
	K08		W0111	317R	22		22-21-11	ALL
	K09		W0111	317B	22		22-21-11	ALL
	K10		W0111	318R	22		22-21-11	ALL
	K11	UNUSED						ALL
	K12		W0111	023	22		27-61-14	ALL
	K13		W0111	036	22		27-61-15	ALL
	K14	UNUSED						ALL
	K15	UNUSED						ALL
D01253B		//		PLUG-PART B OF D01253				ALL
	A01	UNUSED						ALL
	A02	UNUSED						ALL
	A03	UNUSED						ALL
	A04	UNUSED						ALL
	A05	UNUSED						ALL
	A06	UNUSED						ALL
	A07		W0121	045	22		27-61-16	ALL
	A08	UNUSED						ALL
	A09	UNUSED						ALL
	A10		W1121	201R	22		27-09-11	ALL
	A11	UNUSED						ALL
	A12	UNUSED						ALL
	A13		W0111	104	22		27-09-14	ALL
	A14	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D01200

Page 30

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01253B		//		PLUG-PART B OF D01253 (continued)				ALL
	A15		W0111	073	22		27-09-11	ALL
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04	UNUSED						ALL
	B05	UNUSED						ALL
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13	UNUSED						ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	C01		W0111	017	22		27-61-14	ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05		W0121	133	22		27-61-16	ALL
	C06	UNUSED						ALL
	C07	UNUSED						ALL
	C08	UNUSED						ALL
	C09	UNUSED						ALL
	C10		W1121	201B	22		27-09-11	ALL
	C11	UNUSED						ALL
	C12	UNUSED						ALL
	C13	UNUSED						ALL
	C14	UNUSED						ALL
	C15	UNUSED						ALL
	D01	UNUSED						ALL
	D02	UNUSED						ALL
	D03	UNUSED						ALL
	D04	UNUSED						ALL
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	D08	UNUSED						ALL
	D09	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D01200
Page 31
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01253B		//		PLUG-PART B OF D01253 (continued)				ALL
	D10	UNUSED						ALL
	D11	UNUSED						ALL
	D12	UNUSED						ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15	UNUSED						ALL
	E01		W0111	011	22		27-61-14	ALL
	E02	UNUSED						ALL
	E03	UNUSED						ALL
	E04	UNUSED						ALL
	E05	UNUSED						ALL
	E06	UNUSED						ALL
	E07	UNUSED						ALL
	E08	UNUSED						ALL
	E09	UNUSED						ALL
	E10	UNUSED						ALL
	E11	UNUSED						ALL
	E12	UNUSED						ALL
	E13	UNUSED						ALL
	E14	UNUSED						ALL
	E15		W0111	069	22		27-09-11	ALL
	F01	UNUSED						ALL
	F02	UNUSED						ALL
	F03		W0121	026	22		27-61-14	ALL
	F04		W0121	040	22		27-61-15	ALL
	F05		W0121	052	22		27-61-16	ALL
	F06	UNUSED						ALL
	F07	UNUSED						ALL
	F08	UNUSED						ALL
	F09	UNUSED						ALL
	F10	UNUSED						ALL
	F11	UNUSED						ALL
	F12	UNUSED						ALL
	F13	UNUSED						ALL
	F14	UNUSED						ALL
	F15	UNUSED						ALL
	G01	UNUSED						ALL
	G02	UNUSED						ALL
	G03	UNUSED						ALL
	G04	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D01200

Page 32

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01253B		//		PLUG-PART B OF D01253 (continued)				ALL
	G05	UNUSED						ALL
	G06	UNUSED						ALL
	G07	UNUSED						ALL
	G08	UNUSED						ALL
	G09	UNUSED						ALL
	G10	UNUSED						ALL
	G11	UNUSED						ALL
	G12	UNUSED						ALL
	G13	UNUSED						ALL
	G14	UNUSED						ALL
	G15	UNUSED						ALL
	H01	UNUSED						ALL
	H02	UNUSED						ALL
	H03		W0121	025	22		27-61-14	ALL
	H04		W0121	039	22		27-61-15	ALL
	H05		W0121	051	22		27-61-16	ALL
	H06	UNUSED						ALL
	H07	UNUSED						ALL
	H08	UNUSED						ALL
	H09	UNUSED						ALL
	H10	UNUSED						ALL
	H11	UNUSED						ALL
	H12	UNUSED						ALL
	H13	UNUSED						ALL
	H14	UNUSED						ALL
	H15	UNUSED						ALL
	J01	UNUSED						ALL
	J02	UNUSED						ALL
	J03	UNUSED						ALL
	J04	UNUSED						ALL
	J05	UNUSED						ALL
	J06	UNUSED						ALL
	J07	UNUSED						ALL
	J08	UNUSED						ALL
	J09	UNUSED						ALL
	J10	UNUSED						ALL
	J11	UNUSED						ALL
	J12	UNUSED						ALL
	J13	UNUSED						ALL
	J14	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D01200

Page 33

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01253B		//		PLUG-PART B OF D01253 (continued)				ALL
	J15	UNUSED						ALL
	K01		W0121	091	22		27-61-15	ALL
	K02	UNUSED						ALL
	K03	UNUSED						ALL
	K04	UNUSED						ALL
	K05	UNUSED						ALL
	K06	UNUSED						ALL
	K07	UNUSED						ALL
	K08	UNUSED						ALL
	K09	UNUSED						ALL
	K10	UNUSED						ALL
	K11	UNUSED						ALL
	K12	UNUSED						ALL
	K13		W1101	032	22		27-09-14	ALL
	K14	UNUSED						ALL
	K15		W1101	016	22		27-09-11	ALL
	DED		W0111	069Z			27-09-11	ALL
	DED		W0111	073Z			27-09-11	ALL
	DED		W1101	016Z			27-09-11	ALL
D01253C		//		PLUG-PART C OF D01253				ALL
	1	UNUSED						ALL
	2		W0121	063	16		27-09-11	ALL
	3		W0121	062	16		27-09-11	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W0121	065	16		27-09-11	ALL
	8		W0121	064	16		27-09-11	ALL
	9		W0121	067	16		27-09-11	ALL
	10		W0121	066	16		27-09-11	ALL
	11		W0121	068	16		27-09-11	ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	= C12	UNUSED						ALL
	= C13	UNUSED						ALL
D01254		L0333/14/RS		PLUG-				ALL
	1	UNUSED						ALL
	2		W0458	301R	20		28-26-11	ALL

HOOKUP LIST
D280T132



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01254		L0333/14/RS		PLUG- (continued)				ALL
	3		W0458	301B	20		28-26-11	ALL
	4		W0458	004	18		28-26-11	ALL
	5		W0458	301Y	20		28-26-11	ALL
	6	UNUSED						ALL
	7		W0458	007	18		28-26-11	ALL
D01255A		//		PLUG-PART A OF D01255				ALL
	A01		W0131	215R	22		27-61-17	ALL
	A02	UNUSED						ALL
	A03	UNUSED						ALL
	A04	UNUSED						ALL
	A05		W0131	101	22		27-61-13	ALL
	A06	UNUSED						ALL
	A07		W0131	083	22		27-41-21	ALL
	A08		W0131	068	22		27-21-22	ALL
	A09	UNUSED						ALL
	A10	UNUSED						ALL
	A11	UNUSED						ALL
	A12		W0131	222R	22		27-21-22	ALL
	A13	UNUSED						ALL
	A14		W0141	110	22		27-41-21	ALL
	A15		W0141	175	22		27-21-22	ALL
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04	UNUSED						ALL
	B05		W0131	084	22		27-41-21	ALL
	B06	UNUSED						ALL
	B07		W0131	122	22		27-61-18	ALL
	B08		W0131	010	22		22-21-21	ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13	UNUSED						ALL
	B14		W0141	165	22		27-61-18	ALL
	B15		W0141	026	22		22-21-21	ALL
	C01		W0131	215B	22		27-61-17	ALL
	C02	UNUSED						ALL
	C03		W0131	114	22		27-61-17	ALL

HOOKUP LIST

D280T132

91-21-51

Section D01200

Page 35

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01255A		//		PLUG-PART A OF D01255 (continued)				ALL
	C04	UNUSED						ALL
	C05		W0131	012	22		22-21-21	ALL
	C06	UNUSED						ALL
	C07		W0131	099	22		27-61-13	ALL
	C08		W0131	109	22		27-61-17	ALL
	C09	UNUSED						ALL
	C10		W0131	129	22		27-21-22	ALL
	C11	UNUSED						ALL
	C12		W0131	222B	22		27-21-22	ALL
	C13	UNUSED						ALL
	C14		W0141	132	22		27-61-13	ALL
	C15		W0141	141	22		27-61-17	ALL
	D01	UNUSED						ALL
	D02	UNUSED						ALL
	D03	UNUSED						ALL
	D04	UNUSED						ALL
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	D08	UNUSED						ALL
	D09	UNUSED						ALL
	D10	UNUSED						ALL
	D11	UNUSED						ALL
	D12	UNUSED						ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15	UNUSED						ALL
	E01	UNUSED						ALL
	E02		W0131	085	22		27-41-21	ALL
	E03		W0131	011	22		22-21-21	ALL
	E04	UNUSED						ALL
	E05	UNUSED						ALL
	E06	UNUSED						ALL
	E07	UNUSED						ALL
	E08	UNUSED						ALL
	E09	UNUSED						ALL
	E10	UNUSED						ALL
	E11	UNUSED						ALL
	E12	UNUSED						ALL
	E13	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D01200

Page 36

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01255A		//		PLUG-PART A OF D01255 (continued)				ALL
	E14	UNUSED						ALL
	E15	UNUSED						ALL
	F01	UNUSED						ALL
	F02	UNUSED						ALL
	F03	UNUSED						ALL
	F04	UNUSED						ALL
	F05	UNUSED						ALL
	F06	UNUSED						ALL
	F07	UNUSED						ALL
	F08	UNUSED						ALL
	F09	UNUSED						ALL
	F10	UNUSED						ALL
	F11	UNUSED						ALL
	F12	UNUSED						ALL
	F13		W0141	163	22		27-61-18	ALL
	F14	UNUSED						ALL
	F15	UNUSED						ALL
	G01		W0131	009	22		22-21-21	ALL
	G02		W0131	082	22		27-41-21	ALL
	G03		W0131	069	22		27-21-22	ALL
	G04	UNUSED						ALL
	G05		W0131	319Y	22		27-41-21	ALL
	G06		W0131	320B	22		27-41-21	ALL
	G07		W0131	320Y	22		27-41-21	ALL
	G08		W0141	316Y	22		27-41-21	ALL
	G09		W0141	317B	22		27-41-21	ALL
	G10		W0141	317Y	22		27-41-21	ALL
	G11	UNUSED						ALL
	G12	UNUSED						ALL
	G13	UNUSED						ALL
	G14	UNUSED						ALL
	G15	UNUSED						ALL
	H01		W0131	098	22		27-61-13	ALL
	H02		W0131	110	22		27-61-17	ALL
	H03		W0131	123	22		27-61-18	ALL
	H04	UNUSED						ALL
	H05		W0131	319R	22		27-41-21	ALL
	H06		W0131	319B	22		27-41-21	ALL
	H07		W0131	320R	22		27-41-21	ALL
	H08		W0141	316R	22		27-41-21	ALL

HOOKUP LIST
D280T132

91-21-51
Section D01200
Page 37
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01255A		//		PLUG-PART A OF D01255 (continued)				ALL
	H09		W0141	316B	22		27-41-21	ALL
	H10		W0141	317R	22		27-41-21	ALL
	H11	UNUSED						ALL
	H12		W0141	109	22		27-41-21	ALL
	H13		W0141	176	22		27-21-22	ALL
	H14	UNUSED						ALL
	H15	UNUSED						ALL
	J01	UNUSED						ALL
	J02	UNUSED						ALL
	J03	UNUSED						ALL
	J04	UNUSED						ALL
	J05		W0131	315Y	22		22-21-21	ALL
	J06		W0131	316B	22		22-21-21	ALL
	J07		W0131	316Y	22		22-21-21	ALL
	J08		W0141	312Y	22		22-21-21	ALL
	J09		W0141	313B	22		22-21-21	ALL
	J10		W0141	313Y	22		22-21-21	ALL
	J11	UNUSED						ALL
	J12		W0141	164	22		27-61-18	ALL
	J13		W0141	025	22		22-21-21	ALL
	J14	UNUSED						ALL
	J15	UNUSED						ALL
	K01	UNUSED						ALL
	K02	UNUSED						ALL
	K03	UNUSED						ALL
	K04	UNUSED						ALL
	K05		W0131	315R	22		22-21-21	ALL
	K06		W0131	315B	22		22-21-21	ALL
	K07		W0131	316R	22		22-21-21	ALL
	K08		W0141	312R	22		22-21-21	ALL
	K09		W0141	312B	22		22-21-21	ALL
	K10		W0141	313R	22		22-21-21	ALL
	K11	UNUSED						ALL
	K12		W0141	133	22		27-61-13	ALL
	K13		W0141	142	22		27-61-17	ALL
	K14	UNUSED						ALL
	K15	UNUSED						ALL
D01255B		//		PLUG-PART B OF D01255				ALL
	A01		W0141	212R	22		27-61-13	ALL

HOOKUP LIST

D280T132

91-21-51

Section D01200

Page 38

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01255B		//		PLUG-PART B OF D01255 (continued)				ALL
	A02	UNUSED						ALL
	A03	UNUSED						ALL
	A04	UNUSED						ALL
	A05		W0151	212R	22		27-61-18	ALL
	A06	UNUSED						ALL
	A07	UNUSED						ALL
	A08	UNUSED						ALL
	A09	UNUSED						ALL
	A10		W1131	077	22		27-09-11	ALL
	A11	UNUSED						ALL
	A12	UNUSED						ALL
	A13		W0141	090	22		27-09-14	ALL
	A14	UNUSED						ALL
	A15		W0141	052	22		27-09-11	ALL
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04	UNUSED						ALL
	B05	UNUSED						ALL
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13	UNUSED						ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	C01		W0141	212B	22		27-61-13	ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05		W0151	212B	22		27-61-18	ALL
	C06	UNUSED						ALL
	C07		W0151	084	22		27-61-18	ALL
	C08	UNUSED						ALL
	C09	UNUSED						ALL
	C10		W1131	078	22		27-09-11	ALL
	C11	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D01200

Page 39

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01255B		//		PLUG-PART B OF D01255 (continued)				ALL
	C12	UNUSED						ALL
	C13	UNUSED						ALL
	C14	UNUSED						ALL
	C15	UNUSED						ALL
	D01	UNUSED						ALL
	D02	UNUSED						ALL
	D03	UNUSED						ALL
	D04	UNUSED						ALL
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	D08	UNUSED						ALL
	D09	UNUSED						ALL
	D10	UNUSED						ALL
	D11	UNUSED						ALL
	D12	UNUSED						ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15	UNUSED						ALL
	E01	UNUSED						ALL
	E02	UNUSED						ALL
	E03	UNUSED						ALL
	E04	UNUSED						ALL
	E05	UNUSED						ALL
	E06	UNUSED						ALL
	E07	UNUSED						ALL
	E08	UNUSED						ALL
	E09	UNUSED						ALL
	E10	UNUSED						ALL
	E11	UNUSED						ALL
	E12	UNUSED						ALL
	E13	UNUSED						ALL
	E14	UNUSED						ALL
	E15		W0131	019	22		27-09-11	ALL
	F01	UNUSED						ALL
	F02	UNUSED						ALL
	F03		W0151	062	22		27-61-13	ALL
	F04		W0151	070	22		27-61-17	ALL
	F05		W0151	088	22		27-61-18	ALL
	F06	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D01200

Page 40

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01255B		//		PLUG-PART B OF D01255 (continued)				ALL
	F07	UNUSED						ALL
	F08	UNUSED						ALL
	F09	UNUSED						ALL
	F10	UNUSED						ALL
	F11	UNUSED						ALL
	F12	UNUSED						ALL
	F13	UNUSED						ALL
	F14	UNUSED						ALL
	F15	UNUSED						ALL
	G01		W0141	127	22		27-61-13	ALL
	G02	UNUSED						ALL
	G03	UNUSED						ALL
	G04	UNUSED						ALL
	G05	UNUSED						ALL
	G06	UNUSED						ALL
	G07	UNUSED						ALL
	G08	UNUSED						ALL
	G09	UNUSED						ALL
	G10	UNUSED						ALL
	G11	UNUSED						ALL
	G12	UNUSED						ALL
	G13	UNUSED						ALL
	G14	UNUSED						ALL
	G15	UNUSED						ALL
	H01	UNUSED						ALL
	H02	UNUSED						ALL
	H03		W0151	061	22		27-61-13	ALL
	H04		W0151	071	22		27-61-17	ALL
	H05		W0151	087	22		27-61-18	ALL
	H06	UNUSED						ALL
	H07	UNUSED						ALL
	H08	UNUSED						ALL
	H09	UNUSED						ALL
	H10	UNUSED						ALL
	H11	UNUSED						ALL
	H12	UNUSED						ALL
	H13	UNUSED						ALL
	H14	UNUSED						ALL
	H15	UNUSED						ALL
	J01	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D01200

Page 41

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01255B		//		PLUG-PART B OF D01255 (continued)				ALL
	J02	UNUSED						ALL
	J03	UNUSED						ALL
	J04	UNUSED						ALL
	J05	UNUSED						ALL
	J06	UNUSED						ALL
	J07	UNUSED						ALL
	J08	UNUSED						ALL
	J09	UNUSED						ALL
	J10	UNUSED						ALL
	J11	UNUSED						ALL
	J12	UNUSED						ALL
	J13	UNUSED						ALL
	J14	UNUSED						ALL
	J15	UNUSED						ALL
	K01		W0151	049	22		27-61-17	ALL
	K02	UNUSED						ALL
	K03	UNUSED						ALL
	K04	UNUSED						ALL
	K05	UNUSED						ALL
	K06	UNUSED						ALL
	K07	UNUSED						ALL
	K08	UNUSED						ALL
	K09	UNUSED						ALL
	K10	UNUSED						ALL
	K11	UNUSED						ALL
	K12	UNUSED						ALL
	K13		W1131	016	22		27-09-14	ALL
	K14	UNUSED						ALL
	K15		W0131	018	22		27-09-11	ALL
D01255C		//		PLUG-PART C OF D01255				ALL
	1	UNUSED						ALL
	2		W0151	007	16		27-09-11	ALL
	3		W0151	006	16		27-09-11	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W0151	009	16		27-09-11	ALL
	8		W0151	008	16		27-09-11	ALL
	9		W0151	011	16		27-09-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D01200

Page 42

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01255C		//		PLUG-PART C OF D01255 (continued)				ALL
	10		W0151	010	16		27-09-11	ALL
	11		W0151	012	16		27-09-11	ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	= C12	UNUSED						ALL
	= C13	UNUSED						ALL
D01256		R0333/12/RS		PLUG-				ALL
	1	UNUSED						ALL
	2		W0456	303B	20		28-26-11	ALL
	3		W0456	303Y	20		28-26-11	ALL
	4		W0456	014	18		28-26-11	ALL
	5		W0456	303R	20		28-26-11	ALL
	6	UNUSED						ALL
	7		W0456	025	18		28-26-11	ALL
D01257A		//		PLUG-PART A OF D01257				ALL
	A01	UNUSED						ALL
	A02	UNUSED						ALL
	A03		W0131	114	22		27-61-17	ALL
	A04	UNUSED						ALL
	A05		W0131	104	22		27-61-13	ALL
	A06	UNUSED						ALL
	A07		W0131	088	22		27-41-21	ALL
	A08		W0131	070	22		27-21-22	ALL
	A09	UNUSED						ALL
	A10		W0131	129	22		27-21-22	ALL
	A11	UNUSED						ALL
	A12	UNUSED						ALL
	A13	UNUSED						ALL
	A14		W0141	113	22		27-41-21	ALL
	A15		W0141	177	22		27-21-22	ALL
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04	UNUSED						ALL
	B05		W0131	089	22		27-41-21	ALL
	B06	UNUSED						ALL
	B07		W0131	125	22		27-61-18	ALL
	B08		W0131	006	22		22-21-21	ALL

HOOKUP LIST
D280T132

91-21-51
Section D01200
Page 43
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01257A		//		PLUG-PART A OF D01257 (continued)				ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13	UNUSED						ALL
	B14		W0141	173	22		27-61-18	ALL
	B15		W0141	019	22		22-21-21	ALL
	C01		W0131	137	22		27-61-17	ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05		W0131	007	22		22-21-21	ALL
	C06	UNUSED						ALL
	C07		W0131	106	22		27-61-13	ALL
	C08		W0131	112	22		27-61-17	ALL
	C09	UNUSED						ALL
	C10	UNUSED						ALL
	C11	UNUSED						ALL
	C12		W0131	130	22		27-21-22	ALL
	C13	UNUSED						ALL
	C14		W0141	135	22		27-61-13	ALL
	C15		W0141	144	22		27-61-17	ALL
	D01	UNUSED						ALL
	D02	UNUSED						ALL
	D03	UNUSED						ALL
	D04	UNUSED						ALL
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	D08	UNUSED						ALL
	D09	UNUSED						ALL
	D10	UNUSED						ALL
	D11	UNUSED						ALL
	D12	UNUSED						ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15	UNUSED						ALL
	E01	UNUSED						ALL
	E02		W0131	090	22		27-41-21	ALL
	E03		W0131	008	22		22-21-21	ALL

HOOKUP LIST

D280T132

91-21-51

Section D01200

Page 44

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01257A		//		PLUG-PART A OF D01257 (continued)				ALL
	E04	UNUSED						ALL
	E05	UNUSED						ALL
	E06	UNUSED						ALL
	E07	UNUSED						ALL
	E08	UNUSED						ALL
	E09	UNUSED						ALL
	E10	UNUSED						ALL
	E11	UNUSED						ALL
	E12	UNUSED						ALL
	E13	UNUSED						ALL
	E14	UNUSED						ALL
	E15	UNUSED						ALL
	F01	UNUSED						ALL
	F02	UNUSED						ALL
	F03	UNUSED						ALL
	F04	UNUSED						ALL
	F05	UNUSED						ALL
	F06	UNUSED						ALL
	F07	UNUSED						ALL
	F08	UNUSED						ALL
	F09	UNUSED						ALL
	F10	UNUSED						ALL
	F11	UNUSED						ALL
	F12	UNUSED						ALL
	F13		W0141	171	22		27-61-18	ALL
	F14	UNUSED						ALL
	F15	UNUSED						ALL
	G01		W0131	005	22		22-21-21	ALL
	G02		W0131	087	22		27-41-21	ALL
	G03		W0131	071	22		27-21-22	ALL
	G04	UNUSED						ALL
	G05		W0131	321Y	22		27-41-21	ALL
	G06		W0131	322B	22		27-41-21	ALL
	G07		W0131	322Y	22		27-41-21	ALL
	G08		W0141	318Y	22		27-41-21	ALL
	G09		W0141	319B	22		27-41-21	ALL
	G10		W0141	319Y	22		27-41-21	ALL
	G11	UNUSED						ALL
	G12	UNUSED						ALL
	G13	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D01200

Page 45

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01257A		//		PLUG-PART A OF D01257 (continued)				ALL
	G14	UNUSED						ALL
	G15	UNUSED						ALL
	H01		W0131	105	22		27-61-13	ALL
	H02		W0131	113	22		27-61-17	ALL
	H03		W0131	126	22		27-61-18	ALL
	H04	UNUSED						ALL
	H05		W0131	321R	22		27-41-21	ALL
	H06		W0131	321B	22		27-41-21	ALL
	H07		W0131	322R	22		27-41-21	ALL
	H08		W0141	318R	22		27-41-21	ALL
	H09		W0141	318B	22		27-41-21	ALL
	H10		W0141	319R	22		27-41-21	ALL
	H11	UNUSED						ALL
	H12		W0141	112	22		27-41-21	ALL
	H13		W0141	178	22		27-21-22	ALL
	H14	UNUSED						ALL
	H15	UNUSED						ALL
	J01	UNUSED						ALL
	J02	UNUSED						ALL
	J03	UNUSED						ALL
	J04	UNUSED						ALL
	J05		W0131	317Y	22		22-21-21	ALL
	J06		W0131	318B	22		22-21-21	ALL
	J07		W0131	318Y	22		22-21-21	ALL
	J08		W0141	314Y	22		22-21-21	ALL
	J09		W0141	315B	22		22-21-21	ALL
	J10		W0141	315Y	22		22-21-21	ALL
	J11	UNUSED						ALL
	J12		W0141	172	22		27-61-18	ALL
	J13		W0141	020	22		22-21-21	ALL
	J14	UNUSED						ALL
	J15	UNUSED						ALL
	K01	UNUSED						ALL
	K02	UNUSED						ALL
	K03	UNUSED						ALL
	K04	UNUSED						ALL
	K05		W0131	317R	22		22-21-21	ALL
	K06		W0131	317B	22		22-21-21	ALL
	K07		W0131	318R	22		22-21-21	ALL
	K08		W0141	314R	22		22-21-21	ALL

HOOKUP LIST

D280T132

91-21-51

Section D01200

Page 46

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01257A		//		PLUG-PART A OF D01257 (continued)				ALL
	K09		W0141	314B	22		22-21-21	ALL
	K10		W0141	315R	22		22-21-21	ALL
	K11	UNUSED						ALL
	K12		W0141	136	22		27-61-13	ALL
	K13		W0141	145	22		27-61-17	ALL
	K14	UNUSED						ALL
	K15	UNUSED						ALL
D01257B		//		PLUG-PART B OF D01257				ALL
	A01	UNUSED						ALL
	A02	UNUSED						ALL
	A03	UNUSED						ALL
	A04	UNUSED						ALL
	A05	UNUSED						ALL
	A06	UNUSED						ALL
	A07		W0151	084	22		27-61-18	ALL
	A08	UNUSED						ALL
	A09	UNUSED						ALL
	A10		W1131	078	22		27-09-11	ALL
	A11	UNUSED						ALL
	A12	UNUSED						ALL
	A13		W0141	098	22		27-09-14	ALL
	A14	UNUSED						ALL
	A15		W0141	051	22		27-09-11	ALL
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04	UNUSED						ALL
	B05	UNUSED						ALL
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13	UNUSED						ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	C01		W0141	128	22		27-61-13	ALL

HOOKUP LIST
D280T132

91-21-51
Section D01200
Page 47
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01257B		//		PLUG-PART B OF D01257 (continued)				ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05		W0151	085	22		27-61-18	ALL
	C06	UNUSED						ALL
	C07	UNUSED						ALL
	C08	UNUSED						ALL
	C09	UNUSED						ALL
	C10		W1131	077	22		27-09-11	ALL
	C11	UNUSED						ALL
	C12	UNUSED						ALL
	C13	UNUSED						ALL
	C14	UNUSED						ALL
	C15	UNUSED						ALL
	D01	UNUSED						ALL
	D02	UNUSED						ALL
	D03	UNUSED						ALL
	D04	UNUSED						ALL
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	D08	UNUSED						ALL
	D09	UNUSED						ALL
	D10	UNUSED						ALL
	D11	UNUSED						ALL
	D12	UNUSED						ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15	UNUSED						ALL
	E01		W0141	127	22		27-61-13	ALL
	E02	UNUSED						ALL
	E03	UNUSED						ALL
	E04	UNUSED						ALL
	E05	UNUSED						ALL
	E06	UNUSED						ALL
	E07	UNUSED						ALL
	E08	UNUSED						ALL
	E09	UNUSED						ALL
	E10	UNUSED						ALL
	E11	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D01200

Page 48

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01257B		//		PLUG-PART B OF D01257 (continued)				ALL
	E12	UNUSED						ALL
	E13	UNUSED						ALL
	E14	UNUSED						ALL
	E15		W0141	049	22		27-09-11	ALL
	F01	UNUSED						ALL
	F02	UNUSED						ALL
	F03		W0151	060	22		27-61-13	ALL
	F04		W0151	077	22		27-61-17	ALL
	F05		W0151	091	22		27-61-18	ALL
	F06	UNUSED						ALL
	F07	UNUSED						ALL
	F08	UNUSED						ALL
	F09	UNUSED						ALL
	F10	UNUSED						ALL
	F11	UNUSED						ALL
	F12	UNUSED						ALL
	F13	UNUSED						ALL
	F14	UNUSED						ALL
	F15	UNUSED						ALL
	G01	UNUSED						ALL
	G02	UNUSED						ALL
	G03	UNUSED						ALL
	G04	UNUSED						ALL
	G05	UNUSED						ALL
	G06	UNUSED						ALL
	G07	UNUSED						ALL
	G08	UNUSED						ALL
	G09	UNUSED						ALL
	G10	UNUSED						ALL
	G11	UNUSED						ALL
	G12	UNUSED						ALL
	G13	UNUSED						ALL
	G14	UNUSED						ALL
	G15	UNUSED						ALL
	H01	UNUSED						ALL
	H02	UNUSED						ALL
	H03		W0151	059	22		27-61-13	ALL
	H04		W0151	076	22		27-61-17	ALL
	H05		W0151	090	22		27-61-18	ALL
	H06	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D01200

Page 49

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01257B		//		PLUG-PART B OF D01257 (continued)				ALL
	H07	UNUSED						ALL
	H08	UNUSED						ALL
	H09	UNUSED						ALL
	H10	UNUSED						ALL
	H11	UNUSED						ALL
	H12	UNUSED						ALL
	H13	UNUSED						ALL
	H14	UNUSED						ALL
	H15	UNUSED						ALL
	J01	UNUSED						ALL
	J02	UNUSED						ALL
	J03	UNUSED						ALL
	J04	UNUSED						ALL
	J05	UNUSED						ALL
	J06	UNUSED						ALL
	J07	UNUSED						ALL
	J08	UNUSED						ALL
	J09	UNUSED						ALL
	J10	UNUSED						ALL
	J11	UNUSED						ALL
	J12	UNUSED						ALL
	J13	UNUSED						ALL
	J14	UNUSED						ALL
	J15	UNUSED						ALL
	K01		W0151	050	22		27-61-17	ALL
	K02	UNUSED						ALL
	K03	UNUSED						ALL
	K04	UNUSED						ALL
	K05	UNUSED						ALL
	K06	UNUSED						ALL
	K07	UNUSED						ALL
	K08	UNUSED						ALL
	K09	UNUSED						ALL
	K10	UNUSED						ALL
	K11	UNUSED						ALL
	K12	UNUSED						ALL
	K13		W1131	024	22		27-09-14	ALL
	K14	UNUSED						ALL
	K15		W0131	017	22		27-09-11	ALL

HOOKUP LIST
D280T132

91-21-51
Section D01200
Page 50
Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01257C		//		PLUG-PART C OF D01257				ALL
	1	UNUSED						ALL
	2		W0151	016	16		27-09-11	ALL
	3		W0151	015	16		27-09-11	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W0151	018	16		27-09-11	ALL
	8		W0151	017	16		27-09-11	ALL
	9		W0151	020	16		27-09-11	ALL
	10		W0151	019	16		27-09-11	ALL
	11		W0151	021	16		27-09-11	ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	= C12	UNUSED						ALL
	= C13	UNUSED						ALL
D01259A		//		PLUG-PART A OF D01259				ALL
	A01		W0101	129	22		22-21-11	ALL
	A02		W0101	026	22		22-21-11	ALL
	A03	UNUSED						ALL
	A04	UNUSED						050-099
	A04		W0101	500	22		22-21-11	150-199, 275-299
	A05		W0101	062	22		22-21-11	ALL
	A06	UNUSED						ALL
	A07	UNUSED						ALL
	A08	UNUSED						ALL
	A09	UNUSED						ALL
	A10	UNUSED						ALL
	A11	UNUSED						ALL
	A12	UNUSED						ALL
	A13	UNUSED						ALL
	A14		W0111	217R	24		22-21-11	ALL
	A15		W0111	217B	24		22-21-11	ALL
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04		W0101	124	22		22-21-11	ALL
	B05		W0101	061	22		22-21-11	ALL
	B06	UNUSED						ALL
	B07	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D01200

Page 51

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01259A		//		PLUG-PART A OF D01259 (continued)				ALL
	B08	UNUSED						ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13	UNUSED						ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	C01		W0101	128	22		22-21-11	ALL
	C02		W0101	025	22		22-21-11	ALL
	C03	UNUSED						ALL
	C04		W0101	123	22		22-21-11	ALL
	C05	UNUSED						ALL
	C06	UNUSED						ALL
	C07	UNUSED						ALL
	C08	UNUSED						ALL
	C09	UNUSED						ALL
	C10	UNUSED						ALL
	C11	UNUSED						ALL
	C12	UNUSED						ALL
	C13	UNUSED						ALL
	C14		W0111	314B	22		22-21-11	ALL
	C15		W0111	314Y	22		22-21-11	ALL
	D01	UNUSED						ALL
	D02	UNUSED						ALL
	D03	UNUSED						ALL
	D04		W0101	122	22		22-21-11	050-099 150-199, 275-299
	D04	UNUSED						ALL
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	D08	UNUSED						ALL
	D09	UNUSED						ALL
	D10	UNUSED						ALL
	D11	UNUSED						ALL
	D12	UNUSED						ALL
	D13	UNUSED						ALL
	D14		W0111	314R	22		22-21-11	ALL
	D15		W0111	218B	22		22-21-11	ALL
	E01		W0101	317B	22		22-21-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D01200

Page 52

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01259A		//		PLUG-PART A OF D01259 (continued)				ALL
	E02		W0101	317Y	22		22-21-11	ALL
	E03	UNUSED						ALL
	E04	UNUSED						ALL
	E05	UNUSED						ALL
	E06	UNUSED						ALL
	E07	UNUSED						ALL
	E08	UNUSED						ALL
	E09	UNUSED						ALL
	E10	UNUSED						ALL
	E11	UNUSED						ALL
	E12	UNUSED						ALL
	E13	UNUSED						ALL
	E14		W0111	218R	22		22-21-11	ALL
	E15		W0111	219B	22		22-21-11	ALL
	F01		W0101	316Y	22		22-21-11	ALL
	F02		W0101	317R	22		22-21-11	ALL
	F03	UNUSED						ALL
	F04		W0101	143	22		22-21-11	ALL
	F05	UNUSED						ALL
	F06	UNUSED						ALL
	F07	UNUSED						ALL
	F08	UNUSED						ALL
	F09	UNUSED						ALL
	F10	UNUSED						ALL
	F11	UNUSED						ALL
	F12	UNUSED						ALL
	F13	UNUSED						ALL
	F14		W0111	219R	22		22-21-11	ALL
	F15		W0111	188	22		22-21-11	ALL
	G01		W0101	316R	22		22-21-11	ALL
	G02		W0101	316B	22		22-21-11	ALL
	G03	UNUSED						ALL
	G04		W0101	132	22		22-21-11	ALL
	G05		W0101	131	22		22-21-11	ALL
	G06	UNUSED						ALL
	G07	UNUSED						ALL
	G08	UNUSED						ALL
	G09	UNUSED						ALL
	G10	UNUSED						ALL
	G11	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D01200

Page 53

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01259A		//		PLUG-PART A OF D01259 (continued)				ALL
	G12	UNUSED						ALL
	G13	UNUSED						ALL
	G14	UNUSED						ALL
	G15	UNUSED						ALL
	H01		W0101	315B	22		22-21-11	ALL
	H02		W0101	315Y	22		22-21-11	ALL
	H03	UNUSED						ALL
	H04		W0101	073	22		27-09-12	ALL
	H05		W0101	144	22		22-21-11	ALL
	H06	UNUSED						ALL
	H07	UNUSED						ALL
	H08	UNUSED						ALL
	H09	UNUSED						ALL
	H10	UNUSED						ALL
	H11	UNUSED						ALL
	H12	UNUSED						050-099
	H12		W0111	228B	22		22-21-11	150-199, 275-299
	H13	UNUSED						ALL
	H14	UNUSED						ALL
	H15	UNUSED						050-099
	H15		W0111	184	22		22-21-11	150-199, 275-299
	J01		W0101	314Y	22		22-21-11	ALL
	J02		W0101	315R	22		22-21-11	ALL
	J03	UNUSED						ALL
	J04	UNUSED						ALL
	J05	UNUSED						ALL
	J06	UNUSED						ALL
	J07	UNUSED						ALL
	J08	UNUSED						ALL
	J09	UNUSED						ALL
	J10	UNUSED						ALL
	J11	UNUSED						ALL
	J12	UNUSED						ALL
	J13	UNUSED						ALL
	J14	UNUSED						ALL
	J15	UNUSED						ALL
	K01		W0101	314R	22		22-21-11	ALL
	K02		W0101	314B	22		22-21-11	ALL
	K03	UNUSED						ALL
	K04		W0101	217R	24		22-21-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D01200

Page 54

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01259A		//		PLUG-PART A OF D01259 (continued)				ALL
	K05		W0101	217B	24		22-21-11	ALL
	K06	UNUSED						ALL
	K07	UNUSED						ALL
	K08	UNUSED						ALL
	K09	UNUSED						ALL
	K10	UNUSED						ALL
	K11	UNUSED						ALL
	K12	UNUSED						050-099
	K12		W0111	228R	22		22-21-11	150-199, 275-299
	K13	UNUSED						ALL
	K14		W0101	218R	24		22-21-11	ALL
	K15		W0101	218B	24		22-21-11	ALL
	CAP	Y	W1101	121	22		22-21-11	150-199, 275-299
	CAP	Y	W1101	122	22		22-21-11	150-199, 275-299
	DED		W0101	217Z			22-21-11	ALL
	DED		W0101	218Z			22-21-11	ALL
	DED		W0111	217Z			22-21-11	ALL
D01259B		//		PLUG-PART B OF D01259				ALL
	A01		W0111	126	22		22-21-11	ALL
	A02		W0111	124	22		22-21-11	ALL
	A03	UNUSED						ALL
	A04		W0111	131	22		22-21-11	ALL
	A05	UNUSED						ALL
	A06	UNUSED						ALL
	A07	UNUSED						ALL
	A08	UNUSED						ALL
	A09	UNUSED						ALL
	A10	UNUSED						ALL
	A11	UNUSED						ALL
	A12		W0121	078	22		27-09-13	ALL
	A13	UNUSED						ALL
	A14		W0121	214R	24		22-21-11	ALL
	A15		W0121	214B	24		22-21-11	ALL
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04	UNUSED						ALL
	B05	UNUSED						ALL
	B06	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D01200

Page 55

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01259B		//		PLUG-PART B OF D01259 (continued)				ALL
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12		W0121	077	22		27-09-13	ALL
	B13	UNUSED						ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	C01		W0111	127	22		22-21-11	ALL
	C02		W0111	122	22		22-21-11	ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05	UNUSED						ALL
	C06	UNUSED						ALL
	C07	UNUSED						ALL
	C08	UNUSED						ALL
	C09	UNUSED						ALL
	C10	UNUSED						ALL
	C11	UNUSED						ALL
	C12	UNUSED						ALL
	C13	UNUSED						ALL
	C14		W0121	074	22		27-09-12	ALL
	C15		W0121	001	22		22-21-11	ALL
	D01	UNUSED						ALL
	D02	UNUSED						ALL
	D03	UNUSED						ALL
	D04	UNUSED						ALL
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	D08	UNUSED						ALL
	D09	UNUSED						ALL
	D10	UNUSED						ALL
	D11	UNUSED						ALL
	D12	UNUSED						ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15	UNUSED						ALL
	E01		W0111	318B	22		22-21-11	ALL

HOOKUP LIST
D280T132

91-21-51
Section D01200
Page 56
Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01259B		//		PLUG-PART B OF D01259 (continued)				ALL
	E02		W0111	318Y	22		22-21-11	ALL
	E03	UNUSED						ALL
	E04	UNUSED						ALL
	E05	UNUSED						ALL
	E06	UNUSED						ALL
	E07	UNUSED						ALL
	E08	UNUSED						ALL
	E09	UNUSED						ALL
	E10	UNUSED						ALL
	E11	UNUSED						ALL
	E12	UNUSED						ALL
	E13	UNUSED						ALL
	E14	UNUSED						ALL
	E15	UNUSED						ALL
	F01		W0111	317Y	22		22-21-11	ALL
	F02		W0111	318R	22		22-21-11	ALL
	F03	UNUSED						ALL
	F04	UNUSED						ALL
	F05	UNUSED						ALL
	F06	UNUSED						ALL
	F07		W1101	005	22		22-21-11	ALL
	F08		W1101	007	22		22-21-11	ALL
	F09	UNUSED						ALL
	F10	UNUSED						ALL
	F11	UNUSED						ALL
	F12	UNUSED						ALL
	F13	UNUSED						ALL
	F14	UNUSED						ALL
	F15	UNUSED						ALL
	G01		W0111	317R	22		22-21-11	ALL
	G02		W0111	317B	22		22-21-11	ALL
	G03	UNUSED						ALL
	G04	UNUSED						ALL
	G05	UNUSED						ALL
	G06	UNUSED						ALL
	G07		W1101	002	22		22-21-11	ALL
	G08		W1101	001	22		22-21-11	ALL
	G09	UNUSED						ALL
	G10		W1101	024	22		27-09-14	ALL
	G11	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D01200

Page 57

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01259B		//		PLUG-PART B OF D01259 (continued)				ALL
	G12	UNUSED						ALL
	G13	UNUSED						ALL
	G14	UNUSED						ALL
	G15	UNUSED						ALL
	H01		W0111	316B	22		22-21-11	ALL
	H02		W0111	316Y	22		22-21-11	ALL
	H03	UNUSED						ALL
	H04		W0111	080	22		27-09-12	ALL
	H05		W0111	130	22		22-21-11	ALL
	H06	UNUSED						ALL
	H07	UNUSED						ALL
	H08	UNUSED						ALL
	H09	UNUSED						ALL
	H10		W0101	136	22		22-21-11	ALL
	H11	UNUSED						ALL
	H12	UNUSED						ALL
	H13	UNUSED						ALL
	H14	UNUSED						050-099
	H14		W0111	232R	24		22-21-31	150-199, 275-299
	H15	UNUSED						050-099
	H15		W0111	232B	24		22-21-31	150-199, 275-299
	J01		W0111	315Y	22		22-21-11	ALL
	J02		W0111	316R	22		22-21-11	ALL
	J03	UNUSED						ALL
	J04	UNUSED						ALL
	J05	UNUSED						ALL
	J06	UNUSED						ALL
	J07	UNUSED						ALL
	J08	UNUSED						ALL
	J09	UNUSED						ALL
	J10	UNUSED						ALL
	J11	UNUSED						ALL
	J12	UNUSED						ALL
	J13	UNUSED						ALL
	J14	UNUSED						ALL
	J15	UNUSED						ALL
	K01		W0111	315R	22		22-21-11	ALL
	K02		W0111	315B	22		22-21-11	ALL
	K03	UNUSED						ALL
	K04		W0111	216R	24		22-21-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D01200

Page 58

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01259B		//		PLUG-PART B OF D01259 (continued)				ALL
	K05		W0111	216B	24		22-21-11	ALL
	K06	UNUSED						ALL
	K07		W0111	132	22		22-21-11	ALL
	K08		W0111	133	22		22-21-11	ALL
	K09	UNUSED						ALL
	K10		W1101	008	22		22-21-11	ALL
	K11	UNUSED						ALL
	K12	UNUSED						ALL
	K13	UNUSED						ALL
	K14	UNUSED						050-099
	K14		W0111	229R	22		22-21-11	150-199, 275-299
	K15	UNUSED						050-099
	K15		W0111	229B	22		22-21-11	150-199, 275-299
	DED		W0111	131Z			22-21-11	ALL
	DED		W0111	216Z			22-21-11	ALL
	DED		W0121	214Z			22-21-11	ALL
	DED		W1101	001Z			22-21-11	ALL
	DED		W1101	008Z			22-21-11	ALL
	DED		W0111	229Z			22-21-11	150-199, 275-299
	DED		W0111	232	20		22-21-31	150-199, 275-299
			W0111	232Z			22-21-31	150-199, 275-299
D01259C		//		PLUG-PART C OF D01259				ALL
	1		W0121	120	20		22-21-11	ALL
	2		W0121	121	16		22-21-11	ALL
	3		W0121	122	16		22-21-11	ALL
	4		W0121	123	20		22-21-11	ALL
	5	UNUSED						ALL
	6		W0121	124	20		22-21-11	ALL
	7	UNUSED						ALL
	8		W0121	125	16		22-21-11	ALL
	9		W0121	126	16		22-21-11	ALL
	10		W0121	127	16		22-21-11	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	= C12	UNUSED						ALL
	= C13	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D01200
Page 59
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01260		0474/122/L029		RCPT-				050-099
	1		W0704	509	20		25-53-14	050-099
	2		W0704	511	20		25-53-14	050-099
	3		W0704	510	20		25-53-14	050-099
	4		W0704	337B	20		25-53-12	050-099
	5	DK	W0704	513	18		25-53-12	050-099
	6		W0704	512	20		25-53-14	050-099
	7		W0704	337R	20		25-53-12	050-099
	8		W0704	514	20		25-53-12	050-099
	9		W0704	515	20		25-53-12	050-099
	10		W0704	337Y	20		25-53-12	050-099
	11	UNUSED						050-099
	12	UNUSED						050-099
D01261A		//		PLUG-PART A OF D01261				ALL
	A01		W0131	010	22		22-21-21	ALL
	A02		W0131	006	22		22-21-21	ALL
	A03	UNUSED						ALL
	A04	UNUSED						050-099
	A04		W0131	195	22		22-21-21	150-199, 275-299
	A05		W0131	008	22		22-21-21	ALL
	A06	UNUSED						ALL
	A07	UNUSED						ALL
	A08	UNUSED						ALL
	A09	UNUSED						ALL
	A10	UNUSED						ALL
	A11	UNUSED						ALL
	A12	UNUSED						ALL
	A13	UNUSED						ALL
	A14		W0131	205R	24		22-21-21	ALL
	A15		W0131	205B	24		22-21-21	ALL
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04		W0131	015	22		22-21-21	050-099
	B04		W0131	194	22		22-21-21	150-199, 275-299
	B05		W0131	007	22		22-21-21	ALL
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D01200

Page 60

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01261A		//		PLUG-PART A OF D01261 (continued)				ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13	UNUSED						ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	C01		W0131	009	22		22-21-21	ALL
	C02		W0131	005	22		22-21-21	ALL
	C03	UNUSED						ALL
	C04		W0131	014	22		22-21-21	050-099
	C04		W0131	188	22		22-21-21	150-199, 275-299
	C05	UNUSED						ALL
	C06	UNUSED						ALL
	C07	UNUSED						ALL
	C08	UNUSED						ALL
	C09	UNUSED						ALL
	C10	UNUSED						ALL
	C11	UNUSED						ALL
	C12	UNUSED						ALL
	C13	UNUSED						ALL
	C14		W0131	301B	22		22-21-21	ALL
	C15		W0131	301Y	22		22-21-21	ALL
	D01	UNUSED						ALL
	D02	UNUSED						ALL
	D03	UNUSED						ALL
	D04		W0131	013	22		22-21-21	050-099
	D04	UNUSED						150-199, 275-299
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	D08	UNUSED						ALL
	D09	UNUSED						ALL
	D10	UNUSED						ALL
	D11	UNUSED						ALL
	D12	UNUSED						ALL
	D13	UNUSED						ALL
	D14		W0131	301R	22		22-21-21	ALL
	D15		W0131	202B	22		22-21-21	ALL
	E01		W0131	318B	22		22-21-21	ALL
	E02		W0131	318Y	22		22-21-21	ALL

HOOKUP LIST

D280T132

91-21-51

Section D01200

Page 61

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01261A		//		PLUG-PART A OF D01261 (continued)				ALL
	E03	UNUSED						ALL
	E04		W0131	021	22		22-21-21	ALL
	E05	UNUSED						ALL
	E06	UNUSED						ALL
	E07	UNUSED						ALL
	E08	UNUSED						ALL
	E09	UNUSED						ALL
	E10	UNUSED						ALL
	E11	UNUSED						ALL
	E12	UNUSED						ALL
	E13	UNUSED						ALL
	E14		W0131	202R	22		22-21-21	ALL
	E15		W0131	203B	22		22-21-21	ALL
	F01		W0131	317Y	22		22-21-21	ALL
	F02		W0131	318R	22		22-21-21	ALL
	F03	UNUSED						ALL
	F04	UNUSED						ALL
	F05	UNUSED						ALL
	F06	UNUSED						ALL
	F07	UNUSED						ALL
	F08	UNUSED						ALL
	F09	UNUSED						ALL
	F10	UNUSED						ALL
	F11	UNUSED						ALL
	F12	UNUSED						ALL
	F13	UNUSED						ALL
	F14		W0131	203R	22		22-21-21	ALL
	F15		W0131	004	22		22-21-21	ALL
	G01		W0131	317R	22		22-21-21	ALL
	G02		W0131	317B	22		22-21-21	ALL
	G03	UNUSED						ALL
	G04		W0131	011	22		22-21-21	ALL
	G05		W0131	012	22		22-21-21	ALL
	G06	UNUSED						ALL
	G07	UNUSED						ALL
	G08	UNUSED						ALL
	G09	UNUSED						ALL
	G10	UNUSED						ALL
	G11	UNUSED						ALL
	G12	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D01200

Page 62

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01261A		//		PLUG-PART A OF D01261 (continued)				ALL
	G13	UNUSED						ALL
	G14	UNUSED						ALL
	G15	UNUSED						ALL
	H01		W0131	316B	22		22-21-21	ALL
	H02		W0131	316Y	22		22-21-21	ALL
	H03	UNUSED						ALL
	H04		W0131	053	22		27-09-12	ALL
	H05		W0131	002	22		22-21-21	ALL
	H06	UNUSED						ALL
	H07	UNUSED						ALL
	H08	UNUSED						ALL
	H09	UNUSED						ALL
	H10	UNUSED						ALL
	H11	UNUSED						ALL
	H12	UNUSED						050-099
	H12		W0131	230B	22		22-21-21	150-199, 275-299
	H13	UNUSED						ALL
	H14	UNUSED						ALL
	H15	UNUSED						050-099
	H15		W0131	196	22		22-21-21	150-199, 275-299
	J01		W0131	315Y	22		22-21-21	ALL
	J02		W0131	316R	22		22-21-21	ALL
	J03	UNUSED						ALL
	J04	UNUSED						ALL
	J05	UNUSED						ALL
	J06	UNUSED						ALL
	J07	UNUSED						ALL
	J08	UNUSED						ALL
	J09	UNUSED						ALL
	J10	UNUSED						ALL
	J11	UNUSED						ALL
	J12	UNUSED						ALL
	J13	UNUSED						ALL
	J14	UNUSED						ALL
	J15	UNUSED						ALL
	K01		W0131	315R	22		22-21-21	ALL
	K02		W0131	315B	22		22-21-21	ALL
	K03	UNUSED						ALL
	K04		W0131	201R	24		22-21-21	ALL
	K05		W0131	201B	24		22-21-21	ALL

HOOKUP LIST
D280T132

91-21-51
Section D01200
Page 63
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01261A		//		PLUG-PART A OF D01261 (continued)				ALL
	K06	UNUSED						ALL
	K07	UNUSED						ALL
	K08	UNUSED						ALL
	K09	UNUSED						ALL
	K10	UNUSED						ALL
	K11	UNUSED						ALL
	K12	UNUSED						050-099
	K12		W0131	230R	22		22-21-21	150-199, 275-299
	K13	UNUSED						ALL
	K14		W0141	205R	24		22-21-21	ALL
	K15		W0141	205B	24		22-21-21	ALL
	CAP	Y	W0141	503	22		22-21-21	150-199, 275-299
	CAP	Y	W0141	504	22		22-21-21	150-199, 275-299
	DED		W0131	201Z			22-21-21	ALL
	DED		W0131	205Z			22-21-21	ALL
	DED		W0141	205Z			22-21-21	ALL
D01261B		//		PLUG-PART B OF D01261				ALL
	A01		W0141	026	22		22-21-21	ALL
	A02		W0141	019	22		22-21-21	ALL
	A03	UNUSED						ALL
	A04		W0141	011	22		22-21-21	ALL
	A05	UNUSED						ALL
	A06	UNUSED						ALL
	A07	UNUSED						ALL
	A08	UNUSED						ALL
	A09	UNUSED						ALL
	A10	UNUSED						ALL
	A11	UNUSED						ALL
	A12		W0141	084	22		27-09-13	ALL
	A13	UNUSED						ALL
	A14		W0151	202R	24		22-21-21	ALL
	A15		W0151	202B	24		22-21-21	ALL
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04	UNUSED						ALL
	B05	UNUSED						ALL
	B06	UNUSED						ALL
	B07	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D01200

Page 64

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01261B		//		PLUG-PART B OF D01261 (continued)				ALL
	B08	UNUSED						ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12		W0141	077	22		27-09-13	ALL
	B13	UNUSED						ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	C01		W0141	025	22		22-21-21	ALL
	C02		W0141	020	22		22-21-21	ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05	UNUSED						ALL
	C06	UNUSED						ALL
	C07	UNUSED						ALL
	C08	UNUSED						ALL
	C09	UNUSED						ALL
	C10	UNUSED						ALL
	C11	UNUSED						ALL
	C12	UNUSED						ALL
	C13	UNUSED						ALL
	C14		W0151	022	22		27-09-12	ALL
	C15		W0151	004	22		22-21-21	ALL
	D01	UNUSED						ALL
	D02	UNUSED						ALL
	D03	UNUSED						ALL
	D04	UNUSED						ALL
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	D08	UNUSED						ALL
	D09	UNUSED						ALL
	D10	UNUSED						ALL
	D11	UNUSED						ALL
	D12	UNUSED						ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15	UNUSED						ALL
	E01		W0141	315B	22		22-21-21	ALL
	E02		W0141	315Y	22		22-21-21	ALL

HOOKUP LIST
D280T132

91-21-51
Section D01200
Page 65
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01261B		//		PLUG-PART B OF D01261 (continued)				ALL
	E03	UNUSED						ALL
	E04	UNUSED						ALL
	E05	UNUSED						ALL
	E06	UNUSED						ALL
	E07	UNUSED						ALL
	E08	UNUSED						ALL
	E09	UNUSED						ALL
	E10	UNUSED						ALL
	E11	UNUSED						ALL
	E12	UNUSED						ALL
	E13	UNUSED						ALL
	E14	UNUSED						ALL
	E15	UNUSED						ALL
	F01		W0141	314Y	22		22-21-21	ALL
	F02		W0141	315R	22		22-21-21	ALL
	F03	UNUSED						ALL
	F04	UNUSED						ALL
	F05	UNUSED						ALL
	F06	UNUSED						ALL
	F07		W0141	007	22		22-21-21	ALL
	F08		W0141	010	22		22-21-21	ALL
	F09	UNUSED						ALL
	F10	UNUSED						ALL
	F11	UNUSED						ALL
	F12	UNUSED						ALL
	F13	UNUSED						ALL
	F14	UNUSED						ALL
	F15	UNUSED						ALL
	G01		W0141	314R	22		22-21-21	ALL
	G02		W0141	314B	22		22-21-21	ALL
	G03	UNUSED						ALL
	G04	UNUSED						ALL
	G05	UNUSED						ALL
	G06	UNUSED						ALL
	G07		W0141	005	22		22-21-21	ALL
	G08		W0141	004	22		22-21-21	ALL
	G09	UNUSED						ALL
	G10		W1131	018	22		27-09-14	ALL
	G11	UNUSED						ALL
	G12	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D01200

Page 66

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01261B		//		PLUG-PART B OF D01261 (continued)				ALL
	G13	UNUSED						ALL
	G14	UNUSED						ALL
	G15	UNUSED						ALL
	H01		W0141	313B	22		22-21-21	ALL
	H02		W0141	313Y	22		22-21-21	ALL
	H03	UNUSED						ALL
	H04		W0141	069	22		27-09-12	ALL
	H05		W0141	014	22		22-21-21	ALL
	H06	UNUSED						ALL
	H07	UNUSED						ALL
	H08	UNUSED						ALL
	H09	UNUSED						ALL
	H10		W0141	035	22		22-21-21	ALL
	H11	UNUSED						ALL
	H12	UNUSED						ALL
	H13	UNUSED						ALL
	H14	UNUSED						050-099
	H14		W0141	285R	24		22-21-31	150-199, 275-299
	H15	UNUSED						050-099
	H15		W0141	285B	24		22-21-31	150-199, 275-299
	J01		W0141	312Y	22		22-21-21	ALL
	J02		W0141	313R	22		22-21-21	ALL
	J03	UNUSED						ALL
	J04	UNUSED						ALL
	J05	UNUSED						ALL
	J06	UNUSED						ALL
	J07	UNUSED						ALL
	J08	UNUSED						ALL
	J09	UNUSED						ALL
	J10	UNUSED						ALL
	J11	UNUSED						ALL
	J12	UNUSED						ALL
	J13	UNUSED						ALL
	J14	UNUSED						ALL
	J15	UNUSED						ALL
	K01		W0141	312R	22		22-21-21	ALL
	K02		W0141	312B	22		22-21-21	ALL
	K03	UNUSED						ALL
	K04		W0141	202R	24		22-21-21	ALL
	K05		W0141	202B	24		22-21-21	ALL

HOOKUP LIST

D280T132

91-21-51

Section D01200

Page 67

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01261B		//		PLUG-PART B OF D01261 (continued)				ALL
	K06	UNUSED						ALL
	K07		W1131	002	22		22-21-21	ALL
	K08		W1131	003	22		22-21-21	ALL
	K09	UNUSED						ALL
	K10		W0131	100	22		22-21-21	ALL
	K11	UNUSED						ALL
	K12	UNUSED						ALL
	K13	UNUSED						ALL
	K14	UNUSED						050-099
	K14		W0131	231R	22		22-21-21	150-199, 275-299
	K15	UNUSED						050-099
	K15		W0131	231B	22		22-21-21	150-199, 275-299
	DED		W0141	202Z			22-21-21	ALL
	DED		W0151	202Z			22-21-21	ALL
	DED		W0131	231Z			22-21-21	150-199, 275-299
	DED		W0141	285	20		22-21-31	150-199, 275-299
			W0141	285Z			22-21-31	150-199, 275-299
D01261C		//		PLUG-PART C OF D01261				ALL
	1		W0151	137	20		22-21-21	ALL
	2		W0151	138	16		22-21-21	ALL
	3		W0151	139	16		22-21-21	ALL
	4		W0151	140	20		22-21-21	ALL
	5	UNUSED						ALL
	6		W0151	141	20		22-21-21	ALL
	7	UNUSED						ALL
	8		W0151	142	16		22-21-21	ALL
	9		W0151	143	16		22-21-21	ALL
	10		W0151	144	16		22-21-21	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	= C12	UNUSED						ALL
	= C13	UNUSED						ALL
D01262		1573/165/L030		PLUG-				ALL
	1		W1354	022	22		38-32-11	050-099, 275-276
	1		W1354	022	20		38-32-11	150-156, 162-165
	1	DK	W1354	022	18		38-32-11	157, 166-199, 277-299
	2		W1354	020	22		38-32-11	050-099, 275-276

HOOKUP LIST

D280T132

91-21-51

Section D01200

Page 68

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01262		1573/165/L030		PLUG- (continued)				ALL
	2		W1354	020	20		38-32-11	150-156, 162-165
	2	DK	W1354	020	18		38-32-11	157, 166-199, 277-299
	3		W1354	007	20		38-32-11	050-099, 150-155, 162-165
	3		W1354	007	20		38-32-15	156-157, 166-199, 277-299
	3	DK	W1354	044	18		38-32-14	275-276
	4		W1354	009	20		38-32-11	050-099, 155-199, 277-299
	4	UNUSED						150-154
	4		W1354	052	22		38-32-14	275-276
	5	UNUSED						ALL
	6		W1354	023	22		38-32-11	050-099, 275-276
	6		W1354	023	20		38-32-11	150-156, 162-165
	6	DK	W1354	023	18		38-32-11	157, 166-199, 277-299
	7		W1354	027	20		38-32-11	ALL
	8		W1354	024	22		38-32-11	050-099, 275-299
	8		W1354	024	20		38-32-11	150-199
	9		W1354	025	22		38-32-11	050-099, 275-299
	9		W1354	025	20		38-32-11	150-199
	10		W1354	026	20		38-32-11	ALL
	11		W1354	033	20		38-32-11	050-099, 155, 162-165
	11	UNUSED						150-154, 156-157, 166-199, 275-299
	12	UNUSED						050-099, 150-155, 162-165
	12		W1354	043	22		38-32-11	156-157, 166-199, 275-299
	13	UNUSED						156-157, 166-199, 275-299
	14	UNUSED						156-157, 166-199, 275-299
	15	UNUSED						156-157, 166-199, 275-299
	16	UNUSED						156-157, 166-199, 275-299
	17	UNUSED						156-157, 166-199, 275-299
	18		W1354	056	20		38-32-11	156-157, 166-199, 275-299
	19	UNUSED						156-157, 166-199, 275-299
	20	UNUSED						156-157, 166-199, 275-299
	21	UNUSED						156-157, 166-199, 275-299
	22	UNUSED						156-157, 166-199, 275-299
	23	UNUSED						156-157, 166-199, 275-299
	24	UNUSED						156-157, 166-199, 275-299
	CAP	Y	W1354	056	20		38-32-11	050-099, 150-155, 162-165
	CAP	Y	W9510	001	20		38-32-11	276
D01263A		//		PLUG-PART A OF D01263				ALL
	A01		W0101	066	22		27-21-12	ALL
	A02		W0101	050	22		27-21-12	ALL

HOOKUP LIST

D280T132

91-21-51

Section D01200

Page 69

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01263A		//		PLUG-PART A OF D01263 (continued)				ALL
	A03	UNUSED						ALL
	A04		W0101	201B	22		27-21-22	ALL
	A05		W0101	201R	22		27-21-22	ALL
	A06	UNUSED						ALL
	A07	UNUSED						ALL
	A08	UNUSED						ALL
	A09		W0111	225R	22		27-21-12	ALL
	A10		W0111	225B	22		27-21-12	ALL
	A11	UNUSED						ALL
	A12	UNUSED						ALL
	A13	UNUSED						ALL
	A14	UNUSED						ALL
	A15		W0111	115	22		27-21-12	ALL
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04	UNUSED						ALL
	B05	UNUSED						ALL
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	B08		W0111	303R	22		27-21-12	ALL
	B09		W0111	303B	22		27-21-12	ALL
	B10		W0111	303Y	22		27-21-12	ALL
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13	UNUSED						ALL
	B14	UNUSED						ALL
	B15		W0111	113	22		27-21-12	ALL
	C01	UNUSED						ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05	UNUSED						ALL
	C06		W0101	008	22		27-21-22	ALL
	C07	UNUSED						ALL
	C08	UNUSED						ALL
	C09	UNUSED						ALL
	C10	UNUSED						ALL
	C11	UNUSED						ALL
	C12	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D01200

Page 70

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01263A		//		PLUG-PART A OF D01263 (continued)				ALL
	C13	UNUSED						ALL
	C14	UNUSED						ALL
	C15		W0111	098	22		27-09-14	ALL
	D01		W0101	065	22		27-21-12	ALL
	D02		W0101	049	22		27-21-12	ALL
	D03	UNUSED						ALL
	D04		W0101	223B	22		27-21-12	ALL
	D05		W0101	223R	22		27-21-12	ALL
	D06	UNUSED						ALL
	D07		W0101	072	22		27-09-12	ALL
	D08	UNUSED						ALL
	D09	UNUSED						ALL
	D10	UNUSED						ALL
	D11	UNUSED						ALL
	D12		W0101	005	22		27-21-12	ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15		W0111	114	22		27-21-12	ALL
D01263B		//		PLUG-PART B OF D01263				ALL
	A01		W0101	010	22		27-21-22	ALL
	A02	UNUSED						ALL
	A03		W0111	082	22		27-09-13	ALL
	A04		W0111	226R	22		27-21-12	ALL
	A05		W0111	226B	22		27-21-12	ALL
	A06	UNUSED						ALL
	A07	UNUSED						ALL
	A08	UNUSED						ALL
	A09		W0111	202R	22		27-21-12	ALL
	A10		W0111	202B	22		27-21-12	ALL
	A11	UNUSED						ALL
	A12		W0111	095	22		27-21-12	ALL
	A13		W0111	091	22		27-21-12	ALL
	A14		W1101	054	22		27-21-12	ALL
	A15		W0121	015	22		27-21-12	ALL
	B01		W0101	012	22		27-21-22	ALL
	B02	UNUSED						ALL
	B03		W0111	083	22		27-09-13	ALL
	B04		W0111	301Y	22		27-21-12	ALL
	B05		W0111	301B	22		27-21-12	ALL

HOOKUP LIST

D280T132

91-21-51

Section D01200

Page 71

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01263B		//		PLUG-PART B OF D01263 (continued)				ALL
	B06		W0111	301R	22		27-21-12	ALL
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13	UNUSED						ALL
	B14	UNUSED						ALL
	B15		W0121	088	22		27-21-12	ALL
	C01	UNUSED						ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05	UNUSED						ALL
	C06	UNUSED						ALL
	C07	UNUSED						ALL
	C08		W0111	116	22		27-21-12	ALL
	C09	UNUSED						ALL
	C10	UNUSED						ALL
	C11	UNUSED						ALL
	C12	UNUSED						ALL
	C13	UNUSED						ALL
	C14	UNUSED						ALL
	C15		W0121	021	22		27-21-12	ALL
	D01		W0101	011	22		27-21-22	ALL
	D02	UNUSED						ALL
	D03	UNUSED						ALL
	D04		W0111	005	22		27-21-12	ALL
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07		W0111	081	22		27-09-12	ALL
	D08		W0111	121	22		27-21-12	ALL
	D09		W0111	227R	22		27-21-12	ALL
	D10		W0111	227B	22		27-21-12	ALL
	D11	UNUSED						ALL
	D12		W0111	094	22		27-21-12	ALL
	D13		W0111	090	22		27-21-12	ALL
	D14		W1101	023	22		27-09-14	ALL
	D15		W0121	018	22		27-21-12	ALL

HOOKUP LIST

D280T132

91-21-51

Section D01200

Page 72

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01263C		//		PLUG-PART C OF D01263				ALL
	1	UNUSED						ALL
	2		W0121	016	16		27-21-12	ALL
	3		W0121	017	16		27-21-12	ALL
	4		W0121	019	16		27-21-12	ALL
	5	UNUSED						ALL
	= C1	UNUSED						ALL
	= C5	UNUSED						ALL
D01264		P049-00/ /		RELAY SOCKET				ALL
	1		W1050	048	24		49-15-11	ALL
	2		W1050	094	24		49-15-11	ALL
	3		W1050	050	22		49-15-11	ALL
	4	UNUSED						ALL
	5		W1050	095	20		49-15-11	ALL
	6		W1050	051	24		49-15-11	ALL
	7		W1050	044	22		49-15-11	ALL
	8		W1050	099	22		49-15-11	ALL
D01265A		//		PLUG-PART A OF D01265				ALL
	A01		W0131	068	22		27-21-22	ALL
	A02		W0131	070	22		27-21-22	ALL
	A03	UNUSED						ALL
	A04		W0141	221B	22		27-21-12	ALL
	A05		W0141	221R	22		27-21-12	ALL
	A06	UNUSED						ALL
	A07	UNUSED						ALL
	A08	UNUSED						ALL
	A09		W0131	224R	22		27-21-22	ALL
	A10		W0131	224B	22		27-21-22	ALL
	A11	UNUSED						ALL
	A12	UNUSED						ALL
	A13	UNUSED						ALL
	A14	UNUSED						ALL
	A15		W0131	135	22		27-21-22	ALL
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04	UNUSED						ALL
	B05	UNUSED						ALL
	B06	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D01200
Page 73
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01265A		//		PLUG-PART A OF D01265 (continued)				ALL
	B07	UNUSED						ALL
	B08		W0131	313R	22		27-21-22	ALL
	B09		W0131	313B	22		27-21-22	ALL
	B10		W0131	313Y	22		27-21-22	ALL
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13	UNUSED						ALL
	B14	UNUSED						ALL
	B15		W0131	136	22		27-21-22	ALL
	C01	UNUSED						ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05	UNUSED						ALL
	C06		W0131	133	22		27-21-22	ALL
	C07	UNUSED						ALL
	C08	UNUSED						ALL
	C09	UNUSED						ALL
	C10	UNUSED						ALL
	C11	UNUSED						ALL
	C12	UNUSED						ALL
	C13	UNUSED						ALL
	C14	UNUSED						ALL
	C15		W0141	091	22		27-09-14	ALL
	D01		W0131	069	22		27-21-22	ALL
	D02		W0131	071	22		27-21-22	ALL
	D03	UNUSED						ALL
	D04		W0131	229B	22		27-21-22	ALL
	D05		W0131	229R	22		27-21-22	ALL
	D06	UNUSED						ALL
	D07		W0131	052	22		27-09-12	ALL
	D08	UNUSED						ALL
	D09	UNUSED						ALL
	D10	UNUSED						ALL
	D11	UNUSED						ALL
	D12		W0131	067	22		27-21-12	ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15		W0131	134	22		27-21-22	ALL

HOOKUP LIST

D280T132

91-21-51

Section D01200

Page 74

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01265B		//		PLUG-PART B OF D01265				ALL
	A01		W0141	185	22		27-21-12	ALL
	A02	UNUSED						ALL
	A03		W0141	083	22		27-09-13	ALL
	A04		W0131	225R	22		27-21-22	ALL
	A05		W0131	225B	22		27-21-22	ALL
	A06	UNUSED						ALL
	A07	UNUSED						ALL
	A08	UNUSED						ALL
	A09		W0131	226R	22		27-21-22	ALL
	A10		W0131	226B	22		27-21-22	ALL
	A11	UNUSED						ALL
	A12		W0141	175	22		27-21-22	ALL
	A13		W0141	177	22		27-21-22	ALL
	A14		W1131	043	22		27-21-12	ALL
	A15		W0151	036	22		27-21-22	ALL
	B01		W0141	184	22		27-21-12	ALL
	B02	UNUSED						ALL
	B03		W0141	076	22		27-09-13	ALL
	B04		W0131	314Y	22		27-21-22	ALL
	B05		W0131	314B	22		27-21-22	ALL
	B06		W0131	314R	22		27-21-22	ALL
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13	UNUSED						ALL
	B14	UNUSED						ALL
	B15		W0151	035	22		27-21-22	ALL
	C01	UNUSED						ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05	UNUSED						ALL
	C06	UNUSED						ALL
	C07	UNUSED						ALL
	C08		W0141	183	22		27-21-12	ALL
	C09	UNUSED						ALL
	C10	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D01200

Page 75

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01265B		//		PLUG-PART B OF D01265 (continued)				ALL
	C11	UNUSED						ALL
	C12	UNUSED						ALL
	C13	UNUSED						ALL
	C14	UNUSED						ALL
	C15		W0151	034	22		27-21-22	ALL
	D01		W0141	186	22		27-21-12	ALL
	D02	UNUSED						ALL
	D03	UNUSED						ALL
	D04		W0141	182	22		27-21-12	ALL
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07		W0141	068	22		27-09-12	ALL
	D08		W0141	187	22		27-21-22	ALL
	D09		W0141	225R	22		27-21-22	ALL
	D10		W0141	225B	22		27-21-22	ALL
	D11	UNUSED						ALL
	D12		W0141	176	22		27-21-22	ALL
	D13		W0141	178	22		27-21-22	ALL
	D14		W1131	017	22		27-09-14	ALL
	D15		W0151	039	22		27-21-22	ALL
D01265C		//		PLUG-PART C OF D01265				ALL
	1	UNUSED						ALL
	2		W0151	037	16		27-21-22	ALL
	3		W0151	038	16		27-21-22	ALL
	4		W0151	040	16		27-21-22	ALL
	5	UNUSED						ALL
	= C1	UNUSED						ALL
	= C5	UNUSED						ALL
D01266		1570/185/L040		PLUG-				ALL
	1	UNUSED						ALL
	2		W1354	018	12		38-32-11	ALL
	3		W1354	017	12		38-32-11	ALL
	4		W1354	016	12		38-32-11	ALL
	5		W1354	029	18		38-32-11	ALL
	6		W1354	028	18		38-32-11	ALL
	7		W1354	030	12		38-32-11	ALL
	8	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D01200

Page 76

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01268		P033-00/ /		RELAY SOCKET-				ALL
	A1		W0144	785	24		29-11-22	ALL
	A2		W0144	786	24		29-11-22	ALL
	A3	UNUSED						ALL
	B1		W0144	625	22		27-62-11	ALL
	B2		W0144	626	22		27-62-11	ALL
	B3	UNUSED						ALL
	C1	UNUSED						ALL
	C2		W0144	5AC	22		30-34-11	ALL
	C3		W0144	5AD	22		30-34-11	ALL
	D1		W0144	224	24		32-09-13	ALL
	D2		W0144	077	20		32-09-13	ALL
	D3	UNUSED						ALL
	X1		W0144	615	24		32-09-13	ALL
	X2		W0144	616	24		32-09-13	ALL
	DED		W0144	5ACZ			30-34-11	ALL
	DED		W0144	5ADZ			30-34-11	ALL
D01270		1629/171/R047		PLUG-ALT PRESS. SW				ALL
	1	UNUSED						ALL
	2		W1298	006	20		38-32-11	ALL
	3		W1298	007	20		38-32-11	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
D01272		0870/123/R064		PLUG-				ALL
	1		W0982	006	20		21-51-21	ALL
	2	DK	W0982	007	18		21-51-21	ALL
	3	DK	W0982	008	18		21-51-21	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
D01274		0517/122/L029		RCPT-				050-099
	1		W0704	516	20		25-53-14	050-099
	2		W0704	517	20		25-53-14	050-099
	3		W0704	518	20		25-53-14	050-099
	4		W0704	338B	20		25-53-12	050-099
	5	DK	W0704	535	18		25-53-12	050-099
	6		W0704	519	20		25-53-14	050-099
	7		W0704	338R	20		25-53-12	050-099

HOOKUP LIST
D280T132

91-21-51
Section D01200
Page 77
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01274		0517/122/L029		RCPT- (continued)				050-099
	8		W0704	536	20		25-53-12	050-099
	9		W0704	537	20		25-53-12	050-099
	10		W0704	338Y	20		25-53-12	050-099
	11	UNUSED						050-099
	12	UNUSED						050-099
D01276		0870/123/R064		PLUG-				ALL
	1	DK	W0982	013	18		21-51-21	050-099
	1		W0982	013	20		21-51-21	150-199, 275-299
	2		W0982	014	20		21-51-21	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
D01278		0870/123/R064		PLUG-				ALL
	1		W0982	011	20		21-51-21	ALL
	2	DK	W0982	012	18		21-51-21	ALL
	3	DK	W0982	010	18		21-51-21	ALL
	4	UNUSED						ALL
	5		W0982	009	20		21-51-21	ALL
D01280		0596/122/L029		RCPT-				050-099
	1		W0704	071	20		25-53-14	050-099
	2		W0704	072	20		25-53-14	050-099
	3		W0704	073	20		25-53-14	050-099
	4		W0704	339B	20		25-53-12	050-099
	5	DK	W0704	538	18		25-53-12	050-099
	6		W0704	076	20		25-53-14	050-099
	7		W0704	339R	20		25-53-12	050-099
	8		W0704	539	20		25-53-12	050-099
	9		W0704	540	20		25-53-12	050-099
	10		W0704	339Y	20		25-53-12	050-099
	11	UNUSED						050-099
	12	UNUSED						050-099
D01282		0946/127/R048		PLUG-				ALL
	1		W0612	025	20		36-11-21	ALL
	2		W0612	026	20		36-11-21	ALL
	3		W0612	031	18		36-11-21	ALL
	4		W0612	027	20		36-11-21	ALL

HOOKUP LIST

D280T132

91-21-51

Section D01200

Page 78

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01282		0946/127/R048		PLUG- (continued)				ALL
	5		W0612	029	18		36-11-21	ALL
	6		W0612	030	18		36-11-21	ALL
	7		W0612	028	20		36-11-21	ALL
D01284 D01284		P035-00/ / P035-00/ /		RCPT-P35 RCPT-				050-099 150-199, 275-299
	1	UNUSED						150-199, 275-299
	2		W1066	01K	22		25-53-13	150-199, 275-299
	3		W1066	01L	22		25-53-13	150-199, 275-299
	4	UNUSED						150-199, 275-299
	5		W1066	01T	22		25-53-13	150-199, 275-299
	6		W1066	03D	22		25-53-16	150-199, 275-299
	7		W1066	01U	22		25-53-13	150-199, 275-299
	8		W1066	03C	22		25-53-16	150-199, 275-299
	A1		W1066	547	22		25-53-14	050-099
	A2		W1066	549	22		25-53-14	050-099
	A3	UNUSED						050-099
	B1	UNUSED						050-099
	B2		W1066	03D	22		25-53-16	050-099
	B3		W1066	03C	22		25-53-16	050-099
	C1		W1066	811	22		25-53-13	050-099
	C2		W1066	885	22		25-53-13	050-099
	C3	UNUSED						050-099
	D1		W1066	805	22		25-53-14	050-099
	D2		W1066	807	22		25-53-14	050-099
	D3	UNUSED						050-099
	X1		W1066	007	22		25-53-13	050-099
	X2		W1066	778	22		25-53-13	050-099
D01288 D01288		P035-00/ / P035-00/ /		RCPT-P35 PLUG				050-099 150-199, 275-299
	A1		W1066	507	22		25-53-14	050-099
	A1		W1066	02T	22		25-53-14	150-199, 275-299
	A2		W1066	714	22		25-53-14	050-099
	A2		W1066	189	22		25-53-14	150-199, 275-299
	A3	UNUSED						ALL
	B1		W1066	706	22		25-53-14	050-099
	B1		W1066	02V	22		25-53-14	150-199, 275-299
	B2		W1066	715	22		25-53-14	050-099
	B2		W1066	03A	22		25-53-14	150-199, 275-299

HOOKUP LIST

D280T132

91-21-51

Section D01200

Page 79

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01288		P035-00/ /		RCPT-P35 (continued)				050-099
D01288		P035-00/ /		PLUG (continued)				150-199, 275-299
	B3	UNUSED						ALL
	C1	UNUSED						ALL
	C2		W1066	716	22		25-53-14	050-099
	C2		W1066	02H	22		25-53-14	150-199, 275-299
	C3		W1066	519	22		25-53-14	050-099
	C3		W1066	02A	22		25-53-14	150-199, 275-299
	D1	UNUSED						ALL
	D2		W1066	04T	22		25-53-16	050-099
	D2		W1066	02U	22		25-53-14	150-199, 275-299
	D3		W1066	02G	22		25-53-16	050-099
	D3		W1066	02J	22		25-53-14	150-199, 275-299
	X1		W1066	776	22		25-53-13	050-099
	X1		W1066	513	22		25-53-13	150-199, 275-299
	X2		W1066	678	22		25-53-13	050-099
	X2		W1066	01E	22		25-53-13	150-199, 275-299
D01290		1560/192/R042		PLUG-				ALL
	1	UNUSED						ALL
	2		W1356	018	24		38-15-11	ALL
	3		W1356	18C	24		38-15-11	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
D01294		1550/190/R040		PLUG-				ALL
	1	DK	W1358	108	18		38-15-11	ALL
	2	DK	W1358	107	18		38-15-11	ALL
	3	DK	W1358	106	18		38-15-11	ALL
	4	DK	W1358	12D	18		38-15-11	ALL
	5	DK	W1358	12E	18		38-15-11	ALL
D01296		0883/119/R038		PLUG-				ALL
	A		W0952	209B	20		21-52-31	ALL
	B		W0952	025	20		21-52-31	ALL

HOOKUP LIST

D280T132

91-21-51

Section D01200

Page 80 End

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01302		P005-00/ /		PLUG-P5				ALL
	1	DK	W0062	501	18		33-13-16	ALL
	2	DK	W0062	502	18		33-13-16	ALL
	3		W0062	503	22		33-16-17	ALL
	4		W0062	504	22		33-16-17	ALL
	5		W0062	505	24		21-24-11	050-099, 150-199
	5	UNUSED						275-299
	6		W0062	506	22		21-24-11	050-099, 150-199
	6	UNUSED						275-299
	7	UNUSED						ALL
	8		W0062	301R	24		21-64-11	ALL
	9		W0062	301B	24		21-64-11	ALL
	10		W0062	301Y	24		21-64-11	ALL
	11		W0062	511	20		21-64-11	ALL
	12		W0062	512	22		21-64-11	ALL
	13		W0062	513	22		21-51-11	ALL
	14		W0062	514	22		21-51-11	ALL
	15		W0062	515	24		21-51-11	ALL
	16		W0062	516	24		21-25-11	ALL
	17		W0062	517	22		21-25-11	ALL
	18		W0062	518	24		21-53-11	ALL
	19		W0062	519	24		21-53-11	ALL
	20		W0062	520	24		21-53-22	ALL
	21	UNUSED						ALL
	22		W0062	522	24		21-53-22	ALL
	23		W0062	523	24		21-53-22	ALL
	24		W0062	524	24		21-53-22	ALL
	25		W0062	507	22		33-16-17	ALL
	26		W0062	508	22		33-16-17	ALL
	27		W0062	527	20		21-25-11	ALL
	28	UNUSED						ALL
	29		W0062	529	24		21-51-11	ALL
	30	UNUSED						ALL
	31		W0062	531	20		21-53-22	ALL
D01310		P005-00/ /		PLUG-P5				ALL
	1		W0066	651	22		33-16-17	ALL
	2		W0066	652	22		33-16-17	ALL
	3		W0066	653	22		33-16-17	ALL
	4		W0066	654	22		33-16-17	ALL
	5		W0066	655	24		24-51-23	ALL

HOOKUP LIST

D280T132

91-21-51

Section D01300

Page 1

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01310		P005-00/ /		PLUG-P5 (continued)				ALL
	6	UNUSED						050-099, 150-199, 275-278
	6	FM	W0066	656	16		SPARE	280-299
	7		W0066	657	20		25-31-11	050-099, 150-199
	7	FM	W0066	657	16		25-31-11	275-299
	8		W0066	658	24		24-51-23	ALL
	9		W0066	659	24		24-22-21	ALL
	10		W0066	660	20		24-22-21	ALL
	11		W0066	661	24		24-22-21	ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15		W0066	665	24		24-27-21	ALL
	16		W0066	666	24		24-51-23	ALL
	17	UNUSED						050-099, 150-199, 275-278
	17	FM	W0066	667	16		SPARE	280-299
	18		W0066	668	20		25-31-11	050-099, 150-199
	18	FM	W0066	668	16		25-31-11	275-299
	19		W0066	669	24		24-51-23	ALL
	20		W0066	670	24		24-41-12	ALL
	21		W0066	671	20		24-41-12	ALL
	22	UNUSED						ALL
	23		W0066	673	24		24-22-21	ALL
	24		W0066	674	20		24-22-21	ALL
	25	UNUSED						ALL
	26		W0066	676	24		24-41-11	ALL
	27		W0066	677	24		24-41-11	ALL
	28		W0066	678	24		24-11-21	ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31		W0066	681	22		33-16-17	ALL
	32		W0066	682	24		24-22-22	ALL
	33		W0066	683	20		24-22-22	ALL
	34		W0066	684	24		24-27-21	ALL
	35		W0066	685	24		24-27-21	ALL
	36		W0066	686	24		24-22-22	ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D01300

Page 2

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01310		P005-00/ /		PLUG-P5 (continued)				ALL
	42		W0066	692	24		24-51-43	ALL
	43		W0066	693	24		24-51-43	ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
	DED		W0066	653Z			33-16-17	ALL
	DED		W0066	654Z			33-16-17	ALL
	DED		W0066	681Z			33-16-17	ALL
D01312		P005-00/ /		PLUG-P5				ALL
	1	DK	W0062	001	18		33-13-16	ALL
	2	DK	W0062	002	18		33-13-16	ALL
	3		W0062	003	22		33-16-17	ALL
	4		W0062	004	22		33-16-17	ALL
	5	UNUSED						ALL
	6		W0062	006	22		29-32-11	ALL
	7	UNUSED						ALL
	8		W0062	008	24		29-11-22	ALL
	9		W0062	009	22		29-11-22	ALL
	10		W0062	010	22		29-11-22	ALL
	11		W0062	011	22		29-11-22	ALL
	12		W0062	012	24		29-11-22	ALL
	13	UNUSED						ALL
	14		W0062	014	24		29-11-22	ALL
	15		W0062	015	22		29-32-11	ALL
	16		W0062	016	22		29-11-31	ALL
	17		W0062	017	22		29-11-31	ALL
	18		W0062	018	22		29-11-31	ALL
	19	UNUSED						ALL
	20		W0062	020	22		29-11-22	ALL
	21	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D01300
Page 3
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01312		P005-00/ /		PLUG-P5 (continued)				ALL
	22		W0062	022	24		24-51-71	ALL
	23		W0062	023	24		24-51-71	ALL
	24		W0062	024	22		29-33-11	ALL
	DED		W0062	006Z			29-32-11	ALL
	DED		W0062	015Z			29-32-11	ALL
	DED		W0062	016Z			29-11-31	ALL
	DED		W0062	017Z			29-11-31	ALL
D01314		P035-00/ /		RCPT-P35				050-099
	1	UNUSED						050-099
	2		W1066	775	22		25-53-14	050-099
	3		W1066	677	22		25-53-13	050-099
	4	UNUSED						050-099
	5		W1066	696	22		25-53-14	050-099
	6	UNUSED						050-099
	7		W1066	665	22		25-53-14	050-099
	8	UNUSED						050-099
D01316		P005-00/ /		PLUG-P5				ALL
	1		W0062	071	24		36-11-11	ALL
	2		W0062	072	24		36-11-11	ALL
	3		W0062	073	22		33-16-17	ALL
	4		W0062	074	22		33-16-17	ALL
	5		W0062	075	24		36-11-11	ALL
	6		W0062	076	22		36-11-11	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10		W0062	080	24		36-11-51	ALL
	11		W0062	081	24		36-11-51	ALL
	12	UNUSED						ALL
	13		W0062	083	24		36-11-31	ALL
	14		W0062	084	24		36-11-31	ALL
	15		W0062	085	24		36-11-31	ALL
	16	UNUSED						ALL
	17		W0062	087	22		36-11-11	ALL
	18	UNUSED						ALL
	19		W0062	089R	22		26-18-31	ALL
	20	UNUSED						ALL
	21	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D01300

Page 4

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01316		P005-00/ /		PLUG-P5 (continued)				ALL
	22	UNUSED						ALL
	23		W0062	093	22		36-11-51	ALL
	24		W0062	094	24		36-11-61	ALL
	25		W0062	095	20		36-11-61	ALL
	26	UNUSED						ALL
	27		W0062	097	24		36-11-41	ALL
	28		W0062	098	24		36-11-41	ALL
	29	UNUSED						ALL
	30		W0062	100	24		73-21-15	ALL
	31	UNUSED						ALL
	32		W0062	102	24		73-21-15	ALL
	33	UNUSED						ALL
	34		W0062	104	22		36-11-11	ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37		W0062	173R	22		26-18-11	ALL
	38		W0062	108	22		36-22-11	ALL
	39	UNUSED						ALL
	40		W0062	066	22		33-16-17	ALL
	41		W0062	067	22		33-16-17	ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49		W0062	119	22		36-11-31	ALL
	50		W0062	120	24		36-11-31	ALL
	51		W0062	121	22		36-11-31	ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55		W0062	125	22		36-11-61	ALL
	DED		W0062	066Z			33-16-17	ALL
D01324		P005-00/ /		PLUG-P5				ALL
	1	DK	W0062	041	18		33-13-16	ALL
	2	DK	W0062	042	18		33-13-16	ALL
	3		W0062	043	22		33-16-17	ALL

HOOKUP LIST
D280T132

91-21-51
Section D01300
Page 5
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01324		P005-00/ /		PLUG-P5 (continued)				ALL
	4		W0062	044	22		33-16-17	ALL
	5		W0062	045	20		21-31-21	ALL
	6	UNUSED						ALL
	7		W0062	047	24		21-31-11	ALL
	8		W0062	401B	22		21-31-11	ALL
	9		W0062	401R	22		21-31-11	ALL
	10		W0062	402B	22		21-31-21	ALL
	11		W0062	402R	22		21-31-21	ALL
	12		W0062	052	24		21-31-21	ALL
	13	UNUSED						ALL
	14		W0062	054	20		21-31-11	ALL
	15		W0062	055	20		21-31-21	ALL
	16		W0062	056	20		21-31-11	ALL
	17		W0062	057	20		21-31-11	ALL
	18	UNUSED						ALL
	19		W0062	059	24		21-31-11	ALL
	20		W0062	401G	22		21-31-11	ALL
	21		W0062	401Y	22		21-31-11	ALL
	22		W0062	402G	22		21-31-21	ALL
	23		W0062	402Y	22		21-31-21	ALL
	24		W0062	064	24		21-31-21	ALL
	25		W0062	065	24		21-31-21	ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28		W0062	068	20		21-31-21	ALL
	29		W0062	069	20		21-31-11	ALL
	30		W0062	060	24		21-31-11	ALL
	31		W0062	051	24		21-31-11	ALL
	DED		W0062	043Z			33-16-17	ALL
	DED		W0062	044Z			33-16-17	ALL
	DED		W0062	057Z			21-31-11	ALL
			W0062	049	20		21-31-11	ALL
			W0062	050	20		21-31-21	ALL
			W0062	401Z			21-31-11	ALL
			W0062	402Z			21-31-21	ALL
D01326		0882/129/R038		PLUG-				ALL
	A		W0952	208B	20		21-52-31	ALL
	B		W0952	023	20		21-52-31	ALL

HOOKUP LIST

D280T132

91-21-51

Section D01300

Page 6

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01328		P005-00/ /		PLUG-P5				ALL
	1		W0062	143	22		21-58-16	ALL
	2		W0062	144	22		21-58-11	ALL
	3		W0062	133	22		33-16-17	ALL
	4		W0062	134	22		33-16-17	ALL
	5		W0062	135	20		21-58-11	ALL
	6	UNUSED						ALL
	7		W0062	137	24		21-58-11	ALL
	8		W0062	138	24		21-58-12	ALL
	9		W0062	139	24		21-58-12	ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12		W0062	142	22		21-33-11	ALL
	DED		W0062	133Z			33-16-17	ALL
	DED		W0062	134Z			33-16-17	ALL
	DED		W0062	142Z			21-33-11	ALL
	DED		W0062	143Z			21-58-16	ALL
	DED		W0062	144Z			21-58-11	ALL
D01330		P005-00/ /		PLUG-P5				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W0062	603	22		33-16-17	ALL
	4		W0062	604	22		33-16-17	ALL
	5		W0062	605	22		28-42-11	ALL
	6		W0062	606	22		28-42-11	ALL
	7		W0062	542	22		28-22-31	ALL
	8		W0062	608	24		28-42-31	ALL
	9	UNUSED						ALL
	10		W0062	610	24		28-22-11	ALL
	11		W0062	611	24		28-22-11	ALL
	12		W0062	612	24		28-22-11	ALL
	13		W0062	613	24		28-22-12	ALL
	14		W0062	614	24		28-22-12	ALL
	15		W0062	615	22		28-42-12	ALL
	16		W0062	616	24		28-42-31	ALL
	17	UNUSED						ALL
	18		W0062	618	22		28-42-12	ALL
	19		W0062	500	22		28-22-31	ALL
	20		W0062	538	22		28-22-31	ALL
	21		W0062	539	22		28-22-31	ALL

HOOKUP LIST

D280T132

91-21-51

Section D01300

Page 7

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01330		P005-00/ /		PLUG-P5 (continued)				ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24		W0062	624	20		28-42-31	ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28		W0062	540	22		28-22-31	ALL
	29		W0062	541	22		28-22-31	ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	DED		W0062	500Z			28-22-31	ALL
	DED		W0062	538Z			28-22-31	ALL
	DED		W0062	539Z			28-22-31	ALL
	DED		W0062	540Z			28-22-31	ALL
	DED		W0062	541Z			28-22-31	ALL
	DED		W0062	542Z			28-22-31	ALL
	DED		W0062	624Z			28-42-31	ALL
D01331		AE0314/ /		PLUG-E2-2 COAX,ATC-L				ALL
	= A1		W1089	01CX			34-53-11	ALL
	= C1		W1089	01CO			34-53-11	ALL
D01333		AE0314/ /		PLUG-E2-2 COAX,DME-L				ALL
	= A1		W1091	01CX			34-55-11	ALL
	= C1		W1091	01CO			34-55-11	ALL
D01335		AE0316/ /		PLUG-E2-3 COAX,ATC-R				050-099, 150-199, 277-299
D01335		AE0314/ /		PLUG-E2-2 COAX,ATC-R				275-276
	= A1		W1093	01CX			34-53-21	ALL
	= C1		W1093	01CO			34-53-21	ALL
D01336		0878/119/R040		PLUG-				ALL
	A		W0952	207B	20		21-52-31	ALL
	B		W0952	021	20		21-52-31	ALL
D01337		AE0314/ /		PLUG-E2-3 COAX,DME-R				ALL
	= A1		W1095	01CX			34-55-21	ALL
	= C1		W1095	01CO			34-55-21	ALL

HOOKUP LIST
D280T132

91-21-51
Section D01300
Page 8
Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01338		0883/119/L039		PLUG-				ALL
	A		W0508	209B	20		21-52-31	ALL
	B		W0508	024	20		21-52-31	ALL
D01342		P005-00/ /		PLUG-P5				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W0066	503	22		33-16-17	ALL
	4		W0066	504	22		33-16-17	ALL
	5		W0066	505	22		21-61-11	ALL
	6		W0066	506	22		21-61-21	ALL
	7		W0066	507	22		21-61-31	ALL
	8		W0066	508	24		21-61-11	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11		W0066	511	22		21-61-41	ALL
	12	UNUSED						ALL
	13		W0066	513	22		21-51-21	ALL
	14		W0066	514	22		21-51-21	ALL
	15		W0066	515	24		21-51-21	ALL
	16		W0066	516	24		21-25-21	ALL
	17		W0066	517	22		21-25-21	ALL
	18		W0066	518	24		21-53-21	ALL
	19		W0066	519	24		21-53-21	ALL
	20		W0066	520	24		21-53-12	ALL
	21	UNUSED						ALL
	22		W0066	522	24		21-53-12	ALL
	23		W0066	523	24		21-53-12	ALL
	24		W0066	524	24		21-53-12	ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27		W0066	527	20		21-25-21	ALL
	28	UNUSED						ALL
	29		W0066	529	24		21-51-21	ALL
	30	UNUSED						ALL
	31		W0066	531	20		21-53-12	ALL
	32		W0066	532	24		21-61-51	ALL
	33		W0066	533	24		21-61-51	ALL
	34		W0066	534	24		21-61-51	ALL
	35	UNUSED						ALL
	36	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D01300
Page 9
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01342		P005-00/ /		PLUG-P5 (continued)				ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	DED		W0066	503Z			33-16-17	ALL
D01344		0882/129/L039		PLUG-				ALL
	A		W0508	208B	20		21-52-31	ALL
	B		W0508	026	20		21-52-31	ALL
D01346		P005-00/ /		PLUG-P5				ALL
	1		W0070	741	18		24-11-11	ALL
	2	UNUSED						ALL
	3		W0070	743	18		24-11-21	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W0070	746	18		24-11-11	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10		W0070	750	18		24-11-21	ALL
D01347		P033-00/ /		RELAY SOCKET-				ALL
	A1		W0144	178	22		23-34-11	ALL
	A2		W0144	012	22		23-34-11	ALL
	A3	UNUSED						ALL
	B1	UNUSED						ALL
	B2	UNUSED						ALL
	B3	UNUSED						ALL
	X1		W0144	014	22		23-34-11	ALL
	X2		W0144	064	20		23-34-11	ALL
D01348		P005-00/ /		PLUG-P5				ALL
	1	DK	W0066	071	18		33-13-16	ALL
	2	DK	W0066	072	18		33-13-16	ALL
	3		W0066	073	22		33-16-17	ALL
	4		W0066	074	22		33-16-17	ALL
	5	UNUSED						ALL
	6		W0066	076	24		36-11-21	ALL

HOOKUP LIST
D280T132



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01348		P005-00/ /		PLUG-P5 (continued)				ALL
	7		W0066	077	24		36-11-21	ALL
	8		W0066	078	24		36-11-21	ALL
	9	UNUSED						ALL
	10		W0066	080	24		36-11-41	ALL
	11		W0066	081	24		36-11-41	ALL
	12		W0066	082	24		36-11-52	ALL
	13		W0066	083	24		36-11-52	ALL
	14	UNUSED						ALL
	15		W0066	085	22		36-22-11	ALL
	16		W0066	086R	22		26-18-21	ALL
	17		W0066	087	24		36-11-41	ALL
	18		W0066	088	24		36-11-41	ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26		W0066	096	24		36-11-62	ALL
	27		W0066	097	20		36-11-62	ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34		W0066	104	22		36-11-21	ALL
	35		W0066	115	24		36-11-21	ALL
	36		W0066	106	22		36-11-21	ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39		W0066	109	22		36-11-41	ALL
	40	UNUSED						ALL
	41		W0066	066	22		33-16-17	ALL
	42		W0066	067	22		33-16-17	ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46		W0066	116	22		36-11-52	ALL

HOOKUP LIST

D280T132

91-21-51

Section D01300

Page 11

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01348		P005-00/ /		PLUG-P5 (continued)				ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55		W0066	125	22		36-11-62	ALL
	DED		W0066	066Z			33-16-17	ALL
D01352		0878/119/L037		PLUG-				ALL
	A		W0508	207B	20		21-52-31	ALL
	B		W0508	028	20		21-52-31	ALL
D01353		0176/222/L040		PLUG-				ALL
	1	DK	W0629	027	18		33-13-11	ALL
	2	DK	W0629	028	18		33-13-11	ALL
	3		W0629	203B	24		23-51-11	ALL
	4		W0629	203R	24		23-51-11	ALL
	5		W0629	203Z			23-51-11	050-099, 150
	5		W0629	FRA			23-51-11	151-199, 275-299
	6	UNUSED						ALL
	7		W0629	030	24		23-51-11	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						050-099, 150, 153-199, 275-299
	10		W0629	024	24		23-51-11	151-152
	11		W0629	023	20		23-51-11	ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	REF		W0629	024Z			23-51-11	151-152
	REF		W0629	203Z			23-51-11	151-199, 275-299
	REF		W0629	FRA			23-51-11	151-199, 275-299
D01355		0188/222/R050		PLUG-				ALL
	1	DK	W0631	027	18		33-13-13	ALL
	2	DK	W0631	028	18		33-13-13	ALL

HOOKUP LIST

D280T132

91-21-51

Section D01300

Page 12

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01355		0188/222/R050		PLUG- (continued)				ALL
	3		W0631	203B	24		23-51-21	ALL
	4		W0631	203R	24		23-51-21	ALL
	5		W0631	203Z			23-51-21	050-099, 150
	5		W0631	FRA			23-51-21	151-199, 275-299
	6	UNUSED						ALL
	7		W0631	026	24		23-51-21	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						050-099, 150, 153-199, 275-299
	10		W0631	024	24		23-51-21	151-152
	11		W0631	023	20		23-51-21	ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	REF		W0631	024Z			23-51-21	151-152
	REF		W0631	203Z			23-51-21	151-199, 275-299
	REF		W0631	FRA			23-51-21	151-199, 275-299
D01356		P36/ /		RELAY SOCKET-				050-099
D01356		P036-00/ /		RELAY SOCKET-				150-155, 162-165, 275-276
	A1		W0182	128	18		38-32-12	050-099, 150-155, 162-165, 275-276
	A2		W0182	126	18		38-32-12	050-099, 150-155, 162-165, 275-276
	A3	UNUSED						050-099, 150-155, 162-165, 275-276
	B1		W0182	127	18		38-32-12	050-099, 150-155, 162-165, 275-276
	B2		W0182	125	18		38-32-12	050, 150-155, 162-165, 275-276
	B2		W0182	125	18		38-32-11	051-099
	B3	UNUSED						050-099, 150-155, 162-165, 275-276
	X1		W0182	129	22		38-32-12	050-099, 165, 275-276
	X1		W0182	129	20		38-32-12	150-155, 162-164
	X2		W0182	130	20		38-32-12	050-099, 150-154, 275-276
	X2		W0182	130	20		38-32-11	155, 162-165
D01358		P005-00/ /		PLUG-P5				ALL
	1		W0062	03A	20		33-13-16	ALL
	2		W0062	03B	20		33-13-16	ALL
	3		W0062	03C	24		21-65-11	ALL
	4		W0062	03D	20		21-65-11	ALL
	5		W0062	207B	20		21-65-11	ALL
	6		W0062	207R	20		21-65-11	ALL

HOOKUP LIST
D280T132

91-21-51
Section D01300
Page 13
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01358		P005-00/ /		PLUG-P5 (continued)				ALL
	7		W0062	206B	20		21-65-11	ALL
	8		W0062	206R	20		21-65-11	ALL
	9		W0062	208B	20		21-65-11	ALL
	10		W0062	208R	20		21-65-11	ALL
	11		W0062	03L	20		21-65-11	ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
D01359		0204/220/L050		PLUG-				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W0631	015	24		23-51-41	ALL
	5		W0631	015Z			23-51-41	ALL
	6		W0631	013Z			23-51-21	ALL
	7		W0631	013	24		23-51-21	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
D01360		P005-00/ /		PLUG-P5				ALL
	1		W0066	001	24		24-51-71	ALL
	2		W0066	002	24		24-51-71	ALL
	3		W0066	003	22		33-16-17	ALL
	4		W0066	004	22		33-16-17	ALL
	5	UNUSED						ALL
	6		W0066	006	22		29-32-11	ALL
	7	UNUSED						ALL
	8		W0066	008	24		29-11-12	ALL
	9		W0066	009	22		29-11-12	ALL
	10		W0066	010	22		29-11-12	ALL
	11		W0066	011	22		29-11-12	ALL
	12		W0066	012	24		29-11-12	ALL

HOOKUP LIST

D280T132

91-21-51

Section D01300

Page 14

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01360		P005-00/ /		PLUG-P5 (continued)				ALL
	13	UNUSED						ALL
	14		W0066	014	24		29-11-12	ALL
	15		W0066	015	22		29-32-11	ALL
	16		W0066	016	24		29-11-31	ALL
	17		W0066	017	24		29-11-31	ALL
	18		W0066	018	22		29-11-31	ALL
	19	UNUSED						ALL
	20		W0066	020	22		29-11-12	ALL
	21	UNUSED						ALL
	22		W0066	022	24		24-51-71	ALL
	23		W0066	023	24		24-51-71	ALL
	24		W0066	024	22		29-33-11	ALL
	DED		W0066	006Z			29-32-11	ALL
	DED		W0066	015Z			29-32-11	ALL
	DED		W0066	016Z			29-11-31	ALL
	DED		W0066	017Z			29-11-31	ALL
D01363		P001-03/ /		PLUG-				ALL
	1		W0011	061	22		22-14-11	ALL
	2	UNUSED						ALL
	3		W0011	108	20		33-13-11	ALL
	4		W0011	701	24		22-14-11	ALL
	5		W0011	031	24		22-14-11	ALL
	6	UNUSED						ALL
	7		W0011	029	24		22-14-11	ALL
	8	UNUSED						ALL
	9		W0011	036	24		22-14-11	ALL
	10	UNUSED						ALL
	11		W0011	034	20		22-14-11	ALL
	12		W0011	033	20		22-14-11	ALL
	13		W0011	032	20		33-13-11	ALL
	14	UNUSED						ALL
	15		W0011	701	24		22-14-11	ALL
D01364		AE0108/ /		RCPT-SWITCH PACK				ALL
	1		W0756	505	22		27-62-11	ALL
	2		W0756	504	22		27-62-11	ALL
	3		W0756	507	22		27-62-11	ALL
	4		W0756	807	24		24-22-11	ALL
	5		W0756	806	20		24-22-11	ALL

HOOKUP LIST
D280T132

91-21-51
Section D01300
Page 15
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01364		AE0108/ /		RCPT-SWITCH PACK (continued)				ALL
	6		W0756	509	24		31-51-42	ALL
	7		W0756	520	20		31-51-42	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11		W0756	513	24		32-42-12	ALL
	12		W0756	514	24		32-42-12	ALL
	13	UNUSED						ALL
	14		W0756	516	24		32-42-12	ALL
	15		W0756	517	24		32-42-12	ALL
	16	UNUSED						ALL
	17		W0756	555	24		21-31-11	ALL
	18	UNUSED						ALL
	19	UNUSED						050-099, 275-299
	19		W0756	809	24		SPARE	150-154
	19		W0756	809	24		73-21-11	155-199
	20	UNUSED						050-099, 275-299
	20		W0756	810	24		SPARE	150-154
	20		W0756	810	24		73-21-11	155-199
	21	DK	W0756	10D	18		78-34-11	ALL
	22	DK	W0756	595	18		78-34-11	ALL
	23	DK	W0756	10C	18		78-34-11	ALL
	24	UNUSED						ALL
	CAP	Y	W0756	590	18		78-34-11	ALL
	CAP	Y	W0756	601	18		78-34-11	ALL
			W0756	10CZ			78-34-11	ALL
			W0756	10DZ			78-34-11	ALL
			W0756	666	20		78-34-11	ALL
D01365		P003-01/ /		PLUG-				ALL
	1		W0031	059	22		22-14-21	ALL
	2	UNUSED						ALL
	3		W0031	138	20		33-13-13	ALL
	4		W0031	701	24		22-14-21	ALL
	5		W0031	029	24		22-14-21	ALL
	6	UNUSED						ALL
	7		W0031	028	24		22-14-21	ALL
	8	UNUSED						ALL
	9		W0031	034	24		22-14-21	ALL
	10	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D01300

Page 16

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01365		P003-01/ /		PLUG- (continued)				ALL
	11		W0031	076	20		22-14-21	ALL
	12		W0031	030	20		22-14-21	ALL
	13		W0031	139	20		33-13-13	ALL
	14	UNUSED						ALL
	15		W0031	701	24		22-14-21	ALL
D01366		P005-00/ /		PLUG-P5				ALL
	1		W0066	131	20		33-13-16	ALL
	2		W0066	132	20		33-13-16	ALL
	3		W0066	133	22		33-16-17	ALL
	4		W0066	134	22		33-16-17	ALL
	5		W0066	135	20		21-58-11	ALL
	6	UNUSED						ALL
	7		W0066	137	22		21-58-11	ALL
	8		W0066	138	24		21-58-12	ALL
	9		W0066	139	22		21-58-16	ALL
	10		W0066	147	24		21-58-11	ALL
	11		W0066	149	24		21-58-11	ALL
	12		W0066	142	24		21-58-16	ALL
	13	UNUSED						ALL
	14		W0066	144	24		21-58-16	ALL
	15		W0066	145	24		21-58-14	ALL
	DED		W0066	133Z			33-16-17	ALL
D01370		P005-00/ /		PLUG-P5				ALL
	1		W0060	106	24		24-27-41	ALL
	2		W0060	042	20		24-27-41	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W0060	046	20		24-22-41	ALL
	7	UNUSED						ALL
	8		W0060	048	20		24-22-41	ALL
	9	UNUSED						ALL
	10		W0060	105	24		24-27-41	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13		W0060	053	24		24-22-41	ALL
	14		W0060	054	24		24-22-41	ALL
	15	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D01300
Page 17
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01370		P005-00/ /		PLUG-P5 (continued)				ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20		W0060	060	24		24-22-41	ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D01371A		//		PLUG-PART OF D01371				ALL
	A01		W0127	253R	24		34-24-11	ALL
	A02		W0127	153	24		34-24-11	ALL
	A03		W0127	259R	24		34-24-11	ALL
	A04	UNUSED						ALL
	A05		W0127	256R	24		34-24-11	ALL
	A06	UNUSED						ALL
	A07	UNUSED						ALL
	A08	UNUSED						ALL
	A09	UNUSED						ALL
	A10	UNUSED						ALL
	A11	UNUSED						ALL
	A12	UNUSED						ALL
	A13	UNUSED						ALL
	A14	UNUSED						ALL
	A15	UNUSED						ALL
	B01		W0127	253B	24		34-24-11	ALL
	B02	UNUSED						050-099, 153-199
	B02		W0127	156	24		34-24-11	150-152
	B02		W0127	160	24		34-24-11	275-299
	B03		W0127	259B	24		34-24-11	ALL
	B04	UNUSED						ALL
	B05		W0127	256B	24		34-24-11	ALL
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D01300

Page 18

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01371A		//		PLUG-PART OF D01371 (continued)				ALL
	B13	UNUSED						ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	C01	UNUSED						ALL
	C02		W0127	156	24		34-24-11	050-099, 153-199, 275-299
	C02	UNUSED						150-152
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05	UNUSED						ALL
	C06	UNUSED						ALL
	C07	UNUSED						ALL
	C08	UNUSED						ALL
	C09	UNUSED						ALL
	C10	UNUSED						ALL
	C11	UNUSED						ALL
	C12	UNUSED						ALL
	C13	UNUSED						ALL
	C14	UNUSED						ALL
	C15	UNUSED						ALL
	D01	UNUSED						ALL
	D02		W0127	152	24		34-24-11	ALL
	D03		W0127	260R	24		34-24-11	ALL
	D04	UNUSED						ALL
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	D08	UNUSED						ALL
	D09	UNUSED						ALL
	D10	UNUSED						ALL
	D11	UNUSED						ALL
	D12	UNUSED						ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15	UNUSED						ALL
	E01		W0127	257R	24		34-24-11	ALL
	E02	UNUSED						ALL
	E03		W0127	260B	24		34-24-11	ALL
	E04	UNUSED						ALL
	E05	UNUSED						ALL
	E06	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D01300

Page 19

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01371A		//		PLUG-PART OF D01371 (continued)				ALL
	E07	UNUSED						ALL
	E08	UNUSED						ALL
	E09	UNUSED						ALL
	E10	UNUSED						ALL
	E11	UNUSED						ALL
	E12	UNUSED						ALL
	E13	UNUSED						ALL
	E14	UNUSED						ALL
	E15	UNUSED						ALL
	F01		W0127	257B	24		34-24-11	ALL
	F02	UNUSED						ALL
	F03	UNUSED						ALL
	F04	UNUSED						ALL
	F05	UNUSED						ALL
	F06	UNUSED						ALL
	F07	UNUSED						ALL
	F08	UNUSED						ALL
	F09	UNUSED						ALL
	F10	UNUSED						ALL
	F11	UNUSED						ALL
	F12	UNUSED						ALL
	F13	UNUSED						ALL
	F14	UNUSED						ALL
	F15	UNUSED						ALL
	G01	UNUSED						ALL
	G02	UNUSED						ALL
	G03	UNUSED						ALL
	G04	UNUSED						ALL
	G05	UNUSED						ALL
	G06	UNUSED						ALL
	G07	UNUSED						ALL
	G08	UNUSED						ALL
	G09	UNUSED						ALL
	G10	UNUSED						ALL
	G11	UNUSED						ALL
	G12	UNUSED						ALL
	G13	UNUSED						ALL
	G14	UNUSED						ALL
	G15	UNUSED						ALL
	H01		W0127	258R	24		34-24-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D01300

Page 20

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01371A		//		PLUG-PART OF D01371 (continued)				ALL
	H02	UNUSED						ALL
	H03	UNUSED						ALL
	H04	UNUSED						ALL
	H05	UNUSED						ALL
	H06	UNUSED						ALL
	H07	UNUSED						ALL
	H08	UNUSED						ALL
	H09	UNUSED						ALL
	H10	UNUSED						ALL
	H11	UNUSED						ALL
	H12	UNUSED						ALL
	H13	UNUSED						ALL
	H14	UNUSED						ALL
	H15	UNUSED						ALL
	J01		W0127	258B	24		34-24-11	ALL
	J02	UNUSED						ALL
	J03	UNUSED						ALL
	J04	UNUSED						ALL
	J05	UNUSED						ALL
	J06	UNUSED						ALL
	J07	UNUSED						ALL
	J08	UNUSED						ALL
	J09	UNUSED						ALL
	J10	UNUSED						ALL
	J11	UNUSED						ALL
	J12	UNUSED						ALL
	J13	UNUSED						ALL
	J14	UNUSED						ALL
	J15	UNUSED						ALL
	K01	UNUSED						ALL
	K02	UNUSED						ALL
	K03	UNUSED						ALL
	K04	UNUSED						ALL
	K05	UNUSED						ALL
	K06	UNUSED						ALL
	K07	UNUSED						ALL
	K08	UNUSED						ALL
	K09	UNUSED						ALL
	K10	UNUSED						ALL
	K11	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D01300

Page 21

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01371A		//		PLUG-PART OF D01371 (continued)				ALL
	K12	UNUSED						ALL
	K13	UNUSED						ALL
	K14	UNUSED						ALL
	K15	UNUSED						ALL
	DED		W0127	253Z			34-24-11	ALL
D01371B		//		PLUG PART OF D01371				ALL
	A01	UNUSED						ALL
	A02	UNUSED						ALL
	A03	UNUSED						ALL
	A04	UNUSED						ALL
	A05	UNUSED						ALL
	A06	UNUSED						ALL
	A07	UNUSED						ALL
	A08	UNUSED						ALL
	A09	UNUSED						ALL
	A10	UNUSED						ALL
	A11	UNUSED						ALL
	A12	UNUSED						ALL
	A13	UNUSED						ALL
	A14	UNUSED						ALL
	A15	UNUSED						ALL
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04	UNUSED						ALL
	B05	UNUSED						ALL
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13	UNUSED						ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	C01	UNUSED						ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D01300

Page 22

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01371B		//		PLUG PART OF D01371 (continued)				ALL
	C04	UNUSED						ALL
	C05	UNUSED						ALL
	C06	UNUSED						ALL
	C07	UNUSED						ALL
	C08	UNUSED						ALL
	C09	UNUSED						ALL
	C10	UNUSED						ALL
	C11	UNUSED						ALL
	C12	UNUSED						ALL
	C13	UNUSED						ALL
	C14	UNUSED						ALL
	C15	UNUSED						ALL
	D01	UNUSED						ALL
	D02	UNUSED						ALL
	D03	UNUSED						ALL
	D04	UNUSED						ALL
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	D08	UNUSED						ALL
	D09	UNUSED						ALL
	D10	UNUSED						ALL
	D11	UNUSED						ALL
	D12	UNUSED						ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15	UNUSED						ALL
	E01	UNUSED						ALL
	E02	UNUSED						ALL
	E03	UNUSED						ALL
	E04	UNUSED						ALL
	E05	UNUSED						ALL
	E06	UNUSED						ALL
	E07	UNUSED						ALL
	E08	UNUSED						ALL
	E09	UNUSED						ALL
	E10	UNUSED						ALL
	E11	UNUSED						ALL
	E12	UNUSED						ALL
	E13	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D01300

Page 23

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01371B		//		PLUG PART OF D01371 (continued)				ALL
	E14	UNUSED						ALL
	E15	UNUSED						ALL
	F01	UNUSED						ALL
	F02	UNUSED						ALL
	F03	UNUSED						ALL
	F04	UNUSED						ALL
	F05	UNUSED						ALL
	F06	UNUSED						ALL
	F07	UNUSED						ALL
	F08	UNUSED						ALL
	F09	UNUSED						ALL
	F10	UNUSED						ALL
	F11	UNUSED						ALL
	F12	UNUSED						ALL
	F13	UNUSED						ALL
	F14	UNUSED						ALL
	F15	UNUSED						ALL
	G01	UNUSED						ALL
	G02	UNUSED						ALL
	G03	UNUSED						ALL
	G04	UNUSED						ALL
	G05	UNUSED						ALL
	G06	UNUSED						ALL
	G07	UNUSED						ALL
	G08	UNUSED						ALL
	G09	UNUSED						ALL
	G10	UNUSED						ALL
	G11	UNUSED						ALL
	G12	UNUSED						ALL
	G13	UNUSED						ALL
	G14	UNUSED						ALL
	G15	UNUSED						ALL
	H01	UNUSED						ALL
	H02	UNUSED						ALL
	H03	UNUSED						ALL
	H04	UNUSED						ALL
	H05	UNUSED						ALL
	H06	UNUSED						ALL
	H07	UNUSED						ALL
	H08	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D01300

Page 24

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01371B		//		PLUG PART OF D01371 (continued)				ALL
	H09	UNUSED						ALL
	H10	UNUSED						ALL
	H11	UNUSED						ALL
	H12	UNUSED						ALL
	H13	UNUSED						ALL
	H14	UNUSED						ALL
	H15	UNUSED						ALL
	J01	UNUSED						ALL
	J02	UNUSED						ALL
	J03	UNUSED						ALL
	J04	UNUSED						ALL
	J05	UNUSED						ALL
	J06	UNUSED						ALL
	J07	UNUSED						ALL
	J08	UNUSED						ALL
	J09	UNUSED						ALL
	J10	UNUSED						ALL
	J11	UNUSED						ALL
	J12	UNUSED						ALL
	J13	UNUSED						ALL
	J14	UNUSED						ALL
	J15	UNUSED						ALL
	K01	UNUSED						ALL
	K02	UNUSED						ALL
	K03	UNUSED						ALL
	K04	UNUSED						ALL
	K05	UNUSED						ALL
	K06	UNUSED						ALL
	K07	UNUSED						ALL
	K08	UNUSED						ALL
	K09	UNUSED						ALL
	K10	UNUSED						ALL
	K11	UNUSED						ALL
	K12	UNUSED						ALL
	K13	UNUSED						ALL
	K14	UNUSED						ALL
	K15	UNUSED						ALL
D01371C		//		PLUG-PART OF D01371				ALL
	1		W0127	111	24		34-24-11	ALL

HOOKUP LIST
D280T132

91-21-51
Section D01300
Page 25
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01371C		//		PLUG-PART OF D01371 (continued)				ALL
	2		W0127	194	20		34-24-11	ALL
	3	UNUSED						ALL
	4		W0127	114	20		34-24-11	ALL
	5		W0127	115	20		34-24-11	ALL
	6		W0127	116	20		34-24-11	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9		W0127	390R	24		34-24-11	ALL
	10		W0127	390B	24		34-24-11	ALL
	11		W0127	390Y	24		34-24-11	ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	= C12	UNUSED						ALL
	= C13	UNUSED						ALL
	DED		W0127	111Z			34-24-11	ALL
	DED		W0127	115Z			34-24-11	ALL
D01373		0164/225/L036		PLUG-				ALL
	A		W0629	013	24		23-51-11	ALL
	B		W0629	013Z			23-51-11	ALL
	C	UNUSED						ALL
	D	UNUSED						ALL
	E		W0629	025	24		23-51-11	ALL
	F		W0629	026	20		23-51-11	ALL
D01374		P005-00/ /		PLUG-P5				ALL
	1	DK	W0066	601	18		33-13-16	ALL
	2	DK	W0066	602	18		33-13-16	ALL
	3		W0066	603	22		33-16-17	ALL
	4		W0066	604	22		33-16-17	ALL
	5		W0066	605	22		28-42-11	ALL
	6		W0066	606	22		28-42-11	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10		W0066	610	24		28-22-11	ALL
	11	UNUSED						ALL
	12		W0066	612	24		28-22-11	ALL
	13		W0066	613	24		28-22-12	ALL
	14		W0066	614	24		28-22-12	ALL

HOOKUP LIST

D280T132

91-21-51

Section D01300

Page 26

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01374		P005-00/ /		PLUG-P5 (continued)				ALL
	15		W0066	615	22		28-42-12	ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18		W0066	618	22		28-42-12	ALL
	19		W0066	230R	24		28-41-13	ALL
	20	UNUSED						ALL
	21		W0066	230B	24		28-41-13	ALL
	22		W0066	622	22		28-41-13	ALL
	23	UNUSED						ALL
	24		W0066	624	20		28-22-11	ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
D01375		0240/220/R030		PLUG-				ALL
	A		W0631	014	24		23-51-21	ALL
	B		W0631	014Z			23-51-21	ALL
	C	UNUSED						ALL
	D	UNUSED						ALL
	E		W0631	030	24		23-51-21	ALL
	F		W0631	029	20		23-51-21	ALL
D01377		P061-00/ /		PLUG-P61				ALL
	A		W0062	80J	24		23-51-41	ALL
	B		W0062	80JZ			23-51-41	ALL
	C	UNUSED						ALL
	D	UNUSED						ALL
	E		W0062	81B	24		23-51-41	ALL
	F		W0062	81A	20		23-51-41	ALL
D01381		0265/160/R034		RCPT-				ALL
	1		W0045	119	24		31-51-12	ALL
	2		W0045	172	24		27-32-21	ALL
	3		W0045	170	24		27-32-21	ALL
	4		W0045	173	24		27-32-21	ALL
	5	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D01300
Page 27
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01381		0265/160/R034		RCPT- (continued)				ALL
	6		W0045	842	24		27-32-22	ALL
	7	UNUSED						ALL
	8		W0045	692	24		27-32-21	ALL
	9		W0045	840	24		27-32-22	050-099
	9	UNUSED						150-199, 275-299
	10	UNUSED						ALL
	11		W0045	617	24		27-32-12	ALL
	12		W0045	243R	24		27-32-21	ALL
	13		W0045	243B	24		27-32-21	ALL
	14		W0045	045	22		31-51-11	ALL
	15		W0045	120	22		31-51-12	ALL
	16		W0045	224R	24		27-32-21	ALL
	17		W0045	049	24		31-51-11	ALL
	18		W0045	224B	24		27-32-21	ALL
	19		W0045	239R	24		27-32-21	ALL
	20		W0045	239B	24		27-32-21	ALL
	21		W0045	827	24		27-32-22	ALL
	22	UNUSED						ALL
	23		W0045	238R	24		27-32-21	ALL
	24		W0045	133	24		31-51-12	ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27		W0045	047	24		31-51-11	ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30		W0045	131	24		31-51-12	ALL
	31		W0045	167	24		27-32-21	ALL
	32		W0045	048	24		31-51-11	ALL
	33		W0045	132	24		31-51-12	ALL
	34		W0045	165	22		27-32-21	ALL
	35		W0045	042	24		31-51-11	ALL
	36		W0045	169	24		27-32-21	ALL
	37		W0045	174	24		27-32-21	ALL
	38		W0045	175	24		27-32-21	ALL
	39		W0045	176	24		27-32-21	ALL
	40		W0045	166	24		27-32-21	ALL
	41	UNUSED						ALL
	42	UNUSED						050-099
	42		W0045	838	24		27-32-22	150-199, 275-299
	43		W0045	171	24		27-32-21	ALL

HOOKUP LIST

D280T132

91-21-51

Section D01300

Page 28

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01381		0265/160/R034		RCPT- (continued)				ALL
	44	UNUSED						ALL
	45		W0045	689	24		27-32-22	ALL
	46		W0045	832	24		27-32-22	ALL
	47		W0045	831	24		27-32-22	ALL
	48		W0045	046	22		31-51-11	ALL
	49		W0045	830	24		27-32-22	ALL
	50		W0045	829	24		27-32-22	ALL
	51		W0045	828	24		27-32-22	ALL
	52		W0045	PA7			99-99-99	ALL
	53		W0045	833	24		27-32-22	ALL
	54		W0045	238B	24		27-32-21	ALL
	55		W0045	826	24		27-32-22	ALL
	56		W0045	618	24		27-32-12	ALL
	57	UNUSED						ALL
	58		W0045	688	24		27-32-22	ALL
	59	UNUSED						ALL
	60	UNUSED						ALL
	61	UNUSED						ALL
	62		W0045	834	24		27-32-22	ALL
	63	UNUSED						ALL
	64		W0045	835	24		27-32-21	ALL
	65		W0045	PA7			99-99-99	ALL
	66		W0045	646	22		27-32-31	ALL
	DED		W0045	224Z			27-32-21	ALL
	DED		W0045	238Z			27-32-21	ALL
	DED		W0045	239Z			27-32-21	ALL
	DED		W0045	243Z			27-32-21	ALL
	DED		W0045	646Z			27-32-31	ALL
			W0045	047Z			31-51-11	ALL
			W0045	048Z			31-51-11	ALL
			W0045	049Z			31-51-11	ALL
			W0045	071	20		31-51-11	ALL
			W0045	107	20		31-51-12	ALL
			W0045	131Z			31-51-12	ALL
			W0045	132Z			31-51-12	ALL
			W0045	133Z			31-51-12	ALL
D01382		P005-00/ /		PLUG-P5				ALL
	1	DK	W0062	651	18		33-13-16	ALL
	2	DK	W0062	652	18		33-13-16	ALL

HOOKUP LIST
D280T132

91-21-51
Section D01300
Page 29
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01382		P005-00/ /		PLUG-P5 (continued)				ALL
	3		W0062	653	22		33-16-17	ALL
	4		W0062	654	22		33-16-17	ALL
	5		W0062	655	24		24-51-13	ALL
	6		W0062	656	24		24-51-71	ALL
	7	FM	W0062	657	16		25-31-21	050-099, 275-299
	7		W0062	657	20		25-31-21	150-199
	8		W0062	658	24		24-51-13	ALL
	9		W0062	659	22		25-31-21	ALL
	10		W0062	660	24		24-51-13	ALL
	11		W0062	661	22		33-16-17	ALL
	12		W0062	662	20		24-51-71	ALL
	13		W0062	663	24		24-11-11	ALL
	14		W0062	664	24		24-32-11	ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18		W0062	668	24		24-22-11	ALL
	19		W0062	669	20		24-22-11	ALL
	20		W0062	670	24		24-22-11	ALL
	21		W0062	671	24		24-22-11	ALL
	22		W0062	672	20		24-22-11	ALL
	23		W0062	673	24		24-51-13	ALL
	24		W0062	674	24		24-51-71	ALL
	25		W0062	675	24		24-27-11	ALL
	26		W0062	676	24		24-27-11	ALL
	27		W0062	677	22		33-16-17	ALL
	28		W0062	678	24		24-22-12	ALL
	29		W0062	679	24		24-27-11	ALL
	30		W0062	680	24		24-22-12	ALL
	31		W0062	681	24		24-22-12	ALL
	32		W0062	682	24		24-32-11	ALL
	33	UNUSED						ALL
	34		W0062	684	20		25-31-21	050-099, 150-199
	34	FM	W0062	684	16		25-31-21	275-299
	35		W0062	685	24		24-51-71	ALL
	36	UNUSED						ALL
	37		W0062	687	22		25-31-11	ALL
	38	UNUSED						ALL
	39		W0062	689	24		24-51-42	ALL
	40		W0062	690	24		24-51-42	ALL

HOOKUP LIST

D280T132

91-21-51

Section D01300

Page 30

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01382		P005-00/ /		PLUG-P5 (continued)				ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						050-099, 150-199, 275-276
	48	FM	W0062	698	16		25-31-31	277-299
	49	UNUSED						050-099, 150-199, 275-276
	49	FM	W0062	699	16		25-31-31	277-299
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
	DED		W0062	653Z			33-16-17	ALL
	DED		W0062	654Z			33-16-17	ALL
D01384		P005-00/ /		PLUG-P5				ALL
	1	UNUSED						ALL
	2		W0070	604	22		28-22-31	ALL
	3		W0070	583	22		33-16-17	ALL
	4		W0070	584	22		33-16-17	ALL
	5	UNUSED						ALL
	6		W0070	586	24		28-25-11	ALL
	7		W0070	587	22		28-22-31	ALL
	8		W0070	588	22		28-22-31	ALL
	9		W0070	589	22		28-22-31	ALL
	10		W0070	022	22		28-22-31	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13		W0070	593	24		28-22-11	ALL
	14		W0070	594	24		28-22-11	ALL
	15		W0070	595	24		28-25-11	ALL
	16		W0070	596	24		28-25-11	ALL
	17		W0070	597	24		28-25-11	ALL
	18	UNUSED						ALL
	19	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D01300
Page 31
Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01384		P005-00/ /		PLUG-P5 (continued)				ALL
	20	UNUSED						ALL
	21		W0070	509	22		28-22-31	ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	DED		W0070	022Z			28-22-31	ALL
D01386		0619/305/R030		PLUG-				050-099
D01386		0686/305/L030		PLUG-				150-199
	1		W0794	016	20		21-24-11	050-099, 150-199
	2		W0794	008	24		21-24-11	050-099, 150-199
	3		W0794	015	20		21-24-11	050-099, 150-199
	4		W0794	006	18		21-24-11	050-099, 150-199
	5	UNUSED						050-099, 150-199
	6		W0794	007	18		21-24-11	050-099, 150-199
	7		W0794	005	18		21-24-11	050-099, 150-199
D01388		P036-00/ /		RELAY SOCKET-				ALL
	A1		W0176	05F	24		28-25-11	ALL
	A2		W0176	05G	24		28-25-11	ALL
	A3	UNUSED						ALL
	B1	UNUSED						ALL
	B2	UNUSED						ALL
	B3	UNUSED						ALL
	C1		W0176	04X	20		24-51-61	ALL
	C2		W0176	04W	24		24-51-61	ALL
	C3	UNUSED						ALL
	D1		W0176	615	20		27-09-12	ALL
	D2		W0176	617	22		27-09-12	ALL
	D3	UNUSED						ALL
	X1		W0176	122	24		32-09-11	ALL
	X2		W0176	549	24		32-09-11	ALL
	DED		W0176	05FZ			28-25-11	ALL
	DED		W0176	05GZ			28-25-11	ALL
	DED		W0176	122Z			32-09-11	ALL
	DED		W0176	549Z			32-09-11	ALL
D01390		P035-00/ /		RCPT-P35				050-099
D01390		P035-00/ /		RCPT-35				150-199, 275-299
	A1		W1066	634	22		25-53-17	ALL

HOOKUP LIST

D280T132

91-21-51

Section D01300

Page 32

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01390		P035-00/ /		RCPT-P35 (continued)				050-099
D01390		P035-00/ /		RCPT-35 (continued)				150-199, 275-299
	A2		W1066	636	22		25-53-17	ALL
	A3		W1066	617	22		25-53-17	ALL
	B1		W1066	616	22		25-53-17	ALL
	B2		W1066	635	22		25-53-17	ALL
	B3		W1066	615	22		25-53-17	ALL
	X1		W1066	646	22		25-53-17	ALL
	X2		W1066	637	22		25-53-17	ALL
D01394		P005-00/ /		PLUG-P5				ALL
	1		W0060	001	20		33-13-16	ALL
	2		W0060	002	20		33-13-16	ALL
	3		W0060	003	22		33-16-17	ALL
	4		W0060	004	22		33-16-17	ALL
	5		W0060	005	22		49-61-11	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11		W0060	011	22		49-61-11	ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15		W0060	015	22		49-61-11	ALL
	16		W0060	016	22		49-61-11	ALL
	17		W0060	017	22		49-61-11	ALL
	18		W0060	018	22		49-61-11	ALL
	19		W0060	019	22		49-61-11	ALL
	20	UNUSED						ALL
	21		W0060	021	22		49-61-11	ALL
	22		W0060	022	24		36-11-41	ALL
	23		W0060	023	24		36-11-41	ALL
	24	UNUSED						ALL
	25	UNUSED						050-099, 162-199, 275-299
	25		W0060	025	24		49-72-11	150-157
	26		W0060	026	24		49-72-11	ALL
	27		W0060	027	22		49-61-11	ALL
	28	UNUSED						ALL
	29	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D01300

Page 33

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01394		P005-00/ /		PLUG-P5 (continued)				ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	DED		W0060	003Z			33-16-17	ALL
	DED		W0060	004Z			33-16-17	ALL
D01396		P033-00/ /		RELAY SOCKET-				ALL
	A1		W0142	640	22		30-31-21	ALL
	A2		W0142	176	22		30-31-21	ALL
	A3		W0142	633	22		30-31-21	ALL
	B1	UNUSED						ALL
	B2		W0142	635	24		30-31-21	ALL
	B3		W0142	643	24		30-31-21	ALL
	C1		W0142	02N	22		30-31-11	ALL
	C2		W0142	02M	22		30-31-11	ALL
	C3	UNUSED						ALL
	D1		W0142	175	22		30-31-21	ALL
	D1		W0142	642	22		30-31-21	ALL
	D2		W0142	176	22		30-31-21	ALL
	D3		W0142	175	22		30-31-21	ALL
	X1		W0142	802	24		32-09-13	ALL
	X2		W0142	803	24		32-09-13	ALL
	DED		W0142	02MZ			30-31-11	ALL
	DED		W0142	02NZ			30-31-11	ALL
	DED		W0142	635Z			30-31-21	ALL
	DED		W0142	643Z			30-31-21	ALL
D01399		0165/190/R040		PLUG				ALL
	A	\$D	W0469	007	20		27-32-21	ALL
	B	\$D	W0469	008	20		27-32-21	ALL

HOOKUP LIST

D280T132

91-21-51

Section D01300

Page 34 End

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01404		AE0108/ /		RCPT-SWITCH PACK				ALL
	1		W0768	116	24		32-42-12	ALL
	2		W0768	117	24		32-42-12	ALL
	3	UNUSED						ALL
	4		W0768	120	24		32-42-12	ALL
	5		W0768	121	24		32-42-12	ALL
	6	UNUSED						ALL
	7		W0768	508	24		24-22-11	ALL
	8		W0768	507	20		24-22-11	ALL
	9		W0768	124	24		31-51-42	ALL
	10		W0768	127	20		31-51-42	ALL
	11		W0768	513	24		21-31-11	ALL
	12	UNUSED						ALL
	13	UNUSED						050-099, 275-299
	13		W0768	514	24		SPARE	150-199
	14	UNUSED						050-099, 275-299
	14		W0768	515	24		SPARE	150-199
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	DK	W0768	10C	18		78-34-21	ALL
	22	DK	W0768	535	18		78-34-21	ALL
	23	DK	W0768	10D	18		78-34-21	ALL
	24	UNUSED						ALL
	CAP	Y	W0768	500	18		78-34-21	050-099, 150-156, 162-166, 275-276
	CAP	Y	W0768	534	18		78-34-21	050-099, 150-156, 162-166, 275-276
	CAP	Y	W0768	500	18		SPARE	157, 167-199, 277-299
	CAP	Y	W0768	534	18		SPARE	157, 167-199, 277-299
			W0768	10CZ			78-34-21	ALL
			W0768	10DZ			78-34-21	ALL
			W0768	10E	20		78-34-21	ALL
D01406		P005-00/ /		PLUG-P5				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W0070	003	22		33-16-17	ALL
	4		W0070	004	22		33-16-17	ALL
	5		W0070	005	22		29-11-32	ALL

HOOKUP LIST

D280T132

91-21-51

Section D01400

Page 1

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01406		P005-00/ /		PLUG-P5 (continued)				ALL
	6		W0070	006	22		29-32-11	ALL
	7	UNUSED						ALL
	8		W0070	008	22		29-11-32	ALL
	9		W0070	009	22		29-11-32	ALL
	10		W0070	010	22		29-11-32	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13		W0070	011	22		29-11-32	ALL
	14		W0070	03Y	22		29-11-32	ALL
	15		W0070	015	24		22-41-11	ALL
	16	UNUSED						ALL
	17		W0070	017	24		29-11-32	ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20		W0070	020	22		29-11-32	ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24		W0070	024	22		29-33-11	ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30		W0070	04C	20		29-11-32	ALL
	31		W0070	04A	22		29-11-32	ALL
	DED		W0070	024Z			29-33-11	ALL
D01408		P005-00/ /		PLUG-P5				ALL
	1		W0070	041	20		21-31-11	ALL
	2		W0070	042	20		21-31-31	ALL
	3		W0070	043	20		21-31-31	ALL
	4		W0070	301B	22		21-31-31	ALL
	5		W0070	301R	22		21-31-31	ALL
	6		W0070	301Y	22		21-31-31	ALL
	7	UNUSED						ALL
	8		W0070	048	20		21-31-31	ALL
	9		W0070	049	20		21-31-31	ALL
	10		W0070	049	20		21-31-31	ALL
	11	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D01400

Page 2

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01408		P005-00/ /		PLUG-P5 (continued)				ALL
	12	UNUSED						ALL
D01415		1165/320/0000		PLUG-ADF R ANTENNA				ALL
	1		W0349	WRD	24		34-57-21	ALL
	2		W0349	WBU	24		34-57-21	ALL
	3	UNUSED						ALL
	4		W0349	WYL	24		34-57-21	ALL
	5		W0349	WGR	24		34-57-21	ALL
	6	UNUSED						ALL
	7		W0349	WVI	24		34-57-21	ALL
	8		W0349	WBK	24		34-57-21	ALL
	9	UNUSED						ALL
	10		W0349	WOR	22		34-57-21	ALL
	11		W0349	WBN	22		34-57-21	ALL
	12		W0349	WHT	20		34-57-21	ALL
	13	UNUSED						ALL
	14		W0349	003	20		34-57-21	ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	REF		W0349	002	20		34-57-21	ALL
	REF		W0349	WRDZ			34-57-21	ALL
	REF		W0349	WVIZ			34-57-21	ALL
	REF		W0349	WYLZ			34-57-21	ALL
			W0349	004	20		34-57-21	ALL
			W0349	YAA			34-57-21	ALL
D01419B		//		PLUG-PART OF D01419				050-099
D01419B		//		PLUG PART OF D01419				150-199, 275-299
	A01	UNUSED						ALL
	A02	UNUSED						ALL
	A03	UNUSED						ALL
	A04	UNUSED						ALL
	A05	UNUSED						ALL
	A06	UNUSED						ALL
	A07	UNUSED						ALL
	A08	UNUSED						ALL
	A09	UNUSED						ALL
	A10	UNUSED						ALL
	A11	UNUSED						ALL
	A12	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D01400

Page 3

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01419B		//		PLUG-PART OF D01419 (continued)				050-099
D01419B		//		PLUG PART OF D01419 (continued)				150-199, 275-299
	A13	UNUSED						ALL
	A14	UNUSED						ALL
	A15	UNUSED						ALL
	B01		W0175	208R	24		23-51-13	ALL
	B02		W0175	208B	24		23-51-13	ALL
	B03	UNUSED						ALL
	B04	UNUSED						ALL
	B05	UNUSED						ALL
	B06	UNUSED						ALL
	B07		W0175	221R	24		34-57-21	ALL
	B08		W0175	221B	24		34-57-21	ALL
	B09	UNUSED						ALL
	B10		W0175	230R	24		34-22-91	ALL
	B11		W0175	230B	24		34-22-91	ALL
	B12	UNUSED						ALL
	B13		W0175	228R	24		34-22-28	ALL
	B14		W0175	228B	24		34-22-28	ALL
	B15		W0175	026	24		34-57-21	ALL
	C01	UNUSED						ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05		W0175	031	24		34-57-21	ALL
	C06	UNUSED						ALL
	C07		W0175	032	24		34-57-21	ALL
	C08	UNUSED						ALL
	C09		W0175	033	24		34-57-21	ALL
	C10		W0175	225R	22		34-57-21	ALL
	C11		W0175	225B	22		34-57-21	ALL
	C12		W0175	024	22		34-57-21	ALL
	C13		W0175	023	22		34-57-21	ALL
	C14	UNUSED						ALL
	C15	UNUSED						ALL
	D01		W0175	222BN	24		34-57-21	ALL
	D02		W0175	222B	24		34-57-21	ALL
	D03	UNUSED						ALL
	D04	UNUSED						ALL
	D05	UNUSED						ALL
	D06	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D01400

Page 4

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01419B		//		PLUG-PART OF D01419 (continued)				050-099
D01419B		//		PLUG PART OF D01419 (continued)				150-199, 275-299
	D07		W0175	223BN	24		34-57-21	ALL
	D08		W0175	223B	24		34-57-21	ALL
	D09	UNUSED						ALL
	D10	UNUSED						ALL
	D11	UNUSED						ALL
	D12	UNUSED						ALL
	D13	UNUSED						ALL
	D14		W0175	224BN	24		34-57-21	ALL
	D15		W0175	224B	24		34-57-21	ALL
	DED		W0175	221Z			34-57-21	ALL
	DED		W0175	230Z			34-22-91	ALL
	REF		W0175	222	20		34-57-21	050-099
	REF		W0175	222Z			34-57-21	050-099
	REF		W0175	223	20		34-57-21	050-099
	REF		W0175	223Z			34-57-21	050-099
	REF		W0175	224	20		34-57-21	050-099
	REF		W0175	224Z			34-57-21	050-099
			W0175	228	20		34-22-28	ALL
			W0175	228Z			34-22-28	ALL
			W0175	222	20		34-57-21	150-199, 275-299
			W0175	222Z			34-57-21	150-199, 275-299
			W0175	223	20		34-57-21	150-199, 275-299
			W0175	223Z			34-57-21	150-199, 275-299
			W0175	224	20		34-57-21	150-199, 275-299
			W0175	224Z			34-57-21	150-199, 275-299
D01419C		//		PLUG-PART OF D01419				050-099
D01419C		//		PLUG PART OF D01419				150-199, 275-299
	1	UNUSED						ALL
	2		W0175	020	20		34-57-21	ALL
	3		W0175	022	20		34-57-21	ALL
	4		W0175	021	20		34-57-21	ALL
	5	UNUSED						ALL
	= C1	UNUSED						ALL
	= C5	UNUSED						ALL
	DED		W0175	020Z			34-57-21	ALL
D01421		AE0316/POS/09		PLUG-E2-3				ALL
	1		W0135	601	24		31-31-16	050, 275-299

HOOKUP LIST
D280T132

91-21-51
Section D01400
Page 5
Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01421		AE0316/POS/09		PLUG-E2-3 (continued)				ALL
	1	UNUSED						051-099, 150-199
	2	UNUSED	W0135	602	24		31-31-16	050-099
	2	UNUSED						150-199, 275-299
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED	W0135	605	24		31-31-16	050, 150, 152, 154, 156, 162, 164, 166, 275, 277
	5	UNUSED						051-099, 151, 153, 155, 157, 163, 165, 167-199, 276, 278-299
	6	UNUSED						050, 150, 153-154, 157-162, 165-166, 275, 278-299
	6	UNUSED	W0135	606	24		31-31-17	051-099
	6	UNUSED	W0135	606	24		31-31-16	151-152, 155-156, 163-164, 167-199, 276-277
	7	UNUSED						050-099, 150-152, 157, 165-199, 275-277
	7	UNUSED	W0135	607	24		31-31-16	153-156, 162-164, 278-299
	8	UNUSED						050-099, 150-156, 165-199, 275-278
	8	UNUSED	W0135	608	24		31-31-16	157-164, 280-299
	9	UNUSED						050-099, 150-164, 275-299
	9	UNUSED	W0135	609	24		31-31-16	165-199
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED	W0135	613	24		31-31-16	ALL
	14	UNUSED	W0135	614	24		31-31-16	ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						050-099
	18	UNUSED	W0135	618	24		31-31-16	150-199, 275-299
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D01400

Page 6

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01421		AE0316/POS/09		PLUG-E2-3 (continued)				ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
	CAP	Y	W0135	606	24		31-31-16	280-299
D01423		SHELF/E02/02		RCPT-E2-2				ALL
	1		W0133	601	24		34-53-12	050-099 150-199, 275-299
	1	UNUSED						150-199, 275-299
	2		W0133	602	24		34-53-12	050-099, 150, 152-199, 275-299
	2	UNUSED						151
	3		W0133	603	24		34-53-12	050-099
	3	UNUSED						150-199, 275-299
	4	UNUSED						ALL
	5	UNUSED						050-099, 150-199
	5		W0133	605	24		34-53-12	275-299
	6		W0133	606	24		34-53-12	050-099, 150-199

HOOKUP LIST
D280T132

91-21-51
Section D01400
Page 7
Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01423		SHELF/E02/02		RCPT-E2-2 (continued)				ALL
	6	UNUSED						275-299
	7	UNUSED						050-099, 152, 155, 164, 166, 275-299
	7		W0133	607	24		34-53-12	150-151, 153-154, 156-163, 165, 167-199
	8	UNUSED						050-099, 275-299
	8		W0133	608	24		34-53-12	150-199
	9	UNUSED						050-099, 151, 275-299
	9		W0133	609	24		34-53-12	150, 152-199
	10		W0133	610	24		34-53-12	050-099, 151, 275-299
	10	UNUSED						150, 152-199
	11	UNUSED						050-099, 150-151, 153-154, 156-163, 165, 167-199, 275-299
	11		W0133	611	24		34-53-12	152, 155, 164, 166
	12	UNUSED						ALL
	13	UNUSED						050-099, 150-151, 153-154, 156-163, 165, 167-199, 275-299
	13		W0133	613	24		34-53-12	152, 155, 164, 166
	14		W0133	614	24		34-53-12	050-099, 152, 155, 164, 166
	14	UNUSED						150-151, 153-154, 156-163, 165, 167-199, 275-299
	15		W0133	615	24		34-53-12	050-099, 165
	15	UNUSED						150-164, 166-199, 275-299
	16	UNUSED						050-099, 150-164, 166-199, 275-299
	16		W0133	616	24		34-53-12	165
	17	UNUSED						050-099, 150-151, 153-154, 156-163, 165, 275-299
	17		W0133	617	24		34-53-12	152, 155, 164, 166-199
	18		W0133	618	24		34-53-12	050-099, 165, 277-299
	18	UNUSED						150-164, 166-199, 275-276
	19	UNUSED						050-099, 151-152, 155, 162-199, 275-299
	19		W0133	619	24		34-53-12	150, 153-154, 156-157
	20		W0133	620	24		34-53-12	050-099, 154, 156-157, 165
	20	UNUSED						150-153, 155, 162-164, 166-199, 275-299
	21		W0133	621	24		34-53-12	050-099, 150, 152-153, 155, 162-199, 275-276, 278
	21	UNUSED						151, 154, 156-157, 277, 280-299
	22	UNUSED						050-099, 152-154, 156-157, 163, 167-199, 275-276, 278
	22		W0133	622	24		34-53-12	150-151, 155, 162, 164-166, 277, 280-299
	23	UNUSED						050, 152, 154-156, 162-163, 165-199, 275-278

HOOKUP LIST
D280T132

91-21-51
Section D01400
Page 8
Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01423		SHELF/E02/02		RCPT-E2-2 (continued)				ALL
	23		W0133	623	24		34-53-12	051-099, 150-151, 153, 157, 164, 280-299
	24		W0133	624	24		34-53-12	050, 150, 153, 156, 162, 165-166, 276-277, 280-299
	24	UNUSED						051-099, 151-152, 154-155, 157, 163-164, 167-199, 275, 278
	25		W0133	625	24		34-53-12	ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
	CAP	Y	W0133	623	24		34-53-12	050, 152, 154-156, 162-163, 165-199, 275-278
	CAP	Y	W0133	611	24		34-53-12	050-099, 150-151, 153-154, 156-163, 165, 167-199, 275-299

HOOKUP LIST
D280T132

91-21-51
Section D01400
Page 9
Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01423		SHELF/E02/02		RCPT-E2-2 (continued)				ALL
	CAP	Y	W0133	613	24		34-53-12	050-099, 150-151, 153-154, 156-163, 165, 167-199, 275-299
	CAP	Y	W0133	617	24		34-53-12	050-099, 150-151, 153-154, 156-163, 165, 275-299
	CAP	Y	W0133	616	24		34-53-12	050-099, 150-164, 166-199, 275-299
	CAP	Y	W0133	605	24		34-53-12	050-099, 150-199
	CAP	Y	W0133	604	24		34-53-12	ALL
	CAP	Y	W0133	612	24		34-53-12	ALL
	CAP	Y	W0133	609	24		34-53-12	050-099, 151, 275-299
	CAP	Y	W0133	619	24		34-53-12	050-099, 151-152, 155, 162-199, 275-299
	CAP	Y	W0133	607	24		34-53-12	050-099, 152, 155, 164, 166, 275-299
	CAP	Y	W0133	622	24		34-53-12	050-099, 152-154, 156-157, 163, 167-199, 275-276, 278
	CAP	Y	W0133	608	24		34-53-12	050-099, 275-299
	CAP	Y	W0133	624	24		34-53-12	051-099, 151-152, 154-155, 157, 163-164, 167-199, 275, 278
	CAP	Y	W0133	610	24		34-53-12	150, 152-199
	CAP	Y	W0133	614	24		34-53-12	150-151, 153-154, 156-163, 165, 167-199, 275-299
	CAP	Y	W0133	620	24		34-53-12	150-153, 155, 162-164, 166-199, 275-299
	CAP	Y	W0133	618	24		34-53-12	150-164, 166-199, 275-276
	CAP	Y	W0133	615	24		34-53-12	150-164, 166-199, 275-299
	CAP	Y	W0133	601	24		34-53-12	150-199, 275-299
	CAP	Y	W0133	603	24		34-53-12	150-199, 275-299
	CAP	Y	W0133	602	24		34-53-12	151
	CAP	Y	W0133	621	24		34-53-12	151, 154, 156-157, 277, 280-299
	CAP	Y	W0133	606	24		34-53-12	275-299
D01424		703/156/R 70		PLUG-L ENG SQUIB				050-099
D01424		654+126/156/R 70		PLUG-L ENG SQUIB				155-199, 275-299
	1		W0546	002R	20		26-21-11	050-099, 155-199, 275-299
	2		W0546	005R	20		26-21-11	050-099, 155-199, 275-299
	3		W0546	008R	20		26-21-11	050-099, 155-199, 275-299
D01425		AE0316/ /		RCPT-E2-3				ALL
	1		W0145	601	24		34-53-22	050-099
	1	UNUSED						150-199, 275-299
	2		W0145	602	24		34-53-22	050-099, 150, 152-199, 275-299
	2	UNUSED						151
	3		W0145	603	24		34-53-22	050-099

HOOKUP LIST

D280T132

91-21-51

Section D01400

Page 10

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01425		AE0316/ /		RCPT-E2-3 (continued)				ALL
	3	UNUSED						150-199, 275-299
	4	UNUSED						ALL
	5	UNUSED						050-099, 150-199
	5		W0145	605	24		34-53-22	275-299
	6		W0145	606	24		34-53-22	050-099, 150-199
	6	UNUSED						275-299
	7	UNUSED						050-099, 152, 155, 164, 166, 275-299
	7		W0145	607	24		34-53-22	150-151, 153-154, 156-163, 165, 167-199
	8	UNUSED						050-099, 275-299
	8		W0145	608	24		34-53-22	150-199
	9	UNUSED						050-099, 151, 275-299
	9		W0145	609	24		34-53-22	150, 152-199
	10		W0145	610	24		34-53-22	050-099, 151, 275-299
	10	UNUSED						150, 152-199
	11	UNUSED						050-099, 150-151, 153-154, 156-163, 165, 167-199, 275-299
	11		W0145	611	24		34-53-22	152, 155, 164, 166
	12	UNUSED						ALL
	13	UNUSED						050-099, 150-151, 153-154, 156-163, 165, 167-199, 275-299
	13		W0145	613	24		34-53-22	152, 155, 164, 166
	14		W0145	614	24		34-53-22	050-099, 152, 155, 164, 166
	14	UNUSED						150-151, 153-154, 156-163, 165, 167-199, 275-299
	15		W0145	615	24		34-53-22	050-099, 165
	15	UNUSED						150-164, 166-199, 275-299
	16	UNUSED						050-099, 150-164, 166-199, 275-299
	16		W0145	616	24		34-53-22	165
	17	UNUSED						050-099, 150-151, 153-154, 156-163, 165, 275-299
	17		W0145	617	24		34-53-22	152, 155, 164, 166-199
	18		W0145	618	24		34-53-22	050-099, 165, 277-299
	18	UNUSED						150-164, 166-199, 275-276
	19	UNUSED						050-099, 151-152, 155, 162-199, 275-299
	19		W0145	619	24		34-53-22	150, 153-154, 156-157
	20		W0145	620	24		34-53-22	050-099, 154, 156-157, 165
	20	UNUSED						150-153, 155, 162-164, 166-199, 275-299
	21		W0145	621	24		34-53-22	050-099, 150, 152-153, 155, 162-199, 276, 278
	21	UNUSED						151, 154, 156-157, 275, 277, 280-299

HOOKUP LIST
D280T132

91-21-51
Section D01400
Page 11
Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01425		AE0316/ /		RCPT-E2-3 (continued)				ALL
	22	UNUSED						050-099, 152-154, 156-157, 163, 167-199, 275-276, 278
	22		W0145	622	24		34-53-22	150-151, 155, 162, 164-166, 277, 280-299
	23	UNUSED						050, 152, 154-156, 162-163, 165-199, 275-278
	23		W0145	623	24		34-53-22	051-099, 150-151, 153, 157, 164, 280-299
	24		W0145	624	24		34-53-22	050, 150, 153, 156, 162, 165-166, 276-277, 280-299
	24	UNUSED						051-099, 151-152, 154-155, 157, 163-164, 167-199, 275, 278
	25		W0145	625	24		34-53-22	ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D01400

Page 12

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01425		AE0316/ /		RCPT-E2-3 (continued)				ALL
	55	UNUSED						ALL
	CAP	Y	W0145	623	24		34-53-22	050, 152, 154-156, 162-163, 165-199, 275-278
	CAP	Y	W0145	611	24		34-53-22	050-099, 150-151, 153-154, 156-163, 165, 167-199, 275-299
	CAP	Y	W0145	613	24		34-53-22	050-099, 150-151, 153-154, 156-163, 165, 167-199, 275-299
	CAP	Y	W0145	617	24		34-53-22	050-099, 150-151, 153-154, 156-163, 165, 275-299
	CAP	Y	W0145	616	24		34-53-22	050-099, 150-164, 166-199, 275-299
	CAP	Y	W0145	605	24		34-53-22	050-099, 150-199
	CAP	Y	W0145	604	24		34-53-22	ALL
	CAP	Y	W0145	612	24		34-53-22	ALL
	CAP	Y	W0145	609	24		34-53-22	050-099, 151, 275-299
	CAP	Y	W0145	619	24		34-53-22	050-099, 151-152, 155, 162-199, 275-299
	CAP	Y	W0145	607	24		34-53-22	050-099, 152, 155, 164, 166, 275-299
	CAP	Y	W0145	622	24		34-53-22	050-099, 152-154, 156-157, 163, 167-199, 275-276, 278
	CAP	Y	W0145	608	24		34-53-22	050-099, 275-299
	CAP	Y	W0145	624	24		34-53-22	051-099, 151-152, 154-155, 157, 163-164, 167-199, 275, 278
	CAP	Y	W0145	610	24		34-53-22	150, 152-199
	CAP	Y	W0145	614	24		34-53-22	150-151, 153-154, 156-163, 165, 167-199, 275-299
	CAP	Y	W0145	620	24		34-53-22	150-153, 155, 162-164, 166-199, 275-299
	CAP	Y	W0145	618	24		34-53-22	150-164, 166-199, 275-276
	CAP	Y	W0145	615	24		34-53-22	150-164, 166-199, 275-299
	CAP	Y	W0145	601	24		34-53-22	150-199, 275-299
	CAP	Y	W0145	603	24		34-53-22	150-199, 275-299
	CAP	Y	W0145	602	24		34-53-22	151
	CAP	Y	W0145	621	24		34-53-22	151, 154, 156-157, 275, 277, 280-299
	CAP	Y	W0145	606	24		34-53-22	275-299
D01426		0715/156/R070		PLUG-L ENG SQUIB				050-099
D01426		654+138/156/R070		PLUG-L ENG SQUIB				155-199, 275-299
	1		W0548	002R	20		26-21-11	050-099, 155-199, 275-299
	2		W0548	005R	20		26-21-11	050-099, 155-199, 275-299
	3		W0548	008R	20		26-21-11	050-099, 155-199, 275-299

HOOKUP LIST
D280T132

91-21-51
Section D01400
Page 13
Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01427		AE0324/ /		PLUG-E2-5				ALL
	1		W0139	881	24		23-21-12	050-099, 150-151, 153-154, 156, 162-165, 280-299
	1	UNUSED						152, 155, 157, 166-199, 275-278
	2	UNUSED						050-099, 150-154, 156, 162-165, 167-199, 275-276, 278-299
	2		W0139	882	24		23-21-12	155, 157, 166, 277
	3		W0139	883	24		23-21-12	050-099, 150-154, 162-199, 275-299
	3	UNUSED						155-157
	4		W0139	884	24		23-21-12	050-099, 150-165, 167-199, 275-299
	4	UNUSED						166
	5		W0139	885	24		23-21-12	050-099, 151-154, 157-165, 275-276
	5	UNUSED						150, 155-156, 166-199, 277-299
	6	UNUSED						050-099, 150, 153-154, 156, 162-199, 275-277
	6		W0139	886	24		23-21-12	151-152, 155, 157, 278-299
	7	UNUSED						050-099, 151-154, 162-165, 167-199, 275-278
	7		W0139	887	24		23-21-12	150, 155-157, 166, 280-299
	8		W0139	888	24		23-21-12	050-099, 150, 152-154, 162-165, 167-199, 278
	8	UNUSED						151, 155-157, 166, 275-277, 280-299
	9	UNUSED						050-099, 151, 153-154, 164-199, 277, 280-299
	9		W0139	889	24		23-21-12	150, 152, 155-163, 275-276, 278
	10	UNUSED						050-099, 151-154, 157, 164, 166, 275-278
	10		W0139	890	24		23-21-12	150, 155-156, 162-163, 165, 167-199, 280-299
	11		W0139	891	24		23-21-12	050-099, 150, 152-154, 164, 166-199, 275-278
	11	UNUSED						151, 155-163, 165, 280-299
	12		W0139	892	24		23-21-12	050-099, 151-166, 275-276, 278
	12	UNUSED						150, 167-199, 277, 280-299
	13		W0139	893	24		23-21-12	050-099, 153, 155-156, 164, 166, 275, 277-278
	13	UNUSED						150-152, 154, 157-163, 165, 167-199, 276, 280-299
	14	UNUSED						050, 151-152, 154, 163-164, 167-199, 280-299
	14		W0139	894	24		23-21-12	051-099, 150, 153, 155-162, 165-166, 275-278

HOOKUP LIST

D280T132

91-21-51

Section D01400

Page 14

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01427		AE0324/ /		PLUG-E2-5 (continued)				ALL
	15		W0139	895	24		23-21-12	050, 150-152, 155, 157, 163-199, 275-276, 278
	15	UNUSED						051-099, 153-154, 156, 162, 277, 280-299
	16	UNUSED						050-099, 150-152, 155-157, 163-199, 275-277, 280-299
	16		W0139	896	24		23-21-12	153-154, 162, 278
	17		W0139	897	24		23-21-12	ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D01400

Page 15

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01427		AE0324/ /		PLUG-E2-5 (continued)				ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
D01428		702/168/R 68		PLUG-PRESS SW				050-099
D01428		654+125/168/R 68		PLUG-PRESS SW				155-199, 275-299
	1		W0546	001R	20		26-21-11	050-099, 155-199, 275-299
	2	UNUSED						050-099, 155-199, 275-299
	3		W0546	004R	20		26-21-11	050-099, 155-199, 275-299
	4		W0546	007R	20		26-21-11	050-099, 155-199, 275-299
	5	UNUSED						050-099, 155-199, 275-299
D01429		AE0324/ /		PLUG-E2-5				ALL
	1		W0139	801	24		23-22-13	050-099, 151, 165, 275-299
	1	UNUSED						150, 152-164, 166-199
	2	UNUSED						050-099, 151, 165, 275-299
	2		W0139	802	24		23-22-13	150, 152-164, 166-199
	3	UNUSED						050-099, 151, 165, 275-299
	3		W0139	803	24		23-22-13	150, 152-164, 166-199
	4	UNUSED						050-099, 151, 165, 275-299
	4		W0139	804	24		23-22-13	150, 152-164, 166-199
	5		W0139	805	24		23-22-13	050-099, 151, 165, 275-299
	5	UNUSED						150, 152-164, 166-199
	6	UNUSED						050-099, 151, 165, 275-299
	6		W0139	806	24		23-22-13	150, 152-164, 166-199
	7	UNUSED						050, 150, 153-154, 156-163
	7		W0139	807	24		23-22-13	051-099, 151-152, 155, 164-199, 275-299
	8	UNUSED						050, 150, 153-154, 156-163
	8		W0139	808	24		23-22-13	051-099, 151-152, 155, 164-199, 275-299
	9		W0139	809	24		23-22-13	050, 150, 152-162, 164, 166, 275-299
	9	UNUSED						051-099, 151, 163, 165, 167-199
	10		W0139	810	24		23-22-13	050, 150, 152-162, 164, 166, 275-299
	10	UNUSED						051-099, 151, 163, 165, 167-199
	11	UNUSED						050, 150, 152-162, 164, 166, 275-299
	11		W0139	811	24		23-22-13	051-099, 151, 163, 165, 167-199
	12		W0139	812	24		23-22-13	050-099, 151, 165, 275-299
	12	UNUSED						150, 152-164, 166-199
	13	UNUSED						050, 150, 153-154, 156-163

HOOKUP LIST

D280T132

91-21-51

Section D01400

Page 16

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01429		AE0324/ /		PLUG-E2-5 (continued)				ALL
	13		W0139	813	24		23-22-13	051-099, 151-152, 155, 164-199, 275-299
	14		W0139	814	24		23-22-13	050, 150, 153-154, 156-162, 275-299
	14	UNUSED						051-099, 151-152, 155, 163-199
	15	UNUSED						050-099, 151-152, 155, 163-166
	15		W0139	815	24		23-22-13	150, 153-154, 156-162, 167-199, 275-299
	16		W0139	816	24		23-22-13	050, 150, 152-164, 166
	16	UNUSED						051-099, 151, 165, 167-199, 275-299
	17		W0139	817	24		23-22-13	050-099, 151-152, 155, 164-166, 275-299
	17	UNUSED						150, 153-154, 156-163, 167-199
	18		W0139	818	24		23-22-13	050-099, 151, 165, 275-299
	18	UNUSED						150, 152-164, 166-199
	19	UNUSED						050-099, 151, 165, 275-299
	19		W0139	819	24		23-22-13	150, 152-164, 166-199
	20		W0139	820	24		23-22-13	050-099, 151, 165, 275-299
	20	UNUSED						150, 152-164, 166-199
	21	UNUSED						050-099, 151, 165, 275-299
	21		W0139	821	24		23-22-13	150, 152-164, 166-199
	22	UNUSED						050-099, 151, 165, 275-299
	22		W0139	822	24		23-22-13	150, 152-164, 166-199
	23		W0139	823	24		23-22-13	050-099, 151, 165, 275-299
	23	UNUSED						150, 152-164, 166-199
	24	UNUSED						050-099, 151, 165, 275-299
	24		W0139	824	24		23-22-13	150, 152-164, 166-199
	25		W0139	825	24		23-22-13	050-099, 151-152, 155, 163-166
	25	UNUSED						150, 153-154, 156-162, 167-199, 275-299
	26		W0139	826	24		23-22-13	050, 150, 152-162, 164, 166, 275-299
	26	UNUSED						051-099, 151, 163, 165, 167-199
	27	UNUSED						050, 150, 152-164, 166, 275-299
	27		W0139	827	24		23-22-13	051-099, 151, 165, 167-199
	28		W0139	828	24		23-22-13	050-099, 151-152, 155, 164-166
	28	UNUSED						150, 153-154, 156-163, 167-199, 275-299
	29		W0139	829	24		23-22-13	050, 150, 153-154, 156-162, 275-299
	29	UNUSED						051-099, 151-152, 155, 163-199
	30		W0139	830	24		23-22-13	050-099, 151, 165, 275-299
	30	UNUSED						150, 152-164, 166-199
	31	UNUSED						050-099, 151-152, 155, 163-166, 275-299
	31		W0139	831	24		23-22-13	150, 153-154, 156-162, 167-199
	32	UNUSED						050-099, 151-152, 155, 163-166, 275-299
	32		W0139	832	24		23-22-13	150, 153-154, 156-162, 167-199
	33		W0139	833	24		23-22-13	050-099, 151-152, 155, 164-199, 275-299

HOOKUP LIST
D280T132

91-21-51
Section D01400
Page 17
Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01429		AE0324/ /		PLUG-E2-5 (continued)				ALL
	33	UNUSED						150, 153-154, 156-163
	34	UNUSED						050, 150, 152-162, 164, 166
	34		W0139	834	24		23-22-13	051-099, 151, 163, 165, 167-199, 275-299
	35		W0139	835	24		23-22-13	050-099, 151, 165, 275-299
	35	UNUSED						150, 152-164, 166-199
	36		W0139	836	24		23-22-13	050-099, 151, 165, 275-299
	36	UNUSED						150, 152-164, 166-199
	37		W0139	837	24		23-22-13	050, 151, 153-154, 156, 162, 165-199, 276, 280-299
	37	UNUSED						051-099, 150, 152, 155, 157, 163-164, 275, 277-278
	38		W0139	838	24		23-22-13	050, 153, 156, 164, 167-199, 276-299
	38	UNUSED						051-099, 150-152, 154-155, 157-163, 165-166, 275
	39		W0139	839	24		23-22-13	050-099, 151, 153, 155, 157-162, 164, 166, 276-277
	39	UNUSED						150, 152, 154, 156, 163, 165, 167-199, 275, 278-299
	40		W0139	840	24		23-22-13	050-099, 150-152, 154-157, 163-166, 275
	40	UNUSED						153, 162, 167-199, 276-299
	41	UNUSED						050, 150, 152-162, 164, 166-199
	41		W0139	841	24		23-22-13	051-099, 151, 163, 165, 275-299
	42		W0139	842	24		23-22-13	050-099, 151, 165, 275-299
	42	UNUSED						150, 152-164, 166-199
	43	UNUSED						050-099, 151, 165, 275-299
	43		W0139	843	24		23-22-13	150, 152-164, 166-199
	44	UNUSED						050-099, 151, 165
	44		W0139	844	24		23-22-13	150, 152-164, 166-199, 275-299
	45		W0139	845	24		23-22-13	050-099, 151, 163, 165
	45	UNUSED						150, 152-162, 164, 166-199, 275-299
	46		W0139	846	24		23-22-13	050-099, 151, 163, 165
	46	UNUSED						150, 152-162, 164, 166-199, 275-299
	47	UNUSED						050-099, 151, 163, 165
	47		W0139	847	24		23-22-13	150, 152-162, 164, 166-199, 275-299
	48		W0139	848	24		23-22-13	050-099, 151, 165, 275-299
	48	UNUSED						150, 152-164, 166-199
	49	UNUSED						050-099, 151, 163, 165
	49		W0139	849	24		23-22-13	150, 152-162, 164, 166-199, 275-299
	50	UNUSED						050-099, 151, 165
	50		W0139	850	24		23-22-13	150, 152-164, 166-199, 275-299

HOOKUP LIST

D280T132

91-21-51

Section D01400

Page 18

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01429		AE0324/ /		PLUG-E2-5 (continued)				ALL
	51		W0139	851	24		23-22-13	050-099, 151, 165, 275-299
	51	UNUSED						150, 152-164, 166-199
	52	UNUSED						050-099, 151, 163, 165
	52		W0139	852	24		23-22-13	150, 152-162, 164, 166-199, 275-299
	53		W0139	853	24		23-22-13	050-099, 151, 163, 165
	53	UNUSED						150, 152-162, 164, 166-199, 275-299
	54		W0139	854	24		23-22-13	050-099, 151, 165, 275-299
	54	UNUSED						150, 152-164, 166-199
	55		W0139	855	24		23-22-13	ALL
D01430		703/156/R 76		PLUG-R ENG SQUIB				050-099
D01430		654+126/156/R 76		PLUG-R ENG SQUIB				155-199, 275-299
	1		W0546	003R	20		26-21-11	050-099, 155-199, 275-299
	2		W0546	006R	20		26-21-11	050-099, 155-199, 275-299
	3		W0546	009R	20		26-21-11	050-099, 155-199, 275-299
	4	UNUSED						050-099, 155-199, 275-299
	5	UNUSED						050-099, 155-199, 275-299
D01431		P061-00/ /		PLUG-P61				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W0062	213B	24		23-41-11	ALL
	6		W0062	213R	24		23-41-11	ALL
	7		W0062	214R	24		23-41-11	ALL
	8		W0062	214B	24		23-41-11	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	DED		W0062	213Z			23-41-11	ALL
	DED		W0062	214Z			23-41-11	ALL
D01432		0715/156/R076		PLUG-R ENG SQUIB				050-099
D01432		654+138/156/R076		PLUG-R ENG SQUIB				155-199, 275-299
	1		W0548	003R	20		26-21-11	050-099, 155-199, 275-299
	2		W0548	006R	20		26-21-11	050-099, 155-199, 275-299
	3		W0548	009R	20		26-21-11	050-099, 155-199, 275-299
	4	UNUSED						050-099, 155-199, 275-299

HOOKUP LIST

D280T132

91-21-51

Section D01400

Page 19

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01432		0715/156/R076		PLUG-R ENG SQUIB (continued)				050-099
D01432		654+138/156/R076		PLUG-R ENG SQUIB (continued)				155-199, 275-299
	5	UNUSED						050-099, 155-199, 275-299
D01433		0265/169/R034		RCPT				ALL
	1	UNUSED						ALL
	2		W0045	212R	24		31-51-42	ALL
	3		W0045	725	24		31-51-42	ALL
	4		W0045	612	24		31-51-42	ALL
	5		W0045	722	24		31-51-42	ALL
	6		W0045	611	24		31-51-42	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9		W0045	795	24		31-51-42	ALL
	10		W0045	681	24		31-51-43	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13		W0045	682	24		31-51-43	ALL
	14		W0045	015	22		31-51-11	ALL
	15		W0045	088	22		31-51-12	ALL
	16	UNUSED						ALL
	17		W0045	014	24		31-51-11	ALL
	18		W0045	087	24		31-51-12	ALL
	19		W0045	178	24		31-51-21	ALL
	20		W0045	732	24		31-51-42	ALL
	21	UNUSED						ALL
	22		W0045	796	24		31-51-42	ALL
	23	UNUSED						ALL
	24		W0045	091	24		31-51-12	ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27		W0045	012	24		31-51-11	ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30		W0045	089	24		31-51-12	ALL
	31	UNUSED						ALL
	32		W0045	013	24		31-51-11	ALL
	33		W0045	090	24		31-51-12	ALL
	34		W0045	716	24		31-51-42	ALL
	35	UNUSED						ALL
	36		W0045	212B	24		31-51-42	ALL

HOOKUP LIST

D280T132

91-21-51

Section D01400

Page 20

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01433		0265/169/R034		RCPT (continued)				ALL
	37		W0045	717	24		31-51-42	ALL
	38		W0045	721	24		31-51-42	ALL
	39		W0045	718	24		31-51-42	ALL
	40		W0045	724	24		31-51-42	ALL
	41		W0045	683	22		31-51-43	ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	44		W0045	PA6			99-99-99	ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48		W0045	795	24		31-51-42	ALL
	49	UNUSED						ALL
	50		W0045	796	24		31-51-42	ALL
	51		W0045	011	24		31-51-11	ALL
	52		W0045	720	24		31-51-42	ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
	56	UNUSED						ALL
	57	UNUSED						ALL
	58	UNUSED						ALL
	59	UNUSED						ALL
	60	UNUSED						ALL
	61		W0045	PA6			99-99-99	ALL
	62	UNUSED						ALL
	63	UNUSED						ALL
	64	UNUSED						ALL
	65	UNUSED						ALL
	66	UNUSED						ALL
	DED		W0045	212Z			31-51-42	ALL
			W0045	012Z			31-51-11	ALL
			W0045	013Z			31-51-11	ALL
			W0045	014Z			31-51-11	ALL
			W0045	019	20		31-51-11	ALL
			W0045	089Z			31-51-12	ALL
			W0045	090Z			31-51-12	ALL
			W0045	091Z			31-51-12	ALL
			W0045	103	20		31-51-12	ALL

HOOKUP LIST

D280T132

91-21-51

Section D01400

Page 21

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01434		0714/168/R068		PLUG-PRESS SW				050-099
D01434		654+137/168/R068		PLUG-PRESS SW				155-199, 275-299
	1		W0548	001R	20		26-21-11	050-099, 155-199, 275-299
	2	UNUSED						050-099, 155-199, 275-299
	3		W0548	004R	20		26-21-11	050-099, 155-199, 275-299
	4		W0548	007R	20		26-21-11	050-099, 155-199, 275-299
	5	UNUSED						050-099, 155-199, 275-299
D01436		1821/200/R040		PLUG-SQUIB				ALL
	1		W1296	004R	20		26-22-21	ALL
	2	DK	W1296	005R	18		26-22-21	ALL
	3	DK	W1296	006R	18		26-22-21	ALL
	4	UNUSED						275-299
	5	UNUSED						275-299
D01438		1821/200/R040		PLUG-PRESSURE SW				ALL
	1		W1296	009R	20		26-22-21	ALL
	2	UNUSED						ALL
	3	DK	W1296	008R	18		26-22-21	ALL
	4	DK	W1296	007R	18		26-22-21	ALL
	5	UNUSED						ALL
D01440		662/150/R 69		PLUG-FWD SQUIB				050-099
D01440		0654+74/147/R069		PLUG-FWD SQUIB				155-199, 275-299
	1		W0640	002R	20		26-23-11	050-099
	1		W0646	002R	20		26-23-11	155-199, 275-299
	2		W0640	005R	20		26-23-11	050-099
	2		W0646	005R	20		26-23-11	155-199, 275-299
	3		W0640	008R	20		26-23-11	050-099
	3		W0646	008R	20		26-23-11	155-199, 275-299
D01441		331/131/R043		PLUG-COAX				ALL
	= A1		W1909	01CX			34-53-13	ALL
	= C1		W1909	01CO			34-53-13	ALL
D01442		668/150/R 69		PLUG-AFT SQUIB				050-099
D01442		0654+80/147/R069		PLUG-AFT SQUIB				155-199, 275-299
	1		W0640	003R	20		26-23-11	050-099
	1		W0646	003R	20		26-23-11	155-199, 275-299
	2		W0640	006R	20		26-23-11	050-099

HOOKUP LIST

D280T132

91-21-51

Section D01400

Page 22

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01442		668/150/R 69		PLUG-AFT SQUIB (continued)				050-099
D01442		0654+80/147/R069		PLUG-AFT SQUIB (continued)				155-199, 275-299
	2		W0646	006R	20		26-23-11	155-199, 275-299
	3		W0640	009R	20		26-23-11	050-099
	3		W0646	009R	20		26-23-11	155-199, 275-299
	4	UNUSED						050-099, 155-199, 275-299
	5	UNUSED						050-099, 155-199, 275-299
D01444		0351/173/L071		PLUG-				ALL
	1	UNUSED						ALL
	2		W0606	126	20		26-16-21	ALL
	3		W0606	125	20		26-16-21	ALL
	4		W0606	129	20		26-16-21	ALL
	5	UNUSED						ALL
D01445		P061-00/ /		RCPT-				ALL
	1		W0065	012	22		31-31-11	ALL
	2		W0065	011	22		31-31-11	ALL
	3	UNUSED						ALL
	4		W0065	201R	24		31-31-11	ALL
	5		W0065	201B	24		31-31-11	ALL
	6		W0065	202R	24		31-31-11	ALL
	7		W0065	202B	24		31-31-11	ALL
	8		W0065	214R	24		31-31-11	ALL
	9		W0065	214B	24		31-31-11	ALL
	10		W0065	007	20		31-31-11	ALL
	11		W0065	010	22		31-31-11	ALL
	12		W0065	203R	24		31-31-11	ALL
	13		W0065	203B	24		31-31-11	ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	DED		W0065	201Z			31-31-11	ALL
	DED		W0065	202Z			31-31-11	ALL
	DED		W0065	203Z			31-31-11	ALL
	DED		W0065	214Z			31-31-11	ALL
D01446		1406/158/L070		PLUG-				ALL
	1	UNUSED						ALL
	2		W0606	136	20		26-16-21	ALL
	3		W0606	135	20		26-16-21	ALL
	4		W0606	139	20		26-16-21	ALL

HOOKUP LIST

D280T132

91-21-51

Section D01400

Page 23

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01446		1406/158/L070		PLUG- (continued)				ALL
	5	UNUSED						ALL
D01447		P006-05/ /		RCPT-				ALL
	1		W1499	201R	24		22-41-13	ALL
	2		W1499	201B	24		22-41-13	ALL
	3		W1499	201Z			22-41-13	ALL
	4		W1499	004	24		22-41-13	ALL
	5		W1499	005	24		22-41-13	ALL
	6		W1499	006	24		22-41-13	ALL
	7		W1499	007	24		22-41-13	ALL
	8		W1499	008	24		22-41-13	ALL
	9		W1499	009	24		22-41-13	ALL
	10		W1499	010	24		22-41-13	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14		W1499	014	24		22-41-13	ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D01448		663/165/R 74		PLUG-PRESS SW				050-099
D01448		0654+84/152/R070		PLUG-PRESS SW				155-199, 275-299
	1		W0640	007R	20		26-23-11	050-099
	1		W0646	007R	20		26-23-11	155-199, 275-299
	2		W0640	001R	20		26-23-11	050-099
	2		W0646	001R	20		26-23-11	155-199, 275-299
	3		W0640	004R	20		26-23-11	050-099
	3		W0646	004R	20		26-23-11	155-199, 275-299
	4	UNUSED						050-099, 155-199, 275-299
	5	UNUSED						050-099, 155-199, 275-299

HOOKUP LIST

D280T132

91-21-51

Section D01400

Page 24

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01450		662/166/R 80		PLUG-FWD SQUIB				050-099
D01450		0654+52/146/R069		PLUG-FWD SQUIB				155-199, 275-299
	1		W0642	002R	20		26-23-12	050-099
	1		W0648	002R	20		26-23-12	155-199, 275-299
	2		W0642	005R	20		26-23-12	050-099
	2		W0648	005R	20		26-23-12	155-199, 275-299
	3		W0642	008R	20		26-23-12	050-099
	3		W0648	008R	20		26-23-12	155-199, 275-299
D01452		668/166/R 80		PLUG-AFT SQUIB				050-099
D01452		0654+58/147/R069		PLUG-AFT SQUIB				155-199, 275-299
	1		W0642	003R	20		26-23-12	050-099
	1		W0648	003R	20		26-23-12	155-199, 275-299
	2		W0642	006R	20		26-23-12	050-099
	2		W0648	006R	20		26-23-12	155-199, 275-299
	3		W0642	009R	20		26-23-12	050-099
	3		W0648	009R	20		26-23-12	155-199, 275-299
	4	UNUSED						050-099, 155-199, 275-299
	5	UNUSED						050-099, 155-199, 275-299
D01454		663/179/R 81		PLUG-PRESS SW.				050-099
D01454		0654+62/152/R070		PLUG-PRESS SW				155-199, 275-299
	1		W0642	007R	20		26-23-12	050-099
	1		W0648	007R	20		26-23-12	155-199, 275-299
	2		W0642	001R	20		26-23-12	050-099
	2		W0648	001R	20		26-23-12	155-199, 275-299
	3		W0642	004R	20		26-23-12	050-099
	3		W0648	004R	20		26-23-12	155-199, 275-299
	4	UNUSED						050-099, 155-199, 275-299
	5	UNUSED						050-099, 155-199, 275-299
D01456		0349/184/L067		PLUG-				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W0614	028R	24		26-16-11	ALL
	5		W0614	032R	20		26-16-11	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D01400

Page 25

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01456		0349/184/L067		PLUG- (continued)				ALL
	9		W0614	029R	20		26-16-11	ALL
	10		W0614	025R	20		26-16-11	ALL
	11		W0614	031R	24		26-16-11	ALL
	12		W0614	030R	24		26-16-11	ALL
D01458		1402/163/L071		PLUG-				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W0614	034R	24		26-16-11	ALL
	5		W0614	038R	20		26-16-11	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9		W0614	035R	20		26-16-11	ALL
	10		W0614	039R	20		26-16-11	ALL
	11		W0614	037R	24		26-16-11	ALL
	12		W0614	036R	24		26-16-11	ALL
D01460		0952/132/R017		PLUG-				ALL
	=1		W0612	032R	18		26-18-21	ALL
D01462		352/184/L067		PLUG-				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W0664	001R	24		26-16-11	ALL
	5		W0664	003R	20		26-16-11	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9		W0664	005R	20		26-16-11	ALL
	10		W0664	007R	20		26-16-11	ALL
	11		W0664	009R	24		26-16-11	ALL
	12		W0664	011R	24		26-16-11	ALL
D01464		1406/163/L071		PLUG-				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D01400

Page 26

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01464		1406/163/L071		PLUG- (continued)				ALL
	4		W0672	002R	24		26-16-11	ALL
	5		W0672	004R	20		26-16-11	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9		W0672	006R	20		26-16-11	ALL
	10		W0672	008R	20		26-16-11	ALL
	11		W0672	010R	24		26-16-11	ALL
	12		W0672	012R	24		26-16-11	ALL
D01466		0298/293/L021		PLUG-				ALL
	1		W1224	002	22		52-11-11	ALL
	2		W1224	001	22		52-11-11	ALL
	3		W1224	003	22		52-11-11	ALL
	4		W1224	004	20		52-11-11	ALL
	5		W1224	005	20		52-11-11	ALL
D01468		1139/122/L029		RCPT-				050-099
D01468		1142/122/L029		RCPT-				150-199, 275-299
	1		W0710	011	20		25-53-24	ALL
	2		W0710	012	20		25-53-24	ALL
	3		W0710	013	20		25-53-24	ALL
	4		W0710	311B	20		25-53-22	ALL
	5	DK	W0710	015	18		25-53-22	ALL
	6		W0710	016	20		25-53-24	ALL
	7		W0710	311R	20		25-53-22	ALL
	8		W0710	018	20		25-53-22	ALL
	9		W0710	019	20		25-53-22	ALL
	10		W0710	311Y	20		25-53-22	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D01469		P010-00/ /		RCPT-				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W5150	202	22		33-16-18	ALL
	4		W5150	201	22		33-16-18	ALL
	5		W5150	203	22		76-11-11	ALL
	6		W5150	204	22		26-11-11	ALL
	7		W5150	205	22		76-11-11	ALL

HOOKUP LIST
D280T132

91-21-51
Section D01400
Page 27
Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01469		P010-00/ /		RCPT- (continued)				ALL
	8		W5150	206	22		SPARE	050-099, 275-299
	8	UNUSED						150-199
	9		W5150	207	22		76-11-11	ALL
	10		W5150	208	22		73-21-11	ALL
	11		W5150	209	22		28-22-21	ALL
	12		W5150	210	22		28-22-21	ALL
	13		W5150	211	22		28-22-21	ALL
	14		W5150	212	22		28-22-21	ALL
	15		W5150	213	20		28-22-21	ALL
	16		W5150	220	22		SPARE	050-099, 150-154, 275-299
	16		W5150	220	22		73-21-11	155-199
	17	UNUSED						050-099, 275-299
	17		W5150	214	22		SPARE	150-199
	18		W5150	215	20		SPARE	050-099, 150-154, 275-299
	18		W5150	215	20		73-21-11	155-199
	19	UNUSED						050-099, 275-299
	19		W5150	221	22		75-24-11	150-157
	19		W5150	221	22		SPARE	162-199
	20	UNUSED						050-099, 275-299
	20		W5150	222	22		75-24-11	150-157
	20		W5150	222	22		SPARE	162-199
	21		W5150	223	22		SPARE	050-099, 150-154, 275-299
	21		W5150	223	22		73-21-11	155-199
	22		W5150	224	22		SPARE	050-099, 150-154, 275-299
	22		W5150	224	22		73-21-11	155-199
	23		W5150	219	22		28-22-21	ALL
	24		W5150	200	22		76-11-11	ALL
	25		W5150	217	20		27-41-11	ALL
	26		W5150	216	20		27-41-11	ALL
	27		W5150	218	20		27-41-11	ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30		W5150	227	22		73-21-11	ALL
	31		W5150	228	22		73-21-11	ALL
D01470		1139/122/R029		RCPT-				050-099
D01470		1142/122/R029		RCPT-				150-199, 275-299
	1		W0710	111	20		25-53-24	ALL
	2		W0710	112	20		25-53-24	ALL
	3		W0710	113	20		25-53-24	ALL

HOOKUP LIST

D280T132

91-21-51

Section D01400

Page 28

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01470		1139/122/R029		RCPT- (continued)				050-099
D01470		1142/122/R029		RCPT- (continued)				150-199, 275-299
	4		W0710	321B	20		25-53-22	ALL
	5	DK	W0710	115	18		25-53-22	ALL
	6		W0710	116	20		25-53-24	ALL
	7		W0710	321R	20		25-53-22	ALL
	8		W0710	118	20		25-53-22	ALL
	9		W0710	119	20		25-53-22	ALL
	10		W0710	321Y	20		25-53-22	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D01471		P010-00/ /		RCPT-				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W5150	251	22		33-16-18	ALL
	4		W5150	252	22		33-16-18	ALL
	5		W5150	253	22		76-11-11	ALL
	6		W5150	254	22		26-11-21	ALL
	7		W5150	255	22		76-11-11	ALL
	8		W5150	256	22		SPARE	050-099, 275-299
	8	UNUSED						150-199
	9		W5150	257	22		76-11-11	ALL
	10		W5150	258	22		73-21-11	ALL
	11		W5150	259	22		28-22-21	ALL
	12		W5150	260	22		28-22-21	ALL
	13		W5150	261	22		28-22-21	ALL
	14		W5150	262	22		28-22-21	ALL
	15		W5150	263	20		28-22-21	ALL
	16		W5150	268	22		SPARE	050-099, 150-199
	16	UNUSED						275-299
	17	UNUSED						050-099, 275-299
	17		W5150	264	22		SPARE	150-199
	18	UNUSED						050-099, 275-299
	18		W5150	265	22		SPARE	150-199
	19	UNUSED						050-099, 275-299
	19		W5150	269	22		75-24-11	150-157
	19		W5150	269	22		SPARE	162-199
	20	UNUSED						050-099, 275-299
	20		W5150	270	22		75-24-11	150-157
	20		W5150	270	22		SPARE	162-199

HOOKUP LIST

D280T132

91-21-51

Section D01400

Page 29

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01471		P010-00/ /		RCPT- (continued)				ALL
	21		W5150	272	22		SPARE	050-099, 150-154, 275-299
	21		W5150	272	22		73-21-11	155-199
	22		W5150	271	22		SPARE	ALL
	23		W5150	273	20		27-41-21	ALL
	24		W5150	266	20		27-41-21	ALL
	25		W5150	274	20		27-41-21	ALL
	26		W5150	250	22		76-11-11	ALL
	27		W5150	267	22		28-22-21	ALL
	28		W5150	433	22		78-36-11	ALL
	29	UNUSED						ALL
	30		W5150	277	22		73-21-11	ALL
	31		W5150	278	22		73-21-11	ALL
D01472		1183/122/L029		RCPT-				050-099
D01472		1187/122/L029		RCPT-				150-199, 275-299
	1		W0710	021	20		25-53-24	ALL
	2		W0710	022	20		25-53-24	ALL
	3		W0710	023	20		25-53-24	ALL
	4		W0710	312B	20		25-53-22	050-099
	4		W0710	322B	20		25-53-22	150-199, 275-299
	5	DK	W0710	025	18		25-53-22	050-099
	5	DK	W0710	125	18		25-53-22	150-199, 275-299
	6		W0710	026	20		25-53-24	ALL
	7		W0710	312R	20		25-53-22	050-099
	7		W0710	322R	20		25-53-22	150-199, 275-299
	8		W0710	028	20		25-53-22	050-099
	8		W0710	128	20		25-53-22	150-199, 275-299
	9		W0710	029	20		25-53-22	050-099
	9		W0710	129	20		25-53-22	150-199, 275-299
	10		W0710	312Y	20		25-53-22	050-099
	10		W0710	322Y	20		25-53-22	150-199, 275-299
	11	UNUSED						ALL
	12	UNUSED						ALL
D01473		P010-00/ /		RCPT-				ALL
	1		W5150	303	22		22-12-21	ALL
	2		W5150	302	22		22-12-21	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W5150	301	22		22-12-21	ALL

HOOKUP LIST

D280T132

91-21-51

Section D01400

Page 30

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01473		P010-00/ /		RCPT- (continued)				ALL
	6		W5150	303	22		22-12-21	ALL
	7		W5150	304	22		78-34-21	ALL
	8		W5150	305	22		78-34-21	ALL
	9		W5150	300	22		78-34-21	ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D01474		1183/122/R029		RCPT-				050-099
D01474		1187/122/R029		RCPT-				150-199, 275-299
	1		W0710	121	20		25-53-24	ALL
	2		W0710	122	20		25-53-24	ALL
	3		W0710	123	20		25-53-24	ALL
	4		W0710	322B	20		25-53-22	050-099
	4		W0710	312B	20		25-53-22	150-199, 275-299
	5	DK	W0710	125	18		25-53-22	050-099
	5	DK	W0710	025	18		25-53-22	150-199, 275-299
	6		W0710	126	20		25-53-24	ALL
	7		W0710	322R	20		25-53-22	050-099
	7		W0710	312R	20		25-53-22	150-199, 275-299
	8		W0710	128	20		25-53-22	050-099
	8		W0710	028	20		25-53-22	150-199, 275-299
	9		W0710	129	20		25-53-22	050-099
	9		W0710	029	20		25-53-22	150-199, 275-299
	10		W0710	322Y	20		25-53-22	050-099
	10		W0710	312Y	20		25-53-22	150-199, 275-299
	11	UNUSED						ALL
	12	UNUSED						ALL
D01475		P010-00/ /		RCPT-				ALL
	1		W5150	311	22		22-12-31	ALL
	2		W5150	310	22		22-12-31	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W5150	312	22		22-12-31	ALL
	6		W5150	311	22		22-12-31	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D01400
Page 31
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01475		P010-00/ /		RCPT- (continued)				ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D01476		1227/122/L029		RCPT-				050-099
D01476		1197+33/122/L029		RCPT-				150-199, 275-299
	1		W0710	031	20		25-53-24	ALL
	2		W0710	032	20		25-53-24	ALL
	3		W0710	033	20		25-53-24	ALL
	4		W0710	313B	20		25-53-22	050-099
	4		W0710	315B	20		25-53-22	150-199, 275-299
	5	DK	W0710	035	18		25-53-22	050-099
	5	DK	W0710	055	18		25-53-22	150-199, 275-299
	6		W0710	036	20		25-53-24	ALL
	7		W0710	313R	20		25-53-22	050-099
	7		W0710	315R	20		25-53-22	150-199, 275-299
	8		W0710	038	20		25-53-22	050-099
	8		W0710	058	20		25-53-22	150-199, 275-299
	9		W0710	039	20		25-53-22	050-099
	9		W0710	059	20		25-53-22	150-199, 275-299
	10		W0710	313Y	20		25-53-22	050-099
	10		W0710	315Y	20		25-53-22	150-199, 275-299
	11	UNUSED						ALL
	12	UNUSED						ALL
D01477		P010-00/ /		RCPT-				ALL
	1		W5150	323	22		22-32-15	ALL
	2		W5150	334	22		22-32-15	ALL
	3		W5150	332	22		22-12-11	ALL
	4		W5150	331	22		22-12-11	ALL
	5		W5150	333	22		22-12-11	ALL
	6		W5150	334	22		22-32-15	ALL
	7		W5150	330	22		22-32-15	ALL
	8		W5150	320	22		78-34-11	ALL
	9		W5150	321	22		78-34-11	ALL
	10		W5150	322	22		78-34-11	ALL
	11		W5150	324	22		22-32-15	ALL
	12		W5150	327	22		22-32-15	ALL
	13		W5150	326	22		22-32-15	ALL
	14		W5150	329	22		22-32-15	ALL
	15		W5150	332	22		22-12-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D01400

Page 32

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01478		1227/122/R029		RCPT-				050-099
D01478		1197+33/122/R029		RCPT-				150-199, 275-299
	1		W0710	131	20		25-53-24	ALL
	2		W0710	132	20		25-53-24	ALL
	3		W0710	133	20		25-53-24	ALL
	4		W0710	323B	20		25-53-22	ALL
	5	DK	W0710	135	18		25-53-22	ALL
	6		W0710	136	20		25-53-24	ALL
	7		W0710	323R	20		25-53-22	ALL
	8		W0710	138	20		25-53-22	ALL
	9		W0710	139	20		25-53-22	ALL
	10		W0710	323Y	20		25-53-22	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D01479		P010-00/ /		RCPT-				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W5150	355	22		27-62-11	ALL
	4		W5150	354	20		27-62-11	ALL
	5	UNUSED						ALL
	6		W5150	352	20		27-62-11	ALL
	7	UNUSED						ALL
	8		W5150	353	20		27-62-11	ALL
	9	UNUSED						ALL
	10		W5150	351	20		27-62-11	ALL
	11	UNUSED						ALL
	12		W5150	350	20		27-62-11	ALL
D01480		1266/122/L029		RCPT-				050-099
D01480		1197+77/122/L029		RCPT-				150-199, 275-299
	1		W0710	041	20		25-53-24	ALL
	2		W0710	042	20		25-53-24	ALL
	3		W0710	043	20		25-53-24	ALL
	4		W0710	314B	20		25-53-22	050-099
	4		W0710	331B	20		25-53-22	150-199, 275-299
	5	DK	W0710	045	18		25-53-22	050-099
	5	DK	W0710	127	18		25-53-22	150-199, 275-299
	6		W0710	046	20		25-53-24	ALL
	7		W0710	314R	20		25-53-22	050-099
	7		W0710	331R	20		25-53-22	150-199, 275-299

HOOKUP LIST

D280T132

91-21-51

Section D01400

Page 33

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01480		1266/122/L029		RCPT- (continued)				050-099
D01480		1197+77/122/L029		RCPT- (continued)				150-199, 275-299
	8		W0710	048	20		25-53-22	050-099
	8		W0710	130	20		25-53-22	150-199, 275-299
	9		W0710	049	20		25-53-22	050-099
	9		W0710	134	20		25-53-22	150-199, 275-299
	10		W0710	314Y	20		25-53-22	050-099
	10		W0710	331Y	20		25-53-22	150-199, 275-299
	11	UNUSED						ALL
	12	UNUSED						ALL
D01482		1266/122/R029		RCPT-				050-099
D01482		1197+77/122/R029		RCPT-				150-199, 275-299
	1		W0710	141	20		25-53-24	ALL
	2		W0710	142	20		25-53-24	ALL
	3		W0710	143	20		25-53-24	ALL
	4		W0710	324B	20		25-53-22	050-099
	4		W0710	334B	20		25-53-22	150-199, 275-299
	5	DK	W0710	145	18		25-53-22	050-099
	5	DK	W0710	101	18		25-53-22	150-199, 275-299
	6		W0710	146	20		25-53-24	ALL
	7		W0710	324R	20		25-53-22	050-099
	7		W0710	334R	20		25-53-22	150-199, 275-299
	8		W0710	148	20		25-53-22	050-099
	8		W0710	102	20		25-53-22	150-199, 275-299
	9		W0710	149	20		25-53-22	050-099
	9		W0710	104	20		25-53-22	150-199, 275-299
	10		W0710	324Y	20		25-53-22	050-099
	10		W0710	334Y	20		25-53-22	150-199, 275-299
	11	UNUSED						ALL
	12	UNUSED						ALL
D01484		1294/122/L029		RCPT-				050-099
D01484		1197+121/122/L029		RCPT-				150-199, 275-299
	1		W0710	051	20		25-53-24	050-099
	1		W0710	507	20		25-53-24	150-199, 275-299
	2		W0710	052	20		25-53-24	050-099
	2		W0710	508	20		25-53-24	150-199, 275-299
	3		W0710	053	20		25-53-24	050-099
	3		W0710	510	20		25-53-24	150-199, 275-299
	4		W0710	315B	20		25-53-22	050-099

HOOKUP LIST

D280T132

91-21-51

Section D01400

Page 34

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01484		1294/122/L029		RCPT- (continued)				050-099
D01484		1197+121/122/L029		RCPT- (continued)				150-199, 275-299
	4		W0710	316B	20		25-53-22	150-199, 275-299
	5	DK	W0710	055	18		25-53-22	050-099
	5	DK	W0710	065	18		25-53-22	150-199, 275-299
	6		W0710	056	20		25-53-24	050-099
	6		W0710	509	20		25-53-24	150-199, 275-299
	7		W0710	315R	20		25-53-22	050-099
	7		W0710	316R	20		25-53-22	150-199, 275-299
	8		W0710	058	20		25-53-22	050-099
	8		W0710	068	20		25-53-22	150-199, 275-299
	9		W0710	059	20		25-53-22	050-099
	9		W0710	069	20		25-53-22	150-199, 275-299
	10		W0710	315Y	20		25-53-22	050-099
	10		W0710	316Y	20		25-53-22	150-199, 275-299
	11	UNUSED						ALL
	12	UNUSED						ALL
D01486		1294/122/R029		RCPT-				050-099
D01486		1197+121/122/R029		RCPT-				150-199, 275-299
	1		W0710	151	20		25-53-24	050-099
	1		W0710	513	20		25-53-24	150-199, 275-299
	2		W0710	152	20		25-53-24	050-099
	2		W0710	514	20		25-53-24	150-199, 275-299
	3		W0710	153	20		25-53-24	050-099
	3		W0710	516	20		25-53-24	150-199, 275-299
	4		W0710	325B	20		25-53-22	050-099
	4		W0710	326B	20		25-53-22	150-199, 275-299
	5	DK	W0710	155	18		25-53-22	050-099
	5	DK	W0710	165	18		25-53-22	150-199, 275-299
	6		W0710	156	20		25-53-24	050-099
	6		W0710	515	20		25-53-24	150-199, 275-299
	7		W0710	325R	20		25-53-22	050-099
	7		W0710	326R	20		25-53-22	150-199, 275-299
	8		W0710	158	20		25-53-22	050-099
	8		W0710	168	20		25-53-22	150-199, 275-299
	9		W0710	159	20		25-53-22	050-099
	9		W0710	169	20		25-53-22	150-199, 275-299
	10		W0710	325Y	20		25-53-22	050-099
	10		W0710	326Y	20		25-53-22	150-199, 275-299
	11	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D01400

Page 35

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01486		1294/122/R029		RCPT- (continued)				050-099
D01486		1197+121/122/R029		RCPT- (continued)				150-199, 275-299
	12	UNUSED						ALL
D01487		0265/180/R034		RCPT-				ALL
	1		W0045	755	24		31-51-31	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8		W0045	PA8			99-99-99	ALL
	9		W0045	625	24		31-51-31	ALL
	10		W0045	749	24		31-51-31	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13		W0045	751	24		31-51-31	ALL
	14		W0045	066	22		31-51-11	ALL
	15		W0045	137	22		31-51-12	ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19		W0045	750	24		31-51-31	ALL
	20		W0045	628	22		31-51-31	ALL
	21		W0045	630	22		31-51-31	ALL
	22		W0045	758	24		31-51-31	ALL
	23		W0045	215R	24		31-51-31	ALL
	24		W0045	215B	24		31-51-31	ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27		W0045	064	24		31-51-11	ALL
	28		W0045	241R	24		31-51-31	ALL
	29	UNUSED						ALL
	30		W0045	135	24		31-51-12	ALL
	31	UNUSED						ALL
	32		W0045	065	24		31-51-11	ALL
	33		W0045	136	24		31-51-12	ALL
	34		W0045	760	24		31-51-31	ALL
	35	UNUSED						ALL
	36	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D01400

Page 36

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01487		0265/180/R034		RCPT- (continued)				ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45		W0045	063	24		31-51-11	ALL
	46		W0045	747	24		31-51-31	ALL
	47		W0045	752	24		31-51-31	ALL
	48	UNUSED						ALL
	49		W0045	757	24		31-51-31	ALL
	50		W0045	756	24		31-51-31	ALL
	51		W0045	753	24		31-51-31	ALL
	52		W0045	614	24		31-51-31	ALL
	53		W0045	629	22		31-51-31	ALL
	54	UNUSED						ALL
	55		W0045	759	24		31-51-31	ALL
	56		W0045	123	24		31-51-12	ALL
	57		W0045	PA8			99-99-99	ALL
	58	UNUSED						ALL
	59	UNUSED						ALL
	60		W0045	241B	24		31-51-31	ALL
	61	UNUSED						ALL
	62		W0045	272R	24		31-51-31	ALL
	63		W0045	272B	24		31-51-31	ALL
	64	UNUSED						ALL
	65	UNUSED						ALL
	66		W0045	761	24		31-51-31	ALL
	DED		W0045	755Z			31-51-31	ALL
			W0045	064Z			31-51-11	ALL
			W0045	065Z			31-51-11	ALL
			W0045	075	20		31-51-11	ALL
			W0045	110	20		31-51-12	ALL
			W0045	135Z			31-51-12	ALL
			W0045	136Z			31-51-12	ALL

HOOKUP LIST

D280T132

91-21-51

Section D01400

Page 37

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01488		1308/122/L029		RCPT-				050-099
D01488		1230/122/L029		RCPT-				150-199, 275-299
	1		W0710	061	20		25-53-24	050-099
	1		W0710	187	20		25-53-24	150-199, 275-299
	2		W0710	062	20		25-53-24	050-099
	2		W0710	190	20		25-53-24	150-199, 275-299
	3		W0710	063	20		25-53-24	050-099
	3		W0710	197	20		25-53-24	150-199, 275-299
	4		W0710	316B	20		25-53-22	050-099
	4		W0710	324B	20		25-53-22	150-199, 275-299
	5	DK	W0710	065	18		25-53-22	050-099
	5	DK	W0710	145	18		25-53-22	150-199, 275-299
	6		W0710	066	20		25-53-24	050-099
	6		W0710	194	20		25-53-24	150-199, 275-299
	7		W0710	316R	20		25-53-22	050-099
	7		W0710	324R	20		25-53-22	150-199, 275-299
	8		W0710	068	20		25-53-22	050-099
	8		W0710	148	20		25-53-22	150-199, 275-299
	9		W0710	069	20		25-53-22	050-099
	9		W0710	149	20		25-53-22	150-199, 275-299
	10		W0710	316Y	20		25-53-22	050-099
	10		W0710	324Y	20		25-53-22	150-199, 275-299
	11	UNUSED						ALL
	12	UNUSED						ALL
D01489		0265/180/R034		RCPT				ALL
	1		W0045	787	24		31-51-33	ALL
	2		W0045	622	24		31-51-33	ALL
	3		W0045	786	24		31-51-33	ALL
	4		W0045	784	24		31-51-33	ALL
	5	UNUSED						ALL
	6		W0045	788	24		31-51-33	ALL
	7		W0045	791	24		31-51-33	ALL
	8		W0045	777	24		31-51-33	ALL
	9		W0045	201R	24		31-51-33	ALL
	10	UNUSED						ALL
	11		W0045	221R	24		31-51-33	ALL
	12		W0045	209R	24		31-51-33	ALL
	13		W0045	773	24		31-51-32	ALL
	14		W0045	070	22		31-51-11	ALL
	15		W0045	141	22		31-51-12	ALL

HOOKUP LIST

D280T132

91-21-51

Section D01400

Page 38

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01489		0265/180/R034		RCPT (continued)				ALL
	16		W0045	062	24		31-51-11	ALL
	17		W0045	069	24		31-51-11	ALL
	18		W0045	782	24		31-51-33	ALL
	19	UNUSED						ALL
	20		W0045	743	24		31-51-33	ALL
	21		W0045	790	24		31-51-33	ALL
	22		W0045	782	24		31-51-33	ALL
	23		W0045	758	24		31-51-31	ALL
	24		W0045	140	24		31-51-12	ALL
	25		W0045	774	24		31-51-32	ALL
	26	UNUSED						ALL
	27		W0045	067	24		31-51-11	ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30		W0045	138	24		31-51-12	ALL
	31		W0045	781	24		31-51-33	ALL
	32		W0045	068	24		31-51-11	ALL
	33		W0045	139	24		31-51-12	ALL
	34	UNUSED						ALL
	35		W0045	779	24		31-51-33	ALL
	36		W0045	623	24		31-51-33	ALL
	37		W0045	785	24		31-51-33	ALL
	38		W0045	783	24		31-51-33	ALL
	39	UNUSED						ALL
	40		W0045	792	24		31-51-33	ALL
	41		W0045	789	24		31-51-33	ALL
	42		W0045	776	24		31-51-33	ALL
	43		W0045	201B	24		31-51-33	ALL
	44	UNUSED						ALL
	45		W0045	221B	24		31-51-33	ALL
	46		W0045	209B	24		31-51-33	ALL
	47		W0045	759	24		31-51-31	ALL
	48		W0045	781	24		31-51-33	ALL
	49	UNUSED						ALL
	50		W0045	134	24		31-51-12	ALL
	51		W0045	760	24		31-51-31	ALL
	52	UNUSED						ALL
	53		W0045	780	24		31-51-33	ALL
	54		W0045	772	24		31-51-32	ALL
	55	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D01400

Page 39

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01489		0265/180/R034		RCPT (continued)				ALL
	56		W0045	PA9			99-99-99	ALL
	57		W0045	761	24		31-51-31	ALL
	58		W0045	775	24		31-51-32	ALL
	59	UNUSED						ALL
	60	UNUSED						ALL
	61	UNUSED						ALL
	62	UNUSED						ALL
	63	UNUSED						ALL
	64	UNUSED						ALL
	65		W0045	PA9			99-99-99	ALL
	66	UNUSED						ALL
	DED		W0045	201Z			31-51-33	ALL
	DED		W0045	209Z			31-51-33	ALL
	DED		W0045	221Z			31-51-33	ALL
			W0045	067Z			31-51-11	ALL
			W0045	068Z			31-51-11	ALL
			W0045	069Z			31-51-11	ALL
			W0045	076	20		31-51-11	ALL
			W0045	111	20		31-51-12	ALL
			W0045	138Z			31-51-12	ALL
			W0045	139Z			31-51-12	ALL
			W0045	140Z			31-51-12	ALL
D01490		1308/122/R009		RCPT-				050-099
	1		W0710	661	20		25-53-24	050-099
	2		W0710	662	20		25-53-24	050-099
	3		W0710	663	20		25-53-24	050-099
	4		W0710	336B	20		25-53-22	050-099
	5	DK	W0710	665	18		25-53-22	050-099
	6		W0710	666	20		25-53-24	050-099
	7		W0710	336R	20		25-53-22	050-099
	8		W0710	668	20		25-53-22	050-099
	9		W0710	669	20		25-53-22	050-099
	10		W0710	336Y	20		25-53-22	050-099
	11	UNUSED						050-099
	12	UNUSED						050-099
D01492		1308/122/R029		RCPT-				050-099
D01492		1230/122/R029		RCPT-				150-199, 275-299
	1		W0710	161	20		25-53-24	050-099

HOOKUP LIST
D280T132

91-21-51
Section D01400
Page 40
Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01492		1308/122/R029		RCPT- (continued)				050-099
D01492		1230/122/R029		RCPT- (continued)				150-199, 275-299
	1		W0710	154	20		25-53-24	150-199, 275-299
	2		W0710	162	20		25-53-24	050-099
	2		W0710	157	20		25-53-24	150-199, 275-299
	3		W0710	163	20		25-53-24	050-099
	3		W0710	164	20		25-53-24	150-199, 275-299
	4		W0710	326B	20		25-53-22	050-099
	4		W0710	303B	20		25-53-22	150-199, 275-299
	5	DK	W0710	165	18		25-53-22	050-099
	5	DK	W0710	045	18		25-53-22	150-199, 275-299
	6		W0710	166	20		25-53-24	050-099
	6		W0710	160	20		25-53-24	150-199, 275-299
	7		W0710	326R	20		25-53-22	050-099
	7		W0710	303R	20		25-53-22	150-199, 275-299
	8		W0710	168	20		25-53-22	050-099
	8		W0710	048	20		25-53-22	150-199, 275-299
	9		W0710	169	20		25-53-22	050-099
	9		W0710	049	20		25-53-22	150-199, 275-299
	10		W0710	326Y	20		25-53-22	050-099
	10		W0710	303Y	20		25-53-22	150-199, 275-299
	11	UNUSED						ALL
	12	UNUSED						ALL
D01494		1322/122/L029		RCPT-				050-099
D01494		1266/122/L029		RCPT-				150-199, 275-299
	1		W0710	071	20		25-53-24	050-099
	1		W0710	501	20		25-53-24	150-199, 275-299
	2		W0710	072	20		25-53-24	050-099
	2		W0710	502	20		25-53-24	150-199, 275-299
	3		W0710	073	20		25-53-24	050-099
	3		W0710	504	20		25-53-24	150-199, 275-299
	4		W0710	317B	20		25-53-22	ALL
	5	DK	W0710	075	18		25-53-22	ALL
	6		W0710	076	20		25-53-24	050-099
	6		W0710	503	20		25-53-24	150-199, 275-299
	7		W0710	317R	20		25-53-22	ALL
	8		W0710	078	20		25-53-22	ALL
	9		W0710	079	20		25-53-22	ALL
	10		W0710	317Y	20		25-53-22	ALL
	11	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D01400

Page 41

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01494		1322/122/L029		RCPT- (continued)				050-099
D01494		1266/122/L029		RCPT- (continued)				150-199, 275-299
	12	UNUSED						ALL
D01496		1322/122/R029		RCPT-				050-099
D01496		1266/122/R029		RCPT-				150-199, 275-299
	1		W0710	171	20		25-53-24	050-099
	1		W0710	167	20		25-53-24	150-199, 275-299
	2		W0710	172	20		25-53-24	050-099
	2		W0710	170	20		25-53-24	150-199, 275-299
	3		W0710	173	20		25-53-24	050-099
	3		W0710	177	20		25-53-24	150-199, 275-299
	4		W0710	327B	20		25-53-22	050-099
	4		W0710	325B	20		25-53-22	150-199, 275-299
	5	DK	W0710	175	18		25-53-22	050-099
	5	DK	W0710	155	18		25-53-22	150-199, 275-299
	6		W0710	176	20		25-53-24	050-099
	6		W0710	174	20		25-53-24	150-199, 275-299
	7		W0710	327R	20		25-53-22	050-099
	7		W0710	325R	20		25-53-22	150-199, 275-299
	8		W0710	178	20		25-53-22	050-099
	8		W0710	158	20		25-53-22	150-199, 275-299
	9		W0710	179	20		25-53-22	050-099
	9		W0710	159	20		25-53-22	150-199, 275-299
	10		W0710	327Y	20		25-53-22	050-099
	10		W0710	325Y	20		25-53-22	150-199, 275-299
	11	UNUSED						ALL
	12	UNUSED						ALL
D01498		1350/122/L029		RCPT-				050-099
D01498		1294/122/L029		RCPT-				150-199, 275-299
	1		W0710	081	20		25-53-24	050-099
	1		W0710	051	20		25-53-24	150-199, 275-299
	2		W0710	082	20		25-53-24	050-099
	2		W0710	052	20		25-53-24	150-199, 275-299
	3		W0710	083	20		25-53-24	050-099
	3		W0710	053	20		25-53-24	150-199, 275-299
	4		W0710	318B	20		25-53-22	050-099
	4		W0710	332B	20		25-53-22	150-199, 275-299
	5	DK	W0710	085	18		25-53-22	050-099
	5	DK	W0710	137	18		25-53-22	150-199, 275-299

HOOKUP LIST

D280T132

91-21-51

Section D01400

Page 42

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01498		1350/122/L029		RCPT- (continued)				050-099
D01498		1294/122/L029		RCPT- (continued)				150-199, 275-299
	6		W0710	086	20		25-53-24	050-099
	6		W0710	056	20		25-53-24	150-199, 275-299
	7		W0710	318R	20		25-53-22	050-099
	7		W0710	332R	20		25-53-22	150-199, 275-299
	8		W0710	088	20		25-53-22	050-099
	8		W0710	140	20		25-53-22	150-199, 275-299
	9		W0710	089	20		25-53-22	050-099
	9		W0710	144	20		25-53-22	150-199, 275-299
	10		W0710	318Y	20		25-53-22	050-099
	10		W0710	332Y	20		25-53-22	150-199, 275-299
	11	UNUSED						ALL
	12	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D01400
Page 43 End
Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01500		1350/122/R029		RCPT-				050-099
D01500		1294/122/R029		RCPT-				150-199, 275-299
	1		W0710	181	20		25-53-24	050-099
	1		W0710	151	20		25-53-24	150-199, 275-299
	2		W0710	182	20		25-53-24	050-099
	2		W0710	152	20		25-53-24	150-199, 275-299
	3		W0710	183	20		25-53-24	050-099
	3		W0710	153	20		25-53-24	150-199, 275-299
	4		W0710	328B	20		25-53-22	050-099
	4		W0710	330B	20		25-53-22	150-199, 275-299
	5	DK	W0710	185	18		25-53-22	050-099
	5	DK	W0710	108	18		25-53-22	150-199, 275-299
	6		W0710	186	20		25-53-24	050-099
	6		W0710	156	20		25-53-24	150-199, 275-299
	7		W0710	328R	20		25-53-22	050-099
	7		W0710	330R	20		25-53-22	150-199, 275-299
	8		W0710	188	20		25-53-22	050-099
	8		W0710	109	20		25-53-22	150-199, 275-299
	9		W0710	189	20		25-53-22	050-099
	9		W0710	110	20		25-53-22	150-199, 275-299
	10		W0710	328Y	20		25-53-22	050-099
	10		W0710	330Y	20		25-53-22	150-199, 275-299
	11	UNUSED						ALL
	12	UNUSED						ALL
D01502		1384/122/L029		RCPT-				050-099
D01502		1308/122/L020		RCPT-				150-199, 275-299
	1		W0710	091	20		25-53-24	050-099
	1		W0710	061	20		25-53-24	150-199, 275-299
	2		W0710	092	20		25-53-24	050-099
	2		W0710	062	20		25-53-24	150-199, 275-299
	3		W0710	093	20		25-53-24	050-099
	3		W0710	063	20		25-53-24	150-199, 275-299
	4		W0710	319B	20		25-53-22	ALL
	5	DK	W0710	095	18		25-53-22	ALL
	6		W0710	096	20		25-53-24	050-099
	6		W0710	066	20		25-53-24	150-199, 275-299
	7		W0710	319R	20		25-53-22	ALL
	8		W0710	098	20		25-53-22	ALL
	9		W0710	099	20		25-53-22	ALL
	10		W0710	319Y	20		25-53-22	ALL

HOOKUP LIST

D280T132

91-21-51

Section D01500

Page 1

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01502		1384/122/L029		RCPT- (continued)				050-099
D01502		1308/122/L020		RCPT- (continued)				150-199, 275-299
	11	UNUSED						ALL
	12	UNUSED						ALL
D01503		0265/150/R034		SOCKET-				ALL
	A1		W0045	688	24		27-32-22	ALL
	A2		W0045	025	24		31-51-11	ALL
	A3		W0045	026	20		31-51-11	ALL
	B1	UNUSED						ALL
	B2	UNUSED						ALL
	B3	UNUSED						ALL
	X1		W0045	028	24		31-51-11	ALL
	X2		W0045	027	22		31-51-11	ALL
			W0045	021	20		31-51-11	ALL
			W0045	027Z			31-51-11	ALL
			W0045	028Z			31-51-11	ALL
D01504		1384/122/R029		RCPT-				050-099
D01504		1308/122/R029		RCPT-				150-199, 275-299
	1		W0710	191	20		25-53-24	050-099
	1		W0710	161	20		25-53-24	150-199, 275-299
	2		W0710	192	20		25-53-24	050-099
	2		W0710	162	20		25-53-24	150-199, 275-299
	3		W0710	193	20		25-53-24	050-099
	3		W0710	163	20		25-53-24	150-199, 275-299
	4		W0710	329B	20		25-53-22	050-099
	4		W0710	336B	20		25-53-22	150-199, 275-299
	5	DK	W0710	195	18		25-53-22	050-099
	5	DK	W0710	665	18		25-53-22	150-199, 275-299
	6		W0710	196	20		25-53-24	050-099
	6		W0710	166	20		25-53-24	150-199, 275-299
	7		W0710	329R	20		25-53-22	050-099
	7		W0710	336R	20		25-53-22	150-199, 275-299
	8		W0710	198	20		25-53-22	050-099
	8		W0710	668	20		25-53-22	150-199, 275-299
	9		W0710	199	20		25-53-22	050-099
	9		W0710	669	20		25-53-22	150-199, 275-299
	10		W0710	329Y	20		25-53-22	050-099
	10		W0710	336Y	20		25-53-22	150-199, 275-299
	11	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D01500

Page 2

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01504		1384/122/R029		RCPT- (continued)				050-099
D01504		1308/122/R029		RCPT- (continued)				150-199, 275-299
	12	UNUSED						ALL
D01505		0265/150/R034		SOCKET-				ALL
	A1		W0045	685	24		27-32-12	ALL
	A2		W0045	113	24		31-51-12	ALL
	A3		W0045	114	20		31-51-12	ALL
	B1	UNUSED						ALL
	B2	UNUSED						ALL
	B3	UNUSED						ALL
	X1		W0045	096	24		31-51-12	ALL
	X2		W0045	095	24		31-51-12	ALL
			W0045	095Z			31-51-12	ALL
			W0045	096Z			31-51-12	ALL
			W0045	104	20		31-51-12	ALL
D01506		0962/150/L010		PLUG-				ALL
	= 1		W0626	003R	18		26-18-31	ALL
D01508		1830/213/L083		PLUG-				ALL
	= 1		W1296	018R	18		26-18-31	ALL
D01510		1147/148/L083		PLUG-				ALL
	= 1		W0606	170R	18		26-18-31	ALL
D01512		1190/180/L070		PLUG-				ALL
	= 1		W0606	171R	18		26-18-31	ALL
D01514		L0150/14/LE		PLUG-				ALL
	1		W0440	022	18		27-81-21	ALL
	2		W0440	019	20		27-81-21	ALL
	3		W0440	020	18		27-81-21	ALL
	4	UNUSED						ALL
	5		W0440	021	18		27-81-21	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8		W0440	023	18		27-81-21	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D01500

Page 3

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01516		R0143/14/LE		PLUG-				ALL
	1		W0418	046	18		27-81-11	ALL
	2		W0418	043	20		27-81-11	ALL
	3		W0418	044	18		27-81-11	ALL
	4	UNUSED						ALL
	5		W0418	045	18		27-81-11	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8		W0418	047	18		27-81-11	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
D01518		P035-00/ /		PLUG-				050-099
D01518		P035-000/ /		PLUG				150-199, 275-299
	1	UNUSED						ALL
	2		W1066	605	22		25-53-14	050-099
	2		W1066	756	22		25-53-14	150-199, 275-299
	3		W1066	892	22		25-53-13	050-099
	3		W1066	759	22		25-53-13	150-199, 275-299
	4	UNUSED						ALL
	5		W1066	604	22		25-53-14	050-099
	5		W1066	757	22		25-53-14	150-199, 275-299
	6	UNUSED						050-099
	6		W1066	02C	22		25-53-14	150-199, 275-299
	7		W1066	606	22		25-53-14	050-099
	7		W1066	758	22		25-53-14	150-199, 275-299
	8	UNUSED						050-099
	8		W1066	02D	22		25-53-14	150-199, 275-299
D01520		P011-00/ /		PLUG-P11				ALL
	1		W0044	300Y	24		33-13-19	ALL
	2		W0044	059	20		33-13-19	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W0044	300B	24		33-13-19	ALL
	6		W0044	300R	24		33-13-19	ALL
	7		W0044	092	20		33-13-19	ALL
	8	UNUSED						ALL
	9		W0044	053	20		33-13-19	ALL
	10	UNUSED						ALL
	11	FM	W0044	096	16		33-13-19	ALL

HOOKUP LIST
D280T132

91-21-51
Section D01500
Page 4
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01520		P011-00/ /		PLUG-P11 (continued)				ALL
	12		W0044	082	22		33-13-19	ALL
D01522		L0150/14/LE		PLUG-				ALL
	1		W0466	001	18		27-81-21	ALL
	2		W0466	002	18		27-81-21	ALL
	3		W0466	003	18		27-81-21	ALL
	4	UNUSED						ALL
	5		W0466	006	18		27-81-21	ALL
	6		W0466	005	18		27-81-21	ALL
	7		W0466	004	18		27-81-21	ALL
	8		W0466	007	18		27-81-21	ALL
D01524		R0143/14/LE		PLUG-				ALL
	1		W0474	001	20		27-81-11	ALL
	2		W0474	002	20		27-81-11	ALL
	3		W0474	003	20		27-81-11	ALL
	4	UNUSED						ALL
	5		W0474	006	18		27-81-11	ALL
	6		W0474	005	18		27-81-11	ALL
	7		W0474	004	18		27-81-11	ALL
	8		W0474	007	18		27-81-11	ALL
D01526		P033-00/ /		RELAY SOCKET-				ALL
	1	UNUSED						ALL
	2		W0144	684	22		27-62-11	ALL
	3		W0144	681	22		27-62-11	ALL
	4		W0144	682	22		27-62-11	ALL
	5		W0144	680	22		27-62-11	ALL
	6	UNUSED						ALL
	7		W0144	683	22		27-62-11	ALL
	8	UNUSED						ALL
D01528		R140/14/LE		PLUG-				ALL
	1		W0442	219B	20		27-81-31	ALL
	2		W0442	219R	20		27-81-31	ALL
	3		W0442	301R	20		27-81-31	ALL
	4		W0442	301Y	20		27-81-31	ALL
	5		W0442	301B	20		27-81-31	ALL
	6		W0442	005	18		27-81-31	ALL
	7	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D01500

Page 5

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01530		L0294/14/RS		PLUG-				ALL
	1		W0450	007	20		28-42-31	ALL
	2	DK	W0450	008	18		28-42-11	ALL
	3		W0450	009	20		28-42-11	ALL
	4	DK	W0450	010	18		28-42-11	ALL
	5	UNUSED						ALL
D01532		R0297/14/RS		PLUG-				ALL
	1	UNUSED						ALL
	2	DK	W0452	008	18		28-42-11	ALL
	3		W0452	009	20		28-42-11	ALL
	4	DK	W0452	010	18		28-42-11	ALL
	5	UNUSED						ALL
D01534		L0287/14/TE		PLUG-				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W0446	213R	20		28-41-21	ALL
	4		W0446	213B	20		28-41-21	ALL
	5		W0446	065	20		28-41-21	ALL
	6		W0446	214R	20		28-41-21	ALL
	7		W0446	214B	20		28-41-21	ALL
	8		W0446	054	18		28-41-21	ALL
	9	UNUSED						ALL
	10		W0446	053	18		28-41-21	ALL
			W0446	065Z			28-41-21	ALL
			W0446	213Z			28-41-21	ALL
			W0446	214Z			28-41-21	ALL
			W0446	FRB			28-41-21	ALL
D01536		R0287/14/TE		PLUG-				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W0448	204R	20		28-41-22	ALL
	4		W0448	204B	20		28-41-22	ALL
	5		W0448	048	20		28-41-22	ALL
	6		W0448	205R	20		28-41-22	ALL
	7		W0448	205B	20		28-41-22	ALL
	8		W0448	020	18		28-41-22	ALL
	9	UNUSED						ALL
	10		W0448	021	18		28-41-22	ALL

HOOKUP LIST

D280T132

91-21-51

Section D01500

Page 6

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01536		R0287/14/TE		PLUG- (continued)				ALL
			W0448	048Z			28-41-22	ALL
			W0448	204Z			28-41-22	ALL
			W0448	205Z			28-41-22	ALL
			W0448	FRB			28-41-22	ALL
D01538		L0297/14/RS		PLUG-				ALL
	1		W0460	009	20		28-42-31	ALL
	2	DK	W0460	003	18		28-42-11	ALL
	3		W0460	002	20		28-42-11	ALL
	4	DK	W0460	004	18		28-42-11	ALL
	5	UNUSED						ALL
D01540		R0274/12/MS		PLUG-				ALL
	1	UNUSED						ALL
	2		W0478	302B	18		28-22-11	ALL
	3		W0478	002	18		28-22-11	ALL
	4		W0478	302R	18		28-22-11	ALL
	5	UNUSED						ALL
	6		W0478	302Y	18		28-22-11	ALL
	7	UNUSED						ALL
D01542		L0274/12/MS		PLUG-				ALL
	1	UNUSED						ALL
	2		W0444	301B	18		28-22-11	ALL
	3		W0444	001	18		28-22-11	ALL
	4		W0444	301R	18		28-22-11	ALL
	5	UNUSED						ALL
	6		W0444	301Y	18		28-22-11	ALL
	7	UNUSED						ALL
D01544		0954/156/L029		PLUG-				050-099, 155-199, 276-299
D01544		0954/170/L029		PLUG-				150-154, 275
	1	UNUSED						ALL
	2		W0454	033	18		28-22-31	ALL
	3		W0454	034	18		28-22-31	ALL
	4		W0454	012	18		28-22-31	ALL
	5		W0454	032	18		28-22-31	ALL
	6	UNUSED						ALL
	7		W0454	027	18		28-22-31	ALL

HOOKUP LIST

D280T132

91-21-51

Section D01500

Page 7

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01546		1090/131/L085		PLUG-				ALL
	1		W0264	202B	22		27-51-41	ALL
	2		W0264	202R	22		27-51-41	ALL
	3		W0264	402B	22		27-51-41	ALL
	4		W0264	402R	22		27-51-41	ALL
	5		W0264	402Y	22		27-51-41	ALL
	6		W0264	402G	22		27-51-41	ALL
	7		W0264	071	20		27-51-41	ALL
	8		W0264	201R	22		27-58-21	ALL
	9		W0264	201B	22		27-58-21	ALL
	10		W0264	301R	22		27-58-21	ALL
	11		W0264	301Y	22		27-58-21	ALL
	12		W0264	301B	22		27-58-21	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
D01548		1090/131/R085		RCPT-				ALL
	1		W0768	207B	22		27-51-41	ALL
	2		W0768	207R	22		27-51-41	ALL
	3		W0768	401B	22		27-51-41	ALL
	4		W0768	401R	22		27-51-41	ALL
	5		W0768	401Y	22		27-51-41	ALL
	6		W0768	401G	22		27-51-41	ALL
	7		W0768	113	18		27-51-41	ALL
	8		W0768	208R	22		27-58-21	ALL
	9		W0768	208B	22		27-58-21	ALL
	10		W0768	304R	22		27-58-21	ALL
	11		W0768	304Y	22		27-58-21	ALL
	12		W0768	304B	22		27-58-21	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
D01550		L0280/ /		PLUG-				ALL
	1	UNUSED						ALL
	2		W0460	301B	18		28-22-11	ALL
	3		W0460	001	18		28-22-11	ALL
	4		W0460	301R	18		28-22-11	ALL
	5	UNUSED						ALL
	6		W0460	301Y	18		28-22-11	ALL
	7	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D01500

Page 8

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01552		L0403/14/TE		PLUG-L TANK BUSSING UNIT				050-099, 150-156, 162-166, 275-276
D01552		L0403/14/TE		PLUG- L TANK BUSSING UNIT				157, 167-199, 277-299
	1		W0446	42TX			28-41-21	050-099, 150-199, 275-278
	1		W0446	42TX	20		28-41-21	280-299
	2	UNUSED						ALL
	3	UNUSED						ALL
	=C1		W0446	42TI			28-41-21	ALL
D01554		L0327/12/RS		PLUG-				ALL
	1	UNUSED						ALL
	2		W0454	302R	20		28-22-21	ALL
	3		W0454	302Y	20		28-22-21	ALL
	4		W0454	009	18		28-22-21	ALL
	5		W0454	302B	20		28-22-21	ALL
	6		W0454	008	18		28-22-21	ALL
	7		W0454	026	18		28-22-21	ALL
D01560		R0411/14/RS		PLUG-				ALL
	1		W0448	22TX			28-41-22	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	=C1		W0448	22TI			28-41-22	ALL
D01562		0879/124/R044		PLUG-				ALL
	1		W0952	027	18		21-51-21	ALL
	2		W0952	026	20		21-51-21	ALL
	3	UNUSED						ALL
D01564		L0288/14/RS		PLUG-				ALL
	1	UNUSED						ALL
	2		W0484	302Y	18		28-25-21	ALL
	3		W0484	302B	18		28-25-21	ALL
	4		W0484	003	18		28-25-21	ALL
	5		W0484	302R	18		28-25-21	ALL
	6		W0484	002	20		28-25-21	ALL
	7		W0484	017	18		28-25-21	ALL
D01566		L0273/12/RS		PLUG-				ALL
	1		W0454	014	20		28-42-21	ALL
	2	DK	W0454	013	18		28-42-21	ALL
	3	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D01500

Page 9

Mar 07/2008



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01566		L0273/12/RS		PLUG- (continued)				ALL
	4	DK	W0454	015	18		28-42-21	ALL
	5	UNUSED						ALL
D01568		0867/123/R044		PLUG-				ALL
	1		W0952	210R	20		21-51-22	ALL
	2	DK	W0952	028	18		21-51-22	ALL
	3		W0952	210B	20		21-51-22	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
D01569		MULTI/ /		PLUG				050-099, 162-199, 275-276
	1		W1463	301Y	24		23-34	050-099, 162-199, 275-276
	2	FM	W1463	201R	16		23-34	050-099, 162-199, 275-276
	3	FM	W1463	201B	16		23-34	050-099, 162-199, 275-276
	4		W1463	301B	24		23-34	050-099, 162-199, 275-276
	5		W1463	301R	24		23-34	050-099, 162-199, 275-276
D01570		L0278/14/RS		PLUG-				ALL
	1		W0482	010	14		28-25-11	ALL
	2		W0482	011	14		28-25-11	ALL
	3		W0482	012	14		28-25-11	ALL
	4	UNUSED						ALL
D01571		MULTI/ /		PLUG				050-099, 162-199, 275-276
	1		W1463	301Y	24		23-34	050-099, 162-199, 275-276
	2	FM	W1463	201R	16		23-34	050-099, 162-199, 275-276
	3	FM	W1463	201B	16		23-34	050-099, 162-199, 275-276
	4		W1463	301B	24		23-34	050-099, 162-199, 275-276
	5		W1463	301R	24		23-34	050-099, 162-199, 275-276
D01572		R0325/12/RS		PLUG-				ALL
	1	UNUSED						ALL
	2		W0456	302R	20		28-22-21	ALL
	3		W0456	302Y	20		28-22-21	ALL
	4		W0456	023	18		28-22-21	ALL
	5		W0456	302B	20		28-22-21	ALL
	6		W0456	022	18		28-22-21	ALL
	7		W0456	024	18		28-22-21	ALL

HOOKUP LIST
D280T132

91-21-51
Section D01500
Page 10
Mar 07/2008



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01573		MULTI/ /		PLUG				ALL
	1		W1465	301Y	24		23-34	ALL
	2	FM	W1465	201R	16		23-34	ALL
	3	FM	W1465	201B	16		23-34	ALL
	4		W1465	301B	24		23-34	ALL
	5		W1465	301R	24		23-34	ALL
D01574		L0430/12/TE		PLUG-				ALL
	1		W0446	058	18		27-13-11	ALL
	2		W0446	302R	20		27-13-11	ALL
	3		W0446	302B	20		27-13-11	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9		W0446	059	18		27-13-11	ALL
	10		W0446	302Y	20		27-13-11	ALL
D01575		MULTI/ /		PLUG				ALL
	1		W1465	301Y	24		23-34	ALL
	2	FM	W1465	201R	16		23-34	ALL
	3	FM	W1465	201B	16		23-34	ALL
	4		W1465	301B	24		23-34	ALL
	5		W1465	301R	24		23-34	ALL
D01576		0879/138/L050		PLUG-				ALL
	1		W0508	030	18		21-51-11	ALL
	2		W0508	029	20		21-51-11	ALL
	3	UNUSED						ALL
D01577		MULTI/ /		PLUG				ALL
	1		W1467	301Y	24		23-34	ALL
	2	FM	W1467	201R	16		23-34	ALL
	3	FM	W1467	201B	16		23-34	ALL
	4		W1467	301B	24		23-34	ALL
	5		W1467	301R	24		23-34	ALL
D01578		L0400/12/TE		RCPT-				ALL
	1	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D01500

Page 11

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01578		L0400/12/TE		RCPT- (continued)				ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8		W0446	201R	20		27-58-21	ALL
	9		W0446	201B	20		27-58-21	ALL
	10		W0446	301R	20		27-58-21	ALL
	11		W0446	301Y	20		27-58-21	ALL
	12		W0446	301B	20		27-58-21	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
D01579		MULTI/ /		PLUG				ALL
	1		W1467	301Y	24		23-34	ALL
	2	FM	W1467	201R	16		23-34	ALL
	3	FM	W1467	201B	16		23-34	ALL
	4		W1467	301B	24		23-34	ALL
	5		W1467	301R	24		23-34	ALL
D01581		MULTI/ /		PLUG				050-099, 162-199, 275-299
	1		W1469	301Y	24		23-34	050-099, 162-199, 275-299
	2	FM	W1469	201R	16		23-34	050-099, 162-199, 275-299
	3	FM	W1469	201B	16		23-34	050-099, 162-199, 275-299
	4		W1469	301B	24		23-34	050-099, 162-199, 275-299
	5		W1469	301R	24		23-34	050-099, 162-199, 275-299
D01582		L0406/14/TE		PLUG-L TANK HARNESS ASSEMBLY				050-099, 150-156, 162-166, 275-276
D01582		L0406/14/TE		PLUG- L TANK HARNESS ASSEMBLY				157, 167-199, 277-299
	1		W0446	0WHT	20		28-41-21	ALL
	2		W0446	0RGR	20		28-41-21	ALL
	3		W0446	0RYL	20		28-41-21	ALL
	4		W0446	0RVI	20		28-41-21	ALL
	5		W0446	0RBU	20		28-41-21	ALL
	6		W0446	0WBN	20		28-41-21	ALL
	7		W0446	0WBK	20		28-41-21	ALL
	8		W0446	0WOR	20		28-41-21	ALL
	9		W0446	0WRD	20		28-41-21	ALL
	10		W0446	0WGR	20		28-41-21	ALL

HOOKUP LIST

D280T132

91-21-51

Section D01500

Page 12

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01582		L0406/14/TE		PLUG-L TANK HARNESS ASSEMBLY (continued)				050-099, 150-156, 162-166, 275-276
D01582		L0406/14/TE		PLUG- L TANK HARNESS ASSEMBLY (continued)				157, 167-199, 277-299
	11		W0446	0WYL	20		28-41-21	ALL
	12		W0446	0WBU	20		28-41-21	ALL
	13		W0446	0WBY	20		28-41-21	ALL
	14		W0446	0WVI	20		28-41-21	ALL
	15	UNUSED						ALL
	16		W0446	0RBK	20		28-41-21	ALL
D01583		MULTI/ /		PLUG				050-099, 162-199, 275-299
	1		W1469	301Y	24		23-34	050-099, 162-199, 275-299
	2	FM	W1469	201R	16		23-34	050-099, 162-199, 275-299
	3	FM	W1469	201B	16		23-34	050-099, 162-199, 275-299
	4		W1469	301B	24		23-34	050-099, 162-199, 275-299
	5		W1469	301R	24		23-34	050-099, 162-199, 275-299
D01584		R0407/14/RS		PLUG-				ALL
	1		W0448	0WHT	20		28-41-22	ALL
	2		W0448	0RGR	20		28-41-22	ALL
	3		W0448	0RYL	20		28-41-22	ALL
	4		W0448	0RVI	20		28-41-22	ALL
	5		W0448	0RBU	20		28-41-22	ALL
	6		W0448	0WBN	20		28-41-22	ALL
	7		W0448	0WBK	20		28-41-22	ALL
	8		W0448	0WOR	20		28-41-22	ALL
	9		W0448	0WRD	20		28-41-22	ALL
	10		W0448	0WGR	20		28-41-22	ALL
	11		W0448	0WYL	20		28-41-22	ALL
	12		W0448	0WBU	20		28-41-22	ALL
	13		W0448	0WBY	20		28-41-22	ALL
	14		W0448	0WVI	20		28-41-22	ALL
	15	UNUSED						ALL
	16		W0448	0RBK	20		28-41-22	ALL
D01585		MULTI/ /		PLUG				ALL
	1		W1471	301Y	24		23-34	ALL
	2	FM	W1471	201R	16		23-34	ALL
	3	FM	W1471	201B	16		23-34	ALL
	4		W1471	301B	24		23-34	ALL
	5		W1471	301R	24		23-34	ALL

HOOKUP LIST

D280T132

91-21-51

Section D01500

Page 13

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01586		L0534/12/TE		PLUG-				ALL
	1		W0446	405R	20		27-18-11	050-099, 150-154, 162-165, 275-276
	1		W0446	216B	20		27-18-11	155-157, 166-199, 277-299
	2		W0446	405B	20		27-18-11	050-099, 150-154, 162-165, 275-276
	2		W0446	216R	20		27-18-11	155-157, 166-199, 277-299
	3	UNUSED						050-099, 150-154, 162-165, 275-276
	3		W0446	304R	20		27-18-11	155-157, 166-199, 277-299
	4		W0446	405G	20		27-18-11	050-099, 150-154, 162-165, 275-276
	4		W0446	304B	20		27-18-11	155-157, 166-199, 277-299
	5		W0446	405Y	20		27-18-11	050-099, 150-154, 162-165, 275-276
	5		W0446	304Y	20		27-18-11	155-157, 166-199, 277-299
D01587		MULTI/ /		PLUG				ALL
	1		W1471	301Y	24		23-34	ALL
	2	FM	W1471	201R	16		23-34	ALL
	3	FM	W1471	201B	16		23-34	ALL
	4		W1471	301B	24		23-34	ALL
	5		W1471	301R	24		23-34	ALL
D01588		R0534/12/TE		PLUG-				ALL
	1		W0464	405G	20		27-18-11	050-099, 150-154, 162-165, 275-276
	1		W0464	206B	20		27-18-11	155-157, 166-199, 277-299
	2		W0464	405B	20		27-18-11	050-099, 150-154, 162-165, 275-276
	2		W0464	206R	20		27-18-11	155-157, 166-199, 277-299
	3	UNUSED						050-099, 150-154, 162-165, 275-276
	3		W0464	305R	20		27-18-11	155-157, 166-199, 277-299
	4		W0464	405Y	20		27-18-11	050-099, 150-154, 162-165, 275-276
	4		W0464	305B	20		27-18-11	155-157, 166-199, 277-299
	5		W0464	405R	20		27-18-11	050-099, 150-154, 162-165, 275-276
	5		W0464	305Y	20		27-18-11	155-157, 166-199, 277-299
D01589		MULTI/ /		PLUG				150-199
	1		W1473	301Y	24		23-34	150-199
	2	FM	W1473	201R	16		23-34	150-199
	3	FM	W1473	201B	16		23-34	150-199
	4		W1473	301B	24		23-34	150-199
	5		W1473	301R	24		23-34	150-199
D01590		0879/123/L040		PLUG-				ALL
	1		W0508	210R	20		21-51-12	ALL

HOOKUP LIST
D280T132

91-21-51
Section D01500
Page 14
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01590		0879/123/L040		PLUG- (continued)				ALL
	2	DK	W0508	031	18		21-51-12	ALL
	3		W0508	210B	20		21-51-12	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
D01591		MULTI/ /		PLUG				150-199
	1		W1473	301Y	24		23-34	150-199
	2	FM	W1473	201R	16		23-34	150-199
	3	FM	W1473	201B	16		23-34	150-199
	4		W1473	301B	24		23-34	150-199
	5		W1473	301R	24		23-34	150-199
D01592		P011-00/ /		PLUG-P11				ALL
	1		W0044	301Y	24		33-13-19	ALL
	2		W0044	057	20		33-13-19	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W0044	301B	24		33-13-19	ALL
	6		W0044	301R	24		33-13-19	ALL
	7		W0044	093	20		33-13-19	ALL
	8	UNUSED						ALL
	9		W0044	051	20		33-13-19	ALL
	10	UNUSED						ALL
	11	FM	W0044	083	16		33-13-19	ALL
	12		W0044	084	22		33-13-19	ALL
D01594		L0405/12/LE		PLUG-				ALL
	1		W0440	007	20		30-11-11	ALL
	2		W0440	008	18		30-11-11	ALL
	3		W0440	025	18		30-11-11	ALL
	4		W0440	009	20		30-11-11	ALL
	5		W0440	010	20		30-11-11	ALL
	6		W0440	026	18		30-11-11	ALL
	7	UNUSED						ALL
D01596		R0400/14/LE		PLUG-				ALL
	1		W0418	037	20		30-11-11	ALL
	2		W0418	038	18		30-11-11	ALL
	3		W0418	041	18		30-11-11	ALL
	4		W0418	039	20		30-11-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D01500

Page 15

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01596		R0400/14/LE		PLUG- (continued)				ALL
	5		W0418	040	20		30-11-11	ALL
	6		W0418	042	18		30-11-11	ALL
	7	UNUSED						ALL
D01597		MULTI /		PLUG-				050-099, 150-199, 277-299
	1		W1477	301Y	24		23-34	050-099, 150-199, 277-299
	2	FM	W1477	201R	16		23-34	050-099, 150-199, 277-299
	3	FM	W1477	201B	16		23-34	050-099, 150-199, 277-299
	4		W1477	301B	24		23-34	050-099, 150-199, 277-299
	5		W1477	301R	24		23-34	050-099, 150-199, 277-299
D01598		0852/123/L060		PLUG-				ALL
	1		W0944	201R	20		21-51-11	ALL
	2	DK	W0944	010	18		21-51-11	ALL
	3		W0944	201B	20		21-51-11	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
D01599		MULTI /		PLUG-				050-099, 150-199, 277-299
	1		W1477	301Y	24		23-34	050-099, 150-199, 277-299
	2	FM	W1477	201R	16		23-34	050-099, 150-199, 277-299
	3	FM	W1477	201B	16		23-34	050-099, 150-199, 277-299
	4		W1477	301B	24		23-34	050-099, 150-199, 277-299
	5		W1477	301R	24		23-34	050-099, 150-199, 277-299

HOOKUP LIST

D280T132

91-21-51

Section D01500

Page 16 End

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01600		P011-00/ /		PLUG-P11				ALL
	1		W0044	302Y	24		33-13-19	ALL
	2		W0044	055	20		33-13-19	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W0044	302B	24		33-13-19	ALL
	6		W0044	302R	24		33-13-19	ALL
	7		W0044	094	20		33-13-19	ALL
	8	UNUSED						ALL
	9		W0044	049	20		33-13-19	ALL
	10	UNUSED						ALL
	11	FM	W0044	085	16		33-13-19	ALL
	12		W0044	086	22		33-13-19	ALL
D01602		0896/123/R064		PLUG-				ALL
	1		W0982	201R	20		21-51-21	ALL
	2	DK	W0982	015	18		21-51-21	ALL
	3		W0982	201B	20		21-51-21	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
D01608		P035-00/ /		RCPT-P35				ALL
	A1	UNUSED						ALL
	A2		W1066	655	22		25-53-17	ALL
	A3		W1066	536	22		25-53-17	ALL
	B1	UNUSED						ALL
	B2		W1066	534	22		25-53-17	ALL
	B3		W1066	599	22		25-53-17	050-099
	B3		W1066	285	22		25-53-17	150-199, 275-299
	X1		W1066	645	22		25-53-17	ALL
	X2		W1066	656	22		25-53-17	ALL
D01612		P036-00/ /		RELAY SOCKET-P36				ALL
	A1	UNUSED						ALL
	A2	UNUSED						ALL
	A3	UNUSED						ALL
	B1	UNUSED						ALL
	B2		W0176	09I	20		32-09-11	ALL
	B3		W0176	09H	24		32-09-11	ALL
	C1	UNUSED						ALL
	C2		W0176	867	24		24-22-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D01600

Page 1

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01612		P036-00/ /		RELAY SOCKET-P36 (continued)				ALL
	C3		W0176	853	24		24-22-11	ALL
	D1		W0176	801	20		21-45-11	ALL
	D2		W0176	671	20		21-45-11	ALL
	D3	UNUSED						ALL
	X1		W0176	672	24		32-09-11	ALL
	X2		W0176	673	24		32-09-11	ALL
D01614		L0346/12/RS		PLUG-				ALL
	1	DK	W0454	003	18		28-21-13	ALL
	2		W0454	201B	20		28-21-13	ALL
	3	DK	W0454	005	18		28-21-13	ALL
	4	DK	W0454	004	18		28-21-13	ALL
	5		W0454	201R	20		28-21-13	ALL
D01616		R0347/12/RS		PLUG-				ALL
	1	DK	W0456	009	18		28-21-13	ALL
	2		W0456	201B	20		28-21-13	ALL
	3	DK	W0456	011	18		28-21-13	ALL
	4	DK	W0456	010	18		28-21-13	ALL
	5		W0456	201R	20		28-21-13	ALL
D01618		L0631/14/RS		PLUG-				ALL
	1		W0484	402R	20		28-21-13	ALL
	2		W0484	402B	20		28-21-13	ALL
	3	DK	W0484	009	18		28-21-13	ALL
	4		W0484	402Y	20		28-21-13	ALL
	5		W0484	402G	20		28-21-13	ALL
D01620		R0631/14/		PLUG-				ALL
	1		W0456	402R	20		28-21-13	ALL
	2		W0456	402G	20		28-21-13	ALL
	3	DK	W0456	006	18		28-21-13	ALL
	4		W0456	402Y	20		28-21-13	ALL
	5		W0456	402B	20		28-21-13	ALL
D01622		P028-00/ /		PLUG-				ALL
	1		W1056	087	18		28-41-11	ALL
	2		W1056	086	18		28-41-11	ALL
	3		W1056	303B	20		28-41-11	ALL
	4		W1056	303R	20		28-41-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D01600

Page 2

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01622		P028-00/ /		PLUG- (continued)				ALL
	5		W1056	303Y	20		28-41-11	ALL
	6		W1056	202B	20		28-41-11	ALL
	7		W1056	202R	20		28-41-11	ALL
	8		W1056	023	18		28-41-12	ALL
	9		W1056	026	18		28-41-11	ALL
	10		W1056	076	18		28-41-11	ALL
D01624		P028-00/ /		PLUG-				ALL
	1		W1056	084	18		28-41-11	ALL
	2		W1056	083	18		28-41-11	ALL
	3		W1056	302B	20		28-41-11	ALL
	4		W1056	302R	20		28-41-11	ALL
	5		W1056	302Y	20		28-41-11	ALL
	6		W1056	208B	20		28-41-11	ALL
	7		W1056	208R	20		28-41-11	ALL
	8		W1056	027	18		28-41-12	ALL
	9		W1056	022	18		28-41-11	ALL
	10		W1056	078	18		28-41-11	ALL
D01626		P028-00/ /		PLUG-				ALL
	1		W1056	081	18		28-41-11	ALL
	2		W1056	080	18		28-41-11	ALL
	3		W1056	301B	20		28-41-11	ALL
	4		W1056	301R	20		28-41-11	ALL
	5		W1056	301Y	20		28-41-11	ALL
	6		W1056	205B	20		28-41-11	ALL
	7		W1056	205R	20		28-41-11	ALL
	8		W1056	025	18		28-41-12	ALL
	9		W1056	024	18		28-41-11	ALL
	10		W1056	077	18		28-41-11	ALL
D01629		P008-00/ /		PLUG-ADF L,CONT PNL				ALL
	1	DK	W0615	001	18		33-13-18	050-099, 150-155, 162-165, 275-276
	1	DK	W0615	204R	18		33-13-18	156-157, 166-199, 277-299
	2	DK	W0615	002	18		33-13-18	050-099, 150-155, 162-165, 275-276
	2	DK	W0615	204B	18		33-13-18	156-157, 166-199, 277-299
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D01600

Page 3

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01629		P008-00/ /		PLUG-ADF L,CONT PNL (continued)				ALL
	7		W0615	007	20		34-57-11	ALL
	8		W0615	004	20		34-57-11	ALL
	9		W0615	003	22		34-57-11	ALL
	10		W0615	010	22		34-57-11	ALL
	11	UNUSED						ALL
	12		W0615	202R	24		34-57-11	ALL
	13		W0615	202B	24		34-57-11	ALL
	14		W0615	202Z			34-57-11	ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D01630		L0803/12/RS		RCPT-				ALL
	1		W0446	407G	20		27-58-11	ALL
	2		W0446	407B	20		27-58-11	ALL
	3		W0446	407Y	20		27-58-11	ALL
	4		W0446	401B	20		27-51-41	ALL
	5		W0446	401R	20		27-51-41	ALL
	6		W0446	401Y	20		27-51-41	ALL
	7		W0446	401G	20		27-51-41	ALL
	8		W0446	202B	20		27-51-41	ALL
	9		W0446	202R	20		27-51-41	ALL
	10		W0446	005	18		27-51-41	ALL
	11		W0446	407R	20		27-58-11	ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
D01631		P008-00/ /		PLUG-PNL,CONT.,ADF-R				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D01600

Page 4

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01631		P008-00/ /		PLUG-PNL,CONT.,ADF-R (continued)				ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W0617	007	20		34-57-21	ALL
	8		W0617	004	20		34-57-21	ALL
	9		W0617	003	22		34-57-21	ALL
	10		W0617	010	22		34-57-21	ALL
	11	UNUSED						ALL
	12		W0617	202R	24		34-57-21	ALL
	13		W0617	202B	24		34-57-21	ALL
	14		W0617	202Z			34-57-21	ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	DED		W0617	003Z			34-57-21	ALL
	DED		W0617	004Z			34-57-21	ALL
	DED		W0617	010Z			34-57-21	ALL
D01632		R0804/14/TE		RCPT-				ALL
	1		W0464	406Y	20		27-58-11	ALL
	2		W0464	406R	20		27-58-11	ALL
	3		W0464	406B	20		27-58-11	ALL
	4		W0464	401B	20		27-51-41	ALL
	5		W0464	401R	20		27-51-41	ALL
	6		W0464	401Y	20		27-51-41	ALL
	7		W0464	401G	20		27-51-41	ALL
	8		W0464	201B	20		27-51-41	ALL
	9		W0464	201R	20		27-51-41	ALL
	10		W0464	018	18		27-51-41	ALL
	11		W0464	406G	20		27-58-11	ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D01600

Page 5

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01634		L0995/14/RS		PLUG-				ALL
	1		W0484	401R	20		27-11-12	ALL
	2		W0484	401G	20		27-11-12	ALL
	3		W0484	010	20		27-11-12	ALL
	4		W0484	401B	20		27-11-12	ALL
	5		W0484	401Y	20		27-11-12	ALL
	6		W0484	011	18		27-11-12	ALL
	7	UNUSED						ALL
D01635		0331/180/L048		PLUG-				ALL
	A		W0695	010	22		31-31-15	ALL
	B		W0695	012	20		31-31-15	ALL
	C		W0695	204R	24		31-31-15	ALL
	D		W0695	204B	24		31-31-15	ALL
	E		W0695	011	20		31-31-15	ALL
	F	UNUSED						ALL
			W0695	204	20		31-31-15	ALL
			W0695	204Z			31-31-15	ALL
D01636		R0990/12/RS		PLUG-				ALL
	1		W0456	401R	20		27-11-22	ALL
	2		W0456	401G	20		27-11-22	ALL
	3		W0456	015	18		27-11-22	ALL
	4		W0456	401B	20		27-11-22	ALL
	5		W0456	401Y	20		27-11-22	ALL
	6		W0456	016	18		27-11-22	ALL
	7	UNUSED						ALL
D01638		L1089/12/RS		PLUG-				ALL
	1		W0446	406G	20		27-18-11	050-099, 150-154, 162-165, 275-276
	1		W0446	217R	20		27-18-11	155-157, 166-199, 277-299
	2		W0446	406B	20		27-18-11	050-099, 150-154, 162-165, 275-276
	2		W0446	217B	20		27-18-11	155-157, 166-199, 277-299
	3	UNUSED						050-099, 150-154, 162-165, 275-276
	3		W0446	305R	20		27-18-11	155-157, 166-199, 277-299
	4		W0446	406Y	20		27-18-11	050-099, 150-154, 162-165, 275-276
	4		W0446	305B	20		27-18-11	155-157, 166-199, 277-299
	5		W0446	406R	20		27-18-11	050-099, 150-154, 162-165, 275-276
	5		W0446	305Y	20		27-18-11	155-157, 166-199, 277-299

HOOKUP LIST

D280T132

91-21-51

Section D01600

Page 6

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01640		R1085/14/TE		PLUG-				ALL
	1		W0464	404G	20		27-18-11	050-099, 150-154, 162-165, 275-276
	1		W0464	205B	20		27-18-11	155-157, 166-199, 277-299
	2		W0464	404R	20		27-18-11	050-099, 150-154, 162-165, 275-276
	2		W0464	205R	20		27-18-11	155-157, 166-199, 277-299
	3	UNUSED						050-099, 150-154, 162-165, 275-276
	3		W0464	304R	20		27-18-11	155-157, 166-199, 277-299
	4		W0464	404B	20		27-18-11	050-099, 150-154, 162-165, 275-276
	4		W0464	304B	20		27-18-11	155-157, 166-199, 277-299
	5		W0464	404Y	20		27-18-11	050-099, 150-154, 162-165, 275-276
	5		W0464	304Y	20		27-18-11	155-157, 166-199, 277-299
D01644		P037-00/ /		RELAY SOCKET-				ALL
	1		W0192	203B	24		31-31-12	ALL
	2		W0192	204R	24		31-31-12	ALL
	3		W0192	098	24		31-31-12	ALL
	4		W0192	205R	24		31-31-12	ALL
	5		W0192	203R	24		31-31-12	ALL
	6		W0192	204B	24		31-31-12	ALL
	7		W0192	099	24		31-31-12	ALL
	8		W0192	205B	24		31-31-12	ALL
			W0192	01A	20		31-31-12	ALL
			W0192	01B	20		31-31-12	ALL
			W0192	01C	20		31-31-12	ALL
			W0192	203Z			31-31-12	ALL
			W0192	204Z			31-31-12	ALL
			W0192	205Z			31-31-12	ALL
D01646 D01646		P021-00/ / 0284/240/L060		RCPT- RCPT-				050-099, 150-199 275-299
	1		W1224	070	22		33-22-41	ALL
	2		W1224	040	24		33-21-31	ALL
	3		W1224	074	22		33-22-41	050-099, 150-199
	3		W1224	071	22		33-22-41	275-299
	4		W1224	072	22		33-22-41	ALL
	5	UNUSED						050-099, 150-199
	5		W1224	069	22		33-22-42	275-299
	6		W1224	041	20		33-21-31	ALL
	7		W1224	060	24		33-21-11	ALL
	8		W1224	073	22		33-22-41	ALL

HOOKUP LIST

D280T132

91-21-51

Section D01600

Page 7

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01646		P021-00/ /		RCPT- (continued)				050-099, 150-199
D01646		0284/240/L060		RCPT- (continued)				275-299
	9		W1224	058	24		33-21-11	ALL
	10		W1224	059	20		33-21-11	ALL
	11	DK	W1224	057	18		33-51-11	ALL
	12		W1224	033	20		33-22-11	ALL
	13		W1224	031	20		33-22-11	ALL
	14		W1224	032	20		33-22-11	ALL
	15		W1224	019	20		33-22-31	ALL
	16	UNUSED						050-099, 150-199
	16		W1224	020	20		33-22-31	275-299
	17		W1224	111	24		24-51-51	ALL
	18		W1224	114	24		24-51-51	ALL
	19		W1224	113	24		24-51-51	ALL
	20		W1224	112	20		24-51-51	ALL
	21		W1224	034	20		33-22-11	ALL
	22		W1224	018	20		52-11-12	ALL
	23		W1224	008	22		52-11-12	ALL
	24		W1224	009	22		52-11-12	ALL
	25		W1224	012	22		52-11-12	ALL
	26		W1224	006	22		52-11-12	ALL
	27		W1224	013	22		52-11-12	ALL
	28		W1224	014	22		52-11-12	ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31		W1224	022	22		33-21-21	050-099, 150-199
	31		W1224	022	24		33-21-21	275-299
	32		W1224	023	22		33-21-21	050-099, 150-199
	32		W1224	023	24		33-21-21	275-299
	33		W1224	119	22		33-51-11	ALL
	34		W1224	038	24		33-22-11	ALL
	35		W1224	036	24		33-22-11	ALL
	36		W1224	037	24		33-22-11	ALL
	37		W1224	055	22		33-51-11	ALL
	38		W1224	056	20		33-51-11	050-099, 275-299
	38		W1224	056	20		33-21-11	150-199
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43		W1224	117	22		33-51-11	ALL

HOOKUP LIST
D280T132

91-21-51
Section D01600
Page 8
Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01646		P021-00/ /		RCPT- (continued)				050-099, 150-199
D01646		0284/240/L060		RCPT- (continued)				275-299
	44		W1224	120	20		33-51-11	ALL
	45		W1224	118	22		33-51-11	ALL
	46		W1224	141	24		33-21-31	050-099, 150-199
	46	UNUSED						275-299
	47		W1224	142	24		33-21-12	050-099, 150-199
	47	UNUSED						275-299
	48		W1224	029	22		52-11-12	ALL
	49		W1224	028	22		52-11-12	ALL
	50	UNUSED						050-099, 150-199, 275-278
	50		W1224	133	24		33-21-31	280-299
	51		W1224	134	22		33-21-21	050-099, 150-199
	51	UNUSED						275-278
	51		W1224	134	24		33-21-11	280-299
	52		W1224	126	24		33-21-12	050-099, 150-199
	52	UNUSED						275-278
	52		W1224	126	24		33-21-21	280-299
	53		W1224	102	20		33-22-31	050-099, 150-199
	53	UNUSED						275-278
	53		W1224	127	24		33-21-11	280-299
	54		W1224	150	20		33-22-31	050-099, 150-199
	54	UNUSED						275-299
	55		W1224	129	24		33-21-11	050-099
	55		W1224	129	20		33-21-11	150-199
	55	UNUSED						275-278
	55		W1224	129	22		33-22-42	280-299
	56		W1224	143	24		33-21-12	050-099, 150-199
	56	UNUSED						275-299
	57		W1224	130	24		33-21-12	050-099
	57		W1224	130	20		33-21-12	150-199
	57	UNUSED						275-299
	58		W1224	133	24		33-21-11	050-099, 150-199
	58	UNUSED						275-299
	59		W1224	802	22		33-27-11	050-099
	59		W1224	802	20		33-27-11	150-199
	59	UNUSED						275-299
	60		W1224	800	20		33-27-11	050-099, 150-199
	60	UNUSED						275-299
	61		W1224	801	22		33-27-11	050-099
	61		W1224	801	20		33-27-11	150-199

HOOKUP LIST

D280T132

91-21-51

Section D01600

Page 9

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01646		P021-00/ /		RCPT- (continued)				050-099, 150-199
D01646		0284/240/L060		RCPT- (continued)				275-299
	61	UNUSED						275-299
D01648		1345/203/L093		PLUG-				ALL
	1		W0784	094	20		33-51-21	ALL
	2		W0784	097	20		33-51-21	ALL
	3		W0784	095	22		33-51-21	ALL
	4		W0784	096	22		33-51-21	ALL
	5		W0784	101	22		33-51-21	ALL
	6		W0784	101	22		33-51-21	ALL
	7		W0784	093	20		33-51-21	ALL
	8		W0784	098	22		33-51-21	ALL
	9	UNUSED						ALL
	10		W0784	105	20		33-51-21	ALL
	11		W0784	104	20		33-51-21	ALL
	12		W0784	106	20		33-51-21	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20		W0784	099	20		33-51-21	ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24		W0784	099	20		33-51-21	ALL
D01650		1541/250/R060		RCPT-P22				050-099
D01650		P022-00/ /		RCPT-P22				150-199
D01650		1540/253/R054		RCPT-P22				275-299
	1		W1240	019	22		33-22-42	ALL
	2		W1240	034	24		33-21-31	ALL
	3		W1240	033	22		33-21-31	ALL
	4		W1240	021	22		33-22-42	ALL
	5	UNUSED						050-099
	5		W1240	023	22		SPARE	150-199, 275-299
	6		W1240	036	22		33-22-42	ALL
	7		W1240	020	24		33-21-12	ALL

HOOKUP LIST

D280T132

91-21-51

Section D01600

Page 10

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01650		1541/250/R060		RCPT-P22 (continued)				050-099
D01650		P022-00/ /		RCPT-P22 (continued)				150-199
D01650		1540/253/R054		RCPT-P22 (continued)				275-299
	8	UNUSED						050-099, 150-199
	8		W1240	022	22		33-22-42	275-299
	9		W1240	057	24		33-21-12	ALL
	10	UNUSED						050-099, 150-199
	10		W1240	038	22		33-22-42	275-299
	11	DK	W1240	051	18		33-51-11	ALL
	12	DK	W1240	024	18		33-22-11	ALL
	13	DK	W1240	600	18		33-22-11	050-099, 150-199
	13	DK	W1240	025	18		33-22-11	275-299
	14	DK	W1240	032	18		33-22-11	ALL
	15	UNUSED						ALL
	16	FM	W1240	006	18		33-22-31	050-099
	16	DK	W1240	006	18		33-22-31	150-199
	16	DK	W1240	016	18		33-22-31	275-299
	17	UNUSED						050-099, 150-199, 275-278
	17	DK	W1240	136	18		SPARE	280-299
	18	UNUSED						ALL
	19		W1240	123	24		33-21-12	050-099, 150-199
	19	UNUSED						275-299
	20		W1240	122	24		33-21-12	050-099
	20		W1240	122	20		33-21-12	150-199
	20	UNUSED						275-299
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31		W1240	001	24		33-21-21	ALL
	32		W1240	002	20		33-21-21	ALL
	33	UNUSED						ALL
	34		W1240	031	24		33-22-11	ALL
	35		W1240	027	24		33-22-11	ALL
	36		W1240	030	24		33-22-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D01600

Page 11

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01650		1541/250/R060		RCPT-P22 (continued)				050-099
D01650		P022-00/ /		RCPT-P22 (continued)				150-199
D01650		1540/253/R054		RCPT-P22 (continued)				275-299
	37		W1240	049	22		33-51-11	ALL
	38		W1240	050	20		33-51-11	ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
	56	UNUSED						ALL
	57	UNUSED						ALL
	58	UNUSED						ALL
	59		W1240	045	22		33-27-11	050-099, 150-199
	59	UNUSED						275-299
	60		W1240	120	20		33-27-11	050-099, 150-199
	60	UNUSED						275-299
	61		W1240	047	22		33-27-11	050-099, 150-199
	61	UNUSED						275-299
D01651		0447/245/L080		PLUG-				050-099, 150-199
D01651		0255/255/L010		PLUG-				275-299
	1		W0047	011	20		23-32-11	ALL
	2		W0047	012	20		23-32-11	ALL
	3		W0047	013	22		23-32-12	050-099, 150-199
	3		W0047	013	22		23-32-11	275-299
	4		W0047	014	20		23-32-11	ALL
	5		W0047	015	20		23-32-11	ALL
	6		W0047	509	24		23-32-12	050-099, 150-199

HOOKUP LIST

D280T132

91-21-51

Section D01600

Page 12

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01651		0447/245/L080		PLUG- (continued)				050-099, 150-199
D01651		0255/255/L010		PLUG- (continued)				275-299
	6	UNUSED						275-299
	7	UNUSED						ALL
	8		W0047	018	24		23-32-12	050-099, 150-199
	8		W0047	553R	24		23-32-13	275-299
	9		W0047	018Z			23-32-12	050-099, 150-199
	9		W0047	553B	24		23-32-13	275-299
	10		W0047	020	24		23-32-12	050-099, 150-199
	10		W0047	554R	24		23-32-13	275-299
	11		W0047	020Z			23-32-12	050-099, 150-199
	11		W0047	554B	24		23-32-13	275-299
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19		W0047	016	24		23-32-12	050-099, 150-199
	19		W0047	016	24		23-32-11	275-299
	20		W0047	017	24		23-32-12	050-099, 150-199
	20	UNUSED						275-299
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						050-099, 150-199
	24		W0047	FRM			23-32-13	275-299
	DED		W0047	011Z			23-32-11	050-099, 150-199
			W0047	553Z			23-32-13	275-299
			W0047	554Z			23-32-13	275-299
			W0047	FRM			23-32-13	275-299
D01652		1360/203/L092		PLUG-				ALL
	1		W0788	003	20		33-51-11	ALL
	2		W0788	647	20		33-51-11	050-099, 150-199
	2		W0788	002	20		33-51-11	275-299
	3		W0788	006	22		33-51-11	ALL
	4		W0788	648	20		33-51-11	050-099, 150-199
	4		W0788	005	22		33-51-11	275-299
	5		W0788	001	22		33-51-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D01600

Page 13

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01652		1360/203/L092		PLUG- (continued)				ALL
	6		W0788	001	22		33-51-11	ALL
	7		W0788	004	20		33-51-11	ALL
	8		W0788	007	22		33-51-11	ALL
	9	DK	W0788	600	18		33-51-13	050-099
	9		W0788	015	22		33-51-13	150-199, 275-299
	10		W0788	014	22		33-51-13	ALL
	11		W0788	013	20		33-51-13	ALL
	12	DK	W0788	012	18		33-51-13	ALL
	13	UNUSED						050-099, 150-199
	13		W0788	119	20		33-51-17	275-299
	14	DK	W0788	010	18		33-51-13	ALL
	15		W0788	009	20		33-51-13	ALL
	16	UNUSED						050-099, 150-199
	16	DK	W0788	008	18		33-51-13	275-299
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20		W0788	040	22		33-51-13	ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24		W0788	040	22		33-51-13	ALL
D01653		0447/245/L080		PLUG-COAXIAL				050-099, 150-199
D01653		0255/255/L010		PLUG-COAXIAL				275-299
	= A1		W0047	02CX			23-32-13	ALL
	= C1		W0047	02CO			23-32-13	ALL
D01655		P005-00/ /		PLUG-				ALL
	1		W0863	043	20		33-13-16	050-099, 150-199
	1	UNUSED						275-299
	2		W0863	044	20		33-13-16	050-099, 150-199
	2	UNUSED						275-299
	3		W0863	009	22		33-16-17	ALL
	4		W0863	010	22		33-16-17	ALL
	5		W0863	008	24		23-32-12	ALL
	6		W0863	067	22		23-24-11	050-099, 150-199
	6	UNUSED						275-299
	7		W0863	066	22		23-24-11	050-099, 150-199
	7	UNUSED						275-299

HOOKUP LIST
D280T132

91-21-51
Section D01600
Page 14
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01655		P005-00/ /		PLUG- (continued)				ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	DED		W0863	009Z			33-16-17	ALL
	DED		W0863	010Z			33-16-17	ALL
D01656		0154/268/L020		PLUG-				ALL
	=1		W0622	A-A			30-41-11	ALL
	=2	UNUSED						ALL
D01658		0154/268/L020		PLUG-				ALL
	=1		W0622	A-B			30-41-11	ALL
	=2	UNUSED						ALL
D01660		0154/268/L020		PLUG-				ALL
	=1		W0622	A-C			30-41-11	ALL
	=2	UNUSED						ALL
D01662		0212/268/R060		PLUG-				ALL
	=1		W0622	A-P			30-41-11	ALL
	=2	UNUSED						ALL
D01666		0154/268/R020		PLUG-				ALL
	=1		W0624	A-A			30-41-12	ALL
	=2	UNUSED						ALL
D01668		0154/268/R020		PLUG-				ALL
	=1		W0624	A-B			30-41-12	ALL
	=2	UNUSED						ALL
D01669		P003-01/ /		PLUG-				ALL
	1	DK	W0011	667	18		33-13-13	ALL
	2	DK	W0011	671	18		33-13-13	ALL
	3		W0011	261R	22		22-31-12	ALL
	4		W0011	261B	22		22-31-12	ALL
	5		W0011	260R	24		22-31-12	ALL
	6		W0011	260B	24		22-31-12	ALL

HOOKUP LIST

D280T132

91-21-51

Section D01600

Page 15

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01669		P003-01/ /		PLUG- (continued)				ALL
	7		W0011	262B	24		22-31-12	ALL
	8		W0011	262R	24		22-31-12	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26		W0011	263R	24		22-32-11	ALL
	27		W0011	263B	24		22-32-11	ALL
	28		W0011	242R	24		22-32-12	ALL
	29		W0011	242B	24		22-32-12	ALL
	30	UNUSED						ALL
	31		W0011	603	20		22-31-12	ALL
	DED		W0011	263Z			22-32-11	ALL
			W0011	242	20		22-32-12	ALL
			W0011	242Z			22-32-12	ALL
D01670		0154/268/R020		PLUG-				ALL
	=1		W0624	A-C			30-41-12	ALL
	=2	UNUSED						ALL
D01671		SHELF/E02/05		PLUG-				275-299
	A1		W0149	240R	24		23-31-12	275-299
	A2		W0149	147	24		23-31-12	275-299
	A3		W0149	030R	24		23-32-12	275-299
	B1		W0149	240B	24		23-31-12	275-299
	B2		W0149	147Z			23-31-12	275-299
	B3		W0149	030B	24		23-32-12	275-299

HOOKUP LIST
D280T132

91-21-51
Section D01600
Page 16
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01671		SHELF/E02/05		PLUG- (continued)				275-299
	X1		W0149	141	20		23-31-12	275-299
	X2		W0149	142	24		23-31-12	275-299
	DED		W0149	030Z			23-32-12	275-299
	DED		W0149	141Z			23-31-12	275-299
	DED		W0149	240Z			23-31-12	275-299
D01672		0212/268/L060		PLUG-				ALL
	=1		W0624	A-H			30-41-12	ALL
	=2	UNUSED						ALL
D01673		0447/245/L080		PLUG-				050-099, 150-199
D01673		0255/262/L010		PLUG-				275-299
	1		W0047	001	20		23-32-11	ALL
	2		W0047	002	20		23-32-11	ALL
	3		W0047	003	22		23-32-12	050-099, 150-199
	3		W0047	003	22		23-32-11	275-299
	4		W0047	004	20		23-32-11	ALL
	5		W0047	005	20		23-32-11	ALL
	6		W0047	508	24		23-32-12	050-099, 150-199
	6	UNUSED						275-299
	7	UNUSED						ALL
	8		W0047	008	24		23-32-12	050-099, 150-199
	8		W0047	551R	24		23-32-13	275-299
	9		W0047	008Z			23-32-12	050-099, 150-199
	9		W0047	551B	24		23-32-13	275-299
	10		W0047	010	24		23-32-12	050-099, 150-199
	10		W0047	552R	24		23-32-13	275-299
	11		W0047	010Z			23-32-12	050-099, 150-199
	11		W0047	552B	24		23-32-13	275-299
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19		W0047	006	24		23-32-12	050-099, 150-199
	19		W0047	006	24		23-32-11	275-299
	20		W0047	007	24		23-32-12	050-099, 150-199
	20	UNUSED						275-299

HOOKUP LIST

D280T132

91-21-51

Section D01600

Page 17

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01673		0447/245/L080		PLUG- (continued)				050-099, 150-199
D01673		0255/262/L010		PLUG- (continued)				275-299
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						050-099, 150-199
	24		W0047	FRL			23-32-13	275-299
	DED		W0047	001Z			23-32-11	050-099, 150-199
			W0047	551Z			23-32-13	275-299
			W0047	552Z			23-32-13	275-299
			W0047	FRL			23-32-13	275-299
D01675		0447/245/L080		PLUG-COAXIAL				050-099, 150-199
D01675		0255/262/L010		PLUG-COAXIAL				275-299
	= A1		W0047	01CX			23-32-13	ALL
	= C1		W0047	01CO			23-32-13	ALL
D01678		P005-00/ /		PLUG-P5				ALL
	1	UNUSED						ALL
	2	UNUSED						050-099
	2		W0062	59A	22		SPARE	150-199, 275-299
	3		W0062	05C	22		33-16-17	ALL
	4		W0062	05D	22		33-16-17	ALL
	5		W0062	05E	22		52-71-11	ALL
	6		W0062	05F	22		52-71-12	ALL
	7		W0062	05G	22		52-71-13	ALL
	8		W0062	05H	22		52-71-14	ALL
	9		W0062	05J	22		30-31-21	ALL
	10		W0062	05K	22		30-32-21	ALL
	11		W0062	05L	22		30-31-23	ALL
	12	UNUSED						050-099, 275-299
	12		W0062	05M	22		SPARE	150-199
	13		W0062	05N	22		27-61-12	ALL
	14		W0062	05P	22		27-62-11	ALL
	15	UNUSED						ALL
	DED		W0062	05CZ			33-16-17	ALL
	DED		W0062	05DZ			33-16-17	ALL
	DED		W0062	05NZ			27-61-12	ALL
	DED		W0062	05MZ			SPARE	150-199

HOOKUP LIST

D280T132

91-21-51

Section D01600

Page 18

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01684		P035-00/ /		RELAY SOCKET-				ALL
	A1		W1066	872	22		25-53-14	050-099
	A1		W1066	33X	22		25-53-14	150-199, 275-299
	A2		W1066	871	22		25-53-14	ALL
	A3	UNUSED						ALL
	B1	UNUSED						050-099
	B1		W1066	872	22		25-53-14	150-199, 275-299
	B2	UNUSED						050-099
	B2		W1066	33W	22		25-53-14	150-199, 275-299
	B3	UNUSED						ALL
	X1		W1066	514	22		25-53-14	ALL
	X2		W1066	873	22		25-53-14	ALL
D01685		0175/202/L011		RCPT-				ALL
	1		W0695	001	22		31-31-15	ALL
	2		W0695	201R	24		31-31-15	050-099, 150-156, 162-166, 275-276
	2		W0695	301R	24		31-31-15	157, 167-199, 277-299
	3		W0695	201B	24		31-31-15	050-099, 150-156, 162-166, 275-276
	3		W0695	301B	24		31-31-15	157, 167-199, 277-299
	4		W0695	004	20		31-31-15	050-099, 150-156, 162-166, 275-276
	4		W0695	301Y	24		31-31-15	157, 167-199, 277-299
	5		W0695	005	20		31-31-15	ALL
D01686		P035-00/ /		RELAY SOCKET-				ALL
	A1		W1066	875	22		25-53-14	050-099
	A1		W1066	34D	22		25-53-14	150-199, 275-299
	A2		W1066	874	22		25-53-14	ALL
	A3	UNUSED						ALL
	B1	UNUSED						050-099
	B1		W1066	875	22		25-53-14	150-199, 275-299
	B2	UNUSED						050-099
	B2		W1066	34C	22		25-53-14	150-199, 275-299
	B3	UNUSED						ALL
	X1		W1066	515	22		25-53-14	ALL
	X2		W1066	876	22		25-53-14	ALL
D01687		0213/190/L043		RCPT-				ALL
	1		W0695	002	22		31-31-15	ALL
	2		W0695	202R	24		31-31-15	ALL
	3		W0695	202B	24		31-31-15	ALL

HOOKUP LIST
D280T132

91-21-51
Section D01600
Page 19
Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01687		0213/190/L043		RCPT- (continued)				ALL
	4		W0695	006	20		31-31-15	ALL
	5		W0695	007	20		31-31-15	ALL
D01689		0180/197/L020		RCPT-				ALL
	1		W0695	003	22		31-31-15	ALL
	2		W0695	203R	24		31-31-15	050-099, 150-156, 162-166, 275-276
	2		W0695	302R	24		31-31-15	157, 167-199, 277-299
	3		W0695	203B	24		31-31-15	050-099, 150-156, 162-166, 275-276
	3		W0695	302B	24		31-31-15	157, 167-199, 277-299
	4		W0695	008	20		31-31-15	050-099, 150-156, 162-166, 275-276
	4		W0695	302Y	24		31-31-15	157, 167-199, 277-299
	5		W0695	009	20		31-31-15	ALL
D01697		447/245/L 80		PLUG-				050-099, 150-199
	1	UNUSED						050-099, 150-199
	2	UNUSED						050-099, 150-199
	3	UNUSED						050-099, 150-199
	4		W0047	040	20		23-32-11	050-099, 150-199
	5		W0047	041	20		23-32-11	050-099, 150-199
	6	UNUSED						050-099, 150, 153-199
	6		W0047	036	22		23-32-12	151-152
	7	UNUSED						050-099, 150, 153-199
	7		W0047	034	24		23-32-12	151-152
	8	UNUSED						050-099, 150, 153-199
	8		W0047	035	24		23-32-12	151-152
	9	UNUSED						050-099, 150-199
	10	UNUSED						050-099, 150-199
	11	UNUSED						050-099, 150-199
	12		W0047	038	20		23-32-11	050-099, 150-199
	13		W0047	039	20		23-32-11	050-099, 150-199
	14	UNUSED						050-099, 150-199
	15	UNUSED						050-099, 150-199
	16	UNUSED						050-099, 150-199
	17	UNUSED						050-099, 150, 153-199
	17		W0047	037	24		23-32-12	151-152
	18	UNUSED						050-099, 150, 153-199
	18		W0047	037Z			23-32-12	151-152
	19	UNUSED						050-099, 150-199
	20	UNUSED						050-099, 150-199
	21	UNUSED						050-099, 150-199

HOOKUP LIST
D280T132

91-21-51
Section D01600
Page 20
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01697		447/245/L 80		PLUG- (continued)				050-099, 150-199
	22	UNUSED						050-099, 150-199
	23	UNUSED						050-099, 150-199
	24	UNUSED						050-099, 150-199
	25	UNUSED						050-099, 150-199
	26	UNUSED						050-099, 150-199
	27	UNUSED						050-099, 150-199
	28	UNUSED						050-099, 150-199
	29	UNUSED						050-099, 150-199
	30	UNUSED						050-099, 150-199
	31	UNUSED						050-099, 150-199
	32	UNUSED						050-099, 150-199
	A29		W0047	07CX			23-32-13	151-152
	A30		W0047	06CX			23-32-13	151-152
	C29	UNUSED						050-099, 150, 153-199
	C30	UNUSED						050-099, 150, 153-199
	C31	UNUSED						050-099, 150-199
	C32	UNUSED						050-099, 150-199
	= C29		W0047	07CO			23-32-13	151-152
	= C30		W0047	06CO			23-32-13	151-152
	DED		W0047	038Z			23-32-11	050-099, 150-199

HOOKUP LIST

D280T132

91-21-51

Section D01600

Page 21 End

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01706		WHEEL/01/L GR		PLUG-				ALL
	1	4L	W0676	451W	18		32-46-11	ALL
	2	UNUSED						ALL
D01708	3	4H	W0676	451G	18		32-46-11	ALL
		WHEEL/03/R GR		PLUG-				ALL
	1	4L	W0686	451W	18		32-46-11	ALL
D01710	2	UNUSED						ALL
	3	4H	W0686	451G	18		32-46-11	ALL
		WHEEL/02/L GR		PLUG-				ALL
D01712	1	4L	W0676	452W	18		32-46-11	ALL
	2	UNUSED						ALL
	3	4H	W0676	452G	18		32-46-11	ALL
D01714		WHEEL/04/R GR		PLUG-				ALL
	1	4L	W0686	452W	18		32-46-11	ALL
	2	UNUSED						ALL
D01716	3	4H	W0686	452G	18		32-46-11	ALL
		WHEEL/05/L GR		PLUG-				ALL
	1	4L	W0668	451W	18		32-46-11	ALL
D01718	2	UNUSED						ALL
	3	4H	W0668	451G	18		32-46-11	ALL
		WHEEL/07/R GR		PLUG-				ALL
D01720	1	4L	W0688	452W	18		32-46-11	ALL
	2	UNUSED						ALL
	3	4H	W0688	452G	18		32-46-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D01700

Page 1

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01721		1815/268/L020		PLUG-				ALL
	1		W0591	007	16		27-32-31	ALL
	2		W0591	006	16		27-32-31	ALL
	3		W0591	008	16		27-32-31	ALL
	4		W0591	009	16		27-32-31	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
D01722		P033-00/ /		RELAY SOCKET-P37				ALL
	A1	UNUSED						ALL
	A2		W0144	792	24		36-11-41	ALL
	A3		W0144	791	24		36-11-41	ALL
	B1	UNUSED						ALL
	B2	UNUSED						ALL
	B3	UNUSED						ALL
	C1		W0144	021	24		36-11-51	ALL
	C2		W0144	01N	20		36-11-51	ALL
	C3	UNUSED						ALL
	D1		W0144	01Q	24		36-11-41	ALL
	D2		W0144	01P	24		36-11-41	ALL
	D3	UNUSED						ALL
	X1		W0144	01L	22		36-11-51	ALL
	X2		W0144	01M	22		36-11-51	ALL
D01723		P036-00/ /		RELAY SOCKET-				ALL
	A1		W0176	250R	24		34-61-15	ALL
	A2		W0176	251R	24		34-61-15	ALL
	A3		W0176	252R	24		34-61-15	ALL
	B1		W0176	250B	24		34-61-15	ALL
	B2		W0176	251B	24		34-61-15	ALL
	B3		W0176	252B	24		34-61-15	ALL
	C1	UNUSED						ALL
	C2	UNUSED						ALL
	C3	UNUSED						ALL
	D1	UNUSED						ALL
	D2	UNUSED						ALL
	D3	UNUSED						ALL
	X1		W0176	07N	24		34-61-15	ALL
	X2		W0176	07P	20		34-61-15	ALL

HOOKUP LIST

D280T132

91-21-51

Section D01700

Page 2

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01723		P036-00/ /		RELAY SOCKET- (continued)				ALL
	DED		W0176	250Z			34-61-15	ALL
	DED		W0176	251Z			34-61-15	ALL
	DED		W0176	252Z			34-61-15	ALL
D01724		P037-00/ /		RELAY SOCKET-				ALL
	A1	UNUSED						ALL
	A2		W0192	13L	24		36-11-41	ALL
	A3		W0192	13J	24		36-11-41	ALL
	B1		W0192	22A	22		36-11-62	050-099, 150-156, 162-166, 275-276 157, 167-199, 277-299
	B1	UNUSED						ALL
	B2	UNUSED						ALL
	B3		W0192	048	22		36-11-62	050-099, 150-156, 162-166, 275-276 157, 167-199, 277-299
	B3	UNUSED						ALL
	C1		W0192	803	24		36-11-52	ALL
	C2		W0192	01K	20		36-11-52	ALL
	C3	UNUSED						ALL
	D1		W0192	805	24		36-11-41	ALL
	D2		W0192	807	24		36-11-41	ALL
	D3	UNUSED						ALL
	X1		W0192	810	22		36-11-52	ALL
	X2		W0192	897	22		36-11-52	ALL
D01725		P037-00/ /		RELAY SOCKET-P37				ALL
	A1		W0192	215R	24		34-61-25	ALL
	A2		W0192	216R	24		34-61-25	ALL
	A3		W0192	214R	24		34-61-25	ALL
	B1		W0192	215B	24		34-61-25	ALL
	B2		W0192	216B	24		34-61-25	ALL
	B3		W0192	214B	24		34-61-25	ALL
	C1	UNUSED						ALL
	C2	UNUSED						ALL
	C3	UNUSED						ALL
	D1	UNUSED						ALL
	D2	UNUSED						ALL
	D3	UNUSED						ALL
	X1		W0192	13C	24		34-61-25	ALL
	X2		W0192	13D	20		34-61-25	ALL
	DED		W0192	214Z			34-61-25	ALL
	DED		W0192	215Z			34-61-25	ALL
	DED		W0192	216Z			34-61-25	ALL

HOOKUP LIST
D280T132

91-21-51
Section D01700
Page 3
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01726		P037-00/ /		RELAY SOCKET-P37				ALL
	A1	UNUSED						ALL
	A2		W0192	13N	24		36-11-41	ALL
	A3		W0192	13P	24		36-11-41	ALL
	B1	UNUSED						ALL
	B2	UNUSED						ALL
	B3	UNUSED						ALL
	C1	UNUSED						ALL
	C2	UNUSED						ALL
	C3	UNUSED						ALL
	D1	UNUSED						ALL
	D2	UNUSED						ALL
	D3	UNUSED						ALL
	X1		W0192	13R	24		36-11-41	ALL
	X2		W0192	13Q	24		36-11-41	ALL
D01735A		//		PLUG-PART OF D01735				ALL
	A01		W0133	586R	24		31-35-16	ALL
	A02		W0133	586B	24		31-35-16	ALL
	A03	UNUSED						ALL
	A04	UNUSED						ALL
	A05		W0133	153	22		31-35-16	ALL
	A06		W0133	195	24		31-35-16	ALL
	A07	UNUSED						ALL
	A08	UNUSED						ALL
	A09		W0133	170	24		31-35-16	ALL
	A10		W0133	171	24		31-35-16	ALL
	A11	UNUSED						ALL
	A12		W0133	172	24		31-35-16	ALL
	A13	UNUSED						ALL
	A14		W0133	196	24		31-35-16	ALL
	A15		W0133	197	24		31-35-16	ALL
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04	UNUSED						ALL
	B05	UNUSED						ALL
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D01700

Page 4

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01735A		//		PLUG-PART OF D01735 (continued)				ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13	UNUSED						ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	C01	UNUSED						ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05	UNUSED						ALL
	C06	UNUSED						ALL
	C07	UNUSED						ALL
	C08	UNUSED						ALL
	C09	UNUSED						ALL
	C10	UNUSED						ALL
	C11	UNUSED						ALL
	C12	UNUSED						ALL
	C13	UNUSED						ALL
	C14	UNUSED						ALL
	C15	UNUSED						ALL
	D01		W0133	588R	24		31-35-16	ALL
	D02		W0133	588B	24		31-35-16	ALL
	D03	UNUSED						ALL
	D04	UNUSED						ALL
	D05		W0133	187	24		31-35-16	ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	D08	UNUSED						ALL
	D09	UNUSED						ALL
	D10	UNUSED						ALL
	D11	UNUSED						ALL
	D12	UNUSED						ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15	UNUSED						ALL
	E01	UNUSED						ALL
	E02	UNUSED						ALL
	E03	UNUSED						ALL
	E04	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D01700
Page 5
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01735A		//		PLUG-PART OF D01735 (continued)				ALL
	E05	UNUSED						ALL
	E06	UNUSED						ALL
	E07	UNUSED						ALL
	E08	UNUSED						ALL
	E09	UNUSED						ALL
	E10	UNUSED						ALL
	E11	UNUSED						ALL
	E12	UNUSED						ALL
	E13	UNUSED						ALL
	E14	UNUSED						ALL
	E15	UNUSED						ALL
	F01	UNUSED						ALL
	F02	UNUSED						ALL
	F03	UNUSED						ALL
	F04	UNUSED						ALL
	F05	UNUSED						ALL
	F06	UNUSED						ALL
	F07	UNUSED						ALL
	F08	UNUSED						ALL
	F09	UNUSED						ALL
	F10	UNUSED						ALL
	F11	UNUSED						ALL
	F12	UNUSED						ALL
	F13	UNUSED						ALL
	F14	UNUSED						ALL
	F15	UNUSED						ALL
	G01		W0133	589R	24		31-35-16	ALL
	G02		W0133	589B	24		31-35-16	ALL
	G03	UNUSED						ALL
	G04	UNUSED						ALL
	G05		W0133	188	24		31-35-16	ALL
	G06	UNUSED						ALL
	G07	UNUSED						ALL
	G08		W0133	173	24		31-35-16	ALL
	G09		W0133	174	24		31-35-16	ALL
	G10	UNUSED						ALL
	G11	UNUSED						ALL
	G12		W0133	192	24		31-35-16	ALL
	G13	UNUSED						ALL
	G14	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D01700

Page 6

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01735A		//		PLUG-PART OF D01735 (continued)				ALL
	G15	UNUSED						ALL
	H01	UNUSED						ALL
	H02	UNUSED						ALL
	H03	UNUSED						ALL
	H04	UNUSED						ALL
	H05	UNUSED						ALL
	H06	UNUSED						ALL
	H07	UNUSED						ALL
	H08	UNUSED						ALL
	H09	UNUSED						ALL
	H10	UNUSED						ALL
	H11	UNUSED						ALL
	H12	UNUSED						ALL
	H13	UNUSED						ALL
	H14	UNUSED						ALL
	H15	UNUSED						ALL
	J01	UNUSED						ALL
	J02	UNUSED						ALL
	J03	UNUSED						ALL
	J04	UNUSED						ALL
	J05	UNUSED						ALL
	J06	UNUSED						ALL
	J07	UNUSED						ALL
	J08	UNUSED						ALL
	J09	UNUSED						ALL
	J10	UNUSED						ALL
	J11	UNUSED						ALL
	J12	UNUSED						ALL
	J13	UNUSED						ALL
	J14	UNUSED						ALL
	J15	UNUSED						ALL
	K01		W0133	587R	24		31-35-16	ALL
	K02		W0133	587B	24		31-35-16	ALL
	K03	UNUSED						ALL
	K04	UNUSED						ALL
	K05		W0133	154	22		31-35-16	ALL
	K06		W0133	193	24		31-35-16	ALL
	K07	UNUSED						ALL
	K08	UNUSED						ALL
	K09	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D01700

Page 7

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01735A		//		PLUG-PART OF D01735 (continued)				ALL
	K10	UNUSED						ALL
	K11	UNUSED						ALL
	K12	UNUSED						ALL
	K13	UNUSED						ALL
	K14	UNUSED						ALL
	K15	UNUSED						ALL
	REF		W0133	586	20		31-35-16	ALL
	REF		W0133	586Z			31-35-16	ALL
	REF		W0133	587	20		31-35-16	ALL
	REF		W0133	587Z			31-35-16	ALL
	REF		W0133	588	20		31-35-16	ALL
	REF		W0133	588Z			31-35-16	ALL
	REF		W0133	589	20		31-35-16	ALL
	REF		W0133	589Z			31-35-16	ALL
D01735B		//		PLUG-PART OF D01735				050-099
	A01	UNUSED						050-099
	A02	UNUSED						050-099
	A03	UNUSED						050-099
	A04	UNUSED						050-099
	A05	UNUSED						050-099
	A06	UNUSED						050-099
	A07	UNUSED						050-099
	A08	UNUSED						050-099
	A09	UNUSED						050-099
	A10	UNUSED						050-099
	A11	UNUSED						050-099
	A12	UNUSED						050-099
	A13	UNUSED						050-099
	A14	UNUSED						050-099
	A15	UNUSED						050-099
	B01	UNUSED						050-099
	B02	UNUSED						050-099
	B03	UNUSED						050-099
	B04	UNUSED						050-099
	B05	UNUSED						050-099
	B06	UNUSED						050-099
	B07	UNUSED						050-099
	B08	UNUSED						050-099
	B09	UNUSED						050-099

HOOKUP LIST

D280T132

91-21-51

Section D01700

Page 8

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01735B		//		PLUG-PART OF D01735 (continued)				050-099
	B10	UNUSED						050-099
	B11	UNUSED						050-099
	B12	UNUSED						050-099
	B13	UNUSED						050-099
	B14	UNUSED						050-099
	B15	UNUSED						050-099
	C01	UNUSED						050-099
	C02	UNUSED						050-099
	C03	UNUSED						050-099
	C04	UNUSED						050-099
	C05	UNUSED						050-099
	C06	UNUSED						050-099
	C07	UNUSED						050-099
	C08	UNUSED						050-099
	C09	UNUSED						050-099
	C10	UNUSED						050-099
	C11	UNUSED						050-099
	C12	UNUSED						050-099
	C13	UNUSED						050-099
	C14	UNUSED						050-099
	C15	UNUSED						050-099
	D01	UNUSED						050-099
	D02	UNUSED						050-099
	D03	UNUSED						050-099
	D04	UNUSED						050-099
	D05	UNUSED						050-099
	D06	UNUSED						050-099
	D07	UNUSED						050-099
	D08	UNUSED						050-099
	D09	UNUSED						050-099
	D10	UNUSED						050-099
	D11	UNUSED						050-099
	D12	UNUSED						050-099
	D13	UNUSED						050-099
	D14	UNUSED						050-099
	D15	UNUSED						050-099
	E01	UNUSED						050-099
	E02	UNUSED						050-099
	E03	UNUSED						050-099
	E04	UNUSED						050-099

HOOKUP LIST

D280T132

91-21-51

Section D01700

Page 9

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01735B		//		PLUG-PART OF D01735 (continued)				050-099
	E05	UNUSED						050-099
	E06	UNUSED						050-099
	E07	UNUSED						050-099
	E08	UNUSED						050-099
	E09	UNUSED						050-099
	E10	UNUSED						050-099
	E11	UNUSED						050-099
	E12	UNUSED						050-099
	E13	UNUSED						050-099
	E14	UNUSED						050-099
	E15	UNUSED						050-099
	F01	UNUSED						050-099
	F02	UNUSED						050-099
	F03	UNUSED						050-099
	F04	UNUSED						050-099
	F05	UNUSED						050-099
	F06	UNUSED						050-099
	F07	UNUSED						050-099
	F08	UNUSED						050-099
	F09	UNUSED						050-099
	F10	UNUSED						050-099
	F11	UNUSED						050-099
	F12	UNUSED						050-099
	F13	UNUSED						050-099
	F14	UNUSED						050-099
	F15	UNUSED						050-099
	G01	UNUSED						050-099
	G02	UNUSED						050-099
	G03	UNUSED						050-099
	G04	UNUSED						050-099
	G05	UNUSED						050-099
	G06	UNUSED						050-099
	G07	UNUSED						050-099
	G08	UNUSED						050-099
	G09	UNUSED						050-099
	G10	UNUSED						050-099
	G11	UNUSED						050-099
	G12	UNUSED						050-099
	G13	UNUSED						050-099
	G14	UNUSED						050-099

HOOKUP LIST

D280T132

91-21-51

Section D01700

Page 10

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01735B		//		PLUG-PART OF D01735 (continued)				050-099
	G15	UNUSED						050-099
	H01	UNUSED						050-099
	H02	UNUSED						050-099
	H03	UNUSED						050-099
	H04	UNUSED						050-099
	H05	UNUSED						050-099
	H06	UNUSED						050-099
	H07	UNUSED						050-099
	H08	UNUSED						050-099
	H09	UNUSED						050-099
	H10	UNUSED						050-099
	H11	UNUSED						050-099
	H12	UNUSED						050-099
	H13	UNUSED						050-099
	H14	UNUSED						050-099
	H15	UNUSED						050-099
	J01	UNUSED						050-099
	J02	UNUSED						050-099
	J03	UNUSED						050-099
	J04	UNUSED						050-099
	J05	UNUSED						050-099
	J06	UNUSED						050-099
	J07	UNUSED						050-099
	J08	UNUSED						050-099
	J09	UNUSED						050-099
	J10	UNUSED						050-099
	J11	UNUSED						050-099
	J12	UNUSED						050-099
	J13	UNUSED						050-099
	J14	UNUSED						050-099
	J15	UNUSED						050-099
	K01	UNUSED						050-099
	K02	UNUSED						050-099
	K03	UNUSED						050-099
	K04	UNUSED						050-099
	K05	UNUSED						050-099
	K06	UNUSED						050-099
	K07	UNUSED						050-099
	K08	UNUSED						050-099
	K09	UNUSED						050-099

HOOKUP LIST

D280T132

91-21-51

Section D01700

Page 11

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01735B		//		PLUG-PART OF D01735 (continued)				050-099
	K10	UNUSED						050-099
	K11	UNUSED						050-099
	K12	UNUSED						050-099
	K13	UNUSED						050-099
	K14	UNUSED						050-099
	K15	UNUSED						050-099
D01735C		//		PLUG-PART OF D01735				ALL
	1		W0133	164	22		31-35-16	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W0133	168	22		31-35-16	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	=C12	UNUSED						ALL
	=C13	UNUSED						ALL
D01736		P036-00/ /		RELAY SOCKET-				ALL
	A1		W0176	798	20		32-09-11	ALL
	A2		W0176	519	24		32-09-11	ALL
	A3	UNUSED						ALL
	B1	UNUSED						ALL
	B2	UNUSED						ALL
	B3	UNUSED						ALL
	C1	UNUSED						ALL
	C2	UNUSED						ALL
	C3	UNUSED						ALL
	D1	UNUSED						ALL
	D2	UNUSED						ALL
	D3	UNUSED						ALL
	X1		W0176	04B	24		32-09-11	ALL
	X2		W0176	04C	24		32-09-11	ALL

HOOKUP LIST
D280T132

91-21-51
Section D01700
Page 12
Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01741								050-099
	REF	Y	W0045	884	22		38-32-11	050-099
D01746J		J00003/LWR/L GR		RCPT-				ALL
	1		W0670	201R	18		32-61-11	ALL
	2		W0670	201B	18		32-61-11	ALL
	3	UNUSED						ALL
D01746P		//		PLUG - VENDOR PIGTAIL				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
D01748J		J00003/LWR/L GR		RCPT-				ALL
	1		W0670	202R	18		32-61-11	ALL
	2		W0670	202B	18		32-61-11	ALL
	3	UNUSED						ALL
D01748P		//		PLUG - VENDOR PIGTAIL				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
D01750J		J00003/LWR/L GR		RCPT-				ALL
	1		W0674	201R	18		32-61-11	ALL
	2		W0674	201B	18		32-61-11	ALL
	3	UNUSED						ALL
D01750P		//		PLUG - VENDOR PIGTAIL				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
D01752J		J00003/LWR/L GR		RCPT-				ALL
	1		W0674	202R	18		32-61-11	ALL
	2		W0674	202B	18		32-61-11	ALL
	3	UNUSED						ALL
D01752P		//		PLUG - VENDOR PIGTAIL				ALL
	1	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D01700

Page 13

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01752P		//		PLUG - VENDOR PIGTAIL (continued)				ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
D01754J		NOSE/ /GEAR		RCPT-				ALL
	1		W0678	202R	18		32-09-11	ALL
	2		W0678	202B	18		32-09-11	ALL
	3	UNUSED						ALL
D01754P		NOSE-/ /GEAR		PLUG PROX SNSR-NOSE GEAR NOT CPRS,SYS 1				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
D01756J		NOSE/ /GEAR		RCPT-				ALL
	1		W0678	201R	18		32-09-12	ALL
	2		W0678	201B	18		32-09-12	ALL
	3	UNUSED						ALL
D01756P		NOSE/ /GEAR		PLUG PROX SNSR-NOSE GEAR NOT CPRS,SYS 2				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
D01758		P019-00/ /		RELAY SOCKET-P19				050-099
D01758		P019-00/ /		RELAY SOCKET-				150-199, 275-299
	A1	UNUSED						ALL
	A2		W1060	048	22		33-22-41	ALL
	A3		W1060	046	22		33-22-41	ALL
	B1	UNUSED						ALL
	B2	UNUSED						ALL
	B3	UNUSED						ALL
	X1		W1060	050	22		33-22-41	ALL
	X2		W1060	049	20		33-22-41	ALL
D01760		0287/290/L070		PLUG-				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D01700

Page 14

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01760		0287/290/L070		PLUG- (continued)				ALL
	5		W1228	052	22		33-22-41	ALL
	6	UNUSED						ALL
	7		W1228	053	20		33-22-41	ALL
	8		W1228	054	22		33-22-41	ALL
	9		W1228	055	22		33-22-41	ALL
	10		W1228	056	22		33-22-41	ALL
	11		W1228	057	22		33-22-41	ALL
	12		W1228	058	22		33-22-41	ALL
D01762		0336/288/R006		PLUG-				050-099
D01762		0330/288/R006		PLUG-				150-199, 275-299
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W0114	001	22		33-22-41	ALL
	6	UNUSED						ALL
	7		W0114	024	22		33-22-41	ALL
	8		W0114	003	22		33-22-41	ALL
	9		W0114	004	22		33-22-41	ALL
	10		W0114	005	22		33-22-41	ALL
	11		W0114	006	22		33-22-41	ALL
	12		W0114	007	22		33-22-41	ALL
D01764		0336/288/L006		PLUG-				050-099
D01764		0330/288/L006		PLUG-				150-199, 275-299
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W0114	025	22		33-22-41	ALL
	6	UNUSED						ALL
	7		W0114	026	22		33-22-41	ALL
	8		W0114	009	22		33-22-41	ALL
	9		W0114	C-A			33-22-41	ALL
	10		W0114	C-B			33-22-41	ALL
	11		W0114	C-C			33-22-41	ALL
	12		W0114	C-D			33-22-41	ALL

HOOKUP LIST

D280T132

91-21-51

Section D01700

Page 15

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01766		0336/288/0000		PLUG-				050-099
D01766		0330/288/0000		PLUG-				150-199, 275-299
	1	UNUSED						ALL
	2		W0114	E-C			33-22-41	ALL
	3		W0114	E-D			33-22-41	ALL
	4	UNUSED						ALL
	5		W0114	014	22		33-22-41	ALL
	6	UNUSED						ALL
	7		W0114	027	22		33-22-41	ALL
	8		W0114	018	22		33-22-41	ALL
	9		W0114	B-C			33-22-41	ALL
	10		W0114	B-D			33-22-41	ALL
	11		W0114	015	22		33-22-41	ALL
	12		W0114	019	22		33-22-41	ALL
D01768		0821/284/L004		PLUG				275-299
	1	UNUSED						275-299
	2	UNUSED						275-299
	3	UNUSED						275-299
	4	UNUSED						275-299
	5		W0110	039	22		33-22-42	275-299
	6	UNUSED						275-299
	7		W0110	035	22		33-22-42	275-299
	8		W0110	050	22		33-22-42	275-299
	9		W0110	032	22		33-22-42	275-299
	10		W0110	033	22		33-22-42	275-299
	11		W0110	031	22		33-22-42	275-299
	12		W0110	034	22		33-22-42	275-299
D01769A		//		PLUG- PART OF D01769				ALL
	A01	UNUSED						ALL
	A02	UNUSED						ALL
	A03		W0133	084	24		31-35-11	ALL
	A04	UNUSED						ALL
	A05	UNUSED						ALL
	A06	UNUSED						ALL
	A07	UNUSED						ALL
	A08		W0133	563R	24		31-35-12	ALL
	A09		W0133	260R	24		31-35-11	ALL
	A10		W0133	584R	24		31-35-13	ALL

HOOKUP LIST

D280T132

91-21-51

Section D01700

Page 16

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01769A		//		PLUG- PART OF D01769 (continued)				ALL
	A11	UNUSED						ALL
	A12		W0133	571R	24		31-35-12	ALL
	A13		W0133	565R	24		31-35-12	ALL
	A14		W0133	573R	24		31-35-12	ALL
	A15		W0133	548R	24		31-35-12	ALL
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04	UNUSED						ALL
	B05	UNUSED						ALL
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	B08		W0133	563B	24		31-35-12	ALL
	B09		W0133	260B	24		31-35-11	ALL
	B10		W0133	584B	24		31-35-13	ALL
	B11	UNUSED						ALL
	B12		W0133	571B	24		31-35-12	ALL
	B13		W0133	565B	24		31-35-12	ALL
	B14		W0133	573B	24		31-35-12	ALL
	B15		W0133	548B	24		31-35-12	ALL
	C01	UNUSED						ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05	UNUSED						ALL
	C06	UNUSED						ALL
	C07	UNUSED						ALL
	C08		W0133	585R	24		31-35-13	ALL
	C09		W0133	586R	24		31-35-16	ALL
	C10		W0133	549R	24		31-35-12	ALL
	C11	UNUSED						ALL
	C12		W0133	519R	24		31-25-11	ALL
	C13	UNUSED						ALL
	C14		W0133	543R	24		31-35-12	ALL
	C15	UNUSED						ALL
	D01	UNUSED						ALL
	D02	UNUSED						ALL
	D03	UNUSED						ALL
	D04	UNUSED						ALL
	D05	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D01700

Page 17

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01769A		//		PLUG- PART OF D01769 (continued)				ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	D08		W0133	585B	24		31-35-13	ALL
	D09		W0133	586B	24		31-35-16	ALL
	D10		W0133	549B	24		31-35-12	ALL
	D11	UNUSED						ALL
	D12		W0133	519B	24		31-25-11	ALL
	D13	UNUSED						ALL
	D14		W0133	543B	24		31-35-12	ALL
	D15	UNUSED						ALL
	E01	UNUSED						ALL
	E02	UNUSED						ALL
	E03	UNUSED						ALL
	E04	UNUSED						ALL
	E05	UNUSED						ALL
	E06	UNUSED						ALL
	E07	UNUSED						ALL
	E08		W0133	562R	24		31-35-12	ALL
	E09	UNUSED						ALL
	E10		W0133	717R	24		31-35-14	ALL
	E11	UNUSED						ALL
	E12		W0133	530R	24		23-22-12	ALL
	E13		W0133	570R	24		31-35-12	ALL
	E14		W0133	550R	24		31-35-12	ALL
	E15	UNUSED						ALL
	F01	UNUSED						ALL
	F02	UNUSED						ALL
	F03	UNUSED						ALL
	F04	UNUSED						ALL
	F05	UNUSED						ALL
	F06	UNUSED						ALL
	F07	UNUSED						ALL
	F08		W0133	562B	24		31-35-12	ALL
	F09	UNUSED						ALL
	F10		W0133	717B	24		31-35-14	ALL
	F11	UNUSED						ALL
	F12		W0133	530B	24		23-22-12	ALL
	F13		W0133	570B	24		31-35-12	ALL
	F14		W0133	550B	24		31-35-12	ALL
	F15	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D01700

Page 18

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01769A		//		PLUG- PART OF D01769 (continued)				ALL
	G01	UNUSED						ALL
	G02		W0133	686	22		31-35-11	ALL
	G03	UNUSED						ALL
	G04	UNUSED						ALL
	G05	UNUSED						ALL
	G06	UNUSED						ALL
	G07	UNUSED						ALL
	G08		W0133	542R	24		31-35-12	ALL
	G09		W0133	541R	24		31-35-11	ALL
	G10		W0133	561R	24		31-35-12	ALL
	G11		W0133	559R	24		31-35-11	ALL
	G12		W0133	582R	24		31-35-13	ALL
	G13		W0133	270R	24		31-35-11	ALL
	G14		W0133	544R	24		31-35-12	ALL
	G15	UNUSED						ALL
	H01		W0133	728	22		31-35-11	ALL
	H02		W0133	752	24		31-35-11	ALL
	H03	UNUSED						ALL
	H04	UNUSED						ALL
	H05	UNUSED						ALL
	H06	UNUSED						ALL
	H07	UNUSED						ALL
	H08		W0133	542B	24		31-35-12	ALL
	H09		W0133	541B	24		31-35-11	ALL
	H10		W0133	561B	24		31-35-12	ALL
	H11		W0133	559B	24		31-35-11	ALL
	H12		W0133	582B	24		31-35-13	ALL
	H13		W0133	270B	24		31-35-11	ALL
	H14		W0133	544B	24		31-35-12	ALL
	H15	UNUSED						ALL
	J01	UNUSED						ALL
	J02	UNUSED						ALL
	J03	UNUSED						ALL
	J04	UNUSED						ALL
	J05	UNUSED						ALL
	J06	UNUSED						ALL
	J07	UNUSED						ALL
	J08		W0133	581R	24		31-35-13	ALL
	J09		W0133	556R	24		31-35-11	ALL
	J10		W0133	566R	24		31-35-12	ALL

HOOKUP LIST

D280T132

91-21-51

Section D01700

Page 19

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01769A		//		PLUG- PART OF D01769 (continued)				ALL
	J11	UNUSED						ALL
	J12		W0133	568R	24		31-35-12	ALL
	J13		W0133	567R	24		31-35-12	ALL
	J14		W0133	583R	24		31-35-13	ALL
	J15		W0133	643	22		31-35-11	ALL
	K01	UNUSED						ALL
	K02	UNUSED						ALL
	K03	UNUSED						ALL
	K04	UNUSED						ALL
	K05	UNUSED						ALL
	K06	UNUSED						ALL
	K07	UNUSED						ALL
	K08		W0133	581B	24		31-35-13	ALL
	K09		W0133	556B	24		31-35-11	ALL
	K10		W0133	566B	24		31-35-12	ALL
	K11	UNUSED						ALL
	K12		W0133	568B	24		31-35-12	ALL
	K13		W0133	567B	24		31-35-12	ALL
	K14		W0133	583B	24		31-35-13	ALL
	K15		W0133	644	22		31-35-11	ALL
	DED		W0133	519Z			31-25-11	ALL
	DED		W0133	541Z			31-35-11	ALL
	DED		W0133	542Z			31-35-12	ALL
	DED		W0133	543Z			31-35-12	ALL
	DED		W0133	544Z			31-35-12	ALL
	DED		W0133	548Z			31-35-12	ALL
	DED		W0133	549Z			31-35-12	ALL
	DED		W0133	550Z			31-35-12	ALL
	DED		W0133	559Z			31-35-11	ALL
	DED		W0133	561Z			31-35-12	ALL
	DED		W0133	562Z			31-35-12	ALL
	DED		W0133	582Z			31-35-13	ALL
	DED		W0133	583Z			31-35-13	ALL
	DED		W0133	584Z			31-35-13	ALL
	DED		W0133	585Z			31-35-13	ALL
	DED		W0133	586Z			31-35-16	ALL
	DED		W0133	270Z			31-35-11	050-099, 155-199, 275-299
	REF		W0133	260	20		31-35-11	ALL
	REF		W0133	260Z			31-35-11	ALL
	REF		W0133	530	20		23-22-12	ALL

HOOKUP LIST

D280T132

91-21-51

Section D01700

Page 20

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01769A		//		PLUG- PART OF D01769 (continued)				ALL
	REF		W0133	530Z			23-22-12	ALL
	REF		W0133	563	20		31-35-12	ALL
	REF		W0133	563Z			31-35-12	ALL
	REF		W0133	565	20		31-35-12	ALL
	REF		W0133	565Z			31-35-12	ALL
	REF		W0133	566	20		31-35-12	ALL
	REF		W0133	566Z			31-35-12	ALL
	REF		W0133	567	20		31-35-12	ALL
	REF		W0133	567Z			31-35-12	ALL
	REF		W0133	568	20		31-35-12	ALL
	REF		W0133	568Z			31-35-12	ALL
	REF		W0133	570	20		31-35-12	ALL
	REF		W0133	570Z			31-35-12	ALL
	REF		W0133	571	20		31-35-12	ALL
	REF		W0133	571Z			31-35-12	ALL
	REF		W0133	573	20		31-35-12	ALL
	REF		W0133	573Z			31-35-12	ALL
	REF		W0133	581	20		31-35-13	ALL
	REF		W0133	581Z			31-35-13	ALL
	REF		W0133	717	20		31-35-14	ALL
	REF		W0133	717Z			31-35-14	ALL
	REF		W0133	270	20		31-35-11	150-154
	REF		W0133	270Z			31-35-11	150-154
			W0133	556	20		31-35-11	ALL
			W0133	556Z			31-35-11	ALL
D01769B		//		PLUG- PART OF D01769				ALL
	A01	UNUSED						ALL
	A02	UNUSED						ALL
	A03		W0133	757	22		31-35-17	ALL
	A04		W0133	587R	24		31-35-16	ALL
	A05	UNUSED						ALL
	A06	UNUSED						ALL
	A07	UNUSED						ALL
	A08		W0133	572R	24		31-35-12	ALL
	A09	UNUSED						ALL
	A10		W0133	594R	24		31-36-11	ALL
	A11	UNUSED						ALL
	A12		W0133	546R	24		31-35-12	ALL
	A13		W0133	574R	24		31-35-12	ALL

HOOKUP LIST

D280T132

91-21-51

Section D01700

Page 21

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01769B		//		PLUG- PART OF D01769 (continued)				ALL
	A14	UNUSED						ALL
	A15	UNUSED						ALL
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04		W0133	587B	24		31-35-16	ALL
	B05	UNUSED						ALL
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	B08		W0133	572B	24		31-35-12	ALL
	B09	UNUSED						ALL
	B10		W0133	594B	24		31-36-11	ALL
	B11	UNUSED						ALL
	B12		W0133	546B	24		31-35-12	ALL
	B13		W0133	574B	24		31-35-12	ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	C01	UNUSED						ALL
	C02		W0133	759	22		31-35-17	ALL
	C03	UNUSED						ALL
	C04		W0133	588R	24		31-35-16	ALL
	C05	UNUSED						ALL
	C06	UNUSED						ALL
	C07	UNUSED						ALL
	C08		W0133	579R	24		31-35-13	ALL
	C09	UNUSED						ALL
	C10		W0133	555R	24		31-35-12	ALL
	C11	UNUSED						ALL
	C12		W0133	257R	24		34-46-11	ALL
	C13		W0133	526R	24		31-35-11	ALL
	C14		W0133	576R	24		31-35-13	ALL
	C15	UNUSED						ALL
	D01	UNUSED						ALL
	D02		W0133	760	22		31-35-17	ALL
	D03	UNUSED						ALL
	D04		W0133	588B	24		31-35-16	ALL
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	D08		W0133	579B	24		31-35-13	ALL

HOOKUP LIST

D280T132

91-21-51

Section D01700

Page 22

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01769B		//		PLUG- PART OF D01769 (continued)				ALL
	D09	UNUSED						ALL
	D10		W0133	555B	24		31-35-12	ALL
	D11	UNUSED						ALL
	D12		W0133	257B	24		34-46-11	ALL
	D13		W0133	526B	24		31-35-11	ALL
	D14		W0133	576B	24		31-35-13	ALL
	D15	UNUSED						ALL
	E01		W0133	758	22		31-35-17	ALL
	E02		W0133	761	22		31-35-17	ALL
	E03	UNUSED						ALL
	E04		W0133	589R	24		31-35-16	ALL
	E05	UNUSED						ALL
	E06	UNUSED						ALL
	E07	UNUSED						ALL
	E08	UNUSED						ALL
	E09	UNUSED						ALL
	E10		W0133	729R	24		31-35-15	ALL
	E11	UNUSED						ALL
	E12		W0133	554R	24		31-35-12	ALL
	E13		W0133	575R	24		31-35-13	ALL
	E14		W0133	552R	24		31-35-12	ALL
	E15		W0133	273R	24		31-35-11	ALL
	F01		W0133	753	22		31-35-17	050-099, 155-199, 275-299
	F01	UNUSED						150-154
	F02	UNUSED						ALL
	F03	UNUSED						ALL
	F04		W0133	589B	24		31-35-16	ALL
	F05	UNUSED						ALL
	F06	UNUSED						ALL
	F07	UNUSED						ALL
	F08	UNUSED						ALL
	F09	UNUSED						ALL
	F10		W0133	729B	24		31-35-15	ALL
	F11	UNUSED						ALL
	F12		W0133	554B	24		31-35-12	ALL
	F13		W0133	575B	24		31-35-13	ALL
	F14		W0133	552B	24		31-35-12	ALL
	F15		W0133	273B	24		31-35-11	ALL
	G01		W0133	754	22		31-35-17	ALL
	G02	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D01700

Page 23

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01769B		//		PLUG- PART OF D01769 (continued)				ALL
	G03	UNUSED						ALL
	G04	UNUSED						ALL
	G05	UNUSED						ALL
	G06	UNUSED						ALL
	G07	UNUSED						ALL
	G08		W0133	580R	24		31-35-13	ALL
	G09	UNUSED						ALL
	G10	UNUSED						ALL
	G11		W0133	271R	24		31-35-11	ALL
	G12		W0133	564R	24		31-35-12	ALL
	G13		W0133	547R	24		31-35-12	ALL
	G14		W0133	578R	24		31-35-13	ALL
	G15	UNUSED						ALL
	H01		W0133	756	22		31-35-17	ALL
	H02	UNUSED						ALL
	H03	UNUSED						ALL
	H04	UNUSED						ALL
	H05	UNUSED						ALL
	H06	UNUSED						ALL
	H07	UNUSED						ALL
	H08		W0133	580B	24		31-35-13	ALL
	H09	UNUSED						ALL
	H10	UNUSED						ALL
	H11		W0133	271B	24		31-35-11	ALL
	H12		W0133	564B	24		31-35-12	ALL
	H13		W0133	547B	24		31-35-12	ALL
	H14		W0133	578B	24		31-35-13	ALL
	H15	UNUSED						ALL
	J01	UNUSED						ALL
	J02	UNUSED						ALL
	J03	UNUSED						ALL
	J04		W0133	187	24		31-35-16	ALL
	J05	UNUSED						ALL
	J06	UNUSED						ALL
	J07	UNUSED						ALL
	J08	UNUSED						ALL
	J09	UNUSED						ALL
	J10		W0133	551R	24		31-35-12	ALL
	J11	UNUSED						ALL
	J12		W0133	553R	24		31-35-12	ALL

HOOKUP LIST

D280T132

91-21-51

Section D01700

Page 24

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01769B		//		PLUG- PART OF D01769 (continued)				ALL
	J13	UNUSED						ALL
	J14		W0133	577R	24		31-35-13	ALL
	J15		W0133	687	22		31-35-11	ALL
	K01	UNUSED						ALL
	K02	UNUSED						ALL
	K03	UNUSED						ALL
	K04		W0133	188	24		31-35-16	ALL
	K05	UNUSED						ALL
	K06	UNUSED						ALL
	K07	UNUSED						ALL
	K08	UNUSED						ALL
	K09	UNUSED						ALL
	K10		W0133	551B	24		31-35-12	ALL
	K11	UNUSED						ALL
	K12		W0133	553B	24		31-35-12	ALL
	K13	UNUSED						ALL
	K14		W0133	577B	24		31-35-13	ALL
	K15		W0133	689	22		31-35-11	ALL
	DED		W0133	257Z			34-46-11	ALL
	DED		W0133	271Z			31-35-11	ALL
	DED		W0133	546Z			31-35-12	ALL
	DED		W0133	547Z			31-35-12	ALL
	DED		W0133	551Z			31-35-12	ALL
	DED		W0133	552Z			31-35-12	ALL
	DED		W0133	553Z			31-35-12	ALL
	DED		W0133	554Z			31-35-12	ALL
	DED		W0133	555Z			31-35-12	ALL
	DED		W0133	575Z			31-35-13	ALL
	DED		W0133	576Z			31-35-13	ALL
	DED		W0133	577Z			31-35-13	ALL
	DED		W0133	578Z			31-35-13	ALL
	DED		W0133	579Z			31-35-13	ALL
	DED		W0133	580Z			31-35-13	ALL
	DED		W0133	587Z			31-35-16	ALL
	DED		W0133	588Z			31-35-16	ALL
	DED		W0133	589Z			31-35-16	ALL
	DED		W0133	594Z			31-36-11	ALL
	REF		W0133	273	20		31-35-11	ALL
	REF		W0133	273Z			31-35-11	ALL
	REF		W0133	526	20		31-35-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D01700

Page 25

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01769B		//		PLUG- PART OF D01769 (continued)				ALL
	REF		W0133	526Z			31-35-11	ALL
	REF		W0133	564	20		31-35-12	ALL
	REF		W0133	564Z			31-35-12	ALL
	REF		W0133	572	20		31-35-12	ALL
	REF		W0133	572Z			31-35-12	ALL
	REF		W0133	574	20		31-35-12	ALL
	REF		W0133	574Z			31-35-12	ALL
	REF		W0133	729	20		31-35-15	ALL
	REF		W0133	729Z			31-35-15	ALL
D01769C		//		PLUG- PART OF D01769				ALL
	1		W0133	635	22		31-35-11	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W0133	645	20		31-35-11	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	= C12	UNUSED						ALL
	= C13	UNUSED						ALL
D01770		0821/284/L008		PLUG				275-299
	1	UNUSED						275-299
	2	UNUSED						275-299
	3	UNUSED						275-299
	4	UNUSED						275-299
	5		W0110	038	22		33-22-42	275-299
	6	UNUSED						275-299
	7		W0110	030	22		33-22-42	275-299
	8		W0110	011	22		33-22-42	275-299
	9		W0110	D-C			33-22-42	275-299
	10		W0110	D-D			33-22-42	275-299
	11		W0110	D-B			33-22-42	275-299
	12		W0110	D-A			33-22-42	275-299

HOOKUP LIST

D280T132

91-21-51

Section D01700

Page 26

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01776		P005-00/ /		PLUG-P5				ALL
	1	DK	W0070	061	18		33-13-16	ALL
	2	DK	W0070	062	18		33-13-16	ALL
	3		W0070	063	24		21-33-21	ALL
	4		W0070	064	20		21-33-21	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D01778		P005-00/ /		PLUG-P5				ALL
	1	UNUSED						ALL
	2		W0070	082	20		21-33-21	ALL
	3		W0070	083	24		21-33-21	ALL
	4		W0070	084	20		21-33-21	ALL
	5	UNUSED						ALL
	6		W0070	086	24		21-33-21	ALL
	7		W0070	087	24		21-33-21	ALL
	8		W0070	088	24		21-33-21	ALL
	9		W0070	089	24		21-33-21	ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D01784		P039-00/ /		RELAY SOCKET-				ALL
	A1		W1068	872	22		25-53-24	ALL
	A2		W1068	871	22		25-53-24	ALL
	A3	UNUSED						ALL
	B1	UNUSED						050-099
	B1		W1068	730	22		25-53-24	150-199, 275-299
	B2	UNUSED						050-099
	B2		W1068	34R	22		25-53-24	150-199, 275-299
	B3	UNUSED						ALL
	X1		W1068	514	22		25-53-24	ALL
	X2		W1068	873	22		25-53-24	ALL

HOOKUP LIST
D280T132

91-21-51
Section D01700
Page 27
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01786		P039-00/ /		RELAY SOCKET-				ALL
	A1		W1068	875	22		25-53-24	050-099
	A1		W1068	584	22		25-53-24	150-199, 275-299
	A2		W1068	874	22		25-53-24	ALL
	A3	UNUSED						ALL
	B1	UNUSED						050-099
	B1		W1068	875	22		25-53-24	150-199, 275-299
	B2	UNUSED						050-099
	B2		W1068	34T	22		25-53-24	150-199, 275-299
	B3	UNUSED						ALL
	X1		W1068	515	22		25-53-24	050-099
	X1		W1068	583	22		25-53-24	150-199, 275-299
	X2		W1068	876	22		25-53-24	ALL
D01790		P011-00/ /		PLUG-P11				ALL
	1		W0044	303Y	24		33-13-19	ALL
	2	DK	W0044	087	18		33-13-19	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W0044	303B	24		33-13-19	ALL
	6		W0044	303R	24		33-13-19	ALL
	7		W0044	095	20		33-13-19	ALL
	8	DK	W0044	088	18		33-13-19	ALL
	9	DK	W0044	089	18		33-13-19	ALL
	10	UNUSED						ALL
	11	FM	W0044	090	16		33-13-19	ALL
	12		W0044	091	22		33-13-19	ALL
D01793		P036-00/ /		RELAY SOCKET-P36				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W0176	08H	24		31-31-13	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W0176	08K	20		31-31-13	ALL
	7		W0176	08I	24		31-31-13	ALL
	8		W0176	08J	24		31-31-13	ALL

HOOKUP LIST

D280T132

91-21-51

Section D01700

Page 28 End

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01800		0952/132/L034		PLUG-				ALL
	= 1		W0938	054R	18		26-18-11	ALL
D01804		P033-00/ /		RELAY SOCKET-				ALL
	A1		W0144	02A	20		27-62-11	ALL
	A2		W0144	02K	20		27-62-11	ALL
	A3		W0144	02D	20		27-62-11	ALL
	B1		W0144	02F	22		27-62-11	ALL
	B2		W0144	02B	22		27-62-11	ALL
	B3		W0144	02E	22		27-62-11	ALL
	X1		W0144	02C	22		27-62-11	ALL
	X2		W0144	02G	20		27-62-11	ALL
D01806		P033-00/ /		RELAY SOCKET-				ALL
	A1		W0144	02M	20		27-62-11	ALL
	A2		W0144	02L	20		27-62-11	ALL
	A3		W0144	02O	20		27-62-11	ALL
	B1		W0144	02E	22		27-62-11	ALL
	B2		W0144	02N	22		27-62-11	ALL
	B3		W0144	02F	22		27-62-11	ALL
	X1		W0144	02Q	22		27-62-11	ALL
	X2		W0144	02P	20		27-62-11	ALL
D01830		P008-00/ /		PLUG-P8				ALL
	1		W0756	161	20		33-13-18	050-099, 150-155, 162-165, 275-276
	1		W0756	290R	20		33-13-18	156-157, 166-199, 277-299
	2		W0756	162	20		33-13-18	050-099, 150-155, 162-165, 275-276
	2		W0756	290B	20		33-13-18	156-157, 166-199, 277-299
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W0756	151	18		27-11-11	ALL
	6		W0756	143	20		27-21-11	ALL
	7	UNUSED						ALL
	8		W0756	032	20		27-11-11	ALL
	9		W0756	150	18		27-11-11	ALL
	10	UNUSED						ALL
	11		W0756	146	20		27-21-11	ALL
	12		W0756	030	24		27-11-11	ALL
	13	UNUSED						ALL
	14		W0756	142	20		27-21-11	ALL
	DED		W0756	143Z			27-21-11	ALL

HOOKUP LIST
D280T132

91-21-51
Section D01800
Page 1
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01830		P008-00/ /		PLUG-P8 (continued)				ALL
	DED		W0756	146Z			27-21-11	ALL
D01832		P008-00/ /		PLUG-P8				ALL
	1		W0756	528	20		33-13-18	050-099, 150-155, 162-165, 275-276
	1		W0756	291R	20		33-13-18	156-157, 166-199, 277-299
	2		W0756	529	20		33-13-18	050-099, 150-155, 162-165, 275-276
	2		W0756	291B	20		33-13-18	156-157, 166-199, 277-299
	3		W0756	144	24		27-28-13	ALL
	4		W0756	145	20		27-28-13	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9		W0756	233R	24		27-28-13	ALL
	10		W0756	233B	24		27-28-13	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D01834		P049-00/ /		RELAY SOCKET-E6				ALL
	A1		W1050	030	22		49-41-11	050-099, 150-199
	A1		W1050	105	22		49-41-11	275-299
	A2		W1050	031	22		49-41-11	ALL
	A3	UNUSED						ALL
	B1		W1050	027	20		24-31-41	ALL
	B2		W1050	026	24		24-31-41	ALL
	B3	UNUSED						ALL
	X1		W1050	032	22		49-41-11	ALL
	X2		W1050	033	24		49-41-11	ALL
D01836A		//		PLUG-PART OF D01836				ALL
	A01		W0014	203R	24		27-51-31	ALL
	A02		W0014	045	24		27-81-21	ALL
	A03		W0014	018	24		27-51-31	ALL
	A04		W0014	067	24		27-88-11	ALL
	A05		W0014	551	24		27-51-11	ALL
	A06		W0014	028	22		27-51-61	ALL
	A07	UNUSED						050-099, 150-199, 275-276, 278-299
	A07		W0014	044	24		27-51-61	277
	A08	UNUSED						ALL
	A09		W0014	202B	22		27-51-31	ALL

HOOKUP LIST

D280T132

91-21-51

Section D01800

Page 2

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01836A		//		PLUG-PART OF D01836 (continued)				ALL
	A10	UNUSED						ALL
	A11		W0014	401Y	24		27-51-41	ALL
	A12		W0014	037	22		27-51-61	050-099, 150-199, 275-276, 278-299
	A12	UNUSED						277
	A13	UNUSED						ALL
	A14		W0014	404Y	24		27-51-41	ALL
	A15		W0014	306B	24		27-81-31	ALL
	B01		W0014	203B	24		27-51-31	ALL
	B02	UNUSED						ALL
	B03		W0014	057	24		27-81-31	ALL
	B04		W0014	065	24		27-88-11	ALL
	B05		W0014	552	24		27-51-11	ALL
	B06		W0014	038	22		27-51-61	ALL
	B07	UNUSED						050-099, 150-199, 275-276, 278-299
	B07		W0014	037	22		27-51-61	277
	B08		W0014	128	24		27-51-61	050-099
	B08	UNUSED						150-199, 275-299
	B09		W0014	202R	22		27-51-31	ALL
	B10	UNUSED						ALL
	B11		W0014	401G	24		27-51-41	ALL
	B12		W0014	044	24		27-51-61	050-099, 150-199, 275-276, 278-299
	B12	UNUSED						277
	B13	UNUSED						ALL
	B14		W0014	404G	24		27-51-41	ALL
	B15		W0014	306Y	24		27-81-31	ALL
	C01		W0014	561	24		27-81-11	ALL
	C02	UNUSED						ALL
	C03		W0014	001	22		27-51-11	ALL
	C04		W0014	033	24		27-51-41	ALL
	C05		W0014	553	24		27-51-11	ALL
	C06		W0014	545	22		27-51-61	ALL
	C07	UNUSED						050-099, 150-199, 275-276, 278-299
	C07		W0014	019	22		27-51-61	277
	C08		W0014	025	24		27-88-11	ALL
	C09		W0014	216B	22		27-81-31	ALL
	C10		W0014	212R	22		27-51-41	ALL
	C11		W0014	205R	22		27-51-41	ALL
	C12		W0014	035	22		27-51-61	050-099, 150-199, 275-276, 278-299
	C12	UNUSED						277
	C13	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D01800
Page 3
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01836A		//		PLUG-PART OF D01836 (continued)				ALL
	C14		W0014	208R	22		27-51-41	ALL
	C15		W0014	306R	24		27-81-31	ALL
	D01		W0014	590	24		27-51-31	ALL
	D02		W0014	621	24		27-81-31	ALL
	D03		W0014	049	22		27-81-11	ALL
	D04		W0014	027	24		27-88-11	ALL
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07	UNUSED						050-099, 150-199, 275-276, 278-299
	D07		W0014	035	22		27-51-61	277
	D08		W0014	026	24		27-88-11	ALL
	D09		W0014	216R	22		27-81-31	ALL
	D10		W0014	212B	22		27-51-41	ALL
	D11		W0014	205B	22		27-51-41	ALL
	D12		W0014	019	22		27-51-61	050-099, 150-199, 275-276, 278-299
	D12	UNUSED						277
	D13	UNUSED						ALL
	D14		W0014	208B	22		27-51-41	ALL
	D15	UNUSED						ALL
	E01		W0014	234R	24		27-51-51	ALL
	E02	UNUSED						ALL
	E03		W0014	055	22		27-81-21	ALL
	E04	UNUSED						ALL
	E05	UNUSED						ALL
	E06		W0014	603	22		27-51-61	050-099
	E06		W0014	594	22		27-51-61	150-199, 275-299
	E07	UNUSED						ALL
	E08	UNUSED						ALL
	E09		W0014	217B	22		27-81-31	ALL
	E10		W0014	405B	24		27-51-41	ALL
	E11	UNUSED						ALL
	E12	UNUSED						ALL
	E13		W0014	408B	24		27-51-41	ALL
	E14		W0014	301B	24		27-51-31	ALL
	E15	UNUSED						ALL
	F01		W0014	234B	24		27-51-51	ALL
	F02	UNUSED						ALL
	F03		W0014	543	24		27-51-51	ALL
	F04		W0014	167	24		27-32-11	ALL
	F05	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D01800

Page 4

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01836A		//		PLUG-PART OF D01836 (continued)				ALL
	F06		W0014	604	22		27-51-61	050-099
	F06	UNUSED						150-199, 275-299
	F07	UNUSED						ALL
	F08		W0014	622	24		27-81-31	ALL
	F09		W0014	217R	22		27-81-31	ALL
	F10		W0014	405R	24		27-51-41	ALL
	F11	UNUSED						ALL
	F12	UNUSED						ALL
	F13		W0014	408R	24		27-51-41	ALL
	F14		W0014	301Y	24		27-51-31	ALL
	F15	UNUSED						ALL
	G01	UNUSED						ALL
	G02	UNUSED						ALL
	G03		W0014	002	22		27-51-11	ALL
	G04		W0014	168	24		27-32-11	ALL
	G05		W0014	235R	24		27-51-51	ALL
	G06		W0014	605	22		27-51-61	050-099
	G06	UNUSED						150-199, 275-299
	G07	UNUSED						ALL
	G08		W0014	623	24		27-81-31	ALL
	G09		W0014	209R	22		27-51-41	ALL
	G10		W0014	405Y	24		27-51-41	ALL
	G11	UNUSED						ALL
	G12	UNUSED						ALL
	G13		W0014	408Y	24		27-51-41	ALL
	G14		W0014	301R	24		27-51-31	ALL
	G15	UNUSED						ALL
	H01	UNUSED						ALL
	H02	UNUSED						ALL
	H03		W0014	050	22		27-81-11	ALL
	H04		W0014	169	24		27-32-11	ALL
	H05		W0014	235B	24		27-51-51	ALL
	H06	UNUSED						ALL
	H07	UNUSED						ALL
	H08	UNUSED						ALL
	H09		W0014	209B	22		27-51-41	ALL
	H10		W0014	405G	24		27-51-41	ALL
	H11	UNUSED						ALL
	H12	UNUSED						ALL
	H13		W0014	408G	24		27-51-41	ALL

HOOKUP LIST

D280T132

91-21-51

Section D01800

Page 5

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01836A		//		PLUG-PART OF D01836 (continued)				ALL
	H14		W0014	305B	24		27-81-31	ALL
	H15	UNUSED						ALL
	J01		W0014	549	24		27-51-11	ALL
	J02		W0014	252R	24		31-31-19	ALL
	J03		W0014	056	22		27-81-21	ALL
	J04		W0014	170	24		27-32-11	ALL
	J05	UNUSED						ALL
	J06	UNUSED						ALL
	J07	UNUSED						ALL
	J08	UNUSED						ALL
	J09	UNUSED						ALL
	J10		W0014	401B	24		27-51-41	ALL
	J11	UNUSED						ALL
	J12	UNUSED						ALL
	J13		W0014	404B	24		27-51-41	ALL
	J14		W0014	305Y	24		27-81-31	ALL
	J15	UNUSED						ALL
	K01		W0014	046	24		27-81-11	ALL
	K02		W0014	252B	24		31-31-19	ALL
	K03		W0014	066	24		27-88-11	ALL
	K04	UNUSED						ALL
	K05	UNUSED						ALL
	K06	UNUSED						ALL
	K07	UNUSED						ALL
	K08	UNUSED						ALL
	K09	UNUSED						ALL
	K10		W0014	401R	24		27-51-41	ALL
	K11	UNUSED						ALL
	K12	UNUSED						ALL
	K13		W0014	404R	24		27-51-41	ALL
	K14		W0014	305R	24		27-81-31	ALL
	K15		W0014	036	22		27-51-61	ALL
	DED		W0014	019Z			27-51-61	ALL
	DED		W0014	035Z			27-51-61	ALL
	DED		W0014	037Z			27-51-61	ALL
	DED		W0014	044Z			27-51-61	ALL
	DED		W0014	252Z			31-31-19	ALL
			W0014	163	20		27-51-51	ALL
			W0014	234Z			27-51-51	ALL
			W0014	235Z			27-51-51	ALL

HOOKUP LIST

D280T132

91-21-51

Section D01800

Page 6

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01836B		//		PLUG-PART OF D01836				ALL
	A01		W0014	204R	24		27-58-31	ALL
	A02	UNUSED						ALL
	A03		W0014	022	24		27-88-11	ALL
	A04		W0014	119	24		33-24-11	ALL
	A05		W0014	550	24		27-51-11	ALL
	A06	UNUSED						ALL
	A07		W0014	025	24		27-88-11	ALL
	A08		W0014	171	24		27-32-21	ALL
	A09		W0014	007	24		27-51-11	ALL
	A10		W0014	214R	24		27-81-11	ALL
	A11		W0014	003	22		27-51-11	ALL
	A12		W0014	006	24		27-51-61	ALL
	A13	UNUSED						ALL
	A14		W0014	589	24		27-51-11	ALL
	A15	UNUSED						ALL
	B01		W0014	204B	24		27-58-31	ALL
	B02		W0014	023	24		27-88-11	ALL
	B03		W0014	030	24		27-58-31	ALL
	B04		W0014	118	22		33-24-11	ALL
	B05		W0014	562	24		27-81-11	ALL
	B06	UNUSED						ALL
	B07		W0014	026	24		27-88-11	ALL
	B08		W0014	172	24		27-32-21	ALL
	B09		W0014	008	24		27-51-11	ALL
	B10		W0014	214B	24		27-81-11	ALL
	B11		W0014	004	22		27-51-11	ALL
	B12		W0014	016	22		27-51-61	ALL
	B13	UNUSED						ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	C01		W0014	302B	24		27-58-31	ALL
	C02		W0014	591	24		27-58-31	ALL
	C03		W0014	061	22		27-58-31	ALL
	C04	UNUSED						ALL
	C05	UNUSED						ALL
	C06	UNUSED						ALL
	C07	UNUSED						ALL
	C08		W0014	173	24		27-32-21	ALL
	C09		W0014	009	24		27-51-11	ALL
	C10		W0014	215B	24		27-81-21	ALL

HOOKUP LIST

D280T132

91-21-51

Section D01800

Page 7

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01836B		//		PLUG-PART OF D01836 (continued)				ALL
	C11		W0014	051	22		27-81-11	ALL
	C12		W0014	005	24		27-51-61	ALL
	C13	UNUSED						ALL
	C14	UNUSED						ALL
	C15	UNUSED						ALL
	D01		W0014	302Y	24		27-58-31	ALL
	D02		W0014	606	22		27-51-61	050-099
	D02		W0014	595	22		27-51-61	150-199, 275-299
	D03		W0014	062	24		27-88-11	ALL
	D04	UNUSED						ALL
	D05		W0014	564	24		27-51-11	ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	D08		W0014	174	24		27-32-21	ALL
	D09		W0014	010	24		27-51-11	ALL
	D10		W0014	215R	24		27-81-21	ALL
	D11		W0014	052	22		27-81-11	ALL
	D12		W0014	015	22		27-51-61	ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15	UNUSED						ALL
	E01		W0014	302R	24		27-58-31	ALL
	E02		W0014	607	22		27-51-61	050-099
	E02	UNUSED						150-199, 275-299
	E03		W0014	064	24		27-88-11	ALL
	E04	UNUSED						ALL
	E05		W0014	565	24		27-51-11	ALL
	E06		W0014	559	24		27-51-51	ALL
	E07	UNUSED						ALL
	E08	UNUSED						ALL
	E09		W0014	011	24		27-51-11	ALL
	E10		W0014	303R	24		27-81-11	ALL
	E11		W0014	054	22		27-81-21	ALL
	E12	UNUSED						ALL
	E13	UNUSED						ALL
	E14		W0014	608	22		27-51-61	050-099
	E14	UNUSED						150-199, 275-299
	E15	UNUSED						ALL
	F01		W0014	213B	24		27-58-31	ALL
	F02		W0014	024	24		27-88-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D01800

Page 8

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01836B		//		PLUG-PART OF D01836 (continued)				ALL
	F03		W0014	063	24		27-88-11	ALL
	F04	UNUSED						ALL
	F05		W0014	554	24		27-51-11	ALL
	F06		W0014	107	24		27-51-61	050-099
	F06	UNUSED						150-199, 275-299
	F07	UNUSED						ALL
	F08		W0014	108	24		27-51-61	050-099
	F08	UNUSED						150-199, 275-299
	F09		W0014	012	24		27-51-11	ALL
	F10		W0014	303Y	24		27-81-11	ALL
	F11		W0014	053	22		27-81-21	ALL
	F12	UNUSED						ALL
	F13	UNUSED						ALL
	F14		W0014	609	22		27-51-61	050-099
	F14		W0014	596	22		27-51-61	150-199, 275-299
	F15	UNUSED						ALL
	G01		W0014	213R	24		27-58-31	ALL
	G02		W0014	039	24		27-58-31	ALL
	G03		W0014	111	22		27-88-11	ALL
	G04		W0014	544	24		27-51-51	ALL
	G05		W0014	555	24		27-51-11	ALL
	G06	UNUSED						ALL
	G07	UNUSED						ALL
	G08		W0014	048	24		27-58-11	ALL
	G09		W0014	013	24		27-51-11	ALL
	G10		W0014	303B	24		27-81-11	ALL
	G11		W0014	166	22		27-51-61	ALL
	G12	UNUSED						ALL
	G13	UNUSED						ALL
	G14	UNUSED						ALL
	G15	UNUSED						ALL
	H01		W0014	020	24		27-51-61	050-099
	H01	UNUSED						150-199, 275-299
	H02		W0014	041	24		27-58-11	ALL
	H03		W0014	069	24		29-11-32	ALL
	H04	UNUSED						050-099
	H04		W0014	020	24		27-51-61	150-199, 275-299
	H05		W0014	556	24		27-51-11	ALL
	H06	UNUSED						ALL
	H07	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D01800

Page 9

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01836B		//		PLUG-PART OF D01836 (continued)				ALL
	H08		W0014	041	24		27-58-11	ALL
	H09		W0014	014	24		27-51-11	ALL
	H10		W0014	304B	24		27-81-21	ALL
	H11	UNUSED						ALL
	H12	UNUSED						ALL
	H13	UNUSED						ALL
	H14	UNUSED						ALL
	H15	UNUSED						ALL
	J01		W0014	017	22		27-51-61	ALL
	J02	UNUSED						ALL
	J03		W0014	547	22		27-51-61	ALL
	J04	UNUSED						ALL
	J05		W0014	557	24		27-51-11	ALL
	J06	UNUSED						ALL
	J07	UNUSED						ALL
	J08	UNUSED						ALL
	J09		W0014	201B	24		27-51-11	ALL
	J10		W0014	304Y	24		27-81-21	ALL
	J11	UNUSED						ALL
	J12	UNUSED						ALL
	J13	UNUSED						ALL
	J14	UNUSED						ALL
	J15	UNUSED						ALL
	K01		W0014	021	24		27-51-61	ALL
	K02		W0014	029	22		27-51-61	ALL
	K03		W0014	546	22		27-51-61	ALL
	K04	UNUSED						ALL
	K05		W0014	558	24		27-51-11	ALL
	K06	UNUSED						ALL
	K07		W0014	047	22		27-51-61	ALL
	K08	UNUSED						ALL
	K09		W0014	201R	24		27-51-11	ALL
	K10		W0014	304R	24		27-81-21	ALL
	K11	UNUSED						ALL
	K12		W0014	058	24		27-51-61	ALL
	K13	UNUSED						ALL
	K14	UNUSED						ALL
	K15	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D01800

Page 10

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01840		NR269/146/		PLUG				050-099, 150-199
D01840		NR 269/146/		PLUG				275-299
	A		W0356	201R	18		36-22-21	ALL
	B	UNUSED						ALL
	C		W0356	117	18		36-22-21	ALL
D01842		NR269/146/		PLUG				050-099, 150-199
D01842		NR 269/146/		PLUG				275-299
	A		W0376	201R	18		36-22-21	ALL
	B	UNUSED						ALL
	C		W0376	117	18		36-22-21	ALL
D01850		1518/169/R055		PLUG-				050-099
D01850		1513/170/R064		PLUG-				150-199
	A		W0978	203R	20		21-44-22	050-099, 150-199
	B		W0978	004	20		21-44-22	050-099, 150-199
D01854		716/280/L005		RCPT-				050-099
D01854		0654+063/280/L005		RCPT-				275-299
	1		W1282	131	20		35-21-14	050-099
	1		W1164	014	20		35-21-14	275
	1		W1164	131	20		35-21-14	276-299
	2		W1282	132	20		35-21-14	050-099
	2		W1164	015	20		35-21-14	275
	2		W1164	132	20		35-21-14	276-299
D01855		624/150/R066		PLUG				ALL
	1		W1445	302R	24		23-34-18	ALL
	2		W1445	302B	24		23-34-18	ALL
	3		W1445	302Y	24		23-34-18	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
D01856		0743/280/L005		RCPT-				050-099
D01856		0654+090/280/L005		RCPT-				275-299
	1		W1282	141	20		35-21-14	050-099
	1		W1164	017	20		35-21-14	275
	1		W1164	141	20		35-21-14	276-299
	2		W1282	142	20		35-21-14	050-099
	2		W1164	018	20		35-21-14	275

HOOKUP LIST

D280T132

91-21-51

Section D01800

Page 11

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01856		0743/280/L005		RCPT- (continued)				050-099
D01856		0654+090/280/L005		RCPT- (continued)				275-299
	2		W1164	142	20		35-21-14	276-299
D01857		0624/150/R066		PLUG-				ALL
	1		W1443	302R	24		23-34-18	ALL
	2		W1443	302B	24		23-34-18	ALL
	3		W1443	302Y	24		23-34-18	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
D01858		RSS 127/12/TE		PLUG-				ALL
	1	DK	W0514	004	18		27-38-11	ALL
	2		W0514	001	20		27-38-11	ALL
	3	UNUSED						050-099, 150-154, 156, 162-166, 275-276
	3		W0514	007	20		27-38-11	155, 157, 167-199, 277-299
	4		W0514	003	20		27-38-11	ALL
	5		W0514	002	20		27-38-11	ALL
D01859		0624/150/R066		PLUG-				ALL
	1		W1443	301R	24		23-34-18	ALL
	2		W1443	301B	24		23-34-18	ALL
	3		W1443	301Y	24		23-34-18	ALL
	4	FL	W1443	201R	16		23-34-18	ALL
	5	FL	W1443	201B	16		23-34-18	ALL
D01860		RSS 127/12/TE		PLUG-				ALL
	1	DK	W0514	014	18		27-38-11	ALL
	2		W0514	011	20		27-38-11	ALL
	3	UNUSED						050-099, 150-154, 156, 162-166, 275-276
	3		W0514	006	20		27-38-11	155, 157, 167-199, 277-299
	4		W0514	013	20		27-38-11	ALL
	5		W0514	012	20		27-38-11	ALL
D01861		624/150/R066		PLUG-				ALL
	1		W1445	301R	24		23-34-18	ALL
	2		W1445	301B	24		23-34-18	ALL
	3		W1445	301Y	24		23-34-18	ALL
	4	FL	W1445	201R	16		23-34-18	ALL
	5	FL	W1445	201B	16		23-34-18	ALL

HOOKUP LIST

D280T132

91-21-51

Section D01800

Page 12

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01862		MULTI /		PLUG-				050-099, 150-199
	1	UNUSED						050-099, 150-199
	2	UNUSED						050-099, 150-199
	3	UNUSED						050-099, 150-199
	4	UNUSED						050-099, 150-199
	5	UNUSED						050-099, 150-199
	6		W1270	201R	22		MULTI	050-099, 150-199
	7		W1270	201B	22		MULTI	050-099, 150-199
	8	UNUSED						050-099, 150-199
	9	UNUSED						050-099, 150-199
	10	UNUSED						050-099, 150-199
	11	UNUSED						050-099, 150-199
	12	UNUSED						050-099, 150-199
D01863		0624/150/R066		PLUG-				ALL
	1	FM	W0645	101	16		23-34-11	ALL
	2		W0645	103	20		23-34-11	ALL
	3		W0645	104	20		23-34-11	ALL
	4		W0645	111	24		23-34-12	ALL
	5		W0645	112	24		23-34-12	ALL
	6		W0645	110	24		23-34-12	ALL
	7		W0645	113	24		23-34-12	ALL
	8		W0645	126	24		23-34-13	ALL
	9		W0645	124	24		23-34-13	ALL
	10		W0645	102	22		23-34-11	ALL
	11		W0645	127	24		23-34-13	ALL
	12		W0645	125	24		23-34-13	ALL
	13		W0645	114	24		23-34-12	ALL
	14	UNUSED						ALL
	15		W0645	109	24		23-34-12	ALL
D01865		624/150/R066		PLUG-				ALL
	1		W1423	301R	24		23-34-19	ALL
	2		W1423	301B	24		23-34-19	ALL
	3		W1423	301Y	24		23-34-19	ALL
	4	FL	W1423	201R	16		23-34-19	ALL
	5	FL	W1423	201B	16		23-34-19	ALL
D01866		1654/260/R035		PLUG-				ALL
	1		W0504	004	18		27-23-11	ALL
	2		W0504	001	20		27-23-11	ALL

HOOKUP LIST
D280T132

91-21-51
Section D01800
Page 13
Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01866		1654/260/R035		PLUG- (continued)				ALL
	3		W0504	002	20		27-23-11	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9		W0504	005	18		27-23-11	ALL
	10		W0504	003	20		27-23-11	ALL
D01867		0624/150/R066		PLUG				ALL
	1		W1387	302R	24		23-34-19	ALL
	2		W1387	302B	24		23-34-19	ALL
	3		W1387	302Y	24		23-34-19	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
D01868		P050-00/ /		RCPT-				ALL
	1		W1080	017	24		21-51-21	ALL
	2		W1080	025	24		21-51-21	ALL
	3		W1080	525	24		21-51-21	ALL
	4		W1080	014	24		21-51-21	ALL
	5		W1080	015	24		21-51-21	ALL
	6		W1080	019	24		21-51-21	ALL
	7		W1080	006	24		21-51-21	ALL
	8		W1080	005	24		21-51-21	ALL
	9		W1080	022	24		21-53-21	ALL
	10		W1080	028	22		21-51-21	ALL
	11	UNUSED						ALL
	12		W1080	030	24		21-51-21	ALL
	13		W1080	003	24		21-51-21	050, 150-154, 275-276
	13	UNUSED						051-099, 155-199, 277-299
	14		W1080	004	24		21-51-21	ALL
	15		W1080	008	24		21-51-11	ALL
	16		W1080	526	24		21-51-21	ALL
	17		W1080	009	24		21-51-21	ALL
	18		W1080	027	24		73-21-15	ALL
	19		W1080	001	24		21-51-21	050-099, 150-199
	19		W1080	012	24		21-51-21	275-299
	20	UNUSED						ALL
	21		W1080	002	22		21-51-21	ALL

HOOKUP LIST

D280T132

91-21-51

Section D01800

Page 14

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01868		P050-00/ /		RCPT- (continued)				ALL
	22		W1080	016	24		21-51-21	ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25		W1080	PB1			99-99-99	ALL
	26		W1080	023	24		21-53-22	ALL
	27		W1080	018	24		21-51-21	ALL
	28		W1080	020	22		21-51-21	ALL
	29	UNUSED						ALL
	30		W1080	538	24		21-53-22	ALL
	31		W1080	021	24		21-25-21	ALL
	32		W1080	026	24		73-21-15	ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35		W1080	PB1			99-99-99	ALL
	36		W1080	007	24		21-51-21	ALL
	37		W1080	527	24		21-51-21	ALL
	38		W1080	528	24		21-51-21	ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
D01869		627/160/R070		PLUG-				ALL
	1		W0645	211R	24		23-31-13	ALL
	2		W0645	211B	24		23-31-13	ALL
	3		W0645	182	24		23-34-14	050-099, 150-199
	3		W0645	132	24		23-34-14	275-299
	4		W0645	100	20		23-34-11	ALL
	5		W0645	131	24		23-34-14	050-099, 150-199
	5		W0645	092R	24		23-32-12	275-299
	6		W0645	131Z			23-34-14	050-099, 150-199
	6		W0645	092B	24		23-32-12	275-299
	7		W0645	130	24		23-34-14	050-099, 150-199
	7		W0645	091R	24		23-32-12	275-299
	8		W0645	130Z			23-34-14	050-099, 150-199
	8		W0645	091B	24		23-32-12	275-299
	9	UNUSED						ALL
	10		W0645	099	20		23-34-11	ALL
	11		W0645	098	22		23-34-11	ALL
	12	UNUSED						ALL
	13		W0645	182Z			23-34-14	050-099, 150-199

HOOKUP LIST
D280T132

91-21-51
Section D01800
Page 15
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01869		627/160/R070		PLUG- (continued)				ALL
	13		W0645	132Z			23-34-14	275-299
	14		W0645	183	24		23-34-14	050-099, 150-199
	14		W0645	133	24		23-34-14	275-299
	15		W0645	183Z			23-34-14	050-099, 150-199
	15		W0645	133Z			23-34-14	275-299
	DED		W0645	091Z			23-32-12	275-299
	DED		W0645	092Z			23-32-12	275-299
D01870		P050-00/ /		RCPT-				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W1080	071	24		21-53-12	ALL
	4		W1080	076	24		21-53-12	ALL
	5		W1080	088	24		21-53-12	ALL
	6		W1080	070	24		21-53-12	ALL
	7		W1080	078	24		21-53-12	ALL
	8		W1080	075	24		21-53-12	ALL
	9		W1080	081	24		21-53-12	ALL
	10		W1080	077	24		21-53-12	ALL
	11		W1080	079	24		21-53-12	ALL
	12		W1080	080	24		21-53-12	ALL
	13		W1080	085	24		21-53-12	ALL
	14		W1080	083	24		21-53-12	ALL
	15		W1080	084	24		21-53-12	ALL
	16		W1080	082	24		21-53-12	ALL
	17		W1080	087	24		21-53-12	ALL
	18		W1080	086	24		21-53-12	ALL
	19		W1080	068	24		21-53-12	ALL
	20	UNUSED						ALL
	21		W1080	069	22		21-53-12	ALL
	22		W1080	PC1			99-99-99	ALL
	23	UNUSED						ALL
	24		W1080	708	24		21-51-13	ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D01800

Page 16

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01870		P050-00/ /		RCPT- (continued)				ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35		W1080	074	24		21-53-12	ALL
	36		W1080	073	24		21-53-12	ALL
	37		W1080	072	24		21-53-12	ALL
	38		W1080	PC1			99-99-99	ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
D01871		627/160/R070		PLUG-COAXIAL				ALL
	= A1		W1479	01CX			23-34-14	ALL
	= C1		W1479	01CO			23-34-14	ALL
D01872		P050-00/ /		RCPT-				ALL
	1		W1080	500	24		21-58-11	ALL
	2	UNUSED						ALL
	3		W1080	091	24		21-58-11	ALL
	4		W1080	092	24		21-58-11	ALL
	5		W1080	093	24		21-58-11	ALL
	6		W1080	094	24		21-58-11	ALL
	7		W1080	096	24		21-58-12	ALL
	8		W1080	775	24		21-58-11	ALL
	9		W1080	099	24		21-58-12	ALL
	10		W1080	098	24		21-58-12	ALL
	11		W1080	543	24		21-58-12	ALL
	12		W1080	102	24		33-16-11	ALL
	13	UNUSED						ALL
	14		W1080	107	24		21-58-11	ALL
	15		W1080	101	22		21-58-11	ALL
	16	UNUSED						ALL
	17		W1080	109	22		21-58-11	ALL
	18	UNUSED						ALL
	19		W1080	089	24		21-58-11	ALL
	20		W1080	103	24		21-58-11	ALL
	21		W1080	105	22		21-58-11	ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24		W1080	PD1			99-99-99	ALL

HOOKUP LIST
D280T132

91-21-51
Section D01800
Page 17
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01872		P050-00/ /		RCPT- (continued)				ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36		W1080	PD1			99-99-99	ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41		W1080	090	22		21-58-11	ALL
	DED		W1080	089Z			21-58-11	ALL
D01873		627/160/R070		PLUG-COAXIAL				ALL
	= A1		W1445	01CX			23-34-18	ALL
	= C1		W1445	01CO			23-34-18	ALL
D01874		P050-00/ /		RCPT-				ALL
	1		W1080	035	24		21-25-21	ALL
	2		W1080	712	24		21-25-11	ALL
	3		W1080	036	22		21-25-21	ALL
	4		W1080	038	22		21-25-21	ALL
	5	UNUSED						ALL
	6		W1080	054	24		21-26-11	ALL
	7		W1080	050	24		21-26-11	ALL
	8		W1080	053	24		21-26-11	ALL
	9		W1080	051	22		21-26-11	ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D01800
Page 18
Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01874		P050-00/ /		RCPT- (continued)				ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22		W1080	039	24		21-25-21	ALL
	23		W1080	040	24		21-25-21	ALL
	24		W1080	037	24		21-25-21	ALL
	25		W1080	124	24		21-25-21	ALL
	26		W1080	PA1			99-99-99	ALL
	27		W1080	055	24		21-26-11	ALL
	28		W1080	052	24		21-26-11	ALL
	29		W1080	029	24		21-26-11	ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34		W1080	PA1			99-99-99	ALL
	35		W1080	066	24		21-26-11	ALL
	36		W1080	056	24		21-26-11	ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
D01875		627/160/R070		PLUG-COAXIAL				ALL
	= A1		W1423	01CX			23-34-19	ALL
	= C1		W1423	01CO			23-34-19	ALL
D01876		P050-00/ /		RCPT-				ALL
	1		W1080	130	24		36-11-62	ALL
	2		W1080	129	22		36-22-11	ALL
	3		W1080	753	22		36-22-11	ALL
	4		W1080	524	24		21-51-11	ALL
	5		W1080	120	24		36-11-52	ALL
	6		W1080	108R	22		26-18-22	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						050-099, 150-156, 162-166, 275-276

HOOKUP LIST
D280T132

91-21-51
Section D01800
Page 19
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01876		P050-00/ /		RCPT- (continued)				ALL
	9		W1080	PF1			36-11-52	157, 167-199, 277-299
	10	UNUSED						ALL
	11		W1080	745	22		36-11-52	ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17		W1080	217	24		36-11-62	ALL
	18		W1080	145	24		36-11-62	ALL
	19	UNUSED						ALL
	20		W1080	121	24		36-11-52	ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27		W1080	154	22		36-11-62	ALL
	28		W1080	137	24		36-11-62	ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31		W1080	135	22		36-11-62	ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34		W1080	249	22		36-11-62	ALL
	35		W1080	122	22		36-11-52	ALL
	36		W1080	104R	22		26-18-22	ALL
	37		W1080	128	24		36-11-62	ALL
	38		W1080	527	24		21-51-21	ALL
	39		W1080	011	22		36-11-52	ALL
	40		W1080	116	22		36-11-52	ALL
	41		W1080	PF1			36-11-52	050-099, 150-156, 162-166, 275-276
	41	UNUSED						157, 167-199, 277-299
	42	UNUSED						ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46		W1080	746	22		36-11-52	ALL
	47		W1080	144	24		36-11-62	ALL

HOOKUP LIST

D280T132

91-21-51

Section D01800

Page 20

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01876		P050-00/ /		RCPT- (continued)				ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						050-099, 150-156, 162-166, 275-276
	51		W1080	PF1			36-11-52	157, 167-199, 277-299
	52		W1080	126	24		36-11-52	ALL
	53		W1080	123	24		36-11-52	ALL
	54		W1080	741	24		36-11-52	ALL
	55		W1080	119	24		36-11-52	ALL
	56		W1080	131	22		36-11-62	ALL
	57		W1080	106R	22		26-18-22	ALL
	58		W1080	136	24		36-11-62	ALL
	59		W1080	743	22		36-11-52	ALL
	60		W1080	114	22		36-11-52	ALL
	61		W1080	192	22		36-11-62	ALL
	62	UNUSED						ALL
	63		W1080	PF1			36-11-52	050-099, 150-156, 162-166, 275-276
	63	UNUSED						157, 167-199, 277-299
	64		W1080	033	24		36-11-41	ALL
	65		W1080	200	24		36-11-62	ALL
	66		W1080	248	22		36-11-62	ALL
D01877		0627/160/R070		PLUG-COAXIAL				ALL
	= A1		W1443	01CX			23-34-18	ALL
	= C1		W1443	01CO			23-34-18	ALL
D01879		296/147/R 21		PLUG-				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D01800
Page 21
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01879		296/147/R 21		PLUG- (continued)				ALL
	14		W0645	092	24		23-32-12	050-099, 150-199
	14	UNUSED						275-299
	15		W0645	092Z			23-32-12	050-099, 150-199
	15	UNUSED						275-299
	16		W0645	091	24		23-32-12	050-099, 150-199
	16	UNUSED						275-299
	17		W0645	091Z			23-32-12	050-099, 150-199
	17	UNUSED						275-299
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21		W0645	616	22		23-32-12	050-099, 150-199
	21	UNUSED						275-299
	22	UNUSED						ALL
	23		W0645	130	24		23-34-14	ALL
	24		W0645	130Z			23-34-14	ALL
	25		W0645	131	24		23-34-14	ALL
	26		W0645	131Z			23-34-14	ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29		W0645	128	24		23-34-14	ALL
	30		W0645	128Z			23-34-14	ALL
	31		W0645	129	24		23-34-14	ALL
	32		W0645	129Z			23-34-14	ALL
	33		W0645	191	24		23-34-14	050-099, 150-199
	33		W0645	210R	24		23-34-14	275-299
	34		W0645	191Z			23-34-14	050-099, 150-199
	34		W0645	210B	24		23-34-14	275-299
	35		W0645	192	24		23-34-14	050-099, 150-199
	35		W0645	209R	24		23-34-14	275-299
	36		W0645	192Z			23-34-14	050-099, 150-199
	36		W0645	209B	24		23-34-14	275-299
	37	UNUSED						ALL
	38	UNUSED						ALL
	39		W0645	105	22		23-34-11	ALL
	40		W0645	106	20		23-34-11	ALL
	41	UNUSED						ALL
	42		W0645	132	24		23-34-14	050-099, 150-199
	42		W0645	133	24		23-34-14	275-299
	43		W0645	132Z			23-34-14	050-099, 150-199

HOOKUP LIST

D280T132

91-21-51

Section D01800

Page 22

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01879		296/147/R 21		PLUG- (continued)				ALL
	43		W0645	133Z			23-34-14	275-299
	44		W0645	133	24		23-34-14	050-099, 150-199
	44		W0645	132	24		23-34-14	275-299
	45		W0645	133Z			23-34-14	050-099, 150-199
	45		W0645	132Z			23-34-14	275-299
	46	UNUSED						ALL
	47	UNUSED						ALL
	48		W0645	180	24		23-34-14	050-099, 150-199
	48		W0645	209R	24		23-34-14	275-299
	49		W0645	180Z			23-34-14	050-099, 150-199
	49		W0645	209B	24		23-34-14	275-299
	50		W0645	181	24		23-34-14	050-099, 150-199
	50		W0645	210R	24		23-34-14	275-299
	51		W0645	181Z			23-34-14	050-099, 150-199
	51		W0645	210B	24		23-34-14	275-299
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
D01880		0346/236/L050		RCPT-				275-299
	1		W1198	001	20		35-21-12	275-299
	2		W1198	002	20		35-21-12	275-299
D01881		P033-00/ /		RELAY SOCKET				050-099
D01881		P033-00/ /		RELAY SOCKET-				150-199, 275-299
	A1		W0144	043	24		23-34-12	ALL
	A2		W0144	044	24		23-34-12	ALL
	A3	UNUSED						ALL
	B1	UNUSED						ALL
	B2	UNUSED						ALL
	B3	UNUSED						ALL
	X1		W0144	045	24		23-34-12	ALL
	X2		W0144	042	24		23-34-12	ALL
D01882		P050-00/ /		RCPT-				ALL
	1		W1114	PB1			99-99-99	ALL
	2	UNUSED						ALL
	3		W1114	008	22		28-21-12	ALL
	4	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D01800

Page 23

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01882		P050-00/ /		RCPT- (continued)				ALL
	5		W1114	010	22		28-21-12	ALL
	6		W1114	009	22		28-21-12	ALL
	7	UNUSED						ALL
	8		W1114	020Z			28-21-12	ALL
	9		W1114	020	22		28-21-12	ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12		W1114	024	22		28-21-12	ALL
	13		W1114	024Z			28-21-12	ALL
	14		W1114	025Z			28-21-12	ALL
	15		W1114	025	22		28-21-12	ALL
	16		W1114	021	22		28-21-12	ALL
	17		W1114	021Z			28-21-12	ALL
	18	UNUSED						ALL
	19		W1114	001	22		28-21-12	ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41		W1114	PB1			99-99-99	ALL

HOOKUP LIST

D280T132

91-21-51

Section D01800

Page 24

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01883		1105/210/R090		RCPT-				050-099
D01883		989/210/R090		RCPT-				150-199, 275-278
D01883		0989/210/R090		RCPT-				280-299
	A	FM	W1445	201R	16		23-34-18	ALL
	B	FM	W1445	201B	16		23-34-18	ALL
	C		W1445	301Y	24		23-34-18	ALL
	D		W1445	301B	24		23-34-18	ALL
	E		W1445	301R	24		23-34-18	ALL
	F		W1445	01CX			23-34-18	ALL
	=CF		W1445	01CO			23-34-18	ALL
D01885		1105/210/L090		RCPT				050-099
D01885		0980/210/L090		RCPT				150-199, 275-278
D01885		0989/210/L090		RCPT				280-299
	A	FM	W1443	201R	16		23-34-18	ALL
	B	FM	W1443	201B	16		23-34-18	ALL
	C		W1443	301Y	24		23-34-18	ALL
	D		W1443	301B	24		23-34-18	ALL
	E		W1443	301R	24		23-34-18	ALL
	F		W1443	01CX			23-34-18	ALL
	=CF		W1443	01CO			23-34-18	ALL
D01886		P050-00/ /		RCPT-				ALL
	1		W1078	101	24		36-11-61	ALL
	2		W1078	099	22		36-22-11	ALL
	3		W1078	752	22		36-22-11	ALL
	4		W1078	503	24		21-51-21	ALL
	5		W1078	061	24		36-11-51	ALL
	6		W1078	528R	22		26-18-12	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						050-099, 150-156, 162-166, 275-276
	9		W1078	PD1			36-11-51	157, 167-199, 277-299
	10	UNUSED						ALL
	11		W1078	738	22		36-11-51	ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D01800

Page 25

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01886		P050-00/ /		RCPT- (continued)				ALL
	17		W1078	251	24		36-11-61	ALL
	18		W1078	243	24		36-11-61	ALL
	19	UNUSED						ALL
	20		W1078	092	24		36-11-51	ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27		W1078	240	22		36-11-61	ALL
	28		W1078	095	24		36-11-61	ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31		W1078	100	22		36-11-61	ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34		W1078	249	22		36-11-61	ALL
	35		W1078	093	22		36-11-51	ALL
	36		W1078	507R	22		26-18-12	ALL
	37		W1078	177	24		36-11-61	ALL
	38		W1078	500	24		21-51-11	ALL
	39		W1078	087	22		36-11-51	ALL
	40		W1078	086	22		36-11-51	ALL
	41		W1078	PD1			36-11-51	050-099, 150-156, 162-166, 275-276
	41	UNUSED						157, 167-199, 277-299
	42	UNUSED						ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46		W1078	744	22		36-11-51	ALL
	47		W1078	242	24		36-11-61	ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						050-099, 150-156, 162-166, 275-276
	51		W1078	PD1			36-11-51	157, 167-199, 277-299
	52		W1078	097	24		36-11-51	ALL
	53		W1078	094	24		36-11-51	ALL
	54		W1078	737	24		36-11-51	ALL

HOOKUP LIST

D280T132

91-21-51

Section D01800

Page 26

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01886		P050-00/ /		RCPT- (continued)				ALL
	55		W1078	011	24		36-11-51	ALL
	56		W1078	102	22		36-11-61	ALL
	57		W1078	508R	22		26-18-12	ALL
	58		W1078	103	24		36-11-61	ALL
	59		W1078	739	22		36-11-51	ALL
	60		W1078	085	22		36-11-51	ALL
	61		W1078	241	22		36-11-61	ALL
	62	UNUSED						ALL
	63		W1078	PD1			36-11-51	050-099, 150-156, 162-166, 275-276
	63	UNUSED						157, 167-199, 277-299
	64		W1078	105	24		36-11-41	ALL
	65		W1078	246	24		36-11-61	ALL
	66		W1078	248	22		36-11-61	ALL
D01887		0310/195/R035		PLUG-COAXIAL				ALL
	= A1		W1479	01CX			23-34-14	ALL
	= C1		W1479	01CO			23-34-14	ALL
D01888		1702/255/L070		PLUG-				ALL
	1		W0502	009	18		27-23-11	ALL
	2		W0502	007	20		27-23-11	ALL
	3		W0502	008	20		27-23-11	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9		W0502	010	18		27-23-11	ALL
	10		W0502	006	20		27-23-11	ALL
D01890		1656/235/L065		PLUG-				ALL
	1		W0512	004	18		27-23-11	ALL
	2		W0512	002	20		27-23-11	ALL
	3		W0512	003	20		27-23-11	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9		W0512	005	18		27-23-11	ALL

HOOKUP LIST
D280T132

91-21-51
Section D01800
Page 27
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01890		1656/235/L065		PLUG- (continued)				ALL
	10		W0512	001	20		27-23-11	ALL
D01892		FSS 170/ /TE		PLUG-				ALL
	1	DK	W0500	004	18		27-28-11	ALL
	2		W0500	001	20		27-28-11	ALL
	3	UNUSED						050-099, 150-154, 162-165, 275-276
	3		W0500	017	20		27-28-11	155-157, 166-199, 277-299
	4		W0500	003	20		27-28-11	ALL
	5		W0500	002	20		27-28-11	ALL
D01894		FSS 118/ /TE		PLUG-				ALL
	1		W0500	014	18		27-21-11	ALL
	2		W0500	011	20		27-21-11	ALL
	3		W0500	012	18		27-21-11	ALL
	4		W0500	201B	20		27-28-13	ALL
	5		W0500	201R	20		27-28-13	ALL
	6		W0500	015	20		27-28-13	ALL
	7		W0500	016	18		27-28-13	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12		W0500	013	18		27-21-11	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	DED		W0500	012Z			27-21-11	ALL
D01898		0154/268/L020		PLUG-				ALL
	A		W0622	A-D			30-41-11	ALL
	B		W0622	A-E			30-41-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D01800

Page 28 End

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01900		0154/268/L020		PLUG-				ALL
	A		W0622	A-F			30-41-11	ALL
	B		W0622	A-G			30-41-11	ALL
D01902		0175/268/R056		PLUG-				ALL
	A		W1156	B-A			30-41-11	ALL
	B		W1156	B-B			30-41-11	ALL
D01904		0175/268/R056		PLUG-				ALL
	A		W1156	C-A			30-41-11	ALL
	B		W1156	C-B			30-41-11	ALL
D01906		0175/268/R056		PLUG-				ALL
	C		W1156	A-A			30-41-11	ALL
	D		W1156	A-B			30-41-11	ALL
D01908		0212/268/R060		PLUG-				ALL
	A		W0622	A-S			30-41-11	ALL
	B		W0622	A-T			30-41-11	ALL
D01910		0212/268/R060		PLUG-				ALL
	A		W0622	A-U			30-41-11	ALL
	B		W0622	A-V			30-41-11	ALL
D01912		0154/268/R020		PLUG-				ALL
	A		W0624	A-D			30-41-12	ALL
	B		W0624	A-E			30-41-12	ALL
D01914		0154/268/R020		PLUG-				ALL
	A		W0624	A-F			30-41-12	ALL
	B		W0624	A-G			30-41-12	ALL
D01916		0196/264/L046		PLUG-				ALL
	A		W1158	B-A			30-41-12	ALL
	B		W1158	B-B			30-41-12	ALL
D01918		0196/264/L046		PLUG-				ALL
	A		W1158	C-A			30-41-12	ALL
	B		W1158	C-B			30-41-12	ALL

HOOKUP LIST

D280T132

91-21-51

Section D01900

Page 1

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01920		0196/264/L046		PLUG-				ALL
	C		W1158	A-A			30-41-12	ALL
	D		W1158	A-B			30-41-12	ALL
D01921		1043/183/R 77		PLUG				ALL
	1		W0462	020	20		31-31-22	ALL
	2		W0462	202R	20		31-31-22	ALL
	3		W0462	202B	20		31-31-22	ALL
	DED		W0462	020Z			31-31-22	ALL
	DED		W0462	202Z			31-31-22	ALL
D01922		0212/268/L035		PLUG-				ALL
	A		W0624	A-L			30-41-12	ALL
	B		W0624	A-M			30-41-12	ALL
D01923		1041/188/L084		PLUG				ALL
	1		W0484	024	20		31-31-22	ALL
	2		W0484	202R	20		31-31-22	ALL
	3		W0484	202B	20		31-31-22	ALL
	DED		W0484	024Z			31-31-22	ALL
	DED		W0484	202Z			31-31-22	ALL
D01924		0212/268/L060		PLUG-				ALL
	A		W0624	A-J			30-41-12	ALL
	B		W0624	A-K			30-41-12	ALL
D01926		P037-00/ /		RELAY SOCKET-				ALL
	A1		W0192	563	18		27-81-11	ALL
	A2		W0192	564	18		27-81-11	ALL
	A3		W0192	175	22		27-81-11	ALL
	B1		W0192	14F	20		27-81-11	ALL
	B2		W0192	14E	22		27-81-11	ALL
	B3	UNUSED						ALL
	X1		W0192	565	22		27-81-11	ALL
	X2		W0192	559	22		27-81-11	ALL
D01927		255/268/L 10		PLUG- MOA PER DWG REF:BACC45FT18-8S				275-299
	1		W0047	01CX			23-32-13	275-299
	2		W0047	02CX			23-32-13	275-299
	3	UNUSED						275-278

HOOKUP LIST

D280T132

91-21-51

Section D01900

Page 2

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01927		255/268/L 10		PLUG- MOA PER DWG REF:BACC45FT18-8S (continued)				275-299
	3		W0047	25CX			23-32-13	280-299
	4	UNUSED						275-299
	5		W0047	07CX			23-32-13	275-299
	6	UNUSED						275-299
	7		W0047	09CX			23-32-21	275-299
	8	UNUSED						275-299
	C3	UNUSED						275-278
	C4	UNUSED						275-299
	C6	UNUSED						275-299
	C8	UNUSED						275-299
	= C1		W0047	01CO			23-32-13	275-299
	= C2		W0047	02CO			23-32-13	275-299
	= C3		W0047	25CO			23-32-13	280-299
	= C5		W0047	07CO			23-32-13	275-299
	= C7		W0047	09CO			23-32-21	275-299
D01928		P061-00/ /		PLUG-P61				ALL
	1		W0070	801R	20		26-23-12	050-099, 155-199, 275-299
	1	UNUSED						150-154
	2		W0070	802R	20		26-23-12	050-099, 155-199, 275-299
	2	UNUSED						150-154
	3		W0070	803R	20		26-21-11	ALL
	4		W0070	804R	20		26-21-11	ALL
	5		W0070	805R	20		26-21-11	ALL
	6		W0070	806R	20		26-23-12	ALL
	7		W0070	807R	20		26-22-21	ALL
	8		W0070	808R	20		26-21-11	ALL
	9		W0070	809R	20		26-21-11	ALL
	10		W0070	810R	20		26-23-12	050-099, 155-199, 275-299
	10		W0070	815R	20		26-23-12	150-154
	11		W0070	811R	20		26-23-12	050-099, 155-199, 275-299
	11		W0070	816R	20		26-23-12	150-154
	12		W0070	812R	20		26-22-21	ALL
	13	UNUSED						050-099, 150-199
	13		W0070	813R	20		26-22-21	275-299
	14	UNUSED						050-099, 150-199
	14		W0070	814R	20		26-22-21	275-299
	15	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D01900

Page 3

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01929		255/268/L 10		PLUG				275-299
	1		W0047	556BN	24		23-32-31	275-299
	2		W0047	556B	24		23-32-31	275-299
	3		W0047	556Z			23-32-31	275-299
	4		W0047	557BN	24		23-32-31	275-299
	5		W0047	557B	24		23-32-31	275-299
	6		W0047	557Z			23-32-31	275-299
	7		W0047	558BN	24		23-32-31	275-299
	8		W0047	558B	24		23-32-31	275-299
	9		W0047	558Z			23-32-31	275-299
	10		W0047	560BN	24		23-32-51	275-299
	11		W0047	560B	24		23-32-51	275-299
	12		W0047	560Z			23-32-51	275-299
	13		W0047	561BN	24		23-32-51	275-299
	14		W0047	561B	24		23-32-51	275-299
	15		W0047	561Z			23-32-51	275-299
	16		W0047	562BN	24		23-32-51	275-299
	17		W0047	562B	24		23-32-51	275-299
	18		W0047	562Z			23-32-51	275-299
	19		W0047	555R	24		23-32-31	275-299
	20		W0047	555B	24		23-32-31	275-299
	21		W0047	555Z			23-32-31	275-299
	22		W0047	559R	24		23-32-51	275-299
	23		W0047	559B	24		23-32-51	275-299
	24		W0047	559Z			23-32-51	275-299
	25	UNUSED						275-299
	26	UNUSED						275-299
	27	UNUSED						275-299
	28	UNUSED						275-299
	29	UNUSED						275-299
	30	UNUSED						275-299
	31	UNUSED						275-299
D01930		P061-00/ /		PLUG-P61				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W0070	833R	20		26-21-11	ALL
	4		W0070	834R	20		26-21-11	ALL
	5		W0070	835R	20		26-21-11	ALL
	6		W0070	836R	20		26-23-11	ALL
	7	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D01900

Page 4

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01930		P061-00/ /		PLUG-P61 (continued)				ALL
	8		W0070	838R	20		26-21-11	ALL
	9		W0070	839R	20		26-21-11	ALL
	10		W0070	840R	20		26-23-11	ALL
	11		W0070	841R	20		26-23-11	ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
D01931		255/268/L 10		PLUG				275-299
	1		W0047	545R	24		23-32-12	275-299
	2		W0047	545B	24		23-32-12	275-299
	3		W0047	546R	24		23-32-12	275-299
	4		W0047	546B	24		23-32-12	275-299
	5		W0047	547R	24		23-32-12	275-299
	6		W0047	547B	24		23-32-12	275-299
	7		W0047	548R	24		23-32-12	275-299
	8		W0047	548B	24		23-32-12	275-299
	9		W0047	549R	24		23-32-12	275-299
	10		W0047	549B	24		23-32-12	275-299
	11		W0047	550R	24		23-32-12	275-299
	12		W0047	550B	24		23-32-12	275-299
	13	UNUSED						275-299
	14	UNUSED						275-299
	15	UNUSED						275-299
	16	UNUSED						275-299
	17		W0047	FRH			23-32-12	275-299
	18		W0047	544R	24		23-32-12	275-299
	19		W0047	544B	24		23-32-12	275-299
	20	UNUSED						275-299
	21	UNUSED						275-299
	22	UNUSED						275-299
	23	UNUSED						275-299
	24	UNUSED						275-299
	25	UNUSED						275-299
	26		W0047	544Z			23-32-12	275-299
	27		W0047	551R	24		23-32-13	275-299
	28		W0047	551B	24		23-32-13	275-299
	29		W0047	552R	24		23-32-13	275-299
	30		W0047	552B	24		23-32-13	275-299

HOOKUP LIST

D280T132

91-21-51

Section D01900

Page 5

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01931		255/268/L 10		PLUG (continued)				275-299
	31		W0047	553R	24		23-32-13	275-299
	32		W0047	553B	24		23-32-13	275-299
	33		W0047	554R	24		23-32-13	275-299
	34		W0047	554B	24		23-32-13	275-299
	35	UNUSED						275-278
	35		W0047	624R	24		23-32-13	280-299
	36	UNUSED						275-278
	36		W0047	624B	24		23-32-13	280-299
	37	UNUSED						275-278
	37		W0047	625R	24		23-32-13	280-299
	38	UNUSED						275-278
	38		W0047	625B	24		23-32-13	280-299
	39	UNUSED						275-299
	40	UNUSED						275-299
	41	UNUSED						275-299
	42	UNUSED						275-299
	43	UNUSED						275-299
	44	UNUSED						275-299
	45	UNUSED						275-299
	46	UNUSED						275-299
	47	UNUSED						275-299
	48	UNUSED						275-299
	49	UNUSED						275-299
	50	UNUSED						275-299
	51	UNUSED						275-299
	52	UNUSED						275-299
	53	UNUSED						275-299
	54	UNUSED						275-299
	55	UNUSED						275-299
	DED		W0047	551Z			23-32-13	275-299
	DED		W0047	552Z			23-32-13	275-299
	DED		W0047	553Z			23-32-13	275-299
	DED		W0047	554Z			23-32-13	275-299
	DED		W0047	624Z			23-32-13	280-299
	DED		W0047	625Z			23-32-13	280-299
			W0047	545Z			23-32-12	275-299
			W0047	546Z			23-32-12	275-299
			W0047	547Z			23-32-12	275-299
			W0047	548Z			23-32-12	275-299
			W0047	549Z			23-32-12	275-299

HOOKUP LIST

D280T132

91-21-51

Section D01900

Page 6

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01931		255/268/L 10		PLUG (continued)				275-299
			W0047	550Z			23-32-12	275-299
			W0047	FRH			23-32-12	275-299
D01933		255/268/L 10		PLUG				275-299
	1		W0047	574	20		23-32-11	275-299
	2		W0047	573	20		23-32-11	275-299
	3		W0047	570	20		23-32-11	275-276
	3		W0047	619	20		23-32-11	277-299
	4		W0047	571	20		23-32-11	275-299
	5		W0047	572	20		23-32-11	275-299
	6		W0047	577	24		23-32-12	275-299
	7	UNUSED						275-299
	8	UNUSED						275-299
	9	UNUSED						275-299
	10	UNUSED						275-299
	11	UNUSED						275-299
	12	UNUSED						275-299
	13	UNUSED						275-299
	14	UNUSED						275-299
	15	UNUSED						275-299
	16	UNUSED						275-299
	17	UNUSED						275-299
	18	UNUSED						275-299
	19		W0047	578	24		23-32-12	275-299
	20	UNUSED						275-299
	21	UNUSED						275-299
	22	UNUSED						275-299
	23		W0047	579	24		23-32-12	275-299
	24		W0047	575	20		23-32-11	275-299
	25		W0047	576	22		23-32-11	275-299
	26	UNUSED						275-299
	27		W0047	401R	20		23-32-13	275-299
	28		W0047	401G	20		23-32-13	275-299
	29		W0047	401B	20		23-32-13	275-299
	30		W0047	401Y	20		23-32-13	275-299
	31	UNUSED						275-299
	32	UNUSED						275-299
	33	UNUSED						275-299
	34	UNUSED						275-299
	35	UNUSED						275-299

HOOKUP LIST
D280T132

91-21-51
Section D01900
Page 7
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01933		255/268/L 10		PLUG (continued)				275-299
	36	UNUSED						275-299
	37	UNUSED						275-299
	38	UNUSED						275-299
	39	UNUSED						275-299
	40	UNUSED						275-299
	41	UNUSED						275-299
D01934J		1010/175/R068		RCPT-				ALL
	1		W0920	201R	18		32-61-12	ALL
	2		W0920	201B	18		32-61-12	ALL
	3	UNUSED						ALL
D01934P		//		PLUG - VENDOR PIGTAIL				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
D01935A		//		PLUG PART OF D01935				050-099, 151, 275-299
D01935A		SHELF/E01/04		PLUG PART OF D01935				150, 152-199
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	A1	UNUSED						150, 152-199
	A2	UNUSED						150, 152-199
	C1	UNUSED						150, 152-199
	C2	UNUSED						150, 152-199
	10	UNUSED						ALL
	11	UNUSED						ALL
	12		W0117	553R	24		23-32-21	050-099, 151, 275-299
	12	UNUSED						150, 152-199
	13	UNUSED						050-099, 151, 275-299
	13		W0117	552R	24		23-32-21	150, 152-199
	14		W0117	553B	24		23-32-21	050-099, 151, 275-299
	14		W0117	552B	24		23-32-21	150, 152-199

HOOKUP LIST

D280T132

91-21-51

Section D01900

Page 8

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01935A		//		PLUG PART OF D01935 (continued)				050-099, 151, 275-299
D01935A		SHELF/E01/04		PLUG PART OF D01935 (continued)				150, 152-199
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18		W0117	527R	24		23-32-21	050-099, 151
	18	UNUSED						150, 152-199
	18		W0117	572R	24		23-32-21	275-299
	19		W0117	527B	24		23-32-21	050-099, 151
	19		W0117	918	20		23-32-21	150, 152-199
	19		W0117	572B	24		23-32-21	275-299
	20		W0117	528R	24		23-32-21	050-099, 151, 275-299
	20	UNUSED						150, 152-199
	21		W0117	528B	24		23-32-21	050-099, 151, 275-299
	21	UNUSED						150, 152-199
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						050-099, 151, 275-299
	29		W0117	908R	22		23-32-21	150, 152-199
	30	UNUSED						050-099, 151, 275-299
	30		W0117	908B	22		23-32-21	150, 152-199
	31	UNUSED						050-099, 151, 275-299
	32		W0117	003	24		23-32-21	050-099, 151, 275-299
	33		W0117	616	20		23-32-21	050-099, 151, 275-299
	34	UNUSED						050-099, 151, 275-299
	35	UNUSED						050-099, 151, 275-299
	36	UNUSED						050-099, 151, 275-299
	37	UNUSED						050-099, 151, 275-299
	38	UNUSED						050-099, 151, 275-299
	39		W0117	617	20		23-32-21	050-099, 151, 275-299
	40		W0117	618	20		23-32-21	050-099, 151, 275-299
	41	UNUSED						050-099, 151, 275-299
	42		W0117	689	20		23-32-21	050-099, 151, 275-299
	43	UNUSED						050-099, 151, 275-299
	44	UNUSED						050-099, 151, 275-299
	45		W0117	690	20		23-32-21	050-099, 151, 275-299

HOOKUP LIST
D280T132

91-21-51
Section D01900
Page 9
Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01935A		//		PLUG PART OF D01935 (continued)				050-099, 151, 275-299
D01935A		SHELF/E01/04		PLUG PART OF D01935 (continued)				150, 152-199
	46	UNUSED						050-099, 151, 275-299
	47	UNUSED						050-099, 151, 275-299
	48	UNUSED						050-099, 151, 275-299
	49	UNUSED						050-099, 151, 275-299
	50	UNUSED						050-099, 151, 275-299
	51	UNUSED						050-099, 151, 275-299
	52	UNUSED						050-099, 151, 275-299
	53	UNUSED						050-099, 151, 275-299
	54	UNUSED						050-099, 151, 275-299
	55	UNUSED						050-099, 151, 275-299
	56	UNUSED						050-099, 151, 275-299
	57	UNUSED						050-099, 151, 275-299
	58	UNUSED						050-099, 151, 275-299
	59	UNUSED						050-099, 151, 275-299
	60	UNUSED						050-099, 151, 275-299
	61	UNUSED						050-099, 151, 275-299
	62	UNUSED						050-099, 151, 275-299
	63	UNUSED						050-099, 151, 275-299
	64	UNUSED						050-099, 151, 275-299
	65	UNUSED						050-099, 151, 275-299
	66	UNUSED						050-099, 151, 275-299
	67	UNUSED						050-099, 151, 275-299
	CAP	Y	W0117	313B	24		23-32-21	150, 152-199
	CAP	Y	W0117	313R	24		23-32-21	150, 152-199
	CAP	Y	W0117	313Y	24		23-32-21	150, 152-199
	REF		W0117	527Z			23-32-21	050-099, 151
	REF		W0117	003Z			23-32-21	050-099, 151, 275-299
	REF		W0117	528	20		23-32-21	050-099, 151, 275-299
	REF		W0117	528Z			23-32-21	050-099, 151, 275-299
	REF		W0117	553	20		23-32-21	050-099, 151, 275-299
	REF		W0117	553Z			23-32-21	050-099, 151, 275-299
	REF		W0117	003F	20		23-32-21	050-099, 276-299
	REF		W0117	313	20		23-32-21	150, 152-199
	REF		W0117	313Z			23-32-21	150, 152-199
	REF		W0117	552	20		23-32-21	150, 152-199
	REF		W0117	552Z			23-32-21	150, 152-199
	REF		W0117	004	20		23-32-21	151, 275
	REF		W0117	572Z			23-32-21	275-299
			W0117	908Z			23-32-21	150, 152-199

HOOKUP LIST

D280T132

91-21-51

Section D01900

Page 10

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01935A		//		PLUG PART OF D01935 (continued)				050-099, 151, 275-299
D01935A		SHELF/E01/04		PLUG PART OF D01935 (continued)				150, 152-199
			W0117	909	20		23-32-21	150, 152-199
			W0117	918Z			23-32-21	150, 152-199
			W0117	920	20		23-32-21	150, 152-199
D01935B		//		PLUG PART OF D01935				050-099, 151, 275-299
D01935B		SHELF/E01/04		PLUG PART OF D01935				150, 152-199
	1		W0117	247R	24		23-32-21	050-099, 151, 275-299
	1		W0117	902	20		23-32-21	150, 152-199
	2		W0117	247B	24		23-32-21	050-099, 151, 275-299
	2	UNUSED						150, 152-199
	3		W0117	625	20		23-32-21	050-099, 151, 275-299
	3	UNUSED						150, 152-199
	4		W0117	624	20		23-32-21	050-099, 151, 275-299
	4	UNUSED						150, 152-199
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	A1	UNUSED						050-099, 151, 275-299
	A2		W0117	02CX			23-32-21	050-099, 151, 275-299
	C1	UNUSED						050-099, 151, 275-299
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						050-099, 151, 275-299
	17		W0117	903	20		23-32-21	150, 152-199
	18		W0117	313B	24		23-32-21	050-099, 151, 275-299
	18		W0117	527B	24		23-32-21	150, 152-199
	19		W0117	313R	24		23-32-21	050-099, 151, 275-299
	19		W0117	527R	24		23-32-21	150, 152-199
	20		W0117	313Y	24		23-32-21	050-099, 151, 275-299
	20		W0117	528B	24		23-32-21	150, 152-199
	21		W0117	234R	24		23-32-21	050-099, 151, 275-299
	21		W0117	528R	24		23-32-21	150, 152-199

HOOKUP LIST

D280T132

91-21-51

Section D01900

Page 11

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01935B		//		PLUG PART OF D01935 (continued)				050-099, 151, 275-299
D01935B		SHELF/E01/04		PLUG PART OF D01935 (continued)				150, 152-199
	22		W0117	234B	24		23-32-21	050-099, 151, 275-299 150, 152-199
	22	UNUSED						150, 152-199
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29		W0117	552R	24		23-32-21	050-099, 151, 275-299
	29	UNUSED						150, 152-199
	30		W0117	552B	24		23-32-21	050-099, 151, 275-299
	30	UNUSED						150, 152-199
	31	UNUSED						150, 152-199
	32	UNUSED						150, 152-199
	33		W0117	616	20		23-32-21	150, 152-199
	34	UNUSED						150, 152-199
	35	UNUSED						150, 152-199
	36	UNUSED						150, 152-199
	37		W0117	924R	22		23-32-21	150, 152-199
	38		W0117	924B	22		23-32-21	150, 152-199
	39	UNUSED						150, 152-199
	40		W0117	618	20		23-32-21	150, 152-199
	41	UNUSED						150, 152-199
	42		W0117	689	20		23-32-21	150, 152-199
	43		W0117	925R	22		23-32-21	150, 152-199
	44		W0117	925B	22		23-32-21	150, 152-199
	45		W0117	910	20		23-32-21	150, 152-199
	46	UNUSED						150, 152-199
	47	UNUSED						150, 152-199
	48	UNUSED						150, 152-199
	49	UNUSED						150, 152-199
	50	UNUSED						150, 152-199
	51		W0117	553R	24		23-32-21	150, 152-199
	52	UNUSED						150, 152-199
	53	UNUSED						150, 152-199
	54	UNUSED						150, 152-199
	55		W0117	553B	24		23-32-21	150, 152-199
	56	UNUSED						150, 152-199
	57	UNUSED						150, 152-199

HOOKUP LIST

D280T132

91-21-51

Section D01900

Page 12

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01935B		//		PLUG PART OF D01935 (continued)				050-099, 151, 275-299
D01935B		SHELF/E01/04		PLUG PART OF D01935 (continued)				150, 152-199
	58	UNUSED						150, 152-199
	59	UNUSED						150, 152-199
	60	UNUSED						150, 152-199
	61	UNUSED						150, 152-199
	62	UNUSED						150, 152-199
	63	UNUSED						150, 152-199
	64	UNUSED						150, 152-199
	65	UNUSED						150, 152-199
	66	UNUSED						150, 152-199
	67	UNUSED						150, 152-199
	= C2		W0117	02CO			23-32-21	050-099, 151, 275-299
	CAP	Y	W0117	003	24		23-32-21	150, 152-199
	CAP	Y	W0117	617	20		23-32-21	150, 152-199
	CAP	Y	W0117	690	20		23-32-21	150, 152-199
	CAP	Y	W0117	904	20		23-32-21	150, 152-199
	CAP	Y	W0117	905	20		23-32-21	150, 152-199
	CAP	Y	W0117	906	20		23-32-21	150, 152-199
	DED		W0117	234Z			23-32-21	050-099, 151, 275-299
	DED		W0117	247Z			23-32-21	050-099, 151, 275-299
	DED		W0117	902Z			23-32-21	150, 152-199
	DED		W0117	903Z			23-32-21	150, 152-199
	DED		W0117	924Z			23-32-21	150, 152-199
	REF		W0117	313	20		23-32-21	050-099, 151, 275-299
	REF		W0117	313Z			23-32-21	050-099, 151, 275-299
	REF		W0117	552	20		23-32-21	050-099, 151, 275-299
	REF		W0117	552Z			23-32-21	050-099, 151, 275-299
	REF		W0117	003Z			23-32-21	150, 152-199
	REF		W0117	004	20		23-32-21	150, 152-199
	REF		W0117	527Z			23-32-21	150, 152-199
	REF		W0117	528	20		23-32-21	150, 152-199
	REF		W0117	528Z			23-32-21	150, 152-199
	REF		W0117	553	20		23-32-21	150, 152-199
	REF		W0117	553Z			23-32-21	150, 152-199
			W0117	904Z			23-32-21	150, 152-199
			W0117	905Z			23-32-21	150, 152-199
			W0117	906Z			23-32-21	150, 152-199
			W0117	910Z			23-32-21	150, 152-199
			W0117	921	20		23-32-21	150, 152-199
			W0117	925Z			23-32-21	150, 152-199

HOOKUP LIST

D280T132

91-21-51

Section D01900

Page 13

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01935B		//		PLUG PART OF D01935 (continued)				050-099, 151, 275-299
D01935B		SHELF/E01/04		PLUG PART OF D01935 (continued)				150, 152-199
			W0117	926	22		23-32-21	150, 152-199
D01935C		SHELF/E01/04		PLUG PART OF D01935				150, 152-199
	1		W0117	247R	22		23-32-21	150, 152-199
	2		W0117	247B	22		23-32-21	150, 152-199
	3		W0117	917	20		23-32-21	150, 152-199
	4		W0117	624	20		23-32-21	150, 152-199
	5	UNUSED						150, 152-199
	6	UNUSED						150, 152-199
	7	UNUSED						150, 152-199
	8	UNUSED						150, 152-199
	9	UNUSED						150, 152-199
	A1	UNUSED						150, 152-199
	A2		W0117	02CX			23-32-21	150, 152-199
	C1	UNUSED						150, 152-199
	10	UNUSED						150, 152-199
	11	UNUSED						150, 152-199
	12	UNUSED						150, 152-199
	13	UNUSED						150, 152-199
	14	UNUSED						150, 152-199
	15	UNUSED						150, 152-199
	16	UNUSED						150, 152-199
	17	UNUSED						150, 152-199
	18	UNUSED						150, 152-199
	19	UNUSED						150, 152-199
	20	UNUSED						150, 152-199
	21		W0117	234R	24		23-32-21	150, 152-199
	22		W0117	234B	24		23-32-21	150, 152-199
	23	UNUSED						150, 152-199
	24	UNUSED						150, 152-199
	25	UNUSED						150, 152-199
	26	UNUSED						150, 152-199
	27	UNUSED						150, 152-199
	28	UNUSED						150, 152-199
	29	UNUSED						150, 152-199
	30	UNUSED						150, 152-199
	= C2		W0117	02CO			23-32-21	150, 152-199
			W0117	234Z			23-32-21	150, 152-199
			W0117	247Z			23-32-21	150, 152-199

HOOKUP LIST

D280T132

91-21-51

Section D01900

Page 14

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01935C		SHELF/E01/04		PLUG PART OF D01935 (continued)				150, 152-199
			W0117	900	20		23-32-21	150, 152-199
D01937		1512/195/L70		PLUG-MODAL SUPPRESSION ACCELEROMETER				150-199, 275-299
	1		W0741	201B	22		22-21-11	150-199, 275-299
	2		W0741	201R	22		22-21-11	150-199, 275-299
	3		W0741	101	22		22-21-11	150-199, 275-299
	4		W0741	202R	22		22-21-11	150-199, 275-299
	5		W0741	202B	22		22-21-11	150-199, 275-299
	6		W0741	102	22		22-21-11	150-199, 275-299
	7	UNUSED						150-199, 275-299
	8	UNUSED						150-199, 275-299
	9	UNUSED						150-199, 275-299
	10	UNUSED						150-199, 275-299
	11	UNUSED						150-199, 275-299
	12	UNUSED						150-199, 275-299
	DED		W0741	202Z			22-21-11	150-199, 275-299
D01938J		999/193/L064		RCPT-				ALL
	1		W0930	201R	18		32-61-11	ALL
	2		W0930	201B	18		32-61-11	ALL
	3	UNUSED						ALL
D01938P		//		PLUG - VENDOR PIGTAIL				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
D01939		1518/195/R70		PLUG-MODAL SUPPRESSION ACCELEROMETER				150-199, 275-299
	1		W0743	201B	22		22-21-21	150-199, 275-299
	2		W0743	201R	22		22-21-21	150-199, 275-299
	3		W0743	101	22		22-21-21	150-199, 275-299
	4		W0743	202R	22		22-21-21	150-199, 275-299
	5		W0743	202B	22		22-21-21	150-199, 275-299
	6		W0743	102	22		22-21-21	150-199, 275-299
	7	UNUSED						150-199, 275-299
	8	UNUSED						150-199, 275-299
	9	UNUSED						150-199, 275-299
	10	UNUSED						150-199, 275-299
	11	UNUSED						150-199, 275-299
	12	UNUSED						150-199, 275-299

HOOKUP LIST

D280T132

91-21-51

Section D01900

Page 15

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01939		1518/195/R70		PLUG-MODAL SUPPRESSION ACCELEROMETER (continued)				150-199, 275-299
	DED		W0743	202Z			22-21-21	150-199, 275-299
D01941		864/260/R 70		PLUG				280-299
	1		W1895	001	20		23-32-54	280-299
	2		W1895	003	22		23-32-54	280-299
	3		W1895	006	22		23-32-54	280-299
	4		W1895	002	20		23-32-54	280-299
	5		W1895	007	22		23-32-54	280-299
	6		W1895	008	22		23-32-54	280-299
	7		W1895	009	22		23-32-54	280-299
	8		W1895	004	24		23-32-54	280-299
	9	UNUSED						280-299
	10	UNUSED						280-299
	=A1		W1895	01CX			23-32-54	280-299
	=C1		W1895	01CO			23-32-54	280-299
D01942J		999/193/R064		RCPT-				ALL
	1		W0932	201R	18		32-61-12	ALL
	2		W0932	201B	18		32-61-12	ALL
	3	UNUSED						ALL
D01942P		//		PLUG - VENDOR PIGTAIL				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
D01943		864/260/L 70		PLUG				280-299
	1		W1845	001	20		23-32-54	280-299
	2		W1845	003	22		23-32-54	280-299
	3		W1845	006	22		23-32-54	280-299
	4		W1845	002	20		23-32-54	280-299
	5		W1845	007	22		23-32-54	280-299
	6		W1845	008	22		23-32-54	280-299
	7		W1845	009	22		23-32-54	280-299
	8		W1845	004	24		23-32-54	280-299
	9	UNUSED						280-299
	10	UNUSED						280-299
	=A1		W1845	01CX			23-32-54	280-299
	=C1		W1845	01CO			23-32-54	280-299

HOOKUP LIST

D280T132

91-21-51

Section D01900

Page 16

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01946J		1000/190/L068		RCPT-				ALL
	1		W0922	204R	18		32-61-11	ALL
	2		W0922	204B	18		32-61-11	ALL
	3	UNUSED						ALL
D01946P		//		PLUG - VENDOR PIGTAIL				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
D01948		P036-00/ /		RELAY SOCKET-				ALL
	A1		W0176	841	18		33-42-21	ALL
	A2		W0176	728	20		33-42-21	050-099
	A2		W0176	728	18		33-42-21	150-199, 275-299
	A3	UNUSED						ALL
	B1		W0176	737	18		33-42-21	ALL
	B2		W0176	725	20		33-42-21	050-099
	B2		W0176	725	18		33-42-21	150-199, 275-299
	B3	UNUSED						ALL
	X1		W0176	665	24		33-42-21	ALL
	X2		W0176	664	20		33-42-21	ALL
D01950J		0280/160/R023		RCPT-				ALL
	1		W0926	202R	18		32-61-13	ALL
	2		W0926	202B	18		32-61-13	ALL
	3	UNUSED						ALL
D01950P		//		PLUG - VENDOR PIGTAIL				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
D01952J		AL0202/ /		RCPT-				ALL
	1		W0926	201R	18		32-61-13	ALL
	2		W0926	201B	18		32-61-13	ALL
	3	UNUSED						ALL
D01952P		0280/120/R025		PLUG - VENDOR PIGTAIL				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D01900
Page 17
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01952P		0280/120/R025		PLUG - VENDOR PIGTAIL (continued)				ALL
	3	UNUSED						ALL
D01954J		0170/150/L022		RCPT-				ALL
	1		W0926	203R	18		32-61-13	ALL
	2		W0926	203B	18		32-61-13	ALL
	3	UNUSED						ALL
D01954P		0183/120/L025		PLUG - VENDOR PIGTAIL				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
D01956J		0280/160/R023		RCPT-				ALL
	1		W0924	205R	18		32-61-13	ALL
	2		W0924	205B	18		32-61-13	ALL
	3	UNUSED						ALL
D01956P		//		PLUG - VENDOR PIGTAIL				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
D01958J		280/160/R023		RCPT				ALL
	1		W0924	204R	18		32-61-13	ALL
	2		W0924	204B	18		32-61-13	ALL
	3	UNUSED						ALL
D01958P		//		PLUG - VENDOR PIGTAIL				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
D01960J		0170/164/L002		RCPT-				ALL
	1		W0924	206R	18		32-61-13	ALL
	2		W0924	206B	18		32-61-13	ALL
	3	UNUSED						ALL
D01960P		//		PLUG - VENDOR PIGTAIL				ALL
	1	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D01900

Page 18

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01960P		//		PLUG - VENDOR PIGTAIL (continued)				ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
D01962		0478/124/L027		RCPT-				050-099
D01962		0485/124/L033		RCPT-				150-199, 275-299
	1		W0702	001	20		25-53-15	ALL
	2		W0702	002	20		25-53-15	ALL
	3	UNUSED						ALL
	4		W0702	003	20		25-53-15	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12		W0702	004	20		25-53-15	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
D01964		0478/124/L001		RCPT-				050-099
D01964		0485/124/L003		RCPT-				150-199, 275-299
	1		W0702	011	20		25-53-15	ALL
	2		W0702	012	20		25-53-15	ALL
	3	UNUSED						ALL
	4		W0702	013	20		25-53-15	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12		W0702	014	20		25-53-15	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D01900
Page 19
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01966		0485/124/R025		RCPT-				050-099
D01966		0485/124/R033		RCPT-				150-199, 275-299
	1		W0702	021	20		25-53-15	ALL
	2		W0702	022	20		25-53-15	ALL
	3	UNUSED						ALL
	4		W0702	023	20		25-53-15	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12		W0702	024	20		25-53-15	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
D01968		0530/124/L034		RCPT-				050-099
D01968		0546/124/L032		RCPT-				150-199, 275-299
	1		W0702	031	20		25-53-15	ALL
	2		W0702	032	20		25-53-15	ALL
	3	UNUSED						ALL
	4		W0702	033	20		25-53-15	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12		W0702	034	20		25-53-15	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
D01970		0546/124/L003		RCPT-				050-099
D01970		0546/124/R003		RCPT-				150-199, 275-299
	1		W0702	041	20		25-53-15	ALL
	2		W0702	042	20		25-53-15	ALL

HOOKUP LIST
D280T132

91-21-51
Section D01900
Page 20
Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01970		0546/124/L003		RCPT- (continued)				050-099
D01970		0546/124/R003		RCPT- (continued)				150-199, 275-299
	3	UNUSED						ALL
	4		W0702	043	20		25-53-15	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12		W0702	044	20		25-53-15	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
D01972		0546/124/R029		RCPT-				050-099
D01972		546/124/R025		RCPT-				150-199, 275-299
	1		W0702	051	20		25-53-15	ALL
	2		W0702	052	20		25-53-15	ALL
	3	UNUSED						ALL
	4		W0702	053	20		25-53-15	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12		W0702	054	20		25-53-15	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
D01974		0504/124/L011		RCPT-				ALL
	1		W0702	061	20		25-53-16	050-099
	1		W0702	071	20		25-53-16	150-199, 275-299
	2		W0702	062	20		25-53-16	050-099
	2		W0702	072	20		25-53-16	150-199, 275-299
	3	UNUSED						ALL
	4	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D01900
Page 21
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01974		0504/124/L011		RCPT- (continued)				ALL
	5		W0702	063	20		25-53-16	050-099
	5		W0702	073	20		25-53-16	150-199, 275-299
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12		W0702	064	20		25-53-16	050-099
	12		W0702	074	20		25-53-16	150-199, 275-299
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
D01976		0530/124/R006		RCPT-				050-099
D01976		0530/124/L010		RCPT-				150-199, 275-299
	1		W0702	071	20		25-53-16	050-099
	1		W0702	061	20		25-53-16	150-199, 275-299
	2		W0702	072	20		25-53-16	050-099
	2		W0702	062	20		25-53-16	150-199, 275-299
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W0702	073	20		25-53-16	050-099
	5		W0702	063	20		25-53-16	150-199, 275-299
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12		W0702	074	20		25-53-16	050-099
	12		W0702	064	20		25-53-16	150-199, 275-299
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
D01978		0504/124/R014		RCPT-				050-099
D01978		0504/124/R003		RCPT-				150-199, 275-299
	1		W0702	081	20		25-53-16	050-099
	1		W0702	091	20		25-53-16	150-199, 275-299

HOOKUP LIST

D280T132

91-21-51

Section D01900

Page 22

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01978		0504/124/R014		RCPT- (continued)				050-099
D01978		0504/124/R003		RCPT- (continued)				150-199, 275-299
	2		W0702	082	20		25-53-16	050-099
	2		W0702	092	20		25-53-16	150-199, 275-299
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W0702	083	20		25-53-16	050-099
	5		W0702	093	20		25-53-16	150-199, 275-299
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12		W0702	084	20		25-53-16	050-099
	12		W0702	094	20		25-53-16	150-199, 275-299
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
D01980		0530/124/R014		RCPT-				050-099
D01980		0530/124/R003		RCPT-				150-199, 275-299
	1		W0702	091	20		25-53-16	050-099
	1		W0702	081	20		25-53-16	150-199, 275-299
	2		W0702	092	20		25-53-16	050-099
	2		W0702	082	20		25-53-16	150-199, 275-299
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W0702	093	20		25-53-16	050-099
	5		W0702	083	20		25-53-16	150-199, 275-299
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12		W0702	094	20		25-53-16	050-099
	12		W0702	084	20		25-53-16	150-199, 275-299
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D01900
Page 23
Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01982		0622/288/R056		PLUG-				050-099, 150-165, 167-199, 275-278
D01982		0622/295/R056		PLUG-				166
D01982		0625/289/R056		PLUG-				280-299
	1	UNUSED						ALL
	2		W0814	125	22		33-21-33	ALL
	3		W0814	126	22		33-21-33	ALL
	4	UNUSED						ALL
	5		W0814	087	20		33-21-33	ALL
	6	UNUSED						ALL
	7		W0814	114	20		33-21-33	ALL
	8		W0814	113	20		33-21-33	ALL
	9		W0814	131	22		33-21-33	ALL
	10		W0814	132	22		33-21-33	ALL
	11		W0814	133	22		33-21-33	ALL
	12		W0814	134	22		33-21-33	ALL
	DED		W0814	087Z			33-21-33	155-156, 166
	DED		W0814	114Z			33-21-33	155-156, 166
D01983		P036-00/ /		RELAY SOCKET				050-099, 275-276
D01983		P036-00/ /		RLY SKT				150-156, 162-166
	A1	UNUSED						050-099, 150-156, 162-166, 275-276
	A2		W0176	92B	20		36-11-61	050-099, 150-156, 162-166, 275-276
	A3		W0176	92C	24		36-11-61	050-099, 150-156, 162-166, 275-276
	B1	UNUSED						050-099, 150-156, 162-166, 275-276
	B2	UNUSED						050-099, 150-156, 162-166, 275-276
	B3	UNUSED						050-099, 150-156, 162-166, 275-276
	X1		W0176	92D	24		36-11-61	050-099, 150-156, 162-166, 275-276
	X2	UNUSED						050-099, 150-156, 162-166, 275-276
D01984		1275/290/L056		PLUG-				050-099, 150-165, 167-199, 275-299
D01984		1275/295/L056		PLUG-				166
	1	UNUSED						ALL
	2		W0816	142	22		33-21-34	ALL
	3		W0816	143	22		33-21-34	ALL
	4	UNUSED						ALL
	5		W0816	139	22		33-21-34	050-099
	5		W0816	139	20		33-21-34	150-199, 275-299
	6	UNUSED						ALL
	7		W0816	141	20		33-21-34	ALL
	8		W0816	140	20		33-21-34	ALL
	9		W0816	148	22		33-21-34	ALL

HOOKUP LIST

D280T132

91-21-51

Section D01900

Page 24

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01984		1275/290/L056		PLUG- (continued)				050-099, 150-165, 167-199, 275-299
D01984		1275/295/L056		PLUG- (continued)				166
	10		W0816	149	22		33-21-34	ALL
	11		W0816	150	22		33-21-34	ALL
	12		W0816	151	22		33-21-34	ALL
	DED		W0816	139Z			33-21-34	155-156, 166
	DED		W0816	141Z			33-21-34	155-156, 166
D01986		1363/290/L056		PLUG-				050-099, 150-165, 167-199, 275-299
D01986		1363/295/L056		PLUG-				166
	1	UNUSED						ALL
	2		W0816	155	22		33-21-34	ALL
	3		W0816	156	22		33-21-34	ALL
	4	UNUSED						ALL
	5		W0816	152	22		33-21-34	050-099
	5		W0816	152	20		33-21-34	150-199, 275-299
	6	UNUSED						ALL
	7		W0816	154	20		33-21-34	ALL
	8		W0816	153	20		33-21-34	ALL
	9		W0816	161	22		33-21-34	ALL
	10		W0816	162	22		33-21-34	ALL
	11		W0816	163	22		33-21-34	ALL
	12		W0816	164	22		33-21-34	ALL
	DED		W0816	152Z			33-21-34	155-156, 166
	DED		W0816	154Z			33-21-34	155-156, 166
D01988		1099/290/L056		PLUG-				050-099
D01988		1006/290/L056		PLUG-				150-199
D01988		1055/290/L056		PLUG-				275-299
	1	UNUSED						ALL
	2		W0816	113	22		33-21-34	ALL
	3		W0816	114	22		33-21-34	ALL
	4	UNUSED						ALL
	5	DK	W0816	109	18		33-21-34	050-099
	5		W0816	109	20		33-21-34	150-157, 275-299
	5	FM	W0816	109	16		33-21-34	162-199
	6	UNUSED						ALL
	7	DK	W0816	107	18		33-21-34	050-099
	7		W0816	107	20		33-21-34	150-157, 275-299
	7	FM	W0816	107	16		33-21-34	162-199
	8	DK	W0816	108	18		33-21-34	050-099

HOOKUP LIST

D280T132

91-21-51

Section D01900

Page 25

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01988		1099/290/L056		PLUG- (continued)				050-099
D01988		1006/290/L056		PLUG- (continued)				150-199
D01988		1055/290/L056		PLUG- (continued)				275-299
	8		W0816	108	20		33-21-34	150-157, 275-299
	8	FM	W0816	108	16		33-21-34	162-199
	9		W0816	119	22		33-21-34	050-099
	9		W0816	681	22		33-21-34	150-199, 275-299
	10		W0816	120	22		33-21-34	050-099
	10		W0816	682	22		33-21-34	150-199, 275-299
	11		W0816	121	22		33-21-34	ALL
	12		W0816	122	22		33-21-34	ALL
	DED		W0816	107Z			33-21-34	155-156, 166
	DED		W0816	109Z			33-21-34	155-156, 166
D01989		P036-00/ /		RELAY SOCKET				050-099, 275-276
D01989		P036-00/ /		RLY SKT				150-156, 162-166
	A1		W0176	92R	24		36-11-61	050-099, 150-156, 162-166, 275-276
	A2		W0176	92S	24		36-11-61	050-099, 150-156, 162-166, 275-276
	A3	UNUSED						050-099, 150-156, 162-166, 275-276
	B1		W0176	92T	24		36-11-61	050-099, 150-156, 162-166, 275-276
	B2		W0176	92U	20		36-11-61	050-099, 150-156, 162-166, 275-276
	B3	UNUSED						050-099, 150-156, 162-166, 275-276
	X1		W0176	92V	24		36-11-61	050-099, 150-156, 162-166, 275-276
	X2		W0176	92C	24		36-11-61	050-099, 155-156, 162-166, 276
	X2		W0176	92W	24		36-11-61	150-154, 275
D01991		P036-00/ /		RELAY SOCKET				050-099, 275-276
D01991		P036-00/ /		RLY SKT				150-156, 162-166
	A1		W0176	92X	24		36-11-61	050-099, 150-156, 162-166, 275-276
	A2		W0176	92Y	24		36-11-61	050-099, 150-156, 162-166, 275-276
	A3	UNUSED						050-099, 150-156, 162-166, 275-276
	B1	UNUSED						050-099, 150-156, 162-166, 275-276
	B2		W0176	93A	20		36-11-61	050-099, 150-156, 162-166, 275-276
	B3	UNUSED						050-099, 150-156, 162-166, 275-276
	X1		W0176	93B	24		36-11-61	050-099, 150-156, 162-166, 275-276
	X2		W0176	58E	24		36-11-61	050-099, 150-156, 162-166, 275-276
D01992		1050/120/R005		PLUG-				ALL
	1		W0964	001	20		32-41-11	ALL
	2		W0964	002	20		32-41-11	ALL
	3		W0964	003	20		32-41-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D01900

Page 26

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01993		P037-00/ /		RELAY SOCKET				050-099, 150-156, 162-166, 275-276
	A1	UNUSED						050-099, 150-156, 162-166, 275-276
	A2		W0192	64N	20		36-11-62	050-099, 150-156, 162-166, 275-276
	A3		W0192	64P	24		36-11-62	050-099, 150-156, 162-166, 275-276
	B1	UNUSED						050-099, 150-156, 162-166, 275-276
	B2	UNUSED						050-099, 150-156, 162-166, 275-276
	B3	UNUSED						050-099, 150-156, 162-166, 275-276
	X1		W0192	64R	24		36-11-62	050-099, 150-156, 162-166, 275-276
	X2	UNUSED						050-099, 150-156, 162-166, 275-276
D01994		0548/130/R058		PLUG-				050-099
D01994		D0504/183/R084		PLUG-				150-199, 275-299
	1		W0960	015	20		52-34-11	ALL
	2		W0960	016	20		52-34-11	ALL
	3		W0960	024	20		52-34-11	ALL
	4	UNUSED						ALL
	5		W0960	004	20		52-34-11	ALL
D01996		0548/130/R058		PLUG-				ALL
	1		W0960	001	20		52-34-11	ALL
	2		W0960	002	20		52-34-11	ALL
	3		W0960	003	20		52-34-11	ALL
	4		W0960	014	20		52-34-11	ALL
	5		W0960	005	20		52-34-11	ALL
	6		W0960	006	20		52-34-11	ALL
	7		W0960	007	20		52-34-11	ALL
D01998		1300/200/R089		PLUG-				ALL
	1		W0662	014	20		52-35-11	ALL
	2		W0662	016	20		52-35-11	ALL
	3		W0662	015	20		52-35-11	ALL
	4	UNUSED						ALL
	5		W0662	006	20		52-35-11	ALL
D01999		P037-00/ /		RELAY SOCKET				050-099, 150-156, 162-166, 275-276
	A1		W0192	65G	24		36-11-62	050-099, 150-156, 162-166, 275-276
	A2		W0192	65H	24		36-11-62	050-099, 150-156, 162-166, 275-276
	A3	UNUSED						050-099, 150-156, 162-166, 275-276
	B1		W0192	65J	24		36-11-62	050-099, 150-156, 162-166, 275-276
	B2		W0192	65K	20		36-11-62	050-099, 150-156, 162-166, 275-276
	B3	UNUSED						050-099, 150-156, 162-166, 275-276

HOOKUP LIST
D280T132

91-21-51
Section D01900
Page 27
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01999		P037-00/ /		RELAY SOCKET (continued)				050-099, 150-156, 162-166, 275-276
	X1		W0192	65L	24		36-11-62	050-099, 150-156, 162-166, 275-276
	X2		W0192	64P	24		36-11-62	050-099, 150-156, 162-166, 275-276

HOOKUP LIST
D280T132

91-21-51
Section D01900
Page 28 End
Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02000		DR 190/170/R080		PLUG-				ALL
	1		W0962	011	20		52-35-11	ALL
	2		W0962	012	20		52-35-11	ALL
	3		W0962	013	20		52-35-11	ALL
	4	UNUSED						ALL
	5		W0962	014	20		52-35-11	ALL
D02001		P037-00/ /		RELAY SOCKET				050-099, 150-156, 162-166, 275-276
	A1		W0192	65M	24		36-11-62	050-099, 150-156, 162-166, 275-276
	A2		W0192	65N	24		36-11-62	050-099, 150-156, 162-166, 275-276
	A3	UNUSED						050-099, 150-156, 162-166, 275-276
	B1	UNUSED						050-099, 150-156, 162-166, 275-276
	B2		W0192	65R	20		36-11-62	050-099, 150-156, 162-166, 275-276
	B3	UNUSED						050-099, 150-156, 162-166, 275-276
	X1		W0192	65V	24		36-11-62	050-099, 150-156, 162-166, 275-276
	X2		W0192	63M	24		36-11-62	050-099, 150-156, 162-166, 275-276
D02002		0923/290/L056		PLUG-				050-099
D02002		0908/288/L056		PLUG-				150-165, 167-199
D02002		0908/295/L056		PLUG-				166
D02002		0880/290/L056		PLUG-				275-299
	1	UNUSED						ALL
	2		W0812	075	22		33-21-34	ALL
	3		W0812	076	22		33-21-34	ALL
	4	UNUSED						ALL
	5	DK	W0812	070	18		33-21-34	050-099
	5	FM	W0812	070	16		33-21-34	150-199
	5	FM	W0812	072	16		33-21-34	275-299
	6	UNUSED						ALL
	7	DK	W0812	073	18		33-21-34	050-099
	7	FM	W0812	073	16		33-21-34	150-199, 275-299
	8	DK	W0812	074	18		33-21-34	050-099
	8	FM	W0812	074	16		33-21-34	150-199, 275-299
	9		W0812	665	22		33-21-34	ALL
	10		W0812	666	22		33-21-34	ALL
	11		W0812	661	22		33-21-34	ALL
	12		W0812	662	22		33-21-34	ALL
	DED		W0812	070Z			33-21-34	155-156, 166
	DED		W0812	073Z			33-21-34	155-156, 166

HOOKUP LIST

D280T132

91-21-51

Section D02000

Page 1

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02004		1187/290/L056		PLUG-				050-099
D02004		1143/290/L056		PLUG-				150-199, 275-299
	1	UNUSED						ALL
	2		W0816	123	22		33-21-34	ALL
	3		W0816	124	22		33-21-34	ALL
	4	UNUSED						ALL
	5		W0816	110	22		33-21-34	050-099
	5		W0816	110	20		33-21-34	150-199, 275-299
	6	UNUSED						ALL
	7		W0816	111	20		33-21-34	ALL
	8		W0816	112	20		33-21-34	ALL
	9		W0816	129	22		33-21-34	050-099
	9		W0816	119	22		33-21-34	150-199, 275-299
	10		W0816	130	22		33-21-34	050-099
	10		W0816	120	22		33-21-34	150-199, 275-299
	11		W0816	131	22		33-21-34	ALL
	12		W0816	132	22		33-21-34	ALL
	DED		W0816	110Z			33-21-34	155-156, 166
	DED		W0816	111Z			33-21-34	155-156, 166
D02006		1391/295/L056		PLUG-				050-099, 162-199
D02006		1428/295/L056		PLUG-				150-157, 275-299
	1	UNUSED						ALL
	2	UNUSED						050-099, 150-199
	2		W0816	135	22		33-21-34	275-299
	3	UNUSED						050-099, 150-199
	3		W0816	136	22		33-21-34	275-299
	4	UNUSED						ALL
	5		W0816	106	22		33-21-34	050-099, 162-199
	5	FM	W0816	106	20		33-21-34	150-157
	5	FM	W0816	106	16		33-21-34	275-299
	6	UNUSED						ALL
	7		W0816	133	20		33-21-34	050-099
	7	FM	W0816	133	20		33-21-34	150-199
	7	FM	W0816	133	16		33-21-34	275-299
	8		W0816	134	20		33-21-34	050-099
	8	FM	W0816	134	20		33-21-34	150-199
	8	FM	W0816	134	16		33-21-34	275-299
	9		W0816	135	22		33-21-34	050-099
	9		W0816	581	22		33-21-34	150-199, 275-299
	10		W0816	136	22		33-21-34	050-099

HOOKUP LIST

D280T132

91-21-51

Section D02000

Page 2

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02006		1391/295/L056		PLUG- (continued)				050-099, 162-199
D02006		1428/295/L056		PLUG- (continued)				150-157, 275-299
	10		W0816	582	22		33-21-34	150-199, 275-299
	11		W0816	137	22		33-21-34	ALL
	12		W0816	138	22		33-21-34	ALL
	DED		W0816	106Z			33-21-34	155-156, 166
	DED		W0816	133Z			33-21-34	155-156, 166
D02008		842/288/R056		PLUG-				150-165, 167-199
D02008		842/295/R056		PLUG-				166
	1	UNUSED						150-199
	2		W0814	037	22		33-21-33	150-199
	3		W0814	038	22		33-21-33	150-199
	4	UNUSED						150-199
	5		W0814	807	20		33-21-33	150-199
	6	UNUSED						150-199
	7		W0814	029	20		33-21-33	150-199
	8		W0814	030	20		33-21-33	150-199
	9		W0814	043	22		33-21-33	150-199
	10		W0814	044	22		33-21-33	150-199
	11		W0814	045	22		33-21-33	150-199
	12		W0814	046	22		33-21-33	150-199
	DED		W0814	029Z			33-21-33	155-156, 166
	DED		W0814	807Z			33-21-33	155-156, 166
D02010		0879/280/R056		PLUG-				050-099
D02010		0923/288/R056		PLUG-				150-165, 167-199
D02010		0923/295/R056		PLUG-				166
D02010		0961/288/R056		PLUG-				275-299
	1	UNUSED						ALL
	2		W0814	053	22		33-21-35	ALL
	3		W0814	054	22		33-21-35	ALL
	4	UNUSED						ALL
	5		W0814	047	22		33-21-35	050-099
	5	FM	W0814	047	16		33-21-35	150-199, 275-299
	6	UNUSED						ALL
	7		W0814	048	20		33-21-35	050-099
	7	FM	W0814	048	16		33-21-35	150-199, 275-299
	8		W0814	049	20		33-21-35	050-099
	8	FM	W0814	049	16		33-21-35	150-199, 275-299
	9		W0814	061	22		33-21-35	050-099

HOOKUP LIST

D280T132

91-21-51

Section D02000

Page 3

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02010		0879/280/R056		PLUG- (continued)				050-099
D02010		0923/288/R056		PLUG- (continued)				150-165, 167-199
D02010		0923/295/R056		PLUG- (continued)				166
D02010		0961/288/R056		PLUG- (continued)				275-299
	9		W0814	606	22		33-21-35	150-199, 275-299
	10		W0814	062	22		33-21-35	050-099
	10		W0814	607	22		33-21-35	150-199, 275-299
	11		W0814	057	22		33-21-35	ALL
	12		W0814	058	22		33-21-35	ALL
	DED		W0814	047Z			33-21-35	155-156, 166
	DED		W0814	048Z			33-21-35	155-156, 166
D02012		WHEEL/01/L GR		PLUG-				ALL
	1		W0676	201R	20		32-42-11	ALL
	2	UNUSED						ALL
	3		W0676	201B	20		32-42-11	ALL
	DED		W0676	201Z			32-42-11	ALL
D02014		WHEEL/02/L GR		PLUG-				ALL
	1		W0676	202R	20		32-42-11	ALL
	2	UNUSED						ALL
	3		W0676	202B	20		32-42-11	ALL
	DED		W0676	202Z			32-42-11	ALL
D02016		WHEEL/05/L GR		PLUG-				ALL
	1		W0668	201R	20		32-42-11	ALL
	2	UNUSED						ALL
	3		W0668	201B	20		32-42-11	ALL
	DED		W0668	201Z			32-42-11	ALL
D02018		WHEEL/06/L GR		PLUG-				ALL
	1		W0668	202R	20		32-42-11	ALL
	2	UNUSED						ALL
	3		W0668	202B	20		32-42-11	ALL
	DED		W0668	202Z			32-42-11	ALL
D02020		WHEEL/03/R GR		PLUG-				ALL
	1		W0686	201R	20		32-42-11	ALL
	2	UNUSED						ALL
	3		W0686	201B	20		32-42-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D02000

Page 4

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02020		WHEEL/03/R GR		PLUG- (continued)				ALL
	DED		W0686	201Z			32-42-11	ALL
D02022		WHEEL/04/R GR		PLUG-				ALL
	1		W0686	202R	20		32-42-11	ALL
	2	UNUSED						ALL
	3		W0686	202B	20		32-42-11	ALL
	DED		W0686	202Z			32-42-11	ALL
D02024		WHEEL/07/R GR		PLUG-				ALL
	1		W0688	201R	20		32-42-11	ALL
	2	UNUSED						ALL
	3		W0688	201B	20		32-42-11	ALL
	DED		W0688	201Z			32-42-11	ALL
D02026		WHEEL/08/R GR		PLUG-				ALL
	1		W0688	202R	20		32-42-11	ALL
	2	UNUSED						ALL
	3		W0688	202B	20		32-42-11	ALL
	DED		W0688	202Z			32-42-11	ALL
D02028		L0345/12/TE		PLUG-				ALL
	1		W0446	209B	20		32-42-11	ALL
	2		W0446	209R	20		32-42-11	ALL
	3		W0446	049	18		32-42-11	ALL
D02030		L0345/12/TE		PLUG-				ALL
	1		W0450	202B	20		32-42-11	ALL
	2		W0450	202R	20		32-42-11	ALL
	3		W0450	020	18		32-42-11	ALL
D02031		599/308/R 36		PLUG				050-099
D02031		621/308/R 36		PLUG-				150-199
	1		W1417	002	20		23-32-11	050-099, 150-199
	2		W1417	020	20		23-32-13	050-099, 150-199
	3		W1417	021	20		23-32-13	050-099, 150-199
	4		W1417	008	20		23-32-11	050-099, 150-199
	5		W1417	022	20		23-32-13	050-099, 150-199
	6		W1417	017	24		23-32-13	050-099, 150-199
	7		W1417	018	24		23-32-13	050-099, 150-199

HOOKUP LIST
D280T132

91-21-51
Section D02000
Page 5
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02031		599/308/R 36		PLUG (continued)				050-099
D02031		621/308/R 36		PLUG- (continued)				150-199
	8		W1417	019	24		23-32-13	050-099, 150-199
	9	UNUSED						050-099, 150-199
	10	UNUSED						050-099, 150-199
	11	UNUSED						050-099, 150-199
	12	UNUSED						050-099, 150-199
D02032		L0345/12/TE		PLUG-				ALL
	1		W0446	210B	20		32-42-11	ALL
	2		W0446	210R	20		32-42-11	ALL
	3		W0446	050	18		32-42-11	ALL
D02033		599/308/R 36		PLUG-COAXIAL				050-099
D02033		621/308/R 36		PLUG-COAXIAL				150-199
	= A1		W1417	01CX			23-32-13	050-099, 150-199
	= C1		W1417	01CO			23-32-13	050-099, 150-199
D02034		L0345/12/TE		PLUG-				ALL
	1		W0450	203B	20		32-42-11	ALL
	2		W0450	203R	20		32-42-11	ALL
	3		W0450	021	18		32-42-11	ALL
D02035		599/308/R 36		PLUG-COAXIAL				050-099, 150-199
	= A1		W1591	01CX			23-32-13	050-099, 150-199
	= C1		W1591	01CO			23-32-13	050-099, 150-199
D02036		R0345/12/ET		PLUG-				ALL
	1		W0448	201B	20		32-42-11	ALL
	2		W0448	201R	20		32-42-11	ALL
	3		W0448	023	18		32-42-11	ALL
D02037		599/308/R 36		PLUG-COAXIAL				150-199
	= A1		W1589	01CX			23-32-13	150-199
	= C1		W1589	01CO			23-32-13	150-199
D02038		R0365/12/TE		PLUG-				ALL
	1		W0452	202B	20		32-42-11	ALL
	2		W0452	202R	20		32-42-11	ALL
	3		W0452	019	18		32-42-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D02000

Page 6

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02039		599/308/R 36		PLUG				050-099, 150-199
	A	UNUSED						050-099, 150-199
	B	UNUSED						050-099, 150-199
	C	UNUSED						050-099, 150-199
	D	UNUSED						050-099, 150-199
	E		W1591	002	24		23-32-13	050-099, 150-199
	F		W1591	003	24		23-32-13	050-099, 150-199
	G		W1591	005	20		23-32-13	050-099, 150-199
	H		W1591	001	24		23-32-13	050-099, 150-199
	J		W1591	006	20		23-32-13	050-099, 150-199
	K		W1591	007	20		23-32-11	050-099, 150-199
	L		W1591	008	20		23-32-11	050-099, 150-199
	M		W1591	004	20		23-32-13	050-099, 150-199
D02040		R0365/12/ET		PLUG-				ALL
	1		W0448	202B	20		32-42-11	ALL
	2		W0448	202R	20		32-42-11	ALL
	3		W0448	024	18		32-42-11	ALL
D02041		599/308/R 36		PLUG				150-199
	A	UNUSED						150-199
	B	UNUSED						150-199
	C	UNUSED						150-199
	D	UNUSED						150-199
	E		W1589	002	24		23-32-13	150-199
	F		W1589	003	24		23-32-13	150-199
	G		W1589	005	20		23-32-13	150-199
	H		W1589	001	24		23-32-13	150-199
	J		W1589	006	20		23-32-13	150-199
	K		W1589	007	20		23-32-11	150-199
	L		W1589	008	20		23-32-11	150-199
	M		W1589	004	20		23-32-13	150-199
D02042		R0365/12/TE		PLUG-				ALL
	1		W0452	203B	20		32-42-11	ALL
	2		W0452	203R	20		32-42-11	ALL
	3		W0452	020	18		32-42-11	ALL
D02043		1186/308/R 36		PLUG				150-199
	1		W1417	004	20		23-32-11	150-199
	2		W1417	032	20		23-32-13	150-199

HOOKUP LIST
D280T132

91-21-51
Section D02000
Page 7
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02043		1186/308/R 36		PLUG (continued)				150-199
	3		W1417	033	20		23-32-13	150-199
	4		W1417	010	20		23-32-11	150-199
	5		W1417	034	20		23-32-13	150-199
	6		W1417	029	24		23-32-13	150-199
	7		W1417	030	24		23-32-13	150-199
	8		W1417	031	24		23-32-13	150-199
	9	UNUSED						150-199
	10	UNUSED						150-199
	11	UNUSED						150-199
	12	UNUSED						150-199
D02044		L0345/12/TE		PLUG-				ALL
	1		W0446	211B	20		32-42-11	ALL
	2		W0446	211R	20		32-42-11	ALL
	3		W0446	051	18		32-42-11	ALL
D02045		1186/308/R 36		PLUG-COAXIAL				150-199
	= A1		W1417	03CX			23-32-13	150-199
	= C1		W1417	03CO			23-32-13	150-199
D02046		L0345/12/TE		PLUG-				ALL
	1		W0450	204B	20		32-42-11	ALL
	2		W0450	204R	20		32-42-11	ALL
	3		W0450	022	18		32-42-11	ALL
D02047		1186/308/R035		PLUG-COAXIAL				150-199
	= A1		W1577	01CX			23-32-13	150-199
	= C1		W1577	01CO			23-32-13	150-199
D02048		R0420/12/ET		PLUG-				ALL
	1		W0448	203B	20		32-42-11	ALL
	2		W0448	203R	20		32-42-11	ALL
	3		W0448	025	18		32-42-11	ALL
D02049		1186/308/R036		PLUG-COAXIAL				150-199
	= A1		W1579	01CX			23-32-13	150-199
	= C1		W1579	01CO			23-32-13	150-199

HOOKUP LIST

D280T132

91-21-51

Section D02000

Page 8

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02050		R0350/14/TE		PLUG-				ALL
	1		W0452	204B	20		32-42-11	ALL
	2		W0452	204R	20		32-42-11	ALL
	3		W0452	021	18		32-42-11	ALL
D02051		1186/308/R036		PLUG				150-199
	A	UNUSED						150-199
	B	UNUSED						150-199
	C	UNUSED						150-199
	D	UNUSED						150-199
	E		W1577	002	24		23-32-13	150-199
	F		W1577	003	24		23-32-13	150-199
	G		W1577	005	20		23-32-13	150-199
	H		W1577	001	24		23-32-13	150-199
	J		W1577	006	20		23-32-13	150-199
	K		W1577	007	20		23-32-11	150-199
	L		W1577	008	20		23-32-11	150-199
	M		W1577	004	20		23-32-13	150-199
D02052		716/280/L005		RCPT-				050-099
D02052		0654+063/280/L005		RCPT-				275-299
	1		W1280	208R	22		23-31-16	050-099
	1		W1142	227R	22		23-31-16	275
	1		W1142	208R	22		23-31-16	276-299
	2		W1280	208B	22		23-31-16	050-099
	2		W1142	227B	22		23-31-16	275
	2		W1142	208B	22		23-31-16	276-299
	3		W1280	133	22		33-24-13	050-099
	3		W1142	019	20		33-24-13	275
	3		W1142	133	20		33-24-13	276-299
	4		W1280	134	22		33-24-13	050-099
	4		W1142	018	20		33-24-13	275
	4		W1142	134	20		33-24-13	276-299
	5		W1280	135	20		33-24-13	050-099
	5		W1142	020	20		33-24-13	275
	5		W1142	135	20		33-24-13	276-299
	6		W1280	258R	22		23-31-16	050-099
	7		W1280	258B	22		23-31-16	050-099
	8	UNUSED						050-099
	9	UNUSED						050-099

HOOKUP LIST

D280T132

91-21-51

Section D02000

Page 9

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02052		716/280/L005		RCPT- (continued)				050-099
D02052		0654+063/280/L005		RCPT- (continued)				275-299
	10	UNUSED						050-099
	11	UNUSED						050-099
	12	UNUSED						050-099
D02053		1186/308/R036		PLUG				150-199
	A	UNUSED						150-199
	B	UNUSED						150-199
	C	UNUSED						150-199
	D	UNUSED						150-199
	E		W1579	002	24		23-32-13	150-199
	F		W1579	003	24		23-32-13	150-199
	G		W1579	005	20		23-32-13	150-199
	H		W1579	001	24		23-32-13	150-199
	J		W1579	006	20		23-32-13	150-199
	K		W1579	007	20		23-32-11	150-199
	L		W1579	008	20		23-32-11	150-199
	M		W1579	004	20		23-32-13	150-199
D02054		743/280/L005		RCPT-				050-099
D02054		0654+090/280/L005		RCPT-				275-299
	1		W1280	210R	22		23-31-16	050-099
	1		W1142	229R	22		23-31-16	275
	1		W1142	210R	22		23-31-16	276-299
	2		W1280	210B	22		23-31-16	050-099
	2		W1142	229B	22		23-31-16	275
	2		W1142	210B	22		23-31-16	276-299
	3		W1280	143	22		33-24-13	050-099
	3		W1142	024	20		33-24-13	275
	3		W1142	143	20		33-24-13	276-299
	4		W1280	144	22		33-24-13	050-099
	4		W1142	023	20		33-24-13	275
	4		W1142	144	20		33-24-13	276-299
	5		W1280	145	20		33-24-13	050-099
	5		W1142	025	20		33-24-13	275
	5		W1142	145	20		33-24-13	276-299
	6		W1280	260R	22		23-31-16	050-099
	7		W1280	260B	22		23-31-16	050-099
	8	UNUSED						050-099
	9	UNUSED						050-099

HOOKUP LIST

D280T132

91-21-51

Section D02000

Page 10

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02054		743/280/L005		RCPT- (continued)				050-099
D02054		0654+090/280/L005		RCPT- (continued)				275-299
	10	UNUSED						050-099
	11	UNUSED						050-099
	12	UNUSED						050-099
D02056		0768/280/L005		RCPT-				150-199, 275-299
	1		W1280	229R	22		23-31-16	150-199
	1		W1280	202R	22		23-31-16	275-278
	1		W1280	222R	22		23-31-16	280-299
	2		W1280	229B	22		23-31-16	150-199
	2		W1280	202B	22		23-31-16	275-278
	2		W1280	222B	22		23-31-16	280-299
	3		W1280	083	20		33-24-13	150-199
	3		W1280	003	20		33-24-13	275-278
	3		W1280	573	20		33-24-13	280-299
	4		W1280	084	20		33-24-13	150-199
	4		W1280	004	20		33-24-13	275-278
	4		W1280	574	20		33-24-13	280-299
	5		W1280	085	20		33-24-13	150-199
	5		W1280	005	20		33-24-13	275-278
	5		W1280	575	20		33-24-13	280-299
	6		W1280	249R	22		23-31-16	150-199
	7		W1280	249B	22		23-31-16	150-199
	8	UNUSED						150-199
	9	UNUSED						150-199
	10	UNUSED						150-199
	11	UNUSED						150-199
	12	UNUSED						150-199
D02058		0790/280/L005		RCPT-				150-199
	1		W1280	231R	22		23-31-16	150-199
	2		W1280	231B	22		23-31-16	150-199
	3		W1280	008	20		33-24-13	150-199
	4		W1280	009	20		33-24-13	150-199
	5		W1280	010	20		33-24-13	150-199
	6		W1280	250R	22		23-31-16	150-199
	7		W1280	250B	22		23-31-16	150-199
	8	UNUSED						150-199
	9	UNUSED						150-199
	10	UNUSED						150-199

HOOKUP LIST

D280T132

91-21-51

Section D02000

Page 11

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02058		0790/280/L005		RCPT- (continued)				150-199
	11	UNUSED						150-199
	12	UNUSED						150-199
D02064		1820/200/L025		PLUG-SQUIB				275-299
	1		W1296	012R	20		26-22-21	275-299
	2	DK	W1296	013R	18		26-22-21	275-299
	3	DK	W1296	014R	18		26-22-21	275-299
	4	UNUSED						275-299
	5	UNUSED						275-299
D02066		1820/200/L025		PLUG-PRESSURE SW				275-299
	1		W1296	017R	20		26-22-21	275-299
	2	UNUSED						275-299
	3	DK	W1296	016R	18		26-22-21	275-299
	4	DK	W1296	015R	18		26-22-21	275-299
	5	UNUSED						275-299
D02070		R1140/12/TIP		PLUG-				ALL
	1		W0470	206	12		33-43-11	ALL
	2		W0470	205B	12		33-43-11	050-099, 155-199, 276-299
	2		W0470	201B	12		33-43-11	150-154, 275
	3		W0470	100	12		33-43-11	050-099, 155-199, 276-299
	3		W0470	201R	12		33-43-11	150-154, 275
	4	UNUSED						ALL
	5		W0470	202R	12		33-43-11	ALL
	6	UNUSED						ALL
	7		W0470	207	12		33-43-11	ALL
	8		W0470	202B	12		33-43-11	ALL
D02071		996/280/R 38		PLUG				275-299
	1		W1839	001	20		23-32-52	275-299
	2		W1839	003	22		23-32-52	275-299
	3		W1839	006	22		23-32-52	275-299
	4		W1839	002	20		23-32-52	275-299
	5		W1839	007	22		23-32-52	275-299
	6		W1839	008	22		23-32-52	275-299
	7		W1839	009	22		23-32-52	275-299
	8		W1839	004	24		23-32-52	275-299
	9	UNUSED						275-299
	10	UNUSED						275-299

HOOKUP LIST

D280T132

91-21-51

Section D02000

Page 12

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02071		996/280/R 38		PLUG (continued)				275-299
	11	UNUSED						275-299
	12	UNUSED						275-299
D02073		0996/280/L038		PLUG				275-299
	1		W1837	001	20		23-32-52	275-299
	2		W1837	003	22		23-32-52	275-299
	3		W1837	006	22		23-32-52	275-299
	4		W1837	002	20		23-32-52	275-299
	5		W1837	007	22		23-32-52	275-299
	6		W1837	008	22		23-32-52	275-299
	7		W1837	009	22		23-32-52	275-299
	8		W1837	004	24		23-32-52	275-299
	9	UNUSED						275-299
	10	UNUSED						275-299
	11	UNUSED						275-299
	12	UNUSED						275-299
D02074		L1150/12/TIP		PLUG-				ALL
	1		W0468	206	12		33-43-11	ALL
	2		W0468	205B	12		33-43-11	050-099, 155-199, 276-299
	2		W0468	201B	12		33-43-11	150-154, 275
	3		W0468	100	12		33-43-11	050-099, 155-199, 276-299
	3		W0468	201R	12		33-43-11	150-154, 275
	4	UNUSED						ALL
	5		W0468	202R	12		33-43-11	ALL
	6	UNUSED						ALL
	7		W0468	202B	12		33-43-11	ALL
	8		W0468	207	12		33-43-11	ALL
D02075		0996/280/R038		PLUG-COAXIAL				275-299
	= A1		W1839	01CX			23-32-52	275-299
	= C1		W1839	01CO			23-32-52	275-299
D02077		996/280/L 38		PLUG-COAXIAL				275-299
	= A1		W1837	01CX			23-32-52	275-299
	= C1		W1837	01CO			23-32-52	275-299
D02078		L1140/12/TIP		PLUG-				ALL
	1		W0486	201B	12		33-43-11	ALL
	2		W0486	201R	12		33-43-11	ALL

HOOKUP LIST
D280T132

91-21-51
Section D02000
Page 13
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02078		L1140/12/TIP		PLUG- (continued)				ALL
	3		W0486	202B	12		33-43-11	ALL
	4		W0486	202R	12		33-43-11	ALL
D02080		R1140/12/TIP		PLUG-				ALL
	1		W0490	201B	12		33-43-11	ALL
	2		W0490	201R	12		33-43-11	ALL
	3		W0490	202B	12		33-43-11	ALL
	4		W0490	202R	12		33-43-11	ALL
D02082		L1165/12/TIP		PLUG-				ALL
	1		W0488	201B	12		33-43-11	ALL
	2		W0488	201R	12		33-43-11	ALL
	3		W0488	202B	12		33-43-11	ALL
	4		W0488	202R	12		33-43-11	ALL
D02083		PANEL/5/		PLUG				ALL
	1		W0062	109	20		33-13-16	ALL
	2		W0062	110	20		33-13-16	ALL
	3		W0062	111	22		33-16-17	ALL
	4		W0062	112	22		33-16-17	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15		W0062	69D	22		73-21-11	ALL
	16		W0062	67W	22		73-21-11	ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21		W0062	69A	22		73-21-11	ALL
	22		W0062	67Y	22		73-21-11	ALL
	23	UNUSED						ALL
	24	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D02000
Page 14
Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02083		PANEL/5/		PLUG (continued)				ALL
	DED		W0062	69DZ			73-21-11	ALL
			W0062	67WZ			73-21-11	ALL
			W0062	67YZ			73-21-11	ALL
			W0062	69AZ			73-21-11	ALL
D02084		R1165/12/TIP		PLUG-				ALL
	1		W0492	201B	12		33-43-11	ALL
	2		W0492	201R	12		33-43-11	ALL
	3		W0492	202B	12		33-43-11	ALL
	4		W0492	202R	12		33-43-11	ALL
D02085		PANEL/5/		PLUG				ALL
	1		W0066	126	20		33-13-16	ALL
	2		W0066	127	20		33-13-16	ALL
	3		W0066	128	22		33-16-17	ALL
	4		W0066	129	22		33-16-17	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15		W0066	69D	22		73-21-11	ALL
	16		W0066	68G	22		73-21-11	ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21		W0066	68E	22		73-21-11	ALL
	22		W0066	68D	22		73-21-11	ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	DED		W0066	69DZ			73-21-11	ALL
			W0066	68DZ			73-21-11	ALL
			W0066	68EZ			73-21-11	ALL
			W0066	68GZ			73-21-11	ALL

HOOKUP LIST
D280T132

91-21-51
Section D02000
Page 15
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02087		1723/274/R044		PLUG				ALL
	1		W0599	70L	18		29-11-14	ALL
	2		W0599	70M	18		29-11-14	ALL
	3		W0599	70K	18		29-11-14	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
D02088		P033-00/ /		RELAY SOCKET-				ALL
	A1		W0144	024	22		27-51-51	ALL
	A2		W0144	092	22		27-51-51	ALL
	A3		W0144	025	22		27-51-51	ALL
	B1	UNUSED						ALL
	B2	UNUSED						ALL
	B3	UNUSED						ALL
	X1		W0144	093	22		27-51-51	ALL
	X2		W0144	047	24		27-51-51	ALL
D02089		1704/286/L034		PLUG				ALL
	1		W0591	70M	18		29-11-14	ALL
	2		W0591	70P	18		29-11-14	ALL
	3		W0591	70N	18		29-11-14	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
D02094		1099/288/R056		PLUG-				050-099
D02094		1055/288/R056		PLUG-				150-165, 167-199, 275-299
D02094		1055/295/R056		PLUG-				166
	1	UNUSED						ALL
	2		W0818	010	22		33-21-35	ALL
	3		W0818	011	22		33-21-35	ALL
	4	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D02000

Page 16

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02094		1099/288/R056		PLUG- (continued)				050-099
D02094		1055/288/R056		PLUG- (continued)				150-165, 167-199, 275-299
D02094		1055/295/R056		PLUG- (continued)				166
	5		W0818	006	22		33-21-35	050-099
	5		W0818	006	20		33-21-35	150-199, 275-299
	6	UNUSED						ALL
	7		W0818	004	20		33-21-35	ALL
	8		W0818	005	20		33-21-35	ALL
	9		W0818	016	22		33-21-35	050-099
	9		W0818	095	22		33-21-35	150-199, 275-299
	10		W0818	017	22		33-21-35	050-099
	10		W0818	096	22		33-21-35	150-199, 275-299
	11		W0818	018	22		33-21-35	ALL
	12		W0818	019	22		33-21-35	ALL
	DED		W0818	004Z			33-21-35	155-156, 166
	DED		W0818	006Z			33-21-35	155-156, 166
D02096		1187/288/R056		PLUG-				050-099
D02096		1143/288/R056		PLUG-				150-165, 167-199, 275-299
D02096		1143/295/R056		PLUG-				166
	1	UNUSED						ALL
	2		W0818	020	22		33-21-35	ALL
	3		W0818	021	22		33-21-35	ALL
	4	UNUSED						ALL
	5		W0818	007	22		33-21-35	050-099
	5		W0818	007	20		33-21-35	150-199, 275-299
	6	UNUSED						ALL
	7		W0818	008	20		33-21-35	ALL
	8		W0818	009	20		33-21-35	ALL
	9		W0818	026	22		33-21-35	050-099
	9		W0818	016	22		33-21-35	150-199, 275-299
	10		W0818	027	22		33-21-35	050-099
	10		W0818	017	22		33-21-35	150-199, 275-299
	11		W0818	028	22		33-21-35	ALL
	12		W0818	029	22		33-21-35	ALL
	DED		W0818	007Z			33-21-35	155-156, 166
	DED		W0818	008Z			33-21-35	155-156, 166
D02098		1275/284/R056		PLUG-				050-099, 150-165, 167-199, 275-299
D02098		1275/295/R056		PLUG-				166
	1	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D02000

Page 17

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02098		1275/284/R056		PLUG- (continued)				050-099, 150-165, 167-199, 275-299
D02098		1275/295/R056		PLUG- (continued)				166
	2		W0818	039	22		33-21-35	ALL
	3		W0818	040	22		33-21-35	ALL
	4	UNUSED						ALL
	5		W0818	036	22		33-21-35	050-099
	5		W0818	036	20		33-21-35	150-199, 275-299
	6	UNUSED						ALL
	7		W0818	038	20		33-21-35	ALL
	8		W0818	037	20		33-21-35	ALL
	9		W0818	045	22		33-21-35	ALL
	10		W0818	046	22		33-21-35	ALL
	11		W0818	047	22		33-21-35	ALL
	12		W0818	048	22		33-21-35	ALL
	DED		W0818	036Z			33-21-35	155-156, 166
	DED		W0818	038Z			33-21-35	155-156, 166

HOOKUP LIST

D280T132

91-21-51

Section D02000

Page 18 End

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02100		1363/288/R056		PLUG-				050-099, 150-165, 167-199, 275-299
D02100		1363/295/R056		PLUG-				166
	1	UNUSED						ALL
	2		W0818	052	22		33-21-35	ALL
	3		W0818	053	22		33-21-35	ALL
	4	UNUSED						ALL
	5		W0818	049	22		33-21-35	050-099
	5		W0818	049	20		33-21-35	150-199, 275-299
	6	UNUSED						ALL
	7		W0818	051	20		33-21-35	ALL
	8		W0818	050	20		33-21-35	ALL
	9		W0818	058	22		33-21-35	ALL
	10		W0818	059	22		33-21-35	ALL
	11		W0818	060	22		33-21-35	ALL
	12		W0818	061	22		33-21-35	ALL
	DED		W0818	049Z			33-21-35	155-156, 166
	DED		W0818	051Z			33-21-35	155-156, 166
D02103		0386/260/L070		PLUG				275-299
	1		W1809	001	20		23-32-33	275-299
	2		W1809	003	22		23-32-33	275-299
	3		W1809	006	22		23-32-33	275-299
	4		W1809	002	20		23-32-33	275-299
	5		W1809	007	22		23-32-33	275-299
	6		W1809	008	22		23-32-33	275-299
	7		W1809	009	22		23-32-33	275-299
	8		W1809	004	24		23-32-33	275-299
	9	UNUSED						275-299
	10	UNUSED						275-299
	= A1		W1809	01CX			23-32-33	275-299
	= C1		W1809	01CO			23-32-33	275-299
D02107		386/260/R 70		PLUG				275-299
	1		W1811	001	20		23-32-33	275-299
	2		W1811	003	22		23-32-33	275-299
	3		W1811	006	22		23-32-33	275-299
	4		W1811	002	20		23-32-33	275-299
	5		W1811	007	22		23-32-33	275-299
	6		W1811	008	22		23-32-33	275-299
	7		W1811	009	22		23-32-33	275-299
	8		W1811	004	24		23-32-33	275-299

HOOKUP LIST

D280T132

91-21-51

Section D02100

Page 1

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02107		386/260/R 70		PLUG (continued)				275-299
	9	UNUSED						275-299
	10	UNUSED						275-299
	= A1		W1811	01CX			23-32-33	275-299
	= C1		W1811	01CO			23-32-33	275-299
D02110		0439/288/R056		PLUG-				050-099
D02110		0446/288/R056		PLUG-				150, 153-157
D02110		0440/288/R056		PLUG-				151-152, 162-165, 167-199, 275-278
D02110		0440/295/R056		PLUG-				166
D02110		0430/291/R056		PLUG-				280-299
	1	UNUSED						ALL
	2	UNUSED						050-099, 150-199
	2		W0814	091	22		33-21-33	275-299
	3	UNUSED						050-099, 150-199
	3		W0814	092	22		33-21-33	275-299
	4	UNUSED						ALL
	5	DK	W0814	083	18		33-21-33	050-099
	5		W0814	083	20		33-21-33	150-157, 163-166
	5	FM	W0814	083	16		33-21-33	162, 167-199, 275-299
	6	UNUSED						ALL
	7	DK	W0814	085	18		33-21-33	050-099
	7		W0814	085	20		33-21-33	150-157, 163-199
	7	FM	W0814	085	16		33-21-33	162, 275-299
	8	DK	W0814	084	18		33-21-33	050-099
	8		W0814	084	20		33-21-33	150-157
	8	FM	W0814	084	16		33-21-33	162-199, 275-299
	9		W0814	097	22		33-21-33	050-099, 150-199
	9		W0814	671	22		33-21-33	275-299
	10		W0814	098	22		33-21-33	050-099, 150-199
	10		W0814	672	22		33-21-33	275-299
	11		W0814	099	22		33-21-33	ALL
	12		W0814	100	22		33-21-33	ALL
	DED		W0814	083Z			33-21-33	155-156, 166
	DED		W0814	085Z			33-21-33	155-156, 166
D02112		0764/140/L070		PLUG-				ALL
	1		W0602	116	16		33-42-21	ALL
	2	UNUSED						ALL
	3		W0602	022	20		33-42-21	050-099
	3		W0602	022	18		33-42-21	150-199, 275-299

HOOKUP LIST

D280T132

91-21-51

Section D02100

Page 2

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02112		0764/140/L070		PLUG- (continued)				ALL
	4	UNUSED						ALL
	5		W0602	118	16		33-42-21	ALL
	6		W0602	117	16		33-42-21	ALL
	7	UNUSED						ALL
D02114		0764/165/R070		PLUG-				ALL
	1		W0656	060	16		33-42-21	ALL
	2	UNUSED						ALL
	3		W0656	049	20		33-42-21	050-099
	3		W0656	049	18		33-42-21	150-199, 275-299
	4	UNUSED						ALL
	5		W0656	062	16		33-42-21	ALL
	6		W0656	061	16		33-42-21	ALL
	7	UNUSED						ALL
D02118		NL260/155/		PLUG-				ALL
	1		W0390	001	18		78-34-11	ALL
	2	UNUSED						ALL
	3		W0390	003	18		78-34-11	ALL
	CAP	Y	W0390	002	18		78-34-11	ALL
D02120		NR255/160/		PLUG-				ALL
	1		W0394	001	18		78-34-21	ALL
	2	UNUSED						ALL
	3		W0394	003	18		78-34-21	ALL
	CAP	Y	W0394	002	18		78-34-21	ALL
D02132		P036-00/ /		RELAY SOCKET				050-099, 150-199
	A1		W0184	711	18		21-24-11	050-099, 150-199
	A2		W0184	756	18		21-24-11	050-099, 150-199
	A3	UNUSED						050-099, 150-199
	B1		W0184	858	18		21-24-11	050-099, 150-199
	B2		W0184	716	18		21-24-11	050-099, 150-199
	B3	UNUSED						050-099, 150-199
	C1		W0184	859	18		21-24-11	050-099, 150-199
	C2		W0184	715	18		21-24-11	050-099, 150-199
	C3	UNUSED						050-099, 150-199
	D1	UNUSED						050-099, 150-199
	D2	UNUSED						050-099, 150-199
	D3	UNUSED						050-099, 150-199

HOOKUP LIST
D280T132

91-21-51
Section D02100
Page 3
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02132		P036-00/ /		RELAY SOCKET (continued)				050-099, 150-199
	G1	UNUSED						050-099, 150-199
	G2		W0184	PA1			99-99-99	050-099, 150-199
	G3		W0184	PA1			99-99-99	050-099, 150-199
	X1		W0184	855	24		21-24-11	050-099, 150-199
	X2		W0184	856	24		21-24-11	050-099, 150-199
D02134		NL260/155/		PLUG-				ALL
	1		W0390	008	18		78-36-11	ALL
	2		W0390	028	18		78-36-11	ALL
	3	UNUSED						ALL
	CAP	Y	W0390	010	18		SPARE	050-099, 150-166, 275-276
	CAP	Y	W0390	009	18		SPARE	ALL
	CAP	Y	W0390	010	18		78-36-11	167-199, 277-299
D02138		NR255/160/		PLUG-				ALL
	1		W0394	008	18		78-36-21	ALL
	2		W0394	009	18		78-36-21	ALL
	3	UNUSED						ALL
	CAP	Y	W0394	010	18		SPARE	ALL
D02142		0882/119/R030		PLUG-				ALL
	A		W0952	211B	20		21-52-31	ALL
	B		W0952	030	20		21-52-31	ALL
D02144		0882/119/L047		PLUG-				ALL
	A		W0508	211B	20		21-52-31	ALL
	B		W0508	033	20		21-52-31	ALL
D02152		0871/124/L056		PLUG-				ALL
	A		W0508	212B	20		21-52-31	ALL
	B		W0508	035	20		21-52-31	ALL
D02154		0870/130/R055		PLUG-				ALL
	A		W0952	212B	20		21-52-31	ALL
	B		W0952	032	20		21-52-31	ALL
D02156		P011-00/ /		PLUG-P11				ALL
	A1		W0042	025	22		74-31-21	ALL
	A2		W0042	050	22		74-31-21	ALL

HOOKUP LIST

D280T132

91-21-51

Section D02100

Page 4

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02156		P011-00/ /		PLUG-P11 (continued)				ALL
	A3		W0042	039	22		74-31-11	ALL
	B1		W0042	700	22		74-31-21	ALL
	B2		W0042	050	22		74-31-21	ALL
	B3		W0042	051	22		74-31-21	ALL
	C1	UNUSED						ALL
	C2	UNUSED						ALL
	C3	UNUSED						ALL
	D1	UNUSED						ALL
	D2	UNUSED						ALL
	D3	UNUSED						ALL
	X1		W0042	716	24		74-31-11	ALL
	X2		W0042	095	20		74-31-11	ALL
	DED		W0042	025Z			74-31-21	ALL
	DED		W0042	039Z			74-31-11	ALL
	DED		W0042	050Z			74-31-21	ALL
	DED		W0042	051Z			74-31-21	ALL
	DED		W0042	700Z			74-31-21	ALL
D02158		P011-00/ /		PLUG-P11				ALL
	A1		W0040	184	22		74-31-11	ALL
	A2		W0040	186	22		74-31-11	ALL
	A3		W0040	185	22		74-31-11	ALL
	B1		W0040	709	22		74-31-11	ALL
	B2		W0040	186	22		74-31-11	ALL
	B3		W0040	187	22		74-31-11	ALL
	C1	UNUSED						ALL
	C2	UNUSED						ALL
	C3	UNUSED						ALL
	D1	UNUSED						ALL
	D2	UNUSED						ALL
	D3	UNUSED						ALL
	X1		W0040	191	24		74-31-11	ALL
	X2		W0040	192	20		74-31-11	ALL
D02160		P050-00/ /		RCPT-				ALL
	1		W1078	181	24		34-61-13	ALL
	2		W1078	125	22		73-21-19	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D02100
Page 5
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02160		P050-00/ /		RCPT- (continued)				ALL
	6		W1078	163	24		73-21-17	ALL
	7		W1078	134	24		73-21-12	ALL
	8		W1078	133	24		73-21-12	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11		W1078	PF1			73-21-15	ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19		W1078	123	24		73-21-19	ALL
	20		W1078	PF1			73-21-15	ALL
	21		W1078	182	24		34-61-13	ALL
	22	UNUSED						ALL
	23		W1078	165	24		22-32-13	ALL
	24		W1078	029	24		73-21-15	ALL
	25		W1078	027	24		73-21-15	ALL
	26		W1078	168	24		22-32-13	ALL
	27		W1078	778	24		73-21-15	ALL
	28	UNUSED						ALL
	29		W1078	180	24		34-61-13	ALL
	30		W1078	145	24		22-32-13	ALL
	31	UNUSED						ALL
	32		W1078	144	24		73-21-17	ALL
	33		W1078	505	24		73-21-15	ALL
	34	UNUSED						ALL
	35		W1078	126	22		73-21-19	ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40		W1078	138	24		73-21-12	ALL
	41		W1078	139	24		73-21-12	ALL
	42		W1078	013	24		73-21-17	ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D02100

Page 6

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02160		P050-00/ /		RCPT- (continued)				ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53		W1078	143	24		22-32-13	ALL
	54		W1078	141	24		73-21-16	ALL
	55		W1078	179	24		34-61-13	ALL
	56	UNUSED						ALL
	57		W1078	178	24		34-61-13	ALL
	58	UNUSED						ALL
	59		W1078	167	24		73-21-15	ALL
	60	UNUSED						ALL
	61		W1078	140	24		73-21-17	ALL
	62		W1078	130	24		22-32-13	ALL
	63	UNUSED						ALL
	64		W1078	127	22		73-21-17	ALL
	65		W1078	169	24		73-21-15	ALL
	66		W1078	170	24		73-21-15	ALL
			W1078	132	20		73-21-17	ALL
			W1078	133Z			73-21-12	ALL
			W1078	138Z			73-21-12	ALL
			W1078	139Z			73-21-12	ALL
			W1078	163Z			73-21-17	ALL
			W1078	138F	20		73-21-12	050-099, 150-199, 277-299
			W1078	134Z			73-21-12	275-276
D02162		P050-00/ /		RCPT-				ALL
	1		W1080	504	24		34-61-13	ALL
	2		W1080	162	22		73-21-19	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W1080	168	24		73-21-17	ALL
	7		W1080	170	24		73-21-12	ALL
	8		W1080	169	24		73-21-12	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D02100
Page 7
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02162		P050-00/ /		RCPT- (continued)				ALL
	11		W1080	PG1			73-21-15	ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19		W1080	161	24		73-21-19	ALL
	20		W1080	PG1			73-21-15	ALL
	21		W1080	505	24		34-61-13	ALL
	22	UNUSED						ALL
	23		W1080	195	24		22-32-13	ALL
	24		W1080	720	24		73-21-15	ALL
	25		W1080	027	24		73-21-15	ALL
	26		W1080	197	24		22-32-13	ALL
	27		W1080	780	24		73-21-15	ALL
	28	UNUSED						ALL
	29		W1080	506	24		34-61-13	ALL
	30		W1080	176	24		22-32-13	ALL
	31	UNUSED						ALL
	32		W1080	158	24		73-21-17	ALL
	33		W1080	530	24		73-21-15	ALL
	34	UNUSED						ALL
	35		W1080	163	24		73-21-19	050-099, 150-199
	35		W1080	163	22		73-21-19	275-299
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40		W1080	138	24		73-21-12	ALL
	41		W1080	438	24		73-21-12	ALL
	42		W1080	191	24		73-21-17	ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D02100

Page 8

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02162		P050-00/ /		RCPT- (continued)				ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53		W1080	174	24		22-32-13	ALL
	54		W1080	534	24		73-21-16	ALL
	55		W1080	503	24		34-61-13	ALL
	56	UNUSED						ALL
	57		W1080	502	24		34-61-13	ALL
	58	UNUSED						ALL
	59		W1080	196	24		73-21-15	ALL
	60	UNUSED						ALL
	61		W1080	173	24		73-21-17	ALL
	62		W1080	167	24		22-32-13	ALL
	63	UNUSED						ALL
	64		W1080	178	24		73-21-16	ALL
	65		W1080	198	24		73-21-15	ALL
	66		W1080	157	24		73-21-15	ALL
	DED		W1080	158Z			73-21-17	ALL
			W1080	138F	20		73-21-12	050-099, 150-199, 275-276
			W1080	138Z			73-21-12	ALL
			W1080	164	20		73-21-17	ALL
			W1080	168Z			73-21-17	ALL
			W1080	169Z			73-21-12	ALL
			W1080	438Z			73-21-12	ALL
			W1080	438F	20		73-21-12	050-099, 150-199, 277-299
D02163		0472/260/0		PLUG				275-276
D02163		0376/260/0		PLUG				277-278
D02163		0524/258/R005		PLUG				280-299
	1		W1815	001	20		23-32-34	275-299
	2		W1815	003	22		23-32-34	275-299
	3		W1815	006	22		23-32-34	275-299
	4		W1815	002	20		23-32-34	275-299
	5		W1815	007	22		23-32-34	275-299
	6		W1815	008	22		23-32-34	275-299
	7		W1815	009	22		23-32-34	275-299
	8		W1815	004	24		23-32-34	275-299
	9	UNUSED						275-299
	10	UNUSED						275-299
	=A1		W1815	01CX			23-32-34	275-299

HOOKUP LIST
D280T132

91-21-51
Section D02100
Page 9
Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02163		0472/260/0		PLUG (continued)				275-276
D02163		0376/260/0		PLUG (continued)				277-278
D02163		0524/258/R005		PLUG (continued)				280-299
	= C1		W1815	01CO			23-32-34	275-299
D02164		0534/290/L065		PLUG-				050-099, 150-165, 167-199, 275-278
D02164		0534/295/L065		PLUG-				166
D02164		0537/290/L056		PLUG-				280-299
	1	UNUSED						ALL
	2		W0812	097	22		33-21-32	ALL
	3		W0812	098	22		33-21-32	ALL
	4	UNUSED						ALL
	5		W0812	084	20		33-21-32	050-099, 150-157, 275-299
	5		W0812	12A	20		33-21-32	162-199
	6	UNUSED						ALL
	7		W0812	086	20		33-21-32	ALL
	8		W0812	085	20		33-21-32	ALL
	9		W0812	103	22		33-21-32	ALL
	10		W0812	104	22		33-21-32	ALL
	11		W0812	105	22		33-21-32	ALL
	12		W0812	106	22		33-21-32	ALL
	DED		W0812	084Z			33-21-32	155-156
	DED		W0812	086Z			33-21-32	155-156, 166
	DED		W0812	12AZ			33-21-32	166
D02165		376/260/0		PLUG				275-278
D02165		378/258/R005		PLUG				280-299
	1		W1813	001	20		23-32-34	275-299
	2		W1813	003	22		23-32-34	275-299
	3		W1813	006	22		23-32-34	275-299
	4		W1813	002	20		23-32-34	275-299
	5		W1813	007	22		23-32-34	275-299
	6		W1813	008	22		23-32-34	275-299
	7		W1813	009	22		23-32-34	275-299
	8		W1813	004	24		23-32-34	275-299
	9	UNUSED						275-299
	10	UNUSED						275-299
	11	UNUSED						275-278
	12	UNUSED						275-278
	= A1		W1813	01CX			23-32-34	280-299
	= C1		W1813	01CO			23-32-34	280-299

HOOKUP LIST

D280T132

91-21-51

Section D02100

Page 10

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02166A		//		PLUG-PART OF D02166				ALL
	A01		W1092	254R	24		32-61-13	ALL
	A02		W1092	253R	24		32-61-13	ALL
	A03		W1092	240R	24		32-61-11	ALL
	A04	UNUSED						ALL
	A05		W1092	244R	24		32-61-12	ALL
	A06	UNUSED						050-099
	A06		W1092	706R	24		32-71-11	150-199, 275-299
	A07		W1092	259R	24		32-09-11	ALL
	A08	UNUSED						050-099
	A08		W1092	700R	24		32-71-11	150-199, 275-299
	A09	UNUSED						ALL
	A10		W1092	058	24		32-61-14	ALL
	A11		W1092	062	24		32-61-14	ALL
	A12		W1092	718	24		32-61-14	ALL
	A13		W1092	737	22		29-11-32	ALL
	A14		W1092	569	24		32-09-11	ALL
	A15		W1092	567	24		32-09-11	ALL
	B01		W1092	254B	24		32-61-13	ALL
	B02		W1092	253B	24		32-61-13	ALL
	B03		W1092	240B	24		32-61-11	ALL
	B04	UNUSED						ALL
	B05		W1092	244B	24		32-61-12	ALL
	B06	UNUSED						050-099
	B06		W1092	706B	24		32-71-11	150-199, 275-299
	B07		W1092	259B	24		32-09-11	ALL
	B08	UNUSED						050-099
	B08		W1092	700B	24		32-71-11	150-199, 275-299
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13	UNUSED						ALL
	B14		W1092	751	24		31-31-21	ALL
	B15	UNUSED						ALL
	C01		W1092	255R	24		32-61-13	ALL
	C02		W1092	239R	24		32-61-11	ALL
	C03		W1092	237R	24		32-61-11	ALL
	C04		W1092	243R	24		32-61-12	ALL
	C05		W1092	241R	24		32-61-12	ALL
	C06		W1092	263R	24		32-09-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D02100

Page 11

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02166A		//		PLUG-PART OF D02166 (continued)				ALL
	C07		W1092	261R	24		32-09-11	ALL
	C08		W1092	060	24		32-61-14	ALL
	C09		W1092	067	24		32-61-14	ALL
	C10		W1092	061	24		32-61-14	ALL
	C11		W1092	752	24		31-31-21	ALL
	C12	UNUSED						ALL
	C13	UNUSED						ALL
	C14		W1092	587	24		32-09-11	ALL
	C15		W1092	722	24		32-09-11	ALL
	D01		W1092	255B	24		32-61-13	ALL
	D02		W1092	239B	24		32-61-11	ALL
	D03		W1092	237B	24		32-61-11	ALL
	D04		W1092	243B	24		32-61-12	ALL
	D05		W1092	241B	24		32-61-12	ALL
	D06		W1092	263B	24		32-09-11	ALL
	D07		W1092	261B	24		32-09-11	ALL
	D08		W1092	560	24		32-61-14	ALL
	D09	UNUSED						ALL
	D10	UNUSED						ALL
	D11	UNUSED						ALL
	D12	UNUSED						ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15		W1092	566	22		32-09-11	ALL
	E01		W1092	256R	24		32-61-13	ALL
	E02		W1092	028	22		78-34-11	ALL
	E03	UNUSED						ALL
	E04		W1092	672	24		32-61-14	ALL
	E05		W1092	519	24		32-61-14	ALL
	E06	UNUSED						ALL
	E07	UNUSED						ALL
	E08	UNUSED						ALL
	E09		W1092	219R	24		27-88-12	ALL
	E10		W1092	215R	24		27-88-12	ALL
	E11		W1092	209R	24		27-88-12	ALL
	E12		W1092	216R	24		27-88-12	ALL
	E13		W1092	210R	24		27-88-12	ALL
	E14	UNUSED						ALL
	E15	UNUSED						ALL
	F01		W1092	256B	24		32-61-13	ALL

HOOKUP LIST

D280T132

91-21-51

Section D02100

Page 12

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02166A		//		PLUG-PART OF D02166 (continued)				ALL
	F02		W1092	140	24		32-61-14	ALL
	F03	UNUSED						ALL
	F04	UNUSED						ALL
	F05		W1092	236R	24		78-34-11	ALL
	F06		W1092	174	24		78-36-11	ALL
	F07		W1092	671	24		32-61-14	ALL
	F08		W1092	090	22		33-42-11	ALL
	F09		W1092	219B	24		27-88-12	ALL
	F10		W1092	215B	24		27-88-12	ALL
	F11		W1092	209B	24		27-88-12	ALL
	F12		W1092	216B	24		27-88-12	ALL
	F13		W1092	210B	24		27-88-12	ALL
	F14	UNUSED						ALL
	F15	UNUSED						ALL
	G01		W1092	273R	24		78-36-11	ALL
	G02		W1092	274R	24		78-36-11	ALL
	G03	UNUSED						ALL
	G04		W1092	171	24		78-36-11	ALL
	G05		W1092	236B	24		78-34-11	ALL
	G06	UNUSED						ALL
	G07	UNUSED						ALL
	G08	UNUSED						ALL
	G09		W1092	217R	24		27-88-12	ALL
	G10		W1092	213R	24		27-88-12	ALL
	G11		W1092	220R	24		27-88-12	ALL
	G12		W1092	214R	24		27-88-12	ALL
	G13	UNUSED						ALL
	G14	UNUSED						ALL
	G15		W1092	231R	24		27-88-22	ALL
	H01		W1092	273B	24		78-36-11	ALL
	H02		W1092	274B	24		78-36-11	ALL
	H03		W1092	172	24		78-36-11	ALL
	H04		W1092	173	22		78-36-11	ALL
	H05		W1092	029	24		78-34-11	ALL
	H06		W1092	589	24		32-09-11	ALL
	H07	UNUSED						ALL
	H08		W1092	557	24		32-09-13	ALL
	H09		W1092	217B	24		27-88-12	ALL
	H10		W1092	213B	24		27-88-12	ALL
	H11		W1092	220B	24		27-88-12	ALL

HOOKUP LIST

D280T132

91-21-51

Section D02100

Page 13

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02166A		//		PLUG-PART OF D02166 (continued)				ALL
	H12		W1092	214B	24		27-88-12	ALL
	H13	UNUSED						ALL
	H14		W1092	517	24		32-61-14	ALL
	H15		W1092	231B	24		27-88-22	ALL
	J01		W1092	272R	24		78-36-11	ALL
	J02		W1092	271R	24		78-36-11	ALL
	J03	UNUSED						ALL
	J04		W1092	207R	24		78-34-11	ALL
	J05		W1092	561	24		78-34-11	ALL
	J06	UNUSED						050-099
	J06		W1092	755	24		32-71-11	150-199, 275-299
	J07	UNUSED						ALL
	J08	UNUSED						050-099
	J08		W1092	756	24		32-71-11	150-199, 275-299
	J09	UNUSED						ALL
	J10		W1092	211R	24		27-88-12	ALL
	J11		W1092	218R	24		27-88-12	ALL
	J12		W1092	212R	24		27-88-12	ALL
	J13		W1092	588	24		32-09-11	ALL
	J14	UNUSED						ALL
	J15		W1092	229R	24		27-88-22	ALL
	K01		W1092	272B	24		78-36-11	ALL
	K02		W1092	271B	24		78-36-11	ALL
	K03	UNUSED						ALL
	K04		W1092	207B	24		78-34-11	ALL
	K05		W1092	562	22		78-34-11	ALL
	K06	UNUSED						050-099
	K06		W1092	755	24		32-71-11	150-199, 275-299
	K07	UNUSED						ALL
	K08	UNUSED						050-099
	K08		W1092	756	24		32-71-11	150-199, 275-299
	K09	UNUSED						050-099
	K09		W1092	765	24		32-71-11	150-199, 275-299
	K10		W1092	211B	24		27-88-12	ALL
	K11		W1092	218B	24		27-88-12	ALL
	K12		W1092	212B	24		27-88-12	ALL
	K13	UNUSED						ALL
	K14	UNUSED						ALL
	K15		W1092	229B	24		27-88-22	ALL
	DED		W1092	028Z			78-34-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D02100

Page 14

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02166A		//		PLUG-PART OF D02166 (continued)				ALL
	DED		W1092	029Z			78-34-11	ALL
	DED		W1092	171Z			78-36-11	ALL
	DED		W1092	172Z			78-36-11	ALL
	DED		W1092	173Z			78-36-11	ALL
	DED		W1092	174Z			78-36-11	ALL
	DED		W1092	207Z			78-34-11	ALL
	DED		W1092	236Z			78-34-11	ALL
	DED		W1092	271Z			78-36-11	ALL
	DED		W1092	272Z			78-36-11	ALL
	DED		W1092	273Z			78-36-11	ALL
	DED		W1092	274Z			78-36-11	ALL
	DED		W1092	561Z			78-34-11	ALL
	DED		W1092	562Z			78-34-11	ALL
	DED		W1092	566Z			32-09-11	ALL
	DED		W1092	567Z			32-09-11	ALL
	DED		W1092	589Z			32-09-11	ALL
	DED		W1092	722Z			32-09-11	ALL
	DED		W1092	737Z			29-11-32	ALL
D02166B		//		PLUG-PART OF D02166				ALL
	A01	UNUSED						ALL
	A02	UNUSED						ALL
	A03	UNUSED						ALL
	A04	UNUSED						ALL
	A05	UNUSED						ALL
	A06	UNUSED						ALL
	A07	UNUSED						ALL
	A08		W1092	01D	24		27-32-21	ALL
	A09	UNUSED						ALL
	A10	UNUSED						ALL
	A11	UNUSED						ALL
	A12	UNUSED						ALL
	A13	UNUSED						ALL
	A14	UNUSED						ALL
	A15	UNUSED						ALL
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04	UNUSED						ALL
	B05	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D02100

Page 15

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02166B		//		PLUG-PART OF D02166 (continued)				ALL
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09		W1092	046	24		27-88-11	ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13	UNUSED						ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	C01	UNUSED						ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05	UNUSED						ALL
	C06	UNUSED						ALL
	C07	UNUSED						ALL
	C08	UNUSED						ALL
	C09		W1092	048	24		27-88-11	ALL
	C10	UNUSED						ALL
	C11	UNUSED						ALL
	C12	UNUSED						ALL
	C13	UNUSED						ALL
	C14		W1092	031	24		27-81-11	ALL
	C15	UNUSED						ALL
	D01	UNUSED						ALL
	D02	UNUSED						ALL
	D03	UNUSED						ALL
	D04	UNUSED						ALL
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	D08	UNUSED						ALL
	D09		W1092	044	24		27-88-11	ALL
	D10	UNUSED						ALL
	D11	UNUSED						ALL
	D12	UNUSED						ALL
	D13	UNUSED						ALL
	D14		W1092	0AR	24		27-81-21	ALL
	D15	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D02100

Page 16

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02166B		//		PLUG-PART OF D02166 (continued)				ALL
	E01	UNUSED						ALL
	E02	UNUSED						ALL
	E03	UNUSED						ALL
	E04		W1092	227R	24		27-88-22	ALL
	E05		W1092	222R	24		27-88-22	ALL
	E06		W1092	228R	24		27-88-22	ALL
	E07		W1092	221R	24		27-88-22	ALL
	E08	UNUSED						ALL
	E09	UNUSED						ALL
	E10		W1092	131	24		31-31-13	ALL
	E11	UNUSED						ALL
	E12	UNUSED						ALL
	E13		W1092	127	24		31-31-13	ALL
	E14	UNUSED						ALL
	E15		W1092	129	24		31-31-13	ALL
	F01	UNUSED						ALL
	F02	UNUSED						050-099
	F02		W1092	633R	24		52-71-12	150-199, 275-299
	F03	UNUSED						050-099
	F03		W1092	734	24		52-71-12	150-199, 275-299
	F04		W1092	227B	24		27-88-22	ALL
	F05		W1092	222B	24		27-88-22	ALL
	F06		W1092	228B	24		27-88-22	ALL
	F07		W1092	221B	24		27-88-22	ALL
	F08	UNUSED						ALL
	F09	UNUSED						ALL
	F10	UNUSED						ALL
	F11	UNUSED						ALL
	F12	UNUSED						ALL
	F13	UNUSED						ALL
	F14	UNUSED						ALL
	F15		W1092	003	24		27-32-11	ALL
	G01	UNUSED						ALL
	G02	UNUSED						050-099
	G02		W1092	633B	24		52-71-12	150-199, 275-299
	G03	UNUSED						050-099
	G03		W1092	734	24		52-71-12	150-199, 275-299
	G04		W1092	225R	24		27-88-22	ALL
	G05		W1092	232R	24		27-88-22	ALL
	G06		W1092	226R	24		27-88-22	ALL

HOOKUP LIST
D280T132

91-21-51
Section D02100
Page 17
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02166B		//		PLUG-PART OF D02166 (continued)				ALL
	G07	UNUSED						ALL
	G08	UNUSED						ALL
	G09		W1092	047	24		27-88-11	ALL
	G10		W1092	132	24		31-31-13	ALL
	G11	UNUSED						ALL
	G12	UNUSED						ALL
	G13		W1092	004	24		27-32-11	ALL
	G14	UNUSED						ALL
	G15		W1092	133	24		31-31-13	ALL
	H01	UNUSED						ALL
	H02	UNUSED						050-099
	H02		W1092	632R	24		52-71-12	150-199, 275-299
	H03	UNUSED						050-099
	H03		W1092	735	24		52-71-12	150-199, 275-299
	H04		W1092	225B	24		27-88-22	ALL
	H05		W1092	232B	24		27-88-22	ALL
	H06		W1092	226B	24		27-88-22	ALL
	H07	UNUSED						ALL
	H08	UNUSED						ALL
	H09		W1092	045	24		27-88-11	ALL
	H10	UNUSED						ALL
	H11	UNUSED						ALL
	H12	UNUSED						ALL
	H13		W1092	130	24		31-31-13	ALL
	H14	UNUSED						ALL
	H15		W1092	054	24		29-11-32	ALL
	J01	UNUSED						ALL
	J02	UNUSED						050-099
	J02		W1092	632B	24		52-71-12	150-199, 275-299
	J03	UNUSED						050-099
	J03		W1092	735	24		52-71-12	150-199, 275-299
	J04		W1092	223R	24		27-88-22	ALL
	J05		W1092	230R	24		27-88-22	ALL
	J06		W1092	224R	24		27-88-22	ALL
	J07	UNUSED						ALL
	J08	UNUSED						ALL
	J09		W1092	049	24		27-88-11	ALL
	J10		W1092	128	24		31-31-13	ALL
	J11	UNUSED						ALL
	J12	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D02100

Page 18

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02166B		//		PLUG-PART OF D02166 (continued)				ALL
	J13		W1092	300	24		27-58-11	ALL
	J14	UNUSED						ALL
	J15		W1092	002	24		27-88-11	ALL
	K01		W1092	551	24		27-32-21	ALL
	K02	UNUSED						050-099
	K02		W1092	733	24		52-71-12	150-199, 275-299
	K03	UNUSED						050-099
	K03		W1092	732	24		52-71-12	150-199, 275-299
	K04		W1092	223B	24		27-88-22	ALL
	K05		W1092	230B	24		27-88-22	ALL
	K06		W1092	224B	24		27-88-22	ALL
	K07	UNUSED						ALL
	K08		W1092	549	24		27-32-21	ALL
	K09	UNUSED						ALL
	K10	UNUSED						ALL
	K11	UNUSED						ALL
	K12	UNUSED						ALL
	K13		W1092	01A	24		27-32-11	ALL
	K14	UNUSED						ALL
	K15		W1092	008	22		27-88-11	ALL
	DED		W1092	002Z			27-88-11	ALL
	DED		W1092	008Z			27-88-11	ALL
	DED		W1092	054Z			29-11-32	ALL
D02166C		//		PLUG-PART OF D02166				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	= C12	UNUSED						ALL
	= C13	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D02100
Page 19
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02166D		//		PLUG-PART OF D02166				ALL
	A01		W1092	285R	24		52-34-13	ALL
	A02		W1092	286R	24		52-34-13	ALL
	A03		W1092	194	24		52-34-12	ALL
	A04		W1092	296R	24		52-71-11	ALL
	A05		W1092	611R	24		52-71-12	ALL
	A06		W1092	614R	24		52-71-14	ALL
	A07		W1092	198	24		52-71-11	ALL
	A08		W1092	528	24		52-71-12	ALL
	A09	UNUSED						ALL
	A10	UNUSED						ALL
	A11		W1092	603R	24		52-71-12	ALL
	A12		W1092	570	24		32-09-21	ALL
	A13		W1092	290R	24		52-35-13	ALL
	A14		W1092	288R	24		52-35-13	ALL
	A15		W1092	289R	24		52-35-13	ALL
	B01		W1092	285B	24		52-34-13	ALL
	B02		W1092	286B	24		52-34-13	ALL
	B03		W1092	193	24		52-34-12	ALL
	B04		W1092	296B	24		52-71-11	ALL
	B05		W1092	611B	24		52-71-12	ALL
	B06		W1092	614B	24		52-71-14	ALL
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09	UNUSED						ALL
	B10		W1092	006	22		25-53-21	ALL
	B11		W1092	603B	24		52-71-12	ALL
	B12		W1092	574	22		32-09-21	ALL
	B13		W1092	290B	24		52-35-13	ALL
	B14		W1092	288B	24		52-35-13	ALL
	B15		W1092	289B	24		52-35-13	ALL
	C01		W1092	283R	24		52-34-13	ALL
	C02		W1092	284R	24		52-34-13	ALL
	C03		W1092	190	24		52-34-12	ALL
	C04		W1092	293R	24		52-71-11	ALL
	C05		W1092	605R	24		52-71-12	ALL
	C06		W1092	616R	24		52-71-11	ALL
	C07		W1092	083	24		33-22-11	ALL
	C08	UNUSED						ALL
	C09		W1092	088	22		33-37-21	ALL
	C10	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D02100

Page 20

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02166D		//		PLUG-PART OF D02166 (continued)				ALL
	C11	UNUSED						ALL
	C12		W1092	001	24		27-81-11	ALL
	C13		W1092	580	24		52-34-12	ALL
	C14		W1092	292R	24		52-35-13	050-099
	C14	UNUSED						150-199, 275-299
	C15		W1092	508	24		52-35-12	ALL
	D01		W1092	283B	24		52-34-13	ALL
	D02		W1092	284B	24		52-34-13	ALL
	D03		W1092	507	22		52-34-13	ALL
	D04		W1092	293B	24		52-71-11	ALL
	D05		W1092	605B	24		52-71-12	ALL
	D06		W1092	616B	24		52-71-11	ALL
	D07	UNUSED						ALL
	D08	UNUSED						ALL
	D09	UNUSED						ALL
	D10	UNUSED						ALL
	D11		W1092	579	24		52-34-12	ALL
	D12		W1092	121	22		32-09-21	ALL
	D13		W1092	572	22		33-37-11	ALL
	D14		W1092	292B	24		52-35-13	050-099
	D14	UNUSED						150-199, 275-299
	D15		W1092	509	24		52-35-12	ALL
	E01		W1092	287R	24		52-34-13	ALL
	E02		W1092	191	24		52-34-12	ALL
	E03		W1092	295R	24		52-71-11	ALL
	E04		W1092	294R	24		52-71-11	ALL
	E05		W1092	613R	24		52-71-14	ALL
	E06		W1092	615R	24		52-71-11	ALL
	E07	UNUSED						ALL
	E08		W1092	529	24		52-71-12	ALL
	E09		W1092	166	22		33-51-21	ALL
	E10		W1092	089	22		33-37-21	ALL
	E11		W1092	579	24		52-34-12	ALL
	E12	UNUSED						ALL
	E13		W1092	007	22		25-53-11	ALL
	E14		W1092	291R	24		52-35-13	ALL
	E15		W1092	511	24		52-35-12	ALL
	F01		W1092	287B	24		52-34-13	ALL
	F02		W1092	192	24		52-34-12	ALL
	F03		W1092	295B	24		52-71-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D02100

Page 21

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02166D		//		PLUG-PART OF D02166 (continued)				ALL
	F04		W1092	294B	24		52-71-11	ALL
	F05		W1092	613B	24		52-71-14	ALL
	F06		W1092	615B	24		52-71-11	ALL
	F07	UNUSED						ALL
	F08	UNUSED						ALL
	F09	UNUSED						ALL
	F10		W1092	086	24		33-22-11	ALL
	F11		W1092	196	24		52-34-12	ALL
	F12	UNUSED						ALL
	F13		W1092	165	22		33-51-21	ALL
	F14		W1092	291B	24		52-35-13	ALL
	F15		W1092	510	24		52-35-12	ALL
	G01		W1092	527	24		52-71-12	050-099
	G01		W1092	506	24		52-71-12	150-199, 275-299
	G02		W1092	604R	24		52-71-12	ALL
	G03		W1092	601R	24		52-71-11	ALL
	G04		W1092	298R	24		52-71-11	ALL
	G05		W1092	610R	24		52-71-13	ALL
	G06		W1092	195	24		52-34-12	ALL
	G07		W1092	617R	24		52-71-11	ALL
	G08		W1092	199	24		52-71-11	ALL
	G09		W1092	521	24		52-71-13	ALL
	G10		W1092	522	24		52-71-13	ALL
	G11		W1092	606R	24		52-71-13	ALL
	G12		W1092	607R	24		52-71-13	ALL
	G13		W1092	602R	24		52-71-12	ALL
	G14		W1092	524	24		52-71-14	ALL
	G15		W1092	512	24		52-35-12	ALL
	H01	UNUSED						ALL
	H02		W1092	604B	24		52-71-12	ALL
	H03		W1092	601B	24		52-71-11	ALL
	H04		W1092	298B	24		52-71-11	ALL
	H05		W1092	610B	24		52-71-13	ALL
	H06		W1092	084	24		33-22-11	ALL
	H07		W1092	617B	24		52-71-11	ALL
	H08	UNUSED						ALL
	H09	UNUSED						ALL
	H10	UNUSED						ALL
	H11		W1092	606B	24		52-71-13	ALL
	H12		W1092	607B	24		52-71-13	ALL

HOOKUP LIST

D280T132

91-21-51

Section D02100

Page 22

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02166D		//		PLUG-PART OF D02166 (continued)				ALL
	H13		W1092	602B	24		52-71-12	ALL
	H14	UNUSED						ALL
	H15		W1092	592	22		52-71-12	ALL
	J01		W1092	506	24		52-71-12	050-099
	J01		W1092	527	24		52-71-12	150-199, 275-299
	J02		W1092	299R	24		52-71-11	ALL
	J03		W1092	297R	24		52-71-11	ALL
	J04		W1092	609R	24		52-71-13	ALL
	J05		W1092	612R	24		52-71-13	ALL
	J06		W1092	618R	24		52-71-11	ALL
	J07		W1092	197	24		52-71-11	ALL
	J08		W1092	501	24		52-71-11	ALL
	J09		W1092	580	24		52-34-12	ALL
	J10		W1092	085	24		33-22-11	ALL
	J11		W1092	502	24		52-71-11	ALL
	J12		W1092	608R	24		52-71-12	ALL
	J13		W1092	520	24		52-71-13	ALL
	J14		W1092	523	24		52-71-14	ALL
	J15		W1092	593	22		52-71-13	ALL
	K01	UNUSED						ALL
	K02		W1092	299B	24		52-71-11	ALL
	K03		W1092	297B	24		52-71-11	ALL
	K04		W1092	609B	24		52-71-13	ALL
	K05		W1092	612B	24		52-71-13	ALL
	K06		W1092	618B	24		52-71-11	ALL
	K07	UNUSED						ALL
	K08	UNUSED						ALL
	K09		W1092	513	24		52-35-12	ALL
	K10		W1092	504	22		52-71-14	ALL
	K11		W1092	503	22		52-71-11	ALL
	K12		W1092	608B	24		52-71-12	ALL
	K13	UNUSED						ALL
	K14	UNUSED						ALL
	K15		W1092	591	22		52-71-11	ALL
	DED		W1092	165Z			33-51-21	ALL
	DED		W1092	166Z			33-51-21	ALL
D02166E		//		PLUG-PART OF D02166				ALL
	A01		W1092	279R	24		52-11-13	ALL
	A02		W1092	282R	24		52-11-13	ALL

HOOKUP LIST

D280T132

91-21-51

Section D02100

Page 23

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02166E		//		PLUG-PART OF D02166 (continued)				ALL
	A03		W1092	185	22		52-11-12	ALL
	A04	UNUSED						ALL
	A05	UNUSED						ALL
	A06	UNUSED						ALL
	A07	UNUSED						ALL
	A08	UNUSED						ALL
	A09	UNUSED						ALL
	A10	UNUSED						ALL
	A11		W1092	275R	24		78-36-21	ALL
	A12		W1092	276R	24		78-36-21	ALL
	A13	UNUSED						ALL
	A14		W1092	175	24		78-36-21	ALL
	A15		W1092	270R	24		78-34-21	ALL
	B01		W1092	279B	24		52-11-13	ALL
	B02		W1092	282B	24		52-11-13	ALL
	B03	UNUSED						ALL
	B04	UNUSED						ALL
	B05	UNUSED						ALL
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11		W1092	275B	24		78-36-21	ALL
	B12		W1092	276B	24		78-36-21	ALL
	B13		W1092	177	24		78-36-21	ALL
	B14		W1092	176	22		78-36-21	ALL
	B15		W1092	270B	24		78-34-21	ALL
	C01		W1092	280R	24		52-11-13	ALL
	C02	UNUSED						ALL
	C03		W1092	188	24		52-11-12	ALL
	C04	UNUSED						ALL
	C05	UNUSED						ALL
	C06	UNUSED						ALL
	C07	UNUSED						ALL
	C08	UNUSED						ALL
	C09		W1092	518	24		32-61-14	ALL
	C10	UNUSED						ALL
	C11		W1092	277R	24		78-36-21	ALL
	C12		W1092	278R	24		78-36-21	ALL

HOOKUP LIST

D280T132

91-21-51

Section D02100

Page 24

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02166E		//		PLUG-PART OF D02166 (continued)				ALL
	C13	UNUSED						ALL
	C14		W1092	269R	24		78-34-21	ALL
	C15		W1092	167	24		78-34-21	ALL
	D01		W1092	280B	24		52-11-13	ALL
	D02	UNUSED						ALL
	D03		W1092	189	22		52-11-13	ALL
	D04	UNUSED						ALL
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	D08	UNUSED						ALL
	D09	UNUSED						ALL
	D10		W1092	169	22		78-34-21	ALL
	D11		W1092	277B	24		78-36-21	ALL
	D12		W1092	278B	24		78-36-21	ALL
	D13	UNUSED						ALL
	D14		W1092	269B	24		78-34-21	ALL
	D15		W1092	168	22		78-34-21	ALL
	E01		W1092	281R	24		52-11-13	ALL
	E02		W1092	187	22		52-11-12	ALL
	E03	UNUSED						ALL
	E04		W1092	040	24		32-61-14	ALL
	E05	UNUSED						ALL
	E06	UNUSED						ALL
	E07	UNUSED						ALL
	E08	UNUSED						ALL
	E09	UNUSED						ALL
	E10		W1092	180	24		32-09-12	ALL
	E11	UNUSED						ALL
	E12	UNUSED						ALL
	E13		W1092	178	24		78-36-21	ALL
	E14	UNUSED						ALL
	E15	UNUSED						ALL
	F01		W1092	281B	24		52-11-13	ALL
	F02		W1092	186	22		52-11-12	ALL
	F03	UNUSED						ALL
	F04	UNUSED						ALL
	F05		W1092	514	24		32-61-14	ALL
	F06	UNUSED						ALL
	F07	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D02100

Page 25

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02166E		//		PLUG-PART OF D02166 (continued)				ALL
	F08	UNUSED						ALL
	F09		W1092	063	24		32-61-14	ALL
	F10	UNUSED						ALL
	F11		W1092	170	24		78-34-21	ALL
	F12	UNUSED						ALL
	F13	UNUSED						ALL
	F14		W1092	183	24		32-09-12	ALL
	F15		W1092	087	24		33-24-11	ALL
	G01		W1092	260R	24		32-61-13	ALL
	G02		W1092	251R	24		32-61-13	ALL
	G03		W1092	233R	24		32-61-11	ALL
	G04		W1092	235R	24		32-61-11	ALL
	G05		W1092	246R	24		32-61-12	ALL
	G06		W1092	248R	24		32-61-12	ALL
	G07		W1092	262R	24		32-09-12	ALL
	G08		W1092	257R	24		32-09-12	ALL
	G09		W1092	059	24		32-61-14	ALL
	G10		W1092	042	24		32-61-14	ALL
	G11		W1092	039	24		32-61-14	ALL
	G12		W1092	721	24		32-61-14	ALL
	G13	UNUSED						ALL
	G14	UNUSED						ALL
	G15		W1092	184	24		32-09-12	ALL
	H01		W1092	260B	24		32-61-13	ALL
	H02		W1092	251B	24		32-61-13	ALL
	H03		W1092	233B	24		32-61-11	ALL
	H04		W1092	235B	24		32-61-11	ALL
	H05		W1092	246B	24		32-61-12	ALL
	H06		W1092	248B	24		32-61-12	ALL
	H07		W1092	262B	24		32-09-12	ALL
	H08		W1092	257B	24		32-09-12	ALL
	H09	UNUSED						ALL
	H10	UNUSED						ALL
	H11	UNUSED						ALL
	H12	UNUSED						ALL
	H13	UNUSED						ALL
	H14	UNUSED						ALL
	H15	UNUSED						ALL
	J01		W1092	250R	24		32-61-13	ALL
	J02		W1092	252R	24		32-61-13	ALL

HOOKUP LIST

D280T132

91-21-51

Section D02100

Page 26

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02166E		//		PLUG-PART OF D02166 (continued)				ALL
	J03		W1092	234R	24		32-61-11	ALL
	J04	UNUSED						ALL
	J05		W1092	247R	24		32-61-12	ALL
	J06		W1092	590	24		32-09-12	ALL
	J07		W1092	258R	24		32-09-12	ALL
	J08	UNUSED						ALL
	J09	UNUSED						ALL
	J10		W1092	043	24		32-61-14	ALL
	J11		W1092	041	24		32-61-14	ALL
	J12	UNUSED						ALL
	J13	UNUSED						ALL
	J14		W1092	555	24		32-09-13	ALL
	J15		W1092	182	24		32-09-12	ALL
	K01		W1092	250B	24		32-61-13	ALL
	K02		W1092	252B	24		32-61-13	ALL
	K03		W1092	234B	24		32-61-11	ALL
	K04	UNUSED						ALL
	K05		W1092	247B	24		32-61-12	ALL
	K06	UNUSED						ALL
	K07		W1092	258B	24		32-09-12	ALL
	K08	UNUSED						ALL
	K09	UNUSED						ALL
	K10	UNUSED						ALL
	K11	UNUSED						ALL
	K12	UNUSED						ALL
	K13		W1092	679	22		34-45-13	050-099, 150-156, 162-166, 275-276
	K13	UNUSED						157, 167-199, 277-299
	K14	UNUSED						ALL
	K15		W1092	179	22		32-09-12	ALL
	DED		W1092	039Z			32-61-14	ALL
	DED		W1092	041Z			32-61-14	ALL
	DED		W1092	042Z			32-61-14	ALL
	DED		W1092	043Z			32-61-14	ALL
	DED		W1092	059Z			32-61-14	ALL
	DED		W1092	063Z			32-61-14	ALL
	DED		W1092	087Z			33-24-11	ALL
	DED		W1092	180Z			32-09-12	ALL
	DED		W1092	182Z			32-09-12	ALL
	DED		W1092	183Z			32-09-12	ALL
	DED		W1092	184Z			32-09-12	ALL

HOOKUP LIST

D280T132

91-21-51

Section D02100

Page 27

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02166E		//		PLUG-PART OF D02166 (continued)				ALL
	DED		W1092	590Z			32-09-12	ALL
	DED		W1092	721Z			32-61-14	ALL
D02166F		//		PLUG-PART OF D02166				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	= C12	UNUSED						ALL
	= C13	UNUSED						ALL
D02167		555/295/R043		PLUG				280-299
	1		W1865	001	20		23-32-43	280-299
	2		W1865	003	22		23-32-43	280-299
	3		W1865	006	22		23-32-43	280-299
	4		W1865	002	20		23-32-43	280-299
	5		W1865	007	22		23-32-43	280-299
	6		W1865	008	22		23-32-43	280-299
	7		W1865	009	22		23-32-43	280-299
	8		W1865	004	24		23-32-43	280-299
	9	UNUSED						280-299
	10	UNUSED						280-299
	11	UNUSED						280-299
	12	UNUSED						280-299
D02168		0622/290/L065		PLUG-				050-099, 150-165, 167-199, 275-278
D02168		0622/295/L065		PLUG-				166
D02168		0625/289/L056		PLUG-				280-299
	1	UNUSED						ALL
	2		W0812	028	22		33-21-32	ALL
	3		W0812	029	22		33-21-32	ALL

HOOKUP LIST
D280T132

91-21-51
Section D02100
Page 28
Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02168		0622/290/L065		PLUG- (continued)				050-099, 150-165, 167-199, 275-278
D02168		0622/295/L065		PLUG- (continued)				166
D02168		0625/289/L056		PLUG- (continued)				280-299
	4	UNUSED						ALL
	5		W0812	020	20		33-21-32	ALL
	6	UNUSED						ALL
	7		W0812	027	20		33-21-32	ALL
	8		W0812	026	20		33-21-32	ALL
	9		W0812	655	22		33-21-32	ALL
	10		W0812	656	22		33-21-32	ALL
	11		W0812	030	22		33-21-32	ALL
	12		W0812	031	22		33-21-32	ALL
	DED		W0812	020Z			33-21-32	155-156, 166
	DED		W0812	027Z			33-21-32	155-156, 166
D02169		543/260/0		PLUG				275-278
D02169		555/295/L036		PLUG				280-299
	1		W1825	001	20		23-32-43	275-299
	2		W1825	003	22		23-32-43	275-299
	3		W1825	006	22		23-32-43	275-299
	4		W1825	002	20		23-32-43	275-299
	5		W1825	007	22		23-32-43	275-299
	6		W1825	008	22		23-32-43	275-299
	7		W1825	009	22		23-32-43	275-299
	8		W1825	004	24		23-32-43	275-299
	9	UNUSED						275-299
	10	UNUSED						275-299
	11	UNUSED						280-299
	12	UNUSED						280-299
	= A1		W1825	01CX			23-32-43	275-278
	= C1		W1825	01CO			23-32-43	275-278
D02170		0710/290/L065		PLUG-				050-099
D02170		0738/288/L056		PLUG-				150-165, 167-199
D02170		0738/295/L056		PLUG-				166
D02170		0660/290/L065		PLUG-				275-278
D02170		0681/284/L056		PLUG-				280-299
	1	UNUSED						ALL
	2		W0812	121	22		33-21-32	ALL
	3		W0812	122	22		33-21-32	ALL
	4	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D02100

Page 29

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02170		0710/290/L065		PLUG- (continued)				050-099
D02170		0738/288/L056		PLUG- (continued)				150-165, 167-199
D02170		0738/295/L056		PLUG- (continued)				166
D02170		0660/290/L065		PLUG- (continued)				275-278
D02170		0681/284/L056		PLUG- (continued)				280-299
	5		W0812	083	20		33-21-32	ALL
	6	UNUSED						ALL
	7		W0812	110	20		33-21-32	ALL
	8		W0812	109	20		33-21-32	ALL
	9		W0812	127	22		33-21-32	ALL
	10		W0812	128	22		33-21-32	ALL
	11		W0812	129	22		33-21-32	ALL
	12		W0812	130	22		33-21-32	ALL
	DED		W0812	083Z			33-21-32	155-156, 166
	DED		W0812	110Z			33-21-32	155-156, 166
D02171		1392/280/R 38		PLUG				275-299
	1		W1855	001	20		23-32-62	275-299
	2		W1855	003	22		23-32-62	275-299
	3		W1855	006	22		23-32-62	275-299
	4		W1855	002	20		23-32-62	275-299
	5		W1855	007	22		23-32-62	275-299
	6		W1855	008	22		23-32-62	275-299
	7		W1855	009	22		23-32-62	275-299
	8		W1855	004	24		23-32-62	275-299
	9	UNUSED						275-299
	10	UNUSED						275-299
	11	UNUSED						275-299
	12	UNUSED						275-299
D02173		1392/280/L 38		PLUG				275-299
	1		W1853	001	20		23-32-62	275-299
	2		W1853	003	22		23-32-62	275-299
	3		W1853	006	22		23-32-62	275-299
	4		W1853	002	20		23-32-62	275-299
	5		W1853	007	22		23-32-62	275-299
	6		W1853	008	22		23-32-62	275-299
	7		W1853	009	22		23-32-62	275-299
	8		W1853	004	24		23-32-62	275-299
	9	UNUSED						275-299

HOOKUP LIST

D280T132

91-21-51

Section D02100

Page 30

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02173		1392/280/L 38		PLUG (continued)				275-299
	10	UNUSED						275-299
	11	UNUSED						275-299
	12	UNUSED						275-299
D02176		AE0202/ /		RCPT-				ALL
	1		W1080	729	24		21-24-11	050-099, 150-199
	1	UNUSED						275-299
	2	UNUSED						ALL
	3		W1080	725	22		21-24-11	050-099, 150-199
	3	UNUSED						275-299
	4		W1080	726	22		21-24-11	050-099, 150-199
	4	UNUSED						275-299
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11		W1080	045	24		21-58-15	ALL
	12		W1080	043	22		21-58-15	ALL
	13		W1080	041	24		21-58-15	ALL
	14		W1080	063	24		21-58-15	ALL
	15		W1080	042	22		21-58-15	ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22		W1080	724	24		21-24-11	050-099, 150-199
	22	UNUSED						275-299
	23		W1080	723	24		21-24-11	050-099, 150-199
	23	UNUSED						275-299
	24		W1080	728	24		21-24-11	050-099, 150-199
	24	UNUSED						275-299
	25		W1080	722	22		21-24-11	050-099, 150-199
	25	UNUSED						275-299
	26		W1080	PE1			21-58-15	ALL
	27	UNUSED						ALL
	28	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D02100
Page 31
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02176		AE0202/ /		RCPT- (continued)				ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32		W1080	046	24		21-58-15	ALL
	33		W1080	044	24		21-58-15	ALL
	34		W1080	PE1			21-58-15	ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37		W1080	048	24		21-58-15	ALL
	38		W1080	067	24		21-58-15	ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
D02177		376/260/0		PLUG				275-278
	= A1		W1813	01CX			23-32-34	275-278
	= C1		W1813	01CO			23-32-34	275-278
D02178		1507/280/L004		PLUG-A4 AFT GALLEY				275-299
	1	UNUSED						275-299
	2	UNUSED						275-299
	3		W0226	019	16		25-31-21	275-299
	4		W0226	026	16		25-31-21	275-299
	5		W0226	027	16		25-31-21	275-299
	6		W0226	028	16		25-31-21	275-299
	7		W0226	029	16		25-31-21	275-299
	8		W0226	030	16		25-31-21	275-299
	9		W0226	031	16		25-31-21	275-299
	10		W0226	032	16		25-31-21	275-299
	11		W0226	033	16		25-31-21	275-299
	12		W0226	034	16		25-31-21	275-299
	13		W0226	035	16		25-31-21	275-299
	14		W0226	036	16		25-31-21	275-299
D02179		555/295/R043		PLUG- COAXIAL				280-299
	= A1		W1865	01CX			23-32-43	280-299
	= C1		W1865	01CO			23-32-43	280-299
D02181		555/295/L036		PLUG- COAXIAL				280-299
	= A1		W1825	01CX			23-32-43	280-299

HOOKUP LIST

D280T132

91-21-51

Section D02100

Page 32

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02181		555/295/L036		PLUG- COAXIAL (continued)				280-299
	= C1		W1825	01CO			23-32-43	280-299
D02183		1392/280/R 38		PLUG-COAXIAL				275-299
	= A1		W1855	01CX			23-32-62	275-299
	= C1		W1855	01CO			23-32-62	275-299
D02185		1392/280/L 38		PLUG-COAXIAL				275-299
	= A1		W1853	01CX			23-32-62	275-299
	= C1		W1853	01CO			23-32-62	275-299
D02187		331/136/R042		PLUG -RF SWITCH				ALL
	A		W0807	001	24		34-53-13	ALL
	B		W0807	005	20		34-53-13	ALL
	C		W0807	003	24		34-53-13	ALL
	D	UNUSED						ALL
	E	UNUSED						ALL
	F	UNUSED						ALL
D02189		331/132/R042		PLUG-COAX				050-099
D02189		331/136/R042		PLUG-COAX				150-199, 275-299
	= A1		W1905	01CX			34-53-13	ALL
	= C1		W1905	01CO			34-53-13	ALL
D02190		1045/188/L082		PLUG-				ALL
	1	UNUSED						ALL
	2		W1214	003	20		32-42-12	ALL
	3		W1214	002	20		32-42-12	ALL
D02191		331/136/R042		PLUG				ALL
	= A1		W0333	01CX			34-53-13	ALL
	= C1		W0333	01CO			34-53-13	ALL
D02192		1045/188/R082		PLUG-				ALL
	1	UNUSED						ALL
	2		W1206	003	20		32-42-12	ALL
	3		W1206	002	20		32-42-12	ALL
D02193		331/136/R042		PLUG-COAX				ALL
	= A1		W1903	01CX			34-53-13	ALL

HOOKUP LIST
D280T132

91-21-51
Section D02100
Page 33
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02193		331/136/R042		PLUG-COAX (continued)				ALL
	= C1		W1903	01CO			34-53-13	ALL
D02194		1030/177/R092		PLUG-				ALL
	1		W1286	001	20		32-44-11	ALL
	2		W1286	002	20		32-44-11	ALL
	3		W1286	003	20		32-44-11	ALL
	4		W1286	004	20		32-44-11	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8		W1286	008	20		32-44-11	ALL
	9		W1286	009	20		32-44-11	ALL
	10		W1286	010	20		32-44-11	ALL
D02195		331/131/R043		PLUG -RF SWITCH				ALL
	A		W0807	002	24		34-53-13	ALL
	B		W0807	006	20		34-53-13	ALL
	C		W0807	004	24		34-53-13	ALL
	D	UNUSED						ALL
	E	UNUSED						ALL
	F	UNUSED						ALL
D02196		0965/175/R003		PLUG-				ALL
	1		W0964	008	20		32-42-12	ALL
	2		W0964	007	20		32-42-12	ALL
	3	UNUSED						ALL
D02197		331/131/43		PLUG-COAX				ALL
	= A1		W1907	01CX			34-53-13	ALL
	= C1		W1907	01CO			34-53-13	ALL
D02198		0965/175/R003		PLUG-				ALL
	1		W0964	201R	20		32-42-12	ALL
	2		W0964	201B	20		32-42-12	ALL
	3	UNUSED						ALL
	DED		W0964	201Z			32-42-12	ALL
D02199		331/131/R043		PLUG-COAX				ALL
	= A1		W0323	01CX			34-53-13	ALL

HOOKUP LIST
D280T132

91-21-51
Section D02100
Page 34
Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02199		331/131/R043		PLUG-COAX (continued)				ALL
	= C1		W0323	01CO			34-53-13	ALL

HOOKUP LIST

D280T132

91-21-51

Section D02100
Page 35 End
Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02200		0965/175/R003		PLUG-				ALL
	1	UNUSED						ALL
	2		W0964	009	20		32-42-12	ALL
	3		W0964	010	20		32-42-12	ALL
D02202		0965/175/R003		PLUG-				ALL
	1		W0964	013	20		32-42-12	ALL
	2		W0964	012	20		32-42-12	ALL
	3	UNUSED						ALL
D02204J		J00004/LWR/R GR		RCPT-				ALL
	1		W0684	201R	18		32-61-12	ALL
	2		W0684	201B	18		32-61-12	ALL
	3	UNUSED						ALL
D02204P		//		PLUG - VENDOR PIGTAIL				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
D02206J		J00004/LWR/R GR		RCPT-				ALL
	1		W0684	202R	18		32-61-12	ALL
	2		W0684	202B	18		32-61-12	ALL
	3	UNUSED						ALL
D02206P		//		PLUG - VENDOR PIGTAIL				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
D02207		1720/280/L007		PLUG				050-099, 155-199, 275-299
	1		W0587	006Y	18		27-41-11	050-099, 155-199, 275-299
	2		W0587	005Y	20		27-41-11	050-099, 155-199, 275-299
	3		W0587	010Y	18		27-41-31	050-099, 155-199, 275-299
	4		W0587	009Y	20		27-41-31	050-099, 155-199, 275-299
	5		W0587	003Y	18		27-41-11	050-099, 155-199, 275-299
	6		W0587	004Y	20		27-41-11	050-099, 155-199, 275-299
	7		W0587	011Y	18		27-41-31	050-099, 155-199, 275-299
	8		W0587	008Y	20		27-41-31	050-099, 155-199, 275-299
	9	UNUSED						050-099, 155-199, 275-299

HOOKUP LIST

D280T132

91-21-51

Section D02200

Page 1

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02207		1720/280/L007		PLUG (continued)				050-099, 155-199, 275-299
	10		W0587	007Y	18		27-41-11	050-099, 155-199, 275-299
D02208J		J00004/LWR/R GR		RCPT-				ALL
	1		W0682	201R	18		32-61-12	ALL
	2		W0682	201B	18		32-61-12	ALL
	3	UNUSED						ALL
D02208P		//		PLUG - VENDOR PIGTAIL				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
D02209		1720/285/L005		PLUG				050-099, 155-199, 275-299
	1		W0575	005Y	18		27-41-11	050-099, 155-199, 275-299
	2		W0575	004Y	20		27-41-11	050-099, 155-199, 275-299
	3		W0575	024Y	18		27-41-31	050-099, 155-199, 275-299
	4		W0575	023Y	20		27-41-31	050-099, 155-199, 275-299
	5		W0575	007Y	18		27-41-11	050-099, 155-199, 275-299
	6		W0575	006Y	20		27-41-11	050-099, 155-199, 275-299
	7		W0575	025Y	18		27-41-31	050-099, 155-199, 275-299
	8		W0575	022Y	20		27-41-31	050-099, 155-199, 275-299
	9	UNUSED						050-099, 155-199, 275-299
	10		W0575	013Y	18		27-41-11	050-099, 155-199, 275-299
D02210J		J00004/LWR/R GR		RCPT-				ALL
	1		W0682	202R	18		32-61-12	ALL
	2		W0682	202B	18		32-61-12	ALL
	3	UNUSED						ALL
D02210P		//		PLUG - VENDOR PIGTAIL				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
D02211		1720/285/L005		PLUG				050-099, 155-199, 275-299
	1	DK	W0575	003	18		27-41-11	050-099, 155-199, 275-299
	2		W0575	002	20		27-41-11	050-099, 155-199, 275-299
	3		W0575	001	20		27-41-11	050-099, 155-199, 275-299
	4	UNUSED						050-099, 155-199, 275-299

HOOKUP LIST
D280T132

91-21-51
Section D02200
Page 2
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02211		1720/285/L005		PLUG (continued)				050-099, 155-199, 275-299
	5	UNUSED						050-099, 155-199, 275-299
	6	UNUSED						050-099, 155-199, 275-299
	7	UNUSED						050-099, 155-199, 275-299
	8	DK	W0575	009	18		27-41-11	050-099, 155-199, 275-299
	9	UNUSED						050-099, 155-199, 275-299
	10	UNUSED						050-099, 155-199, 275-299
	11	UNUSED						050-099, 155-199, 275-299
	12	UNUSED						050-099, 155-199, 275-299
	13	UNUSED						050-099, 155-199, 275-299
	14	UNUSED						050-099, 155-199, 275-299
	15	UNUSED						050-099, 155-199, 275-299
D02212		0987/170/R010		PLUG-				ALL
	1		W0838	006	20		29-21-32	ALL
	2		W0838	003	20		29-21-32	ALL
	3		W0838	001	18		29-21-32	ALL
	4		W0838	009	18		29-21-32	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8		W0838	016	18		29-21-32	ALL
	9		W0838	008	18		29-21-32	ALL
	10		W0838	013	18		29-21-32	ALL
D02213		1720/280/L007		PLUG				050-099, 155-199, 275-299
	1		W0587	001	20		27-41-11	050-099, 155-199, 275-299
	2	DK	W0587	002	18		27-41-11	050-099, 155-199, 275-299
	3	UNUSED						050-099, 155-199, 275-299
	4	UNUSED						050-099, 155-199, 275-299
	5	UNUSED						050-099, 155-199, 275-299
D02214		1010/150/R005		PLUG-				ALL
	1		W0838	004	18		29-21-32	ALL
	2		W0838	009	18		29-21-32	ALL
	3		W0838	002	18		29-21-32	ALL
	4	UNUSED						ALL
	5		W0838	001	18		29-21-32	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8		W0838	007	18		29-21-32	ALL

HOOKUP LIST
D280T132

91-21-51
Section D02200
Page 3
Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02214		1010/150/R005		PLUG- (continued)				ALL
	9		W0838	005	20		29-21-32	ALL
	10		W0838	014	18		29-21-32	ALL
D02215		1725/280/R007		PLUG				050-099, 155-199, 275-299
	1		W0589	006Y	18		27-41-21	050-099, 155-199, 275-299
	2		W0589	005Y	20		27-41-21	050-099, 155-199, 275-299
	3		W0589	010Y	18		27-41-31	050-099, 155-199, 275-299
	4		W0589	009Y	20		27-41-31	050-099, 155-199, 275-299
	5		W0589	003Y	18		27-41-21	050-099, 155-199, 275-299
	6		W0589	004Y	20		27-41-21	050-099, 155-199, 275-299
	7		W0589	011Y	18		27-41-31	050-099, 155-199, 275-299
	8		W0589	008Y	20		27-41-31	050-099, 155-199, 275-299
	9	UNUSED						050-099, 155-199, 275-299
	10		W0589	007Y	18		27-41-21	050-099, 155-199, 275-299
D02216		1045/180/L005		PLUG-				ALL
	1		W1212	020	18		29-32-11	ALL
	2		W1212	021	18		29-32-11	ALL
	3		W1212	024	18		29-32-11	ALL
D02217		1725/280/R005		PLUG				050-099, 155-199, 275-299
	1		W0581	005Y	18		27-41-21	050-099, 155-199, 275-299
	2		W0581	004Y	20		27-41-21	050-099, 155-199, 275-299
	3		W0581	024Y	18		27-41-31	050-099, 155-199, 275-299
	4		W0581	023Y	20		27-41-31	050-099, 155-199, 275-299
	5		W0581	007Y	18		27-41-21	050-099, 155-199, 275-299
	6		W0581	006Y	20		27-41-21	050-099, 155-199, 275-299
	7		W0581	025Y	18		27-41-31	050-099, 155-199, 275-299
	8		W0581	022Y	20		27-41-31	050-099, 155-199, 275-299
	9	UNUSED						050-099, 155-199, 275-299
	10		W0581	013Y	18		27-41-21	050-099, 155-199, 275-299
D02218		1129/123/R065		PLUG-				ALL
	1	UNUSED						ALL
	2		W0588	018	20		29-33-11	ALL
	3		W0588	013	18		29-33-11	ALL
	4		W0588	031	18		29-33-11	ALL
	5		W0588	016	20		29-33-11	ALL
	6		W0588	017	20		29-33-11	ALL
	7	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D02200

Page 4

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02219		1725/280/R005		PLUG				050-099, 155-199, 275-299
	1	DK	W0581	003	18		27-41-21	050-099, 155-199, 275-299
	2		W0581	002	20		27-41-21	050-099, 155-199, 275-299
	3		W0581	001	20		27-41-21	050-099, 155-199, 275-299
	4	UNUSED						050-099, 155-199, 275-299
	5	UNUSED						050-099, 155-199, 275-299
	6	UNUSED						050-099, 155-199, 275-299
	7	UNUSED						050-099, 155-199, 275-299
	8	DK	W0581	009	18		27-41-21	050-099, 155-199, 275-299
	9	UNUSED						050-099, 155-199, 275-299
	10	UNUSED						050-099, 155-199, 275-299
	11	UNUSED						050-099, 155-199, 275-299
	12	UNUSED						050-099, 155-199, 275-299
	13	UNUSED						050-099, 155-199, 275-299
	14	UNUSED						050-099, 155-199, 275-299
	15	UNUSED						050-099, 155-199, 275-299
D02220		1129/123/R065		PLUG-				ALL
	1		W0588	013	18		29-33-11	ALL
	2		W0588	015	18		29-33-11	ALL
	3		W0588	014	18		29-33-11	ALL
D02221		1725/280/R007		PLUG				050-099, 155-199, 275-299
	1		W0589	001	20		27-41-21	050-099, 155-199, 275-299
	2	DK	W0589	002	18		27-41-21	050-099, 155-199, 275-299
	3	UNUSED						050-099, 155-199, 275-299
	4	UNUSED						050-099, 155-199, 275-299
	5	UNUSED						050-099, 155-199, 275-299
D02222A		//		PLUG-PART OF D02222				ALL
	A01	62	W0014	455W	22		32-46-11	050, 150-199, 275-299
	A01		W0014	455W	22		32-46-11	051-099
	A02	63	W0014	455G	22		32-46-11	050, 150-199, 275-299
	A02		W0014	455G	22		32-46-11	051-099
	A03	UNUSED						ALL
	A04	62	W0014	456W	22		32-46-11	050, 150-199, 275-299
	A04		W0014	456W	22		32-46-11	051-099
	A05	63	W0014	456G	22		32-46-11	050, 150-199, 275-299
	A05		W0014	456G	22		32-46-11	051-099
	A06	UNUSED						ALL
	A07	62	W0014	451W	22		32-46-11	050, 150-199, 275-299

HOOKUP LIST

D280T132

91-21-51

Section D02200

Page 5

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02222A		//		PLUG-PART OF D02222 (continued)				ALL
	A07		W0014	451W	22		32-46-11	051-099
	A08	63	W0014	451G	22		32-46-11	050, 150-199, 275-299
	A08		W0014	451G	22		32-46-11	051-099
	A09	UNUSED						ALL
	A10	62	W0014	452W	22		32-46-11	050, 150-199, 275-299
	A10		W0014	452W	22		32-46-11	051-099
	A11	63	W0014	452G	22		32-46-11	050, 150-199, 275-299
	A11		W0014	452G	22		32-46-11	051-099
	A12	UNUSED						ALL
	A13	62	W0014	457W	22		32-46-11	050, 150-199, 275-299
	A13		W0014	457W	22		32-46-11	051-099
	A14	63	W0014	457G	22		32-46-11	050, 150-199, 275-299
	A14		W0014	457G	22		32-46-11	051-099
	A15	UNUSED						ALL
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04	UNUSED						ALL
	B05	UNUSED						ALL
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13	UNUSED						ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	C01	62	W0014	458W	22		32-46-11	050, 150-199, 275-299
	C01		W0014	458W	22		32-46-11	051-099
	C02	63	W0014	458G	22		32-46-11	050, 150-199, 275-299
	C02		W0014	458G	22		32-46-11	051-099
	C03	UNUSED						ALL
	C04	62	W0014	453W	22		32-46-11	050, 150-199, 275-299
	C04		W0014	453W	22		32-46-11	051-099
	C05	63	W0014	453G	22		32-46-11	050, 150-199, 275-299
	C05		W0014	453G	22		32-46-11	051-099
	C06	UNUSED						ALL
	C07	62	W0014	454W	22		32-46-11	050, 150-199, 275-299

HOOKUP LIST

D280T132

91-21-51

Section D02200

Page 6

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02222A		//		PLUG-PART OF D02222 (continued)				ALL
	C07		W0014	454W	22		32-46-11	051-099
	C08	63	W0014	454G	22		32-46-11	050, 150-199, 275-299
	C08		W0014	454G	22		32-46-11	051-099
	C09	UNUSED						ALL
	C10	UNUSED						ALL
	C11	UNUSED						ALL
	C12	UNUSED						ALL
	C13	UNUSED						ALL
	C14	UNUSED						ALL
	C15	UNUSED						ALL
	D01	UNUSED						ALL
	D02	UNUSED						ALL
	D03	UNUSED						ALL
	D04	UNUSED						ALL
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	D08	UNUSED						ALL
	D09	UNUSED						ALL
	D10	UNUSED						ALL
	D11	UNUSED						ALL
	D12	UNUSED						ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15	UNUSED						ALL
D02222B		//		PLUG-PART OF D02222				ALL
	A01	UNUSED						ALL
	A02	UNUSED						ALL
	A03	UNUSED						ALL
	A04	UNUSED						ALL
	A05	UNUSED						ALL
	A06	UNUSED						ALL
	A07	UNUSED						ALL
	A08	UNUSED						ALL
	A09	UNUSED						ALL
	A10	UNUSED						ALL
	A11	UNUSED						ALL
	A12	UNUSED						ALL
	A13	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D02200

Page 7

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02222B		//		PLUG-PART OF D02222 (continued)				ALL
	A14	UNUSED						ALL
	A15	UNUSED						ALL
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04	UNUSED						ALL
	B05	UNUSED						ALL
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13	UNUSED						ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	C01	UNUSED						ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05	UNUSED						ALL
	C06	UNUSED						ALL
	C07		W0014	582	22		32-46-11	ALL
	C08	UNUSED						ALL
	C09	UNUSED						ALL
	C10		W0014	521	24		32-46-11	ALL
	C11		W0014	522	24		32-46-11	ALL
	C12		W0014	523	24		32-46-11	ALL
	C13		W0014	524	24		32-46-11	ALL
	C14	UNUSED						ALL
	C15		W0014	519	22		32-46-11	ALL
	D01	UNUSED						ALL
	D02	UNUSED						ALL
	D03	UNUSED						ALL
	D04	UNUSED						ALL
	D05		W0014	537	24		32-46-11	ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	D08	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D02200
Page 8
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02222B		//		PLUG-PART OF D02222 (continued)				ALL
	D09		W0014	525	24		32-46-11	ALL
	D10		W0014	526	24		32-46-11	ALL
	D11		W0014	527	24		32-46-11	ALL
	D12		W0014	520	24		32-46-11	ALL
	D13	UNUSED						ALL
	D14		W0014	518	22		32-46-11	ALL
	D15	UNUSED						ALL
D02223		480/280/0		PLUG-COAXIAL				050-099
D02223		455/280/0		PLUG-COAXIAL				150-199
	= A1		W1591	01CX			23-32-13	050-099, 150-199
	= C1		W1591	01CO			23-32-13	050-099, 150-199
D02224J		0180/149/R022		RCPT-				ALL
	1		W0926	204R	18		32-61-13	ALL
	2		W0926	204B	18		32-61-13	ALL
	3	UNUSED						ALL
D02224P		0175/161/R022		PLUG - VENDOR PIGTAIL				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
D02225		480/280/0		PLUG				050-099
D02225		455/280/0		PLUG				150-199
	1		W1591	007	20		23-32-11	050-099, 150-199
	2		W1591	004	20		23-32-13	050-099, 150-199
	3		W1591	005	20		23-32-13	050-099, 150-199
	4		W1591	008	20		23-32-11	050-099, 150-199
	5		W1591	006	20		23-32-13	050-099, 150-199
	6		W1591	001	24		23-32-13	050-099, 150-199
	7		W1591	002	24		23-32-13	050-099, 150-199
	8		W1591	003	24		23-32-13	050-099, 150-199
	9	UNUSED						050-099, 150-199
	10	UNUSED						050-099, 150-199
	11	UNUSED						050-099, 150-199
	12	UNUSED						050-099, 150-199
D02226J		0170/150/R015		RCPT-				ALL
	1		W0924	203R	18		32-61-13	ALL

HOOKUP LIST

D280T132

91-21-51

Section D02200

Page 9

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02226J		0170/150/R015		RCPT- (continued)				ALL
	2		W0924	203B	18		32-61-13	ALL
	3	UNUSED						ALL
D02226P		0188/120/0000		PLUG - VENDOR PIGTAIL				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
D02227		605/280/0		PLUG-COAXIAL				150-199
	= A1		W1589	01CX			23-32-13	150-199
	= C1		W1589	01CO			23-32-13	150-199
D02228		1030/180/L005		PLUG-				ALL
	1	UNUSED						ALL
	2		W1212	002	18		32-41-11	ALL
	3		W1212	001	18		32-41-11	ALL
D02229		605/280/0		PLUG				150-199
	1		W1589	007	20		23-32-11	150-199
	2		W1589	004	20		23-32-13	150-199
	3		W1589	005	20		23-32-13	150-199
	4		W1589	008	20		23-32-11	150-199
	5		W1589	006	20		23-32-13	150-199
	6		W1589	001	24		23-32-13	150-199
	7		W1589	002	24		23-32-13	150-199
	8		W1589	003	24		23-32-13	150-199
	9	UNUSED						150-199
	10	UNUSED						150-199
	11	UNUSED						150-199
	12	UNUSED						150-199
D02231		915/280/0000		PLUG-COAXIAL				050-099
D02231		660/280/0		PLUG-COAXIAL				150-199
	= A1		W1417	04CX			23-32-13	050-099
	= A1		W1661	01CX			23-32-13	150-199
	= C1		W1417	04CO			23-32-13	050-099
	= C1		W1661	01CO			23-32-13	150-199

HOOKUP LIST

D280T132

91-21-51

Section D02200

Page 10

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02233		915/280/0000		PLUG				050-099
D02233		660/280/0		PLUG				150-199
	1		W1417	903	20		23-32-11	050-099
	1		W1661	007	20		23-32-11	150-199
	2		W1417	926	20		23-32-13	050-099
	2		W1661	004	20		23-32-13	150-199
	3		W1417	927	20		23-32-13	050-099
	3		W1661	005	20		23-32-13	150-199
	4		W1417	909	20		23-32-11	050-099
	4		W1661	008	20		23-32-11	150-199
	5		W1417	928	20		23-32-13	050-099
	5		W1661	006	20		23-32-13	150-199
	6		W1417	923	24		23-32-13	050-099
	6		W1661	001	24		23-32-13	150-199
	7		W1417	924	24		23-32-13	050-099
	7		W1661	002	24		23-32-13	150-199
	8		W1417	925	24		23-32-13	050-099
	8		W1661	003	24		23-32-13	150-199
	9	UNUSED						050-099, 150-199
	10	UNUSED						050-099, 150-199
	11	UNUSED						050-099, 150-199
	12	UNUSED						050-099, 150-199
D02235		815/280/0		PLUG-COAXIAL				150-199
	= A1		W1663	01CX			23-32-13	150-199
	= C1		W1663	01CO			23-32-13	150-199
D02236		P010-00/ /		PLUG-P10				ALL
	1		W0481	045	20		33-13-18	ALL
	2		W0481	046	20		33-13-18	ALL
	3		W0481	043	20		27-48-11	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W0481	030	24		27-48-11	050-099, 150-154, 157-164, 167-199, 275-299
	6		W0481	302R	24		27-48-11	155-156, 165-166
	7		W0481	029	24		27-48-11	050-099, 150-154, 157-164, 167-199, 275-299
	7		W0481	302B	24		27-48-11	155-156, 165-166

HOOKUP LIST

D280T132

91-21-51

Section D02200

Page 11

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02236		P010-00/ /		PLUG-P10 (continued)				ALL
	8		W0481	028	24		27-48-11	050-099, 150-154, 157-164, 167-199, 275-299
	8		W0481	302Y	24		27-48-11	155-156, 165-166
	9		W0481	044	20		27-48-11	ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D02237		815/280/0		PLUG				150-199
	1		W1663	007	20		23-32-11	150-199
	2		W1663	004	20		23-32-13	150-199
	3		W1663	005	20		23-32-13	150-199
	4		W1663	008	20		23-32-11	150-199
	5		W1663	006	20		23-32-13	150-199
	6		W1663	001	24		23-32-13	150-199
	7		W1663	002	24		23-32-13	150-199
	8		W1663	003	24		23-32-13	150-199
	9	UNUSED						150-199
	10	UNUSED						150-199
	11	UNUSED						150-199
	12	UNUSED						150-199
D02238		P010-00/ /		PLUG-P10				ALL
	1		W0485	017	20		33-13-18	ALL
	2		W0485	018	20		33-13-18	ALL
	3		W0485	015	20		27-48-11	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W0485	013	24		27-48-11	050-099, 150-154, 157-164, 167-199, 275-299
	6		W0485	301R	24		27-48-11	155-156, 165-166
	7		W0485	012	24		27-48-11	050-099, 150-154, 157-164, 167-199, 275-299
	7		W0485	301B	24		27-48-11	155-156, 165-166
	8		W0485	011	24		27-48-11	050-099, 150-154, 157-164, 167-199, 275-299
	8		W0485	301Y	24		27-48-11	155-156, 165-166
	9		W0485	016	20		27-48-11	ALL
	10	UNUSED						ALL
	11	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D02200
Page 12
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02238		P010-00/ /		PLUG-P10 (continued)				ALL
	12	UNUSED						ALL
D02239		0447/245/L080		PLUG-COAXIAL				151-152
D02239		255/245/L 10		PLUG-COAXIAL				280-299
	= A1		W0047	25CX			23-32-13	151-152, 280-299
	= C1		W0047	25CO			23-32-13	151-152, 280-299
D02241		0447/245/L 80		PLUG-				050-099, 150-199
D02241		255/245/L 80		PLUG-				280-299
	1		W0047	513	20		23-32-11	050-099, 150-199, 280-299
	2		W0047	512	20		23-32-11	050-099, 150-199, 280-299
	3	UNUSED						050-099, 150, 153-199
	3		W0047	503	22		23-32-12	151-152
	3		W0047	503	22		23-32-11	280-299
	4		W0047	511	20		23-32-11	050-099, 150-199, 280-299
	5		W0047	510	20		23-32-11	050-099, 150-199, 280-299
	6	UNUSED						050-099, 150, 153-199, 280-299
	6		W0047	504	24		23-32-12	151-152
	7	UNUSED						050-099, 150-199, 280-299
	8	UNUSED						050-099, 150, 153-199
	8		W0047	501	24		23-32-12	151-152
	8		W0047	624R	24		23-32-13	280-299
	9	UNUSED						050-099, 150, 153-199
	9		W0047	501Z			23-32-12	151-152
	9		W0047	624B	24		23-32-13	280-299
	10	UNUSED						050-099, 150, 153-199
	10		W0047	502	24		23-32-12	151-152
	10		W0047	625R	24		23-32-13	280-299
	11	UNUSED						050-099, 150, 153-199
	11		W0047	502Z			23-32-12	151-152
	11		W0047	625B	24		23-32-13	280-299
	12	UNUSED						050-099, 150-199, 280-299
	13	UNUSED						050-099, 150-199, 280-299
	14	UNUSED						050-099, 150-199, 280-299
	15	UNUSED						050-099, 150-199, 280-299
	16	UNUSED						050-099, 150-199, 280-299
	17	UNUSED						050-099, 150-199, 280-299
	18	UNUSED						050-099, 150-199, 280-299
	19	UNUSED						050-099, 150, 153-199
	19		W0047	506	24		23-32-12	151-152

HOOKUP LIST

D280T132

91-21-51

Section D02200

Page 13

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02241		0447/245/L 80		PLUG- (continued)				050-099, 150-199
D02241		255/245/L 80		PLUG- (continued)				280-299
	19		W0047	620	24		23-32-11	280-299
	20	UNUSED						050-099, 150, 153-199, 280-299
	20		W0047	505	24		23-32-12	151-152
	21	UNUSED						050-099, 150-199, 280-299
	22	UNUSED						050-099, 150-199, 280-299
	23	UNUSED						050-099, 150-199, 280-299
	24	UNUSED						050-099, 150-199
	24		W0047	FRC			23-32-13	280-299
	DED		W0047	513Z			23-32-11	050-099, 150-199
			W0047	624Z			23-32-13	280-299
			W0047	625Z			23-32-13	280-299
			W0047	FRC			23-32-13	280-299
D02243		0447/245/L080		PLUG				050-099, 150-199
D02243		0245/267/L012		PLUG				275-299
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15		W0047	305R	24		23-32-21	050-099, 151, 275-299
	15	UNUSED						150, 152-199
	16		W0047	305Y	24		23-32-21	050-099, 151, 275-299
	16	UNUSED						150, 152-199
	17		W0047	305B	24		23-32-21	050-099, 151, 275-299
	17	UNUSED						150, 152-199
	18		W0047	306B	24		23-32-21	050-099, 151, 275-299
	18	UNUSED						150, 152-199
	19		W0047	306R	24		23-32-21	050-099, 151, 275-299
	19	UNUSED						150, 152-199

HOOKUP LIST
D280T132

91-21-51
Section D02200
Page 14
Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02243		0447/245/L080		PLUG (continued)				050-099, 150-199
D02243		0245/267/L012		PLUG (continued)				275-299
	20		W0047	306Y	24		23-32-21	050-099, 151, 275-299
	20	UNUSED						150, 152-199
	21	UNUSED						ALL
	22	UNUSED						ALL
	23		W0047	286R	24		23-32-21	050-099, 151, 275-299
	23		W0047	286B	24		23-32-21	150, 152-199
	24		W0047	286B	24		23-32-21	050-099, 151, 275-299
	24		W0047	286R	24		23-32-21	150, 152-199
	25		W0047	287R	24		23-32-21	050-099, 151, 275-299
	25		W0047	287B	24		23-32-21	150, 152-199
	26		W0047	287B	24		23-32-21	050-099, 151, 275-299
	26		W0047	287R	24		23-32-21	150, 152-199
	27		W0047	FRF			23-32-21	050-099, 151, 275-278
	27	UNUSED						150, 152-199, 280-299
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36		W0047	288R	24		23-32-21	050-099, 151, 275-299
	36	UNUSED						150, 152-199
	37		W0047	288B	24		23-32-21	050-099, 151, 275-299
	37	UNUSED						150, 152-199
	38	UNUSED						ALL
	39		W0047	507	20		23-32-12	050-099, 150-199
	39		W0047	950	20		23-32-21	150, 152-199
	39		W0047	563	20		23-32-11	275-299
	40		W0047	515	20		23-32-21	050-099
	40		W0047	901	20		23-32-21	150, 152-199
	40		W0047	515	20		23-32-11	150-199, 275-299
	41		W0047	514	20		23-32-21	050-099
	41		W0047	902	20		23-32-21	150, 152-199
	41		W0047	514	20		23-32-11	150-199, 275-299
	CAP	Y	W0047	306B	24		23-32-21	150, 152-199
	CAP	Y	W0047	306R	24		23-32-21	150, 152-199
	CAP	Y	W0047	306Y	24		23-32-21	150, 152-199

HOOKUP LIST

D280T132

91-21-51

Section D02200

Page 15

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02243		0447/245/L080		PLUG (continued)				050-099, 150-199
D02243		0245/267/L012		PLUG (continued)				275-299
	DED		W0047	306Z			23-32-21	150, 152-156, 162-199
			W0047	286Z			23-32-21	ALL
			W0047	287Z			23-32-21	ALL
			W0047	306Z			23-32-21	050-099, 151, 157, 275-299
			W0047	FRF			23-32-21	050-099, 151, 275-278
			W0047	288Z			23-32-21	050-099, 151, 275-299
			W0047	305Z			23-32-21	050-099, 151, 275-299
			W0047	903	20		23-32-21	150, 152-199
			W0047	626	20		23-32-21	280-299
D02245		731/308/R 38		PLUG				150-199
	1		W1417	003	20		23-32-11	150-199
	2		W1417	026	20		23-32-13	150-199
	3		W1417	027	20		23-32-13	150-199
	4		W1417	009	20		23-32-11	150-199
	5		W1417	028	20		23-32-13	150-199
	6		W1417	023	24		23-32-13	150-199
	7		W1417	024	24		23-32-13	150-199
	8		W1417	025	24		23-32-13	150-199
	9	UNUSED						150-199
	10	UNUSED						150-199
	11	UNUSED						150-199
	12	UNUSED						150-199
D02246		P050-00/ /		RCPT-				ALL
	1		W1114	037	22		29-11-32	ALL
	2		W1114	PC1			99-99-99	ALL
	3	UNUSED						ALL
	4		W1114	040	22		29-11-32	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W1114	041	22		29-11-32	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10		W1114	036	22		29-11-32	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13		W1114	035	22		29-11-32	ALL
	14	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D02200
Page 16
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02246		P050-00/ /		RCPT- (continued)				ALL
	15	UNUSED						ALL
	16		W1114	034	22		29-11-32	ALL
	17	UNUSED						ALL
	18		W1114	042	24		29-11-32	ALL
	19	UNUSED						ALL
	20		W1114	206R	24		29-11-32	ALL
	21		W1114	206B	24		29-11-32	ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26		W1114	PC1			99-99-99	ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
			W1114	045	22		29-11-32	ALL
			W1114	206Z			29-11-32	ALL
D02247		731/308/R 38		PLUG-COAXIAL				150-199
	= A1		W1417	02CX			23-32-13	150-199
	= C1		W1417	02CO			23-32-13	150-199
D02249		730/308/R 36		PLUG				150-199
	A	UNUSED						150-199
	B	UNUSED						150-199
	C	UNUSED						150-199
	D	UNUSED						150-199
	E		W1661	002	24		23-32-13	150-199

HOOKUP LIST
D280T132



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02249		730/308/R 36		PLUG (continued)				150-199
	F		W1661	003	24		23-32-13	150-199
	G		W1661	005	20		23-32-13	150-199
	H		W1661	001	24		23-32-13	150-199
	J		W1661	006	20		23-32-13	150-199
	K		W1661	007	20		23-32-11	150-199
	L		W1661	008	20		23-32-11	150-199
	M		W1661	004	20		23-32-13	150-199
D02251		730/308/R 36		PLUG-COAXIAL				150-199
	= A1		W1661	01CX			23-32-13	150-199
	= C1		W1661	01CO			23-32-13	150-199
D02252		P036-00/ /		RELAY SOCKET-				ALL
	A1	UNUSED						ALL
	A2		W0184	746	22		29-11-32	ALL
	A3		W0184	673	22		29-11-32	ALL
	B1		W0184	654	22		29-11-32	ALL
	B2		W0184	748	20		29-11-32	ALL
	B3	UNUSED						ALL
	C1	UNUSED						ALL
	C2	UNUSED						ALL
	C3	UNUSED						ALL
	D1	UNUSED						ALL
	D2	UNUSED						ALL
	D3	UNUSED						ALL
	X1		W0184	747	22		29-11-32	ALL
	X2		W0184	749	20		29-11-32	ALL
	Y1		W0184	745	22		29-11-32	ALL
	Y2		W0184	750	20		29-11-32	ALL
D02253		731/308/R 36		PLUG				150-199
	A	UNUSED						150-199
	B	UNUSED						150-199
	C	UNUSED						150-199
	D	UNUSED						150-199
	E		W1663	002	24		23-32-13	150-199
	F		W1663	003	24		23-32-13	150-199
	G		W1663	005	20		23-32-13	150-199
	H		W1663	001	24		23-32-13	150-199
	J		W1663	006	20		23-32-13	150-199

HOOKUP LIST
D280T132

91-21-51
Section D02200
Page 18
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02253		731/308/R 36		PLUG (continued)				150-199
	K		W1663	007	20		23-32-11	150-199
	L		W1663	008	20		23-32-11	150-199
	M		W1663	004	20		23-32-13	150-199
D02254 D02254		P019-00/ / P019-00/ /		RELAY SOCKET-P19 RELAY SOCKET-				050-099 150-199, 275-299
	A1		W1060	509	22		23-31-11	ALL
	A2		W1060	508	22		23-31-11	ALL
	A3	UNUSED						ALL
	B1	UNUSED						ALL
	B2	UNUSED						ALL
	B3	UNUSED						ALL
	C1		W1060	085	22		33-24-11	050-099
	C1		W1060	085	20		33-24-11	150-199, 275-299
	C2		W1060	061	22		33-24-11	050-099
	C2		W1060	061	20		33-24-11	150-199, 275-299
	C3	UNUSED						ALL
	D1		W1060	714	22		33-24-11	050-099
	D1		W1060	088	22		33-24-11	150-199
	D1		W1060	714	20		33-24-11	275-299
	D2		W1060	082	22		33-24-11	050-099
	D2		W1060	082	20		33-24-11	150-199, 275-299
	D3	UNUSED						ALL
	X1		W1060	083	24		33-24-11	ALL
	X2		W1060	084	24		33-24-11	ALL
D02255		736/308/R 36		PLUG-COAXIAL				150-199
	= A1		W1663	01CX			23-32-13	150-199
	= C1		W1663	01CO			23-32-13	150-199
D02256 D02256		P019-00/ / P019-00/ /		RELAY SOCKET-P19 RELAY SOCKET-				050-099 150-199, 275-299
	A1	UNUSED						ALL
	A2	UNUSED						ALL
	A3	UNUSED						ALL
	B1		W1060	096	24		33-24-11	ALL
	B2		W1060	090	24		33-24-11	ALL
	B3	UNUSED						ALL
	C1	UNUSED						ALL
	C2		W1060	091	22		33-24-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D02200

Page 19

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02256		P019-00/ /		RELAY SOCKET-P19 (continued)				050-099
D02256		P019-00/ /		RELAY SOCKET- (continued)				150-199, 275-299
	C3		W1060	089	22		33-24-11	ALL
	D1		W1060	079	24		33-24-11	ALL
	D2		W1060	092	24		33-24-11	ALL
	D3	UNUSED						ALL
	X1		W1060	093	24		33-24-11	ALL
	X2		W1060	094	24		33-24-11	ALL
D02257		SHELF/E01/-4		RECP				ALL
	= A1		W0117	01CX			23-32-21	ALL
	= C1		W0117	01CO			23-32-21	ALL
D02259		SHELF/E01/-4		PLUG				ALL
	= A1		W0117	02CX			23-32-21	ALL
	= C1		W0117	02CO			23-32-21	ALL
D02261		P051/ /		PLUG				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W0045	248B	24		28-41-11	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8		W0045	248R	24		28-41-11	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15		W0045	883	22		38-32-11	050-099, 156-199, 277-299
	15	UNUSED						150-155, 275-276
	16	UNUSED						ALL
	17		W0045	509	22		21-66-21	050-099, 162-199
	17	UNUSED						150-157, 275-299
	18		W0045	505	22		21-66-11	050-099, 162-199
	18	UNUSED						150-157, 275-299
	19		W0045	508	22		21-66-41	050-099, 150, 152-199
	19	UNUSED						151, 275-299

HOOKUP LIST
D280T132

91-21-51
Section D02200
Page 20
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02261		P051/ /		PLUG (continued)				ALL
	20		W0045	512	24		27-81-31	ALL
	21		W0045	115	24		21-61-51	ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27		W0045	866	24		31-51-11	ALL
	28		W0045	867	24		31-51-11	ALL
	29		W0045	868	24		31-51-12	ALL
	30		W0045	862	22		31-41-35	ALL
	31	UNUSED						ALL
	32		W0045	863	22		31-41-35	ALL
	33		W0045	864	22		31-41-35	ALL
	34		W0045	869	24		31-51-12	ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40		W0045	077	24		31-41-35	ALL
	41	UNUSED						ALL
	42		W0045	247B	24		31-41-35	ALL
	43		W0045	247R	24		31-41-35	ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46		W0045	249B	24		32-45-11	ALL
	47	UNUSED						050-099, 150-155, 275-276
	47		W0045	884	22		38-32-11	156-199, 277-299
	48		W0045	249R	24		32-45-11	ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51		W0045	506	22		21-66-11	050-099, 162-199
	51	UNUSED						150-157, 275-299
	52		W0045	507	22		21-66-11	050-099, 162-199
	52	UNUSED						150-157, 275-299
	53	UNUSED						ALL
	54		W0045	PB4			99-99-99	ALL
	55	UNUSED						ALL
	56		W0045	870	22		31-51-12	ALL

HOOKUP LIST

D280T132

91-21-51

Section D02200

Page 21

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02261		P051/ /		PLUG (continued)				ALL
	57		W0045	871	22		31-51-12	ALL
	58	UNUSED						ALL
	59		W0045	872	22		31-51-11	ALL
	60		W0045	873	24		31-51-12	ALL
	61		W0045	PB4			99-99-99	ALL
	62		W0045	874	24		31-51-11	ALL
	63		W0045	875	24		31-51-12	ALL
	64		W0045	865	22		31-41-35	ALL
	65		W0045	876	24		31-51-11	ALL
	66	UNUSED						ALL
	CAP	Y	W0045	883	22		38-32-11	150-154
	CAP	Y	W0045	884	22		38-32-11	150-154
	DED		W0045	247Z			31-41-35	ALL
	DED		W0045	248Z			28-41-11	ALL
	DED		W0045	866Z			31-51-11	ALL
	DED		W0045	867Z			31-51-11	ALL
	DED		W0045	868Z			31-51-12	ALL
	DED		W0045	873Z			31-51-12	ALL
	DED		W0045	874Z			31-51-11	ALL
	DED		W0045	875Z			31-51-12	ALL
	REF		W0045	249	20		32-45-11	ALL
	REF		W0045	249Z			32-45-11	ALL
	REF	Y	W0045	883	22		38-32-11	155
	REF	Y	W0045	884	22		38-32-11	155
D02263J		P010-00/ /		RCPT				050-099, 155-199, 275-299
	1	UNUSED						050-099, 155-199, 275-299
	2	UNUSED						050-099, 155-199, 275-299
	3	UNUSED						050-099, 155-199, 275-299
	4	UNUSED						050-099, 155-199, 275-299
	5		W0525	002Y	20		27-41-31	050-099, 155-199, 275-299
	6		W0525	001Y	20		27-41-31	050-099, 155-199, 275-299
	7	UNUSED						050-099, 155-199, 275-299
	8		W0525	005	20		27-41-31	050-099, 155-199, 275-299
	9	UNUSED						050-099, 155-199, 275-299
	10		W0525	003Y	20		27-41-31	050-099, 155-199, 275-299
	11		W0525	004Y	20		27-41-31	050-099, 155-199, 275-299
	12	UNUSED						050-099, 155-199, 275-299
	DED		W0525	003Z			27-41-31	050-099, 155-199, 275-299
	DED		W0525	004Z			27-41-31	050-099, 155-199, 275-299

HOOKUP LIST
D280T132

91-21-51
Section D02200
Page 22
Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02264		L0349/14/TE		PLUG-				ALL
	1		W0446	022	18		27-62-11	ALL
	2		W0446	023	18		27-62-11	ALL
	3	UNUSED						ALL
D02265J		P10/ /		RCPT				050-099, 155-199, 275-299
	1	UNUSED						050-099, 155-199, 275-299
	2		W0521	002	20		27-41-31	050-099, 155-199, 275-299
	3	UNUSED						050-099, 155-199, 275-299
	4	UNUSED						050-099, 155-199, 275-299
	5		W0521	007Y	20		27-41-31	050-099, 155-199, 275-299
	6		W0521	006Y	20		27-41-31	050-099, 155-199, 275-299
	7	UNUSED						050-099, 155-199, 275-299
	8		W0521	003	20		27-41-31	050-099, 155-199, 275-299
	9	UNUSED						050-099, 155-199, 275-299
	10		W0521	001	20		27-41-31	050-099, 155-199, 275-299
	11		W0521	004Y	20		27-41-31	050-099, 155-199, 275-299
	12		W0521	005Y	20		27-41-31	050-099, 155-199, 275-299
	DED		W0521	006Z			27-41-31	050-099, 155-199, 275-299
	DED		W0521	007Z			27-41-31	050-099, 155-199, 275-299
D02266		R0349/14/RS		PLUG-				ALL
	1		W0464	204R	20		27-62-11	ALL
	2		W0464	020	18		27-62-11	ALL
	3		W0464	204B	20		27-62-11	ALL
D02267		SHELF/E02/05		PLUG				050-099, 150-199
	1		W0149	507	24		23-31-11	050-099, 150-199
	2		W0149	548	24		23-31-14	050-099, 150-199
	3	UNUSED						050-099, 150-199
	4	UNUSED						050-099, 150-199
	5	UNUSED						050-099, 150-199
	6	UNUSED						050-099, 150-199
	7	UNUSED						050-099, 150-199
	8	UNUSED						050-099, 150-199
	9	UNUSED						050-099, 150-199
	10	UNUSED						050-099, 150-199
	11	UNUSED						050-099, 150-199
	12	UNUSED						050-099, 150-199
	13	UNUSED						050-099, 150-199
	14	UNUSED						050-099, 150-199

HOOKUP LIST

D280T132

91-21-51

Section D02200

Page 23

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02267		SHELF/E02/05		PLUG (continued)				050-099, 150-199
	15		W0149	PA1				050-099, 150-199
	16		W0149	PA1				050-099, 150-199
	17	UNUSED						050-099, 150-199
	18	UNUSED						050-099, 150-199
	19	UNUSED						050-099, 150-199
	20		W0149	508	24		23-31-11	050-099, 150-199
	21	UNUSED						050-099, 150-199
	22	UNUSED						050-099, 150-199
	23	UNUSED						050-099, 150-199
	24	UNUSED						050-099, 150-199
	25		W0149	197	20		23-31-11	050-099, 150-199
	26	UNUSED						050-099, 150-199
	27	UNUSED						050-099, 150-199
	28	UNUSED						050-099, 150-199
	29	UNUSED						050-099, 150-199
	30	UNUSED						050-099, 150-199
	31	UNUSED						050-099, 150-199
	32		W0149	509	24		23-31-11	050-099, 150-199
	33	UNUSED						050-099, 150-199
	34	UNUSED						050-099, 150-199
	35	UNUSED						050-099, 150-199
	36	UNUSED						050-099, 150-199
	37	UNUSED						050-099, 150-199
	38	UNUSED						050-099, 150-199
	39	UNUSED						050-099, 150-199
	40	UNUSED						050-099, 150-199
	41	UNUSED						050-099, 150-199
	42		W0149	257B	22		23-31-14	050-099, 150-199
	43		W0149	257R	22		23-31-14	050-099, 150-199
	44		W0149	506	20		23-31-11	050-099, 150-199
	DED		W0149	197Z			23-31-11	050-099, 150-199
D02268		P036-00/ /		RELAY SOCKET-P36				ALL
	A1		W0176	649	24		27-51-31	ALL
	A2		W0176	645	24		27-51-31	ALL
	A3	UNUSED						ALL
	B1	UNUSED						ALL
	B2	UNUSED						ALL
	B3	UNUSED						ALL
	X1		W0176	646	24		27-51-31	ALL

HOOKUP LIST
D280T132

91-21-51
Section D02200
Page 24
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02268		P036-00/ /		RELAY SOCKET-P36 (continued)				ALL
	X2		W0176	648	24		27-51-31	ALL
D02269		SHELF/E02/05		PLUG				050-099, 150-199
	1		W0149	277R	22		23-31-14	050-099, 150-199
	2		W0149	269R	22		23-31-14	050-099, 150-199
	3		W0149	9001	24		23-31-14	050-099, 150-199
	4	UNUSED						050-099, 150-199
	5		W0149	559	20		23-31-14	050-099, 150-199
	6		W0149	9004	24		23-31-14	050-099, 150-199
	7	UNUSED						050-099, 150-199
	8		W0149	549	24		23-31-14	050-099, 150-199
	9	UNUSED						050-099, 150-199
	10		W0149	268B	22		23-31-14	050-099, 150-199
	11	UNUSED						050-099, 150-199
	12	UNUSED						050-099, 150-199
	13	UNUSED						050-099, 150-199
	14		W0149	276R	22		23-31-14	050-099, 150-199
	15		W0149	277B	22		23-31-14	050-099, 150-199
	16		W0149	552	24		23-31-14	050-099, 150-199
	17		W0149	550	24		23-31-14	050-099, 150-199
	18		W0149	268R	22		23-31-14	050-099, 150-199
	19		W0149	PA2				050-099, 150-199
	20		W0149	PA2				050-099, 150-199
	21		W0149	269B	22		23-31-14	050-099, 150-199
	22	UNUSED						050-099, 150-199
	23	UNUSED						050-099, 150-199
	24		W0149	557	20		23-31-14	050-099, 150-199
	25		W0149	558	20		23-31-14	050-099, 150-199
	26		W0149	276B	22		23-31-14	050-099, 150-199
	27		W0149	267B	22		23-31-14	050-099, 150-199
	28		W0149	275B	22		23-31-14	050-099, 150-199
	29		W0149	553	24		23-31-14	050-099, 150-199
	30		W0149	556	20		23-31-14	050-099, 150-199
	31	UNUSED						050-099, 150-199
	32		W0149	274B	22		23-31-14	050-099, 150-199
	33	UNUSED						050-099, 150-199
	34		W0149	554	24		23-31-14	050-099, 150-199
	35	UNUSED						050-099, 150-199
	36	UNUSED						050-099, 150-199
	37		W0149	555	20		23-31-14	050-099, 150-199

HOOKUP LIST

D280T132

91-21-51

Section D02200

Page 25

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02269		SHELF/E02/05		PLUG (continued)				050-099, 150-199
	38		W0149	274R	22		23-31-14	050-099, 150-199
	39		W0149	266B	22		23-31-14	050-099, 150-199
	40	UNUSED						050-099, 150-199
	41		W0149	266R	22		23-31-14	050-099, 150-199
	42		W0149	267R	22		23-31-14	050-099, 150-199
	43		W0149	275R	22		23-31-14	050-099, 150-199
	44	UNUSED						050-099, 150-199
	DED		W0149	555Z			23-31-14	050-099, 150-199
	DED		W0149	556Z			23-31-14	050-099, 150-199
	DED		W0149	557Z			23-31-14	050-099, 150-199
	DED		W0149	558Z			23-31-14	050-099, 150-199
	DED		W0149	559Z			23-31-14	050-099, 150-199
D02270		P037-00/ /		RELAY SOCKET-				ALL
	1		W0192	519	20		27-32-21	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W0192	517	24		32-09-12	ALL
	7		W0192	643	20		31-51-41	ALL
	8		W0192	644	24		31-51-41	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12		W0192	518	24		32-09-12	ALL
	13		W0192	602	24		27-32-21	ALL
	14	UNUSED						ALL
D02271		SHELF/E02/05		PLUG				050-099, 150-199
	1		W0149	516	24		23-31-11	050-099, 150-199
	2		W0149	511	24		23-31-11	050-099, 150-199
	3	UNUSED						050-099, 150-199
	4	UNUSED						050-099, 150-199
	5	UNUSED						050-099, 150-199
	6	UNUSED						050-099, 150-199
	7	UNUSED						050-099, 150-199
	8	UNUSED						050-099, 150-199
	9	UNUSED						050-099, 150-199
	10		W0149	283B	24		23-31-13	050-099, 150-199

HOOKUP LIST
D280T132

91-21-51
Section D02200
Page 26
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02271		SHELF/E02/05		PLUG (continued)				050-099, 150-199
	11	UNUSED						050-099, 150-199
	12		W0149	280R	24		23-31-13	050-099, 150-199
	13	UNUSED						050-099, 150-199
	14		W0149	256R	24		23-31-13	050-099, 150-199
	15		W0149	518	20		23-31-11	050-099, 150-199
	16		W0149	544	24		23-31-13	050-099, 150-199
	17		W0149	524	24		23-31-11	050-099, 150-199
	18		W0149	283R	24		23-31-13	050-099, 150-199
	19		W0149	PA3				050-099, 150-199
	20		W0149	PA3				050-099, 150-199
	21		W0149	514	24		23-31-11	050-099, 150-199
	22		W0149	280B	24		23-31-13	050-099, 150-199
	23	UNUSED						050-099, 150-199
	24		W0149	529	20		23-31-13	050-099, 150-199
	25		W0149	522	20		23-31-11	050-099, 150-199
	26		W0149	256B	24		23-31-13	050-099, 150-199
	27		W0149	282B	24		23-31-13	050-099, 150-199
	28		W0149	255B	24		23-31-13	050-099, 150-199
	29		W0149	545	24		23-31-13	050-099, 150-199
	30		W0149	527	20		23-31-13	050-099, 150-199
	31	UNUSED						050-099, 150-199
	32		W0149	254B	24		23-31-13	050-099, 150-199
	33	UNUSED						050-099, 150-199
	34		W0149	546	24		23-31-13	050-099, 150-199
	35		W0149	279R	24		23-31-13	050-099, 150-199
	36		W0149	278R	24		23-31-13	050-099, 150-199
	37		W0149	526	20		23-31-13	050-099, 150-199
	38		W0149	254R	24		23-31-13	050-099, 150-199
	39		W0149	281B	24		23-31-13	050-099, 150-199
	40		W0149	278B	24		23-31-13	050-099, 150-199
	41		W0149	281R	24		23-31-13	050-099, 150-199
	42		W0149	282R	24		23-31-13	050-099, 150-199
	43		W0149	255R	24		23-31-13	050-099, 150-199
	44		W0149	279B	24		23-31-13	050-099, 150-199
	DED		W0149	522Z			23-31-11	050-099, 150-199
	DED		W0149	526Z			23-31-13	050-099, 150-199
	DED		W0149	527Z			23-31-13	050-099, 150-199
	DED		W0149	529Z			23-31-13	050-099, 150-199
			W0149	511Z			23-31-11	050-099, 150-199
			W0149	561	20		23-31-11	050-099, 150-199

HOOKUP LIST

D280T132

91-21-51

Section D02200

Page 27

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02272		P033-00/ /		RELAY SOCKET-				ALL
	1		W0144	146	24		27-58-11	ALL
	2		W0144	067	24		27-58-11	ALL
	3		W0144	051	24		27-58-11	ALL
	4		W0144	068	24		27-58-11	ALL
	5		W0144	147	24		27-58-11	ALL
	6		W0144	069	24		27-58-11	ALL
	7		W0144	145	24		27-58-11	ALL
	8		W0144	070	24		27-58-11	ALL
	9		W0144	026	24		27-58-11	ALL
	10		W0144	071	24		27-58-11	ALL
	11		W0144	144	24		27-58-11	ALL
	12		W0144	049	24		27-58-11	ALL
	13		W0144	048	24		27-58-11	ALL
	14		W0144	027	24		27-58-11	ALL
D02273		425/245/L 50		PLUG				050-099
D02273		447/245/L050		PLUG				150-199
	1	UNUSED						050-099
	1		W0047	516	24		23-31-11	150-199
	2	UNUSED						050-099
	2		W0047	517	24		23-31-11	150-199
	3	UNUSED						050-099
	3		W0047	289R	24		23-31-11	150-199
	4	UNUSED						050-099
	4		W0047	289B	24		23-31-11	150-199
	5	UNUSED						050-099
	5		W0047	289Z			23-31-11	150-199
	6	UNUSED						050-099
	6		W0047	524	24		23-31-14	150-153, 167-199
	6		W0047	524	24		23-31-13	154-166
	7	UNUSED						050-099
	7		W0047	523	24		23-31-14	150-153, 167-199
	7		W0047	523	24		23-31-13	154-166
	8	UNUSED						050-099
	8		W0047	519	24		23-31-13	150-199
	9	UNUSED						050-099
	9		W0047	520	24		23-31-13	150-199
	10	UNUSED						050-099
	10		W0047	521	24		23-31-13	150-199
	11	UNUSED						050-099

HOOKUP LIST

D280T132

91-21-51

Section D02200

Page 28

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02273		425/245/L 50		PLUG (continued)				050-099
D02273		447/245/L050		PLUG (continued)				150-199
	11		W0047	522	24		23-31-13	150-199
	12	UNUSED						050-099
	12		W0047	518	24		23-31-13	150-199
	13	UNUSED						050-099, 150-199
	14	UNUSED						050-099, 150-199
	15	UNUSED						050-099, 150-199
D02275		E02-2/ /		RELAY SOCKET				ALL
	A1		W0133	597R	24		34-61-16	ALL
	A2		W0133	681R	24		34-61-16	ALL
	A3		W0133	671R	24		34-61-16	ALL
	B1		W0133	597B	24		34-61-16	ALL
	B2		W0133	681B	24		34-61-16	ALL
	B3		W0133	671B	24		34-61-16	ALL
	X1		W0133	795	24		34-61-16	050-099, 155-199, 275-299
	X1		W0133	679	24		34-61-16	150-154
	X2		W0133	680	24		34-61-16	ALL
	REF		W0133	597	20		34-61-16	ALL
	REF		W0133	597Z			34-61-16	ALL
	REF		W0133	671	20		34-61-16	ALL
	REF		W0133	671Z			34-61-16	ALL
	REF		W0133	681	20		34-61-16	ALL
	REF		W0133	681Z			34-61-16	ALL
D02276		0444/270/R073		RCPT-				050-099
D02276		449/270/R073		RCPT-				150-199
D02276		0434/270/R073		RCPT-				275-299
	1		W0722	007	20		35-21-13	ALL
	2		W0722	008	20		35-21-13	ALL
D02277		E02-3/ /		RELAY SOCKET				ALL
	A1		W0145	560R	24		34-61-26	ALL
	A2		W0145	592R	24		34-61-26	ALL
	A3		W0145	561R	24		34-61-26	ALL
	B1		W0145	560B	24		34-61-26	ALL
	B2		W0145	592B	24		34-61-26	ALL
	B3		W0145	561B	24		34-61-26	ALL
	X1		W0145	664	24		34-61-26	ALL
	X2		W0145	665	24		34-61-26	ALL

HOOKUP LIST

D280T132

91-21-51

Section D02200

Page 29

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02277		E02-3/ /		RELAY SOCKET (continued)				ALL
	REF		W0145	560	20		34-61-26	ALL
	REF		W0145	560Z			34-61-26	ALL
	REF		W0145	561	20		34-61-26	ALL
	REF		W0145	561Z			34-61-26	ALL
	REF		W0145	592	20		34-61-26	ALL
	REF		W0145	592Z			34-61-26	ALL
D02278		P037-00/ /		RELAY SOCKET-				ALL
	A1		W1118	038	22		27-81-11	ALL
	A2		W1118	024	22		27-81-11	ALL
	A3	UNUSED						ALL
	B1		W1118	040	22		27-81-11	ALL
	B2		W1118	025	22		27-81-11	ALL
	B3	UNUSED						ALL
	C1		W1118	039	22		27-81-11	ALL
	C2		W1118	026	22		27-81-11	ALL
	C3	UNUSED						ALL
	D1	UNUSED						ALL
	D2	UNUSED						ALL
	D3	UNUSED						ALL
	G1	UNUSED						ALL
	G2		W1118	PA1			99-99-99	ALL
	G3		W1118	PA1			99-99-99	ALL
	X1		W1118	041	22		27-81-11	ALL
	X2		W1118	027	22		27-81-11	ALL
D02279		E02-2/ /		RELAY SOCKET				ALL
	A1		W0133	670R	24		34-61-16	ALL
	A2		W0133	682R	24		34-61-16	ALL
	A3		W0133	232R	24		34-61-16	ALL
	B1		W0133	670B	24		34-61-16	ALL
	B2		W0133	682B	24		34-61-16	ALL
	B3		W0133	232B	24		34-61-16	ALL
	X1		W0133	792	24		34-61-16	050-099, 155-199, 275-299
	X1		W0133	677	24		34-61-16	150-154
	X2		W0133	678	24		34-61-16	ALL
	DED		W0133	232Z			34-61-16	ALL
	DED		W0133	682Z			34-61-16	ALL
	REF		W0133	670	20		34-61-16	ALL
	REF		W0133	670Z			34-61-16	ALL

HOOKUP LIST

D280T132

91-21-51

Section D02200

Page 30

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02280		P037-00/ /		RELAY SOCKET-				ALL
	A1		W1118	034	22		27-81-11	ALL
	A2		W1118	028	22		27-81-11	ALL
	A3		W1118	024	22		27-81-11	ALL
	B1		W1118	035	22		27-81-11	ALL
	B2		W1118	029	22		27-81-11	ALL
	B3		W1118	025	22		27-81-11	ALL
	C1		W1118	036	22		27-81-11	ALL
	C2		W1118	030	22		27-81-11	ALL
	C3		W1118	026	22		27-81-11	ALL
	D1	UNUSED						ALL
	D2	UNUSED						ALL
	D3	UNUSED						ALL
	G1	UNUSED						ALL
	G2		W1118	PB1			99-99-99	ALL
	G3		W1118	PB1			99-99-99	ALL
	X1		W1118	037	22		27-81-11	ALL
	X2		W1118	048	22		27-81-11	ALL
D02281		E02-3/ /		RELAY SOCKET				ALL
	A1		W0145	558R	24		34-61-26	ALL
	A2		W0145	576R	24		34-61-26	ALL
	A3		W0145	557R	24		34-61-26	ALL
	B1		W0145	558B	24		34-61-26	ALL
	B2		W0145	576B	24		34-61-26	ALL
	B3		W0145	557B	24		34-61-26	ALL
	X1		W0145	663	24		34-61-26	ALL
	X2		W0145	652	24		34-61-26	ALL
	DED		W0145	557Z			34-61-26	ALL
	DED		W0145	576Z			34-61-26	ALL
	REF		W0145	558	20		34-61-26	ALL
	REF		W0145	558Z			34-61-26	ALL
D02282		P037-00/ /		RELAY SOCKET-				ALL
	A1		W1118	028	22		27-81-11	ALL
	A2		W1118	031	20		27-81-11	ALL
	A3	UNUSED						ALL
	B1		W1118	029	22		27-81-11	ALL
	B2		W1118	032	20		27-81-11	ALL
	B3	UNUSED						ALL
	C1		W1118	030	22		27-81-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D02200

Page 31

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02282		P037-00/ /		RELAY SOCKET- (continued)				ALL
	C2		W1118	033	20		27-81-11	ALL
	C3	UNUSED						ALL
	D1		W1118	167	24		27-81-11	ALL
	D2		W1118	168	20		27-81-11	ALL
	D3		W1118	514	22		27-81-11	ALL
	G1	UNUSED						ALL
	G2		W1118	PC1			99-99-99	ALL
	G3		W1118	PC1			99-99-99	ALL
	X1		W1118	047	22		27-81-11	ALL
	X2		W1118	046	20		27-81-11	ALL
	DED		W1118	047Z			27-81-11	ALL
D02283		E02-3/ /		RELAY SOCKET				ALL
	A1		W0145	577R	24		34-61-26	ALL
	A2		W0145	587R	24		34-61-26	ALL
	A3		W0145	576R	24		34-61-26	ALL
	B1		W0145	577B	24		34-61-26	ALL
	B2		W0145	587B	24		34-61-26	ALL
	B3		W0145	576B	24		34-61-26	ALL
	X1		W0145	662	24		34-61-26	ALL
	X2		W0145	654	24		34-61-26	ALL
	DED		W0145	587Z			34-61-26	ALL
	REF		W0145	576	20		34-61-26	ALL
	REF		W0145	576Z			34-61-26	ALL
	REF		W0145	577	20		34-61-26	ALL
	REF		W0145	577Z			34-61-26	ALL
D02284		P036-00/ /		RELAY SOCKET-P36				ALL
	A1		W0176	644	24		27-81-31	ALL
	A2		W0176	640	24		27-81-31	ALL
	A3	UNUSED						ALL
	B1	UNUSED						ALL
	B2	UNUSED						ALL
	B3	UNUSED						ALL
	X1		W0176	641	24		27-81-31	ALL
	X2		W0176	643	24		27-81-31	ALL
D02285		E01-4/ /		RELAY SOCKET				ALL
	A1		W1127	270R	24		34-22-38	ALL
	A2		W1127	242R	24		34-22-38	ALL

HOOKUP LIST
D280T132

91-21-51
Section D02200
Page 32
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02285		E01-4/ /		RELAY SOCKET (continued)				ALL
	A3		W1127	272R	24		34-22-38	ALL
	B1		W1127	270B	24		34-22-38	ALL
	B2		W1127	242B	24		34-22-38	ALL
	B3		W1127	272B	24		34-22-38	ALL
	C1		W1127	271R	24		34-22-38	ALL
	C2		W1127	274R	24		34-22-38	ALL
	C3		W1127	273R	24		34-22-38	ALL
	D1		W1127	271B	24		34-22-38	ALL
	D2		W1127	274B	24		34-22-38	ALL
	D3		W1127	273B	24		34-22-38	ALL
	X1		W1127	633	24		34-22-38	ALL
	X2		W1127	624	24		34-22-38	ALL
	DED		W1127	242Z			34-22-38	ALL
	DED		W1127	270Z			34-22-38	ALL
	DED		W1127	271Z			34-22-38	ALL
	DED		W1127	272Z			34-22-38	ALL
	DED		W1127	273Z			34-22-38	ALL
	DED		W1127	274Z			34-22-38	ALL
D02286		R0432/12/TE		PLUG-				ALL
	1		W0448	035	18		27-13-11	ALL
	2		W0448	301R	20		27-13-11	ALL
	3		W0448	301B	20		27-13-11	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9		W0448	036	18		27-13-11	ALL
	10		W0448	301Y	20		27-13-11	ALL
D02287		P009-00/ /		LEFT FMC CTRL DISPL UNIT				ALL
	1	UNUSED						ALL
	2		W0517	208R	24		34-61-16	ALL
	3		W0517	208B	24		34-61-16	ALL
	4	UNUSED						ALL
	5		W0517	209R	24		34-61-16	ALL
	6		W0517	209B	24		34-61-16	ALL
	7	UNUSED						ALL
	8		W0517	207R	24		34-61-16	ALL

HOOKUP LIST

D280T132

91-21-51

Section D02200

Page 33

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02287		P009-00/ /		LEFT FMC CTRL DISPL UNIT (continued)				ALL
	9		W0517	207B	24		34-61-16	ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23		W0517	001	24		34-61-16	ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32		W0517	102	24		34-61-16	ALL
	33		W0517	103	24		34-61-16	ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	REF		W0517	207	20		34-61-16	156, 166
	REF		W0517	207Z			34-61-16	156, 166
	REF		W0517	208	20		34-61-16	156, 166
	REF		W0517	208Z			34-61-16	156, 166
	REF		W0517	209	20		34-61-16	156, 166
	REF		W0517	209Z			34-61-16	156, 166

HOOKUP LIST
D280T132

91-21-51
Section D02200
Page 34
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02289		P009/ /		RIGHT FMC CDU				ALL
	1	UNUSED						ALL
	2		W0519	207R	24		34-61-26	ALL
	3		W0519	207B	24		34-61-26	ALL
	4	UNUSED						ALL
	5		W0519	209R	24		34-61-26	ALL
	6		W0519	209B	24		34-61-26	ALL
	7	UNUSED						ALL
	8		W0519	208R	24		34-61-26	ALL
	9		W0519	208B	24		34-61-26	ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23		W0519	001	24		34-61-26	ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32		W0519	102	24		34-61-26	ALL
	33		W0519	103	24		34-61-26	ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D02200

Page 35

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02289		P009/ /		RIGHT FMC CDU (continued)				ALL
	41	UNUSED						ALL
	REF		W0519	208	20		34-61-26	150-151, 156, 166
	REF		W0519	208Z			34-61-26	150-151, 156, 166
	REF		W0519	207	20		34-61-26	156, 166
	REF		W0519	207Z			34-61-26	156, 166
	REF		W0519	209	20		34-61-26	156, 166
	REF		W0519	209Z			34-61-26	156, 166
D02291		1037/188/R 84		PLUG-R BREAK PRESS SW				ALL
	1		W1206	202	20		31-31-22	ALL
	2		W1206	201R	20		31-31-22	ALL
	3		W1206	201B	20		31-31-22	ALL
	DED		W1206	201Z			31-31-22	ALL
D02292		0955/162/L070		PLUG-				ALL
	1		W0446	215B	20		27-11-11	050-099, 155-199, 276-299
	1		W0446	019	20		27-11-11	150-154, 275
	2	UNUSED						ALL
	3	DK	W0446	021	18		27-11-11	ALL
	4	UNUSED						ALL
	5		W0446	215R	20		27-11-11	050-099, 155-199, 276-299
	5		W0446	020	20		27-11-11	150-154, 275
	DED		W0446	215Z			27-11-11	050-099, 155-199, 276-299
D02293		1027/188/L084		PLUG-LEFT ALT BREAK				ALL
	1		W1214	202	20		31-31-22	ALL
	2		W1214	201R	20		31-31-22	ALL
	3		W1214	201B	20		31-31-22	ALL
	DED		W1214	201Z			31-31-22	ALL
D02294		R0140/14/LE		PLUG-				ALL
	1		W0418	206R	20		27-81-11	ALL
	2		W0418	206B	20		27-81-11	ALL
	3		W0418	303B	20		27-81-11	ALL
	4		W0418	303Y	20		27-81-11	ALL
	5		W0418	303R	20		27-81-11	ALL
	6		W0418	048	18		27-81-11	ALL
	7	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D02200
Page 36
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02296		L0150/14/LE		RCPT-				ALL
	1		W0440	201B	20		27-81-21	ALL
	2		W0440	201R	20		27-81-21	ALL
	3		W0440	301R	20		27-81-21	ALL
	4		W0440	301Y	20		27-81-21	ALL
	5		W0440	301B	20		27-81-21	ALL
	6		W0440	024	18		27-81-21	ALL
	7	UNUSED						ALL
D02298		L0150/14/LE		RCPT-				ALL
	1		W0436	201B	20		27-81-31	ALL
	2		W0436	201R	20		27-81-31	ALL
	3		W0436	301R	20		27-81-31	ALL
	4		W0436	301Y	20		27-81-31	ALL
	5		W0436	301B	20		27-81-31	ALL
	6		W0436	005	18		27-81-31	ALL
	7	UNUSED						ALL



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02300		1065/163/L013		PLUG-				ALL
	1		W0772	001	20		27-13-11	ALL
	2		W0772	002	20		27-13-11	ALL
	3		W0772	003	20		27-13-11	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9		W0772	004	20		27-13-11	ALL
	10		W0772	005	20		27-13-11	ALL
D02301		P008-00/ /		PLUG MULTI-INPUT PRINTER				ALL
	A		W0711	214R	24		23-22-12	ALL
	B		W0711	214B	24		23-22-12	ALL
	C		W0711	211R	24		31-35-11	ALL
	D		W0711	211B	24		31-35-11	ALL
	E		W0711	213R	24		31-36-11	ALL
	F		W0711	213B	24		31-36-11	ALL
	G	UNUSED						ALL
	H	UNUSED						ALL
	J	UNUSED						ALL
	K	UNUSED						ALL
	L		W0711	042	20		31-36-11	050-099, 275-299
	L		W0711	042	22		31-36-11	150-199
	M		W0711	044	20		33-13-18	050-099, 150-155, 162-165, 275-276
	M		W0711	221B	20		33-13-18	156-157, 166-199, 277-299
	N		W0711	041	20		31-36-11	050-099, 275-299
	N		W0711	041	22		31-36-11	150-199
	P		W0711	056	20		23-22-12	ALL
	R		W0711	040	24		31-36-11	ALL
	S	UNUSED						ALL
	T	UNUSED						ALL
	U	UNUSED						ALL
	V	UNUSED						ALL
	W	UNUSED						ALL
	X	UNUSED						ALL
	Y	UNUSED						ALL
	Z	UNUSED						ALL
	CAP	Y	W0711	215B	24		34-61-16	ALL
	CAP	Y	W0711	215R	24		34-61-16	ALL

HOOKUP LIST

D280T132

91-21-51

Section D02300

Page 1

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02301		P008-00/ /		PLUG MULTI-INPUT PRINTER (continued)				ALL
	CAP	Y	W0711	216B	24		34-61-26	ALL
	CAP	Y	W0711	216R	24		34-61-26	ALL
	REF		W0711	211	20		31-35-11	ALL
	REF		W0711	211Z			31-35-11	ALL
	REF		W0711	213	20		31-36-11	ALL
	REF		W0711	213Z			31-36-11	ALL
	REF		W0711	214	20		23-22-12	ALL
	REF		W0711	214Z			23-22-12	ALL
	REF		W0711	215	20		34-61-16	ALL
	REF		W0711	215Z			34-61-16	ALL
	REF		W0711	216	20		34-61-26	ALL
	REF		W0711	216Z			34-61-26	ALL
	A-	UNUSED						ALL
	B-	UNUSED						ALL
	C-	UNUSED						ALL
	D-	UNUSED						ALL
	E-		W0711	045	20		33-13-18	050-099, 150-155, 162-165, 275-276
	E-		W0711	221R	20		33-13-18	156-157, 166-199, 277-299
	F-	UNUSED						ALL
	G-		W0711	043	20		31-36-11	050-099, 275-299
	G-		W0711	043	22		31-36-11	150-199
	H-	UNUSED						ALL
	I-	UNUSED						ALL
	J-	UNUSED						ALL
	K-	UNUSED						ALL
	M-	UNUSED						ALL
	N-	UNUSED						ALL
	P-	UNUSED						ALL
	Q-	UNUSED						ALL
	R-	UNUSED						ALL
	S-	UNUSED						ALL
	T-	UNUSED						ALL
D02304		1065/180/R050		PLUG-				ALL
	1		W0778	003	20		27-81-31	ALL
	2		W0778	001	20		27-51-31	ALL
	3		W0778	004	20		27-81-31	ALL
	4		W0778	002	20		27-51-31	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D02300

Page 2

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02304		1065/180/R050		PLUG- (continued)				ALL
	7		W0778	005	20		27-81-31	ALL
D02306		1065/176/R020		PLUG-				ALL
	1		W0778	008	20		27-51-51	ALL
	2		W0778	007	20		27-51-51	050-099
	2		W0778	006	20		27-51-51	150-199, 275-299
	3		W0778	006	20		27-51-51	050-099
	3		W0778	007	20		27-51-51	150-199, 275-299
	4		W0778	009	20		27-51-51	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
D02310		1065/144/R030		PLUG-				ALL
	1		W0774	001	20		27-51-11	ALL
	2		W0774	002	20		27-51-11	ALL
	3		W0774	003	18		27-51-11	ALL
	4	UNUSED						ALL
	5		W0774	004	18		27-51-11	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8		W0774	005	20		27-51-11	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
D02312		1065/170/R028		PLUG-				ALL
	1		W0776	001	14		27-51-11	ALL
	2		W0776	002	14		27-51-11	ALL
	3		W0776	003	14		27-51-11	ALL
	4	UNUSED						ALL
	5		W0776	004	16		27-51-11	ALL
	6		W0776	005	18		27-51-11	ALL
	7		W0776	006	18		27-51-11	ALL
	8		W0776	007	16		27-51-11	ALL
D02314		0505/124/R048		RCPT-				ALL
	1		W0702	101	20		25-53-17	ALL
	2		W0702	102	20		25-53-17	ALL
	3		W0702	103	20		25-53-17	ALL
	4	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D02300

Page 3

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02314		0505/124/R048		RCPT- (continued)				ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12		W0702	104	20		25-53-17	ALL
	13	UNUSED						ALL
	14		W0702	105	20		25-53-17	ALL
	15	UNUSED						ALL
D02316		0527/120/R048		RCPT-				ALL
	1		W0702	111	20		25-53-17	ALL
	2		W0702	112	20		25-53-17	ALL
	3		W0702	113	20		25-53-17	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12		W0702	114	20		25-53-17	ALL
	13	UNUSED						ALL
	14		W0702	115	20		25-53-17	ALL
	15	UNUSED						ALL
D02317		401/310/R 25		PLUG				275-299
	1		W1801	001	20		23-32-31	275-299
	2		W1801	002	20		23-32-31	275-299
	3	UNUSED						275-299
	4	UNUSED						275-299
	5	UNUSED						275-299
	6		W1801	004	24		23-32-31	275-299
	7	UNUSED						275-299
	8	UNUSED						275-299
	9		W1801	005	22		23-32-31	275-299
	10		W1801	003	22		23-32-31	275-299

HOOKUP LIST
D280T132

91-21-51
Section D02300
Page 4
Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02317		401/310/R 25		PLUG (continued)				275-299
	= A1		W1801	01CX			23-32-31	275-299
	= C1		W1801	01CO			23-32-31	275-299
D02318		1277/122/L032		RCPT-				ALL
	1		W0708	001	20		25-53-25	ALL
	2		W0708	002	20		25-53-25	ALL
	3	UNUSED						ALL
	4		W0708	003	20		25-53-25	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12		W0708	004	20		25-53-25	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
D02319		401/310/R 25		PLUG				275-299
	1		W1803	001	20		23-32-31	275-299
	2		W1803	002	20		23-32-31	275-299
	3	UNUSED						275-299
	4	UNUSED						275-299
	5	UNUSED						275-299
	6		W1803	004	24		23-32-31	275-299
	7	UNUSED						275-299
	8	UNUSED						275-299
	9		W1803	005	22		23-32-31	275-299
	10		W1803	003	22		23-32-31	275-299
	= A1		W1803	01CX			23-32-31	275-299
	= C1		W1803	01CO			23-32-31	275-299
D02320		1277/122/L040		RCPT-				ALL
	1		W0708	011	20		25-53-25	ALL
	2		W0708	012	20		25-53-25	ALL
	3	UNUSED						ALL
	4		W0708	013	20		25-53-25	ALL
	5	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D02300
Page 5
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02320		1277/122/L040		RCPT- (continued)				ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12		W0708	014	20		25-53-25	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
D02322		1277/122/R032		RCPT-				ALL
	1		W0708	021	20		25-53-25	ALL
	2		W0708	022	20		25-53-25	ALL
	3	UNUSED						ALL
	4		W0708	023	20		25-53-25	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12		W0708	024	20		25-53-25	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
D02323		401/310/R 25		RECP-				275-278
D02323		401/310/R 25		RECP				280-299
	1		W1417	210BN	24		23-32-31	275-299
	2		W1417	210B	24		23-32-31	275-299
	3		W1417	210Z			23-32-31	275-299
	4		W1417	211BN	24		23-32-31	275-299
	5		W1417	211B	24		23-32-31	275-299
	6		W1417	211Z			23-32-31	275-299
	7		W1417	209R	24		23-32-31	275-299
	8		W1417	209B	24		23-32-31	275-299
	9		W1417	209Z			23-32-31	275-299
	10	UNUSED						275-299

HOOKUP LIST

D280T132

91-21-51

Section D02300

Page 6

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02323		401/310/R 25		RECP- (continued)				275-278
D02323		401/310/R 25		RECP (continued)				280-299
	11		W1417	140	20		23-32-31	275-299
	12		W1417	126	20		23-32-31	275-299
	13		W1417	127	20		23-32-31	275-299
	14		W1417	212BN	24		23-32-31	275-299
	15		W1417	212B	24		23-32-31	275-299
	16		W1417	212Z			23-32-31	275-299
	17	UNUSED						275-299
	18	UNUSED						275-299
	19	UNUSED						275-299
	20	UNUSED						275-299
	21	UNUSED						275-299
	22	UNUSED						275-299
	23	UNUSED						275-299
	24	UNUSED						275-299
	25	UNUSED						275-299
D02324		1339/122/L032		RCPT-				ALL
	1		W0708	031	20		25-53-25	ALL
	2		W0708	032	20		25-53-25	ALL
	3	UNUSED						ALL
	4		W0708	033	20		25-53-25	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12		W0708	034	20		25-53-25	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
D02325		410/295/L 38		PLUG				275-299
	1		W1801	001	20		23-32-31	275-299
	2		W1801	003	22		23-32-31	275-299
	3		W1801	006	22		23-32-31	275-299
	4		W1801	002	20		23-32-31	275-299
	5		W1801	007	22		23-32-31	275-299

HOOKUP LIST

D280T132

91-21-51
 Section D02300
 Page 7
 Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02325		410/295/L 38		PLUG (continued)				275-299
	6		W1801	008	22		23-32-31	275-299
	7		W1801	009	22		23-32-31	275-299
	8		W1801	004	24		23-32-31	275-299
	9	UNUSED						275-299
	10	UNUSED						275-299
	11	UNUSED						275-299
	12	UNUSED						275-299
D02326		1339/122/R005		RCPT-				ALL
	1		W0708	041	20		25-53-25	ALL
	2		W0708	042	20		25-53-25	ALL
	3	UNUSED						ALL
	4		W0708	043	20		25-53-25	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12		W0708	044	20		25-53-25	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
D02327		382/295/R 38		PLUG				275-276
D02327		410/295/R 38		PLUG				277-299
	1		W1803	001	20		23-32-31	275-299
	2		W1803	003	22		23-32-31	275-299
	3		W1803	006	22		23-32-31	275-299
	4		W1803	002	20		23-32-31	275-299
	5		W1803	007	22		23-32-31	275-299
	6		W1803	008	22		23-32-31	275-299
	7		W1803	009	22		23-32-31	275-299
	8		W1803	004	24		23-32-31	275-299
	9	UNUSED						275-299
	10	UNUSED						275-299
	11	UNUSED						275-299
	12	UNUSED						275-299

HOOKUP LIST

D280T132

91-21-51

Section D02300

Page 8

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02328		1339/122/R032		RCPT-				ALL
	1		W0708	051	20		25-53-25	ALL
	2		W0708	052	20		25-53-25	ALL
	3	UNUSED						ALL
	4		W0708	053	20		25-53-25	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12		W0708	054	20		25-53-25	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
D02329		401/310/R 25		PLUG				275-299
	1		W1805	001	20		23-32-32	275-299
	2		W1805	002	20		23-32-32	275-299
	3	UNUSED						275-299
	4	UNUSED						275-299
	5	UNUSED						275-299
	6		W1805	004	24		23-32-32	275-299
	7	UNUSED						275-299
	8	UNUSED						275-299
	9		W1805	005	22		23-32-32	275-299
	10		W1805	003	22		23-32-32	275-299
	= A1		W1805	01CX			23-32-32	275-299
	= C1		W1805	01CO			23-32-32	275-299
D02330		1290/122/L012		RCPT-				ALL
	1		W0708	061	20		25-53-26	ALL
	2		W0708	082	20		25-53-26	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W0708	083	20		25-53-26	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D02300
Page 9
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02330		1290/122/L012		RCPT- (continued)				ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12		W0708	064	20		25-53-26	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
D02331		401/310/R 25		PLUG				275-299
	1		W1807	001	20		23-32-32	275-299
	2		W1807	002	20		23-32-32	275-299
	3	UNUSED						275-299
	4	UNUSED						275-299
	5	UNUSED						275-299
	6		W1807	004	24		23-32-32	275-299
	7	UNUSED						275-299
	8	UNUSED						275-299
	9		W1807	005	22		23-32-32	275-299
	10		W1807	003	22		23-32-32	275-299
	= A1		W1807	01CX			23-32-32	275-299
	= C1		W1807	01CO			23-32-32	275-299
D02332		1324/122/L040		RCPT-				ALL
	1		W0708	071	20		25-53-26	ALL
	2		W0708	072	20		25-53-26	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W0708	073	20		25-53-26	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12		W0708	074	20		25-53-26	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D02300

Page 10

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02334		1290/122/R004		RCPT-				ALL
	1		W0708	081	20		25-53-26	ALL
	2		W0708	062	20		25-53-26	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W0708	063	20		25-53-26	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12		W0708	084	20		25-53-26	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
D02336		1324/122/R014		RCPT-				ALL
	1		W0708	091	20		25-53-26	ALL
	2		W0708	092	20		25-53-26	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W0708	093	20		25-53-26	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12		W0708	094	20		25-53-26	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
D02337		0650/295/L 38		PLUG				275-278
D02337		541/253/L 65		PLUG				280-299
	1		W1805	001	20		23-32-32	275-299
	2		W1805	003	22		23-32-32	275-299
	3		W1805	006	22		23-32-32	275-299
	4		W1805	002	20		23-32-32	275-299

HOOKUP LIST
D280T132

91-21-51
Section D02300
Page 11
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02337		0650/295/L 38		PLUG (continued)				275-278
D02337		541/253/L 65		PLUG (continued)				280-299
	5		W1805	007	22		23-32-32	275-299
	6		W1805	008	22		23-32-32	275-299
	7		W1805	009	22		23-32-32	275-299
	8		W1805	004	24		23-32-32	275-299
	9	UNUSED						275-299
	10	UNUSED						275-299
	11	UNUSED						275-278
	12	UNUSED						275-278
	= A1		W1805	01CX			23-32-32	280-299
	= C1		W1805	01CO			23-32-32	280-299
D02338		1292/122/R048		RCPT-				050-099, 150-199
	1		W0708	101	20		25-53-27	050-099, 150-199
	2		W0708	102	20		25-53-27	050-099, 150-199
	3		W0708	103	20		25-53-27	050-099, 150-199
	4	UNUSED						050-099, 150-199
	5	UNUSED						050-099, 150-199
	6	UNUSED						050-099, 150-199
	7	UNUSED						050-099, 150-199
	8	UNUSED						050-099, 150-199
	9	UNUSED						050-099, 150-199
	10	UNUSED						050-099, 150-199
	11	UNUSED						050-099, 150-199
	12		W0708	104	20		25-53-27	050-099, 150-199
	13	UNUSED						050-099, 150-199
	14		W0708	105	20		25-53-27	050-099, 150-199
	15	UNUSED						050-099, 150-199
D02339		401/310/R 25		PLUG				275-299
	1		W1809	001	20		23-32-33	275-299
	2		W1809	002	20		23-32-33	275-299
	3	UNUSED						275-299
	4	UNUSED						275-299
	5	UNUSED						275-299
	6		W1809	004	24		23-32-33	275-299
	7	UNUSED						275-299
	8	UNUSED						275-299
	9		W1809	005	22		23-32-33	275-299
	10		W1809	003	22		23-32-33	275-299

HOOKUP LIST
D280T132

91-21-51
Section D02300
Page 12
Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02339		401/310/R 25		PLUG (continued)				275-299
	= A1		W1809	01CX			23-32-33	275-299
	= C1		W1809	01CO			23-32-33	275-299
D02340		1324/122/R048		RCPT-				050-099, 150-199
	1		W0708	111	20		25-53-27	050-099, 150-199
	2		W0708	112	20		25-53-27	050-099, 150-199
	3		W0708	113	20		25-53-27	050-099, 150-199
	4	UNUSED						050-099, 150-199
	5	UNUSED						050-099, 150-199
	6	UNUSED						050-099, 150-199
	7	UNUSED						050-099, 150-199
	8	UNUSED						050-099, 150-199
	9	UNUSED						050-099, 150-199
	10	UNUSED						050-099, 150-199
	11	UNUSED						050-099, 150-199
	12		W0708	114	20		25-53-27	050-099, 150-199
	13	UNUSED						050-099, 150-199
	14		W0708	115	20		25-53-27	050-099, 150-199
	15	UNUSED						050-099, 150-199
D02341		401/310/R 25		PLUG				275-299
	1		W1811	001	20		23-32-33	275-299
	2		W1811	002	20		23-32-33	275-299
	3	UNUSED						275-299
	4	UNUSED						275-299
	5	UNUSED						275-299
	6		W1811	004	24		23-32-33	275-299
	7	UNUSED						275-299
	8	UNUSED						275-299
	9		W1811	005	22		23-32-33	275-299
	10		W1811	003	22		23-32-33	275-299
	= A1		W1811	01CX			23-32-33	275-299
	= C1		W1811	01CO			23-32-33	275-299
D02347		401/310/R 25		PLUG				275-299
	1		W1813	001	20		23-32-34	275-299
	2		W1813	002	20		23-32-34	275-299
	3	UNUSED						275-299
	4	UNUSED						275-299
	5	UNUSED						275-299

HOOKUP LIST
D280T132

91-21-51
Section D02300
Page 13
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02347		401/310/R 25		PLUG (continued)				275-299
	6		W1813	004	24		23-32-34	275-299
	7	UNUSED						275-299
	8	UNUSED						275-299
	9		W1813	005	22		23-32-34	275-299
	10		W1813	003	22		23-32-34	275-299
	=A1		W1813	01CX			23-32-34	275-299
	=C1		W1813	01CO			23-32-34	275-299
D02349		401/310/R 25		PLUG				275-299
	1		W1815	001	20		23-32-34	275-299
	2		W1815	002	20		23-32-34	275-299
	3	UNUSED						275-299
	4	UNUSED						275-299
	5	UNUSED						275-299
	6		W1815	004	24		23-32-34	275-299
	7	UNUSED						275-299
	8	UNUSED						275-299
	9		W1815	005	22		23-32-34	275-299
	10		W1815	003	22		23-32-34	275-299
	=A1		W1815	01CX			23-32-34	275-299
	=C1		W1815	01CO			23-32-34	275-299
D02351		401/310/R 25		PLUG				275-299
	1		W1417	219BN	24		23-32-41	275-299
	2		W1417	219B	24		23-32-41	275-299
	3		W1417	219Z			23-32-41	275-299
	4		W1417	220BN	24		23-32-41	275-299
	5		W1417	220B	24		23-32-41	275-299
	6		W1417	220Z			23-32-41	275-299
	7		W1417	218R	24		23-32-41	275-299
	8		W1417	218B	24		23-32-41	275-299
	9		W1417	218Z			23-32-41	275-299
	10	UNUSED						275-299
	11	UNUSED						275-299
	12	UNUSED						275-299
	13	UNUSED						275-299
	14		W1417	221BN	24		23-32-41	275-299
	15		W1417	221B	24		23-32-41	275-299
	16		W1417	221Z			23-32-41	275-299
	17	UNUSED						275-299

HOOKUP LIST

D280T132

91-21-51

Section D02300

Page 14

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02351		401/310/R 25		PLUG (continued)				275-299
	18	UNUSED						275-299
	19	UNUSED						275-299
	20	UNUSED						275-299
	21	UNUSED						275-299
	22	UNUSED						275-299
	23	UNUSED						275-299
	24	UNUSED						275-299
	25	UNUSED						275-299
D02352		1160/129/R080		PLUG-				ALL
	A		W1208	006	08		29-21-31	ALL
	B		W1208	005	08		29-21-31	ALL
	C		W1208	008	08		29-21-31	ALL
	D		W1208	009	08		29-21-31	ALL
D02354		1175/129/R075		PLUG-				ALL
	1		W0658	201R	20		29-21-31	ALL
	2		W0658	201B	20		29-21-31	ALL
	3		W0658	201Z			29-21-31	ALL
	4		W0658	029	18		29-21-31	ALL
	5		W0658	011	18		29-21-31	ALL
	6		W0658	028	18		29-21-31	ALL
	7		W0658	032	18		29-21-31	ALL
D02355		731/310/R 25		PLUG				275-299
	1		W1817	001	20		23-32-41	275-299
	2		W1817	002	20		23-32-41	275-299
	3	UNUSED						275-299
	4	UNUSED						275-299
	5	UNUSED						275-299
	6		W1817	004	24		23-32-41	275-299
	7	UNUSED						275-299
	8	UNUSED						275-299
	9		W1817	005	22		23-32-41	275-299
	10		W1817	003	22		23-32-41	275-299
	= A1		W1817	01CX			23-32-41	275-299
	= C1		W1817	01CO			23-32-41	275-299
D02356		1060/140/R005		PLUG-				ALL
	1		W0680	201R	18		29-21-31	ALL

HOOKUP LIST
D280T132

91-21-51
Section D02300
Page 15
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02356		1060/140/R005		PLUG- (continued)				ALL
	2		W0680	201B	18		29-21-31	ALL
	3		W0680	010	18		29-21-31	ALL
	DED		W0680	201Z			29-21-31	ALL
D02357		731/310/R 25		PLUG				275-278
D02357		728/315/R015		PLUG				280-299
	1		W1819	001	20		23-32-41	275-299
	2		W1819	002	20		23-32-41	275-299
	3	UNUSED						275-299
	4	UNUSED						275-299
	5	UNUSED						275-299
	6		W1819	004	24		23-32-41	275-299
	7	UNUSED						275-299
	8	UNUSED						275-299
	9		W1819	005	22		23-32-41	275-299
	10		W1819	003	22		23-32-41	275-299
	= A1		W1819	01CX			23-32-41	275-299
	= C1		W1819	01CO			23-32-41	275-299
D02358		1055/140/R045		PLUG-				ALL
	1		W0680	006	18		29-21-31	ALL
	2		W0680	007	18		29-21-31	ALL
	3	UNUSED						ALL
D02361		731/310/R 25		RECP				275-299
	1		W1417	219BN	24		23-32-41	275-299
	2		W1417	219B	24		23-32-41	275-299
	3		W1417	219Z			23-32-41	275-299
	4		W1417	220BN	24		23-32-41	275-299
	5		W1417	220B	24		23-32-41	275-299
	6		W1417	220Z			23-32-41	275-299
	7		W1417	218R	24		23-32-41	275-299
	8		W1417	218B	24		23-32-41	275-299
	9		W1417	218Z			23-32-41	275-299
	10	UNUSED						275-299
	11		W1417	141	20		23-32-41	275-299
	12		W1417	132	20		23-32-41	275-299
	13		W1417	133	20		23-32-41	275-299
	14		W1417	221BN	24		23-32-41	275-299
	15		W1417	221B	24		23-32-41	275-299

HOOKUP LIST

D280T132

91-21-51

Section D02300

Page 16

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02361		731/310/R 25		RECP (continued)				275-299
	16		W1417	221Z			23-32-41	275-299
	17	UNUSED						275-299
	18	UNUSED						275-299
	19	UNUSED						275-299
	20	UNUSED						275-299
	21	UNUSED						275-299
	22	UNUSED						275-299
	23	UNUSED						275-299
	24	UNUSED						275-299
	25	UNUSED						275-299
D02363		654+75/295/L 38		PLUG				275-278
D02363		654+103/289/L033		PLUG				280-299
	1		W1817	001	20		23-32-41	275-299
	2		W1817	003	22		23-32-41	275-299
	3		W1817	006	22		23-32-41	275-299
	4		W1817	002	20		23-32-41	275-299
	5		W1817	007	22		23-32-41	275-299
	6		W1817	008	22		23-32-41	275-299
	7		W1817	009	22		23-32-41	275-299
	8		W1817	004	24		23-32-41	275-299
	9	UNUSED						275-299
	10	UNUSED						275-299
	11	UNUSED						275-299
	12	UNUSED						275-299
D02365		654+75/295/R 38		PLUG				275-278
D02365		654+103/290/R044		PLUG				280-299
	1		W1819	001	20		23-32-41	275-299
	2		W1819	003	22		23-32-41	275-299
	3		W1819	006	22		23-32-41	275-299
	4		W1819	002	20		23-32-41	275-299
	5		W1819	007	22		23-32-41	275-299
	6		W1819	008	22		23-32-41	275-299
	7		W1819	009	22		23-32-41	275-299
	8		W1819	004	24		23-32-41	275-299
	9	UNUSED						275-299
	10	UNUSED						275-299
	11	UNUSED						275-299
	12	UNUSED						275-299

HOOKUP LIST

D280T132

91-21-51

Section D02300

Page 17

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02366		0327/180/R045		PLUG-				ALL
	1		W0506	037	22		21-33-11	ALL
	2		W0506	038	20		21-33-11	ALL
	3	UNUSED						ALL
	4		W0506	039	20		21-33-11	ALL
	5	UNUSED						ALL
	DED		W0506	037Z			21-33-11	ALL
D02367		731/310/R 25		PLUG				275-278
D02367		735/315/R 15		PLUG				280-299
	1		W1821	001	20		23-32-42	275-299
	2		W1821	002	20		23-32-42	275-299
	3	UNUSED						275-299
	4	UNUSED						275-299
	5	UNUSED						275-299
	6		W1821	004	24		23-32-42	275-299
	7	UNUSED						275-299
	8	UNUSED						275-299
	9		W1821	005	22		23-32-42	275-299
	10		W1821	003	22		23-32-42	275-299
	= A1		W1821	01CX			23-32-42	275-299
	= C1		W1821	01CO			23-32-42	275-299
D02369		731/310/R 25		PLUG				275-278
D02369		735/314/R020		PLUG				280-299
	1		W1823	001	20		23-32-42	275-299
	2		W1823	002	20		23-32-42	275-299
	3	UNUSED						275-299
	4	UNUSED						275-299
	5	UNUSED						275-299
	6		W1823	004	24		23-32-42	275-299
	7	UNUSED						275-299
	8	UNUSED						275-299
	9		W1823	005	22		23-32-42	275-299
	10		W1823	003	22		23-32-42	275-299
	= A1		W1823	01CX			23-32-42	275-299
	= C1		W1823	01CO			23-32-42	275-299
D02372A		//		PLUG-PART OF D02372				ALL
	A01		W1084	029	24		32-42-11	ALL
	A02	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D02300

Page 18

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02372A		//		PLUG-PART OF D02372 (continued)				ALL
	A03		W1084	030	24		32-42-11	ALL
	A04	UNUSED						ALL
	A05		W1084	209R	22		32-42-11	ALL
	A06		W1084	209B	22		32-42-11	ALL
	A07		W1084	041	24		32-42-12	ALL
	A08		W1084	040	24		32-42-12	ALL
	A09	UNUSED						ALL
	A10		W1084	063	24		32-42-12	ALL
	A11	UNUSED						ALL
	A12		W1084	210R	22		32-42-11	ALL
	A13		W1084	210B	22		32-42-11	ALL
	A14	UNUSED						ALL
	A15		W1084	012	24		32-42-11	ALL
	B01		W1084	010	24		32-42-11	ALL
	B02	UNUSED						ALL
	B03		W1084	011	24		32-42-11	ALL
	B04	UNUSED						ALL
	B05		W1084	203R	22		32-42-11	ALL
	B06		W1084	203B	22		32-42-11	ALL
	B07	UNUSED						ALL
	B08		W1084	065	24		32-42-12	ALL
	B09	UNUSED						ALL
	B10		W1084	064	24		32-42-12	ALL
	B11	UNUSED						ALL
	B12		W1084	204R	22		32-42-11	ALL
	B13		W1084	204B	22		32-42-11	ALL
	B14	UNUSED						ALL
	B15		W1084	031	24		32-42-11	ALL
	C01		W1084	101	24		32-42-11	ALL
	C02		W1084	016	22		32-42-11	ALL
	C03		W1084	100	24		32-42-11	ALL
	C04		W1084	017	22		32-42-11	ALL
	C05		W1084	084	24		32-42-11	ALL
	C06		W1084	015	22		32-42-11	ALL
	C07		W1084	066	24		32-42-12	ALL
	C08		W1084	039	24		32-42-12	ALL
	C09		W1084	211R	24		32-42-12	ALL
	C10	UNUSED						ALL
	C11		W1084	025	24		32-42-11	ALL
	C12	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D02300

Page 19

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02372A		//		PLUG-PART OF D02372 (continued)				ALL
	C13		W1084	019	22		32-42-11	ALL
	C14	UNUSED						ALL
	C15		W1084	076	22		32-42-11	ALL
	D01		W1084	005	24		32-42-11	ALL
	D02	UNUSED						ALL
	D03		W1084	028	24		32-42-11	ALL
	D04	UNUSED						ALL
	D05		W1084	024	24		32-42-11	ALL
	D06		W1084	022	24		32-42-11	ALL
	D07		W1084	055	24		32-42-12	ALL
	D08	UNUSED						ALL
	D09		W1084	211B	24		32-42-12	ALL
	D10	UNUSED						ALL
	D11		W1084	212R	24		32-42-11	ALL
	D12		W1084	212B	24		32-42-11	ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15		W1084	074	22		32-44-11	ALL
			W1084	021	20		32-42-11	ALL
			W1084	038	20		32-42-11	ALL
			W1084	073	20		32-42-12	ALL
			W1084	086	20		32-42-11	ALL
			W1084	203Z			32-42-11	ALL
			W1084	204Z			32-42-11	ALL
			W1084	209Z			32-42-11	ALL
			W1084	210Z			32-42-11	ALL
			W1084	211Z			32-42-12	ALL
			W1084	212Z			32-42-11	ALL
D02372B		//		PLUG-PART OF D02372				ALL
	A01		W1084	007	24		32-42-11	ALL
	A02		W1084	043	24		32-42-12	ALL
	A03		W1084	008	24		32-42-11	ALL
	A04		W1084	044	24		32-42-12	ALL
	A05		W1084	201R	22		32-42-11	ALL
	A06		W1084	201B	22		32-42-11	ALL
	A07		W1084	042	24		32-42-12	ALL
	A08		W1084	061	24		32-42-12	ALL
	A09		W1084	070	24		32-42-12	ALL
	A10		W1084	071	24		32-42-12	ALL

HOOKUP LIST

D280T132

91-21-51

Section D02300

Page 20

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02372B		//		PLUG-PART OF D02372 (continued)				ALL
	A11		W1084	081	24		32-42-11	ALL
	A12		W1084	202R	22		32-42-11	ALL
	A13		W1084	202B	22		32-42-11	ALL
	A14	UNUSED						ALL
	A15		W1084	034	24		32-42-11	ALL
	B01		W1084	032	24		32-42-11	ALL
	B02	UNUSED						ALL
	B03		W1084	033	24		32-42-11	ALL
	B04	UNUSED						ALL
	B05		W1084	207R	22		32-42-11	ALL
	B06		W1084	207B	22		32-42-11	ALL
	B07	UNUSED						ALL
	B08		W1084	068	24		32-42-12	ALL
	B09		W1084	082	24		32-42-12	ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12		W1084	208R	22		32-42-11	ALL
	B13		W1084	208B	22		32-42-11	ALL
	B14	UNUSED						ALL
	B15		W1084	009	24		32-42-11	ALL
	C01		W1084	099	24		32-42-11	ALL
	C02		W1084	014	22		32-42-11	ALL
	C03		W1084	077	24		32-42-12	ALL
	C04	UNUSED						ALL
	C05		W1084	026	24		32-42-11	ALL
	C06	UNUSED						ALL
	C07		W1084	057	24		32-42-12	ALL
	C08		W1084	060	24		32-42-12	ALL
	C09		W1084	058	24		32-42-12	ALL
	C10		W1084	087	24		32-42-12	ALL
	C11		W1084	045	24		32-42-12	ALL
	C12		W1084	059	24		32-42-12	ALL
	C13		W1084	013	22		32-42-11	ALL
	C14		W1084	047	24		32-42-12	ALL
	C15		W1084	018	22		32-42-12	ALL
	D01		W1084	006	24		32-42-11	ALL
	D02	UNUSED						ALL
	D03	UNUSED						ALL
	D04		W1084	062	24		32-42-12	ALL
	D05		W1084	027	24		32-42-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D02300

Page 21

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02372B		//		PLUG-PART OF D02372 (continued)				ALL
	D06		W1084	046	24		32-42-12	ALL
	D07		W1084	048	24		32-42-12	ALL
	D08		W1084	049	24		32-42-12	ALL
	D09		W1084	050	24		32-42-12	ALL
	D10		W1084	051	24		32-42-12	ALL
	D11		W1084	052	24		32-42-12	ALL
	D12		W1084	053	24		32-42-12	ALL
	D13		W1084	213R	24		32-42-11	ALL
	D14		W1084	213B	24		32-42-11	ALL
	D15		W1084	083	22		32-41-11	ALL
	DED		W1084	006Z			32-42-11	ALL
			W1084	020	20		32-42-11	ALL
			W1084	037	20		32-42-11	ALL
			W1084	085	20		32-42-11	ALL
			W1084	201Z			32-42-11	ALL
			W1084	202Z			32-42-11	ALL
			W1084	207Z			32-42-11	ALL
			W1084	208Z			32-42-11	ALL
			W1084	213Z			32-42-11	ALL
D02375		858/260/L 70		PLUG				275-278
D02375		654+74/253/L 64		PLUG				280-299
	1		W1821	001	20		23-32-42	275-299
	2		W1821	003	22		23-32-42	275-299
	3		W1821	006	22		23-32-42	275-299
	4		W1821	002	20		23-32-42	275-299
	5		W1821	007	22		23-32-42	275-299
	6		W1821	008	22		23-32-42	275-299
	7		W1821	009	22		23-32-42	275-299
	8		W1821	004	24		23-32-42	275-299
	9	UNUSED						275-299
	10	UNUSED						275-299
	= A1		W1821	01CX			23-32-42	275-299
	= C1		W1821	01CO			23-32-42	275-299
D02377		731/310/R 25		PLUG				275-278
D02377		728/309/R020		PLUG				280-299
	1		W1825	001	20		23-32-43	275-299
	2		W1825	002	20		23-32-43	275-299
	3	UNUSED						275-299

HOOKUP LIST

D280T132

91-21-51

Section D02300

Page 22

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02377		731/310/R 25		PLUG (continued)				275-278
D02377		728/309/R020		PLUG (continued)				280-299
	4	UNUSED						275-299
	5	UNUSED						275-299
	6		W1825	004	24		23-32-43	275-299
	7	UNUSED						275-299
	8	UNUSED						275-299
	9		W1825	005	22		23-32-43	275-299
	10		W1825	003	22		23-32-43	275-299
	= A1		W1825	01CX			23-32-43	275-299
	= C1		W1825	01CO			23-32-43	275-299
D02378A		//		PLUG-PART OF D02378				ALL
	A01		W0084	087	24		36-23-21	ALL
	A02		W0084	315B	24		36-23-21	ALL
	A03		W0084	078	24		36-23-21	ALL
	A04		W0084	053	24		36-23-11	ALL
	A05		W0084	086	24		36-23-21	ALL
	A06		W0084	057	24		36-23-11	ALL
	A07		W0084	049	24		36-23-11	ALL
	A08		W0084	050	24		36-23-11	ALL
	A09		W0084	079	24		36-23-21	ALL
	A10		W0084	054	24		36-23-11	ALL
	A11		W0084	075	24		36-23-21	ALL
	A12		W0084	074	24		36-23-21	ALL
	A13		W0084	314Y	24		36-23-11	ALL
	A14		W0084	314B	24		36-23-11	ALL
	A15		W0084	314R	24		36-23-11	ALL
	B01		W0084	150	24		36-23-11	ALL
	B02		W0084	163	22		36-23-11	ALL
	B03		W0084	157	24		36-23-11	ALL
	B04		W0084	159	22		36-23-11	ALL
	B05		W0084	152	24		36-23-21	ALL
	B06	UNUSED						ALL
	B07		W0084	170	24		36-23-21	ALL
	B08		W0084	169	24		36-23-21	ALL
	B09		W0084	160	22		36-23-11	ALL
	B10		W0084	161	22		36-23-11	ALL
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13		W0084	167	22		36-23-21	ALL

HOOKUP LIST

D280T132

91-21-51

Section D02300

Page 23

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02378A		//		PLUG-PART OF D02378 (continued)				ALL
	B14		W0084	168	22		36-23-21	ALL
	B15	UNUSED						ALL
	C01	UNUSED						ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05	UNUSED						ALL
	C06	UNUSED						ALL
	C07	UNUSED						ALL
	C08	UNUSED						ALL
	C09	UNUSED						ALL
	C10	UNUSED						ALL
	C11	UNUSED						ALL
	C12	UNUSED						ALL
	C13	UNUSED						ALL
	C14	UNUSED						ALL
	C15	UNUSED						ALL
	D01		W0084	058	24		36-23-11	ALL
	D02		W0084	315Y	24		36-23-21	ALL
	D03		W0084	315R	24		36-23-21	ALL
	D04	UNUSED						ALL
	D05		W0084	056	24		36-23-11	ALL
	D06		W0084	084	24		36-23-21	ALL
	D07		W0084	081	24		36-23-21	ALL
	D08		W0084	080	24		36-23-21	ALL
	D09		W0084	085	24		36-23-21	ALL
	D10		W0084	076	24		36-23-21	ALL
	D11		W0084	077	24		36-23-21	ALL
	D12		W0084	083	24		36-23-21	ALL
	D13		W0084	082	24		36-23-21	ALL
	D14	UNUSED						ALL
	D15		W0084	055	24		36-23-11	ALL
			W0084	070	20		36-23-11	ALL
			W0084	098	20		36-23-21	ALL
			W0084	314Z			36-23-11	ALL
			W0084	315Z			36-23-21	ALL
D02378B		//		PLUG-PART OF D02378				ALL
	A01		W0084	095	24		36-23-21	ALL
	A02		W0084	073	22		36-23-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D02300

Page 24

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02378B		//		PLUG-PART OF D02378 (continued)				ALL
	A03		W0084	096	24		36-23-21	ALL
	A04		W0084	064	22		36-23-11	ALL
	A05		W0084	094	24		36-23-21	ALL
	A06		W0084	059	24		36-23-11	ALL
	A07		W0084	068	24		36-23-11	ALL
	A08		W0084	091	22		36-23-21	ALL
	A09	UNUSED						ALL
	A10		W0084	067	24		36-23-11	ALL
	A11		W0084	093	24		36-23-21	ALL
	A12	UNUSED						ALL
	A13	UNUSED						ALL
	A14	UNUSED						ALL
	A15	UNUSED						ALL
	B01	UNUSED						ALL
	B02		W0084	156	24		36-23-11	ALL
	B03		W0084	155	24		36-23-11	ALL
	B04		W0084	172	24		36-23-21	ALL
	B05		W0084	171	24		36-23-21	ALL
	B06		W0084	269R	24		36-23-11	ALL
	B07		W0084	269B	24		36-23-11	ALL
	B08		W0084	271R	24		36-23-21	ALL
	B09		W0084	271B	24		36-23-21	ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13	UNUSED						ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	C01	UNUSED						ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05	UNUSED						ALL
	C06	UNUSED						ALL
	C07	UNUSED						ALL
	C08	UNUSED						ALL
	C09	UNUSED						ALL
	C10	UNUSED						ALL
	C11	UNUSED						ALL
	C12	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D02300

Page 25

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02378B		//		PLUG-PART OF D02378 (continued)				ALL
	C13	UNUSED						ALL
	C14	UNUSED						ALL
	C15	UNUSED						050-099, 150-155, 163-165, 275-276
	C15		W0084	272B	24		36-23-21	156-162, 166-199, 277-299
	D01	UNUSED						ALL
	D02		W0084	060	24		36-23-11	ALL
	D03		W0084	051	24		36-23-11	ALL
	D04		W0084	061	24		36-23-11	ALL
	D05		W0084	066	24		36-23-11	ALL
	D06		W0084	052	24		36-23-11	ALL
	D07	UNUSED						ALL
	D08		W0084	063	24		36-23-11	ALL
	D09		W0084	092	22		36-23-21	ALL
	D10		W0084	089	24		36-23-21	ALL
	D11		W0084	090	24		36-23-21	ALL
	D12		W0084	065	22		36-23-11	ALL
	D13		W0084	062	24		36-23-11	ALL
	D14	UNUSED						ALL
	D15	UNUSED						050-099, 150-155, 163-165, 275-276
	D15		W0084	272R	24		36-23-21	156-162, 166-199, 277-299
			W0084	272	20		36-23-21	156-162, 166-199, 277-299
			W0084	272Z			36-23-21	156-162, 166-199, 277-299
D02378C		//		PLUG-PART OF D02378				ALL
	1	UNUSED						ALL
	2		W0084	072	18		36-23-11	ALL
	3		W0084	088	18		36-23-21	ALL
	4		W0084	069	18		36-23-11	ALL
	5	UNUSED						ALL
	= C1	UNUSED						ALL
	= C5	UNUSED						ALL
	DED		W0084	069Z			36-23-11	ALL
D02379		728/309/R020		PLUG				280-299
	1		W1865	001	20		23-32-43	280-299
	2		W1865	002	20		23-32-43	280-299
	3	UNUSED						280-299
	4	UNUSED						280-299
	5	UNUSED						280-299
	6		W1865	004	24		23-32-43	280-299

HOOKUP LIST
D280T132

91-21-51
Section D02300
Page 26
Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02379		728/309/R020		PLUG (continued)				280-299
	7	UNUSED						280-299
	8	UNUSED						280-299
	9		W1865	005	22		23-32-43	280-299
	10		W1865	003	22		23-32-43	280-299
	= A1		W1865	01CX			23-32-43	280-299
	= C1		W1865	01CO			23-32-43	280-299
D02382		R0449/14/LE		PLUG-				275-299
	1	DK	W0470	213B	18		30-11-11	275-299
	2	DK	W0470	213R	18		30-11-11	275-299
	3	UNUSED						275-299
	4	UNUSED						275-299
	5	UNUSED						275-299
	CAP	Y	W0470	213B	18		SPARE	155-199
	CAP	Y	W0470	213R	18		SPARE	155-199
D02384		L0449/14/LE		PLUG-				155, 275-299
	1	UNUSED						155
	1	DK	W0468	213B	18		30-11-11	275-299
	2	UNUSED						155
	2	DK	W0468	213R	18		30-11-11	275-299
	3	UNUSED						155, 275-299
	4	UNUSED						155, 275-299
	5	UNUSED						155, 275-299
	CAP	Y	W0468	213B	18		SPARE	155-199
	CAP	Y	W0468	213R	18		SPARE	155-199
D02385		1032/310/R 25		PLUG				275-299
	1		W1833	001	20		23-32-51	275-299
	2		W1833	002	20		23-32-51	275-299
	3	UNUSED						275-299
	4	UNUSED						275-299
	5	UNUSED						275-299
	6		W1833	004	24		23-32-51	275-299
	7	UNUSED						275-299
	8	UNUSED						275-299
	9		W1833	005	22		23-32-51	275-299
	10		W1833	003	22		23-32-51	275-299
	= A1		W1833	01CX			23-32-51	275-299
	= C1		W1833	01CO			23-32-51	275-299

HOOKUP LIST

D280T132

91-21-51

Section D02300

Page 27

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02386		R0449/14/LE		PLUG-				ALL
	1	UNUSED						ALL
	2	DK	W0470	004	18		30-11-11	ALL
	3	DK	W0470	005	18		30-11-11	ALL
	4	DK	W0470	006	18		30-11-11	ALL
	5	UNUSED						ALL
D02387		1032/310/R 25		PLUG				275-299
	1		W1835	001	20		23-32-51	275-299
	2		W1835	002	20		23-32-51	275-299
	3	UNUSED						275-299
	4	UNUSED						275-299
	5	UNUSED						275-299
	6		W1835	004	24		23-32-51	275-299
	7	UNUSED						275-299
	8	UNUSED						275-299
	9		W1835	005	22		23-32-51	275-299
	10		W1835	003	22		23-32-51	275-299
	=A1		W1835	01CX			23-32-51	275-299
	=C1		W1835	01CO			23-32-51	275-299
D02388		L0449/14/LE		PLUG-				ALL
	1	UNUSED						ALL
	2	DK	W0468	004	18		30-11-11	ALL
	3	DK	W0468	005	18		30-11-11	ALL
	4	DK	W0468	006	18		30-11-11	ALL
	5	UNUSED						ALL
D02391		1032/310/R 25		RECP				275-299
	1		W1417	227BN	24		23-32-51	275-299
	2		W1417	227B	24		23-32-51	275-299
	3		W1417	227Z			23-32-51	275-299
	4		W1417	228BN	24		23-32-51	275-299
	5		W1417	228B	24		23-32-51	275-299
	6		W1417	228Z			23-32-51	275-299
	7		W1417	226R	24		23-32-51	275-299
	8		W1417	226B	24		23-32-51	275-299
	9		W1417	226Z			23-32-51	275-299
	10	UNUSED						275-299
	11		W1417	136	20		23-32-51	275-299
	12		W1417	138	20		23-32-51	275-299

HOOKUP LIST

D280T132

91-21-51

Section D02300

Page 28

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02391		1032/310/R 25		RECP (continued)				275-299
	13		W1417	139	20		23-32-51	275-299
	14		W1417	229BN	24		23-32-51	275-299
	15		W1417	229B	24		23-32-51	275-299
	16		W1417	229Z			23-32-51	275-299
	17	UNUSED						275-299
	18	UNUSED						275-299
	19	UNUSED						275-299
	20	UNUSED						275-299
	21	UNUSED						275-299
	22	UNUSED						275-299
	23	UNUSED						275-299
	24	UNUSED						275-299
	25	UNUSED						275-299
D02393		866/280/L 38		PLUG				275-299
	1		W1833	001	20		23-32-51	275-299
	2		W1833	003	22		23-32-51	275-299
	3		W1833	006	22		23-32-51	275-299
	4		W1833	002	20		23-32-51	275-299
	5		W1833	007	22		23-32-51	275-299
	6		W1833	008	22		23-32-51	275-299
	7		W1833	009	22		23-32-51	275-299
	8		W1833	004	24		23-32-51	275-299
	9	UNUSED						275-299
	10	UNUSED						275-299
	11	UNUSED						275-299
	12	UNUSED						275-299
D02395		866/280/L 38		PLUG-COAXIAL				275-299
	= A1		W1833	01CX			23-32-51	275-299
	= C1		W1833	01CO			23-32-51	275-299
D02397		866/280/R 38		PLUG				275-299
	1		W1835	001	20		23-32-51	275-299
	2		W1835	003	22		23-32-51	275-299
	3		W1835	006	22		23-32-51	275-299
	4		W1835	002	20		23-32-51	275-299
	5		W1835	007	22		23-32-51	275-299
	6		W1835	008	22		23-32-51	275-299
	7		W1835	009	22		23-32-51	275-299

HOOKUP LIST

D280T132

91-21-51

Section D02300

Page 29

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02397		866/280/R 38		PLUG (continued)				275-299
	8		W1835	004	24		23-32-51	275-299
	9	UNUSED						275-299
	10	UNUSED						275-299
	11	UNUSED						275-299
	12	UNUSED						275-299
D02399		866/280/R 38		PLUG-COAXIAL				275-299
	= A1		W1835	01CX			23-32-51	275-299
	= C1		W1835	01CO			23-32-51	275-299

HOOKUP LIST
D280T132

91-21-51
Section D02300
Page 30 End
Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02401		1032/310/R 25		PLUG				275-299
	1		W1837	001	20		23-32-52	275-299
	2		W1837	002	20		23-32-52	275-299
	3	UNUSED						275-299
	4	UNUSED						275-299
	5	UNUSED						275-299
	6		W1837	004	24		23-32-52	275-299
	7	UNUSED						275-299
	8	UNUSED						275-299
	9		W1837	005	22		23-32-52	275-299
	10		W1837	003	22		23-32-52	275-299
	=A1		W1837	01CX			23-32-52	275-299
	=C1		W1837	01CO			23-32-52	275-299
D02403		1032/310/R 25		PLUG				275-299
	1		W1839	001	20		23-32-52	275-299
	2		W1839	002	20		23-32-52	275-299
	3	UNUSED						275-299
	4	UNUSED						275-299
	5	UNUSED						275-299
	6		W1839	004	24		23-32-52	275-299
	7	UNUSED						275-299
	8	UNUSED						275-299
	9		W1839	005	22		23-32-52	275-299
	10		W1839	003	22		23-32-52	275-299
	=A1		W1839	01CX			23-32-52	275-299
	=C1		W1839	01CO			23-32-52	275-299
D02409		1032/310/R 25		PLUG				275-299
	1		W1841	001	20		23-32-53	275-299
	2		W1841	002	20		23-32-53	275-299
	3	UNUSED						275-299
	4	UNUSED						275-299
	5	UNUSED						275-299
	6		W1841	004	24		23-32-53	275-299
	7	UNUSED						275-299
	8	UNUSED						275-299
	9		W1841	005	22		23-32-53	275-299
	10		W1841	003	22		23-32-53	275-299
	=A1		W1841	01CX			23-32-53	275-299
	=C1		W1841	01CO			23-32-53	275-299

HOOKUP LIST
D280T132

91-21-51
Section D02400
Page 1
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02411		1032/310/R 25		PLUG				275-299
	1		W1843	001	20		23-32-53	275-299
	2		W1843	002	20		23-32-53	275-299
	3	UNUSED						275-299
	4	UNUSED						275-299
	5	UNUSED						275-299
	6		W1843	004	24		23-32-53	275-299
	7	UNUSED						275-299
	8	UNUSED						275-299
	9		W1843	005	22		23-32-53	275-299
	10		W1843	003	22		23-32-53	275-299
	= A1		W1843	01CX			23-32-53	275-299
	= C1		W1843	01CO			23-32-53	275-299
D02413		1032/310/R 25		PLUG				275-299
	1		W1417	236BN	24		23-32-61	275-299
	2		W1417	236B	24		23-32-61	275-299
	3		W1417	236Z			23-32-61	275-299
	4		W1417	237BN	24		23-32-61	275-299
	5		W1417	237B	24		23-32-61	275-299
	6		W1417	237Z			23-32-61	275-299
	7		W1417	235R	24		23-32-61	275-299
	8		W1417	235B	24		23-32-61	275-299
	9		W1417	235Z			23-32-61	275-299
	10	UNUSED						275-299
	11	UNUSED						275-299
	12	UNUSED						275-299
	13	UNUSED						275-299
	14		W1417	238BN	24		23-32-61	275-299
	15		W1417	238B	24		23-32-61	275-299
	16		W1417	238Z			23-32-61	275-299
	17	UNUSED						275-299
	18	UNUSED						275-299
	19	UNUSED						275-299
	20	UNUSED						275-299
	21	UNUSED						275-299
	22	UNUSED						275-299
	23	UNUSED						275-299
	24	UNUSED						275-299
	25	UNUSED						275-299

HOOKUP LIST

D280T132

91-21-51

Section D02400

Page 2

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02414		P037-00/ /		RELAY SOCKET-				ALL
	A1		W0198	129	20		76-11-11	ALL
	A2		W0198	126	20		76-11-11	ALL
	A3		W0198	128	20		76-11-11	ALL
	B1	UNUSED						ALL
	B2		W0198	191	22		74-31-21	ALL
	B3		W0198	193	22		74-31-21	ALL
	C1	UNUSED						ALL
	C2		W0198	190	22		74-31-21	ALL
	C3		W0198	192	22		74-31-21	ALL
	D1	UNUSED						ALL
	D2		W0198	169	24		80-11-21	ALL
	D3		W0198	170	24		80-11-21	ALL
	X1		W0198	125	24		76-11-11	ALL
	X2		W0198	130	20		76-11-11	ALL
	DED		W0198	191Z			74-31-21	ALL
	DED		W0198	193Z			74-31-21	ALL
D02417		1172/280/L 38		PLUG				275-299
	1		W1841	001	20		23-32-53	275-299
	2		W1841	003	22		23-32-53	275-299
	3		W1841	006	22		23-32-53	275-299
	4		W1841	002	20		23-32-53	275-299
	5		W1841	007	22		23-32-53	275-299
	6		W1841	008	22		23-32-53	275-299
	7		W1841	009	22		23-32-53	275-299
	8		W1841	004	24		23-32-53	275-299
	9	UNUSED						275-299
	10	UNUSED						275-299
	11	UNUSED						275-299
	12	UNUSED						275-299
D02418		P033-00/ /		RELAY SOCKET-P33				ALL
	A1		W0144	624	22		27-62-11	ALL
	A2		W0144	03K	20		27-62-11	ALL
	A3	UNUSED						ALL
	B1		W0144	02Q	22		27-62-11	ALL
	B2		W0144	02Y	22		27-62-11	ALL
	B3		W0144	03G	22		27-62-11	ALL
	C1		W0144	03F	22		27-62-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D02400

Page 3

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02418		P033-00/ /		RELAY SOCKET-P33 (continued)				ALL
	C2		W0144	03I	22		27-62-11	ALL
	C3		W0144	03G	22		27-62-11	ALL
	D1	UNUSED						ALL
	D2		W0144	03M	22		27-62-11	ALL
	D3		W0144	03L	22		27-62-11	ALL
	X1		W0144	03J	22		27-62-11	ALL
	X2		W0144	625	22		27-62-11	ALL
D02419		1032/310/R 25		PLUG				280-299
	1		W1845	001	20		23-32-54	280-299
	2		W1845	002	20		23-32-54	280-299
	3	UNUSED						280-299
	4	UNUSED						280-299
	5	UNUSED						280-299
	6		W1845	004	24		23-32-54	280-299
	7	UNUSED						280-299
	8	UNUSED						280-299
	9		W1845	005	22		23-32-54	280-299
	10		W1845	003	22		23-32-54	280-299
	= A1		W1845	01CX			23-32-54	280-299
	= C1		W1845	01CO			23-32-54	280-299
D02420		P033-00/ /		RELAY SOCKET-				ALL
	A1		W0144	03A	22		27-62-11	ALL
	A2		W0144	03C	20		27-62-11	ALL
	A3	UNUSED						ALL
	B1		W0144	02U	22		27-62-11	ALL
	B2		W0144	02Y	22		27-62-11	ALL
	B3		W0144	03E	22		27-62-11	ALL
	C1		W0144	03F	22		27-62-11	ALL
	C2		W0144	03D	20		27-62-11	ALL
	C3		W0144	03E	22		27-62-11	ALL
	D1	UNUSED						ALL
	D2		W0144	02T	22		27-62-11	ALL
	D3		W0144	02X	22		27-62-11	ALL
	X1		W0144	02W	22		27-62-11	ALL
	X2		W0144	03B	22		27-62-11	ALL
D02421		1032/310/R 25		PLUG				280-299
	1		W1895	001	20		23-32-54	280-299

HOOKUP LIST
D280T132

91-21-51
Section D02400
Page 4
Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02421		1032/310/R 25		PLUG (continued)				280-299
	2		W1895	002	20		23-32-54	280-299
	3	UNUSED						280-299
	4	UNUSED						280-299
	5	UNUSED						280-299
	6		W1895	004	24		23-32-54	280-299
	7	UNUSED						280-299
	8	UNUSED						280-299
	9		W1895	005	22		23-32-54	280-299
	10		W1895	003	22		23-32-54	280-299
	= A1		W1895	01CX			23-32-54	280-299
	= C1		W1895	01CO			23-32-54	280-299
D02424		0372/280/L005		RCPT-				050-099, 276-299
D02424		0373/280/L005		RCPT-				150-199, 275
	1		W1138	202R	22		23-31-16	050-099, 276-299
	1		W1138	246R	22		23-31-16	150-199, 275
	2		W1138	202B	22		23-31-16	050-099, 276-299
	2		W1138	246B	22		23-31-16	150-199, 275
	3		W1138	103	22		33-24-13	050-099
	3		W1138	005	20		33-24-13	150-199, 275
	3		W1138	103	20		33-24-13	276-299
	4		W1138	104	22		33-24-13	050-099
	4		W1138	006	20		33-24-13	150-199, 275
	4		W1138	104	20		33-24-13	276-299
	5		W1138	105	20		33-24-13	050-099, 276-299
	5		W1138	007	20		33-24-13	150-199, 275
	6		W1138	252R	22		23-31-16	050-099
	6		W1138	256R	22		23-31-16	150-199
	7		W1138	252B	22		23-31-16	050-099
	7		W1138	256B	22		23-31-16	150-199
	8	UNUSED						050-099, 150-199
	9	UNUSED						050-099, 150-199
	10	UNUSED						050-099, 150-199
	11	UNUSED						050-099, 150-199
	12	UNUSED						050-099, 150-199
D02426		0154/213/R006		PLUG-				ALL
	1		W0051	210B	24		33-11-11	ALL
	2	UNUSED						ALL
	3		W0051	206B	24		33-11-11	ALL

HOOKUP LIST
D280T132

91-21-51
Section D02400
Page 5
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02426		0154/213/R006		PLUG- (continued)				ALL
	4		W0051	208B	24		33-11-11	ALL
	5		W0051	208R	24		33-11-11	ALL
	6		W0051	209B	24		33-11-11	ALL
	7		W0051	209R	24		33-11-11	ALL
	8		W0051	302B	24		33-11-11	ALL
	9		W0051	206R	24		33-11-11	ALL
	10		W0051	210R	24		33-11-11	ALL
	11		W0051	302R	24		33-11-11	ALL
	12		W0051	207B	24		33-11-11	ALL
	13		W0051	207R	24		33-11-11	ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16		W0051	016	24		33-11-11	ALL
	17		W0051	018	20		33-11-11	ALL
	18		W0051	302Y	24		33-11-11	ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21		W0051	FRA			33-11-11	ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
			W0051	206Z			33-11-11	ALL
			W0051	210	20		33-11-11	ALL
			W0051	210Z			33-11-11	ALL
			W0051	302Z			33-11-11	ALL
			W0051	FRA			33-11-11	ALL
D02427		1362/310/R 25		PLUG				275-299
	1		W1849	001	20		23-32-61	275-299
	2		W1849	002	20		23-32-61	275-299
	3	UNUSED						275-299
	4	UNUSED						275-299
	5	UNUSED						275-299
	6		W1849	004	24		23-32-61	275-299
	7	UNUSED						275-299
	8	UNUSED						275-299
	9		W1849	005	22		23-32-61	275-299
	10		W1849	003	22		23-32-61	275-299
	= A1		W1849	01CX			23-32-61	275-299
	= C1		W1849	01CO			23-32-61	275-299

HOOKUP LIST

D280T132

91-21-51

Section D02400

Page 6

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02429		1362/310/R 25		PLUG				275-299
	1		W1851	001	20		23-32-61	275-299
	2		W1851	002	20		23-32-61	275-299
	3	UNUSED						275-299
	4	UNUSED						275-299
	5	UNUSED						275-299
	6		W1851	004	24		23-32-61	275-299
	7	UNUSED						275-299
	8	UNUSED						275-299
	9		W1851	005	22		23-32-61	275-299
	10		W1851	003	22		23-32-61	275-299
	=A1		W1851	01CX			23-32-61	275-299
	=C1		W1851	01CO			23-32-61	275-299
D02430		P035-00/ /		PLUG-				ALL
	1		W1066	651	22		25-53-14	150-199, 275-299
	2		W1066	652	22		25-53-14	150-199, 275-299
	3		W1066	659	22		25-53-13	150-199, 275-299
	4	UNUSED						150-199, 275-299
	5		W1066	653	22		25-53-14	150-199, 275-299
	6		W1066	650	22		25-53-14	150-199, 275-299
	7		W1066	658	22		25-53-13	150-199, 275-299
	8	UNUSED						150-199, 275-299
	A1		W1066	651	22		25-53-14	050-099
	A2		W1066	650	22		25-53-14	050-099
	A3	UNUSED						050-099
	B1		W1066	653	22		25-53-14	050-099
	B2		W1066	652	22		25-53-14	050-099
	B3	UNUSED						050-099
	C1	UNUSED						050-099
	C2		W1066	823	22		25-53-14	050-099
	C3		W1066	886	22		25-53-14	050-099
	D1	UNUSED						050-099
	D2	UNUSED						050-099
	D3	UNUSED						050-099
	X1		W1066	658	22		25-53-13	050-099
	X2		W1066	659	22		25-53-13	050-099
D02432		P035-00/ /		PLUG-				ALL
	1		W1066	641	22		25-53-14	150-199, 275-299
	2		W1066	642	22		25-53-14	150-199, 275-299

HOOKUP LIST
D280T132

91-21-51
Section D02400
Page 7
Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02432		P035-00/ /		PLUG- (continued)				ALL
	3		W1066	649	22		25-53-13	150-199, 275-299
	4	UNUSED						150-199, 275-299
	5		W1066	643	22		25-53-14	150-199, 275-299
	6		W1066	640	22		25-53-14	150-199, 275-299
	7		W1066	648	22		25-53-13	150-199, 275-299
	8	UNUSED						150-199, 275-299
	A1		W1066	641	22		25-53-14	050-099
	A2		W1066	640	22		25-53-14	050-099
	A3	UNUSED						050-099
	B1		W1066	643	22		25-53-14	050-099
	B2		W1066	642	22		25-53-14	050-099
	B3	UNUSED						050-099
	C1	UNUSED						050-099
	C2		W1066	533	22		25-53-14	050-099
	C3		W1066	886	22		25-53-14	050-099
	D1	UNUSED						050-099
	D2	UNUSED						050-099
	D3	UNUSED						050-099
	X1		W1066	648	22		25-53-13	050-099
	X2		W1066	649	22		25-53-13	050-099
D02433		1362/310/R 25		RECP				275-299
	1		W1417	236BN	24		23-32-61	275-299
	2		W1417	236B	24		23-32-61	275-299
	3		W1417	236Z			23-32-61	275-299
	4		W1417	237BN	24		23-32-61	275-299
	5		W1417	237B	24		23-32-61	275-299
	6		W1417	237Z			23-32-61	275-299
	7		W1417	235R	24		23-32-61	275-299
	8		W1417	235B	24		23-32-61	275-299
	9		W1417	235Z			23-32-61	275-299
	10	UNUSED						275-299
	11		W1417	142	20		23-32-61	275-299
	12		W1417	144	20		23-32-61	275-299
	13		W1417	145	20		23-32-61	275-299
	14		W1417	238BN	24		23-32-61	275-299
	15		W1417	238B	24		23-32-61	275-299
	16		W1417	238Z			23-32-61	275-299
	17	UNUSED						275-299
	18	UNUSED						275-299

HOOKUP LIST

D280T132

91-21-51

Section D02400

Page 8

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02433		1362/310/R 25		RECP (continued)				275-299
	19	UNUSED						275-299
	20	UNUSED						275-299
	21	UNUSED						275-299
	22	UNUSED						275-299
	23	UNUSED						275-299
	24	UNUSED						275-299
	25	UNUSED						275-299
D02434		P035-00/ /		PLUG-				ALL
	1		W1066	671	22		25-53-14	150-199, 275-299
	2		W1066	670	22		25-53-14	150-199, 275-299
	3		W1066	679	22		25-53-13	150-199, 275-299
	4	UNUSED						150-199, 275-299
	5		W1066	673	22		25-53-14	150-199, 275-299
	6		W1066	672	22		25-53-14	150-199, 275-299
	7		W1066	678	22		25-53-13	150-199, 275-299
	8	UNUSED						150-199, 275-299
	A1		W1066	671	22		25-53-14	050-099
	A2		W1066	670	22		25-53-14	050-099
	A3	UNUSED						050-099
	B1		W1066	673	22		25-53-14	050-099
	B2		W1066	672	22		25-53-14	050-099
	B3	UNUSED						050-099
	C1	UNUSED						050-099
	C2		W1066	674	22		25-53-14	050-099
	C3		W1066	675	22		25-53-14	050-099
	D1	UNUSED						050-099
	D2	UNUSED						050-099
	D3	UNUSED						050-099
	X1		W1066	687	22		25-53-13	050-099
	X2		W1066	679	22		25-53-13	050-099
D02435		1206/280/L 38		PLUG				275-299
	1		W1849	001	20		23-32-61	275-299
	2		W1849	003	22		23-32-61	275-299
	3		W1849	006	22		23-32-61	275-299
	4		W1849	002	20		23-32-61	275-299
	5		W1849	007	22		23-32-61	275-299
	6		W1849	008	22		23-32-61	275-299
	7		W1849	009	22		23-32-61	275-299

HOOKUP LIST
D280T132

91-21-51
Section D02400
Page 9
Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02435		1206/280/L 38		PLUG (continued)				275-299
	8		W1849	004	24		23-32-61	275-299
	9	UNUSED						275-299
	10	UNUSED						275-299
	11	UNUSED						275-299
	12	UNUSED						275-299
D02436		P035-00/ /		PLUG-				ALL
	1		W1066	661	22		25-53-14	150-199, 275-299
	2		W1066	660	22		25-53-14	150-199, 275-299
	3		W1066	669	22		25-53-13	150-199, 275-299
	4	UNUSED						150-199, 275-299
	5		W1066	663	22		25-53-14	150-199, 275-299
	6		W1066	662	22		25-53-14	150-199, 275-299
	7		W1066	668	22		25-53-13	150-199, 275-299
	8	UNUSED						150-199, 275-299
	A1		W1066	661	22		25-53-14	050-099
	A2		W1066	660	22		25-53-14	050-099
	A3	UNUSED						050-099
	B1		W1066	663	22		25-53-14	050-099
	B2		W1066	662	22		25-53-14	050-099
	B3	UNUSED						050-099
	C1	UNUSED						050-099
	C2		W1066	664	22		25-53-14	050-099
	C3		W1066	675	22		25-53-14	050-099
	D1	UNUSED						050-099
	D2	UNUSED						050-099
	D3	UNUSED						050-099
	X1		W1066	668	22		25-53-13	050-099
	X2		W1066	669	22		25-53-13	050-099
D02437		1217/280/L 38		PLUG-COAXIAL				275-299
	= A1		W1849	01CX			23-32-61	275-299
	= C1		W1849	01CO			23-32-61	275-299
D02438		P035-00/ /		PLUG-				ALL
	A1		W1066	681	22		25-53-14	ALL
	A2		W1066	680	22		25-53-14	ALL
	A3	UNUSED						ALL
	B1		W1066	683	22		25-53-14	ALL
	B2		W1066	682	22		25-53-14	ALL

HOOKUP LIST

D280T132

91-21-51

Section D02400

Page 10

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02438		P035-00/ /		PLUG- (continued)				ALL
	B3	UNUSED						ALL
	C1	UNUSED						ALL
	C2		W1066	684	22		25-53-14	050-099
	C2		W1066	04T	22		25-53-14	150-199, 275-299
	C3		W1066	685	22		25-53-14	ALL
	D1	UNUSED						ALL
	D2	UNUSED						ALL
	D3	UNUSED						ALL
	X1		W1066	811	22		25-53-13	050-099
	X1		W1066	01T	22		25-53-13	150-199, 275-299
	X2		W1066	689	22		25-53-13	050-099
	X2		W1066	554	22		25-53-13	150-199, 275-299
D02439		1217/280/R 38		PLUG				275-299
	1		W1851	001	20		23-32-61	275-299
	2		W1851	003	22		23-32-61	275-299
	3		W1851	006	22		23-32-61	275-299
	4		W1851	002	20		23-32-61	275-299
	5		W1851	007	22		23-32-61	275-299
	6		W1851	008	22		23-32-61	275-299
	7		W1851	009	22		23-32-61	275-299
	8		W1851	004	24		23-32-61	275-299
	9	UNUSED						275-299
	10	UNUSED						275-299
	11	UNUSED						275-299
	12	UNUSED						275-299
D02440		P035-00/ /		PLUG-				050-099
	1		W1066	701	22		25-53-14	050-099
	2		W1066	702	22		25-53-14	050-099
	3		W1066	709	22		25-53-13	050-099
	4	UNUSED						050-099
	5		W1066	703	22		25-53-14	050-099
	6		W1066	700	22		25-53-14	050-099
	7		W1066	708	22		25-53-13	050-099
	8	UNUSED						050-099
D02441		1217/280/R 38		PLUG-COAXIAL				275-299
	= A1		W1851	01CX			23-32-61	275-299
	= C1		W1851	01CO			23-32-61	275-299

HOOKUP LIST

D280T132

91-21-51

Section D02400

Page 11

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02442		P035-00/ /		PLUG-				050-099
	1		W1066	691	22		25-53-14	050-099
	2		W1066	692	22		25-53-14	050-099
	3		W1066	699	22		25-53-13	050-099
	4	UNUSED						050-099
	5		W1066	693	22		25-53-14	050-099
	6		W1066	690	22		25-53-14	050-099
	7		W1066	698	22		25-53-13	050-099
	8	UNUSED						050-099
D02443		1362/310/R 25		PLUG				275-299
	1		W1853	001	20		23-32-62	275-299
	2		W1853	002	20		23-32-62	275-299
	3	UNUSED						275-299
	4	UNUSED						275-299
	5	UNUSED						275-299
	6		W1853	004	24		23-32-62	275-299
	7	UNUSED						275-299
	8	UNUSED						275-299
	9		W1853	005	22		23-32-62	275-299
	10		W1853	003	22		23-32-62	275-299
	=A1		W1853	01CX			23-32-62	275-299
	=C1		W1853	01CO			23-32-62	275-299
D02444		P035-00/ /		PLUG-				ALL
	1		W1066	550	22		25-53-13	ALL
	2		W1066	539	22		25-53-13	ALL
	3		W1066	553	22		25-53-13	ALL
	4		W1066	560	22		25-53-13	ALL
	5		W1066	552	22		25-53-13	ALL
	6		W1066	848	22		25-53-13	ALL
	7		W1066	518	22		25-53-15	050-099
	7		W1066	35S	22		25-53-15	150-199, 275-299
	8		W1066	557	22		25-53-15	ALL
	9		W1066	555	22		25-53-13	ALL
	10		W1066	808	22		25-53-13	050-099
	10		W1066	558	22		25-53-13	150-199, 275-299
	11		W1066	697	22		25-53-13	050-099
	11		W1066	500	22		25-53-13	150-199, 275-299
	12		W1066	559	22		25-53-13	ALL
	13		W1066	551	22		25-53-13	ALL

HOOKUP LIST

D280T132

91-21-51

Section D02400

Page 12

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02444		P035-00/ /		PLUG- (continued)				ALL
	14		W1066	556	22		25-53-15	ALL
D02445		1362/310/R 25		PLUG				275-299
	1		W1855	001	20		23-32-62	275-299
	2		W1855	002	20		23-32-62	275-299
	3	UNUSED						275-299
	4	UNUSED						275-299
	5	UNUSED						275-299
	6		W1855	004	24		23-32-62	275-299
	7	UNUSED						275-299
	8	UNUSED						275-299
	9		W1855	005	22		23-32-62	275-299
	10		W1855	003	22		23-32-62	275-299
	= A1		W1855	01CX			23-32-62	275-299
	= C1		W1855	01CO			23-32-62	275-299
D02446		P035-00/ /		PLUG-				ALL
	1		W1066	611	22		25-53-14	ALL
	2		W1066	612	22		25-53-14	ALL
	3		W1066	619	22		25-53-13	ALL
	4	UNUSED						ALL
	5		W1066	613	22		25-53-14	ALL
	6		W1066	610	22		25-53-14	ALL
	7		W1066	618	22		25-53-13	ALL
	8	UNUSED						ALL
D02448		P035-00/ /		PLUG-				ALL
	1		W1066	601	22		25-53-14	ALL
	2		W1066	602	22		25-53-14	ALL
	3		W1066	609	22		25-53-13	ALL
	4	UNUSED						ALL
	5		W1066	603	22		25-53-14	ALL
	6		W1066	600	22		25-53-14	ALL
	7		W1066	608	22		25-53-13	ALL
	8	UNUSED						ALL
D02450		P035-00/ /		PLUG-				ALL
	1		W1066	631	22		25-53-14	ALL
	2		W1066	632	22		25-53-14	ALL
	3		W1066	639	22		25-53-13	ALL

HOOKUP LIST
D280T132

91-21-51
Section D02400
Page 13
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02450		P035-00/ /		PLUG- (continued)				ALL
	4	UNUSED						ALL
	5		W1066	633	22		25-53-14	ALL
	6		W1066	686	22		25-53-14	050-099
	6		W1066	630	22		25-53-14	150-199, 275-299
	7		W1066	638	22		25-53-13	ALL
	8	UNUSED						ALL
D02452		P035-00/ /		PLUG-				ALL
	1		W1066	621	22		25-53-14	ALL
	2		W1066	622	22		25-53-14	ALL
	3		W1066	629	22		25-53-13	ALL
	4	UNUSED						ALL
	5		W1066	623	22		25-53-14	ALL
	6		W1066	620	22		25-53-14	ALL
	7		W1066	628	22		25-53-13	ALL
	8	UNUSED						ALL
D02454		P035-00/ /		PLUG-				ALL
	A1		W1066	132	22		25-53-16	ALL
	A2		W1066	130	22		25-53-16	ALL
	A3		W1066	113	22		25-53-16	ALL
	B1		W1066	135	22		25-53-16	ALL
	B2		W1066	133	22		25-53-16	ALL
	B3		W1066	115	22		25-53-16	ALL
	C1		W1066	117	22		25-53-16	ALL
	C2		W1066	092	22		25-53-16	ALL
	C3		W1066	118	22		25-53-16	ALL
	D1		W1066	119	22		25-53-16	ALL
	D2		W1066	093	22		25-53-16	ALL
	D3		W1066	120	22		25-53-16	ALL
	X1		W1066	37K	22		25-53-16	ALL
	X2		W1066	578	22		25-53-16	ALL
D02456		P035-00/ /		PLUG-				ALL
	A1		W1066	131	22		25-53-16	ALL
	A2		W1066	094	22		25-53-16	ALL
	A3		W1066	130	22		25-53-16	ALL
	B1		W1066	134	22		25-53-16	ALL
	B2		W1066	095	22		25-53-16	ALL
	B3		W1066	133	22		25-53-16	ALL

HOOKUP LIST

D280T132

91-21-51

Section D02400

Page 14

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02456		P035-00/ /		PLUG- (continued)				ALL
	C1		W1066	614	22		25-53-14	050-099
	C1		W1066	02L	22		25-53-14	150-199, 275-299
	C2		W1066	849	22		25-53-14	050-099
	C2		W1066	684	22		25-53-14	150-199, 275-299
	C3	UNUSED						ALL
	D1		W1066	707	22		25-53-14	050-099
	D1		W1066	02S	22		25-53-14	150-199, 275-299
	D2		W1066	588	22		25-53-14	050-099
	D2		W1066	02R	22		25-53-14	150-199, 275-299
	D3	UNUSED						ALL
	X1		W1066	37L	22		25-53-16	ALL
	X2		W1066	579	22		25-53-16	ALL
D02458		P035-00/ /		PLUG-				ALL
	A1		W1066	102	22		25-53-15	ALL
	A2		W1066	071	22		25-53-15	ALL
	A3		W1066	101	22		25-53-15	ALL
	B1		W1066	104	22		25-53-15	ALL
	B2		W1066	072	22		25-53-15	ALL
	B3		W1066	103	22		25-53-15	ALL
	C1		W1066	106	22		25-53-15	ALL
	C2		W1066	073	22		25-53-15	ALL
	C3		W1066	105	22		25-53-15	ALL
	D1		W1066	37C	22		25-53-15	ALL
	D2		W1066	37B	22		25-53-15	ALL
	D3		W1066	37A	22		25-53-15	ALL
	X1		W1066	575	22		25-53-15	050-099
	X1		W1066	556	22		25-53-15	150-199, 275-299
	X2		W1066	576	22		25-53-15	ALL
D02460		P035-00/ /		PLUG-				ALL
	A1		W1066	108	22		25-53-15	ALL
	A2		W1066	081	22		25-53-15	ALL
	A3		W1066	107	22		25-53-15	ALL
	B1		W1066	110	22		25-53-15	ALL
	B2		W1066	082	22		25-53-15	ALL
	B3		W1066	109	22		25-53-15	ALL
	C1		W1066	112	22		25-53-15	ALL
	C2		W1066	083	22		25-53-15	ALL
	C3		W1066	111	22		25-53-15	ALL

HOOKUP LIST

D280T132

91-21-51

Section D02400

Page 15

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02460		P035-00/ /		PLUG- (continued)				ALL
	D1		W1066	37F	22		25-53-15	ALL
	D2		W1066	37E	22		25-53-15	ALL
	D3		W1066	37D	22		25-53-15	ALL
	X1		W1066	585	22		25-53-15	050-099
	X1		W1066	04W	22		25-53-15	150-199, 275-299
	X2		W1066	586	22		25-53-15	ALL
D02462		P035-00/ /		RCPT-P35				ALL
	A1	UNUSED						ALL
	A2		W1066	098	22		25-53-17	ALL
	A3		W1066	126	22		25-53-17	ALL
	B1	UNUSED						ALL
	B2		W1066	097	22		25-53-17	ALL
	B3		W1066	123	22		25-53-17	ALL
	X1		W1066	647	22		25-53-17	ALL
	X2		W1066	597	22		25-53-17	ALL
D02463A		//		PLUG PART A OF D02463				ALL
	1		W1171	01CX			34-45-11	050-099, 150-199, 277-299
	1	UNUSED						275-276
	2		W1175	01CX			34-45-11	050-099, 150-199, 277-299
	2	UNUSED						275-276
	3		W1177	01CX			34-45-11	050-099, 150-199, 277-299
	3	UNUSED						275-276
	4		W1179	01CX			34-45-11	050-099, 150-199, 277-299
	4	UNUSED						275-276
	=C1		W1171	01CO			34-45-11	050-099, 150-199, 277-299
	=C1	UNUSED						275-276
	=C2		W1175	01CO			34-45-11	050-099, 150-199, 277-299
	=C2	UNUSED						275-276
	=C3		W1177	01CO			34-45-11	050-099, 150-199, 277-299
	=C3	UNUSED						275-276
	=C4		W1179	01CO			34-45-11	050-099, 150-199, 277-299
	=C4	UNUSED						275-276
D02463B		//		PLUG PART B OF D02463				ALL
	1		W1181	01CX			34-45-11	050-099, 150-199, 277-299
	1	UNUSED						275-276
	2		W1181	02CX			34-45-11	050-099, 150-199, 277-299
	2	UNUSED						275-276

HOOKUP LIST

D280T132

91-21-51

Section D02400

Page 16

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02463B		//		PLUG PART B OF D02463 (continued)				ALL
	3		W1181	03CX			34-45-11	050-099, 150-199, 277-299
	3	UNUSED						275-276
	4		W1181	04CX			34-45-11	050-099, 150-199, 277-299
	4	UNUSED						275-276
	=C1		W1181	01CO			34-45-11	050-099, 150-199, 277-299
	=C1	UNUSED						275-276
	=C2		W1181	02CO			34-45-11	050-099, 150-199, 277-299
	=C2	UNUSED						275-276
	=C3		W1181	03CO			34-45-11	050-099, 150-199, 277-299
	=C3	UNUSED						275-276
	=C4		W1181	04CO			34-45-11	050-099, 150-199, 277-299
	=C4	UNUSED						275-276
D02463C		//		PLUG PART C OF D02463				ALL
	1		W0105	625	20		34-45-11	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W0105	600	20		34-45-11	ALL
	8		W0105	603	20		34-45-11	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11		W0105	619	20		34-45-11	ALL
	12		W1709	01CX			34-45-11	050-099, 150-199, 277-299
	12	UNUSED						275-276
	13	UNUSED						ALL
	=C12		W1709	01CO			34-45-11	050-099, 150-199, 277-299
	=C12	UNUSED						275-276
	=C13	UNUSED						ALL
D02463D		//		PLUG PART D OF D02463				ALL
	=X1	UNUSED						ALL
D02463E		//		PLUG PART E OF D02463				ALL
	A01	UNUSED						ALL
	A02	UNUSED						ALL
	A03	UNUSED						ALL
	A04	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D02400

Page 17

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02463E		//		PLUG PART E OF D02463 (continued)				ALL
	A05	UNUSED						ALL
	A06	UNUSED						ALL
	A07		W0105	527R	24		34-45-14	ALL
	A08	UNUSED						ALL
	A09	UNUSED						ALL
	A10	UNUSED						ALL
	A11	UNUSED						ALL
	A12	UNUSED						ALL
	A13	UNUSED						ALL
	A14		W0105	555R	24		34-45-12	ALL
	A15	UNUSED						ALL
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04	UNUSED						ALL
	B05	UNUSED						ALL
	B06	UNUSED						ALL
	B07		W0105	527B	24		34-45-14	ALL
	B08	UNUSED						ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13	UNUSED						ALL
	B14		W0105	555B	24		34-45-12	ALL
	B15	UNUSED						ALL
	C01	UNUSED						ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05	UNUSED						ALL
	C06	UNUSED						ALL
	C07		W0105	546R	24		34-45-14	ALL
	C08	UNUSED						ALL
	C09	UNUSED						ALL
	C10	UNUSED						ALL
	C11	UNUSED						ALL
	C12	UNUSED						ALL
	C13	UNUSED						ALL
	C14		W0105	141	22		34-45-14	ALL

HOOKUP LIST
D280T132

91-21-51
Section D02400
Page 18
Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02463E		//		PLUG PART E OF D02463 (continued)				ALL
	C15	UNUSED						ALL
	D01	UNUSED						ALL
	D02	UNUSED						ALL
	D03	UNUSED						ALL
	D04	UNUSED						ALL
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07		W0105	546B	24		34-45-14	ALL
	D08	UNUSED						ALL
	D09	UNUSED						ALL
	D10	UNUSED						ALL
	D11	UNUSED						ALL
	D12	UNUSED						ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15	UNUSED						ALL
	E01	UNUSED						ALL
	E02	UNUSED						ALL
	E03	UNUSED						ALL
	E04	UNUSED						ALL
	E05	UNUSED						ALL
	E06	UNUSED						ALL
	E07		W0105	904	22		34-45-14	050-099, 150-166, 275-299 167-199
	E08	UNUSED						ALL
	E09	UNUSED						ALL
	E10	UNUSED						ALL
	E11	UNUSED						ALL
	E12	UNUSED						ALL
	E13		W0105	589	22		34-45-14	ALL
	E14	UNUSED						ALL
	E15	UNUSED						ALL
	F01	UNUSED						ALL
	F02	UNUSED						ALL
	F03		W0105	782R	22		34-45-13	ALL
	F04	UNUSED						ALL
	F05	UNUSED						ALL
	F06	UNUSED						ALL
	F07	UNUSED						ALL
	F08	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D02400
Page 19
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02463E		//		PLUG PART E OF D02463 (continued)				ALL
	F09	UNUSED						ALL
	F10	UNUSED						ALL
	F11	UNUSED						ALL
	F12	UNUSED						ALL
	F13		W0105	780	22		34-45-13	ALL
	F14		W0105	549R	24		34-45-12	ALL
	F15	UNUSED						ALL
	G01	UNUSED						ALL
	G02	UNUSED						ALL
	G03		W0105	782B	22		34-45-13	ALL
	G04	UNUSED						ALL
	G05	UNUSED						ALL
	G06	UNUSED						ALL
	G07		W0105	590R	24		34-45-14	ALL
	G08	UNUSED						ALL
	G09	UNUSED						ALL
	G10	UNUSED						ALL
	G11	UNUSED						ALL
	G12	UNUSED						ALL
	G13	UNUSED						ALL
	G14		W0105	549B	24		34-45-12	ALL
	G15	UNUSED						ALL
	H01	UNUSED						ALL
	H02	UNUSED						ALL
	H03	UNUSED						ALL
	H04	UNUSED						ALL
	H05	UNUSED						ALL
	H06		W0105	593	22		34-45-12	ALL
	H07		W0105	590B	24		34-45-14	ALL
	H08	UNUSED						ALL
	H09	UNUSED						ALL
	H10	UNUSED						ALL
	H11	UNUSED						ALL
	H12	UNUSED						ALL
	H13		W0105	568R	24		34-45-14	ALL
	H14		W0105	560R	24		34-45-12	ALL
	H15	UNUSED						ALL
	J01	UNUSED						ALL
	J02	UNUSED						ALL
	J03	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D02400

Page 20

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02463E		//		PLUG PART E OF D02463 (continued)				ALL
	J04	UNUSED						ALL
	J05	UNUSED						ALL
	J06		W0105	594	22		34-45-12	ALL
	J07		W0105	903	22		34-45-14	050-099, 150-152, 155-199, 275-299
	J07		W0105	598	22		34-45-13	153-154
	J08	UNUSED						ALL
	J09	UNUSED						ALL
	J10	UNUSED						ALL
	J11	UNUSED						ALL
	J12	UNUSED						ALL
	J13		W0105	568B	24		34-45-14	ALL
	J14		W0105	560B	24		34-45-12	ALL
	J15		W0105	544R	24		34-45-12	ALL
	K01	UNUSED						ALL
	K02	UNUSED						ALL
	K03	UNUSED						ALL
	K04	UNUSED						ALL
	K05		W0105	713	22		34-45-13	ALL
	K06		W0105	595	22		34-45-12	ALL
	K07	UNUSED						ALL
	K08	UNUSED						ALL
	K09	UNUSED						ALL
	K10	UNUSED						ALL
	K11	UNUSED						ALL
	K12	UNUSED						ALL
	K13		W0105	784	24		34-45-13	ALL
	K14	UNUSED						ALL
	K15		W0105	544B	24		34-45-12	ALL
	CAP	Y	W0105	592B	24		34-45-14	050-099, 150-156, 162-166, 275-276
	CAP	Y	W0105	592R	24		34-45-14	050-099, 150-156, 162-166, 275-276
	CAP	Y	W0105	786	22		34-45-14	050-099, 150-156, 162-166, 275-276
	CAP	Y	W0105	586	22		34-45-13	050-099, 150-166, 275-276
	CAP	Y	W0105	779	22		34-45-13	050-099, 150-166, 275-276
	DED		W0105	592Z			34-45-14	050-099, 150-156, 162-166, 275-276
	DED		W0105	546Z			34-45-14	ALL
	DED		W0105	568Z			34-45-14	ALL
	DED		W0105	590Z			34-45-14	ALL
	REF		W0105	527	20		34-45-14	ALL
	REF		W0105	527Z			34-45-14	ALL
	REF		W0105	544	20		34-45-12	ALL

HOOKUP LIST

D280T132

91-21-51

Section D02400

Page 21

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02463E		//		PLUG PART E OF D02463 (continued)				ALL
	REF		W0105	544Z			34-45-12	ALL
	REF		W0105	549	20		34-45-12	ALL
	REF		W0105	549Z			34-45-12	ALL
	REF		W0105	555	20		34-45-12	ALL
	REF		W0105	555Z			34-45-12	ALL
	REF		W0105	560	20		34-45-12	ALL
	REF		W0105	560Z			34-45-12	ALL
	REF		W0105	782	20		34-45-13	ALL
	REF		W0105	782Z			34-45-13	ALL
D02463F		//		PLUG PART F OF D02463				ALL
	A01	UNUSED						ALL
	A02	UNUSED						ALL
	A03	UNUSED						ALL
	A04	UNUSED						ALL
	A05	UNUSED						ALL
	A06	UNUSED						ALL
	A07		W0105	906	22		34-45-12	ALL
	A08	UNUSED						ALL
	A09	UNUSED						ALL
	A10	UNUSED						ALL
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04	UNUSED						ALL
	B05		W0105	134	22		34-45-12	ALL
	B06	UNUSED						ALL
	B07		W0105	132	22		34-45-12	ALL
	B08	UNUSED						ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	C01	UNUSED						ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05		W0105	623	22		34-45-12	ALL
	C06	UNUSED						ALL
	C07		W0105	907	22		34-45-12	ALL
	C08	UNUSED						ALL
	C09	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D02400

Page 22

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02463F		//		PLUG PART F OF D02463 (continued)				ALL
	C10	UNUSED						ALL
	D01	UNUSED						ALL
	D02	UNUSED						ALL
	D03		W0105	564R	24		34-45-14	ALL
	D04	UNUSED						ALL
	D05		W0105	135	22		34-45-12	ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	D08	UNUSED						ALL
	D09	UNUSED						ALL
	D10	UNUSED						ALL
	E01	UNUSED						ALL
	E02	UNUSED						ALL
	E03		W0105	564B	24		34-45-14	ALL
	E04	UNUSED						ALL
	E05	UNUSED						ALL
	E06	UNUSED						ALL
	E07	UNUSED						ALL
	E08		W0105	131	22		34-45-12	ALL
	E09	UNUSED						ALL
	E10	UNUSED						ALL
	F01	UNUSED						ALL
	F02	UNUSED						ALL
	F03	UNUSED						ALL
	F04	UNUSED						ALL
	F05	UNUSED						ALL
	F06	UNUSED						ALL
	F07	UNUSED						ALL
	F08		W0105	905	22		34-45-12	ALL
	F09	UNUSED						ALL
	F10	UNUSED						ALL
	G01	UNUSED						ALL
	G02	UNUSED						ALL
	G03	UNUSED						ALL
	G04	UNUSED						ALL
	G05	UNUSED						ALL
	G06	UNUSED						ALL
	G07	UNUSED						ALL
	G08	UNUSED						ALL
	G09	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D02400
Page 23
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02463F		//		PLUG PART F OF D02463 (continued)				ALL
	G10	UNUSED						ALL
	H01	UNUSED						ALL
	H02	UNUSED						ALL
	H03	UNUSED						ALL
	H04	UNUSED						ALL
	H05	UNUSED						ALL
	H06	UNUSED						ALL
	H07	UNUSED						ALL
	H08	UNUSED						ALL
	H09	UNUSED						ALL
	H10	UNUSED						ALL
	J01	UNUSED						ALL
	J02	UNUSED						ALL
	J03	UNUSED						ALL
	J04	UNUSED						ALL
	J05	UNUSED						ALL
	J06	UNUSED						ALL
	J07	UNUSED						ALL
	J08		W0105	901	22		34-45-12	ALL
	J09	UNUSED						ALL
	J10	UNUSED						ALL
	K01	UNUSED						ALL
	K02	UNUSED						ALL
	K03	UNUSED						ALL
	K04	UNUSED						ALL
	K05	UNUSED						ALL
	K06	UNUSED						ALL
	K07		W0105	133	22		34-45-12	ALL
	K08		W0105	902	22		34-45-12	ALL
	K09	UNUSED						ALL
	K10	UNUSED						ALL
	REF		W0105	564	20		34-45-14	ALL
	REF		W0105	564Z			34-45-14	ALL
D02464		P035-00/ /		RCPT-P35				ALL
	A1		W1066	124	22		25-53-17	ALL
	A2		W1066	100	22		25-53-17	ALL
	A3		W1066	125	22		25-53-17	ALL
	B1		W1066	121	22		25-53-17	ALL
	B2		W1066	099	22		25-53-17	ALL

HOOKUP LIST

D280T132

91-21-51

Section D02400

Page 24

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02464		P035-00/ /		RCPT-P35 (continued)				ALL
	B3		W1066	122	22		25-53-17	ALL
	X1		W1066	704	22		25-53-17	ALL
	X2		W1066	598	22		25-53-17	ALL
D02465		380/315/0		PLUG				050-099, 150-199, 277-299
	= A1		W1791	01CX			34-45-11	050-099, 150-199, 277-299
	= C1		W1791	01CO			34-45-11	050-099, 150-199, 277-299
D02466		P035-00/ /		PLUG-				ALL
	1		W1066	596	20		33-37-11	ALL
	2		W1066	592	20		25-53-11	ALL
	3		W1066	890	20		25-53-11	050-099
	3		W1066	599	20		25-53-11	150-199, 275-299
	4	UNUSED						ALL
	5		W1066	502	20		25-53-11	ALL
	6		W1066	595	20		33-37-11	ALL
	7		W1066	593	20		25-53-11	ALL
	8	UNUSED						ALL
D02467		399/102/0000		PLUG				050-099, 150-199, 277-299
	= A1		W1901	01CX			34-45-11	050-099, 150-199, 277-299
	= C1		W1901	01CO			34-45-11	050-099, 150-199, 277-299
D02468		P035-00/ /		PLUG-				050-099
	1	UNUSED						050-099
	2		W1066	571	22		25-53-13	050-099
	3		W1066	573	22		25-53-15	050-099
	4	UNUSED						050-099
	5		W1066	572	22		25-53-13	050-099
	6	UNUSED						050-099
	7		W1066	574	22		25-53-15	050-099
	8	UNUSED						050-099
D02470		P035-00/ /		PLUG-				050-099
	1	UNUSED						050-099
	2		W1066	581	22		25-53-13	050-099
	3		W1066	583	22		25-53-15	050-099
	4	UNUSED						050-099
	5		W1066	582	22		25-53-13	050-099
	6	UNUSED						050-099

HOOKUP LIST
D280T132

91-21-51
Section D02400
Page 25
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02470		P035-00/ /		PLUG- (continued)				050-099
	7		W1066	584	22		25-53-15	050-099
	8	UNUSED						050-099
D02472		P035-00/ /		PLUG-				ALL
	1	UNUSED						ALL
	2		W1066	736	22		25-53-14	ALL
	3		W1066	739	22		25-53-13	ALL
	4	UNUSED						ALL
	5		W1066	737	22		25-53-14	ALL
	6	UNUSED						ALL
	7		W1066	738	22		25-53-14	ALL
	8	UNUSED						ALL
D02476		P035-00/ /		PLUG-				ALL
	1		W1066	805	22		25-53-14	050-099
	1		W1066	738	22		25-53-14	150-199, 275-299
	2		W1066	746	22		25-53-14	ALL
	3		W1066	774	22		25-53-13	050-099
	3		W1066	749	22		25-53-13	150-199, 275-299
	4	UNUSED						ALL
	5		W1066	747	22		25-53-14	ALL
	6		W1066	889	22		25-53-14	050-099
	6		W1066	04X	22		25-53-14	150-199, 275-299
	7		W1066	748	22		25-53-14	ALL
	8	UNUSED						ALL
D02478		P035-00/ /		PLUG-				ALL
	1	UNUSED						ALL
	2		W1066	750	22		25-53-14	ALL
	3		W1066	753	22		25-53-13	ALL
	4	UNUSED						ALL
	5		W1066	751	22		25-53-14	ALL
	6	UNUSED						050-099
	6		W1066	02B	22		25-53-14	150-199, 275-299
	7		W1066	752	22		25-53-14	ALL
	8	UNUSED						050-099
	8		W1066	02C	22		25-53-14	150-199, 275-299
D02483		0410/295/L038		PLUG-COAXIAL				275-299
	= A1		W1801	01CX			23-32-31	275-299

HOOKUP LIST
D280T132

91-21-51
Section D02400
Page 26
Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02483		0410/295/L038		PLUG-COAXIAL (continued)				275-299
	= C1		W1801	01CO			23-32-31	275-299
D02484		P035-00/ /		PLUG-				ALL
	1	UNUSED						ALL
	2		W1066	766	22		25-53-14	050-099
	2		W1066	760	22		25-53-14	150-199, 275-299
	3		W1066	769	22		25-53-13	ALL
	4	UNUSED						ALL
	5		W1066	767	22		25-53-14	ALL
	6	UNUSED						050-099
	6		W1066	34K	22		25-53-14	150-199, 275-299
	7		W1066	768	22		25-53-14	ALL
	8	UNUSED						050-099
	8		W1066	34J	22		25-53-14	150-199, 275-299
D02485		0382/295/R038		PLUG-COAXIAL				275-276
D02485		0410/295/R038		PLUG-COAXIAL				277-299
	= A1		W1803	01CX			23-32-31	275-299
	= C1		W1803	01CO			23-32-31	275-299
D02487		0650/295/L 38		PLUG-COAXIAL				275-278
	= A1		W1805	01CX			23-32-32	275-278
	= C1		W1805	01CO			23-32-32	275-278
D02488		P035-00/ /		PLUG-				ALL
	1	UNUSED						050-099
	1		W1066	781	22		25-53-14	150-199, 275-299
	2		W1066	760	22		25-53-14	050-099
	2		W1066	720	22		25-53-14	150-199, 275-299
	3		W1066	763	22		25-53-13	050-099
	3		W1066	783	22		25-53-13	150-199, 275-299
	4	UNUSED						ALL
	5		W1066	761	22		25-53-14	050-099
	5		W1066	34L	22		25-53-14	150-199, 275-299
	6	UNUSED						050-099
	6		W1066	780	22		25-53-14	150-199, 275-299
	7		W1066	762	22		25-53-14	050-099
	7		W1066	782	22		25-53-14	150-199, 275-299
	8	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D02400
Page 27
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02489		563/295/R 38		PLUG-COAXIAL				275-278
	= A1		W1807	01CX			23-32-32	275-278
	= C1		W1807	01CO			23-32-32	275-278
D02490		P035-00/ /		PLUG-				ALL
	1	UNUSED						050-099
	1		W1066	197	22		25-53-14	150-199, 275-299
	2		W1066	786	22		25-53-14	ALL
	3		W1066	789	22		25-53-13	ALL
	4	UNUSED						ALL
	5		W1066	787	22		25-53-14	ALL
	6	UNUSED						050-099
	6		W1066	198	22		25-53-14	150-199, 275-299
	7		W1066	788	22		25-53-14	ALL
	8	UNUSED						ALL
D02491		563/295/R 38		PLUG				275-278
D02491		541/254/R 73		PLUG				280-299
	1		W1807	001	20		23-32-32	275-299
	2		W1807	003	22		23-32-32	275-299
	3		W1807	006	22		23-32-32	275-299
	4		W1807	002	20		23-32-32	275-299
	5		W1807	007	22		23-32-32	275-299
	6		W1807	008	22		23-32-32	275-299
	7		W1807	009	22		23-32-32	275-299
	8		W1807	004	24		23-32-32	275-299
	9	UNUSED						275-299
	10	UNUSED						275-299
	11	UNUSED						275-278
	12	UNUSED						275-278
	= A1		W1807	01CX			23-32-32	280-299
	= C1		W1807	01CO			23-32-32	280-299
D02492		P035-00/ /		PLUG-				ALL
	1	UNUSED						ALL
	2		W1066	796	22		25-53-14	ALL
	3		W1066	799	22		25-53-13	ALL
	4	UNUSED						ALL
	5		W1066	797	22		25-53-14	ALL
	6	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D02400

Page 28

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02492		P035-00/ /		PLUG- (continued)				ALL
	7		W1066	798	22		25-53-14	ALL
	8	UNUSED						ALL
D02493		654+75/295/L 38		PLUG-COAXIAL				275-278
D02493		654+103/289/L033		PLUG-COAXIAL				280-299
	= A1		W1817	01CX			23-32-41	275-299
	= C1		W1817	01CO			23-32-41	275-299
D02494		P035-00/ /		PLUG-				050-099
	1		W1066	721	22		25-53-14	050-099
	2		W1066	722	22		25-53-14	050-099
	3		W1066	729	22		25-53-13	050-099
	4	UNUSED						050-099
	5		W1066	723	22		25-53-14	050-099
	6		W1066	720	22		25-53-14	050-099
	7		W1066	728	22		25-53-13	050-099
	8	UNUSED						050-099
D02495		654+75/295/R 38		PLUG-COAXIAL				275-278
D02495		654+103/290/R044		PLUG-COAXIAL				280-299
	= A1		W1819	01CX			23-32-41	275-299
	= C1		W1819	01CO			23-32-41	275-299
D02496		P035-00/ /		PLUG-				050-099
	1		W1066	711	22		25-53-14	050-099
	2		W1066	712	22		25-53-14	050-099
	3		W1066	719	22		25-53-13	050-099
	4	UNUSED						050-099
	5		W1066	713	22		25-53-14	050-099
	6		W1066	710	22		25-53-14	050-099
	7		W1066	718	22		25-53-13	050-099
	8	UNUSED						050-099
D02497		1172/280/L 38		PLUG-COAXIAL				275-299
	= A1		W1841	01CX			23-32-53	275-299
	= C1		W1841	01CO			23-32-53	275-299
D02499		1172/280/R 38		PLUG-COAXIAL				275-299
	= A1		W1843	01CX			23-32-53	275-299

HOOKUP LIST
D280T132

91-21-51
Section D02400
Page 29
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02499		1172/280/R 38		PLUG-COAXIAL (continued)				275-299
	= C1		W1843	01CO			23-32-53	275-299

HOOKUP LIST
D280T132

91-21-51
Section D02400
Page 30 End
Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02501		1172/280/R 38		PLUG				275-299
	1		W1843	001	20		23-32-53	275-299
	2		W1843	003	22		23-32-53	275-299
	3		W1843	006	22		23-32-53	275-299
	4		W1843	002	20		23-32-53	275-299
	5		W1843	007	22		23-32-53	275-299
	6		W1843	008	22		23-32-53	275-299
	7		W1843	009	22		23-32-53	275-299
	8		W1843	004	24		23-32-53	275-299
	9	UNUSED						275-299
	10	UNUSED						275-299
	11	UNUSED						275-299
	12	UNUSED						275-299
D02502		P035-00/ /		PLUG-				ALL
	A1		W1066	164	20		52-34-11	ALL
	A2		W1066	161	20		52-34-11	ALL
	A3		W1066	167	20		52-34-11	ALL
	B1		W1066	165	20		52-34-11	ALL
	B2		W1066	162	20		52-34-11	ALL
	B3		W1066	168	20		52-34-11	ALL
	C1		W1066	166	20		52-34-11	ALL
	C2		W1066	163	20		52-34-11	ALL
	C3		W1066	169	20		52-34-11	ALL
	D1	UNUSED						ALL
	D2	UNUSED						ALL
	D3	UNUSED						ALL
	G1	UNUSED						ALL
	G2		W1066	PB1			99-99-99	ALL
	G3		W1066	PB1			99-99-99	ALL
	X1		W1066	828	24		52-34-12	ALL
	X2		W1066	528	24		52-34-12	ALL
D02504		P035-00/ /		PLUG-				ALL
	A1		W1066	167	20		52-34-11	ALL
	A2		W1066	174	20		52-34-11	ALL
	A3		W1066	164	20		52-34-11	ALL
	B1		W1066	169	20		52-34-11	ALL
	B2		W1066	175	20		52-34-11	ALL
	B3		W1066	165	20		52-34-11	ALL
	C1		W1066	168	20		52-34-11	ALL

HOOKUP LIST
D280T132

91-21-51
Section D02500
Page 1
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02504		P035-00/ /		PLUG- (continued)				ALL
	C2		W1066	176	20		52-34-11	ALL
	C3		W1066	166	20		52-34-11	ALL
	D1	UNUSED						ALL
	D2	UNUSED						ALL
	D3	UNUSED						ALL
	G1	UNUSED						ALL
	G2		W1066	PC1			99-99-99	ALL
	G3		W1066	PC1			99-99-99	ALL
	X1		W1066	829	24		52-34-12	ALL
	X2		W1066	529	24		52-34-12	ALL
D02506		P035-00/ /		PLUG-				ALL
	A1		W1066	154	20		52-34-11	ALL
	A2		W1066	151	20		52-34-11	ALL
	A3		W1066	157	20		52-34-11	ALL
	B1		W1066	155	20		52-34-11	ALL
	B2		W1066	152	20		52-34-11	ALL
	B3		W1066	158	20		52-34-11	ALL
	C1		W1066	156	20		52-34-11	ALL
	C2		W1066	153	20		52-34-11	ALL
	C3		W1066	159	20		52-34-11	ALL
	D1	UNUSED						ALL
	D2	UNUSED						ALL
	D3	UNUSED						ALL
	X1		W1066	824	24		52-34-12	ALL
	X2		W1066	524	24		52-34-12	ALL
D02508		P035-00/ /		PLUG-				ALL
	A1		W1066	157	20		52-34-11	ALL
	A2		W1066	171	20		52-34-11	ALL
	A3		W1066	154	20		52-34-11	ALL
	B1		W1066	159	20		52-34-11	ALL
	B2		W1066	172	20		52-34-11	ALL
	B3		W1066	155	20		52-34-11	ALL
	C1		W1066	158	20		52-34-11	ALL
	C2		W1066	173	20		52-34-11	ALL
	C3		W1066	156	20		52-34-11	ALL
	D1	UNUSED						ALL
	D2	UNUSED						ALL
	D3	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D02500

Page 2

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02508		P035-00/ /		PLUG- (continued)				ALL
	X1		W1066	825	24		52-34-12	ALL
	X2		W1066	525	24		52-34-12	ALL
D02510		P039-00/ /		RELAY SOCKET-				ALL
	A1		W1068	144	20		52-35-11	ALL
	A2		W1068	141	20		52-35-11	ALL
	A3	UNUSED						ALL
	B1		W1068	145	20		52-35-11	ALL
	B2		W1068	142	20		52-35-11	ALL
	B3	UNUSED						ALL
	C1		W1068	146	20		52-35-11	ALL
	C2		W1068	143	20		52-35-11	ALL
	C3	UNUSED						ALL
	D1	UNUSED						ALL
	D2	UNUSED						ALL
	D3	UNUSED						ALL
	G1	UNUSED						ALL
	G2		W1068	PB1			99-99-99	ALL
	G3		W1068	PB1			99-99-99	ALL
	X1		W1068	822	24		52-35-12	ALL
	X2		W1068	823	24		52-35-12	ALL
D02512		P039-00/ /		RELAY SOCKET-				ALL
	A1		W1068	164	20		52-35-11	ALL
	A2		W1068	161	20		52-35-11	ALL
	A3		W1068	167	20		52-35-11	ALL
	B1		W1068	165	20		52-35-11	ALL
	B2		W1068	162	20		52-35-11	ALL
	B3		W1068	168	20		52-35-11	ALL
	C1		W1068	166	20		52-35-11	ALL
	C2		W1068	163	20		52-35-11	ALL
	C3		W1068	169	20		52-35-11	ALL
	D1	UNUSED						ALL
	D2	UNUSED						ALL
	D3	UNUSED						ALL
	G1	UNUSED						ALL
	G2		W1068	PA1			99-99-99	ALL
	G3		W1068	PA1			99-99-99	ALL
	X1		W1068	828	24		52-35-12	ALL
	X2		W1068	528	24		52-35-12	ALL

HOOKUP LIST
D280T132

91-21-51
Section D02500
Page 3
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02513		858/260/R 70		PLUG				275-278
D02513		654+74/254/R073		PLUG				280-299
	1		W1823	001	20		23-32-42	275-299
	2		W1823	003	22		23-32-42	275-299
	3		W1823	006	22		23-32-42	275-299
	4		W1823	002	20		23-32-42	275-299
	5		W1823	007	22		23-32-42	275-299
	6		W1823	008	22		23-32-42	275-299
	7		W1823	009	22		23-32-42	275-299
	8		W1823	004	24		23-32-42	275-299
	9	UNUSED						275-299
	10	UNUSED						275-299
	= A1		W1823	01CX			23-32-42	275-299
	= C1		W1823	01CO			23-32-42	275-299
D02514		P039-00/ /		RELAY SOCKET-				ALL
	A1		W1068	167	20		52-35-11	ALL
	A2		W1068	174	20		52-35-11	ALL
	A3		W1068	164	20		52-35-11	ALL
	B1		W1068	169	20		52-35-11	ALL
	B2		W1068	175	20		52-35-11	ALL
	B3		W1068	165	20		52-35-11	ALL
	C1		W1068	168	20		52-35-11	ALL
	C2		W1068	176	20		52-35-11	ALL
	C3		W1068	166	20		52-35-11	ALL
	D1	UNUSED						ALL
	D2	UNUSED						ALL
	D3	UNUSED						ALL
	G1	UNUSED						ALL
	G2		W1068	PC1			99-99-99	ALL
	G3		W1068	PC1			99-99-99	ALL
	X1		W1068	829	24		52-35-12	ALL
	X2		W1068	529	24		52-35-12	ALL
D02516		P039-00/ /		RELAY SOCKET-				ALL
	A1		W1068	154	20		52-35-11	ALL
	A2		W1068	151	20		52-35-11	ALL
	A3		W1068	157	20		52-35-11	ALL
	B1		W1068	155	20		52-35-11	ALL
	B2		W1068	152	20		52-35-11	ALL
	B3		W1068	158	20		52-35-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D02500

Page 4

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02516		P039-00/ /		RELAY SOCKET- (continued)				ALL
	C1		W1068	156	20		52-35-11	ALL
	C2		W1068	153	20		52-35-11	ALL
	C3		W1068	159	20		52-35-11	ALL
	D1	UNUSED						ALL
	D2	UNUSED						ALL
	D3	UNUSED						ALL
	X1		W1068	824	24		52-35-12	ALL
	X2		W1068	524	24		52-35-12	ALL
D02517		PURSER/STA/		PLUG				150-199
	A	UNUSED						150-199
	B	UNUSED						150
	B		W0047	527	24		23-31-12	151-199
	C	UNUSED						150
	C		W0047	529	24		23-31-12	151-199
	D	UNUSED						150
	D		W0047	528	24		23-31-12	151-199
	E	UNUSED						150
	E		W0047	532	24		23-31-12	151-199
	F	UNUSED						150-199
	G	UNUSED						150-199
	H	UNUSED						150
	H		W0047	294R	24		23-31-12	151-199
	J	UNUSED						150
	J		W0047	294B	24		23-31-12	151-199
	K	UNUSED						150
	K		W0047	536	24		23-34-14	151-199
	L		W0047	536Z			23-34-14	150-199
	M	UNUSED						150
	M		W0047	537	24		23-34-14	151-199
	N		W0047	537Z			23-34-14	150-199
	P	UNUSED						150-199
	R	UNUSED						150-199
	S	UNUSED						150-199
	T	UNUSED						150-199
	U	UNUSED						150-199
	V	UNUSED						150
	V		W0047	531	24		23-31-12	151-199
	W	UNUSED						150-199
	X	UNUSED						150-199

HOOKUP LIST
D280T132

91-21-51
Section D02500
Page 5
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02517		PURSER/STA/		PLUG (continued)				150-199
	Y	UNUSED						150-199
	Z	UNUSED						150-199
	CAP	Y	W0047	294B	24		23-31-12	150
	CAP	Y	W0047	294R	24		23-31-12	150
	CAP	Y	W0047	527	24		23-31-12	150
	CAP	Y	W0047	528	24		23-31-12	150
	CAP	Y	W0047	529	24		23-31-12	150
	CAP	Y	W0047	531	24		23-31-12	150
	CAP	Y	W0047	532	24		23-31-12	150
	CAP	Y	W0047	536	24		23-34-14	150
	CAP	Y	W0047	537	24		23-34-14	150
	DED		W0047	294Z			23-31-12	150-199
	A-	UNUSED						150-199
	B-	UNUSED						150-199
	C-	UNUSED						150-199
D02518		P039-00/ /		RELAY SOCKET-				ALL
	A1		W1068	157	20		52-35-11	ALL
	A2		W1068	171	20		52-35-11	ALL
	A3		W1068	154	20		52-35-11	ALL
	B1		W1068	159	20		52-35-11	ALL
	B2		W1068	172	20		52-35-11	ALL
	B3		W1068	155	20		52-35-11	ALL
	C1		W1068	158	20		52-35-11	ALL
	C2		W1068	173	20		52-35-11	ALL
	C3		W1068	156	20		52-35-11	ALL
	D1	UNUSED						ALL
	D2	UNUSED						ALL
	D3	UNUSED						ALL
	X1		W1068	825	24		52-35-12	ALL
	X2		W1068	525	24		52-35-12	ALL
D02519		296/147/R 21		PLUG-				050-099, 150-199
	1	UNUSED						050-099, 150-199
	2	UNUSED						050-099, 150-199
	3	UNUSED						050-099, 150-199
	4	UNUSED						050-099, 150-199
	5	UNUSED						050-099, 150-199
	6	UNUSED						050-099, 150-199
	7	UNUSED						050-099, 150-199

HOOKUP LIST

D280T132

91-21-51

Section D02500

Page 6

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02519		296/147/R 21		PLUG- (continued)				050-099, 150-199
	8	UNUSED						050-099, 150-199
	9	UNUSED						050-099, 150-199
	10	UNUSED						050-099, 150-199
	11	UNUSED						050-099, 150-199
	12	UNUSED						050-099, 150-199
	13	UNUSED						050-099, 150-199
	14		W0645	068	24		23-32-12	050-099, 150-199
	15		W0645	068Z			23-32-12	050-099, 150-199
	16		W0645	067	24		23-32-12	050-099, 150-199
	17		W0645	067Z			23-32-12	050-099, 150-199
	18	UNUSED						050-099, 150-199
	19	UNUSED						050-099, 150-199
	20		W0645	614	22		23-32-12	050-099, 150-199
	21		W0645	615	22		23-32-12	050-099, 150-199
	22	UNUSED						050-099, 150-199
	23		W0645	184	24		23-34-14	050-099, 150-199
	24		W0645	184Z			23-34-14	050-099, 150-199
	25		W0645	185	24		23-34-14	050-099, 150-199
	26		W0645	185Z			23-34-14	050-099, 150-199
	27	UNUSED						050-099, 150-199
	28	UNUSED						050-099, 150-199
	29		W0645	192	24		23-34-14	050-099, 150-199
	30		W0645	192Z			23-34-14	050-099, 150-199
	31		W0645	191	24		23-34-14	050-099, 150-199
	32		W0645	191Z			23-34-14	050-099, 150-199
	33		W0645	225R	24		23-34-14	050-099, 150-199
	34		W0645	225B	24		23-34-14	050-099, 150-199
	35		W0645	224R	24		23-34-14	050-099, 150-199
	36		W0645	224B	24		23-34-14	050-099, 150-199
	37	UNUSED						050-099, 150-199
	38	UNUSED						050-099, 150-199
	39		W0645	193	22		23-34-11	050-099, 150-199
	40		W0645	194	20		23-34-11	050-099, 150-199
	41	UNUSED						050-099, 150-199
	42		W0645	189	24		23-34-14	050-099, 150-199
	43		W0645	189Z			23-34-14	050-099, 150-199
	44		W0645	190	24		23-34-14	050-099, 150-199
	45		W0645	190Z			23-34-14	050-099, 150-199
	46	UNUSED						050-099, 150-199
	47	UNUSED						050-099, 150-199

HOOKUP LIST
D280T132

91-21-51
Section D02500
Page 7
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02519		296/147/R 21		PLUG- (continued)				050-099, 150-199
	48		W0645	224R	24		23-34-14	050-099, 150-199
	49		W0645	224B	24		23-34-14	050-099, 150-199
	50		W0645	225R	24		23-34-14	050-099, 150-199
	51		W0645	225B	24		23-34-14	050-099, 150-199
	52		W0645	066	24		23-32-12	050-099, 150-199
	53		W0645	066Z			23-32-12	050-099, 150-199
	54		W0645	065	24		23-32-12	050-099, 150-199
	55		W0645	065Z			23-32-12	050-099, 150-199
D02520		P035-00/ /		PLUG-				ALL
	1		W1066	832	20		26-16-21	ALL
	2		W1066	833	20		26-16-21	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W1066	830	20		26-16-21	ALL
	7		W1066	834	20		26-16-21	ALL
	8		W1066	835	20		26-16-21	ALL
	9		W1066	183	20		26-16-21	ALL
	10		W1066	184	20		26-16-21	ALL
	11		W1066	180	20		26-16-21	ALL
	12		W1066	831	20		26-16-21	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
D02522		P035-00/ /		PLUG-				ALL
	1		W1066	852	20		26-16-21	ALL
	2		W1066	853	20		26-16-21	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W1066	850	20		26-16-21	ALL
	7		W1066	854	20		26-16-21	ALL
	8		W1066	855	20		26-16-21	ALL
	9		W1066	193	20		26-16-21	ALL
	10		W1066	194	20		26-16-21	ALL
	11		W1066	190	20		26-16-21	ALL
	12		W1066	851	20		26-16-21	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D02500

Page 8

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02524		P035-00/ /		PLUG-				ALL
	1		W1066	845	20		26-16-21	ALL
	2	UNUSED						ALL
	3		W1066	841	20		26-16-21	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W1066	844	20		26-16-21	ALL
	7		W1066	840	20		26-16-21	ALL
	8	UNUSED						ALL
D02526		P035-00/ /		PLUG-				ALL
	1		W1066	865	20		26-16-21	ALL
	2	UNUSED						ALL
	3		W1066	861	20		26-16-21	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W1066	864	20		26-16-21	ALL
	7		W1066	860	20		26-16-21	ALL
	8	UNUSED						ALL
D02528		P035-00/ /		PLUG-				ALL
	A1		W1066	055	20		33-37-11	050-099
	A1		W1066	055	18		33-37-11	150-199, 275-299
	A2		W1066	056	20		33-37-11	050-099
	A2		W1066	056	18		33-37-11	150-199, 275-299
	A3	UNUSED						ALL
	B1		W1066	061	20		33-31-61	ALL
	B2		W1066	062	20		33-31-61	ALL
	B3	UNUSED						ALL
	C1		W1066	064	18		33-37-11	050-099
	C1		W1066	064	16		33-37-11	150-199, 275-299
	C2		W1066	065	18		33-37-11	050-099
	C2		W1066	065	16		33-37-11	150-199, 275-299
	C3	UNUSED						ALL
	D1		W1066	075	20		33-31-61	ALL
	D2		W1066	076	20		33-31-61	ALL
	D3	UNUSED						ALL
	G1	UNUSED						ALL
	G2		W1066	PD1			99-99-99	ALL
	G3		W1066	PD1			99-99-99	ALL
	X1		W1066	594	20		33-37-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D02500

Page 9

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02528		P035-00/ /		PLUG- (continued)				ALL
	X2		W1066	595	20		33-37-11	ALL
D02529		380/315/0		PLUG				050-099, 150-199, 277-299
	= A1		W1795	01CX			34-45-11	050-099, 150-199, 277-299
	= C1		W1795	01CO			34-45-11	050-099, 150-199, 277-299
D02530		P039-00/ /		RELAY SOCKET-				ALL
	1		W1068	651	22		25-53-24	ALL
	2		W1068	652	22		25-53-24	ALL
	3		W1068	659	22		25-53-23	ALL
	4	UNUSED						ALL
	5		W1068	653	22		25-53-24	ALL
	6		W1068	650	22		25-53-24	ALL
	7		W1068	658	22		25-53-23	ALL
	8	UNUSED						ALL
D02531		380/315/0		PLUG				050-099, 150-199, 277-299
	= A1		W1797	01CX			34-45-11	050-099, 150-199, 277-299
	= C1		W1797	01CO			34-45-11	050-099, 150-199, 277-299
D02532		P039-00/ /		RELAY SOCKET-				ALL
	1		W1068	641	22		25-53-24	ALL
	2		W1068	642	22		25-53-24	ALL
	3		W1068	649	22		25-53-23	ALL
	4	UNUSED						ALL
	5		W1068	643	22		25-53-24	ALL
	6		W1068	640	22		25-53-24	ALL
	7		W1068	648	22		25-53-23	ALL
	8	UNUSED						ALL
D02533		380/315/0		PLUG				050-099, 150-199, 277-299
	= A1		W1799	01CX			34-45-11	050-099, 150-199, 277-299
	= C1		W1799	01CO			34-45-11	050-099, 150-199, 277-299
D02534		P039-00/ /		RELAY SOCKET-				050-099
	A1		W1068	671	22		25-53-24	050-099
	A2		W1068	670	22		25-53-24	050-099
	A3	UNUSED						050-099
	B1		W1068	673	22		25-53-24	050-099

HOOKUP LIST

D280T132

91-21-51

Section D02500

Page 10

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02534		P039-00/ /		RELAY SOCKET- (continued)				050-099
	B2		W1068	672	22		25-53-24	050-099
	B3	UNUSED						050-099
	C1	UNUSED						050-099
	C2		W1068	676	22		25-53-24	050-099
	C3		W1068	677	22		25-53-24	050-099
	D1	UNUSED						050-099
	D2	UNUSED						050-099
	D3	UNUSED						050-099
	X1		W1068	678	22		25-53-23	050-099
	X2		W1068	679	22		25-53-23	050-099
D02535		P21/ /		RECP-P21				050-099
	1		W9006	003	24		23-31-11	050-099
	2		W9006	002	24		23-31-11	050-099
	3		W9006	001B	24		23-31-11	050-099
	4		W9006	001R	24		23-31-11	050-099
	5	UNUSED						050-099
	6	UNUSED						050-099
	7	UNUSED						050-099
	8	UNUSED						050-099
	9	UNUSED						050-099
	10	UNUSED						050-099
	11	UNUSED						050-099
	12	UNUSED						050-099
	13	UNUSED						050-099
	14	UNUSED						050-099
	15	UNUSED						050-099
	16	UNUSED						050-099
	17	UNUSED						050-099
	18	UNUSED						050-099
	19	UNUSED						050-099
	20	UNUSED						050-099
	21	UNUSED						050-099
	22	UNUSED						050-099
	23	UNUSED						050-099
	24	UNUSED						050-099
	25	UNUSED						050-099
	26	UNUSED						050-099
	27	UNUSED						050-099
	28	UNUSED						050-099

HOOKUP LIST
D280T132

91-21-51
Section D02500
Page 11
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02535		P21/ /		RECP-P21 (continued)				050-099
	29	UNUSED						050-099
	30	UNUSED						050-099
	31	UNUSED						050-099
	32	UNUSED						050-099
	33	UNUSED						050-099
	34	UNUSED						050-099
	35	UNUSED						050-099
	36	UNUSED						050-099
	37	UNUSED						050-099
	38	UNUSED						050-099
	39	UNUSED						050-099
	40	UNUSED						050-099
	41	UNUSED						050-099
	42	UNUSED						050-099
	43	UNUSED						050-099
	44	UNUSED						050-099
	45	UNUSED						050-099
	46	UNUSED						050-099
	47	UNUSED						050-099
	48	UNUSED						050-099
	49	UNUSED						050-099
	50	UNUSED						050-099
	51	UNUSED						050-099
	52	UNUSED						050-099
	53	UNUSED						050-099
	54	UNUSED						050-099
	= C27	UNUSED						050-099
	DED		W9006	001Z			23-31-11	050-099
D02536		P039-00/ /		RELAY SOCKET-				050-099
	A1		W1068	661	22		25-53-24	050-099
	A2		W1068	660	22		25-53-24	050-099
	A3	UNUSED						050-099
	B1		W1068	663	22		25-53-24	050-099
	B2		W1068	662	22		25-53-24	050-099
	B3	UNUSED						050-099
	C1	UNUSED						050-099
	C2		W1068	687	22		25-53-24	050-099
	C3		W1068	677	22		25-53-24	050-099
	D1	UNUSED						050-099

HOOKUP LIST

D280T132

91-21-51

Section D02500

Page 12

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02536		P039-00/ /		RELAY SOCKET- (continued)				050-099
	D2	UNUSED						050-099
	D3	UNUSED						050-099
	X1		W1068	668	22		25-53-23	050-099
	X2		W1068	669	22		25-53-23	050-099
D02538		P039-00/ /		RELAY SOCKET-				050-099
	A1		W1068	681	22		25-53-24	050-099
	A2		W1068	680	22		25-53-24	050-099
	A3	UNUSED						050-099
	B1		W1068	683	22		25-53-24	050-099
	B2		W1068	682	22		25-53-24	050-099
	B3	UNUSED						050-099
	C1	UNUSED						050-099
	C2		W1068	848	22		25-53-24	050-099
	C3		W1068	685	22		25-53-24	050-099
	D1	UNUSED						050-099
	D2		W1068	849	22		25-53-26	050-099
	D3		W1068	191	22		25-53-26	050-099
	X1		W1068	688	22		25-53-23	050-099
	X2		W1068	689	22		25-53-23	050-099
D02539		AE0316/ /		PLUG-E2-3 COAX				050-099, 150-199, 277-299
	= A1		W1709	01CX			34-45-11	050-099, 150-199, 277-299
	= C1		W1709	01CO			34-45-11	050-099, 150-199, 277-299
D02540		P039-00/ /		RELAY SOCKET-				050-099
	1		W1068	701	22		25-53-24	050-099
	2		W1068	702	22		25-53-24	050-099
	3		W1068	709	22		25-53-23	050-099
	4	UNUSED						050-099
	5		W1068	703	22		25-53-24	050-099
	6		W1068	700	22		25-53-24	050-099
	7		W1068	708	22		25-53-23	050-099
	8	UNUSED						050-099
D02541		AE0316/ /		PLUG				ALL
	= A1		W1773	01CX			34-53-21	ALL
	= C1		W1773	01CO			34-53-21	ALL

HOOKUP LIST
D280T132

91-21-51
Section D02500
Page 13
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02542		P039-00/ /		RELAY SOCKET-				050-099
	1		W1068	691	22		25-53-24	050-099
	2		W1068	692	22		25-53-24	050-099
	3		W1068	699	22		25-53-23	050-099
	4	UNUSED						050-099
	5		W1068	693	22		25-53-24	050-099
	6		W1068	690	22		25-53-24	050-099
	7		W1068	698	22		25-53-23	050-099
	8	UNUSED						050-099
D02543		***/ /		PLUG				ALL
	= A1		W1773	01CX			34-53-21	ALL
	= C1		W1773	01CO			34-53-21	ALL
D02544		P039-00/ /		RELAY SOCKET-				ALL
	1		W1068	550	22		25-53-23	ALL
	2		W1068	698	22		25-53-23	ALL
	3		W1068	553	22		25-53-23	ALL
	4		W1068	708	22		25-53-23	ALL
	5		W1068	552	22		25-53-23	ALL
	6		W1068	845	22		25-53-23	050-099
	6		W1068	149	22		25-53-23	150-199, 275-299
	7		W1068	518	22		25-53-25	ALL
	8		W1068	557	22		25-53-25	ALL
	9		W1068	555	22		25-53-23	ALL
	10		W1068	558	22		25-53-23	ALL
	11		W1068	554	22		25-53-23	050-099
	11		W1068	34M	22		25-53-23	150-199, 275-299
	12		W1068	559	22		25-53-23	ALL
	13		W1068	551	22		25-53-23	ALL
	14		W1068	556	22		25-53-25	ALL
D02546		P039-00/ /		RELAY SOCKET-				ALL
	1		W1068	611	22		25-53-24	ALL
	2		W1068	612	22		25-53-24	ALL
	3		W1068	619	22		25-53-23	ALL
	4	UNUSED						ALL
	5		W1068	613	22		25-53-24	ALL
	6		W1068	610	22		25-53-24	ALL
	7		W1068	618	22		25-53-23	ALL

HOOKUP LIST

D280T132

91-21-51

Section D02500

Page 14

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02546		P039-00/ /		RELAY SOCKET- (continued)				ALL
	8	UNUSED						ALL
D02548		P039-00/ /		RELAY SOCKET-				ALL
	1		W1068	601	22		25-53-24	ALL
	2		W1068	602	22		25-53-24	ALL
	3		W1068	609	22		25-53-23	ALL
	4	UNUSED						ALL
	5		W1068	603	22		25-53-24	ALL
	6		W1068	600	22		25-53-24	ALL
	7		W1068	608	22		25-53-23	ALL
	8	UNUSED						ALL
D02550		P039-00/ /		RELAY SOCKET-				ALL
	1		W1068	631	22		25-53-24	ALL
	2		W1068	632	22		25-53-24	ALL
	3		W1068	639	22		25-53-23	ALL
	4	UNUSED						ALL
	5		W1068	633	22		25-53-24	ALL
	6		W1068	630	22		25-53-24	ALL
	7		W1068	638	22		25-53-23	ALL
	8	UNUSED						ALL
D02552		P039-00/ /		RELAY SOCKET-				ALL
	1		W1068	621	22		25-53-24	ALL
	2		W1068	622	22		25-53-24	ALL
	3		W1068	629	22		25-53-23	ALL
	4	UNUSED						ALL
	5		W1068	623	22		25-53-24	ALL
	6		W1068	620	22		25-53-24	ALL
	7		W1068	628	22		25-53-23	ALL
	8	UNUSED						ALL
D02554		P039-00/ /		RELAY SOCKET-				ALL
	A1		W1068	132	22		25-53-26	ALL
	A2		W1068	130	22		25-53-26	ALL
	A3		W1068	113	22		25-53-26	ALL
	B1		W1068	135	22		25-53-26	ALL
	B2		W1068	133	22		25-53-26	ALL
	B3		W1068	115	22		25-53-26	ALL
	C1		W1068	117	22		25-53-26	ALL

HOOKUP LIST

D280T132

91-21-51
Section D02500
Page 15
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02554		P039-00/ /		RELAY SOCKET- (continued)				ALL
	C2		W1068	092	22		25-53-26	ALL
	C3		W1068	118	22		25-53-26	ALL
	D1		W1068	119	22		25-53-26	ALL
	D2		W1068	093	22		25-53-26	ALL
	D3		W1068	120	22		25-53-26	ALL
	X1		W1068	37K	22		25-53-26	ALL
	X2		W1068	578	22		25-53-26	ALL
D02555		SHELF/E02/05		PLUG-				275-299
	A1	UNUSED						275-299
	A2		W0149	791	24		23-34-13	275-299
	A3		W0149	707	24		23-34-13	275-299
	B1	UNUSED						275-299
	B2		W0149	792	24		23-34-13	275-299
	B3		W0149	709	24		23-34-13	275-299
	C1	UNUSED						275-299
	C2		W0149	787	24		23-34-13	275-299
	C3		W0149	706	24		23-34-13	275-299
	D1	UNUSED						275-299
	D2		W0149	788	24		23-34-13	275-299
	D3		W0149	708	24		23-34-13	275-299
	X1		W0149	704	24		23-34-13	275-299
	X2		W0149	705	20		23-34-13	275-299
D02556		P039-00/ /		RELAY SOCKET-				ALL
	A1		W1068	131	22		25-53-26	ALL
	A2		W1068	094	22		25-53-26	ALL
	A3		W1068	130	22		25-53-26	ALL
	B1		W1068	134	22		25-53-26	ALL
	B2		W1068	095	22		25-53-26	ALL
	B3		W1068	133	22		25-53-26	ALL
	C1		W1068	774	22		25-53-24	ALL
	C2		W1068	684	22		25-53-24	ALL
	C3	UNUSED						ALL
	D1		W1068	777	22		25-53-24	ALL
	D2		W1068	664	22		25-53-24	ALL
	D3	UNUSED						ALL
	X1		W1068	37L	22		25-53-26	ALL
	X2		W1068	579	22		25-53-26	ALL

HOOKUP LIST

D280T132

91-21-51

Section D02500

Page 16

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02557		SHELF/E02/05		PLUG-				275-299
	A1	UNUSED						275-299
	A2		W0149	781	24		23-34-13	275-299
	A3		W0149	783	24		23-34-13	275-299
	B1	UNUSED						275-299
	B2		W0149	782	24		23-34-13	275-299
	B3		W0149	785	24		23-34-13	275-299
	X1		W0149	703	24		23-34-13	275-299
	X2		W0149	701	20		23-34-13	275-299
D02558		P039-00/ /		RELAY SOCKET-				ALL
	A1		W1068	102	22		25-53-25	ALL
	A2		W1068	071	22		25-53-25	ALL
	A3		W1068	101	22		25-53-25	ALL
	B1		W1068	104	22		25-53-25	ALL
	B2		W1068	072	22		25-53-25	ALL
	B3		W1068	103	22		25-53-25	ALL
	C1		W1068	106	22		25-53-25	ALL
	C2		W1068	073	22		25-53-25	ALL
	C3		W1068	105	22		25-53-25	ALL
	D1		W1068	37C	22		25-53-25	ALL
	D2		W1068	37B	22		25-53-25	ALL
	D3		W1068	37A	22		25-53-25	ALL
	X1		W1068	575	22		25-53-25	050-099
	X1		W1068	556	22		25-53-25	150-199, 275-299
	X2		W1068	576	22		25-53-25	ALL
D02560		P039-00/ /		RELAY SOCKET-				ALL
	A1		W1068	108	22		25-53-25	ALL
	A2		W1068	081	22		25-53-25	ALL
	A3		W1068	107	22		25-53-25	ALL
	B1		W1068	110	22		25-53-25	ALL
	B2		W1068	082	22		25-53-25	ALL
	B3		W1068	109	22		25-53-25	ALL
	C1		W1068	112	22		25-53-25	ALL
	C2		W1068	083	22		25-53-25	ALL
	C3		W1068	111	22		25-53-25	ALL
	D1		W1068	37F	22		25-53-25	ALL
	D2		W1068	37E	22		25-53-25	ALL
	D3		W1068	37D	22		25-53-25	ALL

HOOKUP LIST

D280T132

91-21-51

Section D02500

Page 17

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02560		P039-00/ /		RELAY SOCKET- (continued)				ALL
	X1		W1068	585	22		25-53-25	050-099
	X1		W1068	557	22		25-53-25	150-199, 275-299
	X2		W1068	586	22		25-53-25	ALL
D02562		P039-00/ /		RELAY-SOCKET				050-099
D02562		P039-00/ /		RELAY SOCKET				150-199
	A1	UNUSED						050-099, 150-199
	A2		W1068	098	22		25-53-27	050-099, 150-199
	A3		W1068	126	22		25-53-27	050-099, 150-199
	B1	UNUSED						050-099, 150-199
	B2		W1068	097	22		25-53-27	050-099, 150-199
	B3		W1068	123	22		25-53-27	050-099, 150-199
	X1		W1068	507	22		25-53-27	050-099, 150-199
	X2		W1068	597	22		25-53-27	050-099
	X2		W1068	177	22		25-53-27	150-199
D02564		P039-00/ /		RELAY-SOCKET				050-099
D02564		P039-00/ /		RELAY SOCKET				150-199
	A1		W1068	124	22		25-53-27	050-099, 150-199
	A2		W1068	100	22		25-53-27	050-099, 150-199
	A3		W1068	125	22		25-53-27	050-099, 150-199
	B1		W1068	121	22		25-53-27	050-099, 150-199
	B2		W1068	099	22		25-53-27	050-099, 150-199
	B3		W1068	122	22		25-53-27	050-099, 150-199
	X1		W1068	37R	22		25-53-27	050-099, 150-199
	X2		W1068	598	22		25-53-27	050-099, 150-199
D02566		P039-00/ /		RELAY SOCKET-				ALL
	1		W1068	596	20		33-37-21	ALL
	2		W1068	592	20		25-53-21	ALL
	3		W1068	599	20		25-53-21	050-099
	3		W1068	597	20		25-53-21	150-199, 275-299
	4	UNUSED						ALL
	5		W1068	502	20		25-53-21	ALL
	6		W1068	595	20		33-37-21	ALL
	7		W1068	593	20		25-53-21	ALL
	8	UNUSED						ALL
D02567		0345/272/L 60		PLUG				275-299
	1		W0069	001	24		23-31-12	275-299

HOOKUP LIST

D280T132

91-21-51

Section D02500

Page 18

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02567		0345/272/L 60		PLUG (continued)				275-299
	2	UNUSED						275-299
	3		W0069	003	24		23-31-12	275-299
	4	UNUSED						275-299
	5		W0069	005	22		23-31-12	275-278
	5		W0069	005	20		23-31-12	280-299
	6		W0069	202R	24		23-31-12	275-299
	7		W0069	201R	24		23-31-12	275-299
	8	UNUSED						275-299
	9	UNUSED						275-299
	10	UNUSED						275-299
	11	UNUSED						275-299
	12		W0069	012	24		23-31-12	275-299
	13	UNUSED						275-299
	14		W0069	014	24		23-31-12	275-299
	15	UNUSED						275-299
	16	UNUSED						275-299
	17		W0069	202B	24		23-31-12	275-299
	18		W0069	201B	24		23-31-12	275-299
	19	UNUSED						275-299
	20		W0069	020	22		23-31-12	275-299
	21		W0069	021	22		23-31-12	275-278
	21		W0069	021	20		23-31-12	280-299
	22	UNUSED						275-299
	23		W0069	023	22		23-31-12	275-278
	23		W0069	023	20		23-31-12	280-299
	24		W0069	024	24		23-31-12	275-299
	DED		W0069	201Z			23-31-12	275-299
	DED		W0069	202Z			23-31-12	275-299
	DED		W0069	001Z			23-31-12	280-299
	DED		W0069	003Z			23-31-12	280-299
	DED		W0069	012Z			23-31-12	280-299
	DED		W0069	014Z			23-31-12	280-299
	DED		W0069	024Z			23-31-12	280-299
D02568		P039-00/ /		RELAY SOCKET-				050-099
	1	UNUSED						050-099
	2		W1068	571	22		25-53-23	050-099
	3		W1068	573	22		25-53-25	050-099
	4	UNUSED						050-099
	5		W1068	572	22		25-53-23	050-099

HOOKUP LIST

D280T132



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02568		P039-00/ /		RELAY SOCKET- (continued)				050-099
	6	UNUSED						050-099
	7		W1068	574	22		25-53-25	050-099
	8	UNUSED						050-099
D02569		MULTI/ /		RECP-				050-099, 150-199
	A		W0785	003	20		33-51-14	050-099, 150-199
	B		W0785	002	20		33-51-14	050-099, 150-199
	C		W0785	001	20		33-51-14	050-099, 150-199
	D		W0785	001	20		33-51-14	050-099, 150-199
	E	UNUSED						050-099, 150-199
	F	UNUSED						050-099, 150-199
	G	UNUSED						050-099, 150-199
	H	UNUSED						050-099, 150-199
	J	UNUSED						050-099, 150-199
	K	UNUSED						050-099, 150-199
	L	UNUSED						050-099, 150-199
	M	UNUSED						050-099, 150-199
D02570		P039-00/ /		RELAY SOCKET-				050-099
	1	UNUSED						050-099
	2		W1068	581	22		25-53-23	050-099
	3		W1068	583	22		25-53-25	050-099
	4	UNUSED						050-099
	5		W1068	582	22		25-53-23	050-099
	6	UNUSED						050-099
	7		W1068	584	22		25-53-25	050-099
	8	UNUSED						050-099
D02571		MULTI/ /		RECP-				050-099, 150-199
	=1		W0785	002	20		33-51-14	050-099, 150-199
D02572		P039-00/ /		RELAY SOCKET-				ALL
	1	UNUSED						ALL
	2		W1068	736	22		25-53-24	ALL
	3		W1068	739	22		25-53-23	ALL
	4	UNUSED						ALL
	5		W1068	737	22		25-53-24	ALL
	6	UNUSED						ALL
	7		W1068	738	22		25-53-24	ALL
	8	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D02500
Page 20
Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02573		MULTI/ /		PLUG-				050-099, 150-199
	= 1		W0785	003	20		33-51-14	050-099, 150-199
D02575		0305/195/R035		PLUG-COAXIAL				050-099, 162-199
	= A1		W0873	02CX			23-34-15	050-099, 162-199
	= C1		W0873	02CO			23-34-15	050-099, 162-199
D02576		P039-00/ /		RELAY SOCKET-				ALL
	1	UNUSED						ALL
	2		W1068	746	22		25-53-24	ALL
	3		W1068	749	22		25-53-23	ALL
	4	UNUSED						ALL
	5		W1068	747	22		25-53-24	ALL
	6	UNUSED						ALL
	7		W1068	748	22		25-53-24	ALL
	8	UNUSED						ALL
D02577		P0061-00/ /		PLUG-DATA LOADER CTL PANEL				ALL
	1		W0065	232R	24		34-61-15	ALL
	2		W0065	232B	24		34-61-15	ALL
	3		W0065	233R	24		34-61-15	ALL
	4		W0065	233B	24		34-61-15	ALL
	5		W0065	FRG			34-61-15	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8		W0065	228R	24		34-61-15	ALL
	9		W0065	228B	24		34-61-15	ALL
	10		W0065	229R	24		34-61-15	ALL
	11		W0065	229B	24		34-61-15	ALL
	12		W0065	230R	24		34-61-15	ALL
	13		W0065	230B	24		34-61-15	ALL
	14		W0065	231R	24		34-61-15	ALL
	15		W0065	231B	24		34-61-15	ALL
	16		W0065	FRE			34-61-15	ALL
	17	UNUSED						ALL
	18		W0065	101	22		34-61-15	ALL
	19		W0065	102	22		34-61-15	ALL
	20		W0065	104	22		34-61-15	ALL
	21		W0065	105	22		34-61-15	ALL
	22		W0065	106	22		34-61-15	ALL
	23	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D02500

Page 21

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02577		P0061-00/ /		PLUG-DATA LOADER CTL PANEL (continued)				ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50		W0065	107	24		34-61-15	ALL
	51		W0065	108	24		34-61-15	ALL
	52		W0065	109	24		34-61-15	ALL
	53		W0065	110	24		34-61-15	ALL
	REF		W0065	228Z			34-61-15	050-099, 275-299
	REF		W0065	229Z			34-61-15	050-099, 275-299
	REF		W0065	230Z			34-61-15	050-099, 275-299
	REF		W0065	231Z			34-61-15	050-099, 275-299
	REF		W0065	232Z			34-61-15	050-099, 275-299
	REF		W0065	233Z			34-61-15	050-099, 275-299
	REF		W0065	FRE			34-61-15	050-099, 275-299
	REF		W0065	FRG			34-61-15	050-099, 275-299
			W0065	228Z			34-61-15	150-199
			W0065	229Z			34-61-15	150-199

HOOKUP LIST

D280T132

91-21-51

Section D02500

Page 22

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02577		P0061-00/ /		PLUG-DATA LOADER CTL PANEL (continued)				ALL
			W0065	230Z			34-61-15	150-199
			W0065	231Z			34-61-15	150-199
			W0065	232Z			34-61-15	150-199
			W0065	233Z			34-61-15	150-199
			W0065	FRE			34-61-15	150-199
			W0065	FRG			34-61-15	150-199
D02578		P039-00/ /		RELAY SOCKET-				ALL
	1	UNUSED						050-099
	1		W1068	751	22		25-53-24	150-199, 275-299
	2		W1068	750	22		25-53-24	050-099
	2		W1068	35K	22		25-53-24	150-199, 275-299
	3		W1068	753	22		25-53-23	ALL
	4	UNUSED						ALL
	5		W1068	751	22		25-53-24	050-099
	5		W1068	35M	22		25-53-24	150-199, 275-299
	6	UNUSED						050-099
	6		W1068	750	22		25-53-24	150-199, 275-299
	7		W1068	752	22		25-53-24	050-099
	7		W1068	35L	22		25-53-24	150-199, 275-299
	8	UNUSED						ALL
D02579		P0061-00/ /		PLUG-DATA LOADER CTL PANEL				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W0065	227R	24		31-35-11	ALL
	4		W0065	234R	24		34-61-15	ALL
	5		W0065	234B	24		34-61-15	ALL
	6		W0065	111	24		34-61-15	ALL
	7		W0065	112	24		34-61-15	ALL
	8	UNUSED						ALL
	9		W0065	235B	24		34-61-15	ALL
	10		W0065	235R	24		34-61-15	ALL
	11		W0065	113	22		34-61-15	050-099, 150, 153-199, 275-299
	11		W0065	113	20		34-61-15	151-152
	12		W0065	114	20		34-61-15	ALL
	13		W0065	226R	24		23-22-15	ALL
	14		W0065	227B	24		31-35-11	ALL
	15		W0065	226B	24		23-22-15	ALL
	16		W0065	062	24		31-35-11	050-099

HOOKUP LIST
D280T132

91-21-51
Section D02500
Page 23
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02579		P0061-00/ /		PLUG-DATA LOADER CTL PANEL (continued)				ALL
	16		W0065	065	24		31-35-11	150-199, 275-299
	17		W0065	061	24		23-22-15	ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	DED		W0065	226Z			23-22-15	ALL
	DED		W0065	227Z			31-35-11	ALL
	DED		W0065	234Z			34-61-15	ALL
	DED		W0065	235Z			34-61-15	ALL
D02580		P039-00/ /		RELAY SOCKET-				ALL
	1	UNUSED						ALL
	2		W1068	756	22		25-53-24	ALL
	3		W1068	759	22		25-53-23	ALL
	4	UNUSED						ALL
	5		W1068	757	22		25-53-24	ALL
	6	UNUSED						ALL
	7		W1068	758	22		25-53-24	ALL
	8	UNUSED						ALL
D02581		P0061-00/ /		PLUG-DATA LOADER CTL PANEL				ALL
	1	UNUSED						ALL
	2		W0065	115	20		34-61-15	ALL
	3		W0065	237R	24		34-61-15	ALL
	4	UNUSED						050-099, 151-152, 275-299
	4		W0065	901R	22		23-25-13	150, 153-199
	5		W0065	237B	24		34-61-15	ALL
	6	UNUSED						050-099, 151-152, 275-299
	6		W0065	901B	22		23-25-13	150, 153-199
	7		W0065	098	24		34-61-15	ALL
	8	UNUSED						050-099, 151-152, 275-299
	8		W0065	903	22		23-25-13	150, 153-199
	9		W0065	099	24		34-61-15	ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D02500

Page 24

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02581		P0061-00/ /		PLUG-DATA LOADER CTL PANEL (continued)				ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	DED		W0065	237Z			34-61-15	ALL
	DED		W0065	901Z			23-25-13	150, 153-199
D02582		P039-00/ /		RELAY SOCKET-				050-099
	1	UNUSED						050-099
	2		W1068	760	22		25-53-24	050-099
	3		W1068	763	22		25-53-23	050-099
	4	UNUSED						050-099
	5		W1068	761	22		25-53-24	050-099
	6	UNUSED						050-099
	7		W1068	762	22		25-53-24	050-099
	8	UNUSED						050-099
D02583		P0061-00/ /		PLUG-AIRBORNE DATA LOADER				ALL
	1		W0065	232R	24		34-61-15	ALL
	2		W0065	232B	24		34-61-15	ALL
	3		W0065	233R	24		34-61-15	ALL
	4		W0065	233B	24		34-61-15	ALL
	5		W0065	FRH			34-61-15	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8		W0065	228R	24		34-61-15	ALL
	9		W0065	228B	24		34-61-15	ALL
	10		W0065	229R	24		34-61-15	ALL
	11		W0065	229B	24		34-61-15	ALL
	12		W0065	230R	24		34-61-15	ALL
	13		W0065	230B	24		34-61-15	ALL
	14		W0065	231R	24		34-61-15	ALL

HOOKUP LIST
D280T132

91-21-51
Section D02500
Page 25
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02583		P0061-00/ /		PLUG-AIRBORNE DATA LOADER (continued)				ALL
	15		W0065	231B	24		34-61-15	ALL
	16		W0065	FRF			34-61-15	ALL
	17	UNUSED						ALL
	18		W0065	101	22		34-61-15	ALL
	19		W0065	102	22		34-61-15	ALL
	20		W0065	104	22		34-61-15	ALL
	21		W0065	105	22		34-61-15	ALL
	22		W0065	106	22		34-61-15	ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50		W0065	107	24		34-61-15	ALL
	51		W0065	108	24		34-61-15	ALL
	52		W0065	109	24		34-61-15	ALL
	53		W0065	110	24		34-61-15	ALL
	REF		W0065	228Z			34-61-15	050-099, 275-299

HOOKUP LIST

D280T132

91-21-51

Section D02500

Page 26

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02583		P0061-00/ /		PLUG-AIRBORNE DATA LOADER (continued)				ALL
	REF		W0065	229Z			34-61-15	050-099, 275-299
	REF		W0065	230Z			34-61-15	050-099, 275-299
	REF		W0065	231Z			34-61-15	050-099, 275-299
	REF		W0065	232Z			34-61-15	050-099, 275-299
	REF		W0065	233Z			34-61-15	050-099, 275-299
	REF		W0065	FRF			34-61-15	050-099, 275-299
	REF		W0065	FRH			34-61-15	050-099, 275-299
			W0065	228Z			34-61-15	150-199
			W0065	229Z			34-61-15	150-199
			W0065	230Z			34-61-15	150-199
			W0065	231Z			34-61-15	150-199
			W0065	232Z			34-61-15	150-199
			W0065	233Z			34-61-15	150-199
			W0065	FRF			34-61-15	150-199
			W0065	FRH			34-61-15	150-199
D02584		P039-00/ /		RELAY SOCKET-				050-099
	1	UNUSED						050-099
	2		W1068	766	22		25-53-24	050-099
	3		W1068	769	22		25-53-23	050-099
	4	UNUSED						050-099
	5		W1068	767	22		25-53-24	050-099
	6	UNUSED						050-099
	7		W1068	768	22		25-53-24	050-099
	8	UNUSED						050-099
D02588		P039-00/ /		RELAY SOCKET-				ALL
	1	UNUSED						ALL
	2		W1068	786	22		25-53-24	050-099
	2		W1068	35E	22		25-53-24	150-199, 275-299
	3		W1068	789	22		25-53-23	050-099
	3		W1068	769	22		25-53-23	150-199, 275-299
	4	UNUSED						ALL
	5		W1068	787	22		25-53-24	050-099
	5		W1068	35G	22		25-53-24	150-199, 275-299
	6	UNUSED						ALL
	7		W1068	788	22		25-53-24	050-099
	7		W1068	35F	22		25-53-24	150-199, 275-299
	8	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D02500

Page 27

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02589		MULTI/ /		RECP-				050-099, 150-199
	A	UNUSED						050-099, 150-199
	B	UNUSED						050-099, 150-199
	C		W0783	001	20		33-51-16	050-099, 150-199
	D		W0783	001	20		33-51-16	050-099, 150-199
	E	UNUSED						050-099, 150-199
	F	UNUSED						050-099, 150-199
	G	UNUSED						050-099, 150-199
	H	UNUSED						050-099, 150-199
	J	UNUSED						050-099, 150-199
	K	UNUSED						050-099, 150-199
	L	UNUSED						050-099, 150-199
	M	UNUSED						050-099, 150-199

HOOKUP LIST
D280T132

91-21-51
Section D02500
Page 28 End
Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02603		290/283/L 12		PLUG				050-099, 162-199
	1		W3008	201B	22		21-66-11	050-099, 162-199
	2		W3008	201R	22		21-66-11	050-099, 162-199
	3	UNUSED						050-099, 162-199
	4	UNUSED						050-099, 162-199
	5	UNUSED						050-099, 162-199
D02604		0661/303/L013		PLUG-				050-099
D02604		0654+008/303/L013		PLUG-				150-199, 275-299
	A		W1234	202B	20		21-65-11	ALL
	B		W1234	023	20		21-65-11	ALL
D02605		271/284/L012		PLUG				050-099, 162-199
	1	UNUSED						050-099, 162-199
	2	UNUSED						050-099, 162-199
	3	UNUSED						050-099, 162-199
	4	UNUSED						050-099, 162-199
	5		W3008	007	20		21-66-11	050-099, 162-199
	6		W3008	008	20		21-66-11	050-099, 162-199
	7		W3008	009	20		21-66-11	050-099, 162-199
	8		W3008	010	20		21-66-11	050-099, 162-199
	9		W3008	011	20		21-66-11	050-099, 162-199
	10		W3008	012	20		21-66-11	050-099, 162-199
	11		W3008	013	20		21-66-11	050-099, 162-199
	12		W3008	014	20		21-66-11	050-099, 162-199
	13	UNUSED						050-099, 162-199
	14	UNUSED						050-099, 162-199
	15	UNUSED						050-099, 162-199
D02607		253/261/L 13		PLUG				050-099, 162-199
	A		W3006	301B	22		21-66-11	050-099, 162-199
	B		W3006	301R	22		21-66-11	050-099, 162-199
	C		W3006	301Y	22		21-66-11	050-099, 162-199
	D	UNUSED						050-099, 162-199
	E	UNUSED						050-099, 162-199
	F	UNUSED						050-099, 162-199
D02608		0267/185/L070		PLUG-				ALL
	A		W0638	201B	20		21-65-11	ALL
	B		W0638	004	20		21-65-11	ALL

HOOKUP LIST
D280T132

91-21-51
Section D02600
Page 1
Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02610		1428/203/R092		PLUG-				050-099, 162-199
D02610		1406/203/R092		PLUG-				150-157, 275-299
	1		W0786	071	20		33-51-21	ALL
	2		W0786	072	20		33-51-21	ALL
	3		W0786	073	22		33-51-21	ALL
	4		W0786	074	22		33-51-21	ALL
	5		W0786	075	22		33-51-21	ALL
	6		W0786	075	22		33-51-21	ALL
	7		W0786	077	20		33-51-21	ALL
	8		W0786	068	22		33-51-21	ALL
	9	UNUSED						ALL
	10		W0786	080	20		33-51-21	ALL
	11		W0786	069	20		33-51-21	ALL
	12		W0786	081	20		33-51-21	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20		W0786	070	22		33-51-21	ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24		W0786	070	22		33-51-21	ALL
D02611		251/246/L 14		RCPT				050-099, 162-199
	1		W3006	401R	24		23-42-11	050-099, 162-199
	2		W3006	401Z			23-42-11	050-099, 162-199
	3		W3006	401B	24		23-42-11	050-099, 162-199
	4	UNUSED						050-099, 162-199
	5	UNUSED						050-099, 162-199
	CAP	Y	W3006	401G	24		23-42-11	050-099, 162-199
	CAP	Y	W3006	401Y	24		23-42-11	050-099, 162-199
D02613		399/102/0000		PLUG				050-099, 150-199, 277-299
	= A1		W1901	02CX			34-45-11	050-099, 150-199, 277-299
	= C1		W1901	02CO			34-45-11	050-099, 150-199, 277-299

HOOKUP LIST

D280T132

91-21-51

Section D02600

Page 2

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02615		399/102/0000		PLUG				050-099, 150-199, 277-299
	= A1		W1901	03CX			34-45-11	050-099, 150-199, 277-299
	= C1		W1901	03CO			34-45-11	050-099, 150-199, 277-299
D02617		399/102/0000		PLUG				050-099, 150-199, 277-299
	= A1		W1901	04CX			34-45-11	050-099, 150-199, 277-299
	= C1		W1901	04CO			34-45-11	050-099, 150-199, 277-299
D02619		735/310/R 15		PLUG				280-299
	1		W1857	001	20		23-32-44	280-299
	2		W1857	002	20		23-32-44	280-299
	3	UNUSED						280-299
	4	UNUSED						280-299
	5	UNUSED						280-299
	6		W1857	004	24		23-32-44	280-299
	7	UNUSED						280-299
	8	UNUSED						280-299
	9		W1857	005	22		23-32-44	280-299
	10		W1857	003	22		23-32-44	280-299
	= A1		W1857	01CX			23-32-44	280-299
	= C1		W1857	01CO			23-32-44	280-299
D02621		731/310/R 25		PLUG				280-299
	1		W1859	001	20		23-32-44	280-299
	2		W1859	002	20		23-32-44	280-299
	3	UNUSED						280-299
	4	UNUSED						280-299
	5	UNUSED						280-299
	6		W1859	004	24		23-32-44	280-299
	7	UNUSED						280-299
	8	UNUSED						280-299
	9		W1859	005	22		23-32-44	280-299
	10		W1859	003	22		23-32-44	280-299
	= A1		W1859	01CX			23-32-44	280-299
	= C1		W1859	01CO			23-32-44	280-299
D02628		P039-00/ /		RELAY SOCKET-				ALL
	A1		W1068	055	20		33-37-21	050-099
	A1		W1068	055	18		33-37-21	150-199, 275-299
	A2		W1068	056	20		33-37-21	050-099

HOOKUP LIST
D280T132

91-21-51
Section D02600
Page 3
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02628		P039-00/ /		RELAY SOCKET- (continued)				ALL
	A2		W1068	056	18		33-37-21	150-199, 275-299
	A3	UNUSED						ALL
	B1		W1068	061	20		33-31-61	ALL
	B2		W1068	062	20		33-31-61	ALL
	B3	UNUSED						ALL
	C1		W1068	066	18		33-37-21	050-099
	C1		W1068	066	16		33-37-21	150-199, 275-299
	C2		W1068	067	18		33-37-21	050-099
	C2		W1068	067	16		33-37-21	150-199, 275-299
	C3	UNUSED						ALL
	D1	UNUSED						ALL
	D2	UNUSED						ALL
	D3	UNUSED						ALL
	G1	UNUSED						ALL
	G2		W1068	PD1			99-99-99	ALL
	G3		W1068	PD1			99-99-99	ALL
	X1		W1068	594	20		33-37-21	ALL
	X2		W1068	595	20		33-37-21	ALL
D02630		P039-00/ /		RELAY SOCKET-				ALL
	A1		W1068	048	18		33-37-21	050-099
	A1		W1068	048	16		33-37-21	150-199, 275-299
	A2		W1068	050	18		33-37-21	050-099
	A2		W1068	050	16		33-37-21	150-199, 275-299
	A3	UNUSED						ALL
	B1	UNUSED						ALL
	B2	UNUSED						ALL
	B3	UNUSED						ALL
	X1		W1068	537	20		33-37-21	ALL
	X2		W1068	538	20		33-37-21	ALL
D02631		655/257/R005		PLUG				280-299
	1		W1857	001	20		23-32-44	280-299
	2		W1857	003	22		23-32-44	280-299
	3		W1857	006	22		23-32-44	280-299
	4		W1857	002	20		23-32-44	280-299
	5		W1857	007	22		23-32-44	280-299
	6		W1857	008	22		23-32-44	280-299
	7		W1857	009	22		23-32-44	280-299
	8		W1857	004	24		23-32-44	280-299

HOOKUP LIST

D280T132

91-21-51

Section D02600

Page 4

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02631		655/257/R005		PLUG (continued)				280-299
	9	UNUSED						280-299
	10	UNUSED						280-299
	= A1		W1857	01CX			23-32-44	280-299
	= C1		W1857	01CO			23-32-44	280-299
D02632		P035-00/ /		PLUG-P35				ALL
	A1		W1066	044	18		33-37-11	ALL
	A2		W1066	050	18		33-37-11	050-099
	A2		W1066	050	16		33-37-11	150-199, 275-299
	A3	UNUSED						ALL
	B1	UNUSED						ALL
	B2	UNUSED						ALL
	B3	UNUSED						ALL
	X1		W1066	537	20		33-37-11	ALL
	X2		W1066	538	20		33-37-11	ALL
D02633		866/260/00		PLUG				280-299
	1		W1859	001	20		23-32-44	280-299
	2		W1859	003	22		23-32-44	280-299
	3		W1859	006	22		23-32-44	280-299
	4		W1859	002	20		23-32-44	280-299
	5		W1859	007	22		23-32-44	280-299
	6		W1859	008	22		23-32-44	280-299
	7		W1859	009	22		23-32-44	280-299
	8		W1859	004	24		23-32-44	280-299
	9	UNUSED						280-299
	10	UNUSED						280-299
	= A1		W1859	01CX			23-32-44	280-299
	= C1		W1859	01CO			23-32-44	280-299
D02645		SHELF/E02/05		PLUG-				050-099
	A1		W0149	810	24		23-34-13	050-099
	A2		W0149	811	24		23-34-13	050-099
	A3	UNUSED						050-099
	B1		W0149	809	24		23-34-13	050-099
	B2		W0149	812	24		23-34-13	050-099
	B3	UNUSED						050-099
	X1		W0149	813	24		23-34-13	050-099
	X2		W0149	815	20		23-34-13	050-099

HOOKUP LIST

D280T132

91-21-51

Section D02600

Page 5

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02647		SHELF/E09/-01		PLUG				150, 152-199, 277-299
	1	UNUSED						152
	2	UNUSED						152
	3	UNUSED						152
	4	UNUSED						152
	5	UNUSED						152
	6	UNUSED						152
	7	UNUSED						152
	8	UNUSED						152
	9	UNUSED						152
	10	UNUSED						152
	11	UNUSED						152
	12	UNUSED						152
	13	UNUSED						152
	14	UNUSED						152
	15	UNUSED						152
	16	UNUSED						152
	17	UNUSED						152
	18	UNUSED						152
	19	UNUSED						152
	20	UNUSED						152
	21	UNUSED						152
	22	UNUSED						152
	23	UNUSED						152
	24	UNUSED						152
	25	UNUSED						152
	26	UNUSED						152
	27	UNUSED						152
	28	UNUSED						152
	29	UNUSED						152
	30	UNUSED						152
	31	UNUSED						152
	32	UNUSED						152
	33	UNUSED						152
	34	UNUSED						152
	35	UNUSED						152
	36	UNUSED						152
	37	UNUSED						152
	38	UNUSED						152
	39	UNUSED						152
	40	UNUSED						152

HOOKUP LIST

D280T132

91-21-51

Section D02600

Page 6

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02647		SHELF/E09/-01		PLUG (continued)				150, 152-199, 277-299
	41	UNUSED						152
	42	UNUSED						152
	43	UNUSED						152
	44	UNUSED						152
	45	UNUSED						152
	46	UNUSED						152
	47	UNUSED						152
	48	UNUSED						152
	49	UNUSED						152
	50	UNUSED						152
	51	UNUSED						152
	52	UNUSED						152
	53	UNUSED						152
	54	UNUSED						152
	= C27	UNUSED						152
D02647A		SHELF/E09/-01		PLUG-PART OF D02647				150, 152-199, 277-299
	A01		W9026	925	22		23-25-13	150, 153-155, 162-165
	A01		W0091	925	22		23-25-13	156-157, 166-199
	A01	UNUSED						277-299
	A02	UNUSED						150, 153-199, 277-299
	A03		W9026	912	22		23-25-13	150, 153-155, 162-165
	A03		W0091	912	22		23-25-13	156-157, 166-199
	A03	UNUSED						277-299
	A04	UNUSED						150, 153-199, 277-299
	A05	UNUSED						150, 153-199, 277-299
	A06	UNUSED						150, 153-199, 277-299
	A07	UNUSED						150, 153-199, 277-299
	A08	UNUSED						150, 153-199, 277-299
	A09	UNUSED						150, 153-199, 277-299
	A10	UNUSED						150, 153-199, 277-299
	A11	UNUSED						150, 153-199, 277-299
	A12	UNUSED						150, 153-199, 277-299
	A13	UNUSED						150, 153-199, 277-299
	A14	UNUSED						150, 153-199, 277-299
	A15	UNUSED						150, 153-166, 277-299
	A15		W0091	065	24		23-25-15	167-199
	B01		W9026	942	22		23-32-21	150, 152-199
	B01	UNUSED						277-299
	B02	UNUSED						150, 153-199, 277-299

HOOKUP LIST
D280T132

91-21-51
Section D02600
Page 7
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02647A		SHELF/E09/-01		PLUG-PART OF D02647 (continued)				150, 152-199, 277-299
	B03		W9026	913	22		23-25-13	150, 153-155, 162-165
	B03		W0091	913	22		23-25-13	156-157, 166-199
	B03	UNUSED						277-299
	B04	UNUSED						150, 153-199, 277-299
	B05	UNUSED						150, 153-199, 277-299
	B06	UNUSED						150, 153-199, 277-299
	B07	UNUSED						150, 153-199, 277-299
	B08	UNUSED						150, 153-199, 277-299
	B09	UNUSED						150, 153-199, 277-299
	B10	UNUSED						150, 153-199, 277-299
	B11		W9026	946	24		23-25-15	150, 153-155, 162-164
	B11		W0091	946	24		23-25-15	156-157, 166-199
	B11		W9026	946	22		23-25-15	165
	B11	UNUSED						277-299
	B12	UNUSED						150, 153-199, 277-299
	B13	UNUSED						150, 153-199, 277-299
	B14	UNUSED						150, 153-199, 277-299
	B15	UNUSED						150, 153-166, 277-299
	B15		W0091	066	24		23-25-15	167-199
	C01		W9026	926	22		23-25-13	150, 153-155, 162-165
	C01		W0091	926	22		23-25-13	156-157, 166-199
	C01	UNUSED						277-299
	C02	UNUSED						150, 153-199, 277-299
	C03		W9026	914	22		23-25-13	150, 153-155, 162-165
	C03		W0091	914	22		23-25-13	156-157, 166-199
	C03	UNUSED						277-299
	C04	UNUSED						150, 153-199, 277-299
	C05	UNUSED						150, 153-199, 277-299
	C06	UNUSED						150, 153-199, 277-299
	C07	UNUSED						150, 153-199, 277-299
	C08	UNUSED						150, 153-199, 277-299
	C09	UNUSED						150, 153-199, 277-299
	C10	UNUSED						150, 153-199, 277-299
	C11		W9026	082	24		23-25-15	150, 153-155, 162-164
	C11		W0091	082	24		23-25-15	156-157, 166-199
	C11		W9026	082	22		23-25-15	165
	C11	UNUSED						277-299
	C12	UNUSED						150, 153-199, 277-299
	C13	UNUSED						150, 153-199, 277-299
	C14	UNUSED						150, 153-199, 277-299

HOOKUP LIST

D280T132

91-21-51

Section D02600

Page 8

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02647A		SHELF/E09/-01		PLUG-PART OF D02647 (continued)				150, 152-199, 277-299
	C15		W9026	944	22		23-32-21	150, 152-199
	C15		W9026	933	22		23-25-13	150, 153-155, 162-165
	C15		W0091	933	22		23-25-13	156-157, 166-199
	C15	UNUSED						277-299
	D01		W9026	927	22		23-25-13	150, 153-155, 162-165
	D01		W0091	927	22		23-25-13	156-157, 166-199
	D01	UNUSED						277-299
	D02	UNUSED						150, 153-199, 277-299
	D03		W9026	915	22		23-25-13	150, 153-155, 162-165
	D03		W0091	915	22		23-25-13	156-157, 166-199
	D03	UNUSED						277-299
	D04	UNUSED						150, 153-199, 277-299
	D05	UNUSED						150, 153-199, 277-299
	D06	UNUSED						150, 153-199, 277-299
	D07	UNUSED						150, 153-199, 277-299
	D08	UNUSED						150, 153-199, 277-299
	D09	UNUSED						150, 153-199, 277-299
	D10	UNUSED						150, 153-199, 277-299
	D11	UNUSED						150, 153-199, 277-299
	D12	UNUSED						150, 153-199, 277-299
	D13	UNUSED						150, 153-199, 277-299
	D14	UNUSED						150, 153-199, 277-299
	D15	UNUSED						150, 153-199, 277-299
	E01		W9026	943	22		23-32-21	150, 152-199
	E01	UNUSED						277-299
	E02		W9026	952R	22		23-32-21	150, 152-199
	E02	UNUSED						277-299
	E03		W9026	916	22		23-25-13	150, 153-155, 162-165
	E03		W0091	916	22		23-25-13	156-157, 166-199
	E03	UNUSED						277-299
	E04	UNUSED						150, 153-199, 277-299
	E05	UNUSED						150, 153-199, 277-299
	E06	UNUSED						150, 153-199, 277-299
	E07	UNUSED						150, 153-199, 277-299
	E08	UNUSED						150, 153-199, 277-299
	E09	UNUSED						150, 153-199, 277-299
	E10	UNUSED						150, 153-199, 277-299
	E11	UNUSED						150, 153-199, 277-299
	E12	UNUSED						150, 153-199, 277-299
	E13	UNUSED						150, 153-199, 277-299

HOOKUP LIST

D280T132

91-21-51

Section D02600

Page 9

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02647A		SHELF/E09/-01		PLUG-PART OF D02647 (continued)				150, 152-199, 277-299
	E14	UNUSED						150, 153-199, 277-299
	E15	UNUSED						150, 153-199, 277-299
	F01	UNUSED						150, 153-199, 277-299
	F02		W9026	952B	22		23-32-21	150, 152-199
	F02	UNUSED						277-299
	F03	UNUSED						150, 153-199, 277-299
	F04	UNUSED						150, 153-199, 277-299
	F05	UNUSED						150, 153-199, 277-299
	F06	UNUSED						150, 153-199, 277-299
	F07	UNUSED						150, 153-199, 277-299
	F08	UNUSED						150, 153-199, 277-299
	F09	UNUSED						150, 153-199, 277-299
	F10	UNUSED						150, 153-199, 277-299
	F11	UNUSED						150, 153-199, 277-299
	F12	UNUSED						150, 153-199, 277-299
	F13		W9026	086	24		23-25-15	150, 153-155, 162-164
	F13		W0091	086	24		23-25-15	156-157, 166-199
	F13		W9026	086	22		23-25-15	165
	F13	UNUSED						277-299
	F14	UNUSED						150, 153-199, 277-299
	F15		W9026	930	22		23-25-13	150, 153-155, 162-165
	F15		W0091	930	22		23-25-13	156-157, 166-199
	F15	UNUSED						277-299
	G01		W9026	910	22		23-25-13	150, 153-155, 162-165
	G01		W0091	910	22		23-25-13	156-157, 166-199
	G01	UNUSED						277-299
	G02		W9026	900R	22		23-32-21	150, 152-199
	G02	UNUSED						277-299
	G03	UNUSED						150, 153-199, 277-299
	G04	UNUSED						150, 153-199, 277-299
	G05	UNUSED						150, 153-199, 277-299
	G06	UNUSED						150, 153-199, 277-299
	G07	UNUSED						150, 153-199, 277-299
	G08	UNUSED						150, 153-199, 277-299
	G09	UNUSED						150, 153-199, 277-299
	G10	UNUSED						150, 153-199, 277-299
	G11	UNUSED						150, 153-199, 277-299
	G12	UNUSED						150, 153-199, 277-299
	G13		W9026	948	24		23-25-15	150, 153-155, 162-164
	G13		W0091	948	24		23-25-15	156-157, 166-199

HOOKUP LIST

D280T132

91-21-51

Section D02600

Page 10

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02647A		SHELF/E09/-01		PLUG-PART OF D02647 (continued)				150, 152-199, 277-299
	G13		W9026	948	22		23-25-15	165
	G13	UNUSED						277-299
	G14	UNUSED						150, 153-199, 277-299
	G15		W9026	928	22		23-25-13	150, 153-155, 162-165
	G15		W0091	928	22		23-25-13	156-157, 166-199
	G15	UNUSED						277-299
	H01		W9026	917	22		23-25-13	150, 153-155, 162-165
	H01		W0091	917	22		23-25-13	156-157, 166-199
	H01	UNUSED						277-299
	H02		W9026	900B	22		23-32-21	150, 152-199
	H02	UNUSED						277-299
	H03	UNUSED						150, 153-199, 277-299
	H04	UNUSED						150, 153-199, 277-299
	H05	UNUSED						150, 153-199, 277-299
	H06	UNUSED						150, 153-199, 277-299
	H07	UNUSED						150, 153-199, 277-299
	H08	UNUSED						150, 153-199, 277-299
	H09	UNUSED						150, 153-199, 277-299
	H10	UNUSED						150, 153-199, 277-299
	H11		W9026	947	24		23-25-15	150, 153-155, 162-164
	H11		W0091	947	24		23-25-15	156-157, 166-199
	H11		W9026	947	22		23-25-15	165
	H11	UNUSED						277-299
	H12	UNUSED						150, 153-199, 277-299
	H13		W9026	087	24		23-25-15	150, 153-155, 162-164
	H13		W0091	087	24		23-25-15	156-157, 166-199
	H13		W9026	087	22		23-25-15	165
	H13	UNUSED						277-299
	H14	UNUSED						150, 153-199, 277-299
	H15		W9026	932	22		23-25-13	150, 153-155, 162-165
	H15		W0091	932	22		23-25-13	156-157, 166-199
	H15	UNUSED						277-299
	J01		W9026	911	22		23-25-13	150, 153-155, 162-165
	J01		W0091	911	22		23-25-13	156-157, 166-199
	J01	UNUSED						277-299
	J02	UNUSED						150, 153-199, 277-299
	J03	UNUSED						150, 153-199, 277-299
	J04	UNUSED						150, 153-199, 277-299
	J05	UNUSED						150, 153-199, 277-299
	J06	UNUSED						150, 153-199, 277-299

HOOKUP LIST

D280T132

91-21-51

Section D02600

Page 11

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02647A		SHELF/E09/-01		PLUG-PART OF D02647 (continued)				150, 152-199, 277-299
	J07	UNUSED						150, 153-199, 277-299
	J08	UNUSED						150, 153-199, 277-299
	J09	UNUSED						150, 153-199, 277-299
	J10	UNUSED						150, 153-199, 277-299
	J11	UNUSED						150, 153-199, 277-299
	J12		W9026	088	24		23-25-15	150, 153-155, 162-164
	J12		W0091	088	24		23-25-15	156-157, 166-199
	J12		W9026	088	22		23-25-15	165
	J12	UNUSED						277-299
	J13		W9026	949	24		23-25-15	150, 153-155, 162-164
	J13		W0091	949	24		23-25-15	156-157, 166-199
	J13		W9026	949	22		23-25-15	165
	J13	UNUSED						277-299
	J14	UNUSED						150, 153-199, 277-299
	J15		W9026	931	22		23-25-13	150, 153-155, 162-165
	J15		W0091	931	22		23-25-13	156-157, 166-199
	J15	UNUSED						277-299
	K01		W9026	918	22		23-25-13	150, 153-155, 162-165
	K01		W0091	918	22		23-25-13	156-157, 166-199
	K01	UNUSED						277-299
	K02	UNUSED						150, 153-199, 277-299
	K03	UNUSED						150, 153-199, 277-299
	K04	UNUSED						150, 153-199, 277-299
	K05	UNUSED						150, 153-199, 277-299
	K06	UNUSED						150, 153-199, 277-299
	K07	UNUSED						150, 153-199, 277-299
	K08	UNUSED						150, 153-199, 277-299
	K09	UNUSED						150, 153-199, 277-299
	K10	UNUSED						150, 153-199, 277-299
	K11	UNUSED						150, 153-199, 277-299
	K12		W9026	089	24		23-25-15	150, 153-155, 162-164
	K12		W0091	089	24		23-25-15	156-157, 166-199
	K12		W9026	089	22		23-25-15	165
	K12	UNUSED						277-299
	K13	UNUSED						150, 153-199, 277-299
	K14	UNUSED						150, 153-199, 277-299
	K15		W9026	929	22		23-25-13	150, 153-155, 162-165
	K15		W0091	929	22		23-25-13	156-157, 166-199
	K15	UNUSED						277-299
	DED		W9026	952Z			23-32-21	150, 152-199

HOOKUP LIST

D280T132

91-21-51

Section D02600

Page 12

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02647A		SHELF/E09/-01		PLUG-PART OF D02647 (continued)				150, 152-199, 277-299
			W9026	900Z			23-32-21	150, 152-199
			W9026	945	20		23-32-21	150, 152-199
D02647B		SHELF/E09/-01		PLUG-PART OF D02647				150, 153-199, 277-299
	A01		W9026	934R	22		23-25-13	150, 153-155, 162-165
	A01		W0091	934R	22		23-25-13	156-157, 166-199
	A01	UNUSED						277-299
	A02		W9026	012	22		23-25-14	150, 153-155, 162-165
	A02		W0091	012	24		23-25-14	156-157, 166-199, 277-299
	A03		W9026	909R	22		23-25-14	150, 153-155, 162-165
	A03		W0091	909R	22		23-25-14	156-157, 166-199
	A03	UNUSED						277-299
	A04	UNUSED						150, 153-199, 277-299
	A05	UNUSED						150, 153-166
	A05		W0091	006	24		23-25-11	167-199, 277-299
	A06		W9026	233R	22		23-25-13	150, 153-155, 162-165
	A06		W0091	233R	24		23-25-13	156-157, 166-199, 277-299
	A07		W9026	904R	22		23-25-13	150, 153-155, 162-165
	A07		W0091	904R	22		23-25-13	156-157, 166-199
	A07	UNUSED						277-299
	A08		W9026	901	22		23-25-13	150, 153-155, 162-165
	A08		W0091	901	22		23-25-13	156-157, 166-199
	A08	UNUSED						277-299
	A09	UNUSED						150, 153-199, 277-299
	A10		W9026	209R	22		23-25-12	150, 153-155, 162-165
	A10		W0091	209R	24		23-25-12	156-157, 166-199, 277-299
	A11	UNUSED						150, 153-199, 277-299
	A12	UNUSED						150, 153-199, 277-299
	A13		W9026	919	22		23-25-13	150, 153-155, 162-165
	A13		W0091	919	22		23-25-13	156-157, 166-199
	A13		W0091	100	24		23-25-13	277-299
	A14	UNUSED						150, 153-199, 277-299
	A15		W9026	041	24		23-25-15	150, 153-155, 162-164
	A15		W0091	041	24		23-25-15	156-157, 166-199, 277-299
	A15	UNUSED						165
	B01		W9026	934B	22		23-25-13	150, 153-155, 162-165
	B01		W0091	934B	22		23-25-13	156-157, 166-199
	B01	UNUSED						277-299
	B02		W9026	012Z			23-25-14	150, 153-155, 162-165
	B02		W0091	012Z			23-25-14	156-157, 166-199, 277-299

HOOKUP LIST

D280T132

91-21-51

Section D02600

Page 13

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02647B		SHELF/E09/-01		PLUG-PART OF D02647 (continued)				150, 153-199, 277-299
	B03		W9026	909B	22		23-25-14	150, 153-155, 162-165
	B03		W0091	909B	22		23-25-14	156-157, 166-199
	B03	UNUSED						277-299
	B04	UNUSED						150, 153-199, 277-299
	B05	UNUSED						150, 153-199, 277-299
	B06		W9026	233B	22		23-25-13	150, 153-155, 162-165
	B06		W0091	233B	24		23-25-13	156-157, 166-199, 277-299
	B07		W9026	904B	22		23-25-13	150, 153-155, 162-165
	B07		W0091	904B	22		23-25-13	156-157, 166-199
	B07	UNUSED						277-299
	B08	UNUSED						150, 153-199, 277-299
	B09	UNUSED						150, 153-199, 277-299
	B10		W9026	209B	22		23-25-12	150, 153-155, 162-165
	B10		W0091	209B	24		23-25-12	156-157, 166-199, 277-299
	B11	UNUSED						150, 153-199, 277-299
	B12	UNUSED						150, 153-199, 277-299
	B13	UNUSED						150, 153-199, 277-299
	B14		W9026	011	22		23-25-14	150, 153-155, 162-165
	B14		W0091	011	24		23-25-14	156-157, 166-199, 277-299
	B15		W9026	042	24		23-25-15	150, 153-154, 162-163
	B15	UNUSED						155, 164, 166
	B15		W0091	042	24		23-25-15	156-157, 167-199, 277-299
	B15		W9026	042	22		23-25-15	165
	C01		W9026	936R	22		23-25-13	150, 153-155, 162-165
	C01		W0091	936R	22		23-25-13	156-157, 166-199
	C01	UNUSED						277-299
	C02		W9026	013	22		23-25-14	150, 153-155, 162-165
	C02		W0091	013	24		23-25-14	156-157, 166-199, 277-299
	C03		W9026	232R	22		23-25-13	150, 153-155, 162-165
	C03		W0091	232R	24		23-25-13	156-157, 166, 277-299
	C03		W0091	241R	24		23-25-13	167-199
	C04	UNUSED						150, 153-199, 277-299
	C05	UNUSED						150, 153-199, 277-299
	C06	UNUSED						150, 153-199
	C06		W0091	237R	24		23-25-13	277-299
	C07		W9026	902B	22		23-25-13	150, 153-155, 162-165
	C07		W0091	902B	22		23-25-13	156-157, 166-199
	C07	UNUSED						277-299
	C08	UNUSED						150, 153-199, 277-299
	C09	UNUSED						150, 153-199, 277-299

HOOKUP LIST

D280T132

91-21-51

Section D02600

Page 14

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02647B		SHELF/E09/-01		PLUG-PART OF D02647 (continued)				150, 153-199, 277-299
	C10		W9026	210R	22		23-25-12	150, 153-155, 162-165
	C10		W0091	210R	24		23-25-12	156-157, 166-199, 277-299
	C11		W9026	950	22		23-25-14	150, 153-155, 162-165
	C11		W0091	950	22		23-25-14	156-157, 166-199
	C11	UNUSED						277-299
	C12	UNUSED						150, 153-199, 277-299
	C13		W9026	026	24		23-25-15	150, 153-155, 162-164
	C13		W0091	026	24		23-25-15	156-157, 166-199, 277-299
	C13		W9026	026	22		23-25-15	165
	C14		W9026	010	22		23-25-14	150, 153-155, 162-165
	C14		W0091	010	22		23-25-14	156-157, 166-199, 277-299
	C15		W9026	043	24		23-25-15	150, 153-155, 162-164
	C15		W0091	043	24		23-25-15	156-157, 166, 280-299
	C15	UNUSED						165, 167-199, 277-278
	D01		W9026	936B	22		23-25-13	150, 153-155, 162-165
	D01		W0091	936B	22		23-25-13	156-157, 166-199
	D01	UNUSED						277-299
	D02		W9026	013Z			23-25-14	150, 153-155, 162-165
	D02		W0091	013Z			23-25-14	156-157, 166-199, 277-299
	D03		W9026	232B	22		23-25-13	150, 153-155, 162-165
	D03		W0091	232B	24		23-25-13	156-157, 166, 277-299
	D03		W0091	241B	24		23-25-13	167-199
	D04	UNUSED						150, 153-199, 277-299
	D05	UNUSED						150, 153-199, 277-299
	D06	UNUSED						150, 153-199
	D06		W0091	237B	24		23-25-13	277-299
	D07		W9026	902R	22		23-25-13	150, 153-155, 162-165
	D07		W0091	902R	22		23-25-13	156-157, 166-199
	D07	UNUSED						277-299
	D08	UNUSED						150, 153-199, 277-299
	D09	UNUSED						150, 153-199, 277-299
	D10		W9026	210B	22		23-25-12	150, 153-155, 162-165
	D10		W0091	210B	24		23-25-12	156-157, 166-199, 277-299
	D11		W9026	951	22		23-25-14	150, 153-155, 162-165
	D11		W0091	951	22		23-25-14	156-157, 166-199
	D11	UNUSED						277-299
	D12	UNUSED						150, 153-199, 277-299
	D13	UNUSED						150, 153-199, 277-278
	D13		W0091	027	24		23-25-15	280-299
	D14	UNUSED						150, 153-199

HOOKUP LIST

D280T132

91-21-51

Section D02600

Page 15

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02647B		SHELF/E09/-01		PLUG-PART OF D02647 (continued)				150, 153-199, 277-299
	D14		W0091	034	24		23-25-15	277-299
	D15	UNUSED						150, 153, 156-157
	D15		W9026	044	24		23-25-15	154-155, 162-164
	D15		W9026	044	22		23-25-15	165
	D15		W0091	044	24		23-25-15	166-199, 277-299
	E01	UNUSED						150, 153-199, 277-299
	E02		W9026	017	22		23-25-14	150, 153-155, 162-165
	E02		W0091	017	24		23-25-14	156-157, 166-199, 277-299
	E03		W9026	906R	22		23-25-13	150, 153-155, 162-165
	E03		W0091	906R	22		23-25-13	156-157, 166-199
	E03	UNUSED						277-299
	E04	UNUSED						150, 153-166, 277-299
	E04		W0091	251R	24		23-25-15	167-199
	E05	UNUSED						150, 153-199, 277-299
	E06		W9026	217R	24		23-25-16	150, 153-155, 162-165
	E06		W0091	217R	24		23-25-16	156-157, 166-199, 277-299
	E07		W9026	238R	22		23-25-17	150, 153-155, 162-165
	E07	UNUSED						156-157, 166, 277-299
	E07		W0091	250R	24		23-25-16	167-199
	E08		W9026	014	22		23-25-14	150, 153-155, 162-165
	E08		W0091	014	24		23-25-14	156-157, 166-199, 277-299
	E09		W9026	206R	22		23-25-12	150, 153-155, 162-165
	E09		W0091	206R	24		23-25-12	156-157, 166-199, 277-299
	E10		W9026	211R	22		23-25-12	150, 153-155, 162-165
	E10		W0091	211R	24		23-25-12	156-157, 166-199, 277-299
	E11	UNUSED						150, 153-166, 277-299
	E11		W0091	060	24		23-25-15	167-199
	E12	UNUSED						150, 153-199, 277-299
	E13		W9026	028	24		23-25-15	150, 153-155, 162-164
	E13		W0091	028	24		23-25-15	156-157, 166-199, 277-299
	E13		W9026	028	22		23-25-15	165
	E14		W9026	035	24		23-25-15	150, 153-155, 162-164
	E14		W0091	035	24		23-25-15	156-157, 166-199, 280-299
	E14		W9026	035	22		23-25-15	165
	E14	UNUSED						277-278
	E15		W9026	045	24		23-25-15	150, 153, 155, 162-164
	E15	UNUSED						154, 156-157, 165
	E15		W0091	045	24		23-25-15	166-199, 277-299
	F01	UNUSED						150, 153-199, 277-299
	F02		W9026	017Z			23-25-14	150, 153-155, 162-165

HOOKUP LIST

D280T132

91-21-51

Section D02600

Page 16

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02647B		SHELF/E09/-01		PLUG-PART OF D02647 (continued)				150, 153-199, 277-299
	F02		W0091	017Z			23-25-14	156-157, 166-199, 277-299
	F03		W9026	906B	22		23-25-13	150, 153-155, 162-165
	F03		W0091	906B	22		23-25-13	156-157, 166-199
	F03	UNUSED						277-299
	F04	UNUSED						150, 153-166, 277-299
	F04		W0091	251B	24		23-25-15	167-199
	F05	UNUSED						150, 153-199, 277-299
	F06		W9026	217B	24		23-25-16	150, 153-155, 162-165
	F06		W0091	217B	24		23-25-16	156-157, 166-199, 277-299
	F07		W9026	238B	22		23-25-17	150, 153-155, 162-165
	F07	UNUSED						156-157, 166, 277-299
	F07		W0091	250B	24		23-25-16	167-199
	F08		W9026	015	22		23-25-14	150, 153-155, 162-165
	F08		W0091	015	24		23-25-14	156-157, 166-199, 277-299
	F09		W9026	206B	22		23-25-12	150, 153-155, 162-165
	F09		W0091	206B	24		23-25-12	156-157, 166-199, 277-299
	F10		W9026	211B	22		23-25-12	150, 153-155, 162-165
	F10		W0091	211B	24		23-25-12	156-157, 166-199, 277-299
	F11	UNUSED						150, 153-199, 277-299
	F12	UNUSED						150, 153-199, 277-299
	F13		W9026	029	24		23-25-15	150, 153-155, 162-164
	F13		W0091	029	24		23-25-15	156-157, 166-199, 277-299
	F13		W9026	029	22		23-25-15	165
	F14		W9026	036	24		23-25-15	150, 153-154, 162-163
	F14	UNUSED						155, 164, 166
	F14		W0091	036	24		23-25-15	156-157, 167-199, 277-299
	F14		W9026	036	22		23-25-15	165
	F15	UNUSED						150, 153, 155, 162-199, 278
	F15		W9026	046	24		23-25-15	154
	F15		W0091	046	24		23-25-15	156-157, 277, 280-299
	G01		W9026	229R	22		23-25-13	150, 153-155, 162-165
	G01		W0091	229R	24		23-25-13	156-157, 166-199, 277-299
	G02		W9026	016	22		23-25-14	150, 153-155, 162-165
	G02		W0091	016	24		23-25-14	156-157, 166-199, 277-299
	G03	UNUSED						150, 153-199, 277-299
	G04		W9026	204R	22		23-25-16	150, 153-155, 162-165
	G04		W0091	204R	24		23-25-11	156-157, 166-199, 277-299
	G05	UNUSED						150, 153-166
	G05		W0091	005	24		23-25-11	167-199, 277-299
	G06	UNUSED						150, 153-199, 277-299

HOOKUP LIST

D280T132

91-21-51

Section D02600

Page 17

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02647B		SHELF/E09/-01		PLUG-PART OF D02647 (continued)				150, 153-199, 277-299
	G07		W9026	239R	22		23-25-17	150, 153-155, 162-165
	G07	UNUSED						156-157, 166, 277-299
	G07		W0091	249R	24		23-25-16	167-199
	G08		W9026	018	22		23-25-14	150, 153-155, 162-165
	G08		W0091	018	24		23-25-14	156-157, 166-199, 277-299
	G09		W9026	207R	22		23-25-12	150, 153-155, 162-165
	G09		W0091	207R	24		23-25-12	156-157, 166-199, 277-299
	G10		W9026	212R	22		23-25-12	150, 153-155, 162-165
	G10		W0091	212R	24		23-25-12	156-157, 166-199, 277-299
	G11	UNUSED						150, 153-166, 277-299
	G11		W0091	061	24		23-25-15	167-199
	G12	UNUSED						150, 153-155, 162-165
	G12		W0091	231R	24		23-25-13	156-157, 166-199, 277-299
	G13		W9026	030	24		23-25-15	150, 153-155, 162-164
	G13		W0091	030	24		23-25-15	156-157, 166-199, 280-299
	G13		W9026	030	22		23-25-15	165
	G13	UNUSED						277-278
	G14		W9026	037	24		23-25-15	150, 153-155, 162-164
	G14		W0091	037	24		23-25-15	156-157, 166-199, 277-299
	G14		W9026	037	22		23-25-15	165
	G15	UNUSED						150, 155, 162-199, 277
	G15		W9026	047	24		23-25-15	153-154
	G15		W0091	047	24		23-25-15	156-157, 278-299
	H01		W9026	229B	22		23-25-13	150, 153-155, 162-165
	H01		W0091	229B	24		23-25-13	156-157, 166-199, 277-299
	H02		W9026	016Z			23-25-14	150, 153-155, 162-165
	H02		W0091	016Z			23-25-14	156-157, 166-199, 277-299
	H03	UNUSED						150, 153-199, 277-299
	H04		W9026	204B	22		23-25-16	150, 153-155, 162-165
	H04		W0091	204B	24		23-25-11	156-157, 166-199, 277-299
	H05	UNUSED						150, 153-199, 277-299
	H06	UNUSED						150, 153-199, 277-299
	H07		W9026	239B	22		23-25-17	150, 153-155, 162-165
	H07	UNUSED						156-157, 166, 277-299
	H07		W0091	249B	24		23-25-16	167-199
	H08		W9026	019	22		23-25-14	150, 153-155, 162-165
	H08		W0091	019	24		23-25-14	156-157, 166-199, 277-299
	H09		W9026	207B	22		23-25-12	150, 153-155, 162-165
	H09		W0091	207B	24		23-25-12	156-157, 166-199, 277-299
	H10		W9026	212B	22		23-25-12	150, 153-155, 162-165

HOOKUP LIST

D280T132

91-21-51

Section D02600

Page 18

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02647B		SHELF/E09/-01		PLUG-PART OF D02647 (continued)				150, 153-199, 277-299
	H10		W0091	212B	24		23-25-12	156-157, 166-199, 277-299
	H11	UNUSED						150, 153-166, 277-299
	H11		W0091	062	24		23-25-15	167-199
	H12	UNUSED						150, 153-155, 162-165
	H12		W0091	231B	24		23-25-13	156-157, 166-199, 277-299
	H13	UNUSED						150, 153-199
	H13		W0091	031	24		23-25-15	277-299
	H14		W9026	038	24		23-25-15	150, 153-154, 162-163
	H14	UNUSED						155, 164, 166
	H14		W0091	038	24		23-25-15	156-157, 167-199, 277-299
	H14		W9026	038	22		23-25-15	165
	H15	UNUSED						150, 153, 157, 164
	H15		W9026	048	24		23-25-15	154-155, 162-163
	H15		W0091	048	24		23-25-15	156, 166-199, 277-299
	H15		W9026	048	22		23-25-15	165
	J01		W9026	230R	22		23-25-13	150, 153-155, 162-165
	J01		W0091	230R	24		23-25-13	156-157, 166-199, 277-299
	J02		W9026	908R	22		23-25-14	150, 153-155, 162-165
	J02		W0091	908R	22		23-25-14	156-157, 166-199
	J02	UNUSED						277-299
	J03		W9026	235R	22		23-25-13	150, 153-155, 162-165
	J03		W0091	235R	24		23-25-13	156-157, 166-199, 277-299
	J04	UNUSED						150, 153-199, 277-299
	J05	UNUSED						150, 153-199, 277-299
	J06	UNUSED						150, 153-199
	J06		W0091	205R	24		23-25-11	277-299
	J07		W9026	240R	22		23-25-17	150, 153-155, 162-165
	J07	UNUSED						156-157, 166-199, 277-299
	J08	UNUSED						150, 153-199, 277-299
	J09		W9026	208R	22		23-25-12	150, 153-155, 162-165
	J09		W0091	208R	24		23-25-12	156-157, 166-199, 277-299
	J10		W9026	213R	22		23-25-12	150, 153-155, 162-165
	J10		W0091	213R	24		23-25-12	156-157, 166-199, 277-299
	J11	UNUSED						150, 153-166, 277-299
	J11		W0091	063	24		23-25-15	167-199
	J12	UNUSED						150, 153-155, 162-165
	J12		W0091	236R	24		23-25-13	156-157, 166-199, 277-299
	J13	UNUSED						150, 153-154, 156-163, 165, 167-199
	J13		W9026	032	24		23-25-15	155, 164
	J13		W0091	032	24		23-25-15	166, 277-299

HOOKUP LIST

D280T132

91-21-51

Section D02600

Page 19

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02647B		SHELF/E09/-01		PLUG-PART OF D02647 (continued)				150, 153-199, 277-299
	J14		W9026	039	24		23-25-15	150, 153-154, 162-163
	J14	UNUSED						155, 164, 166
	J14		W0091	039	24		23-25-15	156-157, 167-199, 277-299
	J14		W9026	039	22		23-25-15	165
	J15	UNUSED						150, 153, 156, 162, 165-166, 277
	J15		W9026	049	24		23-25-15	154-155, 163-164
	J15		W0091	049	24		23-25-15	157, 167-199, 278-299
	K01		W9026	230B	22		23-25-13	150, 153-155, 162-165
	K01		W0091	230B	24		23-25-13	156-157, 166-199, 277-299
	K02		W9026	908B	22		23-25-14	150, 153-155, 162-165
	K02		W0091	908B	22		23-25-14	156-157, 166-199
	K02	UNUSED						277-299
	K03		W9026	235B	22		23-25-13	150, 153-155, 162-165
	K03		W0091	235B	24		23-25-13	156-157, 166-199, 277-299
	K04	UNUSED						150, 153-199, 277-299
	K05	UNUSED						150, 153-199, 277-299
	K06	UNUSED						150, 153-199
	K06		W0091	205B	24		23-25-11	277-299
	K07		W9026	240B	22		23-25-17	150, 153-155, 162-165
	K07	UNUSED						156-157, 166-199, 277-299
	K08	UNUSED						150, 153-199, 277-299
	K09		W9026	208B	22		23-25-12	150, 153-155, 162-165
	K09		W0091	208B	24		23-25-12	156-157, 166-199, 277-299
	K10		W9026	213B	22		23-25-12	150, 153-155, 162-165
	K10		W0091	213B	24		23-25-12	156-157, 166-199, 277-299
	K11	UNUSED						150, 153-166, 277-299
	K11		W0091	064	24		23-25-15	167-199
	K12	UNUSED						150, 153-155, 162-165
	K12		W0091	236B	24		23-25-13	156-157, 166-199, 277-299
	K13	UNUSED						150, 153-199
	K13		W0091	033	24		23-25-15	277-299
	K14		W9026	040	24		23-25-15	150, 153-155, 162-164
	K14		W0091	040	24		23-25-15	156-157, 166-199, 277-299
	K14	UNUSED						165
	K15		W9026	050	24		23-25-15	150, 153-155, 162-164
	K15		W0091	050	24		23-25-15	156-157, 166-199, 277-299
	K15		W9026	050	22		23-25-15	165
	CAP	Y	W0091	100	22		23-25-13	156-157, 166-199
	CAP	Y	W0091	238B	24		23-25-17	156-157, 166-199, 277-299
	CAP	Y	W0091	238R	24		23-25-17	156-157, 166-199, 277-299

HOOKUP LIST

D280T132

91-21-51

Section D02600

Page 20

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02647B		SHELF/E09/-01		PLUG-PART OF D02647 (continued)				150, 153-199, 277-299
	CAP	Y	W0091	239B	24		23-25-17	156-157, 166-199, 277-299
	CAP	Y	W0091	239R	24		23-25-17	156-157, 166-199, 277-299
	CAP	Y	W0091	240B	24		23-25-17	156-157, 166-199, 277-299
	CAP	Y	W0091	240R	24		23-25-17	156-157, 166-199, 277-299
	DED		W9026	204Z			23-25-16	150, 153-155, 162-165
	DED		W9026	206Z			23-25-12	150, 153-155, 162-165
	DED		W9026	207Z			23-25-12	150, 153-155, 162-165
	DED		W9026	208Z			23-25-12	150, 153-155, 162-165
	DED		W9026	209Z			23-25-12	150, 153-155, 162-165
	DED		W9026	210Z			23-25-12	150, 153-155, 162-165
	DED		W9026	211Z			23-25-12	150, 153-155, 162-165
	DED		W9026	212Z			23-25-12	150, 153-155, 162-165
	DED		W9026	213Z			23-25-12	150, 153-155, 162-165
	DED		W9026	235Z			23-25-13	150, 153-155, 162-165
	DED		W9026	239Z			23-25-17	150, 153-155, 162-165
	DED		W9026	240Z			23-25-17	150, 153-155, 162-165
	DED		W0091	204Z			23-25-11	156-157, 166-199, 277-299
	DED		W0091	206Z			23-25-12	156-157, 166-199, 277-299
	DED		W0091	207Z			23-25-12	156-157, 166-199, 277-299
	DED		W0091	208Z			23-25-12	156-157, 166-199, 277-299
	DED		W0091	209Z			23-25-12	156-157, 166-199, 277-299
	DED		W0091	210Z			23-25-12	156-157, 166-199, 277-299
	DED		W0091	211Z			23-25-12	156-157, 166-199, 277-299
	DED		W0091	212Z			23-25-12	156-157, 166-199, 277-299
	DED		W0091	213Z			23-25-12	156-157, 166-199, 277-299
	DED		W0091	235Z			23-25-13	156-157, 166-199, 277-299
	DED		W0091	236Z			23-25-13	156-157, 166-199, 277-299
	DED		W0091	239Z			23-25-17	156-157, 166-199, 277-299
	DED		W0091	240Z			23-25-17	156-157, 166-199, 277-299
	DED		W0091	241Z			23-25-13	167-199
	DED		W0091	237Z			23-25-13	277-299
	REF		W9026	217	20		23-25-16	150, 153-155, 162-165
	REF		W9026	217Z			23-25-16	150, 153-155, 162-165
	REF		W0091	217	20		23-25-16	156-157, 166-199, 277-299
	REF		W0091	217Z			23-25-16	156-157, 166-199, 277-299
	REF		W0091	249	20		23-25-16	167-199
	REF		W0091	249Z			23-25-16	167-199
	REF		W0091	250	20		23-25-16	167-199
	REF		W0091	250Z			23-25-16	167-199
	REF		W0091	251	20		23-25-15	167-199

HOOKUP LIST

D280T132

91-21-51

Section D02600

Page 21

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02647B		SHELF/E09/-01		PLUG-PART OF D02647 (continued)				150, 153-199, 277-299
	REF		W0091	251Z			23-25-15	167-199
	REF		W0091	205	20		23-25-11	277-299
	REF		W0091	205Z			23-25-11	277-299
			W9026	229	20		23-25-13	150, 153-155, 162-165
			W9026	229Z			23-25-13	150, 153-155, 162-165
			W9026	230	20		23-25-13	150, 153-155, 162-165
			W9026	230Z			23-25-13	150, 153-155, 162-165
			W9026	232	20		23-25-13	150, 153-155, 162-165
			W9026	232Z			23-25-13	150, 153-155, 162-165
			W9026	233	20		23-25-13	150, 153-155, 162-165
			W9026	233Z			23-25-13	150, 153-155, 162-165
			W9026	902	20		23-25-13	150, 153-155, 162-165
			W9026	902Z			23-25-13	150, 153-155, 162-165
			W9026	904	20		23-25-13	150, 153-155, 162-165
			W9026	904Z			23-25-13	150, 153-155, 162-165
			W9026	906	20		23-25-13	150, 153-155, 162-165
			W9026	906Z			23-25-13	150, 153-155, 162-165
			W9026	908	20		23-25-14	150, 153-155, 162-165
			W9026	908Z			23-25-14	150, 153-155, 162-165
			W9026	909	20		23-25-14	150, 153-155, 162-165
			W9026	909Z			23-25-14	150, 153-155, 162-165
			W9026	934	20		23-25-13	150, 153-155, 162-165
			W9026	934Z			23-25-13	150, 153-155, 162-165
			W9026	936Z			23-25-13	150, 153-155, 162-165
			W0091	232	20		23-25-13	156-157, 166, 277-299
			W0091	232Z			23-25-13	156-157, 166, 277-299
			W0091	902	20		23-25-13	156-157, 166-199
			W0091	902Z			23-25-13	156-157, 166-199
			W0091	904	20		23-25-13	156-157, 166-199
			W0091	904Z			23-25-13	156-157, 166-199
			W0091	906	20		23-25-13	156-157, 166-199
			W0091	906Z			23-25-13	156-157, 166-199
			W0091	908	20		23-25-14	156-157, 166-199
			W0091	908Z			23-25-14	156-157, 166-199
			W0091	909	20		23-25-14	156-157, 166-199
			W0091	909Z			23-25-14	156-157, 166-199
			W0091	934	20		23-25-13	156-157, 166-199
			W0091	934Z			23-25-13	156-157, 166-199
			W0091	936Z			23-25-13	156-157, 166-199
			W0091	229	20		23-25-13	156-157, 166-199, 277-299

HOOKUP LIST

D280T132

91-21-51

Section D02600

Page 22

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02647B		SHELF/E09/-01		PLUG-PART OF D02647 (continued)				150, 153-199, 277-299
			W0091	229Z			23-25-13	156-157, 166-199, 277-299
			W0091	230	20		23-25-13	156-157, 166-199, 277-299
			W0091	230Z			23-25-13	156-157, 166-199, 277-299
			W0091	231	20		23-25-13	156-157, 166-199, 277-299
			W0091	231Z			23-25-13	156-157, 166-199, 277-299
			W0091	233	20		23-25-13	156-157, 166-199, 277-299
			W0091	233Z			23-25-13	156-157, 166-199, 277-299
D02647C		SHELF/E09/-01		PLUG-PART OF D02647				150, 153-199, 277-299
	1		W9026	002	20		23-25-11	150, 153-155, 162-165
	1		W0091	002	20		23-25-11	156-157, 166-199, 277-299
	2	UNUSED						150, 153-199, 277-299
	3	UNUSED						150, 153-199, 277-299
	4	UNUSED						150, 153-199, 277-299
	5	UNUSED						150, 153-199, 277-299
	6	UNUSED						150, 153-199, 277-299
	7		W9026	004	20		23-25-11	150, 153-155, 162-165
	7		W0091	004	20		23-25-11	156-157, 166-199, 277-299
	8		W9026	003	20		23-25-11	150, 153-155, 162-165
	8		W0091	003	20		23-25-11	156-157, 166-199, 277-299
	9	UNUSED						150, 153-199, 277-299
	10	UNUSED						150, 153-199, 277-299
	11	UNUSED						150, 153-199, 277-299
	12		W1191	01CX			23-25-12	150, 153-199, 277-299
	13		W1191	02CX			23-25-12	150, 153-199
	13		W1193	01CX			23-25-12	277-299
	=C12		W1191	01CO			23-25-12	150, 153-199, 277-299
	=C13		W1191	02CO			23-25-12	150, 153-199
	=C13		W1193	01CO			23-25-12	277-299
D02649A		SHELF/E09/-01		PLUG-PART OF D02649				150, 153-199, 277-299
	71		W1197	01CX			23-25-12	150, 153-199, 277-299
	A01		W9026	206R	22		23-25-12	150, 153-155, 162-165
	A01		W0091	206R	24		23-25-12	156-157, 166-199, 277-299
	A02	UNUSED						150, 153-199, 277-299
	A03		W9026	211R	22		23-25-12	150, 153-155, 162-165
	A03		W0091	211R	24		23-25-12	156-157, 166-199
	A03	UNUSED						277-299
	A04	UNUSED						150, 153-199, 277-299
	A05	UNUSED						150, 153-199, 277-299

HOOKUP LIST

D280T132

91-21-51

Section D02600

Page 23

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02649A		SHELF/E09/-01		PLUG-PART OF D02649 (continued)				150, 153-199, 277-299
	A06	UNUSED						150, 153-199, 277-299
	A07	UNUSED						150, 153-199, 277-299
	B01		W9026	206B	22		23-25-12	150, 153-155, 162-165
	B01		W0091	206B	24		23-25-12	156-157, 166-199, 277-299
	B02	UNUSED						150, 153-199, 277-299
	B03		W9026	211B	22		23-25-12	150, 153-155, 162-165
	B03		W0091	211B	24		23-25-12	156-157, 166-199
	B03	UNUSED						277-299
	B04	UNUSED						150, 153-199, 277-299
	B05	UNUSED						150, 153-199, 277-299
	B06	UNUSED						150, 153-199, 277-299
	B07	UNUSED						150, 153-199, 277-299
	C01		W9026	207R	22		23-25-12	150, 153-155, 162-165
	C01		W0091	207R	24		23-25-12	156-157, 166-199, 277-299
	C02	UNUSED						150, 153-199, 277-299
	C03		W9026	212R	22		23-25-12	150, 153-155, 162-165
	C03		W0091	212R	24		23-25-12	156-157, 166-199
	C03	UNUSED						277-299
	C04	UNUSED						150, 153-199, 277-299
	C05	UNUSED						150, 153-199, 277-299
	C06	UNUSED						150, 153-199, 277-299
	C07	UNUSED						150, 153-199, 277-299
	D01		W9026	207B	22		23-25-12	150, 153-155, 162-165
	D01		W0091	207B	24		23-25-12	156-157, 166-199, 277-299
	D02	UNUSED						150, 153-199, 277-299
	D03		W9026	212B	22		23-25-12	150, 153-155, 162-165
	D03		W0091	212B	24		23-25-12	156-157, 166-199
	D03	UNUSED						277-299
	D04	UNUSED						150, 153-199, 277-299
	D05	UNUSED						150, 153-199, 277-299
	D06	UNUSED						150, 153-199, 277-299
	D07	UNUSED						150, 153-199, 277-299
	E01		W9026	208R	22		23-25-12	150, 153-155, 162-165
	E01		W0091	208R	24		23-25-12	156-157, 166-199
	E01	UNUSED						277-299
	E02	UNUSED						150, 153-199, 277-299
	E03		W9026	213R	22		23-25-12	150, 153-155, 162-165
	E03		W0091	213R	24		23-25-12	156-157, 166-199
	E03	UNUSED						277-299
	E04	UNUSED						150, 153-199, 277-299

HOOKUP LIST

D280T132

91-21-51

Section D02600

Page 24

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02649A		SHELF/E09/-01		PLUG-PART OF D02649 (continued)				150, 153-199, 277-299
	E05	UNUSED						150, 153-199, 277-299
	E06	UNUSED						150, 153-199, 277-299
	E07	UNUSED						150, 153-199, 277-299
	F01		W9026	208B	22		23-25-12	150, 153-155, 162-165
	F01		W0091	208B	24		23-25-12	156-157, 166-199
	F01	UNUSED						277-299
	F02	UNUSED						150, 153-199, 277-299
	F03		W9026	213B	22		23-25-12	150, 153-155, 162-165
	F03		W0091	213B	24		23-25-12	156-157, 166-199
	F03	UNUSED						277-299
	F04	UNUSED						150, 153-199, 277-299
	F05	UNUSED						150, 153-199, 277-299
	F06	UNUSED						150, 153-199, 277-299
	F07	UNUSED						150, 153-199, 277-299
	G01		W9026	209R	22		23-25-12	150, 153-155, 162-165
	G01		W0091	209R	24		23-25-12	156-157, 166-199
	G01	UNUSED						277-299
	G02	UNUSED						150, 153-199, 277-299
	G03	UNUSED						150, 153-199, 277-299
	G04	UNUSED						150, 153-199, 277-299
	G05	UNUSED						150, 153-199, 277-299
	G06	UNUSED						150, 153-199, 277-299
	G07	UNUSED						150, 153-199, 277-299
	H01		W9026	209B	22		23-25-12	150, 153-155, 162-165
	H01		W0091	209B	24		23-25-12	156-157, 166-199
	H01	UNUSED						277-299
	H02	UNUSED						150, 153-199, 277-299
	H03	UNUSED						150, 153-199, 277-299
	H04	UNUSED						150, 153-199, 277-299
	H05	UNUSED						150, 153-199, 277-299
	H06	UNUSED						150, 153-199, 277-299
	H07	UNUSED						150, 153-199, 277-299
	J01		W9026	210R	22		23-25-12	150, 153-155, 162-165
	J01		W0091	210R	24		23-25-12	156-157, 166-199
	J01	UNUSED						277-299
	J02	UNUSED						150, 153-199, 277-299
	J03	UNUSED						150, 153-199, 277-299
	J04	UNUSED						150, 153-199, 277-299
	J05	UNUSED						150, 153-199, 277-299
	J06	UNUSED						150, 153-199, 277-299

HOOKUP LIST

D280T132

91-21-51

Section D02600

Page 25

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02649A		SHELF/E09/-01		PLUG-PART OF D02649 (continued)				150, 153-199, 277-299
	J07	UNUSED						150, 153-199, 277-299
	K01		W9026	210B	22		23-25-12	150, 153-155, 162-165
	K01		W0091	210B	24		23-25-12	156-157, 166-199
	K01	UNUSED						277-299
	K02	UNUSED						150, 153-199, 277-299
	K03	UNUSED						150, 153-199, 277-299
	K04	UNUSED						150, 153-199, 277-299
	K05	UNUSED						150, 153-199, 277-299
	K06	UNUSED						150, 153-199, 277-299
	K07	UNUSED						150, 153-199, 277-299
	=C71		W1197	01CO			23-25-12	150, 153-199, 277-299
	REF		W9026	206	20		23-25-12	150, 153-155, 162-165
	REF		W9026	206Z			23-25-12	150, 153-155, 162-165
	REF		W9026	207	20		23-25-12	150, 153-155, 162-165
	REF		W9026	207Z			23-25-12	150, 153-155, 162-165
	REF		W9026	208	20		23-25-12	150, 153-155, 162-165
	REF		W9026	208Z			23-25-12	150, 153-155, 162-165
	REF		W9026	209	20		23-25-12	150, 153-155, 162-165
	REF		W9026	209Z			23-25-12	150, 153-155, 162-165
	REF		W9026	210	20		23-25-12	150, 153-155, 162-165
	REF		W9026	210Z			23-25-12	150, 153-155, 162-165
	REF		W9026	211	20		23-25-12	150, 153-155, 162-165
	REF		W9026	211Z			23-25-12	150, 153-155, 162-165
	REF		W9026	212	20		23-25-12	150, 153-155, 162-165
	REF		W9026	212Z			23-25-12	150, 153-155, 162-165
	REF		W9026	213	20		23-25-12	150, 153-155, 162-165
	REF		W9026	213Z			23-25-12	150, 153-155, 162-165
	REF		W0091	208	20		23-25-12	156-157, 166-199
	REF		W0091	208Z			23-25-12	156-157, 166-199
	REF		W0091	209	20		23-25-12	156-157, 166-199
	REF		W0091	209Z			23-25-12	156-157, 166-199
	REF		W0091	210	20		23-25-12	156-157, 166-199
	REF		W0091	210Z			23-25-12	156-157, 166-199
	REF		W0091	211	20		23-25-12	156-157, 166-199
	REF		W0091	211Z			23-25-12	156-157, 166-199
	REF		W0091	212	20		23-25-12	156-157, 166-199
	REF		W0091	212Z			23-25-12	156-157, 166-199
	REF		W0091	213	20		23-25-12	156-157, 166-199
	REF		W0091	213Z			23-25-12	156-157, 166-199
	REF		W0091	206	20		23-25-12	156-157, 166-199, 277-299

HOOKUP LIST

D280T132

91-21-51

Section D02600

Page 26

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02649A		SHELF/E09/-01		PLUG-PART OF D02649 (continued)				150, 153-199, 277-299
	REF		W0091	206Z			23-25-12	156-157, 166-199, 277-299
	REF		W0091	207	20		23-25-12	156-157, 166-199, 277-299
	REF		W0091	207Z			23-25-12	156-157, 166-199, 277-299
D02649B		SHELF/E09/-01		PLUG-PART OF D02649				150, 153-199, 277-299
	71		W1195	01CX			23-25-12	150, 153-199, 277-299
	A01	UNUSED						150, 153-199, 277-299
	A02	UNUSED						150, 153-199, 277-299
	A03	UNUSED						150, 153-199, 277-299
	A03		W0091	211R	24		23-25-12	150, 153-199 277-299
	A04	UNUSED						150, 153-199, 277-299
	A05	UNUSED						150, 153-199, 277-299
	A06	UNUSED						150, 153-199, 277-299
	A07	UNUSED						150, 153-199, 277-299
	B01	UNUSED						150, 153-199, 277-299
	B02	UNUSED						150, 153-199, 277-299
	B03	UNUSED						150, 153-199
	B03		W0091	211B	24		23-25-12	277-299
	B04	UNUSED						150, 153-199, 277-299
	B05	UNUSED						150, 153-199, 277-299
	B06	UNUSED						150, 153-199, 277-299
	B07	UNUSED						150, 153-199, 277-299
	C01	UNUSED						150, 153-199, 277-299
	C02	UNUSED						150, 153-199, 277-299
	C03	UNUSED						150, 153-199
	C03		W0091	212R	24		23-25-12	277-299
	C04	UNUSED						150, 153-199, 277-299
	C05	UNUSED						150, 153-199, 277-299
	C06	UNUSED						150, 153-199, 277-299
	C07	UNUSED						150, 153-199, 277-299
	D01	UNUSED						150, 153-199, 277-299
	D02	UNUSED						150, 153-199, 277-299
	D03	UNUSED						150, 153-199
	D03		W0091	212B	24		23-25-12	277-299
	D04	UNUSED						150, 153-199, 277-299
	D05	UNUSED						150, 153-199, 277-299
	D06	UNUSED						150, 153-199, 277-299
	D07	UNUSED						150, 153-199, 277-299
	E01	UNUSED						150, 153-199
	E01		W0091	208R	24		23-25-12	277-299

HOOKUP LIST

D280T132

91-21-51

Section D02600

Page 27

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02649B		SHELF/E09/-01		PLUG-PART OF D02649 (continued)				150, 153-199, 277-299
	E02	UNUSED						150, 153-199, 277-299
	E03	UNUSED						150, 153-199
	E03		W0091	213R	24		23-25-12	277-299
	E04	UNUSED						150, 153-199, 277-299
	E05	UNUSED						150, 153-199, 277-299
	E06	UNUSED						150, 153-199, 277-299
	E07	UNUSED						150, 153-199, 277-299
	F01	UNUSED						150, 153-199
	F01		W0091	208B	24		23-25-12	277-299
	F02	UNUSED						150, 153-199, 277-299
	F03	UNUSED						150, 153-199
	F03		W0091	213B	24		23-25-12	277-299
	F04	UNUSED						150, 153-199, 277-299
	F05	UNUSED						150, 153-199, 277-299
	F06	UNUSED						150, 153-199, 277-299
	F07	UNUSED						150, 153-199, 277-299
	G01	UNUSED						150, 153-199
	G01		W0091	209R	24		23-25-12	277-299
	G02	UNUSED						150, 153-199, 277-299
	G03	UNUSED						150, 153-199, 277-299
	G04	UNUSED						150, 153-199, 277-299
	G05	UNUSED						150, 153-199, 277-299
	G06	UNUSED						150, 153-199, 277-299
	G07	UNUSED						150, 153-199, 277-299
	H01	UNUSED						150, 153-199
	H01		W0091	209B	24		23-25-12	277-299
	H02	UNUSED						150, 153-199, 277-299
	H03	UNUSED						150, 153-199, 277-299
	H04	UNUSED						150, 153-199, 277-299
	H05	UNUSED						150, 153-199, 277-299
	H06	UNUSED						150, 153-199, 277-299
	H07	UNUSED						150, 153-199, 277-299
	J01	UNUSED						150, 153-199
	J01		W0091	210R	24		23-25-12	277-299
	J02	UNUSED						150, 153-199, 277-299
	J03	UNUSED						150, 153-199, 277-299
	J04	UNUSED						150, 153-199, 277-299
	J05	UNUSED						150, 153-199, 277-299
	J06	UNUSED						150, 153-199, 277-299
	J07	UNUSED						150, 153-199, 277-299

HOOKUP LIST

D280T132

91-21-51

Section D02600

Page 28

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02649B		SHELF/E09/-01		PLUG-PART OF D02649 (continued)				150, 153-199, 277-299
	K01	UNUSED						150, 153-199
	K01		W0091	210B	24		23-25-12	277-299
	K02	UNUSED						150, 153-199, 277-299
	K03	UNUSED						150, 153-199, 277-299
	K04	UNUSED						150, 153-199, 277-299
	K05	UNUSED						150, 153-199, 277-299
	K06	UNUSED						150, 153-199, 277-299
	K07	UNUSED						150, 153-199, 277-299
	=C71		W1195	01CO			23-25-12	150, 153-199, 277-299
	REF		W0091	208	20		23-25-12	277-299
	REF		W0091	208Z			23-25-12	277-299
	REF		W0091	209	20		23-25-12	277-299
	REF		W0091	209Z			23-25-12	277-299
	REF		W0091	210	20		23-25-12	277-299
	REF		W0091	210Z			23-25-12	277-299
	REF		W0091	211	20		23-25-12	277-299
	REF		W0091	211Z			23-25-12	277-299
	REF		W0091	212	20		23-25-12	277-299
	REF		W0091	212Z			23-25-12	277-299
	REF		W0091	213	20		23-25-12	277-299
	REF		W0091	213Z			23-25-12	277-299
D02649C		SHELF/E09/-01		PLUG-PART OF D02649				150, 153-199, 277-299
	1		W9026	053	20		23-25-12	150, 153-155, 162-165
	1		W0091	053	20		23-25-12	156-157, 166-199, 277-299
	2	UNUSED						150, 153-199, 277-299
	3	UNUSED						150, 153-199, 277-299
	4	UNUSED						150, 153-199, 277-299
	5	UNUSED						150, 153-199, 277-299
	6	UNUSED						150, 153-199, 277-299
	7		W9026	054	18		23-25-12	150, 153-155, 162-165
	7		W0091	054	18		23-25-12	156-157, 166-199, 277-299
	8		W9026	055	18		23-25-12	150, 153-155, 162-165
	8		W0091	055	18		23-25-12	156-157, 166-199, 277-299
	9	UNUSED						150, 153-199, 277-299
	10	UNUSED						150, 153-199, 277-299
	11	UNUSED						150, 153-199, 277-299
	12		W1191	01CX			23-25-12	150, 153-199, 277-299
	13		W1191	02CX			23-25-12	150, 153-199
	13		W1193	01CX			23-25-12	277-299

HOOKUP LIST

D280T132

91-21-51

Section D02600

Page 29

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02649C		SHELF/E09/-01		PLUG-PART OF D02649 (continued)				150, 153-199, 277-299
	= C12		W1191	01CO			23-25-12	150, 153-199, 277-299
	= C13		W1191	02CO			23-25-12	150, 153-199
	= C13		W1193	01CO			23-25-12	277-299
D02650		1560/190/R030		PLUG-				ALL
	1	FO	W0284	018	14		25-33-11	ALL
	2	FO	W0284	019	14		25-33-11	ALL
	3	FO	W0284	020	14		25-33-11	ALL
	4		W0284	004	24		25-33-11	ALL
	5		W0284	011	20		25-33-11	050-099, 150-199, 275-278
	5		W0284	022	20		25-33-11	280-299
	6		W0284	022	20		25-33-11	050-099, 150-199, 275-278
	6		W0284	011	20		25-33-11	280-299
	7		W0284	007	20		25-33-11	ALL
	8		W0284	012	20		25-33-11	ALL
	9	FO	W0284	021	14		25-33-11	ALL
	10	UNUSED						ALL
D02651A		SHELF/E10/		PLUG-PART OF D02651				150, 153-155, 162-165
D02651A		//		PLUG-PART OF D02651				156-157, 166-199, 277-299
	71		W9120	01CX			23-25-12	150, 153-155, 162-165
	71		W1199	01CX			23-25-12	156-157, 166-199, 277-299
	A01		W9020	202R	22		23-25-16	150, 153-155, 162-165
	A01		W1003	202R	24		23-25-16	156-157, 166-199, 277-299
	A02	UNUSED						150, 153-199, 277-299
	A03		W9020	901R	22		23-25-17	150, 153-155, 162-165
	A03		W1003	901R	22		23-25-17	156-157, 166-199
	A03		W1003	203R	24		23-25-16	277-299
	A04	UNUSED						150, 153-199, 277-299
	A05	UNUSED						150, 153-199, 277-299
	A06	UNUSED						150, 153-199, 277-299
	A07	UNUSED						150, 153-199, 277-299
	B01		W9020	202B	22		23-25-16	150, 153-155, 162-165
	B01		W1003	202B	24		23-25-16	156-157, 166-199, 277-299
	B02	UNUSED						150, 153-199, 277-299
	B03		W9020	901B	22		23-25-17	150, 153-155, 162-165
	B03		W1003	901B	22		23-25-17	156-157, 166-199
	B03		W1003	203B	24		23-25-16	277-299
	B04	UNUSED						150, 153-199, 277-299
	B05		W9020	004	22		23-25-16	150, 153-155, 162-165

HOOKUP LIST

D280T132

91-21-51

Section D02600

Page 30

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02651A		SHELF/E10/		PLUG-PART OF D02651 (continued)				150, 153-155, 162-165
D02651A		//		PLUG-PART OF D02651 (continued)				156-157, 166-199, 277-299
	B05		W1003	004	24		23-25-16	156-157, 166-199, 277-299
	B06	UNUSED						150, 153-199, 277-299
	B07	UNUSED						150, 153-199, 277-299
	C01		W9020	201R	22		23-25-16	150, 153-155, 162-165
	C01		W1003	201R	24		23-25-16	156-157, 166-199, 277-299
	C02	UNUSED						150, 153-199, 277-299
	C03		W9020	902R	22		23-25-17	150, 153-155, 162-165
	C03		W1003	902R	22		23-25-17	156-157, 166-199
	C03	UNUSED						277-299
	C04	UNUSED						150, 153-199, 277-299
	C05	UNUSED						150, 153-199, 277-299
	C06	UNUSED						150, 153-199, 277-299
	C07	UNUSED						150, 153-199, 277-299
	D01		W9020	201B	22		23-25-16	150, 153-155, 162-165
	D01		W1003	201B	24		23-25-16	156-157, 166-199, 277-299
	D02	UNUSED						150, 153-199, 277-299
	D03		W9020	902B	22		23-25-17	150, 153-155, 162-165
	D03		W1003	902B	22		23-25-17	156-157, 166-199
	D03	UNUSED						277-299
	D04	UNUSED						150, 153-199, 277-299
	D05		W9020	004	22		23-25-16	150, 153-155, 162-165
	D05		W1003	004	24		23-25-16	156-157, 166-199, 277-299
	D06	UNUSED						150, 153-199, 277-299
	D07	UNUSED						150, 153-199, 277-299
	E01	UNUSED						150, 153-199, 277-299
	E02	UNUSED						150, 153-199, 277-299
	E03	UNUSED						150, 153-199, 277-299
	E04	UNUSED						150, 153-199, 277-299
	E05	UNUSED						150, 153-199, 277-299
	E06	UNUSED						150, 153-199, 277-299
	E07	UNUSED						150, 153-199, 277-299
	F01	UNUSED						150, 153-199, 277-299
	F02	UNUSED						150, 153-199, 277-299
	F03	UNUSED						150, 153-199, 277-299
	F04	UNUSED						150, 153-199, 277-299
	F05	UNUSED						150, 153-199, 277-299
	F06	UNUSED						150, 153-199, 277-299
	F07	UNUSED						150, 153-199, 277-299
	G01	UNUSED						150, 153-199, 277-299

HOOKUP LIST

D280T132

91-21-51

Section D02600

Page 31

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02651A		SHELF/E10/		PLUG-PART OF D02651 (continued)				150, 153-155, 162-165
D02651A		//		PLUG-PART OF D02651 (continued)				156-157, 166-199, 277-299
	G02	UNUSED						150, 153-199, 277-299
	G03	UNUSED						150, 153-199, 277-299
	G04	UNUSED						150, 153-199, 277-299
	G05	UNUSED						150, 153-199, 277-299
	G06	UNUSED						150, 153-199, 277-299
	G07	UNUSED						150, 153-199, 277-299
	H01	UNUSED						150, 153-199, 277-299
	H02	UNUSED						150, 153-199, 277-299
	H03	UNUSED						150, 153-199, 277-299
	H04	UNUSED						150, 153-199, 277-299
	H05	UNUSED						150, 153-199, 277-299
	H06	UNUSED						150, 153-199, 277-299
	H07	UNUSED						150, 153-199, 277-299
	J01	UNUSED						150, 153-199, 277-299
	J02	UNUSED						150, 153-199, 277-299
	J03	UNUSED						150, 153-199, 277-299
	J04	UNUSED						150, 153-199, 277-299
	J05	UNUSED						150, 153-199, 277-299
	J06	UNUSED						150, 153-199, 277-299
	J07	UNUSED						150, 153-199, 277-299
	K01	UNUSED						150, 153-199, 277-299
	K02	UNUSED						150, 153-199, 277-299
	K03	UNUSED						150, 153-199, 277-299
	K04	UNUSED						150, 153-199, 277-299
	K05	UNUSED						150, 153-199, 277-299
	K06	UNUSED						150, 153-199, 277-299
	K07	UNUSED						150, 153-199, 277-299
	= C71		W9120	01CO			23-25-12	150, 153-155, 162-165
	= C71		W1199	01CO			23-25-12	156-157, 166-199, 277-299
	CAP	Y	W1003	203B	24		23-25-16	156-157, 166-199
	CAP	Y	W1003	203R	24		23-25-16	156-157, 166-199
	DED		W9020	201Z			23-25-16	150, 153-155, 162-165
	DED		W9020	202Z			23-25-16	150, 153-155, 162-165
	DED		W1003	201Z			23-25-16	156-157, 166-199, 277-299
	DED		W1003	202Z			23-25-16	156-157, 166-199, 277-299
D02651B		//		PLUG-PART OF D02651				150, 153-199, 277-299
	71		W9126	01CX			23-25-17	150, 153-155, 162-165
	71		W1043	01CX			23-25-17	156-157, 166-199

HOOKUP LIST

D280T132

91-21-51

Section D02600

Page 32

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02651B		//		PLUG-PART OF D02651 (continued)				150, 153-199, 277-299
	71		W1043	01CX			23-25-16	277-299
	A01	UNUSED						150, 153-199, 277-299
	A02	UNUSED						150, 153-199, 277-299
	A03	UNUSED						150, 153-199, 277-299
	A04	UNUSED						150, 153-199, 277-299
	A05	UNUSED						150, 153-199, 277-299
	A06	UNUSED						150, 153-199, 277-299
	A07	UNUSED						150, 153-199, 277-299
	B01	UNUSED						150, 153-199, 277-299
	B02	UNUSED						150, 153-199, 277-299
	B03	UNUSED						150, 153-199, 277-299
	B04	UNUSED						150, 153-199, 277-299
	B05	UNUSED						150, 153-199, 277-299
	B06	UNUSED						150, 153-199, 277-299
	B07	UNUSED						150, 153-199, 277-299
	C01	UNUSED						150, 153-199, 277-299
	C02	UNUSED						150, 153-199, 277-299
	C03	UNUSED						150, 153-199, 277-299
	C04	UNUSED						150, 153-199, 277-299
	C05	UNUSED						150, 153-199, 277-299
	C06	UNUSED						150, 153-199, 277-299
	C07	UNUSED						150, 153-199, 277-299
	D01	UNUSED						150, 153-199, 277-299
	D02	UNUSED						150, 153-199, 277-299
	D03	UNUSED						150, 153-199, 277-299
	D04	UNUSED						150, 153-199, 277-299
	D05	UNUSED						150, 153-199, 277-299
	D06	UNUSED						150, 153-199, 277-299
	D07	UNUSED						150, 153-199, 277-299
	E01	UNUSED						150, 153-199, 277-299
	E02	UNUSED						150, 153-199, 277-299
	E03	UNUSED						150, 153-199, 277-299
	E04	UNUSED						150, 153-199, 277-299
	E05	UNUSED						150, 153-199, 277-299
	E06	UNUSED						150, 153-199, 277-299
	E07	UNUSED						150, 153-199, 277-299
	F01	UNUSED						150, 153-199, 277-299
	F02	UNUSED						150, 153-199, 277-299
	F03	UNUSED						150, 153-199, 277-299
	F04	UNUSED						150, 153-199, 277-299

HOOKUP LIST
D280T132

91-21-51
Section D02600
Page 33
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02651B		//		PLUG-PART OF D02651 (continued)				150, 153-199, 277-299
	F05	UNUSED						150, 153-199, 277-299
	F06	UNUSED						150, 153-199, 277-299
	F07	UNUSED						150, 153-199, 277-299
	G01	UNUSED						150, 153-199, 277-299
	G02	UNUSED						150, 153-199, 277-299
	G03	UNUSED						150, 153-199, 277-299
	G04	UNUSED						150, 153-199, 277-299
	G05	UNUSED						150, 153-199, 277-299
	G06	UNUSED						150, 153-199, 277-299
	G07	UNUSED						150, 153-199, 277-299
	H01	UNUSED						150, 153-199, 277-299
	H02	UNUSED						150, 153-199, 277-299
	H03	UNUSED						150, 153-199, 277-299
	H04	UNUSED						150, 153-199, 277-299
	H05	UNUSED						150, 153-199, 277-299
	H06	UNUSED						150, 153-199, 277-299
	H07	UNUSED						150, 153-199, 277-299
	J01	UNUSED						150, 153-199, 277-299
	J02	UNUSED						150, 153-199, 277-299
	J03	UNUSED						150, 153-199, 277-299
	J04	UNUSED						150, 153-199, 277-299
	J05	UNUSED						150, 153-199, 277-299
	J06	UNUSED						150, 153-199, 277-299
	J07	UNUSED						150, 153-199, 277-299
	K01	UNUSED						150, 153-199, 277-299
	K02	UNUSED						150, 153-199, 277-299
	K03	UNUSED						150, 153-199, 277-299
	K04	UNUSED						150, 153-199, 277-299
	K05	UNUSED						150, 153-199, 277-299
	K06	UNUSED						150, 153-199, 277-299
	K07	UNUSED						150, 153-199, 277-299
	=C71		W9126	01CO			23-25-17	150, 153-155, 162-165
	=C71		W1043	01CO			23-25-17	156-157, 166-199
	=C71		W1043	01CO			23-25-16	277-299
D02651C		//		PLUG-PART OF D02651				150, 153-199, 277-299
	1		W9020	005	20		23-25-16	150, 153-155, 162-165
	1		W1003	005	20		23-25-16	156-157, 166-199, 277-299
	2	UNUSED						150, 153-199, 277-299
	3	UNUSED						150, 153-199, 277-299

HOOKUP LIST

D280T132

91-21-51

Section D02600

Page 34

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02651C		//		PLUG-PART OF D02651 (continued)				150, 153-199, 277-299
	4	UNUSED						150, 153-199, 277-299
	5	UNUSED						150, 153-199, 277-299
	6	UNUSED						150, 153-199, 277-299
	7		W9020	006	20		23-25-16	150, 153-155, 162-165
	7		W1003	006	20		23-25-16	156-157, 166-199, 277-299
	8		W9020	007	20		23-25-16	150, 153-155, 162-165
	8		W1003	007	20		23-25-16	156-157, 166-199, 277-299
	9	UNUSED						150, 153-199, 277-299
	10	UNUSED						150, 153-199, 277-299
	11	UNUSED						150, 153-199, 277-299
	12	UNUSED						150, 153-199, 277-299
	13	UNUSED						150, 153-199, 277-299
	= C12	UNUSED						150, 153-199, 277-299
	= C13	UNUSED						150, 153-199, 277-299
D02652		1540/190/R050		PLUG-				ALL
	1	FO	W0286	018	14		25-33-11	ALL
	2	FO	W0286	019	14		25-33-11	ALL
	3	FO	W0286	020	14		25-33-11	ALL
	4		W0286	004	24		25-33-11	ALL
	5		W0286	011	20		25-33-11	050-099, 150-199, 275-278
	5		W0286	026	20		25-33-11	280-299
	6		W0286	026	20		25-33-11	050-099, 150-199, 275-278
	6		W0286	011	20		25-33-11	280-299
	7		W0286	025	20		25-33-11	ALL
	8		W0286	012	20		25-33-11	ALL
	9	FO	W0286	021	14		25-33-11	ALL
	10	UNUSED						ALL
D02653A		//		PLUG-PART OF D02653				156-157, 166-199, 277-299
	71		W1047	01CX			23-25-11	156-157, 166-199, 277-299
	A01		W1011	202R	24		23-25-11	156-157, 166-199, 277-299
	A02	UNUSED						156-157, 166-199, 277-299
	A03	UNUSED						156-157, 166-199, 277-299
	A04	UNUSED						156-157, 166-199, 277-299
	A05		W1011	006	24		23-25-11	156-157, 166-199, 277-299
	A06	UNUSED						156-157, 166-199, 277-299
	A07	UNUSED						156-157, 166-199, 277-299
	B01		W1011	202B	24		23-25-11	156-157, 166-199, 277-299
	B02	UNUSED						156-157, 166-199, 277-299

HOOKUP LIST

D280T132

91-21-51

Section D02600

Page 35

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02653A		//		PLUG-PART OF D02653 (continued)				156-157, 166-199, 277-299
	B03	UNUSED						156-157, 166-199, 277-299
	B04	UNUSED						156-157, 166-199, 277-299
	B05	UNUSED						156-157, 166-199, 277-299
	B06	UNUSED						156-157, 166-199, 277-299
	B07	UNUSED						156-157, 166-199, 277-299
	C01		W1011	203R	24		23-25-11	156-157, 166-199, 277-299
	C02	UNUSED						156-157, 166-199, 277-299
	C03	UNUSED						156-157, 166-199, 277-299
	C04	UNUSED						156-157, 166-199, 277-299
	C05	UNUSED						156-157, 166-199, 277-299
	C06	UNUSED						156-157, 166-199, 277-299
	C07	UNUSED						156-157, 166-199, 277-299
	D01		W1011	203B	24		23-25-11	156-157, 166-199, 277-299
	D02	UNUSED						156-157, 166-199, 277-299
	D03	UNUSED						156-157, 166-199, 277-299
	D04	UNUSED						156-157, 166-199, 277-299
	D05		W1011	006	24		23-25-11	156-157, 166-199, 277-299
	D06	UNUSED						156-157, 166-199, 277-299
	D07	UNUSED						156-157, 166-199, 277-299
	E01	UNUSED						156-157, 166-199, 277-299
	E02	UNUSED						156-157, 166-199, 277-299
	E03	UNUSED						156-157, 166-199, 277-299
	E04	UNUSED						156-157, 166-199, 277-299
	E05	UNUSED						156-157, 166-199, 277-299
	E06	UNUSED						156-157, 166-199, 277-299
	E07	UNUSED						156-157, 166-199, 277-299
	F01	UNUSED						156-157, 166-199, 277-299
	F02	UNUSED						156-157, 166-199, 277-299
	F03	UNUSED						156-157, 166-199, 277-299
	F04	UNUSED						156-157, 166-199, 277-299
	F05	UNUSED						156-157, 166-199, 277-299
	F06	UNUSED						156-157, 166-199, 277-299
	F07	UNUSED						156-157, 166-199, 277-299
	G01	UNUSED						156-157, 166-199, 277-299
	G02	UNUSED						156-157, 166-199, 277-299
	G03	UNUSED						156-157, 166-199, 277-299
	G04	UNUSED						156-157, 166-199, 277-299
	G05	UNUSED						156-157, 166-199, 277-299
	G06	UNUSED						156-157, 166-199, 277-299
	G07	UNUSED						156-157, 166-199, 277-299

HOOKUP LIST

D280T132

91-21-51

Section D02600

Page 36

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02653A		//		PLUG-PART OF D02653 (continued)				156-157, 166-199, 277-299
	H01	UNUSED						156-157, 166-199, 277-299
	H02	UNUSED						156-157, 166-199, 277-299
	H03	UNUSED						156-157, 166-199, 277-299
	H04	UNUSED						156-157, 166-199, 277-299
	H05	UNUSED						156-157, 166-199, 277-299
	H06	UNUSED						156-157, 166-199, 277-299
	H07	UNUSED						156-157, 166-199, 277-299
	J01	UNUSED						156-157, 166-199, 277-299
	J02	UNUSED						156-157, 166-199, 277-299
	J03	UNUSED						156-157, 166-199, 277-299
	J04	UNUSED						156-157, 166-199, 277-299
	J05	UNUSED						156-157, 166-199, 277-299
	J06	UNUSED						156-157, 166-199, 277-299
	J07	UNUSED						156-157, 166-199, 277-299
	K01	UNUSED						156-157, 166-199, 277-299
	K02	UNUSED						156-157, 166-199, 277-299
	K03	UNUSED						156-157, 166-199, 277-299
	K04	UNUSED						156-157, 166-199, 277-299
	K05	UNUSED						156-157, 166-199, 277-299
	K06	UNUSED						156-157, 166-199, 277-299
	K07	UNUSED						156-157, 166-199, 277-299
	=C71		W1047	01CO			23-25-11	156-157, 166-199, 277-299
	DED		W1011	202Z			23-25-11	156-157, 166-199, 277-299
	DED		W1011	203Z			23-25-11	156-157, 166-199, 277-299
D02653B		//		PLUG-PART OF D02653				156-157, 166-199, 277-299
	71		W1045	01CX			23-25-11	156-157, 166-199, 277-299
	A01	UNUSED						156-157, 166-199, 277-299
	A02	UNUSED						156-157, 166-199, 277-299
	A03	UNUSED						156-157, 166-199, 277-299
	A04	UNUSED						156-157, 166-199, 277-299
	A05	UNUSED						156-157, 166-199, 277-299
	A06	UNUSED						156-157, 166-199, 277-299
	A07	UNUSED						156-157, 166-199, 277-299
	B01	UNUSED						156-157, 166-199, 277-299
	B02	UNUSED						156-157, 166-199, 277-299
	B03	UNUSED						156-157, 166-199, 277-299
	B04	UNUSED						156-157, 166-199, 277-299
	B05	UNUSED						156-157, 166-199, 277-299
	B06	UNUSED						156-157, 166-199, 277-299

HOOKUP LIST
D280T132

91-21-51
Section D02600
Page 37
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02653B		//		PLUG-PART OF D02653 (continued)				156-157, 166-199, 277-299
	B07	UNUSED						156-157, 166-199, 277-299
	C01	UNUSED						156-157, 166-199, 277-299
	C02	UNUSED						156-157, 166-199, 277-299
	C03	UNUSED						156-157, 166-199, 277-299
	C04	UNUSED						156-157, 166-199, 277-299
	C05	UNUSED						156-157, 166-199, 277-299
	C06	UNUSED						156-157, 166-199, 277-299
	C07	UNUSED						156-157, 166-199, 277-299
	D01	UNUSED						156-157, 166-199, 277-299
	D02	UNUSED						156-157, 166-199, 277-299
	D03	UNUSED						156-157, 166-199, 277-299
	D04	UNUSED						156-157, 166-199, 277-299
	D05	UNUSED						156-157, 166-199, 277-299
	D06	UNUSED						156-157, 166-199, 277-299
	D07	UNUSED						156-157, 166-199, 277-299
	E01	UNUSED						156-157, 166-199, 277-299
	E02	UNUSED						156-157, 166-199, 277-299
	E03	UNUSED						156-157, 166-199, 277-299
	E04	UNUSED						156-157, 166-199, 277-299
	E05	UNUSED						156-157, 166-199, 277-299
	E06	UNUSED						156-157, 166-199, 277-299
	E07	UNUSED						156-157, 166-199, 277-299
	F01	UNUSED						156-157, 166-199, 277-299
	F02	UNUSED						156-157, 166-199, 277-299
	F03	UNUSED						156-157, 166-199, 277-299
	F04	UNUSED						156-157, 166-199, 277-299
	F05	UNUSED						156-157, 166-199, 277-299
	F06	UNUSED						156-157, 166-199, 277-299
	F07	UNUSED						156-157, 166-199, 277-299
	G01	UNUSED						156-157, 166-199, 277-299
	G02	UNUSED						156-157, 166-199, 277-299
	G03	UNUSED						156-157, 166-199, 277-299
	G04	UNUSED						156-157, 166-199, 277-299
	G05	UNUSED						156-157, 166-199, 277-299
	G06	UNUSED						156-157, 166-199, 277-299
	G07	UNUSED						156-157, 166-199, 277-299
	H01	UNUSED						156-157, 166-199, 277-299
	H02	UNUSED						156-157, 166-199, 277-299
	H03	UNUSED						156-157, 166-199, 277-299
	H04	UNUSED						156-157, 166-199, 277-299

HOOKUP LIST

D280T132

91-21-51

Section D02600

Page 38

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02653B		//		PLUG-PART OF D02653 (continued)				156-157, 166-199, 277-299
	H05	UNUSED						156-157, 166-199, 277-299
	H06	UNUSED						156-157, 166-199, 277-299
	H07	UNUSED						156-157, 166-199, 277-299
	J01	UNUSED						156-157, 166-199, 277-299
	J02	UNUSED						156-157, 166-199, 277-299
	J03	UNUSED						156-157, 166-199, 277-299
	J04	UNUSED						156-157, 166-199, 277-299
	J05	UNUSED						156-157, 166-199, 277-299
	J06	UNUSED						156-157, 166-199, 277-299
	J07	UNUSED						156-157, 166-199, 277-299
	K01	UNUSED						156-157, 166-199, 277-299
	K02	UNUSED						156-157, 166-199, 277-299
	K03	UNUSED						156-157, 166-199, 277-299
	K04	UNUSED						156-157, 166-199, 277-299
	K05	UNUSED						156-157, 166-199, 277-299
	K06	UNUSED						156-157, 166-199, 277-299
	K07	UNUSED						156-157, 166-199, 277-299
	=C71		W1045	01CO			23-25-11	156-157, 166-199, 277-299
D02653C		//		PLUG-PART OF D02653				156-157, 166-199, 277-299
	1		W1011	003	20		23-25-11	156-157, 166-199, 277-299
	2	UNUSED						156-157, 166-199, 277-299
	3	UNUSED						156-157, 166-199, 277-299
	4	UNUSED						156-157, 166-199, 277-299
	5	UNUSED						156-157, 166-199, 277-299
	6	UNUSED						156-157, 166-199, 277-299
	7		W1011	002	20		23-25-11	156-157, 166-199, 277-299
	8		W1011	001	20		23-25-11	156-157, 166-199, 277-299
	9	UNUSED						156-157, 166-199, 277-299
	10	UNUSED						156-157, 166-199, 277-299
	11	UNUSED						156-157, 166-199, 277-299
	12	UNUSED						156-157, 166-199, 277-299
	13	UNUSED						156-157, 166-199, 277-299
	=C12	UNUSED						156-157, 166-199, 277-299
	=C13	UNUSED						156-157, 166-199, 277-299
D02654		0256/175/R050		PLUG-				ALL
	1		W0282	001	16		25-33-11	ALL
	2		W0282	002	16		25-33-11	ALL
	3		W0282	003	16		25-33-11	ALL

HOOKUP LIST
D280T132

91-21-51
Section D02600
Page 39
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02654		0256/175/R050		PLUG- (continued)				ALL
	4		W0282	004	24		25-33-11	ALL
	5		W0282	011	20		25-33-11	050-099, 150-199, 277-278
	5		W0282	023	22		25-33-11	275-276
	5		W0282	022	22		25-33-11	280-299
	6		W0282	023	22		25-33-11	050-099, 150-199
	6		W0282	011	20		25-33-11	275-276, 280-299
	6		W0282	022	22		25-33-11	277-278
	7		W0282	007	20		25-33-11	ALL
	8		W0282	012	20		25-33-11	ALL
	9		W0282	013	16		25-33-11	ALL
	10	UNUSED						ALL
D02655		1125/294/L014		PLUG				277-299
	= A1		W1913	01CX			23-25-11	277-299
	= C1		W1913	01CO			23-25-11	277-299
D02656		1559/282/L062		RCPT-A2				ALL
	1	FN	W0284	018	14		25-33-11	ALL
	2	FN	W0284	019	14		25-33-11	ALL
	3	FN	W0284	020	14		25-33-11	ALL
	4		W0284	004	24		25-33-11	ALL
	5		W0284	022	20		25-33-11	ALL
	6	UNUSED						ALL
	7		W0284	007	20		25-33-11	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
D02657		1125/294/L016		PLUG				277-299
	= A1		W1917	01CX			23-25-12	277-299
	= C1		W1917	01CO			23-25-12	277-299
D02658		1558/280/R062		RCPT-A3				ALL
	1	FN	W0286	018	14		25-33-11	ALL
	2	FN	W0286	019	14		25-33-11	ALL
	3	FN	W0286	020	14		25-33-11	ALL
	4		W0286	004	24		25-33-11	ALL
	5		W0286	026	20		25-33-11	ALL
	6	UNUSED						ALL
	7		W0286	025	20		25-33-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D02600

Page 40

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02658		1558/280/R062		RCPT-A3 (continued)				ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
D02659		1125/294/L016		PLUG				277-299
	= A1		W1915	01CX			23-25-12	277-299
	= C1		W1915	01CO			23-25-12	277-299
D02660		0260/290/R060		RCPT-F1				ALL
	1		W0282	001	16		25-33-11	ALL
	2		W0282	002	16		25-33-11	ALL
	3		W0282	003	16		25-33-11	ALL
	4		W0282	004	24		25-33-11	ALL
	5		W0282	023	22		25-33-11	050-099, 155-199
	5		W0282	022	22		25-33-11	150-154, 275-299
	6	UNUSED						ALL
	7		W0282	007	20		25-33-11	ALL
	8	UNUSED						050-099, 150-199
	8		W0282	107	20		33-24-14	275-299
	9	UNUSED						050-099
	9		W0282	106	20		SPARE	150-199
	9		W0282	106	20		33-24-14	275-299
	10	UNUSED						050-099, 150-199
	10		W0282	105	20		33-24-14	275-299
D02661		1125/294/L016		PLUG				156-157, 166-199, 277-299
	= A1		W1911	01CX			23-25-11	156-157, 166-199, 277-299
	= C1		W1911	01CO			23-25-11	156-157, 166-199, 277-299
D02662		1831/242/R038		PLUG-				ALL
	1		W0242	033	18		33-31-31	ALL
	2	UNUSED						ALL
	3		W0242	034	18		33-31-31	ALL
	4	UNUSED						ALL
	5		W0242	031	18		33-31-31	ALL
	6		W0242	032	18		33-31-31	ALL
	7	UNUSED						ALL
D02663		1125/294/L016		PLUG				277-299
	= A1		W1925	01CX			23-25-16	277-299

HOOKUP LIST
D280T132

91-21-51
Section D02600
Page 41
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02663		1125/294/L016		PLUG (continued)				277-299
	= C1		W1925	01CO			23-25-16	277-299
D02664		0565/294/L026		PLUG-				ALL
	1		W0798	004	20		33-44-11	ALL
	2		W0798	005	20		33-44-11	ALL
	3		W0798	006	18		33-44-11	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
D02665		1125/294/L016		PLUG				150, 153-199, 277-299
	= A1		W9121	01CX			23-25-12	150, 153-199
	= A1		W1919	01CX			23-25-12	277-299
	= C1		W9121	01CO			23-25-12	150, 153-199
	= C1		W1919	01CO			23-25-12	277-299
D02666		0950/129/R024		PLUG-				ALL
	1		W0938	051	18		33-44-11	050-099, 153-199, 275-299
	1		W0938	067	18		33-44-11	150-152
	2		W0938	052	16		33-44-11	ALL
	3		W0938	053	16		33-44-11	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
D02667		M 1125/294/L016		PLUG				150, 153-199, 277-299
	= A1		W9127	01CX			23-25-17	150, 153-199
	= A1		W1921	01CX			23-25-17	277-299
	= C1		W9127	01CO			23-25-17	150, 153-199
	= C1		W1921	01CO			23-25-17	277-299
D02669		1125/294/L016		PLUG				150, 153-199, 277-299
	= A1		W9129	01CX			23-25-17	150, 153-199
	= A1		W1923	01CX			23-25-17	277-299
	= C1		W9129	01CO			23-25-17	150, 153-199
	= C1		W1923	01CO			23-25-17	277-299

HOOKUP LIST

D280T132

91-21-51

Section D02600

Page 42

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02670		NL205/150/R3		PLUG-STRUT				ALL
	1		W0356	058	18		30-21-11	ALL
	2		W0356	093	18		30-21-11	ALL
	3		W0356	105	18		30-21-11	ALL
	4		W0356	090	18		30-21-11	ALL
	5		W0356	104	18		30-21-11	ALL
	6		W0356	094	18		30-21-11	ALL
	7	UNUSED						ALL
D02671		1125/294/L016		PLUG				150, 153-199, 277-299
	=A1		W9119	01CX			23-25-17	150, 153-199
	=A1		W1933	01CX			23-25-17	277-299
	=C1		W9119	01CO			23-25-17	150, 153-199
	=C1		W1933	01CO			23-25-17	277-299
D02672		P050-00/ /		RCPT-				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W1078	117	24		27-58-21	ALL
	8		W1078	115	22		27-58-21	ALL
	9		W1078	203B	24		27-58-21	ALL
	10		W1078	203R	24		27-58-21	ALL
	11		W1078	301Y	24		27-58-21	ALL
	12		W1078	301B	24		27-58-21	ALL
	13		W1078	301R	24		27-58-21	ALL
	14		W1078	700	24		31-31-21	ALL
	15	UNUSED						ALL
	16		W1078	721	24		31-31-21	ALL
	17		W1078	201R	24		27-58-31	ALL
	18		W1078	201B	24		27-58-31	ALL
	19		W1078	202R	24		22-32-13	ALL
	20	UNUSED						ALL
	21		W1078	202B	24		22-32-13	ALL
	22		W1078	112	24		22-12-11	ALL
	23		W1078	113	24		22-12-11	ALL
	24	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D02600

Page 43

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02672		P050-00/ /		RCPT- (continued)				ALL
	25	UNUSED						ALL
	26		W1078	111	22		22-24-11	ALL
	27	UNUSED						ALL
	28		W1078	122	22		73-21-19	ALL
	29		W1078	194	24		27-58-21	ALL
	30	UNUSED						ALL
	31		W1078	208R	24		27-58-21	ALL
	32		W1078	302B	24		27-58-21	ALL
	33		W1078	302R	24		27-58-21	ALL
	34		W1078	302Y	24		27-58-21	ALL
	35		W1078	208B	24		27-58-21	ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38		W1078	120	24		22-12-11	ALL
	39		W1078	121	24		22-12-11	ALL
	40		W1078	204R	22		27-41-11	ALL
	41		W1078	204B	22		27-41-11	ALL
	42	UNUSED						ALL
	43		W1078	197	22		27-58-21	ALL
	44		W1078	600	22		27-41-11	ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47		W1078	PE1			27-58-21	ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52		W1078	767	24		27-58-31	ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
	56	UNUSED						ALL
	57	UNUSED						ALL
	58	UNUSED						ALL
	59	UNUSED						ALL
	60	UNUSED						ALL
	61	UNUSED						ALL
	62	UNUSED						ALL
	63	UNUSED						ALL
	64	UNUSED						050-099, 150-154

HOOKUP LIST

D280T132

91-21-51

Section D02600

Page 44

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02672		P050-00/ /		RCPT- (continued)				ALL
	64		W1078	PE1			27-58-21	155-199, 275-299
	65	UNUSED						ALL
	66		W1078	PE1			27-58-21	050-099, 150-154
	66	UNUSED						155-199, 275-299
D02673		1125/294/L016		PLUG				150, 153-199, 277-299
	= A1		W9122	01CX			23-25-17	150, 153-199
	= A1		W1929	01CX			23-25-17	156-157, 166-199, 277-299
	= C1		W9122	01CO			23-25-17	150, 153-199
	= C1		W1929	01CO			23-25-17	156-157, 166-199, 277-299
D02674		P050-00/ /		RCPT-				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W1114	019	22		27-58-21	ALL
	8		W1114	017	22		27-58-21	ALL
	9		W1114	202B	22		27-58-21	ALL
	10		W1114	202R	22		27-58-21	ALL
	11		W1114	301Y	24		27-58-21	ALL
	12		W1114	301B	24		27-58-21	ALL
	13		W1114	301R	24		27-58-21	ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17		W1114	201R	24		27-51-31	ALL
	18		W1114	201B	24		27-51-31	ALL
	19		W1114	207R	24		27-32-11	ALL
	20	UNUSED						ALL
	21		W1114	207B	24		27-32-11	ALL
	22		W1114	014	24		22-12-31	ALL
	23		W1114	015	24		22-12-31	ALL
	24		W1114	032	24		21-51-11	ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27		W1114	033	24		21-51-11	ALL
	28		W1114	043	24		31-51-41	ALL

HOOKUP LIST
D280T132

91-21-51
Section D02600
Page 45
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02674		P050-00/ /		RCPT- (continued)				ALL
	29		W1114	044	24		27-58-21	ALL
	30	UNUSED						ALL
	31		W1114	205R	22		27-58-21	ALL
	32		W1114	304B	24		27-58-21	ALL
	33		W1114	304R	24		27-58-21	ALL
	34		W1114	304Y	24		27-58-21	ALL
	35		W1114	205B	22		27-58-21	ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38		W1114	022	24		22-12-31	ALL
	39		W1114	023	24		22-12-31	ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43		W1114	026	22		27-58-21	ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47		W1114	PA1			27-58-21	050-099, 155-199, 275-299
	47		W1114	PA1			99-99-99	150-154
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52		W1114	121	24		27-51-31	ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
	56	UNUSED						ALL
	57	UNUSED						ALL
	58		W1114	027	24		27-58-21	ALL
	59	UNUSED						ALL
	60	UNUSED						ALL
	61	UNUSED						ALL
	62	UNUSED						ALL
	63	UNUSED						ALL
	64	UNUSED						050-099, 150-154
	64		W1114	PA1			27-58-21	155-199, 275-299
	65	UNUSED						ALL
	66		W1114	PA1			27-58-21	050-099

HOOKUP LIST

D280T132

91-21-51

Section D02600

Page 46

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02674		P050-00/ /		RCPT- (continued)				ALL
	66		W1114	PA1			99-99-99	150-154
	66	UNUSED						155-199, 275-299
	DED		W1114	043Z			31-51-41	ALL
D02675		1125/294/L016		PLUG				150, 153-199, 277-299
	= A1		W9125	01CX			23-25-17	150, 153-199
	= A1		W1931	01CX			SPARE	156-157, 166-199
	= A1		W1931	01CX			23-25-17	277-299
	= C1		W9125	01CO			23-25-17	150, 153-199
	= C1		W1931	01CO			SPARE	156-157, 166-199
	= C1		W1931	01CO			23-25-17	277-299
D02676		AE0202/ /		RCPT-				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W1080	152	24		27-58-21	ALL
	8		W1080	150	22		27-58-21	ALL
	9		W1080	202B	24		27-58-21	ALL
	10		W1080	202R	24		27-58-21	ALL
	11		W1080	301Y	24		27-58-21	ALL
	12		W1080	301B	24		27-58-21	ALL
	13		W1080	301R	24		27-58-21	ALL
	14		W1080	700	24		31-31-21	ALL
	15	UNUSED						ALL
	16		W1080	703	24		31-31-21	ALL
	17		W1080	201B	24		27-51-11	ALL
	18		W1080	201R	24		27-51-11	ALL
	19		W1080	207R	24		27-32-21	ALL
	20	UNUSED						ALL
	21		W1080	207B	24		27-32-21	ALL
	22		W1080	147	24		22-12-21	ALL
	23		W1080	148	24		22-12-21	ALL
	24		W1080	766	24		21-51-21	050-099, 150-199, 275-276
	24		W1080	018	24		21-51-21	277-299
	25	UNUSED						ALL
	26		W1080	523	22		22-24-21	ALL

HOOKUP LIST
D280T132

91-21-51
Section D02600
Page 47
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02676		AE0202/ /		RCPT- (continued)				ALL
	27		W1080	019	24		21-51-21	ALL
	28		W1080	714	22		73-21-19	ALL
	29		W1080	521	22		27-61-11	ALL
	30	UNUSED						ALL
	31		W1080	206R	24		27-58-21	ALL
	32		W1080	304B	24		27-58-21	ALL
	33		W1080	304R	24		27-58-21	ALL
	34		W1080	304Y	24		27-58-21	ALL
	35		W1080	206B	24		27-58-21	ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38		W1080	155	24		22-12-21	ALL
	39		W1080	156	24		22-12-21	ALL
	40		W1080	203R	22		27-41-21	ALL
	41		W1080	203B	22		27-41-21	ALL
	42	UNUSED						ALL
	43		W1080	518	22		27-58-21	ALL
	44		W1080	600	22		27-41-21	ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47		W1080	PH1			27-58-21	ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52		W1080	769	24		27-51-11	ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
	56	UNUSED						ALL
	57	UNUSED						ALL
	58	UNUSED						ALL
	59	UNUSED						ALL
	60	UNUSED						ALL
	61	UNUSED						ALL
	62	UNUSED						ALL
	63	UNUSED						ALL
	64	UNUSED						050-099, 150-154
	64		W1080	PH1			27-58-21	155-199, 275-299
	65	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D02600

Page 48

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02676		AE0202/ /		RCPT- (continued)				ALL
	66		W1080	PH1			27-58-21	050-099, 150-154 155-199, 275-299
	66	UNUSED						
D02677		1070/300/L016		PLUG-				150, 153-155, 162-165
D02677		1125/284/L016		PLUG				156-157, 166-199, 277-299
	A		W9023	013	20		23-25-17	150, 153-155, 162-165
	A		W0811	013	20		23-25-17	156-157, 166-199, 277-299
	B		W9023	011	22		23-25-17	150, 153-155, 162-165
	B		W0811	011	24		23-25-17	156-157, 166-199, 277-299
	C		W9023	010	22		23-25-17	150, 153-155, 162-165
	C		W0811	010	24		23-25-17	156-157, 166-199, 277-299
	D		W9033	015	22		23-25-17	150, 153-155, 162-165
	D		W0811	012	24		23-25-17	156-157, 166-199, 277-299
	E	UNUSED						150, 153-199, 277-299
	F		W9023	205R	22		23-25-17	150, 153-155, 162-165
	F		W0811	205R	20		23-25-17	156-157, 166-199, 277-299
	G	UNUSED						150, 153-199, 277-299
	H		W9023	205B	22		23-25-17	150, 153-155, 162-165
	H		W0811	205B	20		23-25-17	156-157, 166-199, 277-299
D02678		0156/220/R008		PLUG-				ALL
	1		W0051	217B	24		33-11-11	ALL
	2	UNUSED						ALL
	3		W0051	211B	24		33-11-11	ALL
	4		W0051	215B	24		33-11-11	ALL
	5		W0051	215R	24		33-11-11	ALL
	6		W0051	216B	24		33-11-11	ALL
	7		W0051	216R	24		33-11-11	ALL
	8		W0051	303B	24		33-11-11	ALL
	9		W0051	211R	24		33-11-11	ALL
	10		W0051	217R	24		33-11-11	ALL
	11		W0051	303R	24		33-11-11	ALL
	12		W0051	214B	24		33-11-11	ALL
	13		W0051	214R	24		33-11-11	ALL
	14		W0051	213B	24		33-11-11	ALL
	15		W0051	213R	24		33-11-11	ALL
	16		W0051	022	24		33-11-11	ALL
	17		W0051	024	20		33-11-11	ALL
	18		W0051	303Y	24		33-11-11	ALL
	19		W0051	212B	24		33-11-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D02600

Page 49

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02678		0156/220/R008		PLUG- (continued)				ALL
	20		W0051	212R	24		33-11-11	ALL
	21		W0051	FRC			33-11-11	ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
			W0051	211Z			33-11-11	ALL
			W0051	217	20		33-11-11	ALL
			W0051	217Z			33-11-11	ALL
			W0051	303Z			33-11-11	ALL
			W0051	FRC			33-11-11	ALL
D02679		1197+32/310/L010		PLUG				167-199
	= A1		W1013	01CX			23-25-11	167-199
	= C1		W1013	01CO			23-25-11	167-199
D02681		1197+32/310/L010		PLUG				156-157, 166-199, 277-299
	= A1		W1911	01CX			23-25-11	156-157, 166-199, 277-299
	= C1		W1911	01CO			23-25-11	156-157, 166-199, 277-299
D02683		1197+32/310/L010		PLUG				156-157, 166-199, 277-299
	= A1		W1935	01CX			23-25-11	156-157, 166-199, 277-299
	= C1		W1935	01CO			23-25-11	156-157, 166-199, 277-299
D02685		1197+32/310/L010		PLUG				156-157, 166-199, 277-299
	A		W0815	011	20		23-25-11	156-157, 166-199, 277-299
	B		W0815	002	24		23-25-11	156-157, 166-199, 277-299
	C	UNUSED						156-157, 166-199, 277-299
	D	UNUSED						156-157, 166-199, 277-299
	E		W0815	010	20		23-25-11	156-157, 166-199, 277-299
	F		W0815	009	20		23-25-11	156-157, 166-199, 277-299
	G	UNUSED						156-157, 166-199, 277-299
	H		W0815	001	24		23-25-11	156-157, 166-199, 277-299
	J	UNUSED						156-157, 166-199, 277-299
	K	UNUSED						156-157, 166-199, 277-299
D02687		1109/289/L054		PLUG				150, 153-199
	= A1		W9124	01CX			23-25-17	150, 153-199
	= C1		W9124	01CO			23-25-17	150, 153-199

HOOKUP LIST
D280T132

91-21-51
Section D02600
Page 50
Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02688		0150/210/L010		PLUG-				ALL
	1		W0051	307Y	24		33-13-11	ALL
	2	FM	W0051	038	16		33-13-11	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W0051	307B	24		33-13-11	ALL
	6		W0051	307R	24		33-13-11	ALL
	7		W0051	049	20		33-13-11	ALL
	8	FM	W0051	071	16		33-13-11	ALL
	9		W0051	050	20		33-13-11	ALL
	10	UNUSED						ALL
	11	FM	W0051	048	16		33-13-11	ALL
	12		W0051	047	24		33-13-11	ALL
D02689		1109/285/R68		PLUG				150, 153-199, 277-299
	A	UNUSED						150, 153-199, 277-299
	B		W9024	012	22		23-25-17	150, 153-155, 162-165
	B		W0813	012	24		23-25-17	156-157, 166-199, 277-299
	C		W9024	017	22		23-25-17	150, 153-155, 162-165
	C		W0813	017	24		23-25-17	156-157, 166-199, 277-299
	D		W9024	018	22		23-25-17	150, 153-155, 162-165
	D		W0813	018	24		23-25-17	156-157, 166-199, 277-299
	E		W9024	205R	22		23-25-17	150, 153-155, 162-165
	E		W0813	205R	24		23-25-17	156-157, 166-199, 277-299
	F		W9024	205B	22		23-25-17	150, 153-155, 162-165
	F		W0813	205B	24		23-25-17	156-157, 166-199, 277-299
	G		W9024	201R	22		23-25-17	150, 153-155, 162-165
	G		W0813	201R	24		23-25-17	156-157, 166-199, 277-299
	H		W9024	201B	22		23-25-17	150, 153-155, 162-165
	H		W0813	201B	24		23-25-17	156-157, 166-199, 277-299
	J	UNUSED						150, 153-199, 277-299
	K	UNUSED						150, 153-199, 277-299
	L		W9024	010	20		23-25-17	150, 153-155, 162-165
	L		W0813	010	20		23-25-17	156-157, 166-199, 277-299
	M		W9024	002	20		23-25-17	150, 153-155, 162-165
	M		W0813	002	20		23-25-17	156-157, 166-199, 277-299
	N	UNUSED						150, 153-199, 277-299
	P		W9024	204R	22		23-25-17	150, 153-155, 162-165
	P		W0813	204R	24		23-25-17	156-157, 166-199, 277-299
	R		W9024	204B	22		23-25-17	150, 153-155, 162-165
	R		W0813	204B	24		23-25-17	156-157, 166-199, 277-299

HOOKUP LIST

D280T132

91-21-51

Section D02600

Page 51

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02689		1109/285/R68		PLUG (continued)				150, 153-199, 277-299
	S	UNUSED						150, 153-199, 277-299
	T		W9024	202R	22		23-25-17	150, 153-155, 162-165
	T		W0813	202R	24		23-25-17	156-157, 166-199, 277-299
	U		W9024	202B	22		23-25-17	150, 153-155, 162-165
	U		W0813	202B	24		23-25-17	156-157, 166-199, 277-299
	V	UNUSED						150, 153-199, 277-299
	W		W9024	203R	22		23-25-17	150, 153-155, 162-165
	W		W0813	203R	24		23-25-17	156-157, 166-199, 277-299
	X		W9024	203B	22		23-25-17	150, 153-155, 162-165
	X		W0813	203B	24		23-25-17	156-157, 166-199, 277-299
	Y		W9033	015	22		23-25-17	150, 153-155, 162-165
	Y		W0813	015	24		23-25-17	156-157, 166-199, 277-299
	Z	UNUSED						150, 153-199, 277-299
	CAP	Y	W0813	016	24		23-25-17	156-157, 166-199, 277-299
	REF		W9024	202	20		23-25-17	150, 153-155, 162-165
	REF		W9024	202Z			23-25-17	150, 153-155, 162-165
	REF		W9024	203	20		23-25-17	150, 153-155, 162-165
	REF		W9024	203Z			23-25-17	150, 153-155, 162-165
	REF		W9024	204	20		23-25-17	150, 153-155, 162-165
	REF		W9024	204Z			23-25-17	150, 153-155, 162-165
	REF		W0813	202	20		23-25-17	156-157, 166-199, 277-299
	REF		W0813	202Z			23-25-17	156-157, 166-199, 277-299
	REF		W0813	203	20		23-25-17	156-157, 166-199, 277-299
	REF		W0813	203Z			23-25-17	156-157, 166-199, 277-299
	REF		W0813	204	20		23-25-17	156-157, 166-199, 277-299
	REF		W0813	204Z			23-25-17	156-157, 166-199, 277-299
	A-		W9025	014	22		23-25-17	150, 153-155, 162-165
	A-		W0813	014	24		23-25-17	156-157, 166-199, 277-299
	B-		W9024	011	20		23-25-17	150, 153-155, 162-165
	B-		W0813	011	20		23-25-17	156-157, 166-199, 277-299
	C-		W9025	013	22		23-25-17	150, 153-155, 162-165
	C-		W0813	013	24		23-25-17	156-157, 166-199, 277-299
D02690		0432/290/L065		PLUG-				275-278
D02690		0433/290/L065		PLUG-				280-299
	1	UNUSED						275-299
	2		W0812	152	20		33-21-11	275-299
	3		W0812	153	20		33-21-11	275-299
	4	UNUSED						275-299
	5		W0812	154	20		33-21-11	275-299

HOOKUP LIST

D280T132

91-21-51

Section D02600

Page 52

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02690		0432/290/L065		PLUG- (continued)				275-278
D02690		0433/290/L065		PLUG- (continued)				280-299
	6	UNUSED						275-299
	7		W0812	155	20		33-21-11	275-299
	8		W0812	156	20		33-21-11	275-299
	9		W0812	157	20		33-21-11	275-299
	10		W0812	158	20		33-21-11	275-299
	11		W0812	159	20		33-21-11	275-299
	12		W0812	160	20		33-21-11	275-299
D02691		1109/289/L054		PLUG				150, 153-199
	= A1		W9128	01CX			23-25-17	150, 153-199
	= C1		W9128	01CO			23-25-17	150, 153-199
D02692		0521/290/L065		PLUG-				050-099, 150-199, 275-278
D02692		0517/290/L056		PLUG-				280-299
	1	UNUSED						ALL
	2		W0812	166	20		33-21-11	ALL
	3		W0812	167	20		33-21-11	ALL
	4	UNUSED						ALL
	5		W0812	168	20		33-21-11	ALL
	6	UNUSED						ALL
	7		W0812	169	20		33-21-11	ALL
	8		W0812	170	20		33-21-11	ALL
	9		W0812	171	20		33-21-11	ALL
	10		W0812	172	20		33-21-11	ALL
	11		W0812	173	20		33-21-11	ALL
	12		W0812	174	20		33-21-11	ALL
D02693		1109/287/L072		PLUG				150, 153-199, 277-299
	A		W9035	014	22		23-25-17	150, 153-155, 162-165
	A		W0811	014	24		23-25-17	156-157, 166-199, 277-299
	B	UNUSED						150, 153-199, 277-299
	C		W9035	017	22		23-25-17	150, 153-155, 162-165
	C		W0811	017	24		23-25-17	156-157, 166-199, 277-299
	D		W9035	016	22		23-25-17	150, 153-155, 162-165
	D		W0811	016	24		23-25-17	156-157, 166-199, 277-299
	E		W9035	201R	22		23-25-17	150, 153-155, 162-165
	E		W0811	201R	24		23-25-17	156-157, 166-199, 277-299
	F		W9035	201B	22		23-25-17	150, 153-155, 162-165
	F		W0811	201B	24		23-25-17	156-157, 166-199, 277-299

HOOKUP LIST

D280T132

91-21-51

Section D02600

Page 53

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02693		1109/287/L072		PLUG (continued)				150, 153-199, 277-299
	G		W9035	206R	22		23-25-17	150, 153-155, 162-165
	G		W0811	206R	24		23-25-17	156-157, 166-199, 277-299
	H		W9035	206B	22		23-25-17	150, 153-155, 162-165
	H		W0811	206B	24		23-25-17	156-157, 166-199, 277-299
	J	UNUSED						150, 153-199, 277-299
	K		W9023	205B	22		23-25-17	150, 153-155, 162-165
	K		W0811	205B	20		23-25-17	156-157, 166-199, 277-299
	L		W9021	006	20		23-25-17	150, 153-155, 162-165
	L		W0811	006	20		23-25-17	156-157, 166-199, 277-299
	M		W9035	001	20		23-25-17	150, 153-155, 162-165
	M		W0811	001	20		23-25-17	156-157, 166-199, 277-299
	N		W9023	205R	22		23-25-17	150, 153-155, 162-165
	N		W0811	205R	20		23-25-17	156-157, 166-199, 277-299
	P		W9035	203R	22		23-25-17	150, 153-155, 162-165
	P		W0811	203R	24		23-25-17	156-157, 166-199, 277-299
	R		W9035	203B	22		23-25-17	150, 153-155, 162-165
	R		W0811	203B	24		23-25-17	156-157, 166-199, 277-299
	S	UNUSED						150, 153-199, 277-299
	T		W9035	204R	22		23-25-17	150, 153-155, 162-165
	T		W0811	204R	24		23-25-17	156-157, 166-199, 277-299
	U		W9035	204B	22		23-25-17	150, 153-155, 162-165
	U		W0811	204B	24		23-25-17	156-157, 166-199, 277-299
	V		W9023	010	22		23-25-17	150, 153-155, 162-165
	V		W0811	010	24		23-25-17	156-157, 166-199, 277-299
	W		W9035	202R	22		23-25-17	150, 153-155, 162-165
	W		W0811	202R	24		23-25-17	156-157, 166-199, 277-299
	X		W9035	202B	22		23-25-17	150, 153-155, 162-165
	X		W0811	202B	24		23-25-17	156-157, 166-199, 277-299
	Y		W9023	011	22		23-25-17	150, 153-155, 162-165
	Y		W0811	011	24		23-25-17	156-157, 166-199, 277-299
	Z	UNUSED						150, 153-199, 277-299
	CAP	Y	W0811	018	24		23-25-17	156-157, 166-199, 277-299
	REF		W9035	202	20		23-25-17	150, 153-155, 162-165
	REF		W9035	202Z			23-25-17	150, 153-155, 162-165
	REF		W9035	203	20		23-25-17	150, 153-155, 162-165
	REF		W9035	203Z			23-25-17	150, 153-155, 162-165
	REF		W9035	204	20		23-25-17	150, 153-155, 162-165
	REF		W9035	204Z			23-25-17	150, 153-155, 162-165
	REF		W0811	202	20		23-25-17	156-157, 166-199, 277-299
	REF		W0811	202Z			23-25-17	156-157, 166-199, 277-299

HOOKUP LIST

D280T132

91-21-51

Section D02600

Page 54

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02693		1109/287/L072		PLUG (continued)				150, 153-199, 277-299
	REF		W0811	203	20		23-25-17	156-157, 166-199, 277-299
	REF		W0811	203Z			23-25-17	156-157, 166-199, 277-299
	REF		W0811	204	20		23-25-17	156-157, 166-199, 277-299
	REF		W0811	204Z			23-25-17	156-157, 166-199, 277-299
	A-		W9036	004	24		23-25-17	150, 153-155, 162-165
	A-		W0811	004	24		23-25-17	156-157, 166-199, 277-299
	B-		W9021	007	20		23-25-17	150, 153-155, 162-165
	B-		W0811	007	20		23-25-17	156-157, 166-199, 277-299
	C-		W9036	005	24		23-25-17	150, 153-155, 162-165
	C-		W0811	005	24		23-25-17	156-157, 166-199, 277-299
D02694		0609/290/L056		PLUG-				050-099
D02694		0622/290/L065		PLUG-				150-199, 275-278
D02694		0606/289/L056		PLUG-				280-299
	1	UNUSED						ALL
	2		W0812	179	20		33-21-11	ALL
	3		W0812	180	20		33-21-11	ALL
	4	UNUSED						ALL
	5		W0812	181	20		33-21-11	ALL
	6	UNUSED						ALL
	7		W0812	182	20		33-21-11	ALL
	8		W0812	183	20		33-21-11	ALL
	9		W0812	184	20		33-21-11	ALL
	10		W0812	185	20		33-21-11	ALL
	11		W0812	186	20		33-21-11	ALL
	12		W0812	187	20		33-21-11	ALL
D02695		P005-00/ /		PLUG P-5				150, 153-199, 277-299
	1		W9030	006	20		33-13-16	150, 153-155, 162-165
	1		W0675	006	20		33-13-16	156-157, 166-199, 277-299
	2		W9030	007	20		33-13-16	150, 153-155, 162-165
	2		W0675	009	20		33-13-16	156-157, 166-199, 277-299
	3		W9030	010	20		33-16-17	150, 153-155, 162-165
	3		W0675	010	20		33-16-17	156-157, 166-199, 277-299
	4		W9030	011	20		33-16-17	150, 153-155, 162-165
	4		W0675	011	20		33-16-17	156-157, 166-199, 277-299
	5	UNUSED						150, 153-199, 277-299
	6		W9030	905	22		23-25-14	150, 153-155, 162-165
	6		W0675	019	24		23-25-14	156-157, 166-199, 277-278
	6	UNUSED						280-299

HOOKUP LIST

D280T132

91-21-51

Section D02600

Page 55

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02695		P005-00/ /		PLUG P-5 (continued)				150, 153-199, 277-299
	7		W9030	902	22		23-25-14	150, 153-155, 162-165
	7		W0675	016	24		23-25-14	156-157, 166-199, 277-278 280-299
	7	UNUSED						150, 153-199, 277-299
	8	UNUSED						150, 153-199, 277-299
	9	UNUSED						150, 153-199, 277-299
	10	UNUSED						150, 153-199, 277-299
	11		W9030	906	22		23-25-14	150, 153-155, 162-165
	11		W0675	018	24		23-25-14	156-157, 166-199, 277-278 280-299
	11	UNUSED						150, 153-155, 162-165
	12		W9030	903	22		23-25-14	156-157, 166-199, 277-278
	12		W0675	012	24		23-25-14	280-299
	12	UNUSED						150, 153-155, 162-165
	13		W9030	021	20		23-25-14	156-157, 166-199, 277-278
	13		W0675	021	20		23-25-14	280-299
	13	UNUSED						150, 153-155, 162-165
	14		W9030	904	22		23-25-14	156-157, 166-199, 277-278
	14		W0675	020	24		23-25-14	280-299
	14	UNUSED						150, 153-155, 162-165
	15		W9030	901	22		23-25-14	156-157, 166-199, 277-278
	15		W0675	017	24		23-25-14	280-299
	15	UNUSED						150, 153-155, 162-165
	16	UNUSED						150, 153-155, 162-165
	17	UNUSED						150, 153-155, 162-165
	18	UNUSED						150, 153-155, 162-165
	19	UNUSED						150, 153-155, 162-165
	20	UNUSED						150, 153-155, 162-165
	21	UNUSED						150, 153-155, 162-165
	22	UNUSED						150, 153-155, 162-165
	23	UNUSED						150, 153-155, 162-165
	24	UNUSED						150, 153-155, 162-165
	25	UNUSED						150, 153-155, 162-165
	26	UNUSED						150, 153-155, 162-165
	27	UNUSED						150, 153-155, 162-165
	28	UNUSED						150, 153-155, 162-165
	29	UNUSED						150, 153-155, 162-165
	30	UNUSED						150, 153-155, 162-165
	31	UNUSED						150, 153-155, 162-165
	32	UNUSED						150, 153-155, 162-165
	33	UNUSED						150, 153-155, 162-165
	34	UNUSED						150, 153-155, 162-165

HOOKUP LIST

D280T132

91-21-51

Section D02600

Page 56

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02695		P005-00/ /		PLUG P-5 (continued)				150, 153-199, 277-299
	35	UNUSED						150, 153-155, 162-165
	36	UNUSED						150, 153-155, 162-165
	37	UNUSED						150, 153-155, 162-165
	38	UNUSED						150, 153-155, 162-165
	39	UNUSED						150, 153-155, 162-165
	40	UNUSED						150, 153-155, 162-165
	41	UNUSED						150, 153-155, 162-165
	42	UNUSED						150, 153-155, 162-165
	43	UNUSED						150, 153-155, 162-165
	44	UNUSED						150, 153-155, 162-165
	45	UNUSED						150, 153-155, 162-165
	46	UNUSED						150, 153-155, 162-165
	47	UNUSED						150, 153-155, 162-165
	48	UNUSED						150, 153-155, 162-165
	49	UNUSED						150, 153-155, 162-165
	50	UNUSED						150, 153-155, 162-165
	51	UNUSED						150, 153-155, 162-165
	52	UNUSED						150, 153-155, 162-165
	53	UNUSED						150, 153-155, 162-165
	54	UNUSED						150, 153-155, 162-165
	= C27	UNUSED						150, 153-155, 162-165
	DED		W0675	018Z			23-25-14	156-157, 166-199, 277-278
	DED		W0675	019Z			23-25-14	156-157, 166-199, 277-278
	DED		W0675	020Z			23-25-14	156-157, 166-199, 277-278
D02696		0697/290/L056		PLUG-				050-099
D02696		0654+084/295/L056		PLUG-				150-199
D02696		0741/290/L065		PLUG-				275-278
D02696		0667/290/L056		PLUG-				280-299
	1	UNUSED						ALL
	2		W0812	192	20		33-21-11	050-099
	2		W0812	192	20		33-21-13	150-199, 275-299
	3		W0812	193	20		33-21-11	050-099
	3		W0812	193	20		33-21-13	150-199, 275-299
	4	UNUSED						ALL
	5		W0812	194	20		33-21-11	050-099
	5		W0812	194	20		33-21-13	150-199, 275-299
	6	UNUSED						ALL
	7		W0812	195	20		33-21-11	050-099
	7		W0812	195	20		33-21-13	150-199, 275-299

HOOKUP LIST

D280T132

91-21-51

Section D02600

Page 57

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02696		0697/290/L056		PLUG- (continued)				050-099
D02696		0654+084/295/L056		PLUG- (continued)				150-199
D02696		0741/290/L065		PLUG- (continued)				275-278
D02696		0667/290/L056		PLUG- (continued)				280-299
	8		W0812	196	20		33-21-11	050-099
	8		W0812	196	20		33-21-13	150-199, 275-299
	9		W0812	197	20		33-21-11	050-099
	9		W0812	197	20		33-21-13	150-199, 275-299
	10		W0812	198	20		33-21-11	050-099
	10		W0812	198	20		33-21-13	150-199, 275-299
	11		W0812	199	20		33-21-11	050-099
	11		W0812	199	20		33-21-13	150-199, 275-299
	12		W0812	501	20		33-21-11	050-099
	12		W0812	501	20		33-21-13	150-199, 275-299
D02697		SHELF/E02/-06		PLUG-E2-6				150, 153-199, 277-299
	A1		W0163	067	22		23-25-14	150, 153-155, 162-165
	A1		W0163	067	24		23-25-14	156-157, 166-199, 277-299
	A2		W0163	065	22		23-25-14	150, 153-155, 162-165
	A2		W0163	065	24		23-25-14	156-157, 166-199, 277-299
	A3		W0163	057	22		23-25-14	150, 153-155, 162-165
	A3		W0163	057	24		23-25-14	156-157, 166-199, 277-299
	B1		W0163	952R	22		23-25-14	150, 153-199
	B1		W0163	052	24		23-25-14	277-299
	B2		W0163	064	24		23-25-14	150, 153-199, 277-299
	B3		W0163	058	22		23-25-14	150, 153-155, 162-165
	B3		W0163	058	24		23-25-14	156-157, 166-199, 277-299
	C1		W0163	051R	22		23-25-14	150, 153-199
	C1		W0163	051	24		23-25-14	277-299
	C2		W0163	060	24		23-25-14	150, 153-199, 277-299
	C3		W0163	059	22		23-25-14	150, 153-155, 162-165
	C3		W0163	059	24		23-25-14	156-157, 166-199, 277-299
	D1		W0163	952B	22		23-25-14	150, 153-199
	D1	UNUSED						277-299
	D2		W0163	964	24		23-25-14	150, 153-199
	D2	UNUSED						277-299
	D3		W0163	958	22		23-25-14	150, 153-199
	D3	UNUSED						277-299
	X1		W0163	063	22		23-25-14	150, 153-155, 162-165
	X1		W0163	063	24		23-25-14	156-157, 166-199, 277-299
	X2		W0163	050	22		23-25-14	150, 153-155, 162-165

HOOKUP LIST

D280T132

91-21-51

Section D02600

Page 58

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02697		SHELF/E02/-06		PLUG-E2-6 (continued)				150, 153-199, 277-299
	X2		W0163	050	24		23-25-14	156-157, 166-199, 277-299
	DED		W0163	051Z			23-25-14	150, 153-199
	DED		W0163	058Z			23-25-14	150, 153-199
	REF		W0163	952Z			23-25-14	150, 153-199
	REF		W0163	964	24		23-25-14	150, 153-199
	REF		W0163	064Z			23-25-14	150, 153-199, 277-299
	REF		W0163	051Z			23-25-14	277-299
	REF		W0163	052Z			23-25-14	277-299
	REF		W0163	058Z			23-25-14	277-299
	REF		W0163	059Z			23-25-14	277-299
	REF		W0163	060Z			23-25-14	277-299
			W0163	059Z			23-25-14	150, 153-199
			W0163	060Z			23-25-14	150, 153-199
D02698		0785/290/L056		PLUG-				050-099
D02698		1014/295/L056		PLUG-				150-199
D02698		0754/290/L056		PLUG-				275-299
	1	UNUSED						ALL
	2		W0812	670	20		33-21-13	ALL
	3		W0812	671	20		33-21-13	ALL
	4	UNUSED						ALL
	5		W0812	672	20		33-21-13	ALL
	6	UNUSED						ALL
	7		W0812	673	20		33-21-13	ALL
	8		W0812	674	20		33-21-13	ALL
	9		W0812	675	20		33-21-13	ALL
	10		W0812	676	20		33-21-13	ALL
	11		W0812	677	20		33-21-13	ALL
	12		W0812	678	20		33-21-13	ALL
D02699		SHELF/E02/-06		PLUG-E2-6				150, 153-199, 277-299
	A1		W0173	055R	22		23-25-14	150, 153-199
	A1		W0173	055	24		23-25-14	277-299
	A2		W0173	058	22		23-25-14	150, 153-155, 162-165
	A2		W0173	058	24		23-25-14	156-157, 166-199, 277-299
	A3		W0173	048	22		23-25-14	150, 153-155, 162-165
	A3		W0173	048	24		23-25-14	156-157, 166-199, 277-299
	B1		W0173	954R	22		23-25-14	150, 153-199
	B1		W0173	054	24		23-25-14	277-299
	B2		W0173	057	22		23-25-14	150, 153-155, 162-165

HOOKUP LIST
D280T132

91-21-51
Section D02600
Page 59
Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02699		SHELF/E02/-06		PLUG-E2-6 (continued)				150, 153-199, 277-299
	B2		W0173	057	24		23-25-14	156-157, 166-199, 277-299
	B3		W0173	049	22		23-25-14	150, 153-155, 162-165
	B3		W0173	049	24		23-25-14	156-157, 166-199, 277-299
	C1		W0173	061	22		23-25-14	150, 153-155, 162-165
	C1		W0173	061	24		23-25-14	156-157, 166-199, 277-299
	C2		W0173	056	22		23-25-14	150, 153-155, 162-165
	C2		W0173	056	24		23-25-14	156-157, 166-199, 277-299
	C3		W0173	050	22		23-25-14	150, 153-155, 162-165
	C3		W0173	050	24		23-25-14	156-157, 166-199, 277-299
	D1		W0173	954B	22		23-25-14	150, 153-199
	D1	UNUSED						277-299
	D2		W0173	957	22		23-25-14	150, 153-199
	D2	UNUSED						277-299
	D3		W0173	949	22		23-25-14	150, 153-155, 162-165
	D3		W0173	949	24		23-25-14	156-157, 166-199
	D3	UNUSED						277-299
	X1		W0173	059	22		23-25-14	150, 153-155, 162-165
	X1		W0173	059	24		23-25-14	156-157, 166-199, 277-299
	X2		W0173	053	22		23-25-14	150, 153-155, 162-165
	X2		W0173	053	24		23-25-14	156-157, 166-199, 277-299
	DED		W0173	049Z			23-25-14	150, 153-199
	DED		W0173	055Z			23-25-14	150, 153-199
	DED		W0173	954Z			23-25-14	150, 153-199
	REF		W0173	957	22		23-25-14	150, 153-199
	REF		W0173	057Z			23-25-14	150, 153-199, 277-299
	REF		W0173	048Z			23-25-14	277-299
	REF		W0173	049Z			23-25-14	277-299
	REF		W0173	054Z			23-25-14	277-299
	REF		W0173	055Z			23-25-14	277-299
	REF		W0173	058Z			23-25-14	277-299
			W0173	048Z			23-25-14	150, 153-199
			W0173	058Z			23-25-14	150, 153-199

HOOKUP LIST

D280T132

91-21-51

Section D02600

Page 60 End

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02700		0868/290/L056		PLUG-				050-099
D02700		0910/295/L056		PLUG-				150-199
D02700		0872/290/L056		PLUG-				275-299
	1	UNUSED						ALL
	2		W0812	683	20		33-21-13	ALL
	3		W0812	684	20		33-21-13	ALL
	4	UNUSED						ALL
	5		W0812	685	20		33-21-13	ALL
	6	UNUSED						ALL
	7		W0812	686	20		33-21-13	ALL
	8		W0812	687	20		33-21-13	ALL
	9		W0812	688	20		33-21-13	ALL
	10		W0812	689	20		33-21-13	ALL
	11		W0812	690	20		33-21-13	ALL
	12		W0812	691	20		33-21-13	ALL
D02701		SHELF/E09/-01		PLUG				150, 153-199, 277-299
	1		W9026	026	24		23-25-15	150, 153-155, 162-164
	1		W0091	026	24		23-25-15	156-157, 166-199, 277-299
	1		W9026	026	22		23-25-15	165
	2	UNUSED						150, 153-199, 277-278
	2		W0091	027	24		23-25-15	280-299
	3		W9026	028	24		23-25-15	150, 153-155, 162-164
	3		W0091	028	24		23-25-15	156-157, 166-199, 277-299
	3		W9026	028	22		23-25-15	165
	4		W9026	029	24		23-25-15	150, 153-155, 162-164
	4		W0091	029	24		23-25-15	156-157, 166-199, 277-299
	4		W9026	029	22		23-25-15	165
	5		W9026	030	24		23-25-15	150, 153-155, 162-164
	5		W0091	030	24		23-25-15	156-157, 166-199, 280-299
	5		W9026	030	22		23-25-15	165
	5	UNUSED						277-278
	6	UNUSED						150, 153-199
	6		W0091	031	24		23-25-15	277-299
	7	UNUSED						150, 153-154, 156-163, 165, 167-199
	7		W9026	032	24		23-25-15	155, 164
	7		W0091	032	24		23-25-15	166, 277-299
	8	UNUSED						150, 153-199
	8		W0091	033	24		23-25-15	277-299
	9	UNUSED						150, 153-199
	9		W0091	034	24		23-25-15	277-299

HOOKUP LIST

D280T132

91-21-51

Section D02700

Page 1

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02701		SHELF/E09/-01		PLUG (continued)				150, 153-199, 277-299
	10		W9026	035	24		23-25-15	150, 153-155, 162-164
	10		W0091	035	24		23-25-15	156-157, 166-199, 280-299
	10		W9026	035	22		23-25-15	165
	10	UNUSED						277-278
	11		W9026	036	24		23-25-15	150, 153-154, 162-163
	11	UNUSED						155, 164, 166
	11		W0091	036	24		23-25-15	156-157, 167-199, 277-299
	11		W9026	036	22		23-25-15	165
	12		W9026	037	24		23-25-15	150, 153-155, 162-164
	12		W0091	037	24		23-25-15	156-157, 166-199, 277-299
	12		W9026	037	22		23-25-15	165
	13		W9026	038	24		23-25-15	150, 153-154, 162-163
	13	UNUSED						155, 164, 166
	13		W0091	038	24		23-25-15	156-157, 167-199, 277-299
	13		W9026	038	22		23-25-15	165
	14		W9026	039	24		23-25-15	150, 153-154, 162-163
	14	UNUSED						155, 164, 166
	14		W0091	039	24		23-25-15	156-157, 167-199, 277-299
	14		W9026	039	22		23-25-15	165
	15		W9026	040	24		23-25-15	150, 153-155, 162-164
	15		W0091	040	24		23-25-15	156-157, 166-199, 277-299
	15	UNUSED						165
	16		W9026	041	24		23-25-15	150, 153-155, 162-164
	16		W0091	041	24		23-25-15	156-157, 166-199, 277-299
	16	UNUSED						165
	17		W9026	042	24		23-25-15	150, 153-154, 162-163
	17	UNUSED						155, 164, 166
	17		W0091	042	24		23-25-15	156-157, 167-199, 277-299
	17		W9026	042	22		23-25-15	165
	18		W9026	043	24		23-25-15	150, 153-155, 162-164
	18		W0091	043	24		23-25-15	156-157, 166, 280-299
	18	UNUSED						165, 167-199, 277-278
	19	UNUSED						150, 153, 156-157
	19		W9026	044	24		23-25-15	154-155, 162-164
	19		W9026	044	22		23-25-15	165
	19		W0091	044	24		23-25-15	166-199, 277-299
	20		W9026	045	24		23-25-15	150, 153, 155, 162-164
	20	UNUSED						154, 156-157, 165
	20		W0091	045	24		23-25-15	166-199, 277-299
	21	UNUSED						150, 153, 155, 162-199, 278

HOOKUP LIST

D280T132

91-21-51

Section D02700

Page 2

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02701		SHELF/E09/-01		PLUG (continued)				150, 153-199, 277-299
	21		W9026	046	24		23-25-15	154
	21		W0091	046	24		23-25-15	156-157, 277, 280-299
	22	UNUSED						150, 155, 162-199, 277
	22		W9026	047	24		23-25-15	153-154
	22		W0091	047	24		23-25-15	156-157, 278-299
	23	UNUSED						150, 153, 157, 164
	23		W9026	048	24		23-25-15	154-155, 162-163
	23		W0091	048	24		23-25-15	156, 166-199, 277-299
	23		W9026	048	22		23-25-15	165
	24	UNUSED						150, 153, 156, 162, 165-166, 277
	24		W9026	049	24		23-25-15	154-155, 163-164
	24		W0091	049	24		23-25-15	157, 167-199, 278-299
	25		W9026	050	24		23-25-15	150, 153-155, 162-164
	25		W0091	050	24		23-25-15	156-157, 166-199, 277-299
	25		W9026	050	22		23-25-15	165
	26	UNUSED						150, 153-199, 277-299
	27	UNUSED						150, 153-166, 277-299
	27		W0091	057	24		23-25-15	167-199
	28	UNUSED						150, 153-199, 277-299
	29	UNUSED						150, 153-199, 277-299
	30	UNUSED						150, 153-199, 277-299
	31	UNUSED						150, 153-199, 277-299
	32		W9026	082	24		23-25-15	150, 153-155, 162-164
	32		W0091	082	24		23-25-15	156-157, 166-199
	32		W9026	082	22		23-25-15	165
	32	UNUSED						277-299
	33	UNUSED						150, 153-199, 277-299
	34	UNUSED						150, 153-199, 277-299
	35	UNUSED						150, 153-199, 277-299
	36		W9026	086	24		23-25-15	150, 153-155, 162-164
	36		W0091	086	24		23-25-15	156-157, 166-199
	36		W9026	086	22		23-25-15	165
	36	UNUSED						277-299
	37		W9026	087	24		23-25-15	150, 153-155, 162-164
	37		W0091	087	24		23-25-15	156-157, 166-199
	37		W9026	087	22		23-25-15	165
	37	UNUSED						277-299
	38		W9026	088	24		23-25-15	150, 153-155, 162-164
	38		W0091	088	24		23-25-15	156-157, 166-199
	38		W9026	088	22		23-25-15	165

HOOKUP LIST

D280T132

91-21-51

Section D02700

Page 3

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02701		SHELF/E09/-01		PLUG (continued)				150, 153-199, 277-299
	38	UNUSED						277-299
	39		W9026	089	24		23-25-15	150, 153-155, 162-164
	39		W0091	089	24		23-25-15	156-157, 166-199
	39		W9026	089	22		23-25-15	165
	39	UNUSED						277-299
	40	UNUSED						150, 153-199, 277-299
	41	UNUSED						150, 153-199, 277-299
	42	UNUSED						150, 153-199, 277-299
	43	UNUSED						150, 153-199, 277-299
	44	UNUSED						150, 153-199, 277-299
	45		W9026	946	24		23-25-15	150, 153-155, 162-164
	45		W0091	946	24		23-25-15	156-157, 166-199
	45		W9026	946	22		23-25-15	165
	45	UNUSED						277-299
	46		W9026	947	24		23-25-15	150, 153-155, 162-164
	46		W0091	947	24		23-25-15	156-157, 166-199
	46		W9026	947	22		23-25-15	165
	46	UNUSED						277-299
	47		W9026	948	24		23-25-15	150, 153-155, 162-164
	47		W0091	948	24		23-25-15	156-157, 166-199
	47		W9026	948	22		23-25-15	165
	47	UNUSED						277-299
	48		W9026	949	24		23-25-15	150, 153-155, 162-164
	48		W0091	949	24		23-25-15	156-157, 166-199
	48		W9026	949	22		23-25-15	165
	48	UNUSED						277-299
	49	UNUSED						150, 153-199, 277-299
	50	UNUSED						150, 153-199, 277-299
	51	UNUSED						150, 153-199, 277-299
	52	UNUSED						150, 153-199, 277-299
	53	UNUSED						150, 153-199, 277-299
	54	UNUSED						150, 153-199, 277-299
	55	UNUSED						150, 153-199, 277-299
D02703		1109/289/L054		PLUG				150, 153-199
	= A1		W9128	01CX			23-25-17	150, 153-199
	= C1		W9128	01CO			23-25-17	150, 153-199
D02704A		//		PLUG-PART OF D02704				ALL
	A01	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D02700

Page 4

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02704A		//		PLUG-PART OF D02704 (continued)				ALL
	A02	UNUSED						ALL
	A03		W0014	633	22		29-33-11	ALL
	A04		W0014	155	24		29-33-11	ALL
	A05		W0014	139	24		29-33-11	ALL
	A06		W0014	112	22		29-33-11	ALL
	A07	UNUSED						ALL
	A08		W0014	176	24		29-33-11	ALL
	A09	UNUSED						ALL
	A10	UNUSED						ALL
	A11	UNUSED						ALL
	A12		W0014	632	22		29-33-11	ALL
	A13		W0014	151	24		29-33-11	ALL
	A14		W0014	135	24		29-33-11	ALL
	A15		W0014	114	22		29-33-11	ALL
	B01	UNUSED						ALL
	B02		W0014	153	24		29-33-11	ALL
	B03		W0014	FRK			29-33-11	ALL
	B04		W0014	156	24		29-33-11	ALL
	B05	UNUSED						ALL
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	B08		W0014	141	22		29-33-11	ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11		W0014	149	24		29-33-11	ALL
	B12		W0014	FRL			29-33-11	ALL
	B13		W0014	152	24		29-33-11	ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	C01	UNUSED						ALL
	C02	UNUSED						ALL
	C03		W0014	FRH			29-33-11	ALL
	C04		W0014	154	24		29-33-11	ALL
	C05		W0014	160	24		29-33-11	ALL
	C06	UNUSED						ALL
	C07	UNUSED						ALL
	C08	UNUSED						ALL
	C09	UNUSED						ALL
	C10	UNUSED						ALL
	C11	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D02700

Page 5

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02704A		//		PLUG-PART OF D02704 (continued)				ALL
	C12		W0014	FRO			29-33-11	ALL
	C13		W0014	150	24		29-33-11	ALL
	C14		W0014	158	24		29-33-11	ALL
	C15	UNUSED						ALL
	D01	UNUSED						ALL
	D02	UNUSED						ALL
	D03	UNUSED						ALL
	D04	UNUSED						ALL
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	D08	UNUSED						ALL
	D09	UNUSED						ALL
	D10	UNUSED						ALL
	D11	UNUSED						ALL
	D12	UNUSED						ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15	UNUSED						ALL
	REF		W0014	149Z			29-33-11	ALL
	REF		W0014	153Z			29-33-11	ALL
	REF		W0014	FRH			29-33-11	ALL
	REF		W0014	FRI			29-33-11	ALL
	REF		W0014	FRK			29-33-11	ALL
	REF		W0014	FRL			29-33-11	ALL
	REF		W0014	FRO			29-33-11	ALL
	REF		W0014	FRP			29-33-11	ALL
D02704B		//		PLUG-PART OF D02704				ALL
	A01		W0014	130	24		29-33-11	ALL
	A02	UNUSED						ALL
	A03	UNUSED						ALL
	A04	UNUSED						ALL
	A05	UNUSED						ALL
	A06		W0016	513	22		29-33-11	ALL
	A07		W0014	147	24		29-33-11	ALL
	A08		W0014	105	22		29-33-11	ALL
	A09		W0014	089	22		29-33-11	ALL
	A10	UNUSED						ALL
	A11		W0014	177	24		29-33-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D02700

Page 6

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02704B		//		PLUG-PART OF D02704 (continued)				ALL
	A12		W0014	133	22		29-33-11	ALL
	A13		W0014	178	22		29-33-11	ALL
	A14		W0014	157	24		29-33-11	ALL
	A15		W0014	142	22		29-33-11	ALL
	B01		W0014	180	22		29-33-11	ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04	UNUSED						ALL
	B05		W0016	091	24		29-33-11	ALL
	B06		W0016	FRG			29-33-11	ALL
	B07		W0014	148	24		29-33-11	ALL
	B08	UNUSED						ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11		W0014	137	22		29-33-11	ALL
	B12	UNUSED						ALL
	B13	UNUSED						ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	C01	UNUSED						ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05	UNUSED						ALL
	C06		W0016	FRI			29-33-11	ALL
	C07		W0014	146	24		29-33-11	ALL
	C08		W0014	159	24		29-33-11	ALL
	C09	UNUSED						ALL
	C10	UNUSED						ALL
	C11	UNUSED						ALL
	C12	UNUSED						ALL
	C13	UNUSED						ALL
	C14	UNUSED						ALL
	C15	UNUSED						ALL
	D01	UNUSED						ALL
	D02	UNUSED						ALL
	D03	UNUSED						ALL
	D04	UNUSED						ALL
	D05	UNUSED						ALL
	D06	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D02700

Page 7

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02704B		//		PLUG-PART OF D02704 (continued)				ALL
	D07	UNUSED						ALL
	D08	UNUSED						ALL
	D09	UNUSED						ALL
	D10	UNUSED						ALL
	D11	UNUSED						ALL
	D12	UNUSED						ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15	UNUSED						ALL
			W0016	091Z			29-33-11	ALL
			W0016	FRE			29-33-11	ALL
			W0016	FRG			29-33-11	ALL
			W0016	FRI			29-33-11	ALL
D02705		1109/289/L054		PLUG				150, 153-199, 277-299
	= A1		W9129	01CX			23-25-17	150, 153-199
	= A1		W1923	01CX			23-25-17	277-299
	= C1		W9129	01CO			23-25-17	150, 153-199
	= C1		W1923	01CO			23-25-17	277-299
D02706A		//		PLUG-PART OF D02706				ALL
	A01		W0098	220B	24		28-41-11	ALL
	A02		W0098	303B	24		28-41-11	ALL
	A03		W0098	221B	24		28-41-11	ALL
	A04		W0098	007	22		28-21-11	ALL
	A05	UNUSED						ALL
	A06	UNUSED						ALL
	A07		W0098	216B	24		28-41-11	ALL
	A08	UNUSED						ALL
	A09	UNUSED						ALL
	A10	UNUSED						ALL
	A11		W0098	302Y	24		28-41-11	ALL
	A12	UNUSED						ALL
	A13	UNUSED						ALL
	A14		W0098	237R	24		28-41-13	ALL
	A15	UNUSED						ALL
	B01		W0098	303Y	24		28-41-11	ALL
	B02		W0098	303R	24		28-41-11	ALL
	B03		W0098	221R	24		28-41-11	ALL
	B04	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D02700

Page 8

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02706A		//		PLUG-PART OF D02706 (continued)				ALL
	B05	UNUSED						ALL
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09	UNUSED						ALL
	B10		W0098	302B	24		28-41-11	ALL
	B11		W0098	302R	24		28-41-11	ALL
	B12	UNUSED						ALL
	B13	UNUSED						ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	C01		W0098	022	24		28-41-21	ALL
	C02		W0098	026	24		28-41-21	ALL
	C03		W0098	030	24		28-41-21	ALL
	C04		W0098	035	24		28-41-21	ALL
	C05	UNUSED						ALL
	C06		W0098	014	22		28-21-11	ALL
	C07		W0098	081	24		28-41-11	ALL
	C08	UNUSED						ALL
	C09		W0098	087	24		28-41-11	ALL
	C10		W0098	218B	24		28-41-11	ALL
	C11		W0098	218R	24		28-41-11	ALL
	C12	UNUSED						ALL
	C13	UNUSED						ALL
	C14		W0098	019	24		28-41-11	ALL
	C15	UNUSED						ALL
	D01		W0098	025	24		28-41-21	ALL
	D02		W0098	029	24		28-41-21	ALL
	D03		W0098	033	24		28-41-21	ALL
	D04		W0098	036	24		28-41-21	ALL
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	D08		W0098	082	24		28-41-11	ALL
	D09	UNUSED						ALL
	D10		W0098	066	24		28-41-23	ALL
	D11		W0098	068	24		28-41-23	ALL
	D12	UNUSED						ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D02700
Page 9
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02706A		//		PLUG-PART OF D02706 (continued)				ALL
	D15	UNUSED						ALL
	E01		W0098	023	24		28-41-21	ALL
	E02		W0098	027	24		28-41-21	ALL
	E03		W0098	031	24		28-41-21	ALL
	E04		W0098	024	24		28-41-21	ALL
	E05	UNUSED						ALL
	E06		W0098	401B	22		28-21-11	ALL
	E07		W0098	401R	22		28-21-11	ALL
	E08	UNUSED						ALL
	E09		W0098	087	24		28-41-11	ALL
	E10		W0098	067	24		28-41-23	ALL
	E11		W0098	069	24		28-41-23	ALL
	E12	UNUSED						ALL
	E13	UNUSED						ALL
	E14	UNUSED						ALL
	E15	UNUSED						ALL
	F01		W0098	028	24		28-41-21	ALL
	F02		W0098	032	24		28-41-21	ALL
	F03		W0098	034	24		28-41-21	ALL
	F04	UNUSED						ALL
	F05	UNUSED						ALL
	F06		W0098	401G	22		28-21-11	ALL
	F07		W0098	401Y	22		28-21-11	ALL
	F08	UNUSED						ALL
	F09	UNUSED						ALL
	F10	UNUSED						ALL
	F11	UNUSED						ALL
	F12	UNUSED						ALL
	F13	UNUSED						ALL
	F14	UNUSED						ALL
	F15	UNUSED						ALL
	G01		W0098	224B	24		28-41-21	ALL
	G02		W0098	225B	24		28-41-21	ALL
	G03	UNUSED						ALL
	G04	UNUSED						ALL
	G05	UNUSED						ALL
	G06	UNUSED						ALL
	G07	UNUSED						ALL
	G08		W0098	012	22		28-21-11	ALL
	G09	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D02700

Page 10

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02706A		//		PLUG-PART OF D02706 (continued)				ALL
	G10	UNUSED						ALL
	G11	UNUSED						ALL
	G12	UNUSED						ALL
	G13	UNUSED						ALL
	G14	UNUSED						ALL
	G15	UNUSED						ALL
	H01		W0098	224R	24		28-41-21	ALL
	H02		W0098	225R	24		28-41-21	ALL
	H03	UNUSED						ALL
	H04		W0098	008	22		28-21-11	ALL
	H05	UNUSED						ALL
	H06		W0098	011	22		28-21-11	ALL
	H07		W0098	013	22		28-21-11	ALL
	H08	UNUSED						ALL
	H09		W0098	006	22		28-21-11	ALL
	H10	UNUSED						ALL
	H11		W0098	095	22		28-41-11	ALL
	H12	UNUSED						ALL
	H13	UNUSED						ALL
	H14		W0098	097	24		28-41-13	ALL
	H15	UNUSED						ALL
	J01		W0098	210B	24		28-41-11	ALL
	J02		W0098	212B	24		28-41-11	ALL
	J03		W0098	211B	24		28-41-11	ALL
	J04		W0098	018	24		28-41-11	ALL
	J05	UNUSED						ALL
	J06	UNUSED						ALL
	J07	UNUSED						ALL
	J08		W0098	098	22		28-41-13	ALL
	J09	UNUSED						ALL
	J10	UNUSED						ALL
	J11		W0098	235R	24		34-61-14	ALL
	J12	UNUSED						ALL
	J13	UNUSED						ALL
	J14	UNUSED						ALL
	J15	UNUSED						ALL
	K01		W0098	210R	24		28-41-11	ALL
	K02		W0098	212R	24		28-41-11	ALL
	K03		W0098	211R	24		28-41-11	ALL
	K04	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D02700

Page 11

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02706A		//		PLUG-PART OF D02706 (continued)				ALL
	K05	UNUSED						ALL
	K06	UNUSED						ALL
	K07		W0098	216R	24		28-41-11	ALL
	K08	UNUSED						ALL
	K09		W0098	220R	24		28-41-11	ALL
	K10	UNUSED						ALL
	K11		W0098	235B	24		34-61-14	ALL
	K12	UNUSED						ALL
	K13	UNUSED						ALL
	K14		W0098	237B	24		28-41-13	ALL
	K15	UNUSED						ALL
			W0098	091	20		34-61-14	ALL
			W0098	235Z			34-61-14	ALL
D02706B		//		PLUG-PART OF D02706				ALL
	A01		W0098	214B	24		28-41-11	ALL
	A02		W0098	301B	24		28-41-11	ALL
	A03		W0098	215B	24		28-41-11	ALL
	A04		W0098	004	22		28-21-11	ALL
	A05	UNUSED						ALL
	A06		W0098	236R	24		34-61-24	ALL
	A07		W0098	217B	24		28-41-11	ALL
	A08		W0098	234R	24		28-41-11	ALL
	A09	UNUSED						ALL
	A10		W0098	233B	24		28-41-23	ALL
	A11		W0098	233R	24		28-41-23	ALL
	A12	UNUSED						ALL
	A13	UNUSED						ALL
	A14	UNUSED						ALL
	A15	UNUSED						ALL
	B01		W0098	301Y	24		28-41-11	ALL
	B02		W0098	301R	24		28-41-11	ALL
	B03		W0098	215R	24		28-41-11	ALL
	B04	UNUSED						ALL
	B05	UNUSED						ALL
	B06		W0098	236B	24		34-61-24	ALL
	B07	UNUSED						ALL
	B08		W0098	234B	24		28-41-11	ALL
	B09	UNUSED						ALL
	B10		W0098	228B	24		28-41-23	ALL

HOOKUP LIST

D280T132

91-21-51

Section D02700

Page 12

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02706B		//		PLUG-PART OF D02706 (continued)				ALL
	B11		W0098	228R	24		28-41-23	ALL
	B12	UNUSED						ALL
	B13	UNUSED						ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	C01		W0098	038	24		28-41-22	ALL
	C02		W0098	042	24		28-41-22	ALL
	C03		W0098	046	24		28-41-22	ALL
	C04		W0098	051	24		28-41-22	ALL
	C05	UNUSED						ALL
	C06	UNUSED						ALL
	C07		W0098	213B	24		28-41-11	ALL
	C08	UNUSED						ALL
	C09		W0098	086	24		28-41-11	ALL
	C10	UNUSED						ALL
	C11	UNUSED						ALL
	C12	UNUSED						ALL
	C13	UNUSED						ALL
	C14	UNUSED						ALL
	C15	UNUSED						ALL
	D01		W0098	041	24		28-41-22	ALL
	D02		W0098	045	24		28-41-22	ALL
	D03		W0098	049	24		28-41-22	ALL
	D04		W0098	052	24		28-41-22	ALL
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	D08	UNUSED						ALL
	D09	UNUSED						ALL
	D10		W0098	062	24		28-41-23	ALL
	D11		W0098	064	24		28-41-23	ALL
	D12	UNUSED						ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15	UNUSED						ALL
	E01		W0098	039	24		28-41-22	ALL
	E02		W0098	043	24		28-41-22	ALL
	E03		W0098	047	24		28-41-22	ALL
	E04		W0098	040	24		28-41-22	ALL
	E05	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D02700

Page 13

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02706B		//		PLUG-PART OF D02706 (continued)				ALL
	E06	UNUSED						ALL
	E07		W0098	213R	24		28-41-11	ALL
	E08	UNUSED						ALL
	E09		W0098	086	24		28-41-11	ALL
	E10		W0098	063	24		28-41-23	ALL
	E11		W0098	059	24		28-41-23	ALL
	E12	UNUSED						ALL
	E13	UNUSED						ALL
	E14	UNUSED						ALL
	E15	UNUSED						ALL
	F01		W0098	044	24		28-41-22	ALL
	F02		W0098	048	24		28-41-22	ALL
	F03		W0098	050	24		28-41-22	ALL
	F04	UNUSED						ALL
	F05	UNUSED						ALL
	F06		W0098	201B	24		28-41-11	ALL
	F07		W0098	203B	24		28-41-11	ALL
	F08		W0098	202B	24		28-41-11	ALL
	F09	UNUSED						ALL
	F10		W0098	061	24		28-41-23	ALL
	F11		W0098	070	24		28-41-23	ALL
	F12	UNUSED						ALL
	F13	UNUSED						ALL
	F14	UNUSED						ALL
	F15	UNUSED						ALL
	G01		W0098	232B	24		28-41-22	ALL
	G02		W0098	226B	24		28-41-22	ALL
	G03	UNUSED						ALL
	G04	UNUSED						ALL
	G05	UNUSED						ALL
	G06		W0098	201R	24		28-41-11	ALL
	G07		W0098	203R	24		28-41-11	ALL
	G08		W0098	202R	24		28-41-11	ALL
	G09	UNUSED						ALL
	G10	UNUSED						ALL
	G11		W0098	017	24		28-41-11	ALL
	G12	UNUSED						ALL
	G13	UNUSED						ALL
	G14	UNUSED						ALL
	G15	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D02700

Page 14

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02706B		//		PLUG-PART OF D02706 (continued)				ALL
	H01		W0098	232R	24		28-41-22	ALL
	H02		W0098	226R	24		28-41-22	ALL
	H03	UNUSED						ALL
	H04		W0098	003	22		28-21-11	ALL
	H05	UNUSED						ALL
	H06		W0098	015	24		28-41-11	ALL
	H07	UNUSED						ALL
	H08	UNUSED						ALL
	H09		W0098	005	22		28-21-11	ALL
	H10		W0098	207B	24		28-41-11	ALL
	H11		W0098	207R	24		28-41-11	ALL
	H12	UNUSED						ALL
	H13	UNUSED						ALL
	H14	UNUSED						ALL
	H15	UNUSED						ALL
	J01		W0098	204B	24		28-41-11	ALL
	J02		W0098	206B	24		28-41-11	ALL
	J03		W0098	205B	24		28-41-11	ALL
	J04		W0098	016	24		28-41-11	ALL
	J05	UNUSED						ALL
	J06	UNUSED						ALL
	J07	UNUSED						ALL
	J08	UNUSED						ALL
	J09	UNUSED						ALL
	J10		W0098	209B	24		28-41-11	ALL
	J11		W0098	209R	24		28-41-11	ALL
	J12	UNUSED						ALL
	J13	UNUSED						ALL
	J14	UNUSED						ALL
	J15	UNUSED						ALL
	K01		W0098	204R	24		28-41-11	ALL
	K02		W0098	206R	24		28-41-11	ALL
	K03		W0098	205R	24		28-41-11	ALL
	K04	UNUSED						ALL
	K05	UNUSED						ALL
	K06	UNUSED						ALL
	K07		W0098	217R	24		28-41-11	ALL
	K08	UNUSED						ALL
	K09		W0098	214R	24		28-41-11	ALL
	K10		W0098	208B	24		28-41-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D02700

Page 15

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02706B		//		PLUG-PART OF D02706 (continued)				ALL
	K11		W0098	208R	24		28-41-11	ALL
	K12	UNUSED						ALL
	K13	UNUSED						ALL
	K14	UNUSED						ALL
	K15	UNUSED						ALL
	DED		W0098	234Z			28-41-11	ALL
			W0098	092	20		34-61-24	ALL
			W0098	236Z			34-61-24	ALL
D02706C		//		PLUG-PART OF D02706				ALL
	1		W0098	056	22		28-41-12	ALL
	2	GR	W0098	037	24		28-41-22	ALL
	3	GR	W0098	053	24		28-41-21	ALL
	4		W0098	055	22		28-41-12	ALL
	5		W0098	057	20		28-41-12	ALL
	6		W0098	054	20		28-41-12	ALL
	7	GR	W0098	058	24		28-41-23	ALL
	8	GR	W0098	065	24		28-41-23	ALL
	9		W0098	093	20		28-21-11	ALL
	10		W0098	094	20		28-21-11	ALL
	11		W0098	083	20		28-41-12	ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	=2		W0098	037Z			28-41-22	ALL
	=3		W0098	053Z			28-41-21	ALL
	=7		W0098	058Z			28-41-23	ALL
	=8		W0098	065Z			28-41-23	ALL
	=C12	UNUSED						ALL
	=C13	UNUSED						ALL
	DED		W0098	055Z			28-41-12	ALL
D02707		1109/289/L054		PLUG				150, 153-199, 277-299
	=A1		W9122	01CX			23-25-17	150, 153-199
	=A1		W1929	01CX			23-25-17	156-157, 166-199, 277-299
	=C1		W9122	01CO			23-25-17	150, 153-199
	=C1		W1929	01CO			23-25-17	156-157, 166-199, 277-299
D02708A		//		PLUG-PART OF D02708				ALL
	A01		W0014	232R	22		77-31-11	ALL
	A02	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D02700

Page 16

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02708A		//		PLUG-PART OF D02708 (continued)				ALL
	A03	UNUSED						ALL
	A04	UNUSED						ALL
	A05	UNUSED						ALL
	A06	UNUSED						ALL
	A07	UNUSED						ALL
	A08		W0014	248R	24		77-31-11	ALL
	A09	UNUSED						ALL
	A10	UNUSED						ALL
	A11	UNUSED						ALL
	A12	UNUSED						ALL
	A13	UNUSED						ALL
	A14	UNUSED						ALL
	A15	UNUSED						ALL
	B01		W0014	232B	22		77-31-11	ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04	UNUSED						ALL
	B05	UNUSED						ALL
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	B08		W0014	248B	24		77-31-11	ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11	UNUSED						050-099, 155-199, 275-299
	B11		W0014	616	22		77-31-11	150-154
	B12	UNUSED						050-099, 155-199, 275-299
	B12		W0014	617	22		77-31-11	150-154
	B13	UNUSED						ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	C01	UNUSED						ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05	UNUSED						ALL
	C06		W0014	231B	24		77-31-11	ALL
	C07	UNUSED						ALL
	C08	UNUSED						ALL
	C09	UNUSED						ALL
	C10		W0014	250R	24		77-31-11	ALL

HOOKUP LIST
D280T132

91-21-51
Section D02700
Page 17
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02708A		//		PLUG-PART OF D02708 (continued)				ALL
	C11	UNUSED						ALL
	C12	UNUSED						ALL
	C13	UNUSED						ALL
	C14	UNUSED						ALL
	C15	UNUSED						ALL
	D01	UNUSED						ALL
	D02	UNUSED						ALL
	D03	UNUSED						ALL
	D04	UNUSED						ALL
	D05	UNUSED						ALL
	D06		W0014	231R	24		77-31-11	ALL
	D07	UNUSED						ALL
	D08	UNUSED						ALL
	D09	UNUSED						ALL
	D10		W0014	250B	24		77-31-11	ALL
	D11	UNUSED						ALL
	D12	UNUSED						ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15	UNUSED						050-099, 155-199, 275-299
	D15		W0014	599	22		77-31-11	150-154
	DED		W0014	250Z			77-31-11	ALL
	REF		W0014	231Z			77-31-11	050-099
	REF		W0014	538	20		77-31-11	050-099
			W0014	127	20		77-31-11	ALL
			W0014	232Z			77-31-11	ALL
			W0014	248	20		77-31-11	ALL
			W0014	248Z			77-31-11	ALL
			W0014	231Z			77-31-11	150-199, 275-299
			W0014	538	20		77-31-11	150-199, 275-299
D02708B		//		PLUG-PART OF D02708				ALL
	A01		W0014	233R	22		77-31-11	ALL
	A02	UNUSED						ALL
	A03	UNUSED						ALL
	A04	UNUSED						ALL
	A05	UNUSED						ALL
	A06	UNUSED						ALL
	A07	UNUSED						ALL
	A08		W0014	247R	24		77-31-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D02700

Page 18

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02708B		//		PLUG-PART OF D02708 (continued)				ALL
	A09	UNUSED						ALL
	A10	UNUSED						ALL
	A11	UNUSED						ALL
	A12	UNUSED						ALL
	A13	UNUSED						ALL
	A14	UNUSED						ALL
	A15		W0014	126	22		77-31-11	ALL
	B01		W0014	233B	22		77-31-11	ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04	UNUSED						ALL
	B05	UNUSED						ALL
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	B08		W0014	247B	24		77-31-11	ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13	UNUSED						ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	C01	UNUSED						ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05	UNUSED						ALL
	C06	UNUSED						ALL
	C07	UNUSED						ALL
	C08	UNUSED						ALL
	C09	UNUSED						ALL
	C10		W0014	249R	24		77-31-11	ALL
	C11	UNUSED						ALL
	C12	UNUSED						ALL
	C13	UNUSED						ALL
	C14	UNUSED						ALL
	C15	UNUSED						ALL
	D01	UNUSED						ALL
	D02	UNUSED						ALL
	D03	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D02700

Page 19

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02708B		//		PLUG-PART OF D02708 (continued)				ALL
	D04	UNUSED						ALL
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	D08	UNUSED						ALL
	D09	UNUSED						ALL
	D10		W0014	249B	24		77-31-11	ALL
	D11	UNUSED						ALL
	D12	UNUSED						ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15	UNUSED						ALL
	DED		W0014	249Z			77-31-11	ALL
			W0014	123	20		77-31-11	ALL
			W0014	233Z			77-31-11	ALL
			W0014	247	20		77-31-11	ALL
			W0014	247Z			77-31-11	ALL
D02708C		//		PLUG-PART OF D02708				ALL
	1	UNUSED						ALL
	2		W0014	507	24		77-31-11	ALL
	3		W0014	125	18		77-31-11	ALL
	4		W0014	122	18		77-31-11	ALL
	5	UNUSED						ALL
	=C1	UNUSED						ALL
	=C5	UNUSED						ALL
D02709		1109/289/L054		PLUG				150, 153-199, 277-299
	A		W9031	009	20		23-25-17	150, 153-155, 162-165
	A		W0811	009	20		23-25-17	156-157, 166-199, 277-299
	B		W9036	004	24		23-25-17	150, 153-155, 162-165
	B		W0811	004	24		23-25-17	156-157, 166-199, 277-299
	C	UNUSED						150, 153-199, 277-299
	D	UNUSED						150, 153-199, 277-299
	E		W9031	008	20		23-25-17	150, 153-155, 162-165
	E		W0811	008	20		23-25-17	156-157, 166-199, 277-299
	F		W9031	002	20		23-25-17	150, 153-155, 162-165
	F		W0811	002	20		23-25-17	156-157, 166-199, 277-299
	G	UNUSED						150, 153-199, 277-299
	H		W9036	005	24		23-25-17	150, 153-155, 162-165

HOOKUP LIST

D280T132

91-21-51

Section D02700

Page 20

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02709		1109/289/L054		PLUG (continued)				150, 153-199, 277-299
	H		W0811	005	24		23-25-17	156-157, 166-199, 277-299
	J	UNUSED						150, 153-155, 162-165
	J		W0811	018	24		23-25-17	156-157, 166-199, 277-299
	K	UNUSED						150, 153-199, 277-299
D02711		1109/289/L054		PLUG				150, 153-199
	= A1		W9124	01CX			23-25-17	150, 153-199
	= C1		W9124	01CO			23-25-17	150, 153-199
D02712A		//		PLUG-PART OF D02712				ALL
	A01		W0014	409Y	22		21-31-21	ALL
	A02		W0014	074	24		21-31-21	ALL
	A03	UNUSED						ALL
	A04	UNUSED						ALL
	A05		W0014	218B	24		21-31-21	ALL
	A06	UNUSED						ALL
	A07		W0014	222R	24		21-31-21	ALL
	A08		W0014	222B	24		21-31-21	ALL
	A09	UNUSED						ALL
	A10		W0014	225R	24		21-31-21	ALL
	A11		W0014	225B	24		21-31-21	ALL
	A12	UNUSED						ALL
	A13	UNUSED						ALL
	A14	UNUSED						ALL
	A15		W0014	075	22		21-31-21	ALL
	B01		W0014	409R	22		21-31-21	ALL
	B02		W0014	077	24		21-31-21	ALL
	B03	UNUSED						ALL
	B04	UNUSED						ALL
	B05	UNUSED						ALL
	B06		W0014	218R	24		21-31-21	ALL
	B07	UNUSED						ALL
	B08		W0014	078	24		21-31-21	ALL
	B09		W0014	506	24		21-31-21	ALL
	B10		W0014	506	24		21-31-21	ALL
	B11		W0014	223B	24		21-31-21	ALL
	B12		W0014	079	22		21-31-21	ALL
	B13		W0014	251B	22		21-31-21	ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D02700

Page 21

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02712A		//		PLUG-PART OF D02712 (continued)				ALL
	C01		W0014	409G	22		21-31-21	ALL
	C02	UNUSED						ALL
	C03		W0014	220B	24		21-31-21	ALL
	C04		W0014	220R	24		21-31-21	ALL
	C05		W0014	219B	24		21-31-21	ALL
	C06		W0014	194	24		21-31-21	ALL
	C07	UNUSED						ALL
	C08	UNUSED						ALL
	C09	UNUSED						ALL
	C10	UNUSED						ALL
	C11		W0014	223R	24		21-31-21	ALL
	C12		W0014	175	22		21-31-21	ALL
	C13		W0014	251R	22		21-31-21	ALL
	C14	UNUSED						ALL
	C15	UNUSED						ALL
	D01		W0014	409B	22		21-31-21	ALL
	D02		W0014	073	24		21-31-21	ALL
	D03		W0014	221B	24		21-31-21	ALL
	D04		W0014	221R	24		21-31-21	ALL
	D05		W0014	194	24		21-31-21	ALL
	D06		W0014	219R	24		21-31-21	ALL
	D07	UNUSED						ALL
	D08	UNUSED						ALL
	D09	UNUSED						ALL
	D10		W0014	505	24		21-31-21	ALL
	D11		W0014	505	24		21-31-21	ALL
	D12	UNUSED						ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15		W0014	076	22		21-31-21	ALL
	DED		W0014	075Z			21-31-21	ALL
	DED		W0014	251Z			21-31-21	ALL
			W0014	071	20		21-31-21	ALL
			W0014	072	20		21-31-21	ALL
			W0014	218Z			21-31-21	ALL
			W0014	219Z			21-31-21	ALL
			W0014	223Z			21-31-21	ALL
			W0014	409Z			21-31-21	ALL

HOOKUP LIST

D280T132

91-21-51

Section D02700

Page 22

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02713		1109/289/R054		PLUG				150, 153-199, 277-299
	= A1		W9127	01CX			23-25-17	150, 153-199
	= A1		W1921	01CX			23-25-17	277-299
	= C1		W9127	01CO			23-25-17	150, 153-199
	= C1		W1921	01CO			23-25-17	277-299
D02715		1109/289/R054		PLUG				150, 153-199, 277-299
	= A1		W9125	01CX			23-25-17	150, 153-199
	= A1		W1931	01CX			SPARE	156-157, 166-199
	= A1		W1931	01CX			23-25-17	277-299
	= C1		W9125	01CO			23-25-17	150, 153-199
	= C1		W1931	01CO			SPARE	156-157, 166-199
	= C1		W1931	01CO			23-25-17	277-299
D02717		1109/289/R54		PLUG-				150, 153-155, 162-165
D02717		1109/289/R54		PLUG				156-157, 166-199, 277-299
	A		W9032	004	20		23-25-17	150, 153-155, 162-165
	A		W0813	004	20		23-25-17	156-157, 166-199, 277-299
	B		W9025	014	22		23-25-17	150, 153-155, 162-165
	B		W0813	014	24		23-25-17	156-157, 166-199, 277-299
	C	UNUSED						150, 153-199, 277-299
	D	UNUSED						150, 153-199, 277-299
	E		W9032	003	20		23-25-17	150, 153-155, 162-165
	E		W0813	003	20		23-25-17	156-157, 166-199, 277-299
	F		W9032	001	20		23-25-17	150, 153-155, 162-165
	F		W0813	001	20		23-25-17	156-157, 166-199, 277-299
	G	UNUSED						150, 153-199, 277-299
	H		W9025	013	22		23-25-17	150, 153-155, 162-165
	H		W0813	013	24		23-25-17	156-157, 166-199, 277-299
	J	UNUSED						150, 153-155, 162-165
	J		W0813	016	24		23-25-17	156-157, 166-199, 277-299
	K	UNUSED						150, 153-199, 277-299
D02719A		SHELF/E09/01		PLUG-PART OF D02719				167-199
	A01	UNUSED						167-199
	A02	UNUSED						167-199
	A03	UNUSED						167-199
	A04		W0091	244R	24		23-25-16	167-199
	A05	UNUSED						167-199
	A06		W0091	245R	24		23-25-16	167-199

HOOKUP LIST

D280T132

91-21-51

Section D02700

Page 23

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02719A		SHELF/E09/01		PLUG-PART OF D02719 (continued)				167-199
	A07	UNUSED						167-199
	A08	UNUSED						167-199
	A09	UNUSED						167-199
	A10	UNUSED						167-199
	A11		W0091	250R	24		23-25-16	167-199
	A12	UNUSED						167-199
	A13	UNUSED						167-199
	A14		W0091	247R	24		23-25-16	167-199
	A15	UNUSED						167-199
	B01		W0091	246B	22		23-25-16	167-199
	B02		W0091	246R	22		23-25-16	167-199
	B03	UNUSED						167-199
	B04		W0091	244B	24		23-25-16	167-199
	B05	UNUSED						167-199
	B06		W0091	245B	24		23-25-16	167-199
	B07	UNUSED						167-199
	B08	UNUSED						167-199
	B09	UNUSED						167-199
	B10		W0091	301Y	24		23-25-16	167-199
	B11		W0091	250B	24		23-25-16	167-199
	B12	UNUSED						167-199
	B13	UNUSED						167-199
	B14		W0091	247B	24		23-25-16	167-199
	B15	UNUSED						167-199
	C01	UNUSED						167-199
	C02	UNUSED						167-199
	C03	UNUSED						167-199
	C04	UNUSED						167-199
	C05	UNUSED						167-199
	C06	UNUSED						167-199
	C07	UNUSED						167-199
	C08	UNUSED						167-199
	C09	UNUSED						167-199
	C10		W0091	301B	24		23-25-16	167-199
	C11		W0091	248R	24		23-25-16	167-199
	C12	UNUSED						167-199
	C13	UNUSED						167-199
	C14	UNUSED						167-199
	C15		W0091	249R	24		23-25-16	167-199
	D01	UNUSED						167-199

HOOKUP LIST

D280T132

91-21-51

Section D02700

Page 24

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02719A		SHELF/E09/01		PLUG-PART OF D02719 (continued)				167-199
	D02	UNUSED						167-199
	D03	UNUSED						167-199
	D04	UNUSED						167-199
	D05	UNUSED						167-199
	D06	UNUSED						167-199
	D07	UNUSED						167-199
	D08	UNUSED						167-199
	D09	UNUSED						167-199
	D10		W0091	301R	24		23-25-16	167-199
	D11		W0091	248B	24		23-25-16	167-199
	D12	UNUSED						167-199
	D13	UNUSED						167-199
	D14	UNUSED						167-199
	D15		W0091	249B	24		23-25-16	167-199
	DED		W0091	248Z			23-25-16	167-199
	DED		W0091	249Z			23-25-16	167-199
	DED		W0091	250Z			23-25-16	167-199
	REF		W0091	244	20		23-25-16	167-199
	REF		W0091	244Z			23-25-16	167-199
	REF		W0091	245	20		23-25-16	167-199
	REF		W0091	245Z			23-25-16	167-199
D02719B		SHELF/E09/01		PLUG-PART OF D02719				167-199
	A01	UNUSED						167-199
	A02	UNUSED						167-199
	A03	UNUSED						167-199
	A04	UNUSED						167-199
	A05	UNUSED						167-199
	A06	UNUSED						167-199
	A07	UNUSED						167-199
	A08	UNUSED						167-199
	A09	UNUSED						167-199
	A10	UNUSED						167-199
	A11	UNUSED						167-199
	A12	UNUSED						167-199
	A13	UNUSED						167-199
	A14	UNUSED						167-199
	A15	UNUSED						167-199
	B01	UNUSED						167-199
	B02	UNUSED						167-199

HOOKUP LIST
D280T132

91-21-51
Section D02700
Page 25
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02719B		SHELF/E09/01		PLUG-PART OF D02719 (continued)				167-199
	B03	UNUSED						167-199
	B04	UNUSED						167-199
	B05	UNUSED						167-199
	B06	UNUSED						167-199
	B07	UNUSED						167-199
	B08	UNUSED						167-199
	B09	UNUSED						167-199
	B10	UNUSED						167-199
	B11	UNUSED						167-199
	B12	UNUSED						167-199
	B13	UNUSED						167-199
	B14	UNUSED						167-199
	B15	UNUSED						167-199
	C01	UNUSED						167-199
	C02	UNUSED						167-199
	C03	UNUSED						167-199
	C04	UNUSED						167-199
	C05	UNUSED						167-199
	C06	UNUSED						167-199
	C07	UNUSED						167-199
	C08	UNUSED						167-199
	C09	UNUSED						167-199
	C10	UNUSED						167-199
	C11	UNUSED						167-199
	C12	UNUSED						167-199
	C13	UNUSED						167-199
	C14	UNUSED						167-199
	C15	UNUSED						167-199
	D01	UNUSED						167-199
	D02	UNUSED						167-199
	D03	UNUSED						167-199
	D04	UNUSED						167-199
	D05	UNUSED						167-199
	D06	UNUSED						167-199
	D07	UNUSED						167-199
	D08	UNUSED						167-199
	D09	UNUSED						167-199
	D10	UNUSED						167-199
	D11	UNUSED						167-199
	D12	UNUSED						167-199

HOOKUP LIST

D280T132

91-21-51

Section D02700

Page 26

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02719B		SHELF/E09/01		PLUG-PART OF D02719 (continued)				167-199
	D13	UNUSED						167-199
	D14	UNUSED						167-199
	D15	UNUSED						167-199
D02719C		SHELF/E09/01		PLUG-PART OF D02719				167-199
	1	UNUSED						167-199
	2		W0091	069	20		23-25-16	167-199
	3		W0091	071	20		23-25-16	167-199
	4		W0091	070	20		23-25-16	167-199
	5	UNUSED						167-199
	= C1	UNUSED						167-199
	= C5	UNUSED						167-199
D02734		0998/290/L056		PLUG-				050-099
D02734		0829/295/L056		PLUG-				150-199
D02734		0952/290/L056		PLUG-				275-299
	1	UNUSED						ALL
	2		W0812	697	20		33-21-13	ALL
	3		W0812	698	20		33-21-13	ALL
	4	UNUSED						ALL
	5		W0812	699	20		33-21-13	ALL
	6	UNUSED						ALL
	7		W0812	700	20		33-21-13	ALL
	8		W0812	701	20		33-21-13	ALL
	9		W0812	702	20		33-21-13	ALL
	10		W0812	703	20		33-21-13	ALL
	11		W0812	704	20		33-21-13	ALL
	12		W0812	705	20		33-21-13	ALL
D02736		0481/294/L020		PLUG-				275-278
D02736		0478/294/L020		PLUG-				280-299
	1	UNUSED						275-299
	2		W0822	065	20		33-21-11	275-299
	3		W0822	066	20		33-21-11	275-299
	4	UNUSED						275-299
	5		W0822	067	20		33-21-11	275-299
	6	UNUSED						275-299
	7		W0822	068	20		33-21-11	275-299
	8		W0822	069	20		33-21-11	275-299
	9		W0822	070	20		33-21-11	275-299

HOOKUP LIST

D280T132

91-21-51

Section D02700

Page 27

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02736		0481/294/L020		PLUG- (continued)				275-278
D02736		0478/294/L020		PLUG- (continued)				280-299
	10		W0822	071	20		33-21-11	275-299
	11		W0822	072	20		33-21-11	275-299
	12		W0822	073	20		33-21-11	275-299
D02740		0490/294/L020		PLUG-				050-099
D02740		0490/294/L019		PLUG-				150-199, 275-278
D02740		0492/294/L020		PLUG-				280-299
	1	UNUSED						ALL
	2		W0822	078	20		33-21-11	ALL
	3		W0822	079	20		33-21-11	ALL
	4	UNUSED						ALL
	5		W0822	080	20		33-21-11	ALL
	6	UNUSED						ALL
	7		W0822	081	20		33-21-11	ALL
	8		W0822	082	20		33-21-11	ALL
	9		W0822	083	20		33-21-11	ALL
	10		W0822	084	20		33-21-11	ALL
	11		W0822	085	20		33-21-11	ALL
	12		W0822	086	20		33-21-11	ALL
D02746		0533/203/R092		PLUG-				050-099, 150-199
D02746		0401/203/R092		PLUG-				275-299
	1		W1222	020	20		33-51-11	ALL
	2		W1222	016	20		33-51-11	ALL
	3		W1222	642	22		33-51-11	050-099, 150-199
	3		W1222	018	22		33-51-11	275-299
	4		W1222	017	22		33-51-11	ALL
	5		W1222	015	22		33-51-11	ALL
	6		W1222	015	22		33-51-11	ALL
	7		W1222	014	20		33-51-11	ALL
	8		W1222	019	22		33-51-11	ALL
	9		W1222	117	20		33-51-12	050-099
	9	DK	W1222	117	20		33-51-12	150-199
	9		W1222	105	20		33-51-16	275-299
	10	UNUSED						050-099
	10		W1222	027	20		33-51-12	150-199, 275-299
	11	UNUSED						050-099
	11	FM	W1222	026	16		33-51-12	150-157
	11	DK	W1222	026	18		33-51-12	162-199, 275-299

HOOKUP LIST

D280T132

91-21-51

Section D02700

Page 28

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02746		0533/203/R092		PLUG- (continued)				050-099, 150-199
D02746		0401/203/R092		PLUG- (continued)				275-299
	12		W1222	517	20		33-51-12	050-099
	12		W1222	025	22		33-51-12	150-157, 275-299
	12	DK	W1222	025	18		33-51-12	162-199
	13	DK	W1222	024	18		33-51-12	ALL
	14	DK	W1222	023	18		33-51-12	ALL
	15		W1222	022	22		33-51-12	ALL
	16		W1222	021	20		33-51-12	ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20		W1222	040	22		33-51-12	ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24		W1222	040	22		33-51-12	ALL
D02748		0613/294/L020		PLUG-				050-099, 150-199, 275-278
D02748		0618/294/L020		PLUG-				280-299
	1	UNUSED						ALL
	2		W0822	040	20		33-21-11	ALL
	3		W0822	041	20		33-21-11	ALL
	4	UNUSED						ALL
	5		W0822	042	20		33-21-11	ALL
	6	UNUSED						ALL
	7		W0822	043	20		33-21-11	ALL
	8		W0822	044	20		33-21-11	ALL
	9		W0822	045	20		33-21-11	ALL
	10		W0822	046	20		33-21-11	ALL
	11		W0822	047	20		33-21-11	ALL
	12		W0822	048	20		33-21-11	ALL
D02750		0621/294/L020		PLUG-				050-099
D02750		654+99/280/L019		PLUG-				150-199
D02750		0734/280/L019		PLUG-				275-278
	1	UNUSED						050-099, 150-199, 275-278
	2		W0822	052	20		33-21-11	050-099
	2		W0822	052	20		33-21-13	150-199, 275-278
	3		W0822	053	20		33-21-11	050-099
	3		W0822	053	20		33-21-13	150-199, 275-278

HOOKUP LIST

D280T132

91-21-51

Section D02700

Page 29

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02750		0621/294/L020		PLUG- (continued)				050-099
D02750		654+99/280/L019		PLUG- (continued)				150-199
D02750		0734/280/L019		PLUG- (continued)				275-278
	4	UNUSED						050-099, 150-199, 275-278
	5		W0822	054	20		33-21-11	050-099
	5		W0822	054	20		33-21-13	150-199, 275-278
	6	UNUSED						050-099, 150-199, 275-278
	7		W0822	055	20		33-21-11	050-099
	7		W0822	055	20		33-21-13	150-199, 275-278
	8		W0822	056	20		33-21-11	050-099
	8		W0822	056	20		33-21-13	150-199, 275-278
	9		W0822	057	20		33-21-11	050-099
	9		W0822	057	20		33-21-13	150-199, 275-278
	10		W0822	058	20		33-21-11	050-099
	10		W0822	058	20		33-21-13	150-199, 275-278
	11		W0822	059	20		33-21-11	050-099
	11		W0822	059	20		33-21-13	150-199, 275-278
	12		W0822	060	20		33-21-11	050-099
	12		W0822	060	20		33-21-13	150-199, 275-278
D02752		L1150/12/TIP		RCPT-				ALL
	1		W0468	211B	18		33-44-21	ALL
	2		W0468	211R	18		33-44-21	ALL
	3		W0468	003	18		33-44-21	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
D02758		0708/294/L020		PLUG-				050-099
D02758		1048/295/L020		PLUG-				150-199
D02758		0747/294/L020		PLUG-				275-278
D02758		0750/294/L020		PLUG-				280-299
	1	UNUSED						ALL
	2		W0822	095	20		33-21-13	ALL
	3		W0822	096	20		33-21-13	ALL
	4	UNUSED						ALL
	5		W0822	097	20		33-21-13	ALL
	6	UNUSED						ALL
	7		W0822	098	20		33-21-13	ALL
	8		W0822	099	20		33-21-13	ALL

HOOKUP LIST

D280T132

91-21-51

Section D02700

Page 30

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02758		0708/294/L020		PLUG- (continued)				050-099
D02758		1048/295/L020		PLUG- (continued)				150-199
D02758		0747/294/L020		PLUG- (continued)				275-278
D02758		0750/294/L020		PLUG- (continued)				280-299
	9		W0822	100	20		33-21-13	ALL
	10		W0822	101	20		33-21-13	ALL
	11		W0822	102	20		33-21-13	ALL
	12		W0822	103	20		33-21-13	ALL
D02760		NL205/150/R3		PLUG-STRUT				ALL
	1		W0376	058	18		30-21-11	ALL
	2		W0376	093	18		30-21-11	ALL
	3		W0376	105	18		30-21-11	ALL
	4		W0376	090	18		30-21-11	ALL
	5		W0376	104	18		30-21-11	ALL
	6		W0376	094	18		30-21-11	ALL
	7	UNUSED						ALL
D02762		771/120/R 15		PLUG				ALL
	1		W0580	023	24		21-43-11	ALL
	2		W0580	024	24		21-43-11	ALL
	3		W0580	030	20		21-43-11	ALL
	4		W0580	028	24		21-43-11	ALL
	5		W0580	026	24		21-43-11	ALL
	6		W0580	038	24		21-43-11	ALL
	7		W0580	032	20		21-43-11	ALL
	DED		W0580	023Z			21-43-11	050-099
	DED		W0580	024Z			21-43-11	050-099
	DED		W0580	030Z			21-43-11	050-099
D02764		0940/128/R014		PLUG-				ALL
	1		W0982	002	20		21-43-11	ALL
	2		W0982	001	20		21-43-11	ALL
	3		W0982	003	18		21-43-11	ALL
	4		W0982	005	20		21-43-11	ALL
	5		W0982	004	18		21-43-11	ALL
	6		W0982	016	20		21-43-11	ALL
	7		W0982	017	18		21-43-11	ALL

HOOKUP LIST

D280T132

91-21-51
Section D02700
Page 31
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02766		0632/123/R003		PLUG-				ALL
	1		W0580	035	20		21-43-11	ALL
	2		W0580	036	20		21-43-11	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
D02767		1030/310/L015		PLUG				277-299
	= A1		W1925	01CX			23-25-16	277-299
	= C1		W1925	01CO			23-25-16	277-299
D02768		0632/123/L003		PLUG-				ALL
	1		W0578	011	24		21-43-11	ALL
	2		W0578	008	24		21-43-11	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
D02769		1081/294/L014		PLUG				156-157, 166-199, 277-299
	= A1	UNUSED						156-157, 166-199
	= A1		W1927	01CX			23-25-16	277-299
	= C1	UNUSED						156-157, 166-199
	= C1		W1927	01CO			23-25-16	277-299
D02770		0852/123/L060		PLUG-				ALL
	1	DK	W0944	009	18		21-51-11	050-099
	1		W0944	009	20		21-51-11	150-199, 275-299
	2		W0944	008	20		21-51-11	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
D02771		1017/310/L015		PLUG				156-157, 166-199, 277-299
	A		W0809	008	20		23-25-16	156-157, 166-199, 277-299
	B		W0809	301Y	24		23-25-16	156-157, 166-199, 277-299
	C	UNUSED						156-157, 166-199, 277-299
	D	UNUSED						156-157, 166-199, 277-299
	E		W0809	007	20		23-25-16	156-157, 166-199, 277-299
	F		W0809	002	20		23-25-16	156-157, 166-199, 277-299
	G	UNUSED						156-157, 166-199, 277-299

HOOKUP LIST

D280T132

91-21-51

Section D02700

Page 32

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02771		1017/310/L015		PLUG (continued)				156-157, 166-199, 277-299
	H		W0809	301R	24		23-25-16	156-157, 166-199, 277-299
	J		W0809	301B	24		23-25-16	156-157, 166-199, 277-299
	K	UNUSED						156-157, 166-199, 277-299
D02772		0210/167/R030		PLUG-				ALL
	1		W0632	060	22		33-16-12	ALL
	2		W0632	061	20		33-16-12	ALL
	3		W0632	112	22		33-16-12	ALL
	4		W0632	120	22		33-16-22	ALL
	5		W0632	140	24		33-16-11	ALL
	6		W0632	130	22		33-16-21	ALL
	7		W0632	063	22		33-16-17	ALL
	8		W0632	127	22		33-16-17	ALL
	9		W0632	062	20		33-16-17	ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D02773		621/308/R 36		PLUG				050-099
	A	UNUSED						050-099
	B	UNUSED						050-099
	C	UNUSED						050-099
	D	UNUSED						050-099
	E		W1597	002	24		23-32-13	050-099
	F		W1597	003	24		23-32-13	050-099
	G		W1597	005	20		23-32-13	050-099
	H		W1597	001	24		23-32-13	050-099
	J		W1597	006	20		23-32-13	050-099
	K		W1597	007	20		23-32-11	050-099
	L		W1597	008	20		23-32-11	050-099
	M		W1597	004	20		23-32-13	050-099
D02774		0210/167/R030		PLUG-				ALL
	1		W0632	071	22		33-16-12	ALL
	2		W0632	070	22		33-16-12	ALL
	3		W0632	152	22		33-16-12	ALL
	4		W0632	160	22		33-16-22	ALL
	5		W0632	155	22		33-16-12	ALL
	6		W0632	161	22		33-16-22	ALL
	7	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D02700
Page 33
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02774		0210/167/R030		PLUG- (continued)				ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	DED		W0632	070Z			33-16-12	ALL
	DED		W0632	071Z			33-16-12	ALL
	DED		W0632	152Z			33-16-12	ALL
	DED		W0632	155Z			33-16-12	ALL
	DED		W0632	160Z			33-16-22	ALL
	DED		W0632	161Z			33-16-22	ALL
D02775		621/308/R 36		PLUG-COAXIAL				050-099
	= A1		W1597	01CX			23-32-13	050-099
	= C1		W1597	01CO			23-32-13	050-099
D02776		0210/167/R030		PLUG-				ALL
	1		W0638	060	22		33-16-12	ALL
	2		W0638	061	20		33-16-12	ALL
	3		W0638	112	22		33-16-12	ALL
	4		W0638	120	22		33-16-22	ALL
	5		W0638	140	24		33-16-11	ALL
	6		W0638	130	22		33-16-21	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D02778		0210/167/R030		PLUG-				ALL
	1		W0638	071	22		33-16-12	ALL
	2		W0638	070	22		33-16-12	ALL
	3		W0638	151	22		33-16-12	ALL
	4		W0638	160	22		33-16-22	ALL
	5		W0638	154	22		33-16-12	ALL
	6	UNUSED						ALL
	7		W0638	063	22		33-16-17	ALL
	8		W0638	127	22		33-16-17	ALL
	9		W0638	062	20		33-16-17	ALL

HOOKUP LIST

D280T132

91-21-51

Section D02700

Page 34

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02778		0210/167/R030		PLUG- (continued)				ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	DED		W0638	070Z			33-16-12	ALL
	DED		W0638	071Z			33-16-12	ALL
	DED		W0638	151Z			33-16-12	ALL
	DED		W0638	154Z			33-16-12	ALL
	DED		W0638	160Z			33-16-22	ALL
D02780		0210/167/R030		PLUG-				ALL
	1		W0634	080	22		33-16-12	ALL
	2		W0634	081	20		33-16-12	ALL
	3		W0634	131	22		33-16-12	ALL
	4		W0634	120	22		33-16-22	ALL
	5		W0634	140	24		33-16-11	ALL
	6		W0634	130	22		33-16-21	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10		W0634	121	22		33-16-22	ALL
	11		W0634	122	22		33-16-22	ALL
	12		W0634	141	24		33-16-11	ALL
D02782		0210/167/R030		PLUG-				ALL
	1		W0634	091	22		33-16-12	ALL
	2		W0634	090	22		33-16-12	ALL
	3		W0634	171	22		33-16-12	ALL
	4		W0634	160	22		33-16-22	ALL
	5		W0634	176	22		33-16-12	ALL
	6	UNUSED						ALL
	7		W0634	083	22		33-16-17	ALL
	8		W0634	127	22		33-16-17	ALL
	9		W0634	082	20		33-16-17	ALL
	10		W0634	174	22		33-16-12	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	DED		W0634	090Z			33-16-12	ALL

HOOKUP LIST

D280T132

91-21-51

Section D02700

Page 35

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02782		0210/167/R030		PLUG- (continued)				ALL
	DED		W0634	091Z			33-16-12	ALL
	DED		W0634	160Z			33-16-22	ALL
	DED		W0634	171Z			33-16-12	ALL
	DED		W0634	174Z			33-16-12	ALL
	DED		W0634	176Z			33-16-12	ALL
D02792		0826/115/L011		PLUG-				ALL
	1		W0508	301B	20		21-51-12	ALL
	2		W0508	301Y	20		21-51-12	ALL
	3		W0508	301R	20		21-51-12	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
D02794		0745/169/L010		PLUG-				050-099, 150-199, 275-278
D02794		720/169/L010		PLUG-				280-299
	1		W0986	201B	22		21-51-12	ALL
	2		W0986	201R	22		21-51-12	ALL
D02796		MULTI/268/0000		PLUG-				050-099, 280-299
D02796		MULTI/283/0000		PLUG-				150-199, 275-278
	1		W0798	202B	24		21-61-21	ALL
	2		W0798	202R	24		21-61-21	ALL
	3		W0798	201B	22		21-51-12	ALL
	4		W0798	201R	22		21-51-12	ALL
	5	UNUSED						ALL
D02798		L0274/14/RS		PLUG-				ALL
	1	DK	W0482	007	18		28-21-13	ALL
	2	DK	W0482	201B	18		28-21-13	ALL
	3	DK	W0482	009	18		28-21-13	ALL
	4	DK	W0482	008	18		28-21-13	ALL
	5	DK	W0482	201R	18		28-21-13	ALL

HOOKUP LIST

D280T132

91-21-51

Section D02700

Page 36 End

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02800		R0274/14/RS		PLUG-				ALL
	1	DK	W0462	010	18		28-21-13	ALL
	2		W0462	201B	20		28-21-13	ALL
	3	DK	W0462	012	18		28-21-13	ALL
	4	DK	W0462	011	18		28-21-13	ALL
	5		W0462	201R	20		28-21-13	ALL
D02802		L0271/12/MS		PLUG-				ALL
	1	UNUSED						ALL
	2		W0444	302B	14		28-22-12	ALL
	3		W0444	002	14		28-22-12	ALL
	4		W0444	302R	14		28-22-12	ALL
	5	UNUSED						ALL
	6		W0444	302Y	14		28-22-12	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
D02804		R0257/ /		PLUG-				ALL
	1	UNUSED						ALL
	2		W0478	301B	14		28-22-12	ALL
	3		W0478	001	14		28-22-12	ALL
	4		W0478	301R	14		28-22-12	ALL
	5	UNUSED						ALL
	6		W0478	301Y	14		28-22-12	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
D02806		L0258/14/RS		PLUG-				ALL
	1		W0460	008	20		28-42-31	ALL
	2	DK	W0460	006	18		28-42-12	ALL
	3		W0460	005	20		28-42-12	ALL
	4	DK	W0460	007	18		28-42-12	ALL
	5	UNUSED						ALL
D02808		R0257/ /		PLUG-				ALL
	1	UNUSED						ALL
	2	DK	W0464	026	18		28-42-12	ALL
	3		W0464	025	20		28-42-12	ALL
	4	DK	W0464	027	18		28-42-12	ALL
	5	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D02800

Page 1

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02812		L0246/14/RS		PLUG-				ALL
	1		W0454	19TX			28-41-23	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	=C1		W0454	19TI			28-41-23	ALL
D02814		R0230/14/TE		PLUG-				ALL
	1		W0448	38TX			28-41-23	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	=C1		W0448	38TI			28-41-23	ALL
D02816		L0246/14/RS		PLUG-				ALL
	1		W0454	0RED	20		28-41-23	ALL
	2		W0454	0BLU	20		28-41-23	ALL
	3		W0454	0YEL	20		28-41-23	ALL
	4		W0454	0GRN	20		28-41-23	ALL
	5		W0454	0BLK	20		28-41-23	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
D02817		E02-2/ /		RELAY SOCKET				157, 167-199, 275-299
	A1		W0133	836R	24		34-61-17	157, 167-199, 275-299
	A2		W0133	837R	24		34-22-81	157, 167-199, 275-299
	A3		W0133	834R	24		34-61-17	157, 167-199, 275-299
	B1		W0133	836B	24		34-61-17	157, 167-199, 275-299
	B2		W0133	837B	24		34-22-81	157, 167-199, 275-299
	B3		W0133	834B	24		34-61-17	157, 167-199, 275-299
	X1		W0133	829	24		34-61-17	157, 167-199, 275-299
	X2		W0133	830	24		34-61-17	157, 167-199, 275-299
	DED		W0133	834Z			34-61-17	157, 167-199, 275-299
	DED		W0133	836Z			34-61-17	157, 167-199, 275-299
	REF		W0133	837	20		34-22-81	157, 167-199, 275-299
	REF		W0133	837Z			34-22-81	157, 167-199, 275-299
D02818		R0235/14/TE		PLUG-				ALL
	1		W0448	0YEL	20		28-41-23	ALL
	2		W0448	0GRN	20		28-41-23	ALL
	3		W0448	0BLK	20		28-41-23	ALL
	4		W0448	0RED	20		28-41-23	ALL

HOOKUP LIST

D280T132

91-21-51

Section D02800

Page 2

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02818		R0235/14/TE		PLUG- (continued)				ALL
	5		W0448	0BLU	20		28-41-23	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
D02819		E02-3/ /		RELAY SOCKET				157, 167-199, 275-299
	A1		W0145	716R	24		34-61-27	157, 167-199, 275-299
	A2		W0145	722R	24		34-22-91	157, 167-199, 275-299
	A3		W0145	715R	24		34-61-27	157, 167-199, 275-299
	B1		W0145	716B	24		34-61-27	157, 167-199, 275-299
	B2		W0145	722B	24		34-22-91	157, 167-199, 275-299
	B3		W0145	715B	24		34-61-27	157, 167-199, 275-299
	X1		W0145	717	24		34-61-27	157, 167-199, 275-299
	X2		W0145	718	24		34-61-27	157, 167-199, 275-299
	DED		W0145	715Z			34-61-27	157, 167-199, 275-299
	DED		W0145	716Z			34-61-27	157, 167-199, 275-299
	REF		W0145	722	20		34-22-91	157, 167-199, 275-299
	REF		W0145	722Z			34-22-91	157, 167-199, 275-299
D02820		R0250/14/RS		PLUG-				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W0448	206R	20		28-41-23	ALL
	4		W0448	206B	20		28-41-23	ALL
	5		W0448	049	20		28-41-23	ALL
	6		W0448	207R	20		28-41-23	ALL
	7		W0448	207B	20		28-41-23	ALL
	8		W0448	017	18		28-41-23	ALL
	9	UNUSED						ALL
	10		W0448	018	18		28-41-23	ALL
			W0448	049Z			28-41-23	ALL
			W0448	206Z			28-41-23	ALL
			W0448	207Z			28-41-23	ALL
			W0448	FRD			28-41-23	ALL
D02822		R0294/14/RS		PLUG-				ALL
	1	UNUSED						ALL
	2	DK	W0464	012	18		28-42-11	ALL
	3		W0464	011	20		28-42-11	ALL
	4	DK	W0464	013	18		28-42-11	ALL
	5	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D02800
Page 3
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02824		0859/125/L040		PLUG-				ALL
	1		W0508	204B	20		21-51-12	ALL
	2		W0508	204R	20		21-51-12	ALL
D02826		0745/169/R010		PLUG-				ALL
	1		W0738	209R	22		21-51-22	ALL
	2		W0738	209B	22		21-51-22	ALL
D02828		MULTI/283/0000		PLUG-				ALL
	1		W0790	202B	24		21-61-31	ALL
	2		W0790	202R	24		21-61-31	ALL
	3		W0790	201R	22		21-51-22	ALL
	4		W0790	201B	22		21-51-22	ALL
	5	UNUSED						ALL
D02830		0859/125/R050		PLUG-				ALL
	1		W0952	204B	20		21-51-22	ALL
	2		W0952	204R	20		21-51-22	ALL
D02832		P054-00/ /		RCPT-				ALL
	1		W1082	051R	22		26-11-11	ALL
	2		W1082	PA1			99-99-99	ALL
	3		W1082	053R	22		26-11-11	ALL
	4	UNUSED						ALL
	5		W1082	PA1			99-99-99	ALL
	6		W1082	055R	22		26-11-11	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10		W1082	056R	22		26-11-11	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14		W1082	058R	22		26-11-11	ALL
	15	UNUSED						ALL
	16		W1082	057R	22		26-11-11	ALL
	17	UNUSED						ALL
	18		W1082	054R	22		26-11-11	ALL
	19		W1082	006R	22		26-11-11	ALL
	20		W1082	008R	22		26-11-11	ALL
	21		W1082	007R	22		26-11-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D02800

Page 4

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02832		P054-00/ /		RCPT- (continued)				ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
D02834		P054-00/ /		RCPT-				ALL
	1		W1082	061R	22		26-11-12	ALL
	2		W1082	PA2			99-99-99	ALL
	3		W1082	063R	22		26-11-12	ALL
	4	UNUSED						ALL
	5		W1082	PA2			99-99-99	ALL
	6		W1082	065R	22		26-11-12	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10		W1082	066R	22		26-11-12	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14		W1082	068R	22		26-11-12	ALL
	15	UNUSED						ALL
	16		W1082	067R	22		26-11-12	ALL
	17	UNUSED						ALL
	18		W1082	064R	22		26-11-12	ALL

HOOKUP LIST
D280T132

91-21-51
Section D02800
Page 5
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02834		P054-00/ /		RCPT- (continued)				ALL
	19		W1082	017R	22		26-11-12	ALL
	20		W1082	018R	22		26-11-12	ALL
	21		W1082	016R	22		26-11-12	ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
D02836		P054-00/ /		RCPT-				ALL
	1		W1082	671R	22		26-15-11	ALL
	2		W1082	PA3			99-99-99	ALL
	3		W1082	673R	22		26-15-11	ALL
	4	UNUSED						ALL
	5		W1082	PA3			99-99-99	ALL
	6		W1082	675R	22		26-15-11	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10		W1082	676R	22		26-15-11	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14		W1082	678R	22		26-15-11	ALL
	15	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D02800

Page 6

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02836		P054-00/ /		RCPT- (continued)				ALL
	16		W1082	677R	22		26-15-11	ALL
	17	UNUSED						ALL
	18		W1082	674R	22		26-15-11	ALL
	19		W1082	627R	22		26-15-11	ALL
	20		W1082	628R	22		26-15-11	ALL
	21		W1082	626R	22		26-15-11	ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
D02838		P054-00/ /		RCPT-				ALL
	1		W1082	151R	22		26-11-11	ALL
	2		W1082	PA4			99-99-99	ALL
	3		W1082	153R	22		26-11-11	ALL
	4	UNUSED						ALL
	5		W1082	PA4			99-99-99	ALL
	6		W1082	155R	22		26-11-11	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10		W1082	156R	22		26-11-11	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D02800
Page 7
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02838		P054-00/ /		RCPT- (continued)				ALL
	13	UNUSED						ALL
	14		W1082	158R	22		26-11-11	ALL
	15	UNUSED						ALL
	16		W1082	157R	22		26-11-11	ALL
	17	UNUSED						ALL
	18		W1082	154R	22		26-11-11	ALL
	19		W1082	106R	22		26-11-11	ALL
	20		W1082	108R	22		26-11-11	ALL
	21		W1082	107R	22		26-11-11	ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
D02840		P054-00/ /		RCPT-				ALL
	1		W1082	161R	22		26-11-12	ALL
	2		W1082	PA5			99-99-99	ALL
	3		W1082	163R	22		26-11-12	ALL
	4	UNUSED						ALL
	5		W1082	PA5			99-99-99	ALL
	6		W1082	165R	22		26-11-12	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D02800

Page 8

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02840		P054-00/ /		RCPT- (continued)				ALL
	10		W1082	166R	22		26-11-12	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14		W1082	168R	22		26-11-12	ALL
	15	UNUSED						ALL
	16		W1082	167R	22		26-11-12	ALL
	17	UNUSED						ALL
	18		W1082	164R	22		26-11-12	ALL
	19		W1082	117R	22		26-11-12	ALL
	20		W1082	118R	22		26-11-12	ALL
	21		W1082	116R	22		26-11-12	ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
D02842		P054-00/ /		RCPT-				ALL
	1		W1082	806R	22		26-18-11	ALL
	2	UNUSED						ALL
	3		W1082	853R	22		26-18-11	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W1082	805R	22		26-18-11	ALL

HOOKUP LIST
D280T132

91-21-51
Section D02800
Page 9
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02842		P054-00/ /		RCPT- (continued)				ALL
	7	UNUSED						ALL
	8		W1082	808R	22		26-18-21	ALL
	9	UNUSED						ALL
	10		W1082	854R	22		26-18-21	ALL
	11	UNUSED						ALL
	12		W1082	807R	22		26-18-21	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15		W1082	146R	22		26-17-11	ALL
	16	UNUSED						ALL
	17		W1082	644R	22		26-17-11	ALL
	18	UNUSED						ALL
	19		W1082	645R	22		26-17-11	ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22		W1082	810R	22		26-18-31	ALL
	23	UNUSED						ALL
	24		W1082	855R	22		26-18-31	ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27		W1082	809R	22		26-18-31	ALL
	28	UNUSED						ALL
	29		W1082	147R	22		26-17-11	ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32		W1082	842R	22		26-17-11	ALL
	33	UNUSED						ALL
	34		W1082	648R	22		26-17-11	ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38		W1082	PA6			99-99-99	ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D02800

Page 10

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02842		P054-00/ /		RCPT- (continued)				ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
	56	UNUSED						ALL
	57	UNUSED						ALL
	58	UNUSED						ALL
	59	UNUSED						ALL
	60	UNUSED						ALL
	61	UNUSED						ALL
	62	UNUSED						ALL
	63		W1082	PA6			99-99-99	ALL
	64	UNUSED						ALL
	65	UNUSED						ALL
	66	UNUSED						ALL
D02845		P033/ /		RELAY SOCKET				280-299
	A1		W0142	24A	12		23-34-17	280-299
	A2		W0142	23A	12		23-34-17	280-299
	A3	UNUSED						280-299
	B1	UNUSED						280-299
	B2	UNUSED						280-299
	B3	UNUSED						280-299
	C1	UNUSED						280-299
	C2	UNUSED						280-299
	C3	UNUSED						280-299
	X1		W0142	21A	22		23-34-11	280-299
	X2		W0142	22A	22		23-34-11	280-299
D02846		P054-00/ /		RCPT-				ALL
	1		W1082	551R	22		26-11-21	ALL
	2		W1082	PA7			99-99-99	ALL
	3		W1082	553R	22		26-11-21	ALL
	4	UNUSED						ALL
	5		W1082	PA7			99-99-99	ALL

HOOKUP LIST
D280T132

91-21-51
Section D02800
Page 11
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02846		P054-00/ /		RCPT- (continued)				ALL
	6		W1082	555R	22		26-11-21	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10		W1082	556R	22		26-11-21	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14		W1082	558R	22		26-11-21	ALL
	15	UNUSED						ALL
	16		W1082	557R	22		26-11-21	ALL
	17	UNUSED						ALL
	18		W1082	554R	22		26-11-21	ALL
	19		W1082	506R	22		26-11-21	ALL
	20		W1082	508R	22		26-11-21	ALL
	21		W1082	507R	22		26-11-21	ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
D02848		P054-00/ /		RCPT-				ALL
	1		W1082	561R	22		26-11-22	ALL
	2		W1082	PA8			99-99-99	ALL

HOOKUP LIST
D280T132

91-21-51
Section D02800
Page 12
Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02848		P054-00/ /		RCPT- (continued)				ALL
	3		W1082	563R	22		26-11-22	ALL
	4	UNUSED						ALL
	5		W1082	PA8			99-99-99	ALL
	6		W1082	565R	22		26-11-22	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10		W1082	566R	22		26-11-22	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14		W1082	568R	22		26-11-22	ALL
	15	UNUSED						ALL
	16		W1082	567R	22		26-11-22	ALL
	17	UNUSED						ALL
	18		W1082	564R	22		26-11-22	ALL
	19		W1082	517R	22		26-11-22	ALL
	20		W1082	518R	22		26-11-22	ALL
	21		W1082	516R	22		26-11-22	ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D02800

Page 13

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02850		P054-00/ /		RCPT-				ALL
	1		W1082	171R	22		26-15-11	ALL
	2		W1082	PA9			99-99-99	ALL
	3		W1082	173R	22		26-15-11	ALL
	4	UNUSED						ALL
	5		W1082	PA9			99-99-99	ALL
	6		W1082	175R	22		26-15-11	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10		W1082	176R	22		26-15-11	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14		W1082	178R	22		26-15-11	ALL
	15	UNUSED						ALL
	16		W1082	177R	22		26-15-11	ALL
	17	UNUSED						ALL
	18		W1082	174R	22		26-15-11	ALL
	19		W1082	127R	22		26-15-11	ALL
	20		W1082	128R	22		26-15-11	ALL
	21		W1082	126R	22		26-15-11	ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D02800

Page 14

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02850		P054-00/ /		RCPT- (continued)				ALL
	41	UNUSED						ALL
D02852		P054-00/ /		RCPT-				ALL
	1		W1082	651R	22		26-11-21	ALL
	2		W1082	PB1			99-99-99	ALL
	3		W1082	653R	22		26-11-21	ALL
	4	UNUSED						ALL
	5		W1082	PB1			99-99-99	ALL
	6		W1082	655R	22		26-11-21	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10		W1082	656R	22		26-11-21	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14		W1082	658R	22		26-11-21	ALL
	15	UNUSED						ALL
	16		W1082	657R	22		26-11-21	ALL
	17	UNUSED						ALL
	18		W1082	654R	22		26-11-21	ALL
	19		W1082	606R	22		26-11-21	ALL
	20		W1082	608R	22		26-11-21	ALL
	21		W1082	607R	22		26-11-21	ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D02800

Page 15

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02852		P054-00/ /		RCPT- (continued)				ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
D02854		P054-00/ /		RCPT-				ALL
	1		W1082	661R	22		26-11-22	ALL
	2		W1082	PB2			99-99-99	ALL
	3		W1082	663R	22		26-11-22	ALL
	4	UNUSED						ALL
	5		W1082	PB2			99-99-99	ALL
	6		W1082	665R	22		26-11-22	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10		W1082	666R	22		26-11-22	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14		W1082	668R	22		26-11-22	ALL
	15	UNUSED						ALL
	16		W1082	667R	22		26-11-22	ALL
	17	UNUSED						ALL
	18		W1082	664R	22		26-11-22	ALL
	19		W1082	617R	22		26-11-22	ALL
	20		W1082	618R	22		26-11-22	ALL
	21		W1082	616R	22		26-11-22	ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D02800

Page 16

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02854		P054-00/ /		RCPT- (continued)				ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
D02860		1455/284/L043		PLUG-				275-299
	1	UNUSED						275-299
	2		W0106	039	22		33-22-42	275-299
	3		W0106	040	22		33-22-42	275-299
	4	UNUSED						275-299
	5		W0106	038	22		33-22-42	275-299
	6	UNUSED						275-299
	7		W0106	041	22		33-22-42	275-299
	8		W0106	022	22		33-22-42	275-299
	9		W0106	029	22		33-22-42	275-299
	10		W0106	030	22		33-22-42	275-299
	11		W0106	031	22		33-22-42	275-299
	12		W0106	032	22		33-22-42	275-299
D02862		1455/284/L037		PLUG-				275-299
	1	UNUSED						275-299
	2		W0106	045	22		33-22-42	275-299
	3		W0106	046	22		33-22-42	275-299
	4	UNUSED						275-299
	5		W0106	042	22		33-22-42	275-299
	6	UNUSED						275-299
	7		W0106	043	22		33-22-42	275-299
	8		W0106	044	22		33-22-42	275-299
	9		W0106	L-A			33-22-42	275-299
	10		W0106	L-B			33-22-42	275-299
	11		W0106	048	22		33-22-42	275-299
	12		W0106	047	22		33-22-42	275-299
D02864		1455/284/R037		PLUG-				275-299
	1	UNUSED						275-299
	2		W0108	I-A			33-22-42	275-299
	3		W0108	I-B			33-22-42	275-299

HOOKUP LIST
D280T132

91-21-51
Section D02800
Page 17
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02864		1455/284/R037		PLUG- (continued)				275-299
	4	UNUSED						275-299
	5		W0108	035	22		33-22-42	275-299
	6	UNUSED						275-299
	7		W0108	038	22		33-22-42	275-299
	8		W0108	014	22		33-22-42	275-299
	9		W0108	036	22		33-22-42	275-299
	10		W0108	037	22		33-22-42	275-299
	11		W0108	020	22		33-22-42	275-299
	12		W0108	021	22		33-22-42	275-299
D02866		1520/280/0000		PLUG-				050-099
	1	UNUSED						050-099
	2		W0100	028	22		33-22-42	050-099
	3		W0100	029	22		33-22-42	050-099
	4	UNUSED						050-099
	5		W0100	027	22		33-22-42	050-099
	6	UNUSED						050-099
	7		W0100	030	22		33-22-42	050-099
	8		W0100	001	22		33-22-42	050-099
	9		W0100	013	22		33-22-42	050-099
	10		W0100	012	22		33-22-42	050-099
	11		W0100	004	22		33-22-42	050-099
	12		W0100	005	22		33-22-42	050-099
D02868		1520/280/0000		PLUG-				050-099
	1	UNUSED						050-099
	2		W0100	H-A			33-22-42	050-099
	3		W0100	H-B			33-22-42	050-099
	4	UNUSED						050-099
	5		W0100	031	22		33-22-42	050-099
	6	UNUSED						050-099
	7		W0100	032	22		33-22-42	050-099
	8		W0100	009	22		33-22-42	050-099
	9		W0100	G-B			33-22-42	050-099
	10		W0100	G-A			33-22-42	050-099
	11		W0100	016	22		33-22-42	050-099
	12		W0100	017	22		33-22-42	050-099
D02874		0281/280/R035		PLUG-				ALL
	1	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D02800

Page 18

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02874		0281/280/R035		PLUG- (continued)				ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W1228	098	20		33-27-11	ALL
	6	UNUSED						ALL
	7		W1228	099	20		33-27-11	ALL
	8		W1228	100	20		33-27-11	ALL
	9		W1228	101	22		33-27-11	ALL
	10		W1228	102	22		33-27-11	ALL
	11		W1228	103	22		33-27-11	ALL
	12		W1228	104	22		33-27-11	ALL
	DED		W1228	098Z			33-27-11	155-156, 166
	DED		W1228	099Z			33-27-11	155-156, 166
D02876		0281/280/R035		PLUG-				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W1228	090	20		33-27-11	ALL
	6	UNUSED						ALL
	7		W1228	091	20		33-27-11	ALL
	8		W1228	092	20		33-27-11	ALL
	9		W1228	093	22		33-27-11	ALL
	10		W1228	094	22		33-27-11	ALL
	11		W1228	095	22		33-27-11	ALL
	12		W1228	096	22		33-27-11	ALL
	DED		W1228	090Z			33-27-11	155-156, 166
	DED		W1228	091Z			33-27-11	155-156, 166
D02878		1576/284/L014		PLUG-				ALL
	1	UNUSED						ALL
	2		W0816	014	22		33-27-11	ALL
	3		W0816	015	22		33-27-11	ALL
	4	UNUSED						ALL
	5		W0816	016	20		33-27-11	ALL
	6	UNUSED						ALL
	7		W0816	017	20		33-27-11	ALL
	8		W0816	018	20		33-27-11	ALL
	9		W0816	019	22		33-27-11	ALL

HOOKUP LIST
D280T132

91-21-51
Section D02800
Page 19
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02878		1576/284/L014		PLUG- (continued)				ALL
	10		W0816	020	22		33-27-11	ALL
	11		W0816	021	22		33-27-11	ALL
	12		W0816	022	22		33-27-11	ALL
D02880		1576/284/R14		PLUG-				050-099
D02880		1576/284/R014		PLUG-				150-199, 275-299
	1	UNUSED						ALL
	2		W0818	510	22		33-27-11	ALL
	3		W0818	511	22		33-27-11	ALL
	4	UNUSED						ALL
	5		W0818	512	20		33-27-11	ALL
	6	UNUSED						ALL
	7		W0818	513	20		33-27-11	ALL
	8		W0818	514	20		33-27-11	ALL
	9		W0818	515	22		33-27-11	ALL
	10		W0818	516	22		33-27-11	ALL
	11		W0818	517	22		33-27-11	ALL
	12		W0818	518	22		33-27-11	ALL
D02882		1567/284/R32		PLUG-				050-099
D02882		1567/284/R032		PLUG-				150-199, 275-299
	1	UNUSED						ALL
	2		W0816	001	22		33-27-11	ALL
	3		W0816	002	22		33-27-11	ALL
	4	UNUSED						ALL
	5		W0816	003	22		33-27-11	ALL
	6	UNUSED						ALL
	7		W0816	004	20		33-27-11	ALL
	8		W0816	005	22		33-27-11	ALL
	9		W0816	006	22		33-27-11	ALL
	10		W0816	007	22		33-27-11	ALL
	11		W0816	008	22		33-27-11	ALL
	12		W0816	009	22		33-27-11	ALL
D02884		1567/284/L032		PLUG-				ALL
	1	UNUSED						ALL
	2		W0818	519	22		33-27-11	ALL
	3		W0818	520	22		33-27-11	ALL
	4	UNUSED						ALL
	5		W0818	521	22		33-27-11	050-099, 150-199

HOOKUP LIST

D280T132

91-21-51

Section D02800

Page 20

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02884		1567/284/L032		PLUG- (continued)				ALL
	5		W0818	500	22		33-27-11	275-299
	6	UNUSED						ALL
	7		W0818	522	20		33-27-11	ALL
	8		W0818	523	22		33-27-11	ALL
	9		W0818	524	22		33-27-11	ALL
	10		W0818	525	22		33-27-11	ALL
	11		W0818	526	22		33-27-11	ALL
	12		W0818	527	22		33-27-11	ALL
D02886		P036-00/ /		RELAY SOCKET-				ALL
	A1		W0176	633	24		36-11-41	ALL
	A2		W0176	632	24		36-11-41	ALL
	A3	UNUSED						ALL
	B1		W0176	04K	22		52-11-12	050-099, 150-199
	B1		W0176	04K	20		52-11-12	275-299
	B2		W0176	04L	22		52-11-12	050-099, 150-199
	B2		W0176	04L	20		52-11-12	275-299
	B3	UNUSED						ALL
	C1		W0176	639	24		21-58-12	ALL
	C2		W0176	638	24		21-58-12	ALL
	C3		W0176	89A	24		21-58-12	ALL
	D1	UNUSED						ALL
	D2	UNUSED						ALL
	D3	UNUSED						ALL
	X1		W0176	667	24		32-09-11	ALL
	X2		W0176	668	24		32-09-11	ALL
D02888		P005-00/ /		PLUG-P5				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W0066	05C	22		33-16-17	ALL
	4		W0066	05D	22		33-16-17	ALL
	5		W0066	05E	22		30-31-11	ALL
	6		W0066	05F	22		30-32-11	ALL
	7		W0066	05G	22		30-31-13	ALL
	8		W0066	05H	22		30-33-11	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D02800
Page 21
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02888		P005-00/ /		PLUG-P5 (continued)				ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	DED		W0066	05CZ			33-16-17	ALL
	DED		W0066	05DZ			33-16-17	ALL
D02889		P008-00/ /		PLUG				275-278
D02889		SHELF/E02/05		RELAY SOCKET-E2-5				277-278
D02889		E002-05/ /		PLUG				280-299
	1	UNUSED						275-299
	2		W0139	691	20		23-22-12	275-299
	3		W0139	690	22		23-22-12	275-299
	4		W0139	687	22		23-22-12	275-299
	5		W0139	688	22		23-22-12	275-299
	6	UNUSED						275-299
	7		W0139	689	20		23-22-12	275-299
	8	UNUSED						275-299
	9	UNUSED						275-299
	10	UNUSED						275-299
	11	UNUSED						275-299
	12	UNUSED						275-299
	13	UNUSED						275-299
	14	UNUSED						275-299
	15	UNUSED						275-299
	16	UNUSED						275-299
	17	UNUSED						275-299
	18	UNUSED						275-299
	19	UNUSED						275-299
	20	UNUSED						275-299
	21	UNUSED						275-299
	22	UNUSED						275-299
	23	UNUSED						275-299
	24	UNUSED						275-299
	25	UNUSED						275-299
	26	UNUSED						275-299
	27	UNUSED						275-299
	28	UNUSED						275-299
	29	UNUSED						275-299
	30	UNUSED						275-299
	31	UNUSED						275-299

HOOKUP LIST

D280T132

91-21-51

Section D02800

Page 22

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02889		P008-00/ /		PLUG (continued)				275-278
D02889		SHELF/E02/05		RELAY SOCKET-E2-5 (continued)				277-278
D02889		E002-05/ /		PLUG (continued)				280-299
	32	UNUSED						275-299
	33	UNUSED						275-299
	34	UNUSED						275-299
	35	UNUSED						275-299
	36	UNUSED						275-299
	37	UNUSED						275-299
	38	UNUSED						275-299
	39	UNUSED						275-299
	40	UNUSED						275-299
	41	UNUSED						275-299
	42	UNUSED						275-299
	43	UNUSED						275-299
	44	UNUSED						275-299
	45	UNUSED						275-299
	46	UNUSED						275-299
	47	UNUSED						275-299
	48	UNUSED						275-299
	49	UNUSED						275-299
	50	UNUSED						275-299
	51	UNUSED						275-299
	52	UNUSED						275-299
	53	UNUSED						275-299
	54	UNUSED						275-299
	= C27	UNUSED						275-299
	DED		W0139	689Z			23-22-12	275-299
D02890		P005-00/ /		PLUG-P5				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W0070	863	22		33-16-17	ALL
	4		W0070	864	22		33-16-17	ALL
	5	UNUSED						ALL
	6		W0070	866	22		27-41-11	ALL
	7		W0070	867	22		27-61-12	ALL
	8		W0070	868	22		27-11-12	ALL
	9		W0070	869	22		27-41-11	ALL
	10		W0070	870	22		27-21-12	ALL
	11	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D02800
Page 23
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02890		P005-00/ /		PLUG-P5 (continued)				ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15		W0070	875	22		32-42-11	ALL
	DED		W0070	863Z			33-16-17	ALL
D02891		P008-00/ /		PLUG P8 PANEL				275-299
	1		W0851	214R	20		33-13-18	275-299
	2		W0851	214B	20		33-13-18	275-299
	3		W0851	046	22		33-16-18	275-299
	4		W0851	045	22		33-16-18	275-299
	5	UNUSED						275-299
	6		W0851	025	22		23-22-12	275-299
	7		W0851	044	20		23-22-12	275-299
	8		W0851	026	22		23-22-12	275-299
	9		W0851	043	22		23-22-12	275-299
	10	UNUSED						275-299
	11	UNUSED						275-299
	12	UNUSED						275-299
D02892		P019-00/ /		RELAY SOCKET-				ALL
	A1		W1104	785	20		33-27-11	050-099, 162-199
	A1	UNUSED						150-157, 275-299
	A2		W1104	786	20		33-27-11	050-099
	A2	UNUSED						150-157, 275-299
	A2		W1104	136	20		33-27-11	162-199
	A3	UNUSED						ALL
	B1		W1104	139	20		33-27-11	ALL
	B2		W1104	130	20		33-27-11	ALL
	B3	UNUSED						ALL
	X1		W1104	126	22		33-27-11	ALL
	X2		W1104	131	22		33-27-11	ALL
	DED		W1104	130Z			33-27-11	155-156, 166
	DED		W1104	139Z			33-27-11	155-156, 166
D02894		P019-00/ /		RELAY SOCKET-				ALL
	A1		W1104	783	20		33-27-11	050-099, 162-199
	A1	UNUSED						150-157, 275-299
	A2		W1104	784	20		33-27-11	050-099
	A2	UNUSED						150-157, 275-299

HOOKUP LIST

D280T132

91-21-51

Section D02800

Page 24

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02894		P019-00/ /		RELAY SOCKET- (continued)				ALL
	A2		W1104	133	20		33-27-11	162-199
	A3	UNUSED						ALL
	B1		W1104	138	20		33-27-11	ALL
	B2		W1104	127	20		33-27-11	ALL
	B3	UNUSED						ALL
	X1		W1104	125	22		33-27-11	ALL
	X2		W1104	129	22		33-27-11	ALL
	DED		W1104	127Z			33-27-11	155-156, 166
	DED		W1104	138Z			33-27-11	155-156, 166
D02896		P025-00/ /		RELAY SOCKET-				ALL
	A1		W1064	114	22		33-27-11	ALL
	A2		W1064	113	22		33-27-11	ALL
	A3	UNUSED						ALL
	B1		W1064	112	20		33-27-11	ALL
	B2		W1064	115	20		33-27-11	ALL
	B3	UNUSED						ALL
	C1	UNUSED						050-099
	C1		W1064	617	18		33-27-11	150-199
	C2	UNUSED						050-099
	C2		W1064	619	18		33-27-11	150-199
	C3	UNUSED						050-099, 150-199
	D1	UNUSED						050-099, 150-199
	D2	UNUSED						050-099, 150-199
	D3	UNUSED						050-099, 150-199
	X1		W1064	116	22		33-27-11	ALL
	X2		W1064	117	22		33-27-11	ALL
	DED		W1064	112Z			33-27-11	050-099
	DED		W1064	115Z			33-27-11	050-099
D02898A		//		PLUG-PART OF D02898				ALL
	1		W1120	202B	20		30-41-12	ALL
	2		W1120	202R	20		30-41-12	ALL
	3		W1120	011	20		30-41-12	ALL
	4		W1120	012	20		30-41-12	ALL
	5		W1120	013	20		30-41-12	ALL
	6		W1120	007	24		30-41-12	ALL
	7		W1120	005	24		30-41-12	ALL
	8		W1120	006	22		30-41-12	ALL
	9		W1120	004	22		30-41-12	ALL

HOOKUP LIST

D280T132

91-21-51

Section D02800

Page 25

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02898A		//		PLUG-PART OF D02898 (continued)				ALL
	10		W1120	008	24		30-41-12	ALL
	11		W1120	014	20		30-41-12	ALL
	12		W1120	003	24		30-41-12	ALL
	13		W1120	205B	24		30-41-12	ALL
	14		W1120	205R	24		30-41-12	ALL
	15	UNUSED						ALL
	16		W1120	016	20		30-41-12	ALL
	17		W1120	206B	24		30-41-12	ALL
	18		W1120	206R	24		30-41-12	ALL
	19		W1120	204B	24		30-41-12	ALL
	20		W1120	204R	24		30-41-12	ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
			W1120	010	20		30-41-12	ALL
			W1120	015	20		30-41-12	ALL
			W1120	017	20		30-41-12	ALL
			W1120	204Z			30-41-12	ALL
			W1120	205Z			30-41-12	ALL
			W1120	206Z			30-41-12	ALL
D02898B		//		PLUG-PART OF D02898				ALL
	1		W1120	201B	12		30-41-12	ALL
	2		W1120	201R	12		30-41-12	ALL
	3		W1120	002	12		30-41-12	ALL
	4		W1120	203B	12		30-41-12	ALL
	5		W1120	203R	12		30-41-12	ALL
	6		W1120	001	12		30-41-12	ALL
	7	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D02800

Page 26 End

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02904		P037-00/ /		RELAY SOCKET-				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W0192	640	24		31-51-21	ALL
	5		W0192	639	20		31-51-21	ALL
	6		W0192	591	24		32-09-12	ALL
	7		W0192	641	20		31-51-33	ALL
	8		W0192	642	24		31-51-33	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12		W0192	15A	24		32-09-12	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
D02910		P036-00/ /		RELAY SOCKET-				ALL
	A1	UNUSED						ALL
	A2	UNUSED						ALL
	A3	UNUSED						ALL
	B1	UNUSED						ALL
	B2		W0176	089	24		21-58-16	ALL
	B3		W0176	090	20		21-58-16	ALL
	C1	UNUSED						ALL
	C2		W0176	76P	20		28-31-12	050-099, 155-199, 277-299
	C2	UNUSED						150-154, 275-276
	C3		W0176	76Q	20		28-31-12	050-099, 155-199, 277-299
	C3	UNUSED						150-154, 275-276
	D1		W0176	683	22		73-21-19	ALL
	D2		W0176	680	22		73-21-19	ALL
	D3		W0176	08D	20		73-21-19	ALL
	X1		W0176	674	24		32-09-11	ALL
	X2		W0176	675	24		32-09-11	ALL
	DED		W0176	674Z			32-09-11	ALL
	DED		W0176	675Z			32-09-11	ALL
	DED		W0176	76PZ			28-31-12	050-099, 155-199, 277-299
	DED		W0176	76QZ			28-31-12	050-099, 155-199, 277-299
D02912		P036-00/ /		RELAY SOCKET-				ALL
	1		W0176	618	20		27-09-12	ALL
	2	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D02900
Page 1
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02912		P036-00/ /		RELAY SOCKET- (continued)				ALL
	3	UNUSED						ALL
	4		W0176	161	20		23-12-11	ALL
	5		W0176	159	24		23-12-11	ALL
	6		W0176	676	24		32-09-11	ALL
	7		W0176	012	24		32-42-12	ALL
	8	UNUSED						ALL
	9		W0176	27A	22		21-66-11	050-099, 162-199
	9		W0176	27A	22		21-66-41	150, 152-157
	9	UNUSED						151, 275-299
	10	UNUSED						ALL
	11		W0176	28A	20		21-66-11	050-099, 162-199
	11		W0176	28A	20		21-66-41	150, 152-157
	11	UNUSED						151, 275-299
	12		W0176	677	24		32-09-11	ALL
	13		W0176	752	22		27-09-12	ALL
	14		W0176	011	24		32-42-12	ALL
	DED		W0176	752Z			27-09-12	ALL
D02913		383/229/L003		PLUG- COAXIAL				280-299
	= A1		W1897	01CX			23-32-34	280-299
	= C1		W1897	01CO			23-32-34	280-299
D02914		P036-00/ /		RELAY SOCKET-				ALL
	1		W0176	712	20		27-32-11	ALL
	2	UNUSED						ALL
	3		W0176	10Q	24		31-31-21	ALL
	4	UNUSED						ALL
	5		W0176	10R	24		31-31-21	ALL
	6		W0176	678	24		32-09-11	ALL
	7		W0176	73K	22		34-45-13	050-099, 150-199, 277-299
	7	UNUSED						275-276
	8		W0176	74L	20		34-45-13	050-099, 150-199, 277-299
	8	UNUSED						275-276
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12		W0176	119	24		32-09-11	ALL
	13		W0176	711	24		27-32-11	ALL
	14	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D02900

Page 2

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02915		401/310/R 25		PLUG				280-299
	1		W1897	001	20		23-32-34	280-299
	2		W1897	002	20		23-32-34	280-299
	3	UNUSED						280-299
	4	UNUSED						280-299
	5	UNUSED						280-299
	6		W1897	004	24		23-32-34	280-299
	7	UNUSED						280-299
	8	UNUSED						280-299
	9		W1897	005	22		23-32-34	280-299
	10		W1897	003	22		23-32-34	280-299
	=A1		W1897	01CX			23-32-34	280-299
	=C1		W1897	01CO			23-32-34	280-299
D02916A		//		PLUG PART OF D02916				ALL
	1		W1098	010	20		30-41-11	ALL
	2		W1098	009	20		30-41-11	ALL
	3		W1098	012	20		30-41-11	ALL
	4		W1098	013	20		30-41-11	ALL
	5		W1098	014	20		30-41-11	ALL
	6		W1098	006	24		30-41-11	ALL
	7		W1098	004	24		30-41-11	ALL
	8		W1098	022	22		30-41-11	ALL
	9		W1098	021	22		30-41-11	ALL
	10		W1098	007	24		30-41-11	ALL
	11		W1098	015	20		30-41-11	ALL
	12		W1098	002	24		30-41-11	ALL
	13		W1098	204B	24		30-41-11	ALL
	14		W1098	204R	24		30-41-11	ALL
	15	UNUSED						ALL
	16		W1098	011	20		30-41-11	ALL
	17		W1098	203B	24		30-41-11	ALL
	18		W1098	203R	24		30-41-11	ALL
	19		W1098	205B	24		30-41-11	ALL
	20		W1098	205R	24		30-41-11	ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D02900
Page 3
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02916A		//		PLUG PART OF D02916 (continued)				ALL
			W1098	016	20		30-41-11	ALL
			W1098	017	20		30-41-11	ALL
			W1098	018	20		30-41-11	ALL
			W1098	203Z			30-41-11	ALL
			W1098	204Z			30-41-11	ALL
			W1098	205Z			30-41-11	ALL
D02916B		//		PLUG PART OF D02916				ALL
	1		W1098	207B	12		30-41-11	ALL
	2		W1098	207R	12		30-41-11	ALL
	3		W1098	020	12		30-41-11	ALL
	4		W1098	206B	12		30-41-11	ALL
	5		W1098	206R	12		30-41-11	ALL
	6		W1098	019	12		30-41-11	ALL
	7	UNUSED						ALL
D02917		383/229/L003		PLUG				280-299
	1		W1897	001	20		23-32-34	280-299
	2		W1897	003	22		23-32-34	280-299
	3		W1897	006	22		23-32-34	280-299
	4		W1897	002	20		23-32-34	280-299
	5		W1897	007	22		23-32-34	280-299
	6		W1897	008	22		23-32-34	280-299
	7		W1897	009	22		23-32-34	280-299
	8		W1897	004	24		23-32-34	280-299
	9	UNUSED						280-299
	10	UNUSED						280-299
	11	UNUSED						280-299
	12	UNUSED						280-299
D02918		P037-00/ /		RELAY SOCKET-				ALL
	A1		W0192	578	18		27-81-21	ALL
	A2		W0192	576	18		27-81-21	ALL
	A3		W0192	506	20		27-81-21	ALL
	B1		W0192	14N	20		27-81-21	ALL
	B2		W0192	14H	22		27-81-21	ALL
	B3	UNUSED						ALL
	X1		W0192	577	22		27-81-21	ALL
	X2		W0192	575	22		27-81-21	ALL

HOOKUP LIST

D280T132

91-21-51

Section D02900

Page 4

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02920		P036-00/ /		RELAY SOCKET-				ALL
	1	UNUSED						ALL
	2		W0184	729	20		28-26-11	ALL
	3		W0184	562	24		28-26-11	ALL
	4		W0184	567	20		28-26-11	ALL
	5		W0184	566	20		28-26-11	ALL
	6	UNUSED						ALL
	7		W0184	563	20		28-26-11	ALL
	8	UNUSED						ALL
D02922		P036-00/ /		RELAY SOCKET-				ALL
	1	UNUSED						ALL
	2		W0184	545	20		28-26-11	ALL
	3		W0184	540	24		28-26-11	ALL
	4		W0184	544	20		28-26-11	ALL
	5		W0184	543	20		28-26-11	ALL
	6	UNUSED						ALL
	7		W0184	539	20		28-26-11	ALL
	8	UNUSED						ALL
D02926		P036-00/ /		RELAY SOCKET-				ALL
	A1		W0184	564	20		28-26-11	ALL
	A2		W0184	570	20		28-26-11	ALL
	A3		W0184	565	20		28-26-11	ALL
	B1		W0184	566	20		28-26-11	ALL
	B2		W0184	571	20		28-26-11	ALL
	B3		W0184	567	20		28-26-11	ALL
	X1		W0184	569	20		28-26-11	ALL
	X2		W0184	568	20		28-26-11	ALL
D02928		P036-00/ /		RELAY SOCKET-				ALL
	A1		W0184	549	20		28-26-11	ALL
	A2		W0184	552	20		28-26-11	ALL
	A3		W0184	542	20		28-26-11	ALL
	B1		W0184	543	20		28-26-11	ALL
	B2		W0184	553	20		28-26-11	ALL
	B3		W0184	544	20		28-26-11	ALL
	X1		W0184	551	20		28-26-11	ALL
	X2		W0184	550	20		28-26-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D02900

Page 5

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02932		0329/286/L005		PLUG-				050-099
D02932		0320/282/L006		PLUG-				150-199
D02932		0360/286/L045		PLUG-				275-299
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W1228	042	22		33-22-11	050-099
	5		W1228	042	20		33-22-11	150-199, 275-299
	6	UNUSED						ALL
	7		W1228	043	20		33-22-11	ALL
	8		W1228	044	20		33-22-11	ALL
	9		W1228	038	22		33-22-11	ALL
	10		W1228	039	22		33-22-11	ALL
	11		W1228	041	22		33-22-11	ALL
	12		W1228	040	22		33-22-11	ALL
	DED		W1228	042Z			33-22-11	155-156, 166
	DED		W1228	043Z			33-22-11	155-156, 166
D02938		0710/288/R056		PLUG-				050-099
D02938		0754/288/R056		PLUG-				150-165, 167-199, 275-278
D02938		0754/295/R056		PLUG-				166
D02938		0757/289/R056		PLUG-				280-299
	1	UNUSED						ALL
	2		W0814	115	22		33-21-33	ALL
	3		W0814	116	22		33-21-33	ALL
	4	UNUSED						ALL
	5		W0814	086	20		33-21-33	ALL
	6	UNUSED						ALL
	7		W0814	112	20		33-21-33	ALL
	8		W0814	111	20		33-21-33	ALL
	9		W0814	121	22		33-21-33	ALL
	10		W0814	122	22		33-21-33	ALL
	11		W0814	123	22		33-21-33	ALL
	12		W0814	124	22		33-21-33	ALL
	DED		W0814	086Z			33-21-33	155-156, 166
	DED		W0814	112Z			33-21-33	155-156, 166

HOOKUP LIST

D280T132

91-21-51

Section D02900

Page 6

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02940		0798/290/L056		PLUG-				050-099
D02940		0842/288/L056		PLUG-				150-165, 167-199
D02940		0842/295/L056		PLUG-				166
D02940		0793/290/L056		PLUG-				275-299
	1	UNUSED						ALL
	2		W0812	033	22		33-21-32	ALL
	3		W0812	034	22		33-21-32	ALL
	4	UNUSED						ALL
	5		W0812	023	20		33-21-32	ALL
	6	UNUSED						ALL
	7		W0812	024	20		33-21-32	ALL
	8		W0812	025	20		33-21-32	ALL
	9		W0812	039	22		33-21-32	ALL
	10		W0812	040	22		33-21-32	ALL
	11		W0812	041	22		33-21-32	ALL
	12		W0812	042	22		33-21-32	ALL
	DED		W0812	023Z			33-21-32	155-156, 166
	DED		W0812	024Z			33-21-32	155-156, 166
D02942		0879/290/L056		PLUG-				050-099
D02942		0923/288/L056		PLUG-				150-165, 167-199
D02942		0923/295/L056		PLUG-				166
D02942		0961/290/L056		PLUG-				275-299
	1	UNUSED						ALL
	2		W0812	049	22		33-21-34	ALL
	3		W0812	050	22		33-21-34	ALL
	4	UNUSED						ALL
	5		W0812	043	22		33-21-34	050-099
	5	FM	W0812	043	16		33-21-34	150-199, 275-299
	6	UNUSED						ALL
	7		W0812	044	20		33-21-34	050-099
	7	FM	W0812	044	16		33-21-34	150-199, 275-299
	8		W0812	045	20		33-21-34	050-099
	8	FM	W0812	045	16		33-21-34	150-199, 275-299
	9		W0812	055	22		33-21-34	050-099
	9		W0812	801	22		33-21-34	150-199, 275-299
	10		W0812	056	22		33-21-34	050-099
	10		W0812	802	22		33-21-34	150-199, 275-299
	11		W0812	057	22		33-21-34	ALL
	12		W0812	058	22		33-21-34	ALL
	DED		W0812	043Z			33-21-34	155-156, 166

HOOKUP LIST

D280T132

91-21-51

Section D02900

Page 7

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02942		0879/290/L056		PLUG- (continued)				050-099
D02942		0923/288/L056		PLUG- (continued)				150-165, 167-199
D02942		0923/295/L056		PLUG- (continued)				166
D02942		0961/290/L056		PLUG- (continued)				275-299
	DED		W0812	044Z			33-21-34	155-156, 166
D02944		1011/290/L056		PLUG-				050-099
D02944		1011/288/R056		PLUG-				150-165, 167-199
D02944		1011/295/R056		PLUG-				166
D02944		0967/290/L056		PLUG-				275-299
	1	UNUSED						ALL
	2		W0812	059	22		33-21-34	050-099, 275-299
	2		W0814	707	22		33-21-35	150-199
	3		W0812	060	22		33-21-34	050-099, 275-299
	3		W0814	708	22		33-21-35	150-199
	4	UNUSED						ALL
	5		W0812	046	22		33-21-34	050-099
	5	FM	W0814	709	16		33-21-35	150-199
	5		W0812	046	20		33-21-34	275-299
	6	UNUSED						ALL
	7		W0812	047	20		33-21-34	050-099, 275-299
	7	FM	W0814	710	16		33-21-35	150-199
	8		W0812	048	20		33-21-34	050-099, 275-299
	8	FM	W0814	711	16		33-21-35	150-199
	9		W0812	065	22		33-21-34	050-099
	9		W0814	712	22		33-21-35	150-199
	9		W0812	055	22		33-21-34	275-299
	10		W0812	066	22		33-21-34	050-099
	10		W0814	713	22		33-21-35	150-199
	10		W0812	056	22		33-21-34	275-299
	11		W0812	067	22		33-21-34	050-099, 275-299
	11		W0814	714	22		33-21-35	150-199
	12		W0812	068	22		33-21-34	050-099, 275-299
	12		W0814	715	22		33-21-35	150-199
	DED		W0814	709Z			33-21-35	155-156, 166
	DED		W0814	710Z			33-21-35	155-156, 166
D02946		0446/290/L065		PLUG-				050-099, 150-165, 167-199, 275-299
D02946		0446/295/L056		PLUG-				166
	1	UNUSED						ALL
	2	UNUSED						050-099, 150-199

HOOKUP LIST

D280T132

91-21-51

Section D02900

Page 8

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02946		0446/290/L065		PLUG- (continued)				050-099, 150-165, 167-199, 275-299
D02946		0446/295/L056		PLUG- (continued)				166
	2		W0812	821	22		33-21-32	275-299
	3	UNUSED						050-099, 150-199
	3		W0812	822	22		33-21-32	275-299
	4	UNUSED						ALL
	5		W0812	079	22		33-21-32	050-099
	5		W0812	079	20		33-21-32	150-199, 275-299
	6	UNUSED						ALL
	7		W0812	081	20		33-21-32	ALL
	8		W0812	080	20		33-21-32	ALL
	9		W0812	093	22		33-21-32	ALL
	10		W0812	094	22		33-21-32	ALL
	11		W0812	095	22		33-21-32	ALL
	12		W0812	096	22		33-21-32	ALL
	DED		W0812	079Z			33-21-32	155-156, 166
	DED		W0812	081Z			33-21-32	155-156, 166
D02948		0446/288/R056		PLUG-				050-099, 275-278
D02948		528/288/R056		PLUG-				150-165
D02948		446/295/R056		PLUG-				166
D02948		446/288/R056		PLUG-				167-199
D02948		0448/289/R056		PLUG-				280-299
	1	UNUSED						ALL
	2		W0814	101	22		33-21-33	050-099, 150-157, 275-299
	2	UNUSED						162-199
	3		W0814	102	22		33-21-33	050-099, 150-157, 275-299
	3	UNUSED						162-199
	4	UNUSED						ALL
	5		W0814	088	20		33-21-33	ALL
	6	UNUSED						ALL
	7		W0814	090	20		33-21-33	ALL
	8		W0814	089	20		33-21-33	050-099, 153-199, 275-299
	8	UNUSED						150-152
	9		W0814	107	22		33-21-33	050-099, 150-157, 275-299
	9		W0814	101	22		33-21-33	162-199
	10		W0814	108	22		33-21-33	050-099, 150-157, 275-299
	10		W0814	102	22		33-21-33	162-199
	11		W0814	109	22		33-21-33	050-099, 150-163, 275-299
	11		W0814	103	22		33-21-33	164-199
	12		W0814	110	22		33-21-33	050-099, 150-163, 275-299

HOOKUP LIST
D280T132

91-21-51
Section D02900
Page 9
Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02948		0446/288/R056		PLUG- (continued)				050-099, 275-278
D02948		528/288/R056		PLUG- (continued)				150-165
D02948		446/295/R056		PLUG- (continued)				166
D02948		446/288/R056		PLUG- (continued)				167-199
D02948		0448/289/R056		PLUG- (continued)				280-299
	12		W0814	104	22		33-21-33	164-199
	DED		W0814	088Z			33-21-33	155-156, 166
	DED		W0814	090Z			33-21-33	155-156, 166
D02950		0534/288/R056		PLUG-				050-099, 150-165, 167-199, 275-278
D02950		0534/295/R056		PLUG-				166
D02950		0537/289/R056		PLUG-				280-299
	1	UNUSED						ALL
	2		W0814	079	22		33-21-33	ALL
	3		W0814	080	22		33-21-33	ALL
	4	UNUSED						ALL
	5		W0814	074	20		33-21-33	ALL
	6	UNUSED						ALL
	7		W0814	077	20		33-21-33	ALL
	8		W0814	078	20		33-21-33	ALL
	9		W0814	171	22		33-21-33	ALL
	10		W0814	172	22		33-21-33	ALL
	11		W0814	173	22		33-21-33	ALL
	12		W0814	174	22		33-21-33	ALL
	DED		W0814	074Z			33-21-33	155-156, 166
	DED		W0814	077Z			33-21-33	155-156, 166
D02960		0135/181/L013		PLUG-				ALL
	1		W0584	013	20		21-45-11	ALL
	2		W0584	014	20		21-45-11	ALL
	3		W0584	015	20		21-45-11	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
D02962		0213/195/L063		PLUG-				ALL
	1		W0584	010	20		21-45-11	ALL
	2		W0584	011	20		21-45-11	ALL
	3		W0584	012	20		21-45-11	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D02900

Page 10

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02964		0135/185/R013		PLUG-				ALL
	1		W0586	013	20		21-45-11	ALL
	2		W0586	014	20		21-45-11	ALL
	3		W0586	015	20		21-45-11	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
D02966		0166/182/R039		PLUG-				ALL
	1		W0586	010	20		21-45-11	ALL
	2		W0586	011	20		21-45-11	ALL
	3		W0586	012	20		21-45-11	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
D02968		0289/225/R080		PLUG-				050-099
D02968		289/275/R080		PLUG-				150-199
D02968		284/225/R085		PLUG-				275-299
	1	UNUSED						ALL
	2		W1248	003	20		25-63-11	ALL
	3		W1248	004	20		25-63-11	ALL
	4		W1248	005	20		25-63-11	ALL
	5		W1248	006	20		25-63-11	ALL
D02970		0284/253/L053		PLUG-				050-099
D02970		0291/275/L080		PLUG-				150-199
D02970		0291/225/L085		PLUG-				275-299
	1	UNUSED						ALL
	2		W1248	009	20		25-63-11	ALL
	3		W1248	010	20		25-63-11	ALL
	4		W1248	011	20		25-63-11	ALL
	5		W1248	012	20		25-63-11	ALL
D02972		0834/260/R018		PLUG-				050-099
D02972		0917/260/L018		PLUG-				150-199
D02972		0801/260/L018		PLUG-				275-299
	1	UNUSED						ALL
	2		W1088	002	20		25-63-11	ALL
	3		W1088	003	20		25-63-11	ALL
	4		W1088	004	20		25-63-11	ALL
	5		W1088	005	20		25-63-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D02900

Page 11

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02974		1540/253/R054		PLUG-				050-099
D02974		1541/253/R080		PLUG-				150-199
D02974		1541/253/R054		PLUG-				275-299
	1	UNUSED						ALL
	2		W1254	003	20		25-63-11	ALL
	3		W1254	004	20		25-63-11	ALL
	4		W1254	005	20		25-63-11	ALL
	5		W1254	006	20		25-63-11	ALL
D02976		1542/253/L054		PLUG-				050-099
D02976		1541/253/L080		PLUG-				150-199, 275-299
	1	UNUSED						ALL
	2		W1254	007	20		25-63-11	ALL
	3		W1254	008	20		25-63-11	ALL
	4		W1254	009	20		25-63-11	ALL
	5		W1254	010	20		25-63-11	ALL
D02978		0772/294/L020		PLUG-				050-099
D02978		0911/295/L020		PLUG-				150-199
D02978		0879/294/L020		PLUG-				275-299
	1	UNUSED						ALL
	2		W0822	108	20		33-21-13	ALL
	3		W0822	109	20		33-21-13	ALL
	4	UNUSED						ALL
	5		W0822	110	20		33-21-13	ALL
	6	UNUSED						ALL
	7		W0822	111	20		33-21-13	ALL
	8		W0822	112	20		33-21-13	ALL
	9		W0822	113	20		33-21-13	ALL
	10		W0822	114	20		33-21-13	ALL
	11		W0822	115	20		33-21-13	ALL
	12		W0822	116	20		33-21-13	ALL
D02984		1049/280/L005		RCPT-				ALL
	1		W1168	111	20		35-21-14	050-099, 276-299
	1		W1168	006	20		35-21-14	150-199, 275
	2		W1168	112	20		35-21-14	050-099, 276-299
	2		W1168	007	20		35-21-14	150-199, 275

HOOKUP LIST

D280T132

91-21-51

Section D02900

Page 12

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02985		P033-00/ /		RELAY SOCKET -				ALL
	1		W0142	10N	20		28-22-31	ALL
	2	UNUSED						ALL
	3		W0142	10J	20		28-22-31	ALL
	4	UNUSED						ALL
	5		W0142	10M	22		28-22-31	ALL
	6		W0142	10G	22		28-22-31	ALL
	7		W0142	10L	22		28-22-31	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12		W0142	10R	20		28-22-31	ALL
	13		W0142	10K	22		28-22-31	ALL
	14		W0142	10D	22		28-22-31	ALL
	DED		W0142	10DZ			28-22-31	ALL
	DED		W0142	10GZ			28-22-31	ALL
	DED		W0142	10JZ			28-22-31	ALL
	DED		W0142	10KZ			28-22-31	ALL
	DED		W0142	10LZ			28-22-31	ALL
	DED		W0142	10MZ			28-22-31	ALL
	DED		W0142	10NZ			28-22-31	ALL
	DED		W0142	10RZ			28-22-31	ALL
D02986		1080/280/L005		RCPT-				ALL
	1		W1168	121	20		35-21-14	050-099, 276-299
	1		W1168	009	20		35-21-14	150-199, 275
	2		W1168	122	20		35-21-14	050-099, 276-299
	2		W1168	010	20		35-21-14	150-199, 275
D02987		P033-00/ /		RELAY SOCKET -				ALL
	1		W0144	657	20		28-22-31	ALL
	2	UNUSED						ALL
	3		W0144	652	20		28-22-31	ALL
	4	UNUSED						ALL
	5		W0144	656	22		28-22-31	ALL
	6		W0144	658	22		28-22-31	ALL
	7		W0144	655	22		28-22-31	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D02900
Page 13
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02987		P033-00/ /		RELAY SOCKET - (continued)				ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12		W0144	659	20		28-22-31	ALL
	13		W0144	654	22		28-22-31	ALL
	14		W0144	649	22		28-22-31	ALL
	DED		W0144	649Z			28-22-31	ALL
	DED		W0144	652Z			28-22-31	ALL
	DED		W0144	654Z			28-22-31	ALL
	DED		W0144	655Z			28-22-31	ALL
	DED		W0144	656Z			28-22-31	ALL
	DED		W0144	657Z			28-22-31	ALL
	DED		W0144	658Z			28-22-31	ALL
	DED		W0144	659Z			28-22-31	ALL
D02988		1106/280/L005		RCPT-				ALL
	1		W1168	131	20		35-21-14	050-099, 276-299
	1		W1168	012	20		35-21-14	150-199, 275
	2		W1168	132	20		35-21-14	050-099, 276-299
	2		W1168	013	20		35-21-14	150-199, 275
D02990		1133/280/L005		RCPT-				ALL
	1		W1168	141	20		35-21-14	050-099, 276-299
	1		W1168	015	20		35-21-14	150-199, 275
	2		W1168	142	20		35-21-14	050-099, 276-299
	2		W1168	016	20		35-21-14	150-199, 275
D02992		1157/280/L005		RCPT-				ALL
	1		W1170	101	20		35-21-14	050-099, 276-299
	1		W1170	002	20		35-21-14	150-199, 275
	2		W1170	102	20		35-21-14	050-099, 276-299
	2		W1170	003	20		35-21-14	150-199, 275
D02994		1181/280/L005		RCPT-				ALL
	1		W1170	111	20		35-21-14	050-099, 276-299
	1		W1170	005	20		35-21-14	150-199, 275
	2		W1170	112	20		35-21-14	050-099, 276-299
	2		W1170	006	20		35-21-14	150-199, 275
D02995		1197+33/320/L010		PLUG				167-199
	= A1		W1013	01CX			23-25-11	167-199

HOOKUP LIST

D280T132

91-21-51

Section D02900

Page 14

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02995		1197+33/320/L010		PLUG (continued)				167-199
	= C1		W1013	01CO			23-25-11	167-199
D02996		1211/280/L005		RCPT-				050-099
D02996		1197+015/280/L005		RCPT-				150-199, 275-299
	1		W1170	121	20		35-21-14	050-099, 276-299
	1		W1170	008	20		35-21-14	150-199, 275
	2		W1170	122	20		35-21-14	050-099, 276-299
	2		W1170	009	20		35-21-14	150-199, 275
D02998		1237/280/L005		RCPT-				050-099
D02998		1197+041/280/L005		RCPT-				150-199, 275-299
	1		W1170	131	20		35-21-14	050-099, 276-299
	1		W1170	011	20		35-21-14	150-199, 275
	2		W1170	132	20		35-21-14	050-099, 276-299
	2		W1170	012	20		35-21-14	150-199, 275

HOOKUP LIST
D280T132

91-21-51
Section D02900
Page 15 End
Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03000		1264/280/L005		RCPT-				050-099
D03000		1197+068/280/L005		RCPT-				150-199, 275-299
	1		W1170	141	20		35-21-14	050-099, 276-299
	1		W1170	013	20		35-21-14	150-199, 275
	2		W1170	142	20		35-21-14	050-099, 276-299
	2		W1170	014	20		35-21-14	150-199, 275
D03002		1289/280/L005		RCPT-				ALL
	1		W1172	101	20		35-21-14	050-099, 276-299
	1		W1172	002	20		35-21-14	150-199, 275
	2		W1172	102	20		35-21-14	050-099, 276-299
	2		W1172	003	20		35-21-14	150-199, 275
D03004		1313/280/L005		RCPT-				ALL
	1		W1172	111	20		35-21-14	050-099, 276-299
	1		W1172	006	20		35-21-14	150-199, 275
	2		W1172	112	20		35-21-14	050-099, 276-299
	2		W1172	007	20		35-21-14	150-199, 275
D03006		1344/280/L005		RCPT-				ALL
	1		W1172	121	20		35-21-14	050-099, 276-299
	1		W1172	009	20		35-21-14	150-199, 275
	2		W1172	122	20		35-21-14	050-099, 276-299
	2		W1172	010	20		35-21-14	150-199, 275
D03008		1370/280/L000		RCPT-				ALL
	1		W1172	131	20		35-21-14	050-099, 276-299
	1		W1172	012	20		35-21-14	150-199, 275
	2		W1172	132	20		35-21-14	050-099, 276-299
	2		W1172	013	20		35-21-14	150-199, 275
D03010		1397/280/L005		RCPT-				ALL
	1		W1172	141	20		35-21-14	050-099, 276-299
	1		W1172	015	20		35-21-14	150-199, 275
	2		W1172	142	20		35-21-14	050-099, 276-299
	2		W1172	016	20		35-21-14	150-199, 275
D03012		1421/280/L005		RCPT-				ALL
	1		W1174	101	20		35-21-14	050-099, 276-299
	1		W1174	007	20		35-21-14	150-199, 275

HOOKUP LIST

D280T132

91-21-51

Section D03000

Page 1

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03012		1421/280/L005		RCPT- (continued)				ALL
	2		W1174	102	20		35-21-14	050-099, 276-299
	2		W1174	008	20		35-21-14	150-199, 275
D03014		1454/280/L005		RCPT-				050-099
D03014		1450/280/L005		RCPT-				150-199, 275-299
	1		W1174	111	20		35-21-14	050-099, 276-299
	1		W1174	002	20		35-21-14	150-199, 275
	2		W1174	112	20		35-21-14	050-099, 276-299
	2		W1174	003	20		35-21-14	150-199, 275
D03016		1043/270/R073		RCPT-				275-299
	1		W0728	003	20		35-21-13	275-299
	2		W0728	004	20		35-21-13	275-299
D03018		1047/270/R073		RCPT-				050-099
D03018		1071/270/R073		RCPT-				150-199, 275-299
	1		W0728	006	20		35-21-13	ALL
	2		W0728	007	20		35-21-13	ALL
D03020		1097/270/R073		RCPT-				050-099
D03020		1101/270/R073		RCPT-				150-199, 275-299
	1		W0728	009	20		35-21-13	ALL
	2		W0728	010	20		35-21-13	ALL
D03022		1116/270/R073		RCPT-				050-099
D03022		1131/270/R073		RCPT-				150-199, 275-299
	1		W0728	011	20		35-21-13	ALL
	2		W0728	012	20		35-21-13	ALL
D03024		1146/270/R073		RCPT-				050-099
D03024		1159/270/R073		RCPT-				150-199, 275-299
	1		W0728	014	20		35-21-13	ALL
	2		W0728	015	20		35-21-13	ALL
D03026		1175/270/R073		RCPT-				050-099
D03026		1189/270/R073		RCPT-				150-199, 275-299
	1		W0728	017	20		35-21-13	ALL
	2		W0728	018	20		35-21-13	ALL

HOOKUP LIST

D280T132

91-21-51

Section D03000

Page 2

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03028		1204/270/R073		RCPT-				ALL
	1		W0728	020	20		35-21-13	ALL
	2		W0728	021	20		35-21-13	ALL
D03030		1234/270/R073		RCPT-				ALL
	1		W0728	023	20		35-21-13	ALL
	2		W0728	024	20		35-21-13	ALL
D03032		1263/270/R073		RCPT-				ALL
	1		W0728	027	20		35-21-13	ALL
	2		W0728	028	20		35-21-13	ALL
D03034		1292/270/R073		RCPT-				ALL
	1		W0728	030	20		35-21-13	ALL
	2		W0728	031	20		35-21-13	ALL
D03036		1322/270/R073		RCPT-				ALL
	1		W0728	033	20		35-21-13	ALL
	2		W0728	034	20		35-21-13	ALL
D03038		1351/270/R073		RCPT-				ALL
	1		W0728	035	20		35-21-13	ALL
	2		W0728	036	20		35-21-13	ALL
D03040		1380/270/R073		RCPT-				ALL
	1		W0728	038	20		35-21-13	ALL
	2		W0728	039	20		35-21-13	ALL
D03042		1410/270/R073		RCPT-				ALL
	1		W0728	041	20		35-21-13	ALL
	2		W0728	042	20		35-21-13	ALL
D03044		1428/270/R073		RCPT-				ALL
	1		W0728	044	20		35-21-13	ALL
	2		W0728	045	20		35-21-13	ALL
D03050A		//		PLUG-PART OF D03050				ALL
	A01		W0084	304B	22		21-51-22	ALL
	A02		W0084	304R	22		21-51-22	ALL
	A03		W0084	304Y	22		21-51-22	ALL

HOOKUP LIST

D280T132

91-21-51

Section D03000

Page 3

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03050A		//		PLUG-PART OF D03050 (continued)				ALL
	A04		W0084	202B	22		21-51-22	ALL
	A05		W0084	202R	22		21-51-22	ALL
	A06	UNUSED						ALL
	A07	UNUSED						ALL
	A08	UNUSED						ALL
	A09	UNUSED						ALL
	A10		W0084	301R	24		21-53-21	ALL
	A11		W0084	301B	24		21-53-21	ALL
	A12		W0084	301Y	24		21-53-21	ALL
	A13	UNUSED						ALL
	A14	UNUSED						ALL
	A15	UNUSED						ALL
	B01		W0084	306B	22		21-51-22	ALL
	B02		W0084	306R	22		21-51-22	ALL
	B03		W0084	306Y	22		21-51-22	ALL
	B04		W0084	204R	22		21-51-22	ALL
	B05		W0084	204B	22		21-51-22	ALL
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09	UNUSED						ALL
	B10		W0084	303R	24		21-53-21	ALL
	B11		W0084	303B	24		21-53-21	ALL
	B12		W0084	303Y	24		21-53-21	ALL
	B13	UNUSED						ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	C01		W0084	307B	22		21-51-22	ALL
	C02		W0084	307R	22		21-51-22	ALL
	C03		W0084	307Y	22		21-51-22	ALL
	C04		W0084	203R	22		21-51-22	ALL
	C05		W0084	203B	22		21-51-22	ALL
	C06	UNUSED						ALL
	C07	UNUSED						ALL
	C08	UNUSED						ALL
	C09	UNUSED						ALL
	C10		W0084	302R	24		21-53-21	ALL
	C11		W0084	302B	24		21-53-21	ALL
	C12		W0084	302Y	24		21-53-21	ALL
	C13	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D03000

Page 4

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03050A		//		PLUG-PART OF D03050 (continued)				ALL
	C14	UNUSED						ALL
	C15		W0084	118	22		21-51-22	ALL
	D01	UNUSED						ALL
	D02	UNUSED						ALL
	D03	UNUSED						ALL
	D04		W0084	201B	22		21-51-22	ALL
	D05		W0084	201R	22		21-51-22	ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	D08	UNUSED						ALL
	D09	UNUSED						ALL
	D10	UNUSED						ALL
	D11	UNUSED						ALL
	D12	UNUSED						ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15	UNUSED						ALL
D03050B		//		PLUG-PART OF D03050				ALL
	A01		W0084	225B	24		21-61-51	ALL
	A02		W0084	225R	24		21-61-51	ALL
	A03		W0084	226B	24		21-61-51	ALL
	A04		W0084	226R	24		21-61-51	ALL
	A05		W0084	227B	24		21-61-51	ALL
	A06		W0084	227R	24		21-61-51	ALL
	A07		W0084	224B	24		21-61-51	ALL
	A08		W0084	224R	24		21-61-51	ALL
	A09		W0084	305Y	24		21-51-22	ALL
	A10		W0084	305B	24		21-51-22	ALL
	A11		W0084	305R	24		21-51-22	ALL
	A12	UNUSED						ALL
	A13		W0084	003	24		21-53-21	ALL
	A14	UNUSED						ALL
	A15		W0084	002	24		21-53-21	ALL
	B01		W0084	232B	24		21-51-21	ALL
	B02		W0084	232R	24		21-51-21	ALL
	B03	UNUSED						050-099
	B03		W0084	125	24		21-51-21	150-199, 275-299
	B04	UNUSED						050-099
	B04		W0084	125	24		21-51-21	150-199, 275-299

HOOKUP LIST

D280T132

91-21-51

Section D03000

Page 5

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03050B		//		PLUG-PART OF D03050 (continued)				ALL
	B05		W0084	071	24		21-51-22	ALL
	B06		W0084	071	24		21-51-22	ALL
	B07		W0084	241B	24		21-61-51	ALL
	B08		W0084	241R	24		21-61-51	ALL
	B09		W0084	117	24		21-51-21	ALL
	B10	UNUSED						ALL
	B11	UNUSED						050-099
	B11		W0084	130	24		21-51-21	150-199, 275-299
	B12	UNUSED						050-099
	B12		W0084	131	24		21-51-21	150-199, 275-299
	B13		W0084	005	24		21-53-21	ALL
	B14	UNUSED						ALL
	B15		W0084	004	24		21-53-21	ALL
	C01		W0084	234B	22		21-51-22	ALL
	C02		W0084	234R	22		21-51-22	ALL
	C03		W0084	218R	24		21-61-51	ALL
	C04		W0084	218B	24		21-61-51	ALL
	C05		W0084	108	22		21-51-21	ALL
	C06	UNUSED						ALL
	C07		W0084	106	24		21-51-21	ALL
	C08	UNUSED						ALL
	C09		W0084	236R	24		21-51-22	ALL
	C10		W0084	236B	24		21-51-22	ALL
	C11	UNUSED						ALL
	C12	UNUSED						ALL
	C13		W0084	007	24		21-53-21	ALL
	C14	UNUSED						ALL
	C15		W0084	006	24		21-53-21	ALL
	D01		W0084	233B	24		21-51-22	ALL
	D02		W0084	233R	24		21-51-22	ALL
	D03		W0084	217R	24		21-61-51	ALL
	D04		W0084	217B	24		21-61-51	ALL
	D05		W0084	205B	24		21-51-22	ALL
	D06		W0084	205R	24		21-51-22	ALL
	D07		W0084	105	24		21-53-21	ALL
	D08	UNUSED						ALL
	D09		W0084	235R	24		21-51-22	ALL
	D10		W0084	235B	24		21-51-22	ALL
	D11	UNUSED						ALL
	D12	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D03000

Page 6

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03050B		//		PLUG-PART OF D03050 (continued)				ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15	UNUSED						ALL
D03050C		//		PLUG- PART OF D03050				ALL
	1	UNUSED						ALL
	2		W0084	001	18		21-53-21	ALL
	3		W0084	104	18		21-53-21	ALL
	4		W0084	008	18		21-53-21	ALL
	5	UNUSED						ALL
	= C1	UNUSED						ALL
	= C5	UNUSED						ALL
	DED		W0084	001Z			21-53-21	ALL
D03056		AW0601/ /		PLUG-				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W1056	401B	20		28-21-11	ALL
	5		W1056	401G	20		28-21-11	ALL
	6		W1056	401R	20		28-21-11	ALL
	7		W1056	401Y	20		28-21-11	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10		W1056	061	18		28-21-11	ALL
D03058		0190/165/R033		PLUG-				ALL
	1		W0586	016	20		21-58-16	ALL
	2		W0586	017	24		21-58-16	ALL
	3		W0586	018	24		21-58-16	ALL
	4		W0586	019	24		21-58-16	ALL
	5		W0586	020	24		21-58-16	ALL
	6		W0586	021	20		21-58-16	ALL
	7		W0586	022	20		21-58-16	ALL
	8		W0586	023	20		21-58-16	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D03000

Page 7

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03060		0390/160/L080		PLUG-				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W0984	003	24		21-58-16	ALL
	6		W0984	004	24		21-58-16	ALL
	7		W0984	005	24		21-58-16	ALL
	8		W0984	006	20		21-58-16	ALL
	9		W0984	007	24		21-58-16	ALL
	10		W0984	008	24		21-58-16	ALL
	11		W0984	009	24		21-58-16	ALL
	12		W0984	010	20		21-58-16	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
D03062		0843/114/L010		PLUG-				ALL
	1		W0938	028	18		33-31-21	ALL
	2	UNUSED						ALL
	3		W0938	026	18		33-31-21	ALL
	4	UNUSED						ALL
	5		W0938	027	18		33-31-21	ALL
	6		W0938	029	18		33-31-21	ALL
	7	UNUSED						ALL
D03064		0386/187/R073		PLUG-				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W0506	157	24		21-58-16	ALL
	5		W0506	158	20		21-58-16	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9		W0506	159	20		21-58-16	ALL
	10		W0506	160	20		21-58-16	ALL
	11		W0506	161	22		21-58-16	ALL
	12		W0506	625	24		21-58-16	ALL

HOOKUP LIST
D280T132

91-21-51
Section D03000
Page 8
Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03066		0374/120/L030		PLUG-				ALL
	1		W0738	038	24		21-58-11	ALL
	2		W0738	039	24		21-58-11	ALL
	3		W0738	040	20		21-58-11	ALL
	4		W0738	041	20		21-58-11	ALL
	5		W0738	091	24		21-58-11	ALL
D03068		0190/178/R041		PLUG-				ALL
	1		W0738	042	24		21-58-11	ALL
	2		W0738	043	24		21-58-11	ALL
	3		W0738	044	20		21-58-11	ALL
	4		W0738	045	20		21-58-11	ALL
	5		W0738	092	24		21-58-11	ALL
D03072		NL155/155/R3		PLUG-STRUT				ALL
	A		W0356	096	18		75-23-11	ALL
	B		W0356	098	18		75-23-11	ALL
	C		W0356	111	18		75-23-11	ALL
D03074		0410/167/L090		PLUG-				ALL
	1		W0572	072	24		21-58-12	ALL
	2		W0572	073	20		21-58-12	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	DED		W0572	072Z			21-58-12	155-199
	DED		W0572	073Z			21-58-12	155-199
D03076		0505/160/L075		PLUG-				050-099
D03076		0511/160/L075		PLUG-				150-199, 275-299
	1		W0986	036	24		21-58-12	ALL
	2		W0986	037	24		21-58-12	ALL
	3		W0986	040	20		21-58-12	ALL
	4		W0986	041	20		21-58-12	ALL
	5		W0986	034	20		21-58-12	ALL
	6		W0986	035	24		21-58-12	ALL
	7		W0986	038	24		21-58-12	ALL
	8		W0986	039	20		21-58-12	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D03000

Page 9

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03076		0505/160/L075		PLUG- (continued)				050-099
D03076		0511/160/L075		PLUG- (continued)				150-199, 275-299
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	DED		W0986	036Z			21-58-12	ALL
	DED		W0986	037Z			21-58-12	ALL
	DED		W0986	040Z			21-58-12	ALL
D03082		0741/266/L081		PLUG-				050-099
D03082		0741/266/L080		PLUG				150-199, 275-278
D03082		0726/266/L081		PLUG				280-299
	1		W0814	121	22		33-21-33	ALL
	2		W0814	122	22		33-21-33	ALL
	3		W0814	119	22		33-21-33	ALL
	4		W0814	120	22		33-21-33	ALL
	5		W0814	140	20		33-21-33	ALL
D03084		0770/250/L075		PLUG-				050-099
D03084		0785/250/L075		PLUG-				150-199, 275-278
D03084		0770/266/L081		PLUG-				280-299
	1		W0812	033	22		33-21-32	ALL
	2		W0812	034	22		33-21-32	ALL
	3		W0812	035	22		33-21-32	ALL
	4		W0812	036	22		33-21-32	ALL
	5		W0812	140	20		33-21-32	ALL
D03086		0827/266/L080		PLUG-				150-199
	1		W0814	037	22		33-21-33	150-199
	2		W0814	038	22		33-21-33	150-199
	3		W0814	039	22		33-21-33	150-199
	4		W0814	040	22		33-21-33	150-199
	5		W0814	145	20		33-21-33	150-199
D03088		0939/266/L081		PLUG-				050-099
D03088		0912/266/L081		PLUG-				150-199, 275-299
	1		W0812	049	22		33-21-34	ALL
	2		W0812	050	22		33-21-34	ALL
	3		W0812	051	22		33-21-34	ALL

HOOKUP LIST

D280T132

91-21-51

Section D03000

Page 10

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03088		0939/266/L081		PLUG- (continued)				050-099
D03088		0912/266/L081		PLUG- (continued)				150-199, 275-299
	4		W0812	052	22		33-21-34	ALL
	5		W0812	142	20		33-21-34	ALL
D03090		0895/266/L081		PLUG-				050-099
D03090		0954/266/L081		PLUG-				275-299
	1		W0812	055	22		33-21-34	050-099, 275-299
	2		W0812	056	22		33-21-34	050-099, 275-299
	3		W0812	053	22		33-21-34	050-099, 275-299
	4		W0812	054	22		33-21-34	050-099, 275-299
	5		W0812	143	20		33-21-34	050-099, 275-299
D03092		0983/266/L081		PLUG-				050-099
D03092		1000/266/L081		PLUG-				150-199, 275-299
	1		W0812	059	22		33-21-34	050-099, 275-299
	1		W0814	707	22		33-21-35	150-199
	2		W0812	060	22		33-21-34	050-099, 275-299
	2		W0814	708	22		33-21-35	150-199
	3		W0812	061	22		33-21-34	050-099, 275-299
	3		W0814	716	22		33-21-35	150-199
	4		W0812	062	22		33-21-34	050-099, 275-299
	4		W0814	717	22		33-21-35	150-199
	5		W0812	144	20		33-21-34	050-099, 275-299
	5		W0814	718	20		33-21-35	150-199
D03094		1042/266/L081		PLUG-				150-199, 275-299
	1		W0816	681	22		33-21-34	150-199, 275-299
	2		W0816	682	22		33-21-34	150-199, 275-299
	3		W0816	683	22		33-21-34	150-199, 275-299
	4		W0816	684	22		33-21-34	150-199, 275-299
	5		W0816	685	20		33-21-34	150-199, 275-299
D03096		0866/266/L081		PLUG-				050-099
D03096		0871/266/L081		PLUG-				150-199, 275-299
	1		W0812	075	22		33-21-34	ALL
	2		W0812	076	22		33-21-34	ALL
	3		W0812	077	22		33-21-34	ALL
	4		W0812	078	22		33-21-34	ALL
	5		W0812	146	20		33-21-34	ALL

HOOKUP LIST

D280T132

91-21-51

Section D03000

Page 11

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03098		0391/266/L081		PLUG-				275-299
	1		W0814	671	22		33-21-33	275-299
	2		W0814	672	22		33-21-33	275-299
	3		W0814	673	22		33-21-33	275-299
	4		W0814	674	22		33-21-33	275-299
	5		W0814	675	20		33-21-33	275-299

HOOKUP LIST

D280T132

91-21-51

Section D03000

Page 12 End

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03100		0418/266/L081		PLUG-				ALL
	1		W0812	093	22		33-21-32	ALL
	2		W0812	094	22		33-21-32	ALL
	3		W0812	095	22		33-21-32	050-099, 150-199
	3		W0812	091	22		33-21-32	275-299
	4		W0812	096	22		33-21-32	050-099, 150-199
	4		W0812	092	22		33-21-32	275-299
	5		W0812	132	20		33-21-32	ALL
D03102		0466/266/R081		PLUG-				050-099
D03102		0477/266/L081		PLUG-				150-157, 164-199, 275-278
D03102		477/266/L080		PLUG-				162-163
D03102		0462/266/L081		PLUG-				280-299
	1		W0814	107	22		33-21-33	050-099, 150-157, 275-299
	1		W0812	16A	22		33-21-32	162-199
	2		W0814	108	22		33-21-33	050-099, 150-157, 275-299
	2		W0812	17A	22		33-21-32	162-199
	3		W0814	105	22		33-21-33	050-099, 150-157, 275-299
	3		W0812	14A	22		33-21-32	162-199
	4		W0814	106	22		33-21-33	050-099, 150-157, 275-299
	4		W0812	15A	22		33-21-32	162-199
	5		W0814	138	20		33-21-33	050-099, 150-157, 275-299
	5		W0812	18A	20		33-21-32	162-199
D03104		0506/266/L081		PLUG-				ALL
	1		W0812	103	22		33-21-32	ALL
	2		W0812	104	22		33-21-32	ALL
	3		W0812	101	22		33-21-32	ALL
	4		W0812	102	22		33-21-32	ALL
	5		W0812	134	20		33-21-32	ALL
D03106		0550/266/L081		PLUG-				050-099, 150-199, 275-278
D03106		0555/266/L081		PLUG-				280-299
	1		W0814	079	22		33-21-33	ALL
	2		W0814	080	22		33-21-33	ALL
	3		W0814	081	22		33-21-33	ALL
	4		W0814	082	22		33-21-33	ALL
	5		W0814	151	20		33-21-33	ALL

HOOKUP LIST

D280T132

91-21-51

Section D03100

Page 1

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03108		0594/266/L081		PLUG-				050-099, 280-299
D03108		0607/266/L081		PLUG-				150-199, 275-278
	1		W0812	655	22		33-21-32	ALL
	2		W0812	656	22		33-21-32	ALL
	3		W0812	657	22		33-21-32	ALL
	4		W0812	658	22		33-21-32	ALL
	5		W0812	654	20		33-21-32	ALL
D03110		0638/266/L081		PLUG-				050-099, 280-299
D03110		0653/266/L081		PLUG-				150-199, 275-278
	1		W0814	131	22		33-21-33	ALL
	2		W0814	132	22		33-21-33	ALL
	3		W0814	129	22		33-21-33	ALL
	4		W0814	130	22		33-21-33	ALL
	5		W0814	142	20		33-21-33	ALL
D03112		0682/266/L081		PLUG-				050-099, 150-199, 275-278
D03112		0682/266/L085		PLUG-				280-299
	1		W0812	127	22		33-21-32	ALL
	2		W0812	128	22		33-21-32	ALL
	3		W0812	125	22		33-21-32	ALL
	4		W0812	126	22		33-21-32	ALL
	5		W0812	135	20		33-21-32	ALL
D03114		0760/266/R081		PLUG-				050-099
D03114		0741/266/R081		PLUG-				150-199, 275-278
D03114		0756/266/R081		PLUG-				280-299
	1		W0814	115	22		33-21-33	ALL
	2		W0814	116	22		33-21-33	ALL
	3		W0814	117	22		33-21-33	ALL
	4		W0814	118	22		33-21-33	ALL
	5		W0814	139	20		33-21-33	ALL
D03116		0785/266/R080		PLUG-				050-099, 150-199, 275-278
D03116		0780/266/R085		PLUG-				280-299
	1		W0812	039	22		33-21-32	ALL
	2		W0812	040	22		33-21-32	ALL
	3		W0812	037	22		33-21-32	ALL
	4		W0812	038	22		33-21-32	ALL
	5		W0812	141	20		33-21-32	ALL

HOOKUP LIST

D280T132

91-21-51

Section D03100

Page 2

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03118		0827/266/R081		PLUG-				150-199
	1		W0814	043	22		33-21-33	150-199
	2		W0814	044	22		33-21-33	150-199
	3		W0814	041	22		33-21-33	150-199
	4		W0814	042	22		33-21-33	150-199
	5		W0814	146	20		33-21-33	150-199
D03120		0925/266/R081		PLUG-				050-099
D03120		0912/266/R081		PLUG-				150-199, 275-299
	1		W0814	053	22		33-21-35	ALL
	2		W0814	054	22		33-21-35	ALL
	3		W0814	055	22		33-21-35	ALL
	4		W0814	056	22		33-21-35	ALL
	5		W0814	147	20		33-21-35	ALL
D03122		0969/266/R081		PLUG-				050-099
D03122		0954/266/R081		PLUG-				275-278
D03122		0954/266/R080		PLUG-				280-299
	1		W0814	061	22		33-21-35	050-099, 275-299
	2		W0814	062	22		33-21-35	050-099, 275-299
	3		W0814	059	22		33-21-35	050-099, 275-299
	4		W0814	060	22		33-21-35	050-099, 275-299
	5		W0814	148	20		33-21-35	050-099, 275-299
D03124		1000/266/R081		PLUG-				050-099, 150-199, 275-278
D03124		1000/266/R080		PLUG-				280-299
	1		W0812	065	22		33-21-34	050-099
	1		W0814	712	22		33-21-35	150-199
	1		W0814	063	22		33-21-35	275-299
	2		W0812	066	22		33-21-34	050-099
	2		W0814	713	22		33-21-35	150-199
	2		W0814	064	22		33-21-35	275-299
	3		W0812	063	22		33-21-34	050-099
	3		W0814	719	22		33-21-35	150-199
	3		W0814	065	22		33-21-35	275-299
	4		W0812	064	22		33-21-34	050-099
	4		W0814	720	22		33-21-35	150-199
	4		W0814	066	22		33-21-35	275-299
	5		W0812	145	20		33-21-34	050-099
	5		W0814	721	20		33-21-35	150-199
	5		W0814	149	20		33-21-35	275-299

HOOKUP LIST

D280T132

91-21-51

Section D03100

Page 3

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03126		1042/266/R081		PLUG-				150-165, 167-199, 275-299
D03126		1040/266/R081		PLUG-				166
	1		W0818	095	22		33-21-35	150-199, 275-299
	2		W0818	096	22		33-21-35	150-199, 275-299
	3		W0818	093	22		33-21-35	150-199, 275-299
	4		W0818	094	22		33-21-35	150-199, 275-299
	5		W0818	097	20		33-21-35	150-199, 275-299
D03128		0881/266/R081		PLUG-				050-099
D03128		0871/266/R081		PLUG-				150-199, 275-299
	1		W0812	665	22		33-21-34	ALL
	2		W0812	666	22		33-21-34	ALL
	3		W0812	663	22		33-21-34	ALL
	4		W0812	664	22		33-21-34	ALL
	5		W0812	667	20		33-21-34	ALL
D03129		325/155/L049		PLUG				ALL
	1		W1603	060	22		34-12-61	ALL
	2		W1603	061	22		34-12-61	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W1603	062	22		34-12-61	ALL
	6		W1603	063	22		34-12-61	ALL
	7		W1603	064	20		34-12-61	ALL
	8		W1603	065	24		34-12-61	ALL
	9		W1603	066	24		34-12-61	ALL
	10		W1603	067	24		34-12-61	ALL
	11		W1603	068	24		34-12-61	ALL
	12		W1603	069	24		34-12-61	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D03100

Page 4

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03129		325/155/L049		PLUG (continued)				ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28		W1603	230R	24		34-12-61	ALL
	29		W1603	231R	24		34-12-61	ALL
	30		W1603	232R	24		34-12-61	ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34		W1603	230B	24		34-12-61	ALL
	35		W1603	231B	24		34-12-61	ALL
	36		W1603	232B	24		34-12-61	ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
	REF		W1603	230	20		34-12-61	ALL
	REF		W1603	230Z			34-12-61	ALL
	REF		W1603	231	20		34-12-61	ALL
	REF		W1603	231Z			34-12-61	ALL
	REF		W1603	232	20		34-12-61	ALL
	REF		W1603	232Z			34-12-61	ALL
D03130		1088/266/R081		PLUG-				ALL
	1		W0816	119	22		33-21-34	050-099

HOOKUP LIST
D280T132

91-21-51
Section D03100
Page 5
Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03130		1088/266/R081		PLUG- (continued)				ALL
	1		W0818	010	22		33-21-35	150-199, 275-299
	2		W0816	120	22		33-21-34	050-099
	2		W0818	011	22		33-21-35	150-199, 275-299
	3		W0816	117	22		33-21-34	050-099
	3		W0818	012	22		33-21-35	150-199, 275-299
	4		W0816	118	22		33-21-34	050-099
	4		W0818	013	22		33-21-35	150-199, 275-299
	5		W0816	166	20		33-21-34	050-099
	5		W0818	062	20		33-21-35	150-199, 275-299
D03131		325/155/R045		PLUG				ALL
	1		W1615	060	22		34-12-62	ALL
	2		W1615	061	22		34-12-62	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W1615	062	22		34-12-62	ALL
	6		W1615	063	22		34-12-62	ALL
	7		W1615	064	24		34-12-62	ALL
	8		W1615	065	24		34-12-62	ALL
	9		W1615	066	24		34-12-62	ALL
	10		W1615	067	24		34-12-62	ALL
	11		W1615	068	24		34-12-62	ALL
	12		W1615	069	24		34-12-62	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28		W1615	230R	24		34-12-62	ALL
	29		W1615	231R	24		34-12-62	ALL

HOOKUP LIST
D280T132

91-21-51
Section D03100
Page 6
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03131		325/155/R045		PLUG (continued)				ALL
	30		W1615	232R	24		34-12-62	ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34		W1615	230B	24		34-12-62	ALL
	35		W1615	231B	24		34-12-62	ALL
	36		W1615	232B	24		34-12-62	ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
	REF		W1615	230	20		34-12-62	ALL
	REF		W1615	230Z			34-12-62	ALL
	REF		W1615	231	20		34-12-62	ALL
	REF		W1615	231Z			34-12-62	ALL
	REF		W1615	232	20		34-12-62	ALL
	REF		W1615	232Z			34-12-62	ALL
D03132		1145/284/R081		PLUG-				050-099
D03132		1130/266/R081		PLUG-				150-165, 167-199, 275-299
D03132		1128/266/R081		PLUG-				166
	1		W0818	016	22		33-21-35	ALL
	2		W0818	017	22		33-21-35	ALL
	3		W0818	014	22		33-21-35	ALL
	4		W0818	015	22		33-21-35	ALL

HOOKUP LIST

D280T132

91-21-51

Section D03100

Page 7

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03132		1145/284/R081		PLUG- (continued)				050-099
D03132		1130/266/R081		PLUG- (continued)				150-165, 167-199, 275-299
D03132		1128/266/R081		PLUG- (continued)				166
	5		W0818	063	20		33-21-35	ALL
D03134		1189/284/R081		PLUG-				050-099
D03134		1176/266/R081		PLUG-				150-199, 275-299
	1		W0818	020	22		33-21-35	ALL
	2		W0818	021	22		33-21-35	ALL
	3		W0818	022	22		33-21-35	ALL
	4		W0818	023	22		33-21-35	ALL
	5		W0818	064	20		33-21-35	ALL
D03136		1233/284/R081		PLUG-				050-099
D03136		1218/266/R081		PLUG-				150-165, 167-199, 275-299
D03136		1216/266/R081		PLUG-				166
	1		W0818	026	22		33-21-35	ALL
	2		W0818	027	22		33-21-35	ALL
	3		W0818	024	22		33-21-35	ALL
	4		W0818	025	22		33-21-35	ALL
	5		W0818	065	20		33-21-35	ALL
D03138		1427/266/R081		PLUG-				ALL
	1		W0816	581	22		33-21-34	050-099, 275-299
	1		W0816	135	22		33-21-34	150-199
	2		W0816	582	22		33-21-34	050-099, 275-299
	2		W0816	136	22		33-21-34	150-199
	3		W0816	579	22		33-21-34	050-099, 275-299
	3		W0816	577	22		33-21-34	150-199
	4		W0816	580	22		33-21-34	050-099, 275-299
	4		W0816	578	22		33-21-34	150-199
	5		W0816	583	20		33-21-34	ALL
D03140		1277/284/R081		PLUG-				050-099
D03140		1264/266/R081		PLUG-				150-199, 275-299
	1		W0818	039	22		33-21-35	ALL
	2		W0818	040	22		33-21-35	ALL
	3		W0818	041	22		33-21-35	ALL
	4		W0818	042	22		33-21-35	ALL
	5		W0818	067	20		33-21-35	ALL

HOOKUP LIST

D280T132

91-21-51

Section D03100

Page 8

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03142		1321/284/R081		PLUG-				050-099
D03142		1304/266/R081		PLUG-				150-199, 275-299
	1		W0818	045	22		33-21-35	ALL
	2		W0818	046	22		33-21-35	ALL
	3		W0818	043	22		33-21-35	ALL
	4		W0818	044	22		33-21-35	ALL
	5		W0818	068	20		33-21-35	ALL
D03144		1365/284/R081		PLUG-				050-099
D03144		1352/266/R081		PLUG-				150-199, 275-299
	1		W0818	052	22		33-21-35	ALL
	2		W0818	053	22		33-21-35	ALL
	3		W0818	054	22		33-21-35	ALL
	4		W0818	055	22		33-21-35	ALL
	5		W0818	069	20		33-21-35	ALL
D03146		1409/266/R081		PLUG-				050-099
D03146		1392/266/R081		PLUG-				150-199, 275-299
	1		W0818	058	22		33-21-35	ALL
	2		W0818	059	22		33-21-35	ALL
	3		W0818	056	22		33-21-35	ALL
	4		W0818	057	22		33-21-35	ALL
	5		W0818	070	20		33-21-35	ALL
D03148		1550/148/L049		PLUG-				ALL
	1		W1358	222B	20		21-31-21	ALL
	2		W1358	02B	20		21-31-21	ALL
	3		W1358	02C	20		21-31-21	ALL
	4	UNUSED						ALL
	5		W1358	222R	20		21-31-21	ALL
	6		W1358	018	20		21-31-21	ALL
	7		W1358	02G	20		21-31-21	ALL
	8	UNUSED						ALL
	9		W1358	220B	24		21-31-21	ALL
	10		W1358	220R	24		21-31-21	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
			W1358	02A	20		21-31-21	ALL
			W1358	220Z			21-31-21	ALL

HOOKUP LIST

D280T132

91-21-51

Section D03100

Page 9

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03150		1071/266/L081		PLUG-				050-099
D03150		1088/266/L081		PLUG-				150-199, 275-299
	1		W0816	113	22		33-21-34	ALL
	2		W0816	114	22		33-21-34	ALL
	3		W0816	115	22		33-21-34	ALL
	4		W0816	116	22		33-21-34	ALL
	5		W0816	165	20		33-21-34	ALL
D03152		1128/266/L080		PLUG-				050-099
D03152		1130/266/L081		PLUG-				150-199, 275-299
	1		W0818	010	22		33-21-35	050-099
	1		W0816	119	22		33-21-34	150-199, 275-299
	2		W0818	011	22		33-21-35	050-099
	2		W0816	120	22		33-21-34	150-199, 275-299
	3		W0818	012	22		33-21-35	050-099
	3		W0816	117	22		33-21-34	150-199, 275-299
	4		W0818	013	22		33-21-35	050-099
	4		W0816	118	22		33-21-34	150-199, 275-299
	5		W0818	062	20		33-21-35	050-099
	5		W0816	166	20		33-21-34	150-199, 275-299
D03154		1166/265/L081		PLUG-				050-099
D03154		1176/265/L081		PLUG-				150-199, 275-299
	1		W0816	123	22		33-21-34	ALL
	2		W0816	124	22		33-21-34	ALL
	3		W0816	125	22		33-21-34	ALL
	4		W0816	126	22		33-21-34	ALL
	5		W0816	167	20		33-21-34	ALL
D03156		1203/265/L081		PLUG-				050-099
D03156		1218/266/L081		PLUG-				150-199, 275-299
	1		W0816	129	22		33-21-34	ALL
	2		W0816	130	22		33-21-34	ALL
	3		W0816	127	22		33-21-34	ALL
	4		W0816	128	22		33-21-34	ALL
	5		W0816	168	20		33-21-34	ALL
D03158		1423/266/L081		PLUG-				050-099
D03158		1438/266/L081		PLUG-				150-199, 275-299
	1		W0816	135	22		33-21-34	050-099, 275-299

HOOKUP LIST

D280T132

91-21-51

Section D03100

Page 10

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03158		1423/266/L081		PLUG- (continued)				050-099
D03158		1438/266/L081		PLUG- (continued)				150-199, 275-299
	1		W0816	581	22		33-21-34	150-199
	2		W0816	136	22		33-21-34	050-099, 275-299
	2		W0816	582	22		33-21-34	150-199
	3		W0816	137	22		33-21-34	050-099, 150-199
	3		W0816	577	22		33-21-34	275-299
	4		W0816	138	22		33-21-34	050-099, 150-199
	4		W0816	578	22		33-21-34	275-299
	5		W0816	169	20		33-21-34	ALL
D03160		1253/280/L081		PLUG-				050-099
D03160		1262/266/L081		PLUG-				150-199, 275-299
	1		W0816	142	22		33-21-34	ALL
	2		W0816	143	22		33-21-34	ALL
	3		W0816	144	22		33-21-34	ALL
	4		W0816	145	22		33-21-34	ALL
	5		W0816	170	20		33-21-34	ALL
D03162		1291/266/L081		PLUG-				050-099
D03162		1304/266/L081		PLUG-				150-199, 275-299
	1		W0816	148	22		33-21-34	ALL
	2		W0816	149	22		33-21-34	ALL
	3		W0816	146	22		33-21-34	ALL
	4		W0816	147	22		33-21-34	ALL
	5		W0816	171	20		33-21-34	ALL
D03164		1345/265/L081		PLUG-				ALL
	1		W0816	155	22		33-21-34	ALL
	2		W0816	156	22		33-21-34	ALL
	3		W0816	157	22		33-21-34	ALL
	4		W0816	158	22		33-21-34	ALL
	5		W0816	172	20		33-21-34	ALL
D03166		1379/266/L081		PLUG-				050-099
D03166		1392/266/L081		PLUG-				150-199, 275-299
	1		W0816	161	22		33-21-34	ALL
	2		W0816	162	22		33-21-34	ALL
	3		W0816	159	22		33-21-34	ALL
	4		W0816	160	22		33-21-34	ALL
	5		W0816	173	20		33-21-34	ALL

HOOKUP LIST

D280T132

91-21-51

Section D03100

Page 11

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03174		P037-00/ /		RELAY SOCKET-				050-099
D03174		P037-00/ /		RLY SKT				150-199, 275-299
	A1		W0192	02B	16		33-45-11	ALL
	A2		W0192	02L	16		33-45-11	ALL
	A3		W0192	02A	16		33-45-11	ALL
	B1		W0192	02E	16		33-45-11	ALL
	B2		W0192	02M	16		33-45-11	ALL
	B3		W0192	02C	16		33-45-11	ALL
	C1	UNUSED						ALL
	C2	UNUSED						ALL
	C3	UNUSED						ALL
	D1	UNUSED						ALL
	D2	UNUSED						ALL
	D3	UNUSED						ALL
	X1		W0192	02F	22		33-45-11	ALL
	X2		W0192	02G	22		33-45-11	ALL
D03176		P037-00/ /		RELAY SOCKET				ALL
	A1		W0192	02N	16		33-45-11	ALL
	A2		W0192	02L	16		33-45-11	ALL
	A3	UNUSED						ALL
	B1		W0192	02P	16		33-45-11	ALL
	B2		W0192	02M	16		33-45-11	ALL
	B3	UNUSED						ALL
	C1	UNUSED						ALL
	C2	UNUSED						ALL
	C3	UNUSED						ALL
	D1	UNUSED						ALL
	D2	UNUSED						ALL
	D3	UNUSED						ALL
	X1		W0192	02H	22		33-45-11	ALL
	X2		W0192	02J	22		33-45-11	ALL
D03180		0389/266/R080		PLUG-				275-278
D03180		0389/266/R081		PLUG-				280-299
	1		W0814	091	22		33-21-33	275-299
	2		W0814	092	22		33-21-33	275-299
	3		W0814	093	22		33-21-33	275-299
	4		W0814	094	22		33-21-33	275-299
	5		W0814	135	20		33-21-33	275-299

HOOKUP LIST

D280T132

91-21-51

Section D03100

Page 12

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03182		0448/266/R081		PLUG-				050-099
D03182		0433/266/R080		PLUG-				150, 153-157
D03182		0433/266/R081		PLUG-				151-152, 162-199, 275-278
D03182		0449/266/R081		PLUG-				280-299
	1		W0814	097	22		33-21-33	050-099, 150-199
	1		W0812	821	22		33-21-32	275-299
	2		W0814	098	22		33-21-33	050-099, 150-199
	2		W0812	822	22		33-21-32	275-299
	3		W0814	099	22		33-21-33	050-099, 150-199
	3		W0812	823	22		33-21-32	275-299
	4		W0814	100	22		33-21-33	050-099, 150-199
	4		W0812	824	22		33-21-32	275-299
	5		W0814	136	20		33-21-33	050-099, 150-199
	5		W0812	825	20		33-21-32	275-299
D03184		0492/266/R081		PLUG-				050-099
D03184		0477/266/R081		PLUG-				150-199, 275-278
D03184		0493/266/R081		PLUG-				280-299
	1		W0814	101	22		33-21-33	ALL
	2		W0814	102	22		33-21-33	ALL
	3		W0814	103	22		33-21-33	ALL
	4		W0814	104	22		33-21-33	ALL
	5		W0814	137	20		33-21-33	ALL
D03186		0540/266/R081		PLUG-				ALL
	1		W0812	097	22		33-21-32	ALL
	2		W0812	098	22		33-21-32	ALL
	3		W0812	099	22		33-21-32	ALL
	4		W0812	100	22		33-21-32	ALL
	5		W0812	133	20		33-21-32	ALL
D03188		0580/266/R081		PLUG-				050-099, 150-199, 275-278
D03188		0581/266/R081		PLUG-				280-299
	1		W0814	171	22		33-21-33	ALL
	2		W0814	172	22		33-21-33	ALL
	3		W0814	153	22		33-21-33	ALL
	4		W0814	154	22		33-21-33	ALL
	5		W0814	152	20		33-21-33	ALL

HOOKUP LIST

D280T132

91-21-51

Section D03100

Page 13

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03190		0628/266/R081		PLUG-				050-099
D03190		0607/266/R081		PLUG-				150-199, 275-278
D03190		0625/266/R081		PLUG-				280-299
	1		W0812	028	22		33-21-32	ALL
	2		W0812	029	22		33-21-32	ALL
	3		W0812	659	22		33-21-32	ALL
	4		W0812	660	22		33-21-32	ALL
	5		W0812	139	20		33-21-32	ALL
D03192		0668/266/R081		PLUG-				050-099
D03192		0653/266/R081		PLUG-				150-199, 275-278
D03192		0654+15/266/R081		PLUG-				280-299
	1		W0814	125	22		33-21-33	ALL
	2		W0814	126	22		33-21-33	ALL
	3		W0814	127	22		33-21-33	ALL
	4		W0814	128	22		33-21-33	ALL
	5		W0814	141	20		33-21-33	ALL
D03194		0710/266/R081		PLUG-				050-099, 150-199, 275-278
D03194		0713/268/R085		PLUG-				280-299
	1		W0812	121	22		33-21-32	ALL
	2		W0812	122	22		33-21-32	ALL
	3		W0812	123	22		33-21-32	ALL
	4		W0812	124	22		33-21-32	ALL
	5		W0812	136	20		33-21-32	ALL
D03196		1550/140/L040		PLUG-				ALL
	1		W1354	202B	20		21-31-11	ALL
	2		W1354	013	20		21-31-11	ALL
	3		W1354	012	20		21-31-11	ALL
	4	UNUSED						ALL
	5		W1354	202R	20		21-31-11	ALL
	6		W1354	010	20		21-31-11	ALL
	7		W1354	011	20		21-31-11	ALL
	8	UNUSED						ALL
	9		W1354	201R	24		21-31-11	ALL
	10		W1354	201B	24		21-31-11	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
			W1354	014	20		21-31-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D03100

Page 14

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03196		1550/140/L040		PLUG- (continued)				ALL
			W1354	201Z			21-31-11	ALL

HOOKUP LIST
D280T132

91-21-51
Section D03100
Page 15 End
Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03200		0397/270/L073		RCPT-				275-299
	1		W0800	246R	22		23-31-15	275-299
	2		W0800	246B	22		23-31-15	275-299
	3		W0800	116	20		33-24-12	275-299
	4		W0800	117	20		33-24-12	275-299
	5		W0800	118	20		33-24-12	275-299
D03202		0397/270/R073		RCPT-				275-299
	1		W0804	246R	22		23-31-17	275-299
	2		W0804	246B	22		23-31-17	275-299
	3		W0804	116	20		33-24-14	275-299
	4		W0804	115	20		33-24-14	275-299
	5		W0804	117	20		33-24-14	275-299
D03206		0429/270/L073		RCPT-				050-099, 150-199
D03206		0427/270/L073		RCPT-				275-299
	1		W0800	202R	22		23-31-15	ALL
	2		W0800	202B	22		23-31-15	ALL
	3		W0800	003	22		33-24-12	050-099
	3		W0800	003	20		33-24-12	150-199, 275-299
	4		W0800	004	22		33-24-12	050-099
	4		W0800	004	20		33-24-12	150-199, 275-299
	5		W0800	005	20		33-24-12	ALL
	6	UNUSED						050-099, 150-199
	7	UNUSED						050-099, 150-199
	8	UNUSED						050-099, 150-199
	9	UNUSED						050-099, 150-199
	10	UNUSED						050-099, 150-199
	11	UNUSED						050-099, 150-199
	12	UNUSED						050-099, 150-199
D03208		0449/270/L073		RCPT-				050-099, 150-199
D03208		0456/270/L073		RCPT-				275-299
	1		W0800	204R	22		23-31-15	ALL
	2		W0800	204B	22		23-31-15	ALL
	3		W0800	008	22		33-24-12	050-099
	3		W0800	008	20		33-24-12	150-199, 275-299
	4		W0800	009	22		33-24-12	050-099
	4		W0800	009	20		33-24-12	150-199, 275-299
	5		W0800	010	20		33-24-12	ALL
	6		W0800	254R	22		23-31-15	050-099, 150-199

HOOKUP LIST

D280T132

91-21-51

Section D03200

Page 1

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03208		0449/270/L073		RCPT- (continued)				050-099, 150-199
D03208		0456/270/L073		RCPT- (continued)				275-299
	7		W0800	254B	22		23-31-15	050-099, 150-199
	8	UNUSED						050-099, 150-199
	9	UNUSED						050-099, 150-199
	10	UNUSED						050-099, 150-199
	11	UNUSED						050-099, 150-199
	12	UNUSED						050-099, 150-199
D03210		0463/270/L073		RCPT-				050-099
D03210		0463/270/073		RCPT-				150-199, 275-299
	1		W0800	206R	22		23-31-15	ALL
	2		W0800	206B	22		23-31-15	ALL
	3		W0800	013	22		33-24-12	050-099
	3		W0800	013	20		33-24-12	150-199, 275-299
	4		W0800	014	22		33-24-12	050-099
	4		W0800	014	20		33-24-12	150-199, 275-299
	5		W0800	015	20		33-24-12	ALL
	6		W0800	256R	22		23-31-15	050-099, 150-199
	7		W0800	256B	22		23-31-15	050-099, 150-199
	8	UNUSED						050-099, 150-199
	9	UNUSED						050-099, 150-199
	10	UNUSED						050-099, 150-199
	11	UNUSED						050-099, 150-199
	12	UNUSED						050-099, 150-199
D03212		0493/270/L073		RCPT-				ALL
	1		W0800	208R	22		23-31-15	ALL
	2		W0800	208B	22		23-31-15	ALL
	3		W0800	018	22		33-24-12	050-099
	3		W0800	018	20		33-24-12	150-199, 275-299
	4		W0800	019	22		33-24-12	050-099
	4		W0800	019	20		33-24-12	150-199, 275-299
	5		W0800	020	20		33-24-12	ALL
	6		W0800	258R	22		23-31-15	050-099, 150-199
	7		W0800	258B	22		23-31-15	050-099, 150-199
	8	UNUSED						050-099, 150-199
	9	UNUSED						050-099, 150-199
	10	UNUSED						050-099, 150-199
	11	UNUSED						050-099, 150-199
	12	UNUSED						050-099, 150-199

HOOKUP LIST

D280T132

91-21-51

Section D03200

Page 2

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03214		0522/270/L073		RCPT-				ALL
	1		W0800	210R	22		23-31-15	ALL
	2		W0800	210B	22		23-31-15	ALL
	3		W0800	023	22		33-24-12	050-099
	3		W0800	023	20		33-24-12	150-199, 275-299
	4		W0800	024	22		33-24-12	050-099
	4		W0800	024	20		33-24-12	150-199, 275-299
	5		W0800	025	20		33-24-12	ALL
	6		W0800	260R	22		23-31-15	050-099, 150-199
	7		W0800	260B	22		23-31-15	050-099, 150-199
	8	UNUSED						050-099, 150-199
	9	UNUSED						050-099, 150-199
	10	UNUSED						050-099, 150-199
	11	UNUSED						050-099, 150-199
	12	UNUSED						050-099, 150-199
D03216		0551/270/L073		RCPT-				ALL
	1		W0800	212R	22		23-31-15	ALL
	2		W0800	212B	22		23-31-15	ALL
	3		W0800	028	22		33-24-12	050-099
	3		W0800	028	20		33-24-12	150-199, 275-299
	4		W0800	029	22		33-24-12	050-099
	4		W0800	029	20		33-24-12	150-199, 275-299
	5		W0800	030	20		33-24-12	ALL
	6		W0800	262R	22		23-31-15	050-099, 150-199
	7		W0800	262B	22		23-31-15	050-099, 150-199
	8	UNUSED						050-099, 150-199
	9	UNUSED						050-099, 150-199
	10	UNUSED						050-099, 150-199
	11	UNUSED						050-099, 150-199
	12	UNUSED						050-099, 150-199
D03218		0581/270/L073		RCPT-				ALL
	1		W0800	214R	22		23-31-15	ALL
	2		W0800	214B	22		23-31-15	ALL
	3		W0800	033	22		33-24-12	050-099
	3		W0800	033	20		33-24-12	150-199, 275-299
	4		W0800	034	22		33-24-12	050-099
	4		W0800	034	20		33-24-12	150-199, 275-299
	5		W0800	035	20		33-24-12	ALL
	6		W0800	264R	22		23-31-15	050-099, 150-199

HOOKUP LIST
D280T132

91-21-51
Section D03200
Page 3
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03218		0581/270/L073		RCPT- (continued)				ALL
	7		W0800	264B	22		23-31-15	050-099, 150-199
	8	UNUSED						050-099, 150-199
	9	UNUSED						050-099, 150-199
	10	UNUSED						050-099, 150-199
	11	UNUSED						050-099, 150-199
	12	UNUSED						050-099, 150-199
D03220		0610/270/L073		RCPT-				ALL
	1		W0800	216R	22		23-31-15	ALL
	2		W0800	216B	22		23-31-15	ALL
	3		W0800	038	22		33-24-12	050-099
	3		W0800	038	20		33-24-12	150-199, 275-299
	4		W0800	039	22		33-24-12	050-099
	4		W0800	039	20		33-24-12	150-199, 275-299
	5		W0800	040	20		33-24-12	ALL
	6		W0800	266R	22		23-31-15	050-099, 150-199
	7		W0800	266B	22		23-31-15	050-099, 150-199
	8	UNUSED						050-099, 150-199
	9	UNUSED						050-099, 150-199
	10	UNUSED						050-099, 150-199
	11	UNUSED						050-099, 150-199
	12	UNUSED						050-099, 150-199
D03222		0639/270/L073		RCPT-				ALL
	1		W0800	218R	22		23-31-15	ALL
	2		W0800	218B	22		23-31-15	ALL
	3		W0800	043	22		33-24-12	050-099
	3		W0800	043	20		33-24-12	150-199, 275-299
	4		W0800	044	22		33-24-12	050-099
	4		W0800	044	20		33-24-12	150-199, 275-299
	5		W0800	045	20		33-24-12	ALL
	6		W0800	268R	22		23-31-15	050-099, 150-199
	7		W0800	268B	22		23-31-15	050-099, 150-199
	8	UNUSED						050-099, 150-199
	9	UNUSED						050-099, 150-199
	10	UNUSED						050-099, 150-199
	11	UNUSED						050-099, 150-199
	12	UNUSED						050-099, 150-199

HOOKUP LIST

D280T132

91-21-51

Section D03200

Page 4

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03224		0669/270/L073		RCPT-				050-099
D03224		0656/270/L073		RCPT-				275-278
D03224		0665/270/L073		RCPT-				280-299
	1		W0800	220R	22		23-31-15	050-099, 275-278
	1		W0800	228R	22		23-31-15	280-299
	2		W0800	220B	22		23-31-15	050-099, 275-278
	2		W0800	228B	22		23-31-15	280-299
	3		W0800	048	22		33-24-12	050-099
	3		W0800	048	20		33-24-12	275-299
	4		W0800	049	22		33-24-12	050-099
	4		W0800	049	20		33-24-12	275-299
	5		W0800	050	20		33-24-12	050-099, 275-299
	6		W0800	270R	22		23-31-15	050-099
	7		W0800	270B	22		23-31-15	050-099
	8	UNUSED						050-099
	9	UNUSED						050-099
	10	UNUSED						050-099
	11	UNUSED						050-099
	12	UNUSED						050-099
D03226		0698/270/L073		RCPT-				050-099
D03226		0700/270/L073		RCPT-				150-199
D03226		0682/270/L073		RCPT-				275-278
D03226		0692/270/L073		RCPT-				280-299
	1		W0800	222R	22		23-31-15	050-099, 150-199
	1		W0806	222R	22		23-31-15	275-278
	1		W0806	202R	22		23-31-15	280-299
	2		W0800	222B	22		23-31-15	050-099, 150-199
	2		W0806	222B	22		23-31-15	275-278
	2		W0806	202B	22		23-31-15	280-299
	3		W0800	053	22		33-24-12	050-099
	3		W0800	053	20		33-24-12	150-199
	3		W0806	053	20		33-24-12	275-299
	4		W0800	054	22		33-24-12	050-099
	4		W0800	054	20		33-24-12	150-199
	4		W0806	054	20		33-24-12	275-299
	5		W0800	055	20		33-24-12	050-099, 150-199
	5		W0806	055	20		33-24-12	275-299
	6		W0800	272R	22		23-31-15	050-099
	6		W0800	652R	22		23-31-15	150-199
	7		W0800	272B	22		23-31-15	050-099

HOOKUP LIST

D280T132

91-21-51

Section D03200

Page 5

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03226		0698/270/L073		RCPT- (continued)				050-099
D03226		0700/270/L073		RCPT- (continued)				150-199
D03226		0682/270/L073		RCPT- (continued)				275-278
D03226		0692/270/L073		RCPT- (continued)				280-299
	7		W0800	652B	22		23-31-15	150-199
	8	UNUSED						050-099, 150-199
	9	UNUSED						050-099, 150-199
	10	UNUSED						050-099, 150-199
	11	UNUSED						050-099, 150-199
	12	UNUSED						050-099, 150-199
D03228		0727/270/L073		RCPT-				050-099
D03228		0737/270/L073		RCPT-				150-199
D03228		0712/270/L073		RCPT-				275-278
D03228		0713/270/L073		RCPT-				280-299
	1		W0800	224R	22		23-31-15	050-099, 150-199
	1		W0806	224R	22		23-31-15	275-278
	1		W0806	204R	22		23-31-15	280-299
	2		W0800	224B	22		23-31-15	050-099, 150-199
	2		W0806	224B	22		23-31-15	275-278
	2		W0806	204B	22		23-31-15	280-299
	3		W0800	058	22		33-24-12	050-099
	3		W0800	058	20		33-24-12	150-199
	3		W0806	058	20		33-24-12	275-299
	4		W0800	059	22		33-24-12	050-099
	4		W0800	059	20		33-24-12	150-199
	4		W0806	059	20		33-24-12	275-299
	5		W0800	060	20		33-24-12	050-099, 150-199
	5		W0806	060	20		33-24-12	275-299
	6		W0800	274R	22		23-31-15	050-099, 150-199
	7		W0800	274B	22		23-31-15	050-099, 150-199
	8	UNUSED						050-099, 150-199
	9	UNUSED						050-099, 150-199
	10	UNUSED						050-099, 150-199
	11	UNUSED						050-099, 150-199
	12	UNUSED						050-099, 150-199
D03230		0757/270/L073		RCPT-				050-099
D03230		0742/270/L073		RCPT-				275-278
D03230		0741/270/L073		RCPT-				280-299
	1		W0800	226R	22		23-31-15	050-099

HOOKUP LIST

D280T132

91-21-51

Section D03200

Page 6

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03230		0757/270/L073		RCPT- (continued)				050-099
D03230		0742/270/L073		RCPT- (continued)				275-278
D03230		0741/270/L073		RCPT- (continued)				280-299
	1		W0806	226R	22		23-31-15	275-278
	1		W0806	206R	22		23-31-15	280-299
	2		W0800	226B	22		23-31-15	050-099
	2		W0806	226B	22		23-31-15	275-278
	2		W0806	206B	22		23-31-15	280-299
	3		W0800	063	22		33-24-12	050-099
	3		W0806	063	20		33-24-12	275-299
	4		W0800	064	22		33-24-12	050-099
	4		W0806	064	20		33-24-12	275-299
	5		W0800	065	20		33-24-12	050-099
	5		W0806	065	20		33-24-12	275-299
	6		W0800	276R	22		23-31-15	050-099
	7		W0800	276B	22		23-31-15	050-099
	8	UNUSED						050-099
	9	UNUSED						050-099
	10	UNUSED						050-099
	11	UNUSED						050-099
	12	UNUSED						050-099
D03232		0786/270/L073		RCPT-				050-099
D03232		0801/270/L073		RCPT-				150-199
D03232		0797/270/L073		RCPT-				275-278
D03232		0798/270/L073		RCPT-				280-299
	1		W0800	228R	22		23-31-15	050-099
	1		W0806	228R	22		23-31-15	150-199, 275-278
	1		W0806	210R	22		23-31-15	280-299
	2		W0800	228B	22		23-31-15	050-099
	2		W0806	228B	22		23-31-15	150-199, 275-278
	2		W0806	210B	22		23-31-15	280-299
	3		W0800	068	22		33-24-12	050-099
	3		W0806	068	20		33-24-12	150-199, 275-299
	4		W0800	069	22		33-24-12	050-099
	4		W0806	069	20		33-24-12	150-199, 275-299
	5		W0800	070	20		33-24-12	050-099
	5		W0806	070	20		33-24-12	150-199, 275-299
	6		W0800	278R	22		23-31-15	050-099
	6		W0806	656R	22		23-31-15	150-199
	7		W0800	278B	22		23-31-15	050-099

HOOKUP LIST

D280T132

91-21-51

Section D03200

Page 7

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03232		0786/270/L073		RCPT- (continued)				050-099
D03232		0801/270/L073		RCPT- (continued)				150-199
D03232		0797/270/L073		RCPT- (continued)				275-278
D03232		0798/270/L073		RCPT- (continued)				280-299
	7		W0806	656B	22		23-31-15	150-199
	8	UNUSED						050-099, 150-199
	9	UNUSED						050-099, 150-199
	10	UNUSED						050-099, 150-199
	11	UNUSED						050-099, 150-199
	12	UNUSED						050-099, 150-199
D03234		0831/270/L073		RCPT-				150-199
	1		W0806	230R	22		23-31-15	150-199
	2		W0806	230B	22		23-31-15	150-199
	3		W0806	073	20		33-24-12	150-199
	4		W0806	074	20		33-24-12	150-199
	5		W0806	075	20		33-24-12	150-199
	6		W0806	658R	22		23-31-15	150-199
	7		W0806	658B	22		23-31-15	150-199
	8	UNUSED						150-199
	9	UNUSED						150-199
	10	UNUSED						150-199
	11	UNUSED						150-199
	12	UNUSED						150-199
D03236		0859/270/L073		RCPT-				150-199
	1		W0806	232R	22		23-31-15	150-199
	2		W0806	232B	22		23-31-15	150-199
	3		W0806	078	20		33-24-12	150-199
	4		W0806	079	20		33-24-12	150-199
	5		W0806	080	20		33-24-12	150-199
	6		W0806	660R	22		23-31-15	150-199
	7		W0806	660B	22		23-31-15	150-199
	8	UNUSED						150-199
	9	UNUSED						150-199
	10	UNUSED						150-199
	11	UNUSED						150-199
	12	UNUSED						150-199

HOOKUP LIST

D280T132

91-21-51

Section D03200

Page 8

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03238		0875/270/L073		RCPT-				050-099
D03238		0889/270/L073		RCPT-				150-199
D03238		0879/270/L073		RCPT-				275-299
	1		W0800	234R	22		23-31-15	050-099
	1		W0806	234R	22		23-31-15	150-199, 275-278
	1		W0806	216R	22		23-31-15	280-299
	2		W0800	234B	22		23-31-15	050-099
	2		W0806	234B	22		23-31-15	150-199, 275-278
	2		W0806	216B	22		23-31-15	280-299
	3		W0800	083	22		33-24-12	050-099
	3		W0806	083	20		33-24-12	150-199, 275-299
	4		W0800	084	22		33-24-12	050-099
	4		W0806	084	20		33-24-12	150-199, 275-299
	5		W0800	085	20		33-24-12	050-099
	5		W0806	085	20		33-24-12	150-199, 275-299
	6		W0800	284R	22		23-31-15	050-099
	6		W0806	662R	22		23-31-15	150-199
	7		W0800	284B	22		23-31-15	050-099
	7		W0806	662B	22		23-31-15	150-199
	8	UNUSED						050-099, 150-199
	9	UNUSED						050-099, 150-199
	10	UNUSED						050-099, 150-199
	11	UNUSED						050-099, 150-199
	12	UNUSED						050-099, 150-199
D03240		0893/270/L073		RCPT-				050-099, 275-299
D03240		0919/270/L073		RCPT-				150-199
	1		W0800	236R	22		23-31-15	050-099
	1		W0806	236R	22		23-31-15	150-199, 275-278
	1		W0806	218R	22		23-31-15	280-299
	2		W0800	236B	22		23-31-15	050-099
	2		W0806	236B	22		23-31-15	150-199, 275-278
	2		W0806	218B	22		23-31-15	280-299
	3		W0800	088	22		33-24-12	050-099
	3		W0806	088	20		33-24-12	150-199, 275-299
	4		W0800	089	22		33-24-12	050-099
	4		W0806	089	20		33-24-12	150-199, 275-299
	5		W0800	090	20		33-24-12	050-099
	5		W0806	090	20		33-24-12	150-199, 275-299
	6		W0800	286R	22		23-31-15	050-099
	6		W0806	663R	22		23-31-15	150-199

HOOKUP LIST

D280T132

91-21-51

Section D03200

Page 9

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03240		0893/270/L073		RCPT- (continued)				050-099, 275-299
D03240		0919/270/L073		RCPT- (continued)				150-199
	7		W0800	286B	22		23-31-15	050-099
	7		W0806	663B	22		23-31-15	150-199
	8	UNUSED						050-099, 150-199
	9	UNUSED						050-099, 150-199
	10	UNUSED						050-099, 150-199
	11	UNUSED						050-099, 150-199
	12	UNUSED						050-099, 150-199
D03242		0923/270/L073		RCPT-				050-099
D03242		0926/270/L073		RCPT-				275-299
	1		W0800	238R	22		23-31-15	050-099
	1		W0806	238R	22		23-31-15	275-278
	1		W0806	220R	22		23-31-15	280-299
	2		W0800	238B	22		23-31-15	050-099
	2		W0806	238B	22		23-31-15	275-278
	2		W0806	220B	22		23-31-15	280-299
	3		W0800	093	22		33-24-12	050-099
	3		W0806	093	20		33-24-12	275-299
	4		W0800	094	22		33-24-12	050-099
	4		W0806	094	20		33-24-12	275-299
	5		W0800	095	20		33-24-12	050-099
	5		W0806	095	20		33-24-12	275-299
	6		W0800	288R	22		23-31-15	050-099
	7		W0800	288B	22		23-31-15	050-099
	8	UNUSED						050-099
	9	UNUSED						050-099
	10	UNUSED						050-099
	11	UNUSED						050-099
	12	UNUSED						050-099
D03244		0940/270/L073		RCPT-				050-099
D03244		0955/270/L073		RCPT-				275-299
	1		W0800	240R	22		23-31-15	050-099
	1		W0806	240R	22		23-31-15	275-278
	1		W0806	222R	22		23-31-15	280-299
	2		W0800	240B	22		23-31-15	050-099
	2		W0806	240B	22		23-31-15	275-278
	2		W0806	222B	22		23-31-15	280-299
	3		W0800	098	22		33-24-12	050-099

HOOKUP LIST

D280T132

91-21-51

Section D03200

Page 10

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03244		0940/270/L073		RCPT- (continued)				050-099
D03244		0955/270/L073		RCPT- (continued)				275-299
	3		W0806	098	20		33-24-12	275-299
	4		W0800	099	22		33-24-12	050-099
	4		W0806	099	20		33-24-12	275-299
	5		W0800	100	20		33-24-12	050-099
	5		W0806	100	20		33-24-12	275-299
	6		W0800	290R	22		23-31-15	050-099
	7		W0800	290B	22		23-31-15	050-099
	8	UNUSED						050-099
	9	UNUSED						050-099
	10	UNUSED						050-099
	11	UNUSED						050-099
	12	UNUSED						050-099
D03246		0970/270/L073		RCPT-				050-099
D03246		1007/270/L073		RCPT-				150-199
D03246		0983/270/L073		RCPT-				275-299
	1		W0800	242R	22		23-31-15	050-099
	1		W0806	242R	22		23-31-15	150-199, 275-278
	1		W0806	224R	22		23-31-15	280-299
	2		W0800	242B	22		23-31-15	050-099
	2		W0806	242B	22		23-31-15	150-199, 275-278
	2		W0806	224B	22		23-31-15	280-299
	3		W0800	103	22		33-24-12	050-099
	3		W0806	103	20		33-24-12	150-199, 275-299
	4		W0800	104	22		33-24-12	050-099
	4		W0806	104	20		33-24-12	150-199, 275-299
	5		W0800	105	20		33-24-12	050-099
	5		W0806	105	20		33-24-12	150-199, 275-299
	6		W0800	292R	22		23-31-15	050-099
	6		W0806	666R	22		23-31-15	150-199
	7		W0800	292B	22		23-31-15	050-099
	7		W0806	666B	22		23-31-15	150-199
	8	UNUSED						050-099, 150-199
	9	UNUSED						050-099, 150-199
	10	UNUSED						050-099, 150-199
	11	UNUSED						050-099, 150-199
	12	UNUSED						050-099, 150-199

HOOKUP LIST

D280T132

91-21-51

Section D03200

Page 11

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03248		0999/270/L073		RCPT-				050-099
D03248		1028/270/L073		RCPT-				150-199
D03248		1013/270/L073		RCPT-				275-299
	1		W0800	244R	22		23-31-15	050-099
	1		W0806	244R	22		23-31-15	150-199, 275-278
	1		W0806	226R	22		23-31-15	280-299
	2		W0800	244B	22		23-31-15	050-099
	2		W0806	244B	22		23-31-15	150-199, 275-278
	2		W0806	226B	22		23-31-15	280-299
	3		W0800	108	22		33-24-12	050-099
	3		W0806	108	20		33-24-12	150-199, 275-299
	4		W0800	109	22		33-24-12	050-099
	4		W0806	109	20		33-24-12	150-199, 275-299
	5		W0800	110	20		33-24-12	050-099
	5		W0806	110	20		33-24-12	150-199, 275-299
	6		W0800	294R	22		23-31-15	050-099
	6		W0806	667R	22		23-31-15	150-199
	7		W0800	294B	22		23-31-15	050-099
	7		W0806	667B	22		23-31-15	150-199
	8	UNUSED						050-099, 150-199
	9	UNUSED						050-099, 150-199
	10	UNUSED						050-099, 150-199
	11	UNUSED						050-099, 150-199
	12	UNUSED						050-099, 150-199
D03250		NL155/155/R3		PLUG-STRUT				ALL
	A		W0376	096	18		75-23-11	ALL
	B		W0376	098	18		75-23-11	ALL
	C		W0376	111	18		75-23-11	ALL
D03252		P006-00/ /		PLUG-				ALL
	A1	UNUSED						ALL
	A2		W1040	023	14		24-33-11	ALL
	A3		W1040	059	12		24-54-73	ALL
	B1	UNUSED						ALL
	B2	UNUSED						ALL
	B3	UNUSED						ALL
	C1	UNUSED						ALL
	C2		W1040	024	16		24-33-11	ALL
	C3		W1040	018	14		24-54-73	ALL

HOOKUP LIST

D280T132

91-21-51

Section D03200

Page 12

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03252		P006-00/ /		PLUG- (continued)				ALL
	X1		W1040	035	24		24-33-11	ALL
	X2		W1040	034	24		24-33-11	ALL
	DED		W1040	035Z			24-33-11	ALL
D03260		0396/280/L005		RCPT-				050-099, 150-199, 275
D03260		396/280/L005		RCPT-				276-299
	1		W1138	204R	22		23-31-16	050-099, 276-299
	1		W1138	202R	22		23-31-16	150-199, 275
	2		W1138	204B	22		23-31-16	050-099, 276-299
	2		W1138	202B	22		23-31-16	150-199, 275
	3		W1138	113	22		33-24-13	050-099
	3		W1138	009	20		33-24-13	150-199, 275
	3		W1138	113	20		33-24-13	276-299
	4		W1138	114	22		33-24-13	050-099
	4		W1138	008	20		33-24-13	150-199, 275
	4		W1138	114	20		33-24-13	276-299
	5		W1138	115	20		33-24-13	050-099, 276-299
	5		W1138	010	20		33-24-13	150-199, 275
	6		W1138	254R	22		23-31-16	050-099
	6		W1138	212R	22		23-31-16	150-199
	7		W1138	254B	22		23-31-16	050-099
	7		W1138	212B	22		23-31-16	150-199
	8	UNUSED						050-099, 150-199
	9	UNUSED						050-099, 150-199
	10	UNUSED						050-099, 150-199
	11	UNUSED						050-099, 150-199
	12	UNUSED						050-099, 150-199
D03262		0427/280/L005		RCPT-				ALL
	1		W1138	206R	22		23-31-16	050-099, 276-299
	1		W1138	204R	22		23-31-16	150-199, 275
	2		W1138	206B	22		23-31-16	050-099, 276-299
	2		W1138	204B	22		23-31-16	150-199, 275
	3		W1138	123	22		33-24-13	050-099
	3		W1138	014	20		33-24-13	150-199, 275
	3		W1138	123	20		33-24-13	276-299
	4		W1138	124	22		33-24-13	050-099
	4		W1138	013	20		33-24-13	150-199, 275
	4		W1138	124	20		33-24-13	276-299
	5		W1138	125	20		33-24-13	050-099, 276-299

HOOKUP LIST

D280T132

91-21-51

Section D03200

Page 13

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03262		0427/280/L005		RCPT- (continued)				ALL
	5		W1138	015	20		33-24-13	150-199, 275
	6		W1138	256R	22		23-31-16	050-099
	6		W1138	214R	22		23-31-16	150-199
	7		W1138	256B	22		23-31-16	050-099
	7		W1138	214B	22		23-31-16	150-199
	8	UNUSED						050-099, 150-199
	9	UNUSED						050-099, 150-199
	10	UNUSED						050-099, 150-199
	11	UNUSED						050-099, 150-199
	12	UNUSED						050-099, 150-199
D03264		0453/280/L005		RCPT-				ALL
	1		W1138	208R	22		23-31-16	050-099, 276-299
	1		W1138	206R	22		23-31-16	150-199, 275
	2		W1138	208B	22		23-31-16	050-099, 276-299
	2		W1138	206B	22		23-31-16	150-199, 275
	3		W1138	133	22		33-24-13	050-099
	3		W1138	019	20		33-24-13	150-199, 275
	3		W1138	133	20		33-24-13	276-299
	4		W1138	134	22		33-24-13	050-099
	4		W1138	018	20		33-24-13	150-199, 275
	4		W1138	134	20		33-24-13	276-299
	5		W1138	135	20		33-24-13	050-099, 276-299
	5		W1138	020	20		33-24-13	150-199, 275
	6		W1138	258R	22		23-31-16	050-099
	6		W1138	216R	22		23-31-16	150-199
	7		W1138	258B	22		23-31-16	050-099
	7		W1138	216B	22		23-31-16	150-199
	8	UNUSED						050-099, 150-199
	9	UNUSED						050-099, 150-199
	10	UNUSED						050-099, 150-199
	11	UNUSED						050-099, 150-199
	12	UNUSED						050-099, 150-199
D03266		0480/280/L005		RCPT-				ALL
	1		W1138	210R	22		23-31-16	050-099, 276-299
	1		W1138	208R	22		23-31-16	150-199, 275
	2		W1138	210B	22		23-31-16	050-099, 276-299
	2		W1138	208B	22		23-31-16	150-199, 275
	3		W1138	143	22		33-24-13	050-099

HOOKUP LIST

D280T132

91-21-51

Section D03200

Page 14

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03266		0480/280/L005		RCPT- (continued)				ALL
	3		W1138	024	20		33-24-13	150-199, 275
	3		W1138	143	20		33-24-13	276-299
	4		W1138	144	22		33-24-13	050-099
	4		W1138	023	20		33-24-13	150-199, 275
	4		W1138	144	20		33-24-13	276-299
	5		W1138	145	20		33-24-13	050-099, 276-299
	5		W1138	025	20		33-24-13	150-199, 275
	6		W1138	260R	22		23-31-16	050-099
	6		W1138	218R	22		23-31-16	150-199
	7		W1138	260B	22		23-31-16	050-099
	7		W1138	218B	22		23-31-16	150-199
	8	UNUSED						050-099, 150-199
	9	UNUSED						050-099, 150-199
	10	UNUSED						050-099, 150-199
	11	UNUSED						050-099, 150-199
	12	UNUSED						050-099, 150-199
D03268		0504/280/L005		RCPT-				ALL
	1		W1140	202R	22		23-31-16	050-099, 276-299
	1		W1140	210R	22		23-31-16	150-199, 275
	2		W1140	202B	22		23-31-16	050-099, 276-299
	2		W1140	210B	22		23-31-16	150-199, 275
	3		W1140	103	22		33-24-13	050-099
	3		W1140	003	20		33-24-13	150-199, 275
	3		W1140	103	20		33-24-13	276-299
	4		W1140	104	22		33-24-13	050-099
	4		W1140	004	20		33-24-13	150-199, 275
	4		W1140	104	20		33-24-13	276-299
	5		W1140	105	20		33-24-13	050-099, 276-299
	5		W1140	005	20		33-24-13	150-199, 275
	6		W1140	252R	22		23-31-16	050-099
	6		W1140	223R	22		23-31-16	150-199
	7		W1140	252B	22		23-31-16	050-099
	7		W1140	223B	22		23-31-16	150-199
	8	UNUSED						050-099, 150-199
	9	UNUSED						050-099, 150-199
	10	UNUSED						050-099, 150-199
	11	UNUSED						050-099, 150-199
	12	UNUSED						050-099, 150-199

HOOKUP LIST

D280T132

91-21-51

Section D03200

Page 15

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03270		0528/280/L005		RCPT-				050-099, 150-199, 275
D03270		528/280/L005		RCPT-				276-299
	1		W1140	204R	22		23-31-16	050-099, 276-299
	1		W1140	212R	22		23-31-16	150-199, 275
	2		W1140	204B	22		23-31-16	050-099, 276-299
	2		W1140	212B	22		23-31-16	150-199, 275
	3		W1140	113	22		33-24-13	050-099
	3		W1140	008	20		33-24-13	150-199, 275
	3		W1140	113	20		33-24-13	276-299
	4		W1140	114	22		33-24-13	050-099
	4		W1140	009	20		33-24-13	150-199, 275
	4		W1140	114	20		33-24-13	276-299
	5		W1140	115	20		33-24-13	050-099, 276-299
	5		W1140	010	20		33-24-13	150-199, 275
	6		W1140	254R	22		23-31-16	050-099
	6		W1140	225R	22		23-31-16	150-199
	7		W1140	254B	22		23-31-16	050-099
	7		W1140	225B	22		23-31-16	150-199
	8	UNUSED						050-099, 150-199
	9	UNUSED						050-099, 150-199
	10	UNUSED						050-099, 150-199
	11	UNUSED						050-099, 150-199
	12	UNUSED						050-099, 150-199
D03272		0559/280/L005		RCPT-				ALL
	1		W1140	206R	22		23-31-16	050-099, 276-299
	1		W1140	214R	22		23-31-16	150-199, 275
	2		W1140	206B	22		23-31-16	050-099, 276-299
	2		W1140	214B	22		23-31-16	150-199, 275
	3		W1140	123	22		33-24-13	050-099
	3		W1140	013	20		33-24-13	150-199, 275
	3		W1140	123	20		33-24-13	276-299
	4		W1140	124	22		33-24-13	050-099
	4		W1140	014	20		33-24-13	150-199, 275
	4		W1140	124	20		33-24-13	276-299
	5		W1140	125	20		33-24-13	050-099, 276-299
	5		W1140	015	20		33-24-13	150-199, 275
	6		W1140	256R	22		23-31-16	050-099
	6		W1140	227R	22		23-31-16	150-199
	7		W1140	256B	22		23-31-16	050-099
	7		W1140	227B	22		23-31-16	150-199

HOOKUP LIST

D280T132

91-21-51

Section D03200

Page 16

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03272		0559/280/L005		RCPT- (continued)				ALL
	8	UNUSED						050-099, 150-199
	9	UNUSED						050-099, 150-199
	10	UNUSED						050-099, 150-199
	11	UNUSED						050-099, 150-199
	12	UNUSED						050-099, 150-199
D03274		0585/280/L005		RCPT-				ALL
	1		W1140	208R	22		23-31-16	050-099, 276-299
	1		W1140	216R	22		23-31-16	150-199, 275
	2		W1140	208B	22		23-31-16	050-099, 276-299
	2		W1140	216B	22		23-31-16	150-199, 275
	3		W1140	133	22		33-24-13	050-099
	3		W1140	018	20		33-24-13	150-199, 275
	3		W1140	133	20		33-24-13	276-299
	4		W1140	134	22		33-24-13	050-099
	4		W1140	019	20		33-24-13	150-199, 275
	4		W1140	134	20		33-24-13	276-299
	5		W1140	135	20		33-24-13	050-099, 276-299
	5		W1140	020	20		33-24-13	150-199, 275
	6		W1140	258R	22		23-31-16	050-099
	6		W1140	229R	22		23-31-16	150-199
	7		W1140	258B	22		23-31-16	050-099
	7		W1140	229B	22		23-31-16	150-199
	8	UNUSED						050-099, 150-199
	9	UNUSED						050-099, 150-199
	10	UNUSED						050-099, 150-199
	11	UNUSED						050-099, 150-199
	12	UNUSED						050-099, 150-199
D03276		0612/280/L005		RCPT-				ALL
	1		W1140	210R	22		23-31-16	050-099, 276-299
	1		W1140	218R	22		23-31-16	150-199, 275
	2		W1140	210B	22		23-31-16	050-099, 276-299
	2		W1140	218B	22		23-31-16	150-199, 275
	3		W1140	143	22		33-24-13	050-099
	3		W1140	024	20		33-24-13	150-199, 275
	3		W1140	143	20		33-24-13	276-299
	4		W1140	144	22		33-24-13	050-099
	4		W1140	023	20		33-24-13	150-199, 275
	4		W1140	144	20		33-24-13	276-299

HOOKUP LIST
D280T132

91-21-51
Section D03200
Page 17
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03276		0612/280/L005		RCPT- (continued)				ALL
	5		W1140	145	20		33-24-13	050-099, 276-299
	5		W1140	025	20		33-24-13	150-199, 275
	6		W1140	260R	22		23-31-16	050-099
	6		W1140	231R	22		23-31-16	150-199
	7		W1140	260B	22		23-31-16	050-099
	7		W1140	231B	22		23-31-16	150-199
	8	UNUSED						050-099, 150-199
	9	UNUSED						050-099, 150-199
	10	UNUSED						050-099, 150-199
	11	UNUSED						050-099, 150-199
	12	UNUSED						050-099, 150-199
D03278		0636/280/L005		RCPT-				050-099, 275-299
D03278		636/280/L005		RCPT-				150-199
	1		W1280	202R	22		23-31-16	050-099, 150-199
	1		W1142	220R	22		23-31-16	275
	1		W1142	202R	22		23-31-16	276-299
	2		W1280	202B	22		23-31-16	050-099, 150-199
	2		W1142	220B	22		23-31-16	275
	2		W1142	202B	22		23-31-16	276-299
	3		W1280	103	22		33-24-13	050-099
	3		W1280	004	20		33-24-13	150-199
	3		W1142	004	20		33-24-13	275
	3		W1142	103	20		33-24-13	276-299
	4		W1280	104	22		33-24-13	050-099
	4		W1280	003	20		33-24-13	150-199
	4		W1142	003	20		33-24-13	275
	4		W1142	104	20		33-24-13	276-299
	5		W1280	105	20		33-24-13	050-099
	5		W1280	005	20		33-24-13	150-199
	5		W1142	005	20		33-24-13	275
	5		W1142	105	20		33-24-13	276-299
	6		W1280	252R	22		23-31-16	050-099
	6		W1280	239R	22		23-31-16	150-199
	7		W1280	252B	22		23-31-16	050-099
	7		W1280	239B	22		23-31-16	150-199
	8	UNUSED						050-099, 150-199
	9	UNUSED						050-099, 150-199
	10	UNUSED						050-099, 150-199
	11	UNUSED						050-099, 150-199

HOOKUP LIST

D280T132

91-21-51

Section D03200

Page 18

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03278		0636/280/L005		RCPT- (continued)				050-099, 275-299
D03278		636/280/L005		RCPT- (continued)				150-199
	12	UNUSED						050-099, 150-199
D03280		659/280/L005		RCPT-				050-099
D03280		654+06/280/L005		RCPT-				150-199
D03280		0654+006/280/L005		RCPT-				275-299
	1		W1280	204R	22		23-31-16	050-099
	1		W1280	215R	22		23-31-16	150-199
	1		W1142	222R	22		23-31-16	275
	1		W1142	204R	22		23-31-16	276-299
	2		W1280	204B	22		23-31-16	050-099
	2		W1280	215B	22		23-31-16	150-199
	2		W1142	222B	22		23-31-16	275
	2		W1142	204B	22		23-31-16	276-299
	3		W1280	113	22		33-24-13	050-099
	3		W1280	074	20		33-24-13	150-199
	3		W1142	009	20		33-24-13	275
	3		W1142	113	20		33-24-13	276-299
	4		W1280	114	22		33-24-13	050-099
	4		W1280	075	20		33-24-13	150-199
	4		W1142	008	20		33-24-13	275
	4		W1142	114	20		33-24-13	276-299
	5		W1280	115	20		33-24-13	050-099
	5		W1280	076	20		33-24-13	150-199
	5		W1142	010	20		33-24-13	275
	5		W1142	115	20		33-24-13	276-299
	6		W1280	254R	22		23-31-16	050-099
	6		W1280	241R	22		23-31-16	150-199
	7		W1280	254B	22		23-31-16	050-099
	7		W1280	241B	22		23-31-16	150-199
	8	UNUSED						050-099, 150-199
	9	UNUSED						050-099, 150-199
	10	UNUSED						050-099, 150-199
	11	UNUSED						050-099, 150-199
	12	UNUSED						050-099, 150-199
D03282		690/280/L005		RCPT-				050-099
D03282		654+37/280/L005		RCPT-				150-199
D03282		0654+037/280/L005		RCPT-				275-299
	1		W1280	206R	22		23-31-16	050-099

HOOKUP LIST

D280T132

91-21-51

Section D03200

Page 19

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03282		690/280/L005		RCPT- (continued)				050-099
D03282		654+37/280/L005		RCPT- (continued)				150-199
D03282		0654+037/280/L005		RCPT- (continued)				275-299
	1		W1280	212R	22		23-31-16	150-199
	1		W1142	224R	22		23-31-16	275
	1		W1142	206R	22		23-31-16	276-299
	2		W1280	206B	22		23-31-16	050-099
	2		W1280	212B	22		23-31-16	150-199
	2		W1142	224B	22		23-31-16	275
	2		W1142	206B	22		23-31-16	276-299
	3		W1280	123	22		33-24-13	050-099
	3		W1280	052	20		33-24-13	150-199
	3		W1142	014	20		33-24-13	275
	3		W1142	123	20		33-24-13	276-299
	4		W1280	124	22		33-24-13	050-099
	4		W1280	053	20		33-24-13	150-199
	4		W1142	013	20		33-24-13	275
	4		W1142	124	20		33-24-13	276-299
	5		W1280	125	20		33-24-13	050-099
	5		W1280	054	20		33-24-13	150-199
	5		W1142	015	20		33-24-13	275
	5		W1142	125	20		33-24-13	276-299
	6		W1280	256R	22		23-31-16	050-099
	6		W1280	243R	22		23-31-16	150-199
	7		W1280	256B	22		23-31-16	050-099
	7		W1280	243B	22		23-31-16	150-199
	8	UNUSED						050-099, 150-199
	9	UNUSED						050-099, 150-199
	10	UNUSED						050-099, 150-199
	11	UNUSED						050-099, 150-199
	12	UNUSED						050-099, 150-199
D03286		0893/280/L005		RCPT-				050-099
D03286		0820/280/L005		RCPT-				150-199
D03286		893/280/L 5		RECPT				280-299
	1		W1144	202R	22		23-31-16	050-099
	1		W1280	228R	22		23-31-16	150-199
	1		W1280	232R	22		23-31-16	280-299
	2		W1144	202B	22		23-31-16	050-099
	2		W1280	228B	22		23-31-16	150-199
	2		W1280	232B	22		23-31-16	280-299

HOOKUP LIST

D280T132

91-21-51

Section D03200

Page 20

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03286		0893/280/L005		RCPT- (continued)				050-099
D03286		0820/280/L005		RCPT- (continued)				150-199
D03286		893/280/L 5		RECPT (continued)				280-299
	3		W1144	103	22		33-24-13	050-099
	3		W1280	018	20		33-24-13	150-199
	3		W1280	643	20		33-24-13	280-299
	4		W1144	104	22		33-24-13	050-099
	4		W1280	019	20		33-24-13	150-199
	4		W1280	644	20		33-24-13	280-299
	5		W1144	105	20		33-24-13	050-099
	5		W1280	020	20		33-24-13	150-199
	5		W1280	645	20		33-24-13	280-299
	6		W1144	252R	22		23-31-16	050-099
	6		W1280	252R	22		23-31-16	150-199
	7		W1144	252B	22		23-31-16	050-099
	7		W1280	252B	22		23-31-16	150-199
	8	UNUSED						050-099, 150-199
	9	UNUSED						050-099, 150-199
	10	UNUSED						050-099, 150-199
	11	UNUSED						050-099, 150-199
	12	UNUSED						050-099, 150-199
D03288		0917/280/L005		RCPT-				050-099
D03288		0915/280/L005		RCPT				275-299
	1		W1144	204R	22		23-31-16	050-099
	1		W1280	225R	22		23-31-16	275-278
	1		W1280	234R	22		23-31-16	280-299
	2		W1144	204B	22		23-31-16	050-099
	2		W1280	225B	22		23-31-16	275-278
	2		W1280	234B	22		23-31-16	280-299
	3		W1144	113	22		33-24-13	050-099
	3		W1280	043	20		33-24-13	275-278
	3		W1280	653	20		33-24-13	280-299
	4		W1144	114	22		33-24-13	050-099
	4		W1280	044	20		33-24-13	275-278
	4		W1280	654	20		33-24-13	280-299
	5		W1144	115	20		33-24-13	050-099
	5		W1280	045	20		33-24-13	275-278
	5		W1280	655	20		33-24-13	280-299
	6		W1144	254R	22		23-31-16	050-099
	7		W1144	254B	22		23-31-16	050-099

HOOKUP LIST

D280T132

91-21-51

Section D03200

Page 21

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03288		0917/280/L005		RCPT- (continued)				050-099
D03288		0915/280/L005		RCPT (continued)				275-299
	8	UNUSED						050-099
	9	UNUSED						050-099
	10	UNUSED						050-099
	11	UNUSED						050-099
	12	UNUSED						050-099
D03290		0948/280/L005		RCPT-				050-099
D03290		0946/280/L005		RCPT-				275-299
	1		W1144	206R	22		23-31-16	050-099
	1		W1280	232R	22		23-31-16	275-278
	1		W1280	236R	22		23-31-16	280-299
	2		W1144	206B	22		23-31-16	050-099
	2		W1280	232B	22		23-31-16	275-278
	2		W1280	236B	22		23-31-16	280-299
	3		W1144	123	22		33-24-13	050-099
	3		W1280	026	20		33-24-13	275-278
	3		W1280	663	20		33-24-13	280-299
	4		W1144	124	22		33-24-13	050-099
	4		W1280	025	20		33-24-13	275-278
	4		W1280	664	20		33-24-13	280-299
	5		W1144	125	20		33-24-13	050-099
	5		W1280	027	20		33-24-13	275-278
	5		W1280	665	20		33-24-13	280-299
	6		W1144	256R	22		23-31-16	050-099
	7		W1144	256B	22		23-31-16	050-099
	8	UNUSED						050-099
	9	UNUSED						050-099
	10	UNUSED						050-099
	11	UNUSED						050-099
	12	UNUSED						050-099
D03292		0974/280/L005		RCPT-				050-099
D03292		0972/280/L005		RCPT-				275-299
	1		W1144	208R	22		23-31-16	050-099
	1		W1280	234R	22		23-31-16	275-278
	1		W1280	238R	22		23-31-16	280-299
	2		W1144	208B	22		23-31-16	050-099
	2		W1280	234B	22		23-31-16	275-278
	2		W1280	238B	22		23-31-16	280-299

HOOKUP LIST

D280T132

91-21-51

Section D03200

Page 22

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03292		0974/280/L005		RCPT- (continued)				050-099
D03292		0972/280/L005		RCPT- (continued)				275-299
	3		W1144	133	22		33-24-13	050-099
	3		W1280	031	20		33-24-13	275-278
	3		W1280	673	20		33-24-13	280-299
	4		W1144	134	22		33-24-13	050-099
	4		W1280	030	20		33-24-13	275-278
	4		W1280	674	20		33-24-13	280-299
	5		W1144	135	20		33-24-13	050-099
	5		W1280	032	20		33-24-13	275-278
	5		W1280	675	20		33-24-13	280-299
	6		W1144	258R	22		23-31-16	050-099
	7		W1144	258B	22		23-31-16	050-099
	8	UNUSED						050-099
	9	UNUSED						050-099
	10	UNUSED						050-099
	11	UNUSED						050-099
	12	UNUSED						050-099
D03294		1001/280/L005		RCPT-				050-099
D03294		1009/280/L005		RCPT-				150-199
D03294		1000/280/L005		RCPT-				275-299
	1		W1144	210R	22		23-31-16	050-099
	1		W1280	220R	22		23-31-16	150-199
	1		W1280	236R	22		23-31-16	275-278
	1		W1280	240R	22		23-31-16	280-299
	2		W1144	210B	22		23-31-16	050-099
	2		W1280	220B	22		23-31-16	150-199
	2		W1280	236B	22		23-31-16	275-278
	2		W1280	240B	22		23-31-16	280-299
	3		W1144	143	22		33-24-13	050-099
	3		W1280	011	20		33-24-13	150-199
	3		W1280	036	20		33-24-13	275-278
	3		W1280	683	20		33-24-13	280-299
	4		W1144	144	22		33-24-13	050-099
	4		W1280	013	20		33-24-13	150-199
	4		W1280	035	20		33-24-13	275-278
	4		W1280	684	20		33-24-13	280-299
	5		W1144	145	20		33-24-13	050-099
	5		W1280	012	20		33-24-13	150-199
	5		W1280	037	20		33-24-13	275-278

HOOKUP LIST

D280T132

91-21-51

Section D03200

Page 23

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03294		1001/280/L005		RCPT- (continued)				050-099
D03294		1009/280/L005		RCPT- (continued)				150-199
D03294		1000/280/L005		RCPT- (continued)				275-299
	5		W1280	685	20		33-24-13	280-299
	6		W1144	260R	22		23-31-16	050-099
	6		W1280	205R	22		23-31-16	150-199
	7		W1144	260B	22		23-31-16	050-099
	7		W1280	205B	22		23-31-16	150-199
	8	UNUSED						050-099, 150-199
	9	UNUSED						050-099, 150-199
	10	UNUSED						050-099, 150-199
	11	UNUSED						050-099, 150-199
	12	UNUSED						050-099, 150-199
D03296		1025/280/L005		RCPT-				ALL
	1		W1146	202R	22		23-31-16	050-099, 276-299
	1		W1146	230R	22		23-31-16	150-199, 275
	2		W1146	202B	22		23-31-16	050-099, 276-299
	2		W1146	230B	22		23-31-16	150-199, 275
	3		W1146	103	22		33-24-13	050-099
	3		W1146	003	20		33-24-13	150-199, 275
	3		W1146	103	20		33-24-13	276-299
	4		W1146	104	22		33-24-13	050-099
	4		W1146	004	20		33-24-13	150-199, 275
	4		W1146	104	20		33-24-13	276-299
	5		W1146	105	20		33-24-13	050-099, 276-299
	5		W1146	005	20		33-24-13	150-199, 275
	6		W1146	252R	22		23-31-16	050-099
	6		W1146	212R	22		23-31-16	150-199
	7		W1146	252B	22		23-31-16	050-099
	7		W1146	212B	22		23-31-16	150-199
	8	UNUSED						050-099, 150-199
	9	UNUSED						050-099, 150-199
	10	UNUSED						050-099, 150-199
	11	UNUSED						050-099, 150-199
	12	UNUSED						050-099, 150-199
D03298		1049/280/L005		RCPT-				ALL
	1		W1146	204R	22		23-31-16	050-099, 276-299
	1		W1146	234R	22		23-31-16	150-199, 275
	2		W1146	204B	22		23-31-16	050-099, 276-299

HOOKUP LIST

D280T132

91-21-51

Section D03200

Page 24

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03298		1049/280/L005		RCPT- (continued)				ALL
	2		W1146	234B	22		23-31-16	150-199, 275
	3		W1146	113	22		33-24-13	050-099
	3		W1146	008	20		33-24-13	150-199, 275
	3		W1146	113	20		33-24-13	276-299
	4		W1146	114	22		33-24-13	050-099
	4		W1146	009	20		33-24-13	150-199, 275
	4		W1146	114	20		33-24-13	276-299
	5		W1146	115	20		33-24-13	050-099, 276-299
	5		W1146	010	20		33-24-13	150-199, 275
	6		W1146	254R	22		23-31-16	050-099
	6		W1146	211R	22		23-31-16	150-199
	7		W1146	254B	22		23-31-16	050-099
	7		W1146	211B	22		23-31-16	150-199
	8	UNUSED						050-099, 150-199
	9	UNUSED						050-099, 150-199
	10	UNUSED						050-099, 150-199
	11	UNUSED						050-099, 150-199
	12	UNUSED						050-099, 150-199

HOOKUP LIST

D280T132

91-21-51

Section D03200
Page 25 End
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03300		1080/280/L005		RCPT-				ALL
	1		W1146	206R	22		23-31-16	050-099, 276-299
	1		W1146	235R	22		23-31-16	150-199, 275
	2		W1146	206B	22		23-31-16	050-099, 276-299
	2		W1146	235B	22		23-31-16	150-199, 275
	3		W1146	123	22		33-24-13	050-099
	3		W1146	013	20		33-24-13	150-199, 275
	3		W1146	123	20		33-24-13	276-299
	4		W1146	124	22		33-24-13	050-099
	4		W1146	014	20		33-24-13	150-199, 275
	4		W1146	124	20		33-24-13	276-299
	5		W1146	125	20		33-24-13	050-099, 276-299
	5		W1146	015	20		33-24-13	150-199, 275
	6		W1146	256R	22		23-31-16	050-099, 150-199
	7		W1146	256B	22		23-31-16	050-099, 150-199
	8	UNUSED						050-099, 150-199
	9	UNUSED						050-099, 150-199
	10	UNUSED						050-099, 150-199
	11	UNUSED						050-099, 150-199
	12	UNUSED						050-099, 150-199
D03302		1106/280/L005		RCPT-				ALL
	1		W1146	208R	22		23-31-16	050-099, 276-299
	1		W1146	236R	22		23-31-16	150-199, 275
	2		W1146	208B	22		23-31-16	050-099, 276-299
	2		W1146	236B	22		23-31-16	150-199, 275
	3		W1146	133	22		33-24-13	050-099
	3		W1146	019	20		33-24-13	150-199, 275
	3		W1146	133	20		33-24-13	276-299
	4		W1146	134	22		33-24-13	050-099
	4		W1146	018	20		33-24-13	150-199, 275
	4		W1146	134	20		33-24-13	276-299
	5		W1146	135	20		33-24-13	050-099, 276-299
	5		W1146	020	20		33-24-13	150-199, 275
	6		W1146	258R	22		23-31-16	050-099
	6		W1146	257R	22		23-31-16	150-199
	7		W1146	258B	22		23-31-16	050-099
	7		W1146	257B	22		23-31-16	150-199
	8	UNUSED						050-099, 150-199
	9	UNUSED						050-099, 150-199
	10	UNUSED						050-099, 150-199

HOOKUP LIST

D280T132

91-21-51

Section D03300

Page 1

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03302		1106/280/L005		RCPT- (continued)				ALL
	11	UNUSED						050-099, 150-199
	12	UNUSED						050-099, 150-199
D03304		0429/270/R073		RCPT-				150-157
D03304		0427/270/R073		RCPT-				275-299
	1		W0804	202R	22		23-31-17	150-157, 275-299
	2		W0804	202B	22		23-31-17	150-157, 275-299
	3		W0804	003	20		33-24-14	150-157, 275-299
	4		W0804	004	20		33-24-14	150-157, 275-299
	5		W0804	005	20		33-24-14	150-157, 275-299
	6		W0804	252R	22		23-31-17	150-157
	7		W0804	252B	22		23-31-17	150-157
	8	UNUSED						150-157
	9	UNUSED						150-157
	10	UNUSED						150-157
	11	UNUSED						150-157
	12	UNUSED						150-157
D03306		0449/270/R070		RCPT-				050-099, 150-199
D03306		0456/270/R070		RCPT-				275-278
D03306		0456/270/R073		RCPT-				280-299
	1		W0804	204R	22		23-31-17	ALL
	2		W0804	204B	22		23-31-17	ALL
	3		W0804	008	22		33-24-14	050-099
	3		W0804	008	20		33-24-14	150-199, 275-299
	4		W0804	009	22		33-24-14	050-099
	4		W0804	009	20		33-24-14	150-199, 275-299
	5		W0804	010	20		33-24-14	ALL
	6		W0804	254R	22		23-31-17	050-099, 150-199
	7		W0804	254B	22		23-31-17	050-099, 150-199
	8	UNUSED						050-099, 150-199
	9	UNUSED						050-099, 150-199
	10	UNUSED						050-099, 150-199
	11	UNUSED						050-099, 150-199
	12	UNUSED						050-099, 150-199
D03308		0463/270/R070		RCPT-				050-099, 150-199, 275-278
D03308		0463/270/R073		RCPT-				280-299
	1		W0804	206R	22		23-31-17	ALL
	2		W0804	206B	22		23-31-17	ALL

HOOKUP LIST

D280T132

91-21-51

Section D03300

Page 2

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03308		0463/270/R070		RCPT- (continued)				050-099, 150-199, 275-278
D03308		0463/270/R073		RCPT- (continued)				280-299
	3		W0804	013	22		33-24-14	050-099
	3		W0804	013	20		33-24-14	150-199, 275-299
	4		W0804	014	22		33-24-14	050-099
	4		W0804	014	20		33-24-14	150-199, 275-299
	5		W0804	015	20		33-24-14	ALL
	6		W0804	256R	22		23-31-17	050-099, 150-199
	7		W0804	256B	22		23-31-17	050-099, 150-199
	8	UNUSED						050-099, 150-199
	9	UNUSED						050-099, 150-199
	10	UNUSED						050-099, 150-199
	11	UNUSED						050-099, 150-199
	12	UNUSED						050-099, 150-199
D03310		0493/270/R070		RCPT-				050-099, 150-199, 275-278
D03310		0493/270/R073		RCPT-				280-299
	1		W0804	208R	22		23-31-17	ALL
	2		W0804	208B	22		23-31-17	ALL
	3		W0804	018	22		33-24-14	050-099
	3		W0804	018	20		33-24-14	150-199, 275-299
	4		W0804	019	22		33-24-14	050-099
	4		W0804	019	20		33-24-14	150-199, 275-299
	5		W0804	020	20		33-24-14	ALL
	6		W0804	258R	22		23-31-17	050-099, 150-199
	7		W0804	258B	22		23-31-17	050-099, 150-199
	8	UNUSED						050-099, 150-199
	9	UNUSED						050-099, 150-199
	10	UNUSED						050-099, 150-199
	11	UNUSED						050-099, 150-199
	12	UNUSED						050-099, 150-199
D03312		0522/270/R070		RCPT-				050-099, 150-199, 275-278
D03312		0522/270/R073		RCPT-				280-299
	1		W0804	210R	22		23-31-17	ALL
	2		W0804	210B	22		23-31-17	ALL
	3		W0804	023	22		33-24-14	050-099
	3		W0804	023	20		33-24-14	150-199, 275-299
	4		W0804	024	22		33-24-14	050-099
	4		W0804	024	20		33-24-14	150-199, 275-299
	5		W0804	025	20		33-24-14	ALL

HOOKUP LIST

D280T132

91-21-51

Section D03300

Page 3

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03312		0522/270/R070		RCPT- (continued)				050-099, 150-199, 275-278
D03312		0522/270/R073		RCPT- (continued)				280-299
	6		W0804	260R	22		23-31-17	050-099, 150-199
	7		W0804	260B	22		23-31-17	050-099, 150-199
	8	UNUSED						050-099, 150-199
	9	UNUSED						050-099, 150-199
	10	UNUSED						050-099, 150-199
	11	UNUSED						050-099, 150-199
	12	UNUSED						050-099, 150-199
D03314		0551/270/R070		RCPT-				050-099, 150-199, 275-278
D03314		0551/270/R073		RCPT-				280-299
	1		W0804	212R	22		23-31-17	ALL
	2		W0804	212B	22		23-31-17	ALL
	3		W0804	028	22		33-24-14	050-099
	3		W0804	028	20		33-24-14	150-199, 275-299
	4		W0804	029	22		33-24-14	050-099
	4		W0804	029	20		33-24-14	150-199, 275-299
	5		W0804	030	20		33-24-14	ALL
	6		W0804	262R	22		23-31-17	050-099, 150-199
	7		W0804	262B	22		23-31-17	050-099, 150-199
	8	UNUSED						050-099, 150-199
	9	UNUSED						050-099, 150-199
	10	UNUSED						050-099, 150-199
	11	UNUSED						050-099, 150-199
	12	UNUSED						050-099, 150-199
D03316		0581/270/R070		RCPT-				050-099, 150-199, 275-278
D03316		0581/270/R073		RCPT-				280-299
	1		W0804	214R	22		23-31-17	ALL
	2		W0804	214B	22		23-31-17	ALL
	3		W0804	033	22		33-24-14	050-099
	3		W0804	033	20		33-24-14	150-199, 275-299
	4		W0804	034	22		33-24-14	050-099
	4		W0804	034	20		33-24-14	150-199, 275-299
	5		W0804	035	20		33-24-14	ALL
	6		W0804	264R	22		23-31-17	050-099, 150-199
	7		W0804	264B	22		23-31-17	050-099, 150-199
	8	UNUSED						050-099, 150-199
	9	UNUSED						050-099, 150-199
	10	UNUSED						050-099, 150-199

HOOKUP LIST

D280T132

91-21-51

Section D03300

Page 4

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03316		0581/270/R070		RCPT- (continued)				050-099, 150-199, 275-278
D03316		0581/270/R073		RCPT- (continued)				280-299
	11	UNUSED						050-099, 150-199
	12	UNUSED						050-099, 150-199
D03318		0610/270/R070		RCPT-				050-099, 150-199, 275-278
D03318		0610/270/R073		RCPT-				280-299
	1		W0804	216R	22		23-31-17	ALL
	2		W0804	216B	22		23-31-17	ALL
	3		W0804	038	22		33-24-14	050-099
	3		W0804	038	20		33-24-14	150-199, 275-299
	4		W0804	039	22		33-24-14	050-099
	4		W0804	039	20		33-24-14	150-199, 275-299
	5		W0804	040	22		33-24-14	050-099
	5		W0804	040	20		33-24-14	150-199, 275-299
	6		W0804	266R	22		23-31-17	050-099, 150-199
	7		W0804	266B	22		23-31-17	050-099, 150-199
	8	UNUSED						050-099, 150-199
	9	UNUSED						050-099, 150-199
	10	UNUSED						050-099, 150-199
	11	UNUSED						050-099, 150-199
	12	UNUSED						050-099, 150-199
D03320		0639/270/R070		RCPT-				050-099, 150-199, 275-278
D03320		0630/270/R074		RCPT-				280-299
	1		W0804	218R	22		23-31-17	ALL
	2		W0804	218B	22		23-31-17	ALL
	3		W0804	043	22		33-24-14	050-099
	3		W0804	043	20		33-24-14	150-199, 275-299
	4		W0804	044	22		33-24-14	050-099
	4		W0804	044	20		33-24-14	150-199, 275-299
	5		W0804	045	20		33-24-14	ALL
	6		W0804	268R	22		23-31-17	050-099, 150-199
	7		W0804	268B	22		23-31-17	050-099, 150-199
	8	UNUSED						050-099, 150-199
	9	UNUSED						050-099, 150-199
	10	UNUSED						050-099, 150-199
	11	UNUSED						050-099, 150-199
	12	UNUSED						050-099, 150-199

HOOKUP LIST

D280T132

91-21-51

Section D03300

Page 5

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03322		0669/270/R070		RCPT-				050-099
D03322		0656/270/R070		RCPT-				275-278
D03322		0665/270/R074		RCPT-				280-299
	1		W0804	220R	22		23-31-17	050-099, 275-278
	1		W0804	228R	22		23-31-17	280-299
	2		W0804	220B	22		23-31-17	050-099, 275-278
	2		W0804	228B	22		23-31-17	280-299
	3		W0804	048	22		33-24-14	050-099
	3		W0804	048	20		33-24-14	275-299
	4		W0804	049	22		33-24-14	050-099
	4		W0804	049	20		33-24-14	275-299
	5		W0804	050	20		33-24-14	050-099, 275-299
	6		W0804	270R	22		23-31-17	050-099
	7		W0804	270B	22		23-31-17	050-099
	8	UNUSED						050-099
	9	UNUSED						050-099
	10	UNUSED						050-099
	11	UNUSED						050-099
	12	UNUSED						050-099
D03324		0698/270/R070		RCPT-				050-099
D03324		700/270/R070		RCPT-				150-199
D03324		0682/270/R070		RCPT-				275-278
D03324		0683/270/R073		RCPT-				280-299
	1		W0804	222R	22		23-31-17	050-099, 150-199
	1		W0810	222R	22		23-31-17	275-278
	1		W0810	202R	22		23-31-17	280-299
	2		W0804	222B	22		23-31-17	050-099, 150-199
	2		W0810	222B	22		23-31-17	275-278
	2		W0810	202B	22		23-31-17	280-299
	3		W0804	053	22		33-24-14	050-099
	3		W0804	053	20		33-24-14	150-199
	3		W0810	053	20		33-24-14	275-299
	4		W0804	054	22		33-24-14	050-099
	4		W0804	054	20		33-24-14	150-199
	4		W0810	054	20		33-24-14	275-299
	5		W0804	055	20		33-24-14	050-099, 150-199
	5		W0810	055	20		33-24-14	275-299
	6		W0804	272R	22		23-31-17	050-099
	6		W0804	652R	22		23-31-17	150-199
	7		W0804	272B	22		23-31-17	050-099

HOOKUP LIST

D280T132

91-21-51

Section D03300

Page 6

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03324		0698/270/R070		RCPT- (continued)				050-099
D03324		700/270/R070		RCPT- (continued)				150-199
D03324		0682/270/R070		RCPT- (continued)				275-278
D03324		0683/270/R073		RCPT- (continued)				280-299
	7		W0804	652B	22		23-31-17	150-199
	8	UNUSED						050-099, 150-199
	9	UNUSED						050-099, 150-199
	10	UNUSED						050-099, 150-199
	11	UNUSED						050-099, 150-199
	12	UNUSED						050-099, 150-199
D03326		0727/270/R070		RCPT-				050-099
D03326		737/270/R070		RCPT-				150-199
D03326		0712/270/R070		RCPT-				275-278
D03326		0713/270/R073		RCPT-				280-299
	1		W0804	224R	22		23-31-17	050-099, 150-199
	1		W0810	224R	22		23-31-17	275-278
	1		W0810	204R	22		23-31-17	280-299
	2		W0804	224B	22		23-31-17	050-099, 150-199
	2		W0810	224B	22		23-31-17	275-278
	2		W0810	204B	22		23-31-17	280-299
	3		W0804	058	22		33-24-14	050-099
	3		W0804	058	20		33-24-14	150-199
	3		W0810	058	20		33-24-14	275-299
	4		W0804	059	22		33-24-14	050-099
	4		W0804	059	20		33-24-14	150-199
	4		W0810	059	20		33-24-14	275-299
	5		W0804	060	20		33-24-14	050-099, 150-199
	5		W0810	060	20		33-24-14	275-299
	6		W0804	274R	22		23-31-17	050-099, 150-199
	7		W0804	274B	22		23-31-17	050-099, 150-199
	8	UNUSED						050-099, 150-199
	9	UNUSED						050-099, 150-199
	10	UNUSED						050-099, 150-199
	11	UNUSED						050-099, 150-199
	12	UNUSED						050-099, 150-199
D03328		0757/270/R070		RCPT-				050-099
D03328		0742/270/R070		RCPT-				275-278
D03328		0741/270/R073		RCPT-				280-299
	1		W0804	226R	22		23-31-17	050-099

HOOKUP LIST

D280T132

91-21-51

Section D03300

Page 7

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03328		0757/270/R070		RCPT- (continued)				050-099
D03328		0742/270/R070		RCPT- (continued)				275-278
D03328		0741/270/R073		RCPT- (continued)				280-299
	1		W0810	226R	22		23-31-17	275-278
	1		W0810	206R	22		23-31-17	280-299
	2		W0804	226B	22		23-31-17	050-099
	2		W0810	226B	22		23-31-17	275-278
	2		W0810	206B	22		23-31-17	280-299
	3		W0804	063	22		33-24-14	050-099
	3		W0810	063	20		33-24-14	275-299
	4		W0804	064	22		33-24-14	050-099
	4		W0810	064	20		33-24-14	275-299
	5		W0804	065	20		33-24-14	050-099
	5		W0810	065	20		33-24-14	275-299
	6		W0804	276R	22		23-31-17	050-099
	7		W0804	276B	22		23-31-17	050-099
	8	UNUSED						050-099
	9	UNUSED						050-099
	10	UNUSED						050-099
	11	UNUSED						050-099
	12	UNUSED						050-099
D03330		0786/270/R070		RCPT-				050-099
D03330		0801/270/R070		RCPT-				150-199
D03330		0797/270/R070		RCPT-				275-278
D03330		0797/270/R073		RCPT-				280-299
	1		W0804	228R	22		23-31-17	050-099
	1		W0810	228R	22		23-31-17	150-199, 275-278
	1		W0810	210R	22		23-31-17	280-299
	2		W0804	228B	22		23-31-17	050-099
	2		W0810	228B	22		23-31-17	150-199, 275-278
	2		W0810	210B	22		23-31-17	280-299
	3		W0804	068	22		33-24-14	050-099
	3		W0810	068	20		33-24-14	150-199, 275-299
	4		W0804	069	22		33-24-14	050-099
	4		W0810	069	20		33-24-14	150-199, 275-299
	5		W0804	070	20		33-24-14	050-099
	5		W0810	070	20		33-24-14	150-199, 275-299
	6		W0804	278R	22		23-31-17	050-099
	6		W0810	656R	22		23-31-17	150-199
	7		W0804	278B	22		23-31-17	050-099

HOOKUP LIST

D280T132

91-21-51

Section D03300

Page 8

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03330		0786/270/R070		RCPT- (continued)				050-099
D03330		0801/270/R070		RCPT- (continued)				150-199
D03330		0797/270/R070		RCPT- (continued)				275-278
D03330		0797/270/R073		RCPT- (continued)				280-299
	7		W0810	656B	22		23-31-17	150-199
	8	UNUSED						050-099, 150-199
	9	UNUSED						050-099, 150-199
	10	UNUSED						050-099, 150-199
	11	UNUSED						050-099, 150-199
	12	UNUSED						050-099, 150-199
D03332		831/270/R070		RCPT-				150-199
	1		W0810	230R	22		23-31-17	150-199
	2		W0810	230B	22		23-31-17	150-199
	3		W0810	073	20		33-24-14	150-199
	4		W0810	074	20		33-24-14	150-199
	5		W0810	075	20		33-24-14	150-199
	6		W0810	658R	22		23-31-17	150-199
	7		W0810	658B	22		23-31-17	150-199
	8	UNUSED						150-199
	9	UNUSED						150-199
	10	UNUSED						150-199
	11	UNUSED						150-199
	12	UNUSED						150-199
D03336		0875/270/R073		RCPT-				050-099
D03336		0859/270/R073		RCPT-				150-199
D03336		0879/270/R073		RCPT-				275-299
	1		W0804	234R	22		23-31-17	050-099
	1		W0810	234R	22		23-31-17	150-199, 275-278
	1		W0810	216R	22		23-31-17	280-299
	2		W0804	234B	22		23-31-17	050-099
	2		W0810	234B	22		23-31-17	150-199, 275-278
	2		W0810	216B	22		23-31-17	280-299
	3		W0804	083	22		33-24-14	050-099
	3		W0810	083	20		33-24-14	150-199, 275-299
	4		W0804	084	22		33-24-14	050-099
	4		W0810	084	20		33-24-14	150-199, 275-299
	5		W0804	085	20		33-24-14	050-099
	5		W0810	085	20		33-24-14	150-199, 275-299
	6		W0804	284R	22		23-31-17	050-099

HOOKUP LIST

D280T132

91-21-51

Section D03300

Page 9

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03336		0875/270/R073		RCPT- (continued)				050-099
D03336		0859/270/R073		RCPT- (continued)				150-199
D03336		0879/270/R073		RCPT- (continued)				275-299
	6		W0810	662R	22		23-31-17	150-199
	7		W0804	284B	22		23-31-17	050-099
	7		W0810	662B	22		23-31-17	150-199
	8	UNUSED						050-099, 150-199
	9	UNUSED						050-099, 150-199
	10	UNUSED						050-099, 150-199
	11	UNUSED						050-099, 150-199
	12	UNUSED						050-099, 150-199
D03338		0893/270/R073		RCPT-				050-099, 275-299
D03338		0889/270/R073		RCPT-				150-199
	1		W0804	236R	22		23-31-17	050-099
	1		W0810	236R	22		23-31-17	150-199, 275-278
	1		W0810	218R	22		23-31-17	280-299
	2		W0804	236B	22		23-31-17	050-099
	2		W0810	236B	22		23-31-17	150-199, 275-278
	2		W0810	218B	22		23-31-17	280-299
	3		W0804	088	22		33-24-14	050-099
	3		W0810	088	20		33-24-14	150-199, 275-299
	4		W0804	089	22		33-24-14	050-099
	4		W0810	089	20		33-24-14	150-199, 275-299
	5		W0804	090	20		33-24-14	050-099
	5		W0810	090	20		33-24-14	150-199, 275-299
	6		W0804	286R	22		23-31-17	050-099
	6		W0810	663R	22		23-31-17	150-199
	7		W0804	286B	22		23-31-17	050-099
	7		W0810	663B	22		23-31-17	150-199
	8	UNUSED						050-099, 150-199
	9	UNUSED						050-099, 150-199
	10	UNUSED						050-099, 150-199
	11	UNUSED						050-099, 150-199
	12	UNUSED						050-099, 150-199
D03340		0926/270/R073		RCPT-				050-099, 275-299
D03340		0919/270/R073		RCPT-				150-199
	1		W0804	238R	22		23-31-17	050-099
	1		W0810	238R	22		23-31-17	150-199, 275-278
	1		W0810	220R	22		23-31-17	280-299

HOOKUP LIST

D280T132

91-21-51

Section D03300

Page 10

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03340		0926/270/R073		RCPT- (continued)				050-099, 275-299
D03340		0919/270/R073		RCPT- (continued)				150-199
	2		W0804	238B	22		23-31-17	050-099
	2		W0810	238B	22		23-31-17	150-199, 275-278
	2		W0810	220B	22		23-31-17	280-299
	3		W0804	093	22		33-24-14	050-099
	3		W0810	093	20		33-24-14	150-199, 275-299
	4		W0804	094	22		33-24-14	050-099
	4		W0810	094	20		33-24-14	150-199, 275-299
	5		W0804	095	20		33-24-14	050-099
	5		W0810	095	20		33-24-14	150-199, 275-299
	6		W0804	288R	22		23-31-17	050-099
	6		W0810	664R	22		23-31-17	150-199
	7		W0804	288B	22		23-31-17	050-099
	7		W0810	664B	22		23-31-17	150-199
	8	UNUSED						050-099, 150-199
	9	UNUSED						050-099, 150-199
	10	UNUSED						050-099, 150-199
	11	UNUSED						050-099, 150-199
	12	UNUSED						050-099, 150-199
D03342		0940/270/R073		RCPT-				050-099
D03342		0955/270/R073		RCPT-				275-299
	1		W0804	240R	22		23-31-17	050-099
	1		W0810	240R	22		23-31-17	275-278
	1		W0810	222R	22		23-31-17	280-299
	2		W0804	240B	22		23-31-17	050-099
	2		W0810	240B	22		23-31-17	275-278
	2		W0810	222B	22		23-31-17	280-299
	3		W0804	098	22		33-24-14	050-099
	3		W0810	098	20		33-24-14	275-299
	4		W0804	099	22		33-24-14	050-099
	4		W0810	099	20		33-24-14	275-299
	5		W0804	100	20		33-24-14	050-099
	5		W0810	100	20		33-24-14	275-299
	6		W0804	290R	22		23-31-17	050-099
	7		W0804	290B	22		23-31-17	050-099
	8	UNUSED						050-099
	9	UNUSED						050-099
	10	UNUSED						050-099
	11	UNUSED						050-099

HOOKUP LIST

D280T132

91-21-51

Section D03300

Page 11

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03342		0940/270/R073		RCPT- (continued)				050-099
D03342		0955/270/R073		RCPT- (continued)				275-299
	12	UNUSED						050-099
D03344		0970/270/R073		RCPT-				050-099
D03344		1007/270/R073		RCPT-				150-199
D03344		0983/270/R073		RCPT-				275-299
	1		W0804	242R	22		23-31-17	050-099
	1		W0810	242R	22		23-31-17	150-199, 275-278
	1		W0810	224R	22		23-31-17	280-299
	2		W0804	242B	22		23-31-17	050-099
	2		W0810	242B	22		23-31-17	150-199, 275-278
	2		W0810	224B	22		23-31-17	280-299
	3		W0804	103	22		33-24-14	050-099
	3		W0810	103	20		33-24-14	150-199, 275-299
	4		W0804	104	22		33-24-14	050-099
	4		W0810	104	20		33-24-14	150-199, 275-299
	5		W0804	105	20		33-24-14	050-099
	5		W0810	105	20		33-24-14	150-199, 275-299
	6		W0804	292R	22		23-31-17	050-099
	6		W0810	666R	22		23-31-17	150-199
	7		W0804	292B	22		23-31-17	050-099
	7		W0810	666B	22		23-31-17	150-199
	8	UNUSED						050-099, 150-199
	9	UNUSED						050-099, 150-199
	10	UNUSED						050-099, 150-199
	11	UNUSED						050-099, 150-199
	12	UNUSED						050-099, 150-199
D03346		0999/270/R073		RCPT-				050-099
D03346		1028/270/R073		RCPT-				150-199
D03346		1013/270/R073		RCPT-				275-299
	1		W0804	244R	22		23-31-17	050-099
	1		W0810	244R	22		23-31-17	150-199, 275-278
	1		W0810	226R	22		23-31-17	280-299
	2		W0804	244B	22		23-31-17	050-099
	2		W0810	244B	22		23-31-17	150-199, 275-278
	2		W0810	226B	22		23-31-17	280-299
	3		W0804	108	22		33-24-14	050-099
	3		W0810	108	20		33-24-14	150-199, 275-299
	4		W0804	109	22		33-24-14	050-099

HOOKUP LIST

D280T132

91-21-51

Section D03300

Page 12

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03346		0999/270/R073		RCPT- (continued)				050-099
D03346		1028/270/R073		RCPT- (continued)				150-199
D03346		1013/270/R073		RCPT- (continued)				275-299
	4		W0810	109	20		33-24-14	150-199, 275-299
	5		W0804	110	20		33-24-14	050-099
	5		W0810	110	20		33-24-14	150-199, 275-299
	6		W0804	294R	22		23-31-17	050-099
	6		W0810	667R	22		23-31-17	150-199
	7		W0804	294B	22		23-31-17	050-099
	7		W0810	667B	22		23-31-17	150-199
	8	UNUSED						050-099, 150-199
	9	UNUSED						050-099, 150-199
	10	UNUSED						050-099, 150-199
	11	UNUSED						050-099, 150-199
	12	UNUSED						050-099, 150-199
D03348		1055/270/L073		RCPT-				150-199
D03348		1043/270/L073		RCPT-				275-299
	1		W0806	608R	22		23-31-15	150-199, 275-278
	1		W0806	228R	22		23-31-15	280-299
	2		W0806	608B	22		23-31-15	150-199, 275-278
	2		W0806	228B	22		23-31-15	280-299
	3		W0806	161	20		33-24-12	150-199, 275-299
	4		W0806	162	20		33-24-12	150-199, 275-299
	5		W0806	163	20		33-24-12	150-199, 275-299
	6		W0806	602R	22		23-31-15	150-199
	7		W0806	602B	22		23-31-15	150-199
	8	UNUSED						150-199
	9	UNUSED						150-199
	10	UNUSED						150-199
	11	UNUSED						150-199
	12	UNUSED						150-199
D03350		1071/270/L073		RCPT-				150-199, 275-299
	1		W0806	610R	22		23-31-15	150-199, 275-278
	1		W0806	230R	22		23-31-15	280-299
	2		W0806	610B	22		23-31-15	150-199, 275-278
	2		W0806	230B	22		23-31-15	280-299
	3		W0806	164	20		33-24-12	150-199, 275-299
	4		W0806	165	20		33-24-12	150-199, 275-299
	5		W0806	166	20		33-24-12	150-199, 275-299

HOOKUP LIST

D280T132

91-21-51

Section D03300

Page 13

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03350		1071/270/L073		RCPT- (continued)				150-199, 275-299
	6		W0806	604R	22		23-31-15	150-199
	7		W0806	604B	22		23-31-15	150-199
	8	UNUSED						150-199
	9	UNUSED						150-199
	10	UNUSED						150-199
	11	UNUSED						150-199
	12	UNUSED						150-199
D03352		1097/270/L073		RCPT-				050-099
D03352		1101/270/L073		RCPT-				150-199, 275-299
	1		W0806	206R	22		23-31-15	050-099
	1		W0806	612R	22		23-31-15	150-199, 275-278
	1		W0806	232R	22		23-31-15	280-299
	2		W0806	206B	22		23-31-15	050-099
	2		W0806	612B	22		23-31-15	150-199, 275-278
	2		W0806	232B	22		23-31-15	280-299
	3		W0806	013	22		33-24-12	050-099
	3		W0806	167	20		33-24-12	150-199, 275-299
	4		W0806	014	22		33-24-12	050-099
	4		W0806	168	20		33-24-12	150-199, 275-299
	5		W0806	015	20		33-24-12	050-099
	5		W0806	169	20		33-24-12	150-199, 275-299
	6		W0806	246R	22		23-31-15	050-099, 150-199
	7		W0806	246B	22		23-31-15	050-099, 150-199
	8	UNUSED						050-099, 150-199
	9	UNUSED						050-099, 150-199
	10	UNUSED						050-099, 150-199
	11	UNUSED						050-099, 150-199
	12	UNUSED						050-099, 150-199
D03354		1116/270/L073		RCPT-				050-099
D03354		1131/270/L073		RCPT-				150-199, 275-299
	1		W0806	208R	22		23-31-15	050-099
	1		W0806	614R	22		23-31-15	150-199, 275-278
	1		W0806	234R	22		23-31-15	280-299
	2		W0806	208B	22		23-31-15	050-099
	2		W0806	614B	22		23-31-15	150-199, 275-278
	2		W0806	234B	22		23-31-15	280-299
	3		W0806	018	22		33-24-12	050-099
	3		W0806	170	20		33-24-12	150-199, 275-299

HOOKUP LIST

D280T132

91-21-51

Section D03300

Page 14

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03354		1116/270/L073		RCPT- (continued)				050-099
D03354		1131/270/L073		RCPT- (continued)				150-199, 275-299
	4		W0806	019	22		33-24-12	050-099
	4		W0806	171	20		33-24-12	150-199, 275-299
	5		W0806	020	20		33-24-12	050-099
	5		W0806	172	20		33-24-12	150-199, 275-299
	6		W0806	248R	22		23-31-15	050-099, 150-199
	7		W0806	248B	22		23-31-15	050-099, 150-199
	8	UNUSED						050-099, 150-199
	9	UNUSED						050-099, 150-199
	10	UNUSED						050-099, 150-199
	11	UNUSED						050-099, 150-199
	12	UNUSED						050-099, 150-199
D03356		1146/270/L073		RCPT-				050-099
D03356		1159/270/L073		RCPT-				150-199, 275-299
	1		W0806	210R	22		23-31-15	050-099
	1		W0806	616R	22		23-31-15	150-199, 275-278
	1		W0806	236R	22		23-31-15	280-299
	2		W0806	210B	22		23-31-15	050-099
	2		W0806	616B	22		23-31-15	150-199, 275-278
	2		W0806	236B	22		23-31-15	280-299
	3		W0806	023	22		33-24-12	050-099
	3		W0806	173	20		33-24-12	150-199, 275-299
	4		W0806	024	22		33-24-12	050-099
	4		W0806	174	20		33-24-12	150-199, 275-299
	5		W0806	025	20		33-24-12	050-099
	5		W0806	175	20		33-24-12	150-199, 275-299
	6		W0806	250R	22		23-31-15	050-099, 150-199
	7		W0806	250B	22		23-31-15	050-099, 150-199
	8	UNUSED						050-099, 150-199
	9	UNUSED						050-099, 150-199
	10	UNUSED						050-099, 150-199
	11	UNUSED						050-099, 150-199
	12	UNUSED						050-099, 150-199
D03358		1175/270/L073		RCPT-				050-099
D03358		1189/270/L073		RCPT-				150-199, 275-299
	1		W0806	212R	22		23-31-15	050-099
	1		W0806	618R	22		23-31-15	150-199, 275-278
	1		W0806	238R	22		23-31-15	280-299

HOOKUP LIST

D280T132

91-21-51

Section D03300

Page 15

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03358		1175/270/L073		RCPT- (continued)				050-099
D03358		1189/270/L073		RCPT- (continued)				150-199, 275-299
	2		W0806	212B	22		23-31-15	050-099
	2		W0806	618B	22		23-31-15	150-199, 275-278
	2		W0806	238B	22		23-31-15	280-299
	3		W0806	028	22		33-24-12	050-099
	3		W0806	176	20		33-24-12	150-199, 275-299
	4		W0806	029	22		33-24-12	050-099
	4		W0806	177	20		33-24-12	150-199, 275-299
	5		W0806	030	20		33-24-12	050-099
	5		W0806	178	20		33-24-12	150-199, 275-299
	6		W0806	252R	22		23-31-15	050-099, 150-199
	7		W0806	252B	22		23-31-15	050-099, 150-199
	8	UNUSED						050-099, 150-199
	9	UNUSED						050-099, 150-199
	10	UNUSED						050-099, 150-199
	11	UNUSED						050-099, 150-199
	12	UNUSED						050-099, 150-199
D03360		1204/270/L073		RCPT-				ALL
	1		W0806	214R	22		23-31-15	050-099
	1		W0806	628R	22		23-31-15	150-199, 275-278
	1		W0806	248R	22		23-31-15	280-299
	2		W0806	214B	22		23-31-15	050-099
	2		W0806	628B	22		23-31-15	150-199, 275-278
	2		W0806	248B	22		23-31-15	280-299
	3		W0806	033	22		33-24-12	050-099
	3		W0806	191	20		33-24-12	150-199, 275-299
	4		W0806	034	22		33-24-12	050-099
	4		W0806	192	20		33-24-12	150-199, 275-299
	5		W0806	035	20		33-24-12	050-099
	5		W0806	193	20		33-24-12	150-199, 275-299
	6		W0806	254R	22		23-31-15	050-099, 150-199
	7		W0806	254B	22		23-31-15	050-099, 150-199
	8	UNUSED						050-099, 150-199
	9	UNUSED						050-099, 150-199
	10	UNUSED						050-099, 150-199
	11	UNUSED						050-099, 150-199
	12	UNUSED						050-099, 150-199

HOOKUP LIST

D280T132

91-21-51

Section D03300

Page 16

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03362		1234/270/L073		RCPT-				ALL
	1		W0806	216R	22		23-31-15	050-099
	1		W0806	630R	22		23-31-15	150-199, 275-278
	1		W0806	250R	22		23-31-15	280-299
	2		W0806	216B	22		23-31-15	050-099
	2		W0806	630B	22		23-31-15	150-199, 275-278
	2		W0806	250B	22		23-31-15	280-299
	3		W0806	038	22		33-24-12	050-099
	3		W0806	194	20		33-24-12	150-199, 275-299
	4		W0806	039	22		33-24-12	050-099
	4		W0806	195	20		33-24-12	150-199, 275-299
	5		W0806	040	20		33-24-12	050-099
	5		W0806	196	20		33-24-12	150-199, 275-299
	6		W0806	256R	22		23-31-15	050-099, 150-199
	7		W0806	256B	22		23-31-15	050-099, 150-199
	8	UNUSED						050-099, 150-199
	9	UNUSED						050-099, 150-199
	10	UNUSED						050-099, 150-199
	11	UNUSED						050-099, 150-199
	12	UNUSED						050-099, 150-199
D03364		1273/270/L073		RCPT-				050-099
D03364		1263/270/L073		RCPT-				150-199, 275-299
	1		W0806	218R	22		23-31-15	050-099
	1		W0806	632R	22		23-31-15	150-199, 275-278
	1		W0806	252R	22		23-31-15	280-299
	2		W0806	218B	22		23-31-15	050-099
	2		W0806	632B	22		23-31-15	150-199, 275-278
	2		W0806	252B	22		23-31-15	280-299
	3		W0806	043	22		33-24-12	050-099
	3		W0806	197	20		33-24-12	150-199, 275-299
	4		W0806	044	22		33-24-12	050-099
	4		W0806	198	20		33-24-12	150-199, 275-299
	5		W0806	045	20		33-24-12	050-099
	5		W0806	199	20		33-24-12	150-199, 275-299
	6		W0806	258R	22		23-31-15	050-099, 150-199
	7		W0806	258B	22		23-31-15	050-099, 150-199
	8	UNUSED						050-099, 150-199
	9	UNUSED						050-099, 150-199
	10	UNUSED						050-099, 150-199
	11	UNUSED						050-099, 150-199

HOOKUP LIST

D280T132

91-21-51

Section D03300

Page 17

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03364		1273/270/L073		RCPT- (continued)				050-099
D03364		1263/270/L073		RCPT- (continued)				150-199, 275-299
	12	UNUSED						050-099, 150-199
D03366		1292/270/L073		RCPT-				ALL
	1		W0806	220R	22		23-31-15	050-099
	1		W0806	634R	22		23-31-15	150-199, 275-278
	1		W0806	254R	22		23-31-15	280-299
	2		W0806	220B	22		23-31-15	050-099
	2		W0806	634B	22		23-31-15	150-199, 275-278
	2		W0806	254B	22		23-31-15	280-299
	3		W0806	048	22		33-24-12	050-099
	3		W0806	501	20		33-24-12	150-199, 275-299
	4		W0806	049	22		33-24-12	050-099
	4		W0806	502	20		33-24-12	150-199, 275-299
	5		W0806	050	20		33-24-12	050-099
	5		W0806	503	20		33-24-12	150-199, 275-299
	6		W0806	260R	22		23-31-15	050-099, 150-199
	7		W0806	260B	22		23-31-15	050-099, 150-199
	8	UNUSED						050-099, 150-199
	9	UNUSED						050-099, 150-199
	10	UNUSED						050-099, 150-199
	11	UNUSED						050-099, 150-199
	12	UNUSED						050-099, 150-199
D03368		1322/270/L073		RCPT-				ALL
	1		W0806	222R	22		23-31-15	050-099
	1		W0806	636R	22		23-31-15	150-199, 275-278
	1		W0806	256R	22		23-31-15	280-299
	2		W0806	222B	22		23-31-15	050-099
	2		W0806	636B	22		23-31-15	150-199, 275-278
	2		W0806	256B	22		23-31-15	280-299
	3		W0806	053	22		33-24-12	050-099
	3		W0806	504	20		33-24-12	150-199, 275-299
	4		W0806	054	22		33-24-12	050-099
	4		W0806	505	20		33-24-12	150-199, 275-299
	5		W0806	055	20		33-24-12	050-099
	5		W0806	506	20		33-24-12	150-199, 275-299
	6		W0806	262R	22		23-31-15	050-099, 150-199
	7		W0806	262B	22		23-31-15	050-099, 150-199
	8	UNUSED						050-099, 150-199

HOOKUP LIST

D280T132

91-21-51

Section D03300

Page 18

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03368		1322/270/L073		RCPT- (continued)				ALL
	9	UNUSED						050-099, 150-199
	10	UNUSED						050-099, 150-199
	11	UNUSED						050-099, 150-199
	12	UNUSED						050-099, 150-199
D03370		1351/270/L073		RCPT-				ALL
	1		W0806	224R	22		23-31-15	050-099
	1		W0806	638R	22		23-31-15	150-199, 275-278
	1		W0806	258R	22		23-31-15	280-299
	2		W0806	224B	22		23-31-15	050-099
	2		W0806	638B	22		23-31-15	150-199, 275-278
	2		W0806	258B	22		23-31-15	280-299
	3		W0806	058	22		33-24-12	050-099
	3		W0806	507	20		33-24-12	150-199, 275-299
	4		W0806	059	22		33-24-12	050-099
	4		W0806	508	20		33-24-12	150-199, 275-299
	5		W0806	060	20		33-24-12	050-099
	5		W0806	509	20		33-24-12	150-199, 275-299
	6		W0806	264R	22		23-31-15	050-099, 150-199
	7		W0806	264B	22		23-31-15	050-099, 150-199
	8	UNUSED						050-099, 150-199
	9	UNUSED						050-099, 150-199
	10	UNUSED						050-099, 150-199
	11	UNUSED						050-099, 150-199
	12	UNUSED						050-099, 150-199
D03372		1380/270/L073		RCPT-				050-099, 275-299
D03372		1387/270/L073		RCPT-				150-199
	1		W0806	226R	22		23-31-15	050-099
	1		W0806	640R	22		23-31-15	150-199, 275-278
	1		W0806	260R	22		23-31-15	280-299
	2		W0806	226B	22		23-31-15	050-099
	2		W0806	640B	22		23-31-15	150-199, 275-278
	2		W0806	260B	22		23-31-15	280-299
	3		W0806	063	22		33-24-12	050-099
	3		W0806	510	20		33-24-12	150-199, 275-299
	4		W0806	064	22		33-24-12	050-099
	4		W0806	511	20		33-24-12	150-199, 275-299
	5		W0806	065	20		33-24-12	050-099
	5		W0806	512	20		33-24-12	150-199, 275-299

HOOKUP LIST

D280T132

91-21-51

Section D03300

Page 19

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03372		1380/270/L073		RCPT- (continued)				050-099, 275-299
D03372		1387/270/L073		RCPT- (continued)				150-199
	6		W0806	266R	22		23-31-15	050-099, 150-199
	7		W0806	266B	22		23-31-15	050-099, 150-199
	8	UNUSED						050-099, 150-199
	9	UNUSED						050-099, 150-199
	10	UNUSED						050-099, 150-199
	11	UNUSED						050-099, 150-199
	12	UNUSED						050-099, 150-199
D03374		1410/270/L073		RCPT-				050-099, 275-299
D03374		1406/270/L073		RCPT-				150-199
	1		W0806	228R	22		23-31-15	050-099
	1		W0806	642R	22		23-31-15	150-199, 275-278
	1		W0806	262R	22		23-31-15	280-299
	2		W0806	228B	22		23-31-15	050-099
	2		W0806	642B	22		23-31-15	150-199, 275-278
	2		W0806	262B	22		23-31-15	280-299
	3		W0806	068	22		33-24-12	050-099
	3		W0806	513	20		33-24-12	150-199, 275-299
	4		W0806	069	22		33-24-12	050-099
	4		W0806	514	20		33-24-12	150-199, 275-299
	5		W0806	070	20		33-24-12	050-099
	5		W0806	515	20		33-24-12	150-199, 275-299
	6		W0806	268R	22		23-31-15	050-099, 150-199
	7		W0806	268B	22		23-31-15	050-099, 150-199
	8	UNUSED						050-099, 150-199
	9	UNUSED						050-099, 150-199
	10	UNUSED						050-099, 150-199
	11	UNUSED						050-099, 150-199
	12	UNUSED						050-099, 150-199
D03376		1428/270/L073		RCPT-				050-099
D03376		1436/270/L073		RCPT-				150-199
D03376		1427/270/L073		RCPT-				275-299
	1		W0806	230R	22		23-31-15	050-099
	1		W0806	641R	22		23-31-15	150-199, 275-278
	1		W0806	264R	22		23-31-15	280-299
	2		W0806	230B	22		23-31-15	050-099
	2		W0806	641B	22		23-31-15	150-199, 275-278
	2		W0806	264B	22		23-31-15	280-299

HOOKUP LIST

D280T132

91-21-51

Section D03300

Page 20

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03376		1428/270/L073		RCPT- (continued)				050-099
D03376		1436/270/L073		RCPT- (continued)				150-199
D03376		1427/270/L073		RCPT- (continued)				275-299
	3		W0806	072	22		33-24-12	050-099
	3		W0806	516	20		33-24-12	150-199, 275-299
	4		W0806	071	22		33-24-12	050-099
	4		W0806	517	20		33-24-12	150-199, 275-299
	5		W0806	075	20		33-24-12	050-099
	5		W0806	518	20		33-24-12	150-199, 275-299
	6		W0806	270R	22		23-31-15	050-099
	6		W0806	269R	22		23-31-15	150-199
	7		W0806	270B	22		23-31-15	050-099
	7		W0806	269B	22		23-31-15	150-199
	8	UNUSED						050-099, 150-199
	9	UNUSED						050-099, 150-199
	10	UNUSED						050-099, 150-199
	11	UNUSED						050-099, 150-199
	12	UNUSED						050-099, 150-199
D03378		1133/280/L005		RCPT-				ALL
	1		W1146	210R	22		23-31-16	050-099, 276-299
	1		W1146	203R	22		23-31-16	150-199, 275
	2		W1146	210B	22		23-31-16	050-099, 276-299
	2		W1146	203B	22		23-31-16	150-199, 275
	3		W1146	143	22		33-24-13	050-099
	3		W1146	024	20		33-24-13	150-199, 275
	3		W1146	143	20		33-24-13	276-299
	4		W1146	144	22		33-24-13	050-099
	4		W1146	023	20		33-24-13	150-199, 275
	4		W1146	144	20		33-24-13	276-299
	5		W1146	145	20		33-24-13	050-099, 276-299
	5		W1146	025	20		33-24-13	150-199, 275
	6		W1146	260R	22		23-31-16	050-099, 150-199
	7		W1146	260B	22		23-31-16	050-099, 150-199
	8	UNUSED						050-099, 150-199
	9	UNUSED						050-099, 150-199
	10	UNUSED						050-099, 150-199
	11	UNUSED						050-099, 150-199
	12	UNUSED						050-099, 150-199

HOOKUP LIST

D280T132

91-21-51

Section D03300

Page 21

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03380		1157/280/L005		RCPT-				ALL
	1		W1148	202R	22		23-31-16	050-099, 276-299
	1		W1148	204R	22		23-31-16	150-199, 275
	2		W1148	202B	22		23-31-16	050-099, 276-299
	2		W1148	204B	22		23-31-16	150-199, 275
	3		W1148	103	22		33-24-13	050-099
	3		W1148	004	20		33-24-13	150-199, 275
	3		W1148	103	20		33-24-13	276-299
	4		W1148	104	22		33-24-13	050-099
	4		W1148	003	20		33-24-13	150-199, 275
	4		W1148	104	20		33-24-13	276-299
	5		W1148	105	20		33-24-13	050-099, 276-299
	5		W1148	005	20		33-24-13	150-199, 275
	6		W1148	252R	22		23-31-16	050-099
	6		W1148	224R	22		23-31-16	150-199
	7		W1148	252B	22		23-31-16	050-099
	7		W1148	224B	22		23-31-16	150-199
	8	UNUSED						050-099, 150-199
	9	UNUSED						050-099, 150-199
	10	UNUSED						050-099, 150-199
	11	UNUSED						050-099, 150-199
	12	UNUSED						050-099, 150-199
D03382		1171/280/L005		RCPT-				050-099
D03382		1181/280/L005		RCPT-				150-199, 275-299
	1		W1148	204R	22		23-31-16	050-099, 276-299
	1		W1148	206R	22		23-31-16	150-199, 275
	2		W1148	204B	22		23-31-16	050-099, 276-299
	2		W1148	206B	22		23-31-16	150-199, 275
	3		W1148	113	22		33-24-13	050-099
	3		W1148	009	20		33-24-13	150-199, 275
	3		W1148	113	20		33-24-13	276-299
	4		W1148	114	22		33-24-13	050-099
	4		W1148	008	20		33-24-13	150-199, 275
	4		W1148	114	20		33-24-13	276-299
	5		W1148	115	20		33-24-13	050-099, 276-299
	5		W1148	010	20		33-24-13	150-199, 275
	6		W1148	254R	22		23-31-16	050-099
	6		W1148	226R	22		23-31-16	150-199
	7		W1148	254B	22		23-31-16	050-099
	7		W1148	226B	22		23-31-16	150-199

HOOKUP LIST

D280T132

91-21-51

Section D03300

Page 22

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03382		1171/280/L005		RCPT- (continued)				050-099
D03382		1181/280/L005		RCPT- (continued)				150-199, 275-299
	8	UNUSED						050-099, 150-199
	9	UNUSED						050-099, 150-199
	10	UNUSED						050-099, 150-199
	11	UNUSED						050-099, 150-199
	12	UNUSED						050-099, 150-199
D03384		1212/280/L005		RCPT-				050-099
D03384		1197+015/280/L005		RCPT-				150-199, 275-299
	1		W1148	206R	22		23-31-16	050-099, 276-299
	1		W1148	208R	22		23-31-16	150-199, 275
	2		W1148	206B	22		23-31-16	050-099, 276-299
	2		W1148	208B	22		23-31-16	150-199, 275
	3		W1148	123	22		33-24-13	050-099
	3		W1148	014	20		33-24-13	150-199, 275
	3		W1148	123	20		33-24-13	276-299
	4		W1148	124	22		33-24-13	050-099
	4		W1148	013	20		33-24-13	150-199, 275
	4		W1148	124	20		33-24-13	276-299
	5		W1148	125	20		33-24-13	050-099, 276-299
	5		W1148	015	20		33-24-13	150-199, 275
	6		W1148	256R	22		23-31-16	050-099
	6		W1148	228R	22		23-31-16	150-199
	7		W1148	256B	22		23-31-16	050-099
	7		W1148	228B	22		23-31-16	150-199
	8	UNUSED						050-099, 150-199
	9	UNUSED						050-099, 150-199
	10	UNUSED						050-099, 150-199
	11	UNUSED						050-099, 150-199
	12	UNUSED						050-099, 150-199
D03386		1238/280/L005		RCPT-				050-099
D03386		1197+041/280/L005		RCPT-				150-199, 275-299
	1		W1148	208R	22		23-31-16	050-099, 276-299
	1		W1148	210R	22		23-31-16	150-199, 275
	2		W1148	208B	22		23-31-16	050-099, 276-299
	2		W1148	210B	22		23-31-16	150-199, 275
	3		W1148	133	22		33-24-13	050-099
	3		W1148	018	20		33-24-13	150-199, 275
	3		W1148	133	20		33-24-13	276-299

HOOKUP LIST

D280T132

91-21-51

Section D03300

Page 23

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03386		1238/280/L005		RCPT- (continued)				050-099
D03386		1197+041/280/L005		RCPT- (continued)				150-199, 275-299
	4		W1148	134	22		33-24-13	050-099
	4		W1148	019	20		33-24-13	150-199, 275
	4		W1148	134	20		33-24-13	276-299
	5		W1148	135	20		33-24-13	050-099, 276-299
	5		W1148	020	20		33-24-13	150-199, 275
	6		W1148	258R	22		23-31-16	050-099
	6		W1148	230R	22		23-31-16	150-199
	7		W1148	258B	22		23-31-16	050-099
	7		W1148	230B	22		23-31-16	150-199
	8	UNUSED						050-099, 150-199
	9	UNUSED						050-099, 150-199
	10	UNUSED						050-099, 150-199
	11	UNUSED						050-099, 150-199
	12	UNUSED						050-099, 150-199
D03388		1265/280/L005		RCPT-				050-099
D03388		1197+068/280/L005		RCPT-				150-199, 275-299
	1		W1148	210R	22		23-31-16	050-099, 276-299
	1		W1148	212R	22		23-31-16	150-199, 275
	2		W1148	210B	22		23-31-16	050-099, 276-299
	2		W1148	212B	22		23-31-16	150-199, 275
	3		W1148	143	22		33-24-13	050-099
	3		W1148	023	20		33-24-13	150-199, 275
	3		W1148	143	20		33-24-13	276-299
	4		W1148	144	22		33-24-13	050-099
	4		W1148	024	20		33-24-13	150-199, 275
	4		W1148	144	20		33-24-13	276-299
	5		W1148	145	20		33-24-13	050-099, 276-299
	5		W1148	025	20		33-24-13	150-199, 275
	6		W1148	260R	22		23-31-16	050-099
	6		W1148	232R	22		23-31-16	150-199
	7		W1148	260B	22		23-31-16	050-099
	7		W1148	232B	22		23-31-16	150-199
	8	UNUSED						050-099, 150-199
	9	UNUSED						050-099, 150-199
	10	UNUSED						050-099, 150-199
	11	UNUSED						050-099, 150-199
	12	UNUSED						050-099, 150-199

HOOKUP LIST

D280T132

91-21-51

Section D03300

Page 24

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03390		1289/280/L005		RCPT-				ALL
	1		W1150	202R	22		23-31-16	050-099, 276-299
	1		W1150	214R	22		23-31-16	150-199, 275
	2		W1150	202B	22		23-31-16	050-099, 276-299
	2		W1150	214B	22		23-31-16	150-199, 275
	3		W1150	103	22		33-24-13	050-099
	3		W1150	003	20		33-24-13	150-199, 275
	3		W1150	103	20		33-24-13	276-299
	4		W1150	104	22		33-24-13	050-099
	4		W1150	004	20		33-24-13	150-199, 275
	4		W1150	104	20		33-24-13	276-299
	5		W1150	105	20		33-24-13	050-099, 276-299
	5		W1150	005	20		33-24-13	150-199, 275
	6		W1150	252R	22		23-31-16	050-099
	6		W1150	254R	22		23-31-16	150-199
	7		W1150	252B	22		23-31-16	050-099
	7		W1150	254B	22		23-31-16	150-199
	8	UNUSED						050-099, 150-199
	9	UNUSED						050-099, 150-199
	10	UNUSED						050-099, 150-199
	11	UNUSED						050-099, 150-199
	12	UNUSED						050-099, 150-199
D03392		1313/280/L005		RCPT-				ALL
	1		W1150	204R	22		23-31-16	050-099, 276-299
	1		W1150	216R	22		23-31-16	150-199, 275
	2		W1150	204B	22		23-31-16	050-099, 276-299
	2		W1150	216B	22		23-31-16	150-199, 275
	3		W1150	113	22		33-24-13	050-099
	3		W1150	008	20		33-24-13	150-199, 275
	3		W1150	113	20		33-24-13	276-299
	4		W1150	114	22		33-24-13	050-099
	4		W1150	009	20		33-24-13	150-199, 275
	4		W1150	114	20		33-24-13	276-299
	5		W1150	115	20		33-24-13	050-099, 276-299
	5		W1150	010	20		33-24-13	150-199, 275
	6		W1150	254R	22		23-31-16	050-099
	6		W1150	256R	22		23-31-16	150-199
	7		W1150	254B	22		23-31-16	050-099
	7		W1150	256B	22		23-31-16	150-199
	8	UNUSED						050-099, 150-199

HOOKUP LIST

D280T132

91-21-51

Section D03300

Page 25

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03392		1313/280/L005		RCPT- (continued)				ALL
	9	UNUSED						050-099, 150-199
	10	UNUSED						050-099, 150-199
	11	UNUSED						050-099, 150-199
	12	UNUSED						050-099, 150-199
D03394		1344/280/L005		RCPT-				ALL
	1		W1150	206R	22		23-31-16	050-099, 276-299
	1		W1150	218R	22		23-31-16	150-199, 275
	2		W1150	206B	22		23-31-16	050-099, 276-299
	2		W1150	218B	22		23-31-16	150-199, 275
	3		W1150	123	22		33-24-13	050-099
	3		W1150	013	20		33-24-13	150-199, 275
	3		W1150	123	20		33-24-13	276-299
	4		W1150	124	22		33-24-13	050-099
	4		W1150	014	20		33-24-13	150-199, 275
	4		W1150	124	20		33-24-13	276-299
	5		W1150	125	20		33-24-13	050-099, 276-299
	5		W1150	015	20		33-24-13	150-199, 275
	6		W1150	256R	22		23-31-16	050-099
	6		W1150	258R	22		23-31-16	150-199
	7		W1150	256B	22		23-31-16	050-099
	7		W1150	258B	22		23-31-16	150-199
	8	UNUSED						050-099, 150-199
	9	UNUSED						050-099, 150-199
	10	UNUSED						050-099, 150-199
	11	UNUSED						050-099, 150-199
	12	UNUSED						050-099, 150-199
D03396		1370/280/L005		RCPT-				ALL
	1		W1150	208R	22		23-31-16	050-099, 276-299
	1		W1150	220R	22		23-31-16	150-199, 275
	2		W1150	208B	22		23-31-16	050-099, 276-299
	2		W1150	220B	22		23-31-16	150-199, 275
	3		W1150	133	22		33-24-13	050-099
	3		W1150	018	20		33-24-13	150-199, 275
	3		W1150	133	20		33-24-13	276-299
	4		W1150	134	22		33-24-13	050-099
	4		W1150	019	20		33-24-13	150-199, 275
	4		W1150	134	20		33-24-13	276-299
	5		W1150	135	20		33-24-13	050-099, 276-299

HOOKUP LIST

D280T132

91-21-51

Section D03300

Page 26

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03396		1370/280/L005		RCPT- (continued)				ALL
	5		W1150	020	20		33-24-13	150-199, 275
	6		W1150	258R	22		23-31-16	050-099
	6		W1150	260R	22		23-31-16	150-199
	7		W1150	258B	22		23-31-16	050-099
	7		W1150	260B	22		23-31-16	150-199
	8	UNUSED						050-099, 150-199
	9	UNUSED						050-099, 150-199
	10	UNUSED						050-099, 150-199
	11	UNUSED						050-099, 150-199
	12	UNUSED						050-099, 150-199
D03398		1397/280/L005		RCPT-				ALL
	1		W1150	210R	22		23-31-16	050-099, 276-299
	1		W1150	222R	22		23-31-16	150-199, 275
	2		W1150	210B	22		23-31-16	050-099, 276-299
	2		W1150	222B	22		23-31-16	150-199, 275
	3		W1150	143	22		33-24-13	050-099
	3		W1150	024	20		33-24-13	150-199, 275
	3		W1150	143	20		33-24-13	276-299
	4		W1150	144	22		33-24-13	050-099
	4		W1150	023	20		33-24-13	150-199, 275
	4		W1150	144	20		33-24-13	276-299
	5		W1150	145	20		33-24-13	050-099, 276-299
	5		W1150	025	20		33-24-13	150-199, 275
	6		W1150	260R	22		23-31-16	050-099
	6		W1150	262R	22		23-31-16	150-199
	7		W1150	260B	22		23-31-16	050-099
	7		W1150	262B	22		23-31-16	150-199
	8	UNUSED						050-099, 150-199
	9	UNUSED						050-099, 150-199
	10	UNUSED						050-099, 150-199
	11	UNUSED						050-099, 150-199
	12	UNUSED						050-099, 150-199

HOOKUP LIST

D280T132

91-21-51

Section D03300

Page 27 End

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03400		1421/280/L005		RCPT-				ALL
	1		W1152	202R	22		23-31-16	050-099, 276-299
	1		W1152	224R	22		23-31-16	150-199, 275
	2		W1152	202B	22		23-31-16	050-099, 276-299
	2		W1152	224B	22		23-31-16	150-199, 275
	3		W1152	103	22		33-24-13	050-099
	3		W1152	004	20		33-24-13	150-199, 275
	3		W1152	103	20		33-24-13	276-299
	4		W1152	104	22		33-24-13	050-099
	4		W1152	003	20		33-24-13	150-199, 275
	4		W1152	104	20		33-24-13	276-299
	5		W1152	105	20		33-24-13	050-099, 276-299
	5		W1152	005	20		33-24-13	150-199, 275
	6		W1152	252R	22		23-31-16	050-099
	6		W1152	234R	22		23-31-16	150-199
	7		W1152	252B	22		23-31-16	050-099
	7		W1152	234B	22		23-31-16	150-199
	8	UNUSED						050-099, 150-199
	9	UNUSED						050-099, 150-199
	10	UNUSED						050-099, 150-199
	11	UNUSED						050-099, 150-199
	12	UNUSED						050-099, 150-199
D03402		1454/280/L005		RCPT-				050-099
D03402		1449/280/L005		RCPT-				150-199
D03402		1450/280/L005		RCPT-				275-299
	1		W1152	204R	22		23-31-16	050-099, 276-299
	1		W1152	225R	22		23-31-16	150-199, 275
	2		W1152	204B	22		23-31-16	050-099, 276-299
	2		W1152	225B	22		23-31-16	150-199, 275
	3		W1152	113	22		33-24-13	050-099
	3		W1152	009	20		33-24-13	150-199, 275
	3		W1152	113	20		33-24-13	276-299
	4		W1152	114	22		33-24-13	050-099
	4		W1152	008	20		33-24-13	150-199, 275
	4		W1152	114	20		33-24-13	276-299
	5		W1152	115	20		33-24-13	050-099, 276-299
	5		W1152	010	20		33-24-13	150-199, 275
	6		W1152	254R	22		23-31-16	050-099
	6		W1152	236R	22		23-31-16	150-199
	7		W1152	254B	22		23-31-16	050-099

HOOKUP LIST

D280T132

91-21-51

Section D03400

Page 1

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03402		1454/280/L005		RCPT- (continued)				050-099
D03402		1449/280/L005		RCPT- (continued)				150-199
D03402		1450/280/L005		RCPT- (continued)				275-299
	7		W1152	236B	22		23-31-16	150-199
	8	UNUSED						050-099, 150-199
	9	UNUSED						050-099, 150-199
	10	UNUSED						050-099, 150-199
	11	UNUSED						050-099, 150-199
	12	UNUSED						050-099, 150-199
D03404		1489/280/L005		RCPT-				050-099
D03404		1465/280/L005		RCPT-				275-299
	1		W1152	206R	22		23-31-16	050-099, 276-299
	1		W1152	228R	22		23-31-16	275
	2		W1152	206B	22		23-31-16	050-099, 276-299
	2		W1152	228B	22		23-31-16	275
	3		W1152	123	22		33-24-13	050-099
	3		W1152	012	20		33-24-13	275
	3		W1152	123	20		33-24-13	276-299
	4		W1152	124	22		33-24-13	050-099
	4		W1152	011	20		33-24-13	275
	4		W1152	124	20		33-24-13	276-299
	5		W1152	125	20		33-24-13	050-099, 276-299
	5		W1152	013	20		33-24-13	275
	6		W1152	256R	22		23-31-16	050-099
	7		W1152	256B	22		23-31-16	050-099
	8	UNUSED						050-099
	9	UNUSED						050-099
	10	UNUSED						050-099
	11	UNUSED						050-099
	12	UNUSED						050-099
D03412		1055/270/R073		RCPT-				150-199
D03412		1043/270/R073		RCPT-				275-299
	1		W0810	608R	22		23-31-17	150-199, 275-278
	1		W0810	228R	22		23-31-17	280-299
	2		W0810	608B	22		23-31-17	150-199, 275-278
	2		W0810	228B	22		23-31-17	280-299
	3		W0810	161	20		33-24-14	150-199, 275-299
	4		W0810	162	20		33-24-14	150-199, 275-299
	5		W0810	163	20		33-24-14	150-199, 275-299

HOOKUP LIST

D280T132

91-21-51

Section D03400

Page 2

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03412		1055/270/R073		RCPT- (continued)				150-199
D03412		1043/270/R073		RCPT- (continued)				275-299
	6		W0810	602R	22		23-31-17	150-199
	7		W0810	602B	22		23-31-17	150-199
	8	UNUSED						150-199
	9	UNUSED						150-199
	10	UNUSED						150-199
	11	UNUSED						150-199
	12	UNUSED						150-199
D03414		1071/270/R073		RCPT-				150-199, 275-299
	1		W0810	610R	22		23-31-17	150-199, 275-278
	1		W0810	230R	22		23-31-17	280-299
	2		W0810	610B	22		23-31-17	150-199, 275-278
	2		W0810	230B	22		23-31-17	280-299
	3		W0810	164	20		33-24-14	150-199, 275-299
	4		W0810	165	20		33-24-14	150-199, 275-299
	5		W0810	166	20		33-24-14	150-199, 275-299
	6		W0810	604R	22		23-31-17	150-199
	7		W0810	604B	22		23-31-17	150-199
	8	UNUSED						150-199
	9	UNUSED						150-199
	10	UNUSED						150-199
	11	UNUSED						150-199
	12	UNUSED						150-199
D03416		1097/270/R073		RCPT-				050-099
D03416		1101/270/R073		RCPT-				150-199, 275-299
	1		W0810	206R	22		23-31-17	050-099
	1		W0810	612R	22		23-31-17	150-199, 275-278
	1		W0810	232R	22		23-31-17	280-299
	2		W0810	206B	22		23-31-17	050-099
	2		W0810	612B	22		23-31-17	150-199, 275-278
	2		W0810	232B	22		23-31-17	280-299
	3		W0810	013	22		33-24-14	050-099
	3		W0810	167	20		33-24-14	150-199, 275-299
	4		W0810	014	22		33-24-14	050-099
	4		W0810	168	20		33-24-14	150-199, 275-299
	5		W0810	015	20		33-24-14	050-099
	5		W0810	169	20		33-24-14	150-199, 275-299
	6		W0810	246R	22		23-31-17	050-099, 150-199

HOOKUP LIST

D280T132

91-21-51

Section D03400

Page 3

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03416		1097/270/R073		RCPT- (continued)				050-099
D03416		1101/270/R073		RCPT- (continued)				150-199, 275-299
	7		W0810	246B	22		23-31-17	050-099, 150-199
	8	UNUSED						050-099, 150-199
	9	UNUSED						050-099, 150-199
	10	UNUSED						050-099, 150-199
	11	UNUSED						050-099, 150-199
	12	UNUSED						050-099, 150-199
D03418		1116/270/R073		RCPT-				050-099
D03418		1131/270/R073		RCPT-				150-199, 275-299
	1		W0810	208R	22		23-31-17	050-099
	1		W0810	614R	22		23-31-17	150-199, 275-278
	1		W0810	234R	22		23-31-17	280-299
	2		W0810	208B	22		23-31-17	050-099
	2		W0810	614B	22		23-31-17	150-199, 275-278
	2		W0810	234B	22		23-31-17	280-299
	3		W0810	018	22		33-24-14	050-099
	3		W0810	170	20		33-24-14	150-199, 275-299
	4		W0810	019	22		33-24-14	050-099
	4		W0810	171	20		33-24-14	150-199, 275-299
	5		W0810	020	20		33-24-14	050-099
	5		W0810	172	20		33-24-14	150-199, 275-299
	6		W0810	248R	22		23-31-17	050-099, 150-199
	7		W0810	248B	22		23-31-17	050-099, 150-199
	8	UNUSED						050-099, 150-199
	9	UNUSED						050-099, 150-199
	10	UNUSED						050-099, 150-199
	11	UNUSED						050-099, 150-199
	12	UNUSED						050-099, 150-199
D03420		1146/270/R073		RCPT-				050-099
D03420		1159/270/R073		RCPT-				150-199, 275-299
	1		W0810	210R	22		23-31-17	050-099
	1		W0810	616R	22		23-31-17	150-199, 275-278
	1		W0810	236R	22		23-31-17	280-299
	2		W0810	210B	22		23-31-17	050-099
	2		W0810	616B	22		23-31-17	150-199, 275-278
	2		W0810	236B	22		23-31-17	280-299
	3		W0810	023	22		33-24-14	050-099
	3		W0810	173	20		33-24-14	150-199, 275-299

HOOKUP LIST

D280T132

91-21-51

Section D03400

Page 4

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03420		1146/270/R073		RCPT- (continued)				050-099
D03420		1159/270/R073		RCPT- (continued)				150-199, 275-299
	4		W0810	024	22		33-24-14	050-099
	4		W0810	174	20		33-24-14	150-199, 275-299
	5		W0810	025	20		33-24-14	050-099
	5		W0810	175	20		33-24-14	150-199, 275-299
	6		W0810	250R	22		23-31-17	050-099, 150-199
	7		W0810	250B	22		23-31-17	050-099, 150-199
	8	UNUSED						050-099, 150-199
	9	UNUSED						050-099, 150-199
	10	UNUSED						050-099, 150-199
	11	UNUSED						050-099, 150-199
	12	UNUSED						050-099, 150-199
D03422		1175/270/R073		RCPT-				050-099
D03422		1189/270/R073		RCPT-				150-199, 275-299
	1		W0810	212R	22		23-31-17	050-099
	1		W0810	618R	22		23-31-17	150-199, 275-278
	1		W0810	238R	22		23-31-17	280-299
	2		W0810	212B	22		23-31-17	050-099
	2		W0810	618B	22		23-31-17	150-199, 275-278
	2		W0810	238B	22		23-31-17	280-299
	3		W0810	028	22		33-24-14	050-099
	3		W0810	176	20		33-24-14	150-199, 275-299
	4		W0810	029	22		33-24-14	050-099
	4		W0810	177	20		33-24-14	150-199, 275-299
	5		W0810	030	20		33-24-14	050-099
	5		W0810	178	20		33-24-14	150-199, 275-299
	6		W0810	252R	22		23-31-17	050-099, 150-199
	7		W0810	252B	22		23-31-17	050-099, 150-199
	8	UNUSED						050-099, 150-199
	9	UNUSED						050-099, 150-199
	10	UNUSED						050-099, 150-199
	11	UNUSED						050-099, 150-199
	12	UNUSED						050-099, 150-199
D03424		1204/270/R073		RCPT-				ALL
	1		W0810	214R	22		23-31-17	050-099
	1		W0810	628R	22		23-31-17	150-199, 275-278
	1		W0810	248R	22		23-31-17	280-299
	2		W0810	214B	22		23-31-17	050-099

HOOKUP LIST

D280T132

91-21-51

Section D03400

Page 5

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03424		1204/270/R073		RCPT- (continued)				ALL
	2		W0810	628B	22		23-31-17	150-199, 275-278
	2		W0810	248B	22		23-31-17	280-299
	3		W0810	033	22		33-24-14	050-099
	3		W0810	191	20		33-24-14	150-199, 275-299
	4		W0810	034	22		33-24-14	050-099
	4		W0810	192	20		33-24-14	150-199, 275-299
	5		W0810	035	20		33-24-14	050-099
	5		W0810	193	20		33-24-14	150-199, 275-299
	6		W0810	254R	22		23-31-17	050-099, 150-199
	7		W0810	254B	22		23-31-17	050-099, 150-199
	8	UNUSED						050-099, 150-199
	9	UNUSED						050-099, 150-199
	10	UNUSED						050-099, 150-199
	11	UNUSED						050-099, 150-199
	12	UNUSED						050-099, 150-199
D03426		1234/270/R073		RCPT-				ALL
	1		W0810	216R	22		23-31-17	050-099
	1		W0810	630R	22		23-31-17	150-199, 275-278
	1		W0810	250R	22		23-31-17	280-299
	2		W0810	216B	22		23-31-17	050-099
	2		W0810	630B	22		23-31-17	150-199, 275-278
	2		W0810	250B	22		23-31-17	280-299
	3		W0810	038	22		33-24-14	050-099
	3		W0810	194	20		33-24-14	150-199, 275-299
	4		W0810	039	22		33-24-14	050-099
	4		W0810	195	20		33-24-14	150-199, 275-299
	5		W0810	040	20		33-24-14	050-099
	5		W0810	196	20		33-24-14	150-199, 275-299
	6		W0810	256R	22		23-31-17	050-099, 150-199
	7		W0810	256B	22		23-31-17	050-099, 150-199
	8	UNUSED						050-099, 150-199
	9	UNUSED						050-099, 150-199
	10	UNUSED						050-099, 150-199
	11	UNUSED						050-099, 150-199
	12	UNUSED						050-099, 150-199
D03428		1273/270/R073		RCPT-				050-099
D03428		1263/270/R073		RCPT-				150-199, 275-299
	1		W0810	218R	22		23-31-17	050-099

HOOKUP LIST

D280T132

91-21-51

Section D03400

Page 6

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03428		1273/270/R073		RCPT- (continued)				050-099
D03428		1263/270/R073		RCPT- (continued)				150-199, 275-299
	1		W0810	632R	22		23-31-17	150-199, 275-278
	1		W0810	252R	22		23-31-17	280-299
	2		W0810	218B	22		23-31-17	050-099
	2		W0810	632B	22		23-31-17	150-199, 275-278
	2		W0810	252B	22		23-31-17	280-299
	3		W0810	043	22		33-24-14	050-099
	3		W0810	197	20		33-24-14	150-199, 275-299
	4		W0810	044	22		33-24-14	050-099
	4		W0810	198	20		33-24-14	150-199, 275-299
	5		W0810	045	20		33-24-14	050-099
	5		W0810	199	20		33-24-14	150-199, 275-299
	6		W0810	258R	22		23-31-17	050-099, 150-199
	7		W0810	258B	22		23-31-17	050-099, 150-199
	8	UNUSED						050-099, 150-199
	9	UNUSED						050-099, 150-199
	10	UNUSED						050-099, 150-199
	11	UNUSED						050-099, 150-199
	12	UNUSED						050-099, 150-199
D03430		1292/270/R073		RCPT-				ALL
	1		W0810	220R	22		23-31-17	050-099
	1		W0810	634R	22		23-31-17	150-199, 275-278
	1		W0810	254R	22		23-31-17	280-299
	2		W0810	220B	22		23-31-17	050-099
	2		W0810	634B	22		23-31-17	150-199, 275-278
	2		W0810	254B	22		23-31-17	280-299
	3		W0810	048	22		33-24-14	050-099
	3		W0810	501	20		33-24-14	150-199, 275-299
	4		W0810	049	22		33-24-14	050-099
	4		W0810	502	20		33-24-14	150-199, 275-299
	5		W0810	050	20		33-24-14	050-099
	5		W0810	503	20		33-24-14	150-199, 275-299
	6		W0810	260R	22		23-31-17	050-099, 150-199
	7		W0810	260B	22		23-31-17	050-099, 150-199
	8	UNUSED						050-099, 150-199
	9	UNUSED						050-099, 150-199
	10	UNUSED						050-099, 150-199
	11	UNUSED						050-099, 150-199
	12	UNUSED						050-099, 150-199

HOOKUP LIST

D280T132

91-21-51

Section D03400

Page 7

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03432		1322/270/R073		RCPT-				ALL
	1		W0810	222R	22		23-31-17	050-099
	1		W0810	636R	22		23-31-17	150-199, 275-278
	1		W0810	256R	22		23-31-17	280-299
	2		W0810	222B	22		23-31-17	050-099
	2		W0810	636B	22		23-31-17	150-199, 275-278
	2		W0810	256B	22		23-31-17	280-299
	3		W0810	053	22		33-24-14	050-099
	3		W0810	504	20		33-24-14	150-199, 275-299
	4		W0810	054	22		33-24-14	050-099
	4		W0810	505	20		33-24-14	150-199, 275-299
	5		W0810	055	20		33-24-14	050-099
	5		W0810	506	20		33-24-14	150-199, 275-299
	6		W0810	262R	22		23-31-17	050-099, 150-199
	7		W0810	262B	22		23-31-17	050-099, 150-199
	8	UNUSED						050-099, 150-199
	9	UNUSED						050-099, 150-199
	10	UNUSED						050-099, 150-199
	11	UNUSED						050-099, 150-199
	12	UNUSED						050-099, 150-199
D03434		1351/270/R073		RCPT-				ALL
	1		W0810	224R	22		23-31-17	050-099
	1		W0810	638R	22		23-31-17	150-199, 275-278
	1		W0810	258R	22		23-31-17	280-299
	2		W0810	224B	22		23-31-17	050-099
	2		W0810	638B	22		23-31-17	150-199, 275-278
	2		W0810	258B	22		23-31-17	280-299
	3		W0810	058	22		33-24-14	050-099
	3		W0810	507	20		33-24-14	150-199, 275-299
	4		W0810	059	22		33-24-14	050-099
	4		W0810	508	20		33-24-14	150-199, 275-299
	5		W0810	060	20		33-24-14	050-099
	5		W0810	509	20		33-24-14	150-199, 275-299
	6		W0810	264R	22		23-31-17	050-099, 150-199
	7		W0810	264B	22		23-31-17	050-099, 150-199
	8	UNUSED						050-099, 150-199
	9	UNUSED						050-099, 150-199
	10	UNUSED						050-099, 150-199
	11	UNUSED						050-099, 150-199
	12	UNUSED						050-099, 150-199

HOOKUP LIST

D280T132

91-21-51

Section D03400

Page 8

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03436		1380/270/R073		RCPT-				050-099, 275-299
D03436		1387/270/R073		RCPT-				150-199
	1		W0810	226R	22		23-31-17	050-099
	1		W0810	640R	22		23-31-17	150-199, 275-278
	1		W0810	260R	22		23-31-17	280-299
	2		W0810	226B	22		23-31-17	050-099
	2		W0810	640B	22		23-31-17	150-199, 275-278
	2		W0810	260B	22		23-31-17	280-299
	3		W0810	063	22		33-24-14	050-099
	3		W0810	510	20		33-24-14	150-199, 275-299
	4		W0810	064	22		33-24-14	050-099
	4		W0810	511	20		33-24-14	150-199, 275-299
	5		W0810	065	20		33-24-14	050-099
	5		W0810	512	20		33-24-14	150-199, 275-299
	6		W0810	266R	22		23-31-17	050-099, 150-199
	7		W0810	266B	22		23-31-17	050-099, 150-199
	8	UNUSED						050-099, 150-199
	9	UNUSED						050-099, 150-199
	10	UNUSED						050-099, 150-199
	11	UNUSED						050-099, 150-199
	12	UNUSED						050-099, 150-199
D03438		1410/270/R073		RCPT-				050-099, 275-299
D03438		1406/270/R073		RCPT-				150-199
	1		W0810	228R	22		23-31-17	050-099
	1		W0810	641R	22		23-31-17	150-199, 275-278
	1		W0810	262R	22		23-31-17	280-299
	2		W0810	228B	22		23-31-17	050-099
	2		W0810	641B	22		23-31-17	150-199, 275-278
	2		W0810	262B	22		23-31-17	280-299
	3		W0810	068	22		33-24-14	050-099
	3		W0810	513	20		33-24-14	150-199, 275-299
	4		W0810	069	22		33-24-14	050-099
	4		W0810	514	20		33-24-14	150-199, 275-299
	5		W0810	070	20		33-24-14	050-099
	5		W0810	515	20		33-24-14	150-199, 275-299
	6		W0810	268R	22		23-31-17	050-099
	6		W0810	269R	22		23-31-17	150-199
	7		W0810	268B	22		23-31-17	050-099
	7		W0810	269B	22		23-31-17	150-199
	8	UNUSED						050-099, 150-199

HOOKUP LIST

D280T132

91-21-51

Section D03400

Page 9

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03438		1410/270/R073		RCPT- (continued)				050-099, 275-299
D03438		1406/270/R073		RCPT- (continued)				150-199
	9	UNUSED						050-099, 150-199
	10	UNUSED						050-099, 150-199
	11	UNUSED						050-099, 150-199
	12	UNUSED						050-099, 150-199
D03440		1428/270/R073		RCPT-				050-099
D03440		1436/270/R073		RCPT-				150-199
D03440		1427/270/R073		RCPT-				275-299
	1		W0810	230R	22		23-31-17	050-099
	1		W0810	642R	22		23-31-17	150-199, 275-278
	1		W0810	264R	22		23-31-17	280-299
	2		W0810	230B	22		23-31-17	050-099
	2		W0810	642B	22		23-31-17	150-199, 275-278
	2		W0810	264B	22		23-31-17	280-299
	3		W0810	072	22		33-24-14	050-099
	3		W0810	516	20		33-24-14	150-199, 275-299
	4		W0810	071	22		33-24-14	050-099
	4		W0810	517	20		33-24-14	150-199, 275-299
	5		W0810	075	20		33-24-14	050-099
	5		W0810	518	20		33-24-14	150-199, 275-299
	6		W0810	270R	22		23-31-17	050-099
	6		W0810	268R	22		23-31-17	150-199
	7		W0810	270B	22		23-31-17	050-099
	7		W0810	268B	22		23-31-17	150-199
	8	UNUSED						050-099, 150-199
	9	UNUSED						050-099, 150-199
	10	UNUSED						050-099, 150-199
	11	UNUSED						050-099, 150-199
	12	UNUSED						050-099, 150-199
D03446		1569/186/R031		PLUG-				050-099
D03446		1570/186/R031		PLUG-				150-199, 275-299
	1		W0966	202R	24		38-14-11	ALL
	2		W0966	202B	24		38-14-11	ALL
	3		W0966	009	24		38-14-11	ALL
	4		W0966	010	20		38-14-11	ALL
	5		W0966	011	20		38-14-11	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D03400

Page 10

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03446		1569/186/R031		PLUG- (continued)				050-099
D03446		1570/186/R031		PLUG- (continued)				150-199, 275-299
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D03448		P031-00/ /		PLUG-P31				ALL
	1		W0022	072	24		29-11-22	ALL
	2		W0022	073	24		29-11-22	ALL
	3		W0022	074	24		29-11-22	ALL
	4	UNUSED						ALL
	5		W0022	117	24		29-11-31	ALL
	6		W0022	118	24		29-11-31	ALL
	7	UNUSED						ALL
	8		W0022	076	24		29-11-22	ALL
	9		W0022	083	24		29-11-22	ALL
	10		W0022	075	24		29-11-22	ALL
	11		W0022	071	24		29-11-22	ALL
	12		W0022	071	24		29-11-22	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15		W0022	084	20		29-11-22	ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18		W0022	146	24		29-11-22	ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D03450		P031-00/ /		PLUG-P31				ALL
	1		W0022	064	22		29-11-31	ALL
	2		W0022	065	22		29-11-31	ALL
	3		W0022	066	22		29-11-31	ALL
	4	UNUSED						ALL
	5		W0022	115	24		29-11-31	ALL
	6		W0022	116	24		29-11-31	ALL

HOOKUP LIST
D280T132

91-21-51
Section D03400
Page 11
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03450		P031-00/ /		PLUG-P31 (continued)				ALL
	7	UNUSED						ALL
	8		W0022	068	22		29-11-31	ALL
	9		W0022	085	24		29-11-31	ALL
	10		W0022	067	24		29-11-31	ALL
	11		W0022	063	22		29-11-31	ALL
	12		W0022	063	22		29-11-31	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15		W0022	127	20		29-11-31	ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18		W0022	148	22		29-11-31	ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D03452		P032-00/ /		PLUG-P32				ALL
	1		W0024	064	24		29-11-12	ALL
	2		W0024	065	24		29-11-12	ALL
	3		W0024	066	24		29-11-12	ALL
	4	UNUSED						ALL
	5		W0024	125	24		29-11-31	ALL
	6		W0024	126	24		29-11-31	ALL
	7	UNUSED						ALL
	8		W0024	176	24		29-11-12	ALL
	9		W0024	040	24		29-11-12	ALL
	10		W0024	069	24		29-11-12	ALL
	11		W0024	063	24		29-11-12	ALL
	12		W0024	063	24		29-11-12	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15		W0024	067	20		29-11-12	ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18		W0024	158	24		29-11-12	ALL
	19	UNUSED						ALL
	20	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D03400

Page 12

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03452		P032-00/ /		PLUG-P32 (continued)				ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D03454		P032-00/ /		PLUG-P32				ALL
	1		W0024	054	24		29-11-31	ALL
	2		W0024	055	24		29-11-31	ALL
	3		W0024	056	24		29-11-31	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8		W0024	058	24		29-11-31	ALL
	9		W0024	068	24		29-11-31	ALL
	10		W0024	057	24		29-11-31	ALL
	11		W0024	053	24		29-11-31	ALL
	12		W0024	053	24		29-11-31	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15		W0024	071	20		29-11-31	ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18		W0024	160	24		29-11-31	ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D03466		R1140/12/TIP		RCPT-				ALL
	1		W0470	211B	18		33-44-21	ALL
	2		W0470	211R	18		33-44-21	ALL
	3		W0470	003	18		33-44-21	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D03400
Page 13
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03474		P036-00/ /		RELAY SOCKET-				ALL
	A1	UNUSED						ALL
	A2		W0176	192	22		36-11-11	ALL
	A3		W0176	199	20		36-11-11	ALL
	B1	UNUSED						ALL
	B2		W0176	690	24		73-21-17	ALL
	B3		W0176	689	20		73-21-17	ALL
	X1		W0176	194	24		36-11-11	ALL
	X2		W0176	503	24		36-11-11	ALL
D03476		P036-00/ /		RELAY SOCKET-				ALL
	A1	UNUSED						ALL
	A2		W0176	191	22		36-11-11	ALL
	A3		W0176	197	20		36-11-11	ALL
	B1	UNUSED						ALL
	B2	UNUSED						ALL
	B3	UNUSED						ALL
	X1		W0176	193	24		36-11-11	ALL
	X2		W0176	198	24		36-11-11	ALL
D03478		P036-00/ /		RELAY SOCKET-				ALL
	A1	UNUSED						ALL
	A2		W0176	033	22		36-11-31	ALL
	A3		W0176	035	20		36-11-31	ALL
	B1	UNUSED						ALL
	B2		W0176	09D	24		36-11-41	ALL
	B3		W0176	09C	24		36-11-41	ALL
	X1		W0176	034	24		36-11-31	ALL
	X2		W0176	036	24		36-11-31	ALL
D03480		P036-00/ /		RELAY SOCKET-				ALL
	A1	UNUSED						ALL
	A2		W0176	029	22		36-11-31	ALL
	A3		W0176	027	20		36-11-31	ALL
	B1	UNUSED						ALL
	B2	UNUSED						ALL
	B3	UNUSED						ALL
	X1		W0176	030	24		36-11-31	ALL
	X2		W0176	028	24		36-11-31	ALL

HOOKUP LIST

D280T132

91-21-51

Section D03400

Page 14

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03482		P036-00/ /		RELAY SOCKET				ALL
	A1		W0182	009	24		21-53-12	ALL
	A2		W0182	010	24		21-53-12	ALL
	A3	UNUSED						ALL
	B1	UNUSED						ALL
	B2	UNUSED						ALL
	B3	UNUSED						ALL
	X1		W0182	011	24		21-53-12	ALL
	X2		W0182	012	24		21-53-12	ALL
D03484		P036-00/ /		RELAY SOCKET				ALL
	A1		W0182	013	24		21-53-12	ALL
	A2		W0182	014	24		21-53-12	ALL
	A3	UNUSED						ALL
	B1	UNUSED						ALL
	B2	UNUSED						ALL
	B3	UNUSED						ALL
	X1		W0182	015	24		21-53-12	ALL
	X2		W0182	016	24		21-53-12	ALL
D03486		P036-00/ /		RELAY SOCKET				ALL
	A1		W0182	017	24		21-53-12	ALL
	A2		W0182	018	24		21-53-12	ALL
	A3	UNUSED						ALL
	B1	UNUSED						ALL
	B2	UNUSED						ALL
	B3	UNUSED						ALL
	X1		W0182	019	24		21-53-12	ALL
	X2		W0182	020	24		21-53-12	ALL
D03488		P036-00/ /		RELAY SOCKET				ALL
	A1		W0182	021	24		21-53-12	ALL
	A2		W0182	022	24		21-53-12	ALL
	A3	UNUSED						ALL
	B1	UNUSED						ALL
	B2	UNUSED						ALL
	B3	UNUSED						ALL
	X1		W0182	023	24		21-53-12	ALL
	X2		W0182	024	24		21-53-12	ALL



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03490		P036-00/ /		RELAY SOCKET				ALL
	A1		W0182	006	24		21-53-12	ALL
	A2		W0182	025	24		21-53-12	ALL
	A3	UNUSED						ALL
	B1	UNUSED						ALL
	B2	UNUSED						ALL
	B3	UNUSED						ALL
	X1		W0182	026	24		21-53-12	ALL
	X2		W0182	027	24		21-53-12	ALL
D03492		P036-00/ /		RELAY SOCKET-				ALL
	A1		W0176	65K	24		78-36-11	ALL
	A2		W0176	02U	24		78-36-11	ALL
	A3		W0176	65L	24		78-36-11	ALL
	B1		W0176	814	22		78-34-11	ALL
	B2		W0176	813	24		78-34-11	ALL
	B3	UNUSED						ALL
	C1		W0176	84G	20		78-36-11	ALL
	C2		W0176	84H	22		78-36-11	ALL
	C3	UNUSED						ALL
	D1	UNUSED						ALL
	D2	UNUSED						ALL
	D3	UNUSED						ALL
	X1		W0176	812	24		78-34-11	ALL
	X2		W0176	815	24		78-34-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D03400

Page 16 End

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03500		P036-00/ /		RELAY SOCKET-				ALL
	A1		W0184	139	20		28-21-13	ALL
	A2		W0184	150	20		28-21-13	ALL
	A3	UNUSED						ALL
	B1	UNUSED						ALL
	B2	UNUSED						ALL
	B3	UNUSED						ALL
	X1		W0184	122	22		28-21-11	ALL
	X2		W0184	121	22		28-21-11	ALL
D03502		P036-00/ /		RELAY SOCKET-				ALL
	A1		W0184	141	20		28-21-13	ALL
	A2		W0184	152	20		28-21-13	ALL
	A3	UNUSED						ALL
	B1	UNUSED						ALL
	B2	UNUSED						ALL
	B3	UNUSED						ALL
	X1		W0184	123	22		28-21-11	ALL
	X2		W0184	125	22		28-21-11	ALL
D03504		P036-00/ /		RELAY SOCKET-				ALL
	A1		W0182	054	24		21-53-11	ALL
	A2		W0182	063	24		21-53-11	ALL
	A3		W0182	009	24		21-53-12	ALL
	B1		W0182	053	24		21-53-11	ALL
	B2		W0182	064	24		21-53-11	ALL
	B3		W0182	013	24		21-53-12	ALL
	C1		W0182	052	24		21-53-11	ALL
	C2		W0182	065	24		21-53-11	ALL
	C3		W0182	017	24		21-53-12	ALL
	D1		W0182	051	24		21-53-11	ALL
	D2		W0182	066	24		21-53-11	ALL
	D3		W0182	021	24		21-53-12	ALL
	X1		W0182	003	24		21-53-11	ALL
	X2		W0182	004	24		21-53-11	ALL
D03506		P036-00/ /		RELAY SOCKET				ALL
	A1		W0182	050	24		21-53-11	ALL
	A2		W0182	067	24		21-53-11	ALL
	A3		W0182	006	24		21-53-12	ALL
	B1		W0182	049	24		21-53-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D03500

Page 1

Mar 14/2007

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03506		P036-00/ /		RELAY SOCKET (continued)				ALL
	B2		W0182	068	24		21-53-11	ALL
	B3		W0182	005	24		21-53-12	ALL
	C1	UNUSED						ALL
	C2	UNUSED						ALL
	C3	UNUSED						ALL
	D1		W0182	505	22		21-51-11	ALL
	D2		W0182	506	22		21-51-11	ALL
	D3	UNUSED						ALL
	X1		W0182	007	24		21-53-11	ALL
	X2		W0182	008	24		21-53-11	ALL
D03510		P033-00/ /		RELAY SOCKET-				ALL
	A1		W0144	709	22		30-31-11	ALL
	A2		W0144	705	22		30-31-11	ALL
	A3		W0144	694	22		30-31-11	ALL
	B1	UNUSED						ALL
	B2		W0144	702	24		30-31-11	ALL
	B3		W0144	710	24		30-31-11	ALL
	C1		W0144	732	22		30-31-21	ALL
	C2		W0144	730	22		30-31-21	ALL
	C3	UNUSED						ALL
	D1		W0144	022	22		30-31-11	ALL
	D1		W0144	700	22		30-31-11	ALL
	D2		W0144	705	22		30-31-11	ALL
	D3		W0144	700	22		30-31-11	ALL
	X1		W0144	085	24		32-09-13	ALL
	X2		W0144	086	24		32-09-13	ALL
	DED		W0144	702Z			30-31-11	ALL
	DED		W0144	710Z			30-31-11	ALL
	DED		W0144	730Z			30-31-21	ALL
	DED		W0144	732Z			30-31-21	ALL
D03512		P036-00/ /		RELAY SOCKET-				ALL
	A1		W0176	05E	24		24-51-71	ALL
	A2		W0176	04R	24		24-51-71	ALL
	A3	UNUSED						ALL
	B1		W0176	661	24		32-31-11	ALL
	B2		W0176	662	20		32-31-11	ALL
	B3	UNUSED						ALL
	C1	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D03500

Page 2

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03512		P036-00/ /		RELAY SOCKET- (continued)				ALL
	C2	UNUSED						ALL
	C3	UNUSED						ALL
	D1		W0176	09Y	24		21-45-21	ALL
	D2		W0176	09N	24		21-45-21	050-099
	D2		W0176	21J	24		21-45-21	150-199, 275-299
	D3	UNUSED						ALL
	X1		W0176	560	24		32-09-11	ALL
	X2		W0176	559	24		32-09-11	ALL
D03514		P036-00/ /		RELAY SOCKET				ALL
	1		W0176	172	24		24-22-11	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W0176	016	24		32-09-11	ALL
	7		W0176	657	20		21-58-11	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10		W0176	127	22		24-25-11	ALL
	11		W0176	126	22		24-25-11	ALL
	12		W0176	037	24		32-09-11	ALL
	13		W0176	868	24		24-22-11	ALL
	14		W0176	622	24		21-58-11	ALL
	DED		W0176	016Z			32-09-11	ALL
	DED		W0176	037Z			32-09-11	ALL
D03516		P036-00/ /		RELAY SOCKET-				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W0176	080	20		34-46-12	ALL
	4	UNUSED						ALL
	5		W0176	079	24		34-46-12	ALL
	6		W0176	110	24		32-09-11	ALL
	7		W0176	073	24		33-16-14	ALL
	8		W0176	075	24		33-16-14	ALL
	9	UNUSED						ALL
	10		W0176	655	24		34-12-12	ALL
	11		W0176	654	24		34-12-12	ALL
	12		W0176	109	24		32-09-11	ALL

HOOKUP LIST
D280T132

91-21-51
Section D03500
Page 3
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03516		P036-00/ /		RELAY SOCKET- (continued)				ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
D03524		P036-00/ /		RELAY SOCKET-				ALL
	A1	UNUSED						ALL
	A2	UNUSED						ALL
	A3	UNUSED						ALL
	B1	UNUSED						ALL
	B2		W0184	643	24		29-11-32	ALL
	B3		W0184	642	24		29-11-32	ALL
	X1		W0184	685	24		29-11-32	ALL
	X2		W0184	641	24		29-11-32	ALL
D03526		P036-00/ /		RELAY SOCKET-				ALL
	A1	UNUSED						ALL
	A2	UNUSED						ALL
	A3	UNUSED						ALL
	B1		W0184	006	22		31-31-11	ALL
	B2		W0184	002	22		31-31-11	ALL
	B3		W0184	857	22		31-31-11	ALL
	C1	UNUSED						ALL
	C2		W0184	615	24		23-31-13	ALL
	C3		W0184	614	24		23-31-13	ALL
	D1	UNUSED						ALL
	D2	UNUSED						050-099, 157, 167-199, 275-299
	D2		W0184	09B	20		SPARE	150-156, 162-166
	D3	UNUSED						ALL
	X1		W0184	166	24		80-11-11	ALL
	X2		W0184	169	20		80-11-11	ALL
D03528		P036-00/ /		RELAY SOCKET-				ALL
	A1		W0176	82S	20		78-34-11	ALL
	A2		W0176	82B	20		78-34-11	ALL
	A3		W0176	83S	20		78-34-11	ALL
	B1		W0176	65K	24		78-36-11	ALL
	B2		W0176	64S	24		78-36-11	ALL
	B3	UNUSED						ALL
	X1		W0176	82V	20		78-34-11	ALL
	X2		W0176	83Q	24		78-34-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D03500

Page 4

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03530		P036-00/ /		PLUG-				ALL
	A1		W0184	178	20		76-11-11	ALL
	A2		W0184	176	20		76-11-11	ALL
	A3		W0184	180	22		76-11-11	050-099, 275-299
	A3		W0184	180	20		76-11-11	150-154
	A3	BJ	W0184	180	22		76-11-11	155-199
	B1	UNUSED						ALL
	B2		W0184	720	22		74-31-11	ALL
	B3		W0184	722	22		74-31-11	ALL
	C1	UNUSED						ALL
	C2		W0184	721	22		74-31-11	ALL
	C3		W0184	723	22		74-31-11	ALL
	D1	UNUSED						ALL
	D2		W0184	168	24		80-11-11	ALL
	D3		W0184	170	24		80-11-11	ALL
	X1		W0184	175	24		76-11-11	ALL
	X2		W0184	177	20		76-11-11	ALL
	DED		W0184	720Z			74-31-11	ALL
	DED		W0184	722Z			74-31-11	ALL
D03532		P036-00/ /		RELAY SOCKET				ALL
	1		W0176	99A	20		34-22-16	ALL
	2		W0176	99B	22		34-22-16	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W0176	038	24		32-09-11	ALL
	6		W0192	19Y	24		73-21-18	275-276
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12		W0176	123	24		32-09-11	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
D03534		P036-00/ /		RELAY SOCKET				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D03500
Page 5
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03534		P036-00/ /		RELAY SOCKET (continued)				ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W0176	005	24		32-09-11	ALL
	7		W0176	877	24		33-16-14	ALL
	8		W0176	878	24		33-16-14	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12		W0176	010	24		32-09-11	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
D03536		P036-00/ /		RELAY SOCKET				ALL
	A1		W0176	620	22		23-71-11	ALL
	A2		W0176	850	22		23-71-11	ALL
	A3	UNUSED						ALL
	B1		W0176	847	24		29-11-32	ALL
	B2		W0176	849	24		29-11-32	ALL
	B3	UNUSED						ALL
	C1		W0176	100	20		78-34-11	ALL
	C2		W0176	03T	20		78-34-11	ALL
	C3		W0176	67C	20		78-34-11	ALL
	D1	UNUSED						ALL
	D2	UNUSED						ALL
	D3	UNUSED						ALL
	X1		W0176	014	24		32-09-11	ALL
	X2		W0176	015	24		32-09-11	ALL
	DED		W0176	014Z			32-09-11	ALL
	DED		W0176	015Z			32-09-11	ALL
	DED		W0176	03TZ			78-34-11	ALL
	DED		W0176	100Z			78-34-11	ALL
	DED		W0176	847Z			29-11-32	ALL
	DED		W0176	849Z			29-11-32	ALL
D03538		P036-00/ /		RELAY SOCKET-				ALL
	A1		W0184	111	18		28-21-11	ALL
	A2		W0184	106	18		28-21-11	ALL
	A3	UNUSED						ALL
	B1		W0184	205R	24		28-41-11	ALL

HOOKUP LIST
D280T132

91-21-51
Section D03500
Page 6
Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03538		P036-00/ /		RELAY SOCKET- (continued)				ALL
	B2		W0184	205B	24		28-41-11	ALL
	B3	UNUSED						ALL
	C1		W0184	595	18		28-41-12	ALL
	C2		W0184	596	18		28-41-12	ALL
	C3	UNUSED						ALL
	D1		W0184	506	20		28-26-11	ALL
	D2		W0184	538	20		28-26-11	ALL
	D3	UNUSED						ALL
	X1		W0184	107	18		28-21-11	ALL
	X2		W0184	109	22		28-21-11	ALL
D03540		P036-00/ /		RELAY SOCKET-				ALL
	A1		W0184	140	20		28-21-13	ALL
	A2		W0184	146	20		28-21-13	ALL
	A3	UNUSED						ALL
	B1	UNUSED						ALL
	B2	UNUSED						ALL
	B3	UNUSED						ALL
	X1		W0184	117	22		28-21-11	ALL
	X2		W0184	116	22		28-21-11	ALL
D03542		P036-00/ /		RELAY SOCKET-				ALL
	A1		W0184	138	20		28-21-13	ALL
	A2		W0184	148	20		28-21-13	ALL
	A3	UNUSED						ALL
	B1	UNUSED						ALL
	B2	UNUSED						ALL
	B3	UNUSED						ALL
	X1		W0184	118	22		28-21-11	ALL
	X2		W0184	120	22		28-21-11	ALL
D03544		P036-00/ /		RELAY SOCKET-				ALL
	A1		W0184	142	20		28-21-13	ALL
	A2		W0184	154	20		28-21-13	ALL
	A3	UNUSED						ALL
	B1	UNUSED						ALL
	B2	UNUSED						ALL
	B3	UNUSED						ALL
	X1		W0184	127	22		28-21-11	ALL
	X2		W0184	126	22		28-21-11	ALL

HOOKUP LIST
D280T132

91-21-51
Section D03500
Page 7
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03546		P036-00/ /		RELAY SOCKET				ALL
	A1		W0182	005	24		21-53-12	ALL
	A2		W0182	028	24		21-53-12	ALL
	A3	UNUSED						ALL
	B1	UNUSED						ALL
	B2	UNUSED						ALL
	B3	UNUSED						ALL
	X1		W0182	029	24		21-53-12	ALL
	X2		W0182	030	24		21-53-12	ALL
D03548		P036-00/ /		RELAY SOCKET-				ALL
	A1	UNUSED						ALL
	A2		W0184	137	20		28-21-12	ALL
	A3		W0184	132	22		28-21-12	ALL
	B1		W0184	144	20		28-21-13	ALL
	B2		W0184	156	20		28-21-13	ALL
	B3	UNUSED						ALL
	C1	UNUSED						ALL
	C2	UNUSED						ALL
	C3	UNUSED						ALL
	D1	UNUSED						ALL
	D2	UNUSED						ALL
	D3	UNUSED						ALL
	X1		W0184	115	22		28-21-12	ALL
	X2		W0184	136	20		28-21-12	ALL
D03554		P036-00/ /		RELAY SOCKET-				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						050-099, 151, 275-299
	3		W9048	900	24		23-19-11	150, 152-199
	4		W0176	77Q	20		26-18-11	ALL
	5		W0176	77P	24		26-18-11	ALL
	5		W9048	901	24		23-19-11	150, 152-199
	6		W0176	106	24		32-09-11	ALL
	7		W0176	072	24		33-16-14	ALL
	8		W0176	074	24		33-16-14	ALL
	9	UNUSED						ALL
	10		W0176	710	20		34-53-11	ALL
	11		W0176	709	24		34-53-11	ALL
	12		W0176	105	24		32-09-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D03500

Page 8

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03554		P036-00/ /		RELAY SOCKET- (continued)				ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
D03556		P019-00/ /		RELAY SOCKET-P19				050-099
D03556		P019-00/ /		RELAY SOCKET-				150-199, 275-299
	A1	UNUSED						ALL
	A2	UNUSED						ALL
	A3	UNUSED						ALL
	B1		W1060	017	22		33-21-21	050-099, 150-199
	B1		W1060	621	22		33-21-21	275-299
	B2		W1060	686	22		33-21-21	050-099, 150-157
	B2		W1060	019	22		33-21-21	162-199
	B2		W1060	005	22		33-21-21	275-299
	B3	UNUSED						ALL
	X1		W1060	758	22		33-21-21	050-099, 150-199
	X1		W1060	011	24		33-21-21	275-299
	X2		W1060	006	20		33-21-21	ALL
D03558		P019-00/ /		RELAY SOCKET-P19				050-099
D03558		P019-00/ /		RELAY SOCKET-				150-199, 275-299
	A1		W1060	048	22		33-22-41	ALL
	A2		W1060	630	22		33-22-41	050-099, 275-299
	A2		W1060	752	22		33-22-41	150-199
	A3	UNUSED						ALL
	B1		W1060	053	22		33-22-41	ALL
	B2		W1060	052	22		33-22-41	ALL
	B3	UNUSED						ALL
	C1		W1060	540	22		52-51-11	ALL
	C2		W1060	541	20		52-51-11	ALL
	C3	UNUSED						ALL
	D1	UNUSED						ALL
	D2	UNUSED						ALL
	D3	UNUSED						ALL
	X1		W1060	051	22		33-22-41	050-099, 275-299
	X1		W1060	772	22		33-22-41	150-199
	X2		W1060	055	20		33-22-41	ALL
D03560		P019-00/ /		RELAY SOCKET-P19				050-099
D03560		P019-00/ /		RELAY SOCKET-				150-199, 275-299
	A1		W1060	507	22		23-31-11	050-099, 151, 275-299

HOOKUP LIST

D280T132

91-21-51

Section D03500

Page 9

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03560		P019-00/ /		RELAY SOCKET-P19 (continued)				050-099
D03560		P019-00/ /		RELAY SOCKET- (continued)				150-199, 275-299
	A1		W1060	904	18		23-31-11	150, 152-199
	A2		W1060	506	22		23-31-11	ALL
	A3	UNUSED						ALL
	B1		W1060	089	22		33-24-11	ALL
	B2		W1060	062	22		33-24-11	ALL
	B3	UNUSED						ALL
	C1		W1060	068	22		33-24-11	050-099, 150-199
	C1		W1060	600	20		33-24-11	275-299
	C2		W1060	081	22		33-24-11	050-099
	C2		W1060	081	20		33-24-11	150-199, 275-299
	C3	UNUSED						ALL
	D1		W1060	076	22		33-24-11	050-099
	D1		W1060	076	20		33-24-11	150-199, 275-299
	D2		W1060	056	22		33-24-11	050-099
	D2		W1060	056	20		33-24-11	150-199, 275-299
	D3	UNUSED						ALL
	X1		W1060	065	24		33-24-11	ALL
	X2		W1060	066	24		33-24-11	ALL
D03562		P036-00/ /		RELAY SOCKET-				ALL
	A1		W0184	143	20		28-21-13	ALL
	A2		W0184	155	20		28-21-13	ALL
	A3	UNUSED						ALL
	B1	UNUSED						ALL
	B2	UNUSED						ALL
	B3	UNUSED						ALL
	X1		W0184	534	22		28-21-11	ALL
	X2		W0184	129	22		28-21-11	ALL
D03566		P036-00/ /		RELAY SOCKET-				ALL
	A1	UNUSED						ALL
	A2	UNUSED						ALL
	A3	UNUSED						ALL
	B1		W0182	061	24		21-44-11	ALL
	B2		W0182	046	24		21-44-11	ALL
	B3		W0182	060	24		21-44-11	ALL
	X1		W0182	047	24		21-44-11	ALL
	X2		W0182	062	24		21-44-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D03500

Page 10

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03568		P036-00/ /		RELAY SOCKET-				ALL
	A1		W0182	058	24		21-43-11	ALL
	A2		W0182	043	24		21-43-11	ALL
	A3		W0182	057	24		21-43-11	ALL
	B1	UNUSED						ALL
	B2	UNUSED						ALL
	B3	UNUSED						ALL
	X1		W0182	510	24		21-43-11	ALL
	X2		W0182	059	24		21-43-11	ALL
D03572		P019-00/ /		RELAY SOCKET-P19				050-099
D03572		P019-00/ /		RELAY SOCKET-				150-199, 275-299
	A1	UNUSED						ALL
	A2		W1060	142	20		33-51-21	ALL
	A3		W1060	141	20		33-51-21	ALL
	B1	UNUSED						ALL
	B2	UNUSED						ALL
	B3	UNUSED						ALL
	X1		W1060	143	20		33-51-21	ALL
	X2		W1060	144	20		33-51-21	ALL
D03574		P019-00/ /		RELAY SOCKET-P19				050-099
D03574		P019-00/ /		RELAY SOCKET-				150-199, 275-299
	A1	UNUSED						ALL
	A2		W1060	147	20		33-51-21	ALL
	A3		W1060	148	20		33-51-21	ALL
	B1	UNUSED						ALL
	B2	UNUSED						ALL
	B3	UNUSED						ALL
	X1		W1060	146	20		33-51-21	ALL
	X2		W1060	145	20		33-51-21	ALL
D03578		P036-00/ /		RELAY SOCKET-				ALL
	A1		W0184	030	24		21-58-12	ALL
	A2		W0184	032	24		21-58-12	ALL
	A3	UNUSED						ALL
	B1		W0184	878	24		21-58-12	ALL
	B2		W0184	879	24		21-58-12	ALL
	B3		W0184	880	24		21-58-12	ALL
	X1		W0184	026	24		21-58-12	ALL

HOOKUP LIST
D280T132

91-21-51
Section D03500
Page 11
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03578		P036-00/ /		RELAY SOCKET- (continued)				ALL
	X2		W0184	029	24		21-58-12	ALL
D03586		P036-00/ /		RELAY SOCKET-				ALL
	A1		W0176	176	24		21-58-13	ALL
	A2		W0176	169	24		21-58-13	ALL
	A3		W0176	187	24		21-58-13	ALL
	B1	UNUSED						ALL
	B2	UNUSED						ALL
	B3	UNUSED						ALL
	C1		W0176	51L	24		21-58-12	ALL
	C2		W0176	51K	24		21-58-12	ALL
	C3		W0176	51M	24		21-58-12	ALL
	D1	UNUSED						ALL
	D2	UNUSED						ALL
	D3	UNUSED						ALL
	X1		W0176	170	24		21-58-12	ALL
	X2		W0176	175	24		21-58-12	ALL
D03594		P036-00/ /		RELAY SOCKET-				ALL
	A1		W0184	600	18		28-41-12	ALL
	A2		W0184	598	18		28-41-12	ALL
	A3		W0184	604	22		28-41-12	ALL
	B1		W0184	505	18		28-26-11	ALL
	B2		W0184	537	18		28-26-11	ALL
	B3		W0184	504	20		28-26-11	ALL
	C1		W0184	100	18		28-21-11	ALL
	C2		W0184	105	18		28-21-11	ALL
	C3		W0184	097	22		28-21-11	ALL
	D1		W0184	157	20		28-21-13	ALL
	D2		W0184	156	20		28-21-13	ALL
	D3		W0184	153	22		28-21-13	ALL
	X1		W0184	101	22		28-21-11	ALL
	X2		W0184	102	22		28-21-11	ALL
D03596		P036-00/ /		RELAY SOCKET-				ALL
	A1		W0184	581	24		21-58-16	ALL
	A2		W0184	587	24		21-58-16	ALL
	A3		W0184	582	24		21-58-16	ALL
	B1		W0184	584	24		21-58-16	ALL
	B2		W0184	588	24		21-58-12	ALL

HOOKUP LIST

D280T132

91-21-51

Section D03500

Page 12

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03596		P036-00/ /		RELAY SOCKET- (continued)				ALL
	B3		W0184	583	24		21-58-16	ALL
	C1		W0184	11G	24		21-58-12	ALL
	C2		W0184	774	24		21-58-12	ALL
	C3		W0184	75P	24		21-58-12	ALL
	D1	UNUSED						ALL
	D2		W0184	75D	24		21-58-12	ALL
	D3		W0184	11H	20		21-58-12	ALL
	X1		W0184	586	24		21-58-12	ALL
	X2		W0184	585	24		21-58-12	ALL
D03598		1629/171/R047		PLUG-ALT PRESS. SW				ALL
	1	UNUSED						ALL
	2		W1296	020	20		38-32-11	ALL
	3		W1296	019	20		38-32-11	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D03500
Page 13 End
Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03602		P019-00/ /		RELAY SOCKET-P19				050-099
D03602		P019-00/ /		RELAY SOCKET-				150-199, 275-299
	A1		W1060	182	22		52-11-12	ALL
	A2		W1060	193	22		52-11-12	ALL
	A3		W1060	183	22		52-11-12	ALL
	B1		W1060	185	22		52-11-12	ALL
	B2		W1060	194	22		52-11-12	ALL
	B3		W1060	177	22		52-11-12	ALL
	C1	UNUSED						ALL
	C2	UNUSED						ALL
	C3	UNUSED						ALL
	D1	UNUSED						ALL
	D2	UNUSED						ALL
	D3	UNUSED						ALL
	G1	UNUSED						ALL
	G2		W1060	PA1			99-99-99	ALL
	G3		W1060	PA1			99-99-99	ALL
	X1		W1060	179	22		52-11-12	ALL
	X2		W1060	181	22		52-11-12	ALL
D03604		P019-00/ /		RELAY SOCKET-P19				050-099
D03604		P019-00/ /		RELAY SOCKET-				150-199, 275-299
	A1		W1060	163	22		52-11-11	ALL
	A2		W1060	169	22		52-11-11	ALL
	A3		W1060	166	22		52-11-11	ALL
	B1		W1060	165	22		52-11-11	ALL
	B2		W1060	170	22		52-11-11	ALL
	B3		W1060	164	22		52-11-11	ALL
	C1		W1060	167	22		52-11-11	ALL
	C2		W1060	171	22		52-11-11	ALL
	C3		W1060	168	22		52-11-11	ALL
	D1	UNUSED						ALL
	D2	UNUSED						ALL
	D3	UNUSED						ALL
	X1		W1060	194	22		52-11-12	ALL
	X2		W1060	193	22		52-11-12	ALL
D03606		P019-00/ /		RELAY SOCKET-P19				050-099
D03606		P019-00/ /		RELAY SOCKET-				150-199, 275-299
	A1		W1060	164	22		52-11-11	ALL
	A2		W1060	160	22		52-11-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D03600

Page 1

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03606		P019-00/ /		RELAY SOCKET-P19 (continued)				050-099
D03606		P019-00/ /		RELAY SOCKET- (continued)				150-199, 275-299
	A3		W1060	163	22		52-11-11	ALL
	B1		W1060	166	22		52-11-11	ALL
	B2		W1060	161	22		52-11-11	ALL
	B3		W1060	165	22		52-11-11	ALL
	C1		W1060	168	22		52-11-11	ALL
	C2		W1060	162	22		52-11-11	ALL
	C3		W1060	167	22		52-11-11	ALL
	D1	UNUSED						ALL
	D2	UNUSED						ALL
	D3	UNUSED						ALL
	X1		W1060	191	22		52-11-12	ALL
	X2		W1060	192	22		52-11-12	ALL
D03608		P025-00/ /		RELAY SOCKET-				ALL
	A1	UNUSED						ALL
	A2	UNUSED						ALL
	A3	UNUSED						ALL
	B1		W1064	009	22		33-21-21	ALL
	B2		W1064	004	22		33-21-21	ALL
	B3	UNUSED						ALL
	X1		W1064	005	24		33-21-21	ALL
	X2		W1064	609	24		33-21-21	050-099, 150-199
	X2		W1064	006	24		33-21-21	275-299
D03610		P036-00/ /		RELAY SOCKET-				ALL
	1		W0176	199A	20		34-22-36	ALL
	2		W0176	199B	20		34-22-36	ALL
	3		W0176	203R	24		21-51-12	ALL
	4	UNUSED						ALL
	5		W0176	203B	24		21-51-12	ALL
	6		W0176	117	24		32-09-11	ALL
	7		W0176	787	24		34-61-14	ALL
	8		W0176	788	20		34-61-14	ALL
	9	UNUSED						ALL
	10		W0176	509	24		22-32-15	ALL
	11		W0176	510	24		22-32-15	ALL
	12		W0176	118	24		32-09-11	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D03600
Page 2
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03612		P036-00/ /		RELAY SOCKET				ALL
	1		W0176	851	24		21-53-12	ALL
	2		W0176	852	20		21-53-12	ALL
	3		W0176	08E	22		73-21-19	ALL
	4		W0176	865	20		73-21-19	ALL
	5		W0176	08F	22		73-21-19	ALL
	6		W0176	039	24		32-09-11	ALL
	7		W0176	217B	24		21-61-51	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12		W0176	045	24		32-09-11	ALL
	13	UNUSED						ALL
	14		W0176	217R	24		21-61-51	ALL
D03614		P036-00/ /		RELAY SOCKET-				ALL
	1		W0176	511	22		22-14-31	ALL
	2		W0176	515	20		22-14-31	ALL
	3	UNUSED						ALL
	4		W0176	516	20		22-14-31	ALL
	5		W0176	512	22		22-14-31	ALL
	6		W0176	103	24		32-09-11	ALL
	7		W0176	513	22		22-14-31	ALL
	8		W0176	517	20		22-14-31	ALL
	9	UNUSED						ALL
	10		W0176	518	20		22-14-31	ALL
	11		W0176	514	22		22-14-31	ALL
	12		W0176	104	24		32-09-11	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
D03620		P036-00/ /		RELAY SOCKET-				ALL
	1		W0184	082	22		32-44-11	ALL
	2		W0184	075	20		32-44-11	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W0184	079	24		32-44-11	ALL
	7		W0184	728	22		23-71-11	ALL
	8		W0184	607	22		23-71-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D03600

Page 3

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03620		P036-00/ /		RELAY SOCKET- (continued)				ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12		W0184	076	20		32-44-11	ALL
	13		W0184	073	24		32-44-11	ALL
	14	UNUSED						ALL
D03622		P036-00/ /		RELAY SOCKET-				ALL
	A1		W0176	685	22		73-21-19	ALL
	A2		W0176	682	22		73-21-19	ALL
	A3	UNUSED						ALL
	B1	UNUSED						ALL
	B2	UNUSED						ALL
	B3	UNUSED						ALL
	X1		W0176	681	22		73-21-19	ALL
	X2		W0176	08F	22		73-21-19	ALL
	DED		W0176	682Z			73-21-19	150-199
	DED		W0176	685Z			73-21-19	150-199
			W0176	682Z			73-21-19	050-099, 275-299
			W0176	685Z			73-21-19	050-099, 275-299
D03626		P036-00/ /		RELAY SOCKET-				ALL
	A1		W0184	012	20		36-23-21	ALL
	A2		W0184	011	24		36-23-21	ALL
	A3	UNUSED						ALL
	B1		W0184	650	22		29-11-32	ALL
	B2		W0184	656	22		29-11-32	ALL
	B3		W0184	649	22		29-11-32	ALL
	X1		W0184	652	24		29-11-32	ALL
	X2		W0184	651	20		29-11-32	ALL
D03640		P025-00/ /		PLUG-				ALL
	1		W1064	010	20		33-21-21	ALL
	2	UNUSED						ALL
	3		W1064	512	22		33-21-21	ALL
	4	UNUSED						ALL
	5		W1064	008	22		33-21-21	ALL
	6		W1064	011	20		33-21-21	ALL
	7	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D03600
Page 4
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03642		P025-00/ /		PLUG-				ALL
	1		W1064	018	18		33-22-11	ALL
	2	UNUSED						ALL
	3		W1064	015	20		33-22-11	ALL
	4	UNUSED						ALL
	5		W1064	016	18		33-22-11	ALL
	6		W1064	019	20		33-22-11	ALL
	7	UNUSED						ALL
D03648		P049-00/ /		RELAY SOCKET-P49				ALL
	A1		W0030	045	20		36-11-41	ALL
	A2		W0030	001	20		36-11-41	ALL
	A3		W0030	046	20		36-11-41	ALL
	B1		W0030	047	22		36-11-41	ALL
	B2		W0030	039	22		36-11-41	ALL
	B3		W0030	048	22		36-11-41	ALL
	C1		W0030	084	24		24-51-71	ALL
	C2		W0030	083	24		24-51-71	ALL
	C3	UNUSED						ALL
	D1	UNUSED						ALL
	D2	UNUSED						ALL
	D3	UNUSED						ALL
	X1		W0030	037	24		36-11-41	ALL
	X2		W0030	036	24		36-11-41	ALL
D03650		P049-00/ /		RELAY SOCKET-P49				ALL
	A1	UNUSED						ALL
	A2		W0030	131	24		36-11-41	ALL
	A3		W0030	129	24		31-31-22	ALL
	B1	UNUSED						ALL
	B2	UNUSED						ALL
	B3	UNUSED						ALL
	C1	UNUSED						ALL
	C2	UNUSED						ALL
	C3	UNUSED						ALL
	D1	UNUSED						ALL
	D2		W0030	048	22		36-11-41	ALL
	D3		W0030	053	20		36-11-41	ALL
	X1		W0030	042	24		36-11-41	ALL
	X2		W0030	052	24		36-11-41	ALL

HOOKUP LIST

D280T132

91-21-51

Section D03600

Page 5

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03652		P049-00/ /		RELAY SOCKET-P49				ALL
	1		W0030	047	22		36-11-41	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W0030	041	24		36-11-41	ALL
	7		W0030	201B	24		21-51-12	ALL
	8		W0030	201R	24		21-51-12	ALL
	9		W0030	130	24		31-31-22	ALL
	10		W0030	050	24		36-11-41	ALL
	11		W0030	040	24		36-11-41	ALL
	12		W0030	051	24		36-11-41	ALL
	13		W0030	049	20		36-11-41	ALL
	14	UNUSED						ALL
D03654		P033-00/ /		RELAY SOCKET-P33				ALL
	A1		W0144	05Q	24		21-53-22	ALL
	A2		W0144	05R	24		21-53-22	ALL
	A3	UNUSED						ALL
	B1	UNUSED						ALL
	B2	UNUSED						ALL
	B3	UNUSED						ALL
	X1		W0144	05P	24		21-53-22	ALL
	X2		W0144	05N	24		21-53-22	ALL
D03656		P033-00/ /		RELAY SOCKET-P33				ALL
	A1		W0144	05T	24		21-53-22	ALL
	A2		W0144	05S	24		21-53-22	ALL
	A3	UNUSED						ALL
	B1	UNUSED						ALL
	B2	UNUSED						ALL
	B3	UNUSED						ALL
	X1		W0144	05V	24		21-53-22	ALL
	X2		W0144	05U	24		21-53-22	ALL
D03658		P033-00/ /		REALY SOCKET-P33				ALL
	A1		W0144	06D	24		21-53-22	ALL
	A2		W0144	06C	24		21-53-22	ALL
	A3	UNUSED						ALL
	B1	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D03600
Page 6
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03658		P033-00/ /		REALY SOCKET-P33 (continued)				ALL
	B2	UNUSED						ALL
	B3	UNUSED						ALL
	X1		W0144	06A	24		21-53-22	ALL
	X2		W0144	06B	24		21-53-22	ALL
D03660		P033-00/ /		RELAY SOCKET-P33				ALL
	A1		W0144	06I	24		21-53-22	ALL
	A2		W0144	06F	24		21-53-22	ALL
	A3	UNUSED						ALL
	B1	UNUSED						ALL
	B2	UNUSED						ALL
	B3	UNUSED						ALL
	X1		W0144	06G	24		21-53-22	ALL
	X2		W0144	06H	24		21-53-22	ALL
D03662		P033-00/ /		RELAY SOCKET-P33				ALL
	A1		W0144	05X	24		21-53-22	ALL
	A2		W0144	05Y	24		21-53-22	ALL
	A3	UNUSED						ALL
	B1	UNUSED						ALL
	B2	UNUSED						ALL
	B3	UNUSED						ALL
	X1		W0144	05W	24		21-53-22	ALL
	X2		W0144	05M	24		21-53-22	ALL
D03664		P033-00/ /		RELAY SOCKET-P33				ALL
	A1		W0144	06L	24		21-53-22	ALL
	A2		W0144	06E	24		21-53-22	ALL
	A3	UNUSED						ALL
	B1	UNUSED						ALL
	B2	UNUSED						ALL
	B3	UNUSED						ALL
	X1		W0144	06K	24		21-53-22	ALL
	X2		W0144	06J	24		21-53-22	ALL
D03666		P037-00/ /		RELAY SOCKET-				ALL
	A1	UNUSED						ALL
	A2		W0192	134	22		36-11-21	ALL
	A3		W0192	018	20		36-11-21	ALL
	B1	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D03600

Page 7

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03666		P037-00/ /		RELAY SOCKET- (continued)				ALL
	B2	UNUSED						ALL
	B3	UNUSED						ALL
	X1		W0192	019	24		36-11-21	ALL
	X2		W0192	111	24		36-11-21	ALL
D03668		P037-00/ /		RELAY SOCKET-				ALL
	A1	UNUSED						ALL
	A2		W0192	135	22		36-11-21	ALL
	A3		W0192	016	20		36-11-21	ALL
	B1	UNUSED						ALL
	B2		W0192	603	24		73-21-17	ALL
	B3		W0192	605	20		73-21-17	ALL
	X1		W0192	017	24		36-11-21	ALL
	X2		W0192	112	24		36-11-21	ALL
D03670		P037-00/ /		RELAY SOCKET-				ALL
	A1		W0192	83N	24		78-36-21	ALL
	A2		W0192	69H	24		78-36-21	ALL
	A3		W0192	83P	24		78-36-21	ALL
	B1		W0192	547	22		78-34-21	ALL
	B2		W0192	549	24		78-34-21	ALL
	B3	UNUSED						ALL
	C1		W0192	87G	20		78-36-21	ALL
	C2		W0192	87H	22		78-36-21	ALL
	C3	UNUSED						ALL
	D1	UNUSED						ALL
	D2	UNUSED						ALL
	D3	UNUSED						ALL
	X1		W0192	548	24		78-34-21	ALL
	X2		W0192	156	24		78-34-21	ALL
D03674		P033-00/ /		RELAY SOCKET-P33				ALL
	A1		W0142	06I	24		21-53-21	ALL
	A2		W0142	06C	24		21-53-21	ALL
	A3		W0142	05E	24		21-53-22	ALL
	B1		W0142	06J	24		21-53-21	ALL
	B2		W0142	06D	24		21-53-21	ALL
	B3		W0142	05F	24		21-53-22	ALL
	C1		W0142	06K	24		21-53-21	ALL
	C2		W0142	06E	24		21-53-21	ALL

HOOKUP LIST
D280T132

91-21-51
Section D03600
Page 8
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03674		P033-00/ /		RELAY SOCKET-P33 (continued)				ALL
	C3		W0142	05G	24		21-53-22	ALL
	D1		W0142	06L	24		21-53-21	ALL
	D2		W0142	06F	24		21-53-21	ALL
	D3		W0142	05H	24		21-53-22	ALL
	X1		W0142	06H	24		21-53-21	ALL
	X2		W0142	06G	24		21-53-21	ALL
D03676		P033-00/ /		RELAY SOCKET-P33				ALL
	A1		W0142	05U	24		21-53-21	ALL
	A2		W0142	06A	24		21-53-21	ALL
	A3		W0142	05I	24		21-53-22	ALL
	B1		W0142	05V	24		21-53-21	ALL
	B2		W0142	06B	24		21-53-21	ALL
	B3		W0142	05J	24		21-53-22	ALL
	C1	UNUSED						ALL
	C2	UNUSED						ALL
	C3	UNUSED						ALL
	D1		W0142	05K	22		21-51-21	ALL
	D2		W0142	05L	22		21-51-21	ALL
	D3	UNUSED						ALL
	X1		W0142	05W	24		21-53-21	ALL
	X2		W0142	05X	24		21-53-21	ALL
D03678		P037-00/ /		RELAY SOCKET-				ALL
	A1		W0192	732	22		21-61-11	ALL
	A2		W0192	733	20		21-61-11	ALL
	A3	UNUSED						ALL
	B1	UNUSED						ALL
	B2		W0192	652	24		21-61-11	ALL
	B3		W0192	535	24		21-61-11	ALL
	C1		W0192	653	24		21-61-11	ALL
	C2		W0192	528	24		21-61-11	ALL
	C3		W0192	536	24		21-61-11	ALL
	D1	UNUSED						ALL
	D2		W0192	566	24		21-61-11	ALL
	D3		W0192	537	24		21-61-11	ALL
	X1		W0192	512	24		21-61-11	ALL
	X2		W0192	538	24		21-61-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D03600

Page 9

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03680		P037-00/ /		RELAY SOCKET-				ALL
	A1		W1118	057	24		21-43-11	ALL
	A2		W1118	158	24		21-43-11	ALL
	A3		W1118	059	24		21-43-11	ALL
	B1	UNUSED						ALL
	B2	UNUSED						ALL
	B3	UNUSED						ALL
	X1		W1118	540	24		21-43-11	ALL
	X2		W1118	060	24		21-43-11	ALL
D03684		P037-00/ /		RELAY SOCKET-				ALL
	1		W0192	90A	20		34-22-26	ALL
	2		W0192	90B	22		34-22-26	ALL
	3		W0192	194	24		21-58-11	ALL
	4	UNUSED						ALL
	5		W0192	193	20		21-58-11	ALL
	6		W0192	195	24		32-09-12	ALL
	7		W0192	636	24		34-53-21	ALL
	8		W0192	637	20		34-53-21	ALL
	9	UNUSED						ALL
	10		W0192	192	20		34-61-24	ALL
	11		W0192	01M	24		34-61-24	ALL
	12		W0192	196	24		32-09-12	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
D03686		P037-00/ /		RELAY SOCKET-				ALL
	1		W0192	025	22		22-14-31	ALL
	2		W0192	024	20		22-14-31	ALL
	3	UNUSED						ALL
	4		W0192	026	20		22-14-31	ALL
	5		W0192	027	22		22-14-31	ALL
	6		W0192	033	24		32-09-12	ALL
	7		W0192	029	22		22-14-31	ALL
	8		W0192	028	20		22-14-31	ALL
	9	UNUSED						ALL
	10		W0192	030	20		22-14-31	ALL
	11		W0192	031	22		22-14-31	ALL
	12		W0192	032	24		32-09-12	ALL
	13	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D03600
Page 10
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03686		P037-00/ /		RELAY SOCKET- (continued)				ALL
	14	UNUSED						ALL
D03688		P037-00/ /		RELAY SOCKET-				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W0192	82K	20		30-81-11	050-099, 150-199
	4	UNUSED						275-299
	5		W0192	82M	20		30-81-11	050-099, 150-199
	5	UNUSED						275-299
	6		W0192	023	24		32-09-12	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10		W0192	01J	24		31-41-13	ALL
	11		W0192	01L	20		31-41-13	ALL
	12		W0192	022	24		32-09-12	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
D03690		P037-00/ /		RELAY SOCKET-				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W0192	263R	24		28-41-11	ALL
	4	UNUSED						ALL
	5		W0192	263B	24		28-41-11	ALL
	6		W0192	09K	24		32-09-12	ALL
	7		W0192	02K	20		33-45-11	ALL
	8		W0192	02G	22		33-45-11	ALL
	9		W0192	69F	20		78-36-21	ALL
	10		W0192	69G	24		78-36-21	ALL
	11		W0192	69K	24		78-36-21	ALL
	12		W0192	09J	24		32-09-12	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	CAP	Y	W0192	06W	24		78-36-21	050-099, 150-156, 162-166, 275-276
	CAP	Y	W0192	06W	24		SPARE	157, 167-199, 277-299
D03691J		AE0319/ /		RCPT-E1-3				ALL
	1		W1603	060	22		34-12-61	ALL

HOOKUP LIST

D280T132

91-21-51

Section D03600

Page 11

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03691J		AE0319/ /		RCPT-E1-3 (continued)				ALL
	2		W1603	061	22		34-12-61	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W1603	062	22		34-12-61	ALL
	6		W1603	063	22		34-12-61	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10		W1603	067	24		34-12-61	ALL
	11		W1603	068	24		34-12-61	ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16		W1603	230B	24		34-12-61	ALL
	17		W1603	230R	24		34-12-61	ALL
	18		W1603	230Z			34-12-61	ALL
	19		W1603	231B	24		34-12-61	ALL
	20		W1603	231R	24		34-12-61	ALL
	21		W1603	231Z			34-12-61	ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D03691P		AE0319/ /		PLUG-E1-3				ALL
	1		W0105	126	22		34-12-61	ALL
	2		W0105	125	22		34-12-61	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W0105	147	22		34-12-61	ALL
	6		W0105	146	22		34-12-61	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10		W0105	150	24		34-12-61	ALL
	11		W0105	128	24		34-12-61	ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D03600
Page 12
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03691P		AE0319/ /		PLUG-E1-3 (continued)				ALL
	16		W0105	240B	24		34-12-61	ALL
	17		W0105	240R	24		34-12-61	ALL
	18		W0105	240Z			34-12-61	ALL
	19		W0105	273B	24		34-12-61	ALL
	20		W0105	273R	24		34-12-61	ALL
	21		W0105	273Z			34-12-61	ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D03692		P037-00/ /		RELAY SOCKET-				ALL
	1		W0192	01E	24		34-12-22	ALL
	2		W0192	119	24		34-12-22	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W0192	034	24		32-09-12	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9		W0192	06E	22		73-21-19	ALL
	10		W0192	005	20		73-21-19	ALL
	11		W0192	06D	22		73-21-19	ALL
	12		W0192	035	24		32-09-12	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
D03693J		AE0322/ /		RCPT-E2-3				ALL
	1		W1615	060	22		34-12-62	ALL
	2		W1615	061	22		34-12-62	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W1615	062	22		34-12-62	ALL
	6		W1615	063	22		34-12-62	ALL
	7		W1615	064	24		34-12-62	ALL
	8		W1615	065	24		34-12-62	ALL
	9		W1615	066	24		34-12-62	ALL
	10		W1615	067	24		34-12-62	ALL
	11		W1615	068	24		34-12-62	ALL
	12	UNUSED						ALL
	13	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D03600

Page 13

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03693J		AE0322/ /		RCPT-E2-3 (continued)				ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16		W1615	230B	24		34-12-62	ALL
	17		W1615	230R	24		34-12-62	ALL
	18		W1615	230Z			34-12-62	ALL
	19		W1615	231B	24		34-12-62	ALL
	20		W1615	231R	24		34-12-62	ALL
	21		W1615	231Z			34-12-62	ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D03693P		AE0322/ /		PLUG-E2-3				ALL
	1		W0145	896	22		34-12-62	ALL
	2		W0145	897	22		34-12-62	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W0145	01C	22		34-12-62	ALL
	6		W0145	885	22		34-12-62	ALL
	7		W0145	751	24		34-12-62	ALL
	8		W0145	749	24		34-12-62	ALL
	9		W0145	750	24		34-12-62	ALL
	10		W0145	882	24		34-12-62	ALL
	11		W0145	884	24		34-12-62	ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16		W0145	578B	24		34-12-62	ALL
	17		W0145	578R	24		34-12-62	ALL
	18		W0145	578Z			34-12-62	ALL
	19		W0145	01DB	24		34-12-62	ALL
	20		W0145	01DR	24		34-12-62	ALL
	21		W0145	01DZ			34-12-62	ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D03694		P037-00/ /		RELAY SOCKET-				ALL
	1		W0192	209R	24		21-51-22	ALL

HOOKUP LIST
D280T132

91-21-51
Section D03600
Page 14
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03694		P037-00/ /		RELAY SOCKET- (continued)				ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W0192	752	20		21-53-22	ALL
	5		W0192	751	24		21-53-22	ALL
	6		W0192	753	24		32-09-12	ALL
	7		W0192	785	20		21-51-21	ALL
	8		W0192	764	24		21-51-21	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12		W0192	755	24		32-09-12	ALL
	13		W0192	209B	24		21-51-22	ALL
	14	UNUSED						ALL
D03695		1080/OB/L		PLUG				050-099, 151
	1		W0401	001	20		27-89-11	050-099, 151
	2		W0401	002	20		27-89-11	050-099, 151
	3	UNUSED						050-099, 151
	4	UNUSED						050-099, 151
	5	UNUSED						050-099, 151
	DED		W0401	001Z			27-89-11	050-099, 151
	DED		W0401	002Z			27-89-11	050-099, 151
D03696		P037-00/ /		RELAY SOCKET-				ALL
	1		W0192	745	20		21-51-11	ALL
	2		W0192	746	24		21-51-11	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W0192	748	24		32-09-12	ALL
	7		W0192	201R	24		21-31-21	ALL
	8		W0192	201B	24		21-31-21	ALL
	9	UNUSED						ALL
	10		W0192	16E	24		32-09-12	ALL
	11		W0192	898	20		32-09-12	ALL
	12		W0192	747	24		32-09-12	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D03600

Page 15

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03697		1080/OB/R		PLUG				050-099, 151
	1		W0403	001	20		27-89-11	050-099, 151
	2		W0403	002	20		27-89-11	050-099, 151
	3	UNUSED						050-099, 151
	4	UNUSED						050-099, 151
	5	UNUSED						050-099, 151
	DED		W0403	001Z			27-89-11	050-099, 151
	DED		W0403	002Z			27-89-11	050-099, 151
D03698		P037-00/ /		RELAY SOCKET-				ALL
	1		W0192	142	24		32-42-12	ALL
	2	UNUSED						ALL
	3		W0192	638	22		27-09-12	ALL
	4	UNUSED						ALL
	5		W0192	598	22		27-09-12	ALL
	6		W0192	711	24		32-09-12	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10		W0192	525	24		34-31-31	ALL
	11		W0192	778	20		34-31-31	ALL
	12		W0192	712	24		32-09-12	ALL
	13		W0192	141	24		32-42-12	ALL
	14	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D03600
Page 16 End
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03700		P037-00/ /		RELAY SOCKET-				ALL
	1		W0192	650	22		49-61-11	ALL
	2		W0192	649	20		49-61-11	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W0192	057	24		32-09-12	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9		W0192	583	24		34-55-21	ALL
	10	UNUSED						ALL
	11		W0192	584	20		34-55-21	ALL
	12		W0192	056	24		32-09-12	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
D03702		P037-00/ /		RELAY SOCKET-				ALL
	A1	UNUSED						ALL
	A2	UNUSED						ALL
	A3	UNUSED						ALL
	B1		W0198	133	22		31-31-11	ALL
	B2		W0198	132	22		31-31-11	ALL
	B3		W0198	199	22		31-31-11	ALL
	C1	UNUSED						ALL
	C2		W0198	147	24		23-31-13	ALL
	C3		W0198	146	20		23-31-13	ALL
	D1	UNUSED						ALL
	D2	UNUSED						ALL
	D3	UNUSED						ALL
	X1		W0198	122	24		80-11-21	ALL
	X2		W0198	123	20		80-11-21	ALL
D03704		P037-00/ /		RELAY SOCKET-				ALL
	A1		W0192	84S	20		78-34-21	ALL
	A2		W0192	84X	20		78-34-21	ALL
	A3		W0192	83S	20		78-34-21	ALL
	B1		W0192	83N	24		78-36-21	ALL
	B2		W0192	87F	24		78-36-21	ALL
	B3	UNUSED						ALL
	X1		W0192	87E	24		78-36-21	ALL
	X2		W0192	85S	24		78-36-21	ALL

HOOKUP LIST

D280T132

91-21-51

Section D03700

Page 1

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03708		P037-00/ /		RELAY SOCKET-				ALL
	A1		W0198	004	22		49-61-11	ALL
	A2		W0198	005	22		49-61-11	ALL
	A3		W0198	003	22		49-61-11	ALL
	B1		W0198	031	22		28-25-21	050-099
	B1		W0198	031	20		28-25-21	150-199, 275-299
	B2		W0198	001	22		28-25-21	050-099
	B2		W0198	001	20		28-25-21	150-199, 275-299
	B3		W0198	030	22		28-25-21	050-099
	B3		W0198	030	20		28-25-21	150-199, 275-299
	C1		W0198	092	24		28-25-11	ALL
	C2		W0198	113	22		28-25-11	050-099
	C2		W0198	113	20		28-25-11	150-199, 275-299
	C3	UNUSED						ALL
	D1	UNUSED						ALL
	D2	UNUSED						ALL
	D3	UNUSED						ALL
	X1		W0198	008	22		49-61-11	ALL
	X2		W0198	006	22		49-61-11	ALL
D03712		P037-00/ /		RELAY SOCKET-				ALL
	A1		W0192	140	24		32-31-11	ALL
	A2		W0192	708	20		32-31-11	ALL
	A3		W0192	16G	24		32-09-12	ALL
	B1	UNUSED						ALL
	B2		W0192	16B	18		33-31-41	ALL
	B3		W0192	16C	18		33-31-41	ALL
	C1		W0192	07R	24		24-51-52	ALL
	C2		W0192	07S	24		24-51-52	ALL
	C3	UNUSED						ALL
	D1	UNUSED						ALL
	D2	UNUSED						ALL
	D3	UNUSED						ALL
	X1		W0192	709	24		32-09-12	ALL
	X2		W0192	710	24		32-09-12	ALL
D03714		P037-00/ /		RELAY SOCKET-				ALL
	A1	UNUSED						ALL
	A2		W0192	102	24		31-31-11	ALL
	A3		W0192	103	24		31-31-11	ALL
	B1	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D03700
Page 2
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03714		P037-00/ /		RELAY SOCKET- (continued)				ALL
	B2	UNUSED						ALL
	B3	UNUSED						ALL
	C1		W0192	550	24		29-21-31	ALL
	C2		W0192	551	24		29-21-31	ALL
	C3		W0192	552	24		29-21-31	ALL
	D1		W0192	72G	20		31-31-11	ALL
	D2		W0192	530	24		31-31-11	ALL
	D3		W0192	529	24		31-31-11	ALL
	X1		W0192	050	24		32-09-12	ALL
	X2		W0192	051	24		32-09-12	ALL
	DED		W0192	550Z			29-21-31	ALL
	DED		W0192	551Z			29-21-31	ALL
	DED		W0192	552Z			29-21-31	ALL
D03716		P037-00/ /		RELAY SOCKET-				ALL
	A1	UNUSED						ALL
	A2	UNUSED						ALL
	A3	UNUSED						ALL
	B1	UNUSED						ALL
	B2		W0192	690	24		21-61-21	ALL
	B3		W0192	245B	24		21-61-21	ALL
	C1		W0192	699	24		21-61-21	ALL
	C2		W0192	629	24		21-61-21	ALL
	C3		W0192	245R	24		21-61-21	ALL
	D1	UNUSED						ALL
	D2		W0192	648	24		21-61-21	ALL
	D3		W0192	646	24		21-61-21	ALL
	X1		W0192	567	24		21-61-21	ALL
	X2		W0192	05B	24		21-61-21	ALL
D03722		0150/210/R032		PLUG-				ALL
	1		W0051	308Y	24		33-13-13	ALL
	2		W0051	079	20		33-13-13	050-099
	2	DK	W0051	079	18		33-13-13	150-199, 275-299
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W0051	308B	24		33-13-13	ALL
	6		W0051	308R	24		33-13-13	ALL
	7		W0051	074	20		33-13-13	ALL
	8		W0051	075	20		33-13-13	ALL

HOOKUP LIST

D280T132

91-21-51

Section D03700

Page 3

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03722		0150/210/R032		PLUG- (continued)				ALL
	9		W0051	078	20		33-13-13	ALL
	10	UNUSED						ALL
	11	FM	W0051	073	16		33-13-13	ALL
	12		W0051	072	22		33-13-13	ALL
	DED		W0051	072Z			33-13-13	ALL
	DED		W0051	074Z			33-13-13	ALL
	DED		W0051	075Z			33-13-13	ALL
	DED		W0051	078Z			33-13-13	ALL
	DED		W0051	079Z			33-13-13	ALL
	DED		W0051	308Z			33-13-13	ALL
D03726		P037-00/ /		RELAY SOCKET-				ALL
	A1		W0198	084	16		28-25-11	ALL
	A2		W0198	091	16		28-25-11	ALL
	A3	UNUSED						ALL
	B1	UNUSED						ALL
	B2	UNUSED						ALL
	B3	UNUSED						ALL
	C1	UNUSED						ALL
	C2	UNUSED						ALL
	C3	UNUSED						ALL
	D1	UNUSED						ALL
	D2	UNUSED						ALL
	D3	UNUSED						ALL
	G1	UNUSED						ALL
	G2		W0198	PA1			99-99-99	ALL
	G3		W0198	PA1			99-99-99	ALL
	X1		W0198	088	24		28-25-11	ALL
	X2		W0198	090	24		28-25-11	ALL
			W0198	084Z			28-25-11	ALL
			W0198	074	20		28-25-11	050-099, 155-199, 276-299
			W0198	074	16		28-25-11	150-154, 275
D03728		P037-00/ /		RELAY SOCKET-				ALL
	A1		W0192	176	20		32-09-12	ALL
	A2		W0192	505	24		32-09-12	ALL
	A3	UNUSED						ALL
	B1		W0192	08Z	24		24-51-71	ALL
	B2		W0192	08Y	24		24-51-71	ALL
	B3	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D03700
Page 4
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03728		P037-00/ /		RELAY SOCKET- (continued)				ALL
	C1		W0192	013	20		78-34-21	ALL
	C2		W0192	07A	20		78-34-21	ALL
	C3		W0192	78G	20		78-34-21	ALL
	D1		W0192	11K	24		29-11-12	ALL
	D2		W0192	12G	24		29-11-12	ALL
	D3		W0192	11H	24		29-11-12	ALL
	X1		W0192	014	24		32-09-12	ALL
	X2		W0192	015	24		32-09-12	ALL
	DED		W0192	013Z			78-34-21	ALL
	DED		W0192	07AZ			78-34-21	ALL
D03730		P037-00/ /		RELAY SOCKET-				ALL
	A1		W0192	06H	22		73-21-19	ALL
	A2		W0192	180	22		73-21-19	ALL
	A3		W0192	07B	20		73-21-19	ALL
	B1		W0192	138	20		21-45-11	ALL
	B2		W0192	130	20		21-45-11	ALL
	B3	UNUSED						ALL
	C1	UNUSED						ALL
	C2		W0192	741	20		26-15-12	ALL
	C3		W0192	742	22		26-15-12	ALL
	D1		W0192	821	18		30-71-11	ALL
	D2		W0192	822	18		30-71-11	ALL
	D3		W0192	820	20		30-71-11	ALL
	X1		W0192	743	24		32-09-12	ALL
	X2		W0192	744	24		32-09-12	ALL
D03732		P002-00/ /		PLUG-				ALL
	1		W0051	309Y	24		33-13-17	ALL
	2	DK	W0051	089	18		33-13-17	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W0051	309B	24		33-13-17	ALL
	6		W0051	309R	24		33-13-17	ALL
	7		W0051	081	20		33-13-17	ALL
	8	DK	W0051	086	18		33-13-17	ALL
	9	DK	W0051	083	18		33-13-17	ALL
	10	UNUSED						ALL
	11	DK	W0051	080	18		33-13-17	ALL
	12		W0051	082	24		33-13-17	ALL

HOOKUP LIST

D280T132

91-21-51

Section D03700

Page 5

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03734		0189/199/L050		PLUG-				ALL
	1		W0632	304Y	24		33-13-18	ALL
	2	DK	W0632	009	18		33-13-18	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W0632	304B	24		33-13-18	ALL
	6		W0632	304R	24		33-13-18	ALL
	7		W0632	008	20		33-13-18	ALL
	8	DK	W0632	091	18		33-13-18	ALL
	9	DK	W0632	110	18		33-13-18	ALL
	10	UNUSED						ALL
	11	FM	W0632	007	16		33-13-18	ALL
	12		W0632	006	22		33-13-18	ALL
D03736		P008-00/ /		PLUG-				ALL
	1		W0632	305Y	24		33-13-18	ALL
	2	DK	W0632	013	18		33-13-18	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W0632	305B	24		33-13-18	ALL
	6		W0632	305R	24		33-13-18	ALL
	7		W0632	012	20		33-13-18	ALL
	8	DK	W0632	046	18		33-13-18	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	FM	W0632	011	16		33-13-18	ALL
	12		W0632	010	22		33-13-18	ALL
D03738		P050-00/ /		RCPT-				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W1078	067	24		21-53-22	ALL
	4		W1078	072	24		21-53-22	ALL
	5		W1078	084	24		21-53-22	ALL
	6		W1078	066	24		21-53-22	ALL
	7		W1078	074	24		21-53-22	ALL
	8		W1078	071	24		21-53-22	ALL
	9		W1078	077	24		21-53-22	ALL
	10		W1078	073	24		21-53-22	ALL
	11		W1078	075	24		21-53-22	ALL
	12		W1078	076	24		21-53-22	ALL

HOOKUP LIST
D280T132

91-21-51
Section D03700
Page 6
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03738		P050-00/ /		RCPT- (continued)				ALL
	13		W1078	081	24		21-53-22	ALL
	14		W1078	079	24		21-53-22	ALL
	15		W1078	080	24		21-53-22	ALL
	16		W1078	078	24		21-53-22	ALL
	17		W1078	083	24		21-53-22	ALL
	18		W1078	082	24		21-53-22	ALL
	19		W1078	064	24		21-53-22	ALL
	20	UNUSED						ALL
	21		W1078	065	22		21-53-22	ALL
	22		W1078	PC1			99-99-99	ALL
	23	UNUSED						ALL
	24		W1078	038	24		21-51-23	ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35		W1078	070	24		21-53-22	ALL
	36		W1078	069	24		21-53-22	ALL
	37		W1078	068	24		21-53-22	ALL
	38		W1078	PC1			99-99-99	ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
D03742		P050-00/ /		RCPT-				ALL
	1		W1078	040	24		21-25-11	ALL
	2		W1078	725	24		21-25-11	ALL
	3		W1078	041	22		21-25-11	ALL
	4		W1078	043	22		21-25-11	ALL
	5	UNUSED						ALL
	6		W1078	050	24		21-26-11	ALL
	7		W1078	046	24		21-26-11	ALL
	8		W1078	049	24		21-26-11	ALL
	9		W1078	047	22		21-26-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D03700

Page 7

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03742		P050-00/ /		RCPT- (continued)				ALL
	10	UNUSED						ALL
	11		W1078	057	24		21-58-14	ALL
	12		W1078	527	24		21-58-14	ALL
	13		W1078	053	24		21-58-14	ALL
	14		W1078	059	24		21-58-14	ALL
	15		W1078	054	22		21-58-14	ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22		W1078	044	24		21-25-11	ALL
	23		W1078	045	24		21-25-11	ALL
	24		W1078	042	24		21-25-11	ALL
	25		W1078	718	24		21-25-11	ALL
	26		W1078	PA1			99-99-99	ALL
	27		W1078	051	24		21-26-11	ALL
	28		W1078	048	24		21-26-11	ALL
	29		W1078	116	24		21-26-11	ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32		W1078	058	24		21-58-14	ALL
	33		W1078	056	24		21-58-14	ALL
	34		W1078	PA1			99-99-99	ALL
	35		W1078	062	24		21-26-11	ALL
	36		W1078	052	24		21-26-11	ALL
	37		W1078	722	24		21-58-14	ALL
	38		W1078	063	24		21-58-14	ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
D03744		P037-00/ /		RELAY SOCKET-				ALL
	1		W0198	011	20		49-61-11	ALL
	2		W0198	007	22		49-61-11	ALL
	3		W0198	013	22		49-61-11	ALL
	4		W0198	008	22		49-61-11	ALL
	5	UNUSED						ALL
	6		W0198	012	22		49-61-11	ALL

HOOKUP LIST
D280T132

91-21-51
Section D03700
Page 8
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03744		P037-00/ /		RELAY SOCKET- (continued)				ALL
	7		W0198	014	22		49-61-11	ALL
	8		W0198	003	22		49-61-11	ALL
D03748		P037-00/ /		RELAY SOCKET				050-099, 150-199
	A1		W0192	83B	20		30-71-24	050-099
	A1		W0192	687	20		30-71-24	150-199
	A2		W0192	895	20		30-71-24	050-099, 150-199
	A3	UNUSED						050-099, 150-199
	B1		W0192	01Y	20		30-71-24	050-099, 150-199
	B2		W0192	01V	20		30-71-24	050-099, 150-199
	B3	UNUSED						050-099, 150-199
	X1		W0192	82Y	20		30-71-24	050-099
	X1		W0192	909	20		30-71-24	150-199
	X2		W0192	83A	20		30-71-24	050-099
	X2		W0192	910	20		30-71-24	150-199
D03750		P037-00/ /		RELAY SOCKET-				ALL
	A1		W0198	157R	20		26-22-21	ALL
	A2		W0198	158R	20		26-22-21	ALL
	A3	UNUSED						ALL
	B1		W0198	015	22		49-61-11	ALL
	B2		W0198	016	22		49-61-11	ALL
	B3	UNUSED						ALL
	C1		W0198	063	20		49-61-11	ALL
	C2		W0198	064	22		26-15-12	ALL
	C3		W0198	055R	22		26-15-12	ALL
	D1	UNUSED						ALL
	D2	UNUSED						ALL
	D3	UNUSED						ALL
	X1		W0198	159R	20		49-61-11	ALL
	X2		W0198	017	20		49-61-11	ALL
D03752		P037-00/ /		RELAY SOCKET-				ALL
	A1		W0192	124	20		73-21-19	ALL
	A2		W0192	185	20		73-21-19	ALL
	A3	UNUSED						ALL
	B1	UNUSED						ALL
	B2	UNUSED						ALL
	B3	UNUSED						ALL
	X1		W0192	184	22		73-21-19	ALL

HOOKUP LIST

D280T132

91-21-51

Section D03700

Page 9

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03752		P037-00/ /		RELAY SOCKET- (continued)				ALL
	X2		W0192	06D	22		73-21-19	ALL
			W0192	124Z			73-21-19	ALL
			W0192	185Z			73-21-19	ALL
D03754		P037-00/ /		RELAY SOCKET-				ALL
	A1	UNUSED						ALL
	A2	UNUSED						ALL
	A3	UNUSED						ALL
	B1	UNUSED						ALL
	B2		W0192	700	24		21-61-31	ALL
	B3		W0192	246B	24		21-61-31	ALL
	C1		W0192	878	24		21-61-31	ALL
	C2		W0192	701	24		21-61-31	ALL
	C3		W0192	246R	24		21-61-31	ALL
	D1	UNUSED						ALL
	D2		W0192	883	24		21-61-31	ALL
	D3		W0192	881	24		21-61-31	ALL
	X1		W0192	183	24		21-61-31	ALL
	X2		W0192	05P	24		21-61-31	ALL
D03756		0189/205/L045		PLUG-				ALL
	1		W0632	306Y	24		33-13-18	ALL
	2	DK	W0632	019	18		33-13-18	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W0632	306B	24		33-13-18	ALL
	6		W0632	306R	24		33-13-18	ALL
	7		W0632	018	20		33-13-18	ALL
	8	DK	W0632	092	18		33-13-18	050-099, 150-155, 162-165, 275-276
	8	DK	W0632	136R	18		33-13-18	156-157, 166-199, 277-299
	9	DK	W0632	109	18		33-13-18	050-099, 150-155, 162-165, 275-276
	9	DK	W0632	138R	18		33-13-18	156-157, 166-199, 277-299
	10	UNUSED						ALL
	11	FM	W0632	017	16		33-13-18	ALL
	12		W0632	016	22		33-13-18	ALL
D03762		0162/230/R048		PLUG-				ALL
	1		W0586	025	20		33-13-13	ALL
	2		W0586	026	20		33-13-13	ALL
	3		W0586	024	20		21-45-11	ALL

HOOKUP LIST
D280T132

91-21-51
Section D03700
Page 10
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03762		0162/230/R048		PLUG- (continued)				ALL
	4		W0586	010	20		21-45-11	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W0586	008	20		21-45-11	ALL
	8		W0586	007	20		21-45-11	ALL
	9	UNUSED						ALL
	10		W0586	013	20		21-45-11	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D03768		0155/222/R008		PLUG-				ALL
	1		W0051	304Y	24		33-11-13	ALL
	2		W0051	026	20		33-11-13	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W0051	304B	24		33-11-13	ALL
	6		W0051	304R	24		33-11-13	ALL
	7		W0051	029	20		33-11-13	ALL
	8		W0051	027	20		33-11-13	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11		W0051	030	20		33-11-13	ALL
	12		W0051	028	24		33-11-13	ALL
D03772		P037-00/ /		RELAY SOCKET-				ALL
	1	UNUSED						ALL
	2		W0198	024	20		28-25-21	ALL
	3		W0198	023	20		28-25-21	ALL
	4		W0198	106	22		28-25-21	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W0198	025	22		28-25-21	ALL
	8	UNUSED						ALL
D03780		0162/230/L032		PLUG-				ALL
	1		W0584	017	20		33-13-11	ALL
	2		W0584	018	20		33-13-11	ALL
	3		W0584	016	20		21-45-11	ALL
	4		W0584	010	20		21-45-11	ALL
	5	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D03700

Page 11

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03780		0162/230/L032		PLUG- (continued)				ALL
	6	UNUSED						ALL
	7		W0584	008	20		21-45-11	ALL
	8		W0584	029	20		21-45-11	ALL
	9	UNUSED						ALL
	10		W0584	013	20		21-45-11	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D03788		P037-00/ /		RELAY SOCKET-				ALL
	A1		W0192	757	24		21-26-11	ALL
	A2		W0192	758	24		21-26-11	ALL
	A3		W0192	146	24		21-26-11	ALL
	B1	UNUSED						050-099, 150-155, 162-165, 275-276
	B1		W0192	25A	20		21-26-11	156-157, 166-199, 277-299
	B2	UNUSED						050-099, 150-155, 162-165, 275-276
	B2		W0192	28A	24		21-26-11	156-157, 166-199, 277-299
	B3	UNUSED						050-099, 150-155, 162-165, 275-276
	B3		W0192	29A	24		21-26-11	156-157, 166-199, 277-299
	X1		W0192	759	24		21-26-11	ALL
	X2		W0192	760	20		21-26-11	ALL
D03792		0280/175/R028		RELAY SOCKET-				ALL
	A		W0606	107R	22		26-15-12	ALL
	B		W0606	003R	22		26-15-12	ALL
	C		W0606	105R	22		26-15-12	ALL
	D	UNUSED						ALL
	E	UNUSED						ALL
	F		W0606	106R	22		26-15-12	ALL

HOOKUP LIST
D280T132

91-21-51
Section D03700
Page 12 End
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03812		1473/285/R050		RCPT-				150-199, 275-299
	1		W0728	047	20		35-21-13	150-199, 275-299
	2		W0728	048	20		35-21-13	150-199, 275-299
D03814		1510/280/R030		RCPT-				ALL
	1		W0728	050	20		35-21-13	ALL
	2		W0728	051	20		35-21-13	ALL
D03818		1551/181/L035		PLUG-				ALL
	1	UNUSED						ALL
	2		W1358	120	12		38-32-11	ALL
	3		W1358	122	12		38-32-11	ALL
	4		W1358	124	12		38-32-11	ALL
	5		W1358	13E	18		38-32-11	ALL
	6		W1358	13F	18		38-32-11	ALL
	7		W1358	13G	12		38-32-11	ALL
	8	UNUSED						ALL
D03824		0661/302/L012		PLUG-				050-099
D03824		0654+007/302/L012		PLUG-				150-199
D03824		0654+008/300/L013		PLUG-				275-278
D03824		0654+007/302/L014		PLUG-				280-299
	1		W1234	800	22		21-61-21	ALL
	2		W1234	022	20		21-61-21	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
D03826		0770/305/L017		PLUG-				ALL
	1		W1236	031	22		21-61-31	ALL
	2		W1236	032	20		21-61-31	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
D03828		0261/185/L070		PLUG-				ALL
	1		W0632	202B	24		21-61-11	ALL
	2		W0632	202R	24		21-61-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D03800

Page 1

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03830		0190/268/L019		PLUG-				ALL
	1		W0632	201B	24		21-61-11	ALL
	2		W0632	201R	24		21-61-11	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
D03832		1489/280/L005		RCPT-				050-099
D03832		1465/280/L005		RCPT-				275-299
	1		W1174	121	20		35-21-14	050-099, 276-299
	1		W1174	004	20		35-21-14	275
	2		W1174	122	20		35-21-14	050-099, 276-299
	2		W1174	005	20		35-21-14	275
D03834		1473/285/L050		RCPT-				050-099
D03834		1473/280/L050		RCPT-				150-199, 275-299
	1		W0724	047	20		35-21-12	ALL
	2		W0724	048	20		35-21-12	ALL
D03838		0259/185/L070		PLUG-				ALL
	1		W0638	002	24		21-61-11	ALL
	2		W0638	003	20		21-61-11	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
D03842		P005-00/ /		PLUG-P5				ALL
	1		W0066	01A	20		33-13-16	ALL
	2		W0066	01B	20		33-13-16	ALL
	3		W0066	01C	22		33-16-17	ALL
	4		W0066	01D	22		33-16-17	ALL
	5		W0066	01N	24		21-43-11	ALL
	6		W0066	01F	22		21-44-11	ALL
	7		W0066	01G	22		21-44-21	ALL
	8		W0066	01H	20		21-43-11	050-099, 150-199, 280-299
	8		W0066	01H	24		21-43-11	275-278
	9	UNUSED						ALL
	10		W0066	01K	24		21-43-11	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D03800

Page 2

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03842		P005-00/ /		PLUG-P5 (continued)				ALL
	13	UNUSED						ALL
	14		W0066	01P	24		21-44-11	ALL
	15		W0066	01R	24		21-44-11	ALL
	16		W0066	01S	24		21-44-11	ALL
	17		W0066	01T	24		21-44-11	ALL
	18	UNUSED						ALL
	19		W0066	01V	24		21-44-11	ALL
	20		W0066	01W	24		21-44-21	ALL
	21	UNUSED						ALL
	22		W0066	01Y	24		21-44-21	ALL
	23		W0066	01Z	24		21-44-21	ALL
	24		W0066	02A	24		21-44-21	ALL
	25		W0066	02B	24		21-44-21	ALL
	26		W0066	02C	24		21-26-21	ALL
	27	UNUSED						ALL
	28		W0066	02E	24		21-26-21	ALL
	29		W0066	02F	24		21-26-21	ALL
	30	UNUSED						ALL
	31		W0066	02H	24		21-26-21	ALL
	DED		W0066	01CZ			33-16-17	ALL
D03846		P061-00/ /		PLUG-P61				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W0066	06C	24		21-26-21	ALL
	4	UNUSED						ALL
	5		W0066	06E	24		21-26-21	ALL
	6		W0066	01Y	24		21-44-21	ALL
	7		W0066	06G	24		21-44-21	ALL
	8		W0066	06H	24		21-44-21	ALL
	9		W0066	02H	24		21-26-21	ALL
	10	UNUSED						ALL
	11		W0066	06L	24		21-26-21	ALL
	12	UNUSED						ALL
D03892		P005-00/ /		PLUG-P5				ALL
	1		W0062	131	20		33-13-16	ALL
	2		W0062	132	20		33-13-16	ALL
	3		W0062	211R	24		36-21-11	ALL
	4		W0062	211B	24		36-21-11	ALL

HOOKUP LIST
D280T132

91-21-51
Section D03800
Page 3
Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03892		P005-00/ /		PLUG-P5 (continued)				ALL
	5		W0062	210R	24		36-21-11	ALL
	6		W0062	210B	24		36-21-11	ALL
	7		W0062	58C	20		36-21-11	ALL
	8		W0062	58E	24		36-21-11	ALL
	9		W0062	58D	20		36-21-11	ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	DED		W0062	210Z			36-21-11	ALL
D03896		P005-00/ /		PLUG-P5				ALL
	1	DK	W0062	01A	18		33-13-16	ALL
	2	DK	W0062	01B	18		33-13-16	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8		W0062	01H	20		28-43-11	ALL
	9		W0062	01J	24		28-43-11	ALL
	10		W0062	01K	20		28-43-11	ALL
	11		W0062	01L	24		28-43-11	ALL
	12	DK	W0062	209B	18		28-43-11	ALL
	13	DK	W0062	209R	18		28-43-11	ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
D03898		P005-00/ /		PLUG-P5				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10		W0070	219R	24		28-41-11	ALL
	11		W0070	220B	24		28-41-11	ALL
	12		W0070	220R	24		28-41-11	ALL

HOOKUP LIST
D280T132

91-21-51
Section D03800
Page 4
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03898		P005-00/ /		PLUG-P5 (continued)				ALL
	13		W0070	221B	24		28-41-11	ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16		W0070	218B	24		28-41-11	ALL
	17	UNUSED						ALL
	18		W0070	217B	24		28-41-11	ALL
	19		W0070	217R	24		28-41-11	ALL
	20		W0070	216R	24		28-41-11	ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24		W0070	219B	24		28-41-11	ALL
	25		W0070	565	24		28-41-11	ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29		W0070	221R	24		28-41-11	ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32		W0070	218R	24		28-41-11	ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38		W0070	578	24		28-41-11	ALL
	39		W0070	216B	24		28-41-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D03800

Page 5 End

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03900		P005-00/ /		PLUG-P5				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10		W0070	225R	24		28-41-11	ALL
	11		W0070	226B	24		28-41-11	ALL
	12		W0070	226R	24		28-41-11	ALL
	13		W0070	227B	24		28-41-11	ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16		W0070	224B	24		28-41-11	ALL
	17	UNUSED						ALL
	18		W0070	223B	24		28-41-11	ALL
	19		W0070	223R	24		28-41-11	ALL
	20		W0070	222R	24		28-41-11	ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24		W0070	225B	24		28-41-11	ALL
	25		W0070	525	24		28-41-11	ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29		W0070	227R	24		28-41-11	ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32		W0070	224R	24		28-41-11	ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38		W0070	538	24		28-41-11	ALL
	39		W0070	222B	24		28-41-11	ALL

HOOKUP LIST
D280T132

91-21-51
Section D03900
Page 1
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03902		P005-00/ /		PLUG-P5				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W0066	036	22		29-11-12	ALL
	7		W0066	037	22		29-32-11	ALL
	8		W0066	038	22		29-11-21	ALL
	9		W0066	039	22		29-11-21	ALL
	10		W0066	170	22		31-31-26	ALL
	11		W0066	03C	22		33-16-17	ALL
	12		W0066	03D	22		33-16-17	ALL
	DED		W0066	036Z			29-11-12	ALL
	DED		W0066	03CZ			33-16-17	ALL
D03904		P005-00/ /		PLUG-P5				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W0062	036	22		29-11-22	ALL
	7		W0062	037	22		29-32-11	ALL
	8		W0062	038	22		29-11-11	ALL
	9		W0062	039	22		29-11-11	ALL
	10		W0062	099	22		31-31-26	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	DED		W0062	036Z			29-11-22	ALL
D03906		P033-00/ /		RELAY SOCKET-				ALL
	1		W0144	100	24		27-58-11	ALL
	2		W0144	095	24		27-58-11	ALL
	3		W0144	050	24		27-58-11	ALL
	4		W0144	097	24		27-58-11	ALL
	5		W0144	096	24		27-58-11	ALL
	6		W0144	098	24		27-58-11	ALL
	7		W0144	099	24		27-58-11	ALL
	8		W0144	094	24		27-58-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D03900

Page 2

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03908		P033-00/ /		RELAY SOCKET-P33				ALL
	A1		W0142	136	22		27-51-11	ALL
	A2		W0142	137	20		27-51-11	ALL
	A3	UNUSED						ALL
	B1		W0142	059	18		27-51-11	ALL
	B2		W0142	060	18		27-51-11	ALL
	B3		W0142	885	20		27-51-11	ALL
	X1		W0142	061	22		27-51-11	ALL
	X2		W0142	033	22		27-51-11	ALL
D03910		P033-00/ /		RELAY SOCKET-P33				ALL
	A1	UNUSED						ALL
	A2		W0142	08B	24		34-12-22	ALL
	A3	UNUSED						ALL
	B1		W0142	664	22		30-31-23	ALL
	B2		W0142	651	20		30-31-23	ALL
	B3	UNUSED						ALL
	C1		W0142	647	22		30-31-23	ALL
	C2	UNUSED						ALL
	C3		W0142	08A	20		34-12-22	ALL
	D1		W0142	650	20		30-31-23	ALL
	D2		W0142	648	22		30-31-23	ALL
	D3		W0142	649	24		30-31-23	ALL
	X1		W0142	645	24		30-31-23	ALL
	X2		W0142	658	20		30-31-23	ALL
	DED		W0142	648Z			30-31-23	ALL
	DED		W0142	649Z			30-31-23	ALL
	DED		W0142	651Z			30-31-23	ALL
D03916		P033-00/ /		RELAY SOCKET-				ALL
	A1	UNUSED						ALL
	A2		W0144	002	24		34-12-12	ALL
	A3	UNUSED						ALL
	B1		W0144	540	20		30-32-11	ALL
	B2		W0144	543	20		30-32-11	ALL
	B3	UNUSED						ALL
	C1		W0144	539	22		30-32-11	ALL
	C2	UNUSED						ALL
	C3		W0144	542	20		34-12-12	ALL
	D1		W0144	691	20		30-32-11	ALL
	D2		W0144	538	22		30-32-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D03900

Page 3

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03916		P033-00/ /		RELAY SOCKET- (continued)				ALL
	D3	UNUSED						ALL
	X1		W0144	536	24		30-32-11	ALL
	X2		W0144	541	20		30-32-11	ALL
	DED		W0144	538Z			30-32-11	ALL
	DED		W0144	543Z			30-32-11	ALL
D03924		P033-00/ /		RELAY SOCKET-				ALL
	A1	UNUSED						ALL
	A2		W0144	151	24		73-21-12	ALL
	A3	UNUSED						ALL
	B1		W0144	609	22		30-34-11	ALL
	B2	UNUSED						ALL
	B3	UNUSED						ALL
	C1		W0144	604	22		30-34-11	ALL
	C2	UNUSED						ALL
	C3		W0144	752	20		73-21-12	ALL
	D1		W0144	693	20		30-34-11	ALL
	D2	UNUSED						ALL
	D3	UNUSED						ALL
	X1		W0144	769	24		30-34-11	ALL
	X2		W0144	605	20		30-34-11	ALL
	DED		W0144	609Z			30-34-11	050-099
D03938		P033-00/ /		RELAY SOCKET-P33				ALL
	A1	UNUSED						ALL
	A2		W0142	004	24		34-12-22	ALL
	A3	UNUSED						ALL
	B1		W0142	642	22		30-31-21	ALL
	B2		W0142	639	20		30-31-21	ALL
	B3	UNUSED						ALL
	C1		W0142	641	22		30-31-21	ALL
	C2	UNUSED						ALL
	C3		W0142	08E	20		34-12-22	ALL
	D1		W0142	876	20		30-31-21	ALL
	D2		W0142	636	22		30-31-21	ALL
	D3		W0142	635	24		30-31-21	ALL
	X1		W0142	637	24		30-31-21	ALL
	X2		W0142	634	20		30-31-21	ALL
	DED		W0142	635Z			30-31-21	ALL
	DED		W0142	636Z			30-31-21	ALL

HOOKUP LIST

D280T132

91-21-51

Section D03900

Page 4

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03938		P033-00/ /		RELAY SOCKET-P33 (continued)				ALL
	DED		W0142	639Z			30-31-21	ALL
D03942		P033-00/ /		RELAY SOCKET-				ALL
	A1	UNUSED						ALL
	A2		W0144	001	24		34-12-12	ALL
	A3	UNUSED						ALL
	B1		W0144	564	20		30-33-11	ALL
	B2		W0144	567	20		30-33-11	ALL
	B3	UNUSED						ALL
	C1		W0144	556	22		30-33-11	ALL
	C2	UNUSED						ALL
	C3		W0144	566	20		34-12-12	ALL
	D1		W0144	692	20		30-33-11	ALL
	D2		W0144	555	22		30-33-11	ALL
	D3		W0144	550	22		30-33-11	ALL
	X1		W0144	562	24		30-33-11	ALL
	X2		W0144	561	20		30-33-11	ALL
	DED		W0144	550Z			30-33-11	ALL
	DED		W0144	555Z			30-33-11	ALL
	DED		W0144	567Z			30-33-11	ALL
D03946		P033-00/ /		RELAY SOCKET-				ALL
	A1	UNUSED						ALL
	A2		W0142	840	24		73-21-12	ALL
	A3	UNUSED						ALL
	B1		W0142	665	22		30-34-21	ALL
	B2	UNUSED						ALL
	B3	UNUSED						ALL
	C1		W0142	660	22		30-34-21	ALL
	C2	UNUSED						ALL
	C3		W0142	02A	20		73-21-12	ALL
	D1		W0142	875	20		30-34-21	ALL
	D2	UNUSED						ALL
	D3	UNUSED						ALL
	X1		W0142	825	24		30-34-21	050-099, 150-199
	X1		W0142	09L	24		30-34-21	275-299
	X2		W0142	661	20		30-34-21	ALL
D03948		P033-00/ /		RELAY SOCKET-				ALL
	A1	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D03900

Page 5

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03948		P033-00/ /		RELAY SOCKET- (continued)				ALL
	A2		W0144	003	24		34-12-12	ALL
	A3	UNUSED						ALL
	B1		W0144	022	22		30-31-11	ALL
	B2		W0144	704	20		30-31-11	ALL
	B3	UNUSED						ALL
	C1		W0144	019	22		30-31-11	ALL
	C2	UNUSED						ALL
	C3		W0144	751	20		34-12-12	ALL
	D1		W0144	685	20		30-31-11	ALL
	D2		W0144	703	22		30-31-11	ALL
	D3		W0144	702	24		30-31-11	ALL
	X1		W0144	714	24		30-31-11	ALL
	X2		W0144	701	20		30-31-11	ALL
	DED		W0144	702Z			30-31-11	ALL
	DED		W0144	703Z			30-31-11	ALL
	DED		W0144	704Z			30-31-11	ALL
D03952		P033-00/ /		RELAY SOCKET-				ALL
	A1	UNUSED						ALL
	A2		W0144	750	24		34-12-12	ALL
	A3	UNUSED						ALL
	B1		W0144	118	22		30-31-13	ALL
	B2		W0144	125	20		30-31-13	ALL
	B3	UNUSED						ALL
	C1		W0144	124	22		30-31-13	ALL
	C2	UNUSED						ALL
	C3		W0144	749	20		34-12-12	ALL
	D1		W0144	127	20		30-31-13	ALL
	D2		W0144	121	22		30-31-13	ALL
	D3		W0144	119	24		30-31-13	ALL
	X1		W0144	120	24		30-31-13	ALL
	X2		W0144	06N	20		30-31-13	ALL
	DED		W0144	119Z			30-31-13	ALL
	DED		W0144	121Z			30-31-13	ALL
	DED		W0144	125Z			30-31-13	ALL
D03964		P033-00/ /		RELAY SOCKET-P33				ALL
	A1		W0142	721	20		30-71-21	050-099, 150-199
	A1		W0142	721	22		30-71-21	275-299
	A2		W0142	722	20		30-71-21	050-099, 155-199

HOOKUP LIST

D280T132

91-21-51

Section D03900

Page 6

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03964		P033-00/ /		RELAY SOCKET-P33 (continued)				ALL
	A2		W0142	722	22		30-71-21	150-154, 275-299
	A3	UNUSED						ALL
	B1		W0142	695	20		30-71-21	050-099, 155-199
	B1		W0142	695	22		30-71-21	150-154, 275-278
	B1	UNUSED						280-299
	B2		W0142	723	20		30-71-21	050-099, 155-199
	B2		W0142	723	22		30-71-21	150-154, 275-278
	B2	UNUSED						280-299
	B3	UNUSED						ALL
	C1		W0142	687	20		30-71-21	050-099, 150-199
	C1	UNUSED						275-278
	C1		W0142	687	22		30-71-21	280-299
	C2		W0142	724	20		30-71-21	050-099, 150-199
	C2	UNUSED						275-278
	C2		W0142	724	22		30-71-21	280-299
	C3	UNUSED						ALL
	D1		W0142	697	20		30-71-21	050-099, 150-199
	D1		W0142	697	22		30-71-21	275-299
	D2		W0142	725	20		30-71-21	050-099, 155-199
	D2		W0142	725	22		30-71-21	150-154, 275-299
	D3	UNUSED						ALL
	X1		W0142	726	20		30-71-21	050-099, 155-199
	X1		W0142	726	22		30-71-21	150-154, 275-299
	X2		W0142	698	20		30-71-21	050-099, 155-199
	X2		W0142	698	22		30-71-21	150-154, 275-299
D03966		P033-00/ /		RELAY SOCKET-P33				ALL
	A1		W0142	701	22		30-71-21	050-099
	A1		W0142	701	20		30-71-21	150-199
	A1	UNUSED						275-278
	A1		W0142	699	22		30-71-21	280-299
	A2		W0142	727	20		30-71-21	050-099, 150-199
	A2	UNUSED						275-278
	A2		W0142	727	22		30-71-21	280-299
	A3	UNUSED						ALL
	B1		W0142	155	20		30-71-21	050-099, 150-199
	B1		W0142	701	22		30-71-21	275-299
	B2		W0142	728	20		30-71-21	050-099, 150-199
	B2		W0142	728	22		30-71-21	275-299
	B3	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D03900

Page 7

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03966		P033-00/ /		RELAY SOCKET-P33 (continued)				ALL
	X1		W0142	762	20		30-71-21	050-099, 150-199
	X1		W0142	762	22		30-71-21	275-299
	X2		W0142	708	20		30-71-21	050-099
	X2		W0142	702	20		30-71-21	150-199
	X2		W0142	702	22		30-71-21	275-299
D03968		P033-00/ /		RELAY SOCKET-P33				ALL
	A1		W0142	729	20		30-71-22	050-099, 155-199
	A1		W0142	729	22		30-71-22	150-154, 275-299
	A2		W0142	763	20		30-71-22	050-099, 155-199
	A2		W0142	763	22		30-71-22	150-154, 275-299
	A3	UNUSED						ALL
	B1		W0142	731	20		30-71-22	050-099
	B1		W0142	731	22		30-71-22	150-199, 275-299
	B2		W0142	732	20		30-71-22	050-099
	B2		W0142	732	22		30-71-22	150-199, 275-299
	B3	UNUSED						ALL
	C1		W0142	818	20		30-71-22	050-099
	C1		W0142	818	22		30-71-22	150-199, 275-299
	C2		W0142	16A	20		30-71-22	050-099, 155-199, 276-299
	C2		W0142	821	20		30-71-22	150-154, 275
	C3	UNUSED						ALL
	D1	UNUSED						050-099, 150-199
	D1		W0142	542	22		30-71-22	275-299
	D2	UNUSED						050-099, 150-199
	D2		W0142	838	22		30-71-22	275
	D2		W0142	17A	22		30-71-22	276-299
	D3	UNUSED						ALL
	X1		W0142	733	20		30-71-22	050-099, 155-199
	X1		W0142	733	22		30-71-22	150-154, 275-299
	X2		W0142	734	20		30-71-22	050-099, 155-199
	X2		W0142	734	22		30-71-22	150-154, 275-299
D03972		P033-00/ /		RELAY SOCKET-P33				ALL
	A1		W0142	735	20		30-71-23	050-099, 155-199
	A1		W0142	735	22		30-71-23	150-154, 275-299
	A2		W0142	736	20		30-71-23	050-099, 150-199
	A2		W0142	736	22		30-71-23	275-299
	A3	UNUSED						ALL
	B1	UNUSED						050-099

HOOKUP LIST

D280T132

91-21-51

Section D03900

Page 8

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03972		P033-00/ /		RELAY SOCKET-P33 (continued)				ALL
	B1		W0142	737	22		30-71-23	150-154, 275-299
	B1		W0142	737	20		30-71-23	155-199
	B2		W0142	738	20		30-71-23	050-099, 150-199
	B2		W0142	738	22		30-71-23	275-299
	B3	UNUSED						ALL
	C1		W0142	710	20		30-71-23	050-099, 150-199
	C1		W0142	710	22		30-71-23	275-299
	C2		W0142	739	20		30-71-23	050-099, 155-199
	C2		W0142	739	22		30-71-23	150-154, 275-299
	C3	UNUSED						ALL
	D1		W0142	740	20		30-71-23	050-099, 155-199
	D1		W0142	740	22		30-71-23	150-154, 275-299
	D2		W0142	741	20		30-71-23	050-099, 155-199
	D2		W0142	741	22		30-71-23	150-154, 275-299
	D3	UNUSED						ALL
	X1		W0142	742	20		30-71-23	050-099, 155-199
	X1		W0142	742	22		30-71-23	150-154, 275-299
	X2		W0142	047	20		30-71-23	050-099, 155-199
	X2		W0142	047	22		30-71-23	150-154, 275-299
D03980		P033-00/ /		RELAY SOCKET				ALL
	1	UNUSED						ALL
	2		W0144	02S	20		27-62-11	ALL
	3		W0144	03I	22		27-62-11	ALL
	4		W0144	02R	22		27-62-11	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W0144	02N	22		27-62-11	ALL
	8	UNUSED						ALL
D03982		0770/302/L017		PLUG-				050-099
D03982		0770/305/L017		PLUG-				150-199, 275-299
	1		W1236	202B	24		21-61-31	ALL
	2		W1236	202R	24		21-61-31	ALL
D03984		0661/300/L015		PLUG-				050-099
D03984		654+8/303/L013		PLUG-				150-199, 275-278
D03984		654+7/302/L012		PLUG-				280-299
	1		W0798	203B	24		21-61-21	ALL
	2		W0798	203R	24		21-61-21	ALL

HOOKUP LIST

D280T132

91-21-51

Section D03900

Page 9

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03986		R0280/ /		PLUG-				ALL
	1	UNUSED						ALL
	2		W0476	301B	18		28-22-11	ALL
	3		W0476	001	18		28-22-11	ALL
	4		W0476	301R	18		28-22-11	ALL
	5	UNUSED						ALL
	6		W0476	301Y	18		28-22-11	ALL
	7	UNUSED						ALL
D03988		0823/113/L015		PLUG-				ALL
	1		W0508	309Y	20		21-64-11	ALL
	2		W0508	309B	20		21-64-11	ALL
	3		W0508	309R	20		21-64-11	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D03990		0834/129/L015		PLUG-				050-099
D03990		0827/129/L015		PLUG-				150-199, 275-299
	1		W0508	310Y	20		21-64-11	ALL
	2		W0508	310B	20		21-64-11	ALL
	3		W0508	310R	20		21-64-11	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D03992		0834/118/L015		PLUG-				050-099
D03992		0827/118/L015		PLUG-				150-199, 275-299
	1		W0508	311Y	20		21-64-11	ALL

HOOKUP LIST
D280T132

91-21-51
Section D03900
Page 10
Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03992		0834/118/L015		PLUG- (continued)				050-099
D03992		0827/118/L015		PLUG- (continued)				150-199, 275-299
	2		W0508	311B	20		21-64-11	ALL
	3		W0508	311R	20		21-64-11	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D03994		0770/305/L018		PLUG-				ALL
	A		W1236	201B	20		21-65-11	ALL
	B		W1236	033	20		21-65-11	ALL
D03996		MULTI/283/0000		PLUG-				ALL
	A		W0790	203B	20		21-65-11	ALL
	B		W0790	001	20		21-65-11	ALL
D03998		MULTI/268/0000		PLUG-				050-099, 280-299
D03998		MULTI/281/0000		PLUG-				150-199, 275-278
	A		W0798	205B	20		21-65-11	ALL
	B		W0798	001	20		21-65-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D03900

Page 11 End

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04001J		AE0322/ /		RCPT-E2-6 COAX,HF L				ALL
	= A1		W0241	01CX			23-11-11	ALL
	= C1		W0241	01CO			23-11-11	ALL
D04001P		AE0322/ /		PLUG-COAX-E2-6				ALL
	= A1		W1079	01CX			23-11-11	ALL
	= C1		W1079	01CO			23-11-11	ALL
D04002J		AE0226/ /		RCPT-P54				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W1082	012R	22		26-18-12	ALL
	4	UNUSED						ALL
	5		W1082	805R	22		26-18-11	ALL
	6		W1082	806R	22		26-18-11	ALL
	7		W1082	807R	22		26-18-21	ALL
	8		W1082	808R	22		26-18-21	ALL
	9		W1082	809R	22		26-18-31	ALL
	10		W1082	810R	22		26-18-31	ALL
	11		W1082	811	24		31-51-21	ALL
	12		W1082	812	24		31-51-21	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D04002P		AE0226/ /		PLUG-P54				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W0510	504R	22		26-18-12	ALL
	4	UNUSED						ALL
	5		W0510	028R	22		26-18-11	ALL
	6		W0510	029R	22		26-18-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04000

Page 1

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04002P		AE0226/ /		PLUG-P54 (continued)				ALL
	7		W0510	030R	22		26-18-21	ALL
	8		W0510	031R	22		26-18-21	ALL
	9		W0510	032R	22		26-18-31	ALL
	10		W0510	033R	22		26-18-31	ALL
	11		W0510	111	24		31-51-21	ALL
	12		W0510	112	24		31-51-21	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D04003J		AP1501/ /		RCPT-COAX,HF L				ALL
	= A1		W0243	01CX			23-11-11	ALL
	= C1		W0243	01CO			23-11-11	ALL
D04003P		AP1501/ /		PLUG-COAX,HF L				ALL
	= A1		W0241	01CX			23-11-11	ALL
	= C1		W0241	01CO			23-11-11	ALL
D04004J		AE0218/ /		RCPT-P37				ALL
	1	UNUSED						050-099, 150-199, 277-299
	1	DK	W0192	131	18		38-32-11	275-276
	2		W0192	224Z			32-42-11	ALL
	3		W0192	08U	24		73-21-14	ALL
	4		W0192	638	22		27-09-12	ALL
	5	UNUSED						ALL
	6		W0192	03L	24		21-51-21	ALL
	7		W0192	0AK	24		36-21-11	ALL
	8		W0192	82E	24		30-21-11	050-099, 150-199
	8	UNUSED						275-299
	9		W0192	508	24		21-51-21	ALL
	10		W0192	0AB	24		36-11-52	ALL

HOOKUP LIST
D280T132

91-21-51
Section D04000
Page 2
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04004J		AE0218/ /		RCPT-P37 (continued)				ALL
	11		W0192	116	24		36-11-21	ALL
	12		W0192	01H	24		36-11-21	ALL
	13		W0192	111	24		36-11-21	ALL
	14		W0192	112	24		36-11-21	ALL
	15	UNUSED						ALL
	16		W0192	275R	24		36-21-11	ALL
	17		W0192	275B	24		36-21-11	ALL
	18		W0192	209B	24		21-51-22	ALL
	19		W0192	209R	24		21-51-22	ALL
	20		W0192	03X	24		21-58-11	ALL
	21		W0192	03S	24		21-58-11	ALL
	22	FM	W0192	115	16		21-58-11	ALL
	23		W0192	224B	24		32-42-11	ALL
	24		W0192	224R	24		32-42-11	ALL
	25		W0192	0AR	24		36-23-21	ALL
	26	UNUSED						ALL
	27		W0192	0AT	24		36-23-21	ALL
	28		W0192	0AU	24		36-23-21	ALL
	29		W0192	11M	22		29-11-12	ALL
	30		W0192	276R	24		36-21-11	ALL
	31		W0192	276B	24		36-21-11	ALL
	DED		W0192	03SZ			21-58-11	ALL
	DED		W0192	03XZ			21-58-11	ALL
	DED		W0192	115Z			21-58-11	ALL
	DED		W0192	11MZ			29-11-12	ALL
D04004P		AE0218/ /		PLUG-P37				ALL
	1	UNUSED						050-099, 150-199, 277-299
	1	DL	W0738	518	18		38-32-11	275-276
	2		W0738	217Z			32-42-11	ALL
	3		W0738	105	24		73-21-14	ALL
	4		W0738	074	22		27-09-12	ALL
	5		W0738	801	22		SPARE	ALL
	6		W0738	086	24		21-51-21	ALL
	7		W0738	101	24		36-21-11	ALL
	8		W0738	080	24		30-21-11	050-099, 150-199
	8	UNUSED						275-299
	9		W0738	015	24		21-51-21	ALL
	10		W0738	115	24		36-23-21	ALL
	11		W0738	049	24		36-11-21	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04000

Page 3

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04004P		AE0218/ /		PLUG-P37 (continued)				ALL
	12		W0738	050	24		36-11-21	ALL
	13		W0738	051	24		36-11-21	ALL
	14		W0738	052	24		36-11-21	ALL
	15	UNUSED						ALL
	16		W0738	212R	24		36-21-11	ALL
	17		W0738	212B	24		36-21-11	ALL
	18		W0738	210B	24		21-51-22	ALL
	19		W0738	210R	24		21-51-22	ALL
	20		W0738	043	24		21-58-11	ALL
	21		W0738	046	24		21-58-11	ALL
	22		W0738	039	24		21-58-11	ALL
	23		W0738	217B	24		32-42-11	ALL
	24		W0738	217R	24		32-42-11	ALL
	25		W0738	117	24		36-23-21	ALL
	26		W0738	109	24		SPARE	050-099, 150-155, 162-165, 275-276
	26	UNUSED						156-157, 166-199, 277-299
	27		W0738	118	24		36-23-21	ALL
	28		W0738	119	24		36-23-21	ALL
	29		W0738	108	22		29-11-12	ALL
	30		W0738	228R	24		36-21-11	ALL
	31		W0738	228B	24		36-21-11	ALL
	CAP	Y	W0738	109	24		SPARE	156-157, 166-199, 277-299
	DED		W0738	108Z			29-11-12	ALL
D04005J		AE0322/ /		RCPT-E2-6 COAX,HF R				ALL
	= A1		W0245	01CX			23-11-21	ALL
	= C1		W0245	01CO			23-11-21	ALL
D04005P		AE0322/ /		PLUG-E2-6 COAX				ALL
	= A1		W1081	01CX			23-11-21	ALL
	= C1		W1081	01CO			23-11-21	ALL
D04006J		AF0232/ /		RCPT-P6				ALL
	1		W0028	501	20		25-33-11	050-099, 155-199, 277-299
	1	UNUSED						150-154, 275-276
	2	UNUSED						ALL
	3		W0028	001	22		28-22-21	ALL
	4		W0028	023	18		24-11-11	ALL
	5		W0028	038	20		24-11-11	ALL
	6	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D04000
Page 4
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04006J		AF0232/ /		RCPT-P6 (continued)				ALL
	7	UNUSED						ALL
	8		W0028	007	18		24-33-11	ALL
	9		W0028	177	24		24-51-31	ALL
	10	UNUSED						ALL
	11		W0028	041	20		24-22-41	ALL
	12		W0028	175	24		24-33-11	ALL
	13		W0028	073	24		24-32-11	ALL
	14		W0028	018	24		24-32-11	ALL
	15	UNUSED						ALL
	16		W0028	091	24		24-33-11	ALL
	17		W0028	085	24		24-33-11	ALL
	18		W0028	011	24		24-33-11	ALL
	19		W0028	019	24		24-33-11	ALL
	20		W0028	016	24		24-33-11	ALL
	21		W0028	015	24		24-33-11	ALL
	22		W0028	020	24		24-33-11	ALL
	23		W0028	148	24		24-33-11	ALL
	24		W0028	043	20		24-41-11	ALL
	25		W0028	157	24		24-41-11	ALL
	26		W0028	172	24		24-34-11	ALL
	27		W0028	176	24		24-33-11	ALL
	28	UNUSED						050-099, 150-199
	28		W0028	042R	20		26-22-21	275-299
	29		W0028	045R	20		26-21-11	ALL
	30		W0028	054R	20		26-21-11	ALL
	31		W0028	049R	20		26-23-11	050-099, 150-199
	31		W0028	049R	20		26-23-12	275-299
	32	UNUSED						ALL
	DED		W0028	001Z			28-22-21	ALL
	DED		W0028	038Z			24-11-11	ALL
	DED		W0028	157Z			24-41-11	ALL
D04006P		AF0232/ /		PLUG-P6				ALL
	1		W0070	70B	20		25-33-11	050-099, 155-199, 277-299
	1	UNUSED						150-154, 275-276
	2	UNUSED						ALL
	3		W0070	03E	22		28-22-21	ALL
	4		W0070	741	18		24-11-11	ALL
	5		W0070	01J	20		24-11-11	ALL
	6	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D04000

Page 5

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04006P		AF0232/ /		PLUG-P6 (continued)				ALL
	7	UNUSED						ALL
	8		W0070	700	18		24-33-11	ALL
	9		W0070	02R	24		24-51-31	ALL
	10	UNUSED						ALL
	11		W0070	01S	20		24-22-41	ALL
	12		W0070	02W	24		24-33-11	ALL
	13		W0070	01Y	24		24-32-11	ALL
	14		W0070	01Z	24		24-32-11	ALL
	15	UNUSED						ALL
	16		W0070	02B	24		24-33-11	ALL
	17		W0070	02A	24		24-33-11	ALL
	18		W0070	02C	24		24-33-11	ALL
	19		W0070	690	24		24-33-11	ALL
	20		W0070	703	24		24-33-11	ALL
	21		W0070	701	24		24-33-11	ALL
	22		W0070	693	24		24-33-11	ALL
	23		W0070	687	24		24-33-11	ALL
	24		W0070	02M	20		24-41-11	ALL
	25		W0070	02N	24		24-41-11	ALL
	26		W0070	714	24		24-33-11	ALL
	27		W0070	686	24		24-33-11	ALL
	28	UNUSED						050-099, 150-199
	28		W0070	877R	20		26-22-21	275-299
	29		W0070	891R	20		26-21-11	ALL
	30		W0070	893R	20		26-21-11	ALL
	31		W0070	895R	20		26-23-12	ALL
	32	UNUSED						ALL
	DED		W0070	03EZ			28-22-21	ALL
D04007J		AP1501/ /		RCPT-COAX,HF R				ALL
	= A1		W0245	01CX			23-11-21	ALL
	= C1		W0245	01CO			23-11-21	ALL
D04007P		AP1501/ /		PLUG-COAX,HF R				ALL
	= A1		W0247	01CX			23-11-21	ALL
	= C1		W0247	01CO			23-11-21	ALL
D04008J		AF0232/ /		RCPT-P6				ALL
	1		W0028	114	16		34-21-11	ALL
	2	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D04000
Page 6
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04008J		AF0232/ /		RCPT-P6 (continued)				ALL
	3		W0028	051	22		28-22-21	ALL
	4		W0028	004	18		24-11-21	ALL
	5		W0028	003	20		24-11-21	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9		W0028	612	24		24-51-31	ALL
	10	UNUSED						ALL
	11		W0028	033	24		24-28-11	ALL
	12	UNUSED						ALL
	13		W0028	039	24		24-31-11	ALL
	14		W0028	040	24		24-31-11	ALL
	15	UNUSED						ALL
	16		W0028	141	24		24-34-11	ALL
	17		W0028	199	22		24-25-11	ALL
	18		W0028	143	24		24-34-11	ALL
	19		W0028	144	24		24-34-11	ALL
	20		W0028	201B	24		24-34-11	ALL
	21		W0028	201R	24		24-34-11	ALL
	22		W0028	202B	24		24-34-11	ALL
	23		W0028	202R	24		24-34-11	ALL
	24		W0028	203B	24		24-34-11	ALL
	25		W0028	203R	24		24-34-11	ALL
	26		W0028	025	24		24-34-11	ALL
	27		W0028	024	24		24-34-11	ALL
	28		W0028	026	24		24-34-11	ALL
	29		W0028	046R	20		26-21-11	ALL
	30		W0028	055R	20		26-21-11	ALL
	31		W0028	056R	20		26-23-11	ALL
	32	UNUSED						ALL
	DED		W0028	026Z			24-34-11	ALL
D04008P		AF0232/ /		PLUG-P6				ALL
	1		W0070	11U	12		34-21-11	ALL
	2	UNUSED						ALL
	3		W0070	03C	22		28-22-21	ALL
	4		W0070	743	18		24-11-21	ALL
	5		W0070	01K	20		24-11-21	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D04000

Page 7

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04008P		AF0232/ /		PLUG-P6 (continued)				ALL
	8	UNUSED						ALL
	9		W0070	02P	24		24-51-31	ALL
	10	UNUSED						ALL
	11		W0070	01T	24		24-28-11	ALL
	12	UNUSED						ALL
	13		W0070	01U	24		24-31-11	ALL
	14		W0070	01W	24		24-31-11	ALL
	15	UNUSED						ALL
	16		W0070	02E	24		24-34-11	ALL
	17		W0070	02F	22		24-25-11	ALL
	18		W0070	02G	24		24-34-11	ALL
	19		W0070	02H	24		24-34-11	ALL
	20		W0070	201B	24		24-34-11	ALL
	21		W0070	201R	24		24-34-11	ALL
	22		W0070	202B	24		24-34-11	ALL
	23		W0070	202R	24		24-34-11	ALL
	24		W0070	203B	24		24-34-11	ALL
	25		W0070	203R	24		24-34-11	ALL
	26		W0070	02J	24		24-34-11	ALL
	27		W0070	02K	24		24-34-11	ALL
	28		W0070	02L	24		24-34-11	ALL
	29		W0070	881R	20		26-21-11	ALL
	30		W0070	883R	20		26-21-11	ALL
	31		W0070	885R	20		26-23-11	ALL
	32	UNUSED						ALL
D04009J		AE0322/ /		RCPT-E2-5 COAX,VHF L				ALL
	=A1		W0249	01CX			23-12-11	ALL
	=C1		W0249	01CO			23-12-11	ALL
D04009P		AE0322/ /		PLUG-COAX-E2-5,VHF-L				ALL
	=A1		W1073	01CX			23-12-11	ALL
	=C1		W1073	01CO			23-12-11	ALL
D04010J		AF0232/ /		RCPT-P6				ALL
	1		W0028	197	16		34-21-31	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W0028	036	18		28-21-11	ALL
	5	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D04000
Page 8
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04010J		AF0232/ /		RCPT-P6 (continued)				ALL
	6		W0028	013	12		32-35-11	ALL
	7		W0028	126	20		28-21-13	ALL
	8		W0028	034	18		28-41-12	ALL
	9		W0028	050	22		28-25-21	050-099
	9		W0028	050	20		28-25-21	150-199, 275-299
	10		W0028	035	18		28-26-11	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14		W0028	037	22		32-44-11	ALL
	15	UNUSED						ALL
	16		W0028	138	24		21-58-11	ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19		W0028	058	24		22-11-32	ALL
	20		W0028	057	24		22-11-32	ALL
	21	UNUSED						ALL
	22		W0028	122	24		31-25-11	ALL
	23		W0028	123	24		31-25-11	ALL
	24	UNUSED						ALL
	25		W0028	005	24		29-21-31	ALL
	26		W0028	002	24		29-21-31	ALL
	27	UNUSED						ALL
	28		W0028	125	22		23-22-11	ALL
	29		W0028	047R	20		26-22-21	ALL
	30	UNUSED						ALL
	31	DK	W0028	022	18		25-63-11	ALL
	32	UNUSED						ALL
	DED		W0028	037Z			32-44-11	ALL
D04010P		AF0232/ /		PLUG-P6				ALL
	1		W0070	11W	12		34-21-31	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W0070	03A	18		28-21-11	ALL
	5	UNUSED						ALL
	6		W0070	04N	12		32-35-11	ALL
	7		W0070	03M	20		28-21-13	ALL
	8		W0070	03N	18		28-41-12	ALL
	9		W0070	03J	22		28-25-21	050-099

HOOKUP LIST

D280T132

91-21-51

Section D04000

Page 9

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04010P		AF0232/ /		PLUG-P6 (continued)				ALL
	9		W0070	03J	20		28-25-21	150-199, 275-299
	10		W0070	03K	18		28-26-11	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14		W0070	04X	22		32-44-11	ALL
	15	UNUSED						ALL
	16		W0070	01H	24		21-58-11	ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19		W0070	10R	24		22-11-32	ALL
	20		W0070	10S	24		22-11-32	ALL
	21	UNUSED						ALL
	22		W0070	11T	24		31-25-11	ALL
	23		W0070	11S	24		31-25-11	ALL
	24	UNUSED						ALL
	25		W0070	04B	24		29-21-31	ALL
	26		W0070	146	24		29-21-31	ALL
	27	UNUSED						ALL
	28		W0070	10N	22		23-22-11	ALL
	29		W0070	887R	20		26-22-21	ALL
	30	UNUSED						ALL
	31	DL	W0070	12E	18		25-63-11	ALL
	32	UNUSED						ALL
	DED		W0070	03JZ			28-25-21	ALL
D04011J		0667/319/0000		RCPT-COAX,VHF L				050-099
D04011J		0654+33/319/0000		RCPT-COAX,VHF L				150-199, 275-299
	= A1		W0249	01CX			23-12-11	ALL
	= C1		W0249	01CO			23-12-11	ALL
D04011P		0667/319/0000		PLUG-COAX,VHF L				050-099
D04011P		0654+33/319/0000		PLUG-COAX,VHF L				150-199, 275-299
	= A1		W0251	01CX			23-12-11	ALL
	= C1		W0251	01CO			23-12-11	ALL
D04012J		AE0312/ /		RCPT-P32				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W0024	157	24		29-11-12	ALL

HOOKUP LIST
D280T132

91-21-51
Section D04000
Page 10
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04012J		AE0312/ /		RCPT-P32 (continued)				ALL
	4		W0024	146	24		24-51-71	ALL
	5		W0024	084	22		25-31-11	ALL
	6	UNUSED						ALL
	7		W0024	070	24		29-11-12	ALL
	8		W0024	141	24		24-22-22	ALL
	9		W0024	072	24		25-31-11	ALL
	10		W0024	073	24		25-31-11	ALL
	11		W0024	074	24		25-31-11	ALL
	12		W0024	075	24		25-31-11	ALL
	13	UNUSED						ALL
	14		W0024	006	20		24-22-21	ALL
	15		W0024	008	20		24-22-21	ALL
	16		W0024	009	20		24-22-21	ALL
	17		W0024	001	24		24-22-22	ALL
	18		W0024	004	24		24-22-21	ALL
	19		W0024	016	20		24-22-22	ALL
	20		W0024	018	20		24-22-22	ALL
	21		W0024	106	20		24-22-22	ALL
	22		W0024	012	24		24-22-22	ALL
	23		W0024	014	24		24-22-22	ALL
	24		W0024	401B	24		24-23-11	ALL
	25		W0024	401R	24		24-23-11	ALL
	26		W0024	401Y	24		24-23-11	ALL
	27		W0024	401G	24		24-23-11	ALL
	28		W0024	402B	24		24-23-11	ALL
	29		W0024	402R	24		24-23-11	ALL
	30		W0024	402Y	24		24-23-11	ALL
	31		W0024	402G	24		24-23-11	ALL
	32		W0024	048	24		24-51-51	ALL
	33		W0024	045	24		24-51-23	ALL
	34		W0024	028	24		24-27-21	ALL
	35		W0024	030	24		24-27-21	ALL
	36		W0024	158	24		29-11-12	ALL
	37		W0024	039	24		24-28-11	ALL
	38		W0024	046	24		24-51-23	ALL
	39		W0024	044	24		24-51-23	ALL
	40		W0024	188	20		24-51-72	050-099, 162-164, 276 150-157, 165-199, 275, 277-299
	40	UNUSED						
	41		W0024	060	22		29-32-11	ALL
	42		W0024	116	24		24-51-31	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04000

Page 11

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04012J		AE0312/ /		RCPT-P32 (continued)				ALL
	43		W0024	117	20		24-22-22	ALL
	44		W0024	118	24		24-51-31	ALL
	45		W0024	119	20		24-22-22	ALL
	46		W0024	124	24		29-11-31	ALL
	47		W0024	159	24		29-11-31	ALL
	48		W0024	126	24		29-11-31	ALL
	49		W0024	138	24		24-51-52	ALL
	50		W0024	145	24		24-51-71	ALL
	51		W0024	147	24		24-27-21	ALL
	52		W0024	149	24		24-27-21	ALL
	53		W0024	177	24		31-31-26	ALL
	54		W0024	179	24		31-31-26	ALL
	55	UNUSED						ALL
D04012P		AE0312/ /		PLUG-P32				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W0222	108	24		29-11-12	ALL
	4		W0222	028	24		24-51-71	ALL
	5		W0222	009	22		25-31-11	ALL
	6	UNUSED						ALL
	7		W0222	011	24		29-11-12	ALL
	8		W0222	091	24		24-22-22	ALL
	9		W0222	013	24		25-31-11	ALL
	10		W0222	014	24		25-31-11	ALL
	11		W0222	015	24		25-31-11	ALL
	12		W0222	016	24		25-31-11	ALL
	13	UNUSED						ALL
	14		W0222	043	20		24-22-21	ALL
	15		W0222	044	20		24-22-21	ALL
	16		W0222	045	20		24-22-21	ALL
	17		W0222	046	24		24-22-22	ALL
	18		W0222	047	24		24-22-21	ALL
	19		W0222	052	20		24-22-22	ALL
	20		W0222	053	20		24-22-22	ALL
	21		W0222	054	20		24-22-22	ALL
	22		W0222	055	24		24-22-22	ALL
	23		W0222	056	24		24-22-22	ALL
	24		W0222	403B	24		24-23-11	ALL
	25		W0222	403R	24		24-23-11	ALL

HOOKUP LIST
D280T132

91-21-51
Section D04000
Page 12
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04012P		AE0312/ /		PLUG-P32 (continued)				ALL
	26		W0222	403Y	24		24-23-11	ALL
	27		W0222	403G	24		24-23-11	ALL
	28		W0222	404B	24		24-23-11	ALL
	29		W0222	404R	24		24-23-11	ALL
	30		W0222	404Y	24		24-23-11	ALL
	31		W0222	404G	24		24-23-11	ALL
	32		W0222	062	24		24-51-51	ALL
	33		W0222	063	24		24-51-23	ALL
	34		W0222	065	24		24-27-21	ALL
	35		W0222	066	24		24-27-21	ALL
	36		W0222	132	24		29-11-12	ALL
	37		W0222	068	24		24-28-11	ALL
	38		W0222	069	24		24-51-23	ALL
	39		W0222	070	24		24-51-23	ALL
	40		W0222	183	20		24-51-72	050-099, 162-164, 276
	40	UNUSED						150-154, 275
	40		W0222	183	20		SPARE	155-157, 165-199, 277-299
	41		W0222	077	22		29-32-11	ALL
	42		W0222	080	24		24-51-31	ALL
	43		W0222	081	20		24-22-22	ALL
	44		W0222	082	24		24-51-31	ALL
	45		W0222	083	20		24-22-22	ALL
	46		W0222	084	24		29-11-31	ALL
	47		W0222	085	24		29-11-31	ALL
	48		W0222	086	24		29-11-31	ALL
	49		W0222	090	24		24-51-52	ALL
	50		W0222	114	24		24-51-71	ALL
	51		W0222	127	24		24-27-21	ALL
	52		W0222	128	24		24-27-21	ALL
	53		W0222	171	24		31-31-26	ALL
	54		W0222	172	24		31-31-26	ALL
	55	UNUSED						ALL
	DED		W0222	084Z			29-11-31	ALL
	DED		W0222	085Z			29-11-31	ALL
	DED		W0222	086Z			29-11-31	ALL
	DED		W0222	172Z			31-31-26	ALL
D04013J		AE0322/ /		RCPT-E2-5 COAX,VHF R				ALL
	= A1		W0253	01CX			23-12-21	ALL
	= C1		W0253	01CO			23-12-21	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04000

Page 13

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04013P		AE0322/ /		PLUG-E2-5 COAX,VHF-R				ALL
	= A1		W1075	01CX			23-12-21	ALL
	= C1		W1075	01CO			23-12-21	ALL
D04016P		AV1801/ /		PLUG-APU FIREWALL				050-099, 150-155, 162-199, 275-278
	A	UNUSED						050-099, 150-155, 162-199, 275-278
	B	UNUSED						050-099, 150-155, 162-199, 275-278
	C	UNUSED						050-099, 150-155, 162-199, 275-278
	D	UNUSED						050-099, 150-155, 162-199, 275-278
D04017J		AE0322/ /		RCPT-COAX,VHF-C				ALL
	= A1		W0257	01CX			23-12-31	ALL
	= C1		W0257	01CO			23-12-31	ALL
D04017P		AE0322/ /		PLUG-COAX,E2-5,VHF-C				ALL
	= A1		W1077	01CX			23-12-31	ALL
	= C1		W1077	01CO			23-12-31	ALL
D04018J		AV1801/ /		RCPT-APU FWD				ALL
	1		W0242	030	18		33-31-31	ALL
	2		W0242	301B	18		24-21-41	ALL
	3		W0242	301R	18		24-21-41	ALL
	4		W0242	301Y	18		24-21-41	ALL
	5		W0242	206B	20		24-21-41	ALL
	6		W0242	206R	20		24-21-41	ALL
	7		W0242	206Z			24-21-41	ALL
	8		W0242	404B	20		24-21-41	ALL
	9		W0242	404G	20		24-21-41	ALL
	10		W0242	404R	20		24-21-41	ALL
	11		W0242	404Y	20		24-21-41	ALL
	12		W0242	051	20		SPARE	050-099
	12	UNUSED						150-199, 275-299
	13		W0242	052	20		SPARE	ALL
	14		W0242	802	20		SPARE	ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D04000

Page 14

Aug 15/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04018J		AV1801/ /		RCPT-APU FWD (continued)				ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
D04018P		AV1801/ /		PLUG-APU FIREWALL				ALL
	1		W0270	001	18		33-31-31	ALL
	2		W0270	301B	18		24-21-41	ALL
	3		W0270	301R	18		24-21-41	ALL
	4		W0270	301Y	18		24-21-41	ALL
	5		W0270	201B	20		24-21-41	ALL
	6		W0270	201R	20		24-21-41	ALL
	7		W0270	201Z			24-21-41	ALL
	8		W0270	401B	18		24-21-41	ALL
	9		W0270	401G	18		24-21-41	ALL
	10		W0270	401R	18		24-21-41	ALL
	11		W0270	401Y	18		24-21-41	ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D04000

Page 15

Aug 15/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04018P		AV1801 / /		PLUG-APU FIREWALL (continued)				ALL
	30	UNUSED						ALL
D04019J		1317/131/L067		RCPT-COAX,VHF-C				050-099
D04019J		1197+98/131/L067		RCPT-COAX,VHF-C				150-199, 275-299
	= A1		W0257	01CX			23-12-31	ALL
	= C1		W0257	01CO			23-12-31	ALL
D04019P		1317/131/L067		PLUG-COAX,VHF-C				050-099
D04019P		1197+98/131/L067		PLUG-COAX,VHF-C				150-199, 275-299
	= A1		W0259	01CX			23-12-31	ALL
	= C1		W0259	01CO			23-12-31	ALL
D04020J		AV1801 / /		RCPT-APU FIREWALL DISC				ALL
	1		W1296	001R	20		26-15-11	ALL
	2		W1296	003R	20		26-15-11	ALL
	3		W1296	002R	20		26-15-11	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9		W1296	010R	20		SPARE	ALL
	10		W1296	011R	20		SPARE	ALL
D04020P		AV1801 / /		PLUG-APU FIREWALL				ALL
	1	UNUSED						ALL
	2		W0260	452R	16		26-15-11	ALL
	3		W0260	455R	16		26-15-11	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
D04022J		AV1801 / /		RCPT-				ALL
	1		W1298	003R	20		26-15-11	ALL
	2		W1298	001R	20		26-15-11	ALL
	3		W1298	002R	20		26-15-11	ALL

HOOKUP LIST
D280T132

91-21-51
Section D04000
Page 16
Aug 15/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04022J		AV1801 / /		RCPT- (continued)				ALL
	4		W1298	004R	20		SPARE	ALL
	5		W1298	201B	20		23-41-11	ALL
	6		W1298	201R	20		23-41-11	ALL
	7		W1298	201Z			23-41-11	ALL
D04022P		AV1801 / /		PLUG-APU FIREWALL				ALL
	1		W0250	452R	16		26-15-11	ALL
	2	UNUSED						ALL
	3		W0250	455R	16		26-15-11	ALL
	4	UNUSED						ALL
	5		W0250	201B	18		23-41-11	ALL
	6		W0250	201R	18		23-41-11	ALL
	7		W0250	201Z			23-41-11	ALL
D04024J		AV1801 / /		RCPT-APU FWD				ALL
	1		W0242	010	20		49-14-11	ALL
	2		W0242	008	20		49-14-11	ALL
	3		W0242	009	20		49-14-11	ALL
	4		W0242	013	20		49-14-11	ALL
	5		W0242	002	20		49-14-11	ALL
	6		W0242	001	20		49-14-11	ALL
	7		W0242	005	20		49-14-11	ALL
	8		W0242	003	20		49-14-11	ALL
	9		W0242	039	20		49-14-11	ALL
	10		W0242	040	20		49-14-11	ALL
	11		W0242	211R	20		49-14-11	ALL
	12		W0242	211B	20		49-14-11	ALL
	13		W0242	041	20		49-14-11	ALL
	14	UNUSED						ALL
	15	UNUSED						050-099, 275-299
	15		W0242	016	20		49-94-11	150-199
	16		W0242	004	20		49-14-11	ALL
	17		W0242	014	20		49-14-11	ALL
	18	UNUSED						ALL
	19		W0242	011	20		49-14-11	ALL
	20		W0242	015	20		49-14-11	ALL
	21		W0242	302R	20		49-94-14	ALL
	22		W0242	302B	20		49-94-14	ALL
	23		W0242	302Y	20		49-94-14	ALL
	24	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D04000

Page 17

Aug 15/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04024J		AV1801 / /		RCPT-APU FWD (continued)				ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						050-099, 150-199
	29		W0242	050	20		SPARE	275-299
	30	UNUSED						050-099, 150-199
	30		W0242	801	20		SPARE	275-299
	CAP	Y	W0242	050	20		SPARE	150-199
	CAP	Y	W0242	801	20		SPARE	150-199
	DED		W0242	211Z			49-14-11	ALL
D04024P		AV1801 / /		PLUG-APU FWD				150-199, 275-299
	1	UNUSED						150-199, 275-299
	2	UNUSED						150-199, 275-299
	3	UNUSED						150-199, 275-299
	4	UNUSED						150-199, 275-299
	5	UNUSED						150-199, 275-299
	6	UNUSED						150-199, 275-299
	7	UNUSED						150-199, 275-299
	8	UNUSED						150-199, 275-299
	9	UNUSED						150-199, 275-299
	10	UNUSED						150-199, 275-299
	11	UNUSED						150-199, 275-299
	12	UNUSED						150-199, 275-299
	13	UNUSED						150-199, 275-299
	14	UNUSED						150-199, 275-299
	15	UNUSED						150-199, 275-299
	16	UNUSED						150-199, 275-299
	17	UNUSED						150-199, 275-299
	18	UNUSED						150-199, 275-299
	19	UNUSED						150-199, 275-299
	20	UNUSED						150-199, 275-299
	21	UNUSED						150-199, 275-299
	22	UNUSED						150-199, 275-299
	23	UNUSED						150-199, 275-299
	24	UNUSED						150-199, 275-299
	25	UNUSED						150-199, 275-299
	26	UNUSED						150-199, 275-299
	27	UNUSED						150-199, 275-299

HOOKUP LIST
D280T132

91-21-51
Section D04000
Page 18
Aug 15/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04024P		AV1801/ /		PLUG-APU FWD (continued)				150-199, 275-299
	28	UNUSED						150-199, 275-299
	29	UNUSED						150-199, 275-299
	30	UNUSED						150-199, 275-299
D04026J		AE0204/ /		RCPT-P34				ALL
	1		W0026	033	18		24-22-41	ALL
	2		W0026	301B	18		24-21-41	ALL
	3		W0026	301R	18		24-21-41	ALL
	4		W0026	301Y	18		24-21-41	ALL
	5		W0026	079	20		24-22-22	ALL
	6		W0026	080	20		24-22-22	ALL
	7		W0026	121	16		30-71-25	050-099, 150-199
	7	UNUSED						275-299
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
D04026P		AE0204/ /		PLUG-P34				ALL
	1		W0240	033	18		24-22-41	ALL
	2		W0240	301B	18		24-21-41	ALL
	3		W0240	301R	18		24-21-41	ALL
	4		W0240	301Y	18		24-21-41	ALL
	5		W0240	059	20		24-22-22	ALL
	6		W0240	060	20		24-22-22	ALL
	7		W0240	014	16		30-71-25	050-099, 150-199
	7	UNUSED						275-299
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
D04028J		AE0204/ /		RCPT-P34				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W0026	106	24		24-27-41	050-099, 162-199, 275-299
	4	UNUSED						150-157
	5		W0026	007	22		49-61-11	ALL
	6		W0026	008	22		49-61-11	ALL
	7		W0026	051	22		49-61-11	ALL
	8		W0026	117	24		38-15-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04000

Page 19

Aug 15/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04028J		AE0204/ /		RCPT-P34 (continued)				ALL
	9	UNUSED						050-099
	9		W0026	091	20		24-32-41	150-199, 275-299
	10		W0026	096	24		49-71-11	ALL
	11		W0026	107	24		28-25-21	ALL
	12		W0026	011	24		24-27-11	ALL
	13		W0026	010	24		24-41-12	ALL
	14		W0026	005	22		49-61-11	ALL
	15		W0026	006	22		49-61-11	ALL
	16		W0026	403B	24		24-23-12	ALL
	17		W0026	403G	24		24-23-12	ALL
	18		W0026	403R	24		24-23-12	ALL
	19		W0026	403Y	24		24-23-12	ALL
	20		W0026	404B	24		24-23-12	ALL
	21		W0026	404G	24		24-23-12	ALL
	22		W0026	404R	24		24-23-12	ALL
	23		W0026	404Y	24		24-23-12	ALL
	24		W0026	064	22		49-61-11	ALL
	25		W0026	109	24		24-51-71	ALL
	26		W0026	110	24		24-51-71	ALL
	27		W0026	075	24		24-22-12	ALL
	28		W0026	076	20		24-22-12	ALL
	29		W0026	077	20		24-22-12	ALL
	30		W0026	086	24		24-41-11	ALL
	31		W0026	087	24		24-41-11	ALL
	32		W0026	088	24		24-41-11	ALL
	33		W0026	089	24		24-41-11	ALL
	34	DK	W0026	026	18		33-31-31	ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	FM	W0026	131	16		30-71-25	050-099, 150-199 275-299
	40	UNUSED						ALL
	41	UNUSED						ALL
	42		W0026	113	24		24-34-11	ALL
	43		W0026	112	24		49-73-11	ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D04000

Page 20

Aug 15/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04028J		AE0204/ /		RCPT-P34 (continued)				ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						050-099, 162-199, 275-299
	52		W0026	106	24		24-27-41	150-157
	53		W0026	207B	24		24-34-11	ALL
	54		W0026	207R	24		24-34-11	ALL
	55	UNUSED						ALL
D04028P		AE0204/ /		PLUG-P34				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W0248	047	24		24-27-41	050-099, 162-199, 275-299
	4	UNUSED						150-157
	5		W0248	005	22		49-61-11	ALL
	6		W0248	006	22		49-61-11	ALL
	7		W0248	007	22		49-61-11	ALL
	8		W0248	070	24		38-15-11	ALL
	9	UNUSED						050-099, 150-199
	9		W0248	054	20		24-32-41	275-299
	10		W0248	057	24		49-71-11	ALL
	11		W0248	060	24		28-25-21	ALL
	12		W0248	010	24		24-27-11	ALL
	13		W0248	011	24		24-41-12	ALL
	14		W0248	012	22		49-61-11	ALL
	15		W0248	013	22		49-61-11	ALL
	16		W0248	401B	24		24-23-12	ALL
	17		W0248	401G	24		24-23-12	ALL
	18		W0248	401R	24		24-23-12	ALL
	19		W0248	401Y	24		24-23-12	ALL
	20		W0248	402B	24		24-23-12	ALL
	21		W0248	402G	24		24-23-12	ALL
	22		W0248	402R	24		24-23-12	ALL
	23		W0248	402Y	24		24-23-12	ALL
	24		W0248	031	22		49-61-11	ALL
	25		W0248	001	24		24-51-71	ALL
	26		W0248	002	24		24-51-71	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04000

Page 21

Aug 15/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04028P		AE0204/ /		PLUG-P34 (continued)				ALL
	27		W0248	035	24		24-22-12	ALL
	28		W0248	036	20		24-22-12	ALL
	29		W0248	039	20		24-22-12	ALL
	30		W0248	037	24		24-41-11	ALL
	31		W0248	017	24		24-41-11	ALL
	32		W0248	038	24		24-41-11	ALL
	33		W0248	018	24		24-41-11	ALL
	34	DL	W0248	021	18		33-31-31	ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	FL	W0248	110	16		30-71-25	050-099, 150-199 275-299
	40	UNUSED						ALL
	41	UNUSED						ALL
	42		W0248	066	24		24-34-11	ALL
	43		W0248	063	24		49-73-11	ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						050-099, 162-199, 275-299
	52		W0248	059	24		24-27-41	150-157
	53		W0248	207B	24		24-34-11	ALL
	54		W0248	207R	24		24-34-11	ALL
	55	UNUSED						ALL
	DED		W0248	039Z			24-22-12	ALL
D04030J		AV1801/ /		RCPT-APU FWD				ALL
	1		W0242	201R	20		49-14-11	ALL
	2		W0242	201B	20		49-14-11	ALL
	3		W0242	202R	20		49-14-11	ALL
	4		W0242	202B	20		49-14-11	ALL
	5		W0242	213B	20		49-14-11	ALL
	6		W0242	213R	20		49-14-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04000

Page 22

Aug 15/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04030J		AV1801 / /		RCPT-APU FWD (continued)				ALL
	7		W0242	203R	20		49-14-11	ALL
	8		W0242	203B	20		49-14-11	ALL
	9	4B	W0242	452G	20		49-14-11	ALL
	10	4B	W0242	454G	20		49-14-11	ALL
	11	4B	W0242	453G	20		49-14-11	ALL
	12		W0242	205R	20		49-14-11	ALL
	13		W0242	204R	20		49-14-11	ALL
	14		W0242	214B	20		49-14-11	ALL
	15		W0242	214R	20		49-14-11	ALL
	16		W0242	209R	20		49-14-11	ALL
	17		W0242	209B	20		49-14-11	ALL
	18		W0242	207R	20		49-14-11	ALL
	19		W0242	053	18		SPARE	ALL
	20		W0242	803	20		SPARE	ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	4D	W0242	452W	20		49-14-11	ALL
	24	4D	W0242	454W	20		49-14-11	ALL
	25	4D	W0242	453W	20		49-14-11	ALL
	26		W0242	205B	20		49-14-11	ALL
	27		W0242	204B	20		49-14-11	ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30		W0242	210Z			49-14-11	ALL
	31		W0242	209Z			49-14-11	ALL
	32		W0242	208B	20		49-14-11	ALL
	33		W0242	FRC			49-14-11	ALL
	34		W0242	208R	20		49-14-11	ALL
	35		W0242	207B	20		49-14-11	ALL
	36	UNUSED						ALL
	37		W0242	210R	20		49-14-11	ALL
	38		W0242	210B	20		49-14-11	ALL
	39	UNUSED						ALL
	40		W0242	452Z			49-14-11	ALL
	41		W0242	454Z			49-14-11	ALL
	42		W0242	453Z			49-14-11	ALL
DED			W0242	201Z			49-14-11	ALL
DED			W0242	203Z			49-14-11	ALL
DED			W0242	204Z			49-14-11	ALL
DED			W0242	205Z			49-14-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04000

Page 23

Aug 15/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04030J		AV1801/ /		RCPT-APU FWD (continued)				ALL
			W0242	202Z			49-14-11	ALL
			W0242	207Z			49-14-11	ALL
			W0242	208Z			49-14-11	ALL
			W0242	213Z			49-14-11	ALL
			W0242	214Z			49-14-11	ALL
			W0242	FRC			49-14-11	ALL
D04034J		AE0320/ /		RCPT-E2-4				ALL
	1		W0222	201B	24		24-11-21	ALL
	2		W0222	201R	24		24-11-21	ALL
	3		W0222	201Z			24-11-21	ALL
	4		W0222	027	22		25-31-11	ALL
	5		W0222	202B	20		24-21-21	ALL
	6		W0222	202R	20		24-21-21	ALL
	7		W0222	202Z			24-21-21	ALL
	8		W0222	401B	24		24-21-21	ALL
	9		W0222	401R	24		24-21-21	ALL
	10		W0222	401Y	24		24-21-21	ALL
	11		W0222	401G	24		24-21-21	ALL
	12		W0222	203B	24		24-11-21	ALL
	13		W0222	203R	24		24-11-21	ALL
	14		W0222	204B	24		24-11-21	ALL
	15		W0222	204R	24		24-11-21	ALL
	16		W0222	003	24		24-11-21	ALL
	17		W0222	031	24		24-11-21	ALL
	18		W0222	028	24		24-51-71	ALL
	19		W0222	113	24		24-22-21	ALL
	20		W0222	030	24		24-11-21	ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23		W0222	135	24		24-11-21	ALL
	24		W0222	038	24		24-22-21	ALL
	25		W0222	009	22		25-31-11	ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28		W0222	089	24		24-51-31	ALL
	29		W0222	039	20		24-22-21	ALL
	30		W0222	040	20		24-22-21	ALL
	31		W0222	041	24		24-22-21	ALL
	32		W0222	042	24		24-22-21	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04000

Page 24

Aug 15/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04034J		AE0320/ /		RCPT-E2-4 (continued)				ALL
	33		W0222	043	20		24-22-21	ALL
	34		W0222	044	20		24-22-21	ALL
	35		W0222	045	20		24-22-21	ALL
	36		W0222	046	24		24-22-22	ALL
	37		W0222	047	24		24-22-21	ALL
	38		W0222	049	24		24-11-21	ALL
	39		W0222	050	24		24-22-22	ALL
	40		W0222	051	20		24-22-22	ALL
	41		W0222	052	20		24-22-22	ALL
	42		W0222	053	20		24-22-22	ALL
	43		W0222	054	20		24-22-22	ALL
	44		W0222	055	24		24-22-22	ALL
	45		W0222	056	24		24-22-22	ALL
	46		W0222	080	24		24-51-31	ALL
	47		W0222	081	20		24-22-22	ALL
	48		W0222	082	24		24-51-31	ALL
	49		W0222	083	20		24-22-22	ALL
	50		W0222	084	24		29-11-31	ALL
	51		W0222	085	24		29-11-31	ALL
	52		W0222	086	24		29-11-31	ALL
	53		W0222	090	24		24-51-52	ALL
	54	UNUSED						ALL
	55		W0222	112	24		24-11-21	ALL
	DED		W0222	084Z			29-11-31	ALL
	DED		W0222	085Z			29-11-31	ALL
	DED		W0222	086Z			29-11-31	ALL
D04034P		AE0320/ /		PLUG-				ALL
	1		W0016	206B	24		24-11-21	ALL
	2		W0016	206R	24		24-11-21	ALL
	3		W0016	206Z			24-11-21	ALL
	4		W0016	055	22		25-31-11	ALL
	5		W0016	209B	22		24-21-21	ALL
	6		W0016	209R	22		24-21-21	ALL
	7		W0016	209Z			24-21-21	ALL
	8		W0016	401B	24		24-21-21	ALL
	9		W0016	401R	24		24-21-21	ALL
	10		W0016	401Y	24		24-21-21	ALL
	11		W0016	401G	24		24-21-21	ALL
	12		W0016	207B	24		24-11-21	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04000

Page 25

Aug 15/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04034P		AE0320 / /		PLUG- (continued)				ALL
	13		W0016	207R	24		24-11-21	ALL
	14		W0016	208B	24		24-11-21	ALL
	15		W0016	208R	24		24-11-21	ALL
	16		W0016	030	24		24-11-21	ALL
	17		W0016	026	24		24-11-21	ALL
	18		W0016	166	24		24-51-71	ALL
	19		W0016	037	24		24-22-21	ALL
	20		W0016	174	24		24-11-21	ALL
	21	UNUSED						ALL
	22	UNUSED						050-099, 275-299
	22		W0016	098	24		24-11-21	150-199
	23		W0016	035	24		24-11-21	ALL
	24		W0016	043	24		24-22-21	ALL
	25		W0016	056	22		25-31-11	ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28		W0016	141	24		24-51-31	ALL
	29		W0016	040	20		24-22-21	ALL
	30		W0016	103	22		24-22-21	ALL
	31		W0016	042	24		24-22-21	ALL
	32		W0016	039	24		24-22-21	ALL
	33		W0016	106	22		24-22-21	ALL
	34		W0016	105	22		24-22-21	ALL
	35		W0016	041	20		24-22-21	ALL
	36		W0016	045	24		24-22-22	ALL
	37		W0016	044	24		24-22-21	ALL
	38		W0016	031	24		24-11-21	ALL
	39		W0016	052	24		24-22-22	ALL
	40		W0016	053	20		24-22-22	ALL
	41		W0016	054	20		24-22-22	ALL
	42		W0016	110	22		24-22-22	ALL
	43		W0016	111	22		24-22-22	ALL
	44		W0016	050	24		24-22-22	ALL
	45		W0016	051	24		24-22-22	ALL
	46		W0016	126	24		24-51-31	ALL
	47		W0016	127	20		24-22-22	ALL
	48		W0016	128	24		24-51-31	ALL
	49		W0016	129	20		24-22-22	ALL
	50		W0016	130	24		29-11-31	ALL
	51		W0016	131	24		29-11-31	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04000

Page 26

Aug 15/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04034P		AE0320/ /		PLUG- (continued)				ALL
	52		W0016	132	24		29-11-31	ALL
	53		W0016	165	24		24-51-52	050-099, 150-199
	53		W0016	163	24		24-51-52	275-299
	54	UNUSED						ALL
	55		W0016	169	24		24-11-21	ALL
	DED		W0016	130Z			29-11-31	ALL
	DED		W0016	131Z			29-11-31	ALL
	DED		W0016	132Z			29-11-31	ALL
D04036J		AE0320/ /		RCPT-E2-4				ALL
	1		W0222	301B	18		24-21-21	ALL
	2		W0222	301R	18		24-21-21	ALL
	3		W0222	301Y	18		24-21-21	ALL
	4		W0222	001	18		24-11-21	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W0222	048	18		24-22-21	ALL
	8		W0222	057	18		24-22-22	ALL
	9		W0222	302B	18		24-21-21	ALL
	10		W0222	302R	18		24-21-21	ALL
	11		W0222	302Y	18		24-21-21	ALL
	12		W0222	062	24		24-51-51	ALL
	13		W0222	063	24		24-51-23	ALL
	14		W0222	171	24		31-31-26	ALL
	15		W0222	172	24		31-31-26	ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						050-099, 150-199
	18		W0222	019	20		25-31-11	275-276
	18		W0222	019	20		SPARE	277-299
	19	UNUSED						ALL
	DED		W0222	001Z			24-11-21	ALL
	DED		W0222	172Z			31-31-26	ALL
D04036P		AE0320/ /		PLUG-				ALL
	1		W0016	301B	18		24-21-21	ALL
	2		W0016	301R	18		24-21-21	ALL
	3		W0016	301Y	18		24-21-21	ALL
	4		W0016	029	18		24-11-21	ALL
	5	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D04000

Page 27

Aug 15/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04036P		AE0320/ /		PLUG- (continued)				ALL
	6	UNUSED						ALL
	7		W0016	107	18		24-22-21	ALL
	8		W0016	112	18		24-22-22	ALL
	9		W0016	305B	18		24-21-21	ALL
	10		W0016	305R	18		24-21-21	ALL
	11		W0016	305Y	18		24-21-21	ALL
	12		W0016	138	24		24-51-51	ALL
	13		W0016	134	24		24-51-23	ALL
	14		W0016	506	24		31-31-26	ALL
	15		W0016	507	24		31-31-26	ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						050-099, 150-199, 277-299
	18	DL	W0016	167	20		25-31-11	275-276
	19	UNUSED						ALL
	DED		W0016	029Z			24-11-21	ALL
	DED		W0016	134Z			24-51-23	ALL
	DED		W0016	305Z			24-21-21	ALL
	DED		W0016	507Z			31-31-26	ALL
D04038J		AE0312/ /		RCPT-P32				ALL
	1		W0024	024	24		24-27-11	ALL
	2		W0024	041	24		24-41-12	ALL
	3		W0024	403B	24		24-23-12	ALL
	4		W0024	403G	24		24-23-12	ALL
	5		W0024	403R	24		24-23-12	ALL
	6		W0024	403Y	24		24-23-12	ALL
	7		W0024	027	24		24-27-11	ALL
	8		W0024	035	24		24-27-21	ALL
	9		W0024	042	24		24-41-12	ALL
	10		W0024	099	24		24-22-12	ALL
	11		W0024	098	20		24-22-12	ALL
	12		W0024	100	24		24-22-12	ALL
	13		W0024	103	24		24-22-12	ALL
	14		W0024	102	20		24-22-12	ALL
	15		W0024	104	24		24-51-31	ALL
	16		W0024	105	24		24-51-31	ALL
	17		W0024	144	24		24-51-71	ALL
	18		W0024	143	24		24-51-71	ALL
	19	DK	W0024	180	18		30-71-25	050-099, 150-199

HOOKUP LIST
D280T132

91-21-51
Section D04000
Page 28
Aug 15/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04038J		AE0312/ /		RCPT-P32 (continued)				ALL
	19	UNUSED						275-299
	20	UNUSED						050-099, 155-199, 275-299
	20		W0024	078	20		25-31-11	150-154
	21		W0024	078	20		25-31-11	050-099
	21	UNUSED						150-199, 275-299
	22		W0024	156	20		25-31-12	050-099, 150-154
	22		W0024	079	20		25-31-11	155-199, 277-278
	22	UNUSED						275-276
	22	DK	W0024	079	18		25-31-11	280-299
	23	UNUSED						ALL
	24	UNUSED						ALL
D04038P		AE0312/ /		PLUG-P32				ALL
	1		W0248	010	24		24-27-11	ALL
	2		W0248	011	24		24-41-12	ALL
	3		W0248	403B	24		24-23-12	ALL
	4		W0248	403G	24		24-23-12	ALL
	5		W0248	403R	24		24-23-12	ALL
	6		W0248	403Y	24		24-23-12	ALL
	7		W0248	015	24		24-27-11	ALL
	8		W0248	016	24		24-27-21	ALL
	9		W0248	026	24		24-41-12	ALL
	10		W0248	035	24		24-22-12	ALL
	11		W0248	036	20		24-22-12	ALL
	12		W0248	040	24		24-22-12	ALL
	13		W0248	041	24		24-22-12	ALL
	14		W0248	042	24		24-22-12	ALL
	15		W0248	043	24		24-51-31	ALL
	16		W0248	044	24		24-51-31	ALL
	17		W0248	062	24		24-51-71	ALL
	18		W0248	061	24		24-51-71	ALL
	19	FL	W0248	110	16		30-71-25	050-099, 150-199
	19	UNUSED						275-299
	20	UNUSED						050-099, 275-278
	20	DL	W0248	075	18		25-31-12	150-154
	20	DL	W0248	075	18		SPARE	155-199, 280-299
	21		W0248	079	20		25-31-11	050-099
	21	UNUSED						150-199, 275-299
	22	DL	W0248	077	18		25-31-12	050-099, 150-154
	22		W0248	077	20		25-31-11	155-157, 165-199, 277-278

HOOKUP LIST

D280T132

91-21-51

Section D04000

Page 29

Aug 15/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04038P		AE0312/ /		PLUG-P32 (continued)				ALL
	22	DL	W0248	077	18		25-31-11	162-164, 280-299
	22	UNUSED						275-276
	23	UNUSED						ALL
	24	UNUSED						ALL
D04039J		132/189/L 8		RCPT-COAX,L ILS G/S FWD PRESS BLKHD				ALL
	= A1		W0267	01CX			34-31-11	ALL
	= C1		W0267	01CO			34-31-11	ALL
D04039P		132/189/L 8		RCPT- COAX,D G/S,ILS LFWD PRESS BLKHD				ALL
	= A1		W0265	01CX			34-31-11	ALL
	= C1		W0265	01CO			34-31-11	ALL
D04040J		AC1402/ /		RCPT-E6				ALL
	1	DK	W0242	034	18		33-31-31	ALL
	2	DK	W0242	301B	18		24-21-41	ALL
	3	DK	W0242	301R	18		24-21-41	ALL
	4	DK	W0242	301Y	18		24-21-41	ALL
	5		W0242	206B	20		24-21-41	ALL
	6		W0242	206R	20		24-21-41	ALL
	7		W0242	206Z			24-21-41	ALL
	8		W0242	404B	20		24-21-41	ALL
	9		W0242	404G	20		24-21-41	ALL
	10		W0242	404R	20		24-21-41	ALL
	11		W0242	404Y	20		24-21-41	ALL
	12	UNUSED						ALL
	13	UNUSED						050-099
	13		W0242	050	20		SPARE	150-199, 275-299
	14		W0242	051	20		SPARE	050-099
	14	UNUSED						150-199, 275-299
	15		W0242	052	20		SPARE	ALL
	16	DK	W0242	053	18		SPARE	ALL
	17	UNUSED						050-099
	17		W0242	801	20		SPARE	150-199, 275-299
	18		W0242	802	20		SPARE	ALL
	19		W0242	803	20		SPARE	ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D04000

Page 30

Aug 15/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04040J		AC1402/ /		RCPT-E6 (continued)				ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
D04040P		AC1402/ /		PLUG-E6				ALL
	1	DL	W0020	013	18		33-31-31	ALL
	2	DL	W0020	301B	18		24-21-41	ALL
	3	DL	W0020	301R	18		24-21-41	ALL
	4	DL	W0020	301Y	18		24-21-41	ALL
	5		W0020	206B	20		24-21-41	ALL
	6		W0020	206R	20		24-21-41	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04000

Page 31

Aug 15/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04040P		AC1402/ /		PLUG-E6 (continued)				ALL
	7		W0020	206Z			24-21-41	ALL
	8		W0020	404B	24		24-21-41	ALL
	9		W0020	404G	24		24-21-41	ALL
	10		W0020	404R	24		24-21-41	ALL
	11		W0020	404Y	24		24-21-41	ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D04000

Page 32

Aug 15/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04040P		AC1402/ /		PLUG-E6 (continued)				ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
D04042J		AE0203/ /		RCPT-P33				ALL
	1		W0146	001	24		24-31-11	ALL
	2		W0146	002	24		24-31-11	ALL
	3		W0146	011	24		28-22-11	ALL
	4		W0146	004	24		28-25-11	ALL
	5		W0146	18E	24		73-21-14	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13		W0146	18EZ			73-21-14	ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18		W0146	062	22		28-42-12	050-099, 155-199, 276-299
	18	UNUSED						150-154, 275
	19	UNUSED						ALL
	20		W0146	061	22		30-34-11	ALL
	21		W0146	065	20		78-34-11	ALL
	22		W0146	064	20		78-34-21	ALL
	23	UNUSED						050-099, 155-199, 276-299
	23		W0146	16A	22		28-42-12	150-154, 275
	24	UNUSED						ALL
	DED		W0146	064Z			78-34-21	ALL
	DED		W0146	065Z			78-34-11	ALL
	DED		W0146	062Z			28-42-12	050-099, 155-199, 276-299

HOOKUP LIST

D280T132

91-21-51

Section D04000

Page 33

Feb 06/2009



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04042J		AE0203/ /		RCPT-P33 (continued)				ALL
	DED		W0146	16AZ			28-42-12	150-154, 275
D04042P		AE0203/ /		PLUG-P33				ALL
	1		W0264	037	24		24-31-11	ALL
	2		W0264	038	24		24-31-11	ALL
	3		W0264	058	24		28-22-11	ALL
	4		W0264	059	24		28-25-11	ALL
	5		W0264	017	24		73-21-14	ALL
	6	UNUSED						ALL
	7	DK	W0264	041	18		SPARE	050-099
	7	UNUSED						150-199, 275-299
	8	DK	W0264	042	18		SPARE	050-099
	8	UNUSED						150-199, 275-299
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13		W0264	017Z			73-21-14	ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18		W0264	006	22		28-42-12	050-099, 155-199, 276-299
	18	UNUSED						150-154, 275
	19	UNUSED						ALL
	20		W0264	013	20		30-34-11	ALL
	21	DK	W0264	086	18		78-34-11	ALL
	22	DK	W0264	177	18		78-34-21	ALL
	23	UNUSED						050-099, 155-199, 276-299
	23		W0264	16A	22		28-42-12	150-154, 275
	24	UNUSED						ALL
	DED		W0264	006Z			28-42-12	050-099, 155-199, 276-299
	DED		W0264	16AZ			28-42-12	150-154, 275
D04043J		132/189/L 8		RCPT-FWD PRESS BLKHDL ILS LOC				ALL
	= A1		W0263	01CX			34-31-11	ALL
	= C1		W0263	01CO			34-31-11	ALL
D04043P		132/189/L 8		PLUG-COAX,L ILS LOC,FWD PRESS BLKHD				ALL
	= A1		W0261	01CX			34-31-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04000

Page 34

Feb 06/2009



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04043P		132/189/L 8		PLUG-COAX,L ILS LOC,FWD PRESS BLKHD (continued)				ALL
	=C1		W0261	01CO			34-31-11	ALL
D04044J		AC1402/ /		RCPT-E6				ALL
	1		W0248	202B	20		24-21-41	ALL
	2		W0248	202R	20		24-21-41	ALL
	3		W0248	202Z			24-21-41	ALL
	4		W0248	301B	18		24-21-41	ALL
	5		W0248	301R	18		24-21-41	ALL
	6		W0248	301Y	18		24-21-41	ALL
	7		W0248	404B	24		24-21-41	ALL
	8		W0248	404G	24		24-21-41	ALL
	9		W0248	404R	24		24-21-41	ALL
	10		W0248	404Y	24		24-21-41	ALL
	11		W0248	021	18		33-31-31	ALL
	12	UNUSED						050-099, 162-199, 275-299
	12		W0248	059	24		24-27-41	150-157
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
D04044P		AC1402/ /		PLUG-E6				ALL
	1		W0020	206B	20		24-21-41	ALL
	2		W0020	206R	20		24-21-41	ALL
	3		W0020	206Z			24-21-41	ALL
	4		W0020	301B	18		24-21-41	ALL
	5		W0020	301R	18		24-21-41	ALL
	6		W0020	301Y	18		24-21-41	ALL
	7		W0020	404B	24		24-21-41	ALL
	8		W0020	404G	24		24-21-41	ALL
	9		W0020	404R	24		24-21-41	ALL
	10		W0020	404Y	24		24-21-41	ALL
	11		W0020	013	18		33-31-31	ALL
	12	UNUSED						050-099, 162-199, 275-299
	12		W0020	070	24		24-27-41	150-157
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D04000

Page 35

Feb 06/2009



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04045J		SHELF/E01/03		RCPT-COAX,E1-3,L ILS LOC				ALL
	= A1		W1051	01CX			34-31-11	ALL
	= C1		W1051	01CO			34-31-11	ALL
D04045P		SHELF/E01/03		PLUG-E1-3L ILS LOC COAX				ALL
	= A1		W0263	01CX			34-31-11	ALL
	= C1		W0263	01CO			34-31-11	ALL
D04046J		AC1402/ /		RCPT-E6				ALL
	1		W0248	001	24		24-51-71	ALL
	2		W0248	002	24		24-51-71	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W0248	032	22		49-61-11	ALL
	6		W0248	006	22		49-61-11	ALL
	7		W0248	007	22		49-61-11	ALL
	8		W0248	033	22		49-61-11	ALL
	9	UNUSED						050-099, 150-199
	9		W0248	054	20		24-32-41	275-299
	10		W0248	057	24		49-71-11	ALL
	11	UNUSED						ALL
	12		W0248	020	24		24-22-41	ALL
	13		W0248	022	22		49-61-11	ALL
	14		W0248	023	22		49-61-11	ALL
	15		W0248	203B	20		21-61-51	ALL
	16		W0248	203R	20		21-61-51	ALL
	17	UNUSED						ALL
	18		W0248	070	24		38-15-11	ALL
	19		W0248	034	24		SPARE	ALL
	20		W0248	027	24		29-11-32	ALL
	21		W0248	050	20		SPARE	ALL
	22		W0248	051	20		SPARE	ALL
	23		W0248	066	24		24-34-11	ALL
	24		W0248	065	20		SPARE	ALL
	25		W0248	048	22		49-61-11	050-099, 162-199, 275-299
	25	UNUSED						150-157
	26		W0248	063	24		49-73-11	ALL
	27	UNUSED						ALL
	28		W0248	207B	24		24-34-11	ALL
	29		W0248	207R	24		24-34-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04000

Page 36

Feb 06/2009



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04046J		AC1402/ /		RCPT-E6 (continued)				ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
D04046P		AC1402/ /		PLUG-E6				ALL
	1		W0020	014	24		24-51-71	ALL
	2		W0020	015	24		24-51-71	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W0020	023	22		49-61-11	ALL
	6		W0020	024	22		49-61-11	ALL
	7		W0020	025	22		49-61-11	ALL
	8		W0020	026	22		49-61-11	ALL
	9	UNUSED						050-099, 150-199
	9		W0020	007	20		24-32-41	275-299
	10		W0020	068	24		49-71-11	ALL
	11	UNUSED						ALL
	12		W0020	027	24		24-22-41	ALL
	13		W0020	028	22		49-61-11	ALL
	14		W0020	029	22		49-61-11	ALL
	15		W0020	208B	22		21-61-51	ALL
	16		W0020	208R	22		21-61-51	ALL
	17	UNUSED						ALL
	18		W0020	086	24		38-15-11	ALL
	19	UNUSED						ALL
	20		W0020	039	24		29-11-32	ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23		W0020	073	24		24-34-11	ALL
	24	UNUSED						ALL
	25		W0020	074	22		49-61-11	050-099, 162-199, 275-299
	25	UNUSED						150-157
	26		W0020	072	24		49-73-11	ALL
	27	UNUSED						ALL
	28		W0020	217B	24		24-34-11	ALL
	29		W0020	217R	24		24-34-11	ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
D04047J		SHELF/E01/03		RCPT-COAX,E1-3 ,L ILS G/S				ALL
	= A1		W1053	01CX			34-31-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04000

Page 37

Feb 06/2009



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04047J		SHELF/E01/03		RCPT-COAX,E1-3 ,L ILS G/S (continued)				ALL
	= C1		W1053	01CO			34-31-11	ALL
D04047P		SHELF/E01/03		PLUG-COAX,L ILS G/S,E1-3				ALL
	= A1		W0267	01CX			34-31-11	ALL
	= C1		W0267	01CO			34-31-11	ALL
D04048J		AE0307/ /		RCPT-E2-4				ALL
	1		W0240	001	24		24-22-41	ALL
	2		W0240	002	24		24-22-41	ALL
	3		W0240	004	24		24-51-71	ALL
	4		W0240	073	24		24-41-11	ALL
	5	UNUSED						ALL
	6		W0240	056	24		24-51-71	ALL
	7	UNUSED						ALL
	8		W0240	006	20		24-22-41	ALL
	9		W0240	007	20		24-22-41	ALL
	10		W0240	008	20		24-22-41	ALL
	11		W0240	009	24		24-41-11	ALL
	12		W0240	010	20		24-41-11	ALL
	13		W0240	011	20		24-41-11	ALL
	14		W0240	012	20		SPARE	ALL
	15		W0240	013	20		SPARE	ALL
	16		W0240	034	24		24-22-41	ALL
	17		W0240	035	24		24-41-11	ALL
	18		W0240	036	24		24-41-11	ALL
	19		W0240	037	24		24-41-11	ALL
	20		W0240	038	24		24-41-11	ALL
	21		W0240	039	24		24-41-11	ALL
	22		W0240	040	24		24-51-71	ALL
	23		W0240	041	24		24-51-71	ALL
	24		W0240	042	24		24-27-21	ALL
	25		W0240	043	20		24-22-41	ALL
	26		W0240	044	20		24-22-41	ALL
	27		W0240	045	20		24-22-41	ALL
	28		W0240	046	20		24-41-11	ALL
	29		W0240	047	24		24-51-61	ALL
	30		W0240	048	24		24-51-61	ALL
	31		W0240	049	24		24-51-51	ALL
	32		W0240	401B	24		24-23-11	ALL
	33		W0240	401G	24		24-23-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04000

Page 38

Feb 06/2009



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04048J		AE0307/ /		RCPT-E2-4 (continued)				ALL
	34		W0240	401R	24		24-23-11	ALL
	35		W0240	401Y	24		24-23-11	ALL
	36		W0240	402B	24		24-41-11	ALL
	37		W0240	402G	24		24-41-11	ALL
	38		W0240	402R	24		24-41-11	ALL
	39		W0240	402Y	24		24-41-11	ALL
	40		W0240	050	24		24-22-41	ALL
	41		W0240	403B	24		24-23-12	ALL
	42		W0240	403G	24		24-23-12	ALL
	43		W0240	403R	24		24-23-12	ALL
	44		W0240	403Y	24		24-23-12	ALL
	45		W0240	052	24		24-51-71	ALL
	46		W0240	053	24		24-51-71	ALL
	47	UNUSED						ALL
	48		W0240	059	20		24-22-22	ALL
	49		W0240	060	20		24-22-22	ALL
	50	UNUSED						ALL
	51		W0240	072	24		24-22-41	ALL
	52		W0240	058	24		24-41-11	ALL
	53		W0240	070	20		SPARE	ALL
	54		W0240	071	20		SPARE	ALL
	55		W0240	801	20		SPARE	ALL
	DED		W0240	010Z			24-41-11	ALL
	DED		W0240	011Z			24-41-11	ALL
D04048P		AE0307/ /		PLUG-E2-4				ALL
	1		W0018	008	24		24-22-41	ALL
	2		W0018	011	24		24-22-41	ALL
	3		W0018	071	24		24-51-71	ALL
	4		W0018	088	24		24-41-11	ALL
	5	UNUSED						ALL
	6		W0018	074	24		24-51-71	ALL
	7	UNUSED						ALL
	8		W0018	039	22		24-22-41	ALL
	9		W0018	040	22		24-22-41	ALL
	10		W0018	009	20		24-22-41	ALL
	11		W0018	047	24		24-41-11	ALL
	12		W0018	049	20		24-41-11	ALL
	13		W0018	062	20		24-41-11	ALL
	14	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D04000

Page 39

Feb 06/2009



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04048P		AE0307/ /		PLUG-E2-4 (continued)				ALL
	15	UNUSED						ALL
	16		W0018	013	24		24-22-41	ALL
	17		W0018	021	24		24-41-11	ALL
	18		W0018	020	24		24-41-11	ALL
	19		W0018	017	24		24-41-11	ALL
	20		W0018	016	24		24-41-11	ALL
	21		W0018	015	24		24-41-11	ALL
	22		W0018	031	24		24-51-71	ALL
	23		W0018	001	24		24-51-71	ALL
	24		W0018	023	24		24-27-21	ALL
	25		W0018	043	22		24-22-41	ALL
	26		W0018	042	22		24-22-41	ALL
	27		W0018	010	20		24-22-41	ALL
	28		W0018	052	22		24-41-11	ALL
	29		W0018	081	24		24-51-61	ALL
	30		W0018	082	24		24-51-61	ALL
	31		W0018	077	24		24-51-51	ALL
	32		W0018	403B	24		24-23-11	ALL
	33		W0018	403G	24		24-23-11	ALL
	34		W0018	403R	24		24-23-11	ALL
	35		W0018	403Y	24		24-23-11	ALL
	36		W0018	402B	24		24-41-11	ALL
	37		W0018	402G	24		24-41-11	ALL
	38		W0018	402R	24		24-41-11	ALL
	39		W0018	402Y	24		24-41-11	ALL
	40		W0018	012	24		24-22-41	ALL
	41		W0018	407B	24		24-23-12	ALL
	42		W0018	407G	24		24-23-12	ALL
	43		W0018	407R	24		24-23-12	ALL
	44		W0018	407Y	24		24-23-12	ALL
	45		W0018	032	24		24-51-71	ALL
	46		W0018	033	24		24-51-71	ALL
	47	UNUSED						ALL
	48		W0018	059	20		24-22-22	ALL
	49		W0018	060	20		24-22-22	ALL
	50	UNUSED						ALL
	51		W0018	087	24		24-22-41	ALL
	52		W0018	061	24		24-41-11	ALL
	53	UNUSED						ALL
	54	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D04000

Page 40

Feb 06/2009



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04048P		AE0307/ /		PLUG-E2-4 (continued)				ALL
	55	UNUSED						ALL
	DED		W0018	039Z			24-22-41	ALL
	DED		W0018	049Z			24-41-11	ALL
	DED		W0018	062Z			24-41-11	ALL
D04049J		SHELF/E01/05		RCPT-COAX,E1-5 COAX,R ILS LOC				ALL
	= A1		W1059	01CX			34-31-21	ALL
	= C1		W1059	01CO			34-31-21	ALL
D04049P		SHELF/E01/05		PLUG-COAX,E1-5,R ILS LOC				ALL
	= A1		W0279	01CX			34-31-21	ALL
	= C1		W0279	01CO			34-31-21	ALL
D04051J		SHELF/E01/05		RCPT-COAX,E1-5 R,ILS G/S				ALL
	= A1		W1061	01CX			34-31-21	ALL
	= C1		W1061	01CO			34-31-21	ALL
D04051P		SHELF/E01/05		PLUG-COAX,E1-5,R ILS G/S				ALL
	= A1		W0283	01CX			34-31-21	ALL
	= C1		W0283	01CO			34-31-21	ALL
D04052J		AE0311/ /		RCPT-P31				ALL
	1		W0022	403B	24		24-23-12	ALL
	2		W0022	403G	24		24-23-12	ALL
	3		W0022	403R	24		24-23-12	ALL
	4		W0022	403Y	24		24-23-12	ALL
	5		W0022	135	24		24-51-71	ALL
	6		W0022	132	24		24-51-71	ALL
	7	DK	W0022	144	18		30-71-25	050-099, 150-199
	7	UNUSED						275-299
	8		W0022	131	24		24-51-71	ALL
	9	UNUSED						ALL
	10		W0022	041	24		24-51-71	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D04052P		AE0311/ /		PLUG-P31				ALL
	1		W0240	403B	24		24-23-12	ALL
	2		W0240	403G	24		24-23-12	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04000

Page 41

Feb 06/2009



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04052P		AE0311/ /		PLUG-P31 (continued)				ALL
	3		W0240	403R	24		24-23-12	ALL
	4		W0240	403Y	24		24-23-12	ALL
	5		W0240	041	24		24-51-71	ALL
	6		W0240	040	24		24-51-71	ALL
	7	FL	W0240	014	16		30-71-25	050-099, 150-199
	7	UNUSED						275-299
	8		W0240	004	24		24-51-71	ALL
	9	UNUSED						ALL
	10		W0240	053	24		24-51-71	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D04053J		132/201/L 8		RCPT-COAX,FWD PRESS BLKHD,R ILS G/S				ALL
	= A1		W0283	01CX			34-31-21	ALL
	= C1		W0283	01CO			34-31-21	ALL
D04053P		132/201/L 8		PLUG-COAX,FWD PRESS BLKHD,R ILS G/S				ALL
	= A1		W0273	01CX			34-31-21	ALL
	= C1		W0273	01CO			34-31-21	ALL
D04054J		AE0311/ /		RCPT-P31				ALL
	1		W0022	047	24		24-22-12	ALL
	2		W0022	049	24		24-22-12	ALL
	3		W0022	010	24		24-51-13	ALL
	4		W0022	003	24		24-22-11	ALL
	5		W0022	001	24		24-22-12	ALL
	6		W0022	402B	24		24-23-11	ALL
	7		W0022	402G	24		24-23-11	ALL
	8		W0022	402R	24		24-23-11	ALL
	9		W0022	402Y	24		24-23-11	ALL
	10		W0022	401B	24		24-23-11	ALL
	11		W0022	401G	24		24-23-11	ALL
	12		W0022	401R	24		24-23-11	ALL
	13		W0022	401Y	24		24-23-11	ALL
	14		W0022	145	24		29-11-22	ALL
	15	UNUSED						ALL
	16		W0022	146	24		29-11-22	ALL
	17	UNUSED						ALL
	18		W0022	030	24		24-28-11	ALL
	19		W0022	011	24		24-51-13	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04000

Page 42

Feb 06/2009



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04054J		AE0311/ /		RCPT-P31 (continued)				ALL
	20		W0022	012	24		24-51-13	ALL
	21		W0022	008	20		24-22-11	ALL
	22		W0022	005	20		24-22-11	ALL
	23		W0022	004	20		24-22-11	ALL
	24		W0022	051	20		24-22-12	ALL
	25		W0022	053	20		24-22-12	ALL
	26		W0022	097	20		24-22-12	ALL
	27		W0022	023	24		24-27-21	ALL
	28		W0022	024	24		24-27-21	ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32		W0022	128	24		29-11-22	ALL
	33	UNUSED						ALL
	34		W0022	106	22		29-11-31	ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37		W0022	108	22		29-11-31	ALL
	38		W0022	077	22		29-32-11	ALL
	39	UNUSED						ALL
	40		W0022	086	24		24-22-11	ALL
	41		W0022	102	24		24-51-31	ALL
	42		W0022	099	20		24-22-12	ALL
	43		W0022	093	24		24-51-31	ALL
	44		W0022	101	24		24-22-12	ALL
	45		W0022	091	24		24-51-31	ALL
	46		W0022	088	20		24-22-12	ALL
	47		W0022	103	24		24-51-31	ALL
	48		W0022	105	20		24-22-22	ALL
	49		W0022	104	20		24-22-22	ALL
	50		W0022	110	24		29-11-31	ALL
	51		W0022	109	24		29-11-31	ALL
	52		W0022	107	24		29-11-31	ALL
	53	UNUSED						ALL
	54		W0022	016	24		24-22-12	ALL
	55	UNUSED						ALL
D04054P		AE0311/ /		PLUG-P31				ALL
	1		W0214	003	24		24-22-12	ALL
	2		W0214	004	24		24-22-12	ALL

HOOKUP LIST
D280T132

91-21-51
Section D04000
Page 43
Feb 06/2009



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04054P		AE0311/ /		PLUG-P31 (continued)				ALL
	3		W0214	005	24		24-51-13	ALL
	4		W0214	028	24		24-22-11	ALL
	5		W0214	029	24		24-22-12	ALL
	6		W0214	403B	24		24-23-11	ALL
	7		W0214	403G	24		24-23-11	ALL
	8		W0214	403R	24		24-23-11	ALL
	9		W0214	403Y	24		24-23-11	ALL
	10		W0214	404B	24		24-23-11	ALL
	11		W0214	404G	24		24-23-11	ALL
	12		W0214	404R	24		24-23-11	ALL
	13		W0214	404Y	24		24-23-11	ALL
	14		W0214	107	24		29-11-22	ALL
	15	UNUSED						ALL
	16		W0214	142	24		29-11-22	ALL
	17	UNUSED						ALL
	18		W0214	034	24		24-28-11	ALL
	19		W0214	035	24		24-51-13	ALL
	20		W0214	036	24		24-51-13	ALL
	21		W0214	041	20		24-22-11	ALL
	22		W0214	042	20		24-22-11	ALL
	23		W0214	043	20		24-22-11	ALL
	24		W0214	044	20		24-22-12	ALL
	25		W0214	045	20		24-22-12	ALL
	26		W0214	046	20		24-22-12	ALL
	27		W0214	048	24		24-27-21	ALL
	28		W0214	049	24		24-27-21	ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32		W0214	056	24		29-11-22	ALL
	33	UNUSED						ALL
	34		W0214	081	22		29-11-31	ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37		W0214	061	24		29-11-31	ALL
	38		W0214	062	22		29-32-11	ALL
	39	UNUSED						ALL
	40		W0214	066	24		24-22-11	ALL
	41		W0214	067	24		24-51-31	ALL
	42		W0214	068	20		24-22-12	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04000

Page 44

Feb 06/2009



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04054P		AE0311/ /		PLUG-P31 (continued)				ALL
	43		W0214	069	24		24-51-31	ALL
	44		W0214	070	24		24-22-12	ALL
	45		W0214	071	24		24-51-31	ALL
	46		W0214	072	20		24-22-12	ALL
	47		W0214	073	24		24-51-31	ALL
	48		W0214	074	20		24-22-22	ALL
	49		W0214	075	20		24-22-22	ALL
	50		W0214	077	24		29-11-31	ALL
	51		W0214	078	24		29-11-31	ALL
	52		W0214	079	24		29-11-31	ALL
	53	UNUSED						ALL
	54		W0214	109	24		24-22-12	ALL
	55	UNUSED						ALL
	DED		W0214	061Z			29-11-31	ALL
	DED		W0214	077Z			29-11-31	ALL
	DED		W0214	078Z			29-11-31	ALL
	DED		W0214	079Z			29-11-31	ALL
	DED		W0214	081Z			29-11-31	ALL
D04055J		132/201/L 8		RCPT-COAX,FWD PRESS BLKHD,R ILS LOC				ALL
	= A1		W0279	01CX			34-31-21	ALL
	= C1		W0279	01CO			34-31-21	ALL
D04055P		132/201/L 8		PLUG-COAX,FWD PRESS BLKHD,R ILS LOC				ALL
	= A1		W0269	01CX			34-31-21	ALL
	= C1		W0269	01CO			34-31-21	ALL
D04056J		AE0218/ /		RCPT-P37				ALL
	1		W0198	009	22		49-61-11	ALL
	2		W0198	007	22		49-61-11	ALL
	3		W0198	049	24		24-22-41	ALL
	4		W0198	018	22		49-61-11	ALL
	5		W0198	004	22		49-61-11	ALL
	6		W0198	201B	22		21-61-51	ALL
	7		W0198	201R	22		21-61-51	ALL
	8	UNUSED						ALL
	9		W0198	50C	24		24-27-41	050-099, 162-199, 275-299
	9	UNUSED						150-157
	10		W0198	019	22		49-61-11	ALL
	11		W0198	515	24		28-25-21	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04000

Page 45

Feb 06/2009



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04056J		AE0218/ /		RCPT-P37 (continued)				ALL
	12		W0198	021	22		49-61-11	ALL
	13		W0198	014	22		49-61-11	ALL
	14		W0198	015	22		49-61-11	ALL
	15		W0198	068	24		29-11-32	ALL
	16	UNUSED						050-099, 155-199, 275-299
	16		W0198	622	20		25-31-12	150-154
	17	UNUSED						050-099, 150-199, 275-278
	17		W0198	622	20		SPARE	280-299
	18		W0198	622	20		25-33-11	050-099
	18		W0198	623	20		25-31-12	150-154
	18	UNUSED						155-199, 275-299
	19		W0198	50B	22		49-61-11	050-099, 162-199, 275-299
	19	UNUSED						150-157
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23		W0198	599	20		25-33-11	050-099, 155-199, 277-299
	23	UNUSED						150-154, 275-276
	24	UNUSED						ALL
	DED		W0198	622Z			25-33-11	050-099
	DED		W0198	599Z			25-33-11	050-099, 155-199, 277-299
	DED		W0198	622Z			SPARE	280-299
D04056P		AE0218/ /		PLUG-P37				ALL
	1		W0248	012	22		49-61-11	ALL
	2		W0248	013	22		49-61-11	ALL
	3		W0248	014	24		24-22-41	ALL
	4		W0248	022	22		49-61-11	ALL
	5		W0248	023	22		49-61-11	ALL
	6		W0248	203B	20		21-61-51	ALL
	7		W0248	203R	20		21-61-51	ALL
	8	UNUSED						ALL
	9		W0248	047	24		24-27-41	050-099, 162-199, 275-299
	9	UNUSED						150-157
	10		W0248	031	22		49-61-11	ALL
	11		W0248	060	24		28-25-21	ALL
	12		W0248	032	22		49-61-11	ALL
	13		W0248	033	22		49-61-11	ALL
	14		W0248	005	22		49-61-11	ALL
	15		W0248	027	24		29-11-32	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04000

Page 46

Feb 06/2009



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04056P		AE0218/ /		PLUG-P37 (continued)				ALL
	16	UNUSED						050-099, 275-299
	16	DK	W0248	075	18		25-31-12	150-154
	16	DK	W0248	075	18		SPARE	155-199
	17		W0248	034	24		SPARE	050-099, 150-199, 275-278
	17	DK	W0248	075	18		SPARE	280-299
	18	DK	W0248	077	18		25-31-12	050-099, 150-154
	18	UNUSED						155-199, 275-299
	19		W0248	048	22		49-61-11	050-099, 162-199, 275-299
	19	UNUSED						150-157
	20	UNUSED						ALL
	21	UNUSED						ALL
	22		W0248	051	20		SPARE	ALL
	23		W0248	079	20		25-31-11	050-099
	23	UNUSED						150-154, 275-276
	23		W0248	077	20		25-31-11	155-157, 165-199, 277-278
	23	DK	W0248	077	18		25-31-11	162-164, 280-299
	24		W0248	052	20		SPARE	ALL
	CAP	Y	W0248	034	24		SPARE	280-299
D04057J		SHELF/E01/		RCPT-COAX,E1-4 ,C ILS G/S				ALL
	=A1		W1057	01CX			34-31-31	ALL
	=C1		W1057	01CO			34-31-31	ALL
D04057P		SHELF/E01/		PLUG-E1-4,COAX,C ILS G/S				ALL
	=A1		W0275	01CX			34-31-31	ALL
	=C1		W0275	01CO			34-31-31	ALL
D04058J		AE0319/ /		RCPT-E1-2				ALL
	1		W0214	201B	24		24-11-11	ALL
	2		W0214	201R	24		24-11-11	ALL
	3		W0214	201Z			24-11-11	ALL
	4		W0214	111	24		24-28-21	ALL
	5		W0214	204B	20		24-21-11	ALL
	6		W0214	204R	20		24-21-11	ALL
	7		W0214	204Z			24-21-11	ALL
	8		W0214	401B	24		24-21-11	ALL
	9		W0214	401R	24		24-21-11	ALL
	10		W0214	401Y	24		24-21-11	ALL
	11		W0214	401G	24		24-21-11	ALL
	12		W0214	202B	24		24-11-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04000

Page 47

Feb 06/2009



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04058J		AE0319/ /		RCPT-E1-2 (continued)				ALL
	13		W0214	202R	24		24-11-11	ALL
	14		W0214	203B	24		24-11-11	ALL
	15		W0214	203R	24		24-11-11	ALL
	16		W0214	001	24		24-11-11	ALL
	17		W0214	110	24		24-22-11	ALL
	18		W0214	402B	24		24-23-11	ALL
	19		W0214	402G	24		24-23-11	ALL
	20		W0214	402R	24		24-23-11	ALL
	21		W0214	402Y	24		24-23-11	ALL
	22		W0214	006	24		24-11-11	ALL
	23		W0214	007	24		30-41-11	ALL
	24		W0214	008	24		24-11-11	ALL
	25		W0214	009	24		24-11-11	ALL
	26		W0214	010	24		24-22-11	ALL
	27		W0214	011	24		24-22-11	ALL
	28		W0214	012	24		24-22-11	ALL
	29		W0214	013	24		24-22-12	ALL
	30		W0214	014	24		24-27-11	ALL
	31		W0214	015	24		30-41-11	ALL
	32		W0214	016	24		24-11-11	ALL
	33		W0214	017	20		24-22-11	ALL
	34		W0214	018	20		24-22-11	ALL
	35		W0214	019	24		24-22-12	ALL
	36		W0214	028	24		24-22-11	ALL
	37		W0214	029	24		24-22-12	ALL
	38		W0214	403B	24		24-23-11	ALL
	39		W0214	403G	24		24-23-11	ALL
	40		W0214	403R	24		24-23-11	ALL
	41		W0214	403Y	24		24-23-11	ALL
	42		W0214	404B	24		24-23-11	ALL
	43		W0214	404G	24		24-23-11	ALL
	44		W0214	404R	24		24-23-11	ALL
	45		W0214	404Y	24		24-23-11	ALL
	46	UNUSED						050-099, 150-199, 275-276
	46	DK	W0214	145	18		25-31-31	277-299
	47		W0214	141	24		24-11-11	ALL
	48		W0214	023	20		25-31-21	050-099, 150-199
	48	DK	W0214	023	18		25-31-21	275-299
	49		W0214	206B	24		24-22-12	ALL
	50		W0214	206R	24		24-22-12	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04000

Page 48

Feb 06/2009



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04058J		AE0319/ /		RCPT-E1-2 (continued)				ALL
	51		W0214	206Z			24-22-12	ALL
	52		W0214	128	24		24-27-11	ALL
	53		W0214	112	24		24-11-11	ALL
	54		W0214	118	24		24-11-11	ALL
	55		W0214	076	24		24-22-12	ALL
D04058P		AE0319/ /		PLUG-E1-2				ALL
	1		W1092	266B	24		24-11-11	ALL
	2		W1092	266R	24		24-11-11	ALL
	3		W1092	266Z			24-11-11	ALL
	4		W1092	009	24		24-28-21	ALL
	5		W1092	267B	22		24-21-11	ALL
	6		W1092	267R	22		24-21-11	ALL
	7		W1092	267Z			24-21-11	ALL
	8		W1092	402B	24		24-21-11	ALL
	9		W1092	402R	24		24-21-11	ALL
	10		W1092	402Y	24		24-21-11	ALL
	11		W1092	402G	24		24-21-11	ALL
	12		W1092	264B	24		24-11-11	ALL
	13		W1092	264R	24		24-11-11	ALL
	14		W1092	265B	24		24-11-11	ALL
	15		W1092	265R	24		24-11-11	ALL
	16		W1092	101	24		24-11-11	ALL
	17		W1092	546	24		24-22-11	ALL
	18		W1092	403B	24		24-23-11	ALL
	19		W1092	403G	24		24-23-11	ALL
	20		W1092	403R	24		24-23-11	ALL
	21		W1092	403Y	24		24-23-11	ALL
	22		W1092	057	24		24-11-11	ALL
	23		W1092	596	24		30-41-11	ALL
	24		W1092	096	24		24-11-11	ALL
	25		W1092	097	24		24-11-11	ALL
	26		W1092	107	24		24-22-11	ALL
	27		W1092	109	24		24-22-11	ALL
	28		W1092	110	24		24-22-11	ALL
	29		W1092	537	24		24-22-12	ALL
	30		W1092	545	24		24-27-11	ALL
	31		W1092	597	24		30-41-11	ALL
	32		W1092	091	24		24-11-11	ALL
	33		W1092	106	22		24-22-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04000

Page 49

Feb 06/2009



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04058P		AE0319/ /		PLUG-E1-2 (continued)				ALL
	34		W1092	108	20		24-22-11	ALL
	35		W1092	538	20		24-22-12	ALL
	36		W1092	111	24		24-22-11	ALL
	37		W1092	112	24		24-22-12	ALL
	38		W1092	404B	24		24-23-11	ALL
	39		W1092	404G	24		24-23-11	ALL
	40		W1092	404R	24		24-23-11	ALL
	41		W1092	404Y	24		24-23-11	ALL
	42		W1092	405B	24		24-23-11	ALL
	43		W1092	405G	24		24-23-11	ALL
	44		W1092	405R	24		24-23-11	ALL
	45		W1092	405Y	24		24-23-11	ALL
	46	UNUSED						050-099, 150-199, 275-276
	46	DL	W1092	736	18		25-31-31	277-299
	47		W1092	027	24		24-11-11	ALL
	48		W1092	586	20		25-31-21	050-099
	48	DL	W1092	586	20		25-31-21	150-199
	48	DL	W1092	586	18		25-31-21	275-299
	49		W1092	621B	24		24-22-12	ALL
	50		W1092	621R	24		24-22-12	ALL
	51		W1092	621Z	24		24-22-12	ALL
	52		W1092	069	24		24-27-11	ALL
	53		W1092	598	24		24-11-11	ALL
	54		W1092	815	24		24-11-11	ALL
	55		W1092	536	24		24-22-12	ALL
D04059J		SHELF/E01/04		RCPT-COAX,E1-4 ,C ILS LOC				ALL
	= A1		W1055	01CX			34-31-31	ALL
	= C1		W1055	01CO			34-31-31	ALL
D04059P		SHELF/E01/04		PLUG-COAX,E1-4,C ILS LOC				ALL
	= A1		W0271	01CX			34-31-31	ALL
	= C1		W0271	01CO			34-31-31	ALL
D04060J		AE0319/ /		RCPT-E1-2				ALL
	1		W0214	301B	18		24-21-11	ALL
	2		W0214	301R	18		24-21-11	ALL
	3		W0214	301Y	18		24-21-11	ALL
	4		W0214	302B	18		24-21-11	ALL
	5		W0214	302R	18		24-21-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04000

Page 50

Feb 06/2009



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04060J		AE0319/ /		RCPT-E1-2 (continued)				ALL
	6		W0214	302Y	18		24-21-11	ALL
	7		W0214	020	18		24-22-11	ALL
	8		W0214	021	18		24-22-12	ALL
	9		W0214	041	20		24-22-11	ALL
	10		W0214	042	20		24-22-11	ALL
	11		W0214	043	20		24-22-11	ALL
	12		W0214	044	20		24-22-12	ALL
	13		W0214	045	20		24-22-12	ALL
	14		W0214	046	20		24-22-12	ALL
	15		W0214	047	18		24-11-11	ALL
	16	UNUSED						050-099, 275-299
	16		W0214	082	24		24-11-11	150-199
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	DED		W0214	047Z			24-11-11	ALL
D04060P		AE0319/ /		PLUG-E1-2				ALL
	1		W1092	301B	18		24-21-11	ALL
	2		W1092	301R	18		24-21-11	ALL
	3		W1092	301Y	18		24-21-11	ALL
	4		W1092	303B	18		24-21-11	ALL
	5		W1092	303R	18		24-21-11	ALL
	6		W1092	303Y	18		24-21-11	ALL
	7		W1092	118	18		24-22-11	ALL
	8		W1092	541	18		24-22-12	ALL
	9		W1092	115	22		24-22-11	ALL
	10		W1092	116	20		24-22-11	ALL
	11		W1092	117	22		24-22-11	ALL
	12		W1092	539	20		24-22-12	ALL
	13		W1092	542	22		24-22-12	ALL
	14		W1092	543	22		24-22-12	ALL
	15		W1092	099	18		24-11-11	ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
D04061J		132/195/L 8		RCPT-COAX,FWD PRESS BLKHD,C ILS G/S				ALL
	= A1		W0275	01CX			34-31-31	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04000

Page 51

Feb 06/2009



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04061J		132/195/L 8		RCPT-COAX,FWD PRESS BLKHD,C ILS G/S (continued)				ALL
	= C1		W0275	01CO			34-31-31	ALL
D04061P		132/195/L 8		PLUG-COAX,FWD PRESS BLKHD,C ILS G/S				ALL
	= A1		W0281	01CX			34-31-31	ALL
	= C1		W0281	01CO			34-31-31	ALL
D04062J		AE0312/ /		RCPT-P32				ALL
	1	UNUSED						ALL
	2	UNUSED						050-099, 150-199, 277-299
	2		W0024	079	20		25-31-11	275-276
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W0024	135	24		24-51-31	ALL
	6	UNUSED						ALL
	7		W0024	133	24		24-51-31	ALL
	8		W0024	182	18		30-71-25	050-099, 150-199
	8	UNUSED						275-299
	9		W0024	183	18		30-71-25	050-099, 150-199
	9	UNUSED						275-299
	10		W0024	003	18		24-22-21	ALL
	11		W0024	015	18		24-22-22	ALL
	12		W0024	301B	18		24-21-21	ALL
	13		W0024	301R	18		24-21-21	ALL
	14		W0024	301Y	18		24-21-21	ALL
	15		W0024	169	18		25-31-12	050-099, 150-199
	15	UNUSED						275-299
	16		W0024	161	24		29-11-31	ALL
D04062P		AE0312/ /		PLUG-P32				ALL
	1	UNUSED						ALL
	2	UNUSED						050-099, 150-199
	2		W0222	019	20		25-31-11	275-276
	2		W0222	019	20		SPARE	277-299
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W0222	088	24		24-51-31	ALL
	6	UNUSED						ALL
	7		W0222	087	24		24-51-31	ALL
	8		W0222	177	18		30-71-25	050-099, 150-199
	8	UNUSED						275-278

HOOKUP LIST

D280T132

91-21-51

Section D04000

Page 52

Feb 06/2009



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04062P		AE0312/ /		PLUG-P32 (continued)				ALL
	8		W0222	130	16		SPARE	280-299
	9		W0222	178	18		30-71-25	050-099, 150-199
	9	UNUSED						275-299
	10		W0222	048	18		24-22-21	ALL
	11		W0222	057	18		24-22-22	ALL
	12		W0222	302B	18		24-21-21	ALL
	13		W0222	302R	18		24-21-21	ALL
	14		W0222	302Y	18		24-21-21	ALL
	15		W0222	164	16		25-31-12	050-099, 150-199
	15	UNUSED						275-299
	16		W0222	109	24		29-11-31	ALL
	DED		W0222	109Z			29-11-31	ALL
D04063J		132/195/L 8		RCPT-COAX,FWD PRESS BLKHD,C ILS LOC				ALL
	= A1		W0271	01CX			34-31-31	ALL
	= C1		W0271	01CO			34-31-31	ALL
D04063P		132/195/L 8		PLUG-COAX,FWD PRESS BLKHD,C ILS LOC				ALL
	= A1		W0277	01CX			34-31-31	ALL
	= C1		W0277	01CO			34-31-31	ALL
D04068J		AE0311/ /		RCPT-P31				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W0022	144	18		30-71-25	050-099, 150-199
	4	UNUSED						275-299
	5		W0022	033	24		25-31-21	ALL
	6		W0022	034	24		25-31-21	ALL
	7	UNUSED						ALL
	8		W0022	032	24		25-31-21	ALL
	9		W0022	035	24		25-31-21	ALL
	10		W0022	172	16		25-31-21	050-099, 150-199, 275-276
	10		W0022	039	16		25-31-21	277-299
	11	UNUSED						ALL
	12	UNUSED						ALL
D04068P		AE0311/ /		PLUG-P31				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D04000

Page 53

Feb 06/2009



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04068P		AE0311/ /		PLUG-P31 (continued)				ALL
	3	UNUSED						ALL
	4		W0216	051	18		30-71-25	050-099, 150-199 275-299
	4	UNUSED						ALL
	5		W0216	005	24		25-31-21	ALL
	6		W0216	006	24		25-31-21	ALL
	7	UNUSED						ALL
	8		W0216	004	24		25-31-21	ALL
	9		W0216	007	24		25-31-21	ALL
	10		W0216	013	16		25-31-21	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D04069J		AE0322/ /		RCPT-E2-2 COAX,MKR BCN				ALL
	= A1		W0309	01CX			34-32-11	ALL
	= C1		W0309	01CO			34-32-11	ALL
D04069P		AE0322/ /		PLUG-E2-2 COAX,MKR,BCN-L				ALL
	= A1		W1083	01CX			34-32-11	ALL
	= C1		W1083	01CO			34-32-11	ALL
D04071J		0698/106/0000		RCPT-COAX,MKR BCN				050-099
D04071J		0654+44/106/0000		RCPT-COAX,MKR BCN				150-199, 275-299
	= A1		W0309	01CX			34-32-11	ALL
	= C1		W0309	01CO			34-32-11	ALL
D04071P		704/102/0000		PLUG-COAX,MKR BCN				050-099
D04071P		0654+44/106/0000		PLUG-COAX,MKR BCN				150-199, 275-299
	= A1		W0375	01CX			34-32-11	ALL
	= C1		W0375	01CO			34-32-11	ALL
D04072J		AE0322/ /		RCPT-E2-4				ALL
	1		W0248	401B	24		24-23-12	ALL
	2		W0248	401G	24		24-23-12	ALL
	3		W0248	401R	24		24-23-12	ALL
	4		W0248	401Y	24		24-23-12	ALL
	5		W0248	402B	24		24-23-12	ALL
	6		W0248	402G	24		24-23-12	ALL
	7		W0248	402R	24		24-23-12	ALL
	8		W0248	402Y	24		24-23-12	ALL
	9		W0248	202B	20		24-21-41	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04000

Page 54

Feb 06/2009



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04072J		AE0322/ /		RCPT-E2-4 (continued)				ALL
	10		W0248	202R	20		24-21-41	ALL
	11		W0248	202Z			24-21-41	ALL
	12		W0248	014	24		24-22-41	ALL
	13		W0248	403B	24		24-23-12	ALL
	14		W0248	403G	24		24-23-12	ALL
	15		W0248	403R	24		24-23-12	ALL
	16		W0248	403Y	24		24-23-12	ALL
	17		W0248	015	24		24-27-11	ALL
	18		W0248	016	24		24-27-21	ALL
	19		W0248	017	24		24-41-11	ALL
	20		W0248	018	24		24-41-11	ALL
	21		W0248	019	24		24-41-12	ALL
	22		W0248	020	24		24-22-41	ALL
	23		W0248	039	20		24-22-12	ALL
	24		W0248	040	24		24-22-12	ALL
	25		W0248	041	24		24-22-12	ALL
	26		W0248	042	24		24-22-12	ALL
	27		W0248	043	24		24-51-31	ALL
	28		W0248	044	24		24-51-31	ALL
	29		W0248	050	20		SPARE	ALL
	30		W0248	065	20		SPARE	ALL
	31		W0248	052	20		SPARE	ALL
	32		W0248	062	24		24-51-71	ALL
	33		W0248	061	24		24-51-71	ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	DED		W0248	039Z			24-22-12	ALL
D04072P		AE0322/ /		PLUG-E2-4				ALL
	1		W0018	405B	24		24-23-12	ALL
	2		W0018	405G	24		24-23-12	ALL
	3		W0018	405R	24		24-23-12	ALL
	4		W0018	405Y	24		24-23-12	ALL
	5		W0018	406B	24		24-23-12	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04000

Page 55

Feb 06/2009



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04072P		AE0322/ /		PLUG-E2-4 (continued)				ALL
	6		W0018	406G	24		24-23-12	ALL
	7		W0018	406R	24		24-23-12	ALL
	8		W0018	406Y	24		24-23-12	ALL
	9		W0018	203B	22		24-21-41	ALL
	10		W0018	203R	22		24-21-41	ALL
	11		W0018	203Z			24-21-41	ALL
	12		W0018	007	24		24-22-41	ALL
	13		W0018	404B	24		24-23-12	ALL
	14		W0018	404G	24		24-23-12	ALL
	15		W0018	404R	24		24-23-12	ALL
	16		W0018	404Y	24		24-23-12	ALL
	17		W0018	034	24		24-27-11	ALL
	18		W0018	022	24		24-27-21	ALL
	19		W0018	018	24		24-41-11	ALL
	20		W0018	019	24		24-41-11	ALL
	21		W0018	029	24		24-41-12	ALL
	22		W0018	014	24		24-22-41	ALL
	23		W0018	054	20		24-22-12	ALL
	24		W0018	056	24		24-22-12	ALL
	25		W0018	053	24		24-22-12	ALL
	26		W0018	058	20		24-22-12	ALL
	27		W0018	057	24		24-51-31	ALL
	28		W0018	055	24		24-51-31	ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32		W0018	001	24		24-51-71	ALL
	33		W0018	031	24		24-51-71	ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
D04073J		AE0322/ /		RCPT-COAX,VOR L				ALL
	= A1		W0311	01CX			34-51-11	ALL
	= C1		W0311	01CO			34-51-11	ALL

HOOKUP LIST
D280T132

91-21-51
Section D04000
Page 56
Feb 06/2009



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04073P		AE0322/ /		PLUG-E2-2 COAX,VOR-L				ALL
	= A1		W1085	01CX			34-51-11	ALL
	= C1		W1085	01CO			34-51-11	ALL
D04074J		AE0322/ /		RCPT-E2-4				ALL
	1		W0248	301B	18		24-21-41	ALL
	2		W0248	301R	18		24-21-41	ALL
	3		W0248	301Y	18		24-21-41	ALL
	4		W0248	404B	24		24-21-41	ALL
	5		W0248	404G	24		24-21-41	ALL
	6		W0248	404R	24		24-21-41	ALL
	7		W0248	404Y	24		24-21-41	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
D04074P		AE0322/ /		PLUG-E2-4				ALL
	1		W0018	301B	18		24-21-41	ALL
	2		W0018	301R	18		24-21-41	ALL
	3		W0018	301Y	18		24-21-41	ALL
	4		W0018	401B	24		24-21-41	ALL
	5		W0018	401G	24		24-21-41	ALL
	6		W0018	401R	24		24-21-41	ALL
	7		W0018	401Y	24		24-21-41	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
D04075J		AP1501/ /		PLUG-COAX,VOR L				ALL
	= A1		W0313	01CX			34-51-11	ALL
	= C1		W0313	01CO			34-51-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04000

Page 57

Feb 06/2009



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04075P		AP1501/ /		RCPT-COAX,VOR L				ALL
	= A1		W0311	01CX			34-51-11	ALL
	= C1		W0311	01CO			34-51-11	ALL
D04077J		AE0322/ /		RCPT-COAX,VOR R				ALL
	= A1		W0315	01CX			34-51-21	ALL
	= C1		W0315	01CO			34-51-21	ALL
D04077P		AE0322/ /		PLUG-E2-3 COAX,VOR-R				ALL
	= A1		W1087	01CX			34-51-21	ALL
	= C1		W1087	01CO			34-51-21	ALL
D04078J		AE0320/ /		RCPT-32-4				050-099
D04078J		AE0320/ /		RCPT-E2-4				150-199, 275-299
	1		W0222	402B	24		24-23-11	ALL
	2		W0222	402R	24		24-23-11	ALL
	3		W0222	402Y	24		24-23-11	ALL
	4		W0222	402G	24		24-23-11	ALL
	5		W0222	403B	24		24-23-11	ALL
	6		W0222	403R	24		24-23-11	ALL
	7		W0222	403Y	24		24-23-11	ALL
	8		W0222	403G	24		24-23-11	ALL
	9		W0222	404B	24		24-23-11	ALL
	10		W0222	404R	24		24-23-11	ALL
	11		W0222	404Y	24		24-23-11	ALL
	12		W0222	404G	24		24-23-11	ALL
	13		W0222	058	24		24-27-21	ALL
	14		W0222	129	24		24-27-21	ALL
	15		W0222	060	22		24-51-51	ALL
	16		W0222	061	22		24-51-51	ALL
	17		W0222	007	24		24-51-51	ALL
	18		W0222	109	24		29-11-31	ALL
	19		W0222	076	22		29-11-31	ALL
	20		W0222	108	24		29-11-12	ALL
	21		W0222	115	24		24-11-21	ALL
	22		W0222	011	24		29-11-12	ALL
	23		W0222	132	24		29-11-12	ALL
	24		W0222	100	20		SPARE	ALL
	DED		W0222	076Z			29-11-31	ALL
	DED		W0222	109Z			29-11-31	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04000

Page 58

Jun 06/2008



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04078P		AE0320/ /		PLUG-E2-4				ALL
	1		W0016	402B	24		24-23-11	ALL
	2		W0016	402R	24		24-23-11	ALL
	3		W0016	402Y	24		24-23-11	ALL
	4		W0016	402G	24		24-23-11	ALL
	5		W0016	403B	24		24-23-11	ALL
	6		W0016	403R	24		24-23-11	ALL
	7		W0016	403Y	24		24-23-11	ALL
	8		W0016	403G	24		24-23-11	ALL
	9		W0016	404B	24		24-23-11	ALL
	10		W0016	404R	24		24-23-11	ALL
	11		W0016	404Y	24		24-23-11	ALL
	12		W0016	404G	24		24-23-11	ALL
	13		W0016	036	24		24-27-21	ALL
	14		W0016	057	24		24-27-21	ALL
	15		W0016	139	22		24-51-51	ALL
	16		W0016	140	22		24-51-51	ALL
	17		W0016	146	24		24-51-51	ALL
	18		W0016	212B	22		29-11-31	ALL
	19		W0016	212R	22		29-11-31	ALL
	20		W0016	028	24		29-11-12	ALL
	21		W0016	511	24		24-11-21	ALL
	22		W0016	084	24		29-11-12	ALL
	23		W0016	077	24		29-11-12	ALL
	24	UNUSED						ALL
	DED		W0016	212Z			29-11-31	ALL
D04079J		AP1501/ /		PLUG-COAX,VOR R				ALL
	= A1		W0317	01CX			34-51-21	ALL
	= C1		W0317	01CO			34-51-21	ALL
D04079P		AP1501/ /		RCPT-COAX,VOR R				ALL
	= A1		W0315	01CX			34-51-21	ALL
	= C1		W0315	01CO			34-51-21	ALL
D04080J		AE0311/ /		RCPT-P31				ALL
	1	DK	W0022	060	18		24-21-11	ALL
	2	DK	W0022	061	18		24-21-11	ALL
	3	DK	W0022	062	18		24-21-11	ALL
	4	DK	W0022	002	18		24-22-11	ALL
	5	DK	W0022	048	18		24-22-12	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04000

Page 59

Jun 06/2008



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04080J		AE0311/ /		RCPT-P31 (continued)				ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9		W0022	044	22		25-31-21	ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12		W0022	122	24		24-51-31	ALL
	13		W0022	124	24		24-51-31	ALL
	14		W0022	147	24		29-11-31	ALL
	15	UNUSED						ALL
	16		W0022	021	24		24-27-11	ALL
	17		W0022	022	24		24-27-11	ALL
	18		W0022	129	24		31-31-26	ALL
	19		W0022	143	24		31-31-26	ALL
	20		W0022	038	24		24-51-71	ALL
	21		W0022	040	20		25-31-21	050-099
	21		W0022	042	20		25-31-21	150-199
	21		W0022	042	18		25-31-21	275-299
	22	UNUSED						ALL
	23		W0022	172	16		25-31-21	050-099, 150-199
	23		W0022	039	16		25-31-21	275-299
	24		W0022	130	24		24-51-71	ALL
	25		W0022	138	24		24-27-11	ALL
	26		W0022	136	24		24-27-11	ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29		W0022	013	24		24-27-11	ALL
	30	UNUSED						050-099, 150-199, 275-276
	30	FM	W0022	163	16		25-31-31	277-299
	31	UNUSED						ALL
	32	UNUSED						050-099, 150-199, 275-276
	32	DK	W0022	151	18		25-31-31	277-299
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38		W0022	165	20		24-51-72	050-099, 162-164, 276
	38	UNUSED						150-157, 165-199, 275, 277-299
	39		W0022	164	20		24-51-72	050-099, 162-164, 276

HOOKUP LIST

D280T132

91-21-51

Section D04000

Page 60

Aug 15/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04080J		AE0311/ /		RCPT-P31 (continued)				ALL
	39	UNUSED						150-157, 165-199, 275, 277-299
D04080P		AE0311/ /		PLUG-P31				ALL
	1	DL	W0214	302B	18		24-21-11	ALL
	2	DL	W0214	302R	18		24-21-11	ALL
	3	DL	W0214	302Y	18		24-21-11	ALL
	4	DL	W0214	020	18		24-22-11	ALL
	5	DL	W0214	021	18		24-22-12	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9		W0214	027	22		25-31-21	ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12		W0214	083	24		24-51-31	ALL
	13		W0214	084	24		24-51-31	ALL
	14		W0214	108	24		29-11-31	ALL
	15	UNUSED						ALL
	16		W0214	032	24		24-27-11	ALL
	17		W0214	033	24		24-27-11	ALL
	18		W0214	064	24		31-31-26	ALL
	19		W0214	087	24		31-31-26	ALL
	20		W0214	030	24		24-51-71	ALL
	21		W0214	023	20		25-31-21	050-099, 150-199
	21		W0214	023	18		25-31-21	275-299
	22	UNUSED						ALL
	23		W0214	129	16		25-31-21	ALL
	24		W0214	040	24		24-51-71	ALL
	25		W0214	127	24		24-27-11	ALL
	26		W0214	126	24		24-27-11	ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29		W0214	050	24		24-27-11	ALL
	30	UNUSED						050-099, 150-199, 275-276
	30	FL	W0214	143	16		25-31-31	277-299
	31	UNUSED						ALL
	32	UNUSED						050-099, 150-199, 275-276
	32	DL	W0214	145	18		25-31-31	277-299
	33	UNUSED						ALL
	34	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D04000

Page 61

Aug 15/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04080P		AE0311/ /		PLUG-P31 (continued)				ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38		W0214	089	20		24-51-72	050-099, 162-164, 276
	38	UNUSED						150-154, 275
	38		W0214	089	20		SPARE	155-157, 165-199, 277-299
	39		W0214	090	20		24-51-72	050-099, 162-164, 276
	39	UNUSED						150-154, 275
	39		W0214	090	20		SPARE	155-157, 165-199, 277-299
	DED		W0214	064Z			31-31-26	ALL
	DED		W0214	108Z			29-11-31	ALL
D04081J		AE0322/ /		RECPT-COAX,ATC BOTTOM E2-2				ALL
	= A1		W1907	01CX			34-53-13	ALL
	= C1		W1907	01CO			34-53-13	ALL
D04081P		AE0322/ /		PLUG-E2-2 COAX,ATC				ALL
	= A1		W1065	01CX			34-53-13	ALL
	= C1		W1065	01CO			34-53-13	ALL
D04082J		AC1402/ /		RCPT-E6				ALL
	1		W0242	207B	20		49-14-11	ALL
	2		W0242	207R	20		49-14-11	ALL
	3		W0242	208B	20		49-14-11	ALL
	4		W0242	208R	20		49-14-11	ALL
	5		W0242	209B	20		49-14-11	ALL
	6		W0242	209R	20		49-14-11	ALL
	7		W0242	006	20		36-11-41	ALL
	8		W0242	007	20		36-11-41	ALL
	9		W0242	210B	20		49-14-11	ALL
	10		W0242	210R	20		49-14-11	ALL
	11		W0242	056	20		36-11-41	ALL
	12		W0242	055	20		36-11-41	ALL
	13		W0242	201B	20		49-14-11	ALL
	14		W0242	201R	20		49-14-11	ALL
	15		W0242	202B	20		49-14-11	ALL
	16		W0242	202R	20		49-14-11	ALL
	17		W0242	203B	20		49-14-11	ALL
	18		W0242	203R	20		49-14-11	ALL
	19		W0242	204B	20		49-14-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04000

Page 62

Aug 15/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04082J		AC1402/ /		RCPT-E6 (continued)				ALL
	20		W0242	204R	20		49-14-11	ALL
	21		W0242	205B	20		49-14-11	ALL
	22		W0242	205R	20		49-14-11	ALL
	23		W0242	039	20		49-14-11	ALL
	24		W0242	057	20		49-15-11	ALL
	25		W0242	FRA			49-14-11	ALL
	26	4I	W0242	452W	20		49-14-11	ALL
	27	4E	W0242	452G	20		49-14-11	ALL
	28		W0242	FRB			49-14-11	ALL
	29	4I	W0242	453W	20		49-14-11	ALL
	30	4E	W0242	453G	20		49-14-11	ALL
	31		W0242	041	20		49-14-11	ALL
	32	4I	W0242	454W	20		49-14-11	ALL
	33	4E	W0242	454G	20		49-14-11	ALL
	34		W0242	015	20		49-14-11	ALL
	35		W0242	001	20		49-14-11	ALL
	36		W0242	002	20		49-14-11	ALL
	37		W0242	003	20		49-14-11	ALL
	38		W0242	004	20		49-14-11	ALL
	39		W0242	005	20		49-14-11	ALL
	40		W0242	211B	20		49-14-11	ALL
	41		W0242	211R	20		49-14-11	ALL
	42		W0242	008	20		49-14-11	ALL
	43		W0242	009	20		49-14-11	ALL
	44		W0242	010	20		49-14-11	ALL
	45		W0242	011	20		49-14-11	ALL
	46		W0242	038	20		49-15-11	ALL
	47		W0242	017	20		49-15-11	ALL
	48	FL	W0242	018	16		49-15-11	ALL
	49	FL	W0242	019	16		49-15-11	ALL
	50		W0242	020	20		49-15-11	ALL
	51		W0242	021	20		49-15-11	ALL
	52		W0242	213B	20		49-14-11	ALL
	53		W0242	213R	20		49-14-11	ALL
	54		W0242	214B	20		49-14-11	ALL
	55		W0242	214R	20		49-14-11	ALL
			W0242	201Z			49-14-11	ALL
			W0242	202Z			49-14-11	ALL
			W0242	203Z			49-14-11	ALL
			W0242	204Z			49-14-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04000

Page 63

Aug 15/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04082J		AC1402/ /		RCPT-E6 (continued)				ALL
			W0242	205Z			49-14-11	ALL
			W0242	207Z			49-14-11	ALL
			W0242	208Z			49-14-11	ALL
			W0242	209Z			49-14-11	ALL
			W0242	210Z			49-14-11	ALL
			W0242	211Z			49-14-11	ALL
			W0242	213Z			49-14-11	ALL
			W0242	214Z			49-14-11	ALL
			W0242	452Z			49-14-11	ALL
			W0242	453Z			49-14-11	ALL
			W0242	454Z			49-14-11	ALL
			W0242	FRA			49-14-11	ALL
			W0242	FRB			49-14-11	ALL
D04082P		AC1402/ /		PLUG-E6				ALL
	1		W0020	209B	22		49-14-11	ALL
	2		W0020	209R	22		49-14-11	ALL
	3		W0020	210B	24		49-14-11	ALL
	4		W0020	210R	24		49-14-11	ALL
	5		W0020	211B	24		49-14-11	ALL
	6		W0020	211R	24		49-14-11	ALL
	7		W0020	054	24		36-11-41	ALL
	8		W0020	057	24		36-11-41	ALL
	9		W0020	212B	24		49-14-11	ALL
	10		W0020	212R	24		49-14-11	ALL
	11		W0020	055	20		36-11-41	ALL
	12		W0020	056	20		36-11-41	ALL
	13		W0020	201B	24		49-14-11	ALL
	14		W0020	201R	24		49-14-11	ALL
	15		W0020	202B	24		49-14-11	ALL
	16		W0020	202R	24		49-14-11	ALL
	17		W0020	203B	24		49-14-11	ALL
	18		W0020	203R	24		49-14-11	ALL
	19		W0020	204B	24		49-14-11	ALL
	20		W0020	204R	24		49-14-11	ALL
	21		W0020	205B	24		49-14-11	ALL
	22		W0020	205R	24		49-14-11	ALL
	23		W0020	059	24		49-14-11	ALL
	24		W0020	087	22		49-15-11	ALL
	25		W0020	FRC			49-14-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04000

Page 64

Aug 15/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04082P		AC1402/ /		PLUG-E6 (continued)				ALL
	26	4J	W0020	452W	22		49-14-11	ALL
	27	4F	W0020	452G	22		49-14-11	ALL
	28		W0020	FRB			49-14-11	ALL
	29	4J	W0020	453W	22		49-14-11	ALL
	30	4F	W0020	453G	22		49-14-11	ALL
	31		W0020	061	24		49-14-11	ALL
	32	4J	W0020	454W	22		49-14-11	ALL
	33	4F	W0020	454G	22		49-14-11	ALL
	34		W0020	058	20		49-14-11	ALL
	35		W0020	001	24		49-14-11	ALL
	36		W0020	002	24		49-14-11	ALL
	37		W0020	003	24		49-14-11	ALL
	38		W0020	004	24		49-14-11	ALL
	39		W0020	005	24		49-14-11	ALL
	40		W0020	213B	24		49-14-11	ALL
	41		W0020	213R	24		49-14-11	ALL
	42		W0020	008	24		49-14-11	ALL
	43		W0020	009	24		49-14-11	ALL
	44		W0020	010	24		49-14-11	ALL
	45		W0020	011	20		49-14-11	ALL
	46		W0020	049	24		49-15-11	ALL
	47		W0020	017	22		49-15-11	ALL
	48	FM	W0020	018	16		49-15-11	ALL
	49	FM	W0020	019	16		49-15-11	ALL
	50		W0020	020	20		49-15-11	ALL
	51		W0020	021	24		49-15-11	ALL
	52		W0020	214B	24		49-14-11	ALL
	53		W0020	214R	24		49-14-11	ALL
	54		W0020	215B	24		49-14-11	ALL
	55		W0020	215R	24		49-14-11	ALL
	DED		W0020	213Z			49-14-11	ALL
			W0020	201Z			49-14-11	ALL
			W0020	202Z			49-14-11	ALL
			W0020	203Z			49-14-11	ALL
			W0020	204Z			49-14-11	ALL
			W0020	205Z			49-14-11	ALL
			W0020	209Z			49-14-11	ALL
			W0020	210Z			49-14-11	ALL
			W0020	211Z			49-14-11	ALL
			W0020	212Z			49-14-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04000

Page 65

Aug 15/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04082P		AC1402/ /		PLUG-E6 (continued)				ALL
			W0020	214Z			49-14-11	ALL
			W0020	215Z			49-14-11	ALL
			W0020	452Z			49-14-11	ALL
			W0020	453Z			49-14-11	ALL
			W0020	454Z			49-14-11	ALL
			W0020	FRB			49-14-11	ALL
			W0020	FRC			49-14-11	ALL
D04085J		AE0322/ /		RECPT-E2-3 COAX,ATC BOTTOM E2-3				ALL
	= A1		W1909	01CX			34-53-13	ALL
	= C1		W1909	01CO			34-53-13	ALL
D04085P		AE0322/ /		PLUG-E2-3 COAX,ATC				ALL
	= A1		W1069	01CX			34-53-13	ALL
	= C1		W1069	01CO			34-53-13	ALL
D04086J		AF0232/ /		RCPT-P6				ALL
	1		W1026	004	12		24-51-11	ALL
	2		W1026	005	12		24-51-11	ALL
	3		W1026	006	12		24-51-11	ALL
	4		W1026	007	16		24-51-11	ALL
	5		W1026	008	16		24-51-11	ALL
	6		W1026	009	16		24-51-11	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
D04086P		AF0232/ /		PLUG-P6				ALL
	1		W0276	001	12		24-51-11	ALL
	2		W0276	002	12		24-51-11	ALL
	3		W0276	003	12		24-51-11	ALL
	4		W0276	004	12		24-51-11	ALL
	5		W0276	005	12		24-51-11	ALL
	6		W0276	006	12		24-51-11	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
D04087J		0454/112/R007		RCPT-COAX,ATC R,BOTTOM				ALL
	= A1		W0323	01CX			34-53-13	ALL
	= C1		W0323	01CO			34-53-13	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04000

Page 66

Aug 15/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04087P		0454/112/R007		PLUG-COAX,ATC R,BOTTOM				ALL
	= A1		W0325	01CX			34-53-13	ALL
	= C1		W0325	01CO			34-53-13	ALL
D04088J		AF0232/ /		RCPT-P6				ALL
	A		W1026	015	08		24-54-11	ALL
	B		W1026	010	10		24-53-11	ALL
	C		W1026	016	10		24-54-11	ALL
	D	UNUSED						ALL
D04088P		AF0232/ /		PLUG-P6				ALL
	A		W0276	008	08		24-54-11	ALL
	B		W0276	009	10		24-53-11	ALL
	C		W0276	007	10		24-54-11	ALL
	D	UNUSED						ALL
D04090J		AF0232/ /		RCPT-P6				ALL
	1		W1030	016	12		24-51-52	ALL
	2		W1030	005	12		24-51-21	ALL
	3		W1030	006	12		24-51-21	ALL
	4		W1030	007	12		24-51-21	ALL
	5		W1030	008	16		24-51-21	ALL
	6		W1030	009	16		24-51-21	ALL
	7		W1030	010	16		24-51-21	ALL
	8	UNUSED						ALL
D04090P		AF0232/ /		PLUG-P6				ALL
	1		W0280	001	12		24-51-52	ALL
	2		W0280	005	12		24-51-21	ALL
	3		W0280	006	12		24-51-21	ALL
	4		W0280	007	12		24-51-21	ALL
	5		W0280	008	14		24-51-21	ALL
	6		W0280	009	14		24-51-21	ALL
	7		W0280	010	14		24-51-21	ALL
	8	UNUSED						ALL
D04092J		AF0232/ /		RCPT-P6				ALL
	A		W1030	014	08		24-54-21	ALL
	B		W1030	015	08		24-54-21	ALL
	C		W1030	011	10		24-53-21	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04000

Page 67

Aug 15/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04092J		AF0232/ /		RCPT-P6 (continued)				ALL
	D	UNUSED						ALL
D04092P		AF0232/ /		PLUG-P6				ALL
	A		W0280	002	08		24-54-21	ALL
	B		W0280	003	08		24-54-21	ALL
	C		W0280	004	10		24-53-21	ALL
	D	UNUSED						ALL
D04093J		AE0322/ /		PLUG-COAX,ATC-E2-2				ALL
	= A1		W1905	01CX			34-53-13	ALL
	= C1		W1905	01CO			34-53-13	ALL
D04093P		AE0322/ /		PLUG-COAX,ATC-E2-2				ALL
	= A1		W1063	01CX			34-53-13	ALL
	= C1		W1063	01CO			34-53-13	ALL
D04094J		AF0232/ /		RCPT-P6				ALL
	A		W1040	008	08		24-54-71	ALL
	B	UNUSED						ALL
	C	UNUSED						ALL
	D	UNUSED						ALL
D04094P		AF0232/ /		PLUG-P6				ALL
	A		W0278	006	08		24-54-71	ALL
	B	UNUSED						ALL
	C	UNUSED						ALL
	D	UNUSED						ALL
D04096J		AF0232/ /		RCPT-P6				ALL
	1		W1040	022	22		24-51-31	ALL
	2		W1040	042	24		24-51-31	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D04000

Page 68

Aug 15/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04096J		AF0232/ /		RCPT-P6 (continued)				ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14		W1040	018	14		24-54-73	ALL
	15	UNUSED						ALL
	16		W1040	017	12		24-54-73	ALL
	17	UNUSED						ALL
	18		W1040	021	18		24-51-31	ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
D04096P		AF0232/ /		PLUG-P6				ALL
	1		W0278	003	22		24-51-31	ALL
	2		W0278	005	24		24-51-31	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14		W0278	004	14		24-54-73	ALL
	15	UNUSED						ALL
	16		W0278	001	12		24-54-73	ALL
	17	UNUSED						ALL
	18		W0278	002	18		24-51-31	ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D04000

Page 69

Aug 15/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04096P		AF0232/ /		PLUG-P6 (continued)				ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
D04097J		AE0322/ /		RECPT-E2-3 COAX,ATC TOP E2-3				ALL
	= A1		W1903	01CX			34-53-13	ALL
	= C1		W1903	01CO			34-53-13	ALL
D04097P		AE0322/ /		PLUG-COAX,ATC-E2-3				ALL
	= A1		W1099	01CX			34-53-13	ALL
	= C1		W1099	01CO			34-53-13	ALL
D04099J		0448/320/0000		RCPT-COAX,ATC R,TOP PROD.BRK				ALL
	= A1		W0333	01CX			34-53-13	ALL
	= C1		W0333	01CO			34-53-13	ALL
D04099P		0448/320/0000		PLUG-COAX,ATC R,TOP PROD.BRK				ALL
	= A1		W0335	01CX			34-53-13	ALL
	= C1		W0335	01CO			34-53-13	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04000
Page 70 End
Aug 15/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04101J		AE0322/ /		RCPT-E2-2 COAX,DME L				ALL
	= A1		W0337	01CX			34-55-11	ALL
	= C1		W0337	01CO			34-55-11	ALL
D04101P		AE0322/ /		PLUG-E2-2 COAX				ALL
	= A1		W1067	01CX			34-55-11	ALL
	= C1		W1067	01CO			34-55-11	ALL
D04103J		0570/110/0000		RCPT-COAX,DME L				ALL
	= A1		W0337	01CX			34-55-11	ALL
	= C1		W0337	01CO			34-55-11	ALL
D04103P		0570/110/0000		PLUG-COAX,DME L				050-099
D04103P		0570/114/0000		PLUG-COAX,DME L				150-199, 275-299
	= A1		W0339	01CX			34-55-11	ALL
	= C1		W0339	01CO			34-55-11	ALL
D04105J		AE0322/ /		RCPT-E2-3 COAX,DME R				ALL
	= A1		W0341	01CX			34-55-21	ALL
	= C1		W0341	01CO			34-55-21	ALL
D04105P		AE0322/ /		PLUG-E2-3 COAX,DME				ALL
	= A1		W1071	01CX			34-55-21	ALL
	= C1		W1071	01CO			34-55-21	ALL
D04107J		0665/107/0000		RCPT-COAX,DME R				050-099
D04107J		654+21/107/0000		RCPT-COAX,DME R				150-199, 275-299
	= A1		W0341	01CX			34-55-21	ALL
	= C1		W0341	01CO			34-55-21	ALL
D04107P		0665/107/0000		PLUG-COAX,DME R				050-099
D04107P		0654+22/107/0000		PLUG-COAX,DME R				150-199, 275-299
	= A1		W0343	01CX			34-55-21	ALL
	= C1		W0343	01CO			34-55-21	ALL
D04109J		AC0604/ /		RCPT-E5-1				ALL
	1		W0345	WRD	24		34-57-11	ALL
	2		W0345	WBU	24		34-57-11	ALL
	3		W0345	WRDZ			34-57-11	ALL
	4		W0345	WYL	24		34-57-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04100

Page 1

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04109J		AC0604/ /		RCPT-E5-1 (continued)				ALL
	5		W0345	WGR	24		34-57-11	ALL
	6		W0345	WYLZ			34-57-11	ALL
	7		W0345	WVI	24		34-57-11	ALL
	8		W0345	WBK	24		34-57-11	ALL
	9		W0345	WVIZ			34-57-11	ALL
	10		W0345	WOR	22		34-57-11	ALL
	11		W0345	WBN	22		34-57-11	ALL
	12		W0345	WHT	20		34-57-11	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
			W0345	FRB			34-57-11	ALL
			W0345	YAA			34-57-11	ALL
D04109P		AC0604/ /		PLUG-E5-1				ALL
	1		W0165	222BN	24		34-57-11	ALL
	2		W0165	222B	24		34-57-11	ALL
	3		W0165	222Z			34-57-11	ALL
	4		W0165	223BN	24		34-57-11	ALL
	5		W0165	223B	24		34-57-11	ALL
	6		W0165	223Z			34-57-11	ALL
	7		W0165	224BN	24		34-57-11	ALL
	8		W0165	224B	24		34-57-11	ALL
	9		W0165	224Z			34-57-11	ALL
	10		W0165	225R	22		34-57-11	ALL
	11		W0165	225B	22		34-57-11	ALL
	12		W0165	024	22		34-57-11	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D04100
Page 2
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04109P		AC0604/ /		PLUG-E5-1 (continued)				ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D04110J		AE0306/ /		RCPT-E2-4				ALL
	1		W0214	003	24		24-22-12	ALL
	2		W0214	004	24		24-22-12	ALL
	3		W0214	005	24		24-51-13	ALL
	4		W0214	024	20		SPARE	ALL
	5		W0214	025	22		25-31-21	ALL
	6	UNUSED						ALL
	7		W0214	027	22		25-31-21	ALL
	8		W0214	107	24		29-11-22	ALL
	9		W0214	113	24		24-11-11	ALL
	10		W0214	206B	24		24-22-12	ALL
	11		W0214	206R	24		24-22-12	ALL
	12		W0214	206Z			24-22-12	ALL
	13		W0214	108	24		29-11-31	ALL
	14		W0214	063	22		29-11-31	ALL
	15		W0214	048	24		24-27-21	ALL
	16		W0214	049	24		24-27-21	ALL
	17		W0214	050	24		24-27-11	ALL
	18		W0214	056	24		29-11-22	ALL
	19		W0214	038	24		24-51-71	ALL
	20		W0214	066	24		24-22-11	ALL
	21		W0214	067	24		24-51-31	ALL
	22		W0214	068	20		24-22-12	ALL
	23		W0214	069	24		24-51-31	ALL
	24		W0214	070	24		24-22-12	ALL
	25		W0214	071	24		24-51-31	ALL
	26		W0214	072	20		24-22-12	ALL
	27		W0214	073	24		24-51-31	ALL
	28		W0214	074	20		24-22-22	ALL
	29		W0214	075	20		24-22-22	ALL
	30		W0214	076	24		24-22-12	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04100

Page 3

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04110J		AE0306/ /		RCPT-E2-4 (continued)				ALL
	31		W0214	037	24		24-51-71	ALL
	32		W0214	077	24		29-11-31	ALL
	33		W0214	078	24		29-11-31	ALL
	34		W0214	079	24		29-11-31	ALL
	35		W0214	039	24		24-51-71	ALL
	36	UNUSED						ALL
	37		W0214	142	24		29-11-22	ALL
	38		W0214	064	24		31-31-26	ALL
	39		W0214	087	24		31-31-26	ALL
	40	UNUSED						ALL
	41		W0214	102	20		SPARE	ALL
	DED		W0214	063Z			29-11-31	ALL
	DED		W0214	064Z			31-31-26	ALL
	DED		W0214	077Z			29-11-31	ALL
	DED		W0214	078Z			29-11-31	ALL
	DED		W0214	079Z			29-11-31	ALL
	DED		W0214	108Z			29-11-31	ALL
D04110P		AE0306/ /		PLUG-E2-4				ALL
	1		W0014	081	24		24-22-12	ALL
	2		W0014	082	24		24-22-12	ALL
	3		W0014	502	24		24-51-13	ALL
	4	UNUSED						ALL
	5		W0014	086	22		25-31-21	ALL
	6	UNUSED						ALL
	7		W0014	087	22		25-31-21	050-099, 150-199
	7		W0014	124	22		25-31-21	275-299
	8		W0014	042	24		29-11-22	ALL
	9		W0014	569	24		24-11-11	ALL
	10		W0014	226B	24		24-22-12	ALL
	11		W0014	226R	24		24-22-12	ALL
	12		W0014	226Z			24-22-12	ALL
	13		W0014	224B	22		29-11-31	ALL
	14		W0014	224R	22		29-11-31	ALL
	15		W0014	083	24		24-27-21	ALL
	16		W0014	084	24		24-27-21	ALL
	17		W0014	162	24		24-27-11	ALL
	18		W0014	116	24		29-11-22	ALL
	19		W0014	088	24		24-51-71	ALL
	20		W0014	183	24		24-22-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04100

Page 4

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04110P		AE0306/ /		PLUG-E2-4 (continued)				ALL
	21		W0014	193	24		24-51-31	ALL
	22		W0014	184	20		24-22-12	ALL
	23		W0014	185	24		24-51-31	ALL
	24		W0014	186	24		24-22-12	ALL
	25		W0014	187	24		24-51-31	ALL
	26		W0014	188	20		24-22-12	ALL
	27		W0014	191	24		24-51-31	ALL
	28		W0014	192	20		24-22-22	ALL
	29		W0014	190	20		24-22-22	ALL
	30		W0014	189	24		24-22-12	ALL
	31		W0014	032	24		24-51-71	ALL
	32		W0014	198	24		29-11-31	ALL
	33		W0014	199	24		29-11-31	ALL
	34		W0014	501	24		29-11-31	ALL
	35		W0014	117	24		24-51-71	ALL
	36	UNUSED						ALL
	37		W0014	578	24		29-11-22	ALL
	38		W0014	613	24		31-31-26	ALL
	39		W0014	614	24		31-31-26	ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	DED		W0014	198Z			29-11-31	ALL
	DED		W0014	199Z			29-11-31	ALL
	DED		W0014	224Z			29-11-31	ALL
	DED		W0014	501Z			29-11-31	ALL
	DED		W0014	502Z			24-51-13	ALL
D04112J		AE0204/ /		RCPT-P34				ALL
	1		W0026	034	24		24-22-41	ALL
	2		W0026	035	24		24-41-11	ALL
	3		W0026	036	24		24-41-11	ALL
	4		W0026	037	24		24-41-11	ALL
	5		W0026	038	24		24-41-11	ALL
	6		W0026	039	24		24-41-11	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9		W0026	042	24		24-27-21	ALL
	10		W0026	043	20		24-22-41	ALL
	11		W0026	044	20		24-22-41	ALL
	12		W0026	045	20		24-22-41	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04100

Page 5

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04112J		AE0204/ /		RCPT-P34 (continued)				ALL
	13		W0026	046	20		24-41-11	ALL
	14		W0026	047	24		24-51-61	ALL
	15		W0026	048	24		24-51-61	ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21		W0026	019	24		24-41-12	ALL
	22	UNUSED						050-099
	22		W0026	091	20		24-32-41	150-199, 275-299
	23	UNUSED						ALL
	24	UNUSED						ALL
	25		W0026	005	22		49-61-11	ALL
	26		W0026	006	22		49-61-11	ALL
	27		W0026	007	22		49-61-11	ALL
	28		W0026	008	22		49-61-11	ALL
	29		W0026	012	22		49-61-11	ALL
	30	UNUSED						ALL
	31		W0026	100	24		24-27-41	ALL
	32		W0026	104	24		24-27-41	ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36		W0026	021	24		24-51-51	ALL
	37		W0026	401B	24		24-23-11	ALL
	38		W0026	401G	24		24-23-11	ALL
	39		W0026	401R	24		24-23-11	ALL
	40		W0026	401Y	24		24-23-11	ALL
	41		W0026	402B	24		24-41-11	ALL
	42		W0026	402G	24		24-41-11	ALL
	43		W0026	402R	24		24-41-11	ALL
	44		W0026	402Y	24		24-41-11	ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47		W0026	111	24		24-51-71	ALL
	48		W0026	108	24		24-51-71	ALL
	49		W0026	097	22		49-61-11	ALL
	50	UNUSED						ALL
	51	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D04100

Page 6

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04112J		AE0204/ /		RCPT-P34 (continued)				ALL
	52	UNUSED						ALL
	53		W0026	082	24		24-41-11	ALL
	54		W0026	083	24		24-41-11	ALL
	55	UNUSED						ALL
D04112P		AE0204/ /		PLUG-P34				ALL
	1		W0240	034	24		24-22-41	ALL
	2		W0240	035	24		24-41-11	ALL
	3		W0240	036	24		24-41-11	ALL
	4		W0240	037	24		24-41-11	ALL
	5		W0240	038	24		24-41-11	ALL
	6		W0240	039	24		24-41-11	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9		W0240	042	24		24-27-21	ALL
	10		W0240	043	20		24-22-41	ALL
	11		W0240	044	20		24-22-41	ALL
	12		W0240	045	20		24-22-41	ALL
	13		W0240	046	20		24-41-11	ALL
	14		W0240	047	24		24-51-61	ALL
	15		W0240	048	24		24-51-61	ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21		W0240	019	24		24-41-12	ALL
	22	UNUSED						050-099, 150-199
	22		W0240	065	20		24-32-41	275-299
	23	UNUSED						ALL
	24	UNUSED						ALL
	25		W0240	021	22		49-61-11	ALL
	26		W0240	022	22		49-61-11	ALL
	27		W0240	023	22		49-61-11	ALL
	28		W0240	024	22		49-61-11	ALL
	29		W0240	025	22		49-61-11	ALL
	30		W0240	076	22		SPARE	ALL
	31		W0240	074	24		24-27-41	ALL
	32		W0240	075	24		24-27-41	ALL
	33	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D04100

Page 7

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04112P		AE0204/ /		PLUG-P34 (continued)				ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36		W0240	049	24		24-51-51	ALL
	37		W0240	401B	24		24-23-11	ALL
	38		W0240	401G	24		24-23-11	ALL
	39		W0240	401R	24		24-23-11	ALL
	40		W0240	401Y	24		24-23-11	ALL
	41		W0240	402B	24		24-41-11	ALL
	42		W0240	402G	24		24-41-11	ALL
	43		W0240	402R	24		24-41-11	ALL
	44		W0240	402Y	24		24-41-11	ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47		W0240	056	24		24-51-71	ALL
	48		W0240	052	24		24-51-71	ALL
	49		W0240	054	22		49-61-11	ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53		W0240	057	24		24-41-11	ALL
	54		W0240	058	24		24-41-11	ALL
	55	UNUSED						ALL
D04113J		AC0604/ /		RCPT-E5-1				ALL
	1		W0349	WRD	24		34-57-21	ALL
	2		W0349	WBU	24		34-57-21	ALL
	3		W0349	WRDZ			34-57-21	ALL
	4		W0349	WYL	24		34-57-21	ALL
	5		W0349	WGR	24		34-57-21	ALL
	6		W0349	WYLZ			34-57-21	ALL
	7		W0349	WVI	24		34-57-21	ALL
	8		W0349	WBK	24		34-57-21	ALL
	9		W0349	WVIZ			34-57-21	ALL
	10		W0349	WOR	22		34-57-21	ALL
	11		W0349	WBN	22		34-57-21	ALL
	12		W0349	WHT	20		34-57-21	ALL
			W0349	FRB			34-57-21	ALL
			W0349	YAA			34-57-21	ALL

HOOKUP LIST
D280T132

91-21-51
Section D04100
Page 8
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04113P		AC0604/ /		PLUG-E5-1				ALL
	1		W0175	222BN	24		34-57-21	ALL
	2		W0175	222B	24		34-57-21	ALL
	3		W0175	222Z			34-57-21	ALL
	4		W0175	223BN	24		34-57-21	ALL
	5		W0175	223B	24		34-57-21	ALL
	6		W0175	223Z			34-57-21	ALL
	7		W0175	224BN	24		34-57-21	ALL
	8		W0175	224B	24		34-57-21	ALL
	9		W0175	224Z			34-57-21	ALL
	10		W0175	225R	22		34-57-21	ALL
	11		W0175	225B	22		34-57-21	ALL
	12		W0175	024	22		34-57-21	ALL
D04114J		AE0307/ /		RCPT-E2-4				ALL
	1		W0240	033	18		24-22-41	ALL
	2		W0240	301B	18		24-21-41	ALL
	3		W0240	301R	18		24-21-41	ALL
	4		W0240	301Y	18		24-21-41	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
D04114P		AE0307/ /		PLUG-E2-4				ALL
	1		W0018	044	18		24-22-41	ALL
	2		W0018	302B	18		24-21-41	ALL
	3		W0018	302R	18		24-21-41	ALL
	4		W0018	302Y	18		24-21-41	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	DED		W0018	044Z			24-22-41	ALL
	DED		W0018	302Z			24-21-41	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04100

Page 9

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04116J		AE0222/ /		RCPT-P6				ALL
	1		W1026	001	14		24-32-11	ALL
	2		W1026	002	14		24-32-11	ALL
	3		W1026	003	14		24-32-11	ALL
	4	UNUSED						ALL
D04116P		AE0222/ /		PLUG-P6				ALL
	1		W0252	001	14		24-32-11	ALL
	2		W0252	002	14		24-32-11	ALL
	3		W0252	003	14		24-32-11	ALL
	4	UNUSED						ALL
D04118J		AE0222/ /		RCPT-P6				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W0028	202B	24		24-34-11	ALL
	4		W0028	202R	24		24-34-11	ALL
	5	UNUSED						ALL
D04118P		AE0222/ /		PLUG-P6				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	DK	W0252	201B	18		24-34-11	ALL
	4	DK	W0252	201R	18		24-34-11	ALL
	5	UNUSED						ALL
D04120J		AE0222/ /		RCPT-P6				ALL
	1		W1030	001	14		24-32-11	ALL
	2		W1030	002	14		24-32-11	ALL
	3		W1030	003	14		24-32-11	ALL
	4	UNUSED						ALL
D04120P		AE0222/ /		PLUG-P6				ALL
	1		W0254	001	14		24-32-11	ALL
	2		W0254	002	14		24-32-11	ALL
	3		W0254	003	14		24-32-11	ALL
	4	UNUSED						ALL
D04121J		1510/283/L030		RCPT-				050-099, 150-199
	1		W0665	002	22		23-42-11	050-099, 150-199

HOOKUP LIST
D280T132

91-21-51
Section D04100
Page 10
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04121J		1510/283/L030		RCPT- (continued)				050-099, 150-199
	2		W0665	016	24		23-34-13	050-099, 150-199
	3		W0665	023	22		33-25-11	050-099, 150-199
	4		W0665	034	20		23-42-11	050-099, 150-199
	5	UNUSED						050-099, 150-199
D04121P		1510/283/L030		PLUG-				050-099, 150-199
	1		W1123	051	22		23-42-11	050-099, 150-199
	2		W1123	052	22		23-34-13	050-099, 150-199
	3		W1123	053	22		33-25-11	050-099, 150-199
	4		W1123	054	20		23-42-11	050-099, 150-199
	5	UNUSED						050-099, 150-199
D04122J		AE0222/ /		RCPT-P6				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W0028	203B	24		24-34-11	ALL
	4		W0028	203R	24		24-34-11	ALL
	5	UNUSED						ALL
D04122P		AE0222/ /		PLUG-P6				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	DK	W0254	201B	18		24-34-11	ALL
	4	DK	W0254	201R	18		24-34-11	ALL
	5	UNUSED						ALL
D04123J		1510/283/R030		RCPT-				050-099, 150-199
	1		W0665	001	22		23-42-11	050-099, 150-199
	2		W0665	013	24		23-34-13	050-099, 150-199
	3		W0665	022	22		33-25-11	050-099, 150-199
	4		W0665	035	20		23-42-11	050-099, 150-199
	5	UNUSED						050-099, 150-199
D04123P		1510/283/R030		PLUG-				050-099, 150-199
	1		W1125	051	22		23-42-11	050-099, 150-199
	2		W1125	052	22		23-34-13	050-099, 150-199
	3		W1125	053	22		33-25-11	050-099, 150-199
	4		W1125	054	20		23-42-11	050-099, 150-199
	5	UNUSED						050-099, 150-199

HOOKUP LIST

D280T132

91-21-51

Section D04100

Page 11

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04124J		AF0232/ /		RCPT-P6				ALL
	1		W1040	026	14		24-33-11	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
D04124P		AF0232/ /		PLUG-P6				ALL
	1		W0256	010	14		24-33-11	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	DED		W0256	010Z			24-33-11	ALL
D04126J		AF0232/ /		RCPT-P6				ALL
	1		W0028	066	24		24-31-11	ALL
	2	UNUSED						ALL
	3		W0028	040	24		24-31-11	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W0028	150	24		24-34-11	ALL
	8		W0028	160	24		24-34-11	ALL
	9		W0028	163	24		24-34-11	ALL
	10		W0028	145	24		24-34-11	ALL
	11		W0028	201B	24		24-34-11	ALL
	12		W0028	201R	24		24-34-11	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D04100
Page 12
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04126P		AF0232/ /		PLUG-P6				ALL
	1		W0256	001	24		24-31-11	ALL
	2	UNUSED						ALL
	3		W0256	014	24		24-31-11	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W0256	003	24		24-34-11	ALL
	8		W0256	004	24		24-34-11	ALL
	9		W0256	011	24		24-34-11	ALL
	10		W0256	019	24		24-34-11	ALL
	11		W0256	201B	24		24-34-11	ALL
	12		W0256	201R	24		24-34-11	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D04128J		AE0203/ /		RCPT-P33				ALL
	1		W0142	684	20		24-31-11	ALL
	2		W0142	685	20		24-31-11	ALL
	3		W0142	686	20		24-31-11	ALL
	4	UNUSED						ALL
D04128P		AE0203/ /		PLUG-P33				ALL
	1		W0256	301B	20		24-31-11	ALL
	2		W0256	301R	20		24-31-11	ALL
	3		W0256	301Y	20		24-31-11	ALL
	4	UNUSED						ALL
	DED		W0256	301Z			24-31-11	ALL

HOOKUP LIST
D280T132

91-21-51
Section D04100
Page 13
Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04130J		AC1402/ /		RCPT-E6				ALL
	1		W0238	001	18		24-31-41	ALL
	2		W0238	002	18		24-31-41	ALL
	3		W0238	003	18		24-31-41	ALL
	4	UNUSED						ALL
D04130P		AC1402/ /		PLUG-E6				ALL
	1		W0030	057	18		24-31-41	ALL
	2		W0030	058	18		24-31-41	ALL
	3		W0030	075	18		24-31-41	ALL
	4	UNUSED						ALL
D04131J		AE0107/ /		RCPT-				ALL
	1		W1281	204R	22		27-61-15	ALL
	2		W1281	204B	22		27-61-15	ALL
	3		W1281	302R	22		27-61-15	ALL
	4		W1281	302B	22		27-61-15	ALL
	5		W1281	302Y	22		27-61-15	ALL
	6		W1281	002	20		27-61-15	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D04131P		AE0107/ /		PLUG-				ALL
	1		W5150	M-A			27-61-15	ALL
	2		W5150	M-B			27-61-15	ALL
	3		W5150	M-C			27-61-15	ALL
	4		W5150	M-D			27-61-15	ALL
	5		W5150	M-E			27-61-15	ALL
	6		W5150	M-F			27-61-15	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D04100
Page 14
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04133J		AE0107/ /		RCPT-				ALL
	1		W1283	204R	22		27-61-14	ALL
	2		W1283	204B	22		27-61-14	ALL
	3		W1283	302R	22		27-61-14	ALL
	4		W1283	302B	22		27-61-14	ALL
	5		W1283	302Y	22		27-61-14	ALL
	6		W1283	002	20		27-61-14	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D04133P		AE0107/ /		PLUG-				ALL
	1		W5150	P-A			27-61-14	ALL
	2		W5150	P-B			27-61-14	ALL
	3		W5150	P-C			27-61-14	ALL
	4		W5150	P-D			27-61-14	ALL
	5		W5150	P-E			27-61-14	ALL
	6		W5150	P-F			27-61-14	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D04134J		AE0203/ /		RCPT-P33				ALL
	1		W0052	004	18		24-31-41	ALL
	2		W0052	005	18		24-31-41	ALL
	3		W0052	006	18		24-31-41	ALL
	4	UNUSED						ALL
D04134P		AE0203/ /		PLUG-P33				ALL
	1		W0238	001	18		24-31-41	ALL
	2		W0238	002	18		24-31-41	ALL
	3		W0238	003	18		24-31-41	ALL
	4	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D04100

Page 15

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04135J		AE0107/ /		RCPT-				ALL
	1		W1285	204R	22		27-61-16	ALL
	2		W1285	204B	22		27-61-16	ALL
	3		W1285	302R	22		27-61-16	ALL
	4		W1285	302B	22		27-61-16	ALL
	5		W1285	302Y	22		27-61-16	ALL
	6		W1285	002	20		27-61-16	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D04135P		AE0107/ /		PLUG-				ALL
	1		W5150	S-A			27-61-16	ALL
	2		W5150	S-B			27-61-16	ALL
	3		W5150	S-C			27-61-16	ALL
	4		W5150	S-D			27-61-16	ALL
	5		W5150	S-E			27-61-16	ALL
	6		W5150	S-F			27-61-16	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D04137J		AE0107/ /		RCPT-				ALL
	1		W1291	204R	22		27-61-17	ALL
	2		W1291	204B	22		27-61-17	ALL
	3		W1291	302R	22		27-61-17	ALL
	4		W1291	302B	22		27-61-17	ALL
	5		W1291	302Y	22		27-61-17	ALL
	6		W1291	002	20		27-61-17	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D04100

Page 16

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04137J		AE0107/ /		RCPT- (continued)				ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
D04137P		AE0107/ /		PLUG-				ALL
	1		W5150	N-A			27-61-17	ALL
	2		W5150	N-B			27-61-17	ALL
	3		W5150	N-C			27-61-17	ALL
	4		W5150	N-D			27-61-17	ALL
	5		W5150	N-E			27-61-17	ALL
	6		W5150	N-F			27-61-17	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
D04138J		AV1801/ /		RCPT-APU FIREWALL				ALL
	A		W0246	001	*1		49-41-11	ALL
	B		W0246	002	*1		49-41-11	ALL
	C		W0246	003	*1		49-41-11	ALL
	D		W0246	004	*1		49-41-11	ALL
D04138P		AV1801/ /		PLUG-APU FIREWALL				ALL
	A		W0244	001	*1		49-41-11	ALL
	B		W0244	002	*1		49-41-11	ALL
	C		W0244	003	*1		49-41-11	ALL
	D		W0244	004	*1		49-41-11	ALL
D04139J		AE0107/ /		RCPT-				ALL
	1		W1293	204R	22		27-61-13	ALL
	2		W1293	204B	22		27-61-13	ALL
	3		W1293	302R	22		27-61-13	ALL
	4		W1293	302B	22		27-61-13	ALL
	5		W1293	302Y	22		27-61-13	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04100

Page 17

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04139J		AE0107/ /		RCPT- (continued)				ALL
	6		W1293	002	20		27-61-13	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
D04139P		AE0107/ /		PLUG-				ALL
	1		W5150	R-A			27-61-13	ALL
	2		W5150	R-B			27-61-13	ALL
	3		W5150	R-C			27-61-13	ALL
	4		W5150	R-D			27-61-13	ALL
	5		W5150	R-E			27-61-13	ALL
	6		W5150	R-F			27-61-13	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
D04141J		AE0107/ /		RCPT-				ALL
	1		W1295	204R	22		27-61-18	ALL
	2		W1295	204B	22		27-61-18	ALL
	3		W1295	302R	22		27-61-18	ALL
	4		W1295	302B	22		27-61-18	ALL
	5		W1295	302Y	22		27-61-18	ALL
	6		W1295	002	20		27-61-18	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D04100
Page 18
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04141J		AE0107/ /		RCPT- (continued)				ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
D04141P		AE0107/ /		PLUG-				ALL
	1		W5150	T-A			27-61-18	ALL
	2		W5150	T-B			27-61-18	ALL
	3		W5150	T-C			27-61-18	ALL
	4		W5150	T-D			27-61-18	ALL
	5		W5150	T-E			27-61-18	ALL
	6		W5150	T-F			27-61-18	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
D04147J		AF0119/ /		RCPT-RMI-LP1 PNL				ALL
	1		W0391	201R	24		34-22-81	ALL
	2		W0391	201B	24		34-22-81	ALL
	3		W0391	FRC			34-22-81	ALL
	4		W0391	004	22		34-22-17	ALL
	5		W0391	005	22		34-32-11	ALL
	6		W0391	006	22		34-32-11	ALL
	7		W0391	007	22		34-32-11	ALL
	8	UNUSED						050-099, 155-199, 275-299
	8		W0391	202R	24		SPARE	150-154
	9	UNUSED						050-099, 155-199, 275-299
	9		W0391	202B	24		SPARE	150-154
	10	UNUSED						050-099, 155-199, 275-299
	10		W0391	202Z			SPARE	150-154
	11		W0391	203R	24		SPARE	ALL
	12		W0391	203B	24		SPARE	ALL
	13		W0391	204R	24		31-25-11	ALL
	14		W0391	204B	24		31-25-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04100

Page 19

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04147J		AF0119/ /		RCPT-RMI-LP1 PNL (continued)				ALL
	15		W0391	FRA			31-25-11	ALL
	16		W0391	203Z			SPARE	ALL
	17		W0391	205R	24		SPARE	ALL
	18		W0391	205B	24		SPARE	ALL
	19		W0391	FRB			SPARE	ALL
	20		W0391	008	24		34-61-11	ALL
	21		W0391	002	24		31-31-13	ALL
	22		W0391	003	24		31-31-13	ALL
	23	UNUSED						050-099, 155-199, 275-299
	23		W0391	207R	24		SPARE	150-154
	24	UNUSED						050-099, 155-199, 275-299
	24		W0391	207B	24		SPARE	150-154
	25	UNUSED						050-099, 155-199, 275-299
	25		W0391	207Z			SPARE	150-154
	26		W0391	206B	24		SPARE	ALL
	27		W0391	206R	24		SPARE	ALL
	28		W0391	206Z			SPARE	ALL
	29		W0391	208R	22		34-12-21	ALL
	30		W0391	208B	22		34-12-21	ALL
	31		W0391	301R	24		34-12-21	ALL
	32		W0391	301B	24		34-12-21	ALL
	33		W0391	301Y	24		34-12-21	ALL
	34		W0391	040	24		SPARE	ALL
	35		W0391	041	24		SPARE	ALL
	36		W0391	045	22		34-22-38	ALL
	37		W0391	037	24		34-12-61	ALL
	38	UNUSED						ALL
	39		W0391	039	24		34-12-61	ALL
	40	UNUSED						ALL
	41		W0391	042	24		34-61-15	ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	44		W0391	014	24		SPARE	050-099 150-199, 275-299
	44	UNUSED						050-099 150-199, 275-299
	45		W0391	015	22		SPARE	050-099 150-199, 275-299
	45	UNUSED						050-099 150-199, 275-299
	46		W0391	016	24		SPARE	050-099 150-199, 275-299
	46	UNUSED						050-099 150-199, 275-299
	47		W0391	017	24		SPARE	050-099 150-199, 275-299
	47	UNUSED						050-099 150-199, 275-299

HOOKUP LIST
D280T132

91-21-51
Section D04100
Page 20
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04147J		AF0119/ /		RCPT-RMI-LP1 PNL (continued)				ALL
	48		W0391	018	24		SPARE	050-099
	48	UNUSED						150-199, 275-299
	49		W0391	209R	24		SPARE	050-099
	49	UNUSED						150-199, 275-299
	50		W0391	209B	24		SPARE	050-099
	50	UNUSED						150-199, 275-299
	51		W0391	FRD			SPARE	050-099
	51	UNUSED						150-199, 275-299
	52		W0391	010	24		SPARE	050-099
	52	UNUSED						150-199, 275-299
	53		W0391	011	24		SPARE	050-099
	53	UNUSED						150-199, 275-299
	54	UNUSED						ALL
	55	UNUSED						ALL
			W0391	209	20		SPARE	050-099
			W0391	209Z			SPARE	050-099
			W0391	FRD			SPARE	050-099
			W0391	201	20		34-22-81	ALL
			W0391	201Z			34-22-81	ALL
			W0391	204	20		31-25-11	ALL
			W0391	204Z			31-25-11	ALL
			W0391	205	20		SPARE	ALL
			W0391	205Z			SPARE	ALL
			W0391	FRA			31-25-11	ALL
			W0391	FRB			SPARE	ALL
			W0391	FRC			34-22-81	ALL
D04147P		AF0119/ /		PLUG-P1				ALL
	1		W0011	212R	24		34-22-81	ALL
	2		W0011	212B	24		34-22-81	ALL
	3		W0011	212Z			34-22-81	ALL
	4		W0011	020	22		34-22-17	ALL
	5		W0011	102	22		34-32-11	ALL
	6		W0011	103	22		34-32-11	ALL
	7		W0011	104	22		34-32-11	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D04100

Page 21

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04147P		AF0119/ /		PLUG-P1 (continued)				ALL
	13		W0011	235R	24		31-25-11	ALL
	14		W0011	235B	24		31-25-11	ALL
	15		W0011	235Z			31-25-11	ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20		W0011	831	24		34-61-16	ALL
	21		W0011	827	24		31-31-13	ALL
	22		W0011	828	24		31-31-13	ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29		W0011	204R	22		34-12-21	ALL
	30		W0011	204B	22		34-12-21	ALL
	31		W0011	308R	24		34-12-21	ALL
	32		W0011	308B	24		34-12-21	ALL
	33		W0011	308Y	24		34-12-21	ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36		W0011	804	22		34-22-38	ALL
	37		W0011	143	24		34-12-61	ALL
	38	UNUSED						ALL
	39		W0011	109	22		34-12-61	ALL
	40	UNUSED						ALL
	41		W0011	801	24		34-61-15	ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D04100

Page 22

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04147P		AF0119/ /		PLUG-P1 (continued)				ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
D04148J		AW0305/ /		RCPT-ENGINE FIREWALL,LH				ALL
	1		W0378	454R	16		26-11-22	ALL
	2		W0378	455R	16		26-11-21	ALL
	3		W0378	456R	16		26-11-21	ALL
	4		W0378	457R	16		26-11-22	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
D04150J		AW0306/ /		RCPT-ENGINE FIREWALL,RH				ALL
	1		W0376	085	18		36-23-21	ALL
	2		W0376	086	18		36-23-21	ALL
	3		W0376	087	18		36-23-21	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9		W0376	044	18		SPARE	ALL
	10	UNUSED						ALL
D04151J		AE0306/ /		RCPT-E2-2				ALL
	1		W0391	042	24		34-61-15	ALL
	2		W0391	002	24		31-31-13	ALL
	3		W0391	003	24		31-31-13	ALL
	4		W0391	004	22		34-22-17	ALL
	5		W0391	005	22		34-32-11	ALL
	6		W0391	006	22		34-32-11	ALL
	7		W0391	007	22		34-32-11	ALL
	8	UNUSED						050-099, 155-199, 275-299
	8		W0391	202R	24		SPARE	150-154
	9	UNUSED						050-099, 155-199, 275-299
	9		W0391	202B	24		SPARE	150-154
	10	UNUSED						050-099, 155-199, 275-299
	10		W0391	202Z			SPARE	150-154
	11		W0391	203R	24		SPARE	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04100

Page 23

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04151J		AE0306/ /		RCPT-E2-2 (continued)				ALL
	12		W0391	203B	24		SPARE	ALL
	13		W0391	204R	24		31-25-11	ALL
	14		W0391	204B	24		31-25-11	ALL
	15		W0391	204Z			31-25-11	ALL
	16		W0391	203Z			SPARE	ALL
	17		W0391	205R	24		SPARE	ALL
	18		W0391	205B	24		SPARE	ALL
	19		W0391	205Z			SPARE	ALL
	20		W0391	008	24		34-61-11	ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						050-099, 155-199, 275-299
	23		W0391	207R	24		SPARE	150-154
	24	UNUSED						050-099, 155-199, 275-299
	24		W0391	207B	24		SPARE	150-154
	25	UNUSED						050-099, 155-199, 275-299
	25		W0391	207Z			SPARE	150-154
	26		W0391	206B	24		SPARE	ALL
	27		W0391	206R	24		SPARE	ALL
	28		W0391	206Z			SPARE	ALL
	29		W0391	208R	22		34-12-21	ALL
	30		W0391	208B	22		34-12-21	ALL
	31		W0391	301R	24		34-12-21	ALL
	32		W0391	301B	24		34-12-21	ALL
	33		W0391	301Y	24		34-12-21	ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36		W0391	045	22		34-22-38	ALL
	37		W0391	037	24		34-12-61	ALL
	38	UNUSED						ALL
	39		W0391	039	24		34-12-61	ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
D04151P		AE0306/ /		PLUG-E2-2				ALL
	1		W0133	098	24		34-61-15	ALL
	2		W0133	151	24		31-31-13	ALL
	3		W0133	152	24		31-31-13	ALL
	4		W0133	026	22		34-22-17	ALL
	5		W0133	165	22		34-32-11	ALL

HOOKUP LIST
D280T132

91-21-51
Section D04100
Page 24
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04151P		AE0306/ /		PLUG-E2-2 (continued)				ALL
	6		W0133	166	22		34-32-11	ALL
	7		W0133	167	22		34-32-11	ALL
	8	UNUSED						050-099, 155-199, 275-299
	8		W0133	277R	24		SPARE	150-154
	9	UNUSED						050-099, 155-199, 275-299
	9		W0133	277B	24		SPARE	150-154
	10	UNUSED						050-099, 155-199, 275-299
	10		W0133	277Z			SPARE	150-154
	11	UNUSED						ALL
	12	UNUSED						ALL
	13		W0133	250R	24		31-25-11	ALL
	14		W0133	250B	24		31-25-11	ALL
	15		W0133	250Z			31-25-11	ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20		W0133	003	24		34-61-11	ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						050-099, 155-199, 275-299
	23		W0133	276R	24		SPARE	150-154
	24	UNUSED						050-099, 155-199, 275-299
	24		W0133	276B	24		SPARE	150-154
	25	UNUSED						050-099, 155-199, 275-299
	25		W0133	276Z			SPARE	150-154
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29		W0133	229R	22		34-12-21	ALL
	30		W0133	229B	22		34-12-21	ALL
	31		W0133	303R	24		34-12-21	ALL
	32		W0133	303B	24		34-12-21	ALL
	33		W0133	303Y	24		34-12-21	ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36		W0133	746	22		34-22-38	ALL
	37		W0133	048	24		34-12-61	ALL
	38	UNUSED						ALL
	39		W0133	102	24		31-31-12	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04100

Page 25

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04151P		AE0306/ /		PLUG-E2-2 (continued)				ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
D04153J		AC0604/ /		RCPT-ADF-L				ALL
	1		W0391	201R	24		34-22-81	ALL
	2		W0391	201B	24		34-22-81	ALL
	3		W0391	201Z			34-22-81	ALL
	4		W0391	014	24		SPARE	050-099
	4	UNUSED						150-199, 275-299
	5		W0391	015	22		SPARE	050-099
	5	UNUSED						150-199, 275-299
	6		W0391	016	24		SPARE	050-099
	6	UNUSED						150-199, 275-299
	7		W0391	017	24		SPARE	050-099
	7	UNUSED						150-199, 275-299
	8		W0391	018	24		SPARE	050-099
	8	UNUSED						150-199, 275-299
	9		W0391	209R	24		SPARE	050-099
	9	UNUSED						150-199, 275-299
	10		W0391	209B	24		SPARE	050-099
	10	UNUSED						150-199, 275-299
	11		W0391	209Z			SPARE	050-099
	11	UNUSED						150-199, 275-299
	12	UNUSED						ALL
	13	UNUSED						ALL
	14		W0391	040	24		SPARE	ALL
	15		W0391	041	24		SPARE	ALL
	16		W0391	010	24		SPARE	050-099
	17		W0391	011	24		SPARE	050-099
	18	UNUSED						050-099
	19	UNUSED						050-099
	20	UNUSED						050-099
	21	UNUSED						050-099
	22	UNUSED						050-099
	23	UNUSED						050-099
	24	UNUSED						050-099
D04153P		AC0604/ /		PLUG-E5-1				ALL
	1		W0165	231R	24		34-22-81	ALL
	2		W0165	231B	24		34-22-81	ALL

HOOKUP LIST
D280T132

91-21-51
Section D04100
Page 26
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04153P		AC0604/ /		PLUG-E5-1 (continued)				ALL
	3		W0165	231Z			34-22-81	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						050-099
	17	UNUSED						050-099
	18	UNUSED						050-099
	19	UNUSED						050-099
	20	UNUSED						050-099
	21	UNUSED						050-099
	22	UNUSED						050-099
	23	UNUSED						050-099
	24	UNUSED						050-099
D04154J		AW0305/ /		RCPT-ENGINE FIREWALL,LH				ALL
	1		W0360	454R	16		26-11-12	ALL
	2		W0360	455R	16		26-11-11	ALL
	3		W0360	456R	16		26-11-11	ALL
	4		W0360	457R	16		26-11-12	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
D04154P		AW0305/ /		PLUG-ENGINE FIREWALL,L/H				ALL
	1		W3520	451R	16		26-11-12	ALL
	2		W3520	452R	16		26-11-11	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D04100
Page 27
Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04156J		AW0306/ /		RCPT-ENGINE FIREWALL,RH				ALL
	1		W0356	085	18		36-23-11	ALL
	2		W0356	086	18		36-23-11	ALL
	3		W0356	087	18		36-23-11	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9		W0356	044	18		SPARE	ALL
	10	UNUSED						ALL
D04156P		AW0306/ /		PLUG-ENGINE FIREWALL,RH				ALL
	1		W3540	001	18		36-23-11	ALL
	2		W3540	002	18		36-23-11	ALL
	3		W3540	003	18		36-23-11	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
D04160J		AW0311/ /		RCPT-LH COWL				050-099, 150-166, 275-299
	1		W0374	075	18		78-34-21	050-099, 150-166, 275-299
	2		W0374	201R	18		78-34-21	050-099, 150-166, 275-299
	3		W0374	074	18		78-34-21	050-099, 150-166, 275-299
	4		W0374	215R	20		78-36-21	050-099, 150-166, 275-299
	5		W0374	215B	20		78-36-21	050-099, 150-166, 275-299
	6		W0374	101	20		78-36-21	050-099, 150-166, 275-299
	7		W0374	102	20		78-36-21	050-099, 150-166, 275-299
	= CC	L	W0374	101Z			78-36-21	050-099, 150-166, 275-299
	= CC	L	W0374	102Z			78-36-21	050-099, 150-166, 275-299
	= CC	L	W0374	215Z			78-36-21	050-099, 150-166, 275-299
D04162J		AW0310/ /		RCPT-RH COWL				050-099, 150-166, 275-299
	1		W0374	073	18		78-34-21	050-099, 150-166, 275-299
	2		W0374	202R	18		78-34-21	050-099, 150-166, 275-299
	3		W0374	072	18		78-34-21	050-099, 150-166, 275-299
	4		W0374	216R	20		78-36-21	050-099, 150-166, 275-299

HOOKUP LIST
D280T132

91-21-51
Section D04100
Page 28
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04162J		AW0310/ /		RCPT-RH COWL (continued)				050-099, 150-166, 275-299
	5		W0374	216B	20		78-36-21	050-099, 150-166, 275-299
	6		W0374	103	20		78-36-21	050-099, 150-166, 275-299
	7		W0374	102	20		78-36-21	050-099, 150-166, 275-299
	= CC	L	W0374	102Z			78-36-21	050-099, 150-166, 275-299
	= CC	L	W0374	103Z			78-36-21	050-099, 150-166, 275-299
	= CC	L	W0374	216Z			78-36-21	050-099, 150-166, 275-299
D04163J		AF0119/ /		RCPT-P1				ALL
	1		W0209	001	22		34-22-82	ALL
	2		W0209	002	22		31-41-11	ALL
	3		W0209	003	24		34-22-16	ALL
	4		W0209	004	24		34-22-16	ALL
	5		W0209	005	22		34-13-11	ALL
	6		W0209	006	22		34-13-11	ALL
	7		W0209	007	24		31-25-11	ALL
	8		W0209	008	24		34-22-16	ALL
	9		W0209	009	22		29-21-32	ALL
	10		W0209	010	22		SPARE	ALL
	11		W0209	011	22		SPARE	ALL
	12	UNUSED						ALL
	13		W0209	019	24		34-61-15	050-099
	13		W0209	019	24		SPARE	150-199
	13	UNUSED						275-299
	14	UNUSED						ALL
	15	UNUSED						050-099, 275-299
	15		W0209	025	22		SPARE	150-199
D04163P		AF0119/ /		PLUG-P1				ALL
	1		W0011	001	22		34-22-82	ALL
	2		W0011	650	22		31-41-11	ALL
	3		W0011	024	24		34-22-16	ALL
	4		W0011	025	24		34-22-16	ALL
	5		W0011	047	22		34-13-11	ALL
	6		W0011	048	22		34-13-11	ALL
	7		W0011	057	24		31-25-11	ALL
	8		W0011	075	24		34-22-16	ALL
	9		W0011	178	22		29-21-32	ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D04100

Page 29

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04163P		AF0119/ /		PLUG-P1 (continued)				ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
D04164J		AW0310/ /		RCPT-RH COWL T/R				ALL
	1		W0376	151	20		78-36-21	ALL
	2		W0376	216B	20		78-36-21	ALL
	3		W0376	216R	20		78-36-21	ALL
	4		W0376	153	18		78-36-21	ALL
	5		W0376	204R	18		78-36-21	ALL
	6		W0376	148	18		78-36-21	ALL
	7		W0376	205R	18		78-36-21	ALL
	8		W0376	146	18		78-36-21	ALL
	9		W0376	147	18		78-36-21	ALL
	10		W0376	150	20		78-36-21	ALL
	= CC	M	W0376	151Z			78-36-21	050-099, 150-199
	= CC	M	W0376	216Z			78-36-21	050-099, 150-199
	= CC	L	W0376	150Z			78-36-21	ALL
	= CC	L	W0376	151Z			78-36-21	275-299
	= CC	L	W0376	216Z			78-36-21	275-299
D04165J		AF0201/ /		RCPT-P11				ALL
	1		W0040	001	22		34-22-82	ALL
	2		W0040	188	22		31-41-11	ALL
	3		W0040	002	24		34-22-16	ALL
	4		W0040	003	24		34-22-16	ALL
	5		W0040	004	22		34-13-11	ALL
	6		W0040	005	22		34-13-11	ALL
	7		W0040	006	24		31-25-11	ALL
	8		W0040	007	24		34-22-16	ALL
	9		W0040	175	22		29-21-32	ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12		W0040	008	20		34-43-12	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D04100

Page 30

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04165J		AF0201/ /		RCPT-P11 (continued)				ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	DED		W0040	175Z			29-21-32	ALL
D04165P		AF0201/ /		PLUG-P11				ALL
	1		W0209	001	22		34-22-82	ALL
	2		W0209	002	22		31-41-11	ALL
	3		W0209	003	24		34-22-16	ALL
	4		W0209	004	24		34-22-16	ALL
	5		W0209	005	22		34-13-11	ALL
	6		W0209	006	22		34-13-11	ALL
	7		W0209	007	24		31-25-11	ALL
	8		W0209	008	24		34-22-16	ALL
	9		W0209	009	22		29-21-32	ALL
	10		W0209	010	22		SPARE	ALL
	11		W0209	011	22		SPARE	ALL
	12		W0209	012	20		34-43-12	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19		W0209	019	24		34-61-15	050-099
	19		W0209	019	24		SPARE	150-199
	19	UNUSED						275-299
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						050-099, 275-299
	25		W0209	025	22		SPARE	150-199

HOOKUP LIST

D280T132

91-21-51

Section D04100

Page 31

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04166J		AW0311/ /		RCPT-LH COWL T/R				ALL
	1		W0376	143	18		78-36-21	ALL
	2		W0376	144	18		78-36-21	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W0376	033	18		75-23-11	ALL
	6		W0376	034	18		75-23-11	ALL
	7		W0376	096	18		75-23-11	ALL
	8		W0376	110	18		75-23-11	ALL
	9		W0376	107	18		75-23-11	ALL
	10		W0376	108	18		75-23-11	ALL
	11		W0376	145	18		78-36-21	ALL
	12		W0376	206R	18		78-36-21	ALL
	13		W0376	152	18		78-36-21	ALL
	14		W0376	207R	18		78-36-21	ALL
	15		W0376	215R	20		78-36-21	ALL
	16		W0376	215B	20		78-36-21	ALL
	17		W0376	149	20		78-36-21	ALL
	18		W0376	150	20		78-36-21	ALL
	19	UNUSED						ALL
	=CC	L	W0376	150Z			78-36-21	050-099, 150-199
	=CC	M	W0376	033Z			75-23-11	ALL
	=CC	M	W0376	034Z			75-23-11	ALL
	=CC	M	W0376	096Z			75-23-11	ALL
	=CC	M	W0376	110Z			75-23-11	ALL
	=CC	M	W0376	149Z			78-36-21	ALL
	=CC	M	W0376	215Z			78-36-21	ALL
	=CC	M	W0376	150Z			78-36-21	275-299
D04167J		AF0119/ /		RCPT-P1				ALL
	1		W0397	006	24		34-22-37	ALL
	2		W0397	002	24		34-22-17	ALL
	3		W0397	003	24		34-22-17	ALL
	4		W0397	004	24		34-22-17	ALL
	5		W0397	005	22		22-14-11	ALL
	6		W0397	001	24		34-22-17	ALL
	7	UNUSED						050-099, 150-152, 155-199, 275-299
	7		W0397	212R	24		SPARE	153-154
	8	UNUSED						050-099, 150-152, 155-199, 275-299
	8		W0397	212B	24		SPARE	153-154
	9	UNUSED						050-099, 150-152, 155-199, 275-299

HOOKUP LIST
D280T132

91-21-51
Section D04100
Page 32
Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04167J		AF0119/ /		RCPT-P1 (continued)				ALL
	9		W0397	212Z			SPARE	153-154
	10		W0397	202R	24		34-22-81	050-099, 150-156, 162-166, 280-299
	10	UNUSED						157, 167-199, 277-278
	10		W0397	202R	24		SPARE	275-276
	11		W0397	202B	24		34-22-81	050-099, 150-156, 162-166, 280-299
	11	UNUSED						157, 167-199, 277-278
	11		W0397	202B	24		SPARE	275-276
	12		W0397	FRC			34-22-81	050-099, 150-156, 162-166, 280-299
	12	UNUSED						157, 167-199, 277-278
	12		W0397	FRC			SPARE	275-276
	13		W0397	203R	24		34-22-81	ALL
	14		W0397	203B	24		34-22-81	ALL
	15		W0397	FRD			34-22-81	ALL
	16		W0397	026	24		22-13-11	ALL
	17	UNUSED						ALL
	18		W0397	301R	24		34-12-11	ALL
	19		W0397	301B	24		34-12-11	ALL
	20		W0397	301Y	24		34-12-11	ALL
	21		W0397	205R	24		34-13-11	ALL
	22		W0397	205B	24		34-13-11	ALL
	23		W0397	FRA			34-13-11	ALL
	24		W0397	206R	24		SPARE	ALL
	25		W0397	206B	24		SPARE	ALL
	26		W0397	206Z			SPARE	ALL
	27		W0397	207R	24		34-22-82	ALL
	28		W0397	207B	24		34-22-82	ALL
	29		W0397	FRE			34-22-82	ALL
	30		W0397	018	22		34-22-81	ALL
	31	UNUSED						050-099, 150-152, 155-199, 275-299
	31		W0397	020	22		34-45-14	153-154
	32		W0397	209R	22		SPARE	ALL
	33		W0397	209B	22		SPARE	ALL
	34		W0397	209Z			SPARE	ALL
	35		W0397	009	22		34-45-14	ALL
	36	UNUSED						050-099
	36		W0397	302R	24		SPARE	150-199, 275-299
	37	UNUSED						050-099
	37		W0397	302B	24		SPARE	150-199, 275-299
	38	UNUSED						050-099
	38		W0397	302Y	24		SPARE	150-199, 275-299

HOOKUP LIST

D280T132

91-21-51

Section D04100

Page 33

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04167J		AF0119/ /		RCPT-P1 (continued)				ALL
	39		W0397	210R	20		34-12-11	ALL
	40		W0397	210B	20		34-12-11	ALL
	41		W0397	210Z			34-12-11	ALL
	42		W0397	022	24		34-22-17	ALL
	43		W0397	030	22		34-22-16	ALL
	44		W0397	016	24		32-42-11	ALL
	45		W0397	053	24		SPARE	ALL
	46		W0397	054	24		SPARE	ALL
	47		W0397	027	24		22-14-11	ALL
	48		W0397	028	24		22-14-11	ALL
	49		W0397	029	24		22-14-11	ALL
	50		W0397	033	24		22-41-13	ALL
	51		W0397	031	24		22-41-13	ALL
	52		W0397	032	24		22-41-13	ALL
	53	UNUSED						050-099, 150-152, 155-199, 275-299
	53		W0397	021	22		34-45-14	153-154
	54		W0397	058	22		22-34-11	ALL
	55		W0397	055	24		SPARE	ALL
			W0397	202	20		34-22-81	050-099, 150-156, 162-166, 280-299
			W0397	202Z			34-22-81	050-099, 150-156, 162-166, 280-299
			W0397	FRC			34-22-81	050-099, 150-156, 162-166, 280-299
			W0397	203	20		34-22-81	ALL
			W0397	203Z			34-22-81	ALL
			W0397	205	20		34-13-11	ALL
			W0397	205Z			34-13-11	ALL
			W0397	207	20		34-22-82	ALL
			W0397	207Z			34-22-82	ALL
			W0397	FRA			34-13-11	ALL
			W0397	FRD			34-22-81	ALL
			W0397	FRE			34-22-82	ALL
			W0397	202	20		SPARE	275-276
			W0397	202Z			SPARE	275-276
			W0397	FRC			SPARE	275-276
D04167P		AF0119/ /		PLUG-P1				ALL
	1		W0011	026	24		34-22-38	ALL
	2		W0011	015	24		34-22-17	ALL
	3		W0011	017	24		34-22-17	ALL
	4		W0011	018	24		34-22-17	ALL
	5		W0011	061	22		22-14-11	ALL

HOOKUP LIST
D280T132

91-21-51
Section D04100
Page 34
Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04167P		AF0119/ /		PLUG-P1 (continued)				ALL
	6		W0011	187	24		34-22-17	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10		W0011	221R	24		34-22-81	050-099, 150-156, 162-166
	10	UNUSED						157, 167-199, 275-299
	11		W0011	221B	24		34-22-81	050-099, 150-156, 162-166
	11	UNUSED						157, 167-199, 275-299
	12		W0011	221Z			34-22-81	050-099, 150-156, 162-166
	12	UNUSED						157, 167-199, 275-299
	13		W0011	222R	24		34-22-81	ALL
	14		W0011	222B	24		34-22-81	ALL
	15		W0011	222Z			34-22-81	ALL
	16		W0011	808	22		34-22-36	ALL
	17	UNUSED						ALL
	18		W0011	302R	24		34-12-11	ALL
	19		W0011	302B	24		34-12-11	ALL
	20		W0011	302Y	24		34-12-11	ALL
	21		W0011	234R	24		34-13-11	ALL
	22		W0011	234B	24		34-13-11	ALL
	23		W0011	234Z			34-13-11	ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27		W0011	202R	24		34-22-82	ALL
	28		W0011	202B	24		34-22-82	ALL
	29		W0011	202Z			34-22-82	ALL
	30		W0011	720	22		34-22-81	ALL
	31	UNUSED						050-099, 150-152, 155-199, 275-299
	31		W0011	880	22		34-45-14	153-154
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39		W0011	246R	20		34-12-11	ALL
	40		W0011	246B	20		34-12-11	ALL
	41		W0011	246Z			34-12-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04100

Page 35

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04167P		AF0119/ /		PLUG-P1 (continued)				ALL
	42		W0011	162	24		34-22-17	ALL
	43		W0011	155	22		34-22-16	ALL
	44		W0011	091	24		32-42-11	ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47		W0011	029	24		22-14-11	ALL
	48		W0011	036	24		22-14-11	ALL
	49		W0011	031	24		22-14-11	ALL
	50		W0011	151	24		22-41-13	ALL
	51		W0011	153	24		22-41-13	ALL
	52		W0011	152	24		22-41-13	ALL
	53	UNUSED						050-099, 150-152, 155-199, 275-299
	53		W0011	879	22		34-45-14	153-154
	54		W0011	188	22		22-34-11	ALL
	55	UNUSED						ALL
D04168J		AW0322/ /		RCPT-R WING/SAILBOAT				ALL
	1		W0400	001	18		29-11-22	ALL
	2		W0400	002	18		29-11-22	ALL
	3	UNUSED						ALL
	4		W0400	006	18		29-11-22	ALL
	5	UNUSED						ALL
	6		W0400	201B	18		29-11-22	ALL
	7		W0400	201R	18		29-11-22	ALL
D04168P		AW0322/ /		PLUG-R WING/STRUT				ALL
	1		W0442	001	20		29-11-22	ALL
	2		W0442	002	20		29-11-22	ALL
	3	UNUSED						ALL
	4		W0442	004	20		29-11-22	ALL
	5	UNUSED						ALL
	6		W0442	210B	20		29-11-22	ALL
	7		W0442	210R	20		29-11-22	ALL
D04169J		AE0319/ /		RCPT-				ALL
	1		W0397	009	22		34-45-14	ALL
	2		W0397	209R	22		SPARE	ALL
	3		W0397	209B	22		SPARE	ALL
	4		W0397	209Z			SPARE	ALL
	5		W0397	005	22		22-14-11	ALL

HOOKUP LIST
D280T132

91-21-51
Section D04100
Page 36
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04169J		AE0319/ /		RCPT- (continued)				ALL
	6	UNUSED						ALL
	7		W0397	050	24		SPARE	ALL
	8		W0397	048	24		34-46-12	ALL
	9		W0397	051	24		SPARE	ALL
	10		W0397	058	22		22-34-11	ALL
	11	UNUSED						ALL
	12		W0397	210R	20		34-12-11	ALL
	13		W0397	210B	20		34-12-11	ALL
	14		W0397	210Z			34-12-11	ALL
	15		W0397	031	24		22-41-13	ALL
	16		W0397	026	24		22-13-11	ALL
	17	UNUSED						ALL
	18		W0397	301R	24		34-12-11	ALL
	19		W0397	301B	24		34-12-11	ALL
	20		W0397	301Y	24		34-12-11	ALL
	21		W0397	205R	24		34-13-11	ALL
	22		W0397	205B	24		34-13-11	ALL
	23		W0397	205Z			34-13-11	ALL
	24		W0397	016	24		32-42-11	ALL
	25		W0397	215R	24		34-13-21	ALL
	26		W0397	215B	24		34-13-21	ALL
	27		W0397	215Z			34-13-21	ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30		W0397	033	24		22-41-13	ALL
	31	UNUSED						ALL
	32	UNUSED						050-099, 150-152, 155-199, 275-299
	32		W0397	212R	24		SPARE	153-154
	33	UNUSED						050-099, 150-152, 155-199, 275-299
	33		W0397	212B	24		SPARE	153-154
	34	UNUSED						050-099, 150-152, 155-199, 275-299
	34		W0397	212Z			SPARE	153-154
	35		W0397	020	22		34-45-14	050-099, 150-199, 277-299
	35	UNUSED						275-276
	36	UNUSED						050-099
	36		W0397	302R	24		SPARE	150-199, 275-299
	37	UNUSED						050-099
	37		W0397	302B	24		SPARE	150-199, 275-299
	38	UNUSED						050-099
	38		W0397	302Y	24		SPARE	150-199, 275-299

HOOKUP LIST

D280T132

91-21-51

Section D04100

Page 37

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04169J		AE0319/ /		RCPT- (continued)				ALL
	39		W0397	021	22		SPARE	050-099, 155-199, 277-299
	39		W0397	021	22		34-45-14	150-154
	39	UNUSED						275-276
	40	UNUSED						ALL
	41	UNUSED						ALL
D04169P		AE0319/ /		PLUG-E1-3				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W0105	052	22		22-14-11	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8		W0105	861	24		34-46-12	ALL
	9	UNUSED						ALL
	10		W0105	762	22		22-34-11	ALL
	11	UNUSED						ALL
	12		W0105	508R	22		34-12-11	ALL
	13		W0105	508B	22		34-12-11	ALL
	14		W0105	508Z			34-12-11	ALL
	15		W0105	096	24		22-41-13	ALL
	16		W0105	092	24		22-13-11	ALL
	17	UNUSED						ALL
	18		W0105	371R	24		34-12-11	ALL
	19		W0105	371B	24		34-12-11	ALL
	20		W0105	371Y	24		34-12-11	ALL
	21		W0105	895R	24		34-13-11	ALL
	22		W0105	895B	24		34-13-11	ALL
	23		W0105	895Z			34-13-11	ALL
	24		W0105	037	24		32-42-11	ALL
	25		W0105	530R	24		34-13-21	ALL
	26		W0105	530B	24		34-13-21	ALL
	27		W0105	530Z			34-13-21	ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30		W0105	095	24		22-41-13	ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D04100
Page 38
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04169P		AE0319/ /		PLUG-E1-3 (continued)				ALL
	34	UNUSED						ALL
	35		W0105	785	22		34-45-14	ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39		W0105	786	22		34-45-14	050-099, 150-156, 162-166, 275-276
	39	UNUSED						157, 167-199, 277-299
	40	UNUSED						ALL
	41	UNUSED						ALL
D04170J		AW0322/ /		RCPT-R WING/SAILBOAT				ALL
	1		W0394	102	18		78-34-21	ALL
	2		W0394	002	18		78-34-21	ALL
	3		W0394	003	18		78-34-21	ALL
	4		W0394	FRC			29-33-11	ALL
	5		W0394	007	18		29-32-11	ALL
	6		W0394	008	18		78-36-21	ALL
	7		W0394	103	18		78-34-21	ALL
	8		W0394	010	18		SPARE	ALL
	9		W0394	004	18		29-32-11	ALL
	10		W0394	014	18		29-33-11	ALL
	11		W0394	FRD			29-33-11	ALL
	12		W0394	011	20		29-33-11	ALL
	13		W0394	FRE			29-33-11	ALL
	14		W0394	012	18		29-33-11	ALL
	15		W0394	013	18		29-33-11	ALL
	16		W0394	020	18		29-32-11	ALL
	17		W0394	022	18		29-11-22	ALL
	18		W0394	083	18		78-36-21	ALL
	19		W0394	081	18		78-36-21	ALL
			W0394	011Z			29-33-11	ALL
			W0394	101	18		78-34-21	ALL
			W0394	102Z			78-34-21	ALL
			W0394	103Z			78-34-21	ALL
			W0394	FRC			29-33-11	ALL
			W0394	FRD			29-33-11	ALL
			W0394	FRE			29-33-11	ALL
D04170P		AW0322/ /		PLUG-R STRUT/SAILBOAT				ALL
	1		W0408	124	18		78-34-21	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04100

Page 39

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04170P		AW0322/ /		PLUG-R STRUT/SAILBOAT (continued)				ALL
	2		W0408	030	20		SPARE	ALL
	3		W0408	043	20		78-34-21	ALL
	4		W0408	FRA			29-33-11	ALL
	5		W0408	048	20		29-32-11	ALL
	6		W0408	024	20		78-36-21	ALL
	7		W0408	099	18		78-34-21	ALL
	8		W0408	023	20		SPARE	ALL
	9		W0408	045	20		29-32-11	ALL
	10		W0408	049	20		29-33-11	ALL
	11		W0408	FRB			29-33-11	ALL
	12		W0408	053	20		29-33-11	ALL
	13		W0408	FRC			29-33-11	ALL
	14		W0408	051	20		29-33-11	ALL
	15		W0408	052	20		29-33-11	ALL
	16		W0408	058	20		29-32-11	ALL
	17		W0408	081	20		29-11-22	ALL
	18		W0408	127	18		78-36-21	ALL
	19		W0408	128	18		78-36-21	ALL
	CAP	Y	W0408	029	20		SPARE	ALL
	DED		W0408	099Z			78-34-21	ALL
	DED		W0408	124Z			78-34-21	ALL
			W0408	053Z			29-33-11	ALL
			W0408	FRA			29-33-11	ALL
			W0408	FRB			29-33-11	ALL
			W0408	FRC			29-33-11	ALL
D04171J		AF0119/ /		RCPT-P1				ALL
	1	UNUSED						ALL
	2		W0397	052	24		SPARE	ALL
	3		W0397	023	22		SPARE	ALL
	4		W0397	024	22		SPARE	ALL
	5		W0397	215R	24		34-13-21	ALL
	6		W0397	215B	24		34-13-21	ALL
	7		W0397	FRO			34-13-21	ALL
	8	UNUSED						ALL
	9		W0397	051	24		SPARE	ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13		W0397	043	24		34-46-12	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04100

Page 40

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04171J		AF0119/ /		RCPT-P1 (continued)				ALL
	14	UNUSED						ALL
	15		W0397	045	24		34-46-12	ALL
	16		W0397	046	24		SPARE	050-099
	16	UNUSED						150-199, 275-299
	17		W0397	019	24		31-31-26	ALL
	18	UNUSED						ALL
	19		W0397	211R	24		34-22-91	ALL
	20		W0397	211B	24		34-22-91	ALL
	21		W0397	FRG			34-22-91	ALL
	22		W0397	020	22		34-45-14	050-099, 150-152, 155-199, 277-299
	22	UNUSED						153-154, 275-276
	23		W0397	021	22		SPARE	050-099, 155-199, 277-299
	23		W0397	021	22		34-45-14	150-152
	23	UNUSED						153-154, 275-276
	24	UNUSED						ALL
			W0397	211	20		34-22-91	ALL
			W0397	211Z			34-22-91	ALL
			W0397	215	20		34-13-21	ALL
			W0397	215Z			34-13-21	ALL
			W0397	FRG			34-22-91	ALL
			W0397	FRO			34-13-21	ALL
D04171P		AF0119/ /		PLUG-P1				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W0011	231R	24		34-13-21	ALL
	6		W0011	231B	24		34-13-21	ALL
	7		W0011	231Z			34-13-21	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13		W0011	631	24		34-46-12	ALL
	14	UNUSED						ALL
	15		W0011	633	24		34-46-12	ALL
	16	UNUSED						ALL
	17		W0011	832	24		31-31-26	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04100

Page 41

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04171P		AF0119/ /		PLUG-P1 (continued)				ALL
	18	UNUSED						ALL
	19		W0011	201R	24		34-22-91	ALL
	20		W0011	201B	24		34-22-91	ALL
	21		W0011	201Z			34-22-91	ALL
	22		W0011	880	22		34-45-14	050-099, 150-152, 155-199, 275-299
	22	UNUSED						153-154
	23		W0011	879	22		34-45-14	050-099, 150-152, 155-156, 162-166, 275-276
	23	UNUSED						153-154, 157, 167-199, 277-299
	24	UNUSED						ALL
D04173J		AF0119/ /		RCPT-P1				ALL
	1		W0399	202R	24		34-22-82	ALL
	2		W0399	202B	24		34-22-82	ALL
	3		W0399	FRB			34-22-82	ALL
	4		W0399	001	24		SPARE	ALL
	5	UNUSED						ALL
	6		W0399	201R	24		34-22-81	ALL
	7		W0399	201B	24		34-22-81	ALL
	8		W0399	FRA			34-22-81	ALL
	9		W0399	203R	20		SPARE	ALL
	10		W0399	203B	20		SPARE	ALL
	11		W0399	203Z			SPARE	ALL
	12		W0399	012	24		SPARE	ALL
	13		W0399	018	22		22-14-11	ALL
	14		W0399	014	22		30-33-11	ALL
	15	UNUSED						ALL
	16		W0399	019	24		22-14-11	ALL
	17		W0399	017	24		22-14-11	ALL
	18		W0399	020	22		SPARE	ALL
	19		W0399	021	22		SPARE	ALL
	20		W0399	022	22		SPARE	ALL
	21		W0399	204B	24		SPARE	ALL
	22		W0399	204R	24		SPARE	ALL
	23		W0399	204Z			SPARE	ALL
	24	UNUSED						ALL
			W0399	201	20		34-22-81	ALL
			W0399	201Z			34-22-81	ALL
			W0399	202	20		34-22-82	ALL
			W0399	202Z			34-22-82	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04100

Page 42

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04173J		AF0119/ /		RCPT-P1 (continued)				ALL
			W0399	FRA			34-22-81	ALL
			W0399	FRB			34-22-82	ALL
D04173P		AF0119/ /		PLUG-P1				ALL
	1		W0011	209R	24		34-22-82	ALL
	2		W0011	209B	24		34-22-82	ALL
	3		W0011	209Z			34-22-82	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W0011	216R	24		34-22-81	ALL
	7		W0011	216B	24		34-22-81	ALL
	8		W0011	216Z			34-22-81	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13		W0011	062	22		22-14-11	ALL
	14		W0011	135	22		30-33-11	ALL
	15	UNUSED						ALL
	16		W0011	028	24		22-14-11	ALL
	17		W0011	035	24		22-14-11	ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D04175J		AE0319/ /		RCPT-				ALL
	1		W0399	202R	24		34-22-82	ALL
	2		W0399	202B	24		34-22-82	ALL
	3		W0399	202Z			34-22-82	ALL
	4		W0399	001	24		SPARE	ALL
	5	UNUSED						ALL
	6		W0399	201R	24		34-22-81	ALL
	7		W0399	201B	24		34-22-81	ALL
	8		W0399	201Z			34-22-81	ALL
	9		W0399	203R	20		SPARE	ALL
	10		W0399	203B	20		SPARE	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04100

Page 43

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04175J		AE0319/ /		RCPT- (continued)				ALL
	11		W0399	203Z			SPARE	ALL
	12		W0399	012	24		SPARE	ALL
	13		W0399	018	22		22-14-11	ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16		W0399	019	24		22-14-11	ALL
	17		W0399	017	24		22-14-11	ALL
	18		W0399	020	22		SPARE	ALL
	19		W0399	021	22		SPARE	ALL
	20		W0399	022	22		SPARE	ALL
	21		W0399	204B	24		SPARE	ALL
	22		W0399	204R	24		SPARE	ALL
	23		W0399	204Z			SPARE	ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
D04175P		AE0319/ /		PLUG-E1-4				ALL
	1		W0127	281R	24		34-22-82	ALL
	2		W0127	281B	24		34-22-82	ALL
	3		W0127	281Z			34-22-82	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W0127	290R	24		34-22-81	ALL
	7		W0127	290B	24		34-22-81	ALL
	8		W0127	290Z			34-22-81	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13		W0127	054	22		22-14-11	ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16		W0127	052	24		22-14-11	ALL
	17		W0127	053	24		22-14-11	ALL

HOOKUP LIST
D280T132

91-21-51
Section D04100
Page 44
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04175P		AE0319/ /		PLUG-E1-4 (continued)				ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	DED		W0127	054Z			22-14-11	ALL
D04180J		AW0311/ /		RCPT-LH COWL				050-099, 150-199, 275-278
	1		W0352	075	18		78-34-11	050-099, 150-199, 275-278
	2		W0352	201R	18		78-34-11	050-099, 150-199, 275-278
	3		W0352	074	18		78-34-11	050-099, 150-199, 275-278
	4		W0352	215R	20		78-36-11	050-099, 150-199, 275-278
	5		W0352	215B	20		78-36-11	050-099, 150-199, 275-278
	6		W0352	101	20		78-36-11	050-099, 150-199, 275-278
	7		W0352	102	20		78-36-11	050-099, 150-199, 275-278
	= CC	L	W0352	101Z			78-36-11	050-099, 150-199, 275-278
	= CC	L	W0352	102Z			78-36-11	050-099, 150-199, 275-278
	= CC	L	W0352	215Z			78-36-11	050-099, 150-199, 275-278
D04180P		80/0/R022		PLUG-LH COWL				ALL
	1		W3528	01TB	20		78-34-11	ALL
	2		W3528	01TR	20		78-34-11	ALL
	3		W3528	01TI			78-34-11	ALL
	4		W3528	201R	20		78-36-11	ALL
	5		W3528	201B	20		78-36-11	ALL
	6		W3528	203R	20		78-36-11	ALL
	7		W3528	203B	20		78-36-11	ALL
	= CC	G7	W3528	01TO			78-34-11	ALL
	= CC	G7	W3528	201Z			78-36-11	ALL
	= CC	G7	W3528	203Z			78-36-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04100

Page 45

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04182J		AW0310/ /		RCPT-RH COWL				050-099, 150-199, 275-278
	1		W0352	073	18		78-34-11	050-099, 150-199, 275-278
	2		W0352	202R	18		78-34-11	050-099, 150-199, 275-278
	3		W0352	072	18		78-34-11	050-099, 150-199, 275-278
	4		W0352	216R	20		78-36-11	050-099, 150-199, 275-278
	5		W0352	216B	20		78-36-11	050-099, 150-199, 275-278
	6		W0352	103	20		78-36-11	050-099, 150-199, 275-278
	7		W0352	102	20		78-36-11	050-099, 150-199, 275-278
	= CC	L	W0352	102Z			78-36-11	050-099, 150-199, 275-278
	= CC	L	W0352	103Z			78-36-11	050-099, 150-199, 275-278
	= CC	L	W0352	216Z			78-36-11	050-099, 150-199, 275-278
D04182P		0/0/R000		PLUG-RH COWL				ALL
	1		W3526	01TB	20		78-34-11	ALL
	2		W3526	01TR	20		78-34-11	ALL
	3		W3526	01TI			78-34-11	ALL
	4		W3526	201R	20		78-36-11	ALL
	5		W3526	201B	20		78-36-11	ALL
	6		W3526	203R	20		78-36-11	ALL
	7		W3526	203B	20		78-36-11	ALL
	= CC	G7	W3526	01TO			78-34-11	ALL
	= CC	G7	W3526	201Z			78-36-11	ALL
	= CC	G7	W3526	203Z			78-36-11	ALL
D04185J		AF0201/ /		RCPT-P11				ALL
	1		W0044	139	22		34-51-11	ALL
	2	UNUSED						ALL
	3		W0044	01C	22		34-61-16	ALL
	4		W0044	140	22		23-51-21	ALL
	5		W0044	716	22		34-57-21	ALL
	6		W0044	142	24		31-51-11	ALL
	7	UNUSED						ALL
	8		W0044	144	22		23-42-11	ALL
	9		W0044	145	22		23-51-11	ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14		W0044	146	18		27-11-22	ALL
	15	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D04100
Page 46
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04185J		AF0201/ /		RCPT-P11 (continued)				ALL
	16		W0044	147	16		23-12-11	ALL
	17	UNUSED						ALL
	18		W0044	148	18		23-31-11	ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
D04185P		AF0201/ /		PLUG-P11				ALL
	1		W0203	001	22		34-51-11	ALL
	2		W0203	002	20		SPARE	ALL
	3		W0203	003	22		34-61-16	ALL
	4		W0203	004	22		23-51-21	ALL
	5		W0203	005	22		34-57-21	ALL
	6		W0203	006	24		31-51-11	ALL
	7	UNUSED						ALL
	8		W0203	008	22		23-42-11	ALL
	9		W0203	009	22		23-51-11	ALL
	10		W0203	010	20		SPARE	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14		W0203	014	18		27-11-22	ALL
	15	UNUSED						ALL
	16		W0203	016	16		23-12-11	ALL
	17	UNUSED						ALL
	18		W0203	018	18		23-31-11	ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
D04187J		AF0203/ /		RCPT-P11				ALL
	1	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D04100
Page 47
Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04187J		AF0203/ /		RCPT-P11 (continued)				ALL
	2		W0042	01D	24		34-61-26	ALL
	3		W0042	070	22		27-41-21	ALL
	4	UNUSED						ALL
	5		W0042	071	22		27-09-11	ALL
	6	UNUSED						ALL
	7		W0042	072	22		27-09-11	ALL
	8	UNUSED						ALL
	9		W0042	169	22		34-22-26	ALL
	10	UNUSED						ALL
	11		W0042	073	22		34-31-21	ALL
	12		W0042	171	20		27-32-21	ALL
	13		W0042	074	20		22-11-21	ALL
	14		W0042	075	22		22-11-22	ALL
	15		W0042	076	22		22-11-22	ALL
	16		W0042	077	22		34-51-21	ALL
	17		W0042	078	20		34-53-21	050-099, 155-199, 275-299
	17		W0042	078	22		34-53-21	150-154
	18		W0042	079	22		34-55-21	ALL
	19		W0042	080	22		34-12-21	ALL
	20		W0042	081	22		34-12-21	ALL
	21		W0042	082	22		34-12-21	ALL
	22		W0042	083	22		34-12-21	ALL
	23		W0042	084	24		34-22-26	ALL
	24		W0042	085	24		27-48-11	ALL
	25		W0042	086	22		34-61-21	ALL
	26		W0042	087	24		34-61-21	ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29		W0042	089	20		23-32-11	ALL
	30		W0042	132	24		31-51-11	ALL
	31		W0042	090	24		34-21-21	ALL
	32		W0042	091	22		23-71-11	ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D04100

Page 48

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04187J		AF0203/ /		RCPT-P11 (continued)				ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
	56		W0042	069	16		23-12-21	ALL
	57	UNUSED						ALL
D04187P		AF0203/ /		PLUG-P11				ALL
	1	UNUSED						ALL
	2		W0205	041	24		34-61-26	ALL
	3		W0205	003	22		27-41-21	ALL
	4		W0205	004	20		SPARE	ALL
	5		W0205	005	22		27-09-11	ALL
	6	UNUSED						ALL
	7		W0205	007	22		27-09-11	ALL
	8		W0205	030	20		23-26-11	ALL
	9		W0205	009	22		34-22-26	ALL
	10	UNUSED						ALL
	11		W0205	011	22		34-31-21	ALL
	12		W0205	012	20		27-32-21	ALL
	13		W0205	013	20		22-11-21	ALL
	14		W0205	014	20		22-11-22	ALL
	15		W0205	015	20		22-11-22	ALL
	16		W0205	016	22		34-51-21	ALL
	17		W0205	017	20		34-53-21	050-099, 155-199, 275-299
	17		W0205	017	22		34-53-21	150-154
	18		W0205	018	22		34-55-21	ALL
	19		W0205	019	22		34-12-21	ALL
	20		W0205	020	22		34-12-21	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04100

Page 49

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04187P		AF0203/ /		PLUG-P11 (continued)				ALL
	21		W0205	021	22		34-12-21	ALL
	22		W0205	022	22		34-12-21	ALL
	23		W0205	023	24		34-22-26	ALL
	24		W0205	024	24		27-48-11	ALL
	25		W0205	025	22		34-61-21	ALL
	26		W0205	026	24		34-61-21	ALL
	27	UNUSED						050-099
	27		W0205	027	24		SPARE	150-199, 275-299
	28		W0205	028	20		SPARE	ALL
	29		W0205	029	20		23-32-11	ALL
	30		W0205	033	24		31-51-11	ALL
	31		W0205	031	24		34-21-21	ALL
	32		W0205	032	22		23-71-11	ALL
	33	UNUSED						ALL
	34		W0205	034	20		SPARE	ALL
	35		W0205	035	20		SPARE	ALL
	36		W0205	036	22		SPARE	ALL
	37		W0205	037	22		SPARE	ALL
	38		W0205	038	22		SPARE	ALL
	39		W0205	039	22		SPARE	ALL
	40		W0205	001	18		SPARE	ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
	56		W0205	002	16		23-12-21	ALL
	57	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D04100
Page 50
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04189J		AF0201/ /		RCPT-P11				ALL
	1	UNUSED						ALL
	2		W0044	149	22		27-09-11	ALL
	3		W0044	150	22		27-09-11	ALL
	4		W0044	151	20		22-31-12	ALL
	5		W0044	194	22		27-09-11	ALL
	6		W0044	195	22		27-09-11	ALL
	7		W0044	152	20		22-11-32	ALL
	8		W0044	153	22		34-31-31	ALL
	9	UNUSED						ALL
	10		W0044	154	24		34-22-81	ALL
	11		W0044	155	22		34-13-11	ALL
	12	UNUSED						ALL
	13		W0044	156	22		23-51-11	ALL
	14		W0044	157	20		27-32-11	ALL
	15	UNUSED						ALL
	16		W0044	159	24		34-24-11	ALL
	17		W0044	143	24		31-51-12	ALL
	18		W0044	160	20		34-24-11	ALL
	19	UNUSED						ALL
	20		W0044	700	20		27-41-31	050-099, 155-199, 275-299
	20	UNUSED						150-154
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30		W0044	077	22		34-12-11	ALL
	31	UNUSED						ALL
	32		W0044	078	22		34-12-11	ALL
	33		W0044	079	22		34-12-11	ALL
	34		W0044	080	22		34-12-11	ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D04100

Page 51

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04189J		AF0201/ /		RCPT-P11 (continued)				ALL
	40		W0044	161	18		27-11-12	ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
	56	UNUSED						ALL
	57	UNUSED						ALL
D04189P		AF0201/ /		PLUG-P11				ALL
	1		W0207	001	22		SPARE	ALL
	2		W0207	002	22		27-09-11	ALL
	3		W0207	003	22		27-09-11	ALL
	4		W0207	004	20		22-31-12	ALL
	5		W0207	005	22		27-09-11	ALL
	6		W0207	006	22		27-09-11	ALL
	7		W0207	007	20		22-11-32	ALL
	8		W0207	008	22		34-31-31	ALL
	9		W0207	009	20		SPARE	ALL
	10		W0207	010	24		34-22-81	ALL
	11		W0207	011	22		34-13-11	ALL
	12		W0207	012	20		SPARE	ALL
	13		W0207	013	22		23-51-11	ALL
	14		W0207	014	20		27-32-11	ALL
	15	UNUSED						ALL
	16		W0207	016	24		34-24-11	ALL
	17		W0207	017	24		31-51-12	ALL
	18		W0207	018	20		34-24-11	ALL
	19	UNUSED						ALL
	20		W0207	023	20		27-41-31	050-099, 155-199, 275-299

HOOKUP LIST
D280T132

91-21-51
Section D04100
Page 52
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04189P		AF0201 / /		PLUG-P11 (continued)				ALL
	20	UNUSED						150-154
	21		W0207	021	22		SPARE	ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24		W0207	024	22		SPARE	ALL
	25		W0207	025	22		SPARE	ALL
	26		W0207	026	22		SPARE	ALL
	27	UNUSED						ALL
	28		W0207	028	22		SPARE	ALL
	29		W0207	029	20		SPARE	ALL
	30		W0207	030	20		34-12-11	ALL
	31	UNUSED						ALL
	32		W0207	032	22		34-12-11	ALL
	33		W0207	033	22		34-12-11	ALL
	34		W0207	034	22		34-12-11	ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40		W0207	019	18		27-11-12	ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
	56		W0207	015	12		SPARE	ALL
	57	UNUSED						ALL
	DED		W0207	005Z			27-09-11	ALL
	DED		W0207	006Z			27-09-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04100

Page 53

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04192J		AW0311/ /		RCPT-LH COWL T/R				ALL
	1		W0356	143	18		78-36-11	ALL
	2		W0356	144	18		78-36-11	ALL
	3	UNUSED						ALL
	4		W0356	049	18		SPARE	ALL
	5		W0356	033	18		75-23-11	ALL
	6		W0356	034	18		75-23-11	ALL
	7		W0356	096	18		75-23-11	ALL
	8		W0356	110	18		75-23-11	ALL
	9		W0356	107	18		75-23-11	ALL
	10		W0356	108	18		75-23-11	ALL
	11		W0356	145	18		78-36-11	ALL
	12		W0356	206R	18		78-36-11	ALL
	13		W0356	152	18		78-36-11	ALL
	14		W0356	207R	18		78-36-11	ALL
	15		W0356	215R	20		78-36-11	ALL
	16		W0356	215B	20		78-36-11	ALL
	17		W0356	149	20		78-36-11	ALL
	18		W0356	150	20		78-36-11	ALL
	19	UNUSED						ALL
	= CC	M	W0356	033Z			75-23-11	ALL
	= CC	M	W0356	034Z			75-23-11	ALL
	= CC	M	W0356	096Z			75-23-11	ALL
	= CC	M	W0356	110Z			75-23-11	ALL
	= CC	M	W0356	149Z			78-36-11	ALL
	= CC	M	W0356	150Z			78-36-11	ALL
	= CC	M	W0356	215Z			78-36-11	ALL
D04192P		AW0311/ /		PLUG-LH COWL				ALL
	1		W3530	01TI			78-36-11	ALL
	2		W3530	02TI			78-36-11	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W3530	005	20		75-23-11	ALL
	6		W3530	008	20		75-23-11	ALL
	7		W3530	007	20		75-23-11	ALL
	8		W3530	012	20		75-23-11	ALL
	9		W3530	013	16		75-23-11	ALL
	10		W3530	017	18		75-23-11	ALL
	11		W3530	01TB	20		78-36-11	ALL
	12		W3530	01TR	20		78-36-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04100

Page 54

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04192P		AW0311/ /		PLUG-LH COWL (continued)				ALL
	13		W3530	02TB	20		78-36-11	ALL
	14		W3530	02TR	20		78-36-11	ALL
	15		W3530	201R	20		78-36-11	ALL
	16		W3530	201B	20		78-36-11	ALL
	17		W3530	203R	20		78-36-11	ALL
	18		W3530	203B	20		78-36-11	ALL
	19	UNUSED						ALL
	= CC	GW	W3530	005Z			75-23-11	ALL
	= CC	GW	W3530	007Z			75-23-11	ALL
	= CC	GW	W3530	008Z			75-23-11	ALL
	= CC	GW	W3530	012Z			75-23-11	ALL
	= CC	GW	W3530	013Z			75-23-11	ALL
	= CC	GW	W3530	017Z			75-23-11	ALL
	= CC	GW	W3530	01TO			78-36-11	ALL
	= CC	GW	W3530	02TO			78-36-11	ALL
	= CC	GW	W3530	201Z			78-36-11	ALL
	= CC	GW	W3530	203Z			78-36-11	ALL
D04193J		AF0201/ /		RCPT-P11				ALL
	1		W0042	172	20		23-11-21	ALL
	2		W0042	173	20		23-11-21	ALL
	3		W0042	174	20		23-11-21	ALL
	4		W0042	093	22		31-41-11	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W0042	198	24		31-51-12	ALL
	8		W0042	122	24		34-22-91	ALL
	9		W0042	123	22		34-22-92	ALL
	10		W0042	124	24		34-22-26	ALL
	11		W0042	125	24		34-22-26	ALL
	12		W0042	126	24		34-22-26	ALL
	13		W0042	127	22		34-13-21	ALL
	14		W0042	128	22		34-13-21	ALL
	15	UNUSED						ALL
	16		W0042	129	24		31-25-11	ALL
	17	UNUSED						ALL
	18		W0042	131	22		34-33-21	ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D04100

Page 55

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04193J		AF0201/ /		RCPT-P11 (continued)				ALL
	22		W0042	094	22		31-41-11	ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28		W0042	135	20		34-43-22	ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
	56	UNUSED						ALL
	57	UNUSED						ALL
D04193P		AF0201/ /		PLUG-P11				ALL
	1		W0211	001	20		23-11-21	ALL
	2		W0211	002	20		23-11-21	ALL

HOOKUP LIST
D280T132

91-21-51
Section D04100
Page 56
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04193P		AF0201/ /		PLUG-P11 (continued)				ALL
	3		W0211	003	20		23-11-21	ALL
	4		W0211	004	22		31-41-11	ALL
	5		W0211	005	20		SPARE	ALL
	6		W0211	006	20		SPARE	ALL
	7		W0211	023	24		31-51-12	ALL
	8		W0211	008	24		34-22-91	ALL
	9		W0211	009	22		34-22-92	ALL
	10		W0211	010	24		34-22-26	ALL
	11		W0211	011	24		34-22-26	ALL
	12		W0211	012	24		34-22-26	ALL
	13		W0211	013	22		34-13-21	ALL
	14		W0211	014	22		34-13-21	ALL
	15	UNUSED						ALL
	16		W0211	016	24		31-25-11	ALL
	17		W0211	017	22		SPARE	ALL
	18		W0211	018	22		34-33-21	ALL
	19	UNUSED						ALL
	20		W0211	020	20		SPARE	ALL
	21		W0211	021	20		SPARE	ALL
	22		W0211	022	22		31-41-11	ALL
	23		W0211	029	24		34-61-25	050-099
	23		W0211	029	24		SPARE	150-199, 275-299
	24	UNUSED						ALL
	25		W0211	025	20		SPARE	ALL
	26		W0211	026	22		SPARE	ALL
	27	UNUSED						ALL
	28		W0211	028	20		34-43-22	ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						050-099, 275-299
	31		W0211	019	22		SPARE	150-199
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40		W0211	040	16		SPARE	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04100

Page 57

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04193P		AF0201/ /		PLUG-P11 (continued)				ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
	56		W0211	056	18		SPARE	ALL
	57	UNUSED						ALL
D04194J		AW0310/ /		RCPT-RH COWL T/R				ALL
	1		W0356	151	20		78-36-11	ALL
	2		W0356	216B	20		78-36-11	ALL
	3		W0356	216R	20		78-36-11	ALL
	4		W0356	153	18		78-36-11	ALL
	5		W0356	204R	18		78-36-11	ALL
	6		W0356	148	18		78-36-11	ALL
	7		W0356	205R	18		78-36-11	ALL
	8		W0356	146	18		78-36-11	ALL
	9		W0356	147	18		78-36-11	ALL
	10		W0356	150	20		78-36-11	ALL
	= CC	L	W0356	150Z			78-36-11	050-099, 150-199
	= CC	L	W0356	151Z			78-36-11	050-099, 150-199
	= CC	L	W0356	216Z			78-36-11	050-099, 150-199
	= CC	M	W0356	150Z			78-36-11	275-299
	= CC	M	W0356	151Z			78-36-11	275-299
	= CC	M	W0356	216Z			78-36-11	275-299
D04194P		AW0310/ /		PLUG-RH COWL				ALL
	1		W3532	203R	20		78-36-11	ALL
	2		W3532	201B	20		78-36-11	ALL
	3		W3532	201R	20		78-36-11	ALL

HOOKUP LIST
D280T132



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04194P		AW0310/ /		PLUG-RH COWL (continued)				ALL
	4		W3532	01TB	20		78-36-11	ALL
	5		W3532	01TR	20		78-36-11	ALL
	6		W3532	02TB	20		78-36-11	ALL
	7		W3532	02TR	20		78-36-11	ALL
	8		W3532	02TI			78-36-11	ALL
	9		W3532	01TI			78-36-11	ALL
	10		W3532	203B	20		78-36-11	ALL
	= CC	G7	W3532	01TO			78-36-11	ALL
	= CC	G7	W3532	02TO			78-36-11	ALL
	= CC	G7	W3532	201Z			78-36-11	ALL
	= CC	G7	W3532	203Z			78-36-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04100

Page 59 End

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04200J		AW0305/ /		RCPT-ENGINE FIREWALL,LH				ALL
	1		W0386	451R	16		26-11-12	ALL
	2		W0386	452R	16		26-11-11	ALL
	3		W0386	453R	16		SPARE	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
D04200P		AW0305/ /		PLUG-ENGINE FIREWALL,LH				ALL
	1		W3516	451R	16		26-11-12	ALL
	2		W3516	452R	16		26-11-11	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
D04201J		AE0305/ /		RCPT-E1-6				ALL
	1		W0201	031	24		34-21-11	ALL
	2		W0201	030	20		SPARE	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
D04201P		AE0305/ /		PLUG-				ALL
	1		W0161	006	24		34-21-11	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	DED		W0161	006Z			34-21-11	ALL
D04202J		AW0319/ /		RCPT-L WING/STRUT				ALL
	1		W0416	011	18		SPARE	ALL
	2		W0416	002	20		73-34-11	ALL
	3		W0416	038	18		36-11-61	ALL
	4		W0416	039	18		36-11-61	ALL
	5		W0416	110	18		78-34-11	ALL
	6		W0416	111	18		78-34-11	ALL
	7	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D04200
Page 1
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04202J		AW0319/ /		RCPT-L WING/STRUT (continued)				ALL
	8	UNUSED						ALL
	9		W0416	009	18		29-11-11	ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12		W0416	012	20		74-31-11	ALL
	13		W0416	303R	20		79-32-11	ALL
	14		W0416	303Y	20		79-32-11	ALL
	15		W0416	303B	20		79-32-11	ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21		W0416	040	20		36-11-61	ALL
	22	UNUSED						ALL
	23		W0416	201B	20		78-34-11	ALL
	24		W0416	201R	20		78-34-11	ALL
	25		W0416	202B	20		78-34-11	ALL
	26		W0416	202R	20		78-34-11	ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32		W0416	205B	20		SPARE	ALL
	33		W0416	205R	20		SPARE	ALL
	34		W0416	108	18		78-34-11	ALL
	35	UNUSED						ALL
	36		W0416	106	18		78-34-11	ALL
	37		W0416	107	18		78-34-11	ALL
	38		W0416	103	20		36-11-61	ALL
	39	UNUSED						ALL
	40		W0416	104	20		36-11-61	ALL
	41	UNUSED						ALL
	42		W0416	105	20		36-11-61	ALL
	= CC	M	W0416	002Z			73-34-11	ALL
	= CC	M	W0416	106Z			78-34-11	ALL
	= CC	M	W0416	107Z			78-34-11	ALL
	= CC	M	W0416	108Z			78-34-11	ALL
	= CC	M	W0416	110Z			78-34-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04200

Page 2

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04202J		AW0319/ /		RCPT-L WING/STRUT (continued)				ALL
	= CC	M	W0416	111Z			78-34-11	ALL
	= CC	M	W0416	303Z			79-32-11	ALL
	CAP	Y	W0416	023	20		SPARE	ALL
D04202P		AW0319/ /		PLUG-L WING/STRUT				050-099, 150-199, 275-278
	1		W0352	001	18		SPARE	050-099, 150-166, 275-277 167-199, 278
	1	UNUSED						
	2		W0352	002	18		73-34-11	050-099, 150-199, 275-278
	3		W0352	003	18		36-11-61	050-099, 150-199, 275-278
	4		W0352	004	18		36-11-61	050-099, 150-199, 275-278
	5	UNUSED						050-099, 150-199, 275-278
	6		W0352	124	18		78-34-11	050-099, 150-199, 275-278
	7		W0352	006	18		SPARE	050-099, 150-199, 275-278
	8		W0352	007	18		SPARE	050-099, 150-199, 275-278
	9		W0352	009	18		29-11-11	050-099, 150-199, 275-278
	10		W0352	052	18		SPARE	050-099, 150-199, 275-278
	11		W0352	051	18		SPARE	050-099, 150-199, 275-278
	12		W0352	012	18		74-31-11	050-099, 150-199, 275-278
	13		W0352	305R	18		79-32-11	050-099, 150-199, 275-278
	14		W0352	305Y	18		79-32-11	050-099, 150-199, 275-278
	15		W0352	305B	18		79-32-11	050-099, 150-199, 275-278
	16	UNUSED						050-099, 150-199, 275-278
	17	UNUSED						050-099, 150-199, 275-278
	18	UNUSED						050-099, 150-199, 275-278
	19	UNUSED						050-099, 150-199, 275-278
	20	UNUSED						050-099, 150-199, 275-278
	21		W0352	023	18		36-11-61	050-099, 150-199, 275-278
	22	UNUSED						050-099, 150-199, 275-278
	23		W0352	201B	18		78-34-11	050-099, 150-199, 275-278
	24		W0352	201R	18		78-34-11	050-099, 150-199, 275-278
	25		W0352	202B	18		78-34-11	050-099, 150-199, 275-278
	26		W0352	202R	18		78-34-11	050-099, 150-199, 275-278
	27	UNUSED						050-099, 150-199, 275-278
	28	UNUSED						050-099, 150-199, 275-278
	29	UNUSED						050-099, 150-199, 275-278
	30	UNUSED						050-099, 150-199, 275-278
	31	UNUSED						050-099, 150-199, 275-278
	32	UNUSED						050-099, 150-199, 275-278
	33	UNUSED						050-099, 150-199, 275-278
	34		W0352	116	18		78-34-11	050-099, 150-199, 275-278

HOOKUP LIST

D280T132

91-21-51

Section D04200

Page 3

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04202P		AW0319/ /		PLUG-L WING/STRUT (continued)				050-099, 150-199, 275-278
	35	UNUSED						050-099, 150-199, 275-278
	36		W0352	125	18		78-34-11	050-099, 150-199, 275-278
	37	UNUSED						050-099, 150-199, 275-278
	38	UNUSED						050-099, 150-155, 163-165, 275-276
	38		W0352	079	18		36-11-61	156-162, 166-199, 277-278
	39	UNUSED						050-099, 150-199, 275-278
	40	UNUSED						050-099, 150-155, 163-165, 275-276
	40		W0352	080	18		36-11-61	156-162, 166-199, 277-278
	41	UNUSED						050-099, 150-199, 275-278
	42	UNUSED						050-099, 150-155, 163-165, 275-276
	42		W0352	081	18		36-11-61	156-162, 166-199, 277-278
	= CC	M	W0352	002Z			73-34-11	050-099, 150-199, 275-278
	= CC	M	W0352	116Z			78-34-11	050-099, 150-199, 275-278
	= CC	M	W0352	124Z			78-34-11	050-099, 150-199, 275-278
	= CC	M	W0352	125Z			78-34-11	050-099, 150-199, 275-278
	= CC	M	W0352	305Z			79-32-11	050-099, 150-199, 275-278
D04203J		AE0305/ /		RCPT-E1-5				ALL
	1		W0201	029	22		34-46-11	ALL
	2		W0201	028	20		SPARE	050-099, 151
	2		W0201	028	20		34-46-13	150, 152-199, 275-299
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
D04203P		AE0305/ /		PLUG-E1-5				ALL
	1		W0109	702	20		34-46-11	ALL
	2	UNUSED						050-099, 151
	2		W0109	971	22		34-46-13	150, 152-199, 275-299
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
D04204J		AW0319/ /		RCPT-L WING/STRUT				ALL
	1		W0402	451R	18		26-11-12	ALL
	2		W0402	452R	18		26-11-11	ALL
	3		W0402	007	20		SPARE	050-099, 150-199
	3	UNUSED						275-299
	4		W0402	001	20		80-11-11	ALL
	5		W0402	002	20		80-11-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04200

Page 4

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04204J		AW0319/ /		RCPT-L WING/STRUT (continued)				ALL
	6		W0402	003	20		80-11-11	ALL
	7	UNUSED						ALL
	8		W0402	004	20		76-11-11	ALL
	9		W0402	006	20		76-11-11	ALL
	10		W0402	008	20		76-11-11	ALL
	11	UNUSED						ALL
	12		W0402	042	20		76-11-11	ALL
	13	UNUSED						050-099, 275-299
	13		W0402	011	20		SPARE	150-199
	14		W0402	457R	18		26-11-12	ALL
	15		W0402	455R	18		26-11-11	ALL
	16		W0402	456R	18		26-11-11	ALL
	17	UNUSED						ALL
	18		W0402	454R	18		26-11-12	ALL
	19		W0402	039	20		SPARE	050-099, 150-199
	19	UNUSED						275-299
	= CC	M	W0402	002Z			80-11-11	ALL
	= CC	M	W0402	003Z			80-11-11	ALL
	= CC	M	W0402	006Z			76-11-11	ALL
	= CC	M	W0402	042Z			76-11-11	ALL
D04204P		AW0319/ /		PLUG-L WING/STRUT				ALL
	1		W0386	451R	16		26-11-12	ALL
	2		W0386	452R	16		26-11-11	ALL
	3		W0386	453R	16		SPARE	ALL
	4		W0386	001	18		80-11-11	ALL
	5		W0386	002	18		80-11-11	ALL
	6		W0386	003	18		80-11-11	ALL
	7	UNUSED						ALL
	8		W0386	005	18		76-11-11	ALL
	9		W0386	006	18		76-11-11	ALL
	10		W0386	007	18		76-11-11	ALL
	11	UNUSED						ALL
	12		W0386	009	18		76-11-11	ALL
	13		W0386	458R	16		SPARE	ALL
	14		W0386	454R	16		26-11-12	ALL
	15		W0386	455R	16		26-11-11	ALL
	16		W0386	456R	16		26-11-11	ALL
	17	UNUSED						ALL
	18		W0386	457R	16		26-11-12	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04200

Page 5

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04204P		AW0319/ /		PLUG-L WING/STRUT (continued)				ALL
	19	UNUSED						ALL
	= CC	M	W0386	002Z			80-11-11	ALL
	= CC	M	W0386	003Z			80-11-11	ALL
	= CC	M	W0386	006Z			76-11-11	ALL
	= CC	M	W0386	009Z			76-11-11	ALL
D04205J		AE0305/ /		RCPT-E1-4				ALL
	1		W0201	027	24		34-22-36	ALL
	2		W0201	026	20		SPARE	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
D04205P		AE0305/ /		PLUG-E1-4				ALL
	1		W0107	016	24		34-22-36	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	DED		W0107	016Z			34-22-36	ALL
D04206J		AW0319/ /		RCPT-L WING/STRUT				ALL
	1		W0406	040	20		36-22-11	ALL
	2		W0406	041	20		36-11-51	ALL
	3		W0406	042	20		36-11-51	ALL
	4		W0406	043	18		36-11-51	ALL
	5		W0406	044	18		SPARE	ALL
	6		W0406	045	18		36-11-51	ALL
	7		W0406	046	20		36-11-51	ALL
	8		W0406	047	20		36-11-51	ALL
	9		W0406	048	20		36-23-11	ALL
	10	UNUSED						ALL
	11		W0406	050	20		36-23-11	ALL
	12		W0406	051	20		36-23-11	ALL
	13		W0406	301B	20		36-23-11	ALL
	14		W0406	301R	20		36-23-11	ALL
	15		W0406	301Y	20		36-23-11	ALL
	16		W0406	301Z			36-23-11	ALL
	17		W0406	056	20		36-23-11	ALL
	18		W0406	055	20		36-23-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04200

Page 6

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04206J		AW0319/ /		RCPT-L WING/STRUT (continued)				ALL
	19		W0406	231R	20		36-22-21	ALL
	20		W0406	231B	20		36-22-21	ALL
	21	UNUSED						ALL
	22		W0406	132	18		78-36-11	ALL
	23		W0406	133	18		78-36-11	ALL
	24		W0406	087R	18		26-18-11	ALL
	25		W0406	081	20		SPARE	ALL
	26		W0406	082	20		SPARE	ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
D04206P		AW0319/ /		PLUG-L WING/STRUT				ALL
	1		W0356	046	18		36-22-11	ALL
	2		W0356	061	18		36-11-51	ALL
	3		W0356	062	18		36-11-51	ALL
	4		W0356	063	18		36-11-51	ALL
	5	UNUSED						ALL
	6		W0356	065	18		36-11-51	ALL
	7		W0356	066	18		36-11-51	ALL
	8		W0356	067	18		36-11-51	ALL
	9		W0356	074	18		36-23-11	ALL
	10	UNUSED						ALL
	11		W0356	079	18		36-23-11	ALL
	12		W0356	083	18		36-23-11	ALL
	13		W0356	301B	20		36-23-11	ALL
	14		W0356	301R	20		36-23-11	ALL
	15		W0356	301Y	20		36-23-11	ALL
	16		W0356	301Z			36-23-11	ALL
	17		W0356	087	18		36-23-11	ALL
	18		W0356	085	18		36-23-11	ALL
	19		W0356	201R	18		36-22-21	ALL
	20		W0356	201B	18		36-22-21	ALL
	21		W0356	044	18		SPARE	ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24		W0356	459R	18		26-18-11	ALL
	25	UNUSED						ALL
	26	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D04200
Page 7
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04206P		AW0319/ /		PLUG-L WING/STRUT (continued)				ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
D04207J		AE0305/ /		RCPT-E1-3				ALL
	1		W0201	013	20		22-11-11	ALL
	2		W0201	014	20		22-11-12	ALL
	3		W0201	015	20		22-11-12	ALL
	4		W0201	016	20		22-31-11	ALL
	5		W0201	017	20		22-31-12	ALL
	6		W0201	018	20		22-31-12	ALL
	7		W0201	019	22		SPARE	ALL
	8		W0201	020	22		SPARE	ALL
	9		W0201	021	22		SPARE	ALL
	10		W0201	022	22		SPARE	ALL
	11		W0201	023	22		34-31-11	ALL
	12		W0201	024	24		27-48-11	ALL
	13		W0201	025	20		SPARE	ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23		W0201	006	20		34-45-11	050-099, 150-199, 277-299
	23	UNUSED						275-276
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
D04207P		AE0305/ /		PLUG-E1-3				ALL
	1		W0105	006	22		22-11-11	ALL
	2		W0105	008	22		22-11-12	ALL
	3		W0105	003	22		22-11-12	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04200

Page 8

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04207P		AE0305/ /		PLUG-E1-3 (continued)				ALL
	4		W0105	701	20		22-31-11	ALL
	5		W0105	130	20		22-31-12	ALL
	6		W0105	129	20		22-31-12	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11		W0105	101	20		34-31-11	ALL
	12		W0105	170	24		27-48-11	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23		W0105	625	20		34-45-11	ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	DED		W0105	008Z			22-11-12	ALL
	DED		W0105	129Z			22-31-12	ALL
	DED		W0105	130Z			22-31-12	ALL
D04208J		AW0305/ /		RCPT-ENGINE FIREWALL,LH				ALL
	1		W0356	001	18		36-11-61	ALL
	2		W0356	002	18		36-11-61	ALL
	3		W0356	003	18		36-11-61	ALL
	4		W0356	004	18		36-11-61	ALL
	5		W0356	005	18		36-11-61	ALL
	6		W0356	006	18		36-11-61	ALL
	7		W0356	007	18		36-11-61	ALL
	8		W0356	102	16		73-21-13	ALL
	9		W0356	009	18		36-11-61	ALL
	10		W0356	010	18		36-11-61	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04200

Page 9

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04208J		AW0305/ /		RCPT-ENGINE FIREWALL,LH (continued)				ALL
	11		W0356	011	18		36-11-61	ALL
	12		W0356	306B	18		79-31-11	ALL
	13		W0356	306Y	18		79-31-11	ALL
	14		W0356	306R	18		79-31-11	ALL
	15		W0356	039	18		74-31-11	ALL
	16		W0356	016	18		79-35-11	ALL
	17		W0356	302R	18		73-31-11	ALL
	18		W0356	302B	18		73-31-11	ALL
	19		W0356	302Y	18		73-31-11	ALL
	20		W0356	103	16		73-21-13	ALL
	21	UNUSED						ALL
	22		W0356	048	18		79-33-11	ALL
	23		W0356	304R	18		73-33-11	050-099, 150-199, 277-299
	23		W0356	304R	18		MULTI	275-276
	24		W0356	304Y	18		73-33-11	050-099, 150-199, 277-299
	24		W0356	304Y	18		MULTI	275-276
	25		W0356	304B	18		73-33-11	050-099, 150-199, 277-299
	25		W0356	304B	18		MULTI	275-276
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29		W0356	112	18		36-11-61	ALL
	30		W0356	113	18		36-11-61	ALL
	= CC	M	W0356	016Z			79-35-11	ALL
	= CC	M	W0356	048Z			79-33-11	ALL
	= CC	M	W0356	302Z			73-31-11	ALL
	= CC	M	W0356	306Z			79-31-11	ALL
	= CC	M	W0356	304Z			00-000	050-099, 150-199, 277-299
	= CC	M	W0356	304Z			MULTI	275-276
D04208P		AW0305/ /		PLUG-ENGINE FIREWALL,LH				ALL
	1		W3510	001	18		36-11-61	ALL
	2		W3510	002	18		36-11-61	ALL
	3		W3510	003	18		36-11-61	ALL
	4		W3510	004	18		36-11-61	ALL
	5		W3510	005	18		36-11-61	ALL
	6		W3510	006	18		36-11-61	ALL
	7		W3510	007	18		36-11-61	ALL
	8		W3510	042	16		73-21-13	ALL
	9		W3510	014	18		36-11-61	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04200

Page 10

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04208P		AW0305/ /		PLUG-ENGINE FIREWALL,LH (continued)				ALL
	10		W3510	017	18		36-11-61	ALL
	11		W3510	018	18		36-11-61	ALL
	12		W3510	019	18		79-31-11	ALL
	13		W3510	020	18		79-31-11	ALL
	14		W3510	021	18		79-31-11	ALL
	15		W3510	022	18		74-31-11	ALL
	16		W3510	026	18		79-35-11	ALL
	17		W3510	302R	20		73-31-11	ALL
	18		W3510	302B	20		73-31-11	ALL
	19		W3510	302Y	20		73-31-11	ALL
	20		W3510	043	16		73-21-13	ALL
	21	UNUSED						ALL
	22		W3510	027	18		79-33-11	ALL
	23		W3510	031	18		73-33-11	ALL
	24		W3510	032	18		73-33-11	ALL
	25		W3510	030	18		73-33-11	ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29		W3510	044	18		36-11-61	ALL
	30		W3510	045	18		36-11-61	ALL
	= CC	M	W3510	302Z			73-31-11	050-099, 150-155, 162-165, 275-276
	= CC	G3	W3510	302Z			73-31-11	156-157, 166-199, 277-299
D04211J		AE0306/ /		RCPT-E2-6				ALL
	1		W0219	024	20		SPARE	050-099, 150-199, 275-276, 280-299
	1	UNUSED						277-278
	2		W0219	025	20		23-11-11	ALL
	3		W0219	026	20		23-11-11	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						050-099, 151-152, 275-276, 280-299
	6		W0219	050	24		23-25-14	150, 153-199, 277-278
	7		W0219	027	20		23-11-11	ALL
	8		W0219	032	20		23-11-11	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D04200

Page 11

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04211P		AE0306/ /		PLUG-E2-6				ALL
	1	UNUSED						ALL
	2		W0163	007	20		23-11-11	ALL
	3		W0163	008	20		23-11-11	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						050-099, 151-152, 275-276
	6		W0163	061	22		23-25-14	150, 153-155, 162-165
	6		W0163	061	24		23-25-14	156-157, 166-199, 277-299
	7		W0163	010	20		23-11-11	ALL
	8		W0163	012	20		23-11-11	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	DED		W0163	007Z			23-11-11	ALL
	DED		W0163	008Z			23-11-11	ALL
	DED		W0163	010Z			23-11-11	ALL
D04212J		AW0319/ /		RCPT-L WING/STRUT				ALL
	1		W0406	001	20		36-11-61	ALL
	2		W0406	002	20		36-11-61	ALL
	3		W0406	003	18		36-11-61	ALL
	4		W0406	023	20		30-21-11	ALL
	5		W0406	005	18		36-11-61	ALL
	6		W0406	006	20		36-11-61	ALL
	7		W0406	007	20		36-11-61	ALL
	8		W0406	008	20		36-11-61	ALL
	9		W0406	009	20		36-11-61	ALL
	10		W0406	010	20		36-11-61	ALL
	11		W0406	011	20		36-11-61	ALL
	12		W0406	303B	20		79-31-11	ALL
	13		W0406	303Y	20		79-31-11	ALL
	14		W0406	303R	20		79-31-11	ALL
	15		W0406	015	20		74-31-11	ALL
	16		W0406	016	20		79-35-11	ALL
	17		W0406	302R	20		73-31-11	ALL
	18		W0406	302B	20		73-31-11	ALL
	19		W0406	302Y	20		73-31-11	ALL
	20		W0406	115	20		36-11-61	ALL
	21	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D04200

Page 12

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04212J		AW0319/ /		RCPT-L WING/STRUT (continued)				ALL
	22		W0406	028	20		79-33-11	ALL
	23		W0406	018	20		30-21-11	ALL
	24		W0406	017	20		30-21-11	ALL
	25		W0406	019	20		30-21-11	ALL
	26		W0406	086	20		30-21-11	ALL
	27		W0406	304R	20		73-33-11	ALL
	28		W0406	304Y	20		73-33-11	ALL
	29		W0406	304B	20		73-33-11	ALL
	30	UNUSED						ALL
	= CC	M	W0406	016Z			79-35-11	ALL
	= CC	M	W0406	028Z			79-33-11	ALL
	= CC	M	W0406	086Z			30-21-11	ALL
	= CC	M	W0406	302Z			73-31-11	ALL
	= CC	M	W0406	303Z			79-31-11	ALL
	= CC	M	W0406	304Z			73-33-11	ALL
	CAP	Y	W0406	083	20		SPARE	ALL
	CAP	Y	W0406	084	20		SPARE	ALL
	CAP	Y	W0406	085	20		SPARE	ALL
	CAP	Y	W0406	230B	20		SPARE	150-199, 275-299
	CAP	Y	W0406	230R	20		SPARE	150-199, 275-299
D04212P		AW0319/ /		PLUG-L WING/STRUT				ALL
	1		W0356	001	18		36-11-61	ALL
	2		W0356	002	18		36-11-61	ALL
	3		W0356	003	18		36-11-61	ALL
	4		W0356	100	18		30-21-11	ALL
	5		W0356	005	18		36-11-61	ALL
	6		W0356	006	18		36-11-61	ALL
	7		W0356	007	18		36-11-61	ALL
	8		W0356	112	18		36-11-61	ALL
	9		W0356	113	18		36-11-61	ALL
	10		W0356	010	18		36-11-61	ALL
	11		W0356	011	18		36-11-61	ALL
	12		W0356	306B	18		79-31-11	ALL
	13		W0356	306Y	18		79-31-11	ALL
	14		W0356	306R	18		79-31-11	ALL
	15		W0356	039	18		74-31-11	ALL
	16		W0356	016	18		79-35-11	ALL
	17		W0356	302R	18		73-31-11	ALL
	18		W0356	302B	18		73-31-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04200

Page 13

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04212P		AW0319/ /		PLUG-L WING/STRUT (continued)				ALL
	19		W0356	302Y	18		73-31-11	ALL
	20		W0356	116	18		36-11-61	ALL
	21	UNUSED						ALL
	22		W0356	048	18		79-33-11	ALL
	23		W0356	104	18		30-21-11	ALL
	24		W0356	105	18		30-21-11	ALL
	25		W0356	058	18		30-21-11	ALL
	26		W0356	157	20		30-21-11	ALL
	27		W0356	304R	18		73-33-11	050-099, 150-199, 277-299
	27		W0356	304R	18		MULTI	275-276
	28		W0356	304Y	18		73-33-11	050-099, 150-199, 277-299
	28		W0356	304Y	18		MULTI	275-276
	29		W0356	304B	18		73-33-11	050-099, 150-199, 277-299
	29		W0356	304B	18		MULTI	275-276
	30	UNUSED						ALL
	= CC	M	W0356	016Z			79-35-11	ALL
	= CC	M	W0356	048Z			79-33-11	ALL
	= CC	M	W0356	157Z			30-21-11	ALL
	= CC	M	W0356	302Z			73-31-11	ALL
	= CC	M	W0356	306Z			79-31-11	ALL
	= CC	M	W0356	304Z			00-000	050-099, 150-199, 277-299
	= CC	M	W0356	304Z			MULTI	275-276
D04213J		AE0306/ /		RCPT-E2-5				ALL
	1	UNUSED						ALL
	2		W0219	017	22		23-21-11	ALL
	3		W0219	019	22		23-22-11	ALL
	4	UNUSED						ALL
	5		W0219	020	22		23-34-11	ALL
	6		W0219	022	22		SPARE	ALL
	7		W0219	021	16		23-12-31	ALL
	8		W0219	033	20		23-22-11	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D04213P		AE0306/ /		PLUG-E2-5				ALL
	1	UNUSED						ALL
	2		W0139	015	20		23-21-11	ALL

HOOKUP LIST
D280T132

91-21-51
Section D04200
Page 14
Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04213P		AE0306/ /		PLUG-E2-5 (continued)				ALL
	3		W0139	257R	22		23-22-11	ALL
	4	UNUSED						ALL
	5		W0139	097	22		23-34-11	ALL
	6	UNUSED						ALL
	7		W0139	103	16		23-12-31	ALL
	8		W0139	257B	22		23-22-11	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	DED		W0139	097Z			23-34-11	ALL
D04214J		AW0319/ /		RCPT-L WING/STRUT				ALL
	1		W0406	125	18		78-36-11	ALL
	2	UNUSED						ALL
	3		W0406	029	20		SPARE	ALL
	4		W0406	030	20		SPARE	ALL
	5		W0406	058	20		75-23-11	ALL
	6		W0406	059	20		75-23-11	ALL
	7		W0406	110	20		75-23-11	ALL
	8		W0406	111	20		75-23-11	ALL
	9		W0406	093	20		78-36-11	ALL
	10		W0406	251B	18		78-36-11	ALL
	11		W0406	251R	18		78-36-11	ALL
	12		W0406	252B	18		78-36-11	ALL
	13		W0406	252R	18		78-36-11	ALL
	14		W0406	034R	18		26-18-12	ALL
	15	UNUSED						ALL
	16		W0406	248R	18		78-36-11	ALL
	17		W0406	248B	18		78-36-11	ALL
	18		W0406	126	18		78-36-11	ALL
	19		W0406	249R	18		78-36-11	ALL
	20		W0406	249B	18		78-36-11	ALL
	21		W0406	033R	18		26-18-12	ALL
	22	UNUSED						ALL
	23		W0406	205B	20		78-36-11	ALL
	24		W0406	205R	20		78-36-11	ALL
	25		W0406	206B	20		78-36-11	ALL
	26		W0406	206R	20		78-36-11	ALL
	27		W0406	207B	20		78-36-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04200

Page 15

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04214J		AW0319/ /		RCPT-L WING/STRUT (continued)				ALL
	28		W0406	207R	20		78-36-11	ALL
	29		W0406	204R	20		78-36-11	ALL
	30		W0406	204B	20		78-36-11	ALL
	= CC	M	W0406	058Z			75-23-11	ALL
	= CC	M	W0406	059Z			75-23-11	ALL
	= CC	M	W0406	093Z			78-36-11	ALL
	= CC	M	W0406	110Z			75-23-11	ALL
	= CC	M	W0406	111Z			75-23-11	ALL
	= CC	M	W0406	125Z			78-36-11	ALL
	= CC	M	W0406	126Z			78-36-11	ALL
	= CC	M	W0406	248Z			78-36-11	ALL
	= CC	M	W0406	249Z			78-36-11	ALL
	= CC	M	W0406	251Z			78-36-11	ALL
	= CC	M	W0406	252Z			78-36-11	ALL
D04214P		AW0319/ /		PLUG-L WING/STRUT				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W0356	033	18		75-23-11	ALL
	6		W0356	034	18		75-23-11	ALL
	7		W0356	110	18		75-23-11	ALL
	8		W0356	111	18		75-23-11	ALL
	9		W0356	163	20		78-36-11	ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14		W0356	400R	18		26-18-12	ALL
	15		W0356	049	18		SPARE	ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21		W0356	451R	18		26-18-12	ALL
	22	UNUSED						ALL
	23		W0356	205B	18		78-36-11	ALL
	24		W0356	205R	18		78-36-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04200

Page 16

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04214P		AW0319/ /		PLUG-L WING/STRUT (continued)				ALL
	25		W0356	206B	18		78-36-11	ALL
	26		W0356	206R	18		78-36-11	ALL
	27		W0356	207B	18		78-36-11	ALL
	28		W0356	207R	18		78-36-11	ALL
	29		W0356	204R	18		78-36-11	ALL
	30		W0356	204B	18		78-36-11	ALL
	= CC	M	W0356	033Z			75-23-11	ALL
	= CC	M	W0356	034Z			75-23-11	ALL
	= CC	M	W0356	110Z			75-23-11	ALL
	= CC	M	W0356	111Z			75-23-11	ALL
	= CC	M	W0356	163Z			78-36-11	ALL
D04215J		AE0306/ /		RCPT-E2-3				ALL
	1	UNUSED						ALL
	2		W0219	016	20		SPARE	ALL
	3		W0219	013	22		31-31-11	ALL
	4		W0219	014	22		31-31-11	ALL
	5		W0219	015	20		SPARE	ALL
	6		W0219	046	22		31-36-11	ALL
	7		W0219	039	22		31-31-15	ALL
	8	UNUSED						050-099, 275-299
	8		W0219	036	22		SPARE	150-199
	9	UNUSED						ALL
	10		W0219	037	22		31-35-11	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D04215P		AE0306/ /		PLUG-E2-3				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W0135	073	22		31-31-11	ALL
	4		W0135	074	22		31-31-11	ALL
	5	UNUSED						ALL
	6		W0135	189	22		31-36-11	ALL
	7		W0135	671	22		31-31-15	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10		W0135	753	22		31-35-11	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D04200
Page 17
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04216J		AW0305/ /		RCPT-ENGINE FIREWALL,LH				050-099, 150-199, 275-278
	1		W0352	206B	18		24-11-11	050-099, 150-199, 275-278
	2		W0352	206R	18		24-11-11	050-099, 150-199, 275-278
	3		W0352	206Z			24-11-11	050-099, 150-199, 275-278
	4		W0352	026	18		24-11-11	050-099, 150-199, 275-278
	5		W0352	207B	18		24-21-11	050-099, 150-199, 275-278
	6		W0352	207R	18		24-21-11	050-099, 150-199, 275-278
	7		W0352	207Z			24-21-11	050-099, 150-199, 275-278
	8		W0352	401B	18		24-21-11	050-099, 150-199, 275-278
	9		W0352	401R	18		24-21-11	050-099, 150-199, 275-278
	10		W0352	401Y	18		24-21-11	050-099, 150-199, 275-278
	11		W0352	401G	18		24-21-11	050-099, 150-199, 275-278
	12		W0352	208B	18		24-11-11	050-099, 150-199, 275-278
	13		W0352	208R	18		24-11-11	050-099, 150-199, 275-278
	14		W0352	209B	18		24-11-11	050-099, 150-199, 275-278
	15		W0352	209R	18		24-11-11	050-099, 150-199, 275-278
	16		W0352	028	18		24-11-11	050-099, 150-199, 275-278
	17	UNUSED						050-099, 150-199, 275-278
	18		W0352	303B	18		24-21-11	050-099, 150-199, 275-278
	19		W0352	303R	18		24-21-11	050-099, 150-199, 275-278
	20		W0352	303Y	18		24-21-11	050-099, 150-199, 275-278
	21		W0352	027	18		24-11-11	050-099, 150-199, 275-278
	22		W0352	030	18		24-11-11	050-099, 150-199, 275-278
	23	UNUSED						050-099, 150-199, 275-278
	24	UNUSED						050-099, 150-199, 275-278
	25		W0352	210R	18		SPARE	050-099, 150-199, 275-278
	26		W0352	210B	18		SPARE	050-099, 150-199, 275-278
	27		W0352	040	18		24-11-11	050-099, 150-199, 275-278
	28		W0352	041	18		24-11-11	050-099, 150-199, 275-278
	29	UNUSED						050-099, 150-199, 275-278
	30	UNUSED						050-099, 150-199, 275-278
D04216P		AW0305/ /		PLUG-ENGINE FIREWALL LH				ALL
	1		W3538	201B	18		24-11-11	ALL
	2		W3538	201R	18		24-11-11	ALL
	3		W3538	201Z			24-11-11	ALL
	4		W3538	001	18		24-11-11	ALL
	5		W3538	202B	18		24-21-11	ALL
	6		W3538	202R	18		24-21-11	ALL
	7		W3538	202Z			24-21-11	ALL
	8		W3538	401B	18		24-21-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04200

Page 18

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04216P		AW0305/ /		PLUG-ENGINE FIREWALL LH (continued)				ALL
	9		W3538	401R	18		24-21-11	ALL
	10		W3538	401Y	18		24-21-11	ALL
	11		W3538	401G	18		24-21-11	ALL
	12		W3538	203B	18		24-11-11	ALL
	13		W3538	203R	18		24-11-11	ALL
	14		W3538	204B	18		24-11-11	ALL
	15		W3538	204R	18		24-11-11	ALL
	16		W3538	003	18		24-11-11	ALL
	17		W3538	004	18		24-11-11	ALL
	18		W3538	301B	18		24-21-11	ALL
	19		W3538	301R	18		24-21-11	ALL
	20		W3538	301Y	18		24-21-11	ALL
	21		W3538	007	20		24-11-11	ALL
	22		W3538	010	20		24-11-11	ALL
	23		W3538	015	18		24-11-11	ALL
	24		W3538	016	18		24-11-11	ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27		W3538	012	20		24-11-11	ALL
	28		W3538	013	20		24-11-11	ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	DED		W3538	007Z			24-11-11	ALL
	DED		W3538	010Z			24-11-11	ALL
	DED		W3538	012Z			24-11-11	ALL
	DED		W3538	013Z			24-11-11	ALL
D04217J		AE0306/ /		RCPT-E2-2				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W0219	005	22		34-61-11	ALL
	6		W0219	006	24		34-61-11	ALL
	7		W0219	007	22		SPARE	050-099, 150-199
	7	UNUSED						275-299
	8		W0219	008	24		SPARE	ALL
	9		W0219	009	20		34-53-11	050-099, 155-199, 275-299
	9		W0219	009	22		34-53-11	150-154
	10		W0219	010	22		34-55-11	ALL

HOOKUP LIST
D280T132

91-21-51
Section D04200
Page 19
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04217J		AE0306/ /		RCPT-E2-2 (continued)				ALL
	11		W0219	011	20		SPARE	ALL
	12	UNUSED						050-099, 150-155, 162-165, 275-276
	12	FM	W0219	049	16		23-25-11	156-157, 166-199, 277-299
	13	UNUSED						ALL
	14	UNUSED						ALL
	15		W0219	045	24		34-53-13	ALL
D04217P		AE0306/ /		PLUG-E2-2				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W0133	001	22		34-61-11	ALL
	6		W0133	002	24		34-61-11	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9		W0133	076	20		34-53-11	ALL
	10		W0133	085	22		34-55-11	ALL
	11	UNUSED						ALL
	12	UNUSED						050-099, 150-155, 162-165, 275-276
	12	FL	W0133	796	16		23-25-11	156-157, 166-199, 277-299
	13	UNUSED						ALL
	14	UNUSED						ALL
	15		W0133	057	24		34-53-13	ALL
	DED		W0133	001Z			34-61-11	ALL
	DED		W0133	002Z			34-61-11	ALL
	DED		W0133	057Z			34-53-13	ALL
	DED		W0133	076Z			34-53-11	ALL
	DED		W0133	085Z			34-55-11	ALL
D04218J		AW0319/ /		RCPT-L WING/STRUT				ALL
	1		W0424	451R	18		26-11-12	ALL
	2		W0424	452R	18		26-11-11	ALL
	3		W0424	453R	18		SPARE	ALL
	4		W0424	454R	18		26-11-12	ALL
	5		W0424	455R	18		26-11-11	ALL
	6		W0424	456R	18		26-11-11	ALL
	7		W0424	457R	18		26-11-12	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04200

Page 20

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04218P		AW0319/ /		PLUG-L WING/STRUT				ALL
	1		W0360	451R	16		26-11-12	ALL
	2		W0360	452R	16		26-11-11	ALL
	3		W0360	453R	16		SPARE	ALL
	4		W0360	454R	16		26-11-12	ALL
	5		W0360	455R	16		26-11-11	ALL
	6		W0360	456R	16		26-11-11	ALL
	7		W0360	457R	16		26-11-12	ALL
D04219J		AC0608/ /		RCPT-E5-3				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W0219	034	20		SPARE	ALL
	5		W0219	035	20		SPARE	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D04220J		AW0307/ /		RCPT-ENGINE FIREWALL,FWD				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W0388	001	18		80-11-21	ALL
	5		W0388	002	18		80-11-21	ALL
	6		W0388	003	18		80-11-21	ALL
	7	UNUSED						ALL
	8		W0388	005	18		76-11-11	ALL
	9		W0388	006	18		76-11-11	ALL
	10		W0388	007	18		76-11-11	ALL
	11	UNUSED						ALL
	12		W0388	009	18		76-11-11	ALL
	13		W0388	458R	16		SPARE	ALL
	14		W0388	454R	16		26-11-22	ALL
	15		W0388	455R	16		26-11-21	ALL
	16		W0388	456R	16		26-11-21	ALL

HOOKUP LIST

D280T132



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04220J		AW0307/ /		RCPT-ENGINE FIREWALL,FWD (continued)				ALL
	17	UNUSED						ALL
	18		W0388	457R	16		26-11-22	ALL
	19	UNUSED						ALL
	= CC	M	W0388	002Z			80-11-21	ALL
	= CC	M	W0388	003Z			80-11-21	ALL
	= CC	M	W0388	006Z			76-11-11	ALL
	= CC	M	W0388	009Z			76-11-11	ALL
D04223J		AC0604/ /		RCPT-E5-1				ALL
	1		W0219	029	22		34-33-11	ALL
	2		W0219	028	20		SPARE	ALL
	3		W0219	030	20		SPARE	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
D04223P		AC0604/ /		PLUG-E5-1				ALL
	1		W0165	008	20		34-33-11	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	DED		W0165	008Z			34-33-11	ALL
D04224J		AW0310/POS/01		RCPT-STRUT/FANCASE RH				ALL
	1		W0372	230R	20		73-21-14	050-099, 153
	1		W0372	022	18		73-21-14	150-152, 154-199, 275-299
	2		W0372	201R	20		77-12-12	ALL
	3		W0372	201B	20		77-12-12	ALL
	4		W0372	010	16		73-21-11	ALL
	5		W0372	203R	20		73-21-14	ALL
	6		W0372	203B	20		73-21-14	ALL
	7		W0372	040	20		73-21-11	ALL
	8		W0372	006	20		73-21-11	ALL
	9		W0372	226R	20		73-21-14	ALL
	10		W0372	226B	20		73-21-14	ALL
	11		W0372	107	20		73-21-14	ALL
	12		W0372	230B	20		73-21-14	050-099, 153
	12		W0372	022	18		73-21-14	150-152, 154-199, 275-299
	13		W0372	002	16		73-21-20	ALL
	14	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D04200

Page 22

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04224J		AW0310/POS/01		RCPT-STRUT/FANCASE RH (continued)				ALL
	15		W0372	202B	20		73-21-13	ALL
	16		W0372	202R	20		73-21-13	ALL
	17		W0372	227R	20		73-21-12	ALL
	18		W0372	109	20		73-21-19	ALL
	19		W0372	123	20		78-36-11	ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23		W0372	204R	20		73-21-14	ALL
	24		W0372	204B	20		73-21-14	ALL
	25		W0372	301Y	20		73-21-13	ALL
	26		W0372	301R	20		73-21-13	ALL
	27		W0372	301B	20		73-21-13	ALL
	28		W0372	227B	20		73-21-17	ALL
	29		W0372	218R	20		78-36-11	ALL
	30		W0372	218B	20		78-36-11	ALL
	31		W0372	102	20		78-36-11	ALL
	32		W0372	210R	20		73-21-14	ALL
	33		W0372	210B	20		73-21-14	ALL
	34		W0372	101	20		78-36-11	ALL
	35		W0372	207R	20		SPARE	050-099, 150-199, 275-276, 278-299
	35	UNUSED						277
	36		W0372	207B	20		SPARE	050-099, 150-199, 275-276, 278-299
	36	UNUSED						277
	37		W0372	025	16		SPARE	ALL
	38		W0372	305Y	20		73-21-11	ALL
	39		W0372	305R	20		73-21-11	ALL
	40		W0372	305B	20		73-21-11	ALL
	41		W0372	022	20		73-21-14	050-099, 153
	41	UNUSED						150-152, 154-199, 275-299
	42		W0372	112	20		73-21-17	ALL
	= CC	M	W0372	207Z			SPARE	050-099, 150-199, 275-276, 278-299
	= CC	M	W0372	227Z			73-21-17	050-099, 150-199, 275-276, 278-299
	= CC	M	W0372	002Z			73-21-20	ALL
	= CC	M	W0372	006Z			73-21-11	ALL
	= CC	M	W0372	010Z			73-21-11	ALL
	= CC	M	W0372	025Z			SPARE	ALL
	= CC	M	W0372	040Z			73-21-11	ALL
	= CC	M	W0372	101Z			78-36-11	ALL
	= CC	M	W0372	102Z			78-36-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04200

Page 23

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04224J		AW0310/POS/01		RCPT-STRUT/FANCASE RH (continued)				ALL
	= CC	M	W0372	107Z			73-21-14	ALL
	= CC	M	W0372	109Z			73-21-19	ALL
	= CC	M	W0372	112Z			73-21-17	ALL
	= CC	M	W0372	123Z			78-36-11	ALL
	= CC	M	W0372	201Z			77-12-12	ALL
	= CC	M	W0372	202Z			73-21-13	ALL
	= CC	M	W0372	203Z			73-21-14	ALL
	= CC	M	W0372	204Z			73-21-14	ALL
	= CC	M	W0372	210Z			73-21-14	ALL
	= CC	M	W0372	218Z			78-36-11	ALL
	= CC	M	W0372	226Z			73-21-14	ALL
	= CC	M	W0372	301Z			73-21-13	ALL
	= CC	M	W0372	305Z			73-21-11	ALL
	= CC	M	W0372	022Z			73-21-14	050-099, 153
	= CC	M	W0372	230Z			73-21-14	050-099, 153
	= CC	M	W0372	227Z			73-21-12	277
D04224P D04224P		AW0310/ / AW0312/ /		PLUG-STRUT/FANCASE PLUG-STRUT/FANCASE				050-099, 155-199, 277-299 150-154, 275-276
	1		W3502	033	20		73-21-14	ALL
	2		W3502	201R	20		77-12-12	ALL
	3		W3502	201B	20		77-12-12	ALL
	4		W3502	003	16		73-21-11	ALL
	5		W3502	205R	20		73-21-14	ALL
	6		W3502	205B	20		73-21-14	ALL
	7		W3502	040	20		73-21-11	ALL
	8		W3502	023	20		73-21-11	ALL
	9		W3502	200R	20		73-21-14	ALL
	10		W3502	200B	20		73-21-14	ALL
	11		W3502	101	20		73-21-14	ALL
	12		W3502	401B	20		73-21-14	ALL
	13		W3502	002	16		73-21-20	ALL
	14	UNUSED						ALL
	15		W3502	203B	20		73-21-13	ALL
	16		W3502	203R	20		73-21-13	ALL
	17		W3502	222R	20		73-21-12	ALL
	18		W3502	114	20		73-21-19	ALL
	19		W3502	026	20		78-36-11	ALL
	20		W3502	401R	20		73-21-14	ALL
	21		W3502	401Y	20		73-21-14	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04200

Page 24

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04224P		AW0310/ /		PLUG-STRUT/FANCASE (continued)				050-099, 155-199, 277-299
D04224P		AW0312/ /		PLUG-STRUT/FANCASE (continued)				150-154, 275-276
	22		W3502	401G	20		73-21-14	ALL
	23		W3502	204R	20		73-21-14	ALL
	24		W3502	204B	20		73-21-14	ALL
	25		W3502	301Y	20		73-21-13	ALL
	26		W3502	301R	20		73-21-13	ALL
	27		W3502	301B	20		73-21-13	ALL
	28		W3502	222B	20		73-21-17	ALL
	29		W3502	233R	20		78-36-11	ALL
	30		W3502	233B	20		78-36-11	ALL
	31		W3502	231R	20		78-36-11	ALL
	32		W3502	212R	20		73-21-14	ALL
	33		W3502	212B	20		73-21-14	ALL
	34		W3502	231B	20		78-36-11	ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38		W3502	305Y	20		73-21-11	ALL
	39		W3502	305R	20		73-21-11	ALL
	40		W3502	305B	20		73-21-11	ALL
	41		W3502	213R	20		73-21-17	ALL
	42		W3502	213B	20		73-21-17	ALL
= CC		G3	W3502	002Z			73-21-20	ALL
= CC		G3	W3502	003Z			73-21-11	ALL
= CC		G3	W3502	023Z			73-21-11	ALL
= CC		G3	W3502	026Z			78-36-11	ALL
= CC		G3	W3502	033Z			73-21-14	ALL
= CC		G3	W3502	040Z			73-21-11	ALL
= CC		G3	W3502	101Z			73-21-14	ALL
= CC		G3	W3502	114Z			73-21-19	ALL
= CC		G3	W3502	200Z			73-21-14	ALL
= CC		G3	W3502	201Z			77-12-12	ALL
= CC		G3	W3502	203Z			73-21-13	ALL
= CC		G3	W3502	204Z			73-21-14	ALL
= CC		G3	W3502	205Z			73-21-14	ALL
= CC		G3	W3502	212Z			73-21-14	ALL
= CC		G3	W3502	213Z			73-21-17	ALL
= CC		G3	W3502	222Z			73-21-12	ALL
= CC		G3	W3502	231Z			78-36-11	ALL
= CC		G3	W3502	233Z			78-36-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04200

Page 25

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04224P		AW0310/ /		PLUG-STRUT/FANCASE (continued)				050-099, 155-199, 277-299
D04224P		AW0312/ /		PLUG-STRUT/FANCASE (continued)				150-154, 275-276
	= CC	G3	W3502	301Z			73-21-13	ALL
	= CC	G3	W3502	305Z			73-21-11	ALL
	= CC	G3	W3502	401Z			73-21-14	ALL
D04225J		AE0307/ /		RCPT-E1-4				ALL
	1		W0223	001	20		22-11-32	ALL
	2		W0223	002	20		SPARE	ALL
	3		W0223	003	20		22-11-31	ALL
	4		W0223	004	20		SPARE	ALL
	5		W0223	005	22		SPARE	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D04225P		AE0307/ /		PLUG-E1-4				ALL
	1		W0127	003	22		22-11-32	ALL
	2	UNUSED						ALL
	3		W0127	006	22		22-11-31	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	DED		W0127	003Z			22-11-32	ALL
D04227J		AE0307/ /		RCPT-E2-5				ALL
	1		W0203	008	22		23-42-11	ALL
	2		W0203	009	22		23-51-11	ALL
	3		W0203	010	20		SPARE	ALL
	4		W0203	016	16		23-12-11	ALL
	5	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D04200

Page 26

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04227J		AE0307/ /		RCPT-E2-5 (continued)				ALL
	6	UNUSED						ALL
	7		W0203	018	18		23-31-11	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D04227P		AE0307/ /		PLUG-E2-5				ALL
	1		W0149	104	22		23-42-11	ALL
	2		W0149	113	22		23-51-11	ALL
	3	UNUSED						ALL
	4		W0149	001	16		23-12-11	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W0149	003	18		23-31-11	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	DED		W0149	003Z			23-31-11	ALL
	DED		W0149	104Z			23-42-11	ALL
D04228J		AW0305/ /		RCPT-ENGINE FIREWALL,LH				ALL
	1		W0360	451R	16		26-11-12	ALL
	2		W0360	452R	16		26-11-11	ALL
	3		W0360	453R	16		SPARE	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
D04228P		AW0305/ /		PLUG-ENGINE FIREWALL,LH				ALL
	1		W3522	451R	16		26-11-12	ALL
	2		W3522	452R	16		26-11-11	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D04200
Page 27
Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04228P		AW0305/ /		PLUG-ENGINE FIREWALL,LH (continued)				ALL
	7	UNUSED						ALL
D04229J		AE0306/ /		RCPT-E2-2				050-099, 150-154, 275-299
D04229J		355/125/R 13		RCPT-E2-2				155-199
	1		W1633	216R	24		31-35-12	ALL
	2		W1633	216B	24		31-35-12	ALL
	3		W1633	216Z			31-35-12	ALL
	4		W1633	217R	24		31-35-12	ALL
	5		W1633	217B	24		31-35-12	ALL
	6		W1633	217Z			31-35-12	ALL
	7		W1633	218R	24		31-35-12	ALL
	8		W1633	218B	24		31-35-12	ALL
	9		W1633	218Z			31-35-12	ALL
	10		W1633	225R	24		34-45-14	050-099, 150-199, 277-299
	10	UNUSED						275-276
	11		W1633	225B	24		34-45-14	050-099, 150-199, 277-299
	11	UNUSED						275-276
	12		W1633	225Z			34-45-14	050-099, 150-199, 277-299
	12	UNUSED						275-276
	13	UNUSED						050-099, 150-152, 275-299
	13		W1633	226R	24		SPARE	153-199
	14	UNUSED						050-099, 150-152, 275-299
	14		W1633	226B	24		SPARE	153-199
	15	UNUSED						050-099, 150-152, 275-299
	15		W1633	226Z			SPARE	153-199
	16		W1633	233R	24		23-22-15	ALL
	17		W1633	233B	24		23-22-15	ALL
	18		W1633	233Z			23-22-15	ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						050-099, 151-152, 275-299
	22		W9015	215R	22		23-25-13	150, 153-199
	23	UNUSED						050-099, 151-152, 275-299
	23		W9015	215B	22		23-25-13	150, 153-199
	24	UNUSED						050-099, 151-152, 275-299
	24		W9015	215Z			23-25-13	150, 153-199
D04229P		AE0306/ /		PLUG -E2-2				ALL
	1		W0133	563R	24		31-35-12	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04200

Page 28

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04229P		AE0306/ /		PLUG -E2-2 (continued)				ALL
	2		W0133	563B	24		31-35-12	ALL
	3		W0133	563Z			31-35-12	ALL
	4		W0133	564R	24		31-35-12	ALL
	5		W0133	564B	24		31-35-12	ALL
	6		W0133	564Z			31-35-12	ALL
	7		W0133	565R	24		31-35-12	ALL
	8		W0133	565B	24		31-35-12	ALL
	9		W0133	565Z			31-35-12	ALL
	10		W0133	750R	24		34-45-14	ALL
	11		W0133	750B	24		34-45-14	ALL
	12		W0133	750Z			34-45-14	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16		W0133	777R	24		23-22-15	ALL
	17		W0133	777B	24		23-22-15	ALL
	18		W0133	777Z			23-22-15	ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						050-099, 151-152, 275-299
	22		W0133	901R	22		23-25-13	150, 153-199
	23	UNUSED						050-099, 151-152, 275-299
	23		W0133	901B	22		23-25-13	150, 153-199
	24	UNUSED						050-099, 151-152, 275-299
	24		W0133	901Z			23-25-13	150, 153-199
D04230J		AW0307/ /		RCPT-ENGINE FIREWALL,FWD				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W0386	001	18		80-11-11	ALL
	5		W0386	002	18		80-11-11	ALL
	6		W0386	003	18		80-11-11	ALL
	7	UNUSED						ALL
	8		W0386	005	18		76-11-11	ALL
	9		W0386	006	18		76-11-11	ALL
	10		W0386	007	18		76-11-11	ALL
	11	UNUSED						ALL
	12		W0386	009	18		76-11-11	ALL

HOOKUP LIST
D280T132

91-21-51
Section D04200
Page 29
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04230J		AW0307/ /		RCPT-ENGINE FIREWALL,FWD (continued)				ALL
	13		W0386	458R	16		SPARE	ALL
	14		W0386	454R	16		26-11-12	ALL
	15		W0386	455R	16		26-11-11	ALL
	16		W0386	456R	16		26-11-11	ALL
	17	UNUSED						ALL
	18		W0386	457R	16		26-11-12	ALL
	19	UNUSED						ALL
	= CC	M	W0386	002Z			80-11-11	ALL
	= CC	M	W0386	003Z			80-11-11	ALL
	= CC	M	W0386	006Z			76-11-11	ALL
	= CC	M	W0386	009Z			76-11-11	ALL
D04230P		AW0307/ /		PLUG-ENGINE FIREWALL,FWD				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W3506	006	18		80-11-11	ALL
	5		W3506	007	18		80-11-11	ALL
	6		W3506	008	18		80-11-11	ALL
	7	UNUSED						ALL
	8		W3506	460	18		76-11-11	ALL
	9		W3506	461R	16		76-11-11	ALL
	10		W3506	453R	16		76-11-11	ALL
	11	UNUSED						ALL
	12		W3506	462R	16		76-11-11	ALL
	13	UNUSED						ALL
	14		W3506	451R	16		26-11-12	ALL
	15		W3506	452R	16		26-11-11	ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
D04232J		AW0305/ /		RCPT-ENGINE FIREWALL,LH				050-099, 150-199, 275-278
	1	UNUSED						050-099, 150-199, 275-278
	2		W0352	002	18		73-34-11	050-099, 150-199, 275-278
	3		W0352	003	18		36-11-61	050-099, 150-199, 275-278
	4		W0352	008	18		36-11-61	050-099, 150-199, 275-278
	5		W0352	004	18		36-11-61	050-099, 150-199, 275-278
	6	UNUSED						050-099, 150-199, 275-278

HOOKUP LIST

D280T132

91-21-51

Section D04200

Page 30

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04232J		AW0305/ /		RCPT-ENGINE FIREWALL,LH (continued)				050-099, 150-199, 275-278
	7		W0352	051	18		SPARE	050-099, 150-199, 275-278
	8		W0352	052	18		SPARE	050-099, 150-199, 275-278
	9		W0352	009	18		29-11-11	050-099, 150-199, 275-278
	10	UNUSED						050-099, 150-199, 275-278
	11	UNUSED						050-099, 150-199, 275-278
	12		W0352	012	18		74-31-11	050-099, 150-199, 275-278
	13		W0352	006	18		SPARE	050-099, 150-199, 275-278
	14		W0352	007	18		SPARE	050-099, 150-199, 275-278
	15	UNUSED						050-099, 150-199, 275-278
	16		W0352	305R	18		79-32-11	050-099, 150-199, 275-278
	17		W0352	305Y	18		79-32-11	050-099, 150-199, 275-278
	18		W0352	305B	18		79-32-11	050-099, 150-199, 275-278
	19	UNUSED						050-099, 150-155, 163-165, 275-276
	19		W0352	079	18		36-11-61	156-162, 166-199, 277-278
	20		W0352	020	18		36-11-61	050-099, 150-199, 275-278
	21	UNUSED						050-099, 150-155, 163-165, 275-276
	21		W0352	080	18		36-11-61	156-162, 166-199, 277-278
	22	UNUSED						050-099, 150-155, 163-165, 275-276
	22		W0352	081	18		36-11-61	156-162, 166-199, 277-278
	23		W0352	023	18		36-11-61	050-099, 150-199, 275-278
	24	UNUSED						050-099, 150-199, 275-278
	25	UNUSED						050-099, 150-199, 275-278
	26	UNUSED						050-099, 150-199, 275-278
	27	UNUSED						050-099, 150-199, 275-278
	28	UNUSED						050-099, 150-199, 275-278
	29	UNUSED						050-099, 150-199, 275-278
	30	UNUSED						050-099, 150-199, 275-278
	31	UNUSED						050-099, 150-199, 275-278
	32	UNUSED						050-099, 150-199, 275-278
	33	UNUSED						050-099, 150-199, 275-278
	34	UNUSED						050-099, 150-199, 275-278
	35	UNUSED						050-099, 150-199, 275-278
	36	UNUSED						050-099, 150-199, 275-278
	37		W0352	031	16		73-21-13	050-099, 150-199, 275-278
	38		W0352	032	16		73-21-13	050-099, 150-199, 275-278
	39	UNUSED						050-099, 150-199, 275-278
	40	UNUSED						050-099, 150-199, 275-278
	41	UNUSED						050-099, 150-199, 275-278
	42	UNUSED						050-099, 150-199, 275-278
	= CC	M	W0352	002Z			73-34-11	050-099, 150-199, 275-278

HOOKUP LIST
D280T132

91-21-51
Section D04200
Page 31
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04232J		AW0305/ /		RCPT-ENGINE FIREWALL,LH (continued)				050-099, 150-199, 275-278
	= CC	M	W0352	305Z			79-32-11	050-099, 150-199, 275-278
D04232P		AW0305/ /		PLUG-ENGINE FIREWALL,LH				ALL
	1	UNUSED						ALL
	2		W3508	005	18		73-34-11	ALL
	3		W3508	007	18		36-11-61	ALL
	4		W3508	008	18		36-11-61	ALL
	5		W3508	009	18		36-11-61	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9		W3508	017	18		29-11-11	ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12		W3508	021	18		74-31-21	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16		W3508	031	18		79-32-11	ALL
	17		W3508	032	18		79-32-11	ALL
	18		W3508	033	18		79-32-11	ALL
	19		W3508	034	18		36-11-61	ALL
	20		W3508	035	18		36-11-61	ALL
	21		W3508	036	18		36-11-61	ALL
	22		W3508	037	18		36-11-61	ALL
	23		W3508	040	18		36-11-61	ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37		W3508	038	16		73-21-13	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04200

Page 32

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04232P		AW0305/ /		PLUG-ENGINE FIREWALL,LH (continued)				ALL
	38		W3508	039	16		73-21-13	ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
D04233J		AE0307/ /		RCPT-E2-2				ALL
	1		W0203	001	22		34-51-11	ALL
	2		W0203	002	20		SPARE	ALL
	3		W0203	003	22		34-61-16	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
D04233P		AE0307/ /		PLUG-E2-2				ALL
	1		W0133	051	20		34-51-11	ALL
	2	UNUSED						ALL
	3		W0133	676	24		34-61-16	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	DED		W0133	051Z			34-51-11	ALL
	DED		W0133	676Z			34-61-16	ALL
D04234J		AW0319/ /		RCPT-L WING/STRUT				ALL
	1		W0420	103	20		73-21-17	ALL
	2		W0420	209R	20		77-12-12	ALL
	3		W0420	209B	20		77-12-12	ALL
	4		W0420	022	16		73-21-11	ALL
	5		W0420	203R	20		73-21-14	ALL
	6		W0420	203B	20		73-21-14	ALL
	7		W0420	001	20		73-21-11	ALL
	8		W0420	021	20		73-21-11	ALL
	9		W0420	305Y	20		73-21-11	ALL
	10		W0420	305B	20		73-21-11	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13		W0420	013	16		73-21-20	ALL
	14	UNUSED						ALL
	15		W0420	201B	20		73-21-13	ALL
	16		W0420	201R	20		73-21-13	ALL
	17		W0420	210R	20		73-21-12	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04200

Page 33

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04234J		AW0319/ /		RCPT-L WING/STRUT (continued)				ALL
	18	UNUSED						ALL
	19		W0420	305R	20		73-21-11	ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23		W0420	205B	20		73-21-14	ALL
	24		W0420	205R	20		73-21-14	ALL
	25		W0420	302Y	20		73-21-13	ALL
	26		W0420	302R	20		73-21-13	ALL
	27		W0420	302B	20		73-21-13	ALL
	28		W0420	210B	20		73-21-17	ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						050-099, 150-199, 275-276, 278-299
	35		W0420	206R	20		31-35-14	277
	36	UNUSED						050-099, 150-199, 275-276, 278-299
	36		W0420	206B	20		31-35-14	277
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40		W0420	100	20		73-21-19	ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	= CC	M	W0420	001Z			73-21-11	ALL
	= CC	M	W0420	013Z			73-21-20	ALL
	= CC	M	W0420	021Z			73-21-11	ALL
	= CC	M	W0420	022Z			73-21-11	ALL
	= CC	M	W0420	100Z			73-21-19	ALL
	= CC	M	W0420	103Z			73-21-17	ALL
	= CC	M	W0420	201Z			73-21-13	ALL
	= CC	M	W0420	203Z			73-21-14	ALL
	= CC	M	W0420	205Z			73-21-14	ALL
	= CC	M	W0420	209Z			77-12-12	ALL
	= CC	M	W0420	210Z			73-21-12	ALL
	= CC	M	W0420	302Z			73-21-13	ALL
	= CC	M	W0420	305Z			73-21-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04200

Page 34

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04234J		AW0319/ /		RCPT-L WING/STRUT (continued)				ALL
	= CC	M	W0420	206Z			31-35-14	277
	CAP	Y	W0420	206B	20		SPARE	050-099, 275-276, 278-299
	CAP	Y	W0420	206R	20		SPARE	050-099, 275-276, 278-299
	DED		W0420	206Z			SPARE	050-099, 275-276, 278-299
D04234P		AW0319/ /		PLUG-L WING/STRUT				ALL
	1		W0372	111	20		73-21-17	ALL
	2		W0372	201R	20		77-12-12	ALL
	3		W0372	201B	20		77-12-12	ALL
	4		W0372	003	16		73-21-11	ALL
	5		W0372	220R	20		73-21-14	ALL
	6		W0372	220B	20		73-21-14	ALL
	7		W0372	041	20		73-21-11	ALL
	8		W0372	014	20		73-21-11	ALL
	9		W0372	305Y	20		73-21-11	ALL
	10		W0372	305B	20		73-21-11	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13		W0372	002	16		73-21-20	ALL
	14	UNUSED						ALL
	15		W0372	202B	20		73-21-13	ALL
	16		W0372	202R	20		73-21-13	ALL
	17		W0372	227R	20		73-21-12	ALL
	18	UNUSED						ALL
	19		W0372	305R	20		73-21-11	ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23		W0372	204B	20		73-21-14	ALL
	24		W0372	204R	20		73-21-14	ALL
	25		W0372	301Y	20		73-21-13	ALL
	26		W0372	301R	20		73-21-13	ALL
	27		W0372	301B	20		73-21-13	ALL
	28		W0372	227B	20		73-21-17	ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D04200

Page 35

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04234P		AW0319/ /		PLUG-L WING/STRUT (continued)				ALL
	35		W0372	207R	20		SPARE	050-099, 150-199, 275-276, 278-299
	35		W0372	207R	20		31-35-14	277
	36		W0372	207B	20		SPARE	050-099, 150-199, 275-276, 278-299
	36		W0372	207B	20		31-35-14	277
	37		W0372	025	16		SPARE	ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40		W0372	108	20		73-21-19	ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	= CC	M	W0372	207Z			SPARE	050-099, 150-199, 275-276, 278-299
	= CC	M	W0372	227Z			73-21-17	050-099, 150-199, 275-276, 278-299
	= CC	M	W0372	002Z			73-21-20	ALL
	= CC	M	W0372	003Z			73-21-11	ALL
	= CC	M	W0372	014Z			73-21-11	ALL
	= CC	M	W0372	025Z			SPARE	ALL
	= CC	M	W0372	041Z			73-21-11	ALL
	= CC	M	W0372	108Z			73-21-19	ALL
	= CC	M	W0372	111Z			73-21-17	ALL
	= CC	M	W0372	201Z			77-12-12	ALL
	= CC	M	W0372	202Z			73-21-13	ALL
	= CC	M	W0372	204Z			73-21-14	ALL
	= CC	M	W0372	220Z			73-21-14	ALL
	= CC	M	W0372	301Z			73-21-13	ALL
	= CC	M	W0372	305Z			73-21-11	ALL
	= CC	M	W0372	207Z			31-35-14	277
	= CC	M	W0372	227Z			73-21-12	277
D04236J		AW0305/ /		RCPT-ENGINE FIREWALL,LH				ALL
	1		W0388	451R	16		26-11-22	ALL
	2		W0388	452R	16		26-11-21	ALL
	3		W0388	453R	16		SPARE	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
D04238J		AW0320/ /		RCPT-R WING/STRUT				ALL
	1		W0404	451R	18		26-11-22	ALL
	2		W0404	456R	18		26-11-21	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04200

Page 36

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04238J		AW0320/ /		RCPT-R WING/STRUT (continued)				ALL
	3	UNUSED						ALL
	4		W0404	001	20		80-11-21	ALL
	5		W0404	002	20		80-11-21	ALL
	6		W0404	003	20		80-11-21	ALL
	7	UNUSED						ALL
	8		W0404	005	20		76-11-11	ALL
	9		W0404	006	20		76-11-11	ALL
	10		W0404	007	20		76-11-11	ALL
	11	UNUSED						ALL
	12		W0404	009	20		76-11-11	ALL
	13	UNUSED						ALL
	14		W0404	454R	18		26-11-22	ALL
	15		W0404	452R	18		26-11-21	ALL
	16		W0404	455R	18		26-11-21	ALL
	17	UNUSED						ALL
	18		W0404	457R	18		26-11-22	ALL
	19	UNUSED						ALL
	= CC	M	W0404	002Z			80-11-21	ALL
	= CC	M	W0404	003Z			80-11-21	ALL
	= CC	M	W0404	006Z			76-11-11	ALL
	= CC	M	W0404	009Z			76-11-11	ALL
D04238P		AW0320/ /		PLUG-R WING/STRUT				ALL
	1		W0388	451R	16		26-11-22	ALL
	2		W0388	452R	16		26-11-21	ALL
	3		W0388	453R	16		SPARE	ALL
	4		W0388	001	18		80-11-21	ALL
	5		W0388	002	18		80-11-21	ALL
	6		W0388	003	18		80-11-21	ALL
	7	UNUSED						ALL
	8		W0388	005	18		76-11-11	ALL
	9		W0388	006	18		76-11-11	ALL
	10		W0388	007	18		76-11-11	ALL
	11	UNUSED						ALL
	12		W0388	009	18		76-11-11	ALL
	13		W0388	458R	16		SPARE	ALL
	14		W0388	454R	16		26-11-22	ALL
	15		W0388	455R	16		26-11-21	ALL
	16		W0388	456R	16		26-11-21	ALL
	17	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D04200
Page 37
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04238P		AW0320/ /		PLUG-R WING/STRUT (continued)				ALL
	18		W0388	457R	16		26-11-22	ALL
	19	UNUSED						ALL
	= CC	M	W0388	002Z			80-11-21	ALL
	= CC	M	W0388	003Z			80-11-21	ALL
	= CC	M	W0388	006Z			76-11-11	ALL
	= CC	M	W0388	009Z			76-11-11	ALL
D04239J		AE0319/ /		RCPT-E1-3				ALL
	1		W0207	029	20		SPARE	ALL
	2		W0207	030	20		34-12-11	ALL
	3	UNUSED						ALL
	4		W0207	004	20		22-31-12	ALL
	5	UNUSED						ALL
	6		W0207	032	22		34-12-11	ALL
	7		W0207	033	22		34-12-11	ALL
	8		W0207	034	22		34-12-11	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D04239P		AE0319/ /		PLUG-E1-3				ALL
	1	UNUSED						ALL
	2		W0125	105	22		34-12-11	ALL
	3	UNUSED						ALL
	4		W0125	709	20		22-31-12	ALL
	5	UNUSED						ALL
	6		W0125	106	22		34-12-11	ALL
	7		W0125	107	22		34-12-11	ALL
	8		W0125	001	22		34-12-11	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	DED		W0125	001Z			34-12-11	ALL
	DED		W0125	105Z			34-12-11	ALL
	DED		W0125	106Z			34-12-11	ALL
	DED		W0125	107Z			34-12-11	ALL
	DED		W0125	709Z			22-31-12	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04200

Page 38

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04240J		AW0307/ /		RCPT-ENGINE FIREWALL,LH				050-099, 150-166, 275-299
	1	UNUSED						050-099, 150-166, 275-299
	2		W0374	002	18		73-34-11	050-099, 150-166, 275-299
	3		W0374	003	18		36-11-62	050-099, 150-166, 275-299
	4		W0374	008	18		36-11-62	050-099, 150-166, 275-299
	5		W0374	004	18		36-11-62	050-099, 150-166, 275-299
	6	UNUSED						050-099, 150-166, 275-299
	7		W0374	051	18		SPARE	050-099, 150-166, 275-299
	8		W0374	052	18		SPARE	050-099, 150-166, 275-299
	9		W0374	009	18		29-11-21	050-099, 150-166, 275-299
	10	UNUSED						050-099, 150-166, 275-299
	11	UNUSED						050-099, 150-166, 275-299
	12		W0374	012	18		74-31-21	050-099, 150-166, 275-299
	13		W0374	006	18		SPARE	050-099, 150-166, 275-299
	14		W0374	007	18		SPARE	050-099, 150-166, 275-299
	15	UNUSED						050-099, 150-166, 275-299
	16		W0374	305R	18		79-32-11	050-099, 150-166, 275-299
	17		W0374	305Y	18		79-32-11	050-099, 150-166, 275-299
	18		W0374	305B	18		79-32-11	050-099, 150-166, 275-299
	19	UNUSED						050-099, 150-155, 163-165, 275-276
	19		W0374	079	18		36-11-62	156-162, 166, 277-299
	20		W0374	020	18		36-11-62	050-099, 150-166, 275-299
	21	UNUSED						050-099, 150-155, 163-165, 275-276
	21		W0374	080	18		36-11-62	156-162, 166, 277-299
	22	UNUSED						050-099, 150-155, 163-165, 275-276
	22		W0374	081	18		36-11-62	156-162, 166, 277-299
	23		W0374	023	18		36-11-62	050-099, 150-166, 275-299
	24	UNUSED						050-099, 150-166, 275-299
	25	UNUSED						050-099, 150-166, 275-299
	26	UNUSED						050-099, 150-166, 275-299
	27	UNUSED						050-099, 150-166, 275-299
	28	UNUSED						050-099, 150-166, 275-299
	29	UNUSED						050-099, 150-166, 275-299
	30	UNUSED						050-099, 150-166, 275-299
	31	UNUSED						050-099, 150-166, 275-299
	32	UNUSED						050-099, 150-166, 275-299
	33	UNUSED						050-099, 150-166, 275-299
	34	UNUSED						050-099, 150-166, 275-299
	35	UNUSED						050-099, 150-166, 275-299
	36	UNUSED						050-099, 150-166, 275-299
	37		W0374	031	16		73-21-13	050-099, 150-166, 275-299

HOOKUP LIST
D280T132

91-21-51
Section D04200
Page 39
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04240J		AW0307/ /		RCPT-ENGINE FIREWALL,LH (continued)				050-099, 150-166, 275-299
	38		W0374	032	16		73-21-13	050-099, 150-166, 275-299
	39	UNUSED						050-099, 150-166, 275-299
	40	UNUSED						050-099, 150-166, 275-299
	41	UNUSED						050-099, 150-166, 275-299
	42	UNUSED						050-099, 150-166, 275-299
	= CC	M	W0374	002Z			73-34-11	050-099, 150-166, 275-299
	= CC	M	W0374	305Z			79-32-11	050-099, 150-166, 275-299
D04241J		AE0319/ /		RCPT-E1-4				ALL
	1		W0207	028	22		SPARE	ALL
	2		W0207	017	24		31-51-12	ALL
	3	UNUSED						ALL
	4		W0207	024	22		SPARE	ALL
	5		W0207	025	22		SPARE	ALL
	6		W0207	026	22		SPARE	ALL
	7		W0207	007	20		22-11-32	ALL
	8		W0207	008	22		34-31-31	ALL
	9		W0207	009	20		SPARE	ALL
	10		W0207	016	24		34-24-11	ALL
	11		W0207	018	20		34-24-11	ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14		W0207	015	12		SPARE	ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
D04241P		AE0319/ /		PLUG-E1-4				ALL
	1	UNUSED						ALL
	2		W0127	080	24		31-51-12	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D04200
Page 40
Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04241P		AE0319/ /		PLUG-E1-4 (continued)				ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W0127	008	22		22-11-32	ALL
	8		W0127	101	20		34-31-31	ALL
	9	UNUSED						ALL
	10		W0127	111	24		34-24-11	ALL
	11		W0127	115	20		34-24-11	ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	DED		W0127	008Z			22-11-32	ALL
	DED		W0127	111Z			34-24-11	ALL
	DED		W0127	115Z			34-24-11	ALL
D04242J		AW0320/ /		RCPT-R WING/STRUT				ALL
	1		W0418	011	18		SPARE	ALL
	2		W0418	002	20		73-34-11	ALL
	3		W0418	058	18		36-11-62	ALL
	4		W0418	059	18		36-11-62	ALL
	5		W0418	110	18		78-34-21	ALL
	6		W0418	111	18		78-34-21	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9		W0418	009	20		29-11-21	ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12		W0418	012	20		74-31-21	ALL
	13		W0418	304R	20		79-32-11	ALL
	14		W0418	304Y	20		79-32-11	ALL

HOOKUP LIST
D280T132

91-21-51
Section D04200
Page 41
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04242J		AW0320/ /		RCPT-R WING/STRUT (continued)				ALL
	15		W0418	304B	20		79-32-11	ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21		W0418	060	20		36-11-62	ALL
	22	UNUSED						ALL
	23		W0418	201B	20		78-34-21	ALL
	24		W0418	201R	20		78-34-21	ALL
	25		W0418	202B	20		78-34-21	ALL
	26		W0418	202R	20		78-34-21	ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32		W0418	205B	20		SPARE	ALL
	33		W0418	205R	20		SPARE	ALL
	34		W0418	108	18		78-34-21	ALL
	35		W0418	106	18		78-34-21	ALL
	36		W0418	107	18		78-34-21	ALL
	37	UNUSED						ALL
	38		W0418	103	20		36-11-62	ALL
	39	UNUSED						ALL
	40		W0418	104	20		36-11-62	ALL
	41		W0418	023	20		SPARE	ALL
	42		W0418	105	20		36-11-62	ALL
	= CC	M	W0418	002Z			73-34-11	ALL
	= CC	M	W0418	106Z			78-34-21	ALL
	= CC	M	W0418	107Z			78-34-21	ALL
	= CC	M	W0418	108Z			78-34-21	ALL
	= CC	M	W0418	110Z			78-34-21	ALL
	= CC	M	W0418	111Z			78-34-21	ALL
	= CC	M	W0418	304Z			79-32-11	ALL
D04242P		AW0320/ /		PLUG-R WING/STRUT				050-099, 150-166, 275-299
	1		W0374	001	18		78-34-21	050-099, 150-155, 163-165, 275-276
	1		W0374	001	18		SPARE	156-162, 166, 277
	1	UNUSED						278-299

HOOKUP LIST

D280T132

91-21-51

Section D04200

Page 42

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04242P		AW0320/ /		PLUG-R WING/STRUT (continued)				050-099, 150-166, 275-299
	2		W0374	002	18		73-34-11	050-099, 150-166, 275-299
	3		W0374	003	18		36-11-62	050-099, 150-166, 275-299
	4		W0374	004	18		36-11-62	050-099, 150-166, 275-299
	5	UNUSED						050-099, 150-166, 275-299
	6		W0374	124	18		78-34-21	050-099, 150-166, 275-299
	7		W0374	006	18		SPARE	050-099, 150-166, 275-299
	8		W0374	007	18		SPARE	050-099, 150-166, 275-299
	9		W0374	009	18		29-11-21	050-099, 150-166, 275-299
	10		W0374	052	18		SPARE	050-099, 150-166, 275-299
	11		W0374	051	18		SPARE	050-099, 150-166, 275-299
	12		W0374	012	18		74-31-21	050-099, 150-166, 275-299
	13		W0374	305R	18		79-32-11	050-099, 150-166, 275-299
	14		W0374	305Y	18		79-32-11	050-099, 150-166, 275-299
	15		W0374	305B	18		79-32-11	050-099, 150-166, 275-299
	16	UNUSED						050-099, 150-166, 275-299
	17	UNUSED						050-099, 150-166, 275-299
	18	UNUSED						050-099, 150-166, 275-299
	19	UNUSED						050-099, 150-166, 275-299
	20	UNUSED						050-099, 150-166, 275-299
	21		W0374	023	18		36-11-62	050-099, 150-166, 275-299
	22	UNUSED						050-099, 150-166, 275-299
	23		W0374	201B	18		78-34-21	050-099, 150-166, 275-299
	24		W0374	201R	18		78-34-21	050-099, 150-166, 275-299
	25		W0374	202B	18		78-34-21	050-099, 150-166, 275-299
	26		W0374	202R	18		78-34-21	050-099, 150-166, 275-299
	27	UNUSED						050-099, 150-166, 275-299
	28	UNUSED						050-099, 150-166, 275-299
	29	UNUSED						050-099, 150-166, 275-299
	30	UNUSED						050-099, 150-166, 275-299
	31	UNUSED						050-099, 150-166, 275-299
	32	UNUSED						050-099, 150-166, 275-299
	33	UNUSED						050-099, 150-166, 275-299
	34		W0374	116	18		78-34-21	050-099, 150-166, 275-299
	35	UNUSED						050-099, 150-166, 275-299
	36		W0374	125	18		78-34-21	050-099, 150-166, 275-299
	37	UNUSED						050-099, 150-166, 275-299
	38	UNUSED						050-099, 150-155, 163-165, 275-276
	38		W0374	079	18		36-11-62	156-162, 166, 277-299
	39	UNUSED						050-099, 150-166, 275-299
	40	UNUSED						050-099, 150-155, 163-165, 275-276

HOOKUP LIST
D280T132

91-21-51
Section D04200
Page 43
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04242P		AW0320/ /		PLUG-R WING/STRUT (continued)				050-099, 150-166, 275-299
	40		W0374	080	18		36-11-62	156-162, 166, 277-299
	41	UNUSED						050-099, 150-166, 275-299
	42	UNUSED						050-099, 150-155, 163-165, 275-276
	42		W0374	081	18		36-11-62	156-162, 166, 277-299
	= CC	M	W0374	002Z			73-34-11	050-099, 150-166, 275-299
	= CC	M	W0374	116Z			78-34-21	050-099, 150-166, 275-299
	= CC	M	W0374	124Z			78-34-21	050-099, 150-166, 275-299
	= CC	M	W0374	125Z			78-34-21	050-099, 150-166, 275-299
	= CC	M	W0374	305Z			79-32-11	050-099, 150-166, 275-299
D04244J		AW0320/ /		RCPT-R WING/STRUT				ALL
	1		W0422	103	20		73-21-17	ALL
	2		W0422	202B	20		77-12-12	ALL
	3		W0422	202R	20		77-12-12	ALL
	4		W0422	022	16		73-21-11	ALL
	5		W0422	203R	20		73-21-14	ALL
	6		W0422	203B	20		73-21-14	ALL
	7		W0422	001	20		73-21-11	ALL
	8		W0422	010	20		73-21-11	ALL
	9		W0422	305Y	20		73-21-11	ALL
	10		W0422	305B	20		73-21-11	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13		W0422	013	16		73-21-20	ALL
	14	UNUSED						ALL
	15		W0422	201B	20		73-21-13	ALL
	16		W0422	201R	20		73-21-13	ALL
	17		W0422	209R	20		73-21-12	ALL
	18		W0422	016	20		SPARE	ALL
	19		W0422	305R	20		73-21-11	ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23		W0422	205B	20		73-21-14	ALL
	24		W0422	205R	20		73-21-14	ALL
	25		W0422	302Y	20		73-21-13	ALL
	26		W0422	302R	20		73-21-13	ALL
	27		W0422	302B	20		73-21-13	ALL
	28		W0422	209B	20		73-21-17	ALL
	29	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D04200

Page 44

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04244J		AW0320/ /		RCPT-R WING/STRUT (continued)				ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35		W0422	012	20		SPARE	050-099, 150-199
	35	UNUSED						275-276, 278-299
	35		W0422	206R	20		31-35-15	277
	36	UNUSED						050-099, 150-199, 275-276, 278-299
	36		W0422	206B	20		31-35-15	277
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40		W0422	100	20		73-21-19	ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	= CC	M	W0422	001Z			73-21-11	ALL
	= CC	M	W0422	010Z			73-21-11	ALL
	= CC	M	W0422	013Z			73-21-20	ALL
	= CC	M	W0422	016Z			SPARE	ALL
	= CC	M	W0422	022Z			73-21-11	ALL
	= CC	M	W0422	100Z			73-21-19	ALL
	= CC	M	W0422	103Z			73-21-17	ALL
	= CC	M	W0422	201Z			73-21-13	ALL
	= CC	M	W0422	202Z			77-12-12	ALL
	= CC	M	W0422	203Z			73-21-14	ALL
	= CC	M	W0422	205Z			73-21-14	ALL
	= CC	M	W0422	209Z			73-21-12	ALL
	= CC	M	W0422	302Z			73-21-13	ALL
	= CC	M	W0422	305Z			73-21-11	ALL
	= CC	M	W0422	206Z			31-35-15	277
	CAP	Y	W0422	206B	20		SPARE	050-099, 275-276, 278-299
	CAP	Y	W0422	206R	20		SPARE	050-099, 275-276, 278-299
	DED		W0422	206Z			SPARE	050-099, 275-276, 278-299
D04244P		AW0320/ /		PLUG-R WING/STRUT				ALL
	1		W0382	130	20		73-21-17	ALL
	2		W0382	201B	20		77-12-12	ALL
	3		W0382	201R	20		77-12-12	ALL
	4		W0382	003	16		73-21-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04200

Page 45

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04244P		AW0320/ /		PLUG-R WING/STRUT (continued)				ALL
	5		W0382	220R	20		73-21-14	ALL
	6		W0382	220B	20		73-21-14	ALL
	7		W0382	041	20		73-21-11	ALL
	8		W0382	014	20		73-21-11	ALL
	9		W0382	305Y	20		73-21-11	ALL
	10		W0382	305B	20		73-21-11	ALL
	11		W0382	110	20		SPARE	ALL
	12	UNUSED						ALL
	13		W0382	002	16		73-21-20	ALL
	14	UNUSED						ALL
	15		W0382	202B	20		73-21-13	ALL
	16		W0382	202R	20		73-21-13	ALL
	17		W0382	227R	20		73-21-12	ALL
	18	UNUSED						ALL
	19		W0382	305R	20		73-21-11	ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23		W0382	204B	20		73-21-14	ALL
	24		W0382	204R	20		73-21-14	ALL
	25		W0382	301Y	20		73-21-13	ALL
	26		W0382	301R	20		73-21-13	ALL
	27		W0382	301B	20		73-21-13	ALL
	28		W0382	227B	20		73-21-17	ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35		W0382	207R	20		SPARE	050-099, 150-199, 275-276, 278-299
	35		W0382	207R	20		31-35-15	277
	36		W0382	207B	20		SPARE	050-099, 150-199, 275-276, 278-299
	36		W0382	207B	20		31-35-15	277
	37		W0382	025	16		SPARE	ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40		W0382	108	20		73-21-19	ALL
	41	UNUSED						ALL
	42	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D04200

Page 46

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04244P		AW0320/ /		PLUG-R WING/STRUT (continued)				ALL
	= CC	M	W0382	207Z			SPARE	050-099, 150-199, 275-276, 278-299
	= CC	M	W0382	002Z			73-21-20	ALL
	= CC	M	W0382	003Z			73-21-11	ALL
	= CC	M	W0382	014Z			73-21-11	ALL
	= CC	M	W0382	025Z			SPARE	ALL
	= CC	M	W0382	041Z			73-21-11	ALL
	= CC	M	W0382	108Z			73-21-19	ALL
	= CC	M	W0382	110Z			SPARE	ALL
	= CC	M	W0382	130Z			73-21-17	ALL
	= CC	M	W0382	201Z			77-12-12	ALL
	= CC	M	W0382	202Z			73-21-13	ALL
	= CC	M	W0382	204Z			73-21-14	ALL
	= CC	M	W0382	220Z			73-21-14	ALL
	= CC	M	W0382	227Z			73-21-12	ALL
	= CC	M	W0382	301Z			73-21-13	ALL
	= CC	M	W0382	305Z			73-21-11	ALL
	= CC	M	W0382	207Z			31-35-15	277
D04245J		AE0317/ /		RCPT-E1-6				ALL
	1		W0205	031	24		34-21-21	ALL
	2		W0205	034	20		SPARE	ALL
	3		W0205	035	20		SPARE	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
D04245P		AE0317/ /		PLUG-				ALL
	1		W0171	006	24		34-21-21	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	DED		W0171	006Z			34-21-21	ALL
D04246J		AW0310/POS/01		RCPT-STRUT FANCASE RH				ALL
	1		W0382	304R	20		73-21-14	050-099, 153
	1		W0382	209R	20		73-21-14	150-152, 154-199, 275-299
	2		W0382	201R	20		77-12-12	ALL
	3		W0382	201B	20		77-12-12	ALL
	4		W0382	010	16		73-21-11	ALL
	5		W0382	203R	20		73-21-14	ALL

HOOKUP LIST
D280T132

91-21-51
Section D04200
Page 47
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04246J		AW0310/POS/01		RCPT-STRUT FANCASE RH (continued)				ALL
	6		W0382	203B	20		73-21-14	ALL
	7		W0382	040	20		73-21-11	ALL
	8		W0382	006	20		73-21-11	ALL
	9		W0382	226R	20		73-21-14	ALL
	10		W0382	226B	20		73-21-14	ALL
	11		W0382	107	20		73-21-14	ALL
	12		W0382	208B	20		73-21-14	ALL
	13		W0382	002	16		73-21-20	ALL
	14	UNUSED						ALL
	15		W0382	202B	20		73-21-13	ALL
	16		W0382	202R	20		73-21-13	ALL
	17		W0382	227R	20		73-21-12	ALL
	18		W0382	109	20		73-21-19	ALL
	19		W0382	123	20		78-36-21	ALL
	20		W0382	304B	20		73-21-14	050-099, 153
	20		W0382	209B	20		73-21-14	150-152, 154-199, 275-299
	21		W0382	208R	20		73-21-14	ALL
	22	UNUSED						ALL
	23		W0382	204R	20		73-21-14	ALL
	24		W0382	204B	20		73-21-14	ALL
	25		W0382	301Y	20		73-21-13	ALL
	26		W0382	301R	20		73-21-13	ALL
	27		W0382	301B	20		73-21-13	ALL
	28		W0382	227B	20		73-21-17	ALL
	29		W0382	218R	20		78-36-21	ALL
	30		W0382	218B	20		78-36-21	ALL
	31		W0382	102	20		78-36-21	ALL
	32		W0382	210R	20		73-21-14	ALL
	33		W0382	210B	20		73-21-14	ALL
	34		W0382	101	20		78-36-21	ALL
	35		W0382	207R	20		SPARE	050-099, 150-199, 275-276, 278-299
	35	UNUSED						277
	36		W0382	207B	20		SPARE	050-099, 150-199, 275-276, 278-299
	36	UNUSED						277
	37		W0382	025	16		SPARE	ALL
	38		W0382	305Y	20		73-21-11	ALL
	39		W0382	305R	20		73-21-11	ALL
	40		W0382	305B	20		73-21-11	ALL
	41		W0382	304Y	20		73-21-14	050-099, 153
	41	UNUSED						150-152, 154-199, 275-299

HOOKUP LIST

D280T132

91-21-51

Section D04200

Page 48

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04246J		AW0310/POS/01		RCPT-STRUT FANCASE RH (continued)				ALL
	42		W0382	131	20		73-21-17	ALL
	= CC	M	W0382	207Z			SPARE	050-099, 150-199, 275-276, 278-299
	= CC	M	W0382	002Z			73-21-20	ALL
	= CC	M	W0382	006Z			73-21-11	ALL
	= CC	M	W0382	010Z			73-21-11	ALL
	= CC	M	W0382	025Z			SPARE	ALL
	= CC	M	W0382	040Z			73-21-11	ALL
	= CC	M	W0382	101Z			78-36-21	ALL
	= CC	M	W0382	102Z			78-36-21	ALL
	= CC	M	W0382	107Z			73-21-14	ALL
	= CC	M	W0382	109Z			73-21-19	ALL
	= CC	M	W0382	123Z			78-36-21	ALL
	= CC	M	W0382	131Z			73-21-17	ALL
	= CC	M	W0382	201Z			77-12-12	ALL
	= CC	M	W0382	202Z			73-21-13	ALL
	= CC	M	W0382	203Z			73-21-14	ALL
	= CC	M	W0382	204Z			73-21-14	ALL
	= CC	M	W0382	208Z			73-21-14	ALL
	= CC	M	W0382	210Z			73-21-14	ALL
	= CC	M	W0382	218Z			78-36-21	ALL
	= CC	M	W0382	226Z			73-21-14	ALL
	= CC	M	W0382	227Z			73-21-12	ALL
	= CC	M	W0382	301Z			73-21-13	ALL
	= CC	M	W0382	305Z			73-21-11	ALL
	= CC	M	W0382	304Z			73-21-14	050-099, 153
	= CC	M	W0382	209Z			73-21-14	150-152, 154-199, 275-299
D04247J		AE0317/ /		RCPT-E1-5				ALL
	1		W0205	015	20		22-11-22	ALL
	2		W0205	033	24		31-51-11	ALL
	3		W0205	030	20		23-26-11	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9		W0205	009	22		34-22-26	ALL
	10	UNUSED						ALL
	11		W0205	011	22		34-31-21	ALL
	12		W0205	012	20		27-32-21	ALL

HOOKUP LIST
D280T132

91-21-51
Section D04200
Page 49
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04247J		AE0317/ /		RCPT-E1-5 (continued)				ALL
	13		W0205	013	20		22-11-21	ALL
	14		W0205	014	20		22-11-22	ALL
	15		W0205	001	18		SPARE	ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24		W0205	024	24		27-48-11	ALL
	25		W0205	023	24		34-22-26	ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
D04247P		AE0317/ /		PLUG-E1-5				ALL
	1		W0119	008	22		22-11-22	ALL
	2		W0119	071	24		31-51-11	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9		W0119	072	22		34-22-26	ALL
	10	UNUSED						ALL
	11		W0119	101	20		34-31-21	ALL
	12		W0119	155	20		27-32-21	ALL
	13		W0119	006	22		22-11-21	ALL
	14		W0119	003	22		22-11-22	ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D04200

Page 50

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04247P		AE0317/ /		PLUG-E1-5 (continued)				ALL
	23	UNUSED						ALL
	24		W0119	170	24		27-48-11	ALL
	25		W0119	189	24		34-22-26	ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	DED		W0119	008Z			22-11-22	ALL
	DED		W0119	155Z			27-32-21	ALL
D04248J		AW0320/ /		RCPT-R WING/STRUT				ALL
	1		W0408	059	20		36-22-11	ALL
	2		W0408	060	20		36-11-52	ALL
	3		W0408	061	20		36-11-52	ALL
	4		W0408	062	18		36-11-52	ALL
	5		W0408	004	18		SPARE	ALL
	6		W0408	064	18		36-11-52	ALL
	7		W0408	065	20		36-11-52	ALL
	8		W0408	066	20		36-11-52	ALL
	9		W0408	067	20		36-23-21	ALL
	10	UNUSED						ALL
	11		W0408	069	20		36-23-21	ALL
	12		W0408	070	20		36-23-21	ALL
	13		W0408	301B	20		36-23-21	ALL
	14		W0408	301R	20		36-23-21	ALL
	15		W0408	301Y	20		36-23-21	ALL
	16		W0408	301Z			36-23-21	ALL
	17		W0408	075	20		36-23-21	ALL
	18		W0408	074	20		36-23-21	ALL
	19		W0408	209R	20		36-22-21	ALL
	20		W0408	209B	20		36-22-21	ALL
	21	UNUSED						ALL
	22		W0408	132	18		78-36-21	ALL
	23		W0408	133	18		78-36-21	ALL
	24		W0408	084R	18		26-18-21	ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D04200

Page 51

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04248P		AW0320/ /		PLUG-R WING/STRUT				ALL
	1		W0376	046	18		36-22-11	ALL
	2		W0376	061	18		36-11-52	ALL
	3		W0376	062	18		36-11-52	ALL
	4		W0376	063	18		36-11-52	ALL
	5	UNUSED						ALL
	6		W0376	065	18		36-11-52	ALL
	7		W0376	066	18		36-11-52	ALL
	8		W0376	067	18		36-11-52	ALL
	9		W0376	074	18		36-23-21	ALL
	10	UNUSED						ALL
	11		W0376	079	18		36-23-21	ALL
	12		W0376	083	18		36-23-21	ALL
	13		W0376	301B	20		36-23-21	ALL
	14		W0376	301R	20		36-23-21	ALL
	15		W0376	301Y	20		36-23-21	ALL
	16		W0376	301Z			36-23-21	ALL
	17		W0376	087	18		36-23-21	ALL
	18		W0376	085	18		36-23-21	ALL
	19		W0376	201R	18		36-22-21	ALL
	20		W0376	201B	18		36-22-21	ALL
	21		W0376	044	18		SPARE	ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24		W0376	459R	18		26-18-21	ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
D04251J		AE0320/ /		RCPT-E2-5				ALL
	1		W0205	029	20		23-32-11	ALL
	2		W0205	032	22		23-71-11	ALL
	3		W0205	004	20		SPARE	ALL
	4		W0205	002	16		23-12-21	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D04200

Page 52

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04251J		AE0320/ /		RCPT-E2-5 (continued)				ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D04251P		AE0320/ /		PLUG-E2-5				ALL
	1		W0149	036	20		23-32-11	ALL
	2		W0149	125	22		23-71-11	ALL
	3	UNUSED						ALL
	4		W0149	002	16		23-12-21	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	DED		W0149	036Z			23-32-11	ALL
D04252J		AW0320/ /		RCPT-R WING/STRUT				ALL
	1		W0408	001	20		36-11-62	ALL
	2		W0408	002	20		36-11-62	ALL
	3		W0408	003	18		36-11-62	ALL
	4		W0408	080	20		30-21-11	ALL
	5		W0408	005	18		36-11-62	ALL
	6		W0408	006	20		36-11-62	ALL
	7		W0408	007	20		36-11-62	ALL
	8		W0408	008	20		36-11-62	ALL
	9		W0408	009	20		36-11-62	ALL
	10		W0408	010	20		36-11-62	ALL
	11		W0408	011	20		36-11-62	ALL
	12		W0408	303B	20		79-31-11	ALL
	13		W0408	303Y	20		79-31-11	ALL
	14		W0408	303R	20		79-31-11	ALL
	15		W0408	015	20		74-31-21	ALL
	16		W0408	016	20		79-35-11	ALL
	17		W0408	302R	20		73-31-11	ALL
	18		W0408	302B	20		73-31-11	ALL
	19		W0408	302Y	20		73-31-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04200

Page 53

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04252J		AW0320/ /		RCPT-R WING/STRUT (continued)				ALL
	20		W0408	116	20		36-11-62	ALL
	21	UNUSED						ALL
	22		W0408	028	20		79-33-11	ALL
	23		W0408	018	20		30-21-11	ALL
	24		W0408	017	20		30-21-11	ALL
	25		W0408	019	20		30-21-11	ALL
	26		W0408	086	20		30-21-11	ALL
	27		W0408	304R	20		73-33-11	ALL
	28		W0408	304Y	20		73-33-11	ALL
	29		W0408	304B	20		73-33-11	ALL
	30	UNUSED						ALL
	= CC	M	W0408	016Z			79-35-11	ALL
	= CC	M	W0408	028Z			79-33-11	ALL
	= CC	M	W0408	086Z			30-21-11	ALL
	= CC	M	W0408	302Z			73-31-11	ALL
	= CC	M	W0408	303Z			79-31-11	ALL
	= CC	M	W0408	304Z			73-33-11	ALL
	CAP	Y	W0408	025	20		SPARE	ALL
	CAP	Y	W0408	201B	20		SPARE	ALL
	CAP	Y	W0408	201R	20		SPARE	ALL
D04252P		AW0320/ /		PLUG-R WING/STRUT				ALL
	1		W0376	001	18		36-11-62	ALL
	2		W0376	002	18		36-11-62	ALL
	3		W0376	003	18		36-11-62	ALL
	4		W0376	100	18		30-21-11	ALL
	5		W0376	005	18		36-11-62	ALL
	6		W0376	006	18		36-11-62	ALL
	7		W0376	007	18		36-11-62	ALL
	8		W0376	112	18		36-11-62	ALL
	9		W0376	113	18		36-11-62	ALL
	10		W0376	010	18		36-11-62	ALL
	11		W0376	011	18		36-11-62	ALL
	12		W0376	306B	18		79-31-11	ALL
	13		W0376	306Y	18		79-31-11	ALL
	14		W0376	306R	18		79-31-11	ALL
	15		W0376	039	18		74-31-21	ALL
	16		W0376	016	18		79-35-11	ALL
	17		W0376	302R	18		73-31-11	ALL
	18		W0376	302B	18		73-31-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04200

Page 54

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04252P		AW0320/ /		PLUG-R WING/STRUT (continued)				ALL
	19		W0376	302Y	18		73-31-11	ALL
	20		W0376	116	18		36-11-62	ALL
	21	UNUSED						ALL
	22		W0376	048	18		79-33-11	ALL
	23		W0376	104	18		30-21-11	ALL
	24		W0376	105	18		30-21-11	ALL
	25		W0376	058	18		30-21-11	ALL
	26		W0376	157	20		30-21-11	ALL
	27		W0376	304R	18		73-33-11	050-099, 155-199, 275-299
	27		W0376	304R	18		MULTI	150-154
	28		W0376	304Y	18		73-33-11	050-099, 155-199, 275-299
	28		W0376	304Y	18		MULTI	150-154
	29		W0376	304B	18		73-33-11	050-099, 155-199, 275-299
	29		W0376	304B	18		MULTI	150-154
	30	UNUSED						ALL
	= CC	M	W0376	016Z			79-35-11	ALL
	= CC	M	W0376	048Z			79-33-11	ALL
	= CC	M	W0376	157Z			30-21-11	ALL
	= CC	M	W0376	302Z			73-31-11	ALL
	= CC	M	W0376	306Z			79-31-11	ALL
	= CC	M	W0376	304Z			73-33-11	050-099, 155-199, 275-299
	= CC	M	W0376	304Z			MULTI	150-154
D04253J		AE0320/ /		RCPT-E2-3				ALL
	1		W0205	026	24		34-61-21	ALL
	2	UNUSED						050-099
	2		W0205	027	24		SPARE	150-199, 275-299
	3		W0205	028	20		SPARE	ALL
	4		W0205	016	22		34-51-21	ALL
	5		W0205	017	20		34-53-21	050-099, 155-199, 275-299
	5		W0205	017	22		34-53-21	150-154
	6		W0205	018	22		34-55-21	ALL
	7		W0205	019	22		34-12-21	ALL
	8		W0205	020	22		34-12-21	ALL
	9		W0205	021	22		34-12-21	ALL
	10		W0205	022	22		34-12-21	ALL
	11		W0205	037	22		SPARE	ALL
	12		W0205	025	22		34-61-21	ALL
	13		W0205	039	22		SPARE	ALL
	14		W0205	041	24		34-61-26	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04200

Page 55

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04253J		AE0320/ /		RCPT-E2-3 (continued)				ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D04253P		AE0320/ /		PLUG-E2-3				ALL
	1		W0145	002	24		34-61-21	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W0145	051	20		34-51-21	ALL
	5		W0145	048	20		34-53-21	ALL
	6		W0145	085	22		34-55-21	ALL
	7		W0145	830	22		34-12-21	ALL
	8		W0145	832	22		34-12-21	ALL
	9		W0145	831	22		34-12-21	ALL
	10		W0145	833	22		34-12-21	ALL
	11	UNUSED						ALL
	12		W0145	001	22		34-61-21	ALL
	13	UNUSED						ALL
	14		W0145	146	24		34-61-26	ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	DED		W0145	001Z			34-61-21	ALL
	DED		W0145	002Z			34-61-21	ALL
	DED		W0145	048Z			34-53-21	ALL
	DED		W0145	051Z			34-51-21	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04200

Page 56

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04253P		AE0320/ /		PLUG-E2-3 (continued)				ALL
	DED		W0145	085Z			34-55-21	ALL
	DED		W0145	830Z			34-12-21	ALL
	DED		W0145	831Z			34-12-21	ALL
	DED		W0145	832Z			34-12-21	ALL
	DED		W0145	833Z			34-12-21	ALL
D04254J		AW0320/ /		RCPT-R WING/STRUT				ALL
	1		W0408	125	18		78-36-21	ALL
	2	UNUSED						ALL
	3		W0408	029	20		SPARE	ALL
	4		W0408	030	20		SPARE	ALL
	5		W0408	031	20		75-23-11	ALL
	6		W0408	032	20		75-23-11	ALL
	7		W0408	110	20		75-23-11	ALL
	8		W0408	111	20		75-23-11	ALL
	9		W0408	093	20		78-36-21	ALL
	10		W0408	225B	18		78-36-21	ALL
	11		W0408	225R	18		78-36-21	ALL
	12		W0408	226B	18		78-36-21	ALL
	13		W0408	226R	18		78-36-21	ALL
	14		W0408	047R	18		26-18-22	ALL
	15	UNUSED						ALL
	16		W0408	248R	18		78-36-21	ALL
	17		W0408	248B	18		78-36-21	ALL
	18		W0408	126	18		78-36-21	ALL
	19		W0408	249R	18		78-36-21	ALL
	20		W0408	249B	18		78-36-21	ALL
	21		W0408	046R	18		26-18-22	ALL
	22	UNUSED						ALL
	23		W0408	206B	20		78-36-21	ALL
	24		W0408	206R	20		78-36-21	ALL
	25		W0408	207B	20		78-36-21	ALL
	26		W0408	207R	20		78-36-21	ALL
	27		W0408	208B	20		78-36-21	ALL
	28		W0408	208R	20		78-36-21	ALL
	29		W0408	205R	20		78-36-21	ALL
	30		W0408	205B	20		78-36-21	ALL
	= CC	M	W0408	031Z			75-23-11	ALL
	= CC	M	W0408	032Z			75-23-11	ALL
	= CC	M	W0408	093Z			78-36-21	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04200

Page 57

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04254J		AW0320/ /		RCPT-R WING/STRUT (continued)				ALL
	= CC	M	W0408	110Z			75-23-11	ALL
	= CC	M	W0408	111Z			75-23-11	ALL
	= CC	M	W0408	125Z			78-36-21	ALL
	= CC	M	W0408	126Z			78-36-21	ALL
	= CC	M	W0408	225Z			78-36-21	ALL
	= CC	M	W0408	226Z			78-36-21	ALL
	= CC	M	W0408	248Z			78-36-21	ALL
	= CC	M	W0408	249Z			78-36-21	ALL
D04254P		AW0320/ /		PLUG-R WING/STRUT				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W0376	033	18		75-23-11	ALL
	6		W0376	034	18		75-23-11	ALL
	7		W0376	110	18		75-23-11	ALL
	8		W0376	111	18		75-23-11	ALL
	9		W0376	168	20		78-36-21	ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14		W0376	400R	18		26-18-22	ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21		W0376	451R	18		26-18-22	ALL
	22	UNUSED						ALL
	23		W0376	205B	18		78-36-21	ALL
	24		W0376	205R	18		78-36-21	ALL
	25		W0376	206B	18		78-36-21	ALL
	26		W0376	206R	18		78-36-21	ALL
	27		W0376	207B	18		78-36-21	ALL
	28		W0376	207R	18		78-36-21	ALL
	29		W0376	204R	18		78-36-21	ALL
	30		W0376	204B	18		78-36-21	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04200

Page 58

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04254P		AW0320/ /		PLUG-R WING/STRUT (continued)				ALL
	= CC	M	W0376	033Z			75-23-11	ALL
	= CC	M	W0376	034Z			75-23-11	ALL
	= CC	M	W0376	110Z			75-23-11	ALL
	= CC	M	W0376	111Z			75-23-11	ALL
	= CC	M	W0376	168Z			78-36-21	ALL
D04255J		AE0320/ /		RCPT-E2-6				ALL
	1		W0211	001	20		23-11-21	ALL
	2		W0211	002	20		23-11-21	ALL
	3		W0211	003	20		23-11-21	ALL
	4	UNUSED						ALL
	5		W0211	005	20		SPARE	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8		W0211	007	20		23-11-21	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D04255P		AE0320/ /		PLUG-E2-6				ALL
	1		W0173	007	20		23-11-21	ALL
	2		W0173	008	20		23-11-21	ALL
	3		W0173	010	20		23-11-21	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8		W0173	012	20		23-11-21	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	DED		W0173	007Z			23-11-21	ALL
	DED		W0173	008Z			23-11-21	ALL
	DED		W0173	010Z			23-11-21	ALL
D04256J		AW0305/ /		RCPT-ENGINE FIREWALL,LH				ALL
	1		W0378	451R	16		26-11-22	ALL
	2		W0378	452R	16		26-11-21	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04200

Page 59

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04256J		AW0305/ /		RCPT-ENGINE FIREWALL,LH (continued)				ALL
	3		W0378	453R	16		SPARE	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
D04257J		AE0308/ /		RCPT-E2-1				ALL
	1		W0141	105	22		27-41-21	ALL
	2		W0141	049	22		27-09-11	ALL
	3		W0141	050	22		27-09-11	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
D04257P		AE0308/ /		PLUG-E2-1				ALL
	1		W0205	003	22		27-41-21	ALL
	2		W0205	005	22		27-09-11	ALL
	3		W0205	007	22		27-09-11	ALL
	4		W0205	036	22		SPARE	ALL
	5		W0205	038	22		SPARE	ALL
D04258J		AW0305/ /		RCPT-ENGINE FIREWALL,LH				ALL
	1		W0376	001	18		36-11-62	ALL
	2		W0376	002	18		36-11-62	ALL
	3		W0376	003	18		36-11-62	ALL
	4		W0376	004	18		36-11-62	ALL
	5		W0376	005	18		36-11-62	ALL
	6		W0376	006	18		36-11-62	ALL
	7		W0376	007	18		36-11-62	ALL
	8		W0376	102	16		73-21-13	ALL
	9		W0376	009	18		36-11-62	ALL
	10		W0376	010	18		36-11-62	ALL
	11		W0376	011	18		36-11-62	ALL
	12		W0376	306B	18		79-31-11	ALL
	13		W0376	306Y	18		79-31-11	ALL
	14		W0376	306R	18		79-31-11	ALL
	15		W0376	039	18		74-31-21	ALL
	16		W0376	016	18		79-35-11	ALL
	17		W0376	302R	18		73-31-11	ALL
	18		W0376	302B	18		73-31-11	ALL
	19		W0376	302Y	18		73-31-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04200

Page 60

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04258J		AW0305/ /		RCPT-ENGINE FIREWALL,LH (continued)				ALL
	20		W0376	103	16		73-21-13	ALL
	21	UNUSED						ALL
	22		W0376	048	18		79-33-11	ALL
	23		W0376	304R	18		73-33-11	050-099, 155-199, 275-299
	23		W0376	304R	18		MULTI	150-154
	24		W0376	304Y	18		73-33-11	050-099, 155-199, 275-299
	24		W0376	304Y	18		MULTI	150-154
	25		W0376	304B	18		73-33-11	050-099, 155-199, 275-299
	25		W0376	304B	18		MULTI	150-154
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29		W0376	112	18		36-11-62	ALL
	30		W0376	113	18		36-11-62	ALL
	= CC	M	W0376	016Z			79-35-11	ALL
	= CC	M	W0376	048Z			79-33-11	ALL
	= CC	M	W0376	302Z			73-31-11	ALL
	= CC	M	W0376	306Z			79-31-11	ALL
	= CC	M	W0376	304Z			73-33-11	050-099, 155-199, 275-299
	= CC	M	W0376	304Z			MULTI	150-154
D04259J		AC0604/ /		RCPT-E5-1				ALL
	1		W0211	018	22		34-33-21	ALL
	2		W0211	020	20		SPARE	ALL
	3		W0211	021	20		SPARE	ALL
	4		W0211	056	18		SPARE	ALL
	5	UNUSED						ALL
	6		W0211	025	20		SPARE	ALL
	7	UNUSED						ALL
	8		W0211	026	22		SPARE	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D04259P		AC0604/ /		PLUG-E5-1				ALL
	1		W0175	030	20		34-33-21	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D04200
Page 61
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04259P		AC0604/ /		PLUG-E5-1 (continued)				ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	DED		W0175	030Z			34-33-21	ALL
D04263J		AF0120/ /		RCPT-P3				ALL
	1		W0211	029	24		34-61-25	050-099
	1		W0211	029	24		SPARE	150-199, 275-299
	2	UNUSED						ALL
	3		W0211	011	24		34-22-26	ALL
	4		W0211	010	24		34-22-26	ALL
	5	UNUSED						ALL
	6		W0211	006	20		SPARE	ALL
	7	UNUSED						ALL
	8		W0211	008	24		34-22-91	ALL
	9		W0211	012	24		34-22-26	ALL
	10		W0211	004	22		31-41-11	ALL
	11		W0211	009	22		34-22-92	ALL
	12		W0211	022	22		31-41-11	ALL
	13		W0211	013	22		34-13-21	ALL
	14		W0211	040	16		SPARE	ALL
	15		W0211	014	22		34-13-21	ALL
	16	UNUSED						ALL
	17		W0211	017	22		SPARE	ALL
	18	UNUSED						ALL
	19		W0211	016	24		31-25-11	ALL
	20	UNUSED						ALL
	21	UNUSED						050-099, 275-299
	21		W0211	019	22		SPARE	150-199
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D04200

Page 62

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04263P		AF0120/ /		PLUG-P3				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W0031	023	24		34-22-26	ALL
	4		W0031	024	24		34-22-26	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8		W0031	007	24		34-22-91	050-099
	8		W0031	007	22		34-22-91	150-199, 275-299
	9		W0031	075	24		34-22-26	ALL
	10		W0031	650	22		31-41-11	ALL
	11		W0031	001	22		34-22-92	ALL
	12		W0031	651	22		31-41-11	ALL
	13		W0031	039	22		34-13-21	ALL
	14	UNUSED						ALL
	15		W0031	047	22		34-13-21	ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19		W0031	054	24		31-25-11	ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
D04264J		AW0320/ /		RCPT-R WING/STRUT				ALL
	1		W0426	451R	18		26-11-22	ALL
	2		W0426	452R	18		26-11-21	ALL
	3		W0426	453R	18		SPARE	ALL
	4		W0426	454R	18		26-11-22	ALL
	5		W0426	455R	18		26-11-21	ALL
	6		W0426	456R	18		26-11-21	ALL
	7		W0426	457R	18		26-11-22	ALL
D04264P		AW0320/ /		PLUG-R WING/STRUT				ALL
	1		W0378	451R	16		26-11-22	ALL
	2		W0378	452R	16		26-11-21	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04200

Page 63

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04264P		AW0320/ /		PLUG-R WING/STRUT (continued)				ALL
	3		W0378	453R	16		SPARE	ALL
	4		W0378	454R	16		26-11-22	ALL
	5		W0378	455R	16		26-11-21	ALL
	6		W0378	456R	16		26-11-21	ALL
	7		W0378	457R	16		26-11-22	ALL
D04266J		AW0305/ /		RCPT-ENGINE FIREWALL,LH				050-099, 150-166, 275-299
	1		W0374	206B	20		24-11-21	050-099, 150-166, 275-299
	2		W0374	206R	20		24-11-21	050-099, 150-166, 275-299
	3		W0374	206Z			24-11-21	050-099, 150-166, 275-299
	4		W0374	026	18		24-11-21	050-099, 150-166, 275-299
	5		W0374	207B	18		24-21-21	050-099, 150-166, 275-299
	6		W0374	207R	18		24-21-21	050-099, 150-166, 275-299
	7		W0374	207Z			24-21-21	050-099, 150-166, 275-299
	8		W0374	401B	18		24-21-21	050-099, 150-166, 275-299
	9		W0374	401R	18		24-21-21	050-099, 150-166, 275-299
	10		W0374	401Y	18		24-21-21	050-099, 150-166, 275-299
	11		W0374	401G	18		24-21-21	050-099, 150-166, 275-299
	12		W0374	208B	18		24-11-21	050-099, 150-166, 275-299
	13		W0374	208R	18		24-11-21	050-099, 150-166, 275-299
	14		W0374	209B	18		24-11-21	050-099, 150-166, 275-299
	15		W0374	209R	18		24-11-21	050-099, 150-166, 275-299
	16		W0374	028	18		24-11-21	050-099, 150-166, 275-299
	17	UNUSED						050-099, 150-166, 275-299
	18		W0374	303B	18		24-21-21	050-099, 150-166, 275-299
	19		W0374	303R	18		24-21-21	050-099, 150-166, 275-299
	20		W0374	303Y	18		24-21-21	050-099, 150-166, 275-299
	21		W0374	027	18		24-11-21	050-099, 150-166, 275-299
	22		W0374	030	18		24-11-21	050-099, 150-166, 275-299
	23	UNUSED						050-099, 150-166, 275-299
	24	UNUSED						050-099, 150-166, 275-299
	25		W0374	210R	18		SPARE	050-099, 150-166, 275-299
	26		W0374	210B	18		SPARE	050-099, 150-166, 275-299
	27		W0374	040	18		24-11-21	050-099, 150-166, 275-299
	28		W0374	041	18		24-11-21	050-099, 150-166, 275-299
	29	UNUSED						050-099, 150-166, 275-299
	30	UNUSED						050-099, 150-166, 275-299
D04267J		AF0119/ /		RCPT-P1				ALL
	1		W0207	010	24		34-22-81	ALL

HOOKUP LIST
D280T132

91-21-51
Section D04200
Page 64
Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04267J		AF0119/ /		RCPT-P1 (continued)				ALL
	2		W0207	011	22		34-13-11	ALL
	3		W0207	012	20		SPARE	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
D04267P		AF0119/ /		PLUG-P1				ALL
	1		W0051	008	22		34-22-81	ALL
	2		W0051	004	22		34-13-11	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
D04268J		AL1002/ /		RCPT-				ALL
	1		W0738	017	24		28-41-22	ALL
	2		W0738	018	24		28-41-22	ALL
	3		W0738	019	24		28-41-22	ALL
	4		W0738	020	24		28-41-22	ALL
	5		W0738	021	24		28-41-22	ALL
	6		W0738	022	24		28-41-22	ALL
	7		W0738	023	24		28-41-22	ALL
	8		W0738	024	24		28-41-22	ALL
	9		W0738	025	24		28-41-22	ALL
	10		W0738	026	24		28-41-22	ALL
	11		W0738	027	24		28-41-22	ALL
	12		W0738	028	24		28-41-22	ALL
	13		W0738	029	24		28-41-22	ALL
	14		W0738	030	24		28-41-22	ALL
	15		W0738	031	24		28-41-22	ALL
	16		W0738	085	22		SPARE	ALL
	17		W0738	803	22		SPARE	ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
D04268P		AL1002/ /		PLUG-R WING RS/BODY				050-099, 150-156, 162-166, 275-276
D04268P		AL1002/ /		PLUG-R WING RS/BODY				157, 167-199, 277-299
	1		W0448	0WHT	20		28-41-22	ALL
	2		W0448	0RYL	20		28-41-22	ALL
	3		W0448	0RBK	20		28-41-22	ALL
	4		W0448	0RGR	20		28-41-22	ALL
	5		W0448	0RBU	20		28-41-22	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04200

Page 65

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04268P		AL1002/ /		PLUG-R WING RS/BODY (continued)				050-099, 150-156, 162-166, 275-276
D04268P		AL1002/ /		PLUG-R WING RS/BODY (continued)				157, 167-199, 277-299
	6		W0448	0WBK	20		28-41-22	ALL
	7		W0448	0RVI	20		28-41-22	ALL
	8		W0448	0WBN	20		28-41-22	ALL
	9		W0448	0WRD	20		28-41-22	ALL
	10		W0448	0WYL	20		28-41-22	ALL
	11		W0448	0WOR	20		28-41-22	ALL
	12		W0448	0WGR	20		28-41-22	ALL
	13		W0448	0WBU	20		28-41-22	ALL
	14		W0448	0WBY	20		28-41-22	ALL
	15		W0448	0WVI	20		28-41-22	ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
D04271J		AF0203/ /		RCPT-P11				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W0040	010	22		27-41-11	ALL
	4	UNUSED						ALL
	5		W0040	020	22		27-21-12	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9		W0040	012	20		22-41-12	ALL
	10	UNUSED						050-099, 153-199, 275-299
	10		W0040	790	20		34-45-11	150-152
	11		W0040	013	24		34-22-16	ALL
	12		W0040	704	20		34-22-16	ALL
	13		W0040	014	20		22-11-11	ALL
	14		W0040	015	20		22-11-12	ALL
	15		W0040	016	20		22-11-12	ALL
	16		W0040	017	20		22-31-11	ALL
	17		W0040	018	20		22-31-12	ALL
	18		W0040	019	20		22-31-12	ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D04200

Page 66

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04271J		AF0203/ /		RCPT-P11 (continued)				ALL
	23		W0040	024	22		34-31-11	ALL
	24		W0040	025	24		27-48-11	ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27		W0040	026	24		34-22-36	ALL
	28	UNUSED						050-099, 151
	28		W0040	911	22		34-46-13	150, 152-199, 275-299
	29		W0040	027	22		34-46-11	ALL
	30	UNUSED						ALL
	31		W0040	028	24		34-21-11	ALL
	32	UNUSED						ALL
	33		W0040	790	20		34-45-11	050-099, 153-199, 277-299
	34	UNUSED						050-099, 153-199, 277-299
	35	UNUSED						050-099, 153-199, 277-299
	36	UNUSED						050-099, 153-199, 277-299
	37	UNUSED						050-099, 153-199, 277-299
	38	UNUSED						050-099, 153-199, 277-299
	39	UNUSED						050-099, 153-199, 277-299
	40	UNUSED						050-099, 153-199, 277-299
	41	UNUSED						050-099, 153-199, 277-299
	42	UNUSED						050-099, 153-199, 277-299
	43	UNUSED						050-099, 153-199, 277-299
	44	UNUSED						050-099, 153-199, 277-299
	45	UNUSED						050-099, 153-199, 277-299
	46	UNUSED						050-099, 153-199, 277-299
	47	UNUSED						050-099, 153-199, 277-299
	48	UNUSED						050-099, 153-199, 277-299
	49	UNUSED						050-099, 153-199, 277-299
	50	UNUSED						050-099, 153-199, 277-299
	51	UNUSED						050-099, 153-199, 277-299
	52	UNUSED						050-099, 153-199, 277-299
	53	UNUSED						050-099, 153-199, 277-299
	54	UNUSED						050-099, 153-199, 277-299
	55	UNUSED						050-099, 153-199, 277-299
D04271P		AF0203/ /		PLUG-P11				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W0201	003	22		27-41-11	ALL
	4	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D04200
Page 67
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04271P		AF0203/ /		PLUG-P11 (continued)				ALL
	5		W0201	005	22		27-21-12	ALL
	6	UNUSED						ALL
	7		W0201	007	20		SPARE	ALL
	8	UNUSED						ALL
	9		W0201	009	20		22-41-12	ALL
	10	UNUSED						050-099, 153-199, 275-299
	10		W0201	006	20		34-45-11	150-152
	11		W0201	011	24		34-22-16	ALL
	12		W0201	012	20		34-22-16	ALL
	13		W0201	013	20		22-11-11	ALL
	14		W0201	014	20		22-11-12	ALL
	15		W0201	015	20		22-11-12	ALL
	16		W0201	016	20		22-31-11	ALL
	17		W0201	017	20		22-31-12	ALL
	18		W0201	018	20		22-31-12	ALL
	19		W0201	019	22		SPARE	ALL
	20		W0201	020	22		SPARE	ALL
	21		W0201	021	22		SPARE	ALL
	22		W0201	022	22		SPARE	ALL
	23		W0201	023	22		34-31-11	ALL
	24		W0201	024	24		27-48-11	ALL
	25		W0201	025	20		SPARE	ALL
	26		W0201	026	20		SPARE	ALL
	27		W0201	027	24		34-22-36	ALL
	28		W0201	028	20		SPARE	050-099, 151
	28		W0201	028	20		34-46-13	150, 152-199, 275-299
	29		W0201	029	22		34-46-11	ALL
	30		W0201	030	20		SPARE	ALL
	31		W0201	031	24		34-21-11	ALL
	32	UNUSED						ALL
	33		W0201	006	20		34-45-11	050-099, 153-199, 277-299
	34	UNUSED						050-099, 153-199, 277-299
	35	UNUSED						050-099, 153-199, 277-299
	36	UNUSED						050-099, 153-199, 277-299
	37	UNUSED						050-099, 153-199, 277-299
	38	UNUSED						050-099, 153-199, 277-299
	39	UNUSED						050-099, 153-199, 277-299
	40	UNUSED						050-099, 153-199, 277-299
	41	UNUSED						050-099, 153-199, 277-299
	42	UNUSED						050-099, 153-199, 277-299

HOOKUP LIST

D280T132

91-21-51

Section D04200

Page 68

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04271P		AF0203/ /		PLUG-P11 (continued)				ALL
	43	UNUSED						050-099, 153-199, 277-299
	44	UNUSED						050-099, 153-199, 277-299
	45	UNUSED						050-099, 153-199, 277-299
	46	UNUSED						050-099, 153-199, 277-299
	47	UNUSED						050-099, 153-199, 277-299
	48	UNUSED						050-099, 153-199, 277-299
	49	UNUSED						050-099, 153-199, 277-299
	50	UNUSED						050-099, 153-199, 277-299
	51	UNUSED						050-099, 153-199, 277-299
	52	UNUSED						050-099, 153-199, 277-299
	53	UNUSED						050-099, 153-199, 277-299
	54	UNUSED						050-099, 153-199, 277-299
	55	UNUSED						050-099, 153-199, 277-299
D04272J		AL1002/ /		RCPT-R WING RS/BODY				ALL
	1		W0752	001	22		27-18-11	ALL
	2		W0752	002	22		27-18-11	050-099, 150-156, 162-166, 275-276
	2		W0752	002	22		SPARE	157, 167-199, 277-299
	3		W0752	003	22		27-18-11	050-099, 150-156, 162-166, 275-276
	3		W0752	003	22		SPARE	157, 167-199, 277-299
	4		W0752	006	22		27-18-11	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W0752	011	20		27-62-11	ALL
	8		W0752	014	22		27-58-11	050-099, 150-155, 162-165, 275-276
	8		W0752	303B	20		27-58-11	156-157, 166-199, 277-299
	9		W0752	015	22		27-58-11	050-099, 150-155, 162-165, 275-276
	9		W0752	303R	20		27-58-11	156-157, 166-199, 277-299
	10		W0752	016	22		27-58-11	ALL
	11		W0752	019	20		27-62-11	ALL
	12		W0752	032	22		28-42-11	ALL
	13		W0752	033	22		28-42-12	ALL
	14	UNUSED						050-099
	14		W0752	034	22		SPARE	150-199, 275-299
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D04200

Page 69

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04272J		AL1002/ /		RCPT-R WING RS/BODY (continued)				ALL
	21		W0752	040	20		27-18-11	ALL
	22	UNUSED						ALL
	23		W0752	042	20		27-18-11	ALL
	24		W0752	044	20		27-58-11	050-099, 150-155, 162-165, 275-276
	24		W0752	303Y	20		27-58-11	156-157, 166-199, 277-299
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
D04272P		AL1002/ /		PLUG-R WING RS/BODY				ALL
	1		W0464	405B	20		27-18-11	050-099, 150-154, 162-165, 275-276
	1		W0464	206R	20		27-18-11	155-157, 166-199, 277-299
	2		W0464	405R	20		27-18-11	050-099, 150-154, 162-165, 275-276
	2	UNUSED						155-157, 166-199, 277-299
	3		W0464	405Y	20		27-18-11	050-099, 150-154, 162-165, 275-276
	3	UNUSED						155-157, 166-199, 277-299
	4		W0464	404R	20		27-18-11	050-099, 150-154, 162-165, 275-276
	4		W0464	205R	20		27-18-11	155-157, 166-199, 277-299
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W0464	204B	20		27-62-11	ALL
	8		W0464	406Y	20		27-58-11	ALL
	9		W0464	406R	20		27-58-11	ALL
	10		W0464	406G	20		27-58-11	ALL
	11		W0464	204R	20		27-62-11	ALL
	12		W0464	011	20		28-42-11	ALL
	13		W0464	025	20		28-42-12	ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21		W0464	404G	20		27-18-11	050-099, 150-154, 162-165, 275-276
	21		W0464	205B	20		27-18-11	155-157, 166-199, 277-299
	22	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D04200

Page 70

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04272P		AL1002/ /		PLUG-R WING RS/BODY (continued)				ALL
	23		W0464	405G	20		27-18-11	050-099, 150-154, 162-165, 275-276
	23		W0464	206B	20		27-18-11	155-157, 166-199, 277-299
	24		W0464	406B	20		27-58-11	ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
D04273J		AF0201/ /		RCPT-P11				ALL
	1		W0040	029	22		27-09-11	ALL
	2		W0040	030	22		27-09-11	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W0040	031	22		34-61-11	ALL
	6		W0040	032	24		34-61-11	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9		W0040	034	20		34-53-11	050-099, 155-199, 275-299
	9		W0040	034	22		34-53-11	150-154
	10		W0040	102	22		34-55-11	ALL
	11	UNUSED						ALL
	12	UNUSED						050-099, 151-152, 275-299
	12	FM	W0040	910	16		23-25-11	150, 153-155, 162-165
	12	FM	W0040	908	16		23-25-11	156-157, 166-199
	13		W0040	036	22		31-31-11	ALL
	14		W0040	037	22		31-31-11	ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17		W0040	039	22		23-21-11	ALL
	18		W0040	20A	22		31-36-11	ALL
	19		W0040	041	22		23-22-11	ALL
	20		W0040	042	22		23-34-11	ALL
	21		W0040	064	16		23-12-31	ALL
	22	UNUSED						050-099, 151-152, 275-299
	22		W0040	905	20		23-25-13	150, 153-199
	23	UNUSED						050-099, 150-154
	23		W0040	508	24		34-53-13	155, 162-165, 275-276
	23		W0040	522	16		23-25-11	156-157, 166-199, 277-299

HOOKUP LIST
D280T132

91-21-51
Section D04200
Page 71
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04273J		AF0201/ /		RCPT-P11 (continued)				ALL
	24	UNUSED						050-099, 151-152, 275-276
	24		W0040	524	24		23-25-14	150, 153-199, 277-299
	25		W0040	043	20		23-11-11	ALL
	26		W0040	044	20		23-11-11	ALL
	27		W0040	045	20		23-11-11	ALL
	28	UNUSED						ALL
	29		W0040	046	22		34-33-11	ALL
	30	UNUSED						ALL
	31		W0040	047	22		34-57-11	ALL
	32		W0040	081	22		31-31-15	ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						050-099, 151-152, 156-157, 166-199, 275-299
	36	FM	W0040	522	16		23-25-11	150, 153-155, 162-165
	37		W0040	504	22		31-35-11	ALL
	38	UNUSED						ALL
	39		W0040	508	24		34-53-13	050-099, 150-154, 156-157, 166-199, 277-299
	39	UNUSED						155, 162-165, 275-276
D04273P		AF0201/ /		PLUG-P11				ALL
	1		W0219	001	22		27-09-11	ALL
	2		W0219	002	22		27-09-11	ALL
	3		W0219	003	20		SPARE	050-099, 150-199, 275-278
	3	UNUSED						280-299
	4		W0219	004	20		SPARE	ALL
	5		W0219	005	22		34-61-11	ALL
	6		W0219	006	24		34-61-11	ALL
	7		W0219	007	22		SPARE	050-099, 150-199
	7	UNUSED						275-299
	8		W0219	008	24		SPARE	ALL
	9		W0219	009	20		34-53-11	050-099, 155-199, 275-299
	9		W0219	009	22		34-53-11	150-154
	10		W0219	010	22		34-55-11	ALL
	11		W0219	011	20		SPARE	ALL
	12	UNUSED						050-099, 151-152, 275-299
	12	FL	W9011	903	16		23-25-11	150, 153-199
	13		W0219	013	22		31-31-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04200

Page 72

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04273P		AF0201/ /		PLUG-P11 (continued)				ALL
	14		W0219	014	22		31-31-11	ALL
	15		W0219	015	20		SPARE	ALL
	16		W0219	016	20		SPARE	ALL
	17		W0219	017	22		23-21-11	ALL
	18		W0219	046	22		31-36-11	ALL
	19		W0219	019	22		23-22-11	ALL
	20		W0219	020	22		23-34-11	ALL
	21		W0219	021	16		23-12-31	ALL
	22		W0219	022	22		SPARE	050-099, 151-152, 275-299
	22		W9011	902	20		23-25-13	150, 153-199
	23	UNUSED						050-099, 150-154
	23		W0219	045	24		34-53-13	155, 162-165, 275-276
	23		W0219	049	16		23-25-11	156-157, 166-199, 277-299
	24		W0219	024	20		SPARE	050-099, 151-152, 275-276, 280-299
	24		W0219	050	24		23-25-14	150, 153-199, 277-278
	25		W0219	025	20		23-11-11	ALL
	26		W0219	026	20		23-11-11	ALL
	27		W0219	027	20		23-11-11	ALL
	28		W0219	028	20		SPARE	ALL
	29		W0219	029	22		34-33-11	ALL
	30		W0219	030	20		SPARE	ALL
	31		W0219	031	22		34-57-11	ALL
	32		W0219	039	22		31-31-15	ALL
	33	UNUSED						050-099, 275-299
	33		W0219	036	22		SPARE	150-199
	34		W0219	034	20		SPARE	ALL
	35		W0219	035	20		SPARE	ALL
	36	UNUSED						050-099, 151-152, 156-157, 166-199, 275-299
	36	FL	W9011	901	16		23-25-11	150, 153-155, 162-165
	37		W0219	037	22		31-35-11	ALL
	38	UNUSED						ALL
	39		W0219	045	24		34-53-13	050-099, 150-154, 156-157, 166-199, 277-299
	39	UNUSED						155, 162-165, 275-276
	CAP	Y	W0219	022	22		SPARE	150, 153-199
	CAP	Y	W0219	024	20		SPARE	150, 153-199
D04278J		AL1002/ /		RCPT-R FWD OUTBD PANEL				ALL
	1	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D04200

Page 73

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04278J		AL1002/ /		RCPT-R FWD OUTBD PANEL (continued)				ALL
	2		W0656	019	22		32-42-11	ALL
	3		W0656	020	22		32-42-11	ALL
	4		W0656	021	22		32-42-11	ALL
	5		W0656	022	20		32-42-11	ALL
	6		W0656	023	20		32-42-11	ALL
	7		W0656	024	20		32-42-11	ALL
	8		W0656	109	16		25-65-12	ALL
	9		W0656	128	16		25-65-12	ALL
	10		W0656	145	22		SPARE	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15		W0656	057	22		29-31-11	ALL
	16		W0656	204R	22		29-31-11	ALL
	17		W0656	204B	22		29-31-11	ALL
	18		W0656	104	22		28-42-11	ALL
	19		W0656	106	22		SPARE	050-099, 150-199, 275-278
	19		W0656	106	22		28-42-31	280-299
D04278P		AL1002/ /		PLUG-R WING RS/BODY				ALL
	1	UNUSED						ALL
	2		W0452	202B	20		32-42-11	ALL
	3		W0452	203B	20		32-42-11	ALL
	4		W0452	204B	20		32-42-11	ALL
	5		W0452	202R	20		32-42-11	ALL
	6		W0452	203R	20		32-42-11	ALL
	7		W0452	204R	20		32-42-11	ALL
	8		W0452	201B	18		25-65-12	ALL
	9		W0452	201R	18		25-65-12	ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15		W0452	301B	20		29-31-11	ALL
	16		W0452	301R	20		29-31-11	ALL
	17		W0452	301Y	20		29-31-11	ALL
	18		W0452	009	20		28-42-11	ALL
	19	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D04200

Page 74

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04280J		AW0321/ /		RCPT-L WING/SAILBOAT				ALL
	1		W0398	001	18		29-11-12	ALL
	2		W0398	002	18		29-11-12	ALL
	3	UNUSED						ALL
	4		W0398	006	18		29-11-12	ALL
	5		W0398	201R	18		29-11-12	ALL
	6		W0398	201B	18		29-11-12	ALL
	7	UNUSED						ALL
D04280P		AW0321/ /		PLUG-L WING/SAILBOAT				ALL
	1		W0440	001	20		29-11-12	ALL
	2		W0440	002	20		29-11-12	ALL
	3	UNUSED						ALL
	4		W0440	006	20		29-11-12	ALL
	5		W0440	202R	20		29-11-12	ALL
	6		W0440	202B	20		29-11-12	ALL
	7		W0440	018	20		SPARE	050-099
	7	UNUSED						150-199, 275-299
D04281J		AE0305/ /		RCPT-E1-2				ALL
	1		W0201	009	20		22-41-12	ALL
	2		W0201	011	24		34-22-16	ALL
	3		W0201	012	20		34-22-16	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
D04281P		AE0305/ /		PLUG-				ALL
	1		W1103	068	20		22-41-12	ALL
	2		W1103	012	24		34-22-16	ALL
	3		W1103	074	22		34-22-16	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
D04282J		AP0401/ /		RCPT-P19				050-099
D04282J		AP0401/ /		RCPT-				150-199, 275-299
	1		W1102	102	20		25-42-11	ALL
	2	UNUSED						050-099, 151, 275-299
	2		W1102	118	22		21-66-31	150, 152-199
	3	UNUSED						ALL
	4		W1102	018	18		21-24-11	050-099, 150-199
	4	UNUSED						275-299

HOOKUP LIST
D280T132

91-21-51
Section D04200
Page 75
Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04282J		AP0401 / /		RCPT-P19 (continued)				050-099
D04282J		AP0401 / /		RCPT- (continued)				150-199, 275-299
	5		W1102	036	20		38-32-12	050-099, 150-156, 162-165, 275-276
	5	UNUSED						157, 166-199, 277-299
	6		W1102	019	18		21-24-11	050-099, 150-199
	6	UNUSED						275-299
	7		W1102	015	16		38-13-11	ALL
	8		W1102	020	18		21-24-11	050-099, 150-199
	8	UNUSED						275-299
	9	UNUSED						ALL
	10		W1102	118	22		21-66-31	050-099
	10	UNUSED						150-199, 275-299
	11	UNUSED						050-099, 150, 152-199
	12	UNUSED						050-099, 150, 152-199
	13		W1102	119	22		21-66-31	050-099, 150, 152-199
	14		W1102	120	22		21-66-31	050-099, 150, 152-199
D04282P		AP0401 / /		PLUG-P19				ALL
	1		W1232	001	20		25-42-11	050-099
	1		W1232	001	18		25-42-11	150-199, 275-299
	2	UNUSED						050-099, 151, 275-299
	2		W1232	153	22		21-66-31	150, 152-199
	3	UNUSED						ALL
	4		W1232	008	18		21-24-11	050-099, 150-199
	4	UNUSED						275-299
	5		W1232	016	18		38-32-12	050-099, 150-156, 162-165, 275-276
	5	UNUSED						157, 166-199, 277-299
	6		W1232	009	18		21-24-11	050-099, 150-199
	6	UNUSED						275-299
	7		W1232	006	16		38-13-11	ALL
	8		W1232	010	18		21-24-11	050-099, 150-199
	8	UNUSED						275-299
	9	UNUSED						ALL
	10		W1232	153	22		21-66-31	050-099
	10	UNUSED						150-199, 275-299
	11	UNUSED						050-099, 150, 152-199
	12	UNUSED						050-099, 150, 152-199
	13		W1232	158	22		21-66-31	050-099, 150, 152-199
	14		W1232	157	22		21-66-31	050-099, 150, 152-199

HOOKUP LIST

D280T132

91-21-51

Section D04200

Page 76

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04283J		P001-01/ /		RCPT-P1-1				ALL
	1		W0017	058	24		32-42-11	ALL
	2		W0017	057	24		32-42-11	ALL
	3		W0017	064	20		34-61-16	050, 150-154
	3		W0017	072	20		34-61-16	051-099, 155-199, 275-299
	4		W0017	001	24		34-22-82	ALL
	5		W0017	002	20		34-22-82	ALL
	6		W0017	012	24		34-22-38	ALL
	7		W0017	014	24		34-22-37	ALL
	8		W0017	015	20		34-22-37	ALL
	9		W0017	011	24		34-22-17	ALL
	10		W0017	010	20		34-22-17	ALL
	11		W0017	003	24		34-22-17	ALL
	12		W0017	004	20		34-22-17	ALL
	13		W0017	005	24		34-22-17	ALL
	14		W0017	006	24		34-22-17	ALL
	15		W0017	007	20		34-22-17	ALL
	16		W0017	008	22		34-22-17	ALL
	17		W0017	059	24		34-22-17	ALL
	18		W0017	016	24		34-22-91	ALL
	19		W0017	017	20		34-22-91	ALL
	20		W0017	029	22		34-22-38	ALL
	21		W0017	009	20		34-22-17	ALL
	22	DL	W0017	026	18		33-13-11	ALL
	23	DL	W0017	027	18		33-13-11	ALL
	24		W0017	030	20		34-12-61	ALL
	25		W0017	031	22		34-12-61	ALL
	26		W0017	032	20		34-12-61	ALL
	27		W0017	046	20		34-22-17	ALL
	28	UNUSED						050, 150-154
	28		W0017	078	20		34-61-16	051-099, 155-199, 275-299
	29	UNUSED						ALL
	30		W0017	036	22		34-12-61	ALL
	31		W0017	037	22		34-13-11	ALL
	32		W0017	043	22		34-22-16	ALL
	33		W0017	044	20		34-22-16	ALL
	34		W0017	066	20		34-61-16	050, 150-154
	34		W0017	073	20		34-61-16	051-099, 155-199, 275-299
	35	UNUSED						ALL
	36		W0017	025	22		34-12-61	ALL
	37		W0017	040	24		22-41-13	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04200

Page 77

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04283J		P001-01/ /		RCPT-P1-1 (continued)				ALL
	38		W0017	039	24		22-41-13	ALL
	39		W0017	042	24		22-41-13	ALL
	40		W0017	104	22		34-12-61	ALL
	41	UNUSED						ALL
	42		W0017	105	22		34-12-61	ALL
	43		W0017	106	22		34-12-61	ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						050, 150-154
	48		W0017	079	20		34-61-16	051-099, 155-199, 275-299
	49	UNUSED						050, 150-154
	49		W0017	080	20		34-61-16	051-099, 155-199, 275-299
	50	UNUSED						ALL
	51		W0017	067	20		34-61-16	050, 150-154
	51		W0017	074	20		34-61-16	051-099, 155-199, 275-299
	52		W0017	068	20		34-61-16	050, 150-154
	52		W0017	075	20		34-61-16	051-099, 155-199, 275-299
	53		W0017	069	20		34-61-16	050, 150-154
	53		W0017	076	20		34-61-16	051-099, 155-199, 275-299
	54		W0017	070	20		34-61-16	ALL
	55		W0017	071	20		34-61-16	050, 150-154
	55		W0017	077	20		34-61-16	051-099, 155-199, 275-299
D04283P		P001-01/ /		PLUG-P1-1				ALL
	1		W0011	092	20		32-42-11	ALL
	2		W0011	091	24		32-42-11	ALL
	3		W0011	820	24		34-61-16	ALL
	4		W0011	005	24		34-22-82	ALL
	5		W0011	006	20		34-22-82	ALL
	6		W0011	026	24		34-22-38	ALL
	7		W0011	081	24		34-22-37	ALL
	8		W0011	082	20		34-22-37	ALL
	9		W0011	187	24		34-22-17	ALL
	10		W0011	014	20		34-22-17	ALL
	11		W0011	015	24		34-22-17	ALL
	12		W0011	016	20		34-22-17	ALL
	13		W0011	017	24		34-22-17	ALL
	14		W0011	018	24		34-22-17	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04200

Page 78

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04283P		P001-01/ /		PLUG-P1-1 (continued)				ALL
	15		W0011	019	20		34-22-17	ALL
	16		W0011	020	22		34-22-17	ALL
	17		W0011	162	24		34-22-17	ALL
	18		W0011	079	24		34-22-91	ALL
	19		W0011	080	20		34-22-91	ALL
	20		W0011	804	22		34-22-38	ALL
	21		W0011	022	20		34-22-17	ALL
	22	DK	W0011	116	18		33-13-11	ALL
	23	DK	W0011	117	18		33-13-11	ALL
	24		W0011	137	20		34-12-61	ALL
	25		W0011	138	20		34-12-61	ALL
	26		W0011	139	20		34-12-61	ALL
	27		W0011	819	20		34-22-17	ALL
	28		W0011	891	24		34-61-16	050-099, 155-199, 275-299
	28	UNUSED						150-154
	29	UNUSED						ALL
	30		W0011	143	24		34-12-61	ALL
	31		W0011	145	22		34-13-11	ALL
	32		W0011	155	22		34-22-16	ALL
	33		W0011	156	20		34-22-16	ALL
	34		W0011	821	20		34-61-16	ALL
	35	UNUSED						ALL
	36		W0011	109	22		34-12-61	ALL
	37		W0011	152	24		22-41-13	ALL
	38		W0011	151	24		22-41-13	ALL
	39		W0011	154	20		22-41-13	ALL
	40		W0011	01J	22		34-12-61	ALL
	41	UNUSED						ALL
	42		W0011	01K	22		34-12-61	ALL
	43		W0011	01L	22		34-12-61	ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						050, 150-154
	48		W0011	885	20		34-61-16	051-099, 155-199, 275-299
	49	UNUSED						050, 150-154
	49		W0011	886	20		34-61-16	051-099, 155-199, 275-299
	50	UNUSED						ALL
	51		W0011	822	20		34-61-16	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04200

Page 79

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04283P		P001-01/ /		PLUG-P1-1 (continued)				ALL
	52		W0011	823	20		34-61-16	ALL
	53		W0011	824	24		34-61-16	ALL
	54		W0011	830	20		34-61-16	ALL
	55		W0011	831	24		34-61-16	ALL
	DED		W0011	01JZ			34-12-61	ALL
D04284J		AE0218/ /		RCPT-P37				ALL
	1		W0192	072	24		28-22-11	ALL
	2	UNUSED						ALL
	3		W0192	67F	22		28-31-11	050-099, 155-199, 276-299
	3	UNUSED						150-154, 275
	4		W0192	64J	22		28-31-21	050-099, 155-199, 276-299
	4	UNUSED						150-154, 275
	5	DK	W0192	693	18		38-32-14	ALL
	6		W0192	67D	22		28-31-11	050-099, 155-199, 276-299
	6	UNUSED						150-154, 275
	7		W0192	67H	20		28-31-11	050-099, 155-199, 276-299
	7	UNUSED						150-154, 275
	8		W0192	67J	20		28-31-11	050-099, 155-199, 276-299
	8	UNUSED						150-154, 275
	9		W0192	66J	22		28-31-12	050-099, 155-199, 276-299
	9	UNUSED						150-154, 275
	10		W0192	66M	20		28-31-12	050-099, 155-199, 276-299
	10	UNUSED						150-154, 275
	11		W0192	66L	20		28-31-12	050-099, 155-199, 276-299
	11	UNUSED						150-154, 275
	12		W0192	004	24		28-22-12	ALL
	13		W0192	63W	22		28-42-13	050-099, 155-199, 276-299
	13	UNUSED						150-154, 275
	14		W0192	63F	24		28-22-12	050-099, 155-199, 276-299
	14	UNUSED						150-154, 275
	15		W0192	63D	22		28-42-12	050-099, 155-199, 276-299
	15	UNUSED						150-154, 275
	16		W0192	66W	22		28-31-12	050-099, 155-199, 277-299
	16	UNUSED						150-154, 275-276
	17		W0192	613	20		33-42-11	ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20		W0192	533	24		38-15-11	ALL
	21		W0192	131	18		38-32-11	050-099, 150-199, 277-299

HOOKUP LIST

D280T132

91-21-51

Section D04200

Page 80

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04284J		AE0218/ /		RCPT-P37 (continued)				ALL
	21	UNUSED						275-276
	22		W0192	FRC			78-34-11	ALL
	23	UNUSED						ALL
	24		W0192	69B	20		78-34-11	ALL
	25		W0192	69A	20		78-34-11	ALL
	26		W0192	526	24		36-21-11	ALL
	27		W0192	210R	24		36-21-11	ALL
	28		W0192	210B	24		36-21-11	ALL
	29		W0192	87B	20		78-34-21	ALL
	30		W0192	84X	20		78-34-21	ALL
	31		W0192	24Q	22		78-34-21	ALL
	32		W0192	24QZ			78-34-21	ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	DED		W0192	63DZ			28-42-12	050-099, 155-199, 276-299
	DED		W0192	63WZ			28-42-13	050-099, 155-199, 276-299
	DED		W0192	66JZ			28-31-12	050-099, 155-199, 276-299
	DED		W0192	67FZ			28-31-11	050-099, 155-199, 276-299
	DED		W0192	66WZ			28-31-12	050-099, 155-199, 277-299
			W0192	69AZ			78-34-11	ALL
			W0192	69BZ			78-34-11	ALL
			W0192	FRC			78-34-11	ALL
D04284P		AE0218/ /		PLUG-				ALL
	1		W0620	001	24		28-22-11	ALL
	2		W0620	031	24		SPARE	ALL
	3		W0620	027	22		28-31-11	050-099, 155-199, 276-299
	3		W0620	050	20		SPARE	150-154, 275
	4		W0620	048	22		28-31-21	050-099, 155-199, 276-299
	4	UNUSED						150-154, 275
	5	DL	W0620	014	18		38-32-14	ALL
	6		W0620	019	22		28-31-11	050-099, 155-199, 276-299
	6	UNUSED						150-154, 275
	7		W0620	024	20		28-31-11	050-099, 155-199, 276-299
	7	UNUSED						150-154, 275

HOOKUP LIST

D280T132

91-21-51

Section D04200

Page 81

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04284P		AE0218/ /		PLUG- (continued)				ALL
	8		W0620	025	20		28-31-11	050-099, 155-199, 276-299
	8	UNUSED						150-154, 275
	9		W0620	028	22		28-31-12	050-099, 155-199, 276-299
	9	UNUSED						150-154, 275
	10		W0620	029	20		28-31-12	050-099, 155-199, 276-299
	10		W0620	010	22		SPARE	150-154, 275
	11		W0620	047	20		28-31-12	050-099, 155-199, 276-299
	11	UNUSED						150-154, 275
	12		W0620	012	24		28-22-12	ALL
	13		W0620	053	22		28-42-13	050-099, 155-199, 276-299
	13	UNUSED						150-154, 275
	14		W0620	018	24		28-22-12	050-099, 155-199, 276-299
	14	UNUSED						150-154, 275
	15		W0620	049	22		28-42-12	050-099, 155-199, 276-299
	15	UNUSED						150-154, 275
	16		W0620	054	22		28-31-12	050-099, 155-199, 277-299
	16	UNUSED						150-154, 275-276
	17		W0620	023	20		33-42-11	ALL
	18	UNUSED						ALL
	19	UNUSED						050-099, 155-199, 276-299
	19		W0620	041	22		SPARE	150-154, 275
	20		W0620	021	24		38-15-11	ALL
	21		W0620	040	18		38-32-11	050-099, 150-199, 277-299
	21		W0620	040	18		SPARE	275-276
	22		W0752	FRA			78-34-11	ALL
	23	UNUSED						ALL
	24		W0752	502	20		78-34-11	ALL
	25		W0752	501	20		78-34-11	ALL
	26		W0620	026	24		36-21-11	ALL
	27		W0620	201R	24		36-21-11	ALL
	28		W0620	201B	24		36-21-11	ALL
	29		W0620	075	20		78-34-21	ALL
	30		W0620	074	20		78-34-21	ALL
	31		W0620	073	20		78-34-21	ALL
	32		W0620	FRA			78-34-21	ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D04200

Page 82

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04284P		AE0218/ /		PLUG- (continued)				ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
			W0620	005	20		78-34-21	ALL
			W0620	073Z			78-34-21	ALL
			W0620	FRA			78-34-21	ALL
			W0752	501Z			78-34-11	ALL
			W0752	502Z			78-34-11	ALL
			W0752	503	20		78-34-11	ALL
			W0752	FRA			78-34-11	ALL
D04285J		AF0113/ /		RCPT-P1-3				ALL
	1		W0013	001	22		34-32-11	ALL
	2		W0013	002	22		34-32-11	ALL
	3		W0013	003	22		34-32-11	ALL
	4		W0013	004	22		33-16-13	ALL
	5		W0013	005	22		33-16-13	ALL
	6		W0013	021	20		33-13-11	ALL
	7		W0013	022	20		33-13-11	ALL
	8		W0013	023	22		33-16-13	ALL
	9	UNUSED						ALL
	10		W0013	017	22		29-21-32	ALL
	11	UNUSED						ALL
	12		W0013	012	22		29-21-32	ALL
	13		W0013	019	22		29-21-32	ALL
	14		W0013	020	22		29-21-32	ALL
	15		W0013	018	22		29-21-32	ALL
	16	UNUSED						ALL
	17		W0013	016	22		29-21-32	ALL
	18		W0013	177	24		31-51-43	ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22		W0013	040	20		29-21-32	ALL
	23		W0013	101	22		34-46-11	ALL
	24	UNUSED						ALL
	25		W0013	051	22		31-41-12	ALL
	26		W0013	052	22		31-41-12	ALL
	27		W0013	053	22		31-41-12	ALL
	28		W0013	058	22		22-34-11	ALL
	29		W0013	059	24		34-12-12	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04200

Page 83

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04285J		AF0113/ /		RCPT-P1-3 (continued)				ALL
	30		W0013	062	22		34-61-15	ALL
	31		W0013	065	24		31-51-42	ALL
	32		W0013	066	24		34-16-11	ALL
	33		W0013	069	22		34-46-11	ALL
	34		W0013	072	22		34-46-11	ALL
	35		W0013	073	24		34-46-11	ALL
	36		W0013	074	22		34-46-11	ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40		W0013	156	22		21-33-11	ALL
	41	UNUSED						ALL
	42		W0013	162	22		79-33-11	ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47		W0013	167	24		33-16-11	ALL
	48		W0013	168	24		33-16-11	ALL
	49		W0013	169	24		33-16-11	ALL
	50	UNUSED						050-099, 151
	50		W0013	901	22		33-16-13	150, 152-199, 275-299
	51	UNUSED						050-099, 151
	51		W0013	902	22		33-16-13	150, 152-199, 275-299
	52	UNUSED						050-099, 151
	52		W0013	903	22		33-16-13	150, 152-199, 275-299
	53	UNUSED						050-099, 151
	53		W0013	904	22		33-16-13	150, 152-199, 275-299
	54	UNUSED						ALL
	55	UNUSED						ALL
	DED		W0013	004Z			33-16-13	ALL
	DED		W0013	005Z			33-16-13	ALL
D04285P		AF0113/ /		PLUG-P1-3				ALL
	1		W0011	041	22		34-32-11	ALL
	2		W0011	042	22		34-32-11	ALL
	3		W0011	043	22		34-32-11	ALL
	4		W0011	718	22		33-16-13	ALL
	5		W0011	084	22		33-16-13	ALL
	6		W0011	183	20		33-13-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04200

Page 84

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04285P		AF0113/ /		PLUG-P1-3 (continued)				ALL
	7		W0011	184	20		33-13-11	ALL
	8		W0011	167	22		33-16-13	ALL
	9	UNUSED						ALL
	10		W0011	173	20		29-21-32	ALL
	11	UNUSED						ALL
	12		W0011	175	22		29-21-32	ALL
	13		W0011	176	22		29-21-32	ALL
	14		W0011	177	22		29-21-32	ALL
	15		W0011	178	22		29-21-32	ALL
	16	UNUSED						ALL
	17		W0011	172	22		29-21-32	ALL
	18		W0011	602	24		31-51-43	ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22		W0011	181	22		29-21-32	ALL
	23		W0011	699	24		34-46-11	ALL
	24	UNUSED						ALL
	25		W0011	651	20		31-41-12	ALL
	26		W0011	652	22		31-41-12	ALL
	27		W0011	653	22		31-41-12	ALL
	28		W0011	188	22		22-34-11	ALL
	29		W0011	616	24		34-12-12	ALL
	30		W0011	622	22		34-61-15	ALL
	31		W0011	625	24		31-51-42	ALL
	32		W0011	626	24		34-16-11	ALL
	33		W0011	627	22		34-46-11	ALL
	34		W0011	628	22		34-46-11	ALL
	35		W0011	629	24		34-46-11	ALL
	36		W0011	630	20		34-46-11	ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40		W0011	722	22		21-33-11	ALL
	41	UNUSED						ALL
	42		W0011	739	22		79-33-11	ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D04200

Page 85

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04285P		AF0113/ /		PLUG-P1-3 (continued)				ALL
	47		W0011	759	24		33-16-11	ALL
	48		W0011	760	24		33-16-11	ALL
	49		W0011	761	20		33-16-11	ALL
	50	UNUSED						050-099, 151
	50		W9090	917	22		33-16-13	150, 152-199, 275-299
	51	UNUSED						050-099, 151
	51		W9090	921	22		33-16-13	150, 152-199, 275-299
	52	UNUSED						050-099, 151
	52		W9090	916	22		33-16-13	150, 152-199, 275-299
	53	UNUSED						050-099, 151
	53		W9090	920	22		33-16-13	150, 152-199, 275-299
	54	UNUSED						ALL
	55	UNUSED						ALL
	DED		W0011	084Z			33-16-13	ALL
	DED		W0011	718Z			33-16-13	ALL
D04286		AE0204/ /		PLUG				051-099
	1	UNUSED						051-099
	2	UNUSED						051-099
	3	UNUSED						051-099
	4	UNUSED						051-099
	5	UNUSED						051-099
	6	UNUSED						051-099
	7	UNUSED						051-099
	8	UNUSED						051-099
	9	UNUSED						051-099
	10	UNUSED						051-099
	11	UNUSED						051-099
	12	UNUSED						051-099
	13	UNUSED						051-099
	14	UNUSED						051-099
	15	UNUSED						051-099
	16	UNUSED						051-099
	17	UNUSED						051-099
	18	UNUSED						051-099
	19	UNUSED						051-099
	20	UNUSED						051-099
	21	UNUSED						051-099
	22	UNUSED						051-099
	23	UNUSED						051-099

HOOKUP LIST

D280T132

91-21-51

Section D04200

Page 86

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04286		AE0204/ /		PLUG (continued)				051-099
	24	UNUSED						051-099
	25	UNUSED						051-099
	26	UNUSED						051-099
	27	UNUSED						051-099
	28	UNUSED						051-099
	29	UNUSED						051-099
	30	UNUSED						051-099
	31	UNUSED						051-099
	32	UNUSED						051-099
	33	UNUSED						051-099
	34	UNUSED						051-099
	35	UNUSED						051-099
	36	UNUSED						051-099
	37	UNUSED						051-099
	38	UNUSED						051-099
	39	UNUSED						051-099
	40	UNUSED						051-099
	41	UNUSED						051-099
	42	UNUSED						051-099
	43	UNUSED						051-099
	44	UNUSED						051-099
	45	UNUSED						051-099
	46	UNUSED						051-099
	47	UNUSED						051-099
	48	UNUSED						051-099
	49	UNUSED						051-099
	50	UNUSED						051-099
	51	UNUSED						051-099
	52	UNUSED						051-099
	53	UNUSED						051-099
	54	UNUSED						051-099
	= C27	UNUSED						051-099
D04286J		AF0204/ /		RCPT-P61				ALL
	1		W0066	612	24		28-22-11	ALL
	2	DK	W0066	61K	18		38-32-14	ALL
	3		W0066	210B	24		36-21-11	ALL
	4		W0066	210R	24		36-21-11	ALL
	5		W0066	639	22		28-31-11	050-099, 155-199, 276-299
	5	UNUSED						150-154, 275

HOOKUP LIST
D280T132

91-21-51
Section D04200
Page 87
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04286J		AF0204/ /		RCPT-P61 (continued)				ALL
	6		W0066	720	22		28-31-21	050-099, 155-199, 276-299
	6	UNUSED						150-154, 275
	7		W0066	740	20		28-31-11	050-099, 155-199, 276-299
	7	UNUSED						150-154, 275
	8	DK	W0066	61N	18		38-32-11	050-099, 150-155, 162-165
	8	DK	W0066	65X	18		38-32-11	156-157, 166-199, 277-299
	8	UNUSED						275-276
	9		W0066	742	20		28-31-11	050-099, 155-199, 276-299
	9	UNUSED						150-154, 275
	10		W0066	636	22		28-31-11	050-099, 155-199, 276-299
	10	UNUSED						150-154, 275
	11		W0066	715	22		28-31-12	050-099, 155-199, 276-299
	11	UNUSED						150-154, 275
	12		W0066	614	24		28-22-12	ALL
	13		W0066	50W	24		21-51-13	ALL
	14		W0066	50X	24		21-51-13	ALL
	15		W0066	66X	16		28-22-11	ALL
	16		W0066	61M	24		38-15-11	ALL
	17		W0066	58P	20		33-42-11	ALL
	18		W0066	744	20		28-31-12	050-099, 155-199, 276-299
	18	UNUSED						150-154, 275
	19		W0066	66Y	16		28-22-11	ALL
	20		W0066	745	20		28-31-12	050-099, 155-199, 276-299
	20	UNUSED						150-154, 275
	21	UNUSED						ALL
	22		W0066	723	22		28-42-12	050-099, 155-199, 276-299
	22	UNUSED						150-154, 275
	23		W0066	66Z	16		28-22-11	050-099, 150-156, 162-166, 275-276
	23		W0066	67F	16		28-22-11	157, 167-199, 277-299
	24		W0066	734	22		28-42-13	050-099, 155-199, 276-299
	24	UNUSED						150-154, 275
	25		W0066	708	22		28-31-12	050-099, 155-199, 277-299
	25	UNUSED						150-154, 275-276
	26		W0066	61H	24		36-21-11	ALL
	27	UNUSED						ALL
	28		W0066	630	24		28-22-12	050-099, 155-199, 276-299
	28	UNUSED						150-154, 275
	DED		W0066	636Z			28-31-11	050-099, 155-199, 276-299
	DED		W0066	715Z			28-31-12	050-099, 155-199, 276-299
	DED		W0066	723Z			28-42-12	050-099, 155-199, 276-299

HOOKUP LIST

D280T132

91-21-51

Section D04200

Page 88

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04286J		AF0204/ /		RCPT-P61 (continued)				ALL
	DED		W0066	734Z			28-42-13	050-099, 155-199, 276-299
	DED		W0066	708Z			28-31-12	050-099, 155-199, 277-299
D04286P		AF0204/ /		PLUG-P61				ALL
	1		W0620	001	24		28-22-11	ALL
	2	DL	W0620	014	18		38-32-14	ALL
	3		W0620	201B	24		36-21-11	ALL
	4		W0620	201R	24		36-21-11	ALL
	5		W0620	019	22		28-31-11	050-099, 155-199, 276-299
	5		W0620	050	20		SPARE	150-154, 275
	6		W0620	048	22		28-31-21	050-099, 155-199, 276-299
	6	UNUSED						150-154, 275
	7		W0620	024	20		28-31-11	050-099, 155-199, 276-299
	7	UNUSED						150-154, 275
	8	DL	W0620	040	18		38-32-11	050-099, 150-199, 277-299
	8	DL	W0620	040	18		SPARE	275-276
	9		W0620	025	20		28-31-11	050-099, 155-199, 276-299
	9	UNUSED						150-154, 275
	10		W0620	027	22		28-31-11	050-099, 155-199, 276-299
	10		W0620	010	22		SPARE	150-154, 275
	11		W0620	028	22		28-31-12	050-099, 155-199, 276-299
	11	UNUSED						150-154, 275
	12		W0620	012	24		28-22-12	ALL
	13		W0620	051	24		21-51-13	ALL
	14		W0620	052	24		21-51-13	ALL
	15		W0620	002	16		28-22-11	ALL
	16		W0620	021	24		38-15-11	ALL
	17		W0620	023	20		33-42-11	ALL
	18		W0620	029	20		28-31-12	050-099, 155-199, 276-299
	18	UNUSED						150-154, 275
	19		W0620	003	16		28-22-11	ALL
	20		W0620	047	20		28-31-12	050-099, 155-199, 276-299
	20		W0620	041	22		SPARE	150-154, 275
	21		W0620	031	24		SPARE	ALL
	22		W0620	049	22		28-42-12	050-099, 155-199, 276-299
	22	UNUSED						150-154, 275
	23		W0620	004	16		28-22-11	ALL
	24		W0620	053	22		28-42-13	050-099, 155-199, 276-299
	24	UNUSED						150-154, 275
	25		W0620	054	22		28-31-12	050-099, 155-199, 277-299

HOOKUP LIST

D280T132

91-21-51

Section D04200

Page 89

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04286P		AF0204/ /		PLUG-P61 (continued)				ALL
	25	UNUSED						150-154, 275-276
	26		W0620	026	24		36-21-11	ALL
	27	UNUSED						ALL
	28		W0620	018	24		28-22-12	050-099, 155-199, 276-299
	28		W0620	801	20		SPARE	150-154, 275
D04287J		P001-01/ /		RCPT-P1				ALL
	1		W0017	041	24		22-41-13	ALL
	2		W0017	013	24		34-22-38	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						050, 150-154
	5		W0017	081	20		34-61-16	051-099, 155-199, 275-299
	6	UNUSED						050, 150-154
	6		W0017	082	20		34-61-16	051-099, 155-199, 275-299
	7	UNUSED						050, 150-154
	7		W0017	083	20		34-61-16	051-099, 155-199, 275-299
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D04287P		P001-01/ /		PLUG-P1-1				ALL
	1		W0031	168	24		22-41-13	ALL
	2		W0031	025	24		34-22-38	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D04200
Page 90
Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04287P		P001-01/ /		PLUG-P1-1 (continued)				ALL
	5		W0031	760	24		34-61-24	050-099
	5	UNUSED						150-154
	5		W0031	760	24		34-61-16	155-199, 275-299
	6	UNUSED						050, 150-154
	6		W0031	770	20		34-61-16	051-099, 155-199, 275-299
	7	UNUSED						050, 150-154
	7		W0031	771	20		34-61-16	051-099, 155-199, 275-299
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D04288J		AE0209/ /		RCPT-				ALL
	1	UNUSED						ALL
	2		W0182	049	24		21-53-11	ALL
	3		W0182	050	24		21-53-11	ALL
	4		W0182	051	24		21-53-11	ALL
	5		W0182	052	24		21-53-11	ALL
	6		W0182	053	24		21-53-11	ALL
	7		W0182	054	24		21-53-11	ALL
	8		W0182	550	24		21-43-11	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11		W0182	044	24		21-43-11	ALL
	12		W0182	111	20		30-41-11	ALL
	13		W0182	112	20		30-41-11	ALL
	14	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D04200
Page 91
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04288J		AE0209/ /		RCPT- (continued)				ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18		W0182	047	24		21-44-11	ALL
	19		W0182	203B	12		30-41-11	ALL
	20		W0182	201R	24		21-31-11	ALL
	21		W0182	201B	24		21-31-11	ALL
	22		W0182	201Z			21-31-11	ALL
	23		W0182	203R	12		30-41-11	ALL
	24		W0182	055	24		21-53-11	ALL
	25		W0182	206B	20		21-31-11	ALL
	26		W0182	206R	20		21-31-11	ALL
	27	UNUSED						ALL
	28		W0182	097	20		21-31-11	ALL
D04288P		AE0209/ /		PLUG-P36				ALL
	1	UNUSED						ALL
	2		W0622	034	24		21-53-11	ALL
	3		W0622	035	24		21-53-11	ALL
	4		W0622	036	24		21-53-11	ALL
	5		W0622	037	24		21-53-11	ALL
	6		W0622	038	24		21-53-11	ALL
	7		W0622	039	24		21-53-11	ALL
	8		W0622	048	24		21-43-11	ALL
	9		W0622	042	22		SPARE	ALL
	10	UNUSED						ALL
	11		W0622	044	24		21-43-11	ALL
	12		W0622	004	20		30-41-11	ALL
	13		W0622	005	20		30-41-11	ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18		W0622	047	24		21-44-11	ALL
	19		W0622	210B	12		30-41-11	ALL
	20		W0622	207R	24		21-31-11	ALL
	21		W0622	207B	24		21-31-11	ALL
	22		W0622	207Z			21-31-11	ALL
	23		W0622	210R	12		30-41-11	ALL
	24		W0622	041	24		21-53-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04200

Page 92

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04288P		AE0209/ /		PLUG-P36 (continued)				ALL
	25		W0622	211B	20		21-31-11	ALL
	26		W0622	211R	20		21-31-11	ALL
	27	UNUSED						ALL
	28		W0622	049	20		21-31-11	ALL
D04290J		AP0401/ /		RCPT-				ALL
	1		W1060	178	22		52-11-12	ALL
	2		W1060	169	22		52-11-11	ALL
	3		W1060	504	22		33-27-11	050-099, 150-199
	3		W1060	502	20		33-22-31	275-299
	4		W1060	010	22		33-21-21	050-099, 150-199
	4		W1060	010	24		33-21-21	275-299
	5		W1060	011	22		33-21-21	050-099, 150-199
	5		W1060	011	24		33-21-21	275-299
	6		W1060	809	24		33-21-12	050-099, 150-199
	6		W1060	044	22		33-22-41	275-299
	7		W1060	632	22		33-22-41	ALL
	8		W1060	045	22		33-22-41	ALL
	9		W1060	629	22		33-22-41	050-099, 150-199
	9		W1060	047	22		33-22-41	275-299
	10		W1060	051	22		33-22-41	050-099, 275-299
	10		W1060	772	22		33-22-41	150-199
	11		W1060	505	22		33-27-11	050-099, 150-199
	11	UNUSED						275-299
	12		W1060	186	22		52-11-12	ALL
	13		W1060	600	20		33-22-11	050-099, 150-199
	13		W1060	528	20		33-22-11	275-299
	14		W1060	033	20		33-22-11	ALL
	15		W1060	040	24		33-22-11	ALL
	16		W1060	035	24		33-22-11	ALL
	17		W1060	038	20		33-22-11	ALL
	18		W1060	039	24		33-22-11	ALL
	19		W1060	747	24		33-21-31	050-099, 162-199
	19		W1060	747	20		33-21-31	150-157
	19		W1060	029	24		33-21-31	275-299
	20		W1060	087	22		33-24-11	050-099
	20		W1060	087	20		33-24-11	150-199, 275-299
	21		W1060	086	22		33-24-11	050-099
	21		W1060	086	20		33-24-11	150-199, 275-299
	22		W1060	512	24		24-51-51	ALL

HOOKUP LIST
D280T132

91-21-51
Section D04200
Page 93
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04290J		AP0401 / /		RCPT- (continued)				ALL
	23		W1060	806	24		33-21-12	050-099, 150-199
	23		W1060	591	20		33-24-11	275-299
	24		W1060	514	24		24-51-51	ALL
	25		W1060	515	24		24-51-51	ALL
	26		W1060	763	22		33-22-41	050-099, 150-199
	26		W1060	592	20		33-24-11	275-299
	27		W1060	137	22		33-51-11	ALL
	28		W1060	535	24		33-21-11	050-099, 150-199
	28		W1060	002	24		33-21-11	275-299
	29		W1060	720	24		33-21-11	050-099, 150-199
	29		W1060	522	24		33-21-11	275-299
	30		W1060	170	22		52-11-11	ALL
	31		W1060	171	22		52-11-11	ALL
	32		W1060	184	22		52-11-12	ALL
	33		W1060	197	22		52-11-12	ALL
	34		W1060	198	22		52-11-12	ALL
	35		W1060	534	24		31-31-26	ALL
	36		W1060	195	22		52-11-12	050-099, 150-199
	36		W1060	195	20		52-11-12	275-299
	37		W1060	524	22		33-51-11	ALL
	38		W1060	525	22		33-51-11	ALL
	39		W1060	126	22		33-51-11	ALL
	40		W1060	774	22		33-22-41	050-099, 150-199
	40		W1060	629	22		33-22-41	275-299
	41		W1060	516	24		23-31-13	ALL
	42		W1060	765	22		33-22-41	050-099, 150-199
	42	UNUSED						275-278
	42		W1060	709	24		33-21-31	280-299
	43		W1060	762	24		33-21-11	050-099, 150-199
	43	UNUSED						275-299
	44		W1060	617	20		33-26-21	050-099, 150-199, 275-278
	44		W1060	617	22		33-26-21	280-299
	45		W1060	766	22		33-22-41	050-099, 150-199
	45	UNUSED						275-278
	45		W1060	669	24		33-21-11	280-299
	46		W1060	754	22		33-21-21	050-099, 150-199
	46	UNUSED						275-278
	46		W1060	535	24		33-21-11	280-299
	47		W1060	748	24		33-21-31	050-099, 162-199
	47		W1060	748	20		33-21-31	150-157

HOOKUP LIST

D280T132

91-21-51

Section D04200

Page 94

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04290J		AP0401/ /		RCPT- (continued)				ALL
	47	UNUSED						275-299
	48		W1060	770	22		33-22-41	050-099, 150-199
	48	UNUSED						275-299
	49		W1060	690	22		33-22-41	050-099
	49		W1060	741	20		33-21-31	150-157
	49	UNUSED						162-199, 275-299
	50		W1060	517	22		33-22-32	050-099, 150-199
	50	UNUSED						275-278
	50		W1060	706	24		33-21-21	280-299
	51		W1060	733	24		33-21-11	050-099, 150-199
	51		W1060	022	20		33-24-11	275-299
	52		W1060	710	20		33-22-32	050-099, 150-199
	52		W1060	021	20		33-24-11	275-299
	53		W1060	764	22		33-22-41	050-099, 150-199
	53	UNUSED						275-278
	53		W1060	884	22		33-22-42	280-299
	54		W1060	757	22		33-21-21	050-099, 150-199
	54	UNUSED						275-299
	55		W1060	807	24		33-21-12	050-099, 150-199
	55		W1060	811	22		33-22-42	275-299
	56		W1060	756	22		33-21-21	050-099, 150-199
	57		W1060	014	22		33-21-21	050-099, 150-199
	58		W1060	746	24		33-21-31	050-099, 162-199
	58		W1060	746	20		33-21-31	150-157
	59		W1060	749	24		33-21-31	050-099, 162-199
	59		W1060	749	20		33-21-31	150-157
	60		W1060	709	24		33-21-31	050-099, 150-199
	61		W1060	759	24		33-21-31	050-099, 162-199
	61		W1060	759	20		33-21-31	150-157
D04290P		AP0401/ /		PLUG-P19				ALL
	1		W1224	030	22		52-11-12	ALL
	2		W1224	001	22		52-11-11	ALL
	3		W1224	801	22		33-27-11	050-099
	3		W1224	801	20		33-27-11	150-199
	3		W1224	020	20		33-22-31	275-299
	4		W1224	022	22		33-21-21	050-099
	4		W1224	922	22		33-21-21	150-199
	4		W1224	022	24		33-21-21	275-299
	5		W1224	023	22		33-21-21	050-099, 150-199

HOOKUP LIST
D280T132

91-21-51
Section D04200
Page 95
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04290P		AP0401 / /		PLUG-P19 (continued)				ALL
	5		W1224	023	24		33-21-21	275-299
	6		W1224	142	24		33-21-12	050-099, 150-199
	6		W1224	070	22		33-22-41	275-299
	7		W1224	107	22		33-22-41	ALL
	8		W1224	156	22		33-22-41	050-099, 150-199
	8		W1224	105	22		33-22-41	275-299
	9		W1224	074	22		33-22-41	ALL
	10		W1224	106	22		33-22-41	ALL
	11		W1224	802	22		33-27-11	050-099
	11		W1224	802	20		33-27-11	150-199
	11	UNUSED						275-299
	12		W1224	014	22		52-11-12	ALL
	13		W1224	031	20		33-22-11	ALL
	14		W1224	032	20		33-22-11	ALL
	15		W1224	037	24		33-22-11	ALL
	16		W1224	038	24		33-22-11	ALL
	17		W1224	034	20		33-22-11	ALL
	18		W1224	036	24		33-22-11	ALL
	19		W1224	040	24		33-21-31	ALL
	20		W1224	042	22		33-24-12	050-099, 150-199
	20		W1224	042	20		33-24-12	275-299
	21		W1224	043	22		33-24-12	050-099, 150-199
	21		W1224	043	20		33-24-12	275-299
	22		W1224	111	24		24-51-51	ALL
	23		W1224	143	24		33-21-12	050-099, 150-199
	23		W1224	123	20		33-24-13	275-299
	24		W1224	113	24		24-51-51	ALL
	25		W1224	114	24		24-51-51	ALL
	26		W1224	072	22		33-22-41	050-099, 150-199
	26		W1224	124	20		33-24-13	275-299
	27		W1224	055	22		33-51-11	ALL
	28		W1224	058	24		33-21-11	ALL
	29		W1224	060	24		33-21-11	ALL
	30		W1224	002	22		52-11-11	ALL
	31		W1224	003	22		52-11-11	ALL
	32		W1224	006	22		52-11-12	ALL
	33		W1224	007	22		52-11-12	ALL
	34		W1224	009	22		52-11-12	ALL
	35		W1224	061	22		31-31-26	050-099
	35		W1224	061	24		31-31-26	150-199, 275-299

HOOKUP LIST

D280T132

91-21-51

Section D04200

Page 96

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04290P		AP0401 / /		PLUG-P19 (continued)				ALL
	36		W1224	062	22		52-11-12	050-099, 150-199
	36		W1224	062	20		52-11-12	275-299
	37		W1224	117	22		33-51-11	ALL
	38		W1224	118	22		33-51-11	ALL
	39		W1224	119	22		33-51-11	ALL
	40		W1224	079	22		33-22-41	ALL
	41		W1224	064	24		23-31-13	ALL
	42		W1224	814	22		33-22-41	050-099, 150-199
	42	UNUSED						275-278
	42		W1224	133	24		33-21-31	280-299
	43		W1224	133	24		33-21-11	050-099, 150-199
	43	UNUSED						275-299
	44		W1224	068	20		33-26-21	050-099, 150-199
	44		W1224	068	22		33-26-21	275-299
	45		W1224	608	22		33-22-41	050-099
	45		W1224	608	20		33-22-41	150-199
	45	UNUSED						275-278
	45		W1224	127	24		33-21-11	280-299
	46		W1224	134	22		33-21-21	050-099, 150-199
	46	UNUSED						275-278
	46		W1224	134	24		33-21-11	280-299
	47		W1224	141	24		33-21-31	050-099, 150-199
	47	UNUSED						275-299
	48		W1224	815	20		33-22-41	050-099, 150-199
	48	UNUSED						275-299
	49		W1224	087	22		33-22-41	050-099
	49		W1224	104	20		33-21-31	150-157
	49	UNUSED						162-199, 275-299
	50		W1224	151	20		33-22-32	050-099, 150-199
	50	UNUSED						275-278
	50		W1224	126	24		33-21-21	280-299
	51		W1224	129	24		33-21-11	050-099
	51		W1224	129	20		33-21-11	150-199
	51		W1224	015	20		33-24-14	275-299
	52		W1224	154	20		33-22-32	050-099, 150-199
	52		W1224	016	20		33-24-14	275-299
	53		W1224	073	22		33-22-41	050-099, 150-199
	53	UNUSED						275-278
	53		W1224	129	22		33-22-42	280-299
	54		W1224	145	22		33-21-21	050-099, 150-199

HOOKUP LIST
D280T132

91-21-51
Section D04200
Page 97
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04290P		AP0401 / /		PLUG-P19 (continued)				ALL
	54	UNUSED						275-299
	55		W1224	126	24		33-21-12	050-099, 150-199
	55		W1224	069	22		33-22-42	275-299
	56		W1224	147	22		33-21-21	050-099, 150-199
	57		W1224	149	22		33-21-21	050-099, 150-199
	58		W1224	167	24		33-21-31	050-099, 150-199
	59		W1224	169	24		33-21-31	050-099, 150-199
	60		W1224	170	24		33-21-31	050-099, 162-199
	60		W1224	170	20		33-21-31	150-157
	61		W1224	171	24		33-21-31	050-099, 150-199
D04292J		AE0305 / /		RCPT-E1-2				ALL
	1		W0622	210B	12		30-41-11	ALL
	2		W0622	210R	12		30-41-11	ALL
	3		W0622	214Z			30-41-11	ALL
	4		W0622	209B	12		30-41-11	ALL
	5		W0622	213Z			30-41-11	ALL
	6		W0622	209R	12		30-41-11	ALL
	7		W0622	212Z			30-41-11	ALL
	8		W0622	060	12		30-41-11	ALL
	9	UNUSED						ALL
	10		W0622	061	12		30-41-11	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14		W0622	010	20		30-41-11	ALL
	15		W0622	214B	24		30-41-11	ALL
	16		W0622	214R	24		30-41-11	ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19		W0622	213B	24		30-41-11	ALL
	20		W0622	213R	24		30-41-11	ALL
	21		W0622	021	20		30-41-11	ALL
	22	UNUSED						ALL
	23		W0622	212B	24		30-41-11	ALL
	24		W0622	212R	24		30-41-11	ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28		W1503	900R	24		34-46-11	050-099, 150-166, 275-299

HOOKUP LIST

D280T132

91-21-51

Section D04200

Page 98

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04292J		AE0305/ /		RCPT-E1-2 (continued)				ALL
	28	UNUSED						167-199
	29		W1503	900B	24		34-46-11	050-099, 150-166, 275-299
	29	UNUSED						167-199
	30		W1503	900Z			34-46-11	050-099, 150-166, 275-299
	30	UNUSED						167-199
	31	UNUSED						ALL
	32	UNUSED						ALL
D04292P		AE0305/ /		PLUG-E1-2				ALL
	1		W1098	207B	12		30-41-11	ALL
	2		W1098	207R	12		30-41-11	ALL
	3		W1098	205Z			30-41-11	ALL
	4		W1098	206B	12		30-41-11	ALL
	5		W1098	204Z			30-41-11	ALL
	6		W1098	206R	12		30-41-11	ALL
	7		W1098	203Z			30-41-11	ALL
	8		W1098	019	12		30-41-11	ALL
	9	UNUSED						ALL
	10		W1098	020	12		30-41-11	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14		W1098	015	20		30-41-11	ALL
	15		W1098	205B	24		30-41-11	ALL
	16		W1098	205R	24		30-41-11	ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19		W1098	204B	24		30-41-11	ALL
	20		W1098	204R	24		30-41-11	ALL
	21		W1098	011	20		30-41-11	ALL
	22	UNUSED						ALL
	23		W1098	203B	24		30-41-11	ALL
	24		W1098	203R	24		30-41-11	ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28		W1098	900R	24		34-46-11	050-099, 150-166, 275-299
	28	UNUSED						167-199
	29		W1098	900B	24		34-46-11	050-099, 150-166, 275-299
	29	UNUSED						167-199

HOOKUP LIST
D280T132

91-21-51
Section D04200
Page 99
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04292P		AE0305/ /		PLUG-E1-2 (continued)				ALL
	30		W1098	900Z			34-46-11	050-099, 150-166, 275-299
	30	UNUSED						167-199
	31	UNUSED						ALL
	32	UNUSED						ALL
D04293J		AE0307/ /		RCPT-E1-6				ALL
	1		W0223	006	24		34-21-31	ALL
	2		W0223	007	22		SPARE	ALL
	3		W0223	008	22		SPARE	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
D04293P		AE0307/ /		PLUG-E1-6				ALL
	1		W0181	006	24		34-21-31	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	DED		W0181	006Z			34-21-31	ALL
D04294J		AE0320/ /		RCPT-E2-1				ALL
	1		W0624	210R	12		30-41-12	ALL
	2		W0624	210B	12		30-41-12	ALL
	3		W0624	215Z			30-41-12	ALL
	4		W0624	201B	12		30-41-12	ALL
	5		W0624	216Z			30-41-12	ALL
	6		W0624	201R	12		30-41-12	ALL
	7		W0624	217Z			30-41-12	ALL
	8		W0624	063	12		30-41-12	ALL
	9	UNUSED						ALL
	10		W0624	064	12		30-41-12	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13		W0624	068	20		30-41-12	ALL
	14		W0624	011	20		30-41-12	ALL
	15		W0624	215B	24		30-41-12	ALL
	16		W0624	073	20		30-41-12	ALL
	17		W0624	216R	24		30-41-12	ALL
	18		W0624	074	20		30-41-12	ALL
	19	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D04200

Page 100

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04294J		AE0320/ /		RCPT-E2-1 (continued)				ALL
	20	UNUSED						ALL
	21		W0624	019	20		30-41-12	ALL
	22		W0624	066	20		30-41-12	ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25		W0624	217B	24		30-41-12	ALL
	26		W0624	217R	24		30-41-12	ALL
	27	UNUSED						ALL
	28		W0624	216B	24		30-41-12	ALL
	29		W0624	215R	24		30-41-12	ALL
	30		W0624	067	20		30-41-12	ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
D04294P		AE0320/ /		PLUG-E2-1				ALL
	1		W1120	201R	12		30-41-12	ALL
	2		W1120	201B	12		30-41-12	ALL
	3		W1120	204Z			30-41-12	ALL
	4		W1120	203B	12		30-41-12	ALL
	5		W1120	205Z			30-41-12	ALL
	6		W1120	203R	12		30-41-12	ALL
	7		W1120	206Z			30-41-12	ALL
	8		W1120	001	12		30-41-12	ALL
	9	UNUSED						ALL
	10		W1120	002	12		30-41-12	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13		W1120	011	20		30-41-12	ALL
	14		W1120	014	20		30-41-12	ALL
	15		W1120	204B	24		30-41-12	ALL
	16		W1120	202B	20		30-41-12	ALL
	17		W1120	205R	24		30-41-12	ALL
	18		W1120	202R	20		30-41-12	ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21		W1120	016	20		30-41-12	ALL
	22		W1120	012	20		30-41-12	ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25		W1120	206B	24		30-41-12	ALL

HOOKUP LIST
D280T132

91-21-51
Section D04200
Page 101
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04294P		AE0320/ /		PLUG-E2-1 (continued)				ALL
	26		W1120	206R	24		30-41-12	ALL
	27	UNUSED						ALL
	28		W1120	205B	24		30-41-12	ALL
	29		W1120	204R	24		30-41-12	ALL
	30		W1120	013	20		30-41-12	ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
D04296J		AE0218/ /		RCPT-P37				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8		W1118	541	24		21-43-11	ALL
	9	UNUSED						ALL
	10		W1118	158	24		21-43-11	ALL
	11		W1118	065	24		21-43-11	ALL
	12	UNUSED						ALL
	13		W1118	049	24		21-44-11	ALL
	14		W1118	050	22		21-44-11	ALL
	15		W1118	126	20		36-11-41	ALL
	16		W1118	165	24		21-44-11	ALL
	17		W1118	060	24		21-43-11	ALL
	18		W1118	545	24		21-44-21	ALL
	19	UNUSED						ALL
	20		W1118	051	24		21-44-11	ALL
	21		W1118	204B	20		21-31-21	ALL
	22		W1118	204R	20		21-31-21	ALL
	23	UNUSED						ALL
	24		W1118	201B	24		21-31-21	ALL
	25		W1118	201R	24		21-31-21	ALL
	26		W1118	201Z			21-31-21	ALL
	27		W1118	096	20		21-31-21	ALL
	28		W1118	052	24		21-44-11	ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D04200

Page 102

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04296J		AE0218/ /		RCPT-P37 (continued)				ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38		W1118	101	20		30-41-12	ALL
	39		W1118	100	20		30-41-12	ALL
	40		W1118	202R	12		30-41-12	ALL
	41		W1118	079	22		21-44-21	ALL
	42		W1118	080	22		21-44-21	ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
	56		W1118	202B	12		30-41-12	ALL
	57	UNUSED						ALL
D04296P		AE0218/ /		PLUG-P37				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8		W0624	027	24		21-43-11	ALL
	9	UNUSED						ALL
	10		W0624	042	24		21-43-11	ALL
	11		W0624	043	24		21-43-11	ALL
	12	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D04200
Page 103
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04296P		AE0218/ /		PLUG-P37 (continued)				ALL
	13		W0624	045	24		21-44-11	ALL
	14		W0624	046	22		21-44-11	ALL
	15		W0624	060	20		36-11-41	ALL
	16		W0624	078	24		21-44-11	ALL
	17		W0624	024	24		21-43-11	ALL
	18		W0624	029	24		21-44-21	ALL
	19	UNUSED						ALL
	20		W0624	047	24		21-44-11	ALL
	21		W0624	211B	20		21-31-21	ALL
	22		W0624	211R	20		21-31-21	ALL
	23	UNUSED						ALL
	24		W0624	207B	24		21-31-21	ALL
	25		W0624	207R	24		21-31-21	ALL
	26		W0624	207Z			21-31-21	ALL
	27		W0624	059	20		21-31-21	ALL
	28		W0624	048	24		21-44-11	ALL
	29		W0624	080	20		SPARE	050-099
	29	UNUSED						150-199, 275-299
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38		W0624	074	20		30-41-12	ALL
	39		W0624	073	20		30-41-12	ALL
	40		W0624	210R	12		30-41-12	ALL
	41		W0624	072	22		21-44-21	ALL
	42		W0624	084	22		21-44-21	ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D04200

Page 104

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04296P		AE0218/ /		PLUG-P37 (continued)				ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
	56	UNUSED	W0624	210B	12		30-41-12	ALL
	57	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D04200
Page 105 End
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04300J		AL1002/ /		RCPT-				ALL
	1		W0588	203R	22		32-61-12	ALL
	2		W0588	203B	22		32-61-12	ALL
	3		W0588	204R	22		32-61-12	ALL
	4		W0588	204B	22		32-61-12	ALL
	5		W0588	205R	22		32-09-11	ALL
	6		W0588	205B	22		32-09-11	ALL
	7		W0588	206R	20		32-42-11	ALL
	8		W0588	206B	20		32-42-11	ALL
	9		W0588	207R	20		32-42-11	ALL
	10		W0588	207B	20		32-42-11	ALL
	11	4L	W0588	451W	22		32-46-11	ALL
	12	4H	W0588	451G	22		32-46-11	ALL
	13	4L	W0588	452W	22		32-46-11	ALL
	14	4H	W0588	452G	22		32-46-11	ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17		W0588	206Z			32-42-11	ALL
	18	UNUSED						ALL
	19		W0588	207Z			32-42-11	ALL
D04300P		AL1002/ /		PLUG-R WING/BODY RS DISC				ALL
	1		W0928	201R	18		32-61-12	ALL
	2		W0928	201B	18		32-61-12	ALL
	3		W0928	202R	18		32-61-12	ALL
	4		W0928	202B	18		32-61-12	ALL
	5		W0928	203R	18		32-09-11	ALL
	6		W0928	203B	18		32-09-11	ALL
	7		W0928	204R	20		32-42-11	ALL
	8		W0928	204B	20		32-42-11	ALL
	9		W0928	205R	20		32-42-11	ALL
	10		W0928	205B	20		32-42-11	ALL
	11	4K	W0928	451W	18		32-46-11	ALL
	12	4G	W0928	451G	18		32-46-11	ALL
	13	4K	W0928	452W	18		32-46-11	ALL
	14	4G	W0928	452G	18		32-46-11	ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17		W0928	204Z			32-42-11	ALL
	18	UNUSED						ALL
	19		W0928	205Z			32-42-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04300

Page 1

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04301J		AE0208/ /		RCPT-P51				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W0045	604	24		31-51-12	ALL
	5		W0045	603	24		31-51-12	ALL
	6		W0045	150	22		27-32-11	ALL
	7	UNUSED						ALL
	8		W0045	208R	24		34-16-11	ALL
	9		W0045	208B	24		34-16-11	ALL
	10	UNUSED						ALL
	11		W0045	727	22		31-51-21	ALL
	12	UNUSED						ALL
	13	UNUSED						050-099, 150-199
	14	UNUSED						050-099, 150-199
	15	UNUSED						050-099, 150-199
	16		W0045	249R	24		32-45-11	050-099, 150-199
	17		W0045	249B	24		32-45-11	050-099, 150-199
	18		W0045	249Z			32-45-11	050-099, 150-199
	19	UNUSED						050-099, 150-199
	20	UNUSED						050-099, 150-199
	21	UNUSED						050-099, 150-199
	22	UNUSED						050-099, 150-199
	23	UNUSED						050-099, 150-199
	24	UNUSED						050-099, 150-199
	DED		W0045	603Z			31-51-12	ALL
	DED		W0045	604Z			31-51-12	ALL
			W0045	208	20		34-16-11	ALL
			W0045	208Z			34-16-11	ALL
D04301P		AE0208/ /		PLUG-P51				ALL
	1		W0409	001	24		SPARE	ALL
	2		W0409	201B	24		SPARE	ALL
	3		W0409	201R	24		SPARE	ALL
	4		W0409	012	20		31-51-12	ALL
	5		W0409	005	24		31-51-12	ALL
	6		W0409	006	20		27-32-11	ALL
	7		W0409	007	24		SPARE	050-099
	7	UNUSED						150-199, 275-299
	8		W0409	203R	24		34-16-11	ALL
	9		W0409	203B	24		34-16-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04300

Page 2

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04301P		AE0208/ /		PLUG-P51 (continued)				ALL
	10	UNUSED						ALL
	11		W0409	011	24		22-14-11	ALL
	12		W0409	201Z			SPARE	ALL
	13		W0409	202R	24		SPARE	050-099
	13	UNUSED						150-199
	14		W0409	202B	24		SPARE	050-099
	14	UNUSED						150-199
	15		W0409	202Z			SPARE	050-099
	15	UNUSED						150-199
	16		W0409	266R	24		32-45-11	050-099, 150-199
	17		W0409	266B	24		32-45-11	050-099, 150-199
	18		W0409	266Z			32-45-11	050-099, 150-199
	19	UNUSED						050-099, 150-199
	20	UNUSED						050-099, 150-199
	21	UNUSED						050-099, 150-199
	22	UNUSED						050-099, 150-199
	23	UNUSED						050-099, 150-199
	24	UNUSED						050-099, 150-199
			W0409	203	20		34-16-11	ALL
			W0409	203Z			34-16-11	ALL
D04302J		AL1001/ /		RCPT-				ALL
	1		W0602	049	20		SPARE	050-099
	1	UNUSED						150-199, 275-299
	2		W0602	102	20		SPARE	ALL
	3		W0602	208Z			32-42-11	ALL
	4		W0602	209Z			32-42-11	ALL
	5		W0602	203R	22		32-09-11	ALL
	6		W0602	203B	22		32-09-11	ALL
	7		W0602	206R	22		32-61-11	ALL
	8		W0602	206B	22		32-61-11	ALL
	9		W0602	207R	22		32-61-11	ALL
	10		W0602	207B	22		32-61-11	ALL
	11	4L	W0602	451W	22		32-46-11	ALL
	12	4H	W0602	451G	22		32-46-11	ALL
	13		W0602	208R	20		32-42-11	ALL
	14	4L	W0602	452W	22		32-46-11	ALL
	15	4H	W0602	452G	22		32-46-11	ALL
	16	UNUSED						ALL
	17		W0602	208B	20		32-42-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04300

Page 3

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04302J		AL1001/ /		RCPT- (continued)				ALL
	18		W0602	209R	20		32-42-11	ALL
	19		W0602	209B	20		32-42-11	ALL
D04302P		AL1001/ /		PLUG-				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W0840	204Z			32-42-11	ALL
	4		W0840	205Z			32-42-11	ALL
	5		W0840	203R	18		32-09-11	ALL
	6		W0840	203B	18		32-09-11	ALL
	7		W0840	201R	18		32-61-11	ALL
	8		W0840	201B	18		32-61-11	ALL
	9		W0840	202R	18		32-61-11	ALL
	10		W0840	202B	18		32-61-11	ALL
	11	4K	W0840	451W	18		32-46-11	ALL
	12	4G	W0840	451G	18		32-46-11	ALL
	13		W0840	204R	20		32-42-11	ALL
	14	4K	W0840	452W	18		32-46-11	ALL
	15	4G	W0840	452G	18		32-46-11	ALL
	16	UNUSED						ALL
	17		W0840	204B	20		32-42-11	ALL
	18		W0840	205R	20		32-42-11	ALL
	19		W0840	205B	20		32-42-11	ALL
D04303J		AE0208/ /		RCPT-P51				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9		W0045	885	24		31-51-21	ALL
	10		W0045	794	20		31-51-32	ALL
	11		W0045	216R	24		31-51-32	ALL
	12		W0045	216B	24		31-51-32	ALL
D04303P		AE0208/ /		PLUG-P51				ALL
	1	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D04300
Page 4
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04303P		AE0208/ /		PLUG-P51 (continued)				ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W0449	201R	24		SPARE	ALL
	5		W0449	201B	24		SPARE	ALL
	6		W0449	201Z			SPARE	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9		W0449	003	24		31-51-21	ALL
	10		W0449	005	20		31-51-32	ALL
	11		W0449	302R	24		31-51-32	ALL
	12		W0449	302B	24		31-51-32	ALL
			W0449	302	20		31-51-32	ALL
			W0449	302Y	24		31-51-32	ALL
			W0449	302Z			31-51-32	ALL
D04304J		AC0506/ /		RCPT-P35				ALL
	1		W1066	201B	24		52-71-13	ALL
	2		W1066	201R	24		52-71-13	ALL
	3		W1066	202B	24		52-34-13	ALL
	4		W1066	202R	24		52-34-13	ALL
	5		W1066	203B	24		52-34-13	ALL
	6		W1066	203R	24		52-34-13	ALL
	7		W1066	204B	24		52-71-13	ALL
	8		W1066	204R	24		52-71-13	ALL
	9		W1066	205B	24		52-34-13	ALL
	10		W1066	205R	24		52-34-13	ALL
	11		W1066	171	20		52-34-11	ALL
	12		W1066	172	20		52-34-11	ALL
	13		W1066	173	20		52-34-11	ALL
	14		W1066	174	20		52-34-11	ALL
	15	UNUSED						050-099
	15		W1066	056	18		33-37-11	150-199, 275-299
	16		W1066	176	20		52-34-11	ALL
	17		W1066	062	20		33-31-61	ALL
	18		W1066	063	20		33-31-61	ALL
	19		W1066	053	18		33-37-11	050-099
	19		W1066	053	16		33-37-11	150-199, 275-299
	20		W1066	056	20		33-37-11	050-099
	20	UNUSED						150-199, 275-299
	21	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D04300

Page 5

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04304J		AC0506/ /		RCPT-P35 (continued)				ALL
	22		W1066	076	20		33-31-61	ALL
	23		W1066	054	18		33-37-11	050-099
	23		W1066	054	16		33-37-11	150-199, 275-299
	24		W1066	175	20		52-34-11	ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
D04304P		AC0506/ /		PLUG-P35				ALL
	1		W0660	206B	24		52-71-13	ALL
	2		W0660	206R	24		52-71-13	ALL
	3		W0660	202B	24		52-34-13	ALL
	4		W0660	202R	24		52-34-13	ALL
	5		W0660	203B	24		52-34-13	ALL
	6		W0660	203R	24		52-34-13	ALL
	7		W0660	204B	24		52-71-13	ALL
	8		W0660	204R	24		52-71-13	ALL
	9		W0660	205B	24		52-34-13	ALL
	10		W0660	205R	24		52-34-13	ALL
	11		W0660	011	20		52-34-11	ALL
	12		W0660	012	20		52-34-11	ALL
	13		W0660	013	20		52-34-11	ALL
	14		W0660	014	20		52-34-11	ALL
	15	UNUSED						050-099
	15		W0660	020	18		33-37-11	150-199, 275-299
	16		W0660	016	20		52-34-11	ALL
	17		W0660	017	20		33-31-61	ALL
	18		W0660	018	20		33-31-61	ALL
	19		W0660	019	18		33-37-11	050-099
	19		W0660	019	16		33-37-11	150-199, 275-299
	20		W0660	020	20		33-37-11	050-099
	20	UNUSED						150-199, 275-299
	21	UNUSED						ALL
	22		W0660	009	20		33-31-61	ALL
	23		W0660	023	18		33-37-11	050-099
	23		W0660	023	16		33-37-11	150-199, 275-299
	24		W0660	015	20		52-34-11	ALL
	25	UNUSED						ALL
	26	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D04300
Page 6
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04304P		AC0506/ /		PLUG-P35 (continued)				ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
D04305J		AE0307/ /		RCPT-E1-4				ALL
	1		W0409	001	24		SPARE	ALL
	2		W0409	201B	24		SPARE	ALL
	3		W0409	201R	24		SPARE	ALL
	4	UNUSED						ALL
	5		W0409	005	24		31-51-12	ALL
	6	UNUSED						ALL
	7		W0409	007	24		SPARE	050-099
	7	UNUSED						150-199, 275-299
	8		W0409	203R	24		34-16-11	ALL
	9		W0409	203B	24		34-16-11	ALL
	10		W0409	203Z			34-16-11	ALL
	11		W0409	011	24		22-14-11	ALL
	12		W0409	201Z			SPARE	ALL
	13		W0409	202R	24		SPARE	050-099
	13	UNUSED						150-199
	14		W0409	202B	24		SPARE	050-099
	14	UNUSED						150-199
	15		W0409	202Z			SPARE	050-099
	15	UNUSED						150-199
	16		W0409	266R	24		32-45-11	050-099, 150-199
	17		W0409	266B	24		32-45-11	050-099, 150-199
	18		W0409	266Z			32-45-11	050-099, 150-199
	19	UNUSED						050-099, 150-199
	20	UNUSED						050-099, 150-199
	21	UNUSED						050-099, 150-199
	22	UNUSED						050-099, 150-199
	23	UNUSED						050-099, 150-199
	24	UNUSED						050-099, 150-199
	25	UNUSED						050-099
	26	UNUSED						050-099
	27	UNUSED						050-099
	28	UNUSED						050-099
	29	UNUSED						050-099
	30	UNUSED						050-099
	31	UNUSED						050-099

HOOKUP LIST

D280T132

91-21-51

Section D04300

Page 7

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04305P		AE0307/ /		PLUG-E1-4				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W0127	080	24		31-51-12	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8		W0127	543R	24		34-16-11	ALL
	9		W0127	543B	24		34-16-11	ALL
	10		W0127	543Z			34-16-11	ALL
	11		W0127	037	24		22-14-11	ALL
	12	UNUSED						ALL
	13	UNUSED						050-099, 150-199
	14	UNUSED						050-099, 150-199
	15	UNUSED						050-099, 150-199
	16		W0127	266R	24		32-45-11	050-099, 150-199
	17		W0127	266B	24		32-45-11	050-099, 150-199
	18		W0127	266Z			32-45-11	050-099, 150-199
	19	UNUSED						050-099, 150-199
	20	UNUSED						050-099, 150-199
	21	UNUSED						050-099, 150-199
	22	UNUSED						050-099, 150-199
	23	UNUSED						050-099, 150-199
	24	UNUSED						050-099, 150-199
	25	UNUSED						050-099
	26	UNUSED						050-099
	27	UNUSED						050-099
	28	UNUSED						050-099
	29	UNUSED						050-099
	30	UNUSED						050-099
	31	UNUSED						050-099
D04306J		0480/190/R080		RCPT-				ALL
	1		W0660	206B	24		52-71-13	ALL
	2		W0660	206R	24		52-71-13	ALL
	3		W0660	202B	24		52-34-13	ALL
	4		W0660	202R	24		52-34-13	ALL
	5		W0660	203B	24		52-34-13	ALL
	6		W0660	203R	24		52-34-13	ALL
	7		W0660	204B	24		52-71-13	ALL

HOOKUP LIST
D280T132

91-21-51
Section D04300
Page 8
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04306J		0480/190/R080		RCPT- (continued)				ALL
	8		W0660	204R	24		52-71-13	ALL
	9		W0660	205B	24		52-34-13	ALL
	10		W0660	205R	24		52-34-13	ALL
	11		W0660	011	20		52-34-11	ALL
	12		W0660	012	20		52-34-11	ALL
	13		W0660	013	20		52-34-11	ALL
	14		W0660	005	20		52-34-11	ALL
	15		W0660	014	20		52-34-11	ALL
	16		W0660	016	20		52-34-11	ALL
	17		W0660	017	20		33-31-61	ALL
	18		W0660	063	20		33-31-61	ALL
	19	UNUSED						ALL
	20		W0660	020	20		33-37-11	050-099
	20	DK	W0660	020	18		33-37-11	150-199, 275-299
	21		W0660	064	20		33-37-11	050-099
	21	DK	W0660	064	18		33-37-11	150-199, 275-299
	22		W0660	009	20		33-31-61	ALL
	23		W0660	010	20		33-31-61	ALL
	24		W0660	015	20		52-34-11	ALL
D04306P		0479/191/R081		PLUG-				ALL
	1		W0958	206B	24		52-71-13	ALL
	2		W0958	206R	24		52-71-13	ALL
	3		W0958	202B	24		52-34-13	ALL
	4		W0958	202R	24		52-34-13	ALL
	5		W0958	203B	24		52-34-13	ALL
	6		W0958	203R	24		52-34-13	ALL
	7		W0958	204B	24		52-71-13	ALL
	8		W0958	204R	24		52-71-13	ALL
	9		W0958	205B	24		52-34-13	ALL
	10		W0958	205R	24		52-34-13	ALL
	11		W0958	011	20		52-34-11	ALL
	12		W0958	012	20		52-34-11	ALL
	13		W0958	013	20		52-34-11	ALL
	14		W0958	005	20		52-34-11	ALL
	15		W0958	014	20		52-34-11	ALL
	16		W0958	016	20		52-34-11	ALL
	17		W0958	017	20		33-31-61	ALL
	18		W0958	018	20		33-31-61	ALL
	19	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D04300

Page 9

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04306P		0479/191/R081		PLUG- (continued)				ALL
	20		W0958	020	20		33-37-11	ALL
	21		W0958	064	20		33-37-11	ALL
	22		W0958	009	20		33-31-61	ALL
	23		W0958	010	20		33-31-61	ALL
	24		W0958	015	20		52-34-11	ALL
D04309J		AE0319/ /		RCPT-E1-3				ALL
	1		W0431	301R	24		34-12-11	ALL
	2		W0431	301B	24		34-12-11	ALL
	3		W0431	301Y	24		34-12-11	ALL
	4		W0431	203R	22		34-12-11	ALL
	5		W0431	203B	22		34-12-11	ALL
	6		W0431	302R	24		34-12-11	ALL
	7		W0431	302B	24		34-12-11	ALL
	8		W0431	302Y	24		34-12-11	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D04309P		AE0319/ /		PLUG-E1-3				ALL
	1		W0105	372R	24		34-12-11	ALL
	2		W0105	372B	24		34-12-11	ALL
	3		W0105	372Y	24		34-12-11	ALL
	4		W0105	507R	22		34-12-11	ALL
	5		W0105	507B	22		34-12-11	ALL
	6		W0105	373R	24		34-12-11	ALL
	7		W0105	373B	24		34-12-11	ALL
	8		W0105	373Y	24		34-12-11	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	DED		W0105	507Z			34-12-11	ALL
D04312J		AC1304/ /		RCPT-P39				ALL
	1		W1068	201B	24		52-71-13	ALL
	2		W1068	201R	24		52-71-13	ALL
	3		W1068	202B	24		52-35-13	ALL
	4		W1068	202R	24		52-35-13	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04300

Page 10

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04312J		AC1304/ /		RCPT-P39 (continued)				ALL
	5		W1068	203B	24		52-35-13	ALL
	6		W1068	203R	24		52-35-13	ALL
	7		W1068	204B	24		52-35-13	ALL
	8		W1068	204R	24		52-35-13	ALL
	9		W1068	205B	24		52-35-13	050-099
	9	UNUSED						150-199, 275-299
	10		W1068	205R	24		52-35-13	050-099
	10	UNUSED						150-199, 275-299
	11		W1068	171	20		52-35-11	ALL
	12		W1068	172	20		52-35-11	ALL
	13		W1068	173	20		52-35-11	ALL
	14		W1068	174	20		52-35-11	ALL
	15		W1068	175	20		52-35-11	ALL
	16		W1068	176	20		52-35-11	ALL
	17		W1068	062	20		33-31-61	ALL
	18		W1068	063	20		33-31-61	ALL
	19		W1068	064	20		33-31-61	050-099, 150-199
	19	UNUSED						275-299
	20		W1068	056	20		33-37-21	050-099
	20	DK	W1068	056	18		33-37-21	150-199, 275-299
	21		W1068	053	18		33-37-21	050-099
	21		W1068	053	16		33-37-21	150-199, 275-299
	22	UNUSED						ALL
	23		W1068	054	18		33-37-21	050-099
	23		W1068	054	16		33-37-21	150-199, 275-299
	24	UNUSED						050-099
	24	DK	W1068	046	18		33-37-21	150-199, 275-299
	25		W1068	046	20		33-37-21	050-099
	25	UNUSED						150-199, 275-299
	26		W1068	047	20		33-37-21	050-099
	26	DK	W1068	047	18		33-37-21	150-199, 275-299
	27	DK	W1068	065	18		33-37-21	050-099
	27	FM	W1068	065	16		33-37-21	150-199, 275-299
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D04300

Page 11

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04312J		AC1304/ /		RCPT-P39 (continued)				ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
D04312P		AC1304/ /		PLUG-P39				ALL
	1		W0662	201B	24		52-71-13	ALL
	2		W0662	201R	24		52-71-13	ALL
	3		W0662	202B	24		52-35-13	ALL
	4		W0662	202R	24		52-35-13	ALL
	5		W0662	203B	24		52-35-13	ALL
	6		W0662	203R	24		52-35-13	ALL
	7		W0662	204B	24		52-35-13	ALL
	8		W0662	204R	24		52-35-13	ALL
	9		W0662	205B	24		52-35-13	050-099
	9	UNUSED						150-199, 275-299
	10		W0662	205R	24		52-35-13	050-099
	10	UNUSED						150-199, 275-299
	11		W0662	011	20		52-35-11	ALL
	12		W0662	012	20		52-35-11	ALL
	13		W0662	013	20		52-35-11	ALL
	14		W0662	014	20		52-35-11	ALL
	15		W0662	015	20		52-35-11	ALL
	16		W0662	016	20		52-35-11	ALL
	17		W0662	017	20		33-31-61	ALL
	18		W0662	018	20		33-31-61	ALL
	19		W0662	021	20		33-31-61	050-099, 150-199
	19	UNUSED						275-299
	20		W0662	020	20		33-37-21	050-099
	20	DL	W0662	020	18		33-37-21	150-199, 275-299
	21		W0662	019	18		33-37-21	050-099
	21		W0662	019	16		33-37-21	150-199, 275-299
	22	UNUSED						ALL
	23		W0662	023	18		33-37-21	050-099
	23		W0662	023	16		33-37-21	150-199, 275-299
	24	UNUSED						050-099
	24	FL	W0662	025	16		33-37-21	150-199, 275-299
	25		W0662	025	20		33-37-21	050-099
	25	UNUSED						150-199, 275-299

HOOKUP LIST

D280T132

91-21-51

Section D04300

Page 12

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04312P		AC1304/ /		PLUG-P39 (continued)				ALL
	26		W0662	026	20		33-37-21	050-099
	26	FL	W0662	026	16		33-37-21	150-199, 275-299
	27	DL	W0662	027	18		33-37-21	050-099
	27	FL	W0662	027	16		33-37-21	150-199, 275-299
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
D04314J		DR 216/180/R087		RCPT-				ALL
	1		W0962	206B	24		52-71-13	ALL
	2		W0962	206R	24		52-71-13	ALL
	3		W0962	202B	24		52-35-13	ALL
	4		W0962	202R	24		52-35-13	ALL
	5		W0962	203B	24		52-35-13	ALL
	6		W0962	203R	24		52-35-13	ALL
	7		W0962	204B	24		52-35-13	ALL
	8		W0962	204R	24		52-35-13	ALL
	9		W0962	205B	24		52-35-13	050-099
	9	UNUSED						150-199, 275-299
	10		W0962	205R	24		52-35-13	050-099
	10	UNUSED						150-199, 275-299
	11		W0962	011	20		52-35-11	ALL
	12		W0962	012	20		52-35-11	ALL
	13		W0962	013	20		52-35-11	ALL
	14		W0962	014	20		52-35-11	ALL
	15		W0962	010	20		52-35-11	ALL
	16	UNUSED						ALL
	17		W0962	017	20		33-31-61	ALL
	18		W0962	018	20		33-31-61	ALL
	19	UNUSED						050-099
	19	DL	W0962	020	18		33-37-21	150-199, 275-299

HOOKUP LIST

D280T132

91-21-51

Section D04300

Page 13

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04314J		DR 216/180/R087		RCPT- (continued)				ALL
	20		W0962	020	20		33-37-21	050-099
	20	UNUSED						150-199, 275-299
	21		W0962	021	20		33-37-21	050-099
	21	DL	W0962	021	18		33-37-21	150-199, 275-299
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D04314P		DR 216/180/R087		PLUG-				ALL
	1		W0662	201B	24		52-71-13	ALL
	2		W0662	201R	24		52-71-13	ALL
	3		W0662	202B	24		52-35-13	ALL
	4		W0662	202R	24		52-35-13	ALL
	5		W0662	203B	24		52-35-13	ALL
	6		W0662	203R	24		52-35-13	ALL
	7		W0662	204B	24		52-35-13	ALL
	8		W0662	204R	24		52-35-13	ALL
	9		W0662	205B	24		52-35-13	050-099
	9	UNUSED						150-199, 275-299
	10		W0662	205R	24		52-35-13	050-099
	10	UNUSED						150-199, 275-299
	11		W0662	011	20		52-35-11	ALL
	12		W0662	012	20		52-35-11	ALL
	13		W0662	013	20		52-35-11	ALL
	14		W0662	005	20		52-35-11	ALL
	15		W0662	010	20		52-35-11	ALL
	16	UNUSED						ALL
	17		W0662	017	20		33-31-61	ALL
	18		W0662	063	20		33-31-61	ALL
	19	UNUSED						050-099
	19	DK	W0662	020	18		33-37-21	150-199, 275-299
	20		W0662	020	20		33-37-21	050-099
	20	UNUSED						150-199, 275-299
	21		W0662	064	20		33-37-21	050-099
	21	DK	W0662	064	18		33-37-21	150-199, 275-299
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D04300

Page 14

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04316J		AL1008/ /		RCPT-				ALL
	1		W0658	201Z			29-21-31	ALL
	2		W0658	032	18		29-21-31	ALL
	3		W0658	201R	20		29-21-31	ALL
	4		W0658	201B	20		29-21-31	ALL
	5		W0658	015	18		29-21-31	ALL
	6		W0658	006	20		29-21-31	ALL
	7		W0658	017	20		29-21-31	ALL
	8		W0658	018	20		29-11-32	ALL
	9		W0658	019	20		29-11-32	ALL
	10		W0658	501	20		SPARE	ALL
	11		W0658	033	18		29-21-31	ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
D04316P		AL1008/ /		PLUG-				ALL
	1		W0680	013	18		29-21-31	ALL
	2		W0680	002	18		29-21-31	ALL
	3		W0680	201R	18		29-21-31	ALL
	4		W0680	201B	18		29-21-31	ALL
	5		W0680	005	18		29-21-31	ALL
	6		W0680	006	18		29-21-31	ALL
	7		W0680	007	18		29-21-31	ALL
	8		W0680	008	18		29-11-32	ALL
	9		W0680	009	18		29-11-32	ALL
	10	UNUSED						ALL
	11		W0680	010	18		29-21-31	ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
			W0680	012	18		29-21-31	ALL
			W0680	201Z			29-21-31	ALL
D04317J		AE0322/ /		RCPT-				ALL
	1		W0441	301R	24		34-12-21	ALL
	2		W0441	301B	24		34-12-21	ALL
	3		W0441	301Y	24		34-12-21	ALL
	4		W0441	203R	22		34-12-21	ALL
	5		W0441	203B	22		34-12-21	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04300

Page 15

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04317J		AE0322/ /		RCPT- (continued)				ALL
	6		W0441	302R	24		34-12-21	ALL
	7		W0441	302B	24		34-12-21	ALL
	8		W0441	302Y	24		34-12-21	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D04317P		AE0322/ /		PLUG-E2-3				ALL
	1		W0145	374R	24		34-12-21	ALL
	2		W0145	374B	24		34-12-21	ALL
	3		W0145	374Y	24		34-12-21	ALL
	4		W0145	522R	22		34-12-21	ALL
	5		W0145	522B	22		34-12-21	ALL
	6		W0145	371R	24		34-12-21	ALL
	7		W0145	371B	24		34-12-21	ALL
	8		W0145	371Y	24		34-12-21	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D04318J		AL1001/ /		RCPT-				ALL
	1		W0628	208R	22		32-61-11	ALL
	2		W0628	208B	22		32-61-11	ALL
	3		W0628	209R	22		32-61-11	ALL
	4		W0628	209B	22		32-61-11	ALL
	5		W0628	207R	22		32-09-12	ALL
	6		W0628	207B	22		32-09-12	ALL
	7		W0628	213R	20		32-42-11	ALL
	8		W0628	213B	20		32-42-11	ALL
	9		W0628	214R	20		32-42-11	ALL
	10		W0628	214B	20		32-42-11	ALL
	11	4L	W0628	451W	22		32-46-11	ALL
	12	4H	W0628	451G	22		32-46-11	ALL
	13	4L	W0628	452W	22		32-46-11	ALL
	14	4H	W0628	452G	22		32-46-11	ALL
	15		W0628	213Z			32-42-11	ALL
	16		W0628	214Z			32-42-11	ALL
	17	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D04300
Page 16
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04318J		AL1001/ /		RCPT- (continued)				ALL
	18	UNUSED						ALL
	19		W0628	020	20		SPARE	ALL
D04318P		AL1001/ /		PLUG-L WING/BODY RS DISC				ALL
	1		W0690	201R	18		32-61-11	ALL
	2		W0690	201B	18		32-61-11	ALL
	3		W0690	202R	18		32-61-11	ALL
	4		W0690	202B	18		32-61-11	ALL
	5		W0690	203R	18		32-09-12	ALL
	6		W0690	203B	18		32-09-12	ALL
	7		W0690	204R	20		32-42-11	ALL
	8		W0690	204B	20		32-42-11	ALL
	9		W0690	205R	20		32-42-11	ALL
	10		W0690	205B	20		32-42-11	ALL
	11	4K	W0690	451W	18		32-46-11	ALL
	12	4G	W0690	451G	18		32-46-11	ALL
	13	4K	W0690	452W	18		32-46-11	ALL
	14	4G	W0690	452G	18		32-46-11	ALL
	15		W0690	204Z			32-42-11	ALL
	16		W0690	205Z			32-42-11	ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
D04320J		AE0307/ /		RCPT-E2-4				ALL
	1		W0596	107	20		28-41-23	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	=C1		W0596	107Z			28-41-23	ALL
D04320P		AE0307/ /		PLUG-E2-4				ALL
	1		W0098	065	24		28-41-23	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	=C1		W0098	065Z			28-41-23	ALL
D04321J		AF0120/ /		RCPT-P3				ALL
	1		W0449	201R	24		SPARE	ALL
	2		W0449	201B	24		SPARE	ALL
	3		W0449	201Z			SPARE	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04300

Page 17

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04321J		AF0120/ /		RCPT-P3 (continued)				ALL
	4		W0449	003	24		31-51-21	ALL
	5	UNUSED						ALL
D04321P		AF0120/ /		PLUG-P3				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W0031	096	24		31-51-21	ALL
	5	UNUSED						ALL
D04323J		AE0305/ /		RCPT-E1-3				ALL
	1		W0451	001	24		22-14-11	ALL
	2		W0451	002	24		SPARE	ALL
	3		W0451	033	24		SPARE	ALL
	4		W0451	054	22		34-45-13	050-099, 150-156, 162-166
	4	UNUSED						157, 167-199, 275-299
	5	UNUSED						050-099, 150-152, 155-199, 275-299
	5		W0451	055	22		SPARE	153-154
	6		W0451	009	24		31-51-42	ALL
	7		W0451	043	24		SPARE	ALL
	8		W0451	041	20		27-32-31	ALL
	9		W0451	202R	24		SPARE	050-099
	9	UNUSED						150-199
	9		W0451	902R	24		34-53-11	275-299
	10		W0451	202B	24		SPARE	050-099
	10	UNUSED						150-199
	10		W0451	902B	24		34-53-11	275-299
	11		W0451	020	24		31-51-21	ALL
	12		W0451	202Z			SPARE	050-099
	12	UNUSED						150-199
	12		W0451	902Z			34-53-11	275-299
	13		W0451	207R	24		27-32-11	ALL
	14		W0451	207B	24		27-32-11	ALL
	15		W0451	207Z			27-32-11	ALL
D04323P		AE0305/ /		PLUG-E1-3				ALL
	1		W0105	054	24		22-14-11	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W0105	584	22		34-45-13	050-099, 150-166, 275-276

HOOKUP LIST
D280T132

91-21-51
Section D04300
Page 18
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04323P		AE0305/ /		PLUG-E1-3 (continued)				ALL
	4	UNUSED						167-199, 277-299
	5	UNUSED						ALL
	6		W0105	180	24		31-51-42	ALL
	7	UNUSED						ALL
	8		W0105	612	20		27-32-31	ALL
	9	UNUSED						050-099, 150-199
	9		W0105	986R	24		34-53-11	275-299
	10	UNUSED						050-099, 150-199
	10		W0105	986B	24		34-53-11	275-299
	11		W0105	823	24		31-51-21	ALL
	12	UNUSED						050-099, 150-199
	12		W0105	986Z			34-53-11	275-299
	13		W0105	533R	24		27-32-11	ALL
	14		W0105	533B	24		27-32-11	ALL
	15		W0105	533Z			27-32-11	ALL
	DED		W0105	612Z			27-32-31	ALL
D04325J		AE0317/ /		RCPT-E1-5				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W0453	050	22		SPARE	ALL
	5		W0453	051	20		38-32-11	050-099, 150-199, 277-299
	5		W0453	051	22		SPARE	275
	5		W0453	051	20		SPARE	276
	6		W0453	002	24		27-32-21	ALL
	7		W0453	012	24		31-51-41	ALL
	8	UNUSED						050-099, 150-199
	8		W0453	903R	24		34-53-21	275-299
	9	UNUSED						050-099, 150-199
	9		W0453	903B	24		34-53-21	275-299
	10	UNUSED						050-099, 150-199
	10		W0453	903Z			34-53-21	275-299
	11	UNUSED						ALL
	12		W0453	011	24		31-51-42	ALL
	13		W0453	014	20		27-32-21	ALL
	14		W0453	015	24		31-51-11	ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17		W0453	210R	24		27-32-21	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04300

Page 19

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04325J		AE0317/ /		RCPT-E1-5 (continued)				ALL
	18		W0453	210B	24		27-32-21	ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21		W0453	038	24		31-51-41	ALL
	22		W0453	208R	24		27-32-21	ALL
	23		W0453	208B	24		27-32-21	ALL
	24		W0453	208Z			27-32-21	ALL
D04325P		AE0317/ /		PLUG-E1-5				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W0119	801	20		38-32-11	050-099, 150-199, 277-299
	5	UNUSED						275
	5		W0119	801	20		SPARE	276
	6		W0119	186	24		27-32-21	ALL
	7		W0119	176	24		31-51-41	ALL
	8	UNUSED						050-099, 150-199
	8		W0119	908R	24		34-53-21	275-299
	9	UNUSED						050-099, 150-199
	9		W0119	908B	24		34-53-21	275-299
	10	UNUSED						050-099, 150-199
	10		W0119	908Z			34-53-21	275-299
	11	UNUSED						ALL
	12		W0119	175	24		31-51-42	ALL
	13		W0119	156	20		27-32-21	ALL
	14		W0119	071	24		31-51-11	ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17		W0119	511R	24		27-32-21	ALL
	18		W0119	511B	24		27-32-21	ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21		W0119	129	24		31-51-41	ALL
	22		W0119	510R	24		27-32-21	ALL
	23		W0119	510B	24		27-32-21	ALL
	24		W0119	510Z			27-32-21	ALL

HOOKUP LIST
D280T132

91-21-51
Section D04300
Page 20
Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04326J D04326J		AP0403/ / AP0403/ /		RCPT-P19 RCPT-				050-099 150-199, 275-299
	1	UNUSED						ALL
	2	UNUSED						050-099
	2		W1102	023	22		33-26-11	150-199, 275-299
	3		W1102	012	22		33-26-11	050-099, 275-299
	3	UNUSED						150-199
	4		W1102	011	22		33-26-11	ALL
	5		W1102	107	22		33-25-11	050-099, 150-199
	5	UNUSED						275-299
	6		W1102	013	20		33-26-21	ALL
	7		W1102	009	22		33-25-11	ALL
	8		W1102	106	22		33-25-11	050-099, 150-199
	8	UNUSED						275-299
	9		W1102	201R	22		23-31-14	ALL
	10		W1102	201B	22		23-31-14	ALL
	11		W1102	202R	22		23-31-14	050-099, 150-199
	11	UNUSED						275-299
	12		W1102	202B	22		23-31-14	050-099, 150-199
	12	UNUSED						275-299
	13		W1102	007	22		33-24-11	ALL
	14		W1102	608	22		33-25-11	050-099, 150-199
	14	UNUSED						275-299
	15		W1102	078	20		33-26-21	050-099
	15	UNUSED						150-199, 275-278
	15		W1102	042	20		33-26-21	280-299
	16	UNUSED						ALL
	17		W1102	024	22		38-32-12	050-099
	17		W1102	024	20		38-32-12	150-156, 162-165, 275-276
	17		W1102	024	20		38-32-16	157, 166-199, 277-299
	18	UNUSED						ALL
	19		W1102	034	20		33-26-11	ALL
	20	UNUSED						ALL
	21	FM	W1102	014	16		38-13-11	050-099
	21	UNUSED						150-199
	21		W1102	014	16		38-13-11	275-299
	22	UNUSED						ALL
	23	FM	W1102	022	16		38-13-11	050-099
	23	UNUSED						150-199
	23		W1102	022	16		38-13-11	275-299
	24		W1102	040	20		38-32-12	050-099, 275-276

HOOKUP LIST

D280T132

91-21-51

Section D04300

Page 21

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04326J		AP0403/ /		RCPT-P19 (continued)				050-099
D04326J		AP0403/ /		RCPT- (continued)				150-199, 275-299
	24	UNUSED						150-199
	24		W1102	040	20		38-32-16	277-299
	25	UNUSED						050-099, 275-299
	25		W1102	052	22		33-24-11	150-199
	26		W1102	039	20		38-32-12	050-099, 275-276
	26	UNUSED						150-199
	26		W1102	039	20		38-32-16	277-299
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31		W1102	084	20		26-13-11	050-099
	31	UNUSED						150-199, 275-299
	32		W1102	081	20		26-13-11	050-099
	32	UNUSED						150-199, 275-299
	33		W1102	082	20		26-13-11	050-099
	33	UNUSED						150-199, 275-299
	34		W1102	083	20		26-13-11	050-099
	34	UNUSED						150-199, 275-299
	35	UNUSED						050-099, 275-299
	35		W1102	051	22		33-24-11	150-199
	36		W1102	104	20		25-42-11	ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39		W1102	086	22		33-25-11	050-099
	39	UNUSED						150-199, 275-299
	40	UNUSED						050-099
	40		W1102	022	16		38-13-11	150-199
	41	UNUSED						050-099
	41		W1102	040	20		38-32-12	150-156, 162-165
	41		W1102	040	20		38-32-16	157, 166-199
	42	UNUSED						050-099
	42		W1102	039	20		38-32-12	150-156, 162-165
	42		W1102	039	20		38-32-16	157, 166-199
	43		W1102	105	20		33-26-21	050-099, 150-199
D04326P		AP0403/ /		PLUG-P19				ALL
	1	UNUSED						ALL
	2	UNUSED						050-099

HOOKUP LIST
D280T132

91-21-51
Section D04300
Page 22
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04326P		AP0403/ /		PLUG-P19 (continued)				ALL
	2		W0792	059	22		33-26-11	150-199, 275-299
	3		W0792	133	20		33-26-11	050-099
	3	UNUSED						150-199
	3		W0792	055	22		33-26-11	275-299
	4		W0792	046	22		33-26-11	ALL
	5		W0792	182	22		33-25-11	050-099, 150-199
	5	UNUSED						275-299
	6		W0792	199	20		33-26-21	050-099, 150-199
	6		W0792	035	20		33-26-21	275-299
	7		W0792	064	22		33-25-11	ALL
	8		W0792	183	22		33-25-11	050-099, 150-199
	8	UNUSED						275-299
	9		W0792	201R	22		23-31-14	ALL
	10		W0792	201B	22		23-31-14	ALL
	11		W0792	208R	22		23-31-14	050-099, 150-199
	11	UNUSED						275-299
	12		W0792	208B	22		23-31-14	050-099, 150-199
	12	UNUSED						275-299
	13		W0792	090	20		33-24-11	ALL
	14		W0792	184	22		33-25-11	050-099, 150-199
	14	UNUSED						275-299
	15		W0792	034	20		33-26-21	050-099
	15	UNUSED						150-199, 275-278
	15		W0792	043	20		33-26-21	280-299
	16	UNUSED						ALL
	17		W0792	051	22		38-32-12	050-099
	17		W0792	051	20		38-32-12	150-156, 162-165, 275-276
	17		W0792	051	20		38-32-16	157, 166-199, 277-299
	18	UNUSED						ALL
	19		W0792	095	20		33-26-11	ALL
	20	UNUSED						ALL
	21	FL	W0792	057	16		38-13-11	050-099
	21	UNUSED						150-199
	21		W0792	057	16		38-13-11	275-299
	22	UNUSED						ALL
	23	FL	W0792	058	16		38-13-11	050-099
	23	UNUSED						150-199
	23		W0792	058	16		38-13-11	275-299
	24	DL	W0792	099	18		38-32-12	050-099, 275-276
	24	UNUSED						150-199

HOOKUP LIST

D280T132

91-21-51

Section D04300

Page 23

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04326P		AP0403/ /		PLUG-P19 (continued)				ALL
	24	DL	W0792	099	18		38-32-16	277-299
	25	UNUSED						050-099, 275-299
	25		W0792	136	20		33-24-11	150-199
	26	DL	W0792	111	18		38-32-12	050-099
	26	UNUSED						150-199
	26	DL	W0792	049	18		38-32-12	275-276
	26	DL	W0792	049	18		38-32-16	277-299
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31		W0792	153	20		26-13-11	050-099
	31	UNUSED						150-199, 275-299
	32		W0792	154	20		26-13-11	050-099
	32	UNUSED						150-199, 275-299
	33		W0792	155	20		26-13-11	050-099
	33	UNUSED						150-199, 275-299
	34		W0792	156	20		26-13-11	050-099
	34	UNUSED						150-199, 275-299
	35	UNUSED						050-099, 275-299
	35		W0792	137	20		33-24-11	150-199
	36		W0792	152	20		25-42-11	ALL
	37		W0792	815	20		SPARE	ALL
	38		W0792	814	20		SPARE	ALL
	39		W0792	501	22		33-25-11	050-099
	39	UNUSED						150-199, 275-299
	40	UNUSED						050-099
	40		W0792	134	16		38-13-11	150-199
	41	UNUSED						050-099
	41	DL	W0792	099	18		38-32-12	150-156, 162-165
	41	DL	W0792	099	18		38-32-16	157, 166-199
	42	UNUSED						050-099
	42	DL	W0792	111	18		38-32-12	150-156, 162-165
	42	DL	W0792	111	18		38-32-16	157, 166-199
	43		W0792	193	20		33-26-21	050-099, 150-199
D04330J		AE0203/ /		RCPT-P33				ALL
	A		W0138	001	08		24-51-52	ALL
	B		W0138	002	08		24-51-52	ALL
	C		W0138	003	08		24-51-52	ALL

HOOKUP LIST

D280T132

91-21-51
 Section D04300
 Page 24
 Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04330J		AE0203/ /		RCPT-P33 (continued)				ALL
	D	UNUSED						ALL
D04330P		AE0203/ /		PLUG-P33				ALL
	A		W0206	040	08		24-51-52	ALL
	B		W0206	041	08		24-51-52	ALL
	C		W0206	042	08		24-51-52	ALL
	D	UNUSED						ALL
D04331J		AE0307/ /		RCPT E2-4 SHELF				ALL
	1		W1527	001	22		SPARE	ALL
	2		W1527	002	22		SPARE	ALL
	3		W1527	203B	24		34-12-61	ALL
	4		W1527	203R	24		34-12-61	ALL
	5		W1527	203Z			34-12-61	ALL
	6		W1527	006	22		SPARE	ALL
	7		W1527	201R	24		SPARE	050-099, 275-299
	7	UNUSED						150-199
	8		W1527	201B	24		SPARE	050-099, 275-299
	8	UNUSED						150-199
	9		W1527	201Z			SPARE	050-099, 275-299
	9	UNUSED						150-199
	10		W1527	010	22		SPARE	050-099, 275-299
	10	UNUSED						150-199
	11	UNUSED						ALL
	12	DK	W1527	301B	18		31-31-25	ALL
	13	DK	W1527	301R	18		31-31-25	ALL
	14	DK	W1527	301Y	18		31-31-25	ALL
	15		W1527	301Z			31-31-25	ALL
	16	UNUSED						ALL
	17		W1527	020	24		31-31-26	ALL
	18		W1527	208R	22		31-31-22	ALL
	19		W1527	208B	22		31-31-22	ALL
	20		W1527	208Z			31-31-22	ALL
	21		W1527	017	22		31-31-22	ALL
	22		W1527	018	24		31-31-26	ALL
	23		W1527	205R	24		28-41-11	ALL
	24		W1527	205B	24		28-41-11	ALL
	25		W1527	205Z			28-41-11	ALL
	26		W1527	206B	24		31-41-35	ALL
	27		W1527	206R	24		31-41-35	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04300

Page 25

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04331J		AE0307/ /		RCPT E2-4 SHELF (continued)				ALL
	28		W1527	206Z			31-41-35	ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
D04331P		AE0307/ /		PLUG-E2-4				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W0014	244B	24		34-12-61	ALL
	4		W0014	244R	24		34-12-61	ALL
	5		W0014	244Z			34-12-61	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	DL	W0014	309B	18		31-31-25	ALL
	13	DL	W0014	309R	18		31-31-25	ALL
	14	DL	W0014	309Y	18		31-31-25	ALL
	15		W0014	309Z			31-31-25	ALL
	16	UNUSED						ALL
	17		W0014	614	24		31-31-26	ALL
	18		W0014	269R	22		31-31-22	ALL
	19		W0014	269B	22		31-31-22	ALL
	20		W0014	269Z			31-31-22	ALL
	21		W0014	611	22		31-31-22	ALL
	22		W0014	612	24		31-31-26	ALL
	23		W0014	273R	24		28-41-11	ALL
	24		W0014	273B	24		28-41-11	ALL
	25		W0014	273Z			28-41-11	ALL
	26		W0014	274B	24		31-41-35	ALL
	27		W0014	274R	24		31-41-35	ALL
	28		W0014	274Z			31-41-35	ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
D04333J		AE0307/ /		RCPT-E1-4 SHELF				ALL
	1		W1527	001	22		SPARE	ALL

HOOKUP LIST
D280T132

91-21-51
Section D04300
Page 26
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04333J		AE0307/ /		RCPT-E1-4 SHELF (continued)				ALL
	2		W1527	002	22		SPARE	ALL
	3		W1527	202R	24		31-31-20	ALL
	4		W1527	202B	24		31-31-20	ALL
	5		W1527	202Z			31-31-20	ALL
	6		W1527	006	22		SPARE	ALL
	7		W1527	201R	24		SPARE	050-099, 275-299
	7	UNUSED						150-199
	8		W1527	201B	24		SPARE	050-099, 275-299
	8	UNUSED						150-199
	9		W1527	201Z			SPARE	050-099, 275-299
	9	UNUSED						150-199
	10		W1527	010	22		SPARE	050-099, 275-299
	10	UNUSED						150-199
	11	UNUSED						050-099
	11		W1527	011	22		SPARE	150-199, 275-299
	12	UNUSED						050-099
	12		W1527	012	22		SPARE	150-199, 275-299
	13		W1527	203B	24		34-12-61	ALL
	14		W1527	203R	24		34-12-61	ALL
	15		W1527	203Z			34-12-61	ALL
	16	UNUSED						050-099
	16		W1527	016	22		SPARE	150-199, 275-299
	17		W1527	204R	24		31-31-20	ALL
	18		W1527	204B	24		31-31-20	ALL
	19		W1527	204Z			31-31-20	ALL
	20		W1527	207Z			31-31-20	ALL
	21		W1527	207R	24		31-31-20	ALL
	22		W1527	207B	24		31-31-20	ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D04333P		AE0307/ /		PLUG-E1-4				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W0127	539R	24		31-31-20	ALL
	4		W0127	539B	24		31-31-20	ALL
	5		W0127	539Z			31-31-20	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D04300

Page 27

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04333P		AE0307/ /		PLUG-E1-4 (continued)				ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13		W0127	516B	24		34-12-61	ALL
	14		W0127	516R	24		34-12-61	ALL
	15		W0127	516Z			34-12-61	ALL
	16	UNUSED						ALL
	17		W0127	540R	24		31-31-20	ALL
	18		W0127	540B	24		31-31-20	ALL
	19		W0127	540Z			31-31-20	ALL
	20		W0127	249Z			31-31-20	ALL
	21		W0127	249R	24		31-31-20	ALL
	22		W0127	249B	24		31-31-20	ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D04337J		AE0319/ /		RCPT-E1-3				050-099, 150-199
	1	UNUSED						050-099, 150-199
	2	UNUSED						050-099, 150-199
	3	UNUSED						050-099, 150-199
	4	UNUSED						050-099, 150-199
	5	UNUSED						050-099, 150-199
	6	UNUSED						050-099, 150-199
	7	UNUSED						050-099, 150-199
	8	UNUSED						050-099, 150-199
	9	UNUSED						050-099, 150-199
	10	UNUSED						050-099, 150-199
	11	UNUSED						050-099, 150-199
	12	UNUSED						050-099, 150-199
	13	UNUSED						050-099, 150-199
	14	UNUSED						050-099, 150-199
	15	UNUSED						050-099, 150-199
	16	UNUSED						050-099, 150-199
	17	UNUSED						050-099, 150-199
	18	UNUSED						050-099, 150-199
	19	UNUSED						050-099, 150-199
	20	UNUSED						050-099, 150-199
	21	UNUSED						050-099
	21		W0465	006Y	22		27-41-11	150-199

HOOKUP LIST
D280T132

91-21-51
Section D04300
Page 28
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04337J		AE0319/ /		RCPT-E1-3 (continued)				050-099, 150-199
	22		W0465	007	22		31-31-25	050-099, 150-199
	23		W0465	204R	22		31-31-25	050-099, 150-199
	24		W0465	204B	22		31-31-25	050-099, 150-199
	25		W0465	010	22		31-31-25	050-099, 150-199
	26		W0465	205R	22		31-31-25	050-099, 150-199
	27		W0465	205B	22		31-31-25	050-099, 150-199
	28		W0465	013	22		31-31-25	050-099, 150-199
	29		W0465	206R	22		31-31-25	050-099, 150-199
	30		W0465	206B	22		31-31-25	050-099, 150-199
	31	UNUSED						050-099, 150-199
D04337P		AE0319/ /		PLUG-E1-3				050-099, 150-199
	1	UNUSED						050-099, 150-199
	2	UNUSED						050-099, 150-199
	3	UNUSED						050-099, 150-199
	4	UNUSED						050-099, 150-199
	5	UNUSED						050-099, 150-199
	6	UNUSED						050-099, 150-199
	7	UNUSED						050-099, 150-199
	8	UNUSED						050-099, 150-199
	9	UNUSED						050-099, 150-199
	10	UNUSED						050-099, 150-199
	11	UNUSED						050-099, 150-199
	12	UNUSED						050-099, 150-199
	13	UNUSED						050-099, 150-199
	14	UNUSED						050-099, 150-199
	15	UNUSED						050-099, 150-199
	16	UNUSED						050-099, 150-199
	17	UNUSED						050-099, 150-199
	18	UNUSED						050-099, 150-199
	19	UNUSED						050-099, 150-199
	20	UNUSED						050-099, 150-199
	21	UNUSED						050-099
	21		W0105	165Y	22		27-41-11	150-199
	22		W0105	056	22		31-31-25	050-099, 150-199
	23		W0105	578R	22		31-31-25	050-099, 150-199
	24		W0105	578B	22		31-31-25	050-099, 150-199
	25		W0105	892	22		31-31-25	050-099, 150-199
	26		W0105	579R	22		31-31-25	050-099, 150-199
	27		W0105	579B	22		31-31-25	050-099, 150-199

HOOKUP LIST

D280T132

91-21-51

Section D04300

Page 29

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04337P		AE0319/ /		PLUG-E1-3 (continued)				050-099, 150-199
	28		W0105	893	22		31-31-25	050-099, 150-199
	29		W0105	580R	22		31-31-25	050-099, 150-199
	30		W0105	580B	22		31-31-25	050-099, 150-199
	31	UNUSED						050-099, 150-199
D04338J		AE0209/ /		RCPT-P36				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W0176	686	20		33-42-21	050-099
	3	DK	W0176	686	18		33-42-21	150-199, 275-299
	4	UNUSED						ALL
	5		W0176	80K	22		30-21-11	050-099, 150-199
	5		W0176	821	22		30-21-11	275-299
	6		W0176	80H	22		30-21-11	050-099, 150-199
	6		W0176	822	22		30-21-11	275-299
	7		W0176	80M	22		30-21-11	050-099, 150-199
	7		W0176	823	24		30-21-11	275-299
	8	UNUSED						ALL
	9	UNUSED						ALL
	10		W0176	665	24		33-42-21	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13		W0176	670	20		21-45-11	ALL
	14		W0176	671	20		21-45-11	ALL
	15		W0176	830	24		33-42-11	ALL
	16		W0176	80V	22		30-21-11	050-099, 150-199
	16	UNUSED						275-299
	17		W0176	80U	22		30-21-11	050-099, 150-199
	17	UNUSED						275-299
	18		W0176	823	24		30-21-11	050-099, 150-199
	18	UNUSED						275-299
	19	UNUSED						ALL
	20		W0176	80J	22		30-21-11	050-099, 150-199
	20	UNUSED						275-299
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	DK	W0176	828	18		33-42-11	050-099
	24	FM	W0176	828	16		33-42-11	150-199, 275-299
	25	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D04300
Page 30
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04338J		AE0209/ /		RCPT-P36 (continued)				ALL
	26	UNUSED						ALL
	27	FM	W0176	07A	16		27-32-31	ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
D04338P		AE0209/ /		PLUG-P36				ALL
	1		W0608	001	20		SPARE	ALL
	2		W0608	002	20		SPARE	ALL
	3		W0608	003	20		33-42-21	050-099
	3	DL	W0608	003	18		33-42-21	150-199, 275-299
	4	UNUSED						050-099
	4		W0608	004	22		SPARE	150-199, 275-299
	5		W0608	005	22		30-21-11	ALL
	6		W0608	006	22		30-21-11	ALL
	7		W0608	007	24		30-21-11	050-099, 155-199, 275-299
	7		W0608	007	22		30-21-11	150-154
	8		W0608	008	20		SPARE	ALL
	9		W0608	009	20		SPARE	ALL
	10		W0608	010	24		33-42-21	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13		W0608	013	20		21-45-11	ALL
	14		W0608	014	20		21-45-11	ALL
	15		W0608	015	24		33-42-11	ALL
	16		W0608	078	22		30-21-11	050-099, 150-199
	16	UNUSED						275-299
	17		W0608	079	22		30-21-11	050-099, 150-199
	17	UNUSED						275-299
	18		W0608	080	22		30-21-11	050-099, 150-199
	18	UNUSED						275-299
	19	UNUSED						ALL
	20		W0608	082	22		30-21-11	050-099, 150-199
	20	UNUSED						275-299
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	DL	W0608	024	18		33-42-11	050-099
	24	FL	W0608	024	16		33-42-11	150-199, 275-299

HOOKUP LIST

D280T132

91-21-51

Section D04300

Page 31

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04338P		AE0209/ /		PLUG-P36 (continued)				ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	FL	W0608	027	16		27-32-31	ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
D04339J		AE0320/ /		RCPT-E2-3				ALL
	1	UNUSED						ALL
	2		W1513	202R	24		22-41-11	ALL
	3		W1513	202B	24		22-41-11	ALL
	4		W1513	202Z			22-41-11	ALL
	5	UNUSED						ALL
	6		W1513	213R	24		31-31-20	ALL
	7		W1513	213B	24		31-31-20	ALL
	8		W1513	213Z			31-31-20	ALL
	9		W1513	214R	24		31-31-20	ALL
	10		W1513	214B	24		31-31-20	ALL
	11		W1513	214Z			31-31-20	ALL
	12		W1513	012	24		SPARE	050-099
	12	UNUSED						150-199, 275-299
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16		W1513	211R	24		21-31-11	ALL
	17		W1513	211B	24		21-31-11	ALL
	18		W1513	211Z			21-31-11	ALL
	19	UNUSED						ALL
	20		W1513	003	22		SPARE	ALL
	21		W1513	009	24		31-31-26	ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D04339P		AE0320/ /		PLUG-E2-3				ALL
	1	UNUSED						ALL
	2		W0145	242R	24		22-41-11	ALL
	3		W0145	242B	24		22-41-11	ALL
	4		W0145	242Z			22-41-11	ALL

HOOKUP LIST
D280T132

91-21-51
Section D04300
Page 32
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04339P		AE0320/ /		PLUG-E2-3 (continued)				ALL
	5	UNUSED						ALL
	6		W0145	243R	24		31-31-20	ALL
	7		W0145	243B	24		31-31-20	ALL
	8		W0145	243Z			31-31-20	ALL
	9		W0145	249R	24		31-31-20	ALL
	10		W0145	249B	24		31-31-20	ALL
	11		W0145	249Z			31-31-20	ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16		W0145	536R	24		21-31-11	ALL
	17		W0145	536B	24		21-31-11	ALL
	18		W0145	536Z			21-31-11	ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21		W0145	657	24		31-31-26	ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D04340J		AE0218/ /		RCPT-P37				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						050-099
	3	DK	W0192	128	18		SPARE	150-199, 275-299
	4		W0192	02J	22		33-45-11	ALL
	5	UNUSED						050-099, 150-199
	5		W0192	840	22		30-21-11	275-299
	6		W0192	80W	22		30-21-11	050-099, 150-199
	6		W0192	841	22		30-21-11	275-299
	7		W0192	842	24		30-21-11	ALL
	8	UNUSED						050-099, 151, 275-299
	8		W1046	901	20		23-32-21	150, 152-199
	9		W0192	127	20		33-43-11	050-099
	9	DK	W0192	127	18		33-43-11	150-199, 275-299
	10		W0192	128	20		SPARE	050-099
	10		W1046	900	20		23-32-21	150, 152-199
	10	UNUSED						151, 275-299
	11		W0192	129	20		33-42-21	050-099

HOOKUP LIST

D280T132

91-21-51

Section D04300

Page 33

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04340J		AE0218/ /		RCPT-P37 (continued)				ALL
	11	DK	W0192	129	18		33-42-21	150-199, 275-299
	12		W0192	137	20		33-44-11	ALL
	13		W0192	740	20		21-45-11	ALL
	14		W0192	130	20		21-45-11	ALL
	15	UNUSED						ALL
	16		W0192	80X	22		30-21-11	050-099, 150-199 275-299
	16	UNUSED						050-099, 150-199 275-299
	17		W0192	81N	22		30-21-11	050-099, 150-199 275-299
	17	UNUSED						050-099, 150-199 275-299
	18		W0192	81L	22		30-21-11	050-099, 150-199 275-299
	18	UNUSED						050-099, 150-199 275-299
	19		W0192	81J	22		30-21-11	050-099, 150-199 275-299
	19	UNUSED						050-099, 150-199 275-299
	20		W0192	80V	22		30-21-11	050-099, 150-199 275-299
	20	UNUSED						050-099, 150-199 275-299
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	DK	W0192	827	18		33-42-11	050-099
	24	FM	W0192	827	16		33-42-11	150-199, 275-299
	25		W0192	826	20		33-42-11	ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
D04340P		AE0218/ /		PLUG-P37				ALL
	1		W0610	001	20		SPARE	ALL
	2		W0610	002	22		SPARE	ALL
	3	UNUSED						ALL
	4		W0610	004	22		33-45-11	ALL
	5	UNUSED						050-099, 155-199
	5		W0610	005	22		SPARE	150-154
	5		W0610	005	22		30-21-11	275-299
	6		W0610	006	22		30-21-11	ALL
	7		W0610	007	24		30-21-11	ALL
	8	UNUSED						050-099, 151, 275-299
	8		W1417	916	20		23-32-21	150, 152-199

HOOKUP LIST
D280T132

91-21-51
Section D04300
Page 34
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04340P		AE0218/ /		PLUG-P37 (continued)				ALL
	9		W0610	009	20		33-43-11	050-099
	9	DL	W0610	009	18		33-43-11	150-199, 275-299
	10	UNUSED						050-099, 151, 275-299
	10		W1417	917	20		23-32-21	150, 152-199
	11		W0610	011	20		33-42-21	050-099
	11	DL	W0610	011	18		33-42-21	150-199, 275-299
	12		W0610	012	20		33-44-11	ALL
	13		W0610	013	20		21-45-11	ALL
	14		W0610	014	20		21-45-11	ALL
	15	UNUSED						ALL
	16		W0610	027	22		30-21-11	050-099, 150-199
	16	UNUSED						275-299
	17		W0610	028	22		30-21-11	050-099, 150-199
	17	UNUSED						275-299
	18		W0610	029	22		30-21-11	050-099, 150-199
	18	UNUSED						275-299
	19		W0610	030	22		30-21-11	050-099, 150-199
	19	UNUSED						275-299
	20		W0610	031	22		30-21-11	050-099, 150-199
	20	UNUSED						275-299
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	DL	W0610	024	18		33-42-11	050-099
	24	FL	W0610	024	16		33-42-11	150-199, 275-299
	25		W0610	025	20		33-42-11	ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	DED		W1417	917Z			23-32-21	150, 152-199
D04342J		AW0319/ /		RCPT-L WING/STRUT				ALL
	1		W0412	201B	20		24-11-11	ALL
	2		W0412	201R	20		24-11-11	ALL
	3		W0412	201Z			24-11-11	ALL
	4		W0412	001	18		24-11-11	ALL
	5		W0412	202B	20		24-21-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04300

Page 35

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04342J		AW0319/ /		RCPT-L WING/STRUT (continued)				ALL
	6		W0412	202R	20		24-21-11	ALL
	7		W0412	202Z			24-21-11	ALL
	8		W0412	401B	20		24-21-11	ALL
	9		W0412	401R	20		24-21-11	ALL
	10		W0412	401Y	20		24-21-11	ALL
	11		W0412	401G	20		24-21-11	ALL
	12		W0412	203B	20		24-11-11	ALL
	13		W0412	203R	20		24-11-11	ALL
	14		W0412	204B	20		24-11-11	ALL
	15		W0412	204R	20		24-11-11	ALL
	16		W0412	003	20		24-11-11	ALL
	17	UNUSED						ALL
	18		W0412	301B	18		24-21-11	ALL
	19		W0412	301R	18		24-21-11	ALL
	20		W0412	301Y	18		24-21-11	ALL
	21		W0412	002	20		24-11-11	ALL
	22		W0412	006	20		24-11-11	ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26		W0412	005	18		SPARE	ALL
	27		W0412	007	20		24-11-11	ALL
	28		W0412	008	20		24-11-11	ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	DED		W0412	001Z			24-11-11	ALL
D04342P		AW0319/ /		PLUG-L WING/STRUT				050-099, 150-199, 275-278
	1		W0352	206B	18		24-11-11	050-099, 150-199, 275-278
	2		W0352	206R	18		24-11-11	050-099, 150-199, 275-278
	3		W0352	206Z			24-11-11	050-099, 150-199, 275-278
	4		W0352	026	18		24-11-11	050-099, 150-199, 275-278
	5		W0352	207B	18		24-21-11	050-099, 150-199, 275-278
	6		W0352	207R	18		24-21-11	050-099, 150-199, 275-278
	7		W0352	207Z			24-21-11	050-099, 150-199, 275-278
	8		W0352	401B	18		24-21-11	050-099, 150-199, 275-278
	9		W0352	401R	18		24-21-11	050-099, 150-199, 275-278
	10		W0352	401Y	18		24-21-11	050-099, 150-199, 275-278
	11		W0352	401G	18		24-21-11	050-099, 150-199, 275-278
	12		W0352	208B	18		24-11-11	050-099, 150-199, 275-278

HOOKUP LIST

D280T132

91-21-51

Section D04300

Page 36

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04342P		AW0319/ /		PLUG-L WING/STRUT (continued)				050-099, 150-199, 275-278
	13		W0352	208R	18		24-11-11	050-099, 150-199, 275-278
	14		W0352	209B	18		24-11-11	050-099, 150-199, 275-278
	15		W0352	209R	18		24-11-11	050-099, 150-199, 275-278
	16		W0352	028	18		24-11-11	050-099, 150-199, 275-278
	17	UNUSED						050-099, 150-199, 275-278
	18		W0352	303B	18		24-21-11	050-099, 150-199, 275-278
	19		W0352	303R	18		24-21-11	050-099, 150-199, 275-278
	20		W0352	303Y	18		24-21-11	050-099, 150-199, 275-278
	21		W0352	027	18		24-11-11	050-099, 150-199, 275-278
	22		W0352	030	18		24-11-11	050-099, 150-199, 275-278
	23	UNUSED						050-099, 150-199, 275-278
	24	UNUSED						050-099, 150-199, 275-278
	25		W0352	210R	18		SPARE	050-099, 150-199, 275-278
	26		W0352	210B	18		SPARE	050-099, 150-199, 275-278
	27		W0352	040	18		24-11-11	050-099, 150-199, 275-278
	28		W0352	041	18		24-11-11	050-099, 150-199, 275-278
	29	UNUSED						050-099, 150-199, 275-278
	30	UNUSED						050-099, 150-199, 275-278
D04343J		AE0307/ /		RCPT-E2-3				ALL
	1	UNUSED						050-099
	1		W1527	011	22		SPARE	150-199, 275-299
	2	UNUSED						050-099
	2		W1527	012	22		SPARE	150-199, 275-299
	3		W1527	202R	24		31-31-20	ALL
	4		W1527	202B	24		31-31-20	ALL
	5		W1527	202Z			31-31-20	ALL
	6	UNUSED						050-099
	6		W1527	016	22		SPARE	150-199, 275-299
	7		W1527	204R	24		31-31-20	ALL
	8		W1527	204B	24		31-31-20	ALL
	9		W1527	204Z			31-31-20	ALL
	10		W1527	207Z			31-31-20	ALL
	11		W1527	207R	24		31-31-20	ALL
	12		W1527	207B	24		31-31-20	ALL
	13		W1527	208R	22		31-31-22	ALL
	14		W1527	208B	22		31-31-22	ALL
	15		W1527	208Z			31-31-22	ALL
	16		W1527	017	22		31-31-22	ALL
	17		W1527	018	24		31-31-26	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04300

Page 37

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04343J		AE0307/ /		RCPT-E2-3 (continued)				ALL
	18		W1527	020	24		31-31-26	ALL
	19		W1527	206R	24		31-41-35	ALL
	20		W1527	206B	24		31-41-35	ALL
	21		W1527	206Z			31-41-35	ALL
	22		W1527	205R	24		28-41-11	ALL
	23		W1527	205B	24		28-41-11	ALL
	24		W1527	205Z			28-41-11	ALL
	25	DL	W1527	301R	18		31-31-25	ALL
	26	DL	W1527	301B	18		31-31-25	ALL
	27	DL	W1527	301Y	18		31-31-25	ALL
	28		W1527	301Z			31-31-25	ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
D04343P		AE0307/ /		PLUG-E2-3				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W0155	207R	24		31-31-20	ALL
	4		W0155	207B	24		31-31-20	ALL
	5		W0155	207Z			31-31-20	ALL
	6	UNUSED						ALL
	7		W0155	208R	24		31-31-20	ALL
	8		W0155	208B	24		31-31-20	ALL
	9		W0155	208Z			31-31-20	ALL
	10		W0155	209Z			31-31-20	ALL
	11		W0155	209R	24		31-31-20	ALL
	12		W0155	209B	24		31-31-20	ALL
	13		W0155	213R	24		31-31-22	ALL
	14		W0155	213B	24		31-31-22	ALL

HOOKUP LIST
D280T132

91-21-51
Section D04300
Page 38
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04343P		AE0307/ /		PLUG-E2-3 (continued)				ALL
	15		W0155	213Z			31-31-22	ALL
	16		W0155	018	22		31-31-22	ALL
	17		W0155	017	24		31-31-26	ALL
	18		W0155	016	24		31-31-26	ALL
	19		W0155	211R	24		31-41-35	ALL
	20		W0155	211B	24		31-41-35	ALL
	21		W0155	211Z			31-41-35	ALL
	22		W0155	212R	24		28-41-11	ALL
	23		W0155	212B	24		28-41-11	ALL
	24		W0155	212Z			28-41-11	ALL
	25	DK	W0155	301R	18		31-31-25	ALL
	26	DK	W0155	301B	18		31-31-25	ALL
	27	DK	W0155	301Y	18		31-31-25	ALL
	28		W0155	301Z			31-31-25	ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
D04344J		AW0320/ /		RCPT-R WING/STRUT				ALL
	1		W0414	201B	20		24-11-21	ALL
	2		W0414	201R	20		24-11-21	ALL
	3		W0414	201Z			24-11-21	ALL
	4		W0414	001	18		24-11-21	ALL
	5		W0414	202B	20		24-21-21	ALL
	6		W0414	202R	20		24-21-21	ALL
	7		W0414	202Z			24-21-21	ALL
	8		W0414	401B	20		24-21-21	ALL
	9		W0414	401R	20		24-21-21	ALL
	10		W0414	401Y	20		24-21-21	ALL
	11		W0414	401G	20		24-21-21	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04300

Page 39

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04344J		AW0320/ /		RCPT-R WING/STRUT (continued)				ALL
	12		W0414	203B	20		24-11-21	ALL
	13		W0414	203R	20		24-11-21	ALL
	14		W0414	204B	20		24-11-21	ALL
	15		W0414	204R	20		24-11-21	ALL
	16		W0414	003	20		24-11-21	ALL
	17	UNUSED						ALL
	18		W0414	301B	18		24-21-21	ALL
	19		W0414	301R	18		24-21-21	ALL
	20		W0414	301Y	18		24-21-21	ALL
	21		W0414	002	20		24-11-21	ALL
	22		W0414	006	20		24-11-21	ALL
	23		W0414	205B	20		SPARE	ALL
	24		W0414	205R	20		SPARE	ALL
	25		W0414	205Z			SPARE	ALL
	26		W0414	005	18		SPARE	ALL
	27		W0414	007	20		24-11-21	ALL
	28		W0414	008	20		24-11-21	ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	DED		W0414	001Z			24-11-21	ALL
D04344P		AW0320/ /		PLUG-R WING/STRUT				050-099, 150-166, 275-299
	1		W0374	206B	20		24-11-21	050-099, 150-166, 275-299
	2		W0374	206R	20		24-11-21	050-099, 150-166, 275-299
	3		W0374	206Z			24-11-21	050-099, 150-166, 275-299
	4		W0374	026	18		24-11-21	050-099, 150-166, 275-299
	5		W0374	207B	18		24-21-21	050-099, 150-166, 275-299
	6		W0374	207R	18		24-21-21	050-099, 150-166, 275-299
	7		W0374	207Z			24-21-21	050-099, 150-166, 275-299
	8		W0374	401B	18		24-21-21	050-099, 150-166, 275-299
	9		W0374	401R	18		24-21-21	050-099, 150-166, 275-299
	10		W0374	401Y	18		24-21-21	050-099, 150-166, 275-299
	11		W0374	401G	18		24-21-21	050-099, 150-166, 275-299
	12		W0374	208B	18		24-11-21	050-099, 150-166, 275-299
	13		W0374	208R	18		24-11-21	050-099, 150-166, 275-299
	14		W0374	209B	18		24-11-21	050-099, 150-166, 275-299
	15		W0374	209R	18		24-11-21	050-099, 150-166, 275-299
	16		W0374	028	18		24-11-21	050-099, 150-166, 275-299
	17	UNUSED						050-099, 150-166, 275-299
	18		W0374	303B	18		24-21-21	050-099, 150-166, 275-299

HOOKUP LIST

D280T132

91-21-51

Section D04300

Page 40

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04344P		AW0320/ /		PLUG-R WING/STRUT (continued)				050-099, 150-166, 275-299
	19		W0374	303R	18		24-21-21	050-099, 150-166, 275-299
	20		W0374	303Y	18		24-21-21	050-099, 150-166, 275-299
	21		W0374	027	18		24-11-21	050-099, 150-166, 275-299
	22		W0374	030	18		24-11-21	050-099, 150-166, 275-299
	23	UNUSED						050-099, 150-166, 275-299
	24	UNUSED						050-099, 150-166, 275-299
	25		W0374	210R	18		SPARE	050-099, 150-166, 275-299
	26		W0374	210B	18		SPARE	050-099, 150-166, 275-299
	27		W0374	040	18		24-11-21	050-099, 150-166, 275-299
	28		W0374	041	18		24-11-21	050-099, 150-166, 275-299
	29	UNUSED						050-099, 150-166, 275-299
	30	UNUSED						050-099, 150-166, 275-299
D04345J		AE0319/ /		RCPT-E1-5				ALL
	1		W0469	006Y	22		27-41-21	ALL
	2		W0469	004Y	22		27-41-21	050-099
	2	UNUSED						150-199, 275-299
	3		W0469	007	20		27-32-21	ALL
	4		W0469	008	20		27-32-21	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						050-099, 275-299
	14	UNUSED						050-099, 275-299
	15	UNUSED						050-099, 275-299
	16	UNUSED						050-099, 275-299
	17	UNUSED						050-099, 275-299
	18	UNUSED						050-099, 275-299
	19	UNUSED						050-099, 275-299
	20	UNUSED						050-099, 275-299
	21	UNUSED						050-099, 275-299
	22	UNUSED						050-099, 275-299
	23	UNUSED						050-099, 275-299
	24	UNUSED						050-099, 275-299
	25	UNUSED						050-099, 275-299

HOOKUP LIST

D280T132

91-21-51

Section D04300

Page 41

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04345J		AE0319/ /		RCPT-E1-5 (continued)				ALL
	26	UNUSED						050-099, 275-299
	27	UNUSED						050-099, 275-299
	28	UNUSED						050-099, 275-299
	29	UNUSED						050-099, 275-299
	30	UNUSED						050-099, 275-299
	31	UNUSED						050-099, 275-299
D04345P		AE0319/ /		PLUG-E1-5				ALL
	1		W0119	165Y	22		27-41-21	ALL
	2		W0119	168Y	22		27-41-21	050-099
	2	UNUSED						150-199, 275-299
	3		W0119	155	20		27-32-21	ALL
	4		W0119	156	20		27-32-21	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						050-099, 275-299
	14	UNUSED						050-099, 275-299
	15	UNUSED						050-099, 275-299
	16	UNUSED						050-099, 275-299
	17	UNUSED						050-099, 275-299
	18	UNUSED						050-099, 275-299
	19	UNUSED						050-099, 275-299
	20	UNUSED						050-099, 275-299
	21	UNUSED						050-099, 275-299
	22	UNUSED						050-099, 275-299
	23	UNUSED						050-099, 275-299
	24	UNUSED						050-099, 275-299
	25	UNUSED						050-099, 275-299
	26	UNUSED						050-099, 275-299
	27	UNUSED						050-099, 275-299
	28	UNUSED						050-099, 275-299
	29	UNUSED						050-099, 275-299
	30	UNUSED						050-099, 275-299
	31	UNUSED						050-099, 275-299

HOOKUP LIST
D280T132

91-21-51
Section D04300
Page 42
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04345P		AE0319/ /		PLUG-E1-5 (continued)				ALL
	DED		W0119	155Z			27-32-21	ALL
D04346J		AE0218/ /		RCPT-P37				ALL
	1		W0192	143	24		32-41-11	ALL
	2		W0192	144	24		32-41-11	ALL
	3		W0192	145	24		32-41-11	ALL
	4		W0192	247B	24		29-31-11	ALL
	5	UNUSED						ALL
	6		W0192	093	22		36-22-11	ALL
	7		W0192	160	24		29-31-11	ALL
	8		W0192	247R	24		29-31-11	ALL
	9		W0192	127	20		33-43-11	050-099
	9	DK	W0192	127	18		33-43-11	150-199, 275-299
	10		W0192	280R	24		77-35-11	ALL
	11		W0192	128	20		SPARE	050-099
	11	DK	W0192	128	18		SPARE	150-199, 275-299
	12		W0192	044	24		36-11-62	ALL
	13		W0192	045	24		36-11-62	ALL
	14		W0192	279R	24		77-35-11	ALL
	15		W0192	828	20		33-42-11	050-099
	15	FM	W0192	828	16		33-42-11	150-199, 275-299
	16		W0192	71S	20		36-11-62	ALL
	17		W0192	71U	20		36-11-62	ALL
	18		W0192	058	24		36-11-62	ALL
	19		W0192	059	24		36-11-62	ALL
	20		W0192	060	24		36-11-62	ALL
	21	DK	W0192	829	18		33-42-11	050-099
	21	FM	W0192	829	16		33-42-11	150-199, 275-299
	22		W0192	061	24		36-11-62	ALL
	23		W0192	280B	24		77-35-11	ALL
	24		W0192	779	24		36-23-21	ALL
	25		W0192	780	24		36-23-21	ALL
	26		W0192	783	24		36-23-21	ALL
	27		W0192	781	24		36-23-21	ALL
	28		W0192	782	24		36-23-21	ALL
	29		W0192	307Z			36-23-21	ALL
	30		W0192	307B	24		36-23-21	ALL
	31		W0192	307R	24		36-23-21	ALL
	32		W0192	307Y	24		36-23-21	ALL
	33		W0192	06B	22		28-42-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04300

Page 43

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04346J		AE0218/ /		RCPT-P37 (continued)				ALL
	34	UNUSED						ALL
	35		W0192	60XB	24		36-23-21	ALL
	36	UNUSED						ALL
	37		W0192	674	24		29-33-11	ALL
	38		W0192	61B	24		24-11-21	ALL
	39		W0192	346	24		24-11-21	050, 150-199
	39		W0192	61C	24		24-11-21	051-099, 275-299
	40		W0192	08D	22		29-33-11	ALL
	41		W0192	01N	22		29-11-22	ALL
	42		W0192	282R	24		28-41-11	ALL
	43		W0192	282B	24		28-41-11	ALL
	44		W0192	282Z			28-41-11	ALL
	45		W0192	08F	24		29-33-11	ALL
	46		W0192	279B	24		77-35-11	ALL
	47		W0192	091	24		36-11-62	ALL
	48		W0192	092	24		36-11-62	ALL
	49		W0192	0AL	24		36-21-11	ALL
	50		W0192	280Z			77-35-11	ALL
	51		W0192	279Z			77-35-11	ALL
	52		W0192	244R	20		36-22-21	ALL
	53		W0192	244B	20		36-22-21	ALL
	54	UNUSED						ALL
	55		W0192	60XR	24		36-23-21	ALL
	DED		W0192	01NZ			29-11-22	ALL
D04346P		AE0218/ /		PLUG-				ALL
	1		W0656	033	22		32-41-11	ALL
	2		W0656	034	22		32-41-11	ALL
	3		W0656	035	20		32-41-11	ALL
	4		W0656	204B	22		29-31-11	ALL
	5		W0656	002	24		SPARE	ALL
	6		W0656	089	22		36-22-11	ALL
	7		W0656	057	22		29-31-11	ALL
	8		W0656	204R	22		29-31-11	ALL
	9		W0656	070	20		33-43-11	050-099
	9	FL	W0656	070	16		33-43-11	150-199, 275-299
	10		W0656	209R	24		77-35-11	ALL
	11	UNUSED						ALL
	12		W0656	090	24		36-11-62	ALL
	13		W0656	091	24		36-11-62	ALL

HOOKUP LIST
D280T132

91-21-51
Section D04300
Page 44
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04346P		AE0218/ /		PLUG- (continued)				ALL
	14		W0656	210R	24		77-35-11	ALL
	15		W0656	075	20		33-42-11	050-099
	15	FL	W0656	075	16		33-42-11	150-199, 275-299
	16	DL	W0656	092	18		36-11-62	ALL
	17	DL	W0656	093	18		36-11-62	ALL
	18		W0656	094	24		36-11-62	ALL
	19		W0656	095	24		36-11-62	ALL
	20		W0656	096	24		36-11-62	ALL
	21	DL	W0656	074	18		33-42-11	050-099
	21	FL	W0656	074	16		33-42-11	150-199, 275-299
	22		W0656	098	24		36-11-62	ALL
	23		W0656	209B	24		77-35-11	ALL
	24		W0656	100	24		36-23-21	ALL
	25		W0656	101	24		36-23-21	ALL
	26		W0656	102	24		36-23-21	ALL
	27		W0656	084	24		36-23-21	050-099, 155-199, 276-299
	27		W0656	084	24		SPARE	150-154, 275
	28		W0656	103	24		36-23-21	ALL
	29		W0656	301Z			36-23-21	ALL
	30		W0656	301B	24		36-23-21	ALL
	31		W0656	301R	24		36-23-21	ALL
	32		W0656	301Y	24		36-23-21	ALL
	33		W0656	104	22		28-42-11	ALL
	34		W0656	106	22		SPARE	050-099, 150-199, 275-278
	34		W0656	106	22		28-42-31	280-299
	35		W0656	192B	24		36-11-62	ALL
	36		W0656	004	22		SPARE	ALL
	37		W0656	005	24		29-33-11	ALL
	38		W0656	130	24		24-11-21	ALL
	39		W0656	131	24		24-11-21	ALL
	40		W0656	008	22		29-33-11	ALL
	41		W0656	029	22		29-11-22	ALL
	42		W0656	208R	24		28-41-11	ALL
	43		W0656	208B	24		28-41-11	ALL
	44		W0656	208Z			28-41-11	ALL
	45		W0656	006	24		29-33-11	ALL
	46		W0656	210B	24		77-35-11	ALL
	47		W0656	080	24		36-11-62	ALL
	48		W0656	079	24		36-11-62	ALL
	49		W0656	191	24		36-11-62	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04300

Page 45

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04346P		AE0218/ /		PLUG- (continued)				ALL
	50		W0656	209Z			77-35-11	ALL
	51		W0656	210Z			77-35-11	ALL
	52		W0656	202R	20		36-22-21	ALL
	53		W0656	202B	20		36-22-21	ALL
	54	UNUSED						ALL
	55		W0656	192R	24		36-11-62	ALL
D04347J		AE0208/ /		RCPT-P51				ALL
	1		W0045	728	24		31-51-41	ALL
	2		W0045	729	24		31-51-41	ALL
	3		W0045	730	24		31-51-41	ALL
	4		W0045	731	24		31-51-41	ALL
	5		W0045	732	24		31-51-42	ALL
	6		W0045	198	24		31-51-21	ALL
	7		W0045	748	24		31-51-31	ALL
	8		W0045	734	24		31-51-31	ALL
	9		W0045	713	24		31-51-41	ALL
	10		W0045	192	24		31-51-21	ALL
	11		W0045	194	24		31-51-21	ALL
	12	UNUSED						ALL
	13		W0045	725	24		31-51-42	ALL
	14		W0045	726	22		31-51-21	ALL
	15		W0045	776	24		31-51-33	ALL
	16		W0045	733	24		34-16-11	ALL
	17		W0045	230R	24		31-51-33	ALL
	18		W0045	230B	24		31-51-33	ALL
	19		W0045	738	24		34-16-11	ALL
	20		W0045	611	24		31-51-42	ALL
	21		W0045	196	24		31-51-21	ALL
	22		W0045	240R	24		31-51-31	ALL
	23		W0045	240B	24		31-51-31	ALL
	24		W0045	721	24		31-51-42	ALL
	25		W0045	115	24		21-61-51	ALL
	26		W0045	152	24		27-32-11	ALL
	27		W0045	884	22		38-32-11	050-099, 150-199, 277-299
	27	UNUSED						275-276
	28	UNUSED						ALL
	29	UNUSED						ALL
	30		W0045	693	24		31-51-21	ALL
	31	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D04300
Page 46
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04347J		AE0208/ /		RCPT-P51 (continued)				ALL
	32	UNUSED						050-099, 150-199
	32		W0045	648	24		34-16-11	275-299
	33	UNUSED						050-099, 150-199
	33		W0045	649	24		34-16-11	275-299
	34	UNUSED						ALL
	35	UNUSED						ALL
	36		W0045	236R	24		27-32-11	ALL
	37		W0045	236B	24		27-32-11	ALL
	38	UNUSED						ALL
	39		W0045	237R	24		27-32-11	ALL
	40		W0045	237B	24		27-32-11	ALL
	41	UNUSED						ALL
	42		W0045	644	22		27-32-31	ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46		W0045	682	24		31-51-43	ALL
	47		W0045	245R	24		27-32-11	ALL
	48		W0045	245B	24		27-32-11	ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
	56		W0045	505	22		21-66-11	050-099, 162-199
	56	UNUSED						150-157, 275-299
	57		W0045	506	22		21-66-11	050-099, 162-199
	57	UNUSED						150-157, 275-299
	58		W0045	507	22		21-66-11	050-099, 162-199
	58	UNUSED						150-157, 275-299
	59		W0045	508	22		21-66-41	050-099, 150, 152-199
	59	UNUSED						151, 275-299
	60		W0045	509	22		21-66-21	050-099, 162-199
	60	UNUSED						150-157, 275-299
	61	UNUSED						ALL
	DED		W0045	644Z			27-32-31	ALL
			W0045	230	20		31-51-33	ALL
			W0045	230Z			31-51-33	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04300

Page 47

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04347J		AE0208/ /		RCPT-P51 (continued)				ALL
			W0045	236	20		27-32-11	ALL
			W0045	236Z			27-32-11	ALL
			W0045	237Z			27-32-11	ALL
			W0045	245Z			27-32-11	ALL
D04347P		AE0208/ /		PLUG-P51 WARNING ELEX UNIT				ALL
	1		W0451	010	24		31-51-41	ALL
	2		W0451	011	24		31-51-41	ALL
	3		W0451	012	24		31-51-41	ALL
	4		W0451	013	24		31-51-41	ALL
	5		W0451	014	24		31-51-42	ALL
	6		W0451	003	24		31-51-21	ALL
	7		W0451	007	24		31-51-31	ALL
	8		W0451	016	24		31-41-16	ALL
	9		W0451	005	24		31-51-41	ALL
	10		W0451	006	24		31-51-21	ALL
	11		W0451	008	24		31-51-21	ALL
	12		W0451	002	24		SPARE	ALL
	13		W0451	018	24		31-51-42	ALL
	14		W0451	001	24		22-14-11	ALL
	15		W0451	004	24		31-51-33	ALL
	16		W0451	015	24		34-16-11	ALL
	17		W0451	203R	24		31-51-33	ALL
	18		W0451	203B	24		31-51-33	ALL
	19		W0451	019	24		34-16-11	ALL
	20		W0451	038	24		31-51-42	ALL
	21		W0451	020	24		31-51-21	ALL
	22		W0451	201R	24		34-46-11	ALL
	23		W0451	201B	24		34-46-11	ALL
	24		W0451	009	24		31-51-42	ALL
	25		W0451	035	24		21-61-51	ALL
	26		W0451	017	24		27-32-11	ALL
	27		W0451	110	20		38-32-11	050-099, 150-199, 277-299
	27	UNUSED						275
	27		W0451	110	20		SPARE	276
	28		W0451	039	22		SPARE	ALL
	29		W0451	034	24		SPARE	ALL
	30		W0451	032	24		31-51-21	ALL
	31		W0451	033	24		SPARE	ALL
	32	UNUSED						050-099, 150-199

HOOKUP LIST

D280T132

91-21-51

Section D04300

Page 48

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04347P		AE0208/ /		PLUG-P51 WARNING ELEX UNIT (continued)				ALL
	32		W0451	045	24		34-16-11	275-299
	33		W0451	046	24		SPARE	050-099
	33	UNUSED						150-199
	33		W0451	046	24		34-16-11	275-299
	34	UNUSED						ALL
	35	UNUSED						ALL
	36		W0451	204R	24		27-32-11	ALL
	37		W0451	204B	24		27-32-11	ALL
	38	UNUSED						050-099, 150-152, 155-199, 275-299
	38		W0451	055	22		SPARE	153-154
	39		W0451	205R	24		27-32-11	ALL
	40		W0451	205B	24		27-32-11	ALL
	41	UNUSED						ALL
	42		W0451	041	20		27-32-31	ALL
	43		W0451	042	24		SPARE	ALL
	44		W0451	043	24		SPARE	ALL
	45		W0451	044	24		SPARE	ALL
	46		W0451	047	24		31-51-43	ALL
	47		W0451	207R	24		27-32-11	ALL
	48		W0451	207B	24		27-32-11	ALL
	49		W0451	202R	24		SPARE	050-099
	49	UNUSED						150-199, 275-299
	50		W0451	202B	24		SPARE	050-099
	50	UNUSED						150-199, 275-299
	51	UNUSED						ALL
	52		W0451	202Z			SPARE	050-099
	52	UNUSED						150-199, 275-299
	53	UNUSED						ALL
	54		W0451	209R	24		31-51-31	050-099, 155-156, 162-166
	54	UNUSED						150-154, 157, 167-199, 275-299
	55		W0451	209B	24		31-51-31	050-099, 155-156, 162-166
	55	UNUSED						150-154, 157, 167-199, 275-299
	56		W0451	057	22		21-66-11	050-099, 162-199
	56	UNUSED						150-157, 275-299
	57		W0451	058	22		21-66-11	050-099, 162-199
	57	UNUSED						150-157, 275-299
	58		W0451	059	22		21-66-11	050-099, 162-199
	58	UNUSED						150-157, 275-299
	59		W0451	060	22		21-66-41	050-099, 150, 152-199
	59	UNUSED						151, 275-299

HOOKUP LIST

D280T132

91-21-51

Section D04300

Page 49

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04347P		AE0208/ /		PLUG-P51 WARNING ELEX UNIT (continued)				ALL
	60		W0451	061	22		21-66-21	050-099, 162-199
	60	UNUSED						150-157, 275-299
	61	UNUSED						ALL
	DED		W0451	201Z			34-46-11	ALL
			W0451	203	20		31-51-33	ALL
			W0451	203Z			31-51-33	ALL
			W0451	204	20		27-32-11	ALL
			W0451	204Z			27-32-11	ALL
			W0451	205	20		27-32-11	ALL
			W0451	205Z			27-32-11	ALL
			W0451	207	20		27-32-11	ALL
			W0451	207Z			27-32-11	ALL
D04349J		AE0208/ /		RCPT-P51				ALL
	1		W0045	077	24		31-41-35	ALL
	2		W0045	780	24		31-51-33	ALL
	3		W0045	712	24		31-51-41	ALL
	4		W0045	188	24		31-51-21	ALL
	5		W0045	186	24		31-51-21	ALL
	6		W0045	166	24		27-32-21	ALL
	7		W0045	708	24		31-51-41	ALL
	8		W0045	512	24		27-81-31	ALL
	9		W0045	798	24		31-51-21	ALL
	10		W0045	162	24		27-32-11	ALL
	11		W0045	165	22		27-32-21	ALL
	12		W0045	190	24		31-51-21	ALL
	13		W0045	777	24		31-51-33	ALL
	14		W0045	159	24		27-32-11	ALL
	15		W0045	160	24		27-32-11	ALL
	16		W0045	161	24		27-32-11	ALL
	17		W0045	743	24		31-51-33	ALL
	18		W0045	214R	24		34-16-11	ALL
	19		W0045	214B	24		34-16-11	ALL
	20	UNUSED						ALL
	21		W0045	711	24		31-51-41	ALL
	22		W0045	722	24		31-51-42	ALL
	23	UNUSED						ALL
	24		W0045	714	24		31-51-41	ALL
	25	UNUSED						ALL
	26		W0045	883	22		38-32-11	050-099, 150-199, 277-299

HOOKUP LIST
D280T132

91-21-51
Section D04300
Page 50
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04349J		AE0208/ /		RCPT-P51 (continued)				ALL
	26	UNUSED						275-276
	27		W0045	224R	24		27-32-21	ALL
	28		W0045	224B	24		27-32-21	ALL
	29		W0045	620	24		31-51-21	ALL
	30		W0045	613	24		31-51-31	ALL
	31		W0045	706	24		31-51-41	ALL
	32		W0045	606	24		31-51-11	ALL
	33		W0045	607	24		31-51-11	ALL
	34		W0045	169	24		27-32-21	ALL
	35		W0045	170	24		27-32-21	ALL
	36		W0045	171	24		27-32-21	ALL
	37		W0045	172	24		27-32-21	ALL
	38		W0045	024	24		31-51-11	ALL
	39		W0045	183	24		31-51-21	ALL
	40		W0045	779	24		31-51-33	ALL
	41	UNUSED						ALL
	42		W0045	646	22		27-32-31	ALL
	43	UNUSED						ALL
	44		W0045	888	24		31-51-21	ALL
	45	UNUSED						ALL
	46		W0045	694	22		31-51-43	ALL
	47		W0045	684	20		31-51-43	ALL
	48		W0045	238R	24		27-32-21	ALL
	49		W0045	238B	24		27-32-21	ALL
	50		W0045	835	24		27-32-21	ALL
	51		W0045	243R	24		27-32-21	ALL
	52		W0045	243B	24		27-32-21	ALL
	53		W0045	836	20		27-32-21	ALL
	54		W0045	239R	24		27-32-21	ALL
	55		W0045	239B	24		27-32-21	ALL
	56		W0045	247R	24		31-41-35	ALL
	57		W0045	247B	24		31-41-35	ALL
	58		W0045	FRG			31-41-35	ALL
	59		W0045	248R	24		28-41-11	ALL
	60		W0045	248B	24		28-41-11	ALL
	61		W0045	FRH			28-41-11	ALL
	DED		W0045	606Z			31-51-11	ALL
	DED		W0045	607Z			31-51-11	ALL
	DED		W0045	646Z			27-32-31	ALL
	DED		W0045	798Z			31-51-21	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04300

Page 51

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04349J		AE0208/ /		RCPT-P51 (continued)				ALL
			W0045	214	20		34-16-11	ALL
			W0045	214Z			34-16-11	ALL
			W0045	224	20		27-32-21	ALL
			W0045	224Z			27-32-21	ALL
			W0045	238	20		27-32-21	ALL
			W0045	238Z			27-32-21	ALL
			W0045	239Z			27-32-21	ALL
			W0045	243Z			27-32-21	ALL
			W0045	247	20		31-41-35	ALL
			W0045	247Z			31-41-35	ALL
			W0045	248	20		28-41-11	ALL
			W0045	248Z			28-41-11	ALL
			W0045	FRG			31-41-35	ALL
			W0045	FRH			28-41-11	ALL
D04349P		AE0208/ /		PLUG-P51 WARNING ELEX UNIT				ALL
	1		W0453	009	24		SPARE	ALL
	2		W0453	010	24		31-51-33	ALL
	3		W0453	003	24		31-51-41	ALL
	4		W0453	007	24		31-51-21	ALL
	5		W0453	006	24		31-51-21	ALL
	6		W0453	002	24		27-32-21	ALL
	7		W0453	012	24		31-51-41	ALL
	8		W0453	048	24		27-81-31	ALL
	9		W0453	004	24		31-51-21	ALL
	10		W0453	020	24		27-32-11	ALL
	11		W0453	061	20		27-32-21	ALL
	12		W0453	008	24		31-51-21	ALL
	13		W0453	005	24		31-51-33	ALL
	14		W0453	017	24		27-32-11	ALL
	15		W0453	018	24		27-32-11	ALL
	16		W0453	019	24		27-32-11	ALL
	17		W0453	001	24		23-21-11	ALL
	18		W0453	205R	24		22-14-21	ALL
	19		W0453	205B	24		22-14-21	ALL
	20		W0453	050	22		SPARE	ALL
	21		W0453	038	24		31-51-41	ALL
	22		W0453	011	24		31-51-42	ALL
	23		W0453	040	24		27-81-31	050-099, 150-166
	23		W0453	040	24		SPARE	167-199, 275-299

HOOKUP LIST

D280T132

91-21-51

Section D04300

Page 52

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04349P		AE0208/ /		PLUG-P51 WARNING ELEX UNIT (continued)				ALL
	24		W0453	039	24		31-51-41	ALL
	25	UNUSED						ALL
	26		W0453	051	20		38-32-11	050-099, 150-199, 277-299
	26		W0453	051	22		SPARE	275
	26		W0453	051	20		SPARE	276
	27		W0453	201R	24		27-32-21	ALL
	28		W0453	201B	24		27-32-21	ALL
	29		W0453	056	24		31-51-21	ALL
	30		W0453	055	24		31-41-16	ALL
	31		W0453	042	24		31-51-41	ALL
	32		W0453	015	24		31-51-11	ALL
	33		W0453	016	20		31-51-11	ALL
	34		W0453	021	24		27-32-21	ALL
	35		W0453	022	24		27-32-21	ALL
	36		W0453	023	24		27-32-21	ALL
	37		W0453	024	24		27-32-21	ALL
	38		W0453	035	24		31-51-11	ALL
	39		W0453	036	24		31-51-21	ALL
	40		W0453	037	24		31-51-33	ALL
	41		W0453	043	24		SPARE	ALL
	42		W0453	057	20		27-32-31	ALL
	43		W0453	058	24		SPARE	ALL
	44		W0453	045	24		31-51-21	ALL
	45		W0453	060	24		SPARE	ALL
	46		W0453	206R	22		31-51-43	ALL
	47		W0453	206B	22		31-51-43	ALL
	48		W0453	208R	24		27-32-21	ALL
	49		W0453	208B	24		27-32-21	ALL
	50		W0453	210R	24		27-32-21	ALL
	51		W0453	209R	24		27-32-21	ALL
	52		W0453	209B	24		27-32-21	ALL
	53		W0453	210B	24		27-32-21	ALL
	54		W0453	207R	24		27-32-21	ALL
	55		W0453	207B	24		27-32-21	ALL
	56		W0453	211R	24		31-41-35	ALL
	57		W0453	211B	24		31-41-35	ALL
	58		W0453	211Z			31-41-35	ALL
	59		W0453	212R	24		28-41-11	ALL
	60		W0453	212B	24		28-41-11	ALL
	61		W0453	212Z			28-41-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04300

Page 53

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04349P		AE0208/ /		PLUG-P51 WARNING ELEX UNIT (continued)				ALL
	DED		W0453	057Z			27-32-31	ALL
			W0453	201	20		27-32-21	ALL
			W0453	201Z			27-32-21	ALL
			W0453	205	20		22-14-21	ALL
			W0453	205Z			22-14-21	ALL
			W0453	207	20		27-32-21	ALL
			W0453	207Z			27-32-21	ALL
			W0453	208	20		27-32-21	ALL
			W0453	208Z			27-32-21	ALL
			W0453	209	20		27-32-21	ALL
			W0453	209Z			27-32-21	ALL
D04351J		AE0305/ /		RCPT-E1-3				ALL
	1		W1501	013Y	22		27-41-11	ALL
	2		W1501	012	22		22-22-11	ALL
	3		W1501	FRA			73-21-17	ALL
	4		W1501	70L	20		29-11-14	ALL
	5		W1501	206R	24		22-22-11	ALL
	6		W1501	206B	24		22-22-11	ALL
	7		W1501	127	24		73-21-17	ALL
	8		W1501	126	24		73-21-17	ALL
	9		W1501	205R	24		22-12-11	ALL
	10		W1501	205B	24		22-12-11	ALL
	11		W1501	001	22		22-22-11	ALL
	12		W1501	025	24		31-31-15	050-099, 155-199, 275-299
	12		W1501	002	22		27-41-11	150-154
	13		W1501	208R	22		27-41-11	ALL
	14		W1501	208B	22		27-41-11	ALL
	15		W1501	024	22		27-41-11	ALL
	16		W1501	023Y	22		27-41-11	ALL
	17		W1501	206Z			22-22-11	ALL
	18		W1501	70M	20		29-11-14	ALL
	19		W1501	020	22		27-61-11	ALL
	20		W1501	207R	24		27-11-12	ALL
	21		W1501	207B	24		27-11-12	ALL
	22		W1501	207Z			27-11-12	ALL
	23		W1501	018	22		22-24-11	ALL
	24		W1501	007	22		31-31-14	ALL
	DED		W1501	70MZ			29-11-14	ALL
			W1501	126Z			73-21-17	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04300

Page 54

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04351J		AE0305/ /		RCPT-E1-3 (continued)				ALL
			W1501	127Z			73-21-17	ALL
			W1501	FRA			73-21-17	ALL
D04351P		AE0305/ /		PLUG-E1-3				ALL
	1		W0105	167Y	22		27-41-11	ALL
	2		W0105	081	22		22-22-11	ALL
	3		W0105	FRB			73-21-17	050-099, 150-199, 277-299
	3	UNUSED						275-276
	4		W0105	70L	20		29-11-14	ALL
	5		W0105	236R	24		22-22-11	ALL
	6		W0105	236B	24		22-22-11	ALL
	7		W0105	636	24		73-21-17	ALL
	8		W0105	635	24		73-21-17	ALL
	9		W0105	248R	24		22-12-11	ALL
	10		W0105	248B	24		22-12-11	ALL
	11		W0105	080	24		22-12-11	ALL
	12		W0105	889	24		31-31-15	050-099, 155-199, 275-299
	12		W0105	097	22		27-41-11	150-154
	13		W0105	293R	22		27-41-11	ALL
	14		W0105	293B	22		27-41-11	ALL
	15		W0105	617	22		27-41-11	ALL
	16		W0105	616Y	22		27-41-11	ALL
	17		W0105	236Z			22-22-11	ALL
	18		W0105	70M	20		29-11-14	ALL
	19		W0105	099	22		27-61-11	ALL
	20		W0105	501R	24		27-11-12	ALL
	21		W0105	501B	24		27-11-12	ALL
	22		W0105	501Z			27-11-12	ALL
	23		W0105	185	22		22-24-11	ALL
	24		W0105	194	22		31-31-14	ALL
	DED		W0105	70MZ			29-11-14	ALL
			W0105	635Z			73-21-17	ALL
			W0105	636Z			73-21-17	ALL
			W0105	FRB			73-21-17	050-099, 150-199, 277-299
D04353J		AE0303/ /		RCPT-E1-1				ALL
	1		W0101	706	22		22-22-11	ALL
	2	UNUSED						050-099, 155-199, 275-299
	2		W0101	017	22		27-41-11	150-154
	3	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D04300

Page 55

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04353J		AE0303/ /		RCPT-E1-1 (continued)				ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W0101	219R	22		27-41-11	ALL
	7		W0101	219B	22		27-41-11	ALL
	8		W0101	135	22		22-24-11	ALL
	9		W0101	071	22		27-09-12	ALL
	10		W0101	079	22		27-09-13	ALL
	11		W0101	078	22		27-09-13	ALL
	12		W0101	707	22		22-22-11	ALL
	13		W0101	110	22		27-61-11	ALL
	14		W0101	837	24		31-31-15	050-099, 155-199, 275-299
	14	UNUSED						150-154
	15	UNUSED						ALL
	16		W0101	605Y	22		27-41-11	ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21		W0101	FRG			22-21-11	ALL
	22		W0101	217R	24		22-21-11	ALL
	23		W0101	217B	24		22-21-11	ALL
	24		W0101	121	22		22-21-11	ALL
	25		W0101	205R	24		22-22-11	ALL
	26		W0101	205B	24		22-22-11	ALL
	27		W0101	FRK			22-22-11	ALL
	28	UNUSED						ALL
	29		W0101	FRH			27-11-12	ALL
	30		W0101	220R	24		27-11-12	ALL
	31		W0101	220B	24		27-11-12	ALL
	32		W0101	181	22		27-61-16	ALL
	33		W0101	182	20		27-61-16	ALL
	34		W0101	136	22		22-21-11	ALL
	35		W0101	602	22		27-41-11	ALL
	36		W0101	604Y	22		27-41-11	ALL
	37		W0101	70L	20		29-11-14	ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41		W0101	70M	20		29-11-14	ALL
	DED		W0101	70MZ			29-11-14	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04300

Page 56

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04353J		AE0303/ /		RCPT-E1-1 (continued)				ALL
			W0101	205	20		22-22-11	ALL
			W0101	205Z			22-22-11	ALL
			W0101	217	20		22-21-11	ALL
			W0101	217Z			22-21-11	ALL
			W0101	220	20		27-11-12	ALL
			W0101	220Z			27-11-12	ALL
			W0101	FRG			22-21-11	ALL
			W0101	FRH			27-11-12	ALL
			W0101	FRK			22-22-11	ALL
D04353P		AE0303/ /		PLUG-E1-1				ALL
	1		W1501	001	22		22-22-11	ALL
	2	UNUSED						050-099, 155-199, 275-299
	2		W1501	002	22		27-41-11	150-154
	3		W1501	003	24		SPARE	ALL
	4		W1501	004	24		SPARE	ALL
	5		W1501	005	24		SPARE	ALL
	6		W1501	208R	22		27-41-11	ALL
	7		W1501	208B	22		27-41-11	ALL
	8		W1501	018	22		22-24-11	ALL
	9		W1501	009	22		27-09-12	ALL
	10		W1501	021	22		27-09-13	ALL
	11		W1501	022	22		27-09-13	ALL
	12		W1501	012	22		22-22-11	ALL
	13		W1501	020	22		27-61-11	ALL
	14		W1501	025	24		31-31-15	050-099, 155-199, 275-299
	14	UNUSED						150-154
	15		W1501	019	22		SPARE	ALL
	16		W1501	013Y	22		27-41-11	ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21		W1501	201Z			22-21-11	ALL
	22		W1501	201R	24		22-21-11	ALL
	23		W1501	201B	24		22-21-11	ALL
	24		W1501	006	22		22-21-11	ALL
	25		W1501	206R	24		22-22-11	ALL
	26		W1501	206B	24		22-22-11	ALL
	27		W1501	206Z			22-22-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04300

Page 57

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04353P		AE0303/ /		PLUG-E1-1 (continued)				ALL
	28	UNUSED						ALL
	29		W1501	207Z			27-11-12	ALL
	30		W1501	207R	24		27-11-12	ALL
	31		W1501	207B	24		27-11-12	ALL
	32		W1501	205R	24		22-12-11	ALL
	33		W1501	205B	24		22-12-11	ALL
	34		W1501	007	22		31-31-14	ALL
	35		W1501	024	22		27-41-11	ALL
	36		W1501	023Y	22		27-41-11	ALL
	37		W1501	70L	20		29-11-14	ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41		W1501	70M	20		29-11-14	ALL
	DED		W1501	70MZ			29-11-14	ALL
D04355J		AE0307/ /		RCPT-E1-4				ALL
	1		W1521	009	22		22-24-11	ALL
	2		W1521	010	22		27-61-11	ALL
	3		W1521	201R	22		22-22-11	ALL
	4		W1521	201B	22		22-22-11	ALL
	5		W1521	201Z			22-22-11	ALL
	6	UNUSED						ALL
	7		W1521	014	22		22-22-11	ALL
	8		W1521	015	22		22-22-11	ALL
	9		W1521	001	22		22-22-11	ALL
	10		W1521	002	22		SPARE	ALL
	11		W1521	005	22		SPARE	ALL
	12	UNUSED						ALL
	13		W1521	241B	24		32-45-13	050-099, 150-199
	13	UNUSED						275-299
	14		W1521	241R	24		32-45-13	050-099, 150-199
	14	UNUSED						275-299
	15		W1521	241Z			32-45-13	050-099, 150-199
	15	UNUSED						275-299
	16		W1521	242B	24		32-45-13	050-099, 150-199
	16	UNUSED						275-299
	17		W1521	242R	24		32-45-13	050-099, 150-199
	17	UNUSED						275-299
	18		W1521	242Z			32-45-13	050-099, 150-199

HOOKUP LIST
D280T132

91-21-51
Section D04300
Page 58
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04355J		AE0307/ /		RCPT-E1-4 (continued)				ALL
	18	UNUSED						275-299
	19		W1521	203Z			22-21-11	ALL
	20		W1521	203R	24		22-21-11	ALL
	21		W1521	203B	24		22-21-11	ALL
	22		W1521	013	22		22-21-11	ALL
	23		W1521	204R	24		22-12-31	ALL
	24		W1521	204B	24		22-12-31	ALL
	25	UNUSED						050-099, 150-199
	26	UNUSED						050-099, 150-199
	27	UNUSED						050-099, 150-199
	28		W1521	243B	24		32-45-13	050-099, 150-199
	29		W1521	243R	24		32-45-13	050-099, 150-199
	30		W1521	243Z			32-45-13	050-099, 150-199
	31		W1521	244B	24		32-45-13	050-099, 150-199
	32		W1521	244R	24		32-45-13	050-099, 150-199
	33		W1521	244Z			32-45-13	050-099, 150-199
	34	UNUSED						050-099, 150-199
	35	UNUSED						050-099, 150-199
	36	UNUSED						050-099, 150-199
	37	UNUSED						050-099, 150-199
	38	UNUSED						050-099, 150-199
	39	UNUSED						050-099, 150-199
	40	UNUSED						050-099, 150-199
	41	UNUSED						050-099, 150-199
	42	UNUSED						050-099, 150-199
	43	UNUSED						050-099, 150-199
	44	UNUSED						050-099, 150-199
	45	UNUSED						050-099, 150-199
	46	UNUSED						050-099, 150-199
	47	UNUSED						050-099, 150-199
	48	UNUSED						050-099, 150-199
	49	UNUSED						050-099, 150-199
	50	UNUSED						050-099, 150-199
	51	UNUSED						050-099, 150-199
	52	UNUSED						050-099, 150-199
	53	UNUSED						050-099, 150-199
	54	UNUSED						050-099, 150-199
	55	UNUSED						050-099, 150-199

HOOKUP LIST

D280T132

91-21-51

Section D04300

Page 59

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04355P		AE0307/ /		PLUG-E1-4				ALL
	1		W0127	185	22		22-24-11	ALL
	2		W0127	099	22		27-61-11	ALL
	3		W0127	236R	24		22-22-11	ALL
	4		W0127	236B	24		22-22-11	ALL
	5		W0127	236Z			22-22-11	ALL
	6	UNUSED						ALL
	7		W0127	085	24		22-12-31	ALL
	8		W0127	082	24		22-12-31	ALL
	9		W0127	083	24		22-12-31	ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13		W0127	269B	24		32-45-13	050-099, 150-199 275-299
	13	UNUSED						050-099, 150-199 275-299
	14		W0127	269R	24		32-45-13	050-099, 150-199 275-299
	14	UNUSED						050-099, 150-199 275-299
	15		W0127	269Z			32-45-13	050-099, 150-199 275-299
	15	UNUSED						050-099, 150-199 275-299
	16		W0127	270B	24		32-45-13	050-099, 150-199 275-299
	16	UNUSED						050-099, 150-199 275-299
	17		W0127	270R	24		32-45-13	050-099, 150-199 275-299
	17	UNUSED						050-099, 150-199 275-299
	18		W0127	270Z			32-45-13	050-099, 150-199 275-299
	18	UNUSED						050-099, 150-199 275-299
	19		W0127	535Z			22-21-11	ALL
	20		W0127	535R	24		22-21-11	ALL
	21		W0127	535B	24		22-21-11	ALL
	22		W0127	192	22		22-21-11	ALL
	23		W0127	248R	24		22-12-31	ALL
	24		W0127	248B	24		22-12-31	ALL
	25	UNUSED						050-099, 150-199
	26	UNUSED						050-099, 150-199
	27	UNUSED						050-099, 150-199
	28		W0127	297B	24		32-45-13	050-099, 150-199
	29		W0127	297R	24		32-45-13	050-099, 150-199
	30		W0127	297Z			32-45-13	050-099, 150-199
	31		W0127	298B	24		32-45-13	050-099, 150-199
	32		W0127	298R	24		32-45-13	050-099, 150-199
	33		W0127	298Z			32-45-13	050-099, 150-199
	34	UNUSED						050-099, 150-199

HOOKUP LIST

D280T132

91-21-51

Section D04300

Page 60

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04355P		AE0307/ /		PLUG-E1-4 (continued)				ALL
	35	UNUSED						050-099, 150-199
	36	UNUSED						050-099, 150-199
	37	UNUSED						050-099, 150-199
	38	UNUSED						050-099, 150-199
	39	UNUSED						050-099, 150-199
	40	UNUSED						050-099, 150-199
	41	UNUSED						050-099, 150-199
	42	UNUSED						050-099, 150-199
	43	UNUSED						050-099, 150-199
	44	UNUSED						050-099, 150-199
	45	UNUSED						050-099, 150-199
	46	UNUSED						050-099, 150-199
	47	UNUSED						050-099, 150-199
	48	UNUSED						050-099, 150-199
	49	UNUSED						050-099, 150-199
	50	UNUSED						050-099, 150-199
	51	UNUSED						050-099, 150-199
	52	UNUSED						050-099, 150-199
	53	UNUSED						050-099, 150-199
	54	UNUSED						050-099, 150-199
	55	UNUSED						050-099, 150-199
D04357J		AE0303/ /		RCPT-E1-1				ALL
	1	UNUSED						ALL
	2		W0121	069	22		27-09-12	ALL
	3		W0121	217R	24		22-22-11	ALL
	4		W0121	217B	24		22-22-11	ALL
	5		W0121	FRF			22-22-11	ALL
	6		W0121	241Z			32-45-13	050-099, 150-199
	6	UNUSED						275-299
	7		W0121	008	22		22-22-11	ALL
	8		W0121	006	22		22-22-11	ALL
	9		W0121	007	22		22-22-11	ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13		W0121	242Z			32-45-13	050-099, 150-199
	13	UNUSED						275-299
	14		W0121	003	22		27-09-13	ALL
	15		W0121	096	22		22-24-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04300

Page 61

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04357J		AE0303/ /		RCPT-E1-1 (continued)				ALL
	16		W0121	083	22		27-61-11	ALL
	17		W0121	080	22		27-09-13	ALL
	18		W0121	079	22		27-09-13	ALL
	19		W0121	FRD			22-21-11	ALL
	20		W0121	212R	24		22-21-11	ALL
	21		W0121	212B	24		22-21-11	ALL
	22		W0121	094	22		22-21-11	ALL
	23		W0121	178	22		27-61-14	ALL
	24		W0121	179	20		27-61-14	ALL
	25		W0121	241B	24		32-45-13	050-099, 150-199
	26		W0121	241R	24		32-45-13	050-099, 150-199
	27		W0121	242B	24		32-45-13	050-099, 150-199
	28		W0121	242R	24		32-45-13	050-099, 150-199
	29		W0121	243B	24		32-45-13	050-099, 150-199
	30		W0121	243R	24		32-45-13	050-099, 150-199
	31		W0121	243Z			32-45-13	050-099, 150-199
	32		W0121	244B	24		32-45-13	050-099, 150-199
	33		W0121	244R	24		32-45-13	050-099, 150-199
	34		W0121	244Z			32-45-13	050-099, 150-199
	35	UNUSED						050-099, 150-199
	36	UNUSED						050-099, 150-199
	37	UNUSED						050-099, 150-199
	38	UNUSED						050-099, 150-199
	39	UNUSED						050-099, 150-199
	40	UNUSED						050-099, 150-199
	41	UNUSED						050-099, 150-199
			W0121	212	20		22-21-11	ALL
			W0121	212Z			22-21-11	ALL
			W0121	217	20		22-22-11	ALL
			W0121	217Z			22-22-11	ALL
			W0121	FRD			22-21-11	ALL
			W0121	FRF			22-22-11	ALL
D04357P		AE0303/ /		PLUG-E1-1				ALL
	1		W1521	003	22		SPARE	ALL
	2		W1521	004	22		27-09-12	ALL
	3		W1521	201R	22		22-22-11	ALL
	4		W1521	201B	22		22-22-11	ALL
	5		W1521	201Z			22-22-11	ALL
	6		W1521	241Z			32-45-13	050-099, 150-199

HOOKUP LIST
D280T132

91-21-51
Section D04300
Page 62
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04357P		AE0303/ /		PLUG-E1-1 (continued)				ALL
	6	UNUSED						275-299
	7		W1521	014	22		22-22-11	ALL
	8		W1521	015	22		22-22-11	ALL
	9		W1521	001	22		22-22-11	ALL
	10		W1521	002	22		SPARE	ALL
	11		W1521	005	22		SPARE	ALL
	12		W1521	006	20		SPARE	ALL
	13		W1521	242Z			32-45-13	050-099, 150-199
	13	UNUSED						275-299
	14		W1521	008	22		27-09-13	ALL
	15		W1521	009	22		22-24-11	ALL
	16		W1521	010	22		27-61-11	ALL
	17		W1521	011	22		27-09-13	ALL
	18		W1521	012	22		27-09-13	ALL
	19		W1521	203Z			22-21-11	ALL
	20		W1521	203R	24		22-21-11	ALL
	21		W1521	203B	24		22-21-11	ALL
	22		W1521	013	22		22-21-11	ALL
	23		W1521	204R	24		22-12-31	ALL
	24		W1521	204B	24		22-12-31	ALL
	25		W1521	241B	24		32-45-13	050-099, 150-199
	26		W1521	241R	24		32-45-13	050-099, 150-199
	27		W1521	242B	24		32-45-13	050-099, 150-199
	28		W1521	242R	24		32-45-13	050-099, 150-199
	29		W1521	243B	24		32-45-13	050-099, 150-199
	30		W1521	243R	24		32-45-13	050-099, 150-199
	31		W1521	243Z			32-45-13	050-099, 150-199
	32		W1521	244B	24		32-45-13	050-099, 150-199
	33		W1521	244R	24		32-45-13	050-099, 150-199
	34		W1521	244Z			32-45-13	050-099, 150-199
	35	UNUSED						050-099, 150-199
	36	UNUSED						050-099, 150-199
	37	UNUSED						050-099, 150-199
	38	UNUSED						050-099, 150-199
	39	UNUSED						050-099, 150-199
	40	UNUSED						050-099, 150-199
	41	UNUSED						050-099, 150-199
D04361J		AE0317/ /		RCPT-E1-5				ALL
	1		W1541	018	24		SPARE	ALL

HOOKUP LIST
D280T132

91-21-51
Section D04300
Page 63
Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04361J		AE0317/ /		RCPT-E1-5 (continued)				ALL
	2		W1541	210R	24		27-32-21	ALL
	3		W1541	015Y	22		27-41-21	ALL
	4		W1541	034	22		SPARE	ALL
	5		W1541	016	22		22-22-21	ALL
	6		W1541	210B	24		27-32-21	ALL
	7		W1541	206R	24		22-22-21	ALL
	8		W1541	206B	24		22-22-21	ALL
	9		W1541	206Z			22-22-21	ALL
	10		W1541	005	22		22-22-21	ALL
	11		W1541	203R	24		22-12-21	ALL
	12		W1541	203B	24		22-12-21	ALL
	13		W1541	014	22		SPARE	ALL
	14		W1541	004	22		22-24-21	ALL
	15		W1541	208Z			27-11-22	ALL
	16		W1541	020	22		27-61-11	ALL
	17		W1541	027	22		31-31-18	ALL
	18		W1541	028	22		31-31-18	ALL
	19		W1541	029	22		31-31-18	ALL
	20		W1541	030	22		31-31-18	ALL
	21		W1541	207R	22		27-41-21	ALL
	22		W1541	207B	22		27-41-21	ALL
	23		W1541	208R	24		27-11-22	ALL
	24		W1541	208B	24		27-11-22	ALL
	25	UNUSED						ALL
	26		W1541	023	22		27-41-21	ALL
	27		W1541	024Y	22		27-41-21	ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
D04361P		AE0317/ /		PLUG-E1-5				ALL
	1	UNUSED						ALL
	2		W0119	511R	24		27-32-21	ALL
	3		W0119	167Y	22		27-41-21	ALL
	4	UNUSED						ALL
	5		W0119	088	24		22-12-21	ALL
	6		W0119	511B	24		27-32-21	ALL
	7		W0119	237R	24		22-22-21	ALL
	8		W0119	237B	24		22-22-21	ALL

HOOKUP LIST
D280T132

91-21-51
Section D04300
Page 64
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04361P		AE0317/ /		PLUG-E1-5 (continued)				ALL
	9		W0119	237Z			22-22-21	ALL
	10		W0119	091	22		22-22-21	ALL
	11		W0119	248R	24		22-12-21	ALL
	12		W0119	248B	24		22-12-21	ALL
	13	UNUSED						ALL
	14		W0119	185	22		22-24-21	ALL
	15		W0119	241Z			27-11-22	ALL
	16		W0119	159	22		27-61-11	ALL
	17		W0119	601	22		31-31-18	ALL
	18		W0119	602	22		31-31-18	ALL
	19		W0119	603	22		31-31-18	ALL
	20		W0119	604	22		31-31-18	ALL
	21		W0119	290R	22		27-41-21	ALL
	22		W0119	290B	22		27-41-21	ALL
	23		W0119	241R	24		27-11-22	ALL
	24		W0119	241B	24		27-11-22	ALL
	25	UNUSED						ALL
	26		W0119	609	22		27-41-21	ALL
	27		W0119	608Y	22		27-41-21	ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
D04363J		AE0308/ /		RCPT-E2-1				ALL
	1		W0141	159	22		27-61-18	ALL
	2		W0141	160	22		27-61-18	ALL
	3		W0141	066	22		27-09-12	ALL
	4	UNUSED						ALL
	5		W0141	606Y	22		27-41-21	050-099
	5		W0141	607Y	22		27-41-21	150-199, 275-299
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9		W0141	FRF			22-21-21	ALL
	10		W0141	202R	24		22-21-21	ALL
	11		W0141	202B	24		22-21-21	ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14		W0141	029	22		22-24-21	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04300

Page 65

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04363J		AE0308/ /		RCPT-E2-1 (continued)				ALL
	15		W0141	012	22		22-21-21	ALL
	16		W0141	604	22		27-41-21	ALL
	17		W0141	201R	24		22-22-21	ALL
	18		W0141	201B	24		22-22-21	ALL
	19		W0141	FRJ			22-22-21	ALL
	20		W0141	003	22		22-22-21	ALL
	21		W0141	209R	22		27-41-21	ALL
	22		W0141	209B	22		27-41-21	ALL
	23		W0141	206R	24		27-11-22	ALL
	24		W0141	206B	24		27-11-22	ALL
	25		W0141	FRG			27-11-22	ALL
	26		W0141	116	22		27-61-11	ALL
	27		W0141	607Y	22		27-41-21	050-099
	27		W0141	606Y	22		27-41-21	150-199, 275-299
	28		W0141	080	22		27-09-13	ALL
	29		W0141	087	22		27-09-13	ALL
	30		W0141	002	22		22-22-21	ALL
	31		W0141	009	22		22-21-21	ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35		W0141	193	22		27-61-17	ALL
	36		W0141	194	20		27-61-17	ALL
	37		W0141	192	22		27-41-21	ALL
	38		W0141	191	22		27-41-21	ALL
	39		W0141	190	22		27-41-21	ALL
	40		W0141	189	22		27-41-21	ALL
	41	UNUSED						ALL
	42		W0141	601	24		27-32-21	ALL
	43		W0141	602	20		27-32-21	ALL
	44		W0141	035	22		22-21-21	ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D04300

Page 66

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04363J		AE0308/ /		RCPT-E2-1 (continued)				ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
			W0141	201	20		22-22-21	ALL
			W0141	201Z			22-22-21	ALL
			W0141	202	20		22-21-21	ALL
			W0141	202Z			22-21-21	ALL
			W0141	206	20		27-11-22	ALL
			W0141	206Z			27-11-22	ALL
			W0141	FRF			22-21-21	ALL
			W0141	FRG			27-11-22	ALL
			W0141	FRJ			22-22-21	ALL
D04363P		AE0308/ /		PLUG-E2-1				ALL
	1		W1541	008	20		27-61-18	ALL
	2		W1541	007	20		27-61-18	ALL
	3		W1541	009	22		27-09-12	ALL
	4		W1541	010	22		SPARE	ALL
	5		W1541	015Y	22		27-41-21	ALL
	6		W1541	209R	24		SPARE	ALL
	7		W1541	209B	24		SPARE	ALL
	8		W1541	209Z			SPARE	ALL
	9		W1541	202Z			22-21-21	ALL
	10		W1541	202R	24		22-21-21	ALL
	11		W1541	202B	24		22-21-21	ALL
	12		W1541	013	22		SPARE	ALL
	13		W1541	014	22		SPARE	ALL
	14		W1541	004	22		22-24-21	ALL
	15		W1541	003	22		22-21-21	ALL
	16		W1541	023	22		27-41-21	ALL
	17		W1541	206R	24		22-22-21	ALL
	18		W1541	206B	24		22-22-21	ALL
	19		W1541	206Z			22-22-21	ALL
	20		W1541	005	22		22-22-21	ALL
	21		W1541	207R	22		27-41-21	ALL
	22		W1541	207B	22		27-41-21	ALL
	23		W1541	208R	24		27-11-22	ALL
	24		W1541	208B	24		27-11-22	ALL
	25		W1541	208Z			27-11-22	ALL
	26		W1541	020	22		27-61-11	ALL
	27		W1541	024Y	22		27-41-21	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04300

Page 67

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04363P		AE0308/ /		PLUG-E2-1 (continued)				ALL
	28		W1541	022	22		27-09-13	ALL
	29		W1541	021	22		27-09-13	ALL
	30		W1541	016	22		22-22-21	ALL
	31		W1541	031	22		22-21-21	ALL
	32		W1541	032	22		SPARE	ALL
	33		W1541	033	22		SPARE	ALL
	34		W1541	034	22		SPARE	ALL
	35		W1541	203R	24		22-12-21	ALL
	36		W1541	203B	24		22-12-21	ALL
	37		W1541	027	22		31-31-18	ALL
	38		W1541	028	22		31-31-18	ALL
	39		W1541	029	22		31-31-18	ALL
	40		W1541	030	22		31-31-18	ALL
	41		W1541	018	24		SPARE	ALL
	42		W1541	210R	24		27-32-21	ALL
	43		W1541	210B	24		27-32-21	ALL
	44		W1541	024	22		31-31-14	ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
D04365J		AE0319/ /		RCPT-				ALL
	1	UNUSED						ALL
	2		W0481	006Y	22		27-41-11	050-099, 275-299
	2		W0481	050	24		SPARE	150-199
	3		W0481	017	24		22-32-15	ALL
	4		W0481	010	22		22-11-12	ALL
	5		W0481	001	20		34-31-11	ALL
	6		W0481	020	24		SPARE	050-099
	6	UNUSED						150-199, 275-299
	7		W0481	021	24		SPARE	050-099
	7	UNUSED						150-199, 275-299

HOOKUP LIST
D280T132

91-21-51
Section D04300
Page 68
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04365J		AE0319/ /		RCPT- (continued)				ALL
	8		W0481	201B	22		34-31-11	ALL
	9		W0481	201R	22		34-31-11	ALL
	10		W0481	005	22		22-11-12	ALL
	11		W0481	003	22		34-31-11	ALL
	12		W0481	202Z			34-31-11	ALL
	13		W0481	202B	24		34-31-11	ALL
	14		W0481	202R	24		34-31-11	ALL
	15		W0481	009	22		22-11-12	ALL
	16		W0481	013	20		22-31-11	ALL
	17		W0481	014	24		22-31-11	ALL
	18		W0481	301R	20		22-32-13	ALL
	19		W0481	301B	20		22-32-13	ALL
	20		W0481	301Y	20		22-32-13	ALL
	21		W0481	028	24		27-48-11	050-099, 150-154, 157-164, 167-199, 275-299
	21		W0481	302Y	24		27-48-11	155-156, 165-166
	22		W0481	035	24		22-32-13	ALL
	23		W0481	036	24		22-32-13	ALL
	24		W0481	037	24		22-32-13	ALL
	25		W0481	008	22		22-11-12	ALL
	26		W0481	205R	24		22-32-13	ALL
	27		W0481	205B	24		22-32-13	ALL
	28		W0481	027	20		27-41-11	ALL
	29	UNUSED						050-099, 155-199, 275-299
	29		W0481	051	22		27-41-11	150-154
	30		W0481	004	22		22-11-12	ALL
	31		W0481	011	24		SPARE	ALL
	32	UNUSED						ALL
	33		W0481	026	20		27-41-11	ALL
	34		W0481	018	24		22-32-15	ALL
	35		W0481	019	24		22-32-15	ALL
	36		W0481	029	24		27-48-11	050-099, 150-154, 157-164, 167-199, 275-299
	36		W0481	302B	24		27-48-11	155-156, 165-166
	37		W0481	030	24		27-48-11	050-099, 150-154, 157-164, 167-199, 275-299
	37		W0481	302R	24		27-48-11	155-156, 165-166
	38		W0481	022	24		SPARE	050-099
	38	UNUSED						150-199, 275-299
	39		W0481	023	22		SPARE	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04300

Page 69

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04365J		AE0319/ /		RCPT- (continued)				ALL
	40		W0481	024	24		SPARE	050-099, 275-299
	40		W0481	024	24		31-31-15	150-154
	40	UNUSED						155-199
	41		W0481	031	22		22-12-11	ALL
	42		W0481	032	22		22-12-11	ALL
	43		W0481	033	22		22-12-11	ALL
	44	UNUSED						ALL
	45		W0481	047	20		27-21-11	ALL
	46		W0481	006	22		22-11-12	ALL
	47	UNUSED						ALL
	48		W0481	034	24		31-51-42	ALL
	49		W0481	004Y	22		27-41-11	050-099
	49		W0481	025	24		SPARE	150-199, 275-299
	50		W0481	061	24		31-51-33	ALL
	51		W0481	062	24		31-51-33	ALL
	52		W0481	206R	22		SPARE	050-099, 150-199
	52	UNUSED						275-299
	53		W0481	206B	22		SPARE	050-099, 150-199
	53	UNUSED						275-299
	54		W0481	055	22		SPARE	050-099, 150-199
	54	UNUSED						275-299
	55		W0481	060	22		31-51-33	ALL
D04365P		AE0319/ /		PLUG-E1-3				ALL
	1	UNUSED						ALL
	2		W0105	165Y	22		27-41-11	050-099, 275-299
	2	UNUSED						150-199
	3		W0105	746	24		22-32-15	ALL
	4		W0105	021	20		22-11-12	ALL
	5		W0105	107	22		34-31-11	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8		W0105	254B	22		34-31-11	ALL
	9		W0105	254R	22		34-31-11	ALL
	10		W0105	017	22		22-11-12	ALL
	11		W0105	108	22		34-31-11	ALL
	12		W0105	256Z			34-31-11	ALL
	13		W0105	256B	24		34-31-11	ALL
	14		W0105	256R	24		34-31-11	ALL
	15		W0105	019	22		22-11-12	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04300

Page 70

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04365P		AE0319/ /		PLUG-E1-3 (continued)				ALL
	16		W0105	703	20		22-31-11	ALL
	17		W0105	706	24		22-31-11	ALL
	18		W0105	354R	22		22-32-13	ALL
	19		W0105	354B	22		22-32-13	ALL
	20		W0105	354Y	22		22-32-13	ALL
	21		W0105	171	24		27-48-11	ALL
	22		W0105	714	24		22-32-13	ALL
	23		W0105	715	24		22-32-13	ALL
	24		W0105	716	20		22-32-13	ALL
	25		W0105	086	20		22-11-12	ALL
	26		W0105	671R	24		22-32-13	ALL
	27		W0105	671B	24		22-32-13	ALL
	28		W0105	162	20		27-41-11	ALL
	29	UNUSED						050-099, 155-199, 275-299
	29		W0105	097	22		27-41-11	150-154
	30		W0105	015	22		22-11-12	ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33		W0105	161	20		27-41-11	ALL
	34		W0105	755	20		22-32-15	ALL
	35		W0105	747	24		22-32-15	ALL
	36		W0105	172	24		27-48-11	ALL
	37		W0105	173	24		27-48-11	ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						050-099, 155-199, 275-299
	40		W0105	889	24		31-31-15	150-154
	41		W0105	038	22		22-12-11	ALL
	42		W0105	040	22		22-12-11	ALL
	43		W0105	041	22		22-12-11	ALL
	44	UNUSED						ALL
	45		W0105	199	20		27-21-11	ALL
	46		W0105	022	20		22-11-12	ALL
	47	UNUSED						ALL
	48		W0105	180	24		31-51-42	ALL
	49		W0105	168Y	22		27-41-11	050-099
	49	UNUSED						150-199, 275-299
	50		W0105	859	24		31-51-33	ALL
	51		W0105	860	24		31-51-33	ALL
	52	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D04300

Page 71

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04365P		AE0319/ /		PLUG-E1-3 (continued)				ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55		W0105	858	22		31-51-33	ALL
D04367J		AE0319/ /		RCPT-E1-3				ALL
	1		W0697	001	22		22-24-11	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W0697	201R	22		27-41-11	ALL
	5		W0697	201B	22		27-41-11	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8		W0697	008	24		22-32-13	ALL
	9		W0697	009	24		22-32-13	ALL
	10		W0697	010	24		22-32-13	ALL
	11		W0697	011	24		22-32-13	ALL
	12		W0697	012	24		22-32-13	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15		W0697	020	22		27-41-11	ALL
	16		W0697	006	22		27-61-11	ALL
	17	UNUSED						ALL
	18		W0697	018	22		SPARE	ALL
	19		W0697	019	22		SPARE	ALL
	20		W0697	202R	24		22-32-13	ALL
	21		W0697	202B	24		22-32-13	ALL
	22		W0697	022	24		22-12-11	ALL
	23		W0697	023	24		22-12-11	ALL
	24		W0697	024	24		22-12-11	ALL
	25		W0697	025	24		22-12-11	ALL
	26		W0697	206B	24		SPARE	ALL
	27		W0697	206R	24		SPARE	ALL
	28		W0697	028	24		34-46-12	ALL
	29		W0697	301B	24		27-58-21	ALL
	30		W0697	301R	24		27-58-21	ALL
	31		W0697	301Y	24		27-58-21	ALL
	32		W0697	205B	24		27-58-21	ALL
	33		W0697	205R	24		27-58-21	ALL
	34	UNUSED						ALL
	35		W0697	035	24		SPARE	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04300

Page 72

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04367J		AE0319/ /		RCPT-E1-3 (continued)				ALL
	36		W0697	036	24		SPARE	ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
D04367P		AE0319/ /		PLUG-E1-3				ALL
	1		W0105	185	22		22-24-11	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W0105	293R	22		27-41-11	ALL
	5		W0105	293B	22		27-41-11	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8		W0105	733	24		22-32-13	ALL
	9		W0105	739	24		22-32-13	ALL
	10		W0105	738	24		22-32-13	ALL
	11		W0105	741	24		22-32-13	ALL
	12		W0105	745	24		22-32-13	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15		W0105	617	22		27-41-11	ALL
	16		W0105	099	22		27-61-11	ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20		W0105	673R	24		22-32-13	ALL
	21		W0105	673B	24		22-32-13	ALL
	22		W0105	089	24		22-12-11	ALL
	23		W0105	090	24		22-12-11	ALL
	24		W0105	114	24		22-12-11	ALL
	25		W0105	115	24		22-12-11	ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28		W0105	042	24		34-46-12	ALL
	29		W0105	323B	24		27-58-21	ALL
	30		W0105	323R	24		27-58-21	ALL
	31		W0105	323Y	24		27-58-21	ALL
	32		W0105	288B	24		27-58-21	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04300

Page 73

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04367P		AE0319/ /		PLUG-E1-3 (continued)				ALL
	33		W0105	288R	24		27-58-21	ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
D04369J		AE0319/ /		RCPT-				ALL
	1		W0485	007	22		22-12-21	ALL
	2		W0485	008	22		22-12-21	ALL
	3		W0485	004	22		22-11-22	ALL
	4		W0485	006	22		22-11-22	ALL
	5		W0485	001	20		34-31-21	ALL
	6		W0485	202R	24		34-31-21	ALL
	7		W0485	202B	24		34-31-21	ALL
	8		W0485	201B	22		34-31-21	ALL
	9		W0485	201R	22		34-31-21	ALL
	10		W0485	014	24		31-51-42	ALL
	11		W0485	003	22		34-31-21	ALL
	12		W0485	202Z			34-31-21	ALL
	13		W0485	009	20		27-41-21	ALL
	14		W0485	010	20		27-41-21	ALL
	15		W0485	011	24		27-48-11	050-099, 150-154, 157-164, 167-199, 275-299
	15		W0485	301Y	24		27-48-11	155-156, 165-166
	16		W0485	019	22		22-12-21	ALL
	17		W0485	020	24		SPARE	ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21		W0485	021	24		31-51-41	ALL
	22		W0485	012	24		27-48-11	050-099, 150-154, 157-164, 167-199, 275-299
	22		W0485	301B	24		27-48-11	155-156, 165-166
	23		W0485	013	24		27-48-11	050-099, 150-154, 157-164, 167-199, 275-299
	23		W0485	301R	24		27-48-11	155-156, 165-166

HOOKUP LIST
D280T132

91-21-51
Section D04300
Page 74
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04369J		AE0319/ /		RCPT- (continued)				ALL
	24		W0485	022	24		SPARE	ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
D04369P		AE0319/ /		PLUG-E1-5				ALL
	1		W0119	033	22		22-12-21	ALL
	2		W0119	032	22		22-12-21	ALL
	3		W0119	015	22		22-11-22	ALL
	4		W0119	019	20		22-11-22	ALL
	5		W0119	107	22		34-31-21	ALL
	6		W0119	256R	24		34-31-21	ALL
	7		W0119	256B	24		34-31-21	ALL
	8		W0119	254B	22		34-31-21	ALL
	9		W0119	254R	22		34-31-21	ALL
	10		W0119	175	24		31-51-42	ALL
	11		W0119	109	22		34-31-21	ALL
	12		W0119	256Z			34-31-21	ALL
	13		W0119	161	20		27-41-21	ALL
	14		W0119	162	20		27-41-21	ALL
	15		W0119	171	24		27-48-11	ALL
	16		W0119	042	20		22-12-21	ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21		W0119	129	24		31-51-41	ALL
	22		W0119	173	24		27-48-11	ALL
	23		W0119	174	24		27-48-11	ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D04300

Page 75

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04369P		AE0319/ /		PLUG-E1-5 (continued)				ALL
	31	UNUSED						ALL
D04371J		AE0319/ /		RCPT-E1-2				ALL
	1		W1599	201WN	24		34-22-35	ALL
	2		W1599	201W	24		34-22-35	ALL
	3		W1599	201Z			34-22-35	ALL
	4		W1599	202WN	24		34-22-35	ALL
	5		W1599	202W	24		34-22-35	ALL
	6		W1599	202Z			34-22-35	ALL
	7		W1599	203WN	24		34-22-35	ALL
	8		W1599	203W	24		34-22-35	ALL
	9		W1599	203Z			34-22-35	ALL
	10		W1599	204WN	24		34-22-35	ALL
	11		W1599	204W	24		34-22-35	ALL
	12		W1599	204Z			34-22-35	ALL
	13		W1599	205WN	24		34-22-35	ALL
	14		W1599	205W	24		34-22-35	ALL
	15		W1599	205Z			34-22-35	ALL
	16		W1599	206WN	24		34-22-35	ALL
	17		W1599	206W	24		34-22-35	ALL
	18		W1599	206Z			34-22-35	ALL
	19		W1599	207WN	24		34-22-35	ALL
	20		W1599	207W	24		34-22-35	ALL
	21		W1599	207Z			34-22-35	ALL
	22		W1599	208WN	24		34-22-35	ALL
	23		W1599	208W	24		34-22-35	ALL
	24		W1599	208Z			34-22-35	ALL
	25		W1599	209WN	24		34-22-35	ALL
	26		W1599	209W	24		34-22-35	ALL
	27		W1599	209Z			34-22-35	ALL
	28		W1599	210WN	24		34-22-35	ALL
	29		W1599	210W	24		34-22-35	ALL
	30		W1599	210Z			34-22-35	ALL
	31		W1599	211WN	24		34-22-35	ALL
	32		W1599	211W	24		34-22-35	ALL
	33		W1599	211Z			34-22-35	ALL
	34		W1599	212WN	24		34-22-35	ALL
	35		W1599	212W	24		34-22-35	ALL
	36		W1599	212Z			34-22-35	ALL
	37		W1599	213WN	24		34-22-35	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04300

Page 76

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04371J		AE0319/ /		RCPT-E1-2 (continued)				ALL
	38		W1599	213W	24		34-22-35	ALL
	39		W1599	213Z			34-22-35	ALL
	40		W1599	214WN	24		34-22-35	ALL
	41		W1599	214W	24		34-22-35	ALL
	42		W1599	214Z			34-22-35	ALL
	43		W1599	215WN	24		34-22-35	ALL
	44		W1599	215W	24		34-22-35	ALL
	45		W1599	215Z			34-22-35	ALL
	46		W1599	216WN	24		34-22-35	ALL
	47		W1599	216W	24		34-22-35	ALL
	48		W1599	216Z			34-22-35	ALL
	49		W1599	217WN	24		34-22-35	ALL
	50		W1599	217W	24		34-22-35	ALL
	51		W1599	217Z			34-22-35	ALL
	52		W1599	218WN	24		34-22-35	ALL
	53		W1599	218W	24		34-22-35	ALL
	54		W1599	218Z			34-22-35	ALL
	55	UNUSED						ALL
D04371P		AE0319/ /		PLUG-				ALL
	1		W1103	501WN	26		34-22-35	ALL
	2		W1103	501W	26		34-22-35	ALL
	3		W1103	501Z			34-22-35	ALL
	4		W1103	502WN	26		34-22-35	ALL
	5		W1103	502W	26		34-22-35	ALL
	6		W1103	502Z			34-22-35	ALL
	7		W1103	503WN	26		34-22-35	ALL
	8		W1103	503W	26		34-22-35	ALL
	9		W1103	503Z			34-22-35	ALL
	10		W1103	504WN	26		34-22-35	ALL
	11		W1103	504W	26		34-22-35	ALL
	12		W1103	504Z			34-22-35	ALL
	13		W1103	505WN	26		34-22-35	ALL
	14		W1103	505W	26		34-22-35	ALL
	15		W1103	505Z			34-22-35	ALL
	16		W1103	506WN	26		34-22-35	ALL
	17		W1103	506W	26		34-22-35	ALL
	18		W1103	506Z			34-22-35	ALL
	19		W1103	507WN	26		34-22-35	ALL
	20		W1103	507W	26		34-22-35	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04300

Page 77

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04371P		AE0319/ /		PLUG- (continued)				ALL
	21		W1103	507Z			34-22-35	ALL
	22		W1103	508WN	26		34-22-35	ALL
	23		W1103	508W	26		34-22-35	ALL
	24		W1103	508Z			34-22-35	ALL
	25		W1103	509WN	26		34-22-35	ALL
	26		W1103	509W	26		34-22-35	ALL
	27		W1103	509Z			34-22-35	ALL
	28		W1103	510WN	26		34-22-35	ALL
	29		W1103	510W	26		34-22-35	ALL
	30		W1103	510Z			34-22-35	ALL
	31		W1103	511WN	26		34-22-35	ALL
	32		W1103	511W	26		34-22-35	ALL
	33		W1103	511Z			34-22-35	ALL
	34		W1103	512WN	26		34-22-35	ALL
	35		W1103	512W	26		34-22-35	ALL
	36		W1103	512Z			34-22-35	ALL
	37		W1103	513WN	26		34-22-35	ALL
	38		W1103	513W	26		34-22-35	ALL
	39		W1103	513Z			34-22-35	ALL
	40		W1103	514WN	26		34-22-35	ALL
	41		W1103	514W	26		34-22-35	ALL
	42		W1103	514Z			34-22-35	ALL
	43		W1103	515WN	26		34-22-35	ALL
	44		W1103	515W	26		34-22-35	ALL
	45		W1103	515Z			34-22-35	ALL
	46		W1103	516WN	26		34-22-35	ALL
	47		W1103	516W	26		34-22-35	ALL
	48		W1103	516Z			34-22-35	ALL
	49		W1103	517WN	26		34-22-35	ALL
	50		W1103	517W	26		34-22-35	ALL
	51		W1103	517Z			34-22-35	ALL
	52		W1103	518WN	26		34-22-35	ALL
	53		W1103	518W	26		34-22-35	ALL
	54		W1103	518Z			34-22-35	ALL
	55	UNUSED						ALL
D04373J		AE0306/ /		RCPT-E2-2				ALL
	1		W0487	201R	22		34-51-11	ALL
	2		W0487	201B	22		34-51-11	ALL
	3		W0487	021	22		SPARE	ALL

HOOKUP LIST
D280T132

91-21-51
Section D04300
Page 78
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04373J		AE0306/ /		RCPT-E2-2 (continued)				ALL
	4		W0487	022	22		SPARE	ALL
	5		W0487	023	22		SPARE	ALL
	6		W0487	006	22		34-51-11	ALL
	7		W0487	017	24		34-55-11	ALL
	8		W0487	202R	24		34-51-11	ALL
	9	UNUSED						ALL
	10		W0487	203R	24		34-51-11	ALL
	11	UNUSED						ALL
	12		W0487	301Y	24		23-51-12	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16		W0487	205R	24		34-55-11	ALL
	17	UNUSED						ALL
	18		W0487	204R	24		34-51-11	ALL
	19	UNUSED						ALL
	20		W0487	202Z			34-51-11	ALL
	21		W0487	202B	24		34-51-11	ALL
	22		W0487	203B	24		34-51-11	ALL
	23		W0487	203Z			34-51-11	ALL
	24		W0487	301R	24		23-51-12	ALL
	25		W0487	301B	24		23-51-12	ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28		W0487	205Z			34-55-11	ALL
	29		W0487	205B	24		34-55-11	ALL
	30		W0487	204Z			34-51-11	ALL
	31		W0487	204B	24		34-51-11	ALL
			W0487	301	20		23-51-12	ALL
			W0487	301Z			23-51-12	ALL
D04373P		AE0306/ /		PLUG-E2-2				ALL
	1		W0133	263R	22		34-51-11	ALL
	2		W0133	263B	22		34-51-11	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W0133	056	22		34-51-11	ALL
	7		W0133	093	24		34-55-11	ALL
	8		W0133	269R	24		34-51-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04300

Page 79

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04373P		AE0306/ /		PLUG-E2-2 (continued)				ALL
	9	UNUSED						ALL
	10		W0133	268R	24		34-51-11	ALL
	11	UNUSED						ALL
	12		W0133	301Y	24		23-51-12	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16		W0133	290R	24		34-55-11	ALL
	17	UNUSED						ALL
	18		W0133	262R	24		34-51-11	ALL
	19	UNUSED						ALL
	20		W0133	269Z			34-51-11	ALL
	21		W0133	269B	24		34-51-11	ALL
	22		W0133	268B	24		34-51-11	ALL
	23		W0133	268Z			34-51-11	ALL
	24		W0133	301R	24		23-51-12	ALL
	25		W0133	301B	24		23-51-12	ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28		W0133	290Z			34-55-11	ALL
	29		W0133	290B	24		34-55-11	ALL
	30		W0133	262Z			34-51-11	ALL
	31		W0133	262B	24		34-51-11	ALL
D04377J		AE0320/ /		RCPT-E2-3				ALL
	1		W0489	201R	22		34-51-21	ALL
	2		W0489	201B	22		34-51-21	ALL
	3		W0489	021	22		SPARE	ALL
	4		W0489	022	22		SPARE	ALL
	5		W0489	023	22		SPARE	ALL
	6		W0489	006	22		34-51-21	ALL
	7		W0489	019	24		34-55-21	ALL
	8		W0489	202R	24		34-51-21	ALL
	9	UNUSED						ALL
	10		W0489	203R	24		34-51-21	ALL
	11	UNUSED						ALL
	12		W0489	301Y	24		23-51-12	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D04300

Page 80

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04377J		AE0320/ /		RCPT-E2-3 (continued)				ALL
	16		W0489	205R	24		34-55-21	ALL
	17	UNUSED						ALL
	18		W0489	204R	24		34-51-21	ALL
	19	UNUSED						ALL
	20		W0489	202Z			34-51-21	ALL
	21		W0489	202B	24		34-51-21	ALL
	22		W0489	203B	24		34-51-21	ALL
	23		W0489	203Z			34-51-21	ALL
	24		W0489	301R	24		23-51-12	ALL
	25		W0489	301B	24		23-51-12	ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28		W0489	205Z			34-55-21	ALL
	29		W0489	205B	24		34-55-21	ALL
	30		W0489	204Z			34-51-21	ALL
	31		W0489	204B	24		34-51-21	ALL
			W0489	301	20		23-51-12	ALL
			W0489	301Z			23-51-12	ALL
D04377P		AE0320/ /		PLUG-E2-3				ALL
	1		W0145	263R	22		34-51-21	ALL
	2		W0145	263B	22		34-51-21	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W0145	056	22		34-51-21	ALL
	7		W0145	091	24		34-55-21	ALL
	8		W0145	269R	24		34-51-21	ALL
	9	UNUSED						ALL
	10		W0145	268R	24		34-51-21	ALL
	11	UNUSED						ALL
	12		W0145	301Y	24		23-51-12	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16		W0145	290R	24		34-55-21	ALL
	17	UNUSED						ALL
	18		W0145	262R	24		34-51-21	ALL
	19	UNUSED						ALL
	20		W0145	269Z			34-51-21	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04300

Page 81

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04377P		AE0320/ /		PLUG-E2-3 (continued)				ALL
	21		W0145	269B	24		34-51-21	ALL
	22		W0145	268B	24		34-51-21	ALL
	23		W0145	268Z			34-51-21	ALL
	24		W0145	301R	24		23-51-12	ALL
	25		W0145	301B	24		23-51-12	ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28		W0145	290Z			34-55-21	ALL
	29		W0145	290B	24		34-55-21	ALL
	30		W0145	262Z			34-51-21	ALL
	31		W0145	262B	24		34-51-21	ALL
D04378J		AW0404/ /		RCPT-R WING OUTBD RIB SEAL				ALL
	1		W0480	006	18		27-88-22	ALL
	2		W0480	06TR	20		27-88-22	ALL
	3		W0480	004	18		27-88-22	ALL
	4		W0480	04TR	20		27-88-22	ALL
	5		W0480	007	18		27-88-22	ALL
	6		W0480	07TR	20		27-88-22	ALL
	7		W0480	008	18		27-88-22	ALL
	8		W0480	08TR	20		27-88-22	ALL
	9		W0480	005	18		27-88-22	ALL
	10		W0480	05TR	20		27-88-22	ALL
	11		W0480	009	18		27-88-22	ALL
	12		W0480	09TR	20		27-88-22	ALL
	13		W0480	010	18		27-88-22	ALL
	14		W0480	10TR	20		27-88-22	ALL
	15		W0480	001	18		27-88-22	ALL
	16		W0480	01TR	20		27-88-22	ALL
	17		W0480	002	18		27-88-22	ALL
	18		W0480	02TR	20		27-88-22	ALL
	19		W0480	216B	18		27-89-11	ALL
	20		W0480	216R	18		27-89-11	ALL
	21		W0480	003	18		27-88-22	ALL
	22		W0480	03TR	20		27-88-22	ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D04300

Page 82

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04378J		AW0404/ /		RCPT-R WING OUTBD RIB SEAL (continued)				ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
D04378P		AW0404/ /		PLUG-R WING OUTBD RIB SEAL				ALL
	1		W0442	201B	20		27-88-22	ALL
	2		W0442	201R	20		27-88-22	ALL
	3		W0442	212B	20		27-88-22	ALL
	4		W0442	212R	20		27-88-22	ALL
	5		W0442	203B	20		27-88-22	ALL
	6		W0442	203R	20		27-88-22	ALL
	7		W0442	204B	20		27-88-22	ALL
	8		W0442	204R	20		27-88-22	ALL
	9		W0442	214B	20		27-88-22	ALL
	10		W0442	214R	20		27-88-22	ALL
	11		W0442	206B	20		27-88-22	ALL
	12		W0442	206R	20		27-88-22	ALL
	13		W0442	207B	20		27-88-22	ALL
	14		W0442	207R	20		27-88-22	ALL
	15		W0442	208B	20		27-88-22	ALL
	16		W0442	208R	20		27-88-22	ALL
	17		W0442	209B	20		27-88-22	ALL
	18		W0442	209R	20		27-88-22	ALL
	19		W0442	223B	18		27-89-11	ALL
	20		W0442	223R	18		27-89-11	ALL
	21		W0442	211B	20		27-88-22	ALL
	22		W0442	211R	20		27-88-22	ALL
	23		W0442	220B	20		SPARE	ALL
	24		W0442	220R	20		SPARE	ALL
	25		W0442	221B	20		SPARE	ALL
	26		W0442	221R	20		SPARE	ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
D04379J		AE0305/ /		RCPT-E1-3 AFDS-L				ALL
	1		W0491	001	22		22-11-12	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D04300

Page 83

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04379J		AE0305/ /		RCPT-E1-3 AFDS-L (continued)				ALL
	4	UNUSED						050-099, 150-156, 162-166, 275-276
	4		W0491	307Y	24		27-48-11	157, 167-199, 277-299
	5		W0491	201R	22		22-11-11	ALL
	6		W0491	201B	22		22-11-11	ALL
	7		W0491	202R	22		22-11-11	ALL
	8		W0491	202B	22		22-11-11	ALL
	9		W0491	204R	22		22-12-11	ALL
	10		W0491	204B	22		22-12-11	ALL
	11		W0491	302R	22		22-12-11	ALL
	12		W0491	302B	22		22-12-11	ALL
	13		W0491	302Y	22		22-12-11	ALL
	14		W0491	303R	22		22-12-11	ALL
	15		W0491	303B	22		22-12-11	ALL
	16		W0491	303Y	22		22-12-11	ALL
	17		W0491	205R	22		22-13-11	ALL
	18		W0491	205B	22		22-13-11	ALL
	19		W0491	304R	22		22-13-11	ALL
	20		W0491	304B	22		22-13-11	ALL
	21		W0491	304Y	22		22-13-11	ALL
	22		W0491	305R	22		22-13-11	ALL
	23		W0491	305B	22		22-13-11	ALL
	24		W0491	305Y	22		22-13-11	ALL
	25	UNUSED						ALL
	26		W0491	005	20		27-41-11	ALL
	27		W0491	006	20		27-41-11	ALL
	28		W0491	007Y	22		27-41-11	ALL
	29		W0491	008Y	22		27-41-11	050-099
	29		W0491	021Y	22		SPARE	150-199, 275-299
	30	UNUSED						ALL
	31		W0491	020	20		SPARE	ALL
	32	UNUSED						ALL
	33		W0491	017Y	22		27-41-11	ALL
	34		W0491	206R	22		SPARE	ALL
	35		W0491	206B	22		SPARE	ALL
	36		W0491	016	20		SPARE	ALL
	37		W0491	003	22		22-11-12	ALL
	38		W0491	014	20		27-21-11	ALL
	39		W0491	009	20		SPARE	ALL
	40		W0491	010Y	22		27-41-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04300

Page 84

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04379J		AE0305/ /		RCPT-E1-3 AFDS-L (continued)				ALL
	41		W0491	011	24		27-48-11	050-099, 150-154, 157-164, 167-199, 275-299
	41		W0503	307Y	24		27-48-11	155-156, 166
	41		W0491	307Y	24		27-48-11	165
	42		W0503	012	24		27-48-11	050-099, 162-164
	42		W0491	012	24		27-48-11	150-154, 275-276
	42		W0503	307B	24		27-48-11	155-156, 166
	42		W0491	307B	24		27-48-11	157, 165, 167-199, 277-299
	43		W0503	013	24		27-48-11	050-099, 162-164
	43		W0491	013	24		27-48-11	150-154, 275-276
	43		W0503	307R	24		27-48-11	155-156, 166
	43		W0491	307R	24		27-48-11	157, 165, 167-199, 277-299
	44		W0491	203B	24		27-58-21	ALL
	45		W0491	203R	24		27-58-21	ALL
	46		W0491	301B	24		27-58-21	ALL
	47		W0491	301R	24		27-58-21	ALL
	48		W0491	301Y	24		27-58-21	ALL
	49		W0491	004	22		22-11-12	ALL
	50	UNUSED						ALL
	51		W0491	70N	20		29-11-14	ALL
	52		W0491	002	22		22-11-12	ALL
	53	FM	W0491	018	16		27-32-31	ALL
	54		W0491	70P	20		29-11-14	ALL
	55	FM	W0491	019	16		27-32-31	ALL
D04379P		AE0305/ /		PLUG-E1-3				ALL
	1		W0105	028	22		22-11-12	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						050-099, 150-156, 162-166, 275-276
	4		W0105	143	20		27-48-11	157, 167-199, 277-299
	5		W0105	206R	22		22-11-11	ALL
	6		W0105	206B	22		22-11-11	ALL
	7		W0105	207R	22		22-11-11	ALL
	8		W0105	207B	22		22-11-11	ALL
	9		W0105	211R	22		22-12-11	ALL
	10		W0105	211B	22		22-12-11	ALL
	11		W0105	303R	22		22-12-11	ALL
	12		W0105	303B	22		22-12-11	ALL
	13		W0105	303Y	22		22-12-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04300

Page 85

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04379P		AE0305/ /		PLUG-E1-3 (continued)				ALL
	14		W0105	302R	22		22-12-11	ALL
	15		W0105	302B	22		22-12-11	ALL
	16		W0105	302Y	22		22-12-11	ALL
	17		W0105	227R	22		22-13-11	ALL
	18		W0105	227B	22		22-13-11	ALL
	19		W0105	307R	22		22-13-11	ALL
	20		W0105	307B	22		22-13-11	ALL
	21		W0105	307Y	22		22-13-11	ALL
	22		W0105	308R	22		22-13-11	ALL
	23		W0105	308B	22		22-13-11	ALL
	24		W0105	308Y	22		22-13-11	ALL
	25	UNUSED						ALL
	26		W0105	161	20		27-41-11	ALL
	27		W0105	162	20		27-41-11	ALL
	28		W0105	167Y	22		27-41-11	ALL
	29		W0105	168Y	22		27-41-11	050-099
	29	UNUSED						150-199, 275-299
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33		W0105	616Y	22		27-41-11	ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37		W0105	034	22		22-11-12	ALL
	38		W0105	199	20		27-21-11	ALL
	39	UNUSED						ALL
	40		W0105	165Y	22		27-41-11	ALL
	41		W0105	174	24		27-48-11	ALL
	42		W0105	175	24		27-48-11	ALL
	43		W0105	176	24		27-48-11	ALL
	44		W0105	288B	24		27-58-21	ALL
	45		W0105	288R	24		27-58-21	ALL
	46		W0105	323B	24		27-58-21	ALL
	47		W0105	323R	24		27-58-21	ALL
	48		W0105	323Y	24		27-58-21	ALL
	49		W0105	035	22		22-11-12	ALL
	50	UNUSED						ALL
	51		W0105	70N	20		29-11-14	ALL
	52		W0105	029	22		22-11-12	ALL

HOOKUP LIST
D280T132

91-21-51
Section D04300
Page 86
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04379P		AE0305/ /		PLUG-E1-3 (continued)				ALL
	53	FL	W0105	610	16		27-32-31	ALL
	54		W0105	70P	20		29-11-14	ALL
	55	FL	W0105	611	16		27-32-31	ALL
	DED		W0105	610Z			27-32-31	ALL
	DED		W0105	611Z			27-32-31	ALL
D04380J		AW0404/ /		RCPT-R WING FS/OUTBD RIB SEAL				ALL
	1		W0470	005	18		30-11-11	ALL
	2	UNUSED						050-099, 150-154
	2		W0470	213B	18		SPARE	155-199
	2		W0470	213B	18		30-11-11	275-299
	3	UNUSED						050-099, 150-154
	3		W0470	213R	18		SPARE	155-199
	3		W0470	213R	18		30-11-11	275-299
	4		W0470	001	18		33-43-11	ALL
	5	UNUSED						ALL
	6		W0470	211B	18		33-44-21	ALL
	7	UNUSED						ALL
D04380P		AW0404/ /		PLUG-R WING FS/OUTBD RIB SEAL				ALL
	1		W0418	028	20		30-11-11	ALL
	2	UNUSED						050-099
	2		W0418	027	20		SPARE	150-199
	2		W0418	027	20		30-11-11	275-299
	3	UNUSED						050-099
	3		W0418	032	20		SPARE	150-199
	3		W0418	032	20		30-11-11	275-299
	4		W0418	029	20		33-43-11	ALL
	5	UNUSED						ALL
	6		W0418	031	18		33-44-21	ALL
	7		W0418	801	20		SPARE	ALL
D04381J		AE0307/ /		RCPT-E1-4				ALL
	1		W0501	001	22		22-11-32	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W0501	201R	22		22-11-31	ALL
	6		W0501	201B	22		22-11-31	ALL
	7		W0501	202R	22		22-11-31	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04300

Page 87

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04381J		AE0307/ /		RCPT-E1-4 (continued)				ALL
	8		W0501	202B	22		22-11-31	ALL
	9		W0501	204R	22		22-12-31	ALL
	10		W0501	204B	22		22-12-31	ALL
	11		W0501	302R	22		22-12-31	ALL
	12		W0501	302B	22		22-12-31	ALL
	13		W0501	302Y	22		22-12-31	ALL
	14		W0501	303R	22		22-12-31	ALL
	15		W0501	303B	22		22-12-31	ALL
	16		W0501	303Y	22		22-12-31	ALL
	17		W0501	205R	22		22-13-31	ALL
	18		W0501	205B	22		22-13-31	ALL
	19		W0501	304R	22		22-13-31	ALL
	20		W0501	304B	22		22-13-31	ALL
	21		W0501	304Y	22		22-13-31	ALL
	22		W0501	305R	22		22-13-31	ALL
	23		W0501	305B	22		22-13-31	ALL
	24		W0501	305Y	22		22-13-31	ALL
	25		W0501	206R	22		SPARE	ALL
	26		W0501	206B	22		SPARE	ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29		W0501	009	22		SPARE	ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32		W0501	002	22		22-11-32	ALL
	33		W0501	013	22		SPARE	ALL
	34		W0501	207R	22		SPARE	ALL
	35		W0501	207B	22		SPARE	ALL
	36	UNUSED						ALL
	37		W0501	003	22		22-11-32	ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40		W0501	004	22		22-11-32	ALL
	41	UNUSED						ALL
D04381P		AE0307/ /		PLUG-E1-4				ALL
	1		W0127	028	22		22-11-32	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D04300
Page 88
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04381P		AE0307/ /		PLUG-E1-4 (continued)				ALL
	5		W0127	206R	22		22-11-31	ALL
	6		W0127	206B	22		22-11-31	ALL
	7		W0127	207R	22		22-11-31	ALL
	8		W0127	207B	22		22-11-31	ALL
	9		W0127	211R	22		22-12-31	ALL
	10		W0127	211B	22		22-12-31	ALL
	11		W0127	303R	22		22-12-31	ALL
	12		W0127	303B	22		22-12-31	ALL
	13		W0127	303Y	22		22-12-31	ALL
	14		W0127	302R	22		22-12-31	ALL
	15		W0127	302B	22		22-12-31	ALL
	16		W0127	302Y	22		22-12-31	ALL
	17		W0127	227R	22		22-13-31	ALL
	18		W0127	227B	22		22-13-31	ALL
	19		W0127	307R	22		22-13-31	ALL
	20		W0127	307B	22		22-13-31	ALL
	21		W0127	307Y	22		22-13-31	ALL
	22		W0127	308R	22		22-13-31	ALL
	23		W0127	308B	22		22-13-31	ALL
	24		W0127	308Y	22		22-13-31	ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32		W0127	029	22		22-11-32	ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37		W0127	034	22		22-11-32	ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40		W0127	035	22		22-11-32	ALL
	41	UNUSED						ALL
D04383J		AE0305/ /		RCPT-E1-3				ALL
	1		W0495	201R	20		22-11-11	ALL

HOOKUP LIST
D280T132



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04383J		AE0305/ /		RCPT-E1-3 (continued)				ALL
	2		W0495	201B	20		22-11-11	ALL
	3		W0495	202R	20		22-13-11	ALL
	4		W0495	202B	20		22-13-11	ALL
	5		W0495	301R	20		22-13-11	ALL
	6		W0495	301B	20		22-13-11	ALL
	7		W0495	301Y	20		22-13-11	ALL
	8		W0495	302R	20		22-13-11	ALL
	9		W0495	302B	20		22-13-11	ALL
	10		W0495	302Y	20		22-13-11	ALL
	11		W0495	001	20		22-11-12	ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14		W0495	002	20		22-11-12	ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
D04383P		AE0305/ /		PLUG-E1-3				ALL
	1		W0105	205R	22		22-11-11	ALL
	2		W0105	205B	22		22-11-11	ALL
	3		W0105	226R	22		22-13-11	ALL
	4		W0105	226B	22		22-13-11	ALL
	5		W0105	305R	22		22-13-11	ALL
	6		W0105	305B	22		22-13-11	ALL
	7		W0105	305Y	22		22-13-11	ALL
	8		W0105	306R	22		22-13-11	ALL

HOOKUP LIST
D280T132

91-21-51
Section D04300
Page 90
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04383P		AE0305/ /		PLUG-E1-3 (continued)				ALL
	9		W0105	306B	22		22-13-11	ALL
	10		W0105	306Y	22		22-13-11	ALL
	11		W0105	027	22		22-11-12	ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14		W0105	026	22		22-11-12	ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
D04385J		AE0317/ /		RCPT-E1-5				ALL
	1		W0503	001	22		22-11-22	ALL
	2		W0503	206R	22		SPARE	ALL
	3	UNUSED						ALL
	4	UNUSED						050-099, 150-156, 162-166, 275-276
	4		W0503	307Y	24		27-48-11	157, 167-199, 277-299
	5		W0503	201R	22		22-11-21	ALL
	6		W0503	201B	22		22-11-21	ALL
	7		W0503	202R	22		22-11-21	ALL
	8		W0503	202B	22		22-11-21	ALL
	9		W0503	204R	22		22-12-21	ALL
	10		W0503	204B	22		22-12-21	ALL
	11		W0503	302R	22		22-12-21	ALL
	12		W0503	302B	22		22-12-21	ALL
	13		W0503	302Y	22		22-12-21	ALL
	14		W0503	303R	22		22-12-21	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04300

Page 91

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04385J		AE0317/ /		RCPT-E1-5 (continued)				ALL
	15		W0503	303B	22		22-12-21	ALL
	16		W0503	303Y	22		22-12-21	ALL
	17		W0503	205R	22		22-13-21	ALL
	18		W0503	205B	22		22-13-21	ALL
	19		W0503	304R	22		22-13-21	ALL
	20		W0503	304B	22		22-13-21	ALL
	21		W0503	304Y	22		22-13-21	ALL
	22		W0503	305R	22		22-13-21	ALL
	23		W0503	305B	22		22-13-21	ALL
	24		W0503	305Y	22		22-13-21	ALL
	25		W0503	002	22		22-11-22	ALL
	26		W0503	206B	22		SPARE	ALL
	27	UNUSED						ALL
	28		W0503	003	22		22-11-22	ALL
	29		W0503	019	22		SPARE	ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33		W0503	006	20		27-41-21	ALL
	34		W0503	007	20		27-41-21	ALL
	35		W0503	008Y	22		27-41-21	ALL
	36		W0503	009Y	22		27-41-21	050-099
	36		W0503	005Y	22		SPARE	150-199, 275-299
	37		W0503	010Y	22		27-41-21	ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41		W0503	011	24		27-48-11	050-099, 150-154, 157-164, 167-199, 275-299
	41		W0491	307Y	24		27-48-11	155-156, 166
	41		W0503	307Y	24		27-48-11	165
	42		W0491	012	24		27-48-11	050-099, 162-164
	42		W0503	012	24		27-48-11	150-154, 275-276
	42		W0491	307B	24		27-48-11	155-156, 166
	42		W0503	307B	24		27-48-11	157, 165, 167-199, 277-299
	43		W0491	013	24		27-48-11	050-099, 162-164
	43		W0503	013	24		27-48-11	150-154, 275-276
	43		W0491	307R	24		27-48-11	155-156, 166
	43		W0503	307R	24		27-48-11	157, 165, 167-199, 277-299
	44		W0503	203B	24		27-58-21	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04300

Page 92

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04385J		AE0317/ /		RCPT-E1-5 (continued)				ALL
	45		W0503	203R	24		27-58-21	ALL
	46		W0503	301B	24		27-58-21	ALL
	47		W0503	301R	24		27-58-21	ALL
	48		W0503	301Y	24		27-58-21	ALL
	49		W0503	004	22		22-11-22	ALL
	50	UNUSED						ALL
	51		W0503	70M	20		29-11-14	ALL
	52		W0503	70K	20		29-11-14	ALL
	53		W0503	023Y	22		27-41-21	ALL
	54		W0503	207R	22		SPARE	ALL
	55		W0503	207B	22		SPARE	ALL
D04385P		AE0317/ /		PLUG-E1-5				ALL
	1		W0119	025	22		22-11-22	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						050-099, 150-156, 162-166, 275-276
	4		W0119	143	20		27-48-11	157, 167-199, 277-299
	5		W0119	206R	22		22-11-21	ALL
	6		W0119	206B	22		22-11-21	ALL
	7		W0119	207R	22		22-11-21	ALL
	8		W0119	207B	22		22-11-21	ALL
	9		W0119	211R	22		22-12-21	ALL
	10		W0119	211B	22		22-12-21	ALL
	11		W0119	303R	22		22-12-21	ALL
	12		W0119	303B	22		22-12-21	ALL
	13		W0119	303Y	22		22-12-21	ALL
	14		W0119	302R	22		22-12-21	ALL
	15		W0119	302B	22		22-12-21	ALL
	16		W0119	302Y	22		22-12-21	ALL
	17		W0119	227R	22		22-13-21	ALL
	18		W0119	227B	22		22-13-21	ALL
	19		W0119	307R	22		22-13-21	ALL
	20		W0119	307B	22		22-13-21	ALL
	21		W0119	307Y	22		22-13-21	ALL
	22		W0119	308R	22		22-13-21	ALL
	23		W0119	308B	22		22-13-21	ALL
	24		W0119	308Y	22		22-13-21	ALL
	25		W0119	026	22		22-11-22	ALL
	26	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D04300

Page 93

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04385P		AE0317/ /		PLUG-E1-5 (continued)				ALL
	27	UNUSED						ALL
	28		W0119	030	22		22-11-22	ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33		W0119	161	20		27-41-21	ALL
	34		W0119	162	20		27-41-21	ALL
	35		W0119	167Y	22		27-41-21	ALL
	36		W0119	168Y	22		27-41-21	050-099
	36	UNUSED						150-199, 275-299
	37		W0119	165Y	22		27-41-21	ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41		W0119	172	24		27-48-11	ALL
	42		W0119	173	24		27-48-11	ALL
	43		W0119	174	24		27-48-11	ALL
	44		W0119	209B	24		27-58-21	ALL
	45		W0119	209R	24		27-58-21	ALL
	46		W0119	310B	24		27-58-21	ALL
	47		W0119	310R	24		27-58-21	ALL
	48		W0119	310Y	24		27-58-21	ALL
	49		W0119	031	22		22-11-22	ALL
	50	UNUSED						ALL
	51		W0119	70M	20		29-11-14	ALL
	52		W0119	70K	20		29-11-14	ALL
	53		W0119	608Y	22		27-41-21	ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
D04387J		AE0319/ /		RCPT-E1-4				ALL
	1		W1599	201WN	24		34-22-35	ALL
	2		W1599	201W	24		34-22-35	ALL
	3		W1599	201Z			34-22-35	ALL
	4		W1599	202WN	24		34-22-35	ALL
	5		W1599	202W	24		34-22-35	ALL
	6		W1599	202Z			34-22-35	ALL
	7		W1599	203WN	24		34-22-35	ALL
	8		W1599	203W	24		34-22-35	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04300

Page 94

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04387J		AE0319/ /		RCPT-E1-4 (continued)				ALL
	9		W1599	203Z			34-22-35	ALL
	10		W1599	204WN	24		34-22-35	ALL
	11		W1599	204W	24		34-22-35	ALL
	12		W1599	204Z			34-22-35	ALL
	13		W1599	205WN	24		34-22-35	ALL
	14		W1599	205W	24		34-22-35	ALL
	15		W1599	205Z			34-22-35	ALL
	16		W1599	206WN	24		34-22-35	ALL
	17		W1599	206W	24		34-22-35	ALL
	18		W1599	206Z			34-22-35	ALL
	19		W1599	207WN	24		34-22-35	ALL
	20		W1599	207W	24		34-22-35	ALL
	21		W1599	207Z			34-22-35	ALL
	22		W1599	208WN	24		34-22-35	ALL
	23		W1599	208W	24		34-22-35	ALL
	24		W1599	208Z			34-22-35	ALL
	25		W1599	209WN	24		34-22-35	ALL
	26		W1599	209W	24		34-22-35	ALL
	27		W1599	209Z			34-22-35	ALL
	28		W1599	210WN	24		34-22-35	ALL
	29		W1599	210W	24		34-22-35	ALL
	30		W1599	210Z			34-22-35	ALL
	31		W1599	211WN	24		34-22-35	ALL
	32		W1599	211W	24		34-22-35	ALL
	33		W1599	211Z			34-22-35	ALL
	34		W1599	212WN	24		34-22-35	ALL
	35		W1599	212W	24		34-22-35	ALL
	36		W1599	212Z			34-22-35	ALL
	37		W1599	213WN	24		34-22-35	ALL
	38		W1599	213W	24		34-22-35	ALL
	39		W1599	213Z			34-22-35	ALL
	40		W1599	214WN	24		34-22-35	ALL
	41		W1599	214W	24		34-22-35	ALL
	42		W1599	214Z			34-22-35	ALL
	43		W1599	215WN	24		34-22-35	ALL
	44		W1599	215W	24		34-22-35	ALL
	45		W1599	215Z			34-22-35	ALL
	46		W1599	216WN	24		34-22-35	ALL
	47		W1599	216W	24		34-22-35	ALL
	48		W1599	216Z			34-22-35	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04300

Page 95

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04387J		AE0319/ /		RCPT-E1-4 (continued)				ALL
	49		W1599	217WN	24		34-22-35	ALL
	50		W1599	217W	24		34-22-35	ALL
	51		W1599	217Z			34-22-35	ALL
	52		W1599	218WN	24		34-22-35	ALL
	53		W1599	218W	24		34-22-35	ALL
	54		W1599	218Z			34-22-35	ALL
	55	UNUSED						ALL
D04387P		AE0319/ /		PLUG-E1-4				ALL
	1		W1127	202WN	26		34-22-35	ALL
	2		W1127	202W	26		34-22-35	ALL
	3		W1127	202Z			34-22-35	ALL
	4		W1127	203WN	26		34-22-35	ALL
	5		W1127	203W	26		34-22-35	ALL
	6		W1127	203Z			34-22-35	ALL
	7		W1127	204WN	26		34-22-35	ALL
	8		W1127	204W	26		34-22-35	ALL
	9		W1127	204Z			34-22-35	ALL
	10		W1127	205WN	26		34-22-35	ALL
	11		W1127	205W	26		34-22-35	ALL
	12		W1127	205Z			34-22-35	ALL
	13		W1127	206WN	26		34-22-35	ALL
	14		W1127	206W	26		34-22-35	ALL
	15		W1127	206Z			34-22-35	ALL
	16		W1127	207WN	26		34-22-35	ALL
	17		W1127	207W	26		34-22-35	ALL
	18		W1127	207Z			34-22-35	ALL
	19		W1127	208WN	26		34-22-35	ALL
	20		W1127	208W	26		34-22-35	ALL
	21		W1127	208Z			34-22-35	ALL
	22		W1127	209WN	26		34-22-35	ALL
	23		W1127	209W	26		34-22-35	ALL
	24		W1127	209Z			34-22-35	ALL
	25		W1127	210WN	26		34-22-35	ALL
	26		W1127	210W	26		34-22-35	ALL
	27		W1127	210Z			34-22-35	ALL
	28		W1127	211WN	26		34-22-35	ALL
	29		W1127	211W	26		34-22-35	ALL
	30		W1127	211Z			34-22-35	ALL
	31		W1127	212WN	26		34-22-35	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04300

Page 96

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04387P		AE0319/ /		PLUG-E1-4 (continued)				ALL
	32		W1127	212W	26		34-22-35	ALL
	33		W1127	212Z			34-22-35	ALL
	34		W1127	213WN	26		34-22-35	ALL
	35		W1127	213W	26		34-22-35	ALL
	36		W1127	213Z			34-22-35	ALL
	37		W1127	214WN	26		34-22-35	ALL
	38		W1127	214W	26		34-22-35	ALL
	39		W1127	214Z			34-22-35	ALL
	40		W1127	215WN	26		34-22-35	ALL
	41		W1127	215W	26		34-22-35	ALL
	42		W1127	215Z			34-22-35	ALL
	43		W1127	216WN	26		34-22-35	ALL
	44		W1127	216W	26		34-22-35	ALL
	45		W1127	216Z			34-22-35	ALL
	46		W1127	217WN	26		34-22-35	ALL
	47		W1127	217W	26		34-22-35	ALL
	48		W1127	217Z			34-22-35	ALL
	49		W1127	218WN	26		34-22-35	ALL
	50		W1127	218W	26		34-22-35	ALL
	51		W1127	218Z			34-22-35	ALL
	52		W1127	219WN	26		34-22-35	ALL
	53		W1127	219W	26		34-22-35	ALL
	54		W1127	219Z			34-22-35	ALL
	55	UNUSED						ALL
D04391J		AF0120/ /		RCPT-P3				ALL
	1		W0417	201R	24		34-22-92	ALL
	2		W0417	201B	24		34-22-92	ALL
	3		W0417	FRA			34-22-92	ALL
	4		W0417	001	24		34-22-27	ALL
	5		W0417	002	24		34-22-27	ALL
	6		W0417	003	24		34-22-27	ALL
	7	UNUSED						ALL
	8		W0417	202R	24		SPARE	ALL
	9		W0417	202B	24		SPARE	ALL
	10		W0417	202Z			SPARE	ALL
	11		W0417	005	24		34-22-27	ALL
	12		W0417	025	22		34-227	ALL
	13		W0417	007	24		22-14-21	ALL
	14		W0417	008	24		22-14-21	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04300

Page 97

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04391J		AF0120/ /		RCPT-P3 (continued)				ALL
	15		W0417	009	24		22-14-21	ALL
	16		W0417	016	22		34-22-26	ALL
	17		W0417	010	22		22-14-21	ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27		W0417	206R	22		SPARE	ALL
	28		W0417	206B	22		SPARE	ALL
	29		W0417	206Z			SPARE	ALL
	30		W0417	011	24		34-22-37	ALL
	31		W0417	022	24		34-22-27	ALL
	32		W0417	301R	24		34-12-11	ALL
	33		W0417	301B	24		34-12-11	ALL
	34		W0417	301Y	24		34-12-11	ALL
	35		W0417	015	24		22-41-13	ALL
	36		W0417	018	24		22-41-13	ALL
	37		W0417	017	24		22-41-13	ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	44		W0417	024	22		34-22-27	ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D04300

Page 98

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04391J		AF0120/ /		RCPT-P3 (continued)				ALL
	55	UNUSED						ALL
			W0417	201	20		34-22-92	ALL
			W0417	201Z			34-22-92	ALL
			W0417	FRA			34-22-92	ALL
D04391P		AF0120/ /		PLUG-P3				ALL
	1		W0031	202R	24		34-22-92	ALL
	2		W0031	202B	24		34-22-92	ALL
	3		W0031	202Z			34-22-92	ALL
	4		W0031	012	24		34-22-27	ALL
	5		W0031	013	24		34-22-27	ALL
	6		W0031	015	24		34-22-27	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11		W0031	018	24		34-22-27	ALL
	12	UNUSED						ALL
	13		W0031	034	24		22-14-21	ALL
	14		W0031	028	24		22-14-21	ALL
	15		W0031	029	24		22-14-21	ALL
	16		W0031	172	22		34-22-26	ALL
	17		W0031	059	22		22-14-21	ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30		W0031	082	24		34-22-37	ALL
	31		W0031	180	22		34-22-27	ALL
	32		W0031	308R	24		34-12-11	ALL
	33		W0031	308B	24		34-12-11	ALL
	34		W0031	308Y	24		34-12-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04300

Page 99

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04391P		AF0120/ /		PLUG-P3 (continued)				ALL
	35		W0031	168	24		22-41-13	ALL
	36		W0031	169	24		22-41-13	ALL
	37		W0031	170	24		22-41-13	ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	44		W0031	649	24		34-22-27	ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
D04393J		AE0317/ /		RCPT-E1-5				ALL
	1		W0417	201R	24		34-22-92	ALL
	2		W0417	201B	24		34-22-92	ALL
	3		W0417	201Z			34-22-92	ALL
	4		W0417	001	24		34-22-27	ALL
	5		W0417	002	24		34-22-27	ALL
	6		W0417	003	24		34-22-27	ALL
	7	UNUSED						ALL
	8		W0417	202R	24		SPARE	ALL
	9		W0417	202B	24		SPARE	ALL
	10		W0417	202Z			SPARE	ALL
	11		W0417	005	24		34-22-27	ALL
	12		W0417	025	22		34-227	ALL
	13		W0417	007	24		22-14-21	ALL
	14		W0417	008	24		22-14-21	ALL
	15		W0417	009	24		22-14-21	ALL
	16		W0417	016	22		34-22-26	ALL
	17		W0417	010	22		22-14-21	ALL

HOOKUP LIST
D280T132

91-21-51
Section D04300
Page 100
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04393J		AE0317 / /		RCPT-E1-5 (continued)				ALL
	18	UNUSED						050-099, 151, 275-299
	18		W1417	919Z			23-32-21	150, 152-199
	19	UNUSED						050-099, 151, 275-299
	19		W1417	919R	22		23-32-21	150, 152-199
	20	UNUSED						050-099, 151, 275-299
	20		W1417	919B	22		23-32-21	150, 152-199
	21	UNUSED						050-099, 151, 275-299
	21		W1417	920R	22		23-32-21	150, 152-199
	22	UNUSED						050-099, 151, 275-299
	22		W1417	920B	22		23-32-21	150, 152-199
	23	UNUSED						050-099, 151, 275-299
	23		W1417	920Z			23-32-21	150, 152-199
	24	UNUSED						050-099, 151, 275-299
	24		W1417	921	20		23-32-21	150, 152-199
	25	UNUSED						050-099, 151, 275-299
	25		W1417	922	20		23-32-21	150, 152-199
	26	UNUSED						050-099, 151, 275-299
	26		W1417	923	20		23-32-21	150, 152-199
	27		W0417	206R	22		SPARE	ALL
	28		W0417	206B	22		SPARE	ALL
	29		W0417	206Z			SPARE	ALL
	30		W0417	011	24		34-22-37	ALL
	31		W0417	022	24		34-22-27	ALL
	32		W0417	301R	24		34-12-11	ALL
	33		W0417	301B	24		34-12-11	ALL
	34		W0417	301Y	24		34-12-11	ALL
	35		W0417	015	24		22-41-13	ALL
	36		W0417	018	24		22-41-13	ALL
	37		W0417	017	24		22-41-13	ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	44		W0417	024	22		34-22-27	ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D04300

Page 101

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04393J		AE0317/ /		RCPT-E1-5 (continued)				ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
D04393P		AE0317/ /		PLUG-E1-5				ALL
	1		W0119	297R	24		34-22-92	ALL
	2		W0119	297B	24		34-22-92	ALL
	3		W0119	297Z			34-22-92	ALL
	4		W0119	179	24		34-22-27	ALL
	5		W0119	180	24		34-22-27	ALL
	6		W0119	181	24		34-22-27	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11		W0119	183	24		34-22-27	ALL
	12	UNUSED						ALL
	13		W0119	068	24		22-14-21	ALL
	14		W0119	046	24		22-14-21	ALL
	15		W0119	054	24		22-14-21	ALL
	16		W0119	073	22		34-22-26	ALL
	17		W0119	052	22		22-14-21	ALL
	18	UNUSED						050-099, 151, 275-299
	18		W0119	911Z			23-32-21	150, 152-199
	19	UNUSED						050-099, 151, 275-299
	19		W0119	911R	22		23-32-21	150, 152-199
	20	UNUSED						050-099, 151, 275-299
	20		W0119	911B	22		23-32-21	150, 152-199
	21	UNUSED						050-099, 151, 275-299
	21		W0119	912R	22		23-32-21	150, 152-199
	22	UNUSED						050-099, 151, 275-299
	22		W0119	912B	22		23-32-21	150, 152-199
	23	UNUSED						050-099, 151, 275-299
	23		W0119	912Z			23-32-21	150, 152-199
	24	UNUSED						050-099, 151, 275-299
	24		W0119	913	20		23-32-21	150, 152-156, 162-199

HOOKUP LIST
D280T132

91-21-51
Section D04300
Page 102
Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04393P		AE0317/ /		PLUG-E1-5 (continued)				ALL
	24		W0117	913	20		23-32-21	157
	25	UNUSED						050-099, 151, 275-299
	25		W0119	914	22		23-32-21	150, 152-199
	26	UNUSED						050-099, 151, 275-299
	26		W0119	915	22		23-32-21	150, 152-199
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30		W0119	187	24		34-22-37	ALL
	31		W0119	123	24		34-22-27	ALL
	32		W0119	311R	24		34-12-11	ALL
	33		W0119	311B	24		34-12-11	ALL
	34		W0119	311Y	24		34-12-11	ALL
	35		W0119	080	24		22-41-13	ALL
	36		W0119	079	24		22-41-13	ALL
	37		W0119	081	24		22-41-13	ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	44		W0119	130	24		34-22-27	ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
D04397J		AP0301B/ /		RCPT-				050-099
D04397J		AP0301B/ /		RCPT				150-199
	1		W0665	105	22		23-42-11	050-099, 150-199
	2		W0665	011	24		23-34-13	050-099, 150-199
	2		W0045	271R	24		31-51-31	050-099, 155-156, 162-166

HOOKUP LIST

D280T132

91-21-51

Section D04300

Page 103

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04397J		AP0301B/ /		RCPT- (continued)				050-099
D04397J		AP0301B/ /		RCPT (continued)				150-199
	3		W0665	107	22		33-25-11	050-099, 150-199
	4		W0665	108	20		23-42-11	050-099, 150-199
	5		W0045	271B	24		31-51-31	050-099, 155-156, 162-166
	5	UNUSED						150-154, 157, 167-199
D04397P		AP0301B/ /		PLUG-				050-099
D04397P		AP0301/ /		PLUG-				150-199
	1		W0102	001	22		23-42-11	050-099, 150-199
	2		W0102	002	22		23-34-13	050-099, 150-199
	3		W0102	003	22		33-25-11	050-099, 150-199
	4		W0102	004	20		23-42-11	050-099, 150-199
	5	UNUSED						050-099, 150-199
D04398J		AC0701/ /		RCPT-L WING FS/BODY				ALL
	1		W0214	301B	18		24-21-11	ALL
	2		W0214	301R	18		24-21-11	ALL
	3		W0214	301Y	18		24-21-11	ALL
	4		W0214	047	18		24-11-11	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	DED		W0214	047Z			24-11-11	ALL
D04398P		AC0701/ /		PLUG-L WING FS/BODY				ALL
	1		W0412	301B	18		24-21-11	ALL
	2		W0412	301R	18		24-21-11	ALL
	3		W0412	301Y	18		24-21-11	ALL
	4		W0412	001	18		24-11-11	ALL
	5		W0412	005	18		SPARE	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	DED		W0412	001Z			24-11-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04300

Page 104 End

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04400J		AC0702/ /		RCPT-R WING FS/BODY				050-099, 150-154, 162-163, 275-276
D04400J		785/181/R68		RCPT-R WING FS/BODY				155-157, 164-199, 277-299
	1		W0222	301B	18		24-21-21	ALL
	2		W0222	301R	18		24-21-21	ALL
	3		W0222	301Y	18		24-21-21	ALL
	4		W0222	001	18		24-11-21	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	DED		W0222	001Z			24-11-21	ALL
D04400P		AC0702/ /		PLUG-R WING FS/BODY				050-099, 150-154, 162-163, 275-276
D04400P		785/181/R 68		PLUG-				155-157, 164-199, 277-299
	1		W0414	301B	18		24-21-21	ALL
	2		W0414	301R	18		24-21-21	ALL
	3		W0414	301Y	18		24-21-21	ALL
	4		W0414	001	18		24-11-21	ALL
	5		W0414	005	18		SPARE	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	DED		W0414	001Z			24-11-21	ALL
D04402J		AL1007/ /		RCPT-L WING RS/BODY				ALL
	1		W0756	121	20		27-13-11	ALL
	2		W0756	237B	20		27-13-11	ALL
	3		W0756	237R	20		27-13-11	ALL
	4		W0756	122	20		27-13-11	ALL
	5		W0756	125	22		27-13-11	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	DED		W0756	237Z			27-13-11	ALL
D04402P		AL1007/ /		PLUG-L WING RS/BODY				ALL
	1		W0772	001	20		27-13-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04400

Page 1

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04402P		AL1007 / /		PLUG-L WING RS/BODY (continued)				ALL
	2		W0772	002	20		27-13-11	ALL
	3		W0772	003	20		27-13-11	ALL
	4		W0772	004	20		27-13-11	ALL
	5		W0772	005	20		27-13-11	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
D04404J		AW0321 / /		RCPT-L WING/SAILBOAT				ALL
	1		W0390	201B	20		29-11-11	ALL
	2		W0390	201R	20		29-11-11	ALL
	3	UNUSED						ALL
	DED		W0390	201Z			29-11-11	ALL
D04404P		AW0321 / /		PLUG-L WING/SAILBOAT				ALL
	1		W0424	001	18		29-11-11	ALL
	2		W0424	002	18		29-11-11	ALL
	3	UNUSED						ALL
D04405J		AE0307 / /		RCPT-E1-4				ALL
	1		W1725	201R	20		22-11-31	ALL
	2		W1725	201B	20		22-11-31	ALL
	3		W1725	202R	20		22-13-31	ALL
	4		W1725	202B	20		22-13-31	ALL
	5		W1725	301R	20		22-13-31	ALL
	6		W1725	301B	20		22-13-31	ALL
	7		W1725	301Y	20		22-13-31	ALL
	8		W1725	302R	20		22-13-31	ALL
	9		W1725	302B	20		22-13-31	ALL
	10		W1725	302Y	20		22-13-31	ALL
	11		W1725	001	20		22-11-32	ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14		W1725	002	20		22-11-32	ALL

HOOKUP LIST
D280T132

91-21-51
Section D04400
Page 2
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04405J		AE0307/ /		RCPT-E1-4 (continued)				ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D04405P		AE0307/ /		PLUG-E1-4				ALL
	1		W0127	205R	22		22-11-31	ALL
	2		W0127	205B	22		22-11-31	ALL
	3		W0127	226R	22		22-13-31	ALL
	4		W0127	226B	22		22-13-31	ALL
	5		W0127	305R	22		22-13-31	ALL
	6		W0127	305B	22		22-13-31	ALL
	7		W0127	305Y	22		22-13-31	ALL
	8		W0127	306R	22		22-13-31	ALL
	9		W0127	306B	22		22-13-31	ALL
	10		W0127	306Y	22		22-13-31	ALL
	11		W0127	027	22		22-11-32	ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14		W0127	026	22		22-11-32	ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D04406J		AW0322/ /		RCPT-R WING/SAILBOAT				ALL
	1		W0394	201B	20		29-11-21	ALL
	2		W0394	201R	20		29-11-21	ALL

HOOKUP LIST
D280T132

91-21-51
Section D04400
Page 3
Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04406J		AW0322/ /		RCPT-R WING/SAILBOAT (continued)				ALL
	3	UNUSED						ALL
	DED		W0394	201Z			29-11-21	ALL
D04406P		AW0322/ /		PLUG-R WING/SAILBOAT				ALL
	1		W0426	001	18		29-11-21	ALL
	2		W0426	002	18		29-11-21	ALL
	3	UNUSED						ALL
D04408J		AL1003/ /		RCPT-				ALL
	1	FO	W0578	078	14		28-22-11	ALL
	2	FO	W0578	079	14		28-22-11	ALL
	3	FO	W0578	080	14		28-22-11	ALL
	4		W0578	072	18		SPARE	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
D04408P		AL1003/ /		PLUG-L WING RS/BODY				ALL
	1		W0444	301B	18		28-22-11	ALL
	2		W0444	301R	18		28-22-11	ALL
	3		W0444	301Y	18		28-22-11	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D04400
Page 4
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04409J		AE0319/ /		RCPT-E1-4				ALL
	1		W0483	004	22		22-11-32	ALL
	2		W0483	005	22		22-11-32	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W0483	001	22		34-31-31	ALL
	6		W0483	202R	24		34-31-31	ALL
	7		W0483	202B	24		34-31-31	ALL
	8		W0483	201B	22		34-31-31	ALL
	9		W0483	201R	22		34-31-31	ALL
	10		W0483	012	24		SPARE	ALL
	11		W0483	003	22		34-31-31	ALL
	12		W0483	202Z			34-31-31	ALL
	13		W0483	007	22		22-12-31	ALL
	14		W0483	008	22		22-12-31	ALL
	15		W0483	009	22		22-12-31	ALL
D04409P		AE0319/ /		PLUG-E1-4				ALL
	1		W0127	015	22		22-11-32	ALL
	2		W0127	019	20		22-11-32	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W0127	107	22		34-31-31	ALL
	6		W0127	255R	24		34-31-31	ALL
	7		W0127	255B	24		34-31-31	ALL
	8		W0127	254B	22		34-31-31	ALL
	9		W0127	254R	22		34-31-31	ALL
	10	UNUSED						ALL
	11		W0127	108	22		34-31-31	ALL
	12		W0127	255Z			34-31-31	ALL
	13		W0127	039	22		22-12-31	ALL
	14		W0127	040	20		22-12-31	ALL
	15		W0127	041	22		22-12-31	ALL
D04410J		AL1004/ /		RCPT-				ALL
	1	FO	W0580	138	14		28-22-11	ALL
	2	FO	W0580	139	14		28-22-11	ALL
	3	FO	W0580	140	14		28-22-11	ALL
	4	UNUSED						050-099, 155-199, 276-299
	4		W0580	131	18		SPARE	150-154, 275

HOOKUP LIST

D280T132

91-21-51

Section D04400

Page 5

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04410J		AL1004/ /		RCPT- (continued)				ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
D04410P		AL1004/ /		PLUG-R WING RS/BODY				ALL
	1		W0478	302B	18		28-22-11	ALL
	2		W0478	302R	18		28-22-11	ALL
	3		W0478	302Y	18		28-22-11	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
D04412J		AE0224/ /		RCPT-P37				ALL
	1		W1118	016	22		27-81-11	ALL
	2		W1118	017	22		27-81-11	ALL
	3		W1118	018	22		27-81-11	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
D04412P		AE0224/ /		PLUG-P37				ALL
	1		W0206	022	22		27-81-11	ALL
	2		W0206	023	22		27-81-11	ALL
	3		W0206	024	22		27-81-11	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W0206	036	18		SPARE	ALL
	7		W0206	035	18		SPARE	ALL
D04414J		AL1001/ /		RCPT-				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W0942	209B	24		28-41-21	ALL
	4		W0942	209R	24		28-41-21	ALL
	5		W0942	210B	24		28-41-21	ALL
	6		W0942	210R	24		28-41-21	ALL
	7		W0942	032	22		28-41-21	ALL
	8		W0942	108	20		27-13-11	ALL

HOOKUP LIST
D280T132

91-21-51
Section D04400
Page 6
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04414J		AL1001/ /		RCPT- (continued)				ALL
	9		W0942	109	20		27-13-11	ALL
	10		W0942	110	22		27-13-11	ALL
	11		W0942	124	22		SPARE	ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	DED		W0942	032Z			28-41-21	ALL
D04414P		AL1001/ /		PLUG-L WING RS/BODY				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W0446	213B	20		28-41-21	ALL
	4		W0446	213R	20		28-41-21	ALL
	5		W0446	214B	20		28-41-21	ALL
	6		W0446	214R	20		28-41-21	ALL
	7		W0446	065	20		28-41-21	ALL
	8		W0446	302R	20		27-13-11	ALL
	9		W0446	302B	20		27-13-11	ALL
	10		W0446	302Y	20		27-13-11	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
			W0446	065Z			28-41-21	ALL
			W0446	213Z			28-41-21	ALL
			W0446	214Z			28-41-21	ALL
			W0446	FRA			28-41-21	ALL
D04415J		AC0604/ /		RCPT-E5-1				ALL
	1		W0511	202Z			34-33-11	ALL
	2		W0511	202R	24		34-33-11	ALL
	3		W0511	202B	24		34-33-11	ALL
	4		W0511	003	24		34-33-21	ALL
	5		W0511	002	24		34-33-11	ALL
	6		W0511	001	24		22-12-11	ALL
	7		W0511	201R	24		22-12-11	ALL
	8		W0511	201B	24		22-12-11	ALL
	9		W0511	201Z			22-12-11	ALL
	10		W0511	004	24		34-33-31	ALL
	11		W0511	005	24		34-57-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04400

Page 7

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04415J		AC0604/ /		RCPT-E5-1 (continued)				ALL
	12		W0511	006	22		SPARE	ALL
	13		W0511	007	22		SPARE	ALL
	14		W0511	008	22		SPARE	ALL
	15		W0511	009	22		SPARE	ALL
	16		W0511	203R	24		34-22-18	ALL
	17		W0511	203B	24		34-22-18	ALL
	18		W0511	203Z			34-22-18	ALL
	19		W0511	204R	24		34-22-28	ALL
	20		W0511	204B	24		34-22-28	ALL
	21		W0511	204Z			34-22-28	ALL
	22		W0511	010	22		SPARE	050-099
	22	UNUSED						150-199, 275-299
	23		W0511	011	24		SPARE	050-099
	23	UNUSED						150-199, 275-299
	24	UNUSED						ALL
D04415P		AC0604/ /		PLUG-E5-1				ALL
	1		W0165	201Z			34-33-11	ALL
	2		W0165	201R	24		34-33-11	ALL
	3		W0165	201B	24		34-33-11	ALL
	4		W0165	010	24		34-33-21	ALL
	5		W0165	007	24		34-33-11	ALL
	6		W0165	006	24		22-12-11	ALL
	7		W0165	202R	24		22-12-11	ALL
	8		W0165	202B	24		22-12-11	ALL
	9		W0165	202Z			22-12-11	ALL
	10		W0165	015	24		34-33-31	ALL
	11		W0165	027	24		34-57-11	ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16		W0165	228R	24		34-22-18	ALL
	17		W0165	228B	24		34-22-18	ALL
	18		W0165	228Z			34-22-18	ALL
	19		W0165	229R	24		34-22-28	ALL
	20		W0165	229B	24		34-22-28	ALL
	21		W0165	229Z			34-22-28	ALL
	22	UNUSED						ALL
	23	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D04400

Page 8

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04415P		AC0604/ /		PLUG-E5-1 (continued)				ALL
	24	UNUSED						ALL
D04416J		AL1002/ /		RCPT-R WING RS/BODY				ALL
	1		W0752	201B	22		27-51-41	ALL
	2		W0752	201R	22		27-51-41	ALL
	3		W0752	401B	22		27-51-41	ALL
	4		W0752	401R	22		27-51-41	ALL
	5		W0752	401Y	22		27-51-41	ALL
	6		W0752	401G	22		27-51-41	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
D04416P		AL1002/ /		PLUG-R WING RS/BODY				ALL
	1		W0464	201B	20		27-51-41	ALL
	2		W0464	201R	20		27-51-41	ALL
	3		W0464	401B	20		27-51-41	ALL
	4		W0464	401R	20		27-51-41	ALL
	5		W0464	401Y	20		27-51-41	ALL
	6		W0464	401G	20		27-51-41	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D04400
Page 9
Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04416P		AL1002/ /		PLUG-R WING RS/BODY (continued)				ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
D04417J		AE0305/ /		RCPT-E1-3				ALL
	1		W0511	202Z			34-33-11	ALL
	2		W0511	202R	24		34-33-11	ALL
	3		W0511	202B	24		34-33-11	ALL
	4		W0511	003	24		34-33-21	ALL
	5		W0511	002	24		34-33-11	ALL
	6		W0511	001	24		22-12-11	ALL
	7		W0511	201R	24		22-12-11	ALL
	8		W0511	201B	24		22-12-11	ALL
	9		W0511	201Z			22-12-11	ALL
	10		W0511	004	24		34-33-31	ALL
	11		W0511	005	24		34-57-11	ALL
	12		W0511	006	22		SPARE	ALL
	13		W0511	007	22		SPARE	ALL
	14		W0511	008	22		SPARE	ALL
	15		W0511	009	22		SPARE	ALL
	16		W0511	203R	24		34-22-18	ALL
	17		W0511	203B	24		34-22-18	ALL
	18		W0511	203Z			34-22-18	ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D04417P		AE0305/ /		PLUG-E1-3				ALL
	1		W0105	290Z			34-33-11	ALL
	2		W0105	290R	24		34-33-11	ALL
	3		W0105	290B	24		34-33-11	ALL
	4		W0105	183	24		34-33-21	ALL
	5		W0105	182	24		34-33-11	ALL
	6		W0105	043	24		22-12-11	ALL
	7		W0105	212R	24		22-12-11	ALL
	8		W0105	212B	24		22-12-11	ALL
	9		W0105	212Z			22-12-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04400

Page 10

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04417P		AE0305/ /		PLUG-E1-3 (continued)				ALL
	10		W0105	184	24		34-33-31	ALL
	11		W0105	111	24		34-57-11	ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16		W0105	269R	24		34-22-18	ALL
	17		W0105	269B	24		34-22-18	ALL
	18		W0105	269Z			34-22-18	ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D04418J		AL1002/ /		RCPT-				ALL
	1		W0738	203B	24		28-41-23	ALL
	2		W0738	203R	24		28-41-23	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W0738	033	22		28-41-23	ALL
	6		W0738	201B	24		28-41-22	ALL
	7		W0738	201R	24		28-41-22	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10		W0738	032	22		28-41-22	ALL
	11		W0738	215B	24		28-41-22	ALL
	12		W0738	215R	24		28-41-22	ALL
	13		W0738	216B	24		28-41-23	ALL
	14		W0738	216R	24		28-41-23	ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
D04418P		AL1002/ /		PLUG-R WING RS/BODY				ALL
	1		W0448	207B	20		28-41-23	ALL
	2		W0448	207R	20		28-41-23	ALL

HOOKUP LIST
D280T132



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04418P		AL1002/ /		PLUG-R WING RS/BODY (continued)				ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W0448	049	20		28-41-23	ALL
	6		W0448	205B	20		28-41-22	ALL
	7		W0448	205R	20		28-41-22	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10		W0448	048	20		28-41-22	ALL
	11		W0448	204B	20		28-41-22	ALL
	12		W0448	204R	20		28-41-22	ALL
	13		W0448	206B	20		28-41-23	ALL
	14		W0448	206R	20		28-41-23	ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
			W0448	048Z			28-41-22	ALL
			W0448	049Z			28-41-23	ALL
			W0448	204Z			28-41-22	ALL
			W0448	205Z			28-41-22	ALL
			W0448	206Z			28-41-23	ALL
			W0448	207Z			28-41-23	ALL
			W0448	FRA			28-41-22	ALL
			W0448	FRC			28-41-23	ALL
D04419J		AC0604/ /		RCPT-E5-1				ALL
	1		W0513	202Z			34-22-39	ALL
	2		W0513	202R	24		34-22-39	ALL
	3		W0513	202B	24		34-22-39	ALL
	4		W0513	002	22		SPARE	ALL
	5		W0513	005	24		34-33-31	ALL
	6		W0513	001	24		22-12-31	ALL
	7		W0513	201R	24		22-12-31	ALL
	8		W0513	201B	24		22-12-31	ALL
	9		W0513	201Z			22-12-31	ALL
	10		W0513	003	22		SPARE	ALL
	11		W0513	004	22		SPARE	ALL
	12		W0513	006	22		SPARE	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04400

Page 12

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04419P		AC0604/ /		PLUG-E5-1				ALL
	1		W0185	201Z			34-22-39	ALL
	2		W0185	201R	24		34-22-39	ALL
	3		W0185	201B	24		34-22-39	ALL
	4	UNUSED						ALL
	5		W0185	010	24		34-33-31	ALL
	6		W0185	006	24		22-12-31	ALL
	7		W0185	202R	24		22-12-31	ALL
	8		W0185	202B	24		22-12-31	ALL
	9		W0185	202Z			22-12-31	ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D04420J		AC0701/ /		RCPT-L WING FS/BODY				ALL
	1		W0274	001	18		27-81-21	ALL
	2		W0274	002	18		27-81-21	ALL
	3		W0274	003	18		27-81-21	ALL
	4		W0274	004	18		27-81-21	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
D04420P		AC0701/ /		PLUG-L WING FS/BODY				ALL
	1		W0466	001	18		27-81-21	ALL
	2		W0466	002	18		27-81-21	ALL
	3		W0466	003	18		27-81-21	ALL
	4		W0466	004	18		27-81-21	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
D04421J		AE0307/ /		RCPT-E1-4				ALL
	1		W0513	202Z			34-22-39	ALL
	2		W0513	202R	24		34-22-39	ALL
	3		W0513	202B	24		34-22-39	ALL
	4		W0513	002	22		SPARE	ALL
	5		W0513	005	24		34-33-31	ALL
	6		W0513	001	24		22-12-31	ALL
	7		W0513	201R	24		22-12-31	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04400

Page 13

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04421J		AE0307/ /		RCPT-E1-4 (continued)				ALL
	8		W0513	201B	24		22-12-31	ALL
	9		W0513	201Z			22-12-31	ALL
	10		W0513	003	22		SPARE	ALL
	11		W0513	004	22		SPARE	ALL
	12		W0513	006	22		SPARE	ALL
D04421P		AE0307/ /		PLUG-E1-4				ALL
	1		W0127	283Z			34-22-39	ALL
	2		W0127	283R	24		34-22-39	ALL
	3		W0127	283B	24		34-22-39	ALL
	4	UNUSED						ALL
	5		W0127	109	24		34-33-31	ALL
	6		W0127	047	24		22-12-31	ALL
	7		W0127	212R	24		22-12-31	ALL
	8		W0127	212B	24		22-12-31	ALL
	9		W0127	212Z			22-12-31	ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D04422J		AC0702/ /		RCPT-R WING FS/BODY				ALL
	1		W0206	022	22		27-81-11	ALL
	2		W0206	023	22		27-81-11	ALL
	3		W0206	024	22		27-81-11	ALL
	4		W0206	025	18		27-81-11	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W0206	035	18		SPARE	ALL
D04422P		AC0702/ /		PLUG-R WING FS/BODY				ALL
	1		W0474	001	20		27-81-11	ALL
	2		W0474	002	20		27-81-11	ALL
	3		W0474	003	20		27-81-11	ALL
	4		W0474	004	18		27-81-11	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
D04423J		AC0604/ /		RCPT-E5-1				ALL
	1		W0515	202Z			34-33-21	ALL

HOOKUP LIST
D280T132

91-21-51
Section D04400
Page 14
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04423J		AC0604/ /		RCPT-E5-1 (continued)				ALL
	2		W0515	202R	24		34-33-21	ALL
	3		W0515	202B	24		34-33-21	ALL
	4		W0515	004	24		34-33-21	ALL
	5		W0515	005	24		SPARE	ALL
	6		W0515	001	24		22-12-21	ALL
	7		W0515	201R	24		22-12-21	ALL
	8		W0515	201B	24		22-12-21	ALL
	9		W0515	201Z			22-12-21	ALL
	10		W0515	010	24		SPARE	ALL
	11		W0515	205R	24		31-35-13	ALL
	12		W0515	205B	24		31-35-13	ALL
	13		W0515	205Z			31-35-13	ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16		W0515	204R	24		34-22-18	ALL
	17		W0515	204B	24		34-22-18	ALL
	18		W0515	204Z			34-22-18	ALL
	19		W0515	203R	24		34-22-28	ALL
	20		W0515	203B	24		34-22-28	ALL
	21		W0515	203Z			34-22-28	ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D04423P		AC0604/ /		PLUG-E5-1				ALL
	1		W0175	201Z			34-33-21	ALL
	2		W0175	201R	24		34-33-21	ALL
	3		W0175	201B	24		34-33-21	ALL
	4		W0175	010	24		34-33-21	ALL
	5	UNUSED						ALL
	6		W0175	006	24		22-12-21	ALL
	7		W0175	202R	24		22-12-21	ALL
	8		W0175	202B	24		22-12-21	ALL
	9		W0175	202Z			22-12-21	ALL
	10	UNUSED						ALL
	11		W0175	209R	24		31-35-13	ALL
	12		W0175	209B	24		31-35-13	ALL
	13		W0175	209Z			31-35-13	ALL
	14	UNUSED						ALL
	15	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D04400

Page 15

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04423P		AC0604/ /		PLUG-E5-1 (continued)				ALL
	16		W0175	229R	24		34-22-18	ALL
	17		W0175	229B	24		34-22-18	ALL
	18		W0175	229Z			34-22-18	ALL
	19		W0175	228R	24		34-22-28	ALL
	20		W0175	228B	24		34-22-28	ALL
	21		W0175	228Z			34-22-28	ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D04426J		AW0902/ /		RCPT-RH WING TIP ASSY				ALL
	1		W0470	203B	12		33-43-11	ALL
	2		W0470	203R	12		33-43-11	ALL
	3		W0470	209B	12		33-43-11	ALL
	4		W0470	209R	12		33-43-11	ALL
D04426P		AW0902/ /		PLUG-R WING TIP				ALL
	1		W0490	201B	12		33-43-11	ALL
	2		W0490	201R	12		33-43-11	ALL
	3		W0490	202B	12		33-43-11	ALL
	4		W0490	202R	12		33-43-11	ALL
D04428J		AW0902/ /		RCPT-RH WING TIP ASSY				ALL
	1		W0470	204B	12		33-43-11	ALL
	2		W0470	204R	12		33-43-11	ALL
	3		W0470	208B	12		33-43-11	ALL
	4		W0470	208R	12		33-43-11	ALL
D04428P		AW0902/ /		PLUG-R WING TIP				ALL
	1		W0492	201B	12		33-43-11	ALL
	2		W0492	201R	12		33-43-11	ALL
	3		W0492	202B	12		33-43-11	ALL
	4		W0492	202R	12		33-43-11	ALL
D04429J		AE0306/ /		RCPT-E2-2				ALL
	1		W0517	201Z			34-61-11	ALL
	2		W0517	201R	24		34-61-11	ALL
	3		W0517	201B	24		34-61-11	ALL
	4		W0517	203Z			34-61-11	ALL
	5	UNUSED						050-099, 150-155, 162-165, 275-276

HOOKUP LIST
D280T132

91-21-51
Section D04400
Page 16
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04429J		AE0306/ /		RCPT-E2-2 (continued)				ALL
	5		W0517	210Z			23-25-13	156-157, 166-199, 277-299
	6	UNUSED						ALL
	7		W0517	030	24		34-61-11	ALL
	8		W0517	203R	24		34-61-11	ALL
	9		W0517	203B	24		34-61-11	ALL
	10		W0517	010	24		34-61-11	ALL
	11		W0517	204R	24		31-35-11	ALL
	12		W0517	204B	24		31-35-11	ALL
	13		W0517	204Z			31-35-11	ALL
	14		W0517	208R	24		34-61-16	ALL
	15		W0517	208B	24		34-61-16	ALL
	16		W0517	208Z			34-61-16	ALL
	17		W0517	207R	24		34-61-16	ALL
	18		W0517	207B	24		34-61-16	ALL
	19		W0517	207Z			34-61-16	ALL
	20		W0517	206R	24		34-61-16	ALL
	21		W0517	206B	24		34-61-16	ALL
	22		W0517	206Z			34-61-16	ALL
	23	UNUSED						050-099, 150-155, 162-165, 275-276
	23		W0517	210R	24		23-25-13	156-157, 166-199, 277-299
	24	UNUSED						050-099, 150-155, 162-165, 275-276
	24		W0517	210B	24		23-25-13	156-157, 166-199, 277-299
D04429P		AE0306/ /		PLUG-E2-2				ALL
	1		W0133	776Z			34-61-11	050-099, 275-299
	1		W0133	684Z			34-61-11	150-199
	2		W0133	776R	24		34-61-11	050-099, 275-299
	2		W0133	684R	24		34-61-11	150-199
	3		W0133	776B	24		34-61-11	050-099, 275-299
	3		W0133	684B	24		34-61-11	150-199
	4		W0133	204Z			34-61-11	ALL
	5	UNUSED						050-099, 150-155, 162-165, 275-276
	5		W0133	806Z			23-25-13	156-157, 166-199, 277-299
	6	UNUSED						ALL
	7		W0133	002	24		34-61-11	ALL
	8		W0133	204R	24		34-61-11	ALL
	9		W0133	204B	24		34-61-11	ALL
	10		W0133	003	24		34-61-11	ALL
	11		W0133	540R	24		31-35-11	ALL
	12		W0133	540B	24		31-35-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04400

Page 17

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04429P		AE0306/ /		PLUG-E2-2 (continued)				ALL
	13		W0133	540Z			31-35-11	ALL
	14		W0133	669R	24		34-61-16	ALL
	15		W0133	669B	24		34-61-16	ALL
	16		W0133	669Z			34-61-16	ALL
	17		W0133	597R	24		34-61-16	ALL
	18		W0133	597B	24		34-61-16	ALL
	19		W0133	597Z			34-61-16	ALL
	20		W0133	747R	24		34-61-16	ALL
	21		W0133	747B	24		34-61-16	ALL
	22		W0133	747Z			34-61-16	ALL
	23	UNUSED						050-099, 150-155, 162-165, 275-276
	23		W0133	806R	24		23-25-13	156-157, 166-199, 277-299
	24	UNUSED						050-099, 150-155, 162-165, 275-276
	24		W0133	806B	24		23-25-13	156-157, 166-199, 277-299
	DED		W0133	002Z			34-61-11	ALL
D04430J		AW0901/ /		RCPT-LH WING TIP ASSY				ALL
	1		W0468	203B	12		33-43-11	ALL
	2		W0468	203R	12		33-43-11	ALL
	3		W0468	209B	12		33-43-11	ALL
	4		W0468	209R	12		33-43-11	ALL
D04430P		AW0901/ /		PLUG-L WING TIP				ALL
	1		W0486	201B	12		33-43-11	ALL
	2		W0486	201R	12		33-43-11	ALL
	3		W0486	202B	12		33-43-11	ALL
	4		W0486	202R	12		33-43-11	ALL
D04432J		AW0901/ /		RCPT-LH WING TIP ASSY				ALL
	1		W0468	204B	12		33-43-11	ALL
	2		W0468	204R	12		33-43-11	ALL
	3		W0468	208B	12		33-43-11	ALL
	4		W0468	208R	12		33-43-11	ALL
D04432P		AW0901/ /		PLUG-L WING TIP				ALL
	1		W0488	201B	12		33-43-11	ALL
	2		W0488	201R	12		33-43-11	ALL
	3		W0488	202B	12		33-43-11	ALL
	4		W0488	202R	12		33-43-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04400

Page 18

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04433J		AE0322/ /		RCPT-FMC R,CDU				ALL
	1		W0519	201Z			34-61-21	ALL
	2		W0519	201R	24		34-61-21	ALL
	3		W0519	201B	24		34-61-21	ALL
	4		W0519	203R	24		34-61-21	ALL
	5		W0519	203B	24		34-61-21	ALL
	6		W0519	203Z			34-61-21	ALL
	7		W0519	030	24		34-61-21	ALL
	8		W0519	101	24		34-61-26	ALL
	9	UNUSED						050-099, 150-155, 162-165, 275-276
	9		W0519	210R	24		23-25-13	156-157, 166-199, 277-299
	10		W0519	010	24		34-61-21	ALL
	11	UNUSED						050-099, 150-155, 162-165, 275-276
	11		W0519	210B	24		23-25-13	156-157, 166-199, 277-299
	12	UNUSED						050-099, 150-155, 162-165, 275-276
	12		W0519	210Z			23-25-13	156-157, 166-199, 277-299
	13		W0519	207R	24		34-61-26	ALL
	14		W0519	207B	24		34-61-26	ALL
	15		W0519	207Z			34-61-26	ALL
	16		W0519	208R	24		34-61-26	ALL
	17		W0519	208B	24		34-61-26	ALL
	18		W0519	208Z			34-61-26	ALL
	19		W0519	205R	24		23-22-11	ALL
	20		W0519	205B	24		23-22-11	ALL
	21		W0519	205Z			23-22-11	ALL
	22		W0519	206R	24		34-61-26	ALL
	23		W0519	206B	24		34-61-26	ALL
	24		W0519	206Z			34-61-26	ALL
D04433P		AE0322/ /		PLUG-E2-3				ALL
	1		W0145	685Z			34-61-21	ALL
	2		W0145	685R	24		34-61-21	ALL
	3		W0145	685B	24		34-61-21	ALL
	4		W0145	207R	24		34-61-21	ALL
	5		W0145	207B	24		34-61-21	ALL
	6		W0145	207Z			34-61-21	ALL
	7		W0145	002	24		34-61-21	ALL
	8		W0145	678	24		34-61-26	ALL
	9	UNUSED						050-099, 150-155, 162-165, 275-276
	9		W0145	597R	24		23-25-13	156-157, 166-199, 277-299
	10		W0145	003	24		34-61-21	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04400

Page 19

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04433P		AE0322/ /		PLUG-E2-3 (continued)				ALL
	11	UNUSED						050-099, 150-155, 162-165, 275-276
	11		W0145	597B	24		23-25-13	156-157, 166-199, 277-299
	12	UNUSED						050-099, 150-155, 162-165, 275-276
	12		W0145	597Z			23-25-13	156-157, 166-199, 277-299
	13		W0145	559R	24		34-61-26	ALL
	14		W0145	559B	24		34-61-26	ALL
	15		W0145	559Z			34-61-26	ALL
	16		W0145	560R	24		34-61-26	ALL
	17		W0145	560B	24		34-61-26	ALL
	18		W0145	560Z			34-61-26	ALL
	19		W0145	287R	24		23-22-11	ALL
	20		W0145	287B	24		23-22-11	ALL
	21		W0145	287Z			23-22-11	ALL
	22		W0145	594R	24		34-61-26	ALL
	23		W0145	594B	24		34-61-26	ALL
	24		W0145	594Z			34-61-26	ALL
	DED		W0145	002Z			34-61-21	ALL
D04434J		AW0403/ /		RCPT-L WING OUTBD RIB SEAL				ALL
	1		W0430	004	18		27-88-12	ALL
	2		W0430	04TR	20		27-88-12	ALL
	3		W0430	002	18		27-88-12	ALL
	4		W0430	02TR	20		27-88-12	ALL
	5		W0430	005	18		27-88-12	ALL
	6		W0430	05TR	20		27-88-12	ALL
	7		W0430	006	18		27-88-12	ALL
	8		W0430	06TR	20		27-88-12	ALL
	9		W0430	003	18		27-88-12	ALL
	10		W0430	03TR	20		27-88-12	ALL
	11		W0430	007	18		27-88-12	ALL
	12		W0430	07TR	20		27-88-12	ALL
	13		W0430	008	18		27-88-12	ALL
	14		W0430	08TR	20		27-88-12	ALL
	15		W0430	009	18		27-88-12	ALL
	16		W0430	09TR	20		27-88-12	ALL
	17		W0430	010	18		27-88-12	ALL
	18		W0430	10TR	20		27-88-12	ALL
	19		W0430	216R	18		27-89-11	ALL
	20		W0430	216B	18		27-89-11	ALL
	21		W0430	001	18		27-88-12	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04400

Page 20

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04434J		AW0403/ /		RCPT-L WING OUTBD RIB SEAL (continued)				ALL
	22		W0430	01TR	20		27-88-12	ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
D04434P		AW0403/ /		PLUG-L WING OUTBD RIB SEAL				ALL
	1		W0406	220B	20		27-88-12	ALL
	2		W0406	220R	20		27-88-12	ALL
	3		W0406	212B	20		27-88-12	ALL
	4		W0406	212R	20		27-88-12	ALL
	5		W0406	222B	20		27-88-12	ALL
	6		W0406	222R	20		27-88-12	ALL
	7		W0406	223B	20		27-88-12	ALL
	8		W0406	223R	20		27-88-12	ALL
	9		W0406	216B	20		27-88-12	ALL
	10		W0406	216R	20		27-88-12	ALL
	11		W0406	225B	20		27-88-12	ALL
	12		W0406	225R	20		27-88-12	ALL
	13		W0406	226B	20		27-88-12	ALL
	14		W0406	226R	20		27-88-12	ALL
	15		W0406	208B	20		27-88-12	ALL
	16		W0406	208R	20		27-88-12	ALL
	17		W0406	209B	20		27-88-12	ALL
	18		W0406	209R	20		27-88-12	ALL
	19		W0406	250R	18		27-89-11	ALL
	20		W0406	250B	18		27-89-11	ALL
	21		W0406	211B	20		27-88-12	ALL
	22		W0406	211R	20		27-88-12	ALL
	23		W0406	101	20		SPARE	ALL
	24		W0406	801	20		SPARE	ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D04400

Page 21

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04434P		AW0403/ /		PLUG-L WING OUTBD RIB SEAL (continued)				ALL
	30	UNUSED						ALL
D04438J		AW0403/ /		RCPT-L WING FS/OUTBD RIB SEAL				ALL
	1		W0468	005	18		30-11-11	ALL
	2	UNUSED						050-099, 150-154
	2		W0468	213B	18		SPARE	155-199
	2		W0468	213B	18		30-11-11	275-299
	3	UNUSED						050-099, 150-154
	3		W0468	213R	18		SPARE	155-199
	3		W0468	213R	18		30-11-11	275-299
	4		W0468	001	18		33-43-11	ALL
	5	UNUSED						ALL
	6		W0468	211B	18		33-44-21	ALL
	7	UNUSED						ALL
D04438P		AW0403/ /		PLUG-L WING OUTBD RIB SEAL				ALL
	1		W0440	012	20		30-11-11	ALL
	2	UNUSED						050-099
	2		W0440	011	20		SPARE	150-199
	2		W0440	011	20		30-11-11	275-299
	3	UNUSED						050-099
	3		W0440	013	20		SPARE	150-199
	3		W0440	013	20		30-11-11	275-299
	4		W0440	015	20		33-43-11	050-099
	4		W0440	015	18		33-43-11	150-199, 275-299
	5	UNUSED						ALL
	6		W0440	016	18		33-44-21	ALL
	7		W0440	017	20		SPARE	ALL
D04442J		AW0403/ /		RCPT-L WING FS/OUTBD RIB SEAL				ALL
	1		W0472	001	20		28-21-11	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W0472	002	20		28-21-12	ALL
	5		W0472	003	20		28-21-12	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8		W0472	216R	20		28-21-11	ALL
	9		W0472	215R	20		28-21-11	ALL
	10		W0472	008	18		28-41-12	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04400

Page 22

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04442J		AW0403/ /		RCPT-L WING FS/OUTBD RIB SEAL (continued)				ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13		W0472	024	20		28-21-11	ALL
	14		W0472	027	20		28-21-11	ALL
	15		W0472	025	20		28-21-13	ALL
	16		W0472	026	20		28-21-13	ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20		W0472	301Y	20		28-41-11	ALL
	21		W0472	209B	20		28-41-11	ALL
	22		W0472	209R	20		28-41-11	ALL
	23		W0472	301B	20		28-41-11	ALL
	24		W0472	301R	20		28-41-11	ALL
	25		W0472	214R	20		28-21-11	ALL
	26		W0472	401B	20		28-21-11	ALL
	27		W0472	401G	20		28-21-11	ALL
	28		W0472	401R	20		28-21-11	ALL
	29		W0472	401Y	20		28-21-11	ALL
	30		W0472	034	20		28-26-11	ALL
D04442P		AW0403/ /		PLUG-OUTBD RIB SEAL DISC				ALL
	1		W0402	024	20		28-21-11	ALL
	2		W0402	207B	20		SPARE	ALL
	3		W0402	207R	20		SPARE	ALL
	4		W0402	025	20		28-21-12	ALL
	5		W0402	026	20		28-21-12	ALL
	6		W0402	211B	20		SPARE	ALL
	7		W0402	211R	20		SPARE	ALL
	8		W0402	027	20		28-21-11	ALL
	9		W0402	028	20		28-21-11	ALL
	10		W0402	029	18		28-41-12	ALL
	11		W0402	212B	20		SPARE	ALL
	12		W0402	212R	20		SPARE	ALL
	13		W0402	030	20		28-21-11	ALL
	14		W0402	031	20		28-21-11	ALL
	15		W0402	032	20		28-21-13	ALL
	16		W0402	033	20		28-21-13	ALL
	17	UNUSED						ALL
	18	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D04400

Page 23

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04442P		AW0403/ /		PLUG-OUTBD RIB SEAL DISC (continued)				ALL
	19	UNUSED						ALL
	20		W0402	301Y	20		28-41-11	ALL
	21		W0402	209B	20		28-41-11	ALL
	22		W0402	209R	20		28-41-11	ALL
	23		W0402	301B	20		28-41-11	ALL
	24		W0402	301R	20		28-41-11	ALL
	25		W0402	036	20		28-21-11	ALL
	26		W0402	401B	20		28-21-11	ALL
	27		W0402	401G	20		28-21-11	ALL
	28		W0402	401R	20		28-21-11	ALL
	29		W0402	401Y	20		28-21-11	ALL
	30		W0402	037	20		28-26-11	ALL
D04444J		AW0403/ /		RCPT-L WING FS/OUTBD RIB SEAL				ALL
	1		W0472	040	20		28-41-11	ALL
	2		W0472	303Y	20		28-41-11	ALL
	3		W0472	203B	20		28-41-11	ALL
	4		W0472	203R	20		28-41-11	ALL
	5		W0472	303B	20		28-41-11	ALL
	6		W0472	303R	20		28-41-11	ALL
	7		W0472	010	20		28-26-11	ALL
	8		W0472	011	20		28-26-11	ALL
	9		W0472	012	20		28-21-11	ALL
	10		W0472	013	20		28-21-13	ALL
	11		W0472	014	20		28-21-13	ALL
	12		W0472	015	20		28-21-11	ALL
	13		W0472	018	20		28-21-11	ALL
	14		W0472	021	20		28-21-11	ALL
	15		W0472	019	20		28-21-13	ALL
	16		W0472	020	20		28-21-13	ALL
	17		W0472	016	20		28-26-11	ALL
	18		W0472	017	20		28-26-11	ALL
	19		W0472	039	20		28-41-11	ALL
	20		W0472	302Y	20		28-41-11	ALL
	21		W0472	206B	20		28-41-11	ALL
	22		W0472	206R	20		28-41-11	ALL
	23		W0472	302B	20		28-41-11	ALL
	24		W0472	302R	20		28-41-11	ALL
	25		W0472	01TB	20		23-41-11	ALL
	26		W0472	01TR	20		23-41-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04400

Page 24

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04444J		AW0403/ /		RCPT-L WING FS/OUTBD RIB SEAL (continued)				ALL
	27		W0472	01TI			23-41-11	ALL
	28		W0472	037	20		28-41-11	ALL
	29		W0472	038	20		28-41-11	ALL
	30		W0472	007	18		28-21-11	ALL
D04444P		AW0403/ /		PLUG-OUTBD RIB SEAL DISC				ALL
	1		W0402	044	20		28-41-11	ALL
	2		W0402	303Y	20		28-41-11	ALL
	3		W0402	202B	20		28-41-11	ALL
	4		W0402	202R	20		28-41-11	ALL
	5		W0402	303B	20		28-41-11	ALL
	6		W0402	303R	20		28-41-11	ALL
	7		W0402	012	20		28-26-11	ALL
	8		W0402	013	20		28-26-11	ALL
	9		W0402	014	20		28-21-11	ALL
	10		W0402	015	20		28-21-13	ALL
	11		W0402	016	20		28-21-13	ALL
	12		W0402	017	20		28-21-11	ALL
	13		W0402	018	20		28-21-11	ALL
	14		W0402	019	20		28-21-11	ALL
	15		W0402	020	20		28-21-13	ALL
	16		W0402	021	20		28-21-13	ALL
	17		W0402	022	20		28-26-11	ALL
	18		W0402	023	20		28-26-11	ALL
	19		W0402	043	20		28-41-11	ALL
	20		W0402	302Y	20		28-41-11	ALL
	21		W0402	205B	20		28-41-11	ALL
	22		W0402	205R	20		28-41-11	ALL
	23		W0402	302B	20		28-41-11	ALL
	24		W0402	302R	20		28-41-11	ALL
	25		W0402	213B	20		23-41-11	ALL
	26		W0402	213R	20		23-41-11	ALL
	27		W0402	213Z			23-41-11	ALL
	28		W0402	040	20		28-41-11	ALL
	29		W0402	041	20		28-41-11	ALL
	30		W0402	053	18		28-21-11	ALL
	CAP	Y	W0402	801	20		SPARE	050-099, 150-156, 162-166, 275-276
D04445J		AE0306/ /		RCPT-E2-2				ALL
	1		UNUSED					ALL

HOOKUP LIST

D280T132

91-21-51

Section D04400

Page 25

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04445J		AE0306/ /		RCPT-E2-2 (continued)				ALL
	2		W1311	017	24		31-31-22	050-099, 275-299
	2		W1311	017	24		31-31-18	150-199
	3	UNUSED						ALL
	4		W1311	210R	24		SPARE	ALL
	5		W1311	210B	24		SPARE	ALL
	6		W1311	210Z			SPARE	ALL
	7	UNUSED						ALL
	8		W1311	028	22		34-61-15	ALL
	9		W1311	023	24		34-61-16	050-099, 155-199, 275-299
	9	UNUSED						150-154
	10		W1311	022	24		34-61-26	050-099, 155-199, 275-299
	10	UNUSED						150-154
	11	UNUSED						ALL
	12		W1311	215R	24		31-31-20	ALL
	13		W1311	215B	24		31-31-20	ALL
	14		W1311	215Z			31-31-20	ALL
	15		W1311	020	24		34-61-16	ALL
	16		W1311	021	24		34-61-16	ALL
	17	UNUSED						ALL
	18	UNUSED						050-099, 150-156, 162-166
	18		W1311	216R	24		34-22-81	157, 167-199, 275-299
	19	UNUSED						050-099, 150-156, 162-166
	19		W1311	216B	24		34-22-81	157, 167-199, 275-299
	20	UNUSED						050-099, 150-156, 162-166
	20		W1311	216Z			34-22-81	157, 167-199, 275-299
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24		W1311	031	24		31-31-19	ALL
D04445P		AE0306/ /		PLUG-E2-2				ALL
	1	UNUSED						ALL
	2		W0133	668	24		31-31-22	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8		W0133	710	24		34-61-15	ALL
	9		W0133	790	24		34-61-16	050-099, 155-199, 275-299

HOOKUP LIST
D280T132

91-21-51
Section D04400
Page 26
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04445P		AE0306/ /		PLUG-E2-2 (continued)				ALL
	9	UNUSED						150-154
	10		W0133	789	24		34-61-26	050-099, 155-199, 275-299
	10	UNUSED						150-154
	11	UNUSED						ALL
	12		W0133	274R	24		31-31-20	ALL
	13		W0133	274B	24		31-31-20	ALL
	14		W0133	274Z			31-31-20	ALL
	15		W0133	678	24		34-61-16	ALL
	16		W0133	680	24		34-61-16	ALL
	17	UNUSED						ALL
	18	UNUSED						050-099, 150-156, 162-166
	18		W0133	837R	24		34-22-81	157, 167-199, 275-299
	19	UNUSED						050-099, 150-156, 162-166
	19		W0133	837B	24		34-22-81	157, 167-199, 275-299
	20	UNUSED						050-099, 150-156, 162-166
	20		W0133	837Z			34-22-81	157, 167-199, 275-299
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24		W0133	159	24		31-31-19	ALL
D04447J		AE0317/ /		RCPT-E1-5				ALL
	1		W1645	001	24		SPARE	ALL
	2		W1645	002	24		SPARE	ALL
	3		W1645	003	22		SPARE	ALL
	4		W1645	004	22		SPARE	ALL
	5	UNUSED						ALL
	6		W1645	006	24		31-31-19	ALL
	7		W1645	007	24		31-31-19	ALL
	8		W1645	201R	24		SPARE	ALL
	9		W1645	201B	24		SPARE	ALL
	10		W1645	201Z			SPARE	ALL
	11		W1645	202R	24		SPARE	ALL
	12		W1645	202B	24		SPARE	ALL
	13		W1645	202Z			SPARE	ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D04400

Page 27

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04447J		AE0317/ /		RCPT-E1-5 (continued)				ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D04447P		AE0317/ /		PLUG-E1-5				ALL
	1	UNUSED						050-099, 275-299
	1	UNUSED	W0119	688	24		SPARE	150-199
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED	W0119	198	24		31-31-19	ALL
	7	UNUSED	W0119	199	24		31-31-19	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D04448J		AE0306/ /		RCPT-E2-4				ALL
	1	UNUSED	W0942	017	24		28-41-21	ALL
	2	UNUSED	W0942	018	24		28-41-21	ALL
	3	UNUSED	W0942	019	24		28-41-21	ALL
	4	UNUSED	W0942	020	24		28-41-21	ALL
	5	UNUSED	W0942	021	24		28-41-21	ALL

HOOKUP LIST
D280T132

91-21-51
Section D04400
Page 28
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04448J		AE0306/ /		RCPT-E2-4 (continued)				ALL
	6		W0942	022	24		28-41-21	ALL
	7		W0942	023	24		28-41-21	ALL
	8		W0942	024	24		28-41-21	ALL
	9		W0942	025	24		28-41-21	ALL
	10		W0942	026	24		28-41-21	ALL
	11		W0942	027	24		28-41-21	ALL
	12		W0942	028	24		28-41-21	ALL
	13		W0942	029	24		28-41-21	ALL
	14		W0942	030	24		28-41-21	ALL
	15		W0942	031	24		28-41-21	ALL
	16		W0942	209B	24		28-41-21	ALL
	17		W0942	209R	24		28-41-21	ALL
	18		W0942	210B	24		28-41-21	ALL
	19		W0942	210R	24		28-41-21	ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D04448P		AE0306/ /		PLUG-E2-4				ALL
	1		W0098	022	24		28-41-21	ALL
	2		W0098	023	24		28-41-21	ALL
	3		W0098	024	24		28-41-21	ALL
	4		W0098	025	24		28-41-21	ALL
	5		W0098	026	24		28-41-21	ALL
	6		W0098	027	24		28-41-21	ALL
	7		W0098	028	24		28-41-21	ALL
	8		W0098	029	24		28-41-21	ALL
	9		W0098	030	24		28-41-21	ALL
	10		W0098	031	24		28-41-21	ALL
	11		W0098	032	24		28-41-21	ALL
	12		W0098	033	24		28-41-21	ALL
	13		W0098	034	24		28-41-21	ALL
	14		W0098	035	24		28-41-21	ALL
	15		W0098	036	24		28-41-21	ALL
	16		W0098	224B	24		28-41-21	ALL
	17		W0098	224R	24		28-41-21	ALL
	18		W0098	225B	24		28-41-21	ALL
	19		W0098	225R	24		28-41-21	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04400

Page 29

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04448P		AE0306/ /		PLUG-E2-4 (continued)				ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D04449J		AE0320/ /		RCPT-E2-3				ALL
	1		W1645	001	24		SPARE	ALL
	2		W1645	002	24		SPARE	ALL
	3		W1645	003	22		SPARE	ALL
	4		W1645	004	22		SPARE	ALL
	5	UNUSED						ALL
	6		W1645	006	24		31-31-19	ALL
	7		W1645	007	24		31-31-19	ALL
	8		W1645	201R	24		SPARE	ALL
	9		W1645	201B	24		SPARE	ALL
	10		W1645	201Z			SPARE	ALL
	11		W1645	202R	24		SPARE	ALL
	12		W1645	202B	24		SPARE	ALL
	13		W1645	202Z			SPARE	ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D04449P		AE0320/ /		PLUG-E2-3				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W0145	849	24		31-31-19	ALL
	7		W0145	854	24		31-31-19	ALL

HOOKUP LIST
D280T132

91-21-51
Section D04400
Page 30
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04449P		AE0320/ /		PLUG-E2-3 (continued)				ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D04455J		AE0317/ /		RCPT-E1-5				ALL
	1		W0527	217R	24		34-45-14	050-099, 150-199, 277-299
	1	UNUSED						275-276
	2		W0527	217B	24		34-45-14	050-099, 150-199, 277-299
	2	UNUSED						275-276
	3		W0527	217Z			34-45-14	050-099, 150-199, 277-299
	3	UNUSED						275-276
	4	UNUSED						ALL
	5		W0527	025	22		SPARE	ALL
	6		W0527	026	22		SPARE	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13		W0527	211R	24		34-22-81	ALL
	14		W0527	211B	24		34-22-81	ALL
	15		W0527	211Z			34-22-81	ALL
	16		W0527	213R	24		34-22-91	050-099, 150-156, 162-166
	16		W0527	213R	24		SPARE	157, 167-199, 275-276
	16	UNUSED						277-299

HOOKUP LIST

D280T132

91-21-51

Section D04400

Page 31

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04455J		AE0317/ /		RCPT-E1-5 (continued)				ALL
	17		W0527	213B	24		34-22-91	050-099, 150-156, 162-166
	17		W0527	213B	24		SPARE	157, 167-199, 275-276
	17	UNUSED						277-299
	18		W0527	213Z			34-22-91	050-099, 150-156, 162-166
	18		W0527	213Z			SPARE	157, 167-199, 275-276
	18	UNUSED						277-299
	19		W0527	214R	24		34-22-91	ALL
	20		W0527	214B	24		34-22-91	ALL
	21		W0527	214Z			34-22-91	ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D04455P		AE0317/ /		PLUG-E1-5				ALL
	1		W0119	559R	24		34-45-14	050-099, 150-199, 277-299
	1	UNUSED						275-276
	2		W0119	559B	24		34-45-14	050-099, 150-199, 277-299
	2	UNUSED						275-276
	3		W0119	559Z			34-45-14	050-099, 150-199, 277-299
	3	UNUSED						275-276
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13		W0119	299R	24		34-22-81	ALL
	14		W0119	299B	24		34-22-81	ALL
	15		W0119	299Z			34-22-81	ALL
	16		W0119	253R	24		34-22-91	050-099, 150-156, 162-166
	16	UNUSED						157, 167-199, 275-299
	17		W0119	253B	24		34-22-91	050-099, 150-156, 162-166
	17	UNUSED						157, 167-199, 275-299
	18		W0119	253Z			34-22-91	050-099, 150-156, 162-166
	18	UNUSED						157, 167-199, 275-299
	19		W0119	259R	24		34-22-91	ALL
	20		W0119	259B	24		34-22-91	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04400

Page 32

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04455P		AE0317/ /		PLUG-E1-5 (continued)				ALL
	21		W0119	259Z			34-22-91	ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D04457J		AE0305/ /		RCPT-E1-3				ALL
	1		W0471	001	22		22-14-31	ALL
	2		W0471	002	22		22-14-31	ALL
	3		W0471	003	22		34-46-12	ALL
	4		W0471	228R	24		SPARE	050-099, 162-199, 280-299
	4		W0471	228R	24		77-12-11	150-157, 275-276
	4	UNUSED						277-278
	5		W0471	228B	24		SPARE	050-099, 162-199, 280-299
	5		W0471	228B	24		77-12-11	150-157, 275-276
	5	UNUSED						277-278
	6		W0471	228Z			SPARE	050-099, 162-199, 280-299
	6		W0471	228Z			77-12-11	150-157, 275-276
	6	UNUSED						277-278
	7		W0471	007	24		22-32-15	ALL
	8		W0471	008	24		22-32-15	ALL
	9	UNUSED						050-099, 150-199
	9		W0471	201R	22		SPARE	275-299
	10	UNUSED						050-099, 150-199
	10		W0471	201B	22		SPARE	275-299
	11	UNUSED						050-099, 150-199
	11		W0471	202R	24		SPARE	275-299
	12	UNUSED						050-099, 150-199
	12		W0471	202B	24		SPARE	275-299
	13		W0471	110	22		34-45-13	050-099, 150-199, 277-299
	13	UNUSED						275-276
	14	UNUSED						ALL
	15		W0471	70N	20		29-11-14	ALL
	16		W0471	012	24		34-12-12	ALL
	17		W0471	013	24		34-12-12	ALL
	18		W0471	014	24		34-12-12	ALL
	19		W0471	015	24		34-12-12	ALL
	20		W0471	016	24		34-12-12	ALL
	21		W0471	70P	20		29-11-14	ALL
	22		W0471	051	24		22-32-13	ALL
	23		W0471	006	24		34-12-12	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04400

Page 33

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04457J		AE0305/ /		RCPT-E1-3 (continued)				ALL
	24		W0471	70M	20		29-11-14	ALL
	25	UNUSED						ALL
	26		W0471	041	24		34-55-11	ALL
	27	UNUSED						ALL
	28		W0471	70L	20		29-11-14	ALL
	29		W0471	085	22		34-22-16	ALL
	30		W0471	050	24		32-42-11	ALL
	31		W0471	215R	24		73-21-14	ALL
	32		W0471	215B	24		73-21-14	ALL
	33		W0471	215Z			73-21-14	ALL
	34		W0471	072	20		27-32-31	ALL
	35		W0471	049	24		SPARE	050-099
	35		W0471	049	24		30-34-31	150-199
	35	UNUSED						275-299
	36		W0471	224Z			73-21-14	ALL
	37	UNUSED						ALL
	38		W0471	067	24		SPARE	050-099, 150-199
	38	UNUSED						275-299
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42		W0471	218R	24		32-42-11	ALL
	43		W0471	218B	24		32-42-11	ALL
	44		W0471	218Z			32-42-11	ALL
	45		W0471	214R	24		73-21-14	ALL
	46		W0471	214B	24		73-21-14	ALL
	47		W0471	214Z			73-21-14	ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	FM	W0471	070	16		27-32-31	ALL
	52		W0471	035	24		22-41-11	ALL
	53		W0471	224R	24		73-21-14	ALL
	54		W0471	224B	24		73-21-14	ALL
	55	FM	W0471	071	16		27-32-31	ALL
	CAP	Y	W0471	017	24		SPARE	ALL
	CAP	Y	W0471	066	24		SPARE	ALL
	CAP	Y	W0471	216B	22		SPARE	150-152, 275-276
	CAP	Y	W0471	216R	22		SPARE	150-152, 275-276
	DED		W0471	70MZ			29-11-14	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04400

Page 34

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04457P		AE0305/ /		PLUG-E1-3				ALL
	1		W0105	068	22		22-14-31	ALL
	2		W0105	071	22		22-14-31	ALL
	3		W0105	091	24		34-46-12	ALL
	4	UNUSED						050-099, 162-199, 277-299
	4		W0105	582R	24		77-12-11	150-157, 275-276
	5	UNUSED						050-099, 162-199, 277-299
	5		W0105	582B	24		77-12-11	150-157, 275-276
	6	UNUSED						050-099, 162-199, 277-299
	6		W0105	582Z			77-12-11	150-157, 275-276
	7		W0105	757	20		22-32-15	ALL
	8		W0105	761	24		22-32-15	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						050-099, 275-299
	11		W0105	678R	24		SPARE	150-199
	12	UNUSED						050-099, 275-299
	12		W0105	678B	24		SPARE	150-199
	13		W0105	713	22		34-45-13	ALL
	14	UNUSED						ALL
	15		W0105	70N	20		29-11-14	ALL
	16		W0105	810	24		34-12-12	ALL
	17		W0105	812	24		34-12-12	ALL
	18		W0105	813	24		34-12-12	ALL
	19		W0105	814	24		34-12-12	ALL
	20		W0105	818	24		34-12-12	ALL
	21		W0105	70P	20		29-11-14	ALL
	22		W0105	535	24		22-32-13	ALL
	23		W0105	829	24		34-12-12	ALL
	24		W0105	70M	20		29-11-14	ALL
	25	UNUSED						ALL
	26		W0105	113	24		34-55-11	ALL
	27	UNUSED						ALL
	28		W0105	70L	20		29-11-14	ALL
	29		W0105	624	22		34-22-16	ALL
	30		W0105	037	24		32-42-11	ALL
	31		W0105	551R	24		73-21-14	ALL
	32		W0105	551B	24		73-21-14	ALL
	33		W0105	551Z			73-21-14	ALL
	34		W0105	612	20		27-32-31	ALL
	35	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D04400

Page 35

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04457P		AE0305/ /		PLUG-E1-3 (continued)				ALL
	36		W0105	296Z			73-21-14	ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42		W0105	297R	24		32-42-11	ALL
	43		W0105	297B	24		32-42-11	ALL
	44		W0105	297Z			32-42-11	ALL
	45		W0105	536R	24		73-21-14	ALL
	46		W0105	536B	24		73-21-14	ALL
	47		W0105	536Z			73-21-14	ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	FL	W0105	610	16		27-32-31	ALL
	52		W0105	084	24		22-41-11	ALL
	53		W0105	296R	24		73-21-14	ALL
	54		W0105	296B	24		73-21-14	ALL
	55	FL	W0105	611	16		27-32-31	ALL
	DED		W0105	610Z			27-32-31	ALL
	DED		W0105	611Z			27-32-31	ALL
	DED		W0105	612Z			27-32-31	ALL
	DED		W0105	70MZ			29-11-14	ALL
D04466J		AE0306/ /		RCPT-				ALL
	1		W0942	016	20		28-41-21	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	= C1		W0942	016Z			28-41-21	ALL
D04466P		AE0306/ /		PLUG-E2-4				ALL
	1		W0098	053	24		28-41-21	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	= C1		W0098	053Z			28-41-21	ALL
D04473J		AP1501/ /		RCPT-				ALL
	1		W0603	001	20		22-11-22	ALL
	2	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D04400
Page 36
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04473J		AP1501 / /		RCPT- (continued)				ALL
	3		W0603	006Y	20		27-41-21	ALL
	4		W0603	201R	20		22-11-21	ALL
	5		W0603	201B	20		22-11-21	ALL
	6		W0603	302R	20		22-12-21	ALL
	7		W0603	302B	20		22-12-21	ALL
	8		W0603	302Y	20		22-12-21	ALL
	9		W0603	207R	20		22-12-21	ALL
	10		W0603	207B	20		22-12-21	ALL
	11		W0603	301R	20		22-12-21	ALL
	12		W0603	301B	20		22-12-21	ALL
	13		W0603	301Y	20		22-12-21	ALL
	14		W0603	002	20		22-11-22	ALL
	15	UNUSED						ALL
D04473P		AP1501 / /		PLUG-				ALL
	1		W0503	001	22		22-11-22	ALL
	2		W0503	207R	22		SPARE	ALL
	3		W0503	023Y	22		27-41-21	ALL
	4		W0503	201R	22		22-11-21	ALL
	5		W0503	201B	22		22-11-21	ALL
	6		W0503	303R	22		22-12-21	ALL
	7		W0503	303B	22		22-12-21	ALL
	8		W0503	303Y	22		22-12-21	ALL
	9		W0503	204R	22		22-12-21	ALL
	10		W0503	204B	22		22-12-21	ALL
	11		W0503	302R	22		22-12-21	ALL
	12		W0503	302B	22		22-12-21	ALL
	13		W0503	302Y	22		22-12-21	ALL
	14		W0503	002	22		22-11-22	ALL
	15		W0503	207B	22		SPARE	ALL
D04474J		AW0321 / /		RCPT-L WING/SAILBOAT				ALL
	1		W0390	102	18		78-34-11	ALL
	2		W0390	002	18		78-34-11	ALL
	3		W0390	003	18		78-34-11	ALL
	4		W0390	FRC			29-33-11	ALL
	5		W0390	007	18		29-32-11	ALL
	6		W0390	008	18		78-36-11	ALL
	7		W0390	103	18		78-34-11	ALL
	8		W0390	010	18		SPARE	050-099, 150-166, 275-276

HOOKUP LIST

D280T132

91-21-51

Section D04400

Page 37

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04474J		AW0321/ /		RCPT-L WING/SAILBOAT (continued)				ALL
	8		W0390	010	18		78-36-11	167-199, 277-299
	9		W0390	004	18		29-32-11	ALL
	10		W0390	014	18		29-33-11	ALL
	11		W0390	FRD			29-33-11	ALL
	12		W0390	011	20		29-33-11	ALL
	13		W0390	FRE			29-33-11	ALL
	14		W0390	012	18		29-33-11	ALL
	15		W0390	013	18		29-33-11	ALL
	16		W0390	020	18		29-32-11	ALL
	17		W0390	022	18		29-11-12	ALL
	18		W0390	083	18		78-36-11	ALL
	19		W0390	081	18		78-36-11	ALL
	CAP	Y	W0390	009	18		SPARE	ALL
			W0390	011Z			29-33-11	ALL
			W0390	101	18		78-34-11	ALL
			W0390	102Z			78-34-11	ALL
			W0390	103Z			78-34-11	ALL
			W0390	FRC			29-33-11	ALL
			W0390	FRD			29-33-11	ALL
			W0390	FRE			29-33-11	ALL
D04474P		AW0321/ /		PLUG-L WING/SAILBOAT				ALL
	1		W0406	099	18		78-34-11	ALL
	2		W0406	030	20		SPARE	ALL
	3		W0406	060	20		78-34-11	ALL
	4		W0406	FRA			29-33-11	ALL
	5		W0406	062	20		29-32-11	ALL
	6		W0406	072	18		78-36-11	ALL
	7		W0406	124	18		78-34-11	ALL
	8		W0406	073	18		78-36-11	050-099, 150-156, 162-199, 275-299
	8		W0406	073	18		SPARE	157
	9		W0406	061	20		29-32-11	ALL
	10		W0406	070	20		29-33-11	ALL
	11		W0406	FRB			29-33-11	ALL
	12		W0406	067	20		29-33-11	ALL
	13		W0406	FRC			29-33-11	ALL
	14		W0406	068	20		29-33-11	ALL
	15		W0406	069	20		29-33-11	ALL
	16		W0406	075	20		29-32-11	ALL
	17		W0406	089	20		29-11-12	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04400

Page 38

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04474P		AW0321/ /		PLUG-L WING/SAILBOAT (continued)				ALL
	18		W0406	127	18		78-36-11	ALL
	19		W0406	128	18		78-36-11	ALL
	CAP	Y	W0406	029	20		SPARE	ALL
	DED		W0406	099Z			78-34-11	ALL
	DED		W0406	124Z			78-34-11	ALL
			W0406	067Z			29-33-11	ALL
			W0406	FRA			29-33-11	ALL
			W0406	FRB			29-33-11	ALL
			W0406	FRC			29-33-11	ALL
D04475J		AP1501/ /		RCPT-				ALL
	1		W0591	001	20		22-11-12	ALL
	2	UNUSED						ALL
	3		W0591	010Y	20		27-41-11	ALL
	4		W0591	201R	20		22-11-11	ALL
	5		W0591	201B	20		22-11-11	ALL
	6		W0591	302R	20		22-12-11	ALL
	7		W0591	302B	20		22-12-11	ALL
	8		W0591	302Y	20		22-12-11	ALL
	9		W0591	207R	20		22-12-11	ALL
	10		W0591	207B	20		22-12-11	ALL
	11		W0591	301R	20		22-12-11	ALL
	12		W0591	301B	20		22-12-11	ALL
	13		W0591	301Y	20		22-12-11	ALL
	14		W0591	002	20		22-11-12	ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	FL	W0591	006	16		27-32-31	ALL
	21	UNUSED						ALL
	22	DL	W0591	70N	18		29-11-14	ALL
	23	DL	W0591	70P	18		29-11-14	ALL
	24	FL	W0591	007	16		27-32-31	ALL
D04475P		AP1501/ /		PLUG				ALL
	1		W0491	001	22		22-11-12	ALL
	2		W0491	206R	22		SPARE	ALL
	3		W0491	017Y	22		27-41-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04400

Page 39

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04475P		AP1501/ /		PLUG (continued)				ALL
	4		W0491	201R	22		22-11-11	ALL
	5		W0491	201B	22		22-11-11	ALL
	6		W0491	303R	22		22-12-11	ALL
	7		W0491	303B	22		22-12-11	ALL
	8		W0491	303Y	22		22-12-11	ALL
	9		W0491	204R	22		22-12-11	ALL
	10		W0491	204B	22		22-12-11	ALL
	11		W0491	302R	22		22-12-11	ALL
	12		W0491	302B	22		22-12-11	ALL
	13		W0491	302Y	22		22-12-11	ALL
	14		W0491	002	22		22-11-12	ALL
	15		W0491	206B	22		SPARE	ALL
	16		W0491	020	20		SPARE	ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	FM	W0491	018	16		27-32-31	ALL
	21	UNUSED						ALL
	22		W0491	70N	20		29-11-14	ALL
	23		W0491	70P	20		29-11-14	ALL
	24	FM	W0491	019	16		27-32-31	ALL
D04477J		AP1501/ /		RCPT-				ALL
	1		W0587	001	20		27-41-11	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8		W0587	004Y	20		27-41-11	ALL
	9		W0587	005Y	20		27-41-11	ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D04477P		AP1501/ /		PLUG-				ALL
	1		W1251	009	22		27-41-11	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D04400
Page 40
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04477P		AP1501/ /		PLUG- (continued)				ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8		W1251	007Y	22		27-41-11	ALL
	9		W1251	008Y	22		27-41-11	ALL
	10		W1251	011	22		SPARE	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D04479J		AP1501/310/0		RCPT-				050-099, 155-199, 275-299
D04479J		AP1501/ /		RCPT-				150-154
	1		W0589	001	20		27-41-21	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8		W0589	004Y	20		27-41-21	ALL
	9		W0589	005Y	20		27-41-21	ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D04479P		AP1501/ /		PLUG-				ALL
	1		W1261	004	22		27-41-21	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8		W1261	002Y	22		27-41-21	ALL
	9		W1261	003Y	22		27-41-21	ALL
	10		W1261	006	22		SPARE	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04481J		AP1501/ /		RCPT-				ALL
	1		W0611	001	20		22-11-32	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W0611	201R	20		22-11-31	ALL
	5		W0611	201B	20		22-11-31	ALL
	6		W0611	302R	20		22-12-31	ALL
	7		W0611	302B	20		22-12-31	ALL
	8		W0611	302Y	20		22-12-31	ALL
	9		W0611	207R	20		22-12-31	ALL
	10		W0611	207B	20		22-12-31	ALL
	11		W0611	301R	20		22-12-31	ALL
	12		W0611	301B	20		22-12-31	ALL
	13		W0611	301Y	20		22-12-31	ALL
	14		W0611	002	20		22-11-32	ALL
	15	UNUSED						ALL
D04481P		AP1501/ /		PLUG-				ALL
	1		W0501	001	22		22-11-32	ALL
	2		W0501	207R	22		SPARE	ALL
	3		W0501	013	22		SPARE	ALL
	4		W0501	201R	22		22-11-31	ALL
	5		W0501	201B	22		22-11-31	ALL
	6		W0501	303R	22		22-12-31	ALL
	7		W0501	303B	22		22-12-31	ALL
	8		W0501	303Y	22		22-12-31	ALL
	9		W0501	204R	22		22-12-31	ALL
	10		W0501	204B	22		22-12-31	ALL
	11		W0501	302R	22		22-12-31	ALL
	12		W0501	302B	22		22-12-31	ALL
	13		W0501	302Y	22		22-12-31	ALL
	14		W0501	002	22		22-11-32	ALL
	15		W0501	207B	22		SPARE	ALL
D04482J		AC0701/ /		RCPT-L WING FS/BODY				ALL
	1		W0746	001	22		30-21-11	ALL
	2		W0746	301B	24		79-31-11	ALL
	3		W0746	301Y	24		79-31-11	ALL
	4		W0746	301R	24		79-31-11	ALL
	5		W0746	005	22		74-31-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04400

Page 42

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04482J		AC0701 /		RCPT-L WING FS/BODY (continued)				ALL
	6		W0746	006	22		79-35-11	ALL
	7		W0746	069	24		75-23-11	ALL
	8		W0746	077	22		30-21-11	ALL
	9		W0746	002	22		78-36-11	ALL
	10	UNUSED						050-099
	10		W0746	210B	20		SPARE	150-199, 275-299
	11	UNUSED						050-099
	11		W0746	210R	20		SPARE	150-199, 275-299
	12		W0746	065	24		75-23-11	ALL
	13		W0746	044	24		SPARE	ALL
	14		W0746	011	24		30-21-11	ALL
	15		W0746	012	22		30-21-11	ALL
	16	UNUSED						050-099, 150-199
	16		W0746	009	20		SPARE	275-299
	17		W0746	014	22		79-33-11	ALL
	18	UNUSED						050-099
	18		W0746	009	20		SPARE	150-199
	18		W0746	211B	24		SPARE	275-299
	19	UNUSED						050-099
	19		W0746	211B	24		SPARE	150-199
	19		W0746	211R	24		SPARE	275-299
	20	UNUSED						050-099, 275-299
	20		W0746	211R	24		SPARE	150-199
	21	UNUSED						ALL
	22	UNUSED						ALL
	23		W0746	302Z			73-31-11	ALL
	24		W0746	302R	24		73-31-11	ALL
	25		W0746	302B	24		73-31-11	ALL
	26		W0746	302Y	24		73-31-11	ALL
	27		W0746	01TR	20		77-31-11	050-099, 155-199, 277-299
	27		W0746	203R	20		77-31-11	150-154, 275-276
	28		W0746	01TW	20		77-31-11	050-099, 155-199, 277-299
	28		W0746	203W	20		77-31-11	150-154, 275-276
	29		W0746	01TI			77-31-11	050-099, 155-199, 277-299
	29		W0746	203Z			77-31-11	150-154, 275-276
	30		W0746	204B	24		78-36-11	ALL
	31		W0746	204R	24		78-36-11	ALL
	32		W0746	205B	24		78-36-11	ALL
	33		W0746	205R	24		78-36-11	ALL
	34		W0746	206B	24		78-36-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04400

Page 43

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04482J		AC0701/ /		RCPT-L WING FS/BODY (continued)				ALL
	35		W0746	206R	24		78-36-11	ALL
	36		W0746	207B	24		78-36-11	ALL
	37		W0746	207R	24		78-36-11	ALL
	38		W0746	020	24		78-34-11	ALL
	39		W0746	103	24		78-36-11	ALL
	40		W0746	043	24		78-36-11	ALL
	41		W0746	041	24		30-21-11	ALL
	42		W0746	022	22		SPARE	ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47		W0746	071	24		73-33-11	ALL
	48		W0746	072	24		73-33-11	ALL
	49		W0746	073	24		73-33-11	ALL
	50		W0746	066	24		75-23-11	ALL
	51		W0746	068	24		75-23-11	ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	DK	W0746	506	18		78-34-11	ALL
	55	DK	W0746	507	18		78-34-11	ALL
	= CC	D	W0746	01TO			77-31-11	050-099
	= CC	D	W0746	506Z			78-34-11	ALL
	= CC	D	W0746	507Z			78-34-11	ALL
	= CC	D	W0746	002Z			78-36-11	050-099, 275-299
	= CC	M	W0746	002Z			78-36-11	150-199
	= CC	M	W0746	01TO			77-31-11	155-199, 277-299
D04482P		AC0701/ /		PLUG-L WING FS/BODY				ALL
	1		W0406	018	20		30-21-11	ALL
	2		W0406	303B	20		79-31-11	ALL
	3		W0406	303Y	20		79-31-11	ALL
	4		W0406	303R	20		79-31-11	ALL
	5		W0406	015	20		74-31-11	ALL
	6		W0406	016	20		79-35-11	ALL
	7		W0406	058	20		75-23-11	ALL
	8		W0406	086	20		30-21-11	ALL
	9		W0406	093	20		78-36-11	ALL
	10	UNUSED						050-099
	10		W0406	230B	20		SPARE	150-199, 275-299

HOOKUP LIST

D280T132

91-21-51

Section D04400

Page 44

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04482P		AC0701 / I		PLUG-L WING FS/BODY (continued)				ALL
	11	UNUSED						050-099
	11		W0406	230R	20		SPARE	150-199, 275-299
	12		W0406	059	20		75-23-11	ALL
	13	DL	W0406	073	18		78-36-11	050-099, 150-156, 162-199, 275-299
	13	DL	W0406	073	18		SPARE	157
	14		W0406	019	20		30-21-11	ALL
	15		W0406	017	20		30-21-11	ALL
	16	UNUSED						ALL
	17		W0406	028	20		79-33-11	ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23		W0406	302Z			73-31-11	ALL
	24		W0406	302R	20		73-31-11	ALL
	25		W0406	302B	20		73-31-11	ALL
	26		W0406	302Y	20		73-31-11	ALL
	27		W0406	01TR	20		77-31-11	050-099, 155-199, 277-299
	27		W0406	203R	20		77-31-11	150-154, 275-276
	28		W0406	01TW	20		77-31-11	050-099, 155-199, 277-299
	28		W0406	203W	20		77-31-11	150-154, 275-276
	29		W0406	01TI			77-31-11	050-099, 155-199, 277-299
	29		W0406	203Z			77-31-11	150-154, 275-276
	30		W0406	204B	20		78-36-11	ALL
	31		W0406	204R	20		78-36-11	ALL
	32		W0406	205B	20		78-36-11	ALL
	33		W0406	205R	20		78-36-11	ALL
	34		W0406	206B	20		78-36-11	ALL
	35		W0406	206R	20		78-36-11	ALL
	36		W0406	207B	20		78-36-11	ALL
	37		W0406	207R	20		78-36-11	ALL
	38		W0406	060	20		78-34-11	ALL
	39	DL	W0406	130	18		78-36-11	ALL
	40	DL	W0406	072	18		78-36-11	ALL
	41		W0406	023	20		30-21-11	ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D04400

Page 45

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04482P		AC0701/ /		PLUG-L WING FS/BODY (continued)				ALL
	46	UNUSED						ALL
	47		W0406	304R	20		73-33-11	ALL
	48		W0406	304Y	20		73-33-11	ALL
	49		W0406	304B	20		73-33-11	ALL
	50		W0406	110	20		75-23-11	ALL
	51		W0406	111	20		75-23-11	ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	DL	W0406	099	18		78-34-11	ALL
	55	DL	W0406	124	18		78-34-11	ALL
	= CC	M	W0406	016Z			79-35-11	ALL
	= CC	M	W0406	028Z			79-33-11	ALL
	= CC	M	W0406	058Z			75-23-11	ALL
	= CC	M	W0406	059Z			75-23-11	ALL
	= CC	M	W0406	086Z			30-21-11	ALL
	= CC	M	W0406	093Z			78-36-11	ALL
	= CC	M	W0406	099Z			78-34-11	ALL
	= CC	M	W0406	110Z			75-23-11	ALL
	= CC	M	W0406	111Z			75-23-11	ALL
	= CC	M	W0406	124Z			78-34-11	ALL
	= CC	M	W0406	303Z			79-31-11	ALL
	= CC	M	W0406	304Z			73-33-11	ALL
	= CC	M	W0406	01TO			77-31-11	050-099, 155-199, 277-299
D04484J		AC0701/ /		RCPT-LH DISC PNL				ALL
	1		W0602	093	24		36-11-61	ALL
	2		W0602	094	24		36-11-61	ALL
	3	DK	W0602	095	18		36-11-61	ALL
	4	UNUSED						050-099
	4		W0602	008	20		SPARE	150-199, 275-299
	5	DK	W0602	096	18		36-11-61	ALL
	6		W0602	097	24		36-11-61	ALL
	7		W0602	098	24		36-11-61	ALL
	8		W0602	099	24		36-11-61	ALL
	9		W0602	191	24		36-11-61	ALL
	10		W0602	101	24		36-11-61	ALL
	11		W0602	408R	22		26-18-12	ALL
	12		W0602	009	20		SPARE	ALL
	13		W0602	010	20		SPARE	ALL
	14	UNUSED						050-099, 150-155, 162-165, 275-276

HOOKUP LIST

D280T132

91-21-51

Section D04400

Page 46

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04484J		AC0701/ /		RCPT-LH DISC PNL (continued)				ALL
	14		W0602	005	22		SPARE	156-157, 166-199, 277-299
	15	UNUSED						ALL
	16	UNUSED						ALL
	17		W0602	407R	22		26-18-12	ALL
	18		W0602	091	24		36-11-51	ALL
	19		W0602	084	24		36-11-51	ALL
	20	DK	W0602	090	18		36-11-51	ALL
	21	DK	W0602	085	18		SPARE	ALL
	22	DK	W0602	089	18		36-11-51	ALL
	23		W0602	086	24		36-11-51	ALL
	24		W0602	088	24		36-11-51	ALL
	25		W0602	087	24		36-23-11	ALL
	26		W0602	105	24		36-23-11	ALL
	27		W0602	106	24		36-23-11	ALL
	28		W0602	301B	24		36-23-11	ALL
	29		W0602	301R	24		36-23-11	ALL
	30		W0602	301Y	24		36-23-11	ALL
	31		W0602	301Z			36-23-11	ALL
	32		W0602	104	24		36-23-11	ALL
	33		W0602	103	24		36-23-11	ALL
	34		W0602	FRD			29-33-11	ALL
	35		W0602	FRE			29-33-11	ALL
	36		W0602	038	24		29-32-11	ALL
	37		W0602	048	24		29-32-11	ALL
	38		W0602	210R	20		36-22-21	ALL
	39		W0602	210B	20		36-22-21	ALL
	40		W0602	107	24		36-11-61	ALL
	41		W0602	108	24		36-11-61	ALL
	42		W0602	156	24		36-11-61	ALL
	43		W0602	032	22		29-33-11	ALL
	44		W0602	033	22		29-33-11	ALL
	45		W0602	034	22		29-33-11	ALL
	46		W0602	135	22		29-32-11	ALL
	47	UNUSED						050-099
	47		W0602	007	22		SPARE	150-199, 275-299
	48	UNUSED						050-099
	48		W0602	006	22		SPARE	150-199, 275-299
	49		W0602	192B	24		36-11-61	ALL
	50		W0602	192R	24		36-11-61	ALL
	51		W0602	136	22		29-11-12	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04400

Page 47

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04484J		AC0701/ /		RCPT-LH DISC PNL (continued)				ALL
	52	UNUSED						ALL
	53		W0602	031	22		29-33-11	ALL
	54		W0602	FRF			29-33-11	ALL
	55		W0602	004R	22		26-18-11	ALL
	CAP	Y	W0602	005	22		SPARE	150-155, 162-165, 275-276
			W0602	031Z			29-33-11	ALL
			W0602	FRD			29-33-11	ALL
			W0602	FRE			29-33-11	ALL
			W0602	FRF			29-33-11	ALL
D04484P		AC0701/ /		PLUG-L WING FS/BODY				ALL
	1		W0406	001	20		36-11-61	ALL
	2		W0406	002	20		36-11-61	ALL
	3	DL	W0406	003	18		36-11-61	ALL
	4	UNUSED						050-099
	4		W0406	081	20		SPARE	150-199, 275-299
	5	DL	W0406	005	18		36-11-61	ALL
	6		W0406	006	20		36-11-61	ALL
	7		W0406	007	20		36-11-61	ALL
	8		W0406	011	20		36-11-61	ALL
	9		W0406	117	20		36-11-61	ALL
	10		W0406	010	20		36-11-61	ALL
	11	DL	W0406	033R	18		26-18-12	ALL
	12		W0406	082	20		SPARE	ALL
	13		W0406	083	20		SPARE	ALL
	14		W0406	084	20		SPARE	ALL
	15		W0406	085	20		SPARE	ALL
	16	UNUSED						ALL
	17	DL	W0406	034R	18		26-18-12	ALL
	18		W0406	041	20		36-11-51	ALL
	19		W0406	042	20		36-11-51	ALL
	20	DL	W0406	043	18		36-11-51	ALL
	21	DL	W0406	044	18		SPARE	ALL
	22	DL	W0406	045	18		36-11-51	ALL
	23		W0406	046	20		36-11-51	ALL
	24		W0406	047	20		36-11-51	ALL
	25		W0406	048	20		36-23-11	ALL
	26		W0406	050	20		36-23-11	ALL
	27		W0406	051	20		36-23-11	ALL
	28		W0406	301B	20		36-23-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04400

Page 48

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04484P		AC0701/ /		PLUG-L WING FS/BODY (continued)				ALL
	29		W0406	301R	20		36-23-11	ALL
	30		W0406	301Y	20		36-23-11	ALL
	31		W0406	301Z			36-23-11	ALL
	32		W0406	056	20		36-23-11	ALL
	33		W0406	055	20		36-23-11	ALL
	34		W0406	FRD			29-33-11	ALL
	35		W0406	FRE			29-33-11	ALL
	36		W0406	061	20		29-32-11	ALL
	37		W0406	062	20		29-32-11	ALL
	38		W0406	231R	20		36-22-21	ALL
	39		W0406	231B	20		36-22-21	ALL
	40		W0406	008	20		36-11-61	ALL
	41		W0406	009	20		36-11-61	ALL
	42		W0406	032	20		36-11-61	ALL
	43		W0406	068	20		29-33-11	ALL
	44		W0406	069	20		29-33-11	ALL
	45		W0406	070	20		29-33-11	ALL
	46		W0406	075	20		29-32-11	ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49		W0406	245B	20		36-11-61	ALL
	50		W0406	245R	20		36-11-61	ALL
	51		W0406	089	20		29-11-12	ALL
	52	UNUSED						ALL
	53		W0406	067	20		29-33-11	ALL
	54		W0406	FRF			29-33-11	ALL
	55	DL	W0406	087R	18		26-18-11	ALL
= CC		M	W0406	245Z			36-11-61	ALL
CAP		Y	W0406	081	20		SPARE	050-099
			W0406	067Z			29-33-11	ALL
			W0406	FRD			29-33-11	ALL
			W0406	FRE			29-33-11	ALL
			W0406	FRF			29-33-11	ALL
D04486J		AC0701/ /		RCPT-L WING FS/BODY				ALL
	1		W0756	209B	24		27-88-12	ALL
	2		W0756	209R	24		27-88-12	ALL
	3		W0756	210B	24		27-88-12	ALL
	4		W0756	210R	24		27-88-12	ALL
	5		W0756	211B	24		27-88-12	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04400

Page 49

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04486J		AC0701/ /		RCPT-L WING FS/BODY (continued)				ALL
	6		W0756	211R	24		27-88-12	ALL
	7		W0756	212B	24		27-88-12	ALL
	8		W0756	212R	24		27-88-12	ALL
	9		W0756	213B	24		27-88-12	ALL
	10		W0756	213R	24		27-88-12	ALL
	11		W0756	214B	24		27-88-12	ALL
	12		W0756	214R	24		27-88-12	ALL
	13		W0756	215B	24		27-88-12	ALL
	14		W0756	215R	24		27-88-12	ALL
	15		W0756	216B	24		27-88-12	ALL
	16		W0756	216R	24		27-88-12	ALL
	17		W0756	217B	24		27-88-12	ALL
	18		W0756	217R	24		27-88-12	ALL
	19		W0756	218B	24		27-88-12	ALL
	20		W0756	218R	24		27-88-12	ALL
	21		W0756	219B	24		27-88-12	ALL
	22		W0756	219R	24		27-88-12	ALL
	23		W0756	183	20		SPARE	ALL
	24	UNUSED						ALL
	25		W0756	220B	24		27-88-12	ALL
	26		W0756	220R	24		27-88-12	ALL
	27	UNUSED						ALL
	28	DK	W0756	297B	18		78-36-11	ALL
	29		W0756	187	20		SPARE	ALL
	30		W0756	188	20		SPARE	ALL
	31	DK	W0756	298R	18		78-36-11	ALL
	32		W0756	802	22		36-22-11	ALL
	33	DK	W0756	663	18		78-36-11	ALL
	34	DK	W0756	664	18		78-36-11	ALL
	35	DK	W0756	668B	18		78-36-11	ALL
	36	DK	W0756	297R	18		78-36-11	ALL
	37	DK	W0756	668R	18		78-36-11	ALL
	38	DK	W0756	298B	18		78-36-11	ALL
	39		W0756	662	24		78-36-11	ALL
	40	DK	W0756	669B	18		78-36-11	ALL
	41	DK	W0756	669R	18		78-36-11	ALL
	42		W0756	249	22		27-89-11	ALL
	43		W0756	271	20		27-89-11	ALL
	44	UNUSED						ALL
	45	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D04400

Page 50

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04486J		AC0701/ /		RCPT-L WING FS/BODY (continued)				ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
	= CC	D	W0756	297Z			78-36-11	ALL
	= CC	D	W0756	298Z			78-36-11	ALL
	= CC	D	W0756	663Z			78-36-11	ALL
	= CC	D	W0756	664Z			78-36-11	ALL
	= CC	D	W0756	668Z			78-36-11	ALL
	= CC	D	W0756	669Z			78-36-11	ALL
	CAP	Y	W0756	185	20		SPARE	050-099
	CAP	Y	W0756	184	20		SPARE	ALL
	CAP	Y	W0756	186	20		SPARE	ALL
	CAP	Y	W0756	189	20		SPARE	ALL
D04486P		AC0701/ /		PLUG-L WING FS/BODY				ALL
	1		W0406	220B	20		27-88-12	ALL
	2		W0406	220R	20		27-88-12	ALL
	3		W0406	212B	20		27-88-12	ALL
	4		W0406	212R	20		27-88-12	ALL
	5		W0406	222B	20		27-88-12	ALL
	6		W0406	222R	20		27-88-12	ALL
	7		W0406	223B	20		27-88-12	ALL
	8		W0406	223R	20		27-88-12	ALL
	9		W0406	216B	20		27-88-12	ALL
	10		W0406	216R	20		27-88-12	ALL
	11		W0406	225B	20		27-88-12	ALL
	12		W0406	225R	20		27-88-12	ALL
	13		W0406	226B	20		27-88-12	ALL
	14		W0406	226R	20		27-88-12	ALL
	15		W0406	208B	20		27-88-12	ALL
	16		W0406	208R	20		27-88-12	ALL
	17		W0406	209B	20		27-88-12	ALL
	18		W0406	209R	20		27-88-12	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04400

Page 51

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04486P		AC0701 / I		PLUG-L WING FS/BODY (continued)				ALL
	19		W0406	227B	20		27-88-12	ALL
	20		W0406	227R	20		27-88-12	ALL
	21		W0406	211B	20		27-88-12	ALL
	22		W0406	211R	20		27-88-12	ALL
	23		W0406	101	20		SPARE	ALL
	24		W0406	801	20		SPARE	ALL
	25		W0406	228B	20		27-88-12	ALL
	26		W0406	228R	20		27-88-12	ALL
	27	UNUSED						ALL
	28	DL	W0406	248B	18		78-36-11	ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	DL	W0406	249R	18		78-36-11	ALL
	32		W0406	040	20		36-22-11	ALL
	33	DL	W0406	125	18		78-36-11	ALL
	34	DL	W0406	126	18		78-36-11	ALL
	35	DL	W0406	251B	18		78-36-11	ALL
	36	DL	W0406	248R	18		78-36-11	ALL
	37	DL	W0406	251R	18		78-36-11	ALL
	38	DL	W0406	249B	18		78-36-11	ALL
	39	DL	W0406	131	18		78-36-11	ALL
	40	DL	W0406	252B	18		78-36-11	ALL
	41	DL	W0406	252R	18		78-36-11	ALL
	42	DL	W0406	250R	18		27-89-11	ALL
	43	DL	W0406	250B	18		27-89-11	ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
	= CC	M	W0406	125Z			78-36-11	ALL
	= CC	M	W0406	126Z			78-36-11	ALL
	= CC	M	W0406	248Z			78-36-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04400

Page 52

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04486P		AC0701/ /		PLUG-L WING FS/BODY (continued)				ALL
	= CC	M	W0406	249Z			78-36-11	ALL
	= CC	M	W0406	251Z			78-36-11	ALL
	= CC	M	W0406	252Z			78-36-11	ALL
D04493J		AC0608/ /		RCPT-E5-3				050-099, 150-154, 162-164
	1		W0645	090	22		SPARE	050-099, 150-154, 162-164
	2	UNUSED						050-099, 150-154, 162-164
	3	UNUSED						050-099, 150-154, 162-164
	4	UNUSED						050-099, 150-154, 162-164
	5	UNUSED						050-099, 150-154, 162-164
	6	UNUSED						050-099, 150-154, 162-164
	7	UNUSED						050-099, 150-154, 162-164
	8	UNUSED						050-099, 150-154, 162-164
	9	UNUSED						050-099, 150-154, 162-164
	10	UNUSED						050-099, 150-154, 162-164
	11	UNUSED						050-099, 150-154, 162-164
	12	UNUSED						050-099, 150-154, 162-164
	13	UNUSED						050-099, 150-154, 162-164
	14	UNUSED						050-099, 150-154, 162-164
	15	UNUSED						050-099, 150-154, 162-164
	16	UNUSED						050-099, 150-154, 162-164
	17	UNUSED						050-099, 150-154, 162-164
	18	UNUSED						050-099, 150-154, 162-164
	19	UNUSED						050-099, 150-154, 162-164
	20	UNUSED						050-099, 150-154, 162-164
	21	UNUSED						050-099, 150-154, 162-164
	22	UNUSED						050-099, 150-154, 162-164
	23	UNUSED						050-099, 150-154, 162-164
	24	UNUSED						050-099, 150-154, 162-164
	25	UNUSED						050-099, 150-154, 162-164
	26	UNUSED						050-099, 150-154, 162-164
	27	UNUSED						050-099, 150-154, 162-164
	28	UNUSED						050-099, 150-154, 162-164
	29	UNUSED						050-099, 150-154, 162-164
	30	UNUSED						050-099, 150-154, 162-164
	31	UNUSED						050-099, 150-154, 162-164

HOOKUP LIST

D280T132

91-21-51

Section D04400

Page 53 End

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04500J		290/152/R58		RCPT-E3-1				050-099, 150-199
D04500J		AE0220/ /		RCPT-E3-1				275-299
	1		W0942	301B	24		21-53-11	ALL
	2		W0942	301R	24		21-53-11	ALL
	3		W0942	301Y	24		21-53-11	ALL
	4		W0942	302B	24		21-53-11	ALL
	5		W0942	302R	24		21-53-11	ALL
	6		W0942	302Y	24		21-53-11	ALL
	7		W0942	303B	24		21-53-11	ALL
	8		W0942	303R	24		21-53-11	ALL
	9		W0942	303Y	24		21-53-11	ALL
	10		W0942	309B	24		21-51-12	ALL
	11		W0942	309R	24		21-51-12	ALL
	12		W0942	309Y	24		21-51-12	ALL
	13		W0942	206B	24		21-51-12	ALL
	14		W0942	206R	24		21-51-12	ALL
	15		W0942	207B	22		21-51-12	ALL
	16		W0942	207R	22		21-51-12	ALL
	17		W0942	213B	24		21-52-41	ALL
	18		W0942	213R	24		21-52-41	ALL
	19		W0942	204R	22		21-51-12	ALL
	20		W0942	204B	22		21-51-12	ALL
	21		W0942	205R	22		21-51-12	ALL
	22		W0942	205B	22		21-51-12	ALL
	23		W0942	308Y	22		21-51-12	ALL
	24		W0942	308R	22		21-51-12	ALL
	25		W0942	308B	22		21-51-12	ALL
	26		W0942	306Y	22		21-51-12	ALL
	27		W0942	306R	22		21-51-12	ALL
	28		W0942	306B	22		21-51-12	ALL
	29		W0942	307Y	22		21-51-12	ALL
	30		W0942	307R	22		21-51-12	ALL
	31		W0942	307B	22		21-51-12	ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38		W0942	233B	24		21-61-51	ALL
	39		W0942	233R	24		21-61-51	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04500

Page 1

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04500J		290/152/R58		RCPT-E3-1 (continued)				050-099, 150-199
D04500J		AE0220/ /		RCPT-E3-1 (continued)				275-299
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	44		W0942	221B	24		21-52-41	ALL
	45		W0942	221R	24		21-52-41	ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51		W0942	141	24		21-51-11	ALL
	52		W0942	321B	22		SPARE	ALL
	53		W0942	321R	22		SPARE	ALL
	54		W0942	321Y	22		SPARE	ALL
	55	UNUSED						ALL
D04500P		AE0220/ /		PLUG-E3-1				ALL
	1		W0082	306B	24		21-53-11	ALL
	2		W0082	306R	24		21-53-11	ALL
	3		W0082	306Y	24		21-53-11	ALL
	4		W0082	307B	24		21-53-11	ALL
	5		W0082	307R	24		21-53-11	ALL
	6		W0082	307Y	24		21-53-11	ALL
	7		W0082	308B	24		21-53-11	ALL
	8		W0082	308R	24		21-53-11	ALL
	9		W0082	308Y	24		21-53-11	ALL
	10		W0082	305B	24		21-51-12	ALL
	11		W0082	305R	24		21-51-12	ALL
	12		W0082	305Y	24		21-51-12	ALL
	13		W0082	201B	24		21-51-12	ALL
	14		W0082	201R	24		21-51-12	ALL
	15		W0082	202B	22		21-51-12	ALL
	16		W0082	202R	22		21-51-12	ALL
	17		W0082	222B	24		21-52-41	ALL
	18		W0082	222R	24		21-52-41	ALL
	19		W0082	238R	22		21-51-12	050-099, 151-199, 275-299
	19		W0082	204R	22		21-51-12	150
	20		W0082	238B	22		21-51-12	050-099, 151-199, 275-299

HOOKUP LIST

D280T132

91-21-51

Section D04500

Page 2

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04500P		AE0220/ /		PLUG-E3-1 (continued)				ALL
	20		W0082	204B	22		21-51-12	150
	21		W0082	205R	22		21-51-12	ALL
	22		W0082	205B	22		21-51-12	ALL
	23		W0082	304Y	22		21-51-12	ALL
	24		W0082	304R	22		21-51-12	ALL
	25		W0082	304B	22		21-51-12	ALL
	26		W0082	303Y	22		21-51-12	ALL
	27		W0082	303R	22		21-51-12	ALL
	28		W0082	303B	22		21-51-12	ALL
	29		W0082	302Y	22		21-51-12	ALL
	30		W0082	302R	22		21-51-12	ALL
	31		W0082	302B	22		21-51-12	ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38		W0082	236B	24		21-61-51	ALL
	39		W0082	236R	24		21-61-51	ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	44		W0082	223B	24		21-52-41	ALL
	45		W0082	223R	24		21-52-41	ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51		W0082	130	24		21-51-11	ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
D04501J		AF0119/ /		RCPT-P1				ALL
	1		W0461	001	22		22-11-32	ALL
	2		W0461	002	22		22-11-32	ALL

HOOKUP LIST
D280T132

91-21-51
Section D04500
Page 3
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04501J		AF0119/ /		RCPT-P1 (continued)				ALL
	3		W0461	201R	24		22-12-31	ALL
	4		W0461	201B	24		22-12-31	ALL
	5		W0461	201Z			22-12-31	ALL
	6	UNUSED						ALL
	7		W0461	009	22		SPARE	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D04501P		AF0119/ /		PLUG-P1				ALL
	1		W0011	769	22		22-11-32	ALL
	2		W0011	770	22		22-11-32	ALL
	3		W0011	515R	24		22-12-31	ALL
	4		W0011	515B	24		22-12-31	ALL
	5		W0011	515Z			22-12-31	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	DED		W0011	769Z			22-11-32	ALL
	DED		W0011	770Z			22-11-32	ALL
D04502J		AE0220/ /		RCPT-E3-1				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W0510	176	24		36-23-11	ALL
	7		W0510	177	24		36-23-11	ALL
	8		W0510	178	24		36-23-11	ALL
	9		W0510	179	24		36-23-11	ALL
	10		W0510	180	24		36-23-11	ALL
	11		W0510	175	24		36-23-11	ALL
	12		W0510	222R	24		36-23-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04500

Page 4

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04502J		AE0220/ /		RCPT-E3-1 (continued)				ALL
	13		W0510	222B	24		36-23-11	ALL
	14		W0510	803	22		SPARE	ALL
	15		W0510	804	22		SPARE	ALL
	16		W0510	303Z			36-23-11	ALL
	17		W0510	303B	24		36-23-11	ALL
	18		W0510	303R	24		36-23-11	ALL
	19		W0510	303Y	24		36-23-11	ALL
	20		W0510	208R	24		21-51-11	ALL
	21		W0510	208B	24		21-51-11	ALL
	22		W0510	120	22		21-51-11	ALL
	23		W0510	707	24		21-51-11	ALL
	24		W0510	215B	24		21-61-51	ALL
	25		W0510	215R	24		21-61-51	ALL
	26	UNUSED						050-099
	26		W0510	008	24		21-51-11	150-199, 275-299
	27	UNUSED						050-099
	27		W0510	009	24		21-51-11	150-199, 275-299
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
D04502P		AE0220/ /		PLUG-E3-1				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W0082	070	24		36-23-11	ALL
	7		W0082	071	24		36-23-11	ALL
	8		W0082	072	24		36-23-11	ALL
	9		W0082	073	22		36-23-11	ALL
	10		W0082	074	24		36-23-11	ALL
	11		W0082	102	24		36-23-11	ALL
	12		W0082	239R	24		36-23-11	050-099, 156-162, 166-199, 277-299
	12	UNUSED						150-155, 163-165, 275-276
	13		W0082	239B	24		36-23-11	050-099, 156-162, 166-199, 277-299
	13	UNUSED						150-155, 163-165, 275-276
	14	UNUSED						ALL
	15	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D04500
Page 5
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04502P		AE0220/ /		PLUG-E3-1 (continued)				ALL
	16		W0082	312Z			36-23-11	ALL
	17		W0082	312B	24		36-23-11	ALL
	18		W0082	312R	24		36-23-11	ALL
	19		W0082	312Y	24		36-23-11	ALL
	20		W0082	225R	24		21-51-11	ALL
	21		W0082	225B	24		21-51-11	ALL
	22		W0082	117	22		21-51-11	ALL
	23		W0082	116	24		21-51-11	ALL
	24		W0082	237B	24		21-61-51	ALL
	25		W0082	237R	24		21-61-51	ALL
	26	UNUSED						050-099
	26		W0082	126	24		21-51-21	150-199, 275-299
	27	UNUSED						050-099
	27		W0082	127	24		21-51-21	150-199, 275-299
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	DED		W0082	102Z			36-23-11	ALL
D04504J		AE0220/ /		RCPT-E3-1				ALL
	1		W0506	711	24		21-61-11	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W0506	715	24		21-61-11	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W0506	590	22		36-11-52	ALL
	8		W0506	591	22		36-11-52	ALL
	9		W0506	712	24		21-61-21	ALL
	10	UNUSED						ALL
	11		W0506	501	24		21-61-11	ALL
	12		W0506	503	24		21-61-11	ALL
	13		W0506	205B	24		21-61-11	ALL
	14		W0506	205R	24		21-61-11	ALL
	15		W0506	301B	24		21-61-11	ALL
	16		W0506	301R	24		21-61-11	ALL
	17		W0506	301Y	24		21-61-11	ALL
	18		W0506	510	24		21-61-21	ALL
	19		W0506	512	24		21-61-21	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04500

Page 6

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04504J		AE0220/ /		RCPT-E3-1 (continued)				ALL
	20		W0506	206B	24		21-61-21	ALL
	21		W0506	206R	24		21-61-21	ALL
	22		W0506	302B	24		21-61-21	ALL
	23		W0506	302R	24		21-61-21	ALL
	24		W0506	302Y	24		21-61-21	ALL
	25		W0506	519	24		21-61-31	ALL
	26		W0506	521	24		21-61-31	ALL
	27		W0506	207B	24		21-61-31	ALL
	28		W0506	207R	24		21-61-31	ALL
	29		W0506	303B	24		21-61-31	ALL
	30		W0506	303R	24		21-61-31	ALL
	31		W0506	303Y	24		21-61-31	ALL
	32		W0506	522	24		21-61-11	ALL
	33		W0506	523	24		21-61-11	ALL
	34		W0506	524	24		21-61-21	ALL
	35		W0506	525	24		21-61-21	ALL
	36		W0506	526	24		21-61-31	ALL
	37		W0506	527	24		21-61-31	ALL
	38		W0506	208B	22		21-61-51	ALL
	39		W0506	208R	22		21-61-51	ALL
	40		W0506	716	24		21-61-21	ALL
	41	UNUSED						ALL
	42		W0506	717	24		21-61-31	ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46		W0506	543	24		36-11-52	ALL
	47	DK	W0506	544	18		36-11-52	ALL
	48	DK	W0506	545	18		36-11-52	ALL
	49		W0506	546	24		36-11-52	ALL
	50		W0506	548	24		36-11-52	ALL
	51		W0506	550	24		36-11-52	ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						050-099, 155-199, 276-299
	54	DK	W0506	547	18		SPARE	150-154, 275
	55		W0506	713	24		21-61-31	ALL
D04504P		AE0220/ /		PLUG-E3-1				ALL
	1		W0084	139	24		21-61-11	ALL

HOOKUP LIST
D280T132

91-21-51
Section D04500
Page 7
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04504P		AE0220 / /		PLUG-E3-1 (continued)				ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W0084	140	24		21-61-11	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W0084	100	20		36-11-52	ALL
	8		W0084	101	20		36-11-52	ALL
	9		W0084	141	24		21-61-21	ALL
	10	UNUSED						ALL
	11		W0084	023	24		21-61-11	ALL
	12		W0084	024	24		21-61-11	ALL
	13		W0084	208B	24		21-61-11	ALL
	14		W0084	208R	24		21-61-11	ALL
	15		W0084	308B	24		21-61-11	ALL
	16		W0084	308R	24		21-61-11	ALL
	17		W0084	308Y	24		21-61-11	ALL
	18		W0084	025	24		21-61-21	ALL
	19		W0084	026	24		21-61-21	ALL
	20		W0084	211B	24		21-61-21	ALL
	21		W0084	211R	24		21-61-21	ALL
	22		W0084	311B	24		21-61-21	ALL
	23		W0084	311R	24		21-61-21	ALL
	24		W0084	311Y	24		21-61-21	ALL
	25		W0084	031	24		21-61-31	ALL
	26		W0084	032	24		21-61-31	ALL
	27		W0084	214B	24		21-61-31	ALL
	28		W0084	214R	24		21-61-31	ALL
	29		W0084	313B	24		21-61-31	ALL
	30		W0084	313R	24		21-61-31	ALL
	31		W0084	313Y	24		21-61-31	ALL
	32		W0084	029	24		21-61-11	ALL
	33		W0084	030	24		21-61-11	ALL
	34		W0084	028	24		21-61-21	ALL
	35		W0084	027	24		21-61-21	ALL
	36		W0084	033	24		21-61-31	ALL
	37		W0084	144	24		21-61-31	ALL
	38		W0084	222B	22		21-61-51	ALL
	39		W0084	222R	22		21-61-51	ALL
	40		W0084	142	24		21-61-21	ALL
	41	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D04500

Page 8

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04504P		AE0220/ /		PLUG-E3-1 (continued)				ALL
	42		W0084	143	24		21-61-31	ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46		W0084	078	24		36-23-21	ALL
	47		W0084	089	24		36-23-21	ALL
	48		W0084	090	24		36-23-21	ALL
	49		W0084	079	24		36-23-21	ALL
	50		W0084	080	24		36-23-21	ALL
	51		W0084	081	24		36-23-21	ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						050-099, 155-199, 276-299
	54	DL	W0084	040	18		SPARE	150-154, 275
	55		W0084	034	24		21-61-31	ALL
D04505J		AE0322/ /		RCPT-E2-3				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W0855	201R	22		34-12-21	ALL
	5		W0855	201B	22		34-12-21	ALL
	6		W0855	301R	24		34-12-21	ALL
	7		W0855	301B	24		34-12-21	ALL
	8		W0855	301Y	24		34-12-21	ALL
	9		W0855	202R	24		34-13-21	ALL
	10		W0855	202B	24		34-13-21	ALL
	11		W0855	202Z			34-13-21	ALL
	12		W0855	204R	24		34-61-24	ALL
	13		W0855	204B	24		34-61-24	ALL
	14		W0855	204Z			34-61-24	ALL
	15		W0855	205R	24		SPARE	ALL
	16		W0855	205B	24		SPARE	ALL
	17		W0855	205Z			SPARE	ALL
	18	UNUSED						ALL
	19		W0855	014	22		34-12-62	ALL
	20		W0855	015	22		34-12-62	ALL
	21	UNUSED						050-099, 155-199
	21		W0855	203R	24		SPARE	150-154, 275-299
	22	UNUSED						050-099, 155-199

HOOKUP LIST
D280T132

91-21-51
Section D04500
Page 9
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04505J		AE0322/ /		RCPT-E2-3 (continued)				ALL
	22		W0855	203B	24		SPARE	150-154, 275-299
	23	UNUSED						050-099, 155-199
	23		W0855	203Z			SPARE	150-154, 275-299
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27		W0855	034	24		32-42-11	ALL
	28		W0855	028	22		34-12-62	ALL
	29		W0855	029	22		34-61-26	050-099
	29		W0855	029	24		34-61-26	150-199, 275-299
	30		W0855	030	22		34-61-24	ALL
	31		W0855	031	24		34-12-22	ALL
	32		W0855	032	22		34-61-21	ALL
	33		W0855	213R	24		22-14-21	ALL
	34		W0855	213B	24		22-14-21	ALL
	35	UNUSED						050-099, 155-199
	35		W0855	209R	24		SPARE	150-154, 275-299
	36	UNUSED						050-099, 155-199
	36		W0855	209B	24		SPARE	150-154, 275-299
	37	UNUSED						050-099, 155-199
	37		W0855	209Z			SPARE	150-154, 275-299
	38		W0855	213Z			22-14-21	ALL
	39		W0855	039	24		34-61-26	ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43		W0855	063	24		31-31-18	ALL
	44		W0855	064	24		31-31-18	ALL
	45		W0855	055	24		31-31-18	ALL
	46		W0855	066	24		31-31-18	ALL
	47		W0855	057	24		31-31-18	ALL
	48		W0855	078	24		31-31-18	ALL
	49		W0855	059	22		31-31-18	ALL
	50		W0855	060	24		31-31-18	ALL
	51		W0855	007	24		31-31-19	ALL
	52		W0855	035	24		31-31-19	ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55		W0855	065	24		31-31-18	ALL
	REF	JB	W0855	206B	24		SPARE	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04500

Page 10

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04505J		AE0322/ /		RCPT-E2-3 (continued)				ALL
	REF	JB	W0855	206R	24		SPARE	ALL
	REF	JB	W0855	206Z			SPARE	ALL
D04505P		AE0322/ /		PLUG-E2-3				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W0145	524R	22		34-12-21	ALL
	5		W0145	524B	22		34-12-21	ALL
	6		W0145	378R	24		34-12-21	ALL
	7		W0145	378B	24		34-12-21	ALL
	8		W0145	378Y	24		34-12-21	ALL
	9		W0145	572R	24		34-13-21	ALL
	10		W0145	572B	24		34-13-21	ALL
	11		W0145	572Z			34-13-21	ALL
	12		W0145	230R	24		34-61-24	ALL
	13		W0145	230B	24		34-61-24	ALL
	14		W0145	230Z			34-61-24	ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19		W0145	885	22		34-12-62	ALL
	20		W0145	01C	22		34-12-62	ALL
	21	UNUSED						050-099, 155-199, 275-299
	21		W0145	277R	24		SPARE	150-154
	22	UNUSED						050-099, 155-199, 275-299
	22		W0145	277B	24		SPARE	150-154
	23	UNUSED						050-099, 155-199, 275-299
	23		W0145	277Z			SPARE	150-154
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27		W0145	154	24		32-42-11	ALL
	28		W0145	101	22		34-12-62	ALL
	29		W0145	653	24		34-61-26	ALL
	30		W0145	191	22		34-61-24	ALL
	31		W0145	803	24		34-12-22	ALL
	32		W0145	003	24		34-61-21	ALL
	33		W0145	280R	24		22-14-21	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04500

Page 11

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04505P		AE0322/ /		PLUG-E2-3 (continued)				ALL
	34		W0145	280B	24		22-14-21	ALL
	35	UNUSED						050-099, 155-199, 275-299
	35		W0145	276R	24		SPARE	150-154
	36	UNUSED						050-099, 155-199, 275-299
	36		W0145	276B	24		SPARE	150-154
	37	UNUSED						050-099, 155-199, 275-299
	37		W0145	276Z			SPARE	150-154
	38		W0145	280Z			22-14-21	ALL
	39		W0145	197	24		34-61-26	ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43		W0145	183	24		31-31-18	ALL
	44		W0145	184	24		31-31-18	ALL
	45		W0145	181	24		31-31-18	ALL
	46		W0145	182	24		31-31-18	ALL
	47		W0145	177	24		31-31-18	ALL
	48		W0145	185	24		31-31-18	ALL
	49		W0145	179	22		31-31-18	ALL
	50		W0145	180	24		31-31-18	ALL
	51		W0145	195	24		31-31-19	ALL
	52		W0145	196	24		31-31-19	ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55		W0145	178	24		31-31-18	ALL
D04507J		AE0208/ /		RCPT-P51				ALL
	1		W0045	887	24		31-51-21	ALL
	2		W0045	736	24		34-16-11	ALL
	3		W0045	886	24		31-51-21	ALL
	4	UNUSED						ALL
	5		W0045	180	24		31-51-21	ALL
	6		W0045	715	24		31-51-42	ALL
	7		W0045	735	24		34-16-11	ALL
	8		W0045	213B	24		34-16-11	ALL
	9		W0045	213R	24		34-16-11	ALL
	10		W0045	681	24		31-51-43	ALL
	11		W0045	204R	24		27-32-11	ALL
	12		W0045	204B	24		27-32-11	ALL
			W0045	204	20		27-32-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04500

Page 12

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04507J		AE0208/ /		RCPT-P51 (continued)				ALL
			W0045	204Z			27-32-11	ALL
			W0045	213	20		34-16-11	ALL
			W0045	213Z			34-16-11	ALL
D04507P		AE0208/ /		PLUG-P51				ALL
	1		W1311	017	24		31-31-22	050-099, 275-299
	1		W1311	017	24		31-31-18	150-199
	2		W1311	009	24		34-16-11	ALL
	3		W1311	006	24		31-51-21	ALL
	4		W1311	018	22		SPARE	ALL
	5		W1311	005	24		31-51-21	ALL
	6		W1311	007	24		31-51-42	ALL
	7		W1311	035	24		34-13-21	ALL
	8		W1311	201B	24		22-14-11	ALL
	9		W1311	201R	24		22-14-11	ALL
	10		W1311	004	24		31-51-43	ALL
	11		W1311	214R	24		27-32-11	ALL
	12		W1311	214B	24		27-32-11	ALL
			W1311	015	20		22-14-11	ALL
			W1311	201Z			22-14-11	ALL
			W1311	214	20		27-32-11	ALL
			W1311	214Z			27-32-11	ALL
D04509J		AE0208/ /		RCPT-P51				ALL
	1		W0045	151	24		27-32-11	ALL
	2		W0045	718	24		31-51-42	ALL
	3		W0045	790	24		31-51-33	ALL
	4		W0045	707	24		31-51-41	ALL
	5	UNUSED						ALL
	6		W0045	153	24		27-32-11	ALL
	7		W0045	154	20		27-32-11	ALL
	8		W0045	176	24		27-32-21	ALL
	9		W0045	792	24		31-51-33	ALL
	10		W0045	791	24		31-51-33	ALL
	11		W0045	789	24		31-51-33	ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D04500

Page 13

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04509P		AE0208/ /		PLUG-P51 WARN ELEX UNIT				ALL
	1		W1271	003	24		27-32-11	ALL
	2		W1271	018	24		31-51-42	ALL
	3		W1271	005	22		31-51-33	ALL
	4		W1271	032	24		31-51-41	ALL
	5	UNUSED						ALL
	6		W1271	201R	24		27-32-11	ALL
	7		W1271	201B	24		27-32-11	ALL
	8		W1271	024	24		27-32-21	ALL
	9		W1271	023	24		31-51-33	ALL
	10		W1271	022	24		31-51-33	ALL
	11		W1271	026	22		31-51-33	ALL
	12	UNUSED						ALL
	13		W1271	035	22		SPARE	ALL
	14		W1271	017	24		SPARE	ALL
	15		W1271	006	24		SPARE	ALL
D04511J		AE0208/ /		RCPT-P51				ALL
	1	UNUSED						ALL
	2		W0045	156	24		27-32-11	ALL
	3		W0045	155	24		27-32-11	ALL
	4		W0045	157	24		27-32-11	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W0045	167	24		27-32-21	ALL
	8		W0045	168	20		27-32-21	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11		W0045	723	24		31-51-42	ALL
	12		W0045	705	24		31-51-41	ALL
	13		W0045	173	24		27-32-21	ALL
	14		W0045	704	24		31-51-41	ALL
	15		W0045	175	24		27-32-21	ALL
	16		W0045	174	24		27-32-21	ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						050-099, 150-199
	22		W0045	249R	24		32-45-11	275-299

HOOKUP LIST

D280T132

91-21-51

Section D04500

Page 14

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04511J		AE0208/ /		RCPT-P51 (continued)				ALL
	23	UNUSED						050-099, 150-199
	23		W0045	249B	24		32-45-11	275-299
	24	UNUSED						050-099, 150-199
	24		W0045	249Z			32-45-11	275-299
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
D04511P		AE0208/ /		PLUG-P51				ALL
	1	UNUSED						ALL
	2		W1287	002	24		27-32-11	ALL
	3		W1287	003	24		27-32-11	ALL
	4		W1287	004	24		27-32-11	ALL
	5		W1287	010	24		SPARE	ALL
	6		W1287	011	24		SPARE	ALL
	7		W1287	201R	24		27-32-21	ALL
	8		W1287	201B	24		27-32-21	ALL
	9	UNUSED						ALL
	10		W1287	016	24		SPARE	ALL
	11		W1287	014	24		31-51-42	ALL
	12		W1287	015	24		31-51-41	ALL
	13		W1287	017	24		27-32-21	ALL
	14		W1287	008	24		31-51-41	ALL
	15		W1287	019	24		27-32-21	ALL
	16		W1287	018	24		27-32-21	ALL
	17	UNUSED						ALL
	18		W1287	012	24		SPARE	ALL
	19		W1287	013	24		SPARE	ALL
	20		W1287	020	24		SPARE	050-099
	20	UNUSED						150-199, 275-299
	21		W1287	021	24		SPARE	050-099
	21	UNUSED						150-199, 275-299
	22	UNUSED						050-099, 150-199
	22		W1287	247R	24		32-45-11	275-299
	23	UNUSED						050-099, 150-199
	23		W1287	247B	24		32-45-11	275-299

HOOKUP LIST
D280T132

91-21-51
Section D04500
Page 15
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04511P		AE0208/ /		PLUG-P51 (continued)				ALL
	24	UNUSED						050-099, 150-199
	24		W1287	247Z			32-45-11	275-299
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
D04513J		AF0113/ /		RCPT-P1-3				ALL
	1		W0013	057	24		22-14-11	ALL
	2		W0013	160R	22		26-11-11	ALL
	3		W0013	030	22		32-41-11	ALL
	4		W0013	078	20		33-13-11	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10		W0013	166	24		33-16-11	ALL
	11		W0013	163	24		33-16-11	ALL
	12		W0013	164	24		33-16-11	ALL
	13		W0013	165	24		33-16-11	ALL
	14		W0013	081	22		33-16-13	ALL
	15		W0013	082	22		33-16-13	ALL
	16		W0013	085	22		33-16-13	ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	DED		W0013	030Z			32-41-11	ALL
	DED		W0013	057Z			22-14-11	ALL
	DED		W0013	081Z			33-16-13	ALL
	DED		W0013	082Z			33-16-13	ALL
	DED		W0013	085Z			33-16-13	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04500

Page 16

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04513J		AF0113/ /		RCPT-P1-3 (continued)				ALL
	DED		W0013	163Z			33-16-11	ALL
	DED		W0013	164Z			33-16-11	ALL
	DED		W0013	165Z			33-16-11	ALL
D04513P		AF0113/ /		PLUG-P1-3				ALL
	1		W0051	001	24		22-14-11	ALL
	2		W0051	031R	22		26-11-11	ALL
	3		W0051	039	22		32-41-11	ALL
	4		W0051	070	20		33-13-11	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10		W0051	090	20		33-16-11	ALL
	11		W0051	091	24		33-16-11	ALL
	12		W0051	092	24		33-16-11	ALL
	13		W0051	093	20		33-16-11	ALL
	14		W0051	097	22		33-16-13	ALL
	15		W0051	098	22		33-16-13	ALL
	16		W0051	099	22		33-16-13	ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	DED		W0051	001Z			22-14-11	ALL
	DED		W0051	039Z			32-41-11	ALL
	DED		W0051	099Z			33-16-13	ALL
D04515J		AF0116/ /		RCPT-P3-1				ALL
	1	DL	W0035	097	18		32-35-11	ALL
	2	DL	W0035	070	18		32-35-11	ALL
	3	DL	W0035	068	18		32-35-11	ALL
	4	DL	W0035	071	18		32-35-11	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D04500

Page 17

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04515J		AF0116/ /		RCPT-P3-1 (continued)				ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	DL	W0035	015	18		33-13-13	ALL
	10		W0035	044	22		33-16-15	ALL
	11		W0035	051	22		33-16-15	ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15		W0035	092R	22		26-17-11	ALL
	16		W0035	036	22		33-16-15	ALL
	17	UNUSED						ALL
	18		W0035	103	22		34-22-36	ALL
	19		W0035	104	20		34-22-36	ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	DED		W0035	036Z			33-16-15	ALL
	DED		W0035	070Z			32-35-11	ALL
	DED		W0035	071Z			32-35-11	ALL
	DED		W0035	097Z			32-35-11	ALL
	DED		W0035	103Z			34-22-36	ALL
	DED		W0035	104Z			34-22-36	ALL
D04515P		AF0116/ /		PLUG-P3-1				ALL
	1	DK	W0051	126	18		32-35-11	ALL
	2	DK	W0051	035	18		32-35-11	ALL
	3	DK	W0051	036	18		32-35-11	ALL
	4	DK	W0051	037	18		32-35-11	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	DK	W0051	077	18		33-13-13	ALL
	10		W0051	102	22		33-16-15	ALL
	11		W0051	101	22		33-16-15	ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D04500

Page 18

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04515P		AF0116/ /		PLUG-P3-1 (continued)				ALL
	15		W0051	110R	22		26-17-11	ALL
	16		W0051	108	22		33-16-15	ALL
	17	UNUSED						ALL
	18		W0051	141	22		34-22-36	ALL
	19		W0051	142	20		34-22-36	ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	DED		W0051	036Z			32-35-11	ALL
	DED		W0051	108Z			33-16-15	ALL
D04517J		AE0305/125/L38		RCPT-E1-5				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9		W0511	204R	24		34-22-28	ALL
	10		W0511	204B	24		34-22-28	ALL
	11		W0511	204Z			34-22-28	ALL
	12		W0511	010	22		SPARE	050-099
	12	UNUSED						150-199, 275-299
	13		W0511	011	24		SPARE	050-099
	13	UNUSED						150-199, 275-299
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D04500
Page 19
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04517P		AE0305/ /		PLUG-E1-5				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9		W0109	202R	24		34-22-28	ALL
	10		W0109	202B	24		34-22-28	ALL
	11		W0109	202Z			34-22-28	ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D04519J		AP1501/ /		RCPT-				ALL
	1		W0593	210R	20		22-13-11	ALL
	2		W0593	210B	20		22-13-11	ALL
	3		W0593	006	20		22-11-12	ALL
	4	UNUSED						ALL
	5	DL	W0593	011	18		27-21-11	ALL
	6	UNUSED						ALL
	7		W0593	202R	20		22-11-11	ALL
	8		W0593	202B	20		22-11-11	ALL
	9		W0593	007	20		22-11-12	ALL
	10		W0593	303R	20		22-13-11	ALL
	11		W0593	303B	20		22-13-11	ALL
	12		W0593	303Y	20		22-13-11	ALL
	13		W0593	304R	20		22-13-11	ALL
	14		W0593	304B	20		22-13-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04500

Page 20

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04519J		AP1501 / /		RCPT- (continued)				ALL
	15		W0593	304Y	20		22-13-11	ALL
D04519P		AP1501 / /		PLUG-				ALL
	1		W0491	205R	22		22-13-11	ALL
	2		W0491	205B	22		22-13-11	ALL
	3		W0491	003	22		22-11-12	ALL
	4		W0491	009	20		SPARE	ALL
	5		W0491	014	20		27-21-11	ALL
	6		W0491	016	20		SPARE	ALL
	7		W0491	202R	22		22-11-11	ALL
	8		W0491	202B	22		22-11-11	ALL
	9		W0491	004	22		22-11-12	ALL
	10		W0491	304R	22		22-13-11	ALL
	11		W0491	304B	22		22-13-11	ALL
	12		W0491	304Y	22		22-13-11	ALL
	13		W0491	305R	22		22-13-11	ALL
	14		W0491	305B	22		22-13-11	ALL
	15		W0491	305Y	22		22-13-11	ALL
D04523J		AP1501 / /		RCPT-				ALL
	1		W0597	210R	20		22-13-31	ALL
	2		W0597	210B	20		22-13-31	ALL
	3		W0597	006	20		22-11-32	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W0597	202R	20		22-11-31	ALL
	8		W0597	202B	20		22-11-31	ALL
	9		W0597	007	20		22-11-32	ALL
	10		W0597	303R	20		22-13-31	ALL
	11		W0597	303B	20		22-13-31	ALL
	12		W0597	303Y	20		22-13-31	ALL
	13		W0597	304R	20		22-13-31	ALL
	14		W0597	304B	20		22-13-31	ALL
	15		W0597	304Y	20		22-13-31	ALL
D04523P		AP1501 / /		PLUG-				ALL
	1		W0501	205R	22		22-13-31	ALL
	2		W0501	205B	22		22-13-31	ALL
	3		W0501	003	22		22-11-32	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04500

Page 21

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04523P		AP1501 / /		PLUG- (continued)				ALL
	4		W0501	009	22		SPARE	ALL
	5		W0501	206R	22		SPARE	ALL
	6		W0501	206B	22		SPARE	ALL
	7		W0501	202R	22		22-11-31	ALL
	8		W0501	202B	22		22-11-31	ALL
	9		W0501	004	22		22-11-32	ALL
	10		W0501	304R	22		22-13-31	ALL
	11		W0501	304B	22		22-13-31	ALL
	12		W0501	304Y	22		22-13-31	ALL
	13		W0501	305R	22		22-13-31	ALL
	14		W0501	305B	22		22-13-31	ALL
	15		W0501	305Y	22		22-13-31	ALL
D04524J		AC0701 / /		RCPT-L WING FS/BODY				ALL
	1	UNUSED						ALL
	2		W0744	002	24		73-34-11	ALL
	3		W0744	003	22		SPARE	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W0744	006	22		SPARE	050-099
	6	UNUSED						150-199, 275-299
	7		W0744	007	24		SPARE	050-099
	7		W0744	060	24		SPARE	150-199
	7	UNUSED						275-299
	8		W0744	008	24		SPARE	050-099
	8		W0744	061	24		SPARE	150-199
	8	UNUSED						275-299
	9		W0744	009	22		29-11-11	ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12		W0744	012	22		74-31-11	ALL
	13		W0744	303R	24		79-32-11	ALL
	14		W0744	303Y	24		79-32-11	ALL
	15		W0744	303B	24		79-32-11	ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	DK	W0744	104	18		78-34-11	050-099, 150-156, 162-166, 275-276
	18	DK	W0744	104	18		SPARE	157, 167-199, 277-299
	19	UNUSED						ALL
	20	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D04500

Page 22

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04524J		AC0701 / I		RCPT-L WING FS/BODY (continued)				ALL
	21		W0744	036	20		SPARE	ALL
	22		W0744	037	20		SPARE	ALL
	23		W0744	201B	24		78-34-11	ALL
	24		W0744	201R	24		78-34-11	ALL
	25		W0744	202B	24		78-34-11	ALL
	26		W0744	202R	24		78-34-11	ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30		W0744	095	24		36-11-61	ALL
	31		W0744	096	24		36-11-61	ALL
	32		W0744	097	24		36-11-61	ALL
	33	DK	W0744	115	18		78-34-11	ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37		W0744	211R	24		SPARE	050-099
	37	UNUSED						150-199, 275-299
	38		W0744	211B	24		SPARE	050-099
	38	UNUSED						150-199, 275-299
	39		W0744	211Z			SPARE	050-099
	39	UNUSED						150-199, 275-299
	40	UNUSED						050-099
	40		W0744	025	20		SPARE	150-199, 275-299
	41		W0744	004	22		SPARE	ALL
	42	DK	W0744	014	18		36-11-61	ALL
	43	DK	W0744	023	18		36-11-61	ALL
	44		W0744	043	24		36-11-61	ALL
	45	DK	W0744	113	18		78-34-11	ALL
	46	DK	W0744	114	18		78-34-11	ALL
	47	DK	W0744	116	18		78-34-11	ALL
	48	DK	W0744	117	18		78-34-11	ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
	= CC	D	W0744	113Z			78-34-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04500

Page 23

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04524J		AC0701/ /		RCPT-L WING FS/BODY (continued)				ALL
	= CC	D	W0744	114Z			78-34-11	ALL
	= CC	D	W0744	115Z			78-34-11	ALL
	= CC	D	W0744	116Z			78-34-11	ALL
	= CC	D	W0744	117Z			78-34-11	ALL
D04524P		AC0701/ /		PLUG-L WING FS/BODY				ALL
	1	UNUSED						ALL
	2		W0416	002	20		73-34-11	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	DL	W0416	009	18		29-11-11	ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12		W0416	012	20		74-31-11	ALL
	13		W0416	303R	20		79-32-11	ALL
	14		W0416	303Y	20		79-32-11	ALL
	15		W0416	303B	20		79-32-11	ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	DL	W0416	011	18		SPARE	ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21		W0416	023	20		SPARE	ALL
	22		W0416	205R	20		SPARE	ALL
	23		W0416	201B	20		78-34-11	ALL
	24		W0416	201R	20		78-34-11	ALL
	25		W0416	202B	20		78-34-11	ALL
	26		W0416	202R	20		78-34-11	ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30		W0416	103	20		36-11-61	ALL
	31		W0416	104	20		36-11-61	ALL
	32		W0416	105	20		36-11-61	ALL
	33	DL	W0416	108	18		78-34-11	ALL
	34	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D04500

Page 24

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04524P		AC0701/ /		PLUG-L WING FS/BODY (continued)				ALL
	35	UNUSED						ALL
	36		W0416	205B	20		SPARE	ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	DL	W0416	038	18		36-11-61	ALL
	43	DL	W0416	039	18		36-11-61	ALL
	44		W0416	040	20		36-11-61	ALL
	45	DL	W0416	106	18		78-34-11	ALL
	46	DL	W0416	107	18		78-34-11	ALL
	47	DL	W0416	110	18		78-34-11	ALL
	48	DL	W0416	111	18		78-34-11	ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
	= CC	M	W0416	002Z			73-34-11	ALL
	= CC	M	W0416	106Z			78-34-11	ALL
	= CC	M	W0416	107Z			78-34-11	ALL
	= CC	M	W0416	108Z			78-34-11	ALL
	= CC	M	W0416	110Z			78-34-11	ALL
	= CC	M	W0416	111Z			78-34-11	ALL
	= CC	M	W0416	303Z			79-32-11	ALL
D04525J		AE0305/ /		RCPT-E1-5				ALL
	1		W1503	207R	24		34-46-11	ALL
	2		W1503	207B	24		34-46-11	ALL
	3		W1503	207Z			34-46-11	ALL
	4		W1503	044	22		34-46-12	ALL
	5	UNUSED						ALL
	6		W1503	006	24		34-46-12	050-099, 150-199, 275-278
	6		W1503	006	24		SPARE	280-299
	7		W1503	007	24		SPARE	ALL
	8		W1503	008	24		34-22-16	ALL
	9		W1503	208R	24		SPARE	050-099, 150-199, 275-278

HOOKUP LIST
D280T132

91-21-51
Section D04500
Page 25
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04525J		AE0305/ /		RCPT-E1-5 (continued)				ALL
	9		W1503	208R	24		34-46-12	280-299
	10		W1503	208B	24		SPARE	ALL
	11		W1503	208Z			SPARE	050-099, 150-199, 275-278
	11		W1503	208Z			34-46-12	280-299
	12		W1503	900R	24		34-46-11	050-099, 150-166, 275-299
	12	UNUSED						167-199
	13		W1503	900B	24		34-46-11	050-099, 150-166, 275-299
	13	UNUSED						167-199
	14		W1503	900Z			34-46-11	050-099, 150-166, 275-299
	14	UNUSED						167-199
	15	UNUSED						ALL
	16	UNUSED						ALL
	17		W1503	017	24		22-41-11	ALL
	18		W1503	210R	24		22-41-12	ALL
	19		W1503	210B	24		22-41-12	ALL
	20		W1503	210Z			22-41-12	ALL
	21		W1503	211R	24		34-46-11	ALL
	22		W1503	211B	24		34-46-11	ALL
	23		W1503	211Z			34-46-11	ALL
	24		W1503	010	22		34-22-16	ALL
	25		W1503	213R	24		34-22-19	ALL
	26		W1503	213B	24		34-22-19	ALL
	27		W1503	213Z			34-22-19	ALL
	28	UNUSED						ALL
	29		W1503	045	22		SPARE	ALL
	30		W1503	046	22		SPARE	ALL
	31		W1503	047	22		34-22-23	ALL
D04525P		AE0305/ /		PLUG-E1-5				ALL
	1		W0109	605R	24		34-46-11	ALL
	2		W0109	605B	24		34-46-11	ALL
	3		W0109	605Z			34-46-11	ALL
	4		W0109	730	24		34-46-12	ALL
	5	UNUSED						ALL
	6		W0109	715	24		34-46-12	050-099, 150-199, 275-278
	6	UNUSED						280-299
	7	UNUSED						ALL
	8		W0109	110	24		34-22-16	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D04500

Page 26

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04525P		AE0305/ /		PLUG-E1-5 (continued)				ALL
	11	UNUSED						ALL
	12		W0109	906R	24		34-46-11	050-099, 150-166, 275-299
	12	UNUSED						167-199
	13		W0109	906B	24		34-46-11	050-099, 150-166, 275-299
	13	UNUSED						167-199
	14		W0109	906Z			34-46-11	050-099, 150-166, 275-299
	14	UNUSED						167-199
	15	UNUSED						ALL
	16	UNUSED						ALL
	17		W0109	093	24		22-41-11	ALL
	18		W0109	239R	24		22-41-12	ALL
	19		W0109	239B	24		22-41-12	ALL
	20		W0109	239Z			22-41-12	ALL
	21		W0109	607R	24		34-46-11	ALL
	22		W0109	607B	24		34-46-11	ALL
	23		W0109	607Z			34-46-11	ALL
	24		W0109	004	22		34-22-16	ALL
	25		W0109	206R	24		34-22-19	ALL
	26		W0109	206B	24		34-22-19	ALL
	27		W0109	206Z			34-22-19	ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31		W0109	015	22		34-22-23	ALL
D04527J		AP1501/ /		RCPT-				ALL
	1		W0599	210R	20		22-13-21	ALL
	2		W0599	210B	20		22-13-21	ALL
	3		W0599	006	20		22-11-22	ALL
	4	UNUSED						ALL
	5	DL	W0599	70M	18		29-11-14	ALL
	6	DL	W0599	70K	18		29-11-14	ALL
	7		W0599	202R	20		22-11-21	ALL
	8		W0599	202B	20		22-11-21	ALL
	9		W0599	007	20		22-11-22	ALL
	10		W0599	303R	20		22-13-21	ALL
	11		W0599	303B	20		22-13-21	ALL
	12		W0599	303Y	20		22-13-21	ALL
	13		W0599	304R	20		22-13-21	ALL
	14		W0599	304B	20		22-13-21	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04500

Page 27

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04527J		AP1501/ /		RCPT- (continued)				ALL
	15		W0599	304Y	20		22-13-21	ALL
D04527P		AP1501/ /		PLUG-				ALL
	1		W0503	205R	22		22-13-21	ALL
	2		W0503	205B	22		22-13-21	ALL
	3		W0503	003	22		22-11-22	ALL
	4		W0503	019	22		SPARE	ALL
	5		W0503	70M	20		29-11-14	ALL
	6		W0503	70K	20		29-11-14	ALL
	7		W0503	202R	22		22-11-21	ALL
	8		W0503	202B	22		22-11-21	ALL
	9		W0503	004	22		22-11-22	ALL
	10		W0503	304R	22		22-13-21	ALL
	11		W0503	304B	22		22-13-21	ALL
	12		W0503	304Y	22		22-13-21	ALL
	13		W0503	305R	22		22-13-21	ALL
	14		W0503	305B	22		22-13-21	ALL
	15		W0503	305Y	22		22-13-21	ALL
	CAP	Y	W0503	206B	22		SPARE	ALL
	CAP	Y	W0503	206R	22		SPARE	ALL
D04528J		AC0701/ /		RCPT-L WING FS/BODY				ALL
	1		W0756	561	24		73-21-17	ALL
	2		W0756	090	24		73-21-11	ALL
	3	UNUSED						ALL
	4		W0756	023	24		73-21-11	ALL
	5		W0756	022	24		73-21-11	ALL
	6	FM	W0756	641	16		73-21-11	050-099, 150-154, 275-299
	6	FM	W0756	641	18		73-21-11	155-199
	7	UNUSED						ALL
	8		W0756	813	24		73-21-11	ALL
	9		W0756	239B	24		73-21-17	ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12		W0756	239R	24		73-21-12	ALL
	13	FM	W0756	012	16		73-21-20	050-099, 150-199, 277-299
	13		W0756	012	20		73-21-20	275-276
	14	UNUSED						ALL
	15		W0756	201B	24		73-21-13	ALL
	16		W0756	201R	24		73-21-13	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04500

Page 28

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04528J		AC0701 /		RCPT-L WING FS/BODY (continued)				ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19		W0756	207B	24		73-21-14	ALL
	20		W0756	207R	24		73-21-14	ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23		W0756	205B	24		73-21-14	ALL
	24		W0756	205R	24		73-21-14	ALL
	25		W0756	302Y	24		73-21-13	ALL
	26		W0756	302R	24		73-21-13	ALL
	27		W0756	302B	24		73-21-13	ALL
	28	UNUSED						ALL
	29		W0756	180	20		SPARE	ALL
	30		W0756	181	20		SPARE	050-099, 275-276
	30	UNUSED						150-199, 278-299
	30		W0756	294B	24		31-35-14	277
	31		W0756	182	20		SPARE	050-099, 275-276
	31	UNUSED						150-199, 278-299
	31		W0756	294R	24		31-35-14	277
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35		W0756	245R	24		77-12-12	ALL
	36		W0756	245B	24		77-12-12	ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40		W0756	199	20		73-21-19	ALL
	41	UNUSED						ALL
	= CC	D	W0756	090Z			73-21-11	ALL
	= CC	D	W0756	199Z			73-21-19	ALL
	= CC	D	W0756	201Z			73-21-13	ALL
	= CC	D	W0756	205Z			73-21-14	ALL
	= CC	D	W0756	207Z			73-21-14	ALL
	= CC	D	W0756	302Z			73-21-13	ALL
	= CC	D	W0756	012Z			73-21-20	050-099, 150-199, 277-299
	= CC	D	W0756	022Z			73-21-11	050-099, 150-199, 277-299
	= CC	D	W0756	023Z			73-21-11	050-099, 150-199, 277-299
	= CC	D	W0756	561Z			73-21-17	050-099, 150-199, 277-299
	= CC	M	W0756	641Z			73-21-11	050-099, 155-156, 162-166

HOOKUP LIST

D280T132

91-21-51

Section D04500

Page 29

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04528J		AC0701/ /		RCPT-L WING FS/BODY (continued)				ALL
	= CC	D	W0756	245Z			77-12-12	050-099, 157, 167-199, 277-299
	= CC	D	W0756	813Z			73-21-11	050-099, 157, 167-199, 277-299
	= CC	D	W0756	239Z			73-21-12	050-099, 277-299
	= CC	M	W0756	027Z			SPARE	150-154
	= CC	M	W0756	239Z			73-21-17	150-156, 162-166
	= CC	M	W0756	245Z			77-12-12	150-156, 162-166
	= CC	M	W0756	813Z			73-21-11	150-156, 162-166
	= CC	D	W0756	239Z			73-21-17	157, 167-199
	= CC	D	W0756	641Z			73-21-11	157, 167-199, 277-299
	= CC	L	W0756	012Z			73-21-20	275-276
	= CC	L	W0756	022Z			73-21-11	275-276
	= CC	L	W0756	023Z			73-21-11	275-276
	= CC	L	W0756	027Z			SPARE	275-276
	= CC	L	W0756	239Z			73-21-12	275-276
	= CC	L	W0756	245Z			77-12-12	275-276
	= CC	L	W0756	561Z			73-21-17	275-276
	= CC	L	W0756	813Z			73-21-11	275-276
	= CC		W0756	FRW			31-35-14	277
	CAP	Y	W0756	027	16		SPARE	050-099, 150-199, 275-276
	CAP	Y	W0756	181	20		SPARE	150-199, 277-299
	CAP	Y	W0756	182	20		SPARE	150-199, 277-299
	DED		W0756	027Z			SPARE	050-099, 155-199
			W0756	294Z			31-35-14	277
			W0756	FRW			31-35-14	277
D04528P		AC0701/ /		PLUG-L WING FS/BODY				ALL
	1		W0420	103	20		73-21-17	ALL
	2		W0420	001	20		73-21-11	ALL
	3	UNUSED						ALL
	4		W0420	305B	20		73-21-11	ALL
	5		W0420	305R	20		73-21-11	ALL
	6	FL	W0420	022	16		73-21-11	ALL
	7		W0420	305Y	20		73-21-11	ALL
	8		W0420	021	20		73-21-11	ALL
	9		W0420	210B	20		73-21-17	ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12		W0420	210R	20		73-21-12	ALL
	13	FL	W0420	013	16		73-21-20	ALL
	14	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D04500

Page 30

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04528P		AC0701/ /		PLUG-L WING FS/BODY (continued)				ALL
	15		W0420	201B	20		73-21-13	ALL
	16		W0420	201R	20		73-21-13	ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19		W0420	203B	20		73-21-14	ALL
	20		W0420	203R	20		73-21-14	ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23		W0420	205B	20		73-21-14	ALL
	24		W0420	205R	20		73-21-14	ALL
	25		W0420	302Y	20		73-21-13	ALL
	26		W0420	302R	20		73-21-13	ALL
	27		W0420	302B	20		73-21-13	ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30		W0420	206B	20		SPARE	050-099, 275-276, 278-299
	30	UNUSED						150-199
	30		W0420	206B	20		31-35-14	277
	31		W0420	206R	20		SPARE	050-099, 275-276, 278-299
	31	UNUSED						150-199
	31		W0420	206R	20		31-35-14	277
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35		W0420	209R	20		77-12-12	ALL
	36		W0420	209B	20		77-12-12	ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40		W0420	100	20		73-21-19	ALL
	41	UNUSED						ALL
	= CC	M	W0420	001Z			73-21-11	ALL
	= CC	M	W0420	013Z			73-21-20	ALL
	= CC	M	W0420	021Z			73-21-11	ALL
	= CC	M	W0420	022Z			73-21-11	ALL
	= CC	M	W0420	100Z			73-21-19	ALL
	= CC	M	W0420	103Z			73-21-17	ALL
	= CC	M	W0420	201Z			73-21-13	ALL
	= CC	M	W0420	203Z			73-21-14	ALL
	= CC	M	W0420	205Z			73-21-14	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04500

Page 31

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04528P		AC0701/ /		PLUG-L WING FS/BODY (continued)				ALL
	= CC	M	W0420	209Z			77-12-12	ALL
	= CC	M	W0420	210Z			73-21-12	ALL
	= CC	M	W0420	302Z			73-21-13	ALL
	= CC	M	W0420	305Z			73-21-11	ALL
	= CC	M	W0420	206Z			31-35-14	277
	DED		W0420	206Z			SPARE	050-099, 275-276, 278-299
D04529J		AE0317/ /		RCPT-E1-5				ALL
	1		W1729	201R	20		22-11-21	ALL
	2		W1729	201B	20		22-11-21	ALL
	3		W1729	202R	20		22-13-21	ALL
	4		W1729	202B	20		22-13-21	ALL
	5		W1729	301R	20		22-13-21	ALL
	6		W1729	301B	20		22-13-21	ALL
	7		W1729	301Y	20		22-13-21	ALL
	8		W1729	302R	20		22-13-21	ALL
	9		W1729	302B	20		22-13-21	ALL
	10		W1729	302Y	20		22-13-21	ALL
	11		W1729	001	20		22-11-22	ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14		W1729	002	20		22-11-22	ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D04529P		AE0317/ /		PLUG-E1-5				ALL
	1		W0119	205R	22		22-11-21	ALL
	2		W0119	205B	22		22-11-21	ALL
	3		W0119	226R	22		22-13-21	ALL
	4		W0119	226B	22		22-13-21	ALL
	5		W0119	305R	22		22-13-21	ALL
	6		W0119	305B	22		22-13-21	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04500

Page 32

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04529P		AE0317/ /		PLUG-E1-5 (continued)				ALL
	7		W0119	305Y	22		22-13-21	ALL
	8		W0119	306R	22		22-13-21	ALL
	9		W0119	306B	22		22-13-21	ALL
	10		W0119	306Y	22		22-13-21	ALL
	11		W0119	023	22		22-11-22	ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14		W0119	024	22		22-11-22	ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D04531J		AP1501/ /		RCPT-				ALL
	1		W0575	017	20		27-48-11	050-099, 150-154, 157-164, 167-199, 275-299
	1		W0575	302Y	20		27-48-11	155-156, 165-166
	2		W0581	018	20		27-48-11	050-099
	2		W0575	018	20		27-48-11	150-154, 162-164, 275-276
	2		W0575	302B	20		27-48-11	155-157, 165-199, 277-299
	3		W0581	019	20		27-48-11	050-099
	3		W0575	019	20		27-48-11	150-154, 162-164, 275-276
	3		W0575	302R	20		27-48-11	155-157, 165-199, 277-299
	4	UNUSED						050-099, 150-156, 162-166, 275-276
	4		W0575	302Y	20		27-48-11	157, 167-199, 277-299
	5	UNUSED						ALL
	6		W0575	001	20		27-41-11	ALL
	7		W0575	002	20		27-41-11	ALL
	8		W0575	011Y	20		27-41-11	ALL
	9		W0575	012Y	20		27-41-11	050-099
	9	UNUSED						150-199, 275-299
	10		W0575	010Y	20		27-41-11	ALL
	11		W0575	201B	20		27-58-21	ALL
	12		W0575	201R	20		27-58-21	ALL

HOOKUP LIST
D280T132

91-21-51
Section D04500
Page 33
Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04531J		AP1501 / /		RCPT- (continued)				ALL
	13		W0575	301B	20		27-58-21	ALL
	14		W0575	301R	20		27-58-21	ALL
	15		W0575	301Y	20		27-58-21	ALL
D04531P		AP1501 / /		PLUG-				ALL
	1		W0491	011	24		27-48-11	050-099, 150-154, 157-164, 167-199, 275-299
	1		W0503	307Y	24		27-48-11	155-156, 166
	1		W0491	307Y	24		27-48-11	165
	2		W0491	012	24		27-48-11	050-099, 150-154, 162-164, 275-276
	2		W0503	307B	24		27-48-11	155-156, 166
	2		W0491	307B	24		27-48-11	157, 165, 167-199, 277-299
	3		W0491	013	24		27-48-11	050-099, 150-154, 162-164, 275-276
	3		W0503	307R	24		27-48-11	155-156, 166
	3		W0491	307R	24		27-48-11	157, 165, 167-199, 277-299
	4	UNUSED						050-099, 150-156, 162-166, 275-276
	4		W0491	307Y	24		27-48-11	157, 167-199, 277-299
	5	UNUSED						ALL
	6		W0491	005	20		27-41-11	ALL
	7		W0491	006	20		27-41-11	ALL
	8		W0491	007Y	22		27-41-11	ALL
	9		W0491	008Y	22		27-41-11	050-099
	9		W0491	021Y	22		SPARE	150-199, 275-299
	10		W0491	010Y	22		27-41-11	ALL
	11		W0491	203B	24		27-58-21	ALL
	12		W0491	203R	24		27-58-21	ALL
	13		W0491	301B	24		27-58-21	ALL
	14		W0491	301R	24		27-58-21	ALL
	15		W0491	301Y	24		27-58-21	ALL
D04532J		AC0701 / /		RCPT-L WING FS/BODY				ALL
	1		W0756	227B	22		27-81-31	ALL
	2		W0756	227R	22		27-81-31	ALL
	3		W0756	306B	24		27-81-31	ALL
	4		W0756	306R	24		27-81-31	ALL
	5		W0756	306Y	24		27-81-31	ALL
D04532P		AC0701 / /		PLUG-L WING FS/BODY				ALL
	1		W0436	201B	20		27-81-31	ALL
	2		W0436	201R	20		27-81-31	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04500

Page 34

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04532P		AC0701 / /		PLUG-L WING FS/BODY (continued)				ALL
	3		W0436	301B	20		27-81-31	ALL
	4		W0436	301R	20		27-81-31	ALL
	5		W0436	301Y	20		27-81-31	ALL
D04533J D04533J		AP1501/310/0 AP1501 / /		RCPT- RCPT-				050-099, 155-199, 275-299 150-154
	1		W0581	017	20		27-48-11	050-099, 150-154, 157-164, 167-199, 275-299
	1		W0581	302Y	20		27-48-11	155-156, 165-166
	2		W0575	018	20		27-48-11	050-099
	2		W0581	018	20		27-48-11	150-154, 162-164, 275-276
	2		W0581	302B	20		27-48-11	155-157, 165-199, 277-299
	3		W0575	019	20		27-48-11	050-099
	3		W0581	019	20		27-48-11	150-154, 162-164, 275-276
	3		W0581	302R	20		27-48-11	155-157, 165-199, 277-299
	4	UNUSED						050-099, 150-156, 162-166, 275-276
	4		W0581	302Y	20		27-48-11	157, 167-199, 277-299
	5	UNUSED						ALL
	6		W0581	001	20		27-41-21	ALL
	7		W0581	002	20		27-41-21	ALL
	8		W0581	011Y	20		27-41-21	ALL
	9		W0581	012Y	20		27-41-21	050-099
	9	UNUSED						150-199, 275-299
	10		W0581	010Y	20		27-41-21	ALL
	11		W0581	201B	20		27-58-21	ALL
	12		W0581	201R	20		27-58-21	ALL
	13		W0581	301B	20		27-58-21	ALL
	14		W0581	301R	20		27-58-21	ALL
	15		W0581	301Y	20		27-58-21	ALL
D04533P		AP1501 / /		PLUG-				ALL
	1		W0503	011	24		27-48-11	050-099, 150-154, 157-164, 167-199, 275-299
	1		W0491	307Y	24		27-48-11	155-156, 166
	1		W0503	307Y	24		27-48-11	165
	2		W0503	012	24		27-48-11	050-099, 150-154, 162-164, 275-276
	2		W0491	307B	24		27-48-11	155-156, 166
	2		W0503	307B	24		27-48-11	157, 165, 167-199, 277-299
	3		W0503	013	24		27-48-11	050-099, 150-154, 162-164, 275-276
	3		W0491	307R	24		27-48-11	155-156, 166

HOOKUP LIST

D280T132

91-21-51

Section D04500

Page 35

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04533P		AP1501/ /		PLUG- (continued)				ALL
	3		W0503	307R	24		27-48-11	157, 165, 167-199, 277-299
	4	UNUSED						050-099, 150-156, 162-166, 275-276
	4		W0503	307Y	24		27-48-11	157, 167-199, 277-299
	5	UNUSED						ALL
	6		W0503	006	20		27-41-21	ALL
	7		W0503	007	20		27-41-21	ALL
	8		W0503	008Y	22		27-41-21	ALL
	9		W0503	009Y	22		27-41-21	050-099
	9		W0503	005Y	22		SPARE	150-199, 275-299
	10		W0503	010Y	22		27-41-21	ALL
	11		W0503	203B	24		27-58-21	ALL
	12		W0503	203R	24		27-58-21	ALL
	13		W0503	301B	24		27-58-21	ALL
	14		W0503	301R	24		27-58-21	ALL
	15		W0503	301Y	24		27-58-21	ALL
D04536J		AC0701/ /		RCPT-				ALL
	1		W0628	034	24		29-11-12	ALL
	2		W0628	033	22		29-11-12	ALL
	3	UNUSED						ALL
	4		W0628	035	22		29-11-12	ALL
	5		W0628	106	22		29-11-12	ALL
	6		W0628	107	20		29-11-12	ALL
	7		W0628	003	22		30-11-11	ALL
	8	UNUSED						ALL
	9		W0628	007	22		30-11-11	ALL
	10		W0628	008	22		30-11-11	ALL
	11	UNUSED						050-099, 150-154
	11		W0628	002	22		SPARE	155-199, 275-278
	11		W0628	002	22		30-11-11	280-299
	12		W0628	006	24		30-11-11	ALL
	13	UNUSED						050-099, 150-154, 162-199
	13		W0628	004	22		SPARE	155-157, 275-278
	13		W0628	004	22		30-11-11	280-299
	14	UNUSED						ALL
	15		W0628	010	20		33-43-11	050-099
	15	FM	W0628	010	16		33-43-11	150-199, 275-299
	16	DK	W0628	090	18		33-44-21	ALL
	17	UNUSED						ALL
	18	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D04500

Page 36

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04536J		AC0701/ /		RCPT- (continued)				ALL
	19	UNUSED						ALL
	20		W0628	051	20		27-81-21	ALL
	21	DK	W0628	052	18		27-81-21	ALL
	22	DK	W0628	054	18		27-81-21	ALL
	23		W0628	217R	24		27-81-21	ALL
	24		W0628	217B	24		27-81-21	ALL
	25		W0628	301R	24		27-81-21	ALL
	26		W0628	301B	24		27-81-21	ALL
	27		W0628	301Y	24		27-81-21	ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30		W0628	103	22		SPARE	050-099
	30	UNUSED						150-199, 275-299
	31		W0628	019	22		SPARE	ALL
D04536P		AC0701/ /		PLUG-L WING FS/BODY				ALL
	1		W0440	001	20		29-11-12	ALL
	2		W0440	002	20		29-11-12	ALL
	3	UNUSED						ALL
	4		W0440	006	20		29-11-12	ALL
	5		W0440	202R	20		29-11-12	ALL
	6		W0440	202B	20		29-11-12	ALL
	7		W0440	007	20		30-11-11	ALL
	8	UNUSED						ALL
	9		W0440	009	20		30-11-11	ALL
	10		W0440	010	20		30-11-11	ALL
	11	UNUSED						050-099
	11		W0440	011	20		SPARE	150-199
	11		W0440	011	20		30-11-11	275-299
	12		W0440	012	20		30-11-11	ALL
	13	UNUSED						050-099
	13		W0440	013	20		SPARE	150-199
	13		W0440	013	20		30-11-11	275-299
	14	UNUSED						ALL
	15		W0440	015	20		33-43-11	050-099
	15	DL	W0440	015	18		33-43-11	150-199, 275-299
	16		W0440	016	18		33-44-21	050-099
	16	DL	W0440	016	18		33-44-21	150-199, 275-299
	17		W0440	017	20		SPARE	ALL
	18		W0440	018	20		SPARE	050-099

HOOKUP LIST

D280T132

91-21-51

Section D04500

Page 37

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04536P		AC0701/ /		PLUG-L WING FS/BODY (continued)				ALL
	18	UNUSED						150-199, 275-299
	19	UNUSED						ALL
	20		W0440	019	20		27-81-21	ALL
	21	DL	W0440	020	18		27-81-21	ALL
	22	DL	W0440	021	18		27-81-21	ALL
	23		W0440	201R	20		27-81-21	ALL
	24		W0440	201B	20		27-81-21	ALL
	25		W0440	301R	20		27-81-21	ALL
	26		W0440	301B	20		27-81-21	ALL
	27		W0440	301Y	20		27-81-21	ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
D04538J		AL1002/ /		RCPT-				ALL
	1		W0738	016	20		28-41-22	ALL
	2		W0738	083	22		SPARE	ALL
	3		W0738	802	20		SPARE	ALL
	4	UNUSED						ALL
	5		W0738	005	22		32-42-11	ALL
	6		W0738	006	22		32-42-11	ALL
	7		W0738	007	22		32-42-11	ALL
	8		W0738	008	20		32-42-11	ALL
	9		W0738	009	20		32-42-11	ALL
	10		W0738	010	20		32-42-11	ALL
	11	UNUSED						ALL
	=C1		W0738	016Z			28-41-22	ALL
D04538P		AL1002/ /		PLUG-R WING RS/BODY				ALL
	1		W0448	22TX			28-41-22	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W0448	201B	20		32-42-11	ALL
	6		W0448	202B	20		32-42-11	ALL
	7		W0448	203B	20		32-42-11	ALL
	8		W0448	201R	20		32-42-11	ALL
	9		W0448	202R	20		32-42-11	ALL
	10		W0448	203R	20		32-42-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04500

Page 38

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04538P		AL1002/ /		PLUG-R WING RS/BODY (continued)				ALL
	11 = C1	UNUSED	W0448	22TI			28-41-22	ALL
D04540J		AC0701/ /		RCPT-				ALL
	1		W0596	145	24		28-41-11	ALL
	2		W0596	303Y	24		28-41-11	ALL
	3		W0596	208B	24		28-41-11	ALL
	4		W0596	208R	24		28-41-11	ALL
	5		W0596	303B	24		28-41-11	ALL
	6		W0596	303R	24		28-41-11	ALL
	7		W0596	117	20		28-26-11	ALL
	8		W0596	118	20		28-26-11	ALL
	9		W0596	028	24		28-21-11	ALL
	10		W0596	080	22		28-21-13	ALL
	11		W0596	079	22		28-21-13	ALL
	12		W0596	035	20		28-21-11	ALL
	13		W0596	026	24		28-21-11	ALL
	14		W0596	033	20		28-21-11	ALL
	15		W0596	076	22		28-21-13	ALL
	16		W0596	075	22		28-21-13	ALL
	17		W0596	113	20		28-26-11	ALL
	18		W0596	114	20		28-26-11	ALL
	19		W0596	144	24		28-41-11	ALL
	20		W0596	302Y	24		28-41-11	ALL
	21		W0596	202B	24		28-41-11	ALL
	22		W0596	202R	24		28-41-11	ALL
	23		W0596	302B	24		28-41-11	ALL
	24		W0596	302R	24		28-41-11	ALL
	25		W0596	029	24		28-21-11	ALL
	26		W0596	217B	24		SPARE	050-099, 150-199
	26	UNUSED						275-299
	27		W0596	217R	24		SPARE	050-099, 150-199
	27	UNUSED						275-299
	28		W0596	068	22		28-21-12	ALL
	29		W0596	065	22		28-21-12	ALL
	30		W0596	032	22		28-21-11	ALL
	31	DK	W0596	031	18		28-21-11	ALL
	32	DK	W0596	087	18		28-41-12	ALL
	33		W0596	027	24		28-21-11	ALL
	34		W0596	034	20		28-21-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04500

Page 39

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04540J		AC0701/ /		RCPT- (continued)				ALL
	35		W0596	078	22		28-21-13	ALL
	36		W0596	077	22		28-21-13	ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39		W0596	308R	24		SPARE	050-099, 150-199
	39	UNUSED						275-299
	40		W0596	301Y	24		28-41-11	ALL
	41		W0596	205B	24		28-41-11	ALL
	42		W0596	205R	24		28-41-11	ALL
	43		W0596	301B	24		28-41-11	ALL
	44		W0596	301R	24		28-41-11	ALL
	45		W0596	030	22		28-21-11	ALL
	46		W0596	401B	24		28-21-11	ALL
	47		W0596	401G	24		28-21-11	ALL
	48		W0596	401R	24		28-21-11	ALL
	49		W0596	401Y	24		28-21-11	ALL
	50		W0596	017	20		28-26-11	ALL
	51	DK	W0596	500	18		28-21-11	ALL
	52		W0596	044	22		SPARE	ALL
	53	UNUSED						050-099, 275-299
	53		W0596	218R	22		SPARE	150-199
	54	UNUSED						050-099, 275-299
	54		W0596	218B	22		SPARE	150-199
	55	UNUSED						050-099, 275-299
	55		W0596	219R	22		SPARE	150-199
	56	UNUSED						050-099, 275-299
	56		W0596	219B	22		SPARE	150-199
	57		W0596	091	24		28-41-11	ALL
	58		W0596	092	24		28-41-11	ALL
	59	UNUSED						050-099, 275-299
	59		W0596	050	22		SPARE	150-199
	60		W0596	308B	24		SPARE	050-099, 150-199
	60	UNUSED						275-299
	61		W0596	308Y	24		SPARE	050-099, 150-199
	61	UNUSED						275-299
	CAP	Y	W0596	043	22		SPARE	050-099, 150-156, 162-166, 275-276
D04540P		AC0701/ /		PLUG-L WING FS/BODY				ALL
	1		W0402	044	20		28-41-11	ALL
	2		W0402	303Y	20		28-41-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04500

Page 40

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04540P		AC0701/ /		PLUG-L WING FS/BODY (continued)				ALL
	3		W0402	202B	20		28-41-11	ALL
	4		W0402	202R	20		28-41-11	ALL
	5		W0402	303B	20		28-41-11	ALL
	6		W0402	303R	20		28-41-11	ALL
	7		W0402	012	20		28-26-11	ALL
	8		W0402	013	20		28-26-11	ALL
	9		W0402	014	20		28-21-11	ALL
	10		W0402	015	20		28-21-13	ALL
	11		W0402	016	20		28-21-13	ALL
	12		W0402	017	20		28-21-11	ALL
	13		W0402	018	20		28-21-11	ALL
	14		W0402	019	20		28-21-11	ALL
	15		W0402	020	20		28-21-13	ALL
	16		W0402	021	20		28-21-13	ALL
	17		W0402	022	20		28-26-11	ALL
	18		W0402	023	20		28-26-11	ALL
	19		W0402	043	20		28-41-11	ALL
	20		W0402	302Y	20		28-41-11	ALL
	21		W0402	205B	20		28-41-11	ALL
	22		W0402	205R	20		28-41-11	ALL
	23		W0402	302B	20		28-41-11	ALL
	24		W0402	302R	20		28-41-11	ALL
	25		W0402	024	20		28-21-11	ALL
	26		W0402	207B	20		SPARE	ALL
	27		W0402	207R	20		SPARE	ALL
	28		W0402	025	20		28-21-12	ALL
	29		W0402	026	20		28-21-12	ALL
	30		W0402	027	20		28-21-11	ALL
	31		W0402	028	20		28-21-11	ALL
	32	DL	W0402	029	18		28-41-12	ALL
	33		W0402	030	20		28-21-11	ALL
	34		W0402	031	20		28-21-11	ALL
	35		W0402	032	20		28-21-13	ALL
	36		W0402	033	20		28-21-13	ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40		W0402	301Y	20		28-41-11	ALL
	41		W0402	209B	20		28-41-11	ALL
	42		W0402	209R	20		28-41-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04500

Page 41

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04540P		AC0701/ /		PLUG-L WING FS/BODY (continued)				ALL
	43		W0402	301B	20		28-41-11	ALL
	44		W0402	301R	20		28-41-11	ALL
	45		W0402	036	20		28-21-11	ALL
	46		W0402	401B	20		28-21-11	ALL
	47		W0402	401G	20		28-21-11	ALL
	48		W0402	401R	20		28-21-11	ALL
	49		W0402	401Y	20		28-21-11	ALL
	50		W0402	037	20		28-26-11	ALL
	51	DL	W0402	053	18		28-21-11	ALL
	52	UNUSED						ALL
	53		W0402	211B	20		SPARE	ALL
	54		W0402	211R	20		SPARE	ALL
	55		W0402	212B	20		SPARE	ALL
	56		W0402	212R	20		SPARE	ALL
	57		W0402	040	20		28-41-11	ALL
	58		W0402	041	20		28-41-11	ALL
	59		W0402	801	20		SPARE	050-099, 150-156, 162-166, 275-276
	59	UNUSED						157, 167-199, 277-299
	60	UNUSED						ALL
	61	UNUSED						ALL
D04541J		AF0204/ /		RCPT-P61				ALL
	1		W0070	10R	24		22-11-32	ALL
	2		W0070	10S	24		22-11-32	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W0070	015	24		22-41-11	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D04500

Page 42

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04541J		AF0204/ /		RCPT-P61 (continued)				ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
D04541P		AF0204/ /		PLUG-P61				ALL
	1		W0455	001	24		22-11-32	ALL
	2		W0455	002	24		22-11-32	ALL
	3	UNUSED						ALL
	4		W0455	004	22		SPARE	ALL
	5		W0455	005	24		22-41-11	ALL
	6	UNUSED						ALL
	7		W0455	007	22		SPARE	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14		W0455	003	18		SPARE	ALL
	15	UNUSED						ALL
	16		W0455	006	12		SPARE	ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
D04542J		AC0701/ /		RCPT				ALL
	1		W0596	056R	22		26-11-12	ALL
	2		W0596	047R	22		26-11-11	ALL
	3		W0596	058R	22		26-11-12	ALL
	4		W0596	048R	22		26-11-11	ALL

HOOKUP LIST
D280T132

91-21-51
Section D04500
Page 43
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04542J		AC0701/ /		RCPT (continued)				ALL
	5		W0596	057R	22		26-11-12	ALL
	6		W0596	046R	22		26-11-11	ALL
	7		W0596	210B	24		23-41-11	ALL
	8		W0596	210R	24		23-41-11	ALL
	9		W0596	210Z			23-41-11	ALL
	10		W0596	119	20		SPARE	ALL
	11		W0596	511	18		SPARE	050-099, 150-199, 275-276
	11	UNUSED						277-299
	12		W0596	512	24		SPARE	050-099, 150-199
	12	UNUSED						275-299
	13	UNUSED						ALL
	14		W0596	120	20		SPARE	ALL
	CAP	Y	W0596	220B	24		SPARE	150-199
	CAP	Y	W0596	220R	24		SPARE	150-199
	CAP	Y	W0596	221B	24		SPARE	150-199
	CAP	Y	W0596	221R	24		SPARE	150-199
	CAP	Y	W0596	305B	24		SPARE	150-199
	CAP	Y	W0596	305R	24		SPARE	150-199
	CAP	Y	W0596	305Y	24		SPARE	150-199
D04542P		AC0701/ /		PLUG-L WING FS/BODY				ALL
	1		W0402	451R	18		26-11-12	ALL
	2		W0402	452R	18		26-11-11	ALL
	3		W0402	457R	18		26-11-12	ALL
	4		W0402	455R	18		26-11-11	ALL
	5		W0402	454R	18		26-11-12	ALL
	6		W0402	456R	18		26-11-11	ALL
	7		W0402	213B	20		23-41-11	ALL
	8		W0402	213R	20		23-41-11	ALL
	9		W0402	213Z			23-41-11	ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
D04543J		AE0307/ /		RCPT-E1-4				ALL
	1		W0455	001	24		22-11-32	ALL
	2		W0455	002	24		22-11-32	ALL
	3	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D04500

Page 44

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04543J		AE0307/ /		RCPT-E1-4 (continued)				ALL
	4		W0455	004	22		SPARE	ALL
	5		W0455	005	24		22-41-11	ALL
	6	UNUSED						ALL
	7		W0455	007	22		SPARE	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14		W0455	003	18		SPARE	ALL
	15	UNUSED						ALL
	16		W0455	006	12		SPARE	ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
D04543P		AE0307/ /		PLUG-E1-4				ALL
	1		W0127	017	24		22-11-32	ALL
	2		W0127	023	24		22-11-32	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W0127	086	24		22-41-11	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D04500
Page 45
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04543P		AE0307/ /		PLUG-E1-4 (continued)				ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
D04545J		AE0317/125/L13		RCPT-E1-2				050-099
D04545J		AE0317/ /		RCPT-				150-199, 275-299
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W0515	204R	24		34-22-18	ALL
	7		W0515	204B	24		34-22-18	ALL
	8		W0515	204Z			34-22-18	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D04545P		AE0317/ /		PLUG-E1-2				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D04500
Page 46
Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04545P		AE0317/ /		PLUG-E1-2 (continued)				ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W1100	273R	24		34-22-18	ALL
	7		W1100	273B	24		34-22-18	ALL
	8		W1100	273Z			34-22-18	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D04546J		AC0701/ /		RCPT-				ALL
	1		W0614	046R	22		26-11-11	ALL
	2		W0614	047R	22		26-11-11	ALL
	3		W0614	048R	22		26-11-11	ALL
	4		W0614	056R	22		26-11-12	ALL
	5		W0614	507	22		29-11-11	ALL
	6		W0614	506	22		29-11-11	ALL
	7	UNUSED						050-099
	7		W0614	564	24		SPARE	150-199, 275-299
	8		W0614	058R	22		26-11-12	ALL
	9		W0614	057R	22		26-11-12	ALL
	10	UNUSED						ALL
D04546P		AC0701/ /		PLUG-L WING FRONT SPAR / BODY				ALL
	1		W0424	456R	18		26-11-11	ALL
	2		W0424	452R	18		26-11-11	ALL
	3		W0424	455R	18		26-11-11	ALL

HOOKUP LIST
D280T132

91-21-51
Section D04500
Page 47
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04546P		AC0701/ /		PLUG-L WING FRONT SPAR / BODY (continued)				ALL
	4		W0424	457R	18		26-11-12	ALL
	5		W0424	001	18		29-11-11	ALL
	6		W0424	002	18		29-11-11	ALL
	7		W0424	453R	18		SPARE	ALL
	8		W0424	451R	18		26-11-12	ALL
	9		W0424	454R	18		26-11-12	ALL
	10	UNUSED						ALL
D04550J		AC0701/ /		RCPT-L WING FS/BODY				ALL
	1		W0214	201B	24		24-11-11	ALL
	2		W0214	201R	24		24-11-11	ALL
	3		W0214	201Z			24-11-11	ALL
	4	UNUSED						ALL
	5		W0214	204B	20		24-21-11	ALL
	6		W0214	204R	20		24-21-11	ALL
	7		W0214	204Z			24-21-11	ALL
	8		W0214	401B	24		24-21-11	ALL
	9		W0214	401R	24		24-21-11	ALL
	10		W0214	401Y	24		24-21-11	ALL
	11		W0214	401G	24		24-21-11	ALL
	12		W0214	202B	24		24-11-11	ALL
	13		W0214	202R	24		24-11-11	ALL
	14		W0214	203B	24		24-11-11	ALL
	15		W0214	203R	24		24-11-11	ALL
	16		W0214	001	24		24-11-11	ALL
	17	UNUSED						ALL
	18		W0214	102	20		SPARE	ALL
	19		W0214	103	20		SPARE	ALL
	20		W0214	140	20		SPARE	ALL
	21	UNUSED						ALL
	22	UNUSED						050-099, 275-299
	22		W0214	065	22		24-11-11	150-199
	23	UNUSED						ALL
	24	UNUSED						ALL
D04550P		AC0701/ /		PLUG-L WING FS/BODY				ALL
	1		W0412	201B	20		24-11-11	ALL
	2		W0412	201R	20		24-11-11	ALL
	3		W0412	201Z			24-11-11	ALL
	4	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D04500

Page 48

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04550P		AC0701/ /		PLUG-L WING FS/BODY (continued)				ALL
	5		W0412	202B	20		24-21-11	ALL
	6		W0412	202R	20		24-21-11	ALL
	7		W0412	202Z			24-21-11	ALL
	8		W0412	401B	20		24-21-11	ALL
	9		W0412	401R	20		24-21-11	ALL
	10		W0412	401Y	20		24-21-11	ALL
	11		W0412	401G	20		24-21-11	ALL
	12		W0412	203B	20		24-11-11	ALL
	13		W0412	203R	20		24-11-11	ALL
	14		W0412	204B	20		24-11-11	ALL
	15		W0412	204R	20		24-11-11	ALL
	16		W0412	003	20		24-11-11	ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D04551J		AE0102/ /		RCPT-				ALL
	1		W5150	217	20		27-41-11	ALL
	2		W5150	218	20		27-41-11	ALL
	3		W5150	323	22		22-32-15	ALL
	4		W5150	328	22		22-32-15	ALL
	5		W5150	325	22		22-32-15	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						050-099, 155-199, 275-299
	10		W5150	429	22		31-31-15	150-154
	11	UNUSED						ALL
	12		W5150	368	22		22-32-13	ALL
	13		W5150	372	22		22-32-13	ALL
	14		W5150	373	22		22-32-13	ALL
	15	UNUSED						ALL
	16	UNUSED						050-099, 155-199, 275-299
	16		W5150	374	22		27-41-11	150-154

HOOKUP LIST
D280T132

91-21-51
Section D04500
Page 49
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04551J		AE0102/ /		RCPT- (continued)				ALL
	17		W5150	397	22		SPARE	ALL
	18		W5150	396	22		31-51-42	ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21		W5150	333	22		22-12-11	ALL
	22		W5150	331	22		22-12-11	ALL
	23		W5150	367	22		22-12-11	ALL
	24	UNUSED						ALL
D04551P		AE0102/ /		PLUG-P10				ALL
	1		W0481	026	20		27-41-11	ALL
	2		W0481	027	20		27-41-11	ALL
	3		W0481	017	24		22-32-15	ALL
	4		W0481	018	24		22-32-15	ALL
	5		W0481	019	24		22-32-15	ALL
	6		W0481	020	24		SPARE	050-099
	6	UNUSED						150-199, 275-299
	7		W0481	021	24		SPARE	050-099
	7	UNUSED						150-199, 275-299
	8		W0481	022	24		SPARE	050-099
	8	UNUSED						150-199, 275-299
	9		W0481	023	22		SPARE	ALL
	10		W0481	024	24		SPARE	050-099, 275-299
	10		W0481	024	24		31-31-15	150-154
	10	UNUSED						155-199
	11		W0481	011	24		SPARE	ALL
	12		W0481	035	24		22-32-13	ALL
	13		W0481	036	24		22-32-13	ALL
	14		W0481	037	24		22-32-13	ALL
	15	UNUSED						050-099, 275-299
	15		W0481	050	24		SPARE	150-199
	16	UNUSED						050-099, 155-199, 275-299
	16		W0481	051	22		27-41-11	150-154
	17	UNUSED						050-099
	17		W0481	025	24		SPARE	150-199, 275-299
	18		W0481	034	24		31-51-42	ALL
	19		W0481	206R	22		SPARE	050-099, 150-199
	19	UNUSED						275-299
	20		W0481	206B	22		SPARE	050-099, 150-199
	20	UNUSED						275-299

HOOKUP LIST

D280T132

91-21-51

Section D04500

Page 50

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04551P		AE0102/ /		PLUG-P10 (continued)				ALL
	21		W0481	031	22		22-12-11	ALL
	22		W0481	032	22		22-12-11	ALL
	23		W0481	033	22		22-12-11	ALL
	24		W0481	055	22		SPARE	050-099, 150-199
	24	UNUSED						275-299
D04553J		AE0104/ /		RCPT-				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W5150	312	22		22-12-31	ALL
	4		W5150	310	22		22-12-31	ALL
	5		W5150	386	22		22-12-31	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D04553P		AE0104/ /		PLUG-P10 QUADRANT STAND				ALL
	1	UNUSED						ALL
	2		W0483	012	24		SPARE	ALL
	3		W0483	007	22		22-12-31	ALL
	4		W0483	008	22		22-12-31	ALL
	5		W0483	009	22		22-12-31	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D04555J		AE0104/ /		RCPT-				ALL
	1		W5150	380	22		22-12-21	ALL
	2		W5150	301	22		22-12-21	ALL
	3	UNUSED						ALL
	4		W5150	274	20		27-41-21	ALL
	5		W5150	412	22		31-51-41	ALL

HOOKUP LIST
D280T132

91-21-51
Section D04500
Page 51
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04555J		AE0104/ /		RCPT- (continued)				ALL
	6		W5150	302	22		22-12-21	ALL
	7		W5150	273	20		27-41-21	ALL
	8	UNUSED						ALL
	9		W5150	410	22		SPARE	ALL
	10		W5150	411	22		31-51-42	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D04555P		AE0104/ /		PLUG-P10 QUADRANT STAND				ALL
	1		W0485	007	22		22-12-21	ALL
	2		W0485	008	22		22-12-21	ALL
	3		W0485	020	24		SPARE	ALL
	4		W0485	010	20		27-41-21	ALL
	5		W0485	021	24		31-51-41	ALL
	6		W0485	019	22		22-12-21	ALL
	7		W0485	009	20		27-41-21	ALL
	8	UNUSED						ALL
	9		W0485	022	24		SPARE	ALL
	10		W0485	014	24		31-51-42	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D04556J		AF0120/ /		RCPT-P3				ALL
	1		W0634	043	24		33-11-11	ALL
	2		W0634	044	24		33-11-11	ALL
	3		W0634	202B	24		33-11-11	ALL
	4		W0634	202R	24		33-11-11	ALL
	5		W0634	302B	24		33-11-11	ALL
	6		W0634	302R	24		33-11-11	ALL
	7		W0634	302Y	24		33-11-11	ALL
	8		W0634	303B	24		33-11-13	ALL
	9		W0634	303R	24		33-11-13	ALL
	10		W0634	303Y	24		33-11-13	ALL
	11		W0634	035	24		33-11-13	ALL
	12		W0634	050	22		34-12-61	ALL
	13		W0634	021	22		32-41-11	ALL
	14	UNUSED						ALL
	15		W0634	020	24		31-25-11	ALL
	16	UNUSED						ALL
	17	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D04500

Page 52

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04556J		AF0120/ /		RCPT-P3 (continued)				ALL
	18		W0634	801	22		SPARE	ALL
	19		W0634	802	22		SPARE	ALL
	20		W0634	173	22		33-16-12	ALL
	21		W0634	175	22		33-16-12	ALL
	22		W0634	178	22		33-16-12	ALL
	23		W0634	FRB			33-11-11	ALL
	24	UNUSED						ALL
	DED		W0634	173Z			33-16-12	ALL
	DED		W0634	175Z			33-16-12	ALL
	DED		W0634	178Z			33-16-12	ALL
			W0634	202Z			33-11-11	ALL
			W0634	302Z			33-11-11	ALL
			W0634	FRB			33-11-11	ALL
D04556P		AF0120/ /		PLUG-				ALL
	1		W0051	014	24		33-11-11	ALL
	2		W0051	017	24		33-11-11	ALL
	3		W0051	210B	24		33-11-11	ALL
	4		W0051	210R	24		33-11-11	ALL
	5		W0051	302B	24		33-11-11	ALL
	6		W0051	302R	24		33-11-11	ALL
	7		W0051	302Y	24		33-11-11	ALL
	8		W0051	304B	24		33-11-13	ALL
	9		W0051	304R	24		33-11-13	ALL
	10		W0051	304Y	24		33-11-13	ALL
	11		W0051	028	24		33-11-13	ALL
	12		W0051	161	22		34-12-61	ALL
	13		W0051	039	22		32-41-11	ALL
	14	UNUSED						ALL
	15		W0051	002	24		31-25-11	ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20		W0051	103	22		33-16-16	ALL
	21		W0051	099	22		33-16-13	ALL
	22		W0051	107	22		33-16-12	ALL
	23		W0051	FRB			33-11-11	ALL
	24	UNUSED						ALL
	DED		W0051	039Z			32-41-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04500

Page 53

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04556P		AF0120/ /		PLUG- (continued)				ALL
	DED		W0051	099Z			33-16-13	ALL
	DED		W0051	103Z			33-16-16	ALL
	DED		W0051	107Z			33-16-12	ALL
			W0051	210Z			33-11-11	ALL
			W0051	302Z			33-11-11	ALL
			W0051	FRB			33-11-11	ALL
D04559J		AP1501/ /		RCPT-				ALL
	1		W0579	002	20		27-21-12	ALL
	2		W0579	301R	20		27-21-12	ALL
	3		W0579	301B	20		27-21-12	ALL
	4		W0579	301Y	20		27-21-12	ALL
	5	UNUSED						ALL
	6		W0579	201R	20		27-21-12	ALL
	7		W0579	201B	20		27-21-12	ALL
	8	UNUSED						ALL
	9		W0579	202R	20		27-21-12	ALL
	10		W0579	202B	20		27-21-12	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16		W0579	302R	20		22-21-11	ALL
	17		W0579	302B	20		22-21-11	ALL
	18		W0579	302Y	20		22-21-11	ALL
	19		W0579	203R	20		22-21-11	ALL
	20		W0579	203B	20		22-21-11	ALL
	21		W0579	204R	20		22-21-11	ALL
	22		W0579	204B	20		22-21-11	ALL
	23	UNUSED						ALL
	24	DL	W0579	005	18		22-21-11	ALL
D04559P		AP1501/ /		PLUG-				ALL
	1		W1251	006	22		27-21-12	ALL
	2		W1251	304R	22		27-21-12	ALL
	3		W1251	304B	22		27-21-12	ALL
	4		W1251	304Y	22		27-21-12	ALL
	5	UNUSED						ALL
	6		W1251	209R	22		27-21-12	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04500

Page 54

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04559P		AP1501/ /		PLUG- (continued)				ALL
	7		W1251	209B	22		27-21-12	ALL
	8	UNUSED						ALL
	9		W1251	210R	22		27-21-12	ALL
	10		W1251	210B	22		27-21-12	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13		W1251	010	22		SPARE	ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16		W1251	303R	22		22-21-11	ALL
	17		W1251	303B	22		22-21-11	ALL
	18		W1251	303Y	22		22-21-11	ALL
	19		W1251	207R	22		22-21-11	ALL
	20		W1251	207B	22		22-21-11	ALL
	21		W1251	208R	22		22-21-11	ALL
	22		W1251	208B	22		22-21-11	ALL
	23	UNUSED						ALL
	24	DK	W1251	005	18		22-21-11	ALL
D04560J		AF0120/ /		RCPT-P3				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W0632	153	22		33-16-12	ALL
	4	UNUSED						ALL
	5		W0632	154	22		33-16-12	ALL
	6		W0632	156	22		33-16-12	ALL
	7	UNUSED						ALL
	8		W0632	158	22		33-16-12	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12		W0632	099	22		21-33-11	ALL
	13		W0632	520	22		30-33-11	ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D04500
Page 55
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04560J		AF0120/ /		RCPT-P3 (continued)				ALL
	21	UNUSED						ALL
	22		W0632	801	20		SPARE	ALL
	23		W0632	802	22		SPARE	ALL
	24		W0632	803	24		SPARE	ALL
	DED		W0632	153Z			33-16-12	ALL
	DED		W0632	154Z			33-16-12	ALL
	DED		W0632	156Z			33-16-12	ALL
	DED		W0632	158Z			33-16-12	ALL
D04560P		AF0120/ /		PLUG-				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W0011	084	22		33-16-13	ALL
	4	UNUSED						ALL
	5		W0011	791	22		33-16-12	ALL
	6		W0011	792	22		33-16-12	ALL
	7	UNUSED						ALL
	8		W0011	093	22		33-16-16	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12		W0011	722	22		21-33-11	ALL
	13		W0011	134	22		30-33-11	ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	DED		W0011	084Z			33-16-13	ALL
	DED		W0011	093Z			33-16-16	ALL
	DED		W0011	791Z			33-16-12	ALL
	DED		W0011	792Z			33-16-12	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04500

Page 56

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04565J		AE0319/ /		RCPT-E1-2				ALL
	1		W0619	203B	22		27-58-21	ALL
	2		W0619	203R	22		27-58-21	ALL
	3		W0619	302B	24		27-58-21	ALL
	4		W0619	302R	24		27-58-21	ALL
	5		W0619	302Y	24		27-58-21	ALL
	6		W0619	001	24		31-51-41	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D04565P		AE0319/ /		PLUG-E1-2				ALL
	1		W1090	204B	22		27-58-21	ALL
	2		W1090	204R	22		27-58-21	ALL
	3		W1090	301B	24		27-58-21	ALL
	4		W1090	301R	24		27-58-21	ALL
	5		W1090	301Y	24		27-58-21	ALL
	6		W1090	016	24		31-51-41	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D04567J		AP1501/ /		RCPT-				ALL
	1	UNUSED						ALL
	2		W0583	301R	20		27-21-22	ALL
	3		W0583	301B	20		27-21-22	ALL
	4		W0583	301Y	20		27-21-22	ALL
	5	UNUSED						ALL
	6		W0583	201R	20		27-21-22	ALL
	7		W0583	201B	20		27-21-22	ALL
	8	UNUSED						ALL
	9		W0583	202R	20		27-21-22	ALL
	10		W0583	202B	20		27-21-22	ALL
	11	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D04500

Page 57

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04567J		AP1501 / /		RCPT- (continued)				ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	DL	W0583	004	18		22-21-21	ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18		W0583	203R	20		22-21-21	ALL
	19		W0583	203B	20		22-21-21	ALL
	20		W0583	302R	20		22-21-21	ALL
	21		W0583	302B	20		22-21-21	ALL
	22		W0583	302Y	20		22-21-21	ALL
	23		W0583	204R	20		22-21-21	ALL
	24		W0583	204B	20		22-21-21	ALL
D04567P		AP1501 / /		PLUG-				ALL
	1	UNUSED						ALL
	2		W1261	304R	22		27-21-22	ALL
	3		W1261	304B	22		27-21-22	ALL
	4		W1261	304Y	22		27-21-22	ALL
	5	UNUSED						ALL
	6		W1261	209R	22		27-21-22	ALL
	7		W1261	209B	22		27-21-22	ALL
	8	UNUSED						ALL
	9		W1261	210R	22		27-21-22	ALL
	10		W1261	210B	22		27-21-22	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13		W1261	005	22		SPARE	ALL
	14	UNUSED						ALL
	15	DK	W1261	001	18		22-21-21	ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18		W1261	207R	22		22-21-21	ALL
	19		W1261	207B	22		22-21-21	ALL
	20		W1261	303R	22		22-21-21	ALL
	21		W1261	303B	22		22-21-21	ALL
	22		W1261	303Y	22		22-21-21	ALL
	23		W1261	208R	22		22-21-21	ALL
	24		W1261	208B	22		22-21-21	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04500

Page 58

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04571J		AE0317/ /		RECP-MOA PER DWG REF BACC45FN20-28S8				050-099
D04571J		AE0317/ /		RECP-MOA PER DWG REF BACC45FN20-28S8				150-199, 275-299
	1		W1417	206R	24		23-32-21	ALL
	2		W1417	206B	24		23-32-21	ALL
	3		W1417	207R	24		23-32-21	ALL
	4		W1417	207B	24		23-32-21	ALL
	5		W1417	301B	24		23-32-21	ALL
	6		W1417	301R	24		23-32-21	ALL
	7		W1417	301Y	24		23-32-21	ALL
	8		W1417	302B	24		23-32-21	ALL
	9		W1417	302R	24		23-32-21	ALL
	10		W1417	302Y	24		23-32-21	ALL
	11		W1417	208R	24		23-32-21	ALL
	12		W1417	208B	24		23-32-21	ALL
	13	UNUSED						050-099, 151, 275-299
	13		W1417	901Z			23-32-21	150, 152-199
	14	UNUSED						050-099, 151, 275-299
	14		W1417	901	20		23-32-21	150, 152-199
	15		W1417	09CX			23-32-21	ALL
	16	UNUSED						050-099, 151, 275-299
	16		W1417	902	20		23-32-21	150, 152-199
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						050-099, 151, 275-299
	22		W1417	FRB			23-32-21	150, 152-199
	23	UNUSED						050-099, 151, 275-299
	23		W1417	924R	22		23-32-21	150, 152-199
	24	UNUSED						050-099, 151, 275-299
	24		W1417	924B	22		23-32-21	150, 152-199
	25		W1417	FRA			23-32-21	050-099
	25		W1417	FRD			23-32-21	150-199, 275-299
	26		W1417	501	20		23-32-21	050-099, 151, 275-299
	26		W1417	918	20		23-32-21	150, 152-199
	27	UNUSED						050-099, 151, 275-299
	27		W1417	925R	22		23-32-21	150, 152-199
	28	UNUSED						050-099, 151, 275-299
	28		W1417	925B	22		23-32-21	150, 152-199
	C19	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D04500

Page 59

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04571J		AE0317 / /		RECP-MOA PER DWG REF BACC45FN20-28S8 (continued)				050-099
D04571J		AE0317 / /		RECP-MOA PER DWG REF BACC45FN20-28S8 (continued)				150-199, 275-299
	C23	UNUSED						ALL
	C27	UNUSED						ALL
	= C15		W1417	09CO			23-32-21	ALL
	DED		W1417	902Z			23-32-21	150, 152-199
			W1417	FRA			23-32-21	050-099
			W1417	206Z			23-32-21	ALL
			W1417	207Z			23-32-21	ALL
			W1417	208Z			23-32-21	ALL
			W1417	301Z			23-32-21	ALL
			W1417	302Z			23-32-21	ALL
			W1417	924Z			23-32-21	150, 152-199
			W1417	925Z			23-32-21	150, 152-199
			W1417	FRB			23-32-21	150, 152-199
			W1417	FRD			23-32-21	150-199, 275-299
D04571P		AE0317 / /		PLUG MOA PER DWG REF BACC45FT20-28P8				ALL
	1		W0117	527R	24		23-32-21	050-099, 150-199
	1		W0117	572R	24		23-32-21	275-299
	2		W0117	527B	24		23-32-21	050-099, 150-199
	2		W0117	572B	24		23-32-21	275-299
	3		W0117	528R	24		23-32-21	ALL
	4		W0117	528B	24		23-32-21	ALL
	5		W0117	003	24		23-32-21	ALL
	6		W0117	552R	24		23-32-21	ALL
	7		W0117	552B	24		23-32-21	ALL
	8		W0117	313B	24		23-32-21	ALL
	9		W0117	313R	24		23-32-21	ALL
	10		W0117	313Y	24		23-32-21	ALL
	11		W0117	553R	24		23-32-21	ALL
	12		W0117	553B	24		23-32-21	ALL
	13	UNUSED						050-099, 151, 275-299
	13		W0117	FRN			23-32-21	150, 152-199
	14	UNUSED						050-099, 151, 275-299
	14		W0117	902	20		23-32-21	150, 152-199
	15		W0117	01CX			23-32-21	ALL
	16	UNUSED						050-099, 151, 275-299
	16		W0117	903	20		23-32-21	150, 152-199
	17	UNUSED						050-099, 151, 275-299
	17		W0117	904	20		23-32-21	150, 152-199

HOOKUP LIST

D280T132

91-21-51

Section D04500

Page 60

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04571P		AE0317/ /		PLUG MOA PER DWG REF BACC45FT20-28P8 (continued)				ALL
	18	UNUSED						050-099, 151, 275-299
	18		W0117	905	20		23-32-21	150, 152-199
	19	UNUSED						ALL
	20	UNUSED						050-099, 151, 275-299
	20		W0117	906	20		23-32-21	150, 152-199
	21	UNUSED						050-099, 151, 275-299
	21		W0117	FRQ			23-32-21	150, 152-199
	22	UNUSED						050-099, 151, 275-299
	22		W0117	FRT			23-32-21	150, 152-199
	23	UNUSED						050-099, 151, 275-299
	23		W0117	924R	22		23-32-21	150, 152-199
	24	UNUSED						050-099, 151, 275-299
	24		W0117	924B	22		23-32-21	150, 152-199
	25		W0117	FRC			23-32-21	ALL
	26		W0117	625	20		23-32-21	ALL
	27	UNUSED						050-099, 151, 275-299
	27		W0117	925R	22		23-32-21	150, 152-199
	28	UNUSED						050-099, 151, 275-299
	28		W0117	925B	22		23-32-21	150, 152-199
	C15	UNUSED						150, 152-156, 162-199
	C19	UNUSED						ALL
	C23	UNUSED						ALL
	C27	UNUSED						ALL
	= C15		W0117	01CO			23-32-21	050-099, 151, 157, 275-299
	DED		W0117	01CO			23-32-21	150, 152-156, 162-199
	REF		W0117	527Z			23-32-21	050-099, 150-199
	REF		W0117	003Z			23-32-21	ALL
	REF		W0117	313Z			23-32-21	ALL
	REF		W0117	528Z			23-32-21	ALL
	REF		W0117	552Z			23-32-21	ALL
	REF		W0117	553Z			23-32-21	ALL
	REF		W0117	FRC			23-32-21	ALL
	REF		W0117	572Z			23-32-21	275-299
	REF		W0117	902Z			23-32-21	150, 152-199
			W0117	903Z			23-32-21	150, 152-199
			W0117	904Z			23-32-21	150, 152-199
			W0117	905Z			23-32-21	150, 152-199
			W0117	906Z			23-32-21	150, 152-199
			W0117	924Z			23-32-21	150, 152-199
			W0117	925Z			23-32-21	150, 152-199

HOOKUP LIST

D280T132

91-21-51

Section D04500

Page 61

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04571P		AE0317/ /		PLUG MOA PER DWG REF BACC45FT20-28P8 (continued)				ALL
			W0117	FRN			23-32-21	150, 152-199
			W0117	FRQ			23-32-21	150, 152-199
			W0117	FRT			23-32-21	150, 152-199
D04575J		AC0604/ /		RCPT-E5-1 ADF L				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9		W0615	003	22		34-57-11	ALL
	10		W0615	202Z			34-57-11	ALL
	11		W0615	202B	24		34-57-11	ALL
	12		W0615	202R	24		34-57-11	ALL
D04575P		AC0604/ /		PLUG-E5-1				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9		W0165	020	20		34-57-11	ALL
	10		W0165	210Z			34-57-11	ALL
	11		W0165	210B	24		34-57-11	ALL
	12		W0165	210R	24		34-57-11	ALL
	DED		W0165	020Z			34-57-11	ALL
D04576J		P002-00/ /		RCPT-SHORTING				050-099
	A	UNUSED						050-099
	B	UNUSED						050-099
	C	UNUSED						050-099
	D	UNUSED						050-099
	E	UNUSED						050-099
	F	UNUSED						050-099

HOOKUP LIST

D280T132

91-21-51

Section D04500

Page 62

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04576J		P002-00/ /		RCPT-SHORTING (continued)				050-099
	G	UNUSED						050-099
	H	UNUSED						050-099
	J	UNUSED						050-099
	K	UNUSED						050-099
	L	UNUSED						050-099
	M	UNUSED						050-099
	N	UNUSED						050-099
	P	UNUSED						050-099
	R	UNUSED						050-099
	S	UNUSED						050-099
	T	UNUSED						050-099
	U	UNUSED						050-099
	V	UNUSED						050-099
	W	UNUSED						050-099
	X	UNUSED						050-099
	Y	UNUSED						050-099
	Z	UNUSED						050-099
	AA	UNUSED						050-099
	BB	UNUSED						050-099
	CC	UNUSED						050-099
	DD	UNUSED						050-099
	EE	UNUSED						050-099
	FF	UNUSED						050-099
	GG	UNUSED						050-099
	HH	UNUSED						050-099
	A-	UNUSED						050-099
	B-	UNUSED						050-099
	C-	UNUSED						050-099
	D-	UNUSED						050-099
	E-	UNUSED						050-099
	F-	UNUSED						050-099
	G-	UNUSED						050-099
	H-	UNUSED						050-099
	I-	UNUSED						050-099
	J-	UNUSED						050-099
	K-	UNUSED						050-099
	M-	UNUSED						050-099
	N-	UNUSED						050-099
	P-	UNUSED						050-099
	Q-	UNUSED						050-099

HOOKUP LIST

D280T132

91-21-51

Section D04500

Page 63

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04576J		P002-00/ /		RCPT-SHORTING (continued)				050-099
	R-	UNUSED						050-099
	S-	UNUSED						050-099
	T-	UNUSED						050-099
	U-	UNUSED						050-099
	V-	UNUSED						050-099
	W-	UNUSED						050-099
	X-	UNUSED						050-099
	Y-	UNUSED						050-099
	Z-	UNUSED						050-099
D04577J		AC0604/ /		RCPT-E5-1				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9		W0617	003	22		34-57-21	ALL
	10		W0617	202Z			34-57-21	ALL
	11		W0617	202B	24		34-57-21	ALL
	12		W0617	202R	24		34-57-21	ALL
	DED		W0617	003Z			34-57-21	ALL
D04577P		AC0604/ /		PLUG-E5-1				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9		W0175	020	20		34-57-21	ALL
	10		W0175	210Z			34-57-21	ALL
	11		W0175	210B	24		34-57-21	ALL
	12		W0175	210R	24		34-57-21	ALL
	DED		W0175	020Z			34-57-21	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04500

Page 64

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04579J		AC0604/ /		RCPT-E5-1				ALL
	1		W0623	001	24		23-51-13	ALL
	2		W0623	001Z			23-51-13	ALL
	3		W0623	002	22		SPARE	ALL
	4		W0623	003	24		23-51-13	ALL
	5		W0623	003Z			23-51-13	ALL
	6		W0623	201R	24		31-35-13	ALL
	7		W0623	201B	24		31-35-13	ALL
	8		W0623	201Z			31-35-13	ALL
	9	UNUSED						050-099, 275-299
	9		W0623	202R	24		SPARE	150-199
	10	UNUSED						050-099, 275-299
	10		W0623	202B	24		SPARE	150-199
	11	UNUSED						050-099, 275-299
	11		W0623	202Z			SPARE	150-199
	12	UNUSED						ALL
D04579P		AC0604/ /		PLUG-E5-1				ALL
	1		W0165	208R	24		23-51-13	ALL
	2		W0165	208B	24		23-51-13	ALL
	3	UNUSED						ALL
	4		W0165	227R	24		23-51-13	ALL
	5		W0165	227B	24		23-51-13	ALL
	6		W0165	209R	24		31-35-13	ALL
	7		W0165	209B	24		31-35-13	ALL
	8		W0165	209Z			31-35-13	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D04580J		P001-03/ /		RCPT-SHORTING				ALL
	A	UNUSED						ALL
	B	UNUSED						ALL
	C	UNUSED						ALL
	D	UNUSED						ALL
	E	UNUSED						ALL
	F	UNUSED						ALL
	G	UNUSED						ALL
	H	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D04500

Page 65

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04580J		P001-03/ /		RCPT-SHORTING (continued)				ALL
	J	UNUSED						ALL
	K	UNUSED						ALL
	L	UNUSED						ALL
	M	UNUSED						ALL
	N	UNUSED						ALL
	P	UNUSED						ALL
	R	UNUSED						ALL
	S	UNUSED						ALL
	T	UNUSED						ALL
	U	UNUSED						ALL
	V	UNUSED						ALL
	W	UNUSED						ALL
	X	UNUSED						ALL
	Y	UNUSED						ALL
	Z	UNUSED						ALL
	AA	UNUSED						ALL
	BB	UNUSED						ALL
	CC	UNUSED						ALL
	DD	UNUSED						ALL
	EE	UNUSED						ALL
	FF	UNUSED						ALL
	GG	UNUSED						ALL
	HH	UNUSED						ALL
	A-	UNUSED						ALL
	B-	UNUSED						ALL
	C-	UNUSED						ALL
	D-	UNUSED						ALL
	E-	UNUSED						ALL
	F-	UNUSED						ALL
	G-	UNUSED						ALL
	H-	UNUSED						ALL
	I-	UNUSED						ALL
	J-	UNUSED						ALL
	K-	UNUSED						ALL
	M-	UNUSED						ALL
	N-	UNUSED						ALL
	P-	UNUSED						ALL
	Q-	UNUSED						ALL
	R-	UNUSED						ALL
	S-	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D04500

Page 66

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04580J		P001-03/ /		RCPT-SHORTING (continued)				ALL
	T-	UNUSED						ALL
	U-	UNUSED						ALL
	V-	UNUSED						ALL
	W-	UNUSED						ALL
	X-	UNUSED						ALL
	Y-	UNUSED						ALL
	Z-	UNUSED						ALL
D04580P		AF0113/ /		PLUG-P1-3				ALL
	1		W0013	133	22		33-16-13	ALL
	2		W0013	135	22		33-16-13	ALL
	3		W0013	137	22		33-16-13	ALL
	4		W0013	139	22		33-16-13	ALL
	5		W0013	006	22		33-16-13	ALL
	6		W0013	008	22		33-16-13	ALL
	7		W0013	010	22		33-16-13	ALL
	8		W0013	138	22		33-16-13	ALL
	9		W0013	142	22		33-16-13	ALL
	10		W0013	141	22		33-16-13	ALL
	11		W0013	143	22		33-16-13	ALL
	12	UNUSED						ALL
	13		W0013	134	22		33-16-13	ALL
	14		W0013	136	22		33-16-13	ALL
	15		W0013	140	22		33-16-13	ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19		W0013	146	22		33-16-13	ALL
	20		W0013	148	22		33-16-13	ALL
	21		W0013	149	22		33-16-13	ALL
	22		W0013	151	22		33-16-13	ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27		W0013	144	22		33-16-13	ALL
	28		W0013	145	22		33-16-13	ALL
	29		W0013	147	22		33-16-13	ALL
	30		W0013	150	22		33-16-13	ALL
	31		W0013	152	22		33-16-13	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04500

Page 67

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04580P		AF0113/ /		PLUG-P1-3 (continued)				ALL
	32		W0013	153	22		33-16-13	ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	40		W0013	901	22		33-16-13	050-099, 151 150, 152-199, 275-299
	41	UNUSED						050-099, 151
	41		W0013	902	22		33-16-13	150, 152-199, 275-299
	42	UNUSED						ALL
	43	UNUSED						ALL
	44		W0013	085	22		33-16-13	ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51		W0013	086	22		33-16-13	ALL
	52	UNUSED						ALL
	53		W0013	004	22		33-16-13	ALL
	54	UNUSED						ALL
	55		W0013	005	22		33-16-13	ALL
	DED		W0013	004Z			33-16-13	ALL
	DED		W0013	005Z			33-16-13	ALL
	DED		W0013	006Z			33-16-13	ALL
	DED		W0013	008Z			33-16-13	ALL
	DED		W0013	010Z			33-16-13	ALL
	DED		W0013	085Z			33-16-13	ALL
	DED		W0013	086Z			33-16-13	ALL
	DED		W0013	133Z			33-16-13	ALL
	DED		W0013	134Z			33-16-13	ALL
	DED		W0013	135Z			33-16-13	ALL
	DED		W0013	136Z			33-16-13	ALL
	DED		W0013	137Z			33-16-13	ALL
	DED		W0013	138Z			33-16-13	ALL
	DED		W0013	139Z			33-16-13	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04500

Page 68

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04580P		AF0113/ /		PLUG-P1-3 (continued)				ALL
	DED		W0013	140Z			33-16-13	ALL
	DED		W0013	141Z			33-16-13	ALL
	DED		W0013	142Z			33-16-13	ALL
	DED		W0013	143Z			33-16-13	ALL
	DED		W0013	144Z			33-16-13	ALL
	DED		W0013	145Z			33-16-13	ALL
	DED		W0013	146Z			33-16-13	ALL
	DED		W0013	147Z			33-16-13	ALL
	DED		W0013	148Z			33-16-13	ALL
	DED		W0013	149Z			33-16-13	ALL
	DED		W0013	150Z			33-16-13	ALL
	DED		W0013	151Z			33-16-13	ALL
	DED		W0013	152Z			33-16-13	ALL
	DED		W0013	153Z			33-16-13	ALL
D04581J		AE0306/ /		RCPT-E2-5				ALL
	1		W0623	001	24		23-51-13	ALL
	2		W0623	001Z			23-51-13	ALL
	3		W0623	002	22		SPARE	ALL
	4		W0623	003	24		23-51-13	ALL
	5		W0623	003Z			23-51-13	ALL
	6		W0623	201R	24		31-35-13	ALL
	7		W0623	201B	24		31-35-13	ALL
	8		W0623	201Z			31-35-13	ALL
	9	UNUSED						050-099, 275-299
	9		W0623	202R	24		SPARE	150-199
	10	UNUSED						050-099, 275-299
	10		W0623	202B	24		SPARE	150-199
	11	UNUSED						050-099, 275-299
	11		W0623	202Z			SPARE	150-199
	12	UNUSED						ALL
D04581P		AE0306/ /		PLUG-E2-5				ALL
	1		W0149	241R	24		23-51-13	ALL
	2		W0149	241B	24		23-51-13	ALL
	3	UNUSED						ALL
	4		W0149	260R	24		23-51-13	ALL
	5		W0149	260B	24		23-51-13	ALL
	6		W0149	253R	24		31-35-13	ALL
	7		W0149	253B	24		31-35-13	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04500

Page 69

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04581P		AE0306/ /		PLUG-E2-5 (continued)				ALL
	8		W0149	253Z			31-35-13	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D04586J		P001-03/ /		RCPT-SHORTING				ALL
	A	UNUSED						ALL
	B	UNUSED						ALL
	C	UNUSED						ALL
	D	UNUSED						ALL
	E	UNUSED						ALL
	F	UNUSED						ALL
	G	UNUSED						ALL
	H	UNUSED						ALL
	J	UNUSED						ALL
	K	UNUSED						ALL
	L	UNUSED						ALL
	M	UNUSED						ALL
	N	UNUSED						ALL
	P	UNUSED						ALL
	R	UNUSED						ALL
	S	UNUSED						ALL
	T	UNUSED						ALL
	U	UNUSED						ALL
	V	UNUSED						ALL
	W	UNUSED						ALL
	X	UNUSED						ALL
	Y	UNUSED						ALL
	Z	UNUSED						ALL
	AA	UNUSED						ALL
	BB	UNUSED						ALL
	CC	UNUSED						ALL
	DD	UNUSED						ALL
	EE	UNUSED						ALL
	FF	UNUSED						ALL
	GG	UNUSED						ALL
	HH	UNUSED						ALL
	A-	UNUSED						ALL
	B-	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D04500

Page 70

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04586J		P001-03/ /		RCPT-SHORTING (continued)				ALL
	C-	UNUSED						ALL
	D-	UNUSED						ALL
	E-	UNUSED						ALL
	F-	UNUSED						ALL
	G-	UNUSED						ALL
	H-	UNUSED						ALL
	I-	UNUSED						ALL
	J-	UNUSED						ALL
	K-	UNUSED						ALL
	M-	UNUSED						ALL
	N-	UNUSED						ALL
	P-	UNUSED						ALL
	Q-	UNUSED						ALL
	R-	UNUSED						ALL
	S-	UNUSED						ALL
	T-	UNUSED						ALL
	U-	UNUSED						ALL
	V-	UNUSED						ALL
	W-	UNUSED						ALL
	X-	UNUSED						ALL
	Y-	UNUSED						ALL
	Z-	UNUSED						ALL
D04586P		AF0113/ /		PLUG-P1-3				ALL
	1		W0013	087	22		33-16-13	ALL
	2		W0013	089	22		33-16-13	ALL
	3		W0013	091	22		33-16-13	ALL
	4		W0013	093	22		33-16-13	ALL
	5		W0013	025	22		33-16-13	ALL
	6		W0013	027	22		33-16-13	ALL
	7	UNUSED						ALL
	8		W0013	092	22		33-16-13	ALL
	9		W0013	096	22		33-16-13	ALL
	10		W0013	095	22		33-16-13	ALL
	11		W0013	097	22		33-16-13	ALL
	12		W0013	007	22		33-16-13	ALL
	13		W0013	088	22		33-16-13	ALL
	14		W0013	090	22		33-16-13	ALL
	15		W0013	094	22		33-16-13	ALL
	16		W0013	083	22		33-16-13	ALL

HOOKUP LIST
D280T132

91-21-51
Section D04500
Page 71
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04586P		AF0113/ /		PLUG-P1-3 (continued)				ALL
	17	UNUSED						ALL
	18		W0013	024	22		33-16-13	ALL
	19		W0013	125	22		33-16-13	ALL
	20		W0013	127	22		33-16-13	ALL
	21		W0013	128	22		33-16-13	ALL
	22		W0013	130	22		33-16-13	ALL
	23	UNUSED						ALL
	24		W0013	009	22		33-16-13	ALL
	25		W0013	011	22		33-16-13	ALL
	26		W0013	026	22		33-16-13	ALL
	27		W0013	098	22		33-16-13	ALL
	28		W0013	099	22		33-16-13	ALL
	29		W0013	126	22		33-16-13	ALL
	30		W0013	129	22		33-16-13	ALL
	31		W0013	131	22		33-16-13	ALL
	32		W0013	132	22		33-16-13	ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						050-099, 151
	40		W0013	903	22		33-16-13	150, 152-199, 275-299
	41	UNUSED						050-099, 151
	41		W0013	904	22		33-16-13	150, 152-199, 275-299
	42	UNUSED						ALL
	43		W0013	028	22		33-16-13	ALL
	44		W0013	109	22		33-16-13	ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51		W0013	084	22		33-16-13	ALL
	52	UNUSED						ALL
	53		W0013	081	22		33-16-13	ALL
	54	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D04500

Page 72

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04586P		AF0113/ /		PLUG-P1-3 (continued)				ALL
	55		W0013	023	22		33-16-13	ALL
	DED		W0013	024Z			33-16-13	ALL
	DED		W0013	025Z			33-16-13	ALL
	DED		W0013	026Z			33-16-13	ALL
	DED		W0013	027Z			33-16-13	ALL
	DED		W0013	028Z			33-16-13	ALL
	DED		W0013	081Z			33-16-13	ALL
	DED		W0013	083Z			33-16-13	ALL
	DED		W0013	084Z			33-16-13	ALL
	DED		W0013	087Z			33-16-13	ALL
	DED		W0013	088Z			33-16-13	ALL
	DED		W0013	089Z			33-16-13	ALL
	DED		W0013	090Z			33-16-13	ALL
	DED		W0013	091Z			33-16-13	ALL
	DED		W0013	093Z			33-16-13	ALL
	DED		W0013	094Z			33-16-13	ALL
	DED		W0013	095Z			33-16-13	ALL
	DED		W0013	097Z			33-16-13	ALL
	DED		W0013	098Z			33-16-13	ALL
	DED		W0013	099Z			33-16-13	ALL
	DED		W0013	109Z			33-16-13	ALL
	DED		W0013	126Z			33-16-13	ALL
	DED		W0013	129Z			33-16-13	ALL
	DED		W0013	131Z			33-16-13	ALL
	DED		W0013	132Z			33-16-13	ALL
D04590J		AL1001/ /		RCPT-L WING RS/BODY				ALL
	1		W0756	078	22		27-58-11	050-099, 150-155, 162-165, 275-276
	1		W0756	309R	20		27-58-11	156-157, 166-199, 277-299
	2		W0756	079	22		27-58-11	050-099, 150-155, 162-165, 275-276
	2		W0756	309B	20		27-58-11	156-157, 166-199, 277-299
	3		W0756	049	22		27-58-11	ALL
	4		W0756	081	22		27-18-11	ALL
	5		W0756	082	22		27-18-11	050-099, 150-156, 162-166
	5		W0756	082	22		SPARE	157, 167-199, 275-299
	6		W0756	083	22		27-18-11	050-099, 150-156, 162-166
	6		W0756	083	22		SPARE	157, 167-199, 275-299
	7		W0756	084	22		27-18-11	ALL
	8		W0756	300Z			31-31-25	ALL
	9		W0756	300R	18		31-31-25	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04500

Page 73

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04590J		AL1001/ /		RCPT-L WING RS/BODY (continued)				ALL
	10		W0756	244B	18		28-43-11	ALL
	11		W0756	244R	18		28-43-11	ALL
	12		W0756	300Y	18		31-31-25	ALL
	13		W0756	300B	18		31-31-25	ALL
	14		W0756	089	20		27-62-11	ALL
	15		W0756	226B	22		27-58-21	ALL
	16		W0756	226R	22		27-58-21	ALL
	17		W0756	304B	22		27-58-21	ALL
	18		W0756	304R	22		27-58-21	ALL
	19		W0756	304Y	22		27-58-21	ALL
	20		W0756	531	20		27-18-11	ALL
	21	UNUSED						ALL
	22		W0756	533	20		27-18-11	ALL
	23		W0756	066	20		27-58-11	050-099, 150-155, 162-165, 275-276
	23		W0756	309Y	20		27-58-11	156-157, 166-199, 277-299
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
D04590P		AL1001/ /		PLUG-L WING RS/BODY				ALL
	1		W0446	407G	20		27-58-11	ALL
	2		W0446	407B	20		27-58-11	ALL
	3		W0446	407R	20		27-58-11	ALL
	4		W0446	405B	20		27-18-11	050-099, 150-154, 162-165, 275-276
	4		W0446	216R	20		27-18-11	155-157, 166-199, 277-299
	5		W0446	405Y	20		27-18-11	050-099, 150-154, 162-165, 275-276
	5	UNUSED						155-157, 166-199, 277-299
	6		W0446	405G	20		27-18-11	050-099, 150-154, 162-165, 275-276
	6	UNUSED						155-157, 166-199, 277-299
	7		W0446	406B	20		27-18-11	050-099, 150-154, 162-165, 275-276
	7		W0446	217B	20		27-18-11	155-157, 166-199, 277-299
	8		W0446	FRC			31-31-25	ALL
	9		W0446	303R	18		31-31-25	ALL
	10		W0446	212B	18		28-43-11	ALL
	11		W0446	212R	18		28-43-11	ALL
	12		W0446	303Y	18		31-31-25	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04500

Page 74

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04590P		AL1001/ /		PLUG-L WING RS/BODY (continued)				ALL
	13		W0446	303B	18		31-31-25	ALL
	14		W0446	022	18		27-62-11	ALL
	15		W0446	201B	20		27-58-21	ALL
	16		W0446	201R	20		27-58-21	ALL
	17		W0446	301B	20		27-58-21	ALL
	18		W0446	301R	20		27-58-21	ALL
	19		W0446	301Y	20		27-58-21	ALL
	20		W0446	405R	20		27-18-11	050-099, 150-154, 162-165, 275-276
	20		W0446	216B	20		27-18-11	155-157, 166-199, 277-299
	21	UNUSED						ALL
	22		W0446	406G	20		27-18-11	050-099, 150-154, 162-165, 275-276
	22		W0446	217R	20		27-18-11	155-157, 166-199, 277-299
	23		W0446	407Y	20		27-58-11	ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
			W0446	303	20		31-31-25	ALL
			W0446	303Z			31-31-25	ALL
			W0446	FRC			31-31-25	ALL
D04591J		AE0319/ /		RCPT-E1-3				ALL
	1		W0459	001	22		22-11-12	ALL
	2		W0459	002	22		22-11-12	ALL
	3		W0459	003	22		22-11-12	ALL
	4		W0459	201R	24		22-12-11	ALL
	5		W0459	201B	24		22-12-11	ALL
	6		W0459	201Z			22-12-11	ALL
	7		W0459	202R	24		22-13-11	ALL
	8		W0459	202B	24		22-13-11	ALL
	9		W0459	202Z			22-13-11	ALL
	10		W0459	203R	24		22-14-11	ALL
	11		W0459	203B	24		22-14-11	ALL
	12		W0459	203Z			22-14-11	ALL
	13		W0459	007	24		22-32-15	ALL
	14		W0459	008	24		22-32-15	ALL
	15		W0459	025	24		SPARE	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04500

Page 75

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04591J		AE0319/ /		RCPT-E1-3 (continued)				ALL
	16	UNUSED						050-099, 153-199, 277-299
	16		W0459	224R	22		34-45-13	150-152, 275-276
	17	UNUSED						050-099, 153-199, 277-299
	17		W0459	224B	22		34-45-13	150-152, 275-276
	18		W0459	026	22		SPARE	ALL
	19		W0459	027	22		SPARE	ALL
	20		W0459	028	24		SPARE	ALL
	21		W0459	207R	24		31-51-21	ALL
	22		W0459	207B	24		31-51-21	ALL
	23		W0459	207Z			31-51-21	ALL
	24	UNUSED						050-099, 153-199, 277-299
	24		W0459	224Z			34-45-13	150-152, 275-276
	25	UNUSED						ALL
	26	UNUSED						ALL
	27		W0459	224R	22		34-45-13	050-099, 153-199, 277-299
	27	UNUSED						150-152, 275-276
	28		W0459	224B	22		34-45-13	050-099, 153-199, 277-299
	28	UNUSED						150-152, 275-276
	29		W0459	224Z			34-45-13	050-099, 153-199, 277-299
	29	UNUSED						150-152, 275-276
	30	UNUSED						ALL
	31	UNUSED						ALL
D04591P		AE0319/ /		PLUG-E1-3				ALL
	1		W0105	011	22		22-11-12	ALL
	2		W0105	023	22		22-11-12	ALL
	3		W0105	010	22		22-11-12	ALL
	4		W0105	214R	24		22-12-11	ALL
	5		W0105	214B	24		22-12-11	ALL
	6		W0105	214Z			22-12-11	ALL
	7		W0105	221R	24		22-13-11	ALL
	8		W0105	221B	24		22-13-11	ALL
	9		W0105	221Z			22-13-11	ALL
	10		W0105	686R	24		22-14-11	ALL
	11		W0105	686B	24		22-14-11	ALL
	12		W0105	686Z			22-14-11	ALL
	13		W0105	750	24		22-32-15	ALL
	14		W0105	760	24		22-32-15	ALL
	15	UNUSED						ALL
	16	UNUSED						050-099, 153-199, 277-299

HOOKUP LIST

D280T132

91-21-51

Section D04500

Page 76

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04591P		AE0319/ /		PLUG-E1-3 (continued)				ALL
	16		W0105	782R	22		34-45-13	150-152, 275-276
	17	UNUSED						050-099, 153-199, 277-299
	17		W0105	782B	22		34-45-13	150-152, 275-276
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21		W0105	289R	24		31-51-21	ALL
	22		W0105	289B	24		31-51-21	ALL
	23		W0105	289Z			31-51-21	ALL
	24	UNUSED						050-099, 153-199, 277-299
	24		W0105	782Z			34-45-13	150-152, 275-276
	25	UNUSED						ALL
	26	UNUSED						ALL
	27		W0105	782R	22		34-45-13	050-099, 153-199, 277-299
	27	UNUSED						150-152, 275-276
	28		W0105	782B	22		34-45-13	050-099, 153-199, 277-299
	28	UNUSED						150-152, 275-276
	29		W0105	782Z			34-45-13	050-099, 153-199, 277-299
	29	UNUSED						150-152, 275-276
	30	UNUSED						ALL
	31	UNUSED						ALL
	DED		W0105	023Z			22-11-12	ALL
D04593J		AE0319/ /		RCPT-E1-4				ALL
	1		W0461	001	22		22-11-32	ALL
	2		W0461	002	22		22-11-32	ALL
	3		W0461	201R	24		22-12-31	ALL
	4		W0461	201B	24		22-12-31	ALL
	5		W0461	201Z			22-12-31	ALL
	6	UNUSED						ALL
	7		W0461	009	22		SPARE	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D04593P		AE0319/ /		PLUG-E1-4				ALL
	1		W0127	011	22		22-11-32	ALL
	2		W0127	010	22		22-11-32	ALL

HOOKUP LIST
D280T132

91-21-51
Section D04500
Page 77
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04593P		AE0319/ /		PLUG-E1-4 (continued)				ALL
	3		W0127	214R	24		22-12-31	ALL
	4		W0127	214B	24		22-12-31	ALL
	5		W0127	214Z			22-12-31	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	DED		W0127	011Z			22-11-32	ALL
D04594J		AL1001/ /		RCPT-				ALL
	1		W0942	017	24		28-41-21	ALL
	2		W0942	018	24		28-41-21	ALL
	3		W0942	019	24		28-41-21	ALL
	4		W0942	020	24		28-41-21	ALL
	5		W0942	021	24		28-41-21	ALL
	6		W0942	022	24		28-41-21	ALL
	7		W0942	023	24		28-41-21	ALL
	8		W0942	024	24		28-41-21	ALL
	9		W0942	025	24		28-41-21	ALL
	10		W0942	026	24		28-41-21	ALL
	11		W0942	027	24		28-41-21	ALL
	12		W0942	028	24		28-41-21	ALL
	13		W0942	029	24		28-41-21	ALL
	14		W0942	030	24		28-41-21	ALL
	15		W0942	031	24		28-41-21	ALL
	16	UNUSED						050-099, 150-154, 162-165, 275-276
	16		W0942	585	20		27-18-11	155-157, 166-199, 277-299
	17	UNUSED						050-099, 150-154, 162-165, 275-276
	17		W0942	586	20		27-18-11	155-157, 166-199, 277-299
	18	UNUSED						050-099, 150-154, 162-165, 275-276
	18		W0942	587	20		27-18-11	155-157, 166-199, 277-299
	19	UNUSED						ALL
D04594P		AL1001/ /		PLUG-L WING RS/BODY				ALL
	1		W0446	0WHT	20		28-41-21	ALL
	2		W0446	0RYL	20		28-41-21	ALL
	3		W0446	0RBK	20		28-41-21	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04500

Page 78

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04594P		AL1001/ /		PLUG-L WING RS/BODY (continued)				ALL
	4		W0446	0RGR	20		28-41-21	ALL
	5		W0446	0RBU	20		28-41-21	ALL
	6		W0446	0WBK	20		28-41-21	ALL
	7		W0446	0RVI	20		28-41-21	ALL
	8		W0446	0WBN	20		28-41-21	ALL
	9		W0446	0WRD	20		28-41-21	ALL
	10		W0446	0WYL	20		28-41-21	ALL
	11		W0446	0WOR	20		28-41-21	ALL
	12		W0446	0WGR	20		28-41-21	ALL
	13		W0446	0WBU	20		28-41-21	ALL
	14		W0446	0WBY	20		28-41-21	ALL
	15		W0446	0WVI	20		28-41-21	ALL
	16	UNUSED						050-099, 150-154, 162-165, 275-276
	16		W0446	304Y	20		27-18-11	155-157, 166-199, 277-299
	17	UNUSED						050-099, 150-154, 162-165, 275-276
	17		W0446	304B	20		27-18-11	155-157, 166-199, 277-299
	18	UNUSED						050-099, 150-154, 162-165, 275-276
	18		W0446	304R	20		27-18-11	155-157, 166-199, 277-299
	19	UNUSED						ALL
D04595J		AE0317/ /		RCPT-E1-5				ALL
	1		W0463	001	22		22-11-22	ALL
	2		W0463	002	22		22-11-22	ALL
	3		W0463	003	22		22-11-22	ALL
	4		W0463	201R	24		22-12-21	ALL
	5		W0463	201B	24		22-12-21	ALL
	6		W0463	201Z			22-12-21	ALL
	7		W0463	202R	24		22-13-21	ALL
	8		W0463	202B	24		22-13-21	ALL
	9		W0463	202Z			22-13-21	ALL
	10		W0463	203R	24		22-14-21	ALL
	11		W0463	203B	24		22-14-21	ALL
	12		W0463	203Z			22-14-21	ALL
	13		W0463	009	22		SPARE	ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16		W0463	010	22		SPARE	ALL
	17		W0463	011	22		SPARE	ALL
	18	UNUSED						ALL
	19	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D04500
Page 79
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04595J		AE0317/ /		RCPT-E1-5 (continued)				ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D04595P		AE0317/ /		PLUG-E1-5				ALL
	1		W0119	011	22		22-11-22	ALL
	2		W0119	014	22		22-11-22	ALL
	3		W0119	010	22		22-11-22	ALL
	4		W0119	214R	24		22-12-21	ALL
	5		W0119	214B	24		22-12-21	ALL
	6		W0119	214Z			22-12-21	ALL
	7		W0119	221R	24		22-13-21	ALL
	8		W0119	221B	24		22-13-21	ALL
	9		W0119	221Z			22-13-21	ALL
	10		W0119	229R	24		22-14-21	ALL
	11		W0119	229B	24		22-14-21	ALL
	12		W0119	229Z			22-14-21	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	DED		W0119	014Z			22-11-22	ALL
D04597J		AE0208/ /		RCPT-P51				ALL
	1	UNUSED						ALL
	2	UNUSED						050-099, 155-156, 162-166
	2		W0045	271R	24		31-51-31	150-154, 157, 167-199, 275-299
	3		W0045	207R	24		31-51-21	ALL
	4		W0045	207B	24		31-51-21	ALL
	5	UNUSED						050-099, 155-156, 162-166

HOOKUP LIST

D280T132

91-21-51

Section D04500

Page 80

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04597J		AE0208/ /		RCPT-P51 (continued)				ALL
	5		W0045	271B	24		31-51-31	150-154, 157, 167-199, 275-299
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10		W0045	746	24		31-51-31	ALL
	11	UNUSED						ALL
	12		W0045	215B	24		31-51-31	ALL
	13		W0045	215R	24		31-51-31	ALL
	14		W0045	199	20		31-51-31	ALL
	15	UNUSED						ALL
			W0045	207	20		31-51-21	ALL
			W0045	207Z			31-51-21	ALL
D04597P		AE0208/ /		PLUG-P51				ALL
	1		W0459	028	24		SPARE	ALL
	2		W0459	224R	22		34-45-13	050-099, 153-156, 162-166, 280-299
	2		W0459	209R	22		31-51-31	150-152, 157, 167-199, 275-278
	3		W0459	207R	24		31-51-21	ALL
	4		W0459	207B	24		31-51-21	ALL
	5		W0459	224B	22		34-45-13	050-099, 153-156, 162-166, 280-299
	5		W0459	209B	22		31-51-31	150-152, 157, 167-199, 275-278
	6		W0459	017	24		SPARE	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9		W0459	224Z			34-45-13	050-099, 155-156, 162-166, 280-299
	9	UNUSED						150-154, 157, 167-199, 275-278
	10		W0459	010	24		31-51-31	ALL
	11	UNUSED						ALL
	12		W0459	306B	24		31-51-31	ALL
	13		W0459	306R	24		31-51-31	ALL
	14		W0459	013	20		31-51-31	ALL
	15		W0459	025	24		SPARE	ALL
	CAP	Y	W0459	224B	22		34-45-13	150-152, 275-276
	CAP	Y	W0459	224R	22		34-45-13	150-152, 275-276
	DED		W0459	224Z			34-45-13	150-154, 157, 167-199, 275-278
	REF	JW	W0459	224B	22		34-45-13	157, 167-199, 277-278
	REF	JW	W0459	224R	22		34-45-13	157, 167-199, 277-278
			W0459	207	20		31-51-21	ALL
			W0459	207Z			31-51-21	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04500

Page 81

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04597P		AE0208/ /		PLUG-P51 (continued)				ALL
			W0459	306	20		31-51-31	ALL
			W0459	306Y	24		31-51-31	ALL
			W0459	306Z			31-51-31	ALL
D04598J		AL1003/ /		RCPT-				ALL
	1	UNUSED						ALL
	2		W0602	012	22		32-42-11	ALL
	3		W0602	013	20		32-42-11	ALL
	4		W0602	014	22		32-42-11	ALL
	5		W0602	015	20		32-42-11	ALL
	6		W0602	016	22		32-42-11	ALL
	7		W0602	017	20		32-42-11	ALL
	8		W0602	114	22		28-42-11	ALL
	9		W0602	115	22		28-42-31	ALL
	10		W0602	035	22		29-31-11	ALL
	11		W0602	211R	22		29-31-11	ALL
	12		W0602	211B	22		29-31-11	ALL
	13	UNUSED						050-099, 155-199, 276-299
	13		W0602	043	20		SPARE	150-154, 275
	14	UNUSED						050-099, 155-199, 276-299
	14		W0602	044	20		SPARE	150-154, 275
	15		W0602	129	16		25-65-11	ALL
	16		W0602	130	16		25-65-11	ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
D04598P		AL1003/ /		PLUG-L WING RS/BODY				ALL
	1	UNUSED						ALL
	2		W0450	202B	20		32-42-11	ALL
	3		W0450	202R	20		32-42-11	ALL
	4		W0450	203B	20		32-42-11	ALL
	5		W0450	203R	20		32-42-11	ALL
	6		W0450	204B	20		32-42-11	ALL
	7		W0450	204R	20		32-42-11	ALL
	8		W0450	009	20		28-42-11	ALL
	9		W0450	007	20		28-42-31	ALL
	10		W0450	301B	20		29-31-11	ALL
	11		W0450	301R	20		29-31-11	ALL
	12		W0450	301Y	20		29-31-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04500

Page 82

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04598P		AL1003/ /		PLUG-L WING RS/BODY (continued)				ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15		W0450	201B	18		25-65-11	ALL
	16		W0450	201R	18		25-65-11	ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
D04599J		AE0322/ /		RCPT-E2-5				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W0627	004	20		23-71-11	ALL
	5		W0627	006Z			23-71-11	ALL
	6		W0627	006	24		23-71-11	ALL
	7	UNUSED						ALL
	8		W0627	008	24		23-71-11	ALL
	9		W0627	009	24		23-71-11	ALL
	10		W0627	010	24		23-71-11	ALL
	11		W0627	010Z			23-71-11	ALL
	12		W0627	012	24		23-71-11	ALL
	13		W0627	013	24		23-71-11	ALL
	14		W0627	014	22		23-71-11	ALL
	15		W0627	015	24		23-71-11	ALL
	16		W0627	016	24		23-71-11	ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22		W0627	022	24		23-71-11	ALL
	23		W0627	023	24		23-71-11	ALL
	24		W0627	024	24		23-71-11	ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D04500
Page 83
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04599P		AE0322/ /		PLUG-E2-5				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W0139	783	20		23-71-11	ALL
	5		W0139	735Z			23-71-11	ALL
	6		W0139	735	24		23-71-11	ALL
	7	UNUSED						ALL
	8		W0139	738	24		23-71-11	ALL
	9		W0139	734	24		23-71-11	ALL
	10		W0139	736	24		23-71-11	ALL
	11		W0139	736Z			23-71-11	ALL
	12		W0139	730	24		23-71-11	ALL
	13		W0139	727	24		23-71-11	ALL
	14		W0139	726	22		23-71-11	ALL
	15		W0139	728	24		23-71-11	ALL
	16		W0139	729	24		23-71-11	ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22		W0139	733	24		23-71-11	ALL
	23		W0139	731	24		23-71-11	ALL
	24		W0139	732	24		23-71-11	ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D04500

Page 84 End

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04600J		AL1003/ /		RCPT-L WING RS/BODY				ALL
	1		W1274	003	22		28-42-11	ALL
	2	FO	W1274	007	14		28-22-11	ALL
	3	FO	W1274	008	14		28-22-11	ALL
	4	FO	W1274	009	14		28-22-11	ALL
	5		W1274	001	22		28-42-12	ALL
	6		W1274	002	22		28-42-31	ALL
	7		W1274	010	20		SPARE	ALL
	8	UNUSED						ALL
	9		W1274	100	20		28-22-31	ALL
	10		W1274	101	20		28-22-31	ALL
	11		W1274	102	20		28-22-31	ALL
	12		W1274	103	20		28-22-31	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	DED		W1274	100Z			28-22-31	ALL
	DED		W1274	101Z			28-22-31	ALL
	DED		W1274	102Z			28-22-31	ALL
	DED		W1274	103Z			28-22-31	ALL
D04600P		AL1003/ /		PLUG-L WING RS/BODY				ALL
	1		W0460	002	20		28-42-11	ALL
	2		W0460	301B	18		28-22-11	ALL
	3		W0460	301R	18		28-22-11	ALL
	4		W0460	301Y	18		28-22-11	ALL
	5		W0460	005	20		28-42-12	ALL
	6		W0460	010	20		28-42-31	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9		W0460	100	18		28-22-31	ALL
	10		W0460	101	18		28-22-31	ALL
	11		W0460	102	18		28-22-31	ALL
	12		W0460	103	18		28-22-31	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	DED		W0460	100Z			28-22-31	ALL
	DED		W0460	101Z			28-22-31	ALL
	DED		W0460	102Z			28-22-31	ALL
	DED		W0460	103Z			28-22-31	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04600

Page 1

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04601J		AE0322/ /		RCPT-E2-5				ALL
	1		W0655	0WRB	20		23-51-11	ALL
	2		W0655	0BLU	24		23-51-11	ALL
	3		W0655	0YEL	24		23-51-11	ALL
	4		W0655	0GRN	24		23-51-11	ALL
	5		W0655	0BLK	24		23-51-11	ALL
	6		W0655	0PUR	24		23-51-11	ALL
	7		W0655	0ORG	24		23-51-13	ALL
	8		W0655	0BRN	24		23-51-14	ALL
	9		W0655	0PNK	24		23-51-14	ALL
	10		W0655	0WHT	24		23-51-14	ALL
	11		W0655	0WRD	24		23-51-14	ALL
	12		W0655	0WBU	24		23-51-14	ALL
	13		W0655	0WYL	24		23-51-14	ALL
	14		W0655	0WGR	24		23-51-14	ALL
	15		W0655	0WBK	24		23-51-14	ALL
	16		W0655	0WPR	24		23-51-14	ALL
	17		W0655	0WOR	24		23-51-14	ALL
	18		W0655	0WBN	24		23-51-11	ALL
	19		W0655	0WBY	24		23-51-11	ALL
	20		W0655	0UNI	20		23-51-11	ALL
	21		W0655	0RYL	24		23-51-14	ALL
	22		W0655	0RGR	24		23-51-14	ALL
	23		W0655	0RBK	24		23-51-14	ALL
	24		W0655	0RPR	24		23-51-14	ALL
	25		W0655	0ROR	24		23-51-14	ALL
	26		W0655	0RBR	24		23-51-11	ALL
	27		W0655	0RYG	24		23-51-12	ALL
	28		W0655	0BLY	24		23-51-13	ALL
	29		W0655	0BLG	24		23-51-12	ALL
	30		W0655	0BBK	24		23-51-12	ALL
	31		W0655	0BPR	24		23-51-12	ALL
	32		W0655	0BOR	24		23-51-13	ALL
	33		W0655	0BBN	24		23-51-13	ALL
	34		W0655	0BGK	24		23-51-13	ALL
	35		W0655	0YGR	24		23-51-12	ALL
	36		W0655	0YBK	24		23-51-12	ALL
	37		W0655	0YPR	24		23-51-12	ALL
	38		W0655	0YOR	24		23-51-13	ALL
	39	UNUSED						ALL
	40	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D04600

Page 2

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04601J		AE0322/ /		RCPT-E2-5 (continued)				ALL
	41	UNUSED						ALL
D04601P		AE0322/ /		PLUG-E2-5				ALL
	1		W0139	113	20		23-51-11	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W0139	114	20		23-51-11	ALL
	5		W0139	226R	24		23-51-11	ALL
	6		W0139	226B	24		23-51-11	ALL
	7		W0139	794	24		23-51-13	ALL
	8		W0139	229R	24		23-51-14	ALL
	9		W0139	229B	24		23-51-14	ALL
	10		W0139	138	24		23-51-14	ALL
	11		W0139	139	24		23-51-14	ALL
	12		W0139	217R	24		23-51-14	ALL
	13		W0139	217B	24		23-51-14	ALL
	14		W0139	135	24		23-51-14	ALL
	15		W0139	136	24		23-51-14	ALL
	16		W0139	228R	24		23-51-14	ALL
	17		W0139	228B	24		23-51-14	ALL
	18		W0139	665	24		23-51-11	050-099, 153-199, 275-299
	18		W0139	552	24		23-51-11	150-152
	19	UNUSED						ALL
	20		W0139	120	20		23-51-11	ALL
	21		W0139	119	24		23-51-14	ALL
	22		W0139	140	24		23-51-14	ALL
	23		W0139	108	24		23-51-14	ALL
	24		W0139	137	24		23-51-14	ALL
	25		W0139	117	24		23-51-14	ALL
	26		W0139	116	24		23-51-11	ALL
	27		W0139	128	24		23-51-12	ALL
	28		W0139	133	24		23-51-13	ALL
	29		W0139	129	24		23-51-12	ALL
	30		W0139	126	24		23-51-12	ALL
	31		W0139	125	24		23-51-12	ALL
	32		W0139	132	24		23-51-13	ALL
	33		W0139	131	24		23-51-13	ALL
	34		W0139	130	24		23-51-13	ALL
	35		W0139	121	24		23-51-12	ALL
	36		W0139	122	24		23-51-12	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04600

Page 3

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04601P		AE0322/ /		PLUG-E2-5 (continued)				ALL
	37		W0139	124	24		23-51-12	ALL
	38		W0139	743	24		23-51-13	ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
D04602J		AL1001/ /		RCPT-				ALL
	1		W0596	073	20		28-21-13	ALL
	2		W0596	079	22		28-21-13	ALL
	3		W0596	125	22		28-22-31	ALL
	4		W0596	199	20		28-22-31	ALL
	5		W0596	124	22		28-22-21	ALL
	6	UNUSED						ALL
	7		W0596	001	22		28-42-21	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13		W0596	090	18		28-22-21	ALL
	14		W0596	093	18		28-22-21	ALL
	15		W0596	005	20		28-22-31	ALL
	16		W0596	006	20		28-22-31	ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
D04602P		AL1001/ /		PLUG-L WING RS/BODY				ALL
	1		W0454	201B	20		28-21-13	ALL
	2		W0454	201R	20		28-21-13	ALL
	3		W0454	034	18		28-22-31	ALL
	4		W0454	012	18		28-22-31	ALL
	5		W0454	302Y	20		28-22-21	ALL
	6	UNUSED						ALL
	7		W0454	014	20		28-42-21	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D04600

Page 4

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04602P		AL1001/ /		PLUG-L WING RS/BODY (continued)				ALL
	13		W0454	302B	20		28-22-21	ALL
	14		W0454	302R	20		28-22-21	ALL
	15		W0454	033	18		28-22-31	ALL
	16		W0454	032	18		28-22-31	ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
D04603J		AE0322/ /		RCPT-E2-5				ALL
	1		W0657	0WRB	20		23-51-21	ALL
	2		W0657	0BLU	24		23-51-21	ALL
	3		W0657	0YEL	24		23-51-21	ALL
	4		W0657	0GRN	24		23-51-21	ALL
	5		W0657	0BLK	24		23-51-21	ALL
	6		W0657	0PUR	24		23-51-21	ALL
	7		W0657	0ORG	24		23-51-21	ALL
	8		W0657	0BRN	24		23-51-21	ALL
	9		W0657	0PNK	24		23-51-21	ALL
	10		W0657	0WHT	24		23-51-21	ALL
	11		W0657	0WRD	24		23-51-21	ALL
	12		W0657	0WBU	24		23-51-21	ALL
	13		W0657	0WYL	24		23-51-21	ALL
	14		W0657	0WGR	24		23-51-21	ALL
	15		W0657	0WBK	24		23-51-21	ALL
	16		W0657	0WPR	24		23-51-21	ALL
	17		W0657	0WOR	24		23-51-21	ALL
	18		W0657	0WBN	24		23-51-21	ALL
	19		W0657	0WBY	24		23-51-21	ALL
	20		W0657	0UNI	20		23-51-21	ALL
	21		W0657	0RYL	24		23-51-21	ALL
	22		W0657	0RGR	24		23-51-21	ALL
	23		W0657	0RBK	24		23-51-21	ALL
	24		W0657	0RPR	24		23-51-21	ALL
	25		W0657	0ROR	24		23-51-21	ALL
	26		W0657	0RBR	24		23-51-21	ALL
	27		W0657	0RYG	24		23-51-21	ALL
	28		W0657	0BLY	24		23-51-21	ALL
	29		W0657	0BLG	24		23-51-21	ALL
	30		W0657	0BBK	24		23-51-21	ALL
	31		W0657	0BPR	24		23-51-21	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04600

Page 5

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04603J		AE0322/ /		RCPT-E2-5 (continued)				ALL
	32		W0657	0BOR	24		23-51-21	ALL
	33		W0657	0BBN	24		23-51-21	ALL
	34		W0657	0BGK	24		23-51-21	ALL
	35		W0657	0YGR	24		23-51-21	ALL
	36		W0657	0YBK	24		23-51-21	ALL
	37		W0657	0YPR	24		23-51-21	ALL
	38		W0657	0YOR	24		23-51-21	ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
D04603P		AE0322/ /		PLUG-E2-5				ALL
	1		W0139	157	20		23-51-21	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W0139	158	20		23-51-21	ALL
	5		W0139	238R	24		23-51-21	ALL
	6		W0139	238B	24		23-51-21	ALL
	7		W0139	796	24		23-51-21	ALL
	8		W0139	241R	24		23-51-21	ALL
	9		W0139	241B	24		23-51-21	ALL
	10		W0139	163	24		23-51-21	ALL
	11		W0139	164	24		23-51-21	ALL
	12		W0139	218R	24		23-51-21	ALL
	13		W0139	218B	24		23-51-21	ALL
	14		W0139	160	24		23-51-21	ALL
	15		W0139	161	24		23-51-21	ALL
	16		W0139	240R	24		23-51-21	ALL
	17		W0139	240B	24		23-51-21	ALL
	18		W0139	666	24		23-51-21	ALL
	19	UNUSED						ALL
	20		W0139	142	20		23-51-21	ALL
	21		W0139	145	24		23-51-21	ALL
	22		W0139	165	24		23-51-21	ALL
	23		W0139	069	24		23-51-21	ALL
	24		W0139	162	24		23-51-21	ALL
	25		W0139	144	24		23-51-21	ALL
	26		W0139	143	24		23-51-21	ALL
	27		W0139	156	24		23-51-21	ALL
	28		W0139	146	24		23-51-21	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04600

Page 6

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04603P		AE0322/ /		PLUG-E2-5 (continued)				ALL
	29		W0139	153	24		23-51-21	ALL
	30		W0139	151	24		23-51-21	ALL
	31		W0139	155	24		23-51-21	ALL
	32		W0139	149	24		23-51-21	ALL
	33		W0139	148	24		23-51-21	ALL
	34		W0139	147	24		23-51-21	ALL
	35		W0139	154	24		23-51-21	ALL
	36		W0139	150	24		23-51-21	ALL
	37		W0139	152	24		23-51-21	ALL
	38		W0139	745	24		23-51-21	ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
D04607J		AE0322/ /		RCPT-E2-5				ALL
	1		W0659	0WRB	20		23-51-41	ALL
	2		W0659	0BLU	24		23-51-41	ALL
	3		W0659	0YEL	24		23-51-41	ALL
	4		W0659	0GRN	24		23-51-41	ALL
	5		W0659	0BLK	24		23-51-41	ALL
	6		W0659	0PUR	24		23-51-41	ALL
	7		W0659	0ORG	24		23-51-41	ALL
	8		W0659	0BRN	24		23-51-41	ALL
	9		W0659	0PNK	24		23-51-41	ALL
	10		W0659	0WHT	24		23-51-41	ALL
	11		W0659	0WRD	24		23-51-41	ALL
	12		W0659	0WBU	24		23-51-41	ALL
	13		W0659	0WYL	24		23-51-41	ALL
	14		W0659	0WGR	24		23-51-41	ALL
	15		W0659	0WBK	24		23-51-41	ALL
	16		W0659	0WPR	24		23-51-41	ALL
	17		W0659	0WOR	24		23-51-41	ALL
	18		W0659	0WBN	24		23-51-41	ALL
	19		W0659	0WBY	24		23-51-41	ALL
	20		W0659	0UNI	20		23-51-41	ALL
	21		W0659	0RYL	24		23-51-41	ALL
	22		W0659	0RGR	24		23-51-41	ALL
	23		W0659	0RBK	24		23-51-41	ALL
	24		W0659	0RPR	24		23-51-41	ALL
	25		W0659	0ROR	24		23-51-41	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04600

Page 7

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04607J		AE0322/ /		RCPT-E2-5 (continued)				ALL
	26		W0659	0RBR	24		23-51-41	ALL
	27		W0659	0RYG	24		23-51-41	ALL
	28		W0659	0BLY	24		23-51-41	ALL
	29		W0659	0BLG	24		23-51-41	ALL
	30		W0659	0BBK	24		23-51-41	ALL
	31		W0659	0BPR	24		23-51-41	ALL
	32		W0659	0BOR	24		23-51-41	ALL
	33		W0659	0BBN	24		23-51-41	ALL
	34		W0659	0BGK	24		23-51-41	ALL
	35		W0659	0YGR	24		23-51-41	ALL
	36		W0659	0YBK	24		23-51-41	ALL
	37		W0659	0YPR	24		23-51-41	ALL
	38		W0659	0YOR	24		23-51-41	ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
D04607P		AE0322/ /		PLUG-E2-5				ALL
	1		W0139	182	20		23-51-41	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W0139	181	20		23-51-41	ALL
	5		W0139	243R	24		23-51-41	ALL
	6		W0139	243B	24		23-51-41	ALL
	7		W0139	798	24		23-51-41	ALL
	8		W0139	247R	24		23-51-41	ALL
	9		W0139	247B	24		23-51-41	ALL
	10		W0139	187	24		23-51-41	ALL
	11		W0139	188	24		23-51-41	ALL
	12		W0139	235R	24		23-51-41	ALL
	13		W0139	235B	24		23-51-41	ALL
	14		W0139	184	24		23-51-41	ALL
	15		W0139	185	24		23-51-41	ALL
	16		W0139	246R	24		23-51-41	ALL
	17		W0139	246B	24		23-51-41	ALL
	18		W0139	667	24		23-51-41	ALL
	19	UNUSED						ALL
	20		W0139	166	20		23-51-41	ALL
	21		W0139	169	24		23-51-41	ALL
	22		W0139	189	24		23-51-41	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04600

Page 8

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04607P		AE0322/ /		PLUG-E2-5 (continued)				ALL
	23		W0139	079	24		23-51-41	ALL
	24		W0139	186	24		23-51-41	ALL
	25		W0139	168	24		23-51-41	ALL
	26		W0139	167	24		23-51-41	ALL
	27		W0139	180	24		23-51-41	ALL
	28		W0139	170	24		23-51-41	ALL
	29		W0139	177	24		23-51-41	ALL
	30		W0139	175	24		23-51-41	ALL
	31		W0139	179	24		23-51-41	ALL
	32		W0139	173	24		23-51-41	ALL
	33		W0139	172	24		23-51-41	ALL
	34		W0139	171	24		23-51-41	ALL
	35		W0139	178	24		23-51-41	ALL
	36		W0139	174	24		23-51-41	ALL
	37		W0139	176	24		23-51-41	ALL
	38		W0139	746	24		23-51-41	ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
D04610J		AL1001/ /		RCPT-L WING RS/BODY				ALL
	1		W0756	208B	22		27-51-41	ALL
	2		W0756	208R	22		27-51-41	ALL
	3		W0756	403B	22		27-51-41	ALL
	4		W0756	403R	22		27-51-41	ALL
	5		W0756	403Y	22		27-51-41	ALL
	6		W0756	403G	22		27-51-41	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D04600

Page 9

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04610J		AL1001/ /		RCPT-L WING RS/BODY (continued)				ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
D04610P		AL1001/ /		PLUG-L WING RS/BODY				ALL
	1		W0446	202B	20		27-51-41	ALL
	2		W0446	202R	20		27-51-41	ALL
	3		W0446	401B	20		27-51-41	ALL
	4		W0446	401R	20		27-51-41	ALL
	5		W0446	401Y	20		27-51-41	ALL
	6		W0446	401G	20		27-51-41	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D04600

Page 10

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04610P		AL1001/ /		PLUG-L WING RS/BODY (continued)				ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
D04612J		AL1001/ /		RCPT-L WING RS/BODY				ALL
	1		W0264	073	20		28-26-11	ALL
	2		W0264	070	20		28-26-11	ALL
	3		W0264	072	20		28-26-11	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8		W0264	085	20		SPARE	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
D04612P		AL1001/ /		PLUG-L WING RS/BODY				ALL
	1		W0458	301R	20		28-26-11	ALL
	2		W0458	301Y	20		28-26-11	ALL
	3		W0458	301B	20		28-26-11	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
D04613J		AE0307/ /		RCPT-E2-5				ALL
	1		W1343	201R	24		23-41-11	ALL
	2		W1343	201B	24		23-41-11	ALL
	3		W1343	201Z			23-41-11	ALL

HOOKUP LIST
D280T132

91-21-51
Section D04600
Page 11
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04613J		AE0307/ /		RCPT-E2-5 (continued)				ALL
	4		W1343	206R	24		23-41-11	ALL
	5		W1343	206B	24		23-41-11	ALL
	6		W1343	206Z			23-41-11	ALL
	7		W1343	001	22		23-43-11	ALL
	8		W1343	002	20		23-43-11	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
D04613P		AE0307/ /		PLUG-E2-5				ALL
	1		W0149	206R	24		23-41-11	ALL
	2		W0149	206B	24		23-41-11	ALL
	3		W0149	017	20		23-41-11	ALL
	4		W0149	302R	24		23-41-11	ALL
	5		W0149	302B	24		23-41-11	ALL
	6		W0149	302Y	24		23-41-11	ALL
	7		W0149	112	22		23-43-11	ALL
	8		W0149	109	20		23-43-11	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
D04615J		AE0307/ /		RCPT-E2-5				ALL
	1		W0639	401R	24		23-42-11	ALL
	2		W0639	401B	24		23-42-11	ALL
	3		W0639	401Y	24		23-42-11	ALL
	4		W0639	401G	24		23-42-11	ALL
	5		W0639	401Z			23-42-11	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D04600

Page 12

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04615J		AE0307/ /		RCPT-E2-5 (continued)				ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
D04615P		AE0307/ /		PLUG-E2-5				ALL
	1		W0149	402R	24		23-42-11	ALL
	2		W0149	402B	24		23-42-11	ALL
	3		W0149	402Y	24		23-42-11	ALL
	4		W0149	402G	24		23-42-11	ALL
	5		W0149	402Z			23-42-11	ALL
	6	UNUSED						050-099, 275-299
	6		W0149	407Z			SPARE	150-199
	7	UNUSED						050-099, 275-299
	7		W0149	407R	24		SPARE	150-199
	8	UNUSED						050-099, 275-299
	8		W0149	407B	24		SPARE	150-199
	9	UNUSED						050-099, 275-299
	9		W0149	407Y	24		SPARE	150-199
	10	UNUSED						050-099, 275-299
	10		W0149	407G	24		SPARE	150-199
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
D04616J		AC0702/ /		RCPT-R WING FS/BODY				ALL
	1		W0766	301B	24		79-31-11	ALL
	2		W0766	301Y	24		79-31-11	ALL
	3		W0766	301R	24		79-31-11	ALL
	4		W0766	004	22		74-31-21	ALL
	5		W0766	005	22		79-35-11	ALL
	6	UNUSED						050-099, 150-156, 162-199, 275-299
	6	DK	W0766	513	18		78-34-21	157
	7	DK	W0766	514	18		78-34-21	ALL
	8		W0766	098	22		30-21-11	ALL
	9		W0766	002	22		78-36-21	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04600

Page 13

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04616J		AC0702/ /		RCPT-R WING FS/BODY (continued)				ALL
	10		W0766	009	22		79-33-11	ALL
	11		W0766	028	22		30-21-11	ALL
	12		W0766	010	22		30-21-11	ALL
	13		W0766	125	24		78-36-21	ALL
	14		W0766	011	24		75-23-11	ALL
	15		W0766	084	24		75-23-11	ALL
	16	DK	W0766	513	18		78-34-21	050-099, 150-156, 162-199, 275-299
	16	UNUSED						157
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22		W0766	302Z			73-31-11	ALL
	23		W0766	302R	24		73-31-11	ALL
	24		W0766	302B	24		73-31-11	ALL
	25		W0766	302Y	24		73-31-11	ALL
	26		W0766	01TR	20		77-31-11	050-099, 155-199, 277-299
	26		W0766	204R	20		77-31-11	150-154, 275-276
	27		W0766	01TW	20		77-31-11	050-099, 155-199, 277-299
	27		W0766	204W	20		77-31-11	150-154, 275-276
	28		W0766	01TI			77-31-11	050-099, 155-199, 277-299
	28		W0766	204Z			77-31-11	150-154, 275-276
	29		W0766	013	24		30-21-11	ALL
	30		W0766	205B	24		78-36-21	ALL
	31		W0766	205R	24		78-36-21	ALL
	32		W0766	206B	24		78-36-21	ALL
	33		W0766	206R	24		78-36-21	ALL
	34		W0766	207B	24		78-36-21	ALL
	35		W0766	207R	24		78-36-21	ALL
	36		W0766	208B	24		78-36-21	ALL
	37		W0766	208R	24		78-36-21	ALL
	38		W0766	035	24		SPARE	ALL
	39		W0766	083	24		75-23-11	ALL
	40		W0766	085	24		75-23-11	ALL
	41		W0766	019	24		78-34-21	ALL
	42		W0766	036	24		78-36-21	ALL
	43		W0766	031	20		SPARE	ALL
	44		W0766	032	20		SPARE	ALL
	45		W0766	033	24		30-21-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04600

Page 14

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04616J		AC0702/ /		RCPT-R WING FS/BODY (continued)				ALL
	46		W0766	802	22		SPARE	ALL
	47		W0766	088	24		73-33-11	ALL
	48		W0766	089	24		73-33-11	ALL
	49		W0766	090	24		73-33-11	ALL
	50		W0766	029	20		SPARE	ALL
	51		W0766	030	20		SPARE	ALL
	52		W0766	020	22		SPARE	ALL
	53	UNUSED						050-099
	53		W0766	021	22		SPARE	150-199, 275-299
	54	UNUSED						ALL
	55	UNUSED						ALL
	= CC	D	W0766	002Z			78-36-21	ALL
	= CC	D	W0766	513Z			78-34-21	ALL
	= CC	D	W0766	514Z			78-34-21	ALL
	= CC	D	W0766	01TO			77-31-11	050-099, 155-199
	= CC	M	W0766	01TO			77-31-11	277-299
	CAP	Y	W0766	007	20		SPARE	150-199
	CAP	Y	W0766	304B	20		SPARE	150-199
	CAP	Y	W0766	304R	20		SPARE	150-199
	CAP	Y	W0766	304Y	20		SPARE	150-199
	CAP	Y	W0766	502	22		SPARE	150-199
	CAP	Y	W0766	503	22		SPARE	150-199
	CAP	Y	W0766	803	22		SPARE	150-199
	CAP	Y	W0766	303B	20		SPARE	150-199, 275-299
	CAP	Y	W0766	303R	20		SPARE	150-199, 275-299
	CAP	Y	W0766	303Y	20		SPARE	150-199, 275-299
	CAP	Y	W0766	305B	24		SPARE	150-199, 275-299
	CAP	Y	W0766	305R	24		SPARE	150-199, 275-299
	CAP	Y	W0766	305Y	24		SPARE	150-199, 275-299
	CAP	Y	W0766	306B	24		SPARE	150-199, 275-299
	CAP	Y	W0766	306R	24		SPARE	150-199, 275-299
	CAP	Y	W0766	306Y	24		SPARE	150-199, 275-299
	DED		W0766	304Z			SPARE	150-199
D04616P		AC0702/ /		PLUG-R WING FS/BODY				ALL
	1		W0408	303B	20		79-31-11	ALL
	2		W0408	303Y	20		79-31-11	ALL
	3		W0408	303R	20		79-31-11	ALL
	4		W0408	015	20		74-31-21	ALL
	5		W0408	016	20		79-35-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04600

Page 15

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04616P		AC0702/ /		PLUG-R WING FS/BODY (continued)				ALL
	6	UNUSED						050-099, 150-156, 162-199, 275-299
	6	DL	W0408	099	18		78-34-21	157
	7	DL	W0408	124	18		78-34-21	ALL
	8		W0408	086	20		30-21-11	ALL
	9		W0408	093	20		78-36-21	ALL
	10		W0408	028	20		79-33-11	ALL
	11		W0408	017	20		30-21-11	ALL
	12		W0408	018	20		30-21-11	ALL
	13	DL	W0408	130	18		78-36-21	ALL
	14		W0408	031	20		75-23-11	ALL
	15		W0408	032	20		75-23-11	ALL
	16	DL	W0408	099	18		78-34-21	050-099, 150-156, 162-199, 275-299
	16	UNUSED						157
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22		W0408	302Z			73-31-11	ALL
	23		W0408	302R	20		73-31-11	ALL
	24		W0408	302B	20		73-31-11	ALL
	25		W0408	302Y	20		73-31-11	ALL
	26		W0408	01TR	20		77-31-11	050-099, 155-199, 277-299
	26		W0408	204R	20		77-31-11	150-154, 275-276
	27		W0408	01TW	20		77-31-11	050-099, 155-199, 277-299
	27		W0408	204W	20		77-31-11	150-154, 275-276
	28		W0408	01TI			77-31-11	050-099, 155-199, 277-299
	28		W0408	204Z			77-31-11	150-154, 275-276
	29		W0408	019	20		30-21-11	ALL
	30		W0408	205B	20		78-36-21	ALL
	31		W0408	205R	20		78-36-21	ALL
	32		W0408	206B	20		78-36-21	ALL
	33		W0408	206R	20		78-36-21	ALL
	34		W0408	207B	20		78-36-21	ALL
	35		W0408	207R	20		78-36-21	ALL
	36		W0408	208B	20		78-36-21	ALL
	37		W0408	208R	20		78-36-21	ALL
	38	UNUSED						ALL
	39		W0408	110	20		75-23-11	ALL
	40		W0408	111	20		75-23-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04600

Page 16

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04616P		AC0702/ /		PLUG-R WING FS/BODY (continued)				ALL
	41		W0408	043	20		78-34-21	ALL
	42		W0408	024	20		78-36-21	ALL
	43		W0408	025	20		SPARE	ALL
	44	UNUSED						ALL
	45		W0408	080	20		30-21-11	ALL
	46		W0408	023	20		SPARE	ALL
	47		W0408	304R	20		73-33-11	ALL
	48		W0408	304Y	20		73-33-11	ALL
	49		W0408	304B	20		73-33-11	ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
	= CC	M	W0408	016Z			79-35-11	ALL
	= CC	M	W0408	028Z			79-33-11	ALL
	= CC	M	W0408	031Z			75-23-11	ALL
	= CC	M	W0408	032Z			75-23-11	ALL
	= CC	M	W0408	086Z			30-21-11	ALL
	= CC	M	W0408	093Z			78-36-21	ALL
	= CC	M	W0408	099Z			78-34-21	ALL
	= CC	M	W0408	110Z			75-23-11	ALL
	= CC	M	W0408	111Z			75-23-11	ALL
	= CC	M	W0408	124Z			78-34-21	ALL
	= CC	M	W0408	303Z			79-31-11	ALL
	= CC	M	W0408	304Z			73-33-11	ALL
	= CC	M	W0408	01TO			77-31-11	050-099, 155-199, 277-299
D04620J		AC0702/ /		RCPT-				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W0578	027	18		33-31-21	ALL
	5		W0578	071	22		SPARE	ALL
	6	UNUSED						ALL
	7		W0578	802	18		SPARE	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D04600

Page 17

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04620J		AC0702/ /		RCPT- (continued)				ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D04620P		AC0702/ /		PLUG-				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W0980	006	18		33-31-21	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D04622J		AC0702/ /		RCPT-R WING FS/BODY				ALL
	1	UNUSED						ALL
	2		W0764	002	24		73-34-11	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W0764	006	22		SPARE	050-099
	6		W0764	078	24		SPARE	150-199
	6	UNUSED						275-299
	7		W0764	007	24		SPARE	050-099
	7		W0764	079	24		SPARE	150-199
	7	UNUSED						275-299
	8		W0764	008	24		SPARE	050-099
	8		W0764	080	24		SPARE	150-199
	8	UNUSED						275-299
	9		W0764	009	22		29-11-21	ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12		W0764	012	22		74-31-21	ALL
	13		W0764	303R	24		79-32-11	ALL
	14		W0764	303Y	24		79-32-11	ALL
	15		W0764	303B	24		79-32-11	ALL
	16	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D04600

Page 18

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04622J		AC0702/ /		RCPT-R WING FS/BODY (continued)				ALL
	17	UNUSED						ALL
	18	DK	W0764	003	18		SPARE	ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21		W0764	028	20		SPARE	ALL
	22		W0764	050	20		SPARE	ALL
	23		W0764	201B	24		78-34-21	ALL
	24		W0764	201R	24		78-34-21	ALL
	25		W0764	202B	24		78-34-21	ALL
	26		W0764	202R	24		78-34-21	ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29		W0764	802	22		SPARE	ALL
	30		W0764	502	22		SPARE	050-099, 150-199, 275-278 280-299
	30	UNUSED						
	31		W0764	803	22		SPARE	ALL
	32		W0764	207B	22		SPARE	ALL
	33		W0764	207R	22		SPARE	ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37		W0764	212R	24		SPARE	050-099 150-199, 275-299
	37	UNUSED						
	38		W0764	212B	24		SPARE	050-099
	38	UNUSED						150-199, 275-299
	39		W0764	212Z			SPARE	050-099
	39	UNUSED						150-199, 275-299
	40	UNUSED						050-099
	40		W0764	010	20		SPARE	150-199, 275-299
	41		W0764	049	20		SPARE	ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						050-099, 150-156, 162-199, 275-278
	47	DK	W0764	133	18		78-34-21	157, 280-299
	48	UNUSED						ALL
	49	DK	W0764	133	18		78-34-21	050-099, 150-156, 162-199, 275-278
	49	UNUSED						157, 280-299

HOOKUP LIST

D280T132

91-21-51

Section D04600

Page 19

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04622J		AC0702/ /		RCPT-R WING FS/BODY (continued)				ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
	= CC	D	W0764	133Z			78-34-21	ALL
	CAP	Y	W0764	069	24		SPARE	150-199
D04622P		AC0702/ /		PLUG-R WING FS/BODY				ALL
	1	UNUSED						ALL
	2	UNUSED	W0418	002	20		73-34-11	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED	W0418	009	20		29-11-21	ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED	W0418	012	20		74-31-21	ALL
	13	UNUSED	W0418	304R	20		79-32-11	ALL
	14	UNUSED	W0418	304Y	20		79-32-11	ALL
	15	UNUSED	W0418	304B	20		79-32-11	ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	DL	W0418	011	18		SPARE	ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED	W0418	023	20		SPARE	ALL
	22	UNUSED						ALL
	23	UNUSED	W0418	201B	20		78-34-21	ALL
	24	UNUSED	W0418	201R	20		78-34-21	ALL
	25	UNUSED	W0418	202B	20		78-34-21	ALL
	26	UNUSED	W0418	202R	20		78-34-21	ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D04600

Page 20

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04622P		AC0702/ /		PLUG-R WING FS/BODY (continued)				ALL
	31	UNUSED						ALL
	32		W0418	205B	20		SPARE	ALL
	33		W0418	205R	20		SPARE	ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						050-099, 150-156, 162-199, 275-278
	47	DL	W0418	108	18		78-34-21	157, 280-299
	48	UNUSED						ALL
	49	DL	W0418	108	18		78-34-21	050-099, 150-156, 162-199, 275-278
	49	UNUSED						157, 280-299
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
	= CC	M	W0418	002Z			73-34-11	ALL
	= CC	M	W0418	108Z			78-34-21	ALL
	= CC	M	W0418	304Z			79-32-11	ALL
D04624J		AC0702/ /		RCPT-R WING FS/BODY				ALL
	1		W0768	547	24		73-21-17	ALL
	2		W0768	050	24		73-21-11	ALL
	3	UNUSED						ALL
	4		W0768	028	24		73-21-11	ALL
	5		W0768	004	24		73-21-11	ALL
	6	FM	W0768	030	16		73-21-11	ALL
	7	UNUSED						ALL
	8		W0768	002	24		73-21-11	ALL

HOOKUP LIST
D280T132

91-21-51
Section D04600
Page 21
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04624J		AC0702/ I		RCPT-R WING FS/BODY (continued)				ALL
	9	UNUSED						ALL
	10		W0768	225B	20		73-21-17	050-099, 275-299
	10		W0768	225B	24		73-21-17	150-199
	11	UNUSED						ALL
	12		W0768	225R	20		73-21-12	050-099, 275-299
	12		W0768	225R	24		73-21-12	150-199
	13	FM	W0768	013	16		73-21-20	050-099, 150-199, 277-299
	13		W0768	013	20		73-21-20	275-276
	14	UNUSED						ALL
	15		W0768	201B	24		73-21-13	ALL
	16		W0768	201R	24		73-21-13	ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19		W0768	203B	24		73-21-14	ALL
	20		W0768	203R	24		73-21-14	ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23		W0768	205B	24		73-21-14	ALL
	24		W0768	205R	24		73-21-14	ALL
	25		W0768	302Y	24		73-21-13	ALL
	26		W0768	302R	24		73-21-13	ALL
	27		W0768	302B	24		73-21-13	ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						050-099, 150-199, 275-276, 278-299
	30		W0768	294B	24		31-35-15	277
	31	UNUSED						050-099, 150-199, 275-276, 278-299
	31		W0768	294R	24		31-35-15	277
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36		W0768	223R	24		77-12-12	ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39		W0768	223B	24		77-12-12	ALL
	40		W0768	100	20		73-21-19	ALL
	41	UNUSED						ALL
= CC	D		W0768	030Z			73-21-11	050-099, 150-154, 157, 167-199, 275-278
= CC	D		W0768	004Z			73-21-11	050-099, 150-199, 275-278

HOOKUP LIST

D280T132

91-21-51

Section D04600

Page 22

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04624J		AC0702/ /		RCPT-R WING FS/BODY (continued)				ALL
	= CC	D	W0768	050Z			73-21-11	050-099, 150-199, 275-278
	= CC	D	W0768	203Z			73-21-14	050-099, 150-199, 275-278
	= CC	D	W0768	205Z			73-21-14	050-099, 150-199, 275-278
	= CC	D	W0768	302Z			73-21-13	050-099, 150-199, 275-278
	= CC	D	W0768	028Z			73-21-11	050-099, 150-199, 276-278
	= CC	D	W0768	002Z			73-21-11	050-099, 150-199, 277-278
	= CC	D	W0768	013Z			73-21-20	050-099, 150-199, 277-278
	= CC	D	W0768	100Z			73-21-19	050-099, 150-199, 277-278
	= CC	D	W0768	201Z			73-21-13	050-099, 150-199, 277-278
	= CC	D	W0768	223Z			77-12-12	050-099, 150-199, 277-278
	= CC	D	W0768	547Z			73-21-17	050-099, 150-199, 277-278
	= CC	D	W0768	225Z			73-21-12	050-099, 277-278
	= CC	M	W0768	225Z			73-21-17	150-156, 162-166
	= CC	M	W0768	030Z			73-21-11	155-156, 162-166, 280-299
	= CC	D	W0768	225Z			73-21-17	157, 167-199
	= CC	L	W0768	028Z			73-21-11	275
	= CC	L	W0768	002Z			73-21-11	275-276
	= CC	L	W0768	013Z			73-21-20	275-276
	= CC	L	W0768	100Z			73-21-19	275-276
	= CC	L	W0768	201Z			73-21-13	275-276
	= CC	L	W0768	223Z			77-12-12	275-276
	= CC	L	W0768	225Z			73-21-12	275-276
	= CC	L	W0768	547Z			73-21-17	275-276
	= CC		W0768	FRT			31-35-15	277
	= CC	M	W0768	002Z			73-21-11	280-299
	= CC	M	W0768	004Z			73-21-11	280-299
	= CC	M	W0768	013Z			73-21-20	280-299
	= CC	M	W0768	028Z			73-21-11	280-299
	= CC	M	W0768	050Z			73-21-11	280-299
	= CC	M	W0768	100Z			73-21-19	280-299
	= CC	M	W0768	201Z			73-21-13	280-299
	= CC	M	W0768	203Z			73-21-14	280-299
	= CC	M	W0768	205Z			73-21-14	280-299
	= CC	M	W0768	223Z			77-12-12	280-299
	= CC	M	W0768	225Z			73-21-12	280-299
	= CC	M	W0768	302Z			73-21-13	280-299
	= CC	M	W0768	547Z			73-21-17	280-299
	= CC		W0768	294Z			31-35-15	277
			W0768	FRT			31-35-15	277

HOOKUP LIST

D280T132

91-21-51

Section D04600

Page 23

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04624P		AC0702/ /		PLUG-R WING FS/BODY				ALL
	1		W0422	103	20		73-21-17	ALL
	2		W0422	001	20		73-21-11	ALL
	3	UNUSED						ALL
	4		W0422	305B	20		73-21-11	ALL
	5		W0422	305R	20		73-21-11	ALL
	6	FL	W0422	022	16		73-21-11	ALL
	7		W0422	305Y	20		73-21-11	ALL
	8		W0422	010	20		73-21-11	ALL
	9	UNUSED						ALL
	10		W0422	209B	20		73-21-17	ALL
	11		W0422	012	20		SPARE	050-099, 150-199 275-299
	11	UNUSED						
	12		W0422	209R	20		73-21-12	ALL
	13	FL	W0422	013	16		73-21-20	ALL
	14	UNUSED						ALL
	15		W0422	201B	20		73-21-13	ALL
	16		W0422	201R	20		73-21-13	ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19		W0422	203B	20		73-21-14	ALL
	20		W0422	203R	20		73-21-14	ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23		W0422	205B	20		73-21-14	ALL
	24		W0422	205R	20		73-21-14	ALL
	25		W0422	302Y	20		73-21-13	ALL
	26		W0422	302R	20		73-21-13	ALL
	27		W0422	302B	20		73-21-13	ALL
	28	UNUSED						ALL
	29		W0422	016	20		SPARE	ALL
	30		W0422	206B	20		SPARE	050-099, 275-276, 278-299 150-199
	30	UNUSED						
	30		W0422	206B	20		31-35-15	277
	31		W0422	206R	20		SPARE	050-099, 275-276, 278-299 150-199
	31	UNUSED						
	31		W0422	206R	20		31-35-15	277
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D04600

Page 24

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04624P		AC0702/ /		PLUG-R WING FS/BODY (continued)				ALL
	36		W0422	202R	20		77-12-12	ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39		W0422	202B	20		77-12-12	ALL
	40		W0422	100	20		73-21-19	ALL
	41	UNUSED						ALL
	= CC	M	W0422	001Z			73-21-11	ALL
	= CC	M	W0422	010Z			73-21-11	ALL
	= CC	M	W0422	013Z			73-21-20	ALL
	= CC	M	W0422	016Z			SPARE	ALL
	= CC	M	W0422	022Z			73-21-11	ALL
	= CC	M	W0422	100Z			73-21-19	ALL
	= CC	M	W0422	103Z			73-21-17	ALL
	= CC	M	W0422	201Z			73-21-13	ALL
	= CC	M	W0422	202Z			77-12-12	ALL
	= CC	M	W0422	203Z			73-21-14	ALL
	= CC	M	W0422	205Z			73-21-14	ALL
	= CC	M	W0422	209Z			73-21-12	ALL
	= CC	M	W0422	302Z			73-21-13	ALL
	= CC	M	W0422	305Z			73-21-11	ALL
	= CC	M	W0422	206Z			SPARE	050-099, 275-276, 278-299
	= CC	M	W0422	206Z			31-35-15	277
D04625J		AE0307/ /		RCPT E2-5				ALL
	1		W0645	301R	24		23-31-12	050-099
	1		W1417	912	20		23-32-21	150, 152-199
	1	UNUSED						151, 275-299
	2		W0645	301Y	24		23-31-12	050-099
	2		W1417	912Z			23-32-21	150, 152-199
	2	UNUSED						151
	2		W0645	215R	24		23-31-12	275-299
	3		W0645	301B	24		23-31-12	050-099
	3	UNUSED						150-199
	3		W0645	153	24		23-31-12	275-299
	4		W0645	004	24		23-31-12	050-099
	4		W0645	149	24		23-31-12	150-199, 275-299
	5		W0645	108	22		23-34-11	ALL
	6		W0645	509	22		23-42-11	050-099, 162-199
	6	UNUSED						150-157
	6		W0645	090	22		SPARE	275-299

HOOKUP LIST
D280T132

91-21-51
Section D04600
Page 25
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04625J		AE0307/ /		RCPT E2-5 (continued)				ALL
	7		W0645	215Z			23-31-12	ALL
	8		W0645	215B	24		23-31-12	050-099, 150-199
	8		W0645	216Z			23-31-12	275-299
	9		W0645	215R	24		23-31-12	050-099, 150-199
	9		W0645	FRD			23-32-12	275-299
	10		W0645	163	24		23-31-12	050-099, 150-199
	10		W0645	FRE			23-32-12	275-299
	11		W0645	011	22		23-34-11	ALL
	12		W0645	012	24		23-34-12	ALL
	13		W0645	067	24		23-32-12	050-099, 150-199
	13		W0645	067R	24		23-32-12	275-299
	14		W0645	067Z			23-32-12	050-099, 150-199
	14		W0645	067B	24		23-32-12	275-299
	15		W0645	614	22		23-32-12	050-099, 150-199
	15		W0645	203R	24		23-31-13	275-299
	16		W0645	615	22		23-32-12	050-099, 150-199
	16		W0645	203B	24		23-31-13	275-299
	17		W0645	068	24		23-32-12	050-099, 150-199
	17		W0645	068R	24		23-32-12	275-299
	18		W0645	068Z			23-32-12	050-099, 150-199
	18		W0645	068B	24		23-32-12	275-299
	19		W0645	064	24		23-34-14	ALL
	20		W0645	064Z			23-34-14	ALL
	21		W0645	063	24		23-34-14	ALL
	22		W0645	063Z			23-34-14	ALL
	23		W0645	093	22		23-34-11	ALL
	24		W0645	050	24		23-34-13	ALL
	25		W0645	025	24		23-34-13	050-099
	25	UNUSED						150-157, 275-299
	25		W0645	508	24		23-42-11	162-199
	26		W0645	026	24		23-34-13	ALL
	27		W0645	027	24		23-34-13	ALL
	28		W0645	069	20		23-34-11	ALL
	29		W0645	090	22		SPARE	050-099, 150-154, 162-164
	29	UNUSED						155-157, 165-199
	29		W0645	150	24		23-31-12	275-299
	30		W0645	051	24		23-34-13	ALL
	31		W0645	402R	24		23-42-11	ALL
	32		W0645	402B	24		23-42-11	ALL
	33		W0645	402Y	24		23-42-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04600

Page 26

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04625J		AE0307/ /		RCPT E2-5 (continued)				ALL
	34		W0645	402G	24		23-42-11	ALL
	35		W0645	402Z			23-42-11	ALL
	36		W0645	401R	24		23-42-11	ALL
	37		W0645	401B	24		23-42-11	ALL
	38		W0645	401Y	24		23-42-11	ALL
	39		W0645	401G	24		23-42-11	ALL
	40		W0645	401Z			23-42-11	ALL
	41		W0645	065	24		23-32-12	050-099, 150-199
	41		W0645	065R	24		23-32-12	275-299
	42		W0645	065Z			23-32-12	050-099, 150-199
	42		W0645	065B	24		23-32-12	275-299
	43		W0645	066	24		23-32-12	050-099, 150-199
	43		W0645	066R	24		23-32-12	275-299
	44		W0645	066Z			23-32-12	050-099, 150-199
	44		W0645	066B	24		23-32-12	275-299
	45		W0645	028	22		23-34-11	ALL
	46		W0645	201R	24		23-31-13	050-099, 150-199
	46		W0645	216B	24		23-31-12	275-299
	47		W0645	201B	24		23-31-13	050-099, 150-199
	47		W0645	216R	24		23-31-12	275-299
	48		W0645	202R	24		23-31-13	050-099, 150-199
	48		W0645	154	24		23-31-12	275-299
	49		W0645	202B	24		23-31-13	050-099, 150-199
	49		W0645	152	24		23-31-12	275-299
	50		W0645	211R	24		23-31-13	050-099, 150-199
	50		W0645	215B	24		23-31-12	275-299
	51		W0645	211B	24		23-31-13	050-099, 150-199
	51		W0645	507	24		23-34-13	275-299
	52		W0645	508	24		23-42-11	050-099
	52		W0645	038	24		23-34-13	150-199, 275-299
	53	UNUSED						050-099
	53		W0645	039	24		23-34-13	150-199, 275-299
	54	UNUSED						050-099
	54		W0645	045	24		23-34-13	150-199, 275-299
	55	UNUSED						050-099
	55		W0645	046	24		23-34-13	150-199, 275-299
	CAP	Y	W0645	149	24		23-31-12	050-099
	DED		W0645	149Z			23-31-12	280-299
	DED		W0645	150Z			23-31-12	280-299
	DED		W0645	152Z			23-31-12	280-299

HOOKUP LIST

D280T132

91-21-51

Section D04600

Page 27

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04625J		AE0307/ /		RCPT E2-5 (continued)				ALL
	DED		W0645	153Z			23-31-12	280-299
	DED		W0645	154Z			23-31-12	280-299
			W0645	065Z			23-32-12	275-299
			W0645	066Z			23-32-12	275-299
			W0645	067Z			23-32-12	275-299
			W0645	068Z			23-32-12	275-299
			W0645	FRD			23-32-12	275-299
			W0645	FRE			23-32-12	275-299
D04625P		AE0307/ /		PLUG E2-5				ALL
	1		W0149	306R	24		23-31-12	050-099
	1		W0149	900	20		23-32-21	150, 152-199
	1	UNUSED						151, 275-299
	2		W0149	306Y	24		23-31-12	050-099
	2		W0149	901	20		23-32-21	150, 152-199
	2	UNUSED						151
	2		W0149	234R	24		23-31-12	275-299
	3		W0149	306B	24		23-31-12	050-099
	3	UNUSED						150-199
	3		W0149	178	24		23-31-12	275-299
	4		W0149	011	24		23-31-12	ALL
	5		W0149	039	22		23-34-11	ALL
	6		W0149	623	22		23-42-11	050-099, 162-199
	6	UNUSED						150-157, 275-299
	7	UNUSED						050-099
	7		W0149	FRH			23-31-12	150-199, 275-299
	8	UNUSED						050-099
	8		W0149	234B	24		23-31-12	150-199
	8		W0149	FRI			23-31-12	275-299
	9	UNUSED						050-099
	9		W0149	234R	24		23-31-12	150-199
	9		W0149	FRK			23-32-12	275-299
	10		W0149	576	24		23-31-12	050-099, 150-199
	10		W0149	FRL			23-32-12	275-299
	11		W0149	038	22		23-34-11	ALL
	12		W0149	077	22		23-34-12	050-099
	12		W0149	077	24		23-34-12	150-199, 275-299
	13		W0149	034	24		23-32-12	050-099, 150-199
	13		W0149	034R	24		23-32-12	275-299
	14		W0149	034Z			23-32-12	050-099, 150-199

HOOKUP LIST

D280T132

91-21-51

Section D04600

Page 28

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04625P		AE0307/ /		PLUG E2-5 (continued)				ALL
	14		W0149	034B	24		23-32-12	275-299
	15		W0149	610	22		23-32-12	050-099, 150-199
	15		W0149	207R	24		23-31-13	275-299
	16		W0149	611	22		23-32-12	050-099, 150-199
	16		W0149	207B	24		23-31-13	275-299
	17		W0149	035	24		23-32-12	050-099, 150-199
	17		W0149	035R	24		23-32-12	275-299
	18		W0149	035Z			23-32-12	050-099, 150-199
	18		W0149	035B	24		23-32-12	275-299
	19		W0149	238R	24		23-34-14	ALL
	20		W0149	238B	24		23-34-14	ALL
	21		W0149	239R	24		23-34-14	ALL
	22		W0149	239B	24		23-34-14	ALL
	23		W0149	248R	22		23-34-11	ALL
	24		W0149	789	24		23-34-13	ALL
	25		W0149	055	24		23-34-13	050-099
	25	UNUSED						150-157, 275-299
	25		W0149	613	24		23-42-11	162-199
	26		W0149	793	24		23-34-13	ALL
	27		W0149	794	24		23-34-13	ALL
	28		W0149	248B	22		23-34-11	ALL
	29	UNUSED						050-099, 150-199
	29		W0149	145	24		23-31-12	275-299
	30		W0149	790	24		23-34-13	ALL
	31		W0149	406R	24		23-42-11	ALL
	32		W0149	406B	24		23-42-11	ALL
	33		W0149	406Y	24		23-42-11	ALL
	34		W0149	406G	24		23-42-11	ALL
	35		W0149	406Z			23-42-11	ALL
	36		W0149	405R	24		23-42-11	ALL
	37		W0149	405B	24		23-42-11	ALL
	38		W0149	405Y	24		23-42-11	ALL
	39		W0149	405G	24		23-42-11	ALL
	40		W0149	405Z			23-42-11	ALL
	41		W0149	032	24		23-32-12	050-099, 150-199
	41		W0149	032R	24		23-32-12	275-299
	42		W0149	032Z			23-32-12	050-099, 150-199
	42		W0149	032B	24		23-32-12	275-299
	43		W0149	033	24		23-32-12	050-099, 150-199
	43		W0149	033R	24		23-32-12	275-299

HOOKUP LIST

D280T132

91-21-51

Section D04600

Page 29

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04625P		AE0307/ /		PLUG E2-5 (continued)				ALL
	44		W0149	033Z			23-32-12	050-099, 150-199
	44		W0149	033B	24		23-32-12	275-299
	45		W0149	040	22		23-34-11	ALL
	46		W0149	281R	24		23-31-13	050-099, 150-199
	46		W0149	240B	24		23-31-12	275-299
	47		W0149	281B	24		23-31-13	050-099, 150-199
	47		W0149	240R	24		23-31-12	275-299
	48		W0149	282R	24		23-31-13	050-099, 150-199
	48		W0149	143	24		23-31-12	275-299
	49		W0149	282B	24		23-31-13	050-099, 150-199
	49		W0149	179	24		23-31-12	275-299
	50		W0149	283R	24		23-31-13	050-099, 150-199
	50		W0149	234B	24		23-31-12	275-299
	51		W0149	283B	24		23-31-13	050-099, 150-199
	51		W0149	702	24		23-34-13	275-299
	52		W0149	613	24		23-42-11	050-099
	52		W0149	791	24		23-34-13	150-199, 275-299
	53	UNUSED						050-099
	53		W0149	792	24		23-34-13	150-199, 275-299
	54	UNUSED						050-099
	54		W0149	787	24		23-34-13	150-199, 275-299
	55	UNUSED						050-099
	55		W0149	788	24		23-34-13	150-199, 275-299
DED			W0149	038Z			23-34-11	ALL
DED			W0149	039Z			23-34-11	ALL
DED			W0149	040Z			23-34-11	ALL
DED			W0149	077Z			23-34-12	ALL
DED			W0149	623Z			23-42-11	050-099, 162-199
			W0149	234	20		23-31-12	150-199, 275-299
			W0149	234Z			23-31-12	150-199, 275-299
			W0149	FRH			23-31-12	150-199, 275-299
			W0149	032Z			23-32-12	275-299
			W0149	033Z			23-32-12	275-299
			W0149	034Z			23-32-12	275-299
			W0149	035Z			23-32-12	275-299
			W0149	240	20		23-31-12	275-299
			W0149	240Z			23-31-12	275-299
			W0149	FRI			23-31-12	275-299
			W0149	FRK			23-32-12	275-299
			W0149	FRL			23-32-12	275-299

HOOKUP LIST

D280T132

91-21-51

Section D04600

Page 30

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04626J		AC0702/ /		RCPT-R WING FS/BODY				ALL
	1		W0752	204B	22		27-81-31	ALL
	2		W0752	204R	22		27-81-31	ALL
	3		W0752	301B	24		27-81-31	ALL
	4		W0752	301R	24		27-81-31	ALL
	5		W0752	301Y	24		27-81-31	ALL
	6		W0752	036	22		SPARE	ALL
	7		W0752	037	22		SPARE	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11		W0752	123	22		27-89-11	ALL
	12		W0752	122	22		27-89-11	ALL
D04626P		AC0702/ /		PLUG-R WING FS/BODY				ALL
	1		W0442	219B	20		27-81-31	ALL
	2		W0442	219R	20		27-81-31	ALL
	3		W0442	301B	20		27-81-31	ALL
	4		W0442	301R	20		27-81-31	ALL
	5		W0442	301Y	20		27-81-31	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	DL	W0442	223B	18		27-89-11	ALL
	12	DL	W0442	223R	18		27-89-11	ALL
D04628J		AC0702/ /		RCPT-R WING FS/BODY				ALL
	1		W0754	201B	24		27-88-22	ALL
	2		W0754	201R	24		27-88-22	ALL
	3		W0754	212B	24		27-88-22	ALL
	4		W0754	212R	24		27-88-22	ALL
	5		W0754	203B	24		27-88-22	ALL
	6		W0754	203R	24		27-88-22	ALL
	7		W0754	204B	24		27-88-22	ALL
	8		W0754	204R	24		27-88-22	ALL
	9		W0754	214B	24		27-88-22	ALL
	10		W0754	214R	24		27-88-22	ALL
	11		W0754	206B	24		27-88-22	ALL
	12		W0754	206R	24		27-88-22	ALL

HOOKUP LIST
D280T132

91-21-51
Section D04600
Page 31
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04628J		AC0702/ /		RCPT-R WING FS/BODY (continued)				ALL
	13		W0754	207B	24		27-88-22	ALL
	14		W0754	207R	24		27-88-22	ALL
	15		W0754	208B	24		27-88-22	ALL
	16		W0754	208R	24		27-88-22	ALL
	17		W0754	209B	24		27-88-22	ALL
	18		W0754	209R	24		27-88-22	ALL
	19		W0754	216B	24		27-88-22	ALL
	20		W0754	216R	24		27-88-22	ALL
	21		W0754	211B	24		27-88-22	ALL
	22		W0754	211R	24		27-88-22	ALL
	23		W0754	202B	22		SPARE	ALL
	24		W0754	202R	22		SPARE	ALL
	25		W0754	217B	24		27-88-22	ALL
	26		W0754	217R	24		27-88-22	ALL
	27		W0754	801	22		SPARE	ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
D04628P		AC0702/ /		PLUG-R WING FS/BODY				ALL
	1		W0442	201B	20		27-88-22	ALL
	2		W0442	201R	20		27-88-22	ALL
	3		W0442	212B	20		27-88-22	ALL
	4		W0442	212R	20		27-88-22	ALL
	5		W0442	203B	20		27-88-22	ALL
	6		W0442	203R	20		27-88-22	ALL
	7		W0442	204B	20		27-88-22	ALL
	8		W0442	204R	20		27-88-22	ALL
	9		W0442	214B	20		27-88-22	ALL
	10		W0442	214R	20		27-88-22	ALL
	11		W0442	206B	20		27-88-22	ALL
	12		W0442	206R	20		27-88-22	ALL
	13		W0442	207B	20		27-88-22	ALL
	14		W0442	207R	20		27-88-22	ALL
	15		W0442	208B	20		27-88-22	ALL
	16		W0442	208R	20		27-88-22	ALL
	17		W0442	209B	20		27-88-22	ALL
	18		W0442	209R	20		27-88-22	ALL
	19		W0442	216B	20		27-88-22	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04600

Page 32

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04628P		AC0702/ /		PLUG-R WING FS/BODY (continued)				ALL
	20		W0442	216R	20		27-88-22	ALL
	21		W0442	211B	20		27-88-22	ALL
	22		W0442	211R	20		27-88-22	ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25		W0442	217B	20		27-88-22	ALL
	26		W0442	217R	20		27-88-22	ALL
	27		W0442	220B	20		SPARE	ALL
	28		W0442	220R	20		SPARE	ALL
	29		W0442	221B	20		SPARE	ALL
	30		W0442	221R	20		SPARE	ALL
	31	UNUSED						ALL
D04629J		AE0307/ /		RCPT-E2-5				ALL
	1		W0647	401R	24		23-42-11	ALL
	2		W0647	401B	24		23-42-11	ALL
	3		W0647	401Y	24		23-42-11	ALL
	4		W0647	401G	24		23-42-11	ALL
	5		W0647	401Z			23-42-11	ALL
	6	UNUSED						ALL
	7		W0647	402R	24		23-42-11	ALL
	8		W0647	402B	24		23-42-11	ALL
	9		W0647	402Y	24		23-42-11	ALL
	10		W0647	402G	24		23-42-11	ALL
	11		W0647	402Z			23-42-11	ALL
	12		W0647	008	22		23-24-11	050-099, 150-199
	12	UNUSED						275-299
	13		W0647	009	22		23-24-11	050-099, 150-199
	13	UNUSED						275-299
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D04600

Page 33

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04629P		AE0307/ /		PLUG-E2-5				ALL
	1		W0149	403R	24		23-42-11	ALL
	2		W0149	403B	24		23-42-11	ALL
	3		W0149	403Y	24		23-42-11	ALL
	4		W0149	403G	24		23-42-11	ALL
	5		W0149	403Z			23-42-11	ALL
	6	UNUSED						ALL
	7		W0149	404R	24		23-42-11	ALL
	8		W0149	404B	24		23-42-11	ALL
	9		W0149	404Y	24		23-42-11	ALL
	10		W0149	404G	24		23-42-11	ALL
	11		W0149	404Z			23-42-11	ALL
	12		W0149	195	22		23-24-11	050-099, 150-199
	12	UNUSED						275-299
	13		W0149	196	22		23-24-11	050-099, 150-199
	13	UNUSED						275-299
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D04630J		AC0702/ /		RCPT-R WING FS/BODY				050-099, 150-154, 162-163, 275-276
D04630J		785/181/R68		RCPT-R WING FS/BODY				155-157, 164-199, 277-299
	1		W0222	201B	24		24-11-21	ALL
	2		W0222	201R	24		24-11-21	ALL
	3		W0222	201Z			24-11-21	ALL
	4	UNUSED						ALL
	5		W0222	202B	20		24-21-21	ALL
	6		W0222	202R	20		24-21-21	ALL
	7		W0222	202Z			24-21-21	ALL
	8		W0222	401B	24		24-21-21	ALL
	9		W0222	401R	24		24-21-21	ALL
	10		W0222	401Y	24		24-21-21	ALL
	11		W0222	401G	24		24-21-21	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04600

Page 34

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04630J		AC0702/ /		RCPT-R WING FS/BODY (continued)				050-099, 150-154, 162-163, 275-276
D04630J		785/181/R68		RCPT-R WING FS/BODY (continued)				155-157, 164-199, 277-299
	12		W0222	203B	24		24-11-21	ALL
	13		W0222	203R	24		24-11-21	ALL
	14		W0222	204B	24		24-11-21	ALL
	15		W0222	204R	24		24-11-21	ALL
	16		W0222	003	24		24-11-21	ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24		W0222	100	20		SPARE	ALL
D04630P		AC0702/ /		PLUG-R WING FS/BODY				050-099, 150-154, 162-163, 275-276
D04630P		785/181/R 68		PLUG-				155-157, 164-199, 277-299
	1		W0414	201B	20		24-11-21	ALL
	2		W0414	201R	20		24-11-21	ALL
	3		W0414	201Z			24-11-21	ALL
	4		W0414	205Z			SPARE	ALL
	5		W0414	202B	20		24-21-21	ALL
	6		W0414	202R	20		24-21-21	ALL
	7		W0414	202Z			24-21-21	ALL
	8		W0414	401B	20		24-21-21	ALL
	9		W0414	401R	20		24-21-21	ALL
	10		W0414	401Y	20		24-21-21	ALL
	11		W0414	401G	20		24-21-21	ALL
	12		W0414	203B	20		24-11-21	ALL
	13		W0414	203R	20		24-11-21	ALL
	14		W0414	204B	20		24-11-21	ALL
	15		W0414	204R	20		24-11-21	ALL
	16		W0414	003	20		24-11-21	ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23		W0414	205B	20		SPARE	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04600

Page 35

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04630P		AC0702/ /		PLUG-R WING FS/BODY (continued)				050-099, 150-154, 162-163, 275-276
D04630P		785/181/R 68		PLUG- (continued)				155-157, 164-199, 277-299
	24		W0414	205R	20		SPARE	ALL
D04632J		AC0702/ /		RCPT-R WING FS/BODY				ALL
	1		W0262	003	24		80-11-21	ALL
	2		W0262	004	24		80-11-21	ALL
	3	DK	W0262	005	18		80-11-21	ALL
	4	UNUSED						ALL
	5		W0262	062	20		76-11-11	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9		W0262	021	20		76-11-11	ALL
	10		W0262	022	20		76-11-11	ALL
	11	UNUSED						ALL
	12		W0262	023	20		76-11-11	ALL
	13	UNUSED						ALL
	14		W0262	035	20		SPARE	050-099
	14	UNUSED						150-199, 275-299
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22		W0262	056	20		SPARE	050-099, 150-154, 275-276
	22	UNUSED						155-199, 277-299
	23		W0262	050	20		SPARE	ALL
	24		W0262	051	20		SPARE	ALL
D04632P		AC0702/ /		PLUG-R WING FS/BODY				ALL
	1		W0404	003	20		80-11-21	ALL
	2		W0404	002	20		80-11-21	ALL
	3		W0404	001	20		80-11-21	ALL
	4	UNUSED						ALL
	5		W0404	007	20		76-11-11	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D04600

Page 36

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04632P		AC0702/ /		PLUG-R WING FS/BODY (continued)				ALL
	9		W0404	006	20		76-11-11	ALL
	10		W0404	009	20		76-11-11	ALL
	11	UNUSED						ALL
	12		W0404	005	20		76-11-11	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	= CC	L	W0404	002Z			80-11-21	ALL
	= CC	L	W0404	003Z			80-11-21	ALL
	= CC	L	W0404	006Z			76-11-11	ALL
	= CC	L	W0404	009Z			76-11-11	ALL
D04633J		AE0306/ /		RCPT-E2-5				ALL
	1		W0649	001	20		23-71-11	ALL
	2		W0649	002	22		23-71-11	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W0649	006Z			23-71-11	ALL
	6		W0649	006	24		23-71-11	ALL
	7	UNUSED						ALL
	8		W0649	008	24		23-71-11	ALL
	9		W0649	009	24		23-71-11	ALL
	10		W0649	010	24		23-71-11	ALL
	11		W0649	010Z			23-71-11	ALL
	12		W0649	012	24		23-71-11	ALL
	13		W0649	013	24		23-71-11	ALL
	14		W0649	014	22		23-71-11	ALL
	15		W0649	015	24		23-71-11	ALL
	16		W0649	016	24		23-71-11	ALL
	17	UNUSED						ALL
	18		W0649	018	24		23-51-41	ALL

HOOKUP LIST
D280T132

91-21-51
Section D04600
Page 37
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04633J		AE0306/ /		RCPT-E2-5 (continued)				ALL
	19		W0649	018Z			23-51-41	ALL
	20		W0649	020	24		23-51-21	ALL
	21		W0649	020Z			23-51-21	ALL
	22	UNUSED						ALL
	23		W0649	023	24		23-71-11	ALL
	24		W0649	024	24		23-71-11	ALL
	25		W0649	025	24		23-71-11	ALL
	26		W0649	026	24		23-51-13	ALL
	27		W0649	026Z			23-51-13	ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
D04633P		AE0306/ /		PLUG-E2-5				ALL
	1		W0139	783	20		23-71-11	ALL
	2		W0139	725	22		23-71-11	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W0139	735Z			23-71-11	ALL
	6		W0139	735	24		23-71-11	ALL
	7	UNUSED						ALL
	8		W0139	737	24		23-71-11	ALL
	9		W0139	734	24		23-71-11	ALL
	10		W0139	736	24		23-71-11	ALL
	11		W0139	736Z			23-71-11	ALL
	12		W0139	730	24		23-71-11	ALL
	13		W0139	727	24		23-71-11	ALL
	14		W0139	726	22		23-71-11	ALL
	15		W0139	728	24		23-71-11	ALL
	16		W0139	729	24		23-71-11	ALL
	17	UNUSED						ALL
	18		W0139	798	24		23-51-41	ALL
	19		W0139	799	20		23-51-41	ALL
	20		W0139	796	24		23-51-21	ALL
	21		W0139	797	20		23-51-21	ALL
	22	UNUSED						ALL
	23		W0139	731	24		23-71-11	ALL
	24		W0139	732	24		23-71-11	ALL
	25		W0139	733	24		23-71-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04600

Page 38

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04633P		AE0306/ /		PLUG-E2-5 (continued)				ALL
	26		W0139	794	24		23-51-13	ALL
	27		W0139	795	20		23-51-13	ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
D04634J		AC0701/ /		RCPT-L WING FS/BODY				ALL
	1		W0264	010	20		76-11-11	ALL
	2		W0264	011	20		76-11-11	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W0264	018	24		80-11-11	ALL
	7		W0264	019	24		80-11-11	ALL
	8	DK	W0264	020	18		80-11-11	ALL
	9		W0264	106	20		76-11-11	ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12		W0264	099	20		76-11-11	ALL
	13	UNUSED						ALL
	14		W0264	035	20		SPARE	050-099
	14	UNUSED						150-199, 275-299
	15	UNUSED						ALL
	16		W0264	084	20		SPARE	ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D04634P		AC0701/ /		PLUG-L WING FS/BODY				ALL
	1		W0402	006	20		76-11-11	ALL
	2		W0402	042	20		76-11-11	ALL
	3	UNUSED						ALL
	4		W0402	007	20		SPARE	050-099, 150-199
	4	UNUSED						275-299

HOOKUP LIST
D280T132

91-21-51
Section D04600
Page 39
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04634P		AC0701/ /		PLUG-L WING FS/BODY (continued)				ALL
	5	UNUSED						ALL
	6		W0402	003	20		80-11-11	ALL
	7		W0402	002	20		80-11-11	ALL
	8		W0402	001	20		80-11-11	ALL
	9		W0402	008	20		76-11-11	ALL
	10	UNUSED						ALL
	11		W0402	039	20		SPARE	050-099, 150-199
	11	UNUSED						275-299
	12		W0402	004	20		76-11-11	ALL
	13	UNUSED						ALL
	14	UNUSED						050-099, 275-299
	14		W0402	011	20		SPARE	150-199
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	= CC	L	W0402	002Z			80-11-11	ALL
	= CC	L	W0402	003Z			80-11-11	ALL
	= CC	L	W0402	006Z			76-11-11	ALL
	= CC	L	W0402	042Z			76-11-11	ALL
D04636J		AC0702/ /		RCPT-				ALL
	1		W0580	034	24		21-43-11	ALL
	2		W0580	033	24		21-43-11	ALL
	3		W0580	121	24		21-51-21	ALL
	4		W0580	122	24		21-51-21	ALL
	5		W0580	123	24		21-51-21	ALL
	6		W0580	124	24		21-51-21	ALL
	7		W0580	020	24		SPARE	050-099
	7		W0580	020	24		21-51-21	150-199, 275-299
	8		W0580	027	24		21-43-11	ALL
	9		W0580	201B	24		21-51-21	ALL
	10		W0580	201R	24		21-51-21	ALL
	11		W0580	029	24		21-43-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04600

Page 40

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04636J		AC0702/ /		RCPT- (continued)				ALL
	12	UNUSED						ALL
	DED		W0580	121Z			21-51-21	ALL
	DED		W0580	122Z			21-51-21	ALL
	DED		W0580	123Z			21-51-21	ALL
	DED		W0580	124Z			21-51-21	ALL
	DED		W0580	201Z			21-51-21	ALL
D04636P		AC0702/ /		PLUG-				ALL
	1		W0982	001	20		21-43-11	ALL
	2		W0982	002	20		21-43-11	ALL
	3		W0982	006	20		21-51-21	ALL
	4		W0982	009	20		21-51-21	ALL
	5		W0982	011	20		21-51-21	ALL
	6		W0982	014	20		21-51-21	ALL
	7	UNUSED						050-099
	7		W0982	013	20		21-51-21	150-199, 275-299
	8		W0982	005	20		21-43-11	ALL
	9		W0982	201B	20		21-51-21	ALL
	10		W0982	201R	20		21-51-21	ALL
	11		W0982	016	20		21-43-11	ALL
	12	UNUSED						ALL
D04638J		AE0320/ /		RCPT-E2-4				ALL
	1		W0738	016	20		28-41-22	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	=C1		W0738	016Z			28-41-22	ALL
D04638P		AE0320/ /		PLUG-E2-4				ALL
	1		W0098	037	24		28-41-22	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	=C1		W0098	037Z			28-41-22	ALL
D04644J		AF0204/ /		RCPT-P61				ALL
	1		W0062	63M	24		33-16-14	ALL
	2		W0062	50C	22		21-25-11	ALL
	3		W0062	50A	24		21-25-11	ALL
	4		W0062	50B	22		21-25-11	ALL
	5		W0062	516	24		21-25-11	ALL

HOOKUP LIST
D280T132

91-21-51
Section D04600
Page 41
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04644J		AF0204/ /		RCPT-P61 (continued)				ALL
	6		W0062	614	24		28-22-12	ALL
	7		W0062	64X	24		32-61-14	ALL
	8	UNUSED						050-099, 150-199, 277-299
	8		W0062	50S	24		21-44-21	275-276
	9		W0062	058	24		21-61-51	ALL
	10		W0062	63P	24		21-58-13	ALL
	11		W0062	091	24		21-61-61	ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18		W0062	50V	22		21-51-11	ALL
	19		W0062	50D	24		21-25-11	ALL
	20	FM	W0062	58P	16		33-42-11	ALL
	21		W0062	088	24		21-61-71	ALL
	22		W0062	51Z	24		21-51-11	ALL
	23	UNUSED						ALL
	24		W0062	529	24		21-51-11	ALL
	25		W0062	515	24		21-51-11	ALL
	26		W0062	514	22		21-51-11	ALL
	27		W0062	513	22		21-51-11	ALL
	28		W0062	106R	22		26-18-11	ALL
	29		W0062	777R	22		26-18-11	ALL
	30		W0062	105R	22		26-18-21	ALL
	31		W0062	800R	22		26-18-21	ALL
	32		W0062	089R	22		26-18-31	ALL
	33		W0062	786R	22		26-18-31	ALL
	34	UNUSED						ALL
	35		W0062	799R	22		26-18-31	ALL
	36		W0062	406R	22		26-18-12	ALL
	37		W0062	407R	22		26-18-12	ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40		W0062	57S	24		32-46-11	ALL
	41		W0062	57T	22		32-46-11	ALL
	42		W0062	338B	24		21-61-61	ALL
	43		W0062	338R	24		21-61-61	ALL
	44		W0062	338Y	24		21-61-61	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04600

Page 42

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04644J		AF0204/ /		RCPT-P61 (continued)				ALL
	45		W0062	296B	24		21-61-61	ALL
	46		W0062	296R	24		21-61-61	ALL
	47		W0062	295B	24		21-61-61	ALL
	48		W0062	295R	24		21-61-61	ALL
	49		W0062	223B	24		21-61-71	ALL
	50		W0062	223R	24		21-61-71	ALL
	51		W0062	224R	24		21-61-71	ALL
	52		W0062	224B	24		21-61-71	ALL
	53		W0062	339B	24		21-61-71	ALL
	54		W0062	339R	24		21-61-71	ALL
	55		W0062	339Y	24		21-61-71	ALL
	56		W0062	66H	20		33-42-21	050-099
	56	DK	W0062	66H	18		33-42-21	150-199, 275-299
	57		W0062	66J	20		33-42-21	050-099
	57	DK	W0062	66J	18		33-42-21	150-199, 275-299
	58	FM	W0062	58R	16		33-42-11	ALL
	59	UNUSED						050-099, 150-199, 277-299
	59		W0062	50R	24		21-44-21	275-276
	60	UNUSED						ALL
	61	UNUSED						ALL
	CAP	Y	W0062	50R	24		SPARE	051-099, 150-154
	CAP	Y	W0062	50S	24		SPARE	051-099, 150-154
D04644P		AF0204/ /		PLUG-P61				ALL
	1		W0510	110	24		33-16-14	ALL
	2		W0510	124	22		21-25-11	ALL
	3		W0510	067	24		21-25-11	ALL
	4		W0510	068	22		21-25-11	ALL
	5		W0510	069	24		21-25-11	ALL
	6		W0510	063	24		28-22-12	ALL
	7		W0510	088	24		32-61-14	ALL
	8	UNUSED						050-099, 150-199, 277-299
	8		W0510	719	24		21-44-21	275-276
	9		W0510	513	24		21-61-51	ALL
	10		W0510	186	24		21-58-13	ALL
	11		W0510	514	24		21-61-61	ALL
	12		W0510	090	22		SPARE	ALL
	13		W0510	091	22		SPARE	ALL
	14		W0510	092	22		SPARE	ALL
	15	UNUSED						050-099

HOOKUP LIST

D280T132

91-21-51

Section D04600

Page 43

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04644P		AF0204/ /		PLUG-P61 (continued)				ALL
	15		W0510	093	20		SPARE	150-199, 275-299
	16		W0510	803	22		SPARE	ALL
	17		W0510	804	22		SPARE	ALL
	18		W0510	118	22		21-51-11	ALL
	19		W0510	193	24		21-25-11	ALL
	20	FL	W0510	701	16		33-42-11	ALL
	21		W0510	515	24		21-61-71	ALL
	22		W0510	122	24		21-51-11	ALL
	23		W0510	123	24		SPARE	ALL
	24		W0510	132	24		21-51-11	ALL
	25		W0510	133	24		21-51-11	ALL
	26		W0510	134	22		21-51-11	ALL
	27		W0510	135	22		21-51-11	ALL
	28		W0510	028R	22		26-18-11	ALL
	29		W0510	029R	22		26-18-11	ALL
	30		W0510	030R	22		26-18-21	ALL
	31		W0510	031R	22		26-18-21	ALL
	32		W0510	032R	22		26-18-31	ALL
	33		W0510	033R	22		26-18-31	ALL
	34		W0510	034R	22		SPARE	050-099
	34	UNUSED						150-199, 275-299
	35		W0510	035R	22		26-18-31	ALL
	36		W0510	502R	22		26-18-12	ALL
	37		W0510	503R	22		26-18-12	ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40		W0510	040	24		32-46-11	ALL
	41		W0510	041	22		32-46-11	ALL
	42		W0510	306B	24		21-61-61	ALL
	43		W0510	306R	24		21-61-61	ALL
	44		W0510	306Y	24		21-61-61	ALL
	45		W0510	216B	24		21-61-61	ALL
	46		W0510	216R	24		21-61-61	ALL
	47		W0510	217B	24		21-61-61	ALL
	48		W0510	217R	24		21-61-61	ALL
	49		W0510	218B	24		21-61-71	ALL
	50		W0510	218R	24		21-61-71	ALL
	51		W0510	219R	24		21-61-71	ALL
	52		W0510	219B	24		21-61-71	ALL
	53		W0510	307B	24		21-61-71	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04600

Page 44

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04644P		AF0204/ /		PLUG-P61 (continued)				ALL
	54		W0510	307R	24		21-61-71	ALL
	55		W0510	307Y	24		21-61-71	ALL
	56		W0510	703	20		33-42-21	050-099
	56	DL	W0510	703	18		33-42-21	150-199, 275-299
	57		W0510	704	20		33-42-21	050-099
	57	DL	W0510	704	18		33-42-21	150-199, 275-299
	58	FL	W0510	702	16		33-42-11	ALL
	59	UNUSED						050-099, 150-199, 277-299
	59		W0510	718	24		21-44-21	275-276
	60	UNUSED						ALL
	61	UNUSED						ALL
	CAP	Y	W0510	718	24		SPARE	051-099, 150-154
	CAP	Y	W0510	719	24		SPARE	051-099, 150-154
D04646J		AE0218/ /		RCPT-P37				ALL
	1		W0192	140	24		32-31-11	ALL
	2		W0192	079	24		21-53-12	ALL
	3		W0192	143	24		32-41-11	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W0192	80R	24		21-26-11	050-099, 155-199, 276-299
	6		W0192	02Q	24		21-26-11	150-154, 275
	7		W0192	141	24		32-42-12	ALL
	8		W0192	142	24		32-42-12	ALL
	9		W0192	146	24		21-26-11	ALL
	10		W0192	83F	24		73-21-18	ALL
	11		W0192	148	24		21-58-16	ALL
	12		W0192	587	24		32-09-12	ALL
	13		W0192	654	22		28-42-11	ALL
	14		W0192	080	24		21-53-12	ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18		W0192	150	24		21-25-21	ALL
	19		W0192	151	22		21-25-21	ALL
	20		W0192	152	24		21-25-21	ALL
	21		W0192	153	24		21-25-21	ALL
	22		W0192	19R	24		21-25-21	ALL
	23		W0192	154	24		21-25-21	ALL
	24		W0192	081	24		21-53-12	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04600

Page 45

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04646J		AE0218/ /		RCPT-P37 (continued)				ALL
	25		W0192	230R	22		32-61-13	ALL
	26		W0192	230B	22		32-61-13	ALL
	27		W0192	231R	22		32-61-13	ALL
	28		W0192	231B	22		32-61-13	ALL
	29		W0192	232R	22		32-61-13	ALL
	30		W0192	232B	22		32-61-13	ALL
	31		W0192	233R	22		32-61-13	ALL
	32		W0192	233B	22		32-61-13	ALL
	33	UNUSED						050-099
	33		W0192	167	24		21-51-21	150-199, 275-299
	34	UNUSED						050-099
	34		W0192	168	24		21-51-21	150-199, 275-299
	35		W0192	082	24		21-53-12	ALL
	36		W0192	083	24		21-53-12	ALL
	37		W0192	084	24		21-53-12	ALL
	38		W0192	085	24		21-53-12	ALL
	39		W0192	155	24		21-53-12	ALL
	40		W0192	158	24		21-53-12	ALL
	41		W0192	159	24		21-53-12	ALL
	42		W0192	160	24		29-31-11	ALL
	43		W0192	83E	24		73-21-18	ALL
	44	UNUSED						ALL
	45		W0192	163	24		21-53-12	ALL
	46		W0192	164	24		21-53-12	ALL
	47		W0192	165	24		21-53-12	ALL
	48		W0192	14V	24		21-26-11	ALL
	49		W0192	14Y	24		21-26-11	ALL
	50		W0192	169	24		21-26-11	ALL
	51		W0192	884	24		21-26-11	ALL
	52		W0192	19X	24		73-21-18	ALL
	53		W0192	181	24		21-26-11	ALL
	54		W0192	183	24		21-61-31	ALL
	55		W0192	877	24		21-61-31	ALL
	56		W0192	878	24		21-61-31	ALL
	57		W0192	246B	24		21-61-31	ALL
	58		W0192	246R	24		21-61-31	ALL
	59		W0192	881	24		21-61-31	ALL
	60		W0192	882	22		21-61-31	ALL
	61		W0192	883	24		21-61-31	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04600

Page 46

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04646P		AE0218/ /		PLUG-P37				ALL
	1		W0506	001	24		32-31-11	ALL
	2		W0506	115	24		21-53-12	ALL
	3		W0506	042	24		32-41-11	ALL
	4		W0506	043	24		SPARE	ALL
	5	UNUSED						050-099
	5		W0506	044	24		SPARE	150-199, 275-299
	6		W0506	169	24		21-26-11	ALL
	7		W0506	046	24		32-42-12	ALL
	8		W0506	047	24		32-42-12	ALL
	9		W0506	167	24		21-26-11	ALL
	10		W0506	087	24		73-21-18	ALL
	11		W0506	174	24		21-26-11	ALL
	12		W0506	012	24		32-09-12	ALL
	13		W0506	614	22		28-42-11	ALL
	14		W0506	114	24		21-53-12	ALL
	15	UNUSED						050-099
	15		W0506	077	20		SPARE	150-199, 275-299
	16	UNUSED						050-099
	16		W0506	078	20		SPARE	150-199, 275-299
	17	UNUSED						050-099
	17		W0506	079	20		SPARE	150-199, 275-299
	18		W0506	065	24		21-25-21	ALL
	19		W0506	067	22		21-25-21	ALL
	20		W0506	070	24		21-25-21	ALL
	21		W0506	069	24		21-25-21	ALL
	22		W0506	068	24		21-25-21	ALL
	23		W0506	071	24		21-25-21	ALL
	24		W0506	113	24		21-53-12	ALL
	25		W0506	201R	24		32-61-13	ALL
	26		W0506	201B	24		32-61-13	ALL
	27		W0506	202R	24		32-61-13	ALL
	28		W0506	202B	24		32-61-13	ALL
	29		W0506	203R	24		32-61-13	ALL
	30		W0506	203B	24		32-61-13	ALL
	31		W0506	204R	24		32-61-13	ALL
	32		W0506	204B	24		32-61-13	ALL
	33	UNUSED						050-099
	33		W0506	096	24		21-51-21	150-199, 275-299
	34	UNUSED						050-099
	34		W0506	097	24		21-51-21	150-199, 275-299

HOOKUP LIST

D280T132

91-21-51

Section D04600

Page 47

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04646P		AE0218/ /		PLUG-P37 (continued)				ALL
	35		W0506	112	24		21-53-12	ALL
	36		W0506	111	24		21-53-12	ALL
	37		W0506	110	24		21-53-12	ALL
	38		W0506	109	24		21-53-12	ALL
	39		W0506	122	24		21-53-12	ALL
	40		W0506	123	24		21-53-12	ALL
	41		W0506	124	24		21-53-12	ALL
	42		W0506	106	24		29-31-11	ALL
	43		W0506	754	24		73-21-18	050-099, 280-299
	43		W0506	754	24		73-21-11	150-199, 275-278
	44	UNUSED						ALL
	45		W0506	125	24		21-53-12	ALL
	46		W0506	126	24		21-53-12	ALL
	47		W0506	127	24		21-53-12	ALL
	48		W0506	699	24		21-26-11	ALL
	49		W0506	700	24		21-26-11	ALL
	50		W0506	170	24		21-26-11	ALL
	51		W0506	171	24		21-26-11	ALL
	52		W0506	088	24		73-21-18	ALL
	53		W0506	173	24		21-26-11	ALL
	54		W0506	513	24		21-61-31	ALL
	55		W0506	514	24		21-61-31	ALL
	56		W0506	713	24		21-61-31	ALL
	57		W0506	207B	24		21-61-31	ALL
	58		W0506	207R	24		21-61-31	ALL
	59		W0506	519	24		21-61-31	ALL
	60		W0506	520	22		21-61-31	ALL
	61		W0506	521	24		21-61-31	ALL
D04647J		AE0307/ /		RCPT-E2-5				ALL
	1		W0665	201R	22		23-31-14	050-099
	1	UNUSED						150-199, 275-299
	2		W0665	201B	22		23-31-14	050-099
	2	UNUSED						150-199, 275-299
	3		W0665	003	22		23-42-11	ALL
	4		W0665	006	22		23-42-11	ALL
	5		W0665	009	22		23-42-11	ALL
	6		W0665	129	22		23-34-13	050-099
	6		W0665	129	24		23-34-13	150-199, 275-299
	7		W0665	130	24		23-34-13	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04600

Page 48

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04647J		AE0307/ /		RCPT-E2-5 (continued)				ALL
	8		W0665	014	24		23-34-13	ALL
	9		W0665	017	24		23-34-13	ALL
	10	UNUSED						050-099
	10		W0665	036	22		23-42-12	150-199, 275-299
	11	UNUSED						050-099
	11		W0665	037	24		23-42-12	150-199, 275-299
	12	UNUSED						050-099
	12		W0665	038	24		23-42-12	150-199, 275-299
	13	UNUSED						050-099
	13		W0665	039	24		23-42-12	150-199, 275-299
	14		W0665	077	24		23-34-13	050-099
	14	UNUSED						150-199, 275-299
	15	UNUSED						050-099
	15		W0665	060	24		23-34-13	150-199, 275-299
	16	UNUSED						050-099
	16		W0665	061	24		23-34-13	150-199, 275-299
	17	UNUSED						050-099
	17		W0665	062	24		23-34-13	150-199, 275-299
	18	UNUSED						050-099
	18		W0665	063	24		23-34-13	150-199, 275-299
	19	UNUSED						050-099
	19		W0665	064	24		23-34-13	150-199, 275-299
	20	UNUSED						050-099
	20		W0665	065	24		23-34-13	150-199, 275-299
	21		W0665	131	24		23-34-13	ALL
	22		W0665	132	24		23-34-13	ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25		W0665	505	22		23-42-11	050-099, 162-199
	26		W0665	506	22		23-42-11	050-099, 162-199
	27		W0665	507	22		23-42-11	050-099, 162-199
	28		W0665	508	22		23-42-11	050-099, 162-199
	29	UNUSED						050-099, 162-199
	30	UNUSED						050-099, 162-199
	31	UNUSED						050-099, 162-199
D04647P		AE0307/ /		PLUG-E2-5				ALL
	1		W0149	208R	22		23-31-14	050-099
	1	UNUSED						150-199, 275-299
	2		W0149	208B	22		23-31-14	050-099

HOOKUP LIST
D280T132

91-21-51
Section D04600
Page 49
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04647P		AE0307/ /		PLUG-E2-5 (continued)				ALL
	2	UNUSED						150-199, 275-299
	3		W0149	105	22		23-42-11	ALL
	4		W0149	108	22		23-42-11	ALL
	5		W0149	103	22		23-42-11	ALL
	6		W0149	801	24		23-34-13	ALL
	7		W0149	802	24		23-34-13	ALL
	8		W0149	796	24		23-34-13	050-099
	8		W0149	795	24		23-34-13	150-199, 275-299
	9		W0149	156	24		23-34-13	050-099
	9		W0149	796	24		23-34-13	150-199, 275-299
	10	UNUSED						050-099
	10		W0149	057	22		23-42-12	150-199, 275-299
	11	UNUSED						050-099
	11		W0149	058	24		23-42-12	150-199, 275-299
	12	UNUSED						050-099
	12		W0149	059	24		23-42-12	150-199, 275-299
	13	UNUSED						050-099
	13		W0149	060	24		23-42-12	150-199, 275-299
	14		W0149	154	24		23-34-13	050-099
	14	UNUSED						150-199, 275-299
	15	UNUSED						050-099
	15		W0149	799	24		23-34-13	150-199, 275-299
	16	UNUSED						050-099
	16		W0149	800	24		23-34-13	150-199, 275-299
	17	UNUSED						050-099
	17		W0149	765	24		23-34-13	150-199, 275-299
	18	UNUSED						050-099
	18		W0149	766	24		23-34-13	150-199, 275-299
	19	UNUSED						050-099
	19		W0149	768	24		23-34-13	150-199, 275-299
	20	UNUSED						050-099
	20		W0149	769	24		23-34-13	150-199, 275-299
	21		W0149	797	24		23-34-13	ALL
	22		W0149	798	24		23-34-13	ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25		W0149	622	22		23-42-11	050-099, 162-199
	26		W0149	614	22		23-42-11	050-099, 162-199
	27		W0149	615	22		23-42-11	050-099, 162-199
	28		W0149	616	22		23-42-11	050-099, 162-199

HOOKUP LIST

D280T132

91-21-51

Section D04600

Page 50

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04647P		AE0307/ /		PLUG-E2-5 (continued)				ALL
	29	UNUSED						050-099, 162-199
	30	UNUSED						050-099, 162-199
	31	UNUSED						050-099, 162-199
	DED		W0149	622Z			23-42-11	050-099, 162-199
	DED		W0149	057Z			23-42-12	150-199, 275-299
D04650J		AF0204/ /		RCPT-P61				ALL
	1		W0066	57E	22		32-31-11	ALL
	2		W0066	50M	22		21-33-11	ALL
	3		W0066	57J	24		32-41-11	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W0066	58B	24		32-42-12	ALL
	8	UNUSED						ALL
	9		W0066	410R	22		26-18-22	ALL
	10		W0066	411R	22		26-18-22	ALL
	11	UNUSED						ALL
	12		W0066	57A	24		32-09-12	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18		W0066	50V	24		21-51-21	ALL
	19		W0066	65A	24		80-11-11	ALL
	20		W0066	65B	24		80-11-21	ALL
	21		W0066	529	24		21-51-21	ALL
	22		W0066	515	24		21-51-21	ALL
	23		W0066	514	22		21-51-21	ALL
	24		W0066	513	22		21-51-21	ALL
	25		W0066	57P	24		32-42-12	ALL
	26		W0066	57M	24		32-42-12	ALL
	27		W0066	57N	24		32-42-12	ALL
	28	UNUSED						ALL
	29		W0066	57R	24		32-42-12	ALL
	30		W0066	57S	24		32-42-12	ALL
	31		W0066	57T	24		32-42-12	ALL
	32		W0066	57U	24		32-42-12	ALL
	33		W0066	57V	24		32-42-12	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04600

Page 51

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04650J		AF0204/ /		RCPT-P61 (continued)				ALL
	34		W0066	57W	24		32-42-12	ALL
	35		W0066	57X	24		32-42-12	ALL
	36		W0066	58G	24		32-42-12	ALL
	37		W0066	57Z	24		32-42-12	ALL
	38		W0066	58C	24		32-42-12	ALL
	39		W0066	58F	24		32-42-12	ALL
	40		W0066	58A	24		32-42-12	ALL
	41	UNUSED						ALL
	42		W0066	55S	24		29-31-11	ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47		W0066	51B	24		21-53-12	ALL
	48		W0066	414R	22		26-18-22	ALL
	49		W0066	415R	22		26-18-22	ALL
	50		W0066	037	22		29-32-11	ALL
	51		W0066	014	24		29-11-12	ALL
	52		W0066	010	22		29-11-12	ALL
	53		W0066	011	22		29-11-12	ALL
	54		W0066	020	22		29-11-12	ALL
	55	UNUSED						ALL
	56		W0066	03K	24		33-24-11	ALL
	57		W0066	03F	24		33-24-11	ALL
	58		W0066	012	24		29-11-12	ALL
	59	UNUSED						ALL
	60	UNUSED						ALL
	61	UNUSED						ALL
	DED		W0066	50MZ			21-33-11	ALL
	DED		W0066	65AZ			80-11-11	ALL
	DED		W0066	65BZ			80-11-21	ALL
D04650P		AF0204/ /		PLUG-P61				ALL
	1		W0506	001	24		32-31-11	ALL
	2		W0506	037	22		21-33-11	ALL
	3		W0506	042	24		32-41-11	ALL
	4		W0506	043	24		SPARE	ALL
	5	UNUSED						050-099
	5		W0506	044	24		SPARE	150-199, 275-299
	6	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D04600

Page 52

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04650P		AF0204/ /		PLUG-P61 (continued)				ALL
	7		W0506	051	24		32-42-12	ALL
	8	UNUSED						ALL
	9		W0506	725R	22		26-18-22	ALL
	10		W0506	726R	22		26-18-22	ALL
	11	UNUSED						ALL
	12		W0506	012	24		32-09-12	ALL
	13		W0506	075	22		SPARE	ALL
	14		W0506	076	22		SPARE	ALL
	15	UNUSED						050-099
	15		W0506	077	20		SPARE	150-199, 275-299
	16	UNUSED						050-099
	16		W0506	078	20		SPARE	150-199, 275-299
	17	UNUSED						050-099
	17		W0506	079	20		SPARE	150-199, 275-299
	18		W0506	018	24		21-51-21	ALL
	19		W0506	674	24		80-11-11	ALL
	20		W0506	675	24		80-11-21	ALL
	21		W0506	021	24		21-51-21	ALL
	22		W0506	022	24		21-51-21	ALL
	23		W0506	023	22		21-51-21	ALL
	24		W0506	024	22		21-51-21	ALL
	25		W0506	048	24		32-42-12	ALL
	26		W0506	049	24		32-42-12	ALL
	27		W0506	050	24		32-42-12	ALL
	28	UNUSED						ALL
	29		W0506	052	24		32-42-12	ALL
	30		W0506	053	24		32-42-12	ALL
	31		W0506	054	24		32-42-12	ALL
	32		W0506	055	24		32-42-12	ALL
	33		W0506	056	24		32-42-12	ALL
	34		W0506	057	24		32-42-12	ALL
	35		W0506	058	24		32-42-12	ALL
	36		W0506	059	24		32-42-12	ALL
	37		W0506	060	24		32-42-12	ALL
	38		W0506	061	24		32-42-12	ALL
	39		W0506	062	24		32-42-12	ALL
	40		W0506	063	24		32-42-12	ALL
	41	UNUSED						ALL
	42		W0506	106	24		29-31-11	ALL
	43	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D04600

Page 53

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04650P		AF0204/ /		PLUG-P61 (continued)				ALL
	44		W0506	084	20		SPARE	ALL
	45		W0506	085	20		SPARE	ALL
	46	UNUSED						ALL
	47		W0506	121	24		21-53-12	ALL
	48		W0506	719R	22		26-18-22	ALL
	49		W0506	720R	22		26-18-22	ALL
	50		W0506	163	22		29-32-11	ALL
	51		W0506	091	24		29-11-12	ALL
	52		W0506	092	22		29-11-12	ALL
	53		W0506	093	22		29-11-12	ALL
	54		W0506	094	22		29-11-12	ALL
	55	UNUSED						ALL
	56		W0506	528	24		33-24-11	ALL
	57		W0506	529	24		33-24-11	ALL
	58		W0506	601	24		29-11-12	ALL
	59	UNUSED						ALL
	60	UNUSED						ALL
	61	UNUSED						ALL
	DED		W0506	037Z			21-33-11	ALL
	DED		W0506	674Z			80-11-11	ALL
	DED		W0506	675Z			80-11-21	ALL
D04652J		AL1006/ /		RCPT-				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W0606	015	22		28-21-13	ALL
	7		W0606	014	20		28-21-13	ALL
	8		W0606	203Z			31-31-22	ALL
	9	UNUSED						050-099
	9		W0606	143	22		SPARE	150-199, 275-299
	10		W0606	203R	22		31-31-22	ALL
	11		W0606	203B	22		31-31-22	ALL
	12		W0606	020	22		31-31-22	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D04600

Page 54

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04652P		AL1006/ /		PLUG-R WING RS/BODY				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W0462	201R	20		28-21-13	ALL
	7		W0462	201B	20		28-21-13	ALL
	8		W0462	FRA			31-31-22	ALL
	9	UNUSED						ALL
	10		W0462	202R	20		31-31-22	ALL
	11		W0462	202B	20		31-31-22	ALL
	12		W0462	020	20		31-31-22	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	DED		W0462	020Z			31-31-22	ALL
	REF		W0462	021	20		31-31-22	ALL
	REF		W0462	202Z			31-31-22	ALL
	REF		W0462	FRA			31-31-22	ALL
D04653J		AE0306/ /		RCPT-E2-6				ALL
	1	UNUSED						050-099, 151-152, 275-276
	1		W9030	906	22		23-25-14	150, 153-155, 162-165
	1		W0683	017	24		23-25-14	156-157, 166-199, 277-299
	2	UNUSED						050-099, 151-152, 275-276
	2		W9030	905	22		23-25-14	150, 153-155, 162-165
	2		W0683	018	24		23-25-14	156-157, 166-199, 277-299
	3		W0683	003	22		23-11-11	ALL
	4		W0683	013	24		23-11-11	ALL
	5		W0683	005	24		23-11-11	ALL
	6		W0683	014	24		23-11-11	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9		W0683	201R	24		23-11-11	ALL
	10		W0683	201B	24		23-11-11	ALL
	11		W0683	201Z			23-11-11	ALL
	12	UNUSED						050-099, 151-152, 275-276
	12		W9030	904	22		23-25-14	150, 153-155, 162-165
	12		W0683	019	24		23-25-14	156-157, 166-199, 277-299

HOOKUP LIST
D280T132

91-21-51
Section D04600
Page 55
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04653P		AE0306/ /		PLUG-E2-6				ALL
	1	UNUSED						050-099, 151-152, 275-276
	1		W0163	062	22		23-25-14	150, 153-155, 162-165
	1		W0163	062	24		23-25-14	156-157, 166-199, 277-299
	2	UNUSED						050-099, 151-152, 275-276
	2		W0163	049	22		23-25-14	150, 153-155, 162-165
	2		W0163	049	24		23-25-14	156-157, 166-199, 277-299
	3		W0163	016	22		23-11-11	ALL
	4		W0163	013	24		23-11-11	ALL
	5		W0163	017	24		23-11-11	ALL
	6		W0163	014	24		23-11-11	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9		W0163	201R	24		23-11-11	ALL
	10		W0163	201B	24		23-11-11	ALL
	11		W0163	201Z			23-11-11	ALL
	12	UNUSED						050-099, 151-152, 275-276
	12		W0163	050	22		23-25-14	150, 153-155, 162-165
	12		W0163	050	24		23-25-14	156-157, 166-199, 277-299
	DED		W0163	016Z			23-11-11	ALL
D04654J		AL1003/ /		RCPT-				ALL
	1		W0628	210R	22		32-61-11	ALL
	2		W0628	210B	22		32-61-11	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W0628	026	16		33-31-11	ALL
	6		W0628	027	16		33-31-11	ALL
	7		W0628	028	20		33-31-11	ALL
	8		W0628	029	20		33-31-11	ALL
	9	UNUSED						ALL
	10		W0628	014	20		33-31-11	ALL
D04654P		AL1003/ /		PLUG-				ALL
	1		W0930	201R	18		32-61-11	ALL
	2		W0930	201B	18		32-61-11	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W0930	005	16		33-31-11	ALL
	6		W0930	006	16		33-31-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04600

Page 56

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04654P		AL1003/ /		PLUG- (continued)				ALL
	7		W0930	007	20		33-31-11	ALL
	8		W0930	008	20		33-31-11	ALL
	9	UNUSED						ALL
	10		W0930	010	20		33-31-11	ALL
D04656J		AE0317/ /		RCPT-E1-1				ALL
	1	UNUSED						ALL
	2		W0506	046	24		32-42-12	ALL
	3		W0506	047	24		32-42-12	ALL
	4		W0506	048	24		32-42-12	ALL
	5		W0506	049	24		32-42-12	ALL
	6		W0506	050	24		32-42-12	ALL
	7	UNUSED						ALL
	8		W0506	052	24		32-42-12	ALL
	9		W0506	053	24		32-42-12	ALL
	10		W0506	054	24		32-42-12	ALL
	11		W0506	055	24		32-42-12	ALL
	12		W0506	056	24		32-42-12	ALL
	13		W0506	057	24		32-42-12	ALL
	14		W0506	014	24		32-42-11	ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18		W0506	058	24		32-42-12	ALL
	19		W0506	059	24		32-42-12	ALL
	20		W0506	060	24		32-42-12	ALL
	21		W0506	061	24		32-42-12	ALL
	22	UNUSED						ALL
	23		W0506	062	24		32-42-12	ALL
	24		W0506	063	24		32-42-12	ALL
	25		W0506	211Z			32-42-11	ALL
	26		W0506	211R	24		32-42-11	ALL
	27		W0506	211B	24		32-42-11	ALL
	28		W0506	613	24		32-42-11	ALL
	29		W0506	051	24		32-42-12	ALL
	30		W0506	082	20		SPARE	ALL
	31		W0506	083	20		SPARE	ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D04600

Page 57

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04656J		AE0317/ /		RCPT-E1-1 (continued)				ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
D04656P		AE0317/ /		PLUG-E1-1				ALL
	1	UNUSED						ALL
	2		W1084	039	24		32-42-12	ALL
	3		W1084	040	24		32-42-12	ALL
	4		W1084	046	24		32-42-12	ALL
	5		W1084	082	24		32-42-12	ALL
	6		W1084	043	24		32-42-12	ALL
	7	UNUSED						ALL
	8		W1084	047	24		32-42-12	ALL
	9		W1084	048	24		32-42-12	ALL
	10		W1084	049	24		32-42-12	ALL
	11		W1084	050	24		32-42-12	ALL
	12		W1084	051	24		32-42-12	ALL
	13		W1084	052	24		32-42-12	ALL
	14		W1084	002	24		32-42-11	ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18		W1084	053	24		32-42-12	ALL
	19		W1084	054	24		32-42-12	ALL
	20		W1084	055	24		32-42-12	ALL
	21		W1084	056	24		32-42-12	ALL
	22	UNUSED						ALL
	23		W1084	057	24		32-42-12	ALL
	24		W1084	058	24		32-42-12	ALL
	25		W1084	213Z			32-42-11	ALL
	26		W1084	213R	24		32-42-11	ALL
	27		W1084	213B	24		32-42-11	ALL
	28		W1084	080	24		32-42-11	ALL
	29		W1084	087	24		32-42-12	ALL
	30	UNUSED						ALL
	31	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D04600

Page 58

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04656P		AE0317/ /		PLUG-E1-1 (continued)				ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
D04657J		AE0322/ /		RCPT-E2-6				ALL
	1	UNUSED						050-099, 151-152, 275-276, 280-299
	1		W9030	903	22		23-25-14	150, 153-155, 162-165
	1		W0675	012	24		23-25-14	156-157, 166-199, 277-278
	2	UNUSED						050-099, 151-152, 275-276, 280-299
	2		W9030	902	22		23-25-14	150, 153-155, 162-165
	2		W0675	016	24		23-25-14	156-157, 166-199, 277-278
	3		W0675	003	22		23-11-21	ALL
	4		W0675	013	24		23-11-21	ALL
	5		W0675	005	24		23-11-21	ALL
	6		W0675	014	24		23-11-21	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9		W0675	201R	24		23-11-21	ALL
	10		W0675	201B	24		23-11-21	ALL
	11		W0675	201Z			23-11-21	ALL
	12	UNUSED						050-099, 151-152, 275-276, 280-299
	12		W9030	901	22		23-25-14	150, 153-155, 162-165
	12		W0675	017	24		23-25-14	156-157, 166-199, 277-278
D04657P		AE0322/ /		PLUG-E2-6				ALL
	1	UNUSED						050-099, 151-152, 275-276
	1		W0173	051	22		23-25-14	150, 153-155, 162-165
	1		W0173	051	24		23-25-14	156-157, 166-199, 277-299
	2	UNUSED						050-099, 151-152, 275-276
	2		W0173	052	22		23-25-14	150, 153-155, 162-165
	2		W0173	052	24		23-25-14	156-157, 166-199, 277-299
	3		W0173	016	22		23-11-21	ALL
	4		W0173	013	24		23-11-21	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04600

Page 59

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04657P		AE0322/ /		PLUG-E2-6 (continued)				ALL
	5		W0173	017	24		23-11-21	ALL
	6		W0173	014	24		23-11-21	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9		W0173	201R	24		23-11-21	ALL
	10		W0173	201B	24		23-11-21	ALL
	11		W0173	201Z			23-11-21	ALL
	12	UNUSED						050-099, 151-152, 275-276
	12		W0173	053	22		23-25-14	150, 153-155, 162-165
	12		W0173	053	24		23-25-14	156-157, 166-199, 277-299
	DED		W0173	016Z			23-11-21	ALL
D04658J		AE0317/ /		RCPT-E1-2				ALL
	1	UNUSED						ALL
	2		W0506	002	22		SPARE	ALL
	3		W0506	003	22		SPARE	ALL
	4	UNUSED						050-099, 150-155, 163-165, 275-276
	4		W0506	231B	24		36-23-21	156-162, 166-199, 277-299
	5	UNUSED						050-099, 150-155, 163-165, 275-276
	5		W0506	231R	24		36-23-21	156-162, 166-199, 277-299
	6	UNUSED						050-099, 150-155, 163-165, 275-276
	6		W0506	231Z			36-23-21	156-162, 166-199, 277-299
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12		W0506	623	24		32-09-21	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16		W0506	210R	24		32-09-12	ALL
	17		W0506	210B	24		32-09-12	ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24		W0506	529	24		33-24-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04600

Page 60

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04658J		AE0317/ /		RCPT-E1-2 (continued)				ALL
	25		W0506	201R	24		32-61-13	ALL
	26		W0506	201B	24		32-61-13	ALL
	27		W0506	202R	24		32-61-13	ALL
	28		W0506	202B	24		32-61-13	ALL
	29		W0506	203R	24		32-61-13	ALL
	30		W0506	203B	24		32-61-13	ALL
	31		W0506	204R	24		32-61-13	ALL
	32		W0506	204B	24		32-61-13	ALL
	33		W0506	661	24		32-09-12	ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38		W0506	084	20		SPARE	ALL
	39		W0506	085	20		SPARE	ALL
D04658P		AE0317/ /		PLUG-E1-2				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						050-099, 150-155, 163-165, 275-276
	4		W1100	286B	24		36-23-21	156-162, 166-199, 277-299
	5	UNUSED						050-099, 150-155, 163-165, 275-276
	5		W1100	286R	24		36-23-21	156-162, 166-199, 277-299
	6	UNUSED						050-099, 150-155, 163-165, 275-276
	6		W1100	286Z			36-23-21	156-162, 166-199, 277-299
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12		W1100	104	24		32-09-21	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16		W1100	261R	24		32-09-12	ALL
	17		W1100	261B	24		32-09-12	ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D04600
Page 61
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04658P		AE0317/ /		PLUG-E1-2 (continued)				ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24		W1100	022	24		33-24-11	ALL
	25		W1100	211R	24		32-61-13	ALL
	26		W1100	211B	24		32-61-13	ALL
	27		W1100	212R	24		32-61-13	ALL
	28		W1100	212B	24		32-61-13	ALL
	29		W1100	213R	24		32-61-13	ALL
	30		W1100	213B	24		32-61-13	ALL
	31		W1100	214R	24		32-61-13	ALL
	32		W1100	214B	24		32-61-13	ALL
	33		W1100	111	24		32-09-12	ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
D04662J		AE0223/ /		RCPT-				ALL
	1		W0176	92A	24		36-11-61	050-099, 150-156, 162-166, 275-276 157, 167-199, 277-299
	1	UNUSED						ALL
	2		W0176	633	24		36-11-41	ALL
	3	DK	W0176	716	18		28-22-11	ALL
	4	DK	W0176	721	18		28-22-11	ALL
	5		W0176	768	22		28-42-11	ALL
	6	UNUSED						ALL
	7		W0176	695	24		28-42-31	ALL
	8		W0176	46F	22		36-11-61	ALL
	9		W0176	01S	24		21-58-11	ALL
	10		W0176	45F	22		36-11-61	ALL
	11		W0176	47F	22		36-11-61	ALL
	12	UNUSED						ALL
	13		W0176	701	24		36-11-61	ALL
	14		W0176	702	24		36-11-61	ALL
	15		W0176	51G	24		21-58-12	ALL
	16		W0176	51H	24		21-58-12	ALL
	17		W0176	183	24		21-61-71	ALL
	18	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D04600

Page 62

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04662J		AE0223/ /		RCPT- (continued)				ALL
	19		W0176	14J	24		21-61-51	ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						050-099
	22		W0176	19A	24		21-58-16	150-199, 275-299
	23		W0176	502	24		21-58-16	ALL
	24	UNUSED						050-099
	24		W0176	19B	24		21-58-16	150-199, 275-299
	25		W0176	534	24		21-58-16	ALL
	26		W0176	15D	24		21-58-11	ALL
	27		W0176	70M	24		21-58-11	ALL
	28		W0176	74W	22		28-31-21	050-099, 155-199, 276-299
	28	UNUSED						150-154, 275
	29		W0176	08M	22		29-21-32	ALL
	30		W0176	08N	22		29-21-32	ALL
	31		W0176	04W	24		24-51-61	ALL
	32		W0176	09C	24		36-11-41	ALL
	33		W0176	09D	24		36-11-41	ALL
	34		W0176	09B	24		36-11-41	ALL
	35		W0176	92A	24		36-11-61	050-099, 150-156, 162-166, 275-276
	35	UNUSED						157, 167-199, 277-299
	36		W0176	72N	20		36-11-61	050-099, 155-156, 162-166, 275-276
	36	UNUSED						150-154, 157, 167-199, 277-299
	37		W0176	10B	24		21-45-21	ALL
	38		W0176	73H	24		21-45-22	ALL
	39	UNUSED						ALL
	40		W0176	624	24		36-11-61	ALL
	41		W0176	625	24		36-11-61	ALL
	42		W0176	626	22		36-11-61	ALL
	43		W0176	627	22		36-11-61	ALL
	44		W0176	628	24		36-11-61	ALL
	45		W0176	629	24		36-11-61	ALL
	46		W0176	630	24		36-11-61	ALL
	47		W0176	836	24		21-58-11	ALL
	48		W0176	530	24		36-11-61	ALL
	49		W0176	93G	24		36-11-61	ALL
	50		W0176	09K	24		21-45-21	050-099
	50		W0176	54P	24		21-45-21	150-199, 275-299
	51		W0176	09L	22		21-45-21	050-099, 150-156, 162-166, 275-276
	51		W0176	09L	20		21-45-21	157, 167-199, 277-299

HOOKUP LIST
D280T132

91-21-51
Section D04600
Page 63
Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04662J		AE0223/ /		RCPT- (continued)				ALL
	52		W0176	09M	22		21-45-21	050-099, 150-156, 162-166, 275-276
	52		W0176	09M	20		21-45-21	157, 167-199, 277-299
	53		W0176	71V	22		36-11-61	ALL
	54		W0176	71T	22		36-11-61	ALL
	55	UNUSED						050-099, 155-199, 275-299
	55		W0176	72N	20		36-11-61	150-154
	DED		W0176	768Z			28-42-11	ALL
	DED		W0176	51GZ			21-58-12	155-199
D04662P		AE0223/ /		PLUG-P36				ALL
	1		W0572	112	24		36-11-61	050-099, 150-156, 162-166, 275-276
	1	UNUSED						157, 167-199, 277-299
	2		W0572	136	24		36-11-41	ALL
	3		W0572	003	24		28-22-11	ALL
	4		W0572	004	24		28-22-11	ALL
	5		W0572	005	22		28-42-11	ALL
	6	UNUSED						ALL
	7		W0572	149	24		28-42-31	ALL
	8		W0572	694	22		36-11-61	ALL
	9		W0572	135	24		21-58-11	ALL
	10		W0572	693	22		36-11-61	ALL
	11		W0572	692	22		36-11-61	ALL
	12	UNUSED						050-099, 150-199
	12		W0572	581	24		SPARE	275-299
	13		W0572	583	24		36-11-61	ALL
	14		W0572	584	24		36-11-61	ALL
	15		W0572	072	24		21-58-12	ALL
	16		W0572	044	24		21-58-12	ALL
	17		W0572	040	20		21-61-71	ALL
	18	UNUSED						050-099, 155-199, 276-299
	18		W0572	041	20		SPARE	150-154, 275
	19		W0572	042	20		21-61-51	ALL
	20		W0572	043	20		SPARE	050-099, 150-155, 162-165
	20	UNUSED						156-157, 166-199, 275-299
	21	UNUSED						ALL
	22		W0572	592	24		SPARE	050-099
	22		W0572	592	24		21-58-16	150-199, 275-299
	23		W0572	593	24		21-26-11	ALL
	24		W0572	594	24		SPARE	050-099
	24		W0572	594	24		21-58-16	150-199, 275-299

HOOKUP LIST

D280T132

91-21-51

Section D04600

Page 64

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04662P		AE0223/ /		PLUG-P36 (continued)				ALL
	25		W0572	595	24		21-58-16	ALL
	26		W0572	637	24		21-58-11	ALL
	27		W0572	638	24		21-58-11	ALL
	28		W0572	569	22		28-31-21	050-099, 155-199, 276-299
	28	UNUSED						150-154, 275
	29		W0572	602	22		29-21-32	ALL
	30		W0572	603	22		29-21-32	ALL
	31		W0572	514	24		24-51-61	ALL
	32		W0572	599	24		36-11-41	ALL
	33		W0572	600	24		36-11-41	ALL
	34		W0572	598	24		36-11-41	ALL
	35		W0572	628	24		36-11-61	050-099, 150-156, 162-166, 275-276
	35	UNUSED						157, 167-199, 277-299
	36	DL	W0572	666	18		SPARE	050-099, 155, 162-165, 276
	36	UNUSED						150-154, 156-157, 166-199, 275, 277-299
	37		W0572	607	24		21-45-21	ALL
	38		W0572	660	24		21-45-22	ALL
	39	UNUSED						ALL
	40		W0572	115	24		36-11-61	ALL
	41		W0572	116	24		36-11-61	ALL
	42	DL	W0572	114	18		36-11-61	050-099, 155-199, 275-299
	42	DK	W0572	114	18		36-11-61	150-154
	43	DL	W0572	118	18		36-11-61	050-099, 150-156, 162-166, 275-276
	43	DL	W0572	127	18		36-11-61	157, 167-199, 277-299
	44		W0572	119	24		36-11-61	ALL
	45		W0572	120	24		36-11-61	ALL
	46		W0572	121	24		36-11-61	ALL
	47		W0572	070	24		21-58-11	ALL
	48		W0572	123	24		36-11-61	ALL
	49		W0572	128	24		36-11-61	ALL
	50		W0572	604	24		21-45-21	ALL
	51		W0572	605	22		21-45-21	050-099, 150-156, 162-166, 275-276
	51		W0572	605	20		21-45-21	157, 167-199, 277-299
	52		W0572	606	22		21-45-21	050-099, 150-156, 162-166, 275-276
	52		W0572	606	20		21-45-21	157, 167-199, 277-299
	53		W0572	556	22		36-11-61	ALL
	54		W0572	557	22		36-11-61	ALL
	55	FL	W0572	802	16		SPARE	ALL
	CAP	Y	W0572	169	18		SPARE	050-099, 150-156, 162-166, 275-276
	CAP	Y	W0572	043	20		SPARE	156-157, 166-199

HOOKUP LIST

D280T132

91-21-51

Section D04600

Page 65

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04662P		AE0223/ /		PLUG-P36 (continued)				ALL
	CAP	Y	W0572	666	18		SPARE	156-157, 166-199, 277-299
	CAP	Y	W0572	580	24		SPARE	275-299
	DED		W0572	072Z			21-58-12	155-199
D04667J		AE0320/ /		RCPT-E2-3				ALL
	1		W0473	022	24		34-61-24	ALL
	2		W0473	023	24		34-53-21	ALL
	3		W0473	054	24		31-51-21	ALL
	4		W0473	024	22		31-31-11	ALL
	5		W0473	025	22		31-31-11	ALL
	6		W0473	006	24		SPARE	ALL
	7		W0473	007	24		SPARE	ALL
	8		W0473	203B	24		31-31-12	ALL
	9		W0473	203R	24		31-31-12	ALL
	10		W0473	037	24		31-31-12	ALL
	11		W0473	038	24		31-31-12	ALL
	12		W0473	018	22		31-31-11	ALL
	13		W0473	009	22		34-12-21	ALL
	14		W0473	010	22		34-12-21	ALL
	15		W0473	011	22		34-12-21	ALL
	16		W0473	012	24		34-12-22	ALL
	17		W0473	013	24		34-12-22	ALL
	18		W0473	014	24		SPARE	ALL
	19		W0473	015	24		34-12-22	ALL
	20		W0473	016	24		34-12-22	ALL
	21	UNUSED						ALL
	22		W0473	055	24		31-51-33	ALL
	23	UNUSED						ALL
	24		W0473	210R	24		32-42-11	ALL
	25		W0473	210B	24		32-42-11	ALL
	26		W0473	210Z			32-42-11	ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29		W0473	008	24		32-42-11	ALL
	30		W0473	050	24		31-31-11	ALL
	31		W0473	051	24		31-31-11	ALL
	32		W0473	003	22		SPARE	ALL
	33		W0473	230R	24		31-35-15	050-099, 150-199, 275-276, 278-299
	33		W0768	294R	24		31-35-15	277
	34		W0473	230B	24		31-35-15	050-099, 150-199, 275-276, 278-299

HOOKUP LIST

D280T132

91-21-51

Section D04600

Page 66

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04667J		AE0320/ /		RCPT-E2-3 (continued)				ALL
	34		W0768	294B	24		31-35-15	277
	35		W0473	230Z			31-35-15	050-099, 150-199, 275-276, 278-299
	35		W0768	FRS			31-35-15	277
	36		W0473	203Z			31-31-12	ALL
	37		W0473	040	24		34-55-21	ALL
	38	UNUSED						050-099, 150-199
	38		W0473	904R	24		34-53-21	275-299
	39	UNUSED						050-099, 150-199
	39		W0473	904B	24		34-53-21	275-299
	40	UNUSED						050-099, 150-199
	40		W0473	904Z			34-53-21	275-299
	41		W0473	215Z			27-32-21	ALL
	42		W0473	215R	24		27-32-21	ALL
	43		W0473	215B	24		27-32-21	ALL
	44		W0473	039	22		SPARE	ALL
	45		W0473	043	24		SPARE	ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48		W0473	061	20		27-32-31	ALL
	49		W0473	033	24		SPARE	ALL
	50	UNUSED						050-099, 275-299
	50		W0473	220R	24		SPARE	150-199
	51	UNUSED						050-099, 275-299
	51		W0473	220B	24		SPARE	150-199
	52	UNUSED						050-099, 275-299
	52		W0473	220Z			SPARE	150-199
	53	UNUSED						050-099, 275-299
	53		W0473	221R	24		SPARE	150-199
	54	UNUSED						050-099, 275-299
	54		W0473	221B	24		SPARE	150-199
	55	UNUSED						050-099, 275-299
	55		W0473	221Z			SPARE	150-199
	DED		W0473	061Z			27-32-31	ALL
			W0768	294Z			31-35-15	277
			W0768	FRS			31-35-15	277
D04667P		AE0320/ /		PLUG-E2-3				ALL
	1		W0145	013	24		34-61-24	ALL
	2		W0145	077	24		34-53-21	ALL
	3		W0145	064	24		31-51-21	ALL

HOOKUP LIST
D280T132

91-21-51
Section D04600
Page 67
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04667P		AE0320/ /		PLUG-E2-3 (continued)				ALL
	4		W0145	106	22		31-31-11	ALL
	5		W0145	107	22		31-31-11	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8		W0145	516B	24		31-31-12	ALL
	9		W0145	516R	24		31-31-12	ALL
	10		W0145	104	24		31-31-12	ALL
	11		W0145	105	24		31-31-12	ALL
	12		W0145	102	22		31-31-11	ALL
	13		W0145	834	22		34-12-21	ALL
	14		W0145	833	22		34-12-21	ALL
	15		W0145	835	22		34-12-21	ALL
	16		W0145	813	24		34-12-22	ALL
	17		W0145	812	24		34-12-22	ALL
	18	UNUSED						ALL
	19		W0145	818	24		34-12-22	ALL
	20		W0145	821	24		34-12-22	ALL
	21	UNUSED						ALL
	22		W0145	065	24		31-51-33	ALL
	23	UNUSED						ALL
	24		W0145	273R	24		32-42-11	ALL
	25		W0145	273B	24		32-42-11	ALL
	26		W0145	273Z			32-42-11	ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29		W0145	154	24		32-42-11	ALL
	30		W0145	118	24		31-31-11	ALL
	31		W0145	117	24		31-31-11	ALL
	32	UNUSED						ALL
	33		W0145	696R	24		31-35-15	050-099, 150-199, 275-276, 278-299
	33		W0135	253R	24		31-35-15	277
	34		W0145	696B	24		31-35-15	050-099, 150-199, 275-276, 278-299
	34		W0135	253B	24		31-35-15	277
	35		W0145	696Z			31-35-15	050-099, 150-199, 275-276, 278-299
	35		W0135	253Z			31-35-15	277
	36		W0145	516Z			31-31-12	ALL
	37		W0145	090	24		34-55-21	ALL
	38	UNUSED						050-099, 150-199
	38		W0145	904R	24		34-53-21	275-299
	39	UNUSED						050-099, 150-199

HOOKUP LIST

D280T132

91-21-51

Section D04600

Page 68

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04667P		AE0320/ /		PLUG-E2-3 (continued)				ALL
	39		W0145	904B	24		34-53-21	275-299
	40	UNUSED						050-099, 150-199
	40		W0145	904Z			34-53-21	275-299
	41		W0145	212Z			27-32-21	ALL
	42		W0145	212R	24		27-32-21	ALL
	43		W0145	212B	24		27-32-21	ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48		W0145	630	20		27-32-31	ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
	DED		W0145	105Z			31-31-12	ALL
	DED		W0145	106Z			31-31-11	ALL
	DED		W0145	107Z			31-31-11	ALL
	DED		W0145	117Z			31-31-11	ALL
	DED		W0145	630Z			27-32-31	ALL
	DED		W0145	833Z			34-12-21	ALL
	DED		W0145	834Z			34-12-21	ALL
D04669J		AP0802E/ /		RCPT-MID CABIN PARTITION				050-099
D04669J		AP0901/ /		RCPT				150-199
D04669J		AP0703/ /		RCPT-MID CABIN PARTITION				275-299
	1		W0639	401R	24		23-42-11	ALL
	2		W0639	401Z			23-42-11	ALL
	3		W0639	401B	24		23-42-11	ALL
	4		W0639	401Y	24		23-42-11	ALL
	5		W0639	401G	24		23-42-11	ALL
D04669P		AP0802E/ /		PLUG-				050-099
D04669P		AP0901/ /		PLUG-				150-199
D04669P		AP0703/ /		PLUG-				275-299
	1		W0041	401R	24		23-42-11	ALL
	2		W0041	401Z			23-42-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04600

Page 69

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04669P		AP0802E / /		PLUG- (continued)				050-099
D04669P		AP0901 / /		PLUG- (continued)				150-199
D04669P		AP0703 / /		PLUG- (continued)				275-299
	3		W0041	401B	24		23-42-11	ALL
	4		W0041	401Y	24		23-42-11	ALL
	5		W0041	401G	24		23-42-11	ALL
D04672J		AE0209 / /		RCPT-				ALL
	1	UNUSED						050-099
	1		W0176	157	24		21-51-11	150-199, 275-299
	2		W0176	205R	22		32-61-13	ALL
	3		W0176	205B	22		32-61-13	ALL
	4		W0176	206R	22		32-61-13	ALL
	5		W0176	206B	22		32-61-13	ALL
	6		W0176	207R	22		32-61-13	ALL
	7		W0176	207B	22		32-61-13	ALL
	8		W0176	772	24		36-23-11	ALL
	9		W0176	169	24		21-58-13	ALL
	10		W0176	223R	24		32-09-11	ALL
	11		W0176	223B	24		32-09-11	ALL
	12		W0176	208R	22		32-61-13	ALL
	13		W0176	208B	22		32-61-13	ALL
	14	UNUSED						050-099
	14		W0176	158	24		21-51-11	150-199, 275-299
	15		W0176	41F	22		21-66-21	050-099, 162-199
	15	UNUSED						150-157, 275-299
	16		W0176	011	24		32-42-12	ALL
	17		W0176	012	24		32-42-12	ALL
	18		W0176	02H	22		28-22-12	ALL
	19		W0176	102	24		32-09-11	ALL
	20	FL	W0176	857	16		33-42-11	ALL
	21		W0176	01M	24		21-51-11	ALL
	22		W0176	725	20		33-42-21	050-099
	22	FL	W0176	725	18		33-42-21	150-199
	22	DL	W0176	725	18		33-42-21	275-299
	23		W0176	797	24		32-09-11	ALL
	24		W0176	528	24		32-09-11	ALL
	25		W0176	04G	24		32-09-11	ALL
	26		W0176	622	24		21-58-11	ALL
	27		W0176	024R	22		26-18-11	ALL
	28		W0176	806R	22		26-18-12	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04600

Page 70

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04672J		AE0209/ /		RCPT- (continued)				ALL
	29		W0176	807R	22		26-18-12	ALL
	30		W0176	35E	22		21-66-31	050-099, 150, 152-199
	30	UNUSED						151, 275-299
	31		W0176	124R	22		26-18-11	ALL
	32		W0176	522	24		21-25-11	ALL
	33		W0176	523	22		21-25-11	ALL
	34		W0176	20D	24		21-58-16	ALL
	35		W0176	137R	22		26-18-31	ALL
	36		W0176	524	24		21-25-11	ALL
	37		W0176	525	24		21-25-11	ALL
	38		W0176	771	24		21-25-11	ALL
	39	UNUSED						050-099, 150-199, 275-276
	39	DL	W0176	01U	18		25-31-31	277-299
	40		W0176	01J	24		21-51-11	ALL
	41	UNUSED						ALL
	42		W0176	728	20		33-42-21	050-099
	42	DL	W0176	728	18		33-42-21	150-199, 275-299
	43		W0176	10E	24		21-25-11	ALL
	44		W0176	215B	24		21-51-11	ALL
	45		W0176	215R	24		21-51-11	ALL
	46		W0176	871	22		21-51-11	ALL
	47		W0176	872	22		21-51-11	ALL
	48	FL	W0176	829	16		33-42-11	ALL
	49		W0176	071	24		33-16-14	ALL
	50		W0176	878	24		33-16-14	ALL
	51	UNUSED						ALL
	52		W0176	558	24		21-51-11	ALL
	53		W0176	557	24		21-51-11	ALL
	54		W0176	556	24		21-51-11	ALL
	55		W0176	555	24		21-51-11	ALL
	56		W0176	616	22		29-32-11	ALL
	57		W0176	554	24		21-51-11	ALL
	58		W0176	002	24		21-53-11	ALL
	59		W0176	001	24		21-53-11	ALL
	60		W0176	098	20		33-42-11	ALL
	61		W0176	879	20		25-31-21	050-099, 150-199
	61	DL	W0176	879	18		25-31-21	275-299
	DED		W0176	528Z			32-09-11	ALL
	DED		W0176	797Z			32-09-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04600

Page 71

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04672P		AE0209/ /		PLUG-P36				ALL
	1	UNUSED						050-099
	1		W0510	009	24		21-51-11	150-199, 275-299
	2		W0510	201R	24		32-61-13	ALL
	3		W0510	201B	24		32-61-13	ALL
	4		W0510	202R	24		32-61-13	ALL
	5		W0510	202B	24		32-61-13	ALL
	6		W0510	203R	24		32-61-13	ALL
	7		W0510	203B	24		32-61-13	ALL
	8		W0510	175	24		36-23-11	ALL
	9		W0510	186	24		21-58-13	ALL
	10		W0510	206R	24		32-09-11	ALL
	11		W0510	206B	24		32-09-11	ALL
	12		W0510	204R	24		32-61-13	ALL
	13		W0510	204B	24		32-61-13	ALL
	14	UNUSED						050-099
	14		W0510	008	24		21-51-11	150-199, 275-299
	15		W0510	554	22		21-66-21	050-099, 162-199
	15	UNUSED						150-157, 275-299
	16		W0510	061	24		32-42-12	ALL
	17		W0510	062	24		32-42-12	ALL
	18		W0510	063	24		28-22-12	ALL
	19		W0510	019	24		32-09-11	ALL
	20	FM	W0510	701	16		33-42-11	ALL
	21		W0510	707	24		21-51-11	ALL
	22		W0510	703	20		33-42-21	050-099
	22	DK	W0510	703	18		33-42-21	150-199, 275-299
	23		W0510	023	24		32-09-11	ALL
	24		W0510	024	24		32-09-11	ALL
	25		W0510	025	24		32-09-11	ALL
	26		W0510	705	24		21-58-11	ALL
	27		W0510	095R	22		26-18-11	ALL
	28		W0510	501R	22		26-18-12	ALL
	29		W0510	500R	22		26-18-12	ALL
	30		W0510	556	22		21-66-31	050-099, 150, 152-199
	30	UNUSED						151, 275-299
	31		W0510	188R	22		26-18-11	ALL
	32		W0510	067	24		21-25-11	ALL
	33		W0510	068	22		21-25-11	ALL
	34		W0510	535	24		21-58-16	ALL
	35		W0510	035R	22		26-18-31	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04600

Page 72

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04672P		AE0209/ /		PLUG-P36 (continued)				ALL
	36		W0510	070	24		21-25-11	ALL
	37		W0510	071	24		21-25-11	ALL
	38		W0510	072	24		21-25-11	ALL
	39	UNUSED						050-099, 150-199, 275-276
	39	DK	W0510	716	18		25-31-31	277-299
	40		W0510	708	24		21-51-11	ALL
	41		W0510	082	22		SPARE	ALL
	42		W0510	704	20		33-42-21	050-099
	42	DK	W0510	704	18		33-42-21	150-199, 275-299
	43		W0510	073	24		21-25-11	ALL
	44		W0510	208B	24		21-51-11	ALL
	45		W0510	208R	24		21-51-11	ALL
	46		W0510	119	22		21-51-11	ALL
	47		W0510	120	22		21-51-11	ALL
	48	FM	W0510	702	16		33-42-11	ALL
	49		W0510	110	24		33-16-14	ALL
	50		W0510	709	24		33-16-14	ALL
	51	UNUSED						ALL
	52		W0510	127	24		21-51-11	ALL
	53		W0510	128	24		21-51-11	ALL
	54		W0510	129	24		21-51-11	ALL
	55		W0510	130	24		21-51-11	ALL
	56		W0510	155	22		29-32-11	ALL
	57		W0510	131	24		21-51-11	ALL
	58		W0510	140	24		21-53-11	ALL
	59		W0510	139	24		21-53-11	ALL
	60		W0510	144	20		33-42-11	ALL
	61		W0510	711	20		25-31-21	050-099, 150-199
	61	DK	W0510	711	18		25-31-21	275-299
	CAP	Y	W0510	034R	22		SPARE	050-099
	CAP	Y	W0510	093	20		SPARE	150-199, 275-299
	DED		W0510	023Z			32-09-11	ALL
	DED		W0510	024Z			32-09-11	ALL
D04674J		AE0305/ /		RCPT-E1-1				ALL
	1		W0510	061	24		32-42-12	ALL
	2		W0510	062	24		32-42-12	ALL
	3		W0510	185	24		32-42-11	ALL
	4		W0510	196	24		32-42-12	ALL
	5		W0510	197	24		32-42-12	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04600

Page 73

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04674J		AE0305/ /		RCPT-E1-1 (continued)				ALL
	6		W0510	198	24		32-42-12	ALL
	7		W0510	199	24		32-42-12	ALL
	8		W0510	027	24		32-42-11	ALL
	9		W0510	090	22		SPARE	ALL
	10		W0510	209B	24		SPARE	ALL
	11		W0510	209R	24		SPARE	ALL
	12	UNUSED						ALL
	13	UNUSED						150-199, 275-299
	14	UNUSED						150-199, 275-299
	15	UNUSED						150-199, 275-299
D04674P		AE0305/ /		PLUG-E1-1				ALL
	1		W1084	060	24		32-42-12	ALL
	2		W1084	061	24		32-42-12	ALL
	3		W1084	075	24		32-42-11	ALL
	4		W1084	044	24		32-42-12	ALL
	5		W1084	042	24		32-42-12	ALL
	6		W1084	041	24		32-42-12	ALL
	7		W1084	045	24		32-42-12	ALL
	8		W1084	001	24		32-42-11	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						150-199, 275-299
	14	UNUSED						150-199, 275-299
	15	UNUSED						150-199, 275-299
D04675J		AL1002/ /		RCPT-R WW FWD OUTBD				ALL
	1		W1725	201R	20		22-11-31	ALL
	2		W1725	201B	20		22-11-31	ALL
	3		W1725	202R	20		22-13-31	ALL
	4		W1725	202B	20		22-13-31	ALL
	5		W1725	301R	20		22-13-31	ALL
	6		W1725	301B	20		22-13-31	ALL
	7		W1725	301Y	20		22-13-31	ALL
	8		W1725	302R	20		22-13-31	ALL
	9		W1725	302B	20		22-13-31	ALL
	10		W1725	302Y	20		22-13-31	ALL
	11		W1725	001	20		22-11-32	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04600

Page 74

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04675J		AL1002/ /		RCPT-R WW FWD OUTBD (continued)				ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14		W1725	002	20		22-11-32	ALL
D04675P		AL1002/ /		PLUG-R WW FWD OUTBD				ALL
	1		W1727	201R	20		22-11-31	ALL
	2		W1727	201B	20		22-11-31	ALL
	3		W1727	204R	20		22-13-31	ALL
	4		W1727	204B	20		22-13-31	ALL
	5		W1727	301R	20		22-13-31	ALL
	6		W1727	301B	20		22-13-31	ALL
	7		W1727	301Y	20		22-13-31	ALL
	8		W1727	302R	20		22-13-31	ALL
	9		W1727	302B	20		22-13-31	ALL
	10		W1727	302Y	20		22-13-31	ALL
	11		W1727	002	20		22-11-32	ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14		W1727	004	20		22-11-32	ALL
D04676J		AE0305/ /		RCPT-E1-2				ALL
	1		W0510	183	24		24-22-11	ALL
	2		W0510	002	24		32-61-14	ALL
	3		W0510	003	24		32-61-14	ALL
	4		W0510	555	22		21-66-21	050-099, 162-199
	4	UNUSED						150-157, 275-276
	4	DK	W0510	716	18		25-31-31	277-299
	5		W0510	550	22		21-66-11	050-099, 162-199
	5	UNUSED						150-157, 275-299
	6		W0510	552	22		21-66-11	050-099, 162-199
	6	UNUSED						150-157, 275-299
	7		W0510	553	22		21-66-11	050-099, 162-199
	7	UNUSED						150-157, 275-299
	8		W0510	557	22		21-66-41	050-099, 150, 152-199
	8	UNUSED						151, 275-299
	9	UNUSED						ALL
	10		W0510	206R	24		32-09-11	ALL
	11		W0510	206B	24		32-09-11	ALL
	12	UNUSED						ALL
	13		W0510	709	24		33-16-14	ALL

HOOKUP LIST
D280T132

91-21-51
Section D04600
Page 75
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04676J		AE0305/ /		RCPT-E1-2 (continued)				ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19		W0510	088	24		32-61-14	ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23		W0510	023	24		32-09-11	ALL
	24		W0510	024	24		32-09-11	ALL
	25		W0510	025	24		32-09-11	ALL
	26	UNUSED						ALL
	27		W0510	201R	24		32-61-13	ALL
	28		W0510	201B	24		32-61-13	ALL
	29		W0510	202R	24		32-61-13	ALL
	30		W0510	202B	24		32-61-13	ALL
	31		W0510	203R	24		32-61-13	ALL
	32		W0510	203B	24		32-61-13	ALL
	33		W0510	204R	24		32-61-13	ALL
	34		W0510	204B	24		32-61-13	ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38		W0510	084	22		52-71-11	ALL
	39		W0510	085	22		52-71-12	ALL
	40		W0510	086	22		52-71-13	ALL
	41		W0510	087	22		52-71-14	ALL
	42		W0510	713	24		32-09-11	ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47		W0510	714	24		32-09-11	ALL
	48		W0510	715	24		32-09-11	ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53		W0510	144	20		33-42-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04600

Page 76

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04676J		AE0305/ /		RCPT-E1-2 (continued)				ALL
	54		W0510	711	20		25-31-21	050-099, 150-199
	54	DK	W0510	711	18		25-31-21	275-299
	55	UNUSED						ALL
	DED		W0510	023Z			32-09-11	ALL
	DED		W0510	024Z			32-09-11	ALL
	DED		W0510	713Z			32-09-11	ALL
D04676P		AE0305/ /		PLUG-E1-2				ALL
	1		W1092	114	24		24-22-11	ALL
	2		W1092	739	24		32-61-14	ALL
	3		W1092	740	24		32-61-14	ALL
	4		W1092	692	22		21-66-21	050-099, 162-199
	4	UNUSED						150-157, 275-276
	4	DL	W1092	736	18		25-31-31	277-299
	5		W1092	687	22		21-66-11	050-099, 162-199
	5	UNUSED						150-157, 275-299
	6		W1092	688	22		21-66-11	050-099, 162-199
	6	UNUSED						150-157, 275-299
	7		W1092	689	22		21-66-11	050-099, 162-199
	7	UNUSED						150-157, 275-299
	8		W1092	694	22		21-66-41	050-099, 150, 152-199
	8	UNUSED						151, 275-299
	9	UNUSED						ALL
	10		W1092	263R	24		32-09-11	ALL
	11		W1092	263B	24		32-09-11	ALL
	12	UNUSED						ALL
	13		W1092	164	24		33-16-14	ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19		W1092	741	24		32-61-14	ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23		W1092	567	24		32-09-11	ALL
	24		W1092	568	24		32-09-11	ALL
	25		W1092	569	24		32-09-11	ALL
	26	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D04600

Page 77

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04676P		AE0305/ /		PLUG-E1-2 (continued)				ALL
	27		W1092	253R	24		32-61-13	ALL
	28		W1092	253B	24		32-61-13	ALL
	29		W1092	254R	24		32-61-13	ALL
	30		W1092	254B	24		32-61-13	ALL
	31		W1092	255R	24		32-61-13	ALL
	32		W1092	255B	24		32-61-13	ALL
	33		W1092	256R	24		32-61-13	ALL
	34		W1092	256B	24		32-61-13	ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38		W1092	591	22		52-71-11	ALL
	39		W1092	592	22		52-71-12	ALL
	40		W1092	593	22		52-71-13	ALL
	41		W1092	504	22		52-71-14	ALL
	42		W1092	589	24		32-09-11	ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47		W1092	588	24		32-09-11	ALL
	48		W1092	587	24		32-09-11	ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53		W1092	090	22		33-42-11	ALL
	54		W1092	586	20		25-31-21	050-099
	54	DL	W1092	586	20		25-31-21	150-199
	54	DL	W1092	586	18		25-31-21	275-299
	55	UNUSED						ALL
	DED		W1092	567Z			32-09-11	ALL
	DED		W1092	568Z			32-09-11	ALL
	DED		W1092	589Z			32-09-11	ALL
	DED		W1092	739Z			32-61-14	ALL
	DED		W1092	740Z			32-61-14	ALL
	DED		W1092	741Z			32-61-14	ALL
D04677J		AL1003/ /		RCPT-L S FWD INBD PNL				ALL
	1		W1729	201R	20		22-11-21	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04600

Page 78

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04677J		AL1003/ /		RCPT-L S FWD INBD PNL (continued)				ALL
	2		W1729	201B	20		22-11-21	ALL
	3		W1729	202R	20		22-13-21	ALL
	4		W1729	202B	20		22-13-21	ALL
	5		W1729	301R	20		22-13-21	ALL
	6		W1729	301B	20		22-13-21	ALL
	7		W1729	301Y	20		22-13-21	ALL
	8		W1729	302R	20		22-13-21	ALL
	9		W1729	302B	20		22-13-21	ALL
	10		W1729	302Y	20		22-13-21	ALL
	11		W1729	001	20		22-11-22	ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14		W1729	002	20		22-11-22	ALL
D04677P		AL1003/ /		PLUG-L WW FWD INBD				ALL
	1		W1731	201R	20		22-11-21	ALL
	2		W1731	201B	20		22-11-21	ALL
	3		W1731	204R	20		22-13-21	ALL
	4		W1731	204B	20		22-13-21	ALL
	5		W1731	301R	20		22-13-21	ALL
	6		W1731	301B	20		22-13-21	ALL
	7		W1731	301Y	20		22-13-21	ALL
	8		W1731	302R	20		22-13-21	ALL
	9		W1731	302B	20		22-13-21	ALL
	10		W1731	302Y	20		22-13-21	ALL
	11		W1731	002	20		22-11-22	ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14		W1731	004	20		22-11-22	ALL
D04679J		AE0320/ /		RECP-E2-3				ALL
	1		W0453	207R	24		27-32-21	ALL
	2		W0453	207B	24		27-32-21	ALL
	3		W0453	207Z			27-32-21	ALL
	4		W0453	209R	24		27-32-21	ALL
	5		W0453	209B	24		27-32-21	ALL
	6		W0453	209Z			27-32-21	ALL
	7	UNUSED						050-099, 150-199
	7		W0453	903R	24		34-53-21	275-299
	8	UNUSED						050-099, 150-199

HOOKUP LIST
D280T132

91-21-51
Section D04600
Page 79
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04679J		AE0320/ /		RECP-E2-3 (continued)				ALL
	8		W0453	903B	24		34-53-21	275-299
	9	UNUSED						050-099, 150-199
	9		W0453	903Z			34-53-21	275-299
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D04679P		AE0320/ /		PLUG-E2-3				ALL
	1		W0145	204R	24		27-32-21	ALL
	2		W0145	204B	24		27-32-21	ALL
	3		W0145	204Z			27-32-21	ALL
	4		W0145	212R	24		27-32-21	ALL
	5		W0145	212B	24		27-32-21	ALL
	6		W0145	212Z			27-32-21	ALL
	7	UNUSED						050-099, 150-199
	7		W0145	913R	24		34-53-21	275-299
	8	UNUSED						050-099, 150-199
	8		W0145	913B	24		34-53-21	275-299
	9	UNUSED						050-099, 150-199
	9		W0145	913Z			34-53-21	275-299
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D04681J D04681J		AE0306/ / 355/125/R 13		RECP-E2-2 RECP-E2-2				050-099, 150-154, 275-299 155-199
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						050-099, 150-152, 155-199, 275-299
	8		W1633	021	22		SPARE	153-154
	9		W1633	227R	24		34-45-12	050-099, 150-199, 277-299
	9		W1633	227R	24		SPARE	275-276
	10		W1633	227B	24		34-45-12	050-099, 150-199, 277-299
	10		W1633	227B	24		SPARE	275-276
	11		W1633	227Z			34-45-12	050-099, 150-199, 277-299

HOOKUP LIST

D280T132

91-21-51

Section D04600

Page 80

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04681J		AE0306/ /		RECP-E2-2 (continued)				050-099, 150-154, 275-299
D04681J		355/125/R 13		RECP-E2-2 (continued)				155-199
	11		W1633	227Z			SPARE	275-276
	12		W1633	228R	24		34-45-12	050-099, 150-199, 277-299
	12	UNUSED						275-276
	13		W1633	228B	24		34-45-12	050-099, 150-199, 277-299
	13	UNUSED						275-276
	14		W1633	228Z			34-45-12	050-099, 150-199, 277-299
	14	UNUSED						275-276
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D04681P		AE0306/ /		PLUG-E2-2				050-099, 150-152
D04681P		AE0306/ /		PLUG				153-199
D04681P		AE0306/ /		PLUG E02-2				275-299
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						050-099, 150-152, 155-199, 275-299
	8		W0133	699	22		SPARE	153-154
	9		W0133	748R	24		34-45-12	ALL
	10		W0133	748B	24		34-45-12	ALL
	11		W0133	748Z			34-45-12	ALL
	12		W0133	749R	24		34-45-12	ALL
	13		W0133	749B	24		34-45-12	ALL
	14		W0133	749Z			34-45-12	ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D04600

Page 81

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04681P		AE0306/ /		PLUG-E2-2 (continued)				050-099, 150-152
D04681P		AE0306/ /		PLUG (continued)				153-199
D04681P		AE0306/ /		PLUG E02-2 (continued)				275-299
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D04683J		AE0317/ /		RCPT-E1-3				ALL
	1	UNUSED						ALL
	2		W1615	205R	24		22-32-11	ALL
	3		W1615	205B	24		22-32-11	ALL
	4		W1615	205Z			22-32-11	ALL
	5		W1615	226R	24		34-45-14	050-099, 150-156, 162-166
	5		W1615	226R	24		SPARE	157, 167-199, 277-299
	5	UNUSED						275-276
	6		W1615	226B	24		34-45-14	050-099, 150-156, 162-166
	6		W1615	226B	24		SPARE	157, 167-199, 277-299
	6	UNUSED						275-276
	7		W1615	219B	24		31-31-12	ALL
	8		W1615	219R	24		31-31-12	ALL
	9		W1615	219Z			31-31-12	ALL
	10		W1615	209R	24		SPARE	050-099, 150-199
	10	UNUSED						275-299
	11		W1615	209B	24		SPARE	050-099, 150-199
	11	UNUSED						275-299
	12		W1615	209Z			SPARE	050-099, 150-199
	12	UNUSED						275-299
	13		W1615	206R	24		22-32-11	ALL
	14		W1615	206B	24		22-32-11	ALL
	15		W1615	206Z			22-32-11	ALL
	16		W1615	016	24		SPARE	050-099
	16		W1615	232B	24		34-12-62	150-199, 275-299
	17		W1615	017	24		SPARE	050-099
	17		W1615	232R	24		34-12-62	150-199, 275-299
	18		W1615	018	24		SPARE	050-099
	18		W1615	232Z			34-12-62	150-199, 275-299
	19		W1615	069	24		34-12-62	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04600

Page 82

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04683J		AE0317/ /		RCPT-E1-3 (continued)				ALL
	20		W1615	020	24		SPARE	ALL
	21		W1615	021	24		SPARE	ALL
	22		W1615	207R	24		22-32-11	ALL
	23		W1615	207B	24		22-32-11	ALL
	24		W1615	207Z			22-32-11	ALL
	25		W1615	208R	24		SPARE	ALL
	26		W1615	208B	24		SPARE	ALL
	27		W1615	208Z			SPARE	ALL
	28		W1615	211Z			22-33-11	ALL
	29		W1615	211R	24		22-33-11	ALL
	30		W1615	211B	24		22-33-11	ALL
	31		W1615	212Z			22-33-11	ALL
	32		W1615	212R	24		22-33-11	ALL
	33		W1615	212B	24		22-33-11	ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37		W1615	226Z			34-45-14	050-099, 150-156, 162-166
	37		W1615	226Z			SPARE	157, 167-199, 277-299
	37	UNUSED						275-276
	38		W1615	232B	24		34-12-62	050-099
	38	UNUSED						150-199, 277-299
	38		W1615	213R	24		SPARE	275-276
	39		W1615	232R	24		34-12-62	050-099
	39	UNUSED						150-199, 277-299
	39		W1615	213B	24		SPARE	275-276
	40		W1615	232Z			34-12-62	050-099
	40	UNUSED						150-199, 277-299
	40		W1615	213Z			SPARE	275-276
	41		W1615	006	24		34-45-13	050-099, 150-199, 277-299
	41	UNUSED						275-276
	CAP	Y	W1615	028	24		SPARE	050-099
	CAP	Y	W1615	029	24		SPARE	050-099
	REF	JW	W1615	001	22		SPARE	ALL
	REF	JW	W1615	002	22		SPARE	ALL
	REF	JW	W1615	003	22		SPARE	ALL
	REF	JW	W1615	019	24		SPARE	150-154, 275-276
	REF	JW	W1615	016	24		SPARE	150-199, 275-299
	REF	JW	W1615	017	24		SPARE	150-199, 275-299
	REF	JW	W1615	018	24		SPARE	150-199, 275-299

HOOKUP LIST

D280T132

91-21-51

Section D04600

Page 83

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04683P		AE0317/ /		PLUG-E1-3				ALL
	1	UNUSED						ALL
	2		W0115	656R	24		22-32-11	ALL
	3		W0115	656B	24		22-32-11	ALL
	4		W0115	656Z			22-32-11	ALL
	5		W0115	212R	24		34-45-14	050-099, 150-156, 162-166
	5	UNUSED						157, 167-199, 275-299
	6		W0115	212B	24		34-45-14	050-099, 150-156, 162-166
	6	UNUSED						157, 167-199, 275-299
	7		W0115	219B	24		31-31-12	ALL
	8		W0115	219R	24		31-31-12	ALL
	9		W0115	219Z			31-31-12	ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13		W0115	657R	24		22-32-11	ALL
	14		W0115	657B	24		22-32-11	ALL
	15		W0115	657Z			22-32-11	ALL
	16	UNUSED						050-099
	16		W0115	215B	24		34-12-62	150-199, 275-299
	17	UNUSED						050-099
	17		W0115	215R	24		34-12-62	150-199, 275-299
	18	UNUSED						050-099
	18		W0115	215Z			34-12-62	150-199, 275-299
	19		W0115	039	24		34-12-62	ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22		W0115	658R	24		22-32-11	ALL
	23		W0115	658B	24		22-32-11	ALL
	24		W0115	658Z			22-32-11	ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28		W0115	207Z			22-33-11	ALL
	29		W0115	207R	24		22-33-11	ALL
	30		W0115	207B	24		22-33-11	ALL
	31		W0115	208Z			22-33-11	ALL
	32		W0115	208R	24		22-33-11	ALL
	33		W0115	208B	24		22-33-11	ALL
	34	UNUSED						ALL
	35	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D04600

Page 84

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04683P		AE0317/ /		PLUG-E1-3 (continued)				ALL
	36	UNUSED						ALL
	37		W0115	212Z			34-45-14	050-099, 150-156, 162-166
	37	UNUSED						157, 167-199, 275-299
	38		W0115	215B	24		34-12-62	050-099
	38	UNUSED						150-199, 275-299
	39		W0115	215R	24		34-12-62	050-099
	39	UNUSED						150-199, 275-299
	40		W0115	215Z			34-12-62	050-099
	40	UNUSED						150-199, 275-299
	41		W0115	036	24		34-45-13	050-099, 150-199, 277-299
	41	UNUSED						275-276
D04695J		AE0306/ /		RCPT-E2-2				ALL
	1		W0685	010	24		34-53-11	ALL
	2		W0685	022	24		34-53-11	050-099, 150-152, 155-199, 275-299
	2	UNUSED						153-154
	3		W0685	003	22		34-53-11	ALL
	4	UNUSED						ALL
	5		W0685	024	24		34-53-11	ALL
	6		W0685	012	24		34-53-11	ALL
	7		W0685	007	24		34-53-11	ALL
	8		W0685	016	24		34-53-11	ALL
	9		W0685	009	24		34-53-11	050-099, 150-156, 162-166, 275-276
	9	UNUSED						157, 167-199, 277-299
	10		W0685	201R	24		34-53-11	ALL
	11		W0685	201B	24		34-53-11	ALL
	12		W0685	201Z			34-53-11	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15		W0685	015	24		31-51-33	ALL
	16		W0685	025	24		34-53-11	157, 167-199, 277-299
	17		W0685	026	24		SPARE	157, 167-199, 277-299
	18		W0685	027	24		SPARE	157, 167-199, 277-299
	19	UNUSED						157, 167-199, 277-299
	20	UNUSED						157, 167-199, 277-299
	21	UNUSED						157, 167-199, 277-299
	22	UNUSED						157, 167-199, 277-299
	23	UNUSED						157, 167-199, 277-299
	24	UNUSED						157, 167-199, 277-299

HOOKUP LIST

D280T132

91-21-51

Section D04600

Page 85

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04695P		AE0306/ /		PLUG-E2-2				ALL
	1		W0133	736	24		34-53-11	ALL
	2		W0133	809	24		34-53-11	050-099, 150-152, 155-199, 275-299
	2	UNUSED						153-154
	3		W0133	077	22		34-53-11	ALL
	4	UNUSED						ALL
	5		W0133	082	24		34-53-11	ALL
	6		W0133	079	24		34-53-11	ALL
	7		W0133	070	24		34-53-11	ALL
	8		W0133	081	24		34-53-11	ALL
	9		W0133	068	24		34-53-11	050-099, 150-156, 162-166, 275-276
	9	UNUSED						157, 167-199, 277-299
	10		W0133	275R	24		34-53-11	ALL
	11		W0133	275B	24		34-53-11	ALL
	12		W0133	275Z			34-53-11	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15		W0133	733	24		31-51-33	ALL
	16		W0133	842	24		34-53-11	157, 167-199, 277-299
	17	UNUSED						157, 167-199, 277-299
	18	UNUSED						157, 167-199, 277-299
	19	UNUSED						157, 167-199, 277-299
	20	UNUSED						157, 167-199, 277-299
	21	UNUSED						157, 167-199, 277-299
	22	UNUSED						157, 167-199, 277-299
	23	UNUSED						157, 167-199, 277-299
	24	UNUSED						157, 167-199, 277-299
D04697J		AE0322/ /		RCPT-ATC TRANS R				ALL
	1		W0687	001	24		31-51-33	ALL
	2		W0687	024	24		34-53-21	ALL
	3		W0687	003	22		34-53-21	ALL
	4		W0687	002	22		31-31-26	ALL
	5		W0687	005	22		34-53-13	ALL
	6		W0687	012	24		34-53-21	ALL
	7		W0687	007	24		34-53-21	ALL
	8		W0687	015	24		34-53-21	ALL
	9		W0687	009	24		34-53-21	050-099, 150-156, 162-166, 275-276
	9	UNUSED						157, 167-199, 277-299
	10		W0687	201R	24		34-53-21	ALL
	11		W0687	201B	24		34-53-21	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04600

Page 86

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04697J		AE0322/ /		RCPT-ATC TRANS R (continued)				ALL
	12		W0687	201Z			34-53-21	ALL
	13		W0687	013	24		34-53-21	050-099, 150-152, 155-199, 275-299
	14	UNUSED						050-099, 150-152, 155-199, 275-299
	15	UNUSED						050-099, 150-152, 155-199, 275-299
	16		W0687	016	24		34-53-21	157, 167-199, 277-299
	17		W0687	017	24		SPARE	157, 167-199, 277-299
	18		W0687	019	24		SPARE	157, 167-199, 277-299
	19	UNUSED						157, 167-199, 277-299
	20	UNUSED						157, 167-199, 277-299
	21	UNUSED						157, 167-199, 277-299
	22	UNUSED						157, 167-199, 277-299
	23	UNUSED						157, 167-199, 277-299
	24	UNUSED						157, 167-199, 277-299
D04697P		AE0322/ /		PLUG-E2-3				ALL
	1		W0145	150	24		31-51-33	ALL
	2		W0145	077	24		34-53-21	ALL
	3		W0145	059	22		34-53-21	ALL
	4		W0145	800	24		31-31-26	ALL
	5		W0145	081	24		34-53-13	ALL
	6		W0145	078	24		34-53-21	ALL
	7		W0145	070	24		34-53-21	ALL
	8		W0145	079	24		34-53-21	ALL
	9		W0145	068	24		34-53-21	050-099, 150-156, 162-166, 275-276
	9	UNUSED						157, 167-199, 277-299
	10		W0145	275R	24		34-53-21	ALL
	11		W0145	275B	24		34-53-21	ALL
	12		W0145	275Z			34-53-21	ALL
	13		W0145	697	24		34-53-21	050-099, 150-152, 155-199, 275-299
	14	UNUSED						050-099, 150-152, 155-199, 275-299
	15	UNUSED						050-099, 150-152, 155-199, 275-299
	16		W0145	878	24		34-53-21	157, 167-199, 277-299
	17	UNUSED						157, 167-199, 277-299
	18	UNUSED						157, 167-199, 277-299
	19	UNUSED						157, 167-199, 277-299
	20	UNUSED						157, 167-199, 277-299
	21	UNUSED						157, 167-199, 277-299
	22	UNUSED						157, 167-199, 277-299
	23	UNUSED						157, 167-199, 277-299
	24	UNUSED						157, 167-199, 277-299

HOOKUP LIST

D280T132

91-21-51

Section D04600

Page 87

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04698J		AC0701/ /		RCPT-				ALL
	1		W0654	207R	20		21-44-22	050-099, 150-199 275-299
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W0654	202R	24		21-31-11	ALL
	6		W0654	202B	24		21-31-11	ALL
	7	UNUSED						ALL
	8		W0654	206B	24		21-31-21	ALL
	9		W0654	206R	24		21-31-21	ALL
	10		W0654	034	24		21-44-21	ALL
	11		W0654	801	22		SPARE	ALL
	12		W0654	207B	20		21-44-22	050-099, 150-199 275-299
	12	UNUSED						ALL
D04698P		AC0701/ /		PLUG-				ALL
	1		W0978	203R	20		21-44-22	050-099, 150-199 275-299
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W0978	201R	24		21-31-11	ALL
	6		W0978	201B	24		21-31-11	ALL
	7	UNUSED						ALL
	8		W0978	202B	24		21-31-21	ALL
	9		W0978	202R	24		21-31-21	ALL
	10		W0978	002	20		21-44-21	ALL
	11	UNUSED						ALL
	12		W0978	203B	20		21-44-22	050-099, 150-199 275-299
	12	UNUSED						ALL
D04699J		AE0319/ /		RCPT-IRS-L				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W0751	003	20		34-21-11	ALL
	4		W0751	004	20		34-21-11	ALL
	5		W0751	005	20		34-21-11	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8		W0751	028	22		33-16-17	ALL

HOOKUP LIST
D280T132

91-21-51
Section D04600
Page 88
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04699J		AE0319/ /		RCPT-IRS-L (continued)				ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12		W0751	012	24		34-21-11	ALL
	13		W0751	013	24		34-21-11	ALL
	14		W0751	014	22		34-21-11	ALL
	15		W0751	015	22		34-21-11	ALL
	16		W0751	016	22		34-21-11	ALL
	17		W0751	017	22		34-21-11	ALL
	18	UNUSED						ALL
	19		W0751	201R	24		34-21-11	ALL
	20		W0751	201B	24		34-21-11	ALL
	21		W0751	201Z			34-21-11	ALL
	22		W0751	202Z			34-21-11	ALL
	23		W0751	202B	24		34-21-11	ALL
	24		W0751	202R	24		34-21-11	ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
D04699P		AE0319/ /		PLUG-				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W0161	003	22		34-21-11	ALL
	4		W0161	004	22		34-21-11	ALL
	5		W0161	005	22		34-21-11	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8		W0161	048	22		33-16-17	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12		W0161	012	24		34-21-11	ALL
	13		W0161	013	24		34-21-11	ALL
	14		W0161	014	22		34-21-11	ALL
	15		W0161	015	22		34-21-11	ALL

HOOKUP LIST
D280T132



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04699P		AE0319/ /		PLUG- (continued)				ALL
	16		W0161	016	22		34-21-11	ALL
	17		W0161	017	22		34-21-11	ALL
	18	UNUSED						ALL
	19		W0161	201R	24		34-21-11	ALL
	20		W0161	201B	24		34-21-11	ALL
	21		W0161	201Z			34-21-11	ALL
	22		W0161	202Z			34-21-11	ALL
	23		W0161	202B	24		34-21-11	ALL
	24		W0161	202R	24		34-21-11	ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D04600
Page 90 End
Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04704J		AF0119/ /		RCPT-P1 L FWD PNL DISC				ALL
	1		W0584	001	22		30-43-11	ALL
	2		W0584	037	20		SPARE	ALL
	3	UNUSED						ALL
	4		W0584	027	16		30-42-11	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W0584	005	18		30-42-11	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10		W0584	025	18		30-42-11	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D04704P		AF0119/ /		PLUG-P1 FWD DISC PANEL				ALL
	1		W0974	001	22		30-43-11	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W0974	012	16		30-42-11	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W0974	007	18		30-42-11	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10		W0974	008	18		30-42-11	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D04705J		AE0307/ /		RCPT-E1-4				ALL
	1		W0407	001	22		SPARE	ALL
	2		W0407	002	22		SPARE	ALL
	3		W0407	003	22		SPARE	ALL
	4		W0407	004	24		33-16-14	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D04700
Page 1
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04705J		AE0307/ /		RCPT-E1-4 (continued)				ALL
	13	UNUSED						ALL
	14	UNUSED	W0407	015	22		32-45-11	050-099, 150-199 275-299
	14	UNUSED						275-299
	15	UNUSED	W0407	016	22		32-45-11	050-099, 150-199 275-299
	15	UNUSED						275-299
	16	UNUSED						ALL
	17	UNUSED	W0407	207Z			32-45-12	050-099, 150-199 275-299
	17	UNUSED						275-299
	18		W0407	208R	24		SPARE	ALL
	19		W0407	208B	24		SPARE	ALL
	20		W0407	208Z			SPARE	ALL
	21		W0407	207R	20		32-45-12	050-099, 150-199 275-299
	21	UNUSED						275-299
	22	UNUSED	W0407	207B	20		32-45-12	050-099, 150-199 275-299
	22	UNUSED						275-299
	23	UNUSED	W0407	210Z			32-45-12	050-099, 150-199 275-299
	23	UNUSED						275-299
	24		W0407	209R	24		32-42-11	ALL
	25		W0407	209B	24		32-42-11	ALL
	26		W0407	209Z			32-42-11	ALL
	27		W0407	210R	20		32-45-12	050-099, 150-199 275-299
	27	UNUSED						275-299
	28	UNUSED	W0407	210B	20		32-45-12	050-099, 150-199 275-299
	28	UNUSED						275-299
	29		W0407	009	22		34-12-11	ALL
	30		W0407	010	22		34-12-11	ALL
	31		W0407	011	22		34-12-11	ALL
D04705P		AE0307/ /		PLUG-E1-4				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED	W0127	033	24		33-16-14	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D04700

Page 2

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04705P		AE0307/ /		PLUG-E1-4 (continued)				ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED	W0127	628	24		32-45-11	050-099, 150-199 275-299
	15	UNUSED	W0127	629	24		32-45-11	050-099, 150-199 275-299
	16	UNUSED						ALL
	17	UNUSED	W0127	267Z			32-45-12	050-099, 150-199 275-299
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED	W0127	267R	24		32-45-12	050-099, 150-199 275-299
	22	UNUSED	W0127	267B	24		32-45-12	050-099, 150-199 275-299
	23	UNUSED	W0127	268Z			32-45-12	050-099, 150-199 275-299
	24	UNUSED	W0127	537R	24		32-42-11	ALL
	25	UNUSED	W0127	537B	24		32-42-11	ALL
	26	UNUSED	W0127	537Z			32-42-11	ALL
	27	UNUSED	W0127	268R	24		32-45-12	050-099, 150-199 275-299
	28	UNUSED	W0127	268B	24		32-45-12	050-099, 150-199 275-299
	29	UNUSED	W0127	097	22		34-12-11	ALL
	30	UNUSED	W0127	098	22		34-12-11	ALL
	31	UNUSED	W0127	113	22		34-12-11	ALL
	DED	UNUSED	W0127	097Z			34-12-11	ALL
	DED	UNUSED	W0127	113Z			34-12-11	ALL
D04706J		AF0120/ /		RCPT-P3FWD DISC PANEL				ALL
	1	UNUSED	W0586	001	22		30-43-11	ALL
	2	UNUSED	W0586	037	20		SPARE	ALL
	3	UNUSED						ALL
	4	UNUSED	W0586	027	16		30-42-11	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED	W0586	005	18		30-42-11	ALL
	8	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D04700
Page 3
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04706J		AF0120/ /		RCPT-P3FWD DISC PANEL (continued)				ALL
	9	UNUSED						ALL
	10		W0586	035	18		30-42-11	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D04706P		AF0120/ /		PLUG-P3FWD DISC PANEL				ALL
	1		W0976	001	22		30-43-11	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W0976	012	16		30-42-11	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W0976	007	18		30-42-11	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10		W0976	008	18		30-42-11	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D04707J		AF0204/ /		RCPT-				ALL
	1		W0065	001	22		31-31-11	ALL
	2		W0065	002	22		31-31-11	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W0065	005	24		31-31-11	ALL
	6		W0065	006	24		31-31-11	ALL
	7		W0065	203Z			31-31-11	ALL
	8		W0065	116	24		34-61-24	050-099, 155-199, 276-299 150-154, 275
	8	UNUSED						ALL
	9	UNUSED						ALL
	10		W0065	203R	24		31-31-11	ALL
	11		W0065	203B	24		31-31-11	ALL
	12	UNUSED						ALL
	13		W0065	201Z			31-31-11	ALL
	14		W0065	201R	24		31-31-11	ALL
	15		W0065	201B	24		31-31-11	ALL
	16		W0065	202R	24		31-31-11	ALL
	17		W0065	202B	24		31-31-11	ALL
	18		W0065	202Z			31-31-11	ALL
	19		W0065	214Z			31-31-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04700

Page 4

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04707J		AF0204/ /		RCPT- (continued)				ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22		W0065	010	22		31-31-11	ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25		W0065	018	24		31-31-11	ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28		W0065	062	24		31-35-11	050-099
	28		W0065	065	24		31-35-11	150-199, 275-299
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35		W0065	214R	24		31-31-11	ALL
	36		W0065	214B	24		31-31-11	ALL
	37		W0065	301R	24		31-31-19	ALL
	38		W0065	301B	24		31-31-19	ALL
	39		W0065	301Y	24		31-31-19	ALL
	40		W0065	301Z			31-31-19	ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49		W0065	059	24		31-31-22	ALL
	50		W0065	227Z			31-35-11	ALL
	51		W0065	227R	24		31-35-11	ALL
	52		W0065	227B	24		31-35-11	ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55		W0065	060	24		31-31-22	ALL

HOOKUP LIST
D280T132

91-21-51
Section D04700
Page 5
Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04707P		AF0204/ /		PLUG-P61				050-099, 150-154, 275-299
D04707P		234/250/R 50		PLUG-P61				155-199
	1		W0691	001	22		31-31-11	ALL
	2		W0691	002	22		31-31-11	ALL
	3	UNUSED						050-099
	3		W0691	038	24		SPARE	150-199, 275-299
	4	UNUSED						ALL
	5		W0691	005	24		31-31-11	ALL
	6		W0691	006	24		31-31-11	ALL
	7		W0691	FRB			31-31-11	ALL
	8		W0691	062	24		34-61-24	050-099, 155-199, 276-299
	8	UNUSED						150-154, 275
	9	UNUSED						ALL
	10		W0691	202R	24		31-31-11	ALL
	11		W0691	202B	24		31-31-11	ALL
	12	UNUSED						ALL
	13		W0691	FRI			31-31-11	ALL
	14		W0691	204R	24		31-31-11	ALL
	15		W0691	204B	24		31-31-11	ALL
	16		W0691	205R	24		31-31-11	ALL
	17		W0691	205B	24		31-31-11	ALL
	18		W0691	FRE			31-31-11	ALL
	19		W0691	FRF			31-31-11	ALL
	20	UNUSED						ALL
	21		W0691	010	24		31-31-11	ALL
	22		W0691	011	22		31-31-11	ALL
	23		W0691	012	24		SPARE	050-099, 150-199
	23	UNUSED						275-299
	24		W0691	013	24		SPARE	050-099, 150-199
	24	UNUSED						275-299
	25		W0691	017	24		31-31-11	ALL
	26	UNUSED						ALL
	27		W0691	019	22		SPARE	ALL
	28		W0691	026	22		31-35-11	ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31		W0691	016	24		SPARE	ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35		W0691	206R	24		31-31-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04700

Page 6

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04707P		AF0204/ /		PLUG-P61 (continued)				050-099, 150-154, 275-299
D04707P		234/250/R 50		PLUG-P61 (continued)				155-199
	36		W0691	206B	24		31-31-11	ALL
	37		W0691	301R	24		31-31-19	ALL
	38		W0691	301B	24		31-31-19	ALL
	39		W0691	301Y	24		31-31-19	ALL
	40		W0691	301Z			31-31-19	ALL
	41	UNUSED						ALL
	42	UNUSED						050-099, 150-199
	42		W0691	207R	24		SPARE	275-299
	43	UNUSED						050-099, 150-199
	43		W0691	207B	24		SPARE	275-299
	44	UNUSED						050-099, 150-199
	44		W0691	FRG			SPARE	275-299
	45	UNUSED						050-099, 275-299
	45		W0691	FRD			SPARE	150-199
	46	UNUSED						050-099, 275-299
	46		W0691	027	24		SPARE	150-199
	47	UNUSED						050-099, 275-299
	47		W0691	028	24		SPARE	150-199
	48	UNUSED						050-099, 275-299
	48		W0691	029	24		SPARE	150-199
	49		W0691	032	24		31-31-22	ALL
	50		W0691	FRH			31-35-11	ALL
	51		W0691	208R	24		31-35-11	ALL
	52		W0691	208B	24		31-35-11	ALL
	53	UNUSED						050-099, 275-299
	53		W0691	030	24		SPARE	150-199
	54	UNUSED						050-099, 275-299
	54		W0691	031	24		SPARE	150-199
	55		W0691	033	24		31-31-22	ALL
CAP	Y		W0691	014	22		SPARE	ALL
CAP	Y		W0691	015	22		SPARE	ALL
CAP	Y		W0691	018	24		SPARE	ALL
			W0691	202	20		31-31-11	ALL
			W0691	202Z			31-31-11	ALL
			W0691	204	20		31-31-11	ALL
			W0691	204Z			31-31-11	ALL
			W0691	205	20		31-31-11	ALL
			W0691	205Z			31-31-11	ALL
			W0691	206	20		31-31-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04700

Page 7

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04707P		AF0204/ /		PLUG-P61 (continued)				050-099, 150-154, 275-299
D04707P		234/250/R 50		PLUG-P61 (continued)				155-199
			W0691	206Z			31-31-11	ALL
			W0691	208	20		31-35-11	ALL
			W0691	208Z			31-35-11	ALL
			W0691	FRB			31-31-11	ALL
			W0691	FRE			31-31-11	ALL
			W0691	FRF			31-31-11	ALL
			W0691	FRH			31-35-11	ALL
			W0691	FRI			31-31-11	ALL
			W0691	027F	20		SPARE	150-199
			W0691	027Z			SPARE	150-199
			W0691	028Z			SPARE	150-199
			W0691	029Z			SPARE	150-199
			W0691	FRD			SPARE	150-199
			W0691	207	20		SPARE	275-299
			W0691	207Z			SPARE	275-299
			W0691	FRG			SPARE	275-299
D04708J		AF0204/ /		RCPT-P61				ALL
	1		W0062	606	22		28-42-11	ALL
	2		W0062	05K	22		30-32-21	ALL
	3		W0062	611	24		28-22-11	ALL
	4		W0062	612	24		28-22-11	ALL
	5		W0062	605	22		28-42-11	ALL
	6		W0062	66E	24		21-24-11	050-099, 150-199
	6	UNUSED						275-299
	7		W0062	66G	24		21-24-11	050-099, 150-199
	7	UNUSED						275-299
	8		W0062	66D	24		21-24-11	050-099, 150-199
	8	UNUSED						275-299
	9		W0062	616	24		28-42-31	ALL
	10		W0062	56N	22		30-34-11	ALL
	11		W0062	630	24		28-22-12	050-099, 155-199, 276-299
	11	UNUSED						150-154, 275
	12	UNUSED						050-099, 275-299
	12		W0062	65N	24		30-34-31	150-199
	13		W0062	639	20		28-31-11	050-099, 155-199, 276-299
	13	UNUSED						150-154, 275
	14		W0062	615	22		28-42-12	ALL
	15		W0062	51D	24		21-53-22	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04700

Page 8

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04708J		AF0204/ /		RCPT-P61 (continued)				ALL
	16		W0062	05S	22		29-11-31	ALL
	17		W0062	014	24		29-11-22	ALL
	18		W0062	010	22		29-11-22	ALL
	19		W0062	011	22		29-11-22	ALL
	20		W0062	020	22		29-11-22	ALL
	21		W0062	012	24		29-11-22	ALL
	22		W0062	51C	24		21-53-22	ALL
	23		W0062	079	24		21-61-71	ALL
	24		W0062	740	20		28-31-11	050-099, 155-199, 276-299
	24	UNUSED						150-154, 275
	25		W0062	138	24		21-58-12	ALL
	26	UNUSED						ALL
	27		W0062	66F	22		21-24-11	050-099, 150-199
	27	UNUSED						275-299
	28		W0062	505	24		21-24-11	050-099, 150-199
	28	UNUSED						275-299
	29		W0062	50W	24		21-51-23	ALL
	30		W0062	50X	24		21-51-23	ALL
	31		W0062	742	20		28-31-11	050-099, 155-199, 276-299
	31	UNUSED						150-154, 275
	32		W0062	695	22		28-31-11	050-099, 155-199, 276-299
	32	UNUSED						150-154, 275
	33		W0062	233B	22		21-51-12	ALL
	34		W0062	233R	22		21-51-12	ALL
	35		W0062	68F	24		21-45-22	ALL
	36		W0062	720	22		28-31-21	050-099, 155-199, 276-299
	36	UNUSED						150-154, 275
	37	UNUSED						ALL
	38	UNUSED						ALL
	39		W0062	888	22		29-21-32	ALL
	40		W0062	883	22		29-21-32	ALL
	41		W0062	801R	22		26-18-21	ALL
	42		W0062	107	24		21-58-11	ALL
	43		W0062	56K	22		30-32-11	ALL
	44	UNUSED						ALL
	45		W0062	50G	24		21-26-11	ALL
	46		W0062	890	22		30-21-11	050-099, 150-199
	46	UNUSED						275-299
	47	UNUSED						ALL
	48		W0062	090	24		21-61-61	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04700

Page 9

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04708J		AF0204/ /		RCPT-P61 (continued)				ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51		W0062	70C	20		29-11-14	ALL
	52		W0062	51E	24		21-58-11	ALL
	53	UNUSED						ALL
	54		W0062	70D	20		29-11-14	ALL
	55		W0062	025	24		21-45-21	ALL
	56		W0062	026	22		21-45-21	050-099, 150-156, 162-166, 275-276
	56		W0062	026	20		21-45-21	157, 167-199, 277-299
	57		W0062	027	22		21-45-21	050-099, 150-156, 162-166, 275-276
	57		W0062	027	20		21-45-21	157, 167-199, 277-299
	58		W0062	113	24		21-58-11	ALL
	59	UNUSED						ALL
	60	UNUSED						ALL
	61		W0062	56L	22		30-32-11	ALL
	DED		W0062	695Z			28-31-11	050-099, 155-199, 276-299
D04708P		AF0204/ /		PLUG-P61				ALL
	1		W0572	001	22		28-42-11	ALL
	2		W0572	178	22		30-32-21	ALL
	3		W0572	003	24		28-22-11	ALL
	4		W0572	004	24		28-22-11	ALL
	5		W0572	005	22		28-42-11	ALL
	6		W0572	512	24		21-24-11	050-099, 150-199 275-299
	6	UNUSED						050-099, 150-199 275-299
	7		W0572	513	24		21-24-11	050-099, 150-199 275-299
	7	UNUSED						050-099, 150-199 275-299
	8		W0572	507	24		21-24-11	050-099, 150-199 275-299
	8	UNUSED						050-099, 150-199 275-299
	9		W0572	149	24		28-42-31	ALL
	10		W0572	010	22		30-34-11	ALL
	11		W0572	011	24		28-22-12	050-099, 155-199, 276-299 150-154, 275
	11	UNUSED						050-099, 155-199, 276-299 150-154, 275
	12	UNUSED						ALL
	13		W0572	523	22		28-31-11	050-099, 155-199, 276-299
	13		W0572	523	22		SPARE	150-154
	13	UNUSED						275
	14		W0572	014	22		28-42-12	ALL
	15		W0572	048	24		21-53-22	ALL
	16		W0572	016	22		29-11-31	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04700

Page 10

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04708P		AF0204/ /		PLUG-P61 (continued)				ALL
	17		W0572	017	24		29-11-22	ALL
	18		W0572	018	22		29-11-22	ALL
	19		W0572	019	22		29-11-22	ALL
	20		W0572	020	22		29-11-22	ALL
	21		W0572	021	24		29-11-22	ALL
	22		W0572	047	24		21-53-22	ALL
	23		W0572	040	20		21-61-71	ALL
	24		W0572	041	20		28-31-11	050-099, 155-199, 276-299
	24		W0572	041	20		SPARE	150-154, 275
	25		W0572	044	24		21-58-12	ALL
	26	UNUSED						050-099, 275-299
	26		W0572	582	22		30-34-41	150-199
	27		W0572	538	22		21-24-11	050-099, 150-199
	27	UNUSED						275-299
	28		W0572	509	24		21-24-11	050-099, 150-199
	28	UNUSED						275-299
	29		W0572	566	24		21-51-23	ALL
	30		W0572	567	24		21-51-23	ALL
	31		W0572	680	20		28-31-11	050-099, 155-199, 276-299
	31	UNUSED						150-154, 275
	32		W0572	681	22		28-31-11	050-099, 155-199, 276-299
	32	UNUSED						150-154, 275
	33		W0572	204B	22		21-51-12	ALL
	34		W0572	204R	22		21-51-12	ALL
	35		W0572	660	24		21-45-22	ALL
	36		W0572	569	22		28-31-21	050-099, 155-199, 276-299
	36		W0572	569	22		SPARE	150-154
	36	UNUSED						275
	37	UNUSED						050-099, 275-299
	37		W0572	570	22		SPARE	150-199
	38	UNUSED						050-099
	38		W0572	571	22		SPARE	150-199, 275-299
	39		W0572	602	22		29-21-32	ALL
	40		W0572	603	22		29-21-32	ALL
	41		W0572	537R	22		26-18-21	ALL
	42		W0572	637	24		21-58-11	ALL
	43		W0572	548	22		30-32-11	ALL
	44		W0572	058	24		SPARE	ALL
	45		W0572	059	24		21-26-11	ALL
	46		W0572	710	22		30-21-11	050-099, 150-199

HOOKUP LIST

D280T132

91-21-51

Section D04700

Page 11

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04708P		AF0204/ /		PLUG-P61 (continued)				ALL
	46	UNUSED						275-299
	47	UNUSED						ALL
	48		W0572	644	24		21-61-61	ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51		W0572	70C	20		29-11-14	ALL
	52		W0572	070	24		21-58-11	ALL
	53	UNUSED						ALL
	54		W0572	70D	20		29-11-14	ALL
	55		W0572	604	24		21-45-21	ALL
	56		W0572	605	22		21-45-21	050-099, 150-156, 162-166, 275-276
	56		W0572	605	20		21-45-21	157, 167-199, 277-299
	57		W0572	606	22		21-45-21	050-099, 150-156, 162-166, 275-276
	57		W0572	606	20		21-45-21	157, 167-199, 277-299
	58		W0572	638	24		21-58-11	ALL
	59	UNUSED						ALL
	60		W0572	804	22		SPARE	ALL
	61		W0572	805	20		30-32-11	ALL
CAP		Y	W0572	568	22		SPARE	150-154
DED			W0572	681Z			28-31-11	050-099, 155-199, 276-299
D04709J		AE0209/ /		RCPT-P36				ALL
	1		W0176	623	24		23-31-13	ALL
	2		W0176	833	24		23-31-13	ALL
	3		W0176	621	24		23-31-13	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W0176	576	22		23-34-11	ALL
	7	UNUSED						ALL
	8		W0176	159	24		23-12-11	ALL
	9		W0176	620	22		23-71-11	ALL
	10		W0176	619	22		23-71-11	ALL
	11	UNUSED						ALL
	12		W0176	125	22		23-31-12	ALL
	13	UNUSED						050-099, 155-199, 275-299
	13		W0176	81D	24		30-21-11	150-154
	14		W0176	81D	24		30-21-11	050-099, 155-199
	14	UNUSED						150-154, 275-299
	15		W0176	553	16		23-34-15	ALL
	16		W0176	02V	24		78-36-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04700

Page 12

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04709J		AE0209/ /		RCPT-P36 (continued)				ALL
	17		W0176	65W	24		78-36-11	ALL
	18		W0176	03S	24		78-36-11	ALL
	19		W0176	575	16		23-34-16	ALL
	20	UNUSED						ALL
	21		W0176	GRU			78-34-11	ALL
	22		W0176	22Y	20		78-34-11	ALL
	23		W0176	591	12		23-34-18	ALL
	24	UNUSED						ALL
	25		W0176	19Y	20		78-34-11	ALL
	26		W0176	67G	22		78-34-11	ALL
	27		W0176	592	12		23-34-18	ALL
	28		W0176	84B	22		78-34-11	ALL
			W0176	19YZ			78-34-11	ALL
			W0176	22YZ			78-34-11	ALL
			W0176	67GZ			78-34-11	ALL
			W0176	GRU			78-34-11	ALL
D04709P		AE0209/ /		RCPT-P36				ALL
	1		W0689	001	24		23-31-13	ALL
	2		W0689	002	24		23-31-13	ALL
	3		W0689	003	24		23-31-13	ALL
	4	UNUSED						050-099
	4		W0689	004	24		SPARE	150-199, 275-299
	5	UNUSED						050-099
	5		W0689	005	24		SPARE	150-199, 275-299
	6		W0689	006	22		23-34-11	ALL
	7		W0689	022	22		SPARE	ALL
	8		W0689	024	24		23-12-11	ALL
	9		W0689	017	22		23-71-11	ALL
	10		W0689	018	22		23-71-11	ALL
	11		W0689	021	20		SPARE	ALL
	12		W0689	029	22		23-31-12	ALL
	13		W0689	025	22		SPARE	050-099, 155-199, 275-299
	13		W0689	025	22		30-21-11	150-154
	14		W0689	030	24		30-21-11	050-099, 155-199
	14	UNUSED						150-154, 275-299
	15		W0689	010	16		23-34-15	ALL
	16		W0689	042	24		78-36-11	ALL
	17		W0689	041	24		78-36-11	ALL
	18		W0689	040	24		78-36-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04700

Page 13

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04709P		AE0209/ /		RCPT-P36 (continued)				ALL
	19		W0689	011	16		23-34-16	ALL
	20	UNUSED						ALL
	21		W0689	FRA			78-34-11	ALL
	22	DL	W0689	036	18		78-34-11	ALL
	23		W0689	012	12		23-34-18	ALL
	24	UNUSED						ALL
	25	DL	W0689	037	18		78-34-11	ALL
	26	DL	W0689	038	18		78-34-11	ALL
	27		W0689	013	12		23-34-18	ALL
	28	DL	W0689	039	18		78-34-11	ALL
			W0689	035	20		78-34-11	ALL
			W0689	036Z			78-34-11	ALL
			W0689	037Z			78-34-11	ALL
			W0689	038Z			78-34-11	ALL
			W0689	039Z			78-34-11	ALL
			W0689	FRA			78-34-11	ALL
D04710J		AF0204/ /		RCPT-P61				ALL
	1		W0062	52H	24		27-28-11	ALL
	2		W0062	63W	20		78-34-11	ALL
	3		W0062	103	22		78-36-11	ALL
	4		W0062	52J	24		27-28-13	ALL
	5		W0062	108	22		36-22-11	ALL
	6		W0062	62J	24		74-31-11	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9		W0062	53F	22		27-58-31	ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12		W0062	54D	24		27-51-11	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16		W0062	64L	22		33-51-11	ALL
	17		W0062	69A	22		73-21-11	ALL
	18	FM	W0062	62L	16		73-21-20	ALL
	19		W0062	53N	22		27-88-11	ALL
	20		W0062	67Y	22		73-21-11	ALL
	21		W0062	FRC			73-21-11	ALL
	22		W0062	67W	22		73-21-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04700

Page 14

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04710J		AF0204/ /		RCPT-P61 (continued)				ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25		W0062	GRA			78-34-11	ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29		W0062	62X	24		78-34-11	ALL
	30		W0062	62B	24		73-21-17	ALL
	31		W0062	62P	20		73-21-19	ALL
	32		W0062	402B	22		21-31-21	ALL
	33		W0062	402G	22		21-31-21	ALL
	34		W0062	402R	22		21-31-21	ALL
	35		W0062	402Y	22		21-31-21	ALL
	36		W0062	402Z			21-31-21	ALL
	37		W0062	036	22		29-11-22	ALL
	38		W0062	052	24		21-31-21	ALL
	39		W0062	064	24		21-31-21	ALL
	40		W0062	50K	20		21-31-21	ALL
	41		W0062	52E	24		27-18-11	ALL
	42	UNUSED						ALL
	43		W0062	63V	20		78-34-21	ALL
	44		W0062	52F	24		27-18-11	ALL
	45	UNUSED						ALL
	46		W0062	GRF			78-34-21	ALL
	47	FM	W0062	61L	16		73-21-20	ALL
	48		W0062	55C	24		27-58-21	ALL
	49	UNUSED						050-099, 150-199
	49		W0062	849	24		73-21-16	275-299
	50		W0062	62Y	24		78-34-11	ALL
	51		W0062	63G	20		78-34-11	ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54		W0062	13A	20		78-34-21	ALL
	55	UNUSED						ALL
	DED		W0062	036Z			29-11-22	ALL
			W0062	13AZ			78-34-21	ALL
			W0062	546	20		78-34-11	ALL
			W0062	63GZ			78-34-11	ALL
			W0062	63VZ			78-34-21	ALL
			W0062	67WZ			73-21-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04700

Page 15

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04710J		AF0204/ /		RCPT-P61 (continued)				ALL
			W0062	67YZ			73-21-11	ALL
			W0062	69AZ			73-21-11	ALL
			W0062	FRC			73-21-11	ALL
			W0062	GRA			78-34-11	ALL
			W0062	GRF			78-34-21	ALL
D04710P		AF0204/ /		PLUG-P61				ALL
	1		W0756	131	24		27-28-11	ALL
	2	DL	W0756	596	18		78-34-11	ALL
	3		W0756	004	22		78-36-11	ALL
	4		W0756	134	24		27-28-13	ALL
	5		W0756	803	22		36-22-11	ALL
	6		W0756	801	24		74-31-11	ALL
	7		W0756	148	24		SPARE	ALL
	8		W0756	149	24		SPARE	ALL
	9		W0756	115	22		27-58-31	ALL
	10	DK	W0756	599	18		SPARE	050-099
	10	DL	W0756	599	18		SPARE	150-199, 275-299
	11	DK	W0756	600	18		SPARE	050-099, 150-199
	11	DL	W0756	600	18		SPARE	275-299
	12		W0756	118	24		27-51-11	ALL
	13	DK	W0756	597	18		SPARE	050-099, 150-199
	13	DL	W0756	597	18		SPARE	275-299
	14		W0756	027Z			SPARE	050-099, 150-199, 275-276
	14	UNUSED						277-299
	15	UNUSED						ALL
	16		W0756	067	22		33-51-11	ALL
	17		W0756	092	24		73-21-11	ALL
	18	FL	W0756	012	16		73-21-20	050-099, 150-199, 277-299
	18		W0756	012	20		73-21-20	275-276
	19		W0756	805	22		27-88-11	ALL
	20		W0756	090	24		73-21-11	ALL
	21		W0756	FRC			73-21-11	ALL
	22		W0756	091	24		73-21-11	ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25		W0756	10LZ			78-34-11	ALL
	26	FM	W0756	027	16		SPARE	050-099
	26	FL	W0756	027	16		SPARE	150-199, 275-276
	26	UNUSED						277-299

HOOKUP LIST

D280T132

91-21-51

Section D04700

Page 16

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04710P		AF0204/ /		PLUG-P61 (continued)				ALL
	27	UNUSED						050-099, 150-199
	27		W0756	523	22		SPARE	275-299
	28	UNUSED						ALL
	29		W0756	037	24		78-34-11	ALL
	30		W0756	553	24		73-21-17	ALL
	31		W0756	105	20		73-21-19	ALL
	32		W0756	402B	22		21-31-21	ALL
	33		W0756	402G	22		21-31-21	ALL
	34		W0756	402R	22		21-31-21	ALL
	35		W0756	402Y	22		21-31-21	ALL
	36		W0756	402Z			21-31-21	ALL
	37		W0756	112	22		29-11-22	ALL
	38		W0756	063	24		21-31-21	ALL
	39		W0756	064	24		21-31-21	ALL
	40		W0756	065	20		21-31-21	ALL
	41		W0756	081	22		27-18-11	ALL
	42	UNUSED						ALL
	43	DL	W0756	10N	18		78-34-21	ALL
	44		W0756	084	22		27-18-11	ALL
	45	UNUSED						050-099, 150-199
	45		W0756	176	24		SPARE	275-299
	46		W0756	FRO			78-34-21	ALL
	47	FL	W0756	093	16		73-21-20	ALL
	48		W0756	177	24		27-58-21	ALL
	49	UNUSED						050-099
	49		W0756	168	24		SPARE	150-199
	49		W0756	168	24		73-21-16	275-299
	50		W0756	172	24		78-34-11	ALL
	51	DL	W0756	10L	18		78-34-11	ALL
	52		W0756	185	20		SPARE	050-099
	52	UNUSED						150-199, 275-299
	53		W0756	186	20		SPARE	ALL
	54	DL	W0756	101	18		78-34-21	ALL
	55		W0756	188	20		SPARE	ALL
	CAP	Y	W0756	176	24		SPARE	050-099, 150-199
	CAP	Y	W0756	184	20		SPARE	ALL
	CAP	Y	W0756	187	20		SPARE	ALL
	CAP	Y	W0756	523	22		SPARE	150-199
	DED		W0756	065Z			21-31-21	ALL
	DED		W0756	112Z			29-11-22	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04700

Page 17

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04710P		AF0204/ /		PLUG-P61 (continued)				ALL
			W0756	090Z			73-21-11	ALL
			W0756	091Z			73-21-11	ALL
			W0756	092Z			73-21-11	ALL
			W0756	10IZ			78-34-21	ALL
			W0756	10NZ			78-34-21	ALL
			W0756	FRC			73-21-11	ALL
			W0756	FRO			78-34-21	ALL
			W0756	006	20		73-21-20	150-199
			W0756	010	20		73-21-20	150-199
			W0756	012Z			73-21-20	150-199
			W0756	093Z			73-21-20	150-199
D04711J		AE0306/ /		RCPT-E2-3				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8		W0471	018	22		31-31-11	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12		W0471	078	24		31-31-13	ALL
	13		W0471	079	24		31-31-13	ALL
	14	UNUSED						ALL
	15		W0471	209R	24		31-31-13	ALL
	16		W0471	209B	24		31-31-13	ALL
	17	UNUSED						ALL
	18		W0471	025	24		31-31-13	ALL
	19		W0471	210R	24		31-31-13	ALL
	20		W0471	210B	24		31-31-13	ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23		W0471	026	22		31-31-11	ALL
	24		W0471	027	22		31-31-11	ALL
	25	UNUSED						ALL
	26	UNUSED						050-099, 155-199, 277-299
	26		W0471	217R	24		SPARE	150-154, 275-276

HOOKUP LIST

D280T132

91-21-51

Section D04700

Page 18

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04711J		AE0306/ /		RCPT-E2-3 (continued)				ALL
	27	UNUSED						050-099, 155-199, 277-299
	27	UNUSED	W0471	217B	24		SPARE	150-154, 275-276
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED	W0471	062	24		31-31-21	ALL
	33	UNUSED						ALL
	34	UNUSED	W0471	064	24		31-31-21	ALL
	35	UNUSED						ALL
	36	UNUSED	W0471	089	24		31-31-26	ALL
	37	UNUSED	W0471	090	24		31-31-26	ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
D04711P		AE0306/ /		PLUG-E2-3				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED	W0135	006	22		31-31-11	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED	W0135	012	24		31-31-13	ALL
	13	UNUSED	W0135	013	24		31-31-13	ALL
	14	UNUSED						ALL
	15	UNUSED	W0135	237R	24		31-31-13	ALL
	16	UNUSED	W0135	237B	24		31-31-13	ALL
	17	UNUSED						ALL
	18	UNUSED	W0135	061	24		31-31-13	ALL
	19	UNUSED	W0135	238R	24		31-31-13	ALL
	20	UNUSED	W0135	238B	24		31-31-13	ALL
	21	UNUSED						ALL
	22	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D04700

Page 19

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04711P		AE0306/ /		PLUG-E2-3 (continued)				ALL
	23		W0135	100	22		31-31-11	ALL
	24		W0135	101	22		31-31-11	ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32		W0135	722	24		31-31-21	ALL
	33	UNUSED						ALL
	34		W0135	723	24		31-31-21	ALL
	35	UNUSED						ALL
	36		W0135	815	24		31-31-26	ALL
	37		W0135	816	24		31-31-26	ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
D04714J		AF0204/ /		RCPT-P61				ALL
	1		W0062	53R	20		27-62-11	ALL
	2		W0062	52T	24		27-58-11	ALL
	3		W0062	52R	24		27-58-11	ALL
	4		W0062	52V	24		27-58-11	ALL
	5		W0062	52Z	24		27-58-11	ALL
	6		W0062	52Y	24		27-58-11	ALL
	7		W0062	52X	24		27-58-11	ALL
	8		W0062	52W	24		27-58-11	ALL
	9		W0062	52M	22		27-51-51	ALL
	10		W0062	05P	22		27-62-11	ALL
	11	DK	W0062	209B	18		28-43-11	ALL
	12	DK	W0062	209R	18		28-43-11	ALL
	13	UNUSED						ALL
	14		W0062	55A	24		27-51-61	ALL
	15		W0062	55B	24		27-51-61	ALL
	16		W0062	52K	24		27-38-11	ALL
	17		W0062	053	22		32-45-11	050-099, 150-199, 277-299
	17		W0062	053	24		32-45-11	275-276
	18	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D04700

Page 20

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04714J		AF0204/ /		RCPT-P61 (continued)				ALL
	19	UNUSED						ALL
	20		W0062	79A	20		30-81-11	050-099, 150-199 275-299
	20	UNUSED						ALL
	21		W0062	52A	24		27-11-11	ALL
	22		W0062	52G	20		27-21-11	ALL
	23	UNUSED						ALL
	24		W0062	53V	22		27-13-11	ALL
	25		W0062	62T	24		77-31-11	ALL
	26		W0062	79C	20		30-81-11	050-099, 150-199 275-299
	26	UNUSED						ALL
	27		W0062	806	20		27-13-11	ALL
	28		W0062	805	20		27-13-11	ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32		W0062	79F	20		SPARE	050-099, 155-199 150-154, 275-299
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						050-099, 275-299
	36		W0062	62M	20		75-32-11	150-157
	36		W0062	62M	20		SPARE	162-199
	37	UNUSED						050-099, 275-299
	37		W0062	62N	20		75-32-11	150-157
	37		W0062	62N	20		SPARE	162-199
	38	UNUSED						ALL
	39	UNUSED						ALL
	40		W0062	714	24		78-36-11	ALL
	41		W0062	57R	24		32-42-12	ALL
	42		W0062	57M	24		32-42-12	ALL
	43		W0062	57N	24		32-42-12	ALL
	44		W0062	57P	24		32-42-12	ALL
	45	UNUSED						ALL
	46		W0062	70D	20		29-11-14	ALL
	47		W0062	70E	20		29-11-14	ALL
	48		W0062	70F	20		29-11-14	ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D04700

Page 21

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04714J		AF0204/ /		RCPT-P61 (continued)				ALL
	52	UNUSED						ALL
	53		W0062	544	22		28-22-31	ALL
	54		W0062	541	22		28-22-31	ALL
	55		W0062	542	22		28-22-31	ALL
	56		W0062	543	22		28-22-31	ALL
	57	UNUSED						ALL
	58		W0062	06J	22		30-31-13	ALL
	59	UNUSED						ALL
	60	UNUSED						ALL
	61	UNUSED						ALL
	DED		W0062	53VZ			27-13-11	ALL
	DED		W0062	541Z			28-22-31	ALL
	DED		W0062	542Z			28-22-31	ALL
	DED		W0062	543Z			28-22-31	ALL
	DED		W0062	544Z			28-22-31	ALL
	DED		W0062	805Z			27-13-11	ALL
	DED		W0062	806Z			27-13-11	ALL
D04714P		AF0204/ /		PLUG-P61				ALL
	1		W0756	046	20		27-62-11	ALL
	2		W0756	048	24		27-58-11	ALL
	3		W0756	049	22		27-58-11	ALL
	4		W0756	050	24		27-58-11	ALL
	5		W0756	051	24		27-58-11	ALL
	6		W0756	052	24		27-58-11	ALL
	7		W0756	053	24		27-58-11	ALL
	8		W0756	054	24		27-58-11	ALL
	9		W0756	055	22		27-51-51	ALL
	10		W0756	169	22		27-62-11	ALL
	11	DL	W0756	244B	18		28-43-11	ALL
	12	DL	W0756	244R	18		28-43-11	ALL
	13	UNUSED						ALL
	14		W0756	059	24		27-51-61	ALL
	15		W0756	060	24		27-51-61	ALL
	16		W0756	127	24		27-38-11	ALL
	17		W0756	031	22		32-45-11	ALL
	18		W0756	655	24		78-36-11	ALL
	19		W0756	657	24		78-36-11	ALL
	20		W0756	703	20		30-81-11	050-099, 150-199
	20	UNUSED						275-299

HOOKUP LIST

D280T132

91-21-51

Section D04700

Page 22

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04714P		AF0204/ /		PLUG-P61 (continued)				ALL
	21		W0756	030	24		27-11-11	ALL
	22		W0756	146	20		27-21-11	ALL
	23	UNUSED						ALL
	24		W0756	125	22		27-13-11	ALL
	25		W0756	501	24		77-31-11	ALL
	26		W0756	707	20		30-81-11	050-099, 150-199
	26	UNUSED						275-299
	27		W0756	237R	20		27-13-11	ALL
	28		W0756	237B	20		27-13-11	ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	32		W0756	712	20		30-81-11	050-099, 150-154, 275-299
	33	UNUSED						155-199
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38		W0756	182	20		SPARE	ALL
	39		W0756	183	20		SPARE	ALL
	40		W0756	095	24		78-36-11	ALL
	41		W0756	518	24		32-42-12	ALL
	42		W0756	522	24		32-42-12	ALL
	43		W0756	525	24		32-42-12	ALL
	44		W0756	515	24		32-42-12	ALL
	45	UNUSED						ALL
	46		W0756	70D	20		29-11-14	ALL
	47		W0756	70E	20		29-11-14	ALL
	48		W0756	70F	20		29-11-14	ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53		W0756	642	22		28-22-31	ALL
	54		W0756	643	22		28-22-31	ALL
	55		W0756	644	22		28-22-31	ALL
	56		W0756	645	22		28-22-31	ALL
	57	UNUSED						ALL
	58		W0756	537	22		30-31-13	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04700

Page 23

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04714P		AF0204/ /		PLUG-P61 (continued)				ALL
	59	UNUSED						ALL
	60	UNUSED						ALL
	61	UNUSED						ALL
	CAP	Y	W0756	180	20		SPARE	ALL
	CAP	Y	W0756	181	20		SPARE	ALL
	CAP	Y	W0756	189	20		SPARE	ALL
	DED		W0756	146Z			27-21-11	ALL
	DED		W0756	237Z			27-13-11	ALL
	DED		W0756	642Z			28-22-31	ALL
	DED		W0756	643Z			28-22-31	ALL
	DED		W0756	644Z			28-22-31	ALL
	DED		W0756	645Z			28-22-31	ALL
D04716J		AE0223/ /		RCPT-P36				ALL
	1		W0180	056	22		28-41-22	ALL
	2		W0180	057	22		28-41-23	ALL
	3		W0180	70A	22		21-45-22	ALL
	4		W0180	139	24		30-21-11	050-099, 150-199
	4	DL	W0180	146	18		38-32-11	275-276
	4	UNUSED						277-299
	5		W0180	160	20		78-34-21	ALL
	6		W0180	122	20		27-32-31	ALL
	7		W0180	022	20		33-42-11	ALL
	8		W0180	021	20		33-42-11	ALL
	9		W0180	201B	24		21-61-51	ALL
	10		W0180	201R	24		21-61-51	ALL
	11		W0180	026	24		36-23-21	ALL
	12		W0180	027	24		36-23-21	ALL
	13		W0180	055	22		28-41-12	ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17		W0180	GRJ			78-34-21	ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20		W0180	202R	24		32-42-11	ALL
	21		W0180	202B	24		32-42-11	ALL
	22		W0180	202Z			32-42-11	ALL
	23	UNUSED						ALL
	24	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D04700

Page 24

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04716J		AE0223/ /		RCPT-P36 (continued)				ALL
	25		W0180	017	22		27-09-12	ALL
	26		W0180	002	24		24-22-22	ALL
	27		W0180	161	20		78-34-21	ALL
	28	UNUSED						ALL
	29		W0180	102	20		25-31-11	050-099, 150-199, 275-278
	29	DL	W0180	102	18		25-31-11	280-299
	30	UNUSED						050-099, 150-199, 275-278
	30	DL	W0180	138	18		SPARE	280-299
	31		W0180	154	22		29-11-12	ALL
	DED		W0180	017Z			27-09-12	ALL
	DED		W0180	122Z			27-32-31	ALL
	DED		W0180	154Z			29-11-12	ALL
			W0180	160Z			78-34-21	ALL
			W0180	161Z			78-34-21	ALL
			W0180	GRJ			78-34-21	ALL
D04716P		AE0223/ /		PLUG-P36				ALL
	1		W0738	032	22		28-41-22	ALL
	2		W0738	033	22		28-41-23	ALL
	3		W0738	508	22		21-45-22	ALL
	4		W0738	080	24		30-21-11	050-099, 150-199
	4	DK	W0738	518	18		38-32-11	275-276
	4	UNUSED						277-299
	5		W0738	126	20		78-34-21	ALL
	6		W0738	107	20		27-32-31	ALL
	7		W0738	047	20		33-42-11	ALL
	8		W0738	048	20		33-42-11	ALL
	9		W0738	211B	24		21-61-51	ALL
	10		W0738	211R	24		21-61-51	ALL
	11		W0738	053	24		36-23-21	ALL
	12		W0738	054	24		36-23-21	ALL
	13		W0738	065	22		28-41-12	ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16		W0738	068	20		SPARE	ALL
	17		W0738	FRB			78-34-21	ALL
	18		W0738	070	24		SPARE	ALL
	19		W0738	071	24		SPARE	ALL
	20		W0738	217R	24		32-42-11	ALL
	21		W0738	217B	24		32-42-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04700

Page 25

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04716P		AE0223/ /		PLUG-P36 (continued)				ALL
	22		W0738	217Z			32-42-11	ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25		W0738	074	22		27-09-12	ALL
	26		W0738	094	24		24-22-22	ALL
	27		W0738	127	20		78-34-21	ALL
	28		W0738	109	24		SPARE	ALL
	29		W0738	099	20		25-31-11	050-099, 150-199, 275-276
	29		W0738	510	20		25-31-11	277-278
	29	DK	W0738	510	18		25-31-11	280-299
	30	UNUSED						050-099, 150-199, 275-278
	30		W0738	517	20		SPARE	280-299
	31		W0738	108	22		29-11-12	ALL
	DED		W0738	107Z			27-32-31	ALL
	DED		W0738	108Z			29-11-12	ALL
			W0738	124	20		78-34-21	ALL
			W0738	126Z			78-34-21	ALL
			W0738	127Z			78-34-21	ALL
			W0738	FRB			78-34-21	ALL
D04717J		AE0306/ /		RCPT-E2-2				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W1561	206R	24		34-21-11	ALL
	5		W1561	206B	24		34-21-11	ALL
	6		W1561	206Z			34-21-11	ALL
	7		W1561	205R	24		34-61-12	ALL
	8		W1561	205B	24		34-61-12	ALL
	9		W1561	205Z			34-61-12	ALL
	10		W1561	029	24		SPARE	ALL
	11		W1561	030	24		SPARE	ALL
	12	UNUSED						050-099, 150-155, 162-165, 275-276
	12		W1561	215Z			23-25-13	156-157, 166-199, 277-299
	13	UNUSED						050-099, 150-155, 162-165, 275-276
	13		W1561	215R	24		23-25-13	156-157, 166-199, 277-299
	14	UNUSED						050-099, 150-155, 162-165, 275-276
	14		W1561	215B	24		23-25-13	156-157, 166-199, 277-299
	15	UNUSED						ALL
	16	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D04700

Page 26

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04717J		AE0306/ /		RCPT-E2-2 (continued)				ALL
	17		W1561	017	24		34-21-11	ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21		W1561	208R	24		34-61-15	ALL
	22		W1561	208B	24		34-61-15	ALL
	23		W1561	208Z			34-61-15	ALL
	24	UNUSED						ALL
D04717P		AE0306/ /		PLUG-E2-2				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W0133	244R	24		34-21-11	ALL
	5		W0133	244B	24		34-21-11	ALL
	6		W0133	244Z			34-21-11	ALL
	7		W0133	212R	24		34-61-12	ALL
	8		W0133	212B	24		34-61-12	ALL
	9		W0133	212Z			34-61-12	ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						050-099, 150-155, 162-165, 275-276
	12		W0133	805Z			23-25-13	156-157, 166-199, 277-299
	13	UNUSED						050-099, 150-155, 162-165, 275-276
	13		W0133	805R	24		23-25-13	156-157, 166-199, 277-299
	14	UNUSED						050-099, 150-155, 162-165, 275-276
	14		W0133	805B	24		23-25-13	156-157, 166-199, 277-299
	15	UNUSED						ALL
	16	UNUSED						ALL
	17		W0133	065	24		34-21-11	ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21		W0133	247R	24		34-61-15	ALL
	22		W0133	247B	24		34-61-15	ALL
	23		W0133	247Z			34-61-15	ALL
	24	UNUSED						ALL
D04718J		AF0204/ /		RCPT-P61				ALL
	1		W0062	52D	24		27-18-11	ALL

HOOKUP LIST
D280T132

91-21-51
Section D04700
Page 27
Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04718J		AF0204/ /		RCPT-P61 (continued)				ALL
	2		W0062	724	22		28-42-12	050-099, 155-199, 276-299
	2	UNUSED						150-154, 275
	3		W0062	745	20		28-31-12	050-099, 155-199, 276-299
	3	UNUSED						150-154, 275
	4		W0062	52C	24		27-18-11	ALL
	5		W0062	55Y	22		28-41-13	ALL
	6		W0062	230B	24		28-41-13	ALL
	7		W0062	230R	24		28-41-13	ALL
	8		W0062	52L	24		27-51-31	ALL
	9	UNUSED						050-099, 275-299
	9		W0062	05M	22		SPARE	150-199
	10		W0062	53M	24		27-81-31	ALL
	11	UNUSED						050-099, 150-199, 275-276
	11	FM	W0062	67R	16		25-31-31	277-299
	12		W0062	56K	22		30-32-11	ALL
	13		W0062	748	20		28-31-12	050-099, 155-199, 277-299
	13	UNUSED						150-154, 275-276
	14	UNUSED						ALL
	15		W0062	67C	12		28-22-12	ALL
	16	DK	W0062	726	18		33-44-21	ALL
	17		W0062	744	20		28-31-12	050-099, 155-199, 276-299
	17	UNUSED						150-154, 275
	18	UNUSED						050-099, 150-199
	18	DK	W0062	65D	18		25-31-21	275-299
	19	UNUSED						ALL
	20		W0062	715	22		28-31-12	050-099, 155-199, 276-299
	20	UNUSED						150-154, 275
	21		W0062	734	22		28-42-13	050-099, 155-199, 276-299
	21	UNUSED						150-154, 275
	22		W0062	65D	20		25-31-21	050-099, 150-199
	22	UNUSED						275-299
	23		W0062	67A	12		28-22-12	ALL
	24		W0062	63G	20		78-34-11	ALL
	25	UNUSED						ALL
	26		W0062	GRE			78-34-11	ALL
	27		W0062	67B	12		28-22-12	ALL
	28		W0062	101	20		78-34-11	ALL
	DED		W0062	715Z			28-31-12	050-099, 155-199, 276-299
	DED		W0062	724Z			28-42-12	050-099, 155-199, 276-299
	DED		W0062	734Z			28-42-13	050-099, 155-199, 276-299

HOOKUP LIST

D280T132

91-21-51

Section D04700

Page 28

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04718J		AF0204/ /		RCPT-P61 (continued)				ALL
	DED		W0062	748Z			28-31-12	050-099, 155-199, 277-299
	DED		W0062	05MZ			SPARE	150-199
			W0062	101Z			78-34-11	ALL
			W0062	63GZ			78-34-11	ALL
			W0062	716	20		78-34-11	ALL
			W0062	GRE			78-34-11	ALL
D04718P		AF0204/ /		PLUG-P61				ALL
	1		W0752	001	22		27-18-11	ALL
	2		W0752	091	22		28-42-12	050-099, 155-199, 276-299
	2	UNUSED						150-154
	2	DL	W0752	025	20		SPARE	275
	3		W0752	090	20		28-31-12	050-099, 155-199, 276-299
	3	UNUSED						150-154, 275
	4		W0752	006	22		27-18-11	ALL
	5		W0752	051	22		28-41-13	ALL
	6		W0752	207B	24		28-41-13	ALL
	7		W0752	207R	24		28-41-13	ALL
	8		W0752	027	24		27-51-31	ALL
	9	UNUSED						050-099, 275-299
	9		W0752	030	22		SPARE	150-199
	10		W0752	029	24		27-81-31	ALL
	11	UNUSED						050-099
	11		W0752	080	22		SPARE	150-199, 275-276
	11	DL	W0752	025	18		25-31-31	277-299
	12		W0752	038	22		30-32-11	ALL
	13		W0752	094	20		28-31-12	050-099, 155-199, 277-299
	13		W0752	078	22		SPARE	150-154, 275-276
	14	UNUSED						ALL
	15		W0752	024	12		28-22-12	ALL
	16	DL	W0752	043	18		33-44-21	050-099, 150-156, 162-166, 275-276
	16	DK	W0752	043	18		33-44-21	157, 167-199, 277-299
	17		W0752	071	20		28-31-12	050-099, 155-199, 276-299
	17	UNUSED						150-154, 275
	18	UNUSED						050-099, 150-199
	18	FL	W0752	047	18		25-31-21	275-276
	18	DL	W0752	047	18		25-31-21	277-278
	18	DK	W0752	047	18		25-31-21	280-299
	19	UNUSED						ALL
	20		W0752	070	22		28-31-12	050-099, 155-199, 276-299

HOOKUP LIST

D280T132

91-21-51

Section D04700

Page 29

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04718P		AF0204/ /		PLUG-P61 (continued)				ALL
	20	UNUSED						150-154, 275
	21		W0752	093	22		28-42-13	050-099, 155-199, 276-299
	21	UNUSED						150-154, 275
	22		W0752	047	20		25-31-21	050-099, 150-199
	22	UNUSED						275-299
	23		W0752	022	12		28-22-12	ALL
	24		W0752	504	20		78-34-11	ALL
	25	UNUSED						ALL
	26		W0752	FRD			78-34-11	ALL
	27		W0752	023	12		28-22-12	ALL
	28		W0752	505	20		78-34-11	ALL
	CAP	Y	W0752	086	24		SPARE	ALL
	CAP	Y	W0752	025	20		SPARE	150-154
	CAP	Y	W0752	079	22		SPARE	150-154, 275
	CAP	Y	W0752	080	22		SPARE	280-299
			W0752	504Z			78-34-11	ALL
			W0752	505Z			78-34-11	ALL
			W0752	FRD			78-34-11	ALL
D04719J		AE0305/ /		RCPT-E1-6				ALL
	1		W1561	004	22		34-21-11	ALL
	2		W1561	005	22		34-21-11	ALL
	3		W1561	006	22		34-21-11	ALL
	4		W1561	206R	24		34-21-11	ALL
	5		W1561	206B	24		34-21-11	ALL
	6		W1561	206Z			34-21-11	ALL
	7		W1561	205R	24		34-61-12	ALL
	8		W1561	205B	24		34-61-12	ALL
	9		W1561	205Z			34-61-12	ALL
	10		W1561	201R	24		22-13-11	ALL
	11		W1561	201B	24		22-13-11	ALL
	12		W1561	201Z			22-13-11	ALL
	13		W1561	202R	24		22-32-11	ALL
	14		W1561	202B	24		22-32-11	ALL
	15		W1561	202Z			22-32-11	ALL
	16		W1561	203R	24		34-21-11	ALL
	17		W1561	203B	24		34-21-11	ALL
	18		W1561	203Z			34-21-11	ALL
	19		W1561	204R	24		34-22-18	ALL
	20		W1561	204B	24		34-22-18	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04700

Page 30

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04719J		AE0305/ /		RCPT-E1-6 (continued)				ALL
	21		W1561	204Z			34-22-18	ALL
	22		W1561	207R	24		SPARE	ALL
	23		W1561	207B	24		SPARE	ALL
	24		W1561	207Z			SPARE	ALL
	25		W1561	025	24		SPARE	ALL
	26		W1561	026	24		SPARE	ALL
	27		W1561	027	24		SPARE	ALL
	28		W1561	028	24		SPARE	ALL
	29		W1561	029	24		SPARE	ALL
	30		W1561	030	24		SPARE	ALL
	31		W1561	208R	24		34-61-15	ALL
	32		W1561	208B	24		34-61-15	ALL
	33		W1561	208Z			34-61-15	ALL
	34		W1561	210R	24		32-42-11	ALL
	35		W1561	210B	24		32-42-11	ALL
	36		W1561	210Z			32-42-11	ALL
	37		W1561	017	24		34-21-11	ALL
	38		W1561	213R	24		22-21-21	ALL
	39		W1561	213B	24		22-21-21	ALL
	40		W1561	213Z			22-21-21	ALL
	41		W1561	214R	24		34-21-21	ALL
	42		W1561	214B	24		34-21-21	ALL
	43		W1561	214Z			34-21-21	ALL
	44	UNUSED						050-099, 151-152, 275-276
	44		W9014	207R	22		23-25-13	150, 153-155, 162-165
	44		W1561	215R	24		23-25-13	156-157, 166-199, 277-299
	45	UNUSED						050-099, 151-152, 275-276
	45		W9014	207B	22		23-25-13	150, 153-155, 162-165
	45		W1561	215B	24		23-25-13	156-157, 166-199, 277-299
	46	UNUSED						050-099, 151-152, 275-276
	46		W9014	207Z			23-25-13	150, 153-155, 162-165
	46		W1561	215Z			23-25-13	156-157, 166-199, 277-299
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51		W1561	209R	24		34-22-38	ALL
	52		W1561	209B	24		34-22-38	ALL
	53		W1561	209Z			34-22-38	ALL
	54	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D04700

Page 31

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04719J		AE0305/ /		RCPT-E1-6 (continued)				ALL
	55	UNUSED						ALL
D04719P		AE0305/ /		PLUG-				ALL
	1		W0161	024	22		34-21-11	ALL
	2		W0161	023	22		34-21-11	ALL
	3		W0161	025	22		34-21-11	ALL
	4		W0161	207R	24		34-21-11	ALL
	5		W0161	207B	24		34-21-11	ALL
	6		W0161	207Z			34-21-11	ALL
	7		W0161	213R	24		34-61-12	ALL
	8		W0161	213B	24		34-61-12	ALL
	9		W0161	213Z			34-61-12	ALL
	10		W0161	225R	24		22-13-11	ALL
	11		W0161	225B	24		22-13-11	ALL
	12		W0161	225Z			22-13-11	ALL
	13		W0161	212R	24		22-32-11	ALL
	14		W0161	212B	24		22-32-11	ALL
	15		W0161	212Z			22-32-11	ALL
	16		W0161	206R	24		34-21-11	ALL
	17		W0161	206B	24		34-21-11	ALL
	18		W0161	206Z			34-21-11	ALL
	19		W0161	218R	24		34-22-18	ALL
	20		W0161	218B	24		34-22-18	ALL
	21		W0161	218Z			34-22-18	ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31		W0161	217R	24		34-61-15	ALL
	32		W0161	217B	24		34-61-15	ALL
	33		W0161	217Z			34-61-15	ALL
	34		W0161	214R	24		32-42-11	ALL
	35		W0161	214B	24		32-42-11	ALL
	36		W0161	214Z			32-42-11	ALL
	37		W0161	101	24		34-21-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04700

Page 32

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04719P		AE0305/ /		PLUG- (continued)				ALL
	38		W0161	226R	24		22-21-21	ALL
	39		W0161	226B	24		22-21-21	ALL
	40		W0161	226Z			22-21-21	ALL
	41		W0161	227R	24		34-21-21	ALL
	42		W0161	227B	24		34-21-21	ALL
	43		W0161	227Z			34-21-21	ALL
	44	UNUSED						050-099, 151-152, 275-276
	44		W0161	228R	22		23-25-13	150, 153-155, 162-165
	44		W0161	228R	24		23-25-13	156-157, 166-199, 277-299
	45	UNUSED						050-099, 151-152, 275-276
	45		W0161	228B	22		23-25-13	150, 153-155, 162-165
	45		W0161	228B	24		23-25-13	156-157, 166-199, 277-299
	46	UNUSED						050-099, 151-152, 275-276
	46		W0161	228Z			23-25-13	150, 153-199, 277-299
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51		W0161	215R	24		34-22-38	ALL
	52		W0161	215B	24		34-22-38	ALL
	53		W0161	215Z			34-22-38	ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
D04720J		AF0204/ /		RCPT-P61				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	DK	W0062	57B	18		32-35-11	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8		W0062	55R	22		29-11-11	ALL
	9		W0062	63F	22		31-41-11	ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14		W0062	63C	22		79-32-11	ALL
	15		W0062	291	20		73-21-11	ALL

HOOKUP LIST
D280T132

91-21-51
Section D04700
Page 33
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04720J		AF0204/ /		RCPT-P61 (continued)				ALL
	16	FM	W0062	80V	16		73-21-11	ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21		W0062	836	20		27-23-11	ALL
	22		W0062	831	22		27-23-11	ALL
	23		W0062	835	20		27-23-11	ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27		W0062	62G	22		74-31-11	ALL
	28		W0062	62F	22		74-31-11	ALL
	29		W0062	62H	22		74-31-11	ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	DED		W0062	62FZ			74-31-11	ALL
	DED		W0062	62GZ			74-31-11	ALL
	DED		W0062	62HZ			74-31-11	ALL
	DED		W0062	831Z			27-23-11	ALL
	DED		W0062	835Z			27-23-11	ALL
	DED		W0062	836Z			27-23-11	ALL
D04720P		AF0204/ /		PLUG-P61				ALL
	1	UNUSED						ALL
	2		W0744	003	22		SPARE	ALL
	3	DL	W0744	055	18		32-35-11	ALL
	4	UNUSED						ALL
	5		W0744	006	22		SPARE	050-099
	5	UNUSED						150-199, 275-299

HOOKUP LIST
D280T132

91-21-51
Section D04700
Page 34
Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04720P		AF0204/ /		PLUG-P61 (continued)				ALL
	6		W0744	007	24		SPARE	050-099
	6		W0744	060	24		SPARE	150-199
	6	UNUSED						275-299
	7		W0744	008	24		SPARE	050-099
	7	UNUSED						150-199, 275-299
	8		W0744	009	22		29-11-11	ALL
	9		W0744	042	22		31-41-11	ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14		W0744	044	24		79-32-11	ALL
	15		W0744	093	20		73-21-11	ALL
	16	FL	W0744	094	16		73-21-11	ALL
	17		W0744	091Z			SPARE	050-099, 155-166
	17	UNUSED						150-154, 275-299
	17		W0744	091Z			73-21-11	167-199
	18	FL	W0744	091	16		SPARE	050-099, 155-199
	18	UNUSED						150-154, 275-299
	19		W0744	207B	24		SPARE	ALL
	20		W0744	207R	24		SPARE	ALL
	21	DL	W0744	028	18		27-23-11	ALL
	22		W0744	026	22		27-23-11	ALL
	23	DL	W0744	029	18		27-23-11	ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27		W0744	027	22		74-31-11	ALL
	28		W0744	039	22		74-31-11	ALL
	29		W0744	040	22		74-31-11	ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32		W0744	004	22		SPARE	ALL
	33		W0744	036	20		SPARE	ALL
	34		W0744	037	20		SPARE	ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D04700

Page 35

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04720P		AF0204/ /		PLUG-P61 (continued)				ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
D04721J		AE0306/ /		RCPT-E2-2				ALL
	1		W1533	201R	24		34-46-11	ALL
	2		W1533	201B	24		34-46-11	ALL
	3		W1533	201Z			34-46-11	ALL
	4	UNUSED						ALL
	5		W1533	002	22		SPARE	ALL
	6		W1533	003	22		SPARE	ALL
	7		W1533	004	22		SPARE	ALL
	8		W1533	005	22		SPARE	ALL
	9		W1533	006	22		SPARE	ALL
	10		W1533	212R	24		34-61-14	ALL
	11		W1533	212B	24		34-61-14	ALL
	12		W1533	212Z			34-61-14	ALL
	13	UNUSED						ALL
	14		W1533	007	22		SPARE	ALL
	15	UNUSED						ALL
	16		W1533	213R	24		SPARE	ALL
	17		W1533	213B	24		SPARE	ALL
	18		W1533	213Z			SPARE	ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D04721P		AE0306/ /		PLUG-E2-2				050-099
D04721P		AE0306/ /		PLUG E2-2				150-199, 275-299
	1		W0133	673R	24		34-46-11	ALL
	2		W0133	673B	24		34-46-11	ALL
	3		W0133	673Z			34-46-11	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D04700

Page 36

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04721P		AE0306/ /		PLUG-E2-2 (continued)				050-099
D04721P		AE0306/ /		PLUG E2-2 (continued)				150-199, 275-299
	10		W0133	599R	24		34-61-14	ALL
	11		W0133	599B	24		34-61-14	ALL
	12		W0133	599Z			34-61-14	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D04725J		AE0322/ /		RCPT-E2-3				050-099, 150-154, 275-299
D04725J		347/160/R 44		RCPT-E2-3				155-199
	1		W0691	001	22		31-31-11	ALL
	2		W0691	002	22		31-31-11	ALL
	3	UNUSED						050-099
	3		W0691	038	24		SPARE	150-199, 275-299
	4	UNUSED						ALL
	5		W0691	005	24		31-31-11	ALL
	6		W0691	006	24		31-31-11	ALL
	7		W0691	206Z			31-31-11	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10		W0691	202R	24		31-31-11	ALL
	11		W0691	202B	24		31-31-11	ALL
	12	UNUSED						ALL
	13		W0691	062	24		34-61-24	050-099, 155-199, 276-299
	13	UNUSED						150-154, 275
	14		W0691	204R	24		31-31-11	ALL
	15		W0691	204B	24		31-31-11	ALL
	16		W0691	205R	24		31-31-11	ALL
	17		W0691	205B	24		31-31-11	ALL
	18	UNUSED						ALL
	19	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D04700

Page 37

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04725J		AE0322/ /		RCPT-E2-3 (continued)				050-099, 150-154, 275-299
D04725J		347/160/R 44		RCPT-E2-3 (continued)				155-199
	20	UNUSED						ALL
	21		W0691	010	24		31-31-11	ALL
	22		W0691	011	22		31-31-11	ALL
	23		W0691	012	24		SPARE	050-099, 150-199
	23	UNUSED						275-299
	24		W0691	013	24		SPARE	050-099, 150-199
	24	UNUSED						275-299
	25		W0691	017	24		31-31-11	ALL
	26		W0691	202Z			31-31-11	ALL
	27		W0691	019	22		SPARE	ALL
	28		W0691	026	22		31-35-11	ALL
	29		W0691	204Z			31-31-11	ALL
	30		W0691	205Z			31-31-11	ALL
	31		W0691	016	24		SPARE	ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35		W0691	206R	24		31-31-11	ALL
	36		W0691	206B	24		31-31-11	ALL
	37		W0691	301R	24		31-31-19	ALL
	38		W0691	301B	24		31-31-19	ALL
	39		W0691	301Y	24		31-31-19	ALL
	40		W0691	301Z			31-31-19	ALL
	41	UNUSED						ALL
	42	UNUSED						050-099, 150-199
	42		W0691	207R	24		SPARE	275-299
	43	UNUSED						050-099, 150-199
	43		W0691	207B	24		SPARE	275-299
	44	UNUSED						050-099, 150-199
	44		W0691	207Z			SPARE	275-299
	45	UNUSED						050-099, 275-299
	45		W0691	FRC			SPARE	150-199
	46	UNUSED						050-099, 275-299
	46		W0691	027	24		SPARE	150-199
	47	UNUSED						050-099, 275-299
	47		W0691	028	24		SPARE	150-199
	48	UNUSED						050-099, 275-299
	48		W0691	029	24		SPARE	150-199
	49		W0691	032	24		31-31-22	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04700

Page 38

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04725J		AE0322/ /		RCPT-E2-3 (continued)				050-099, 150-154, 275-299
D04725J		347/160/R 44		RCPT-E2-3 (continued)				155-199
	50		W0691	208Z			31-35-11	ALL
	51		W0691	208R	24		31-35-11	ALL
	52		W0691	208B	24		31-35-11	ALL
	53	UNUSED						050-099, 275-299
	53		W0691	030	24		SPARE	150-199
	54	UNUSED						050-099, 275-299
	54		W0691	031	24		SPARE	150-199
	55		W0691	033	24		31-31-22	ALL
	CAP	Y	W0691	014	22		SPARE	ALL
	CAP	Y	W0691	015	22		SPARE	ALL
	CAP	Y	W0691	018	24		SPARE	ALL
			W0691	027Z			SPARE	150-199
			W0691	028Z			SPARE	150-199
			W0691	029Z			SPARE	150-199
			W0691	FRC			SPARE	150-199
D04725P		AE0322/ /		PLUG-E2-3				ALL
	1		W0135	075	22		31-31-11	ALL
	2		W0135	076	22		31-31-11	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W0135	078	24		31-31-11	ALL
	6		W0135	064	24		31-31-11	ALL
	7		W0135	219Z			31-31-11	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10		W0135	220R	24		31-31-11	ALL
	11		W0135	220B	24		31-31-11	ALL
	12	UNUSED						ALL
	13		W0135	855	24		34-61-24	050-099, 155-199, 276-299
	13	UNUSED						150-154, 275
	14		W0135	221R	24		31-31-11	ALL
	15		W0135	221B	24		31-31-11	ALL
	16		W0135	222R	24		31-31-11	ALL
	17		W0135	222B	24		31-31-11	ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21		W0135	021	24		31-31-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04700

Page 39

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04725P		AE0322/ /		PLUG-E2-3 (continued)				ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25		W0135	122	24		31-31-11	ALL
	26		W0135	220Z			31-31-11	ALL
	27	UNUSED						ALL
	28		W0135	782	24		31-35-11	ALL
	29		W0135	221Z			31-31-11	ALL
	30		W0135	222Z			31-31-11	ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35		W0135	219R	24		31-31-11	ALL
	36		W0135	219B	24		31-31-11	ALL
	37		W0135	305R	24		31-31-19	ALL
	38		W0135	305B	24		31-31-19	ALL
	39		W0135	305Y	24		31-31-19	ALL
	40		W0135	305Z			31-31-19	ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49		W0135	136	24		31-31-22	ALL
	50		W0135	561Z			31-35-11	ALL
	51		W0135	561R	24		31-35-11	ALL
	52		W0135	561B	24		31-35-11	ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55		W0135	182	24		31-31-22	ALL
	DED		W0135	855Z			34-61-24	050-099, 155-199, 276-299
D04726J		AF0204/ /		RCPT-P61				ALL
	1		W0062	63J	24		31-51-31	ALL
	2		W0062	64V	24		32-61-14	ALL
	3		W0062	64W	24		32-61-14	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04700

Page 40

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04726J		AF0204/ /		RCPT-P61 (continued)				ALL
	4		W0062	177	24		21-61-81	ALL
	5		W0062	179	24		21-61-81	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8		W0062	57L	24		32-42-11	ALL
	9		W0062	412R	22		26-18-12	ALL
	10		W0062	413R	22		26-18-12	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15		W0062	51K	24		21-58-14	ALL
	16		W0062	128	24		21-28-11	ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19		W0062	57A	24		32-09-11	ALL
	20		W0062	67D	24		32-42-11	ALL
	21		W0062	776R	22		26-18-11	ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25		W0062	54N	22		52-11-12	050-099, 150-199
	25		W0062	54N	20		52-11-12	275-299
	26		W0062	122	24		21-26-31	ALL
	27		W0062	123	24		21-26-31	ALL
	28		W0062	130	24		21-43-11	ALL
	29		W0062	129	24		21-43-11	ALL
	30		W0062	149	24		21-61-81	ALL
	31		W0062	316B	24		21-61-81	ALL
	32		W0062	316R	24		21-61-81	ALL
	33		W0062	316Y	24		21-61-81	ALL
	34	UNUSED						ALL
	35		W0062	05H	22		52-71-14	ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38		W0062	05E	22		52-71-11	ALL
	39		W0062	05F	22		52-71-12	ALL
	40		W0062	05G	22		52-71-13	ALL
	41		W0062	789R	22		26-18-11	ALL
	42	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D04700

Page 41

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04726J		AF0204/ /		RCPT-P61 (continued)				ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47		W0062	519	24		21-53-11	ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50		W0062	54R	24		29-31-11	ALL
	51		W0062	520	24		21-53-22	ALL
	52	UNUSED						ALL
	53		W0062	522	24		21-53-22	ALL
	54		W0062	523	24		21-53-22	ALL
	55		W0062	524	24		21-53-22	ALL
	56		W0062	51B	24		21-53-22	ALL
	57	UNUSED						ALL
	58	UNUSED						ALL
	59	UNUSED						ALL
	60	UNUSED						ALL
	61	UNUSED						ALL
D04726P		AF0204/ /		PLUG-P61				ALL
	1		W0510	113	24		31-51-31	ALL
	2		W0510	002	24		32-61-14	ALL
	3		W0510	003	24		32-61-14	ALL
	4		W0510	548	24		21-61-81	ALL
	5		W0510	549	24		21-61-81	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8		W0510	027	24		32-42-11	ALL
	9		W0510	500R	22		26-18-12	ALL
	10		W0510	501R	22		26-18-12	ALL
	11	UNUSED						050-099, 275-299
	11	DL	W0510	064	18		SPARE	150-199
	12	UNUSED						ALL
	13		W0510	151	24		SPARE	ALL
	14	UNUSED						ALL
	15		W0510	152	24		21-58-14	ALL
	16		W0510	518	24		21-28-11	ALL
	17	UNUSED						ALL
	18	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D04700

Page 42

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04726P		AF0204/ /		PLUG-P61 (continued)				ALL
	19		W0510	019	24		32-09-11	ALL
	20		W0510	185	24		32-42-11	ALL
	21		W0510	188R	22		26-18-11	ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25		W0510	712	22		52-11-12	050-099, 150-199
	25		W0510	712	20		52-11-12	275-299
	26		W0510	516	24		21-26-31	ALL
	27		W0510	517	24		21-26-31	ALL
	28		W0510	521	24		21-43-11	ALL
	29		W0510	520	24		21-43-11	ALL
	30		W0510	536	24		21-61-81	ALL
	31		W0510	308B	24		21-61-81	ALL
	32		W0510	308R	24		21-61-81	ALL
	33		W0510	308Y	24		21-61-81	ALL
	34		W0510	082	22		SPARE	ALL
	35		W0510	087	22		52-71-14	ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38		W0510	084	22		52-71-11	ALL
	39		W0510	085	22		52-71-12	ALL
	40		W0510	086	22		52-71-13	ALL
	41		W0510	095R	22		26-18-11	ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47		W0510	139	24		21-53-11	ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50		W0510	143	24		29-31-11	ALL
	51		W0510	156	24		21-53-22	ALL
	52	UNUSED						ALL
	53		W0510	158	24		21-53-22	ALL
	54		W0510	159	24		21-53-22	ALL
	55		W0510	160	24		21-53-22	ALL
	56		W0510	161	24		21-53-22	ALL
	57	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D04700

Page 43

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04726P		AF0204/ /		PLUG-P61 (continued)				ALL
	58	UNUSED						ALL
	59	UNUSED						ALL
	60	UNUSED						ALL
	61	UNUSED						ALL
D04727J		AL1003/ /		RCPT-L WW FWD INBD				ALL
	1		W0693	204R	24		31-31-13	ALL
	2		W0693	204B	24		31-31-13	ALL
	3		W0693	FRA			31-31-13	ALL
	4		W0693	201R	24		31-31-13	ALL
	5		W0693	201B	24		31-31-13	ALL
	6		W0693	202R	24		31-31-13	ALL
	7		W0693	202B	24		31-31-13	ALL
	8		W0693	203R	24		31-31-13	ALL
	9		W0693	203B	24		31-31-13	ALL
	10		W0693	004	20		SPARE	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
			W0693	201Z			31-31-13	ALL
			W0693	202Z			31-31-13	ALL
			W0693	203Z			31-31-13	ALL
			W0693	FRA			31-31-13	ALL
D04727P		AL1003/ /		PLUG-L WW FWD INBD				ALL
	1		W0533	204R	20		31-31-13	ALL
	2		W0533	204B	20		31-31-13	ALL
	3		W0533	FRA			31-31-13	ALL
	4		W0533	201R	20		31-31-13	ALL
	5		W0533	201B	20		31-31-13	ALL
	6		W0533	202R	20		31-31-13	ALL
	7		W0533	202B	20		31-31-13	ALL
	8		W0533	203R	20		31-31-13	ALL
	9		W0533	203B	20		31-31-13	ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D04700

Page 44

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04727P		AL1003/ /		PLUG-L WW FWD INBD (continued)				ALL
			W0533	201Z			31-31-13	ALL
			W0533	202Z			31-31-13	ALL
			W0533	203Z			31-31-13	ALL
			W0533	FRA			31-31-13	ALL
D04729J		AE0307/ /		RCPT-E2-3				ALL
	1		W0693	204R	24		31-31-13	ALL
	2		W0693	204B	24		31-31-13	ALL
	3		W0693	FRB			31-31-13	ALL
	4		W0693	201R	24		31-31-13	ALL
	5		W0693	201B	24		31-31-13	ALL
	6		W0693	202R	24		31-31-13	ALL
	7		W0693	202B	24		31-31-13	ALL
	8		W0693	203R	24		31-31-13	ALL
	9		W0693	203B	24		31-31-13	ALL
	10		W0693	004	20		SPARE	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
			W0693	201Z			31-31-13	ALL
			W0693	202Z			31-31-13	ALL
			W0693	203Z			31-31-13	ALL
			W0693	FRB			31-31-13	ALL
D04729P		AE0307/ /		PLUG-E2-3				ALL
	1		W0135	243R	24		31-31-13	ALL
	2		W0135	243B	24		31-31-13	ALL
	3		W0135	FRB			31-31-13	ALL
	4		W0135	240R	24		31-31-13	ALL
	5		W0135	240B	24		31-31-13	ALL
	6		W0135	242R	24		31-31-13	ALL
	7		W0135	242B	24		31-31-13	ALL
	8		W0135	241R	24		31-31-13	ALL
	9		W0135	241B	24		31-31-13	ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D04700

Page 45

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04729P		AE0307/ /		PLUG-E2-3 (continued)				ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
			W0135	240Z			31-31-13	ALL
			W0135	241Z			31-31-13	ALL
			W0135	242Z			31-31-13	ALL
			W0135	FRB			31-31-13	ALL
D04730J		AF0204/ /		RCPT-P61				ALL
	1		W0062	816	20		27-23-11	ALL
	2		W0062	815	20		27-23-11	ALL
	3		W0062	811	22		27-23-11	ALL
	4		W0062	826	20		27-13-11	ALL
	5		W0062	825	20		27-13-11	ALL
	6		W0062	821	22		27-13-11	ALL
	7	UNUSED						ALL
	8		W0062	775R	20		26-18-11	ALL
	9		W0062	53N	22		27-88-11	ALL
	10	UNUSED						ALL
D04730P		AF0204/ /		PLUG-P61				ALL
	1		W0746	023	18		27-23-11	ALL
	2		W0746	024	18		27-23-11	ALL
	3		W0746	025	22		27-23-11	ALL
	4		W0746	026	20		27-13-11	ALL
	5		W0746	027	20		27-13-11	ALL
	6		W0746	028	22		27-13-11	ALL
	7		W0746	039	24		SPARE	ALL
	8		W0746	040	24		26-18-11	ALL
	9		W0746	056	22		27-88-11	ALL
	10	UNUSED						ALL
D04731J		AE0307/ /		RCPT-E2-3				ALL
	1		W0695	001	22		31-31-15	ALL
	2		W0695	002	22		31-31-15	ALL
	3		W0695	003	22		31-31-15	ALL
	4		W0695	201R	24		31-31-15	050-099, 150-156, 162-166, 275-276
	4		W0695	301R	24		31-31-15	157, 167-199, 277-299
	5		W0695	201B	24		31-31-15	050-099, 150-156, 162-166, 275-276
	5		W0695	301B	24		31-31-15	157, 167-199, 277-299
	6		W0695	202R	24		31-31-15	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04700

Page 46

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04731J		AE0307/ /		RCPT-E2-3 (continued)				ALL
	7		W0695	202B	24		31-31-15	ALL
	8		W0695	203R	24		31-31-15	050-099, 150-156, 162-166, 275-276
	8		W0695	302R	24		31-31-15	157, 167-199, 277-299
	9		W0695	203B	24		31-31-15	050-099, 150-156, 162-166, 275-276
	9		W0695	302B	24		31-31-15	157, 167-199, 277-299
	10		W0695	010	22		31-31-15	ALL
	11		W0695	204R	24		31-31-15	ALL
	12		W0695	204B	24		31-31-15	ALL
	13		W0695	204Z			31-31-15	ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						150-199, 275-299
	17	UNUSED						150-156, 162-166, 275-276
	17		W0695	301Y	24		31-31-15	157, 167-199, 277-299
	18	UNUSED						150-156, 162-166, 275-276
	18		W0695	302Y	24		31-31-15	157, 167-199, 277-299
	19	UNUSED						150-199, 275-299
	20	UNUSED						150-199, 275-299
	21	UNUSED						150-199, 275-299
	22	UNUSED						150-199, 275-299
	23	UNUSED						150-199, 275-299
	24	UNUSED						150-199, 275-299
D04731P		AE0307/ /		PLUG-E2-3				ALL
	1		W0135	662	22		31-31-15	ALL
	2		W0135	665	22		31-31-15	ALL
	3		W0135	667	22		31-31-15	ALL
	4		W0135	509R	24		31-31-15	ALL
	5		W0135	509B	24		31-31-15	ALL
	6		W0135	512R	24		31-31-15	ALL
	7		W0135	512B	24		31-31-15	ALL
	8		W0135	513R	24		31-31-15	ALL
	9		W0135	513B	24		31-31-15	ALL
	10		W0135	116	22		31-31-15	ALL
	11		W0135	212R	24		31-31-15	ALL
	12		W0135	212B	24		31-31-15	ALL
	13		W0135	212Z			31-31-15	ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						150-199, 275-299

HOOKUP LIST
D280T132

91-21-51
Section D04700
Page 47
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04731P		AE0307/ /		PLUG-E2-3 (continued)				ALL
	17	UNUSED						150-156, 162-166, 275-276
	17		W0135	07A	20		31-31-15	157, 167-199, 277-299
	18	UNUSED						150-156, 162-166, 275-276
	18		W0135	09A	20		31-31-15	157, 167-199, 277-299
	19	UNUSED						150-199, 275-299
	20	UNUSED						150-199, 275-299
	21	UNUSED						150-199, 275-299
	22	UNUSED						150-199, 275-299
	23	UNUSED						150-199, 275-299
	24	UNUSED						150-199, 275-299
D04732J		AF0204/ /		RCPT-P61				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W0062	66N	24		73-33-11	ALL
	4		W0062	62E	22		SPARE	ALL
	5		W0062	62D	22		74-31-11	ALL
	6		W0062	564	22		74-31-11	ALL
	7		W0062	54D	24		27-51-11	ALL
	8		W0062	53F	22		27-58-31	ALL
	9	UNUSED						ALL
	10		W0062	63A	24		78-36-11	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19		W0062	57T	22		32-46-11	ALL
	20		W0062	62K	24		75-23-11	ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28		W0062	52P	24		27-58-11	ALL

HOOKUP LIST
D280T132

91-21-51
Section D04700
Page 48
Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04732J		AF0204/ /		RCPT-P61 (continued)				ALL
	29		W0062	52U	24		27-58-11	ALL
	30		W0062	52W	24		27-58-11	ALL
	31		W0062	52X	24		27-58-11	ALL
	32		W0062	52Y	24		27-58-11	ALL
	33		W0062	52Z	24		27-58-11	ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
D04732P		AF0204/ /		PLUG-P61				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W0746	071	24		73-33-11	ALL
	4		W0746	045	22		74-31-11	ALL
	5		W0746	046	22		74-31-11	ALL
	6		W0746	047	22		74-31-11	ALL
	7		W0746	054	24		27-51-11	ALL
	8		W0746	055	22		27-58-31	ALL
	9	UNUSED						ALL
	10		W0746	029	24		78-36-11	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19		W0746	058	22		32-46-11	ALL
	20		W0746	007	24		75-23-11	ALL
	21	UNUSED						ALL
	22	UNUSED						050-099
	22		W0746	210B	20		SPARE	150-199, 275-299
	23	UNUSED						050-099
	23		W0746	210R	20		SPARE	150-199, 275-299

HOOKUP LIST
D280T132

91-21-51
Section D04700
Page 49
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04732P		AF0204/ /		PLUG-P61 (continued)				ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27		W0746	022	22		SPARE	ALL
	28		W0746	053	24		27-58-11	ALL
	29		W0746	052	24		27-58-11	ALL
	30		W0746	051	24		27-58-11	ALL
	31		W0746	050	24		27-58-11	ALL
	32		W0746	049	24		27-58-11	ALL
	33		W0746	048	24		27-58-11	ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
D04734J		0139/194/L010		PLUG				ALL
	1		W0758	FRY			73-21-13	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W0758	302Y	24		73-21-13	ALL
	7		W0758	302B	24		73-21-13	ALL
	8		W0758	302R	24		73-21-13	ALL
	9	UNUSED						ALL
	10		W0758	FRX			73-21-13	ALL
	11		W0758	205B	24		73-21-13	ALL
	12		W0758	205R	24		73-21-13	ALL
			W0758	142	20		73-21-13	050-099, 150-156, 162-166, 275-276
			W0758	143	20		73-21-13	050-099, 150-156, 162-166, 275-276
			W0758	205Z			73-21-13	ALL
			W0758	302Z			73-21-13	ALL
			W0758	FRX			73-21-13	ALL
			W0758	FRY			73-21-13	ALL
			W0758	FR2			73-21-13	157, 167-199, 277-299
			W0758	FR3			73-21-13	157, 167-199, 277-299

HOOKUP LIST

D280T132

91-21-51

Section D04700

Page 50

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04735J		AE0306/ /		RCPT-E2-2				050-099, 150-154, 275-299
D04735J		355/125/R 13		RCPT-E2-2				155-199
	1		W1633	001	24		23-51-12	ALL
	2		W1633	002	24		23-51-12	ALL
	3		W1633	001Z			23-51-12	ALL
	4		W1633	002Z			23-51-12	ALL
	5		W1633	201R	24		23-51-12	ALL
	6		W1633	201B	24		23-51-12	ALL
	7		W1633	201Z			23-51-12	ALL
	8		W1633	202R	24		34-61-15	ALL
	9		W1633	202B	24		34-61-15	ALL
	10		W1633	203R	24		34-61-15	ALL
	11		W1633	203B	24		34-61-15	ALL
	12		W1633	203Z			34-61-15	ALL
	13		W1633	204B	24		34-31-11	ALL
	14		W1633	204R	24		34-31-11	ALL
	15		W1633	204Z			34-31-11	ALL
	16		W1633	205R	24		34-12-12	ALL
	17		W1633	205B	24		34-12-12	ALL
	18		W1633	205Z			34-12-12	ALL
	19		W1633	206R	24		34-61-15	ALL
	20		W1633	206B	24		34-61-15	ALL
	21		W1633	206Z			34-61-15	ALL
	22		W1633	207R	24		22-32-11	ALL
	23		W1633	207B	24		22-32-11	ALL
	24		W1633	207Z			22-32-11	ALL
	25		W1633	208R	24		34-61-12	ALL
	26		W1633	208B	24		34-61-12	ALL
	27		W1633	208Z			34-61-12	ALL
	28		W1633	209R	24		34-61-12	ALL
	29		W1633	209B	24		34-61-12	ALL
	30		W1633	209Z			34-61-12	ALL
	31		W1633	210R	24		34-61-14	ALL
	32		W1633	210B	24		34-61-14	ALL
	33		W1633	210Z			34-61-14	ALL
	34		W1633	005	24		34-55-11	ALL
	35		W1633	220R	24		31-36-11	ALL
	36		W1633	220B	24		31-36-11	ALL
	37		W1633	220Z			31-36-11	ALL
	38		W1633	212R	24		23-22-11	ALL
	39	UNUSED						050-099, 155-199, 275-299

HOOKUP LIST

D280T132

91-21-51

Section D04700

Page 51

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04735J		AE0306/ /		RCPT-E2-2 (continued)				050-099, 150-154, 275-299
D04735J		355/125/R 13		RCPT-E2-2 (continued)				155-199
	39		W1633	004	24		SPARE	150-154
	40		W1633	212Z			23-22-11	ALL
	41		W1633	212B	24		23-22-11	ALL
	42		W1633	215R	24		31-35-11	ALL
	43		W1633	215B	24		31-35-11	ALL
	44		W1633	215Z			31-35-11	ALL
	45		W1633	219R	24		31-35-13	ALL
	46		W1633	219B	24		31-35-13	ALL
	47		W1633	219Z			31-35-13	ALL
	48		W1633	222Z			23-22-12	ALL
	49		W1633	202Z			34-61-15	ALL
	50		W1633	222R	24		23-22-12	ALL
	51		W1633	213R	24		34-61-12	ALL
	52		W1633	213B	24		34-61-12	ALL
	53		W1633	213Z			34-61-12	ALL
	54		W1633	222B	24		23-22-12	ALL
	55		W1633	018	22		34-61-14	ALL
D04735P		AE0306/ /		PLUG-E2-2				ALL
	1		W0133	266R	24		23-51-12	ALL
	2		W0133	265R	24		23-51-12	ALL
	3		W0133	266B	24		23-51-12	ALL
	4		W0133	265B	24		23-51-12	ALL
	5		W0133	302R	24		23-51-12	ALL
	6		W0133	302B	24		23-51-12	ALL
	7		W0133	302Y	24		23-51-12	ALL
	8		W0133	504R	24		34-61-15	ALL
	9		W0133	504B	24		34-61-15	ALL
	10		W0133	505R	24		34-61-15	ALL
	11		W0133	505B	24		34-61-15	ALL
	12		W0133	505Z			34-61-15	ALL
	13		W0133	268B	24		34-51-11	ALL
	14		W0133	268R	24		34-51-11	ALL
	15		W0133	268Z			34-51-11	ALL
	16		W0133	243R	24		34-12-12	ALL
	17		W0133	243B	24		34-12-12	ALL
	18		W0133	243Z			34-12-12	ALL
	19		W0133	674R	24		34-61-15	ALL
	20		W0133	674B	24		34-61-15	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04700

Page 52

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04735P		AE0306/ /		PLUG-E2-2 (continued)				ALL
	21		W0133	674Z			34-61-15	ALL
	22		W0133	241R	24		22-32-11	ALL
	23		W0133	241B	24		22-32-11	ALL
	24		W0133	241Z			22-32-11	ALL
	25		W0133	209R	24		34-61-12	ALL
	26		W0133	209B	24		34-61-12	ALL
	27		W0133	209Z			34-61-12	ALL
	28		W0133	210R	24		34-61-12	ALL
	29		W0133	210B	24		34-61-12	ALL
	30		W0133	210Z			34-61-12	ALL
	31		W0133	226R	24		34-61-14	ALL
	32		W0133	226B	24		34-61-14	ALL
	33		W0133	226Z			34-61-14	ALL
	34		W0133	090	24		34-55-11	ALL
	35		W0133	592R	24		31-36-11	ALL
	36		W0133	592B	24		31-36-11	ALL
	37		W0133	592Z			31-36-11	ALL
	38		W0133	596R	24		23-22-11	ALL
	39	UNUSED						ALL
	40		W0133	596Z			23-22-11	ALL
	41		W0133	596B	24		23-22-11	ALL
	42		W0133	556R	24		31-35-11	ALL
	43		W0133	556B	24		31-35-11	ALL
	44		W0133	556Z			31-35-11	ALL
	45		W0133	581R	24		31-35-13	ALL
	46		W0133	581B	24		31-35-13	ALL
	47		W0133	581Z			31-35-13	ALL
	48		W0133	530Z			23-22-12	ALL
	49		W0133	504Z			34-61-15	ALL
	50		W0133	530R	24		23-22-12	ALL
	51		W0133	240R	24		34-61-12	ALL
	52		W0133	240B	24		34-61-12	ALL
	53		W0133	240Z			34-61-12	ALL
	54		W0133	530B	24		23-22-12	ALL
	55		W0133	191	22		34-61-14	ALL
D04736J		139/194/R 10		RECP				ALL
	1		W0782	FRY			73-21-13	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D04700

Page 53

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04736J		139/194/R 10		RECP (continued)				ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W0782	302R	24		73-21-13	ALL
	7		W0782	302B	24		73-21-13	ALL
	8		W0782	302Y	24		73-21-13	ALL
	9	UNUSED						ALL
	10		W0782	FRX			73-21-13	ALL
	11		W0782	203B	24		73-21-13	ALL
	12		W0782	203R	24		73-21-13	ALL
			W0782	541	20		73-21-13	050-099, 150-156, 162-166, 275-276
			W0782	542	20		73-21-13	050-099, 150-156, 162-166, 275-276
			W0782	203Z			73-21-13	ALL
			W0782	302Z			73-21-13	ALL
			W0782	FRX			73-21-13	ALL
			W0782	FRY			73-21-13	ALL
			W0782	FR2			73-21-13	157, 167-199, 277-299
			W0782	FR3			73-21-13	157, 167-199, 277-299
D04737J		AE0306/ /		RCPT-E2-5				050-099, 150-154, 275-299
D04737J		355/125/R 13		RCPT-E2-5				155-199
	1		W1633	001	24		23-51-12	ALL
	2		W1633	002	24		23-51-12	ALL
	3		W1633	001Z			23-51-12	ALL
	4		W1633	002Z			23-51-12	ALL
	5		W1633	201R	24		23-51-12	ALL
	6		W1633	201B	24		23-51-12	ALL
	7		W1633	201Z			23-51-12	ALL
	8		W1633	202R	24		34-61-15	ALL
	9		W1633	202B	24		34-61-15	ALL
	10		W1633	203R	24		34-61-15	ALL
	11		W1633	203B	24		34-61-15	ALL
	12		W1633	203Z			34-61-15	ALL
	13	UNUSED						ALL
	14		W1633	003	24		23-51-13	ALL
	15		W1633	003Z			23-51-13	ALL
	16		W1633	233Z			23-22-15	050-099, 155-199, 275-299
	16		W1633	004	24		SPARE	150-154
	17		W1633	006	24		SPARE	ALL
	18		W1633	212R	24		23-22-11	ALL
	19		W1633	212B	24		23-22-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04700

Page 54

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04737J		AE0306/ /		RCPT-E2-5 (continued)				050-099, 150-154, 275-299
D04737J		355/125/R 13		RCPT-E2-5 (continued)				155-199
	20		W1633	212Z			23-22-11	ALL
	21		W1633	016	24		23-51-13	ALL
	22		W1633	016Z			23-51-13	ALL
	23		W1633	202Z			34-61-15	ALL
	24		W1633	215R	24		31-35-11	ALL
	25		W1633	215B	24		31-35-11	ALL
	26		W1633	215Z			31-35-11	ALL
	27		W1633	222R	24		23-22-12	ALL
	28		W1633	222B	24		23-22-12	ALL
	29		W1633	222Z			23-22-12	ALL
	30		W1633	220R	24		31-36-11	ALL
	31		W1633	220B	24		31-36-11	ALL
	32		W1633	220Z			31-36-11	ALL
	33		W1633	219R	24		31-35-13	ALL
	34		W1633	219B	24		31-35-13	ALL
	35		W1633	219Z			31-35-13	ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						050-099, 155-199, 275-299
	39		W1633	233R	24		23-22-15	150-154
	40	UNUSED						050-099, 155-199, 275-299
	40		W1633	233B	24		23-22-15	150-154
	41	UNUSED						050-099, 155-199, 275-299
	41		W1633	233Z			23-22-15	150-154
	42	UNUSED						050-099, 155-199, 275-299
	43	UNUSED						050-099, 155-199, 275-299
	44	UNUSED						050-099, 155-199, 275-299
	45	UNUSED						050-099, 155-199, 275-299
	46	UNUSED						050-099, 155-199, 275-299
	47	UNUSED						050-099, 155-199, 275-299
	48	UNUSED						050-099, 155-199, 275-299
	49	UNUSED						050-099, 155-199, 275-299
	50	UNUSED						050-099, 155-199, 275-299
	51	UNUSED						050-099, 155-199, 275-299
	52	UNUSED						050-099, 155-199, 275-299
	53	UNUSED						050-099, 155-199, 275-299
	54		W1633	233R	24		23-22-15	050-099, 155-199, 275-299
	55		W1633	233B	24		23-22-15	050-099, 155-199, 275-299

HOOKUP LIST

D280T132

91-21-51

Section D04700

Page 55

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04737P		AE0306/ /		PLUG-E2-5				ALL
	1		W0139	233R	24		23-51-12	ALL
	2		W0139	234R	24		23-51-12	ALL
	3		W0139	233B	24		23-51-12	ALL
	4		W0139	234B	24		23-51-12	ALL
	5		W0139	305R	24		23-51-12	ALL
	6		W0139	305Y	24		23-51-12	ALL
	7		W0139	305B	24		23-51-12	ALL
	8	UNUSED						050-099
	8		W0139	260R	24		34-61-15	150-199, 275-299
	9	UNUSED						050-099
	9		W0139	260B	24		34-61-15	150-199, 275-299
	10		W0139	285R	24		23-22-12	ALL
	11		W0139	285B	24		23-22-12	ALL
	12		W0139	285Z			23-22-12	ALL
	13	UNUSED						ALL
	14		W0139	254R	24		23-51-13	ALL
	15		W0139	254B	24		23-51-13	ALL
	16		W0139	658Z			23-22-15	ALL
	17	UNUSED						ALL
	18		W0139	287R	24		23-22-11	ALL
	19		W0139	287B	24		23-22-11	ALL
	20		W0139	287Z			23-22-11	ALL
	21		W0139	256R	24		23-51-13	ALL
	22		W0139	256B	24		23-51-13	ALL
	23	UNUSED						050-099
	23		W0139	260Z			34-61-15	150-199, 275-299
	24		W0139	220R	24		31-35-11	ALL
	25		W0139	220B	24		31-35-11	ALL
	26		W0139	220Z			31-35-11	ALL
	27		W0139	270R	24		23-22-12	ALL
	28		W0139	270B	24		23-22-12	ALL
	29		W0139	270Z			23-22-12	ALL
	30		W0139	281R	24		31-36-11	ALL
	31		W0139	281B	24		31-36-11	ALL
	32		W0139	281Z			31-36-11	ALL
	33		W0139	280R	24		31-35-13	ALL
	34		W0139	280B	24		31-35-13	ALL
	35		W0139	280Z			31-35-13	ALL
	36	UNUSED						ALL
	37	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D04700

Page 56

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04737P		AE0306/ /		PLUG-E2-5 (continued)				ALL
	38	UNUSED						ALL
	39	UNUSED						050-099, 155-199, 275-299
	39		W0139	658R	24		23-22-15	150-154
	40	UNUSED						050-099, 155-199, 275-299
	40		W0139	658B	24		23-22-15	150-154
	41	UNUSED						ALL
	42	UNUSED						050-099, 155-199, 275-299
	43	UNUSED						050-099, 155-199, 275-299
	44	UNUSED						050-099, 155-199, 275-299
	45	UNUSED						050-099, 155-199, 275-299
	46	UNUSED						050-099, 155-199, 275-299
	47	UNUSED						050-099, 155-199, 275-299
	48	UNUSED						050-099, 155-199, 275-299
	49	UNUSED						050-099, 155-199, 275-299
	50	UNUSED						050-099, 155-199, 275-299
	51	UNUSED						050-099, 155-199, 275-299
	52	UNUSED						050-099, 155-199, 275-299
	53	UNUSED						050-099, 155-199, 275-299
	54		W0139	658R	24		23-22-15	050-099, 155-199, 275-299
	55		W0139	658B	24		23-22-15	050-099, 155-199, 275-299
D04738J		AF0204/ /		RCPT-P61				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W0066	66N	24		73-33-11	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18		W0066	67D	24		32-42-12	ALL

HOOKUP LIST
D280T132

91-21-51
Section D04700
Page 57
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04738J		AF0204/ /		RCPT-P61 (continued)				ALL
	19		W0066	57R	24		32-42-12	ALL
	20		W0066	57Z	24		32-42-12	ALL
	21		W0066	58A	24		32-42-12	ALL
	22	UNUSED						ALL
	23		W0066	58C	24		32-42-12	ALL
	24		W0066	58D	24		32-42-12	ALL
	25		W0066	57Y	24		32-42-12	ALL
	26		W0066	57X	24		32-42-12	ALL
	27		W0066	57S	24		32-42-12	ALL
	28		W0066	57T	24		32-42-12	ALL
	29		W0066	57U	24		32-42-12	ALL
	30		W0066	57V	24		32-42-12	ALL
	31		W0066	57W	24		32-42-12	ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50		W0066	58B	24		32-42-12	ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
D04738P		AF0204/ /		PLUG-P61				ALL
	1	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D04700
Page 58
Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04738P		AF0204/ /		PLUG-P61 (continued)				ALL
	2	UNUSED						ALL
	3		W0766	088	24		73-33-11	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18		W0766	065	24		32-42-12	ALL
	19		W0766	066	24		32-42-12	ALL
	20		W0766	074	24		32-42-12	ALL
	21		W0766	076	24		32-42-12	ALL
	22	UNUSED						ALL
	23		W0766	078	24		32-42-12	ALL
	24		W0766	075	24		32-42-12	ALL
	25		W0766	073	24		32-42-12	ALL
	26		W0766	072	24		32-42-12	ALL
	27		W0766	067	24		32-42-12	ALL
	28		W0766	068	24		32-42-12	ALL
	29		W0766	069	24		32-42-12	ALL
	30		W0766	070	24		32-42-12	ALL
	31		W0766	071	24		32-42-12	ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D04700
Page 59
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04738P		AF0204/ /		PLUG-P61 (continued)				ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50		W0766	077	24		32-42-12	ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
D04741J		AE0307/ /		RCPT-E2-3				ALL
	1		W0713	001	22		31-31-11	ALL
	2		W0713	002	22		31-31-11	ALL
	3	UNUSED						ALL
	4		W0713	004	24		31-31-11	ALL
	5		W0713	202Z			31-31-11	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8		W0713	202R	24		31-31-11	ALL
	9		W0713	202B	24		31-31-11	ALL
	10		W0713	203R	24		31-31-11	ALL
	11		W0713	203B	24		31-31-11	ALL
	12		W0713	005	24		31-31-11	ALL
	13		W0713	009	22		SPARE	ALL
	14		W0713	010	22		SPARE	ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21		W0713	203Z			31-31-11	ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D04700

Page 60

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04741P		AE0307/ /		PLUG-E2-3				ALL
	1		W0135	099	22		31-31-11	ALL
	2		W0135	102	22		31-31-11	ALL
	3	UNUSED						ALL
	4		W0135	078	24		31-31-11	ALL
	5		W0135	218Z			31-31-11	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8		W0135	218R	24		31-31-11	ALL
	9		W0135	218B	24		31-31-11	ALL
	10		W0135	224R	24		31-31-11	ALL
	11		W0135	224B	24		31-31-11	ALL
	12		W0135	030	24		31-31-11	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21		W0135	224Z			31-31-11	ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D04743J		AE0209/ /		RCPT-P36				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W0184	195	24		33-16-14	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9		W0184	769	22		34-12-11	ALL
	10		W0184	770	22		34-12-11	ALL
	11		W0184	771	22		34-12-11	ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D04700
Page 61
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04743J		AE0209/ /		RCPT-P36 (continued)				ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19		W0184	11J	22		32-45-11	050-099, 150-199
	19	UNUSED						275-299
	20		W0184	50R	22		32-45-11	050-099, 150-199
	20	UNUSED						275-299
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D04743P		AE0209/ /		PLUG-P36				ALL
	1	UNUSED						ALL
	2		W0407	002	22		SPARE	ALL
	3		W0407	003	22		SPARE	ALL
	4		W0407	004	24		33-16-14	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9		W0407	009	22		34-12-11	ALL
	10		W0407	010	22		34-12-11	ALL
	11		W0407	011	22		34-12-11	ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19		W0407	015	22		32-45-11	050-099, 150-199
	19	UNUSED						275-299
	20		W0407	017	22		32-45-11	050-099, 150-199
	20	UNUSED						275-299
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D04700

Page 62

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04744J		AW0601/ /		RCPT-P28				ALL
	1		W1056	028	18		28-21-11	ALL
	2		W1056	034	18		28-21-13	ALL
	3		W1056	035	18		28-21-13	ALL
	4		W1056	053	18		28-21-11	ALL
	5		W1056	072	18		28-21-11	ALL
	6		W1056	073	18		28-41-11	ALL
	7		W1056	059	18		28-41-11	ALL
	8		W1056	064	18		28-21-12	ALL
	9		W1056	066	18		28-21-12	ALL
	10		W1056	001	18		28-26-11	ALL
	11		W1056	033	18		28-21-11	ALL
	12		W1056	049	18		28-21-13	ALL
	13		W1056	050	18		28-21-13	ALL
	14		W1056	057	18		28-21-11	ALL
	15	UNUSED						ALL
	16		W1056	068	18		28-21-12	ALL
	17		W1056	069	18		28-41-12	ALL
	18	UNUSED						ALL
	19		W1056	070	18		28-21-11	ALL
	20	UNUSED						ALL
	21		W1056	031	18		28-21-11	ALL
	22		W1056	043	18		28-21-13	ALL
	23		W1056	044	18		28-21-13	ALL
	24		W1056	055	18		28-21-11	ALL
	25		W1056	401B	20		28-21-11	ALL
	26		W1056	401G	20		28-21-11	ALL
	27		W1056	401R	20		28-21-11	ALL
	28		W1056	401Y	20		28-21-11	ALL
	29		W1056	061	18		28-21-11	ALL
	30	UNUSED						ALL
D04744P		AW0601/ /		PLUG-P28				ALL
	1		W0472	012	20		28-21-11	ALL
	2		W0472	025	20		28-21-13	ALL
	3		W0472	014	20		28-21-13	ALL
	4		W0472	015	20		28-21-11	ALL
	5		W0472	001	20		28-21-11	ALL
	6		W0472	037	20		28-41-11	ALL
	7		W0472	038	20		28-41-11	ALL
	8		W0472	002	20		28-21-12	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04700

Page 63

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04744P		AW0601/ /		PLUG-P28 (continued)				ALL
	9		W0472	003	20		28-21-12	ALL
	10		W0472	034	20		28-26-11	ALL
	11		W0472	018	20		28-21-11	ALL
	12		W0472	019	20		28-21-13	ALL
	13		W0472	020	20		28-21-13	ALL
	14		W0472	021	20		28-21-11	ALL
	15	UNUSED						ALL
	16		W0472	004	18		28-21-12	ALL
	17		W0472	008	18		28-41-12	ALL
	18	UNUSED						ALL
	19		W0472	007	18		28-21-11	ALL
	20	UNUSED						ALL
	21		W0472	024	20		28-21-11	ALL
	22		W0472	013	20		28-21-13	ALL
	23		W0472	026	20		28-21-13	ALL
	24		W0472	027	20		28-21-11	ALL
	25		W0472	401B	20		28-21-11	ALL
	26		W0472	401G	20		28-21-11	ALL
	27		W0472	401R	20		28-21-11	ALL
	28		W0472	401Y	20		28-21-11	ALL
	29		W0472	009	18		28-21-11	ALL
	30	UNUSED						ALL
D04745J		AE0224/ /		RCPT-P37				ALL
	1	UNUSED						ALL
	2		W0198	11A	22		32-45-11	050-099, 150-199 275-299
	2	UNUSED						275-299
	3		W0198	11B	22		32-45-11	050-099, 150-199 275-299
	3	UNUSED						275-299
	4		W0198	205R	24		32-42-11	ALL
	5		W0198	205B	24		32-42-11	ALL
	6		W0198	205Z			32-42-11	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10		W0198	207R	20		32-45-12	050-099, 150-199 275-299
	10	UNUSED						275-299
	11		W0198	207B	20		32-45-12	050-099, 150-199 275-299
	11	UNUSED						275-299
	12		W0198	207Z			32-45-12	050-099, 150-199

HOOKUP LIST

D280T132

91-21-51

Section D04700

Page 64

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04745J		AE0224/ /		RCPT-P37 (continued)				ALL
	12	UNUSED						275-299
	13		W0198	200R	20		32-45-12	050-099, 150-199
	13	UNUSED						275-299
	14		W0198	200B	20		32-45-12	050-099, 150-199
	14	UNUSED						275-299
	15		W0198	200Z			32-45-12	050-099, 150-199
	15	UNUSED						275-299
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D04745P		AE0224/ /		PLUG-P37				ALL
	1		W0407	001	22		SPARE	ALL
	2		W0407	016	22		32-45-11	050-099, 150-199
	2	UNUSED						275-299
	3		W0407	017	22		32-45-11	050-099, 150-199
	3	UNUSED						275-299
	4		W0407	209R	24		32-42-11	ALL
	5		W0407	209B	24		32-42-11	ALL
	6		W0407	209Z			32-42-11	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10		W0407	207R	20		32-45-12	050-099, 150-199
	10	UNUSED						275-299
	11		W0407	207B	20		32-45-12	050-099, 150-199
	11	UNUSED						275-299
	12		W0407	207Z			32-45-12	050-099, 150-199
	12	UNUSED						275-299
	13		W0407	210R	20		32-45-12	050-099, 150-199
	13	UNUSED						275-299
	14		W0407	210B	20		32-45-12	050-099, 150-199
	14	UNUSED						275-299
	15		W0407	210Z			32-45-12	050-099, 150-199

HOOKUP LIST

D280T132

91-21-51

Section D04700

Page 65

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04745P		AE0224/ /		PLUG-P37 (continued)				ALL
	15	UNUSED						275-299
	16	UNUSED						ALL
	17	UNUSED						ALL
	18		W0407	208R	24		SPARE	ALL
	19		W0407	208B	24		SPARE	ALL
	20		W0407	208Z			SPARE	ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D04746J		AW0601/ /		RCPT-P28				ALL
	1		W1056	085	18		28-41-11	ALL
	2		W1056	303Y	20		28-41-11	ALL
	3		W1056	202B	20		28-41-11	ALL
	4		W1056	202R	20		28-41-11	ALL
	5		W1056	303B	20		28-41-11	ALL
	6		W1056	303R	20		28-41-11	ALL
	7		W1056	011	18		28-26-11	ALL
	8		W1056	010	18		28-26-11	ALL
	9		W1056	062	18		28-21-11	ALL
	10		W1056	063	18		28-21-11	ALL
	11		W1056	082	18		28-41-11	ALL
	12		W1056	302Y	20		28-41-11	ALL
	13		W1056	208B	20		28-41-11	ALL
	14		W1056	208R	20		28-41-11	ALL
	15		W1056	302B	20		28-41-11	ALL
	16		W1056	302R	20		28-41-11	ALL
	17		W1056	021	18		28-26-11	ALL
	18		W1056	020	18		28-26-11	ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22		W1056	301Y	20		28-41-11	ALL
	23		W1056	205B	20		28-41-11	ALL
	24		W1056	205R	20		28-41-11	ALL
	25		W1056	301B	20		28-41-11	ALL
	26		W1056	301R	20		28-41-11	ALL
	27	UNUSED						ALL
	28	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D04700

Page 66

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04746J		AW0601/ /		RCPT-P28 (continued)				ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
D04746P		AW0601/ /		PLUG-P28				ALL
	1		W0472	040	20		28-41-11	ALL
	2		W0472	303Y	20		28-41-11	ALL
	3		W0472	203B	20		28-41-11	ALL
	4		W0472	203R	20		28-41-11	ALL
	5		W0472	303B	20		28-41-11	ALL
	6		W0472	303R	20		28-41-11	ALL
	7		W0472	010	20		28-26-11	ALL
	8		W0472	011	20		28-26-11	ALL
	9		W0472	216B	20		28-21-11	ALL
	10		W0472	216R	20		28-21-11	ALL
	11		W0472	039	20		28-41-11	ALL
	12		W0472	302Y	20		28-41-11	ALL
	13		W0472	206B	20		28-41-11	ALL
	14		W0472	206R	20		28-41-11	ALL
	15		W0472	302B	20		28-41-11	ALL
	16		W0472	302R	20		28-41-11	ALL
	17		W0472	016	20		28-26-11	ALL
	18		W0472	017	20		28-26-11	ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22		W0472	301Y	20		28-41-11	ALL
	23		W0472	209B	20		28-41-11	ALL
	24		W0472	209R	20		28-41-11	ALL
	25		W0472	301B	20		28-41-11	ALL
	26		W0472	301R	20		28-41-11	ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
D04751J		AE0307/ /		PLUG-E1-2				ALL
	1		W0721	001	22		23-22-11	ALL
	2	UNUSED						050-099
	2		W0721	002	24		SPARE	150-199, 275-278
	2		W0721	002	24		23-22-11	280-299

HOOKUP LIST
D280T132

91-21-51
Section D04700
Page 67
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04751J		AE0307/ /		PLUG-E1-2 (continued)				ALL
	3	UNUSED						050-099
	3		W0721	003	24		SPARE	150-199, 275-278
	3		W0721	003	24		23-22-11	280-299
	4	UNUSED						050-099
	4		W0721	004	24		SPARE	150-199, 275-299
	5	UNUSED						050-099
	5		W0721	005	24		SPARE	150-199, 275-299
	6		W0721	006	22		SPARE	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D04751P		AE0307/ /		PLUG-E1-2				ALL
	1		W1090	010	22		23-22-11	ALL
	2	UNUSED						050-099
	2		W1090	005	22		SPARE	150-199, 275-299
	3	UNUSED						050-099
	3		W1090	018	22		SPARE	150-199, 275-299
	4	UNUSED						050-099
	4		W1090	019	22		SPARE	150-199, 275-299
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D04753J		AE0319/ /		RCPT-E1-6				ALL
	1		W0264	036	12		34-21-11	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
D04753P		AE0319/ /		PLUG-				ALL
	1		W0161	021	12		34-21-11	ALL

HOOKUP LIST
D280T132



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04753P		AE0319/ /		PLUG- (continued)				ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
D04754J		AF0204/ /		RCPT-P61				ALL
	1		W0066	62F	22		74-31-21	ALL
	2		W0066	62H	22		74-31-21	ALL
	3		W0066	62G	22		74-31-21	ALL
	4	DK	W0066	55K	18		27-81-21	ALL
	5		W0066	57D	22		32-31-11	ALL
	6		W0066	57C	22		32-31-11	ALL
	7		W0066	63C	22		79-32-11	ALL
	8		W0066	57H	24		32-41-11	ALL
	9		W0066	191	20		73-21-11	ALL
	10		W0066	63J	22		31-41-17	ALL
	11		W0066	63F	22		31-41-11	ALL
	12	FM	W0066	80A	16		73-21-11	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16		W0066	55R	22		29-11-21	ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21		W0066	32A	24		49-72-11	050-099, 162-199, 275-299
	21	UNUSED						150-157
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29		W0066	64E	20		78-34-21	ALL
	30		W0066	64EZ			78-34-21	ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D04700
Page 69
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04754J		AF0204/ /		RCPT-P61 (continued)				ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	DED		W0066	62FZ			74-31-21	ALL
	DED		W0066	62GZ			74-31-21	ALL
	DED		W0066	62HZ			74-31-21	ALL
D04754P		AF0204/ /		PLUG-P61				ALL
	1		W0764	029	22		74-31-21	ALL
	2		W0764	030	22		74-31-21	ALL
	3		W0764	021	22		74-31-21	ALL
	4	DL	W0764	031	18		27-81-21	ALL
	5		W0764	036	22		32-31-11	ALL
	6		W0764	037	22		32-31-11	ALL
	7		W0764	053	24		79-32-11	ALL
	8		W0764	038	24		32-41-11	ALL
	9		W0764	093	20		73-21-11	ALL
	10		W0764	042	22		31-41-17	ALL
	11		W0764	041	22		31-41-11	ALL
	12	EN	W0764	094	16		73-21-11	050-099, 155-199
	12	FL	W0764	094	16		73-21-11	150-154, 275-299
	13		W0764	006	22		SPARE	050-099
	13	UNUSED						150-199, 275-299
	14		W0764	007	24		SPARE	050-099
	14		W0764	079	24		SPARE	150-199
	14	UNUSED						275-299
	15		W0764	008	24		SPARE	050-099
	15	UNUSED						150-199, 275-299
	16		W0764	009	22		29-11-21	ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21		W0764	044	24		49-72-11	050-099, 162-199, 275-299
	21	UNUSED						150-157
	22	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D04700

Page 70

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04754P		AF0204/ /		PLUG-P61 (continued)				ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	DL	W0764	003	18		SPARE	ALL
	29	DL	W0764	133	18		78-34-21	ALL
	30		W0764	133Z			78-34-21	ALL
	31		W0764	027	20		SPARE	ALL
	32		W0764	207B	22		SPARE	ALL
	33		W0764	207R	22		SPARE	ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37		W0764	501	22		SPARE	ALL
	38		W0764	801	22		SPARE	ALL
	39		W0764	802	22		SPARE	ALL
	40		W0764	049	20		SPARE	ALL
	41		W0764	050	20		SPARE	ALL
	CAP	Y	W0764	028	20		SPARE	ALL
	CAP	Y	W0764	071	24		SPARE	150-199
D04756J		AF0204/ /		RCPT-P61				ALL
	1		W0070	09R	20		76-11-11	ALL
	2		W0070	68LZ			73-21-11	ALL
	3		W0070	11V	24		80-11-21	ALL
	4		W0070	11E	24		80-11-21	ALL
	5	DK	W0070	11H	18		80-11-21	ALL
	6		W0070	68L	22		73-21-11	ALL
	7		W0070	11L	24		80-11-21	ALL
	8		W0070	11J	24		80-11-21	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	DK	W0070	750	18		24-11-21	ALL
	12		W0070	01K	20		24-11-21	ALL
	13		W0070	776R	22		26-11-21	ALL
	14		W0070	03D	22		28-22-21	ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17		W0070	02S	24		27-51-61	ALL

HOOKUP LIST
D280T132

91-21-51
Section D04700
Page 71
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04756J		AF0204/ /		RCPT-P61 (continued)				ALL
	18		W0070	02T	24		27-51-61	ALL
	19		W0070	11R	20		27-41-21	ALL
	20		W0070	06G	22		33-16-22	ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23		W0070	128	20		78-34-21	ALL
	24	UNUSED						ALL
	25		W0070	09P	20		76-11-11	ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40		W0070	196	20		73-21-11	ALL
	41	UNUSED						ALL
D04756P		AF0204/ /		PLUG-P61				ALL
	1		W0262	001	20		76-11-11	ALL
	2		W0262	010Z			73-21-11	ALL
	3		W0262	003	24		80-11-21	ALL
	4		W0262	004	24		80-11-21	ALL
	5	DL	W0262	005	18		80-11-21	ALL
	6		W0262	010	22		73-21-11	ALL
	7		W0262	007	24		80-11-21	ALL
	8		W0262	008	24		80-11-21	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	DL	W0262	011	18		24-11-21	ALL
	12		W0262	012	20		24-11-21	ALL
	13		W0262	025R	22		26-11-21	ALL
	14		W0262	026	20		28-22-21	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04700

Page 72

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04756P		AF0204/ /		PLUG-P61 (continued)				ALL
	15	UNUSED						050-099, 150-199
	15		W0262	041	20		SPARE	275-299
	16	UNUSED						ALL
	17		W0262	120	24		27-51-61	ALL
	18		W0262	122	24		27-51-61	ALL
	19		W0262	031	20		27-41-21	ALL
	20		W0262	032	22		33-16-22	ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	DL	W0262	030	18		78-34-21	ALL
	24	UNUSED						ALL
	25		W0262	017	20		76-11-11	ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29		W0262	801	20		SPARE	ALL
	30		W0262	051	20		SPARE	ALL
	31		W0262	802	20		SPARE	ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40		W0262	024	24		73-21-11	ALL
	41	UNUSED						ALL
D04757J		AE0319/ /		RCPT-IRS-C				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W0723	003	20		34-21-31	ALL
	4		W0723	004	20		34-21-31	ALL
	5		W0723	005	20		34-21-31	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8		W0723	028	22		33-16-17	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D04700
Page 73
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04757J		AE0319/ /		RCPT-IRS-C (continued)				ALL
	11	UNUSED						ALL
	12		W0723	012	24		34-21-31	ALL
	13		W0723	013	24		34-21-31	ALL
	14		W0723	014	22		34-21-31	ALL
	15		W0723	015	22		34-21-31	ALL
	16		W0723	016	22		34-21-31	ALL
	17		W0723	017	22		34-21-31	ALL
	18	UNUSED						ALL
	19		W0723	201R	24		34-21-31	ALL
	20		W0723	201B	24		34-21-31	ALL
	21		W0723	201Z			34-21-31	ALL
	22		W0723	202Z			34-21-31	ALL
	23		W0723	202B	24		34-21-31	ALL
	24		W0723	202R	24		34-21-31	ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
D04757P		AE0319/ /		PLUG-E1-6				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W0181	003	22		34-21-31	ALL
	4		W0181	004	22		34-21-31	ALL
	5		W0181	005	22		34-21-31	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8		W0181	048	22		33-16-17	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12		W0181	012	24		34-21-31	ALL
	13		W0181	013	24		34-21-31	ALL
	14		W0181	014	22		34-21-31	ALL
	15		W0181	015	22		34-21-31	ALL
	16		W0181	016	22		34-21-31	ALL
	17		W0181	017	22		34-21-31	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04700

Page 74

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04757P		AE0319/ /		PLUG-E1-6 (continued)				ALL
	18	UNUSED						ALL
	19		W0181	201R	24		34-21-31	ALL
	20		W0181	201B	24		34-21-31	ALL
	21		W0181	201Z			34-21-31	ALL
	22		W0181	202Z			34-21-31	ALL
	23		W0181	202B	24		34-21-31	ALL
	24		W0181	202R	24		34-21-31	ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
D04758J		AF0204/ /		RCPT-P61				ALL
	1	UNUSED						ALL
	2		W0066	55C	24		27-58-21	ALL
	3		W0066	62B	24		73-21-17	ALL
	4		W0066	62X	24		78-34-21	ALL
	5	FM	W0066	62L	16		73-21-20	ALL
	6		W0066	63B	24		78-36-21	ALL
	7	DK	W0066	53Y	18		27-51-11	ALL
	8		W0066	54A	22		27-51-11	ALL
	9	DK	W0066	54B	18		27-51-11	ALL
	10		W0066	54C	20		27-51-11	ALL
	11	DK	W0066	55F	18		27-81-11	ALL
	12		W0066	64M	22		33-51-11	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	DK	W0066	55J	18		27-81-21	ALL
	16		W0066	GRB			78-34-21	ALL
	17		W0066	54I	20		78-34-21	ALL
	18	UNUSED						ALL
	19		W0066	55B	24		27-51-61	ALL
	20		W0066	55A	24		27-51-61	ALL
	21		W0066	54E	24		27-51-11	ALL
	22		W0066	54F	24		27-51-11	ALL
	23		W0066	54G	24		27-51-11	ALL
	24		W0066	54H	24		27-51-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04700

Page 75

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04758J		AF0204/ /		RCPT-P61 (continued)				ALL
	25		W0066	54J	24		27-51-11	ALL
	26		W0066	54K	24		27-51-11	ALL
	27		W0066	54L	24		27-51-11	ALL
	28		W0066	54M	24		27-51-11	ALL
	29		W0066	62Y	24		78-34-21	ALL
	30		W0066	62R	20		73-21-19	ALL
	31	UNUSED						050-099, 150-199
	31		W0066	849	24		73-21-16	275-299
	32		W0066	57P	24		32-42-12	ALL
	33		W0066	57N	24		32-42-12	ALL
	34		W0066	57M	24		32-42-12	ALL
	35		W0066	54N	24		27-51-11	ALL
	36		W0066	54P	24		27-51-11	ALL
	37		W0066	54R	24		27-51-11	ALL
	38		W0066	853	24		73-21-16	050-099, 275-299
	38	UNUSED						150-199
	39	UNUSED						ALL
	40	FM	W0066	61L	16		73-21-20	ALL
	41		W0066	54S	24		27-51-11	ALL
	42		W0066	54T	24		27-51-11	ALL
	43		W0066	54U	24		27-51-11	ALL
	44		W0066	54V	24		27-51-11	ALL
	45		W0066	54W	24		27-51-11	ALL
	46		W0066	54X	24		27-51-11	ALL
	47		W0066	54Y	24		27-51-11	ALL
	48		W0066	62J	24		74-31-21	ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53		W0066	15A	24		73-21-15	ALL
	54		W0066	64E	20		78-34-21	ALL
	55		W0066	63H	24		31-41-13	ALL
			W0066	539	20		78-34-21	ALL
			W0066	541Z			78-34-21	ALL
			W0066	64EZ			78-34-21	ALL
			W0066	GRB			78-34-21	ALL
D04758P		AF0204/ /		PLUG-P61				ALL
	1		W0768	015	24		SPARE	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04700

Page 76

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04758P		AF0204/ /		PLUG-P61 (continued)				ALL
	2		W0768	016	24		27-58-21	ALL
	3		W0768	017	24		73-21-17	ALL
	4		W0768	018	24		78-34-21	ALL
	5	FL	W0768	013	16		73-21-20	050-099, 150-199, 277-299
	5		W0768	013	20		73-21-20	275-276
	6		W0768	182	24		78-36-21	ALL
	7	DL	W0768	021	18		27-51-11	ALL
	8		W0768	022	22		27-51-11	ALL
	9	DL	W0768	023	18		27-51-11	ALL
	10		W0768	024	20		27-51-11	ALL
	11	DL	W0768	025	18		27-81-11	ALL
	12		W0768	067	22		33-51-11	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	DL	W0768	029	18		27-81-21	ALL
	16		W0768	FRA			78-34-21	ALL
	17	DL	W0768	10D	18		78-34-21	ALL
	18	UNUSED						ALL
	19		W0768	033	24		27-51-61	ALL
	20		W0768	034	24		27-51-61	ALL
	21		W0768	035	24		27-51-11	ALL
	22		W0768	036	24		27-51-11	ALL
	23		W0768	037	24		27-51-11	ALL
	24		W0768	038	24		27-51-11	ALL
	25		W0768	039	24		27-51-11	ALL
	26		W0768	040	24		27-51-11	ALL
	27		W0768	041	24		27-51-11	ALL
	28		W0768	042	24		27-51-11	ALL
	29		W0768	043	24		78-34-21	ALL
	30		W0768	094	20		73-21-19	ALL
	31	UNUSED						050-099
	31		W0768	097	24		SPARE	150-199
	31		W0768	097	24		73-21-16	275-299
	32		W0768	118	24		32-42-12	ALL
	33		W0768	119	24		32-42-12	ALL
	34		W0768	122	24		32-42-12	ALL
	35		W0768	150	24		27-51-11	ALL
	36		W0768	151	24		27-51-11	ALL
	37		W0768	152	24		27-51-11	ALL
	38		W0768	598	24		73-21-16	050-099

HOOKUP LIST

D280T132

91-21-51

Section D04700

Page 77

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04758P		AF0204/ /		PLUG-P61 (continued)				ALL
	38		W0768	589	24		SPARE	150-154
	38		W0768	598	24		SPARE	155-199
	38		W0768	589	24		73-21-16	275-299
	39	UNUSED						ALL
	40	FL	W0768	019	16		73-21-20	ALL
	41		W0768	153	24		27-51-11	ALL
	42		W0768	154	24		27-51-11	ALL
	43		W0768	155	24		27-51-11	ALL
	44		W0768	156	24		27-51-11	ALL
	45		W0768	157	24		27-51-11	ALL
	46		W0768	158	24		27-51-11	ALL
	47		W0768	159	24		27-51-11	ALL
	48		W0768	172	24		74-31-21	ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53		W0768	063	24		73-21-15	ALL
	54	DL	W0768	10C	18		78-34-21	ALL
	55		W0768	053	24		31-41-13	ALL
	CAP	Y	W0768	500	18		78-34-21	050-099, 150-156, 162-166, 275-276
	CAP	Y	W0768	534	18		78-34-21	050-099, 150-156, 162-166, 275-276
	CAP	Y	W0768	500	18		SPARE	157, 167-199, 277-299
	CAP	Y	W0768	534	18		SPARE	157, 167-199, 277-299
			W0768	10CZ			78-34-21	ALL
			W0768	10DZ			78-34-21	ALL
			W0768	FRA			78-34-21	ALL
D04760J		AF0204/ /		RCPT-P61				ALL
	1		W0066	62E	22		SPARE	ALL
	2		W0066	564	22		74-31-21	ALL
	3		W0066	62D	22		74-31-21	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W0066	63D	24		78-36-21	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9		W0066	120	22		78-36-21	ALL
	10	UNUSED						ALL
	11	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D04700

Page 78

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04760J		AF0204/ /		RCPT-P61 (continued)				ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18		W0066	62K	24		75-23-11	ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	DK	W0066	53Z	18		27-51-11	ALL
	33		W0066	54A	22		27-51-11	ALL
	34	DK	W0066	54B	18		27-51-11	ALL
	35		W0066	54C	20		27-51-11	ALL
	36		W0066	54E	24		27-51-11	ALL
	37		W0066	54F	24		27-51-11	ALL
	38		W0066	54G	24		27-51-11	ALL
	39		W0066	54H	24		27-51-11	ALL
	40		W0066	54J	24		27-51-11	ALL
	41		W0066	54K	24		27-51-11	ALL
	42		W0066	54L	24		27-51-11	ALL
	43		W0066	54M	24		27-51-11	ALL
	44		W0066	54N	24		27-51-11	ALL
	45		W0066	54P	24		27-51-11	ALL
	46		W0066	54R	24		27-51-11	ALL
	47		W0066	54S	24		27-51-11	ALL
	48		W0066	54T	24		27-51-11	ALL
	49		W0066	54U	24		27-51-11	ALL
	50		W0066	54V	24		27-51-11	ALL
	51		W0066	54W	24		27-51-11	ALL

HOOKUP LIST
D280T132

91-21-51
Section D04700
Page 79
Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04760J		AF0204/ /		RCPT-P61 (continued)				ALL
	52		W0066	54X	24		27-51-11	ALL
	53		W0066	54Y	24		27-51-11	ALL
	54	DK	W0066	55G	18		27-81-11	ALL
	55	UNUSED						ALL
D04760P		AF0204/ /		PLUG-P61				ALL
	1		W0766	037	22		74-31-21	ALL
	2		W0766	038	22		74-31-21	ALL
	3		W0766	025	22		74-31-21	ALL
	4	DL	W0766	100	18		SPARE	ALL
	5	DL	W0766	101	18		SPARE	ALL
	6		W0766	022	24		78-36-21	ALL
	7		W0766	091	24		78-36-21	050-099, 275-278
	7		W0766	091	24		SPARE	150-199, 280-299
	8		W0766	092	24		78-36-21	050-099, 275-278
	8		W0766	092	24		SPARE	150-199, 280-299
	9		W0766	001	22		78-36-21	ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12		W0766	093	24		SPARE	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18		W0766	082	24		75-23-11	ALL
	19	UNUSED						050-099
	19		W0766	012	22		SPARE	150-199, 275-299
	20		W0766	020	22		SPARE	ALL
	21	UNUSED						050-099
	21		W0766	021	22		SPARE	150-199, 275-299
	22		W0766	029	20		SPARE	ALL
	23		W0766	030	20		SPARE	ALL
	24		W0766	031	20		SPARE	ALL
	25		W0766	032	20		SPARE	ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						050-099
	29		W0766	501	22		SPARE	150-199, 275-299

HOOKUP LIST

D280T132

91-21-51

Section D04700

Page 80

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04760P		AF0204/ /		PLUG-P61 (continued)				ALL
	30	UNUSED						ALL
	31		W0766	802	22		SPARE	ALL
	32	DL	W0766	081	18		27-51-11	ALL
	33		W0766	039	22		27-51-11	ALL
	34	DL	W0766	040	18		27-51-11	ALL
	35		W0766	041	20		27-51-11	ALL
	36		W0766	042	24		27-51-11	ALL
	37		W0766	043	24		27-51-11	ALL
	38		W0766	044	24		27-51-11	ALL
	39		W0766	045	24		27-51-11	ALL
	40		W0766	046	24		27-51-11	ALL
	41		W0766	047	24		27-51-11	ALL
	42		W0766	048	24		27-51-11	ALL
	43		W0766	049	24		27-51-11	ALL
	44		W0766	050	24		27-51-11	ALL
	45		W0766	051	24		27-51-11	ALL
	46		W0766	052	24		27-51-11	ALL
	47		W0766	053	24		27-51-11	ALL
	48		W0766	054	24		27-51-11	ALL
	49		W0766	055	24		27-51-11	ALL
	50		W0766	056	24		27-51-11	ALL
	51		W0766	057	24		27-51-11	ALL
	52		W0766	058	24		27-51-11	ALL
	53		W0766	059	24		27-51-11	ALL
	54	DL	W0766	060	18		27-81-11	ALL
	55	UNUSED						ALL
D04761J		AE0319/ /		RCPT-IRS-R				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W0725	003	20		34-21-21	ALL
	4		W0725	004	20		34-21-21	ALL
	5		W0725	005	20		34-21-21	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8		W0725	028	22		33-16-17	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12		W0725	012	24		34-21-21	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04700

Page 81

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04761J		AE0319/ /		RCPT-IRS-R (continued)				ALL
	13		W0725	013	24		34-21-21	ALL
	14		W0725	014	22		34-21-21	ALL
	15		W0725	015	22		34-21-21	ALL
	16		W0725	016	22		34-21-21	ALL
	17		W0725	017	22		34-21-21	ALL
	18	UNUSED						ALL
	19		W0725	201R	24		34-21-21	ALL
	20		W0725	201B	24		34-21-21	ALL
	21		W0725	201Z			34-21-21	ALL
	22		W0725	202Z			34-21-21	ALL
	23		W0725	202B	24		34-21-21	ALL
	24		W0725	202R	24		34-21-21	ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
D04761P		AE0319/ /		PLUG-				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W0171	003	22		34-21-21	ALL
	4		W0171	004	22		34-21-21	ALL
	5		W0171	005	22		34-21-21	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8		W0171	048	22		33-16-17	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12		W0171	012	24		34-21-21	ALL
	13		W0171	013	24		34-21-21	ALL
	14		W0171	014	22		34-21-21	ALL
	15		W0171	015	22		34-21-21	ALL
	16		W0171	016	22		34-21-21	ALL
	17		W0171	017	22		34-21-21	ALL
	18	UNUSED						ALL
	19		W0171	201R	24		34-21-21	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04700

Page 82

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04761P		AE0319/ /		PLUG- (continued)				ALL
	20		W0171	201B	24		34-21-21	ALL
	21		W0171	201Z			34-21-21	ALL
	22		W0171	202Z			34-21-21	ALL
	23		W0171	202B	24		34-21-21	ALL
	24		W0171	202R	24		34-21-21	ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
D04765J		AE0306/ /		RCPT-E2-3				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23		W0711	040	24		31-36-11	ALL
	24		W0711	213R	24		31-36-11	ALL
	25		W0711	213B	24		31-36-11	ALL
	26		W0711	213Z			31-36-11	ALL

HOOKUP LIST
D280T132

91-21-51
Section D04700
Page 83
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04765J		AE0306/ /		RCPT-E2-3 (continued)				ALL
	27		W0711	211B	24		31-35-11	ALL
	28		W0711	211R	24		31-35-11	ALL
	29		W0711	211Z			31-35-11	ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
D04765P		AE0306/ /		PLUG E2-3				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23		W0135	189	22		31-36-11	ALL
	24		W0135	578R	24		31-36-11	ALL
	25		W0135	578B	24		31-36-11	ALL
	26		W0135	578Z			31-36-11	ALL
	27		W0135	546B	24		31-35-11	ALL
	28		W0135	546R	24		31-35-11	ALL
	29		W0135	546Z			31-35-11	ALL
	30	UNUSED						ALL
	31	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D04700

Page 84

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04766J		AF0204/ /		RCPT-P61				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W0066	172	22		21-26-31	ALL
	5		W0066	177	22		21-28-11	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						050-099, 155-199, 275-299
	8	DK	W0066	61J	18		36-11-52	150-154
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13		W0066	890	22		30-21-11	050-099, 150-199
	13	UNUSED						275-299
	14		W0066	57K	24		32-42-11	ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20		W0066	51Z	24		21-58-16	ALL
	21		W0066	52C	22		21-58-16	ALL
	22		W0066	57B	24		32-09-21	ALL
	23		W0066	50A	24		21-25-21	ALL
	24		W0066	516	24		21-25-21	ALL
	25		W0066	50B	22		21-25-21	ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34		W0066	520	24		21-53-12	ALL
	35		W0066	63V	24		21-58-11	ALL
	36		W0066	522	24		21-53-12	ALL
	37		W0066	523	24		21-53-12	ALL
	38		W0066	524	24		21-53-12	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04700

Page 85

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04766J		AF0204/ /		RCPT-P61 (continued)				ALL
	39	UNUSED						ALL
	40		W0066	51S	24		21-58-15	ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45		W0066	51F	24		21-58-11	ALL
	46		W0066	50D	24		21-26-11	ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49		W0066	51G	24		21-58-11	ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52		W0066	51K	22		21-58-11	ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55		W0066	085	22		36-22-11	ALL
	56		W0066	534	24		21-61-51	ALL
	57	UNUSED						ALL
	58	UNUSED						ALL
	59		W0066	59V	24		33-16-11	ALL
	60		W0066	50C	22		21-25-21	ALL
	61	UNUSED						ALL
	DED		W0066	177Z			21-28-11	050-099
D04766P		AF0204/ /		PLUG-P61				ALL
	1	UNUSED						ALL
	2		W0506	002	22		SPARE	ALL
	3		W0506	003	22		SPARE	ALL
	4		W0506	743	22		21-26-31	ALL
	5		W0506	673	22		21-28-11	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	DL	W0506	752	18		36-11-62	050-099, 155-156, 162-166, 276
	8	DL	W0506	752	18		36-11-52	150-154, 275
	8	DL	W0506	752	18		SPARE	157, 167-199, 277-299
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D04700

Page 86

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04766P		AF0204/ /		PLUG-P61 (continued)				ALL
	13		W0506	779	22		30-21-11	050-099, 150-199
	13	UNUSED						275-299
	14		W0506	014	24		32-42-11	ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20		W0506	157	24		21-58-16	ALL
	21		W0506	161	22		21-58-16	ALL
	22		W0506	623	24		32-09-21	ALL
	23		W0506	065	24		21-25-21	ALL
	24		W0506	066	24		21-25-21	ALL
	25		W0506	067	22		21-25-21	ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31		W0506	081	20		SPARE	ALL
	32		W0506	082	20		SPARE	ALL
	33		W0506	083	20		SPARE	ALL
	34		W0506	116	24		21-53-12	ALL
	35		W0506	624	24		21-58-11	ALL
	36		W0506	118	24		21-53-12	ALL
	37		W0506	119	24		21-53-12	ALL
	38		W0506	120	24		21-53-12	ALL
	39	UNUSED						ALL
	40		W0506	139	24		21-58-15	ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45		W0506	592	24		21-58-11	ALL
	46		W0506	167	24		21-26-11	ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49		W0506	175	24		21-58-11	ALL
	50	UNUSED						ALL
	51	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D04700

Page 87

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04766P		AF0204/ /		PLUG-P61 (continued)				ALL
	52		W0506	178	22		21-58-11	ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55		W0506	652	22		36-22-11	ALL
	56		W0506	530	24		21-61-51	ALL
	57	UNUSED						ALL
	58	UNUSED						ALL
	59		W0506	555	24		33-16-11	ALL
	60		W0506	027	22		21-25-21	ALL
	61	UNUSED						ALL
	DED		W0506	673Z			21-28-11	050-099
D04767J		AE0320/ /		RCPT-E2-3				ALL
	1		W1615	201R	24		34-61-25	ALL
	2		W1615	201B	24		34-61-25	ALL
	3		W1615	201Z			34-61-25	ALL
	4		W1615	202R	24		34-21-21	ALL
	5		W1615	202B	24		34-21-21	ALL
	6		W1615	202Z			34-21-21	ALL
	7		W1615	203R	24		34-21-21	ALL
	8		W1615	203B	24		34-21-21	ALL
	9		W1615	203Z			34-21-21	ALL
	10		W1615	204R	24		34-61-22	ALL
	11		W1615	204B	24		34-61-22	ALL
	12		W1615	204Z			34-61-22	ALL
	13		W1615	206R	24		22-32-11	ALL
	14		W1615	206B	24		22-32-11	ALL
	15		W1615	206Z			22-32-11	ALL
	16		W1615	016	24		SPARE	ALL
	17		W1615	017	24		SPARE	ALL
	18		W1615	018	24		SPARE	ALL
	19		W1615	226Z			34-45-14	050-099, 150-152, 155-156, 162-166
	19		W1615	019	24		SPARE	153-154
	19		W1615	226Z			SPARE	157, 167-199, 277-299
	19	UNUSED						275-276
	20		W1615	219R	24		31-31-12	ALL
	21		W1615	219Z			31-31-12	ALL
	22		W1615	205R	24		22-32-11	ALL
	23		W1615	205B	24		22-32-11	ALL
	24		W1615	205Z			22-32-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04700

Page 88

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04767J		AE0320/ /		RCPT-E2-3 (continued)				ALL
	25		W1615	211R	24		22-33-11	ALL
	26		W1615	211B	24		22-33-11	ALL
	27		W1615	219B	24		31-31-12	050-099, 150-152, 155-199, 275-299
	27		W1615	226Z			34-45-14	153-154
	28		W1615	211Z			22-33-11	ALL
	29		W1615	212Z			22-33-11	ALL
	30		W1615	209R	24		SPARE	050-099, 150-199
	30	UNUSED						275-299
	31		W1615	209B	24		SPARE	050-099, 150-199
	31	UNUSED						275-299
	32		W1615	209Z			SPARE	050-099, 150-199
	32	UNUSED						275-299
	33		W1615	210R	24		32-42-11	ALL
	34		W1615	210B	24		32-42-11	ALL
	35		W1615	210Z			32-42-11	ALL
	36		W1615	006	24		34-45-13	050-099, 150-199, 277-299
	36		W1615	036	22		SPARE	275-276
	37		W1615	037	24		34-21-21	ALL
	38	UNUSED						050-099, 150-155, 162-165
	38		W1615	213R	24		23-25-13	156-157, 166-199, 277-299
	38		W1615	213R	24		SPARE	275-276
	39	UNUSED						050-099, 150-155, 162-165
	39		W1615	213B	24		23-25-13	156-157, 166-199, 277-299
	39		W1615	213B	24		SPARE	275-276
	40	UNUSED						050-099, 150-155, 162-165
	40		W1615	213Z			23-25-13	156-157, 166-199, 277-299
	40		W1615	213Z			SPARE	275-276
	41	UNUSED						050-099, 150-199
	41		W1615	031	20		34-12-22	275-299
	42		W1615	038	22		22-21-21	ALL
	43		W1615	039	22		SPARE	050-099, 150-152, 155-199, 275-299
	43		W1615	219B	24		31-31-12	153-154
	44		W1615	040	22		34-21-21	ALL
	45		W1615	041	22		34-21-21	ALL
	46		W1615	042	22		34-21-21	ALL
	47		W1615	043	22		SPARE	ALL
	48		W1615	212R	24		22-33-11	ALL
	49		W1615	212B	24		22-33-11	ALL
	50		W1615	214R	24		34-21-31	ALL
	51		W1615	214B	24		34-21-31	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04700

Page 89

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04767J		AE0320/ /		RCPT-E2-3 (continued)				ALL
	52		W1615	214Z			34-21-31	ALL
	53		W1615	053	22		31-31-14	ALL
	54		W1615	226R	24		34-45-14	050-099, 150-156, 162-166
	54		W1615	226R	24		SPARE	157, 167-199, 277-299
	54	UNUSED						275-276
	55		W1615	226B	24		34-45-14	050-099, 150-156, 162-166
	55		W1615	226B	24		SPARE	157, 167-199, 277-299
	55	UNUSED						275-276
	CAP	Y	W1615	025	22		SPARE	050-099
	CAP	Y	W1615	026	22		SPARE	050-099
	CAP	Y	W1615	028	24		SPARE	050-099
	CAP	Y	W1615	029	24		SPARE	050-099
	CAP	Y	W1615	044	22		SPARE	050-099
	CAP	Y	W1615	045	22		SPARE	050-099
	CAP	Y	W1615	019	24		SPARE	150-152, 275-276
	CAP	Y	W1615	036	22		SPARE	150-154
	REF	JW	W1615	020	24		SPARE	ALL
	REF	JW	W1615	021	24		SPARE	ALL
	REF	JW	W1615	039	22		SPARE	153-154
D04767P		AE0320/ /		PLUG-				ALL
	1		W0145	247R	24		34-61-25	ALL
	2		W0145	247B	24		34-61-25	ALL
	3		W0145	247Z			34-61-25	ALL
	4		W0145	525R	24		34-21-21	ALL
	5		W0145	525B	24		34-21-21	ALL
	6		W0145	525Z			34-21-21	ALL
	7		W0145	526R	24		34-21-21	ALL
	8		W0145	526B	24		34-21-21	ALL
	9		W0145	526Z			34-21-21	ALL
	10		W0145	259R	24		34-61-22	ALL
	11		W0145	259B	24		34-61-22	ALL
	12		W0145	259Z			34-61-22	ALL
	13		W0145	241R	24		22-32-11	ALL
	14		W0145	241B	24		22-32-11	ALL
	15		W0145	241Z			22-32-11	ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D04700

Page 90

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04767P		AE0320/ /		PLUG- (continued)				ALL
	19		W0145	704Z			34-45-14	050-099, 150-152, 155-156, 162-166, 275-276
	19	UNUSED						153-154, 157, 167-199, 277-299
	20		W0145	538R	24		31-31-12	ALL
	21		W0145	538Z			31-31-12	ALL
	22		W0145	542R	24		22-32-11	ALL
	23		W0145	542B	24		22-32-11	ALL
	24		W0145	542Z			22-32-11	ALL
	25		W0145	229R	24		22-33-11	ALL
	26		W0145	229B	24		22-33-11	ALL
	27		W0145	538B	24		31-31-12	050-099, 150-152, 155-199, 275-299
	27		W0145	704Z			34-45-14	153-154
	28		W0145	229Z			22-33-11	ALL
	29		W0145	235Z			22-33-11	ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33		W0145	273R	24		32-42-11	ALL
	34		W0145	273B	24		32-42-11	ALL
	35		W0145	273Z			32-42-11	ALL
	36		W0145	699	24		34-45-13	ALL
	37		W0145	848	24		34-21-21	ALL
	38	UNUSED						050-099, 150-155, 162-165, 275-276
	38		W0145	599R	24		23-25-13	156-157, 166-199, 277-299
	39	UNUSED						050-099, 150-155, 162-165, 275-276
	39		W0145	599B	24		23-25-13	156-157, 166-199, 277-299
	40	UNUSED						050-099, 150-155, 162-165, 275-276
	40		W0145	599Z			23-25-13	156-157, 166-199, 277-299
	41		W0145	164	24		SPARE	050-099
	41	UNUSED						150-199
	41		W0145	164	24		34-12-22	275-299
	42		W0145	165	22		22-21-21	ALL
	43	UNUSED						050-099, 150-152, 155-199, 275-299
	43		W0145	538B	24		31-31-12	153-154
	44		W0145	169	22		34-21-21	ALL
	45		W0145	170	22		34-21-21	ALL
	46		W0145	171	22		34-21-21	ALL
	47	UNUSED						ALL
	48		W0145	235R	24		22-33-11	ALL
	49		W0145	235B	24		22-33-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04700

Page 91

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04767P		AE0320/ /		PLUG- (continued)				ALL
	50		W0145	573R	24		34-21-31	ALL
	51		W0145	573B	24		34-21-31	ALL
	52		W0145	573Z			34-21-31	ALL
	53		W0145	075	22		31-31-14	ALL
	54		W0145	704R	24		34-45-14	050-099, 150-156, 162-166, 275-276
	54	UNUSED						157, 167-199, 277-299
	55		W0145	704B	24		34-45-14	050-099, 150-156, 162-166, 275-276
	55	UNUSED						157, 167-199, 277-299
D04768J		AE0320/ /		RCPT-E2-4				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10		W0624	211B	20		21-31-21	ALL
	11		W0624	211R	20		21-31-21	ALL
	12	UNUSED						ALL
	13		W0624	207B	24		21-31-21	ALL
	14		W0624	207R	24		21-31-21	ALL
	15		W0624	207Z			21-31-21	ALL
	16		W0624	801	20		SPARE	ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D04768P		AE0320/ /		PLUG-E2-4				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D04700

Page 92

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04768P		AE0320/ /		PLUG-E2-4 (continued)				ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10		W0016	225B	20		21-31-21	ALL
	11		W0016	225R	20		21-31-21	ALL
	12	UNUSED						ALL
	13		W0016	204B	24		21-31-21	ALL
	14		W0016	204R	24		21-31-21	ALL
	15		W0016	204Z			21-31-21	ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	DED		W0016	225Z			21-31-21	ALL
D04769J		AE0317/ /		RCPT-E1-6				ALL
	1		W1615	201R	24		34-61-25	ALL
	2		W1615	201B	24		34-61-25	ALL
	3		W1615	201Z			34-61-25	ALL
	4		W1615	202R	24		34-21-21	ALL
	5		W1615	202B	24		34-21-21	ALL
	6		W1615	202Z			34-21-21	ALL
	7		W1615	203R	24		34-21-21	ALL
	8		W1615	203B	24		34-21-21	ALL
	9		W1615	203Z			34-21-21	ALL
	10		W1615	204R	24		34-61-22	ALL
	11		W1615	204B	24		34-61-22	ALL
	12		W1615	204Z			34-61-22	ALL
	13		W1615	044	22		SPARE	050-099
	13	UNUSED						150-199, 275-299
	14		W1615	045	22		SPARE	050-099
	14	UNUSED						150-199, 275-299
	15		W1615	214R	24		34-21-31	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04700

Page 93

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04769J		AE0317 / /		RCPT-E1-6 (continued)				ALL
	16		W1615	214B	24		34-21-31	ALL
	17		W1615	001	22		SPARE	ALL
	18		W1615	002	22		SPARE	ALL
	19		W1615	003	22		SPARE	ALL
	20		W1615	038	22		22-21-21	ALL
	21	UNUSED						ALL
	22		W1615	207R	24		22-32-11	ALL
	23		W1615	207B	24		22-32-11	ALL
	24		W1615	207Z			22-32-11	ALL
	25		W1615	208R	24		SPARE	ALL
	26		W1615	208B	24		SPARE	ALL
	27		W1615	208Z			SPARE	ALL
	28		W1615	025	22		SPARE	050-099
	28	UNUSED						150-199, 275-299
	29		W1615	026	22		SPARE	050-099
	29	UNUSED						150-199, 275-299
	30	UNUSED						ALL
	31		W1615	039	22		SPARE	ALL
	32		W1615	214Z			34-21-31	ALL
	33		W1615	210R	24		32-42-11	ALL
	34		W1615	210B	24		32-42-11	ALL
	35		W1615	210Z			32-42-11	ALL
	36	UNUSED						050-099, 155-199, 277-299
	36		W1615	036	22		SPARE	150-154, 275-276
	37		W1615	037	24		34-21-21	ALL
	38		W1615	040	22		34-21-21	ALL
	39		W1615	041	22		34-21-21	ALL
	40		W1615	042	22		34-21-21	ALL
	41		W1615	043	22		SPARE	ALL
	42	UNUSED						050-099, 151-152, 275-276
	42		W9014	205Z			23-25-13	150, 153-155, 162-165
	42		W1615	213Z			23-25-13	156-157, 166-199, 277-299
	43	UNUSED						050-099, 151-152, 275-276
	43		W9014	205R	22		23-25-13	150, 153-155, 162-165
	43		W1615	213R	24		23-25-13	156-157, 166-199, 277-299
	44	UNUSED						050-099, 151-152, 275-276
	44		W9014	205B	22		23-25-13	150, 153-155, 162-165
	44		W1615	213B	24		23-25-13	156-157, 166-199, 277-299
	45	UNUSED						ALL
	46	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D04700

Page 94

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04769J		AE0317/ /		RCPT-E1-6 (continued)				ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53		W1615	053	22		31-31-14	ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
D04769P		AE0317/ /		PLUG-				ALL
	1		W0171	217R	24		34-61-25	ALL
	2		W0171	217B	24		34-61-25	ALL
	3		W0171	217Z			34-61-25	ALL
	4		W0171	219R	24		34-21-21	ALL
	5		W0171	219B	24		34-21-21	ALL
	6		W0171	219Z			34-21-21	ALL
	7		W0171	208R	24		34-21-21	ALL
	8		W0171	208B	24		34-21-21	ALL
	9		W0171	208Z			34-21-21	ALL
	10		W0171	213R	24		34-61-22	ALL
	11		W0171	213B	24		34-61-22	ALL
	12		W0171	213Z			34-61-22	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15		W0171	228R	24		34-21-31	ALL
	16		W0171	228B	24		34-21-31	ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20		W0171	050	22		22-21-21	ALL
	21	UNUSED						ALL
	22		W0171	212R	24		22-32-11	ALL
	23		W0171	212B	24		22-32-11	ALL
	24		W0171	212Z			22-32-11	ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D04700
Page 95
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04769P		AE0317/ /		PLUG- (continued)				ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32		W0171	228Z			34-21-31	ALL
	33		W0171	214R	24		32-42-11	ALL
	34		W0171	214B	24		32-42-11	ALL
	35		W0171	214Z			32-42-11	ALL
	36	UNUSED						ALL
	37		W0171	036	24		34-21-21	ALL
	38		W0171	054	22		34-21-21	ALL
	39		W0171	055	22		34-21-21	ALL
	40		W0171	053	22		34-21-21	ALL
	41	UNUSED						ALL
	42	UNUSED						050-099, 151-152, 275-276
	42		W0171	229Z			23-25-13	150, 153-199, 277-299
	43	UNUSED						050-099, 151-152, 275-276
	43		W0171	229R	22		23-25-13	150, 153-155, 162-165
	43		W0171	229R	24		23-25-13	156-157, 166-199, 277-299
	44	UNUSED						050-099, 151-152, 275-276
	44		W0171	229B	22		23-25-13	150, 153-155, 162-165
	44		W0171	229B	24		23-25-13	156-157, 166-199, 277-299
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53		W0171	023	22		31-31-14	ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
D04770J		AL1006/ /		RCPT-WHEEL WELL				ALL
	1	UNUSED						ALL
	2		W0656	038	22		32-42-12	050-099, 275-299
	2		W0656	038	20		32-42-12	150-199
	3		W0656	039	22		32-42-12	ALL
	4		W0656	213R	22		31-31-22	ALL
	5		W0656	213B	22		31-31-22	ALL
	6		W0656	213Z			31-31-22	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04700

Page 96

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04770J		AL1006/ /		RCPT-WHEEL WELL (continued)				ALL
	7		W0656	214	20		31-31-22	ALL
D04770P		AL1006/ /		PLUG-R WING/BODY RS DISC				ALL
	1	UNUSED						ALL
	2		W1206	002	20		32-42-12	ALL
	3		W1206	003	20		32-42-12	ALL
	4		W1206	201R	20		31-31-22	ALL
	5		W1206	201B	20		31-31-22	ALL
	6		W1206	201Z			31-31-22	ALL
	7		W1206	202	20		31-31-22	ALL
D04771J		AE0322/ /		RCPT-E2-2				275-299
	1	UNUSED						275-299
	2	UNUSED						275-299
	3	UNUSED						275-299
	4	UNUSED						275-299
	5	UNUSED						275-299
	6	UNUSED						275-299
	7		W1369	007	24		SPARE	275-299
	8		W1369	008	24		SPARE	275-299
	9		W1369	009	24		SPARE	275-299
	10	UNUSED						275-299
	11	UNUSED						275-299
	12	UNUSED						275-299
D04772J		AF0204/ /		RCPT-P61				ALL
	1		W0070	04U	24		32-42-11	ALL
	2		W0070	04T	24		32-42-11	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W0070	06S	24		35-11-13	ALL
	8		W0070	228B	24		35-11-13	ALL
	9		W0070	228R	24		35-11-13	ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D04700
Page 97
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04772J		AF0204/ /		RCPT-P61 (continued)				ALL
	15	UNUSED						ALL
D04772P		AF0204/ /		PLUG-P61				ALL
	1		W0600	001	24		32-42-11	ALL
	2		W0600	002	24		32-42-11	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W0600	007	24		35-11-13	ALL
	8		W0600	201B	24		35-11-13	ALL
	9		W0600	201R	24		35-11-13	ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15		W0600	020	20		SPARE	ALL
D04773J		AE0307/ /		RCPT-				ALL
	1		W0596	089	12		34-21-31	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
D04773P		AE0307/ /		PLUG-E1-6				ALL
	1		W0181	021	12		34-21-31	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
D04774		AF0204/ /		PLUG				051-099
	1	UNUSED						051-099
	2	UNUSED						051-099
	3	UNUSED						051-099
	4	UNUSED						051-099
	5	UNUSED						051-099
	6	UNUSED						051-099
	7	UNUSED						051-099
	8	UNUSED						051-099

HOOKUP LIST
D280T132

91-21-51
Section D04700
Page 98
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04774		AF0204/ /		PLUG (continued)				051-099
	9	UNUSED						051-099
	10	UNUSED						051-099
	11	UNUSED						051-099
	12	UNUSED						051-099
	13	UNUSED						051-099
	14	UNUSED						051-099
	15	UNUSED						051-099
	16	UNUSED						051-099
	17	UNUSED						051-099
	18	UNUSED						051-099
	19	UNUSED						051-099
	20	UNUSED						051-099
	21	UNUSED						051-099
	22	UNUSED						051-099
	23	UNUSED						051-099
	24	UNUSED						051-099
	25	UNUSED						051-099
	26	UNUSED						051-099
	27	UNUSED						051-099
	28	UNUSED						051-099
	29	UNUSED						051-099
	30	UNUSED						051-099
	31	UNUSED						051-099
	32	UNUSED						051-099
	33	UNUSED						051-099
	34	UNUSED						051-099
	35	UNUSED						051-099
	36	UNUSED						051-099
	37	UNUSED						051-099
	38	UNUSED						051-099
	39	UNUSED						051-099
	40	UNUSED						051-099
	41	UNUSED						051-099
	42	UNUSED						051-099
	43	UNUSED						051-099
	44	UNUSED						051-099
	45	UNUSED						051-099
	46	UNUSED						051-099
	47	UNUSED						051-099
	48	UNUSED						051-099

HOOKUP LIST

D280T132

91-21-51

Section D04700

Page 99

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04774		AF0204/ /		PLUG (continued)				051-099
	49	UNUSED						051-099
	50	UNUSED						051-099
	51	UNUSED						051-099
	52	UNUSED						051-099
	53	UNUSED						051-099
	54	UNUSED						051-099
	=C27	UNUSED						051-099
D04774J		AF0204/ /		RCPT-P61				ALL
	1		W0070	08R	20		76-11-11	ALL
	2	UNUSED						ALL
	3		W0070	04X	22		32-44-11	ALL
	4		W0070	10N	22		23-22-11	ALL
	5		W0070	10V	24		80-11-11	ALL
	6		W0070	10E	24		80-11-11	ALL
	7	DK	W0070	10H	18		80-11-11	ALL
	8		W0070	05C	24		27-58-21	ALL
	9		W0070	10L	24		80-11-11	ALL
	10		W0070	10J	24		80-11-11	ALL
	11		W0070	67H	22		73-21-11	ALL
	12		W0070	01J	20		24-11-11	ALL
	13		W0070	03F	22		28-22-21	ALL
	14		W0070	67HZ			73-21-11	ALL
	15		W0070	11P	20		27-41-11	ALL
	16		W0070	12G	24		73-21-15	ALL
	17	UNUSED						ALL
	18		W0070	766R	22		26-11-11	ALL
	19	UNUSED						ALL
	20		W0070	01U	24		24-31-11	ALL
	21		W0070	01V	24		24-31-11	ALL
	22		W0070	10D	24		80-11-11	ALL
	23		W0070	10G	24		80-11-11	ALL
	24	UNUSED						ALL
	25		W0070	126	20		78-34-11	ALL
	26	UNUSED						ALL
	27		W0070	08P	20		76-11-11	ALL
	28	UNUSED						ALL
	29		W0070	02U	24		27-88-11	ALL
	30	UNUSED						ALL
	31	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D04700

Page 100

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04774J		AF0204/ /		RCPT-P61 (continued)				ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36		W0070	124	20		78-34-21	ALL
	37	UNUSED						ALL
	38		W0070	744	22		28-31-12	050-099, 155-199, 277-299 150-154, 275-276
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47		W0070	08K	24		73-21-18	ALL
	48		W0070	08L	24		73-21-18	ALL
	49	UNUSED						ALL
	50		W0070	195	20		73-21-11	ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54		W0070	04M	24		32-09-11	ALL
	55	UNUSED						ALL
	DED		W0070	03FZ			28-22-21	ALL
	DED		W0070	08PZ			76-11-11	ALL
	DED		W0070	08RZ			76-11-11	ALL
	DED		W0070	10DZ			80-11-11	ALL
	DED		W0070	10EZ			80-11-11	ALL
	DED		W0070	10GZ			80-11-11	ALL
	DED		W0070	10HZ			80-11-11	ALL
	DED		W0070	10JZ			80-11-11	ALL
	DED		W0070	10LZ			80-11-11	ALL
	DED		W0070	10VZ			80-11-11	ALL
	DED		W0070	126Z			78-34-11	ALL
	DED		W0070	744Z			28-31-12	050-099, 155-199, 277-299
D04774P		AF0204/ /		PLUG-P61				ALL
	1		W0264	014	20		76-11-11	ALL

HOOKUP LIST
D280T132

91-21-51
Section D04700
Page 101
Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04774P		AF0204/ /		PLUG-P61 (continued)				ALL
	2	UNUSED						050-099, 150-199
	2		W0264	015	20		SPARE	275-299
	3	DL	W0264	016	18		32-44-11	ALL
	4		W0264	049	22		23-22-11	ALL
	5		W0264	018	24		80-11-11	ALL
	6		W0264	019	24		80-11-11	ALL
	7	DL	W0264	020	18		80-11-11	ALL
	8		W0264	023	24		27-58-21	ALL
	9		W0264	024	24		80-11-11	ALL
	10		W0264	025	24		80-11-11	ALL
	11		W0264	029	22		73-21-11	ALL
	12		W0264	033	20		24-11-11	ALL
	13		W0264	046	20		28-22-21	ALL
	14		W0264	029Z			73-21-11	ALL
	15		W0264	050	20		27-41-11	ALL
	16		W0264	107	24		73-21-15	ALL
	17	UNUSED						ALL
	18		W0264	039R	22		26-11-11	ALL
	19	UNUSED						ALL
	20		W0264	037	24		24-31-11	ALL
	21		W0264	038	24		24-31-11	ALL
	22		W0264	121	24		80-11-11	ALL
	23		W0264	122	24		80-11-11	ALL
	24	UNUSED						ALL
	25	DL	W0264	086	18		78-34-11	ALL
	26	UNUSED						ALL
	27		W0264	074	20		76-11-11	ALL
	28	UNUSED						ALL
	29		W0264	120	24		27-88-11	ALL
	30	DL	W0264	041	18		SPARE	050-099
	30	UNUSED						150-199, 275-299
	31	DL	W0264	042	18		SPARE	050-099
	31	UNUSED						150-199, 275-299
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	DL	W0264	177	18		78-34-21	ALL
	37	UNUSED						ALL
	38		W0264	027	22		28-31-12	050-099, 155-199, 277-299

HOOKUP LIST

D280T132

91-21-51

Section D04700

Page 102

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04774P		AF0204/ /		PLUG-P61 (continued)				ALL
	38	UNUSED						150-154, 275-276
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	44		W0264	084	20		SPARE	ALL
	45	UNUSED						050-099
	45		W0264	810	22		SPARE	150-199, 275-299
	46		W0264	092	24		SPARE	ALL
	47		W0264	112	24		73-21-18	ALL
	48		W0264	113	24		73-21-18	ALL
	49	UNUSED						ALL
	50		W0264	040	24		73-21-11	ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54		W0264	103	24		32-09-11	ALL
	55	UNUSED						ALL
	DED		W0264	027Z			28-31-12	050, 155-199, 277-299
D04776J		AF0204/ /		RCPT-P61				ALL
	1	UNUSED						050-099, 150-199
	1	FM	W0062	65E	16		25-31-21	275-276, 280-299
	1		W0062	65E	16		25-31-21	277-278
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W0062	659	22		25-31-21	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
D04776P		AF0204/ /		PLUG-P61				ALL
	1	UNUSED						050-099, 150-199
	1		W0214	129	16		25-31-21	275-299
	2	UNUSED						ALL
	3		W0214	024	20		SPARE	ALL
	4		W0214	025	22		25-31-21	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D04700
Page 103
Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04776P		AF0204/ /		PLUG-P61 (continued)				ALL
	7	UNUSED						ALL
D04778J		AF0204/ /		RCPT-P61				ALL
	1	UNUSED						050-099, 150-199, 275-276
	1	FM	W0062	67P	16		25-31-31	277-299
	2		W0062	64A	24		24-22-11	ALL
	3		W0062	403B	24		24-23-11	ALL
	4		W0062	403G	24		24-23-11	ALL
	5		W0062	403R	24		24-23-11	ALL
	6		W0062	403Y	24		24-23-11	ALL
	7		W0062	678	24		24-22-12	ALL
	8		W0062	51Y	24		24-11-11	ALL
	9		W0062	51X	24		24-11-11	ALL
	10		W0062	663	24		24-11-11	ALL
	11		W0062	671	24		24-22-11	ALL
	12		W0062	54A	24		24-22-11	ALL
	13	FM	W0062	65E	16		25-31-21	050-099, 150-199
	13	UNUSED						275-299
	14		W0062	681	24		24-22-12	ALL
	15	UNUSED						ALL
	16		W0062	53G	24		24-51-31	ALL
	17		W0062	53E	24		24-11-11	ALL
	18		W0062	669	20		24-22-11	ALL
	19		W0062	672	20		24-22-11	ALL
	20		W0062	680	24		24-22-12	ALL
	21		W0062	676	24		24-27-11	ALL
	22		W0062	675	24		24-27-11	ALL
	23		W0062	679	24		24-27-11	ALL
	24	UNUSED						ALL
	25		W0062	658	24		24-51-13	ALL
	26		W0062	655	24		24-51-13	ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32		W0062	53S	24		29-11-31	ALL
	33		W0062	55T	22		29-32-11	ALL
	34		W0062	55V	22		29-32-11	ALL
	35	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D04700

Page 104

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04778J		AF0204/ /		RCPT-P61 (continued)				ALL
	36	UNUSED						050-099, 275-299
	36		W0062	53A	24		24-11-11	150-199
	37	UNUSED						050-099, 275-299
	37		W0062	53B	24		24-11-11	150-199
	38	UNUSED						ALL
	39		W0062	887	22		29-11-31	ALL
	40		W0062	53H	24		24-51-31	ALL
	41	UNUSED						ALL
	42		W0062	64B	24		24-22-11	ALL
	43		W0062	64H	24		24-51-71	ALL
	44		W0062	53P	24		24-51-71	ALL
	45		W0062	685	24		24-51-71	ALL
	46		W0062	53L	24		24-51-71	ALL
	47		W0062	656	24		24-51-71	ALL
	48		W0062	521	20		24-51-72	050-099, 162-164, 276
	48	UNUSED						150-157, 165-199, 275, 277-299
	49		W0062	525	20		24-51-72	050-099, 162-164, 276
	49	UNUSED						150-157, 165-199, 275, 277-299
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
	DED		W0062	53GZ			24-51-31	ALL
	DED		W0062	53HZ			24-51-31	ALL
	DED		W0062	53SZ			29-11-31	ALL
	DED		W0062	55TZ			29-32-11	ALL
	DED		W0062	55VZ			29-32-11	ALL
	DED		W0062	887Z			29-11-31	ALL
D04778P		AF0204/ /		PLUG-P61				ALL
	1	UNUSED						050-099, 150-199, 275-276
	1	FL	W0214	143	16		25-31-31	277-299
	2		W0214	110	24		24-22-11	ALL
	3		W0214	402B	24		24-23-11	ALL
	4		W0214	402G	24		24-23-11	ALL
	5		W0214	402R	24		24-23-11	ALL
	6		W0214	402Y	24		24-23-11	ALL
	7		W0214	109	24		24-22-12	ALL

HOOKUP LIST
D280T132

91-21-51
Section D04700
Page 105
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04778P		AF0204/ /		PLUG-P61 (continued)				ALL
	8		W0214	113	24		24-11-11	ALL
	9		W0214	008	24		24-11-11	ALL
	10		W0214	009	24		24-11-11	ALL
	11		W0214	010	24		24-22-11	ALL
	12		W0214	011	24		24-22-11	ALL
	13	FL	W0214	129	16		25-31-21	050-099, 150-199
	13	UNUSED						275-299
	14		W0214	013	24		24-22-12	ALL
	15	UNUSED						ALL
	16		W0214	084	24		24-51-31	ALL
	17		W0214	016	24		24-11-11	ALL
	18		W0214	017	20		24-22-11	ALL
	19		W0214	018	20		24-22-11	ALL
	20		W0214	019	24		24-22-12	ALL
	21		W0214	126	24		24-27-11	ALL
	22		W0214	127	24		24-27-11	ALL
	23		W0214	128	24		24-27-11	ALL
	24	UNUSED						ALL
	25		W0214	035	24		24-51-13	ALL
	26		W0214	036	24		24-51-13	ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32		W0214	061	24		29-11-31	ALL
	33		W0214	062	22		29-32-11	ALL
	34		W0214	063	22		29-11-31	ALL
	35		W0214	103	20		SPARE	ALL
	36	UNUSED						050-099, 275-299
	36		W0214	065	22		24-11-11	150-199
	37	UNUSED						050-099, 275-299
	37		W0214	082	24		24-11-11	150-199
	38	UNUSED						ALL
	39		W0214	081	22		29-11-31	ALL
	40		W0214	083	24		24-51-31	ALL
	41		W0214	140	20		SPARE	ALL
	42		W0214	012	24		24-22-11	ALL
	43		W0214	037	24		24-51-71	ALL
	44		W0214	038	24		24-51-71	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04700

Page 106

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04778P		AF0204/ /		PLUG-P61 (continued)				ALL
	45		W0214	039	24		24-51-71	ALL
	46		W0214	040	24		24-51-71	ALL
	47		W0214	030	24		24-51-71	ALL
	48		W0214	089	20		24-51-72	050-099, 162-164, 276
	48	UNUSED						150-154, 275
	48		W0214	089	20		SPARE	155-157, 165-199, 277-299
	49		W0214	090	20		24-51-72	050-099, 162-164, 276
	49	UNUSED						150-154, 275
	49		W0214	090	20		SPARE	155-157, 165-199, 277-299
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
	DED		W0214	061Z			29-11-31	ALL
	DED		W0214	063Z			29-11-31	ALL
	DED		W0214	081Z			29-11-31	ALL
D04781J		AE0305/ /		RCPT-E1-3				050-099, 150-154, 275-299
D04781J		355/125/L 36		RCPT-E1-3				155-199
	1		W1633	016	24		23-51-13	ALL
	2		W1633	016Z			23-51-13	ALL
	3		W1633	204B	24		34-31-11	ALL
	4		W1633	204R	24		34-31-11	ALL
	5		W1633	204Z			34-31-11	ALL
	6		W1633	205R	24		34-12-12	ALL
	7		W1633	205B	24		34-12-12	ALL
	8		W1633	205Z			34-12-12	ALL
	9		W1633	206R	24		34-61-15	ALL
	10		W1633	206B	24		34-61-15	ALL
	11		W1633	206Z			34-61-15	ALL
	12		W1633	207R	24		22-32-11	ALL
	13		W1633	207B	24		22-32-11	ALL
	14		W1633	207Z			22-32-11	ALL
	15		W1633	208R	24		34-61-12	ALL
	16		W1633	208B	24		34-61-12	ALL
	17		W1633	208Z			34-61-12	ALL
	18		W1633	209R	24		34-61-12	ALL
	19		W1633	209B	24		34-61-12	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04700

Page 107

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04781J		AE0305/ /		RCPT-E1-3 (continued)				050-099, 150-154, 275-299
D04781J		355/125/L 36		RCPT-E1-3 (continued)				155-199
	20		W1633	209Z			34-61-12	ALL
	21		W1633	210R	24		34-61-14	ALL
	22		W1633	210B	24		34-61-14	ALL
	23		W1633	210Z			34-61-14	ALL
	24		W1633	003	24		23-51-13	ALL
	25		W1633	003Z			23-51-13	ALL
	26	UNUSED						ALL
	27		W1633	005	24		34-55-11	ALL
	28		W1633	218R	24		31-35-12	ALL
	29		W1633	218B	24		31-35-12	ALL
	30		W1633	218Z			31-35-12	ALL
	31		W1633	006	24		SPARE	ALL
	32		W1633	216R	24		31-35-12	ALL
	33		W1633	216B	24		31-35-12	ALL
	34		W1633	216Z			31-35-12	ALL
	35		W1633	217R	24		31-35-12	ALL
	36		W1633	217B	24		31-35-12	ALL
	37		W1633	217Z			31-35-12	ALL
	38	UNUSED						050-099, 150-152, 155-199, 275-299
	38		W1633	228Z			34-45-12	153-154
	39	UNUSED						050-099, 150-152, 155-199, 275-299
	39		W1633	228R	24		34-45-12	153-154
	40	UNUSED						050-099, 150-152, 155-199, 275-299
	40		W1633	228B	24		34-45-12	153-154
	41	UNUSED						ALL
	42	UNUSED						050-099, 150-152, 155-199, 275-299
	42		W1633	225R	24		34-45-14	153-154
	43	UNUSED						050-099, 150-152, 155-199, 275-299
	43		W1633	225B	24		34-45-14	153-154
	44	UNUSED						050-099, 150-152, 155-199, 275-299
	44		W1633	225Z			34-45-14	153-154
	45	UNUSED						050-099, 150-152, 155-199, 275-299
	45		W1633	021	22		SPARE	153-154
	46		W1633	227Z			34-45-12	050-099, 150-199, 277-299
	46		W1633	227Z			SPARE	275-276
	47		W1633	227R	24		34-45-12	050-099, 150-199, 277-299
	47		W1633	227R	24		SPARE	275-276
	48		W1633	227B	24		34-45-12	050-099, 150-199, 277-299
	48		W1633	227B	24		SPARE	275-276

HOOKUP LIST

D280T132

91-21-51

Section D04700

Page 108

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04781J		AE0305/ /		RCPT-E1-3 (continued)				050-099, 150-154, 275-299
D04781J		355/125/L 36		RCPT-E1-3 (continued)				155-199
	49	UNUSED						050-099, 150-152, 275-299
	49		W1633	226R	24		SPARE	153-199
	50	UNUSED						050-099, 150-152, 275-299
	50		W1633	226B	24		SPARE	153-199
	51		W1633	213R	24		34-61-12	ALL
	52		W1633	213B	24		34-61-12	ALL
	53		W1633	213Z			34-61-12	ALL
	54	UNUSED						050-099, 150-152, 275-299
	54		W1633	226Z			SPARE	153-199
	55		W1633	018	22		34-61-14	ALL
D04781P		AE0305/ /		PLUG-E1-3				ALL
	1		W0105	524R	24		23-51-13	ALL
	2		W0105	524B	24		23-51-13	ALL
	3		W0105	257B	24		34-31-11	ALL
	4		W0105	257R	24		34-31-11	ALL
	5		W0105	257Z			34-31-11	ALL
	6		W0105	512R	24		34-12-12	ALL
	7		W0105	512B	24		34-12-12	ALL
	8		W0105	512Z			34-12-12	ALL
	9		W0105	242R	24		34-61-15	ALL
	10		W0105	242B	24		34-61-15	ALL
	11		W0105	242Z			34-61-15	ALL
	12		W0105	661R	24		22-32-11	ALL
	13		W0105	661B	24		22-32-11	ALL
	14		W0105	661Z			22-32-11	ALL
	15		W0105	258R	24		34-61-12	ALL
	16		W0105	258B	24		34-61-12	ALL
	17		W0105	258Z			34-61-12	ALL
	18		W0105	690R	24		34-61-12	ALL
	19		W0105	690B	24		34-61-12	ALL
	20		W0105	690Z			34-61-12	ALL
	21		W0105	241R	24		34-61-14	ALL
	22		W0105	241B	24		34-61-14	ALL
	23		W0105	241Z			34-61-14	ALL
	24		W0105	251R	24		23-51-13	ALL
	25		W0105	251B	24		23-51-13	ALL
	26	UNUSED						ALL
	27		W0105	112	24		34-55-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04700

Page 109

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04781P		AE0305/ /		PLUG-E1-3 (continued)				ALL
	28		W0105	577R	24		31-35-12	ALL
	29		W0105	577B	24		31-35-12	ALL
	30		W0105	577Z			31-35-12	ALL
	31	UNUSED						ALL
	32		W0105	575R	24		31-35-12	ALL
	33		W0105	575B	24		31-35-12	ALL
	34		W0105	575Z			31-35-12	ALL
	35		W0105	576R	24		31-35-12	ALL
	36		W0105	576B	24		31-35-12	ALL
	37		W0105	576Z			31-35-12	ALL
	38	UNUSED						050-099, 150-152, 155-199, 275-299
	38		W0105	549Z			34-45-12	153-154
	39	UNUSED						050-099, 150-152, 155-199, 275-299
	39		W0105	549R	24		34-45-12	153-154
	40	UNUSED						050-099, 150-152, 155-199, 275-299
	40		W0105	549B	24		34-45-12	153-154
	41	UNUSED						ALL
	42	UNUSED						050-099, 150-152, 155-199, 275-299
	42		W0105	564R	24		34-45-14	153-154
	43	UNUSED						050-099, 150-152, 155-199, 275-299
	43		W0105	564B	24		34-45-14	153-154
	44	UNUSED						050-099, 150-152, 155-199, 275-299
	44		W0105	564Z			34-45-14	153-154
	45	UNUSED						ALL
	46		W0105	544Z			34-45-12	ALL
	47		W0105	544R	24		34-45-12	ALL
	48		W0105	544B	24		34-45-12	ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51		W0105	295R	24		34-61-12	ALL
	52		W0105	295B	24		34-61-12	ALL
	53		W0105	295Z			34-61-12	ALL
	54	UNUSED						ALL
	55		W0105	106	22		34-61-14	ALL
D04783J		AP1501/ /		RCPT-				ALL
	1		W0539	001	20		31-51-41	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D04700

Page 110

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04783J		AP1501/ /		RCPT- (continued)				ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11		W0539	203B	20		27-58-21	ALL
	12		W0539	203R	20		27-58-21	ALL
	13		W0539	302B	20		27-58-21	ALL
	14		W0539	302R	20		27-58-21	ALL
	15		W0539	302Y	20		27-58-21	ALL
D04783P		AP1501/ /		PLUG-				ALL
	1		W0619	001	24		31-51-41	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11		W0619	203B	22		27-58-21	ALL
	12		W0619	203R	22		27-58-21	ALL
	13		W0619	302B	24		27-58-21	ALL
	14		W0619	302R	24		27-58-21	ALL
	15		W0619	302Y	24		27-58-21	ALL
D04787J		AE0306/ /		RCPT-HF L				ALL
	1		W0633	001	24		23-11-11	ALL
	2		W0633	002	24		23-11-11	ALL
	3		W0633	003	24		23-11-11	ALL
	4		W0633	004	24		23-11-11	ALL
	5		W0633	005	24		23-11-11	ALL
	6		W0633	006	20		23-11-11	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D04700
Page 111
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04787J		AE0306/ /		RCPT-HF L (continued)				ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D04787P		AE0306/ /		PLUG-E2-6				ALL
	1		W0163	001	24		23-11-11	ALL
	2		W0163	002	24		23-11-11	ALL
	3		W0163	003	24		23-11-11	ALL
	4		W0163	004	24		23-11-11	ALL
	5		W0163	005	24		23-11-11	ALL
	6		W0163	009	20		23-11-11	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	DED		W0163	009Z			23-11-11	ALL
D04789J		AE0320/ /		RCPT-E2-6				ALL
	1		W0635	001	24		23-11-21	ALL
	2		W0635	002	24		23-11-21	ALL
	3		W0635	003	24		23-11-21	ALL
	4		W0635	004	24		23-11-21	ALL
	5		W0635	005	24		23-11-21	ALL
	6		W0635	006	20		23-11-21	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D04789P		AE0320/ /		PLUG-E2-6				ALL
	1		W0173	001	24		23-11-21	ALL
	2		W0173	002	24		23-11-21	ALL
	3		W0173	003	24		23-11-21	ALL
	4		W0173	004	24		23-11-21	ALL
	5		W0173	005	24		23-11-21	ALL
	6		W0173	009	20		23-11-21	ALL
	7	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D04700
Page 112
Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04789P		AE0320/ /		PLUG-E2-6 (continued)				ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	DED		W0173	009Z			23-11-21	ALL
D04791J		AE0306/ /		RCPT-E2-2				ALL
	1		W0471	024	24		SPARE	050-099, 150-154, 275-299
	1	UNUSED						155-199
	2		W0471	022	24		34-61-14	ALL
	3		W0471	023	24		34-53-11	ALL
	4	UNUSED						ALL
	5		W0471	043	20		SPARE	ALL
	6		W0471	033	20		SPARE	ALL
	7		W0471	219B	24		34-61-15	ALL
	8		W0471	219R	24		34-61-15	ALL
	9		W0471	219Z			34-61-15	ALL
	10		W0471	220B	24		34-61-15	ALL
	11		W0471	220R	24		34-61-15	ALL
	12	UNUSED						050-099, 150-199
	12		W0471	904R	24		34-53-11	275-299
	13		W0471	244R	24		31-35-14	050-099, 150-199, 275-276, 278-299
	13		W0756	294R	24		31-35-14	277
	14		W0471	244B	24		31-35-14	050-099, 150-199, 275-276, 278-299
	14		W0756	294B	24		31-35-14	277
	15		W0471	244Z			31-35-14	050-099, 150-199, 275-276, 278-299
	15		W0756	FRB			31-35-14	277
	16	UNUSED						050-099, 150-199
	16		W0471	904B	24		34-53-11	275-299
	17		W0471	220Z			34-61-15	ALL
	18		W0471	221B	24		34-61-15	ALL
	19		W0471	221R	24		34-61-15	ALL
	20		W0471	221Z			34-61-15	ALL
	21		W0471	052	24		SPARE	ALL
	22		W0471	074	24		34-61-15	ALL
	23		W0471	077	24		34-61-16	050-099
	23		W0471	077	24		34-61-15	150-199, 275-299
	24	UNUSED						050-099, 150-199
	24		W0471	904Z			34-53-11	275-299

HOOKUP LIST

D280T132

91-21-51

Section D04700

Page 113

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04791J		AE0306/ /		RCPT-E2-2 (continued)				ALL
	25	UNUSED						150-154
	26	UNUSED						150-154
	27	UNUSED						150-154
	28	UNUSED						150-154
	29	UNUSED						150-154
	30	UNUSED						150-154
	31	UNUSED						150-154
	32	UNUSED						150-154
	33	UNUSED						150-154
	34	UNUSED						150-154
	35	UNUSED						150-154
	36	UNUSED						150-154
	37	UNUSED						150-154
	38	UNUSED						150-154
	39	UNUSED						150-154
			W0756	294Z			31-35-14	277
			W0756	FRB			31-35-14	277
D04791P		AE0306/ /		PLUG-E2-2				ALL
	1	UNUSED						ALL
	2		W0133	013	24		34-61-14	ALL
	3		W0133	082	24		34-53-11	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W0133	286B	24		34-61-15	ALL
	8		W0133	286R	24		34-61-15	ALL
	9		W0133	286Z			34-61-15	ALL
	10		W0133	287B	24		34-61-15	ALL
	11		W0133	287R	24		34-61-15	ALL
	12	UNUSED						050-099, 150-199
	12		W0133	904R	24		34-53-11	275-299
	13		W0133	717R	24		31-35-14	ALL
	14		W0133	717B	24		31-35-14	ALL
	15		W0133	717Z			31-35-14	ALL
	16	UNUSED						050-099, 150-199
	16		W0133	904B	24		34-53-11	275-299
	17		W0133	287Z			34-61-15	ALL
	18		W0133	288B	24		34-61-15	ALL
	19		W0133	288R	24		34-61-15	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04700

Page 114

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04791P		AE0306/ /		PLUG-E2-2 (continued)				ALL
	20		W0133	288Z			34-61-15	ALL
	21	UNUSED						ALL
	22		W0133	098	24		34-61-15	ALL
	23		W0133	787	24		34-61-15	ALL
	24	UNUSED						050-099, 150-199
	24		W0133	904Z			34-53-11	275-299
	25	UNUSED						150-154
	26	UNUSED						150-154
	27	UNUSED						150-154
	28	UNUSED						150-154
	29	UNUSED						150-154
	30	UNUSED						150-154
	31	UNUSED						150-154
	32	UNUSED						150-154
	33	UNUSED						150-154
	34	UNUSED						150-154
	35	UNUSED						150-154
	36	UNUSED						150-154
	37	UNUSED						150-154
	38	UNUSED						150-154
	39	UNUSED						150-154
D04793J		AE0317/ /		RCPT-E1-5				ALL
	1		W0475	001	22		22-14-31	ALL
	2		W0475	002	22		22-14-31	ALL
	3	UNUSED						ALL
	4		W0475	003	24		31-51-41	ALL
	5	UNUSED						ALL
	6		W0475	005	24		27-32-21	ALL
	7		W0475	012	20		38-32-11	050-099, 150-199, 277-299
	7		W0475	012	22		SPARE	275
	7		W0475	012	20		SPARE	276
	8	UNUSED						ALL
	9		W0475	019	24		SPARE	ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12		W0475	011	24		22-41-11	ALL
	13	UNUSED						ALL
	14		W0475	064	22		34-22-26	ALL
	15		W0475	008	24		SPARE	ALL

HOOKUP LIST
D280T132

91-21-51
Section D04700
Page 115
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04793J		AE0317/ /		RCPT-E1-5 (continued)				ALL
	16		W0475	026	24		33-16-14	ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23		W0475	70M	20		29-11-14	ALL
	24		W0475	70K	20		29-11-14	ALL
D04793P		AE0317/ /		PLUG-E1-5				ALL
	1		W0119	074	22		22-14-31	ALL
	2		W0119	076	22		22-14-31	ALL
	3	UNUSED						ALL
	4		W0119	176	24		31-51-41	ALL
	5	UNUSED						ALL
	6		W0119	186	24		27-32-21	ALL
	7		W0119	801	20		38-32-11	050-099, 150-199, 277-299
	7	UNUSED						275
	7		W0119	801	20		SPARE	276
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12		W0119	092	24		22-41-11	ALL
	13	UNUSED						ALL
	14		W0119	613	22		34-22-26	ALL
	15	UNUSED						ALL
	16		W0119	029	24		33-16-14	ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23		W0119	70M	20		29-11-14	ALL
	24		W0119	70K	20		29-11-14	ALL
D04794J		AF0204/ /		RCPT-P61				ALL
	1		W0066	53H	24		24-51-31	ALL

HOOKUP LIST
D280T132

91-21-51
Section D04700
Page 116
Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04794J		AF0204/ /		RCPT-P61 (continued)				ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W0066	53G	24		24-51-31	ALL
	5		W0066	53T	22		25-31-11	ALL
	6		W0066	63K	24		24-51-71	ALL
	7	UNUSED						050-099, 150-199, 275-278
	7	FM	W0066	65E	16		SPARE	280-299
	8	DK	W0066	64Y	18		25-31-11	050-099, 150-199
	8	FM	W0066	64Y	16		25-31-11	275-299
	9		W0066	678	24		24-11-21	ALL
	10		W0066	502	20		24-51-72	050-099, 162-164, 276
	10	UNUSED						150-157, 165-199, 275, 277-299
	11		W0066	821	24		24-22-21	ALL
	12		W0066	674	20		24-22-21	ALL
	13		W0066	660	20		24-22-21	ALL
	14		W0066	52Z	24		24-22-21	ALL
	15		W0066	661	24		24-22-21	ALL
	16		W0066	53E	24		24-11-21	ALL
	17		W0066	682	24		24-22-22	ALL
	18		W0066	683	20		24-22-22	ALL
	19		W0066	403B	24		24-23-11	ALL
	20		W0066	403R	24		24-23-11	ALL
	21		W0066	403Y	24		24-23-11	ALL
	22		W0066	403G	24		24-23-11	ALL
	23	UNUSED						ALL
	24		W0066	53J	24		24-51-31	ALL
	25		W0066	53L	22		24-51-51	ALL
	26		W0066	53M	22		24-51-51	ALL
	27	UNUSED						ALL
	28		W0066	665	24		24-27-21	ALL
	29		W0066	685	24		24-27-21	ALL
	30		W0066	684	24		24-27-21	ALL
	31	UNUSED						ALL
	32		W0066	658	24		24-51-23	ALL
	33		W0066	655	24		24-51-23	ALL
	34		W0066	53N	22		24-51-51	ALL
	35		W0066	55V	22		29-32-11	ALL
	36		W0066	55T	22		29-32-11	ALL
	37	UNUSED						ALL
	38	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D04700

Page 117

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04794J		AF0204/ /		RCPT-P61 (continued)				ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42		W0066	686	24		24-22-22	ALL
	43		W0066	823	24		24-22-21	ALL
	44	UNUSED						ALL
	45	DK	W0066	130	18		25-31-12	050-099, 150-199 275-299
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
	DED		W0066	53GZ			24-51-31	ALL
	DED		W0066	53HZ			24-51-31	ALL
	DED		W0066	53JZ			24-51-31	ALL
	DED		W0066	55TZ			29-32-11	ALL
	DED		W0066	55VZ			29-32-11	ALL
D04794P		AF0204/ /		PLUG-P61				ALL
	1		W0222	087	24		24-51-31	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W0222	088	24		24-51-31	ALL
	5		W0222	027	22		25-31-11	ALL
	6		W0222	114	24		24-51-71	ALL
	7	UNUSED						050-099, 150-199, 275-278
	7	FL	W0222	130	16		SPARE	280-299
	8	DL	W0222	131	18		25-31-11	050-099
	8	FL	W0222	131	18		25-31-11	150-199
	8	FN	W0222	131	16		25-31-11	275-299
	9		W0222	031	24		24-11-21	ALL
	10		W0222	183	20		24-51-72	050-099, 162-164, 276
	10	UNUSED						150-154, 275
	10		W0222	183	20		SPARE	155-157, 165-199, 277-299

HOOKUP LIST

D280T132

91-21-51

Section D04700

Page 118

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04794P		AF0204/ /		PLUG-P61 (continued)				ALL
	11		W0222	113	24		24-22-21	ALL
	12		W0222	039	20		24-22-21	ALL
	13		W0222	040	20		24-22-21	ALL
	14		W0222	041	24		24-22-21	ALL
	15		W0222	042	24		24-22-21	ALL
	16		W0222	049	24		24-11-21	ALL
	17		W0222	050	24		24-22-22	ALL
	18		W0222	051	20		24-22-22	ALL
	19		W0222	402B	24		24-23-11	ALL
	20		W0222	402R	24		24-23-11	ALL
	21		W0222	402Y	24		24-23-11	ALL
	22		W0222	402G	24		24-23-11	ALL
	23	UNUSED						ALL
	24		W0222	089	24		24-51-31	ALL
	25		W0222	061	22		24-51-51	ALL
	26		W0222	060	22		24-51-51	ALL
	27	UNUSED						ALL
	28		W0222	127	24		24-27-21	ALL
	29		W0222	128	24		24-27-21	ALL
	30		W0222	129	24		24-27-21	ALL
	31	UNUSED						ALL
	32		W0222	069	24		24-51-23	ALL
	33		W0222	070	24		24-51-23	ALL
	34		W0222	007	24		24-51-51	ALL
	35		W0222	076	22		29-11-31	ALL
	36		W0222	077	22		29-32-11	ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42		W0222	091	24		24-22-22	ALL
	43		W0222	038	24		24-22-21	ALL
	44	UNUSED						ALL
	45	FL	W0222	164	16		25-31-12	050-099, 150-199
	45	UNUSED						275-299
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D04700
Page 119
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04794P		AF0204/ /		PLUG-P61 (continued)				ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
	DED		W0222	076Z			29-11-31	ALL
D04796J		AF0204/ /		RCPT-P61				ALL
	1		W0060	060	24		24-22-41	ALL
	2		W0060	102	24		24-22-41	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8		W0060	101	20		24-22-41	ALL
	9		W0060	046	20		24-22-41	ALL
	10		W0060	048	20		24-22-41	ALL
	11		W0060	109	24		24-41-11	ALL
	12		W0060	110	20		24-41-11	ALL
	13		W0060	111	20		24-41-11	ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21		W0060	112	24		24-41-12	ALL
	22	UNUSED						050-099, 150-199
	22		W0060	114	20		24-32-41	275-299
	23	UNUSED						ALL
	24	UNUSED						ALL
	25		W0060	019	22		49-61-11	ALL
	26		W0060	017	22		49-61-11	ALL
	27		W0060	027	22		49-61-11	ALL
	28		W0060	113	22		49-61-11	ALL
	29		W0060	015	22		49-61-11	ALL
	30	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D04700

Page 120

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04796J		AF0204/ /		RCPT-P61 (continued)				ALL
	31		W0060	011	22		49-61-11	ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36		W0060	103	24		24-22-41	ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43		W0060	104	24		24-22-41	ALL
	44		W0060	108	24		24-41-11	ALL
	45		W0060	107	24		24-41-11	ALL
	46		W0060	013	24		24-27-41	050-099, 150-199, 275-278
	46	UNUSED						280-299
	47		W0060	106	24		24-27-41	ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
	DED		W0060	110Z			24-41-11	ALL
	DED		W0060	111Z			24-41-11	ALL
D04796P		AF0204/ /		PLUG-P61				ALL
	1		W0240	001	24		24-22-41	ALL
	2		W0240	002	24		24-22-41	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8		W0240	006	20		24-22-41	ALL
	9		W0240	007	20		24-22-41	ALL
	10		W0240	008	20		24-22-41	ALL

HOOKUP LIST
D280T132

91-21-51
Section D04700
Page 121
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04796P		AF0204/ /		PLUG-P61 (continued)				ALL
	11		W0240	009	24		24-41-11	ALL
	12		W0240	010	20		24-41-11	ALL
	13		W0240	011	20		24-41-11	ALL
	14		W0240	012	20		SPARE	ALL
	15		W0240	013	20		SPARE	ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21		W0240	019	24		24-41-12	ALL
	22	UNUSED						050-099, 150-199
	22		W0240	065	20		24-32-41	275-299
	23	UNUSED						ALL
	24	UNUSED						ALL
	25		W0240	021	22		49-61-11	ALL
	26		W0240	022	22		49-61-11	ALL
	27		W0240	023	22		49-61-11	ALL
	28		W0240	024	22		49-61-11	ALL
	29		W0240	025	22		49-61-11	ALL
	30	UNUSED						ALL
	31		W0240	054	22		49-61-11	ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36		W0240	050	24		24-22-41	ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41		W0240	076	22		SPARE	ALL
	42	UNUSED						ALL
	43		W0240	072	24		24-22-41	ALL
	44		W0240	073	24		24-41-11	ALL
	45		W0240	057	24		24-41-11	ALL
	46		W0240	074	24		24-27-41	ALL
	47		W0240	075	24		24-27-41	ALL
	48	UNUSED						ALL
	49	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D04700

Page 122

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04796P		AF0204/ /		PLUG-P61 (continued)				ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53		W0240	070	20		SPARE	ALL
	54		W0240	071	20		SPARE	ALL
	55		W0240	801	20		SPARE	ALL
	DED		W0240	010Z			24-41-11	ALL
	DED		W0240	011Z			24-41-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04700

Page 123 End

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04801J		AE0207/ /		RCPT-P33				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W0144	750	24		34-12-12	ALL
	4		W0144	851	22		78-36-11	ALL
	5		W0144	202R	24		31-31-13	ALL
	6		W0144	202B	24		31-31-13	ALL
	7		W0144	18B	24		22-32-13	ALL
	8		W0144	001	24		34-12-12	ALL
	9		W0144	002	24		34-12-12	ALL
	10		W0144	003	24		34-12-12	ALL
	11		W0144	70N	20		29-11-14	ALL
	12		W0144	855	22		78-36-11	ALL
	13		W0144	820	22		78-36-11	ALL
	14		W0144	05E	22		27-09-13	ALL
	15		W0144	05F	22		27-09-13	ALL
	16		W0144	70P	20		29-11-14	ALL
	17		W0144	841	22		78-36-11	ALL
	18		W0144	148	24		31-31-13	ALL
	19		W0144	201R	24		31-31-13	ALL
	20		W0144	201B	24		31-31-13	ALL
	21		W0144	71C	20		29-11-14	ALL
	22		W0144	152	24		22-41-11	ALL
	23	UNUSED						ALL
	24		W0144	71H	20		29-11-14	ALL
	DED		W0144	71HZ			29-11-14	ALL
D04801P		AE0207/ /		PLUG-P33				ALL
	1		W0471	024	24		SPARE	050-099, 150-154, 275-299 155-199
	1	UNUSED						
	2		W0471	031	22		SPARE	ALL
	3		W0471	006	24		34-12-12	ALL
	4		W0471	122	22		78-36-11	ALL
	5		W0471	209R	24		31-31-13	ALL
	6		W0471	209B	24		31-31-13	ALL
	7		W0471	051	24		22-32-13	ALL
	8		W0471	014	24		34-12-12	ALL
	9		W0471	015	24		34-12-12	ALL
	10		W0471	016	24		34-12-12	ALL
	11		W0471	70N	20		29-11-14	ALL
	12		W0471	123	22		78-36-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04800

Page 1

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04801P		AE0207/ /		PLUG-P33 (continued)				ALL
	13		W0471	124	22		78-36-11	ALL
	14		W0471	068	22		27-09-13	ALL
	15		W0471	069	22		27-09-13	ALL
	16		W0471	70P	20		29-11-14	ALL
	17		W0471	125	22		78-36-11	ALL
	18		W0471	025	24		31-31-13	ALL
	19		W0471	210R	24		31-31-13	ALL
	20		W0471	210B	24		31-31-13	ALL
	21		W0471	70L	20		29-11-14	ALL
	22		W0471	035	24		22-41-11	ALL
	23		W0471	049	24		SPARE	050-099
	23		W0471	049	24		30-34-31	150-199
	23	UNUSED						275-299
	24		W0471	70M	20		29-11-14	ALL
	CAP	Y	W0471	017	24		SPARE	ALL
	CAP	Y	W0471	052	24		SPARE	ALL
	CAP	Y	W0471	047	22		SPARE	150-152, 275-276
	DED		W0471	70MZ			29-11-14	ALL
D04802J		AE0209/ /		RCPT-				ALL
	1	UNUSED						ALL
	2	UNUSED						050-099, 150-199, 277-299
	2		W0176	017	24		21-44-21	275-276
	3	UNUSED						050-099, 150-199, 277-299
	3		W0176	018	24		21-44-21	275-276
	4		W0176	20C	24		21-43-11	ALL
	5		W0176	69A	22		21-66-11	050-099, 162-199
	5	UNUSED						150-157, 275-299
	6		W0176	009	24		29-31-11	ALL
	7		W0176	666	24		24-22-11	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10		W0176	133	24		32-09-11	ALL
	11		W0176	531	24		32-09-11	ALL
	12		W0176	04D	24		32-09-11	ALL
	13		W0176	51N	24		21-58-12	ALL
	14		W0176	82FR	24		36-23-11	050-099, 156-162, 166-199, 277-299
	14	UNUSED						150-155, 163-165, 275-276
	15	UNUSED						ALL
	16		W0176	89B	24		21-58-12	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04800

Page 2

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04802J		AE0209/ /		RCPT- (continued)				ALL
	17		W0176	89L	24		21-58-12	ALL
	18		W0176	89K	24		21-58-12	ALL
	19		W0176	631	24		21-58-12	ALL
	20		W0176	550	24		21-58-12	ALL
	21		W0176	239R	24		73-21-12	ALL
	22		W0176	89G	24		21-58-12	ALL
	23	UNUSED						ALL
	24		W0176	058	24		21-58-14	ALL
	25		W0176	04K	22		52-11-12	050-099, 150-199
	25		W0176	04K	20		52-11-12	275-299
	26		W0176	91G	24		73-21-11	ALL
	27		W0176	239B	24		73-21-17	ALL
	28		W0176	239Z			73-21-12	ALL
	29		W0176	91GZ			73-21-11	ALL
	30		W0176	82FB	24		36-23-11	050-099, 156-162, 166-199, 277-299
	30	UNUSED						150-155, 163-165, 275-276
	31		W0176	544	24		36-23-11	ALL
	32		W0176	545	24		36-23-11	ALL
	33		W0176	546	24		36-23-11	ALL
	34		W0176	547	24		36-23-11	ALL
	35		W0176	548	24		36-23-11	ALL
	36		W0176	307Z			36-23-11	ALL
	37		W0176	307B	24		36-23-11	ALL
	38		W0176	307R	24		36-23-11	ALL
	39		W0176	307Y	24		36-23-11	ALL
	CAP	Y	W0176	017	24		SPARE	051-099, 150-154
	CAP	Y	W0176	018	24		SPARE	051-099, 150-154
	DED		W0176	058Z			21-58-14	ALL
	DED		W0176	133Z			32-09-11	ALL
D04802P		AE0209/ /		PLUG-P36				ALL
	1	UNUSED						050-099, 275-299
	1	DK	W0510	064	18		SPARE	150-199
	2	UNUSED						050-099, 150-199, 277-299
	2		W0510	718	24		21-44-21	275-276
	3	UNUSED						050-099, 150-199, 277-299
	3		W0510	719	24		21-44-21	275-276
	4		W0510	522	24		21-43-11	ALL
	5		W0510	558	22		21-66-11	050-099, 162-199
	5	UNUSED						150-157, 275-299

HOOKUP LIST

D280T132

91-21-51

Section D04800

Page 3

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04802P		AE0209/ /		PLUG-P36 (continued)				ALL
	6		W0510	143	24		29-31-11	ALL
	7		W0510	183	24		24-22-11	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10		W0510	713	24		32-09-11	ALL
	11		W0510	714	24		32-09-11	ALL
	12		W0510	715	24		32-09-11	ALL
	13		W0510	194	24		21-58-12	ALL
	14		W0510	222R	24		36-23-11	ALL
	15	UNUSED						ALL
	16		W0510	164	24		21-58-12	ALL
	17		W0510	165	24		21-58-12	ALL
	18		W0510	166	24		21-58-12	ALL
	19		W0510	167	24		21-58-12	ALL
	20		W0510	168	24		21-58-12	ALL
	21		W0510	214R	20		73-21-12	ALL
	22		W0510	169	24		21-58-12	ALL
	23	UNUSED						ALL
	24		W0510	152	24		21-58-14	ALL
	25		W0510	712	22		52-11-12	050-099, 150-199
	25		W0510	712	20		52-11-12	275-299
	26		W0510	138	24		73-21-11	ALL
	27		W0510	214B	20		73-21-17	ALL
	28		W0510	214Z			73-21-12	ALL
	29		W0510	138Z			73-21-11	ALL
	30		W0510	222B	24		36-23-11	ALL
	31		W0510	176	24		36-23-11	ALL
	32		W0510	177	24		36-23-11	ALL
	33		W0510	178	24		36-23-11	ALL
	34		W0510	179	24		36-23-11	ALL
	35		W0510	180	24		36-23-11	ALL
	36		W0510	303Z			36-23-11	ALL
	37		W0510	303B	24		36-23-11	ALL
	38		W0510	303R	24		36-23-11	ALL
	39		W0510	303Y	24		36-23-11	ALL
	CAP	Y	W0510	718	24		SPARE	051-099, 150-154
	CAP	Y	W0510	719	24		SPARE	051-099, 150-154
	DED		W0510	713Z			32-09-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04800

Page 4

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04803J		AE0203/ /		RCPT-P33				ALL
	1		W0142	117	24		77-35-11	ALL
	2	UNUSED						ALL
	3		W0142	08B	24		34-12-22	ALL
	4		W0142	05D	24		22-41-11	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9		W0142	002	24		34-12-22	ALL
	10		W0142	004	24		34-12-22	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13		W0142	70M	20		29-11-14	ALL
	14		W0142	024	24		33-16-14	ALL
	15		W0142	70K	20		29-11-14	ALL
D04803P		AE0203/ /		PLUG-P33				ALL
	1		W0475	016	24		77-35-11	ALL
	2		W0475	018	24		SPARE	ALL
	3		W0475	017	24		34-12-22	ALL
	4		W0475	011	24		22-41-11	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W0475	019	24		SPARE	ALL
	8		W0475	020	24		SPARE	ALL
	9		W0475	021	24		34-12-22	ALL
	10		W0475	022	24		34-12-22	ALL
	11		W0475	023	24		SPARE	ALL
	12		W0475	024	24		SPARE	ALL
	13		W0475	70M	20		29-11-14	ALL
	14		W0475	026	24		33-16-14	ALL
	15		W0475	70K	20		29-11-14	ALL
D04804J		AE0320/ /		RCPT-E2-4				ALL
	1		W0738	201B	24		28-41-22	ALL
	2		W0738	201R	24		28-41-22	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W0738	017	24		28-41-22	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04800

Page 5

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04804J		AE0320/ /		RCPT-E2-4 (continued)				ALL
	6		W0738	018	24		28-41-22	ALL
	7		W0738	019	24		28-41-22	ALL
	8	UNUSED						ALL
	9		W0738	065	22		28-41-12	ALL
	10		W0738	022	24		28-41-22	ALL
	11		W0738	023	24		28-41-22	ALL
	12		W0738	024	24		28-41-22	ALL
	13		W0738	025	24		28-41-22	ALL
	14		W0738	026	24		28-41-22	ALL
	15		W0738	027	24		28-41-22	ALL
	16		W0738	028	24		28-41-22	ALL
	17		W0738	029	24		28-41-22	ALL
	18		W0738	030	24		28-41-22	ALL
	19		W0738	031	24		28-41-22	ALL
	20		W0738	203B	24		28-41-23	ALL
	21		W0738	203R	24		28-41-23	ALL
	22	UNUSED						050-099, 150-199, 277-299
	22		W0738	099	20		25-31-11	275-276
	23	UNUSED						ALL
	24		W0738	215B	24		28-41-22	ALL
	25		W0738	215R	24		28-41-22	ALL
	26		W0738	068	20		SPARE	ALL
	27	UNUSED						ALL
	28		W0738	020	24		28-41-22	ALL
	29		W0738	021	24		28-41-22	ALL
	30		W0738	058	24		28-41-23	ALL
	31		W0738	094	24		24-22-22	ALL
	32		W0738	060	24		28-41-23	ALL
	33		W0738	061	24		28-41-23	ALL
	34		W0738	062	24		28-41-23	ALL
	35		W0738	063	24		28-41-23	ALL
	36		W0738	216B	24		28-41-23	ALL
	37		W0738	216R	24		28-41-23	ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40		W0738	083	22		SPARE	ALL
	41		W0738	802	20		SPARE	ALL
D04804P		AE0320/ /		PLUG-E2-4				ALL
	1		W0098	226B	24		28-41-22	ALL

HOOKUP LIST
D280T132

91-21-51
Section D04800
Page 6
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04804P		AE0320/ /		PLUG-E2-4 (continued)				ALL
	2		W0098	226R	24		28-41-22	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W0098	038	24		28-41-22	ALL
	6		W0098	039	24		28-41-22	ALL
	7		W0098	040	24		28-41-22	ALL
	8	UNUSED						ALL
	9		W0098	055	22		28-41-12	ALL
	10		W0098	043	24		28-41-22	ALL
	11		W0098	044	24		28-41-22	ALL
	12		W0098	045	24		28-41-22	ALL
	13		W0098	046	24		28-41-22	ALL
	14		W0098	047	24		28-41-22	ALL
	15		W0098	048	24		28-41-22	ALL
	16		W0098	049	24		28-41-22	ALL
	17		W0098	050	24		28-41-22	ALL
	18		W0098	051	24		28-41-22	ALL
	19		W0098	052	24		28-41-22	ALL
	20		W0098	228B	24		28-41-23	ALL
	21		W0098	228R	24		28-41-23	ALL
	22	UNUSED						050-099, 150-199, 277-299
	22		W0098	167	20		25-31-11	275-276
	23	UNUSED						ALL
	24		W0098	232B	24		28-41-22	ALL
	25		W0098	232R	24		28-41-22	ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28		W0098	041	24		28-41-22	ALL
	29		W0098	042	24		28-41-22	ALL
	30		W0098	059	24		28-41-23	ALL
	31		W0098	169	24		24-22-22	ALL
	32		W0098	061	24		28-41-23	ALL
	33		W0098	062	24		28-41-23	ALL
	34		W0098	063	24		28-41-23	ALL
	35		W0098	064	24		28-41-23	ALL
	36		W0098	233B	24		28-41-23	ALL
	37		W0098	233R	24		28-41-23	ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D04800

Page 7

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04804P		AE0320/ /		PLUG-E2-4 (continued)				ALL
	41	UNUSED						ALL
	DED		W0098	055Z			28-41-12	ALL
	DED		W0098	169Z			24-22-22	ALL
	DED		W0098	167Z			25-31-11	275-276
D04805J		AE0317/ /		RCPT-E1-5				ALL
	1		W1619	001	24		34-31-21	ALL
	2		W1619	201R	24		34-61-24	ALL
	3		W1619	201B	24		34-61-24	ALL
	4		W1619	201Z			34-61-24	ALL
	5		W1619	202R	24		34-61-24	ALL
	6		W1619	202B	24		34-61-24	ALL
	7		W1619	202Z			34-61-24	ALL
	8		W1619	203R	24		34-22-28	ALL
	9		W1619	203B	24		34-22-28	ALL
	10		W1619	203Z			34-22-28	ALL
	11		W1619	204R	24		34-61-25	050-099
	11		W1619	204R	24		34-61-26	150-199, 275-299
	12		W1619	204B	24		34-61-25	050-099
	12		W1619	204B	24		34-61-26	150-199, 275-299
	13		W1619	204Z			34-61-26	ALL
	14		W1619	205R	24		34-61-26	ALL
	15		W1619	205B	24		34-61-26	ALL
	16		W1619	205Z			34-61-26	ALL
	17		W1619	206R	24		34-22-29	ALL
	18		W1619	206B	24		34-22-29	ALL
	19		W1619	206Z			34-22-29	ALL
	20		W1619	207R	24		34-22-29	ALL
	21		W1619	207B	24		34-22-29	ALL
	22		W1619	207Z			34-22-29	ALL
	23		W1619	208B	24		34-61-22	ALL
	24		W1619	208R	24		34-61-22	ALL
	25		W1619	208Z			34-61-22	ALL
	26		W1619	209R	24		34-61-22	ALL
	27		W1619	209B	24		34-61-22	ALL
	28		W1619	209Z			34-61-22	ALL
	29		W1619	210R	24		34-12-22	ALL
	30		W1619	210B	24		34-12-22	ALL
	31		W1619	210Z			34-12-22	ALL
	32		W1619	211R	24		34-31-21	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04800

Page 8

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04805J		AE0317/ /		RCPT-E1-5 (continued)				ALL
	33		W1619	211B	24		34-31-21	ALL
	34		W1619	211Z			34-31-21	ALL
	35		W1619	212R	24		34-58-22	ALL
	36		W1619	212B	24		34-58-22	ALL
	37		W1619	212Z			34-58-22	ALL
	38		W1619	002	24		SPARE	ALL
	39		W1619	039	24		SPARE	ALL
	40		W1619	213R	24		SPARE	ALL
	41		W1619	213B	24		SPARE	ALL
	42		W1619	213Z			SPARE	ALL
	43		W1619	003	22		31-31-18	ALL
	44		W1619	004	22		31-31-18	ALL
	45		W1619	005	22		31-31-18	ALL
	46		W1619	006	22		31-31-18	ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49		W1619	049	24		SPARE	ALL
	50	UNUSED						050-099, 275-299
	50		W1619	216R	24		SPARE	150-199
	51	UNUSED						050-099, 275-299
	51		W1619	216B	24		SPARE	150-199
	52	UNUSED						050-099, 275-299
	52		W1619	216Z			SPARE	150-199
	53	UNUSED						ALL
	54	UNUSED						ALL
	55		W1619	011	22		34-22-26	ALL
D04805P		AE0317/ /		PLUG-E1-5				ALL
	1		W0119	111	22		34-31-21	ALL
	2		W0119	228R	24		34-61-24	ALL
	3		W0119	228B	24		34-61-24	ALL
	4		W0119	228Z			34-61-24	ALL
	5		W0119	286R	24		34-61-24	ALL
	6		W0119	286B	24		34-61-24	ALL
	7		W0119	286Z			34-61-24	ALL
	8		W0119	298R	24		34-22-28	ALL
	9		W0119	298B	24		34-22-28	ALL
	10		W0119	298Z			34-22-28	ALL
	11		W0119	550R	24		34-61-26	ALL
	12		W0119	550B	24		34-61-26	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04800

Page 9

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04805P		AE0317/ /		PLUG-E1-5 (continued)				ALL
	13		W0119	550Z			34-61-26	ALL
	14		W0119	213R	24		34-61-26	ALL
	15		W0119	213B	24		34-61-26	ALL
	16		W0119	213Z			34-61-26	ALL
	17		W0119	263R	24		34-22-29	ALL
	18		W0119	263B	24		34-22-29	ALL
	19		W0119	263Z			34-22-29	ALL
	20		W0119	264R	24		34-22-29	ALL
	21		W0119	264B	24		34-22-29	ALL
	22		W0119	264Z			34-22-29	ALL
	23		W0119	243B	24		34-61-22	ALL
	24		W0119	243R	24		34-61-22	ALL
	25		W0119	243Z			34-61-22	ALL
	26		W0119	289R	24		34-61-22	ALL
	27		W0119	289B	24		34-61-22	ALL
	28		W0119	289Z			34-61-22	ALL
	29		W0119	240R	24		34-12-22	ALL
	30		W0119	240B	24		34-12-22	ALL
	31		W0119	240Z			34-12-22	ALL
	32		W0119	257R	24		34-31-21	ALL
	33		W0119	257B	24		34-31-21	ALL
	34		W0119	257Z			34-31-21	ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43		W0119	601	22		31-31-18	ALL
	44		W0119	602	22		31-31-18	ALL
	45		W0119	603	22		31-31-18	ALL
	46		W0119	604	22		31-31-18	ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D04800

Page 10

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04805P		AE0317/ /		PLUG-E1-5 (continued)				ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55		W0119	096	22		34-22-26	ALL
D04807J		AL1001/ /		RCPT-L WW FWD OUTBD				ALL
	1		W0495	201R	20		22-11-11	ALL
	2		W0495	201B	20		22-11-11	ALL
	3		W0495	202R	20		22-13-11	ALL
	4		W0495	202B	20		22-13-11	ALL
	5		W0495	301R	20		22-13-11	ALL
	6		W0495	301B	20		22-13-11	ALL
	7		W0495	301Y	20		22-13-11	ALL
	8		W0495	302R	20		22-13-11	ALL
	9		W0495	302B	20		22-13-11	ALL
	10		W0495	302Y	20		22-13-11	ALL
	11		W0495	001	20		22-11-12	ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14		W0495	002	20		22-11-12	ALL
D04807P		AL1001/ /		PLUG-L WW FWD OUTBD				ALL
	1		W0507	201R	20		22-11-11	ALL
	2		W0507	201B	20		22-11-11	ALL
	3		W0507	204R	20		22-13-11	ALL
	4		W0507	204B	20		22-13-11	ALL
	5		W0507	301R	20		22-13-11	ALL
	6		W0507	301B	20		22-13-11	ALL
	7		W0507	301Y	20		22-13-11	ALL
	8		W0507	302R	20		22-13-11	ALL
	9		W0507	302B	20		22-13-11	ALL
	10		W0507	302Y	20		22-13-11	ALL
	11		W0507	002	20		22-11-12	ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14		W0507	004	20		22-11-12	ALL
D04809J		AE0202/ /		RCPT-				ALL
	1		W1080	507	24		34-61-23	ALL
	2		W1080	508	24		34-61-23	ALL
	3		W1080	509	24		34-61-23	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04800

Page 11

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04809J		AE0202/ /		RCPT- (continued)				ALL
	4		W1080	510	24		34-61-23	ALL
	5		W1080	511	24		34-61-23	ALL
	6		W1080	512	24		34-61-23	ALL
	7		W1080	513	24		34-61-23	ALL
	8		W1080	514	24		34-61-23	ALL
	9		W1080	515	24		34-61-23	ALL
	10		W1080	516	24		34-61-23	ALL
	11	UNUSED						ALL
	12		W1080	010	24		31-51-41	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17		W1080	700	24		31-31-21	ALL
	18		W1080	703	24		31-31-21	ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	23		W1080	601	24		31-51-42	050-099 150-199, 275-299
	24	UNUSED						ALL
	DED		W1080	512Z			34-61-23	ALL
	DED		W1080	513Z			34-61-23	ALL
	DED		W1080	514Z			34-61-23	ALL
	DED		W1080	515Z			34-61-23	ALL
	DED		W1080	516Z			34-61-23	ALL
D04809P		AE0202/ /		PLUG-P50 CARD FILE,ELECTRICAL SYSTEMS				ALL
	1		W0453	034	24		34-61-23	ALL
	2		W0453	025	24		34-61-23	ALL
	3		W0453	026	24		34-61-23	ALL
	4		W0453	027	24		34-61-23	ALL
	5		W0453	028	24		34-61-23	ALL
	6		W0453	029	24		34-61-23	ALL
	7		W0453	030	24		34-61-23	ALL
	8		W0453	031	24		34-61-23	ALL
	9		W0453	032	24		34-61-23	ALL
	10		W0453	033	24		34-61-23	ALL
	11	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D04800

Page 12

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04809P		AE0202/ /		PLUG-P50 CARD FILE,ELECTRICAL SYSTEMS (continued)				ALL
	12		W0453	042	24		31-51-41	ALL
	13		W0453	043	24		SPARE	ALL
	14	UNUSED						ALL
	15		W0453	058	24		SPARE	ALL
	16		W0453	060	24		SPARE	ALL
	17		W0453	063	24		31-31-21	ALL
	18		W0453	064	24		31-31-21	ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23		W0453	053	22		SPARE	050-099
	23		W0453	053	22		31-51-42	150-199, 275-299
	24	UNUSED						ALL
	DED		W0453	029Z			34-61-23	ALL
	DED		W0453	030Z			34-61-23	ALL
	DED		W0453	031Z			34-61-23	ALL
	DED		W0453	032Z			34-61-23	ALL
	DED		W0453	033Z			34-61-23	ALL
D04811J		AE0320/ /		RCPT-E2-3				ALL
	1		W1649	001	24		31-31-17	ALL
	2		W1649	002	24		31-31-17	ALL
	3		W1649	003	24		31-31-17	ALL
	4	UNUSED						050-099, 275-299
	4		W1649	203R	24		SPARE	150-199
	5		W1649	201R	24		23-51-12	ALL
	6		W1649	201B	24		23-51-12	ALL
	7		W1649	201Z			23-51-12	ALL
	8		W1649	007	24		23-51-12	ALL
	9		W1649	007Z			23-51-12	ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						050-099, 275-299
	13		W1649	203B	24		SPARE	150-199
	14	UNUSED						050-099, 275-299
	14		W1649	203Z			SPARE	150-199
	15		W1649	005	24		SPARE	ALL
	16		W1649	006	24		SPARE	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04800

Page 13

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04811J		AE0320/ /		RCPT-E2-3 (continued)				ALL
	17		W1649	204R	24		SPARE	050-099, 277-299
	17		W1649	204R	24		31-31-14	150-199, 275-276
	18		W1649	204B	24		SPARE	050-099, 277-299
	18		W1649	204B	24		31-31-14	150-199, 275-276
	19		W1649	205R	24		SPARE	050-099, 277-299
	19		W1649	205R	24		31-31-14	150-199, 275-276
	20		W1649	205B	24		SPARE	050-099, 277-299
	20		W1649	205B	24		31-31-14	150-199, 275-276
	21		W1649	FRD			SPARE	050-099, 277-299
	21		W1649	FRD			31-31-14	150-199, 275-276
	22		W1649	202R	24		23-22-11	ALL
	23		W1649	202B	24		23-22-11	ALL
	24		W1649	009	24		31-51-33	ALL
	25		W1649	206R	24		23-22-11	ALL
	26		W1649	206B	24		23-22-11	ALL
	27		W1649	206Z			23-22-11	ALL
	28	UNUSED						ALL
	29		W1649	011	24		31-31-17	ALL
	30		W1649	012	24		31-31-17	ALL
	31		W1649	013	24		23-21-11	ALL
	32		W1649	207R	24		34-61-25	ALL
	33		W1649	207B	24		34-61-25	ALL
	34		W1649	207Z			34-61-25	ALL
	35		W1649	208R	24		34-61-25	ALL
	36		W1649	208B	24		34-61-25	ALL
	37		W1649	208Z			34-61-25	ALL
	38		W1649	209R	24		23-22-11	ALL
	39		W1649	209B	24		23-22-11	ALL
	40		W1649	209Z			23-22-11	ALL
	41		W1649	202Z			23-22-11	ALL
	42	UNUSED						ALL
	43	UNUSED						050-099, 150-156, 162-166, 275-276
	43		W1649	014	24		34-61-17	157, 167-199, 277-299
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D04800

Page 14

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04811J		AE0320/ /		RCPT-E2-3 (continued)				ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						050-099, 150-199
	53		W1633	901R	24		23-22-11	275-299
	54	UNUSED						050-099, 150-199
	54		W1633	901B	24		23-22-11	275-299
	55	UNUSED						050-099, 150-199
	55		W1633	901Z			23-22-11	275-299
			W1649	204Z			SPARE	050-099, 277-299
			W1649	205Z			SPARE	050-099, 277-299
			W1649	FRD			SPARE	050-099, 277-299
			W1649	204Z			31-31-14	150-199, 275-276
			W1649	205Z			31-31-14	150-199, 275-276
			W1649	FRD			31-31-14	150-199, 275-276
D04811P		AE0320/ /		PLUG-E2-3				ALL
	1		W0145	110	24		31-31-17	ALL
	2		W0145	111	24		31-31-17	ALL
	3		W0145	112	24		31-31-17	ALL
	4	UNUSED						ALL
	5		W0145	302R	24		23-51-12	ALL
	6		W0145	302B	24		23-51-12	ALL
	7		W0145	302Y	24		23-51-12	ALL
	8		W0145	265R	24		23-51-12	ALL
	9		W0145	265B	24		23-51-12	ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22		W0145	287R	24		23-22-11	ALL
	23		W0145	287B	24		23-22-11	ALL
	24		W0145	149	24		31-51-33	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04800

Page 15

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04811P		AE0320/ /		PLUG-E2-3 (continued)				ALL
	25		W0145	574R	24		23-22-11	ALL
	26		W0145	574B	24		23-22-11	ALL
	27		W0145	574Z			23-22-11	ALL
	28	UNUSED						ALL
	29		W0145	115	24		31-31-17	ALL
	30		W0145	116	24		31-31-17	ALL
	31		W0145	152	24		23-21-11	ALL
	32		W0145	539R	24		34-61-25	ALL
	33		W0145	539B	24		34-61-25	ALL
	34		W0145	539Z			34-61-25	ALL
	35		W0145	541R	24		34-61-25	ALL
	36		W0145	541B	24		34-61-25	ALL
	37		W0145	541Z			34-61-25	ALL
	38		W0145	286R	24		23-22-11	ALL
	39		W0145	286B	24		23-22-11	ALL
	40		W0145	286Z			23-22-11	ALL
	41		W0145	287Z			23-22-11	ALL
	42	UNUSED						ALL
	43	UNUSED						050-099, 150-156, 162-166, 275-276
	43		W0145	119	24		34-61-17	157, 167-199, 277-299
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						050-099, 150-199
	53		W0145	902R	24		23-22-11	275-299
	54	UNUSED						050-099, 150-199
	54		W0145	902B	24		23-22-11	275-299
	55	UNUSED						050-099, 150-199
	55		W0145	902Z			23-22-11	275-299
D04813J		AE0320/ /		RCPT-E2-5				ALL
	1		W1649	001	24		31-31-17	ALL
	2		W1649	002	24		31-31-17	ALL
	3		W1649	003	24		31-31-17	ALL

HOOKUP LIST
D280T132

91-21-51
Section D04800
Page 16
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04813J		AE0320/ /		RCPT-E2-5 (continued)				ALL
	4	UNUSED						050-099, 275-299
	4		W1649	203R	24		SPARE	150-199
	5		W1649	201R	24		23-51-12	ALL
	6		W1649	201B	24		23-51-12	ALL
	7		W1649	201Z			23-51-12	ALL
	8		W1649	007	24		23-51-12	ALL
	9		W1649	007Z			23-51-12	ALL
	10		W1649	202R	24		23-22-11	ALL
	11		W1649	202B	24		23-22-11	ALL
	12		W1649	202Z			23-22-11	ALL
	13	UNUSED						050-099, 275-299
	13		W1649	203B	24		SPARE	150-199
	14	UNUSED						050-099, 275-299
	14		W1649	203Z			SPARE	150-199
	15		W1649	005	24		SPARE	ALL
	16		W1649	006	24		SPARE	ALL
	17		W1649	204R	24		SPARE	050-099, 277-299
	17		W1649	204R	24		31-31-14	150-199, 275-276
	18		W1649	204B	24		SPARE	050-099, 277-299
	18		W1649	204B	24		31-31-14	150-199, 275-276
	19		W1649	205R	24		SPARE	050-099, 277-299
	19		W1649	205R	24		31-31-14	150-199, 275-276
	20		W1649	205B	24		SPARE	050-099, 277-299
	20		W1649	205B	24		31-31-14	150-199, 275-276
	21		W1649	FRE			SPARE	050-099, 277-299
	21		W1649	FRE			31-31-14	150-199, 275-276
	22		W1649	008	24		23-51-13	ALL
	23		W1649	008Z			23-51-13	ALL
	24		W1649	009	24		31-51-33	ALL
	25		W1649	206R	24		23-22-11	ALL
	26		W1649	206B	24		23-22-11	ALL
	27		W1649	206Z			23-22-11	ALL
	28		W1649	010	24		SPARE	ALL
	29		W1649	011	24		31-31-17	ALL
	30		W1649	012	24		31-31-17	ALL
	31		W1649	013	24		23-21-11	ALL
	32		W1649	207R	24		34-61-25	ALL
	33		W1649	207B	24		34-61-25	ALL
	34		W1649	207Z			34-61-25	ALL
	35		W1649	208R	24		34-61-25	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04800

Page 17

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04813J		AE0320 / /		RCPT-E2-5 (continued)				ALL
	36		W1649	208B	24		34-61-25	ALL
	37		W1649	208Z			34-61-25	ALL
	38		W1649	209R	24		23-22-11	ALL
	39		W1649	209B	24		23-22-11	ALL
	40		W1649	209Z			23-22-11	ALL
	41	UNUSED						ALL
	42	UNUSED						050-099, 157, 167-199, 277-299
	43	UNUSED						050-099
	43		W1649	014	24		34-61-17	157, 167-199, 277-299
	44	UNUSED						050-099, 157, 167-199, 277-299
	45	UNUSED						050-099, 157, 167-199, 277-299
	46	UNUSED						050-099, 157, 167-199, 277-299
	47	UNUSED						050-099, 157, 167-199, 277-299
	48	UNUSED						050-099, 157, 167-199, 277-299
	49	UNUSED						050-099, 157, 167-199, 277-299
	50	UNUSED						050-099, 157, 167-199, 277-299
	51	UNUSED						050-099, 157, 167-199, 277-299
	52	UNUSED						050-099, 157, 167-199, 277-299
	53	UNUSED						050-099, 157, 167-199, 277-299
	54	UNUSED						050-099, 157, 167-199, 277-299
	55	UNUSED						050-099, 157, 167-199, 277-299
			W1649	204Z			SPARE	050-099, 277-299
			W1649	205Z			SPARE	050-099, 277-299
			W1649	FRE			SPARE	050-099, 277-299
			W1649	204Z			31-31-14	150-199, 275-276
			W1649	205Z			31-31-14	150-199, 275-276
			W1649	FRE			31-31-14	150-199, 275-276
D04813P		AE0320 / /		PLUG-E2-5				ALL
	1		W0139	781	24		31-31-17	ALL
	2		W0139	782	24		31-31-17	ALL
	3		W0139	082	24		31-31-17	ALL
	4	UNUSED						ALL
	5		W0139	304R	24		23-51-12	ALL
	6		W0139	304Y	24		23-51-12	ALL
	7		W0139	304B	24		23-51-12	ALL
	8		W0139	232R	24		23-51-12	ALL
	9		W0139	232B	24		23-51-12	ALL
	10		W0139	284R	24		23-22-12	ALL
	11		W0139	284B	24		23-22-12	ALL

HOOKUP LIST
D280T132

91-21-51
Section D04800
Page 18
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04813P		AE0320/ /		PLUG-E2-5 (continued)				ALL
	12		W0139	284Z			23-22-12	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22		W0139	255R	24		23-51-13	ALL
	23		W0139	255B	24		23-51-13	ALL
	24		W0139	717	24		31-51-33	ALL
	25		W0139	289R	24		23-22-11	ALL
	26		W0139	289B	24		23-22-11	ALL
	27		W0139	289Z			23-22-11	ALL
	28	UNUSED						ALL
	29		W0139	779	24		31-31-17	ALL
	30		W0139	780	24		31-31-17	ALL
	31		W0139	785	24		23-21-11	ALL
	32		W0139	262R	24		34-61-25	ALL
	33		W0139	262B	24		34-61-25	ALL
	34		W0139	262Z			34-61-25	ALL
	35		W0139	286R	24		23-22-12	ALL
	36		W0139	286B	24		23-22-12	ALL
	37		W0139	286Z			23-22-12	ALL
	38		W0139	288R	24		23-22-11	ALL
	39		W0139	288B	24		23-22-11	ALL
	40		W0139	288Z			23-22-11	ALL
	41	UNUSED						ALL
	42	UNUSED						050-099, 157, 167-199, 277-299
	43	UNUSED						050-099
	43		W0139	674	24		34-61-17	157, 167-199, 277-299
	44	UNUSED						050-099, 157, 167-199, 277-299
	45	UNUSED						050-099, 157, 167-199, 277-299
	46	UNUSED						050-099, 157, 167-199, 277-299
	47	UNUSED						050-099, 157, 167-199, 277-299
	48	UNUSED						050-099, 157, 167-199, 277-299
	49	UNUSED						050-099, 157, 167-199, 277-299
	50	UNUSED						050-099, 157, 167-199, 277-299

HOOKUP LIST

D280T132

91-21-51

Section D04800

Page 19

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04813P		AE0320/ /		PLUG-E2-5 (continued)				ALL
	51	UNUSED						050-099, 157, 167-199, 277-299
	52	UNUSED						050-099, 157, 167-199, 277-299
	53	UNUSED						050-099, 157, 167-199, 277-299
	54	UNUSED						050-099, 157, 167-199, 277-299
	55	UNUSED						050-099, 157, 167-199, 277-299
D04815J		347/130/L 48		RCPT-				ALL
	1	UNUSED						ALL
	2		W1705	002	24		34-21-31	ALL
	3		W1705	003	24		34-21-31	ALL
	4		W1705	004	24		34-21-31	ALL
	5		W1705	005	24		SPARE	ALL
	6	UNUSED						050-099
	6		W1705	006	24		SPARE	150-199, 275-299
	7		W1705	007	24		SPARE	ALL
	8		W1705	008	24		SPARE	ALL
	9		W1705	009	24		22-14-31	ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
D04815P		AE0319/ /		PLUG-				ALL
	1	UNUSED						ALL
	2		W0127	092	24		34-21-31	ALL
	3		W0127	093	24		34-21-31	ALL
	4		W0127	094	24		34-21-31	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9		W0127	075	24		22-14-31	ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D04800
Page 20
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04819J		AE0320/ /		RCPT-E2-3				ALL
	1		W0453	009	24		SPARE	ALL
	2		W0453	010	24		31-51-33	ALL
	3		W0453	035	24		31-51-11	ALL
	4	UNUSED						050-099, 155-199, 276-299
	4		W0453	007	24		31-51-21	150-154, 275
	5	UNUSED						050-099, 155-199, 276-299
	5		W0453	006	24		31-51-21	150-154, 275
	6		W0453	201Z			27-32-21	ALL
	7		W0453	201R	24		27-32-21	ALL
	8		W0453	201B	24		27-32-21	ALL
	9		W0453	004	24		31-51-21	ALL
	10		W0453	036	24		31-51-21	ALL
	11		W0453	037	24		31-51-33	ALL
	12	UNUSED						050-099, 155-199, 276-299
	12		W0453	008	24		31-51-21	150-154, 275
	13		W0453	005	24		31-51-33	ALL
	14	UNUSED						050-099, 155-199, 276-299
	14		W0453	056	24		31-51-21	150-154, 275
	15		W0453	055	24		31-41-16	ALL
	16	UNUSED						ALL
	17		W0453	001	24		23-21-11	ALL
	18		W0453	205R	24		22-14-21	ALL
	19		W0453	205B	24		22-14-21	ALL
	20		W0453	205Z			22-14-21	ALL
	21		W0453	039	24		31-51-41	ALL
	22		W0453	045	24		31-51-21	ALL
	23		W0453	048	24		27-81-31	ALL
	24		W0453	017	24		27-32-11	ALL
	25		W0453	025	24		34-61-23	ALL
	26		W0453	026	24		34-61-23	ALL
	27		W0453	027	24		34-61-23	ALL
	28		W0453	028	24		34-61-23	ALL
	29		W0453	029	24		34-61-23	ALL
	30		W0453	030	24		34-61-23	ALL
	31		W0453	031	24		34-61-23	ALL
	32		W0453	032	24		34-61-23	ALL
	33		W0453	033	24		34-61-23	ALL
	34		W0453	034	24		34-61-23	ALL
	35		W0453	023	24		27-32-21	ALL
	36		W0453	018	24		27-32-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04800

Page 21

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04819J		AE0320/ /		RCPT-E2-3 (continued)				ALL
	37		W0453	019	24		27-32-11	ALL
	38		W0453	020	24		27-32-11	ALL
	39		W0453	021	24		27-32-21	ALL
	40		W0453	022	24		27-32-21	ALL
	41		W0453	024	24		27-32-21	ALL
	42		W0453	211R	24		31-41-35	ALL
	43		W0453	062	24		31-31-22	ALL
	44		W0453	057	20		27-32-31	ALL
	45		W0453	211B	24		31-41-35	ALL
	46		W0453	206R	22		31-51-43	ALL
	47		W0453	206B	22		31-51-43	ALL
	48		W0453	211Z			31-41-35	ALL
	49		W0453	063	24		31-31-21	ALL
	50		W0453	064	24		31-31-21	ALL
	51		W0453	212R	24		28-41-11	ALL
	52		W0453	003	24		31-51-41	ALL
	53		W0453	212B	24		28-41-11	ALL
	54		W0453	053	22		SPARE	050-099
	54		W0453	053	22		31-51-42	150-199, 275-299
	55		W0453	212Z			28-41-11	ALL
	CAP	Y	W0453	040	24		27-81-31	050-099, 150-166
	CAP	Y	W0453	040	24		SPARE	167-199, 275-299
	DED		W0453	029Z			34-61-23	ALL
	DED		W0453	030Z			34-61-23	ALL
	DED		W0453	031Z			34-61-23	ALL
	DED		W0453	032Z			34-61-23	ALL
	DED		W0453	033Z			34-61-23	ALL
	DED		W0453	057Z			27-32-31	ALL
D04819P		AE0320/ /		PLUG-E2-3				ALL
	1	UNUSED						ALL
	2		W0145	149	24		31-51-33	ALL
	3		W0145	063	24		31-51-11	ALL
	4	UNUSED						050-099, 155-199, 276-299
	4		W0145	094	24		31-51-21	150-154, 275
	5	UNUSED						050-099, 155-199, 276-299
	5		W0145	093	24		31-51-21	150-154, 275
	6		W0145	578Z			34-12-62	ALL
	7		W0145	578R	24		34-12-62	ALL
	8		W0145	578B	24		34-12-62	ALL

HOOKUP LIST
D280T132

91-21-51
Section D04800
Page 22
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04819P		AE0320/ /		PLUG-E2-3 (continued)				ALL
	9		W0145	859	24		31-51-21	ALL
	10		W0145	064	24		31-51-21	ALL
	11		W0145	065	24		31-51-33	ALL
	12	UNUSED						050-099, 155-199, 276-299
	12		W0145	095	24		31-51-21	150-154, 275
	13		W0145	862	24		31-51-33	ALL
	14	UNUSED						050-099, 155-199, 276-299
	14		W0145	060	24		31-51-21	150-154, 275
	15		W0145	863	24		31-41-16	ALL
	16	UNUSED						ALL
	17		W0145	152	24		23-21-11	ALL
	18		W0145	280R	24		22-14-21	ALL
	19		W0145	280B	24		22-14-21	ALL
	20		W0145	280Z			22-14-21	ALL
	21		W0145	058	24		31-51-41	050-099
	21		W0145	638	24		31-51-41	150-199, 275-299
	22		W0145	567	24		31-51-21	ALL
	23	UNUSED						050-099
	23		W0145	725	24		27-81-31	150-199, 275-299
	24		W0145	838	24		27-32-11	ALL
	25		W0145	033	24		34-61-23	ALL
	26		W0145	034	24		34-61-23	ALL
	27		W0145	035	24		34-61-23	ALL
	28		W0145	036	24		34-61-23	ALL
	29		W0145	037	24		34-61-23	ALL
	30		W0145	038	24		34-61-23	ALL
	31		W0145	039	24		34-61-23	ALL
	32		W0145	040	24		34-61-23	ALL
	33		W0145	041	24		34-61-23	ALL
	34		W0145	032	24		34-61-23	ALL
	35		W0145	844	24		27-32-21	ALL
	36		W0145	839	24		27-32-11	ALL
	37		W0145	840	24		27-32-11	ALL
	38		W0145	841	24		27-32-11	ALL
	39		W0145	842	24		27-32-21	ALL
	40		W0145	843	24		27-32-21	ALL
	41		W0145	845	24		27-32-21	ALL
	42		W0145	568R	24		31-41-35	ALL
	43		W0145	633	24		31-31-22	ALL
	44		W0145	630	20		27-32-31	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04800

Page 23

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04819P		AE0320/ /		PLUG-E2-3 (continued)				ALL
	45		W0145	568B	24		31-41-35	ALL
	46		W0145	256R	22		31-51-43	ALL
	47		W0145	256B	22		31-51-43	ALL
	48		W0145	568Z			31-41-35	ALL
	49		W0145	631	24		31-31-21	ALL
	50		W0145	632	24		31-31-21	ALL
	51		W0145	570R	24		28-41-11	ALL
	52		W0145	176	24		31-51-41	ALL
	53		W0145	570B	24		28-41-11	ALL
	54	UNUSED						050-099
	54		W0145	640	24		31-51-41	150-199, 275-299
	55		W0145	570Z			28-41-11	ALL
	DED		W0145	037Z			34-61-23	ALL
	DED		W0145	038Z			34-61-23	ALL
	DED		W0145	039Z			34-61-23	ALL
	DED		W0145	040Z			34-61-23	ALL
	DED		W0145	041Z			34-61-23	ALL
	DED		W0145	630Z			27-32-31	ALL
D04821J		AE0320/ /		RCPT-E2-3				ALL
	1		W1619	001	24		34-31-21	ALL
	2		W1619	201R	24		34-61-24	ALL
	3		W1619	201B	24		34-61-24	ALL
	4		W1619	201Z			34-61-24	ALL
	5		W1619	202R	24		34-61-24	ALL
	6		W1619	202B	24		34-61-24	ALL
	7		W1619	202Z			34-61-24	ALL
	8		W1619	203R	24		34-22-28	ALL
	9		W1619	203B	24		34-22-28	ALL
	10		W1619	203Z			34-22-28	ALL
	11		W1619	204R	24		34-61-25	050-099
	11		W1619	204R	24		34-61-26	150-199, 275-299
	12		W1619	204B	24		34-61-25	050-099
	12		W1619	204B	24		34-61-26	150-199, 275-299
	13		W1619	204Z			34-61-26	ALL
	14		W1619	205R	24		34-61-26	ALL
	15		W1619	205B	24		34-61-26	ALL
	16		W1619	205Z			34-61-26	ALL
	17		W1619	206R	24		34-22-29	ALL
	18		W1619	206B	24		34-22-29	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04800

Page 24

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04821J		AE0320/ /		RCPT-E2-3 (continued)				ALL
	19		W1619	206Z			34-22-29	ALL
	20		W1619	207R	24		34-22-29	ALL
	21		W1619	207B	24		34-22-29	ALL
	22		W1619	207Z			34-22-29	ALL
	23		W1619	208B	24		34-61-22	ALL
	24		W1619	208R	24		34-61-22	ALL
	25		W1619	208Z			34-61-22	ALL
	26		W1619	209R	24		34-61-22	ALL
	27		W1619	209B	24		34-61-22	ALL
	28		W1619	209Z			34-61-22	ALL
	29		W1619	210R	24		34-12-22	ALL
	30		W1619	210B	24		34-12-22	ALL
	31		W1619	210Z			34-12-22	ALL
	32		W1619	211R	24		34-31-21	ALL
	33		W1619	211B	24		34-31-21	ALL
	34		W1619	211Z			34-31-21	ALL
	35		W1619	212R	24		34-58-22	ALL
	36		W1619	212B	24		34-58-22	ALL
	37		W1619	212Z			34-58-22	ALL
	38		W1619	002	24		SPARE	ALL
	39		W1619	039	24		SPARE	ALL
	40		W1619	213R	24		SPARE	ALL
	41		W1619	213B	24		SPARE	ALL
	42		W1619	213Z			SPARE	ALL
	43		W1619	003	22		31-31-18	ALL
	44		W1619	004	22		31-31-18	ALL
	45		W1619	005	22		31-31-18	ALL
	46		W1619	006	22		31-31-18	ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49		W1619	049	24		SPARE	ALL
	50	UNUSED						050-099, 275-299
	50		W1619	216R	24		SPARE	150-199
	51	UNUSED						050-099, 275-299
	51		W1619	216B	24		SPARE	150-199
	52	UNUSED						050-099, 275-299
	52		W1619	216Z			SPARE	150-199
	53	UNUSED						ALL
	54	UNUSED						ALL
	55		W1619	011	22		34-22-26	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04800

Page 25

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04821P		AE0320/ /		PLUG-E2-3				ALL
	1		W0145	097	24		34-31-21	ALL
	2		W0145	226R	24		34-61-24	ALL
	3		W0145	226B	24		34-61-24	ALL
	4		W0145	226Z			34-61-24	ALL
	5		W0145	227R	24		34-61-24	ALL
	6		W0145	227B	24		34-61-24	ALL
	7		W0145	227Z			34-61-24	ALL
	8		W0145	245R	24		34-22-28	ALL
	9		W0145	245B	24		34-22-28	ALL
	10		W0145	245Z			34-22-28	ALL
	11		W0145	592R	24		34-61-26	ALL
	12		W0145	592B	24		34-61-26	ALL
	13		W0145	592Z			34-61-26	ALL
	14		W0145	588R	24		34-61-26	ALL
	15		W0145	588B	24		34-61-26	ALL
	16		W0145	588Z			34-61-26	ALL
	17		W0145	285R	24		34-22-29	ALL
	18		W0145	285B	24		34-22-29	ALL
	19		W0145	285Z			34-22-29	ALL
	20		W0145	284R	24		34-22-29	ALL
	21		W0145	284B	24		34-22-29	ALL
	22		W0145	284Z			34-22-29	ALL
	23		W0145	210B	24		34-61-22	ALL
	24		W0145	210R	24		34-61-22	ALL
	25		W0145	210Z			34-61-22	ALL
	26		W0145	209R	24		34-61-22	ALL
	27		W0145	209B	24		34-61-22	ALL
	28		W0145	209Z			34-61-22	ALL
	29		W0145	515R	24		34-12-22	ALL
	30		W0145	515B	24		34-12-22	ALL
	31		W0145	515Z			34-12-22	ALL
	32		W0145	268R	24		34-51-21	ALL
	33		W0145	268B	24		34-51-21	ALL
	34		W0145	268Z			34-51-21	ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D04800

Page 26

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04821P		AE0320/ /		PLUG-E2-3 (continued)				ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43		W0145	121	22		31-31-18	ALL
	44		W0145	122	22		31-31-18	ALL
	45		W0145	123	22		31-31-18	ALL
	46		W0145	124	22		31-31-18	ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55		W0145	193	22		34-22-26	ALL
D04825J		AP1501/ /		RCPT-				ALL
	1		W0777	001	20		23-11-11	ALL
	2		W0777	002	20		23-11-11	ALL
	3		W0777	003	20		23-11-11	ALL
	4		W0777	004	20		23-11-11	ALL
	5		W0777	005	20		23-11-11	ALL
	6		W0777	006	20		23-11-11	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D04825P		AP1501/ /		PLUG-				ALL
	1		W0633	001	24		23-11-11	ALL
	2		W0633	002	24		23-11-11	ALL
	3		W0633	003	24		23-11-11	ALL
	4		W0633	004	24		23-11-11	ALL
	5		W0633	005	24		23-11-11	ALL
	6		W0633	006	20		23-11-11	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D04800

Page 27

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04825P		AP1501/ /		PLUG- (continued)				ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D04827J		AP1501/ /		RCPT-				ALL
	1		W0775	001	20		23-11-21	ALL
	2		W0775	002	20		23-11-21	ALL
	3		W0775	003	20		23-11-21	ALL
	4		W0775	004	20		23-11-21	ALL
	5		W0775	005	20		23-11-21	ALL
	6		W0775	006	20		23-11-21	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D04827P		AP1501/ /		PLUG-				ALL
	1		W0635	001	24		23-11-21	ALL
	2		W0635	002	24		23-11-21	ALL
	3		W0635	003	24		23-11-21	ALL
	4		W0635	004	24		23-11-21	ALL
	5		W0635	005	24		23-11-21	ALL
	6		W0635	006	20		23-11-21	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D04829J		AE0319/ /		RCPT-WX-L TO EFI-R,E1-5				ALL
	1		W0779	210W	24		34-43-11	ALL
	2		W0779	210WB	24		34-43-11	ALL
	3		W0779	210Z			34-43-11	ALL
	4		W0779	211R	24		34-43-11	ALL
	5		W0779	211B	24		34-43-11	ALL
	6		W0779	211Z			34-43-11	ALL
	7	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D04800

Page 28

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04829J		AE0319/ /		RCPT-WX-L TO EFI-R,E1-5 (continued)				ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
D04829P		AE0319/ /		PLUG-E1-5				ALL
	1		W0109	238W	24		34-43-11	050-099, 151
	1		W0109	912W	24		34-46-13	150, 152-199, 275-299
	2		W0109	238WB	24		34-43-11	050-099, 151
	2		W0109	912WB	24		34-46-13	150, 152-199, 275-299
	3		W0109	238Z			34-43-11	050-099, 151
	3		W0109	912Z			34-46-13	150, 152-199, 275-299
	4		W0109	237R	24		34-43-11	ALL
	5		W0109	237B	24		34-43-11	ALL
	6		W0109	237Z			34-43-11	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
D04831J		AE0305/ /		RCPT-E1-3				ALL
	1		W1561	209R	24		34-22-38	ALL
	2		W1561	209B	24		34-22-38	ALL
	3		W1561	209Z			34-22-38	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8		W1561	214R	24		34-21-21	ALL
	9		W1561	214B	24		34-21-21	ALL
	10		W1561	201R	24		22-13-11	ALL

HOOKUP LIST
D280T132

91-21-51
Section D04800
Page 29
Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04831J		AE0305/ /		RCPT-E1-3 (continued)				ALL
	11		W1561	201B	24		22-13-11	ALL
	12		W1561	201Z			22-13-11	ALL
	13		W1561	202R	24		22-32-11	ALL
	14		W1561	202B	24		22-32-11	ALL
	15		W1561	202Z			22-32-11	ALL
	16		W1561	203R	24		34-21-11	ALL
	17		W1561	203B	24		34-21-11	ALL
	18		W1561	203Z			34-21-11	ALL
	19		W1561	204R	24		34-22-18	ALL
	20		W1561	204B	24		34-22-18	ALL
	21		W1561	204Z			34-22-18	ALL
	22		W1561	207R	24		SPARE	ALL
	23		W1561	207B	24		SPARE	ALL
	24		W1561	207Z			SPARE	ALL
	25		W1561	025	24		SPARE	ALL
	26		W1561	026	24		SPARE	ALL
	27		W1561	027	24		SPARE	ALL
	28		W1561	028	24		SPARE	ALL
	29		W1561	214Z			34-21-21	ALL
	30		W1561	005	22		34-21-11	ALL
	31		W1561	006	22		34-21-11	ALL
	32		W1561	004	22		34-21-11	ALL
	33	UNUSED						ALL
	34		W1561	210R	24		32-42-11	ALL
	35		W1561	210B	24		32-42-11	ALL
	36		W1561	210Z			32-42-11	ALL
	37	UNUSED						ALL
	38		W1561	213R	24		22-21-21	ALL
	39		W1561	213B	24		22-21-21	ALL
	40		W1561	213Z			22-21-21	ALL
	41	UNUSED						ALL
D04831P		AE0305/ /		PLUG-E1-3				ALL
	1		W0105	682R	24		34-22-38	ALL
	2		W0105	682B	24		34-22-38	ALL
	3		W0105	682Z			34-22-38	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D04800

Page 30

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04831P		AE0305/ /		PLUG-E1-3 (continued)				ALL
	8		W0105	894R	24		34-21-21	ALL
	9		W0105	894B	24		34-21-21	ALL
	10		W0105	225R	24		22-13-11	ALL
	11		W0105	225B	24		22-13-11	ALL
	12		W0105	225Z			22-13-11	ALL
	13		W0105	660R	24		22-32-11	ALL
	14		W0105	660B	24		22-32-11	ALL
	15		W0105	660Z			22-32-11	ALL
	16		W0105	514R	24		34-21-11	ALL
	17		W0105	514B	24		34-21-11	ALL
	18		W0105	514Z			34-21-11	ALL
	19		W0105	291R	24		34-22-18	ALL
	20		W0105	291B	24		34-22-18	ALL
	21		W0105	291Z			34-22-18	ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29		W0105	894Z			34-21-21	ALL
	30		W0105	855	22		34-21-11	ALL
	31		W0105	856	22		34-21-11	ALL
	32		W0105	857	22		34-21-11	ALL
	33	UNUSED						ALL
	34		W0105	297R	24		32-42-11	ALL
	35		W0105	297B	24		32-42-11	ALL
	36		W0105	297Z			32-42-11	ALL
	37	UNUSED						ALL
	38		W0105	897R	24		22-21-21	ALL
	39		W0105	897B	24		22-21-21	ALL
	40		W0105	897Z			22-21-21	ALL
	41	UNUSED						ALL
D04839J		F 282/ /LE		JACK-COAX,HF L				ALL
	= A1		W0243	01CX			23-11-11	ALL
	= C1		W0243	01CO			23-11-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04800

Page 31

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04839P		F 282/ /LE		PLUG-COAX,HF L				ALL
	= A1		W0377	01CX			23-11-11	ALL
	= C1		W0377	01CO			23-11-11	ALL
D04841J		F 271/ /LE		JACK-COAX,HF R				ALL
	= A1		W0247	01CX			23-11-21	ALL
	= C1		W0247	01CO			23-11-21	ALL
D04841P		F 276/ /LE		PLUG-COAX,HF R				ALL
	= A1		W0379	01CX			23-11-21	ALL
	= C1		W0379	01CO			23-11-21	ALL
D04843J		AE0308/ /		RCPT-E2-1				ALL
	1		W0141	004	22		22-21-21	ALL
	2		W0141	006	22		22-21-21	ALL
	3		W0141	005	22		22-21-21	ALL
	4		W0141	121	22		27-61-12	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D04843P		AE0308/ /		PLUG-E2-1				ALL
	1		W1309	002	20		22-21-21	ALL
	2		W1309	003	22		22-21-21	ALL
	3		W1309	004	22		22-21-21	ALL
	4		W1309	016	22		27-61-12	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D04800
Page 32
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04849J		AE0319/ /		RCPT-WX-R TO EFI-R,E1-5				ALL
	1		W0803	008	24		34-43-21	ALL
	2		W0803	206R	24		34-43-21	ALL
	3		W0803	206B	24		34-43-21	ALL
	4		W0803	206Z			34-43-21	ALL
	5		W0803	208W	24		34-43-21	ALL
	6		W0803	208WB	24		34-43-21	ALL
	7		W0803	208Z			34-43-21	ALL
	8		W0803	212R	24		34-43-21	ALL
	9		W0803	212B	24		34-43-21	ALL
	10		W0803	212Z			34-43-21	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
D04849P		AE0319/ /		PLUG-E1-5				ALL
	1		W0119	188	24		34-43-21	ALL
	2		W0119	285R	24		34-43-21	ALL
	3		W0119	285B	24		34-43-21	ALL
	4		W0119	285Z			34-43-21	ALL
	5		W0119	503W	24		34-43-21	050-099, 151
	5		W0109	914W	24		34-46-13	150, 152-199, 275-299
	6		W0119	503WB	24		34-43-21	050-099, 151
	6		W0109	914WB	24		34-46-13	150, 152-199, 275-299
	7		W0119	503Z			34-43-21	050-099, 151
	7		W0109	914Z			34-46-13	150, 152-199, 275-299
	8		W0119	501R	24		34-43-21	ALL
	9		W0119	501B	24		34-43-21	ALL
	10		W0119	501Z			34-43-21	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
D04852J		AF0204/ /		RCPT-P61				ALL
	1		W0070	102	22		31-31-26	ALL
	2	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D04800
Page 33
Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04852J		AF0204/ /		RCPT-P61 (continued)				ALL
	3	UNUSED						ALL
	4		W0070	15A	24		73-21-15	ALL
	5	UNUSED						ALL
	6		W0070	792R	22		26-17-11	ALL
	7		W0070	793R	22		26-17-11	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10		W0070	794R	22		26-17-11	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						050-099
	18		W0070	880R	20		26-23-12	150-199, 275-299
	19		W0070	801R	20		26-23-12	ALL
	20		W0070	802R	20		26-23-12	ALL
	21		W0070	306R	24		49-94-14	ALL
	22		W0070	306B	24		49-94-14	ALL
	23		W0070	306Y	24		49-94-14	ALL
	24	UNUSED						050-099, 150-199, 277-299
	24		W0070	01L	24		21-44-21	275-276
	25	UNUSED						ALL
	26	UNUSED						050-099, 150-199, 277-299
	26		W0070	01X	24		21-44-21	275-276
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	CAP	Y	W0070	01L	24		SPARE	051-099, 150-154
	CAP	Y	W0070	01X	24		SPARE	051-099, 150-154
	DED		W0070	102Z			31-31-26	ALL
D04852P		AF0204/ /		PLUG-P61				ALL
	1		W0606	102	22		31-31-26	ALL
	2	UNUSED						050-099
	2		W0606	143	22		SPARE	150-199, 275-299

HOOKUP LIST
D280T132

91-21-51
Section D04800
Page 34
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04852P		AF0204/ /		PLUG-P61 (continued)				ALL
	3	UNUSED						ALL
	4		W0606	644	24		73-21-15	ALL
	5	UNUSED						ALL
	6		W0606	634R	22		26-17-11	ALL
	7		W0606	627R	22		26-17-11	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10		W0606	630R	22		26-17-11	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						050-099
	18		W0606	718R	20		26-23-12	150-199, 275-299
	19		W0606	719R	20		26-23-12	ALL
	20		W0606	720R	20		26-23-12	ALL
	21		W0606	301R	24		49-94-14	ALL
	22		W0606	301B	24		49-94-14	ALL
	23		W0606	301Y	24		49-94-14	ALL
	24	UNUSED						050-099, 150-199, 277-299
	24		W0606	729	24		21-44-21	275-276
	25	UNUSED						ALL
	26	UNUSED						050-099, 150-199, 277-299
	26		W0606	730	24		21-44-21	275-276
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	CAP	Y	W0606	729	24		SPARE	051-099, 150-154
	CAP	Y	W0606	730	24		SPARE	051-099, 150-154
D04853J		AE0305/ /		RCPT-E1-5				ALL
	1	UNUSED						ALL
	2		W1605	006	24		22-15-12	ALL
	3		W1605	203R	24		SPARE	ALL
	4		W1605	203B	24		SPARE	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04800

Page 35

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04853J		AE0305/ /		RCPT-E1-5 (continued)				ALL
	5		W1605	203Z			SPARE	ALL
	6		W1605	001	24		22-14-11	ALL
	7		W1605	007	24		34-46-12	ALL
	8		W1605	002	24		22-14-11	ALL
	9		W1605	003	24		22-14-11	ALL
	10		W1605	004	22		22-14-21	ALL
	11		W1605	005	24		22-14-11	ALL
	12		W1605	202R	24		22-15-11	ALL
	13		W1605	202B	24		22-15-11	ALL
	14		W1605	202Z			22-15-11	ALL
	15		W1605	206R	24		34-46-12	ALL
	16		W1605	206B	24		34-46-12	ALL
	17		W1605	206Z			34-46-12	ALL
	18		W1605	207R	24		34-46-12	ALL
	19		W1605	207B	24		34-46-12	ALL
	20		W1605	207Z			34-46-12	ALL
	21		W1605	024	24		SPARE	ALL
	22		W1605	023	24		SPARE	ALL
	23	UNUSED						050-099, 275-299
	23		W1605	025	24		SPARE	150-199
	24		W1605	008	22		SPARE	ALL
	25		W1605	011	22		34-46-12	ALL
	26		W1605	032	22		31-31-26	050-099
	26		W1605	032	24		31-31-26	150-199, 275-299
	27		W1605	020	20		31-31-26	050-099
	27		W1605	020	24		31-31-26	150-199, 275-299
	28	UNUSED						050-099, 150-152, 155-199, 275-299
	28		W1605	037	22		SPARE	153-154
	29	UNUSED						050-099, 150-152, 155-199, 275-299
	29		W1605	038	22		SPARE	153-154
	30		W1605	030	24		22-14-31	ALL
	31		W1605	031	22		SPARE	ALL
	32	UNUSED						050-099, 150-199
	32		W1605	012	24		34-16-11	275-299
	33	UNUSED						050-099, 150-199
	33		W1605	013	24		34-16-11	275-299
	34	UNUSED						050-099
	34		W1605	034	22		34-45-12	150-199, 275-299
	35	UNUSED						050-099
	35		W1605	029	22		34-45-12	150-199, 275-299

HOOKUP LIST

D280T132

91-21-51

Section D04800

Page 36

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04853J		AE0305/ /		RCPT-E1-5 (continued)				ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						050-099
	39		W1605	210Z			SPARE	150-199, 275-299
	40	UNUSED						ALL
	41	UNUSED						050-099
	41		W1605	210R	24		SPARE	150-199, 275-299
	42	UNUSED						050-099
	42		W1605	210B	24		SPARE	150-199, 275-299
	43	UNUSED						ALL
	44	UNUSED						ALL
	45		W1605	019	24		34-46-12	ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54		W1605	039	22		34-45-12	ALL
	55	UNUSED						ALL
D04853P		AE0305/ /		PLUG-E1-5				ALL
	1	UNUSED						ALL
	2		W0109	083	24		22-15-12	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W0109	070	24		22-14-11	ALL
	7		W0109	717	24		34-46-12	ALL
	8		W0109	071	24		22-14-11	ALL
	9		W0109	073	24		22-14-11	ALL
	10		W0109	056	22		22-14-21	ALL
	11		W0109	082	24		22-14-11	ALL
	12		W0109	231R	24		22-15-11	ALL
	13		W0109	231B	24		22-15-11	ALL
	14		W0109	231Z			22-15-11	ALL
	15		W0109	211R	24		34-46-12	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04800

Page 37

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04853P		AE0305/ /		PLUG-E1-5 (continued)				ALL
	16		W0109	211B	24		34-46-12	ALL
	17		W0109	211Z			34-46-12	ALL
	18		W0109	604R	24		34-46-12	ALL
	19		W0109	604B	24		34-46-12	ALL
	20		W0109	604Z			34-46-12	ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25		W0109	709	22		34-46-12	ALL
	26		W0109	023	24		31-31-26	ALL
	27		W0109	024	24		31-31-26	ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30		W0109	101	24		22-14-31	ALL
	31	UNUSED						ALL
	32	UNUSED						050-099, 150-199
	32		W0109	095	24		34-16-11	275-299
	33	UNUSED						050-099, 150-199
	33		W0109	096	24		34-16-11	275-299
	34	UNUSED						050-099, 150-152, 155-156, 162-166, 275-276
	34		W0109	622	22		34-45-12	153-154, 157, 167-199, 277-299
	35	UNUSED						050-099, 150-152, 155-156, 162-166, 275-276
	35		W0109	623	22		34-45-12	153-154, 157, 167-199, 277-299
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45		W0109	002	24		34-46-12	ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D04800
Page 38
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04853P		AE0305/ /		PLUG-E1-5 (continued)				ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54		W0109	612	22		34-45-12	ALL
	55	UNUSED						ALL
D04854J		AF0204/ /		RCPT-P61				ALL
	1		W0070	03G	16		28-25-11	ALL
	2		W0070	03K	18		28-26-11	ALL
	3		W0070	04S	22		32-41-11	ALL
	4		W0070	510	22		28-22-31	ALL
	5		W0070	588	22		28-22-31	ALL
	6		W0070	13E	18		28-41-12	ALL
	7		W0070	017	24		29-11-32	ALL
	8		W0070	03N	18		28-41-12	ALL
	9		W0070	589	22		28-22-31	ALL
	10		W0070	03A	18		28-21-11	ALL
	11	UNUSED						ALL
	12		W0070	088	24		21-33-21	ALL
	13		W0070	089	24		21-33-21	ALL
	14	UNUSED						ALL
	15		W0070	03X	22		29-11-32	ALL
	16	UNUSED						ALL
	17		W0070	03M	20		28-21-13	ALL
	18	UNUSED						050-099
	18		W0070	59A	22		SPARE	150-199, 275-299
	19		W0070	03W	22		29-11-32	ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22		W0070	010	22		29-11-32	ALL
	23		W0070	03Y	22		29-11-32	ALL
	24		W0070	086	24		21-33-21	ALL
	25		W0070	087	24		21-33-21	ALL
	26		W0070	009	22		29-11-32	ALL
	27	UNUSED						ALL
	28		W0070	597	24		28-25-11	ALL
	29		W0070	586	24		28-25-11	ALL
	30		W0070	596	24		28-25-11	ALL
	31		W0070	591	22		28-22-31	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04800

Page 39

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04854J		AF0204/ /		RCPT-P61 (continued)				ALL
	32		W0070	04A	22		29-11-32	ALL
	DED		W0070	510Z			28-22-31	ALL
D04854P		AF0204/ /		PLUG-P61				ALL
	1		W0590	038	16		28-25-11	050-099
	1		W0590	038	12		28-25-11	150-199, 275-299
	2		W0590	011	18		28-26-11	ALL
	3		W0590	001	22		32-41-11	ALL
	4		W0590	009	18		28-22-31	ALL
	5		W0590	005	20		28-22-31	ALL
	6		W0590	040	18		28-41-12	ALL
	7		W0590	075	24		29-11-32	ALL
	8		W0590	020	18		28-41-12	ALL
	9		W0590	006	20		28-22-31	ALL
	10		W0590	017	18		28-21-11	ALL
	11		W0590	015	20		SPARE	ALL
	12		W0590	053	24		21-33-21	ALL
	13		W0590	054	24		21-33-21	ALL
	14	UNUSED						ALL
	15		W0590	065	22		29-11-32	ALL
	16		W0590	013	20		SPARE	ALL
	17		W0590	036	20		28-21-13	ALL
	18	UNUSED						050-099, 155-199, 276-299
	18		W0590	062	22		SPARE	150-154, 275
	19		W0590	027	22		29-11-32	ALL
	20	UNUSED						ALL
	21	UNUSED						050-099, 155-199, 275-299
	21		W0590	801	20		SPARE	150-154
	22		W0590	066	22		29-11-32	ALL
	23		W0590	023	22		29-11-32	ALL
	24		W0590	051	24		21-33-21	ALL
	25		W0590	052	24		21-33-21	ALL
	26		W0590	026	22		29-11-32	ALL
	27	UNUSED						050-099, 155-199, 275-299
	27	DL	W0590	012	18		SPARE	150-154
	28		W0590	030	24		28-25-11	ALL
	29		W0590	029	24		28-25-11	ALL
	30		W0590	059	24		28-25-11	ALL
	31		W0590	069	22		28-22-31	ALL
	32		W0590	067	22		29-11-32	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04800

Page 40

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04855J		AE0305/ /		RCPT-E1-3				ALL
	1		W1605	201R	24		31-31-14	ALL
	2		W1605	201B	24		31-31-14	ALL
	3		W1605	201Z			31-31-14	ALL
	4		W1605	204R	24		31-31-14	ALL
	5		W1605	204B	24		31-31-14	ALL
	6		W1605	204Z			31-31-14	ALL
	7		W1605	007	24		34-46-12	ALL
	8		W1605	205R	24		31-31-13	ALL
	9		W1605	205B	24		SPARE	050-099
	9		W1605	205B	24		31-31-13	150-199, 275-299
	10		W1605	009	22		31-31-14	ALL
	11		W1605	010	24		31-31-15	ALL
	12		W1605	006	24		22-15-12	ALL
	13		W1605	203R	24		SPARE	ALL
	14		W1605	203B	24		SPARE	ALL
	15		W1605	203Z			SPARE	ALL
	16		W1605	001	24		22-14-11	ALL
	17		W1605	017	24		31-31-19	ALL
	18		W1605	002	24		22-14-11	ALL
	19		W1605	003	24		22-14-11	ALL
	20		W1605	004	22		22-14-21	ALL
	21		W1605	005	24		22-14-11	ALL
	22		W1605	202R	24		22-15-11	ALL
	23		W1605	202B	24		22-15-11	ALL
	24		W1605	202Z			22-15-11	ALL
	25		W1605	206R	24		34-46-12	ALL
	26		W1605	206B	24		34-46-12	ALL
	27		W1605	206Z			34-46-12	ALL
	28		W1605	207R	24		34-46-12	ALL
	29		W1605	207B	24		34-46-12	ALL
	30		W1605	207Z			34-46-12	ALL
	31		W1605	024	24		SPARE	ALL
	32		W1605	023	24		SPARE	ALL
	33	UNUSED						050-099
	33		W1605	025	24		SPARE	150-199
	33		W1605	021	20		34-12-12	275-299
	34		W1605	008	22		SPARE	ALL
	35		W1605	209R	24		27-51-51	ALL
	36		W1605	209B	24		27-51-51	ALL
	37		W1605	209Z			27-51-51	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04800

Page 41

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04855J		AE0305/ /		RCPT-E1-3 (continued)				ALL
	38		W1605	018	24		34-12-12	ALL
	39	UNUSED						050-099
	39		W1605	210Z			SPARE	150-199, 275-299
	40		W1605	016	24		22-14-31	ALL
	41	UNUSED						050-099
	41		W1605	210R	24		SPARE	150-199, 275-299
	42	UNUSED						050-099
	42		W1605	210B	24		SPARE	150-199, 275-299
	43	UNUSED						050-099, 150-152, 155-199, 275-299
	43		W1605	037	22		SPARE	153-154
	44	UNUSED						050-099, 150-152, 155-199, 275-299
	44		W1605	038	22		SPARE	153-154
	45		W1605	019	24		34-46-12	ALL
	46	UNUSED						050-099, 150-152, 155-199, 275-299
	46		W1605	218R	24		34-45-12	153-154
	47	UNUSED						050-099, 150-152, 155-199, 275-299
	47		W1605	218B	24		34-45-12	153-154
	48	UNUSED						050-099, 150-152, 155-199, 275-299
	48		W1605	218Z			34-45-12	153-154
	49	UNUSED						050-099, 275-299
	49		W1605	213R	22		SPARE	150-199
	50	UNUSED						050-099, 275-299
	50		W1605	213B	22		SPARE	150-199
	51	UNUSED						050-099, 150-152, 155-199, 275-299
	51		W1605	217R	24		34-45-12	153-154
	52	UNUSED						050-099, 150-152, 155-199, 275-299
	52		W1605	217B	24		34-45-12	153-154
	53	UNUSED						050-099, 150-152, 155-199, 275-299
	53		W1605	217Z			34-45-12	153-154
	54	UNUSED						050-099, 150-152, 155-199, 275-299
	54		W1605	039	22		34-45-12	153-154
	55		W1605	028	22		31-31-14	ALL
D04855P		AE0305/ /		PLUG-E1-3				ALL
	1		W0105	693R	24		31-31-14	ALL
	2		W0105	693B	24		31-31-14	ALL
	3		W0105	693Z			31-31-14	ALL
	4		W0105	229R	24		31-31-14	ALL
	5		W0105	229B	24		31-31-14	ALL
	6		W0105	229Z			31-31-14	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04800

Page 42

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04855P		AE0305/ /		PLUG-E1-3 (continued)				ALL
	7		W0105	042	24		34-46-12	ALL
	8		W0105	294R	24		31-31-13	ALL
	9		W0105	294B	24		31-31-13	ALL
	10		W0105	604	24		31-31-14	ALL
	11		W0105	889	24		31-31-15	ALL
	12		W0105	077	24		22-15-12	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16		W0105	044	24		22-14-11	ALL
	17		W0105	890	24		31-31-19	ALL
	18		W0105	049	24		22-14-11	ALL
	19		W0105	050	24		22-14-11	ALL
	20		W0105	066	22		22-14-21	ALL
	21		W0105	057	24		22-14-11	ALL
	22		W0105	232R	24		22-15-11	ALL
	23		W0105	232B	24		22-15-11	ALL
	24		W0105	232Z			22-15-11	ALL
	25		W0105	515R	24		34-46-12	ALL
	26		W0105	515B	24		34-46-12	ALL
	27		W0105	515Z			34-46-12	ALL
	28		W0105	259R	24		34-46-12	ALL
	29		W0105	259B	24		34-46-12	ALL
	30		W0105	259Z			34-46-12	ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						050-099, 150-199
	33		W0105	190	24		34-12-12	275-299
	34	UNUSED						ALL
	35		W0105	523R	24		27-51-51	ALL
	36		W0105	523B	24		27-51-51	ALL
	37		W0105	523Z			27-51-51	ALL
	38		W0105	830	24		34-12-12	ALL
	39	UNUSED						ALL
	40		W0105	064	24		22-14-31	ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45		W0105	091	24		34-46-12	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04800

Page 43

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04855P		AE0305/ /		PLUG-E1-3 (continued)				ALL
	46	UNUSED						050-099, 150-152, 155-199, 275-299
	46		W0105	560R	24		34-45-12	153-154
	47	UNUSED						050-099, 150-152, 155-199, 275-299
	47		W0105	560B	24		34-45-12	153-154
	48	UNUSED						050-099, 150-152, 155-199, 275-299
	48		W0105	560Z			34-45-12	153-154
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						050-099, 150-152, 155-199, 275-299
	51		W0105	555R	24		34-45-12	153-154
	52	UNUSED						050-099, 150-152, 155-199, 275-299
	52		W0105	555B	24		34-45-12	153-154
	53	UNUSED						050-099, 150-152, 155-199, 275-299
	53		W0105	555Z			34-45-12	153-154
	54	UNUSED						050-099, 150-152, 155-199, 275-299
	54		W0105	623	22		34-45-12	153-154
	55		W0105	194	22		31-31-14	ALL
D04856J		AE0209/ /		RCPT-P36				ALL
	1		W0184	157	20		28-21-13	ALL
	2	UNUSED						ALL
	3		W0184	508	22		32-41-11	ALL
	4		W0184	10B	22		28-31-12	050-099, 155-199, 276-299
	4	UNUSED						150-154, 275
	5		W0184	501	20		28-22-31	ALL
	6		W0184	759	20		28-22-31	ALL
	7	UNUSED						ALL
	8		W0184	10E	22		28-42-13	050-099, 155-199, 276-299
	8	UNUSED						150-154, 275
	9	UNUSED						ALL
	10		W0184	609	24		28-22-11	ALL
	11	UNUSED						ALL
	12		W0184	164	24		29-21-31	ALL
	13	UNUSED						050-099, 275-299
	13		W0184	02K	24		28-22-12	150-199
	14	UNUSED						ALL
	15		W0184	097	22		28-21-11	ALL
	16		W0184	821	24		28-25-11	ALL
	17	UNUSED						ALL
	18		W0184	760	24		28-22-31	ALL

HOOKUP LIST
D280T132

91-21-51
Section D04800
Page 44
Feb 06/2009



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04856J		AE0209/ /		RCPT-P36 (continued)				ALL
	19		W0184	707	22		28-22-31	ALL
	20	UNUSED						ALL
	21		W0184	816R	22		26-17-11	ALL
	22		W0184	763	24		28-22-12	ALL
	23	DL	W0184	659	18		29-11-32	ALL
	24		W0184	779	24		29-21-31	ALL
	25	UNUSED						ALL
	26		W0184	658	22		29-11-32	ALL
	27		W0184	535	18		28-21-11	ALL
	28		W0184	837	18		28-41-12	ALL
	29		W0184	160	20		27-09-13	ALL
	30		W0184	504	20		28-26-11	ALL
	31		W0184	505	18		28-26-11	ALL
	32		W0184	515	18		27-11-12	ALL
	33		W0184	153	22		28-21-13	ALL
	34		W0184	646	22		29-11-32	ALL
	35		W0184	648	22		29-11-32	ALL
	36		W0184	657	22		29-11-32	ALL
	37		W0184	514	18		27-11-12	ALL
	38		W0184	513	20		27-11-12	ALL
	39		W0184	512	20		27-11-12	ALL
	40		W0184	604	22		28-41-12	ALL
	41		W0184	603	18		28-41-12	ALL
	42	UNUSED						050-099, 150-155, 162-165
	42		W0184	70R	18		38-32-11	156-157, 166-199, 277-299
	42		W0184	70T	18		38-32-11	275-276
	43	UNUSED						050-099, 150-155, 162-165
	43		W0184	70E	18		38-32-11	156-157, 166-199, 275-299
	DED		W0184	10BZ			28-31-12	050-099, 155-199, 276-299
	DED		W0184	10EZ			28-42-13	050-099, 155-199, 276-299
	DED		W0184	02KZ			28-22-12	150-199
D04856P		AE0209/ /		PLUG-P36				ALL
	1		W0590	036	20		28-21-13	ALL
	2	UNUSED						ALL
	3		W0590	001	22		32-41-11	ALL
	4		W0590	088	22		28-31-12	050-099, 155-199, 276-299
	4	UNUSED						150-154, 275
	5		W0590	005	20		28-22-31	ALL
	6		W0590	006	20		28-22-31	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04800

Page 45

Feb 06/2009



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04856P		AE0209/ /		PLUG-P36 (continued)				ALL
	7	UNUSED						ALL
	8		W0590	089	22		28-42-13	050-099, 155-199, 276-299
	8		W0590	062	22		SPARE	150-154, 275
	9	UNUSED						ALL
	10		W0590	055	24		28-22-11	ALL
	11	UNUSED						ALL
	12		W0590	004	24		29-21-31	ALL
	13	UNUSED						050-099, 275-299
	13		W0590	021	24		28-22-12	150-199
	14	UNUSED						ALL
	15		W0590	016	22		28-21-11	ALL
	16		W0590	056	24		28-25-11	ALL
	17		W0590	015	20		SPARE	ALL
	18	DK	W0590	009	18		28-22-31	050-099, 150-199, 275-278
	18	DL	W0590	009	18		28-22-31	280-299
	19		W0590	069	22		28-22-31	ALL
	20	UNUSED						ALL
	21		W0590	074R	22		26-17-11	ALL
	22		W0590	046	24		28-22-12	ALL
	23		W0590	023	22		29-11-32	ALL
	24		W0590	022	24		29-21-31	ALL
	25		W0590	018	24		36-11-61	050-099, 155-156, 162-166
	25		W0590	018	24		SPARE	150-154, 157, 167-199, 275-299
	26		W0590	026	22		29-11-32	ALL
	27		W0590	017	18		28-21-11	ALL
	28		W0590	040	18		28-41-12	ALL
	29		W0590	044	16		27-09-13	ALL
	30		W0590	010	20		28-26-11	ALL
	31		W0590	011	18		28-26-11	ALL
	32		W0590	070	18		27-11-12	ALL
	33		W0590	035	22		28-21-13	ALL
	34		W0590	065	22		29-11-32	ALL
	35		W0590	066	22		29-11-32	ALL
	36		W0590	067	22		29-11-32	ALL
	37		W0590	071	18		27-11-12	ALL
	38		W0590	072	20		27-11-12	ALL
	39		W0590	073	20		27-11-12	ALL
	40		W0590	019	22		28-41-12	ALL
	41		W0590	020	18		28-41-12	ALL
	42	UNUSED						050-099, 155, 162-165

HOOKUP LIST

D280T132

91-21-51

Section D04800

Page 46

Feb 06/2009



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04856P		AE0209/ /		PLUG-P36 (continued)				ALL
	42		W0590	012	18		SPARE	150-154
	42		W0590	012	18		38-32-11	156-157, 166-199, 275-299
	43	UNUSED						050-099, 155, 162-165
	43		W0590	801	20		SPARE	150-154
	43		W0590	801	18		38-32-11	156-157, 166-199, 277-299
	43		W0590	801	20		38-32-11	275-276
	DED		W0590	021Z			28-22-12	150-199
D04857J		AE0317/ /		RCPT-E1-5				ALL
	1		W1515	001	22		22-14-11	ALL
	2		W1515	002	22		22-11-22	ALL
	3		W1515	003	24		22-14-21	ALL
	4		W1515	301R	24		34-12-11	ALL
	5		W1515	005	24		SPARE	ALL
	6		W1515	207R	24		34-22-29	ALL
	7		W1515	207B	24		34-22-29	ALL
	8		W1515	207Z			34-22-29	ALL
	9		W1515	204R	22		SPARE	ALL
	10		W1515	204B	22		SPARE	ALL
	11		W1515	301B	24		34-12-11	ALL
	12		W1515	301Y	24		34-12-11	ALL
	13		W1515	203R	24		22-32-12	ALL
	14		W1515	203B	24		22-32-12	ALL
	15		W1515	203Z			22-32-12	ALL
	16		W1515	006	24		22-15-12	ALL
	17		W1515	202R	24		SPARE	ALL
	18		W1515	202B	24		SPARE	ALL
	19		W1515	202Z			SPARE	ALL
	20		W1515	210R	24		34-22-28	ALL
	21		W1515	210B	24		34-22-28	ALL
	22		W1515	210Z			34-22-28	ALL
	23		W1515	007	22		SPARE	050-099, 150-156, 162-166, 275-276
	23		W1515	007	22		34-45-14	157, 167-199, 277-299
	24		W1515	201R	24		22-15-11	ALL
	25		W1515	201B	24		22-15-11	ALL
	26		W1515	201Z			22-15-11	ALL
	27		W1515	208R	24		SPARE	ALL
	28		W1515	208B	24		SPARE	ALL
	29		W1515	208Z			SPARE	ALL
	30		W1515	008	22		SPARE	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04800

Page 47

Feb 06/2009



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04857J		AE0317/ /		RCPT-E1-5 (continued)				ALL
	31		W1515	009	22		SPARE	ALL
	32		W1515	010	24		SPARE	ALL
	33		W1515	011	24		SPARE	ALL
	34		W1515	211Z			31-35-13	ALL
	35		W1515	016	24		SPARE	050-099
	35		W1515	212Z			SPARE	150-199
	35	UNUSED						275-299
	36		W1515	017	24		SPARE	050-099
	36		W1515	213R	24		SPARE	150-199
	36	UNUSED						275-299
	37		W1515	018	24		SPARE	050-099
	37		W1515	213B	24		SPARE	150-199
	37	UNUSED						275-299
	38		W1515	019	24		SPARE	050-099
	38		W1515	213Z			SPARE	150-199
	38	UNUSED						275-299
	39		W1515	014	24		SPARE	050-099
	39		W1515	212R	24		SPARE	150-199
	39	UNUSED						275-299
	40		W1515	015	24		SPARE	050-099
	40		W1515	212B	24		SPARE	150-199
	40	UNUSED						275-299
	41		W1515	013	24		34-33-21	ALL
	42		W1515	211R	24		31-35-13	ALL
	43		W1515	211B	24		31-35-13	ALL
	44		W1515	023	24		22-15-12	ALL
	45		W1515	022	24		22-12-21	ALL
	46		W1515	209R	24		22-12-21	ALL
	47		W1515	209B	24		22-12-21	ALL
	48		W1515	209Z			22-12-21	ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52		W1515	200R	24		34-45-14	050-099, 150-199, 277-299
	52	UNUSED						275-276
	53		W1515	200B	24		34-45-14	050-099, 150-199, 277-299
	53	UNUSED						275-276
	54		W1515	200Z			34-45-14	050-099, 150-199, 277-299
	54	UNUSED						275-276
	55	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D04800
Page 48
Feb 06/2009



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04857P		AE0317/ /		PLUG-E1-5				ALL
	1		W0119	069	22		22-14-11	ALL
	2		W0119	018	22		22-11-22	ALL
	3		W0119	053	24		22-14-21	ALL
	4		W0119	311R	24		34-12-11	ALL
	5	UNUSED						ALL
	6		W0119	287R	24		34-22-29	ALL
	7		W0119	287B	24		34-22-29	ALL
	8		W0119	287Z			34-22-29	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11		W0119	311B	24		34-12-11	ALL
	12		W0119	311Y	24		34-12-11	ALL
	13		W0119	235R	24		22-32-12	ALL
	14		W0119	235B	24		22-32-12	ALL
	15		W0119	235Z			22-32-12	ALL
	16		W0119	084	24		22-15-12	ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20		W0119	255R	24		34-22-28	ALL
	21		W0119	255B	24		34-22-28	ALL
	22		W0119	255Z			34-22-28	ALL
	23	UNUSED						050-099, 150-156, 162-166, 275-276
	23		W0119	697	22		34-45-14	157, 167-199, 277-299
	24		W0119	230R	24		22-15-11	ALL
	25		W0119	230B	24		22-15-11	ALL
	26		W0119	230Z			22-15-11	ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34		W0119	544Z			31-35-13	ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D04800

Page 49

Feb 06/2009



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04857P		AE0317/ /		PLUG-E1-5 (continued)				ALL
	40	UNUSED						ALL
	41		W0119	110	24		34-33-21	ALL
	42		W0119	544R	24		31-35-13	ALL
	43		W0119	544B	24		31-35-13	ALL
	44		W0119	125	24		22-15-12	ALL
	45		W0119	034	24		22-12-21	ALL
	46		W0119	212R	24		22-12-21	ALL
	47		W0119	212B	24		22-12-21	ALL
	48		W0119	212Z			22-12-21	ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52		W0119	558R	24		34-45-14	050-099, 150-199, 277-299 275-276
	52	UNUSED						
	53		W0119	558B	24		34-45-14	050-099, 150-199, 277-299 275-276
	53	UNUSED						
	54		W0119	558Z			34-45-14	050-099, 150-199, 277-299 275-276
	54	UNUSED						
	55	UNUSED						ALL
D04859J		AE0317/ /		RCPT-E1-3				ALL
	1		W1515	001	22		22-14-11	ALL
	2		W1515	002	22		22-11-22	ALL
	3		W1515	003	24		22-14-21	ALL
	4		W1515	301R	24		34-12-11	ALL
	5		W1515	023	24		22-15-12	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9		W1515	204R	22		SPARE	ALL
	10		W1515	204B	22		SPARE	ALL
	11		W1515	301B	24		34-12-11	ALL
	12		W1515	301Y	24		34-12-11	ALL
	13		W1515	203R	24		22-32-12	ALL
	14		W1515	203B	24		22-32-12	ALL
	15		W1515	203Z			22-32-12	ALL
	16		W1515	006	24		22-15-12	ALL
	17		W1515	202R	24		SPARE	ALL
	18		W1515	202B	24		SPARE	ALL
	19		W1515	202Z			SPARE	ALL

HOOKUP LIST
D280T132

91-21-51
Section D04800
Page 50
Feb 06/2009



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04859J		AE0317/ /		RCPT-E1-3 (continued)				ALL
	20		W1515	200R	24		34-45-14	050-099, 150-199, 277-299
	20	UNUSED						275-276
	21		W1515	200B	24		34-45-14	050-099, 150-199, 277-299
	21	UNUSED						275-276
	22		W1515	200Z			34-45-14	050-099, 150-199, 277-299
	22	UNUSED						275-276
	23		W1515	007	22		SPARE	050-099, 150-156, 162-166, 275-276
	23		W1515	007	22		34-45-14	157, 167-199, 277-299
	24		W1515	201R	24		22-15-11	ALL
	25		W1515	201B	24		22-15-11	ALL
	26		W1515	201Z			22-15-11	ALL
	27		W1515	208R	24		SPARE	ALL
	28		W1515	208B	24		SPARE	ALL
	29		W1515	208Z			SPARE	ALL
	30		W1515	008	22		SPARE	ALL
	31		W1515	009	22		SPARE	ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
D04859P		AE0317/ /		PLUG-E1-3				ALL
	1		W0115	046	22		22-14-11	ALL
	2		W0115	051	22		22-11-22	ALL
	3		W0115	049	24		22-14-21	ALL
	4		W0115	301R	24		34-12-11	ALL
	5		W0115	065	24		22-15-12	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11		W0115	301B	24		34-12-11	ALL
	12		W0115	301Y	24		34-12-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04800

Page 51

Feb 06/2009



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04859P		AE0317/ /		PLUG-E1-3 (continued)				ALL
	13		W0115	663R	24		22-32-12	ALL
	14		W0115	663B	24		22-32-12	ALL
	15		W0115	663Z			22-32-12	ALL
	16		W0115	078	24		22-15-12	ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20		W0115	211R	24		34-45-14	050-099, 150-199, 277-299
	20	UNUSED						275-276
	21		W0115	211B	24		34-45-14	050-099, 150-199, 277-299
	21	UNUSED						275-276
	22		W0115	211Z			34-45-14	050-099, 150-199, 277-299
	22	UNUSED						275-276
	23	UNUSED						050-099, 150-156, 162-166, 275-276
	23		W0115	037	22		34-45-14	157, 167-199, 277-299
	24		W0115	233R	24		22-15-11	ALL
	25		W0115	233B	24		22-15-11	ALL
	26		W0115	233Z			22-15-11	ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
D04860J		AE0204/ /		RCPT-P34				ALL
	1	UNUSED						ALL
	2		W0054	031	22		28-21-13	ALL
	3	UNUSED						ALL
	4		W0054	007	22		28-21-11	ALL
	5	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D04800
Page 52
Feb 06/2009



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04860J		AE0204/ /		RCPT-P34 (continued)				ALL
	6	UNUSED						ALL
	7		W0054	004	22		28-41-12	ALL
	8	UNUSED						050-099, 150-155, 162-165
	8	DK	W0054	102	18		38-32-11	156-157, 166-199, 275-299
	9	UNUSED						050-099, 150-155, 162-165
	9	DK	W0054	099	18		38-32-11	156-157, 166-199, 275-299
	10		W0054	006	20		28-26-11	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D04860P		AE0204/ /		PLUG-P34				ALL
	1	UNUSED						ALL
	2		W0590	035	22		28-21-13	ALL
	3	UNUSED						ALL
	4		W0590	016	22		28-21-11	ALL
	5		W0590	013	20		SPARE	ALL
	6	UNUSED						ALL
	7		W0590	019	22		28-41-12	ALL
	8	UNUSED						050-099, 150-155, 162-165
	8	DL	W0590	801	18		38-32-11	156-157, 166-199, 277-299
	8		W0590	801	20		38-32-11	275-276
	9	UNUSED						050-099, 150-155, 162-165
	9	DL	W0590	012	18		38-32-11	156-157, 166-199, 275-299
	10		W0590	010	20		28-26-11	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D04862J		AE0306/ /		RCPT-E2-4				ALL
	1		W0510	040	24		32-46-11	ALL
	2		W0510	041	22		32-46-11	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D04800

Page 53

Feb 06/2009



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04862J		AE0306/ /		RCPT-E2-4 (continued)				ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D04862P		AE0306/ /		PLUG-E2-4				ALL
	1		W0014	537	24		32-46-11	ALL
	2		W0014	516	22		32-46-11	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D04800

Page 54

Feb 06/2009



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04865J		AC0608/ /		RCPT-E5-3				275-299
	1	UNUSED						275-299
	2	UNUSED						275-299
	3	UNUSED						275-299
	4	UNUSED						275-299
	5	UNUSED						275-299
	6	UNUSED						275-299
	7		W1369	007	24		SPARE	275-299
	8		W1369	008	24		SPARE	275-299
	9		W1369	009	24		SPARE	275-299
	10	UNUSED						275-299
	11	UNUSED						275-299
	12	UNUSED						275-299
D04867J		AF0117/ /		RCPT-P7				ALL
	1		W0731	224R	24		34-22-15	ALL
	2		W0731	224B	24		34-22-15	ALL
	3		W0731	025	24		34-22-15	ALL
	4		W0731	026	24		34-22-15	ALL
	5		W0731	027	24		34-22-15	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8		W0731	055	24		SPARE	ALL
	9		W0731	056	24		SPARE	ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D04800

Page 55

Feb 06/2009



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04867P		AF0117/ /		PLUG-				ALL
	1		W1052	201R	24		34-22-15	ALL
	2		W1052	201B	24		34-22-15	ALL
	3		W1052	018	24		34-22-15	ALL
	4		W1052	019	24		34-22-15	ALL
	5		W1052	020	24		34-22-15	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D04868J		AE0306/ /		RCPT-E2-2				ALL
	1	UNUSED						050-099, 155-199, 276-299
	1		W0510	111	24		31-51-21	150-154, 275
	2	UNUSED						050-099, 155-199, 276-299
	2		W0510	112	24		31-51-21	150-154, 275
	3		W0510	113	24		31-51-31	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D04800
Page 56
Feb 06/2009



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04868J		AE0306/ /		RCPT-E2-2 (continued)				ALL
	13	UNUSED						ALL
	14		W0510	091	22		SPARE	ALL
	15		W0510	092	22		SPARE	ALL
D04868P		AE0306/ /		PLUG-E2-2				ALL
	1	UNUSED						050-099, 155-199, 276-299
	1		W0133	730	24		31-51-21	150-154, 275
	2	UNUSED						050-099, 155-199, 276-299
	2		W0133	731	24		31-51-21	150-154, 275
	3		W0133	732	24		31-51-31	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
D04869J		AF0118/ /		RCPT-P7				ALL
	1		W0733	224R	24		34-22-25	ALL
	2		W0733	224B	24		34-22-25	ALL
	3		W0733	021	24		34-22-25	ALL
	4		W0733	022	24		34-22-25	ALL
	5		W0733	023	24		34-22-25	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8		W0733	055	24		SPARE	ALL
	9		W0733	056	24		SPARE	ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D04800
Page 57
Feb 06/2009



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04869J		AF0118/ /		RCPT-P7 (continued)				ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D04869P		AF0118/ /		PLUG-				ALL
	1		W1054	201R	24		34-22-25	ALL
	2		W1054	201B	24		34-22-25	ALL
	3		W1054	018	24		34-22-25	ALL
	4		W1054	019	24		34-22-25	ALL
	5		W1054	020	24		34-22-25	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D04870J		AF0204/ /		RCPT-P61				ALL
	1		W0066	57F	22		32-31-11	ALL
	2	DK	W0066	55L	18		28-41-12	ALL
	3		W0066	036	22		29-11-12	ALL
	4		W0066	59J	20		33-26-11	050-099, 150-199

HOOKUP LIST
D280T132

91-21-51
Section D04800
Page 58
Feb 06/2009



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04870J		AF0204/ /		RCPT-P61 (continued)				ALL
	4	UNUSED						275-299
	5		W0066	142	24		21-58-16	ALL
	6		W0066	51C	24		21-53-12	ALL
	7		W0066	05S	22		29-11-31	ALL
	8		W0066	52D	24		21-58-16	ALL
	9		W0066	52E	24		21-58-16	ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12		W0066	61C	24		36-11-41	ALL
	13		W0066	61D	24		36-11-41	ALL
	14		W0066	087	24		36-11-41	ALL
	15		W0066	61A	24		36-11-21	ALL
	16		W0066	076	24		36-11-21	ALL
	17	UNUSED						ALL
	18		W0066	078	24		36-11-21	ALL
	19		W0066	109	22		36-11-41	ALL
	20		W0066	104	22		36-11-21	ALL
	21		W0066	50J	24		21-44-21	ALL
	22		W0066	02E	24		21-26-21	ALL
	23		W0066	02F	24		21-26-21	ALL
	24		W0066	06G	24		21-44-21	ALL
	25		W0066	06H	24		21-44-21	ALL
	26		W0066	106	22		36-11-21	ALL
	27		W0066	01W	24		21-44-21	ALL
	28		W0066	01G	22		21-44-21	ALL
	29		W0066	55Y	24		29-33-11	ALL
	30		W0066	024	22		29-33-11	ALL
	31		W0066	64C	24		27-38-11	ALL
	32		W0066	59F	20		33-26-11	ALL
	33	UNUSED						ALL
	34		W0066	144	24		21-58-16	ALL
	35		W0066	52F	24		21-58-16	ALL
	36	UNUSED						ALL
	37		W0066	06E	24		21-26-21	ALL
	38		W0066	06C	24		21-26-21	ALL
	39	UNUSED						ALL
	40		W0066	64Z	20		25-31-11	050-099, 150-199, 275-278
	40	DK	W0066	64Z	18		25-31-11	280-299
	41	UNUSED						050-099, 150-199, 275-278
	41	FM	W0066	65D	16		SPARE	280-299

HOOKUP LIST

D280T132

91-21-51

Section D04800

Page 59

Feb 06/2009



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04870J		AF0204/ /		RCPT-P61 (continued)				ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45		W0066	646	24		36-11-41	ALL
	46		W0066	080	24		36-11-41	ALL
	47	UNUSED						050-099, 150-199, 277-299
	47	DK	W0066	61N	18		38-32-11	275-276
	48	UNUSED						ALL
	49	UNUSED						ALL
	50		W0066	52G	24		21-58-16	ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54		W0066	52A	22		21-58-16	ALL
	55		W0066	088	24		36-11-41	ALL
	DED		W0066	036Z			29-11-12	ALL
	DED		W0066	55LZ			28-41-12	ALL
	DED		W0066	55YZ			29-33-11	ALL
D04870P		AF0204/ /		PLUG-P61				ALL
	1		W1204	001	22		32-31-11	ALL
	2	DL	W1204	002	18		28-41-12	ALL
	3		W1204	050	22		29-11-12	ALL
	4		W1204	115	20		33-26-11	050-099, 150-199
	4	UNUSED						275-299
	5		W1204	028	24		21-58-16	ALL
	6		W1204	009	24		21-53-12	ALL
	7		W1204	004	22		29-11-31	ALL
	8		W1204	019	24		21-58-16	ALL
	9		W1204	020	24		21-58-16	ALL
	10		W1204	021	24		SPARE	050-099, 150-156, 162-166, 275-276
	10	DL	W1204	021	18		SPARE	157, 167-199, 277-299
	11	UNUSED						ALL
	12		W1204	024	24		36-11-41	ALL
	13		W1204	025	24		36-11-41	ALL
	14		W1204	026	24		36-11-41	ALL
	15		W1204	006	24		36-11-21	ALL
	16		W1204	007	24		36-11-21	ALL
	17	UNUSED						ALL
	18		W1204	008	24		36-11-21	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04800

Page 60

Feb 06/2009



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04870P		AF0204/ /		PLUG-P61 (continued)				ALL
	19		W1204	035	22		36-11-41	ALL
	20		W1204	017	22		36-11-21	ALL
	21		W1204	039	24		21-44-21	ALL
	22		W1204	051	24		21-26-21	ALL
	23		W1204	041	22		21-26-21	ALL
	24		W1204	042	24		21-44-21	ALL
	25		W1204	043	24		21-44-21	ALL
	26		W1204	027	22		36-11-21	ALL
	27		W1204	045	24		21-44-21	ALL
	28		W1204	046	22		21-44-21	ALL
	29		W1204	029	24		29-33-11	ALL
	30		W1204	031	22		29-33-11	ALL
	31		W1204	087	24		27-38-11	ALL
	32		W1204	033	20		33-26-11	ALL
	33	UNUSED						ALL
	34		W1204	064	24		21-58-16	ALL
	35		W1204	107	24		21-58-16	ALL
	36	UNUSED						ALL
	37		W1204	040	24		21-26-21	ALL
	38		W1204	038	24		21-26-21	ALL
	39	UNUSED						ALL
	40		W1204	068	20		25-31-11	050-099, 150-199, 275-278
	40	DL	W1204	068	18		25-31-11	280-299
	41	UNUSED						050-099, 150-199, 275-278
	41	DL	W1204	049	18		SPARE	280-299
	42	UNUSED						ALL
	43		W1204	036	22		SPARE	ALL
	44		W1204	032	22		SPARE	ALL
	45		W1204	099	24		36-11-41	ALL
	46		W1204	098	24		36-11-41	ALL
	47	UNUSED						050-099, 150-199, 277-299
	47	DL	W1204	101	18		38-32-11	275-276
	48	UNUSED						050-099, 155-199
	48		W1204	065	22		SPARE	150-154, 275-299
	49	UNUSED						ALL
	50		W1204	108	24		21-58-16	ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54		W1204	097	22		21-58-16	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04800

Page 61

Feb 06/2009



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04870P		AF0204/ /		PLUG-P61 (continued)				ALL
	55		W1204	095	24		36-11-41	ALL
	CAP	Y	W1204	063	24		SPARE	ALL
	DED		W1204	050Z			29-11-12	ALL
	DED		W1204	021Z			SPARE	157, 167-199, 277-299
D04873J		AE0317/ /		RCPT-E1-5				ALL
	1		W1513	001	22		SPARE	050-099
	1		W1513	001	22		34-22-13	150-199, 275-299
	2		W1513	002	22		22-41-11	ALL
	3		W1513	203R	24		22-41-11	ALL
	4		W1513	203B	24		22-41-11	ALL
	5		W1513	203Z			22-41-11	ALL
	6		W1513	213R	24		31-31-20	ALL
	7		W1513	213B	24		31-31-20	ALL
	8		W1513	213Z			31-31-20	ALL
	9		W1513	205R	24		SPARE	050-099
	9	UNUSED						150-199, 275-299
	10		W1513	205B	24		SPARE	050-099
	10	UNUSED						150-199, 275-299
	11		W1513	205Z			SPARE	050-099
	11	UNUSED						150-199, 275-299
	12	UNUSED						ALL
	13	UNUSED						ALL
	14		W1513	208R	24		SPARE	ALL
	15		W1513	208B	24		SPARE	ALL
	16		W1513	208Z			SPARE	ALL
	17	UNUSED						ALL
	18		W1513	212R	24		27-32-21	ALL
	19		W1513	212B	24		27-32-21	ALL
	20		W1513	214R	24		31-31-20	ALL
	21		W1513	214B	24		31-31-20	ALL
	22		W1513	214Z			31-31-20	ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D04873P		AE0317/ /		PLUG-E1-5				ALL
	1		W0119	635	22		34-22-13	ALL
	2		W0119	076	22		22-14-31	ALL
	3		W0119	238R	24		22-41-11	ALL
	4		W0119	238B	24		22-41-11	ALL

HOOKUP LIST
D280T132

91-21-51
Section D04800
Page 62
Feb 06/2009



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04873P		AE0317/ /		PLUG-E1-5 (continued)				ALL
	5		W0119	238Z			22-41-11	ALL
	6		W0119	542R	24		31-31-20	ALL
	7		W0119	542B	24		31-31-20	ALL
	8		W0119	542Z			31-31-20	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18		W0119	210R	24		27-32-21	ALL
	19		W0119	210B	24		27-32-21	ALL
	20		W0119	543R	24		31-31-20	ALL
	21		W0119	543B	24		31-31-20	ALL
	22		W0119	543Z			31-31-20	ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D04874J		AE0307/ /		RCPT-E1-1				ALL
	1		W0600	001	24		32-42-11	ALL
	2		W0600	002	24		32-42-11	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12		W0600	020	20		SPARE	ALL
D04874P		AE0307/ /		PLUG-E1-1				ALL
	1		W1084	003	24		32-42-11	ALL
	2		W1084	004	24		32-42-11	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D04800
Page 63
Feb 06/2009



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04874P		AE0307/ /		PLUG-E1-1 (continued)				ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D04875J		AE0317/ /		RCPT-E1-2				ALL
	1		W1513	001	22		SPARE	050-099
	1		W1513	001	22		34-22-13	150-199, 275-299
	2		W1513	002	22		22-41-11	ALL
	3		W1513	203R	24		22-41-11	ALL
	4		W1513	203B	24		22-41-11	ALL
	5		W1513	203Z			22-41-11	ALL
	6		W1513	211R	24		21-31-11	ALL
	7		W1513	211B	24		21-31-11	ALL
	8		W1513	211Z			21-31-11	ALL
	9		W1513	201R	24		22-12-21	ALL
	10		W1513	201B	24		22-12-21	ALL
	11		W1513	201Z			22-12-21	ALL
	12		W1513	202R	24		22-41-11	ALL
	13		W1513	202B	24		22-41-11	ALL
	14		W1513	202Z			22-41-11	ALL
	15		W1513	205R	24		SPARE	050-099
	15	UNUSED						150-199, 275-299
	16		W1513	205B	24		SPARE	050-099
	16	UNUSED						150-199, 275-299
	17		W1513	205Z			SPARE	050-099
	17	UNUSED						150-199, 275-299
	18		W1513	212R	24		27-32-21	ALL
	19		W1513	212B	24		27-32-21	ALL
	20		W1513	003	22		SPARE	ALL
	21		W1513	207W	24		34-43-11	ALL
	22		W1513	207WB	24		34-43-11	ALL
	23		W1513	207Z			34-43-11	ALL
	24		W1513	208R	24		SPARE	ALL
	25		W1513	208B	24		SPARE	ALL
	26		W1513	208Z			SPARE	ALL

HOOKUP LIST
D280T132

91-21-51
Section D04800
Page 64
Feb 06/2009



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04875J		AE0317/ /		RCPT-E1-2 (continued)				ALL
	27		W1513	009	24		31-31-26	ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32		W1513	012	24		SPARE	050-099
	32	UNUSED						150-199, 275-299
	33	UNUSED						ALL
	34		W1513	004	22		SPARE	ALL
	35		W1513	005	22		SPARE	050-099
	35	UNUSED						150-199, 275-299
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
D04875P		AE0317/ /		PLUG-E1-2				ALL
	1		W1100	056	22		34-22-13	ALL
	2		W1100	055	22		22-41-11	ALL
	3		W1100	228R	24		22-41-11	ALL
	4		W1100	228B	24		22-41-11	ALL
	5		W1100	228Z			22-41-11	ALL
	6		W1100	269R	24		21-31-11	ALL
	7		W1100	269B	24		21-31-11	ALL
	8		W1100	269Z			21-31-11	ALL
	9		W1100	260R	24		22-12-21	ALL
	10		W1100	260B	24		22-12-21	ALL
	11		W1100	260Z			22-12-21	ALL
	12		W1100	227R	24		22-41-11	ALL
	13		W1100	227B	24		22-41-11	ALL
	14		W1100	227Z			22-41-11	ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18		W1100	204R	24		27-32-21	ALL
	19		W1100	204B	24		27-32-21	ALL
	20	UNUSED						ALL
	21		W1100	218W	24		34-43-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04800

Page 65

Feb 06/2009



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04875P		AE0317/ /		PLUG-E1-2 (continued)				ALL
	22		W1100	218WB	24		34-43-11	ALL
	23		W1100	218Z			34-43-11	ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27		W1100	507	24		31-31-26	ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
D04879J		AE0317/ /		RCPT-E1-3				ALL
	1		W0527	001	24		22-14-11	ALL
	2		W0527	008	22		SPARE	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W0527	002	22		SPARE	ALL
	6		W0527	003	24		22-14-11	ALL
	7		W0527	009	22		34-45-14	050-099, 150-199, 277-299
	7	UNUSED						275-276
	8	UNUSED						050-099, 150-152, 155-199, 275-299
	8		W0527	216R	24		SPARE	153-154
	9	UNUSED						050-099, 150-152, 155-199, 275-299
	9		W0527	216B	24		SPARE	153-154
	10	UNUSED						050-099, 150-152, 155-199, 275-299
	10		W0527	216Z			SPARE	153-154
	11	UNUSED						ALL
	12	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D04800
Page 66
Feb 06/2009



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04879P		AE0317/ /		PLUG-E1-3				ALL
	1		W0115	058	24		22-14-11	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W0115	050	24		22-14-11	ALL
	7		W0115	034	22		34-45-14	050-099, 150-199, 277-299
	7	UNUSED						275-276
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D04881J		AE0307/ /		RCPT-E1-4				ALL
	1		W0411	001	22		22-24-11	ALL
	2		W0411	203R	24		27-32-11	ALL
	3		W0411	203B	24		27-32-11	ALL
	4		W0411	004	24		SPARE	ALL
	5		W0411	005	22		27-61-11	ALL
	6		W0411	006	24		22-12-31	ALL
	7		W0411	007	24		22-12-31	ALL
	8		W0411	008	24		22-12-31	ALL
	9		W0411	009	24		22-12-31	ALL
	10		W0411	010	22		SPARE	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
D04881P		AE0307/ /		PLUG-E1-4				ALL
	1		W0127	185	22		22-24-11	ALL
	2		W0127	291R	24		27-32-11	ALL
	3		W0127	291B	24		27-32-11	ALL
	4	UNUSED						ALL
	5		W0127	099	22		27-61-11	ALL
	6		W0127	043	24		22-12-31	ALL
	7		W0127	044	24		22-12-31	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04800

Page 67

Feb 06/2009



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04881P		AE0307/ /		PLUG-E1-4 (continued)				ALL
	8		W0127	045	24		22-12-31	ALL
	9		W0127	046	24		22-12-31	ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
D04883J		AE0317/ /		RCPT-E1-5				ALL
	1		W0413	001	22		22-24-21	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W0413	201R	22		27-41-21	ALL
	5		W0413	201B	22		27-41-21	ALL
	6		W0413	006	24		22-12-21	ALL
	7		W0413	007	24		22-12-21	ALL
	8		W0413	008	24		22-12-21	ALL
	9		W0413	009	24		22-12-21	ALL
	10		W0413	010	22		SPARE	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16		W0413	020	22		27-41-21	050-099
	16		W0413	020	24		27-41-21	150-199, 275-299
	17		W0413	023	22		27-61-11	ALL
	18	UNUSED						ALL
	19		W0413	206B	24		SPARE	ALL
	20		W0413	206R	24		SPARE	ALL
	21		W0413	034	24		SPARE	ALL
	22		W0413	205R	24		27-32-21	ALL
	23		W0413	205B	24		27-32-21	ALL
	24	UNUSED						ALL
	25		W0413	204B	24		27-58-21	ALL
	26		W0413	204R	24		27-58-21	ALL
	27		W0413	301B	24		27-58-21	ALL
	28		W0413	301R	24		27-58-21	ALL
	29		W0413	301Y	24		27-58-21	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04800

Page 68

Feb 06/2009



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04883J		AE0317/ /		RCPT-E1-5 (continued)				ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
D04883P		AE0317/ /		PLUG-E1-5				ALL
	1		W0119	185	22		22-24-21	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W0119	290R	22		27-41-21	ALL
	5		W0119	290B	22		27-41-21	ALL
	6		W0119	035	24		22-12-21	ALL
	7		W0119	036	24		22-12-21	ALL
	8		W0119	037	24		22-12-21	ALL
	9		W0119	038	24		22-12-21	ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16		W0119	609	22		27-41-21	ALL
	17		W0119	159	22		27-61-11	ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22		W0119	210R	24		27-32-21	ALL
	23		W0119	210B	24		27-32-21	ALL
	24	UNUSED						ALL
	25		W0119	209B	24		27-58-21	ALL
	26		W0119	209R	24		27-58-21	ALL
	27		W0119	310B	24		27-58-21	ALL
	28		W0119	310R	24		27-58-21	ALL
	29		W0119	310Y	24		27-58-21	ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
D04885J		AE0202/ /		RCPT-				ALL
	1		W1114	013	22		22-24-11	ALL
	2		W1114	207R	24		27-32-11	ALL
	3		W1114	207B	24		27-32-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04800

Page 69

Feb 06/2009



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04885J		AE0202/ /		RCPT- (continued)				ALL
	4	UNUSED						ALL
	5		W1114	029	22		27-61-11	ALL
	6		W1114	014	24		22-12-31	ALL
	7		W1114	015	24		22-12-31	ALL
	8		W1114	022	24		22-12-31	ALL
	9		W1114	023	24		22-12-31	ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
D04885P		AE0202/ /		PLUG-P50				ALL
	1		W0411	001	22		22-24-11	ALL
	2		W0411	203R	24		27-32-11	ALL
	3		W0411	203B	24		27-32-11	ALL
	4		W0411	004	24		SPARE	ALL
	5		W0411	005	22		27-61-11	ALL
	6		W0411	006	24		22-12-31	ALL
	7		W0411	007	24		22-12-31	ALL
	8		W0411	008	24		22-12-31	ALL
	9		W0411	009	24		22-12-31	ALL
	10		W0411	010	22		SPARE	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
D04887J		AE0202/ /		RCPT-				ALL
	1		W1080	523	22		22-24-21	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W1080	203R	22		27-41-21	ALL
	5		W1080	203B	22		27-41-21	ALL
	6		W1080	147	24		22-12-21	ALL
	7		W1080	148	24		22-12-21	ALL
	8		W1080	155	24		22-12-21	ALL
	9		W1080	156	24		22-12-21	ALL

HOOKUP LIST

D280T132

91-21-51
 Section D04800
 Page 70
 Feb 06/2009



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04887J		AE0202/ /		RCPT- (continued)				ALL
	10	UNUSED						ALL
	11		W1080	184	24		22-32-13	ALL
	12		W1080	185	24		22-32-13	ALL
	13	UNUSED						ALL
	14		W1080	174	24		22-32-13	ALL
	15		W1080	167	24		22-32-13	ALL
	16		W1080	197	24		22-32-13	ALL
	17		W1080	195	24		22-32-13	ALL
	18		W1080	176	24		22-32-13	ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26		W1080	600	22		27-41-21	ALL
	27		W1080	559	22		27-61-11	050-099, 150-152, 155-156, 162-166
	27		W1080	522	22		27-61-11	153-154
	27		W1080	521	22		27-61-11	157, 167-199, 275-299
	28		W1080	207R	24		27-32-21	ALL
	29		W1080	207B	24		27-32-21	ALL
	30		W1080	206B	24		27-58-21	ALL
	31		W1080	206R	24		27-58-21	ALL
	32		W1080	304B	24		27-58-21	ALL
	33		W1080	304R	24		27-58-21	ALL
	34		W1080	304Y	24		27-58-21	ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
D04887P		AE0202/ /		PLUG-P50				ALL
	1		W0413	001	22		22-24-21	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W0413	201R	22		27-41-21	ALL

HOOKUP LIST
D280T132

91-21-51
Section D04800
Page 71
Feb 06/2009



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04887P		AE0202/ /		PLUG-P50 (continued)				ALL
	5		W0413	201B	22		27-41-21	ALL
	6		W0413	006	24		22-12-21	ALL
	7		W0413	007	24		22-12-21	ALL
	8		W0413	008	24		22-12-21	ALL
	9		W0413	009	24		22-12-21	ALL
	10		W0413	010	22		SPARE	ALL
	11		W0413	011	24		22-32-13	ALL
	12		W0413	012	24		22-32-13	ALL
	13		W0413	013	24		SPARE	ALL
	14		W0413	014	24		22-32-13	ALL
	15		W0413	015	24		22-32-13	ALL
	16		W0413	016	24		22-32-13	ALL
	17		W0413	017	24		22-32-13	ALL
	18		W0413	018	24		22-32-13	ALL
	19		W0413	206B	24		SPARE	ALL
	20		W0413	206R	24		SPARE	ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26		W0413	020	22		27-41-21	050-099
	26		W0413	020	24		27-41-21	150-199, 275-299
	27		W0413	023	22		27-61-11	ALL
	28		W0413	205R	24		27-32-21	ALL
	29		W0413	205B	24		27-32-21	ALL
	30		W0413	204B	24		27-58-21	ALL
	31		W0413	204R	24		27-58-21	ALL
	32		W0413	301B	24		27-58-21	ALL
	33		W0413	301R	24		27-58-21	ALL
	34		W0413	301Y	24		27-58-21	ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40		W0413	034	24		SPARE	ALL
	41	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D04800

Page 72

Feb 06/2009



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04889J		AE0319/ /		RCPT-WX-L TO EFI-L-E1-2				ALL
	1		W0779	008	24		34-43-11	ALL
	2		W0779	206R	24		34-43-11	ALL
	3		W0779	206B	24		34-43-11	ALL
	4		W0779	206Z			34-43-11	ALL
	5		W0779	208W	24		34-43-11	050-099, 151
	5		W9090	901W	24		34-46-13	150, 152-199, 275-299
	6		W0779	208WB	24		34-43-11	050-099, 151
	6		W9090	901WB	24		34-46-13	150, 152-199, 275-299
	7		W0779	208Z			34-43-11	050-099, 151
	7		W9090	901Z			34-46-13	150, 152-199, 275-299
	8		W0779	212R	24		34-43-11	ALL
	9		W0779	212B	24		34-43-11	ALL
	10		W0779	212Z			34-43-11	ALL
	11		W0779	213R	24		34-43-11	ALL
	12		W0779	213B	24		34-43-11	ALL
	13		W0779	213Z			34-43-11	ALL
	14		W0779	222R	24		34-45-14	050-099, 150-156, 162-166, 275-276
	14	UNUSED						157, 167-199, 277-299
	15		W0779	222B	24		34-45-14	050-099, 150-154, 275-276
	15		W0779	222B	24		SPARE	155-156, 162-166
	15	UNUSED						157, 167-199, 277-299
	16		W0779	222Z			34-45-14	050-099, 150-154, 275-276
	16		W0779	222Z			SPARE	155-156, 162-166
	16	UNUSED						157, 167-199, 277-299
	17	UNUSED						050-099, 151
	17		W0779	208W	24		34-43-11	150, 152-199, 275-299
	18	UNUSED						050-099, 151
	18		W0779	208WB	24		34-43-11	150, 152-199, 275-299
	19	UNUSED						050-099, 151
	19		W0779	208Z			34-43-11	150, 152-199, 275-299
	20	UNUSED						050-099, 151
	20		W9090	902W	24		34-46-13	150, 152-199, 275-299
	21	UNUSED						050-099, 151
	21		W9090	902WB	24		34-46-13	150, 152-199, 275-299
	22	UNUSED						050-099, 151
	22		W9090	902Z			34-46-13	150, 152-199, 275-299
	23	UNUSED						ALL
	24	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D04800

Page 73

Feb 06/2009



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04889P		AE0319/ /		PLUG-				050-099, 150-152, 155-199, 275-299
D04889P		AE0319/ /		PLUG-E1-2				153-154
	1		W1103	039	24		34-43-11	ALL
	2		W1103	255R	24		34-43-11	ALL
	3		W1103	255B	24		34-43-11	ALL
	4		W1103	255Z			34-43-11	ALL
	5		W1103	252W	24		34-43-11	ALL
	6		W1103	252WB	24		34-43-11	ALL
	7		W1103	252Z			34-43-11	ALL
	8		W1103	253R	24		34-43-11	ALL
	9		W1103	253B	24		34-43-11	ALL
	10		W1103	253Z			34-43-11	ALL
	11		W1103	254R	24		34-43-11	ALL
	12		W1103	254B	24		34-43-11	ALL
	13		W1103	254Z			34-43-11	ALL
	14		W1103	500R	24		34-45-14	050-099, 150-156, 162-166, 275-276
	14	UNUSED						157, 167-199, 277-299
	15		W1103	500B	24		34-45-14	050-099, 150-156, 162-166, 275-276
	15	UNUSED						157, 167-199, 277-299
	16		W1103	500Z			34-45-14	050-099, 150-156, 162-166, 275-276
	16	UNUSED						157, 167-199, 277-299
	17	UNUSED						050-099, 151
	17		W1103	901W	24		34-43-11	150, 152-199, 275-299
	18	UNUSED						050-099, 151
	18		W1103	901WB	24		34-43-11	150, 152-199, 275-299
	19	UNUSED						050-099, 151
	19		W1103	901Z			34-43-11	150, 152-199, 275-299
	20	UNUSED						050-099, 151
	20		W1103	901W	24		34-43-11	150, 152-199, 275-299
	21	UNUSED						050-099, 151
	21		W1103	901WB	24		34-43-11	150, 152-199, 275-299
	22	UNUSED						050-099, 151
	22		W1103	901Z			34-43-11	150, 152-199, 275-299
	23	UNUSED						ALL
	24	UNUSED						ALL
D04893J		AF0120/ /		RCPT-P3				ALL
	1		W0527	001	24		22-14-11	ALL
	2	UNUSED						050-099, 150-152, 155-199, 275-299
	2		W0527	216R	24		SPARE	153-154
	3	UNUSED						050-099, 150-152, 155-199, 275-299

HOOKUP LIST

D280T132

91-21-51

Section D04800

Page 74

Feb 06/2009



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04893J		AF0120/ /		RCPT-P3 (continued)				ALL
	3		W0527	216B	24		SPARE	153-154
	4	UNUSED						050-099, 150-152, 155-199, 275-299
	4		W0527	216Z			SPARE	153-154
	5		W0527	002	22		SPARE	ALL
	6		W0527	003	24		22-14-11	ALL
	7		W0527	009	22		34-45-14	050-099, 150-199, 277-299
	7	UNUSED						275-276
	8		W0527	016	24		34-61-16	050-099, 155-199, 275-299
	8	UNUSED						150-154
	9	UNUSED						050-099, 150-154
	9		W0527	014	24		34-61-26	155-199, 275-299
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17		W0527	217R	24		34-45-14	050-099, 150-199, 277-299
	17	UNUSED						275-276
	18		W0527	217B	24		34-45-14	050-099, 150-199, 277-299
	18	UNUSED						275-276
	19		W0527	FRQ			34-45-14	050-099, 150-199, 277-299
	19	UNUSED						275-276
	20	UNUSED						ALL
	21	UNUSED						ALL
	22		W0527	008	22		SPARE	ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						050-099, 150-156, 162-166
	25		W0527	218R	24		34-22-91	157, 167-199, 275-299
	26	UNUSED						050-099, 150-156, 162-166
	26		W0527	218B	24		34-22-91	157, 167-199, 275-299
	27	UNUSED						050-099, 150-156, 162-166, 277-299
	27		W0527	FRR			34-22-91	157, 167-199, 275-276
	28	UNUSED						ALL
	29		W0527	211R	24		34-22-81	ALL
	30		W0527	211B	24		34-22-81	ALL
	31		W0527	FRK			34-22-81	ALL
	32	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D04800

Page 75

Feb 06/2009



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04893J		AF0120/ /		RCPT-P3 (continued)				ALL
	33	UNUSED						ALL
	34		W0527	029	24		34-61-25	050-099, 150-199
	34		W0527	029	24		SPARE	275-299
	35		W0527	025	22		SPARE	ALL
	36		W0527	026	22		SPARE	ALL
	37		W0527	027	22		SPARE	ALL
	38		W0527	028	22		SPARE	ALL
	39		W0527	208R	20		34-12-21	ALL
	40		W0527	208B	20		34-12-21	ALL
	41		W0527	208Z			34-12-21	ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	44		W0527	209R	24		34-13-11	ALL
	45		W0527	209B	24		34-13-11	ALL
	46		W0527	FRI			34-13-11	ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49		W0527	213R	24		34-22-91	050-099, 150-156, 162-166
	49		W0527	213R	24		SPARE	157, 167-199, 275-276
	49	UNUSED						277-299
	50		W0527	213B	24		34-22-91	050-099, 150-156, 162-166
	50		W0527	213B	24		SPARE	157, 167-199, 275-276
	50	UNUSED						277-299
	51		W0527	FRM			34-22-91	050-099, 150-156, 162-166
	51		W0527	FRM			SPARE	157, 167-199, 275-276
	51	UNUSED						277-299
	52		W0527	214R	24		34-22-91	ALL
	53		W0527	214B	24		34-22-91	ALL
	54		W0527	FRN			34-22-91	ALL
	55	UNUSED						ALL
	REF		W0527	FRR			34-22-91	157, 167-199, 275-276
	REF		W0527	218	20		34-22-91	157, 167-199, 275-299
	REF		W0527	218Z			34-22-91	157, 167-199, 275-299
	REF		W0527	213	20		34-22-91	050-099, 150-156, 162-166
			W0527	213Z			34-22-91	050-099, 150-156, 162-166
			W0527	FRM			34-22-91	050-099, 150-156, 162-166
			W0527	209	20		34-13-11	ALL
			W0527	209Z			34-13-11	ALL
			W0527	211	20		34-22-81	ALL
			W0527	211Z			34-22-81	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04800

Page 76

Feb 06/2009



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04893J		AF0120/ /		RCPT-P3 (continued)				ALL
			W0527	214	20		34-22-91	ALL
			W0527	214Z			34-22-91	ALL
			W0527	FRI			34-13-11	ALL
			W0527	FRK			34-22-81	ALL
			W0527	FRN			34-22-91	ALL
			W0527	217	20		34-45-14	050-099, 150-199, 277-299
			W0527	217Z			34-45-14	050-099, 150-199, 277-299
			W0527	FRQ			34-45-14	050-099, 150-199, 277-299
			W0527	213	20		SPARE	157, 167-199, 275-276
			W0527	213Z			SPARE	157, 167-199, 275-276
			W0527	FRM			SPARE	157, 167-199, 275-276
D04893P		AF0120/ /		PLUG-P3				ALL
	1		W0031	601	24		22-14-11	ALL
	2	UNUSED						050-099, 150-152, 155-199, 275-299
	2		W0031	256R	24		34-45-14	153-154
	3	UNUSED						050-099, 150-152, 155-199, 275-299
	3		W0031	256B	24		34-45-14	153-154
	4	UNUSED						050-099, 150-152, 155-199, 275-299
	4		W0031	256Z			34-45-14	153-154
	5	UNUSED						ALL
	6		W0031	602	24		22-14-11	ALL
	7		W0031	757	22		34-45-14	ALL
	8		W0031	760	24		34-61-24	050-099
	8	UNUSED						150-154
	8		W0031	760	24		34-61-16	155-199, 275-299
	9		W0031	758	24		34-61-26	050-099, 155-199, 275-299
	9	UNUSED						150-154
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17		W0031	259R	24		34-45-14	ALL
	18		W0031	259B	24		34-45-14	ALL
	19		W0031	259Z			34-45-14	ALL
	20	UNUSED						ALL
	21	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D04800

Page 77

Feb 06/2009



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04893P		AF0120/ /		PLUG-P3 (continued)				ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						050-099, 150-156, 162-166
	25		W0031	524R	24		34-22-91	157, 167-199, 275-299
	26	UNUSED						050-099, 150-156, 162-166
	26		W0031	524B	24		34-22-91	157, 167-199, 275-299
	27	UNUSED						050-099, 150-156, 162-166
	27		W0031	524Z			34-22-91	157, 167-199, 275-299
	28	UNUSED						ALL
	29		W0031	523R	24		34-22-81	ALL
	30		W0031	523B	24		34-22-81	ALL
	31		W0031	523Z			34-22-81	ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39		W0031	521R	20		34-12-21	ALL
	40		W0031	521B	20		34-12-21	ALL
	41		W0031	521Z			34-12-21	ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	44		W0031	522R	24		34-13-11	ALL
	45		W0031	522B	24		34-13-11	ALL
	46		W0031	522Z			34-13-11	ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49		W0031	524R	24		34-22-91	050-099, 150-156, 162-166
	49	UNUSED						157, 167-199, 275-299
	50		W0031	524B	24		34-22-91	050-099, 150-156, 162-166
	50	UNUSED						157, 167-199, 275-299
	51		W0031	524Z			34-22-91	050-099, 150-156, 162-166
	51	UNUSED						157, 167-199, 275-299
	52		W0031	525R	24		34-22-91	ALL
	53		W0031	525B	24		34-22-91	ALL
	54		W0031	525Z			34-22-91	ALL
	55	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D04800

Page 78

Feb 06/2009



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04895J		AE0317/ /		RCPT-E1-3				ALL
	1		W0413	011	24		22-32-13	ALL
	2		W0413	012	24		22-32-13	ALL
	3		W0413	013	24		SPARE	ALL
	4		W0413	014	24		22-32-13	ALL
	5		W0413	015	24		22-32-13	ALL
	6		W0413	016	24		22-32-13	ALL
	7		W0413	017	24		22-32-13	ALL
	8		W0413	018	24		22-32-13	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D04895P		AE0317/ /		PLUG-E1-3				ALL
	1		W0105	731	20		22-32-13	ALL
	2		W0105	732	24		22-32-13	ALL
	3	UNUSED						ALL
	4		W0105	734	24		22-32-13	ALL
	5		W0105	735	24		22-32-13	ALL
	6		W0105	736	24		22-32-13	ALL
	7		W0105	737	24		22-32-13	ALL
	8		W0105	740	24		22-32-13	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D04899J		AE0320/ /		RCPT-E2-3				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	6		W0527	014	24		34-61-26	050-099, 150-154 155-199, 275-299
	7		W0527	027	22		SPARE	ALL
	8		W0527	028	22		SPARE	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D04800

Page 79

Feb 06/2009



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04899J		AE0320/ /		RCPT-E2-3 (continued)				ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16		W0527	016	24		34-61-16	050-099, 155-199, 275-299
	16	UNUSED						150-154
	17		W0527	208R	20		34-12-21	ALL
	18		W0527	208B	20		34-12-21	ALL
	19		W0527	208Z			34-12-21	ALL
	20		W0527	029	24		34-61-25	050-099, 150-199
	20		W0527	029	24		SPARE	275-299
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24		W0527	209B	24		34-13-11	ALL
	25		W0527	209R	24		34-13-11	ALL
	26		W0527	209Z			34-13-11	ALL
	27	UNUSED						050-099, 150-156, 162-166
	27		W0527	218R	24		34-22-91	157, 167-199, 275-299
	28	UNUSED						050-099, 150-156, 162-166
	28		W0527	218B	24		34-22-91	157, 167-199, 275-299
	29	UNUSED						050-099, 150-156, 162-166
	29		W0527	218Z			34-22-91	157, 167-199, 275-299
	30	UNUSED						ALL
	31	UNUSED						ALL
D04899P		AE0320/ /		PLUG-E2-3				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W0145	689	24		34-61-26	050-099, 155-199, 275-299
	6	UNUSED						150-154
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D04800

Page 80

Feb 06/2009



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04899P		AE0320/ /		PLUG-E2-3 (continued)				ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16		W0145	690	24		34-61-16	050-099, 155-199, 275-299
	16	UNUSED						150-154
	17		W0145	585R	22		34-12-21	ALL
	18		W0145	585B	22		34-12-21	ALL
	19		W0145	585Z			34-12-21	ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24		W0145	530B	24		34-13-11	ALL
	25		W0145	530R	24		34-13-11	ALL
	26		W0145	530Z			34-13-11	ALL
	27	UNUSED						050-099, 150-156, 162-166
	27		W0145	722R	24		34-22-91	157, 167-199, 275-299
	28	UNUSED						050-099, 150-156, 162-166
	28		W0145	722B	24		34-22-91	157, 167-199, 275-299
	29	UNUSED						050-099, 150-156, 162-166
	29		W0145	722Z			34-22-91	157, 167-199, 275-299
	30	UNUSED						ALL
	31	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D04800

Page 81 End

Feb 06/2009



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04901J		AE0319/ /		RCPT-				ALL
	1		W0397	006	24		34-22-37	ALL
	2		W0397	032	24		22-41-13	ALL
	3		W0397	023	22		SPARE	ALL
	4		W0397	024	22		SPARE	ALL
	5		W0397	053	24		SPARE	ALL
D04901P		AE0319/ /		PLUG-E1-4				ALL
	1		W0107	019	24		34-22-38	ALL
	2		W0107	052	24		22-41-13	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
D04904J		AE0209/ /		RCPT-				ALL
	1		W0176	558	24		21-51-11	ALL
	2		W0176	889	24		32-42-11	ALL
	3		W0176	274B	24		21-61-51	ALL
	4		W0176	057	24		21-58-14	ALL
	5		W0176	274R	24		21-61-51	ALL
	6		W0176	259R	24		36-21-11	ALL
	7		W0176	259B	24		36-21-11	ALL
	8		W0176	270R	24		77-12-12	ALL
	9		W0176	270B	24		77-12-12	ALL
	10		W0176	270Z			77-12-12	ALL
	11		W0176	67F	24		36-21-11	050-099, 156-162, 166-199, 277-299
	11		W0176	532	24		36-21-11	150-155, 163-165, 275-276
	12		W0176	124R	22		26-18-11	ALL
	13		W0176	203B	24		21-51-12	ALL
	14		W0176	203R	24		21-51-12	ALL
	15		W0176	767	22		28-41-21	ALL
	16		W0176	01G	24		21-44-21	ALL
	17		W0176	16V	24		21-61-61	ALL
	18		W0176	16W	24		21-61-61	ALL
	19		W0176	16X	24		21-61-61	ALL
	20	UNUSED						ALL
	21		W0176	176	24		21-58-13	ALL
	22		W0176	187	24		21-58-13	ALL
	23	UNUSED						050-099, 150-199, 275-276
	23		W0176	17R	22		21-28-11	277-299
	24	UNUSED						050-099, 150-199, 275-276

HOOKUP LIST
D280T132

91-21-51
Section D04900
Page 1
Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04904J		AE0209/ /		RCPT- (continued)				ALL
	24		W0176	17N	22		21-28-11	277-299
	25	UNUSED						ALL
	26		W0176	62S	24		21-43-11	ALL
	27		W0176	62U	24		21-43-11	ALL
	28	UNUSED						ALL
	29		W0176	195	24		36-11-11	ALL
	30		W0176	506	24		21-58-14	ALL
	31		W0176	04Q	24		73-21-14	050-099, 150-199, 277-299
	31	UNUSED						275-276
	32		W0176	508	24		21-58-14	ALL
	33		W0176	196	24		36-11-11	ALL
	34		W0176	89C	24		21-58-12	ALL
	35		W0176	89D	24		21-58-12	ALL
	36		W0176	805	22		36-11-61	ALL
	37		W0176	804	22		36-11-61	ALL
	38		W0176	803	24		36-11-61	ALL
	39		W0176	802	24		36-11-61	ALL
	40		W0176	92Z	24		36-11-61	ALL
	41		W0176	15J	24		21-58-11	ALL
	42		W0176	89H	24		21-58-12	ALL
	43		W0176	89J	24		21-58-12	ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49		W0176	89E	24		21-58-12	ALL
	50	UNUSED						ALL
	51		W0176	89F	24		21-58-12	ALL
	52		W0176	15Y	24		21-61-71	ALL
	53		W0176	198	24		36-11-11	ALL
	54		W0176	503	24		36-11-11	ALL
	55	UNUSED						ALL
	56	UNUSED						ALL
	57	UNUSED						ALL
	58		W0176	01K	24		21-51-11	ALL
	59	UNUSED						ALL
	60		W0176	260R	24		36-21-11	ALL
	61		W0176	260B	24		36-21-11	ALL
	DED		W0176	767Z			28-41-21	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04900

Page 2

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04904P		AE0209/ /		PLUG-P36				ALL
	1		W0942	002	24		21-51-11	ALL
	2		W0942	807	24		32-42-11	ALL
	3		W0942	228B	24		21-61-51	ALL
	4		W0942	167	24		21-58-14	ALL
	5		W0942	228R	24		21-61-51	ALL
	6		W0942	226R	24		36-21-11	ALL
	7		W0942	226B	24		36-21-11	ALL
	8		W0942	227R	24		77-12-12	ALL
	9		W0942	227B	24		77-12-12	ALL
	10		W0942	227Z			77-12-12	ALL
	11		W0942	149	24		36-21-11	ALL
	12		W0942	125R	22		26-18-11	ALL
	13		W0942	206B	24		21-51-12	ALL
	14		W0942	206R	24		21-51-12	ALL
	15		W0942	032	22		28-41-21	ALL
	16		W0942	135	24		21-44-21	ALL
	17		W0942	504	24		21-61-61	ALL
	18		W0942	507	24		21-61-61	ALL
	19		W0942	506	24		21-61-61	ALL
	20	UNUSED						ALL
	21		W0942	015	24		21-58-13	ALL
	22		W0942	034	24		21-58-13	ALL
	23	UNUSED						050-099, 150-199, 275-276 277-299
	23		W0942	591	22		21-28-11	
	24	UNUSED						050-099, 150-199, 275-276 277-299
	24		W0942	592	22		21-28-11	
	25	UNUSED						ALL
	26		W0942	568	24		21-43-11	ALL
	27		W0942	569	24		21-43-11	ALL
	28	UNUSED						ALL
	29		W0942	092	24		36-11-11	ALL
	30		W0942	065	24		21-58-14	ALL
	31		W0942	136	22		73-21-14	ALL
	32		W0942	067	24		21-58-14	ALL
	33		W0942	093	24		36-11-11	ALL
	34		W0942	039	24		21-58-13	ALL
	35		W0942	047	24		21-58-13	ALL
	36		W0942	190	22		36-11-61	ALL
	37		W0942	189	22		36-11-61	ALL
	38		W0942	188	24		36-11-61	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04900

Page 3

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04904P		AE0209/ /		PLUG-P36 (continued)				ALL
	39		W0942	187	24		36-11-61	ALL
	40		W0942	185	24		36-11-61	ALL
	41		W0942	501	24		21-58-11	ALL
	42		W0942	072	24		21-58-12	ALL
	43		W0942	073	24		21-58-12	ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49		W0942	105	24		21-58-12	ALL
	50	UNUSED						ALL
	51		W0942	104	24		21-58-12	ALL
	52		W0942	508	24		21-61-71	ALL
	53		W0942	094	24		36-11-11	ALL
	54		W0942	095	24		36-11-11	ALL
	55	UNUSED						ALL
	56		W0942	801	20		SPARE	ALL
	57		W0942	802	20		SPARE	ALL
	58		W0942	126	24		21-51-11	ALL
	59	UNUSED						ALL
	60		W0942	212R	24		36-21-11	ALL
	61		W0942	212B	24		36-21-11	ALL
	DED		W0942	032Z			28-41-21	ALL
D04906J		AE0209/ /		RCPT-P36				ALL
	1	UNUSED						050-099, 151, 275-299
	1	EO	W9043	901W	10		23-19-11	150, 152-199
	2	UNUSED						050-099, 151, 275-299
	2	EO	W9043	901B	10		23-19-11	150, 152-199
	3		W0176	892	24		21-58-16	ALL
	4	UNUSED						050-099, 151, 275-299
	4	EO	W9043	901O	10		23-19-11	150, 152-199
	5		W0176	02F	24		28-22-12	050-099, 275-299
	5	EO	W9043	902	20		23-19-11	150, 152-199
	5	UNUSED						151
	6		W0176	542	12		21-58-14	ALL
	7		W0176	05V	24		32-42-11	ALL
	8		W0176	551	12		21-58-14	ALL
	9		W0176	708	24		32-42-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04900

Page 4

Feb 06/2009



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04906J		AE0209/ /		RCPT-P36 (continued)				ALL
	10		W0176	552	12		21-58-14	ALL
	11	UNUSED						050-099, 151, 275-299
	11		W9048	900	24		23-19-11	150, 152-199
	12		W0176	600	20		27-13-11	ALL
	13		W0176	599	20		27-13-11	ALL
	14		W0176	03U	22		27-13-11	ALL
	15		W0176	05P	24		32-42-11	ALL
	16		W0176	05Q	24		32-42-11	ALL
	17		W0176	05R	24		32-42-11	ALL
	18		W0176	05S	24		32-42-11	ALL
	19		W0176	05T	24		32-42-11	ALL
	20		W0176	05U	24		32-42-11	ALL
	21		W0176	891	24		21-58-16	ALL
	22		W0176	890	24		21-58-16	ALL
	23	UNUSED						ALL
	24		W0176	24B	24		21-61-51	050-099
	24		W0176	14V	24		21-61-51	150-199, 275-299
	25		W0176	294B	24		21-61-51	ALL
	26		W0176	294R	24		21-61-51	ALL
	27		W0176	297R	24		21-61-51	ALL
	28		W0176	297B	24		21-61-51	ALL
	29		W0176	221R	24		32-42-11	ALL
	30		W0176	221B	24		32-42-11	ALL
	31		W0176	221Z			32-42-11	ALL
	32	UNUSED						050-099, 151, 275-299
	32		W9048	901	24		23-19-11	150, 152-199
D04906P		AE0209/ /		PLUG-P36				ALL
	1		W0942	123	16		SPARE	ALL
	1	EO	W9044	902W	10		23-19-11	150, 152-199
	2	UNUSED						050-099, 151, 275-299
	2	EO	W9044	902B	10		23-19-11	150, 152-199
	3		W0942	128	24		21-58-11	ALL
	4	UNUSED						050-099, 151, 275-299
	4	EO	W9044	902O	10		23-19-11	150, 152-199
	5		W0942	011	24		28-22-12	050-099, 275-299
	5		W9081	901	20		23-19-11	150, 152-199
	5	UNUSED						151
	6		W0942	061	12		21-58-14	ALL
	7		W0942	164	24		32-42-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04900

Page 5

Feb 06/2009



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04906P		AE0209/ /		PLUG-P36 (continued)				ALL
	8		W0942	062	12		21-58-14	ALL
	9		W0942	111	24		32-42-11	ALL
	10		W0942	063	12		21-58-14	ALL
	11	UNUSED						050-099, 151, 275-299
	11		W9047	902	24		23-19-11	150, 152-199
	12		W0942	108	20		27-13-11	ALL
	13		W0942	109	20		27-13-11	ALL
	14		W0942	110	22		27-13-11	ALL
	15		W0942	158	24		32-42-11	ALL
	16		W0942	159	24		32-42-11	ALL
	17		W0942	160	24		32-42-11	ALL
	18		W0942	161	24		32-42-11	ALL
	19		W0942	162	24		32-42-11	ALL
	20		W0942	163	24		32-42-11	ALL
	21		W0942	165	24		21-58-11	ALL
	22		W0942	144	24		21-58-11	ALL
	23		W0942	502	24		SPARE	ALL
	24		W0942	503	24		21-61-51	ALL
	25		W0942	229B	24		21-61-51	ALL
	26		W0942	229R	24		21-61-51	ALL
	27		W0942	234R	24		21-61-51	ALL
	28		W0942	234B	24		21-61-51	ALL
	29		W0942	216R	24		32-42-11	ALL
	30		W0942	216B	24		32-42-11	ALL
	31		W0942	216Z			32-42-11	ALL
	32	UNUSED						050-099, 151, 275-299
	32		W9047	903	24		23-19-11	150, 152-199
D04908J		AE0305/ /		RCPT-				ALL
	1		W0942	216R	24		32-42-11	ALL
	2		W0942	216B	24		32-42-11	ALL
	3		W0942	216Z			32-42-11	ALL
	4		W0942	111	24		32-42-11	ALL
	5		W0942	005	22		32-42-11	ALL
	6	UNUSED						ALL
	7		W0942	007	22		32-42-11	ALL
	8	UNUSED						ALL
	9		W0942	009	22		32-42-11	ALL
	10		W0942	124	22		SPARE	ALL
	11		W0942	158	24		32-42-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04900

Page 6

Feb 06/2009



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04908J		AE0305/ /		RCPT- (continued)				ALL
	12		W0942	159	24		32-42-11	ALL
	13		W0942	160	24		32-42-11	ALL
	14		W0942	161	24		32-42-11	ALL
	15		W0942	162	24		32-42-11	ALL
	16		W0942	163	24		32-42-11	ALL
	17		W0942	164	24		32-42-11	ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D04908P		AE0305/ /		PLUG-E1-1				ALL
	1		W1084	212R	24		32-42-11	ALL
	2		W1084	212B	24		32-42-11	ALL
	3		W1084	212Z			32-42-11	ALL
	4		W1084	078	24		32-42-11	ALL
	5		W1084	010	24		32-42-11	ALL
	6	UNUSED						ALL
	7		W1084	011	24		32-42-11	ALL
	8	UNUSED						ALL
	9		W1084	012	24		32-42-11	ALL
	10	UNUSED						ALL
	11		W1084	028	24		32-42-11	ALL
	12		W1084	025	24		32-42-11	ALL
	13		W1084	072	24		32-42-11	ALL
	14		W1084	027	24		32-42-11	ALL
	15		W1084	079	24		32-42-11	ALL
	16		W1084	026	24		32-42-11	ALL
	17		W1084	067	24		32-42-11	ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D04900

Page 7

Feb 06/2009



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04912J		AE0305/ /		RCPT-E1-2				ALL
	1		W0654	401B	22		21-31-11	ALL
	2		W0654	401G	22		21-31-11	ALL
	3		W0654	401R	22		21-31-11	ALL
	4		W0654	401Y	22		21-31-11	ALL
	5		W0654	401Z			21-31-11	ALL
	6		W0654	028	24		21-31-11	ALL
	7		W0654	029	24		21-31-11	ALL
	8		W0654	030	24		21-31-11	ALL
	9		W0654	201B	24		21-31-11	ALL
	10		W0654	201R	24		21-31-11	ALL
	11		W0654	202B	24		21-31-11	ALL
	12		W0654	202R	24		21-31-11	ALL
	13		W0654	035	22		21-66-21	050-099, 162-199
	13	UNUSED						150-157, 275-299
	14		W0654	036	22		21-66-21	050-099, 162-199
	14	UNUSED						150-157, 275-299
	15		W0654	209R	22		21-66-21	050-099, 162-199
	15	UNUSED						150-157, 275-299
	16		W0654	209B	22		21-66-21	050-099, 162-199
	16	UNUSED						150-157, 275-299
	17		W0654	209Z			21-66-21	050-099, 162-199
	17	UNUSED						150-157, 275-299
	18		W0654	037	22		21-66-41	050-099, 150, 152-199
	18	UNUSED						151, 275-299
	19		W0654	033	20		21-31-11	ALL
	20		W0654	801	22		SPARE	ALL
	21		W0654	038	22		21-66-41	050-099, 150, 152-199
	21	UNUSED						151, 275-299
	22		W0654	210Z			21-66-41	050-099, 150, 152-199
	22	UNUSED						151, 275-299
	23		W0654	210R	22		21-66-41	050-099, 150, 152-199
	23	UNUSED						151, 275-299
	24		W0654	210B	22		21-66-41	050-099, 150, 152-199
	24	UNUSED						151, 275-299
D04912P		AE0305/ /		PLUG-				ALL
	1		W1092	401B	22		21-31-11	ALL
	2		W1092	401G	22		21-31-11	ALL
	3		W1092	401R	22		21-31-11	ALL
	4		W1092	401Y	22		21-31-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04900

Page 8

Feb 06/2009



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04912P		AE0305/ /		PLUG- (continued)				ALL
	5		W1092	401Z			21-31-11	ALL
	6		W1092	018	24		21-31-11	ALL
	7		W1092	015	24		21-31-11	ALL
	8		W1092	016	24		21-31-11	ALL
	9		W1092	205B	24		21-31-11	ALL
	10		W1092	205R	24		21-31-11	ALL
	11		W1092	208B	24		21-31-11	ALL
	12		W1092	208R	24		21-31-11	ALL
	13		W1092	690	22		21-66-21	050-099, 162-199
	13	UNUSED						150-157, 275-299
	14		W1092	691	22		21-66-21	050-099, 162-199
	14	UNUSED						150-157, 275-299
	15		W1092	779R	22		21-66-21	050-099, 162-199
	15	UNUSED						150-157, 275-299
	16		W1092	779B	22		21-66-21	050-099, 162-199
	16	UNUSED						150-157, 275-299
	17		W1092	779Z			21-66-21	050-099, 162-199
	17	UNUSED						150-157, 275-299
	18		W1092	693	22		21-66-41	050-099, 150, 152-199
	18	UNUSED						151, 275-299
	19		W1092	019	22		21-31-11	ALL
	20	UNUSED						ALL
	21		W1092	695	22		21-66-41	050-099, 150, 152-199
	21	UNUSED						151, 275-299
	22		W1092	780Z			21-66-41	050-099, 150, 152-199
	22	UNUSED						151, 275-299
	23		W1092	780R	22		21-66-41	050-099, 150, 152-199
	23	UNUSED						151, 275-299
	24		W1092	780B	22		21-66-41	050-099, 150, 152-199
	24	UNUSED						151, 275-299
D04913J		AE0307/ /		RCPT-E1-4				ALL
	1		W1523	202R	24		SPARE	ALL
	2		W1523	202B	24		SPARE	ALL
	3		W1523	202Z			SPARE	ALL
	4		W1523	206R	24		34-22-38	ALL
	5		W1523	206B	24		34-22-38	ALL
	6		W1523	206Z			34-22-38	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D04900
Page 9
Feb 06/2009



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04913J		AE0307/ /		RCPT-E1-4 (continued)				ALL
	9		W1523	011	22		34-22-37	ALL
	10		W1523	201R	24		22-12-31	ALL
	11		W1523	201B	24		22-12-31	ALL
	12		W1523	201Z			22-12-31	ALL
	13		W1523	203R	24		22-41-11	ALL
	14		W1523	203B	24		22-41-11	ALL
	15		W1523	203Z			22-41-11	ALL
	16		W1523	001	22		SPARE	ALL
	17		W1523	012	22		SPARE	ALL
	18		W1523	013	22		SPARE	ALL
	19	UNUSED						ALL
	20		W1523	006	24		34-21-31	ALL
	21		W1523	207R	24		SPARE	ALL
	22		W1523	207B	24		SPARE	ALL
	23		W1523	207Z			SPARE	ALL
	24		W1523	002	22		SPARE	ALL
	25		W1523	208R	24		SPARE	ALL
	26		W1523	208B	24		SPARE	ALL
	27		W1523	208Z			SPARE	ALL
	28		W1523	214R	24		31-35-13	ALL
	29		W1523	214B	24		31-35-13	ALL
	30		W1523	214Z			31-35-13	ALL
	31		W1523	563Z			32-45-14	050-099, 150-199
	31	UNUSED						275-299
	32		W1523	211Z			22-21-11	ALL
	33		W1523	211R	24		22-21-11	ALL
	34		W1523	211B	24		22-21-11	ALL
	35		W1523	010	22		22-21-11	ALL
	36		W1523	209R	24		32-42-11	ALL
	37		W1523	209B	24		32-42-11	ALL
	38		W1523	209Z			32-42-11	ALL
	39		W1523	212R	24		34-22-81	ALL
	40		W1523	212B	24		34-22-81	ALL
	41		W1523	212Z			34-22-81	ALL
	42		W1523	034	22		34-21-31	ALL
	43		W1523	035	22		34-21-31	ALL
	44		W1523	036	22		34-21-31	ALL
	45		W1523	563B	24		32-45-14	050-099, 150-199
	45	UNUSED						275-299
	46		W1523	563R	24		32-45-14	050-099, 150-199

HOOKUP LIST

D280T132

91-21-51

Section D04900

Page 10

Feb 06/2009



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04913J		AE0307/ /		RCPT-E1-4 (continued)				ALL
	46	UNUSED						275-299
	47	UNUSED	W1523	564B	24		32-45-14	050-099, 150-199
	47	UNUSED						275-299
	48	UNUSED	W1523	564R	24		32-45-14	050-099, 150-199
	48	UNUSED						275-299
	49	UNUSED	W1523	564Z			32-45-14	050-099, 150-199
	49	UNUSED						275-299
	50	UNUSED	W1523	565B	24		32-45-14	050-099, 150-199
	50	UNUSED						275-299
	51	UNUSED	W1523	565R	24		32-45-14	050-099, 150-199
	51	UNUSED						275-299
	52	UNUSED	W1523	565Z			32-45-14	050-099, 150-199
	52	UNUSED						275-299
	53	UNUSED	W1523	566B	24		32-45-14	050-099, 150-199
	53	UNUSED						275-299
	54	UNUSED	W1523	566R	24		32-45-14	050-099, 150-199
	54	UNUSED						275-299
	55	UNUSED	W1523	566Z			32-45-14	050-099, 150-199
	55	UNUSED						275-299
D04913P		AE0307/ /		PLUG-E1-4				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W0127	282R	24		34-22-38	ALL
	5		W0127	282B	24		34-22-38	ALL
	6		W0127	282Z			34-22-38	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9		W0127	162	24		34-22-37	ALL
	10		W0127	218R	24		22-12-31	ALL
	11		W0127	218B	24		22-12-31	ALL
	12		W0127	218Z			22-12-31	ALL
	13		W0127	238R	24		22-41-11	ALL
	14		W0127	238B	24		22-41-11	ALL
	15		W0127	238Z			22-41-11	ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D04900

Page 11

Feb 06/2009



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04913P		AE0307/ /		PLUG-E1-4 (continued)				ALL
	20		W0127	843	24		34-21-31	ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28		W0127	250R	24		31-35-13	ALL
	29		W0127	250B	24		31-35-13	ALL
	30		W0127	250Z			31-35-13	ALL
	31		W0127	563Z			32-45-14	050-099, 150-199
	31	UNUSED						275-299
	32		W0127	535Z			22-21-11	ALL
	33		W0127	535R	24		22-21-11	ALL
	34		W0127	535B	24		22-21-11	ALL
	35		W0127	192	22		22-21-11	ALL
	36		W0127	537R	24		32-42-11	ALL
	37		W0127	537B	24		32-42-11	ALL
	38		W0127	537Z			32-42-11	ALL
	39		W0127	290R	24		34-22-81	ALL
	40		W0127	290B	24		34-22-81	ALL
	41		W0127	290Z			34-22-81	ALL
	42		W0127	092	24		34-21-31	ALL
	43		W0127	093	24		34-21-31	ALL
	44		W0127	094	24		34-21-31	ALL
	45		W0127	563B	24		32-45-14	050-099, 150-199
	45	UNUSED						275-299
	46		W0127	563R	24		32-45-14	050-099, 150-199
	46	UNUSED						275-299
	47		W0127	564B	24		32-45-14	050-099, 150-199
	47	UNUSED						275-299
	48		W0127	564R	24		32-45-14	050-099, 150-199
	48	UNUSED						275-299
	49		W0127	564Z			32-45-14	050-099, 150-199
	49	UNUSED						275-299
	50		W0127	565B	24		32-45-14	050-099, 150-199
	50	UNUSED						275-299
	51		W0127	565R	24		32-45-14	050-099, 150-199
	51	UNUSED						275-299

HOOKUP LIST

D280T132

91-21-51

Section D04900

Page 12

Feb 06/2009



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04913P		AE0307/ /		PLUG-E1-4 (continued)				ALL
	52		W0127	565Z			32-45-14	050-099, 150-199 275-299
	52	UNUSED						
	53		W0127	566B	24		32-45-14	050-099, 150-199 275-299
	53	UNUSED						
	54		W0127	566R	24		32-45-14	050-099, 150-199 275-299
	54	UNUSED						
	55		W0127	566Z			32-45-14	050-099, 150-199 275-299
	55	UNUSED						
D04915J		AE0307/ /		RCPT-E1-2				ALL
	1		W1523	207R	24		SPARE	ALL
	2		W1523	207B	24		SPARE	ALL
	3		W1523	207Z			SPARE	ALL
	4		W1523	002	22		SPARE	ALL
	5	UNUSED						ALL
	6		W1523	005	22		34-22-17	ALL
	7		W1523	205R	24		34-43-11	ALL
	8		W1523	205B	24		34-43-11	ALL
	9		W1523	205Z			34-43-11	ALL
	10		W1523	201R	24		22-12-31	ALL
	11		W1523	201B	24		22-12-31	ALL
	12		W1523	201Z			22-12-31	ALL
	13		W1523	203R	24		22-41-11	ALL
	14		W1523	203B	24		22-41-11	ALL
	15		W1523	203Z			22-41-11	ALL
	16		W1523	001	22		SPARE	ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20		W1523	213R	24		34-22-18	ALL
	21		W1523	213B	24		34-22-18	ALL
	22		W1523	213Z			34-22-18	ALL
	23		W1523	563B	24		32-45-14	050-099, 150-199 275-299
	23	UNUSED						
	24		W1523	563R	24		32-45-14	050-099, 150-199 275-299
	24	UNUSED						
	25		W1523	208R	24		SPARE	ALL
	26		W1523	208B	24		SPARE	ALL
	27		W1523	208Z			SPARE	ALL
	28		W1523	563Z			32-45-14	050-099, 150-199

HOOKUP LIST
D280T132

91-21-51
Section D04900
Page 13
Feb 06/2009



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04915J		AE0307/ /		RCPT-E1-2 (continued)				ALL
	28	UNUSED						275-299
	29		W1523	564B	24		32-45-14	050-099, 150-199
	29	UNUSED						275-299
	30		W1523	564R	24		32-45-14	050-099, 150-199
	30	UNUSED						275-299
	31		W1523	564Z			32-45-14	050-099, 150-199
	31	UNUSED						275-299
	32		W1523	565B	24		32-45-14	050-099, 150-199
	33		W1523	565R	24		32-45-14	050-099, 150-199
	34		W1523	565Z			32-45-14	050-099, 150-199
	35		W1523	566B	24		32-45-14	050-099, 150-199
	36		W1523	566R	24		32-45-14	050-099, 150-199
	37		W1523	566Z			32-45-14	050-099, 150-199
	38	UNUSED						050-099, 150-199
	39	UNUSED						050-099, 150-199
	40	UNUSED						050-099, 150-199
	41	UNUSED						050-099, 150-199
D04915P		AE0307/ /		PLUG-E1-2				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W1096	101	24		34-22-17	ALL
	7		W1096	201R	24		34-43-11	ALL
	8		W1096	201B	24		34-43-11	ALL
	9		W1096	201Z			34-43-11	ALL
	10		W1096	202R	24		22-12-31	ALL
	11		W1096	202B	24		22-12-31	ALL
	12		W1096	202Z			22-12-31	ALL
	13		W1096	203R	24		22-41-11	ALL
	14		W1096	203B	24		22-41-11	ALL
	15		W1096	203Z			22-41-11	ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20		W1096	207R	24		34-22-18	ALL
	21		W1096	207B	24		34-22-18	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04900

Page 14

Feb 06/2009



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04915P		AE0307/ /		PLUG-E1-2 (continued)				ALL
	22		W1096	207Z			34-22-18	ALL
	23		W1096	208B	22		32-45-14	050-099, 150-199
	23	UNUSED						275-299
	24		W1096	208R	22		32-45-14	050-099, 150-199
	24	UNUSED						275-299
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28		W1096	208Z			32-45-14	050-099, 150-199
	28	UNUSED						275-299
	29		W1096	209B	22		32-45-14	050-099, 150-199
	29	UNUSED						275-299
	30		W1096	209R	22		32-45-14	050-099, 150-199
	30	UNUSED						275-299
	31		W1096	209Z			32-45-14	050-099, 150-199
	31	UNUSED						275-299
	32		W1096	210B	22		32-45-14	050-099, 150-199
	33		W1096	210R	22		32-45-14	050-099, 150-199
	34		W1096	210Z			32-45-14	050-099, 150-199
	35		W1096	211B	22		32-45-14	050-099, 150-199
	36		W1096	211R	22		32-45-14	050-099, 150-199
	37		W1096	211Z			32-45-14	050-099, 150-199
	38	UNUSED						050-099, 150-199
	39	UNUSED						050-099, 150-199
	40	UNUSED						050-099, 150-199
	41	UNUSED						050-099, 150-199
D04916J		AE0320/ /		RCPT-E2-4				ALL
	1		W0656	141	20		29-11-31	ALL
	2		W0656	054	22		29-33-11	ALL
	3		W0656	055	22		29-33-11	ALL
	4		W0656	FRD			29-33-11	ALL
	5		W0656	FRE			29-33-11	ALL
	6		W0656	056	22		29-33-11	ALL
	7	UNUSED						ALL
	8		W0656	004	22		SPARE	ALL
	9		W0656	005	24		29-33-11	ALL
	10		W0656	006	24		29-33-11	ALL
	11	UNUSED						ALL
	12		W0656	008	22		29-33-11	ALL

HOOKUP LIST
D280T132

91-21-51
Section D04900
Page 15
Feb 06/2009



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04916J		AE0320/ /		RCPT-E2-4 (continued)				ALL
	13		W0656	144	20		29-11-31	ALL
	14		W0656	FRF			29-33-11	ALL
	15		W0656	053	22		29-33-11	ALL
	16		W0656	002	24		SPARE	ALL
	17		W0656	131	24		24-11-21	ALL
	18		W0656	130	24		24-11-21	ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
			W0656	053Z			29-33-11	ALL
			W0656	FRD			29-33-11	ALL
			W0656	FRE			29-33-11	ALL
			W0656	FRF			29-33-11	ALL
D04916P		AE0320/ /		PLUG-E2-4				ALL
	1		W0016	212B	22		29-11-31	ALL
	2		W0016	092	24		29-33-11	ALL
	3		W0016	093	24		29-33-11	ALL
	4		W0016	FRB			29-33-11	ALL
	5		W0016	FRD			29-33-11	ALL
	6		W0016	094	24		29-33-11	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9		W0016	087	24		29-33-11	ALL
	10		W0016	088	24		29-33-11	ALL
	11	UNUSED						ALL
	12		W0016	090	22		29-33-11	ALL
	13		W0016	212R	22		29-11-31	ALL
	14		W0016	FRC			29-33-11	ALL
	15		W0016	091	24		29-33-11	ALL
	16	UNUSED						ALL
	17		W0016	182	24		24-11-21	ALL
	18		W0016	183	24		24-11-21	ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D04900

Page 16

Feb 06/2009



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04916P		AE0320 / /		PLUG-E2-4 (continued)				ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	DED		W0016	087Z			29-33-11	ALL
	DED		W0016	088Z			29-33-11	ALL
	DED		W0016	090Z			29-33-11	ALL
	DED		W0016	212Z			29-11-31	ALL
			W0016	091Z			29-33-11	ALL
			W0016	FRB			29-33-11	ALL
			W0016	FRC			29-33-11	ALL
			W0016	FRD			29-33-11	ALL
D04917J		132/189/R019		RCPT-PRESS BLKHD				ALL
	1		W0779	007	22		34-43-12	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13		W0779	203R	22		34-43-12	ALL
	14		W0779	203B	22		34-43-12	ALL
	15		W0779	205R	22		34-43-12	ALL
	16		W0779	205B	22		34-43-12	ALL
	17		W0779	201R	22		34-43-12	ALL
	18		W0779	201B	22		34-43-12	ALL
	19		W0779	202R	22		34-43-12	ALL
	20		W0779	202B	22		34-43-12	ALL
	21	UNUSED						ALL
	22		W0779	006	20		34-43-12	ALL
	23	UNUSED						ALL
	24		W0779	004	20		34-43-12	ALL
	25		W0779	005	20		34-43-12	ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D04900

Page 17

Feb 06/2009



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04917J		132/189/R019		RCPT-PRESS BLKHD (continued)				ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38		W0779	302Y	22		34-43-12	ALL
	39		W0779	302B	22		34-43-12	ALL
	40		W0779	302R	22		34-43-12	ALL
	41		W0779	303R	22		34-43-12	ALL
	42		W0779	303B	22		34-43-12	ALL
	43		W0779	303Y	22		34-43-12	ALL
	44		W0779	204R	22		34-43-12	ALL
	45		W0779	204B	22		34-43-12	ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52		W0779	301R	22		34-43-12	ALL
	53		W0779	301B	22		34-43-12	ALL
	54		W0779	301Y	22		34-43-12	ALL
	55	UNUSED						ALL
	DED		W0779	201Z			34-43-12	ALL
	DED		W0779	202Z			34-43-12	ALL
	DED		W0779	203Z			34-43-12	ALL
	DED		W0779	204Z			34-43-12	ALL
	DED		W0779	205Z			34-43-12	ALL
	DED		W0779	301Z			34-43-12	ALL
	DED		W0779	302Z			34-43-12	ALL
	DED		W0779	303Z			34-43-12	ALL
D04917P		132/189/R019		PLUG-PRESS.BLKHD				ALL
	1		W0781	007	20		34-43-12	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL

HOOKUP LIST
D280T132



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04917P		132/189/R019		PLUG-PRESS.BLKHD (continued)				ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13		W0781	203R	20		34-43-12	ALL
	14		W0781	203B	20		34-43-12	ALL
	15		W0781	205R	20		34-43-12	ALL
	16		W0781	205B	20		34-43-12	ALL
	17		W0781	201R	20		34-43-12	ALL
	18		W0781	201B	20		34-43-12	ALL
	19		W0781	202R	20		34-43-12	ALL
	20		W0781	202B	20		34-43-12	ALL
	21	UNUSED						ALL
	22		W0781	006	20		34-43-12	ALL
	23	UNUSED						ALL
	24		W0781	004	20		34-43-12	ALL
	25		W0781	005	20		34-43-12	ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38		W0781	302Y	20		34-43-12	ALL
	39		W0781	302B	20		34-43-12	ALL
	40		W0781	302R	20		34-43-12	ALL
	41		W0781	303R	20		34-43-12	ALL
	42		W0781	303B	20		34-43-12	ALL
	43		W0781	303Y	20		34-43-12	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04900

Page 19

Feb 06/2009



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04917P		132/189/R019		PLUG-PRESS.BLKHD (continued)				ALL
	44		W0781	204R	20		34-43-12	ALL
	45		W0781	204B	20		34-43-12	ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52		W0781	301R	20		34-43-12	ALL
	53		W0781	301B	20		34-43-12	ALL
	54		W0781	301Y	20		34-43-12	ALL
	55	UNUSED						ALL
	DED		W0781	201Z			34-43-12	ALL
	DED		W0781	202Z			34-43-12	ALL
	DED		W0781	203Z			34-43-12	ALL
	DED		W0781	204Z			34-43-12	ALL
	DED		W0781	205Z			34-43-12	ALL
	DED		W0781	301Z			34-43-12	ALL
	DED		W0781	302Z			34-43-12	ALL
	DED		W0781	303Z			34-43-12	ALL
	REF		W0781	YAA			34-43-12	ALL
D04918J		AE0209/ /		RCPT-				ALL
	1		W0182	141	16		28-22-11	ALL
	2		W0182	142	16		28-22-11	ALL
	3	UNUSED						ALL
	4		W0182	143	16		28-22-11	ALL
	5		W0182	063	24		21-53-11	ALL
	6		W0182	166	12		28-31-21	050-099, 162-164, 276
	6	UNUSED						150-154, 275
	6		W0182	163	12		28-31-21	155-157, 165-199, 277-299
	7		W0182	065	24		21-53-11	ALL
	8		W0182	165	12		28-31-21	050-099, 162-164, 276
	8	UNUSED						150-154, 275
	8		W0182	162	12		28-31-21	155-157, 165-199, 277-299
	9		W0182	067	24		21-53-11	ALL
	10		W0182	164	12		28-31-21	050-099, 162-164, 276
	10	UNUSED						150-154, 275
	10		W0182	161	12		28-31-21	155-157, 165-199, 277-299
	11		W0182	201Z			21-31-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04900

Page 20

Feb 06/2009



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04918J		AE0209/ /		RCPT- (continued)				ALL
	12		W0182	201R	24		21-31-11	ALL
	13		W0182	201B	24		21-31-11	ALL
	14		W0182	045	22		21-44-11	ALL
	15		W0182	060	24		21-44-11	ALL
	16		W0182	061	24		21-44-11	ALL
	17		W0182	062	24		21-44-11	ALL
	18		W0182	070	24		21-26-11	ALL
	19		W0182	097	20		21-31-11	ALL
	20		W0182	206B	20		21-31-11	ALL
	21		W0182	206R	20		21-31-11	ALL
	22		W0182	064	24		21-53-11	ALL
	23		W0182	109	22		21-44-21	ALL
	24		W0182	110	22		21-44-21	ALL
	25		W0182	108	22		21-44-21	ALL
	26		W0182	066	24		21-53-11	ALL
	27		W0182	044	24		21-43-11	ALL
	28	UNUSED						ALL
	29		W0182	059	24		21-43-11	ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32		W0182	068	24		21-53-11	ALL
D04918P		AE0209/ /		PLUG-P36				ALL
	1		W0578	078	14		28-22-11	ALL
	2		W0578	079	14		28-22-11	ALL
	3	UNUSED						ALL
	4		W0578	080	14		28-22-11	ALL
	5		W0578	013	24		21-53-11	ALL
	6	EO	W0578	070	10		28-31-21	050-099, 155-199, 276-299
	6	UNUSED						150-154, 275
	7		W0578	015	24		21-53-11	ALL
	8	EO	W0578	102	10		28-31-21	050-099, 155-199, 276-299
	8	UNUSED						150-154, 275
	9		W0578	017	24		21-53-11	ALL
	10	EO	W0578	107	10		28-31-21	050-099, 155-199, 276-299
	10	UNUSED						150-154, 275
	11		W0578	201Z			21-31-11	ALL
	12		W0578	201R	24		21-31-11	ALL
	13		W0578	201B	24		21-31-11	ALL
	14		W0578	019	22		21-44-11	ALL

HOOKUP LIST
D280T132

91-21-51
Section D04900
Page 21
Feb 06/2009



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04918P		AE0209/ /		PLUG-P36 (continued)				ALL
	15		W0578	020	24		21-44-11	ALL
	16		W0578	021	24		21-44-11	ALL
	17		W0578	022	24		21-44-11	ALL
	18		W0578	031	24		21-26-11	ALL
	19		W0578	039	20		21-31-11	ALL
	20		W0578	202B	20		21-31-11	ALL
	21		W0578	202R	20		21-31-11	ALL
	22		W0578	014	24		21-53-11	ALL
	23		W0578	043	22		21-44-21	ALL
	24		W0578	044	22		21-44-21	ALL
	25		W0578	045	22		21-44-21	ALL
	26		W0578	016	24		21-53-11	ALL
	27		W0578	008	24		21-43-11	ALL
	28	UNUSED						ALL
	29		W0578	011	24		21-43-11	ALL
	30		W0578	071	22		SPARE	ALL
	31		W0578	801	22		SPARE	ALL
	32		W0578	018	24		21-53-11	ALL
	DED		W0578	031Z			21-26-11	ALL
D04919J		132/189/R022		RCPT-PRESS BLKHD				ALL
	1		W0803	007	22		34-43-22	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13		W0803	203R	22		34-43-22	ALL
	14		W0803	203B	22		34-43-22	ALL
	15		W0803	205R	22		34-43-22	ALL
	16		W0803	205B	22		34-43-22	ALL
	17		W0803	201R	22		34-43-22	ALL
	18		W0803	201B	22		34-43-22	ALL
	19		W0803	202R	22		34-43-22	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04900

Page 22

Feb 06/2009



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04919J		132/189/R022		RCPT-PRESS BLKHD (continued)				ALL
	20		W0803	202B	22		34-43-22	ALL
	21	UNUSED						ALL
	22		W0803	006	20		34-43-22	ALL
	23	UNUSED						ALL
	24		W0803	004	20		34-43-22	ALL
	25		W0803	005	20		34-43-22	ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38		W0803	302Y	22		34-43-22	ALL
	39		W0803	302B	22		34-43-22	ALL
	40		W0803	302R	22		34-43-22	ALL
	41		W0803	303R	22		34-43-22	ALL
	42		W0803	303B	22		34-43-22	ALL
	43		W0803	303Y	22		34-43-22	ALL
	44		W0803	204R	22		34-43-22	ALL
	45		W0803	204B	22		34-43-22	ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52		W0803	301R	22		34-43-22	ALL
	53		W0803	301B	22		34-43-22	ALL
	54		W0803	301Y	22		34-43-22	ALL
	55	UNUSED						ALL
	DED		W0803	201Z			34-43-22	ALL
	DED		W0803	202Z			34-43-22	ALL
	DED		W0803	203Z			34-43-22	ALL
	DED		W0803	204Z			34-43-22	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04900

Page 23

Feb 06/2009



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04919J		132/189/R022		RCPT-PRESS BLKHD (continued)				ALL
	DED		W0803	205Z			34-43-22	ALL
	DED		W0803	301Z			34-43-22	ALL
	DED		W0803	302Z			34-43-22	ALL
	DED		W0803	303Z			34-43-22	ALL
D04919P		132/189/R022		PLUG-PRESS. BLKHD				ALL
	1		W0805	007	20		34-43-22	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13		W0805	203R	20		34-43-22	ALL
	14		W0805	203B	20		34-43-22	ALL
	15		W0805	205R	20		34-43-22	ALL
	16		W0805	205B	20		34-43-22	ALL
	17		W0805	201R	20		34-43-22	ALL
	18		W0805	201B	20		34-43-22	ALL
	19		W0805	202R	20		34-43-22	ALL
	20		W0805	202B	20		34-43-22	ALL
	21	UNUSED						ALL
	22		W0805	006	20		34-43-22	ALL
	23	UNUSED						ALL
	24		W0805	004	20		34-43-22	ALL
	25		W0805	005	20		34-43-22	ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D04900

Page 24

Feb 06/2009



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04919P		132/189/R022		PLUG-PRESS. BLKHD (continued)				ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38		W0805	302Y	20		34-43-22	ALL
	39		W0805	302B	20		34-43-22	ALL
	40		W0805	302R	20		34-43-22	ALL
	41		W0805	303R	20		34-43-22	ALL
	42		W0805	303B	20		34-43-22	ALL
	43		W0805	303Y	20		34-43-22	ALL
	44		W0805	204R	20		34-43-22	ALL
	45		W0805	204B	20		34-43-22	ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52		W0805	301R	20		34-43-22	ALL
	53		W0805	301B	20		34-43-22	ALL
	54		W0805	301Y	20		34-43-22	ALL
	55	UNUSED						ALL
	DED		W0805	201Z			34-43-22	ALL
	DED		W0805	202Z			34-43-22	ALL
	DED		W0805	203Z			34-43-22	ALL
	DED		W0805	204Z			34-43-22	ALL
	DED		W0805	205Z			34-43-22	ALL
	DED		W0805	301Z			34-43-22	ALL
	DED		W0805	302Z			34-43-22	ALL
	DED		W0805	303Z			34-43-22	ALL
	REF		W0805	YAA			34-43-22	ALL
D04920J		AE0209/ /		RCPT-P36				ALL
	1		W0182	039	18		21-25-11	ALL
	2		W0182	071	12		21-25-11	ALL
	3		W0182	072	12		21-25-11	ALL
	4		W0182	037	12		21-25-11	ALL
	5		W0182	144	12		28-22-12	ALL
	6		W0182	145	12		28-22-12	ALL
	7		W0182	146	12		28-22-12	ALL
	8		W0182	040	14		21-26-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04900

Page 25

Feb 06/2009



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04920J		AE0209/ /		RCPT-P36 (continued)				ALL
	9		W0182	074	14		21-26-11	ALL
	10		W0182	075	14		21-26-11	ALL
	11		W0182	098	18		33-31-21	ALL
	12	UNUSED						ALL
D04920P		AE0209/ /		PLUG-P36				ALL
	1		W0578	005	18		21-25-11	ALL
	2		W0578	002	12		21-25-11	ALL
	3		W0578	003	12		21-25-11	ALL
	4		W0578	004	12		21-25-11	ALL
	5	EN	W0578	081	10		28-22-12	ALL
	6	EN	W0578	082	10		28-22-12	ALL
	7	EN	W0578	083	10		28-22-12	ALL
	8		W0578	028	14		21-26-11	ALL
	9		W0578	029	14		21-26-11	ALL
	10		W0578	030	14		21-26-11	ALL
	11		W0578	026	18		33-31-21	ALL
	12		W0578	072	18		SPARE	ALL
D04922J		AE0218/ /		RCPT-P37				ALL
	1		W1118	127	24		21-51-21	ALL
	2		W1118	128	24		21-51-21	ALL
	3		W1118	129	24		21-51-21	ALL
	4		W1118	126	20		36-11-41	ALL
	5		W1118	053	24		21-25-21	ALL
	6	UNUSED						050-099
	6		W1118	151	24		21-51-21	150-199, 275-299
	7		W1118	12F	24		21-43-11	ALL
	8		W1118	12G	24		21-43-11	ALL
	9		W1118	12B	24		21-43-11	ALL
	10		W1118	12H	24		21-43-11	ALL
	11		W1118	70B	24		21-26-21	050-099, 155-199, 276-299
	11		W1118	157	24		21-26-21	150-154, 275
	12		W1118	203B	24		21-51-21	ALL
	13		W1118	203R	24		21-51-21	ALL
	14		W1118	056	12		21-25-21	ALL
	15		W1118	080	22		21-44-21	ALL
	16		W1118	054	12		21-25-21	ALL
	17		W1118	130	24		21-51-21	ALL
	18		W1118	055	12		21-25-21	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04900

Page 26

Feb 06/2009



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04922J		AE0218/ /		RCPT-P37 (continued)				ALL
	19		W1118	075	22		21-26-21	ALL
	20		W1118	180	16		28-22-11	ALL
	21		W1118	076	22		21-26-21	ALL
	22		W1118	181	16		28-22-11	ALL
	23		W1118	156	22		21-26-21	ALL
	24		W1118	182	16		28-22-11	ALL
	25		W1118	079	22		21-44-21	ALL
	DED		W1118	203Z			21-51-21	ALL
D04922P		AE0218/ /		PLUG-P37				ALL
	1		W0580	121	24		21-51-21	ALL
	2		W0580	122	24		21-51-21	ALL
	3		W0580	123	24		21-51-21	ALL
	4		W0580	111	20		36-11-41	ALL
	5	DL	W0580	005	18		21-25-21	ALL
	6		W0580	020	24		SPARE	050-099
	6		W0580	020	24		21-51-21	150-199, 275-299
	7		W0580	023	24		21-43-11	ALL
	8		W0580	024	24		21-43-11	ALL
	9		W0580	025	24		21-43-11	ALL
	10		W0580	026	24		21-43-11	ALL
	11		W0580	132	24		21-26-21	ALL
	12		W0580	201B	24		21-51-21	ALL
	13		W0580	201R	24		21-51-21	ALL
	14		W0580	004	12		21-25-21	ALL
	15		W0580	116	22		21-44-21	ALL
	16		W0580	002	12		21-25-21	ALL
	17		W0580	124	24		21-51-21	ALL
	18		W0580	003	12		21-25-21	ALL
	19		W0580	112	22		21-26-21	ALL
	20		W0580	138	14		28-22-11	ALL
	21		W0580	113	22		21-26-21	ALL
	22		W0580	139	14		28-22-11	ALL
	23		W0580	114	22		21-26-21	ALL
	24		W0580	140	14		28-22-11	ALL
	25		W0580	115	22		21-44-21	ALL
	DED		W0580	023Z			21-43-11	050-099
	DED		W0580	024Z			21-43-11	050-099
	DED		W0580	121Z			21-51-21	ALL
	DED		W0580	122Z			21-51-21	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04900

Page 27

Feb 06/2009



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04922P		AE0218/ /		PLUG-P37 (continued)				ALL
	DED		W0580	123Z			21-51-21	ALL
	DED		W0580	124Z			21-51-21	ALL
	DED		W0580	201Z			21-51-21	ALL
D04923J		AE0305/ /		RCPT-E1-2				ALL
	1		W1603	001	24		34-22-37	050-099
	1		W1603	001	24		SPARE	150-199, 275-299
	2		W1603	002	24		34-22-37	ALL
	3		W1603	003	24		34-22-37	ALL
	4		W1603	004	24		34-22-37	ALL
	5		W1603	005	24		SPARE	ALL
	6		W1603	201R	24		34-22-39	ALL
	7		W1603	201B	24		34-22-39	ALL
	8		W1603	201Z			34-22-39	ALL
	9		W1603	202R	24		34-22-39	ALL
	10		W1603	202B	24		34-22-39	ALL
	11		W1603	202Z			34-22-39	ALL
	12		W1603	038	24		34-61-25	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15		W1603	204R	24		34-22-35	ALL
	16		W1603	204B	24		34-22-35	ALL
	17		W1603	204Z			34-22-35	ALL
	18		W1603	205W	24		34-43-11	ALL
	19		W1603	205WB	24		34-43-11	ALL
	20		W1603	205Z			34-43-11	ALL
	21		W1603	006	24		31-31-13	ALL
	22		W1603	007	24		SPARE	050-099, 150-199 275-299
	22	UNUSED						
	23		W1603	008	24		31-31-13	ALL
	24		W1603	009	24		31-31-13	ALL
	25		W1603	010	24		31-31-13	ALL
	26		W1603	011	24		31-31-13	ALL
	27		W1603	012	24		31-31-13	ALL
	28		W1603	013	24		31-31-13	ALL
	29		W1603	014	24		31-31-13	ALL
	30		W1603	214R	24		34-22-13	ALL
	31		W1603	214B	24		34-22-13	ALL
	32		W1603	214Z			34-22-13	ALL
	33		W1603	215R	24		34-22-13	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04900

Page 28

Feb 06/2009



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04923J		AE0305/ /		RCPT-E1-2 (continued)				ALL
	34		W1603	215B	24		34-22-13	ALL
	35		W1603	215Z			34-22-13	ALL
	36	UNUSED						ALL
	37		W1603	218R	24		34-61-24	ALL
	38		W1603	218B	24		34-61-24	ALL
	39		W1603	021	22		SPARE	ALL
	40		W1603	218Z			34-61-24	ALL
	41		W1603	020	22		SPARE	ALL
	42	UNUSED						050-099
	42		W1603	030	22		SPARE	150-199, 275-299
	43		W1603	043	24		31-31-19	ALL
	44		W1603	209R	24		34-22-13	ALL
	45		W1603	209B	24		34-22-13	ALL
	46		W1603	209Z			34-22-13	ALL
	47		W1603	217Z			31-31-20	ALL
	48		W1603	034	24		31-31-21	ALL
	49		W1603	035	24		31-31-21	ALL
	50		W1603	023	24		22-41-11	ALL
	51		W1603	210R	24		22-41-12	ALL
	52		W1603	210B	24		22-41-12	ALL
	53		W1603	210Z			22-41-12	ALL
	54		W1603	217B	24		31-31-20	ALL
	55		W1603	217R	24		31-31-20	ALL
D04923P		AE0305/ /		PLUG-				ALL
	1		W1103	035	24		34-22-37	ALL
	2		W1103	036	24		34-22-37	ALL
	3		W1103	037	24		34-22-37	ALL
	4		W1103	038	24		34-22-37	ALL
	5	UNUSED						ALL
	6		W1103	257R	24		34-22-39	ALL
	7		W1103	257B	24		34-22-39	ALL
	8		W1103	257Z			34-22-39	ALL
	9		W1103	258R	24		34-22-39	ALL
	10		W1103	258B	24		34-22-39	ALL
	11		W1103	258Z			34-22-39	ALL
	12		W1103	151	24		34-61-25	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15		W1103	256R	24		34-22-35	ALL

HOOKUP LIST
D280T132

91-21-51
Section D04900
Page 29
Feb 06/2009



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04923P		AE0305/ /		PLUG- (continued)				ALL
	16		W1103	256B	24		34-22-35	ALL
	17		W1103	256Z			34-22-35	ALL
	18		W1103	251W	24		34-43-11	ALL
	19		W1103	251WB	24		34-43-11	ALL
	20		W1103	251Z			34-43-11	ALL
	21		W1103	040	24		31-31-13	ALL
	22	UNUSED						ALL
	23		W1103	043	24		31-31-13	ALL
	24		W1103	044	24		31-31-13	ALL
	25		W1103	045	24		31-31-13	ALL
	26		W1103	046	24		31-31-13	ALL
	27		W1103	047	24		31-31-13	ALL
	28		W1103	048	24		31-31-13	ALL
	29		W1103	049	24		31-31-13	ALL
	30		W1103	268R	24		34-22-13	ALL
	31		W1103	268B	24		34-22-13	ALL
	32		W1103	268Z			34-22-13	ALL
	33		W1103	269R	24		34-22-13	ALL
	34		W1103	269B	24		34-22-13	ALL
	35		W1103	269Z			34-22-13	ALL
	36	UNUSED						ALL
	37		W1103	274R	24		34-61-24	ALL
	38		W1103	274B	24		34-61-24	ALL
	39	UNUSED						ALL
	40		W1103	274Z			34-61-24	ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43		W1103	082	24		31-31-19	ALL
	44		W1103	270R	24		34-22-13	ALL
	45		W1103	270B	24		34-22-13	ALL
	46		W1103	270Z			34-22-13	ALL
	47		W1103	273Z			31-31-20	ALL
	48		W1103	053	24		31-31-21	ALL
	49		W1103	054	24		31-31-21	ALL
	50		W1103	067	24		22-41-11	ALL
	51		W1103	287R	24		22-41-12	ALL
	52		W1103	287B	24		22-41-12	ALL
	53		W1103	287Z			22-41-12	ALL
	54		W1103	273B	24		31-31-20	ALL
	55		W1103	273R	24		31-31-20	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04900

Page 30

Feb 06/2009



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04924J		AE0218/ /		RCPT-P37				ALL
	1		W1118	172	24		21-53-21	ALL
	2		W1118	173	24		21-53-21	ALL
	3		W1118	174	24		21-53-21	ALL
	4		W1118	175	24		21-53-21	ALL
	5		W1118	170	24		21-53-21	ALL
	6		W1118	171	24		21-53-21	ALL
	7		W1118	057	24		21-43-11	ALL
	8		W1118	059	24		21-43-11	ALL
	9		W1118	12A	24		21-43-11	ALL
	10		W1118	049	24		21-44-11	ALL
	11		W1118	081	22		21-44-11	ALL
	12		W1118	051	24		21-44-11	ALL
	13		W1118	166	24		21-44-11	ALL
	14		W1118	183	12		28-22-12	ALL
	15	UNUSED						050-099, 155-199, 277-299
	15		W1118	516	20		25-33-11	150-154, 275-276
	16		W1118	184	12		28-22-12	ALL
	17	UNUSED						050-099, 155-199, 277-299
	17		W1118	530	20		25-33-11	150-154
	17		W1118	537	20		25-33-11	275-276
	18		W1118	185	12		28-22-12	ALL
	19		W1118	137	24		21-26-11	ALL
	20		W1118	135	14		21-26-11	ALL
	21		W1118	12D	24		21-43-11	ALL
	22		W1118	136	14		21-26-11	ALL
	23		W1118	550	24		21-43-11	ALL
	24		W1118	134	14		21-26-11	ALL
	25	UNUSED						ALL
D04924P		AE0218/ /		PLUG-P37				ALL
	1		W0580	008	24		21-53-21	ALL
	2		W0580	009	24		21-53-21	ALL
	3		W0580	010	24		21-53-21	ALL
	4		W0580	011	24		21-53-21	ALL
	5		W0580	012	24		21-53-21	ALL
	6		W0580	013	24		21-53-21	ALL
	7		W0580	033	24		21-43-11	ALL
	8		W0580	034	24		21-43-11	ALL
	9		W0580	035	20		21-43-11	ALL
	10		W0580	086	24		21-44-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04900

Page 31

Feb 06/2009



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04924P		AE0218/ /		PLUG-P37 (continued)				ALL
	11		W0580	087	22		21-44-11	ALL
	12		W0580	088	24		21-44-11	ALL
	13		W0580	107	24		21-44-11	ALL
	14	EN	W0580	141	10		28-22-12	ALL
	15	UNUSED						050-099, 155-199, 277-299
	15		W0580	144	20		25-33-11	150-154, 275-276
	16	EN	W0580	142	10		28-22-12	ALL
	17	UNUSED						050-099, 155-199, 277-299
	17		W0580	145	20		25-33-11	150-154, 275-276
	18	EN	W0580	143	10		28-22-12	ALL
	19		W0580	103	24		21-26-11	ALL
	20		W0580	097	14		21-26-11	ALL
	21		W0580	029	24		21-43-11	ALL
	22		W0580	098	14		21-26-11	ALL
	23		W0580	038	24		21-43-11	ALL
	24		W0580	099	14		21-26-11	ALL
	25	UNUSED						ALL
D04926J		AE0204/ /		RCPT-P34				ALL
	1	FM	W0054	008	16		25-53-11	ALL
	2		W0054	054	24		52-34-12	ALL
	3		W0054	055	24		52-34-12	ALL
	4		W0054	056	24		52-35-12	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	DK	W0054	010	18		33-37-11	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15		W0054	048	20		52-34-11	ALL
	16		W0054	049	20		52-34-11	ALL
	17		W0054	050	20		52-34-11	ALL
	18		W0054	051	20		52-35-11	ALL
	19		W0054	052	20		52-35-11	ALL
	20		W0054	053	20		52-35-11	ALL
	21	FM	W0054	009	16		25-53-21	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04900

Page 32

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04926J		AE0204/ /		RCPT-P34 (continued)				ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	DK	W0054	041	18		33-37-11	ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	FM	W0054	011	16		33-37-21	ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
D04926P		AE0204/ /		PLUG-P34				ALL
	1	FL	W0616	001	16		25-53-11	ALL
	2		W0616	038	24		52-34-12	ALL
	3		W0616	003	24		52-34-12	ALL
	4		W0616	013	24		52-35-12	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W0616	100	20		SPARE	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	DL	W0616	044	18		33-37-11	050-099
	10	FL	W0616	044	16		33-37-11	150-199, 275-299
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15		W0616	031	20		52-34-11	ALL
	16		W0616	032	20		52-34-11	ALL
	17		W0616	033	20		52-34-11	ALL
	18		W0616	034	20		52-35-11	ALL
	19		W0616	035	20		52-35-11	ALL
	20		W0616	036	20		52-35-11	ALL
	21	FL	W0616	011	16		25-53-21	ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	DL	W0616	045	18		33-37-11	050-099
	24	FL	W0616	045	16		33-37-11	150-199, 275-299
	25	UNUSED						ALL
	26	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D04900
Page 33
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04926P		AE0204/ /		PLUG-P34 (continued)				ALL
	27	FL	W0616	053	16		33-37-21	ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
D04927J		AE0307/ /		RCPT-E2-5				ALL
	1		W0843	401R	24		23-42-11	ALL
	2		W0843	401Z			23-42-11	ALL
	3		W0843	401B	24		23-42-11	ALL
	4		W0843	004	18		23-12-11	ALL
	5		W0843	401G	24		23-42-11	ALL
	6		W0843	201R	24		23-12-11	ALL
	7		W0843	201B	24		23-12-11	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10		W0843	201Z			23-12-11	ALL
	11		W0843	401Y	24		23-42-11	ALL
	12	UNUSED						ALL
D04927P		AE0307/ /		PLUG-E2-5				ALL
	1		W0139	401R	24		23-42-11	ALL
	2		W0139	401Z			23-42-11	ALL
	3		W0139	401B	24		23-42-11	ALL
	4		W0139	002	18		23-12-11	ALL
	5		W0139	401G	24		23-42-11	ALL
	6		W0139	201R	24		23-12-11	ALL
	7		W0139	201B	24		23-12-11	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10		W0139	201Z			23-12-11	ALL
	11		W0139	401Y	24		23-42-11	ALL
	12	UNUSED						ALL
D04928J		AE0203/ /		RCPT-P33				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D04900

Page 34

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04928J		AE0203/ /		RCPT-P33 (continued)				ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14		W0142	788	18		25-29-11	ALL
	15	UNUSED						ALL
	16		W0142	789	18		25-29-11	ALL
	17	UNUSED						ALL
	18		W0142	028	18		25-29-11	ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
D04928P		AE0203/ /		PLUG-P33				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14		W0616	024	18		25-29-11	ALL
	15	UNUSED						ALL
	16		W0616	026	18		25-29-11	ALL
	17	UNUSED						ALL
	18		W0616	029	18		25-29-11	ALL

HOOKUP LIST
D280T132

91-21-51
Section D04900
Page 35
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04928P		AE0203/ /		PLUG-P33 (continued)				ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23		W0616	100	20		SPARE	ALL
	24	UNUSED						ALL
	25		W0616	801	20		SPARE	ALL
D04929J		AE0322/ /		RCPT-E2-5				ALL
	1		W0845	201R	24		23-12-21	ALL
	2		W0845	201B	24		23-12-21	ALL
	3		W0845	201Z			23-12-21	ALL
	4		W0845	004	18		23-12-21	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8		W0845	006	24		23-51-11	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12		W0845	005	24		23-51-11	ALL
D04929P		AE0322/ /		PLUG-E2-5				ALL
	1		W0139	202R	24		23-12-21	ALL
	2		W0139	202B	24		23-12-21	ALL
	3		W0139	202Z			23-12-21	ALL
	4		W0139	008	18		23-12-21	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8		W0139	660	24		23-51-11	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12		W0139	554	24		23-51-11	ALL
D04930J		AE0305/ /		RCPT-E1-1				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D04900
Page 36
Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04930J		AE0305/ /		RCPT-E1-1 (continued)				ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						050-099
	7		W0602	008	20		SPARE	150-199, 275-299
	8		W0602	009	20		SPARE	ALL
	9		W0602	010	20		SPARE	ALL
	10	UNUSED						ALL
	11		W0602	011	24		32-42-11	ALL
	12		W0602	012	22		32-42-11	ALL
	13		W0602	208R	20		32-42-11	ALL
	14		W0602	014	22		32-42-11	ALL
	15		W0602	141	24		32-42-11	ALL
	16		W0602	016	22		32-42-11	ALL
	17		W0602	208B	20		32-42-11	ALL
	18		W0602	209R	20		32-42-11	ALL
	19		W0602	209B	20		32-42-11	ALL
	20		W0602	208Z			32-42-11	ALL
	21		W0602	209Z			32-42-11	ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	DED		W0602	141Z			32-42-11	ALL
D04930P		AE0305/ /		PLUG-E1-1				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11		W1084	005	24		32-42-11	ALL
	12		W1084	007	24		32-42-11	ALL
	13		W1084	201R	22		32-42-11	ALL
	14		W1084	008	24		32-42-11	ALL
	15		W1084	006	24		32-42-11	ALL

HOOKUP LIST
D280T132

91-21-51
Section D04900
Page 37
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04930P		AE0305/ /		PLUG-E1-1 (continued)				ALL
	16		W1084	009	24		32-42-11	ALL
	17		W1084	201B	22		32-42-11	ALL
	18		W1084	202R	22		32-42-11	ALL
	19		W1084	202B	22		32-42-11	ALL
	20		W1084	201Z			32-42-11	ALL
	21		W1084	202Z			32-42-11	ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	DED		W1084	006Z			32-42-11	ALL
D04931J		AE0306/ /		RCPT-E2-5				ALL
	1		W0847	214R	24		23-22-12	ALL
	2		W0847	214B	24		23-22-12	ALL
	3		W0847	214Z			23-22-12	ALL
	4		W0847	004	18		23-12-31	ALL
	5	UNUSED						050-099, 151, 275-299
	5		W0851	904	22		23-22-12	150, 152-199
	6		W0847	201R	24		23-12-31	ALL
	7		W0847	201B	24		23-12-31	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10		W0847	201Z			23-12-31	ALL
	11	UNUSED						050-099, 151, 275-299
	11		W0851	905	20		23-22-12	150, 152-199
	12	UNUSED						050-099, 151, 275-299
	12		W0851	903	22		23-22-12	150, 152-199
	CAP	Y	W0847	003	24		23-22-12	167-199
	CAP	Y	W0847	005	24		23-22-12	167-199
	DED		W0851	905Z			23-22-12	150, 152-199
D04931P		AE0306/ /		PLUG E2-5				050-099
D04931P		AE0306/ /		PLUG-E2-5				150-199, 275-299
	1		W0139	214R	24		23-22-12	ALL
	2		W0139	214B	24		23-22-12	ALL
	3		W0139	214Z			23-22-12	ALL
	4		W0139	105	18		23-12-31	ALL
	5	UNUSED						050-099, 151, 275-299
	5		W0139	903	22		23-22-12	150, 152-166
	5		W0139	671	24		23-22-12	167-199

HOOKUP LIST

D280T132

91-21-51

Section D04900

Page 38

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04931P		AE0306/ /		PLUG E2-5 (continued)				050-099
D04931P		AE0306/ /		PLUG-E2-5 (continued)				150-199, 275-299
	6		W0139	242R	24		23-12-31	ALL
	7		W0139	242B	24		23-12-31	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10		W0139	242Z			23-12-31	ALL
	11	UNUSED						050-099, 151, 275-299
	11		W0139	902	20		23-22-12	150, 152-199
	12	UNUSED						050-099, 151, 275-299
	12		W0139	904	22		23-22-12	150, 152-166
	12		W0139	012	24		23-22-12	167-199
	DED		W0139	902Z			23-22-12	150, 152-199
D04932J		AE0209/ /		RCPT-				ALL
	1		W0176	535	24		36-11-51	ALL
	2		W0176	884	22		28-42-11	ALL
	3		W0176	137R	22		26-18-31	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11		W0176	869R	22		26-17-11	ALL
	12		W0176	686	20		33-42-21	050-099
	12	DL	W0176	686	18		33-42-21	150-199, 275-278
	12	DK	W0176	686	18		33-42-21	280-299
	13		W0176	554	24		21-51-11	ALL
	14		W0176	555	24		21-51-11	ALL
	15	UNUSED						050-099
	15	FM	W0176	093	16		33-42-11	150-199, 275-299
	16		W0176	556	24		21-51-11	ALL
	17		W0176	557	24		21-51-11	050-099
	17		W0176	152	24		21-51-11	150-199, 275-299
	18		W0176	03K	22		29-32-11	ALL
	19		W0176	036	24		36-11-31	ALL
	20		W0176	028	24		36-11-31	ALL
	21		W0176	026	24		36-11-31	ALL
	22		W0176	537	24		36-11-51	ALL

HOOKUP LIST
D280T132

91-21-51
Section D04900
Page 39
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04932J		AE0209/ /		RCPT- (continued)				ALL
	23	UNUSED						ALL
	24		W0176	009	24		29-31-11	ALL
	25		W0176	219R	24		29-31-11	ALL
	26		W0176	219B	24		29-31-11	ALL
	27		W0176	006	24		29-32-11	ALL
	28		W0176	695	24		28-42-31	ALL
	29		W0176	025	24		36-11-31	ALL
	30		W0176	796	24		29-32-11	ALL
	31		W0176	024R	22		26-18-11	ALL
	32	UNUSED						050-099
	32		W0176	157	24		21-51-11	150-199, 275-299
	33		W0176	806R	22		26-18-12	ALL
	34		W0176	807R	22		26-18-12	ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41		W0176	218R	20		36-22-21	ALL
	42		W0176	218B	20		36-22-21	ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	DK	W0176	093	18		33-42-11	050-099
	51	UNUSED						150-199, 275-299
	52		W0176	094	20		33-42-11	050-099
	52	FM	W0176	094	16		33-42-11	150-199, 275-299
	53		W0176	538	24		36-11-51	ALL
	54		W0176	71L	20		36-11-51	ALL
	55	UNUSED						ALL
	56		W0176	71K	20		36-11-51	ALL
	57		W0176	541	24		36-11-51	ALL
	DED		W0176	884Z			28-42-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04900

Page 40

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04932P		AE0209/ /		PLUG-P36				ALL
	1		W0602	084	24		36-11-51	ALL
	2		W0602	114	22		28-42-11	ALL
	3		W0602	003R	22		26-18-31	ALL
	4	UNUSED						ALL
	5	UNUSED						050-099
	5		W0602	005	22		SPARE	150-199, 275-299
	6	UNUSED						050-099
	6		W0602	006	22		SPARE	150-199, 275-299
	7	UNUSED						050-099
	7		W0602	007	22		SPARE	150-199, 275-299
	8	UNUSED						050-099
	8		W0602	019	20		SPARE	150-199, 275-299
	9	UNUSED						050-099
	9		W0602	020	20		SPARE	150-199, 275-299
	10		W0602	021	20		SPARE	ALL
	11		W0602	018R	22		26-17-11	ALL
	12		W0602	022	20		33-42-21	050-099
	12	DL	W0602	022	18		33-42-21	150-199, 275-299
	13		W0602	024	24		21-51-11	ALL
	14		W0602	025	24		21-51-11	ALL
	15	UNUSED						050-099
	15	FL	W0602	079	16		33-42-11	150-199, 275-299
	16		W0602	026	24		21-51-11	ALL
	17		W0602	027	24		21-51-11	ALL
	18		W0602	135	22		29-32-11	ALL
	19		W0602	120	24		36-11-31	ALL
	20		W0602	121	24		36-11-31	ALL
	21		W0602	122	24		36-11-31	ALL
	22		W0602	086	24		36-11-51	ALL
	23	UNUSED						ALL
	24		W0602	035	22		29-31-11	ALL
	25		W0602	211R	22		29-31-11	ALL
	26		W0602	211B	22		29-31-11	ALL
	27		W0602	038	24		29-32-11	ALL
	28		W0602	115	22		28-42-31	ALL
	29		W0602	123	24		36-11-31	ALL
	30		W0602	048	24		29-32-11	ALL
	31		W0602	004R	22		26-18-11	ALL
	32		W0602	030	24		SPARE	050-099
	32		W0602	030	24		21-51-11	150-199, 275-299

HOOKUP LIST

D280T132

91-21-51

Section D04900

Page 41

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04932P		AE0209/ /		PLUG-P36 (continued)				ALL
	33		W0602	408R	22		26-18-12	ALL
	34		W0602	407R	22		26-18-12	ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40		W0602	085	18		SPARE	ALL
	41		W0602	210R	20		36-22-21	ALL
	42		W0602	210B	20		36-22-21	ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	DL	W0602	079	18		33-42-11	050-099
	51	UNUSED						150-199, 275-299
	52		W0602	080	20		33-42-11	050-099
	52	FL	W0602	080	16		33-42-11	150-199, 275-299
	53		W0602	088	24		36-11-51	ALL
	54	DL	W0602	089	18		36-11-51	ALL
	55	UNUSED						ALL
	56		W0602	090	18		36-11-51	ALL
	57		W0602	091	24		36-11-51	ALL
	DED		W0602	122Z			36-11-31	ALL
	DED		W0602	123Z			36-11-31	ALL
D04934J		AE0218/ /		RCPT-P37				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W0188	016	22		29-11-31	ALL
	4		W0188	206B	22		21-51-23	ALL
	5		W0188	019	24		29-11-22	ALL
	6		W0188	021	22		29-11-22	ALL
	7		W0188	036	24		29-11-22	ALL
	8		W0188	037	22		29-11-22	ALL
	9		W0188	133	24		27-51-61	050-099

HOOKUP LIST

D280T132

91-21-51

Section D04900

Page 42

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04934J		AE0218/ /		RCPT-P37 (continued)				ALL
	9	UNUSED						150-199, 275-299
	10		W0188	025	24		21-53-22	ALL
	11		W0188	026	24		21-53-22	ALL
	12		W0188	023	24		21-53-22	ALL
	13		W0188	024	24		21-53-22	ALL
	14		W0188	027	24		21-53-22	ALL
	15		W0188	100R	22		26-18-21	ALL
	16		W0188	028	24		21-53-22	ALL
	17		W0188	203R	24		21-51-12	ALL
	18		W0188	203B	24		21-51-12	ALL
	19	UNUSED						ALL
	20		W0188	206R	22		21-51-23	ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23		W0188	207B	22		21-51-23	ALL
	24		W0188	207R	22		21-51-23	ALL
	25		W0188	131	24		27-51-61	ALL
	26		W0188	112	22		78-36-11	ALL
	27		W0192	5A1	24		27-89-11	050-099, 151
	27	UNUSED						150, 152-199, 275-299
	28		W0192	5A4	24		27-89-11	ALL
	29		W0192	5A5	24		27-89-11	ALL
	30		W0192	5A6	24		27-89-11	ALL
	31		W0188	132	24		27-51-61	ALL
	CAP	Y	W0192	5A1	24		27-89-11	150, 152-199, 275-299
	DED		W0188	016Z			29-11-31	ALL
D04934P		AE0218/ /		PLUG-P37				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W0588	003	22		29-11-31	ALL
	4		W0588	211B	22		21-51-23	ALL
	5		W0588	004	24		29-11-22	ALL
	6		W0588	006	22		29-11-22	ALL
	7		W0588	007	24		29-11-22	ALL
	8		W0588	008	22		29-11-22	ALL
	9		W0588	034	24		27-51-61	050-099
	9	UNUSED						150-199, 275-299
	10		W0588	021	24		21-53-22	ALL
	11		W0588	022	24		21-53-22	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04900

Page 43

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04934P		AE0218/ /		PLUG-P37 (continued)				ALL
	12		W0588	023	24		21-53-22	ALL
	13		W0588	024	24		21-53-22	ALL
	14		W0588	025	24		21-53-22	ALL
	15		W0588	040R	22		26-18-21	ALL
	16		W0588	026	24		21-53-22	ALL
	17		W0588	239R	24		21-51-12	ALL
	18		W0588	239B	24		21-51-12	ALL
	19	UNUSED						ALL
	20		W0588	211R	22		21-51-23	ALL
	21		W0588	035	22		SPARE	ALL
	22	UNUSED						ALL
	23		W0588	212B	22		21-51-23	ALL
	24		W0588	212R	22		21-51-23	ALL
	25		W0588	032	24		27-51-61	ALL
	26		W0588	049	22		78-36-11	ALL
	27		W0588	057	22		27-89-11	ALL
	28		W0588	058	22		27-89-11	ALL
	29		W0588	059	22		27-89-11	ALL
	30		W0588	060	22		27-89-11	ALL
	31		W0588	033	24		27-51-61	ALL
	DED		W0588	003Z			29-11-31	ALL
D04936J		AE0305/ /		RCPT-				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W0588	206Z			32-42-11	ALL
	7		W0588	206R	20		32-42-11	ALL
	8		W0588	206B	20		32-42-11	ALL
	9		W0588	207R	20		32-42-11	ALL
	10		W0588	207B	20		32-42-11	ALL
	11		W0588	207Z			32-42-11	ALL
	12		W0588	036	20		SPARE	ALL
D04936P		AE0305/ /		PLUG-E1-1				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D04900

Page 44

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04936P		AE0305/ /		PLUG-E1-1 (continued)				ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W1084	207Z			32-42-11	ALL
	7		W1084	207R	22		32-42-11	ALL
	8		W1084	207B	22		32-42-11	ALL
	9		W1084	208R	22		32-42-11	ALL
	10		W1084	208B	22		32-42-11	ALL
	11		W1084	208Z			32-42-11	ALL
	12	UNUSED						ALL
D04938J		AF0204/ /		RCPT-P61				ALL
	1		W0070	781R	22		26-11-11	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W0070	769R	22		26-11-12	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13		W0070	04H	22		29-32-11	ALL
	14		W0070	008	22		29-11-32	ALL
	15		W0070	11W	12		34-21-31	ALL
	16		W0070	09K	24		73-21-18	ALL
	17		W0070	09L	24		73-21-18	ALL
	18		W0070	11D	24		80-11-21	ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22		W0070	11G	24		80-11-21	ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28		W0070	04W	22		32-42-11	ALL
	DED		W0070	09KZ			73-21-18	ALL

HOOKUP LIST
D280T132

91-21-51
Section D04900
Page 45
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04938J		AF0204/ /		RCPT-P61 (continued)				ALL
	DED		W0070	09LZ			73-21-18	ALL
D04938P		AF0204/ /		PLUG-P61				ALL
	1		W0596	041R	22		26-11-11	ALL
	2	UNUSED						ALL
	3		W0596	043	22		SPARE	050-099, 150-156, 162-166, 275-276
	3	UNUSED						157, 167-199, 277-299
	4		W0596	044	22		SPARE	ALL
	5	UNUSED						ALL
	6		W0596	051R	22		26-11-12	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11		W0596	119	20		SPARE	ALL
	12		W0596	120	20		SPARE	ALL
	13		W0596	131	22		29-32-11	ALL
	14		W0596	097	22		29-11-32	ALL
	15		W0596	089	12		34-21-31	ALL
	16		W0596	063	24		73-21-18	ALL
	17		W0596	064	24		73-21-18	ALL
	18		W0596	188	24		80-11-21	ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22		W0596	189	24		80-11-21	ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26		W0596	506	22		SPARE	050-099
	26	UNUSED						150-199, 275-299
	27	UNUSED						ALL
	28		W0596	504	22		32-42-11	ALL
D04940J		AF0204/ /		RCPT-P61				ALL
	1		W0070	771R	22		26-11-21	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D04900

Page 46

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04940J		AF0204/ /		RCPT-P61 (continued)				ALL
	6		W0070	779R	22		26-11-22	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11		W0070	578	24		28-41-11	ALL
	12		W0070	216B	24		28-41-11	ALL
	13		W0070	216R	24		28-41-11	ALL
	14		W0070	217B	24		28-41-11	ALL
	15		W0070	217R	24		28-41-11	ALL
	16		W0070	218B	24		28-41-11	ALL
	17		W0070	218R	24		28-41-11	ALL
	18		W0070	565	24		28-41-11	ALL
	19		W0070	219B	24		28-41-11	ALL
	20		W0070	219R	24		28-41-11	ALL
	21		W0070	220B	24		28-41-11	ALL
	22		W0070	220R	24		28-41-11	ALL
	23		W0070	221B	24		28-41-11	ALL
	24		W0070	221R	24		28-41-11	ALL
	25		W0070	538	24		28-41-11	ALL
	26		W0070	222B	24		28-41-11	ALL
	27		W0070	222R	24		28-41-11	ALL
	28		W0070	223B	24		28-41-11	ALL
	29		W0070	223R	24		28-41-11	ALL
	30		W0070	224B	24		28-41-11	ALL
	31		W0070	224R	24		28-41-11	ALL
	32		W0070	525	24		28-41-11	ALL
	33		W0070	225B	24		28-41-11	ALL
	34		W0070	225R	24		28-41-11	ALL
	35		W0070	226B	24		28-41-11	ALL
	36		W0070	226R	24		28-41-11	ALL
	37		W0070	227B	24		28-41-11	ALL
	38		W0070	227R	24		28-41-11	ALL
	39		W0070	209B	24		28-41-11	ALL
	40	UNUSED						ALL
	41		W0070	209R	24		28-41-11	ALL
	42		W0070	594	24		28-22-11	ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D04900

Page 47

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04940J		AF0204/ /		RCPT-P61 (continued)				ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
	56		W0070	11Y	12		34-21-21	ALL
	57	UNUSED						ALL
D04940P		AF0204/ /		PLUG-P61				ALL
	1		W0598	041R	22		26-11-21	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W0598	051R	22		26-11-22	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11		W0598	007	24		28-41-11	ALL
	12		W0598	201B	24		28-41-11	ALL
	13		W0598	201R	24		28-41-11	ALL
	14		W0598	202B	24		28-41-11	ALL
	15		W0598	202R	24		28-41-11	ALL
	16		W0598	203B	24		28-41-11	ALL
	17		W0598	203R	24		28-41-11	ALL
	18		W0598	008	24		28-41-11	ALL
	19		W0598	204B	24		28-41-11	ALL
	20		W0598	204R	24		28-41-11	ALL
	21		W0598	205B	24		28-41-11	ALL
	22		W0598	205R	24		28-41-11	ALL
	23		W0598	206B	24		28-41-11	ALL
	24		W0598	206R	24		28-41-11	ALL
	25		W0598	009	24		28-41-11	ALL
	26		W0598	207B	24		28-41-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04900

Page 48

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04940P		AF0204/ /		PLUG-P61 (continued)				ALL
	27		W0598	207R	24		28-41-11	ALL
	28		W0598	208B	24		28-41-11	ALL
	29		W0598	208R	24		28-41-11	ALL
	30		W0598	209B	24		28-41-11	ALL
	31		W0598	209R	24		28-41-11	ALL
	32		W0598	010	24		28-41-11	ALL
	33		W0598	210B	24		28-41-11	ALL
	34		W0598	210R	24		28-41-11	ALL
	35		W0598	211B	24		28-41-11	ALL
	36		W0598	211R	24		28-41-11	ALL
	37		W0598	212B	24		28-41-11	ALL
	38		W0598	212R	24		28-41-11	ALL
	39		W0598	213B	24		28-41-11	ALL
	40	UNUSED						ALL
	41		W0598	213R	24		28-41-11	ALL
	42		W0598	064	24		28-22-11	ALL
	43		W0598	803R	20		SPARE	ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46		W0598	081	22		SPARE	ALL
	47		W0598	082	22		SPARE	ALL
	48		W0598	801	22		SPARE	ALL
	49		W0598	802	22		SPARE	ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
	56		W0598	014	12		34-21-21	ALL
	57	UNUSED						ALL
D04941J		AE0305/ /		RCPT-E1-3				ALL
	1		W1505	201B	24		31-31-14	ALL
	2		W1505	201R	24		31-31-14	ALL
	3		W1505	201Z			31-31-14	ALL
	4		W1505	001	24		SPARE	ALL
	5		W1505	002	24		SPARE	ALL
	6		W1505	202B	24		SPARE	ALL
	7		W1505	202R	24		SPARE	ALL

HOOKUP LIST
D280T132

91-21-51
Section D04900
Page 49
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04941J		AE0305/ /		RCPT-E1-3 (continued)				ALL
	8		W1505	202Z			SPARE	ALL
	9	UNUSED						ALL
	10	UNUSED						050-099, 275-299
	10		W1505	203R	24		SPARE	150-199
	11	UNUSED						050-099, 275-299
	11		W1505	203B	24		SPARE	150-199
	12	UNUSED						050-099, 275-299
	12		W1505	203Z			SPARE	150-199
	13	UNUSED						050-099, 275-299
	13		W1505	204R	24		SPARE	150-199
	14	UNUSED						050-099, 275-299
	14		W1505	204B	24		SPARE	150-199
	15	UNUSED						050-099, 275-299
	15		W1505	204Z			SPARE	150-199
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D04941P		AE0305/ /		PLUG-E1-3				ALL
	1		W0105	552B	24		31-31-14	050-099
	1		W0105	552B	22		31-31-14	150-199, 275-299
	2		W0105	552R	24		31-31-14	050-099
	2		W0105	552R	22		31-31-14	150-199, 275-299
	3		W0105	552Z			31-31-14	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D04900

Page 50

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04941P		AE0305/ /		PLUG-E1-3 (continued)				ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D04942J		AE0209/ /		RCPT-P36				ALL
	1		W0184	835	24		29-11-32	ALL
	2		W0184	536	24		28-42-21	ALL
	3	DK	W0184	199	18		28-22-21	ALL
	4		W0184	676	22		29-11-32	ALL
	5		W0184	501	20		28-22-31	ALL
	6		W0184	759	20		28-22-31	ALL
	7		W0184	758	22		28-21-11	ALL
	8		W0184	102	22		28-21-11	ALL
	9		W0184	836	24		29-11-32	ALL
	10		W0184	130	20		28-21-11	ALL
	11		W0184	124	20		28-21-11	ALL
	12		W0184	119	20		28-21-11	ALL
	13		W0184	129	22		28-21-11	ALL
	14		W0184	126	22		28-21-11	ALL
	15		W0184	561	18		28-21-11	050-099, 150-156, 162-166, 275-276
	15	DK	W0184	561	18		28-21-11	157, 167-199, 277-299
	16		W0184	125	22		28-21-11	ALL
	17		W0184	121	22		28-21-11	ALL
	18		W0184	120	22		28-21-11	ALL
	19		W0184	116	22		28-21-11	ALL
	20		W0184	204B	24		28-41-11	ALL
	21		W0184	204R	24		28-41-11	ALL
	22		W0184	595	18		28-41-12	050-099, 150-156, 162-166, 275-276
	22	DK	W0184	595	18		28-41-12	157, 167-199, 277-299
	23	DK	W0184	198	18		28-22-21	ALL
	24		W0184	085	24		28-41-11	ALL
	25		W0184	708	22		28-22-21	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04900

Page 51

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04942J		AE0209/ /		RCPT-P36 (continued)				ALL
	26		W0184	779	24		29-21-31	ALL
	27		W0184	143	20		28-21-13	ALL
	28		W0184	142	20		28-21-13	ALL
	29		W0184	141	20		28-21-13	ALL
	30		W0184	140	20		28-21-13	ALL
	31		W0184	138	20		28-21-13	ALL
	32		W0184	139	20		28-21-13	ALL
	33		W0184	707	22		28-22-31	ALL
	34		W0184	540	24		28-26-11	ALL
	35	UNUSED						ALL
	36		W0184	164	24		29-21-31	ALL
	37		W0184	549	20		28-26-11	ALL
	38		W0184	542	20		28-26-11	ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42		W0184	095	18		28-21-11	050-099, 150-156, 162-166, 275-276
	42	UNUSED						157, 167-199, 277-299
	43		W0184	784	22		32-42-11	ALL
	44	DK	W0184	095	18		28-21-11	157, 167-199, 277-299
	45	UNUSED						157, 167-199, 277-299
	46	UNUSED						157, 167-199, 277-299
	47	UNUSED						157, 167-199, 277-299
	48	UNUSED						157, 167-199, 277-299
	49	UNUSED						157, 167-199, 277-299
	50	UNUSED						157, 167-199, 277-299
	51	UNUSED						157, 167-199, 277-299
	52	UNUSED						157, 167-199, 277-299
	53	UNUSED						157, 167-199, 277-299
	54	UNUSED						157, 167-199, 277-299
	55	UNUSED						157, 167-199, 277-299
	56	UNUSED						157, 167-199, 277-299
	57	UNUSED						157, 167-199, 277-299
	58	UNUSED						157, 167-199, 277-299
	59	UNUSED						157, 167-199, 277-299
	60	UNUSED						157, 167-199, 277-299
	61	UNUSED						157, 167-199, 277-299
D04942P		AE0209/ /		PLUG-				ALL
	1		W0596	129	22		29-11-32	ALL

HOOKUP LIST
D280T132

91-21-51
Section D04900
Page 52
Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04942P		AE0209/ /		PLUG- (continued)				ALL
	2		W0596	001	22		28-42-21	ALL
	3	DL	W0596	090	18		28-22-21	ALL
	4		W0596	126	22		29-11-32	ALL
	5		W0596	005	20		28-22-31	ALL
	6		W0596	006	20		28-22-31	ALL
	7		W0596	030	22		28-21-11	ALL
	8		W0596	032	22		28-21-11	ALL
	9		W0596	130	22		29-11-32	ALL
	10		W0596	033	20		28-21-11	ALL
	11		W0596	034	20		28-21-11	ALL
	12		W0596	035	20		28-21-11	ALL
	13		W0596	036	22		28-21-11	ALL
	14		W0596	037	22		28-21-11	ALL
	15		W0596	031	18		28-21-11	050-099, 150-156, 162-166, 275-276
	15	DL	W0596	031	18		28-21-11	157, 167-199, 277-299
	16		W0596	038	22		28-21-11	ALL
	17		W0596	039	22		28-21-11	ALL
	18		W0596	040	22		28-21-11	ALL
	19		W0596	060	22		28-21-11	ALL
	20		W0596	211B	24		28-41-11	ALL
	21		W0596	211R	24		28-41-11	ALL
	22		W0596	087	18		28-41-12	050-099, 150-156, 162-166, 275-276
	22	DL	W0596	087	18		28-41-12	157, 167-199, 277-299
	23	DL	W0596	093	18		28-22-21	ALL
	24		W0596	145	24		28-41-11	ALL
	25		W0596	124	22		28-22-21	ALL
	26		W0596	103	24		29-21-31	ALL
	27		W0596	069	20		28-21-13	ALL
	28		W0596	070	20		28-21-13	ALL
	29		W0596	071	20		28-21-13	ALL
	30		W0596	072	20		28-21-13	ALL
	31		W0596	073	20		28-21-13	ALL
	32		W0596	074	20		28-21-13	ALL
	33		W0596	125	22		28-22-31	ALL
	34		W0596	121	24		28-26-11	ALL
	35	UNUSED						ALL
	36		W0596	104	24		29-21-31	ALL
	37		W0596	020	20		28-26-11	ALL
	38		W0596	021	20		28-26-11	ALL
	39	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D04900

Page 53

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04942P		AE0209/ /		PLUG- (continued)				ALL
	40	UNUSED						ALL
	41		W0596	506	22		SPARE	050-099
	41	UNUSED						150-199, 275-299
	42	DL	W0596	500	18		28-21-11	050-099, 150-156, 162-166, 275-276
	42	DL	W0596	511	18		SPARE	157, 167-199
	42	UNUSED						277-299
	43		W0596	504	22		32-42-11	ALL
	44	DL	W0596	500	18		28-21-11	157, 167-199, 277-299
	45	UNUSED						157, 167-199, 277-299
	46	UNUSED						157, 167-199, 277-299
	47	UNUSED						157, 167-199, 277-299
	48	UNUSED						157, 167-199, 277-299
	49	UNUSED						157, 167-199, 277-299
	50	UNUSED						157, 167-199, 277-299
	51	UNUSED						157, 167-199, 277-299
	52	UNUSED						157, 167-199, 277-299
	53	UNUSED						157, 167-199, 277-299
	54	UNUSED						157, 167-199, 277-299
	55	UNUSED						157, 167-199, 277-299
	56	UNUSED						157, 167-199, 277-299
	57	UNUSED						157, 167-199, 277-299
	58	UNUSED						157, 167-199, 277-299
	59	UNUSED						157, 167-199, 277-299
	60	UNUSED						157, 167-199, 277-299
	61	UNUSED						157, 167-199, 277-299
	CAP	Y	W0596	511	18		SPARE	050-099, 150-156, 162-166, 275-276
D04943J		AE0322/ /		RCPT-E2-3				ALL
	1		W1505	201B	24		31-31-14	ALL
	2		W1505	201R	24		31-31-14	ALL
	3		W1505	201Z			31-31-14	ALL
	4		W1505	001	24		SPARE	ALL
	5		W1505	002	24		SPARE	ALL
	6		W1505	202B	24		SPARE	ALL
	7		W1505	202R	24		SPARE	ALL
	8		W1505	202Z			SPARE	ALL
	9	UNUSED						ALL
	10	UNUSED						050-099, 275-299
	10		W1505	203R	24		SPARE	150-199
	11	UNUSED						050-099, 275-299

HOOKUP LIST

D280T132

91-21-51

Section D04900

Page 54

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04943J		AE0322/ /		RCPT-E2-3 (continued)				ALL
	11		W1505	203B	24		SPARE	150-199
	12	UNUSED						050-099, 275-299
	12		W1505	203Z			SPARE	150-199
	13	UNUSED						050-099, 275-299
	13		W1505	204R	24		SPARE	150-199
	14	UNUSED						050-099, 275-299
	14		W1505	204B	24		SPARE	150-199
	15	UNUSED						050-099, 275-299
	15		W1505	204Z			SPARE	150-199
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
D04943P		AE0322/ /		PLUG-E2-E				ALL
	1		W0135	794B	24		31-31-14	ALL
	2		W0135	794R	24		31-31-14	ALL
	3		W0135	794Z			31-31-14	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D04900

Page 55

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04943P		AE0322/ /		PLUG-E2-E (continued)				ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
D04944J		AE0307/ /		RCPT-				ALL
	1	UNUSED						ALL
	2		W0598	218R	24		28-41-11	ALL
	3		W0598	218B	24		28-41-11	ALL
	4	UNUSED						050-099, 155-199, 276-299
	4		W0598	066	24		31-51-21	150-154, 275
	5	UNUSED						050-099, 155-199, 276-299
	5		W0598	015	24		31-51-21	150-154, 275
	6	UNUSED						ALL
	7		W0598	007	24		28-41-11	ALL
	8		W0598	201B	24		28-41-11	ALL
	9		W0598	201R	24		28-41-11	ALL
	10		W0598	202B	24		28-41-11	ALL
	11		W0598	202R	24		28-41-11	ALL
	12		W0598	203B	24		28-41-11	ALL
	13		W0598	203R	24		28-41-11	ALL
	14		W0598	008	24		28-41-11	ALL
	15		W0598	204B	24		28-41-11	ALL
	16		W0598	204R	24		28-41-11	ALL
	17		W0598	205B	24		28-41-11	ALL
	18		W0598	205R	24		28-41-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04900

Page 56

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04944J		AE0307/ /		RCPT- (continued)				ALL
	19		W0598	206B	24		28-41-11	ALL
	20		W0598	206R	24		28-41-11	ALL
	21		W0598	009	24		28-41-11	ALL
	22		W0598	207B	24		28-41-11	ALL
	23		W0598	207R	24		28-41-11	ALL
	24		W0598	208B	24		28-41-11	ALL
	25		W0598	208R	24		28-41-11	ALL
	26		W0598	209B	24		28-41-11	ALL
	27		W0598	209R	24		28-41-11	ALL
	28		W0598	010	24		28-41-11	ALL
	29		W0598	210B	24		28-41-11	ALL
	30		W0598	210R	24		28-41-11	ALL
	31		W0598	211B	24		28-41-11	ALL
	32		W0598	211R	24		28-41-11	ALL
	33		W0598	212B	24		28-41-11	ALL
	34		W0598	212R	24		28-41-11	ALL
	35		W0598	213B	24		28-41-11	ALL
	36		W0598	213R	24		28-41-11	ALL
	37		W0598	081	22		SPARE	ALL
	38		W0598	082	22		SPARE	ALL
	39		W0598	801	22		SPARE	ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
D04944P		AE0307/ /		PLUG-E2-4				ALL
	1	UNUSED						ALL
	2		W0098	217B	24		28-41-11	ALL
	3		W0098	217R	24		28-41-11	ALL
	4	UNUSED						050-099, 155-199, 276-299
	4		W0098	080	24		31-51-21	150-154, 275
	5	UNUSED						050-099, 155-199, 276-299
	5		W0098	009	24		31-51-21	150-154, 275
	6	UNUSED						ALL
	7		W0098	015	24		28-41-11	ALL
	8		W0098	201B	24		28-41-11	ALL
	9		W0098	201R	24		28-41-11	ALL
	10		W0098	202B	24		28-41-11	ALL
	11		W0098	202R	24		28-41-11	ALL
	12		W0098	203B	24		28-41-11	ALL
	13		W0098	203R	24		28-41-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04900

Page 57

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04944P		AE0307/ /		PLUG-E2-4 (continued)				ALL
	14		W0098	016	24		28-41-11	ALL
	15		W0098	204B	24		28-41-11	ALL
	16		W0098	204R	24		28-41-11	ALL
	17		W0098	205B	24		28-41-11	ALL
	18		W0098	205R	24		28-41-11	ALL
	19		W0098	206B	24		28-41-11	ALL
	20		W0098	206R	24		28-41-11	ALL
	21		W0098	017	24		28-41-11	ALL
	22		W0098	207B	24		28-41-11	ALL
	23		W0098	207R	24		28-41-11	ALL
	24		W0098	208B	24		28-41-11	ALL
	25		W0098	208R	24		28-41-11	ALL
	26		W0098	209B	24		28-41-11	ALL
	27		W0098	209R	24		28-41-11	ALL
	28		W0098	018	24		28-41-11	ALL
	29		W0098	210B	24		28-41-11	ALL
	30		W0098	210R	24		28-41-11	ALL
	31		W0098	211B	24		28-41-11	ALL
	32		W0098	211R	24		28-41-11	ALL
	33		W0098	212B	24		28-41-11	ALL
	34		W0098	212R	24		28-41-11	ALL
	35		W0098	213B	24		28-41-11	ALL
	36		W0098	213R	24		28-41-11	ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
D04945J		AE0308/ /		RCPT-E2-1				ALL
	1		W0131	016	22		27-09-11	ALL
	2		W0131	019	22		27-09-11	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
D04945P		AE0308/ /		PLUG-E2-1				ALL
	1		W0219	001	22		27-09-11	ALL
	2		W0219	002	22		27-09-11	ALL
	3		W0219	003	20		SPARE	050-099, 150-199, 275-278

HOOKUP LIST
D280T132

91-21-51
Section D04900
Page 58
Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04945P		AE0308/ /		PLUG-E2-1 (continued)				ALL
	3	UNUSED						280-299
	4		W0219	004	20		SPARE	ALL
	5	UNUSED						ALL
D04946J		AL1004/ /		RCPT-				ALL
	1		W1246	FRD			29-33-11	ALL
	2		W1246	016	20		29-33-11	ALL
	3		W1246	013	22		29-33-11	ALL
	4		W1246	009	24		29-32-11	ALL
	5		W1246	011	22		29-32-11	ALL
	6		W1246	FRE			29-33-11	ALL
	7		W1246	012	22		29-33-11	ALL
	8		W1246	FRF			29-33-11	ALL
	9		W1246	014	22		29-33-11	ALL
	10		W1246	015	22		29-33-11	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
			W1246	012Z			29-33-11	ALL
			W1246	FRD			29-33-11	ALL
			W1246	FRE			29-33-11	ALL
			W1246	FRF			29-33-11	ALL
D04946P		AL1004/ /		PLUG-R WING/BODY RS DISC				ALL
	1		W0968	FRB			29-33-11	ALL
	2		W0968	004	20		29-33-11	ALL
	3		W0968	008	20		29-33-11	ALL
	4		W0968	001	18		29-32-11	ALL
	5		W0968	003	18		29-32-11	ALL
	6		W0968	FRC			29-33-11	ALL
	7		W0968	007	20		29-33-11	ALL
	8		W0968	FRD			29-33-11	ALL
	9		W0968	009	20		29-33-11	ALL
	10		W0968	010	20		29-33-11	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
			W0968	007Z			29-33-11	ALL

HOOKUP LIST
D280T132

91-21-51
Section D04900
Page 59
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04946P		AL1004/ /		PLUG-R WING/BODY RS DISC (continued)				ALL
			W0968	FRB			29-33-11	ALL
			W0968	FRC			29-33-11	ALL
			W0968	FRD			29-33-11	ALL
D04948J		AE0218/ /		RCPT-P37				ALL
	1		W0198	156R	20		26-22-21	ALL
	2		W0198	158R	20		26-22-21	ALL
	3		W0198	517	24		49-15-11	ALL
	4		W0198	538R	20		26-23-12	050-099, 155-199, 275-299
	4		W0198	538R	20		26-23-11	150-154
	5		W0198	058R	22		26-15-12	ALL
	6		W0198	055R	22		26-15-12	ALL
	7		W0198	001	22		28-25-21	050-099
	7		W0198	001	20		28-25-21	150-199, 275-299
	8		W0198	069	20		49-61-11	ALL
	9	UNUSED						ALL
	10	UNUSED						050-099, 150-199
	10		W0198	195R	20		26-22-21	275-299
	11		W0198	022	22		49-61-11	ALL
	12	UNUSED						ALL
	13		W0198	537R	20		26-21-11	ALL
	14		W0198	532	22		49-61-11	ALL
	15		W0198	533R	22		26-15-12	ALL
	16		W0198	501	24		49-61-11	ALL
	17		W0198	197	24		36-11-41	ALL
	18		W0198	519	24		36-11-41	ALL
	19		W0198	542R	20		26-22-21	ALL
	20		W0198	556	22		26-16-21	ALL
	21		W0198	534R	22		26-15-12	ALL
	22		W0198	557	22		26-16-21	ALL
	23		W0198	558	22		26-16-21	ALL
	24		W0198	559	22		26-16-21	ALL
	25		W0198	579R	20		26-23-12	ALL
	26		W0198	592R	20		26-23-12	050-099, 155-199, 275-299
	26	UNUSED						150-154
	27		W0198	563R	22		26-17-11	ALL
	28		W0198	564R	22		26-17-11	050-099, 151, 275-299
	28		W0198	901	22		26-17-11	150, 152-199
	29		W0198	562R	22		26-17-11	ALL
	30		W0198	569R	22		26-17-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04900

Page 60

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04948J		AE0218/ /		RCPT-P37 (continued)				ALL
	31		W0198	571	24		21-58-16	ALL
	32		W0198	029	24		31-31-22	050-099, 150-199
	32		W0198	618R	20		26-23-12	275-299
	33	UNUSED						050-099
	33		W0198	585R	20		26-23-12	150-199, 275-299
	34		W0198	580R	20		26-23-12	ALL
	35		W0198	593R	20		26-23-12	050-099, 275-299
	35		W0198	043	24		31-31-22	150-199
	36		W0198	617R	20		26-23-12	050-099
	36		W0198	606R	20		26-23-12	150-199, 275-299
	37		W0198	615R	20		26-23-12	050-099
	37		W0198	608R	20		26-23-12	150-199, 275-299
	38	UNUSED						050-099
	38		W0198	598R	20		26-23-12	150-199, 275-299
	39		W0198	616R	20		26-23-12	050-099
	39		W0198	605R	20		26-23-12	150-199, 275-299
	40		W0198	614R	20		26-23-12	050-099
	40		W0198	607R	20		26-23-12	150-199, 275-299
	41	UNUSED						ALL
	42		W0198	200R	20		32-45-12	ALL
	43		W0198	200B	20		32-45-12	ALL
	44		W0198	200Z			32-45-12	ALL
	45		W0198	50D	24		31-31-22	ALL
	46	UNUSED						050-099, 150-199
	46		W0198	029	24		31-31-22	275-299
	47	UNUSED						ALL
	48		W0198	043	24		31-31-22	050-099, 275-299
	48	UNUSED						150-199
	49	UNUSED						050-099, 150-154, 275-299
	49		W0198	618R	20		26-23-12	155-199
	50	UNUSED						050-099, 150-154, 275-299
	50		W0198	593R	20		26-23-12	155-199
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
D04948P		AE0218/ /		PLUG-P37				ALL
	1		W0606	001R	20		26-22-21	ALL

HOOKUP LIST
D280T132

91-21-51
Section D04900
Page 61
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04948P		AE0218/ /		PLUG-P37 (continued)				ALL
	2		W0606	002R	20		26-22-21	ALL
	3		W0606	152	24		49-15-11	ALL
	4		W0606	561R	20		26-23-12	050-099, 155-199, 275-299
	4		W0606	561R	20		26-23-11	150-154
	5		W0606	104R	22		26-15-12	ALL
	6		W0606	107R	22		26-15-12	ALL
	7		W0606	566	22		28-25-21	050-099
	7		W0606	566	20		28-25-21	150-199, 275-299
	8		W0606	150	20		49-61-11	ALL
	9	UNUSED						ALL
	10	UNUSED						050-099, 150-199
	10		W0606	013R	20		26-22-21	275-299
	11		W0606	548	22		49-61-11	ALL
	12	UNUSED						ALL
	13		W0606	563R	20		26-21-11	ALL
	14		W0606	174	22		49-61-11	ALL
	15		W0606	173R	22		26-15-12	ALL
	16		W0606	172	22		49-61-11	ALL
	17		W0606	525	24		36-11-41	ALL
	18		W0606	537	24		36-11-41	ALL
	19		W0606	007R	20		26-22-21	ALL
	20		W0606	120	24		26-16-21	ALL
	21		W0606	070R	22		26-15-12	ALL
	22		W0606	130	24		26-16-21	ALL
	23		W0606	128	20		26-16-21	ALL
	24		W0606	638	20		26-16-21	ALL
	25		W0606	625R	20		26-23-12	ALL
	26		W0606	093R	20		26-23-12	050-099, 155-199, 275-299
	26	UNUSED						150-154
	27		W0606	627R	22		26-17-11	ALL
	28		W0606	148R	22		26-17-11	ALL
	29		W0606	149R	22		26-17-11	ALL
	30		W0606	630R	22		26-17-11	ALL
	31		W0606	631	24		25-33-11	050-099, 150-199, 277-299
	31		W0606	631	24		21-58-16	275-276
	32		W0606	024	24		31-31-22	050-099, 150-199
	32		W0606	636R	20		26-23-12	275-299
	33	UNUSED						050-099
	33		W0606	633R	20		26-23-12	150-199, 275-299
	34		W0606	626R	20		26-23-12	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04900

Page 62

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04948P		AE0218/ /		PLUG-P37 (continued)				ALL
	35		W0606	096R	20		26-23-12	050-099, 275-299
	35		W0606	109	24		31-31-22	150-199
	36		W0606	593R	20		26-23-12	050-099, 155-199, 275-299
	36		W0606	093R	20		26-23-12	150-154
	37		W0606	596R	20		26-23-12	050-099, 155-199, 275-299
	37		W0606	096R	20		26-23-12	150-154
	38	UNUSED						050-099
	38		W0606	718R	20		26-23-12	150-199, 275-299
	39		W0606	719R	20		26-23-12	ALL
	40		W0606	720R	20		26-23-12	ALL
	41	UNUSED						ALL
	42		W0606	201R	20		32-45-12	ALL
	43		W0606	201B	20		32-45-12	ALL
	44		W0606	201Z			32-45-12	ALL
	45		W0606	110	24		31-31-22	ALL
	46	UNUSED						050-099, 150-199
	46		W0606	024	24		31-31-22	275-299
	47	UNUSED						ALL
	48		W0606	109	24		31-31-22	050-099, 275-299
	48	UNUSED						150-199
	49	UNUSED						050-099, 150-154, 275-299
	49		W0606	636R	20		26-23-12	155-199
	50	UNUSED						050-099, 150-154, 275-299
	50		W0606	096R	20		26-23-12	155-199
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
	DED		W0606	150Z			49-61-11	ALL
D04950J		AL0202/ /		RCPT-NOSE WHEEL WELL				ALL
	1		W0606	201Z			32-45-12	ALL
	2		W0606	002R	20		26-22-21	ALL
	3	UNUSED						ALL
	4		W0606	005R	20		26-22-21	ALL
	5	UNUSED						ALL
	6		W0606	150	20		49-61-11	ALL
	7		W0606	113R	22		26-22-21	ALL
	8		W0606	112R	22		26-15-12	ALL

HOOKUP LIST
D280T132

91-21-51
Section D04900
Page 63
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04950J		AL0202/ /		RCPT-NOSE WHEEL WELL (continued)				ALL
	9	UNUSED						050-099, 150-199
	9		W0606	022R	20		26-22-21	275-299
	10	UNUSED						050-099, 150-199
	10		W0606	023R	20		26-22-21	275-299
	11		W0606	010R	20		26-22-21	ALL
	12		W0606	110R	20		26-15-12	ALL
	13		W0606	003R	22		26-15-12	ALL
	14		W0606	109R	20		26-15-12	ALL
	15		W0606	201B	20		32-45-12	ALL
	16		W0606	201R	20		32-45-12	ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						050-099, 155-199, 275-299
	21	UNUSED						050-099, 155-199, 275-299
	22	UNUSED						050-099, 155-199, 275-299
	23	UNUSED						050-099, 155-199, 275-299
	24	UNUSED						050-099, 155-199, 275-299
	25	UNUSED						050-099, 155-199, 275-299
	26	UNUSED						050-099, 155-199, 275-299
	27	UNUSED						050-099, 155-199, 275-299
	28	UNUSED						050-099, 155-199, 275-299
	29	UNUSED						050-099, 155-199, 275-299
	30	UNUSED						050-099, 155-199, 275-299
	DED		W0606	150Z			49-61-11	ALL
D04950P		AL0202/ /		PLUG-NOSE WW DISC				050-099, 155-199, 275-299
D04950P		AL0202/ /		PLUG-				150-154
	1		W0678	207Z			32-45-12	050-099, 155-199, 275-299
	1	UNUSED						150-154
	2		W0678	002R	18		26-22-21	ALL
	3	UNUSED						ALL
	4		W0678	004R	18		26-22-21	ALL
	5	UNUSED						ALL
	6		W0678	021R	18		49-61-11	ALL
	7		W0678	006R	18		26-22-21	ALL
	8		W0678	007R	18		26-15-12	ALL
	9	UNUSED						050-099, 150-199
	9		W0678	022R	18		26-22-21	275-299
	10	UNUSED						050-099, 150-199

HOOKUP LIST

D280T132

91-21-51

Section D04900

Page 64

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04950P		AL0202/ /		PLUG-NOSE WW DISC (continued)				050-099, 155-199, 275-299
D04950P		AL0202/ /		PLUG- (continued)				150-154
	10		W0678	023R	18		26-22-21	275-299
	11		W0678	001R	18		26-22-21	ALL
	12		W0678	005R	18		26-15-12	ALL
	13		W0678	003R	18		26-15-12	ALL
	14		W0678	014R	18		26-15-12	ALL
	15		W0678	207B	20		32-45-12	050-099, 155-199, 275-299
	15	UNUSED						150-154
	16		W0678	207R	20		32-45-12	050-099, 155-199, 275-299
	16	UNUSED						150-154
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						050-099, 155-199, 275-299
	21	UNUSED						050-099, 155-199, 275-299
	22	UNUSED						050-099, 155-199, 275-299
	23	UNUSED						050-099, 155-199, 275-299
	24	UNUSED						050-099, 155-199, 275-299
	25	UNUSED						050-099, 155-199, 275-299
	26	UNUSED						050-099, 155-199, 275-299
	27	UNUSED						050-099, 155-199, 275-299
	28	UNUSED						050-099, 155-199, 275-299
	29	UNUSED						050-099, 155-199, 275-299
	30	UNUSED						050-099, 155-199, 275-299
D04952J		AF0204/ /		RCPT-P61				ALL
	1		W0070	888R	20		26-22-21	ALL
	2		W0070	812R	20		26-22-21	ALL
	3		W0070	808R	20		26-21-11	ALL
	4		W0070	809R	20		26-21-11	ALL
	5		W0070	810R	20		26-23-12	ALL
	6		W0070	811R	20		26-23-12	ALL
	7		W0070	898R	24		26-16-11	ALL
	8		W0070	06X	24		36-11-52	ALL
	9		W0070	01G	24		21-44-11	ALL
	10		W0070	882R	20		26-21-11	ALL
	11		W0070	772R	22		26-11-21	ALL
	12		W0070	774R	22		26-11-21	ALL
	13		W0070	775R	22		26-11-21	ALL
	14		W0070	777R	22		26-11-21	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04900

Page 65

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04952J		AF0204/ /		RCPT-P61 (continued)				ALL
	15		W0070	10K	22		80-11-11	ALL
	16		W0070	780R	22		26-11-22	ALL
	17		W0070	07B	22		49-61-11	ALL
	18		W0070	07C	22		49-61-11	ALL
	19		W0070	884R	20		26-21-11	ALL
	20		W0070	889R	20		26-22-21	ALL
	21		W0070	721R	22		26-15-11	ALL
	22		W0070	01F	24		21-44-11	ALL
	23		W0070	03J	22		28-25-21	050-099
	23		W0070	03J	20		28-25-21	150-199, 275-299
	24		W0070	01P	24		24-22-41	ALL
	25		W0070	01R	24		24-22-41	ALL
	26		W0070	896R	20		26-23-12	ALL
	27	FM	W0070	07A	16		49-61-11	ALL
	28		W0070	723R	22		26-15-11	ALL
	29		W0070	788R	22		26-15-11	ALL
	30	UNUSED						050-099, 150-199
	30		W0070	879R	20		26-22-21	275-299
	31		W0070	09V	24		78-34-21	ALL
	32		W0070	790R	22		26-15-11	ALL
	33		W0070	789R	22		26-15-11	ALL
	34		W0070	725	22		49-61-11	ALL
	35		W0070	724R	22		26-15-12	ALL
	36		W0070	785R	22		26-11-21	ALL
	37		W0070	773	20		26-16-21	ALL
	38		W0070	778	20		26-16-21	ALL
	39		W0070	63S	20		78-34-21	ALL
	40		W0070	63R	20		78-34-21	ALL
	41		W0070	711	24		24-31-41	ALL
	42		W0070	800R	22		26-18-31	ALL
	43	UNUSED						050-099, 150-199
	43		W0070	814R	20		26-22-21	275-299
	44		W0070	01N	24		24-22-21	ALL
	45		W0070	01M	24		24-22-21	ALL
	46		W0070	03V	22		29-11-21	ALL
	47		W0070	03T	22		29-11-21	ALL
	48		W0070	03U	22		29-11-21	ALL
	49		W0070	03C	22		28-22-21	ALL
	50		W0070	03D	22		28-22-21	ALL
	51		W0070	09N	20		76-11-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04900

Page 66

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04952J		AF0204/ /		RCPT-P61 (continued)				ALL
	52		W0070	09P	20		76-11-11	ALL
	53		W0070	09R	20		76-11-11	ALL
	54		W0070	01B	24		21-25-11	ALL
	55		W0070	09U	24		78-34-21	ALL
	DED		W0070	03JZ			28-25-21	ALL
	DED		W0070	03TZ			29-11-21	ALL
	DED		W0070	03UZ			29-11-21	ALL
	DED		W0070	07BZ			49-61-11	ALL
	DED		W0070	07CZ			49-61-11	ALL
	DED		W0070	09UZ			78-34-21	ALL
	DED		W0070	09VZ			78-34-21	ALL
D04952P		AF0204/ /		PLUG-P61				ALL
	1		W0606	001R	20		26-22-21	ALL
	2		W0606	082R	20		26-22-21	ALL
	3		W0606	078R	20		26-21-11	ALL
	4		W0606	079R	20		26-21-11	ALL
	5		W0606	080R	20		26-23-12	ALL
	6		W0606	081R	20		26-23-12	ALL
	7		W0606	026R	24		26-16-11	ALL
	8		W0606	505	24		36-11-52	ALL
	9		W0606	559	24		21-44-11	ALL
	10		W0606	195R	20		26-21-11	ALL
	11		W0606	041R	22		26-11-21	ALL
	12		W0606	180R	22		26-11-21	ALL
	13		W0606	182R	22		26-11-21	ALL
	14		W0606	044R	22		26-11-21	ALL
	15		W0606	543	22		80-11-11	ALL
	16		W0606	051R	22		26-11-22	ALL
	17		W0606	546	22		49-61-11	ALL
	18		W0606	547	22		49-61-11	ALL
	19		W0606	196R	20		26-21-11	ALL
	20		W0606	008R	20		26-22-21	ALL
	21		W0606	061R	22		26-15-11	ALL
	22		W0606	558	24		21-44-11	ALL
	23		W0606	565	22		28-25-21	050-099
	23		W0606	565	20		28-25-21	150-199, 275-299
	24		W0606	524	24		24-22-41	ALL
	25		W0606	523	24		24-22-41	ALL
	26		W0606	076R	20		26-23-12	ALL

HOOKUP LIST
D280T132

91-21-51
Section D04900
Page 67
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04952P		AF0204/ /		PLUG-P61 (continued)				ALL
	27	FL	W0606	154	16		49-61-11	ALL
	28		W0606	534R	22		26-15-11	ALL
	29		W0606	540R	22		26-15-11	ALL
	30	UNUSED						050-099, 150-199
	30		W0606	527R	20		26-22-21	275-299
	31		W0606	509	24		78-34-21	ALL
	32		W0606	064R	22		26-15-11	ALL
	33		W0606	541R	22		26-15-11	ALL
	34		W0606	174	22		49-61-11	ALL
	35		W0606	115R	22		26-15-12	ALL
	36		W0606	185R	22		26-11-21	ALL
	37		W0606	117	20		26-16-21	ALL
	38		W0606	118	20		26-16-21	ALL
	39	DL	W0606	194	18		78-34-21	ALL
	40	DL	W0606	099	18		78-34-21	ALL
	41		W0606	167	24		24-31-41	ALL
	42	DL	W0606	170R	18		26-18-31	ALL
	43	UNUSED						050-099, 150-199
	43		W0606	145R	20		26-22-21	275-299
	44		W0606	501	24		24-22-21	ALL
	45		W0606	510	24		24-22-21	ALL
	46		W0606	518	22		29-11-21	ALL
	47		W0606	544	22		29-11-21	ALL
	48		W0606	545	22		29-11-21	ALL
	49		W0606	556	20		28-22-21	ALL
	50		W0606	557	20		28-22-21	ALL
	51		W0606	519	20		76-11-11	ALL
	52		W0606	512	20		76-11-11	ALL
	53		W0606	513	20		76-11-11	ALL
	54		W0606	177	24		21-25-11	ALL
	55		W0606	520	24		78-34-21	ALL
	DED		W0606	544Z			29-11-21	ALL
	DED		W0606	545Z			29-11-21	ALL
D04953J		AE0307/ /		RCPT-E2-5				ALL
	1		W0849	001	22		SPARE	050-099, 150-154
	1	UNUSED						155-199, 275-299
	2	UNUSED						ALL
	3		W0849	014	24		23-51-41	ALL
	4	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D04900

Page 68

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04953J		AE0307/ /		RCPT-E2-5 (continued)				ALL
	5	UNUSED						ALL
	6		W0849	204R	24		23-22-15	ALL
	7		W0849	204B	24		23-22-15	ALL
	8		W0849	015	24		23-22-15	ALL
	9		W0849	204Z			23-22-15	ALL
	10	UNUSED						ALL
	11		W0849	008	24		SPARE	ALL
	12	UNUSED						ALL
	13		W0849	010	22		SPARE	ALL
	14		W0849	202R	24		23-41-11	ALL
	15		W0849	202B	24		23-41-11	ALL
	16		W0849	203R	24		23-41-11	ALL
	17		W0849	203B	24		23-41-11	ALL
	18	UNUSED						050-099, 150-199
	18		W1633	901R	24		23-22-11	275-299
	19	UNUSED						050-099, 150-199
	19		W1633	901B	24		23-22-11	275-299
	20	UNUSED						050-099, 150-199
	20		W1633	901Z			23-22-11	275-299
	21	UNUSED						ALL
	22	UNUSED						050-099, 150-199, 277-278
	22		W0851	025	22		23-22-12	275-276, 280-299
	23	UNUSED						050-099, 150-199, 277-278
	23		W0851	026	22		23-22-12	275-276, 280-299
	24	UNUSED						050-099, 150-199, 277-278
	24		W0851	043	22		23-22-12	275-276, 280-299
			W0849	202	20		23-41-11	ALL
			W0849	202Z			23-41-11	ALL
			W0849	203Z			23-41-11	ALL
D04953P		AE0307/ /		PLUG-E2-5				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W0139	551	24		23-51-41	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W0139	657R	24		23-22-15	ALL
	7		W0139	657B	24		23-22-15	ALL
	8		W0139	654	24		23-22-15	ALL
	9		W0139	657Z			23-22-15	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04900

Page 69

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04953P		AE0307/ /		PLUG-E2-5 (continued)				ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14		W0139	215R	24		23-41-11	ALL
	15		W0139	215B	24		23-41-11	ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						050-099, 150-199
	18		W0139	900R	24		23-22-11	275-299
	19	UNUSED						050-099, 150-199
	19		W0139	900B	24		23-22-11	275-299
	20	UNUSED						050-099, 150-199
	20		W0139	900Z			23-22-11	275-299
	21	UNUSED						ALL
	22	UNUSED						050-099, 150-199, 277-278
	22		W0139	012	22		23-22-12	275-276, 280-299
	23	UNUSED						050-099, 150-199, 277-278
	23		W0139	687	22		23-22-12	275-276, 280-299
	24	UNUSED						050-099, 150-199, 277-278
	24		W0139	688	22		23-22-12	275-276, 280-299
D04954J		AL1004/ /		RCPT-R WING/BODY RS				ALL
	1		W0656	033	22		32-41-11	ALL
	2		W0656	034	22		32-41-11	ALL
	3		W0656	018	20		32-41-11	ALL
	4	UNUSED						ALL
	5		W0656	201B	22		32-42-12	ALL
	6		W0656	201R	22		32-42-12	ALL
	7		W0656	042	20		32-42-12	ALL
	8		W0656	043	22		32-42-12	ALL
	9		W0656	044	22		32-42-12	ALL
	10		W0656	045	22		32-42-12	ALL
	11	UNUSED						ALL
	12		W0656	047	20		32-42-12	ALL
	13		W0656	048	22		32-42-12	ALL
	14		W0656	051	22		29-11-31	ALL
	15		W0656	052	20		29-11-31	ALL
	16		W0656	201Z			32-42-12	ALL
	17	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D04900

Page 70

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04954J		AL1004/ /		RCPT-R WING/BODY RS (continued)				ALL
	18		W0656	031R	22		26-17-11	ALL
	19		W0656	032R	22		26-17-11	ALL
D04954P		AL1004/ /		PLUG-R WING/BODY RS				ALL
	1		W0964	001	20		32-41-11	ALL
	2		W0964	002	20		32-41-11	ALL
	3		W0964	003	20		32-41-11	ALL
	4	UNUSED						ALL
	5		W0964	201B	20		32-42-12	ALL
	6		W0964	201R	20		32-42-12	ALL
	7		W0964	007	20		32-42-12	ALL
	8		W0964	008	20		32-42-12	ALL
	9		W0964	009	20		32-42-12	ALL
	10		W0964	010	20		32-42-12	ALL
	11	UNUSED						ALL
	12		W0964	012	20		32-42-12	ALL
	13		W0964	013	20		32-42-12	ALL
	14		W0964	014	18		29-11-31	ALL
	15		W0964	015	18		29-11-31	ALL
	16		W0964	201Z			32-42-12	ALL
	17	UNUSED						ALL
	18		W0964	018R	18		26-17-11	ALL
	19		W0964	019R	18		26-17-11	ALL
D04955J		AF0204/ /		RCPT-P61				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W0062	81L	24		23-51-41	ALL
	4		W0062	81G	24		23-51-41	ALL
	5		W0062	81GZ			23-51-41	ALL
	6		W0062	239R	24		23-22-15	050-099, 155-199, 275-299
	6	UNUSED						150-154
	7		W0062	239B	24		23-22-15	ALL
	8		W0062	537	24		23-22-15	ALL
	9		W0062	239Z			23-22-15	ALL
	10	UNUSED						050-099, 155-199, 275-299
	10		W0062	239R	24		23-22-15	150-154
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D04900
Page 71
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04955J		AF0204/ /		RCPT-P61 (continued)				ALL
	14		W0062	214R	24		23-41-11	ALL
	15		W0062	214B	24		23-41-11	ALL
	16		W0062	213R	24		23-41-11	ALL
	17		W0062	213B	24		23-41-11	ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21		W0062	FRB			23-41-11	ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
			W0062	213Z			23-41-11	ALL
			W0062	214Z			23-41-11	ALL
			W0062	FRB			23-41-11	ALL
D04955P		AF0204/ /		PLUG-P4				ALL
	1		W0849	001	22		SPARE	050-099
	1	UNUSED						150-199, 275-299
	2	UNUSED						ALL
	3		W0849	014	24		23-51-41	ALL
	4		W0849	004	24		23-51-41	ALL
	5		W0849	004Z			23-51-41	ALL
	6		W0849	204R	24		23-22-15	050-099, 155-199, 275-299
	6		W0849	001	22		SPARE	150-154
	7		W0849	204B	24		23-22-15	ALL
	8		W0849	015	24		23-22-15	ALL
	9		W0849	204Z			23-22-15	ALL
	10	UNUSED						050-099, 155-199, 275-299
	10		W0849	204R	24		23-22-15	150-154
	11		W0849	008	24		SPARE	ALL
	12	UNUSED						ALL
	13		W0849	010	22		SPARE	ALL
	14		W0849	202R	24		23-41-11	ALL
	15		W0849	202B	24		23-41-11	ALL
	16		W0849	203R	24		23-41-11	ALL
	17		W0849	203B	24		23-41-11	ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21		W0849	FRA			23-41-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04900

Page 72

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04955P		AF0204/ /		PLUG-P4 (continued)				ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
			W0849	202Z			23-41-11	ALL
			W0849	203Z			23-41-11	ALL
			W0849	FRA			23-41-11	ALL
D04957J		AE0322/ /		RCPT E2-5				277-278
	1	UNUSED						277-278
	2	UNUSED						277-278
	3	UNUSED						277-278
	4	UNUSED						277-278
	5	UNUSED						277-278
	6	UNUSED						277-278
	7	UNUSED						277-278
	8	UNUSED						277-278
	9	UNUSED						277-278
	10	UNUSED						277-278
	11	UNUSED						277-278
	12	UNUSED						277-278
	13	UNUSED						277-278
	14	UNUSED						277-278
	15	UNUSED						277-278
	16	UNUSED						277-278
	17	UNUSED						277-278
	18	UNUSED						277-278
	19	UNUSED						277-278
	20	UNUSED						277-278
	21	UNUSED						277-278
	22	UNUSED						277-278
	23	UNUSED						277-278
	24	UNUSED						277-278
	25	UNUSED						277-278
	26	UNUSED						277-278
	27	UNUSED						277-278
	28	UNUSED						277-278
	29	UNUSED						277-278
	30	UNUSED						277-278
	31	UNUSED						277-278
	32	UNUSED						277-278

HOOKUP LIST

D280T132

91-21-51

Section D04900

Page 73

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04957J		AE0322/ /		RCPT E2-5 (continued)				277-278
	33	UNUSED						277-278
	34	UNUSED						277-278
	35	UNUSED						277-278
	36	UNUSED						277-278
	37	UNUSED						277-278
	38	UNUSED						277-278
	39	UNUSED						277-278
	40	UNUSED						277-278
	41	UNUSED						277-278
	42	UNUSED						277-278
	43	UNUSED						277-278
	44	UNUSED						277-278
	45	UNUSED						277-278
	46	UNUSED						277-278
	47	UNUSED						277-278
	48	UNUSED						277-278
	49	UNUSED						277-278
	50	UNUSED						277-278
	51	UNUSED						277-278
	52	UNUSED						277-278
	53		W0851	025	22		23-22-12	277-278
	54		W0851	026	22		23-22-12	277-278
	55		W0851	043	22		23-22-12	277-278
D04957P		AE0322/ /		PLUG E2-5				277-278
	1	UNUSED						277-278
	2	UNUSED						277-278
	3	UNUSED						277-278
	4	UNUSED						277-278
	5	UNUSED						277-278
	6	UNUSED						277-278
	7	UNUSED						277-278
	8	UNUSED						277-278
	9	UNUSED						277-278
	10	UNUSED						277-278
	11	UNUSED						277-278
	12	UNUSED						277-278
	13	UNUSED						277-278
	14	UNUSED						277-278
	15	UNUSED						277-278

HOOKUP LIST

D280T132

91-21-51

Section D04900

Page 74

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04957P		AE0322/ /		PLUG E2-5 (continued)				277-278
	16	UNUSED						277-278
	17	UNUSED						277-278
	18	UNUSED						277-278
	19	UNUSED						277-278
	20	UNUSED						277-278
	21	UNUSED						277-278
	22	UNUSED						277-278
	23	UNUSED						277-278
	24	UNUSED						277-278
	25	UNUSED						277-278
	26	UNUSED						277-278
	27	UNUSED						277-278
	28	UNUSED						277-278
	29	UNUSED						277-278
	30	UNUSED						277-278
	31	UNUSED						277-278
	32	UNUSED						277-278
	33	UNUSED						277-278
	34	UNUSED						277-278
	35	UNUSED						277-278
	36	UNUSED						277-278
	37	UNUSED						277-278
	38	UNUSED						277-278
	39	UNUSED						277-278
	40	UNUSED						277-278
	41	UNUSED						277-278
	42	UNUSED						277-278
	43	UNUSED						277-278
	44	UNUSED						277-278
	45	UNUSED						277-278
	46	UNUSED						277-278
	47	UNUSED						277-278
	48	UNUSED						277-278
	49	UNUSED						277-278
	50	UNUSED						277-278
	51	UNUSED						277-278
	52	UNUSED						277-278
	53		W0139	012	22		23-22-12	277-278
	54		W0139	687	22		23-22-12	277-278
	55		W0139	688	22		23-22-12	277-278

HOOKUP LIST

D280T132

91-21-51

Section D04900

Page 75

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04958J		AE0218/ /		RCPT-P37				ALL
	1	UNUSED						ALL
	2		W0198	037	24		29-21-31	ALL
	3		W0198	115	24		29-21-31	ALL
	4	UNUSED						ALL
	5		W0198	039	24		29-21-31	ALL
	6		W0198	179	24		29-21-31	ALL
	7		W0198	114	24		29-21-31	050-099, 275-299
	7	DK	W0198	114	24		29-21-31	150-199
	8	UNUSED						ALL
	9		W0198	070	22		29-11-32	ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	DED		W0198	039Z			29-21-31	ALL
D04958P		AE0218/ /		RCPT-P37				ALL
	1	UNUSED						ALL
	2		W0658	002	20		29-21-31	ALL
	3		W0658	003	20		29-21-31	ALL
	4	UNUSED						ALL
	5		W0658	005	20		29-21-31	ALL
	6		W0658	006	20		29-21-31	ALL
	7		W0658	007	20		29-21-31	ALL
	8	UNUSED						ALL
	9		W0658	019	20		29-11-32	ALL
	10		W0658	501	20		SPARE	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
D04960J		AE0306/ /		RCPT-E2-4				ALL
	1		W0654	001	24		24-51-71	ALL
	2		W0654	002	24		24-51-71	ALL
	3		W0654	003	24		24-51-71	ALL
	4		W0654	004	24		24-51-71	ALL

HOOKUP LIST
D280T132

91-21-51
Section D04900
Page 76
Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04960J		AE0306/ /		RCPT-E2-4 (continued)				ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8		W0654	206B	24		21-31-21	ALL
	9		W0654	206R	24		21-31-21	ALL
	10		W0654	041	22		SPARE	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D04960P		AE0306/ /		PLUG-E2-4				ALL
	1		W0014	567	24		24-51-71	ALL
	2		W0014	568	24		24-51-71	ALL
	3		W0014	109	24		24-51-71	ALL
	4		W0014	110	24		24-51-71	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8		W0014	225B	24		21-31-21	ALL
	9		W0014	225R	24		21-31-21	ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D04962J		AE0218/ /		RCPT-P37				ALL
	1	UNUSED						ALL
	2		W0192	163	24		21-53-12	ALL
	3		W0192	097	20		33-44-11	ALL
	4		W0192	094	24		29-11-12	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W0192	85S	24		78-36-21	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10		W0192	240B	22		21-51-13	ALL
	11		W0192	155	24		21-53-12	ALL
	12		W0192	158	24		21-53-12	ALL
	13		W0192	159	24		21-53-12	ALL
	14	UNUSED						ALL
	15	UNUSED						050-099, 150-155, 162-165, 275-276
	15		W0192	14Q	24		21-26-11	156-157, 166-199, 277-299

HOOKUP LIST
D280T132

91-21-51
Section D04900
Page 77
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04962J		AE0218/ /		RCPT-P37 (continued)				ALL
	16		W0192	10N	22		29-11-12	ALL
	17		W0192	10M	24		29-11-12	ALL
	18		W0192	832	22		29-11-12	ALL
	19	UNUSED						ALL
	20		W0192	164	24		21-53-12	ALL
	21		W0192	165	24		21-53-12	ALL
	22		W0192	894	18		33-44-21	ALL
	23		W0192	08L	24		32-61-14	ALL
	24		W0192	10J	24		21-61-51	ALL
	25	UNUSED						ALL
	26		W0192	241B	22		21-51-13	ALL
	27		W0192	02B	16		33-45-11	ALL
	28		W0192	02D	16		33-45-11	ALL
	29		W0192	241R	22		21-51-13	ALL
	30		W0192	09L	22		29-11-12	ALL
	31		W0192	240R	22		21-51-13	ALL
	32		W0192	579	20		27-81-21	ALL
	33		W0192	815	18		27-81-21	ALL
	34		W0192	814	22		27-81-21	ALL
	35		W0192	218R	22		27-81-21	ALL
	36		W0192	218B	22		27-81-21	ALL
	37		W0192	305R	24		27-81-21	ALL
	38		W0192	305B	24		27-81-21	ALL
	39		W0192	305Y	24		27-81-21	ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
D04962P		AE0218/ /		PLUG-P37				ALL
	1	UNUSED						ALL
	2		W0628	044	24		21-53-12	ALL
	3		W0628	031	20		33-44-11	ALL
	4		W0628	040	20		29-11-12	ALL
	5		W0628	012	24		SPARE	ALL
	6	UNUSED						ALL
	7		W0628	048	22		78-36-21	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10		W0628	218B	22		21-51-13	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04900

Page 78

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04962P		AE0218/ /		PLUG-P37 (continued)				ALL
	11		W0628	041	24		21-53-12	ALL
	12		W0628	042	24		21-53-12	ALL
	13		W0628	043	24		21-53-12	ALL
	14	UNUSED						ALL
	15		W0628	067	24		21-26-11	050-099, 156-157, 166-199, 277-299
	15		W0628	067	24		SPARE	150-155, 162-165, 275-276
	16		W0628	033	22		29-11-12	ALL
	17		W0628	034	24		29-11-12	ALL
	18		W0628	035	22		29-11-12	ALL
	19	UNUSED						ALL
	20		W0628	045	24		21-53-12	ALL
	21		W0628	046	24		21-53-12	ALL
	22		W0628	090	18		33-44-21	ALL
	23		W0628	117	24		32-61-14	ALL
	24		W0628	049	24		21-61-51	ALL
	25	UNUSED						ALL
	26		W0628	219B	22		21-51-13	ALL
	27		W0628	037	16		33-45-11	ALL
	28		W0628	038	16		33-45-11	ALL
	29		W0628	219R	22		21-51-13	ALL
	30		W0628	106	22		29-11-12	ALL
	31		W0628	218R	22		21-51-13	ALL
	32		W0628	051	20		27-81-21	ALL
	33		W0628	052	18		27-81-21	ALL
	34		W0628	053	22		27-81-21	ALL
	35		W0628	217R	24		27-81-21	ALL
	36		W0628	217B	24		27-81-21	ALL
	37		W0628	301R	24		27-81-21	ALL
	38		W0628	301B	24		27-81-21	ALL
	39		W0628	301Y	24		27-81-21	ALL
	40		W0628	101	20		SPARE	ALL
	41		W0628	019	22		SPARE	ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
D04963J		AE0320/ /		RCPT-E2-5				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W0853	003	24		23-31-13	ALL
	4		W0853	004	22		SPARE	ALL

HOOKUP LIST
D280T132

91-21-51
Section D04900
Page 79
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04963J		AE0320/ /		RCPT-E2-5 (continued)				ALL
	5		W0853	019	22		23-34-11	ALL
	6		W0853	021	20		23-34-11	ALL
	7		W0853	009	22		SPARE	ALL
	8		W0853	015	24		SPARE	ALL
	9	UNUSED						ALL
	10		W0853	016	20		SPARE	ALL
	11		W0853	020	24		23-12-21	ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
D04963P		AE0320/ /		PLUG-E2-5				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W0149	019	24		23-31-13	ALL
	4	UNUSED						ALL
	5		W0149	247R	22		23-34-11	ALL
	6		W0149	247B	22		23-34-11	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11		W0149	051	24		23-12-21	ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
D04965J		AF0120/ /		RCPT-P3				ALL
	1		W0855	065	24		31-31-18	ALL
	2		W0855	057	24		31-31-18	ALL
	3		W0855	063	24		31-31-18	ALL
	4		W0855	201R	22		34-12-21	ALL
	5		W0855	201B	22		34-12-21	ALL
	6		W0855	301R	24		34-12-21	ALL
	7		W0855	301B	24		34-12-21	ALL
	8		W0855	301Y	24		34-12-21	ALL
	9		W0855	202R	24		34-13-21	ALL
	10		W0855	202B	24		34-13-21	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04900

Page 80

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04965J		AF0120/ /		RCPT-P3 (continued)				ALL
	11		W0855	FRA			34-13-21	ALL
	12		W0855	204R	24		34-61-24	ALL
	13		W0855	204B	24		34-61-24	ALL
	14		W0855	FRD			34-61-24	ALL
	15		W0855	205R	24		SPARE	ALL
	16		W0855	205B	24		SPARE	ALL
	17		W0855	FRB			SPARE	ALL
	18	UNUSED						ALL
	19		W0855	014	22		34-12-62	ALL
	20		W0855	015	22		34-12-62	ALL
	21	UNUSED						050-099, 155-199
	21		W0855	203R	24		SPARE	150-154, 275-299
	22	UNUSED						050-099, 155-199
	22		W0855	203B	24		SPARE	150-154, 275-299
	23	UNUSED						050-099, 155-199
	23		W0855	FRE			SPARE	150-154, 275-299
	24		W0855	064	24		31-31-18	ALL
	25		W0855	055	24		31-31-18	ALL
	26		W0855	066	24		31-31-18	ALL
	27		W0855	034	24		32-42-11	ALL
	28		W0855	028	22		34-12-62	ALL
	29		W0855	029	22		34-61-26	050-099
	29		W0855	029	24		34-61-26	150-199, 275-299
	30		W0855	030	22		34-61-24	ALL
	31		W0855	031	24		34-12-22	ALL
	32		W0855	032	22		34-61-21	ALL
	33		W0855	213R	24		22-14-21	ALL
	34		W0855	213B	24		22-14-21	ALL
	35	UNUSED						050-099, 155-199
	35		W0855	209R	24		SPARE	150-154, 275-299
	36	UNUSED						050-099, 155-199
	36		W0855	209B	24		SPARE	150-154, 275-299
	37	UNUSED						050-099, 155-199
	37		W0855	FRF			SPARE	150-154, 275-299
	38		W0855	FRM			22-14-21	ALL
	39		W0855	039	24		34-61-26	ALL
	40		W0855	060	24		31-31-18	ALL
	41		W0855	078	24		31-31-18	ALL
	42		W0855	002	22		SPARE	ALL
	43		W0855	003	24		SPARE	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04900

Page 81

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04965J		AF0120/ /		RCPT-P3 (continued)				ALL
	44		W0855	004	24		SPARE	ALL
	45		W0855	005	24		SPARE	ALL
	46		W0855	007	24		31-31-19	ALL
	47		W0855	035	24		31-31-19	ALL
	48		W0855	210R	24		SPARE	ALL
	49		W0855	210B	24		SPARE	ALL
	50		W0855	FRJ			SPARE	ALL
	51		W0855	001	24		SPARE	ALL
	52		W0855	059	22		31-31-18	ALL
	53		W0855	212R	24		34-22-91	ALL
	54		W0855	212B	24		34-22-91	ALL
	55		W0855	FRG			34-22-93	050-099
	55		W0855	FRL			34-22-91	150-199, 275-299
CAP		Y	W0855	FRC			SPARE	ALL
REF			W0855	206	20		SPARE	ALL
REF			W0855	206Z			SPARE	ALL
REF			W0855	FRC			SPARE	ALL
REF		JW	W0855	206B	24		SPARE	ALL
REF		JW	W0855	206R	24		SPARE	ALL
			W0855	FRG			34-22-93	050-099
			W0855	202	20		34-13-21	ALL
			W0855	202Z			34-13-21	ALL
			W0855	204	20		34-61-24	ALL
			W0855	204Z			34-61-24	ALL
			W0855	205	20		SPARE	ALL
			W0855	205Z			SPARE	ALL
			W0855	210	20		SPARE	ALL
			W0855	210Z			SPARE	ALL
			W0855	212	20		34-22-91	ALL
			W0855	212Z			34-22-91	ALL
			W0855	213	20		22-14-21	ALL
			W0855	213Z			22-14-21	ALL
			W0855	FRA			34-13-21	ALL
			W0855	FRB			SPARE	ALL
			W0855	FRD			34-61-24	ALL
			W0855	FRJ			SPARE	ALL
			W0855	FRM			22-14-21	ALL
			W0855	203	20		SPARE	150-154, 275-299
			W0855	203Z			SPARE	150-154, 275-299
			W0855	209	20		SPARE	150-154, 275-299

HOOKUP LIST

D280T132

91-21-51

Section D04900

Page 82

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04965J		AF0120/ /		RCPT-P3 (continued)				ALL
			W0855	209Z			SPARE	150-154, 275-299
			W0855	FRE			SPARE	150-154, 275-299
			W0855	FRF			SPARE	150-154, 275-299
			W0855	FRL			34-22-91	150-199, 275-299
D04965P		AF0120/ /		PLUG-P3				ALL
	1		W0031	101	24		31-31-18	ALL
	2		W0031	102	24		31-31-18	ALL
	3		W0031	103	24		31-31-18	ALL
	4		W0031	224R	22		34-12-21	ALL
	5		W0031	224B	22		34-12-21	ALL
	6		W0031	301R	24		34-12-21	ALL
	7		W0031	301B	24		34-12-21	ALL
	8		W0031	301Y	24		34-12-21	ALL
	9		W0031	227R	24		34-13-21	ALL
	10		W0031	227B	24		34-13-21	ALL
	11		W0031	227Z			34-13-21	ALL
	12		W0031	232R	24		34-61-24	ALL
	13		W0031	232B	24		34-61-24	ALL
	14		W0031	232Z			34-61-24	ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19		W0031	847	22		34-12-62	ALL
	20		W0031	848	22		34-12-62	ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24		W0031	104	24		31-31-18	ALL
	25		W0031	105	24		31-31-18	ALL
	26		W0031	106	24		31-31-18	ALL
	27		W0031	176	24		32-42-11	ALL
	28		W0031	178	22		34-12-62	ALL
	29		W0031	738	24		34-61-26	ALL
	30		W0031	808	22		34-22-36	ALL
	31		W0031	605	24		34-12-22	ALL
	32		W0031	743	24		34-61-26	ALL
	33		W0031	229R	24		22-14-21	ALL
	34		W0031	229B	24		22-14-21	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04900

Page 83

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04965P		AF0120/ /		PLUG-P3 (continued)				ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38		W0031	229Z			22-14-21	ALL
	39		W0031	709	24		34-61-26	ALL
	40		W0031	107	24		31-31-18	ALL
	41		W0031	108	24		31-31-18	ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46		W0031	188	24		31-31-19	ALL
	47		W0031	189	24		31-31-19	ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52		W0031	109	22		31-31-18	ALL
	53		W0031	249R	24		34-22-91	ALL
	54		W0031	249B	24		34-22-91	ALL
	55		W0031	249Z			34-22-91	ALL
D04966J		AF0111/ /		RCPT-P5				ALL
	1		W0584	001	22		30-43-11	ALL
	2		W0584	028	20		21-45-11	ALL
	3		W0584	009	20		21-45-11	ALL
	4		W0584	027	16		30-42-11	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W0584	005	18		30-42-11	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10		W0584	025	18		30-42-11	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
D04966P		AF0111/ /		PLUG-P5				ALL
	1		W0062	56V	22		30-43-11	ALL

HOOKUP LIST
D280T132



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04966P		AF0111/ /		PLUG-P5 (continued)				ALL
	2		W0062	50T	20		21-45-11	ALL
	3		W0062	50U	20		21-45-11	ALL
	4		W0062	65H	16		30-42-11	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W0062	590	18		30-42-11	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10		W0062	584	18		30-42-11	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	DED		W0062	56VZ			30-43-11	ALL
D04967J		AC0604/ /		RCPT-E5-1				ALL
	1		W0855	001	24		SPARE	ALL
	2		W0855	002	22		SPARE	ALL
	3		W0855	003	24		SPARE	ALL
	4		W0855	004	24		SPARE	ALL
	5		W0855	005	24		SPARE	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8		W0855	210R	24		SPARE	ALL
	9		W0855	210B	24		SPARE	ALL
	10		W0855	210Z			SPARE	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13		W0855	212R	24		34-22-91	ALL
	14		W0855	212B	24		34-22-91	ALL
	15		W0855	212Z			34-22-91	ALL
	16	UNUSED						050-099
	17	UNUSED						050-099
	18	UNUSED						050-099
	19	UNUSED						050-099
	20	UNUSED						050-099
	21	UNUSED						050-099
	22	UNUSED						050-099
	23	UNUSED						050-099
	24	UNUSED						050-099

HOOKUP LIST
D280T132

91-21-51
Section D04900
Page 85
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04967P		AC0604/ /		PLUG-E5-1				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13		W0175	231R	24		34-22-91	ALL
	14		W0175	231B	24		34-22-91	ALL
	15		W0175	231Z			34-22-91	ALL
	16	UNUSED						050-099
	17	UNUSED						050-099
	18	UNUSED						050-099
	19	UNUSED						050-099
	20	UNUSED						050-099
	21	UNUSED						050-099
	22	UNUSED						050-099
	23	UNUSED						050-099
	24	UNUSED						050-099
D04968J		AF0111/ /		RCPT-P5				ALL
	1		W0608	001	20		SPARE	ALL
	2		W0608	002	20		SPARE	ALL
	3		W0608	003	20		33-42-21	050-099
	3	DL	W0608	003	18		33-42-21	150-199, 275-299
	4	UNUSED						050-099
	4		W0608	004	22		SPARE	150-199, 275-299
	5		W0608	005	22		30-21-11	ALL
	6		W0608	006	22		30-21-11	ALL
	7		W0608	007	24		30-21-11	050-099, 155-199, 275-299
	7		W0608	007	22		30-21-11	150-154
	8		W0608	008	20		SPARE	ALL
	9		W0608	009	20		SPARE	ALL
	10		W0608	010	24		33-42-21	ALL
	11	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D04900

Page 86

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04968J		AF0111/ /		RCPT-P5 (continued)				ALL
	12	UNUSED						ALL
	13		W0608	013	20		21-45-11	ALL
	14		W0608	014	20		21-45-11	ALL
	15		W0608	015	24		33-42-11	ALL
	16		W0608	078	22		30-21-11	050-099, 150-199
	16	UNUSED						275-299
	17		W0608	079	22		30-21-11	050-099, 150-199
	17	UNUSED						275-299
	18		W0608	080	22		30-21-11	050-099, 150-199
	18	UNUSED						275-299
	19	UNUSED						ALL
	20		W0608	082	22		30-21-11	050-099, 150-199
	20	UNUSED						275-299
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	DL	W0608	024	18		33-42-11	050-099
	24	FL	W0608	024	16		33-42-11	150-199, 275-299
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	FL	W0608	027	16		27-32-31	ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
D04968P		AF0111/ /		PLUG-P5				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W0062	58M	20		33-42-21	050-099
	3	DK	W0062	58M	18		33-42-21	150-199, 275-299
	4	UNUSED						ALL
	5		W0062	853	22		30-21-11	ALL
	6		W0062	851	22		30-21-11	ALL
	7		W0062	871	22		30-21-11	050-099, 150-199
	7		W0062	56D	24		30-21-11	275-299
	8	UNUSED						ALL
	9	UNUSED						ALL
	10		W0062	58L	24		33-42-21	ALL
	11	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D04900

Page 87

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04968P		AF0111/ /		PLUG-P5 (continued)				ALL
	12	UNUSED						ALL
	13		W0062	50T	20		21-45-11	ALL
	14		W0062	50U	20		21-45-11	ALL
	15		W0062	735	24		33-42-11	ALL
	16		W0062	820	22		30-21-11	050-099, 150-199
	16	UNUSED						275-299
	17		W0062	863	22		30-21-11	050-099, 150-199
	17	UNUSED						275-299
	18		W0062	870	24		30-21-11	050-099, 150-199
	18	UNUSED						275-299
	19		W0062	841	22		SPARE	050-099, 155-199
	19	UNUSED						150-154, 275-299
	20		W0062	872	22		30-21-11	050-099, 150-199
	20	UNUSED						275-299
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	DK	W0062	730	18		33-42-11	050-099
	24	FM	W0062	730	16		33-42-11	150-199, 275-299
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	FM	W0062	66T	16		27-32-31	ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
D04969J		AE0307/ /		RCPT-E1-6				ALL
	1		W1523	202R	24		SPARE	ALL
	2		W1523	202B	24		SPARE	ALL
	3		W1523	202Z			SPARE	ALL
	4		W1523	206R	24		34-22-38	ALL
	5		W1523	206B	24		34-22-38	ALL
	6		W1523	206Z			34-22-38	ALL
	7		W1523	205R	24		34-43-11	ALL
	8		W1523	205B	24		34-43-11	ALL
	9		W1523	205Z			34-43-11	ALL
	10		W1523	213R	24		34-22-18	ALL
	11		W1523	213B	24		34-22-18	ALL
	12		W1523	213Z			34-22-18	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04900

Page 88

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04969J		AE0307/ /		RCPT-E1-6 (continued)				ALL
	13		W1523	011	22		34-22-37	ALL
	14		W1523	012	22		SPARE	ALL
	15		W1523	013	22		SPARE	ALL
	16		W1523	005	22		34-22-17	ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20		W1523	006	24		34-21-31	ALL
	21	UNUSED						ALL
	22		W1523	211Z			22-21-11	ALL
	23		W1523	211R	24		22-21-11	ALL
	24		W1523	211B	24		22-21-11	ALL
	25		W1523	010	22		22-21-11	ALL
	26		W1523	214R	24		31-35-13	ALL
	27		W1523	214B	24		31-35-13	ALL
	28		W1523	214Z			31-35-13	ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32		W1523	034	22		34-21-31	ALL
	33		W1523	035	22		34-21-31	ALL
	34		W1523	036	22		34-21-31	ALL
	35	UNUSED						ALL
	36		W1523	209R	24		32-42-11	ALL
	37		W1523	209B	24		32-42-11	ALL
	38		W1523	209Z			32-42-11	ALL
	39		W1523	212R	24		34-22-81	ALL
	40		W1523	212B	24		34-22-81	ALL
	41		W1523	212Z			34-22-81	ALL
D04969P		AE0307/ /		PLUG-E1-6				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W0181	209R	24		34-22-38	ALL
	5		W0181	209B	24		34-22-38	ALL
	6		W0181	209Z			34-22-38	ALL
	7		W0181	214R	24		34-43-11	ALL
	8		W0181	214B	24		34-43-11	ALL
	9		W0181	214Z			34-43-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04900

Page 89

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04969P		AE0307/ /		PLUG-E1-6 (continued)				ALL
	10		W0181	212R	24		34-22-18	ALL
	11		W0181	212B	24		34-22-18	ALL
	12		W0181	212Z			34-22-18	ALL
	13		W0181	101	24		34-22-37	ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16		W0181	102	24		34-22-17	ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20		W0181	036	24		34-21-31	ALL
	21	UNUSED						ALL
	22		W0181	220Z			22-21-11	ALL
	23		W0181	220R	24		22-21-11	ALL
	24		W0181	220B	24		22-21-11	ALL
	25		W0181	038	22		22-21-11	ALL
	26		W0181	216R	24		31-35-13	ALL
	27		W0181	216B	24		31-35-13	ALL
	28		W0181	216Z			31-35-13	ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32		W0181	053	22		34-21-31	ALL
	33		W0181	055	22		34-21-31	ALL
	34		W0181	054	22		34-21-31	ALL
	35	UNUSED						ALL
	36		W0181	217R	24		32-42-11	ALL
	37		W0181	217B	24		32-42-11	ALL
	38		W0181	217Z			32-42-11	ALL
	39		W0181	210R	24		34-22-81	ALL
	40		W0181	210B	24		34-22-81	ALL
	41		W0181	210Z			34-22-81	ALL
D04970J		AF0112/ /		RCPT-P5				ALL
	1		W0586	001	22		30-43-11	ALL
	2		W0586	006	20		21-45-11	ALL
	3		W0586	009	20		21-45-11	ALL
	4		W0586	027	16		30-42-11	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D04900

Page 90

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04970J		AF0112/ /		RCPT-P5 (continued)				ALL
	7		W0586	005	18		30-42-11	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10		W0586	035	18		30-42-11	ALL
	11		W0586	020	24		21-58-16	ALL
	12		W0586	018	24		21-58-16	ALL
	13		W0586	019	24		21-58-16	ALL
	14		W0586	017	24		21-58-16	ALL
	CAP	Y	W0586	038	20		SPARE	ALL
D04970P		AF0112/ /		PLUG-P5				ALL
	1		W0066	56V	22		30-43-11	ALL
	2		W0066	50T	20		21-45-11	ALL
	3		W0066	50U	20		21-45-11	ALL
	4		W0066	65H	16		30-42-11	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W0066	590	18		30-42-11	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10		W0066	584	18		30-42-11	ALL
	11		W0066	52G	24		21-58-16	ALL
	12		W0066	52D	24		21-58-16	ALL
	13		W0066	52E	24		21-58-16	ALL
	14		W0066	52F	24		21-58-16	ALL
	DED		W0066	56VZ			30-43-11	ALL
D04972J		AF0112/ /		RCPT-P5				ALL
	1		W0610	001	20		SPARE	ALL
	2		W0610	002	22		SPARE	ALL
	3	UNUSED						ALL
	4		W0610	004	22		33-45-11	ALL
	5	UNUSED						050-099, 155-199
	5		W0610	005	22		SPARE	150-154
	5		W0610	005	22		30-21-11	275-299
	6		W0610	006	22		30-21-11	ALL
	7		W0610	007	24		30-21-11	ALL
	8	UNUSED						ALL
	9		W0610	009	20		33-43-11	050-099
	9	DL	W0610	009	18		33-43-11	150-199, 275-299

HOOKUP LIST
D280T132

91-21-51
Section D04900
Page 91
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04972J		AF0112/ /		RCPT-P5 (continued)				ALL
	10	UNUSED						ALL
	11		W0610	011	20		33-42-21	050-099
	11	DL	W0610	011	18		33-42-21	150-199, 275-299
	12		W0610	012	20		33-44-11	ALL
	13		W0610	013	20		21-45-11	ALL
	14		W0610	014	20		21-45-11	ALL
	15	UNUSED						ALL
	16		W0610	027	22		30-21-11	050-099, 150-199
	16	UNUSED						275-299
	17		W0610	028	22		30-21-11	050-099, 150-199
	17	UNUSED						275-299
	18		W0610	029	22		30-21-11	050-099, 150-199
	18	UNUSED						275-299
	19		W0610	030	22		30-21-11	050-099, 150-199
	19	UNUSED						275-299
	20		W0610	031	22		30-21-11	050-099, 150-199
	20	UNUSED						275-299
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	DL	W0610	024	18		33-42-11	050-099
	24	FL	W0610	024	16		33-42-11	150-199, 275-299
	25		W0610	025	20		33-42-11	ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
D04972P		AF0112/ /		PLUG-P5				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W0066	58V	22		33-45-11	ALL
	5		W0066	855	22		SPARE	050-099, 155-199
	5	UNUSED						150-154
	5		W0066	855	22		30-21-11	275-299
	6		W0066	832	22		30-21-11	050-099, 150-199
	6		W0066	845	22		30-21-11	275-299

HOOKUP LIST

D280T132

91-21-51

Section D04900

Page 92

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04972P		AF0112/ /		PLUG-P5 (continued)				ALL
	7		W0066	830	24		30-21-11	050-099, 150-199
	7		W0066	56D	24		30-21-11	275-299
	8	UNUSED						ALL
	9		W0066	58T	20		33-43-11	050-099
	9	DK	W0066	58T	18		33-43-11	150-199, 275-299
	10	UNUSED						ALL
	11		W0066	632	20		33-42-21	050-099
	11	DK	W0066	632	18		33-42-21	150-199, 275-299
	12		W0066	726	20		33-44-11	ALL
	13		W0066	50T	20		21-45-11	ALL
	14		W0066	50U	20		21-45-11	ALL
	15	UNUSED						ALL
	16		W0066	828	22		30-21-11	050-099, 150-199
	16	UNUSED						275-299
	17		W0066	846	22		30-21-11	050-099, 150-199
	17	UNUSED						275-299
	18		W0066	802	22		30-21-11	050-099, 150-199
	18	UNUSED						275-299
	19		W0066	56D	24		30-21-11	050-099, 150-199
	19	UNUSED						275-299
	20		W0066	829	24		30-21-11	050-099, 150-199
	20	UNUSED						275-299
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	DK	W0066	730	18		33-42-11	050-099
	24	FM	W0066	730	16		33-42-11	150-199, 275-299
	25		W0066	58N	20		33-42-11	ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
D04978J		AE0202/ /		RCPT-				ALL
	1		W1078	042	24		21-25-11	ALL
	2		W1078	040	24		21-25-11	ALL
	3		W1078	044	24		21-25-11	ALL
	4		W1078	045	24		21-25-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04900

Page 93

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04978J		AE0202/ /		RCPT- (continued)				ALL
	5		W1078	008	24		21-51-21	ALL
	6		W1078	114	24		21-51-21	050, 150-154, 275-276
	6	UNUSED						051-099, 155-199, 277-299
	7		W1078	727	24		21-25-11	ALL
	8		W1078	524	24		21-58-12	ALL
	9		W1078	007	24		21-51-11	ALL
	10		W1078	034	24		21-51-21	050-099, 150-199
	10		W1078	034	24		21-51-11	275-299
	11	UNUSED						ALL
	12		W1078	718	24		21-25-11	ALL
	13		W1078	517	24		21-58-11	ALL
	14		W1078	525	24		21-58-12	ALL
	15		W1078	502	24		21-51-11	ALL
	16		W1078	031	24		21-51-11	ALL
	17		W1078	018	24		21-51-11	ALL
	18		W1078	019	24		21-51-11	ALL
	19	UNUSED						ALL
	20		W1078	015	24		21-51-11	ALL
	21		W1078	500	24		21-51-11	ALL
	22		W1078	014	24		21-51-11	ALL
	23		W1078	036	24		21-51-21	050-099, 166-199, 275-299
	23		W1078	036	22		21-51-21	150-165
	24	UNUSED						ALL
	25		W1078	066	24		21-53-22	ALL
	26		W1078	749	24		21-58-11	ALL
	27		W1078	068	24		21-53-22	ALL
	28		W1078	069	24		21-53-22	ALL
	29		W1078	070	24		21-53-22	ALL
	30		W1078	064	24		21-53-22	ALL
	31	UNUSED						ALL
	32		W1078	109	24		73-21-17	ALL
	33		W1078	518	24		21-51-11	ALL
	34		W1078	032	24		21-51-21	ALL
	35	UNUSED						050-099, 155-199, 275-299
	35		W1078	006	24		21-28-11	150-154
	36		W1078	023	24		21-51-11	ALL
	37		W1078	526	24		21-58-12	ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40		W1078	763Z			73-21-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04900

Page 94

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04978J		AE0202/ /		RCPT- (continued)				ALL
	41		W1078	763	24		73-21-11	ALL
	42		W1078	507R	22		26-18-12	ALL
	43		W1078	508R	22		26-18-12	ALL
	44		W1078	528R	22		26-18-12	ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48		W1078	532	24		21-58-12	ALL
	49		W1078	027	24		73-21-15	ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53		W1078	621	22		21-66-11	050-099, 162-199 150-157, 275-299
	54	UNUSED	W1078	138Z			73-21-12	ALL
	55		W1078	138	24		73-21-12	ALL
			W1078	109F	20		73-21-17	ALL
			W1078	109Z			73-21-17	ALL
D04978P		AE0202/ /		PLUG-				ALL
	1		W0510	069	24		21-25-11	ALL
	2		W0510	070	24		21-25-11	ALL
	3		W0510	071	24		21-25-11	ALL
	4		W0510	072	24		21-25-11	ALL
	5		W0510	544	24		21-51-11	ALL
	6		W0510	533	24		21-51-11	050, 150-154, 275-276
	6		W0510	533	24		SPARE	051-099, 155-199, 277-299
	7		W0510	193	24		21-25-11	ALL
	8		W0510	164	24		21-58-12	ALL
	9		W0510	530	24		21-51-11	ALL
	10		W0510	122	24		21-51-11	ALL
	11		W0510	123	24		SPARE	ALL
	12		W0510	124	22		21-25-11	ALL
	13		W0510	169	24		21-58-12	ALL
	14		W0510	165	24		21-58-12	ALL
	15		W0510	531	24		21-51-11	ALL
	16		W0510	128	24		21-51-11	ALL
	17		W0510	528	24		21-51-11	ALL
	18		W0510	529	24		21-51-11	ALL
	19	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D04900
Page 95
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04978P		AE0202/ /		PLUG- (continued)				ALL
	20		W0510	523	24		21-51-11	ALL
	21		W0510	525	24		21-51-11	ALL
	22		W0510	524	24		21-51-11	ALL
	23		W0510	532	24		21-51-11	ALL
	24	UNUSED						ALL
	25		W0510	156	24		21-53-22	ALL
	26		W0510	705	24		21-58-11	ALL
	27		W0510	158	24		21-53-22	ALL
	28		W0510	159	24		21-53-22	ALL
	29		W0510	160	24		21-53-22	ALL
	30		W0510	161	24		21-53-22	ALL
	31		W0510	151	24		SPARE	ALL
	32		W0510	214B	20		73-21-17	ALL
	33		W0510	526	24		21-51-11	ALL
	34		W0510	534	24		21-51-11	ALL
	35	UNUSED						ALL
	36		W0510	527	24		21-51-11	ALL
	37		W0510	166	24		21-58-12	ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40		W0510	138Z			73-21-11	ALL
	41		W0510	138	24		73-21-11	ALL
	42		W0510	502R	22		26-18-12	ALL
	43		W0510	503R	22		26-18-12	ALL
	44		W0510	504R	22		26-18-12	ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48		W0510	194	24		21-58-12	ALL
	49		W0510	551	24		73-21-15	ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53		W0510	558	22		21-66-11	050-099, 162-199
	53	UNUSED						150-157, 275-299
	54		W0510	214Z			73-21-12	ALL
	55		W0510	214R	20		73-21-12	ALL
D04981J		SHELF/E01/01		RCPT-MODAL SUPPRESSION ACCELEROMETER				150-199, 275-299
	1		W0111	228B	22		22-21-11	150-199, 275-299

HOOKUP LIST

D280T132

91-21-51

Section D04900

Page 96

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04981J		SHELF/E01/01		RCPT-MODAL SUPPRESSION ACCELEROMETER (continued)				150-199, 275-299
	2		W0111	228R	22		22-21-11	150-199, 275-299
	3		W0111	184	22		22-21-11	150-199, 275-299
	4		W0111	229R	22		22-21-11	150-199, 275-299
	5		W0111	229B	22		22-21-11	150-199, 275-299
	6	UNUSED						150-199, 275-299
	7		W0111	FRA			22-21-11	150-199, 275-299
	8	UNUSED						150-199, 275-299
	9	UNUSED						150-199, 275-299
	10	UNUSED						150-199, 275-299
	11	UNUSED						150-199, 275-299
	12	UNUSED						150-199, 275-299
	13	UNUSED						150-199, 275-299
	14	UNUSED						150-199, 275-299
	15	UNUSED						150-199, 275-299
			W0111	229	20		22-21-11	150-199, 275-299
			W0111	229Z			22-21-11	150-199, 275-299
			W0111	FRA			22-21-11	150-199, 275-299
D04981P		AE0303/ /		PLUG-MODAL SUPPRESSION ACCELEROMETER				150-199, 275-299
	1		W0741	201B	22		22-21-11	150-199, 275-299
	2		W0741	201R	22		22-21-11	150-199, 275-299
	3		W0741	101	22		22-21-11	150-199, 275-299
	4		W0741	202R	22		22-21-11	150-199, 275-299
	5		W0741	202B	22		22-21-11	150-199, 275-299
	6		W0741	102	22		22-21-11	150-199, 275-299
	7		W0741	202Z			22-21-11	150-199, 275-299
	8	UNUSED						150-199, 275-299
	9	UNUSED						150-199, 275-299
	10	UNUSED						150-199, 275-299
	11	UNUSED						150-199, 275-299
	12	UNUSED						150-199, 275-299
	13	UNUSED						150-199, 275-299
	14	UNUSED						150-199, 275-299
	15	UNUSED						150-199, 275-299
D04982J		AF0117/ /		RCPT-P7				ALL
	1		W0051	020	24		33-11-11	ALL
	2		W0051	021	24		33-11-11	ALL
	3		W0051	211B	24		33-11-11	ALL
	4		W0051	215B	24		33-11-11	ALL

HOOKUP LIST
D280T132

91-21-51
Section D04900
Page 97
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04982J		AF0117/ /		RCPT-P7 (continued)				ALL
	5		W0051	215R	24		33-11-11	ALL
	6		W0051	216B	24		33-11-11	ALL
	7		W0051	216R	24		33-11-11	ALL
	8		W0051	211Z			33-11-11	ALL
	9		W0051	211R	24		33-11-11	ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12		W0051	214B	24		33-11-11	ALL
	13		W0051	214R	24		33-11-11	ALL
	14		W0051	213B	24		33-11-11	ALL
	15		W0051	213R	24		33-11-11	ALL
	16		W0051	027	20		33-11-13	ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19		W0051	212B	24		33-11-11	ALL
	20		W0051	212R	24		33-11-11	ALL
	21		W0051	106	22		33-16-16	ALL
	22		W0051	105	22		33-16-16	ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	DK	W0051	087	18		33-13-17	ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29		W0051	306R	24		33-13-11	ALL
	30		W0051	306B	24		33-13-11	ALL
	31		W0051	306Y	24		33-13-11	ALL
D04982P		AF0117/ /		PLUG-				ALL
	1		W1052	024	22		33-11-11	ALL
	2		W1052	025	22		33-11-11	ALL
	3		W1052	206B	24		33-11-11	ALL
	4		W1052	203B	24		33-11-11	ALL
	5		W1052	203R	24		33-11-11	ALL
	6		W1052	204B	24		33-11-11	ALL
	7		W1052	204R	24		33-11-11	ALL
	8		W1052	206Z			33-11-11	ALL
	9		W1052	206R	24		33-11-11	ALL
	10	UNUSED						ALL
	11	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D04900

Page 98

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04982P		AF0117/ /		PLUG- (continued)				ALL
	12		W1052	205B	24		33-11-11	ALL
	13		W1052	205R	24		33-11-11	ALL
	14		W1052	208B	24		33-11-11	ALL
	15		W1052	208R	24		33-11-11	ALL
	16		W1052	B-A			33-11-13	ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19		W1052	209B	24		33-11-11	ALL
	20		W1052	209R	24		33-11-11	ALL
	21		W1052	013	22		33-16-16	ALL
	22		W1052	014	22		33-16-16	ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26		W1052	021	20		33-13-17	ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29		W1052	302R	24		33-13-11	ALL
	30		W1052	302B	24		33-13-11	ALL
	31		W1052	302Y	24		33-13-11	ALL
	DED		W1052	013Z			33-16-16	ALL
	DED		W1052	014Z			33-16-16	ALL
D04983J		SHELF/E02/01		RCPT-MODAL SUPPRESSION ACCELEROMETER				150-199, 275-299
	1		W0131	230B	22		22-21-21	150-199, 275-299
	2		W0131	230R	22		22-21-21	150-199, 275-299
	3		W0131	196	22		22-21-21	150-199, 275-299
	4		W0131	231R	22		22-21-21	150-199, 275-299
	5		W0131	231B	22		22-21-21	150-199, 275-299
	6	UNUSED						150-199, 275-299
	7		W0131	FRA			22-21-21	150-199, 275-299
	8	UNUSED						150-199, 275-299
	9	UNUSED						150-199, 275-299
	10	UNUSED						150-199, 275-299
	11	UNUSED						150-199, 275-299
	12	UNUSED						150-199, 275-299
			W0131	231	20		22-21-21	150-199, 275-299
			W0131	231Z			22-21-21	150-199, 275-299
			W0131	FRA			22-21-21	150-199, 275-299

HOOKUP LIST
D280T132

91-21-51
Section D04900
Page 99
Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04983P		SHELF/E02/01		PLUG-MODAL SUPPRESSION ACCELEROMETER				150-199, 275-278
D04983P		AE308/ /		PLUG-MODAL SUPPRESSION ACCELEROMETER				280-299
	1		W0743	201B	22		22-21-21	150-199, 275-299
	2		W0743	201R	22		22-21-21	150-199, 275-299
	3		W0743	101	22		22-21-21	150-199, 275-299
	4		W0743	202R	22		22-21-21	150-199, 275-299
	5		W0743	202B	22		22-21-21	150-199, 275-299
	6		W0743	102	22		22-21-21	150-199, 275-299
	7		W0743	202Z			22-21-21	150-199, 275-299
	8	UNUSED						150-199, 275-299
	9	UNUSED						150-199, 275-299
	10	UNUSED						150-199, 275-299
	11	UNUSED						150-199, 275-299
	12	UNUSED						150-199, 275-299
D04984J		AF0118/ /		RCPT-P7				ALL
	1		W0051	014	24		33-11-11	ALL
	2		W0051	015	24		33-11-11	ALL
	3		W0051	206B	24		33-11-11	ALL
	4		W0051	208B	24		33-11-11	ALL
	5		W0051	208R	24		33-11-11	ALL
	6		W0051	209B	24		33-11-11	ALL
	7		W0051	209R	24		33-11-11	ALL
	8		W0051	206Z			33-11-11	ALL
	9		W0051	206R	24		33-11-11	ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12		W0051	207B	24		33-11-11	ALL
	13		W0051	207R	24		33-11-11	ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16		W0051	026	20		33-11-13	ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21		W0051	103	22		33-16-16	ALL
	22		W0051	104	22		33-16-16	ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D04900

Page 100

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04984J		AF0118/ /		RCPT-P7 (continued)				ALL
	26	DK	W0051	084	18		33-13-17	ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29		W0051	308R	24		33-13-13	ALL
	30		W0051	308B	24		33-13-13	ALL
	31		W0051	308Y	24		33-13-13	ALL
	DED		W0051	103Z			33-16-16	ALL
	DED		W0051	308Z			33-13-13	ALL
D04984P		AF0118/ /		PLUG-				ALL
	1		W1054	024	22		33-11-11	ALL
	2		W1054	025	22		33-11-11	ALL
	3		W1054	206B	24		33-11-11	ALL
	4		W1054	203B	24		33-11-11	ALL
	5		W1054	203R	24		33-11-11	ALL
	6		W1054	204B	24		33-11-11	ALL
	7		W1054	204R	24		33-11-11	ALL
	8		W1054	206Z			33-11-11	ALL
	9		W1054	206R	24		33-11-11	ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12		W1054	205B	24		33-11-11	ALL
	13		W1054	205R	24		33-11-11	ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16		W1054	B-A			33-11-13	ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21		W1054	013	22		33-16-16	ALL
	22		W1054	014	22		33-16-16	ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26		W1054	021	20		33-13-17	ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29		W1054	302R	24		33-13-13	ALL
	30		W1054	302B	24		33-13-13	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04900

Page 101

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04984P		AF0118/ /		PLUG- (continued)				ALL
	31		W1054	302Y	24		33-13-13	ALL
	DED		W1054	013Z			33-16-16	ALL
	DED		W1054	014Z			33-16-16	ALL
D04986J		AF0204/ /		RCPT-P61				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16		W0070	05H	16		33-11-14	ALL
	17	UNUSED						ALL
	18		W0070	05G	16		33-11-14	ALL
	19	UNUSED						ALL
	20		W0070	04N	12		32-35-11	ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
D04986P		AF0204/ /		PLUG-P61				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D04900
Page 102
Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04986P		AF0204/ /		PLUG-P61 (continued)				ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16		W0634	016	16		33-11-14	ALL
	17	UNUSED						ALL
	18		W0634	018	16		33-11-14	ALL
	19	UNUSED						ALL
	20		W0634	530	12		32-35-11	ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25		W0634	803	22		SPARE	ALL
D04988J		AL1007/ /		RCPT-				ALL
	1		W0596	016	22		32-41-11	ALL
	2		W0596	015	22		32-41-11	ALL
	3		W0596	131	22		29-32-11	ALL
	4		W0596	132	20		29-32-11	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W0596	126	22		29-11-32	ALL
	8		W0596	127	20		29-11-32	ALL
	9		W0596	129	22		29-11-32	ALL
	10		W0596	128	20		29-11-32	ALL
	11		W0596	130	22		29-11-32	ALL
	12		W0596	146	20		29-32-11	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
D04988P		AL1007/ /		PLUG-				ALL
	1		W1212	001	18		32-41-11	ALL
	2		W1212	002	18		32-41-11	ALL
	3		W1212	020	18		29-32-11	ALL
	4		W1212	021	18		29-32-11	ALL
	5	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D04900
Page 103
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04988P		AL1007/ /		PLUG- (continued)				ALL
	6	UNUSED						ALL
	7		W1212	015	18		29-11-32	ALL
	8		W1212	016	18		29-11-32	ALL
	9		W1212	017	20		29-11-32	ALL
	10		W1212	018	20		29-11-32	ALL
	11		W1212	019	20		29-11-32	ALL
	12		W1212	024	18		29-32-11	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
D04990J		AF0204/ /		RCPT-P61				ALL
	1		W0062	59W	22		33-16-12	ALL
	2		W0062	59X	22		33-16-12	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11		W0062	59R	24		33-14-21	ALL
	12		W0062	59N	24		33-13-11	ALL
	13		W0062	59S	24		33-14-31	ALL
	14		W0062	59T	24		33-14-31	ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17		W0062	889	22		29-21-32	ALL
	18		W0062	04D	22		29-21-32	ALL
	19	UNUSED						ALL
	20		W0062	04F	22		29-21-32	ALL
	21	UNUSED						ALL
	22		W0062	005	22		29-21-32	ALL
	23		W0062	53T	22		29-21-32	ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28		W0062	64V	24		32-61-14	ALL
	29		W0062	64W	24		32-61-14	ALL

HOOKUP LIST
D280T132

91-21-51
Section D04900
Page 104
Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04990J		AF0204/ /		RCPT-P61 (continued)				ALL
	30		W0062	64X	24		32-61-14	ALL
	31	UNUSED						ALL
	DED		W0062	59XZ			33-16-12	ALL
D04990P		AF0204/ /		PLUG-P61				ALL
	1		W0632	060	22		33-16-12	ALL
	2		W0632	070	22		33-16-12	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11		W0632	031	24		33-14-21	ALL
	12		W0632	045	24		33-13-11	ALL
	13		W0632	036	24		33-14-31	ALL
	14		W0632	041	24		33-14-31	ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17		W0632	101	22		29-21-32	ALL
	18		W0632	100	22		29-21-32	ALL
	19		W0632	093	22		SPARE	ALL
	20		W0632	094	22		29-21-32	ALL
	21		W0632	095	22		SPARE	ALL
	22		W0632	096	22		29-21-32	ALL
	23		W0632	097	22		29-21-32	ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28		W0632	804	24		32-61-14	ALL
	29		W0632	805	24		32-61-14	ALL
	30		W0632	806	24		32-61-14	ALL
	31	UNUSED						ALL
	DED		W0632	070Z			33-16-12	ALL
D04992J		AE0209/ /		RCPT-P36				ALL
	1		W0184	503	22		32-41-11	ALL

HOOKUP LIST
D280T132

91-21-51
Section D04900
Page 105
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04992J		AE0209/ /		RCPT-P36 (continued)				ALL
	2		W0184	114	22		28-21-12	ALL
	3		W0184	135	22		28-21-12	ALL
	4		W0184	082	22		32-44-11	ALL
	5		W0184	131	22		28-21-12	ALL
	6		W0184	823	22		29-11-32	ALL
	7		W0184	079	24		32-44-11	ALL
	8	DK	W0184	071	18		32-44-11	ALL
	9		W0184	724	22		32-41-11	ALL
	10	DK	W0184	070	18		32-44-11	ALL
	11		W0184	207B	24		28-41-11	ALL
	12		W0184	081	22		32-44-11	ALL
	13	DK	W0184	702	18		29-11-32	ALL
	14		W0184	073	24		32-44-11	ALL
	15		W0184	742	22		29-11-32	ALL
	16		W0184	777	22		29-11-32	ALL
	17		W0184	506	20		28-26-11	ALL
	18		W0184	507	22		32-41-11	ALL
	19		W0184	207R	24		28-41-11	ALL
	20		W0184	104	24		28-41-11	ALL
	21		W0184	674	24		29-11-32	ALL
	22	UNUSED						ALL
	23		W0184	672	24		29-11-32	ALL
	24		W0184	206B	24		28-41-11	ALL
	25		W0184	206R	24		28-41-11	ALL
	26		W0184	551	20		28-26-11	ALL
	27		W0184	553	20		28-26-11	ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30		W0184	569	20		28-26-11	ALL
	31		W0184	571	20		28-26-11	ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40		W0184	838	22		28-41-12	ALL
	41	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D04900

Page 106

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04992J		AE0209/ /		RCPT-P36 (continued)				ALL
	42		W0184	768	24		28-22-12	ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45		W0184	75Y	24		21-58-12	ALL
	46		W0184	078	24		21-58-16	ALL
	47		W0184	066	22		21-58-16	ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51		W0184	803	24		32-42-11	ALL
	52		W0184	804	24		32-42-11	ALL
	53		W0184	806	24		32-42-11	ALL
	54		W0184	807	24		32-42-11	ALL
	55	UNUSED						ALL
	DED		W0184	768Z			28-22-12	ALL
D04992P		AE0209/ /		PLUG-				ALL
	1		W0596	016	22		32-41-11	ALL
	2		W0596	067	22		28-21-12	ALL
	3		W0596	066	22		28-21-12	ALL
	4		W0596	004	22		32-44-11	ALL
	5		W0596	068	22		28-21-12	ALL
	6		W0596	098	20		29-11-32	ALL
	7		W0596	007	22		32-44-11	ALL
	8	DL	W0596	008	18		32-44-11	ALL
	9		W0596	015	22		32-41-11	ALL
	10	DL	W0596	010	18		32-44-11	ALL
	11		W0596	212B	24		28-41-11	ALL
	12		W0596	012	22		32-44-11	ALL
	13	DL	W0596	095	18		29-11-32	ALL
	14		W0596	014	22		32-44-11	ALL
	15		W0596	086	20		29-11-32	ALL
	16		W0596	085	20		29-11-32	ALL
	17		W0596	017	20		28-26-11	ALL
	18		W0596	143	22		32-41-11	ALL
	19		W0596	212R	24		28-41-11	ALL
	20		W0596	144	24		28-41-11	ALL
	21		W0596	096	24		29-11-32	ALL
	22	UNUSED						ALL
	23		W0596	102	24		29-11-32	ALL

HOOKUP LIST

D280T132

91-21-51
 Section D04900
 Page 107
 Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04992P		AE0209/ /		PLUG- (continued)				ALL
	24		W0596	216B	24		28-41-11	ALL
	25		W0596	216R	24		28-41-11	ALL
	26		W0596	113	20		28-26-11	ALL
	27		W0596	114	20		28-26-11	ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30		W0596	117	20		28-26-11	ALL
	31		W0596	118	20		28-26-11	ALL
	32	UNUSED						ALL
	33	UNUSED						050-099, 275-299
	33		W0596	218R	22		SPARE	150-199
	34	UNUSED						050-099, 275-299
	34		W0596	218B	22		SPARE	150-199
	35	UNUSED						050-099, 275-299
	35		W0596	219R	22		SPARE	150-199
	36	UNUSED						050-099, 275-299
	36		W0596	219B	22		SPARE	150-199
	37	UNUSED						050-099, 275-299
	37		W0596	050	22		SPARE	150-199
	38	UNUSED						ALL
	39	UNUSED						ALL
	40		W0596	024	22		28-41-12	ALL
	41	UNUSED						ALL
	42		W0596	501	24		28-22-12	ALL
	43	UNUSED						050-099, 155-199, 277-299
	43		W0596	502	24		SPARE	150-154, 275-276
	44	UNUSED						050-099, 155-199, 277-299
	44		W0596	503	24		SPARE	150-154, 275-276
	45		W0596	025	24		21-58-15	ALL
	46		W0596	018	24		21-58-16	ALL
	47		W0596	019	22		21-58-16	ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51		W0596	154	24		32-42-11	ALL
	52		W0596	155	24		32-42-11	ALL
	53		W0596	156	24		32-42-11	ALL
	54		W0596	157	24		32-42-11	ALL
	55	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D04900

Page 108

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04994J		AF0204/ /		RCPT-P61				ALL
	1		W0066	59W	22		33-16-12	ALL
	2		W0066	59X	22		33-16-12	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W0066	59Z	22		33-16-12	ALL
	7		W0066	202B	20		21-65-11	ALL
	8		W0066	202R	20		21-65-11	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11		W0066	58P	20		33-42-11	ALL
	12		W0066	52M	24		21-61-11	ALL
	13		W0066	59N	22		33-13-13	ALL
	14		W0066	59P	24		33-13-17	ALL
	15		W0066	307B	24		33-13-17	ALL
	16		W0066	307R	24		33-13-17	ALL
	17		W0066	307Y	24		33-13-17	ALL
	18		W0066	82C	24		33-14-11	ALL
	19	UNUSED						ALL
	20	FM	W0066	08G	16		33-11-14	ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	DED		W0066	59XZ			33-16-12	ALL
	DED		W0066	59ZZ			33-16-12	ALL
D04994P		AF0204/ /		PLUG-P61				ALL
	1		W0638	060	22		33-16-12	ALL
	2		W0638	070	22		33-16-12	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D04900

Page 109

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04994P		AF0204/ /		PLUG-P61 (continued)				ALL
	6		W0638	071	22		33-16-12	ALL
	7		W0638	201B	20		21-65-11	ALL
	8		W0638	201R	20		21-65-11	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11		W0638	001	20		33-42-11	ALL
	12		W0638	002	24		21-61-11	ALL
	13		W0638	015	22		33-13-13	ALL
	14		W0638	016	24		33-13-17	ALL
	15		W0638	302B	24		33-13-17	ALL
	16		W0638	302R	24		33-13-17	ALL
	17		W0638	302Y	24		33-13-17	ALL
	18		W0638	100	24		33-14-11	ALL
	19	UNUSED						ALL
	20	FL	W0638	013	16		33-11-14	ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28		W0638	801	22		SPARE	ALL
	29		W0638	802	22		SPARE	ALL
	30		W0638	803	22		SPARE	ALL
	31		W0638	804	22		SPARE	ALL
	DED		W0638	070Z			33-16-12	ALL
	DED		W0638	071Z			33-16-12	ALL

HOOKUP LIST

D280T132

91-21-51

Section D04900

Page 110 End

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05000J		AF0203/ /		RCPT-P11				ALL
	1		W0040	109	20		21-31-11	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						050-099, 150-199, 275-276
	5	FM	W0040	741	16		25-31-31	277-299
	6	FM	W0040	729	16		27-32-31	ALL
	7	UNUSED						ALL
	8		W0040	038	24		21-65-11	ALL
	9		W0040	053	22		33-13-16	ALL
	10		W0040	357B	24		33-13-19	ALL
	11		W0040	011	24		29-11-22	ALL
	12		W0040	063	22		29-11-31	ALL
	13		W0040	516	20		28-31-11	050-099, 155-199, 276-299
	13	UNUSED						150-154, 275
	14	UNUSED						ALL
	15		W0040	717	24		74-31-11	ALL
	16		W0040	057	22		74-31-11	ALL
	17		W0040	761	24		33-13-16	ALL
	18		W0040	705	24		52-51-11	ALL
	19	UNUSED						ALL
	20		W0040	051	20		33-44-21	ALL
	21		W0040	195	18		30-42-11	ALL
	22		W0040	357R	24		33-13-19	ALL
	23		W0040	732	16		30-42-11	ALL
	24		W0040	357Y	24		33-13-19	ALL
	25	DK	W0040	050	18		33-42-11	050-099
	25	FM	W0040	050	16		33-42-11	150-199, 275-299
	26		W0040	085	24		33-42-11	ALL
	27		W0040	054	20		33-42-21	050-099
	27	DK	W0040	054	18		33-42-21	150-199, 275-299
	28	UNUSED						ALL
	29		W0040	728	24		33-13-16	ALL
	30	FM	W0040	088	16		25-31-21	ALL
	31		W0040	065	24		30-21-11	ALL
	32	UNUSED						ALL
	33		W0040	058	22		30-43-11	ALL
	34	UNUSED						ALL
	35		W0040	70E	20		29-11-14	ALL
	36	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D05000

Page 1

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05000J		AF0203/ /		RCPT-P11 (continued)				ALL
	37		W0040	143	24		28-22-11	ALL
	38		W0040	131	24		28-22-12	ALL
	39	UNUSED						ALL
	DED		W0040	063Z			29-11-31	ALL
D05000P		AF0203/ /		PLUG-P11				ALL
	1		W0062	069	20		21-31-11	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						050-099, 150-199, 275-276
	5	FL	W0062	698	16		25-31-31	277-299
	6	FL	W0062	66T	16		27-32-31	ALL
	7	UNUSED						ALL
	8		W0062	03C	24		21-65-11	ALL
	9		W0062	10A	22		33-13-16	ALL
	10		W0062	312B	24		33-13-19	ALL
	11		W0062	008	24		29-11-22	ALL
	12		W0062	886	22		29-11-31	ALL
	13		W0062	700	20		28-31-11	050-099, 155-199, 276-299
	13	UNUSED						150-154, 275
	14	UNUSED						ALL
	15		W0062	62C	24		74-31-11	ALL
	16		W0062	570	22		74-31-11	ALL
	17		W0062	10N	24		33-13-16	ALL
	18		W2214	003	24		52-51-11	050-099, 150-163, 166-199, 275-299
	18	UNUSED						164-165
	19	UNUSED						ALL
	20		W0062	725	20		33-44-21	ALL
	21		W0062	587	18		30-42-11	ALL
	22		W0062	312R	24		33-13-19	ALL
	23		W0062	65H	16		30-42-11	ALL
	24		W0062	312Y	24		33-13-19	ALL
	25	DL	W0062	731	18		33-42-11	050-099
	25	FL	W0062	731	16		33-42-11	150-199, 275-299
	26		W0062	58N	24		33-42-11	ALL
	27		W0062	58K	20		33-42-21	050-099
	27	DL	W0062	58K	18		33-42-21	150-199, 275-299
	28	UNUSED						ALL
	29		W0062	66S	24		33-13-16	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05000

Page 2

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05000P		AF0203/ /		PLUG-P11 (continued)				ALL
	30		W0062	684	20		25-31-21	050-099, 150-199
	30	FL	W0062	684	16		25-31-21	275-299
	31		W0062	847	24		30-21-11	ALL
	32	UNUSED						ALL
	33		W0062	588	22		30-43-11	ALL
	34	UNUSED						ALL
	35		W0062	70E	20		29-11-14	ALL
	36	UNUSED						ALL
	37		W0062	610	24		28-22-11	ALL
	38		W0062	629	24		28-22-12	050-099, 155-199, 276-299
	38		W0062	613	24		28-22-12	150-154, 275
	39	UNUSED						ALL
	CAP	Y	W0062	638	24		SPARE	152, 154, 156, 162, 166-199
	DED		W0062	886Z			29-11-31	ALL
D05001J		AE0322/ /		RCPT-E2-5				ALL
	1		W0863	001	22		23-42-11	ALL
	2		W0863	002	22		23-42-11	ALL
	3		W0863	003	22		23-42-11	ALL
	4		W0863	004	22		23-42-11	ALL
	5		W0863	005	22		23-42-11	ALL
	6		W0863	005Z			23-42-11	ALL
	7		W0863	046	22		23-42-11	ALL
	8		W0863	038	24		23-22-11	ALL
	9		W0863	068	22		23-42-11	050-099, 162-199
	9	UNUSED						150-157, 275-299
	10	UNUSED						ALL
	11		W0863	008	24		23-32-12	ALL
	12	UNUSED						050-099, 150-199, 275-278
	12		W0863	012	22		23-42-11	280-299
	13		W0863	015	22		23-43-11	ALL
	14		W0863	016	22		23-43-11	ALL
	15		W0863	017	22		23-43-11	ALL
	16		W0863	019	24		23-21-11	ALL
	17		W0863	020	24		23-21-11	ALL
	18		W0863	051	24		23-21-11	ALL
	19		W0863	022	24		23-21-11	ALL
	20		W0863	023	24		23-21-11	ALL
	21		W0863	024	24		23-21-11	ALL
	22		W0863	025	24		23-21-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05000

Page 3

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05001J		AE0322/ /		RCPT-E2-5 (continued)				ALL
	23		W0863	049	24		23-21-11	ALL
	24		W0863	027	24		23-21-11	ALL
	25		W0863	028	24		23-21-11	ALL
	26		W0863	029	24		23-21-11	ALL
	27		W0863	030	24		23-21-11	ALL
	28		W0863	048	24		23-21-11	ALL
	29		W0863	032	24		23-21-11	ALL
	30		W0863	033	24		23-21-11	ALL
	31		W0863	066	22		23-24-11	050-099, 150-199 275-299
	31	UNUSED						
	32		W0863	067	22		23-24-11	050-099, 150-199 275-299
	32	UNUSED						
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38		W0863	069	22		23-42-11	050-099, 162-199 150-157, 275-299
	38	UNUSED						
	39		W0863	070	22		23-42-11	050-099, 162-199 150-157, 275-299
	39	UNUSED						
	40		W0863	071	22		23-42-11	050-099, 162-199 150-157, 275-299
	40	UNUSED						
	41	UNUSED						ALL
D05001P		AE0322/ /		PLUG-E2-5				ALL
	1		W0139	098	22		23-42-11	ALL
	2		W0139	099	22		23-42-11	ALL
	3		W0139	100	22		23-42-11	ALL
	4		W0139	101	22		23-42-11	ALL
	5		W0139	102	22		23-42-11	ALL
	6		W0139	102Z	22		23-42-11	ALL
	7		W0139	716	22		23-42-11	ALL
	8		W0139	792	24		23-22-11	ALL
	9		W0139	650	22		23-42-11	050-099, 162-199 150-157, 275-299
	9	UNUSED						
	10	UNUSED						ALL
	11		W0139	773	24		23-32-12	ALL
	12	UNUSED						050-099, 150-199, 275-278 280-299
	12		W0139	109	22		23-42-11	280-299

HOOKUP LIST

D280T132

91-21-51

Section D05000

Page 4

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05001P		AE0322/ /		PLUG-E2-5 (continued)				ALL
	13		W0139	110	22		23-43-11	ALL
	14		W0139	111	22		23-43-11	ALL
	15		W0139	112	22		23-43-11	ALL
	16		W0139	022	24		23-21-11	ALL
	17		W0139	023	24		23-21-11	ALL
	18		W0139	027	24		23-21-11	ALL
	19		W0139	028	24		23-21-11	ALL
	20		W0139	029	24		23-21-11	ALL
	21		W0139	018	24		23-21-11	ALL
	22		W0139	019	24		23-21-11	ALL
	23		W0139	054	24		23-21-11	ALL
	24		W0139	030	24		23-21-11	ALL
	25		W0139	031	24		23-21-11	ALL
	26		W0139	020	24		23-21-11	ALL
	27		W0139	021	24		23-21-11	ALL
	28		W0139	032	24		23-21-11	ALL
	29		W0139	033	24		23-21-11	ALL
	30		W0139	034	24		23-21-11	ALL
	31		W0139	626	22		23-24-11	050-099, 150-199
	31	UNUSED						275-299
	32		W0139	627	22		23-24-11	050-099, 150-199
	32	UNUSED						275-299
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38		W0139	651	22		23-42-11	050-099, 162-199
	38	UNUSED						150-157, 275-299
	39		W0139	652	22		23-42-11	050-099, 162-199
	39	UNUSED						150-157, 275-299
	40		W0139	653	22		23-42-11	050-099, 162-199
	40	UNUSED						150-157, 275-299
	41	UNUSED						ALL
	DED		W0139	650Z			23-42-11	050-099, 162-199
D05006J		AF0203/ /		RCPT-P11				ALL
	1		W0042	015	20		21-31-21	ALL
	2		W0042	061	24		21-43-11	ALL
	3		W0042	060	24		21-43-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05000

Page 5

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05006J		AF0203/ /		RCPT-P11 (continued)				ALL
	4		W0042	159	24		21-44-11	ALL
	5		W0042	062	24		21-44-11	ALL
	6		W0042	186	24		21-44-21	ALL
	7		W0042	185	24		21-44-21	ALL
	8	UNUSED						ALL
	9		W0042	147	20		33-43-11	050-099
	9	DK	W0042	147	18		33-43-11	150-199, 275-299
	10	UNUSED						ALL
	11		W0042	035	24		29-11-12	ALL
	12		W0042	162	24		29-11-31	ALL
	13		W0042	537	20		28-31-11	050-099, 155-199, 276-299
	13	UNUSED						150-154, 275
	14		W0042	753	20		78-34-21	ALL
	15		W0042	756	20		78-34-21	ALL
	16		W0042	092	22		74-31-21	ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19		W0042	010	22		33-11-16	ALL
	20		W0042	141	20		33-44-11	ALL
	21		W0042	154	18		30-42-11	ALL
	22	UNUSED						ALL
	23		W0042	742	16		30-42-11	ALL
	24		W0042	152	20		33-43-11	050-099
	24	DK	W0042	152	18		33-43-11	150-199, 275-299
	25		W0042	149	20		33-42-11	ALL
	26	DK	W0042	138	18		33-42-11	050-099
	26	FM	W0042	138	16		33-42-11	150-199, 275-299
	27		W0042	188	20		33-42-21	050-099
	27	DK	W0042	188	18		33-42-21	150-199, 275-299
	28		W0042	145	20		33-41-11	050-099
	28	DK	W0042	145	18		33-41-11	150-199, 275-299
	29	UNUSED						ALL
	30		W0042	103	20		25-31-11	050-099
	30	DK	W0042	103	20		25-31-11	150-199
	30	FM	W0042	103	16		25-31-11	275-299
	31		W0042	748	24		30-21-11	ALL
	32		W0042	601	22		34-61-15	ALL
	33		W0042	139	22		30-43-11	ALL
	34	UNUSED						ALL
	35		W0042	778	20		78-34-21	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05000

Page 6

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05006J		AF0203/ /		RCPT-P11 (continued)				ALL
	36		W0042	150	20		22-21-21	ALL
	37		W0042	121	24		28-22-11	ALL
	38		W0042	115	24		28-22-12	ALL
	39		W0042	155	22		23-43-11	ALL
	DED		W0042	092Z			74-31-21	ALL
	DED		W0042	162Z			29-11-31	ALL
D05006P		AF0203/ /		PLUG-P11				ALL
	1		W0066	50E	20		21-31-21	ALL
	2		W0066	50N	24		21-43-11	ALL
	3		W0066	01E	24		21-43-11	050-099, 150-199
	3		W0066	01E	22		21-43-11	275-299
	4		W0066	50Y	24		21-44-11	ALL
	5		W0066	01P	24		21-44-11	ALL
	6		W0066	50H	24		21-44-21	ALL
	7		W0066	01Z	24		21-44-21	ALL
	8	UNUSED						ALL
	9		W0066	58R	20		33-43-11	050-099
	9	DL	W0066	58R	18		33-43-11	150-199, 275-299
	10	UNUSED						ALL
	11		W0066	008	24		29-11-12	ALL
	12		W0066	016	24		29-11-31	ALL
	13		W0066	700	20		28-31-11	050-099, 155-199, 276-299
	13	UNUSED						150-154, 275
	14		W0066	029	20		78-34-21	ALL
	15		W0066	030	20		78-34-21	ALL
	16		W0066	570	22		74-31-21	ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19		W0066	64A	22		33-11-16	ALL
	20		W0066	725	20		33-44-11	ALL
	21		W0066	587	18		30-42-11	ALL
	22	UNUSED						ALL
	23		W0066	65H	16		30-42-11	ALL
	24		W0066	737	20		33-43-11	050-099
	24	DL	W0066	737	18		33-43-11	150-199, 275-299
	25		W0066	58N	20		33-42-11	ALL
	26	DL	W0066	731	18		33-42-11	050-099
	26	FL	W0066	731	16		33-42-11	150-199, 275-299
	27		W0066	631	20		33-42-21	050-099

HOOKUP LIST

D280T132

91-21-51

Section D05000

Page 7

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05006P		AF0203/ /		PLUG-P11 (continued)				ALL
	27	DL	W0066	631	18		33-42-21	150-199, 275-299
	28		W0066	727	20		33-41-11	050-099
	28	DL	W0066	727	18		33-41-11	150-199, 275-299
	29	UNUSED						050-099, 150-199, 275-278
	29	FL	W0066	667	16		SPARE	280-299
	30		W0066	657	20		25-31-11	050-099, 150-199
	30	FL	W0066	657	16		25-31-11	275-299
	31		W0066	848	24		30-21-11	ALL
	32		W0066	611	22		34-61-15	ALL
	33		W0066	588	22		30-43-11	ALL
	34	UNUSED						ALL
	35		W0066	64H	20		78-34-21	ALL
	36		W0066	63L	20		22-21-21	ALL
	37		W0066	610	24		28-22-11	ALL
	38		W0066	629	24		28-22-12	050-099, 155-199, 276-299
	38		W0066	613	24		28-22-12	150-154, 275
	39		W0066	61T	22		23-43-11	ALL
	DED		W0066	016Z			29-11-31	ALL
D05009J		AE0219/ /		RCPT-SHELL				ALL
	A01	\$D	W2002	CK01	24		99-99-99	050-099, 150-154, 275-276
	A01	\$D	W2002	CM01	24		SPARE	ALL
	A01	\$D	W2002	CK01	24		SPARE	155-199, 277-299
	A02	\$D	W2002	CK02	24		31-41-16	ALL
	A02	\$D	W2002	CM02	24		SPARE	ALL
	A03	\$D	W2002	CK03	24		31-41-31	ALL
	A03	\$D	W2002	CM03	24		SPARE	ALL
	A04	\$D	W2002	CK04	24		31-41-31	ALL
	A04	\$D	W2002	CM04	24		SPARE	ALL
	A05	\$D	W2002	CK05	24		31-41-31	ALL
	A05	\$D	W2002	CM05	24		SPARE	ALL
	A06	\$D	W2002	CK06	24		31-41-31	ALL
	A06	\$D	W2002	CM06	24		SPARE	ALL
	A07	\$D	W2002	CK07	24		31-41-31	ALL
	A07	\$D	W2002	CM07	24		SPARE	ALL
	A08	\$D	W2002	CK08	24		31-41-31	ALL
	A08	\$D	W2002	CM08	24		SPARE	ALL
	A09	\$D	W2002	CK09	24		22-14-31	ALL
	A09	\$D	W2002	CM09	24		22-14-31	ALL
	A10	\$D	W2002	CK10	24		77-35-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05000

Page 8

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05009J		AE0219/ /		RCPT-SHELL (continued)				ALL
	A10	\$D	W2002	CM10	24		77-35-11	ALL
	A11	\$D	W2002	CK11	24		SPARE	ALL
	A11	\$D	W2002	CM11	24		SPARE	ALL
	A12	\$D	W2002	CK12	24		22-32-12	ALL
	A12	\$D	W2002	CM12	24		22-32-12	ALL
	A13	\$D	W2002	CK13	24		22-32-12	ALL
	A13	\$D	W2002	CM13	24		22-32-12	ALL
	A14	\$D	W2002	CK14	24		22-32-12	ALL
	A14	\$D	W2002	CM14	24		22-32-12	ALL
	A15	\$D	W2002	CK15	24		22-34-11	ALL
	A15	\$D	W2002	CM15	24		22-34-11	ALL
	A16	\$D	W2002	CK16	24		22-41-13	ALL
	A16	\$D	W2002	CM16	24		22-41-13	ALL
	A17	\$D	W2002	CK17	24		22-41-13	ALL
	A17	\$D	W2002	CM17	24		22-41-13	ALL
	A18	\$D	W2002	CK18	24		22-41-13	ALL
	A18	\$D	W2002	CM18	24		22-41-13	ALL
	A19	\$D	W2002	CK19	24		31-31-11	ALL
	A19	\$D	W2002	CM19	24		31-31-11	ALL
	A20	\$D	W2002	CK20	24		99-99-99	050-099, 150-154, 275-276
	A20	\$D	W2002	CM20	24		99-99-99	050-099, 150-154, 275-276
	A20	\$D	W2002	CK20	24		SPARE	155-199, 277-299
	A20	\$D	W2002	CM20	24		SPARE	155-199, 277-299
	B01	\$D	W2002	CL01	24		99-99-99	050-099, 150-154, 275-276
	B01	\$D	W2002	CN01	24		SPARE	ALL
	B01	\$D	W2002	CL01	24		SPARE	155-199, 277-299
	B02	\$D	W2002	CL02	24		31-31-13	ALL
	B02	\$D	W2002	CN02	24		SPARE	ALL
	B03	\$D	W2002	CL03	24		31-31-13	ALL
	B03	\$D	W2002	CN03	24		SPARE	ALL
	B04	\$D	W2002	CL04	24		31-31-13	ALL
	B04	\$D	W2002	CN04	24		31-31-13	ALL
	B05	\$D	W2002	CL05	24		31-31-13	ALL
	B05	\$D	W2002	CN05	24		SPARE	ALL
	B06	\$D	W2002	CL06	24		31-51-41	ALL
	B06	\$D	W2002	CN06	24		SPARE	ALL
	B07	\$D	W2002	CL07	24		31-51-41	ALL
	B07	\$D	W2002	CN07	24		31-51-41	ALL
	B08	\$D	W2002	CL08	24		31-51-41	ALL
	B08	\$D	W2002	CN08	24		31-51-41	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05000

Page 9

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05009J		AE0219/ /		RCPT-SHELL (continued)				ALL
	B09	\$D	W2002	CL09	24		31-51-41	ALL
	B09	\$D	W2002	CN09	24		31-51-41	ALL
	B10	\$D	W2002	CL10	24		31-51-41	ALL
	B10	\$D	W2002	CN10	24		31-51-41	ALL
	B11	\$D	W2002	CL11	24		31-51-42	ALL
	B11	\$D	W2002	CN11	24		31-51-42	ALL
	B12	\$D	W2002	CL12	24		34-16-11	ALL
	B12	\$D	W2002	CN12	24		34-16-11	ALL
	B13	\$D	W2002	CL13	24		34-21-11	ALL
	B13	\$D	W2002	CN13	24		34-21-11	ALL
	B14	\$D	W2002	CL14	24		34-21-11	ALL
	B14	\$D	W2002	CN14	24		34-21-11	ALL
	B15	\$D	W2002	CL15	24		34-21-11	ALL
	B15	\$D	W2002	CN15	24		34-21-11	ALL
	B16	\$D	W2002	CL16	24		SPARE	ALL
	B16	\$D	W2002	CN16	24		SPARE	ALL
	B17	\$D	W2002	CL17	24		SPARE	ALL
	B17	\$D	W2002	CN17	24		SPARE	ALL
	B18	\$D	W2002	CL18	24		SPARE	ALL
	B18	\$D	W2002	CN18	24		SPARE	ALL
	B19	\$D	W2002	CL19	24		34-46-12	ALL
	B19	\$D	W2002	CN19	24		34-46-12	ALL
	B20	\$D	W2002	CL20	24		34-46-12	ALL
	B20	\$D	W2002	CN20	24		34-46-12	ALL
D05009P		AE0219/ /		PLUG-SHELL				ALL
	A01	UNUSED						ALL
	A02	\$D	W1701	022	24		31-41-16	ALL
	A03	\$D	W1701	206R	24		31-41-31	ALL
	A04	\$D	W1701	206B	24		31-41-31	ALL
	A05	\$D	W1701	206Z			31-41-31	ALL
	A06	\$D	W1701	207R	24		31-41-31	ALL
	A07	\$D	W1701	207B	24		31-41-31	ALL
	A08	\$D	W1701	207Z			31-41-31	ALL
	A09	\$D	W1701	001	24		22-14-31	ALL
	A10	\$D	W1701	002	24		77-35-11	ALL
	A11	\$D	W1701	005	24		SPARE	ALL
	A12	\$D	W1701	201R	24		22-32-12	ALL
	A13	\$D	W1701	201B	24		22-32-12	ALL
	A14	\$D	W1701	201Z			22-32-12	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05000

Page 10

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05009P		AE0219/ /		PLUG-SHELL (continued)				ALL
	A15	\$D	W1701	006	24		22-34-11	ALL
	A16	\$D	W1701	202R	24		22-41-13	ALL
	A17	\$D	W1701	202B	24		22-41-13	ALL
	A18	\$D	W1701	202Z			22-41-13	ALL
	A19	\$D	W1701	007	24		31-31-11	ALL
	A20	UNUSED						ALL
	B01	UNUSED						ALL
	B02	\$D	W1701	203R	24		31-31-13	ALL
	B03	\$D	W1701	203B	24		31-31-13	ALL
	B04	\$D	W1701	203Z			31-31-13	ALL
	B05	\$D	W1701	020	24		31-31-13	ALL
	B06	\$D	W1701	023	24		31-51-41	ALL
	B07	\$D	W1701	008	24		31-51-41	ALL
	B08	\$D	W1701	009	24		31-51-41	ALL
	B09	\$D	W1701	010	24		31-51-41	ALL
	B10	\$D	W1701	011	24		31-51-41	ALL
	B11	\$D	W1701	012	24		31-51-42	ALL
	B12	\$D	W1701	013	24		34-16-11	ALL
	B13	\$D	W1701	014	24		34-21-11	ALL
	B14	\$D	W1701	015	24		34-21-11	ALL
	B15	\$D	W1701	016	24		34-21-11	ALL
	B16	\$D	W1701	208Z			SPARE	ALL
	B17	\$D	W1701	208R	24		SPARE	ALL
	B18	\$D	W1701	208B	24		SPARE	ALL
	B19	\$D	W1701	017	24		34-46-12	ALL
	B20	UNUSED						ALL
	CAP	Y	W9090	927	22		34-46-12	150, 152-199, 275-299
D05010J		AF0201/ /		RCPT-P11				ALL
	1		W0044	510	22		28-22-31	ALL
	2		W0044	723	20		33-11-13	ALL
	3		W0044	733	24		33-11-15	ALL
	4	UNUSED						ALL
	5		W0044	167	22		33-51-11	ALL
	6		W0044	005	22		33-51-11	ALL
	7		W0044	753	22		33-51-11	ALL
	8	UNUSED						ALL
	9		W0044	737	22		33-13-16	ALL
	10	UNUSED						ALL
	11		W0044	191	22		35-21-11	ALL

HOOKUP LIST
D280T132

91-21-51
Section D05000
Page 11
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05010J		AF0201/ /		RCPT-P11 (continued)				ALL
	12		W0044	168	24		35-21-11	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21		W0044	185	22		74-31-11	ALL
	22		W0044	178	24		74-31-11	ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	DED		W0044	510Z			28-22-31	ALL
D05010P		AF0201/ /		PLUG-P11				ALL
	1		W0070	022	22		28-22-31	ALL
	2		W0070	14A	20		33-11-13	ALL
	3		W0070	615	24		33-11-15	ALL
	4	UNUSED						ALL
	5		W0070	668	22		33-51-11	ALL
	6		W0070	675	22		33-51-11	ALL
	7		W0070	045	22		33-51-11	ALL
	8	UNUSED						ALL
	9		W0070	12Z	22		33-13-16	ALL
	10	UNUSED						ALL
	11		W0070	658	22		35-21-11	ALL
	12		W0070	659	24		35-21-11	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D05000

Page 12

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05010P		AF0201/ /		PLUG-P11 (continued)				ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21		W0070	105	22		74-31-11	ALL
	22		W0070	08M	24		74-31-11	ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	DED		W0070	022Z			28-22-31	ALL
D05011J		AE0219/ /		RCPT-SHELL				ALL
	A01	\$D	W2002	AK01	24		99-99-99	050-099, 150-154, 275-276
	A01	\$D	W2002	AM01	24		SPARE	ALL
	A01	\$D	W2002	AK01	24		SPARE	155-199, 277-299
	A02	\$D	W2002	AK02	24		34-61-14	ALL
	A02	\$D	W2002	AM02	24		SPARE	ALL
	A03	\$D	W2002	AK03	24		34-61-14	ALL
	A03	\$D	W2002	AM03	24		SPARE	ALL
	A04	\$D	W2002	AK04	24		34-61-14	ALL
	A04	\$D	W2002	AM04	24		SPARE	ALL
	A05	\$D	W2002	AK05	24		34-61-15	ALL
	A05	\$D	W2002	AM05	24		SPARE	ALL
	A06	\$D	W2002	AK06	24		34-61-15	ALL
	A06	\$D	W2002	AM06	24		SPARE	ALL
	A07	\$D	W2002	AK07	24		34-61-15	ALL
	A07	\$D	W2002	AM07	24		34-61-15	ALL
	A08	\$D	W2002	AK08	24		34-61-15	ALL
	A08	\$D	W2002	AM08	24		34-61-15	ALL
	A09	\$D	W2002	AK09	24		34-53-11	ALL
	A09	\$D	W2002	AM09	24		34-53-11	ALL
	A10	\$D	W2002	AK10	24		SPARE	ALL
	A10	\$D	W2002	AM10	24		SPARE	ALL
	A11	\$D	W2002	AK11	24		SPARE	ALL
	A11	\$D	W2002	AM11	24		SPARE	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05000

Page 13

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05011J		AE0219/ /		RCPT-SHELL (continued)				ALL
	A12	\$D	W2002	AK12	24		SPARE	ALL
	A12	\$D	W2002	AM12	24		SPARE	ALL
	A13	\$D	W2002	AK13	24		SPARE	ALL
	A13	\$D	W2002	AM13	24		SPARE	ALL
	A14	\$D	W2002	AK14	24		22-14-31	ALL
	A14	\$D	W2002	AM14	24		22-14-31	ALL
	A15	\$D	W2002	AK15	24		34-12-62	ALL
	A15	\$D	W2002	AM15	24		34-12-62	ALL
	A16	\$D	W2002	AK16	24		34-12-12	ALL
	A16	\$D	W2002	AM16	24		34-12-12	ALL
	A17	\$D	W2002	AK17	24		31-41-16	ALL
	A17	\$D	W2002	AM17	24		31-41-16	ALL
	A18	\$D	W2002	AK18	24		34-22-38	ALL
	A18	\$D	W2002	AM18	24		34-22-38	ALL
	A19	\$D	W2002	AK19	24		31-51-43	ALL
	A19	\$D	W2002	AM19	24		31-51-43	ALL
	A20	\$D	W2002	AK20	24		99-99-99	050-099, 150-154, 275-276
	A20	\$D	W2002	AM20	24		99-99-99	050-099, 150-154, 275-276
	A20	\$D	W2002	AK20	24		SPARE	155-199, 277-299
	A20	\$D	W2002	AM20	24		SPARE	155-199, 277-299
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04	UNUSED						ALL
	B05	UNUSED						ALL
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13	UNUSED						ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	B16	UNUSED						ALL
	B17	UNUSED						ALL
	B18	UNUSED						ALL
	B19	UNUSED						ALL
	B20	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D05000

Page 14

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05011P		AE0219/ /		PLUG-SHELL				ALL
	A01	UNUSED						ALL
	A02	\$D	W1701	204R	24		34-61-14	ALL
	A03	\$D	W1701	204B	24		34-61-14	ALL
	A04	\$D	W1701	204Z			34-61-14	ALL
	A05	\$D	W1701	205R	24		34-61-15	ALL
	A06	\$D	W1701	205B	24		34-61-15	ALL
	A07	\$D	W1701	205Z			34-61-15	ALL
	A08	\$D	W1701	021	24		34-61-15	ALL
	A09	\$D	W1701	024	24		34-53-11	ALL
	A10	\$D	W1701	018	24		SPARE	ALL
	A11	\$D	W1701	019	24		SPARE	ALL
	A12	\$D	W1701	003	24		SPARE	ALL
	A13	\$D	W1701	004	24		SPARE	ALL
	A14	\$D	W1701	025	24		22-14-31	ALL
	A15	\$D	W1701	026	24		34-12-62	ALL
	A16	\$D	W1701	027	24		34-12-12	ALL
	A17	\$D	W1701	028	24		31-41-16	ALL
	A18	\$D	W1701	029	24		34-22-38	ALL
	A19	\$D	W1701	030	24		31-51-43	ALL
	A20	UNUSED						ALL
	B01	UNUSED						ALL
	B02	\$D	W1701	031	24		SPARE	ALL
	B03	\$D	W1701	032	24		SPARE	ALL
	B04	\$D	W1701	033	24		SPARE	ALL
	B05	\$D	W1701	034	24		SPARE	ALL
	B06	\$D	W1701	035	24		SPARE	ALL
	B07	\$D	W1701	036	24		SPARE	ALL
	B08	\$D	W1701	037	24		SPARE	ALL
	B09	\$D	W1701	038	24		SPARE	ALL
	B10	\$D	W1701	039	24		SPARE	ALL
	B11	\$D	W1701	040	24		SPARE	ALL
	B12	\$D	W1701	041	24		SPARE	ALL
	B13	\$D	W1701	042	24		SPARE	ALL
	B14	\$D	W1701	043	24		SPARE	ALL
	B15	\$D	W1701	044	24		SPARE	ALL
	B16	\$D	W1701	045	24		SPARE	ALL
	B17	\$D	W1701	046	24		SPARE	ALL
	B18	\$D	W1701	047	24		SPARE	ALL
	B19	\$D	W1701	048	24		SPARE	ALL
	B20	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D05000

Page 15

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05011P		AE0219/ /		PLUG-SHELL (continued)				ALL
	CAP	Y	W1701	031	24		SPARE	ALL
	CAP	Y	W1701	032	24		SPARE	ALL
	CAP	Y	W1701	033	24		SPARE	ALL
	CAP	Y	W1701	034	24		SPARE	ALL
	CAP	Y	W1701	035	24		SPARE	ALL
	CAP	Y	W1701	036	24		SPARE	ALL
	CAP	Y	W1701	037	24		SPARE	ALL
	CAP	Y	W1701	038	24		SPARE	ALL
	CAP	Y	W1701	039	24		SPARE	ALL
	CAP	Y	W1701	040	24		SPARE	ALL
	CAP	Y	W1701	041	24		SPARE	ALL
	CAP	Y	W1701	042	24		SPARE	ALL
	CAP	Y	W1701	043	24		SPARE	ALL
	CAP	Y	W1701	044	24		SPARE	ALL
	CAP	Y	W1701	045	24		SPARE	ALL
	CAP	Y	W1701	046	24		SPARE	ALL
	CAP	Y	W1701	047	24		SPARE	ALL
	CAP	Y	W1701	048	24		SPARE	ALL
D05012J		AF0203/ /		RCPT-P11				ALL
	1		W0044	021	22		29-11-32	ALL
	2		W0044	001	24		28-22-11	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W0044	180	20		22-21-11	ALL
	7		W0044	135	20		21-31-31	ALL
	8		W0044	075	24		21-33-21	ALL
	9		W0044	076	24		21-33-21	ALL
	10		W0044	739	20		21-31-11	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	FM	W0044	042	16		49-61-11	ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D05000

Page 16

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05012J		AF0203/ /		RCPT-P11 (continued)				ALL
	21		W0044	175	22		74-31-21	ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	DED		W0044	175Z			74-31-21	ALL
D05012P		AF0203/ /		PLUG-P11				ALL
	1		W0070	005	22		29-11-32	ALL
	2		W0070	593	24		28-22-11	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W0070	11X	20		22-21-11	ALL
	7		W0070	048	20		21-31-31	ALL
	8		W0070	063	24		21-33-21	ALL
	9		W0070	083	24		21-33-21	ALL
	10		W0070	13F	20		21-31-11	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	FL	W0070	07A	16		49-61-11	ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21		W0070	135	22		74-31-21	ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	DED		W0070	135Z			74-31-21	ALL
D05014J		AF0117/ /		RCPT-P7				ALL
	1		W0011	301R	24		31-25-11	ALL
	2		W0011	301B	24		31-25-11	ALL
	3		W0011	301Y	24		31-25-11	ALL
	4		W0011	654	24		31-41-16	ALL
	5		W0011	655	24		31-41-16	ALL
	6		W0011	778	20		31-41-16	ALL

HOOKUP LIST
D280T132

91-21-51
Section D05000
Page 17
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05014J		AF0117/ /		RCPT-P7 (continued)				ALL
	7		W0011	101	24		31-51-21	ALL
	8		W0011	098	24		31-51-21	ALL
	9		W0011	779	20		31-51-21	ALL
	10		W0011	790	24		33-14-21	ALL
	11	UNUSED						ALL
	12		W0011	795	22		33-16-16	ALL
	13		W0011	796	22		33-16-16	ALL
	14		W0011	301Z			31-25-11	ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	DED		W0011	795Z			33-16-16	ALL
D05014P		AF0117/ /		PLUG-				ALL
	1		W1052	301R	24		31-25-11	ALL
	2		W1052	301B	24		31-25-11	ALL
	3		W1052	301Y	24		31-25-11	ALL
	4		W1052	029	24		31-41-16	ALL
	5		W1052	027	24		31-41-16	ALL
	6		W1052	028	24		31-41-16	ALL
	7		W1052	012	24		31-51-21	ALL
	8		W1052	006	24		31-51-21	ALL
	9		W1052	005	20		31-51-21	ALL
	10		W1052	003	24		33-14-21	ALL
	11	UNUSED						ALL
	12		W1052	009	22		33-16-16	ALL
	13		W1052	010	22		33-16-16	ALL
	14		W1052	301Z			31-25-11	ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D05000

Page 18

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05014P		AF0117/ /		PLUG- (continued)				ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D05016J		AF0117/ /		RCPT-P7				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W0031	785	24		33-14-11	ALL
	4		W0031	787	24		33-14-11	ALL
	5	UNUSED						ALL
D05016P		AF0117/ /		PLUG-				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W1052	001	24		33-14-11	ALL
	4		W1052	002	24		33-14-11	ALL
	5	UNUSED						ALL
D05018J		AF0118/ /		RCPT-P7				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W0011	789	24		33-14-21	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
D05018P		AF0118/ /		PLUG-				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W1054	003	24		33-14-21	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
D05020J		AF0118/ /		RCPT-P7				ALL
	1		W0031	302R	24		31-25-11	ALL
	2		W0031	302B	24		31-25-11	ALL
	3		W0031	302Y	24		31-25-11	ALL
	4		W0031	652	24		31-41-16	ALL
	5		W0031	653	24		31-41-16	ALL

HOOKUP LIST
D280T132

91-21-51
Section D05000
Page 19
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05020J		AF0118/ /		RCPT-P7 (continued)				ALL
	6		W0031	778	20		31-41-16	ALL
	7		W0031	096	24		31-51-21	ALL
	8		W0031	097	24		31-51-21	ALL
	9		W0031	779	20		31-51-21	ALL
	10		W0031	784	24		33-14-11	ALL
	11		W0031	786	24		33-14-11	ALL
	12		W0031	790	22		33-16-16	ALL
	13		W0031	614	22		33-16-16	ALL
	14		W0031	302Z			31-25-11	ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	DED		W0031	790Z			33-16-16	ALL
D05020P		AF0118/ /		PLUG-				ALL
	1		W1054	301R	24		31-25-11	ALL
	2		W1054	301B	24		31-25-11	ALL
	3		W1054	301Y	24		31-25-11	ALL
	4		W1054	029	24		31-41-16	ALL
	5		W1054	027	24		31-41-16	ALL
	6		W1054	028	24		31-41-16	ALL
	7		W1054	012	24		31-51-21	ALL
	8		W1054	006	24		31-51-21	ALL
	9		W1054	005	20		31-51-21	ALL
	10		W1054	001	24		33-14-11	ALL
	11		W1054	002	24		33-14-11	ALL
	12		W1054	009	22		33-16-16	ALL
	13		W1054	010	22		33-16-16	ALL
	14		W1054	301Z			31-25-11	ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D05000

Page 20

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05020P		AF0118/ /		PLUG- (continued)				ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D05022J		J00003/LWR/L GR		RCPT-				ALL
	1		W0674	204R	20		32-42-11	ALL
	2		W0674	204B	20		32-42-11	ALL
	3		W0674	204Z			32-42-11	ALL
	4	UNUSED						ALL
	5		W0674	203R	18		32-09-12	ALL
	6		W0674	203B	18		32-09-12	ALL
	7	4L	W0674	451W	18		32-46-11	ALL
	8	4H	W0674	451G	18		32-46-11	ALL
	9	4L	W0674	452W	18		32-46-11	ALL
	10	4H	W0674	452G	18		32-46-11	ALL
	11	UNUSED						ALL
	12		W0674	205R	20		32-42-11	ALL
	13		W0674	205B	20		32-42-11	ALL
	14		W0674	205Z			32-42-11	ALL
	15	UNUSED						050-099, 155-199, 275-299
	16	UNUSED						050-099, 155-199, 275-299
	17	UNUSED						050-099, 155-199, 275-299
	18	UNUSED						050-099, 155-199, 275-299
	19	UNUSED						050-099, 155-199, 275-299
	20	UNUSED						050-099, 155-199, 275-299
	21	UNUSED						050-099, 155-199, 275-299
	22	UNUSED						050-099, 155-199, 275-299
	23	UNUSED						050-099, 155-199, 275-299
	24	UNUSED						050-099, 155-199, 275-299
	25		W0674	207B	20		32-45-13	050-099, 155-199, 275-299
	26		W0674	207R	20		32-45-13	050-099, 155-199, 275-299
	27		W0674	207Z			32-45-13	050-099, 155-199, 275-299
	28		W0674	208B	20		32-45-13	050-099, 155-199, 275-299
	29		W0674	208R	20		32-45-13	050-099, 155-199, 275-299
	30		W0674	208Z			32-45-13	050-099, 155-199, 275-299

HOOKUP LIST

D280T132

91-21-51

Section D05000

Page 21

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05022P		J00003/LWR/L GR		PLUG-				ALL
	1		W0668	201R	20		32-42-11	ALL
	2		W0668	201B	20		32-42-11	ALL
	3		W0668	201Z			32-42-11	ALL
	4	UNUSED						ALL
	5		W0668	A-A			32-09-12	ALL
	6		W0668	A-B			32-09-12	ALL
	7	4K	W0668	451W	18		32-46-11	ALL
	8	4G	W0668	451G	18		32-46-11	ALL
	9	4K	W0668	452W	18		32-46-11	ALL
	10	4G	W0668	452G	18		32-46-11	ALL
	11	UNUSED						ALL
	12		W0668	202R	20		32-42-11	ALL
	13		W0668	202B	20		32-42-11	ALL
	14		W0668	202Z			32-42-11	ALL
	15	UNUSED						050-099, 155-199, 275-299
	16	UNUSED						050-099, 155-199, 275-299
	17	UNUSED						050-099, 155-199, 275-299
	18	UNUSED						050-099, 155-199, 275-299
	19	UNUSED						050-099, 155-199, 275-299
	20	UNUSED						050-099, 155-199, 275-299
	21	UNUSED						050-099, 155-199, 275-299
	22	UNUSED						050-099, 155-199, 275-299
	23	UNUSED						050-099, 155-199, 275-299
	24	UNUSED						050-099, 155-199, 275-299
	25		W0668	207B	20		32-45-13	050-099, 155-199, 275-299
	26		W0668	207R	20		32-45-13	050-099, 155-199, 275-299
	27		W0668	207Z			32-45-13	050-099, 155-199, 275-299
	28		W0668	208B	20		32-45-13	050-099, 155-199, 275-299
	29		W0668	208R	20		32-45-13	050-099, 155-199, 275-299
	30		W0668	208Z			32-45-13	050-099, 155-199, 275-299
D05024J		J00001/UPR/L GR		RCPT-				ALL
	1		W0674	201R	18		32-61-11	ALL
	2		W0674	201B	18		32-61-11	ALL
	3		W0674	202R	18		32-61-11	ALL
	4		W0674	202B	18		32-61-11	ALL
	5		W0674	203R	18		32-09-12	ALL
	6		W0674	203B	18		32-09-12	ALL
	7	4K	W0674	451W	18		32-46-11	ALL
	8	4G	W0674	451G	18		32-46-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05000

Page 22

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05024J		J00001/UPR/L GR		RCPT- (continued)				ALL
	9	4K	W0674	452W	18		32-46-11	ALL
	10	4G	W0674	452G	18		32-46-11	ALL
	11		W0674	204R	20		32-42-11	ALL
	12		W0674	204B	20		32-42-11	ALL
	13		W0674	205R	20		32-42-11	ALL
	14		W0674	205B	20		32-42-11	ALL
	15		W0674	204Z			32-42-11	ALL
	16		W0674	205Z			32-42-11	ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						050-099, 155-199, 275-299
	21	UNUSED						050-099, 155-199, 275-299
	22	UNUSED						050-099, 155-199, 275-299
	23	UNUSED						050-099, 155-199, 275-299
	24	UNUSED						050-099, 155-199, 275-299
	25		W0674	207B	20		32-45-13	050-099, 155-199, 275-299
	26		W0674	207R	20		32-45-13	050-099, 155-199, 275-299
	27		W0674	207Z			32-45-13	050-099, 155-199, 275-299
	28		W0674	208B	20		32-45-13	050-099, 155-199, 275-299
	29		W0674	208R	20		32-45-13	050-099, 155-199, 275-299
	30		W0674	208Z			32-45-13	050-099, 155-199, 275-299
D05024P		J00001/UPR/L GR		PLUG-				ALL
	1		W0690	201R	18		32-61-11	ALL
	2		W0690	201B	18		32-61-11	ALL
	3		W0690	202R	18		32-61-11	ALL
	4		W0690	202B	18		32-61-11	ALL
	5		W0690	203R	18		32-09-12	ALL
	6		W0690	203B	18		32-09-12	ALL
	7	4L	W0690	451W	18		32-46-11	ALL
	8	4H	W0690	451G	18		32-46-11	ALL
	9	4L	W0690	452W	18		32-46-11	ALL
	10	4H	W0690	452G	18		32-46-11	ALL
	11		W0690	204R	20		32-42-11	ALL
	12		W0690	204B	20		32-42-11	ALL
	13		W0690	205R	20		32-42-11	ALL
	14		W0690	205B	20		32-42-11	ALL
	15		W0690	204Z			32-42-11	ALL
	16		W0690	205Z			32-42-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05000

Page 23

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05024P		J00001/UPR/L GR		PLUG- (continued)				ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						050-099, 155-199, 275-299
	21	UNUSED						050-099, 155-199, 275-299
	22	UNUSED						050-099, 155-199, 275-299
	23	UNUSED						050-099, 155-199, 275-299
	24	UNUSED						050-099, 155-199, 275-299
	25		W0690	207B	20		32-45-13	050-099, 155-199, 275-299
	26		W0690	207R	20		32-45-13	050-099, 155-199, 275-299
	27		W0690	207Z			32-45-13	050-099, 155-199, 277-299
	27	UNUSED						275-276
	28		W0690	208B	20		32-45-13	050-099, 155-199, 275-299
	29		W0690	208R	20		32-45-13	050-099, 155-199, 275-299
	30		W0690	208Z			32-45-13	050-099, 155-199, 277-299
	30	UNUSED						275-276
	CAP	Y	W0690	207B	20		32-45-13	150-154
	CAP	Y	W0690	207R	20		32-45-13	150-154
	CAP	Y	W0690	208B	20		32-45-13	150-154
	CAP	Y	W0690	208R	20		32-45-13	150-154
	DED		W0690	207Z			32-45-13	150-154, 275-276
	DED		W0690	208Z			32-45-13	150-154, 275-276
D05026J		J00001/UPR/L GR		RCPT-				ALL
	1		W0670	201R	18		32-61-11	ALL
	2		W0670	201B	18		32-61-11	ALL
	3		W0670	202R	18		32-61-11	ALL
	4		W0670	202B	18		32-61-11	ALL
	5		W0670	203R	18		32-09-11	ALL
	6		W0670	203B	18		32-09-11	ALL
	7	4K	W0670	451W	18		32-46-11	ALL
	8	4G	W0670	451G	18		32-46-11	ALL
	9	4K	W0670	452W	18		32-46-11	ALL
	10	4G	W0670	452G	18		32-46-11	ALL
	11		W0670	204R	20		32-42-11	ALL
	12		W0670	204B	20		32-42-11	ALL
	13		W0670	205R	20		32-42-11	ALL
	14		W0670	205B	20		32-42-11	ALL
	15		W0670	204Z			32-42-11	ALL
	16		W0670	205Z			32-42-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05000

Page 24

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05026J		J00001/UPR/L GR		RCPT- (continued)				ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						050-099, 155-199, 275-299
	21	UNUSED						050-099, 155-199, 275-299
	22	UNUSED						050-099, 155-199, 275-299
	23	UNUSED						050-099, 155-199, 275-299
	24	UNUSED						050-099, 155-199, 275-299
	25		W0670	207B	20		32-45-13	050-099, 155-199, 275-299
	26		W0670	207R	20		32-45-13	050-099, 155-199, 275-299
	27		W0670	207Z			32-45-13	050-099, 155-199, 275-299
	28		W0670	208B	20		32-45-13	050-099, 155-199, 275-299
	29		W0670	208R	20		32-45-13	050-099, 155-199, 275-299
	30		W0670	208Z			32-45-13	050-099, 155-199, 275-299
D05026P		J00001/UPR/L GR		PLUG-				ALL
	1		W0840	201R	18		32-61-11	ALL
	2		W0840	201B	18		32-61-11	ALL
	3		W0840	202R	18		32-61-11	ALL
	4		W0840	202B	18		32-61-11	ALL
	5		W0840	203R	18		32-09-11	ALL
	6		W0840	203B	18		32-09-11	ALL
	7	4L	W0840	451W	18		32-46-11	ALL
	8	4H	W0840	451G	18		32-46-11	ALL
	9	4L	W0840	452W	18		32-46-11	ALL
	10	4H	W0840	452G	18		32-46-11	ALL
	11		W0840	204R	20		32-42-11	ALL
	12		W0840	204B	20		32-42-11	ALL
	13		W0840	205R	20		32-42-11	ALL
	14		W0840	205B	20		32-42-11	ALL
	15		W0840	204Z			32-42-11	ALL
	16		W0840	205Z			32-42-11	ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						050-099, 155-199, 275-299
	21	UNUSED						050-099, 155-199, 275-299
	22	UNUSED						050-099, 155-199, 275-299
	23	UNUSED						050-099, 155-199, 275-299
	24	UNUSED						050-099, 155-199, 275-299

HOOKUP LIST

D280T132

91-21-51

Section D05000

Page 25

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05026P		J00001/UPR/L GR		PLUG- (continued)				ALL
	25		W0840	207B	20		32-45-13	050-099, 155-199, 275-299
	26		W0840	207R	20		32-45-13	050-099, 155-199, 275-299
	27		W0840	207Z			32-45-13	050-099, 155-199, 277-299
	27	UNUSED						275-276
	28		W0840	208B	20		32-45-13	050-099, 155-199, 275-299
	29		W0840	208R	20		32-45-13	050-099, 155-199, 275-299
	30		W0840	208Z			32-45-13	050-099, 155-199, 277-299
	30	UNUSED						275-276
	CAP	Y	W0840	207B	20		32-45-13	150-154
	CAP	Y	W0840	207R	20		32-45-13	150-154
	CAP	Y	W0840	208B	20		32-45-13	150-154
	CAP	Y	W0840	208R	20		32-45-13	150-154
	DED		W0840	207Z			32-45-13	150-154, 275-276
	DED		W0840	208Z			32-45-13	150-154, 275-276
D05028J		J00003/LWR/L GR		RCPT-				ALL
	1		W0670	204R	20		32-42-11	ALL
	2		W0670	204B	20		32-42-11	ALL
	3		W0670	204Z			32-42-11	ALL
	4	UNUSED						ALL
	5		W0670	203R	18		32-09-11	ALL
	6		W0670	203B	18		32-09-11	ALL
	7	4L	W0670	451W	18		32-46-11	ALL
	8	4H	W0670	451G	18		32-46-11	ALL
	9	4L	W0670	452W	18		32-46-11	ALL
	10	4H	W0670	452G	18		32-46-11	ALL
	11	UNUSED						ALL
	12		W0670	205R	20		32-42-11	ALL
	13		W0670	205B	20		32-42-11	ALL
	14		W0670	205Z			32-42-11	ALL
	15	UNUSED						050-099, 155-199, 275-299
	16	UNUSED						050-099, 155-199, 275-299
	17	UNUSED						050-099, 155-199, 275-299
	18	UNUSED						050-099, 155-199, 275-299
	19	UNUSED						050-099, 155-199, 275-299
	20	UNUSED						050-099, 155-199, 275-299
	21	UNUSED						050-099, 155-199, 275-299
	22	UNUSED						050-099, 155-199, 275-299
	23	UNUSED						050-099, 155-199, 275-299
	24	UNUSED						050-099, 155-199, 275-299

HOOKUP LIST

D280T132

91-21-51

Section D05000

Page 26

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05028J		J00003/LWR/L GR		RCPT- (continued)				ALL
	25		W0670	207B	20		32-45-13	050-099, 155-199, 275-299
	26		W0670	207R	20		32-45-13	050-099, 155-199, 275-299
	27		W0670	207Z			32-45-13	050-099, 155-199, 275-299
	28		W0670	208B	20		32-45-13	050-099, 155-199, 275-299
	29		W0670	208R	20		32-45-13	050-099, 155-199, 275-299
	30		W0670	208Z			32-45-13	050-099, 155-199, 275-299
D05028P		J00003/LWR/L GR		PLUG-				ALL
	1		W0676	201R	20		32-42-11	ALL
	2		W0676	201B	20		32-42-11	ALL
	3		W0676	201Z			32-42-11	ALL
	4	UNUSED						ALL
	5		W0676	A-A			32-09-11	ALL
	6		W0676	A-B			32-09-11	ALL
	7	4K	W0676	451W	18		32-46-11	ALL
	8	4G	W0676	451G	18		32-46-11	ALL
	9	4K	W0676	452W	18		32-46-11	ALL
	10	4G	W0676	452G	18		32-46-11	ALL
	11	UNUSED						ALL
	12		W0676	202R	20		32-42-11	ALL
	13		W0676	202B	20		32-42-11	ALL
	14		W0676	202Z			32-42-11	ALL
	15	UNUSED						050-099, 155-199, 275-299
	16	UNUSED						050-099, 155-199, 275-299
	17	UNUSED						050-099, 155-199, 275-299
	18	UNUSED						050-099, 155-199, 275-299
	19	UNUSED						050-099, 155-199, 275-299
	20	UNUSED						050-099, 155-199, 275-299
	21	UNUSED						050-099, 155-199, 275-299
	22	UNUSED						050-099, 155-199, 275-299
	23	UNUSED						050-099, 155-199, 275-299
	24	UNUSED						050-099, 155-199, 275-299
	25		W0676	207B	20		32-45-13	050-099, 155-199, 275-299
	26		W0676	207R	20		32-45-13	050-099, 155-199, 275-299
	27		W0676	207Z			32-45-13	050-099, 155-199, 275-299
	28		W0676	208B	20		32-45-13	050-099, 155-199, 275-299
	29		W0676	208R	20		32-45-13	050-099, 155-199, 275-299
	30		W0676	208Z			32-45-13	050-099, 155-199, 275-299

HOOKUP LIST

D280T132

91-21-51

Section D05000

Page 27

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05029J		AE0306/ /		RCPT-E2-5				ALL
	1		W0689	001	24		23-31-13	ALL
	2		W0689	002	24		23-31-13	ALL
	3		W0689	003	24		23-31-13	ALL
	4	UNUSED						050-099
	4		W0689	004	24		SPARE	150-199, 275-299
	5		W0689	028	24		23-34-12	050-099
	5		W0689	005	24		SPARE	150-199, 275-299
	6		W0689	024	24		23-12-11	050-099
	6		W0689	028	24		23-34-12	150-199, 275-299
	7		W0689	008	22		23-34-11	ALL
	8		W0689	009	22		23-34-11	ALL
	9		W0689	017	22		23-71-11	ALL
	10		W0689	018	22		23-71-11	ALL
	11		W0689	021	20		SPARE	ALL
	12		W0689	020	20		SPARE	ALL
	13		W0689	022	22		SPARE	ALL
	14		W0689	026	24		23-34-12	ALL
	15		W0689	027	24		23-34-12	ALL
	16		W0689	024	24		23-12-11	150-199, 275-299
	17	UNUSED						150-199, 275-299
	18	UNUSED						150-199, 275-299
	19	UNUSED						150-199, 275-299
	20	UNUSED						150-199, 275-299
	21	UNUSED						150-199, 275-299
	22	UNUSED						150-199, 275-299
	23	UNUSED						150-199, 275-299
	24	UNUSED						150-199, 275-299
D05029P		AE0306/ /		PLUG-E2-5				ALL
	1		W0139	096	24		23-31-13	ALL
	2		W0139	095	24		23-31-13	ALL
	3		W0139	094	24		23-31-13	ALL
	4	UNUSED						ALL
	5		W0139	788	24		23-34-12	050-099
	5	UNUSED						150-199, 275-299
	6		W0139	751	24		23-12-11	050-099
	6		W0139	788	24		23-34-12	150-199, 275-299
	7		W0139	774	22		23-34-11	ALL
	8		W0139	775	22		23-34-11	ALL
	9		W0139	737	24		23-71-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05000

Page 28

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05029P		AE0306/ /		PLUG-E2-5 (continued)				ALL
	10		W0139	738	24		23-71-11	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14		W0139	786	24		23-34-12	ALL
	15		W0139	787	24		23-34-12	ALL
	16		W0139	751	24		23-12-11	150-199, 275-299
	17	UNUSED						150-199, 275-299
	18	UNUSED						150-199, 275-299
	19	UNUSED						150-199, 275-299
	20	UNUSED						150-199, 275-299
	21	UNUSED						150-199, 275-299
	22	UNUSED						150-199, 275-299
	23	UNUSED						150-199, 275-299
	24	UNUSED						150-199, 275-299
	DED		W0139	774Z			23-34-11	ALL
	DED		W0139	775Z			23-34-11	ALL
D05030J		J00002/UPR/R GR		RCPT-				ALL
	1		W0682	201R	18		32-61-12	ALL
	2		W0682	201B	18		32-61-12	ALL
	3		W0682	202R	18		32-61-12	ALL
	4		W0682	202B	18		32-61-12	ALL
	5		W0682	203R	18		32-09-12	ALL
	6		W0682	203B	18		32-09-12	ALL
	7		W0682	204R	20		32-42-11	ALL
	8		W0682	204B	20		32-42-11	ALL
	9		W0682	205R	20		32-42-11	ALL
	10		W0682	205B	20		32-42-11	ALL
	11	4K	W0682	451W	18		32-46-11	ALL
	12	4G	W0682	451G	18		32-46-11	ALL
	13	4K	W0682	452W	18		32-46-11	ALL
	14	4G	W0682	452G	18		32-46-11	ALL
	15		W0682	207B	20		32-45-14	050-099, 155-199, 275-299
	15	UNUSED						150-154
	16		W0682	207R	20		32-45-14	050-099, 155-199, 275-299
	16	UNUSED						150-154
	17		W0682	204Z			32-42-11	ALL
	18		W0682	205Z			32-42-11	ALL
	19		W0682	207Z			32-45-14	050-099, 155-199, 275-299

HOOKUP LIST

D280T132

91-21-51

Section D05000

Page 29

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05030J		J00002/UPR/R GR		RCPT- (continued)				ALL
	19	UNUSED						150-154
	20		W0682	301B	20		27-62-11	ALL
	21		W0682	301R	20		27-62-11	ALL
	22		W0682	301Y	20		27-62-11	ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28		W0682	208B	20		32-45-14	050-099, 155-199, 275-299
	28	UNUSED						150-154
	29		W0682	208R	20		32-45-14	050-099, 155-199, 275-299
	29	UNUSED						150-154
	30		W0682	208Z			32-45-14	050-099, 155-199, 275-299
	30	UNUSED						150-154
D05030P		J00002/UPR/R GR		PLUG-				ALL
	1		W0864	201R	18		32-61-12	ALL
	2		W0864	201B	18		32-61-12	ALL
	3		W0864	202R	18		32-61-12	ALL
	4		W0864	202B	18		32-61-12	ALL
	5		W0864	203R	18		32-09-12	ALL
	6		W0864	203B	18		32-09-12	ALL
	7		W0864	204R	20		32-42-11	ALL
	8		W0864	204B	20		32-42-11	ALL
	9		W0864	205R	20		32-42-11	ALL
	10		W0864	205B	20		32-42-11	ALL
	11	4L	W0864	451W	18		32-46-11	ALL
	12	4H	W0864	451G	18		32-46-11	ALL
	13	4L	W0864	452W	18		32-46-11	ALL
	14	4H	W0864	452G	18		32-46-11	ALL
	15		W0864	207B	20		32-45-14	050-099, 155-199, 275-299
	15	UNUSED						150-154
	16		W0864	207R	20		32-45-14	050-099, 155-199, 275-299
	16	UNUSED						150-154
	17		W0864	204Z			32-42-11	ALL
	18		W0864	205Z			32-42-11	ALL
	19		W0864	207Z			32-45-14	050-099, 155-199, 275-299
	19	UNUSED						150-154
	20		W0864	301B	20		27-62-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05000

Page 30

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05030P		J00002/UPR/R GR		PLUG- (continued)				ALL
	21		W0864	301R	20		27-62-11	ALL
	22		W0864	301Y	20		27-62-11	ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28		W0864	208B	20		32-45-14	050-099, 155-199, 275-299
	28	UNUSED						150-154
	29		W0864	208R	20		32-45-14	050-099, 155-199, 275-299
	29	UNUSED						150-154
	30		W0864	208Z			32-45-14	050-099, 155-199, 275-299
	30	UNUSED						150-154
	= CC	M	W0864	301Z			27-62-11	ALL
	CAP	Y	W0864	207B	20		32-45-14	150-154
	CAP	Y	W0864	207R	20		32-45-14	150-154
	CAP	Y	W0864	208B	20		32-45-14	150-154
	CAP	Y	W0864	208R	20		32-45-14	150-154
	DED		W0864	207Z			32-45-14	150-154
	DED		W0864	208Z			32-45-14	150-154
D05032J		J00004/LWR/R GR		RCPT-				ALL
	1		W0682	205R	20		32-42-11	ALL
	2		W0682	205B	20		32-42-11	ALL
	3		W0682	205Z			32-42-11	ALL
	4	UNUSED						ALL
	5		W0682	203R	18		32-09-12	ALL
	6		W0682	203B	18		32-09-12	ALL
	7		W0682	204R	20		32-42-11	ALL
	8		W0682	204B	20		32-42-11	ALL
	9		W0682	204Z			32-42-11	ALL
	10	UNUSED						ALL
	11	4L	W0682	451W	18		32-46-11	ALL
	12	4H	W0682	451G	18		32-46-11	ALL
	13	4L	W0682	452W	18		32-46-11	ALL
	14	4H	W0682	452G	18		32-46-11	ALL
	15		W0682	301B	20		27-62-11	ALL
	16		W0682	301R	20		27-62-11	ALL
	17		W0682	301Y	20		27-62-11	ALL
	18	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D05000

Page 31

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05032J		J00004/LWR/R GR		RCPT- (continued)				ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25		W0682	207B	20		32-45-14	050-099, 155-199, 275-299
	25	UNUSED						150-154
	26		W0682	207R	20		32-45-14	050-099, 155-199, 275-299
	26	UNUSED						150-154
	27		W0682	207Z			32-45-14	050-099, 155-199, 275-299
	27	UNUSED						150-154
	28		W0682	208B	20		32-45-14	050-099, 155-199, 275-299
	28	UNUSED						150-154
	29		W0682	208R	20		32-45-14	050-099, 155-199, 275-299
	29	UNUSED						150-154
	30		W0682	208Z			32-45-14	050-099, 155-199, 275-299
	30	UNUSED						150-154
D05032P		J00004/LWR/R GR		PLUG-				ALL
	1		W0688	202R	20		32-42-11	ALL
	2		W0688	202B	20		32-42-11	ALL
	3		W0688	202Z			32-42-11	ALL
	4	UNUSED						ALL
	5		W0688	A-A			32-09-12	ALL
	6		W0688	A-B			32-09-12	ALL
	7		W0688	201R	20		32-42-11	ALL
	8		W0688	201B	20		32-42-11	ALL
	9		W0688	201Z			32-42-11	ALL
	10	UNUSED						ALL
	11	4K	W0688	451W	18		32-46-11	ALL
	12	4G	W0688	451G	18		32-46-11	ALL
	13	4K	W0688	452W	18		32-46-11	ALL
	14	4G	W0688	452G	18		32-46-11	ALL
	15		W0688	301B	20		27-62-11	ALL
	16		W0688	301R	20		27-62-11	ALL
	17		W0688	301Y	20		27-62-11	ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D05000

Page 32

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05032P		J00004/LWR/R GR		PLUG- (continued)				ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25		W0688	207B	20		32-45-14	050-099, 155-199, 275-299
	25	UNUSED						150-154
	26		W0688	207R	20		32-45-14	050-099, 155-199, 275-299
	26	UNUSED						150-154
	27		W0688	207Z			32-45-14	050-099, 155-199, 275-299
	27	UNUSED						150-154
	28		W0688	208B	20		32-45-14	050-099, 155-199, 275-299
	28	UNUSED						150-154
	29		W0688	208R	20		32-45-14	050-099, 155-199, 275-299
	29	UNUSED						150-154
	30		W0688	208Z			32-45-14	050-099, 155-199, 275-299
	30	UNUSED						150-154
D05034J		J00002/UPR/R GR		RCPT-				ALL
	1		W0684	201R	18		32-61-12	ALL
	2		W0684	201B	18		32-61-12	ALL
	3		W0684	202R	18		32-61-12	ALL
	4		W0684	202B	18		32-61-12	ALL
	5		W0684	203R	18		32-09-11	ALL
	6		W0684	203B	18		32-09-11	ALL
	7		W0684	204R	20		32-42-11	ALL
	8		W0684	204B	20		32-42-11	ALL
	9		W0684	205R	20		32-42-11	ALL
	10		W0684	205B	20		32-42-11	ALL
	11	4K	W0684	451W	18		32-46-11	ALL
	12	4G	W0684	451G	18		32-46-11	ALL
	13	4K	W0684	452W	18		32-46-11	ALL
	14	4G	W0684	452G	18		32-46-11	ALL
	15		W0684	204Z			32-42-11	ALL
	16		W0684	205Z			32-42-11	ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						050-099, 155-199, 275-299
	21	UNUSED						050-099, 155-199, 275-299
	22	UNUSED						050-099, 155-199, 275-299

HOOKUP LIST

D280T132

91-21-51

Section D05000

Page 33

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05034J		J00002/UPR/R GR		RCPT- (continued)				ALL
	23	UNUSED						050-099, 155-199, 275-299
	24	UNUSED						050-099, 155-199, 275-299
	25		W0684	207B	20		32-45-14	050-099, 155-199, 275-299
	26		W0684	207R	20		32-45-14	050-099, 155-199, 275-299
	27		W0684	207Z			32-45-14	050-099, 155-199, 275-299
	28		W0684	208B	20		32-45-14	050-099, 155-199, 275-299
	29		W0684	208R	20		32-45-14	050-099, 155-199, 275-299
	30		W0684	208Z			32-45-14	050-099, 155-199, 275-299
D05034P		J00002/UPR/R GR		PLUG-				ALL
	1		W0928	201R	18		32-61-12	ALL
	2		W0928	201B	18		32-61-12	ALL
	3		W0928	202R	18		32-61-12	ALL
	4		W0928	202B	18		32-61-12	ALL
	5		W0928	203R	18		32-09-11	ALL
	6		W0928	203B	18		32-09-11	ALL
	7		W0928	204R	20		32-42-11	ALL
	8		W0928	204B	20		32-42-11	ALL
	9		W0928	205R	20		32-42-11	ALL
	10		W0928	205B	20		32-42-11	ALL
	11	4L	W0928	451W	18		32-46-11	ALL
	12	4H	W0928	451G	18		32-46-11	ALL
	13	4L	W0928	452W	18		32-46-11	ALL
	14	4H	W0928	452G	18		32-46-11	ALL
	15		W0928	204Z			32-42-11	ALL
	16		W0928	205Z			32-42-11	ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						050-099, 155-199, 275-299
	21	UNUSED						050-099, 155-199, 275-299
	22	UNUSED						050-099, 155-199, 275-299
	23	UNUSED						050-099, 155-199, 275-299
	24	UNUSED						050-099, 155-199, 275-299
	25		W0928	207B	20		32-45-14	050-099, 155-199, 275-299
	26		W0928	207R	20		32-45-14	050-099, 155-199, 275-299
	27		W0928	207Z			32-45-14	050-099, 155-199, 275-299
	28		W0928	208B	20		32-45-14	050-099, 155-199, 275-299
	29		W0928	208R	20		32-45-14	050-099, 155-199, 275-299
	30		W0928	208Z			32-45-14	050-099, 155-199, 275-299

HOOKUP LIST

D280T132

91-21-51

Section D05000

Page 34

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05034P		J00002/UPR/R GR		PLUG- (continued)				ALL
	CAP	Y	W0928	207B	20		32-45-14	150-154
	CAP	Y	W0928	207R	20		32-45-14	150-154
	CAP	Y	W0928	208B	20		32-45-14	150-154
	CAP	Y	W0928	208R	20		32-45-14	150-154
	DED		W0928	207Z			32-45-14	150-154
	DED		W0928	208Z			32-45-14	150-154
D05035J		AE0308/ /		RCPT-E2-1				ALL
	1		W1131	027	20		27-11-22	ALL
	2		W1131	003	22		22-21-21	ALL
	3		W1131	002	22		22-21-21	ALL
	4		W1131	001	22		22-22-21	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W1131	032	20		27-11-22	ALL
	8		W1131	035	22		27-11-22	ALL
	9		W1131	038	22		27-11-22	ALL
	10		W1131	029	20		27-11-22	ALL
	11		W1131	015	22		27-09-14	ALL
	12		W1131	030	20		27-11-22	ALL
	13		W1131	033	20		27-11-22	ALL
	14		W1131	040	22		27-11-22	ALL
	15		W1131	041	22		27-11-22	ALL
	16		W1131	036	22		27-11-22	ALL
	17		W1131	039	22		27-11-22	ALL
	18		W1131	042	22		27-11-22	ALL
	19		W1131	043	22		27-21-12	ALL
	20		W1131	044	22		27-41-21	ALL
	21		W1131	045	22		27-41-21	ALL
	22		W1131	046	22		27-61-12	ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26		W1131	014	22		27-41-31	050-099, 155-199, 275-299
	26	UNUSED						150-154
	27	UNUSED						ALL
	28		W1131	054	22		27-61-12	ALL
	29		W1131	053	22		27-61-12	ALL
	30		W1131	052	22		27-61-12	ALL
	31	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D05000

Page 35

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05035J		AE0308/ /		RCPT-E2-1 (continued)				ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36		W1131	022	22		27-09-14	ALL
	37		W1131	018	22		27-09-14	ALL
	38		W1131	019	22		27-09-14	ALL
	39		W1131	017	22		27-09-14	ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	DED		W1131	027Z			27-11-22	ALL
	DED		W1131	014Z			27-41-31	050-099, 155-199, 275-299
D05035P		AE0308/ /		PLUG-E2-1				ALL
	1	DK	W1247	001	18		27-11-22	ALL
	2		W1247	002	22		22-21-21	ALL
	3		W1247	003	22		22-21-21	ALL
	4		W1247	004	22		22-22-11	ALL
	5		W1247	005	22		SPARE	ALL
	6		W1247	006	20		SPARE	ALL
	7	DK	W1247	007	18		27-11-22	ALL
	8		W1247	008	20		27-11-22	ALL
	9		W1247	009	20		27-11-22	ALL
	10	DK	W1247	010	18		27-11-22	ALL
	11		W1247	011	22		27-09-14	ALL
	12		W1247	012	20		27-11-12	ALL
	13		W1247	013	20		27-11-12	ALL
	14		W1247	014	22		27-11-12	ALL
	15		W1247	015	22		27-11-12	ALL
	16		W1247	016	22		27-11-12	ALL
	17		W1247	017	22		27-11-12	ALL
	18		W1247	018	22		27-11-12	ALL
	19		W1247	019	22		27-21-12	ALL
	20		W1247	020	22		27-41-11	ALL
	21		W1247	021	22		27-41-11	ALL
	22		W1247	022	22		27-61-12	ALL
	23		W1247	023	22		SPARE	ALL
	24		W1247	024	22		SPARE	ALL
	25		W1247	025	22		SPARE	ALL
	26		W1247	035	22		27-41-31	050-099, 155-199, 275-299

HOOKUP LIST

D280T132

91-21-51

Section D05000

Page 36

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05035P		AE0308/ /		PLUG-E2-1 (continued)				ALL
	26	UNUSED						150-154
	27	UNUSED						ALL
	28		W1247	028	22		27-61-12	ALL
	29		W1247	029	22		27-61-12	ALL
	30		W1247	030	22		27-61-12	ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36		W1247	031	22		27-09-14	ALL
	37		W1247	032	22		27-09-14	ALL
	38		W1247	033	22		27-09-14	ALL
	39		W1247	034	22		27-09-14	ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
D05036J		J00004/LWR/R GR		RCPT-				ALL
	1		W0684	205R	20		32-42-11	ALL
	2		W0684	205B	20		32-42-11	ALL
	3		W0684	205Z			32-42-11	ALL
	4	UNUSED						ALL
	5		W0684	203R	18		32-09-11	ALL
	6		W0684	203B	18		32-09-11	ALL
	7		W0684	204R	20		32-42-11	ALL
	8		W0684	204B	20		32-42-11	ALL
	9		W0684	204Z			32-42-11	ALL
	10	UNUSED						ALL
	11	4L	W0684	451W	18		32-46-11	ALL
	12	4H	W0684	451G	18		32-46-11	ALL
	13	4L	W0684	452W	18		32-46-11	ALL
	14	4H	W0684	452G	18		32-46-11	ALL
	15	UNUSED						050-099, 155-199, 275-299
	16	UNUSED						050-099, 155-199, 275-299
	17	UNUSED						050-099, 155-199, 275-299
	18	UNUSED						050-099, 155-199, 275-299
	19	UNUSED						050-099, 155-199, 275-299
	20	UNUSED						050-099, 155-199, 275-299
	21	UNUSED						050-099, 155-199, 275-299
	22	UNUSED						050-099, 155-199, 275-299

HOOKUP LIST

D280T132

91-21-51

Section D05000

Page 37

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05036J		J00004/LWR/R GR		RCPT- (continued)				ALL
	23	UNUSED						050-099, 155-199, 275-299
	24	UNUSED						050-099, 155-199, 275-299
	25		W0684	207B	20		32-45-14	050-099, 155-199, 275-299
	26		W0684	207R	20		32-45-14	050-099, 155-199, 275-299
	27		W0684	207Z			32-45-14	050-099, 155-199, 275-299
	28		W0684	208B	20		32-45-14	050-099, 155-199, 275-299
	29		W0684	208R	20		32-45-14	050-099, 155-199, 275-299
	30		W0684	208Z			32-45-14	050-099, 155-199, 275-299
D05036P		J00004/LWR/R GR		PLUG-				ALL
	1		W0686	202R	20		32-42-11	ALL
	2		W0686	202B	20		32-42-11	ALL
	3		W0686	202Z			32-42-11	ALL
	4	UNUSED						ALL
	5		W0686	A-A			32-09-11	ALL
	6		W0686	A-B			32-09-11	ALL
	7		W0686	201R	20		32-42-11	ALL
	8		W0686	201B	20		32-42-11	ALL
	9		W0686	201Z			32-42-11	ALL
	10	UNUSED						ALL
	11	4K	W0686	451W	18		32-46-11	ALL
	12	4G	W0686	451G	18		32-46-11	ALL
	13	4K	W0686	452W	18		32-46-11	ALL
	14	4G	W0686	452G	18		32-46-11	ALL
	15	UNUSED						050-099, 155-199, 275-299
	16	UNUSED						050-099, 155-199, 275-299
	17	UNUSED						050-099, 155-199, 275-299
	18	UNUSED						050-099, 155-199, 275-299
	19	UNUSED						050-099, 155-199, 275-299
	20	UNUSED						050-099, 155-199, 275-299
	21	UNUSED						050-099, 155-199, 275-299
	22	UNUSED						050-099, 155-199, 275-299
	23	UNUSED						050-099, 155-199, 275-299
	24	UNUSED						050-099, 155-199, 275-299
	25		W0686	207B	20		32-45-14	050-099, 155-199, 275-299
	26		W0686	207R	20		32-45-14	050-099, 155-199, 275-299
	27		W0686	207Z			32-45-14	050-099, 155-199, 275-299
	28		W0686	208B	20		32-45-14	050-099, 155-199, 275-299
	29		W0686	208R	20		32-45-14	050-099, 155-199, 275-299
	30		W0686	208Z			32-45-14	050-099, 155-199, 275-299

HOOKUP LIST

D280T132

91-21-51

Section D05000

Page 38

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05037J		AE0218/ /		RCPT-P37				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W0198	118	18		27-11-22	ALL
	8		W0198	116	20		27-11-22	ALL
	9		W0198	117	20		27-11-22	ALL
	10		W0198	119	18		27-11-22	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D05037P		AE0218/ /		PLUG-P37				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W1247	006	20		SPARE	ALL
	7		W1247	007	18		27-11-22	ALL
	8		W1247	008	20		27-11-22	ALL
	9		W1247	009	20		27-11-22	ALL
	10		W1247	010	18		27-11-22	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D05040J		AL0202/ /		RCPT-NOSE WW DISC				ALL
	1		W0924	013	14		33-42-21	ALL
	2		W0924	011	18		33-42-21	ALL
	3		W0924	202R	18		32-09-11	ALL
	4		W0924	202B	18		32-09-11	ALL
	5		W0924	012	18		33-42-21	ALL
	6		W0924	014	14		33-42-21	ALL
	7		W0924	006	12		33-42-21	ALL
	8		W0924	001	18		33-42-11	ALL
	9	EO	W0924	003	10		33-42-11	ALL
	10		W0924	002	18		33-42-11	ALL
	11	EO	W0924	004	10		33-42-11	ALL
	12	EO	W0924	005	10		33-42-11	ALL

HOOKUP LIST
D280T132

91-21-51
Section D05000
Page 39
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05040P		AL0202/ /		PLUG-NOSE WW DISC				ALL
	1		W0678	025	14		33-42-21	ALL
	2		W0678	026	18		33-42-21	ALL
	3		W0678	202R	18		32-09-11	ALL
	4		W0678	202B	18		32-09-11	ALL
	5		W0678	027	18		33-42-21	ALL
	6		W0678	028	14		33-42-21	ALL
	7		W0678	029	12		33-42-21	ALL
	8		W0678	008	18		33-42-11	ALL
	9	EN	W0678	009	10		33-42-11	ALL
	10		W0678	010	18		33-42-11	ALL
	11	EN	W0678	011	10		33-42-11	ALL
	12	EN	W0678	024	10		33-42-11	ALL
D05042J		AF0204/ /		RCPT-P61				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W0070	838R	20		26-21-11	ALL
	4		W0070	839R	20		26-21-11	ALL
	5		W0070	840R	20		26-23-11	ALL
	6		W0070	841R	20		26-23-11	ALL
	7		W0070	897R	24		26-16-11	ALL
	8		W0070	04B	24		29-21-31	ALL
	9		W0070	148	24		29-21-31	ALL
	10		W0070	892R	20		26-21-11	ALL
	11		W0070	762R	22		26-11-11	ALL
	12		W0070	764R	22		26-11-11	ALL
	13		W0070	765R	22		26-11-11	ALL
	14		W0070	767R	22		26-11-11	ALL
	15		W0070	768R	22		26-11-11	ALL
	16		W0070	770R	22		26-11-12	ALL
	17		W0070	147	24		29-21-31	ALL
	18		W0070	149	24		29-21-31	ALL
	19		W0070	894R	20		26-21-11	ALL
	20		W0070	03H	22		28-25-11	050-099
	20		W0070	03H	20		28-25-11	150-199, 275-299
	21		W0070	722R	22		26-15-11	ALL
	22		W0070	595	24		28-25-11	ALL
	23		W0070	63G	20		78-34-11	ALL
	24		W0070	101	22		31-31-26	ALL
	25		W0070	63N	20		78-34-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05000

Page 40

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05042J		AF0204/ /		RCPT-P61 (continued)				ALL
	26		W0070	886R	20		26-23-11	ALL
	27	UNUSED						ALL
	28		W0070	12A	24		24-22-11	ALL
	29		W0070	12B	24		24-22-11	ALL
	30		W0070	144	24		29-21-31	ALL
	31	UNUSED						ALL
	32		W0070	03S	22		29-11-11	ALL
	33		W0070	03P	22		29-11-11	ALL
	34		W0070	03R	22		29-11-11	ALL
	35		W0070	145	24		29-21-31	ALL
	36		W0070	782R	22		26-11-11	ALL
	37		W0070	03E	22		28-22-21	ALL
	38		W0070	03F	22		28-22-21	ALL
	39		W0070	08N	20		76-11-11	ALL
	40		W0070	08P	20		76-11-11	ALL
	41		W0070	08R	20		76-11-11	ALL
	42		W0070	01C	24		21-43-11	ALL
	43		W0070	01D	24		21-43-11	ALL
	44	UNUSED						ALL
	45		W0070	01A	24		21-25-11	ALL
	46		W0070	08V	24		78-34-11	ALL
	47		W0070	08U	24		78-34-11	ALL
	48		W0070	06V	24		36-11-51	ALL
	49		W0070	70B	20		25-33-11	050-099, 155-199, 277-299
	49	UNUSED						150-154, 275-276
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
	DED		W0070	03EZ			28-22-21	ALL
	DED		W0070	03FZ			28-22-21	ALL
	DED		W0070	03PZ			29-11-11	ALL
	DED		W0070	03RZ			29-11-11	ALL
	DED		W0070	08NZ			76-11-11	ALL
	DED		W0070	08PZ			76-11-11	ALL
	DED		W0070	08RZ			76-11-11	ALL
	DED		W0070	08UZ			78-34-11	ALL
	DED		W0070	08VZ			78-34-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05000

Page 41

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05042J		AF0204/ /		RCPT-P61 (continued)				ALL
	DED		W0070	101Z			31-31-26	ALL
	DED		W0070	63GZ			78-34-11	ALL
	DED		W0070	63NZ			78-34-11	ALL
D05042P		AF0204/ /		PLUG-P61				ALL
	1	UNUSED						ALL
	2	UNUSED						050-099, 275-299
	2		W0614	143	22		SPARE	150-199
	3		W0614	078R	20		26-21-11	ALL
	4		W0614	079R	20		26-21-11	ALL
	5		W0614	080R	20		26-23-11	ALL
	6		W0614	081R	20		26-23-11	ALL
	7		W0614	026R	24		26-16-11	ALL
	8		W0614	105	24		29-21-31	ALL
	9		W0614	108	24		29-21-31	ALL
	10		W0614	195R	20		26-21-11	ALL
	11		W0614	041R	22		26-11-11	ALL
	12		W0614	180R	22		26-11-11	ALL
	13		W0614	182R	22		26-11-11	ALL
	14		W0614	044R	22		26-11-11	ALL
	15		W0614	062R	22		26-11-11	ALL
	16		W0614	051R	22		26-11-12	ALL
	17		W0614	106	24		29-21-31	ALL
	18		W0614	107	24		29-21-31	ALL
	19		W0614	196R	20		26-21-11	ALL
	20		W0614	109	22		28-25-11	050-099
	20		W0614	109	20		28-25-11	150-199, 275-299
	21		W0614	061R	22		26-15-11	ALL
	22		W0614	110	24		28-25-11	ALL
	23	FL	W0614	521	16		78-34-11	ALL
	24		W0614	064	22		31-31-26	ALL
	25	FL	W0614	522	16		78-34-11	ALL
	26		W0614	076R	20		26-23-11	ALL
	27		W0614	152R	20		SPARE	ALL
	28		W0614	501	24		24-22-11	ALL
	29		W0614	510	24		24-22-11	ALL
	30		W0614	102	24		29-21-31	ALL
	31		W0614	151	22		SPARE	ALL
	32		W0614	518	22		29-11-11	ALL
	33		W0614	545	22		29-11-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05000

Page 42

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05042P		AF0204/ /		PLUG-P61 (continued)				ALL
	34		W0614	544	22		29-11-11	ALL
	35		W0614	103	24		29-21-31	ALL
	36		W0614	185R	22		26-11-11	ALL
	37		W0614	556	20		28-22-21	ALL
	38		W0614	557	20		28-22-21	ALL
	39		W0614	519	20		76-11-11	ALL
	40		W0614	512	20		76-11-11	ALL
	41		W0614	513	20		76-11-11	ALL
	42		W0614	558	24		21-43-11	ALL
	43		W0614	559	24		21-43-11	ALL
	44	UNUSED						050-099, 150-199, 275-276
	44		W0614	064R	22		SPARE	277-299
	45		W0614	177	24		21-25-11	ALL
	46		W0614	509	24		78-34-11	ALL
	47		W0614	520	24		78-34-11	ALL
	48		W0614	505	24		36-11-51	ALL
	49		W0614	082	20		25-33-11	050-099, 155-199, 277-299
	49	UNUSED						150-154
	49		W0614	064R	22		SPARE	275-276
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
	DED		W0614	544Z			29-11-11	ALL
	DED		W0614	545Z			29-11-11	ALL
D05043J		P003-03/ /		RCPT-P3-3				ALL
	1		W0033	017	24		34-22-81	ALL
	2		W0033	016	20		34-22-81	ALL
	3		W0033	018	24		34-22-37	ALL
	4		W0033	050	24		22-41-13	ALL
	5		W0033	015	22		34-32-11	ALL
	6		W0033	014	22		34-32-11	ALL
	7		W0033	013	22		34-32-11	ALL
	8	UNUSED						ALL
	9	UNUSED						050, 150-154
	9		W0033	108	20		34-61-26	051-099, 155-199, 275-299
	10		W0033	029	22		33-16-15	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05000

Page 43

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05043J		P003-03/ /		RCPT-P3-3 (continued)				ALL
	11		W0033	030	22		33-16-15	ALL
	12	UNUSED						050, 150-154
	12		W0033	109	20		34-61-26	051-099, 155-199, 275-299
	13	UNUSED						050, 150-154
	13		W0033	110	20		34-61-26	051-099, 155-199, 275-299
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	DED		W0033	029Z			33-16-15	ALL
	DED		W0033	030Z			33-16-15	ALL
D05043P		P003-03/ /		PLUG-P3-3				ALL
	1		W0011	781	22		34-22-81	ALL
	2		W0011	609	20		34-22-81	ALL
	3		W0011	081	24		34-22-37	ALL
	4		W0011	153	24		22-41-13	ALL
	5		W0011	107	22		34-32-11	ALL
	6		W0011	106	22		34-32-11	ALL
	7		W0011	105	22		34-32-11	ALL
	8	UNUSED						ALL
	9		W0011	890	24		34-61-26	050-099, 155-199, 275-299
	9	UNUSED						150-154
	10		W0011	708	22		33-16-15	ALL
	11		W0011	709	22		33-16-15	ALL
	12	UNUSED						050, 150-154
	12		W0011	892	20		34-61-26	051-099, 155-199, 275-299
	13	UNUSED						050, 150-154
	13		W0011	893	20		34-61-16	051-099
	13		W0011	893	20		34-61-26	155-199, 275-299
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D05000

Page 44

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05043P		P003-03/ /		PLUG-P3-3 (continued)				ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	DED		W0011	708Z			33-16-15	ALL
	DED		W0011	709Z			33-16-15	ALL
D05044J		AL1003/ /		RCPT-				ALL
	1		W0602	018R	22		26-17-11	ALL
	2		W0602	001R	22		26-17-11	ALL
	3		W0602	003R	22		26-18-31	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						050-099, 155-199, 276-299
	7		W0602	042	20		SPARE	150-154, 275
D05044P		AL1003/ /		PLUG-				ALL
	1		W0626	001R	18		26-17-11	ALL
	2		W0626	002R	18		26-17-11	ALL
	3		W0626	003R	18		26-18-31	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
D05045J		P003-03/ /		RCPT-P3-3				ALL
	1		W0033	056	24		34-61-26	050, 150-154
	1		W0033	094	24		34-61-26	051-099, 155-199, 275-299
	2		W0033	070	24		34-61-26	050, 150-154
	2		W0033	095	24		34-61-26	051-099, 155-199, 275-299
	3		W0033	069	22		34-12-62	ALL
	4		W0033	019	24		34-22-37	ALL
	5		W0033	075	24		34-61-26	050, 150-154
	5		W0033	096	24		34-61-26	051-099, 155-199, 275-299
	6		W0033	076	24		34-61-26	050, 150-154

HOOKUP LIST
D280T132

91-21-51
Section D05000
Page 45
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05045J		P003-03/ /		RCPT-P3-3 (continued)				ALL
	6		W0033	104	24		34-61-26	051-099, 155-199, 275-299
	7		W0033	005	24		34-22-27	ALL
	8		W0033	006	24		34-22-27	ALL
	9		W0033	007	20		34-22-27	ALL
	10		W0033	003	24		34-22-27	ALL
	11		W0033	004	20		34-22-27	ALL
	12	UNUSED						050, 150-154
	12		W0033	105	20		34-61-26	051-099, 155-199, 275-299
	13	UNUSED						ALL
	14	UNUSED						ALL
	15		W0033	077	24		34-61-26	050, 150-154
	15		W0033	099	24		34-61-26	051-099, 155-199, 275-299
	16		W0033	009	24		34-22-27	ALL
	17		W0033	008	20		34-22-27	ALL
	18		W0033	079	24		34-61-26	050, 150-154
	18		W0033	097	24		34-61-26	051-099, 155-199, 275-299
	19	UNUSED						ALL
	20	UNUSED						ALL
	21		W0033	001	24		34-22-92	ALL
	22		W0033	002	20		34-22-92	ALL
	23		W0033	046	20		34-12-62	ALL
	24		W0033	102	24		34-22-27	ALL
	25		W0033	047	22		34-12-62	ALL
	26		W0033	044	20		34-13-21	ALL
	27		W0033	012	24		34-21-31	ALL
	28		W0033	010	20		34-22-38	ALL
	29		W0033	011	22		34-22-38	ALL
	30		W0033	078	24		34-61-26	050, 150-154
	30		W0033	098	24		34-61-26	051-099, 155-199, 275-299
	31		W0033	052	24		22-41-13	ALL
	32		W0033	051	24		22-41-13	ALL
	33		W0033	053	24		22-41-13	ALL
	34		W0033	054	22		34-22-26	ALL
	35		W0033	055	20		34-22-26	ALL
	36		W0033	067	24		32-42-11	ALL
	37		W0033	068	24		32-42-11	ALL
	38		W0033	041	20		33-13-13	ALL
	39		W0033	042	20		33-13-13	ALL
	40	UNUSED						050, 150-154
	40		W0033	106	20		34-61-26	051-099, 155-199, 275-299

HOOKUP LIST

D280T132

91-21-51

Section D05000

Page 46

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05045J		P003-03/ /		RCPT-P3-3 (continued)				ALL
	41	UNUSED						050, 150-154
	41		W0033	107	20		34-61-26	051-099, 155-199, 275-299
	42	UNUSED						ALL
	43	UNUSED						ALL
	44		W0033	071	20		34-22-27	ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47		W0033	127	22		34-12-62	ALL
	48		W0033	128	22		34-12-62	ALL
	49		W0033	126	22		34-12-62	ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55		W0033	072	22		34-22-27	ALL
D05045P		P003-03/ /		PLUG-P3-3				ALL
	1		W0031	709	24		34-61-26	ALL
	2		W0031	736	20		34-61-26	ALL
	3		W0031	178	22		34-12-62	ALL
	4		W0031	082	24		34-22-37	ALL
	5		W0031	737	20		34-61-26	ALL
	6		W0031	738	24		34-61-26	ALL
	7		W0031	012	24		34-22-27	ALL
	8		W0031	013	24		34-22-27	ALL
	9		W0031	014	20		34-22-27	ALL
	10		W0031	015	24		34-22-27	ALL
	11		W0031	016	20		34-22-27	ALL
	12		W0031	758	24		34-61-26	050-099, 155-199, 275-299
	12	UNUSED						150-154
	13	UNUSED						ALL
	14	UNUSED						ALL
	15		W0031	739	20		34-61-26	ALL
	16		W0031	018	24		34-22-27	ALL
	17		W0031	019	20		34-22-27	ALL
	18		W0031	743	24		34-61-26	ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21		W0031	005	24		34-22-92	ALL

HOOKUP LIST
D280T132

91-21-51
Section D05000
Page 47
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05045P		P003-03/ /		PLUG-P3-3 (continued)				ALL
	22		W0031	006	20		34-22-92	ALL
	23		W0031	157	20		34-12-62	ALL
	24		W0031	649	24		34-22-27	ALL
	25		W0031	159	20		34-12-62	ALL
	26		W0031	156	22		34-13-21	ALL
	27		W0031	090	24		34-21-31	ALL
	28		W0031	021	20		34-22-38	ALL
	29		W0031	025	24		34-22-38	ALL
	30		W0031	742	20		34-61-26	ALL
	31		W0031	170	24		22-41-13	ALL
	32		W0031	169	24		22-41-13	ALL
	33		W0031	171	20		22-41-13	ALL
	34		W0031	172	22		34-22-26	ALL
	35		W0031	173	20		34-22-26	ALL
	36		W0031	176	24		32-42-11	ALL
	37		W0031	177	20		32-42-11	ALL
	38		W0031	130	20		33-13-13	ALL
	39		W0031	131	20		33-13-13	ALL
	40	UNUSED						050, 150-154
	40		W0031	768	20		34-61-26	051-099, 155-199, 275-299
	41	UNUSED						050, 150-154
	41		W0031	769	20		34-61-26	051-099, 155-199, 275-299
	42	UNUSED						ALL
	43	UNUSED						ALL
	44		W0031	804	20		34-22-27	ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47		W0031	847	22		34-12-62	ALL
	48		W0031	848	22		34-12-62	ALL
	49		W0031	846	22		34-12-62	ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55		W0031	180	22		34-22-27	ALL
D05048J		AC0701/ /		RCPT-				ALL
	1		W0942	002	24		21-51-11	ALL
	2		W0942	305B	24		21-52-11	ALL

HOOKUP LIST
D280T132



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05048J		AC0701/ /		RCPT- (continued)				ALL
	3		W0942	305R	24		21-52-11	ALL
	4		W0942	305Y	24		21-52-11	ALL
	5		W0942	202B	22		21-52-31	ALL
	6		W0942	202R	22		21-52-31	ALL
	7		W0942	213R	24		21-52-41	ALL
	8		W0942	213B	24		21-52-41	ALL
	9		W0942	214R	24		21-52-41	ALL
	10		W0942	309B	24		21-51-12	ALL
	11		W0942	309R	24		21-51-12	ALL
	12		W0942	309Y	24		21-51-12	ALL
	13		W0942	308B	22		21-51-12	ALL
	14		W0942	308R	22		21-51-12	ALL
	15		W0942	308Y	22		21-51-12	ALL
	16		W0942	205B	22		21-51-12	ALL
	17		W0942	205R	22		21-51-12	ALL
	18		W0942	204B	22		21-51-12	ALL
	19		W0942	204R	22		21-51-12	ALL
	20		W0942	085	24		21-61-11	ALL
	21		W0942	086	24		21-61-11	ALL
	22		W0942	310B	24		21-61-11	ALL
	23		W0942	310R	24		21-61-11	ALL
	24		W0942	310Y	24		21-61-11	ALL
	25		W0942	088	24		21-61-21	ALL
	26		W0942	089	24		21-61-21	ALL
	27		W0942	311B	24		21-61-21	ALL
	28		W0942	311R	24		21-61-21	ALL
	29		W0942	311Y	24		21-61-21	ALL
	30		W0942	090	24		21-61-31	ALL
	31		W0942	091	24		21-61-31	ALL
	32		W0942	312B	24		21-61-31	ALL
	33		W0942	312R	24		21-61-31	ALL
	34		W0942	312Y	24		21-61-31	ALL
	35		W0942	313B	24		21-64-11	ALL
	36		W0942	313R	24		21-64-11	ALL
	37		W0942	313Y	24		21-64-11	ALL
	38		W0942	314B	24		21-64-11	ALL
	39		W0942	314R	24		21-64-11	ALL
	40		W0942	314Y	24		21-64-11	ALL
	41		W0942	315B	24		21-64-11	ALL
	42		W0942	315R	24		21-64-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05000

Page 49

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05048J		AC0701/ /		RCPT- (continued)				ALL
	43		W0942	315Y	24		21-64-11	ALL
	44		W0942	214B	24		21-52-41	ALL
	45		W0942	401B	24		21-52-41	ALL
	46		W0942	401G	24		21-52-41	ALL
	47		W0942	401R	24		21-52-41	ALL
	48		W0942	401Y	24		21-52-41	ALL
	49		W0942	327B	24		21-64-11	ALL
	50		W0942	212R	24		36-21-11	ALL
	51		W0942	212B	24		36-21-11	ALL
	52		W0942	327Y	24		21-64-11	ALL
	53		W0942	327R	24		21-64-11	ALL
	54		W0942	225B	22		21-52-31	ALL
	55		W0942	225R	22		21-52-31	ALL
D05048P		AC0701/ /		PLUG-				ALL
	1		W0508	001	20		21-51-11	ALL
	2		W0508	305B	20		21-52-11	ALL
	3		W0508	305R	20		21-52-11	ALL
	4		W0508	305Y	20		21-52-11	ALL
	5		W0508	201B	20		21-52-31	ALL
	6		W0508	201R	20		21-52-31	ALL
	7		W0508	203R	20		21-52-41	ALL
	8		W0508	203B	20		21-52-41	ALL
	9		W0508	206R	20		21-52-41	ALL
	10		W0508	301B	20		21-51-12	ALL
	11		W0508	301R	20		21-51-12	ALL
	12		W0508	301Y	20		21-51-12	ALL
	13		W0508	302B	20		21-51-12	ALL
	14		W0508	302R	20		21-51-12	ALL
	15		W0508	302Y	20		21-51-12	ALL
	16		W0508	202B	20		21-51-12	ALL
	17		W0508	202R	20		21-51-12	ALL
	18		W0508	204B	20		21-51-12	ALL
	19		W0508	204R	20		21-51-12	ALL
	20		W0508	008	20		21-61-11	ALL
	21		W0508	009	20		21-61-11	ALL
	22		W0508	303B	20		21-61-11	ALL
	23		W0508	303R	20		21-61-11	ALL
	24		W0508	303Y	20		21-61-11	ALL
	25		W0508	012	20		21-61-21	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05000

Page 50

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05048P		AC0701/ /		PLUG- (continued)				ALL
	26		W0508	013	20		21-61-21	ALL
	27		W0508	304B	20		21-61-21	ALL
	28		W0508	304R	20		21-61-21	ALL
	29		W0508	304Y	20		21-61-21	ALL
	30		W0508	016	20		21-61-31	ALL
	31		W0508	017	20		21-61-31	ALL
	32		W0508	306B	20		21-61-31	ALL
	33		W0508	306R	20		21-61-31	ALL
	34		W0508	306Y	20		21-61-31	ALL
	35		W0508	309B	20		21-64-11	ALL
	36		W0508	309R	20		21-64-11	ALL
	37		W0508	309Y	20		21-64-11	ALL
	38		W0508	310B	20		21-64-11	ALL
	39		W0508	310R	20		21-64-11	ALL
	40		W0508	310Y	20		21-64-11	ALL
	41		W0508	311B	20		21-64-11	ALL
	42		W0508	311R	20		21-64-11	ALL
	43		W0508	311Y	20		21-64-11	ALL
	44		W0508	206B	20		21-52-41	ALL
	45		W0508	401B	20		21-52-41	ALL
	46		W0508	401G	20		21-52-41	ALL
	47		W0508	401R	20		21-52-41	ALL
	48		W0508	401Y	20		21-52-41	ALL
	49		W0508	316B	20		21-64-11	ALL
	50		W0508	205R	20		36-21-11	ALL
	51		W0508	205B	20		36-21-11	ALL
	52		W0508	316Y	20		21-64-11	ALL
	53		W0508	316R	20		21-64-11	ALL
	54		W0508	207B	20		21-52-31	ALL
	55		W0508	207R	20		21-52-31	ALL
D05051J		AE0219/ /		RCPT-SHELL				ALL
	A01	\$D	W2002	RM01	24		99-99-99	050-099, 150-154, 275-276
	A01	\$D	W2002	RK01	24		SPARE	ALL
	A01	\$D	W2002	RM01	24		SPARE	155-199, 277-299
	A02	\$D	W2002	RK02	24		22-21-11	ALL
	A02	\$D	W2002	RM02	24		22-21-11	ALL
	A03	\$D	W2002	RK03	24		SPARE	ALL
	A03	\$D	W2002	RM03	24		SPARE	ALL
	A04	\$D	W2002	RK04	24		27-09-14	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05000

Page 51

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05051J		AE0219/ /		RCPT-SHELL (continued)				ALL
	A04	\$D	W2002	RM04	24		27-09-14	ALL
	A05	\$D	W2002	RK05	24		27-09-14	ALL
	A05	\$D	W2002	RM05	24		27-09-14	ALL
	A06	\$D	W2002	RK06	24		27-11-12	ALL
	A06	\$D	W2002	RM06	24		27-11-12	ALL
	A07	\$D	W2002	RK07	24		27-41-11	ALL
	A07	\$D	W2002	RM07	24		27-41-11	ALL
	A08	\$D	W2002	RK08	24		27-41-11	ALL
	A08	\$D	W2002	RM08	24		27-41-11	ALL
	A09	\$D	W2002	RK09	24		27-61-12	ALL
	A09	\$D	W2002	RM09	24		27-61-12	ALL
	A10	\$D	W2002	RK10	24		27-21-12	ALL
	A10	\$D	W2002	RM10	24		27-21-12	ALL
	A11	\$D	W2002	RK11	24		SPARE	ALL
	A11	\$D	W2002	RM11	24		SPARE	ALL
	A12	\$D	W2002	RK12	24		SPARE	ALL
	A12	\$D	W2002	RM12	24		SPARE	ALL
	A13	\$D	W2002	RK13	24		27-09-14	ALL
	A13	\$D	W2002	RM13	24		27-09-14	ALL
	A14	\$D	W2002	RK14	24		27-09-14	ALL
	A14	\$D	W2002	RM14	24		27-09-14	ALL
	A15	\$D	W2002	RK15	24		27-09-14	ALL
	A15	\$D	W2002	RM15	24		27-09-14	ALL
	A16	\$D	W2002	RK16	24		27-09-14	ALL
	A16	\$D	W2002	RM16	24		27-09-14	ALL
	A17	\$D	W2002	RK17	24		SPARE	ALL
	A17	\$D	W2002	RM17	24		SPARE	ALL
	A18	\$D	W2002	RK18	24		SPARE	ALL
	A18	\$D	W2002	RM18	24		SPARE	ALL
	A19	\$D	W2002	RK19	24		SPARE	ALL
	A19	\$D	W2002	RM19	24		SPARE	ALL
	A20	\$D	W2002	RK20	24		99-99-99	050-099, 150-154, 275-276
	A20	\$D	W2002	RM20	24		99-99-99	050-099, 150-154, 275-276
	A20	\$D	W2002	RK20	24		SPARE	155-199, 277-299
	A20	\$D	W2002	RM20	24		SPARE	155-199, 277-299
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04	UNUSED						ALL
	B05	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D05000

Page 52

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05051J		AE0219/ /		RCPT-SHELL (continued)				ALL
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13	UNUSED						ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	B16	UNUSED						ALL
	B17	UNUSED						ALL
	B18	UNUSED						ALL
	B19	UNUSED						ALL
	B20	UNUSED						ALL
D05051P		AE0219/ /		PLUG-SHELL				ALL
	A01	UNUSED						ALL
	A02	\$D	W1307	023	24		22-21-11	ALL
	A03	\$D	W1307	016	24		SPARE	ALL
	A04	\$D	W1307	011	24		27-09-14	ALL
	A05	\$D	W1307	010	24		27-09-14	ALL
	A06	\$D	W1307	017	24		27-11-12	ALL
	A07	\$D	W1307	014	24		27-41-11	ALL
	A08	\$D	W1307	015	24		27-41-11	ALL
	A09	\$D	W1307	013	24		27-61-12	ALL
	A10	\$D	W1307	024	24		27-21-12	ALL
	A11	\$D	W1307	042	24		SPARE	ALL
	A12	\$D	W1307	043	24		SPARE	ALL
	A13	\$D	W1307	044	24		27-09-14	ALL
	A14	\$D	W1307	049	24		27-09-14	ALL
	A15	\$D	W1307	050	24		27-09-14	ALL
	A16	\$D	W1307	051	24		27-09-14	ALL
	A17	\$D	W1307	052	24		SPARE	ALL
	A18	\$D	W1307	053	24		SPARE	ALL
	A19	\$D	W1307	054	24		SPARE	ALL
	A20	UNUSED						ALL
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D05000

Page 53

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05051P		AE0219/ /		PLUG-SHELL (continued)				ALL
	B04	UNUSED						ALL
	B05	UNUSED						ALL
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13	UNUSED						ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	B16	UNUSED						ALL
	B17	UNUSED						ALL
	B18	UNUSED						ALL
	B19	UNUSED						ALL
	B20	UNUSED						ALL
	CAP	Y	W1307	052	24		SPARE	ALL
	CAP	Y	W1307	053	24		SPARE	ALL
	CAP	Y	W1307	054	24		SPARE	ALL
D05052J		AE0224/ /		RCPT-P37				ALL
	1		W0198	084	16		28-25-11	ALL
	2		W0198	091	16		28-25-11	ALL
	3	UNUSED						ALL
	4		W0198	180	16		27-09-13	ALL
	5		W0198	084Z			28-25-11	ALL
	6		W0198	516	22		28-31-12	050-099, 155-199, 276-299
	6	UNUSED						150-154, 275
	7		W0198	070	22		29-11-32	ALL
	8	UNUSED						ALL
	9		W0198	068	24		29-11-32	ALL
	10		W0198	549	22		28-42-13	050-099, 155-199, 276-299
	10	UNUSED						150-154, 275
	11		W0198	568R	22		26-17-11	ALL
	12	UNUSED						050-099, 275-299
	12		W0198	02A	24		28-22-12	150-199
	13	UNUSED						ALL
	14	UNUSED						ALL
	15		W0198	035	24		29-21-31	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05000

Page 54

Feb 06/2009



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05052J		AE0224/ /		RCPT-P37 (continued)				ALL
	16	UNUSED						ALL
	17		W0198	111	24		28-22-11	ALL
	18		W0198	082	24		28-25-11	ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21		W0198	090	24		28-25-11	ALL
	22	UNUSED						ALL
	23		W0198	189	24		28-22-12	ALL
	24	DK	W0198	107	18		27-11-12	ALL
	25	DK	W0198	108	18		27-11-12	ALL
	26		W0198	109	20		27-11-12	ALL
	27		W0198	115	24		29-21-31	ALL
	28		W0198	110	20		27-11-12	ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31		W0198	555	24		28-25-11	ALL
	32		W0198	554	24		28-25-11	ALL
	DED		W0198	035Z			29-21-31	ALL
	DED		W0198	516Z			28-31-12	050-099, 155-199, 276-299
	DED		W0198	549Z			28-42-13	050-099, 155-199, 276-299
	DED		W0198	02AZ			28-22-12	150-199
D05052P		AE0224/ /		PLUG-P37				ALL
	1		W0590	037	14		28-25-11	050-099
	1		W0590	037	12		28-25-11	150-199, 275-299
	2		W0590	038	16		28-25-11	050-099
	2		W0590	038	12		28-25-11	150-199, 275-299
	3	UNUSED						ALL
	4		W0590	044	16		27-09-13	ALL
	5		W0590	037Z			28-25-11	ALL
	6		W0590	088	22		28-31-12	050-099, 155-199, 276-299
	6	UNUSED						150-154, 275
	7		W0590	027	22		29-11-32	ALL
	8	UNUSED						ALL
	9		W0590	075	24		29-11-32	ALL
	10		W0590	089	22		28-42-13	050-099, 155-199, 276-299
	10	UNUSED						150-154, 275
	11		W0590	074R	22		26-17-11	ALL
	12	UNUSED						050-099, 275-299
	12		W0590	021	24		28-22-12	150-199

HOOKUP LIST

D280T132

91-21-51

Section D05000

Page 55

Feb 06/2009



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05052P		AE0224/ /		PLUG-P37 (continued)				ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15		W0590	002	24		29-21-31	ALL
	16	UNUSED						ALL
	17		W0590	055	24		28-22-11	ALL
	18		W0590	056	24		28-25-11	ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21		W0590	059	24		28-25-11	ALL
	22	UNUSED						ALL
	23		W0590	046	24		28-22-12	ALL
	24	DL	W0590	070	18		27-11-12	ALL
	25	DL	W0590	071	18		27-11-12	ALL
	26		W0590	072	20		27-11-12	ALL
	27		W0590	022	24		29-21-31	ALL
	28		W0590	073	20		27-11-12	ALL
	29	UNUSED						ALL
	30		W0590	018	24		36-11-61	050-099, 155-156, 162-166
	30		W0590	018	24		SPARE	150-154, 157, 167-199, 275-299
	31		W0590	030	24		28-25-11	ALL
	32		W0590	029	24		28-25-11	ALL
	DED		W0590	021Z			28-22-12	150-199
D05054J		AC1402/ /		RCPT-E6-1				ALL
	1		W0606	024	24		31-31-22	ALL
	2		W0606	152	24		49-15-11	ALL
	3		W0606	172	22		49-61-11	ALL
	4		W0606	154	16		49-61-11	ALL
	5		W0606	301R	24		49-94-14	ALL
	6		W0606	301B	24		49-94-14	ALL
	7		W0606	301Y	24		49-94-14	ALL
	8		W0606	167	24		24-31-41	ALL
	9		W0606	543	22		80-11-11	ALL
	10		W0606	109	24		31-31-22	ALL
	11		W0606	644	24		73-21-15	ALL
	12		W0606	110	24		31-31-22	ALL
D05054P		AC1402/ /		PLUG-E6				ALL
	1		W0020	064	24		31-31-22	ALL
	2		W0020	022	24		49-15-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05000

Page 56

Feb 06/2009



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05054P		AC1402/ /		PLUG-E6 (continued)				ALL
	3		W0020	065	22		49-61-11	ALL
	4		W0020	037	16		49-61-11	ALL
	5		W0020	302R	24		49-94-14	ALL
	6		W0020	302B	24		49-94-14	ALL
	7		W0020	302Y	24		49-94-14	ALL
	8		W0020	044	24		24-31-41	ALL
	9		W0020	066	22		80-11-11	ALL
	10		W0020	129	24		31-31-22	ALL
	11		W0020	038	24		73-21-15	ALL
	12		W0020	130	24		31-31-22	ALL
D05055J		AE0221/ /		RCPT-E8				ALL
	1		W1035	001	24		31-41-12	ALL
	2		W1035	002	24		31-41-12	ALL
	3	UNUSED						ALL
	4		W1035	201R	24		31-41-12	ALL
	5		W1035	201B	24		31-41-12	ALL
	6		W1035	201Z			31-41-12	ALL
	7		W1035	014	24		31-41-16	ALL
	8		W1035	013	24		31-41-16	ALL
	9		W1035	062	22		31-41-17	ALL
	10		W1035	063	22		31-41-17	ALL
	11		W1035	210WN	26		31-41-21	ALL
	12		W1035	210W	26		31-41-21	ALL
	13		W1035	210Z			31-41-21	ALL
	14		W1035	211WN	26		31-41-21	ALL
	15		W1035	211W	26		31-41-21	ALL
	16		W1035	211Z			31-41-21	ALL
	17		W1035	212WN	26		31-41-21	ALL
	18		W1035	212W	26		31-41-21	ALL
	19		W1035	212Z			31-41-21	ALL
	20		W1035	213WN	26		31-41-21	ALL
	21		W1035	213W	26		31-41-21	ALL
	22		W1035	213Z			31-41-21	ALL
	23		W1035	222WN	26		31-41-22	ALL
	24		W1035	222W	26		31-41-22	ALL
	25		W1035	222Z			31-41-22	ALL
	26		W1035	223WN	26		31-41-22	ALL
	27		W1035	223W	26		31-41-22	ALL
	28		W1035	223Z			31-41-22	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05000

Page 57

Feb 06/2009



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05055J		AE0221 / /		RCPT-E8 (continued)				ALL
	29		W1035	224WN	26		31-41-22	ALL
	30		W1035	224W	26		31-41-22	ALL
	31		W1035	224Z			31-41-22	ALL
	32		W1035	225WN	26		31-41-22	ALL
	33		W1035	225W	26		31-41-22	ALL
	34		W1035	225Z			31-41-22	ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
D05055P		AE0221 / /		PLUG-E8				ALL
	1		W1435	004	24		31-41-12	ALL
	2		W1435	005	24		31-41-12	ALL
	3	UNUSED						ALL
	4		W1435	201R	24		31-41-12	ALL
	5		W1435	201B	24		31-41-12	ALL
	6		W1435	201Z			31-41-12	ALL
	7		W1435	007	24		31-41-16	ALL
	8		W1435	008	24		31-41-16	ALL
	9		W1435	009	22		31-41-17	ALL
	10		W1435	010	22		31-41-17	ALL
	11		W1435	205WN	24		31-41-21	ALL
	12		W1435	205W	24		31-41-21	ALL
	13		W1435	205Z			31-41-21	ALL
	14		W1435	206WN	24		31-41-21	ALL
	15		W1435	206W	24		31-41-21	ALL
	16		W1435	206Z			31-41-21	ALL
	17		W1435	207WN	24		31-41-21	ALL
	18		W1435	207W	24		31-41-21	ALL
	19		W1435	207Z			31-41-21	ALL
	20		W1435	208WN	24		31-41-21	ALL
	21		W1435	208W	24		31-41-21	ALL
	22		W1435	208Z			31-41-21	ALL
	23		W1435	209WN	24		31-41-22	ALL
	24		W1435	209W	24		31-41-22	ALL
	25		W1435	209Z			31-41-22	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05000

Page 58

Feb 06/2009



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05055P		AE0221 / /		PLUG-E8 (continued)				ALL
	26		W1435	210WN	24		31-41-22	ALL
	27		W1435	210W	24		31-41-22	ALL
	28		W1435	210Z			31-41-22	ALL
	29		W1435	211WN	24		31-41-22	ALL
	30		W1435	211W	24		31-41-22	ALL
	31		W1435	211Z			31-41-22	ALL
	32		W1435	212WN	24		31-41-22	ALL
	33		W1435	212W	24		31-41-22	ALL
	34		W1435	212Z			31-41-22	ALL
	35		W1435	012	22		SPARE	ALL
	36		W1435	013	22		SPARE	ALL
	37		W1435	014	22		SPARE	ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
D05056J		AC0702 / /		RCPT-				ALL
	1		W0738	301B	24		21-53-21	ALL
	2		W0738	301R	24		21-53-21	ALL
	3		W0738	301Y	24		21-53-21	ALL
	4		W0738	302B	24		21-53-21	ALL
	5		W0738	302R	24		21-53-21	ALL
	6		W0738	302Y	24		21-53-21	ALL
	7		W0738	303B	24		21-53-21	ALL
	8		W0738	303R	24		21-53-21	ALL
	9		W0738	303Y	24		21-53-21	ALL
	10		W0738	305B	24		21-52-21	ALL
	11		W0738	305R	24		21-52-21	ALL
	12		W0738	305Y	24		21-52-21	ALL
	13		W0738	306B	22		21-51-22	ALL
	14		W0738	306R	22		21-51-22	ALL
	15		W0738	306Y	22		21-51-22	ALL
	16		W0738	307B	22		21-51-22	ALL
	17		W0738	307R	22		21-51-22	ALL
	18		W0738	307Y	22		21-51-22	ALL
	19		W0738	049	24		36-11-21	ALL
	20		W0738	050	24		36-11-21	ALL
	21		W0738	051	24		36-11-21	ALL
	22		W0738	052	24		36-11-21	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05000

Page 59

Feb 06/2009



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05056J		AC0702/ /		RCPT- (continued)				ALL
	23		W0738	082	22		SPARE	ALL
	24		W0738	801	22		SPARE	ALL
	25		W0738	309B	22		21-52-21	ALL
	26		W0738	309R	22		21-52-21	ALL
	27		W0738	309Y	22		21-52-21	ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
D05056P		AC0702/ /		PLUG-				ALL
	1		W0612	301B	20		21-53-21	ALL
	2		W0612	301R	20		21-53-21	ALL
	3		W0612	301Y	20		21-53-21	ALL
	4		W0612	302B	20		21-53-21	ALL
	5		W0612	302R	20		21-53-21	ALL
	6		W0612	302Y	20		21-53-21	ALL
	7		W0612	303B	20		21-53-21	ALL
	8		W0612	303R	20		21-53-21	ALL
	9		W0612	303Y	20		21-53-21	ALL
	10		W0612	305B	20		21-52-21	ALL
	11		W0612	305R	20		21-52-21	ALL
	12		W0612	305Y	20		21-52-21	ALL
	13		W0612	306B	20		21-51-22	ALL
	14		W0612	306R	20		21-51-22	ALL
	15		W0612	306Y	20		21-51-22	ALL
	16		W0612	307B	20		21-51-22	ALL
	17		W0612	307R	20		21-51-22	ALL
	18		W0612	307Y	20		21-51-22	ALL
	19		W0612	025	20		36-11-21	ALL
	20		W0612	026	20		36-11-21	ALL
	21		W0612	027	20		36-11-21	ALL
	22		W0612	028	20		36-11-21	ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25		W0612	308B	20		21-52-21	ALL
	26		W0612	308R	20		21-52-21	ALL
	27		W0612	308Y	20		21-52-21	ALL
	28	UNUSED						ALL
	29	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D05000

Page 60

Feb 06/2009



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05056P		AC0702/ /		PLUG- (continued)				ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
D05057J		AE0221/ /		RCPT-E8				ALL
	1		W1037	001	24		31-41-12	ALL
	2		W1037	002	24		31-41-12	ALL
	3	UNUSED						ALL
	4		W1037	201R	24		31-41-12	ALL
	5		W1037	201B	24		31-41-12	ALL
	6		W1037	201Z			31-41-12	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11		W1037	210WN	26		31-41-23	ALL
	12		W1037	210W	26		31-41-23	ALL
	13		W1037	210Z			31-41-23	ALL
	14		W1037	211WN	26		31-41-23	ALL
	15		W1037	211W	26		31-41-23	ALL
	16		W1037	211Z			31-41-23	ALL
	17		W1037	212WN	26		31-41-23	ALL
	18		W1037	212W	26		31-41-23	ALL
	19		W1037	212Z			31-41-23	ALL
	20		W1037	213WN	26		31-41-23	ALL
	21		W1037	213W	26		31-41-23	ALL
	22		W1037	213Z			31-41-23	ALL
	23		W1037	222WN	26		31-41-24	ALL
	24		W1037	222W	26		31-41-24	ALL
	25		W1037	222Z			31-41-24	ALL
	26		W1037	223WN	26		31-41-24	ALL
	27		W1037	223W	26		31-41-24	ALL
	28		W1037	223Z			31-41-24	ALL
	29		W1037	224WN	26		31-41-24	ALL
	30		W1037	224W	26		31-41-24	ALL
	31		W1037	224Z			31-41-24	ALL
	32		W1037	225WN	26		31-41-24	ALL
	33		W1037	225W	26		31-41-24	ALL
	34		W1037	225Z			31-41-24	ALL
	35	UNUSED						ALL
	36	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D05000

Page 61

Feb 06/2009



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05057J		AE0221 / /		RCPT-E8 (continued)				ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
D05057P		AE0221 / /		PLUG-E8				ALL
	1		W1437	004	24		31-41-12	ALL
	2		W1437	005	24		31-41-12	ALL
	3	UNUSED						ALL
	4		W1437	201R	24		31-41-12	ALL
	5		W1437	201B	24		31-41-12	ALL
	6		W1437	201Z			31-41-12	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11		W1437	205WN	24		31-41-23	ALL
	12		W1437	205W	24		31-41-23	ALL
	13		W1437	205Z			31-41-23	ALL
	14		W1437	206WN	24		31-41-23	ALL
	15		W1437	206W	24		31-41-23	ALL
	16		W1437	206Z			31-41-23	ALL
	17		W1437	207WN	24		31-41-23	ALL
	18		W1437	207W	24		31-41-23	ALL
	19		W1437	207Z			31-41-23	ALL
	20		W1437	208WN	24		31-41-23	ALL
	21		W1437	208W	24		31-41-23	ALL
	22		W1437	208Z			31-41-23	ALL
	23		W1437	209WN	24		31-41-24	ALL
	24		W1437	209W	24		31-41-24	ALL
	25		W1437	209Z			31-41-24	ALL
	26		W1437	210WN	24		31-41-24	ALL
	27		W1437	210W	24		31-41-24	ALL
	28		W1437	210Z			31-41-24	ALL
	29		W1437	211WN	24		31-41-24	ALL
	30		W1437	211W	24		31-41-24	ALL
	31		W1437	211Z			31-41-24	ALL
	32		W1437	212WN	24		31-41-24	ALL
	33		W1437	212W	24		31-41-24	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05000

Page 62

Feb 06/2009



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05057P		AE0221 / /		PLUG-E8 (continued)				ALL
	34		W1437	212Z			31-41-24	ALL
	35		W1437	012	22		SPARE	ALL
	36		W1437	013	22		SPARE	ALL
	37		W1437	014	22		SPARE	ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
D05058J		AC0701 / /		RCPT-LH DISC PNL				ALL
	1		W0602	024	24		21-51-11	ALL
	2		W0602	025	24		21-51-11	ALL
	3		W0602	026	24		21-51-11	ALL
	4		W0602	027	24		21-51-11	ALL
	5	UNUSED						050-099
	5		W0602	019	20		SPARE	150-199, 275-299
	6	UNUSED						050-099
	6		W0602	020	20		SPARE	150-199, 275-299
	7		W0602	021	20		SPARE	ALL
	8	UNUSED						050-099, 155-199, 276-299
	8		W0602	041	20		SPARE	150-154, 275
	9		W0602	030	24		SPARE	050-099
	9		W0602	030	24		21-51-11	150-199, 275-299
	10		W0602	237B	24		21-51-11	ALL
	11		W0602	237R	24		21-51-11	ALL
	12		W0602	028	20		SPARE	ALL
	13		W0602	029	20		SPARE	ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D05000

Page 63

Feb 06/2009



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05058P		AC0701/ /		PLUG-				ALL
	1		W0944	001	20		21-51-11	ALL
	2		W0944	004	20		21-51-11	ALL
	3		W0944	005	20		21-51-11	ALL
	4		W0944	008	20		21-51-11	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						050-099
	9		W0944	009	20		21-51-11	150-199, 275-299
	10		W0944	201B	20		21-51-11	ALL
	11		W0944	201R	20		21-51-11	ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D05060J		AE0209/ /		RCPT-				ALL
	1		W0176	05D	24		24-51-71	ALL
	2		W0176	05B	24		24-51-71	ALL
	3		W0176	05C	24		24-51-71	ALL
	4		W0176	04Y	24		24-51-71	ALL
	5		W0176	202B	24		21-31-11	ALL
	6		W0176	202R	24		21-31-11	ALL
	7		W0176	776	24		21-44-21	ALL
	8		W0176	248B	20		21-44-22	050-099, 150-199
	8	UNUSED						275-299
	9		W0176	248R	20		21-44-22	050-099, 150-199
	9	UNUSED						275-299
	10		W0176	22E	22		21-66-21	050-099, 162-199
	10	UNUSED						150-157, 275-299

HOOKUP LIST

D280T132

91-21-51

Section D05000

Page 64

Feb 06/2009



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05060J		AE0209/ /		RCPT- (continued)				ALL
	11		W0176	23E	22		21-66-21	050-099, 162-199
	11	UNUSED						150-157, 275-299
	12		W0176	40FR	22		21-66-21	050-099, 162-199
	12	UNUSED						150-157, 275-299
	13		W0176	40FB	22		21-66-21	050-099, 162-199
	13	UNUSED						150, 152-157
	14		W0176	40FZ			21-66-21	050-099, 162-199
	14	UNUSED						150, 152-157
	15		W0176	65E	22		21-66-41	050-099, 150, 152-199
	16		W0176	41FR	22		21-66-41	050-099, 150, 152-199
	17		W0176	41FB	22		21-66-41	050-099, 150, 152-199
	18		W0176	41FZ			21-66-41	050-099, 150, 152-199
	19		W0176	44F	22		21-66-41	050-099, 150, 152-199
	20	UNUSED						050-099, 150, 152-199
	21	UNUSED						050-099, 150, 152-199
	22	UNUSED						050-099, 150, 152-199
	23	UNUSED						050-099, 150, 152-199
	24	UNUSED						050-099, 150, 152-199
D05060P		AE0209/ /		PLUG-P36				ALL
	1		W0654	001	24		24-51-71	ALL
	2		W0654	002	24		24-51-71	ALL
	3		W0654	003	24		24-51-71	ALL
	4		W0654	004	24		24-51-71	ALL
	5		W0654	201B	24		21-31-11	ALL
	6		W0654	201R	24		21-31-11	ALL
	7		W0654	034	24		21-44-21	ALL
	8		W0654	207B	20		21-44-22	050-099, 150-199
	8	UNUSED						275-299
	9		W0654	207R	20		21-44-22	050-099, 150-199
	9	UNUSED						275-299
	10		W0654	035	22		21-66-21	050-099, 162-199
	10	UNUSED						150-157, 275-299
	11		W0654	036	22		21-66-21	050-099, 162-199
	11	UNUSED						150-157, 275-299
	12		W0654	209R	22		21-66-21	050-099, 162-199
	12	UNUSED						150-157, 275-299
	13		W0654	209B	22		21-66-21	050-099, 162-199
	13	UNUSED						150, 152-157
	14		W0654	209Z			21-66-21	050-099, 162-199

HOOKUP LIST
D280T132

91-21-51
Section D05000
Page 65
Feb 06/2009



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05060P		AE0209/ /		PLUG-P36 (continued)				ALL
	14	UNUSED						150, 152-157
	15		W0654	037	22		21-66-41	050-099, 150, 152-199
	16		W0654	210R	22		21-66-41	050-099, 150, 152-199
	17		W0654	210B	22		21-66-41	050-099, 150, 152-199
	18		W0654	210Z			21-66-41	050-099, 150, 152-199
	19		W0654	038	22		21-66-41	050-099, 150, 152-199
	20	UNUSED						050-099, 150, 152-199
	21	UNUSED						050-099, 150, 152-199
	22	UNUSED						050-099, 150, 152-199
	23	UNUSED						050-099, 150, 152-199
	24	UNUSED						050-099, 150, 152-199
D05061J		AE0219/ /		RCPT-SHELL				ALL
	A01	\$D	W2002	MM01	24		99-99-99	050-099, 150-154, 275-276
	A01	\$D	W2002	MK01	24		SPARE	ALL
	A01	\$D	W2002	MM01	24		SPARE	155-199, 277-299
	A02	\$D	W2002	MK02	24		34-21-31	ALL
	A02	\$D	W2002	MM02	24		34-21-31	ALL
	A03	\$D	W2002	MK03	24		34-21-31	ALL
	A03	\$D	W2002	MM03	24		34-21-31	ALL
	A04	\$D	W2002	MK04	24		34-21-31	ALL
	A04	\$D	W2002	MM04	24		34-21-31	ALL
	A05	\$D	W2002	MK05	24		SPARE	ALL
	A05	\$D	W2002	MM05	24		SPARE	ALL
	A06	\$D	W2002	MK06	24		SPARE	ALL
	A06	\$D	W2002	MM06	24		SPARE	ALL
	A07	\$D	W2002	MK07	24		SPARE	ALL
	A07	\$D	W2002	MM07	24		SPARE	ALL
	A08	\$D	W2002	MK08	24		SPARE	ALL
	A08	\$D	W2002	MM08	24		SPARE	ALL
	A09	\$D	W2002	MK09	24		22-14-31	ALL
	A09	\$D	W2002	MM09	24		22-14-31	ALL
	A10	\$D	W2002	MK10	24		SPARE	ALL
	A10	\$D	W2002	MM10	24		SPARE	ALL
	A11	\$D	W2002	MK11	24		SPARE	ALL
	A11	\$D	W2002	MM11	24		SPARE	ALL
	A12	\$D	W2002	MK12	24		SPARE	ALL
	A12	\$D	W2002	MM12	24		SPARE	ALL
	A13	\$D	W2002	MK13	24		SPARE	ALL
	A13	\$D	W2002	MM13	24		SPARE	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05000

Page 66

Feb 06/2009



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05061J		AE0219/ /		RCPT-SHELL (continued)				ALL
	A14	\$D	W2002	MK14	24		SPARE	ALL
	A14	\$D	W2002	MM14	24		SPARE	ALL
	A15	\$D	W2002	MK15	24		SPARE	ALL
	A15	\$D	W2002	MM15	24		SPARE	ALL
	A16	\$D	W2002	MK16	24		SPARE	ALL
	A16	\$D	W2002	MM16	24		SPARE	ALL
	A17	\$D	W2002	MK17	24		SPARE	ALL
	A17	\$D	W2002	MM17	24		SPARE	ALL
	A18	\$D	W2002	MK18	24		SPARE	ALL
	A18	\$D	W2002	MM18	24		SPARE	ALL
	A19	\$D	W2002	MK19	24		SPARE	ALL
	A19	\$D	W2002	MM19	24		SPARE	ALL
	A20	\$D	W2002	MK20	24		99-99-99	050-099, 150-154, 275-276
	A20	\$D	W2002	MM20	24		99-99-99	050-099, 150-154, 275-276
	A20	\$D	W2002	MK20	24		SPARE	155-199, 277-299
	A20	\$D	W2002	MM20	24		SPARE	155-199, 277-299
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04	UNUSED						ALL
	B05	UNUSED						ALL
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13	UNUSED						ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	B16	UNUSED						ALL
	B17	UNUSED						ALL
	B18	UNUSED						ALL
	B19	UNUSED						ALL
	B20	UNUSED						ALL
D05061P		242/169/L 58		PLUG-				ALL
	A01	UNUSED						ALL
	A02	\$D	W1705	002	24		34-21-31	ALL

HOOKUP LIST
D280T132

91-21-51
Section D05000
Page 67
Feb 06/2009



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05061P		242/169/L 58		PLUG- (continued)				ALL
	A03	\$D	W1705	003	24		34-21-31	ALL
	A04	\$D	W1705	004	24		34-21-31	ALL
	A05	\$D	W1705	005	24		SPARE	ALL
	A06	UNUSED						050-099
	A06	\$D	W1705	006	24		SPARE	150-199, 275-299
	A07	\$D	W1705	007	24		SPARE	ALL
	A08	\$D	W1705	008	24		SPARE	ALL
	A09	\$D	W1705	009	24		22-14-31	ALL
	A10	\$D	W1705	010	24		SPARE	ALL
	A11	\$D	W1705	011	24		SPARE	ALL
	A12	\$D	W1705	012	24		SPARE	ALL
	A13	\$D	W1705	013	24		SPARE	ALL
	A14	\$D	W1705	014	24		SPARE	ALL
	A15	\$D	W1705	015	24		SPARE	ALL
	A16	\$D	W1705	016	24		SPARE	ALL
	A17	\$D	W1705	017	24		SPARE	ALL
	A18	\$D	W1705	018	24		SPARE	ALL
	A19	\$D	W1705	019	24		SPARE	ALL
	A20	UNUSED						ALL
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04	UNUSED						ALL
	B05	UNUSED						ALL
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13	UNUSED						ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	B16	UNUSED						ALL
	B17	UNUSED						ALL
	B18	UNUSED						ALL
	B19	UNUSED						ALL
	B20	UNUSED						ALL
	CAP	Y	W1705	010	24		SPARE	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05000

Page 68

Feb 06/2009



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05061P		242/169/L 58		PLUG- (continued)				ALL
	CAP	Y	W1705	011	24		SPARE	ALL
	CAP	Y	W1705	012	24		SPARE	ALL
	CAP	Y	W1705	013	24		SPARE	ALL
	CAP	Y	W1705	014	24		SPARE	ALL
	CAP	Y	W1705	015	24		SPARE	ALL
	CAP	Y	W1705	016	24		SPARE	ALL
	CAP	Y	W1705	017	24		SPARE	ALL
	CAP	Y	W1705	018	24		SPARE	ALL
	CAP	Y	W1705	019	24		SPARE	ALL
D05062J		AF0204/ /		RCPT-P61				ALL
	1		W0066	66K	22		25-11-21	ALL
	2		W0066	66L	22		25-11-21	ALL
	3		W0066	66M	22		25-11-21	ALL
	4		W0066	63P	24		21-44-11	ALL
	5		W0066	50Z	24		21-53-21	ALL
	6	UNUSED						ALL
	7		W0066	01E	24		21-43-11	050-099, 150-199
	7		W0066	01E	22		21-43-11	275-299
	8		W0066	50N	24		21-43-11	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11		W0066	01F	22		21-44-11	ALL
	12		W0066	50G	24		21-44-11	ALL
	13		W0066	01R	24		21-44-11	ALL
	14	UNUSED						050-099
	14	DK	W0066	52T	18		32-71-11	150-199, 275-299
	15	UNUSED						ALL
	16		W0066	01S	24		21-44-11	ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20		W0066	51D	24		21-53-12	ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D05000

Page 69

Feb 06/2009



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05062J		AF0204/ /		RCPT-P61 (continued)				ALL
	28	UNUSED						ALL
D05062P		AF0204/ /		PLUG-P61				ALL
	1		W0624	001	22		25-11-21	ALL
	2		W0624	002	22		25-11-21	ALL
	3		W0624	003	22		25-11-21	ALL
	4		W0624	082	24		21-44-11	ALL
	5		W0624	033	24		21-53-21	ALL
	6	UNUSED						ALL
	7		W0624	042	24		21-43-11	ALL
	8		W0624	043	24		21-43-11	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11		W0624	046	22		21-44-11	ALL
	12		W0624	047	24		21-44-11	ALL
	13		W0624	048	24		21-44-11	ALL
	14		W0624	080	20		SPARE	050-099
	14	DL	W0624	080	18		32-71-11	150-199, 275-299
	15	UNUSED						ALL
	16		W0624	083	24		21-44-11	ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20		W0624	026	24		21-53-12	ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
D05063J		AE0219/ /		RCPT-SHELL				ALL
	A01	\$D	W2000	TK01	24		SPARE	ALL
	A01	\$D	W2000	TM01	24		99-99-99	ALL
	A02	\$D	W2000	TK02	24		34-12-22	ALL
	A02	\$D	W2000	TM02	24		34-12-22	ALL
	A03	\$D	W2000	TK03	24		SPARE	ALL
	A03	\$D	W2000	TM03	24		31-41-33	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05000

Page 70

Feb 06/2009



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05063J		AE0219/ /		RCPT-SHELL (continued)				ALL
	A04	\$D	W2000	TK04	24		SPARE	ALL
	A04	\$D	W2000	TM04	24		31-41-33	ALL
	A05	\$D	W2000	TK05	24		SPARE	ALL
	A05	\$D	W2000	TM05	24		31-41-33	ALL
	A06	\$D	W2000	TK06	24		SPARE	ALL
	A06	\$D	W2000	TM06	24		31-41-33	ALL
	A07	\$D	W2000	TK07	24		SPARE	ALL
	A07	\$D	W2000	TM07	24		31-41-33	ALL
	A08	\$D	W2000	TK08	24		SPARE	ALL
	A08	\$D	W2000	TM08	24		31-41-33	ALL
	A09	\$D	W2000	TK09	24		22-21-21	ALL
	A09	\$D	W2000	TM09	24		22-21-21	ALL
	A10	\$D	W2000	TK10	24		SPARE	ALL
	A10	\$D	W2000	TM10	24		SPARE	ALL
	A11	\$D	W2000	TK11	24		27-09-14	ALL
	A11	\$D	W2000	TM11	24		27-09-14	ALL
	A12	\$D	W2000	TK12	24		27-09-14	ALL
	A12	\$D	W2000	TM12	24		27-09-14	ALL
	A13	\$D	W2000	TK13	24		27-09-14	ALL
	A13	\$D	W2000	TM13	24		27-09-14	ALL
	A14	\$D	W2000	TK14	24		31-51-11	ALL
	A14	\$D	W2000	TM14	24		31-51-11	ALL
	A15	\$D	W2000	TK15	24		SPARE	ALL
	A15	\$D	W2000	TM15	24		31-51-41	ALL
	A16	\$D	W2000	TK16	24		34-21-21	ALL
	A16	\$D	W2000	TM16	24		34-21-21	ALL
	A17	\$D	W2000	TK17	24		34-21-21	ALL
	A17	\$D	W2000	TM17	24		34-21-21	ALL
	A18	\$D	W2000	TK18	24		34-21-21	ALL
	A18	\$D	W2000	TM18	24		34-21-21	ALL
	A19	\$D	W2000	TK19	24		SPARE	ALL
	A19	\$D	W2000	TM19	24		SPARE	ALL
	A20	\$D	W2000	TK20	24		99-99-99	ALL
	A20	\$D	W2000	TM20	24		99-99-99	ALL
	B01	\$D	W2000	TL01	24		SPARE	ALL
	B01	\$D	W2000	TN01	24		99-99-99	ALL
	B02	\$D	W2000	TL02	24		34-61-25	ALL
	B02	\$D	W2000	TN02	24		34-61-25	ALL
	B03	\$D	W2000	TL03	24		34-61-25	ALL
	B03	\$D	W2000	TN03	24		34-61-25	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05000

Page 71

Feb 06/2009



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05063J		AE0219/ /		RCPT-SHELL (continued)				ALL
	B04	\$D	W2000	TL04	24		SPARE	ALL
	B04	\$D	W2000	TN04	24		34-61-25	ALL
	B05	\$D	W2000	TL05	24		SPARE	ALL
	B05	\$D	W2000	TN05	24		34-61-25	ALL
	B06	\$D	W2000	TL06	24		SPARE	ALL
	B06	\$D	W2000	TN06	24		34-61-25	ALL
	B07	\$D	W2000	TL07	24		27-09-14	ALL
	B07	\$D	W2000	TN07	24		27-09-14	ALL
	B08	\$D	W2000	TL08	24		SPARE	050-099
	B08	\$D	W2000	TN08	24		34-61-16	ALL
	B08	\$D	W2000	TL08	24		34-61-16	150-199, 275-299
	B09	\$D	W2000	TL09	24		SPARE	ALL
	B09	\$D	W2000	TN09	24		34-61-24	ALL
	B10	\$D	W2000	TL10	24		SPARE	ALL
	B10	\$D	W2000	TN10	24		34-61-24	ALL
	B11	\$D	W2000	TL11	24		SPARE	ALL
	B11	\$D	W2000	TN11	24		34-61-24	ALL
	B12	\$D	W2000	TL12	24		SPARE	ALL
	B12	\$D	W2000	TN12	24		34-61-24	ALL
	B13	\$D	W2000	TL13	24		SPARE	ALL
	B13	\$D	W2000	TN13	24		31-41-16	ALL
	B14	\$D	W2000	TL14	24		31-41-16	ALL
	B14	\$D	W2000	TN14	24		31-41-16	ALL
	B15	\$D	W2000	TN15	24		34-45-13	050-099, 150-199, 277-299
	B15	\$D	W2000	TL15	24		34-45-13	050-099, 153-199, 277-299
	B15	\$D	W2000	TL15	24		SPARE	150-152, 275-276
	B15	\$D	W2000	TN15	24		SPARE	275-276
	B16	\$D	W2000	TL16	24		SPARE	ALL
	B16	\$D	W2000	TN16	24		SPARE	ALL
	B17	\$D	W2000	TL17	24		SPARE	ALL
	B17	\$D	W2000	TN17	24		SPARE	ALL
	B18	\$D	W2000	TL18	24		SPARE	ALL
	B18	\$D	W2000	TN18	24		SPARE	ALL
	B19	\$D	W2000	TL19	24		SPARE	ALL
	B19	\$D	W2000	TN19	24		SPARE	ALL
	B20	\$D	W2000	TL20	24		99-99-99	ALL
	B20	\$D	W2000	TN20	24		99-99-99	ALL
D05063P		AE0219/ /		PLUG-SHELL,E8				ALL
	A01	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D05000

Page 72

Feb 06/2009



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05063P		AE0219/ /		PLUG-SHELL,E8 (continued)				ALL
	A02	\$D	W1703	016	24		34-12-22	ALL
	A03	\$D	W1703	202R	24		31-41-33	ALL
	A04	\$D	W1703	202B	24		31-41-33	ALL
	A05	\$D	W1703	202Z			31-41-33	ALL
	A06	\$D	W1703	203R	24		31-41-33	ALL
	A07	\$D	W1703	203B	24		31-41-33	ALL
	A08	\$D	W1703	203Z			31-41-33	ALL
	A09	\$D	W1703	001	24		22-21-21	ALL
	A10	\$D	W1703	003	24		SPARE	ALL
	A11	\$D	W1703	002	24		27-09-14	ALL
	A12	\$D	W1703	013	24		27-09-14	ALL
	A13	\$D	W1703	004	24		27-09-14	ALL
	A14	\$D	W1703	011	24		31-51-11	ALL
	A15	\$D	W1703	014	24		31-51-41	ALL
	A16	\$D	W1703	007	24		34-21-21	ALL
	A17	\$D	W1703	006	24		34-21-21	ALL
	A18	\$D	W1703	005	24		34-21-21	ALL
	A19	\$D	W1703	017	24		SPARE	ALL
	A20	UNUSED						ALL
	B01	UNUSED						ALL
	B02	\$D	W1703	012	24		34-61-25	ALL
	B03	\$D	W1703	008	24		34-61-25	ALL
	B04	\$D	W1703	201R	24		34-61-25	ALL
	B05	\$D	W1703	201B	24		34-61-25	ALL
	B06	\$D	W1703	201Z			34-61-25	ALL
	B07	\$D	W1703	009	24		27-09-14	ALL
	B08	\$D	W1703	010	24		34-61-16	ALL
	B09		W1703	FRD			34-61-24	ALL
	B10	\$D	W1703	204R	24		34-61-24	ALL
	B11	\$D	W1703	204B	24		34-61-24	ALL
	B12		W1703	FR4			34-61-24	ALL
	B13	\$D	W1703	018	24		31-41-16	ALL
	B14	\$D	W1703	019	24		31-41-16	ALL
	B15	\$D	W1703	025	24		34-45-13	050-099, 150-199, 277-299
	B15	\$D	W1703	020	24		SPARE	275-276
	B16	\$D	W1703	021	24		SPARE	ALL
	B17	\$D	W1703	022	24		SPARE	ALL
	B18	\$D	W1703	023	24		SPARE	ALL
	B19	\$D	W1703	015	24		SPARE	ALL
	B20	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D05000

Page 73

Feb 06/2009



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05063P		AE0219/ /		PLUG-SHELL,E8 (continued)				ALL
	CAP	Y	W1703	017	24		SPARE	ALL
	CAP	Y	W1703	021	24		SPARE	ALL
	CAP	Y	W1703	022	24		SPARE	ALL
	CAP	Y	W1703	023	24		SPARE	ALL
	CAP	Y	W1703	020	24		SPARE	275-276
			W1703	204Z			34-61-24	ALL
			W1703	FR4			34-61-24	ALL
			W1703	FRD			34-61-24	ALL
D05064J		AF0204/ /		RCPT-P61				ALL
	1		W0062	56B	24		30-41-11	ALL
	2		W0062	780	24		30-41-11	ALL
	3		W0062	180	24		21-43-11	ALL
	4		W0062	712	24		30-41-11	ALL
	5		W0062	56G	22		30-31-11	ALL
	6		W0062	711	24		30-41-11	ALL
	7		W0062	56C	22		30-31-11	ALL
	8		W0062	709	22		30-41-11	ALL
	9		W0062	710	22		30-41-11	ALL
	10	UNUSED						ALL
	11		W0062	66K	22		25-11-11	ALL
	12		W0062	66L	22		25-11-11	ALL
	13		W0062	66M	22		25-11-11	ALL
	14	DK	W0062	61K	18		38-32-14	ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18		W0062	50Y	24		21-52-41	ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21		W0062	61N	18		38-32-11	ALL
	22	UNUSED						ALL
	23	UNUSED						050-099, 150-155, 162-165, 275-276
	23		W0062	70W	18		38-32-11	156-157, 166-199, 277-299
	24	UNUSED						050-099, 150-155, 162-165, 275-276
	24	DK	W0062	70X	18		38-32-11	156-157, 166-199, 277-299
	25		W0062	50Z	24		21-53-11	ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28		W0062	50N	24		21-43-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05000

Page 74

Feb 06/2009



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05064J		AF0204/ /		RCPT-P61 (continued)				ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31		W0062	50P	24		21-44-11	ALL
	32	UNUSED						ALL
	33		W0062	50H	20		21-31-11	ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
D05064P		AF0204/ /		PLUG-P61				ALL
	1		W0622	001	24		30-41-11	ALL
	2		W0622	002	24		30-41-11	ALL
	3		W0622	048	24		21-43-11	ALL
	4		W0622	007	24		30-41-11	ALL
	5		W0622	015	22		30-31-11	ALL
	6		W0622	006	24		30-41-11	ALL
	7		W0622	017	22		30-31-11	ALL
	8		W0622	008	22		30-41-11	ALL
	9		W0622	009	22		30-41-11	ALL
	10	UNUSED						ALL
	11		W0622	011	22		25-11-11	ALL
	12		W0622	012	22		25-11-11	ALL
	13		W0622	013	22		25-11-11	ALL
	14	DL	W0622	61K	18		38-32-14	ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18		W0622	056	24		21-52-41	ALL
	19	UNUSED						ALL
	20		W0622	054	22		SPARE	ALL
	21		W0622	055	18		38-32-11	ALL
	22	UNUSED						ALL
	23	UNUSED						050-099, 150-155, 162-165, 275-276
	23		W0622	030	18		38-32-11	156-157, 166-199, 277-299
	24	UNUSED						050-099, 150-155, 162-165, 275-276
	24	DL	W0622	031	18		38-32-11	156-157, 166-199, 277-299
	25		W0622	033	24		21-53-11	ALL

HOOKUP LIST
D280T132

91-21-51
Section D05000
Page 75
Feb 06/2009



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05064P		AF0204/ /		PLUG-P61 (continued)				ALL
	26		W0622	042	22		SPARE	ALL
	27	UNUSED						ALL
	28		W0622	044	24		21-43-11	ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31		W0622	047	24		21-44-11	ALL
	32	UNUSED						ALL
	33		W0622	049	20		21-31-11	ALL
	34		W0622	069	22		SPARE	ALL
	35		W0622	071	20		SPARE	ALL
	36		W0622	072	20		SPARE	ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
D05065J		AE0320/ /		RCPT-E2-3				ALL
	1		W1703	001	24		22-21-21	ALL
	2		W1703	002	24		27-09-14	ALL
	3		W1703	003	24		SPARE	ALL
	4		W1703	004	24		27-09-14	ALL
	5		W1703	005	24		34-21-21	ALL
	6		W1703	006	24		34-21-21	ALL
	7		W1703	007	24		34-21-21	ALL
	8		W1703	008	24		34-61-25	ALL
	9		W1703	009	24		27-09-14	ALL
	10		W1703	010	24		34-61-16	ALL
	11		W1703	011	24		31-51-11	ALL
	12		W1703	012	24		34-61-25	ALL
	13		W1703	013	24		27-09-14	ALL
	14		W1703	014	24		31-51-41	ALL
	15		W1703	025	24		34-45-13	050-099, 150-199, 277-299
	15	UNUSED						275-276
	16		W1703	202R	24		31-41-33	ALL
	17		W1703	202B	24		31-41-33	ALL
	18		W1703	202Z			31-41-33	ALL
	19		W1703	203R	24		31-41-33	ALL
	20		W1703	203B	24		31-41-33	ALL
	21		W1703	203Z			31-41-33	ALL
	22		W1703	201R	24		34-61-25	ALL
	23		W1703	201B	24		34-61-25	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05000

Page 76

Feb 06/2009



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05065J		AE0320 / /		RCPT-E2-3 (continued)				ALL
	24		W1703	201Z			34-61-25	ALL
	25		W1703	015	24		SPARE	ALL
	26		W1703	204R	24		34-61-24	ALL
	27		W1703	204B	24		34-61-24	ALL
	28		W1703	204Z			34-61-24	ALL
	29		W1703	016	24		34-12-22	ALL
	30		W1703	018	24		31-41-16	ALL
	31		W1703	019	24		31-41-16	ALL
D05065P		AE0320 / /		PLUG-E2-3				ALL
	1		W0145	165	22		22-21-21	ALL
	2		W0145	004	22		27-09-14	ALL
	3	UNUSED						ALL
	4		W0145	168	22		27-09-14	ALL
	5		W0145	169	22		34-21-21	ALL
	6		W0145	170	22		34-21-21	ALL
	7		W0145	171	22		34-21-21	ALL
	8		W0145	172	24		34-61-25	ALL
	9		W0145	025	22		27-09-14	ALL
	10		W0145	677	24		34-61-16	ALL
	11		W0145	063	24		31-51-11	ALL
	12		W0145	173	24		34-61-25	ALL
	13		W0145	175	22		27-09-14	ALL
	14		W0145	176	24		31-51-41	ALL
	15		W0145	699	24		34-45-13	ALL
	16		W0145	543R	24		31-41-33	ALL
	17		W0145	543B	24		31-41-33	ALL
	18		W0145	543Z			31-41-33	ALL
	19		W0145	544R	24		31-41-33	ALL
	20		W0145	544B	24		31-41-33	ALL
	21		W0145	544Z			31-41-33	ALL
	22		W0145	540R	24		34-61-25	ALL
	23		W0145	540B	24		34-61-25	ALL
	24		W0145	540Z			34-61-25	ALL
	25	UNUSED						ALL
	26		W0145	223R	24		34-61-24	050-099, 150-156, 162-166
	26		W0145	271R	24		34-61-24	157, 167-199, 277-299
	26		W0145	224R	24		34-61-24	275-276
	27		W0145	223B	24		34-61-24	050-099, 150-156, 162-166
	27		W0145	271B	24		34-61-24	157, 167-199, 277-299

HOOKUP LIST

D280T132

91-21-51

Section D05000

Page 77

Feb 06/2009



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05065P		AE0320/ /		PLUG-E2-3 (continued)				ALL
	27		W0145	224B	24		34-61-24	275-276
	28		W0145	223Z			34-61-24	050-099, 150-156, 162-166
	28		W0145	271Z			34-61-24	157, 167-199, 277-299
	28		W0145	224Z			34-61-24	275-276
	29		W0145	858	24		34-12-22	ALL
	30		W0145	863	24		31-41-16	ALL
	31		W0145	861	24		31-41-16	ALL
D05066J		AE0317/ /		RCPT-E1-1				ALL
	1	UNUSED						ALL
	2		W0656	019	22		32-42-11	ALL
	3		W0656	020	22		32-42-11	ALL
	4		W0656	021	22		32-42-11	ALL
	5		W0656	039	22		32-42-12	ALL
	6		W0656	038	22		32-42-12	050-099, 275-299
	6		W0656	038	20		32-42-12	150-199
	7		W0656	145	22		SPARE	ALL
	8		W0656	201B	22		32-42-12	ALL
	9		W0656	201R	22		32-42-12	ALL
	10		W0656	043	22		32-42-12	ALL
	11		W0656	044	22		32-42-12	ALL
	12		W0656	045	22		32-42-12	ALL
	13		W0656	048	22		32-42-12	ALL
	14		W0656	201Z			32-42-12	ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D05066P		AE0317/ /		PLUG-E1-1				ALL
	1	UNUSED						ALL
	2		W1084	032	24		32-42-11	ALL
	3		W1084	033	24		32-42-11	ALL
	4		W1084	034	24		32-42-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05000

Page 78

Feb 06/2009



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05066P		AE0317/ /		PLUG-E1-1 (continued)				ALL
	5		W1084	063	24		32-42-12	ALL
	6		W1084	064	24		32-42-12	ALL
	7	UNUSED						ALL
	8		W1084	211B	24		32-42-12	ALL
	9		W1084	211R	24		32-42-12	ALL
	10		W1084	065	24		32-42-12	ALL
	11		W1084	066	24		32-42-12	ALL
	12		W1084	071	24		32-42-12	ALL
	13		W1084	069	24		32-42-12	ALL
	14		W1084	211Z			32-42-12	ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D05068J		AE0218/ /		RCPT-P37				ALL
	1	DK	W0192	136	18		33-44-21	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W0192	531R	22		26-18-21	ALL
	5		W0192	13Q	24		36-11-41	ALL
	6		W0192	13J	24		36-11-41	ALL
	7		W0192	13K	24		36-11-41	ALL
	8		W0192	13S	24		36-11-41	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11		W0192	67C	22		28-31-11	050-099, 155-199, 276-299
	11	UNUSED						150-154, 275
	12		W0192	0AR	24		36-23-21	ALL
	13		W0192	683	24		36-11-62	ALL
	14		W0192	132	22		29-11-31	ALL
	15		W0192	0AU	24		36-23-21	ALL
	16		W0192	65W	24		36-11-62	050-099, 150-156, 162-166, 275-276
	16		W0192	0AI	22		36-11-62	157, 167-199, 277-299

HOOKUP LIST
D280T132

91-21-51
Section D05000
Page 79
Feb 06/2009



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05068J		AE0218/ /		RCPT-P37 (continued)				ALL
	17	UNUSED						ALL
	18		W0192	684R	22		26-18-22	ALL
	19		W0192	01F	24		29-32-11	ALL
	20		W0192	01G	24		29-32-11	ALL
	21		W0192	129	20		33-42-21	050-099
	21	UNUSED						150-199, 275-299
	22		W0192	07Z	22		29-32-11	ALL
	23		W0192	512R	22		26-17-11	ALL
	24		W0192	0AE	22		36-11-62	ALL
	25		W0192	0AH	22		36-11-62	ALL
	26		W0192	0AT	24		36-23-21	ALL
	27		W0192	036	24		36-11-52	ALL
	28	UNUSED						050-099, 155-199, 276-299
	28	DK	W0192	037	18		SPARE	150-154, 275
	29		W0192	038	24		36-11-52	ALL
	30		W0192	685R	22		26-18-22	ALL
	31		W0192	039	24		36-11-52	ALL
	32		W0192	71J	20		36-11-52	ALL
	33		W0192	71G	20		36-11-52	ALL
	34		W0192	042	24		36-11-52	ALL
	35	UNUSED						ALL
	36	UNUSED						050-099
	36	DK	W0192	129	18		33-42-21	150-199, 275-299
	37		W0192	67J	20		28-31-11	050-099, 155-199, 276-299
	37	UNUSED						150-154, 275
	38		W0192	67H	20		28-31-11	050-099, 155-199, 276-299
	38	UNUSED						150-154, 275
	39	UNUSED						ALL
	40		W0192	66M	20		28-31-12	050-099, 155-199, 276-299
	40	UNUSED						150-154, 275
	41		W0192	66L	20		28-31-12	050-099, 155-199, 276-299
	41	UNUSED						150-154, 275
	42		W0192	66E	22		28-31-12	050-099, 155-199, 276-299
	42	UNUSED						150-154, 275
	43		W0192	63A	22		28-42-13	050-099, 155-199, 276-299
	43	UNUSED						150-154, 275
	44		W0192	06M	24		78-36-21	ALL
	45		W0192	06P	24		78-36-21	ALL
	46		W0192	87F	24		78-36-21	ALL
	47		W0192	69J	24		78-36-21	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05000

Page 80

Feb 06/2009



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05068J		AE0218/ /		RCPT-P37 (continued)				ALL
	48		W0192	69K	24		78-36-21	ALL
	49		W0192	69D	24		78-36-21	ALL
	50		W0192	06T	22		78-36-21	ALL
	51		W0192	87E	24		78-36-21	ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54		W0192	85L	22		78-36-21	ALL
	55		W0192	85M	22		78-36-21	ALL
	56		W0192	85K	22		78-36-21	ALL
	57		W0192	85P	22		78-36-21	ALL
	58		W0192	85N	22		78-36-21	ALL
	59	UNUSED						ALL
	60		W0192	87H	22		78-36-21	ALL
	61	UNUSED						ALL
	DED		W0192	63AZ			28-42-13	050-099, 155-199, 276-299
D05068P		AE0218/ /		PLUG-				ALL
	1	DL	W0656	050	18		33-44-21	ALL
	2	UNUSED						050-099
	2		W0656	065	24		SPARE	150-199, 275-299
	3	UNUSED						050-099, 150-155, 162-165
	3		W0656	207R	24		SPARE	156-157, 166-199
	3		W0656	206B	22		SPARE	275-299
	4		W0656	001R	22		26-18-21	ALL
	5		W0656	110	24		36-11-41	ALL
	6		W0656	111	24		36-11-41	ALL
	7		W0656	112	24		36-11-41	ALL
	8		W0656	113	24		36-11-41	ALL
	9	UNUSED						050-099, 150-155, 162-165
	9		W0656	205R	24		SPARE	156-157, 166-199
	9		W0656	207B	24		SPARE	275-276
	9		W0656	206R	22		SPARE	277-299
	10	UNUSED						050-099
	10		W0656	205B	24		SPARE	150-199, 275-299
	11		W0656	173	20		28-31-11	050-099, 155-199, 276-299
	11		W0656	205R	24		SPARE	150-154, 275
	12		W0656	189	24		36-11-62	ALL
	13		W0656	160	24		36-11-62	ALL
	14		W0656	051	22		29-11-31	ALL
	15		W0656	190	24		36-11-62	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05000

Page 81

Feb 06/2009



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05068P		AE0218/ /		PLUG- (continued)				ALL
	16		W0656	161	24		36-11-62	ALL
	17	UNUSED						050-099, 150-154, 275-276
	17		W0656	207B	24		SPARE	155-199
	17		W0656	205R	24		SPARE	277-299
	18		W0656	412R	22		26-18-22	ALL
	19		W0656	036	24		29-32-11	ALL
	20		W0656	037	24		29-32-11	ALL
	21		W0656	049	20		33-42-21	050-099
	21	UNUSED						150-155, 162-165
	21		W0656	206R	22		SPARE	156-157, 166-199
	21		W0656	207R	24		SPARE	275-276
	21	DL	W0656	064	18		SPARE	277-299
	22		W0656	072	22		29-32-11	ALL
	23		W0656	031R	22		26-17-11	ALL
	24	DL	W0656	162	18		36-11-62	ALL
	25	DL	W0656	163	18		36-11-62	ALL
	26		W0656	188	24		36-11-62	ALL
	27		W0656	081	24		36-11-52	ALL
	28	DL	W0656	082	18		SPARE	ALL
	29		W0656	083	24		36-11-52	ALL
	30		W0656	413R	22		26-18-22	ALL
	31		W0656	085	24		36-11-52	ALL
	32	DL	W0656	086	18		36-11-52	ALL
	33	DL	W0656	087	18		36-11-52	ALL
	34		W0656	088	24		36-11-52	ALL
	35	UNUSED						050-099, 150-154, 275-276
	35		W0656	206B	22		SPARE	155-199
	35		W0656	207B	24		SPARE	277-299
	36	UNUSED						050-099
	36	DL	W0656	049	18		33-42-21	150-199, 275-299
	37		W0656	175	20		28-31-11	050-099, 155-199, 276-299
	37	UNUSED						150-154, 275
	38		W0656	174	20		28-31-11	050-099, 155-199, 276-299
	38	UNUSED						150-154, 275
	39	UNUSED						050-099, 275-276
	39		W0656	206R	22		SPARE	150-155, 162-165
	39	DL	W0656	064	18		SPARE	156-157, 166-199
	39		W0656	207R	24		SPARE	277-299
	40		W0656	176	20		28-31-12	050-099, 155-199, 276-299
	40		W0656	206B	22		SPARE	150-154

HOOKUP LIST

D280T132

91-21-51

Section D05000

Page 82

Feb 06/2009



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05068P		AE0218/ /		PLUG- (continued)				ALL
	40	UNUSED						275
	41		W0656	177	20		28-31-12	050-099, 155-199, 276-299
	41		W0656	207R	24		SPARE	150-154
	41	UNUSED						275
	42		W0656	178	20		28-31-12	050-099, 155-199, 276-299
	42		W0656	207B	24		SPARE	150-154
	42	UNUSED						275
	43		W0656	179	20		28-42-13	050-099, 155-199, 276-299
	43	UNUSED						150-154, 275
	44		W0656	502	24		78-36-21	ALL
	45		W0656	503	24		78-36-21	ALL
	46		W0656	504	24		78-36-21	ALL
	47		W0656	505	24		78-36-21	ALL
	48		W0656	506	24		78-36-21	ALL
	49		W0656	507	24		78-36-21	ALL
	50		W0656	508	22		78-36-21	ALL
	51		W0656	509	24		78-36-21	ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54		W0656	801	22		78-36-21	ALL
	55		W0656	802	22		78-36-21	ALL
	56		W0656	805	22		78-36-21	ALL
	57		W0656	804	22		78-36-21	ALL
	58		W0656	803	22		78-36-21	ALL
	59	UNUSED						ALL
	60		W0656	807	22		78-36-21	ALL
	61	UNUSED						ALL
	CAP	Y	W0656	064	18		SPARE	150-155, 162-165, 275-276
	CAP	Y	W0656	207R	24		SPARE	155, 162-165
	CAP	Y	W0656	205R	24		SPARE	155, 162-165, 276
	CAP	Y	W0656	206R	22		SPARE	275-276
	DED		W0656	179Z			28-42-13	050-099, 155-199, 276-299
D05070J		AP1005/ /		RCPT-P25				050-099
D05070J		AP1005/ /		RCPT-				150-199, 275-299
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						050-099, 275-299
	3		W1106	603	22		33-25-11	150-199
	4		W1106	602	22		33-25-11	050-099, 150-199

HOOKUP LIST
D280T132

91-21-51
Section D05000
Page 83
Feb 06/2009



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05070J		AP1005/ /		RCPT-P25 (continued)				050-099
D05070J		AP1005/ /		RCPT- (continued)				150-199, 275-299
	4	UNUSED						275-299
	5	UNUSED						050-099, 275-299
	5		W1106	604	22		33-25-11	150-199
	6	UNUSED						050-099, 275-299
	6		W1106	601	22		33-25-11	150-199
	7		W1106	152	22		33-25-11	050-099, 155, 157-199
	7	2	W1106	152	22		33-25-11	150-154, 156
	7	UNUSED						275-299
	8		W1106	150	22		33-25-11	050-099, 150-199
	8	UNUSED						275-299
	9		W1106	154	22		33-25-11	050-099, 150-199
	9	UNUSED						275-299
	10	UNUSED						ALL
	11		W1106	189	20		26-13-11	050-099
	11	UNUSED						150-199, 275-299
	12		W1106	190	20		26-13-11	050-099
	12	UNUSED						150-199, 275-299
	13		W1106	191	20		26-13-11	050-099
	13	UNUSED						150-199, 275-299
	14		W1106	192	20		26-13-11	050-099
	14	UNUSED						150-199, 275-299
	15		W1106	500	20		33-26-21	050-099
	15	UNUSED						150-199, 275-299
	16	UNUSED						ALL
	17		W1106	142	22		33-25-11	050-099, 150-199
	17	UNUSED						275-299
	18	UNUSED						ALL
	19		W1106	107	22		33-25-11	ALL
	20		W1106	605	22		33-25-11	050-099, 150-199
	20	UNUSED						275-299
	21	UNUSED						050-099, 150-199
	21		W1106	110	22		33-26-11	275-299
	22	UNUSED						050-099, 150-199, 275-278
	22		W1106	133	20		33-26-21	280-299
	23	UNUSED						050-099, 150-199
	23		W1106	109	16		38-13-11	275-299
	24		W1106	600	20		38-32-12	050-099, 150-156, 162-165
	24		W1106	600	20		38-32-16	157, 166-199
	24	DL	W1106	111	18		38-32-12	275-276

HOOKUP LIST

D280T132

91-21-51

Section D05000

Page 84

Feb 06/2009



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05070J		AP1005/ /		RCPT-P25 (continued)				050-099
D05070J		AP1005/ /		RCPT- (continued)				150-199, 275-299
	24	DL	W1106	111	18		38-32-16	277-299
	25		W1106	112	22		38-32-12	050-099, 150-156, 162-165, 275-276
	25		W1106	112	22		38-32-16	157, 166-199, 277-299
	26		W1106	113	22		38-32-12	050-099, 150-156, 162-165, 275-276
	26		W1106	113	22		38-32-16	157, 166-199, 277-299
	27	UNUSED						050-099, 150-199
	27		W1106	119	20		25-42-11	275-299
	28		W1106	159	20		33-26-21	050-099, 150-199
	28	UNUSED						275-299
	29		W1106	160	20		33-26-21	050-099, 150-199
	29	UNUSED						275-299
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						050-099, 275-299
	32		W1106	141	22		33-26-11	150-199
	33	UNUSED						050-099, 275-299
	33		W1106	161	22		33-26-11	150-199
	34	UNUSED						050-099, 275-299
	34		W1106	116	20		33-26-11	150-199
	35	UNUSED						ALL
	36	UNUSED						050-099, 150-199
	36		W1106	116	20		33-26-11	275-299
	37		W1106	501	20		33-26-21	050-099
	37	UNUSED						150-199, 275-299
	38	UNUSED						050-099, 150-199
	38		W1106	132	20		33-26-21	275-299
	39	UNUSED						ALL
D05070P		AP1005/ /		PLUG-P25				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						050-099, 275-299
	3		W0792	185	22		33-25-11	150-199
	4		W0792	504	22		33-25-11	050-099, 150-199
	4	UNUSED						275-299
	5	UNUSED						050-099, 275-299
	5		W0792	501	22		33-25-11	150-199
	6	UNUSED						050-099, 275-299
	6		W0792	503	22		33-25-11	150-199

HOOKUP LIST

D280T132

91-21-51

Section D05000

Page 85

Feb 06/2009



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05070P		AP1005/ /		PLUG-P25 (continued)				ALL
	7		W0792	169	22		33-25-11	050-099, 150-199
	7	UNUSED						275-299
	8		W0792	183	22		33-25-11	050-099, 150-199
	8	UNUSED						275-299
	9		W0792	182	22		33-25-11	050-099, 150-199
	9	UNUSED						275-299
	10	UNUSED						ALL
	11		W0792	160	20		26-13-11	050-099
	11	UNUSED						150-199, 275-299
	12		W0792	163	20		26-13-11	050-099
	12	UNUSED						150-199, 275-299
	13		W0792	162	20		26-13-11	050-099
	13	UNUSED						150-199, 275-299
	14		W0792	161	20		26-13-11	050-099
	14	UNUSED						150-199, 275-299
	15		W0792	188	20		33-26-21	050-099
	15	UNUSED						150-199, 275-299
	16	UNUSED						ALL
	17		W0792	068	22		33-25-11	050-099
	17		W0792	170	22		33-25-11	150-199
	17	UNUSED						275-299
	18	UNUSED						ALL
	19		W0792	076	22		33-25-11	ALL
	20		W0792	184	22		33-25-11	050-099, 150-199
	20	UNUSED						275-299
	21	UNUSED						050-099, 150-199
	21		W0792	059	22		33-26-11	275-299
	22	UNUSED						050-099, 150-199, 275-278
	22		W0792	036	20		33-26-21	280-299
	23	UNUSED						050-099, 150-199
	23		W0792	057	16		38-13-11	275-299
	24	DK	W0792	099	18		38-32-12	050-099, 150-156, 162-165, 275-276
	24	DK	W0792	099	18		38-32-16	157, 166-199, 277-299
	25		W0792	114	20		38-32-12	050-099, 150-156, 162-165
	25		W0792	114	20		38-32-16	157, 166-199
	25		W0792	050	20		38-32-12	275-276
	25		W0792	050	20		38-32-16	277-299
	26		W0792	051	22		38-32-12	050-099
	26		W0792	051	20		38-32-12	150-156, 162-165, 275-276
	26		W0792	051	20		38-32-16	157, 166-199, 277-299

HOOKUP LIST

D280T132

91-21-51

Section D05000

Page 86

Feb 06/2009



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05070P		AP1005/ /		PLUG-P25 (continued)				ALL
	27	UNUSED						050-099, 150-199
	27		W0792	149	20		25-42-11	275-299
	28		W0792	187	20		33-26-21	050-099, 150-199
	28	UNUSED						275-299
	29		W0792	189	20		33-26-21	050-099, 150-199
	29	UNUSED						275-299
	30	UNUSED						ALL
	31		W0792	815	20		SPARE	ALL
	32	UNUSED						050-099, 275-299
	32		W0792	179	22		33-26-11	150-199
	33	UNUSED						050-099, 275-299
	33		W0792	180	22		33-26-11	150-199
	34	UNUSED						050-099, 275-299
	34		W0792	181	22		33-26-11	150-199
	35	UNUSED						ALL
	36	UNUSED						050-099, 150-199
	36		W0792	096	20		33-26-11	275-299
	37		W0792	190	20		33-26-21	050-099
	37	UNUSED						150-199, 275-299
	38	UNUSED						050-099, 150-199
	38		W0792	039	20		33-26-21	275-299
	39		W0792	814	20		SPARE	ALL
D05072J		AP0403/ /		RCPT-P19				050-099
D05072J		AP0403/ /		RCPT-				150-199
	1	UNUSED						050-099, 150-199
	2	UNUSED						050-099, 150-199
	3	UNUSED						050-099, 150-199
	4	UNUSED						050-099, 150-199
	5		W1102	018	18		21-24-11	050-099, 150-199
	6		W1102	019	18		21-24-11	050-099, 150-199
	7		W1102	020	18		21-24-11	050-099, 150-199
	8		W1102	021	24		21-24-11	050-099, 150-199
	9	UNUSED						050-099, 150-199
	10	UNUSED						050-099, 150-199
D05072P		AP0403/ /		PLUG-P19				050-099, 150-199
	1	UNUSED						050-099, 150-199
	2	UNUSED						050-099, 150-199
	3	UNUSED						050-099, 150-199

HOOKUP LIST
D280T132

91-21-51
Section D05000
Page 87
Feb 06/2009



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05072P		AP0403/ /		PLUG-P19 (continued)				050-099, 150-199
	4	UNUSED						050-099, 150-199
	5		W0794	005	18		21-24-11	050-099, 150-199
	6		W0794	006	18		21-24-11	050-099, 150-199
	7		W0794	007	18		21-24-11	050-099, 150-199
	8		W0794	008	24		21-24-11	050-099, 150-199
	9	UNUSED						050-099, 150-199
	10	UNUSED						050-099, 150-199
D05076J		AP0403/ /		RCPT-				ALL
	1		W1060	109	20		33-41-11	050-099
	1	DK	W1060	109	18		33-41-11	150-199, 275-299
	2		W1060	112	20		33-51-11	ALL
	3		W1060	115	20		33-51-11	ALL
	4		W1060	116	20		33-51-11	ALL
	5		W1060	120	22		33-51-11	ALL
	6		W1060	121	22		33-51-11	ALL
	7		W1060	569	22		33-51-11	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10		W1060	816	20		33-51-13	050-099, 162-199
	10	UNUSED						150-157, 275-299
	11	UNUSED						ALL
	12		W1060	133	22		33-51-11	ALL
	13	UNUSED						ALL
	14		W1060	573	22		33-51-21	ALL
	15	UNUSED						ALL
	16		W1060	154	20		33-51-21	ALL
	17		W1060	155	22		33-51-21	ALL
	18	UNUSED						ALL
	19		W1060	157	22		33-51-21	ALL
	20		W1060	158	20		33-51-21	ALL
	21		W1060	159	22		33-51-21	ALL
	22		W1060	206R	24		52-71-11	ALL
	23		W1060	206B	24		52-71-11	ALL
	24		W1060	207R	24		52-71-11	ALL
	25		W1060	207B	24		52-71-11	ALL
	26		W1060	208R	24		52-71-11	ALL
	27		W1060	208B	24		52-71-11	ALL
	28		W1060	209R	24		52-71-11	ALL
	29		W1060	209B	24		52-71-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05000

Page 88

Feb 06/2009



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05076J		AP0403/ /		RCPT- (continued)				ALL
	30		W1060	219R	24		52-71-12	ALL
	31		W1060	219B	24		52-71-12	ALL
	32		W1060	210R	24		52-71-11	ALL
	33		W1060	210B	24		52-71-11	ALL
	34		W1060	211R	24		52-71-11	ALL
	35		W1060	211B	24		52-71-11	ALL
	36		W1060	519	22		33-22-21	050-099, 151-152
	36		W1060	901	22		33-22-21	150, 153-157
	36		W1060	850	22		33-22-21	162-199
	36	UNUSED						275-299
	37	UNUSED						ALL
	38	UNUSED						050-099
	38		W1060	229R	24		52-71-12	150-199, 275-299
	39	UNUSED						050-099
	39		W1060	229B	24		52-71-12	150-199, 275-299
	40	UNUSED						ALL
	41	UNUSED						ALL
D05076P		AP0403/ /		PLUG-P19				ALL
	1		W0784	001	20		33-41-11	050-099
	1	DL	W0784	001	18		33-41-11	150-199, 275-299
	2		W0784	017	20		33-51-11	ALL
	3		W0784	003	20		33-51-11	ALL
	4		W0784	638	20		33-51-11	050-099, 150-199
	4		W0784	004	20		33-51-11	275-299
	5		W0784	639	22		33-51-11	050-099, 150-199
	5		W0784	005	22		33-51-11	275-299
	6		W0784	006	22		33-51-11	ALL
	7		W0784	110	22		33-51-11	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10		W0784	030	20		33-51-13	050-099
	10	UNUSED						150-157, 275-299
	10		W0784	028	20		33-51-13	162-199
	11	UNUSED						ALL
	12		W0784	012	22		33-51-11	ALL
	13	UNUSED						ALL
	14		W0784	096	22		33-51-21	ALL
	15	UNUSED						ALL
	16		W0784	097	20		33-51-21	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05000

Page 89

Feb 06/2009



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05076P		AP0403/ /		PLUG-P19 (continued)				ALL
	17		W0784	098	22		33-51-21	ALL
	18		W0784	814	20		SPARE	ALL
	19		W0784	059	22		33-51-21	ALL
	20		W0784	058	22		33-51-21	ALL
	21		W0784	061	22		33-51-21	ALL
	22		W0784	201R	24		52-71-11	ALL
	23		W0784	201B	24		52-71-11	ALL
	24		W0784	202R	24		52-71-11	ALL
	25		W0784	202B	24		52-71-11	ALL
	26		W0784	203R	24		52-71-11	ALL
	27		W0784	203B	24		52-71-11	ALL
	28		W0784	204R	24		52-71-11	ALL
	29		W0784	204B	24		52-71-11	ALL
	30		W0784	205R	24		52-71-12	ALL
	31		W0784	205B	24		52-71-12	ALL
	32		W0784	206R	24		52-71-11	ALL
	33		W0784	206B	24		52-71-11	ALL
	34		W0784	207R	24		52-71-11	ALL
	35		W0784	207B	24		52-71-11	ALL
	36		W0784	079	22		33-22-21	050-099
	36		W0784	075	22		33-22-21	150-199
	36	UNUSED						275-299
	37	UNUSED						ALL
	38	UNUSED						050-099
	38		W0784	212R	24		52-71-12	150-199, 275-299
	39	UNUSED						050-099
	39		W0784	212B	24		52-71-12	150-199, 275-299
	40	UNUSED						ALL
	41	UNUSED						ALL
D05078J		AP1005/ /		RCPT-P25				050-099
D05078J		AP1005/ /		RCPT-				150-199, 275-299
	1		W1064	055	20		33-51-11	ALL
	2		W1064	062	20		33-51-11	ALL
	3		W1064	057	22		33-51-11	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W1064	060	22		33-51-11	ALL
	8	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D05000

Page 90

Feb 06/2009



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05078J		AP1005/ /		RCPT-P25 (continued)				050-099
D05078J		AP1005/ /		RCPT- (continued)				150-199, 275-299
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14		W1064	073	22		33-51-21	ALL
	15		W1064	074	22		33-51-21	ALL
	16	UNUSED						ALL
	17		W1064	076	22		33-51-21	ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22		W1064	204R	24		52-71-11	ALL
	23		W1064	204B	24		52-71-11	ALL
	24		W1064	205R	24		52-71-11	ALL
	25		W1064	205B	24		52-71-11	ALL
	26		W1064	206R	24		52-71-11	ALL
	27		W1064	206B	24		52-71-11	ALL
	28		W1064	207R	24		52-71-11	ALL
	29		W1064	207B	24		52-71-11	ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32		W1064	212R	24		52-71-11	ALL
	33		W1064	212B	24		52-71-11	ALL
	34		W1064	213R	24		52-71-11	ALL
	35		W1064	213B	24		52-71-11	ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
D05078P		AP1005/ /		PLUG-P25				ALL
	1		W0784	017	20		33-51-11	ALL
	2		W0784	003	20		33-51-11	ALL
	3		W0784	006	22		33-51-11	ALL
	4	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D05000
Page 91
Feb 06/2009



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05078P		AP1005/ /		PLUG-P25 (continued)				ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W0784	013	22		33-51-11	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14		W0784	058	22		33-51-21	ALL
	15		W0784	059	22		33-51-21	ALL
	16	UNUSED						ALL
	17		W0784	061	22		33-51-21	ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22		W0784	201R	24		52-71-11	ALL
	23		W0784	201B	24		52-71-11	ALL
	24		W0784	202R	24		52-71-11	ALL
	25		W0784	202B	24		52-71-11	ALL
	26		W0784	203R	24		52-71-11	ALL
	27		W0784	203B	24		52-71-11	ALL
	28		W0784	204R	24		52-71-11	ALL
	29		W0784	204B	24		52-71-11	ALL
	30	UNUSED						ALL
	31		W0784	814	20		SPARE	ALL
	32		W0784	206R	24		52-71-11	ALL
	33		W0784	206B	24		52-71-11	ALL
	34		W0784	207R	24		52-71-11	ALL
	35		W0784	207B	24		52-71-11	ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
D05079J		AE0319/ /		RCPT-E1-4				ALL
	1		W0731	010	24		34-22-35	ALL

HOOKUP LIST
D280T132

91-21-51
Section D05000
Page 92
Feb 06/2009



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05079J		AE0319/ /		RCPT-E1-4 (continued)				ALL
	2		W0731	011	24		34-22-35	ALL
	3		W0731	012	24		34-22-35	ALL
	4		W0731	053	24		SPARE	ALL
	5		W0731	054	24		SPARE	ALL
	6		W0731	033	24		34-22-35	ALL
	7		W0731	032	24		34-22-35	ALL
	8		W0731	031	24		34-22-35	ALL
	9		W0731	055	24		SPARE	ALL
	10		W0731	056	24		SPARE	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
D05079P		AE0319/ /		PLUG-E1-4				ALL
	1		W1127	001	24		34-22-35	ALL
	2		W1127	002	24		34-22-35	ALL
	3		W1127	003	24		34-22-35	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W1127	007	24		34-22-35	ALL
	7		W1127	006	24		34-22-35	ALL
	8		W1127	005	24		34-22-35	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05000

Page 93

Feb 06/2009



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05079P		AE0319/ /		PLUG-E1-4 (continued)				ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
D05080J		AP1005/ /		RCPT-P25				050-099
D05080J		AP1005/ /		RCPT-				150-199, 275-299
	1		W1064	201B	22		21-51-22	ALL
	2		W1064	201R	22		21-51-22	ALL
	3	UNUSED						ALL
	4		W1064	202B	24		21-61-31	ALL
	5		W1064	202R	24		21-61-31	ALL
	6	UNUSED						ALL
	7		W1064	601	22		30-46-11	ALL
	8		W1064	224R	24		21-61-71	ALL
	9		W1064	224B	24		21-61-71	ALL
	10		W1064	152	24		33-21-12	050-099, 150-199
	10	UNUSED						275-299
	11		W1064	626	24		33-21-12	050-099, 150-199
	11	UNUSED						275-299
	12	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D05000

Page 94

Feb 06/2009



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05080J		AP1005/ /		RCPT-P25 (continued)				050-099
D05080J		AP1005/ /		RCPT- (continued)				150-199, 275-299
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D05080P		AP1005/ /		PLUG-P25				ALL
	1		W0786	201B	22		21-51-22	ALL
	2		W0786	201R	22		21-51-22	ALL
	3	UNUSED						ALL
	4		W0786	202B	24		21-61-31	ALL
	5		W0786	202R	24		21-61-31	ALL
	6	UNUSED						ALL
	7		W0786	171	22		30-46-11	ALL
	8		W0786	205R	24		21-61-71	ALL
	9		W0786	205B	24		21-61-71	ALL
	10		W0786	175	24		33-21-12	050-099
	10		W0786	175	20		33-21-12	150-199
	10	UNUSED						275-299
	11		W0786	176	24		33-21-12	050-099
	11		W0786	176	20		33-21-12	150-199
	11	UNUSED						275-299
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21		W0786	814	20		SPARE	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05000

Page 95

Feb 06/2009



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05080P		AP1005/ /		PLUG-P25 (continued)				ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D05081J		AE0319/ /		RCPT-E1-5				ALL
	1		W0733	204WN	24		34-22-24	ALL
	2		W0733	204W	24		34-22-24	ALL
	3		W0733	205WN	24		34-22-24	ALL
	4		W0733	205W	24		34-22-24	ALL
	5		W0733	206WN	24		34-22-24	ALL
	6		W0733	206W	24		34-22-24	ALL
	7		W0733	207WN	24		34-22-24	ALL
	8		W0733	207W	24		34-22-24	ALL
	9		W0733	208WN	24		34-22-24	ALL
	10		W0733	208W	24		34-22-24	ALL
	11		W0733	209WN	24		34-22-24	ALL
	12		W0733	209W	24		34-22-24	ALL
	13		W0733	210WN	24		34-22-24	ALL
	14		W0733	210W	24		34-22-24	ALL
	15		W0733	211WN	24		34-22-24	ALL
	16		W0733	211W	24		34-22-24	ALL
	17		W0733	212WN	24		34-22-24	ALL
	18		W0733	212W	24		34-22-24	ALL
	19		W0733	204Z			34-22-24	ALL
	20		W0733	205Z			34-22-24	ALL
	21		W0733	206Z			34-22-24	ALL
	22		W0733	207Z			34-22-24	ALL
	23		W0733	208Z			34-22-24	ALL
	24	UNUSED						ALL
	25		W0733	007	24		34-22-24	ALL
	26	UNUSED						ALL
	27		W0733	008	24		34-22-24	ALL
	28		W0733	009	24		34-22-24	ALL
	29		W0733	209Z			34-22-24	ALL
	30		W0733	210Z			34-22-24	ALL
	31		W0733	211Z			34-22-24	ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35		W0733	212Z			34-22-24	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05000

Page 96

Feb 06/2009



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05081J		AE0319/ /		RCPT-E1-5 (continued)				ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39		W0733	213R	24		34-22-24	ALL
	40		W0733	213B	24		34-22-24	ALL
	41		W0733	213Z			34-22-24	ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
D05081P		AE0319/ /		PLUG-E1-5				ALL
	1		W1119	202WN	26		34-22-24	ALL
	2		W1119	202W	26		34-22-24	ALL
	3		W1119	203WN	26		34-22-24	ALL
	4		W1119	203W	26		34-22-24	ALL
	5		W1119	204WN	26		34-22-24	ALL
	6		W1119	204W	26		34-22-24	ALL
	7		W1119	205WN	26		34-22-24	ALL
	8		W1119	205W	26		34-22-24	ALL
	9		W1119	206WN	26		34-22-24	ALL
	10		W1119	206W	26		34-22-24	ALL
	11		W1119	207WN	26		34-22-24	ALL
	12		W1119	207W	26		34-22-24	ALL
	13		W1119	208WN	26		34-22-24	ALL
	14		W1119	208W	26		34-22-24	ALL
	15		W1119	209WN	26		34-22-24	ALL
	16		W1119	209W	26		34-22-24	ALL
	17		W1119	210WN	26		34-22-24	ALL
	18		W1119	210W	26		34-22-24	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05000

Page 97

Feb 06/2009



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05081P		AE0319/ /		PLUG-E1-5 (continued)				ALL
	19		W1119	202Z			34-22-24	ALL
	20		W1119	203Z			34-22-24	ALL
	21		W1119	204Z			34-22-24	ALL
	22		W1119	205Z			34-22-24	ALL
	23		W1119	206Z			34-22-24	ALL
	24	UNUSED						ALL
	25		W1119	001	24		34-22-24	ALL
	26	UNUSED						ALL
	27		W1119	002	24		34-22-24	ALL
	28		W1119	003	24		34-22-24	ALL
	29		W1119	207Z			34-22-24	ALL
	30		W1119	208Z			34-22-24	ALL
	31		W1119	209Z			34-22-24	ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35		W1119	210Z			34-22-24	ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39		W1119	240R	24		34-22-24	ALL
	40		W1119	240B	24		34-22-24	ALL
	41		W1119	240Z			34-22-24	ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
D05082J		AP0403/ /		RCPT-				ALL
	1		W1060	201B	22		21-51-22	ALL

HOOKUP LIST
D280T132

91-21-51
Section D05000
Page 98
Feb 06/2009



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05082J		AP0403/ /		RCPT- (continued)				ALL
	2		W1060	201R	22		21-51-22	ALL
	3		W1060	108	20		33-41-11	050-099
	3	DK	W1060	108	18		33-41-11	150-199, 275-299
	4		W1060	202B	24		21-61-31	ALL
	5		W1060	202R	24		21-61-31	ALL
	6		W1060	139	22		33-51-21	ALL
	7		W1060	140	20		33-51-21	ALL
	8		W1060	586	22		25-65-12	ALL
	9		W1060	584	22		25-65-12	ALL
	10		W1060	218R	24		52-71-12	ALL
	11		W1060	218B	24		52-71-12	ALL
	12		W1060	510	22		25-65-12	ALL
	13		W1060	511	22		25-65-11	ALL
	14		W1060	571	22		33-51-11	ALL
	15		W1060	583	22		25-65-12	ALL
	16		W1060	587	22		25-65-11	ALL
	17		W1060	585	22		25-65-11	ALL
	18		W1060	582	22		25-65-11	ALL
	19		W1060	588	20		27-61-18	ALL
	20		W1060	589	20		27-61-18	ALL
	21	UNUSED						ALL
	22		W1060	152	22		33-51-21	ALL
	23		W1060	153	20		33-51-21	ALL
	24		W1060	572	22		33-51-21	ALL
	25	UNUSED						050-099
	25		W1060	228R	24		52-71-12	150-199, 275-299
	26	UNUSED						050-099
	26		W1060	228B	24		52-71-12	150-199, 275-299
	27		W1060	695	22		30-46-11	ALL
	28		W1060	248R	24		21-61-71	ALL
	29		W1060	248B	24		21-61-71	ALL
	30		W1060	777	24		33-21-12	050-099, 150-199
	30	UNUSED						275-299
	31		W1060	778	24		33-21-12	050-099, 150-199
	31	UNUSED						275-299
D05082P		AP0403/ /		PLUG-P19				ALL
	1		W0786	201B	22		21-51-22	ALL
	2		W0786	201R	22		21-51-22	ALL
	3		W0786	001	20		33-41-11	050-099

HOOKUP LIST
D280T132

91-21-51
Section D05000
Page 99
Feb 06/2009



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05082P		AP0403/ /		PLUG-P19 (continued)				ALL
	3	DL	W0786	001	18		33-41-11	150-199, 275-299
	4		W0786	202B	24		21-61-31	ALL
	5		W0786	202R	24		21-61-31	ALL
	6		W0786	031	22		33-51-21	ALL
	7		W0786	032	22		33-51-21	ALL
	8		W0786	110	22		25-65-12	ALL
	9		W0786	108	22		25-65-12	ALL
	10		W0786	203R	24		52-71-12	ALL
	11		W0786	203B	24		52-71-12	ALL
	12		W0786	047	22		25-65-12	ALL
	13		W0786	054	22		25-65-11	ALL
	14		W0786	003	20		33-51-11	ALL
	15		W0786	109	22		25-65-12	ALL
	16		W0786	096	22		25-65-11	ALL
	17		W0786	094	22		25-65-11	ALL
	18		W0786	095	22		25-65-11	ALL
	19		W0786	091	20		27-61-18	ALL
	20		W0786	105	20		27-61-18	ALL
	21		W0786	814	20		SPARE	ALL
	22		W0786	068	22		33-51-21	ALL
	23		W0786	072	20		33-51-21	ALL
	24		W0786	089	22		33-51-21	ALL
	25	UNUSED						050-099
	25		W0786	204R	24		52-71-12	150-199, 275-299
	26	UNUSED						050-099
	26		W0786	204B	24		52-71-12	150-199, 275-299
	27		W0786	171	22		30-46-11	ALL
	28		W0786	205R	24		21-61-71	ALL
	29		W0786	205B	24		21-61-71	ALL
	30		W0786	175	24		33-21-12	050-099
	30		W0786	175	20		33-21-12	150-199
	30	UNUSED						275-299
	31		W0786	176	24		33-21-12	050-099
	31		W0786	176	20		33-21-12	150-199
	31	UNUSED						275-299
D05084J		AP1003/ /		RCPT-P25				050-099
D05084J		AP1003/ /		RCPT-				150-199, 275-299
	1		W1064	068	20		33-51-11	ALL
	2		W1064	045	22		33-51-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05000

Page 100

Feb 06/2009



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05084J		AP1003/ /		RCPT-P25 (continued)				050-099
D05084J		AP1003/ /		RCPT- (continued)				150-199, 275-299
	3		W1064	163	22		33-51-11	ALL
	4		W1064	061	22		33-51-11	ALL
	5		W1064	602	22		30-46-11	ALL
	6		W1064	074	22		33-51-21	ALL
	7		W1064	073	22		33-51-21	ALL
	8		W1064	076	22		33-51-21	ALL
	9		W1064	206R	24		52-71-11	ALL
	10		W1064	206B	24		52-71-11	ALL
	11		W1064	207R	24		52-71-11	ALL
	12		W1064	207B	24		52-71-11	ALL
	13		W1064	213R	24		52-71-11	ALL
	14		W1064	213B	24		52-71-11	ALL
	15		W1064	013	22		33-21-21	ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24		W1064	638	22		33-21-21	050-099
	24	UNUSED						150-157, 275-299
	24		W1064	097	22		33-21-21	162-199
D05084P		AP1003/ /		PLUG-P25				ALL
	1		W0788	002	20		33-51-11	ALL
	2		W0788	005	22		33-51-11	ALL
	3		W0788	061	22		33-51-11	ALL
	4		W0788	007	22		33-51-11	ALL
	5		W0788	108	22		30-46-11	ALL
	6		W0788	066	22		33-51-21	ALL
	7		W0788	065	20		33-51-21	ALL
	8		W0788	070	22		33-51-21	ALL
	9		W0788	201R	24		52-71-11	ALL
	10		W0788	201B	24		52-71-11	ALL
	11		W0788	202R	24		52-71-11	ALL
	12		W0788	202B	24		52-71-11	ALL
	13		W0788	203R	24		52-71-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05000

Page 101

Feb 06/2009



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05084P		AP1003/ /		PLUG-P25 (continued)				ALL
	14		W0788	203B	24		52-71-11	ALL
	15		W0788	050	22		33-21-21	ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24		W0788	140	22		33-21-21	050-099, 162-199
	24	UNUSED						150-157, 275-299
D05085J		AE0319/ /		RCPT-E1-5				ALL
	1		W0733	215WN	24		34-22-25	ALL
	2		W0733	215W	24		34-22-25	ALL
	3		W0733	216WN	24		34-22-25	ALL
	4		W0733	216W	24		34-22-25	ALL
	5		W0733	217WN	24		34-22-25	ALL
	6		W0733	217W	24		34-22-25	ALL
	7		W0733	218WN	24		34-22-25	ALL
	8		W0733	218W	24		34-22-25	ALL
	9		W0733	219WN	24		34-22-25	ALL
	10		W0733	219W	24		34-22-25	ALL
	11		W0733	220WN	24		34-22-25	ALL
	12		W0733	220W	24		34-22-25	ALL
	13		W0733	221WN	24		34-22-25	ALL
	14		W0733	221W	24		34-22-25	ALL
	15		W0733	222WN	24		34-22-25	ALL
	16		W0733	222W	24		34-22-25	ALL
	17		W0733	223WN	24		34-22-25	ALL
	18		W0733	223W	24		34-22-25	ALL
	19		W0733	215Z			34-22-25	ALL
	20		W0733	216Z			34-22-25	ALL
	21		W0733	217Z			34-22-25	ALL
	22		W0733	218Z			34-22-25	ALL
	23		W0733	219Z			34-22-25	ALL
	24	UNUSED						ALL
	25		W0733	028	24		34-22-25	ALL
	26	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D05000

Page 102

Feb 06/2009



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05085J		AE0319/ /		RCPT-E1-5 (continued)				ALL
	27		W0733	029	24		34-22-25	ALL
	28		W0733	030	24		34-22-25	ALL
	29		W0733	220Z			34-22-25	ALL
	30		W0733	221Z			34-22-25	ALL
	31		W0733	222Z			34-22-25	ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35		W0733	223Z			34-22-25	ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
D05085P		AE0319/ /		PLUG-E1-5				ALL
	1		W1119	211WN	26		34-22-25	ALL
	2		W1119	211W	26		34-22-25	ALL
	3		W1119	212WN	26		34-22-25	ALL
	4		W1119	212W	26		34-22-25	ALL
	5		W1119	213WN	26		34-22-25	ALL
	6		W1119	213W	26		34-22-25	ALL
	7		W1119	214WN	26		34-22-25	ALL
	8		W1119	214W	26		34-22-25	ALL
	9		W1119	215WN	26		34-22-25	ALL

HOOKUP LIST
D280T132

91-21-51
Section D05000
Page 103
Feb 06/2009



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05085P		AE0319/ /		PLUG-E1-5 (continued)				ALL
	10		W1119	215W	26		34-22-25	ALL
	11		W1119	216WN	26		34-22-25	ALL
	12		W1119	216W	26		34-22-25	ALL
	13		W1119	217WN	26		34-22-25	ALL
	14		W1119	217W	26		34-22-25	ALL
	15		W1119	218WN	26		34-22-25	ALL
	16		W1119	218W	26		34-22-25	ALL
	17		W1119	219WN	26		34-22-25	ALL
	18		W1119	219W	26		34-22-25	ALL
	19		W1119	211Z			34-22-25	ALL
	20		W1119	212Z			34-22-25	ALL
	21		W1119	213Z			34-22-25	ALL
	22		W1119	214Z			34-22-25	ALL
	23		W1119	215Z			34-22-25	ALL
	24	UNUSED						ALL
	25		W1119	005	24		34-22-25	ALL
	26	UNUSED						ALL
	27		W1119	006	24		34-22-25	ALL
	28		W1119	007	24		34-22-25	ALL
	29		W1119	216Z			34-22-25	ALL
	30		W1119	217Z			34-22-25	ALL
	31		W1119	218Z			34-22-25	ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35		W1119	219Z			34-22-25	ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D05000

Page 104

Feb 06/2009



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05085P		AE0319/ /		PLUG-E1-5 (continued)				ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
D05086J D05086J		AP1003/ / AP1003/ /		RCPT-P25 RCPT-				050-099 150-199, 275-299
	1		W1064	201B	22		21-51-22	ALL
	2		W1064	201R	22		21-51-22	ALL
	3		W1064	202B	24		21-61-31	ALL
	4		W1064	202R	24		21-61-31	ALL
	5		W1064	203B	20		21-65-11	ALL
	6		W1064	203R	20		21-65-11	ALL
	7		W1064	056	20		33-51-11	ALL
	8		W1064	047	22		33-51-11	ALL
	9		W1064	162	22		33-51-11	ALL
	10		W1064	059	22		33-51-11	ALL
	11		W1064	058	22		33-51-11	ALL
	12		W1064	067	20		33-51-11	ALL
	13		W1064	603	22		30-46-11	ALL
	14		W1064	044	22		33-51-11	ALL
	15		W1064	204R	24		52-71-11	ALL
	16		W1064	204B	24		52-71-11	ALL
	17		W1064	205R	24		52-71-11	ALL
	18		W1064	205B	24		52-71-11	ALL
	19		W1064	212R	24		52-71-11	ALL
	20		W1064	212B	24		52-71-11	ALL
	21		W1064	224B	24		21-61-71	050-099, 275-299
	21	UNUSED						150-199
	22		W1064	224R	24		21-61-71	050-099, 275-299
	22	UNUSED						150-199
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						150-199
	26	UNUSED						150-199
	27	UNUSED						150-199
	28	UNUSED						150-199
	29		W1064	224B	24		21-61-71	150-199

HOOKUP LIST
D280T132

91-21-51
Section D05000
Page 105
Feb 06/2009



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05086J		AP1003/ /		RCPT-P25 (continued)				050-099
D05086J		AP1003/ /		RCPT- (continued)				150-199, 275-299
	30		W1064	224R	24		21-61-71	150-199
	31	UNUSED						150-199
D05086P		AP1003/ /		PLUG-P25				ALL
	1		W0790	201B	22		21-51-22	ALL
	2		W0790	201R	22		21-51-22	ALL
	3		W0790	202B	24		21-61-31	ALL
	4		W0790	202R	24		21-61-31	ALL
	5		W0790	203B	20		21-65-11	ALL
	6		W0790	203R	20		21-65-11	ALL
	7		W0790	004	20		33-51-11	ALL
	8		W0790	007	22		33-51-11	ALL
	9		W0790	057	22		33-51-11	ALL
	10		W0790	009	22		33-51-11	ALL
	11		W0790	030	22		33-51-11	ALL
	12		W0790	031	20		33-51-11	ALL
	13		W0790	125	22		30-46-11	ALL
	14		W0790	033	22		33-51-11	ALL
	15		W0790	204R	24		52-71-11	ALL
	16		W0790	204B	24		52-71-11	ALL
	17		W0790	205R	24		52-71-11	ALL
	18		W0790	205B	24		52-71-11	ALL
	19		W0790	206R	24		52-71-11	ALL
	20		W0790	206B	24		52-71-11	ALL
	21		W0790	215B	24		21-61-71	050-099, 275-299
	21	UNUSED						150-199
	22		W0790	215R	24		21-61-71	050-099, 275-299
	22	UNUSED						150-199
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						150-199
	26	UNUSED						150-199
	27	UNUSED						150-199
	28	UNUSED						150-199
	29		W0790	215B	24		21-61-71	150-199
	30		W0790	215R	24		21-61-71	150-199
	31	UNUSED						150-199

HOOKUP LIST

D280T132

91-21-51

Section D05000

Page 106

Feb 06/2009



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05088J		AP0401/ /		RCPT-				ALL
	1		W1060	526	20		33-21-11	050-099
	1		W1060	737	24		33-21-11	150-199
	1	UNUSED						275-299
	2		W1060	004	22		33-21-21	050-099
	2		W1060	004	20		33-21-21	150-199, 275-299
	3		W1060	097	22		21-61-31	ALL
	4		W1060	027	22		21-61-21	ALL
	5		W1060	203B	20		21-65-11	ALL
	6		W1060	203R	20		21-65-11	ALL
	7		W1060	204B	20		21-65-11	ALL
	8		W1060	204R	20		21-65-11	ALL
	9		W1060	205B	20		21-65-11	ALL
	10		W1060	205R	20		21-65-11	ALL
	11		W1060	073	24		33-24-11	ALL
	12		W1060	852	22		21-66-21	050-099, 162-199
	12	UNUSED						150-157, 275-299
	13		W1060	515	24		24-51-51	ALL
	14		W1060	075	24		33-24-11	ALL
	15		W1060	099	20		33-26-21	ALL
	16		W1060	512	24		24-51-51	ALL
	17		W1060	853	22		21-66-21	050-099, 162-199
	17	UNUSED						150-157, 275-299
	18		W1060	514	24		24-51-51	ALL
	19		W1060	520	20		33-26-11	ALL
	20		W1060	105	22		33-26-11	ALL
	21		W1060	111	20		33-51-11	ALL
	22		W1060	854	22		21-66-21	050-099, 162-199
	22	UNUSED						150-157, 275-299
	23		W1060	114	20		33-51-11	ALL
	24		W1060	113	20		33-51-11	ALL
	25		W1060	117	22		33-51-11	ALL
	26		W1060	582	22		25-65-11	ALL
	27		W1060	119	22		33-51-11	ALL
	28		W1060	122	22		33-51-11	ALL
	29		W1060	583	22		25-65-12	ALL
	30		W1060	126	22		33-51-11	ALL
	31		W1060	108	20		33-41-11	050-099
	31	DL	W1060	108	18		33-41-11	150-199, 275-299
	32		W1060	109	20		33-41-11	050-099
	32	DL	W1060	109	18		33-41-11	150-199, 275-299

HOOKUP LIST

D280T132

91-21-51

Section D05000

Page 107

Feb 06/2009



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05088J		AP0401/ /		RCPT- (continued)				ALL
	33		W1060	855	22		21-66-21	050-099, 162-199
	33	UNUSED						150-157, 275-299
	34		W1060	566	22		33-51-11	ALL
	35		W1060	567	22		33-51-11	ALL
	36		W1060	568	22		33-51-11	ALL
	37		W1060	606	22		25-65-12	ALL
	38	UNUSED						ALL
	39		W1060	608	22		25-65-12	ALL
	40		W1060	244Z			21-66-21	050-099, 162-199
	40	UNUSED						150-157, 275-299
	41		W1060	244R	22		21-66-21	050-099, 162-199
	41	UNUSED						150-157, 275-299
	42		W1060	244B	22		21-66-21	050-099, 162-199
	42	UNUSED						150-157, 275-299
	43		W1060	857	22		21-66-21	050-099, 162-199
	43	UNUSED						150-157, 275-299
	44		W1060	858	22		21-66-21	050-099, 162-199
	44	UNUSED						150-157, 275-299
	45		W1060	692	22		30-46-11	ALL
	46		W1060	057	22		21-61-41	ALL
	47		W1060	234B	20		21-65-11	ALL
	48		W1060	234R	20		21-65-11	ALL
	49		W1060	233B	20		21-65-11	ALL
	50		W1060	233R	20		21-65-11	ALL
	51		W1060	717	20		33-26-11	050-099, 150-199
	51	UNUSED						275-299
	52		W1060	864	22		21-66-41	050-099, 150, 152-199
	52	UNUSED						151, 275-299
	53		W1060	693	22		30-46-11	ALL
	54		W1060	866	22		21-66-41	050-099, 150, 152-199
	54	UNUSED						151, 275-299
	55		W1060	822	22		33-22-33	050-099, 162-199
	55	UNUSED						150-157, 275-299
D05088P		AP0401/ /		PLUG-P19				ALL
	1		W1222	051	20		33-21-11	050-099, 150-199
	1	UNUSED						275-299
	2		W1222	002	20		33-21-21	ALL
	3		W1222	003	22		21-61-31	ALL
	4		W1222	004	22		21-61-21	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05000

Page 108

Feb 06/2009



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05088P		AP0401 / /		PLUG-P19 (continued)				ALL
	5		W1222	201B	20		21-65-11	ALL
	6		W1222	201R	20		21-65-11	ALL
	7		W1222	202B	20		21-65-11	ALL
	8		W1222	202R	20		21-65-11	ALL
	9		W1222	203B	20		21-65-11	ALL
	10		W1222	203R	20		21-65-11	ALL
	11		W1222	005	24		33-24-11	ALL
	12		W1222	712	22		21-66-21	050-099, 162-199
	12		W1222	006	20		SPARE	150-157, 275-299
	13		W1222	042	24		24-51-51	ALL
	14		W1222	008	24		33-24-11	ALL
	15	FM	W1222	039	16		33-26-21	ALL
	16		W1222	045	24		24-51-51	ALL
	17		W1222	713	22		21-66-21	050-099, 162-199
	17	UNUSED						150-157, 275-299
	18		W1222	043	24		24-51-51	ALL
	19		W1222	046	20		33-26-11	ALL
	20		W1222	041	22		33-26-11	ALL
	21	DK	W1222	009	18		33-51-11	ALL
	22		W1222	714	22		21-66-21	050-099, 162-199
	22	UNUSED						150-157, 275-299
	23	DK	W1222	010	18		33-51-11	ALL
	24		W1222	640	20		33-51-11	050-099, 150-199
	24		W1222	016	20		33-51-11	275-299
	25		W1222	641	22		33-51-11	050-099, 150-199
	25		W1222	017	22		33-51-11	275-299
	26		W1222	087	22		25-65-11	ALL
	27		W1222	019	22		33-51-11	ALL
	28		W1222	011	22		33-51-11	ALL
	29		W1222	088	22		25-65-12	ALL
	30		W1222	013	22		33-51-11	ALL
	31		W1222	048	20		33-41-11	050-099
	31	DK	W1222	048	18		33-41-11	150-199, 275-299
	32		W1222	049	20		33-41-11	050-099
	32	DK	W1222	049	18		33-41-11	150-199, 275-299
	33		W1222	715	22		21-66-21	050-099, 162-199
	33	UNUSED						150-157, 275-299
	34		W1222	053	22		33-51-11	ALL
	35		W1222	054	22		33-51-11	ALL
	36		W1222	058	22		33-51-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05000

Page 109

Feb 06/2009



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05088P		AP0401/ /		PLUG-P19 (continued)				ALL
	37		W1222	089	22		25-65-12	ALL
	38		W1222	090	22		SPARE	ALL
	39		W1222	091	22		25-65-12	ALL
	40		W1222	218Z			21-66-21	050-099, 162-199
	40		W1222	092	22		SPARE	150-157, 275-299
	41		W1222	218R	22		21-66-21	050-099, 162-199
	41	UNUSED						150-157, 275-299
	42		W1222	218B	22		21-66-21	050-099, 162-199
	42	UNUSED						150-157, 275-299
	43		W1222	717	22		21-66-21	050-099, 162-199
	43	UNUSED						150-157, 275-299
	44		W1222	718	22		21-66-21	050-099, 162-199
	44	UNUSED						150-157, 275-299
	45		W1222	173	22		30-46-11	ALL
	46		W1222	096	22		21-61-41	ALL
	47		W1222	205B	20		21-65-11	ALL
	48		W1222	205R	20		21-65-11	ALL
	49		W1222	204B	20		21-65-11	ALL
	50		W1222	204R	20		21-65-11	ALL
	51		W1222	814	20		33-26-11	050-099, 150-199
	51		W1222	814	20		SPARE	275-299
	52		W1222	720	22		21-66-41	050-099, 150, 152-199
	52	UNUSED						151, 275-299
	53		W1222	174	22		30-46-11	ALL
	54		W1222	719	22		21-66-41	050-099, 150, 152-199
	54	UNUSED						151, 275-299
	55		W1222	676	22		33-22-33	050-099, 162-199
	55	UNUSED						150-157, 275-299
D05090J		AP0401/ /		RCPT-				ALL
	1		W1060	039	24		33-22-11	ALL
	2		W1060	040	24		33-22-11	ALL
	3		W1060	041	24		33-22-11	ALL
	4		W1060	042	24		33-22-11	ALL
	5		W1060	098	22		33-25-11	050-099
	5	UNUSED						150-199, 275-299
	6		W1060	220R	22		23-31-14	050-099, 150-199
	6		W1060	217R	22		23-31-14	275-299
	7		W1060	220B	22		23-31-14	050-099, 150-199
	7		W1060	217B	22		23-31-14	275-299

HOOKUP LIST

D280T132

91-21-51

Section D05000

Page 110

Feb 06/2009



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05090J		AP0401 / /		RCPT- (continued)				ALL
	8		W1060	201B	22		21-51-22	ALL
	9		W1060	201R	22		21-51-22	ALL
	10		W1060	202B	24		21-61-31	ALL
	11		W1060	202R	24		21-61-31	ALL
	12		W1060	144	20		33-51-21	ALL
	13		W1060	145	20		33-51-21	ALL
	14		W1060	183	22		52-11-12	ALL
	15		W1060	192	22		52-11-12	ALL
	16		W1060	180	22		52-11-12	ALL
	17		W1060	196	24		52-11-12	ALL
	18		W1060	507	22		23-31-11	050-099, 151, 275-299
	18	DK	W1060	904	18		23-31-11	150, 152-199
	19		W1060	509	22		23-31-11	ALL
	20	UNUSED						050-099
	20		W1060	228R	24		52-71-12	150-199, 275-299
	21	UNUSED						050-099
	21		W1060	228B	24		52-71-12	150-199, 275-299
	22		W1060	206R	24		52-71-11	ALL
	23		W1060	206B	24		52-71-11	ALL
	24		W1060	207R	24		52-71-11	ALL
	25		W1060	207B	24		52-71-11	ALL
	26		W1060	208R	24		52-71-11	ALL
	27		W1060	208B	24		52-71-11	ALL
	28		W1060	209R	24		52-71-11	ALL
	29		W1060	209B	24		52-71-11	ALL
	30		W1060	218R	24		52-71-12	ALL
	31		W1060	218B	24		52-71-12	ALL
	32		W1060	219R	24		52-71-12	ALL
	33		W1060	219B	24		52-71-12	ALL
	34	UNUSED						050-099
	34		W1060	229R	24		52-71-12	150-199, 275-299
	35	UNUSED						050-099
	35		W1060	229B	24		52-71-12	150-199, 275-299
	36		W1060	210R	24		52-71-11	ALL
	37		W1060	210B	24		52-71-11	ALL
	38		W1060	211R	24		52-71-11	ALL
	39		W1060	211B	24		52-71-11	ALL
	40		W1060	232B	24		21-61-31	ALL
	41		W1060	232R	24		21-61-31	ALL
	42		W1060	868	22		21-66-11	050-099, 162-199

HOOKUP LIST

D280T132

91-21-51

Section D05000

Page 111

Feb 06/2009



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05090J		AP0401/ /		RCPT- (continued)				ALL
	42	UNUSED						150-157, 275-299
	43		W1060	869	22		21-66-11	050-099, 162-199
	43	UNUSED						150-157, 275-299
	44		W1060	870	22		21-66-11	050-099, 162-199
	44	UNUSED						150-157, 275-299
	45		W1060	238R	22		23-31-14	050-099, 150-199
	45	UNUSED						275-299
	46		W1060	238B	22		23-31-14	050-099, 150-199
	46	UNUSED						275-299
	47		W1060	217R	22		23-31-14	050-099, 150-199
	47	UNUSED						275-299
	48		W1060	217B	22		23-31-14	050-099, 150-199
	48	UNUSED						275-299
	49		W1060	245R	22		23-31-14	050-099, 150-199
	49	UNUSED						275-299
	50		W1060	245B	22		23-31-14	050-099, 150-199
	50	UNUSED						275-299
	51		W1060	230R	24		21-61-41	ALL
	52		W1060	230B	24		21-61-41	ALL
	53		W1060	231R	24		21-61-41	ALL
	54		W1060	231B	24		21-61-41	ALL
	55		W1060	867	22		21-66-11	050-099, 162-199
	55	UNUSED						150-157, 275-299
D05090P		AP0401/ /		PLUG-P19				ALL
	1		W1226	001	24		33-22-11	ALL
	2		W1226	002	24		33-22-11	ALL
	3		W1226	003	24		33-22-11	ALL
	4		W1226	004	24		33-22-11	ALL
	5		W1226	005	22		33-25-11	050-099
	5	UNUSED						150-199, 275-299
	6		W1226	205R	22		23-31-14	ALL
	7		W1226	205B	22		23-31-14	ALL
	8		W1226	206B	22		21-51-22	ALL
	9		W1226	206R	22		21-51-22	ALL
	10		W1226	207B	24		21-61-31	ALL
	11		W1226	207R	24		21-61-31	ALL
	12		W1226	006	20		33-51-21	ALL
	13		W1226	007	20		33-51-21	ALL
	14		W1226	008	22		52-11-12	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05000

Page 112

Feb 06/2009



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05090P		AP0401 / /		PLUG-P19 (continued)				ALL
	15		W1226	009	22		52-11-12	ALL
	16		W1226	010	22		52-11-12	ALL
	17		W1226	011	24		52-11-12	ALL
	18		W1226	012	22		23-31-11	ALL
	19		W1226	013	22		23-31-11	ALL
	20	UNUSED						050-099
	20		W1226	224R	24		52-71-12	150-199, 275-299
	21	UNUSED						050-099
	21		W1226	224B	24		52-71-12	150-199, 275-299
	22		W1226	210R	24		52-71-11	ALL
	23		W1226	210B	24		52-71-11	ALL
	24		W1226	211R	24		52-71-11	ALL
	25		W1226	211B	24		52-71-11	ALL
	26		W1226	212R	24		52-71-11	ALL
	27		W1226	212B	24		52-71-11	ALL
	28		W1226	213R	24		52-71-11	ALL
	29		W1226	213B	24		52-71-11	ALL
	30		W1226	214R	24		52-71-12	ALL
	31		W1226	214B	24		52-71-12	ALL
	32		W1226	215R	24		52-71-12	ALL
	33		W1226	215B	24		52-71-12	ALL
	34	UNUSED						050-099
	34		W1226	225R	24		52-71-12	150-199, 275-299
	35	UNUSED						050-099
	35		W1226	225B	24		52-71-12	150-199, 275-299
	36		W1226	217R	24		52-71-11	ALL
	37		W1226	217B	24		52-71-11	ALL
	38		W1226	218R	24		52-71-11	ALL
	39		W1226	218B	24		52-71-11	ALL
	40		W1226	226B	24		21-61-31	ALL
	41		W1226	226R	24		21-61-31	ALL
	42		W1226	049	22		21-66-11	050-099, 162-199
	42	UNUSED						150-157, 275-299
	43		W1226	050	22		21-66-11	050-099, 162-199
	43	UNUSED						150-157, 275-299
	44		W1226	051	22		21-66-11	050-099, 162-199
	44	UNUSED						150-157, 275-299
	45		W1226	229R	22		23-31-14	050-099, 150-199
	45	UNUSED						275-299
	46		W1226	229B	22		23-31-14	050-099, 150-199

HOOKUP LIST

D280T132

91-21-51

Section D05000

Page 113

Feb 06/2009



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05090P		AP0401/ /		PLUG-P19 (continued)				ALL
	46	UNUSED						275-299
	47		W1226	230R	22		23-31-14	050-099, 150-199
	47	UNUSED						275-299
	48		W1226	230B	22		23-31-14	050-099, 150-199
	48	UNUSED						275-299
	49		W1226	231R	22		23-31-14	050-099, 150-199
	49	UNUSED						275-299
	50		W1226	231B	22		23-31-14	050-099, 150-199
	50	UNUSED						275-299
	51		W1226	227R	24		21-61-41	ALL
	52		W1226	227B	24		21-61-41	ALL
	53		W1226	228R	24		21-61-41	ALL
	54		W1226	228B	24		21-61-41	ALL
	55		W1226	048	22		21-66-11	050-099, 162-199
	55	UNUSED						150-157, 275-299
D05096J D05096J		AP1003/ / AP1003/ /		RCPT-P25 RCPT-				050-099 150-199, 275-299
	1	UNUSED						050-099, 150-199
	1		W1108	044	20		33-26-21	275-299
	2		W1108	519	20		33-26-21	050-099, 162-199
	2	UNUSED						150-157, 275-299
	3		W1108	042	22		33-26-11	050-099, 275-299
	3	UNUSED						150-199
	4		W1108	043	20		33-26-11	050-099
	4	UNUSED						150-199
	4		W1108	058	22		33-26-11	275-299
	5		W1108	068	20		33-26-11	050-099, 275-299
	5	UNUSED						150-199
	6		W1108	671	22		33-25-11	050-099
	6	UNUSED						150-199, 275-299
	7		W1108	672	22		33-25-11	050-099
	7	UNUSED						150-199
	7		W1108	039	22		33-25-11	275-299
	8		W1108	201R	22		23-31-14	ALL
	9		W1108	201B	22		23-31-14	ALL
	10		W1108	038	20		33-24-11	050-099, 150-199
	10		W1108	049	20		33-24-11	275-299
	11		W1108	108	20		33-26-11	050-099
	11	FM	W1108	048	16		38-13-11	150-199

HOOKUP LIST

D280T132

91-21-51

Section D05000

Page 114

Feb 06/2009



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05096J		AP1003/ /		RCPT-P25 (continued)				050-099
D05096J		AP1003/ /		RCPT- (continued)				150-199, 275-299
	11		W1108	048	16		38-13-11	275-299
	12		W1108	065	22		38-32-13	050-099
	12		W1108	135	22		38-32-13	150-156, 162-165, 275-276
	12		W1108	135	22		38-32-16	157, 166-199, 277-299
	13	DK	W1108	066	18		38-32-13	050-099
	13		W1108	066	20		38-32-13	150-156, 162-165, 275-276
	13		W1108	066	20		38-32-16	157, 166-199, 277-299
	14		W1108	604	20		25-42-11	050-099, 275-299
	14	FM	W1108	604	16		25-42-11	150-199
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18		W1108	826	20		33-26-11	050-099
	18	UNUSED						150-199, 275-299
	19		W1108	040	20		33-26-11	050-099
	19	UNUSED						150-199, 275-299
	20	UNUSED						050-099, 150-199
	21		W1108	048	16		38-13-11	050-099
	21	UNUSED						150-199
	22	UNUSED						050-099, 150-199
	23	UNUSED						050-099, 150-199
	24	UNUSED						050-099, 150-199
	25	UNUSED						050-099, 150-199
	26		W1108	669	22		33-25-11	050-099
	26	UNUSED						150-199
	27	UNUSED						050-099, 150-199
	28		W1108	673	22		33-25-11	050-099
	28	UNUSED						150-199
	29	UNUSED						050-099, 150-199
	30	UNUSED						050-099, 150-199
	31	UNUSED						050-099, 150-199
	32	UNUSED						050-099, 150-199
	33	UNUSED						050-099, 150-199
	34		W1108	667	22		33-25-11	050-099
	34	UNUSED						150-199
	35	UNUSED						050-099, 150-199
	36	UNUSED						050-099, 150-199
	37		W1108	658	24		33-21-31	050-099, 162-199
	37	UNUSED						150-157

HOOKUP LIST

D280T132

91-21-51

Section D05000

Page 115

Feb 06/2009



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05096J		AP1003/ /		RCPT-P25 (continued)				050-099
D05096J		AP1003/ /		RCPT- (continued)				150-199, 275-299
	38		W1108	660	24		33-21-31	050-099, 162-199
	38	UNUSED						150-157
	39		W1108	663	24		33-21-31	050-099, 162-199
	39	UNUSED						150-157
D05096P		AP1003/ /		PLUG-P25				ALL
	1	UNUSED						050-099, 150-199
	1		W0828	009	20		33-26-21	275-299
	2		W0828	500	20		33-26-21	050-099, 162-199
	2	UNUSED						150-157, 275-299
	3		W0828	099	22		33-26-11	050-099, 275-299
	3	UNUSED						150-199
	4		W0828	013	22		33-26-11	050-099
	4	UNUSED						150-199
	4		W0828	021	22		33-26-11	275-299
	5		W0828	070	20		33-26-11	050-099
	5	UNUSED						150-199
	5		W0828	022	20		33-26-11	275-299
	6		W0828	609	22		33-25-11	050-099
	6	UNUSED						150-199, 275-299
	7		W0828	610	22		33-25-11	050-099
	7	UNUSED						150-199
	7		W0828	028	22		33-25-11	275-299
	8		W0828	201R	22		23-31-14	ALL
	9		W0828	201B	22		23-31-14	ALL
	10		W0828	045	20		33-24-11	050-099, 150-199
	10		W0828	047	20		33-24-11	275-299
	11		W0828	101	22		33-26-11	050-099
	11	FL	W0828	025	16		38-13-11	150-199
	11		W0828	025	16		38-13-11	275-299
	12		W0828	038	22		38-32-13	050-099, 150-156, 162-165, 275-276
	12		W0828	038	22		38-32-16	157, 166-199, 277-299
	13	DL	W0828	048	18		38-32-13	050-099, 150-156, 162-165
	13	DL	W0828	048	18		38-32-16	157, 166-199
	13		W0828	048	18		38-32-13	275-276
	13		W0828	048	18		38-32-16	277-299
	14		W0828	108	20		25-42-11	050-099, 275-299
	14		W0828	104	20		25-42-11	150-199
	15	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D05000

Page 116

Feb 06/2009



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05096P		AP1003/ /		PLUG-P25 (continued)				ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED	W0828	021	22		33-26-11	050-099
	18	UNUSED	W0828	022	20		33-26-11	150-199, 275-299
	19	UNUSED	W0828					050-099
	19	UNUSED						150-199, 275-299
	20	UNUSED						050-099, 150-199
	21	UNUSED	W0828	104	16		38-13-11	050-099
	21	UNUSED						150-199
	22	UNUSED						050-099, 150-199
	23	UNUSED						050-099, 150-199
	24	UNUSED						050-099, 150-199
	25	UNUSED						050-099, 150-199
	26	UNUSED	W0828	608	22		33-25-11	050-099
	26	UNUSED						150-199
	27	UNUSED						050-099, 150-199
	28	UNUSED	W0828	611	22		33-25-11	050-099
	28	UNUSED						150-199
	29	UNUSED						050-099, 150-199
	30	UNUSED						050-099, 150-199
	31	UNUSED						050-099, 150-199
	32	UNUSED						050-099, 150-199
	33	UNUSED						050-099, 150-199
	34	UNUSED	W0828	607	22		33-25-11	050-099
	34	UNUSED						150-199
	35	UNUSED						050-099, 150-199
	36	UNUSED						050-099, 150-199
	37	UNUSED	W0828	183	24		33-21-31	050-099, 162-199
	37	UNUSED						150-157
	38	UNUSED	W0828	187	24		33-21-31	050-099, 162-199
	38	UNUSED						150-157
	39	UNUSED	W0828	188	24		33-21-31	050-099, 162-199
	39	UNUSED						150-157
D05097J		AE0319/ /		RCPT-E1-2				ALL
	1		W0731	204WN	24		34-22-14	ALL
	2		W0731	204W	24		34-22-14	ALL
	3		W0731	205WN	24		34-22-14	ALL
	4		W0731	205W	24		34-22-14	ALL
	5		W0731	206WN	24		34-22-14	ALL

HOOKUP LIST
D280T132

91-21-51
Section D05000
Page 117
Feb 06/2009



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05097J		AE0319/ /		RCPT-E1-2 (continued)				ALL
	6		W0731	206W	24		34-22-14	ALL
	7		W0731	207WN	24		34-22-14	ALL
	8		W0731	207W	24		34-22-14	ALL
	9		W0731	208WN	24		34-22-14	ALL
	10		W0731	208W	24		34-22-14	ALL
	11		W0731	209WN	24		34-22-14	ALL
	12		W0731	209W	24		34-22-14	ALL
	13		W0731	210WN	24		34-22-14	ALL
	14		W0731	210W	24		34-22-14	ALL
	15		W0731	211WN	24		34-22-14	ALL
	16		W0731	211W	24		34-22-14	ALL
	17		W0731	212WN	24		34-22-14	ALL
	18		W0731	212W	24		34-22-14	ALL
	19		W0731	204Z			34-22-14	ALL
	20		W0731	205Z			34-22-14	ALL
	21		W0731	206Z			34-22-14	ALL
	22		W0731	207Z			34-22-14	ALL
	23		W0731	208Z			34-22-14	ALL
	24	UNUSED						ALL
	25		W0731	007	24		34-22-14	ALL
	26	UNUSED						ALL
	27		W0731	008	24		34-22-14	ALL
	28		W0731	009	24		34-22-14	ALL
	29		W0731	209Z			34-22-14	ALL
	30		W0731	210Z			34-22-14	ALL
	31		W0731	211Z			34-22-14	ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35		W0731	212Z			34-22-14	ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39		W0731	213R	24		34-22-14	ALL
	40		W0731	213B	24		34-22-14	ALL
	41		W0731	213Z			34-22-14	ALL
D05097P		AE0319/ /		PLUG-				ALL
	1		W1103	202WN	26		34-22-14	ALL
	2		W1103	202W	26		34-22-14	ALL

HOOKUP LIST
D280T132

91-21-51
Section D05000
Page 118
Feb 06/2009



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05097P		AE0319/ /		PLUG- (continued)				ALL
	3		W1103	203WN	26		34-22-14	ALL
	4		W1103	203W	26		34-22-14	ALL
	5		W1103	204WN	26		34-22-14	ALL
	6		W1103	204W	26		34-22-14	ALL
	7		W1103	205WN	26		34-22-14	ALL
	8		W1103	205W	26		34-22-14	ALL
	9		W1103	206WN	26		34-22-14	ALL
	10		W1103	206W	26		34-22-14	ALL
	11		W1103	207WN	26		34-22-14	ALL
	12		W1103	207W	26		34-22-14	ALL
	13		W1103	208WN	26		34-22-14	ALL
	14		W1103	208W	26		34-22-14	ALL
	15		W1103	209WN	26		34-22-14	ALL
	16		W1103	209W	26		34-22-14	ALL
	17		W1103	210WN	26		34-22-14	ALL
	18		W1103	210W	26		34-22-14	ALL
	19		W1103	202Z			34-22-14	ALL
	20		W1103	203Z			34-22-14	ALL
	21		W1103	204Z			34-22-14	ALL
	22		W1103	205Z			34-22-14	ALL
	23		W1103	206Z			34-22-14	ALL
	24	UNUSED						ALL
	25		W1103	001	24		34-22-14	ALL
	26	UNUSED						ALL
	27		W1103	002	24		34-22-14	ALL
	28		W1103	003	24		34-22-14	ALL
	29		W1103	207Z			34-22-14	ALL
	30		W1103	208Z			34-22-14	ALL
	31		W1103	209Z			34-22-14	ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35		W1103	210Z			34-22-14	ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39		W1103	250R	24		34-22-14	ALL
	40		W1103	250B	24		34-22-14	ALL
	41		W1103	250Z			34-22-14	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05000

Page 119

Feb 06/2009



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05098J		AE0203/ /		RCPT-P33				ALL
	1		W0052	037	16		33-21-11	ALL
	2		W0052	071	22		33-51-11	ALL
	3		W0052	007	18		21-26-11	ALL
	4		W0052	008	18		21-26-11	ALL
	5		W0052	009	18		21-26-11	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8		W0052	041	16		33-21-12	ALL
	9		W0052	038	16		33-21-12	ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13		W0052	044	18		33-21-31	050-099
	13		W0052	044	16		33-21-31	150-199, 275-299
	14		W0052	045	18		33-21-31	050-099
	14		W0052	045	16		33-21-31	150-199, 275-299
D05098P		AE0203/ /		PLUG-P33				ALL
	1		W1228	027	16		33-21-11	ALL
	2		W1228	006	22		33-51-11	ALL
	3		W1228	003	18		21-26-11	ALL
	4		W1228	004	18		21-26-11	ALL
	5		W1228	005	18		21-26-11	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8		W1228	028	16		33-21-12	ALL
	9		W1228	029	16		33-21-12	ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13		W1228	023	18		33-21-31	050-099
	13		W1228	023	16		33-21-31	150-199, 275-299
	14		W1228	024	18		33-21-31	050-099
	14		W1228	024	16		33-21-31	150-199, 275-299

HOOKUP LIST

D280T132

91-21-51

Section D05000

Page 120 End

Feb 06/2009



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05100J		AE0209/ /		RCPT-P36				ALL
	1		W0182	70A	20		25-42-11	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W0182	135	18		21-24-11	050-099, 150-199 275-299
	4	UNUSED						
	5		W0182	041	18		38-32-12	050-099, 150-156, 162-165, 275-276
	5	UNUSED						157, 166-199, 277-299
	6		W0182	136	18		21-24-11	050-099, 150-199
	6	UNUSED						275-299
	7		W0182	002	16		38-13-11	ALL
	8		W0182	137	18		21-24-11	050-099, 150-199
	8	UNUSED						275-299
	9	UNUSED						ALL
	10	UNUSED						ALL
D05100P		AE0209/ /		PLUG-P36				ALL
	1		W1232	001	20		25-42-11	050-099
	1		W1232	001	18		25-42-11	150-199, 275-299
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W1232	008	18		21-24-11	050-099, 150-199
	4	UNUSED						275-299
	5		W1232	016	18		38-32-12	050-099, 150-156, 162-165, 275-276
	5	UNUSED						157, 166-199, 277-299
	6		W1232	009	18		21-24-11	050-099, 150-199
	6	UNUSED						275-299
	7		W1232	006	16		38-13-11	ALL
	8		W1232	010	18		21-24-11	050-099, 150-199
	8	UNUSED						275-299
	9	UNUSED						ALL
	10	UNUSED						ALL
D05101J		AE0319/ /		RCPT-E1-2				ALL
	1		W0731	215WN	24		34-22-15	ALL
	2		W0731	215W	24		34-22-15	ALL
	3		W0731	216WN	24		34-22-15	ALL
	4		W0731	216W	24		34-22-15	ALL
	5		W0731	217WN	24		34-22-15	ALL
	6		W0731	217W	24		34-22-15	ALL
	7		W0731	218WN	24		34-22-15	ALL

HOOKUP LIST
D280T132

91-21-51
Section D05100
Page 1
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05101J		AE0319/ /		RCPT-E1-2 (continued)				ALL
	8		W0731	218W	24		34-22-15	ALL
	9		W0731	219WN	24		34-22-15	ALL
	10		W0731	219W	24		34-22-15	ALL
	11		W0731	220WN	24		34-22-15	ALL
	12		W0731	220W	24		34-22-15	ALL
	13		W0731	221WN	24		34-22-15	ALL
	14		W0731	221W	24		34-22-15	ALL
	15		W0731	222WN	24		34-22-15	ALL
	16		W0731	222W	24		34-22-15	ALL
	17		W0731	223WN	24		34-22-15	ALL
	18		W0731	223W	24		34-22-15	ALL
	19		W0731	215Z			34-22-15	ALL
	20		W0731	216Z			34-22-15	ALL
	21		W0731	217Z			34-22-15	ALL
	22		W0731	218Z			34-22-15	ALL
	23		W0731	219Z			34-22-15	ALL
	24	UNUSED						ALL
	25		W0731	028	24		34-22-15	ALL
	26	UNUSED						ALL
	27		W0731	029	24		34-22-15	ALL
	28		W0731	030	24		34-22-15	ALL
	29		W0731	220Z			34-22-15	ALL
	30		W0731	221Z			34-22-15	ALL
	31		W0731	222Z			34-22-15	ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35		W0731	223Z			34-22-15	ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D05100

Page 2

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05101J		AE0319/ /		RCPT-E1-2 (continued)				ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
D05101P		AE0319/ /		PLUG-				ALL
	1		W1103	211WN	26		34-22-15	ALL
	2		W1103	211W	26		34-22-15	ALL
	3		W1103	212WN	26		34-22-15	ALL
	4		W1103	212W	26		34-22-15	ALL
	5		W1103	213WN	26		34-22-15	ALL
	6		W1103	213W	26		34-22-15	ALL
	7		W1103	214WN	26		34-22-15	ALL
	8		W1103	214W	26		34-22-15	ALL
	9		W1103	215WN	26		34-22-15	ALL
	10		W1103	215W	26		34-22-15	ALL
	11		W1103	216WN	26		34-22-15	ALL
	12		W1103	216W	26		34-22-15	ALL
	13		W1103	217WN	26		34-22-15	ALL
	14		W1103	217W	26		34-22-15	ALL
	15		W1103	218WN	26		34-22-15	ALL
	16		W1103	218W	26		34-22-15	ALL
	17		W1103	219WN	26		34-22-15	ALL
	18		W1103	219W	26		34-22-15	ALL
	19		W1103	211Z			34-22-15	ALL
	20		W1103	212Z			34-22-15	ALL
	21		W1103	213Z			34-22-15	ALL
	22		W1103	214Z			34-22-15	ALL
	23		W1103	215Z			34-22-15	ALL
	24	UNUSED						ALL
	25		W1103	005	24		34-22-15	ALL
	26	UNUSED						ALL
	27		W1103	006	24		34-22-15	ALL
	28		W1103	007	24		34-22-15	ALL
	29		W1103	216Z			34-22-15	ALL
	30		W1103	217Z			34-22-15	ALL

HOOKUP LIST
D280T132

91-21-51
Section D05100
Page 3
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05101P		AE0319/ /		PLUG- (continued)				ALL
	31		W1103	218Z			34-22-15	ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35		W1103	219Z			34-22-15	ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
D05102J		AE0307/ /		RCPT-E1-2				ALL
	1		W0780	201R	24		52-71-11	ALL
	2		W0780	201B	24		52-71-11	ALL
	3		W0780	202R	24		52-71-11	ALL
	4		W0780	202B	24		52-71-11	ALL
	5		W0780	203R	24		52-71-11	ALL
	6		W0780	203B	24		52-71-11	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D05100

Page 4

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05102P		AE0307/ /		PLUG-E1-2				ALL
	1		W1092	293R	24		52-71-11	ALL
	2		W1092	293B	24		52-71-11	ALL
	3		W1092	294R	24		52-71-11	ALL
	4		W1092	294B	24		52-71-11	ALL
	5		W1092	615R	24		52-71-11	ALL
	6		W1092	615B	24		52-71-11	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D05104J		AP1003/ /		RCPT-P25				050-099
	1		W1064	208R	22		23-31-15	050-099
	2		W1064	208B	22		23-31-15	050-099
	3	UNUSED						050-099
	4		W1064	027	18		33-24-12	050-099
	5	UNUSED						050-099
	6	UNUSED						050-099
	7		W1064	028	18		33-24-12	050-099
	8	UNUSED						050-099
	9	UNUSED						050-099
	10	UNUSED						050-099
	11	UNUSED						050-099
	12	UNUSED						050-099
D05104P		AP1003/ /		PLUG-P25				050-099
	1		W0806	201R	22		23-31-15	050-099
	2		W0806	201B	22		23-31-15	050-099
	3	UNUSED						050-099
	4		W0806	001	18		33-24-12	050-099
	5		W0806	241B	22		23-31-15	050-099
	6		W0806	241R	22		23-31-15	050-099
	7		W0806	002	18		33-24-12	050-099
	8	UNUSED						050-099
	9	UNUSED						050-099
	10	UNUSED						050-099
	11	UNUSED						050-099

HOOKUP LIST
D280T132

91-21-51
Section D05100
Page 5
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05104P		AP1003/ /		PLUG-P25 (continued)				050-099
	12	UNUSED						050-099
D05107J		AF0113/ /		RCPT-P1-3				ALL
	1		W0013	055	24		22-14-11	ALL
	2		W0013	056	24		22-14-11	ALL
	3	UNUSED						ALL
	4		W0013	075	24		34-12-22	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W0013	084	22		33-16-13	ALL
	8	UNUSED						ALL
	9		W0013	086	22		33-16-13	ALL
	10	UNUSED						ALL
	11		W0013	157	24		32-42-12	ALL
	12	UNUSED						ALL
	13		W0013	161	22		79-33-11	ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	DED		W0013	055Z			22-14-11	ALL
	DED		W0013	056Z			22-14-11	ALL
	DED		W0013	075Z			34-12-22	ALL
	DED		W0013	084Z			33-16-13	ALL
	DED		W0013	086Z			33-16-13	ALL
	DED		W0013	157Z			32-42-12	ALL
	DED		W0013	161Z			79-33-11	ALL
D05107P		AF0113/ /		PLUG-P1-3				ALL
	1		W0031	601	24		22-14-11	ALL
	2		W0031	602	24		22-14-11	ALL
	3	UNUSED						ALL
	4		W0031	605	24		34-12-22	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05100

Page 6

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05107P		AF0113/ /		PLUG-P1-3 (continued)				ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W0031	607	22		33-16-13	ALL
	8	UNUSED						ALL
	9		W0031	609	22		33-16-13	ALL
	10	UNUSED						ALL
	11		W0031	659	24		32-42-12	ALL
	12	UNUSED						ALL
	13		W0031	673	22		79-33-11	ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	DED		W0031	609Z			33-16-13	ALL
D05108J		AP1003/ /		RCPT-P25				050-099
	1		W1064	210R	22		23-31-17	050-099
	2		W1064	210B	22		23-31-17	050-099
	3	UNUSED						050-099
	4		W1064	121	20		33-24-14	050-099
	5		W1064	217B	22		23-31-17	050-099
	6		W1064	217R	22		23-31-17	050-099
	7		W1064	123	20		33-24-14	050-099
	8	UNUSED						050-099
	9	UNUSED						050-099
	10	UNUSED						050-099
	11	UNUSED						050-099
	12	UNUSED						050-099
D05108P		AP1003/ /		PLUG-P25				050-099
	1		W0810	201R	22		23-31-17	050-099
	2		W0810	201B	22		23-31-17	050-099
	3	UNUSED						050-099

HOOKUP LIST
D280T132

91-21-51
Section D05100
Page 7
Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05108P		AP1003/ /		PLUG-P25 (continued)				050-099
	4		W0810	001	18		33-24-14	050-099
	5		W0810	241B	22		23-31-17	050-099
	6		W0810	241R	22		23-31-17	050-099
	7		W0810	002	18		33-24-14	050-099
	8	UNUSED						050-099
	9	UNUSED						050-099
	10	UNUSED						050-099
	11	UNUSED						050-099
	12	UNUSED						050-099
D05109J		AE0307/ /		RCPT-E2-5				ALL
	1		W0721	001	22		23-22-11	ALL
	2	UNUSED						050-099
	2		W0721	002	24		SPARE	150-199, 275-278
	2		W0721	002	24		23-22-11	280-299
	3	UNUSED						050-099
	3		W0721	003	24		SPARE	150-199, 275-278
	3		W0721	003	24		23-22-11	280-299
	4	UNUSED						050-099
	4		W0721	004	24		SPARE	150-199, 275-299
	5	UNUSED						050-099
	5		W0721	005	24		SPARE	150-199, 275-299
	6		W0721	006	22		SPARE	ALL
	7	UNUSED						050-099, 151, 275-299
	7		W1417	924R	22		23-32-21	150, 152-199
	8	UNUSED						050-099, 151, 275-299
	8		W1417	924B	22		23-32-21	150, 152-199
	9	UNUSED						050-099, 151, 275-299
	9		W1417	925R	22		23-32-21	150, 152-199
	10	UNUSED						050-099, 151, 275-299
	10		W1417	925B	22		23-32-21	150, 152-199
	11	UNUSED						050-099, 151, 275-299
	11		W1417	FRA			23-32-21	150, 152-199
	12	UNUSED						ALL
			W1417	924Z			23-32-21	150, 152-199
			W1417	925Z			23-32-21	150, 152-199
			W1417	FRA			23-32-21	150, 152-199
D05109P		AE0307/ /		PLUG-E2-5				ALL
	1		W0139	058	20		23-22-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05100

Page 8

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05109P		AE0307/ /		PLUG-E2-5 (continued)				ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						050-099, 151, 275-299
	7		W0139	924R	22		23-32-21	150, 152-199
	8	UNUSED						050-099, 151, 275-299
	8		W0139	924B	22		23-32-21	150, 152-199
	9	UNUSED						050-099, 151, 275-299
	9		W0139	925R	22		23-32-21	150, 152-199
	10	UNUSED						050-099, 151, 275-299
	10		W0139	925B	22		23-32-21	150, 152-199
	11	UNUSED						050-099, 151, 275-299
	11		W0139	FRY			23-32-21	150, 152-199
	12	UNUSED						ALL
	DED		W0139	058Z			23-22-11	ALL
			W0139	924Z			23-32-21	150, 152-199
			W0139	925Z			23-32-21	150, 152-199
			W0139	FRY			23-32-21	150, 152-199
D05110J		AP0403/ /		RCPT-P19				050-099
D05110J		AP0403/ /		RCPT-				150-199, 275-299
	1		W1104	771	24		33-21-12	050-099, 150-199
	1	UNUSED						275-299
	2	UNUSED						050-099, 150-199
	2		W1104	029	20		33-21-11	275-277, 280-299
	2		W1104	024	20		33-21-11	278
	3		W1104	115	20		33-26-11	ALL
	4	UNUSED						050-099
	4		W1104	080	20		33-21-31	150-199
	4		W1104	073	20		33-21-31	275-299
	5		W1104	604	20		33-21-31	050-099
	5	UNUSED						150-199
	5		W1104	164	24		33-21-11	275-299
	6	DK	W1104	090	18		33-21-31	050-099
	6		W1104	027	22		33-51-11	150-199, 275-299
	7		W1104	726	20		33-21-31	050-099, 150-154, 157-165, 167-199
	7		W1104	823	20		33-21-31	155-156, 166
	7		W1104	087	20		33-21-31	275-299

HOOKUP LIST

D280T132

91-21-51

Section D05100

Page 9

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05110J		AP0403/ /		RCPT-P19 (continued)				050-099
D05110J		AP0403/ /		RCPT- (continued)				150-199, 275-299
	8		W1104	160	20		33-21-31	050-099
	8	UNUSED						150-199
	8		W1104	610	20		33-21-31	275-299
	9	DK	W1104	575	18		33-21-31	050-099
	9		W1104	700	20		33-21-31	150-154, 157-165, 167-199
	9		W1104	828	20		33-21-31	155-156, 166
	9		W1104	079	20		33-21-31	275-299
	10		W1104	089	20		33-21-31	050-099, 150-199
	10		W1104	158	20		33-21-31	275-299
	11		W1104	806	20		33-21-31	050-099, 150-154, 157-165, 167-199
	11		W1104	809	20		33-21-31	155-156
	11		W1104	586	20		33-21-31	166
	11	UNUSED						275-299
	12	UNUSED						050-099, 150-199
	12		W1104	628	20		33-21-11	275-299
	13	UNUSED						050-099
	13		W1104	025	20		33-21-11	150-199
	13		W1104	155	20		33-21-11	275-299
	14		W1104	005	24		33-21-11	ALL
	15		W1104	792	20		33-26-21	050-099
	15		W1104	604	20		33-21-31	150-154, 157-165, 167-199, 275-299
	15		W1104	827	20		33-21-31	155-156, 166
	16		W1104	790	20		33-26-21	050-099
	16		W1104	596	20		33-21-11	150-199
	16	UNUSED						275-299
	17		W1104	006	20		33-21-11	050-099
	17		W1104	026	20		33-21-11	150-199
	17		W1104	025	20		33-21-11	275-299
	18		W1104	024	20		33-21-11	050-099
	18		W1104	532	20		33-21-11	150-199
	18		W1104	616	20		33-21-11	275-299
	19		W1104	787	20		33-26-21	050-099
	19	UNUSED						150-199
	19		W1104	050	24		33-21-11	275-299
	20	UNUSED						050-099, 150-199
	20		W1104	030	24		33-21-11	275-299
	21	UNUSED						050-099
	21		W1104	087	20		33-21-31	150-199
	21		W1104	072	20		33-21-31	275-299

HOOKUP LIST

D280T132

91-21-51

Section D05100

Page 10

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05110J		AP0403/ /		RCPT-P19 (continued)				050-099
D05110J		AP0403/ /		RCPT- (continued)				150-199, 275-299
	22	UNUSED						ALL
	23	UNUSED						050-099, 150-199
	23		W1104	635	24		33-21-11	275-299
	24	UNUSED						ALL
	25		W1104	065	20		33-21-31	050-099
	25		W1104	103	20		33-21-31	150-199
	25		W1104	157	20		33-21-31	275-299
	26	UNUSED						050-099
	26		W1104	123	20		33-21-31	150-199, 275-299
	27	UNUSED						050-099, 150-199, 275-278
	27		W1104	705	16		33-21-31	280-299
	28	UNUSED						050-099, 151-152, 275-299
	28		W1060	902	22		33-22-21	150, 153-157
	28		W1060	901	22		33-22-21	162-199
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						050-099, 150-157, 275-299
	40		W1104	608	20		33-21-31	162-199
	41		W1104	815	20		33-26-11	050-099
	41	UNUSED						150-199, 275-299
	42		W1104	816	20		33-26-11	050-099
	42	UNUSED						150-199, 275-299
	43		W1104	651	20		33-26-11	050-099
	43	UNUSED						150-199, 275-299
	44		W1104	588	24		33-21-12	050-099, 150-199
	45		W1104	081	24		33-21-12	050-099, 150-199
	46		W1104	718	24		33-21-11	050-099, 150-199
	47		W1104	719	24		33-21-11	050-099, 150-199
	48		W1104	665	24		33-21-11	050-099, 150-199
	49		W1104	721	24		33-21-11	050-099, 150-199

HOOKUP LIST

D280T132

91-21-51

Section D05100

Page 11

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05110J		AP0403/ /		RCPT-P19 (continued)				050-099
D05110J		AP0403/ /		RCPT- (continued)				150-199, 275-299
	50		W1104	035	24		33-21-11	050-099, 150-199
	51		W1104	736	22		33-22-41	050-099, 150-199
	52		W1104	737	22		33-22-41	050-099, 150-199
	53		W1104	639	22		33-22-41	050-099, 150-199
	54		W1104	643	22		33-22-41	050-099, 150-199
	55		W1104	645	24		33-21-12	050-099, 150-199
	56		W1104	083	24		33-21-12	050-099, 150-199
	57		W1104	788	20		33-26-21	050-099
	57	UNUSED						150-199
	DED		W1104	080Z			33-21-31	155-156, 166
	DED		W1104	087Z			33-21-31	155-156, 166
	DED		W1104	089Z			33-21-31	155-156, 166
	DED		W1104	103Z			33-21-31	155-156, 166
	DED		W1104	123Z			33-21-31	155-156, 166
	DED		W1104	823Z			33-21-31	155-156, 166
	DED		W1104	827Z			33-21-31	155-156, 166
	DED		W1104	828Z			33-21-31	155-156, 166
	DED		W1104	586Z			33-21-31	166
	DED		W1104	608Z			33-21-31	166
D05110P		AP0403/ /		PLUG-P19				ALL
	1		W0812	01J	24		33-21-12	050-099
	1		W0812	911	20		33-21-12	150-199
	1	UNUSED						275-299
	2	UNUSED						050-099, 150-199
	2		W0812	154	20		33-21-11	275-299
	3		W0812	017	20		33-26-11	ALL
	4	UNUSED						050-099
	4		W0812	020	20		33-21-32	150-199, 275-299
	5		W0812	069	22		33-21-34	050-099
	5	UNUSED						150-199
	5		W0812	149	24		33-21-12	275-299
	6	DL	W0812	070	18		33-21-34	050-099
	6		W0812	009	22		33-51-11	150-199, 275-299
	7		W0812	079	22		33-21-32	050-099
	7		W0812	079	20		33-21-32	150-199, 275-299
	8		W0812	022	22		33-21-34	050-099
	8	UNUSED						150-199
	8		W0812	046	20		33-21-34	275-299

HOOKUP LIST

D280T132

91-21-51

Section D05100

Page 12

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05110P		AP0403/ /		PLUG-P19 (continued)				ALL
	9	DL	W0812	014	18		33-21-34	050-099
	9		W0812	083	20		33-21-32	150-199, 275-299
	10		W0812	01G	20		33-21-32	050-099
	10		W0812	084	20		33-21-32	150-199, 275-299
	11		W0812	814	20		33-21-31	050-099, 162-199
	11		W0812	814	20		SPARE	150-157, 275-299
	12	UNUSED						050-099, 150-199
	12		W0812	648	20		33-21-11	275-299
	13	UNUSED						050-099
	13		W0812	636	20		33-21-11	150-199, 275-299
	14		W0812	150	24		33-21-12	ALL
	15		W0812	01N	20		33-26-21	050-099
	15		W0812	069	20		33-21-34	150-199, 275-299
	16		W0812	01P	20		33-26-21	050-099
	16		W0812	194	20		33-21-13	150-199
	16	UNUSED						275-299
	17		W0812	168	20		33-21-11	ALL
	18		W0812	807	20		33-21-11	050-099
	18		W0812	181	20		33-21-11	150-199, 275-299
	19		W0812	01L	20		33-26-21	050-099
	19	UNUSED						150-199
	19		W0812	778	24		33-21-12	275-299
	20	UNUSED						050-099, 150-199
	20		W0812	772	24		33-21-12	275-299
	21	UNUSED						050-099
	21		W0812	786	20		33-21-32	150-199, 275-299
	22	UNUSED						ALL
	23	UNUSED						050-099, 150-199
	23		W0812	151	24		33-21-12	275-299
	24	UNUSED						ALL
	25		W0812	023	20		33-21-32	ALL
	26	UNUSED						050-099
	26		W0812	806	20		33-21-34	150-199, 275-299
	27	UNUSED						050-099, 150-199, 275-278
	27		W0812	01S	16		33-21-32	280-299
	28	UNUSED						050-099, 151-152, 275-299
	28		W9005	001	22		33-22-21	150, 153-199
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D05100
Page 13
Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05110P		AP0403/ /		PLUG-P19 (continued)				ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						050-099, 275-299
	40		W0812	851	16		33-21-34	150-199
	41		W0812	799	20		33-26-11	050-099
	41	UNUSED						150-199, 275-299
	42		W0812	894	20		33-26-11	050-099
	42	UNUSED						150-199, 275-299
	43		W0812	599	20		33-26-11	050-099
	43	UNUSED						150-199, 275-299
	44		W0812	880	24		33-21-12	050-099, 150-199
	45		W0812	882	24		33-21-12	050-099, 150-199
	46		W0812	872	24		33-21-11	050-099, 150-199
	47		W0812	873	24		33-21-11	050-099, 150-199
	48		W0812	876	24		33-21-11	050-099, 150-199
	49		W0812	875	24		33-21-11	050-099, 150-199
	50		W0812	878	24		33-21-11	050-099, 150-199
	51		W0812	888	22		33-22-41	050-099
	51		W0812	888	24		33-22-41	150-199
	52		W0812	889	22		33-22-41	050-099
	52		W0812	889	24		33-22-41	150-199
	53		W0812	890	22		33-22-41	050-099
	53		W0812	890	24		33-22-41	150-199
	54		W0812	891	22		33-22-41	050-099
	54		W0812	891	24		33-22-41	150-199
	55		W0812	887	24		33-21-12	050-099
	55		W0812	887	20		33-21-12	150-199
	56		W0812	01K	24		33-21-12	050-099
	56		W0812	910	20		33-21-12	150-199
	57		W0812	01M	20		33-26-21	050-099
	57	UNUSED						150-199
	DED		W0812	009Z			33-51-11	150-199, 275-299
	DED		W0812	851Z			33-21-34	155-156
	DED		W0812	020Z			33-21-32	155-156, 166

HOOKUP LIST

D280T132

91-21-51

Section D05100

Page 14

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05110P		AP0403/ /		PLUG-P19 (continued)				ALL
	DED		W0812	023Z			33-21-32	155-156, 166
	DED		W0812	069Z			33-21-34	155-156, 166
	DED		W0812	079Z			33-21-32	155-156, 166
	DED		W0812	083Z			33-21-32	155-156, 166
	DED		W0812	084Z			33-21-32	155-156, 166
	DED		W0812	786Z			33-21-32	155-156, 166
	DED		W0812	806Z			33-21-34	155-156, 166
D05111J		AF0119/ /		RCPT-				ALL
	1		W1435	001	22		31-41-11	ALL
	2		W1435	201R	24		31-41-12	ALL
	3		W1435	201B	24		31-41-12	ALL
	4		W1435	201Z			31-41-12	ALL
	5		W1435	202R	24		31-41-14	ALL
	6		W1435	202B	24		31-41-14	ALL
	7		W1435	203R	24		31-41-14	ALL
	8		W1435	203B	24		31-41-14	ALL
	9		W1435	204R	24		31-41-14	ALL
	10		W1435	204B	24		31-41-14	ALL
	11		W1435	301R	24		31-41-14	ALL
	12		W1435	301B	24		31-41-14	ALL
	13		W1435	301Y	24		31-41-14	ALL
	14		W1435	007	24		31-41-16	ALL
	15		W1435	008	24		31-41-16	ALL
	16		W1435	009	22		31-41-17	ALL
	17		W1435	010	22		31-41-17	ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20		W1435	012	22		SPARE	ALL
	21		W1435	013	22		SPARE	ALL
	22		W1435	014	22		SPARE	ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D05100
Page 15
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05111P		AF0119/ /		PLUG-P1				ALL
	1		W0011	650	22		31-41-11	ALL
	2		W0011	501R	24		31-41-12	ALL
	3		W0011	501B	24		31-41-12	ALL
	4		W0011	501Z			31-41-12	ALL
	5		W0011	502R	24		31-41-14	ALL
	6		W0011	502B	24		31-41-14	ALL
	7		W0011	504R	24		31-41-14	ALL
	8		W0011	504B	24		31-41-14	ALL
	9		W0011	505R	24		31-41-14	ALL
	10		W0011	505B	24		31-41-14	ALL
	11		W0011	350R	24		31-41-14	ALL
	12		W0011	350B	24		31-41-14	ALL
	13		W0011	350Y	24		31-41-14	ALL
	14		W0011	658	24		31-41-16	ALL
	15		W0011	659	24		31-41-16	ALL
	16		W0011	660	22		31-41-17	ALL
	17		W0011	661	22		31-41-17	ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
D05112J		AP1005/ /		RCPT-P25				050-099
D05112J		AP1005/ /		RCPT-				150-199, 275-299
	1	UNUSED						ALL
	2		W1108	137	20		33-21-12	050-099, 150-199
	2		W1108	003	20		33-21-12	275-299
	3		W1108	043	20		33-26-11	050-099, 275-299
	3	BJ	W1108	618	22		33-26-11	150-199
	4		W1108	034	22		33-21-34	050-099

HOOKUP LIST

D280T132

91-21-51

Section D05100

Page 16

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05112J		AP1005/ /		RCPT-P25 (continued)				050-099
D05112J		AP1005/ /		RCPT- (continued)				150-199, 275-299
	4		W1108	034	20		33-21-34	150-199, 275-299
	5		W1108	035	18		33-21-34	050-099
	5	UNUSED						150-199, 275-299
	6		W1108	040	20		33-26-11	050-099
	6	UNUSED						150-199, 275-299
	7		W1108	095	22		33-51-11	ALL
	8	UNUSED						ALL
	9		W1108	108	20		33-26-11	050-099
	9	UNUSED						150-199, 275-299
	10		W1108	630	20		33-21-12	050-099
	10		W1108	004	20		33-21-12	150-199, 275-278
	10		W1108	602	20		33-21-12	280-299
	11	UNUSED						050-099, 150-199
	11		W1108	017	24		33-21-12	275-299
	12	UNUSED						050-099, 150-199
	12		W1108	015	24		33-21-12	275-299
	13	UNUSED						050-099, 150-199
	13		W1108	139	24		33-21-12	275-299
	14		W1108	016	24		33-21-12	ALL
	15		W1108	002	16		33-21-12	ALL
	16		W1108	826	20		33-26-11	050-099
	16	UNUSED						150-199, 275-299
	17		W1108	674	20		33-21-31	050-099
	17	UNUSED						150-157, 275-299
	17		W1108	508	20		33-21-31	162-199
	18	UNUSED						ALL
	19		W1108	001	16		33-21-12	ALL
	20	UNUSED						150-199
	20		W1108	137	20		33-21-12	275-299
	21		W1108	059	20		33-21-34	150-199, 275-299
	22	UNUSED						150-199
	22		W1108	083	24		33-21-12	275-299
	23		W1108	035	16		33-21-34	150-199, 275-299
	24	UNUSED						150-199, 275-299
	25	UNUSED						150-199, 275-299
	26	UNUSED						150-199, 275-299
	27		W1108	630	20		33-21-12	150-199, 280-299
	27	UNUSED						275-278
	28	UNUSED						150-199, 275-299

HOOKUP LIST

D280T132

91-21-51

Section D05100

Page 17

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05112J		AP1005/ /		RCPT-P25 (continued)				050-099
D05112J		AP1005/ /		RCPT- (continued)				150-199, 275-299
	DED		W1108	034Z			33-21-34	155-156, 166
	DED		W1108	059Z			33-21-34	155-156, 166
D05112P		AP1005/ /		PLUG-P25				ALL
	1	UNUSED						ALL
	2		W0812	696	20		33-21-13	ALL
	3		W0812	017	20		33-26-11	050-099, 275-299
	3		W0812	894	20		33-26-11	150-199
	4		W0812	069	22		33-21-34	050-099
	4		W0812	069	20		33-21-34	150-199, 275-299
	5		W0812	014	18		33-21-34	050-099
	5	UNUSED						150-199, 275-299
	6		W0812	894	20		33-26-11	050-099
	6	UNUSED						150-199, 275-299
	7		W0812	009	22		33-51-11	ALL
	8	UNUSED						ALL
	9		W0812	799	20		33-26-11	050-099
	9	UNUSED						150-199, 275-299
	10		W0812	712	20		33-21-13	050-099
	10		W0812	672	20		33-21-13	150-199, 275-299
	11	UNUSED						050-099, 150-199
	11		W0812	778	24		33-21-12	275-299
	12	UNUSED						050-099, 150-199
	12		W0812	772	24		33-21-12	275-299
	13	UNUSED						050-099, 150-199
	13		W0812	149	24		33-21-12	275-299
	14		W0812	150	24		33-21-12	ALL
	15		W0812	148	16		33-21-12	050-099
	15		W0812	148	12		33-21-12	150-199, 275-299
	16		W0812	599	20		33-26-11	050-099
	16	UNUSED						150-199, 275-299
	17		W0812	814	20		33-21-31	050-099, 162-199
	17		W0812	814	20		SPARE	150-157, 275-299
	18	UNUSED						ALL
	19		W0812	147	16		33-21-12	050-099
	19		W0812	147	12		33-21-12	150-199, 275-299
	20	UNUSED						150-199
	20		W0812	194	20		33-21-13	275-278
	20		W0812	04K	20		33-21-13	280-299

HOOKUP LIST

D280T132

91-21-51

Section D05100

Page 18

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05112P		AP1005/ /		PLUG-P25 (continued)				ALL
	21		W0812	806	20		33-21-34	150-199, 275-299
	22	UNUSED						150-199
	22		W0812	151	24		33-21-12	275-299
	23		W0812	851	16		33-21-34	150-199
	23		W0812	071	16		33-21-34	275-278
	23	FM	W0812	071	16		33-21-34	280-299
	24	UNUSED						150-199, 275-299
	25	UNUSED						150-199, 275-299
	26	UNUSED						150-199, 275-299
	27		W0812	641	20		33-21-11	150-199, 280-299
	27	UNUSED						275-278
	28	UNUSED						150-199, 275-299
	DED		W0812	009Z			33-51-11	ALL
	DED		W0812	851Z			33-21-34	155-156
	DED		W0812	069Z			33-21-34	155-156, 166
	DED		W0812	806Z			33-21-34	155-156, 166
D05113J		AF0119/ /		RCPT-				ALL
	1		W1437	001	22		31-41-11	ALL
	2		W1437	201R	24		31-41-12	ALL
	3		W1437	201B	24		31-41-12	ALL
	4		W1437	201Z			31-41-12	ALL
	5		W1437	202R	24		31-41-14	ALL
	6		W1437	202B	24		31-41-14	ALL
	7		W1437	203R	24		31-41-14	ALL
	8		W1437	203B	24		31-41-14	ALL
	9		W1437	204R	24		31-41-14	ALL
	10		W1437	204B	24		31-41-14	ALL
	11		W1437	301R	24		31-41-14	ALL
	12		W1437	301B	24		31-41-14	ALL
	13		W1437	301Y	24		31-41-14	ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20		W1437	012	22		SPARE	ALL
	21		W1437	013	22		SPARE	ALL
	22		W1437	014	22		SPARE	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05100

Page 19

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05113J		AF0119/ /		RCPT- (continued)				ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
D05113P		AF0119/ /		PLUG				ALL
	1		W0031	650	22		31-41-11	ALL
	2		W0031	501R	24		31-41-12	ALL
	3		W0031	501B	24		31-41-12	ALL
	4		W0031	501Z			31-41-12	ALL
	5		W0031	502R	24		31-41-14	ALL
	6		W0031	502B	24		31-41-14	ALL
	7		W0031	504R	24		31-41-14	ALL
	8		W0031	504B	24		31-41-14	ALL
	9		W0031	505R	24		31-41-14	ALL
	10		W0031	505B	24		31-41-14	ALL
	11		W0031	350R	24		31-41-14	ALL
	12		W0031	350B	24		31-41-14	ALL
	13		W0031	350Y	24		31-41-14	ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D05100

Page 20

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05113P		AF0119/ /		PLUG (continued)				ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
D05114J		AP0403/ /		RCPT-P19				050-099
D05114J		AP0403/ /		RCPT-				150-199, 275-299
	1	UNUSED						050-099
	1		W1104	102	22		33-24-11	150-199, 275-299
	2	UNUSED						050-099
	2		W1104	114	22		33-26-11	150-199, 275-299
	3		W1104	593	22		33-26-11	ALL
	4		W1104	149	22		33-26-11	ALL
	5		W1104	596	20		33-21-11	050-099
	5		W1104	619	20		33-21-11	150-199
	5		W1104	532	20		33-21-11	275-299
	6		W1104	790	20		33-26-21	050-099
	6	UNUSED						150-199
	6		W1104	032	20		33-26-21	275-299
	7		W1104	792	20		33-26-21	050-099
	7		W1104	800	24		33-21-31	150-154, 157-165, 167-199
	7	UNUSED						155-156, 166
	7		W1104	591	22		33-25-11	275-299
	8		W1104	793	20		33-26-21	050-099
	8	UNUSED						150-199, 275-278
	8		W1104	874	20		33-26-21	280-299
	9		W1104	086	20		33-21-31	050-099, 150-199
	9		W1104	162	20		33-21-31	275-299
	10	UNUSED						050-099, 150-199
	10		W1104	121	22		33-26-21	275-278
	10		W1104	873	22		33-26-21	280-299
	11		W1104	092	20		33-21-31	050-099
	11	UNUSED						150-199
	11		W1104	609	20		33-21-31	275-299
	12		W1104	717	20		33-21-31	050-099, 150-154, 157-165, 167-199
	12		W1104	825	20		33-21-31	155-156, 166
	12		W1104	611	20		33-21-31	275-299
	13		W1104	077	20		33-21-31	050-099, 150-199
	13		W1104	085	20		33-21-31	275-299
	14	UNUSED						050-099, 162, 167-199
	14		W1104	722	20		33-21-31	150-154, 157
	14		W1104	777	20		33-21-31	155-156

HOOKUP LIST
D280T132

91-21-51
Section D05100
Page 21
Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05114J		AP0403/ /		RCPT-P19 (continued)				050-099
D05114J		AP0403/ /		RCPT- (continued)				150-199, 275-299
	14	FM	W1104	722	16		33-21-31	163-165
	14	FM	W1104	829	16		33-21-31	166
	14		W1104	727	20		25-42-11	275-299
	15		W1104	802	20		33-21-31	050-099
	15	UNUSED						150-199
	15		W1104	089	16		33-21-31	275-299
	16	UNUSED						050-099
	16		W1104	065	20		33-21-31	150-154, 157-165, 167-199
	16		W1104	824	20		33-21-31	155-156, 166
	16		W1104	086	20		33-21-31	275-299
	17		W1104	074	20		33-21-31	050-099, 150-165, 167-199
	17		W1104	822	20		33-21-31	166
	17		W1104	084	20		33-21-31	275-299
	18	UNUSED						050-099
	18		W1104	124	20		33-21-31	150-199, 275-299
	19		W1104	102	22		33-24-11	050-099
	19	DK	W1104	591	18		26-13-11	150-157
	19	DK	W1104	706	18		26-13-11	162-199
	19	UNUSED						275-299
	20		W1104	601	20		26-13-11	050-099, 150-199
	20		W1104	590	22		33-25-11	275-299
	21	FM	W1104	118	16		38-13-11	050-099
	21		W1104	160	20		33-21-31	150-154, 157-165, 167-199, 275-299
	21		W1104	826	20		33-21-31	155-156, 166
	22		W1104	652	20		33-26-11	050-099, 150-199
	22		W1104	592	22		33-26-11	275-299
	23	FM	W1104	116	16		38-13-11	050-099
	23	UNUSED						150-199, 275-299
	24		W1104	032	20		33-26-11	050-099
	24		W1104	032	22		33-26-11	150-199
	24		W1104	594	20		33-26-11	275-299
	25		W1104	796	20		26-13-11	050-099
	25	UNUSED						150-199
	25		W1104	202R	22		23-31-14	275-299
	26		W1104	795	20		26-13-11	050-099
	26		W1060	903	22		33-22-21	150, 153-157
	26	UNUSED						151-152, 162-199
	26		W1104	202B	22		23-31-14	275-299
	27		W1104	797	20		26-13-11	050-099

HOOKUP LIST

D280T132

91-21-51

Section D05100

Page 22

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05114J		AP0403/ /		RCPT-P19 (continued)				050-099
D05114J		AP0403/ /		RCPT- (continued)				150-199, 275-299
	27		W1104	551	16		33-21-31	150-199, 275-299
	28		W1104	798	20		26-13-11	050-099
	28	FM	W1104	575	16		33-21-31	150-154
	28		W1104	802	16		33-21-31	155-156
	28		W1104	575	16		33-21-31	157
	28		W1104	505	16		33-21-31	162-199
	28		W1104	602	20		33-26-21	275-299
	29		W1104	799	20		26-13-11	050-099
	29	UNUSED						150-157, 163-166, 275-299
	29		W1104	722	16		33-21-31	162, 167-199
	30		W1104	794	20		33-26-21	050-099
	30	UNUSED						150-199, 275-278
	30		W1104	780	20		35-21-12	280-299
	31	UNUSED						050-099, 150-157, 275-278
	31		W1104	118	16		38-13-11	162-199
	31		W1104	121	20		33-26-21	280-299
	32	UNUSED						050-099, 150-199, 275-278
	32		W1104	832	20		33-22-31	280-299
	33	UNUSED						ALL
	34		W1104	591	18		26-13-11	050-099
	34	UNUSED						150-199, 275-299
	35	UNUSED						ALL
	36	UNUSED						050-099, 150-199, 275-278
	36		W1104	879	22		33-22-21	280-299
	37		W1104	769	20		33-24-11	050-099, 275-299
	37	UNUSED						150-199
	38		W1104	770	20		33-24-11	050-099, 275-299
	38	UNUSED						150-199
	39	UNUSED						050-099, 150-199
	39		W1104	561	20		33-24-11	275-299
	40		W1104	800	24		33-21-31	050-099
	40		W1104	118	16		38-13-11	150-157
	40	UNUSED						162-165, 167-199
	40		W1104	831	24		33-21-31	166
	40		W1104	655	20		33-24-11	275-299
	41	UNUSED						050-099
	41		W1104	116	16		38-13-11	150-199, 275-299
	42		W1104	722	18		33-21-31	050-099
	42		W1104	082	20		33-21-31	150-199

HOOKUP LIST
D280T132

91-21-51
Section D05100
Page 23
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05114J		AP0403/ /		RCPT-P19 (continued)				050-099
D05114J		AP0403/ /		RCPT- (continued)				150-199, 275-299
	42		W1104	071	16		33-21-31	275-299
	43		W1104	727	20		25-42-11	050-099, 150-199
	43		W1104	118	16		38-13-11	275-299
	DED		W1104	074Z			33-21-31	155-156
	DED		W1104	777Z			33-21-31	155-156
	DED		W1104	802Z			33-21-31	155-156
	DED		W1104	077Z			33-21-31	155-156, 166
	DED		W1104	082Z			33-21-31	155-156, 166
	DED		W1104	086Z			33-21-31	155-156, 166
	DED		W1104	124Z			33-21-31	155-156, 166
	DED		W1104	551Z			33-21-31	155-156, 166
	DED		W1104	824Z			33-21-31	155-156, 166
	DED		W1104	825Z			33-21-31	155-156, 166
	DED		W1104	826Z			33-21-31	155-156, 166
	DED		W1104	505Z			33-21-31	166
	DED		W1104	822Z			33-21-31	166
	DED		W1104	829Z			33-21-31	166
D05114P		AP0403/ /		PLUG-P19				ALL
	1	UNUSED						050-099
	1		W0814	143	20		33-24-11	150-199, 275-299
	2	UNUSED						050-099
	2		W0814	002	22		33-26-11	150-199, 275-299
	3		W0814	584	22		33-26-11	050-099, 275-299
	3		W0814	895	22		33-26-11	150-199
	4		W0814	521	22		33-26-11	ALL
	5		W0814	021	20		33-27-11	ALL
	6		W0814	810	20		33-26-21	050-099
	6	UNUSED						150-199
	6		W0814	645	20		33-26-21	275-278
	6		W0814	589	20		33-26-21	280-299
	7		W0814	811	20		33-26-21	050-099
	7	UNUSED						150-157
	7		W0814	781	24		33-21-31	162-199
	7		W0814	617	22		33-25-11	275-299
	8		W0814	812	20		33-26-21	050-099
	8	UNUSED						150-199, 275-278
	8		W0814	18A	20		33-26-21	280-299
	9		W0814	087	20		33-21-33	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05100

Page 24

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05114P		AP0403/ /		PLUG-P19 (continued)				ALL
	10	UNUSED						050-099, 150-199
	10		W0814	620	20		33-26-21	275-299
	11		W0814	047	22		33-21-35	050-099
	11	UNUSED						150-199
	11		W0814	050	20		33-21-35	275-299
	12		W0814	073	22		33-21-35	050-099
	12		W0814	073	20		33-21-35	150-199, 275-299
	13		W0814	074	20		33-21-33	ALL
	14	UNUSED						050-099, 162, 167-199
	14		W0814	083	20		33-21-33	150-157, 163-166
	14		W0814	699	20		25-42-11	275-299
	15		W0814	086	20		33-21-33	050-099
	15	UNUSED						150-199
	15		W0814	546	16		33-21-33	275-299
	16	UNUSED						050-099
	16		W0814	520	20		33-21-33	150-199, 275-299
	17		W0814	088	20		33-21-33	ALL
	18	UNUSED						050-099
	18		W0814	022	20		33-21-35	150-199, 275-299
	19		W0814	143	20		33-24-11	050-099
	19		W0814	840	20		26-13-11	150-157
	19	DL	W0814	840	18		26-13-11	162-199
	19	UNUSED						275-299
	20		W0814	841	20		26-13-11	050-099, 150-199
	20		W0814	690	22		33-25-11	275-299
	21	FL	W0814	011	16		38-13-11	050-099
	21		W0814	086	20		33-21-33	150-199, 275-299
	22		W0814	583	20		33-26-11	050-099, 275-299
	22		W0814	181	22		33-26-11	150-199
	23	FL	W0814	568	16		38-13-11	050-099
	23	UNUSED						150-199, 275-299
	24		W0814	582	20		33-26-11	050-099, 275-299
	24		W0814	182	20		33-26-11	150-199
	25		W0814	847	20		26-13-11	050-099
	25	UNUSED						150-199
	25		W0814	211R	22		23-31-14	275-299
	26		W0814	848	20		26-13-11	050-099
	26		W9006	001	22		33-22-21	150, 153-157
	26	UNUSED						151-152, 162-199
	26		W0814	211B	22		23-31-14	275-299

HOOKUP LIST
D280T132

91-21-51
Section D05100
Page 25
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05114P		AP0403/ /		PLUG-P19 (continued)				ALL
	27		W0814	849	20		26-13-11	050-099
	27		W0814	047	16		33-21-35	150-199, 275-299
	28		W0814	850	20		26-13-11	050-099
	28		W0814	709	16		33-21-35	150-199
	28		W0814	623	20		33-26-21	275-299
	29		W0814	851	20		26-13-11	050-099
	29	UNUSED						150-157, 163-166, 275-299
	29		W0814	083	16		33-21-33	162, 167-199
	30		W0814	783	20		33-26-21	050-099
	30	UNUSED						150-199, 275-278
	30		W0814	778	20		35-21-12	280-299
	31	UNUSED						050-099, 150-157, 275-278
	31		W0814	011	16		38-13-11	162-199
	31		W0814	523	20		33-26-21	280-299
	32	UNUSED						050-099, 150-199, 275-278
	32		W0814	775	20		33-22-31	280-299
	33	UNUSED						ALL
	34		W0814	840	18		26-13-11	050-099
	34	UNUSED						150-199, 275-299
	35	UNUSED						ALL
	36	UNUSED						050-099, 150-199, 275-278
	36		W0814	522	22		33-22-21	280-299
	37		W0814	760	20		33-24-11	050-099, 275-299
	37	UNUSED						150-199
	38		W0814	761	20		33-24-11	050-099, 275-299
	38	UNUSED						150-199
	39	UNUSED						050-099, 150-199
	39		W0814	762	20		33-24-11	275-299
	40		W0814	781	24		33-21-31	050-099
	40		W0814	011	16		38-13-11	150-157
	40	UNUSED						162-199
	40		W0814	763	20		33-24-11	275-299
	41	UNUSED						050-099
	41		W0814	696	16		38-13-11	150-199
	41		W0814	568	16		38-13-11	275-299
	42		W0814	083	18		33-21-33	050-099
	42		W0814	807	20		33-21-33	150-199
	42		W0814	083	16		33-21-33	275-299
	43		W0814	699	20		25-42-11	050-099, 150-199
	43		W0814	011	16		38-13-11	275-299

HOOKUP LIST

D280T132

91-21-51

Section D05100

Page 26

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05114P		AP0403/ /		PLUG-P19 (continued)				ALL
	DED		W0814	022Z			33-21-35	155-156, 166
	DED		W0814	047Z			33-21-35	155-156, 166
	DED		W0814	073Z			33-21-35	155-156, 166
	DED		W0814	074Z			33-21-33	155-156, 166
	DED		W0814	083Z			33-21-33	155-156, 166
	DED		W0814	086Z			33-21-33	155-156, 166
	DED		W0814	087Z			33-21-33	155-156, 166
	DED		W0814	088Z			33-21-33	155-156, 166
	DED		W0814	520Z			33-21-33	155-156, 166
	DED		W0814	709Z			33-21-35	155-156, 166
	DED		W0814	807Z			33-21-33	155-156, 166
D05115J		AF0119/ /		RCPT-				ALL
	1		W1711	202R	24		31-41-12	ALL
	2		W1711	202B	24		31-41-12	ALL
	3		W1711	202Z			31-41-12	ALL
	4		W1711	006	22		31-41-12	ALL
	5		W1711	007	22		31-41-12	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12		W1711	302R	24		31-41-14	ALL
	13		W1711	302B	24		31-41-14	ALL
	14		W1711	302Y	24		31-41-14	ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17		W1711	025	22		31-41-17	ALL
	18		W1711	026	22		31-41-17	ALL
	19		W1711	027	24		SPARE	ALL
	20		W1711	028	24		SPARE	ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26		W1711	206R	24		SPARE	ALL
	27		W1711	206B	24		SPARE	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05100

Page 27

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05115J		AF0119/ /		RCPT- (continued)				ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
D05115P		AF0119/ /		PLUG-P1				ALL
	1		W0011	501R	24		31-41-12	ALL
	2		W0011	501B	24		31-41-12	ALL
	3		W0011	501Z			31-41-12	ALL
	4		W0011	652	22		31-41-12	ALL
	5		W0011	653	22		31-41-12	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12		W0011	350R	24		31-41-14	ALL
	13		W0011	350B	24		31-41-14	ALL
	14		W0011	350Y	24		31-41-14	ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17		W0011	660	22		31-41-17	ALL
	18		W0011	661	22		31-41-17	ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D05100

Page 28

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05116J		AP1005/ /		RCPT-P25				050-099
D05116J		AP1005/ /		RCPT-				150-199, 275-299
	1	UNUSED						ALL
	2		W1108	042	22		33-26-11	050-099, 275-299
	2		W1108	613	22		33-26-11	150-199
	3	UNUSED						050-099, 275-299
	3		W1108	614	22		33-26-11	150-199
	4		W1108	060	20		33-27-11	ALL
	5		W1108	065	22		38-32-13	050-099
	5		W1108	129	22		38-32-13	150-156, 162-165, 275-276
	5		W1108	129	22		38-32-16	157, 166-199, 277-299
	6	DL	W1108	066	18		38-32-13	050-099
	6		W1108	119	20		38-32-13	150-156, 162-165, 275-276
	6		W1108	119	20		38-32-16	157, 166-199, 277-299
	7		W1108	037	22		33-21-35	050-099
	7		W1108	037	20		33-21-35	150-199, 275-299
	8	UNUSED						050-099, 150-199
	8		W1108	121	20		38-32-13	275-276
	8		W1108	121	20		38-32-16	277-299
	9		W1108	512	20		33-26-21	050-099
	9		W1108	615	22		33-26-11	150-199
	9	UNUSED						275-299
	10		W1108	038	20		33-24-11	ALL
	11	FL	W1108	048	16		38-13-11	050-099
	11	FL	W1108	604	16		25-42-11	150-199
	11		W1108	048	16		38-13-11	275-299
	12		W1108	604	20		25-42-11	050-099, 275-299
	12	UNUSED						150-199
	13		W1108	621	22		33-25-11	050-099, 150-199
	13	UNUSED						275-299
	14		W1108	660	24		33-21-31	050-099
	14		W1108	039	22		33-25-11	150-199
	14	UNUSED						275-299
	15	UNUSED						050-099, 150-199
	15		W1108	115	20		33-26-21	275-299
	16		W1108	039	22		33-25-11	050-099
	16	UNUSED						150-199, 275-299
	17		W1108	116	22		33-25-11	050-099, 150-199
	17	UNUSED						275-299
	18		W1108	666	22		33-25-11	050-099
	18	UNUSED						150-199

HOOKUP LIST

D280T132

91-21-51

Section D05100

Page 29

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05116J		AP1005/ /		RCPT-P25 (continued)				050-099
D05116J		AP1005/ /		RCPT- (continued)				150-199, 275-299
	18		W1108	131	22		38-32-13	275-276
	18		W1108	131	22		38-32-16	277-299
	19	UNUSED						050-099
	19		W1108	091	20		33-21-35	150-199, 275-299
	20		W1108	670	22		33-25-11	050-099
	20	UNUSED						150-154, 156, 162-199
	20		W1108	173	22		33-25-11	155, 157
	21		W1108	044	20		33-26-21	050-099, 150-199
	22		W1108	518	20		33-26-21	050-099
	22		W1108	620	20		33-26-21	150-199
	23	UNUSED						050-099
	23		W1108	048	16		38-13-11	150-199
	24	UNUSED						050-099, 150-199
	25	DL	W1108	605	18		26-13-11	050-099, 150-199
	26		W1108	606	20		26-13-11	050-099, 150-199
	27		W1108	607	20		26-13-11	050-099, 150-199
	28		W1108	514	20		33-26-21	050-099
	28		W1108	608	20		26-13-11	150-199
	29		W1108	517	20		33-26-21	050-099
	29		W1108	609	20		26-13-11	150-199
	30		W1108	610	20		26-13-11	050-099, 150-199
	31		W1108	611	20		26-13-11	050-099, 150-199
	32		W1108	612	20		26-13-11	050-099, 150-199
	33	UNUSED						050-099
	33		W1108	068	20		33-26-11	150-199
	34	UNUSED						050-099, 150-157
	34		W1108	660	24		33-21-31	162-199
	35	UNUSED						050-099, 150-199
	36	UNUSED						050-099, 150-199
	37	UNUSED						050-099, 150-199
	38	UNUSED						050-099, 150-199
	39	UNUSED						050-099, 150-199
	DED		W1108	037Z			33-21-35	155-156, 166
	DED		W1108	091Z			33-21-35	155-156, 166
D05116P		AP1005/ /		PLUG-P25				ALL
	1	UNUSED						ALL
	2		W0814	002	22		33-26-11	050-099, 275-299
	2		W0814	805	22		33-26-11	150-199

HOOKUP LIST

D280T132

91-21-51

Section D05100

Page 30

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05116P		AP1005/ /		PLUG-P25 (continued)				ALL
	3	UNUSED						050-099, 275-299
	3		W0814	871	22		33-26-11	150-199
	4		W0814	021	20		33-27-11	ALL
	5		W0814	688	22		38-32-13	050-099, 150-156, 162-165
	5		W0814	688	22		38-32-16	157, 166-199
	5		W0814	691	20		38-32-13	275-276
	5		W0814	691	20		38-32-16	277-299
	6	DK	W0814	689	18		38-32-13	050-099
	6		W0814	689	22		38-32-13	150-156, 162-165
	6		W0814	689	22		38-32-16	157, 166-199
	6		W0814	692	18		38-32-13	275-276
	6		W0814	692	18		38-32-16	277-299
	7		W0814	073	22		33-21-35	050-099
	7		W0814	073	20		33-21-35	150-199, 275-299
	8	UNUSED						050-099, 150-199
	8		W0814	630	18		38-32-13	275-276
	8		W0814	630	18		38-32-16	277-299
	9		W0814	882	20		33-26-21	050-099
	9		W0814	863	22		33-26-11	150-199
	9	UNUSED						275-299
	10		W0814	576	20		33-24-11	ALL
	11	FM	W0814	011	16		38-13-11	050-099
	11		W0814	020	20		25-42-11	150-199
	11		W0814	011	16		38-13-11	275-299
	12		W0814	020	20		25-42-11	050-099, 275-299
	12	UNUSED						150-199
	13		W0814	824	22		33-25-11	050-099, 150-199
	13	UNUSED						275-299
	14		W0814	781	24		33-21-31	050-099
	14		W0814	825	22		33-25-11	150-199
	14	UNUSED						275-299
	15	UNUSED						050-099, 150-199
	15		W0814	175	20		33-26-21	275-299
	16		W0814	822	22		33-25-11	050-099
	16	UNUSED						150-199, 275-299
	17		W0814	855	22		33-25-11	050-099, 150-199
	17	UNUSED						275-299
	18		W0814	191	22		33-25-11	050-099
	18	UNUSED						150-199
	18		W0814	631	22		38-32-13	275-276

HOOKUP LIST

D280T132

91-21-51

Section D05100

Page 31

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05116P		AP1005/ /		PLUG-P25 (continued)				ALL
	18		W0814	631	22		38-32-16	277-299
	19	UNUSED						050-099
	19		W0814	022	20		33-21-35	150-199, 275-299
	20		W0814	199	22		33-25-11	050-099
	20	UNUSED						150-154, 156, 162-199
	20		W0814	822	22		33-25-11	155, 157
	21		W0814	880	20		33-26-21	050-099, 150-199
	22		W0814	899	20		33-26-21	050-099
	22		W0814	883	20		33-26-21	150-199
	23	UNUSED						050-099
	23		W0814	011	16		38-13-11	150-199
	24	UNUSED						050-099, 150-199
	25	DK	W0814	840	18		26-13-11	050-099, 162-199
	25		W0814	840	20		26-13-11	150-157
	26		W0814	841	20		26-13-11	050-099, 150-199
	27		W0814	836	20		26-13-11	050-099, 150-199
	28		W0814	883	20		33-26-21	050-099
	28		W0814	842	20		26-13-11	150-199
	29		W0814	884	20		33-26-21	050-099
	29		W0814	843	20		26-13-11	150-199
	30		W0814	837	20		26-13-11	050-099
	30		W0814	844	20		26-13-11	150-199
	31		W0814	838	20		26-13-11	050-099
	31		W0814	845	20		26-13-11	150-199
	32		W0814	839	20		26-13-11	050-099
	32		W0814	846	20		26-13-11	150-199
	33	UNUSED						050-099
	33		W0814	896	20		33-26-11	150-199
	34	UNUSED						050-099, 150-157
	34		W0814	781	24		33-21-31	162-199
	35	UNUSED						050-099, 150-199
	36	UNUSED						050-099, 150-199
	37	UNUSED						050-099, 150-199
	38	UNUSED						050-099, 150-199
	39	UNUSED						050-099, 150-199
	DED		W0814	022Z			33-21-35	155-156, 166
	DED		W0814	073Z			33-21-35	155-156, 166
D05117J		AF0119/ /		RCPT-				ALL
	1		W1711	001	22		31-41-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05100

Page 32

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05117J		AF0119/ /		RCPT- (continued)				ALL
	2		W1711	201R	24		31-41-12	ALL
	3		W1711	201B	24		31-41-12	ALL
	4		W1711	201Z			31-41-12	ALL
	5		W1711	301R	24		31-41-14	ALL
	6		W1711	301B	24		31-41-14	ALL
	7		W1711	301Y	24		31-41-14	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16		W1711	206R	24		SPARE	ALL
	17		W1711	206B	24		SPARE	ALL
	18	UNUSED						ALL
	19		W1711	029	24		SPARE	ALL
	20		W1711	030	24		SPARE	ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
D05117P		AF0119/ /		PLUG				ALL
	1		W0031	651	22		31-41-11	ALL
	2		W0031	501R	24		31-41-12	ALL
	3		W0031	501B	24		31-41-12	ALL
	4		W0031	501Z			31-41-12	ALL
	5		W0031	350R	24		31-41-14	ALL
	6		W0031	350B	24		31-41-14	ALL
	7		W0031	350Y	24		31-41-14	ALL
	8	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D05100

Page 33

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05117P		AF0119/ /		PLUG (continued)				ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
D05118J		AP1003/ /		RCPT-P25				050-099
D05118J		AP1003/ /		RCPT-				150-199, 275-299
	1	UNUSED						050-099
	1		W1108	059	20		33-21-34	150-199, 275-299
	2	UNUSED						050-099, 150-199
	2		W1108	649	20		33-21-12	275-299
	3		W1108	035	18		33-21-34	050-099
	3		W1108	035	16		33-21-34	150-199
	3	UNUSED						275-299
	4		W1108	011	20		33-21-12	ALL
	5	UNUSED						050-099
	5		W1108	033	20		33-21-12	150-199, 275-299
	6		W1108	012	20		33-21-12	050-099
	6		W1108	032	20		33-21-12	150-199, 275-299
	7	UNUSED						050-099, 275-299
	7		W1108	159	18		33-27-11	150-199

HOOKUP LIST

D280T132

91-21-51

Section D05100

Page 34

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05118J		AP1003/ /		RCPT-P25 (continued)				050-099
D05118J		AP1003/ /		RCPT- (continued)				150-199, 275-299
	8		W1108	063	22		33-27-11	ALL
	9		W1108	034	22		33-21-34	050-099
	9		W1108	034	20		33-21-34	150-199, 275-299
	10		W1108	659	20		33-21-31	050-099, 162-199
	10	UNUSED						150-157
	10		W1108	035	16		33-21-34	275-299
	11		W1108	064	20		33-27-11	ALL
	12		W1108	664	20		33-21-31	050-099, 162-199
	12	UNUSED						150-157, 275-299
	13	UNUSED						ALL
	14	UNUSED						ALL
	DED		W1108	034Z			33-21-34	155-156, 166
	DED		W1108	059Z			33-21-34	155-156, 166
D05118P		AP1003/ /		PLUG-P25				ALL
	1	UNUSED						050-099
	1		W0816	500	20		33-21-34	150-199, 275-299
	2	UNUSED						050-099, 150-199
	2		W0816	643	20		33-21-14	275-299
	3		W0816	109	18		33-21-34	050-099
	3		W0816	109	20		33-21-34	150-157
	3		W0816	109	16		33-21-34	162-199
	3	UNUSED						275-299
	4		W0816	599	20		33-21-14	ALL
	5	UNUSED						050-099
	5		W0816	035	20		33-21-14	150-199, 275-299
	6		W0816	654	20		33-21-14	050-099, 150-199
	6		W0816	628	20		33-21-14	275-299
	7	UNUSED						050-099, 275-299
	7		W0816	801	18		33-27-11	150-199
	8		W0816	003	22		33-27-11	ALL
	9		W0816	105	22		33-21-34	050-099
	9		W0816	105	20		33-21-34	150-199, 275-299
	10		W0816	106	22		33-21-34	050-099, 162-199
	10		W0816	106	20		33-21-34	150-157
	10		W0816	106	16		33-21-34	275-299
	11		W0816	016	20		33-27-11	ALL
	12		W0816	655	22		33-21-34	050-099, 150-199
	12	UNUSED						275-299

HOOKUP LIST

D280T132

91-21-51

Section D05100

Page 35

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05118P		AP1003/ /		PLUG-P25 (continued)				ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	DED		W0816	105Z			33-21-34	155-156, 166
	DED		W0816	106Z			33-21-34	155-156, 166
	DED		W0816	109Z			33-21-34	155-156, 166
	DED		W0816	500Z			33-21-34	155-156, 166
	DED		W0816	655Z			33-21-34	166
D05120J		AP1003/ /		RCPT-P25				050-099
D05120J		AP1003/ /		RCPT-				150-199, 275-299
	1	UNUSED						050-099
	1		W1108	091	20		33-21-35	150-199, 275-299
	2		W1108	037	22		33-21-35	050-099
	2		W1108	037	20		33-21-35	150-199, 275-299
	3	UNUSED						ALL
	4		W1108	052	22		33-22-42	050-099, 275-299
	4		W1108	052	20		33-22-42	150-199
	5	UNUSED						050-099, 150-199
	5		W1108	053	22		33-22-42	275-299
	6		W1108	056	22		33-22-42	050-099
	6		W1108	053	22		33-22-42	150-199
	6	UNUSED						275-299
	7		W1108	053	22		33-22-42	050-099
	7		W1108	646	22		33-22-42	150-199
	7		W1108	503	22		33-27-11	275-299
	8	UNUSED						050-099, 150-199
	8		W1108	054	22		33-22-42	275-299
	9		W1108	061	20		33-27-11	ALL
	10		W1108	062	22		33-27-11	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						150-199
	16	DK	W1108	647	18		33-27-11	150-199
	17	UNUSED						150-199
	18	UNUSED						150-199
	19	UNUSED						150-199
	20	UNUSED						150-199
	21	UNUSED						150-199

HOOKUP LIST

D280T132

91-21-51

Section D05100

Page 36

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05120J		AP1003/ /		RCPT-P25 (continued)				050-099
D05120J		AP1003/ /		RCPT- (continued)				150-199, 275-299
	22	UNUSED						150-199
	23	UNUSED						150-199
	24	UNUSED						150-199
	25	UNUSED						150-199
	26	UNUSED						150-199
	27	UNUSED						150-199
	28	UNUSED						150-199
	29	UNUSED						150-199
	30	UNUSED						150-199
	31	UNUSED						150-199
	DED		W1108	037Z			33-21-35	155-156, 166
	DED		W1108	091Z			33-21-35	155-156, 166
D05120P		AP1003/ /		PLUG-P25				050-099, 275-299
D05120P		1043/310/L 25		PLUG-P25				150-199
	1	UNUSED						050-099
	1		W0818	001	20		33-21-35	150-199, 275-299
	2		W0818	002	22		33-21-35	050-099
	2		W0818	002	20		33-21-35	150-199, 275-299
	3	UNUSED						ALL
	4		W0818	603	20		33-22-42	050-099, 150-199
	4		W0818	147	22		33-22-42	275-299
	5	UNUSED						050-099, 150-199
	5		W0818	156	22		33-22-42	275-299
	6		W0818	186	22		33-22-42	050-099
	6		W0818	601	20		33-22-42	150-199
	6	UNUSED						275-278
	6		W0818	609	18		33-22-42	280-299
	7		W0818	195	22		33-22-42	050-099
	7		W0818	186	20		33-22-42	150-199
	7		W0818	195	22		33-27-11	275-299
	8	UNUSED						050-099, 150-199
	8		W0818	165	22		33-22-42	275-299
	9		W0818	512	20		33-27-11	ALL
	10		W0818	521	22		33-27-11	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						050-099, 150-199, 275-278

HOOKUP LIST

D280T132

91-21-51

Section D05100

Page 37

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05120P		AP1003/ /		PLUG-P25 (continued)				050-099, 275-299
D05120P		1043/310/L 25		PLUG-P25 (continued)				150-199
	14		W0818	610	18		33-22-42	280-299
	15	UNUSED						150-199
	16	DK	W0818	801	18		33-27-11	150-199
	17	UNUSED						150-199
	18	UNUSED						150-199
	19	UNUSED						150-199
	20	UNUSED						150-199
	21	UNUSED						150-199
	22	UNUSED						150-199
	23	UNUSED						150-199
	24	UNUSED						150-199
	25	UNUSED						150-199
	26	UNUSED						150-199
	27	UNUSED						150-199
	28	UNUSED						150-199
	29	UNUSED						150-199
	30	UNUSED						150-199
	31	UNUSED						150-199
	DED		W0818	001Z			33-21-35	155-156, 166
	DED		W0818	002Z			33-21-35	155-156, 166
D05122J		AE0319/ /		RCPT-E1-2				ALL
	1	UNUSED						ALL
	2		W1724	002	24		32-61-14	ALL
	3	UNUSED						ALL
	4		W1724	004	24		SPARE	050-099
	4		W1724	004	24		32-71-11	150-199, 275-299
	5		W1724	005	24		32-61-14	ALL
	6		W1724	006	24		32-61-14	ALL
	7		W1724	007	24		32-61-14	ALL
	8		W1724	008	24		32-61-14	ALL
	9		W1724	009	24		32-61-14	ALL
	10		W1724	010	24		32-61-14	ALL
	11		W1724	011	24		32-61-14	ALL
	12		W1724	012	24		SPARE	050-099
	12		W1724	012	24		52-71-12	150-199, 275-299
	13		W1724	013	24		SPARE	050-099
	13		W1724	013	24		52-71-12	150-199, 275-299
	14		W1724	014	24		78-36-21	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05100

Page 38

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05122J		AE0319/ /		RCPT-E1-2 (continued)				ALL
	15		W1724	015	24		78-36-21	ALL
	16		W1724	016	24		32-61-14	ALL
	17		W1724	017	24		32-61-14	ALL
	18		W1724	018	24		32-61-14	ALL
	19		W1724	019	24		SPARE	ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22		W1724	022	24		52-71-11	ALL
	23		W1724	023	24		52-71-11	ALL
	24		W1724	024	24		52-71-13	ALL
	25		W1724	025	24		52-71-11	ALL
	26		W1724	026	24		52-71-11	ALL
	27		W1724	027	24		52-71-12	ALL
	28		W1724	028	24		52-71-12	ALL
	29		W1724	029	24		52-71-12	ALL
	30		W1724	030	24		52-71-12	ALL
	31		W1724	031	24		52-71-14	ALL
	32		W1724	032	24		52-71-14	ALL
	33		W1724	033	24		52-71-13	ALL
	34		W1724	034	24		52-71-13	ALL
	35		W1724	035	24		27-88-11	ALL
	36		W1724	036	24		27-88-11	ALL
	37		W1724	037	24		SPARE	ALL
	38		W1724	038	24		SPARE	ALL
	39		W1724	039	24		SPARE	ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
D05122P		AE0319/ /		PLUG-E1-2				ALL
	1	UNUSED						ALL
	2		W1092	559	24		32-61-14	ALL
	3	UNUSED						ALL
	4	UNUSED						050-099
	4		W1092	764	24		32-71-11	150-199, 275-299
	5		W1092	140	24		32-61-14	ALL
	6		W1092	139	24		32-61-14	ALL
	7		W1092	138	24		32-61-14	ALL
	8		W1092	021	24		32-61-14	ALL
	9		W1092	053	24		32-61-14	ALL
	10		W1092	126	24		32-61-14	ALL

HOOKUP LIST
D280T132

91-21-51
Section D05100
Page 39
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05122P		AE0319/ /		PLUG-E1-2 (continued)				ALL
	11		W1092	056	24		32-61-14	ALL
	12	UNUSED						050-099
	12		W1092	732	24		52-71-12	150-199, 275-299
	13	UNUSED						050-099
	13		W1092	733	24		52-71-12	150-199, 275-299
	14		W1092	178	24		78-36-21	ALL
	15		W1092	177	24		78-36-21	ALL
	16		W1092	723	24		32-61-14	ALL
	17		W1092	671	24		32-61-14	ALL
	18		W1092	672	24		32-61-14	ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22		W1092	197	24		52-71-11	ALL
	23		W1092	501	24		52-71-11	ALL
	24		W1092	520	24		52-71-13	ALL
	25		W1092	198	24		52-71-11	ALL
	26		W1092	199	24		52-71-11	ALL
	27		W1092	506	24		52-71-12	ALL
	28		W1092	528	24		52-71-12	ALL
	29		W1092	527	24		52-71-12	ALL
	30		W1092	529	24		52-71-12	ALL
	31		W1092	523	24		52-71-14	ALL
	32		W1092	524	24		52-71-14	ALL
	33		W1092	521	24		52-71-13	ALL
	34		W1092	522	24		52-71-13	ALL
	35		W1092	032	24		27-88-11	ALL
	36		W1092	036	24		27-88-11	ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
D05124J		AF0204/ /		RCPT-P61				ALL
	1		W0066	71B	20		33-21-11	050-099
	1	UNUSED						150-199, 275-299
	2		W0066	64V	20		33-21-21	ALL
	3		W0066	52W	22		21-61-31	ALL
	4		W0066	52R	22		21-61-21	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05100

Page 40

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05124J		AF0204/ /		RCPT-P61 (continued)				ALL
	5		W0066	203B	20		21-65-11	ALL
	6		W0066	203R	20		21-65-11	ALL
	7		W0066	208B	20		21-65-11	ALL
	8		W0066	208R	20		21-65-11	ALL
	9		W0066	204B	20		21-65-11	ALL
	10		W0066	204R	20		21-65-11	ALL
	11		W0066	03L	24		33-24-11	ALL
	12		W0066	75R	22		21-66-41	050-099, 162-199
	12	UNUSED						150-157, 275-299
	13		W0066	03G	24		33-24-11	ALL
	14	DK	W0066	58X	18		33-51-11	ALL
	15	DK	W0066	58Y	18		33-51-11	ALL
	16		W0066	59A	22		33-51-11	ALL
	17		W0066	173	22		30-46-11	ALL
	18		W0066	59C	22		33-51-11	ALL
	19	FM	W0066	59D	16		33-26-21	ALL
	20		W0066	59E	22		33-26-11	ALL
	21		W0066	75L	22		21-66-21	050-099, 162-199
	21	UNUSED						150-157, 275-299
	22		W0066	728	20		33-41-11	050-099
	22	DK	W0066	728	18		33-41-11	150-199, 275-299
	23		W0066	729	20		33-41-11	050-099
	23	DK	W0066	729	18		33-41-11	150-199, 275-299
	24		W0066	53L	22		24-51-51	ALL
	25		W0066	59J	20		33-26-11	050-099, 150-199
	25	UNUSED						275-299
	26		W0066	53N	22		24-51-51	ALL
	27		W0066	53M	22		24-51-51	ALL
	28		W0066	59F	20		33-26-11	ALL
	29		W0066	75H	22		21-66-21	050-099, 162-199
	29	UNUSED						150-157, 275-299
	30		W0066	64L	22		33-51-11	ALL
	31		W0066	04F	22		25-65-11	ALL
	32		W0066	04M	22		25-65-12	ALL
	33		W0066	04E	22		25-65-12	ALL
	34	UNUSED						ALL
	35		W0066	04G	22		25-65-12	ALL
	36		W0066	75N	22		21-66-21	050-099, 162-199
	36	UNUSED						150-157, 275-299
	37		W0066	75J	22		21-66-21	050-099, 162-199

HOOKUP LIST

D280T132

91-21-51

Section D05100

Page 41

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05124J		AF0204/ /		RCPT-P61 (continued)				ALL
	37	UNUSED						150-157, 275-299
	38		W0066	75M	22		21-66-21	050-099, 162-199
	38	UNUSED						150-157, 275-299
	39		W0066	75K	22		21-66-21	050-099, 162-199
	39	UNUSED						150-157, 275-299
	40	UNUSED						050-099, 275-299
	40		W0066	71G	20		33-21-11	150-199
	41		W0066	600	22		33-22-33	050-099, 162-199
	41	UNUSED						150-157, 275-299
	42		W0066	234Z			21-66-21	050-099, 162-199
	42	UNUSED						150-157, 275-299
	43		W0066	234R	22		21-66-21	050-099, 162-199
	43	UNUSED						150-157, 275-299
	44		W0066	234B	22		21-66-21	050-099, 162-199
	44	UNUSED						150-157, 275-299
	45		W0066	75T	22		21-66-41	050-099, 162-199
	45	UNUSED						150-157, 275-299
	46		W0066	546	22		21-61-41	ALL
	47		W0066	212B	20		21-65-11	ALL
	48		W0066	212R	20		21-65-11	ALL
	49		W0066	213B	20		21-65-11	ALL
	50		W0066	213R	20		21-65-11	ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
D05124P		AF0204/ /		PLUG-61				ALL
	1		W1222	051	20		33-21-11	050-099
	1	UNUSED						150-199, 275-299
	2		W1222	002	20		33-21-21	ALL
	3		W1222	003	22		21-61-31	ALL
	4		W1222	004	22		21-61-21	ALL
	5		W1222	201B	20		21-65-11	ALL
	6		W1222	201R	20		21-65-11	ALL
	7		W1222	202B	20		21-65-11	ALL
	8		W1222	202R	20		21-65-11	ALL
	9		W1222	203B	20		21-65-11	ALL
	10		W1222	203R	20		21-65-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05100

Page 42

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05124P		AF0204/ /		PLUG-61 (continued)				ALL
	11		W1222	005	24		33-24-11	ALL
	12		W1222	719	22		21-66-41	050-099, 162-199
	12		W1222	006	20		SPARE	150-157, 275-299
	13		W1222	008	24		33-24-11	ALL
	14	DL	W1222	009	18		33-51-11	ALL
	15	DL	W1222	010	18		33-51-11	ALL
	16		W1222	011	22		33-51-11	ALL
	17		W1222	173	22		30-46-11	ALL
	18		W1222	013	22		33-51-11	ALL
	19	FL	W1222	039	16		33-26-21	ALL
	20		W1222	041	22		33-26-11	ALL
	21		W1222	715	22		21-66-21	050-099, 162-199
	21	UNUSED						150-157, 275-299
	22		W1222	048	20		33-41-11	050-099
	22	DL	W1222	048	18		33-41-11	150-199, 275-299
	23		W1222	049	20		33-41-11	050-099
	23	DL	W1222	049	18		33-41-11	150-199, 275-299
	24		W1222	045	24		24-51-51	ALL
	25		W1222	814	20		33-26-11	050-099, 150-199
	25	UNUSED						275-299
	26		W1222	043	24		24-51-51	ALL
	27		W1222	042	24		24-51-51	ALL
	28		W1222	046	20		33-26-11	ALL
	29		W1222	713	22		21-66-21	050-099, 162-199
	29	UNUSED						150-157, 275-299
	30		W1222	081	22		33-51-11	ALL
	31		W1222	087	22		25-65-11	ALL
	32		W1222	088	22		25-65-12	ALL
	33		W1222	089	22		25-65-12	ALL
	34		W1222	090	22		SPARE	ALL
	35		W1222	091	22		25-65-12	ALL
	36		W1222	714	22		21-66-21	050-099, 162-199
	36		W1222	092	22		SPARE	150-157, 275-299
	37		W1222	712	22		21-66-21	050-099, 162-199
	37	UNUSED						150-157, 275-299
	38		W1222	717	22		21-66-21	050-099, 162-199
	38	UNUSED						150-157, 275-299
	39		W1222	718	22		21-66-21	050-099, 162-199
	39	UNUSED						150-157, 275-299
	40	UNUSED						050-099, 275-299

HOOKUP LIST

D280T132

91-21-51

Section D05100

Page 43

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05124P		AF0204/ /		PLUG-61 (continued)				ALL
	40		W1222	051	20		33-21-11	150-199
	41		W1222	676	22		33-22-33	050-099, 162-199
	41	UNUSED						150-157, 275-299
	42		W1222	218Z			21-66-21	050-099, 162-199
	42	UNUSED						150-157, 275-299
	43		W1222	218R	22		21-66-21	050-099, 162-199
	43	UNUSED						150-157, 275-299
	44		W1222	218B	22		21-66-21	050-099, 162-199
	44	UNUSED						150-157, 275-299
	45		W1222	720	22		21-66-41	050-099, 162-199
	45	UNUSED						150-157, 275-299
	46		W1222	096	22		21-61-41	ALL
	47		W1222	205B	20		21-65-11	ALL
	48		W1222	205R	20		21-65-11	ALL
	49		W1222	204B	20		21-65-11	ALL
	50		W1222	204R	20		21-65-11	ALL
	51	UNUSED						050-099, 150-199
	51		W1222	814	20		SPARE	275-299
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
D05126J		AE0223/ /		RCPT-				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W0180	135	24		31-31-26	ALL
	8		W0180	038	22		52-11-12	050-099, 150-199
	8		W0180	038	20		52-11-12	275-299
	9		W0180	058	24		23-31-13	ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D05126P		AE0223/ /		PLUG-P36				ALL
	1	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D05100
Page 44
Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05126P		AE0223/ /		PLUG-P36 (continued)				ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W1224	061	22		31-31-26	050-099
	7		W1224	061	24		31-31-26	150-199, 275-299
	8		W1224	062	22		52-11-12	050-099, 150-199
	8		W1224	062	20		52-11-12	275-299
	9		W1224	064	24		23-31-13	ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D05130J		AE0317/ /		RCPT-E1-2				ALL
	1		W1226	006	20		33-51-21	ALL
	2		W1226	007	20		33-51-21	ALL
	3		W1226	003	24		33-22-11	ALL
	4		W1226	004	24		33-22-11	ALL
	5		W1226	001	24		33-22-11	ALL
	6		W1226	002	24		33-22-11	ALL
	7		W1226	049	22		21-66-11	050-099, 162-199
	7	UNUSED						150-157, 275-299
	8		W1226	050	22		21-66-11	050-099, 162-199
	8	UNUSED						150-157, 275-299
	9		W1226	051	22		21-66-11	050-099, 162-199
	9	UNUSED						150-157, 275-299
	10		W1226	201R	24		52-11-13	ALL
	11		W1226	201B	24		52-11-13	ALL
	12		W1226	202R	24		52-11-13	ALL
	13		W1226	202B	24		52-11-13	ALL
	14		W1226	203R	24		52-11-13	ALL
	15		W1226	203B	24		52-11-13	ALL
	16		W1226	204R	24		52-11-13	ALL
	17		W1226	204B	24		52-11-13	ALL
	18		W1226	208R	24		52-71-11	ALL
	19		W1226	208B	24		52-71-11	ALL
	20		W1226	209R	24		52-71-11	ALL
	21		W1226	209B	24		52-71-11	ALL
	22		W1226	210R	24		52-71-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05100

Page 45

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05130J		AE0317/ /		RCPT-E1-2 (continued)				ALL
	23		W1226	210B	24		52-71-11	ALL
	24		W1226	211R	24		52-71-11	ALL
	25		W1226	211B	24		52-71-11	ALL
	26		W1226	212R	24		52-71-11	ALL
	27		W1226	212B	24		52-71-11	ALL
	28		W1226	213R	24		52-71-11	ALL
	29		W1226	213B	24		52-71-11	ALL
	30		W1226	214R	24		52-71-12	ALL
	31		W1226	214B	24		52-71-12	ALL
	32		W1226	215R	24		52-71-12	ALL
	33		W1226	215B	24		52-71-12	ALL
	34		W1226	216R	24		52-71-11	ALL
	35		W1226	216B	24		52-71-11	ALL
	36		W1226	217R	24		52-71-11	ALL
	37		W1226	217B	24		52-71-11	ALL
	38		W1226	218R	24		52-71-11	ALL
	39		W1226	218B	24		52-71-11	ALL
	40		W1226	008	22		52-11-12	ALL
	41		W1226	009	22		52-11-12	ALL
	42		W1226	010	22		52-11-12	ALL
	43		W1226	011	24		52-11-12	ALL
	44	UNUSED						050-099
	44		W1226	224R	24		52-71-12	150-199, 275-299
	45	UNUSED						050-099
	45		W1226	224B	24		52-71-12	150-199, 275-299
	46	UNUSED						050-099
	46		W1226	225R	24		52-71-12	150-199, 275-299
	47	UNUSED						050-099
	47		W1226	225B	24		52-71-12	150-199, 275-299
	48		W1226	048	22		21-66-11	050-099, 162-199
	48	UNUSED						150-157, 275-299
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D05100

Page 46

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05130P		AE0317/ /		PLUG-E1-2				ALL
	1		W1092	166	22		33-51-21	ALL
	2		W1092	165	22		33-51-21	ALL
	3		W1092	085	24		33-22-11	ALL
	4		W1092	086	24		33-22-11	ALL
	5		W1092	083	24		33-22-11	ALL
	6		W1092	084	24		33-22-11	ALL
	7		W1092	687	22		21-66-11	050-099, 162-199
	7	UNUSED						150-157, 275-299
	8		W1092	688	22		21-66-11	050-099, 162-199
	8	UNUSED						150-157, 275-299
	9		W1092	689	22		21-66-11	050-099, 162-199
	9	UNUSED						150-157, 275-299
	10		W1092	279R	24		52-11-13	ALL
	11		W1092	279B	24		52-11-13	ALL
	12		W1092	280R	24		52-11-13	ALL
	13		W1092	280B	24		52-11-13	ALL
	14		W1092	281R	24		52-11-13	ALL
	15		W1092	281B	24		52-11-13	ALL
	16		W1092	282R	24		52-11-13	ALL
	17		W1092	282B	24		52-11-13	ALL
	18		W1092	295R	24		52-71-11	ALL
	19		W1092	295B	24		52-71-11	ALL
	20		W1092	296R	24		52-71-11	ALL
	21		W1092	296B	24		52-71-11	ALL
	22		W1092	297R	24		52-71-11	ALL
	23		W1092	297B	24		52-71-11	ALL
	24		W1092	298R	24		52-71-11	ALL
	25		W1092	298B	24		52-71-11	ALL
	26		W1092	299R	24		52-71-11	ALL
	27		W1092	299B	24		52-71-11	ALL
	28		W1092	601R	24		52-71-11	ALL
	29		W1092	601B	24		52-71-11	ALL
	30		W1092	602R	24		52-71-12	ALL
	31		W1092	602B	24		52-71-12	ALL
	32		W1092	603R	24		52-71-12	ALL
	33		W1092	603B	24		52-71-12	ALL
	34		W1092	616R	24		52-71-11	ALL
	35		W1092	616B	24		52-71-11	ALL
	36		W1092	617R	24		52-71-11	ALL
	37		W1092	617B	24		52-71-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05100

Page 47

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05130P		AE0317/ /		PLUG-E1-2 (continued)				ALL
	38		W1092	618R	24		52-71-11	ALL
	39		W1092	618B	24		52-71-11	ALL
	40		W1092	185	22		52-11-12	ALL
	41		W1092	186	22		52-11-12	ALL
	42		W1092	187	22		52-11-12	ALL
	43		W1092	188	24		52-11-12	ALL
	44	UNUSED						050-099
	44		W1092	632R	24		52-71-12	150-199, 275-299
	45	UNUSED						050-099
	45		W1092	632B	24		52-71-12	150-199, 275-299
	46	UNUSED						050-099
	46		W1092	633R	24		52-71-12	150-199, 275-299
	47	UNUSED						050-099
	47		W1092	633B	24		52-71-12	150-199, 275-299
	48		W1092	686	22		21-66-11	050-099, 162-199
	48	UNUSED						150-157, 275-299
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
	DED		W1092	165Z			33-51-21	ALL
	DED		W1092	166Z			33-51-21	ALL
D05131J		AE0303/ /		RCPT-E1-1				ALL
	1		W0101	213R	22		27-61-15	ALL
	2		W0101	213B	22		27-61-15	ALL
	3		W0101	307R	22		27-61-15	ALL
	4		W0101	306B	22		27-61-15	ALL
	5		W0101	307Y	22		27-61-15	ALL
	6		W0101	306R	22		27-61-15	ALL
	7		W0101	306Y	22		27-61-15	ALL
	8		W0101	212R	22		27-61-15	ALL
	9		W0101	212B	22		27-61-15	ALL
	10		W0101	167	22		27-41-11	ALL
	11		W0101	168	22		27-41-11	ALL
	12		W0101	166	22		27-41-11	ALL
	13		W0101	153	22		27-41-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05100

Page 48

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05131J		AE0303/ /		RCPT-E1-1 (continued)				ALL
	14		W0101	154	22		27-41-11	ALL
	15		W0101	307B	22		27-61-15	ALL
	16		W0101	601Y	22		27-41-11	ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	DED		W0101	166Z			27-41-11	ALL
D05131P		AE0303/ /		PLUG-E1-1				ALL
	1		W1281	204R	22		27-61-15	ALL
	2		W1281	204B	22		27-61-15	ALL
	3		W1281	302R	22		27-61-15	ALL
	4		W1281	301B	22		27-61-15	ALL
	5		W1281	302Y	22		27-61-15	ALL
	6		W1281	301R	22		27-61-15	ALL
	7		W1281	301Y	22		27-61-15	ALL
	8		W1281	202R	22		27-61-15	ALL
	9		W1281	202B	22		27-61-15	ALL
	10		W1281	003	20		27-41-11	ALL
	11		W1281	004	20		27-41-11	ALL
	12		W1281	005	20		27-41-11	ALL
	13		W1281	012Y	22		27-41-11	ALL
	14		W1281	013Y	22		27-41-11	ALL
	15		W1281	302B	22		27-61-15	ALL
	16		W1281	014Y	22		27-41-11	ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D05100
Page 49
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05133J		AE0303/ /		RCPT-E1-1				ALL
	1		W0111	206R	22		27-61-14	ALL
	2		W0111	206B	22		27-61-14	ALL
	3		W0111	305R	22		27-61-14	ALL
	4		W0111	304B	22		27-61-14	ALL
	5		W0111	305Y	22		27-61-14	ALL
	6		W0111	304R	22		27-61-14	ALL
	7		W0111	304Y	22		27-61-14	ALL
	8		W0111	205R	22		27-61-14	ALL
	9		W0111	205B	22		27-61-14	ALL
	10		W0111	158	22		27-41-11	ALL
	11		W0111	156	22		27-41-11	ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15		W0111	305B	22		27-61-14	ALL
D05133P		AE0303/ /		PLUG-E1-1				ALL
	1		W1283	204R	22		27-61-14	ALL
	2		W1283	204B	22		27-61-14	ALL
	3		W1283	302R	22		27-61-14	ALL
	4		W1283	301B	22		27-61-14	ALL
	5		W1283	302Y	22		27-61-14	ALL
	6		W1283	301R	22		27-61-14	ALL
	7		W1283	301Y	22		27-61-14	ALL
	8		W1283	202R	22		27-61-14	ALL
	9		W1283	202B	22		27-61-14	ALL
	10		W1283	003	20		27-41-11	ALL
	11		W1283	004	20		27-41-11	ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15		W1283	302B	22		27-61-14	ALL
D05134J		AP0401/ /		RCPT-P19				050-099
D05134J		AP0401/ /		RCPT-				150-199, 275-299
	1		W1104	051	16		33-21-11	ALL
	2	FL	W1104	053	16		33-21-12	050-099, 162-199
	2		W1104	053	16		33-21-12	150-157, 275-299
	3	FL	W1104	054	16		33-21-12	050-099, 162-199

HOOKUP LIST

D280T132

91-21-51

Section D05100

Page 50

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05134J		AP0401 / /		RCPT-P19 (continued)				050-099
D05134J		AP0401 / /		RCPT- (continued)				150-199, 275-299
	3		W1104	054	16		33-21-12	150-157, 275-299
	4	UNUSED						ALL
	5		W1104	193	22		33-51-11	ALL
	6		W1104	138	20		33-27-11	ALL
	7	FL	W1104	055	18		33-21-31	050-099
	7		W1104	055	16		33-21-31	150-157, 275-299
	7	UNUSED						162-199
	8	DL	W1104	056	18		33-21-31	050-099
	8		W1104	056	16		33-21-31	150-157, 275-299
	8	UNUSED						162-199
	9		W1104	139	20		33-27-11	ALL
	10		W1104	117	22		33-22-11	050-099
	10		W1104	117	20		33-22-11	150-199, 275-299
	11	FL	W1104	116	16		38-13-11	050-099
	11		W1104	116	16		38-13-11	150-157
	11	UNUSED						162-199
	11		W1104	501	16		38-13-11	275-299
	12		W1104	020	20		27-61-18	ALL
	13		W1104	023	20		27-61-18	ALL
	14		W1104	119	20		33-44-11	ALL
	15		W1104	145	22		33-22-41	ALL
	16	FL	W1104	118	16		38-13-11	050-099
	16		W1104	118	16		38-13-11	150-157
	16	UNUSED						162-199, 275-299
	17		W1104	107	22		33-51-21	ALL
	18		W1104	108	22		33-51-21	ALL
	19		W1104	600	22		33-21-21	ALL
	20	UNUSED						050-099, 162-199
	21	UNUSED						050-099, 162-199
	22	UNUSED						050-099, 162-199
	23	UNUSED						050-099, 162-199
	24	UNUSED						050-099, 162-199
	25	UNUSED						050-099, 162-199
	26	UNUSED						050-099, 162-199
	27	UNUSED						050-099, 162-199
	28	UNUSED						050-099, 162-199
	29	UNUSED						050-099
	29		W1104	055	16		33-21-31	162-199
	30	UNUSED						050-099

HOOKUP LIST

D280T132

91-21-51

Section D05100

Page 51

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05134J		AP0401 / /		RCPT-P19 (continued)				050-099
D05134J		AP0401 / /		RCPT- (continued)				150-199, 275-299
	30		W1104	056	16		33-21-31	162-199
	31	UNUSED						050-099
	31		W1104	116	16		38-13-11	162-199
	32		W1104	783	20		33-27-11	050-099, 162-199
	33		W1104	785	20		33-27-11	050-099, 162-199
	34	UNUSED						050-099
	34		W1104	118	16		38-13-11	162-199
	35	UNUSED						050-099, 162-199
	36	UNUSED						050-099, 162-199
	37	UNUSED						050-099, 162-199
	38	UNUSED						050-099, 162-199
	39	UNUSED						050-099, 162-199
	40	UNUSED						050-099, 162-199
	41	UNUSED						050-099, 162-199
	42	UNUSED						050-099, 162-199
	43	UNUSED						050-099, 162-199
	DED		W1104	117Z			33-22-11	155-156, 166
	DED		W1104	138Z			33-27-11	155-156, 166
	DED		W1104	139Z			33-27-11	155-156, 166
D05134P		AP0401 / /		PLUG-P19				ALL
	1		W1228	027	16		33-21-11	ALL
	2	FM	W1228	028	16		33-21-12	050-099
	2		W1228	111	16		33-21-12	150-157, 275-299
	2	FM	W1228	111	16		33-21-12	162-199
	3	FM	W1228	029	16		33-21-12	050-099
	3		W1228	112	16		33-21-12	150-157, 275-299
	3	FM	W1228	112	16		33-21-12	162-199
	4	UNUSED						ALL
	5		W1228	006	22		33-51-11	ALL
	6		W1228	119	20		33-27-11	050-099, 150-199
	6		W1228	090	20		33-27-11	275-299
	7	DK	W1228	023	18		33-21-31	050-099
	7		W1228	023	16		33-21-31	150-157, 275-299
	7	UNUSED						162-199
	8	DK	W1228	024	18		33-21-31	050-099
	8		W1228	024	16		33-21-31	150-157, 275-299
	8	UNUSED						162-199
	9		W1228	120	20		33-27-11	050-099, 150-199

HOOKUP LIST

D280T132

91-21-51

Section D05100

Page 52

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05134P		AP0401 / /		PLUG-P19 (continued)				ALL
	9		W1228	098	20		33-27-11	275-299
	10		W1228	042	22		33-22-11	050-099
	10		W1228	042	20		33-22-11	150-199, 275-299
	11	FM	W1228	001	16		38-13-11	050-099
	11		W1228	001	16		38-13-11	150-157, 275-299
	11	UNUSED						162-199
	12		W1228	007	20		27-61-18	ALL
	13		W1228	008	20		27-61-18	ALL
	14		W1228	084	20		33-44-11	ALL
	15		W1228	052	22		33-22-41	ALL
	16	FM	W1228	067	16		38-13-11	050-099
	16		W1228	800	16		38-13-11	150-157
	16	UNUSED						162-199, 275-299
	17		W1228	107	22		33-51-21	ALL
	18		W1228	108	22		33-51-21	ALL
	19		W1228	009	22		33-21-21	ALL
	20	UNUSED						050-099, 162-199
	21	UNUSED						050-099, 162-199
	22	UNUSED						050-099, 162-199
	23	UNUSED						050-099, 162-199
	24	UNUSED						050-099, 162-199
	25	UNUSED						050-099, 162-199
	26	UNUSED						050-099, 162-199
	27	UNUSED						050-099, 162-199
	28	UNUSED						050-099, 162-199
	29	UNUSED						050-099
	29		W1228	023	16		33-21-31	162-199
	30	UNUSED						050-099
	30		W1228	024	16		33-21-31	162-199
	31	UNUSED						050-099
	31		W1228	001	16		38-13-11	162-199
	32		W1228	106	18		33-27-11	050-099
	32		W1228	525	22		33-27-11	162-199
	33		W1228	122	18		33-27-11	050-099
	33		W1228	535	22		33-27-11	162-199
	34	UNUSED						050-099
	34		W1228	800	16		38-13-11	162-199
	35	UNUSED						050-099, 162-199
	36	UNUSED						050-099, 162-199
	37	UNUSED						050-099, 162-199

HOOKUP LIST

D280T132

91-21-51

Section D05100

Page 53

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05134P		AP0401/ /		PLUG-P19 (continued)				ALL
	38	UNUSED						050-099, 162-199
	39	UNUSED						050-099, 162-199
	40	UNUSED						050-099, 162-199
	41	UNUSED						050-099, 162-199
	42	UNUSED						050-099, 162-199
	43	UNUSED						050-099, 162-199
	DED		W1228	042Z			33-22-11	155-156, 166
	DED		W1228	119Z			33-27-11	155-156, 166
	DED		W1228	120Z			33-27-11	155-156, 166
D05135J		AE0303/ /		RCPT-E1-1				ALL
	1		W0121	209R	22		27-61-16	ALL
	2		W0121	209B	22		27-61-16	ALL
	3		W0121	308R	22		27-61-16	ALL
	4		W0121	307B	22		27-61-16	ALL
	5		W0121	308Y	22		27-61-16	ALL
	6		W0121	307R	22		27-61-16	ALL
	7		W0121	307Y	22		27-61-16	ALL
	8		W0121	208R	22		27-61-16	ALL
	9		W0121	208B	22		27-61-16	ALL
	10		W0121	308B	22		27-61-16	ALL
	11		W0121	163	22		27-41-31	050-099, 155-199, 275-299
	12	UNUSED						150-154
	DED	UNUSED	W0121	163Z			27-41-31	050-099, 155-199, 275-299
D05135P		AE0303/ /		PLUG-E1-1				ALL
	1		W1285	204R	22		27-61-16	ALL
	2		W1285	204B	22		27-61-16	ALL
	3		W1285	302R	22		27-61-16	ALL
	4		W1285	301B	22		27-61-16	ALL
	5		W1285	302Y	22		27-61-16	ALL
	6		W1285	301R	22		27-61-16	ALL
	7		W1285	301Y	22		27-61-16	ALL
	8		W1285	202R	22		27-61-16	ALL
	9		W1285	202B	22		27-61-16	ALL
	10		W1285	302B	22		27-61-16	ALL
	11		W1285	003	22		27-41-31	050-099, 155-199, 275-299
	11	UNUSED						150-154
	12	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D05100

Page 54

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05135P		AE0303/ /		PLUG-E1-1 (continued)				ALL
	DED		W1285	003Z			27-41-31	050-099, 155-199, 275-299
D05136J		AC0702/ /		RCPT-				ALL
	1		W0738	227B	22		21-52-31	ALL
	2		W0738	214B	24		21-52-41	ALL
	3		W0738	214R	24		21-52-41	ALL
	4		W0738	304B	24		21-52-21	ALL
	5		W0738	304R	24		21-52-21	ALL
	6		W0738	304Y	24		21-52-21	ALL
	7	UNUSED						ALL
	8		W0738	212R	24		36-21-11	ALL
	9		W0738	212B	24		36-21-11	ALL
	10		W0738	213R	24		21-52-41	ALL
	11		W0738	101	24		36-21-11	ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14		W0738	227R	22		21-52-31	ALL
	15		W0738	015	24		21-51-21	ALL
	16		W0738	308B	22		21-51-22	ALL
	17		W0738	308R	22		21-51-22	ALL
	18		W0738	308Y	22		21-51-22	ALL
	19		W0738	206B	22		21-51-22	ALL
	20		W0738	206R	22		21-51-22	ALL
	21		W0738	207B	22		21-51-22	ALL
	22		W0738	207R	22		21-51-22	ALL
	23		W0738	213B	24		21-52-41	ALL
	24		W0738	401B	24		21-52-41	ALL
	25		W0738	401G	24		21-52-41	ALL
	26		W0738	401R	24		21-52-41	ALL
	27		W0738	401Y	24		21-52-41	ALL
	28		W0738	218R	22		21-52-31	ALL
	29		W0738	218B	22		21-52-31	ALL
	30		W0738	219B	22		21-52-31	ALL
	31		W0738	219R	22		21-52-31	ALL
	32		W0738	086	24		21-51-21	ALL
	33		W0738	222B	22		21-51-22	ALL
	34		W0738	222R	22		21-51-22	ALL
	35		W0738	224B	22		21-52-31	ALL
	36		W0738	224R	22		21-52-31	ALL
	37		W0738	220B	22		21-52-31	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05100

Page 55

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05136J		AC0702/ /		RCPT- (continued)				ALL
	38		W0738	220R	22		21-52-31	ALL
	39		W0738	221B	22		21-52-31	ALL
	40		W0738	221R	22		21-52-31	ALL
	41	UNUSED						ALL
D05136P		AC0702/ /		PLUG-				ALL
	1		W0952	207B	20		21-52-31	ALL
	2		W0952	202B	20		21-52-41	ALL
	3		W0952	202R	20		21-52-41	ALL
	4		W0952	301B	20		21-52-21	ALL
	5		W0952	301R	20		21-52-21	ALL
	6		W0952	301Y	20		21-52-21	ALL
	7	UNUSED						ALL
	8		W0952	205R	20		36-21-11	ALL
	9		W0952	205B	20		36-21-11	ALL
	10		W0952	206R	20		21-52-41	ALL
	11		W0952	033	20		36-21-11	ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14		W0952	207R	20		21-52-31	ALL
	15		W0952	010	20		21-51-21	ALL
	16		W0952	302B	20		21-51-22	ALL
	17		W0952	302R	20		21-51-22	ALL
	18		W0952	302Y	20		21-51-22	ALL
	19		W0952	203B	20		21-51-22	ALL
	20		W0952	203R	20		21-51-22	ALL
	21		W0952	204B	20		21-51-22	ALL
	22		W0952	204R	20		21-51-22	ALL
	23		W0952	206B	20		21-52-41	ALL
	24		W0952	401B	20		21-52-41	ALL
	25		W0952	401G	20		21-52-41	ALL
	26		W0952	401R	20		21-52-41	ALL
	27		W0952	401Y	20		21-52-41	ALL
	28		W0952	201R	20		21-52-31	ALL
	29		W0952	201B	20		21-52-31	ALL
	30		W0952	209B	20		21-52-31	ALL
	31		W0952	209R	20		21-52-31	ALL
	32		W0952	026	20		21-51-21	ALL
	33		W0952	210B	20		21-51-22	ALL
	34		W0952	210R	20		21-51-22	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05100

Page 56

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05136P		AC0702/ /		PLUG- (continued)				ALL
	35		W0952	211B	20		21-52-31	ALL
	36		W0952	211R	20		21-52-31	ALL
	37		W0952	208B	20		21-52-31	ALL
	38		W0952	208R	20		21-52-31	ALL
	39		W0952	212B	20		21-52-31	ALL
	40		W0952	212R	20		21-52-31	ALL
	41	UNUSED						ALL
D05137J		AE0308/ /		RCPT-E2-1				ALL
	1		W0131	217R	22		27-61-17	ALL
	2		W0131	217B	22		27-61-17	ALL
	3		W0131	308R	22		27-61-17	ALL
	4		W0131	307B	22		27-61-17	ALL
	5		W0131	308Y	22		27-61-17	ALL
	6		W0131	307R	22		27-61-17	ALL
	7		W0131	307Y	22		27-61-17	ALL
	8		W0131	216R	22		27-61-17	ALL
	9		W0131	216B	22		27-61-17	ALL
	10		W0131	308B	22		27-61-17	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D05137P		AE0308/ /		PLUG-E2-1				ALL
	1		W1291	204R	22		27-61-17	ALL
	2		W1291	204B	22		27-61-17	ALL
	3		W1291	302R	22		27-61-17	ALL
	4		W1291	301B	22		27-61-17	ALL
	5		W1291	302Y	22		27-61-17	ALL
	6		W1291	301R	22		27-61-17	ALL
	7		W1291	301Y	22		27-61-17	ALL
	8		W1291	202R	22		27-61-17	ALL
	9		W1291	202B	22		27-61-17	ALL
	10		W1291	302B	22		27-61-17	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D05138J		AP0403/ /		RCPT-				ALL
	1		W1060	581	20		33-26-21	ALL
	2		W1060	014	22		33-21-21	ALL
	3		W1060	026	22		33-21-21	050-099, 150-199

HOOKUP LIST
D280T132

91-21-51
Section D05100
Page 57
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05138J		AP0403/ /		RCPT- (continued)				ALL
	3		W1060	701	22		33-21-21	275-299
	4		W1060	760	24		33-21-31	050-099, 150-199
	4		W1060	018	22		33-21-21	275-299
	5	UNUSED						050-099, 150-199
	5		W1060	019	22		33-21-21	275-299
	6		W1060	245R	22		23-31-14	050-099, 150-199
	6		W1060	212R	22		23-31-14	275-299
	7		W1060	245B	22		23-31-14	050-099, 150-199
	7		W1060	212B	22		23-31-14	275-299
	8		W1060	750	24		33-21-31	050-099, 162-199
	8		W1060	750	20		33-21-31	150-157
	8		W1060	030	24		33-21-31	275-299
	9		W1060	027	22		21-61-21	ALL
	10		W1060	203B	20		21-65-11	ALL
	11		W1060	203R	20		21-65-11	ALL
	12		W1060	204B	20		21-65-11	ALL
	13		W1060	204R	20		21-65-11	ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16		W1060	057	22		21-61-41	ALL
	17		W1060	230R	24		21-61-41	ALL
	18		W1060	230B	24		21-61-41	ALL
	19		W1060	231R	24		21-61-41	ALL
	20		W1060	231B	24		21-61-41	ALL
	21		W1060	234B	20		21-65-11	ALL
	22		W1060	234R	20		21-65-11	ALL
	23		W1060	233B	20		21-65-11	ALL
	24		W1060	233R	20		21-65-11	ALL
D05138P		AP0403/ /		PLUG-P19				ALL
	1	FL	W1234	001	16		33-26-21	050-099
	1		W1234	001	20		33-26-21	150-199, 275-299
	2		W1234	101	22		33-21-21	050-099, 150-199
	2		W1234	009	22		33-21-21	275-299
	3		W1234	009	22		33-21-21	050-099
	3		W1234	036	22		33-21-21	150-199, 275-299
	4		W1234	806	24		33-21-31	050-099, 150-199
	4		W1234	004	20		33-21-21	275-299
	5	UNUSED						050-099, 150-199
	5		W1234	005	22		33-21-21	275-299

HOOKUP LIST

D280T132

91-21-51

Section D05100

Page 58

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05138P		AP0403/ /		PLUG-P19 (continued)				ALL
	6		W1234	201R	22		23-31-14	ALL
	7		W1234	201B	22		23-31-14	ALL
	8		W1234	020	24		33-21-31	ALL
	9		W1234	021	22		21-61-21	ALL
	10		W1234	202B	20		21-65-11	ALL
	11		W1234	202R	20		21-65-11	ALL
	12		W1234	203B	20		21-65-11	ALL
	13		W1234	203R	20		21-65-11	ALL
	14		W1234	814	20		SPARE	ALL
	15	UNUSED						ALL
	16		W1234	027	22		21-61-41	ALL
	17		W1234	204R	24		21-61-41	ALL
	18		W1234	204B	24		21-61-41	ALL
	19		W1234	205R	24		21-61-41	ALL
	20		W1234	205B	24		21-61-41	ALL
	21		W1234	207B	20		21-65-11	ALL
	22		W1234	207R	20		21-65-11	ALL
	23		W1234	206B	20		21-65-11	ALL
	24		W1234	206R	20		21-65-11	ALL
D05139J		AE0308/ /		RCPT-E2-1				ALL
	1		W0141	211R	22		27-61-13	ALL
	2		W0141	211B	22		27-61-13	ALL
	3		W0141	303R	22		27-61-13	ALL
	4		W0141	301B	22		27-61-13	ALL
	5		W0141	303Y	22		27-61-13	ALL
	6		W0141	301R	22		27-61-13	ALL
	7		W0141	301Y	22		27-61-13	ALL
	8		W0141	210R	22		27-61-13	ALL
	9		W0141	210B	22		27-61-13	ALL
	10		W0141	603Y	22		27-41-21	ALL
	11	UNUSED						ALL
	12		W0141	303B	22		27-61-13	ALL
	13		W0141	101	22		27-41-21	ALL
	14		W0141	102	22		27-41-21	ALL
	15	UNUSED						ALL
	DED		W0141	101Z			27-41-21	ALL
	DED		W0141	102Z			27-41-21	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05100

Page 59

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05139P		AE0308/ /		PLUG-E2-1				ALL
	1		W1293	204R	22		27-61-13	ALL
	2		W1293	204B	22		27-61-13	ALL
	3		W1293	302R	22		27-61-13	ALL
	4		W1293	301B	22		27-61-13	ALL
	5		W1293	302Y	22		27-61-13	ALL
	6		W1293	301R	22		27-61-13	ALL
	7		W1293	301Y	22		27-61-13	ALL
	8		W1293	202R	22		27-61-13	ALL
	9		W1293	202B	22		27-61-13	ALL
	10		W1293	003Y	22		27-41-21	ALL
	11	UNUSED						ALL
	12		W1293	302B	22		27-61-13	ALL
	13		W1293	006Y	22		27-41-21	ALL
	14		W1293	007Y	22		27-41-21	ALL
	15	UNUSED						ALL
D05140J		347/130/L 48		RCPT-E1-2				ALL
	1	UNUSED						ALL
	2		W1728	002	24		32-61-14	ALL
	3		W1728	003	24		SPARE	ALL
	4		W1728	004	24		SPARE	ALL
	5		W1728	005	24		32-61-14	ALL
	6		W1728	006	24		32-61-14	ALL
	7		W1728	007	24		32-61-14	ALL
	8		W1728	008	24		32-61-14	ALL
	9		W1728	009	24		32-61-14	ALL
	10		W1728	010	24		32-61-14	ALL
	11		W1728	011	24		32-61-14	ALL
	12		W1728	012	24		32-61-14	ALL
	13		W1728	013	24		SPARE	ALL
	14		W1728	014	24		SPARE	ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17		W1728	202Z			77-12-12	ALL
	18		W1728	202B	24		77-12-12	ALL
	19		W1728	202R	24		77-12-12	ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D05100

Page 60

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05140J		347/130/L 48		RCPT-E1-2 (continued)				ALL
	24	UNUSED						ALL
D05140P		AE0319/ /		PLUG-E1-2				ALL
	1	UNUSED						ALL
	2		W1100	119	24		32-61-14	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W1100	114	24		32-61-14	ALL
	6		W1100	116	24		32-61-14	ALL
	7		W1100	117	24		32-61-14	ALL
	8		W1100	112	24		32-61-14	ALL
	9		W1100	115	24		32-61-14	ALL
	10		W1100	113	24		32-61-14	ALL
	11		W1100	118	24		32-61-14	ALL
	12		W1100	120	24		32-61-14	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17		W1100	231Z			77-12-12	ALL
	18		W1100	231B	24		77-12-12	ALL
	19		W1100	231R	24		77-12-12	ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D05141J		AE0308/ /		RCPT-E2-1				ALL
	1		W0151	211R	22		27-61-18	ALL
	2		W0151	211B	22		27-61-18	ALL
	3		W0151	308R	22		27-61-18	ALL
	4		W0151	307B	22		27-61-18	ALL
	5		W0151	308Y	22		27-61-18	ALL
	6		W0151	307R	22		27-61-18	ALL
	7		W0151	307Y	22		27-61-18	ALL
	8		W0151	210R	22		27-61-18	ALL
	9		W0151	210B	22		27-61-18	ALL
	10		W0151	308B	22		27-61-18	ALL
	11	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D05100

Page 61

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05141J		AE0308/ /		RCPT-E2-1 (continued)				ALL
	12	UNUSED						ALL
D05141P		AE0308/ /		PLUG-E2-1				ALL
	1		W1295	204R	22		27-61-18	ALL
	2		W1295	204B	22		27-61-18	ALL
	3		W1295	302R	22		27-61-18	ALL
	4		W1295	301B	22		27-61-18	ALL
	5		W1295	302Y	22		27-61-18	ALL
	6		W1295	301R	22		27-61-18	ALL
	7		W1295	301Y	22		27-61-18	ALL
	8		W1295	202R	22		27-61-18	ALL
	9		W1295	202B	22		27-61-18	ALL
	10		W1295	302B	22		27-61-18	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D05144J		AP1005/ /		RCPT-P25				050-099
D05144J		AP1005/ /		RCPT-				150-199, 275-299
	1		W1064	033	20		33-26-21	ALL
	2	UNUSED						050-099
	2		W1064	012	22		33-21-21	150-199, 275-299
	3		W1064	211R	22		23-31-14	ALL
	4		W1064	211B	22		23-31-14	ALL
	5		W1064	014	24		33-21-31	ALL
	6		W1064	203B	20		21-65-11	ALL
	7		W1064	203R	20		21-65-11	ALL
	8	UNUSED						ALL
	9		W1064	606	22		33-21-21	050-099, 150-199
	9	UNUSED						275-299
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13		W1064	627	24		33-21-31	050-099, 150-199
	14	UNUSED						050-099, 150-199
	15	UNUSED						050-099, 150-199
	16	UNUSED						050-099, 150-199
	17	UNUSED						050-099, 150-199
	18	UNUSED						050-099, 150-199
	19	UNUSED						050-099, 150-199
	20	UNUSED						050-099, 150-199

HOOKUP LIST

D280T132

91-21-51

Section D05100

Page 62

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05144J		AP1005/ /		RCPT-P25 (continued)				050-099
D05144J		AP1005/ /		RCPT- (continued)				150-199, 275-299
	21	UNUSED						050-099, 150-199
	22	UNUSED						050-099, 150-199
	23	UNUSED						050-099, 150-199
	24	UNUSED						050-099, 150-199
D05144P		AP1005/ /		PLUG-P25				ALL
	1	FM	W1234	001	16		33-26-21	050-099
	1		W1234	001	20		33-26-21	150-199, 275-299
	2	UNUSED						050-099
	2		W1234	019	22		33-21-21	150-199
	2		W1234	019	20		33-21-21	275-299
	3		W1234	201R	22		23-31-14	ALL
	4		W1234	201B	22		23-31-14	ALL
	5		W1234	020	24		33-21-31	ALL
	6		W1234	203B	20		21-65-11	ALL
	7		W1234	203R	20		21-65-11	ALL
	8	UNUSED						ALL
	9		W1234	101	22		33-21-21	050-099, 150-199
	9	UNUSED						275-299
	10	UNUSED						ALL
	11	UNUSED						ALL
	12		W1234	814	20		SPARE	ALL
	13		W1234	806	24		33-21-31	050-099, 150-199
	14	UNUSED						050-099, 150-199
	15	UNUSED						050-099, 150-199
	16	UNUSED						050-099, 150-199
	17	UNUSED						050-099, 150-199
	18	UNUSED						050-099, 150-199
	19	UNUSED						050-099, 150-199
	20	UNUSED						050-099, 150-199
	21	UNUSED						050-099, 150-199
	22	UNUSED						050-099, 150-199
	23	UNUSED						050-099, 150-199
	24	UNUSED						050-099, 150-199
D05148J		AP0403/ /		RCPT-				ALL
	1	UNUSED						050-099, 150-199
	1		W1060	008	22		33-21-21	275-299
	2		W1060	009	22		33-21-21	ALL

HOOKUP LIST
D280T132

91-21-51
Section D05100
Page 63
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05148J		AP0403/ /		RCPT- (continued)				ALL
	3		W1060	012	22		33-21-21	050-099, 150-199
	3		W1060	199	22		33-21-21	275-299
	4		W1060	097	22		21-61-31	ALL
	5		W1060	018	22		33-21-21	050-099, 150-199
	5		W1060	012	22		33-21-21	275-299
	6		W1060	828	20		26-13-12	050-099
	6	UNUSED						150-157, 275-299
	6		W1060	845	20		26-13-12	162-199
	7		W1060	205B	20		21-65-11	ALL
	8		W1060	032	20		33-22-11	ALL
	9		W1060	035	24		33-22-11	ALL
	10		W1060	570	22		33-51-11	ALL
	11		W1060	041	24		33-22-11	ALL
	12		W1060	042	24		33-22-11	ALL
	13		W1060	205R	20		21-65-11	ALL
	14		W1060	503	20		33-22-42	050-099, 150-199
	14		W1060	01A	20		33-22-42	275-299
	15		W1060	829	20		26-13-12	050-099
	15	UNUSED						150-157, 275-299
	15		W1060	846	20		26-13-12	162-199
	16		W1060	863	22		21-66-31	050-099, 150, 152-199
	16	UNUSED						151, 275-299
	17		W1060	830	20		26-13-12	050-099
	17	UNUSED						150-157, 275-299
	17		W1060	847	20		26-13-12	162-199
	18		W1060	249B	20		21-65-11	ALL
	19		W1060	101	22		33-27-11	ALL
	20	UNUSED						ALL
	21		W1060	232B	24		21-61-31	ALL
	22		W1060	821	22		33-21-21	050-099, 162-199
	22	UNUSED						150-157, 275-278
	22	DK	W1060	01V	18		33-22-31	280-299
	23		W1060	232R	24		21-61-31	ALL
	24		W1060	827	20		26-13-12	050-099
	24	UNUSED						150-157, 275-299
	24		W1060	844	20		26-13-12	162-199
	25		W1060	633	22		33-22-42	ALL
	26		W1060	852	22		21-66-21	050-099, 162-199
	26	UNUSED						150-157, 275-299
	27		W1060	853	22		21-66-21	050-099, 162-199

HOOKUP LIST

D280T132

91-21-51

Section D05100

Page 64

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05148J		AP0403/ /		RCPT- (continued)				ALL
	27	UNUSED						150-157, 275-299
	28		W1060	864	22		21-66-41	050-099, 150, 152-199
	28	UNUSED						151, 275-299
	29		W1060	866	22		21-66-41	050-099, 150, 152-199
	29	UNUSED						151, 275-299
	30	UNUSED						ALL
	31		W1060	249R	20		21-65-11	ALL
	32		W1060	247B	24		21-61-71	ALL
	33		W1060	247R	24		21-61-71	ALL
	34		W1060	854	22		21-66-21	050-099, 162-199
	34	UNUSED						150-157
	34		W1060	017	22		33-21-21	275-299
	35		W1060	855	22		21-66-21	050-099, 162-199
	35	UNUSED						150-157, 275-299
	36		W1060	859	22		21-66-21	050-099, 162-199
	36	UNUSED						150-157, 275-299
	37		W1060	244Z			21-66-21	050-099, 162-199
	37	UNUSED						150-157, 275-299
	38		W1060	244R	22		21-66-21	050-099, 162-199
	38	UNUSED						150-157, 275-299
	39		W1060	244B	22		21-66-21	050-099, 162-199
	39	UNUSED						150-157, 275-299
	40		W1060	857	22		21-66-21	050-099, 162-199
	40	UNUSED						150-157
	40		W1060	715	20		33-24-11	275-278
	40		W1060	01X	20		33-24-11	280-299
	41		W1060	860	22		21-66-21	050-099, 162-199
	41	UNUSED						150-157
	41		W1060	710	20		33-24-11	275-278
	41		W1060	01W	20		33-24-11	280-299
	42		W1060	862	22		21-66-31	050-099, 150, 152-199
	42	UNUSED						275-299
	43		W1060	741	24		33-21-31	050-099, 162-199
	43	UNUSED						150, 152-157, 275-299
	44		W1060	831	24		33-21-31	050-099, 162-199
	44	UNUSED						150, 152-157
	44		W1060	01B	20		33-22-42	275-299
	45	UNUSED						050-099, 150, 152-199
	45		W1060	01C	20		33-22-42	275-299
	46	UNUSED						050-099, 150, 152-199

HOOKUP LIST
D280T132

91-21-51
Section D05100
Page 65
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05148J		AP0403/ /		RCPT- (continued)				ALL
	46		W1060	811	22		33-22-42	275-299
	47	UNUSED						050-099, 150, 152-199, 275-299
	48	UNUSED						050-099, 150, 152-199, 275-299
	49	UNUSED						050-099, 150, 152-199, 275-299
	50	UNUSED						050-099, 150, 152-199, 275-299
	51	UNUSED						050-099, 150, 152-199, 275-299
	52	UNUSED						050-099, 150, 152-199, 275-299
	53	UNUSED						050-099, 150, 152-199, 275-278
	53		W1060	884	22		33-22-42	280-299
	54	UNUSED						050-099, 150, 152-199, 275-299
	55		W1060	848	20		26-13-12	050-099, 162-199
	55	UNUSED						150, 152-157, 275-299
	56	UNUSED						150, 152-199
	57	UNUSED						150, 152-199
D05148P		AP0403/ /		PLUG-P19				ALL
	1	UNUSED						050-099, 150-199
	1		W1236	007	22		33-21-21	275-299
	2		W1236	012	22		33-21-21	ALL
	3		W1236	013	22		33-21-21	050-099, 150-199
	3		W1236	015	22		33-21-21	275-299
	4		W1236	031	22		21-61-31	ALL
	5		W1236	017	22		33-21-21	ALL
	6		W1236	169	20		26-13-12	050-099, 162-199
	6	UNUSED						150-157, 275-299
	7		W1236	201B	20		21-65-11	ALL
	8		W1236	027	20		33-22-11	ALL
	9		W1236	028	24		33-22-11	ALL
	10		W1236	020	22		33-51-11	ALL
	11		W1236	029	24		33-22-11	ALL
	12		W1236	030	24		33-22-11	ALL
	13		W1236	201R	20		21-65-11	ALL
	14		W1236	026	20		33-22-42	ALL
	15		W1236	170	20		26-13-12	050-099, 162-199
	15	UNUSED						150-157, 275-278
	15		W1236	037	22		SPARE	280-299
	16		W1236	199	22		21-66-31	050-099, 150, 152-199
	16	UNUSED						151, 275-299
	17		W1236	171	20		26-13-12	050-099, 162-199
	17	UNUSED						150-157, 275-278

HOOKUP LIST

D280T132

91-21-51

Section D05100

Page 66

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05148P		AP0403/ /		PLUG-P19 (continued)				ALL
	17		W1236	039	22		SPARE	280-299
	18		W1236	203B	20		21-65-11	ALL
	19		W1236	040	22		33-27-11	ALL
	20	UNUSED						ALL
	21		W1236	202B	24		21-61-31	ALL
	22		W1236	162	22		33-21-21	050-099, 162-199
	22	UNUSED						150-157, 275-278
	22	DL	W1236	005	18		33-22-31	280-299
	23		W1236	202R	24		21-61-31	ALL
	24		W1236	168	20		26-13-12	050-099, 162-199
	24	UNUSED						150-157, 275-299
	25		W1236	045	22		33-22-42	ALL
	26		W1236	184	22		21-66-21	050-099, 162-199
	26	UNUSED						150-157, 275-299
	27		W1236	185	22		21-66-21	050-099, 162-199
	27	UNUSED						150-157, 275-299
	28		W1236	500	22		21-66-41	050-099, 150, 152-199
	28	UNUSED						151, 275-299
	29		W1236	501	22		21-66-41	050-099, 150, 152-199
	29	UNUSED						151, 275-299
	30	UNUSED						ALL
	31		W1236	203R	20		21-65-11	ALL
	32		W1236	205B	24		21-61-71	ALL
	33		W1236	205R	24		21-61-71	ALL
	34		W1236	194	22		21-66-21	050-099, 162-199
	34	UNUSED						150-157
	34		W1236	013	22		33-21-21	275-299
	35		W1236	195	22		21-66-21	050-099, 162-199
	35	UNUSED						150-157, 275-299
	36		W1236	197	22		21-66-21	050-099, 162-199
	36	UNUSED						150-157, 275-299
	37		W1236	207Z			21-66-21	050-099, 162-199
	37	UNUSED						150-157, 275-299
	38		W1236	207R	22		21-66-21	050-099, 162-199
	38	UNUSED						150-157, 275-299
	39		W1236	207B	22		21-66-21	050-099, 162-199
	39	UNUSED						150-157, 275-299
	40		W1236	192	22		21-66-21	050-099, 162-199
	40	UNUSED						150-157
	40		W1236	129	20		33-24-14	275-299

HOOKUP LIST
D280T132

91-21-51
Section D05100
Page 67
Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05148P		AP0403/ /		PLUG-P19 (continued)				ALL
	41		W1236	193	22		21-66-21	050-099, 162-199
	41	UNUSED						150-157
	41		W1236	123	20		33-24-14	275-299
	42		W1236	198	22		21-66-31	050-099, 150, 152-199
	42	UNUSED						275-299
	43		W1236	165	24		33-21-31	050-099, 162-199
	43	UNUSED						150, 152-157, 275-299
	44		W1236	167	24		33-21-31	050-099, 162-199
	44	UNUSED						150, 152-157
	44		W1236	156	20		33-22-42	275-299
	45	UNUSED						050-099, 150, 152-199
	45		W1236	157	20		33-22-42	275-299
	46	UNUSED						050-099, 150, 152-199
	46		W1236	154	22		33-22-42	275-299
	47	UNUSED						050-099, 150, 152-199, 275-299
	48	UNUSED						050-099, 150, 152-199, 275-299
	49	UNUSED						050-099, 150, 152-199, 275-299
	50	UNUSED						050-099, 150, 152-199, 275-299
	51	UNUSED						050-099, 150, 152-199, 275-299
	52	UNUSED						050-099, 150, 152-199, 275-299
	53	UNUSED						050-099, 150, 152-199, 275-299
	53		W1236	058	22		33-22-42	280-299
	54	UNUSED						050-099, 150, 152-199, 275-299
	55		W1236	183	20		26-13-12	050-099, 162-199
	55	UNUSED						150, 152-157, 275-299
	56	UNUSED						150, 152-199
	57	UNUSED						150, 152-199
D05150J D05150J		AP1005/ / AP1005/ /		RCPT-P25 RCPT-				050-099 150-199, 275-299
	1		W1064	003	22		33-21-21	ALL
	2	UNUSED						050-099
	2		W1064	007	22		33-21-21	150-199, 275-299
	3		W1064	105	22		33-27-11	ALL
	4	DL	W1064	024	18		33-22-31	050-099, 150-199
	4	UNUSED						275-299
	5	UNUSED						ALL
	6	UNUSED						050-099, 150-199, 275-299
	6		W1064	656	22		33-22-42	280-299
	7		W1064	612	20		33-22-42	050-099, 150-199

HOOKUP LIST

D280T132

91-21-51

Section D05100

Page 68

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05150J		AP1005/ /		RCPT-P25 (continued)				050-099
D05150J		AP1005/ /		RCPT- (continued)				150-199, 275-299
	7		W1064	077	20		33-22-42	275-299
	8		W1064	015	20		33-22-11	ALL
	9		W1064	020	24		33-22-11	ALL
	10		W1064	162	22		33-51-11	ALL
	11		W1064	022	24		33-22-11	ALL
	12		W1064	023	24		33-22-11	ALL
	13		W1064	569	22		21-66-31	050-099
	13		W1064	120	22		21-66-31	150, 152-199
	13	UNUSED						151, 275-299
	14		W1064	567	22		21-66-31	050-099, 150, 152-199
	14	UNUSED						151, 275-299
	15		W1064	568	22		21-66-41	050-099, 150, 152-199
	15	UNUSED						151, 275-299
	16		W1064	641	22		21-66-41	050-099, 150, 152-199
	16	UNUSED						151, 275-299
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						050-099, 150-199
	20		W1064	085	22		33-22-42	275-278
	20		W1064	653	22		33-22-42	280-299
	21	UNUSED						050-099, 150-199
	21		W1064	701	22		33-22-42	275-299
	22	UNUSED						050-099, 150-199
	22		W1064	702	22		33-22-42	275-299
	23	UNUSED						050-099, 280-299
	23		W1064	093	22		33-22-42	150-199
	23	DL	W1064	024	18		33-22-31	275-278
	24		W1064	511	22		33-22-42	ALL
D05150P		AP1005/ /		PLUG-25				ALL
	1		W1236	012	22		33-21-21	ALL
	2	UNUSED						050-099
	2		W1236	025	22		33-21-21	150-199, 275-299
	3		W1236	040	22		33-27-11	ALL
	4	DK	W1236	005	18		33-22-31	050-099, 150-199
	4	UNUSED						275-299
	5	UNUSED						ALL
	6	UNUSED						050-099, 150-199, 275-278

HOOKUP LIST

D280T132

91-21-51
Section D05100
Page 69
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05150P		AP1005/ /		PLUG-25 (continued)				ALL
	6		W1236	058	22		33-22-42	280-299
	7		W1236	026	20		33-22-42	ALL
	8		W1236	027	20		33-22-11	ALL
	9		W1236	028	24		33-22-11	ALL
	10		W1236	020	22		33-51-11	ALL
	11		W1236	029	24		33-22-11	ALL
	12		W1236	030	24		33-22-11	ALL
	13		W1236	198	22		21-66-31	050-099, 150, 152-199
	13	UNUSED						151, 275-299
	14		W1236	199	22		21-66-31	050-099, 150, 152-199
	14	UNUSED						151, 275-299
	15		W1236	500	22		21-66-41	050-099, 150, 152-199
	15	UNUSED						151, 275-299
	16		W1236	501	22		21-66-41	050-099, 150, 152-199
	16	UNUSED						151, 275-299
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						050-099, 150-199
	20		W1236	156	20		33-22-42	275-299
	21	UNUSED						050-099, 150-199
	21		W1236	157	20		33-22-42	275-299
	22	UNUSED						050-099, 150-199
	22		W1236	154	22		33-22-42	275-299
	23	UNUSED						050-099, 280-299
	23		W1236	151	20		33-22-42	150-199
	23	DK	W1236	005	18		33-22-31	275-278
	24		W1236	045	22		33-22-42	ALL
D05151J		AE0307/ /		RCPT-E2-2				ALL
	1		W1581	001	24		SPARE	050-099
	1	UNUSED						150-199, 275-299
	2		W1581	002	24		SPARE	050-099
	2	UNUSED						150-199, 275-299
	3		W1581	003	24		SPARE	050-099
	3	UNUSED						150-199, 275-299
	4		W1581	004	24		SPARE	050-099
	4	UNUSED						150-199, 275-299
	5		W1581	005	24		SPARE	ALL
	6		W1581	201R	24		34-61-12	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05100

Page 70

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05151J		AE0307/ /		RCPT-E2-2 (continued)				ALL
	7		W1581	201B	24		34-61-12	ALL
	8		W1581	201Z			34-61-12	ALL
	9		W1581	202R	24		SPARE	ALL
	10		W1581	202B	24		SPARE	ALL
	11		W1581	202Z			SPARE	ALL
	12		W1581	012	24		SPARE	ALL
	13		W1581	013	24		SPARE	050-099
	13	UNUSED						150-199, 275-299
	14		W1581	235B	24		31-35-13	ALL
	15		W1581	235R	24		31-35-13	ALL
	16		W1581	016	24		SPARE	050-099
	16	UNUSED						150-199, 275-299
	17		W1581	017	22		SPARE	050-099
	17	UNUSED						150-199, 275-299
	18		W1581	235Z			31-35-13	ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D05151P		AE0307/ /		PLUG-E2-2				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W0153	201R	24		34-61-12	ALL
	7		W0153	201B	24		34-61-12	ALL
	8		W0153	201Z			34-61-12	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14		W0153	207B	24		31-35-13	ALL
	15		W0153	207R	24		31-35-13	ALL
	16	UNUSED						ALL
	17	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D05100
Page 71
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05151P		AE0307/ /		PLUG-E2-2 (continued)				ALL
	18		W0153	207Z			31-35-13	ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D05153J		AE0307/ /		RCPT-E1-6				ALL
	1		W1581	001	24		SPARE	050-099
	1	UNUSED						150-199, 275-299
	2		W1581	002	24		SPARE	050-099
	2	UNUSED						150-199, 275-299
	3		W1581	003	24		SPARE	050-099
	3	UNUSED						150-199, 275-299
	4		W1581	004	24		SPARE	050-099
	4	UNUSED						150-199, 275-299
	5		W1581	005	24		SPARE	ALL
	6		W1581	201R	24		34-61-12	ALL
	7		W1581	201B	24		34-61-12	ALL
	8		W1581	201Z			34-61-12	ALL
	9		W1581	202R	24		SPARE	ALL
	10		W1581	202B	24		SPARE	ALL
	11		W1581	202Z			SPARE	ALL
	12		W1581	012	24		SPARE	ALL
	13		W1581	013	24		SPARE	050-099
	13	UNUSED						150-199, 275-299
	14		W1581	235B	24		31-35-13	ALL
	15		W1581	235R	24		31-35-13	ALL
	16		W1581	016	24		SPARE	050-099
	16	UNUSED						150-199, 275-299
	17		W1581	017	22		SPARE	050-099
	17	UNUSED						150-199, 275-299
	18		W1581	235Z			31-35-13	ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D05100

Page 72

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05153P		AE0307/ /		PLUG-E1-6				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W0181	213R	24		34-61-12	ALL
	7		W0181	213B	24		34-61-12	ALL
	8		W0181	213Z			34-61-12	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14		W0181	216B	24		31-35-13	ALL
	15		W0181	216R	24		31-35-13	ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18		W0181	216Z			31-35-13	ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D05154J D05154J		AP1003/ / AP1003/ /		RCPT-P25 RCPT-				050-099 150-199, 275-299
	1		W1064	632	18		33-22-31	050-099, 150-199
	1		W1064	026	18		33-22-31	275-299
	2		W1064	124	22		33-21-21	ALL
	3		W1064	620	22		33-22-42	050-099, 150-199
	3		W1064	082	22		33-22-42	275-299
	4		W1064	608	24		33-21-21	050-099, 150-199
	4		W1064	006	24		33-21-21	275-299
	5		W1064	630	24		33-21-12	050-099, 150-199
	5		W1064	002	24		33-21-12	275-299
	6		W1064	622	22		33-22-42	050-099, 150-199
	6		W1064	091	22		33-22-42	275-299
	7		W1064	023	24		33-22-11	ALL
	8	UNUSED						050-099, 150-199

HOOKUP LIST
D280T132

91-21-51
Section D05100
Page 73
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05154J		AP1003/ /		RCPT-P25 (continued)				050-099
D05154J		AP1003/ /		RCPT- (continued)				150-199, 275-299
	8		W1064	095	22		33-22-42	275-299
	9	UNUSED						ALL
	10		W1064	014	24		33-21-31	ALL
	11		W1064	020	24		33-22-11	ALL
	12		W1064	022	24		33-22-11	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17		W1064	122	20		33-24-14	050-099
	17	UNUSED						150-199, 275-299
	18		W1064	120	20		33-24-14	050-099
	18	UNUSED						150-199, 275-299
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	DK	W1064	017	18		33-22-11	ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25		W1064	111	22		33-27-11	ALL
	26		W1064	117	22		33-27-11	ALL
	27		W1064	052	22		33-51-11	ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31		W1064	001	24		33-21-12	ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36		W1064	629	24		33-21-12	050-099, 150-199
	36	UNUSED						275-299
	37		W1064	002	24		33-21-12	050-099, 150-199
	37	UNUSED						275-299
	38	UNUSED						ALL
	39		W1064	637	22		33-21-21	050-099
	39	UNUSED						150-157, 275-299
	39		W1064	642	22		33-21-21	162-199
	40	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D05100

Page 74

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05154J		AP1003/ /		RCPT-P25 (continued)				050-099
D05154J		AP1003/ /		RCPT- (continued)				150-199, 275-299
	41	UNUSED						ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
D05154P		AP1003/ /		PLUG-P25				ALL
	1		W1240	124	18		33-22-31	050-099, 150-199
	1		W1240	015	18		33-22-31	275-299
	2		W1240	012	22		33-21-21	ALL
	3		W1240	019	22		33-22-42	ALL
	4		W1240	001	24		33-21-21	ALL
	5		W1240	020	24		33-21-12	ALL
	6		W1240	021	22		33-22-42	ALL
	7		W1240	027	24		33-22-11	ALL
	8	UNUSED						050-099, 150-199
	8		W1240	022	22		33-22-42	275-299
	9	UNUSED						ALL
	10		W1240	034	24		33-21-31	ALL
	11		W1240	029	24		33-22-11	ALL
	12		W1240	030	24		33-22-11	ALL
	13	UNUSED						ALL
	14	UNUSED						050-099
	14		W1240	023	22		SPARE	150-199, 275-299
	15	UNUSED						ALL
	16	UNUSED						ALL
	17		W1240	060	20		33-24-14	050-099
	17	UNUSED						150-199, 275-299
	18		W1240	061	20		33-24-14	050-099
	18	UNUSED						150-199, 275-299
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	DL	W1240	600	18		33-22-11	050-099, 150-199
	21	DL	W1240	025	18		33-22-11	275-299
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25		W1240	047	22		33-27-11	ALL
	26		W1240	045	22		33-27-11	ALL
	27		W1240	049	22		33-51-11	ALL
	28	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D05100

Page 75

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05154P		AP1003/ /		PLUG-P25 (continued)				ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31		W1240	057	24		33-21-12	ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36		W1240	123	24		33-21-12	050-099, 150-199
	36	UNUSED						275-299
	37		W1240	122	24		33-21-12	050-099
	37		W1240	122	20		33-21-12	150-199
	37	UNUSED						275-299
	38	UNUSED						ALL
	39		W1240	093	22		33-21-21	050-099, 162-199
	39	UNUSED						150-157, 275-299
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
D05155J		0510/260/L85		RCPT-				050-099
D05155J		0423/260/L085		RCPT-				150-199, 276-299
D05155J		0383/260/L085		RCPT-				275
	1		W1383	301Y	24		23-34-16	ALL
	2	FL	W1383	002	16		23-34-16	ALL
	3	FL	W1383	003	16		23-34-16	ALL
	4		W1383	301B	24		23-34-16	ALL
	5		W1383	301R	24		23-34-16	ALL
D05157J		0900/260/L085		RCPT-				050-099
D05157J		690/260/L085		RCPT-				150-199
D05157J		0580/260/L085		RCPT-				275-278
	1		W1383	303Y	24		23-34-16	050-099, 150-199
	1		W1383	013	24		23-34-16	275-278
	2	FL	W1383	019	16		23-34-16	050-099, 150-199, 275-278
	3	FL	W1383	018	16		23-34-16	050-099, 150-199, 275-278
	4		W1383	303B	24		23-34-16	050-099, 150-199
	4		W1383	014	24		23-34-16	275-278
	5		W1383	303R	24		23-34-16	050-099, 150-199, 275-278

HOOKUP LIST

D280T132

91-21-51

Section D05100

Page 76

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05159J		0574/260/R085		RCPT-				275-299
	1		W1379	017	24		23-34-15	275-299
	2	FL	W1379	019	16		23-34-15	275-299
	3	FL	W1379	018	16		23-34-15	275-299
	4		W1379	016	24		23-34-15	275-278
	4		W1379	303B	24		23-34-15	280-299
	5		W1379	303B	24		23-34-15	275-278
	5		W1379	020	24		23-34-15	280-299
D05160J		AP0401/ /		RCPT-				ALL
	1		W1058	001	22		33-24-11	ALL
	2		W1058	019	22		38-32-12	050-099
	2		W1058	019	20		38-32-12	150-156, 162-165, 275-276
	2		W1058	019	20		38-32-16	157, 166-199, 277-299
	3		W1058	041	20		38-32-12	050-099, 150-156, 162-165, 275-276
	3		W1058	041	20		38-32-16	157, 166-199, 277-299
	4		W1058	007	20		33-26-21	050-099, 150-199
	4		W1058	007	22		33-26-21	275-299
	5		W1058	206R	22		23-31-14	ALL
	6		W1058	206B	22		23-31-14	ALL
	7		W1058	010	22		33-26-11	ALL
	8		W1058	011	22		33-26-11	ALL
	9		W1058	064	20		26-13-12	050-099, 162-199
	9	UNUSED						150-157, 275-299
	10	UNUSED	W1058	075	22		33-25-11	050-099
	10							150-199
	10		W1058	004	22		33-25-11	275-299
	11		W1058	003	22		33-25-11	ALL
	12		W1058	038	20		33-26-21	050-099, 150-199
	12		W1058	618	22		33-26-21	275-299
	13		W1058	022	22		33-24-11	050-099
	13		W1058	106	20		33-24-11	150-199
	13		W1058	022	20		33-24-11	275-299
	14		W1058	500	22		33-24-11	050-099
	14		W1058	107	20		33-24-11	150-199
	14		W1058	500	20		33-24-11	275-299
	15		W1058	105	20		33-26-11	050-099, 150-199
	15		W1058	024	20		33-26-11	275-299
	16		W1058	031	20		33-26-21	050-099, 150-199
	16		W1058	038	22		33-26-21	275-299
	17		W1058	066	20		26-13-11	050-099

HOOKUP LIST

D280T132

91-21-51

Section D05100

Page 77

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05160J		AP0401 / /		RCPT- (continued)				ALL
	17	UNUSED						150-199, 275-299
	18		W1058	067	20		26-13-11	050-099
	18	UNUSED						150-199, 275-299
	19		W1058	071	20		26-13-11	050-099
	19	UNUSED						150-199, 275-299
	20		W1058	068	20		26-13-11	050-099
	20	UNUSED						150-157, 275-299
	20		W1058	080	20		26-13-12	162-199
	21	UNUSED						ALL
	22		W1058	070	20		26-13-11	050-099
	22	UNUSED						150-157, 275-299
	22		W1058	079	20		26-13-12	162-199
	23	UNUSED						050-099
	23		W1058	012	16		38-13-11	150-199, 275-299
	24		W1058	040	22		33-25-11	050-099, 150-199
	24	UNUSED						275-299
	25	UNUSED						050-099, 150-199, 275-278
	25		W1058	032	20		33-26-21	280-299
	26		W1058	042	22		33-25-11	050-099, 150-199
	26	UNUSED						275-299
	27		W1058	082	20		26-13-12	050-099, 162-199
	27	UNUSED						150-157, 275-299
	28		W1058	604	22		33-25-11	050-099, 150-199
	28	UNUSED						275-299
	29	DK	W1058	601	18		26-13-11	050-099, 150-157
	29	DK	W1058	077	18		26-13-11	162-199
	29	UNUSED						275-299
	30		W1058	016	20		26-13-11	050-099, 150-199
	30	UNUSED						275-299
	31		W1058	104	20		25-42-11	ALL
	32	UNUSED						ALL
	33		W1058	073	20		26-13-12	050-099
	33	UNUSED						150-157, 275-299
	33		W1058	081	20		26-13-12	162-199
	34		W1058	069	20		26-13-11	050-099
	34	UNUSED						150-157, 275-299
	34		W1058	078	20		26-13-12	162-199
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D05100

Page 78

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05160J		AP0401 / /		RCPT- (continued)				ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	DED		W1058	022Z			33-24-11	277-299
	DED		W1058	500Z			33-24-11	277-299
D05160P		AP0401 / /		PLUG-P19				ALL
	1		W0820	024	20		33-24-11	ALL
	2		W0820	019	22		38-32-12	050-099, 275-276
	2		W0820	019	20		38-32-12	150-156, 162-165
	2		W0820	019	20		38-32-16	157, 166-199
	2		W0820	019	22		38-32-16	277-299
	3	DL	W0820	018	18		38-32-12	050-099, 150-156, 162-165, 275-276
	3	DL	W0820	018	18		38-32-16	157, 166-199, 277-299
	4		W0820	004	20		33-26-21	050-099
	4		W0820	004	22		33-26-21	150-199, 275-299
	5		W0820	202R	22		23-31-14	ALL
	6		W0820	202B	22		23-31-14	ALL
	7		W0820	036	22		33-26-11	ALL
	8		W0820	008	22		33-26-11	ALL
	9		W0820	073	20		26-13-12	050-099, 162-199
	9	UNUSED						150-157, 275-299
	10		W0820	014	22		33-25-11	050-099
	10	UNUSED						150-199
	10		W0820	039	22		33-25-11	275-299
	11		W0820	015	22		33-25-11	ALL
	12		W0820	001	20		33-26-21	050-099, 150-199
	12		W0820	012	20		33-26-21	275-299
	13		W0820	031	20		33-24-11	050-099, 151, 275-299
	13		W0820	901	20		33-24-11	150, 152-156, 162-199
	13		W0820	901	20		23-32-21	157
	14		W0820	032	20		33-24-11	050-099, 151, 275-299
	14		W0820	900	20		33-24-11	150, 152-156, 162-199
	14		W0820	900	20		23-32-21	157
	15		W0820	009	20		33-26-11	ALL
	16		W0820	066	20		33-26-21	050-099, 150-199
	16		W0820	037	20		33-26-21	275-299
	17		W0820	102	20		26-13-11	050-099
	17	UNUSED						150-199, 275-299
	18		W0820	103	20		26-13-11	050-099
	18	UNUSED						150-199, 275-299

HOOKUP LIST

D280T132

91-21-51

Section D05100

Page 79

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05160P		AP0401 / /		PLUG-P19 (continued)				ALL
	19		W0820	104	20		26-13-11	050-099
	19	UNUSED						150-199, 275-299
	20		W0820	105	20		26-13-11	050-099
	20	UNUSED						150-157, 275-299
	20		W0820	083	20		26-13-12	162-199
	21	UNUSED						ALL
	22		W0820	107	20		26-13-11	050-099
	22	UNUSED						150-157, 275-299
	22		W0820	082	20		26-13-12	162-199
	23	FL	W0820	013	16		38-13-11	050-099
	23		W0820	013	16		38-13-11	150-199, 275-299
	24		W0820	059	22		33-25-11	050-099, 150-199
	24	UNUSED						275-299
	25	UNUSED						050-099, 150-199, 275-278
	25		W0820	001	20		33-26-21	280-299
	26		W0820	060	22		33-25-11	050-099, 150-199
	26	UNUSED						275-299
	27		W0820	080	20		26-13-12	050-099, 162-199
	27	UNUSED						150-157, 275-299
	28		W0820	016	22		33-25-11	050-099, 150-199
	28	UNUSED						275-299
	29		W0820	100	20		26-13-11	050-099, 150-157
	29	DL	W0820	100	18		26-13-11	162-199
	29	UNUSED						275-299
	30		W0820	101	20		26-13-11	050-099, 150-199
	30	UNUSED						275-299
	31		W0820	045	20		25-42-11	ALL
	32	UNUSED						ALL
	33		W0820	076	20		26-13-12	050-099, 162-199
	33	UNUSED						150-157, 275-299
	34		W0820	106	20		26-13-11	050-099
	34	UNUSED						150-157, 275-299
	34		W0820	081	20		26-13-12	162-199
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	DED		W0820	031Z			33-24-11	277-299
	DED		W0820	032Z			33-24-11	277-299

HOOKUP LIST

D280T132

91-21-51

Section D05100

Page 80

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05161J		0904/315/L015		RCPT-				050-099
D05161J		0646/315/L015		RCPT-				150-199, 275-278
	1		W1381	303Y	24		23-34-17	050-099, 150-199
	1		W1381	013	24		23-34-17	275-278
	2	FL	W1381	007	16		23-34-17	050-099, 150-199, 275-278
	3	FL	W1381	018	16		23-34-17	050-099, 150-199, 275-278
	4		W1381	303B	24		23-34-17	050-099, 150-199
	4		W1381	014	24		23-34-17	275-278
	5		W1381	303R	24		23-34-17	050-099, 150-199, 275-278
D05162J		AP0403/ /		RCPT-				ALL
	1		W1060	214R	22		23-31-14	ALL
	2		W1060	214B	22		23-31-14	ALL
	3	UNUSED						ALL
	4		W1060	782	22		33-24-11	050-099
	4		W1060	071	22		33-24-11	150-199
	4		W1060	068	20		33-24-11	275-299
	5		W1060	222B	22		23-31-14	050-099, 150-199
	5	UNUSED						275-299
	6		W1060	222R	22		23-31-14	050-099, 150-199
	6	UNUSED						275-299
	7		W1060	713	22		33-24-11	050-099
	7		W1060	072	22		33-24-11	150-199
	7		W1060	072	20		33-24-11	275-299
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D05162P		AP0403/ /		PLUG-P19				ALL
	1		W0802	201R	22		23-31-16	ALL
	2		W0802	201B	22		23-31-16	ALL
	3	UNUSED						ALL
	4		W0802	001	18		33-24-13	ALL
	5		W0802	202B	22		23-31-16	050-099, 150-199
	5	UNUSED						275-299
	6		W0802	202R	22		23-31-16	050-099, 150-199
	6	UNUSED						275-299
	7		W0802	002	18		33-24-13	ALL
	8	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D05100
Page 81
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05162P		AP0403/ /		PLUG-P19 (continued)				ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D05165J		AE0209/ /		RCPT-				ALL
	1		W0184	512	20		27-11-12	ALL
	2		W0184	513	20		27-11-12	ALL
	3	DL	W0184	514	18		27-11-12	ALL
	4	DL	W0184	515	18		27-11-12	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D05165P		AE0209/ /		RCPT-P36				ALL
	1		W1307	018	20		27-11-12	ALL
	2		W1307	019	20		27-11-12	ALL
	3	DK	W1307	020	18		27-11-12	ALL
	4	DK	W1307	021	18		27-11-12	ALL
	5		W1307	022	22		SPARE	ALL
	6	UNUSED						050-099, 275-299
	6		W1307	124	24		SPARE	150-199
	7		W1307	042	24		SPARE	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D05166J		AP0403/ /		RCPT-				ALL
	1		W1060	213R	22		23-31-14	ALL
	2		W1060	213B	22		23-31-14	ALL
	3	UNUSED						ALL
	4		W1060	069	22		33-24-11	050-099
	4		W1060	069	20		33-24-11	150-199, 275-299

HOOKUP LIST

D280T132

91-21-51

Section D05100

Page 82

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05166J		AP0403/ /		RCPT- (continued)				ALL
	5		W1060	221B	22		23-31-14	050-099, 150-199
	5	UNUSED						275-299
	6		W1060	221R	22		23-31-14	050-099, 150-199
	6	UNUSED						275-299
	7		W1060	070	22		33-24-11	050-099
	7		W1060	070	20		33-24-11	150-199, 275-299
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D05166P		AP0403/ /		PLUG-P19				050-099, 150-199, 275-278
D05166P		APO403-/-/		PLUG-P19				280-299
	1		W0804	201R	22		23-31-17	ALL
	2		W0804	201B	22		23-31-17	ALL
	3	UNUSED						ALL
	4		W0804	001	18		33-24-14	ALL
	5		W0804	251B	22		23-31-17	050-099, 150-199
	5	UNUSED						275-299
	6		W0804	251R	22		23-31-17	050-099, 150-199
	6	UNUSED						275-299
	7		W0804	002	18		33-24-14	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D05167J		AE0305/ /		RCPT-				ALL
	1		W1251	001	20		27-11-11	ALL
	2		W1251	002	20		27-11-11	ALL
	3		W1251	003	18		SPARE	ALL
D05167P		AE0305/ /		PLUG-E1-2				ALL
	1		W1092	050	18		27-11-11	ALL
	2		W1092	051	18		27-11-11	ALL
	3	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D05100
Page 83
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05168J		AP1005/ /		RCPT-P25				050-099
	1		W1064	210R	22		23-31-17	050-099
	2		W1064	210B	22		23-31-17	050-099
	3	UNUSED						050-099
	4		W1064	031	20		33-24-14	050-099
	5		W1064	217B	22		23-31-17	050-099
	6		W1064	217R	22		23-31-17	050-099
	7		W1064	032	20		33-24-14	050-099
	8	UNUSED						050-099
	9	UNUSED						050-099
	10	UNUSED						050-099
	11	UNUSED						050-099
	12	UNUSED						050-099
D05168P		AP1005/ /		PLUG-P25				050-099
	1		W0804	245R	22		23-31-17	050-099
	2		W0804	245B	22		23-31-17	050-099
	3	UNUSED						050-099
	4		W0804	111	18		33-24-14	050-099
	5		W0804	295B	22		23-31-17	050-099
	6		W0804	295R	22		23-31-17	050-099
	7		W0804	112	18		33-24-14	050-099
	8	UNUSED						050-099
	9	UNUSED						050-099
	10	UNUSED						050-099
	11	UNUSED						050-099
	12	UNUSED						050-099
D05170J		AP0401/ /		RCPT-				ALL
	1		W1060	001	24		33-21-11	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W1060	711	20		33-22-11	050-099, 150-199
	4		W1060	031	20		33-22-11	275-299
	5		W1060	032	20		33-22-11	ALL
	6		W1060	028	24		33-21-31	ALL
	7		W1060	033	20		33-22-11	ALL
	8		W1060	699	20		33-22-31	050-099, 150-199
	8	UNUSED						275-299
	9		W1060	783	20		33-24-11	050-099, 150-199

HOOKUP LIST

D280T132

91-21-51

Section D05100

Page 84

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05170J		AP0401 / /		RCPT- (continued)				ALL
	9		W1060	502	20		33-22-31	275-299
	10		W1060	784	20		33-24-11	050-099, 150-199
	10	UNUSED						275-299
	11	UNUSED						ALL
	12		W1060	571	22		33-51-11	ALL
	13		W1060	694	22		30-46-11	ALL
	14		W1060	518	22		33-22-41	050-099, 150-199
	14		W1060	628	22		33-22-41	275-299
	15		W1060	519	22		33-22-21	050-099, 150-157, 280-299
	15		W1060	876	22		33-22-21	162-199
	15	UNUSED						275-278
	16		W1060	503	20		33-22-42	ALL
	17		W1060	216R	22		23-31-14	050-099, 150-199
	17		W1060	236R	22		23-31-14	275-299
	18		W1060	216B	22		23-31-14	050-099, 150-199
	18		W1060	236B	22		23-31-14	275-299
	19		W1060	056	22		33-24-11	050-099
	19		W1060	056	20		33-24-11	150-199, 275-299
	20		W1060	063	22		33-24-11	050-099
	20		W1060	063	20		33-24-11	150-199, 275-299
	21		W1060	061	22		33-24-11	050-099
	21		W1060	061	20		33-24-11	150-199, 275-299
	22		W1060	062	22		33-24-11	ALL
	23		W1060	094	24		33-24-11	ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27		W1060	880	20		26-13-12	050-099, 162-199
	27	UNUSED						150-157, 275-299
	28		W1060	160	22		52-11-11	ALL
	29		W1060	161	22		52-11-11	ALL
	30		W1060	162	22		52-11-11	ALL
	31		W1060	100	20		33-27-11	ALL
	32	UNUSED						050-099
	32		W1060	690	22		33-22-41	150-199
	32		W1060	504	22		33-27-11	275-299
	33		W1060	787	20		33-24-11	050-099, 150-199
	33		W1060	505	22		33-27-11	275-299
	34		W1060	788	20		33-24-11	050-099, 150-199
	34	UNUSED						275-299

HOOKUP LIST

D280T132

91-21-51

Section D05100

Page 85

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05170J		AP0401 / /		RCPT- (continued)				ALL
	35		W1060	712	22		33-24-11	050-099
	35	UNUSED						150-157
	35		W1060	022	22		33-24-11	162-199
	35		W1060	712	20		33-24-11	275-299
	36		W1060	832	22		33-24-11	050-099
	36	UNUSED						150-157
	36		W1060	021	22		33-24-11	162-199
	36		W1060	711	20		33-24-11	275-299
	37		W1060	867	22		21-66-11	050-099, 162-199
	37	UNUSED						150-157, 275-278
	37		W1060	793	20		33-24-11	280-299
	38		W1060	868	22		21-66-11	050-099, 162-199
	38	UNUSED						150-157, 275-278
	38		W1060	792	20		33-24-11	280-299
	39		W1060	869	22		21-66-11	050-099, 162-199
	39	UNUSED						150-157, 275-299
	40		W1060	870	22		21-66-11	050-099, 162-199
	40	UNUSED						150-157, 275-299
	41		W1060	873	22		21-66-11	050-099, 162-199
	41	UNUSED						150-157, 275-299
	42	UNUSED						050-099, 162-199
	43		W1060	824	20		26-13-12	050-099
	43		W1060	067	20		26-13-12	162-199
	44		W1060	825	20		26-13-12	050-099
	44		W1060	800	20		26-13-12	162-199
	45		W1060	826	20		26-13-12	050-099
	45		W1060	843	20		26-13-12	162-199
	46		W1060	823	20		33-26-21	050-099, 162-199
	47		W1060	842	20		26-13-12	050-099, 162-199
	48		W1060	881	22		21-66-11	050-099, 162-199
	49	UNUSED						050-099, 162-199
	50	UNUSED						050-099, 162-199
	51	UNUSED						050-099, 162-199
	52		W1060	816	20		33-51-13	050-099, 162-199
	53	UNUSED						050-099, 162-199
	54		W1060	822	22		33-22-33	050-099, 162-199
	55		W1060	820	20		35-21-14	050-099, 162-199

HOOKUP LIST

D280T132

91-21-51

Section D05100

Page 86

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05170P		AP0401/305/L30		PLUG-19				050-099
D05170P		AP0401/ /		PLUG-19				150-199, 275-299
	1		W1230	042	24		33-21-11	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W1230	017	20		33-22-11	050-099, 150-154, 275-299
	4	FM	W1230	017	16		33-22-11	155-199
	5		W1230	018	20		33-22-11	ALL
	6		W1230	024	24		33-21-31	ALL
	7		W1230	021	20		33-22-11	ALL
	8		W1230	062	20		33-22-31	050-099, 150-199
	8	UNUSED						275-299
	9		W1230	605	20		33-24-14	050-099, 150-199
	9		W1230	009	20		33-22-31	275-299
	10		W1230	604	20		33-24-14	050-099, 150-199
	10	UNUSED						275-299
	11		W1230	814	22		SPARE	ALL
	12		W1230	023	22		33-51-11	ALL
	13		W1230	089	22		30-46-11	ALL
	14		W1230	014	22		33-22-41	ALL
	15		W1230	053	22		33-22-21	050-099, 150-199, 280-299
	15	UNUSED						275-278
	16		W1230	016	20		33-22-42	ALL
	17		W1230	204R	22		23-31-14	050-099, 150-199
	17		W1230	202R	22		23-31-14	275-299
	18		W1230	204B	22		23-31-14	050-099, 150-199
	18		W1230	202B	22		23-31-14	275-299
	19	DK	W1230	025	18		33-24-11	050-099
	19	FM	W1230	085	16		33-24-11	150-199, 275-299
	20	DK	W1230	026	18		33-24-11	050-099
	20	FM	W1230	084	16		33-24-11	150-199, 275-299
	21	DK	W1230	027	18		33-24-11	050-099
	21	FM	W1230	086	16		33-24-11	150-199, 275-299
	22		W1230	065	20		33-24-11	ALL
	23		W1230	030	24		33-24-11	ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26		W1230	815	22		SPARE	ALL
	27		W1230	526	20		26-13-12	050-099, 162-199
	27		W1230	816	20		SPARE	150-157, 275-299
	28		W1230	050	22		52-11-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05100

Page 87

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05170P		AP0401/305/L30		PLUG-19 (continued)				050-099
D05170P		AP0401/ /		PLUG-19 (continued)				150-199, 275-299
	29		W1230	051	22		52-11-11	ALL
	30		W1230	052	22		52-11-11	ALL
	31		W1230	048	20		33-27-11	ALL
	32	UNUSED						050-099
	32		W1230	103	22		33-22-41	150-199
	32		W1230	045	22		33-27-11	275-299
	33		W1230	601	20		33-24-13	050-099, 150-199
	33		W1230	047	22		33-27-11	275-299
	34		W1230	602	20		33-24-13	050-099, 150-199
	34	UNUSED						275-299
	35		W1230	117	22		33-24-13	050-099, 162-199
	35	UNUSED						150-157
	35		W1230	056	20		33-24-14	275-299
	36		W1230	116	22		33-24-13	050-099, 162-199
	36	UNUSED						150-157
	36		W1230	057	20		33-24-14	275-299
	37		W1230	503	22		21-66-11	050-099, 162-199
	37	UNUSED						150-157, 275-278
	37		W1230	138	20		33-24-13	280-299
	38		W1230	511	22		21-66-11	050-099, 162-199
	38	UNUSED						150-157, 275-278
	38		W1230	139	20		33-24-13	280-299
	39		W1230	512	22		21-66-11	050-099, 162-199
	39	UNUSED						150-157, 275-299
	40		W1230	513	22		21-66-11	050-099, 162-199
	40	UNUSED						150-157, 275-299
	41		W1230	524	22		21-66-11	050-099, 162-199
	41	UNUSED						150-157, 275-299
	42	UNUSED						050-099, 162-199
	43		W1230	118	20		26-13-12	050-099, 162-163
	43		W1230	131	20		26-13-12	164-199
	44		W1230	119	20		26-13-12	050-099
	44		W1230	125	20		26-13-12	162-163
	44		W1230	130	20		26-13-12	164-199
	45		W1230	120	20		26-13-12	050-099, 162-199
	46		W1230	501	20		33-26-21	050-099, 162-199
	47		W1230	126	20		26-13-12	050-099, 162-199
	48		W1230	525	22		21-66-11	050-099, 162-199
	49	UNUSED						050-099, 162-199

HOOKUP LIST

D280T132

91-21-51

Section D05100

Page 88

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05170P		AP0401/305/L30		PLUG-19 (continued)				050-099
D05170P		AP0401/ /		PLUG-19 (continued)				150-199, 275-299
	50	UNUSED						050-099, 162-199
	51	UNUSED						050-099, 162-199
	52		W1230	105	20		33-51-13	050-099, 162-199
	53	UNUSED						050-099, 162-199
	54		W1230	106	22		33-22-33	050-099, 162-199
	55		W1230	104	20		35-21-14	050-099, 162-199
D05172J		AE0203/ /		RCPT-P33				ALL
	1		W0142	125	22		33-22-21	ALL
	2		W0142	115	20		33-27-11	ALL
	3		W0142	09J	22		33-24-11	ALL
	4		W0142	123	20		33-22-11	ALL
	5		W0142	114	20		33-22-11	ALL
	6		W0142	116	24		33-21-31	ALL
	7		W0142	119	22		33-24-11	050-099
	7	FM	W0142	119	16		33-24-11	150-199, 275-299
	8		W0142	120	22		33-24-11	050-099
	8	UNUSED						150-199, 275-299
	9		W0142	124	22		33-24-11	050-099
	9	UNUSED						150-199, 275-299
	10		W0142	111	24		33-21-11	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13		W0142	042	22		33-51-11	ALL
	14		W0142	112	22		33-22-41	ALL
	15	UNUSED						ALL
	16		W0142	113	20		33-22-42	ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19		W0142	102	22		52-11-11	ALL
	20		W0142	103	22		52-11-11	ALL
	21		W0142	104	22		52-11-11	ALL
	22	UNUSED						050-099
	22	FM	W0142	120	16		33-24-11	150-199, 275-299
	23	UNUSED						ALL
	24	UNUSED						050-099
	24	FM	W0142	124	16		33-24-11	150-199, 275-299

HOOKUP LIST

D280T132

91-21-51

Section D05100

Page 89

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05172P		AE0203/ /		PLUG-P33				ALL
	1		W1230	001	22		33-22-21	050-099, 275-299
	1		W1230	001	20		33-22-21	150-199
	2		W1230	048	20		33-27-11	ALL
	3		W1230	065	20		33-24-11	ALL
	4		W1230	017	20		33-22-11	050-099, 150-154, 275-299
	4	FL	W1230	017	16		33-22-11	155-199
	5		W1230	018	20		33-22-11	ALL
	6		W1230	024	24		33-21-31	ALL
	7	DL	W1230	025	18		33-24-11	050-099
	7	FL	W1230	025	16		33-24-11	150-199, 275-299
	8	DL	W1230	026	18		33-24-11	050-099
	8	UNUSED						150-199, 275-299
	9	DL	W1230	027	18		33-24-11	050-099
	9	UNUSED						150-199, 275-299
	10		W1230	042	24		33-21-11	ALL
	11		W1230	814	22		SPARE	ALL
	12	UNUSED						ALL
	13		W1230	023	22		33-51-11	ALL
	14		W1230	014	22		33-22-41	ALL
	15	UNUSED						ALL
	16		W1230	016	20		33-22-42	ALL
	17		W1230	815	22		SPARE	ALL
	18	UNUSED						050-099, 162-199
	18		W1230	816	20		SPARE	150-157, 275-299
	19		W1230	050	22		52-11-11	ALL
	20		W1230	051	22		52-11-11	ALL
	21		W1230	052	22		52-11-11	ALL
	22	UNUSED						050-099
	22	FL	W1230	026	16		33-24-11	150-199, 275-299
	23	UNUSED						ALL
	24	UNUSED						050-099
	24	FL	W1230	027	16		33-24-11	150-199, 275-299
D05178J		AP0401/ /		RCPT-				ALL
	1		W1058	005	20		33-26-21	ALL
	2		W1058	018	24		21-24-11	050-099, 150-199
	2	UNUSED						275-299
	3		W1058	203R	24		21-61-21	ALL
	4		W1058	202B	24		21-61-21	ALL
	5		W1058	202R	24		21-61-21	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05100

Page 90

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05178J		AP0401/ /		RCPT- (continued)				ALL
	6		W1058	036	24		35-21-11	ALL
	7		W1058	009	22		33-26-11	ALL
	8	UNUSED						ALL
	9		W1058	002	22		33-25-11	ALL
	10		W1058	208R	24		21-61-61	ALL
	11		W1058	208B	24		21-61-61	ALL
	12		W1058	203B	24		21-61-21	ALL
	13		W1058	205B	20		21-65-11	ALL
	14		W1058	205R	20		21-65-11	ALL
	15		W1058	201B	22		21-51-12	ALL
	16		W1058	201R	22		21-51-12	ALL
	17		W1058	017	24		33-24-11	ALL
	18		W1058	084	22		21-66-11	050-099, 162-199
	18	UNUSED						150-157, 275-299
	19	DL	W1058	004	18		26-13-11	050-099, 150-157
	19	DL	W1058	076	18		26-13-11	162-199
	19	UNUSED						275-299
	20		W1058	026	22		52-51-11	ALL
	21		W1058	025	22		52-51-11	ALL
	22		W1058	035	22		33-51-11	ALL
	23	UNUSED						ALL
	24		W1058	209B	24		21-61-71	ALL
	25		W1058	209R	24		21-61-71	ALL
	26		W1058	210R	24		21-61-71	ALL
	27		W1058	210B	24		21-61-71	ALL
	28		W1058	211B	20		21-65-11	ALL
	29		W1058	211R	20		21-65-11	ALL
	30		W1058	212B	20		21-65-11	ALL
	31		W1058	212R	20		21-65-11	ALL
D05178P		AP0401/ /		PLUG-P19				ALL
	1	FM	W1216	001	16		33-26-21	ALL
	2		W1216	018	24		21-24-11	050-099, 150-199
	2	UNUSED						275-299
	3		W1216	201R	24		21-61-21	ALL
	4		W1216	202B	24		21-61-21	ALL
	5		W1216	202R	24		21-61-21	ALL
	6		W1216	006	24		35-21-11	ALL
	7		W1216	007	22		33-26-11	ALL
	8		W1216	008	20		SPARE	ALL

HOOKUP LIST
D280T132

91-21-51
Section D05100
Page 91
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05178P		AP0401/ /		PLUG-P19 (continued)				ALL
	9		W1216	009	22		33-25-11	ALL
	10		W1216	206R	24		21-61-61	ALL
	11		W1216	206B	24		21-61-61	ALL
	12		W1216	201B	24		21-61-21	ALL
	13		W1216	204B	20		21-65-11	ALL
	14		W1216	204R	20		21-65-11	ALL
	15		W1216	205B	22		21-51-12	ALL
	16		W1216	205R	22		21-51-12	ALL
	17		W1216	017	24		33-24-11	ALL
	18		W1216	013	22		21-66-11	050-099, 162-199
	18	UNUSED						150-157, 275-299
	19	DK	W1216	010	18		26-13-11	050-099, 150-199
	19	UNUSED						275-299
	20		W1216	020	24		52-51-11	ALL
	21		W1216	021	22		52-51-11	ALL
	22		W1216	022	22		33-51-11	ALL
	23	UNUSED						ALL
	24		W1216	208B	24		21-61-71	ALL
	25		W1216	208R	24		21-61-71	ALL
	26		W1216	209R	24		21-61-71	ALL
	27		W1216	209B	24		21-61-71	ALL
	28		W1216	210B	20		21-65-11	ALL
	29		W1216	210R	20		21-65-11	ALL
	30		W1216	211B	20		21-65-11	ALL
	31		W1216	211R	20		21-65-11	ALL
D05180J		AF0204/ /		RCPT-P61				ALL
	1	FM	W0062	59D	16		33-26-21	ALL
	2		W0062	203B	24		21-61-21	ALL
	3		W0062	203R	24		21-61-21	ALL
	4		W0062	204B	24		21-61-21	ALL
	5		W0062	204R	24		21-61-21	ALL
	6		W0062	64S	24		35-21-11	ALL
	7		W0062	59E	22		33-26-11	ALL
	8	UNUSED						ALL
	9		W0062	59H	22		33-25-11	ALL
	10		W0062	295R	24		21-61-61	ALL
	11		W0062	295B	24		21-61-61	ALL
	12		W0062	66E	24		21-24-11	050-099, 150-199
	12	UNUSED						275-299

HOOKUP LIST

D280T132

91-21-51

Section D05100

Page 92

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05180J		AF0204/ /		RCPT-P61 (continued)				ALL
	13		W0062	207B	20		21-65-11	ALL
	14		W0062	207R	20		21-65-11	ALL
	15		W0062	233B	22		21-51-12	ALL
	16		W0062	233R	22		21-51-12	ALL
	17		W0062	59F	24		33-24-11	ALL
	18	UNUSED						ALL
	19		W0062	64M	22		33-51-11	ALL
	20	UNUSED						050-099, 150-151, 153, 155, 157, 163-165, 275-299
	20		W0062	54J	24		SPARE	152, 154, 156, 162, 166-199
	21	UNUSED						050-099, 150-151, 153, 155, 157, 163-165, 275-299
	21		W0062	642	22		SPARE	152, 154, 156, 162, 166-199
	22		W0062	026	22		21-45-21	050-099, 150-156, 162-166, 275-276
	22		W0062	026	20		21-45-21	157, 167-199, 277-299
	23	UNUSED						ALL
	24		W0062	027	22		21-45-21	050-099, 150-156, 162-166, 275-276
	24		W0062	027	20		21-45-21	157, 167-199, 277-299
	25		W0062	296R	24		21-61-61	ALL
	26		W0062	296B	24		21-61-61	ALL
	27		W0062	223B	24		21-61-71	ALL
	28		W0062	223R	24		21-61-71	ALL
	29		W0062	224R	24		21-61-71	ALL
	30		W0062	224B	24		21-61-71	ALL
	31		W0062	228B	20		21-65-11	ALL
	32		W0062	228R	20		21-65-11	ALL
	33		W0062	229B	20		21-65-11	ALL
	34		W0062	229R	20		21-65-11	ALL
	35	DK	W0062	59B	18		26-13-11	050-099, 150-199
	35	UNUSED						275-299
	36		W0062	75M	22		21-66-11	050-099, 162-199
	36	UNUSED						150-157, 275-299
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
D05180P		AF0204/ /		PLUG-P61				ALL
	1	FL	W1216	001	16		33-26-21	ALL

HOOKUP LIST
D280T132

91-21-51
Section D05100
Page 93
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05180P		AF0204/ /		PLUG-P61 (continued)				ALL
	2		W1216	201B	24		21-61-21	ALL
	3		W1216	201R	24		21-61-21	ALL
	4		W1216	202B	24		21-61-21	ALL
	5		W1216	202R	24		21-61-21	ALL
	6		W1216	006	24		35-21-11	ALL
	7		W1216	007	22		33-26-11	ALL
	8		W1216	008	20		SPARE	ALL
	9		W1216	009	22		33-25-11	ALL
	10		W1216	206R	24		21-61-61	ALL
	11		W1216	206B	24		21-61-61	ALL
	12		W1216	018	24		21-24-11	050-099, 150-199
	12	UNUSED						275-299
	13		W1216	204B	20		21-65-11	ALL
	14		W1216	204R	20		21-65-11	ALL
	15		W1216	205B	22		21-51-12	ALL
	16		W1216	205R	22		21-51-12	ALL
	17		W1216	017	24		33-24-11	ALL
	18	UNUSED						ALL
	19		W1216	022	22		33-51-11	ALL
	20		W1216	020	24		52-51-11	ALL
	21		W1216	021	22		52-51-11	ALL
	22		W1216	028	22		21-45-21	050-099, 150-156, 162-166, 275-276
	22		W1216	028	20		21-45-21	157, 167-199, 277-299
	23	UNUSED						ALL
	24		W1216	024	22		21-45-21	050-099, 150-156, 162-166, 275-276
	24		W1216	024	20		21-45-21	157, 167-199, 277-299
	25		W1216	207R	24		21-61-61	ALL
	26		W1216	207B	24		21-61-61	ALL
	27		W1216	208B	24		21-61-71	ALL
	28		W1216	208R	24		21-61-71	ALL
	29		W1216	209R	24		21-61-71	ALL
	30		W1216	209B	24		21-61-71	ALL
	31		W1216	210B	20		21-65-11	ALL
	32		W1216	210R	20		21-65-11	ALL
	33		W1216	211B	20		21-65-11	ALL
	34		W1216	211R	20		21-65-11	ALL
	35	DL	W1216	010	18		26-13-11	050-099, 150-199
	35	UNUSED						275-299
	36		W1216	013	22		21-66-11	050-099, 162-199
	36	UNUSED						150-157, 275-299

HOOKUP LIST

D280T132

91-21-51

Section D05100

Page 94

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05180P		AF0204/ /		PLUG-P61 (continued)				ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
D05181J		1450/315/L015		RCPT-				ALL
	1	UNUSED						ALL
	2	FL	W1387	009	16		23-34-19	ALL
	3	FL	W1387	007	16		23-34-19	ALL
	4		W1387	008	24		23-34-19	ALL
	5		W1387	008	24		23-34-19	ALL
D05182J		AP0403/ /		RCPT-				ALL
	1		W1060	215R	22		23-31-14	ALL
	2		W1060	215B	22		23-31-14	ALL
	3	UNUSED						ALL
	4		W1060	077	22		33-24-11	050-099
	4		W1060	077	20		33-24-11	150-199, 275-299
	5		W1060	223B	22		23-31-14	050-099, 150-199
	5	UNUSED						275-299
	6		W1060	223R	22		23-31-14	050-099, 150-199
	6	UNUSED						275-299
	7		W1060	078	22		33-24-11	050-099
	7		W1060	078	20		33-24-11	150-199, 275-299
	8		W1060	238R	22		23-31-14	050-099, 150-199
	8	UNUSED						275-299
	9		W1060	238B	22		23-31-14	050-099, 150-199
	9	UNUSED						275-299
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D05182P		AP0403/ /		PLUG-P19				ALL
	1		W0800	201R	22		23-31-15	ALL
	2		W0800	201B	22		23-31-15	ALL
	3	UNUSED						ALL
	4		W0800	114	18		33-24-12	050-099, 275-299
	4		W0800	001	18		33-24-12	150-199
	5		W0800	251B	22		23-31-15	050-099, 150-199

HOOKUP LIST
D280T132

91-21-51
Section D05100
Page 95
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05182P		AP0403/ /		PLUG-P19 (continued)				ALL
	5	UNUSED						275-299
	6		W0800	251R	22		23-31-15	050-099, 150-199
	6	UNUSED						275-299
	7		W0800	115	18		33-24-12	050-099, 275-299
	7		W0800	002	18		33-24-12	150-199
	8		W0800	202R	22		23-31-15	050-099, 150-199
	8	UNUSED						275-299
	9		W0800	202B	22		23-31-15	050-099, 150-199
	9	UNUSED						275-299
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D05184J		AP1005/ /		RCPT-P25				050-099
	1		W1064	208R	22		23-31-15	050-099
	2		W1064	208B	22		23-31-15	050-099
	3	UNUSED						050-099
	4		W1064	027	18		33-24-12	050-099
	5	UNUSED						050-099
	6	UNUSED						050-099
	7		W1064	028	18		33-24-12	050-099
	8	UNUSED						050-099
	9	UNUSED						050-099
	10	UNUSED						050-099
	11	UNUSED						050-099
	12	UNUSED						050-099
D05184P		AP1005/ /		PLUG-P25				050-099
	1		W0800	245R	22		23-31-15	050-099
	2		W0800	245B	22		23-31-15	050-099
	3	UNUSED						050-099
	4		W0800	111	18		33-24-12	050-099
	5		W0800	295B	22		23-31-15	050-099
	6		W0800	295R	22		23-31-15	050-099
	7		W0800	112	18		33-24-12	050-099
	8	UNUSED						050-099
	9	UNUSED						050-099
	10	UNUSED						050-099
	11	UNUSED						050-099
	12	UNUSED						050-099

HOOKUP LIST

D280T132

91-21-51

Section D05100

Page 96

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05185J		1167/315/L015		RCPT-				050-099
D05185J		1152/315/L015		RCPT-				150-199, 275-278
D05185J		1161/315/L015		RCPT-				280-299
	1		W1387	012	24		23-34-19	050-099, 150-199, 275-278
	1		W1387	302Y	24		23-34-19	280-299
	2	FL	W1387	002	16		23-34-19	ALL
	3	FL	W1387	003	16		23-34-19	ALL
	4		W1387	013	24		23-34-19	050-099, 150-199, 275-278
	4		W1387	302B	24		23-34-19	280-299
	5		W1387	302R	24		23-34-19	ALL
D05186J		AF0204/ /		RCPT-P61				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19		W0062	50J	20		21-31-11	ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24		W0062	401B	22		21-31-11	ALL
	25		W0062	401G	22		21-31-11	ALL
	26		W0062	401R	22		21-31-11	ALL
	27		W0062	401Y	22		21-31-11	ALL
	28		W0062	401Z			21-31-11	ALL
	29		W0062	047	24		21-31-11	ALL

HOOKUP LIST
D280T132

91-21-51
Section D05100
Page 97
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05186J		AF0204/ /		RCPT-P61 (continued)				ALL
	30		W0062	060	24		21-31-11	ALL
	31		W0062	059	24		21-31-11	ALL
D05186P		AF0204/ /		PLUG-P61				ALL
	1		W0654	041	22		SPARE	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19		W0654	033	20		21-31-11	ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24		W0654	401B	22		21-31-11	ALL
	25		W0654	401G	22		21-31-11	ALL
	26		W0654	401R	22		21-31-11	ALL
	27		W0654	401Y	22		21-31-11	ALL
	28		W0654	401Z	22		21-31-11	ALL
	29		W0654	029	24		21-31-11	ALL
	30		W0654	030	24		21-31-11	ALL
	31		W0654	028	24		21-31-11	ALL
D05187J		AF0203/ /		RCPT-P11				ALL
	1		W0042	097	20		22-11-32	ALL
	2	UNUSED						ALL
	3		W0042	099	20		22-11-31	ALL

HOOKUP LIST
D280T132



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05187J		AF0203/ /		RCPT-P11 (continued)				ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W0042	156	24		34-21-31	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9		W0042	157	20		34-33-31	ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	DED		W0042	097Z			22-11-32	ALL
	DED		W0042	099Z			22-11-31	ALL
	DED		W0042	156Z			34-21-31	ALL
	DED		W0042	157Z			34-33-31	ALL
D05187P		AF0203/ /		PLUG-P11				ALL
	1		W0223	001	20		22-11-32	ALL
	2		W0223	002	20		SPARE	ALL
	3		W0223	003	20		22-11-31	ALL
	4		W0223	004	20		SPARE	ALL
	5		W0223	005	22		SPARE	ALL
	6		W0223	006	24		34-21-31	ALL
	7		W0223	007	22		SPARE	ALL
	8		W0223	008	22		SPARE	ALL
	9		W0223	009	20		34-33-31	ALL
	10		W0223	010	22		SPARE	ALL
	11		W0223	011	22		SPARE	ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
D05188J		AE0218/ /		RCPT-P37				ALL
	1	UNUSED						ALL
	2		W0198	202R	24		28-41-11	ALL
	3		W0198	202B	24		28-41-11	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D05100
Page 99
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05188J		AE0218/ /		RCPT-P37 (continued)				ALL
	6	UNUSED						ALL
	7		W0198	116	20		27-11-22	ALL
	8		W0198	117	20		27-11-22	ALL
	9	DL	W0198	118	18		27-11-22	ALL
	10	DL	W0198	119	18		27-11-22	ALL
	11		W0198	112	24		28-22-11	ALL
	12	DL	W0198	139	18		28-22-21	ALL
	13	UNUSED						ALL
	14		W0198	150	22		28-22-21	ALL
	15	DL	W0198	138	18		28-22-21	ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D05188P		AE0218/ /		PLUG-				ALL
	1	UNUSED						ALL
	2		W0598	218R	24		28-41-11	ALL
	3		W0598	218B	24		28-41-11	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W0598	060	20		27-11-22	ALL
	8		W0598	061	20		27-11-22	ALL
	9	DK	W0598	062	18		27-11-22	ALL
	10	DK	W0598	063	18		27-11-22	ALL
	11		W0598	064	24		28-22-11	ALL
	12	DK	W0598	065	18		28-22-21	ALL
	13	UNUSED						ALL
	14		W0598	071	22		28-22-21	ALL
	15	DK	W0598	004	18		28-22-21	ALL
	16		W0598	802	22		SPARE	ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D05100

Page 100

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05188P		AE0218/ /		PLUG- (continued)				ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D05189J		AC0604/ /		RCPT-E5-1				ALL
	1		W0223	011	22		SPARE	ALL
	2		W0223	009	20		34-33-31	ALL
	3		W0223	010	22		SPARE	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
D05189P		AC0604/ /		PLUG-E5-1				ALL
	1	UNUSED						ALL
	2		W0185	030	20		34-33-31	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	DED		W0185	030Z			34-33-31	ALL
D05190J		AL1002/ /		RCPT-				ALL
	1		W0628	201R	22		32-61-12	ALL
	2		W0628	201B	22		32-61-12	ALL
	3		W0628	202R	22		32-61-12	ALL
	4		W0628	202B	22		32-61-12	ALL
	5	4L	W0628	453W	22		32-46-11	ALL
	6	4H	W0628	453G	22		32-46-11	ALL
	7	4L	W0628	454W	22		32-46-11	ALL
	8	4H	W0628	454G	22		32-46-11	ALL
	9		W0628	306Y	20		27-62-11	ALL
	10		W0628	206R	22		32-09-12	ALL
	11		W0628	206B	22		32-09-12	ALL
	12		W0628	306B	20		27-62-11	ALL
	13		W0628	306R	20		27-62-11	ALL
	14		W0628	215Z			32-42-11	ALL
	15		W0628	216Z			32-42-11	ALL
	16		W0628	215R	20		32-42-11	ALL
	17		W0628	215B	20		32-42-11	ALL
	18		W0628	216R	20		32-42-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05100

Page 101

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05190J		AL1002/ /		RCPT- (continued)				ALL
	19		W0628	216B	20		32-42-11	ALL
	= CC	M	W0628	306Z			27-62-11	ALL
	CAP	Y	W0628	021	22		SPARE	ALL
D05190P		AL1002/ /		PLUG-R WING/BODY RS DISC				ALL
	1		W0864	201R	18		32-61-12	ALL
	2		W0864	201B	18		32-61-12	ALL
	3		W0864	202R	18		32-61-12	ALL
	4		W0864	202B	18		32-61-12	ALL
	5	4K	W0864	451W	18		32-46-11	ALL
	6	4G	W0864	451G	18		32-46-11	ALL
	7	4K	W0864	452W	18		32-46-11	ALL
	8	4G	W0864	452G	18		32-46-11	ALL
	9		W0864	301Y	20		27-62-11	ALL
	10		W0864	203R	18		32-09-12	ALL
	11		W0864	203B	18		32-09-12	ALL
	12		W0864	301B	20		27-62-11	ALL
	13		W0864	301R	20		27-62-11	ALL
	14		W0864	204Z			32-42-11	ALL
	15		W0864	205Z			32-42-11	ALL
	16		W0864	204R	20		32-42-11	ALL
	17		W0864	204B	20		32-42-11	ALL
	18		W0864	205R	20		32-42-11	ALL
	19		W0864	205B	20		32-42-11	ALL
	= CC	M	W0864	301Z			27-62-11	ALL
D05191J		AE0207/ /		RCPT-P33				ALL
	1		W0144	004	16		23-34-15	ALL
	2		W0144	005	16		23-34-16	ALL
	3		W0144	006	12		23-34-18	ALL
	4		W0144	007	12		23-34-18	ALL
	5		W0144	008	12		23-34-18	ALL
	6		W0144	009	16		23-34-15	ALL
	7		W0144	010	16		23-34-16	ALL
	8		W0144	011	12		23-34-18	ALL
D05191P		AE0207/ /		PLUG-P33				ALL
	1		W0689	010	16		23-34-15	ALL
	2		W0689	011	16		23-34-16	ALL
	3		W0689	012	12		23-34-18	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05100

Page 102

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05191P		AE0207/ /		PLUG-P33 (continued)				ALL
	4		W0689	013	12		23-34-18	ALL
	5		W0689	015	12		23-34-18	ALL
	6		W0689	014	16		23-34-15	ALL
	7		W0689	016	16		23-34-16	ALL
	8		W0689	019	12		23-34-18	ALL
D05192J		AE0223/ /		RCPT-				ALL
	1		W0180	031	24		21-53-12	ALL
	2		W0180	132	24		21-43-11	ALL
	3		W0180	11A	24		21-43-11	ALL
	4	UNUSED						050-099
	4	DL	W0180	098	18		32-71-11	150-199, 275-299
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D05192P		AE0223/ /		PLUG-P36				ALL
	1		W0624	026	24		21-53-12	ALL
	2		W0624	027	24		21-43-11	ALL
	3		W0624	024	24		21-43-11	ALL
	4	UNUSED						050-099
	4	DK	W0624	080	18		32-71-11	150-199, 275-299
	5		W0624	081	22		SPARE	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D05193J		AE0207/ /		RCPT-P33				050-099, 157, 167-199, 277-299
D05193J		P033/ /		RCPT-P33				150-156, 162-166, 275-276
	1		W0144	012	22		23-34-11	ALL
	2		W0144	013	22		23-34-11	ALL

HOOKUP LIST
D280T132

91-21-51
Section D05100
Page 103
Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05193J		AE0207/ /		RCPT-P33 (continued)				050-099, 157, 167-199, 277-299
D05193J		P033/ /		RCPT-P33 (continued)				150-156, 162-166, 275-276
	3		W0144	014	22		23-34-11	ALL
	4		W0144	015	22		23-34-11	ALL
	5		W0144	043	24		23-34-12	050-099
	5		W0144	21A	20		30-21-11	150-154
	5	UNUSED						155-199, 275-299
	6	UNUSED						050-099
	6		W0144	043	24		23-34-12	150-199, 275-299
	7		W0144	044	24		23-34-12	ALL
	8		W0144	042	24		23-34-12	ALL
	9		W0144	21A	20		30-21-11	050-099, 155-199
	9	UNUSED						150-154, 275-299
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13		W0144	833	22		78-34-11	ALL
	14		W0144	834	22		78-34-11	ALL
	15		W0144	FRE			78-34-11	ALL
	16	UNUSED						ALL
	17		W0144	839	20		78-34-11	ALL
	18		W0144	734	24		78-36-11	ALL
	19		W0144	742	24		78-36-11	ALL
	20		W0144	725	24		78-36-11	ALL
	21	UNUSED						ALL
	22		W0144	838	20		78-34-11	ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	DED		W0144	725Z			78-36-11	ALL
	DED		W0144	734Z			78-36-11	ALL
	DED		W0144	742Z			78-36-11	ALL
			W0144	834Z			78-34-11	ALL
			W0144	838Z			78-34-11	ALL
			W0144	839Z			78-34-11	ALL
			W0144	FRE			78-34-11	ALL
D05193P		AE0207/ /		PLUG-P33				ALL
	1		W0689	006	22		23-34-11	ALL
	2		W0689	007	22		23-34-11	ALL
	3		W0689	008	22		23-34-11	ALL
	4		W0689	009	22		23-34-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05100

Page 104

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05193P		AE0207/ /		PLUG-P33 (continued)				ALL
	5		W0689	028	24		23-34-12	050-099
	5		W0689	025	22		30-21-11	150-154
	5		W0689	025	22		SPARE	155-199, 275-299
	6	UNUSED						050-099
	6		W0689	028	24		23-34-12	150-199, 275-299
	7		W0689	027	24		23-34-12	ALL
	8		W0689	026	24		23-34-12	ALL
	9		W0689	030	24		30-21-11	050-099, 155-199
	9	UNUSED						150-154, 275-299
	10	UNUSED						ALL
	11		W0689	025	22		SPARE	050-099
	11	UNUSED						150-199, 275-299
	12		W0689	020	20		SPARE	ALL
	13	DK	W0689	039	18		78-34-11	ALL
	14	DK	W0689	038	18		78-34-11	ALL
	15		W0689	FRB			78-34-11	ALL
	16	UNUSED						ALL
	17	DK	W0689	037	18		78-34-11	ALL
	18		W0689	040	24		78-36-11	ALL
	19		W0689	041	24		78-36-11	ALL
	20		W0689	042	24		78-36-11	ALL
	21	UNUSED						ALL
	22	DK	W0689	036	18		78-34-11	ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
			W0689	036Z			78-34-11	ALL
			W0689	037Z			78-34-11	ALL
			W0689	038Z			78-34-11	ALL
			W0689	039Z			78-34-11	ALL
			W0689	FRB			78-34-11	ALL
D05195J		AE0203/ /		RCPT-P33				ALL
	1	UNUSED						050-099, 275-278
	1	FL	W0142	008	16		23-34-11	150-199, 280-299
	2	UNUSED						050-099, 275-299
	2	FL	W0142	009	16		23-34-11	150-199
	3	UNUSED						050-099, 275-299
	3	FL	W0142	010	16		23-34-11	150-199
	4	UNUSED						050-099, 275-299
	4	FL	W0142	011	16		23-34-11	150-199

HOOKUP LIST
D280T132

91-21-51
Section D05100
Page 105
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05195J		AE0203/ /		RCPT-P33 (continued)				ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8		W0142	016	22		23-34-11	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14		W0142	008	16		23-34-11	050-099, 275-278
	14	UNUSED						150-199
	14		W0142	24A	12		23-34-17	280-299
	15	UNUSED						ALL
	16		W0142	009	16		23-34-11	050-099, 275-299
	16	UNUSED						150-199
	17	UNUSED						ALL
	18		W0142	014	12		23-34-17	ALL
	19	UNUSED						ALL
	20	EN	W0142	015	10		23-34-19	ALL
	21	UNUSED						ALL
	22		W0142	011	16		23-34-11	050-099, 275-299
	22	UNUSED						150-199
	23	UNUSED						ALL
	24		W0142	010	16		23-34-11	050-099, 275-299
	24	UNUSED						150-199
	25	UNUSED						ALL
D05195P		AE0203/ /		PLUG-P33				ALL
	1	UNUSED						050-099, 275-278
	1	FM	W0853	005	16		23-34-11	150-199, 280-299
	2	UNUSED						050-099, 275-299
	2	FM	W0853	006	16		23-34-11	150-199
	3	UNUSED						050-099, 275-299
	3	FM	W0853	007	16		23-34-11	150-199
	4	UNUSED						050-099, 275-299
	4	FM	W0853	008	16		23-34-11	150-199
	5		W0853	009	22		SPARE	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8		W0853	019	22		23-34-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05100

Page 106

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05195P		AE0203/ /		PLUG-P33 (continued)				ALL
	9	UNUSED						ALL
	10		W0853	016	20		SPARE	ALL
	11	UNUSED						ALL
	12		W0853	013	20		SPARE	ALL
	13	UNUSED						ALL
	14		W0853	005	16		23-34-11	050-099, 275-278
	14	UNUSED						150-199
	14		W0853	031	12		23-34-17	280-299
	15	UNUSED						ALL
	16		W0853	006	16		23-34-11	050-099, 275-299
	16	UNUSED						150-199
	17	UNUSED						ALL
	18		W0853	012	12		23-34-17	ALL
	19	UNUSED						ALL
	20	EO	W0853	014	10		23-34-19	ALL
	21	UNUSED						ALL
	22		W0853	008	16		23-34-11	050-099, 275-299
	22	UNUSED						150-199
	23	UNUSED						ALL
	24		W0853	007	16		23-34-11	050-099, 275-299
	24	UNUSED						150-199
	25	UNUSED						ALL
D05196J		AE0307/ /		RCPT-				ALL
	1	UNUSED						ALL
	2		W0596	212B	24		28-41-11	ALL
	3		W0596	302Y	24		28-41-11	ALL
	4		W0596	202B	24		28-41-11	ALL
	5		W0596	202R	24		28-41-11	ALL
	6		W0596	302B	24		28-41-11	ALL
	7		W0596	302R	24		28-41-11	ALL
	8		W0596	212R	24		28-41-11	ALL
	9		W0596	301Y	24		28-41-11	ALL
	10		W0596	205B	24		28-41-11	ALL
	11		W0596	205R	24		28-41-11	ALL
	12		W0596	301B	24		28-41-11	ALL
	13		W0596	301R	24		28-41-11	ALL
	14		W0596	211B	24		28-41-11	ALL
	15		W0596	211R	24		28-41-11	ALL
	16		W0596	303Y	24		28-41-11	ALL

HOOKUP LIST
D280T132

91-21-51
Section D05100
Page 107
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05196J		AE0307/ /		RCPT- (continued)				ALL
	17		W0596	208B	24		28-41-11	ALL
	18		W0596	208R	24		28-41-11	ALL
	19		W0596	303B	24		28-41-11	ALL
	20		W0596	303R	24		28-41-11	ALL
	21		W0596	091	24		28-41-11	ALL
	22	UNUSED						ALL
	23		W0596	092	24		28-41-11	ALL
	24		W0596	216B	24		28-41-11	ALL
	25		W0596	216R	24		28-41-11	ALL
	26	UNUSED						ALL
	27		W0596	026	24		28-21-11	ALL
	28		W0596	027	24		28-21-11	ALL
	29		W0596	028	24		28-21-11	ALL
	30		W0596	029	24		28-21-11	ALL
	31		W0596	401B	24		28-21-11	ALL
	32		W0596	401G	24		28-21-11	ALL
	33		W0596	401R	24		28-21-11	ALL
	34		W0596	401Y	24		28-21-11	ALL
	35	UNUSED						ALL
	36		W0596	102	24		29-11-32	ALL
	37		W0596	109	24		28-41-23	ALL
	38		W0596	110	24		28-41-23	ALL
	39		W0596	111	24		28-41-23	ALL
	40		W0596	024	22		28-41-12	ALL
	41		W0596	108	24		28-41-23	ALL
	42		W0596	112	24		28-41-23	ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D05100

Page 108

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05196P		AE0307/ /		PLUG-E2-4				ALL
	1	UNUSED						ALL
	2		W0098	214B	24		28-41-11	ALL
	3		W0098	301Y	24		28-41-11	ALL
	4		W0098	215B	24		28-41-11	ALL
	5		W0098	215R	24		28-41-11	ALL
	6		W0098	301B	24		28-41-11	ALL
	7		W0098	301R	24		28-41-11	ALL
	8		W0098	214R	24		28-41-11	ALL
	9		W0098	302Y	24		28-41-11	ALL
	10		W0098	218B	24		28-41-11	ALL
	11		W0098	218R	24		28-41-11	ALL
	12		W0098	302B	24		28-41-11	ALL
	13		W0098	302R	24		28-41-11	ALL
	14		W0098	220B	24		28-41-11	ALL
	15		W0098	220R	24		28-41-11	ALL
	16		W0098	303Y	24		28-41-11	ALL
	17		W0098	221B	24		28-41-11	ALL
	18		W0098	221R	24		28-41-11	ALL
	19		W0098	303B	24		28-41-11	ALL
	20		W0098	303R	24		28-41-11	ALL
	21		W0098	081	24		28-41-11	ALL
	22	UNUSED						ALL
	23		W0098	082	24		28-41-11	ALL
	24		W0098	216R	24		28-41-11	ALL
	25		W0098	216B	24		28-41-11	ALL
	26	UNUSED						ALL
	27		W0098	011	22		28-21-11	ALL
	28		W0098	012	22		28-21-11	ALL
	29		W0098	013	22		28-21-11	ALL
	30		W0098	014	22		28-21-11	ALL
	31		W0098	401B	22		28-21-11	ALL
	32		W0098	401G	22		28-21-11	ALL
	33		W0098	401R	22		28-21-11	ALL
	34		W0098	401Y	22		28-21-11	ALL
	35	UNUSED						ALL
	36		W0098	002	24		29-11-32	ALL
	37		W0098	067	24		28-41-23	ALL
	38		W0098	068	24		28-41-23	ALL
	39		W0098	069	24		28-41-23	ALL
	40		W0098	056	22		28-41-12	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05100

Page 109

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05196P		AE0307/ /		PLUG-E2-4 (continued)				ALL
	41		W0098	066	24		28-41-23	ALL
	42		W0098	070	24		28-41-23	ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
D05197J		0423/260/R085		RCPT-				050-099, 276-299
D05197J		423/260/R085		RCPT-				150-157
D05197J		0440/260/R085		RCPT-				162-199
D05197J		0383/260/R085		RCPT-				275
	1		W1379	301Y	24		23-34-15	ALL
	2	FL	W1379	002	16		23-34-15	ALL
	3	FL	W1379	003	16		23-34-15	ALL
	4		W1379	301B	24		23-34-15	ALL
	5		W1379	301R	24		23-34-15	ALL
D05199J		0460/315/L015		RCPT-				050-099, 162-199
D05199J		0375/315/L015		RCPT-				150-152, 275-299
D05199J		0385/315/L015		RCPT-				153-157
	1		W1381	301Y	24		23-34-17	ALL
	2	FL	W1381	002	16		23-34-17	ALL
	3	FL	W1381	003	16		23-34-17	ALL
	4		W1381	301B	24		23-34-17	ALL
	5		W1381	301R	24		23-34-17	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05100

Page 110 End

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05201J		AE0306/ /		RCPT-E2-2				ALL
	1		W1503	001	24		SPARE	ALL
	2		W1503	002	24		SPARE	ALL
	3		W1503	003	24		SPARE	ALL
	4		W1503	004	24		SPARE	ALL
	5		W1503	005	24		SPARE	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10		W1503	201R	24		22-41-11	ALL
	11		W1503	201B	24		22-41-11	ALL
	12		W1503	201Z			22-41-11	ALL
	13		W1503	202R	24		34-22-18	ALL
	14		W1503	202B	24		34-22-18	ALL
	15		W1503	202Z			34-22-18	ALL
	16		W1503	203R	24		34-22-19	ALL
	17		W1503	203B	24		34-22-19	ALL
	18		W1503	203Z			34-22-19	ALL
	19		W1503	204R	24		34-22-19	ALL
	20		W1503	204B	24		34-22-19	ALL
	21		W1503	204Z			34-22-19	ALL
	22		W1503	205R	24		34-61-14	ALL
	23		W1503	205B	24		34-61-14	ALL
	24		W1503	205Z			34-61-14	ALL
	25		W1503	206R	24		34-61-16	ALL
	26		W1503	206B	24		34-61-16	ALL
	27		W1503	206Z			SPARE	050-099
	27		W1503	206Z			34-61-16	150-199, 275-299
	28	UNUSED						ALL
	29	UNUSED						050-099, 275-299
	29		W1503	212R	24		SPARE	150-199
	30	UNUSED						050-099, 275-299
	30		W1503	212B	24		SPARE	150-199
	31	UNUSED						050-099, 275-299
	31		W1503	212Z			SPARE	150-199
D05201P		AE0306/ /		PLUG-E2-2				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D05200
Page 1
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05201P		AE0306/ /		PLUG-E2-2 (continued)				ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10		W0133	242R	24		22-41-11	ALL
	11		W0133	242B	24		22-41-11	ALL
	12		W0133	242Z			22-41-11	ALL
	13		W0133	245R	24		34-22-18	ALL
	14		W0133	245B	24		34-22-18	ALL
	15		W0133	245Z			34-22-18	ALL
	16		W0133	595R	24		34-22-19	ALL
	17		W0133	595B	24		34-22-19	ALL
	18		W0133	595Z			34-22-19	ALL
	19		W0133	285R	24		34-22-19	ALL
	20		W0133	285B	24		34-22-19	ALL
	21		W0133	285Z			34-22-19	ALL
	22		W0133	227R	24		34-61-14	ALL
	23		W0133	227B	24		34-61-14	ALL
	24		W0133	227Z			34-61-14	ALL
	25		W0133	681R	24		34-61-16	ALL
	26		W0133	681B	24		34-61-16	ALL
	27		W0133	681Z			34-61-16	ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
D05202J		AE0306/ /		RCPT-E2-4				ALL
	1	UNUSED						ALL
	2		W1726	002	24		28-41-11	ALL
	3		W1726	003	24		27-51-41	ALL
	4		W1726	004	24		27-51-51	ALL
	5		W1726	005	24		27-58-31	ALL
	6	UNUSED						ALL
	7		W1726	201R	24		77-31-11	ALL
	8		W1726	201B	24		77-31-11	ALL
	9		W1726	201Z			77-31-11	ALL
	10		W1726	010	24		32-46-11	ALL

HOOKUP LIST
D280T132

91-21-51
Section D05200
Page 2
Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05202J		AE0306/ /		RCPT-E2-4 (continued)				ALL
	11		W1726	011	24		32-46-11	ALL
	12		W1726	012	24		32-46-11	ALL
	13		W1726	013	24		32-46-11	ALL
	14		W1726	014	24		32-46-11	ALL
	15		W1726	015	24		32-46-11	ALL
	16		W1726	016	24		32-46-11	ALL
	17		W1726	017	24		32-46-11	ALL
	18		W1726	018	24		32-46-11	ALL
	19		W1726	019	24		28-41-13	ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D05202P		AE0306/ /		PLUG-E2-4				ALL
	1	UNUSED						ALL
	2		W0014	566	24		28-41-11	ALL
	3		W0014	031	24		27-51-41	ALL
	4		W0014	559	24		27-51-51	ALL
	5		W0014	560	24		27-58-31	ALL
	6	UNUSED						ALL
	7		W0014	231R	24		77-31-11	ALL
	8		W0014	231B	24		77-31-11	ALL
	9		W0014	231Z			77-31-11	ALL
	10		W0014	583	24		32-46-11	ALL
	11		W0014	521	24		32-46-11	ALL
	12		W0014	522	24		32-46-11	ALL
	13		W0014	523	24		32-46-11	ALL
	14		W0014	524	24		32-46-11	ALL
	15		W0014	525	24		32-46-11	ALL
	16		W0014	526	24		32-46-11	ALL
	17		W0014	527	24		32-46-11	ALL
	18		W0014	520	24		32-46-11	ALL
	19		W0014	161	24		28-41-13	ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D05200

Page 3

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05203J		AE0306/ /		RCPT-E2-2				ALL
	1		W0451	010	24		31-51-41	ALL
	2		W0451	011	24		31-51-41	ALL
	3		W0451	012	24		31-51-41	ALL
	4		W0451	013	24		31-51-41	ALL
	5		W0451	014	24		31-51-42	ALL
	6		W0451	015	24		34-16-11	ALL
	7		W0451	016	24		31-41-16	ALL
	8		W0451	007	24		31-51-31	ALL
	9	UNUSED						050-099, 150-199, 276-299
	9		W0451	902Z			34-53-11	275
	10	UNUSED						050-099, 155-199, 276-299
	10		W0451	006	24		31-51-21	150-154, 275
	11	UNUSED						050-099, 155-199
	11		W0451	008	24		31-51-21	150-154, 275
	11		W0451	902Z			34-53-11	276-299
	12		W0451	039	22		SPARE	ALL
	13	UNUSED						050-099, 150-199
	13		W0451	902R	24		34-53-11	275-299
	14	UNUSED						050-099, 150-199
	14		W0451	902B	24		34-53-11	275-299
	15		W0451	004	24		31-51-33	ALL
	16		W0451	036	24		SPARE	ALL
	17		W0451	037	24		SPARE	ALL
	18		W0451	048	24		31-31-21	ALL
	19		W0451	049	24		31-31-21	ALL
	20	UNUSED						ALL
	21		W0451	021	24		34-61-13	ALL
	22		W0451	022	24		34-61-13	ALL
	23		W0451	023	24		34-61-13	ALL
	24		W0451	024	24		34-61-13	ALL
	25		W0451	025	24		34-61-13	ALL
	26		W0451	026	24		34-61-13	ALL
	27		W0451	027	24		34-61-13	ALL
	28		W0451	028	24		34-61-13	ALL
	29		W0451	029	24		34-61-13	ALL
	30		W0451	030	24		34-61-13	ALL
	31		W0451	031	24		34-61-13	ALL
	32		W0451	203R	24		31-51-33	ALL
	33		W0451	203B	24		31-51-33	ALL
	34		W0451	203Z			31-51-33	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05200

Page 4

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05203J		AE0306/ /		RCPT-E2-2 (continued)				ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37		W0451	050	24		31-31-22	ALL
	38		W0451	005	24		31-51-41	ALL
	39		W0451	019	24		34-16-11	ALL
	40		W0451	047	24		31-51-43	ALL
	41	UNUSED						ALL
	DED		W0451	021Z			34-61-13	ALL
	DED		W0451	022Z			34-61-13	ALL
	DED		W0451	023Z			34-61-13	ALL
	DED		W0451	024Z			34-61-13	ALL
	DED		W0451	025Z			34-61-13	ALL
D05203P		AE0306/ /		PLUG-E2-2				ALL
	1		W0133	723	24		31-51-41	ALL
	2		W0133	721	24		31-51-41	ALL
	3		W0133	722	24		31-51-41	ALL
	4		W0133	720	24		31-51-41	ALL
	5		W0133	724	24		31-51-42	ALL
	6		W0133	726	24		34-16-11	ALL
	7		W0133	735	24		31-41-16	ALL
	8		W0133	732	24		31-51-31	050-099, 150-156, 162-166, 275-276
	8		W0133	827	24		31-51-31	157, 167-199, 277-299
	9	UNUSED						050-099, 150-199, 276-299
	9		W0133	905Z			34-53-11	275
	10	UNUSED						050-099, 155-199, 276-299
	10		W0133	731	24		31-51-21	150-154, 275
	11	UNUSED						050-099, 155-199
	11		W0133	730	24		31-51-21	150-154, 275
	11		W0133	905Z			34-53-11	276-299
	12	UNUSED						ALL
	13	UNUSED						050-099, 150-199
	13		W0133	905R	24		34-53-11	275-299
	14	UNUSED						050-099, 150-199
	14		W0133	905B	24		34-53-11	275-299
	15		W0133	112	24		31-51-33	ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18		W0133	627	24		31-31-21	ALL
	19		W0133	628	24		31-31-21	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05200

Page 5

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05203P		AE0306/ /		PLUG-E2-2 (continued)				ALL
	20	UNUSED						ALL
	21		W0133	032	24		34-61-13	ALL
	22		W0133	033	24		34-61-13	ALL
	23		W0133	034	24		34-61-13	ALL
	24		W0133	035	24		34-61-13	ALL
	25		W0133	036	24		34-61-13	ALL
	26		W0133	037	24		34-61-13	ALL
	27		W0133	038	24		34-61-13	ALL
	28		W0133	039	24		34-61-13	ALL
	29		W0133	040	24		34-61-13	ALL
	30		W0133	041	24		34-61-13	ALL
	31		W0133	727	20		34-61-13	ALL
	32		W0133	506R	24		31-51-33	ALL
	33		W0133	506B	24		31-51-33	ALL
	34		W0133	506Z			31-51-33	ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37		W0133	629	24		31-31-22	ALL
	38		W0133	737	24		31-51-41	ALL
	39		W0133	725	24		34-16-11	ALL
	40		W0133	719	24		31-51-43	ALL
	41	UNUSED						ALL
	DED		W0133	032Z			34-61-13	ALL
	DED		W0133	033Z			34-61-13	ALL
	DED		W0133	034Z			34-61-13	ALL
	DED		W0133	035Z			34-61-13	ALL
	DED		W0133	036Z			34-61-13	ALL
D05204J		AE0320/ /		RCPT-E2-4				ALL
	1	UNUSED						ALL
	2		W0506	666	24		24-51-52	ALL
	3		W0506	667	24		24-51-52	ALL
	4		W0506	668	22		24-51-52	050-099, 150-199
	4	UNUSED						275-299
	5		W0506	669	22		24-51-52	050-099, 150-199
	5	UNUSED						275-299
	6		W0506	676	24		29-11-31	ALL
	7		W0506	528	24		33-24-11	ALL
	8		W0506	677	24		29-11-31	ALL
	9	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D05200

Page 6

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05204J		AE0320/ /		RCPT-E2-4 (continued)				ALL
	10		W0506	212B	24		21-31-21	ALL
	11		W0506	212R	24		21-31-21	ALL
	12		W0506	073	24		29-11-12	ALL
	13		W0506	584	24		24-22-21	ALL
	14		W0506	653	24		29-11-12	ALL
	15		W0506	681	24		29-11-12	ALL
D05204P		AE0320/ /		PLUG-E2-4				ALL
	1	UNUSED						ALL
	2		W0016	161	24		24-51-52	050-099, 150-199
	2		W0016	162	24		24-51-52	275-299
	3		W0016	163	24		24-51-52	ALL
	4		W0016	164	22		24-51-52	050-099, 150-199
	4	UNUSED						275-299
	5		W0016	038	22		24-51-52	050-099, 150-199
	5	UNUSED						275-299
	6		W0016	133	24		29-11-31	ALL
	7		W0016	086	24		33-24-11	ALL
	8		W0016	132	24		29-11-31	ALL
	9	UNUSED						ALL
	10		W0016	221B	24		21-31-21	ALL
	11		W0016	221R	24		21-31-21	ALL
	12		W0016	084	24		29-11-12	ALL
	13		W0016	046	24		24-22-21	ALL
	14		W0016	028	24		29-11-12	ALL
	15		W0016	077	24		29-11-12	ALL
	DED		W0016	132Z			29-11-31	ALL
	DED		W0016	133Z			29-11-31	ALL
D05205J		AE0305/ /		RCPT-E1-2				ALL
	1		W1503	001	24		SPARE	ALL
	2		W1503	002	24		SPARE	ALL
	3		W1503	003	24		SPARE	ALL
	4		W1503	004	24		SPARE	ALL
	5		W1503	005	24		SPARE	ALL
	6		W1503	006	24		34-46-12	050-099, 150-199, 275-278
	6		W1503	006	24		SPARE	280-299
	7		W1503	007	24		SPARE	ALL
	8		W1503	008	24		34-22-16	ALL
	9	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D05200

Page 7

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05205J		AE0305/ /		RCPT-E1-2 (continued)				ALL
	10		W1503	201R	24		22-41-11	ALL
	11		W1503	201B	24		22-41-11	ALL
	12		W1503	201Z			22-41-11	ALL
	13		W1503	202R	24		34-22-18	ALL
	14		W1503	202B	24		34-22-18	ALL
	15		W1503	202Z			34-22-18	ALL
	16		W1503	203R	24		34-22-19	ALL
	17		W1503	203B	24		34-22-19	ALL
	18		W1503	203Z			34-22-19	ALL
	19		W1503	204R	24		34-22-19	ALL
	20		W1503	204B	24		34-22-19	ALL
	21		W1503	204Z			34-22-19	ALL
	22		W1503	205R	24		34-61-14	ALL
	23		W1503	205B	24		34-61-14	ALL
	24		W1503	205Z			34-61-14	ALL
	25		W1503	206R	24		34-61-16	ALL
	26		W1503	206B	24		34-61-16	ALL
	27		W1503	206Z			SPARE	050-099
	27		W1503	206Z			34-61-16	150-199, 275-299
	28		W1503	207R	24		34-46-11	ALL
	29		W1503	207B	24		34-46-11	ALL
	30		W1503	207Z			34-46-11	ALL
	31		W1503	208R	24		SPARE	050-099, 150-199, 275-278
	31		W1503	208R	24		34-46-12	280-299
	32		W1503	208B	24		SPARE	ALL
	33		W1503	208Z			SPARE	050-099, 150-199, 275-278
	33		W1503	208Z			34-46-12	280-299
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37		W1503	017	24		22-41-11	ALL
	38		W1503	210R	24		22-41-12	ALL
	39		W1503	210B	24		22-41-12	ALL
	40		W1503	210Z			22-41-12	ALL
	41		W1503	211R	24		34-46-11	ALL
	42		W1503	211B	24		34-46-11	ALL
	43		W1503	211Z			34-46-11	ALL
	44		W1503	044	22		34-46-12	ALL
	45		W1503	045	22		SPARE	ALL
	46		W1503	046	22		SPARE	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05200

Page 8

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05205J		AE0305/ /		RCPT-E1-2 (continued)				ALL
	47		W1503	047	22		34-22-23	ALL
	48	UNUSED						ALL
	49	UNUSED						050-099, 275-299
	49		W1503	212R	24		SPARE	150-199
	50	UNUSED						050-099, 275-299
	50		W1503	212B	24		SPARE	150-199
	51	UNUSED						050-099, 275-299
	51		W1503	212Z			SPARE	150-199
	52		W1503	213R	24		34-22-19	ALL
	53		W1503	213B	24		34-22-19	ALL
	54		W1503	213Z			34-22-19	ALL
	55		W1503	010	22		34-22-16	ALL
D05205P		AE0305/ /		PLUG-				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W1103	017	24		34-46-12	050-099, 150-199, 275-278
	6	UNUSED						280-299
	7	UNUSED						ALL
	8		W1103	121	24		34-22-16	ALL
	9	UNUSED						ALL
	10		W1103	284R	24		22-41-11	ALL
	11		W1103	284B	24		22-41-11	ALL
	12		W1103	284Z			22-41-11	ALL
	13		W1103	245R	24		34-22-18	ALL
	14		W1103	245B	24		34-22-18	ALL
	15		W1103	245Z			34-22-18	ALL
	16		W1103	247R	24		34-22-19	ALL
	17		W1103	247B	24		34-22-19	ALL
	18		W1103	247Z			34-22-19	ALL
	19		W1103	248R	24		34-22-19	ALL
	20		W1103	248B	24		34-22-19	ALL
	21		W1103	248Z			34-22-19	ALL
	22		W1103	264R	24		34-61-14	ALL
	23		W1103	264B	24		34-61-14	ALL
	24		W1103	264Z			34-61-14	ALL
	25		W1103	277R	24		34-61-16	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05200

Page 9

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05205P		AE0305/ /		PLUG- (continued)				ALL
	26		W1103	277B	24		34-61-16	ALL
	27		W1103	277Z			34-61-16	ALL
	28		W1103	249R	24		34-46-11	ALL
	29		W1103	249B	24		34-46-11	ALL
	30		W1103	249Z			34-46-11	ALL
	31	UNUSED						050-099, 150-199, 275-278
	31		W1103	297R	24		34-46-12	280-299
	32	UNUSED						050-099, 150-199, 275-278
	32		W1103	297B	24		34-46-12	280-299
	33	UNUSED						050-099, 150-199, 275-278
	33		W1103	297Z			34-46-12	280-299
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37		W1103	064	24		22-41-11	ALL
	38		W1103	286R	24		22-41-12	ALL
	39		W1103	286B	24		22-41-12	ALL
	40		W1103	286Z			22-41-12	ALL
	41		W1103	241R	24		34-46-11	ALL
	42		W1103	241B	24		34-46-11	ALL
	43		W1103	241Z			34-46-11	ALL
	44		W1103	086	22		34-46-12	ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47		W1103	099	22		34-22-23	ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52		W1103	233R	24		34-22-19	ALL
	53		W1103	233B	24		34-22-19	ALL
	54		W1103	233Z			34-22-19	ALL
	55		W1103	128	22		34-22-16	ALL
D05206J		AE0307/ /		RCPT-E2-4				ALL
	1	UNUSED						ALL
	2		W1722	012	24		SPARE	ALL
	3		W1722	013	24		24-28-21	ALL
	4		W1722	014	24		24-28-21	ALL
	5		W1722	015	24		24-28-21	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05200

Page 10

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05206J		AE0307/ /		RCPT-E2-4 (continued)				ALL
	6		W1722	016	24		SPARE	ALL
	7		W1722	017	24		SPARE	ALL
	8		W1722	204B	24		31-41-35	ALL
	9		W1722	204R	24		31-41-35	ALL
	10		W1722	204Z			31-41-35	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D05206P		AE0307/ /		PLUG-E2-4				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W0018	025	24		24-28-21	ALL
	4		W0018	026	24		24-28-21	ALL
	5		W0018	027	24		24-28-21	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8		W0018	205B	24		31-41-35	ALL
	9		W0018	205R	24		31-41-35	ALL
	10		W0018	205Z			31-41-35	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D05207J		AE0306/ /		RCPT-E2-3				ALL
	1		W1605	201R	24		31-31-14	ALL
	2		W1605	201B	24		31-31-14	ALL
	3		W1605	201Z			31-31-14	ALL
	4		W1605	204R	24		31-31-14	ALL
	5		W1605	204B	24		31-31-14	ALL
	6		W1605	204Z			31-31-14	ALL
	7		W1605	016	24		22-14-31	ALL
	8		W1605	205R	24		31-31-13	ALL
	9		W1605	205B	24		SPARE	050-099
	9		W1605	205B	24		31-31-13	150-199, 275-299
	10		W1605	009	22		31-31-14	ALL
	11		W1605	010	24		31-31-15	ALL
	12		W1605	209R	24		27-51-51	ALL
	13		W1605	209B	24		27-51-51	ALL
	14		W1605	209Z			27-51-51	ALL
	15		W1605	011	22		34-46-12	ALL
	16		W1605	031	22		SPARE	ALL

HOOKUP LIST
D280T132

91-21-51
Section D05200
Page 11
Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05207J		AE0306/ /		RCPT-E2-3 (continued)				ALL
	17		W1605	017	24		31-31-19	ALL
	18		W1605	018	24		34-12-12	ALL
	19	UNUSED						050-099, 275-299
	19		W1605	213R	22		SPARE	150-199
	20	UNUSED						050-099, 150-152, 155-199, 275-299
	20		W1605	217R	24		34-45-12	153-154
	21	UNUSED						050-099, 150-152, 155-199, 275-299
	21		W1605	217B	24		34-45-12	153-154
	22	UNUSED						050-099, 150-152, 155-199, 275-299
	22		W1605	217Z			34-45-12	153-154
	23	UNUSED						050-099, 275-299
	23		W1605	213B	22		SPARE	150-199
	24		W1605	020	20		31-31-26	050-099
	24		W1605	020	24		31-31-26	150-199, 275-299
	25	UNUSED						050-099, 150-152, 155-199, 275-299
	25		W1605	218R	24		34-45-12	153-154
	26	UNUSED						050-099, 150-152, 155-199, 275-299
	26		W1605	218B	24		34-45-12	153-154
	27	UNUSED						050-099, 150-152, 155-199, 275-299
	27		W1605	218Z			34-45-12	153-154
	28	UNUSED						ALL
	29		W1605	032	22		31-31-26	050-099
	29		W1605	032	24		31-31-26	150-199, 275-299
	30		W1605	030	24		22-14-31	ALL
	31		W1605	028	22		31-31-14	ALL
	32	UNUSED						050-099, 150-152, 155-199, 275-299
	33	UNUSED						050-099, 150-152, 155-199, 275-299
	34	UNUSED						050-099, 150-152, 155-199, 275-299
	35	UNUSED						050-099, 150-152, 155-199, 275-299
	36	UNUSED						050-099, 150-152, 155-199, 275-299
	37	UNUSED						050-099, 150-152, 155-199, 275-299
	38	UNUSED						050-099, 150-152, 155-199, 275-299
	39	UNUSED						050-099, 150-152, 155-199, 275-299
	40		W1605	221R	24		34-45-12	050-099, 150-152, 155-199, 275-299
	41		W1605	221B	24		34-45-12	050-099, 150-152, 155-199, 275-299
	42		W1605	221Z			34-45-12	050-099, 150-152, 155-199, 275-299
	43	UNUSED						050-099, 150-152, 155-199, 275-299
	44	UNUSED						050-099, 150-152, 155-199, 275-299
	45		W1605	222R	24		34-45-12	050-099, 150-152, 155-199, 275-299
	46		W1605	222B	24		34-45-12	050-099, 150-152, 155-199, 275-299

HOOKUP LIST

D280T132

91-21-51

Section D05200

Page 12

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05207J		AE0306/ /		RCPT-E2-3 (continued)				ALL
	47		W1605	222Z			34-45-12	050-099, 150-152, 155-199, 275-299
	48	UNUSED						050-099, 150-152, 155-199, 275-299
	49	UNUSED						050-099, 150-152, 155-199, 275-299
	50	UNUSED						050-099, 150-152, 155-199, 275-299
	51	UNUSED						050-099, 150-152, 155-199, 275-299
	52	UNUSED						050-099, 150-152, 155-199, 275-299
	53	UNUSED						050-099, 150-152, 155-199, 275-299
	54	UNUSED						050-099, 150-152, 155-199, 275-299
	55	UNUSED						050-099, 150-152, 155-199, 275-299
D05207P		AE0306/ /		PLUG-E2-3				ALL
	1		W0135	227R	24		31-31-14	ALL
	2		W0135	227B	24		31-31-14	ALL
	3		W0135	227Z			31-31-14	ALL
	4		W0135	537R	24		31-31-14	ALL
	5		W0135	537B	24		31-31-14	ALL
	6		W0135	537Z			31-31-14	ALL
	7		W0135	121	24		22-14-31	ALL
	8		W0135	252R	24		31-31-13	ALL
	9		W0135	252B	24		31-31-13	ALL
	10		W0135	160	24		31-31-14	ALL
	11		W0135	169	24		31-31-15	ALL
	12		W0135	257R	24		27-51-51	ALL
	13		W0135	257B	24		27-51-51	ALL
	14		W0135	257Z			27-51-51	ALL
	15		W0135	106	22		34-46-12	ALL
	16	UNUSED						ALL
	17		W0135	173	24		31-31-19	ALL
	18		W0135	018	24		34-12-12	ALL
	19	UNUSED						ALL
	20	UNUSED						050-099, 150-152, 155-199, 275-299
	20		W0135	299R	24		34-45-12	153-154
	21	UNUSED						050-099, 150-152, 155-199, 275-299
	21		W0135	299B	24		34-45-12	153-154
	22	UNUSED						050-099, 150-152, 155-199, 275-299
	22		W0135	299Z			34-45-12	153-154
	23	UNUSED						ALL
	24		W0135	811	24		31-31-26	ALL
	25	UNUSED						050-099, 150-152, 155-199, 275-299
	25		W0135	833R	24		34-45-12	153-154

HOOKUP LIST
D280T132

91-21-51
Section D05200
Page 13
Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05207P		AE0306/ /		PLUG-E2-3 (continued)				ALL
	26	UNUSED						050-099, 150-152, 155-199, 275-299
	26		W0135	833B	24		34-45-12	153-154
	27	UNUSED						050-099, 150-152, 155-199, 275-299
	27		W0135	833Z			34-45-12	153-154
	28	UNUSED						ALL
	29		W0135	810	24		31-31-26	ALL
	30		W0135	120	24		22-14-31	ALL
	31		W0135	191	22		31-31-14	ALL
	32	UNUSED						050-099, 150-152, 155-199, 277-299
	33	UNUSED						050-099, 150-152, 155-199, 277-299
	34	UNUSED						050-099, 150-152, 155-199, 277-299
	35	UNUSED						050-099, 150-152, 155-199, 277-299
	36	UNUSED						050-099, 150-152, 155-199, 277-299
	37	UNUSED						050-099, 150-152, 155-199, 277-299
	38	UNUSED						050-099, 150-152, 155-199, 277-299
	39	UNUSED						050-099, 150-152, 155-199, 277-299
	40		W0135	857R	24		34-45-12	050-099, 150-152, 155-199, 277-299
	41		W0135	857B	24		34-45-12	050-099, 150-152, 155-199, 277-299
	42		W0135	857Z			34-45-12	050-099, 150-152, 155-199, 277-299
	43	UNUSED						050-099, 150-152, 155-199, 277-299
	44	UNUSED						050-099, 150-152, 155-199, 277-299
	45		W0135	833R	24		34-45-12	050-099, 150-152, 155-199, 277-299
	46		W0135	833B	24		34-45-12	050-099, 150-152, 155-199, 277-299
	47		W0135	833Z			34-45-12	050-099, 150-152, 155-199, 277-299
	48	UNUSED						050-099, 150-152, 155-199, 277-299
	49	UNUSED						050-099, 150-152, 155-199, 277-299
	50	UNUSED						050-099, 150-152, 155-199, 277-299
	51	UNUSED						050-099, 150-152, 155-199, 277-299
	52	UNUSED						050-099, 150-152, 155-199, 277-299
	53	UNUSED						050-099, 150-152, 155-199, 277-299
	54	UNUSED						050-099, 150-152, 155-199, 277-299
	55	UNUSED						050-099, 150-152, 155-199, 277-299
D05209J		AE0202/ /		RCPT-				ALL
	1		W1078	184	24		34-61-13	ALL
	2		W1078	185	24		34-61-13	ALL
	3		W1078	186	24		34-61-13	ALL
	4		W1078	187	24		34-61-13	ALL
	5		W1078	188	24		34-61-13	ALL
	6		W1078	189	24		34-61-13	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05200

Page 14

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05209J		AE0202/ /		RCPT- (continued)				ALL
	7		W1078	190	24		34-61-13	ALL
	8		W1078	191	24		34-61-13	ALL
	9		W1078	192	24		34-61-13	ALL
	10		W1078	193	24		34-61-13	ALL
	11		W1078	506	24		34-61-13	ALL
	12		W1078	010	24		31-51-42	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18		W1078	700	24		31-31-21	ALL
	19		W1078	721	24		31-31-21	ALL
	20		W1078	135	24		31-51-42	ALL
	21	UNUSED						050-099, 155-199, 275-299
	21		W1078	006	24		21-28-11	150-154
	22	UNUSED						050-099, 150-152, 155-199, 275-299
	22		W1078	522	22		34-45-13	153-154
	23	UNUSED						ALL
	24		W1078	558	22		34-45-13	050-099, 150-152, 155-156, 162-166
	24	UNUSED						153-154, 157, 167-199, 275-299
	DED		W1078	184Z			34-61-13	ALL
	DED		W1078	185Z			34-61-13	ALL
	DED		W1078	186Z			34-61-13	ALL
	DED		W1078	187Z			34-61-13	ALL
	DED		W1078	188Z			34-61-13	ALL
D05209P		AE0202/ /		PLUG-P50 CARD FILE,ELECTRICAL SYSTEMS				ALL
	1		W0451	021	24		34-61-13	ALL
	2		W0451	022	24		34-61-13	ALL
	3		W0451	023	24		34-61-13	ALL
	4		W0451	024	24		34-61-13	ALL
	5		W0451	025	24		34-61-13	ALL
	6		W0451	026	24		34-61-13	ALL
	7		W0451	027	24		34-61-13	ALL
	8		W0451	028	24		34-61-13	ALL
	9		W0451	029	24		34-61-13	ALL
	10		W0451	030	24		34-61-13	ALL
	11		W0451	031	24		34-61-13	ALL
	12		W0451	018	24		31-51-42	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05200

Page 15

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05209P		AE0202/ /		PLUG-P50 CARD FILE,ELECTRICAL SYSTEMS (continued)				ALL
	13		W0451	034	24		SPARE	ALL
	14		W0451	044	24		SPARE	ALL
	15		W0451	042	24		SPARE	ALL
	16		W0451	036	24		SPARE	ALL
	17		W0451	037	24		SPARE	ALL
	18		W0451	048	24		31-31-21	ALL
	19		W0451	049	24		31-31-21	ALL
	20		W0451	038	24		31-51-42	ALL
	21	UNUSED						ALL
	22	UNUSED						050-099, 150-152, 155-199, 275-299
	22		W0451	054	22		34-45-13	153-154
	23	UNUSED						ALL
	24		W0451	054	22		34-45-13	050-099, 150-152, 155-156, 162-166
	24	UNUSED						153-154, 157, 167-199, 275-299
	DED		W0451	021Z			34-61-13	ALL
	DED		W0451	022Z			34-61-13	ALL
	DED		W0451	023Z			34-61-13	ALL
	DED		W0451	024Z			34-61-13	ALL
	DED		W0451	025Z			34-61-13	ALL
D05210J		AE0307/ /		RCPT-				ALL
	1		W0596	004	22		32-44-11	ALL
	2		W0596	143	22		32-41-11	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9		W0596	154	24		32-42-11	ALL
	10		W0596	155	24		32-42-11	ALL
	11		W0596	156	24		32-42-11	ALL
	12		W0596	157	24		32-42-11	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
D05210P		AE0307/ /		PLUG-E1-1				ALL
	1		W1084	074	22		32-44-11	ALL
	2		W1084	083	22		32-41-11	ALL

HOOKUP LIST
D280T132

91-21-51
Section D05200
Page 16
Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05210P		AE0307/ /		PLUG-E1-1 (continued)				ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9		W1084	024	24		32-42-11	ALL
	10		W1084	098	24		32-42-11	ALL
	11		W1084	022	24		32-42-11	ALL
	12		W1084	097	24		32-42-11	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
D05211J		AL1001/ /		RCPT-				ALL
	1		W1205	WRD	20		27-61-16	ALL
	2		W1205	WBK	20		27-61-16	ALL
	3		W1205	WBU	20		27-61-16	ALL
	4		W1205	WVI	20		27-61-16	ALL
	5		W1205	WOR	20		27-61-16	ALL
	6		W1205	WBN	20		27-61-16	ALL
	7		W1205	WRB	20		27-61-16	ALL
D05211P		AL1001/ /		PLUG-				ALL
	1		W1251	201R	20		27-61-16	ALL
	2		W1251	203R	20		27-61-16	ALL
	3		W1251	201B	20		27-61-16	ALL
	4		W1251	203B	20		27-61-16	ALL
	5		W1251	301R	20		27-61-16	ALL
	6		W1251	301B	20		27-61-16	ALL
	7		W1251	301Y	20		27-61-16	ALL
D05212J		AE0306/ /		RCPT-E2-4				ALL
	1		W0588	043	24		29-11-22	ALL
	2	DL	W0588	015	18		29-33-11	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W0588	004	24		29-11-22	ALL
	6		W0588	016	20		29-33-11	ALL
	7		W0588	017	20		29-33-11	ALL

HOOKUP LIST
D280T132

91-21-51
Section D05200
Page 17
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05212J		AE0306/ /		RCPT-E2-4 (continued)				ALL
	8		W0588	018	20		29-33-11	ALL
	9		W0588	027	24		21-31-21	ALL
	10		W0588	209B	24		21-31-21	ALL
	11		W0588	209R	24		21-31-21	ALL
	12		W0588	210B	24		21-31-21	ALL
	13		W0588	210R	24		21-31-21	ALL
	14		W0588	019	22		SPARE	ALL
	15	UNUSED						ALL
D05212P		AE0306/ /		PLUG-E2-4				ALL
	1		W0014	042	24		29-11-22	ALL
	2		W0014	157	24		29-33-11	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W0014	116	24		29-11-22	ALL
	6		W0014	158	24		29-33-11	ALL
	7		W0014	159	24		29-33-11	ALL
	8		W0014	160	24		29-33-11	ALL
	9		W0014	077	24		21-31-21	ALL
	10		W0014	220B	24		21-31-21	ALL
	11		W0014	220R	24		21-31-21	ALL
	12		W0014	221B	24		21-31-21	ALL
	13		W0014	221R	24		21-31-21	ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
D05213J		AL1005/ /		RCPT-				ALL
	1		W1203	WRD	20		27-61-15	ALL
	2		W1203	WBK	20		27-61-15	ALL
	3		W1203	WBU	20		27-61-15	ALL
	4		W1203	WVI	20		27-61-15	ALL
	5		W1203	WOR	20		27-61-15	ALL
	6		W1203	WBN	20		27-61-15	ALL
	7		W1203	WRB	20		27-61-15	ALL
D05213P		AL1005/ /		PLUG-				ALL
	1		W1253	201R	20		27-61-15	ALL
	2		W1253	203R	20		27-61-15	ALL
	3		W1253	201B	20		27-61-15	ALL
	4		W1253	203B	20		27-61-15	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05200

Page 18

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05213P		AL1005/ /		PLUG- (continued)				ALL
	5		W1253	302R	20		27-61-15	ALL
	6		W1253	302B	20		27-61-15	ALL
	7		W1253	302Y	20		27-61-15	ALL
D05214J		AC0506/ /		RCPT-P35				ALL
	1		W1066	181	20		26-16-21	ALL
	2		W1066	182	20		26-16-21	ALL
	3		W1066	841	20		26-16-21	ALL
	4		W1066	834	20		26-16-21	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W1066	179	20		26-16-21	ALL
	8		W1066	838	20		26-16-21	ALL
	9		W1066	839	20		26-16-21	ALL
	10	UNUSED						ALL
	11		W1066	191	20		26-16-21	ALL
	12		W1066	192	20		26-16-21	ALL
	13		W1066	861	20		26-16-21	ALL
	14		W1066	854	20		26-16-21	ALL
	15	UNUSED						ALL
D05214P		AC0506/ /		PLUG-P35				ALL
	1		W0606	121	20		26-16-21	ALL
	2		W0606	123	20		26-16-21	ALL
	3		W0606	127	20		26-16-21	ALL
	4		W0606	120	24		26-16-21	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W0606	117	20		26-16-21	ALL
	8		W0606	118	20		26-16-21	ALL
	9		W0606	119	20		26-16-21	ALL
	10	UNUSED						ALL
	11		W0606	131	20		26-16-21	ALL
	12		W0606	133	20		26-16-21	ALL
	13		W0606	637	20		26-16-21	ALL
	14		W0606	130	24		26-16-21	ALL
	15	UNUSED						ALL
D05215J		AL0901/ /		RCPT-				ALL
	1		W1201	WRD	20		27-61-14	ALL

HOOKUP LIST
D280T132

91-21-51
Section D05200
Page 19
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05215J		AL0901/ /		RCPT- (continued)				ALL
	2		W1201	WBK	20		27-61-14	ALL
	3		W1201	WBU	20		27-61-14	ALL
	4		W1201	WVI	20		27-61-14	ALL
	5		W1201	WOR	20		27-61-14	ALL
	6		W1201	WBN	20		27-61-14	ALL
	7		W1201	WRB	20		27-61-14	ALL
D05215P		AL0901/ /		PLUG-				ALL
	1		W1255	201R	20		27-61-14	ALL
	2		W1255	203R	20		27-61-14	ALL
	3		W1255	201B	20		27-61-14	ALL
	4		W1255	203B	20		27-61-14	ALL
	5		W1255	301R	20		27-61-14	ALL
	6		W1255	301B	20		27-61-14	ALL
	7		W1255	301Y	20		27-61-14	ALL
D05216J		AC0506/ /		RCPT-P35				ALL
	1		W1066	501	22		25-53-11	ALL
	2		W1066	502	20		25-53-11	ALL
	3		W1066	503	20		25-53-11	ALL
	4		W1066	504	22		25-53-13	ALL
	5		W1066	37J	22		25-53-16	ALL
	6		W1066	37G	22		25-53-16	ALL
	7		W1066	654	22		25-53-17	ALL
	8		W1066	508	22		25-53-17	ALL
	9	UNUSED						050-099
	9		W1066	01B	22		25-53-13	150-199, 275-299
	10	UNUSED						ALL
	11		W1066	511	22		25-53-11	050-099
	11		W1066	511	20		25-53-11	150-199, 275-299
	12	UNUSED						ALL
	13		W1066	513	22		25-53-13	050-099
	13		W1066	01M	22		25-53-13	150-199, 275-299
	14		W1066	800	22		25-53-14	050-099
	14		W1066	35Y	22		25-53-14	150-199, 275-299
	15		W1066	847	22		25-53-14	050-099
	15		W1066	35X	22		25-53-14	150-199, 275-299
	16		W1066	516	22		25-53-13	ALL
	17		W1066	517	22		25-53-13	ALL
	18		W1066	518	22		25-53-15	050-099

HOOKUP LIST

D280T132

91-21-51

Section D05200

Page 20

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05216J		AC0506/ /		RCPT-P35 (continued)				ALL
	18		W1066	518	22		25-53-14	150-199, 275-299
	19	UNUSED						ALL
	20	UNUSED						ALL
	21		W1066	779	22		25-53-13	050-099
	21	UNUSED						150-199, 275-299
	22		W1066	37H	22		25-53-16	ALL
	23		W1066	37N	22		25-53-17	ALL
	24		W1066	37M	22		25-53-17	ALL
D05216P		AC0506/ /		PLUG-P35				ALL
	1		W0700	001	20		25-53-11	ALL
	2		W0700	002	20		25-53-11	ALL
	3		W0700	003	20		25-53-11	ALL
	4		W0700	004	20		25-53-13	ALL
	5		W0700	005	20		25-53-16	ALL
	6		W0700	006	20		25-53-16	ALL
	7		W0700	007	20		25-53-17	ALL
	8		W0700	008	20		25-53-17	ALL
	9	UNUSED						050-099
	9		W0700	009	20		25-53-13	150-199, 275-299
	10	UNUSED						ALL
	11		W0700	011	20		25-53-11	ALL
	12	UNUSED						ALL
	13		W0700	013	20		25-53-13	ALL
	14		W0700	014	20		25-53-14	ALL
	15		W0700	015	20		25-53-14	ALL
	16		W0700	016	20		25-53-13	ALL
	17		W0700	017	20		25-53-13	ALL
	18		W0700	018	20		25-53-15	050-099
	18		W0700	018	20		25-53-14	150-199, 275-299
	19	UNUSED						ALL
	20	UNUSED						ALL
	21		W0700	010	20		25-53-13	050-099
	21	UNUSED						150-199, 275-299
	22		W0700	022	20		25-53-16	ALL
	23		W0700	023	20		25-53-17	ALL
	24		W0700	024	20		25-53-17	ALL
D05217J		AL0902/ /		RCPT-				ALL
	1		W1219	WRD	20		27-61-14	ALL

HOOKUP LIST
D280T132

91-21-51
Section D05200
Page 21
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05217J		AL0902/ /		RCPT- (continued)				ALL
	2		W1219	WBK	20		27-61-14	ALL
	3		W1219	WBU	20		27-61-14	ALL
	4		W1219	WVI	20		27-61-14	ALL
	5		W1219	WOR	20		27-61-14	ALL
	6		W1219	WBN	20		27-61-14	ALL
	7		W1219	WRB	20		27-61-14	ALL
D05217P		AL0902/ /		PLUG-				ALL
	1		W1255	204R	20		27-61-14	ALL
	2		W1255	206R	20		27-61-14	ALL
	3		W1255	204B	20		27-61-14	ALL
	4		W1255	206B	20		27-61-14	ALL
	5		W1255	302R	20		27-61-14	ALL
	6		W1255	302B	20		27-61-14	ALL
	7		W1255	302Y	20		27-61-14	ALL
D05218J		AC0506/ /		RCPT-P35				ALL
	1		W1066	101	22		25-53-15	ALL
	2		W1066	102	22		25-53-15	ALL
	3		W1066	103	22		25-53-15	ALL
	4		W1066	104	22		25-53-15	ALL
	5		W1066	105	22		25-53-15	ALL
	6		W1066	106	22		25-53-15	ALL
	7		W1066	107	22		25-53-15	ALL
	8		W1066	108	22		25-53-15	ALL
	9		W1066	109	22		25-53-15	ALL
	10		W1066	110	22		25-53-15	ALL
	11		W1066	111	22		25-53-15	ALL
	12		W1066	112	22		25-53-15	ALL
	13		W1066	113	22		25-53-16	ALL
	14		W1066	114	22		25-53-16	ALL
	15		W1066	115	22		25-53-16	ALL
	16		W1066	116	22		25-53-16	ALL
	17		W1066	117	22		25-53-16	ALL
	18		W1066	118	22		25-53-16	ALL
	19		W1066	119	22		25-53-16	ALL
	20		W1066	120	22		25-53-16	ALL
	21		W1066	121	22		25-53-17	ALL
	22		W1066	122	22		25-53-17	ALL
	23		W1066	123	22		25-53-17	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05200

Page 22

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05218J		AC0506/ /		RCPT-P35 (continued)				ALL
	24		W1066	124	22		25-53-17	ALL
	25		W1066	125	22		25-53-17	ALL
	26		W1066	126	22		25-53-17	ALL
	27		W1066	616	22		25-53-17	ALL
	28		W1066	615	22		25-53-17	ALL
	29		W1066	599	22		25-53-17	050-099
	29		W1066	285	22		25-53-17	150-199, 275-299
	30		W1066	634	22		25-53-17	ALL
	31		W1066	617	22		25-53-17	ALL
	32		W1066	536	22		25-53-17	ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
D05218P		AC0506/ /		PLUG-P35				ALL
	1		W0702	002	20		25-53-15	ALL
	2		W0702	003	20		25-53-15	ALL
	3		W0702	012	20		25-53-15	ALL
	4		W0702	013	20		25-53-15	ALL
	5		W0702	022	20		25-53-15	ALL

HOOKUP LIST
D280T132

91-21-51
Section D05200
Page 23
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05218P		AC0506/ /		PLUG-P35 (continued)				ALL
	6		W0702	023	20		25-53-15	ALL
	7		W0702	032	20		25-53-15	ALL
	8		W0702	033	20		25-53-15	ALL
	9		W0702	042	20		25-53-15	ALL
	10		W0702	043	20		25-53-15	ALL
	11		W0702	052	20		25-53-15	ALL
	12		W0702	053	20		25-53-15	ALL
	13		W0702	062	20		25-53-16	ALL
	14		W0702	063	20		25-53-16	ALL
	15		W0702	072	20		25-53-16	ALL
	16		W0702	073	20		25-53-16	ALL
	17		W0702	082	20		25-53-16	ALL
	18		W0702	083	20		25-53-16	ALL
	19		W0702	092	20		25-53-16	ALL
	20		W0702	093	20		25-53-16	ALL
	21		W0702	102	20		25-53-17	ALL
	22		W0702	103	20		25-53-17	ALL
	23		W0702	105	20		25-53-17	ALL
	24		W0702	112	20		25-53-17	ALL
	25		W0702	113	20		25-53-17	ALL
	26		W0702	115	20		25-53-17	ALL
	27		W0702	122	20		25-53-17	ALL
	28		W0702	123	20		25-53-17	ALL
	29		W0702	125	20		25-53-17	ALL
	30		W0702	132	20		25-53-17	ALL
	31		W0702	133	20		25-53-17	ALL
	32		W0702	135	20		25-53-17	ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D05200

Page 24

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05218P		AC0506/ /		PLUG-P35 (continued)				ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
D05219J		AL1006/ /		RCPT-				ALL
	1		W1217	WRD	20		27-61-15	ALL
	2		W1217	WBK	20		27-61-15	ALL
	3		W1217	WBU	20		27-61-15	ALL
	4		W1217	WVI	20		27-61-15	ALL
	5		W1217	WOR	20		27-61-15	ALL
	6		W1217	WBN	20		27-61-15	ALL
	7		W1217	WRB	20		27-61-15	ALL
D05219P		AL1006/ /		PLUG-				ALL
	1		W1253	204R	20		27-61-15	ALL
	2		W1253	206R	20		27-61-15	ALL
	3		W1253	204B	20		27-61-15	ALL
	4		W1253	206B	20		27-61-15	ALL
	5		W1253	303R	20		27-61-15	ALL
	6		W1253	303B	20		27-61-15	ALL
	7		W1253	303Y	20		27-61-15	ALL
D05220J		AC0506/ /		RCPT-P35				ALL
	1		W1066	301B	20		25-53-12	ALL
	2		W1066	301R	20		25-53-12	ALL
	3		W1066	301Y	20		25-53-12	ALL
	4		W1066	302B	20		25-53-12	ALL
	5		W1066	302R	20		25-53-12	ALL
	6		W1066	302Y	20		25-53-12	ALL
	7		W1066	303B	20		25-53-12	ALL
	8		W1066	303R	20		25-53-12	ALL
	9		W1066	303Y	20		25-53-12	ALL
	10	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D05200
Page 25
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05220J		AC0506/ /		RCPT-P35 (continued)				ALL
	11		W1066	304B	20		25-53-12	ALL
	12		W1066	304R	20		25-53-12	ALL
	13		W1066	304Y	20		25-53-12	ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
D05220P		AC0506/ /		PLUG-P35				ALL
	1		W0704	301B	20		25-53-12	ALL
	2		W0704	301R	20		25-53-12	ALL
	3		W0704	301Y	20		25-53-12	ALL
	4		W0704	302B	20		25-53-12	ALL
	5		W0704	302R	20		25-53-12	ALL
	6		W0704	302Y	20		25-53-12	ALL
	7		W0704	303B	20		25-53-12	ALL
	8		W0704	303R	20		25-53-12	ALL
	9		W0704	303Y	20		25-53-12	ALL
	10	UNUSED						ALL
	11		W0704	304B	20		25-53-12	ALL
	12		W0704	304R	20		25-53-12	ALL
	13		W0704	304Y	20		25-53-12	ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
D05221J		AL1002/ /		RCPT-				ALL
	1		W1215	WRD	20		27-61-16	ALL
	2		W1215	WBK	20		27-61-16	ALL
	3		W1215	WBU	20		27-61-16	ALL
	4		W1215	WVI	20		27-61-16	ALL
	5		W1215	WOR	20		27-61-16	ALL
	6		W1215	WBN	20		27-61-16	ALL
	7		W1215	WRB	20		27-61-16	ALL
D05221P		AL1002/ /		PLUG-				ALL
	1		W1251	204R	20		27-61-16	ALL
	2		W1251	206R	20		27-61-16	ALL
	3		W1251	204B	20		27-61-16	ALL
	4		W1251	206B	20		27-61-16	ALL
	5		W1251	302R	20		27-61-16	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05200

Page 26

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05221P		AL1002/ /		PLUG- (continued)				ALL
	6		W1251	302B	20		27-61-16	ALL
	7		W1251	302Y	20		27-61-16	ALL
D05222J		AC0506/ /		RCPT-P35				ALL
	1		W1066	305B	20		25-53-12	ALL
	2		W1066	305R	20		25-53-12	ALL
	3		W1066	305Y	20		25-53-12	ALL
	4		W1066	306B	20		25-53-12	ALL
	5		W1066	306R	20		25-53-12	ALL
	6		W1066	306Y	20		25-53-12	ALL
	7		W1066	307B	20		25-53-12	ALL
	8		W1066	307R	20		25-53-12	ALL
	9		W1066	307Y	20		25-53-12	ALL
	10	UNUSED						ALL
	11		W1066	308B	20		25-53-12	ALL
	12		W1066	308R	20		25-53-12	ALL
	13		W1066	308Y	20		25-53-12	ALL
	14	UNUSED						ALL
D05222P		AC0506/ /		PLUG-P35				ALL
	1		W0704	305B	20		25-53-12	ALL
	2		W0704	305R	20		25-53-12	ALL
	3		W0704	305Y	20		25-53-12	ALL
	4		W0704	306B	20		25-53-12	ALL
	5		W0704	306R	20		25-53-12	ALL
	6		W0704	306Y	20		25-53-12	ALL
	7		W0704	307B	20		25-53-12	ALL
	8		W0704	307R	20		25-53-12	ALL
	9		W0704	307Y	20		25-53-12	ALL
	10	UNUSED						ALL
	11		W0704	308B	20		25-53-12	ALL
	12		W0704	308R	20		25-53-12	ALL
	13		W0704	308Y	20		25-53-12	ALL
	14	UNUSED						ALL
D05223J		AE0305/ /		REPT-E1-2				050-099
D05223J		AE0305/ /		RCPT-E1-2				150-199, 275-299
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D05200

Page 27

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05223J		AE0305/ /		REPT-E1-2 (continued)				050-099
D05223J		AE0305/ /		RCPT-E1-2 (continued)				150-199, 275-299
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W1603	101	22		31-31-22	ALL
	7		W1603	216R	22		31-31-22	ALL
	8		W1603	216B	22		31-31-22	ALL
	9		W1603	216Z			31-31-22	ALL
	10		W1603	037	24		34-22-38	ALL
	11		W1603	015	24		31-31-22	ALL
	12		W1603	220R	24		34-22-38	ALL
	13		W1603	220B	24		34-22-38	ALL
	14		W1603	220Z			34-22-38	ALL
	15		W1603	219R	24		34-22-38	ALL
	16		W1603	219B	24		34-22-38	ALL
	17		W1603	219Z			34-22-38	ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D05223P		AE0305/ /		PLUG-E1-2				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W1103	145	22		31-31-22	ALL
	7		W1103	272R	22		31-31-22	050-099, 275-299
	7		W1103	272R	24		31-31-22	150-199
	8		W1103	272B	22		31-31-22	050-099, 275-299
	8		W1103	272B	24		31-31-22	150-199
	9		W1103	272Z			31-31-22	ALL
	10		W1103	149	24		34-22-38	ALL
	11		W1103	146	24		31-31-22	ALL
	12		W1103	259R	24		34-22-38	ALL
	13		W1103	259B	24		34-22-38	ALL
	14		W1103	259Z			34-22-38	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05200

Page 28

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05223P		AE0305/ /		PLUG-E1-2 (continued)				ALL
	15		W1103	275R	24		34-22-38	ALL
	16		W1103	275B	24		34-22-38	ALL
	17		W1103	275Z			34-22-38	ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D05224J		AC0506/ /		RCPT-P35				ALL
	1		W1066	601	22		25-53-14	ALL
	2		W1066	603	22		25-53-14	ALL
	3		W1066	643	22		25-53-14	050-099
	3		W1066	35G	22		25-53-14	150-199, 275-299
	4		W1066	611	22		25-53-14	ALL
	5		W1066	613	22		25-53-14	ALL
	6		W1066	641	22		25-53-14	050-099
	6		W1066	35H	22		25-53-14	150-199, 275-299
	7		W1066	621	22		25-53-14	ALL
	8		W1066	623	22		25-53-14	ALL
	9		W1066	520	22		25-53-14	050-099
	9		W1066	35J	22		25-53-14	150-199, 275-299
	10		W1066	683	22		25-53-14	ALL
	11		W1066	631	22		25-53-14	ALL
	12		W1066	633	22		25-53-14	ALL
	13		W1066	510	22		25-53-14	050-099
	13		W1066	35K	22		25-53-14	150-199, 275-299
	14		W1066	512	22		25-53-14	050-099
	14		W1066	641	22		25-53-14	150-199, 275-299
	15		W1066	509	22		25-53-14	050-099
	15		W1066	643	22		25-53-14	150-199, 275-299
	16		W1066	815	22		25-53-14	050-099
	16		W1066	35L	22		25-53-14	150-199, 275-299
	17		W1066	651	22		25-53-14	ALL
	18		W1066	653	22		25-53-14	ALL
	19		W1066	35T	22		25-53-14	ALL
	20		W1066	681	22		25-53-14	ALL
	21		W1066	661	22		25-53-14	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05200

Page 29

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05224J		AC0506/ /		RCPT-P35 (continued)				ALL
	22		W1066	663	22		25-53-14	ALL
	23		W1066	540	22		25-53-14	050-099
	23		W1066	686	22		25-53-14	150-199, 275-299
	24		W1066	671	22		25-53-14	ALL
	25		W1066	673	22		25-53-14	ALL
	26		W1066	630	22		25-53-14	050-099
	26		W1066	677	22		25-53-14	150-199, 275-299
	27		W1066	691	22		25-53-14	ALL
	28		W1066	693	22		25-53-14	ALL
	29		W1066	588	22		25-53-14	050-099
	29		W1066	35N	22		25-53-14	150-199, 275-299
	30		W1066	858	22		25-53-14	050-099
	30	UNUSED						150-199, 275-299
	31		W1066	701	22		25-53-14	ALL
	32		W1066	703	22		25-53-14	ALL
	33		W1066	01X	22		25-53-14	050-099
	33		W1066	35P	22		25-53-14	150-199, 275-299
	34		W1066	711	22		25-53-14	ALL
	35		W1066	713	22		25-53-14	ALL
	36	UNUSED						050-099
	36		W1066	02A	22		25-53-14	150-199, 275-299
	37		W1066	721	22		25-53-14	ALL
	38		W1066	723	22		25-53-14	ALL
	39	UNUSED						050-099
	39		W1066	02E	22		25-53-14	150-199, 275-299
	40		W1066	674	22		25-53-14	050-099
	40		W1066	664	22		25-53-14	150-199, 275-299
	41	UNUSED						050-099
	41		W1066	02V	22		25-53-14	150-199, 275-299
	42		W1066	02W	22		25-53-14	150-199, 275-299
	43		W1066	02R	22		25-53-14	150-199, 275-299
	44		W1066	665	22		25-53-14	150-199, 275-299
	45		W1066	02X	22		25-53-14	150-199, 275-299
	46	UNUSED						150-199, 275-299
	47	UNUSED						150-199, 275-299
	48	UNUSED						150-199, 275-299
	49	UNUSED						150-199, 275-299
	50	UNUSED						150-199, 275-299
	51	UNUSED						150-199, 275-299
	52	UNUSED						150-199, 275-299

HOOKUP LIST

D280T132

91-21-51

Section D05200

Page 30

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05224J		AC0506/ /		RCPT-P35 (continued)				ALL
	53	UNUSED						150-199, 275-299
	54	UNUSED						150-199, 275-299
	55	UNUSED						150-199, 275-299
D05224P		AC0506/ /		PLUG-P35				ALL
	1		W0704	111	20		25-53-14	ALL
	2		W0704	112	20		25-53-14	ALL
	3		W0704	523	20		25-53-14	050-099
	3		W0704	181	20		25-53-14	150-199, 275-299
	4		W0704	011	20		25-53-14	ALL
	5		W0704	012	20		25-53-14	ALL
	6		W0704	522	20		25-53-14	050-099
	6		W0704	182	20		25-53-14	150-199, 275-299
	7		W0704	503	20		25-53-14	050-099
	7		W0704	546	20		25-53-14	150-199, 275-299
	8		W0704	508	20		25-53-14	050-099
	8		W0704	545	20		25-53-14	150-199, 275-299
	9		W0704	524	20		25-53-14	050-099
	9		W0704	081	20		25-53-14	150-199, 275-299
	10		W0704	561	20		25-53-14	ALL
	11		W0704	501	20		25-53-14	050-099
	11		W0704	544	20		25-53-14	150-199, 275-299
	12		W0704	502	20		25-53-14	050-099
	12		W0704	543	20		25-53-14	150-199, 275-299
	13		W0704	516	20		25-53-14	050-099
	13		W0704	082	20		25-53-14	150-199, 275-299
	14		W0704	531	20		25-53-14	ALL
	15		W0704	532	20		25-53-14	ALL
	16		W0704	520	20		25-53-14	050-099
	16		W0704	611	20		25-53-14	150-199, 275-299
	17		W0704	541	20		25-53-14	ALL
	18		W0704	542	20		25-53-14	ALL
	19		W0704	521	20		25-53-14	050-099
	19		W0704	612	20		25-53-14	150-199, 275-299
	20		W0704	562	20		25-53-14	ALL
	21		W0704	551	20		25-53-14	ALL
	22		W0704	552	20		25-53-14	ALL
	23		W0704	556	20		25-53-14	ALL
	24		W0704	571	20		25-53-14	ALL
	25		W0704	572	20		25-53-14	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05200

Page 31

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05224P		AC0506/ /		PLUG-P35 (continued)				ALL
	26		W0704	576	20		25-53-14	ALL
	27		W0704	081	20		25-53-14	050-099
	27		W0704	581	20		25-53-14	150-199, 275-299
	28		W0704	082	20		25-53-14	050-099
	28		W0704	582	20		25-53-14	150-199, 275-299
	29		W0704	517	20		25-53-14	050-099
	29		W0704	022	20		25-53-14	150-199, 275-299
	30		W0704	066	20		25-53-14	050-099
	30	UNUSED						150-199, 275-299
	31		W0704	181	20		25-53-14	050-099
	31		W0704	591	20		25-53-14	150-199, 275-299
	32		W0704	182	20		25-53-14	050-099
	32		W0704	592	20		25-53-14	150-199, 275-299
	33		W0704	519	20		25-53-14	050-099
	33		W0704	021	20		25-53-14	150-199, 275-299
	34		W0704	101	20		25-53-14	050-099
	34		W0704	593	20		25-53-14	150-199, 275-299
	35		W0704	102	20		25-53-14	050-099
	35		W0704	595	20		25-53-14	150-199, 275-299
	36	UNUSED						050-099
	36		W0704	547	20		25-53-14	150-199, 275-299
	37		W0704	001	20		25-53-14	050-099
	37		W0704	002	20		25-53-14	150-199, 275-299
	38		W0704	002	20		25-53-14	050-099
	38		W0704	006	20		25-53-14	150-199, 275-299
	39	UNUSED						050-099
	39		W0704	614	20		25-53-14	150-199, 275-299
	40		W0704	566	20		25-53-14	ALL
	41	UNUSED						050-099
	41		W0704	615	20		25-53-14	150-199, 275-299
	42		W0704	096	20		25-53-14	150-199, 275-299
	43		W0704	092	20		25-53-14	150-199, 275-299
	44		W0704	066	20		25-53-14	150-199, 275-299
	45		W0704	548	20		25-53-14	150-199, 275-299
	46	UNUSED						150-199, 275-299
	47	UNUSED						150-199, 275-299
	48	UNUSED						150-199, 275-299
	49	UNUSED						150-199, 275-299
	50	UNUSED						150-199, 275-299
	51	UNUSED						150-199, 275-299

HOOKUP LIST

D280T132

91-21-51

Section D05200

Page 32

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05224P		AC0506/ /		PLUG-P35 (continued)				ALL
	52	UNUSED						150-199, 275-299
	53	UNUSED						150-199, 275-299
	54	UNUSED						150-199, 275-299
	55	UNUSED						150-199, 275-299
D05225J		327/124/0		RCPT-E2-3				050-099, 155-199, 276-299
D05225J		AE0307/ /		RCPT-E2-3				150-154, 275
	1		W1307	040	22		31-31-18	ALL
	2		W1307	039	22		31-31-18	ALL
	3		W1307	041	22		31-31-18	ALL
	4		W1307	038	22		31-31-18	ALL
	5		W1307	037	22		31-31-18	ALL
	6		W1307	036	22		31-31-18	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9		W1307	100	24		34-61-14	050-099, 150-199, 276-299
	9	UNUSED						275
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	DED		W1307	100Z			34-61-14	050-099, 150-199, 276-299
D05225P		AE0307/ /		PLUG- E2-3				ALL
	1		W0135	039	22		31-31-18	ALL
	2		W0135	040	22		31-31-18	ALL
	3		W0135	041	22		31-31-18	ALL
	4		W0135	042	22		31-31-18	ALL
	5		W0135	043	22		31-31-18	ALL
	6		W0135	044	22		31-31-18	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9		W0135	854	24		34-61-14	050-099, 150-199, 276-299
	9	UNUSED						275
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D05200
Page 33
Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05225P		AE0307/ /		PLUG- E2-3 (continued)				ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
D05227J		AE0306/ /		RCPT-E2-3				ALL
	1		W1701	001	24		22-14-31	ALL
	2		W1701	025	24		22-14-31	ALL
	3		W1701	007	24		31-31-11	ALL
	4		W1701	008	24		31-51-41	ALL
	5		W1701	009	24		31-51-41	ALL
	6		W1701	010	24		31-51-41	ALL
	7		W1701	011	24		31-51-41	ALL
	8		W1701	203R	24		31-31-13	ALL
	9		W1701	203B	24		31-31-13	ALL
	10		W1701	203Z			31-31-13	ALL
	11		W1701	012	24		31-51-42	ALL
	12		W1701	013	24		34-16-11	ALL
	13		W1701	017	24		34-46-12	ALL
	14		W1701	026	24		34-12-62	ALL
	15		W1701	019	24		SPARE	ALL
	16		W1701	020	24		31-31-13	ALL
	17		W1701	204R	24		34-61-14	ALL
	18		W1701	204B	24		34-61-14	ALL
	19		W1701	204Z			34-61-14	ALL
	20		W1701	205R	24		34-61-15	ALL
	21		W1701	205B	24		34-61-15	ALL
	22		W1701	205Z			34-61-15	ALL
	23		W1701	021	24		34-61-15	ALL
	24		W1701	022	24		31-41-16	ALL
	25		W1701	208R	24		SPARE	ALL
	26		W1701	208B	24		SPARE	ALL
	27		W1701	208Z			SPARE	ALL
	28		W1701	023	24		31-51-41	ALL
	29		W1701	024	24		34-53-11	ALL
	30		W1701	028	24		31-41-16	ALL
	31		W1701	029	24		34-22-38	ALL
	32		W1701	030	24		31-51-43	ALL
	33		W1701	211R	24		31-31-20	ALL
	34		W1701	211B	24		31-31-20	ALL
	35		W1701	211Z			31-31-20	ALL
	36		W1701	210R	24		31-31-20	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05200

Page 34

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05227J		AE0306/ /		RCPT-E2-3 (continued)				ALL
	37		W1701	210B	24		31-31-20	ALL
	38		W1701	210Z			31-31-20	ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						050-099, 150-199
	43	UNUSED						050-099, 150-199
	44	UNUSED						050-099, 150-199
	45	UNUSED						050-099, 150-199
	46	UNUSED						050-099, 150-199
	47		W1701	051	22		31-31-25	050-099, 150-199
	48		W1701	212R	22		31-31-25	050-099, 150-199
	49		W1701	212B	22		31-31-25	050-099, 150-199
	50		W1701	052	22		31-31-25	050-099, 150-199
	51		W1701	213R	22		31-31-25	050-099, 150-199
	52		W1701	213B	22		31-31-25	050-099, 150-199
	53		W1701	053	22		31-31-25	050-099, 150-199
	54		W1701	214R	22		31-31-25	050-099, 150-199
	55		W1701	214B	22		31-31-25	050-099, 150-199
	REF	JW	W1701	018	24		SPARE	ALL
D05227P		AE0306/ /		PLUG-E2-3				ALL
	1		W0135	120	24		22-14-31	ALL
	2		W0135	121	24		22-14-31	ALL
	3		W0135	122	24		31-31-11	ALL
	4		W0135	123	24		31-51-41	ALL
	5		W0135	124	24		31-51-41	ALL
	6		W0135	125	24		31-51-41	ALL
	7		W0135	126	24		31-51-41	ALL
	8		W0135	793R	24		31-31-13	ALL
	9		W0135	793B	24		31-31-13	ALL
	10		W0135	793Z			31-31-13	ALL
	11		W0135	127	24		31-51-42	ALL
	12		W0135	128	24		34-16-11	ALL
	13		W0135	106	22		34-46-12	ALL
	14		W0135	672	24		34-12-62	ALL
	15	UNUSED						ALL
	16		W0135	131	24		31-31-13	ALL
	17		W0135	276R	24		34-61-14	ALL
	18		W0135	276B	24		34-61-14	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05200

Page 35

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05227P		AE0306/ /		PLUG-E2-3 (continued)				ALL
	19		W0135	276Z			34-61-14	ALL
	20		W0135	277R	24		34-61-15	ALL
	21		W0135	277B	24		34-61-15	ALL
	22		W0135	277Z			34-61-15	ALL
	23		W0135	132	24		34-61-15	ALL
	24		W0135	133	24		31-41-16	ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28		W0135	134	24		31-51-41	ALL
	29		W0135	130	24		34-53-11	ALL
	30		W0135	140	24		31-41-16	ALL
	31		W0135	195	22		34-22-38	ALL
	32		W0135	129	24		31-51-43	ALL
	33		W0135	568R	24		31-31-20	ALL
	34		W0135	568B	24		31-31-20	ALL
	35		W0135	568Z			31-31-20	ALL
	36		W0135	571R	24		31-31-20	ALL
	37		W0135	571B	24		31-31-20	ALL
	38		W0135	571Z			31-31-20	ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						050-099, 150-199
	43	UNUSED						050-099, 150-199
	44	UNUSED						050-099, 150-199
	45	UNUSED						050-099, 150-199
	46	UNUSED						050-099, 150-199
	47		W0135	784	22		31-31-25	050-099, 150-199
	48		W0135	594R	22		31-31-25	050-099, 150-199
	49		W0135	594B	22		31-31-25	050-099, 150-199
	50		W0135	786	22		31-31-25	050-099, 150-199
	51		W0135	595R	22		31-31-25	050-099, 150-199
	52		W0135	595B	22		31-31-25	050-099, 150-199
	53		W0135	788	22		31-31-25	050-099, 150-199
	54		W0135	596R	22		31-31-25	050-099, 150-199
	55		W0135	596B	22		31-31-25	050-099, 150-199
D05229J		AE0306/ /		RCPT-E2-3				ALL
	1		W1603	006	24		31-31-13	ALL

HOOKUP LIST
D280T132



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05229J		AE0306/ /		RCPT-E2-3 (continued)				ALL
	2		W1603	007	24		SPARE	050-099, 150-199 275-299
	2	UNUSED						
	3		W1603	008	24		31-31-13	ALL
	4		W1603	009	24		31-31-13	ALL
	5		W1603	010	24		31-31-13	ALL
	6		W1603	011	24		31-31-13	ALL
	7		W1603	012	24		31-31-13	ALL
	8		W1603	013	24		31-31-13	ALL
	9		W1603	014	24		31-31-13	ALL
	10		W1603	015	24		31-31-22	ALL
	11		W1603	065	24		34-12-61	050-099, 152
	11	UNUSED						150-151, 153-199, 275-299
	12		W1603	066	24		34-12-61	050-099, 152
	12		W1603	065	24		34-12-61	150-151, 153-199, 275-299
	13		W1603	069	24		34-12-61	050-099, 152
	13		W1603	066	24		34-12-61	150-151, 153-199, 275-299
	14		W1603	232B	24		34-12-61	050-099, 152
	14		W1603	069	24		34-12-61	150-151, 153-199, 275-299
	15		W1603	232R	24		34-12-61	050-099, 152
	15		W1603	232B	24		34-12-61	150-151, 153-199, 275-299
	16		W1603	232Z	24		34-12-61	050-099, 152
	16		W1603	232R	24		34-12-61	150-151, 153-199, 275-299
	17	UNUSED						050-099, 152
	17		W1603	232Z			34-12-61	150-151, 153-199, 275-299
	18		W1603	038	24		34-61-25	ALL
	19		W1603	218R	24		34-61-24	ALL
	20		W1603	218B	24		34-61-24	ALL
	21		W1603	218Z			34-61-24	ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24		W1603	043	24		31-31-19	ALL
	25		W1603	217R	24		31-31-20	ALL
	26		W1603	217B	24		31-31-20	ALL
	27		W1603	217Z			31-31-20	ALL
	28		W1603	034	24		31-31-21	ALL
	29		W1603	035	24		31-31-21	ALL
	30	UNUSED						050-099
	30		W1603	030	22		SPARE	150-199, 275-299
	31	UNUSED						ALL
	32	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D05200

Page 37

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05229J		AE0306/ /		RCPT-E2-3 (continued)				ALL
	33	UNUSED						ALL
	34		W1603	101	22		31-31-22	ALL
	35		W1603	216R	22		31-31-22	ALL
	36		W1603	216B	22		31-31-22	ALL
	37		W1603	216Z			31-31-22	ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
D05229P		AE0306/ /		PLUG-E2-3				ALL
	1		W0135	084	24		31-31-13	ALL
	2	UNUSED						ALL
	3		W0135	086	24		31-31-13	ALL
	4		W0135	087	24		31-31-13	ALL
	5		W0135	088	24		31-31-13	ALL
	6		W0135	089	24		31-31-13	ALL
	7		W0135	090	24		31-31-13	ALL
	8		W0135	091	24		31-31-13	ALL
	9		W0135	092	24		31-31-13	ALL
	10		W0135	183	24		31-31-22	ALL
	11		W0135	01I	24		34-12-61	050-099, 152
	11	UNUSED						150-151, 153-199, 275-299
	12		W0135	01J	24		34-12-61	050-099, 152
	12		W0135	01I	24		34-12-61	150-151, 153-199, 275-299
	13		W0135	01H	24		34-12-61	050-099, 152
	13		W0135	01J	24		34-12-61	150-151, 153-199, 275-299
	14		W0135	01GB	24		34-12-61	050-099, 152
	14		W0135	01H	24		34-12-61	150-151, 153-199, 275-299
	15		W0135	01GR	24		34-12-61	050-099, 152
	15		W0135	01GB	24		34-12-61	150-151, 153-199, 275-299
	16		W0135	01GZ			34-12-61	050-099, 152
	16		W0135	01GR	24		34-12-61	150-151, 153-199, 275-299
	17	UNUSED						050-099, 152
	17		W0135	01GZ			34-12-61	150-151, 153-199, 275-299
	18		W0135	809	24		34-61-25	ALL
	19		W0135	792R	24		34-61-24	ALL
	20		W0135	792B	24		34-61-24	ALL
	21		W0135	792Z			34-61-24	ALL
	22	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D05200

Page 38

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05229P		AE0306/ /		PLUG-E2-3 (continued)				ALL
	23	UNUSED						ALL
	24		W0135	660	24		31-31-19	ALL
	25		W0135	566R	24		31-31-20	ALL
	26		W0135	566B	24		31-31-20	ALL
	27		W0135	566Z			31-31-20	ALL
	28		W0135	729	24		31-31-21	ALL
	29		W0135	726	24		31-31-21	ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33		W0135	174	24		SPARE	ALL
	34		W0135	180	22		31-31-22	ALL
	35		W0135	589R	24		31-31-22	ALL
	36		W0135	589B	24		31-31-22	ALL
	37		W0135	589Z			31-31-22	ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
D05230J		AE0317/ /		RCPT-E1-1				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W0738	005	22		32-42-11	ALL
	6		W0738	006	22		32-42-11	ALL
	7		W0738	007	22		32-42-11	ALL
	8		W0738	084	22		SPARE	050-099, 150-199, 277-278
	8	UNUSED						275-276, 280-299
	9		W0738	803	22		SPARE	ALL
	10		W0738	085	22		SPARE	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
D05230P		AE0317/ /		PLUG-E1-1				ALL
	1	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D05200
Page 39
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05230P		AE0317/ /		PLUG-E1-1 (continued)				ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W1084	029	24		32-42-11	ALL
	6		W1084	030	24		32-42-11	ALL
	7		W1084	031	24		32-42-11	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
D05233J		AL0901/ /		RCPT-				ALL
	1		W0899	WRD	20		27-61-13	ALL
	2		W0899	WBK	20		27-61-13	ALL
	3		W0899	WBU	20		27-61-13	ALL
	4		W0899	WVI	20		27-61-13	ALL
	5		W0899	WOR	20		27-61-13	ALL
	6		W0899	WBN	20		27-61-13	ALL
	7		W0899	WRB	20		27-61-13	ALL
D05233P		AL0901/ /		PLUG-				ALL
	1		W1261	201R	20		27-61-13	ALL
	2		W1261	203R	20		27-61-13	ALL
	3		W1261	201B	20		27-61-13	ALL
	4		W1261	203B	20		27-61-13	ALL
	5		W1261	301R	20		27-61-13	ALL
	6		W1261	301B	20		27-61-13	ALL
	7		W1261	301Y	20		27-61-13	ALL
D05235J		AL1005/ /		RCPT-				ALL
	1		W1207	WRD	20		27-61-17	ALL
	2		W1207	WBK	20		27-61-17	ALL
	3		W1207	WBU	20		27-61-17	ALL
	4		W1207	WVI	20		27-61-17	ALL
	5		W1207	WOR	20		27-61-17	ALL
	6		W1207	WBN	20		27-61-17	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05200

Page 40

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05235J		AL1005/ /		RCPT- (continued)				ALL
	7		W1207	WRB	20		27-61-17	ALL
D05235P D05235P		AL1005/ / 1043/193/L057		PLUG- PLUG-				050-099 150-199, 275-299
	1		W1263	201R	20		27-61-17	ALL
	2		W1263	203R	20		27-61-17	ALL
	3		W1263	201B	20		27-61-17	ALL
	4		W1263	203B	20		27-61-17	ALL
	5		W1263	302R	20		27-61-17	ALL
	6		W1263	302B	20		27-61-17	ALL
	7		W1263	302Y	20		27-61-17	ALL
D05237J		AL0901/ /		RCPT-				ALL
	1		W1209	WRD	20		27-61-18	ALL
	2		W1209	WBK	20		27-61-18	ALL
	3		W1209	WBU	20		27-61-18	ALL
	4		W1209	WVI	20		27-61-18	ALL
	5		W1209	WOR	20		27-61-18	ALL
	6		W1209	WBN	20		27-61-18	ALL
	7		W1209	WRB	20		27-61-18	ALL
D05237P D05237P		AL0901/ / 0977/178/L092		PLUG-1 PLUG-1				050-099 150-199, 275-299
	1		W1265	201R	20		27-61-18	ALL
	2		W1265	203R	20		27-61-18	ALL
	3		W1265	201B	20		27-61-18	ALL
	4		W1265	203B	20		27-61-18	ALL
	5		W1265	301R	20		27-61-18	ALL
	6		W1265	301B	20		27-61-18	ALL
	7		W1265	301Y	20		27-61-18	ALL
D05239J		AL0902/ /		RCPT-				ALL
	1		W1211	WRD	20		27-61-18	ALL
	2		W1211	WBK	20		27-61-18	ALL
	3		W1211	WBU	20		27-61-18	ALL
	4		W1211	WVI	20		27-61-18	ALL
	5		W1211	WOR	20		27-61-18	ALL
	6		W1211	WBN	20		27-61-18	ALL
	7		W1211	WRB	20		27-61-18	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05200

Page 41

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05239P		AL0902/ /		PLUG-2				050-099
D05239P		0977/178/R092		PLUG-2				150-199, 275-299
	1		W1265	204R	20		27-61-18	ALL
	2		W1265	206R	20		27-61-18	ALL
	3		W1265	204B	20		27-61-18	ALL
	4		W1265	206B	20		27-61-18	ALL
	5		W1265	302R	20		27-61-18	ALL
	6		W1265	302B	20		27-61-18	ALL
	7		W1265	302Y	20		27-61-18	ALL
D05241J		AL1006/ /		RCPT-				ALL
	1		W1213	WRD	20		27-61-17	ALL
	2		W1213	WBK	20		27-61-17	ALL
	3		W1213	WBU	20		27-61-17	ALL
	4		W1213	WVI	20		27-61-17	ALL
	5		W1213	WOR	20		27-61-17	ALL
	6		W1213	WBN	20		27-61-17	ALL
	7		W1213	WRB	20		27-61-17	ALL
D05241P		AL1006/ /		PLUG-				050-099
D05241P		1043/193/R057		PLUG-				150-199, 275-299
	1		W1263	204R	20		27-61-17	ALL
	2		W1263	206R	20		27-61-17	ALL
	3		W1263	204B	20		27-61-17	ALL
	4		W1263	206B	20		27-61-17	ALL
	5		W1263	303R	20		27-61-17	ALL
	6		W1263	303B	20		27-61-17	ALL
	7		W1263	303Y	20		27-61-17	ALL
D05243J		AL0902/ /		RCPT-				ALL
	1		W1221	WRD	20		27-61-13	ALL
	2		W1221	WBK	20		27-61-13	ALL
	3		W1221	WBU	20		27-61-13	ALL
	4		W1221	WVI	20		27-61-13	ALL
	5		W1221	WOR	20		27-61-13	ALL
	6		W1221	WBN	20		27-61-13	ALL
	7		W1221	WRB	20		27-61-13	ALL
D05243P		AL0902/ /		PLUG-				ALL
	1		W1261	204R	20		27-61-13	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05200

Page 42

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05243P		AL0902/ /		PLUG- (continued)				ALL
	2		W1261	206R	20		27-61-13	ALL
	3		W1261	204B	20		27-61-13	ALL
	4		W1261	206B	20		27-61-13	ALL
	5		W1261	302R	20		27-61-13	ALL
	6		W1261	302B	20		27-61-13	ALL
	7		W1261	302Y	20		27-61-13	ALL
D05247J		AE0319/ /		RCPT-E1-3				ALL
	1		W1701	003	24		SPARE	ALL
	2		W1701	004	24		SPARE	ALL
	3		W1701	005	24		SPARE	ALL
	4		W1701	201R	24		22-32-12	ALL
	5		W1701	201B	24		22-32-12	ALL
	6		W1701	201Z			22-32-12	ALL
	7		W1701	006	24		22-34-11	ALL
	8		W1701	202R	24		22-41-13	ALL
	9		W1701	202B	24		22-41-13	ALL
	10		W1701	202Z			22-41-13	ALL
	11		W1701	014	24		34-21-11	ALL
	12		W1701	015	24		34-21-11	ALL
	13		W1701	016	24		34-21-11	ALL
	14		W1701	002	24		77-35-11	ALL
	15		W1701	206R	24		31-41-31	ALL
	16		W1701	206B	24		31-41-31	ALL
	17		W1701	206Z			31-41-31	ALL
	18		W1701	207R	24		31-41-31	ALL
	19		W1701	207B	24		31-41-31	ALL
	20		W1701	207Z			31-41-31	ALL
	21		W1701	051	22		31-31-25	050-099, 150-199
	21	UNUSED						275-299
	22		W1701	212R	22		31-31-25	050-099, 150-199
	22	UNUSED						275-299
	23		W1701	212B	22		31-31-25	050-099, 150-199
	23	UNUSED						275-299
	24		W1701	052	22		31-31-25	050-099, 150-199
	24	UNUSED						275-299
	25		W1701	213R	22		31-31-25	050-099, 150-199
	25	UNUSED						275-299
	26		W1701	213B	22		31-31-25	050-099, 150-199
	26	UNUSED						275-299

HOOKUP LIST
D280T132

91-21-51
Section D05200
Page 43
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05247J		AE0319/ /		RCPT-E1-3 (continued)				ALL
	27		W1701	214R	22		31-31-25	050-099, 150-199
	27	UNUSED						275-299
	28		W1701	214B	22		31-31-25	050-099, 150-199
	28	UNUSED						275-299
	29		W1701	027	24		34-12-12	ALL
	30		W1701	210R	24		31-31-20	ALL
	31		W1701	210B	24		31-31-20	ALL
	32		W1701	210Z			31-31-20	ALL
	33		W1701	211R	24		31-31-20	ALL
	34		W1701	211B	24		31-31-20	ALL
	35		W1701	211Z			31-31-20	ALL
	36		W1701	053	22		31-31-25	050-099, 150-199
	36	UNUSED						275-299
	37	UNUSED						050-099, 150-156, 162-166, 275-276
	37		W1701	049	24		27-48-11	157, 167-199, 277-299
	38	UNUSED						050-099, 150-156, 162-166, 275-276
	38		W1701	054	24		27-48-11	157, 167-199, 277-299
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
D05247P		AE0319/ /		PLUG-E1-3				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W0105	699R	24		22-32-12	ALL

HOOKUP LIST
D280T132

91-21-51
Section D05200
Page 44
Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05247P		AE0319/ /		PLUG-E1-3 (continued)				ALL
	5		W0105	699B	24		22-32-12	ALL
	6		W0105	699Z			22-32-12	ALL
	7		W0105	854	24		22-34-11	ALL
	8		W0105	698R	24		22-41-13	ALL
	9		W0105	698B	24		22-41-13	ALL
	10		W0105	698Z			22-41-13	ALL
	11		W0105	855	22		34-21-11	ALL
	12		W0105	856	22		34-21-11	ALL
	13		W0105	857	22		34-21-11	ALL
	14		W0105	614	24		77-35-11	ALL
	15		W0105	694R	24		31-41-31	ALL
	16		W0105	694B	24		31-41-31	ALL
	17		W0105	694Z			31-41-31	ALL
	18		W0105	695R	24		31-41-31	ALL
	19		W0105	695B	24		31-41-31	ALL
	20		W0105	695Z			31-41-31	ALL
	21		W0105	056	22		31-31-25	050-099, 150-199
	21	UNUSED						275-299
	22		W0105	578R	22		31-31-25	050-099, 150-199
	22	UNUSED						275-299
	23		W0105	578B	22		31-31-25	050-099, 150-199
	23	UNUSED						275-299
	24		W0105	892	22		31-31-25	050-099, 150-199
	24	UNUSED						275-299
	25		W0105	579R	22		31-31-25	050-099, 150-199
	25	UNUSED						275-299
	26		W0105	579B	22		31-31-25	050-099, 150-199
	26	UNUSED						275-299
	27		W0105	580R	22		31-31-25	050-099, 150-199
	27	UNUSED						275-299
	28		W0105	580B	22		31-31-25	050-099, 150-199
	28	UNUSED						275-299
	29		W0105	191	24		34-12-12	ALL
	30		W0105	573R	24		31-31-20	ALL
	31		W0105	573B	24		31-31-20	ALL
	32		W0105	573Z			31-31-20	ALL
	33		W0105	574R	24		31-31-20	ALL
	34		W0105	574B	24		31-31-20	ALL
	35		W0105	574Z			31-31-20	ALL
	36		W0105	893	22		31-31-25	050-099, 150-199

HOOKUP LIST

D280T132

91-21-51

Section D05200

Page 45

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05247P		AE0319/ /		PLUG-E1-3 (continued)				ALL
	36	UNUSED						275-299
	37	UNUSED						050-099, 150-156, 162-166, 275-276
	37		W0105	122	24		27-48-11	157, 167-199, 277-299
	38	UNUSED						050-099, 150-156, 162-166, 275-276
	38		W0105	123	24		27-48-11	157, 167-199, 277-299
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
D05250J		AC1304/ /		RCPT-P39				ALL
	1		W1068	501	22		25-53-21	ALL
	2		W1068	502	20		25-53-21	ALL
	3		W1068	503	20		25-53-21	ALL
	4		W1068	504	22		25-53-23	ALL
	5		W1068	37J	22		25-53-26	ALL
	6		W1068	37G	22		25-53-26	ALL
	7		W1068	507	22		25-53-27	050-099, 150-199
	7	UNUSED						275-299
	8		W1068	37P	22		25-53-27	050-099, 150-199
	8	UNUSED						275-299
	9	UNUSED						ALL
	10	UNUSED						ALL
	11		W1068	511	22		25-53-21	ALL
	12	UNUSED						ALL
	13		W1068	513	22		25-53-23	050-099
	13		W1068	183	22		25-53-23	150-199, 275-299

HOOKUP LIST

D280T132

91-21-51

Section D05200

Page 46

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05250J		AC1304/ /		RCPT-P39 (continued)				ALL
	14		W1068	846	22		25-53-24	050-099
	14		W1068	799	22		25-53-24	150-199, 275-299
	15		W1068	847	22		25-53-24	050-099
	15		W1068	515	22		25-53-24	150-199, 275-299
	16		W1068	516	22		25-53-23	ALL
	17		W1068	517	22		25-53-23	ALL
	18		W1068	518	22		25-53-25	050-099
	18		W1068	577	22		25-53-24	150-199, 275-299
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22		W1068	37H	22		25-53-26	ALL
	23		W1068	37N	22		25-53-27	050-099, 150-199
	23	UNUSED						275-299
	24		W1068	37M	22		25-53-27	050-099, 150-199
	24	UNUSED						275-299
D05250P		AC1304/ /		PLUG-P39				ALL
	1		W0706	001	20		25-53-21	ALL
	2		W0706	002	20		25-53-21	ALL
	3		W0706	003	20		25-53-21	ALL
	4		W0706	004	20		25-53-23	ALL
	5		W0706	005	20		25-53-26	ALL
	6		W0706	006	20		25-53-26	ALL
	7		W0706	007	20		25-53-27	050-099, 150-199
	7	UNUSED						275-299
	8		W0706	008	20		25-53-27	050-099, 150-199
	8	UNUSED						275-299
	9	UNUSED						ALL
	10	UNUSED						ALL
	11		W0706	011	20		25-53-21	ALL
	12	UNUSED						ALL
	13		W0706	013	20		25-53-23	ALL
	14		W0706	014	20		25-53-24	ALL
	15		W0706	015	20		25-53-24	ALL
	16		W0706	016	20		25-53-23	ALL
	17		W0706	017	20		25-53-23	ALL
	18		W0706	018	20		25-53-25	050-099
	18		W0706	018	20		25-53-24	150-199, 275-299
	19	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51
 Section D05200
 Page 47
 Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05250P		AC1304/ /		PLUG-P39 (continued)				ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22		W0706	022	20		25-53-26	ALL
	23		W0706	023	20		25-53-27	050-099, 150-199 275-299
	23	UNUSED						275-299
	24		W0706	024	20		25-53-27	050-099, 150-199 275-299
	24	UNUSED						275-299
D05251J		0688/265/L085		RCPT-				280-299
	1		W1383	021	24		23-34-16	280-299
	2	FL	W1383	023	16		23-34-16	280-299
	3	FL	W1383	022	16		23-34-16	280-299
	4		W1383	020	24		23-34-16	280-299
	5		W1383	024	24		23-34-16	280-299
D05252J		AC1304/ /		RCPT-P39				ALL
	1		W1068	101	22		25-53-25	ALL
	2		W1068	102	22		25-53-25	ALL
	3		W1068	103	22		25-53-25	ALL
	4		W1068	104	22		25-53-25	ALL
	5		W1068	105	22		25-53-25	ALL
	6		W1068	106	22		25-53-25	ALL
	7		W1068	107	22		25-53-25	ALL
	8		W1068	108	22		25-53-25	ALL
	9		W1068	109	22		25-53-25	ALL
	10		W1068	110	22		25-53-25	ALL
	11		W1068	111	22		25-53-25	ALL
	12		W1068	112	22		25-53-25	ALL
	13		W1068	113	22		25-53-26	ALL
	14		W1068	114	22		25-53-26	ALL
	15		W1068	115	22		25-53-26	ALL
	16		W1068	116	22		25-53-26	ALL
	17		W1068	117	22		25-53-26	ALL
	18		W1068	118	22		25-53-26	ALL
	19		W1068	119	22		25-53-26	ALL
	20		W1068	120	22		25-53-26	ALL
	21		W1068	121	22		25-53-27	050-099, 150-199 275-299
	21	UNUSED						275-299
	22		W1068	122	22		25-53-27	050-099, 150-199 275-299
	22	UNUSED						275-299

HOOKUP LIST

D280T132

91-21-51

Section D05200

Page 48

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05252J		AC1304/ /		RCPT-P39 (continued)				ALL
	23		W1068	123	22		25-53-27	050-099, 150-199
	23	UNUSED						275-299
	24		W1068	124	22		25-53-27	050-099, 150-199
	24	UNUSED						275-299
	25		W1068	125	22		25-53-27	050-099, 150-199
	25	UNUSED						275-299
	26		W1068	126	22		25-53-27	050-099, 150-199
	26	UNUSED						275-299
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
D05252P		AC1304/ /		PLUG-P39				ALL
	1		W0708	002	20		25-53-25	ALL
	2		W0708	003	20		25-53-25	ALL
	3		W0708	012	20		25-53-25	ALL
	4		W0708	013	20		25-53-25	ALL
	5		W0708	022	20		25-53-25	ALL
	6		W0708	023	20		25-53-25	ALL
	7		W0708	032	20		25-53-25	ALL
	8		W0708	033	20		25-53-25	ALL
	9		W0708	042	20		25-53-25	ALL
	10		W0708	043	20		25-53-25	ALL
	11		W0708	052	20		25-53-25	ALL
	12		W0708	053	20		25-53-25	ALL
	13		W0708	082	20		25-53-26	ALL
	14		W0708	083	20		25-53-26	ALL
	15		W0708	072	20		25-53-26	ALL
	16		W0708	073	20		25-53-26	ALL
	17		W0708	062	20		25-53-26	ALL
	18		W0708	063	20		25-53-26	ALL
	19		W0708	092	20		25-53-26	ALL
	20		W0708	093	20		25-53-26	ALL
	21		W0708	102	20		25-53-27	050-099, 150-199
	21	UNUSED						275-299
	22		W0708	103	20		25-53-27	050-099, 150-199
	22	UNUSED						275-299
	23		W0708	105	20		25-53-27	050-099, 150-199

HOOKUP LIST

D280T132

91-21-51
 Section D05200
 Page 49
 Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05252P		AC1304/ /		PLUG-P39 (continued)				ALL
	23	UNUSED						275-299
	24		W0708	112	20		25-53-27	050-099, 150-199
	24	UNUSED						275-299
	25		W0708	113	20		25-53-27	050-099, 150-199
	25	UNUSED						275-299
	26		W0708	115	20		25-53-27	050-099, 150-199
	26	UNUSED						275-299
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
D05253J		0686/315/L013		RCPT-				280-299
	1		W1381	021	24		23-34-17	280-299
	2	FL	W1381	023	16		23-34-17	280-299
	3	FL	W1381	022	16		23-34-17	280-299
	4		W1381	020	24		23-34-17	280-299
	5		W1381	024	24		23-34-17	280-299
D05254J		AC1304/ /		RCPT-P39				ALL
	1		W1068	301B	20		25-53-22	ALL
	2		W1068	301R	20		25-53-22	ALL
	3		W1068	301Y	20		25-53-22	ALL
	4		W1068	302B	20		25-53-22	ALL
	5		W1068	302R	20		25-53-22	ALL
	6		W1068	302Y	20		25-53-22	ALL
	7		W1068	303B	20		25-53-22	050-099
	7		W1068	341B	20		25-53-22	150-199, 275-299
	8		W1068	303R	20		25-53-22	050-099
	8		W1068	341R	20		25-53-22	150-199, 275-299
	9		W1068	303Y	20		25-53-22	050-099
	9		W1068	341Y	20		25-53-22	150-199, 275-299
	10	UNUSED						ALL
	11		W1068	304B	20		25-53-22	ALL
	12		W1068	304R	20		25-53-22	ALL
	13		W1068	304Y	20		25-53-22	ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D05200

Page 50

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05254P		AC1304/ /		PLUG-P39				ALL
	1		W0710	301B	20		25-53-22	ALL
	2		W0710	301R	20		25-53-22	ALL
	3		W0710	301Y	20		25-53-22	ALL
	4		W0710	302B	20		25-53-22	ALL
	5		W0710	302R	20		25-53-22	ALL
	6		W0710	302Y	20		25-53-22	ALL
	7		W0710	303B	20		25-53-22	050-099
	7		W0710	338B	20		25-53-22	150-199, 275-299
	8		W0710	303R	20		25-53-22	050-099
	8		W0710	338R	20		25-53-22	150-199, 275-299
	9		W0710	303Y	20		25-53-22	050-099
	9		W0710	338Y	20		25-53-22	150-199, 275-299
	10	UNUSED						ALL
	11		W0710	304B	20		25-53-22	ALL
	12		W0710	304R	20		25-53-22	ALL
	13		W0710	304Y	20		25-53-22	ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
D05255J		AF0119/ /		RCPT-P1				ALL
	1		W1311	003	22		SPARE	ALL
	2	UNUSED						ALL
	3		W1311	202R	24		22-31-12	ALL
	4		W1311	202B	24		22-31-12	ALL
	5		W1311	203R	22		22-31-12	ALL
	6		W1311	203B	22		22-31-12	ALL
	7		W1311	209R	24		22-31-12	ALL
	8		W1311	209B	24		22-31-12	ALL
	9		W1311	FRE			22-32-11	ALL
	10		W1311	215R	24		31-31-20	ALL
	11		W1311	215B	24		31-31-20	ALL
	12		W1311	FRO			31-31-20	ALL
	13		W1311	205R	24		22-32-11	ALL
	14		W1311	205B	24		22-32-11	ALL
	15		W1311	206R	24		22-32-12	ALL
	16		W1311	206B	24		22-32-12	ALL
	17		W1311	206Z			22-32-12	ALL
	18		W1311	004	24		31-51-43	ALL
	19		W1311	020	24		34-61-16	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05200

Page 51

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05255J		AF0119/ /		RCPT-P1 (continued)				ALL
	20		W1311	010	22		34-46-11	ALL
	21		W1311	011	22		34-46-11	ALL
	22		W1311	012	24		34-46-11	ALL
	23		W1311	013	22		34-46-11	ALL
	24		W1311	021	24		34-61-16	ALL
	25		W1311	023	24		34-61-16	050-099, 155-199, 275-299
	25	UNUSED						150-154
	26		W1311	022	24		34-61-26	050-099, 155-199, 275-299
	26	UNUSED						150-154
	27		W1311	007	24		31-51-42	ALL
	28		W1311	208R	22		SPARE	ALL
	29		W1311	208B	22		SPARE	ALL
	30		W1311	208Z			SPARE	ALL
	31		W1311	014	22		SPARE	ALL
	32		W1311	009	24		34-16-11	ALL
	33	UNUSED						ALL
	34		W1311	210R	24		SPARE	ALL
	35		W1311	210B	24		SPARE	ALL
	36		W1311	210Z			SPARE	ALL
	37		W1311	027	24		34-12-12	ALL
	38		W1311	028	22		34-61-15	ALL
	39		W1311	201R	24		22-14-11	ALL
	40		W1311	201B	24		22-14-11	ALL
	41		W1311	FRA			22-14-11	ALL
	42		W1311	005	24		31-51-21	ALL
	43		W1311	006	24		31-51-21	ALL
	44		W1311	034	24		34-13-21	ALL
	45	UNUSED						ALL
	46		W1311	200R	24		34-45-14	050-099, 150-199, 277-299
	46	UNUSED						275-276
	47		W1311	200B	24		34-45-14	050-099, 150-199, 277-299
	47	UNUSED						275-276
	48		W1311	FRY			34-45-14	050-099, 150-199, 277-299
	48	UNUSED						275-276
	49	UNUSED						ALL
	50	UNUSED						050-099, 150-156, 162-166
	50		W1311	216R	24		34-22-81	157, 167-199, 275-299
	51	UNUSED						050-099, 150-156, 162-166
	51		W1311	216B	24		34-22-81	157, 167-199, 275-299
	52	UNUSED						050-099, 150-156, 162-166

HOOKUP LIST

D280T132

91-21-51

Section D05200

Page 52

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05255J		AF0119/ /		RCPT-P1 (continued)				ALL
	52		W1311	FRP			34-22-81	157, 167-199, 275-299
	53		W1311	036	22		34-12-61	ALL
	54		W1311	037	22		34-12-61	ALL
	55	UNUSED						ALL
	REF		W1311	216	20		34-22-81	157, 167-199, 275-299
	REF		W1311	216Z			34-22-81	157, 167-199, 275-299
	REF		W1311	FRP			34-22-81	157, 167-199, 275-299
			W1311	001	20		22-14-11	ALL
			W1311	201Z			22-14-11	ALL
			W1311	205	20		22-32-11	ALL
			W1311	205Z			22-32-11	ALL
			W1311	215	20		31-31-20	ALL
			W1311	215Z			31-31-20	ALL
			W1311	FRA			22-14-11	ALL
			W1311	FRE			22-32-11	ALL
			W1311	FRO			31-31-20	ALL
			W1311	200	20		34-45-14	050-099, 150-199, 277-299
			W1311	200Z			34-45-14	050-099, 150-199, 277-299
			W1311	FRY			34-45-14	050-099, 150-199, 277-299
D05255P		AF0119/ /		PLUG-P1				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W0011	260R	24		22-31-12	ALL
	4		W0011	260B	24		22-31-12	ALL
	5		W0011	261R	22		22-31-12	ALL
	6		W0011	261B	22		22-31-12	ALL
	7		W0011	262R	24		22-31-12	ALL
	8		W0011	262B	24		22-31-12	ALL
	9		W0011	263Z			22-32-11	ALL
	10		W0011	800R	24		31-31-20	ALL
	11		W0011	800B	24		31-31-20	ALL
	12		W0011	800Z			31-31-20	ALL
	13		W0011	263R	24		22-32-11	ALL
	14		W0011	263B	24		22-32-11	ALL
	15		W0011	242R	24		22-32-12	ALL
	16		W0011	242B	24		22-32-12	ALL
	17		W0011	242Z			22-32-12	ALL
	18		W0011	602	24		31-51-43	ALL
	19		W0011	826	24		34-61-16	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05200

Page 53

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05255P		AF0119/ /		PLUG-P1 (continued)				ALL
	20		W0011	627	22		34-46-11	ALL
	21		W0011	628	22		34-46-11	ALL
	22		W0011	629	24		34-46-11	ALL
	23		W0011	699	24		34-46-11	ALL
	24		W0011	825	24		34-61-16	ALL
	25		W0011	891	24		34-61-16	050-099, 155-199, 275-299
	25	UNUSED						150-154
	26		W0011	890	24		34-61-26	050-099, 155-199, 275-299
	26	UNUSED						150-154
	27		W0011	625	24		31-51-42	ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32		W0011	626	24		34-16-11	ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37		W0011	616	24		34-12-12	ALL
	38		W0011	622	22		34-61-15	ALL
	39		W0011	230R	24		22-14-11	ALL
	40		W0011	230B	24		22-14-11	ALL
	41		W0011	230Z			22-14-11	ALL
	42		W0011	099	24		31-51-21	ALL
	43		W0011	101	24		31-51-21	ALL
	44		W0011	038	24		34-13-21	ALL
	45	UNUSED						ALL
	46		W0011	282R	24		34-45-14	ALL
	47		W0011	282B	24		34-45-14	ALL
	48		W0011	282Z			34-45-14	ALL
	49	UNUSED						ALL
	50	UNUSED						050-099, 150-156, 162-166
	50		W0011	221R	24		34-22-81	157, 167-199, 275-299
	51	UNUSED						050-099, 150-156, 162-166
	51		W0011	221B	24		34-22-81	157, 167-199, 275-299
	52	UNUSED						050-099, 150-156, 162-166
	52		W0011	221Z			34-22-81	157, 167-199, 275-299
	53		W0011	01K	22		34-12-61	ALL
	54		W0011	01L	22		34-12-61	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05200

Page 54

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05255P		AF0119/ /		PLUG-P1 (continued)				ALL
	55	UNUSED						ALL
D05256J		AC1304/ /		RCPT-P39				ALL
	1		W1068	305B	20		25-53-22	ALL
	2		W1068	305R	20		25-53-22	ALL
	3		W1068	305Y	20		25-53-22	ALL
	4		W1068	306B	20		25-53-22	ALL
	5		W1068	306R	20		25-53-22	ALL
	6		W1068	306Y	20		25-53-22	ALL
	7		W1068	307B	20		25-53-22	ALL
	8		W1068	307R	20		25-53-22	ALL
	9		W1068	307Y	20		25-53-22	ALL
	10	UNUSED						ALL
	11		W1068	308B	20		25-53-22	050-099
	11		W1068	340B	20		25-53-22	150-199, 275-299
	12		W1068	308R	20		25-53-22	050-099
	12		W1068	340R	20		25-53-22	150-199, 275-299
	13		W1068	308Y	20		25-53-22	050-099
	13		W1068	340Y	20		25-53-22	150-199, 275-299
	14	UNUSED						ALL
D05256P		AC1304/ /		PLUG-P39				ALL
	1		W0710	305B	20		25-53-22	ALL
	2		W0710	305R	20		25-53-22	ALL
	3		W0710	305Y	20		25-53-22	ALL
	4		W0710	306B	20		25-53-22	ALL
	5		W0710	306R	20		25-53-22	ALL
	6		W0710	306Y	20		25-53-22	ALL
	7		W0710	307B	20		25-53-22	ALL
	8		W0710	307R	20		25-53-22	ALL
	9		W0710	307Y	20		25-53-22	ALL
	10	UNUSED						ALL
	11		W0710	308B	20		25-53-22	050-099
	11		W0710	333B	20		25-53-22	150-199, 275-299
	12		W0710	308R	20		25-53-22	050-099
	12		W0710	333R	20		25-53-22	150-199, 275-299
	13		W0710	308Y	20		25-53-22	050-099
	13		W0710	333Y	20		25-53-22	150-199, 275-299
	14	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D05200

Page 55

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05257J		AE0305/ /		RCPT-E1-5				ALL
	1		W1311	010	22		34-46-11	ALL
	2		W1311	011	22		34-46-11	ALL
	3		W1311	012	24		34-46-11	ALL
	4		W1311	013	22		34-46-11	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D05257P		AE0305/ /		PLUG-E1-5				ALL
	1		W0109	701	22		34-46-11	ALL
	2		W0109	615	22		34-46-11	ALL
	3		W0109	704	24		34-46-11	ALL
	4		W0109	107	22		34-46-11	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D05258J		AC1304/ /		RCPT-P39				ALL
	1		W1068	601	22		25-53-24	ALL
	2		W1068	603	22		25-53-24	ALL
	3	UNUSED						050-099
	3		W1068	35Y	22		25-53-24	150-199, 275-299
	4		W1068	611	22		25-53-24	ALL
	5		W1068	613	22		25-53-24	ALL
	6	UNUSED						050-099
	6		W1068	36A	22		25-53-24	150-199, 275-299
	7		W1068	621	22		25-53-24	ALL
	8		W1068	623	22		25-53-24	ALL
	9	UNUSED						050-099

HOOKUP LIST

D280T132

91-21-51

Section D05200

Page 56

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05258J		AC1304/ /		RCPT-P39 (continued)				ALL
	9		W1068	36B	22		25-53-24	150-199, 275-299
	10		W1068	683	22		25-53-24	ALL
	11		W1068	631	22		25-53-24	ALL
	12		W1068	633	22		25-53-24	ALL
	13	UNUSED						050-099
	13		W1068	36C	22		25-53-24	150-199, 275-299
	14		W1068	641	22		25-53-24	ALL
	15		W1068	643	22		25-53-24	ALL
	16	UNUSED						050-099
	16		W1068	36D	22		25-53-24	150-199, 275-299
	17		W1068	651	22		25-53-24	ALL
	18		W1068	653	22		25-53-24	ALL
	19	UNUSED						050-099
	19		W1068	36E	22		25-53-24	150-199, 275-299
	20		W1068	775	22		25-53-24	ALL
	21		W1068	661	22		25-53-24	ALL
	22		W1068	663	22		25-53-24	ALL
	23		W1068	665	22		25-53-24	ALL
	24		W1068	671	22		25-53-24	ALL
	25		W1068	673	22		25-53-24	ALL
	26		W1068	675	22		25-53-24	ALL
	27		W1068	691	22		25-53-24	ALL
	28		W1068	693	22		25-53-24	ALL
	29	UNUSED						050-099
	29		W1068	36F	22		25-53-24	150-199, 275-299
	30		W1068	777	22		25-53-24	ALL
	31		W1068	701	22		25-53-24	ALL
	32		W1068	703	22		25-53-24	ALL
	33	UNUSED						050-099
	33		W1068	36G	22		25-53-24	150-199, 275-299
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40		W1068	687	22		25-53-24	050-099
	40		W1068	34F	22		25-53-24	150-199, 275-299
	41	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D05200
Page 57
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05258P		AC1304/ /		PLUG-P39				ALL
	1		W0710	011	20		25-53-24	ALL
	2		W0710	012	20		25-53-24	ALL
	3	UNUSED						050-099
	3		W0710	147	20		25-53-24	150-199, 275-299
	4		W0710	111	20		25-53-24	ALL
	5		W0710	112	20		25-53-24	ALL
	6	UNUSED						050-099
	6		W0710	150	20		25-53-24	150-199, 275-299
	7		W0710	021	20		25-53-24	ALL
	8		W0710	022	20		25-53-24	ALL
	9	UNUSED						050-099
	9		W0710	180	20		25-53-24	150-199, 275-299
	10		W0710	561	20		25-53-24	ALL
	11		W0710	121	20		25-53-24	ALL
	12		W0710	122	20		25-53-24	ALL
	13	UNUSED						050-099
	13		W0710	184	20		25-53-24	150-199, 275-299
	14		W0710	531	20		25-53-24	ALL
	15		W0710	532	20		25-53-24	ALL
	16	UNUSED						050-099
	16		W0710	507	20		25-53-24	150-199, 275-299
	17		W0710	541	20		25-53-24	ALL
	18		W0710	542	20		25-53-24	ALL
	19	UNUSED						050-099
	19		W0710	508	20		25-53-24	150-199, 275-299
	20		W0710	562	20		25-53-24	ALL
	21		W0710	551	20		25-53-24	ALL
	22		W0710	552	20		25-53-24	ALL
	23		W0710	556	20		25-53-24	ALL
	24		W0710	571	20		25-53-24	ALL
	25		W0710	572	20		25-53-24	ALL
	26		W0710	576	20		25-53-24	ALL
	27		W0710	581	20		25-53-24	ALL
	28		W0710	582	20		25-53-24	ALL
	29	UNUSED						050-099
	29		W0710	513	20		25-53-24	150-199, 275-299
	30		W0710	062	20		25-53-24	ALL
	31		W0710	591	20		25-53-24	ALL
	32		W0710	592	20		25-53-24	ALL
	33	UNUSED						050-099

HOOKUP LIST

D280T132

91-21-51

Section D05200

Page 58

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05258P		AC1304/ /		PLUG-P39 (continued)				ALL
	33		W0710	514	20		25-53-24	150-199, 275-299
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40		W0710	566	20		25-53-24	ALL
	41	UNUSED						ALL
D05259J		AE0305/ /		RCPT-E1-3				ALL
	1		W1311	003	22		SPARE	ALL
	2	UNUSED						ALL
	3		W1311	202R	24		22-31-12	ALL
	4		W1311	202B	24		22-31-12	ALL
	5		W1311	203R	22		22-31-12	ALL
	6		W1311	203B	22		22-31-12	ALL
	7		W1311	209R	24		22-31-12	ALL
	8		W1311	209B	24		22-31-12	ALL
	9		W1311	205Z			22-32-11	ALL
	10		W1311	036	22		34-12-61	ALL
	11		W1311	037	22		34-12-61	ALL
	12	UNUSED						ALL
	13		W1311	205R	24		22-32-11	ALL
	14		W1311	205B	24		22-32-11	ALL
	15		W1311	206R	24		22-32-12	ALL
	16		W1311	206B	24		22-32-12	ALL
	17		W1311	206Z			22-32-12	ALL
	18		W1311	208R	22		SPARE	ALL
	19		W1311	208B	22		SPARE	ALL
	20		W1311	208Z			SPARE	ALL
	21		W1311	014	22		SPARE	ALL
	22	UNUSED						050-099, 150-152, 155-199, 275-299
	22		W1605	034	22		34-45-12	153-154
	23	UNUSED						050-099, 150-152, 155-199, 275-299
	23		W1605	029	22		34-45-12	153-154
	24		W1311	018	22		SPARE	ALL
	25		W1311	200R	24		34-45-14	050-099, 150-199, 277-299
	25	UNUSED						275-276
	26		W1311	214Z			27-32-11	ALL

HOOKUP LIST
D280T132

91-21-51
Section D05200
Page 59
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05259J		AE0305/ /		RCPT-E1-3 (continued)				ALL
	27		W1311	027	24		34-12-12	ALL
	28		W1311	200B	24		34-45-14	050-099, 150-199, 277-299
	28	UNUSED						275-276
	29		W1311	200Z			34-45-14	050-099, 150-199, 277-299
	29	UNUSED						275-276
	30		W1311	214R	24		27-32-11	ALL
	31		W1311	214B	24		27-32-11	ALL
D05259P		AE0305/ /		PLUG-E1-3				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W0105	652R	24		22-31-12	ALL
	4		W0105	652B	24		22-31-12	ALL
	5		W0105	654R	22		22-31-12	ALL
	6		W0105	654B	22		22-31-12	ALL
	7		W0105	697R	24		22-31-12	ALL
	8		W0105	697B	24		22-31-12	ALL
	9		W0105	666Z			22-32-11	ALL
	10		W0105	146	22		34-12-61	ALL
	11		W0105	147	22		34-12-61	ALL
	12	UNUSED						ALL
	13		W0105	666R	24		22-32-11	ALL
	14		W0105	666B	24		22-32-11	ALL
	15		W0105	541R	24		22-32-12	ALL
	16		W0105	541B	24		22-32-12	ALL
	17		W0105	541Z			22-32-12	ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						050-099, 150-152, 155-199, 275-299
	22		W0105	134	22		34-45-12	153-154
	23	UNUSED						050-099, 150-152, 155-199, 275-299
	23		W0105	135	22		34-45-12	153-154
	24	UNUSED						ALL
	25		W0105	588R	24		34-45-14	ALL
	26		W0105	277Z			34-12-61	ALL
	27		W0105	820	24		34-12-12	ALL
	28		W0105	588B	24		34-45-14	ALL
	29		W0105	588Z			34-45-14	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05200

Page 60

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05259P		AE0305/ /		PLUG-E1-3 (continued)				ALL
	30		W0105	277R	24		34-12-61	ALL
	31		W0105	277B	24		34-12-61	ALL
D05266J		AE0218/ /		RCPT-P37				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W0192	226B	24		73-21-14	ALL
	4		W0192	226R	24		73-21-14	ALL
	5		W0192	226Z			73-21-14	ALL
	6	UNUSED						ALL
	7		W0192	70F	22		21-45-22	ALL
	8	UNUSED						ALL
	9		W0192	78CZ			78-34-21	ALL
	10		W0192	615	20		33-42-11	ALL
	11		W0192	614	20		33-42-11	ALL
	12		W0192	78B	20		78-34-21	ALL
	13		W0192	78C	20		78-34-21	ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	19		W0192	83K	20		SPARE	050-099, 150-199, 275-278 280-299
	20		W0192	04B	24		21-58-11	ALL
	21		W0192	02V	24		21-58-11	ALL
	22		W0192	113	20		27-32-31	ALL
	23		W0192	515	20		25-33-11	050-099, 155-199, 277-299
	23		W0192	61H	20		25-31-12	150-154 275-276
	23	UNUSED						ALL
	24	UNUSED						ALL
	DED		W0192	113Z			27-32-31	ALL
	DED		W0192	78BZ			78-34-21	ALL
D05266P		AE0218/ /		PLUG-P37				ALL
	1		W0738	070	24		SPARE	ALL
	2		W0738	071	24		SPARE	ALL
	3		W0738	226B	24		73-21-14	ALL
	4		W0738	226R	24		73-21-14	ALL
	5		W0738	226Z			73-21-14	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05200

Page 61

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05266P		AE0218/ /		PLUG-P37 (continued)				ALL
	6	UNUSED						ALL
	7		W0738	508	22		21-45-22	ALL
	8	UNUSED						ALL
	9		W0738	FRA			78-34-21	ALL
	10		W0738	047	20		33-42-11	ALL
	11		W0738	048	20		33-42-11	ALL
	12		W0738	126	20		78-34-21	ALL
	13		W0738	127	20		78-34-21	ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						050-099, 150-199, 275-278
	19		W0738	517	20		SPARE	280-299
	20		W0738	091	24		21-58-11	ALL
	21		W0738	092	24		21-58-11	ALL
	22		W0738	107	20		27-32-31	ALL
	23		W0738	099	20		25-31-11	050-099, 150-199
	23	UNUSED						275-276
	23		W0738	510	20		25-31-11	277-278
	23	DK	W0738	510	18		25-31-11	280-299
	24	UNUSED						ALL
	DED		W0738	107Z			27-32-31	ALL
			W0738	125	20		78-34-21	ALL
			W0738	126Z			78-34-21	ALL
			W0738	127Z			78-34-21	ALL
			W0738	FRA			78-34-21	ALL
D05270J		AE0218/ /		RCPT-P37				ALL
	1		W0198	040	24		29-21-31	ALL
	2	UNUSED						ALL
	3		W0198	031	22		28-25-21	050-099
	3		W0198	031	20		28-25-21	150-199, 275-299
	4		W0198	030	22		28-25-21	050-099
	4		W0198	030	20		28-25-21	150-199, 275-299
	5		W0198	110	20		27-11-12	ALL
	6	DL	W0198	108	18		27-11-12	ALL
	7		W0198	039	24		29-21-31	ALL
	8		W0198	042	24		29-21-31	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05200

Page 62

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05270J		AE0218/ /		RCPT-P37 (continued)				ALL
	9		W0198	041	24		29-21-31	ALL
	10	DL	W0198	107	18		27-11-12	ALL
	11		W0198	109	20		27-11-12	ALL
	12		W0198	025	22		28-25-21	ALL
	13		W0198	611R	20		26-23-12	050-099
	13		W0198	578R	20		26-23-12	150-199, 275-299
	14		W0198	539R	20		26-21-11	ALL
	15		W0198	540R	20		26-23-11	ALL
	16		W0198	113	22		28-25-11	050-099
	16		W0198	113	20		28-25-11	150-199, 275-299
	17		W0198	531	22		49-61-11	ALL
	18		W0198	077	24		28-25-11	ALL
	19		W0198	032	24		29-21-31	ALL
	20		W0198	037	24		29-21-31	ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						050-099, 150-154
	25		W0198	620R	20		26-23-12	155-199, 275-299
	26	UNUSED						ALL
	27		W0198	567R	22		26-17-11	ALL
	28		W0198	568R	22		26-17-11	ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31		W0198	570	22		25-33-11	050-099, 153-199, 277-299
	31		W0198	570	22		21-58-16	150-152, 275-276
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41		W0198	500	20		25-33-11	050-099, 155-199, 277-299
	41	UNUSED						150-154, 275-276
	DED		W0198	032Z			29-21-31	ALL
	DED		W0198	039Z			29-21-31	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05200

Page 63

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05270J		AE0218/ /		RCPT-P37 (continued)				ALL
	DED		W0198	040Z			29-21-31	ALL
D05270P		AE0218/ /		PLUG-P37				ALL
	1		W0614	105	24		29-21-31	ALL
	2	UNUSED						050-099
	2		W0614	564	24		SPARE	150-199, 275-299
	3		W0614	003	22		28-25-21	050-099
	3		W0614	003	20		28-25-21	150-199, 275-299
	4		W0614	004	22		28-25-21	050-099
	4		W0614	004	20		28-25-21	150-199, 275-299
	5		W0614	005	20		27-11-12	ALL
	6	DK	W0614	006	18		27-11-12	ALL
	7		W0614	106	24		29-21-31	ALL
	8		W0614	107	24		29-21-31	ALL
	9		W0614	108	24		29-21-31	ALL
	10	DK	W0614	010	18		27-11-12	ALL
	11		W0614	011	20		27-11-12	ALL
	12		W0614	113	22		28-25-21	ALL
	13		W0614	613R	20		26-23-12	ALL
	14		W0614	563R	20		26-21-11	ALL
	15		W0614	561R	20		26-23-11	ALL
	16		W0614	109	22		28-25-11	050-099
	16		W0614	109	20		28-25-11	150-199, 275-299
	17		W0614	153	22		49-61-11	ALL
	18		W0614	110	24		28-25-11	ALL
	19		W0614	102	24		29-21-31	ALL
	20		W0614	103	24		29-21-31	ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23		W0614	151	22		SPARE	ALL
	24	UNUSED						050-099
	24		W0614	150R	22		SPARE	150-199, 275-299
	25	UNUSED						050-099, 150-154
	25		W0614	614R	20		26-23-12	155-199, 275-299
	26	UNUSED						ALL
	27		W0614	625R	22		26-17-11	050-099, 150-154, 275-299
	27		W0614	625R	20		26-17-11	155-199
	28		W0614	626R	22		26-17-11	ALL
	29	UNUSED						ALL
	30	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D05200

Page 64

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05270P		AE0218/ /		PLUG-P37 (continued)				ALL
	31		W0614	631	24		25-33-11	050-099, 150-199, 277-299
	31		W0614	631	24		21-58-16	275-276
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41		W0614	082	20		25-33-11	050-099, 155-199, 277-299
	41	UNUSED						150-154, 275-276
D05275J		0684/260/R085		RCPT-				280-299
	1		W1379	021	24		23-34-15	280-299
	2	FL	W1379	023	16		23-34-15	280-299
	3	FL	W1379	022	16		23-34-15	280-299
	4		W1379	020	24		23-34-15	280-299
	5		W1379	024	24		23-34-15	280-299
D05277J		AE0202/ /		RCPT-				ALL
	1		W1078	111	22		22-24-11	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W1078	204R	22		27-41-11	ALL
	5		W1078	204B	22		27-41-11	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8		W1078	143	24		22-32-13	ALL
	9		W1078	165	24		22-32-13	ALL
	10		W1078	145	24		22-32-13	ALL
	11		W1078	130	24		22-32-13	ALL
	12		W1078	168	24		22-32-13	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15		W1078	600	22		27-41-11	ALL
	16		W1078	198	22		27-61-11	ALL
	17	UNUSED						ALL
	18	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D05200

Page 65

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05277J		AE0202/ /		RCPT- (continued)				ALL
	19	UNUSED						ALL
	20		W1078	202R	24		22-32-13	ALL
	21		W1078	202B	24		22-32-13	ALL
	22		W1078	112	24		22-12-11	ALL
	23		W1078	113	24		22-12-11	ALL
	24		W1078	120	24		22-12-11	ALL
	25		W1078	121	24		22-12-11	ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28		W1078	521	24		34-46-12	ALL
	29		W1078	302B	24		27-58-21	ALL
	30		W1078	302R	24		27-58-21	ALL
	31		W1078	302Y	24		27-58-21	ALL
	32		W1078	208B	24		27-58-21	ALL
	33		W1078	208R	24		27-58-21	ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
D05277P		AE0202/ /		PLUG-P50				ALL
	1		W0697	001	22		22-24-11	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W0697	201R	22		27-41-11	ALL
	5		W0697	201B	22		27-41-11	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8		W0697	008	24		22-32-13	ALL
	9		W0697	009	24		22-32-13	ALL
	10		W0697	010	24		22-32-13	ALL
	11		W0697	011	24		22-32-13	ALL
	12		W0697	012	24		22-32-13	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15		W0697	020	22		27-41-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05200

Page 66

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05277P		AE0202/ /		PLUG-P50 (continued)				ALL
	16		W0697	006	22		27-61-11	ALL
	17	UNUSED						ALL
	18		W0697	018	22		SPARE	ALL
	19		W0697	019	22		SPARE	ALL
	20		W0697	202R	24		22-32-13	ALL
	21		W0697	202B	24		22-32-13	ALL
	22		W0697	022	24		22-12-11	ALL
	23		W0697	023	24		22-12-11	ALL
	24		W0697	024	24		22-12-11	ALL
	25		W0697	025	24		22-12-11	ALL
	26		W0697	206B	24		SPARE	ALL
	27		W0697	206R	24		SPARE	ALL
	28		W0697	028	24		34-46-12	ALL
	29		W0697	301B	24		27-58-21	ALL
	30		W0697	301R	24		27-58-21	ALL
	31		W0697	301Y	24		27-58-21	ALL
	32		W0697	205B	24		27-58-21	ALL
	33		W0697	205R	24		27-58-21	ALL
	34	UNUSED						ALL
	35		W0697	035	24		SPARE	ALL
	36		W0697	036	24		SPARE	ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
D05281J		AE0307/ /		RCPT-E1-2				ALL
	1		W1287	012	24		SPARE	ALL
	2		W1287	002	24		27-32-11	ALL
	3		W1287	003	24		27-32-11	ALL
	4		W1287	004	24		27-32-11	ALL
	5		W1287	010	24		SPARE	ALL
	6		W1287	011	24		SPARE	ALL
	7		W1287	201R	24		27-32-21	ALL
	8		W1287	201B	24		27-32-21	ALL
	9		W1287	013	24		SPARE	ALL
	10		W1287	016	24		SPARE	ALL
	11		W1287	014	24		31-51-42	ALL
	12		W1287	015	24		31-51-41	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05200

Page 67

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05281J		AE0307/ /		RCPT-E1-2 (continued)				ALL
	13		W1287	017	24		27-32-21	ALL
	14		W1287	018	24		27-32-21	ALL
	15		W1287	019	24		27-32-21	ALL
	16	UNUSED						050-099, 150-199
	17	UNUSED						050-099, 150-199
	18	UNUSED						050-099, 150-199
	19	UNUSED						050-099, 150-199
	20		W1287	020	24		SPARE	050-099
	20	UNUSED						150-199
	21		W1287	021	24		SPARE	050-099
	21	UNUSED						150-199
	22	UNUSED						050-099, 150-199
	23	UNUSED						050-099, 150-199
	24	UNUSED						050-099, 150-199
	25	UNUSED						050-099, 150-199
	26	UNUSED						050-099, 150-199
	27	UNUSED						050-099, 150-199
	28	UNUSED						050-099, 150-199
	29	UNUSED						050-099, 150-199
	30	UNUSED						050-099, 150-199
	31	UNUSED						050-099, 150-199
D05281P		AE0307/ /		PLUG-E1-2				ALL
	1	UNUSED						ALL
	2		W1092	003	24		27-32-11	ALL
	3		W1092	004	24		27-32-11	ALL
	4		W1092	01B	24		27-32-11	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W1092	238R	24		27-32-21	ALL
	8		W1092	238B	24		27-32-21	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11		W1092	142	24		31-51-42	ALL
	12		W1092	595	24		31-51-41	ALL
	13		W1092	549	24		27-32-21	ALL
	14		W1092	01F	24		27-32-21	ALL
	15		W1092	551	24		27-32-21	ALL
	16	UNUSED						050-099, 150-199
	17	UNUSED						050-099, 150-199

HOOKUP LIST

D280T132

91-21-51

Section D05200

Page 68

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05281P		AE0307/ /		PLUG-E1-2 (continued)				ALL
	18	UNUSED						050-099, 150-199
	19	UNUSED						050-099, 150-199
	20	UNUSED						050-099, 150-199
	21	UNUSED						050-099, 150-199
	22	UNUSED						050-099, 150-199
	23	UNUSED						050-099, 150-199
	24	UNUSED						050-099, 150-199
	25	UNUSED						050-099, 150-199
	26	UNUSED						050-099, 150-199
	27	UNUSED						050-099, 150-199
	28	UNUSED						050-099, 150-199
	29	UNUSED						050-099, 150-199
	30	UNUSED						050-099, 150-199
	31	UNUSED						050-099, 150-199
D05282J		AF0204/ /		RCPT-P61				ALL
	1		W0062	59Z	22		33-16-12	ALL
	2		W0062	202B	24		21-61-11	ALL
	3		W0062	202R	24		21-61-11	ALL
	4		W0062	201B	24		21-61-11	ALL
	5		W0062	201R	24		21-61-11	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12		W0062	50M	22		21-33-11	ALL
	13		W0062	56M	22		30-33-11	ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17		W0062	59P	22		33-13-18	ALL
	18		W0062	313R	24		33-13-18	ALL
	19		W0062	313B	24		33-13-18	ALL
	20		W0062	313Y	24		33-13-18	ALL
	21		W0062	021	22		33-16-26	ALL
	22		W0062	019	22		33-16-26	ALL
	23	UNUSED						ALL
	24	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D05200

Page 69

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05282J		AF0204/ /		RCPT-P61 (continued)				ALL
	25	UNUSED						050-099, 150-151, 153, 155, 157, 163-165, 275-299
	25		W0062	54H	24		SPARE	152, 154, 156, 162, 166-199
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	DED		W0062	59ZZ			33-16-12	ALL
D05282P		AF0204/ /		PLUG-P61				ALL
	1		W0632	071	22		33-16-12	ALL
	2		W0632	201B	24		21-61-11	ALL
	3		W0632	201R	24		21-61-11	ALL
	4		W0632	202B	24		21-61-11	ALL
	5		W0632	202R	24		21-61-11	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12		W0632	099	22		21-33-11	ALL
	13		W0632	520	22		30-33-11	ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17		W0632	005	22		33-13-18	ALL
	18		W0632	303R	24		33-13-18	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05200

Page 70

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05282P		AF0204/ /		PLUG-P61 (continued)				ALL
	19		W0632	303B	24		33-13-18	ALL
	20		W0632	303Y	24		33-13-18	ALL
	21		W0632	021	22		33-16-26	ALL
	22		W0632	022	22		33-16-26	ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						050-099, 150-151, 153, 155, 157, 163-165, 275-299
	25		W0632	001	22		SPARE	152, 154, 156, 162, 166-199
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35		W0632	801	20		SPARE	ALL
	36		W0632	802	22		SPARE	ALL
	37		W0632	803	24		SPARE	ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	DED		W0632	071Z			33-16-12	ALL
D05287		0639/208/R095		RCPT-				280-299
	A		W1485	201R	20		23-34-15	280-299
	B		W1485	201B	20		23-34-15	280-299
	C		W1485	301Y	24		23-34-15	280-299
	D		W1485	301B	24		23-34-15	280-299
	E		W1485	301R	24		23-34-15	280-299
	F		W1485	01CX			23-34-15	280-299
	= CF		W1485	01CO			23-34-15	280-299
D05288J		AE0306/ /		RCPT-				ALL
	1	4J	W0588	451W	22		32-46-11	ALL
	2	4F	W0588	451G	22		32-46-11	ALL
	3	4J	W0588	452W	22		32-46-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05200

Page 71

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05288J		AE0306/ /		RCPT- (continued)				ALL
	4	4F	W0588	452G	22		32-46-11	ALL
	5		W0588	213B	20		29-11-31	ALL
	6		W0588	213R	20		29-11-31	ALL
	7		W0588	032	24		27-51-61	ALL
	8		W0588	033	24		27-51-61	ALL
	9		W0588	034	24		27-51-61	050-099
	9	UNUSED						150-199, 275-299
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	DED		W0588	213Z			29-11-31	ALL
D05288P		AE0306/ /		PLUG-E2-4				ALL
	1		W0014	451W	22		32-46-11	050-099
	1	4I	W0014	451W	22		32-46-11	150-199, 275-299
	2		W0014	451G	22		32-46-11	050-099
	2	4E	W0014	451G	22		32-46-11	150-199, 275-299
	3		W0014	452W	22		32-46-11	050-099
	3	4I	W0014	452W	22		32-46-11	150-199, 275-299
	4		W0014	452G	22		32-46-11	050-099
	4	4E	W0014	452G	22		32-46-11	150-199, 275-299
	5		W0014	224B	22		29-11-31	ALL
	6		W0014	224R	22		29-11-31	ALL
	7		W0014	070	24		27-51-61	ALL
	8		W0014	058	24		27-51-61	ALL
	9		W0014	080	24		27-51-61	050-099
	9	UNUSED						150-199, 275-299
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	DED		W0014	224Z			29-11-31	ALL
D05289		0684/208/R095		RCPT-				280-299
	A		W1485	201R	20		23-34-15	280-299
	B		W1485	201B	20		23-34-15	280-299
	C		W1485	301Y	24		23-34-15	280-299
	D		W1485	301B	24		23-34-15	280-299
	E		W1485	301R	24		23-34-15	280-299
	F		W1485	01CX			23-34-15	280-299
	= CF		W1485	01CO			23-34-15	280-299

HOOKUP LIST

D280T132

91-21-51

Section D05200

Page 72

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05290J		AE0218/ /		RCPT-P37				ALL
	1		W0192	64D	20		24-51-72	050-099, 162-164, 276
	1	UNUSED						150-157, 165-199, 275, 277-299
	2		W0192	74H	22		21-66-21	050-099, 162-199
	2	UNUSED						150-157, 275-299
	3		W0192	83G	22		30-81-11	050-099, 150-199
	3	UNUSED						275-299
	4	UNUSED						ALL
	5		W0192	81W	22		30-21-11	050-099
	5		W0192	81W	24		30-21-11	150-199
	5	UNUSED						275-299
	6		W0192	73Y	22		21-66-21	050-099, 162-199
	6	UNUSED						150-157, 275-299
	7		W0192	74N	22		21-66-21	050-099, 162-199
	7	UNUSED						150-157, 275-299
	8		W0192	74R	22		21-66-21	050-099, 162-199
	8	UNUSED						150-157, 275-299
	9	UNUSED						ALL
	10		W0192	75G	22		21-66-41	050-099, 150, 152-199
	10	UNUSED						151, 275-299
	11	DK	W0192	070	18		33-31-11	ALL
	12		W0192	75Q	22		21-66-41	050-099, 150, 152-199
	12	UNUSED						151, 275-299
	13		W0192	75R	22		21-66-41	050-099, 150, 152-199
	13	UNUSED						151, 275-299
	14		W0192	16C	18		33-31-41	ALL
	15		W0192	73X	22		21-66-11	050-099, 162-199
	15	UNUSED						150-157, 275-299
	16		W0192	16B	18		33-31-41	ALL
	17		W0192	698	24		32-09-13	ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21		W0192	274Z			21-66-41	050-099, 150, 152-199
	21	UNUSED						151, 275-299
	22	UNUSED						ALL
	23		W0192	274B	22		21-66-41	050-099, 150, 152-199
	23	UNUSED						151, 275-299
	24	UNUSED						ALL
	25		W0192	274R	22		21-66-41	050-099, 150, 152-199
	25	UNUSED						151, 275-299

HOOKUP LIST
D280T132

91-21-51
Section D05200
Page 73
Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05290P		AE0218/ /		PLUG-				ALL
	1		W0902	118	20		24-51-72	050-099, 162-164, 276
	1	UNUSED						150-154, 275
	1		W0902	118	20		SPARE	155-157, 165-199, 277-299
	2		W0902	122	22		21-66-21	050-099, 162-199
	2	UNUSED						150-157, 275-299
	3		W0902	023	24		30-81-11	050-099, 150-154, 156-199
	3		W0902	023	24		30-34-41	155
	3	UNUSED						275-299
	4	UNUSED						050-099, 275-299
	4		W0902	022	24		30-34-41	150-199
	5		W0902	01A	20		30-21-11	050-099, 150-199
	5	UNUSED						275-299
	6		W0902	127	22		21-66-21	050-099, 162-199
	6	UNUSED						150-157, 275-299
	7		W0902	129	22		21-66-21	050-099, 162-199
	7	UNUSED						150-157, 275-299
	8		W0902	130	22		21-66-21	050-099, 162-199
	8	UNUSED						150-157, 275-299
	9		W0902	814	20		SPARE	ALL
	10		W0902	123	22		21-66-41	050-099, 150, 152-199
	10	UNUSED						151, 275-299
	11	DL	W0902	018	18		33-31-11	ALL
	12		W0902	126	22		21-66-41	050-099, 150, 152-199
	12	UNUSED						151, 275-299
	13		W0902	124	22		21-66-41	050-099, 162-199
	13		W1222	719	22		21-66-41	150, 152-157
	13	UNUSED						151, 275-299
	14		W0902	116	18		33-31-41	ALL
	15		W0902	128	22		21-66-11	050-099, 162-199
	15	UNUSED						150-157, 275-299
	16		W0902	117	18		33-31-41	ALL
	17		W0902	067	24		32-09-13	ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21		W0902	207Z			21-66-41	050-099, 150, 152-199
	21	UNUSED						151, 275-299
	22	UNUSED						ALL
	23		W0902	207B	22		21-66-41	050-099, 150, 152-199
	23	UNUSED						151, 275-299

HOOKUP LIST

D280T132

91-21-51

Section D05200

Page 74

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05290P		AE0218/ /		PLUG- (continued)				ALL
	24	UNUSED						ALL
	25		W0902	207R	22		21-66-41	050-099, 150, 152-199
	25	UNUSED						151, 275-299
D05292J		AE0320/ /		RCPT-E2-4				ALL
	1	4I	W0628	451W	22		32-46-11	ALL
	2	4E	W0628	451G	22		32-46-11	ALL
	3	4I	W0628	452W	22		32-46-11	ALL
	4	4E	W0628	452G	22		32-46-11	ALL
	5	4I	W0628	453W	22		32-46-11	ALL
	6	4E	W0628	453G	22		32-46-11	ALL
	7	4I	W0628	454W	22		32-46-11	ALL
	8	4E	W0628	454G	22		32-46-11	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D05292P		AE0320/ /		PLUG-E2-4				ALL
	1	4J	W0016	453W	22		32-46-11	ALL
	2	4F	W0016	453G	22		32-46-11	ALL
	3	4J	W0016	454W	22		32-46-11	ALL
	4	4F	W0016	454G	22		32-46-11	ALL
	5	4J	W0016	451W	22		32-46-11	ALL
	6	4F	W0016	451G	22		32-46-11	ALL
	7	4J	W0016	452W	22		32-46-11	ALL
	8	4F	W0016	452G	22		32-46-11	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D05293J		AE0308/ /		RCPT-E2-1				ALL
	1		W0151	004	22		22-21-21	ALL
	2		W0151	002	22		22-22-21	ALL
	3		W0151	003	22		22-22-21	ALL
	4		W0151	001	22		22-22-21	ALL
	5		W0151	005	22		22-24-21	ALL
	6		W0151	027	22		27-09-12	ALL
	7		W0151	028	22		27-09-13	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05200

Page 75

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05293J		AE0308/ /		RCPT-E2-1 (continued)				ALL
	8		W0151	029	22		27-09-13	ALL
	9		W0151	202R	24		22-21-21	ALL
	10		W0151	202B	24		22-21-21	ALL
	11		W0151	FRD			22-21-21	ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15		W0151	047	22		27-61-11	ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19		W0151	201R	24		22-22-21	ALL
	20		W0151	201B	24		22-22-21	ALL
	21		W0151	FRE			22-22-21	ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
			W0151	201	20		22-22-21	ALL
			W0151	201Z			22-22-21	ALL
			W0151	202	20		22-21-21	ALL
			W0151	202Z			22-21-21	ALL
			W0151	FRD			22-21-21	ALL
			W0151	FRE			22-22-21	ALL
D05293P		AE0308/ /		PLUG-E2-1				ALL
	1		W0585	001	22		22-21-21	ALL
	2		W0585	002	22		22-22-11	ALL
	3		W0585	003	22		22-22-11	ALL
	4		W0585	004	22		22-22-11	ALL
	5		W0585	005	22		22-24-11	ALL
	6		W0585	006	22		27-09-12	ALL
	7		W0585	007	22		27-09-13	ALL
	8		W0585	008	22		27-09-13	ALL
	9		W0585	201R	24		22-21-21	ALL
	10		W0585	201B	24		22-21-21	ALL
	11		W0585	201Z			22-21-21	ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14		W0585	014	22		SPARE	ALL
	15		W0585	015	22		27-61-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05200

Page 76

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05293P		AE0308/ /		PLUG-E2-1 (continued)				ALL
	16		W0585	016	22		SPARE	ALL
	17		W0585	017	20		SPARE	ALL
	18		W0585	018	20		SPARE	ALL
	19		W0585	202R	24		22-22-11	ALL
	20		W0585	202B	24		22-22-11	ALL
	21		W0585	202Z			22-22-11	ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D05294J		AE0306/ /		RCPT-E2-4				ALL
	1	4I	W0602	451W	22		32-46-11	ALL
	2	4E	W0602	451G	22		32-46-11	ALL
	3	4I	W0602	452W	22		32-46-11	ALL
	4	4E	W0602	452G	22		32-46-11	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D05294P		AE0306/ /		PLUG-E2-4				ALL
	1		W0014	455W	22		32-46-11	050-099
	1	4J	W0014	455W	22		32-46-11	150-199, 275-299
	2		W0014	455G	22		32-46-11	050-099
	2	4F	W0014	455G	22		32-46-11	150-199, 275-299
	3		W0014	456W	22		32-46-11	050-099
	3	4J	W0014	456W	22		32-46-11	150-199, 275-299
	4		W0014	456G	22		32-46-11	050-099
	4	4F	W0014	456G	22		32-46-11	150-199, 275-299
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D05200
Page 77
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05294P		AE0306/ /		PLUG-E2-4 (continued)				ALL
	12	UNUSED						ALL
D05295		588/198/L 15		RCPT-				150-199
D05295		590/198/L 15		RCPT-				280-299
	A		W1487	201R	20		23-34-17	150-199
	A	FM	W1487	201R	16		23-34-17	280-299
	B		W1487	201B	20		23-34-17	150-199
	B	FM	W1487	201B	16		23-34-17	280-299
	C		W1487	301Y	24		23-34-17	150-199, 280-299
	D		W1487	301B	24		23-34-17	150-199, 280-299
	E		W1487	301R	24		23-34-17	150-199, 280-299
	F		W1487	01CX			23-34-17	150-199, 280-299
	= CF		W1487	01CO			23-34-17	150-199, 280-299
D05297		698/198/L 15		RCPT-				150-199
D05297		700/198/L 15		RCPT-				280-299
	A		W1487	201R	20		23-34-17	150-199
	A	FM	W1487	201R	16		23-34-17	280-299
	B		W1487	201B	20		23-34-17	150-199
	B	FM	W1487	201B	16		23-34-17	280-299
	C		W1487	301Y	24		23-34-17	150-199, 280-299
	D		W1487	301B	24		23-34-17	150-199, 280-299
	E		W1487	301R	24		23-34-17	150-199, 280-299
	F		W1487	01CX			23-34-17	150-199, 280-299
	= CF		W1487	01CO			23-34-17	150-199, 280-299

HOOKUP LIST

D280T132

91-21-51

Section D05200

Page 78 End

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05300J		AE0209/ /		RCPT-				ALL
	1		W0176	578	24		27-28-11	ALL
	2	UNUSED						050-099, 275-299
	2		W0176	65R	24		78-36-11	150-199
	3	UNUSED						ALL
	4		W0176	573	24		27-28-13	ALL
	5		W0176	685Z			73-21-19	ALL
	6		W0176	650	20		27-21-11	ALL
	7		W0176	685	22		73-21-19	ALL
	8		W0176	574	24		27-28-13	ALL
	9		W0176	213R	24		27-28-13	ALL
	10		W0176	213B	24		27-28-13	ALL
	11		W0176	643	24		27-81-31	ALL
	12		W0176	648	24		27-51-31	ALL
	13		W0176	82V	20		78-34-11	ALL
	14	UNUSED						ALL
	15		W0176	59H	20		78-34-11	ALL
	16	UNUSED						ALL
	17		W0176	811	24		78-34-11	ALL
	18		W0176	809	24		78-34-11	ALL
	19		W0176	815	24		78-34-11	ALL
	20		W0176	682Z			73-21-19	ALL
	21		W0176	680	22		73-21-19	ALL
	22		W0176	682	22		73-21-19	ALL
	23		W0176	57C	24		24-11-11	ALL
	24		W0176	212B	22		27-51-41	ALL
	25		W0176	212R	22		27-51-41	ALL
	26		W0176	401B	24		27-51-41	ALL
	27		W0176	401R	24		27-51-41	ALL
	28		W0176	401Y	24		27-51-41	ALL
	29		W0176	401G	24		27-51-41	ALL
	30		W0176	57D	24		24-11-11	ALL
	31		W0176	583	24		27-38-11	ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						050-099, 150-156, 162-166, 275-276
	34		W0176	51D	24		SPARE	157, 167-199, 277-299
	35		W0176	120	24		78-34-11	ALL
	36		W0176	235B	24		73-21-14	ALL
	37		W0176	235R	24		73-21-14	ALL
	38	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D05300

Page 1

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05300J		AE0209/ /		RCPT- (continued)				ALL
	39		W0176	235Z			73-21-14	ALL
	40		W0176	59G	20		78-34-11	ALL
	41	UNUSED						ALL
	42		W0176	831	22		78-36-11	050-099, 275-299
	42		W0176	17U	22		78-36-11	150-199
	43		W0176	834	22		78-36-11	ALL
	44		W0176	835	22		78-36-11	ALL
	45	UNUSED						ALL
	46		W0176	02L	24		77-35-11	050-099, 150-199, 277-299
	46	UNUSED						275-276
	47		W0176	819	22		78-36-11	ALL
	48		W0176	565	24		27-18-11	050-099, 150-154, 162-165, 275-276
	48	UNUSED						155-157, 166-199, 277-299
	49		W0176	567	24		27-18-11	050-099, 150-154, 162-165, 275-276
	49	UNUSED						155-157, 166-199, 277-299
	50	UNUSED						ALL
	51		W0176	571	24		27-18-11	050-099, 150-154, 162-165, 275-276
	51	UNUSED						155-157, 166-199, 277-299
	52		W0176	572	24		27-18-11	050-099, 150-154, 162-165, 275-276
	52	UNUSED						155-157, 166-199, 277-299
	53		W0176	249R	24		77-31-11	ALL
	54		W0176	249B	24		77-31-11	ALL
	55		W0176	249Z			77-31-11	050-099, 150-199, 277-299
	55		W0176	02L	24		77-35-11	275-276
	56		W0176	GRD			78-34-11	ALL
	57		W0176	65R	24		78-36-11	050-099, 275-299
	57	UNUSED						150-199
	58	UNUSED						050-099, 150-199, 277-299
	58		W0176	249Z			77-31-11	275-276
	59		W0176	63M	24		73-21-18	ALL
	60		W0176	19G	24		73-21-18	ALL
	61		W0176	63N	24		73-21-18	ALL
			W0176	59GZ			78-34-11	ALL
			W0176	59HZ			78-34-11	ALL
			W0176	GRD			78-34-11	ALL
D05300P		AE0209/ /		PLUG-P36				ALL
	1		W0756	131	24		27-28-11	ALL
	2	UNUSED						050-099, 275-299
	2		W0756	660	24		78-36-11	150-199

HOOKUP LIST

D280T132

91-21-51

Section D05300

Page 2

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05300P		AE0209/ /		PLUG-P36 (continued)				ALL
	3	UNUSED						ALL
	4		W0756	134	24		27-28-13	ALL
	5		W0756	199Z			73-21-19	ALL
	6		W0756	142	20		27-21-11	ALL
	7		W0756	199	20		73-21-19	ALL
	8		W0756	144	24		27-28-13	ALL
	9		W0756	233R	24		27-28-13	ALL
	10		W0756	233B	24		27-28-13	ALL
	11		W0756	116	24		27-81-31	ALL
	12		W0756	057	24		27-51-31	ALL
	13	DK	W0756	596	18		78-34-11	ALL
	14	DK	W0756	597	18		SPARE	ALL
	15	DK	W0756	10D	18		78-34-11	ALL
	16	DK	W0756	599	18		SPARE	ALL
	17		W0756	100	24		78-34-11	ALL
	18		W0756	101	24		78-34-11	ALL
	19		W0756	056	24		78-34-11	ALL
	20		W0756	103Z			73-21-19	ALL
	21		W0756	102	22		73-21-19	ALL
	22		W0756	103	20		73-21-19	ALL
	23		W0756	579	24		24-11-11	ALL
	24		W0756	231B	22		27-51-41	ALL
	25		W0756	231R	22		27-51-41	ALL
	26		W0756	407B	24		27-51-41	ALL
	27		W0756	407R	24		27-51-41	ALL
	28		W0756	407Y	24		27-51-41	ALL
	29		W0756	407G	24		27-51-41	ALL
	30		W0756	580	24		24-11-11	ALL
	31		W0756	127	24		27-38-11	ALL
	32	DK	W0756	600	18		SPARE	ALL
	33		W0756	148	24		SPARE	ALL
	34		W0756	149	24		SPARE	ALL
	35		W0756	172	24		78-34-11	ALL
	36		W0756	205B	24		73-21-14	ALL
	37		W0756	205R	24		73-21-14	ALL
	38	UNUSED						050-099, 150-199
	38		W0756	524	22		SPARE	275-299
	39		W0756	205Z			73-21-14	ALL
	40	DK	W0756	10C	18		78-34-11	ALL
	41	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D05300

Page 3

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05300P		AE0209/ /		PLUG-P36 (continued)				ALL
	42		W0756	004	22		78-36-11	ALL
	43		W0756	062	22		78-36-11	ALL
	44		W0756	011	22		78-36-11	ALL
	45	UNUSED						ALL
	46		W0756	592	24		77-35-11	050-099, 150-199, 277-299
	46	UNUSED						275-276
	47		W0756	072	22		78-36-11	ALL
	48		W0756	082	22		27-18-11	050-099, 150-156, 162-166
	48		W0756	082	22		SPARE	157, 167-199, 275-299
	49		W0756	083	22		27-18-11	050-099, 150-156, 162-166
	49		W0756	083	22		SPARE	157, 167-199, 275-299
	50	UNUSED						ALL
	51		W0756	085	22		27-18-11	050-099, 150-154, 162-165, 275-276
	51	UNUSED						155-157, 166-199, 277-299
	52		W0756	086	22		27-18-11	050-099, 150-154, 162-165, 275-276
	52	UNUSED						155-157, 166-199, 277-299
	53		W0756	240R	24		77-31-11	ALL
	54		W0756	240B	24		77-31-11	ALL
	55		W0756	240Z			77-31-11	050-099, 150-199, 277-299
	55		W0756	592	24		77-35-11	275-276
	56		W0756	FRU			78-34-11	ALL
	57		W0756	660	24		78-36-11	050-099, 275-299
	57		W0756	809	24		SPARE	150-154
	57		W0756	809	24		73-21-11	155-199
	58	UNUSED						050-099, 150-199, 277-299
	58		W0756	240Z			77-31-11	275-276
	59		W0756	639	24		73-21-18	ALL
	60		W0756	087	24		73-21-18	ALL
	61		W0756	088	24		73-21-18	ALL
	CAP	Y	W0756	590	18		78-34-11	ALL
	CAP	Y	W0756	601	18		78-34-11	ALL
	CAP	Y	W0756	524	22		SPARE	150-199
	CAP	Y	W0756	811	24		SPARE	150-199
			W0756	10CZ			78-34-11	ALL
			W0756	10DZ			78-34-11	ALL
			W0756	646	20		78-34-11	ALL
			W0756	FRU			78-34-11	ALL
D05303J		AE0307/ /		RCPT-E2-5 COAXIAL				ALL
	= A1		W0857	01CX			23-34-14	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05300

Page 4

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05303J		AE0307/ /		RCPT-E2-5 COAXIAL (continued)				ALL
	= C1		W0857	01CO			23-34-14	ALL
D05303P		AE0307/ /		PLUG-E2-5 COAXIAL				ALL
	= A1		W0149	01CX			23-34-14	ALL
	= C1		W0149	01CO			23-34-14	ALL
D05305J		AF0116/ /		RCPT-P3-1				ALL
	1		W0035	001	24		31-51-31	ALL
	2		W0035	002	20		31-51-31	ALL
	3		W0035	003	24		34-46-12	ALL
	4		W0035	004	20		34-46-12	ALL
	5		W0035	005	24		34-46-12	ALL
	6		W0035	006	20		34-46-12	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	DL	W0035	013	18		33-13-13	ALL
	10	DL	W0035	014	18		33-13-13	ALL
	11	DL	W0035	098	18		33-13-13	ALL
	12	DL	W0035	016	18		33-13-13	ALL
	13	DL	W0035	099	18		33-13-13	ALL
	14	UNUSED						ALL
	15		W0035	041	22		33-16-15	ALL
	16		W0035	069	22		33-16-15	ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20		W0035	066	22		27-58-31	ALL
	21	DL	W0035	067	18		32-35-11	ALL
	22	UNUSED						ALL
	23		W0035	007	24		32-61-14	ALL
	24		W0035	008	24		32-61-14	ALL
	25		W0035	009	24		32-61-14	ALL
	26		W0035	072	22		32-46-11	ALL
	27		W0035	073	24		32-61-14	ALL
	28		W0035	074	24		32-61-14	ALL
	29		W0035	075	24		32-61-14	ALL
	30		W0035	076	24		32-61-14	ALL
	31		W0035	077	24		32-61-14	ALL
	32	UNUSED						050-099
	32		W0035	162	24		32-71-11	150-199, 275-299

HOOKUP LIST
D280T132

91-21-51
Section D05300
Page 5
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05305J		AF0116/ /		RCPT-P3-1 (continued)				ALL
	33		W0035	064	20		27-51-11	ALL
	34		W0035	065	24		27-51-11	ALL
	35		W0035	110	22		31-31-26	ALL
	36		W0035	091	22		27-88-11	ALL
	37		W0035	101	22		34-22-36	ALL
	38		W0035	102	20		34-22-36	ALL
	39		W0035	107	20		33-13-13	ALL
	40		W0035	501	22		33-16-15	050-099
	40		W0035	043	22		33-16-15	150-199, 275-299
	41	UNUSED						ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
	DED		W0035	007Z			32-61-14	ALL
	DED		W0035	008Z			32-61-14	ALL
	DED		W0035	009Z			32-61-14	ALL
D05305P		AF0116/ /		PLUG-P3-1				ALL
	1		W0011	623	24		31-51-31	ALL
	2		W0011	624	20		31-51-31	ALL
	3		W0011	631	24		34-46-12	ALL
	4		W0011	632	20		34-46-12	ALL
	5		W0011	633	24		34-46-12	ALL
	6		W0011	634	20		34-46-12	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	DK	W0011	669	18		33-13-13	ALL
	10	DK	W0011	672	18		33-13-13	ALL
	11	DK	W0011	806	18		33-13-13	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05300

Page 6

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05305P		AF0116/ /		PLUG-P3-1 (continued)				ALL
	12	DK	W0011	682	18		33-13-13	ALL
	13	DK	W0011	807	18		33-13-13	ALL
	14	UNUSED						ALL
	15		W0011	713	22		33-16-15	ALL
	16		W0011	717	22		33-16-15	ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20		W0011	751	22		27-58-31	ALL
	21	DK	W0011	723	18		32-35-11	ALL
	22	UNUSED						ALL
	23		W0011	131	24		32-61-14	ALL
	24		W0011	132	24		32-61-14	ALL
	25		W0011	133	24		32-61-14	ALL
	26		W0011	728	22		32-46-11	ALL
	27		W0011	729	24		32-61-14	ALL
	28		W0011	730	24		32-61-14	ALL
	29		W0011	731	24		32-61-14	ALL
	30		W0011	732	24		32-61-14	ALL
	31		W0011	733	24		32-61-14	ALL
	32	UNUSED						050-099
	32		W0011	662	24		32-71-11	150-199, 275-299
	33		W0011	740	20		27-51-11	ALL
	34		W0011	741	24		27-51-11	ALL
	35		W0011	832	24		31-31-26	ALL
	36		W0011	752	22		27-88-11	ALL
	37		W0011	810	22		34-22-36	ALL
	38		W0011	811	20		34-22-36	ALL
	39		W0011	812	20		33-13-13	ALL
	40		W0011	805	22		33-16-15	ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D05300

Page 7

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05305P		AF0116/ /		PLUG-P3-1 (continued)				ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
	DED		W0011	131Z			32-61-14	ALL
	DED		W0011	132Z			32-61-14	ALL
	DED		W0011	133Z			32-61-14	ALL
D05306J		AE0209/ /		RCPT-P36				ALL
	1		W0176	602	20		27-23-11	ALL
	2		W0176	03A	24		75-23-11	ALL
	3		W0176	04Z	22		74-31-11	ALL
	4		W0176	03C	24		75-23-11	ALL
	5		W0176	03D	24		75-23-11	ALL
	6		W0176	03E	24		75-23-11	ALL
	7		W0176	719	22		74-31-11	ALL
	8		W0176	273	22		30-21-11	ALL
	9		W0176	818	22		78-36-11	ALL
	10		W0176	FRD			78-36-11	050-099
	10		W0176	FRT			78-36-11	150-199, 275-299
	11	UNUSED						ALL
	12	UNUSED						ALL
	13		W0176	306Z			73-31-11	ALL
	14	UNUSED						ALL
	15		W0176	603	20		27-23-11	ALL
	16		W0176	604	22		27-23-11	ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19		W0176	693	22		78-34-11	ALL
	20		W0176	718	22		74-31-11	ALL
	21		W0176	601	22		27-13-11	ALL
	22		W0176	599	20		27-13-11	ALL
	23		W0176	22D	20		78-34-11	ALL
	24		W0176	22C	20		78-34-11	ALL
	25		W0176	822	22		30-21-11	050-099, 150-199
	25		W0176	821	22		30-21-11	275-299
	26		W0176	882	22		30-21-11	ALL
	27		W0176	600	20		27-13-11	ALL
	28		W0176	20Y	22		30-21-11	050-099, 150-199

HOOKUP LIST

D280T132

91-21-51

Section D05300

Page 8

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05306J		AE0209/ /		RCPT-P36 (continued)				ALL
	28		W0176	822	22		30-21-11	275-299
	29		W0176	65P	24		78-36-11	ALL
	30		W0176	77P	24		26-18-11	ALL
	31		W0176	306B	24		73-31-11	ALL
	32		W0176	820	24		30-21-11	ALL
	33		W0176	306R	24		73-31-11	ALL
	34		W0176	306Y	24		73-31-11	ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38		W0176	65W	24		78-36-11	ALL
	39		W0176	314Y	24		79-31-11	ALL
	40		W0176	314R	24		79-31-11	ALL
	41		W0176	314B	24		79-31-11	ALL
	42		W0176	885	22		79-33-11	ALL
	43		W0176	886	22		79-33-11	ALL
	44		W0176	888	22		79-35-11	ALL
	45	UNUSED						ALL
	46		W0176	238Z			73-21-14	ALL
	47		W0176	GRH			78-34-11	ALL
	48		W0176	04Q	24		73-21-14	050-099, 150-199, 277-299
	48	UNUSED						275-276
	49		W0176	238B	24		73-21-14	ALL
	50		W0176	238R	24		73-21-14	ALL
	51		W0176	05X	24		73-33-11	050-099, 280-299
	51	BJ	W0176	05X	24		73-33-11	150-199, 275-278
	52		W0176	05Y	24		73-33-11	ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
	DED		W0176	04ZZ			74-31-11	ALL
	DED		W0176	718Z			74-31-11	ALL
	DED		W0176	719Z			74-31-11	ALL
			W0176	FRD			78-36-11	050-099
			W0176	22CZ			78-34-11	ALL
			W0176	22DZ			78-34-11	ALL
			W0176	GRH			78-34-11	ALL
			W0176	818Z			78-36-11	050-099, 275-299
			W0176	838	20		78-36-11	050-099, 275-299
		\$	W0176	818Z			78-36-11	150-199

HOOKUP LIST
D280T132

91-21-51
Section D05300
Page 9
Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05306J		AE0209/ /		RCPT-P36 (continued)				ALL
		\$	W0176	838	20		78-36-11	150-199
		\$	W0176	FRT			78-36-11	150-199
			W0176	FRT			78-36-11	275-299
D05306P		AE0209/ /		PLUG-P36				ALL
	1	DK	W0746	023	18		27-23-11	ALL
	2		W0746	065	24		75-23-11	ALL
	3		W0746	047	22		74-31-11	ALL
	4		W0746	066	24		75-23-11	ALL
	5		W0746	067	24		75-23-11	ALL
	6		W0746	068	24		75-23-11	ALL
	7		W0746	005	22		74-31-11	ALL
	8		W0746	077	22		30-21-11	ALL
	9		W0746	002	22		78-36-11	ALL
	10		W0746	002Z			78-36-11	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13		W0746	302Z			73-31-11	ALL
	14	UNUSED						ALL
	15	DK	W0746	024	18		27-23-11	ALL
	16		W0746	025	22		27-23-11	ALL
	17	UNUSED						050-099, 150-199
	17		W0746	009	20		SPARE	275-299
	18	UNUSED						050-099, 157, 275-299
	18		W0746	009	20		SPARE	150-156, 162-199
	19		W0746	020	24		78-34-11	ALL
	20		W0746	046	22		74-31-11	ALL
	21		W0746	028	22		27-13-11	ALL
	22		W0746	026	20		27-13-11	ALL
	23	DK	W0746	506	18		78-34-11	ALL
	24	DK	W0746	507	18		78-34-11	ALL
	25		W0746	001	22		30-21-11	ALL
	26		W0746	011	24		30-21-11	ALL
	27		W0746	027	20		27-13-11	ALL
	28		W0746	012	22		30-21-11	ALL
	29		W0746	103	24		78-36-11	ALL
	30		W0746	040	24		26-18-11	ALL
	31		W0746	302B	24		73-31-11	ALL
	32		W0746	041	24		30-21-11	ALL
	33		W0746	302R	24		73-31-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05300

Page 10

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05306P		AE0209/ /		PLUG-P36 (continued)				ALL
	34		W0746	302Y	24		73-31-11	ALL
	35	UNUSED						050-099
	35		W0746	211B	24		SPARE	150-199, 275-299
	36	UNUSED						050-099
	36		W0746	211R	24		SPARE	150-199, 275-299
	37		W0746	044	24		SPARE	ALL
	38		W0746	043	24		78-36-11	ALL
	39		W0746	301Y	24		79-31-11	ALL
	40		W0746	301R	24		79-31-11	ALL
	41		W0746	301B	24		79-31-11	ALL
	42		W0746	057	22		79-33-11	ALL
	43		W0746	014	22		79-33-11	ALL
	44		W0746	006	22		79-35-11	ALL
	45		W0746	045	22		74-31-11	ALL
	46		W0746	201Z			73-21-14	ALL
	47		W0746	FRA			78-34-11	ALL
	48		W0746	010	24		73-21-14	ALL
	49		W0746	201B	24		73-21-14	ALL
	50		W0746	201R	24		73-21-14	ALL
	51		W0746	072	24		73-33-11	ALL
	52		W0746	073	24		73-33-11	ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
	CAP	Y	W0746	039	24		SPARE	ALL
	CAP	Y	W0746	009	20		SPARE	157
			W0746	505	20		78-34-11	ALL
			W0746	506Z			78-34-11	ALL
			W0746	507Z			78-34-11	ALL
			W0746	FRA			78-34-11	ALL
D05307J		AE0303/ /		RCPT-E1-1				ALL
	1		W1101	001	22		22-21-11	ALL
	2		W1101	004	22		22-21-11	ALL
	3		W1101	002	22		22-21-11	ALL
	4		W1101	053	22		27-11-12	ALL
	5		W1101	055	22		27-21-12	ALL
	6		W1101	076	22		27-61-12	ALL
	7	UNUSED						ALL
	8		W1101	027	22		27-09-14	ALL

HOOKUP LIST
D280T132

91-21-51
Section D05300
Page 11
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05307J		AE0303/ /		RCPT-E1-1 (continued)				ALL
	9	UNUSED						ALL
	10		W1101	061	22		27-41-11	ALL
	11		W1101	028	22		27-09-14	ALL
	12		W1101	075	22		27-61-12	ALL
	13		W1101	064	22		27-41-11	ALL
	14		W1101	060	22		27-41-11	ALL
	15	UNUSED						ALL
	16		W1101	043	22		27-11-12	ALL
	17		W1101	046	22		27-11-12	ALL
	18		W1101	040	20		27-11-12	ALL
	19		W1101	037	20		27-11-12	ALL
	20	UNUSED						ALL
	21		W1101	052	22		27-11-12	ALL
	22		W1101	003	22		22-21-11	ALL
	23		W1101	056	22		27-21-12	ALL
	24		W1101	071	22		27-41-11	ALL
	25		W1101	029	22		27-09-14	ALL
	26		W1101	101	22		27-61-12	ALL
	27		W1101	100	22		27-61-12	ALL
	28		W1101	099	22		27-61-12	ALL
	29		W1101	102	22		27-61-12	ALL
	30		W1101	103	22		27-61-12	ALL
	31		W1101	104	22		27-61-12	ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34		W1101	015	22		27-09-14	ALL
	35		W1101	017	22		27-09-14	ALL
	36		W1101	021	22		27-09-14	ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	DED		W1101	001Z			22-21-11	ALL
D05307P		AE0303/ /		PLUG-E1-1				ALL
	1		W1307	001	20		22-21-11	ALL
	2		W1307	002	22		22-21-11	ALL
	3		W1307	003	22		22-21-11	ALL
	4		W1307	005	22		27-11-12	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05300

Page 12

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05307P		AE0303/ /		PLUG-E1-1 (continued)				ALL
	5		W1307	006	22		27-21-12	ALL
	6		W1307	008	22		27-61-12	ALL
	7		W1307	043	24		SPARE	ALL
	8		W1307	011	24		27-09-14	ALL
	9	UNUSED						ALL
	10		W1307	007	22		27-41-11	ALL
	11		W1307	010	24		27-09-14	ALL
	12		W1307	013	24		27-61-12	ALL
	13		W1307	014	24		27-41-11	ALL
	14		W1307	015	24		27-41-11	ALL
	15		W1307	016	24		SPARE	ALL
	16		W1307	018	20		27-11-12	ALL
	17		W1307	019	20		27-11-12	ALL
	18	DK	W1307	020	18		27-11-12	ALL
	19	DK	W1307	021	18		27-11-12	ALL
	20		W1307	022	22		SPARE	ALL
	21		W1307	017	24		27-11-12	ALL
	22		W1307	023	24		22-21-11	ALL
	23		W1307	024	24		27-21-12	ALL
	24		W1307	025	22		27-41-11	ALL
	25		W1307	044	24		27-09-14	ALL
	26		W1307	036	22		31-31-18	ALL
	27		W1307	037	22		31-31-18	ALL
	28		W1307	038	22		31-31-18	ALL
	29		W1307	039	22		31-31-18	ALL
	30		W1307	040	22		31-31-18	ALL
	31		W1307	041	22		31-31-18	ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34		W1307	049	24		27-09-14	ALL
	35		W1307	050	24		27-09-14	ALL
	36		W1307	051	24		27-09-14	ALL
	37	UNUSED						050-099, 275-299
	37		W1307	124	24		SPARE	150-199
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D05300

Page 13

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05308J		AE0209/ /		RCPT-P36				ALL
	1		W0176	023	24		76-11-11	ALL
	2		W0176	173	22		74-31-11	ALL
	3		W0176	285Z			77-12-11	050-099, 162-199, 277-299
	3	UNUSED						150-157, 275-276
	4		W0176	285B	24		77-12-11	050-099, 162-199, 277-299
	4	UNUSED						150-157, 275-276
	5		W0176	285R	24		77-12-11	050-099, 162-199, 277-299
	5	UNUSED						150-157, 275-276
	6	UNUSED						ALL
	7	UNUSED						ALL
	8		W0176	19Y	20		78-34-11	ALL
	9	UNUSED						ALL
	10		W0176	653	22		27-23-11	ALL
	11		W0176	85T	22		73-21-19	050-099, 150-199
	11		W0176	85T	22		74-31-11	275-299
	12		W0176	18R	20		73-21-11	ALL
	13		W0176	162	22		74-31-11	ALL
	14		W0176	876	22		74-31-11	ALL
	15		W0176	05Y	24		73-33-11	ALL
	16	FL	W0176	19R	16		73-21-11	050-099, 275-276, 280-299
	16	FM	W0176	19R	16		73-21-11	150-199, 277-278
	17		W0176	241Z			73-21-14	050-099, 275-299
	17	UNUSED						150-199
	18		W0176	59H	20		78-34-11	ALL
	19	UNUSED						ALL
	20		W0176	55F	22		36-11-61	ALL
	21		W0176	651	20		27-23-11	ALL
	22	UNUSED						ALL
	23		W0176	652	20		27-23-11	ALL
	24		W0176	77F	20		36-23-11	050-099, 156-162, 166-199, 277-299
	24	UNUSED						150-155, 163-165, 275-276
	25		W0176	79F	20		36-23-11	050-099, 156-162, 166-199, 277-299
	25	UNUSED						150-155, 163-165, 275-276
	26		W0176	78F	20		36-23-11	050-099, 156-162, 166-199, 277-299
	26	UNUSED						150-155, 163-165, 275-276
	27		W0176	241B	24		73-21-14	ALL
	28		W0176	241R	24		73-21-14	ALL
	29		W0176	306Z			73-31-11	ALL
	30		W0176	306R	24		73-31-11	ALL
	31		W0176	306B	24		73-31-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05300

Page 14

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05308J		AE0209/ /		RCPT-P36 (continued)				ALL
	32		W0176	306Y	24		73-31-11	ALL
	33		W0176	GRM			78-34-11	ALL
	34	UNUSED						ALL
	35		W0176	22Y	20		78-34-11	ALL
	36		W0176	128	24		24-25-13	ALL
	37		W0176	129	24		24-25-13	ALL
	38		W0176	130	24		24-25-13	ALL
	39		W0176	131	24		24-25-13	ALL
	40		W0176	49F	22		36-11-61	ALL
	41		W0176	93E	24		36-11-61	050-099, 150-156, 162-166, 275-276
	41		W0176	48F	22		36-11-61	157, 167-199, 277-299
	DED		W0176	651Z			27-23-11	ALL
	DED		W0176	652Z			27-23-11	ALL
	DED		W0176	653Z			27-23-11	ALL
	DED		W0176	241Z			73-21-14	150-199
			W0176	19YZ			78-34-11	ALL
			W0176	22YZ			78-34-11	ALL
			W0176	59HZ			78-34-11	ALL
			W0176	GRM			78-34-11	ALL
D05308P		AE0209/ /		PLUG-P36				ALL
	1		W0744	052	24		76-11-11	ALL
	2		W0744	012	22		74-31-11	ALL
	3		W0744	221Z			77-12-11	050-099, 162-199, 277-299
	3	UNUSED						150-157, 275-276
	4		W0744	221B	24		77-12-11	050-099, 162-199, 277-299
	4	UNUSED						150-157, 275-276
	5		W0744	221R	24		77-12-11	050-099, 162-199, 277-299
	5	UNUSED						150-157, 275-276
	6	DK	W0744	104	18		78-34-11	050-099, 150-156, 162-166, 275-276
	6	DK	W0744	104	18		SPARE	157, 167-199, 277-299
	7		W0744	211Z			SPARE	050-099
	7		W0744	025	20		SPARE	150-199, 275-299
	8	DK	W0744	113	18		78-34-11	ALL
	9		W0744	211R	24		SPARE	050-099
	9		W0744	207R	24		SPARE	150-199, 275-299
	10		W0744	026	22		27-23-11	ALL
	11		W0744	027	22		74-31-11	ALL
	12		W0744	093	20		73-21-11	ALL
	13		W0744	039	22		74-31-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05300

Page 15

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05308P		AE0209/ /		PLUG-P36 (continued)				ALL
	14		W0744	040	22		74-31-11	ALL
	15		W0744	059	24		73-33-11	ALL
	16	FM	W0744	094	16		73-21-11	ALL
	17		W0744	210Z			73-21-14	ALL
	18	DK	W0744	115	18		78-34-11	ALL
	19	DK	W0744	116	18		78-34-11	ALL
	20	DK	W0744	023	18		36-11-61	ALL
	21	DK	W0744	028	18		27-23-11	ALL
	22	DK	W0744	114	18		78-34-11	ALL
	23	DK	W0744	029	18		27-23-11	ALL
	24		W0744	095	24		36-11-61	ALL
	25		W0744	096	24		36-11-61	ALL
	26		W0744	097	24		36-11-61	ALL
	27		W0744	210B	24		73-21-14	ALL
	28		W0744	210R	24		73-21-14	ALL
	29		W0744	302Z			73-31-11	ALL
	30		W0744	302R	24		73-31-11	ALL
	31		W0744	302B	24		73-31-11	ALL
	32		W0744	302Y	24		73-31-11	ALL
	33		W0744	FRX			78-34-11	ALL
	34		W0744	211B	24		SPARE	050-099
	34		W0744	207B	24		SPARE	150-199, 275-299
	35	DK	W0744	117	18		78-34-11	ALL
	36		W0744	063	24		24-25-13	ALL
	37		W0744	064	24		24-25-13	ALL
	38		W0744	065	24		24-25-13	ALL
	39		W0744	066	24		24-25-13	ALL
	40	DK	W0744	014	18		36-11-61	ALL
	41		W0744	043	24		36-11-61	ALL
	CAP	Y	W0744	207B	24		SPARE	050-099
	CAP	Y	W0744	207R	24		SPARE	050-099
	CAP	Y	W0744	091	16		SPARE	050-099, 155-199
	DED		W0744	091Z			SPARE	050-099, 155-166
	DED		W0744	091Z			73-21-11	167-199
			W0744	113Z			78-34-11	ALL
			W0744	114Z			78-34-11	ALL
			W0744	115Z			78-34-11	ALL
			W0744	116Z			78-34-11	ALL
			W0744	117Z			78-34-11	ALL
			W0744	514	20		78-34-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05300

Page 16

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05308P		AE0209/ /		PLUG-P36 (continued)				ALL
			W0744	FRX			78-34-11	ALL
D05309J		AF0116/ /		RCPT-P3-1				ALL
	1		W0035	031	22		33-16-15	ALL
	2		W0035	034	22		33-16-15	ALL
	3	UNUSED						ALL
	4		W0035	058	20		27-51-11	ALL
	5		W0035	062	22		27-51-11	ALL
	6		W0035	059	20		27-51-11	ALL
	7		W0035	060	20		27-51-11	ALL
	8		W0035	105	22		34-22-36	ALL
	9		W0035	106	20		34-22-36	ALL
	10		W0035	108	22		31-31-26	ALL
	11		W0035	109	22		31-31-26	ALL
	12	UNUSED						ALL
	13		W0035	135	22		33-16-15	ALL
	14		W0035	136	22		33-16-15	ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17		W0035	085	20		27-81-21	ALL
	18	UNUSED						ALL
	19	DL	W0035	088	18		27-81-21	ALL
	20	UNUSED						ALL
	21		W0035	089	20		27-81-21	ALL
	22	UNUSED						ALL
	23		W0035	090	20		27-81-21	ALL
	24	UNUSED						ALL
	25		W0035	079	20		27-81-11	ALL
	26	UNUSED						ALL
	27		W0035	083	22		27-81-11	ALL
	28	UNUSED						ALL
	29		W0035	080	20		27-81-11	ALL
	30	UNUSED						ALL
	31		W0035	084	22		27-81-11	ALL
	DED		W0035	031Z			33-16-15	ALL
	DED		W0035	034Z			33-16-15	ALL
	DED		W0035	058Z			27-51-11	ALL
	DED		W0035	059Z			27-51-11	ALL
	DED		W0035	060Z			27-51-11	ALL
	DED		W0035	062Z			27-51-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05300

Page 17

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05309J		AF0116/ /		RCPT-P3-1 (continued)				ALL
	DED		W0035	079Z			27-81-11	ALL
	DED		W0035	080Z			27-81-11	ALL
	DED		W0035	083Z			27-81-11	ALL
	DED		W0035	084Z			27-81-11	ALL
	DED		W0035	085Z			27-81-21	ALL
	DED		W0035	088Z			27-81-21	ALL
	DED		W0035	089Z			27-81-21	ALL
	DED		W0035	090Z			27-81-21	ALL
	DED		W0035	105Z			34-22-36	ALL
	DED		W0035	106Z			34-22-36	ALL
	DED		W0035	135Z			33-16-15	ALL
	DED		W0035	136Z			33-16-15	ALL
D05309P		AF0116/ /		PLUG-P3-1				ALL
	1		W0031	612	22		33-16-15	ALL
	2		W0031	611	22		33-16-15	ALL
	3	UNUSED						ALL
	4	DK	W0031	674	18		27-51-11	ALL
	5		W0031	675	22		27-51-11	ALL
	6	DK	W0031	676	18		27-51-11	ALL
	7		W0031	677	20		27-51-11	ALL
	8		W0031	810	22		34-22-36	ALL
	9		W0031	811	20		34-22-36	ALL
	10		W0031	745	20		31-31-26	ALL
	11		W0031	746	24		31-31-26	ALL
	12	UNUSED						ALL
	13		W0031	008	22		33-16-15	ALL
	14		W0031	010	22		33-16-15	ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	DK	W0031	714	18		27-81-21	ALL
	18	UNUSED						ALL
	19	DK	W0031	715	18		27-81-21	ALL
	20	UNUSED						ALL
	21	DK	W0031	716	18		27-81-21	ALL
	22	UNUSED						ALL
	23		W0031	717	20		27-81-21	ALL
	24	UNUSED						ALL
	25	DK	W0031	710	18		27-81-11	ALL
	26	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D05300

Page 18

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05309P		AF0116/ /		PLUG-P3-1 (continued)				ALL
	27		W0031	711	22		27-81-11	ALL
	28	UNUSED						ALL
	29	DK	W0031	712	18		27-81-11	ALL
	30	UNUSED						ALL
	31		W0031	713	22		27-81-11	ALL
	CAP	Y	W0031	256B	24		34-45-14	153-154
	CAP	Y	W0031	256R	24		34-45-14	153-154
	DED		W0031	256Z			34-45-14	153-154
D05310J		AE0209/ /		RCPT-				ALL
	1		W0176	578	24		27-28-11	ALL
	2		W0176	579	24		27-28-11	ALL
	3		W0176	580	24		27-28-11	ALL
	4		W0176	652	20		27-23-11	ALL
	5		W0176	03Y	22		27-23-11	ALL
	6		W0176	650	20		27-21-11	ALL
	7		W0176	651	20		27-23-11	ALL
	8	UNUSED						050-099
	8	DK	W0176	041	18		32-71-11	150-199, 275-299
	9		W0176	577	24		27-28-13	ALL
	10	UNUSED						050-099
	10	DK	W0176	042	18		32-71-11	150-199, 275-299
	11		W0176	213R	24		27-28-13	ALL
	12		W0176	213B	24		27-28-13	ALL
	13		W0176	87F	24		27-28-11	155-157, 166-199, 277-299
	14	UNUSED						155-157, 166-199, 277-299
	15	UNUSED						155-157, 166-199, 277-299
	DED		W0176	03YZ			27-23-11	ALL
	DED		W0176	651Z			27-23-11	ALL
	DED		W0176	652Z			27-23-11	ALL
D05310P		AE0209/ /		PLUG-P36				ALL
	1		W0748	001	24		27-28-11	ALL
	2		W0748	002	24		27-28-11	ALL
	3		W0748	003	24		27-28-11	ALL
	4		W0748	004	20		27-23-11	ALL
	5		W0748	005	22		27-23-11	ALL
	6		W0748	006	20		27-21-11	ALL
	7		W0748	007	20		27-23-11	ALL
	8	UNUSED						050-099

HOOKUP LIST
D280T132

91-21-51
Section D05300
Page 19
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05310P		AE0209/ /		PLUG-P36 (continued)				ALL
	8	DL	W0748	011	18		32-71-11	150-199, 275-299
	9		W0748	009	24		27-28-13	ALL
	10		W0748	010	22		SPARE	050-099
	10		W0748	012	18		32-71-11	150-154, 162-165, 275-276
	10	DL	W0748	012	18		32-71-11	155-157, 166-199, 277-299
	11		W0748	201R	24		27-28-13	ALL
	12		W0748	201B	24		27-28-13	ALL
	13		W0748	013	24		27-28-11	155-157, 166-199, 277-299
	14	UNUSED						155-157, 166-199, 277-299
	15	UNUSED						155-157, 166-199, 277-299
D05311J		AF0204/ /		RCPT-P61				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W0062	17K	24		31-41-13	ALL
	6		W0062	17M	24		31-41-13	ALL
	7		W0062	17P	24		31-41-13	ALL
	8		W0062	17S	24		31-41-13	ALL
	9		W0062	17U	24		31-41-13	ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12		W0062	18A	24		31-41-13	ALL
	13		W0062	18C	24		31-41-13	ALL
	14		W0062	18E	24		31-41-13	ALL
	15		W0062	18G	24		31-41-13	ALL
	16		W0062	18N	24		31-41-13	ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D05300

Page 20

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05311J		AF0204/ /		RCPT-P61 (continued)				ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31		W0062	18K	24		31-41-13	ALL
D05311P		AF0204/ /		PLUG-P61				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W1711	011	24		31-41-13	ALL
	6		W1711	012	24		31-41-13	ALL
	7		W1711	013	24		31-41-13	ALL
	8		W1711	014	24		31-41-13	ALL
	9		W1711	015	24		31-41-13	ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12		W1711	018	24		31-41-13	ALL
	13		W1711	019	24		31-41-13	ALL
	14		W1711	020	24		31-41-13	ALL
	15		W1711	021	24		31-41-13	ALL
	16		W1711	022	24		31-41-13	ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19		W1711	027	24		SPARE	ALL
	20		W1711	028	24		SPARE	ALL
	21		W1711	029	24		SPARE	ALL
	22		W1711	030	24		SPARE	ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31		W1711	036	24		31-41-13	ALL
D05312J		AE0209/ /		RCPT-P36				ALL
	1		W0176	583	24		27-38-11	ALL
	2		W0176	597	24		27-38-11	ALL

HOOKUP LIST
D280T132

91-21-51
Section D05300
Page 21
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05312J		AE0209/ /		RCPT-P36 (continued)				ALL
	3		W0176	598	24		27-38-11	ALL
	4		W0176	603	20		27-23-11	ALL
	5		W0176	03X	22		27-23-11	ALL
	6		W0176	593	24		27-38-11	ALL
	7		W0176	602	20		27-23-11	ALL
	8		W0176	594	24		27-38-11	ALL
	9		W0176	595	24		27-38-11	ALL
	10		W0176	663	24		27-31-11	ALL
	11	UNUSED						050-099, 150-154, 162-165, 275-276
	11		W0176	90F	24		27-38-11	155-157, 166-199, 277-299
	12	UNUSED						ALL
	13	FM	W0176	107	16		33-45-11	ALL
	14	FM	W0176	108	16		33-45-11	ALL
	15	UNUSED						050-099, 150-154, 162-165, 275-276
	15		W0176	88F	24		27-38-11	155-157, 166-199, 277-299
D05312P		AE0209/ /		PLUG-P36				ALL
	1		W0750	001	24		27-38-11	ALL
	2		W0750	002	24		27-38-11	ALL
	3		W0750	003	24		27-38-11	ALL
	4		W0750	004	20		27-23-11	ALL
	5		W0750	005	22		27-23-11	ALL
	6		W0750	006	24		27-38-11	ALL
	7		W0750	007	20		27-23-11	ALL
	8		W0750	008	24		27-38-11	ALL
	9		W0750	009	24		27-38-11	ALL
	10		W0750	010	22		27-31-11	ALL
	11		W0750	011	22		SPARE	050-099, 150-154, 162-165, 275-276
	11		W0750	020	24		27-38-11	155-157, 166-199, 277-299
	12		W0750	012	22		SPARE	050-099, 150-154, 162-165, 275-276
	12	UNUSED						155-157, 166-199, 277-299
	13	FL	W0750	013	16		33-45-11	ALL
	14	FL	W0750	014	16		33-45-11	ALL
	15	UNUSED						050-099, 150-154, 162-165, 275-276
	15		W0750	015	24		27-38-11	155-157, 166-199, 277-299
D05313J		AE0209/ /		RCPT-P36				ALL
	1	UNUSED						ALL
	2		W0184	726	22		27-09-13	ALL
	3	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D05300

Page 22

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05313J		AE0209/ /		RCPT-P36 (continued)				ALL
	4		W0184	727	22		27-09-13	ALL
	5		W0184	161	22		27-09-13	ALL
D05313P		AE0209/ /		PLUG-P36				ALL
	1	UNUSED						ALL
	2		W1521	011	22		27-09-13	ALL
	3	UNUSED						ALL
	4		W1521	012	22		27-09-13	ALL
	5		W1521	008	22		27-09-13	ALL
D05315J		AE0209/ /		RCPT-P36				ALL
	1		W0176	04S	22		27-09-13	ALL
	2		W0176	04T	22		27-09-13	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9		W0176	617	22		27-09-12	ALL
	10		W0176	FRL			73-21-17	050-099
	10		W0176	13BZ			73-21-17	150-199
	10		W0176	FR5			73-21-17	275-299
	11		W0176	13B	24		73-21-17	ALL
	12		W0176	13C	24		73-21-17	ALL
			W0176	FRL			73-21-17	050-099
			W0176	13BZ			73-21-17	050-099, 275-299
			W0176	13CZ			73-21-17	050-099, 275-299
			W0176	FR5			73-21-17	275-299
D05315P		AE0209/ /		PLUG-P36				ALL
	1		W1501	021	22		27-09-13	ALL
	2		W1501	022	22		27-09-13	ALL
	3	UNUSED						ALL
	4		W1501	004	24		SPARE	ALL
	5		W1501	005	24		SPARE	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9		W1501	009	22		27-09-12	ALL

HOOKUP LIST
D280T132

91-21-51
Section D05300
Page 23
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05315P		AE0209/ /		PLUG-P36 (continued)				ALL
	10		W1501	FRB			73-21-17	ALL
	11		W1501	127	24		73-21-17	ALL
	12		W1501	126	24		73-21-17	ALL
			W1501	126Z			73-21-17	ALL
			W1501	127Z			73-21-17	ALL
			W1501	FRB			73-21-17	ALL
D05316J		AE0218/ /		RCPT-P37				ALL
	1		W0192	91D	24		73-21-14	ALL
	2		W0192	656	22		27-81-21	ALL
	3		W0192	189	24		78-34-21	ALL
	4		W0192	020	24		32-09-12	ALL
	5	UNUSED						ALL
	6		W0192	124Z			73-21-19	ALL
	7		W0192	180	22		73-21-19	ALL
	8		W0192	156	24		78-34-21	ALL
	9		W0192	571	22		27-81-11	ALL
	10		W0192	572	22		27-81-11	ALL
	11		W0192	575	22		27-81-21	ALL
	12		W0192	218B	22		27-81-21	ALL
	13		W0192	218R	22		27-81-21	ALL
	14		W0192	305B	24		27-81-21	ALL
	15		W0192	305R	24		27-81-21	ALL
	16		W0192	305Y	24		27-81-21	ALL
	17		W0192	208B	22		27-51-41	ALL
	18		W0192	208R	22		27-51-41	ALL
	19		W0192	401B	24		27-51-41	ALL
	20		W0192	401G	24		27-51-41	ALL
	21		W0192	401R	24		27-51-41	ALL
	22		W0192	401Y	24		27-51-41	ALL
	23		W0192	188	24		78-34-21	ALL
	24		W0192	FRH			73-21-14	050-099
	24		W0192	FRY			73-21-14	150-199, 275-299
	25		W0192	64A	20		30-34-21	ALL
	26		W0192	267R	24		73-21-14	ALL
	27		W0192	012	24		31-41-13	ALL
	28		W0192	174	22		27-81-11	ALL
	29		W0192	91G	24		73-21-11	ALL
	30		W0192	09Q	24		73-21-18	ALL
	31	DL	W0192	553	18		27-81-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05300

Page 24

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05316J		AE0218/ /		RCPT-P37 (continued)				ALL
	32		W0192	249B	24		73-21-14	ALL
	33		W0192	541	20		27-23-11	ALL
	34		W0192	91GZ			73-21-11	ALL
	35		W0192	555	22		27-81-21	ALL
	36		W0192	556	22		27-81-21	ALL
	37		W0192	559	22		27-81-11	ALL
	38	DL	W0192	569	18		27-81-21	ALL
	39		W0192	225R	24		73-21-14	ALL
	40	UNUSED						ALL
	41		W0192	06J	22		73-21-19	ALL
	42		W0192	562	22		27-81-11	ALL
	43	DL	W0192	561	18		27-81-11	ALL
	44		W0192	560	22		27-81-11	ALL
	45		W0192	603	24		73-21-17	ALL
	46		W0192	225B	24		73-21-14	ALL
	47		W0192	267B	24		73-21-14	ALL
	48		W0192	08K	22		27-81-11	ALL
	49		W0192	13E	22		27-81-11	ALL
	50		W0192	61A	24		24-11-21	ALL
	51		W0192	21P	24		24-11-21	ALL
	52		W0192	124	20		73-21-19	ALL
	53		W0192	249R	24		73-21-14	ALL
	54		W0192	178	24		32-09-12	ALL
	55		W0192	157	24		78-34-21	050-099
	55		W0192	157	22		78-34-21	150-199, 275-299
	56		W0192	110	24		32-09-12	ALL
	57		W0192	592	24		32-09-12	ALL
	58		W0192	09M	22		28-22-21	ALL
	59		W0192	21K	24		24-11-21	ALL
	60		W0192	21G	24		77-35-11	ALL
	61		W0192	21N	24		24-11-21	ALL
			W0192	FRH			73-21-14	050-099
			W0192	225Z			73-21-14	ALL
			W0192	249Z			73-21-14	ALL
			W0192	267Z			73-21-14	ALL
			W0192	91DZ			73-21-14	ALL
			W0192	FRY			73-21-14	150-199, 275-299
D05316P		AE0218/ /		PLUG-P37				ALL
	1		W0768	001	24		73-21-14	ALL

HOOKUP LIST
D280T132

91-21-51
Section D05300
Page 25
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05316P		AE0218/ /		PLUG-P37 (continued)				ALL
	2		W0768	162	22		27-81-21	ALL
	3		W0768	054	24		78-34-21	ALL
	4		W0768	199	24		32-09-12	ALL
	5	UNUSED						050-099, 157, 167-199, 275-299
	5		W0768	125	20		SPARE	150-156, 162-166
	6		W0768	100Z			73-21-19	ALL
	7		W0768	065	22		73-21-19	ALL
	8		W0768	052	24		78-34-21	ALL
	9		W0768	074	22		27-81-11	ALL
	10		W0768	075	22		27-81-11	ALL
	11		W0768	079	22		27-81-21	ALL
	12		W0768	206B	24		27-81-21	ALL
	13		W0768	206R	24		27-81-21	ALL
	14		W0768	303B	24		27-81-21	ALL
	15		W0768	303R	24		27-81-21	ALL
	16		W0768	303Y	24		27-81-21	ALL
	17		W0768	207B	22		27-51-41	ALL
	18		W0768	207R	22		27-51-41	ALL
	19		W0768	401B	22		27-51-41	ALL
	20		W0768	401G	22		27-51-41	ALL
	21		W0768	401R	22		27-51-41	ALL
	22		W0768	401Y	22		27-51-41	ALL
	23		W0768	043	24		78-34-21	ALL
	24		W0768	FRK			73-21-14	050-099, 150-199
	24		W0768	FRF			73-21-14	275-299
	25		W0768	014	20		30-34-21	ALL
	26		W0768	202R	24		73-21-14	ALL
	27		W0768	053	24		31-41-13	ALL
	28		W0768	161	22		27-81-11	ALL
	29		W0768	002	24		73-21-11	ALL
	30		W0768	026	24		73-21-18	ALL
	31	DK	W0768	025	18		27-81-11	ALL
	32		W0768	205B	24		73-21-14	ALL
	33		W0768	048	20		27-23-11	ALL
	34		W0768	002Z			73-21-11	ALL
	35		W0768	077	22		27-81-21	ALL
	36		W0768	078	22		27-81-21	ALL
	37		W0768	076	22		27-81-11	ALL
	38	DK	W0768	029	18		27-81-21	ALL
	39		W0768	204R	24		73-21-14	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05300

Page 26

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05316P		AE0218/ /		PLUG-P37 (continued)				ALL
	40	UNUSED						050-099
	40		W0768	178	22		SPARE	150-199, 275-299
	41		W0768	179	22		73-21-19	ALL
	42		W0768	080	22		27-81-11	ALL
	43	DK	W0768	081	18		27-81-11	ALL
	44		W0768	082	22		27-81-11	ALL
	45		W0768	092	24		73-21-17	ALL
	46		W0768	204B	24		73-21-14	ALL
	47		W0768	202B	24		73-21-14	ALL
	48		W0768	174	22		27-81-11	ALL
	49		W0768	175	22		27-81-11	ALL
	50		W0768	148	24		24-11-21	ALL
	51		W0768	544	24		24-11-21	ALL
	52		W0768	100	20		73-21-19	ALL
	53		W0768	205R	24		73-21-14	ALL
	54		W0768	196	24		32-09-12	ALL
	55		W0768	055	24		78-34-21	ALL
	56		W0768	197	24		32-09-12	ALL
	57		W0768	198	24		32-09-12	ALL
	58		W0768	108	22		28-22-21	ALL
	59		W0768	149	24		24-11-21	ALL
	60		W0768	146	24		77-35-11	ALL
	61		W0768	147	24		24-11-21	050-099, 280-299
	61		W0768	147	22		24-11-21	150-199, 275-278
	CAP	Y	W0768	178	22		SPARE	050-099
	CAP	Y	W0768	186	22		SPARE	050-099, 150-199
	CAP	Y	W0768	187	20		SPARE	050-099, 150-199
	CAP	Y	W0768	503	22		SPARE	050-099, 150-199
	CAP	Y	W0768	064	24		SPARE	ALL
	CAP	Y	W0768	501	22		SPARE	150-199
	CAP	Y	W0768	502	22		SPARE	150-199
	CAP	Y	W0768	125	20		SPARE	157, 167-199
			W0768	FRK			73-21-14	050-099, 150-199
			W0768	001Z			73-21-14	ALL
			W0768	202Z			73-21-14	ALL
			W0768	204Z			73-21-14	ALL
			W0768	205Z			73-21-14	ALL
			W0768	FRF			73-21-14	275-299

HOOKUP LIST

D280T132

91-21-51

Section D05300

Page 27

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05317J		AE0218/ /		RCPT-P37				ALL
	1		W0192	892	22		27-09-13	ALL
	2	UNUSED						ALL
	3		W0192	596	22		27-09-12	ALL
	4	UNUSED						ALL
	5		W0192	893	22		27-09-13	ALL
	6		W0192	691	20		27-61-18	ALL
	7		W0192	692	20		27-61-18	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D05317P		AE0218/ /		RCPT-P37				ALL
	1		W1541	021	22		27-09-13	ALL
	2		W1541	013	22		SPARE	ALL
	3		W1541	009	22		27-09-12	ALL
	4		W1541	010	22		SPARE	ALL
	5		W1541	022	22		27-09-13	ALL
	6		W1541	008	20		27-61-18	ALL
	7		W1541	007	20		27-61-18	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D05318J		AE0218/ /		RCPT-P37				ALL
	1		W0192	541	20		27-23-11	ALL
	2		W0192	540	20		27-23-11	ALL
	3		W0192	08J	22		27-23-11	ALL
	4	DK	W0192	74A	18		21-66-21	050-099, 162-199
	4	UNUSED						150-157, 275-299
	5	DK	W0192	74B	18		21-66-21	050-099, 162-199
	5	UNUSED						150-157, 275-299
	6	DK	W0192	74C	18		21-66-21	050-099, 162-199
	6	UNUSED						150-157, 275-299
	7		W0192	74E	20		21-66-21	050-099, 162-199
	7	UNUSED						150-157, 275-299

HOOKUP LIST

D280T132

91-21-51

Section D05300

Page 28

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05318J		AE0218/ /		RCPT-P37 (continued)				ALL
	8		W0192	74F	20		21-66-21	050-099, 162-199
	8	UNUSED						150, 152-157
	9		W0192	74G	20		21-66-21	050-099, 162-199
	9	UNUSED						150, 152-157
	10		W0192	75H	22		21-66-41	050-099, 150, 152-199
	11		W0192	75G	22		21-66-41	050-099, 150, 152-199
	12	DK	W0192	75D	18		21-66-41	050-099, 150, 152-199
	13	DK	W0192	75E	18		21-66-41	050-099, 150, 152-199
	14	DK	W0192	75F	18		21-66-41	050-099, 150, 152-199
	15		W0192	75U	20		21-66-41	050-099, 150, 152-199
	16		W0192	75J	20		21-66-41	050-099, 150, 152-199
	17		W0192	75L	20		21-66-41	050-099, 150, 152-199
	18		W0192	75M	22		21-66-41	050-099, 150, 152-199
	19		W0192	75N	22		21-66-41	050-099, 150, 152-199
	20		W0192	75Q	22		21-66-41	050-099, 150, 152-199
	21		W0192	274R	22		21-66-41	050-099, 150, 152-199
	22		W0192	274B	22		21-66-41	050-099, 150, 152-199
	23		W0192	274Z			21-66-41	050-099, 150, 152-199
	24	UNUSED						050-099, 150, 152-199
D05318P		AE0218/ /		PLUG-P37				ALL
	1		W0770	001	20		27-23-11	ALL
	2		W0770	002	20		27-23-11	ALL
	3		W0770	003	22		27-23-11	ALL
	4	DK	W0770	301R	18		21-66-21	050-099, 162-199
	4		W0770	004	22		SPARE	150-157, 275-299
	5	DK	W0770	301Y	18		21-66-21	050-099, 162-199
	5		W0770	005	22		SPARE	150-157, 275-299
	6	DK	W0770	301B	18		21-66-21	050-099, 162-199
	6	UNUSED						150-157, 275-299
	7		W0770	115	20		21-66-21	050-099, 162-199
	7	UNUSED						150-157, 275-299
	8		W0770	104	20		21-66-21	050-099, 162-199
	8	UNUSED						150, 152-157
	9		W0770	105	20		21-66-21	050-099, 162-199
	9	UNUSED						150, 152-157
	10		W0770	123	22		21-66-41	050-099, 150, 152-199
	11		W0770	122	22		21-66-41	050-099, 150, 152-199
	12	DK	W0770	304R	18		21-66-41	050-099, 150, 152-199
	13	DK	W0770	304Y	18		21-66-41	050-099, 150, 152-199

HOOKUP LIST
D280T132

91-21-51
Section D05300
Page 29
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05318P		AE0218/ /		PLUG-P37 (continued)				ALL
	14	DK	W0770	304B	18		21-66-41	050-099, 150, 152-199
	15		W0770	110	20		21-66-41	050-099, 150, 152-199
	16		W0770	108	20		21-66-41	050-099, 150, 152-199
	17		W0770	109	20		21-66-41	050-099, 150, 152-199
	18		W0770	111	22		21-66-41	050-099, 150, 152-199
	19		W0770	112	22		21-66-41	050-099, 150, 152-199
	20		W0770	113	22		21-66-41	050-099, 150, 152-199
	21		W0770	201R	22		21-66-41	050-099, 150, 152-199
	22		W0770	201B	22		21-66-41	050-099, 150, 152-199
	23		W0770	201Z	22		21-66-41	050-099, 150, 152-199
	24	UNUSED						050-099, 150, 152-199
	CAP	Y	W0770	004	22		SPARE	162-199
	CAP	Y	W0770	005	22		SPARE	162-199
D05319J		AE0224/ /		RCPT-P37				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W0192	598	22		27-09-12	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
D05319P		AE0224/ /		PLUG-P37				ALL
	1		W1521	003	22		SPARE	ALL
	2		W1521	006	20		SPARE	ALL
	3		W1521	004	22		27-09-12	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
D05322J		AE0203/ /		RCPT-P33				ALL
	1		W0142	693	14		27-51-11	ALL
	2		W0142	692	14		27-51-11	ALL
	3		W0142	691	14		27-51-11	ALL
	4	UNUSED						ALL
D05322P		AE0203/ /		PLUG-P33				ALL
	1		W0206	026	12		27-51-11	ALL
	2		W0206	027	12		27-51-11	ALL
	3		W0206	028	12		27-51-11	ALL
	4	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D05300

Page 30

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05323J		AE0303/ /		RCPT-E1-1				ALL
	1		W0121	002	22		22-21-11	ALL
	2		W0121	005	22		22-22-11	ALL
	3		W0121	008	22		22-22-11	ALL
	4		W0121	116	22		22-22-11	ALL
	5		W0121	095	22		22-24-11	ALL
	6		W0121	009	22		27-09-12	ALL
	7		W0121	075	22		27-09-13	ALL
	8		W0121	076	22		27-09-13	ALL
	9		W0121	215R	24		22-21-11	ALL
	10		W0121	215B	24		22-21-11	ALL
	11		W0121	FRE			22-21-11	ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15		W0121	084	22		27-61-11	ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19		W0121	218R	24		22-22-11	ALL
	20		W0121	218B	24		22-22-11	ALL
	21		W0121	FRG			22-22-11	ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
			W0121	215	20		22-21-11	ALL
			W0121	215Z			22-21-11	ALL
			W0121	218	20		22-22-11	ALL
			W0121	218Z			22-22-11	ALL
			W0121	FRE			22-21-11	ALL
			W0121	FRG			22-22-11	ALL
D05323P		AE0303/ /		PLUG-E1-1				ALL
	1		W0585	001	22		22-21-21	ALL
	2		W0585	002	22		22-22-11	ALL
	3		W0585	003	22		22-22-11	ALL
	4		W0585	004	22		22-22-11	ALL
	5		W0585	005	22		22-24-11	ALL
	6		W0585	006	22		27-09-12	ALL
	7		W0585	007	22		27-09-13	ALL
	8		W0585	008	22		27-09-13	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05300

Page 31

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05323P		AE0303/ /		PLUG-E1-1 (continued)				ALL
	9		W0585	201R	24		22-21-21	ALL
	10		W0585	201B	24		22-21-21	ALL
	11		W0585	201Z			22-21-21	ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14		W0585	014	22		SPARE	ALL
	15		W0585	015	22		27-61-11	ALL
	16		W0585	016	22		SPARE	ALL
	17		W0585	017	20		SPARE	ALL
	18		W0585	018	20		SPARE	ALL
	19		W0585	202R	24		22-22-11	ALL
	20		W0585	202B	24		22-22-11	ALL
	21		W0585	202Z			22-22-11	ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D05325J		AE0303/ /		RCPT-E1-1				ALL
	1	UNUSED						ALL
	2		W1101	020	22		27-09-11	ALL
	3		W1101	019	22		27-09-11	ALL
	4		W1101	033	20		27-11-12	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	DED		W1101	019Z			27-09-11	ALL
	DED		W1101	020Z			27-09-11	ALL
	DED		W1101	033Z			27-11-12	ALL
D05325P		AE0303/ /		PLUG-E1-1				ALL
	1		W0207	001	22		SPARE	ALL
	2		W0207	002	22		27-09-11	ALL
	3		W0207	003	22		27-09-11	ALL
	4		W0207	019	18		27-11-12	ALL
	5	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D05300

Page 32

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05325P		AE0303/ /		PLUG-E1-1 (continued)				ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D05326J		AE0218/ /		RCPT-P37				ALL
	1		W0192	03A	24		75-23-11	ALL
	2	UNUSED						ALL
	3		W0192	599	22		74-31-21	ALL
	4		W0192	05Y	22		74-31-21	ALL
	5		W0192	844	22		78-36-21	ALL
	6		W0192	607	22		74-31-21	ALL
	7		W0192	FRB			78-36-21	050-099
	7		W0192	FR2			78-36-21	150-199, 275-299
	8		W0192	289	22		30-21-11	ALL
	9		W0192	857	22		78-36-21	ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15		W0192	03C	24		75-23-11	ALL
	16		W0192	03D	24		75-23-11	ALL
	17		W0192	03E	24		75-23-11	ALL
	18	UNUSED						ALL
	19		W0192	840	22		30-21-11	ALL
	20		W0192	285	22		30-21-11	ALL
	21		W0192	841	22		30-21-11	ALL
	22		W0192	843	24		30-21-11	ALL
	23		W0192	78H	20		78-34-21	ALL
	24		W0192	309B	24		73-31-11	ALL
	25		W0192	309R	24		73-31-11	ALL
	26		W0192	309Y	24		73-31-11	ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D05300
Page 33
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05326J		AE0218/ /		RCPT-P37 (continued)				ALL
	31		W0192	06P	24		78-36-21	ALL
	32		W0192	310Y	24		79-31-11	ALL
	33		W0192	310R	24		79-31-11	ALL
	34		W0192	310B	24		79-31-11	ALL
	35		W0192	07K	22		79-33-11	ALL
	36		W0192	07L	22		79-33-11	ALL
	37		W0192	07Q	22		79-35-11	ALL
	38		W0192	570	22		27-81-11	ALL
	39	DL	W0192	557	18		27-81-11	ALL
	40		W0192	558	22		27-81-11	ALL
	41		W0192	252Z			73-21-14	ALL
	42		W0192	252B	24		73-21-14	ALL
	43		W0192	252R	24		73-21-14	ALL
	44		W0192	309Z			73-31-11	ALL
	45		W0192	24V	20		78-34-21	ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49		W0192	06W	24		78-36-21	050-099, 150-156, 162-166, 275-276
	49		W0192	06W	24		SPARE	157, 167-199, 277-299
	50		W0192	08U	24		73-21-14	ALL
	51		W0192	12A	24		73-33-11	ALL
	52		W0192	12B	24		73-33-11	ALL
	53		W0192	011	22		78-34-21	ALL
	54		W0192	FRI			78-34-21	ALL
	55		W0192	69J	24		78-36-21	ALL
DED			W0192	05YZ			74-31-21	ALL
DED			W0192	599Z			74-31-21	ALL
DED			W0192	607Z			74-31-21	ALL
			W0192	857Z			78-36-21	050-099
			W0192	859	20		78-36-21	050-099
			W0192	FRB			78-36-21	050-099
			W0192	24VZ			78-34-21	ALL
			W0192	78HZ			78-34-21	ALL
			W0192	FRI			78-34-21	ALL
		\$	W0192	857Z			78-36-21	150-199, 275-299
		\$	W0192	859	20		78-36-21	150-199, 275-299
		\$	W0192	FR2			78-36-21	150-199, 275-299

HOOKUP LIST

D280T132

91-21-51

Section D05300

Page 34

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05326P		AE0218/ /		PLUG-P37				ALL
	1		W0766	084	24		75-23-11	ALL
	2	DK	W0766	101	18		SPARE	ALL
	3		W0766	025	22		74-31-21	ALL
	4		W0766	038	22		74-31-21	ALL
	5		W0766	001	22		78-36-21	ALL
	6		W0766	004	22		74-31-21	ALL
	7		W0766	002Z			78-36-21	ALL
	8		W0766	098	22		30-21-11	ALL
	9		W0766	002	22		78-36-21	ALL
	10	DK	W0766	100	18		SPARE	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14		W0766	093	24		SPARE	ALL
	15		W0766	083	24		75-23-11	ALL
	16		W0766	086	24		75-23-11	ALL
	17		W0766	085	24		75-23-11	ALL
	18		W0766	037	22		74-31-21	ALL
	19		W0766	010	22		30-21-11	ALL
	20		W0766	013	24		30-21-11	ALL
	21		W0766	028	22		30-21-11	ALL
	22		W0766	033	24		30-21-11	ALL
	23	DK	W0766	514	18		78-34-21	ALL
	24		W0766	302B	24		73-31-11	ALL
	25		W0766	302R	24		73-31-11	ALL
	26		W0766	302Y	24		73-31-11	ALL
	27	UNUSED						050-099
	27		W0766	303R	20		SPARE	150-199, 275-299
	28	UNUSED						050-099
	28		W0766	303B	20		SPARE	150-199, 275-299
	29	UNUSED						050-099
	29		W0766	303Y	20		SPARE	150-199, 275-299
	30		W0766	035	24		SPARE	ALL
	31		W0766	036	24		78-36-21	ALL
	32		W0766	301Y	24		79-31-11	ALL
	33		W0766	301R	24		79-31-11	ALL
	34		W0766	301B	24		79-31-11	ALL
	35		W0766	009	22		79-33-11	ALL
	36		W0766	064	22		79-33-11	ALL
	37		W0766	005	22		79-35-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05300

Page 35

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05326P		AE0218/ /		PLUG-P37 (continued)				ALL
	38		W0766	061	22		27-81-11	ALL
	39	DK	W0766	062	18		27-81-11	ALL
	40		W0766	063	22		27-81-11	ALL
	41		W0766	202Z			73-21-14	ALL
	42		W0766	202B	24		73-21-14	ALL
	43		W0766	202R	24		73-21-14	ALL
	44		W0766	302Z			73-31-11	ALL
	45	DK	W0766	513	18		78-34-21	ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48		W0766	091	24		78-36-21	050-099, 275-278
	48		W0766	091	24		SPARE	150-199, 280-299
	49		W0766	092	24		78-36-21	050-099, 275-278
	49		W0766	092	24		SPARE	150-199, 280-299
	50		W0766	023	24		73-21-14	ALL
	51		W0766	089	24		73-33-11	ALL
	52		W0766	090	24		73-33-11	ALL
	53		W0766	019	24		78-34-21	ALL
	54		W0766	FRV			78-34-21	ALL
	55		W0766	125	24		78-36-21	ALL
	CAP	Y	W0766	007	20		SPARE	150-199
	CAP	Y	W0766	304B	20		SPARE	150-199
	CAP	Y	W0766	304R	20		SPARE	150-199
	CAP	Y	W0766	304Y	20		SPARE	150-199
	CAP	Y	W0766	012	22		SPARE	150-199, 275-299
	DED		W0766	304Z			SPARE	150-199
			W0766	512	20		78-34-21	ALL
			W0766	513Z			78-34-21	ALL
			W0766	514Z			78-34-21	ALL
			W0766	FRV			78-34-21	ALL
D05327J		0354/284/L040		RCPT-				150-157, 275-299
	1		W0665	005	22		23-42-11	150-157, 275-299
	2		W0665	130	24		23-34-13	150-154, 156-157, 275-299
	2		W0665	082	24		23-34-13	155
	3		W0665	018	22		33-25-11	150-157, 275-299
	4		W0665	030	20		23-42-11	150-157, 275-299
	5	UNUSED						150-157, 275-299

HOOKUP LIST

D280T132

91-21-51

Section D05300

Page 36

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05327P		0354/284/L040		PLUG-				150-157, 275-299
	1		W0104	051	22		23-42-11	150-157, 275-299
	2		W0104	052	22		23-34-13	150-157, 275-299
	3		W0104	053	22		33-25-11	150-157, 275-299
	4		W0104	054	20		23-42-11	150-157, 275-299
	5	UNUSED						150-157, 275-299
D05328J		AE0218/ /		RCPT-P37				ALL
	1		W0192	597	22		74-31-21	ALL
	2		W0192	05W	22		74-31-21	ALL
	3		W0192	89C	22		73-21-19	050-099, 150-199
	3		W0192	89C	22		74-31-21	275-299
	4		W0192	554	22		27-81-21	ALL
	5	DL	W0192	573	18		27-81-21	ALL
	6		W0192	574	20		27-81-21	ALL
	7		W0192	68D	20		73-21-11	ALL
	8		W0192	01J	24		31-41-13	ALL
	9		W0192	012	24		31-41-13	ALL
	10		W0192	606	22		74-31-21	ALL
	11		W0192	67YZ			73-21-11	ALL
	12	UNUSED						ALL
	13	FL	W0192	68C	16		73-21-11	ALL
	14	UNUSED						ALL
	15		W0192	282Z			28-41-11	ALL
	16	FL	W0192	67Y	16		73-21-11	ALL
	17	UNUSED						ALL
	18		W0192	281Z			73-21-14	ALL
	19		W0192	282B	24		28-41-11	ALL
	20		W0192	281B	24		73-21-14	ALL
	21		W0192	281R	24		73-21-14	ALL
	22		W0192	280R	24		77-35-11	ALL
	23		W0192	280B	24		77-35-11	ALL
	24		W0192	279R	24		77-35-11	ALL
	25		W0192	279B	24		77-35-11	ALL
	26		W0192	282R	24		28-41-11	ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29		W0192	309Z			73-31-11	ALL
	30		W0192	309B	24		73-31-11	ALL
	31		W0192	309R	24		73-31-11	ALL
	32		W0192	309Y	24		73-31-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05300

Page 37

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05328J		AE0218/ /		RCPT-P37 (continued)				ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36		W0192	279Z			77-35-11	ALL
	37		W0192	280Z			77-35-11	ALL
	38	UNUSED						ALL
	39		W0192	144	24		32-41-11	ALL
	40		W0192	145	24		32-41-11	ALL
	41		W0192	50M	24		49-72-11	050-099, 162-199, 275-299
	41	UNUSED						150-157
D05328P		AE0218/ /		PLUG-P37				ALL
	1		W0764	029	22		74-31-21	ALL
	2		W0764	030	22		74-31-21	ALL
	3		W0764	021	22		74-31-21	ALL
	4	DK	W0764	032	18		27-81-21	ALL
	5	DK	W0764	033	18		27-81-21	ALL
	6	DK	W0764	034	20		27-81-21	050-099
	6		W0764	034	20		27-81-21	150-199, 275-299
	7		W0764	093	20		73-21-11	ALL
	8		W0764	076	24		31-41-13	ALL
	9		W0764	077	24		31-41-13	ALL
	10		W0764	012	22		74-31-21	ALL
	11		W0764	091Z			73-21-11	ALL
	12		W0764	027	20		SPARE	ALL
	13	EO	W0764	094	16		73-21-11	050-099, 155-199
	13	FM	W0764	094	16		73-21-11	150-154, 275-299
	14		W0764	501	22		SPARE	ALL
	15		W0764	047Z			28-41-11	ALL
	16	FM	W0764	091	16		73-21-11	ALL
	17	UNUSED						050-099, 150-199, 275-276, 280-299
	17		W0764	010	20		SPARE	277-278
	18		W0764	210Z			73-21-14	ALL
	19		W0764	047B	24		28-41-11	ALL
	20		W0764	210B	24		73-21-14	ALL
	21		W0764	210R	24		73-21-14	ALL
	22		W0764	246R	24		77-35-11	ALL
	23		W0764	246B	24		77-35-11	ALL
	24		W0764	249R	24		77-35-11	ALL
	25		W0764	249B	24		77-35-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05300

Page 38

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05328P		AE0218/ /		PLUG-P37 (continued)				ALL
	26		W0764	047R	24		28-41-11	ALL
	27	UNUSED						050-099, 150-199, 275-276, 280-299
	27		W0764	502	22		SPARE	277-278
	28	UNUSED						ALL
	29		W0764	302Z			73-31-11	ALL
	30		W0764	302B	24		73-31-11	ALL
	31		W0764	302R	24		73-31-11	ALL
	32		W0764	302Y	24		73-31-11	ALL
	33		W0764	212B	24		SPARE	050-099
	33	UNUSED						150-199, 275-299
	34		W0764	212R	24		SPARE	050-099
	34	UNUSED						150-199, 275-299
	35		W0764	212Z			SPARE	050-099
	35	UNUSED						150-199, 275-299
	36		W0764	249Z			77-35-11	ALL
	37		W0764	246Z			77-35-11	ALL
	38	UNUSED						ALL
	39		W0764	039	24		32-41-11	ALL
	40		W0764	040	24		32-41-11	ALL
	41		W0764	044	24		49-72-11	050-099, 162-199, 275-299
	41	UNUSED						150-157
	CAP	Y	W0764	502	22		SPARE	050-099, 150-199, 275-276
	CAP	Y	W0764	064	24		SPARE	150-199
	CAP	Y	W0764	070	24		SPARE	150-199
	CAP	Y	W0764	010	20		SPARE	150-199, 275-276, 280-299
D05329J		0354/284/R040		RCPT-				150-157, 275-299
	1		W0665	004	22		23-42-11	150-157, 275-299
	2		W0665	010	22		23-34-13	150-157
	2		W0665	129	24		23-34-13	275-299
	3		W0665	019	22		33-25-11	150-157, 275-299
	4		W0665	031	20		23-42-11	150-157, 275-299
	5	UNUSED						150-157, 275-299
D05329P		0354/284/R040		PLUG-				150-157, 275-299
	1		W0102	051	22		23-42-11	150-157, 275-299
	2		W0102	052	22		23-34-13	150-157, 275-299
	3		W0102	053	22		33-25-11	150-157, 275-299
	4		W0102	054	20		23-42-11	150-157, 275-299
	5	UNUSED						150-157, 275-299

HOOKUP LIST

D280T132

91-21-51

Section D05300

Page 39

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05330J		AE0218/ /		RCPT-P37				ALL
	1		W0188	081	24		22-41-11	ALL
	2		W0188	110	22		78-36-11	ALL
	3		W0188	122	22		29-11-22	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W0188	201B	22		27-51-41	ALL
	8		W0188	201R	22		27-51-41	ALL
	9		W0188	401B	24		27-51-41	ALL
	10		W0188	401R	24		27-51-41	ALL
	11		W0188	401Y	24		27-51-41	ALL
	12		W0188	401G	24		27-51-41	ALL
	13		W0192	5A8	24		27-89-11	050-099, 162-199
	13	UNUSED						150-157, 275-299
	14		W0188	062	24		27-18-11	050-099, 150-154, 162-165, 275-276
	14	UNUSED						155-157, 166-199, 277-299
	15		W0188	063	24		27-18-11	050-099, 150-154, 162-165, 275-276
	15	UNUSED						155-157, 166-199, 277-299
	16	UNUSED						ALL
	17		W0188	060	24		27-18-11	050-099, 150-154, 162-165, 275-276
	17	UNUSED						155-157, 166-199, 277-299
	18		W0188	061	24		27-18-11	050-099, 150-154, 162-165, 275-276
	18	UNUSED						155-157, 166-199, 277-299
	19	DL	W0188	121	18		33-44-21	ALL
	20	UNUSED						ALL
	21		W0188	107	22		28-42-11	ALL
	22		W0188	074	22		28-42-12	ALL
	23	UNUSED						ALL
	24	UNUSED						050-099, 162-199
	24		W0192	5A8	24		27-89-11	150-157, 275-299
	DED		W0188	074Z			28-42-12	ALL
	DED		W0188	122Z			29-11-22	ALL
D05330P		AE0218/ /		PLUG-P37				ALL
	1		W0752	021	24		22-41-11	ALL
	2		W0752	048	22		78-36-11	ALL
	3		W0752	050	22		29-11-22	ALL
	4	UNUSED						050-099
	4		W0752	072	22		SPARE	150-199, 275-299
	5	UNUSED						050-099

HOOKUP LIST

D280T132

91-21-51

Section D05300

Page 40

Feb 06/2009



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05330P		AE0218/ /		PLUG-P37 (continued)				ALL
	5		W0752	073	22		SPARE	150-199, 275-299
	6	UNUSED						ALL
	7		W0752	205B	22		27-51-41	ALL
	8		W0752	205R	22		27-51-41	ALL
	9		W0752	404B	24		27-51-41	ALL
	10		W0752	404R	24		27-51-41	ALL
	11		W0752	404Y	24		27-51-41	ALL
	12		W0752	404G	24		27-51-41	ALL
	13		W0752	122	22		27-89-11	050-099, 162-199
	13		W0752	078	22		SPARE	150-154, 275-276
	13	UNUSED						155-157, 277-299
	14		W0752	002	22		27-18-11	050-099, 150-156, 162-166, 275-276
	14		W0752	002	22		SPARE	157, 167-199, 277-299
	15		W0752	003	22		27-18-11	050-099, 150-156, 162-166, 275-276
	15		W0752	003	22		SPARE	157, 167-199, 277-299
	16	UNUSED						ALL
	17		W0752	007	22		27-18-11	050-099, 150-154, 162-165, 275-276
	17	UNUSED						155-157, 166-199, 277-299
	18		W0752	008	22		27-18-11	050-099, 150-154, 162-165, 275-276
	18	UNUSED						155-157, 166-199, 277-299
	19	DK	W0752	043	18		33-44-21	ALL
	20		W0752	031	20		SPARE	ALL
	21		W0752	032	22		28-42-11	ALL
	22		W0752	033	22		28-42-12	ALL
	23	UNUSED						050-099
	23		W0752	034	22		SPARE	150-199, 275-299
	24		W0752	075	22		SPARE	050-099
	24		W0752	122	22		27-89-11	150-157, 275-299
	24	UNUSED						162-199
	DED		W0752	050Z			29-11-22	ALL
D05331J		AP0802E/ /		RCPT-				050-099
D05331J		AP0703/ /		RCPT-				275-299
	1		W0665	024	22		23-42-11	050-099, 280-299
	1		W0665	523	22		23-42-11	275-278
	2	UNUSED						050-099
	2		W0665	025	24		23-34-13	275-299
	3		W0665	026	22		33-25-11	050-099, 275-299
	4		W0665	029	20		23-42-11	050-099, 275-299
	5	UNUSED						050-099

HOOKUP LIST

D280T132

91-21-51

Section D05300

Page 41

Feb 06/2009



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05331J		AP0802E/ /		RCPT- (continued)				050-099
D05331J		AP0703/ /		RCPT- (continued)				275-299
	5		W0665	027	24		23-34-13	275-299
	6		W0665	028	22		33-25-11	050-099, 275-299
	7		W0665	206B	22		23-31-14	050-099
	7		W0665	206R	22		23-31-14	275-299
	8		W0665	206R	22		23-31-14	050-099
	8		W0665	206B	22		23-31-14	275-299
	9	UNUSED						050-099, 275-299
	10	UNUSED						050-099, 275-299
	11		W0665	178	24		23-34-13	050-099
	11		W0665	067	24		23-34-13	275-299
	12		W0665	177	24		23-34-13	050-099
	12		W0665	050	24		23-42-12	275-299
	13		W0665	049	22		23-42-12	275-299
	14		W0665	048	20		23-42-12	275-299
	15		W0665	066	24		23-34-13	275-299
	16		W0665	053	24		23-42-12	275-299
	17		W0665	052	22		23-42-12	275-299
	18		W0665	051	20		23-42-12	275-299
	19	UNUSED						275-299
	20	UNUSED						275-299
	21	UNUSED						275-299
	22	UNUSED						275-299
	23	UNUSED						275-299
	24	UNUSED						275-299
D05331P		AP0802E/ /		PLUG				050-099
D05331P		AP0703/ /		PLUG-				275-299
	1		W0110	075	22		23-42-11	050-099
	1		W0110	009	22		23-42-11	275-299
	2	UNUSED						050-099
	2		W0110	012	22		23-34-13	275-299
	3		W0110	013	22		33-25-11	050-099, 275-299
	4		W0110	076	20		23-42-11	050-099
	4		W0110	010	20		23-42-11	275-299
	5	UNUSED						050-099
	5		W0110	069	22		23-34-13	275-299
	6		W0110	014	22		33-25-11	050-099, 275-299
	7		W0110	201B	22		23-31-14	050-099
	7		W0110	203R	22		23-31-14	275-299

HOOKUP LIST

D280T132

91-21-51

Section D05300

Page 42

Feb 06/2009



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05331P		AP0802E/ /		PLUG (continued)				050-099
D05331P		AP0703/ /		PLUG- (continued)				275-299
	8		W0110	202R	22		23-31-14	050-099
	8		W0110	203B	22		23-31-14	275-299
	9	UNUSED						050-099, 275-299
	10	UNUSED						050-099, 275-299
	11		W0110	104	22		23-34-13	050-099
	11		W0110	018	22		23-34-13	275-299
	12		W0110	077	22		23-34-13	050-099
	12		W0110	057	24		23-42-12	275-299
	13		W0110	056	22		23-42-12	275-299
	14		W0110	055	20		23-42-12	275-299
	15		W0110	060	22		23-34-13	275-299
	16		W0110	023	24		23-42-12	275-299
	17		W0110	058	22		23-42-12	275-299
	18		W0110	059	20		23-42-12	275-299
	19	UNUSED						275-299
	20	UNUSED						275-299
	21	UNUSED						275-299
	22	UNUSED						275-299
	23	UNUSED						275-299
	24	UNUSED						275-299
	DED		W0110	056Z			23-42-12	275-299
	DED		W0110	058Z			23-42-12	275-299
D05332J		AE0207/ /		RCPT-P33				ALL
	1	UNUSED						ALL
	2		W0144	02I	24		27-62-11	ALL
	3		W0144	727	24		30-31-21	ALL
	4		W0144	728	24		30-31-21	ALL
	5		W0144	133	24		30-31-23	ALL
	6		W0144	131	24		30-31-23	ALL
	7		W0144	135	24		30-32-21	ALL
	8	UNUSED						ALL
	9		W0144	05H	24		76-11-11	ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15		W0144	04U	24		29-11-22	ALL

HOOKUP LIST
D280T132

91-21-51
Section D05300
Page 43
Feb 06/2009



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05332J		AE0207/ /		RCPT-P33 (continued)				ALL
	16		W0144	04T	24		29-11-22	ALL
	17	UNUSED						ALL
	18		W0144	20V	22		30-81-11	050-099, 150-199 275-299
	18	UNUSED						
	19		W0144	20W	22		30-81-11	050-099, 150-199 275-299
	19	UNUSED						
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D05332P		AE0207/ /		PLUG-P33				ALL
	1	UNUSED						ALL
	2		W1704	022	24		27-62-11	ALL
	3		W1704	023	24		30-31-21	ALL
	4		W1704	024	24		30-31-21	ALL
	5		W1704	025	24		30-31-23	ALL
	6		W1704	026	24		30-31-23	ALL
	7		W1704	027	24		30-32-21	ALL
	8	UNUSED						050-099, 275-299
	8		W1704	028	24		SPARE	150-199
	9		W1704	029	24		76-11-11	ALL
	10		W1704	030	24		SPARE	ALL
	11		W1704	031	24		SPARE	ALL
	12		W1704	032	24		SPARE	ALL
	13		W1704	033	24		SPARE	ALL
	14		W1704	034	24		SPARE	ALL
	15		W1704	035	24		29-11-22	ALL
	16		W1704	036	24		29-11-22	ALL
	17	UNUSED						ALL
	18		W1704	009	22		30-81-11	050-099, 150-199 275-299
	18	UNUSED						
	19		W1704	010	22		30-81-11	050-099, 150-199 275-299
	19	UNUSED						
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D05300

Page 44

Feb 06/2009



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05334J		AE0203/ /		RCPT-				ALL
	1	UNUSED						ALL
	2		W0142	02H	24		78-36-21	ALL
	3		W0142	896	24		30-31-11	ALL
	4		W0142	895	24		30-31-11	ALL
	5		W0142	653	24		30-31-13	ALL
	6		W0142	655	24		30-31-13	ALL
	7		W0142	02P	24		30-32-11	ALL
	8	UNUSED						ALL
	9		W0142	863	24		30-33-11	ALL
	10	UNUSED						ALL
	11		W0142	02C	24		28-42-11	ALL
	12		W0142	892	24		30-11-11	ALL
	13		W0142	610	24		30-11-11	ALL
	14		W0142	893	24		30-11-11	ALL
	15		W0142	611	24		30-11-11	ALL
	16		W0142	03Q	24		21-44-21	ALL
	17		W0142	791	24		28-42-12	ALL
	18		W0142	136	22		27-51-11	ALL
	19	UNUSED						ALL
	20		W0142	41M	22		30-81-11	050-099, 150-199
	20	UNUSED						275-299
	21		W0142	41V	22		30-81-11	050-099, 150-199
	21	UNUSED						275-299
	22	UNUSED						ALL
	23		W0142	10P	22		28-22-31	ALL
	24		W0142	10S	22		28-22-31	ALL
	DED		W0142	10PZ			28-22-31	ALL
	DED		W0142	10SZ			28-22-31	ALL
D05334P		296/185/L 05		PLUG-P33				ALL
	1	UNUSED						ALL
	2		W1730	002	24		78-36-21	ALL
	3		W1730	003	24		30-31-11	ALL
	4		W1730	004	24		30-31-11	ALL
	5		W1730	005	24		30-31-13	ALL
	6		W1730	006	24		30-31-13	ALL
	7		W1730	007	24		30-32-11	ALL
	8	UNUSED						ALL
	9		W1730	009	24		30-33-11	ALL
	10	UNUSED						050-099, 150-199

HOOKUP LIST

D280T132

91-21-51

Section D05300

Page 45

Feb 06/2009



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05334P		296/185/L 05		PLUG-P33 (continued)				ALL
	10		W1730	010	24		SPARE	275-299
	11		W1730	011	24		28-42-11	ALL
	12		W1730	012	24		30-11-11	ALL
	13		W1730	013	24		30-11-11	ALL
	14		W1730	014	24		30-11-11	ALL
	15		W1730	015	24		30-11-11	ALL
	16		W1730	016	24		21-44-21	ALL
	17		W1730	017	24		28-42-12	ALL
	18		W1730	018	24		27-51-11	ALL
	19		W1730	019	24		SPARE	ALL
	20		W1730	022	22		30-81-11	050-099, 150-199
	20	UNUSED						275-299
	21		W1730	023	22		30-81-11	050-099, 150-199
	21	UNUSED						275-299
	22	UNUSED						ALL
	23		W1730	024	24		28-22-31	ALL
	24		W1730	025	24		28-22-31	ALL
	DED		W1730	024Z			28-22-31	ALL
	DED		W1730	025Z			28-22-31	ALL
D05335J		AP1401/ /		RCPT-				275-299
	1		W0665	002	22		23-42-11	275-299
	2		W0665	016	24		23-34-13	275-299
	3		W0665	023	22		33-25-11	275-299
	4		W0665	034	20		23-42-11	275-299
	5	UNUSED						275-299
D05335P		AP1401/ /		PLUG-				275-299
	1		W0106	051	22		23-42-11	275-299
	2		W0106	052	22		23-34-13	275-299
	3		W0106	053	22		33-25-11	275-299
	4		W0106	054	20		23-42-11	275-299
	5	UNUSED						275-299
D05337J		AP1402/ /		RCPT-				275-299
	1		W0665	001	22		23-42-11	275-299
	2		W0665	013	24		23-34-13	275-299
	3		W0665	022	22		33-25-11	275-299
	4		W0665	035	20		23-42-11	275-299
	5	UNUSED						275-299

HOOKUP LIST

D280T132

91-21-51

Section D05300

Page 46

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05337P		AP1402/ /		PLUG-				275-299
	1		W0108	051	22		23-42-11	275-299
	2		W0108	052	22		23-34-13	275-299
	3		W0108	053	22		33-25-11	275-299
	4		W0108	054	20		23-42-11	275-299
	5	UNUSED						275-299
D05340J		AE0204/ /		RCPT-P34				ALL
	1	UNUSED						ALL
	2		W0026	102	24		24-27-41	ALL
	3		W0026	016	24		24-28-11	ALL
	4		W0026	015	24		24-28-11	ALL
	5		W0026	096	24		49-71-11	ALL
	6	UNUSED						ALL
	7		W0026	112	24		49-73-11	ALL
	8	UNUSED						ALL
	9		W0026	113	24		24-34-11	ALL
	10		W0026	207R	24		24-34-11	ALL
	11		W0026	207B	24		24-34-11	ALL
	12	UNUSED						ALL
D05340P		AE0204/ /		PLUG-P34				ALL
	1	UNUSED						ALL
	2		W1722	002	24		24-27-41	ALL
	3		W1722	003	24		24-28-11	ALL
	4		W1722	004	24		24-28-11	ALL
	5		W1722	005	24		49-71-11	ALL
	6		W1722	006	24		SPARE	050-099
	6	UNUSED						150-199, 275-299
	7		W1722	007	24		49-73-11	ALL
	8		W1722	008	24		SPARE	ALL
	9		W1722	009	24		24-34-11	ALL
	10		W1722	201R	24		24-34-11	ALL
	11		W1722	201B	24		24-34-11	ALL
	12	UNUSED						ALL
D05344J		AE0305/ /		RCPT-E1-2				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W0622	004	20		30-41-11	ALL

HOOKUP LIST
D280T132

91-21-51
Section D05300
Page 47
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05344J		AE0305/ /		RCPT-E1-2 (continued)				ALL
	5		W0622	005	20		30-41-11	ALL
	6		W0622	006	24		30-41-11	ALL
	7		W0622	007	24		30-41-11	ALL
	8		W0622	008	22		30-41-11	ALL
	9		W0622	009	22		30-41-11	ALL
	10		W0622	002	24		30-41-11	ALL
	11		W0622	207R	24		21-31-11	ALL
	12		W0622	207B	24		21-31-11	ALL
	13		W0622	207Z			21-31-11	ALL
	14		W0622	211B	20		21-31-11	ALL
	15		W0622	211R	20		21-31-11	ALL
	16		W0622	001	24		30-41-11	ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19		W0622	072	20		SPARE	ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D05344P		AE0305/ /		PLUG-E1-2				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W1098	009	20		30-41-11	ALL
	5		W1098	010	20		30-41-11	ALL
	6		W1098	006	24		30-41-11	ALL
	7		W1098	004	24		30-41-11	ALL
	8		W1098	005	22		30-41-11	ALL
	9		W1098	003	22		30-41-11	ALL
	10		W1098	007	24		30-41-11	ALL
	11		W1098	201R	24		21-31-11	ALL
	12		W1098	201B	24		21-31-11	ALL
	13		W1098	201Z			21-31-11	ALL
	14		W1098	214B	20		21-31-11	ALL
	15		W1098	214R	20		21-31-11	ALL
	16		W1098	002	24		30-41-11	ALL
	17	UNUSED						ALL
	18	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D05300

Page 48

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05344P		AE0305/ /		PLUG-E1-2 (continued)				ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D05346J		AE0204/ /		RCPT-P34				ALL
	1		W0054	015	24		21-26-11	ALL
	2		W0054	016	22		52-11-12	050-099, 150-199
	2		W0054	016	20		52-11-12	275-299
	3	UNUSED						ALL
	4		W0054	017	18		33-31-21	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W0054	014	16		30-71-24	050-099, 150-199
	7	UNUSED						275-299
	8	UNUSED						ALL
	9		W0054	001	20		33-26-11	ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12		W0054	066	20		33-26-11	050-099, 150-199
	12	UNUSED						275-299
D05346P		AE0204/ /		PLUG-P34				ALL
	1		W1204	022	24		21-26-11	ALL
	2		W1204	030	22		52-11-12	050-099, 150-199
	2		W1204	030	20		52-11-12	275-299
	3	UNUSED						ALL
	4		W1204	018	18		33-31-21	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W1204	074	16		30-71-24	050-099, 150-199
	7	UNUSED						275-299
	8	UNUSED						ALL
	9		W1204	033	20		33-26-11	ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12		W1204	115	20		33-26-11	050-099, 150-199
	12	UNUSED						275-299

HOOKUP LIST
D280T132

91-21-51
Section D05300
Page 49
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05347J		AF0120/ /		RCPT-P3				ALL
	1		W0634	041	24		33-11-11	ALL
	2		W0634	042	24		33-11-11	ALL
	3		W0634	201B	24		33-11-11	ALL
	4		W0634	201R	24		33-11-11	ALL
	5		W0634	301B	24		33-11-11	ALL
	6		W0634	301R	24		33-11-11	ALL
	7		W0634	301Y	24		33-11-11	ALL
	8		W0634	007	24		33-13-11	ALL
	9		W0634	540R	22		26-17-11	ALL
	10		W0634	125	24		33-16-11	ALL
	11		W0634	126	24		33-16-11	ALL
	12		W0634	804	22		SPARE	ALL
	13		W0634	805	22		SPARE	ALL
	14		W0634	521	24		73-21-14	ALL
	15		W0634	533	12		32-35-11	ALL
	16		W0634	013R	22		26-11-11	ALL
	17		W0634	019	24		31-25-11	ALL
	18	UNUSED						ALL
	19		W0634	530	12		32-35-11	ALL
	20		W0634	132	22		33-16-12	ALL
	21		W0634	133	22		33-16-12	ALL
	22		W0634	135	22		33-16-12	ALL
	23		W0634	532	18		32-35-11	ALL
	24		W0634	FRA			33-11-11	ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27		W0634	188	16		33-13-18	ALL
	28	UNUSED						ALL
			W0634	201Z			33-11-11	ALL
			W0634	301Z			33-11-11	ALL
			W0634	FRA			33-11-11	ALL
D05347P		AF0120/ /		PLUG-				ALL
	1		W0051	020	24		33-11-11	ALL
	2		W0051	023	24		33-11-11	ALL
	3		W0051	217B	24		33-11-11	ALL
	4		W0051	217R	24		33-11-11	ALL
	5		W0051	303B	24		33-11-11	ALL
	6		W0051	303R	24		33-11-11	ALL
	7		W0051	303Y	24		33-11-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05300

Page 50

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05347P		AF0120/ /		PLUG- (continued)				ALL
	8		W0051	040	24		33-13-11	ALL
	9		W0051	110R	22		26-17-11	ALL
	10		W0051	091	24		33-16-11	ALL
	11		W0051	092	24		33-16-11	ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14		W0051	033	24		73-21-14	ALL
	15		W0051	037	18		32-35-11	ALL
	16		W0051	031R	22		26-11-11	ALL
	17		W0051	003	24		31-25-11	ALL
	18	UNUSED						ALL
	19		W0051	035	18		32-35-11	ALL
	20		W0051	094	22		33-16-12	ALL
	21		W0051	095	22		33-16-12	ALL
	22		W0051	096	22		33-16-12	ALL
	23		W0051	036	18		32-35-11	ALL
	24		W0051	FRD			33-11-11	ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27		W0051	145	16		33-13-18	ALL
	28	UNUSED						ALL
	DED		W0051	036Z			32-35-11	ALL
			W0051	217Z			33-11-11	ALL
			W0051	303Z			33-11-11	ALL
			W0051	FRD			33-11-11	ALL
D05348J		AE0223/ /		RCPT-P36				ALL
	1		W0180	035	24		32-31-11	ALL
	2	DL	W0180	054	18		28-41-12	ALL
	3		W0180	016	24		21-58-16	ALL
	4	UNUSED						ALL
	5		W0180	012	24		21-58-16	ALL
	6		W0180	013	24		21-58-16	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11		W0180	003	24		21-53-12	ALL
	12		W0180	006	24		21-53-12	ALL
	13		W0180	007	24		21-53-12	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05300

Page 51

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05348J		AE0223/ /		RCPT-P36 (continued)				ALL
	14		W0180	005	24		21-53-12	ALL
	15		W0180	004	24		21-53-12	ALL
	16		W0180	084	24		21-53-12	ALL
	17		W0180	010	24		21-58-16	ALL
	18		W0180	029	24		21-53-12	ALL
	19		W0180	001	24		21-53-12	ALL
	20	UNUSED						ALL
	21	DL	W0180	034	18		33-31-21	ALL
	22	UNUSED						050-099, 150-199, 277-299
	22	DL	W0180	145	18		38-32-11	275-276
	23	FL	W0180	014	16		33-45-11	ALL
	24	FL	W0180	015	16		33-45-11	ALL
	25		W0180	075	24		33-16-14	ALL
	26		W0180	109	24		21-58-12	ALL
	27		W0180	037	22		52-11-12	050-099, 150-199
	27		W0180	037	20		52-11-12	275-299
	28		W0180	108	24		21-58-12	ALL
	29		W0180	128	24		21-44-21	ALL
	30		W0180	061	24		21-44-21	ALL
	31		W0180	130	24		21-44-21	ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						050-099, 151, 162-199, 275-299
	36		W0180	181	22		21-66-41	150, 152-157
	37	UNUSED						ALL
	38		W0180	126	24		27-38-11	ALL
	39	UNUSED						ALL
	40		W0180	103	20		25-31-11	050-099, 150-199, 275-278
	40	DL	W0180	103	18		25-31-11	280-299
	41	UNUSED						050-099, 150-199, 275-278
	41	DL	W0180	137	18		SPARE	280-299
D05348P		AE0223/ /		PLUG-P36				ALL
	1		W1204	001	22		32-31-11	ALL
	2	DK	W1204	002	18		28-41-12	ALL
	3		W1204	064	24		21-58-16	ALL
	4	UNUSED						ALL
	5		W1204	019	24		21-58-16	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05300

Page 52

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05348P		AE0223/ /		PLUG-P36 (continued)				ALL
	6		W1204	020	24		21-58-16	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11		W1204	011	24		21-53-12	ALL
	12		W1204	012	24		21-53-12	ALL
	13		W1204	013	24		21-53-12	ALL
	14		W1204	014	24		21-53-12	ALL
	15		W1204	015	24		21-53-12	ALL
	16		W1204	016	24		21-53-12	ALL
	17		W1204	028	24		21-58-16	ALL
	18		W1204	009	24		21-53-12	ALL
	19		W1204	010	24		21-53-12	ALL
	20		W1204	021	24		SPARE	050-099, 150-156, 162-166, 275-276
	20	DK	W1204	021	18		SPARE	157, 167-199, 277-299
	21	DK	W1204	018	18		33-31-21	ALL
	22	UNUSED						050-099, 150-199, 277-299
	22	DK	W1204	101	18		38-32-11	275-276
	23	FM	W1204	053	16		33-45-11	ALL
	24	FM	W1204	054	16		33-45-11	ALL
	25		W1204	096	24		33-16-14	ALL
	26		W1204	107	24		21-58-16	ALL
	27		W1204	030	22		52-11-12	050-099, 150-199
	27		W1204	030	20		52-11-12	275-299
	28		W1204	108	24		21-58-16	ALL
	29		W1204	071	24		21-44-21	ALL
	30		W1204	045	24		21-44-21	ALL
	31		W1204	072	24		21-44-21	ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36		W1204	059	24		SPARE	050-099, 151, 162-199, 275-299
	36		W1204	059	24		21-66-41	150, 152-157
	37		W1204	057	24		SPARE	ALL
	38		W1204	087	24		27-38-11	ALL
	39		W1204	058	24		SPARE	ALL
	40		W1204	068	20		25-31-11	050-099, 150-199, 275-278
	40	DK	W1204	068	18		25-31-11	280-299

HOOKUP LIST

D280T132

91-21-51

Section D05300

Page 53

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05348P		AE0223/ /		PLUG-P36 (continued)				ALL
	41	UNUSED						050-099, 150-199, 275-278
	41	DK	W1204	049	18		SPARE	280-299
	DED		W1204	021Z			SPARE	157, 167-199, 277-299
D05350J		AE0317/ /		RCPT-E1-1				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W0628	213Z			32-42-11	ALL
	6		W0628	214Z			32-42-11	ALL
	7		W0628	213R	20		32-42-11	ALL
	8		W0628	213B	20		32-42-11	ALL
	9		W0628	214R	20		32-42-11	ALL
	10		W0628	214B	20		32-42-11	ALL
	11		W0628	011	22		32-42-12	ALL
	12	UNUSED						ALL
	13		W0628	013	22		32-42-12	ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16		W0628	215R	20		32-42-11	ALL
	17		W0628	215B	20		32-42-11	ALL
	18		W0628	216R	20		32-42-11	ALL
	19		W0628	216B	20		32-42-11	ALL
	20		W0628	215Z			32-42-11	ALL
	21		W0628	216Z			32-42-11	ALL
	22		W0628	103	22		SPARE	050-099
	22	UNUSED						150-199, 275-299
	23		W0628	020	20		SPARE	ALL
	24	UNUSED						ALL
D05350P		AE0317/ /		PLUG-E1-1				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W1084	203Z			32-42-11	ALL
	6		W1084	204Z			32-42-11	ALL
	7		W1084	203R	22		32-42-11	ALL
	8		W1084	203B	22		32-42-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05300

Page 54

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05350P		AE0317/ /		PLUG-E1-1 (continued)				ALL
	9		W1084	204R	22		32-42-11	ALL
	10		W1084	204B	22		32-42-11	ALL
	11		W1084	070	24		32-42-12	ALL
	12	UNUSED						ALL
	13		W1084	068	24		32-42-12	ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16		W1084	209R	22		32-42-11	ALL
	17		W1084	209B	22		32-42-11	ALL
	18		W1084	210R	22		32-42-11	ALL
	19		W1084	210B	22		32-42-11	ALL
	20		W1084	209Z			32-42-11	ALL
	21		W1084	210Z			32-42-11	ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D05352J		AE0218/ /		RCPT-P37				ALL
	1		W0192	240B	22		21-51-13	ALL
	2		W0192	660	24		21-26-21	ALL
	3		W0192	661	22		21-26-21	ALL
	4		W0192	079	24		21-53-12	ALL
	5		W0192	080	24		21-53-12	ALL
	6		W0192	081	24		21-53-12	ALL
	7		W0192	082	24		21-53-12	ALL
	8		W0192	083	24		21-53-12	ALL
	9		W0192	084	24		21-53-12	ALL
	10		W0192	085	24		21-53-12	ALL
	11		W0192	696	24		21-26-11	ALL
	12		W0192	617	24		36-11-41	ALL
	13		W0192	619	24		36-11-41	ALL
	14		W0192	618	24		36-11-41	ALL
	15	UNUSED						ALL
	16	FM	W0192	02N	16		33-45-11	ALL
	17	FM	W0192	02P	16		33-45-11	ALL
	18	UNUSED						ALL
	19		W0192	620	22		36-11-41	ALL
	20		W0192	08S	20		30-71-24	050-099, 150-199
	20	UNUSED						275-299
	21		W0192	546	22		29-11-12	ALL

HOOKUP LIST
D280T132

91-21-51
Section D05300
Page 55
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05352J		AE0218/ /		RCPT-P37 (continued)				ALL
	22		W0192	82K	20		30-81-11	050-099, 150-199 275-299
	22	UNUSED						
	23		W0192	662	24		21-44-21	ALL
	24		W0192	663	24		21-44-21	ALL
	25		W0192	240R	22		21-51-13	ALL
	26		W0192	262B	24		21-51-21	ALL
	27		W0192	262R	24		21-51-21	ALL
	28		W0192	09A	24		21-51-21	ALL
	29		W0192	03H	24		21-51-13	ALL
	30		W0192	13P	24		36-11-41	ALL
	31		W0192	13I	24		36-11-41	ALL
	32		W0192	09B	24		21-53-21	ALL
	33		W0192	09C	24		21-53-21	ALL
	34		W0192	09D	24		21-53-21	ALL
	35		W0192	09E	24		21-53-21	ALL
	36		W0192	09F	24		21-53-21	ALL
	37		W0192	09G	24		21-53-21	ALL
	38		W0192	241B	22		21-51-13	ALL
	39		W0192	241R	22		21-51-13	ALL
	40		W0192	08T	16		30-71-24	050-099, 150-199 275-299
	40	UNUSED						
	41		W0192	133	24		36-11-21	ALL
	42		W0192	116	24		36-11-21	ALL
	43		W0192	01H	24		36-11-21	ALL
	44		W0192	134	22		36-11-21	ALL
	45		W0192	135	22		36-11-21	ALL
	46		W0192	674	24		29-33-11	ALL
	47		W0192	677	22		29-33-11	ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51		W0192	132	22		29-11-31	ALL
	52		W0192	524	22		25-33-11	050-099, 150-199, 277-299
	52		W0192	524	22		21-58-16	275-276
	53		W0192	51B	24		78-36-21	050-099, 151, 162-166, 275-276
	53		W0192	31G	22		21-66-41	150, 152-157
	53		W0192	51B	24		SPARE	167-199, 277-299
	54		W0192	51F	24		78-36-21	050-099, 150-156, 162-166, 275-276
	54		W0192	51F	24		SPARE	157, 167-199, 277-299
	55		W0192	51C	24		78-36-21	050-099, 150-156, 162-166, 275-276

HOOKUP LIST

D280T132

91-21-51

Section D05300

Page 56

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05352J		AE0218/ /		RCPT-P37 (continued)				ALL
	55		W0192	51C	24		SPARE	157, 167-199, 277-299
	56	UNUSED						ALL
	57	UNUSED						ALL
	DED		W0192	546Z			29-11-12	ALL
D05352P		AE0218/ /		PLUG-P37				ALL
	1		W1204	203B	22		21-51-13	ALL
	2		W1204	040	24		21-26-21	ALL
	3		W1204	041	22		21-26-21	ALL
	4		W1204	010	24		21-53-12	ALL
	5		W1204	011	24		21-53-12	ALL
	6		W1204	012	24		21-53-12	ALL
	7		W1204	013	24		21-53-12	ALL
	8		W1204	014	24		21-53-12	ALL
	9		W1204	015	24		21-53-12	ALL
	10		W1204	016	24		21-53-12	ALL
	11		W1204	022	24		21-26-11	ALL
	12		W1204	024	24		36-11-41	ALL
	13		W1204	025	24		36-11-41	ALL
	14		W1204	026	24		36-11-41	ALL
	15	UNUSED						ALL
	16	FL	W1204	053	16		33-45-11	ALL
	17	FL	W1204	054	16		33-45-11	ALL
	18	UNUSED						ALL
	19		W1204	035	22		36-11-41	ALL
	20		W1204	114	20		30-71-24	050-099, 150-199
	20	UNUSED						275-299
	21		W1204	050	22		29-11-12	ALL
	22		W1204	060	20		30-81-11	050-099, 150-199
	22	UNUSED						275-299
	23		W1204	042	24		21-44-21	ALL
	24		W1204	043	24		21-44-21	ALL
	25		W1204	203R	22		21-51-13	ALL
	26		W1204	208B	24		21-51-21	ALL
	27		W1204	208R	24		21-51-21	ALL
	28		W1204	073	24		21-51-21	ALL
	29		W1204	062	24		21-51-13	ALL
	30		W1204	098	24		36-11-41	ALL
	31		W1204	099	24		36-11-41	ALL
	32		W1204	078	24		21-53-21	ALL

HOOKUP LIST
D280T132

91-21-51
Section D05300
Page 57
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05352P		AE0218/ /		PLUG-P37 (continued)				ALL
	33		W1204	079	24		21-53-21	ALL
	34		W1204	080	24		21-53-21	ALL
	35		W1204	081	24		21-53-21	ALL
	36		W1204	082	24		21-53-21	ALL
	37		W1204	083	24		21-53-21	ALL
	38		W1204	204B	22		21-51-13	ALL
	39		W1204	204R	22		21-51-13	ALL
	40		W1204	074	16		30-71-24	050-099, 150-199
	40	UNUSED						275-299
	41		W1204	006	24		36-11-21	ALL
	42		W1204	007	24		36-11-21	ALL
	43		W1204	008	24		36-11-21	ALL
	44		W1204	017	22		36-11-21	ALL
	45		W1204	027	22		36-11-21	ALL
	46		W1204	029	24		29-33-11	ALL
	47		W1204	031	22		29-33-11	ALL
	48		W1204	032	22		SPARE	ALL
	49		W1204	036	22		SPARE	ALL
	50	UNUSED						ALL
	51		W1204	004	22		29-11-31	ALL
	52		W1204	097	22		21-58-16	ALL
	53		W1204	059	24		SPARE	050-099, 151, 162-199, 275-299
	53		W1204	059	24		21-66-41	150, 152-157
	54		W1204	057	24		SPARE	ALL
	55		W1204	058	24		SPARE	ALL
	56	UNUSED						ALL
	57	UNUSED						ALL
	DED		W1204	050Z			29-11-12	ALL
D05353J		1570/283/00		RCPT-				050-099
	1		W0665	068	22		23-42-11	050-099
	2		W0665	077	24		23-34-13	050-099
	3		W0665	071	22		33-25-11	050-099
	4		W0665	070	20		23-42-11	050-099
	5	UNUSED						050-099
D05353P		1548/283/0000		PLUG				050-099
	1		W0120	035	22		23-42-11	050-099
	2		W0120	034	22		23-34-13	050-099
	3		W0120	033	22		33-25-11	050-099

HOOKUP LIST

D280T132

91-21-51

Section D05300

Page 58

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05353P		1548/283/0000		PLUG (continued)				050-099
	4		W0120	038	20		23-42-11	050-099
	5	UNUSED						050-099
D05355		0645/208/L095		RCPT-				280-299
	A		W1489	201R	20		23-34-16	280-299
	B		W1489	201B	20		23-34-16	280-299
	C		W1489	301Y	24		23-34-16	280-299
	D		W1489	301B	24		23-34-16	280-299
	E		W1489	301R	24		23-34-16	280-299
	F		W1489	01CX			23-34-16	280-299
	= CF		W1489	01CO			23-34-16	280-299
D05356J		AF0204/ /		RCPT-P61				ALL
	1		W0066	535	22		28-22-31	ALL
	2		W0066	56U	24		30-41-12	ALL
	3		W0066	712	24		30-41-12	ALL
	4		W0066	56R	22		30-41-12	ALL
	5		W0066	713	24		30-41-12	ALL
	6		W0066	56T	22		30-41-12	ALL
	7		W0066	780	24		30-41-12	ALL
	8		W0066	537	20		28-22-31	ALL
	9		W0066	56G	22		30-31-21	ALL
	10		W0066	519	24		21-53-21	ALL
	11		W0066	538	20		28-22-31	ALL
	12		W0066	528	22		28-22-31	ALL
	13		W0066	530	22		28-22-31	ALL
	14		W0066	50F	20		21-31-21	ALL
	15		W0066	61B	20		36-11-41	ALL
	16		W0066	606	22		28-42-11	ALL
	17		W0066	615	22		28-42-12	ALL
	18		W0066	55M	24		28-42-31	ALL
	19	UNUSED						ALL
	20		W0066	02A	24		21-44-21	ALL
	21	UNUSED						ALL
	22		W0066	02B	24		21-44-21	ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25		W0066	56J	22		30-31-23	ALL
	26	UNUSED						ALL
	27	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D05300
Page 59
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05356J		AF0204/ /		RCPT-P61 (continued)				ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	DED		W0066	528Z			28-22-31	ALL
	DED		W0066	530Z			28-22-31	ALL
	DED		W0066	535Z			28-22-31	ALL
	DED		W0066	537Z			28-22-31	ALL
	DED		W0066	538Z			28-22-31	ALL
D05356P		AF0204/ /		PLUG-P61				ALL
	1		W0624	108	22		28-22-31	ALL
	2		W0624	012	24		30-41-12	ALL
	3		W0624	013	24		30-41-12	ALL
	4		W0624	014	22		30-41-12	ALL
	5		W0624	005	24		30-41-12	ALL
	6		W0624	006	22		30-41-12	ALL
	7		W0624	007	24		30-41-12	ALL
	8		W0624	106	20		28-22-31	ALL
	9		W0624	009	22		30-31-21	ALL
	10		W0624	077	24		21-53-21	ALL
	11		W0624	107	20		28-22-31	ALL
	12		W0624	109	22		28-22-31	ALL
	13		W0624	110	22		28-22-31	ALL
	14		W0624	059	20		21-31-21	ALL
	15		W0624	060	20		36-11-41	ALL
	16		W0624	061	22		28-42-11	ALL
	17		W0624	062	22		28-42-12	ALL
	18		W0624	065	24		28-42-31	ALL
	19	UNUSED						ALL
	20		W0624	069	22		21-44-21	ALL
	21		W0624	070	24		SPARE	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05300

Page 60

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05356P		AF0204/ /		PLUG-P61 (continued)				ALL
	22		W0624	071	24		21-44-21	ALL
	23		W0624	081	22		SPARE	ALL
	24		W0624	801	20		SPARE	ALL
	25		W0624	025	22		30-31-23	ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	DED		W0624	106Z			28-22-31	ALL
	DED		W0624	107Z			28-22-31	ALL
	DED		W0624	108Z			28-22-31	ALL
	DED		W0624	109Z			28-22-31	ALL
	DED		W0624	110Z			28-22-31	ALL
D05358J		AL1004/ /		RCPT-				ALL
	1		W0588	213B	20		29-11-31	ALL
	2		W0588	002	20		29-11-31	ALL
	3		W0588	003	22		29-11-31	ALL
	4		W0588	213R	20		29-11-31	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W0588	048	20		29-11-31	ALL
	DED		W0588	002Z			29-11-31	ALL
	DED		W0588	003Z			29-11-31	ALL
	DED		W0588	213Z			29-11-31	ALL
D05358P		AL1004/ /		PLUG-R WING/BODY RS DISC				ALL
	1		W1210	301R	18		29-11-31	ALL
	2		W1210	002	18		29-11-31	ALL
	3		W1210	003	18		29-11-31	ALL

HOOKUP LIST
D280T132

91-21-51
Section D05300
Page 61
Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05358P		AL1004/ /		PLUG-R WING/BODY RS DISC (continued)				ALL
	4		W1210	301Y	18		29-11-31	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W1210	301B	18		29-11-31	ALL
D05359		0684/208/L095		RCPT-				280-299
	A		W1489	201R	20		23-34-16	280-299
	B		W1489	201B	20		23-34-16	280-299
	C		W1489	301Y	24		23-34-16	280-299
	D		W1489	301B	24		23-34-16	280-299
	E		W1489	301R	24		23-34-16	280-299
	F		W1489	01CX			23-34-16	280-299
	= CF		W1489	01CO			23-34-16	280-299
D05360J		AE0209/ /		RCPT-P36				ALL
	1	UNUSED						050-099, 150-154, 162-165, 275-276
	1		W0176	87F	24		27-28-11	155-157, 166-199, 277-299
	2		W0176	01A	24		21-25-11	ALL
	3		W0176	567	24		27-18-11	050-099, 150-154, 162-165, 275-276
	3		W0176	90F	24		27-38-11	155-157, 166-199, 277-299
	4		W0176	565	24		27-18-11	050-099, 150-154, 162-165, 275-276
	4		W0176	88F	24		27-38-11	155-157, 166-199, 277-299
	5		W0176	03V	22		27-13-11	ALL
	6		W0176	277	22		30-21-11	ALL
	7		W0176	571	24		27-18-11	050-099, 150-154, 162-165, 275-276
	7	UNUSED						155-157, 166-199, 277-299
	8		W0176	572	24		27-18-11	050-099, 150-154, 162-165, 275-276
	8	UNUSED						155-157, 166-199, 277-299
	9		W0176	634	22		21-58-16	ALL
	10		W0176	219B	24		29-31-11	ALL
	11		W0176	883	24		28-42-11	ALL
	12		W0176	219R	24		29-31-11	ALL
	13		W0176	327	24		24-11-11	050, 150-199
	13		W0176	59N	24		24-11-11	051-099, 275-299
	14		W0176	03W	22		27-23-11	ALL
	15		W0176	819	22		78-36-11	ALL
	16		W0176	820	24		30-21-11	ALL
	17		W0176	006	24		29-32-11	ALL
	18		W0176	796	24		29-32-11	ALL
	19		W0176	888	22		79-35-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05300

Page 62

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05360J		AE0209/ /		RCPT-P36 (continued)				ALL
	20		W0176	80L	22		30-21-11	050-099, 150-199 275-299
	20	UNUSED						275-299
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25		W0176	03B	24		75-23-11	ALL
	26		W0176	248B	20		21-44-22	050-099, 150-199 275-299
	26	UNUSED						275-299
	27		W0176	248R	20		21-44-22	050-099, 150-199 275-299
	27	UNUSED						275-299
	28		W0176	242B	24		73-21-14	ALL
	29		W0176	242R	24		73-21-14	ALL
	30		W0176	314R	24		79-31-11	ALL
	31		W0176	314B	24		79-31-11	ALL
	32		W0176	314Y	24		79-31-11	ALL
	33		W0176	04E	24		32-09-11	ALL
	34		W0176	04F	24		32-09-11	ALL
	35		W0176	579	24		27-28-11	ALL
	36		W0176	580	24		27-28-11	ALL
	37		W0176	01E	24		21-43-11	ALL
	38		W0176	01F	24		21-44-11	ALL
	39		W0176	663	24		27-31-11	ALL
	40		W0176	271Z			77-12-12	ALL
	41	UNUSED						ALL
	42		W0176	597	24		27-38-11	ALL
	43		W0176	598	24		27-38-11	ALL
	44		W0176	594	24		27-38-11	ALL
	45		W0176	595	24		27-38-11	ALL
	46		W0176	05K	22		28-22-21	ALL
	47		W0176	02L	24		77-35-11	ALL
	48		W0176	05X	24		73-33-11	ALL
	49		W0176	218B	20		36-22-21	ALL
	50		W0176	218R	20		36-22-21	ALL
	51		W0176	887	24		79-33-11	ALL
	52		W0176	03L	24		29-32-11	ALL
	53		W0176	242Z			73-21-14	ALL
	54		W0176	271R	24		77-12-12	ALL
	55		W0176	271B	24		77-12-12	ALL
	DED		W0176	883Z			28-42-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05300

Page 63

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05360P		AE0209/ /		PLUG-P36				ALL
	1	UNUSED						050-099, 150-154, 162-165, 275-276
	1		W1702	061	24		27-28-11	155-157, 166-199, 277-299
	2		W1702	002	24		21-25-11	ALL
	3		W1702	003	24		27-18-11	050-099, 150-154, 162-165, 275-276
	3		W1702	062	24		27-38-11	155-157, 166-199, 277-299
	4		W1702	004	24		27-18-11	050-099, 150-154, 162-165, 275-276
	4		W1702	071	24		27-38-11	155-157, 166-199, 277-299
	5		W1702	005	24		27-13-11	ALL
	6		W1702	006	24		30-21-11	ALL
	7		W1702	007	24		27-18-11	050-099, 150-156, 162-166, 275-276
	7		W1702	007	24		SPARE	157, 167-199, 277-299
	8		W1702	008	24		27-18-11	050-099, 150-156, 162-166, 275-276
	8		W1702	008	24		SPARE	157, 167-199, 277-299
	9		W1702	009	24		21-58-16	ALL
	10		W1702	205B	24		29-31-11	ALL
	11		W1702	011	24		28-42-11	ALL
	12		W1702	205R	24		29-31-11	ALL
	13		W1702	013	24		24-11-11	ALL
	14		W1702	014	24		27-23-11	ALL
	15		W1702	015	24		78-36-11	ALL
	16		W1702	016	24		30-21-11	ALL
	17		W1702	017	24		29-32-11	ALL
	18		W1702	018	24		29-32-11	ALL
	19		W1702	019	24		79-35-11	ALL
	20		W1702	028	24		30-21-11	050-099, 150-199
	20	UNUSED						275-299
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25		W1702	025	24		75-23-11	ALL
	26		W1702	202B	24		21-44-22	050-099, 150-199
	26		W1702	026	24		SPARE	275-299
	27		W1702	202R	24		21-44-22	050-099, 150-199
	27		W1702	027	24		SPARE	275-299
	28		W1702	201B	24		73-21-14	ALL
	29		W1702	201R	24		73-21-14	ALL
	30		W1702	301R	24		79-31-11	ALL
	31		W1702	301B	24		79-31-11	ALL
	32		W1702	301Y	24		79-31-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05300

Page 64

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05360P		AE0209/ /		PLUG-P36 (continued)				ALL
	33		W1702	033	24		32-09-11	ALL
	34		W1702	034	24		32-09-11	ALL
	35		W1702	035	24		27-28-11	050-099, 150-154, 162-165, 275-276
	35		W1702	040	24		27-28-11	155-157, 166-199, 277-299
	36		W1702	036	24		27-28-11	050-099, 150-154, 162-165, 275-276
	36		W1702	060	24		27-28-11	155-157, 166-199, 277-299
	37		W1702	037	24		21-43-11	ALL
	38		W1702	038	24		21-44-11	ALL
	39		W1702	039	24		27-31-11	ALL
	40		W1702	206Z			77-12-12	ALL
	41	UNUSED						ALL
	42		W1702	042	24		27-38-11	050-099, 150-154, 162-165, 275-276
	42		W1702	067	24		27-38-11	155-157, 166-199, 277-299
	43		W1702	043	24		27-38-11	050-099, 150-154, 162-165, 275-276
	43		W1702	068	24		27-38-11	155-157, 166-199, 277-299
	44		W1702	044	24		27-38-11	050-099, 150-154, 162-165, 275-276
	44		W1702	069	24		27-38-11	155-157, 166-199, 277-299
	45		W1702	045	24		27-38-11	050-099, 150-154, 162-165, 275-276
	45		W1702	070	24		27-38-11	155-157, 166-199, 277-299
	46		W1702	046	24		28-22-21	ALL
	47		W1702	047	24		77-35-11	ALL
	48		W1702	048	24		73-33-11	ALL
	49		W1702	204B	24		36-22-21	ALL
	50		W1702	204R	24		36-22-21	ALL
	51		W1702	051	24		79-33-11	ALL
	52		W1702	052	24		29-32-11	ALL
	53		W1702	201Z			73-21-14	ALL
	54		W1702	206R	24		77-12-12	ALL
	55		W1702	206B	24		77-12-12	ALL
D05364J		AE0306/ /		RCPT-E2-4				ALL
	1	UNUSED						ALL
	2		W0602	FRA			29-33-11	ALL
	3		W0602	032	22		29-33-11	ALL
	4		W0602	033	22		29-33-11	ALL
	5		W0602	034	22		29-33-11	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D05300
Page 65
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05364J		AE0306/ /		RCPT-E2-4 (continued)				ALL
	10		W0602	FRB			29-33-11	ALL
	11		W0602	031	22		29-33-11	ALL
	12		W0602	FRC			29-33-11	ALL
	13		W0602	029	20		SPARE	ALL
	14		W0602	028	20		SPARE	ALL
	15		W0602	040	22		SPARE	ALL
			W0602	031Z			29-33-11	ALL
			W0602	FRA			29-33-11	ALL
			W0602	FRB			29-33-11	ALL
			W0602	FRC			29-33-11	ALL
D05364P		AE0306/ /		PLUG-E2-4				ALL
	1	UNUSED						ALL
	2		W0014	FRT			29-33-11	ALL
	3		W0014	154	24		29-33-11	ALL
	4		W0014	155	24		29-33-11	ALL
	5		W0014	156	24		29-33-11	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10		W0014	FRU			29-33-11	ALL
	11		W0014	153	24		29-33-11	ALL
	12		W0014	FRV			29-33-11	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	REF		W0014	153Z			29-33-11	ALL
	REF		W0014	FRT			29-33-11	ALL
	REF		W0014	FRU			29-33-11	ALL
	REF		W0014	FRV			29-33-11	ALL
D05365J		AE0319/ /		RCPT-WX-R TO EFI-L,E1-2				ALL
	1		W0803	210W	24		34-43-21	050-099, 151
	1		W9090	903W	24		34-46-13	150, 152-199, 275-299
	2		W0803	210WB	24		34-43-21	050-099, 151
	2		W9090	903WB	24		34-46-13	150, 152-199, 275-299
	3		W0803	210Z			34-43-21	050-099, 151
	3		W9090	903Z			34-46-13	150, 152-199, 275-299
	4		W0803	211R	24		34-43-21	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05300

Page 66

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05365J		AE0319/ /		RCPT-WX-R TO EFI-L,E1-2 (continued)				ALL
	5		W0803	211B	24		34-43-21	ALL
	6		W0803	211Z			34-43-21	ALL
	7	UNUSED						050-099, 151
	7		W0803	210W	24		34-43-21	150, 152-199, 275-299
	8	UNUSED						050-099, 151
	8		W0803	210WB	24		34-43-21	150, 152-199, 275-299
	9	UNUSED						050-099, 151
	9		W0803	210Z			34-43-21	150, 152-199, 275-299
	10	UNUSED						050-099, 151
	10		W9090	904Z			34-46-13	150, 152-199, 275-299
	11		W0803	213R	24		34-43-21	ALL
	12		W0803	213B	24		34-43-21	ALL
	13		W0803	213Z			34-43-21	ALL
	14	UNUSED						050-099, 151
	14		W9090	904W	24		34-46-13	150, 152-199, 275-299
	15	UNUSED						050-099, 151
	15		W9090	904WB	24		34-46-13	150, 152-199, 275-299
D05365P		AE0319/ /		PLUG-E1-2				ALL
	1		W1100	215W	24		34-43-21	ALL
	2		W1100	215WB	24		34-43-21	ALL
	3		W1100	215Z			34-43-21	ALL
	4		W1100	216R	24		34-43-21	ALL
	5		W1100	216B	24		34-43-21	ALL
	6		W1100	216Z			34-43-21	ALL
	7	UNUSED						050-099, 151
	7		W1100	901W	24		34-43-21	150, 152-199, 275-299
	8	UNUSED						050-099, 151
	8		W1100	901WB	24		34-43-21	150, 152-199, 275-299
	9	UNUSED						050-099, 151
	9		W1100	901Z			34-43-21	150, 152-199, 275-299
	10	UNUSED						050-099, 151
	10		W1100	901Z			34-43-21	150, 152-199, 275-299
	11		W1100	217R	24		34-43-21	ALL
	12		W1100	217B	24		34-43-21	ALL
	13		W1100	217Z			34-43-21	ALL
	14	UNUSED						050-099, 151
	14		W1100	901W	24		34-43-21	150, 152-199, 275-299
	15	UNUSED						050-099, 151
	15		W1100	901WB	24		34-43-21	150, 152-199, 275-299

HOOKUP LIST

D280T132

91-21-51

Section D05300

Page 67

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05366J		AE0209/ /		RCPT-P36				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W0184	760	24		28-22-31	ALL
	5		W0184	814	22		27-23-11	ALL
	6		W0184	536	24		28-42-21	ALL
	7		W0184	860	24		31-31-13	ALL
	8		W0184	818	24		29-11-32	ALL
	9		W0184	781	24		32-41-11	ALL
	10		W0184	787	24		32-42-11	ALL
	11		W0184	782	24		32-42-11	ALL
	12		W0184	808	24		32-44-11	ALL
	13		W0184	830	24		32-42-11	ALL
	14		W0184	208B	24		73-21-14	ALL
	15		W0184	208R	24		73-21-14	ALL
	16		W0184	208Z			73-21-14	ALL
	17	UNUSED						ALL
	18		W0184	218Z			77-12-11	ALL
	19		W0184	218R	24		77-12-11	ALL
	20		W0184	218B	24		77-12-11	ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D05366P		AE0209/ /		PLUG-P36				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W1718	014	24		28-22-31	ALL
	5		W1718	015	24		27-23-11	ALL
	6		W1718	016	24		28-42-21	ALL
	7		W1718	017	24		31-31-13	ALL
	8		W1718	018	24		29-11-32	ALL
	9		W1718	019	24		32-41-11	ALL
	10		W1718	030	24		32-42-11	ALL
	11		W1718	031	24		32-42-11	ALL
	12		W1718	032	24		32-44-11	ALL
	13		W1718	033	24		32-42-11	ALL
	14		W1718	202B	24		73-21-14	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05300

Page 68

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05366P		AE0209/ /		PLUG-P36 (continued)				ALL
	15		W1718	202R	24		73-21-14	ALL
	16		W1718	202Z			73-21-14	ALL
	17	UNUSED						ALL
	18		W1718	207Z			77-12-11	ALL
	19		W1718	207R	24		77-12-11	ALL
	20		W1718	207B	24		77-12-11	ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D05368J		AE0305/ /		RCPT-E1-2				ALL
	1		W0756	097	24		27-81-11	ALL
	2		W0756	554	24		21-31-11	ALL
	3		W0756	546	24		27-88-11	ALL
	4		W0756	547	24		27-88-11	ALL
	5		W0756	056	24		78-34-11	ALL
	6		W0756	015	24		27-88-11	ALL
	7		W0756	016	24		27-88-11	ALL
	8		W0756	017	24		27-88-11	ALL
	9		W0756	018	24		27-88-11	ALL
	10		W0756	019	24		27-88-11	ALL
	11		W0756	020	24		27-88-11	ALL
	12	UNUSED						ALL
	13		W0756	098	24		32-09-13	ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17		W0756	579	24		24-11-11	ALL
	18		W0756	580	24		24-11-11	ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21		W0756	150	18		27-11-11	ALL
	22	UNUSED						ALL
	23		W0756	151	18		27-11-11	ALL
	24		W0756	685	24		78-34-11	ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28		W0756	037	24		78-34-11	ALL

HOOKUP LIST
D280T132

91-21-51
Section D05300
Page 69
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05368J		AE0305/ /		RCPT-E1-2 (continued)				ALL
	29		W0756	076	24		27-58-11	ALL
	30		W0756	039	24		27-88-11	ALL
	31		W0756	801	24		74-31-11	ALL
	32	UNUSED						050-099
	32		W0756	041	24		SPARE	150-199, 275-299
	33	UNUSED						050-099
	33		W0756	042	24		SPARE	150-199, 275-299
	34	UNUSED						050-099
	34		W0756	043	24		SPARE	150-199, 275-299
	35		W0756	044	24		27-81-21	ALL
	36		W0756	045	24		27-81-11	ALL
	37		W0756	235R	20		77-31-11	ALL
	38		W0756	235W	20		77-31-11	ALL
	39		W0756	235Z			77-31-11	ALL
	CAP	Y	W0756	040	24		SPARE	150-199, 275-299
D05368P		AE0305/ /		PLUG-E1-2				ALL
	1		W1092	001	24		27-81-11	ALL
	2		W1092	023	24		21-31-11	ALL
	3		W1092	036	24		27-88-11	ALL
	4		W1092	032	24		27-88-11	ALL
	5		W1092	564	24		78-34-11	ALL
	6		W1092	044	24		27-88-11	ALL
	7		W1092	045	24		27-88-11	ALL
	8		W1092	046	24		27-88-11	ALL
	9		W1092	047	24		27-88-11	ALL
	10		W1092	048	24		27-88-11	ALL
	11		W1092	049	24		27-88-11	ALL
	12	UNUSED						ALL
	13		W1092	557	24		32-09-13	ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17		W1092	649	24		24-11-11	ALL
	18		W1092	650	24		24-11-11	ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21		W1092	051	18		27-11-11	ALL
	22	UNUSED						ALL
	23		W1092	050	18		27-11-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05300

Page 70

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05368P		AE0305/ /		PLUG-E1-2 (continued)				ALL
	24		W1092	563	22		78-34-11	ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28		W1092	561	24		78-34-11	ALL
	29		W1092	024	24		27-58-11	ALL
	30		W1092	025	24		27-88-11	ALL
	31		W1092	200	24		74-31-11	ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35		W1092	0AS	24		27-81-21	ALL
	36		W1092	031	24		27-81-11	ALL
	37		W1092	268R	20		77-31-11	ALL
	38		W1092	268W	20		77-31-11	ALL
	39		W1092	268Z			77-31-11	ALL
	DED		W1092	561Z			78-34-11	ALL
	DED		W1092	563Z			78-34-11	ALL
	DED		W1092	564Z			78-34-11	ALL
D05370J		AE0305/ /		RCPT-E1-2				ALL
	1		W0756	209B	24		27-88-12	ALL
	2		W0756	209R	24		27-88-12	ALL
	3		W0756	210B	24		27-88-12	ALL
	4		W0756	210R	24		27-88-12	ALL
	5		W0756	211B	24		27-88-12	ALL
	6		W0756	211R	24		27-88-12	ALL
	7		W0756	212B	24		27-88-12	ALL
	8		W0756	212R	24		27-88-12	ALL
	9		W0756	213B	24		27-88-12	ALL
	10		W0756	213R	24		27-88-12	ALL
	11		W0756	214B	24		27-88-12	ALL
	12		W0756	214R	24		27-88-12	ALL
	13		W0756	215B	24		27-88-12	ALL
	14		W0756	215R	24		27-88-12	ALL
	15		W0756	216B	24		27-88-12	ALL
	16		W0756	216R	24		27-88-12	ALL
	17		W0756	217B	24		27-88-12	ALL
	18		W0756	217R	24		27-88-12	ALL
	19		W0756	218B	24		27-88-12	ALL

HOOKUP LIST
D280T132

91-21-51
Section D05300
Page 71
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05370J		AE0305/ /		RCPT-E1-2 (continued)				ALL
	20		W0756	218R	24		27-88-12	ALL
	21		W0756	219B	24		27-88-12	ALL
	22		W0756	219R	24		27-88-12	ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25		W0756	220B	24		27-88-12	ALL
	26		W0756	220R	24		27-88-12	ALL
	27		W0756	147	24		31-31-22	ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37		W0756	285R	24		77-31-11	ALL
	38		W0756	285B	24		77-31-11	ALL
	39		W0756	285Z			77-31-11	ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
D05370P		AE0305/ /		PLUG-E1-2				ALL
	1		W1092	214B	24		27-88-12	ALL
	2		W1092	214R	24		27-88-12	ALL
	3		W1092	212B	24		27-88-12	ALL
	4		W1092	212R	24		27-88-12	ALL
	5		W1092	215B	24		27-88-12	ALL
	6		W1092	215R	24		27-88-12	ALL
	7		W1092	216B	24		27-88-12	ALL
	8		W1092	216R	24		27-88-12	ALL
	9		W1092	213B	24		27-88-12	ALL
	10		W1092	213R	24		27-88-12	ALL
	11		W1092	217B	24		27-88-12	ALL
	12		W1092	217R	24		27-88-12	ALL
	13		W1092	218B	24		27-88-12	ALL
	14		W1092	218R	24		27-88-12	ALL
	15		W1092	219B	24		27-88-12	ALL
	16		W1092	219R	24		27-88-12	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05300

Page 72

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05370P		AE0305/ /		PLUG-E1-2 (continued)				ALL
	17		W1092	220B	24		27-88-12	ALL
	18		W1092	220R	24		27-88-12	ALL
	19		W1092	209B	24		27-88-12	ALL
	20		W1092	209R	24		27-88-12	ALL
	21		W1092	211B	24		27-88-12	ALL
	22		W1092	211R	24		27-88-12	ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25		W1092	210B	24		27-88-12	ALL
	26		W1092	210R	24		27-88-12	ALL
	27		W1092	669	24		31-31-22	ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37		W1092	620R	24		77-31-11	ALL
	38		W1092	620B	24		77-31-11	ALL
	39		W1092	620Z			77-31-11	ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
D05371J		AE0305/ /		RCPT-E1-6				ALL
	1		W1501	201Z			22-21-11	ALL
	2		W1501	201R	24		22-21-11	ALL
	3		W1501	201B	24		22-21-11	ALL
	4		W1501	006	22		22-21-11	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10		W1501	019	22		SPARE	ALL
	11	UNUSED						ALL
	12		W1501	003	24		SPARE	ALL

HOOKUP LIST
D280T132

91-21-51
Section D05300
Page 73
Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05371P		AE0305/ /		PLUG-				ALL
	1		W0161	220Z			22-21-11	ALL
	2		W0161	220R	24		22-21-11	ALL
	3		W0161	220B	24		22-21-11	ALL
	4		W0161	038	22		22-21-11	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D05372J		AE0218/ /		RCPT-P37				ALL
	1		W0188	043	22		28-31-12	050-099, 155-199, 276-299
	1	UNUSED						150-154, 275
	2		W0188	109	24		78-36-11	ALL
	3		W0188	063	24		27-18-11	050-099, 150-154, 162-165, 275-276
	3	UNUSED						155-157, 166-199, 277-299
	4		W0188	062	24		27-18-11	050-099, 150-154, 162-165, 275-276
	4	UNUSED						155-157, 166-199, 277-299
	5		W0188	073	24		28-42-12	ALL
	6		W0188	130	24		27-51-61	ALL
	7		W0188	061	24		27-18-11	050-099, 150-154, 162-165, 275-276
	7	UNUSED						155-157, 166-199, 277-299
	8		W0188	060	24		27-18-11	050-099, 150-154, 162-165, 275-276
	8	UNUSED						155-157, 166-199, 277-299
	9	UNUSED						ALL
	10	UNUSED						ALL
	11		W0188	108	24		28-42-11	ALL
	12		W0188	002	22		78-36-21	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20		W0188	049	22		28-42-13	050-099, 155-199, 276-299
	20	UNUSED						150-154, 275

HOOKUP LIST

D280T132

91-21-51

Section D05300

Page 74

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05372J		AE0218/ /		RCPT-P37 (continued)				ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	DED		W0188	043Z			28-31-12	050-099, 155-199, 276-299
	DED		W0188	049Z			28-42-13	050-099, 155-199, 276-299
D05372P		AE0218/ /		PLUG-P37				ALL
	1		W1704	019	22		28-31-12	050-099, 155-199, 276-299
	1	UNUSED						150-154, 275
	2		W1704	002	24		78-36-11	ALL
	3		W1704	003	24		27-18-11	050-099, 150-156, 162-166, 275-276
	3		W1704	003	24		SPARE	157, 167-199, 277-299
	4		W1704	004	24		27-18-11	050-099, 150-156, 162-166, 275-276
	4		W1704	004	24		SPARE	157, 167-199, 277-299
	5		W1704	005	24		28-42-12	ALL
	6		W1704	006	24		27-51-61	ALL
	7		W1704	007	24		27-18-11	050-099, 150-156, 162-166, 275-276
	7		W1704	007	24		SPARE	157, 167-199, 277-299
	8		W1704	008	24		27-18-11	050-099, 150-156, 162-166, 275-276
	8		W1704	008	24		SPARE	157, 167-199, 277-299
	9	UNUSED						050-099, 150-199
	9		W1704	009	24		SPARE	275-299
	10	UNUSED						050-099, 150-199
	10		W1704	010	24		SPARE	275-299
	11		W1704	011	24		28-42-11	ALL
	12		W1704	012	24		78-36-21	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18		W1704	038	24		SPARE	ALL
	19		W1704	039	24		SPARE	ALL
	20		W1704	037	22		28-42-13	050-099, 155-199, 276-299
	20	UNUSED						150-154, 275
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D05300
Page 75
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05373J		AE0317/ /		RCPT-E1-6				ALL
	1		W1541	031	22		22-21-21	ALL
	2		W1541	032	22		SPARE	ALL
	3		W1541	033	22		SPARE	ALL
	4		W1541	024	22		31-31-14	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9		W1541	202Z			22-21-21	ALL
	10		W1541	202R	24		22-21-21	ALL
	11		W1541	202B	24		22-21-21	ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15		W1541	003	22		22-21-21	ALL
	16	UNUSED						ALL
	17		W1541	209R	24		SPARE	ALL
	18		W1541	209B	24		SPARE	ALL
	19		W1541	209Z			SPARE	ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D05373P		AE0317/ /		PLUG-				ALL
	1		W0171	050	22		22-21-21	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W0171	023	22		31-31-14	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9		W0171	221Z			22-21-21	ALL
	10		W0171	221R	24		22-21-21	ALL
	11		W0171	221B	24		22-21-21	ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D05300

Page 76

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05373P		AE0317/ /		PLUG- (continued)				ALL
	15		W0171	002	22		22-21-21	ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D05374J		AE0224/ /		RCPT-P37				ALL
	1		W0192	67G	22		28-31-11	050-099, 155-199, 276-299
	1	UNUSED						150-154, 275
	2		W0192	01X	24		21-25-21	ALL
	3		W0192	14D	22		27-81-11	ALL
	4		W0192	04P	22		21-61-11	ALL
	5		W0192	04Z	24		21-61-21	ALL
	6		W0192	05N	24		21-61-31	ALL
	7		W0192	80Y	22		30-21-11	050-099, 150-199
	7	UNUSED						275-299
	8	UNUSED						ALL
	9		W0192	15Q	24		21-61-41	ALL
	10		W0192	08F	24		29-33-11	ALL
	11		W0192	06C	24		28-42-11	ALL
	12		W0192	247R	24		29-31-11	ALL
	13		W0192	247B	24		29-31-11	ALL
	14		W0192	08H	22		27-23-11	ALL
	15		W0192	07T	24		29-11-12	ALL
	16		W0192	07U	24		29-11-12	ALL
	17		W0192	01F	24		29-32-11	ALL
	18		W0192	01G	24		29-32-11	ALL
	19		W0192	07Q	22		79-35-11	ALL
	20		W0192	254Z			73-21-14	ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25		W0192	03B	24		75-23-11	ALL
	26		W0192	254B	24		73-21-14	ALL

HOOKUP LIST
D280T132

91-21-51
Section D05300
Page 77
Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05374J		AE0224/ /		RCPT-P37 (continued)				ALL
	27		W0192	254R	24		73-21-14	ALL
	28		W0192	63Y	22		28-42-13	050-099, 155-199, 276-299
	28	UNUSED						150-154, 275
	29	UNUSED						ALL
	30		W0192	310R	24		79-31-11	ALL
	31		W0192	310B	24		79-31-11	ALL
	32		W0192	310Y	24		79-31-11	ALL
	33		W0192	055	24		32-09-12	ALL
	34		W0192	021	24		32-09-12	ALL
	35		W0192	345	24		24-11-21	050, 150-199
	35		W0192	21M	24		24-11-21	051-099, 275-299
	36		W0192	843	24		30-21-11	ALL
	37	UNUSED						ALL
	38		W0192	03G	24		21-44-11	ALL
	39		W0192	08E	24		29-33-11	ALL
	40	UNUSED						050-099, 162-199, 277-299
	40		W0192	278R	24		77-12-11	150-157, 275-276
	41		W0192	278B	24		77-12-11	ALL
	42		W0192	08A	24		29-32-11	ALL
	43	UNUSED						ALL
	44		W0192	278R	24		77-12-11	050-099, 162-199, 277-299
	44	UNUSED						150-157, 275-276
	45		W0192	291	24		30-21-11	ALL
	46		W0192	09M	22		28-22-21	ALL
	47		W0192	12B	24		73-33-11	ALL
	48		W0192	12A	24		73-33-11	ALL
	49		W0192	244B	20		36-22-21	ALL
	50		W0192	244R	20		36-22-21	ALL
	51		W0192	07M	24		79-33-11	ALL
	52		W0192	278Z			77-12-11	ALL
	53	UNUSED						ALL
	54		W0192	09Q	24		73-21-18	ALL
	55	UNUSED						ALL
	DED		W0192	63YZ			28-42-13	050-099, 155-199, 276-299
	DED		W0192	67GZ			28-31-11	050-099, 155-199, 276-299
D05374P		AE0224/ /		PLUG-P37				ALL
	1		W1712	055	22		28-31-11	050-099, 155-199, 276-299
	1	UNUSED						150-154, 275
	2		W1712	002	24		21-25-21	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05300

Page 78

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05374P		AE0224/ /		PLUG-P37 (continued)				ALL
	3		W1712	003	24		27-81-11	ALL
	4		W1712	004	24		21-61-11	ALL
	5		W1712	005	24		21-61-21	ALL
	6		W1712	006	24		21-61-31	ALL
	7		W1712	007	24		30-21-11	050-099, 150-199
	7		W1712	007	24		SPARE	275-299
	8		W1712	008	24		SPARE	ALL
	9		W1712	009	24		21-61-41	ALL
	10		W1712	010	24		29-33-11	ALL
	11		W1712	011	24		28-42-11	ALL
	12		W1712	205R	24		29-31-11	ALL
	13		W1712	205B	24		29-31-11	ALL
	14		W1712	014	24		27-23-11	ALL
	15		W1712	015	24		29-11-12	ALL
	16		W1712	016	24		29-11-12	ALL
	17		W1712	017	24		29-32-11	ALL
	18		W1712	018	24		29-32-11	ALL
	19		W1712	019	24		79-35-11	ALL
	20		W1712	207Z			73-21-14	ALL
	21	UNUSED						ALL
	22		W1712	022	24		SPARE	ALL
	23		W1712	023	24		SPARE	ALL
	24	UNUSED						050-099, 150-199
	24		W1712	024	24		SPARE	275-299
	25		W1712	025	24		75-23-11	ALL
	26		W1712	207B	24		73-21-14	ALL
	27		W1712	207R	24		73-21-14	ALL
	28		W1712	056	24		28-42-13	050-099
	28		W1712	028	24		SPARE	150-154, 275
	28		W1712	056	22		28-42-13	155-199, 276-299
	29		W1712	029	24		SPARE	ALL
	30		W1712	301R	24		79-31-11	ALL
	31		W1712	301B	24		79-31-11	ALL
	32		W1712	301Y	24		79-31-11	ALL
	33		W1712	033	24		32-09-12	ALL
	34		W1712	034	24		32-09-12	ALL
	35		W1712	035	24		24-11-21	ALL
	36		W1712	036	24		30-21-11	ALL
	37	UNUSED						ALL
	38		W1712	038	24		21-44-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05300

Page 79

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05374P		AE0224/ /		PLUG-P37 (continued)				ALL
	39		W1712	039	24		29-33-11	ALL
	40	UNUSED						050-099, 162-199, 277-299
	40		W1712	202R	24		77-12-11	150-157, 275-276
	41		W1712	202B	24		77-12-11	ALL
	42		W1712	042	24		29-32-11	ALL
	43	UNUSED						ALL
	44		W1712	202R	24		77-12-11	050-099, 162-199, 277-299
	44	UNUSED						150-157, 275-276
	45		W1712	045	24		30-21-11	ALL
	46		W1712	046	24		28-22-21	ALL
	47		W1712	047	24		73-33-11	ALL
	48		W1712	048	24		73-33-11	ALL
	49		W1712	204B	24		36-22-21	ALL
	50		W1712	204R	24		36-22-21	ALL
	51		W1712	051	24		79-33-11	ALL
	52		W1712	202Z			77-12-11	ALL
	53	UNUSED						ALL
	54		W1712	054	24		73-21-18	ALL
	55	UNUSED						ALL
	CAP	Y	W1712	053	24		73-33-11	050-099
D05376J		AE0224/ /		RCPT-P37				ALL
	1	UNUSED						ALL
	2		W0198	539R	20		26-21-11	ALL
	3		W0198	538R	20		26-23-12	050-099, 155-199, 275-299
	3		W0198	538R	20		26-23-11	150-154
	4		W0198	526	24		29-21-31	ALL
	5	UNUSED						ALL
	6		W0198	525	24		76-11-11	ALL
	7		W0198	524	24		76-11-11	ALL
	8		W0198	556	22		26-16-21	ALL
	9		W0198	557	22		26-16-21	ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D05300

Page 80

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05376P		AE0224/ /		PLUG-P37				ALL
	1	UNUSED						ALL
	2		W1718	022R	22		26-21-11	ALL
	3		W1718	023R	22		26-23-12	ALL
	4		W1718	024	24		29-21-31	ALL
	5	UNUSED						ALL
	6		W1718	026	24		76-11-11	ALL
	7		W1718	027	24		76-11-11	ALL
	8		W1718	028	24		26-16-21	ALL
	9		W1718	029	24		26-16-21	ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
D05378J		AE0224/ /		RCPT-				ALL
	1	UNUSED						050-099, 150-199
	1		W0198	195R	20		26-22-21	275-299
	2		W0198	537R	20		26-21-11	ALL
	3		W0198	560	22		26-16-21	ALL
	4		W0198	553	24		28-25-21	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W0198	548	24		36-11-41	ALL
	8		W0198	502	24		49-61-11	ALL
	9		W0198	501	24		49-61-11	ALL
	10		W0198	542R	20		26-22-21	ALL
	11		W0198	540R	20		26-23-11	ALL
	12		W0198	517	24		49-15-11	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
D05378P		AE0224/ /		PLUG-P37				ALL
	1	UNUSED						050-099
	1		W1722	019R	22		SPARE	150-199
	1		W1722	019R	22		26-22-21	275-299
	2		W1722	022R	22		26-21-11	ALL

HOOKUP LIST
D280T132

91-21-51
Section D05300
Page 81
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05378P		AE0224/ /		PLUG-P37 (continued)				ALL
	3		W1722	023	24		26-16-21	ALL
	4		W1722	024	24		28-25-21	ALL
	5	UNUSED						ALL
	6		W1722	026	24		SPARE	ALL
	7		W1722	027	24		36-11-41	ALL
	8		W1722	028	24		49-61-11	ALL
	9		W1722	029	24		49-61-11	ALL
	10		W1722	030R	22		26-22-21	ALL
	11		W1722	031R	22		26-23-11	ALL
	12		W1722	032	24		49-15-11	ALL
	13		W1722	203B	24		SPARE	050-099
	13	UNUSED						150-199, 275-299
	14		W1722	203R	24		SPARE	050-099
	14	UNUSED						150-199, 275-299
	15		W1722	035	24		SPARE	ALL
D05383J		AE0307/ /		RCPT-E1-3				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W1271	007	22		34-12-12	ALL
	4		W1271	012	22		34-33-21	ALL
	5		W1271	011	22		34-33-11	ALL
	6		W1271	009	24		34-12-22	ALL
	7	UNUSED						ALL
	8		W1271	201R	24		27-32-11	ALL
	9	UNUSED						ALL
	10		W1271	013	22		34-33-31	ALL
	11		W1271	201B	24		27-32-11	ALL
	12	UNUSED						ALL
	13		W1271	035	22		SPARE	ALL
	14		W1271	017	24		SPARE	ALL
	15		W1271	006	24		SPARE	ALL
	16	UNUSED						ALL
	17		W1271	026	22		31-51-33	ALL
	18		W1271	022	24		31-51-33	ALL
	19		W1271	023	24		31-51-33	ALL
	20	UNUSED						ALL
	21		W1271	036	24		34-46-12	ALL
	22	UNUSED						ALL
	23	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D05300

Page 82

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05383J		AE0307/ /		RCPT-E1-3 (continued)				ALL
	24	UNUSED						ALL
D05383P		AE0307/ /		PLUG-E1-3				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W0105	810	24		34-12-12	ALL
	4		W0105	183	24		34-33-21	ALL
	5		W0105	182	24		34-33-11	ALL
	6		W0105	188	24		34-12-22	ALL
	7	UNUSED						ALL
	8		W0105	235R	24		27-32-11	ALL
	9	UNUSED						ALL
	10		W0105	184	24		34-33-31	ALL
	11		W0105	235B	24		27-32-11	ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17		W0105	858	22		31-51-33	ALL
	18		W0105	859	24		31-51-33	ALL
	19		W0105	860	24		31-51-33	ALL
	20	UNUSED						ALL
	21		W0105	861	24		34-46-12	ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D05389J		AE0319/ /		RCPT-E1-4				ALL
	1		W0733	010	24		34-22-34	ALL
	2		W0733	011	24		34-22-34	ALL
	3		W0733	012	24		34-22-34	ALL
	4		W0733	053	24		SPARE	ALL
	5		W0733	054	24		SPARE	ALL
	6		W0733	034	24		34-22-34	ALL
	7		W0733	035	24		34-22-34	ALL
	8		W0733	036	24		34-22-34	ALL
	9		W0733	055	24		SPARE	ALL
	10		W0733	056	24		SPARE	ALL
	11	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D05300
Page 83
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05389J		AE0319/ /		RCPT-E1-4 (continued)				ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
D05389P		AE0319/ /		PLUG-E1-4				ALL
	1		W1127	008	24		34-22-34	ALL
	2		W1127	009	24		34-22-34	ALL
	3		W1127	010	24		34-22-34	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W1127	014	24		34-22-34	ALL
	7		W1127	013	24		34-22-34	ALL
	8		W1127	012	24		34-22-34	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D05300

Page 84

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05389P		AE0319/ /		PLUG-E1-4 (continued)				ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
D05391J		AE0319/ /		RCPT-E1-3				ALL
	1		W1601	041	22		SPARE	ALL
	2		W1601	042	22		SPARE	ALL
	3		W1601	204R	24		SPARE	ALL
	4	UNUSED						ALL
	5		W1601	201R	24		22-21-21	ALL
	6		W1601	201B	24		22-21-21	ALL
	7		W1601	201Z			22-21-21	ALL
	8		W1601	202R	24		27-11-22	ALL
	9		W1601	202B	24		27-11-22	ALL
	10		W1601	202Z			27-11-22	ALL
	11		W1601	204B	24		SPARE	ALL
	12		W1601	204Z			SPARE	ALL
D05391P		AE0319/ /		PLUG-E1-3				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W0105	897R	24		22-21-21	ALL
	6		W0105	897B	24		22-21-21	ALL
	7		W0105	897Z			22-21-21	ALL
	8		W0105	896R	24		27-11-22	ALL
	9		W0105	896B	24		27-11-22	ALL
	10		W0105	896Z			27-11-22	ALL
	11	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D05300
Page 85
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05391P		AE0319/ /		PLUG-E1-3 (continued)				ALL
	12	UNUSED						ALL
D05393J		AF0120/ /		RCPT-P3				ALL
	1	UNUSED						ALL
	2		W0638	152	22		33-16-12	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W0638	155	22		33-16-12	ALL
	6	UNUSED						ALL
	7		W0638	157	22		33-16-12	ALL
	8		W0638	049	22		34-12-62	ALL
	9	UNUSED						ALL
	10		W0638	803	22		SPARE	ALL
	11		W0638	804	22		SPARE	ALL
	12	UNUSED						ALL
	DED		W0638	152Z			33-16-12	ALL
	DED		W0638	155Z			33-16-12	ALL
	DED		W0638	157Z			33-16-12	ALL
D05393P		AF0120/ /		PLUG-P3				ALL
	1	UNUSED						ALL
	2		W0031	609	22		33-16-13	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W0031	613	22		33-16-12	ALL
	6	UNUSED						ALL
	7		W0031	615	22		33-16-16	ALL
	8		W0031	846	22		34-12-62	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	DED		W0031	609Z			33-16-13	ALL
	DED		W0031	613Z			33-16-12	ALL
	DED		W0031	615Z			33-16-16	ALL
D05395J		AF0120/ /		RCPT-P3				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W0632	113	22		33-16-12	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05300

Page 86

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05395J		AF0120 /		RCPT-P3 (continued)				ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W0632	116	22		33-16-12	ALL
	7	UNUSED						ALL
	8		W0632	168	24		33-13-18	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11		W0632	031	24		33-14-21	ALL
	12		W0632	045	24		33-13-11	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15		W0632	125	24		33-16-11	ALL
	16		W0632	126	24		33-16-11	ALL
	17		W0632	101	22		29-21-32	ALL
	18		W0632	100	22		29-21-32	ALL
	19		W0632	093	22		SPARE	ALL
	20		W0632	094	22		29-21-32	ALL
	21		W0632	095	22		SPARE	ALL
	22		W0632	096	22		29-21-32	ALL
	23		W0632	097	22		29-21-32	ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35		W0632	804	24		32-61-14	ALL
	36		W0632	805	24		32-61-14	ALL
	37		W0632	806	24		32-61-14	ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D05300

Page 87

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05395P		AF0120/ /		PLUG-P3				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W0011	793	22		33-16-12	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W0011	794	22		33-16-12	ALL
	7	UNUSED						ALL
	8		W0011	194	24		33-13-18	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11		W0011	788	24		33-14-21	ALL
	12		W0011	122	24		33-13-11	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15		W0011	759	24		33-16-11	ALL
	16		W0011	760	24		33-16-11	ALL
	17		W0011	172	22		29-21-32	ALL
	18		W0011	181	22		29-21-32	ALL
	19	UNUSED						ALL
	20		W0011	175	22		29-21-32	ALL
	21	UNUSED						ALL
	22		W0011	176	22		29-21-32	ALL
	23		W0011	177	22		29-21-32	ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35		W0011	131	24		32-61-14	ALL
	36		W0011	132	24		32-61-14	ALL
	37		W0011	133	24		32-61-14	ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D05300

Page 88

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05395P		AF0120/ /		PLUG-P3 (continued)				ALL
	41	UNUSED						ALL
	DED		W0011	131Z			32-61-14	ALL
	DED		W0011	132Z			32-61-14	ALL
	DED		W0011	133Z			32-61-14	ALL
D05397J		AE0317/ /		RCPT-E1-6				ALL
	1		W1511	204R	24		SPARE	ALL
	2		W1511	204B	24		SPARE	ALL
	3		W1511	204Z			SPARE	ALL
	4		W1511	201R	24		22-21-11	ALL
	5		W1511	201B	24		22-21-11	ALL
	6		W1511	201Z			22-21-11	ALL
	7	UNUSED						ALL
	8		W1511	048	22		SPARE	ALL
	9		W1511	049	22		SPARE	ALL
	10		W1511	050	22		SPARE	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D05397P		AE0317/ /		PLUG-E1-6				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W0171	227R	24		22-21-11	ALL
	5		W0171	227B	24		22-21-11	ALL
	6		W0171	227Z			22-21-11	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D05399J		AF0120/ /		RCPT-P3				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W0638	113	22		33-16-12	ALL
	4	UNUSED						ALL
	5		W0638	115	22		33-16-12	ALL
	6	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D05300
Page 89
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05399J		AF0120/ /		RCPT-P3 (continued)				ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11		W0638	001	20		33-42-11	ALL
	12	UNUSED						ALL
	13		W0638	015	22		33-13-13	ALL
	14		W0638	016	24		33-13-17	ALL
	15		W0638	302B	24		33-13-17	ALL
	16		W0638	302R	24		33-13-17	ALL
	17		W0638	302Y	24		33-13-17	ALL
	18		W0638	100	24		33-14-11	ALL
	19		W0638	101	24		33-14-11	ALL
	20		W0638	103	24		33-14-11	ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29		W0638	801	22		SPARE	ALL
	30		W0638	802	22		SPARE	ALL
	31	UNUSED						ALL
D05399P		AF0120/ /		PLUG-P3				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W0031	788	22		33-16-12	ALL
	4	UNUSED						ALL
	5		W0031	789	22		33-16-12	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11		W0031	618	20		33-42-11	ALL
	12	UNUSED						ALL
	13		W0031	152	22		33-13-13	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05300

Page 90

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05399P		AF0120/ /		PLUG-P3 (continued)				ALL
	14		W0031	780	24		33-13-17	ALL
	15		W0031	352B	24		33-13-17	ALL
	16		W0031	352R	24		33-13-17	ALL
	17		W0031	352Y	24		33-13-17	ALL
	18		W0031	783	24		33-14-11	ALL
	19		W0031	786	24		33-14-11	ALL
	20		W0031	787	24		33-14-11	ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D05300

Page 91 End

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05400J		AF0204/ /		RCPT-P61				ALL
	1	UNUSED						ALL
	2		W0062	228R	20		21-65-11	ALL
	3		W0062	051	24		21-31-11	ALL
	4		W0062	55Z	22		28-41-13	050-099, 150-156, 162-166, 275-276
	4		W0062	67G	22		28-41-13	157, 167-199, 277-299
	5		W0062	64F	24		80-11-11	ALL
	6		W0062	64G	24		80-11-11	ALL
	7		W0062	723	22		28-42-12	050-099, 155-199, 276-299
	7		W0062	618	22		28-42-12	150-154, 275
	8		W0062	228B	20		21-65-11	ALL
	9		W0062	229R	20		21-65-11	ALL
	10		W0062	229B	20		21-65-11	ALL
	11		W0062	087	22		36-11-11	ALL
	12		W0062	301B	24		21-64-11	ALL
	13		W0062	301R	24		21-64-11	ALL
	14		W0062	301Y	24		21-64-11	ALL
	15		W0062	50L	24		21-33-11	ALL
	16		W0062	62C	24		74-31-11	ALL
	17		W0062	64J	24		24-51-42	ALL
	18		W0062	51W	24		24-11-11	ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	DED		W0062	64FZ			80-11-11	ALL
	DED		W0062	64GZ			80-11-11	ALL
	DED		W0062	723Z			28-42-12	050-099, 155-199, 276-299
D05400P		AF0204/ /		PLUG-P61				ALL
	1	UNUSED						ALL
	2		W1700	202R	20		21-65-11	ALL
	3		W1700	003	24		21-31-11	ALL
	4		W1700	004	24		28-41-13	ALL
	5		W1700	005	24		80-11-11	ALL
	6		W1700	006	24		80-11-11	ALL
	7		W1700	007	24		28-42-12	ALL
	8		W1700	202B	20		21-65-11	ALL
	9		W1700	201R	20		21-65-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05400

Page 1

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05400P		AF0204/ /		PLUG-P61 (continued)				ALL
	10		W1700	201B	20		21-65-11	ALL
	11		W1700	011	24		36-11-11	ALL
	12		W1700	301B	24		21-64-11	ALL
	13		W1700	301R	24		21-64-11	ALL
	14		W1700	301Y	24		21-64-11	ALL
	15		W1700	015	24		21-33-11	ALL
	16		W1700	016	24		74-31-11	ALL
	17		W1700	017	24		24-51-42	ALL
	18		W1700	018	24		24-11-11	ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	DED		W1700	005Z			80-11-11	ALL
	DED		W1700	006Z			80-11-11	ALL
D05402J		AF0204/ /		RCPT-P61				ALL
	1		W0062	688	22		28-31-11	050-099, 155-199, 276-299
	1	UNUSED						150-154, 275
	2		W0062	04G	22		29-21-32	ALL
	3		W0062	065	24		21-31-21	ALL
	4		W0062	673	24		24-51-13	ALL
	5		W0062	53W	22		27-13-11	ALL
	6		W0062	009	22		29-11-22	ALL
	7		W0062	05T	22		29-11-31	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11		W0062	120	24		36-11-31	ALL
	12		W0062	55U	22		29-32-11	ALL
	13		W0062	55W	22		29-32-11	ALL
	14		W0062	56E	24		30-21-11	ALL
	15	UNUSED						050-099, 150-199
	15		W0062	56W	24		30-21-11	275-299
	16	UNUSED						050-099
	17	UNUSED						050-099
	18	UNUSED						050-099
	19	UNUSED						050-099

HOOKUP LIST

D280T132

91-21-51

Section D05400

Page 2

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05402J		AF0204/ /		RCPT-P61 (continued)				ALL
	20	UNUSED						050-099
	21	UNUSED						050-099
	22	UNUSED						050-099
	23	UNUSED						050-099
	24	UNUSED						050-099
	25	UNUSED						050-099
	26	UNUSED						050-099
	27	UNUSED						050-099
	28	UNUSED						050-099
	29	UNUSED						050-099
	30	UNUSED						050-099
	31	UNUSED						050-099
	DED		W0062	53WZ			27-13-11	ALL
	DED		W0062	55UZ			29-32-11	ALL
	DED		W0062	55WZ			29-32-11	ALL
	DED		W0062	688Z			28-31-11	050-099, 155-199, 276-299
D05402P		AF0204/ /		PLUG-P61				ALL
	1		W1706	019	22		28-31-11	050-099, 155-199, 276-299
	1	UNUSED						150-154, 275
	2		W1706	002	24		29-21-32	ALL
	3		W1706	003	24		21-31-21	ALL
	4		W1706	004	24		24-51-13	ALL
	5		W1706	005	24		27-13-11	ALL
	6		W1706	006	24		29-11-22	ALL
	7		W1706	007	24		29-11-31	ALL
	8		W1706	008	24		SPARE	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11		W1706	011	24		36-11-31	ALL
	12		W1706	012	24		29-32-11	ALL
	13		W1706	013	24		29-32-11	ALL
	14		W1706	014	24		30-21-11	ALL
	15		W1706	015	24		SPARE	050-099, 150-199
	15		W1706	015	24		30-21-11	275-299
	16	UNUSED						050-099
	17	UNUSED						050-099
	18	UNUSED						050-099
	19	UNUSED						050-099
	20	UNUSED						050-099

HOOKUP LIST

D280T132

91-21-51

Section D05400

Page 3

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05402P		AF0204/ /		PLUG-P61 (continued)				ALL
	21	UNUSED						050-099
	22	UNUSED						050-099
	23	UNUSED						050-099
	24	UNUSED						050-099
	25	UNUSED						050-099
	26	UNUSED						050-099
	27	UNUSED						050-099
	28	UNUSED						050-099
	29	UNUSED						050-099
	30	UNUSED						050-099
	31	UNUSED						050-099
D05403J		AE0303/ /		RCPT-E1-1				ALL
	1		W0111	210R	22		27-61-16	ALL
	2	UNUSED						ALL
	3		W0111	210B	22		27-61-16	ALL
	4		W0111	310B	22		27-61-16	ALL
	5		W0111	310R	22		27-61-16	ALL
	6		W0111	311B	22		27-61-16	ALL
	7		W0111	310Y	22		27-61-16	ALL
	8		W0111	213R	22		27-61-16	ALL
	9		W0111	213B	22		27-61-16	ALL
	10		W0111	212R	22		27-61-16	ALL
	11		W0111	212B	22		27-61-16	ALL
	12		W0111	311R	22		27-61-16	ALL
	13		W0111	311Y	22		27-61-16	ALL
	14		W0111	214R	22		27-61-16	ALL
	15		W0111	214B	22		27-61-16	ALL
	16	UNUSED						ALL
	17		W0111	188	22		22-21-11	ALL
	18		W0111	218R	22		22-21-11	ALL
	19		W0111	218B	22		22-21-11	ALL
	20		W0111	314R	22		22-21-11	ALL
	21		W0111	314B	22		22-21-11	ALL
	22		W0111	314Y	22		22-21-11	ALL
	23		W0111	220R	22		22-21-11	ALL
	24		W0111	220B	22		22-21-11	ALL
	25		W0111	151	22		27-41-11	ALL
	26		W0111	152	22		27-41-11	ALL
	27		W0111	154	22		27-41-11	ALL

HOOKUP LIST
D280T132

91-21-51
Section D05400
Page 4
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05403J		AE0303/ /		RCPT-E1-1 (continued)				ALL
	28		W0111	224R	22		27-21-12	ALL
	29		W0111	224B	22		27-21-12	ALL
	30		W0111	302R	22		27-21-12	ALL
	31		W0111	302B	22		27-21-12	ALL
	32		W0111	302Y	22		27-21-12	ALL
	33		W0111	201R	22		27-21-12	ALL
	34		W0111	201B	22		27-21-12	ALL
	35		W0111	004	22		27-21-12	ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
D05403P		AE0303/ /		PLUG-E1-1				ALL
	1		W1251	201R	20		27-61-16	ALL
	2	UNUSED						ALL
	3		W1251	201B	20		27-61-16	ALL
	4		W1251	301B	20		27-61-16	ALL
	5		W1251	301R	20		27-61-16	ALL
	6		W1251	302B	20		27-61-16	ALL
	7		W1251	301Y	20		27-61-16	ALL
	8		W1251	203R	20		27-61-16	ALL
	9		W1251	203B	20		27-61-16	ALL
	10		W1251	204R	20		27-61-16	ALL
	11		W1251	204B	20		27-61-16	ALL
	12		W1251	302R	20		27-61-16	ALL
	13		W1251	302Y	20		27-61-16	ALL
	14		W1251	206R	20		27-61-16	ALL
	15		W1251	206B	20		27-61-16	ALL
	16	UNUSED						ALL
	17	DK	W1251	005	18		22-21-11	ALL
	18		W1251	207R	22		22-21-11	ALL
	19		W1251	207B	22		22-21-11	ALL
	20		W1251	303R	22		22-21-11	ALL
	21		W1251	303B	22		22-21-11	ALL
	22		W1251	303Y	22		22-21-11	ALL
	23		W1251	208R	22		22-21-11	ALL
	24		W1251	208B	22		22-21-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05400

Page 5

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05403P		AE0303/ /		PLUG-E1-1 (continued)				ALL
	25		W1251	007Y	22		27-41-11	ALL
	26		W1251	008Y	22		27-41-11	ALL
	27		W1251	009	22		27-41-11	ALL
	28		W1251	209R	22		27-21-12	ALL
	29		W1251	209B	22		27-21-12	ALL
	30		W1251	304R	22		27-21-12	ALL
	31		W1251	304B	22		27-21-12	ALL
	32		W1251	304Y	22		27-21-12	ALL
	33		W1251	210R	22		27-21-12	ALL
	34		W1251	210B	22		27-21-12	ALL
	35		W1251	006	22		27-21-12	ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40		W1251	010	22		SPARE	ALL
	41		W1251	011	22		SPARE	ALL
D05405J		AE0303/ /		RCPT-E1-1				ALL
	1		W0121	202R	22		27-61-15	ALL
	2	UNUSED						ALL
	3		W0121	202B	22		27-61-15	ALL
	4	UNUSED						ALL
	5		W0121	305R	22		27-61-15	ALL
	6		W0121	305B	22		27-61-15	ALL
	7		W0121	305Y	22		27-61-15	ALL
	8		W0121	205R	22		27-61-15	ALL
	9		W0121	205B	22		27-61-15	ALL
	10		W0121	204R	22		27-61-15	ALL
	11		W0121	204B	22		27-61-15	ALL
	12		W0121	306R	22		27-61-15	ALL
	13		W0121	306Y	22		27-61-15	ALL
	14		W0121	206R	22		27-61-15	ALL
	15		W0121	206B	22		27-61-15	ALL
	16		W0121	306B	22		27-61-15	ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D05400

Page 6

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05405J		AE0303/ /		RCPT-E1-1 (continued)				ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D05405P		AE0303/ /		PLUG-E1-1				ALL
	1		W1253	201R	20		27-61-15	ALL
	2	UNUSED						ALL
	3		W1253	201B	20		27-61-15	ALL
	4	UNUSED						ALL
	5		W1253	302R	20		27-61-15	ALL
	6		W1253	302B	20		27-61-15	ALL
	7		W1253	302Y	20		27-61-15	ALL
	8		W1253	203R	20		27-61-15	ALL
	9		W1253	203B	20		27-61-15	ALL
	10		W1253	204R	20		27-61-15	ALL
	11		W1253	204B	20		27-61-15	ALL
	12		W1253	303R	20		27-61-15	ALL
	13		W1253	303Y	20		27-61-15	ALL
	14		W1253	206R	20		27-61-15	ALL
	15		W1253	206B	20		27-61-15	ALL
	16		W1253	303B	20		27-61-15	ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D05406J		AF0204/ /		RCPT-P61				ALL
	1	UNUSED						ALL
	2		W0066	58Z	24		33-51-11	ALL
	3		W0066	53Z	24		21-61-51	ALL
	4		W0066	666	24		24-51-23	ALL
	5		W0066	53W	22		27-13-11	ALL
	6		W0066	009	22		29-11-12	ALL
	7		W0066	724	22		28-42-12	050-099, 155-199, 276-299
	7		W0066	618	22		28-42-12	150-154, 275
	8	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D05400

Page 7

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05406J		AF0204/ /		RCPT-P61 (continued)				ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11		W0066	115	24		36-11-21	ALL
	12		W0066	06L	24		21-26-21	ALL
	13		W0066	202B	20		21-65-11	ALL
	14		W0066	202R	20		21-65-11	ALL
	15		W0066	203B	20		21-65-11	ALL
	16		W0066	203R	20		21-65-11	ALL
	17		W0066	204B	20		21-65-11	ALL
	18		W0066	204R	20		21-65-11	ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22		W0066	53K	24		24-51-41	050-099
	22		W0066	53K	24		24-51-43	150-199, 275-299
	23		W0066	55U	22		29-32-11	ALL
	24		W0066	55W	22		29-32-11	ALL
	25		W0066	56P	22		30-41-12	ALL
	26		W0066	56S	22		30-41-12	ALL
	27		W0066	05T	22		29-11-31	ALL
	28	UNUSED						ALL
	29		W0066	58E	24		32-42-12	ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34		W0066	56E	24		30-21-11	ALL
	35		W0066	56W	24		SPARE	050-099, 155-199
	35	UNUSED						150-154
	35		W0066	56W	24		30-21-11	275-299
	36		W0066	52B	24		21-58-16	ALL
	37		W0066	212B	20		21-65-11	ALL
	38		W0066	212R	20		21-65-11	ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	DED		W0066	55UZ			29-32-11	ALL
	DED		W0066	55WZ			29-32-11	ALL
	DED		W0066	724Z			28-42-12	050-099, 155-199, 276-299

HOOKUP LIST

D280T132

91-21-51

Section D05400

Page 8

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05406P		AF0204/ /		PLUG-P61				ALL
	1	UNUSED						ALL
	2		W1710	002	24		33-51-11	ALL
	3		W1710	003	24		21-61-51	ALL
	4		W1710	004	24		24-51-23	ALL
	5		W1710	005	24		27-13-11	ALL
	6		W1710	006	24		29-11-12	ALL
	7		W1710	007	24		28-42-12	ALL
	8	UNUSED						050-099, 275-299
	8		W1710	008R	22		SPARE	150-199
	9	UNUSED						050-099, 275-299
	9		W1710	009R	22		SPARE	150-199
	10	UNUSED						050-099, 275-299
	10		W1710	010R	22		SPARE	150-199
	11		W1710	011	24		36-11-21	ALL
	12		W1710	012	24		21-26-21	ALL
	13		W1710	201B	24		21-65-11	ALL
	14		W1710	201R	24		21-65-11	ALL
	15		W1710	202B	24		21-65-11	ALL
	16		W1710	202R	24		21-65-11	ALL
	17		W1710	203B	24		21-65-11	ALL
	18		W1710	203R	24		21-65-11	ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22		W1710	022	24		24-51-43	ALL
	23		W1710	023	24		29-32-11	ALL
	24		W1710	024	24		29-32-11	ALL
	25		W1710	025	24		30-41-12	ALL
	26		W1710	026	24		30-41-12	ALL
	27		W1710	027	24		29-11-31	ALL
	28	UNUSED						050-099
	28		W1710	028	24		SPARE	150-199, 275-299
	29		W1710	029	24		32-42-12	ALL
	30	UNUSED						050-099, 275-299
	30		W1710	030R	22		SPARE	150-199
	31	UNUSED						050-099, 275-299
	31		W1710	031R	22		SPARE	150-199
	32	UNUSED						050-099
	32		W1710	032	24		SPARE	150-199, 275-299
	33		W1710	033	24		SPARE	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05400

Page 9

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05406P		AF0204/ /		PLUG-P61 (continued)				ALL
	34		W1710	034	24		30-21-11	ALL
	35		W1710	035	24		SPARE	050-099, 150-199
	35		W1710	035	24		30-21-11	275-299
	36		W1710	036	24		21-58-16	ALL
	37		W1710	204B	24		21-65-11	ALL
	38		W1710	204R	24		21-65-11	ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
D05407J		AE0320/ /		RCPT-E2-3				ALL
	1		W1511	045	22		27-09-14	ALL
	2		W1511	047	22		27-09-14	ALL
	3		W1511	205R	24		SPARE	ALL
	4		W1511	205B	24		SPARE	ALL
	5		W1511	205Z			SPARE	ALL
	6		W1511	046	22		27-09-14	ALL
	7		W1511	202R	24		27-11-12	ALL
	8		W1511	202B	24		27-11-12	ALL
	9		W1511	202Z			27-11-12	ALL
	10		W1511	206R	22		31-51-43	ALL
	11		W1511	206B	22		31-51-43	ALL
	12	UNUSED						050-099
	12		W1511	208R	24		22-21-31	150-199, 275-299
	13	UNUSED						050-099
	13		W1511	208B	24		22-21-31	150-199, 275-299
	14	UNUSED						050-099
	14		W1511	208Z			22-21-31	150-199, 275-299
	15	UNUSED						ALL
	16	UNUSED						ALL
	17		W1511	059	22		27-09-14	ALL
	18		W1511	024	22		SPARE	ALL
	19		W1511	025	22		SPARE	ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D05400

Page 10

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05407P		AE0320/ /		PLUG-E2-3				ALL
	1		W0145	025	22		27-09-14	ALL
	2		W0145	004	22		27-09-14	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W0145	175	22		27-09-14	ALL
	7		W0145	571R	24		27-11-12	ALL
	8		W0145	571B	24		27-11-12	ALL
	9		W0145	571Z			27-11-12	ALL
	10		W0145	256R	22		31-51-43	ALL
	11		W0145	256B	22		31-51-43	ALL
	12	UNUSED						050-099, 150-166
	12		W0145	730R	24		22-21-31	167-199, 275-299
	13	UNUSED						050-099, 150-166
	13		W0145	730B	24		22-21-31	167-199, 275-299
	14	UNUSED						050-099, 150-166
	14		W0145	730Z			22-21-31	167-199, 275-299
	15	UNUSED						ALL
	16	UNUSED						ALL
	17		W0145	168	22		27-09-14	ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D05409J		AL1004/ /		RCPT-				ALL
	1		W1343	209R	24		23-41-11	ALL
	2		W1343	209B	24		23-41-11	ALL
	3		W1343	209Z			23-41-11	ALL
D05409P		AL1004/ /		PLUG-				ALL
	1		W0932	203R	20		23-41-11	ALL
	2		W0932	203B	20		23-41-11	ALL
	3		W0932	203Z			23-41-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05400

Page 11

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05410J		AF0204/ /		RCPT-P61				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W0070	12S	24		35-21-11	ALL
	4		W0070	585	22		28-22-31	ALL
	5		W0070	11B	24		80-11-21	ALL
	6		W0070	11C	24		80-11-21	ALL
	7		W0070	04J	22		29-32-11	ALL
	8		W0070	04V	22		32-42-11	ALL
	9		W0070	01T	24		24-28-11	ALL
	10		W0070	705	24		24-33-11	ALL
	11		W0070	02D	24		24-33-11	ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16		W0070	08M	24		74-31-11	ALL
	17	UNUSED						ALL
	18		W0070	011	22		29-11-32	ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22		W0070	201R	24		24-34-11	ALL
	23		W0070	201B	24		24-34-11	ALL
	24		W0070	202R	24		24-34-11	ALL
	25		W0070	202B	24		24-34-11	ALL
	26		W0070	203R	24		24-34-11	ALL
	27		W0070	203B	24		24-34-11	ALL
	28		W0070	02J	24		24-34-11	ALL
	29		W0070	02K	24		24-34-11	ALL
	30		W0070	02L	24		24-34-11	ALL
	31		W0070	02G	24		24-34-11	ALL
	32		W0070	13M	24		21-58-16	ALL
	33		W0070	02E	24		24-34-11	ALL
	34		W0070	02H	24		24-34-11	ALL
	35		W0070	228B	24		35-11-13	ALL
	36		W0070	228R	24		35-11-13	ALL
	37		W0070	306B	24		49-94-14	ALL
	38		W0070	306R	24		49-94-14	ALL
	39		W0070	306Y	24		49-94-14	ALL
	40	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D05400
Page 12
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05410J		AF0204/ /		RCPT-P61 (continued)				ALL
	41	UNUSED						ALL
D05410P		AF0204/ /		PLUG-P61				ALL
	1	UNUSED						ALL
	2		W1716	002	24		SPARE	ALL
	3		W1716	003	24		35-21-11	ALL
	4		W1716	004	24		28-22-31	ALL
	5		W1716	005	24		80-11-21	ALL
	6		W1716	006	24		80-11-21	ALL
	7		W1716	007	24		29-32-11	ALL
	8		W1716	008	24		32-42-11	ALL
	9		W1716	009	24		24-28-11	ALL
	10		W1716	010	24		24-33-11	ALL
	11		W1716	011	24		24-33-11	ALL
	12		W1716	012	24		SPARE	ALL
	13		W1716	013	24		SPARE	ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16		W1716	016	24		74-31-11	ALL
	17		W1716	017	24		SPARE	ALL
	18		W1716	018	24		29-11-32	ALL
	19		W1716	019	24		SPARE	ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22		W1716	201R	24		24-34-11	ALL
	23		W1716	201B	24		24-34-11	ALL
	24		W1716	202R	24		24-34-11	ALL
	25		W1716	202B	24		24-34-11	ALL
	26		W1716	203R	24		24-34-11	ALL
	27		W1716	203B	24		24-34-11	ALL
	28		W1716	028	24		24-34-11	ALL
	29		W1716	029	24		24-34-11	ALL
	30		W1716	030	24		24-34-11	ALL
	31		W1716	031	24		24-34-11	ALL
	32		W1716	032	24		21-58-16	ALL
	33		W1716	033	24		24-34-11	ALL
	34		W1716	034	24		24-34-11	ALL
	35		W1716	204B	24		35-11-13	ALL
	36		W1716	204R	24		35-11-13	ALL
	37		W1716	301B	24		49-94-14	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05400

Page 13

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05410P		AF0204/ /		PLUG-P61 (continued)				ALL
	38		W1716	301R	24		49-94-14	ALL
	39		W1716	301Y	24		49-94-14	ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
D05411J		AE0303/ /		RCPT-E1-1				ALL
	1		W0101	206R	22		27-61-14	ALL
	2	UNUSED						ALL
	3		W0101	206B	22		27-61-14	ALL
	4		W0101	304B	22		27-61-14	ALL
	5		W0101	304R	22		27-61-14	ALL
	6		W0101	305B	22		27-61-14	ALL
	7		W0101	304Y	22		27-61-14	ALL
	8		W0101	210R	22		27-61-14	ALL
	9		W0101	210B	22		27-61-14	ALL
	10		W0101	207R	22		27-61-14	ALL
	11		W0101	207B	22		27-61-14	ALL
	12		W0101	305R	22		27-61-14	ALL
	13		W0101	305Y	22		27-61-14	ALL
	14		W0101	209R	22		27-61-14	ALL
	15		W0101	209B	22		27-61-14	ALL
D05411P		AE0303/ /		PLUG-E1-1				ALL
	1		W1255	201R	20		27-61-14	ALL
	2	UNUSED						ALL
	3		W1255	201B	20		27-61-14	ALL
	4		W1255	301B	20		27-61-14	ALL
	5		W1255	301R	20		27-61-14	ALL
	6		W1255	302B	20		27-61-14	ALL
	7		W1255	301Y	20		27-61-14	ALL
	8		W1255	203R	20		27-61-14	ALL
	9		W1255	203B	20		27-61-14	ALL
	10		W1255	204R	20		27-61-14	ALL
	11		W1255	204B	20		27-61-14	ALL
	12		W1255	302R	20		27-61-14	ALL
	13		W1255	302Y	20		27-61-14	ALL
	14		W1255	206R	20		27-61-14	ALL
	15		W1255	206B	20		27-61-14	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05400

Page 14

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05413J		AE0303/ /		RCPT-E1-1				ALL
	1		W0101	145	22		22-21-11	ALL
	2		W0101	176	22		22-22-11	ALL
	3		W0101	133	22		22-24-11	ALL
	4	UNUSED						050-099, 155-199, 275-299
	4		W0101	146	22		27-41-11	150-154
	5		W0101	140	22		22-24-11	ALL
	6		W0101	141	22		22-24-11	ALL
	7		W0101	070	22		27-09-12	ALL
	8		W0101	081	22		27-09-13	ALL
	9		W0101	080	22		27-09-13	ALL
	10		W0101	001	22		27-11-12	ALL
	11		W0101	002	22		27-11-12	ALL
	12		W0101	007	22		27-21-12	ALL
	13		W0101	008	22		27-21-22	ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22		W0101	010	22		27-21-22	ALL
	23		W0101	011	22		27-21-22	ALL
	24		W0101	012	22		27-21-22	ALL
	25		W0101	156	22		27-41-11	ALL
	26		W0101	157	22		27-41-11	ALL
	27		W0101	169	22		27-41-11	ALL
	28		W0101	177	22		27-41-11	ALL
	29		W0101	111	22		27-61-11	ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34		W0101	201R	22		27-21-22	ALL
	35		W0101	201B	22		27-21-22	ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D05400

Page 15

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05413J		AE0303/ /		RCPT-E1-1 (continued)				ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
D05413P		AE0303/ /		PLUG-E1-1				ALL
	1		W1601	001	22		22-21-21	ALL
	2		W1601	002	22		22-22-11	ALL
	3		W1601	003	22		22-24-11	ALL
	4	UNUSED						050-099, 155-199, 275-299
	4		W1601	004	22		27-41-21	150-154
	5		W1601	005	22		22-24-11	ALL
	6		W1601	006	22		22-24-11	ALL
	7		W1601	007	22		27-09-12	ALL
	8		W1601	008	22		27-09-13	ALL
	9		W1601	009	22		27-09-13	ALL
	10		W1601	010	22		27-11-22	ALL
	11		W1601	011	22		27-11-22	ALL
	12		W1601	012	22		27-21-12	ALL
	13		W1601	013	22		27-21-22	ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22		W1601	022	22		27-21-22	ALL
	23		W1601	023	22		27-21-22	ALL
	24		W1601	024	22		27-21-22	ALL
	25		W1601	025	22		27-41-11	ALL
	26		W1601	026	22		27-41-11	ALL
	27		W1601	027	22		27-41-11	ALL
	28		W1601	028	22		27-41-11	ALL
	29		W1601	029	22		27-61-11	ALL
	30		W1601	030	22		SPARE	ALL
	31		W1601	031	22		SPARE	ALL
	32		W1601	032	22		SPARE	ALL
	33		W1601	033	22		SPARE	ALL
	34		W1601	203R	22		27-21-22	ALL
	35		W1601	203B	22		27-21-22	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05400

Page 16

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05413P		AE0303/ /		PLUG-E1-1 (continued)				ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
D05414J		AL1008/ /		RCPT-R WING RS/BODY				ALL
	1		W0752	004	20		27-51-31	ALL
	2		W0752	005	20		27-51-31	ALL
	3		W0752	010	20		27-81-31	ALL
	4		W0752	009	20		27-81-31	ALL
	5		W0752	012	20		27-81-31	ALL
	6		W0752	013	20		27-51-51	ALL
	7		W0752	017	20		27-51-51	ALL
	8		W0752	018	20		27-51-51	ALL
	9		W0752	020	20		27-51-51	ALL
	10		W0752	075	22		SPARE	050-099
	10	UNUSED						150-199, 275-299
	11		W0752	076	20		SPARE	ALL
	12		W0752	099	20		27-81-31	ALL
	13		W0752	098	24		27-81-31	ALL
	14		W0752	097	24		27-81-31	ALL
	CAP	Y	W0752	077	22		SPARE	ALL
D05414P		AL1008/ /		PLUG-R WING RS/BODY				ALL
	1		W0778	001	20		27-51-31	ALL
	2		W0778	002	20		27-51-31	ALL
	3		W0778	003	20		27-81-31	ALL
	4		W0778	004	20		27-81-31	ALL
	5		W0778	005	20		27-81-31	ALL
	6		W0778	006	20		27-51-51	ALL
	7		W0778	007	20		27-51-51	ALL
	8		W0778	008	20		27-51-51	ALL
	9		W0778	009	20		27-51-51	ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						050-099, 150-156, 162-166
	12		W0778	013	20		27-81-31	157, 167-199, 275-299
	13	UNUSED						050-099, 150-156, 162-166

HOOKUP LIST

D280T132

91-21-51

Section D05400

Page 17

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05414P		AL1008/ /		PLUG-R WING RS/BODY (continued)				ALL
	13		W0778	011	20		27-81-31	157, 167-199, 275-299
	14	UNUSED						050-099, 150-156, 162-166
	14		W0778	012	20		27-81-31	157, 167-199, 275-299
D05415J		AF0119/ /		RCPT-VOR/DME L				ALL
	1		W0487	017	24		34-55-11	ALL
	2		W0487	205R	24		34-55-11	ALL
	3		W0487	205B	24		34-55-11	ALL
	4		W0487	205Z			34-55-11	ALL
	5		W0487	006	22		34-51-11	ALL
	6		W0487	202R	24		34-51-11	ALL
	7		W0487	202B	24		34-51-11	ALL
	8		W0487	202Z			34-51-11	ALL
	9		W0487	204R	24		34-51-11	ALL
	10		W0487	204B	24		34-51-11	ALL
	11		W0487	204Z			34-51-11	ALL
	12		W0487	201R	22		34-51-11	ALL
	13		W0487	201B	22		34-51-11	ALL
	14		W0487	203R	24		34-51-11	ALL
	15		W0487	203B	24		34-51-11	ALL
	16		W0487	203Z			34-51-11	ALL
	17		W0487	301R	24		23-51-12	ALL
	18		W0487	301B	24		23-51-12	ALL
	19		W0487	301Y	24		23-51-12	ALL
	20		W0487	301Z			23-51-12	ALL
	21		W0487	021	22		SPARE	ALL
	22		W0487	022	22		SPARE	ALL
	23		W0487	023	22		SPARE	ALL
	24	UNUSED						ALL
D05415P		AF0119/ /		PLUG-				ALL
	1		W0011	775	24		34-55-11	ALL
	2		W0011	516R	24		34-55-11	ALL
	3		W0011	516B	24		34-55-11	ALL
	4		W0011	516Z			34-55-11	ALL
	5		W0011	773	22		34-51-11	ALL
	6		W0011	517R	24		34-51-11	ALL
	7		W0011	517B	24		34-51-11	ALL
	8		W0011	517Z			34-51-11	ALL
	9		W0011	518R	24		34-51-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05400

Page 18

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05415P		AF0119/ /		PLUG- (continued)				ALL
	10		W0011	518B	24		34-51-11	ALL
	11		W0011	518Z			34-51-11	ALL
	12		W0011	520R	22		34-51-11	ALL
	13		W0011	520B	22		34-51-11	ALL
	14		W0011	519R	24		34-51-11	ALL
	15		W0011	519B	24		34-51-11	ALL
	16		W0011	519Z			34-51-11	ALL
	17		W0011	351R	24		23-51-12	ALL
	18		W0011	351B	24		23-51-12	ALL
	19		W0011	351Y	24		23-51-12	ALL
	20		W0011	351Z			23-51-12	ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D05416J		AF0204/ /		RCPT-P61				ALL
	1		W0066	805	20		27-13-11	ALL
	2		W0066	806	20		27-13-11	ALL
	3		W0066	53V	22		27-13-11	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W0066	811	22		27-23-11	ALL
	7		W0066	815	20		27-23-11	ALL
	8		W0066	816	20		27-23-11	ALL
	9	UNUSED						ALL
	10	UNUSED						050-099
	10	DK	W0066	736	18		33-43-11	150-199, 275-299
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18		W0066	146	24		21-58-11	ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22		W0066	53R	24		24-51-71	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05400

Page 19

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05416J		AF0204/ /		RCPT-P61 (continued)				ALL
	23		W0066	53P	24		24-51-71	ALL
	24		W0066	63W	24		21-58-11	ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27		W0066	55Z	24		24-51-52	ALL
	28	UNUSED						ALL
	29		W0066	736	20		33-43-11	050-099 150-199, 275-299
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
D05416P		AF0204/ /		PLUG-P61				ALL
	1		W0768	044	20		27-13-11	ALL
	2		W0768	045	20		27-13-11	ALL
	3		W0768	046	22		27-13-11	ALL
	4	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D05400
Page 20
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05416P		AF0204/ /		PLUG-P61 (continued)				ALL
	5	UNUSED						ALL
	6		W0768	047	22		27-23-11	ALL
	7		W0768	048	20		27-23-11	ALL
	8		W0768	049	20		27-23-11	ALL
	9	UNUSED						ALL
	10	UNUSED						050-099
	10	DL	W0768	177	18		33-43-11	150-199, 275-299
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18		W0768	136	24		21-58-11	ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22		W0768	189	24		24-51-71	ALL
	23		W0768	190	24		24-51-71	ALL
	24		W0768	138	24		21-58-11	ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27		W0768	163	24		24-51-52	ALL
	28	UNUSED						ALL
	29		W0768	177	20		33-43-11	050-099
	29	UNUSED						150-199, 275-299
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D05400

Page 21

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05416P		AF0204/ /		PLUG-P61 (continued)				ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
D05417J		AF0120/ /		RCPT-VOR/DME R				ALL
	1		W0489	019	24		34-55-21	ALL
	2		W0489	205R	24		34-55-21	ALL
	3		W0489	205B	24		34-55-21	ALL
	4		W0489	205Z			34-55-21	ALL
	5		W0489	006	22		34-51-21	ALL
	6		W0489	202R	24		34-51-21	ALL
	7		W0489	202B	24		34-51-21	ALL
	8		W0489	202Z			34-51-21	ALL
	9		W0489	204R	24		34-51-21	ALL
	10		W0489	204B	24		34-51-21	ALL
	11		W0489	204Z			34-51-21	ALL
	12		W0489	201R	22		34-51-21	ALL
	13		W0489	201B	22		34-51-21	ALL
	14		W0489	203R	24		34-51-21	ALL
	15		W0489	203B	24		34-51-21	ALL
	16		W0489	203Z			34-51-21	ALL
	17		W0489	301R	24		23-51-12	ALL
	18		W0489	301B	24		23-51-12	ALL
	19		W0489	301Y	24		23-51-12	ALL
	20		W0489	301Z			23-51-12	ALL
	21		W0489	021	22		SPARE	ALL
	22		W0489	022	22		SPARE	ALL
	23		W0489	023	22		SPARE	ALL
	24	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D05400

Page 22

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05417P		AF0120/ /		PLUG-P3				ALL
	1		W0031	775	24		34-55-21	ALL
	2		W0031	516R	24		34-55-21	ALL
	3		W0031	516B	24		34-55-21	ALL
	4		W0031	516Z			34-55-21	ALL
	5		W0031	773	22		34-51-21	ALL
	6		W0031	517R	24		34-51-21	ALL
	7		W0031	517B	24		34-51-21	ALL
	8		W0031	517Z			34-51-21	ALL
	9		W0031	518R	24		34-51-21	ALL
	10		W0031	518B	24		34-51-21	ALL
	11		W0031	518Z			34-51-21	ALL
	12		W0031	520R	22		34-51-21	ALL
	13		W0031	520B	22		34-51-21	ALL
	14		W0031	519R	24		34-51-21	ALL
	15		W0031	519B	24		34-51-21	ALL
	16		W0031	519Z			34-51-21	ALL
	17		W0031	351R	24		23-51-12	ALL
	18		W0031	351B	24		23-51-12	ALL
	19		W0031	351Y	24		23-51-12	ALL
	20		W0031	351Z			23-51-12	ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D05418J		AL1008/ /		RCPT-				ALL
	1		W0628	063	20		27-51-11	ALL
	2		W0628	062	20		27-51-11	ALL
	3		W0628	061	18		27-51-11	ALL
	4		W0628	059	18		27-51-11	ALL
	5		W0628	064	20		27-51-11	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
D05418P		AL1008/ /		PLUG-R WING RS/BODY				ALL
	1		W0774	001	20		27-51-11	ALL
	2		W0774	002	20		27-51-11	ALL
	3		W0774	003	18		27-51-11	ALL
	4		W0774	004	18		27-51-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05400

Page 23

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05418P		AL1008/ /		PLUG-R WING RS/BODY (continued)				ALL
	5		W0774	005	20		27-51-11	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
D05419J		AF0119/ /		RCPT-P1				ALL
	1		W0459	001	22		22-11-12	ALL
	2		W0459	002	22		22-11-12	ALL
	3		W0459	003	22		22-11-12	ALL
	4		W0459	201R	24		22-12-11	ALL
	5		W0459	201B	24		22-12-11	ALL
	6		W0459	201Z			22-12-11	ALL
	7		W0459	202R	24		22-13-11	ALL
	8		W0459	202B	24		22-13-11	ALL
	9		W0459	202Z			22-13-11	ALL
	10		W0459	203R	24		22-14-11	ALL
	11		W0459	203B	24		22-14-11	ALL
	12		W0459	203Z			22-14-11	ALL
	13		W0459	007	24		22-32-15	ALL
	14		W0459	008	24		22-32-15	ALL
	15	UNUSED						ALL
	16		W0459	010	24		31-51-31	ALL
	17		W0459	017	24		SPARE	ALL
	18		W0459	026	22		SPARE	ALL
	19		W0459	027	22		SPARE	ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D05419P		AF0119/ /		PLUG-				ALL
	1		W0011	762	22		22-11-12	ALL
	2		W0011	763	22		22-11-12	ALL
	3		W0011	764	22		22-11-12	ALL
	4		W0011	512R	24		22-12-11	ALL
	5		W0011	512B	24		22-12-11	ALL
	6		W0011	512Z			22-12-11	ALL
	7		W0011	513R	24		22-13-11	ALL
	8		W0011	513B	24		22-13-11	ALL
	9		W0011	513Z			22-13-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05400

Page 24

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05419P		AF0119/ /		PLUG- (continued)				ALL
	10		W0011	514R	24		22-14-11	ALL
	11		W0011	514B	24		22-14-11	ALL
	12		W0011	514Z			22-14-11	ALL
	13		W0011	767	24		22-32-15	ALL
	14		W0011	768	24		22-32-15	ALL
	15	UNUSED						ALL
	16		W0011	623	24		31-51-31	ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D05420J		AL1008/ /		RCPT-R W/W DISC				ALL
	1		W0206	026	12		27-51-11	ALL
	2		W0206	027	12		27-51-11	ALL
	3		W0206	028	12		27-51-11	ALL
	4		W0206	036	18		SPARE	ALL
	5		W0206	030	16		27-51-11	ALL
	6		W0206	031	18		27-51-11	ALL
	7		W0206	032	18		27-51-11	ALL
	8		W0206	029	16		27-51-11	ALL
D05420P		AL1008/ /		PLUG-R WING RS/BODY				ALL
	1		W0776	001	14		27-51-11	ALL
	2		W0776	002	14		27-51-11	ALL
	3		W0776	003	14		27-51-11	ALL
	4	UNUSED						ALL
	5		W0776	004	16		27-51-11	ALL
	6		W0776	005	18		27-51-11	ALL
	7		W0776	006	18		27-51-11	ALL
	8		W0776	007	16		27-51-11	ALL
D05421J		AE0307/ /		RCPT-				ALL
	1		W0645	091	24		23-32-12	050-099, 150-199
	1		W0645	091R	24		23-32-12	275-299
	2		W0645	091Z			23-32-12	050-099, 150-199

HOOKUP LIST

D280T132

91-21-51

Section D05400

Page 25

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05421J		AE0307/ /		RCPT- (continued)				ALL
	2		W0645	091B	24		23-32-12	275-299
	3		W0645	092	24		23-32-12	050-099, 150-199
	3		W0645	092R	24		23-32-12	275-299
	4		W0645	092Z			23-32-12	050-099, 150-199
	4		W0645	092B	24		23-32-12	275-299
	5		W0645	124	24		23-34-13	ALL
	6		W0645	125	24		23-34-13	ALL
	7	UNUSED						050-099
	7		W0645	126	24		23-34-13	150-199, 275-299
	8	UNUSED						050-099
	8		W0645	127	24		23-34-13	150-199, 275-299
	9		W0645	123	24		23-34-12	ALL
	10		W0645	116	24		23-34-12	ALL
	11		W0645	122	24		23-34-12	ALL
	12		W0645	903R	24		23-31-11	050-099
	12		W0645	217B	24		23-31-11	150-199
	12		W0645	FRF			23-32-12	275-299
	13		W0645	903B	24		23-31-11	050-099
	13		W0645	217R	24		23-31-11	150-199
	13	UNUSED						275-299
	14		W0645	903Z			23-31-11	050-099
	14		W0645	217Z			23-31-11	150-199
	14	UNUSED						275-299
	15		W0645	901	24		23-31-11	050-099
	15		W0645	161	24		23-31-11	150-199
	15	UNUSED						275-299
	16		W0645	902	24		23-31-11	050-099
	16		W0645	160	24		23-31-11	150-199
	16	UNUSED						275-299
	17		W0645	169	24		23-31-13	050, 162-166
	17		W0645	169	24		23-31-14	051-099, 150-157, 167-199
	17	UNUSED						275-299
	18		W0645	162	24		23-31-13	050-099, 150-199
	18	UNUSED						275-299
	19		W0645	616	22		23-32-12	050-099, 150-199
	19	UNUSED						275-299
	20		W0645	164	24		23-31-13	050-099, 150-199
	20	UNUSED						275-299
	21		W0645	165	24		23-31-13	050-099, 150-199
	21	UNUSED						275-299

HOOKUP LIST

D280T132

91-21-51

Section D05400

Page 26

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05421J		AE0307/ /		RCPT- (continued)				ALL
	22		W0645	166	24		23-31-13	050-099, 150-199 275-299
	22	UNUSED						275-299
	23	UNUSED						ALL
	24		W0645	212R	24		23-22-12	050-099, 150-199, 275-278 280-299
	24	UNUSED						280-299
	25		W0645	212B	24		23-22-12	050-099, 150-199, 275-278 280-299
	25	UNUSED						280-299
	26		W0645	212Z			23-22-12	050-099, 150-199, 275-278 280-299
	26	UNUSED						280-299
	27		W0645	213R	24		23-22-12	050-099, 150-199, 275-278 280-299
	27	UNUSED						280-299
	28		W0645	213B	24		23-22-12	050-099, 150-199, 275-278 280-299
	28	UNUSED						280-299
	29		W0645	213Z			23-22-12	050-099, 150-199, 275-278 280-299
	29	UNUSED						280-299
	30		W0645	214R	20		23-22-12	050-099, 150-199, 275-278 280-299
	30	UNUSED						280-299
	31		W0645	214B	20		23-22-12	050-099, 150-199, 275-278 280-299
	31	UNUSED						280-299
			W0645	091Z			23-32-12	275-299
			W0645	092Z			23-32-12	275-299
			W0645	FRF			23-32-12	275-299
D05421P		AE0307/ /		PLUG				ALL
	1		W0149	152	24		23-32-12	050-099, 150-199 275-299
	1		W0149	152R	24		23-32-12	275-299
	2		W0149	152Z			23-32-12	050-099, 150-199 275-299
	2		W0149	152B	24		23-32-12	275-299
	3		W0149	153	24		23-32-12	050-099, 150-199 275-299
	3		W0149	153R	24		23-32-12	275-299
	4		W0149	153Z			23-32-12	050-099, 150-199 275-299
	4		W0149	153B	24		23-32-12	275-299
	5		W0149	779	24		23-34-13	ALL
	6		W0149	046	24		23-34-13	050-099
	6		W0149	780	24		23-34-13	150-199, 275-299 050-099
	7	UNUSED						050-099
	7		W0149	781	24		23-34-13	150-199, 275-299 050-099
	8	UNUSED						050-099
	8		W0149	782	24		23-34-13	150-199, 275-299
	9		W0149	776	24		23-34-12	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05400

Page 27

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05421P		AE0307/ /		PLUG (continued)				ALL
	10		W0149	777	24		23-34-12	ALL
	11		W0149	778	24		23-34-12	ALL
	12		W0149	512	20		23-31-11	050-099, 150-199
	12		W0149	FRM			23-32-12	275-299
	13		W0149	511	24		23-31-11	050-099, 150-199
	13	UNUSED						275-299
	14		W0149	511Z			23-31-11	050-099, 150-199
	14	UNUSED						275-299
	15		W0149	514	24		23-31-11	050-099, 150-199
	15	UNUSED						275-299
	16		W0149	513	24		23-31-11	050-099, 150-199
	16	UNUSED						275-299
	17		W0149	905	24		23-31-13	050
	17		W0149	548	24		23-31-14	051-099, 151-153
	17	2	W0149	905	24		23-31-13	150, 154-199
	17	UNUSED						275-299
	18		W0149	9002	24		23-31-13	050-099, 150-199
	18	UNUSED						275-299
	19		W0149	612	22		23-32-12	050-099, 150-199
	19	UNUSED						275-299
	20		W0149	534	24		23-31-13	050-099, 150-199
	20	UNUSED						275-299
	21		W0149	538	24		23-31-13	050-099, 150-199
	21	UNUSED						275-299
	22		W0149	543	24		23-31-13	050-099, 150-199
	22	UNUSED						275-299
	23	UNUSED						ALL
	24		W0149	271R	24		23-22-12	050-099, 150-199, 275-278
	24	UNUSED						280-299
	25		W0149	271B	24		23-22-12	050-099, 150-199, 275-278
	25	UNUSED						280-299
	26		W0149	271Z			23-22-12	050-099, 150-199, 275-278
	26	UNUSED						280-299
	27		W0149	272R	24		23-22-12	050-099, 150-199, 275-278
	27	UNUSED						280-299
	28		W0149	272B	24		23-22-12	050-099, 150-199, 275-278
	28	UNUSED						280-299
	29		W0149	272Z			23-22-12	050-099, 150-199, 275-278
	29	UNUSED						280-299
	30		W0149	273R	22		23-22-12	050-099, 150-199, 275-278

HOOKUP LIST
D280T132

91-21-51
Section D05400
Page 28
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05421P		AE0307/ /		PLUG (continued)				ALL
	30	UNUSED						280-299
	31		W0149	273B	22		23-22-12	050-099, 150-199, 275-278
	31	UNUSED						280-299
	CAP	Y	W0149	548	24		23-31-14	050, 150, 154-199
			W0149	152Z			23-32-12	275-299
			W0149	153Z			23-32-12	275-299
			W0149	FRM			23-32-12	275-299
D05423J		AF0120/ /		RCPT-P3				ALL
	1		W0463	001	22		22-11-22	ALL
	2		W0463	002	22		22-11-22	ALL
	3		W0463	003	22		22-11-22	ALL
	4		W0463	201R	24		22-12-21	ALL
	5		W0463	201B	24		22-12-21	ALL
	6		W0463	201Z			22-12-21	ALL
	7		W0463	202R	24		22-13-21	ALL
	8		W0463	202B	24		22-13-21	ALL
	9		W0463	202Z			22-13-21	ALL
	10		W0463	203R	24		22-14-21	ALL
	11		W0463	203B	24		22-14-21	ALL
	12		W0463	203Z			22-14-21	ALL
	13		W0463	009	22		SPARE	ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16		W0463	010	22		SPARE	ALL
	17		W0463	011	22		SPARE	ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D05423P		AF0120/ /		PLUG				ALL
	1		W0031	762	22		22-11-22	ALL
	2		W0031	763	22		22-11-22	ALL
	3		W0031	764	22		22-11-22	ALL
	4		W0031	512R	24		22-12-21	ALL
	5		W0031	512B	24		22-12-21	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05400

Page 29

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05423P		AF0120/ /		PLUG (continued)				ALL
	6		W0031	512Z			22-12-21	ALL
	7		W0031	513R	24		22-13-21	ALL
	8		W0031	513B	24		22-13-21	ALL
	9		W0031	513Z			22-13-21	ALL
	10		W0031	514R	24		22-14-21	ALL
	11		W0031	514B	24		22-14-21	ALL
	12		W0031	514Z			22-14-21	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D05425J		AE0322/ /		RCPT-FMC L,CDU				ALL
	1		W0519	204R	24		31-35-11	ALL
	2		W0519	204B	24		31-35-11	ALL
	3		W0519	204Z			31-35-11	ALL
	4		W0519	202Z			34-61-11	ALL
	5		W0519	202R	24		34-61-11	ALL
	6		W0519	202B	24		34-61-11	ALL
	7		W0519	209R	24		34-61-26	ALL
	8		W0519	209B	24		34-61-26	ALL
	9		W0519	209Z			34-61-26	ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D05425P		AE0322/ /		PLUG-E2-2				ALL
	1		W0143	226R	24		31-35-11	ALL
	2		W0143	226B	24		31-35-11	ALL
	3		W0143	226Z			31-35-11	ALL
	4		W0143	201Z			34-61-11	ALL
	5		W0143	201R	24		34-61-11	ALL

HOOKUP LIST
D280T132

91-21-51
Section D05400
Page 30
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05425P		AE0322/ /		PLUG-E2-2 (continued)				ALL
	6		W0143	201B	24		34-61-11	ALL
	7		W0143	237R	24		34-61-26	ALL
	8		W0143	237B	24		34-61-26	ALL
	9		W0143	237Z			34-61-26	ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D05427J		AE0306/ /		RCPT-FMC R,CDU				ALL
	1		W0517	209R	24		34-61-16	ALL
	2		W0517	209B	24		34-61-16	ALL
	3		W0517	209Z			34-61-16	ALL
	4		W0517	202Z			34-61-11	ALL
	5		W0517	202R	24		34-61-11	ALL
	6		W0517	202B	24		34-61-11	ALL
	7		W0517	002	22		31-31-26	ALL
	8		W0517	101	24		34-61-16	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D05427P		AE0306/ /		PLUG-E2-3				ALL
	1		W0135	599R	24		34-61-16	ALL
	2		W0135	599B	24		34-61-16	ALL
	3		W0135	599Z			34-61-16	ALL
	4		W0135	840Z			34-61-11	ALL
	5		W0135	840R	24		34-61-11	ALL
	6		W0135	840B	24		34-61-11	ALL
	7		W0135	841	24		31-31-26	ALL
	8		W0135	832	24		34-61-16	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D05428J		AE0317/ /		RCPT-E1-2				ALL
	1		W0764	201B	24		78-34-21	ALL
	2		W0764	201R	24		78-34-21	ALL
	3		W0764	202B	24		78-34-21	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05400

Page 31

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05428J		AE0317/ /		RCPT-E1-2 (continued)				ALL
	4		W0764	202R	24		78-34-21	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12		W0764	801	22		SPARE	ALL
	13		W0764	803	22		SPARE	ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17		W0764	503	24		78-36-11	ALL
	18		W0764	504	24		78-36-11	ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	CAP	Y	W0764	072	24		SPARE	150-199
D05428P		AE0317/ /		PLUG-E1-2				ALL
	1		W1100	221B	24		78-34-21	ALL
	2		W1100	221R	24		78-34-21	ALL
	3		W1100	222B	24		78-34-21	ALL
	4		W1100	222R	24		78-34-21	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D05400
Page 32
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05428P		AE0317/ /		PLUG-E1-2 (continued)				ALL
	17		W1100	501	24		78-36-11	ALL
	18		W1100	502	24		78-36-11	ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	DED		W1100	501Z			78-36-11	ALL
	DED		W1100	502Z			78-36-11	ALL
D05429J		0900/260/R085		RCPT-				050-099
D05429J		690/260/R085		RCPT-				150-199
D05429J		580/260/R085		RCPT-				275-278
	1		W1379	303Y	24		23-34-15	050-099, 150-199
	1		W1379	015	24		23-34-15	275-278
	2	FL	W1379	013	16		23-34-15	050-099, 150-199, 275-278
	3	FL	W1379	014	16		23-34-15	050-099, 150-199, 275-278
	4		W1379	303B	24		23-34-15	050-099, 150-199
	4		W1379	016	24		23-34-15	275-278
	5		W1379	303R	24		23-34-15	050-099, 150-199, 275-278
D05430J		AE0317/ /		RCPT-E1-2				ALL
	1		W0766	022	24		78-36-21	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W0766	01TR	20		77-31-11	050-099, 155-199, 277-299
	4		W0766	204R	20		77-31-11	150-154, 275-276
	5		W0766	01TW	20		77-31-11	050-099, 155-199, 277-299
	5		W0766	204W	20		77-31-11	150-154, 275-276
	6		W0766	01TI			77-31-11	050-099, 155-199, 277-299
	6		W0766	204Z			77-31-11	150-154, 275-276
	7		W0766	205B	24		78-36-21	ALL
	8		W0766	205R	24		78-36-21	ALL
	9		W0766	206B	24		78-36-21	ALL
	10		W0766	206R	24		78-36-21	ALL
	11		W0766	207B	24		78-36-21	ALL
	12		W0766	207R	24		78-36-21	ALL
	13		W0766	208B	24		78-36-21	ALL
	14		W0766	208R	24		78-36-21	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05400

Page 33

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05430J		AE0317/ /		RCPT-E1-2 (continued)				ALL
	15		W0766	102	24		31-31-26	ALL
	16	UNUSED						050-099, 275-299
	16		W0766	503	22		SPARE	150-199
	17	UNUSED						050-099, 275-299
	17		W0766	803	22		SPARE	150-199
	18	UNUSED						050-099
	18		W0766	501	22		SPARE	150-199, 275-299
	19	UNUSED						ALL
	20	UNUSED						050-099, 275-299
	20		W0766	502	22		SPARE	150-199
	21		W0766	079	24		32-61-14	ALL
	22		W0766	080	24		32-61-14	ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25		W0766	801	24		32-61-14	ALL
	26	UNUSED						050-099
	26		W0766	306R	24		SPARE	150-199, 275-299
	27	UNUSED						050-099
	27		W0766	306B	24		SPARE	150-199, 275-299
	28	UNUSED						050-099
	28		W0766	306Y	24		SPARE	150-199, 275-299
	29	UNUSED						050-099
	29		W0766	305R	24		SPARE	150-199, 275-299
	30	UNUSED						050-099
	30		W0766	305B	24		SPARE	150-199, 275-299
	31	UNUSED						050-099
	31		W0766	305Y	24		SPARE	150-199, 275-299
	= CC	D	W0766	01TO			77-31-11	050-099, 155-199
	= CC	M	W0766	01TO			77-31-11	277-299
	DED		W0766	079Z			32-61-14	ALL
D05430P		AE0317/ /		PLUG-E1-2				ALL
	1		W1100	051	24		78-36-21	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W1100	220R	20		77-31-11	ALL
	5		W1100	220W	20		77-31-11	ALL
	6		W1100	220Z			77-31-11	ALL
	7		W1100	226B	24		78-36-21	ALL
	8		W1100	226R	24		78-36-21	ALL

HOOKUP LIST
D280T132

91-21-51
Section D05400
Page 34
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05430P		AE0317/ /		PLUG-E1-2 (continued)				ALL
	9		W1100	225B	24		78-36-21	ALL
	10		W1100	225R	24		78-36-21	ALL
	11		W1100	223B	24		78-36-21	ALL
	12		W1100	223R	24		78-36-21	ALL
	13		W1100	224B	24		78-36-21	ALL
	14		W1100	224R	24		78-36-21	ALL
	15		W1100	507	24		31-31-26	ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21		W1100	124	24		32-61-14	ALL
	22		W1100	125	24		32-61-14	ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25		W1100	123	24		32-61-14	ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	DED		W1100	125Z			32-61-14	ALL
D05431J		AE0209/ /		RCPT-P36				ALL
	1		W0176	216R	24		73-21-14	ALL
	2		W0176	216B	24		73-21-14	ALL
	3		W0176	216Z			73-21-14	ALL
	4	UNUSED						050-099, 150-199
	4		W0176	911Z			34-53-11	275-299
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						050-099, 150-199
	7		W0176	911R	24		34-53-11	275-299
	8	UNUSED						050-099, 150-199
	8		W0176	911B	24		34-53-11	275-299
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D05400

Page 35

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05431J		AE0209/ /		RCPT-P36 (continued)				ALL
	12	UNUSED						ALL
	13		W0176	20RB	24		34-45-14	ALL
	14		W0176	20RR	24		34-45-14	ALL
	15		W0176	20RZ			34-45-14	ALL
	16	UNUSED						ALL
	17		W0176	73K	22		34-45-13	050-099, 150-152, 155-199, 277-299
	17	UNUSED						153-154, 275-276
	18		W0176	199B	20		34-22-36	ALL
	19	UNUSED						ALL
	20		W0176	200R	24		21-61-71	ALL
	21		W0176	200B	24		21-61-71	ALL
	22		W0176	10Q	24		31-31-21	ALL
	23	UNUSED						050-099, 150-152, 155-199, 275-299
	23		W0176	73K	22		34-45-13	153-154
	24		W0176	10R	24		31-31-21	ALL
D05431P		AE0209/ /		PLUG-P36				ALL
	1		W0471	215R	24		73-21-14	ALL
	2		W0471	215B	24		73-21-14	ALL
	3		W0471	215Z			73-21-14	ALL
	4	UNUSED						050-099, 150-199
	4		W0471	904Z			34-53-11	275-299
	5		W0471	036	22		SPARE	ALL
	6		W0471	033	20		SPARE	ALL
	7	UNUSED						050-099, 150-199
	7		W0471	904R	24		34-53-11	275-299
	8	UNUSED						050-099, 150-199
	8		W0471	904B	24		34-53-11	275-299
	9	UNUSED						050-099, 150-199
	9		W0471	201R	22		SPARE	275-299
	10	UNUSED						050-099, 150-199
	10		W0471	201B	22		SPARE	275-299
	11	UNUSED						050-099, 150-199
	11		W0471	202R	24		SPARE	275-299
	12	UNUSED						050-099, 150-199
	12		W0471	202B	24		SPARE	275-299
	13		W0471	245B	24		34-45-14	050-099, 150-199, 277-299
	13		W0471	047	22		SPARE	275-276
	14		W0471	245R	24		34-45-14	050-099, 150-199, 277-299
	14		W0471	216R	22		SPARE	275-276

HOOKUP LIST
D280T132

91-21-51
Section D05400
Page 36
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05431P		AE0209/ /		PLUG-P36 (continued)				ALL
	15		W0471	245Z			34-45-14	050-099, 150-199, 277-299
	15		W0471	216B	22		SPARE	275-276
	16	UNUSED						050-099, 155-199, 277-299
	16		W0471	217R	24		SPARE	150-154, 275-276
	17		W0471	110	22		34-45-13	050-099, 150-152, 155-199, 277-299
	17		W0471	217B	24		SPARE	153-154, 275-276
	18		W0471	086	22		34-22-36	ALL
	19		W0471	066	24		SPARE	ALL
	20		W0471	239R	24		21-61-71	ALL
	21		W0471	239B	24		21-61-71	ALL
	22		W0471	062	24		31-31-21	ALL
	23	UNUSED						050-099, 150-152, 155-199, 275-299
	23		W0471	110	22		34-45-13	153-154
	24		W0471	064	24		31-31-21	ALL
	25	UNUSED						150-154, 162-164
	26	UNUSED						150-154, 162-164
	27	UNUSED						150-154, 162-164
	28	UNUSED						150-154, 162-164
	29	UNUSED						150-154, 162-164
	30	UNUSED						150-154, 162-164
	31	UNUSED						150-154, 162-164
	32	UNUSED						150-154, 162-164
	33	UNUSED						150-154, 162-164
	34	UNUSED						150-154, 162-164
	35	UNUSED						150-154, 162-164
	36	UNUSED						150-154, 162-164
	37	UNUSED						150-154, 162-164
	38	UNUSED						150-154, 162-164
	39	UNUSED						150-154, 162-164
	40	UNUSED						150-154, 162-164
	41	UNUSED						150-154, 162-164
	42	UNUSED						150-154, 162-164
	43	UNUSED						150-154, 162-164
	44	UNUSED						150-154, 162-164
	45	UNUSED						150-154, 162-164
	46	UNUSED						150-154, 162-164
	47	UNUSED						150-154, 162-164
	48	UNUSED						150-154, 162-164
	49	UNUSED						150-154, 162-164
	50	UNUSED						150-154, 162-164

HOOKUP LIST

D280T132

91-21-51

Section D05400

Page 37

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05431P		AE0209/ /		PLUG-P36 (continued)				ALL
	51	UNUSED						150-154, 162-164
	52	UNUSED						150-154, 162-164
	53	UNUSED						150-154, 162-164
	54	UNUSED						150-154, 162-164
	55	UNUSED						150-154, 162-164
	CAP	Y	W0471	047	22		SPARE	150-152
	CAP	Y	W0471	216B	22		SPARE	150-152
	CAP	Y	W0471	216R	22		SPARE	150-152
	CAP	Y	W0471	217B	24		SPARE	150-152
D05433J		AE0209/ /		RCPT-P36				ALL
	1		W0176	046	22		22-14-31	ALL
	2		W0176	047	22		22-14-31	ALL
	3		W0176	079	24		34-46-12	ALL
	4		W0176	19UR	24		31-35-14	050-099, 150-199, 275-276, 278-299
	4	UNUSED						277
	5		W0176	19UB	24		31-35-14	050-099, 150-199, 275-276, 278-299
	5	UNUSED						277
	6		W0176	19UZ			31-35-14	050-099, 150-199, 275-276, 278-299
	6	UNUSED						277
	7		W0176	509	24		22-32-15	ALL
	8		W0176	510	24		22-32-15	ALL
	9	UNUSED						050-099, 162-199, 277-299
	9		W0176	285Z			77-12-11	150-157, 275-276
	10		W0176	707	24		32-42-11	ALL
	11	UNUSED						050-099, 162-199, 277-299
	11		W0176	285R	24		77-12-11	150-157, 275-276
	12	UNUSED						050-099, 162-199, 277-299
	12		W0176	285B	24		77-12-11	150-157, 275-276
	13		W0176	237R	24		73-21-14	ALL
	14		W0176	237B	24		73-21-14	ALL
	15		W0176	237Z			73-21-14	ALL
	16		W0176	654	24		34-12-12	ALL
	17		W0176	655	24		34-12-12	ALL
	18		W0176	09E	22		31-31-11	ALL
	19		W0176	99B	22		34-22-16	ALL
	20		W0176	82J	22		78-36-11	ALL
	21		W0176	787	24		34-61-14	ALL
	22		W0176	709	24		34-53-11	ALL
	23		W0176	225R	24		32-42-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05400

Page 38

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05433J		AE0209/ /		RCPT-P36 (continued)				ALL
	24		W0176	225B	24		32-42-11	ALL
	25		W0176	225Z			32-42-11	ALL
	26	UNUSED						ALL
	27		W0176	258R	24		73-21-14	ALL
	28		W0176	258B	24		73-21-14	ALL
	29		W0176	258Z			73-21-14	ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32		W0176	08I	24		31-31-13	ALL
	33		W0176	08H	24		31-31-13	ALL
	34		W0176	07G	20		27-32-31	ALL
	35		W0176	711	24		27-32-11	ALL
	36		W0176	077	24		34-55-11	ALL
	37		W0176	82K	22		78-36-11	ALL
	38	UNUSED						ALL
	39		W0176	70J	20		38-32-11	050-099, 155-199, 277-299
	39	UNUSED						150-154, 275
	39		W0176	70J	20		SPARE	276
	40		W0176	15U	24		21-61-71	ALL
	41		W0176	04S	22		27-09-13	ALL
	42		W0176	04T	22		27-09-13	ALL
	43		W0176	160	22		31-31-11	ALL
	44		W0176	156	22		31-31-11	ALL
	45		W0176	15V	24		21-61-71	ALL
	46		W0176	220R	24		27-32-11	ALL
	47		W0176	220B	24		27-32-11	ALL
	48		W0176	84H	22		78-36-11	ALL
	49		W0176	82P	22		78-36-11	ALL
	50		W0176	82M	22		78-36-11	ALL
	51	FL	W0176	07E	16		27-32-31	ALL
	52		W0176	220Z			27-32-11	ALL
	53	UNUSED						ALL
	54		W0176	15W	24		21-61-71	ALL
	55	FL	W0176	07F	16		27-32-31	ALL
D05433P		AE0209/ /		PLUG-P36				ALL
	1		W0471	001	22		22-14-31	ALL
	2		W0471	002	22		22-14-31	ALL
	3		W0471	003	22		34-46-12	ALL
	4		W0471	244R	24		31-35-14	050-099, 150-199, 275-276, 278-299

HOOKUP LIST

D280T132

91-21-51

Section D05400

Page 39

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05433P		AE0209/ /		PLUG-P36 (continued)				ALL
	4	UNUSED						277
	5		W0471	244B	24		31-35-14	050-099, 150-199, 275-276, 278-299
	5	UNUSED						277
	6		W0471	244Z			31-35-14	050-099, 150-199, 275-276, 278-299
	6	UNUSED						277
	7		W0471	007	24		22-32-15	ALL
	8		W0471	008	24		22-32-15	ALL
	9		W0471	228Z			SPARE	050-099, 162-199, 280-299
	9		W0471	228Z			77-12-11	150-157, 275-276
	9	UNUSED						277-278
	10		W0471	050	24		32-42-11	ALL
	11		W0471	228R	24		SPARE	050-099, 162-199, 280-299
	11		W0471	228R	24		77-12-11	150-157, 275-276
	11	UNUSED						277-278
	12		W0471	228B	24		SPARE	050-099, 162-199, 280-299
	12		W0471	228B	24		77-12-11	150-157, 275-276
	12	UNUSED						277-278
	13		W0471	224R	24		73-21-14	ALL
	14		W0471	224B	24		73-21-14	ALL
	15		W0471	224Z			73-21-14	ALL
	16		W0471	012	24		34-12-12	ALL
	17		W0471	013	24		34-12-12	ALL
	18		W0471	018	22		31-31-11	ALL
	19		W0471	085	22		34-22-16	ALL
	20		W0471	117	22		78-36-11	ALL
	21		W0471	022	24		34-61-14	ALL
	22		W0471	023	24		34-53-11	ALL
	23		W0471	218R	24		32-42-11	ALL
	24		W0471	218B	24		32-42-11	ALL
	25		W0471	218Z			32-42-11	ALL
	26	UNUSED						ALL
	27		W0471	214R	24		73-21-14	ALL
	28		W0471	214B	24		73-21-14	ALL
	29		W0471	214Z			73-21-14	ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32		W0471	078	24		31-31-13	ALL
	33		W0471	079	24		31-31-13	ALL
	34		W0471	072	20		27-32-31	ALL
	35		W0471	040	24		27-32-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05400

Page 40

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05433P		AE0209/ /		PLUG-P36 (continued)				ALL
	36		W0471	041	24		34-55-11	ALL
	37		W0471	118	22		78-36-11	ALL
	38		W0471	067	24		SPARE	050-099, 150-199 275-299
	38	UNUSED						
	39		W0471	045	20		38-32-11	050-099, 150-199, 277-299
	39		W0471	045	22		SPARE	275
	39		W0471	045	20		SPARE	276
	40		W0471	109	24		21-61-71	050-099
	40		W0471	094	24		21-61-71	150-199, 275-299
	41		W0471	068	22		27-09-13	ALL
	42		W0471	069	22		27-09-13	ALL
	43		W0471	026	22		31-31-11	ALL
	44		W0471	027	22		31-31-11	ALL
	45		W0471	095	24		21-61-71	ALL
	46		W0471	223R	24		27-32-11	ALL
	47		W0471	223B	24		27-32-11	ALL
	48		W0471	119	22		78-36-11	ALL
	49		W0471	120	22		78-36-11	ALL
	50		W0471	121	22		78-36-11	ALL
	51	FM	W0471	070	16		27-32-31	ALL
	52		W0471	223Z			27-32-11	ALL
	53		W0471	043	20		SPARE	ALL
	54		W0471	096	24		21-61-71	ALL
	55	FM	W0471	071	16		27-32-31	ALL
D05434J		AE0305/ /		RCPT-E1-2				ALL
	1		W0754	201B	24		27-88-22	ALL
	2		W0754	201R	24		27-88-22	ALL
	3		W0754	212B	24		27-88-22	ALL
	4		W0754	212R	24		27-88-22	ALL
	5		W0754	203B	24		27-88-22	ALL
	6		W0754	203R	24		27-88-22	ALL
	7		W0754	204B	24		27-88-22	ALL
	8		W0754	204R	24		27-88-22	ALL
	9		W0754	214B	24		27-88-22	ALL
	10		W0754	214R	24		27-88-22	ALL
	11		W0754	206B	24		27-88-22	ALL
	12		W0754	206R	24		27-88-22	ALL
	13		W0754	207B	24		27-88-22	ALL
	14		W0754	207R	24		27-88-22	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05400

Page 41

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05434J		AE0305/ /		RCPT-E1-2 (continued)				ALL
	15		W0754	208B	24		27-88-22	ALL
	16		W0754	208R	24		27-88-22	ALL
	17		W0754	209B	24		27-88-22	ALL
	18		W0754	209R	24		27-88-22	ALL
	19		W0754	217B	24		27-88-22	ALL
	20		W0754	217R	24		27-88-22	ALL
	21		W0754	211B	24		27-88-22	ALL
	22		W0754	211R	24		27-88-22	ALL
	23		W0754	202B	22		SPARE	ALL
	24		W0754	202R	22		SPARE	ALL
	25		W0754	216B	24		27-88-22	ALL
	26		W0754	216R	24		27-88-22	ALL
	27		W0754	801	22		SPARE	ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
D05434P		AE0305/ /		PLUG-E1-2				ALL
	1		W1092	228B	24		27-88-22	ALL
	2		W1092	228R	24		27-88-22	ALL
	3		W1092	226B	24		27-88-22	ALL
	4		W1092	226R	24		27-88-22	ALL
	5		W1092	229B	24		27-88-22	ALL
	6		W1092	229R	24		27-88-22	ALL
	7		W1092	230B	24		27-88-22	ALL
	8		W1092	230R	24		27-88-22	ALL
	9		W1092	227B	24		27-88-22	ALL
	10		W1092	227R	24		27-88-22	ALL
	11		W1092	231B	24		27-88-22	ALL
	12		W1092	231R	24		27-88-22	ALL
	13		W1092	232B	24		27-88-22	ALL
	14		W1092	232R	24		27-88-22	ALL
	15		W1092	223B	24		27-88-22	ALL
	16		W1092	223R	24		27-88-22	ALL
	17		W1092	224B	24		27-88-22	ALL
	18		W1092	224R	24		27-88-22	ALL
	19		W1092	221B	24		27-88-22	ALL
	20		W1092	221R	24		27-88-22	ALL
	21		W1092	225B	24		27-88-22	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05400

Page 42

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05434P		AE0305/ /		PLUG-E1-2 (continued)				ALL
	22		W1092	225R	24		27-88-22	ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25		W1092	222B	24		27-88-22	ALL
	26		W1092	222R	24		27-88-22	ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
D05435J		AE0218/ /		RCPT-P37				ALL
	1		W0192	530	24		31-31-11	ALL
	2		W0192	529	24		31-31-11	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W0192	01Q	24		34-12-22	ALL
	6		W0192	01S	24		34-12-22	ALL
	7		W0192	14M	22		31-31-11	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11		W0192	640	24		31-51-21	ALL
	12		W0192	642	24		31-51-33	ALL
	13		W0192	106	22		34-12-21	ALL
	14		W0192	107	22		34-12-21	ALL
	15		W0192	108	22		34-12-21	ALL
	16		W0192	10L	24		34-12-22	ALL
	17		W0192	119	24		34-12-22	ALL
	18		W0192	24NR	24		31-35-15	050-099, 150-199, 275-276, 278-299
	18	UNUSED						277
	19		W0192	24NB	24		31-35-15	050-099, 150-199, 275-276, 278-299
	19	UNUSED						277
	20		W0192	24NZ			31-35-15	050-099, 150-199, 275-276, 278-299
	20	UNUSED						277
	21		W0192	01M	24		34-61-24	ALL
	22		W0192	636	24		34-53-21	ALL
	23	UNUSED						ALL
	24		W0192	01D	22		31-31-11	ALL
	25		W0192	122	22		31-31-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05400

Page 43

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05435J		AE0218/ /		RCPT-P37 (continued)				ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28		W0192	204B	24		31-31-12	ALL
	29		W0192	204R	24		31-31-12	ALL
	30		W0192	098	24		31-31-12	ALL
	31		W0192	099	24		31-31-12	ALL
	32		W0192	078	24		31-31-22	ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36		W0192	204Z			31-31-12	ALL
	37		W0192	583	24		34-55-21	ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40		W0192	237R	24		32-42-11	ALL
	41		W0192	237B	24		32-42-11	ALL
	42		W0192	237Z			32-42-11	ALL
	43		W0192	855	24		32-42-11	ALL
	44		W0192	248Z			27-32-21	ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48		W0192	113	20		27-32-31	ALL
	49		W0192	248R	24		27-32-21	ALL
	50		W0192	248B	24		27-32-21	ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
	DED		W0192	113Z			27-32-31	ALL
D05435P		AE0218/ /		PLUG-P37				ALL
	1		W0473	050	24		31-31-11	ALL
	2		W0473	051	24		31-31-11	ALL
	3		W0473	003	22		SPARE	ALL
	4		W0473	014	24		SPARE	ALL
	5		W0473	015	24		34-12-22	ALL
	6		W0473	016	24		34-12-22	ALL
	7		W0473	018	22		31-31-11	ALL

HOOKUP LIST
D280T132

91-21-51
Section D05400
Page 44
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05435P		AE0218/ /		PLUG-P37 (continued)				ALL
	8		W0473	043	24		SPARE	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11		W0473	054	24		31-51-21	ALL
	12		W0473	055	24		31-51-33	ALL
	13		W0473	009	22		34-12-21	ALL
	14		W0473	010	22		34-12-21	ALL
	15		W0473	011	22		34-12-21	ALL
	16		W0473	012	24		34-12-22	ALL
	17		W0473	013	24		34-12-22	ALL
	18		W0473	230R	24		31-35-15	050-099, 150-199, 275-276, 278-299
	18	UNUSED						277
	19		W0473	230B	24		31-35-15	050-099, 150-199, 275-276, 278-299
	19	UNUSED						277
	20		W0473	230Z			31-35-15	050-099, 150-199, 275-276, 278-299
	20	UNUSED						277
	21		W0473	022	24		34-61-24	ALL
	22		W0473	023	24		34-53-21	ALL
	23		W0473	039	22		SPARE	ALL
	24		W0473	024	22		31-31-11	ALL
	25		W0473	025	22		31-31-11	ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28		W0473	203B	24		31-31-12	ALL
	29		W0473	203R	24		31-31-12	ALL
	30		W0473	037	24		31-31-12	ALL
	31		W0473	038	24		31-31-12	ALL
	32		W0473	046	24		31-31-22	ALL
	33	UNUSED						050-099
	33		W0473	214R	24		31-31-12	150-199, 275-299
	34	UNUSED						050-099
	34		W0473	214B	24		31-31-12	150-199, 275-299
	35	UNUSED						050-099
	35		W0473	214Z			31-31-12	150-199, 275-299
	36		W0473	203Z			31-31-12	ALL
	37		W0473	040	24		34-55-21	ALL
	38	UNUSED						ALL
	39	UNUSED						050-099
	39		W0473	029	24		31-31-12	150-199, 275-299
	40		W0473	210R	24		32-42-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05400

Page 45

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05435P		AE0218/ /		PLUG-P37 (continued)				ALL
	41		W0473	210B	24		32-42-11	ALL
	42		W0473	210Z			32-42-11	ALL
	43		W0473	008	24		32-42-11	ALL
	44		W0473	215Z			27-32-21	ALL
	45	UNUSED						ALL
	46	UNUSED						050-099
	46		W0473	031	24		31-31-12	150-199, 275-299
	47		W0473	033	24		SPARE	ALL
	48		W0473	061	20		27-32-31	ALL
	49		W0473	215R	24		27-32-21	ALL
	50		W0473	215B	24		27-32-21	ALL
	51	UNUSED						050-099
	51		W0473	216R	24		31-31-12	150-199, 275-299
	52	UNUSED						050-099
	52		W0473	216B	24		31-31-12	150-199, 275-299
	53	UNUSED						050-099
	53		W0473	216Z			31-31-12	150-199, 275-299
	54		W0473	056	22		SPARE	ALL
	55		W0473	057	22		SPARE	ALL
	DED		W0473	061Z			27-32-31	ALL
D05436J		AP1501/ /		RCPT-TAIL/BODY				ALL
	1		W0500	001	20		27-28-11	ALL
	2		W0500	002	20		27-28-11	ALL
	3		W0500	003	20		27-28-11	ALL
	4	UNUSED						050-099, 150-154, 162-165, 275-276
	4		W0500	017	20		27-28-11	155-157, 166-199, 277-299
	5	UNUSED						ALL
	6		W0500	011	20		27-21-11	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9		W0500	015	20		27-28-13	ALL
	10	UNUSED						ALL
	11		W0500	201R	20		27-28-13	ALL
	12		W0500	201B	20		27-28-13	ALL
D05436P		AP1501/ /		PLUG-TAIL/BODY				ALL
	1		W0748	001	24		27-28-11	ALL
	2		W0748	002	24		27-28-11	ALL
	3		W0748	003	24		27-28-11	ALL

HOOKUP LIST
D280T132

91-21-51
Section D05400
Page 46
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05436P		AP1501/ /		PLUG-TAIL/BODY (continued)				ALL
	4	UNUSED						050-099, 150-154, 162-165, 275-276
	4		W0748	013	24		27-28-11	155-157, 166-199, 277-299
	5	UNUSED						ALL
	6		W0748	006	20		27-21-11	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9		W0748	009	24		27-28-13	ALL
	10		W0748	010	22		SPARE	050-099
	10	UNUSED						150-199, 275-299
	11		W0748	201R	24		27-28-13	ALL
	12		W0748	201B	24		27-28-13	ALL
D05437J		AE0218/ /		RCPT-P37				ALL
	1		W0192	513	22		22-14-31	ALL
	2		W0192	514	22		22-14-31	ALL
	3		W0192	644	24		31-51-41	ALL
	4		W0192	90B	22		34-22-26	ALL
	5		W0192	602	24		27-32-21	ALL
	6		W0192	21F	24		77-35-11	ALL
	7		W0192	01E	24		34-12-22	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12		W0192	51H	20		38-32-11	050-099, 155-199, 277-299
	12	UNUSED						150-154, 275
	12		W0192	51H	20		SPARE	276
	13	UNUSED						ALL
	14	UNUSED						ALL
	15		W0192	525	24		34-31-31	ALL
	16		W0192	10L	24		34-12-22	ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20		W0192	205R	24		31-31-12	ALL
	21		W0192	205B	24		31-31-12	ALL
	22		W0192	205Z			31-31-12	ALL
	23		W0192	203R	24		31-31-12	ALL
	24		W0192	203B	24		31-31-12	ALL
	25		W0192	203Z			31-31-12	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05400

Page 47

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05437J		AE0218/ /		RCPT-P37 (continued)				ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29		W0192	284R	24		73-21-14	ALL
	30		W0192	284B	24		73-21-14	ALL
	31		W0192	284Z			73-21-14	ALL
	32	UNUSED						ALL
	33		W0192	01Q	24		34-12-22	ALL
	34		W0192	01S	24		34-12-22	ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
D05437P		AE0218/ /		RCPT-P37				ALL
	1		W0475	001	22		22-14-31	ALL
	2		W0475	002	22		22-14-31	ALL
	3		W0475	003	24		31-51-41	ALL
	4		W0475	064	22		34-22-26	ALL
	5		W0475	005	24		27-32-21	ALL
	6		W0475	006	24		77-35-11	ALL
	7		W0475	007	24		34-12-22	ALL
	8		W0475	008	24		SPARE	ALL
	9		W0475	205R	24		SPARE	050-099, 150-199
	9	UNUSED						275-299
	10		W0475	205B	24		SPARE	050-099, 150-199
	10	UNUSED						275-299
	11		W0475	205Z			SPARE	050-099, 150-199
	11	UNUSED						275-299
	12		W0475	012	20		38-32-11	050-099, 150-199, 277-299
	12		W0475	012	22		SPARE	275
	12		W0475	012	20		SPARE	276
	13		W0475	013	22		SPARE	ALL
	14		W0475	014	24		SPARE	ALL
	15		W0475	015	24		34-31-31	ALL
	16		W0475	017	24		34-12-22	ALL
	17	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D05400
Page 48
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05437P		AE0218/ /		RCPT-P37 (continued)				ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20		W0475	201R	24		31-31-12	ALL
	21		W0475	201B	24		31-31-12	ALL
	22		W0475	201Z			31-31-12	ALL
	23		W0475	202R	24		31-31-12	ALL
	24		W0475	202B	24		31-31-12	ALL
	25		W0475	202Z			31-31-12	ALL
	26	UNUSED						050-099
	26		W0475	203R	24		31-31-12	150-199, 275-299
	27	UNUSED						050-099
	27		W0475	203B	24		31-31-12	150-199, 275-299
	28	UNUSED						050-099
	28		W0475	203Z			31-31-12	150-199, 275-299
	29		W0475	204R	24		73-21-14	ALL
	30		W0475	204B	24		73-21-14	ALL
	31		W0475	204Z			73-21-14	ALL
	32		W0475	020	24		SPARE	ALL
	33		W0475	021	24		34-12-22	ALL
	34		W0475	022	24		34-12-22	ALL
	35		W0475	023	24		SPARE	ALL
	36		W0475	024	24		SPARE	ALL
	37		W0475	025	24		SPARE	ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						150-155, 162-165
	43	UNUSED						150-155, 162-165
	44	UNUSED						150-155, 162-165
	45	UNUSED						150-155, 162-165
	46	UNUSED						150-155, 162-165
	47	UNUSED						150-155, 162-165
	48	UNUSED						150-155, 162-165
	49	UNUSED						150-155, 162-165
	50	UNUSED						150-155, 162-165
	51	UNUSED						150-155, 162-165
	52	UNUSED						150-155, 162-165
	53	UNUSED						150-155, 162-165
	54	UNUSED						150-155, 162-165

HOOKUP LIST

D280T132

91-21-51

Section D05400

Page 49

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05437P		AE0218/ /		RCPT-P37 (continued)				ALL
	55	UNUSED						150-155, 162-165
D05438J		AP1501/ /		RCPT-TAIL/BODY				ALL
	1		W0502	001	20		27-38-11	ALL
	2		W0502	002	20		27-38-11	ALL
	3		W0502	003	20		27-38-11	ALL
	4		W0502	007	20		27-23-11	ALL
	5		W0502	006	20		27-23-11	ALL
	6		W0502	011	20		27-38-11	ALL
	7		W0502	008	20		27-23-11	ALL
	8		W0502	012	20		27-38-11	ALL
	9		W0502	013	20		27-38-11	ALL
	10	DL	W0502	020	18		27-31-11	ALL
	11	UNUSED						050-099, 150-156, 162-166, 275-276
	11		W0502	026	20		27-38-11	157, 167-199, 277-299
	12	UNUSED						050-099, 150-156, 162-166, 275-276
	12		W0502	025	20		27-38-11	157, 167-199, 277-299
	13	FL	W0502	023	16		33-45-11	ALL
	14	FL	W0502	024	16		33-45-11	ALL
	15	UNUSED						ALL
D05438P		AP1501/ /		PLUG-TAIL/BODY				ALL
	1		W0750	001	24		27-38-11	ALL
	2		W0750	002	24		27-38-11	ALL
	3		W0750	003	24		27-38-11	ALL
	4		W0750	004	20		27-23-11	ALL
	5		W0750	005	22		27-23-11	ALL
	6		W0750	006	24		27-38-11	ALL
	7		W0750	007	20		27-23-11	ALL
	8		W0750	008	24		27-38-11	ALL
	9		W0750	009	24		27-38-11	ALL
	10		W0750	010	22		27-31-11	ALL
	11		W0750	011	22		SPARE	050-099, 150-154, 162-165, 275-276
	11		W0750	020	24		27-38-11	155-157, 166-199, 277-299
	12		W0750	012	22		SPARE	050-099, 150-154, 162-165, 275-276
	12		W0750	015	24		27-38-11	155-157, 166-199, 277-299
	13	FM	W0750	013	16		33-45-11	ALL
	14	FM	W0750	014	16		33-45-11	ALL
	15	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D05400

Page 50

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05439J		AE0320/ /		RCPT-E2-3				ALL
	1		W0473	062	24		34-61-25	ALL
	2		W0473	046	24		31-31-22	ALL
	3		W0473	217B	24		34-61-25	ALL
	4		W0473	217R	24		34-61-25	ALL
	5		W0473	217Z			34-61-25	ALL
	6		W0473	006	24		SPARE	ALL
	7		W0473	007	24		SPARE	ALL
	8	UNUSED						050-099
	8		W0473	075	24		34-61-25	150-199, 275-299
	9		W0473	035	22		31-31-22	ALL
	10		W0473	036	22		31-31-22	ALL
	11	UNUSED						ALL
	12		W0473	218B	24		34-61-25	ALL
	13		W0473	218R	24		34-61-25	ALL
	14		W0473	218Z			34-61-25	ALL
	15		W0473	219B	24		34-61-25	ALL
	16		W0473	219R	24		34-61-25	ALL
	17		W0473	056	22		SPARE	ALL
	18		W0473	057	22		SPARE	ALL
	19	UNUSED						ALL
	20		W0473	219Z			34-61-25	ALL
	21		W0473	063	24		SPARE	050-099
	21	UNUSED						150-199, 275-299
	22	UNUSED						ALL
	23	UNUSED						050-099
	23		W0473	214R	24		31-31-12	150-199, 275-299
	24	UNUSED						050-099
	24		W0473	214B	24		31-31-12	150-199, 275-299
	25	UNUSED						050-099
	25		W0473	214Z			31-31-12	150-199, 275-299
	26	UNUSED						050-099
	26		W0473	216R	24		31-31-12	150-199, 275-299
	27	UNUSED						050-099
	27		W0473	216B	24		31-31-12	150-199, 275-299
	28	UNUSED						050-099
	28		W0473	216Z			31-31-12	150-199, 275-299
	29	UNUSED						050-099
	29		W0473	029	24		31-31-12	150-199, 275-299
	30	UNUSED						ALL
	31	UNUSED						050-099

HOOKUP LIST

D280T132

91-21-51

Section D05400

Page 51

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05439J		AE0320/ /		RCPT-E2-3 (continued)				ALL
	31		W0473	031	24		31-31-12	150-199, 275-299
	32	UNUSED						150-199
	33	UNUSED						150-199
	34	UNUSED						150-199
	35	UNUSED						150-199
	36	UNUSED						150-199
	37	UNUSED						150-199
	38	UNUSED						150-199
	39	UNUSED						150-199
	40	UNUSED						150-199
	41	UNUSED						150-199
	42	UNUSED						150-199
	43	UNUSED						150-199
	44	UNUSED						150-199
	45	UNUSED						150-199
	46	UNUSED						150-199
	47	UNUSED						150-199
	48	UNUSED						150-199
	49	UNUSED						150-199
	50	UNUSED						150-199
	51	UNUSED						150-199
	52	UNUSED						150-199
	53	UNUSED						150-199
	54	UNUSED						150-199
	55	UNUSED						150-199
D05439P		AE0320/ /		PLUG E2-3				ALL
	1		W0145	098	24		34-61-25	ALL
	2		W0145	655	24		31-31-22	ALL
	3		W0145	297B	24		34-61-25	ALL
	4		W0145	297R	24		34-61-25	ALL
	5		W0145	297Z			34-61-25	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8		W0145	666	24		34-61-25	ALL
	9		W0145	046	24		31-31-22	ALL
	10		W0145	024	24		31-31-22	ALL
	11	UNUSED						ALL
	12		W0145	295B	24		34-61-25	ALL
	13		W0145	295R	24		34-61-25	ALL

HOOKUP LIST
D280T132

91-21-51
Section D05400
Page 52
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05439P		AE0320/ /		PLUG E2-3 (continued)				ALL
	14		W0145	295Z			34-61-25	ALL
	15		W0145	296B	24		34-61-25	ALL
	16		W0145	296R	24		34-61-25	ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20		W0145	296Z			34-61-25	ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						150-199
	33	UNUSED						150-199
	34	UNUSED						150-199
	35	UNUSED						150-199
	36	UNUSED						150-199
	37	UNUSED						150-199
	38	UNUSED						150-199
	39	UNUSED						150-199
	40	UNUSED						150-199
	41	UNUSED						150-199
	42	UNUSED						150-199
	43	UNUSED						150-199
	44	UNUSED						150-199
	45	UNUSED						150-199
	46	UNUSED						150-199
	47	UNUSED						150-199
	48	UNUSED						150-199
	49	UNUSED						150-199
	50	UNUSED						150-199
	51	UNUSED						150-199
	52	UNUSED						150-199
	53	UNUSED						150-199

HOOKUP LIST

D280T132

91-21-51

Section D05400

Page 53

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05439P		AE0320 / /		PLUG E2-3 (continued)				ALL
	54	UNUSED						150-199
	55	UNUSED						150-199
	DED		W0145	158Z			31-31-12	ALL
	REF	JB	W0145	158	24		31-31-12	ALL
	REF	JB	W0145	159	24		31-31-12	ALL
	REF	JB	W0145	537B	24		31-31-12	ALL
	REF	JB	W0145	537R	24		31-31-12	ALL
	REF	JB	W0145	537Z			31-31-12	ALL
D05440J		AP1501 / /		RCPT-TAIL/BODY				ALL
	1		W0504	001	20		27-23-11	ALL
	2		W0504	002	20		27-23-11	ALL
	3		W0504	003	20		27-23-11	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
D05440P		AP1501 / /		PLUG-TAIL/BODY				ALL
	1		W0770	001	20		27-23-11	ALL
	2		W0770	002	20		27-23-11	ALL
	3		W0770	003	22		27-23-11	ALL
	4	UNUSED						050-099, 162-199
	4		W0770	004	22		SPARE	150-157, 275-299
	5	UNUSED						050-099, 162-199
	5		W0770	005	22		SPARE	150-157, 275-299
	6	UNUSED						ALL
	7	UNUSED						ALL
	CAP	Y	W0770	004	22		SPARE	162-199
	CAP	Y	W0770	005	22		SPARE	162-199
D05448J		AP0401 / /		RCPT-P19				ALL
	1		W1110	044	20		35-21-12	ALL
	2		W1110	050	20		35-21-13	050-099, 150-199
	2	UNUSED						275-299
	3	UNUSED						050-099, 150-199
	3		W1110	058	20		35-21-14	275-299
	4	UNUSED						050-099, 150-199
	4		W1110	076	18		33-22-31	275-299
	5	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D05400

Page 54

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05448J		AP0401/ /		RCPT-P19 (continued)				ALL
	6	UNUSED						050-099, 150-199
	6		W1110	077	20		33-24-11	275-299
	7	UNUSED						050-099, 150-199
	7		W1110	078	20		33-24-11	275-299
	8	UNUSED						050-099
	9	UNUSED						050-099
	10	UNUSED						050-099
	11	UNUSED						050-099
	12	UNUSED						050-099
	DED		W1110	077Z			33-24-11	277-278
	DED		W1110	078Z			33-24-11	277-278
D05448P		AP0401/ /		PLUG-P19				ALL
	1		W0714	001	20		35-21-12	ALL
	2		W0714	040	20		35-21-13	050-099, 150-199
	2	UNUSED						275-299
	3	UNUSED						050-099, 150-199
	3		W0714	023	20		35-21-14	275-299
	4	UNUSED						050-099, 150-199
	4		W0714	045	18		33-22-31	275-299
	5	UNUSED						ALL
	6	UNUSED						050-099, 150-199
	6		W0714	048	20		33-24-12	275-299
	7	UNUSED						050-099, 150-199
	7		W0714	049	20		33-24-12	275-299
	8	UNUSED						050-099
	9	UNUSED						050-099
	10	UNUSED						050-099
	11	UNUSED						050-099
	12	UNUSED						050-099
	DED		W0714	048Z			33-24-12	277-278
	DED		W0714	049Z			33-24-12	277-278
D05449J		1211/270/R083		RCPT-				050-099
D05449J		1197+014/270/R083		RCPT-				150-199, 275-278
D05449J		1197+08/270/R083		RCPT-				280-299
	1		W1445	001	24		23-34-18	ALL
	2	FL	W1445	002	16		23-34-18	ALL
	3	FL	W1445	003	16		23-34-18	ALL
	4		W1445	004	24		23-34-18	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05400

Page 55

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05449J		1211/270/R083		RCPT- (continued)				050-099
D05449J		1197+014/270/R083		RCPT- (continued)				150-199, 275-278
D05449J		1197+08/270/R083		RCPT- (continued)				280-299
	5		W1445	302R	24		23-34-18	ALL
D05451J		1205/270/R083		RCPT-				050-099
D05451J		1197+008/270/R083		RCPT-				150-199, 275-299
	1		W1445	005	24		23-34-18	ALL
	2	FL	W1445	007	16		23-34-18	ALL
	3	FL	W1445	006	16		23-34-18	ALL
	4		W1445	004	24		23-34-18	ALL
	5		W1445	302B	24		23-34-18	ALL
D05453J		AF0119/ /		RCPT-P1				ALL
	1		W0523	201R	24		34-24-11	ALL
	2		W0523	201B	24		34-24-11	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W0523	002	24		22-14-11	ALL
	6		W0523	003	22		SPARE	ALL
	7		W0523	004	22		SPARE	ALL
	8		W0523	202R	24		34-24-11	ALL
	9		W0523	202B	24		34-24-11	ALL
	10		W0523	152	24		34-24-11	ALL
	11		W0523	203R	24		34-24-11	ALL
	12		W0523	203B	24		34-24-11	ALL
	13		W0523	153	24		34-24-11	ALL
	14		W0523	204R	24		34-24-11	ALL
	15		W0523	204B	24		34-24-11	ALL
	16		W0523	154	24		34-24-11	ALL
	17		W0523	205R	24		34-24-11	ALL
	18		W0523	205B	24		34-24-11	ALL
	19		W0523	155	24		34-24-11	ALL
	20		W0523	301R	24		34-24-11	ALL
	21		W0523	301B	24		34-24-11	ALL
	22		W0523	301Y	24		34-24-11	ALL
	23		W0523	008	22		34-22-36	ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D05400

Page 56

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05453J		AF0119/ /		RCPT-P1 (continued)				ALL
	28	UNUSED						ALL
	29		W0523	005	22		SPARE	ALL
	30		W0523	006	22		SPARE	ALL
	31		W0523	007	22		SPARE	ALL
D05453P		AF0119/ /		PLUG-				ALL
	1		W0051	201R	24		34-24-11	ALL
	2		W0051	201B	24		34-24-11	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W0051	001	24		22-14-11	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8		W0051	202R	24		34-24-11	ALL
	9		W0051	202B	24		34-24-11	ALL
	10		W0051	010	24		34-24-11	ALL
	11		W0051	203R	24		34-24-11	ALL
	12		W0051	203B	24		34-24-11	ALL
	13		W0051	011	24		34-24-11	ALL
	14		W0051	204R	24		34-24-11	ALL
	15		W0051	204B	24		34-24-11	ALL
	16		W0051	012	24		34-24-11	ALL
	17		W0051	205R	24		34-24-11	ALL
	18		W0051	205B	24		34-24-11	ALL
	19		W0051	013	24		34-24-11	ALL
	20		W0051	301R	24		34-24-11	ALL
	21		W0051	301B	24		34-24-11	ALL
	22		W0051	301Y	24		34-24-11	ALL
	23		W0051	141	22		34-22-36	ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	DED		W0051	001Z			22-14-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05400

Page 57

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05455J		AE0319/ /		RCPT-E1-4				ALL
	1		W0523	201R	24		34-24-11	ALL
	2		W0523	201B	24		34-24-11	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W0523	002	24		22-14-11	ALL
	6		W0523	003	22		SPARE	ALL
	7		W0523	004	22		SPARE	ALL
	8		W0523	202R	24		34-24-11	ALL
	9		W0523	202B	24		34-24-11	ALL
	10		W0523	152	24		34-24-11	ALL
	11		W0523	203R	24		34-24-11	ALL
	12		W0523	203B	24		34-24-11	ALL
	13		W0523	153	24		34-24-11	ALL
	14		W0523	204R	24		34-24-11	ALL
	15		W0523	204B	24		34-24-11	ALL
	16		W0523	154	24		34-24-11	ALL
	17		W0523	205R	24		34-24-11	ALL
	18		W0523	205B	24		34-24-11	ALL
	19		W0523	155	24		34-24-11	ALL
	20		W0523	301R	24		34-24-11	ALL
	21		W0523	301B	24		34-24-11	ALL
	22		W0523	301Y	24		34-24-11	ALL
	23		W0523	008	22		34-22-36	ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29		W0523	005	22		SPARE	ALL
	30		W0523	006	22		SPARE	ALL
	31		W0523	007	22		SPARE	ALL
D05455P		AE0319/ /		PLUG-E1-4				ALL
	1		W0127	256R	24		34-24-11	ALL
	2		W0127	256B	24		34-24-11	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W0127	057	24		22-14-11	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D05400
Page 58
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05455P		AE0319/ /		PLUG-E1-4 (continued)				ALL
	8		W0127	257R	24		34-24-11	ALL
	9		W0127	257B	24		34-24-11	ALL
	10		W0127	152	24		34-24-11	ALL
	11		W0127	258R	24		34-24-11	ALL
	12		W0127	258B	24		34-24-11	ALL
	13		W0127	153	24		34-24-11	ALL
	14		W0127	259R	24		34-24-11	ALL
	15		W0127	259B	24		34-24-11	ALL
	16		W0127	154	24		34-24-11	ALL
	17		W0127	260R	24		34-24-11	ALL
	18		W0127	260B	24		34-24-11	ALL
	19		W0127	160	24		34-24-11	ALL
	20		W0127	390R	24		34-24-11	ALL
	21		W0127	390B	24		34-24-11	ALL
	22		W0127	390Y	24		34-24-11	ALL
	23		W0127	118	22		34-22-36	ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
D05456J		AE0209/ /		RCPT-P36				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W0182	118	18		38-32-11	050-099, 150-155, 162-165, 275-276
	3		W0182	70F	18		38-32-11	156-157, 166-199, 277-299
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	DK	W0182	154	18		38-32-14	050-099, 150-199, 277-278
	6	UNUSED						275-276
	6		W0182	154	18		38-32-14	280-299
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						050-099, 150-155, 162-165, 275-276
	9		W0182	70B	22		38-32-11	156-157, 166-199, 277-299
	10	UNUSED						050-099, 150-155, 162-165, 275-276

HOOKUP LIST

D280T132

91-21-51

Section D05400

Page 59

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05456J		AE0209/ /		RCPT-P36 (continued)				ALL
	10		W0182	126	20		38-32-11	156-157, 166-199, 277-299
D05456P		AE0209/ /		PLUG-P36				ALL
	1	UNUSED						ALL
	2		W0622	054	22		SPARE	ALL
	3		W0622	055	18		38-32-11	ALL
	4		W0622	071	20		SPARE	ALL
	5		W0622	070	22		SPARE	ALL
	6		W0622	61K	18		38-32-14	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						050-099, 150-155, 162-165, 275-276
	9		W0622	030	18		38-32-11	156-157, 166-199, 277-299
	10	UNUSED						050-099, 150-155, 162-165, 275-276
	10		W0622	031	18		38-32-11	156-157, 166-199, 277-299
D05459J		WS 782/ /		RECPT-				ALL
	1		W0899	003	20		27-61-13	ALL
	2		W0899	001	20		27-61-13	ALL
	3		W0899	004	20		27-61-13	ALL
	4		W0899	002	20		27-61-13	ALL
	5		W0899	WOR	20		27-61-13	ALL
	6		W0899	WBN	20		27-61-13	ALL
	7		W0899	WRB	20		27-61-13	ALL
	8		W0899	WBK	20		27-61-13	ALL
	9		W0899	WVI	20		27-61-13	ALL
	10		W0899	005	18		27-61-13	ALL
D05459P		MULTI/ /		PLUG-				ALL
	1		W1349	WRD	18		27-61-18	ALL
	2		W1349	WBU	18		27-61-18	ALL
	3		W1349	WYL	18		27-61-18	ALL
	4		W1349	WGR	18		27-61-18	ALL
	5		W1349	WOR	18		27-61-18	ALL
	6		W1349	WBN	18		27-61-18	ALL
	7		W1349	WRB	18		27-61-18	ALL
	8		W1349	WBK	18		27-61-18	ALL
	9		W1349	WVI	18		27-61-18	ALL
	10		W1349	WOB	18		27-61-18	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05400

Page 60

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05461J		L0709/12/RS		RECPT				ALL
	1		W1201	003	20		27-61-14	ALL
	2		W1201	001	20		27-61-14	ALL
	3		W1201	004	20		27-61-14	ALL
	4		W1201	002	20		27-61-14	ALL
	5		W1201	WOR	20		27-61-14	ALL
	6		W1201	WBN	20		27-61-14	ALL
	7		W1201	WRB	20		27-61-14	ALL
	8		W1201	WBK	20		27-61-14	ALL
	9		W1201	WVI	20		27-61-14	ALL
	10		W1201	005	18		27-61-14	ALL
D05463J		L0653/12/RS		RECPT-				ALL
	1		W1203	003	20		27-61-15	ALL
	2		W1203	001	20		27-61-15	ALL
	3		W1203	004	20		27-61-15	ALL
	4		W1203	002	20		27-61-15	ALL
	5		W1203	WOR	20		27-61-15	ALL
	6		W1203	WBN	20		27-61-15	ALL
	7		W1203	WRB	20		27-61-15	ALL
	8		W1203	WBK	20		27-61-15	ALL
	9		W1203	WVI	20		27-61-15	ALL
	10		W1203	005	18		27-61-15	ALL
D05465J		L0584/12/TE		RECPT-				ALL
	1		W1205	003	20		27-61-16	ALL
	2		W1205	001	20		27-61-16	ALL
	3		W1205	004	20		27-61-16	ALL
	4		W1205	002	20		27-61-16	ALL
	5		W1205	WOR	20		27-61-16	ALL
	6		W1205	WBN	20		27-61-16	ALL
	7		W1205	WRB	20		27-61-16	ALL
	8		W1205	WBK	20		27-61-16	ALL
	9		W1205	WVI	20		27-61-16	ALL
	10		W1205	005	18		27-61-16	ALL
D05467J		L0430/12/TE		RECPT-				ALL
	1		W1207	003	20		27-61-17	ALL
	2		W1207	001	20		27-61-17	ALL
	3		W1207	004	20		27-61-17	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05400

Page 61

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05467J		L0430/12/TE		RECPT- (continued)				ALL
	4		W1207	002	20		27-61-17	ALL
	5		W1207	WOR	20		27-61-17	ALL
	6		W1207	WBN	20		27-61-17	ALL
	7		W1207	WRB	20		27-61-17	ALL
	8		W1207	WBK	20		27-61-17	ALL
	9		W1207	WVI	20		27-61-17	ALL
	10		W1207	005	18		27-61-17	ALL
D05469J		L0350/12/TE		RECPT				ALL
	1		W1209	003	20		27-61-18	ALL
	2		W1209	001	20		27-61-18	ALL
	3		W1209	004	20		27-61-18	ALL
	4		W1209	002	20		27-61-18	ALL
	5		W1209	WOR	20		27-61-18	ALL
	6		W1209	WBN	20		27-61-18	ALL
	7		W1209	WRB	20		27-61-18	ALL
	8		W1209	WBK	20		27-61-18	ALL
	9		W1209	WVI	20		27-61-18	ALL
	10		W1209	005	18		27-61-18	ALL
D05471J		R0350/12/TE		RECPT-				ALL
	1		W1211	003	20		27-61-18	ALL
	2		W1211	001	20		27-61-18	ALL
	3		W1211	004	20		27-61-18	ALL
	4		W1211	002	20		27-61-18	ALL
	5		W1211	WOR	20		27-61-18	ALL
	6		W1211	WBN	20		27-61-18	ALL
	7		W1211	WRB	20		27-61-18	ALL
	8		W1211	WBK	20		27-61-18	ALL
	9		W1211	WVI	20		27-61-18	ALL
	10		W1211	005	18		27-61-18	ALL
D05473J		R0404/12/TE		RECPT				ALL
	1		W1213	003	20		27-61-17	ALL
	2		W1213	001	20		27-61-17	ALL
	3		W1213	004	20		27-61-17	ALL
	4		W1213	002	20		27-61-17	ALL
	5		W1213	WOR	20		27-61-17	ALL
	6		W1213	WBN	20		27-61-17	ALL
	7		W1213	WRB	20		27-61-17	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05400

Page 62

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05473J		R0404/12/TE		RECPT (continued)				ALL
	8		W1213	WBK	20		27-61-17	ALL
	9		W1213	WVI	20		27-61-17	ALL
	10		W1213	005	18		27-61-17	ALL
D05475J		R0567/12/RS		RECPT				ALL
	1		W1215	003	20		27-61-16	ALL
	2		W1215	001	20		27-61-16	ALL
	3		W1215	004	20		27-61-16	ALL
	4		W1215	002	20		27-61-16	ALL
	5		W1215	WOR	20		27-61-16	ALL
	6		W1215	WBN	20		27-61-16	ALL
	7		W1215	WRB	20		27-61-16	ALL
	8		W1215	WBK	20		27-61-16	ALL
	9		W1215	WVI	20		27-61-16	ALL
	10		W1215	005	18		27-61-16	ALL
D05477J		R0630/12/TE		RECPT				ALL
	1		W1217	003	20		27-61-15	ALL
	2		W1217	001	20		27-61-15	ALL
	3		W1217	004	20		27-61-15	ALL
	4		W1217	002	20		27-61-15	ALL
	5		W1217	WOR	20		27-61-15	ALL
	6		W1217	WBN	20		27-61-15	ALL
	7		W1217	WRB	20		27-61-15	ALL
	8		W1217	WBK	20		27-61-15	ALL
	9		W1217	WVI	20		27-61-15	ALL
	10		W1217	005	18		27-61-15	ALL
D05479J		R0688/12/TE		RECPT				ALL
	1		W1219	003	20		27-61-14	ALL
	2		W1219	001	20		27-61-14	ALL
	3		W1219	004	20		27-61-14	ALL
	4		W1219	002	20		27-61-14	ALL
	5		W1219	WOR	20		27-61-14	ALL
	6		W1219	WBN	20		27-61-14	ALL
	7		W1219	WRB	20		27-61-14	ALL
	8		W1219	WBK	20		27-61-14	ALL
	9		W1219	WVI	20		27-61-14	ALL
	10		W1219	005	18		27-61-14	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05400

Page 63

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05481J		R0748/12/TE		RECPT				ALL
	1		W1221	003	20		27-61-13	ALL
	2		W1221	001	20		27-61-13	ALL
	3		W1221	004	20		27-61-13	ALL
	4		W1221	002	20		27-61-13	ALL
	5		W1221	WOR	20		27-61-13	ALL
	6		W1221	WBN	20		27-61-13	ALL
	7		W1221	WRB	20		27-61-13	ALL
	8		W1221	WBK	20		27-61-13	ALL
	9		W1221	WVI	20		27-61-13	ALL
	10		W1221	005	18		27-61-13	ALL
D05483J		AE0308/ /		RCPT-E2-1				ALL
	1		W0131	209R	22		27-61-13	ALL
	2	UNUSED						ALL
	3		W0131	209B	22		27-61-13	ALL
	4		W0131	305B	22		27-61-13	ALL
	5		W0131	305R	22		27-61-13	ALL
	6		W0131	304B	22		27-61-13	ALL
	7		W0131	305Y	22		27-61-13	ALL
	8		W0131	211R	22		27-61-13	ALL
	9		W0131	211B	22		27-61-13	ALL
	10		W0131	212R	22		27-61-13	ALL
	11		W0131	212B	22		27-61-13	ALL
	12		W0131	304R	22		27-61-13	ALL
	13		W0131	304Y	22		27-61-13	ALL
	14		W0131	210R	22		27-61-13	ALL
	15		W0131	210B	22		27-61-13	ALL
	16	UNUSED						ALL
	17		W0131	004	22		22-21-21	ALL
	18		W0131	202R	22		22-21-21	ALL
	19		W0131	202B	22		22-21-21	ALL
	20		W0131	301R	22		22-21-21	ALL
	21		W0131	301B	22		22-21-21	ALL
	22		W0131	301Y	22		22-21-21	ALL
	23		W0131	204R	22		22-21-21	ALL
	24		W0131	204B	22		22-21-21	ALL
	25		W0131	223R	22		27-21-22	ALL
	26		W0131	223B	22		27-21-22	ALL
	27		W0131	312R	22		27-21-22	ALL
	28		W0131	312B	22		27-21-22	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05400

Page 64

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05483J		AE0308/ /		RCPT-E2-1 (continued)				ALL
	29		W0131	312Y	22		27-21-22	ALL
	30		W0131	227R	22		27-21-22	ALL
	31		W0131	227B	22		27-21-22	ALL
	32		W0131	074	22		27-41-21	ALL
	33		W0131	075	22		27-41-21	ALL
	34		W0131	077	22		27-41-21	ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	DED		W0131	074Z			27-41-21	ALL
	DED		W0131	075Z			27-41-21	ALL
D05483P		AE0308/ /		PLUG-E2-1				ALL
	1		W1261	201R	20		27-61-13	ALL
	2	UNUSED						ALL
	3		W1261	201B	20		27-61-13	ALL
	4		W1261	301B	20		27-61-13	ALL
	5		W1261	301R	20		27-61-13	ALL
	6		W1261	302B	20		27-61-13	ALL
	7		W1261	301Y	20		27-61-13	ALL
	8		W1261	203R	20		27-61-13	ALL
	9		W1261	203B	20		27-61-13	ALL
	10		W1261	204R	20		27-61-13	ALL
	11		W1261	204B	20		27-61-13	ALL
	12		W1261	302R	20		27-61-13	ALL
	13		W1261	302Y	20		27-61-13	ALL
	14		W1261	206R	20		27-61-13	ALL
	15		W1261	206B	20		27-61-13	ALL
	16	UNUSED						ALL
	17	DK	W1261	001	18		22-21-21	ALL
	18		W1261	207R	22		22-21-21	ALL
	19		W1261	207B	22		22-21-21	ALL
	20		W1261	303R	22		22-21-21	ALL
	21		W1261	303B	22		22-21-21	ALL
	22		W1261	303Y	22		22-21-21	ALL
	23		W1261	208R	22		22-21-21	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05400

Page 65

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05483P		AE0308/ /		PLUG-E2-1 (continued)				ALL
	24		W1261	208B	22		22-21-21	ALL
	25		W1261	209R	22		27-21-22	ALL
	26		W1261	209B	22		27-21-22	ALL
	27		W1261	304R	22		27-21-22	ALL
	28		W1261	304B	22		27-21-22	ALL
	29		W1261	304Y	22		27-21-22	ALL
	30		W1261	210R	22		27-21-22	ALL
	31		W1261	210B	22		27-21-22	ALL
	32		W1261	002Y	22		27-41-21	ALL
	33		W1261	003Y	22		27-41-21	ALL
	34		W1261	004	22		27-41-21	ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40		W1261	005	22		SPARE	ALL
	41		W1261	006	22		SPARE	ALL
D05485J		AE0308/ /		RCPT-E2-1				ALL
	1		W0151	204R	22		27-61-17	ALL
	2	UNUSED						ALL
	3		W0151	204B	22		27-61-17	ALL
	4	UNUSED						ALL
	5		W0151	305R	22		27-61-17	ALL
	6	UNUSED						ALL
	7		W0151	305Y	22		27-61-17	ALL
	8		W0151	208R	22		27-61-17	ALL
	9		W0151	208B	22		27-61-17	ALL
	10		W0151	206R	22		27-61-17	ALL
	11		W0151	206B	22		27-61-17	ALL
	12		W0151	306R	22		27-61-17	ALL
	13		W0151	306Y	22		27-61-17	ALL
	14		W0151	209R	22		27-61-17	ALL
	15		W0151	209B	22		27-61-17	ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D05400

Page 66

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05485J		AE0308/ /		RCPT-E2-1 (continued)				ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23		W0151	305B	22		27-61-17	ALL
	24		W0151	306B	22		27-61-17	ALL
D05485P		AE0308/ /		PLUG-E2-1				050-099
D05485P		344/190/R043		PLUG-E2-1				150-199, 275-299
	1		W1263	201R	20		27-61-17	ALL
	2	UNUSED						ALL
	3		W1263	201B	20		27-61-17	ALL
	4	UNUSED						ALL
	5		W1263	302R	20		27-61-17	ALL
	6	UNUSED						ALL
	7		W1263	302Y	20		27-61-17	ALL
	8		W1263	203R	20		27-61-17	ALL
	9		W1263	203B	20		27-61-17	ALL
	10		W1263	204R	20		27-61-17	ALL
	11		W1263	204B	20		27-61-17	ALL
	12		W1263	303R	20		27-61-17	ALL
	13		W1263	303Y	20		27-61-17	ALL
	14		W1263	206R	20		27-61-17	ALL
	15		W1263	206B	20		27-61-17	ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23		W1263	302B	20		27-61-17	ALL
	24		W1263	303B	20		27-61-17	ALL
D05487J		AE0308/ /		RCPT-E2-1				ALL
	1		W0141	223R	22		27-61-18	ALL
	2	UNUSED						ALL
	3		W0141	223B	22		27-61-18	ALL
	4		W0141	310B	22		27-61-18	ALL
	5		W0141	310R	22		27-61-18	ALL
	6		W0141	309B	22		27-61-18	ALL
	7		W0141	310Y	22		27-61-18	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05400

Page 67

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05487J		AE0308/ /		RCPT-E2-1 (continued)				ALL
	8		W0141	215R	22		27-61-18	ALL
	9		W0141	215B	22		27-61-18	ALL
	10		W0141	224R	22		27-61-18	ALL
	11		W0141	224B	22		27-61-18	ALL
	12		W0141	309R	22		27-61-18	ALL
	13		W0141	309Y	22		27-61-18	ALL
	14		W0141	217R	22		27-61-18	ALL
	15		W0141	217B	22		27-61-18	ALL
D05487P D05487P		AE0308/ / 0344/190/R043		PLUG-E2-1 PLUG-E2-1				050-099 150-199, 275-299
	1		W1265	201R	20		27-61-18	ALL
	2	UNUSED						ALL
	3		W1265	201B	20		27-61-18	ALL
	4		W1265	301B	20		27-61-18	ALL
	5		W1265	301R	20		27-61-18	ALL
	6		W1265	302B	20		27-61-18	ALL
	7		W1265	301Y	20		27-61-18	ALL
	8		W1265	203R	20		27-61-18	ALL
	9		W1265	203B	20		27-61-18	ALL
	10		W1265	204R	20		27-61-18	ALL
	11		W1265	204B	20		27-61-18	ALL
	12		W1265	302R	20		27-61-18	ALL
	13		W1265	302Y	20		27-61-18	ALL
	14		W1265	206R	20		27-61-18	ALL
	15		W1265	206B	20		27-61-18	ALL
D05489J		AE0308/ /		RCPT-E2-1				ALL
	1		W0141	010	22		22-21-21	ALL
	2		W0141	008	22		22-21-21	ALL
	3		W0141	013	22		22-21-21	ALL
	4		W0141	091	22		27-09-14	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W0141	001	22		22-22-21	ALL
	8		W0141	028	22		22-24-21	ALL
	9		W0141	031	22		22-24-21	ALL
	10		W0141	032	22		22-24-21	ALL
	11		W0141	067	22		27-09-12	ALL
	12		W0141	074	22		27-09-13	ALL

HOOKUP LIST
D280T132

91-21-51
Section D05400
Page 68
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05489J		AE0308/ /		RCPT-E2-1 (continued)				ALL
	13		W0141	081	22		27-09-13	ALL
	14	UNUSED						ALL
	15		W0141	106	22		27-41-21	ALL
	16		W0141	107	22		27-41-21	ALL
	17		W0141	099	22		27-11-22	ALL
	18		W0141	100	22		27-11-22	ALL
	19		W0141	108	22		27-41-21	ALL
	20		W0141	115	22		27-61-11	ALL
	21		W0141	120	22		27-61-12	ALL
	22		W0141	095	22		27-09-14	ALL
	23		W0141	181	22		27-41-21	ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						050-099
	26		W0141	284Z			22-21-31	150-199, 275-299
	27	UNUSED						050-099
	27		W0141	284R	24		22-21-31	150-199, 275-299
	28	UNUSED						050-099
	28		W0141	284B	24		22-21-31	150-199, 275-299
	29	UNUSED						ALL
	30		W0141	182	22		27-21-12	ALL
	31		W0141	183	22		27-21-12	ALL
	32	UNUSED						050-099
	32		W0141	286Z			22-21-31	150-199, 275-299
	33	UNUSED						050-099
	33		W0141	286R	24		22-21-31	150-199, 275-299
	34	UNUSED						050-099
	34		W0141	286B	24		22-21-31	150-199, 275-299
	35		W0141	221R	22		27-21-12	ALL
	36		W0141	221B	22		27-21-12	ALL
	37		W0141	184	22		27-21-12	ALL
	38		W0141	185	22		27-21-12	ALL
	39		W0141	186	22		27-21-12	ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42		W0141	191	22		27-41-21	ALL
	43		W0141	192	22		27-41-21	ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D05400

Page 69

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05489J		AE0308/ /		RCPT-E2-1 (continued)				ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49		W0141	089	22		27-09-14	ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
D05489P		AE0308/ /		PLUG-E2-1				ALL
	1		W1511	001	22		22-21-11	ALL
	2		W1511	002	22		22-21-11	ALL
	3		W1511	003	22		22-21-21	ALL
	4		W1511	004	22		27-09-14	ALL
	5		W1511	005	22		SPARE	ALL
	6		W1511	006	22		SPARE	ALL
	7		W1511	007	22		22-22-11	ALL
	8		W1511	008	22		22-24-11	ALL
	9		W1511	009	22		22-24-11	ALL
	10		W1511	010	22		22-24-11	ALL
	11		W1511	011	22		27-09-12	ALL
	12		W1511	012	22		27-09-13	ALL
	13		W1511	013	22		27-09-13	ALL
	14		W1511	014	22		SPARE	ALL
	15		W1511	015	22		27-41-11	ALL
	16		W1511	016	22		27-41-11	ALL
	17		W1511	017	22		27-11-22	ALL
	18		W1511	018	22		27-11-22	ALL
	19		W1511	019	22		27-41-11	ALL
	20		W1511	020	22		27-61-11	ALL
	21		W1511	021	22		27-61-12	ALL
	22		W1511	022	22		27-09-14	ALL
	23		W1511	023	22		27-41-11	ALL
	24		W1511	024	22		SPARE	ALL
	25		W1511	025	22		SPARE	ALL
	26	UNUSED						050-099
	26		W1511	207Z			22-21-31	150-199, 275-299
	27	UNUSED						050-099
	27		W1511	207R	24		22-21-31	150-199, 275-299

HOOKUP LIST
D280T132

91-21-51
Section D05400
Page 70
Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05489P		AE0308/ /		PLUG-E2-1 (continued)				ALL
	28	UNUSED						050-099
	28		W1511	207B	24		22-21-31	150-199, 275-299
	29	UNUSED						ALL
	30		W1511	030	22		27-21-12	ALL
	31		W1511	031	22		27-21-12	ALL
	32	UNUSED						050-099
	32		W1511	208Z			22-21-31	150-199, 275-299
	33	UNUSED						050-099
	33		W1511	208R	24		22-21-31	150-199, 275-299
	34	UNUSED						050-099
	34		W1511	208B	24		22-21-31	150-199, 275-299
	35		W1511	203R	22		27-21-12	ALL
	36		W1511	203B	22		27-21-12	ALL
	37		W1511	037	22		27-21-12	ALL
	38		W1511	038	22		27-21-12	ALL
	39		W1511	039	22		27-21-12	ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42		W1511	042	22		27-41-11	ALL
	43		W1511	043	22		27-41-11	ALL
	44		W1511	044	22		SPARE	ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49		W1511	059	22		27-09-14	ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
D05491J		1161/315/L015		RCPT-				050-099
D05491J		1152/315/L015		RCPT-				150-199, 275-278
	1		W1387	014	24		23-34-19	050-099, 150-199, 275-278
	2	FL	W1387	016	16		23-34-19	050-099, 150-199, 275-278
	3	FL	W1387	015	16		23-34-19	050-099, 150-199, 275-278
	4		W1387	013	24		23-34-19	050-099, 150-199, 275-278
	5		W1387	302B	24		23-34-19	050-099, 150-199, 275-278

HOOKUP LIST

D280T132

91-21-51

Section D05400

Page 71

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05493J		AE0303/ /		RCPT-E1-1				ALL
	1		W0111	071	22		27-09-11	ALL
	2		W0111	069	22		27-09-11	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	DED		W0111	069Z			27-09-11	ALL
	DED		W0111	071Z			27-09-11	ALL
D05493P		AE0303/ /		PLUG-E1-1				ALL
	1		W0207	006	22		27-09-11	ALL
	2		W0207	005	22		27-09-11	ALL
	3		W0207	021	22		SPARE	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	DED		W0207	005Z			27-09-11	ALL
	DED		W0207	006Z			27-09-11	ALL
D05495J		AE0303/ /		RCPT-E1-1				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W0101	150	22		27-41-11	ALL
	4	UNUSED						ALL
	5		W0101	003	22		27-21-12	ALL
	DED		W0101	150Z			27-41-11	ALL

HOOKUP LIST
D280T132

91-21-51
Section D05400
Page 72
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05495P		AE0303/ /		PLUG-E1-1				ALL
	1	UNUSED						ALL
	2		W0201	007	20		SPARE	ALL
	3		W0201	003	22		27-41-11	ALL
	4	UNUSED						ALL
	5		W0201	005	22		27-21-12	ALL
D05496J		AE0317/ /		RCPT-E1-2				ALL
	1		W0902	201R	24		52-71-14	ALL
	2		W0902	201B	24		52-71-14	ALL
	3		W0902	202R	24		52-71-14	ALL
	4		W0902	202B	24		52-71-14	ALL
	5		W0902	128	22		21-66-11	050-099, 162-199
	5	UNUSED						150-157, 275-299
	6		W0902	092	24		52-71-11	ALL
	7		W0902	132	22		21-66-21	050-099, 162-199
	7	UNUSED						150-157, 275-299
	8		W0902	130	22		21-66-21	050-099, 162-199
	8	UNUSED						150-157, 275-299
	9		W0902	133	22		21-66-21	050-099, 162-199
	9	UNUSED						150-157, 275-299
	10		W0902	204R	22		21-66-21	050-099, 162-199
	10	UNUSED						150-157, 275-299
	11		W0902	204B	22		21-66-21	050-099, 162-199
	11	UNUSED						150-157, 275-299
	12		W0902	204Z			21-66-21	050-099, 162-199
	12	UNUSED						150-157, 275-299
	13		W0902	123	22		21-66-41	050-099, 150, 152-199
	14		W0902	126	22		21-66-41	050-099, 150, 152-199
	15		W0902	125	22		21-66-41	050-099, 162-199
	15		W1222	720	22		21-66-41	150, 152-157
	16		W0902	207Z			21-66-41	050-099, 150, 152-199
	17		W0902	207R	22		21-66-41	050-099, 150, 152-199
	18		W0902	207B	22		21-66-41	050-099, 150, 152-199
	19	UNUSED						050-099, 150, 152-199
	20	UNUSED						050-099, 150, 152-199
	21	UNUSED						050-099, 150, 152-199
	22	UNUSED						050-099, 150, 152-199
	23	UNUSED						050-099, 150, 152-199
	24	UNUSED						050-099, 150, 152-199

HOOKUP LIST

D280T132

91-21-51

Section D05400

Page 73

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05496P		AE0317/ /		PLUG-E1-2				ALL
	1		W1092	613R	24		52-71-14	ALL
	2		W1092	613B	24		52-71-14	ALL
	3		W1092	614R	24		52-71-14	ALL
	4		W1092	614B	24		52-71-14	ALL
	5		W1092	686	22		21-66-11	050-099, 162-199
	5	UNUSED						150-157, 275-299
	6		W1092	502	24		52-71-11	ALL
	7		W1092	690	22		21-66-21	050-099, 162-199
	7	UNUSED						150-157, 275-299
	8		W1092	691	22		21-66-21	050-099, 162-199
	8	UNUSED						150-157, 275-299
	9		W1092	692	22		21-66-21	050-099, 162-199
	9	UNUSED						150-157, 275-299
	10		W1092	779R	22		21-66-21	050-099, 162-199
	10	UNUSED						150-157, 275-299
	11		W1092	779B	22		21-66-21	050-099, 162-199
	11	UNUSED						150-157, 275-299
	12		W1092	779Z			21-66-21	050-099, 162-199
	12	UNUSED						150-157, 275-299
	13		W1092	693	22		21-66-41	050-099, 150, 152-199
	14		W1092	694	22		21-66-41	050-099, 150, 152-199
	15		W1092	695	22		21-66-41	050-099, 150, 152-199
	16		W1092	780Z			21-66-41	050-099, 150, 152-199
	17		W1092	780R	22		21-66-41	050-099, 150, 152-199
	18		W1092	780B	22		21-66-41	050-099, 150, 152-199
	19	UNUSED						050-099, 150, 152-199
	20	UNUSED						050-099, 150, 152-199
	21	UNUSED						050-099, 150, 152-199
	22	UNUSED						050-099, 150, 152-199
	23	UNUSED						050-099, 150, 152-199
	24	UNUSED						050-099, 150, 152-199
D05497J		AE0209/ /		RCPT-P36				ALL
	1		W0176	07P	20		34-61-15	ALL
	2		W0176	251B	24		34-61-15	ALL
	3		W0176	251R	24		34-61-15	ALL
	4		W0176	251Z			34-61-15	ALL
	5		W0176	252B	24		34-61-15	ALL
	6		W0176	252R	24		34-61-15	ALL
	7		W0176	252Z			34-61-15	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05400

Page 74

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05497J		AE0209/ /		RCPT-P36 (continued)				ALL
	8		W0176	250B	24		34-61-15	ALL
	9		W0176	250R	24		34-61-15	ALL
	10		W0176	250Z			34-61-15	ALL
	11		W0176	16UB	24		21-61-61	ALL
	12		W0176	16UR	24		21-61-61	ALL
	13		W0176	07N	24		34-61-15	ALL
	14		W0176	17J	24		31-31-26	ALL
	15		W0176	17K	24		31-31-26	ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20		W0176	16S	24		21-61-61	ALL
	21		W0176	16R	24		21-61-61	ALL
	22		W0176	16T	24		21-61-61	ALL
	23		W0176	16A	24		21-61-71	050-099, 275-299
	23		W0176	16A	22		21-61-71	150-199
	24		W0176	16B	24		21-61-71	ALL
D05497P		AE0209/ /		PLUG-P36				ALL
	1		W0471	074	24		34-61-15	ALL
	2		W0471	220B	24		34-61-15	ALL
	3		W0471	220R	24		34-61-15	ALL
	4		W0471	220Z			34-61-15	ALL
	5		W0471	221B	24		34-61-15	ALL
	6		W0471	221R	24		34-61-15	ALL
	7		W0471	221Z			34-61-15	ALL
	8		W0471	219B	24		34-61-15	ALL
	9		W0471	219R	24		34-61-15	ALL
	10		W0471	219Z			34-61-15	ALL
	11		W0471	238B	24		21-61-61	ALL
	12		W0471	238R	24		21-61-61	ALL
	13		W0471	077	24		34-61-16	050-099
	13		W0471	077	24		34-61-15	150-199, 275-299
	14		W0471	089	24		31-31-26	ALL
	15		W0471	090	24		31-31-26	ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D05400

Page 75

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05497P		AE0209/ /		PLUG-P36 (continued)				ALL
	20		W0471	092	24		21-61-61	ALL
	21		W0471	093	24		21-61-61	ALL
	22		W0471	091	24		21-61-61	ALL
	23		W0471	097	24		21-61-71	ALL
	24		W0471	098	24		21-61-71	ALL
D05498J		AE0317/ /		RCPT-E1-2				ALL
	1	UNUSED						ALL
	2		W0916	201B	24		52-35-13	ALL
	3		W0916	201R	24		52-35-13	ALL
	4		W0916	202B	24		52-35-13	ALL
	5		W0916	202R	24		52-35-13	ALL
	6		W0916	203B	24		52-35-13	ALL
	7		W0916	203R	24		52-35-13	ALL
	8		W0916	204B	24		52-35-13	ALL
	9		W0916	204R	24		52-35-13	ALL
	10		W0916	205B	24		52-35-13	050-099
	10	UNUSED						150-199, 275-299
	11		W0916	205R	24		52-35-13	050-099
	11	UNUSED						150-199, 275-299
	12		W0916	206B	24		52-34-13	ALL
	13		W0916	206R	24		52-34-13	ALL
	14		W0916	207B	24		52-34-13	ALL
	15		W0916	207R	24		52-34-13	ALL
	16		W0916	208B	24		52-34-13	ALL
	17		W0916	208R	24		52-34-13	ALL
	18		W0916	212B	24		52-34-13	ALL
	19		W0916	212R	24		52-34-13	ALL
	20		W0916	210B	24		52-34-13	ALL
	21		W0916	210R	24		52-34-13	ALL
	22		W0916	211R	24		52-71-13	ALL
	23		W0916	211B	24		52-71-13	ALL
	24		W0916	209R	24		52-71-13	ALL
	25		W0916	209B	24		52-71-13	ALL
	26		W0916	213R	20		52-71-12	ALL
	27		W0916	213B	20		52-71-12	ALL
	28		W0916	214R	24		52-71-13	ALL
	29		W0916	214B	24		52-71-13	ALL
	30		W0916	215R	24		52-71-13	ALL
	31		W0916	215B	24		52-71-13	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05400

Page 76

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05498J		AE0317/ /		RCPT-E1-2 (continued)				ALL
	32		W0916	216R	20		52-71-12	ALL
	33		W0916	216B	20		52-71-12	ALL
	34		W0916	217R	24		52-71-13	ALL
	35		W0916	217B	24		52-71-13	ALL
	36		W0916	218R	20		52-71-12	ALL
	37		W0916	218B	20		52-71-12	ALL
	38		W0916	219R	20		52-71-12	ALL
	39		W0916	219B	20		52-71-12	ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
D05498P		AE0317/ /		PLUG-E1-2				ALL
	1	UNUSED						ALL
	2		W1092	288B	24		52-35-13	ALL
	3		W1092	288R	24		52-35-13	ALL
	4		W1092	289B	24		52-35-13	ALL
	5		W1092	289R	24		52-35-13	ALL
	6		W1092	290B	24		52-35-13	ALL
	7		W1092	290R	24		52-35-13	ALL
	8		W1092	291B	24		52-35-13	ALL
	9		W1092	291R	24		52-35-13	ALL
	10		W1092	292B	24		52-35-13	050-099
	10	UNUSED						150-199, 275-299
	11		W1092	292R	24		52-35-13	050-099
	11	UNUSED						150-199, 275-299
	12		W1092	283B	24		52-34-13	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05400

Page 77

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05498P		AE0317/ /		PLUG-E1-2 (continued)				ALL
	13		W1092	283R	24		52-34-13	ALL
	14		W1092	284B	24		52-34-13	ALL
	15		W1092	284R	24		52-34-13	ALL
	16		W1092	285B	24		52-34-13	ALL
	17		W1092	285R	24		52-34-13	ALL
	18		W1092	286B	24		52-34-13	ALL
	19		W1092	286R	24		52-34-13	ALL
	20		W1092	287B	24		52-34-13	ALL
	21		W1092	287R	24		52-34-13	ALL
	22		W1092	606R	24		52-71-13	ALL
	23		W1092	606B	24		52-71-13	ALL
	24		W1092	607R	24		52-71-13	ALL
	25		W1092	607B	24		52-71-13	ALL
	26		W1092	608R	24		52-71-12	ALL
	27		W1092	608B	24		52-71-12	ALL
	28		W1092	609R	24		52-71-13	ALL
	29		W1092	609B	24		52-71-13	ALL
	30		W1092	610R	24		52-71-13	ALL
	31		W1092	610B	24		52-71-13	ALL
	32		W1092	611R	24		52-71-12	ALL
	33		W1092	611B	24		52-71-12	ALL
	34		W1092	612R	24		52-71-13	ALL
	35		W1092	612B	24		52-71-13	ALL
	36		W1092	604R	24		52-71-12	ALL
	37		W1092	604B	24		52-71-12	ALL
	38		W1092	605R	24		52-71-12	ALL
	39		W1092	605B	24		52-71-12	ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D05400

Page 78

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05498P		AE0317/ /		PLUG-E1-2 (continued)				ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
D05499J		AE0218/ /		RCPT-				ALL
	1		W0192	13C	24		34-61-25	ALL
	2		W0192	214B	24		34-61-25	ALL
	3		W0192	214R	24		34-61-25	ALL
	4		W0192	214Z			34-61-25	ALL
	5		W0192	215B	24		34-61-25	ALL
	6		W0192	215R	24		34-61-25	ALL
	7		W0192	215Z			34-61-25	ALL
	8		W0192	216B	24		34-61-25	ALL
	9		W0192	216R	24		34-61-25	ALL
	10		W0192	216Z			34-61-25	ALL
	11		W0192	13D	20		34-61-25	ALL
	12	UNUSED						050-099, 150-199
	12		W0192	901R	24		34-53-21	275-299
	13	UNUSED						050-099, 150-199
	13		W0192	901B	24		34-53-21	275-299
	14	UNUSED						050-099, 150-199
	14		W0192	901Z			34-53-21	275-299
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19		W0192	096	24		31-31-22	ALL
	20		W0192	095	24		31-31-22	ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D05499P		AE0218/ /		PLUG-P37				ALL
	1		W0473	062	24		34-61-25	ALL
	2		W0473	217B	24		34-61-25	ALL
	3		W0473	217R	24		34-61-25	ALL
	4		W0473	217Z			34-61-25	ALL
	5		W0473	218B	24		34-61-25	ALL
	6		W0473	218R	24		34-61-25	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05400

Page 79

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05499P		AE0218/ /		PLUG-P37 (continued)				ALL
	7		W0473	218Z			34-61-25	ALL
	8		W0473	219B	24		34-61-25	ALL
	9		W0473	219R	24		34-61-25	ALL
	10		W0473	219Z			34-61-25	ALL
	11		W0473	063	24		SPARE	050-099
	11		W0473	075	24		34-61-25	150-199, 275-299
	12	UNUSED						050-099, 150-199
	12		W0473	904R	24		34-53-21	275-299
	13	UNUSED						050-099
	13		W0473	221R	24		SPARE	150-199
	13		W0473	904B	24		34-53-21	275-299
	14	UNUSED						050-099
	14		W0473	221B	24		SPARE	150-199
	14		W0473	904Z			34-53-21	275-299
	15	UNUSED						050-099, 275-299
	15		W0473	221Z			SPARE	150-199
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19		W0473	035	22		31-31-22	ALL
	20		W0473	036	22		31-31-22	ALL
	21	UNUSED						050-099, 275-299
	21		W0473	220B	24		SPARE	150-199
	22	UNUSED						050-099, 275-299
	22		W0473	220R	24		SPARE	150-199
	23	UNUSED						050-099, 275-299
	23		W0473	220Z			SPARE	150-199
	24	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D05400

Page 80 End

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05501J		0574/260/L085		RECP-				275-278
D05501J		0573/265/L085		RECP-				280-299
	1		W1383	015	24		23-34-16	275-299
	2	FL	W1383	017	16		23-34-16	275-299
	3	FL	W1383	016	16		23-34-16	275-299
	4		W1383	014	24		23-34-16	275-278
	4		W1383	303B	24		23-34-16	280-299
	5		W1383	303B	24		23-34-16	275-278
	5		W1383	020	24		23-34-16	280-299
D05505J		AE0317/ /		RCPT-E1-5				ALL
	1	UNUSED						ALL
	2		W1649	008	24		23-51-13	ALL
	3		W1649	008Z			23-51-13	ALL
	4		W1649	010	24		SPARE	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D05505P		AE0317/ /		PLUG-E1-5				ALL
	1	UNUSED						ALL
	2		W0119	251R	24		23-51-13	ALL
	3		W0119	251B	24		23-51-13	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D05506J		AE0218/ /		RCPT-				ALL
	1		W0188	001	22		28-42-11	ALL
	2	UNUSED						050-099, 150-199

HOOKUP LIST
D280T132



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05506J		AE0218/ /		RCPT- (continued)				ALL
	2		W0192	32E	24		21-45-21	275-299
	3		W0188	075	22		28-42-12	ALL
	4		W0188	114	24		21-26-11	ALL
	5		W0188	136	24		36-11-41	ALL
	6		W0188	135	24		36-11-41	ALL
	7		W0188	012	24		21-61-21	ALL
	8		W0188	70A	24		21-61-51	ALL
	9		W0188	018	24		21-58-14	ALL
	10		W0188	013	24		21-61-21	ALL
	11		W0188	006	24		21-58-16	ALL
	12		W0188	11D	22		21-28-11	050-099, 150-199, 275-276
	12	UNUSED						277-299
	13		W0188	015	24		24-22-11	ALL
	14		W0188	126	24		29-11-12	ALL
	15		W0188	127	24		29-11-22	ALL
	16		W0188	016	22		29-11-31	ALL
	17		W0188	017	24		21-53-22	ALL
	18		W0188	207B	22		21-51-23	ALL
	19		W0188	207R	22		21-51-23	ALL
	20	UNUSED						050-099, 150-199
	20		W0188	11G	22		32-45-11	275-299
	21		W0188	014	24		21-61-21	ALL
	22		W0188	11E	22		21-28-11	050-099, 150-199, 275-276
	22	UNUSED						277-299
	23		W0188	70C	20		29-11-14	ALL
	24	UNUSED						050-099, 150-199
	24		W0188	11H	22		32-45-11	275-299
	25		W0188	019	24		29-11-22	ALL
	26		W0188	021	22		29-11-22	ALL
	27		W0188	036	24		29-11-22	ALL
	28		W0188	037	22		29-11-22	ALL
	29	UNUSED						050-099, 150-199
	29		W0188	270Z			32-45-12	275-299
	30		W0188	023	24		21-53-22	ALL
	31		W0188	024	24		21-53-22	ALL
	32		W0188	025	24		21-53-22	ALL
	33		W0188	026	24		21-53-22	ALL
	34		W0188	027	24		21-53-22	ALL
	35		W0188	028	24		21-53-22	ALL
	36		W0188	039	24		21-61-41	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05500

Page 2

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05506J		AE0218/ /		RCPT- (continued)				ALL
	37		W0188	139	24		21-45-21	ALL
	38		W0188	038	24		21-58-11	ALL
	39	UNUSED						050-099, 150-199
	39		W0188	271Z			32-45-12	275-299
	40	UNUSED						050-099, 150-199
	40		W0192	32F	24		21-45-21	275-299
	41		W0188	076R	22		26-18-21	ALL
	42		W0188	124	24		36-11-41	ALL
	43		W0188	125	24		36-11-41	ALL
	44		W0188	042	24		21-61-41	ALL
	45		W0188	70D	20		29-11-14	ALL
	46	UNUSED						ALL
	47		W0188	068	24		36-11-41	ALL
	48		W0188	206B	22		21-51-23	ALL
	49		W0188	206R	22		21-51-23	ALL
	50	UNUSED						050-099, 150-199
	50		W0188	270R	20		32-45-12	275-299
	51	UNUSED						050-099, 150-199
	51		W0188	270B	20		32-45-12	275-299
	52	UNUSED						ALL
	53		W0188	203B	24		21-51-12	ALL
	54		W0188	203R	24		21-51-12	ALL
	55		W0188	100R	22		26-18-21	ALL
	56		W0188	11F	24		21-28-11	ALL
	57		W0188	11A	24		21-43-11	ALL
	58		W0188	11B	24		21-43-11	ALL
	59		W0188	11C	24		21-43-11	ALL
	60		W0188	094	24		30-21-11	050-099, 150-199
	60		W0188	271R	20		32-45-12	275-299
	61	UNUSED						050-099, 150-199
	61		W0188	271B	20		32-45-12	275-299
	DED		W0188	016Z			29-11-31	ALL
	DED		W0188	126Z			29-11-12	ALL
D05506P		AE0218/ /		PLUG-P37				ALL
	1		W0572	001	22		28-42-11	ALL
	2	UNUSED						050-099
	2		W0572	582	22		30-34-41	150-199
	2		W0572	759	24		21-45-21	275-299
	3		W0572	014	22		28-42-12	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05500

Page 3

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05506P		AE0218/ /		PLUG-P37 (continued)				ALL
	4		W0572	060	24		21-26-11	ALL
	5		W0572	599	24		36-11-41	ALL
	6		W0572	598	24		36-11-41	ALL
	7		W0572	138	24		21-61-21	ALL
	8		W0572	042	20		21-61-51	ALL
	9		W0572	542	24		21-58-14	ALL
	10		W0572	640	24		21-61-21	ALL
	11		W0572	595	24		21-58-16	ALL
	12		W0572	645	22		21-28-11	050-099, 150-199, 275-276
	12	UNUSED						277-299
	13		W0572	585	24		24-22-11	ALL
	14		W0572	577	24		29-11-12	ALL
	15		W0572	578	24		29-11-22	ALL
	16		W0572	016	22		29-11-31	ALL
	17		W0572	055	24		21-53-22	ALL
	18		W0572	220B	22		21-51-23	ALL
	19		W0572	220R	22		21-51-23	ALL
	20		W0572	043	20		SPARE	050-099, 150-199
	20		W0572	664	22		32-45-11	275-299
	21		W0572	641	24		21-61-21	ALL
	22		W0572	646	22		21-28-11	050-099, 150-199, 275-276
	22	UNUSED						277-299
	23		W0572	70C	20		29-11-14	ALL
	24	UNUSED						050-099, 155-199
	24		W0572	569	22		SPARE	150-154
	24		W0572	665	22		32-45-11	275-299
	25		W0572	025	24		29-11-22	ALL
	26		W0572	026	22		29-11-22	ALL
	27		W0572	027	24		29-11-22	ALL
	28		W0572	028	22		29-11-22	ALL
	29	UNUSED						050-099, 155-199
	29		W0572	568	22		SPARE	150-154
	29		W0572	223Z			32-45-12	275-299
	30		W0572	056	24		21-53-22	ALL
	31		W0572	057	24		21-53-22	ALL
	32		W0572	013	24		21-53-22	ALL
	33		W0572	022	24		21-53-22	ALL
	34		W0572	023	24		21-53-22	ALL
	35		W0572	037	24		21-53-22	ALL
	36		W0572	642	24		21-61-41	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05500

Page 4

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05506P		AE0218/ /		PLUG-P37 (continued)				ALL
	37		W0572	607	24		21-45-21	ALL
	38		W0572	135	24		21-58-11	ALL
	39	UNUSED						050-099
	39		W0572	570	22		SPARE	150-199
	39		W0572	224Z			32-45-12	275-299
	40	UNUSED						050-099
	40		W0572	081	24		SPARE	150-199
	40		W0572	760	24		21-45-21	275-299
	41		W0572	537R	22		26-18-21	ALL
	42		W0572	562	24		36-11-41	ALL
	43		W0572	563	24		36-11-41	ALL
	44		W0572	643	24		21-61-41	ALL
	45		W0572	70D	20		29-11-14	ALL
	46	UNUSED						050-099
	46		W0572	571	22		SPARE	150-199, 275-299
	47		W0572	137	24		36-11-41	ALL
	48		W0572	221B	22		21-51-23	ALL
	49		W0572	221R	22		21-51-23	ALL
	50		W0572	524	22		SPARE	050-099, 150-199
	50		W0572	223R	20		32-45-12	275-299
	51	UNUSED						050-099, 155-199
	51		W0572	523	22		SPARE	150-154
	51		W0572	223B	20		32-45-12	275-299
	52	FM	W0572	803	16		SPARE	ALL
	53		W0572	216B	24		21-51-12	ALL
	54		W0572	216R	24		21-51-12	ALL
	55		W0572	528R	22		26-18-21	ALL
	56		W0572	647	24		21-28-11	ALL
	57		W0572	648	24		21-43-11	ALL
	58		W0572	649	24		21-43-11	ALL
	59		W0572	650	24		21-43-11	ALL
	60		W0572	683	24		30-21-11	050-099, 150-199
	60		W0572	224R	20		32-45-12	275-299
	61	UNUSED						050-099, 150-199
	61		W0572	224B	20		32-45-12	275-299
D05508J		AL1004/ /		RCPT-				ALL
	1	EO	W0580	141	10		28-22-12	ALL
	2	EO	W0580	142	10		28-22-12	ALL
	3	EO	W0580	143	10		28-22-12	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05500

Page 5

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05508J		AL1004/ /		RCPT- (continued)				ALL
	4	EO	W0580	039	10		28-31-21	050-099, 155-199, 276-299
	4	UNUSED						150-154, 275
	5	EO	W0580	051	10		28-31-21	050-099, 155-199, 276-299
	5	UNUSED						150-154, 275
	6	EO	W0580	052	10		28-31-21	050-099, 155-199, 276-299
	6	UNUSED						150-154, 275
	7	UNUSED						ALL
	8	UNUSED						ALL
D05508P		AL1004/ /		PLUG-R WING RS/BODY				ALL
	1		W0478	301B	14		28-22-12	ALL
	2		W0478	301R	14		28-22-12	ALL
	3		W0478	301Y	14		28-22-12	ALL
	4	UNUSED						050-099, 150-154, 162-164, 275-276
	4		W0478	300B	14		28-31-21	155-157, 165-199, 277-299
	5	UNUSED						050-099, 150-154, 162-164, 275-276
	5		W0478	300R	14		28-31-21	155-157, 165-199, 277-299
	6	UNUSED						050-099, 150-154, 162-164, 275-276
	6		W0478	300Y	14		28-31-21	155-157, 165-199, 277-299
	7	UNUSED						ALL
	8	UNUSED						ALL
D05510J		AL1004/ /		RCPT-				ALL
	1		W1246	024	22		29-21-32	ALL
	2		W1246	004	22		29-21-32	ALL
	3		W1246	005	22		29-21-32	ALL
	4		W1246	006	20		29-21-32	ALL
	5		W1246	007	20		29-21-32	ALL
	6		W1246	008	20		29-21-32	ALL
	7		W1246	001	22		29-31-11	ALL
	8		W1246	201R	24		29-31-11	ALL
	9		W1246	201B	24		29-31-11	ALL
	10		W1246	023	22		29-21-32	ALL
	11		W1246	025	20		29-21-32	ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
D05510P		AL1004/ /		PLUG-R WING/BODY RS DISC				ALL
	1		W0838	017	18		29-21-32	ALL

HOOKUP LIST
D280T132

91-21-51
Section D05500
Page 6
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05510P		AL1004/ /		PLUG-R WING/BODY RS DISC (continued)				ALL
	2		W0838	002	18		29-21-32	ALL
	3		W0838	003	20		29-21-32	ALL
	4		W0838	004	18		29-21-32	ALL
	5		W0838	005	20		29-21-32	ALL
	6		W0838	006	20		29-21-32	ALL
	7		W0838	010	20		29-31-11	ALL
	8		W0838	201R	22		29-31-11	ALL
	9		W0838	201B	22		29-31-11	ALL
	10		W0838	015	18		29-21-32	ALL
	11		W0838	008	18		29-21-32	ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
D05512J		AL1002/ /		RCPT-				ALL
	1	UNUSED						ALL
	2	FO	W0202	034	14		28-22-11	ALL
	3	FO	W0202	035	14		28-22-11	ALL
	4	FO	W0202	036	14		28-22-11	ALL
	5	UNUSED						ALL
	6		W0202	026	18		SPARE	ALL
	7		W0202	801	18		SPARE	ALL
D05512P		AL1002/ /		PLUG-R WING RS/BODY				ALL
	1	UNUSED						ALL
	2		W0476	301B	18		28-22-11	ALL
	3		W0476	301R	18		28-22-11	ALL
	4		W0476	301Y	18		28-22-11	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
D05514J		AL1002/ /		RCPT-R WING RS/BODY				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D05500

Page 7

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05514J		AL1002/ /		RCPT-R WING RS/BODY (continued)				ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12		W0768	044	20		27-13-11	ALL
	13		W0768	045	20		27-13-11	ALL
	14		W0768	046	22		27-13-11	ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
D05514P		AL1002/ /		PLUG-R WING RS/BODY				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12		W0448	301R	20		27-13-11	ALL
	13		W0448	301B	20		27-13-11	ALL
	14		W0448	301Y	20		27-13-11	ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
D05516J		AL1004/ /		RCPT-				ALL
	1		W0588	201R	22		32-61-12	ALL
	2		W0588	201B	22		32-61-12	ALL
	3		W0588	036	20		SPARE	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D05500
Page 8
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05516J		AL1004/ /		RCPT- (continued)				ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
D05516P		AL1004/ /		PLUG-				ALL
	1		W0920	201R	18		32-61-12	ALL
	2		W0920	201B	18		32-61-12	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
D05517J		AE0306/ /		RCPT-				150-199, 275-299
	1		W0669	302R	20		SPARE	150-199
	1	UNUSED						275-299
	2		W0669	302B	20		SPARE	150-199
	2	UNUSED						275-299
	3		W0669	302Y	20		SPARE	150-199
	3	UNUSED						275-299
	4		W0669	303Z			SPARE	150-199
	4	UNUSED						275-299
	5		W0669	303R	20		SPARE	150-199
	5	UNUSED						275-299
	6	UNUSED						150-199, 275-299
	7	UNUSED						150-199, 275-299
	8	UNUSED						150-199, 275-299
	9	UNUSED						150-199, 275-299
	10	UNUSED						150-199, 275-299
	11	UNUSED						150-199, 275-299
	12	UNUSED						150-199, 275-299
	13		W0669	303B	20		SPARE	150-199
	13	UNUSED						275-299
	14		W0669	303Y	20		SPARE	150-199
	14	UNUSED						275-299
	15	UNUSED						150-199, 275-299
	16	UNUSED						150-199, 275-299
	17	UNUSED						150-199, 275-299
	18		W0669	203R	22		SPARE	150-199, 275-299
	19		W0669	203B	22		SPARE	150-199, 275-299
	20		W0669	203Z			SPARE	150-199, 275-299

HOOKUP LIST

D280T132

91-21-51

Section D05500

Page 9

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05517J		AE0306/ /		RCPT- (continued)				150-199, 275-299
	21	UNUSED						150-199, 275-299
	22	UNUSED						150-199, 275-299
	23	UNUSED						150-199, 275-299
	24	UNUSED						150-199, 275-299
	25		W0669	003	22		SPARE	150-199, 275-299
	26	UNUSED						150-199, 275-299
	27	UNUSED						150-199, 275-299
	28	UNUSED						150-199, 275-299
	29	UNUSED						150-199, 275-299
	30	UNUSED						150-199, 275-299
	31	UNUSED						150-199, 275-299
D05518J		AC0702/ /		RCPT-				ALL
	1		W0598	046R	22		26-11-21	ALL
	2		W0598	047R	22		26-11-21	ALL
	3		W0598	048R	22		26-11-21	ALL
	4		W0598	056R	22		26-11-22	ALL
	5		W0598	057R	22		26-11-22	ALL
	6		W0598	058R	22		26-11-22	ALL
	7		W0598	803R	20		SPARE	ALL
D05518P		AC0702/ /		PLUG-R WING FS/BODY				ALL
	1		W0404	456R	18		26-11-21	ALL
	2		W0404	455R	18		26-11-21	ALL
	3		W0404	452R	18		26-11-21	ALL
	4		W0404	457R	18		26-11-22	ALL
	5		W0404	454R	18		26-11-22	ALL
	6		W0404	451R	18		26-11-22	ALL
	7	UNUSED						ALL
D05519J		AE0320/ /		RCPT-				150-199, 275-299
	1	UNUSED						150-199, 275-299
	2	UNUSED						150-199, 275-299
	3	UNUSED						150-199, 275-299
	4	UNUSED						150-199, 275-299
	5	UNUSED						150-199, 275-299
	6	UNUSED						150-199, 275-299
	7	UNUSED						150-199, 275-299
	8	UNUSED						150-199, 275-299
	9	UNUSED						150-199, 275-299

HOOKUP LIST

D280T132

91-21-51

Section D05500

Page 10

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05519J		AE0320 / /		RCPT- (continued)				150-199, 275-299
	10	UNUSED						150-199, 275-299
	11	UNUSED						150-199, 275-299
	12	UNUSED						150-199, 275-299
	13	UNUSED						150-199, 275-299
	14	UNUSED						150-199, 275-299
	15	UNUSED						150-199, 275-299
	16	UNUSED						150-199, 275-299
	17	UNUSED						150-199, 275-299
	18		W0671	203R	22		SPARE	150-199, 275-299
	19		W0671	203B	22		SPARE	150-199, 275-299
	20		W0671	203Z			SPARE	150-199, 275-299
	21	UNUSED						150-199, 275-299
	22	UNUSED						150-199, 275-299
	23	UNUSED						150-199, 275-299
	24	UNUSED						150-199, 275-299
	25		W0671	003	22		SPARE	150-199, 275-299
	26	UNUSED						150-199, 275-299
	27	UNUSED						150-199, 275-299
	28	UNUSED						150-199, 275-299
	29	UNUSED						150-199, 275-299
	30	UNUSED						150-199, 275-299
	31	UNUSED						150-199, 275-299
D05520J		AL1002 / /		RCPT-				ALL
	1		W0598	004	18		28-22-21	ALL
	2		W0598	027	22		28-21-13	ALL
	3		W0598	024	20		28-21-13	ALL
	4		W0598	028	22		28-21-13	ALL
	5		W0598	025	20		28-21-13	ALL
	6		W0598	020	20		28-26-11	ALL
	7		W0598	021	20		28-26-11	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11		W0598	060	20		27-11-22	ALL
	12		W0598	062	18		27-11-22	ALL
	13		W0598	063	18		27-11-22	ALL
	14		W0598	061	20		27-11-22	ALL
	15		W0598	065	18		28-22-21	ALL
	16	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D05500

Page 11

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05520J		AL1002/ /		RCPT- (continued)				ALL
	17		W0598	071	22		28-22-21	ALL
	18		W0598	070	20		28-26-11	ALL
	19		W0598	072	18		27-11-22	ALL
	20		W0598	030	20		28-21-13	ALL
	21		W0598	029	20		28-21-13	ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
D05520P		AL1002/ /		PLUG-R WING RS/BODY				ALL
	1		W0456	302B	20		28-22-21	ALL
	2		W0456	402B	20		28-21-13	ALL
	3		W0456	402G	20		28-21-13	ALL
	4		W0456	201R	20		28-21-13	ALL
	5		W0456	201B	20		28-21-13	ALL
	6		W0456	303B	20		28-26-11	ALL
	7		W0456	303R	20		28-26-11	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11		W0456	401R	20		27-11-22	ALL
	12		W0456	401G	20		27-11-22	ALL
	13		W0456	401B	20		27-11-22	ALL
	14		W0456	401Y	20		27-11-22	ALL
	15		W0456	302R	20		28-22-21	ALL
	16	UNUSED						ALL
	17		W0456	302Y	20		28-22-21	ALL
	18		W0456	303Y	20		28-26-11	ALL
	19		W0456	015	18		27-11-22	ALL
	20		W0456	402R	20		28-21-13	ALL
	21		W0456	402Y	20		28-21-13	ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D05500

Page 12

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05520P		AL1002/ /		PLUG-R WING RS/BODY (continued)				ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
D05522J		AC0702/ /		RCPT-				ALL
	1		W0606	046R	22		26-11-21	ALL
	2		W0606	047R	22		26-11-21	ALL
	3		W0606	048R	22		26-11-21	ALL
	4		W0606	056R	22		26-11-22	ALL
	5		W0606	057R	22		26-11-22	ALL
	6		W0606	058R	22		26-11-22	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10		W0606	506	22		29-11-21	ALL
	11		W0606	507	22		29-11-21	ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
D05522P		AC0702/ /		PLUG-R WING FRONT SPAR/BODY				ALL
	1		W0426	456R	18		26-11-21	ALL
	2		W0426	455R	18		26-11-21	ALL
	3		W0426	452R	18		26-11-21	ALL
	4		W0426	457R	18		26-11-22	ALL
	5		W0426	454R	18		26-11-22	ALL
	6		W0426	451R	18		26-11-22	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9		W0426	453R	18		SPARE	ALL
	10		W0426	002	18		29-11-21	ALL
	11		W0426	001	18		29-11-21	ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D05500

Page 13

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05523J		AE0319/ /		RCPT-				ALL
	1	UNUSED						ALL
	2		W0397	052	24		SPARE	ALL
	3	UNUSED						ALL
	4		W0397	206R	24		SPARE	ALL
	5		W0397	206B	24		SPARE	ALL
	6		W0397	206Z			SPARE	ALL
	7		W0397	027	24		22-14-11	ALL
	8		W0397	028	24		22-14-11	ALL
	9		W0397	029	24		22-14-11	ALL
	10		W0397	019	24		31-31-26	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13		W0397	043	24		34-46-12	ALL
	14	UNUSED						ALL
	15		W0397	045	24		34-46-12	ALL
	16		W0397	046	24		SPARE	050-099
	16	UNUSED						150-199, 275-299
	17		W0397	050	24		SPARE	ALL
	18		W0397	048	24		34-46-12	ALL
	19		W0397	211R	24		34-22-91	ALL
	20		W0397	211B	24		34-22-91	ALL
	21		W0397	211Z			34-22-91	ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
D05523P		AE0319/ /		PLUG-E1-5				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D05500

Page 14

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05523P		AE0319/ /		PLUG-E1-5 (continued)				ALL
	7		W0109	068	24		22-14-11	ALL
	8		W0109	064	24		22-14-11	ALL
	9		W0109	072	24		22-14-11	ALL
	10		W0109	023	24		31-31-26	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13		W0109	707	24		34-46-12	ALL
	14	UNUSED						ALL
	15		W0109	712	24		34-46-12	ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18		W0109	025	22		34-46-12	ALL
	19		W0109	201R	24		34-22-91	ALL
	20		W0109	201B	24		34-22-91	ALL
	21		W0109	201Z			34-22-91	ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
D05525J		AE0305/ /		RCPT-E1-5				ALL
	1		W0451	017	24		27-32-11	ALL
	2		W0451	032	24		31-51-21	ALL
	3	UNUSED						050-099
	3		W0451	035	24		21-61-51	150-199
	3		W0451	045	24		34-16-11	275-299
	4		W0451	046	24		SPARE	050-099
	4	UNUSED						150-199
	4		W0451	046	24		34-16-11	275-299
	5		W0451	110	20		38-32-11	050-099, 150-199, 277-299
	5	UNUSED						275
	5		W0451	110	20		SPARE	276
	6		W0451	003	24		31-51-21	ALL
	7		W0451	201R	24		34-46-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05500

Page 15

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05525J		AE0305/ /		RCPT-E1-5 (continued)				ALL
	8		W0451	201B	24		34-46-11	ALL
	9		W0451	201Z			34-46-11	ALL
	10		W0451	204R	24		27-32-11	ALL
	11		W0451	204B	24		27-32-11	ALL
	12		W0451	204Z			27-32-11	ALL
	13		W0451	205R	24		27-32-11	ALL
	14		W0451	205B	24		27-32-11	ALL
	15		W0451	205Z			27-32-11	ALL
	16		W0451	035	24		21-61-51	050-099, 275-299
	16	UNUSED						150-199
	17		W0451	057	22		21-66-11	050-099, 162-199
	17	UNUSED						150-157, 275-299
	18		W0451	058	22		21-66-11	050-099, 162-199
	18	UNUSED						150-157, 275-299
	19		W0451	059	22		21-66-11	050-099, 162-199
	19	UNUSED						150-157, 275-299
	20		W0451	060	22		21-66-41	050-099, 150, 152-199
	20	UNUSED						151, 275-299
	21		W0451	061	22		21-66-21	050-099, 162-199
	21	UNUSED						150-157, 275-299
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D05525P		AE0305/ /		PLUG-E1-5				ALL
	1		W0109	020	24		27-32-11	ALL
	2		W0109	102	24		31-51-21	ALL
	3	UNUSED						050-099
	3		W0109	030	24		21-61-51	150-199
	3		W0109	095	24		34-16-11	275-299
	4	UNUSED						050-099, 150-199
	4		W0109	096	24		34-16-11	275-299
	5		W0109	112	20		38-32-11	050-099, 150-199, 277-299
	5	UNUSED						275
	5		W0109	112	20		SPARE	276
	6		W0109	718	24		31-51-21	ALL
	7		W0109	606R	24		34-46-11	ALL
	8		W0109	606B	24		34-46-11	ALL
	9		W0109	606Z			34-46-11	ALL
	10		W0109	203R	24		27-32-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05500

Page 16

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05525P		AE0305/ /		PLUG-E1-5 (continued)				ALL
	11		W0109	203B	24		27-32-11	ALL
	12		W0109	203Z			27-32-11	ALL
	13		W0109	204R	24		27-32-11	ALL
	14		W0109	204B	24		27-32-11	ALL
	15		W0109	204Z			27-32-11	ALL
	16		W0109	030	24		21-61-51	050-099, 275-299
	16	UNUSED						150-199
	17		W0109	517	22		21-66-11	050-099, 162-199
	17	UNUSED						150-157, 275-299
	18		W0109	518	22		21-66-11	050-099, 162-199
	18	UNUSED						150-157, 275-299
	19		W0109	519	22		21-66-11	050-099, 162-199
	19	UNUSED						150-157, 275-299
	20		W0109	520	22		21-66-41	050-099, 150, 152-199
	20	UNUSED						151, 275-299
	21		W0109	522	22		21-66-21	050-099, 162-199
	21	UNUSED						150-157, 275-299
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D05527J		640/315/L015		RCPT-				275-278
D05527J		639/315/L013		RCPT-				280-299
	1		W1381	015	24		23-34-17	275-299
	2	FL	W1381	017	16		23-34-17	275-299
	3	FL	W1381	016	16		23-34-17	275-299
	4		W1381	014	24		23-34-17	275-278
	4		W1381	303B	24		23-34-17	280-299
	5		W1381	303B	24		23-34-17	275-278
	5		W1381	020	24		23-34-17	280-299
D05528J		AC0702/ /		RCPT-R WING BODY DISC				ALL
	1		W0656	090	24		36-11-62	ALL
	2		W0656	091	24		36-11-62	ALL
	3	DK	W0656	092	18		36-11-62	ALL
	4	DK	W0656	082	18		SPARE	ALL
	5	DK	W0656	093	18		36-11-62	ALL
	6		W0656	094	24		36-11-62	ALL
	7		W0656	095	24		36-11-62	ALL
	8		W0656	096	24		36-11-62	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05500

Page 17

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05528J		AC0702/ /		RCPT-R WING BODY DISC (continued)				ALL
	9		W0656	029	22		29-11-22	ALL
	10		W0656	098	24		36-11-62	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13		W0656	160	24		36-11-62	ALL
	14		W0656	036	24		29-32-11	ALL
	15		W0656	037	24		29-32-11	ALL
	16	UNUSED						ALL
	17		W0656	056	22		29-33-11	ALL
	18		W0656	001R	22		26-18-21	ALL
	19		W0656	054	22		29-33-11	ALL
	20		W0656	055	22		29-33-11	ALL
	21	UNUSED						ALL
	22		W0656	072	22		29-32-11	ALL
	23		W0656	089	22		36-22-11	ALL
	24		W0656	088	24		36-11-52	ALL
	25		W0656	081	24		36-11-52	ALL
	26	DK	W0656	087	18		36-11-52	ALL
	27	DK	W0656	086	18		36-11-52	ALL
	28		W0656	FRA			29-33-11	ALL
	29		W0656	FRB			29-33-11	ALL
	30		W0656	084	24		36-23-21	050-099, 155-199, 276-299
	30		W0656	084	24		SPARE	150-154, 275
	31		W0656	102	24		36-23-21	ALL
	32		W0656	103	24		36-23-21	ALL
	33		W0656	301B	24		36-23-21	ALL
	34		W0656	301R	24		36-23-21	ALL
	35		W0656	301Y	24		36-23-21	ALL
	36		W0656	301Z			36-23-21	ALL
	37		W0656	101	24		36-23-21	ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40		W0656	079	24		36-11-62	ALL
	41		W0656	080	24		36-11-62	ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	44		W0656	100	24		36-23-21	ALL
	45		W0656	202B	20		36-22-21	ALL
	46		W0656	202R	20		36-22-21	ALL
	47		W0656	053	22		29-33-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05500

Page 18

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05528J		AC0702/ /		RCPT-R WING BODY DISC (continued)				ALL
	48		W0656	FRC			29-33-11	ALL
	49		W0656	083	24		36-11-52	ALL
	50		W0656	085	24		36-11-52	ALL
	51		W0656	413R	22		26-18-22	ALL
	52		W0656	412R	22		26-18-22	ALL
	53		W0656	192B	24		36-11-62	ALL
	54		W0656	192R	24		36-11-62	ALL
	55		W0656	191	24		36-11-62	ALL
	56	UNUSED						050-099, 150-155, 162-165, 275-276
	57	UNUSED						050-099, 150-155, 162-165, 275-276
	58	UNUSED						050-099, 150-155, 162-165, 275-276
	59	UNUSED						050-099, 150-155, 162-165, 275-276
	60	UNUSED						050-099, 150-155, 162-165, 275-276
	61	UNUSED						050-099, 150-155, 162-165, 275-276
			W0656	053Z			29-33-11	ALL
			W0656	FRA			29-33-11	ALL
			W0656	FRB			29-33-11	ALL
			W0656	FRC			29-33-11	ALL
D05528P		AC0702/ /		PLUG-R WING FS/BODY				ALL
	1		W0408	001	20		36-11-62	ALL
	2		W0408	002	20		36-11-62	ALL
	3	DL	W0408	003	18		36-11-62	ALL
	4	DL	W0408	004	18		SPARE	ALL
	5	DL	W0408	005	18		36-11-62	ALL
	6		W0408	006	20		36-11-62	ALL
	7		W0408	007	20		36-11-62	ALL
	8		W0408	011	20		36-11-62	ALL
	9		W0408	081	20		29-11-22	ALL
	10		W0408	010	20		36-11-62	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13		W0408	042	20		36-11-62	ALL
	14		W0408	045	20		29-32-11	ALL
	15		W0408	048	20		29-32-11	ALL
	16	UNUSED						ALL
	17		W0408	049	20		29-33-11	ALL
	18	DL	W0408	084R	18		26-18-21	ALL
	19		W0408	051	20		29-33-11	ALL
	20		W0408	052	20		29-33-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05500

Page 19

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05528P		AC0702/ /		PLUG-R WING FS/BODY (continued)				ALL
	21	UNUSED						ALL
	22		W0408	058	20		29-32-11	ALL
	23		W0408	059	20		36-22-11	ALL
	24		W0408	060	20		36-11-52	ALL
	25		W0408	061	20		36-11-52	ALL
	26	DL	W0408	062	18		36-11-52	ALL
	27	DL	W0408	064	18		36-11-52	ALL
	28		W0408	FRD			29-33-11	ALL
	29		W0408	FRE			29-33-11	ALL
	30		W0408	067	20		36-23-21	ALL
	31		W0408	069	20		36-23-21	ALL
	32		W0408	070	20		36-23-21	ALL
	33		W0408	301B	20		36-23-21	ALL
	34		W0408	301R	20		36-23-21	ALL
	35		W0408	301Y	20		36-23-21	ALL
	36		W0408	301Z	20		36-23-21	ALL
	37		W0408	075	20		36-23-21	ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40		W0408	008	20		36-11-62	ALL
	41		W0408	009	20		36-11-62	ALL
	42		W0408	201B	20		SPARE	050-099, 150-156, 162-166, 275-278
	42	Y	W0408	201B	20		SPARE	157, 167-199, 280-299
	43		W0408	201R	20		SPARE	ALL
	44		W0408	074	20		36-23-21	ALL
	45		W0408	209B	20		36-22-21	ALL
	46		W0408	209R	20		36-22-21	ALL
	47		W0408	053	20		29-33-11	ALL
	48		W0408	FRF			29-33-11	ALL
	49		W0408	065	20		36-11-52	ALL
	50		W0408	066	20		36-11-52	ALL
	51	DL	W0408	046R	18		26-18-22	ALL
	52	DL	W0408	047R	18		26-18-22	ALL
	53		W0408	223B	20		36-11-62	ALL
	54		W0408	223R	20		36-11-62	ALL
	55		W0408	118	20		36-11-62	ALL
	56	UNUSED						050-099, 150-155, 162-165, 275-276
	57	UNUSED						050-099, 150-155, 162-165, 275-276
	58	UNUSED						050-099, 150-155, 162-165, 275-276
	59	UNUSED						050-099, 150-155, 162-165, 275-276

HOOKUP LIST

D280T132

91-21-51

Section D05500

Page 20

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05528P		AC0702/ /		PLUG-R WING FS/BODY (continued)				ALL
	60	UNUSED						050-099, 150-155, 162-165, 275-276
	61	UNUSED						050-099, 150-155, 162-165, 275-276
	= CC	M	W0408	223Z			36-11-62	ALL
			W0408	053Z			29-33-11	ALL
			W0408	FRD			29-33-11	ALL
			W0408	FRE			29-33-11	ALL
			W0408	FRF			29-33-11	ALL
D05529J		AE0317/ /		RCPT-E1-4				ALL
	1		W1513	207W	24		34-43-11	ALL
	2		W1513	207WB	24		34-43-11	ALL
	3		W1513	207Z			34-43-11	ALL
	4		W1513	004	22		SPARE	ALL
	5		W1513	005	22		SPARE	050-099
	5	UNUSED						150-199, 275-299
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9		W1513	201R	24		22-12-21	ALL
	10		W1513	201B	24		22-12-21	ALL
	11		W1513	201Z			22-12-21	ALL
	12	UNUSED						ALL
D05529P		AE0317/ /		PLUG-E1-4				ALL
	1		W0117	257W	24		34-43-11	ALL
	2		W0117	257WB	24		34-43-11	ALL
	3		W0117	257Z			34-43-11	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9		W0117	201R	24		22-12-21	ALL
	10		W0117	201B	24		22-12-21	ALL
	11		W0117	201Z			22-12-21	ALL
	12	UNUSED						ALL
D05530J		AC0702/ /		RCPT-				ALL
	1		W0588	007	24		29-11-22	ALL
	2		W0588	006	22		29-11-22	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05500

Page 21

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05530J		AC0702/ /		RCPT- (continued)				ALL
	3		W0588	045	22		29-11-22	ALL
	4	UNUSED						ALL
	5		W0588	008	22		29-11-22	ALL
	6		W0588	043	24		29-11-22	ALL
	7	UNUSED						ALL
	8		W0588	035	22		SPARE	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D05530P		AC0702/ /		PLUG-R WING FS/BODY				ALL
	1		W0442	001	20		29-11-22	ALL
	2		W0442	002	20		29-11-22	ALL
	3		W0442	210B	20		29-11-22	ALL
	4	UNUSED						ALL
	5		W0442	004	20		29-11-22	ALL
	6		W0442	210R	20		29-11-22	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D05531J		1211/270/L083		RCPT-				050-099
D05531J		1197+014/270/L083		RCPT-				150-199, 275-278
D05531J		1197+08/270/L083		RCPT-				280-299
	1		W1443	001	24		23-34-18	ALL
	2	FL	W1443	002	16		23-34-18	ALL
	3	FL	W1443	003	16		23-34-18	ALL
	4		W1443	004	24		23-34-18	ALL
	5		W1443	302R	24		23-34-18	ALL
D05533J		1205/270/L083		RCPT-				050-099
D05533J		1197+008/270/L083		RCPT-				150-199, 275-299
	1		W1443	005	24		23-34-18	ALL
	2	FL	W1443	007	16		23-34-18	ALL
	3	FL	W1443	006	16		23-34-18	ALL
	4		W1443	004	24		23-34-18	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05500

Page 22

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05533J		1205/270/L083		RCPT- (continued)				050-099
D05533J		1197+008/270/L083		RCPT- (continued)				150-199, 275-299
	5		W1443	302B	24		23-34-18	ALL
D05540J		AE0226/ /		RCPT-P54				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W1082	853R	22		26-18-11	ALL
	4		W1082	854R	22		26-18-21	ALL
	5		W1082	855R	22		26-18-31	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8		W1082	012R	22		26-18-12	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D05540P		AE0226/ /		PLUG-P54				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W1704	013R	22		26-18-11	ALL
	4		W1704	014R	22		26-18-21	ALL
	5		W1704	015R	22		26-18-31	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8		W1704	018R	22		26-18-12	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D05541J		AE0224/ /		RCPT-P37				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W0192	630	24		23-31-13	ALL
	4	UNUSED						ALL
	5	UNUSED						050-099, 275-299
	5	FM	W0192	087	16		23-34-11	150-199
	6	UNUSED						050-099, 275-299
	6	FM	W0192	088	16		23-34-11	150-199

HOOKUP LIST
D280T132

91-21-51
Section D05500
Page 23
Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05541J		AE0224/ /		RCPT-P37 (continued)				ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11		W0192	120	24		23-12-21	ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15		W0192	087	16		23-34-11	050-099, 275-299 150-199
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19		W0192	088	16		23-34-11	050-099, 275-299 150-199
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
D05541P		AE0224/ /		PLUG-P37				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W0853	003	24		23-31-13	ALL
	4		W0853	004	22		SPARE	ALL
	5	UNUSED						050-099, 275-299
	5	FL	W0853	005	16		23-34-11	150-199
	6	UNUSED						050-099, 275-299
	6	FL	W0853	006	16		23-34-11	150-199
	7		W0853	015	24		SPARE	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11		W0853	020	24		23-12-21	ALL
	12		W0853	013	20		SPARE	ALL

HOOKUP LIST
D280T132

91-21-51
Section D05500
Page 24
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05541P		AE0224/ /		PLUG-P37 (continued)				ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15		W0853	005	16		23-34-11	050-099, 275-299
	15	UNUSED						150-199
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19		W0853	006	16		23-34-11	050-099, 275-299
	19	UNUSED						150-199
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
D05544J		AE0305/ /		RCPT-				ALL
	1		W0588	201R	22		32-61-12	ALL
	2		W0588	201B	22		32-61-12	ALL
	3		W0588	057	22		27-89-11	ALL
	4		W0588	058	22		27-89-11	ALL
	5		W0588	203R	22		32-61-12	ALL
	6		W0588	203B	22		32-61-12	ALL
	7		W0588	204R	22		32-61-12	ALL
	8		W0588	204B	22		32-61-12	ALL
	9		W0588	205R	22		32-09-11	ALL
	10		W0588	205B	22		32-09-11	ALL
	11		W0588	027	24		21-31-21	ALL
	12		W0588	209B	24		21-31-21	ALL
	13		W0588	209R	24		21-31-21	ALL
	14		W0588	210B	24		21-31-21	ALL
	15		W0588	210R	24		21-31-21	ALL
	16	UNUSED						ALL
	17		W0588	059	22		27-89-11	ALL
	18		W0588	060	22		27-89-11	ALL
	19		W0588	049	22		78-36-11	ALL
	20	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D05500

Page 25

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05544J		AE0305/ /		RCPT- (continued)				ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D05544P		AE0305/ /		PLUG-E1-2				ALL
	1		W1092	241R	24		32-61-12	ALL
	2		W1092	241B	24		32-61-12	ALL
	3		W1092	0AP	24		27-88-11	ALL
	4		W1092	01G	24		27-32-21	ALL
	5		W1092	243R	24		32-61-12	ALL
	6		W1092	243B	24		32-61-12	ALL
	7		W1092	244R	24		32-61-12	ALL
	8		W1092	244B	24		32-61-12	ALL
	9		W1092	261R	24		32-09-11	ALL
	10		W1092	261B	24		32-09-11	ALL
	11		W1092	020	24		21-31-11	ALL
	12		W1092	203R	24		21-31-11	ALL
	13		W1092	203B	24		21-31-11	ALL
	14		W1092	204R	24		21-31-11	ALL
	15		W1092	204B	24		21-31-11	ALL
	16	UNUSED						ALL
	17		W1092	01C	24		27-32-11	ALL
	18		W1092	0AQ	24		27-81-21	ALL
	19		W1092	052	22		78-36-11	ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	DED		W1092	052Z			78-36-11	ALL
D05546J		AE0226/ /		RCPT-P54				ALL
	1	UNUSED						ALL
	2		W1082	702R	22		26-11-11	ALL
	3		W1082	703R	22		26-11-12	ALL
	4		W1082	704R	22		26-11-21	ALL
	5		W1082	705R	22		26-11-22	ALL
	6		W1082	706R	22		26-15-11	ALL
	7		W1082	707R	22		26-11-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05500

Page 26

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05546J		AE0226/ /		RCPT-P54 (continued)				ALL
	8		W1082	708R	22		26-11-12	ALL
	9	UNUSED						ALL
	10		W1082	710R	22		26-11-11	ALL
	11	UNUSED						ALL
	12		W1082	712R	24		26-16-11	ALL
	13		W1082	713R	24		26-16-11	ALL
	14		W1082	714R	24		26-16-11	ALL
	15	UNUSED						ALL
D05546P		AE0226/ /		PLUG-P54				ALL
	1	UNUSED						ALL
	2		W1718	002R	22		26-11-11	ALL
	3		W1718	003R	22		26-11-12	ALL
	4		W1718	004R	22		26-11-21	ALL
	5		W1718	005R	22		26-11-22	ALL
	6		W1718	006R	22		26-15-11	ALL
	7		W1718	007R	22		26-11-11	ALL
	8		W1718	008R	22		26-11-12	ALL
	9		W1718	009	24		SPARE	ALL
	10		W1718	010R	22		26-11-11	ALL
	11	UNUSED						ALL
	12		W1718	036R	24		26-16-11	ALL
	13		W1718	037R	24		26-16-11	ALL
	14		W1718	038R	24		26-16-11	ALL
	15		W1718	039	24		SPARE	ALL
D05547J		AE0308/ /		RCPT-E2-1				ALL
	1		W0131	002	22		22-21-21	ALL
	2		W0131	001	22		22-22-21	ALL
	3		W0131	024	22		22-24-21	ALL
	4	UNUSED						050-099, 155-199, 275-299
	4		W0131	025	22		27-41-21	150-154
	5		W0131	022	22		22-24-21	ALL
	6		W0131	023	22		22-24-21	ALL
	7		W0131	058	22		27-09-12	ALL
	8		W0131	059	22		27-09-13	ALL
	9		W0131	060	22		27-09-13	ALL
	10		W0131	065	22		27-11-22	ALL
	11		W0131	066	22		27-11-22	ALL
	12		W0131	067	22		27-21-12	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05500

Page 27

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05547J		AE0308/ /		RCPT-E2-1 (continued)				ALL
	13		W0131	133	22		27-21-22	ALL
	14	UNUSED						ALL
	15		W0131	201R	24		22-21-21	ALL
	16		W0131	201B	24		22-21-21	ALL
	17		W0131	FRE			22-21-21	ALL
	18		W0131	207R	24		27-11-22	ALL
	19		W0131	207B	24		27-11-22	ALL
	20		W0131	FRF			27-11-22	ALL
	21	UNUSED						ALL
	22		W0131	134	22		27-21-22	ALL
	23		W0131	135	22		27-21-22	ALL
	24		W0131	136	22		27-21-22	ALL
	25		W0131	079	22		27-41-21	ALL
	26		W0131	080	22		27-41-21	ALL
	27		W0131	081	22		27-41-21	ALL
	28		W0131	078	22		27-41-21	ALL
	29		W0131	092	22		27-61-11	ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34		W0131	228R	22		27-21-22	ALL
	35		W0131	228B	22		27-21-22	ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
			W0131	201	20		22-21-21	ALL
			W0131	201Z			22-21-21	ALL
			W0131	207	20		27-11-22	ALL
			W0131	207Z			27-11-22	ALL
			W0131	FRE			22-21-21	ALL
			W0131	FRF			27-11-22	ALL
D05547P		AE0308/ /		PLUG-E2-1				ALL
	1		W1601	001	22		22-21-21	ALL
	2		W1601	002	22		22-22-11	ALL
	3		W1601	003	22		22-24-11	ALL

HOOKUP LIST
D280T132

91-21-51
Section D05500
Page 28
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05547P		AE0308/ /		PLUG-E2-1 (continued)				ALL
	4	UNUSED						050-099, 155-199, 275-299
	4		W1601	004	22		27-41-21	150-154
	5		W1601	005	22		22-24-11	ALL
	6		W1601	006	22		22-24-11	ALL
	7		W1601	007	22		27-09-12	ALL
	8		W1601	008	22		27-09-13	ALL
	9		W1601	009	22		27-09-13	ALL
	10		W1601	010	22		27-11-22	ALL
	11		W1601	011	22		27-11-22	ALL
	12		W1601	012	22		27-21-12	ALL
	13		W1601	013	22		27-21-22	ALL
	14	UNUSED						ALL
	15		W1601	201R	24		22-21-21	ALL
	16		W1601	201B	24		22-21-21	ALL
	17		W1601	201Z			22-21-21	ALL
	18		W1601	202R	24		27-11-22	ALL
	19		W1601	202B	24		27-11-22	ALL
	20		W1601	202Z			27-11-22	ALL
	21	UNUSED						ALL
	22		W1601	022	22		27-21-22	ALL
	23		W1601	023	22		27-21-22	ALL
	24		W1601	024	22		27-21-22	ALL
	25		W1601	025	22		27-41-11	ALL
	26		W1601	026	22		27-41-11	ALL
	27		W1601	027	22		27-41-11	ALL
	28		W1601	028	22		27-41-11	ALL
	29		W1601	029	22		27-61-11	ALL
	30		W1601	030	22		SPARE	ALL
	31		W1601	031	22		SPARE	ALL
	32		W1601	032	22		SPARE	ALL
	33		W1601	033	22		SPARE	ALL
	34		W1601	203R	22		27-21-22	ALL
	35		W1601	203B	22		27-21-22	ALL
	36		W1601	041	22		SPARE	ALL
	37		W1601	042	22		SPARE	ALL
	38		W1601	204R	24		SPARE	ALL
	39		W1601	204B	24		SPARE	ALL
	40		W1601	204Z			SPARE	ALL
	41	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D05500

Page 29

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05548J		AE0226/ /		RCPT-P54				ALL
	1	UNUSED						ALL
	2		W1082	722R	22		26-11-11	ALL
	3		W1082	723R	22		26-11-12	ALL
	4		W1082	724R	22		26-11-21	ALL
	5		W1082	725R	22		26-11-22	ALL
	6		W1082	726R	22		26-15-11	ALL
	7		W1082	727R	22		26-11-21	ALL
	8		W1082	728R	22		26-11-22	ALL
	9		W1082	729R	22		26-15-11	ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12		W1082	732R	24		26-16-11	ALL
	13		W1082	733R	24		26-16-11	ALL
	14		W1082	734R	24		26-16-11	ALL
	15		W1082	735R	22		26-17-11	ALL
D05548P		AE0226/ /		PLUG-P54				ALL
	1	UNUSED						ALL
	2		W1720	002R	22		26-11-11	ALL
	3		W1720	003R	22		26-11-12	ALL
	4		W1720	004R	22		26-11-21	ALL
	5		W1720	005R	22		26-11-22	ALL
	6		W1720	006R	22		26-15-11	ALL
	7		W1720	007R	22		26-11-21	ALL
	8		W1720	008R	22		26-11-22	ALL
	9		W1720	009R	22		26-15-11	ALL
	10		W1720	010	24		SPARE	ALL
	11		W1720	011	24		SPARE	ALL
	12		W1720	012R	24		26-16-11	ALL
	13		W1720	013R	24		26-16-11	ALL
	14		W1720	014R	24		26-16-11	ALL
	15		W1720	015R	22		26-17-11	ALL
D05549J		AE0303/ /		RCPT-E1-1				ALL
	1		W0111	132	22		22-21-11	ALL
	2		W0111	133	22		22-21-11	ALL
	3		W0111	130	22		22-21-11	ALL
	4		W0111	003	22		27-09-14	ALL
	5	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D05500

Page 30

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05549J		AE0303/ /		RCPT-E1-1 (continued)				ALL
	6	UNUSED						ALL
	7		W0111	170	22		22-22-11	ALL
	8		W0111	147	22		22-24-11	ALL
	9		W0111	145	22		22-24-11	ALL
	10		W0111	146	22		22-24-11	ALL
	11		W0111	075	22		27-09-12	ALL
	12		W0111	086	22		27-09-13	ALL
	13		W0111	087	22		27-09-13	ALL
	14	UNUSED						ALL
	15		W0111	148	22		27-41-11	ALL
	16		W0111	149	22		27-41-11	ALL
	17		W0111	002	22		27-11-12	ALL
	18		W0111	001	22		27-11-12	ALL
	19		W0111	159	22		27-41-11	ALL
	20		W0111	105	22		27-61-11	ALL
	21		W0111	109	22		27-61-12	ALL
	22		W0111	007	22		27-09-14	ALL
	23		W0111	150	22		27-41-11	ALL
	24		W0111	216R	24		22-21-11	ALL
	25		W0111	216B	24		22-21-11	ALL
	26		W0111	FRE			22-21-11	ALL
	27		W0111	222R	24		27-11-12	ALL
	28		W0111	222B	24		27-11-12	ALL
	29		W0111	FRF			27-11-12	ALL
	30		W0111	006	22		27-21-12	ALL
	31		W0111	116	22		27-21-12	ALL
	32	UNUSED						050-099
	32		W0111	232R	24		22-21-31	150-199, 275-299
	33	UNUSED						ALL
	34	UNUSED						050-099
	34		W0111	232B	24		22-21-31	150-199, 275-299
	35		W0111	203R	22		27-21-12	ALL
	36		W0111	203B	22		27-21-12	ALL
	37		W0111	113	22		27-21-12	ALL
	38		W0111	114	22		27-21-12	ALL
	39		W0111	115	22		27-21-12	ALL
	40		W0111	192	22		27-61-15	ALL
	41		W0111	193	20		27-61-15	ALL
	42		W0111	189	22		27-41-11	ALL
	43		W0111	190	22		27-41-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05500

Page 31

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05549J		AE0303/ /		RCPT-E1-1 (continued)				ALL
	44	UNUSED						ALL
	45		W0111	089	22		27-09-14	ALL
	46		W0111	096	22		27-09-14	ALL
	47		W0111	181	22		27-09-14	ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						050-099
	50		W0111	232Z			22-21-31	150-199, 275-299
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
			W0111	216	20		22-21-11	ALL
			W0111	216Z			22-21-11	ALL
			W0111	222	20		27-11-12	ALL
			W0111	222Z			27-11-12	ALL
			W0111	FRE			22-21-11	ALL
			W0111	FRF			27-11-12	ALL
D05549P		AE0303/ /		PLUG-E1-1				ALL
	1		W1511	001	22		22-21-11	ALL
	2		W1511	002	22		22-21-11	ALL
	3		W1511	003	22		22-21-21	ALL
	4		W1511	004	22		27-09-14	ALL
	5		W1511	005	22		SPARE	ALL
	6		W1511	006	22		SPARE	ALL
	7		W1511	007	22		22-22-11	ALL
	8		W1511	008	22		22-24-11	ALL
	9		W1511	009	22		22-24-11	ALL
	10		W1511	010	22		22-24-11	ALL
	11		W1511	011	22		27-09-12	ALL
	12		W1511	012	22		27-09-13	ALL
	13		W1511	013	22		27-09-13	ALL
	14		W1511	014	22		SPARE	ALL
	15		W1511	015	22		27-41-11	ALL
	16		W1511	016	22		27-41-11	ALL
	17		W1511	017	22		27-11-22	ALL
	18		W1511	018	22		27-11-22	ALL
	19		W1511	019	22		27-41-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05500

Page 32

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05549P		AE0303/ /		PLUG-E1-1 (continued)				ALL
	20		W1511	020	22		27-61-11	ALL
	21		W1511	021	22		27-61-12	ALL
	22		W1511	022	22		27-09-14	ALL
	23		W1511	023	22		27-41-11	ALL
	24		W1511	201R	24		22-21-11	ALL
	25		W1511	201B	24		22-21-11	ALL
	26		W1511	201Z			22-21-11	ALL
	27		W1511	202R	24		27-11-12	ALL
	28		W1511	202B	24		27-11-12	ALL
	29		W1511	202Z			27-11-12	ALL
	30		W1511	030	22		27-21-12	ALL
	31		W1511	031	22		27-21-12	ALL
	32	UNUSED						050-099
	32		W1511	207R	24		22-21-31	150-199, 275-299
	33		W1511	204Z			SPARE	ALL
	34	UNUSED						050-099
	34		W1511	207B	24		22-21-31	150-199, 275-299
	35		W1511	203R	22		27-21-12	ALL
	36		W1511	203B	22		27-21-12	ALL
	37		W1511	037	22		27-21-12	ALL
	38		W1511	038	22		27-21-12	ALL
	39		W1511	039	22		27-21-12	ALL
	40		W1511	206R	22		31-51-43	ALL
	41		W1511	206B	22		31-51-43	ALL
	42		W1511	042	22		27-41-11	ALL
	43		W1511	043	22		27-41-11	ALL
	44		W1511	044	22		SPARE	ALL
	45		W1511	045	22		27-09-14	ALL
	46		W1511	046	22		27-09-14	ALL
	47		W1511	047	22		27-09-14	ALL
	48		W1511	048	22		SPARE	ALL
	49		W1511	049	22		SPARE	ALL
	50		W1511	050	22		SPARE	050-099
	50		W1511	207Z			22-21-31	150-199, 275-299
	51		W1511	204R	24		SPARE	ALL
	52		W1511	204B	24		SPARE	ALL
	53		W1511	205R	24		SPARE	ALL
	54		W1511	205B	24		SPARE	ALL
	55		W1511	205Z			SPARE	ALL
	CAP	Y	W1511	050	22		SPARE	150-199, 275-299

HOOKUP LIST

D280T132

91-21-51

Section D05500

Page 33

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05551J		AF0119/ /		RCPT-P1				ALL
	1		W0419	001	22		SPARE	ALL
	2		W0419	002	22		SPARE	ALL
	3	UNUSED						050-099, 275-299
	3		W0419	006	24		SPARE	150-199
	4	UNUSED						050-099, 275-299
	4		W0419	007	24		SPARE	150-199
	5	UNUSED						ALL
	6		W0419	206R	22		34-12-11	ALL
	7		W0419	206B	22		34-12-11	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11		W0419	211R	24		SPARE	ALL
	12		W0419	211B	24		SPARE	ALL
	13		W0419	FRA			SPARE	ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
			W0419	211	20		SPARE	ALL
			W0419	211Z			SPARE	ALL
			W0419	FRA			SPARE	ALL
D05551P		AF0119/ /		PLUG-P1				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W0011	236R	22		34-12-11	ALL
	7		W0011	236B	22		34-12-11	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	DED		W0011	236Z			34-12-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05500

Page 34

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05552J		AE0202/ /		RCPT-				ALL
	1		W1080	064	24		73-21-18	ALL
	2		W1080	065	24		73-21-18	ALL
	3		W1080	124	24		21-25-21	ALL
	4		W1080	025	24		21-51-21	ALL
	5		W1080	708	24		21-51-13	ALL
	6		W1080	004	24		21-51-21	ALL
	7		W1080	005	24		21-51-21	ALL
	8		W1080	006	24		21-51-21	ALL
	9		W1080	143	24		21-51-21	ALL
	10		W1080	534	24		73-21-16	050-099, 150-199 275-299
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18		W1080	001	24		21-51-21	ALL
	19	UNUSED						ALL
	20		W1080	614	24		73-21-18	ALL
	21		W1080	016	24		21-51-21	ALL
	22		W1080	017	24		21-51-21	ALL
	23		W1080	034	22		21-51-21	ALL
	24		W1080	032	22		21-51-21	ALL
	25	UNUSED						050-099
	25		W1080	013	24		21-51-21	150-199, 275-299
	26		W1080	037	24		21-25-21	ALL
	27		W1080	021	24		21-25-21	ALL
	28		W1080	039	24		21-25-21	ALL
	29		W1080	035	24		21-25-21	ALL
	30		W1080	040	24		21-25-21	ALL
	31	UNUSED						050-099
	31		W1080	024	24		21-51-21	150-199, 275-299
	32		W1080	159	24		73-21-17	ALL
	33		W1080	088	24		21-53-12	ALL
	34		W1080	082	24		21-53-12	ALL
	35		W1080	083	24		21-53-12	ALL
	36		W1080	084	24		21-53-12	ALL
	37		W1080	085	24		21-53-12	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05500

Page 35

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05552J		AE0202/ /		RCPT- (continued)				ALL
	38		W1080	086	24		21-53-12	ALL
	39		W1080	087	24		21-53-12	ALL
	40		W1080	070	24		21-53-12	ALL
	41		W1080	542	24		73-21-11	ALL
	42		W1080	072	24		21-53-12	ALL
	43		W1080	073	24		21-53-12	ALL
	44		W1080	074	24		21-53-12	ALL
	45		W1080	068	24		21-53-12	ALL
	46		W1080	080	24		21-53-12	ALL
	47		W1080	081	24		21-53-12	ALL
	48		W1080	078	24		21-53-12	ALL
	49		W1080	079	24		21-53-12	ALL
	50		W1080	076	24		21-53-12	ALL
	51		W1080	077	24		21-53-12	ALL
	52	UNUSED						ALL
	53		W1080	778	24		73-21-15	ALL
	54		W1080	026	24		73-21-15	ALL
	55		W1080	780	24		73-21-15	ALL
	56		W1080	138	24		73-21-12	ALL
	57		W1080	FRC			73-21-12	050-099, 150-199
	57		W1080	138Z			73-21-12	275-299
	58	UNUSED						ALL
	59		W1080	542Z			73-21-11	ALL
	60	UNUSED						ALL
	61		W1080	102	24		33-16-11	ALL
			W1080	138Z			73-21-12	050-099, 150-199
			W1080	FRC			73-21-12	050-099, 150-199
			W1080	159F	20		73-21-17	ALL
			W1080	159Z			73-21-17	ALL
D05552P		AE0202/ /		PLUG-P50				ALL
	1		W0506	087	24		73-21-18	ALL
	2		W0506	088	24		73-21-18	ALL
	3		W0506	027	22		21-25-21	ALL
	4		W0506	028	24		21-51-21	ALL
	5		W0506	654	24		21-51-13	ALL
	6		W0506	030	24		21-51-21	ALL
	7		W0506	031	24		21-51-21	ALL
	8		W0506	032	24		21-51-21	ALL
	9		W0506	033	24		21-51-21	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05500

Page 36

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05552P		AE0202/ /		PLUG-P50 (continued)				ALL
	10		W0506	755	24		73-21-16	050-099, 150-199
	10	UNUSED						275-299
	11	UNUSED						ALL
	12	UNUSED						ALL
	13		W0506	075	22		SPARE	ALL
	14		W0506	076	22		SPARE	ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18		W0506	018	24		21-51-21	ALL
	19	UNUSED						ALL
	20		W0506	754	24		73-21-18	050-099, 280-299
	20		W0506	754	24		73-21-11	150-199, 275-278
	21		W0506	021	24		21-51-21	ALL
	22		W0506	022	24		21-51-21	ALL
	23		W0506	023	22		21-51-21	ALL
	24		W0506	024	22		21-51-21	ALL
	25		W0506	010	24		SPARE	050-099
	25		W0506	010	24		21-58-16	150-199, 275-299
	26		W0506	066	24		21-25-21	ALL
	27		W0506	068	24		21-25-21	ALL
	28		W0506	069	24		21-25-21	ALL
	29		W0506	070	24		21-25-21	ALL
	30		W0506	071	24		21-25-21	ALL
	31		W0506	011	24		SPARE	050-099
	31		W0506	011	24		21-58-16	150-199, 275-299
	32		W0506	219B	20		73-21-17	ALL
	33		W0506	109	24		21-53-12	ALL
	34		W0506	110	24		21-53-12	ALL
	35		W0506	111	24		21-53-12	ALL
	36		W0506	112	24		21-53-12	ALL
	37		W0506	113	24		21-53-12	ALL
	38		W0506	114	24		21-53-12	ALL
	39		W0506	115	24		21-53-12	ALL
	40		W0506	116	24		21-53-12	ALL
	41		W0506	569	24		73-21-11	ALL
	42		W0506	118	24		21-53-12	ALL
	43		W0506	119	24		21-53-12	ALL
	44		W0506	120	24		21-53-12	ALL
	45		W0506	121	24		21-53-12	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05500

Page 37

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05552P		AE0202/ /		PLUG-P50 (continued)				ALL
	46		W0506	122	24		21-53-12	ALL
	47		W0506	123	24		21-53-12	ALL
	48		W0506	124	24		21-53-12	ALL
	49		W0506	125	24		21-53-12	ALL
	50		W0506	126	24		21-53-12	ALL
	51		W0506	127	24		21-53-12	ALL
	52	UNUSED						050-099, 275-299
	52		W0506	702	24		SPARE	150-199
	53		W0506	703	24		21-58-12	ALL
	54		W0506	704	24		21-58-12	ALL
	55		W0506	705	24		21-58-12	ALL
	56		W0506	219R	20		73-21-12	ALL
	57		W0506	219Z			73-21-12	ALL
	58	UNUSED						ALL
	59		W0506	569Z			73-21-11	ALL
	60	UNUSED						ALL
	61		W0506	555	24		33-16-11	ALL
D05553J		AE0319/ /		RCPT-E1-4				ALL
	1		W0419	001	22		SPARE	ALL
	2		W0419	002	22		SPARE	ALL
	3	UNUSED						050-099, 275-299
	3		W0419	006	24		SPARE	150-199
	4	UNUSED						050-099, 275-299
	4		W0419	007	24		SPARE	150-199
	5	UNUSED						ALL
	6		W0419	206R	22		34-12-11	ALL
	7		W0419	206B	22		34-12-11	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11		W0419	211R	24		SPARE	ALL
	12		W0419	211B	24		SPARE	ALL
	13		W0419	211Z			SPARE	ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
D05553P		AE0319/ /		PLUG-E1-4				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D05500
Page 38
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05553P		AE0319/ /		PLUG-E1-4 (continued)				ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W0127	524R	22		34-12-11	ALL
	7		W0127	524B	22		34-12-11	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	DED		W0127	524Z			34-12-11	ALL
D05554J		AE0305/ /		RCPT-E1-2				ALL
	1		W0602	204R	22		32-61-11	ALL
	2		W0602	204B	22		32-61-11	ALL
	3	UNUSED						ALL
	4	UNUSED						050-099
	4		W0602	049	22		32-71-11	150-199, 275-299
	5		W0602	203R	22		32-09-11	ALL
	6		W0602	203B	22		32-09-11	ALL
	7		W0602	206R	22		32-61-11	ALL
	8		W0602	206B	22		32-61-11	ALL
	9		W0602	207R	22		32-61-11	ALL
	10		W0602	207B	22		32-61-11	ALL
	11		W0602	011	24		32-42-11	ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15		W0602	141	24		32-42-11	ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22		W0602	111	20		SPARE	ALL
	23		W0602	112	20		SPARE	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05500

Page 39

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05554J		AE0305/ /		RCPT-E1-2 (continued)				ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						050-099, 155-199, 276-299
	30		W0602	201B	22		SPARE	150-154, 275
	31	UNUSED						050-099, 155-199, 276-299
	31		W0602	201R	22		SPARE	150-154, 275
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	DED		W0602	141Z			32-42-11	ALL
D05554P		AE0305/ /		PLUG-E1-2				ALL
	1		W1092	237R	24		32-61-11	ALL
	2		W1092	237B	24		32-61-11	ALL
	3	UNUSED						ALL
	4	UNUSED						050-099
	4		W1092	763	24		32-71-11	150-199, 275-299
	5		W1092	259R	24		32-09-11	ALL
	6		W1092	259B	24		32-09-11	ALL
	7		W1092	239R	24		32-61-11	ALL
	8		W1092	239B	24		32-61-11	ALL
	9		W1092	240R	24		32-61-11	ALL
	10		W1092	240B	24		32-61-11	ALL
	11		W1092	576	24		32-42-11	ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15		W1092	153	24		32-42-11	ALL
	16	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D05500
Page 40
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05554P		AE0305/ /		PLUG-E1-2 (continued)				ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	DED		W1092	153Z			32-42-11	ALL
D05555J		AF0120/ /		RCPT-P3				ALL
	1		W0529	006	22		SPARE	ALL
	2		W0529	007	22		SPARE	ALL
	3		W0529	008	22		SPARE	ALL
	4		W0529	004	22		SPARE	ALL
	5		W0529	005	24		34-21-31	ALL
	6		W0529	009	22		SPARE	ALL
	7	UNUSED						ALL
	8		W0529	208R	22		SPARE	ALL
	9		W0529	208B	22		SPARE	ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D05500

Page 41

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05555J		AF0120/ /		RCPT-P3 (continued)				ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18		W0529	010	24		22-14-21	ALL
	19		W0529	011	24		22-14-21	ALL
	20		W0529	012	22		22-14-21	ALL
	21		W0529	201R	22		34-12-11	ALL
	22		W0529	201B	22		34-12-11	ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D05555P		AF0120/ /		PLUG-P3				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W0031	090	24		34-21-31	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18		W0031	027	24		22-14-21	ALL
	19		W0031	033	24		22-14-21	ALL
	20		W0031	060	22		22-14-21	ALL
	21		W0031	204R	22		34-12-11	ALL
	22		W0031	204B	22		34-12-11	ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	DED		W0031	204Z			34-12-11	ALL

HOOKUP LIST
D280T132

91-21-51
Section D05500
Page 42
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05556J		AL1003/ /		RCPT-				ALL
	1		W0602	204R	22		32-61-11	ALL
	2		W0602	204B	22		32-61-11	ALL
	3		W0602	120	24		36-11-31	ALL
	4		W0602	121	24		36-11-31	ALL
	5		W0602	122	24		36-11-31	ALL
	6		W0602	123	24		36-11-31	ALL
	7		W0602	124	20		36-11-31	ALL
	8		W0602	125	20		36-11-31	ALL
	9		W0602	126	20		36-11-31	ALL
	10	UNUSED						ALL
	DED		W0602	122Z			36-11-31	ALL
	DED		W0602	123Z			36-11-31	ALL
D05556P		AL1003/ /		PLUG-				ALL
	1		W0922	204R	18		32-61-11	ALL
	2		W0922	204B	18		32-61-11	ALL
	3		W0922	002	20		36-11-31	ALL
	4		W0922	003	20		36-11-31	ALL
	5		W0922	004	20		36-11-31	ALL
	6		W0922	005	20		36-11-31	ALL
	7		W0922	001	20		36-11-31	ALL
	8		W0922	006	20		36-11-31	ALL
	9		W0922	007	20		36-11-31	ALL
	10	UNUSED						ALL
D05557J		AE0307/ /		RCPT-E1-4				ALL
	1		W0529	006	22		SPARE	ALL
	2		W0529	007	22		SPARE	ALL
	3		W0529	008	22		SPARE	ALL
	4		W0529	004	22		SPARE	ALL
	5		W0529	005	24		34-21-31	ALL
	6		W0529	009	22		SPARE	ALL
	7	UNUSED						ALL
	8		W0529	208R	22		SPARE	ALL
	9		W0529	208B	22		SPARE	ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D05500

Page 43

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05557J		AE0307/ /		RCPT-E1-4 (continued)				ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18		W0529	010	24		22-14-21	ALL
	19		W0529	011	24		22-14-21	ALL
	20		W0529	012	22		22-14-21	ALL
	21		W0529	201R	22		34-12-11	ALL
	22		W0529	201B	22		34-12-11	ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D05557P		AE0307/ /		PLUG-E1-4				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W0127	843	24		34-21-31	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18		W0127	051	24		22-14-21	ALL
	19		W0127	049	24		22-14-21	ALL
	20		W0127	050	22		22-14-21	ALL
	21		W0127	523R	22		34-12-11	ALL
	22		W0127	523B	22		34-12-11	ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	DED		W0127	050Z			22-14-21	ALL
	DED		W0127	523Z			34-12-11	ALL

HOOKUP LIST
D280T132

91-21-51
Section D05500
Page 44
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05558J		AL1003/ /		RCPT-				ALL
	1	EO	W0578	081	10		28-22-12	ALL
	2	EO	W0578	082	10		28-22-12	ALL
	3	EO	W0578	083	10		28-22-12	ALL
	4	EO	W0578	070	10		28-31-21	050-099, 155-199, 276-299
	4	UNUSED						150-154, 275
	5	EO	W0578	102	10		28-31-21	050-099, 155-199, 276-299
	5	UNUSED						150-154, 275
	6	EO	W0578	107	10		28-31-21	050-099, 155-199, 276-299
	6	UNUSED						150-154, 275
	7	UNUSED						ALL
	8	UNUSED						ALL
D05558P		AL1003/ /		PLUG-L WING RS/BODY				ALL
	1		W0444	302B	14		28-22-12	ALL
	2		W0444	302R	14		28-22-12	ALL
	3		W0444	302Y	14		28-22-12	ALL
	4	UNUSED						050-099, 150-154, 162-164, 275-276
	4		W0444	300B	14		28-31-21	155-157, 165-199, 277-299
	5	UNUSED						050-099, 150-154, 162-164, 275-276
	5		W0444	300R	14		28-31-21	155-157, 165-199, 277-299
	6	UNUSED						050-099, 150-154, 162-164, 275-276
	6		W0444	300Y	14		28-31-21	155-157, 165-199, 277-299
	7	UNUSED						ALL
	8	UNUSED						ALL
D05561J		AE0218/ /		RCPT-P37				ALL
	1		W0192	797	20		23-32-11	ALL
	2		W0192	798	20		23-32-11	050-099, 150-199
	2	UNUSED						275-299
	3		W0192	799	20		23-32-11	050-099, 150-199
	3	UNUSED						275-299
	4		W0192	800	20		23-32-11	050-099, 150-199
	4	UNUSED						275-299
	5	UNUSED						050-099, 150-199
	5	DK	W0192	50X	18		23-32-31	275-299
	6	UNUSED						050-099, 150-199
	6	DK	W0192	50P	18		23-32-41	275-299
	7	UNUSED						050-099, 150-199
	7	DK	W0192	50R	18		23-32-51	275-299

HOOKUP LIST

D280T132

91-21-51

Section D05500

Page 45

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05561J		AE0218/ /		RCPT-P37 (continued)				ALL
	8	UNUSED						050-099, 150-199
	8	DK	W0192	50U	18		23-32-61	275-299
	9	UNUSED						050-099, 150-199, 275-276
	9	DK	W0192	61Q	18		23-32-31	277-299
	10	UNUSED						050-099, 150-199, 275-276
	10	DK	W0192	61R	18		23-32-41	277-299
	11	UNUSED						050-099, 150-199, 275-276
	11	DK	W0192	61S	18		23-32-51	277-299
	12	UNUSED						050-099, 150-199, 275-276
	12	DK	W0192	62W	18		23-32-61	277-299
D05561P D05561P		AE0218/ / 292/169/R 68		PLUG-P37 PLUG-P37				050-099, 275-299 150-199
	1		W1417	001	20		23-32-11	ALL
	2		W1417	002	20		23-32-11	050-099, 150-199
	2	UNUSED						275-299
	3		W1417	003	20		23-32-11	050-099, 150-199
	3	UNUSED						275-299
	4		W1417	004	20		23-32-11	050-099, 150-199
	4	UNUSED						275-299
	5	UNUSED						050-099, 150-199
	5	DL	W1417	125	18		23-32-31	275-276
	5	DL	W1417	214R	18		23-32-31	277-299
	6	UNUSED						050-099, 150-199
	6	DL	W1417	131	18		23-32-41	275-276
	6	DL	W1417	215R	18		23-32-41	277-299
	7	UNUSED						050-099, 150-199
	7	DL	W1417	137	18		23-32-51	275-276
	7	DL	W1417	216R	18		23-32-51	277-299
	8	UNUSED						050-099, 150-199
	8	DL	W1417	143	18		23-32-61	275-276
	8	DL	W1417	217R	18		23-32-61	277-299
	9	UNUSED						050-099, 150-199, 275-276
	9	DL	W1417	214B	18		23-32-31	277-299
	10	UNUSED						050-099, 150-199, 275-276
	10	DL	W1417	215B	18		23-32-41	277-299
	11	UNUSED						050-099, 150-199, 275-276
	11	DL	W1417	216B	18		23-32-51	277-299
	12	UNUSED						050-099, 150-199, 275-276
	12	DL	W1417	217B	18		23-32-61	277-299

HOOKUP LIST

D280T132

91-21-51

Section D05500

Page 46

Mar 14/2007

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05561P		AE0218/ /		PLUG-P37 (continued)				050-099, 275-299
D05561P		292/169/R 68		PLUG-P37 (continued)				150-199
	DED		W1417	214Z			23-32-31	277-299
	DED		W1417	215Z			23-32-41	277-299
	DED		W1417	216Z			23-32-51	277-299
	DED		W1417	217Z			23-32-61	277-299
D05562J		AL1001/ /		RCPT-				ALL
	1		W0942	016	20		28-41-21	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W0942	123	16		SPARE	ALL
	5		W0942	005	22		32-42-11	ALL
	6		W0942	006	20		32-42-11	ALL
	7		W0942	007	22		32-42-11	ALL
	8		W0942	008	20		32-42-11	ALL
	9		W0942	009	22		32-42-11	ALL
	10		W0942	010	20		32-42-11	ALL
	11	UNUSED						ALL
	=C1		W0942	016Z			28-41-21	ALL
D05562P		AL1001/ /		PLUG-L WING RS/BODY				ALL
	1		W0446	42TX			28-41-21	050-099, 150-199, 275-278
	1		W0446	42TX	20		28-41-21	280-299
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W0446	209B	20		32-42-11	ALL
	6		W0446	209R	20		32-42-11	ALL
	7		W0446	210B	20		32-42-11	ALL
	8		W0446	210R	20		32-42-11	ALL
	9		W0446	211B	20		32-42-11	ALL
	10		W0446	211R	20		32-42-11	ALL
	11	UNUSED						ALL
	=C1		W0446	42TI			28-41-21	ALL
D05566J		AE0317/ /		RCPT-E1-2				ALL
	1		W0628	241Z			32-45-14	050-099, 150-199
	1	UNUSED						275-299
	2		W0628	201R	22		32-61-12	ALL
	3		W0628	201B	22		32-61-12	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05500

Page 47

Mar 07/2008



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05566J		AE0317/ /		RCPT-E1-2 (continued)				ALL
	4		W0628	202R	22		32-61-12	ALL
	5		W0628	202B	22		32-61-12	ALL
	6		W0628	203R	22		32-61-12	ALL
	7		W0628	203B	22		32-61-12	ALL
	8		W0628	222	20		31-31-22	ALL
	9		W0628	010	20		33-43-11	050-099
	9	UNUSED						150-199, 275-299
	10		W0628	206R	22		32-09-12	ALL
	11		W0628	206B	22		32-09-12	ALL
	12		W0628	207R	22		32-09-12	ALL
	13		W0628	207B	22		32-09-12	ALL
	14		W0628	048	22		78-36-21	ALL
	15	UNUSED						050-099
	15	FL	W0628	010	16		33-43-11	150-199, 275-299
	16		W0628	208R	22		32-61-11	ALL
	17		W0628	208B	22		32-61-11	ALL
	18		W0628	209R	22		32-61-11	ALL
	19		W0628	209B	22		32-61-11	ALL
	20		W0628	117	24		32-61-14	ALL
	21		W0628	241B	20		32-45-14	050-099, 150-199
	21	UNUSED						275-299
	22		W0628	241R	20		32-45-14	050-099, 150-199
	22	UNUSED						275-299
	23		W0628	210R	22		32-61-11	ALL
	24		W0628	210B	22		32-61-11	ALL
	25		W0628	104	22		SPARE	ALL
	26		W0628	242Z			32-45-14	050-099, 150-199
	26	UNUSED						275-299
	27		W0628	021	22		SPARE	ALL
	28		W0628	223R	22		31-31-22	ALL
	29		W0628	223B	22		31-31-22	ALL
	30		W0628	223Z			31-31-22	ALL
	31		W0628	242B	20		32-45-14	050-099, 150-199
	31	UNUSED						275-299
	32		W0628	242R	20		32-45-14	050-099, 150-199
	33		W0628	243B	20		32-45-14	050-099, 150-199
	34		W0628	243R	20		32-45-14	050-099, 150-199
	35		W0628	243Z			32-45-14	050-099, 150-199
	36		W0628	244B	20		32-45-14	050-099, 150-199
	37		W0628	244R	20		32-45-14	050-099, 150-199

HOOKUP LIST

D280T132

91-21-51

Section D05500

Page 48

Mar 07/2008



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05566J		AE0317/ /		RCPT-E1-2 (continued)				ALL
	38		W0628	244Z			32-45-14	050-099, 150-199
	39	UNUSED						050-099, 150-199
	40	UNUSED						050-099, 150-199
	41	UNUSED						050-099, 150-199
D05566P		AE0317/ /		PLUG-E1-2				ALL
	1		W1100	282Z			32-45-14	050-099, 150-199
	1	UNUSED						275-299
	2		W1100	205R	24		32-61-12	ALL
	3		W1100	205B	24		32-61-12	ALL
	4		W1100	206R	24		32-61-12	ALL
	5		W1100	206B	24		32-61-12	ALL
	6		W1100	207R	24		32-61-12	ALL
	7		W1100	207B	24		32-61-12	ALL
	8		W1100	145	22		31-31-22	ALL
	9		W1100	106	20		33-43-11	050-099
	9	UNUSED						150-199, 275-299
	10		W1100	209R	24		32-09-12	ALL
	11		W1100	209B	24		32-09-12	ALL
	12		W1100	210R	24		32-09-12	ALL
	13		W1100	210B	24		32-09-12	ALL
	14		W1100	049	22		78-34-21	ALL
	15	UNUSED						050-099
	15	DK	W1100	106	18		33-43-11	150-199, 275-299
	16		W1100	201R	24		32-61-11	ALL
	17		W1100	201B	24		32-61-11	ALL
	18		W1100	202R	24		32-61-11	ALL
	19		W1100	202B	24		32-61-11	ALL
	20		W1100	121	24		32-61-14	ALL
	21		W1100	282B	22		32-45-14	050-099, 150-199
	21	UNUSED						275-299
	22		W1100	282R	22		32-45-14	050-099, 150-199
	22	UNUSED						275-299
	23		W1100	203R	24		32-61-11	ALL
	24		W1100	203B	24		32-61-11	ALL
	25	UNUSED						ALL
	26		W1100	283Z			32-45-14	050-099, 150-199
	26	UNUSED						275-299
	27	UNUSED						ALL
	28		W1100	281R	22		31-31-22	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05500

Page 49

Mar 07/2008



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05566P		AE0317/ /		PLUG-E1-2 (continued)				ALL
	29		W1100	281B	22		31-31-22	ALL
	30		W1100	281Z			31-31-22	ALL
	31		W1100	283B	22		32-45-14	050-099, 150-199
	31	UNUSED						275-299
	32		W1100	283R	22		32-45-14	050-099, 150-199
	33		W1100	284B	22		32-45-14	050-099, 150-199
	34		W1100	284R	22		32-45-14	050-099, 150-199
	35		W1100	284Z			32-45-14	050-099, 150-199
	36		W1100	285B	22		32-45-14	050-099, 150-199
	37		W1100	285R	22		32-45-14	050-099, 150-199
	38		W1100	285Z			32-45-14	050-099, 150-199
	39	UNUSED						050-099, 150-199
	40	UNUSED						050-099, 150-199
	41	UNUSED						050-099, 150-199
D05573J		AE0305/ /		RCPT-E1-5				ALL
	1		W1533	201R	24		34-46-11	ALL
	2		W1533	201B	24		34-46-11	ALL
	3		W1533	201Z			34-46-11	ALL
	4		W1533	007	22		SPARE	ALL
	5		W1533	002	22		SPARE	ALL
	6		W1533	003	22		SPARE	ALL
	7		W1533	004	22		SPARE	ALL
	8		W1533	005	22		SPARE	ALL
	9		W1533	006	22		SPARE	ALL
	10		W1533	212R	24		34-61-14	ALL
	11		W1533	212B	24		34-61-14	ALL
	12		W1533	212Z			34-61-14	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16		W1533	213R	24		SPARE	ALL
	17		W1533	213B	24		SPARE	ALL
	18		W1533	213Z			SPARE	ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D05500

Page 50

Mar 07/2008



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05573P		AE0305/ /		PLUG-E1-5				ALL
	1		W0109	601R	24		34-46-11	ALL
	2		W0109	601B	24		34-46-11	ALL
	3		W0109	601Z			34-46-11	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10		W0109	212R	24		34-61-14	ALL
	11		W0109	212B	24		34-61-14	ALL
	12		W0109	212Z			34-61-14	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D05575J		AE0320/ /		RCPT-E2-2				ALL
	1		W0515	202Z			34-33-21	ALL
	2		W0515	202R	24		34-33-21	ALL
	3		W0515	202B	24		34-33-21	ALL
	4		W0515	004	24		34-33-21	ALL
	5		W0515	005	24		SPARE	ALL
	6		W0515	001	24		22-12-21	ALL
	7		W0515	201R	24		22-12-21	ALL
	8		W0515	201B	24		22-12-21	ALL
	9		W0515	201Z			22-12-21	ALL
	10		W0515	010	24		SPARE	ALL
	11		W0515	205R	24		31-35-13	ALL
	12		W0515	205B	24		31-35-13	ALL
	13		W0515	205Z			31-35-13	ALL
	14	UNUSED						ALL

HOOKUP LIST
D280T132



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05575J		AE0320/ /		RCPT-E2-2 (continued)				ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19		W0515	203R	24		34-22-28	ALL
	20		W0515	203B	24		34-22-28	ALL
	21		W0515	203Z			34-22-28	ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D05575P		AE0320/ /		PLUG-E2-2				ALL
	1		W0143	214Z			34-33-21	ALL
	2		W0143	214R	24		34-33-21	ALL
	3		W0143	214B	24		34-33-21	ALL
	4		W0143	009	24		34-33-21	ALL
	5	UNUSED						ALL
	6		W0143	010	24		22-12-21	ALL
	7		W0143	215R	24		22-12-21	ALL
	8		W0143	215B	24		22-12-21	ALL
	9		W0143	215Z			22-12-21	ALL
	10	UNUSED						ALL
	11		W0143	231R	24		31-35-13	ALL
	12		W0143	231B	24		31-35-13	ALL
	13		W0143	231Z			31-35-13	ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19		W0143	218R	24		34-22-28	ALL
	20		W0143	218B	24		34-22-28	ALL
	21		W0143	218Z			34-22-28	ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D05576J		AE0209/ /		RCPT-				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D05500
Page 52
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05576J		AE0209/ /		RCPT- (continued)				ALL
	3		W0176	223R	24		32-09-11	ALL
	4		W0176	223B	24		32-09-11	ALL
	5		W0176	205R	22		32-61-13	ALL
	6		W0176	205B	22		32-61-13	ALL
	7		W0176	206R	22		32-61-13	ALL
	8		W0176	206B	22		32-61-13	ALL
	9		W0176	207R	22		32-61-13	ALL
	10		W0176	207B	22		32-61-13	ALL
	11		W0176	208R	22		32-61-13	ALL
	12		W0176	208B	22		32-61-13	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
D05576P		AE0209/ /		PLUG-P36				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W0924	202R	18		32-09-11	ALL
	4		W0924	202B	18		32-09-11	ALL
	5		W0924	203R	18		32-61-13	ALL
	6		W0924	203B	18		32-61-13	ALL
	7		W0924	204R	18		32-61-13	ALL
	8		W0924	204B	18		32-61-13	ALL
	9		W0924	205R	18		32-61-13	ALL
	10		W0924	205B	18		32-61-13	ALL
	11		W0924	206R	18		32-61-13	ALL
	12		W0924	206B	18		32-61-13	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
D05581J		AE0319/ /		RCPT-				ALL
	1	UNUSED						ALL
	2		W0397	002	24		34-22-17	ALL
	3		W0397	003	24		34-22-17	ALL
	4		W0397	004	24		34-22-17	ALL
	5	UNUSED						ALL
	6		W0397	001	24		34-22-17	ALL
	7		W0397	207R	24		34-22-82	ALL
	8		W0397	207B	24		34-22-82	ALL
	9		W0397	207Z			34-22-82	ALL
	10		W0397	202R	24		34-22-81	050-099, 150-156, 162-166, 280-299

HOOKUP LIST

D280T132

91-21-51

Section D05500

Page 53

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05581J		AE0319/ /		RCPT- (continued)				ALL
	10	UNUSED						157, 167-199, 277-278
	10		W0397	202R	24		SPARE	275-276
	11		W0397	202B	24		34-22-81	050-099, 150-156, 162-166, 280-299
	11	UNUSED						157, 167-199, 277-278
	11		W0397	202B	24		SPARE	275-276
	12		W0397	202Z			34-22-81	050-099, 150-156, 162-166, 280-299
	12	UNUSED						157, 167-199, 277-278
	12		W0397	202Z			SPARE	275-276
	13		W0397	203R	24		34-22-81	ALL
	14		W0397	203B	24		34-22-81	ALL
	15		W0397	203Z			34-22-81	ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20		W0397	054	24		SPARE	ALL
	21		W0397	055	24		SPARE	ALL
	22		W0397	022	24		34-22-17	ALL
	23		W0397	030	22		34-22-16	ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
D05581P		AE0319/ /		PLUG-				ALL
	1	UNUSED						ALL
	2		W1103	032	24		34-22-17	ALL
	3		W1103	033	24		34-22-17	ALL
	4		W1103	034	24		34-22-17	ALL
	5	UNUSED						ALL
	6		W1103	031	24		34-22-17	ALL
	7		W1103	261R	24		34-22-82	ALL
	8		W1103	261B	24		34-22-82	ALL
	9		W1103	261Z			34-22-82	ALL
	10		W1103	262R	24		34-22-81	050-099, 150-156, 162-166
	10	UNUSED						157, 167-199, 275-299

HOOKUP LIST
D280T132

91-21-51
Section D05500
Page 54
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05581P		AE0319/ /		PLUG- (continued)				ALL
	11		W1103	262B	24		34-22-81	050-099, 150-156, 162-166
	11	UNUSED						157, 167-199, 275-299
	12		W1103	262Z			34-22-81	050-099, 150-156, 162-166
	12	UNUSED						157, 167-199, 275-299
	13		W1103	263R	24		34-22-81	ALL
	14		W1103	263B	24		34-22-81	ALL
	15		W1103	263Z			34-22-81	ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22		W1103	073	24		34-22-17	ALL
	23		W1103	075	22		34-22-16	ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
D05585J		AE0305/ /		RCPT-E1-4				ALL
	1		W1603	001	24		34-22-37	050-099
	1		W1603	001	24		SPARE	150-199, 275-299
	2		W1603	002	24		34-22-37	ALL
	3		W1603	003	24		34-22-37	ALL
	4		W1603	004	24		34-22-37	ALL
	5		W1603	005	24		SPARE	ALL
	6		W1603	201R	24		34-22-39	ALL
	7		W1603	201B	24		34-22-39	ALL
	8		W1603	201Z			34-22-39	ALL
	9		W1603	202R	24		34-22-39	ALL
	10		W1603	202B	24		34-22-39	ALL
	11		W1603	202Z			34-22-39	ALL
	12		W1603	220R	24		34-22-38	ALL
	13		W1603	220B	24		34-22-38	ALL
	14		W1603	220Z			34-22-38	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05500

Page 55

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05585J		AE0305/ /		RCPT-E1-4 (continued)				ALL
	15		W1603	204R	24		34-22-35	ALL
	16		W1603	204B	24		34-22-35	ALL
	17		W1603	204Z			34-22-35	ALL
	18		W1603	205W	24		34-43-11	ALL
	19		W1603	205WB	24		34-43-11	ALL
	20		W1603	205Z			34-43-11	ALL
	21		W1603	214R	24		34-22-13	ALL
	22		W1603	214B	24		34-22-13	ALL
	23		W1603	214Z			34-22-13	ALL
	24		W1603	219R	24		34-22-38	ALL
	25		W1603	219B	24		34-22-38	ALL
	26		W1603	219Z			34-22-38	ALL
	27		W1603	020	22		SPARE	ALL
	28		W1603	215R	24		34-22-13	ALL
	29		W1603	215B	24		34-22-13	ALL
	30		W1603	215Z			34-22-13	ALL
	31		W1603	209R	24		34-22-13	ALL
	32		W1603	209B	24		34-22-13	ALL
	33		W1603	209Z			34-22-13	ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37		W1603	021	22		SPARE	ALL
	38		W1603	023	24		22-41-11	ALL
	39		W1603	210R	24		22-41-12	ALL
	40		W1603	210B	24		22-41-12	ALL
	41		W1603	210Z			22-41-12	ALL
	42		W1603	037	24		34-22-38	ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D05500

Page 56

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05585J		AE0305/ /		RCPT-E1-4 (continued)				ALL
	55	UNUSED						ALL
D05585P		AE0305/ /		PLUG-E1-4				ALL
	1		W0107	025	24		34-22-37	ALL
	2		W0107	026	24		34-22-37	ALL
	3		W0107	027	24		34-22-37	ALL
	4		W0107	028	24		34-22-37	ALL
	5	UNUSED						050-099, 275-299
	5		W0107	107	24		SPARE	150-199
	6		W0107	250R	24		34-22-39	ALL
	7		W0107	250B	24		34-22-39	ALL
	8		W0107	250Z			34-22-39	ALL
	9		W0107	251R	24		34-22-39	ALL
	10		W0107	251B	24		34-22-39	ALL
	11		W0107	251Z			34-22-39	ALL
	12		W0107	255R	24		34-22-38	ALL
	13		W0107	255B	24		34-22-38	ALL
	14		W0107	255Z			34-22-38	ALL
	15		W0107	201R	24		34-22-35	ALL
	16		W0107	201B	24		34-22-35	ALL
	17		W0107	201Z			34-22-35	ALL
	18		W0107	256W	24		34-43-11	ALL
	19		W0107	256WB	24		34-43-11	ALL
	20		W0107	256Z			34-43-11	ALL
	21		W0107	206R	24		34-22-13	ALL
	22		W0107	206B	24		34-22-13	ALL
	23		W0107	206Z			34-22-13	ALL
	24		W0107	209R	24		34-22-38	ALL
	25		W0107	209B	24		34-22-38	ALL
	26		W0107	209Z			34-22-38	ALL
	27	UNUSED						ALL
	28		W0107	207R	24		34-22-13	ALL
	29		W0107	207B	24		34-22-13	ALL
	30		W0107	207Z			34-22-13	ALL
	31		W0107	208R	24		34-22-13	ALL
	32		W0107	208B	24		34-22-13	ALL
	33		W0107	208Z			34-22-13	ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D05500

Page 57

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05585P		AE0305/ /		PLUG-E1-4 (continued)				ALL
	37	UNUSED						ALL
	38		W0107	086	24		22-41-11	ALL
	39		W0107	210R	24		22-41-12	ALL
	40		W0107	210B	24		22-41-12	ALL
	41		W0107	210Z			22-41-12	ALL
	42		W0107	003	24		34-22-38	ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
D05586J		AL1005/ /		RCPT-L WW DISC				ALL
	1		W0628	011	22		32-42-12	ALL
	2		W0628	222	20		31-31-22	ALL
	3		W0628	013	22		32-42-12	ALL
	4		W0628	104	22		SPARE	ALL
	5		W0628	223R	22		31-31-22	ALL
	6		W0628	223B	22		31-31-22	ALL
	7		W0628	223Z			31-31-22	ALL
D05586P		AL1005/ /		PLUG-				ALL
	1		W1214	002	20		32-42-12	ALL
	2		W1214	202	20		31-31-22	ALL
	3		W1214	003	20		32-42-12	ALL
	4	UNUSED						ALL
	5		W1214	201R	20		31-31-22	ALL
	6		W1214	201B	20		31-31-22	ALL
	7		W1214	201Z			31-31-22	ALL
D05592J		AE0218/ /		RCPT-P37				ALL
	1		W0192	230R	22		32-61-13	ALL

HOOKUP LIST
D280T132

91-21-51
Section D05500
Page 58
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05592J		AE0218/ /		RCPT-P37 (continued)				ALL
	2		W0192	230B	22		32-61-13	ALL
	3		W0192	231R	22		32-61-13	ALL
	4		W0192	231B	22		32-61-13	ALL
	5		W0192	232R	22		32-61-13	ALL
	6		W0192	232B	22		32-61-13	ALL
	7		W0192	233R	22		32-61-13	ALL
	8		W0192	233B	22		32-61-13	ALL
	9		W0192	139	18		33-31-11	ALL
	10		W0192	787	22		33-51-21	ALL
	11		W0192	786	22		33-51-21	ALL
	12		W0192	139	18		33-31-11	ALL
	13		W0192	070	18		33-31-11	ALL
	14		W0192	273Z			32-45-12	ALL
	15		W0192	239R	24		32-09-12	ALL
	16		W0192	239B	24		32-09-12	ALL
	17		W0192	273B	20		32-45-12	ALL
	18		W0192	273R	20		32-45-12	ALL
	19	UNUSED						ALL
D05592P		AE0218/ /		PLUG-P37				ALL
	1		W0926	201R	18		32-61-13	ALL
	2		W0926	201B	18		32-61-13	ALL
	3		W0926	202R	18		32-61-13	ALL
	4		W0926	202B	18		32-61-13	ALL
	5		W0926	203R	18		32-61-13	ALL
	6		W0926	203B	18		32-61-13	ALL
	7		W0926	204R	18		32-61-13	ALL
	8		W0926	204B	18		32-61-13	ALL
	9		W0926	009	18		33-31-11	ALL
	10		W0926	015	20		33-51-21	ALL
	11		W0926	016	20		33-51-21	ALL
	12		W0926	018	18		33-31-11	ALL
	13		W0926	019	18		33-31-11	ALL
	14		W0926	208Z			32-45-12	ALL
	15		W0926	207R	20		32-09-12	ALL
	16		W0926	207B	20		32-09-12	ALL
	17		W0926	208B	20		32-45-12	ALL
	18		W0926	208R	20		32-45-12	ALL
	19	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D05500

Page 59

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05593J		AE0320/ /		RCPT-E2-5				ALL
	1		W1407	001	24		23-32-12	ALL
	2		W1407	002	24		23-32-12	ALL
	3		W1407	003	24		23-32-12	050-099, 150-199
	3		W1407	201R	24		23-32-12	275-299
	4		W1407	003Z			23-32-12	050-099, 150-199
	4		W1407	201B	24		23-32-12	275-299
	5		W1407	005	24		23-32-12	ALL
	6		W1407	006	24		23-32-12	050-099, 150-199
	6		W1407	202R	24		23-32-12	275-299
	7		W1407	006Z			23-32-12	050-099, 150-199
	7		W1407	202B	24		23-32-12	275-299
	8		W1407	008	24		23-32-12	050-099, 150-199
	8		W1407	203R	24		23-32-12	275-299
	9		W1407	008Z			23-32-12	050-099, 150-199
	9		W1407	203B	24		23-32-12	275-299
	10		W1407	010	24		23-32-12	050-099, 150-199
	10		W1407	204R	24		23-32-12	275-299
	11		W1407	010Z			23-32-12	050-099, 150-199
	11		W1407	204B	24		23-32-12	275-299
	12		W1407	012	24		23-32-12	050-099, 150-199
	12		W1407	205R	24		23-32-12	275-299
	13		W1407	012Z			23-32-12	050-099, 150-199
	13		W1407	205B	24		23-32-12	275-299
	14		W1407	014	20		23-32-11	ALL
	15	UNUSED						050-099, 150-199
	15		W1407	201Z			23-32-12	275-299
	16		W1407	036	22		23-32-12	050-099, 150-199
	16		W1407	FRA			23-32-12	275-299
	17		W1407	037	22		23-32-12	050-099, 150-199
	17	UNUSED						275-299
	18		W1407	035	22		23-32-12	050-099, 150-199
	18	UNUSED						275-299
	19	UNUSED						050-099, 150-199
	19		W1407	FRE			23-32-12	275-299
	20		W1407	030	24		23-32-12	050-099, 150-199
	20		W1407	206R	24		23-32-12	275-299
	21		W1407	030Z			23-32-12	050-099, 150-199
	21		W1407	206B	24		23-32-12	275-299
	22		W1407	031	24		23-32-12	050-099, 150-199
	22		W1407	207R	24		23-32-12	275-299

HOOKUP LIST

D280T132

91-21-51

Section D05500

Page 60

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05593J		AE0320 / /		RCPT-E2-5 (continued)				ALL
	23		W1407	031Z			23-32-12	050-099, 150-199
	23		W1407	207B	24		23-32-12	275-299
	24	UNUSED						050-099, 150-199
	24		W1407	FRC			23-32-12	275-299
			W1407	202Z			23-32-12	275-299
			W1407	203Z			23-32-12	275-299
			W1407	204Z			23-32-12	275-299
			W1407	205Z			23-32-12	275-299
			W1407	206Z			23-32-12	275-299
			W1407	207Z			23-32-12	275-299
			W1407	FRA			23-32-12	275-299
			W1407	FRC			23-32-12	275-299
			W1407	FRE			23-32-12	275-299
D05593P		AE0320 / /		PLUG-E2-5				ALL
	1		W0149	028	24		23-32-12	ALL
	2		W0149	029	24		23-32-12	ALL
	3		W0149	030	24		23-32-12	050-099, 150-199
	3		W0149	030R	24		23-32-12	275-299
	4		W0149	030Z			23-32-12	050-099, 150-199
	4		W0149	030B	24		23-32-12	275-299
	5		W0149	031	24		23-32-12	ALL
	6		W0149	032	24		23-32-12	050-099, 150-199
	6		W0149	032R	24		23-32-12	275-299
	7		W0149	032Z			23-32-12	050-099, 150-199
	7		W0149	032B	24		23-32-12	275-299
	8		W0149	033	24		23-32-12	050-099, 150-199
	8		W0149	033R	24		23-32-12	275-299
	9		W0149	033Z			23-32-12	050-099, 150-199
	9		W0149	033B	24		23-32-12	275-299
	10		W0149	034	24		23-32-12	050-099, 150-199
	10		W0149	034R	24		23-32-12	275-299
	11		W0149	034Z			23-32-12	050-099, 150-199
	11		W0149	034B	24		23-32-12	275-299
	12		W0149	035	24		23-32-12	050-099, 150-199
	12		W0149	035R	24		23-32-12	275-299
	13		W0149	035Z			23-32-12	050-099, 150-199
	13		W0149	035B	24		23-32-12	275-299
	14		W0149	036	20		23-32-11	ALL
	15	UNUSED						050-099, 150-199

HOOKUP LIST

D280T132

91-21-51

Section D05500

Page 61

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05593P		AE0320/ /		PLUG-E2-5 (continued)				ALL
	15		W0149	030Z			23-32-12	275-299
	16		W0149	611	22		23-32-12	050-099, 150-199
	16		W0149	FRN			23-32-12	275-299
	17		W0149	612	22		23-32-12	050-099, 150-199
	17	UNUSED						275-299
	18		W0149	610	22		23-32-12	050-099, 150-199
	18	UNUSED						275-299
	19	UNUSED						050-099, 150-199
	19		W0149	FRP			23-32-12	275-299
	20		W0149	152	24		23-32-12	050-099, 150-199
	20		W0149	152R	24		23-32-12	275-299
	21		W0149	152Z			23-32-12	050-099, 150-199
	21		W0149	152B	24		23-32-12	275-299
	22		W0149	153	24		23-32-12	050-099, 150-199
	22		W0149	153R	24		23-32-12	275-299
	23		W0149	153Z			23-32-12	050-099, 150-199
	23		W0149	153B	24		23-32-12	275-299
	24	UNUSED						050-099, 150-199
	24		W0149	FRO			23-32-12	275-299
	DED		W0149	036Z			23-32-11	ALL
			W0149	032Z			23-32-12	275-299
			W0149	033Z			23-32-12	275-299
			W0149	034Z			23-32-12	275-299
			W0149	035Z			23-32-12	275-299
			W0149	152Z			23-32-12	275-299
			W0149	153Z			23-32-12	275-299
			W0149	FRN			23-32-12	275-299
			W0149	FRO			23-32-12	275-299
			W0149	FRP			23-32-12	275-299
D05597J		AP0202/ /		REPT-FWD CLOSET				275
D05597J		AP0205/ /		REPT-FWD CLOSET				276-299
	= A1		W1419	01CX			23-32-13	275-299
	= C1		W1419	01CO			23-32-13	275-299
D05597P		AP0202/ /		PLUG				275
D05597P		AP0205/ /		PLUG				276-299
	= A1		W0047	07CX			23-32-13	275-299
	= C1		W0047	07CO			23-32-13	275-299

HOOKUP LIST

D280T132

91-21-51

Section D05500

Page 62

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05598J		AC0702/ /		RCPT-R WING BODY DISC				ALL
	1	UNUSED						050-099
	1		W0656	013	22		SPARE	150-157
	1		W0656	013	22		30-11-11	162-199, 275-299
	2		W0656	015	24		30-11-11	ALL
	3	UNUSED						050-099
	3	FM	W0656	070	16		33-43-11	150-199, 275-299
	4		W0656	070	20		33-43-11	050-099
	4	UNUSED						150-199, 275-299
	5	UNUSED						ALL
	6	DK	W0656	050	18		33-44-21	ALL
	7	UNUSED						050-099, 162-199
	7		W0656	014	22		SPARE	150-157
	7		W0656	014	22		30-11-11	275-299
	8		W0656	009	22		30-11-11	ALL
	9	UNUSED						050-099
	9		W0656	206R	22		SPARE	150-199, 275-299
	10		W0656	011	22		30-11-11	ALL
	11		W0656	012	22		30-11-11	ALL
	12	UNUSED						ALL
	13	UNUSED						050-099
	13		W0656	065	24		SPARE	150-199, 275-299
	14	UNUSED						050-099
	14	DK	W0656	064	18		SPARE	150-199, 275-299
	15	UNUSED						ALL
	16	UNUSED						050-099
	16		W0656	066	22		SPARE	150-199, 275-299
	17		W0656	188	24		36-11-62	ALL
	18		W0656	189	24		36-11-62	ALL
	19		W0656	190	24		36-11-62	ALL
	20	UNUSED						050-099
	20		W0656	205B	24		SPARE	150-199, 275-299
	21	UNUSED						050-099
	21		W0656	205R	24		SPARE	150-199, 275-299
	22	UNUSED						050-099
	22		W0656	206B	22		SPARE	150-199, 275-299
	23		W0656	161	24		36-11-62	ALL
	24	DK	W0656	162	18		36-11-62	ALL
	25	DK	W0656	163	18		36-11-62	ALL
	26	UNUSED						050-099
	26		W0656	207B	24		SPARE	150-199, 275-299

HOOKUP LIST

D280T132

91-21-51

Section D05500

Page 63

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05598J		AC0702/ /		RCPT-R WING BODY DISC (continued)				ALL
	27	UNUSED						050-099
	27		W0656	207R	24		SPARE	150-199, 275-299
	28	UNUSED						ALL
D05598P		AC0702/ /		PLUG-R WING FS/BODY				ALL
	1	UNUSED						050-099
	1		W0418	027	20		SPARE	150-199
	1		W0418	027	20		30-11-11	275-299
	2		W0418	028	20		30-11-11	ALL
	3	UNUSED						050-099
	3		W0418	029	20		33-43-11	150-199, 275-299
	4		W0418	029	20		33-43-11	050-099
	4	UNUSED						150-199, 275-299
	5	UNUSED						ALL
	6	DL	W0418	031	18		33-44-21	ALL
	7	UNUSED						050-099
	7		W0418	032	20		SPARE	150-199
	7		W0418	032	20		30-11-11	275-299
	8		W0418	037	20		30-11-11	ALL
	9	UNUSED						ALL
	10		W0418	039	20		30-11-11	ALL
	11		W0418	040	20		30-11-11	ALL
	12		W0418	801	20		SPARE	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17		W0418	103	20		36-11-62	ALL
	18		W0418	104	20		36-11-62	ALL
	19		W0418	105	20		36-11-62	ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23		W0418	060	20		36-11-62	ALL
	24	DL	W0418	058	18		36-11-62	ALL
	25	DL	W0418	059	18		36-11-62	ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D05500

Page 64

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05599J		AP1501/ /		RCPT-				ALL
	1		W1415	401R	20		23-32-13	ALL
	2	UNUSED						ALL
	3		W1415	401G	20		23-32-13	ALL
	4		W1415	401B	20		23-32-13	ALL
	5		W1415	401Y	20		23-32-13	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
D05599P		AP1501/ /		PLUG-				ALL
	1		W1417	401R	20		23-32-13	ALL
	2	UNUSED						ALL
	3		W1417	401G	20		23-32-13	ALL
	4		W1417	401B	20		23-32-13	ALL
	5		W1417	401Y	20		23-32-13	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05602J		AE0218/ /		RCPT-P37				ALL
	1		W0192	12R	16		28-22-11	ALL
	2		W0192	12S	16		28-22-11	ALL
	3		W0192	12T	16		28-22-11	ALL
	4		W0192	70C	22		21-28-11	ALL
	5		W0192	60XR	24		36-23-21	ALL
	6		W0192	60XB	24		36-23-21	ALL
	7		W0192	684R	22		26-18-22	ALL
	8		W0192	685R	22		26-18-22	ALL
	9	UNUSED						ALL
	10		W0192	20S	24		21-61-81	ALL
	11		W0192	13B	24		21-61-81	ALL
	12	UNUSED						ALL
	13		W0192	64M	24		36-11-62	050-099, 150-156, 162-166, 275-276
	13	UNUSED						157, 167-199, 277-299
	14		W0192	64M	24		36-11-62	050-099, 150-156, 162-166, 275-276
	14	UNUSED						157, 167-199, 277-299
	DED		W0192	70CZ			21-28-11	050-099
D05602P		AE0218/ /		PLUG-P37				ALL
	1		W0506	682	16		28-22-11	ALL
	2		W0506	683	16		28-22-11	ALL
	3		W0506	684	16		28-22-11	ALL
	4		W0506	673	22		21-28-11	ALL
	5		W0506	227R	24		36-23-21	ALL
	6		W0506	227B	24		36-23-21	ALL
	7		W0506	719R	22		26-18-22	ALL
	8		W0506	720R	22		26-18-22	ALL
	9	UNUSED						ALL
	10		W0506	745	24		21-61-81	ALL
	11		W0506	746	24		21-61-81	ALL
	12	UNUSED						ALL
	13		W0506	557	24		36-11-62	050-099, 150-156, 162-166, 275-276
	13	UNUSED						157, 167-199, 277-299
	14		W0506	740	24		36-11-62	050-099, 150-156, 162-166, 275-276
	14	UNUSED						157, 167-199, 277-299
	DED		W0506	673Z			21-28-11	050-099
D05603J		AE0313/ /		RCPT-E1-2				ALL
	1		W1103	236R	24		22-12-11	ALL
	2		W1103	236B	24		22-12-11	ALL

HOOKUP LIST
D280T132

91-21-51
Section D05600
Page 1
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05603J		AE0313/ /		RCPT-E1-2 (continued)				ALL
	3		W1103	236Z			22-12-11	ALL
	4		W1103	062	22		22-41-11	ALL
	5		W1103	280R	24		22-41-11	ALL
	6		W1103	280B	24		22-41-11	ALL
	7		W1103	280Z			22-41-11	ALL
	8		W1103	060	24		22-41-11	ALL
	9		W1103	282R	24		22-32-12	ALL
	10		W1103	282B	24		22-32-12	ALL
	11		W1103	282Z			22-32-12	ALL
	12		W1103	061	22		22-32-12	ALL
	13		W1103	281R	24		22-41-12	ALL
	14		W1103	281B	24		22-41-12	ALL
	15		W1103	281Z			22-41-12	ALL
	16		W1103	265R	24		34-33-11	ALL
	17		W1103	265B	24		34-33-11	ALL
	18		W1103	265Z			34-33-11	ALL
	19	UNUSED						ALL
	20		W1103	294R	24		31-41-31	ALL
	21		W1103	294B	24		31-41-31	ALL
	22		W1103	294Z			31-41-31	ALL
	23		W1103	253R	24		34-43-11	ALL
	24		W1103	253B	24		34-43-11	ALL
	25		W1103	253Z			34-43-11	ALL
	26		W1103	242R	24		34-22-19	ALL
	27		W1103	242B	24		34-22-19	ALL
	28		W1103	242Z			34-22-19	ALL
	29		W1103	227R	24		34-22-19	ALL
	30		W1103	227B	24		34-22-19	ALL
	31		W1103	227Z			34-22-19	ALL
	32		W1103	228R	24		34-22-19	ALL
	33		W1103	228B	24		34-22-19	ALL
	34		W1103	228Z			34-22-19	ALL
	35		W1103	230R	24		22-41-13	ALL
	36		W1103	230B	24		22-41-13	ALL
	37		W1103	230Z			22-41-13	ALL
	38		W1103	289R	24		31-31-12	ALL
	39		W1103	289B	24		31-31-12	ALL
	40		W1103	289Z			31-31-12	ALL
	41		W1103	601	22		34-22-16	ALL
	42		W1103	246R	24		34-22-18	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05600

Page 2

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05603J		AE0313/ /		RCPT-E1-2 (continued)				ALL
	43		W1103	246B	24		34-22-18	ALL
	44		W1103	246Z			34-22-18	ALL
	45	UNUSED						ALL
	46		W1103	016	22		34-31-11	ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50		W1103	290R	24		21-31-11	ALL
	51		W1103	290B	24		21-31-11	ALL
	52		W1103	290Z			21-31-11	ALL
	53		W1103	094	22		34-22-16	ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
D05603P		AE0313/ /		PLUG-E1-2				ALL
	1		W0105	219R	24		22-12-11	ALL
	2		W0105	219B	24		22-12-11	ALL
	3		W0105	219Z			22-12-11	ALL
	4		W0105	071	22		22-14-31	ALL
	5		W0105	237R	24		22-41-11	ALL
	6		W0105	237B	24		22-41-11	ALL
	7		W0105	237Z			22-41-11	ALL
	8		W0105	085	24		22-41-11	ALL
	9		W0105	691R	24		22-32-12	ALL
	10		W0105	691B	24		22-32-12	ALL
	11		W0105	691Z			22-32-12	ALL
	12		W0105	769	22		22-32-12	ALL
	13		W0105	239R	24		22-41-12	ALL
	14		W0105	239B	24		22-41-12	ALL
	15		W0105	239Z			22-41-12	ALL
	16		W0105	292R	24		34-33-11	ALL
	17		W0105	292B	24		34-33-11	ALL
	18		W0105	292Z			34-33-11	ALL
	19	UNUSED						ALL
	20		W0105	694R	24		31-41-31	ALL
	21		W0105	694B	24		31-41-31	ALL
	22		W0105	694Z			31-41-31	ALL
	23		W0105	685R	24		34-43-11	ALL
	24		W0105	685B	24		34-43-11	ALL
	25		W0105	685Z			34-43-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05600

Page 3

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05603P		AE0313/ /		PLUG-E1-2 (continued)				ALL
	26		W0105	299R	24		34-22-19	ALL
	27		W0105	299B	24		34-22-19	ALL
	28		W0105	299Z			34-22-19	ALL
	29		W0105	253R	24		34-22-19	ALL
	30		W0105	253B	24		34-22-19	ALL
	31		W0105	253Z			34-22-19	ALL
	32		W0105	687R	24		34-22-19	ALL
	33		W0105	687B	24		34-22-19	ALL
	34		W0105	687Z			34-22-19	ALL
	35		W0105	698R	24		22-41-13	ALL
	36		W0105	698B	24		22-41-13	ALL
	37		W0105	698Z			22-41-13	ALL
	38		W0105	209R	24		31-31-12	ALL
	39		W0105	209B	24		31-31-12	ALL
	40		W0105	209Z			31-31-12	ALL
	41		W0105	624	22		34-22-16	ALL
	42		W0105	291R	24		34-22-18	ALL
	43		W0105	291B	24		34-22-18	ALL
	44		W0105	291Z			34-22-18	ALL
	45	UNUSED						ALL
	46		W0105	108	22		34-31-11	ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50		W0105	517R	24		21-31-11	ALL
	51		W0105	517B	24		21-31-11	ALL
	52		W0105	517Z			21-31-11	ALL
	53		W0105	094	22		34-22-16	ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
D05605J		AE0315/ /		RCPT-E1-3				ALL
	1	UNUSED						ALL
	2		W0105	215B	24		22-12-11	ALL
	3		W0105	215R	24		22-12-11	ALL
	4		W0105	215Z			22-12-11	ALL
	5		W0105	217R	24		22-12-31	ALL
	6		W0105	217B	24		22-12-31	ALL
	7		W0105	217Z			22-12-31	ALL
	8		W0105	220R	24		22-12-31	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05600

Page 4

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05605J		AE0315/ /		RCPT-E1-3 (continued)				ALL
	9		W0105	220B	24		22-12-31	ALL
	10		W0105	220Z			22-12-31	ALL
	11		W0105	222R	24		22-13-11	ALL
	12		W0105	222B	24		22-13-11	ALL
	13		W0105	222Z			22-13-11	ALL
	14		W0105	069	24		22-15-12	ALL
	15		W0105	070	22		22-14-31	ALL
	16		W0105	079	24		22-15-12	ALL
	17		W0105	073	24		22-14-31	ALL
	18		W0105	230R	24		22-15-11	ALL
	19		W0105	230B	24		22-15-11	ALL
	20		W0105	230Z			22-15-11	ALL
	21		W0105	076	24		22-15-12	ALL
	22		W0105	585R	24		34-45-14	ALL
	23		W0105	585B	24		34-45-14	ALL
	24		W0105	585Z			34-45-14	ALL
	25	UNUSED						050-099, 150-156, 162-166, 275-276
	25		W0105	137	22		34-45-14	157, 167-199, 277-299
	26	UNUSED						050-099, 150-156, 162-166, 275-276
	26		W0105	138	22		34-45-14	157, 167-199, 277-299
	27		W0105	524R	24		23-51-13	ALL
	28		W0105	524B	24		23-51-13	ALL
	29		W0105	024	24		22-11-12	ALL
	30		W0105	025	24		22-11-12	ALL
	31		W0105	051	24		22-14-11	ALL
	32	UNUSED						ALL
	33		W0105	059	24		22-14-11	ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						050-099, 150-156, 162-166, 275-276
	40		W0105	599R	24		34-45-14	157, 167-199, 277-299
	41	UNUSED						050-099, 150-156, 162-166, 275-276
	41		W0105	599B	24		34-45-14	157, 167-199, 277-299
	42	UNUSED						050-099, 150-156, 162-166, 275-276
	42		W0105	599Z			34-45-14	157, 167-199, 277-299
	43	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D05600

Page 5

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05605J		AE0315/ /		RCPT-E1-3 (continued)				ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
D05605P		AE0315/ /		PLUG-E1-3				ALL
	1	UNUSED						ALL
	2		W0107	215B	24		22-12-11	ALL
	3		W0107	215R	24		22-12-11	ALL
	4		W0107	215Z			22-12-11	ALL
	5		W0107	217R	24		22-12-31	ALL
	6		W0107	217B	24		22-12-31	ALL
	7		W0107	217Z			22-12-31	ALL
	8		W0107	213R	24		22-12-31	ALL
	9		W0107	213B	24		22-12-31	ALL
	10		W0107	213Z			22-12-31	ALL
	11		W0107	223R	24		22-13-11	ALL
	12		W0107	223B	24		22-13-11	ALL
	13		W0107	223Z			22-13-11	ALL
	14		W0107	045	24		22-15-12	ALL
	15		W0107	046	22		22-14-31	ALL
	16		W0107	044	24		22-15-12	ALL
	17		W0107	053	24		22-14-31	ALL
	18		W0107	230R	24		22-15-11	ALL
	19		W0107	230B	24		22-15-11	ALL
	20		W0107	230Z			22-15-11	ALL
	21		W0107	079	24		22-15-12	ALL
	22		W0107	232R	24		34-45-14	050-099, 150-199, 277-299
	22	UNUSED						275-276
	23		W0107	232B	24		34-45-14	050-099, 150-199, 277-299
	23	UNUSED						275-276
	24		W0107	232Z			34-45-14	050-099, 150-199, 277-299

HOOKUP LIST

D280T132

91-21-51

Section D05600

Page 6

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05605P		AE0315/ /		PLUG-E1-3 (continued)				ALL
	24	UNUSED						275-276
	25	UNUSED						050-099, 150-156, 162-166, 275-276
	25		W0107	062	22		34-45-14	157, 167-199, 277-299
	26	UNUSED						050-099, 150-156, 162-166, 275-276
	26		W0107	063	22		34-45-14	157, 167-199, 277-299
	27		W0107	202R	24		23-51-13	ALL
	28		W0107	202B	24		23-51-13	ALL
	29		W0107	059	24		22-11-12	ALL
	30		W0107	060	24		22-11-12	ALL
	31		W0107	049	24		22-14-11	ALL
	32	UNUSED						ALL
	33		W0107	051	24		22-14-11	ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						050-099, 150-156, 162-166, 275-276
	40		W0107	236R	24		34-45-14	157, 167-199, 277-299
	41	UNUSED						050-099, 150-156, 162-166, 275-276
	41		W0107	236B	24		34-45-14	157, 167-199, 277-299
	42	UNUSED						050-099, 150-156, 162-166, 275-276
	42		W0107	236Z			34-45-14	157, 167-199, 277-299
	43	UNUSED						ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
D05607J		AE0321/ /		RCPT-E1-4				ALL
	1		W0107	219R	24		22-12-11	ALL

HOOKUP LIST
D280T132

91-21-51
Section D05600
Page 7
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05607J		AE0321 / /		RCPT-E1-4 (continued)				ALL
	2		W0107	219B	24		22-12-11	ALL
	3		W0107	219Z			22-12-11	ALL
	4		W0107	259WB	24		34-43-21	ALL
	5		W0107	259W	24		34-43-21	ALL
	6		W0107	259Z			34-43-21	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10		W0107	044	24		22-15-12	ALL
	11		W0107	204R	24		34-22-39	ALL
	12		W0107	204B	24		34-22-39	ALL
	13		W0107	204Z			34-22-39	ALL
	14		W0107	604	22		34-22-36	ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						050-099, 151
	18		W0107	9001R	24		34-22-39	150, 152-199, 275-299
	19	UNUSED						050-099, 151
	19		W0107	9001B	24		34-22-39	150, 152-199, 275-299
	20	UNUSED						050-099, 151
	20		W0107	901Z			34-22-39	150, 152-199, 275-299
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D05607P		AE0321 / /		PLUG-E1-4				ALL
	1		W0109	236R	24		22-12-11	ALL
	2		W0109	236B	24		22-12-11	ALL
	3		W0109	236Z			22-12-11	ALL
	4		W0109	235WB	24		34-43-21	ALL
	5		W0109	235W	24		34-43-21	ALL
	6		W0109	235Z			34-43-21	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10		W0109	065	24		22-15-12	ALL
	11		W0109	209R	24		34-22-39	ALL
	12		W0109	209B	24		34-22-39	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05600

Page 8

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05607P		AE0321/ /		PLUG-E1-4 (continued)				ALL
	13		W0109	209Z			34-22-39	ALL
	14		W0109	611	22		34-22-36	ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						050-099, 151
	18		W0109	9018R	24		34-46-13	150, 152-199, 275-299
	19	UNUSED						050-099, 151
	19		W0109	9018B	24		34-46-13	150, 152-199, 275-299
	20	UNUSED						050-099, 151
	20		W0109	918Z			34-46-13	150, 152-199, 275-299
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D05608J		AL1004/ /		RCPT-				ALL
	1		W0628	203R	22		32-61-12	ALL
	2		W0628	203B	22		32-61-12	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W0628	023	20		33-31-11	ALL
	6		W0628	022	16		33-31-11	ALL
	7		W0628	025	16		33-31-11	ALL
	8		W0628	028	20		33-31-11	ALL
	9		W0628	029	20		33-31-11	ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
D05608P		AL1004/ /		PLUG-				ALL
	1		W0932	201R	18		32-61-12	ALL
	2		W0932	201B	18		32-61-12	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W0932	005	20		33-31-11	ALL
	6		W0932	006	16		33-31-11	ALL
	7		W0932	007	16		33-31-11	ALL

HOOKUP LIST
D280T132

91-21-51
Section D05600
Page 9
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05608P		AL1004/ /		PLUG- (continued)				ALL
	8		W0932	008	20		33-31-11	ALL
	9		W0932	009	20		33-31-11	ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
D05609J		AE0323/ /		RCPT-E1-5				ALL
	1		W0109	602R	24		34-46-11	ALL
	2		W0109	602B	24		34-46-11	ALL
	3		W0109	602Z			34-46-11	ALL
	4	UNUSED						ALL
	5		W0109	201R	24		34-22-91	ALL
	6		W0109	201B	24		34-22-91	ALL
	7		W0109	201Z			34-22-91	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
D05609P		AE0323/ /		PLUG-				ALL
	1		W0161	222R	24		34-46-11	ALL
	2		W0161	222B	24		34-46-11	ALL
	3		W0161	222Z			34-46-11	ALL
	4	UNUSED						ALL
	5		W0161	211R	24		34-22-91	ALL
	6		W0161	211B	24		34-22-91	ALL
	7		W0161	211Z			34-22-91	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D05600

Page 10

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05609P		AE0323/ /		PLUG- (continued)				ALL
	15	UNUSED						ALL
D05612J		AE0218/ /		RCPT-P37				ALL
	1	UNUSED						ALL
	2		W0192	12H	24		29-11-12	ALL
	3		W0192	09L	22		29-11-12	ALL
	4		W0192	764	24		21-51-21	ALL
	5		W0192	70U	24		21-58-14	050-099, 155-199, 276-299
	5		W0192	04E	24		21-58-14	150-154, 275
	6		W0192	766	24		21-51-21	ALL
	7		W0192	767	24		21-51-21	ALL
	8		W0192	768	24		21-51-21	ALL
	9		W0192	769	24		21-51-21	ALL
	10		W0192	11C	24		80-11-11	ALL
	11		W0192	886	24		29-11-12	ALL
	12		W0192	702	24		29-11-12	ALL
	13		W0192	83J	22		30-21-11	050-099, 150-199
	13	UNUSED						275-299
	14		W0192	03H	24		21-51-13	ALL
	15		W0192	82H	24		73-21-16	050-099, 150-199
	15	UNUSED						275-299
	16		W0192	283R	24		73-21-12	ALL
	17		W0192	04F	24		21-58-14	ALL
	18		W0192	91G	24		73-21-11	050-099, 277-299
	18	UNUSED						150-199, 275-276
	19		W0192	91GZ			73-21-11	050-099, 277-299
	19	UNUSED						150-199, 275-276
	20		W0192	502	24		21-58-15	ALL
	21		W0192	795	24		29-11-12	ALL
	22		W0192	885	22		29-11-12	ALL
	23		W0192	507	22		29-11-12	ALL
	24		W0192	801	22		29-11-12	ALL
	25		W0192	09U	24		80-11-21	ALL
	26		W0192	239R	24		32-09-12	ALL
	27		W0192	283B	24		73-21-17	ALL
	28		W0192	239B	24		32-09-12	ALL
	29		W0192	283Z			73-21-12	ALL
	30		W0192	704	24		21-58-15	ALL
	31		W0192	772	22		29-32-11	ALL
	32	UNUSED						050-099, 277-299

HOOKUP LIST
D280T132

91-21-51
Section D05600
Page 11
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05612J		AE0218/ /		RCPT-P37 (continued)				ALL
	32		W0192	91G	24		73-21-11	150-199, 275-276
	33	UNUSED						050-099, 277-299
	33		W0192	91GZ			73-21-11	150-199, 275-276
	34	UNUSED						ALL
	35		W0192	09W	24		29-11-31	ALL
	36		W0192	09X	24		29-11-31	ALL
	37	UNUSED						ALL
	38		W0192	512	24		21-61-11	ALL
	39		W0192	527	22		21-61-11	ALL
	40		W0192	528	24		21-61-11	ALL
	41		W0192	535	24		21-61-11	ALL
	42		W0192	536	24		21-61-11	ALL
	43		W0192	537	24		21-61-11	ALL
	44		W0192	538	24		21-61-11	ALL
	45		W0192	566	24		21-61-11	ALL
	46		W0192	567	24		21-61-21	ALL
	47		W0192	568	24		21-61-21	ALL
	48		W0192	629	24		21-61-21	ALL
	49		W0192	245B	24		21-61-21	ALL
	50		W0192	245R	24		21-61-21	ALL
	51		W0192	646	24		21-61-21	ALL
	52		W0192	647	22		21-61-21	ALL
	53		W0192	648	24		21-61-21	ALL
	54		W0192	652	24		21-61-11	ALL
	55		W0192	653	24		21-61-11	ALL
	56		W0192	690	24		21-61-21	ALL
	57		W0192	699	24		21-61-21	ALL
	58		W0192	700	24		21-61-31	ALL
	59		W0192	701	24		21-61-31	ALL
	60		W0192	201B	24		21-31-21	ALL
	61		W0192	201R	24		21-31-21	ALL
	DED		W0192	09UZ			80-11-21	ALL
	DED		W0192	09WZ			29-11-31	ALL
	DED		W0192	09XZ			29-11-31	ALL
	DED		W0192	11CZ			80-11-11	ALL
D05612P		AE0218/ /		PLUG-P37				ALL
	1	UNUSED						ALL
	2		W0506	681	24		29-11-12	ALL
	3		W0506	653	24		29-11-12	ALL

HOOKUP LIST
D280T132

91-21-51
Section D05600
Page 12
Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05612P		AE0218/ /		PLUG-P37 (continued)				ALL
	4		W0506	028	24		21-51-21	ALL
	5		W0506	656	24		21-58-14	ALL
	6		W0506	030	24		21-51-21	ALL
	7		W0506	031	24		21-51-21	ALL
	8		W0506	032	24		21-51-21	ALL
	9		W0506	033	24		21-51-21	ALL
	10		W0506	674	24		80-11-11	ALL
	11		W0506	601	24		29-11-12	ALL
	12		W0506	073	24		29-11-12	ALL
	13		W0506	779	22		30-21-11	050-099, 150-199 275-299
	13	UNUSED						
	14		W0506	654	24		21-51-13	ALL
	15		W0506	755	24		73-21-16	050-099, 150-199 275-299
	15	UNUSED						
	16		W0506	219R	20		73-21-12	ALL
	17		W0506	657	24		21-58-14	ALL
	18		W0506	569	24		73-21-11	050-099, 277-299
	18	UNUSED						150-199, 275-276
	19		W0506	569Z			73-21-11	050-099, 277-299
	19	UNUSED						150-199, 275-276
	20		W0506	139	24		21-58-15	ALL
	21		W0506	091	24		29-11-12	ALL
	22		W0506	092	22		29-11-12	ALL
	23		W0506	093	22		29-11-12	ALL
	24		W0506	094	22		29-11-12	ALL
	25		W0506	675	24		80-11-21	ALL
	26		W0506	210R	24		32-09-12	ALL
	27		W0506	219B	20		73-21-17	ALL
	28		W0506	210B	24		32-09-12	ALL
	29		W0506	219Z			73-21-12	ALL
	30		W0506	145	24		21-58-15	ALL
	31		W0506	163	22		29-32-11	ALL
	32	UNUSED						050-099, 277-299
	32		W0506	569	24		73-21-11	150-199, 275-276
	33	UNUSED						050-099, 277-299
	33		W0506	569Z			73-21-11	150-199, 275-276
	34	UNUSED						ALL
	35		W0506	676	24		29-11-31	ALL
	36		W0506	677	24		29-11-31	ALL
	37	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D05600

Page 13

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05612P		AE0218/ /		PLUG-P37 (continued)				ALL
	38		W0506	194	24		21-61-11	ALL
	39		W0506	195	22		21-61-11	ALL
	40		W0506	711	24		21-61-11	ALL
	41		W0506	197	24		21-61-11	ALL
	42		W0506	198	24		21-61-11	ALL
	43		W0506	199	24		21-61-11	ALL
	44		W0506	502	24		21-61-11	ALL
	45		W0506	503	24		21-61-11	ALL
	46		W0506	504	24		21-61-21	ALL
	47		W0506	505	24		21-61-21	ALL
	48		W0506	712	24		21-61-21	ALL
	49		W0506	206B	24		21-61-21	ALL
	50		W0506	206R	24		21-61-21	ALL
	51		W0506	510	24		21-61-21	ALL
	52		W0506	511	22		21-61-21	ALL
	53		W0506	512	24		21-61-21	ALL
	54		W0506	522	24		21-61-11	ALL
	55		W0506	523	24		21-61-11	ALL
	56		W0506	524	24		21-61-21	ALL
	57		W0506	525	24		21-61-21	ALL
	58		W0506	526	24		21-61-31	ALL
	59		W0506	527	24		21-61-31	ALL
	60		W0506	212B	24		21-31-21	ALL
	61		W0506	212R	24		21-31-21	ALL
	DED		W0506	674Z			80-11-11	ALL
	DED		W0506	675Z			80-11-21	ALL
D05613J		AE0313/ /		RCPT-E1-2				ALL
	1	UNUSED						050-099, 162-199, 277-299
	1	UNUSED	W1100	279Z			77-12-11	150-157, 275-276
	2	UNUSED						050-099, 162-199, 277-299
	2	UNUSED	W1100	279B	24		77-12-11	150-157, 275-276
	3	UNUSED						050-099, 162-199, 277-299
	3	UNUSED	W1100	279R	24		77-12-11	150-157, 275-276
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D05600

Page 14

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05613J		AE0313/ /		RCPT-E1-2 (continued)				ALL
	10	UNUSED						ALL
	11		W1100	274R	24		34-22-19	ALL
	12		W1100	274B	24		34-22-19	ALL
	13		W1100	274Z			34-22-19	ALL
	14		W1100	275R	24		73-21-14	ALL
	15		W1100	275B	24		73-21-14	ALL
	16		W1100	275Z			73-21-14	ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D05613P		AE0313/ /		PLUG-E1-2				ALL
	1	UNUSED						050-099, 162-199, 277-299
	1		W0115	209Z			77-12-11	150-157, 275-276
	2	UNUSED						050-099, 162-199, 277-299
	2		W0115	209B	24		77-12-11	150-157, 275-276
	3	UNUSED						050-099, 162-199, 277-299
	3		W0115	209R	24		77-12-11	150-157, 275-276
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11		W0115	527R	24		34-22-19	ALL
	12		W0115	527B	24		34-22-19	ALL
	13		W0115	527Z			34-22-19	ALL
	14		W0115	206R	24		73-21-14	ALL
	15		W0115	206B	24		73-21-14	ALL
	16		W0115	206Z			73-21-14	ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D05600
Page 15
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05613P		AE0313/ /		PLUG-E1-2 (continued)				ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D05614J		AC0506/ /		RCPT-P35				ALL
	1		W1066	521	20		25-53-11	ALL
	2		W1066	522	20		25-53-11	ALL
	3		W1066	523	24		52-34-12	ALL
	4		W1066	524	24		52-34-12	ALL
	5		W1066	525	24		52-34-12	ALL
	6		W1066	526	24		52-34-12	ALL
	7		W1066	527	24		52-34-12	ALL
	8		W1066	528	24		52-34-12	ALL
	9		W1066	529	24		52-34-12	ALL
	10		W1066	530	22		25-53-13	ALL
	11		W1066	141	20		52-34-11	ALL
	12		W1066	142	20		52-34-11	ALL
	13		W1066	143	20		52-34-11	ALL
	14		W1066	041	18		33-37-11	ALL
	15		W1066	535	22		25-53-14	050-099
	15		W1066	178	22		25-53-14	150-199, 275-299
	16		W1066	049	18		33-37-11	050-099
	16		W1066	049	16		33-37-11	150-199, 275-299
	17		W1066	538	20		33-37-11	ALL
	18		W1066	051	12		33-37-11	ALL
	19	UNUSED						ALL
	20		W1066	059	16		33-31-61	ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
D05614P		AC0506/ /		PLUG-P35				ALL
	1	FM	W0616	001	16		25-53-11	ALL
	2		W0616	002	20		25-53-11	ALL
	3		W0616	003	24		52-34-12	ALL
	4		W0616	004	24		52-34-12	ALL
	5		W0616	005	24		52-34-12	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05600

Page 16

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05614P		AC0506/ /		PLUG-P35 (continued)				ALL
	6		W0616	006	24		52-34-12	ALL
	7		W0616	007	24		52-34-12	ALL
	8		W0616	008	24		52-34-12	ALL
	9		W0616	009	24		52-34-12	ALL
	10		W0616	010	20		25-53-13	ALL
	11		W0616	031	20		52-34-11	ALL
	12		W0616	032	20		52-34-11	ALL
	13		W0616	033	20		52-34-11	ALL
	14		W0616	044	18		33-37-11	050-099
	14		W0616	044	16		33-37-11	150-199, 275-299
	15		W0616	030	20		25-53-14	ALL
	16		W0616	046	18		33-37-11	050-099
	16		W0616	046	16		33-37-11	150-199, 275-299
	17		W0616	047	20		33-37-11	ALL
	18		W0616	048	12		33-37-11	ALL
	19	UNUSED						ALL
	20		W0616	050	16		33-31-61	ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23		W0616	101	20		SPARE	ALL
	24	UNUSED						ALL
	25		W0616	801	20		SPARE	ALL
D05615J		AE0315/ /		RCPT E1-3				ALL
	1		W0115	205R	24		34-22-39	ALL
	2		W0115	205B	24		34-22-39	ALL
	3		W0115	205Z			34-22-39	ALL
	4		W0115	202R	24		31-31-12	ALL
	5		W0115	202B	24		31-31-12	ALL
	6		W0115	202Z			31-31-12	ALL
	7		W0115	063	24		22-14-11	ALL
	8		W0115	053	24		22-14-11	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12		W0115	040	24		34-31-31	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D05600
Page 17
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05615J		AE0315/ /		RCPT E1-3 (continued)				ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D05615P		AE0315/ /		PLUG E1-3				ALL
	1		W0117	204R	24		34-22-39	ALL
	2		W0117	204B	24		34-22-39	ALL
	3		W0117	204Z			34-22-39	ALL
	4		W0117	262R	24		31-31-12	ALL
	5		W0117	262B	24		31-31-12	ALL
	6		W0117	262Z			31-31-12	ALL
	7		W0117	047	24		22-14-11	ALL
	8		W0117	048	24		22-14-11	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12		W0117	110	24		34-31-31	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D05616J		AC1304/ /		RCPT-P39				ALL
	1		W1068	521	20		25-53-21	ALL
	2		W1068	522	20		25-53-21	ALL
	3		W1068	523	24		52-35-12	ALL
	4		W1068	524	24		52-35-12	ALL

HOOKUP LIST
D280T132



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05616J		AC1304/ /		RCPT-P39 (continued)				ALL
	5		W1068	525	24		52-35-12	ALL
	6		W1068	526	24		52-35-12	ALL
	7		W1068	527	24		52-35-12	ALL
	8		W1068	528	24		52-35-12	ALL
	9		W1068	529	24		52-35-12	ALL
	10		W1068	530	22		25-53-23	ALL
	11		W1068	141	20		52-35-11	ALL
	12		W1068	142	20		52-35-11	ALL
	13		W1068	143	20		52-35-11	ALL
	14		W1068	041	18		33-37-21	050-099
	14		W1068	041	16		33-37-21	150-199, 275-299
	15		W1068	535	22		25-53-24	ALL
	16	UNUSED						ALL
	17		W1068	538	20		33-37-21	ALL
	18		W1068	051	12		33-37-21	ALL
	19	UNUSED						ALL
	20		W1068	059	16		33-31-61	ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
D05616P		AC1304/ /		PLUG-P39				ALL
	1	FM	W0616	011	16		25-53-21	ALL
	2		W0616	012	20		25-53-21	ALL
	3		W0616	013	24		52-35-12	ALL
	4		W0616	014	24		52-35-12	ALL
	5		W0616	015	24		52-35-12	ALL
	6		W0616	016	24		52-35-12	ALL
	7		W0616	017	24		52-35-12	ALL
	8		W0616	018	24		52-35-12	ALL
	9		W0616	019	24		52-35-12	ALL
	10		W0616	020	20		25-53-23	ALL
	11		W0616	034	20		52-35-11	ALL
	12		W0616	035	20		52-35-11	ALL
	13		W0616	036	20		52-35-11	ALL
	14		W0616	054	14		33-37-21	ALL
	15		W0616	040	20		25-53-24	ALL
	16	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D05600
Page 19
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05616P		AC1304/ /		PLUG-P39 (continued)				ALL
	17		W0616	057	20		33-37-21	ALL
	18		W0616	058	12		33-37-21	ALL
	19	UNUSED						ALL
	20		W0616	060	16		33-31-61	ALL
	21		W0616	802	20		SPARE	ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
D05617J		AE0321/ /		RCPT-E1-4				ALL
	1		W0117	258W	24		34-43-21	ALL
	2		W0117	258WB	24		34-43-21	ALL
	3		W0117	258Z			34-43-21	ALL
	4	UNUSED						ALL
	5		W0117	052	24		22-41-13	ALL
	6		W0117	203R	24		34-22-39	ALL
	7		W0117	203B	24		34-22-39	ALL
	8		W0117	203Z			34-22-39	ALL
	9		W0117	044	24		22-15-12	ALL
	10		W0117	232R	24		22-15-11	ALL
	11		W0117	232B	24		22-15-11	ALL
	12		W0117	232Z			22-15-11	ALL
	13		W0117	244R	24		34-22-39	ALL
	14		W0117	244B	24		34-22-39	ALL
	15		W0117	244Z			34-22-39	ALL
	16		W0117	245R	24		34-22-39	ALL
	17		W0117	245B	24		34-22-39	ALL
	18		W0117	261R	24		22-12-21	ALL
	19		W0117	261B	24		22-12-21	ALL
	20		W0117	261Z			22-12-21	ALL
	21		W0117	081	24		22-15-12	ALL
	22	UNUSED						ALL
	23		W0117	220R	24		34-22-34	ALL
	24		W0117	220B	24		34-22-34	ALL
	25		W0117	220Z			34-22-34	ALL
	26		W0117	242R	24		34-22-38	ALL
	27		W0117	242B	24		34-22-38	ALL
	28		W0117	242Z			34-22-38	ALL
	29		W0117	024	24		34-22-37	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05600

Page 20

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05617J		AE0321 / /		RCPT-E1-4 (continued)				ALL
	30		W0117	080	22		22-14-31	ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33		W0117	029	24		34-22-37	ALL
	34		W0117	030	24		34-22-37	ALL
	35		W0117	031	24		34-22-37	ALL
	36		W0117	032	24		34-22-37	ALL
	37		W0117	245Z			34-22-39	ALL
	38		W0117	210R	24		34-22-38	ALL
	39		W0117	210B	24		34-22-38	ALL
	40		W0117	210Z			34-22-38	ALL
	41		W0117	050	24		22-11-22	ALL
	42		W0117	051	24		22-11-22	ALL
	43		W0117	045	24		22-14-21	ALL
	44		W0117	046	24		22-14-21	ALL
	45		W0117	053	24		22-14-21	ALL
	46		W0117	054	24		22-14-21	ALL
	47		W0117	240R	24		34-22-38	ALL
	48		W0117	240B	24		34-22-38	ALL
	49		W0117	240Z			34-22-38	ALL
	50		W0117	202R	24		34-22-38	ALL
	51		W0117	202B	24		34-22-38	ALL
	52		W0117	202Z			34-22-38	ALL
	53		W0117	103	24		34-22-36	ALL
	54		W0117	101	24		34-22-37	ALL
	55		W0117	005	22		34-22-36	ALL
D05617P		AE0321 / /		PLUG-E1-4				ALL
	1		W0119	502W	24		34-43-21	ALL
	2		W0119	502WB	24		34-43-21	ALL
	3		W0119	502Z			34-43-21	ALL
	4	UNUSED						ALL
	5		W0119	079	24		22-41-13	ALL
	6		W0119	512R	24		34-22-39	ALL
	7		W0119	512B	24		34-22-39	ALL
	8		W0119	512Z			34-22-39	ALL
	9		W0119	126	24		22-15-12	ALL
	10		W0119	232R	24		22-15-11	ALL
	11		W0119	232B	24		22-15-11	ALL
	12		W0119	232Z			22-15-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05600

Page 21

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05617P		AE0321 / /		PLUG-E1-4 (continued)				ALL
	13		W0119	282R	24		34-22-39	ALL
	14		W0119	282B	24		34-22-39	ALL
	15		W0119	282Z			34-22-39	ALL
	16		W0119	283R	24		34-22-39	ALL
	17		W0119	283B	24		34-22-39	ALL
	18		W0119	216R	24		22-12-21	ALL
	19		W0119	216B	24		22-12-21	ALL
	20		W0119	216Z			22-12-21	ALL
	21		W0119	086	24		22-15-12	ALL
	22	UNUSED						ALL
	23		W0119	296R	24		34-22-34	ALL
	24		W0119	296B	24		34-22-34	ALL
	25		W0119	296Z			34-22-34	ALL
	26		W0119	281R	24		34-22-38	ALL
	27		W0119	281B	24		34-22-38	ALL
	28		W0119	281Z			34-22-38	ALL
	29		W0119	187	24		34-22-37	ALL
	30		W0119	075	22		22-14-31	ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33		W0119	190	24		34-22-37	ALL
	34		W0119	191	24		34-22-37	ALL
	35		W0119	192	24		34-22-37	ALL
	36		W0119	193	24		34-22-37	ALL
	37		W0119	283Z			34-22-39	ALL
	38		W0119	284R	24		34-22-38	ALL
	39		W0119	284B	24		34-22-38	ALL
	40		W0119	284Z			34-22-38	ALL
	41		W0119	021	24		22-11-22	ALL
	42		W0119	022	24		22-11-22	ALL
	43		W0119	059	24		22-14-21	ALL
	44		W0119	051	24		22-14-21	ALL
	45		W0119	062	24		22-14-21	ALL
	46		W0119	063	24		22-14-21	ALL
	47		W0119	505R	24		34-22-38	ALL
	48		W0119	505B	24		34-22-38	ALL
	49		W0119	505Z			34-22-38	ALL
	50		W0119	250R	24		34-22-38	ALL
	51		W0119	250B	24		34-22-38	ALL
	52		W0119	250Z			34-22-38	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05600

Page 22

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05617P		AE0321/ /		PLUG-E1-4 (continued)				ALL
	53		W0119	160	24		34-22-36	ALL
	54		W0119	131	24		34-22-37	ALL
	55		W0119	612	22		34-22-36	ALL
D05618J		AE0317/ /		RCPT-E1-2				ALL
	1		W0616	038	24		52-34-12	ALL
	2		W0616	002	20		25-53-11	ALL
	3		W0616	057	20		33-37-21	ALL
	4		W0616	004	24		52-34-12	ALL
	5		W0616	005	24		52-34-12	ALL
	6		W0616	006	24		52-34-12	ALL
	7		W0616	007	24		52-34-12	ALL
	8		W0616	008	24		52-34-12	ALL
	9		W0616	009	24		52-34-12	ALL
	10		W0616	047	20		33-37-11	ALL
	11	UNUSED						ALL
	12		W0616	012	20		25-53-21	ALL
	13	UNUSED						ALL
	14		W0616	014	24		52-35-12	ALL
	15		W0616	015	24		52-35-12	ALL
	16		W0616	016	24		52-35-12	ALL
	17		W0616	017	24		52-35-12	ALL
	18		W0616	018	24		52-35-12	ALL
	19		W0616	019	24		52-35-12	ALL
	20	UNUSED						ALL
	21		W0616	802	20		SPARE	ALL
	22	UNUSED						ALL
	23		W0616	101	20		SPARE	ALL
	24	UNUSED						ALL
D05618P		AE0317/ /		PLUG-E1-2				ALL
	1		W1092	190	24		52-34-12	ALL
	2		W1092	007	22		25-53-11	ALL
	3		W1092	547	20		33-37-21	ALL
	4		W1092	193	24		52-34-12	ALL
	5		W1092	191	24		52-34-12	ALL
	6		W1092	196	24		52-34-12	ALL
	7		W1092	195	24		52-34-12	ALL
	8		W1092	194	24		52-34-12	ALL
	9		W1092	192	24		52-34-12	ALL

HOOKUP LIST
D280T132

91-21-51
Section D05600
Page 23
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05618P		AE0317/ /		PLUG-E1-2 (continued)				ALL
	10		W1092	571	20		33-37-11	ALL
	11	UNUSED						ALL
	12		W1092	006	22		25-53-21	ALL
	13	UNUSED						ALL
	14		W1092	510	24		52-35-12	ALL
	15		W1092	508	24		52-35-12	ALL
	16		W1092	513	24		52-35-12	ALL
	17		W1092	512	24		52-35-12	ALL
	18		W1092	511	24		52-35-12	ALL
	19		W1092	509	24		52-35-12	ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D05619J		AE0323/ /		RCPT-E1-5				ALL
	1		W0119	280R	24		34-22-28	ALL
	2		W0119	280B	24		34-22-28	ALL
	3		W0119	280Z			34-22-28	ALL
	4		W0119	225R	24		22-13-21	ALL
	5		W0119	225B	24		22-13-21	ALL
	6		W0119	225Z			22-13-21	ALL
	7	UNUSED						ALL
	8		W0119	501R	24		34-43-21	ALL
	9		W0119	501B	24		34-43-21	ALL
	10		W0119	501Z			34-43-21	ALL
	11		W0119	509R	24		34-22-29	ALL
	12		W0119	509B	24		34-22-29	ALL
	13		W0119	509Z			34-22-29	ALL
	14		W0119	043	12		34-21-21	ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17		W0119	299B	24		34-22-81	ALL
	18	UNUSED						ALL
	19		W0119	299R	24		34-22-81	ALL
	20	UNUSED						ALL
	21		W0119	FRA			34-22-81	ALL
	22	UNUSED						ALL
	23	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D05600

Page 24

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05619J		AE0323/ /		RCPT-E1-5 (continued)				ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
			W0119	299	20		34-22-81	ALL
			W0119	299Z			34-22-81	ALL
			W0119	FRA			34-22-81	ALL
D05619P		AE0323/ /		PLUG-E1-6				ALL
	1		W0171	218R	24		34-22-28	ALL
	2		W0171	218B	24		34-22-28	ALL
	3		W0171	218Z			34-22-28	ALL
	4		W0171	209R	24		22-13-21	ALL
	5		W0171	209B	24		22-13-21	ALL
	6		W0171	209Z			22-13-21	ALL
	7	UNUSED						ALL
	8		W0171	206R	24		34-43-21	ALL
	9		W0171	206B	24		34-43-21	ALL
	10		W0171	206Z			34-43-21	ALL
	11		W0171	233R	24		34-22-29	ALL
	12		W0171	233B	24		34-22-29	ALL
	13		W0171	233Z			34-22-29	ALL
	14		W0171	021	12		34-21-21	ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17		W0171	210B	24		34-22-81	ALL
	18	UNUSED						ALL
	19		W0171	210R	24		34-22-81	ALL
	20	UNUSED						ALL
	21		W0171	210Z			34-22-81	ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
D05622J		AE0320/ /		RCPT-E2-4				ALL
	1		W0768	071	22		27-51-11	ALL
	2		W0768	072	22		27-51-11	ALL
	3		W0768	073	22		27-51-11	ALL
	4		W0768	074	22		27-81-11	ALL
	5		W0768	075	22		27-81-11	ALL
	6		W0768	076	22		27-81-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05600

Page 25

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05622J		AE0320/ /		RCPT-E2-4 (continued)				ALL
	7		W0768	077	22		27-81-21	ALL
	8		W0768	078	22		27-81-21	ALL
	9		W0768	079	22		27-81-21	ALL
	10		W0768	206B	24		27-81-21	ALL
	11		W0768	206R	24		27-81-21	ALL
	12		W0768	303B	24		27-81-21	ALL
	13		W0768	303R	24		27-81-21	ALL
	14		W0768	303Y	24		27-81-21	ALL
	15		W0768	033	24		27-51-61	ALL
	16		W0768	034	24		27-51-61	ALL
	17		W0768	035	24		27-51-11	ALL
	18		W0768	036	24		27-51-11	ALL
	19		W0768	037	24		27-51-11	ALL
	20		W0768	038	24		27-51-11	ALL
	21		W0768	039	24		27-51-11	ALL
	22		W0768	040	24		27-51-11	ALL
	23		W0768	041	24		27-51-11	ALL
	24		W0768	042	24		27-51-11	ALL
	25		W0768	209B	24		27-51-11	ALL
	26		W0768	209R	24		27-51-11	ALL
	27		W0768	160	22		27-51-11	ALL
	28		W0768	211B	24		27-81-11	ALL
	29		W0768	211R	24		27-81-11	ALL
	30		W0768	306B	24		27-81-11	ALL
	31		W0768	306R	24		27-81-11	ALL
	32		W0768	306Y	24		27-81-11	ALL
	33		W0768	220R	20		77-31-11	ALL
	34		W0768	220W	20		77-31-11	ALL
	35		W0768	220Z			77-31-11	ALL
	36		W0768	203B	24		73-21-14	ALL
	37		W0768	203R	24		73-21-14	ALL
	38		W0768	202B	24		73-21-14	ALL
	39		W0768	202R	24		73-21-14	ALL
	40		W0768	FRL			73-21-14	050-099, 150-199
	40		W0768	FRG			73-21-14	275-299
	41		W0768	145	24		77-35-11	ALL
	42		W0768	146	24		77-35-11	ALL
	43		W0768	204B	24		73-21-14	ALL
	44		W0768	204R	24		73-21-14	ALL
	45		W0768	204Z			73-21-14	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05600

Page 26

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05622J		AE0320/ /		RCPT-E2-4 (continued)				ALL
	46		W0768	FRZ			73-21-17	050-099
	46		W0768	FRV			73-21-17	150-199
	46		W0768	FRJ			73-21-17	275-299
	47		W0768	548	24		73-21-17	ALL
	48		W0768	547	24		73-21-17	ALL
	49	UNUSED						ALL
	50		W0768	161	22		27-81-11	ALL
	51		W0768	162	22		27-81-21	ALL
	52		W0768	512	24		21-31-21	ALL
	53		W0768	164	24		24-51-52	ALL
	54		W0768	174	22		27-81-11	ALL
	55		W0768	175	22		27-81-11	ALL
			W0768	FRZ			73-21-17	050-099
			W0768	FRL			73-21-14	050-099, 150-199
			W0768	202Z			73-21-14	ALL
			W0768	203Z			73-21-14	ALL
			W0768	547Z			73-21-17	ALL
			W0768	548Z			73-21-17	ALL
			W0768	FRV			73-21-17	150-199
			W0768	FRG			73-21-14	275-299
			W0768	FRJ			73-21-17	275-299
D05622P		AE0320/ /		PLUG-E2-4				ALL
	1		W0016	001	22		27-51-11	ALL
	2		W0016	002	22		27-51-11	ALL
	3		W0016	003	22		27-51-11	ALL
	4		W0016	014	22		27-81-11	ALL
	5		W0016	015	22		27-81-11	ALL
	6		W0016	016	22		27-81-11	ALL
	7		W0016	017	22		27-81-21	ALL
	8		W0016	018	22		27-81-21	ALL
	9		W0016	019	22		27-81-21	ALL
	10		W0016	203B	24		27-81-21	ALL
	11		W0016	203R	24		27-81-21	ALL
	12		W0016	304B	24		27-81-21	ALL
	13		W0016	304R	24		27-81-21	ALL
	14		W0016	304Y	24		27-81-21	ALL
	15		W0016	004	24		27-51-61	ALL
	16		W0016	005	24		27-51-61	ALL
	17		W0016	006	24		27-51-11	ALL

HOOKUP LIST
D280T132

91-21-51
Section D05600
Page 27
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05622P		AE0320/ /		PLUG-E2-4 (continued)				ALL
	18		W0016	007	24		27-51-11	ALL
	19		W0016	008	24		27-51-11	ALL
	20		W0016	009	24		27-51-11	ALL
	21		W0016	010	24		27-51-11	ALL
	22		W0016	011	24		27-51-11	ALL
	23		W0016	012	24		27-51-11	ALL
	24		W0016	013	24		27-51-11	ALL
	25		W0016	201B	24		27-51-11	ALL
	26		W0016	201R	24		27-51-11	ALL
	27		W0016	160	22		27-51-11	ALL
	28		W0016	202B	24		27-81-11	ALL
	29		W0016	202R	24		27-81-11	ALL
	30		W0016	303B	24		27-81-11	ALL
	31		W0016	303R	24		27-81-11	ALL
	32		W0016	303Y	24		27-81-11	ALL
	33		W0016	216R	20		77-31-11	ALL
	34		W0016	216B	20		77-31-11	ALL
	35		W0016	216Z			77-31-11	ALL
	36		W0016	222B	24		73-21-14	ALL
	37		W0016	222R	24		73-21-14	ALL
	38		W0016	223B	24		73-21-14	ALL
	39		W0016	223R	24		73-21-14	ALL
	40		W0016	FRA			73-21-14	ALL
	41		W0016	187	24		77-35-11	ALL
	42		W0016	190	24		77-35-11	ALL
	43		W0016	227B	24		73-21-14	ALL
	44		W0016	227R	24		73-21-14	ALL
	45		W0016	227Z			73-21-14	ALL
	46		W0016	FRJ			73-21-17	050-099, 150-199, 277-299
	46	UNUSED						275-276
	47		W0016	501	24		73-21-17	ALL
	48		W0016	502	24		73-21-17	ALL
	49	UNUSED						ALL
	50		W0016	157	22		27-81-11	ALL
	51		W0016	159	22		27-81-21	ALL
	52		W0016	124	24		21-31-21	ALL
	53		W0016	162	24		24-51-52	ALL
	54		W0016	172	22		27-81-11	ALL
	55		W0016	177	22		27-81-11	ALL
			W0016	222Z			73-21-14	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05600

Page 28

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05622P		AE0320 /		PLUG-E2-4 (continued)				ALL
			W0016	223Z			73-21-14	ALL
			W0016	501Z			73-21-17	ALL
			W0016	502Z			73-21-17	ALL
			W0016	FRA			73-21-14	ALL
			W0016	FRJ			73-21-17	050-099, 150-199, 277-299
D05625J		AE0315 /		RCPT-E1-3				ALL
	1		W0125	203R	24		34-12-61	ALL
	2		W0125	203B	24		34-12-61	ALL
	3		W0125	203Z			34-12-61	ALL
	4		W0125	060	24		22-14-31	ALL
	5		W0125	005	24		22-15-12	ALL
	6	UNUSED						ALL
	7		W0125	231R	24		22-15-11	ALL
	8		W0125	231B	24		22-15-11	ALL
	9		W0125	231Z			22-15-11	ALL
	10		W0125	074	24		22-15-12	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22		W0125	025	22		22-11-32	ALL
	23		W0125	062	24		22-14-11	ALL
	24		W0125	059	24		22-14-31	ALL
	25		W0125	057	24		22-14-11	ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29		W0125	089	24		22-14-21	ALL
	30		W0125	202R	24		27-32-11	ALL
	31		W0125	202B	24		27-32-11	ALL
	32	UNUSED						ALL
	33	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D05600

Page 29

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05625J		AE0315/ /		RCPT-E1-3 (continued)				ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
D05625P		AE0315/ /		PLUG-E1-3				ALL
	1		W0127	516R	24		34-12-61	ALL
	2		W0127	516B	24		34-12-61	ALL
	3		W0127	516Z			34-12-61	ALL
	4		W0127	075	24		22-14-31	ALL
	5		W0127	021	24		22-15-12	ALL
	6	UNUSED						ALL
	7		W0127	231R	24		22-15-11	ALL
	8		W0127	231B	24		22-15-11	ALL
	9		W0127	231Z			22-15-11	ALL
	10		W0127	077	24		22-15-12	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22		W0127	018	22		22-11-32	ALL
	23		W0127	059	24		22-14-11	ALL
	24		W0127	066	24		22-14-31	ALL
	25		W0127	037	24		22-14-11	ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29		W0127	089	24		22-14-21	ALL
	30		W0127	291R	24		27-32-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05600

Page 30

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05625P		AE0315/ /		PLUG-E1-3 (continued)				ALL
	31		W0127	291B	24		27-32-11	ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
D05626J		AE0306/ /		RCPT-E2-4				ALL
	1		W0756	805	22		27-88-11	ALL
	2	UNUSED						ALL
	3		W0756	097	24		27-81-11	ALL
	4		W0756	115	22		27-58-31	ALL
	5		W0756	116	24		27-81-31	ALL
	6		W0756	546	24		27-88-11	ALL
	7		W0756	118	24		27-51-11	ALL
	8		W0756	592	24		77-35-11	ALL
	9		W0756	231B	22		27-51-41	ALL
	10		W0756	231R	22		27-51-41	ALL
	11		W0756	407B	24		27-51-41	ALL
	12		W0756	407G	24		27-51-41	ALL
	13		W0756	407R	24		27-51-41	ALL
	14		W0756	407Y	24		27-51-41	ALL
	15		W0756	227B	22		27-81-31	ALL
	16		W0756	227R	22		27-81-31	ALL
	17		W0756	306B	24		27-81-31	ALL
	18		W0756	306R	24		27-81-31	ALL
	19		W0756	306Y	24		27-81-31	ALL
	20		W0756	208B	22		27-51-41	ALL
	21		W0756	208R	22		27-51-41	ALL
	22		W0756	403B	22		27-51-41	ALL
	23		W0756	403G	22		27-51-41	ALL
	24		W0756	403R	22		27-51-41	ALL
	25		W0756	403Y	22		27-51-41	ALL
	26	UNUSED						ALL
	27	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D05600
Page 31
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05626J		AE0306/ /		RCPT-E2-4 (continued)				ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30		W0756	015	24		27-88-11	ALL
	31		W0756	016	24		27-88-11	ALL
	32		W0756	017	24		27-88-11	ALL
	33		W0756	018	24		27-88-11	ALL
	34		W0756	019	24		27-88-11	ALL
	35		W0756	020	24		27-88-11	ALL
	36		W0756	501	24		77-31-11	ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	DK	W0756	300R	18		31-31-25	ALL
	42	DK	W0756	300Y	18		31-31-25	ALL
	43		W0756	300Z			31-31-25	ALL
	44	DK	W0756	300B	18		31-31-25	ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51		W0756	547	24		27-88-11	ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
D05626P		AE0306/ /		PLUG-E2-4				ALL
	1		W0014	111	22		27-88-11	ALL
	2	UNUSED						ALL
	3		W0014	060	24		27-81-11	ALL
	4		W0014	061	22		27-58-31	ALL
	5		W0014	057	24		27-81-31	ALL
	6		W0014	022	24		27-88-11	ALL
	7		W0014	059	24		27-51-11	ALL
	8		W0014	602	24		77-35-11	ALL
	9		W0014	208B	22		27-51-41	ALL
	10		W0014	208R	22		27-51-41	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05600

Page 32

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05626P		AE0306/ /		PLUG-E2-4 (continued)				ALL
	11		W0014	404B	24		27-51-41	ALL
	12		W0014	404G	24		27-51-41	ALL
	13		W0014	404R	24		27-51-41	ALL
	14		W0014	404Y	24		27-51-41	ALL
	15		W0014	217B	22		27-81-31	ALL
	16		W0014	217R	22		27-81-31	ALL
	17		W0014	306B	24		27-81-31	ALL
	18		W0014	306R	24		27-81-31	ALL
	19		W0014	306Y	24		27-81-31	ALL
	20		W0014	205B	22		27-51-41	ALL
	21		W0014	205R	22		27-51-41	ALL
	22		W0014	401B	24		27-51-41	ALL
	23		W0014	401G	24		27-51-41	ALL
	24		W0014	401R	24		27-51-41	ALL
	25		W0014	401Y	24		27-51-41	ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30		W0014	062	24		27-88-11	ALL
	31		W0014	063	24		27-88-11	ALL
	32		W0014	576	24		27-88-11	ALL
	33		W0014	065	24		27-88-11	ALL
	34		W0014	066	24		27-88-11	ALL
	35		W0014	067	24		27-88-11	ALL
	36		W0014	507	24		77-31-11	ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	DL	W0014	309R	18		31-31-25	ALL
	42	DL	W0014	309Y	18		31-31-25	ALL
	43		W0014	309Z			31-31-25	ALL
	44	DL	W0014	309B	18		31-31-25	ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D05600

Page 33

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05626P		AE0306/ /		PLUG-E2-4 (continued)				ALL
	51		W0014	040	24		27-88-11	ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
D05627J		AE0321/ /		RCPT-E1-4				ALL
	1		W0127	072	24		22-14-31	ALL
	2		W0127	060	24		22-14-31	ALL
	3		W0127	217R	24		22-12-31	ALL
	4		W0127	217B	24		22-12-31	ALL
	5		W0127	217Z			22-12-31	ALL
	6		W0127	071	24		22-14-31	ALL
	7		W0127	065	24		22-14-31	ALL
	8		W0127	056	24		22-14-21	ALL
	9		W0127	089	24		22-14-21	ALL
	10		W0127	233R	24		22-15-11	ALL
	11		W0127	233B	24		22-15-11	ALL
	12		W0127	233Z			22-15-11	ALL
	13		W0127	042	24		22-15-12	ALL
	14	UNUSED						ALL
	15		W0127	161	24		34-46-12	050-099, 150-199, 275-278 280-299
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21		W0127	078	24		22-15-12	ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						150-199
	26	UNUSED						150-199
	27	UNUSED						150-199
	28	UNUSED						150-199
	29	UNUSED						150-199
	30	UNUSED						150-199
	31	UNUSED						150-199

HOOKUP LIST

D280T132

91-21-51

Section D05600

Page 34

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05627P		AE0321/ /		PLUG-E1-4				ALL
	1		W0129	079	24		22-14-31	ALL
	2		W0129	080	24		22-14-31	ALL
	3		W0129	234R	24		22-12-31	ALL
	4		W0129	234B	24		22-12-31	ALL
	5		W0129	234Z			22-12-31	ALL
	6		W0129	077	24		22-14-31	ALL
	7		W0129	057	24		22-14-31	ALL
	8		W0129	062	24		22-14-21	ALL
	9		W0129	089	24		22-14-21	ALL
	10		W0129	233R	24		22-15-11	ALL
	11		W0129	233B	24		22-15-11	ALL
	12		W0129	233Z			22-15-11	ALL
	13		W0129	006	24		22-15-12	ALL
	14	UNUSED						ALL
	15	UNUSED	W0129	101	24		34-46-12	050-099, 150-199, 275-278 280-299
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED	W0129	087	24		22-15-12	ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						150-199
	26	UNUSED						150-199
	27	UNUSED						150-199
	28	UNUSED						150-199
	29	UNUSED						150-199
	30	UNUSED						150-199
	31	UNUSED						150-199
D05629J		AE0323/ /		RCPT-E1-5				ALL
	1		W0129	221R	24		34-22-28	ALL
	2		W0129	221B	24		34-22-28	ALL
	3		W0129	221Z			34-22-28	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D05600
Page 35
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05629J		AE0323/ /		RCPT-E1-5 (continued)				ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D05629P		AE0323/ /		PLUG-E1-5				ALL
	1		W0181	215R	24		34-22-28	ALL
	2		W0181	215B	24		34-22-28	ALL
	3		W0181	215Z			34-22-28	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D05635J		AE0315/ /		RCPT-E1-3				ALL
	1		W0125	009	22		22-11-12	ALL
	2		W0125	205R	22		34-12-11	ALL
	3		W0125	205B	22		34-12-11	ALL
	4		W0125	001	22		34-12-11	ALL
	5		W0125	002	22		34-12-11	ALL
	6		W0125	003	22		34-12-11	ALL
	7		W0125	206R	22		34-12-11	ALL
	8		W0125	206B	22		34-12-11	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12		W0125	555Z			34-16-11	ALL
	13		W0125	555R	24		34-16-11	ALL
	14		W0125	555B	24		34-16-11	ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D05600

Page 36

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05635J		AE0315/ /		RCPT-E1-3 (continued)				ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	DED		W0125	001Z			34-12-11	ALL
	DED		W0125	003Z			34-12-11	ALL
	DED		W0125	205Z			34-12-11	ALL
	DED		W0125	206Z			34-12-11	ALL
D05635P		AE0315/ /		PLUG-E1-3				ALL
	1		W0127	058	22		22-11-12	ALL
	2		W0127	523R	22		34-12-11	ALL
	3		W0127	523B	22		34-12-11	ALL
	4		W0127	097	22		34-12-11	ALL
	5		W0127	098	22		34-12-11	ALL
	6		W0127	113	22		34-12-11	ALL
	7		W0127	524R	22		34-12-11	ALL
	8		W0127	524B	22		34-12-11	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12		W0127	543Z			34-16-11	ALL
	13		W0127	543R	24		34-16-11	ALL
	14		W0127	543B	24		34-16-11	ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	DED		W0127	097Z			34-12-11	ALL
	DED		W0127	113Z			34-12-11	ALL
	DED		W0127	523Z			34-12-11	ALL
	DED		W0127	524Z			34-12-11	ALL

HOOKUP LIST
D280T132

91-21-51
Section D05600
Page 37
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05637J		AE0321 / /		RCPT-E1-4				ALL
	1		W0127	036	22		22-11-22	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						050-099, 151, 275-299
	7		W0117	916	20		23-32-21	150, 152-199
	8	UNUSED						050-099, 151, 275-299
	8		W0117	908Z			23-32-21	150, 152-156, 162-199
	8		W0117	FRU			23-32-21	157
	9	UNUSED						050-099, 151, 275-299
	9		W0117	908B	22		23-32-21	150, 152-199
	10	UNUSED						050-099, 151, 275-299
	10		W0117	908R	22		23-32-21	150, 152-199
	11	UNUSED						ALL
	12	UNUSED						050-099, 151, 275-299
	12		W0117	907	20		23-32-21	150, 152-199
	DED		W0117	907Z			23-32-21	150, 152-156, 162-199
			W0117	907Z			23-32-21	157
			W0117	908Z			23-32-21	157
			W0117	FRU			23-32-21	157
D05637P		AE0321 / /		PLUG-E1-4				ALL
	1		W0129	009	22		22-11-22	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						050-099, 151, 275-299
	7		W0119	903	22		23-32-21	150, 152-199
	8	UNUSED						050-099, 151, 275-299
	8		W0119	FRL			23-32-21	150, 152-199
	9	UNUSED						050-099, 151, 275-299
	9		W0119	901B	22		23-32-21	150, 152-199
	10	UNUSED						050-099, 151, 275-299
	10		W0119	901R	22		23-32-21	150, 152-199
	11	UNUSED						ALL
	12	UNUSED						050-099, 151, 275-299

HOOKUP LIST

D280T132

91-21-51

Section D05600

Page 38

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05637P		AE0321/ /		PLUG-E1-4 (continued)				ALL
	12		W0119	902	20		23-32-21	150, 152-199
			W0119	901Z			23-32-21	150, 152-199
			W0119	902Z			23-32-21	150, 152-199
			W0119	FRL			23-32-21	150, 152-199
D05638J		AE0317/ /		RCPT-E1-2				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W0768	052	24		78-34-21	ALL
	4		W0768	183	22		78-36-11	ALL
	5	UNUSED						050-099, 275-299
	5		W0768	501	22		SPARE	150-199
	6		W0768	188	24		32-09-13	ALL
	7		W0768	018	24		78-34-21	ALL
	8		W0768	503	22		SPARE	050-099, 150-199
	8	UNUSED						275-299
	9		W0768	110	22		SPARE	ALL
	10		W0768	220R	20		77-31-11	ALL
	11		W0768	220W	20		77-31-11	ALL
	12		W0768	220Z			77-31-11	ALL
	13		W0768	243B	24		77-12-12	ALL
	14		W0768	243R	24		77-12-12	ALL
	15		W0768	243Z			77-12-12	ALL
	16		W0768	177	20		33-43-11	050-099
	16	DK	W0768	177	18		33-43-11	150-199, 275-299
	17		W0768	196	24		32-09-12	ALL
	18		W0768	197	24		32-09-12	ALL
	19		W0768	198	24		32-09-12	ALL
	20		W0768	199	24		32-09-12	ALL
	21		W0768	227R	24		77-12-11	ALL
	22		W0768	227B	24		77-12-11	ALL
	23		W0768	227Z			77-12-11	ALL
	24		W0768	172	24		74-31-21	ALL
	CAP	Y	W0768	502	22		SPARE	150-199
	DED		W0768	183Z			78-36-11	ALL
D05638P		AE0317/ /		PLUG-E1-2				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W1100	050	24		78-34-21	ALL

HOOKUP LIST
D280T132

91-21-51
Section D05600
Page 39
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05638P		AE0317/ /		PLUG-E1-2 (continued)				ALL
	4		W1100	122	22		78-36-11	ALL
	5	UNUSED						ALL
	6		W1100	097	24		32-09-13	ALL
	7		W1100	048	24		78-34-21	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10		W1100	220R	20		77-31-11	ALL
	11		W1100	220W	20		77-31-11	ALL
	12		W1100	220Z			77-31-11	ALL
	13		W1100	231B	24		77-12-12	ALL
	14		W1100	231R	24		77-12-12	ALL
	15		W1100	231Z			77-12-12	ALL
	16		W1100	106	20		33-43-11	050-099
	16	DL	W1100	106	18		33-43-11	150-199, 275-299
	17		W1100	063	24		32-09-12	ALL
	18		W1100	065	24		32-09-12	ALL
	19		W1100	059	24		32-09-12	ALL
	20		W1100	064	24		32-09-12	ALL
	21		W1100	280R	24		77-12-11	ALL
	22		W1100	280B	24		77-12-11	ALL
	23		W1100	280Z			77-12-11	ALL
	24		W1100	084	24		74-31-21	ALL
	DED		W1100	122Z			78-36-11	ALL
D05644J		AE0202/ /		RCPT-				ALL
	1		W1080	046	24		21-58-15	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W1080	044	24		21-58-15	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W1080	045	24		21-58-15	ALL
	8		W1080	041	24		21-58-15	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14		W1080	047	22		36-11-52	ALL
	15	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D05600

Page 40

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05644J		AE0202/ /		RCPT- (continued)				ALL
	16	UNUSED						ALL
	17		W1080	055	24		21-26-11	ALL
	18		W1080	053	24		21-26-11	ALL
	19	UNUSED						ALL
	20		W1080	054	24		21-26-11	ALL
	21		W1080	050	24		21-26-11	ALL
	22		W1080	052	24		21-26-11	ALL
	23	UNUSED						ALL
	24		W1080	111	22		21-58-11	ALL
	25		W1080	740	24		36-11-52	ALL
	26	UNUSED						050-099, 150-155, 162-165, 275-276
	26		W1080	029	24		21-26-11	156-157, 166-199, 277-299
	27	UNUSED						050-099, 150-155, 162-165, 275-276
	27		W1080	01A	24		21-26-11	156-157, 166-199, 277-299
	28		W1080	107	24		21-58-11	ALL
	29		W1080	132	22		36-22-11	ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32		W1080	056	24		21-26-11	ALL
	33		W1080	776	24		21-26-11	ALL
	34		W1080	742	22		36-11-52	ALL
	35		W1080	121	24		36-11-52	ALL
	36		W1080	122	22		36-11-52	ALL
	37		W1080	126	24		36-11-52	ALL
	38		W1080	129	22		36-22-11	ALL
	39	UNUSED						ALL
	40		W1080	500	24		21-58-11	ALL
	41		W1080	103	24		21-58-11	ALL
D05644P		AE0202/ /		PLUG-P50				ALL
	1	DK	W0506	142	18		21-58-15	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W0506	145	24		21-58-15	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W0506	140	24		21-58-15	ALL
	8		W0506	710	24		21-58-15	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D05600
Page 41
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05644P		AE0202/ /		PLUG-P50 (continued)				ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14		W0506	689	22		36-11-52	ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17		W0506	170	24		21-26-11	ALL
	18		W0506	171	24		21-26-11	ALL
	19	UNUSED						ALL
	20		W0506	173	24		21-26-11	ALL
	21		W0506	174	24		21-26-11	ALL
	22		W0506	169	24		21-26-11	ALL
	23	UNUSED						ALL
	24		W0506	178	22		21-58-11	ALL
	25		W0506	589	24		36-11-52	ALL
	26	UNUSED						050-099, 150-155, 162-165, 275-276
	26		W0506	777	24		21-26-11	156-157, 166-199, 277-299
	27	UNUSED						050-099, 150-155, 162-165, 275-276
	27		W0506	778	24		21-26-11	156-157, 166-199, 277-299
	28		W0506	175	24		21-58-11	ALL
	29		W0506	652	22		36-22-11	ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32		W0506	699	24		21-26-11	ALL
	33		W0506	700	24		21-26-11	ALL
	34		W0506	539	22		36-11-52	ALL
	35		W0506	587	24		36-11-52	ALL
	36		W0506	541	22		36-11-52	ALL
	37		W0506	542	24		36-11-52	ALL
	38		W0506	578	22		36-22-11	ALL
	39	UNUSED						ALL
	40		W0506	592	24		21-58-11	ALL
	41		W0506	624	24		21-58-11	ALL
D05646J		AE0319/ /		RCPT-E1-2				ALL
	1		W0264	031	24		29-11-32	ALL
	2	UNUSED						ALL
	3		W0264	033	20		24-11-11	ALL
	4	DK	W0264	173	18		24-11-11	ALL
	5	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D05600
Page 42
Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05646J		AE0319/ /		RCPT-E1-2 (continued)				ALL
	6		W0264	123	24		SPARE	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10		W0264	049	22		23-22-11	ALL
	11		W0264	203B	22		27-58-21	ALL
	12		W0264	203R	22		27-58-21	ALL
	13		W0264	303B	24		27-58-21	ALL
	14		W0264	303R	24		27-58-21	ALL
	15		W0264	303Y	24		27-58-21	ALL
	16	UNUSED						050-099
	16		W0264	810	22		SPARE	150-199, 275-299
	17	DK	W0264	083	18		SPARE	ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20		W0264	120	24		27-88-11	ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
D05646P		AE0319/ /		PLUG-E1-2				ALL
	1		W1090	001	24		29-11-32	ALL
	2	UNUSED						ALL
	3		W1090	003	20		24-11-11	ALL
	4	DL	W1090	004	18		24-11-11	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						050-099
	7		W1090	005	22		SPARE	150-199, 275-299
	8	UNUSED						050-099
	8		W1090	018	22		SPARE	150-199, 275-299
	9	UNUSED						050-099

HOOKUP LIST
D280T132

91-21-51
Section D05600
Page 43
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05646P		AE0319/ /		PLUG-E1-2 (continued)				ALL
	9		W1090	019	22		SPARE	150-199, 275-299
	10		W1090	010	22		23-22-11	ALL
	11		W1090	204B	22		27-58-21	ALL
	12		W1090	204R	22		27-58-21	ALL
	13		W1090	301B	24		27-58-21	ALL
	14		W1090	301R	24		27-58-21	ALL
	15		W1090	301Y	24		27-58-21	ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20		W1090	014	24		27-88-11	ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	DED		W1090	004Z			24-11-11	ALL
D05647J		AE0321/ /		RCPT-E1-4				ALL
	1		W0117	205R	24		34-22-23	ALL
	2		W0117	205B	24		34-22-23	ALL
	3		W0117	205Z			34-22-23	ALL
	4		W0117	206R	24		34-22-23	ALL
	5		W0117	206B	24		34-22-23	ALL
	6		W0117	206Z			34-22-23	ALL
	7		W0117	207R	24		34-22-23	ALL
	8		W0117	207B	24		34-22-23	ALL
	9		W0117	207Z			34-22-23	ALL
	10		W0117	002	22		34-22-13	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D05600

Page 44

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05647P		AE0321/ /		PLUG-E1-4				ALL
	1		W1119	239R	24		34-22-23	ALL
	2		W1119	239B	24		34-22-23	ALL
	3		W1119	239Z			34-22-23	ALL
	4		W1119	243R	24		34-22-23	ALL
	5		W1119	243B	24		34-22-23	ALL
	6		W1119	243Z			34-22-23	ALL
	7		W1119	244R	24		34-22-23	ALL
	8		W1119	244B	24		34-22-23	ALL
	9		W1119	244Z			34-22-23	ALL
	10		W1119	036	22		34-22-13	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D05648J		AE0203/ /		RCPT-P33				ALL
	1		W0142	42S	24		21-51-11	050-099, 150-199 275-299
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	DK	W0142	118	18		33-31-11	050-099
	4	DL	W0142	118	18		33-31-11	150-199, 275-299
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8		W0142	42R	20		30-21-11	050-099, 150-199 275-299
	8	UNUSED						ALL
	9		W0142	848	22		30-32-21	ALL
	10		W0142	126	20		33-11-14	ALL
	11	UNUSED						ALL
	12		W0142	09M	22		30-32-21	ALL
	13		W0142	40D	22		30-81-11	050-099, 150-199 275-299
	13	UNUSED						ALL
	14		W0142	586	22		30-11-11	ALL
	15		W0142	40E	22		30-81-11	050-099, 150-199 275-299
	15	UNUSED						ALL
	16		W0142	40U	22		30-81-11	050-099, 150-199 275-299
	16	UNUSED						ALL
	17		W0142	40F	22		30-81-11	050-099, 150-199 275-299
	17	UNUSED						ALL
	18	UNUSED						050-099, 150-199 275-299
	18		W0142	587	22		30-11-11	050-099, 150-199 275-299

HOOKUP LIST

D280T132

91-21-51

Section D05600

Page 45

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05648J		AE0203/ /		RCPT-P33 (continued)				ALL
	19	UNUSED						050-099, 150-199
	19		W0142	588	22		30-11-11	275-299
	20		W0142	41H	22		30-81-11	050-099, 150-199
	20	UNUSED						275-299
	21	UNUSED						050-099, 275-299
	21		W0142	179	24		73-21-16	150-199
	22		W0142	41S	22		30-81-11	050-099, 150-199
	22	UNUSED						275-299
	23		W0142	581	22		30-11-11	ALL
	24		W0142	582	22		30-11-11	ALL
	25		W0142	40V	22		30-81-11	050-099, 150-199
	25	UNUSED						275-299
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30		W0142	606	22		30-11-11	ALL
	31	UNUSED						ALL
	32		W0142	42B	22		30-11-11	050-099, 150-199
	32	UNUSED						275-299
	33		W0142	864	22		30-11-11	050-099, 150-199
	33	UNUSED						275-299
	34		W0142	42C	22		30-11-11	050-099, 150-199
	34	UNUSED						275-299
	35		W0142	42H	22		30-11-11	050-099, 150-199
	35	UNUSED						275-299
	36		W0142	42J	22		30-11-11	050-099, 150-199
	36	UNUSED						275-299
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40		W0142	121	16		33-31-41	ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	44		W0142	656	22		30-34-21	ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47		W0142	017	24		32-09-13	ALL
	48		W0142	652	22		30-31-13	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05600

Page 46

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05648J		AE0203/ /		RCPT-P33 (continued)				ALL
	49		W0142	862	22		30-33-11	ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
	56		W0142	122	18		33-31-41	ALL
	57	UNUSED						ALL
D05648P		AE0203/ /		PLUG-P33				ALL
	1		W0902	01W	24		21-51-11	050-099, 150-199
	1	UNUSED						275-299
	2		W0902	814	20		SPARE	ALL
	3	UNUSED						ALL
	4	DK	W0902	018	18		33-31-11	ALL
	5	UNUSED						050-099, 150-154, 156-157, 166-199, 275-299
	5		W0902	023	24		30-34-41	155
	5		W0902	023	24		30-81-11	162-165
	6	UNUSED						050-099, 275-299
	6		W0902	022	24		30-34-41	150-199
	7	UNUSED						ALL
	8		W0902	01A	20		30-21-11	050-099, 150-199
	8	UNUSED						275-299
	9		W0902	012	22		30-32-21	ALL
	10		W0902	030	20		33-11-14	ALL
	11	UNUSED						ALL
	12		W0902	027	20		30-32-21	ALL
	13		W0902	01S	20		30-81-11	050-099, 150-199
	13	UNUSED						275-299
	14		W0902	032	22		30-11-11	ALL
	15		W0902	01M	20		30-81-11	050-099, 150-199
	15	UNUSED						275-299
	16		W0902	01P	20		30-81-11	050-099, 150-199
	16	UNUSED						275-299
	17		W0902	01V	20		30-81-11	050-099, 150-199
	17	UNUSED						275-299
	18	UNUSED						050-099, 150-199
	18		W0902	033	22		30-11-11	275-299

HOOKUP LIST
D280T132

91-21-51
Section D05600
Page 47
Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05648P		AE0203/ /		PLUG-P33 (continued)				ALL
	19	UNUSED						050-099, 150-199
	19		W0902	034	22		30-11-11	275-299
	20		W0902	023	24		30-81-11	050-099, 150-154, 156-157, 166-199
	20	UNUSED						155, 162-165, 275-299
	21		W0902	01H	20		73-21-16	050-099, 155-199
	21	UNUSED						150-154, 275-299
	22		W0902	01J	20		30-81-11	050-099, 162-199
	22		W0902	01J	22		30-81-11	150-157
	22	UNUSED						275-299
	23		W0902	036	22		30-11-11	ALL
	24		W0902	037	22		30-11-11	ALL
	25		W0902	01K	20		30-81-11	050-099, 150-199
	25	UNUSED						275-299
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30		W0902	039	22		30-11-11	ALL
	31	UNUSED						ALL
	32		W0902	01B	22		30-11-11	050-099, 150-199
	32	UNUSED						275-299
	33		W0902	01C	22		30-11-11	050-099, 150-199
	33	UNUSED						275-299
	34		W0902	01D	22		30-11-11	050-099, 150-199
	34	UNUSED						275-299
	35		W0902	01E	22		30-11-11	050-099, 150-199
	35	UNUSED						275-299
	36		W0902	01F	22		30-11-11	050-099, 150-199
	36	UNUSED						275-299
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40		W0902	004	16		33-31-41	ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	44		W0902	064	22		30-34-21	ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47		W0902	067	24		32-09-13	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05600

Page 48

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05648P		AE0203/ /		PLUG-P33 (continued)				ALL
	48		W0902	111	22		30-31-13	ALL
	49		W0902	046	22		30-33-11	ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
	56		W0902	001	18		33-31-41	ALL
	57	UNUSED						ALL
D05650J		AE0203/ /		RCPT-P33				ALL
	1	FM	W0142	866	16		33-45-11	ALL
	2		W0142	108	20		33-31-11	ALL
	3	UNUSED						ALL
	4	FM	W0142	867	16		33-45-11	ALL
	5	UNUSED						050-099, 150-199
	5		W0142	589	22		30-11-11	275-299
	6		W0142	610	24		30-11-11	ALL
	7		W0142	596	22		30-11-11	ALL
	8		W0142	42V	22		30-11-11	050-099, 150-199
	8		W0142	595	22		30-11-11	275-299
	9	UNUSED						050-099, 150-155, 162-165, 275-276
	9		W0142	01J	24		21-26-11	156-157, 166-199, 277-299
	10		W0142	056	22		27-51-11	ALL
	11	DK	W0142	057	18		27-51-11	ALL
	12		W0142	058	20		27-51-11	ALL
	13		W0142	583	22		30-11-11	ALL
	14	UNUSED						ALL
	15		W0142	26T	22		27-62-11	ALL
	16		W0142	26S	22		27-62-11	ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23		W0142	26U	22		27-62-11	ALL
	24		W0142	26W	22		27-62-11	ALL

HOOKUP LIST
D280T132

91-21-51
Section D05600
Page 49
Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05650P		AE0203/ /		PLUG-P33				ALL
	1	FL	W0628	037	16		33-45-11	ALL
	2		W0628	014	20		33-31-11	ALL
	3	UNUSED						ALL
	4	FL	W0628	038	16		33-45-11	ALL
	5	UNUSED						050-099, 150-154, 162-199
	5		W0628	004	22		SPARE	155-157, 275-278
	5		W0628	004	22		30-11-11	280-299
	6		W0628	006	24		30-11-11	ALL
	7		W0628	007	22		30-11-11	ALL
	8		W0628	008	22		30-11-11	ALL
	9		W0628	067	24		21-26-11	050-099, 156-157, 166-199, 277-299
	9		W0628	067	24		SPARE	150-155, 162-165, 275-276
	10		W0628	060	22		27-51-11	ALL
	11	DL	W0628	061	18		27-51-11	ALL
	12		W0628	062	20		27-51-11	ALL
	13		W0628	003	22		30-11-11	050-099
	13		W0628	001	22		30-11-11	150-199, 275-299
	14	UNUSED						ALL
	15		W0628	306R	20		27-62-11	ALL
	16		W0628	306B	20		27-62-11	ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23		W0628	306Y	20		27-62-11	ALL
	24		W0628	306Z			27-62-11	ALL
D05652J		AF0204/ /		RCPT-P61				ALL
	1		W0062	037	22		29-32-11	ALL
	2		W0062	137	24		21-58-11	ALL
	3		W0062	139	24		21-58-12	ALL
	4		W0062	57P	24		32-42-12	ALL
	5		W0062	57R	24		32-42-12	ALL
	6		W0062	57M	24		32-42-12	ALL
	7		W0062	57N	24		32-42-12	ALL
	8		W0062	75N	22		21-66-21	050-099, 162-199
	8	UNUSED						150-157, 275-299
	9	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D05600

Page 50

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05652J		AF0204/ /		RCPT-P61 (continued)				ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D05652P		AF0204/ /		PLUG-P61				ALL
	1		W0510	155	22		29-32-11	ALL
	2		W0510	167	24		21-58-12	ALL
	3		W0510	168	24		21-58-12	ALL
	4		W0510	196	24		32-42-12	ALL
	5		W0510	197	24		32-42-12	ALL
	6		W0510	198	24		32-42-12	ALL
	7		W0510	199	24		32-42-12	ALL
	8		W0510	554	22		21-66-21	050-099, 162-199
	8	UNUSED						150-157, 275-299
	9	UNUSED						ALL
	10		W0510	209B	24		SPARE	ALL
	11		W0510	209R	24		SPARE	ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D05600

Page 51

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05652P		AF0204/ /		PLUG-P61 (continued)				ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D05653J		AE0313/ /		RCPT-E1-2				ALL
	1		W1103	244R	24		77-35-11	ALL
	2		W1103	244B	24		77-35-11	ALL
	3		W1103	244Z			77-35-11	ALL
	4		W1103	603	22		34-45-13	ALL
	5	UNUSED						ALL
	6		W1103	239R	24		34-22-18	ALL
	7		W1103	239B	24		34-22-18	ALL
	8		W1103	239Z			34-22-18	ALL
	9	UNUSED						050-099, 150-156, 162-166, 275-276
	9		W1103	602	22		34-45-14	157, 167-199, 277-299
	10		W1103	267R	24		77-35-11	ALL
	11		W1103	267B	24		77-35-11	ALL
	12		W1103	267Z			77-35-11	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23		W1103	522R	24		34-45-14	ALL
	24		W1103	522B	24		34-45-14	ALL
	25		W1103	522Z			34-45-14	ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
D05653P		AE0313/ /		PLUG-E1-3				ALL
	1		W0105	538R	24		77-35-11	ALL
	2		W0105	538B	24		77-35-11	ALL

HOOKUP LIST
D280T132

91-21-51
Section D05600
Page 52
Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05653P		AE0313/ /		PLUG-E1-3 (continued)				ALL
	3		W0105	538Z			77-35-11	ALL
	4		W0105	780	22		34-45-13	ALL
	5	UNUSED						ALL
	6		W0105	268R	24		34-22-18	ALL
	7		W0105	268B	24		34-22-18	ALL
	8		W0105	268Z			34-22-18	ALL
	9	UNUSED						050-099, 150-156, 162-166, 275-276
	9		W0105	140	22		34-45-14	157, 167-199, 277-299
	10		W0105	539R	24		77-35-11	ALL
	11		W0105	539B	24		77-35-11	ALL
	12		W0105	539Z			77-35-11	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23		W0105	583R	24		34-45-14	ALL
	24		W0105	583B	24		34-45-14	ALL
	25		W0105	583Z			34-45-14	ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
D05654J		AE0209/ /		RCPT-				ALL
	1		W0184	75X	24		21-58-12	ALL
	2		W0184	582	24		21-58-16	ALL
	3		W0184	581	24		21-58-16	ALL
	4		W0184	75W	24		21-58-12	ALL
	5		W0184	589	24		21-58-16	ALL
	6		W0184	072	22		21-58-16	ALL
	7	UNUSED						ALL
	8		W0184	75U	24		21-58-12	ALL

HOOKUP LIST
D280T132

91-21-51
Section D05600
Page 53
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05654J		AE0209/ /		RCPT- (continued)				ALL
	9		W0184	75V	24		21-58-12	ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D05654P		AE0209/ /		PLUG-P36				ALL
	1		W0984	004	24		21-58-16	ALL
	2		W0984	005	24		21-58-16	ALL
	3		W0984	007	24		21-58-16	ALL
	4		W0984	008	24		21-58-16	ALL
	5		W0984	011	24		21-58-16	ALL
	6		W0984	012	22		21-58-16	ALL
	7	UNUSED						ALL
	8		W0984	003	24		21-58-16	ALL
	9		W0984	009	24		21-58-16	ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D05655J		AE0315/ /		RCPT-E1-3				ALL
	1		W0105	682R	24		34-22-38	ALL
	2		W0105	682B	24		34-22-38	ALL
	3		W0105	FRA			34-22-38	ALL
	4		W0105	684R	24		34-22-39	ALL
	5		W0105	684B	24		34-22-39	ALL
	6		W0105	684Z			34-22-39	ALL
	7		W0105	529R	24		34-22-39	ALL
	8		W0105	529B	24		34-22-39	ALL
	9		W0105	529Z			34-22-39	ALL
	10		W0105	250R	24		34-22-38	ALL
	11		W0105	250B	24		34-22-38	ALL
	12		W0105	250Z			34-22-38	ALL
			W0105	682	20		34-22-38	ALL
			W0105	682Z			34-22-38	ALL
			W0105	FRA			34-22-38	ALL
D05655P		AE0315/ /		PLUG-E1-3				ALL
	1		W0107	239R	24		34-22-38	ALL
	2		W0107	239B	24		34-22-38	ALL
	3		W0107	239Z			34-22-38	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05600

Page 54

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05655P		AE0315/ /		PLUG-E1-3 (continued)				ALL
	4		W0107	248R	24		34-22-39	ALL
	5		W0107	248B	24		34-22-39	ALL
	6		W0107	248Z			34-22-39	ALL
	7		W0107	205R	24		34-22-39	ALL
	8		W0107	205B	24		34-22-39	ALL
	9		W0107	205Z			34-22-39	ALL
	10		W0107	203R	24		34-22-38	ALL
	11		W0107	203B	24		34-22-38	ALL
	12		W0107	203Z			34-22-38	ALL
D05656J		AF0204/ /		RCPT-P61				ALL
	1	UNUSED						ALL
	2		W0066	79W	24		21-51-11	050-099, 150-199 275-299
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W0066	56L	22		30-32-21	ALL
	6		W0066	56B	22		30-11-11	ALL
	7	UNUSED						050-099, 150-199 275-299
	7		W0066	56C	22		30-11-11	050-099, 150-199 275-299
	8	UNUSED						050-099, 150-199 275-299
	8		W0066	852	22		30-11-11	ALL
	9		W0066	56K	22		30-32-21	ALL
	10		W0066	59L	20		33-11-14	ALL
	11		W0066	882	22		30-11-11	ALL
	12		W0066	792	22		30-11-11	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16		W0066	05H	22		30-33-11	ALL
	17		W0066	886	22		30-11-11	ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D05600
Page 55
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05656J		AF0204/ /		RCPT-P61 (continued)				ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31		W0066	56N	22		30-34-21	ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34		W0066	05G	22		30-31-13	ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
D05656P		AF0204/ /		PLUG-P61				ALL
	1	UNUSED						ALL
	2		W0902	01W	24		21-51-11	050-099, 150-199
	2	UNUSED						275-299
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W0902	027	20		30-32-21	ALL
	6		W0902	032	22		30-11-11	ALL
	7	UNUSED						050-099, 150-199
	7		W0902	033	22		30-11-11	275-299

HOOKUP LIST
D280T132

91-21-51
Section D05600
Page 56
Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05656P		AF0204/ /		PLUG-P61 (continued)				ALL
	8	UNUSED						050-099, 150-199
	8		W0902	034	22		30-11-11	275-299
	9		W0902	012	22		30-32-21	ALL
	10		W0902	030	20		33-11-14	ALL
	11		W0902	036	22		30-11-11	ALL
	12		W0902	037	22		30-11-11	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16		W0902	046	22		30-33-11	ALL
	17		W0902	039	22		30-11-11	ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31		W0902	064	22		30-34-21	ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34		W0902	111	22		30-31-13	ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D05600

Page 57

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05656P		AF0204/ /		PLUG-P61 (continued)				ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
D05658J		AE0223/ /		RCPT-				ALL
	1		W0176	698	24		21-26-11	ALL
	2		W0176	81H	24		30-21-11	050-099, 150-199 275-299
	2	UNUSED						
	3		W0176	699	24		21-26-11	ALL
	4		W0176	02F	24		28-22-12	ALL
	5		W0176	705	24		21-26-11	ALL
	6		W0176	706	24		21-26-11	ALL
	7		W0176	05M	22		32-42-11	ALL
	8		W0176	09A	24		21-44-21	ALL
	9		W0176	16P	24		21-61-61	ALL
	10		W0176	71A	22		36-11-51	050-099, 150-156, 162-166, 275-276 157, 167-199, 277-299
	10	UNUSED						
	11		W0176	71E	20		36-11-51	ALL
	12		W0176	71H	20		36-11-51	ALL
	13		W0176	867	24		24-22-11	ALL
	14		W0176	12X	24		21-61-71	ALL
	15		W0176	12W	24		21-61-71	ALL
	16		W0176	190	24		36-11-11	ALL
	17		W0176	195	24		36-11-11	ALL
	18		W0176	196	24		36-11-11	ALL
	19		W0176	191	22		36-11-11	ALL
	20		W0176	192	22		36-11-11	ALL
	21		W0176	031	24		36-11-31	ALL
	22		W0176	025	24		36-11-31	ALL
	23		W0176	026	24		36-11-31	ALL
	24		W0176	029	22		36-11-31	ALL
	25		W0176	033	22		36-11-31	ALL
	26		W0176	535	24		36-11-51	ALL
	27		W0176	536	20		36-11-51	050-099, 155, 162-165, 276

HOOKUP LIST

D280T132

91-21-51

Section D05600

Page 58

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05658J		AE0223/ /		RCPT- (continued)				ALL
	27	DL	W0176	536	20		36-11-51	150-154, 275
	27	UNUSED						156-157, 166-199, 277-299
	28		W0176	537	24		36-11-51	ALL
	29		W0176	541	24		36-11-51	ALL
	30		W0176	538	24		36-11-51	ALL
	31	DL	W0176	539	22		36-11-51	050-099
	31		W0176	539	22		36-11-51	150-199, 275-299
	32		W0176	17H	24		21-61-61	ALL
	33		W0176	540	22		36-11-51	ALL
	34		W0176	04U	22		32-41-11	ALL
	35		W0176	288	24		21-61-21	ALL
	36		W0176	17G	24		21-61-61	ALL
	37		W0176	532	24		36-21-11	ALL
	38		W0176	209R	24		36-21-11	ALL
	39		W0176	209B	24		36-21-11	ALL
	40		W0176	855	24		21-24-11	050-099, 150-199
	40		W0176	30B	24		21-45-21	275-299
	41		W0176	856	24		21-24-11	050-099, 150-199
	41		W0176	30C	24		21-45-21	275-299
	42		W0176	18E	20		24-51-72	050-099, 162-164, 276
	42	UNUSED						150-157, 165-199, 275, 277-299
	43		W0176	854	24		21-24-11	050-099, 150-199
	43	UNUSED						275-299
	44		W0176	17N	22		21-28-11	050-099, 150-199, 275-276
	44	UNUSED						277-299
	45		W0176	17R	22		21-28-11	050-099, 150-199, 275-276
	45	UNUSED						277-299
	46		W0176	17T	24		21-28-11	ALL
	47		W0176	01E	24		21-43-11	ALL
	48		W0176	20B	24		21-43-11	ALL
	49		W0176	20A	24		21-43-11	ALL
	50		W0176	75L	22		28-31-11	050-099, 155-199, 276-299
	50	UNUSED						150-154, 275
	51		W0176	75T	20		28-31-11	050-099, 155-199, 276-299
	51	UNUSED						150-154, 275
	52		W0176	75N	20		28-31-11	050-099, 155-199, 276-299
	52	UNUSED						150-154, 275
	53		W0176	75H	22		28-31-11	050-099, 155-199, 276-299
	53	UNUSED						150-154, 275
	54	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D05600

Page 59

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05658J		AE0223/ /		RCPT- (continued)				ALL
	55		W0176	53F	24		28-22-12	050-099, 155-199, 276-299
	55	UNUSED						150-154, 275
	DED		W0176	04UZ			32-41-11	ALL
	DED		W0176	75HZ			28-31-11	050-099, 155-199, 276-299
D05658P		AE0223/ /		PLUG-P36				ALL
	1		W0572	059	24		21-26-11	ALL
	2		W0572	683	24		30-21-11	050-099, 150-199
	2	UNUSED						275-299
	3		W0572	062	24		21-26-11	ALL
	4		W0572	544	24		28-22-12	ALL
	5		W0572	064	24		21-26-11	ALL
	6		W0572	065	24		21-26-11	ALL
	7		W0572	576	22		32-42-11	ALL
	8		W0572	195	24		21-44-21	ALL
	9		W0572	644	24		21-61-61	ALL
	10		W0572	529	22		36-11-51	050-099, 150-155, 162-165, 275-276
	10		W0572	689	22		36-11-51	156, 166
	10	UNUSED						157, 167-199, 277-299
	11	DK	W0572	100	18		36-11-51	ALL
	12	DK	W0572	099	18		36-11-51	ALL
	13		W0572	585	24		24-22-11	ALL
	14		W0572	642	24		21-61-41	ALL
	15		W0572	643	24		21-61-41	ALL
	16		W0572	085	24		36-11-11	ALL
	17		W0572	086	24		36-11-11	ALL
	18		W0572	087	24		36-11-11	ALL
	19		W0572	088	22		36-11-11	ALL
	20		W0572	089	22		36-11-11	ALL
	21		W0572	090	24		36-11-31	ALL
	22		W0572	091	24		36-11-31	ALL
	23		W0572	092	24		36-11-31	ALL
	24		W0572	093	22		36-11-31	ALL
	25		W0572	094	22		36-11-31	ALL
	26		W0572	101	24		36-11-51	ALL
	27	DK	W0572	139	18		36-11-51	050-099, 155, 162-165, 276
	27	DK	W0572	102	18		36-11-51	150-154, 275
	27	DK	W0572	139	18		SPARE	156-157, 166-199, 277-299
	28		W0572	103	24		36-11-51	ALL
	29		W0572	107	24		36-11-51	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05600

Page 60

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05658P		AE0223/ /		PLUG-P36 (continued)				ALL
	30		W0572	105	24		36-11-51	ALL
	31	DK	W0572	106	18		36-11-51	ALL
	32		W0572	138	24		21-61-21	ALL
	33	DK	W0572	108	18		36-11-51	ALL
	34		W0572	564	22		32-41-11	ALL
	35		W0572	640	24		21-61-21	ALL
	36		W0572	641	24		21-61-21	ALL
	37		W0572	134	24		36-21-11	ALL
	38		W0572	212R	24		36-21-11	ALL
	39		W0572	212B	24		36-21-11	ALL
	40		W0572	508	24		21-24-11	050-099, 150-199
	40		W0572	759	24		21-45-21	275-299
	41		W0572	510	24		21-24-11	050-099, 150-199
	41		W0572	760	24		21-45-21	275-299
	42		W0572	682	20		24-51-72	050-099, 162-164, 276
	42	UNUSED						150-154, 275
	42		W0572	682	20		SPARE	155-157, 165-199, 277-299
	43		W0572	513	24		21-24-11	050-099, 150-199
	43	UNUSED						275-299
	44		W0572	645	22		21-28-11	050-099, 150-199, 275-276
	44	UNUSED						277-299
	45		W0572	646	22		21-28-11	050-099, 150-199, 275-276
	45	UNUSED						277-299
	46		W0572	647	24		21-28-11	ALL
	47		W0572	648	24		21-43-11	ALL
	48		W0572	649	24		21-43-11	ALL
	49		W0572	650	24		21-43-11	ALL
	50		W0572	523	22		28-31-11	050-099, 155-199, 276-299
	50	UNUSED						150-154, 275
	51		W0572	041	20		28-31-11	050-099, 155-199, 276-299
	51	UNUSED						150-154, 275
	52		W0572	680	20		28-31-11	050-099, 155-199, 276-299
	52	UNUSED						150-154, 275
	53		W0572	681	22		28-31-11	050-099, 155-199, 276-299
	53	UNUSED						150-154, 275
	54	UNUSED						ALL
	55		W0572	011	24		28-22-12	050-099, 155-199, 276-299
	55	UNUSED						150-154, 275
	DED		W0572	564Z			32-41-11	ALL
	DED		W0572	681Z			28-31-11	050-099, 155-199, 276-299

HOOKUP LIST

D280T132

91-21-51

Section D05600

Page 61

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05660J		AE0224/ /		RCPT-P37				ALL
	1		W0192	705	18		21-26-11	ALL
	2		W0192	706	18		21-26-11	ALL
	3		W0192	707	18		21-26-11	ALL
	4		W0192	786	22		33-51-21	ALL
	5		W0192	735	16		38-13-11	ALL
	6		W0192	816	20		33-44-11	ALL
	7		W0192	692	20		27-61-18	ALL
	8		W0192	691	20		27-61-18	ALL
	9		W0192	788	22		33-21-21	ALL
	10		W0192	787	22		33-51-21	ALL
	11		W0192	19U	16		38-13-11	050-099
	11		W0192	08X	16		38-13-11	150-199
	11	UNUSED						275-299
	12	UNUSED						050-099, 150-199
	12		W0192	348R	18		21-45-21	275-299
	13	UNUSED						050-099, 150-199
	13		W0192	348Y	18		21-45-21	275-299
	14	UNUSED						050-099, 150-199
	14		W0192	348B	18		21-45-21	275-299
D05660P		AE0224/ /		PLUG-P37				ALL
	1		W1228	003	18		21-26-11	ALL
	2		W1228	004	18		21-26-11	ALL
	3		W1228	005	18		21-26-11	ALL
	4		W1228	107	22		33-51-21	ALL
	5		W1228	001	16		38-13-11	ALL
	6		W1228	084	20		33-44-11	ALL
	7		W1228	008	20		27-61-18	ALL
	8		W1228	007	20		27-61-18	ALL
	9		W1228	009	22		33-21-21	ALL
	10		W1228	108	22		33-51-21	ALL
	11		W1228	067	16		38-13-11	050-099
	11		W1228	800	16		38-13-11	150-199
	11	UNUSED						275-299
	12	UNUSED						050-099, 150-199
	12		W1228	304R	18		21-45-21	275-299
	13	UNUSED						050-099, 150-199
	13		W1228	304Y	18		21-45-21	275-299
	14	UNUSED						050-099, 150-199
	14		W1228	304B	18		21-45-21	275-299

HOOKUP LIST

D280T132

91-21-51

Section D05600

Page 62

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05662J		AE0207/ /		RCPT-P33				ALL
	1		W0144	152	24		22-41-11	ALL
	2		W0144	539	22		30-32-11	ALL
	3		W0144	628	22		27-62-11	ALL
	4		W0144	680	22		27-62-11	ALL
	5		W0144	763	22		29-11-22	ALL
	6	UNUSED						ALL
	7		W0144	880	22		78-36-11	ALL
	8		W0144	024	22		27-51-51	ALL
	9		W0144	025	22		27-51-51	ALL
	10		W0144	026	24		27-58-11	ALL
	11		W0144	027	24		27-58-11	ALL
	12		W0144	028	24		27-58-11	ALL
	13		W0144	784	24		29-11-22	ALL
	14		W0144	782	24		29-11-22	ALL
	15	UNUSED						ALL
	16		W0144	FRA			78-34-11	ALL
	17		W0144	825	20		78-34-11	ALL
	18		W0144	826	20		78-34-11	ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						050-099, 150-155, 162-165, 275-276
	23		W0144	10F	20		27-58-11	156-157, 166-199, 277-299
	24	UNUSED						ALL
			W0144	825Z			78-34-11	ALL
			W0144	826Z			78-34-11	ALL
			W0144	827	20		78-34-11	ALL
			W0144	FRA			78-34-11	ALL
D05662P		AE0207/ /		PLUG-P33				ALL
	1		W0752	021	24		22-41-11	ALL
	2		W0752	038	22		30-32-11	ALL
	3		W0752	019	20		27-62-11	ALL
	4		W0752	011	20		27-62-11	ALL
	5		W0752	050	22		29-11-22	ALL
	6	UNUSED						050-099, 275-299
	6		W0752	030	22		SPARE	150-199
	7		W0752	048	22		78-36-11	ALL
	8		W0752	013	20		27-51-51	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05600

Page 63

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05662P		AE0207/ /		PLUG-P33 (continued)				ALL
	9		W0752	017	20		27-51-51	ALL
	10		W0752	014	22		27-58-11	050-099, 150-155, 162-165, 275-276
	10		W0752	303B	20		27-58-11	156-157, 166-199, 277-299
	11		W0752	015	22		27-58-11	050-099, 150-155, 162-165, 275-276
	11		W0752	303R	20		27-58-11	156-157, 166-199, 277-299
	12		W0752	016	22		27-58-11	ALL
	13		W0752	052	24		29-11-22	ALL
	14		W0752	053	24		29-11-22	ALL
	15	UNUSED						ALL
	16		W0752	FRC			78-34-11	ALL
	17		W0752	504	20		78-34-11	ALL
	18		W0752	505	20		78-34-11	ALL
	19	UNUSED						050-099, 277-278
	19		W0752	080	22		SPARE	150-199, 275-276, 280-299
	20	UNUSED						050-099, 155-199, 276-299
	20		W0752	081	22		SPARE	150-154, 275
	21	UNUSED						050-099
	21		W0752	072	22		SPARE	150-199, 275-299
	22	UNUSED						050-099
	22		W0752	073	22		SPARE	150-199, 275-299
	23	UNUSED						050-099, 150-155, 162-165, 275-276
	23		W0752	303Y	20		27-58-11	156-157, 166-199, 277-299
	24	UNUSED						ALL
CAP		Y	W0752	079	22		SPARE	150-154, 275
DED			W0752	050Z			29-11-22	ALL
			W0752	504Z			78-34-11	ALL
			W0752	505Z			78-34-11	ALL
			W0752	FRC			78-34-11	ALL
D05664J		AE0207/ /		RCPT-P33				ALL
	1		W0144	878	20		78-34-11	ALL
	2		W0144	11B	22		32-45-11	ALL
	3		W0144	031	24		27-58-11	ALL
	4		W0144	735	24		78-36-11	ALL
	5		W0144	033	24		27-58-11	ALL
	6		W0144	034	24		27-58-11	ALL
	7		W0144	035	24		27-58-11	ALL
	8		W0144	036	24		27-58-11	ALL
	9		W0144	037	24		27-58-11	ALL
	10		W0144	087	22		27-51-51	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05600

Page 64

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05664J		AE0207 / /		RCPT-P33 (continued)				ALL
	11		W0144	879Z			78-34-11	ALL
	12		W0144	879	20		78-34-11	ALL
	13		W0144	051	24		27-58-11	ALL
	14		W0144	048	24		27-58-11	ALL
	15		W0144	01X	20		27-62-11	ALL
	16		W0144	050	24		27-58-11	ALL
	17		W0144	049	24		27-58-11	ALL
	18		W0144	729	24		78-36-11	ALL
	19		W0144	11C	22		32-45-11	ALL
	20		W0144	744	24		78-36-11	ALL
	21		W0144	665	24		78-36-11	ALL
	22		W0144	06M	22		27-62-11	ALL
	23		W0144	623	22		27-62-11	ALL
	24		W0144	20B	22		30-81-11	050-099, 150-199
	24	UNUSED						275-299
	25	UNUSED						ALL
	26		W0144	20D	22		30-81-11	050-099, 150-199
	26	UNUSED						275-299
	27		W0144	616	24		32-09-13	ALL
	28		W0144	151	24		73-21-12	ALL
	29		W0144	648	22		28-22-31	ALL
	30		W0144	047	24		27-51-51	ALL
	31		W0144	18G	24		73-21-14	ALL
	32		W0144	18GZ			73-21-14	ALL
	33		W0144	074	24		32-09-13	ALL
	34		W0144	756	24		78-36-11	ALL
	35		W0144	753	22		78-36-11	ALL
	36		W0144	760	22		33-51-11	ALL
	37	UNUSED						ALL
	38		W0144	20L	22		30-81-11	050-099, 150-199
	38	UNUSED						275-299
	39		W0144	053	22		76-11-11	ALL
	40		W0144	60A	22		30-81-11	050-099, 150-199
	40	UNUSED						275-299
	41		W0144	124	22		30-31-13	ALL
	42		W0144	04L	22		29-11-22	ALL
	43		W0144	20J	22		30-81-11	050-099, 150-199
	43	UNUSED						275-299
	44		W0144	02L	20		27-62-11	ALL
	45		W0144	02K	20		27-62-11	ALL

HOOKUP LIST
D280T132

91-21-51
Section D05600
Page 65
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05664J		AE0207/ /		RCPT-P33 (continued)				ALL
	46		W0144	01Y	22		27-62-11	ALL
	47		W0144	02V	22		27-62-11	ALL
	48		W0144	03N	22		27-62-11	ALL
	49		W0144	71K	20		29-11-14	ALL
	50		W0144	70E	20		29-11-14	ALL
	51		W0144	70D	20		29-11-14	ALL
	52	UNUSED						050-099, 150-155, 162-165, 275-276
	52		W0144	10H	20		27-58-11	156-157, 166-199, 277-299
	53		W0144	647	22		28-22-31	ALL
	54		W0144	649	22		28-22-31	ALL
	55		W0144	653	22		28-22-31	ALL
	DED		W0144	04LZ			29-11-22	ALL
	DED		W0144	647Z			28-22-31	ALL
	DED		W0144	648Z			28-22-31	ALL
	DED		W0144	649Z			28-22-31	ALL
	DED		W0144	653Z			28-22-31	ALL
	DED		W0144	729Z			78-36-11	ALL
	DED		W0144	735Z			78-36-11	ALL
	DED		W0144	744Z			78-36-11	ALL
D05664P		AE0207/ /		PLUG-P33				ALL
	1		W0756	683	20		78-34-11	ALL
	2		W0756	031	22		32-45-11	ALL
	3		W0756	048	24		27-58-11	ALL
	4		W0756	658	24		78-36-11	ALL
	5		W0756	050	24		27-58-11	ALL
	6		W0756	051	24		27-58-11	ALL
	7		W0756	052	24		27-58-11	ALL
	8		W0756	053	24		27-58-11	ALL
	9		W0756	054	24		27-58-11	ALL
	10		W0756	055	22		27-51-51	ALL
	11		W0756	681Z			78-34-11	ALL
	12	DK	W0756	681	18		78-34-11	ALL
	13		W0756	078	22		27-58-11	050-099, 150-155, 162-165, 275-276
	13		W0756	309R	20		27-58-11	156-157, 166-199, 277-299
	14		W0756	079	22		27-58-11	050-099, 150-155, 162-165, 275-276
	14		W0756	309B	20		27-58-11	156-157, 166-199, 277-299
	15		W0756	046	20		27-62-11	ALL
	16		W0756	076	24		27-58-11	ALL
	17		W0756	077	24		27-58-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05600

Page 66

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05664P		AE0207 / /		PLUG-P33 (continued)				ALL
	18		W0756	662	24		78-36-11	ALL
	19		W0756	021	22		32-45-11	ALL
	20		W0756	659	24		78-36-11	ALL
	21		W0756	660	24		78-36-11	ALL
	22		W0756	169	22		27-62-11	ALL
	23		W0756	089	20		27-62-11	ALL
	24		W0756	708	20		30-81-11	050-099, 150-199
	24	DK	W0756	298R	18		78-36-11	275-299
	25	UNUSED						ALL
	26		W0756	704	20		30-81-11	050-099, 150-199
	26	DK	W0756	298B	18		78-36-11	275-299
	27		W0756	098	24		32-09-13	ALL
	28		W0756	167	24		73-21-12	ALL
	29		W0756	645	22		28-22-31	ALL
	30		W0756	075	24		27-51-51	ALL
	31		W0756	609	24		73-21-14	ALL
	32		W0756	609Z			73-21-14	ALL
	33		W0756	080	24		32-09-13	ALL
	34		W0756	095	24		78-36-11	ALL
	35		W0756	094	22		78-36-11	ALL
	36		W0756	067	22		33-51-11	ALL
	37	UNUSED						050-099
	37		W0756	810	24		SPARE	150-154
	37		W0756	810	24		73-21-11	155-199
	37	DK	W0756	297R	18		78-36-11	275-299
	38		W0756	706	20		30-81-11	050-099, 150-199
	38	DK	W0756	297B	18		78-36-11	275-299
	39		W0756	111	22		76-11-11	ALL
	40		W0756	711	20		30-81-11	050-099, 150-199
	40	UNUSED						275-299
	41		W0756	538	22		30-31-13	ALL
	42		W0756	112	22		29-11-22	ALL
	43		W0756	293	24		30-81-11	050-099, 150-154, 156-157, 166-199
	43		W0756	712	20		30-81-11	155, 162-165
	43	UNUSED						275-299
	44		W0756	069	20		27-62-11	ALL
	45		W0756	068	20		27-62-11	ALL
	46		W0756	506	22		27-62-11	ALL
	47		W0756	073	22		27-62-11	ALL
	48		W0756	071	22		27-62-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05600

Page 67

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05664P		AE0207 / /		PLUG-P33 (continued)				ALL
	49		W0756	70F	20		29-11-14	ALL
	50		W0756	70E	20		29-11-14	ALL
	51		W0756	70D	20		29-11-14	ALL
	52	UNUSED						050-099, 150-155, 162-165, 275-276
	52		W0756	309Y	20		27-58-11	156-157, 166-199, 277-299
	53		W0756	642	22		28-22-31	ALL
	54		W0756	643	22		28-22-31	ALL
	55		W0756	644	22		28-22-31	ALL
	CAP	Y	W0756	297B	18		78-36-11	050-099, 150-199
	CAP	Y	W0756	297R	18		78-36-11	050-099, 150-199
	CAP	Y	W0756	298B	18		78-36-11	050-099, 150-199
	CAP	Y	W0756	298R	18		78-36-11	050-099, 150-199
	CAP	Y	W0756	047	22		SPARE	ALL
	CAP	Y	W0756	099	24		78-36-11	ALL
	CAP	Y	W0756	655	24		78-36-11	ALL
	CAP	Y	W0756	657	24		78-36-11	ALL
	CAP	Y	W0756	663	18		78-36-11	ALL
	CAP	Y	W0756	664	18		78-36-11	ALL
	CAP	Y	W0756	668B	18		78-36-11	ALL
	CAP	Y	W0756	668R	18		78-36-11	ALL
	CAP	Y	W0756	669B	18		78-36-11	ALL
	CAP	Y	W0756	669R	18		78-36-11	ALL
	CAP	Y	W0756	523	22		SPARE	150-199, 275-299
	CAP	Y	W0756	524	22		SPARE	150-199, 275-299
	CAP	Y	W0756	712	20		30-81-11	156-157, 166-199
	DED		W0756	297Z			78-36-11	050-099, 150-199
	DED		W0756	298Z			78-36-11	050-099, 150-199
	DED		W0756	112Z			29-11-22	ALL
	DED		W0756	642Z			28-22-31	ALL
	DED		W0756	643Z			28-22-31	ALL
	DED		W0756	644Z			28-22-31	ALL
	DED		W0756	645Z			28-22-31	ALL
	DED		W0756	663Z			78-36-11	ALL
	DED		W0756	664Z			78-36-11	ALL
	DED		W0756	668Z			78-36-11	ALL
	DED		W0756	669Z			78-36-11	ALL
	DED		W0756	297Z			78-36-11	275-299
	DED		W0756	298Z			78-36-11	275-299
	DED		W0756	665	20		78-36-11	275-299

HOOKUP LIST

D280T132

91-21-51

Section D05600

Page 68

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05668J		AE0203/ /		RCPT-P33				ALL
	1	DL	W0142	031	18		27-51-11	ALL
	2		W0142	019	22		27-51-11	ALL
	3	DL	W0142	022	18		27-51-11	ALL
	4		W0142	032	20		27-51-11	ALL
	5		W0142	579	24		30-34-21	ALL
	6		W0142	804	24		32-09-13	ALL
	7	UNUSED						ALL
	8		W0142	840	24		73-21-12	ALL
	9		W0142	181	24		73-21-16	ALL
	10		W0142	807	22		27-09-12	ALL
	11		W0142	35A	24		77-35-11	ALL
	12		W0142	18C	24		73-21-14	ALL
	13		W0142	020	22		27-51-11	ALL
	14		W0142	021	22		27-51-11	ALL
	15		W0142	033	22		27-51-11	ALL
	16	UNUSED						ALL
	17		W0142	12J	20		78-34-21	ALL
	18		W0142	865	22		27-62-11	ALL
	19		W0142	884	22		27-51-11	ALL
	20		W0142	888	24		24-51-52	ALL
	21		W0142	889	24		24-51-52	ALL
	22	UNUSED						ALL
	23		W0142	665	22		30-34-21	ALL
	24		W0142	02F	24		78-36-21	ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28		W0142	042	22		33-51-11	ALL
	29		W0142	18CZ			73-21-14	ALL
	30		W0142	19H	22		32-45-11	ALL
	31		W0142	18F	24		73-21-14	ALL
	32		W0142	18FZ			73-21-14	ALL
	33		W0142	12G	20		78-34-21	ALL
	34		W0142	05Y	24		21-53-21	ALL
	35		W0142	05K	22		21-51-21	ALL
	36		W0142	631	24		30-31-21	ALL
	37		W0142	05B	22		27-62-11	ALL
	38	BJ	W0142	179	24		73-21-16	050-099
	38	UNUSED						150-199
	38		W0142	179	24		73-21-16	275-299

HOOKUP LIST

D280T132

91-21-51

Section D05600

Page 69

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05668J		AE0203/ /		RCPT-P33 (continued)				ALL
	39		W0142	FRC			78-34-21	ALL
	40	UNUSED						ALL
	41		W0142	12H	20		78-34-21	ALL
	DED		W0142	05BZ			27-62-11	ALL
	DED		W0142	865Z			27-62-11	ALL
			W0142	12GZ			78-34-21	ALL
			W0142	12HZ			78-34-21	ALL
			W0142	12JZ			78-34-21	ALL
			W0142	FRC			78-34-21	ALL
D05668P		AE0203/ /		PLUG-P33				ALL
	1	DK	W0768	021	18		27-51-11	ALL
	2		W0768	022	22		27-51-11	ALL
	3	DK	W0768	023	18		27-51-11	ALL
	4		W0768	024	20		27-51-11	ALL
	5		W0768	195	24		30-34-21	ALL
	6		W0768	188	24		32-09-13	ALL
	7		W0768	110	22		SPARE	ALL
	8		W0768	090	24		73-21-12	ALL
	9		W0768	091	24		73-21-16	ALL
	10		W0768	010	22		27-09-12	ALL
	11		W0768	145	24		77-35-11	ALL
	12		W0768	001	24		73-21-14	ALL
	13		W0768	071	22		27-51-11	ALL
	14		W0768	072	22		27-51-11	ALL
	15		W0768	073	22		27-51-11	ALL
	16	DK	W0768	10F	18		78-34-21	ALL
	17	DK	W0768	10G	18		78-34-21	ALL
	18		W0768	093	22		27-62-11	ALL
	19		W0768	160	22		27-51-11	ALL
	20		W0768	163	24		24-51-52	ALL
	21		W0768	166	24		24-51-52	ALL
	22		W0768	186	22		SPARE	050-099, 150-199
	22	UNUSED						275-299
	23		W0768	014	20		30-34-21	ALL
	24		W0768	182	24		78-36-21	ALL
	25		W0768	181	24		SPARE	ALL
	26		W0768	180	22		SPARE	050-099, 150-199, 280-299
	26	Y	W0768	180	22		SPARE	275-278
	27		W0768	187	20		SPARE	050-099, 150-199

HOOKUP LIST

D280T132

91-21-51

Section D05600

Page 70

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05668P		AE0203/ /		PLUG-P33 (continued)				ALL
	27	UNUSED						275-299
	28		W0768	067	22		33-51-11	ALL
	29		W0768	001Z			73-21-14	ALL
	30		W0768	087	22		32-45-11	ALL
	31		W0768	609	24		73-21-14	ALL
	32		W0768	609Z			73-21-14	ALL
	33	DK	W0768	611	18		78-34-21	ALL
	34		W0768	194	24		21-53-21	ALL
	35		W0768	191	22		21-51-21	ALL
	36		W0768	192	24		30-31-21	ALL
	37		W0768	056	22		27-62-11	ALL
	38		W0768	598	24		73-21-16	050-099
	38		W0768	589	24		SPARE	150-154
	38		W0768	598	24		SPARE	155-199
	38		W0768	589	24		73-21-16	275-299
	39		W0768	FRQ			78-34-21	ALL
	40	DK	W0768	10B	18		78-34-21	ALL
	41	DK	W0768	10A	18		78-34-21	ALL
CAP	Y		W0768	125	20		SPARE	150-199
			W0768	10AZ			78-34-21	ALL
			W0768	10BZ			78-34-21	ALL
			W0768	10FZ			78-34-21	ALL
			W0768	10GZ			78-34-21	ALL
			W0768	611Z			78-34-21	ALL
			W0768	FRQ			78-34-21	ALL
D05672J		AC1402/ /		RCPT-P49				ALL
	1		W0580	086	24		21-44-11	ALL
	2		W0580	087	22		21-44-11	ALL
	3		W0580	088	24		21-44-11	ALL
	4		W0580	107	24		21-44-11	ALL
	5		W0580	110	24		21-44-11	ALL
	6		W0580	109	24		21-44-11	ALL
	7		W0580	108	24		21-44-11	ALL
	8		W0580	044	22		38-32-11	ALL
	9	DK	W0580	019	18		38-32-11	050-099, 150-155, 162-165, 275-276
	9	DK	W0580	019	18		38-32-15	156-157, 166-199, 277-299
	10	UNUSED						ALL
	11	UNUSED						ALL
	12		W0580	149	24		21-44-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05600

Page 71

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05672J		AC1402/ /		RCPT-P49 (continued)				ALL
	13	UNUSED						050-099, 150-199, 277-299
	13	UNUSED	W0580	053	22		38-32-14	275-276
	14	UNUSED						050-099, 150-199, 277-299
	14	UNUSED	W0580	054	22		38-32-14	275-276
	15	UNUSED						050-099, 150-199, 277-299
	15	UNUSED	W0580	055	22		38-32-14	275-276
	16	UNUSED						050-099, 150-155, 162-165, 275-276
	16	UNUSED	W0580	053	22		38-32-15	156-157, 166-199, 277-299
	17	UNUSED						ALL
	18	UNUSED						050-099, 150-155, 162-165, 275-276
	18	UNUSED	W0580	059	20		38-32-15	156-157, 166-199, 277-299
	19	UNUSED						050-099, 150-155, 162-165, 275-276
	19	UNUSED	W0580	060	20		38-32-15	156-157, 166-199, 277-299
	20	UNUSED						050-099, 150-155, 162-165, 275-276
	20	UNUSED	W0580	057	20		38-32-15	156-157, 166-199, 277-299
	21	UNUSED						050-099, 150-155, 162-165, 275-276
	21	UNUSED	W0580	058	20		38-32-15	156-157, 166-199, 277-299
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	DED		W0580	053Z			38-32-15	156-157, 166-199, 277-299
	DED		W0580	059Z			38-32-15	156-157, 166-199, 277-299
	DED		W0580	060Z			38-32-15	156-157, 166-199, 277-299
D05672P		AC1402/ /		PLUG-P49				ALL
	1		W0030	015	24		21-44-11	ALL
	2		W0030	014	22		21-44-11	ALL
	3		W0030	013	24		21-44-11	ALL
	4		W0030	019	24		21-44-11	ALL
	5		W0030	030	24		21-44-11	ALL
	6		W0030	033	24		21-44-11	ALL
	7		W0030	032	24		21-44-11	ALL
	8		W0030	024	22		38-32-11	ALL
	9	DL	W0030	018	18		38-32-11	050-099, 150-155, 162-165, 275-276
	9	DL	W0030	018	18		38-32-15	156-157, 166-199, 277-299
	10	UNUSED						ALL
	11	UNUSED						ALL
	12		W0030	093	24		21-44-11	ALL
	13	UNUSED						050-099, 150-199, 277-299
	13		W0030	141	22		38-32-14	275-276

HOOKUP LIST

D280T132

91-21-51

Section D05600

Page 72

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05672P		AC1402/ /		PLUG-P49 (continued)				ALL
	14	UNUSED						050-099, 150-199, 277-299
	14		W0030	142	22		38-32-14	275-276
	15	UNUSED						050-099, 150-199, 277-299
	15		W0030	143	22		38-32-14	275-276
	16	UNUSED						050-099, 150-155, 162-165, 275-276
	16		W0030	152	22		38-32-15	156-157, 166-199, 277-299
	17	UNUSED						ALL
	18	UNUSED						050-099, 150-155, 162-165, 275-276
	18		W0030	150	20		38-32-15	156-157, 166-199, 277-299
	19	UNUSED						050-099, 150-155, 162-165, 275-276
	19		W0030	151	20		38-32-15	156-157, 166-199, 277-299
	20	UNUSED						050-099, 150-155, 162-165, 275-276
	20		W0030	146	20		38-32-15	156-157, 166-199, 277-299
	21	UNUSED						050-099, 150-155, 162-165, 275-276
	21		W0030	154	20		38-32-15	156-157, 166-199, 277-299
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	DED		W0030	030Z			21-44-11	ALL
	DED		W0030	150Z			38-32-15	156-157, 166-199, 277-299
	DED		W0030	151Z			38-32-15	156-157, 166-199, 277-299
	DED		W0030	152Z			38-32-15	156-157, 166-199, 277-299
D05676J		AE0322/ /		RCPT-E2-4				ALL
	1	DL	W0262	173	18		24-11-21	ALL
	2		W0262	012	20		24-11-21	ALL
	3		W0262	006	24		31-31-26	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W0262	121	22		27-51-61	ALL
	8		W0262	122	24		27-51-61	ALL
	9		W0262	032	22		33-16-22	ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12		W0262	802	20		SPARE	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D05600
Page 73
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05676P		AE0322/ /		PLUG-E2-4				ALL
	1	DK	W0098	072	18		24-11-21	ALL
	2		W0098	071	20		24-11-21	ALL
	3		W0098	099	24		31-31-26	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W0098	060	22		27-51-61	ALL
	8		W0098	096	24		27-51-61	ALL
	9		W0098	075	22		33-16-22	ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	DED		W0098	060Z			27-51-61	ALL
	DED		W0098	071Z			24-11-21	ALL
	DED		W0098	072Z			24-11-21	ALL
	DED		W0098	096Z			27-51-61	ALL
D05677J		AE0321/ /		RCPT-E1-4				ALL
	1		W1127	221WN	26		34-22-34	ALL
	2		W1127	221W	26		34-22-34	ALL
	3		W1127	221Z			34-22-34	ALL
	4		W1127	222WN	26		34-22-34	ALL
	5		W1127	222W	26		34-22-34	ALL
	6		W1127	222Z			34-22-34	ALL
	7		W1127	223WN	26		34-22-34	ALL
	8		W1127	223W	26		34-22-34	ALL
	9		W1127	223Z			34-22-34	ALL
	10		W1127	224WN	26		34-22-34	ALL
	11		W1127	224W	26		34-22-34	ALL
	12		W1127	224Z			34-22-34	ALL
	13		W1127	225WN	26		34-22-34	ALL
	14		W1127	225W	26		34-22-34	ALL
	15		W1127	225Z			34-22-34	ALL
	16		W1127	226WN	26		34-22-34	ALL
	17		W1127	226W	26		34-22-34	ALL
	18		W1127	226Z			34-22-34	ALL
	19		W1127	227WN	26		34-22-34	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05600

Page 74

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05677J		AE0321 / /		RCPT-E1-4 (continued)				ALL
	20		W1127	227W	26		34-22-34	ALL
	21		W1127	227Z			34-22-34	ALL
	22		W1127	228WN	26		34-22-34	ALL
	23		W1127	228W	26		34-22-34	ALL
	24		W1127	228Z			34-22-34	ALL
	25		W1127	229WN	26		34-22-34	ALL
	26		W1127	229W	26		34-22-34	ALL
	27		W1127	229Z			34-22-34	ALL
	28		W1127	230WN	26		34-22-34	ALL
	29		W1127	230W	26		34-22-34	ALL
	30		W1127	230Z			34-22-34	ALL
	31		W1127	231WN	26		34-22-34	ALL
	32		W1127	231W	26		34-22-34	ALL
	33		W1127	231Z			34-22-34	ALL
	34		W1127	232WN	26		34-22-34	ALL
	35		W1127	232W	26		34-22-34	ALL
	36		W1127	232Z			34-22-34	ALL
	37		W1127	233WN	26		34-22-34	ALL
	38		W1127	233W	26		34-22-34	ALL
	39		W1127	233Z			34-22-34	ALL
	40		W1127	234WN	26		34-22-34	ALL
	41		W1127	234W	26		34-22-34	ALL
	42		W1127	234Z			34-22-34	ALL
	43		W1127	235WN	26		34-22-34	ALL
	44		W1127	235W	26		34-22-34	ALL
	45		W1127	235Z			34-22-34	ALL
	46		W1127	236WN	26		34-22-34	ALL
	47		W1127	236W	26		34-22-34	ALL
	48		W1127	236Z			34-22-34	ALL
	49		W1127	237WN	26		34-22-34	ALL
	50		W1127	237W	26		34-22-34	ALL
	51		W1127	237Z			34-22-34	ALL
	52		W1127	238WN	26		34-22-34	ALL
	53		W1127	238W	26		34-22-34	ALL
	54		W1127	238Z			34-22-34	ALL
	55		UNUSED					ALL
D05677P		AE0321 / /		PLUG-E1-4				ALL
	1		W1119	501WN	26		34-22-34	ALL
	2		W1119	501W	26		34-22-34	ALL

HOOKUP LIST
D280T132

91-21-51
Section D05600
Page 75
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05677P		AE0321 / /		PLUG-E1-4 (continued)				ALL
	3		W1119	501Z			34-22-34	ALL
	4		W1119	502WN	26		34-22-34	ALL
	5		W1119	502W	26		34-22-34	ALL
	6		W1119	502Z			34-22-34	ALL
	7		W1119	503WN	26		34-22-34	ALL
	8		W1119	503W	26		34-22-34	ALL
	9		W1119	503Z			34-22-34	ALL
	10		W1119	504WN	26		34-22-34	ALL
	11		W1119	504W	26		34-22-34	ALL
	12		W1119	504Z			34-22-34	ALL
	13		W1119	505WN	26		34-22-34	ALL
	14		W1119	505W	26		34-22-34	ALL
	15		W1119	505Z			34-22-34	ALL
	16		W1119	506WN	26		34-22-34	ALL
	17		W1119	506W	26		34-22-34	ALL
	18		W1119	506Z			34-22-34	ALL
	19		W1119	507WN	26		34-22-34	ALL
	20		W1119	507W	26		34-22-34	ALL
	21		W1119	507Z			34-22-34	ALL
	22		W1119	508WN	26		34-22-34	ALL
	23		W1119	508W	26		34-22-34	ALL
	24		W1119	508Z			34-22-34	ALL
	25		W1119	509WN	26		34-22-34	ALL
	26		W1119	509W	26		34-22-34	ALL
	27		W1119	509Z			34-22-34	ALL
	28		W1119	510WN	26		34-22-34	ALL
	29		W1119	510W	26		34-22-34	ALL
	30		W1119	510Z			34-22-34	ALL
	31		W1119	511WN	26		34-22-34	ALL
	32		W1119	511W	26		34-22-34	ALL
	33		W1119	511Z			34-22-34	ALL
	34		W1119	512WN	26		34-22-34	ALL
	35		W1119	512W	26		34-22-34	ALL
	36		W1119	512Z			34-22-34	ALL
	37		W1119	513WN	26		34-22-34	ALL
	38		W1119	513W	26		34-22-34	ALL
	39		W1119	513Z			34-22-34	ALL
	40		W1119	514WN	26		34-22-34	ALL
	41		W1119	514W	26		34-22-34	ALL
	42		W1119	514Z			34-22-34	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05600

Page 76

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05677P		AE0321 / /		PLUG-E1-4 (continued)				ALL
	43		W1119	515WN	26		34-22-34	ALL
	44		W1119	515W	26		34-22-34	ALL
	45		W1119	515Z			34-22-34	ALL
	46		W1119	516WN	26		34-22-34	ALL
	47		W1119	516W	26		34-22-34	ALL
	48		W1119	516Z			34-22-34	ALL
	49		W1119	517WN	26		34-22-34	ALL
	50		W1119	517W	26		34-22-34	ALL
	51		W1119	517Z			34-22-34	ALL
	52		W1119	518WN	26		34-22-34	ALL
	53		W1119	518W	26		34-22-34	ALL
	54		W1119	518Z			34-22-34	ALL
	55	UNUSED						ALL
D05678J		AE0320 / /		RCPT-E2-5				ALL
	1		W1226	230R	22		23-31-14	050-099, 150-199
	1		W1226	205R	22		23-31-14	275-299
	2		W1226	230B	22		23-31-14	050-099, 150-199
	2		W1226	205B	22		23-31-14	275-299
	3		W1226	005	22		33-25-11	050-099
	3	UNUSED						150-199, 275-299
	4		W1226	012	22		23-31-11	ALL
	5		W1226	013	22		23-31-11	ALL
	6		W1226	231R	22		23-31-14	050-099, 150-199
	6	UNUSED						275-299
	7		W1226	231B	22		23-31-14	050-099, 150-199
	7	UNUSED						275-299
	8		W1226	205R	22		23-31-14	050-099, 150-199
	8	UNUSED						275-299
	9		W1226	205B	22		23-31-14	050-099, 150-199
	9	UNUSED						275-299
	10		W1226	229R	22		23-31-14	050-099, 150-199
	10	UNUSED						275-299
	11		W1226	229B	22		23-31-14	050-099, 150-199
	11	UNUSED						275-299
	12	UNUSED						ALL
D05678P		AE0320 / /		PLUG-E2-5				ALL
	1		W0149	209R	22		23-31-14	ALL
	2		W0149	209B	22		23-31-14	ALL

HOOKUP LIST
D280T132

91-21-51
Section D05600
Page 77
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05678P		AE0320/ /		PLUG-E2-5 (continued)				ALL
	3		W0149	124	24		33-25-11	050-099
	3	UNUSED						150-199, 275-299
	4		W0149	041	22		23-31-11	ALL
	5		W0149	042	22		23-31-11	ALL
	6		W0149	276R	22		23-31-14	050-099, 150-199
	6	UNUSED						275-299
	7		W0149	276B	22		23-31-14	050-099, 150-199
	7	UNUSED						275-299
	8		W0149	275R	22		23-31-14	050-099, 150-199
	8	UNUSED						275-299
	9		W0149	275B	22		23-31-14	050-099, 150-199
	9	UNUSED						275-299
	10		W0149	277R	22		23-31-14	050-099, 150-199
	10	UNUSED						275-299
	11		W0149	277B	22		23-31-14	050-099, 150-199
	11	UNUSED						275-299
	12	UNUSED						ALL
D05680J		AE0307/ /		RCPT-				ALL
	1	UNUSED						ALL
	2		W0598	014	12		34-21-21	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
D05680P		AE0307/ /		PLUG-E1-5				ALL
	1	UNUSED						ALL
	2		W0119	043	12		34-21-21	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
D05682J		AE0204/ /		RCPT-P34				ALL
	1	UNUSED						ALL
	2		W0054	042	24		24-51-61	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
D05682P		AE0204/ /		PLUG-P34				ALL
	1	UNUSED						ALL
	2		W0572	514	24		24-51-61	ALL

HOOKUP LIST
D280T132



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05682P		AE0204 /		PLUG-P34 (continued)				ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
D05686J		AE0220 /		RCPT-E3-1				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W0942	575	22		21-61-81	050-099, 151-199, 275-299
	5	UNUSED						150
	6		W0942	240B	22		21-61-81	050-099, 151-199, 275-299
	6	UNUSED						150
	7		W0942	240R	22		21-61-81	050-099, 151-199, 275-299
	7	UNUSED						150
	8	UNUSED						ALL
	9	UNUSED						ALL
	10		W0942	310B	24		21-61-11	ALL
	11		W0942	310R	24		21-61-11	ALL
	12		W0942	310Y	24		21-61-11	ALL
	13		W0942	085	24		21-61-11	ALL
	14		W0942	086	24		21-61-11	ALL
	15		W0942	311B	24		21-61-21	ALL
	16		W0942	311R	24		21-61-21	ALL
	17		W0942	311Y	24		21-61-21	ALL
	18		W0942	088	24		21-61-21	ALL
	19		W0942	089	24		21-61-21	ALL
	20		W0942	312B	24		21-61-31	ALL
	21		W0942	312R	24		21-61-31	ALL
	22		W0942	312Y	24		21-61-31	ALL
	23		W0942	090	24		21-61-31	ALL
	24		W0942	091	24		21-61-31	ALL
	25		W0942	214B	24		21-52-41	ALL
	26		W0942	214R	24		21-52-41	ALL
	27		W0942	401G	24		21-52-41	ALL
	28		W0942	401R	24		21-52-41	ALL
	29		W0942	401Y	24		21-52-41	ALL
	30		W0942	401B	24		21-52-41	ALL
	31		W0942	168	24		21-61-41	ALL
	32		W0942	220R	22		21-51-12	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05600

Page 79

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05686J		AE0220/ /		RCPT-E3-1 (continued)				ALL
	33		W0942	220B	22		21-51-12	ALL
	34		W0942	169	24		21-61-41	ALL
	35	UNUSED						ALL
	36		W0942	230B	24		21-61-51	ALL
	37	UNUSED						ALL
	38		W0942	230R	24		21-61-51	ALL
	39		W0942	323Y	24		21-61-41	ALL
	40		W0942	323R	24		21-61-41	ALL
	41		W0942	323B	24		21-61-41	ALL
	42		W0942	232B	24		21-61-51	ALL
	43		W0942	232R	24		21-61-51	ALL
	44		W0942	234B	24		21-61-51	ALL
	45		W0942	234R	24		21-61-51	ALL
	46		W0942	231B	24		21-61-51	ALL
	47		W0942	231R	24		21-61-51	ALL
	48		W0942	172	24		21-61-11	ALL
	49		W0942	173	24		21-61-11	ALL
	50		W0942	174	24		21-61-21	ALL
	51		W0942	175	24		21-61-21	ALL
	52		W0942	176	24		21-61-31	ALL
	53		W0942	177	24		21-61-31	ALL
	54		W0942	179	24		21-61-41	ALL
	55		W0942	180	24		21-61-41	ALL
D05686P		AE0220/ /		PLUG-E3-1				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W0082	550	24		21-51-12	050-099, 151-199, 275-299
	5	UNUSED						150
	6		W0082	232B	22		21-51-12	050-099, 151-199, 275-299
	6	UNUSED						150
	7		W0082	232R	22		21-51-12	050-099, 151-199, 275-299
	7	UNUSED						150
	8	UNUSED						ALL
	9	UNUSED						ALL
	10		W0082	309B	24		21-61-11	ALL
	11		W0082	309R	24		21-61-11	ALL
	12		W0082	309Y	24		21-61-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05600

Page 80

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05686P		AE0220 / /		PLUG-E3-1 (continued)				ALL
	13		W0082	096	24		21-61-11	ALL
	14		W0082	097	24		21-61-11	ALL
	15		W0082	310B	24		21-61-21	ALL
	16		W0082	310R	24		21-61-21	ALL
	17		W0082	310Y	24		21-61-21	ALL
	18		W0082	099	24		21-61-21	ALL
	19		W0082	098	24		21-61-21	ALL
	20		W0082	311B	24		21-61-31	ALL
	21		W0082	311R	24		21-61-31	ALL
	22		W0082	311Y	24		21-61-31	ALL
	23		W0082	100	24		21-61-31	ALL
	24		W0082	101	24		21-61-31	ALL
	25		W0082	221B	24		21-52-41	ALL
	26		W0082	221R	24		21-52-41	ALL
	27		W0082	402G	24		21-52-41	ALL
	28		W0082	402R	24		21-52-41	ALL
	29		W0082	402Y	24		21-52-41	ALL
	30		W0082	402B	24		21-52-41	ALL
	31		W0082	133	24		21-61-41	ALL
	32		W0082	231R	22		21-51-12	ALL
	33		W0082	231B	22		21-51-12	ALL
	34		W0082	134	24		21-61-41	ALL
	35	UNUSED						ALL
	36		W0082	214B	24		21-61-51	ALL
	37	UNUSED						ALL
	38		W0082	214R	24		21-61-51	ALL
	39		W0082	313Y	24		21-61-41	ALL
	40		W0082	313R	24		21-61-41	ALL
	41		W0082	313B	24		21-61-41	ALL
	42		W0082	212B	24		21-61-51	ALL
	43		W0082	212R	24		21-61-51	ALL
	44		W0082	234B	24		21-61-51	ALL
	45		W0082	234R	24		21-61-51	ALL
	46		W0082	235B	24		21-61-51	ALL
	47		W0082	235R	24		21-61-51	ALL
	48		W0082	144	24		21-61-11	ALL
	49		W0082	145	24		21-61-11	ALL
	50		W0082	146	24		21-61-21	ALL
	51		W0082	147	24		21-61-21	ALL
	52		W0082	148	24		21-61-31	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05600

Page 81

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05686P		AE0220/ /		PLUG-E3-1 (continued)				ALL
	53		W0082	149	24		21-61-31	ALL
	54		W0082	150	24		21-61-41	ALL
	55		W0082	151	24		21-61-41	ALL
D05688J		AE0218/ /		RCPT-				ALL
	1	DK	W0192	823	18		30-71-11	ALL
	2	UNUSED						ALL
	3		W0192	54V	20		30-71-24	050-099
	3		W0192	687	20		30-71-24	150-199
	3	UNUSED						275-299
	4	UNUSED						ALL
	5		W0192	13X	24		36-11-41	ALL
	6	UNUSED						050-099, 162-199, 275-299
	6		W0192	619	24		36-11-41	150-157
	7		W0192	804	22		36-11-41	ALL
	8		W0192	622	24		36-11-41	ALL
	9	DK	W0192	821	18		30-71-11	ALL
	10		W0192	820	20		30-71-11	ALL
	11	DK	W0192	131	18		38-32-11	ALL
	12		W0192	70F	22		21-45-22	ALL
	13		W0192	662	24		21-44-21	ALL
	14		W0192	663	24		21-44-21	ALL
	15		W0192	533	24		38-15-11	ALL
	16		W0192	83A	20		30-71-24	050-099
	16	UNUSED						150-199, 275-299
	17		W0192	54X	20		30-71-24	050-099
	17	UNUSED						150-199, 275-299
	18		W0192	59N	20		30-71-24	050-099
	18	UNUSED						150-199, 275-299
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	DK	W0192	693	18		38-32-14	ALL
D05688P		AE0218/ /		RCPT-P37				050-099, 280-299
D05688P		AE0218/ /		PLUG-P37				150-199, 275-278
	1	DL	W1256	020	18		30-71-11	ALL
	2	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D05600

Page 82

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05688P		AE0218/ /		RCPT-P37 (continued)				050-099, 280-299
D05688P		AE0218/ /		PLUG-P37 (continued)				150-199, 275-278
	3		W1256	010	20		30-71-24	050-099
	3		W1256	011	20		30-71-24	150-199
	3	UNUSED						275-299
	4	UNUSED						ALL
	5		W1256	022	24		36-11-41	ALL
	6	UNUSED						050-099, 162-199, 275-299
	6		W1256	023	24		36-11-41	150-157
	7		W1256	024	22		36-11-41	ALL
	8		W1256	025	24		36-11-41	ALL
	9	DL	W1256	017	18		30-71-11	ALL
	10		W1256	018	20		30-71-11	ALL
	11	DL	W1256	051	18		38-32-11	ALL
	12		W1256	101	22		21-45-22	ALL
	13		W1256	028	24		21-44-21	ALL
	14		W1256	029	24		21-44-21	ALL
	15		W1256	034	24		38-15-11	ALL
	16		W1256	003	20		30-71-24	050-099
	16	UNUSED						150-199, 275-299
	17		W1256	042	20		30-71-24	050-099
	17	UNUSED						150-199, 275-299
	18		W1256	002	20		30-71-24	050-099
	18	UNUSED						150-199, 275-299
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	DL	W1256	079	18		38-32-14	ALL
D05690J		AE0207/ /		RCPT-P33				ALL
	1		W0142	824	20		30-71-22	050-099, 155-199
	1		W0142	824	22		30-71-22	150-154, 275-299
	2		W0142	730	20		30-71-22	050-099
	2		W0142	730	22		30-71-22	150-199, 275-299
	3		W0142	734	20		30-71-22	050-099, 155-199
	3		W0142	734	22		30-71-22	150-154, 275-299
	4		W0142	694	20		30-71-21	050-099
	4	UNUSED						150-199
	4		W0142	694	22		30-71-22	275-299

HOOKUP LIST

D280T132

91-21-51
 Section D05600
 Page 83
 Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05690J		AE0207/ /		RCPT-P33 (continued)				ALL
	5		W0142	705	20		30-71-21	050-099
	5	UNUSED						150-199, 275-299
	6		W0142	706	20		30-71-21	050-099
	6	UNUSED						150-199, 275-299
	7		W0142	707	20		30-71-21	050-099, 155-199
	7		W0142	707	22		30-71-21	150-154, 275-299
	8		W0142	708	20		30-71-21	050-099
	8	UNUSED						150-199, 275-299
	9		W0142	709	20		30-71-23	050-099, 150-199
	9		W0142	710	22		30-71-23	275-299
	10	UNUSED						050-099
	10		W0142	716	22		30-71-23	150-154, 275-299
	10		W0142	716	20		30-71-23	155-199
	11		W0142	711	20		30-71-23	050-099, 155-199
	11		W0142	711	22		30-71-23	150-154, 275-299
	12	UNUSED						050-099, 275-299
	12		W0142	713	22		30-71-22	150-154
	12		W0142	713	20		30-71-22	155-199
	13	UNUSED						ALL
	14		W0142	712	20		30-71-23	050-099, 155-199
	14		W0142	712	22		30-71-23	150-154, 275-299
	15		W0142	19U	20		30-71-23	050-099, 150-199
	15		W0142	709	22		30-71-23	275-299
	16		W0142	704	20		30-71-22	050-099, 155-199
	16		W0142	704	22		30-71-22	150-154
	16	UNUSED						275-299
	17		W0142	822	20		30-71-22	050-099
	17	UNUSED						150-199
	17		W0142	822	22		30-71-22	275-299
	18	UNUSED						ALL
	19		W0142	743	20		30-71-22	050-099, 155-199
	19		W0142	743	22		30-71-22	150-154, 275-299
	20	UNUSED						ALL
	21		W0142	04K	20		30-71-22	050-099
	21	UNUSED						150-199, 275-299
	22	UNUSED						ALL
	23		W0142	162	20		30-71-21	050-099, 150-199
	23	UNUSED						275-299
	24	UNUSED						ALL
	25		W0142	880	20		30-71-22	050-099

HOOKUP LIST

D280T132

91-21-51

Section D05600

Page 84

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05690J		AE0207/ /		RCPT-P33 (continued)				ALL
	25	UNUSED						150-199
	25		W0142	880	22		30-71-22	275-299
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30		W0142	09R	20		30-71-23	050-099
	30	UNUSED						150-199, 275-299
	31		W0142	047	20		30-71-23	050-099
	31	UNUSED						150-199, 275-299
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35		W0142	04L	20		30-71-22	050-099
	35		W0142	084	20		30-71-21	150-199
	35	UNUSED						275-278
	35		W0142	699	22		30-71-21	280-299
	36		W0142	04M	20		30-71-22	050-099
	36		W0142	702	20		30-71-21	150-199
	36		W0142	702	22		30-71-21	275-299
	37		W0142	081	20		30-71-21	050-099, 155-199
	37		W0142	081	22		30-71-21	150-154, 275-299
	38	UNUSED						ALL
	39	UNUSED						ALL
D05690P		AE0207/ /		PLUG-P33				ALL
	1		W1258	014	20		30-71-22	050-099, 155-199
	1		W1258	014	22		30-71-22	150-154, 275-299
	2		W1258	015	20		30-71-22	050-099
	2		W1258	015	22		30-71-22	150-199, 275-299
	3		W1258	016	20		30-71-22	050-099, 155-199
	3		W1258	016	22		30-71-22	150-154, 275-299
	4		W1258	017	20		30-71-21	050-099
	4	UNUSED						150-199
	4		W1258	017	22		30-71-22	275-299
	5		W1258	019	20		30-71-21	050-099
	5	UNUSED						150-199, 275-299
	6		W1258	020	20		30-71-21	050-099
	6	UNUSED						150-199, 275-299
	7		W1258	021	20		30-71-21	050-099, 150-199

HOOKUP LIST
D280T132

91-21-51
Section D05600
Page 85
Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05690P		AE0207 / /		PLUG-P33 (continued)				ALL
	7		W1258	021	22		30-71-21	275-299
	8		W1258	022	20		30-71-21	050-099
	8	UNUSED						150-199, 275-299
	9		W1258	034	20		30-71-23	050-099, 150-199, 275-276
	9		W1258	034	22		30-71-23	277-299
	10	UNUSED						050-099
	10		W1258	035	22		30-71-23	150-154, 275-299
	10		W1258	035	20		30-71-23	155-199
	11		W1258	036	20		30-71-23	050-099, 155-199
	11		W1258	036	22		30-71-23	150-154, 275-299
	12	UNUSED						050-099, 275-299
	12		W1258	017	22		30-71-22	150-154
	12		W1258	017	20		30-71-22	155-199
	13	UNUSED						ALL
	14		W1258	060	20		30-71-23	050-099
	14		W1258	057	22		30-71-23	150-154, 275-299
	14		W1258	057	20		30-71-23	155-199
	15		W1258	058	20		30-71-23	050-099, 155-199
	15		W1258	058	22		30-71-23	150-154, 275-299
	16		W1258	059	20		30-71-22	050-099, 155-199
	16		W1258	059	22		30-71-22	150-154
	16	UNUSED						275-299
	17		W1258	067	20		30-71-22	050-099
	17	UNUSED						150-199
	17		W1258	629	22		30-71-22	275-299
	18	UNUSED						ALL
	19		W1258	080	20		30-71-22	050-099, 155-199
	19		W1258	080	22		30-71-22	150-154
	19		W1258	630	22		30-71-22	275-299
	20	UNUSED						ALL
	21		W1258	651	20		30-71-22	050-099
	21	UNUSED						150-199, 275-299
	22	UNUSED						ALL
	23		W1258	169	20		30-71-21	050-099, 150-199
	23	UNUSED						275-299
	24	UNUSED						ALL
	25		W1258	150	20		30-71-22	050-099
	25	UNUSED						150-199
	25		W1258	150	22		30-71-22	275-299
	26	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D05600

Page 86

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05690P		AE0207/ /		PLUG-P33 (continued)				ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30		W1258	145	20		30-71-23	050-099
	30	UNUSED						150-199, 275-299
	31		W1258	043	20		30-71-23	050-099
	31	UNUSED						150-199, 275-299
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35		W1258	652	20		30-71-22	050-099
	35		W1258	165	20		30-71-21	150-199
	35	UNUSED						275-299
	36		W1258	653	20		30-71-22	050-099
	36		W1258	166	20		30-71-21	150-199
	36		W1258	166	22		30-71-21	275-299
	37		W1258	170	20		30-71-21	050-099, 150-199
	37		W1258	170	22		30-71-21	275-299
	38		W1258	814	22		SPARE	ALL
	39	UNUSED						050-099
	39		W1258	815	20		SPARE	150-199, 275-299
D05692J		AE0224/ /		RCPT-P37				ALL
	1		W1118	13B	24		21-28-11	050-099, 150-199, 275-276
	1	UNUSED						277-299
	2		W1118	11M	22		21-26-31	050-099
	2		W1118	095	20		30-71-24	150-199
	2	UNUSED						275-299
	3	UNUSED						ALL
	4		W1118	201Z			21-31-21	ALL
	5		W1118	201B	24		21-31-21	ALL
	6		W1118	201R	24		21-31-21	ALL
	7		W1118	096	20		21-31-21	ALL
	8		W1118	204B	20		21-31-21	ALL
	9		W1118	204R	20		21-31-21	ALL
	10		W1118	08B	20		30-71-24	050-099
	10		W1118	094	20		30-71-24	150-199
	10	UNUSED						275-299
	11		W1118	155	20		30-71-11	ALL
	12		W1118	11L	22		21-26-31	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05600

Page 87

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05692J		AE0224/ /		RCPT-P37 (continued)				ALL
	13	UNUSED						050-099, 275-299
	13		W1118	092	20		30-71-24	150-199
	14	UNUSED						050-099
	14		W1118	11M	22		21-26-31	150-199, 275-299
	15		W1118	11N	22		21-26-31	ALL
	16		W1118	11P	24		21-26-31	ALL
	17		W1118	11W	24		21-26-31	ALL
	18		W1118	11Y	22		21-28-11	050-099, 150-199, 275-276
	18	UNUSED						277-299
	19		W1118	13D	22		21-28-11	050-099, 150-199, 275-276
	19	UNUSED						277-299
	20		W1118	12P	22		21-28-11	ALL
	21		W1118	178	16		30-71-24	050-099, 150-199
	21	UNUSED						275-299
	22		W1118	12N	22		21-28-11	ALL
	23		W1118	689	16		30-71-24	050-099, 150-199
	23	UNUSED						275-299
	24		W1118	12X	24		21-28-11	ALL
	25		W1118	189	20		30-71-24	050-099
	25	UNUSED						150-199, 275-299
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	DED		W1118	11YZ			21-28-11	050-099
	DED		W1118	13DZ			21-28-11	050-099
D05692P		AE0224/ /		PLUG-P37				ALL
	1		W1258	192	24		21-28-11	050-099, 150-199, 275-276
	1	UNUSED						277-299

HOOKUP LIST

D280T132

91-21-51

Section D05600

Page 88

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05692P		AE0224/ /		PLUG-P37 (continued)				ALL
	2		W1258	611	22		21-26-31	050-099
	2		W1258	043	20		30-71-24	150-199
	2	UNUSED						275-299
	3	UNUSED						050-099, 150-154, 156-157, 166-199, 275-299
	3		W1258	507	20		SPARE	155, 162-165
	4		W1258	201Z			21-31-21	ALL
	5		W1258	201B	24		21-31-21	ALL
	6		W1258	201R	24		21-31-21	ALL
	7		W1258	050	20		21-31-21	ALL
	8		W1258	202B	20		21-31-21	ALL
	9		W1258	202R	20		21-31-21	ALL
	10		W1258	035	20		30-71-24	050-099
	10		W1258	060	20		30-71-24	150-199
	10	UNUSED						275-299
	11		W1258	018	20		30-71-11	ALL
	12		W1258	613	22		21-26-31	ALL
	13		W1258	507	20		SPARE	050-099
	13		W1258	145	20		30-71-24	150-199
	13	UNUSED						275-299
	14		W1258	500	20		SPARE	050-099
	14		W1258	611	22		21-26-31	150-199, 275-299
	15		W1258	612	22		21-26-31	ALL
	16		W1258	614	24		21-26-31	ALL
	17		W1258	610	24		21-26-31	ALL
	18		W1258	190	22		21-28-11	050-099, 150-199, 275-276
	18	UNUSED						277-299
	19		W1258	189	22		21-28-11	050-099, 150-199, 275-276
	19	UNUSED						277-299
	20		W1258	195	22		21-28-11	ALL
	21		W1258	097	16		30-71-24	050-099, 150-199
	21	UNUSED						275-299
	22		W1258	194	22		21-28-11	ALL
	23		W1258	618	16		30-71-24	050-099, 150-199
	23	UNUSED						275-299
	24		W1258	199	24		21-28-11	ALL
	25		W1258	655	20		30-71-24	050-099
	25	UNUSED						150-154, 156-157, 166-199, 275-299
	25		W1258	500	20		SPARE	155, 162-165
	26	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D05600
Page 89
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05692P		AE0224/ /		PLUG-P37 (continued)				ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	DED		W1258	189Z			21-28-11	050-099
	DED		W1258	190Z			21-28-11	050-099
D05698J		AL1005/ /		RCPT-				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W0590	033	18		28-21-13	ALL
	5		W0590	034	18		28-21-13	ALL
	6		W0590	037	14		28-25-11	050-099
	6		W0590	037	12		28-25-11	150-199, 275-299
	7		W0590	007	18		28-25-21	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
			W0590	037Z			28-25-11	ALL
			W0590	045	20		28-25-11	ALL
D05698P		AL1005/ /		PLUG-L WING RS/BODY				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W0482	201B	18		28-21-13	ALL
	5		W0482	201R	18		28-21-13	ALL
	6		W0482	010	14		28-25-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05600

Page 90

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05698P		AL1005/ /		PLUG-L WING RS/BODY (continued)				ALL
	7		W0482	001	18		28-25-21	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05700J		AL1005/ /		RCPT-				ALL
	1		W0614	024	22		31-31-22	ALL
	2		W0614	012	18		27-11-12	ALL
	3		W0614	003	22		28-25-21	050-099
	3		W0614	003	20		28-25-21	150-199, 275-299
	4		W0614	004	22		28-25-21	050-099
	4		W0614	004	20		28-25-21	150-199, 275-299
	5		W0614	005	20		27-11-12	ALL
	6		W0614	006	18		27-11-12	ALL
	7		W0614	202B	22		31-31-22	ALL
	8		W0614	202Z			31-31-22	ALL
	9		W0614	202R	22		31-31-22	ALL
	10		W0614	010	18		27-11-12	ALL
	11		W0614	011	20		27-11-12	ALL
	12		W0614	111	20		28-21-13	ALL
	13		W0614	112	22		28-21-13	ALL
	14		W0614	113	22		28-25-21	ALL
	15		W0614	018	20		28-21-13	ALL
	16		W0614	020	20		28-21-13	ALL
	17	UNUSED						050-099, 275-299
	17		W0614	150R	22		SPARE	150-199
	18	UNUSED						050-099, 275-299
	18		W0614	143	22		SPARE	150-199
	19	UNUSED						050-099, 150-199
	19		W0614	150R	22		SPARE	275-299
D05700P		AL1005/ /		PLUG-L WING RS/BODY				ALL
	1		W0484	024	20		31-31-22	ALL
	2		W0484	010	20		27-11-12	ALL
	3		W0484	302Y	18		28-25-21	ALL
	4		W0484	302R	18		28-25-21	ALL
	5		W0484	401R	20		27-11-12	ALL
	6		W0484	401G	20		27-11-12	ALL
	7		W0484	202B	20		31-31-22	ALL
	8		W0484	FRA			31-31-22	ALL
	9		W0484	202R	20		31-31-22	ALL
	10		W0484	401B	20		27-11-12	ALL
	11		W0484	401Y	20		27-11-12	ALL
	12		W0484	402B	20		28-21-13	ALL
	13		W0484	402G	20		28-21-13	ALL
	14		W0484	302B	18		28-25-21	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05700

Page 1

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05700P		AL1005/ /		PLUG-L WING RS/BODY (continued)				ALL
	15		W0484	402R	20		28-21-13	ALL
	16		W0484	402Y	20		28-21-13	ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	DED		W0484	024Z			31-31-22	ALL
			W0484	021	20		31-31-22	ALL
			W0484	202Z			31-31-22	ALL
			W0484	FRA			31-31-22	ALL
D05702J		AL1001/ /		RCPT-				ALL
	1		W1251	001	20		27-11-11	ALL
	2		W1251	002	20		27-11-11	ALL
	3		W1251	003	18		SPARE	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
D05702P		AL1001/ /		PLUG-L WING RS/BODY				ALL
	1		W0446	215B	20		27-11-11	050-099, 155-199, 276-299
	1		W0446	019	20		27-11-11	150-154, 275
	2		W0446	215R	20		27-11-11	050-099, 155-199, 276-299
	2		W0446	020	20		27-11-11	150-154, 275
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	DED		W0446	215Z			27-11-11	050-099, 155-199, 276-299
D05703J		AE0314/ /		RCPT-E2-2				ALL
	1		W0133	279R	24		34-53-11	ALL
	2		W0133	279B	24		34-53-11	ALL
	3		W0133	279Z			34-53-11	ALL
	4	UNUSED						ALL
	5		W0133	202R	24		34-61-11	ALL
	6		W0133	202B	24		34-61-11	ALL
	7		W0133	202Z			34-61-11	ALL
	8		W0133	203R	24		34-61-11	ALL

HOOKUP LIST
D280T132

91-21-51
Section D05700
Page 2
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05703J		AE0314/ /		RCPT-E2-2 (continued)				ALL
	9		W0133	203B	24		34-61-11	ALL
	10		W0133	203Z			34-61-11	ALL
	11		W0133	022	24		34-61-23	ALL
	12		W0133	235R	24		34-61-23	ALL
	13		W0133	235B	24		34-61-23	ALL
	14		W0133	235Z			34-61-23	ALL
	15		W0133	236R	24		34-61-23	ALL
	16		W0133	236B	24		34-61-23	ALL
	17		W0133	236Z			34-61-23	ALL
	18		W0133	023	24		34-61-23	ALL
	19		W0133	237R	24		34-61-23	ALL
	20		W0133	237B	24		34-61-23	ALL
	21		W0133	237Z			34-61-23	ALL
	22		W0133	238R	24		34-61-23	ALL
	23		W0133	238B	24		34-61-23	ALL
	24		W0133	238Z			34-61-23	ALL
	25		W0133	273R	24		31-35-11	ALL
	26		W0133	273B	24		31-35-11	ALL
	27		W0133	273Z			31-35-11	ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30		W0133	668	24		31-31-22	ALL
	31		W0133	249R	24		31-25-11	ALL
	32		W0133	249B	24		31-25-11	ALL
	33		W0133	249Z			31-25-11	ALL
	34		W0133	026	22		34-22-17	ALL
	35		W0133	295R	24		31-31-14	ALL
	36		W0133	295B	24		31-31-14	ALL
	37		W0133	295Z			31-31-14	ALL
	38	UNUSED						ALL
	39		W0133	729B	24		31-35-15	ALL
	40		W0133	729R	24		31-35-15	ALL
	41		W0133	729Z			31-35-15	ALL
	42	UNUSED						ALL
	43		W0133	752	24		31-35-11	ALL
	44		W0133	159	24		31-31-19	ALL
	45	UNUSED						ALL
	46		W0133	225R	24		34-61-14	ALL
	47		W0133	225B	24		34-61-14	ALL
	48		W0133	225Z			34-61-14	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05700

Page 3

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05703J		AE0314/ /		RCPT-E2-2 (continued)				ALL
	49		W0133	303R	24		34-12-21	ALL
	50		W0133	303B	24		34-12-21	ALL
	51		W0133	303Y	24		34-12-21	ALL
	52		W0133	102	24		31-31-12	ALL
	53	UNUSED						ALL
	54		W0133	229B	22		34-12-21	ALL
	55		W0133	229R	22		34-12-21	ALL
D05703P		AE0314/ /		PLUG-E2-2				ALL
	1		W0135	211R	24		34-53-11	ALL
	2		W0135	211B	24		34-53-11	ALL
	3		W0135	211Z			34-53-11	ALL
	4	UNUSED						ALL
	5		W0135	209R	24		34-61-11	ALL
	6		W0135	209B	24		34-61-11	ALL
	7		W0135	209Z			34-61-11	ALL
	8		W0135	208R	24		34-61-11	ALL
	9		W0135	208B	24		34-61-11	ALL
	10		W0135	208Z			34-61-11	ALL
	11		W0135	001	24		34-61-23	ALL
	12		W0135	203R	24		34-61-23	ALL
	13		W0135	203B	24		34-61-23	ALL
	14		W0135	203Z			34-61-23	ALL
	15		W0135	204R	24		34-61-23	ALL
	16		W0135	204B	24		34-61-23	ALL
	17		W0135	204Z			34-61-23	ALL
	18		W0135	007	24		34-61-23	ALL
	19		W0135	205R	24		34-61-23	ALL
	20		W0135	205B	24		34-61-23	ALL
	21		W0135	205Z			34-61-23	ALL
	22		W0135	206R	24		34-61-23	ALL
	23		W0135	206B	24		34-61-23	ALL
	24		W0135	206Z			34-61-23	ALL
	25		W0135	546R	24		31-35-11	ALL
	26		W0135	546B	24		31-35-11	ALL
	27		W0135	546Z			31-35-11	ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30		W0135	185	24		31-31-22	ALL
	31		W0135	229R	24		31-25-11	ALL

HOOKUP LIST
D280T132

91-21-51
Section D05700
Page 4
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05703P		AE0314/ /		PLUG-E2-2 (continued)				ALL
	32		W0135	229B	24		31-25-11	ALL
	33		W0135	229Z			31-25-11	ALL
	34		W0135	002	22		34-22-17	ALL
	35		W0135	225R	24		31-31-14	ALL
	36		W0135	225B	24		31-31-14	ALL
	37		W0135	225Z			31-31-14	ALL
	38	UNUSED						ALL
	39		W0135	253B	24		31-35-15	ALL
	40		W0135	253R	24		31-35-15	ALL
	41		W0135	253Z			31-35-15	ALL
	42	UNUSED						ALL
	43		W0135	834	24		31-35-11	ALL
	44		W0135	643	24		31-31-19	ALL
	45	UNUSED						ALL
	46		W0135	251R	24		34-61-14	ALL
	47		W0135	251B	24		34-61-14	ALL
	48		W0135	251Z			34-61-14	ALL
	49		W0135	301R	24		34-12-21	ALL
	50		W0135	301B	24		34-12-21	ALL
	51		W0135	301Y	24		34-12-21	ALL
	52		W0135	107	24		31-31-12	ALL
	53	UNUSED						ALL
	54		W0135	202B	22		34-12-21	ALL
	55		W0135	202R	22		34-12-21	ALL
D05705J		AE0316/ /		RCPT-E2-3				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W0135	257R	24		27-51-51	ALL
	4		W0135	257B	24		27-51-51	ALL
	5		W0135	257Z			27-51-51	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9		W0135	519R	24		31-31-19	ALL
	10		W0135	519B	24		31-31-19	ALL
	11		W0135	519Z			31-31-19	ALL
	12		W0135	583R	24		31-35-12	ALL
	13		W0135	583B	24		31-35-12	ALL
	14		W0135	583Z			31-35-12	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05700

Page 5

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05705J		AE0316/ /		RCPT-E2-3 (continued)				ALL
	15	UNUSED						ALL
	16		W0135	251R	24		34-61-14	ALL
	17		W0135	251B	24		34-61-14	ALL
	18		W0135	FRE			34-61-14	ALL
	19		W0135	584R	24		31-35-12	ALL
	20		W0135	584B	24		31-35-12	ALL
	21		W0135	584Z			31-35-12	ALL
	22		W0135	585R	24		31-35-12	ALL
	23		W0135	585B	24		31-35-12	ALL
	24		W0135	585Z			31-35-12	ALL
			W0135	251	20		34-61-14	ALL
			W0135	251Z			34-61-14	ALL
			W0135	FRE			34-61-14	ALL
D05705P		AE0316/ /		PLUG-				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W0014	240R	24		27-51-51	ALL
	4		W0014	240B	24		27-51-51	ALL
	5		W0014	240Z			27-51-51	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9		W0014	252R	24		31-31-19	ALL
	10		W0014	252B	24		31-31-19	ALL
	11		W0014	252Z			31-31-19	ALL
	12		W0014	270R	24		31-35-12	ALL
	13		W0014	270B	24		31-35-12	ALL
	14		W0014	270Z			31-35-12	ALL
	15	UNUSED						ALL
	16		W0014	241R	24		34-61-14	ALL
	17		W0014	241B	24		34-61-14	ALL
	18		W0014	241Z			34-61-14	ALL
	19		W0014	271R	24		31-35-12	ALL
	20		W0014	271B	24		31-35-12	ALL
	21		W0014	271Z			31-35-12	ALL
	22		W0014	272R	24		31-35-12	ALL
	23		W0014	272B	24		31-35-12	ALL
	24		W0014	272Z			31-35-12	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05700

Page 6

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05706J		AC1402/ /		RCPT-P49				ALL
	1		W0580	041	12		38-32-11	ALL
	2		W0580	042	12		38-32-11	ALL
	3		W0580	043	12		38-32-11	ALL
	4		W0580	093	12		38-32-11	ALL
	5		W0580	094	12		38-32-11	ALL
	6		W0580	095	12		38-32-11	ALL
	7		W0580	045	18		38-32-14	050-099, 150-154, 275-276
	7	UNUSED						155-199, 277-299
	8		W0580	022	18		38-32-14	ALL
D05706P		AC1402/ /		PLUG-P49				ALL
	1		W0030	021	12		38-32-11	ALL
	2		W0030	022	12		38-32-11	ALL
	3		W0030	023	12		38-32-11	ALL
	4		W0030	006	12		38-32-11	ALL
	5		W0030	007	12		38-32-11	ALL
	6		W0030	008	12		38-32-11	ALL
	7		W0030	137	18		38-32-14	050-099, 150-154
	7	UNUSED						155-199, 277-299
	7		W0030	134	20		38-32-14	275-276
	8		W0030	135	18		38-32-14	ALL
D05708J		AF0201/ /		RCPT-P11				ALL
	1		W0044	186	24		35-21-11	ALL
	2		W0044	187	24		35-21-11	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W0044	168	24		35-21-11	ALL
	6		W0044	191	22		35-21-11	ALL
	7		W0044	005	22		33-51-11	ALL
	8	UNUSED						ALL
	9		W0044	751	20		33-51-11	ALL
	10		W0044	752	20		33-51-11	ALL
	11		W0044	753	22		33-51-11	ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14		W0044	188	16		35-21-12	ALL
	15	UNUSED						ALL
	16		W0044	189	16		35-21-13	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05700

Page 7

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05708J		AF0201/ /		RCPT-P11 (continued)				ALL
	17	UNUSED						ALL
	18		W0044	190	16		35-21-14	ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	DED		W0044	751Z			33-51-11	ALL
	DED		W0044	752Z			33-51-11	ALL
D05708P		AF0201/ /		PLUG-P11				ALL
	1		W0712	001	24		35-21-11	ALL
	2		W0712	002	24		35-21-11	ALL
	3		W0712	003	22		SPARE	ALL
	4		W0712	004	22		SPARE	ALL
	5		W0712	005	24		35-21-11	ALL
	6		W0712	006	22		35-21-11	ALL
	7		W0712	019	22		33-51-11	ALL
	8	UNUSED						ALL
	9		W0712	020	20		33-51-11	ALL
	10		W0712	021	20		33-51-11	ALL
	11		W0712	022	22		33-51-11	ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14		W0712	012	12		35-21-12	ALL
	15	UNUSED						ALL
	16		W0712	016	12		35-21-13	ALL
	17	UNUSED						ALL
	18		W0712	018	12		35-21-14	ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	DED		W0712	020Z			33-51-11	ALL
	DED		W0712	021Z			33-51-11	ALL

HOOKUP LIST
D280T132

91-21-51
Section D05700
Page 8
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05709J		AE0324/ /		RCPT-E2-5				ALL
	1		W0139	206R	24		23-21-11	ALL
	2		W0139	206B	24		23-21-11	ALL
	3		W0139	236R	24		23-51-14	ALL
	4		W0139	236B	24		23-51-14	ALL
	5		W0139	306R	24		23-51-14	ALL
	6		W0139	306B	24		23-51-14	ALL
	7		W0139	306Y	24		23-51-14	ALL
	8	UNUSED						050-099, 151-152, 275-276
	8		W0139	668Z			23-25-13	150, 153-199, 277-299
	9	UNUSED						ALL
	10		W0139	778	24		23-11-11	ALL
	11		W0139	772	24		23-11-11	ALL
	12	UNUSED						050-099, 151-152, 275-276
	12		W0139	668R	22		23-25-13	150, 153-155, 162-165
	12		W0139	668R	24		23-25-13	156-157, 166-199, 277-299
	13		W0139	668B	22		23-25-13	150, 153-155, 162-165
	13		W0139	668B	24		23-25-13	156-157, 166-199, 277-299
	14		W0139	669Z			23-25-13	150, 153-199, 277-299
	15		W0139	669R	22		23-25-13	150, 153-155, 162-165
	15		W0139	669R	24		23-25-13	156-157, 166-199, 277-299
	16		W0139	669B	22		23-25-13	150, 153-155, 162-165
	16		W0139	669B	24		23-25-13	156-157, 166-199, 277-299
	17		W0139	670	22		23-25-14	150, 153-155, 162-165
	17		W0139	670	24		23-25-14	156-157, 166-199, 277-299
	18	UNUSED						150, 153-199, 277-299
	19	UNUSED						150, 153-199, 277-299
	20	UNUSED						150, 153-199, 277-299
	21	UNUSED						150, 153-199, 277-299
	22	UNUSED						150, 153-199, 277-299
	23	UNUSED						150, 153-199, 277-299
	24	UNUSED						150, 153-199, 277-299
	25	UNUSED						150, 153-199, 277-299
	26	UNUSED						150, 153-199, 277-299
	27	UNUSED						150, 153-199, 277-299
	28	UNUSED						150, 153-199, 277-299
	29	UNUSED						150, 153-199, 277-299
	30	UNUSED						150, 153-199, 277-299
	31	UNUSED						150, 153-199, 277-299

HOOKUP LIST

D280T132

91-21-51

Section D05700

Page 9

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05709P		AE0324/ /		PLUG-E2-6				ALL
	1		W0163	202R	24		23-21-11	ALL
	2		W0163	202B	24		23-21-11	ALL
	3		W0163	203R	24		23-51-14	050-099, 151-152, 275-276
	3		W0163	060	24		23-25-14	150, 153-199, 277-299
	4		W0163	203B	24		23-51-14	050-099, 151-152, 275-276
	4		W0163	060Z			23-25-14	150, 153-199, 277-299
	5		W0163	301R	24		23-51-14	050-099, 151-152, 275-276
	5		W0163	064	24		23-25-14	150, 153-199, 277-299
	6		W0163	301B	24		23-51-14	050-099, 151-152, 275-276
	6		W0163	064Z			23-25-14	150, 153-199, 277-299
	7		W0163	301Y	24		23-51-14	050-099, 151-152, 275-276
	7		W0163	065	22		23-25-14	150, 153-155, 162-165
	7		W0163	065	24		23-25-14	156-157, 166-199, 277-299
	8	UNUSED						050-099, 151-152, 275-276
	8		W0163	205Z			23-25-13	150, 153-199, 277-299
	9	UNUSED						ALL
	10		W0163	005	24		23-11-11	ALL
	11		W0163	006	24		23-11-11	ALL
	12	UNUSED						050-099, 151-152, 275-276
	12		W0163	205R	22		23-25-13	150, 153-155, 162-165
	12		W0163	205R	24		23-25-13	156-157, 166-199, 277-299
	13		W0163	205B	22		23-25-13	150, 153-155, 162-165
	13		W0163	205B	24		23-25-13	156-157, 166-199, 277-299
	14		W0163	206Z			23-25-13	150, 153-199, 277-299
	15		W0163	206R	22		23-25-13	150, 153-155, 162-165
	15		W0163	206R	24		23-25-13	156-157, 166-199, 277-299
	16		W0163	206B	22		23-25-13	150, 153-155, 162-165
	16		W0163	206B	24		23-25-13	156-157, 166-199, 277-299
	17		W0163	053	22		23-25-14	150, 153-155, 162-165
	17		W0163	053	24		23-25-14	156-157, 166-199, 277-299
	18	UNUSED						150, 153-199, 277-299
	19	UNUSED						150, 153-199, 277-299
	20	UNUSED						150, 153-199, 277-299
	21	UNUSED						150, 153-199, 277-299
	22	UNUSED						150, 153-199, 277-299
	23	UNUSED						150, 153-199, 277-299
	24	UNUSED						150, 153-199, 277-299
	25	UNUSED						150, 153-199, 277-299
	26	UNUSED						150, 153-199, 277-299
	27	UNUSED						150, 153-199, 277-299

HOOKUP LIST

D280T132

91-21-51

Section D05700

Page 10

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05709P		AE0324/ /		PLUG-E2-6 (continued)				ALL
	28	UNUSED						150, 153-199, 277-299
	29	UNUSED						150, 153-199, 277-299
	30	UNUSED						150, 153-199, 277-299
	31	UNUSED						150, 153-199, 277-299
D05710J		AP0401/ /		RCPT-P19				ALL
	1		W1110	001	24		35-21-11	ALL
	2		W1110	002	24		35-21-11	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W1110	017	24		35-21-11	ALL
	6		W1110	003	22		35-21-11	ALL
	7		W1110	073	22		33-51-11	ALL
	8		W1110	018	24		35-21-11	ALL
	9		W1110	090	20		33-51-11	ALL
	10		W1110	087	20		33-51-11	ALL
	11		W1110	086	22		33-51-11	ALL
	12	UNUSED						050-099, 151-152, 154-156, 162-164, 275-299
	12		W9167	001	20		25-25-23	150, 153, 157, 165-199
	13	UNUSED						050-099, 151-152, 154-156, 162-164, 275-299
	13		W9167	001Z			25-25-23	150, 153, 157, 165-199
	14		W1110	037	16		35-21-12	ALL
	15	UNUSED						ALL
	16		W1110	045	16		35-21-13	ALL
	17	UNUSED						ALL
	18		W1110	053	16		35-21-14	ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	DED		W1110	087Z			33-51-11	ALL
	DED		W1110	090Z			33-51-11	ALL
D05710P		AP0401/ /		PLUG-P19				ALL
	1		W0712	001	24		35-21-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05700

Page 11

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05710P		AP0401/ /		PLUG-P19 (continued)				ALL
	2		W0712	002	24		35-21-11	ALL
	3		W0712	003	22		SPARE	ALL
	4		W0712	004	22		SPARE	ALL
	5		W0712	005	24		35-21-11	ALL
	6		W0712	006	22		35-21-11	ALL
	7		W0712	019	22		33-51-11	ALL
	8		W0712	008	24		35-21-11	ALL
	9		W0712	020	20		33-51-11	ALL
	10		W0712	021	20		33-51-11	ALL
	11		W0712	022	22		33-51-11	ALL
	12	UNUSED						050-099, 151-152, 154-156, 162-164, 275-299
	12		W9160	101	20		25-25-23	150, 153, 157, 165-199
	13	UNUSED						050-099, 151-152, 154-156, 162-164, 275-299
	13		W9160	101Z			25-25-23	150, 153, 157, 165-199
	14		W0712	012	12		35-21-12	ALL
	15	UNUSED						ALL
	16		W0712	016	12		35-21-13	ALL
	17	UNUSED						ALL
	18		W0712	018	12		35-21-14	ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	DED		W0712	020Z			33-51-11	ALL
	DED		W0712	021Z			33-51-11	ALL
D05712J		AC0702/ /		RCPT-R WING FS/BODY				ALL
	1		W0768	080	22		27-81-11	ALL
	2	DK	W0768	081	18		27-81-11	ALL
	3	DK	W0768	083	18		27-81-11	ALL
	4		W0768	211B	24		27-81-11	ALL
	5		W0768	211R	24		27-81-11	ALL
	6		W0768	306B	24		27-81-11	ALL
	7		W0768	306R	24		27-81-11	ALL
	8		W0768	306Y	24		27-81-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05700

Page 12

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05712J		AC0702/ /		RCPT-R WING FS/BODY (continued)				ALL
	9	DK	W0768	10B	18		78-34-21	ALL
	10	DK	W0768	10A	18		78-34-21	ALL
	11	DK	W0768	10F	18		78-34-21	ALL
	12	DK	W0768	10G	18		78-34-21	ALL
	=CC	C	W0768	10AZ			78-34-21	050-099, 150-199, 275-278
	=CC	C	W0768	10BZ			78-34-21	050-099, 150-199, 275-278
	=CC	C	W0768	10FZ			78-34-21	050-099, 150-199, 275-278
	=CC	C	W0768	10GZ			78-34-21	050-099, 150-199, 275-278
	=CC	L	W0768	10AZ			78-34-21	280-299
	=CC	L	W0768	10BZ			78-34-21	280-299
	=CC	L	W0768	10FZ			78-34-21	280-299
	=CC	L	W0768	10GZ			78-34-21	280-299
D05712P		AC0702/ /		PLUG-R WING FS/BODY				ALL
	1		W0418	043	20		27-81-11	ALL
	2	DL	W0418	044	18		27-81-11	ALL
	3	DL	W0418	045	18		27-81-11	ALL
	4		W0418	206B	20		27-81-11	ALL
	5		W0418	206R	20		27-81-11	ALL
	6		W0418	303B	20		27-81-11	ALL
	7		W0418	303R	20		27-81-11	ALL
	8		W0418	303Y	20		27-81-11	ALL
	9	DL	W0418	106	18		78-34-21	ALL
	10	DL	W0418	107	18		78-34-21	ALL
	11	DL	W0418	110	18		78-34-21	ALL
	12	DL	W0418	111	18		78-34-21	ALL
	=CC	L	W0418	106Z			78-34-21	ALL
	=CC	L	W0418	107Z			78-34-21	ALL
	=CC	L	W0418	110Z			78-34-21	ALL
	=CC	L	W0418	111Z			78-34-21	ALL
D05713J		AE0314/ /		RCPT-E2-2				ALL
	1		W0143	001	24		34-61-13	ALL
	2		W0143	202R	24		34-61-13	ALL
	3		W0143	202B	24		34-61-13	ALL
	4		W0143	202Z			34-61-13	ALL
	5		W0143	203R	24		34-61-13	ALL
	6		W0143	203B	24		34-61-13	ALL
	7		W0143	203Z			34-61-13	ALL
	8		W0143	204R	24		34-61-13	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05700

Page 13

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05713J		AE0314/ /		RCPT-E2-2 (continued)				ALL
	9		W0143	204B	24		34-61-13	ALL
	10		W0143	204Z			34-61-13	ALL
	11		W0143	002	22		34-61-13	ALL
	12		W0143	205R	24		34-61-13	ALL
	13		W0143	205B	24		34-61-13	ALL
	14		W0143	205Z			34-61-13	ALL
	15		W0143	230R	24		31-35-13	ALL
	16		W0143	230B	24		31-35-13	ALL
	17		W0143	230Z			31-35-13	ALL
	18		W0143	208R	24		34-61-11	ALL
	19		W0143	208B	24		34-61-11	ALL
	20		W0143	208Z			34-61-11	ALL
	21		W0143	211B	24		34-53-21	ALL
	22		W0143	211R	24		34-53-21	ALL
	23		W0143	211Z			34-53-21	ALL
	24		W0143	210R	24		34-61-11	ALL
	25		W0143	210B	24		34-61-11	ALL
	26		W0143	210Z			34-61-11	ALL
	27		W0143	017	24		34-53-13	ALL
	28	UNUSED						ALL
	29		W0143	220R	24		34-61-26	ALL
	30		W0143	220B	24		34-61-26	ALL
	31		W0143	220Z			34-61-26	ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35		W0143	228R	24		31-35-13	ALL
	36		W0143	228B	24		31-35-13	ALL
	37		W0143	228Z			31-35-13	ALL
	38		W0143	229R	24		31-35-13	ALL
	39		W0143	229B	24		31-35-13	ALL
	40		W0143	229Z			31-35-13	ALL
	41		W0143	238R	24		34-61-26	ALL
	42		W0143	238B	24		34-61-26	ALL
	43		W0143	238Z			34-61-26	ALL
	44		W0143	239R	24		31-31-20	ALL
	45		W0143	239B	24		31-31-20	ALL
	46		W0143	239Z			31-31-20	ALL
	47		W0143	243R	24		31-41-33	ALL
	48		W0143	243B	24		31-41-33	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05700

Page 14

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05713J		AE0314/ /		RCPT-E2-2 (continued)				ALL
	49		W0143	243Z			31-41-33	ALL
	50	UNUSED						ALL
	51		W0143	232R	24		34-61-26	ALL
	52		W0143	232B	24		34-61-26	ALL
	53		W0143	232Z			34-61-26	ALL
	54		W0143	011	24		34-61-25	ALL
	55	UNUSED						ALL
D05713P		AE0314/ /		PLUG-E2-3				ALL
	1		W0145	022	24		34-61-13	ALL
	2		W0145	251R	24		34-61-13	ALL
	3		W0145	251B	24		34-61-13	ALL
	4		W0145	251Z			34-61-13	ALL
	5		W0145	252R	24		34-61-13	ALL
	6		W0145	252B	24		34-61-13	ALL
	7		W0145	252Z			34-61-13	ALL
	8		W0145	253R	24		34-61-13	ALL
	9		W0145	253B	24		34-61-13	ALL
	10		W0145	253Z			34-61-13	ALL
	11		W0145	023	22		34-61-13	ALL
	12		W0145	254R	24		34-61-13	ALL
	13		W0145	254B	24		34-61-13	ALL
	14		W0145	254Z			34-61-13	ALL
	15		W0145	545R	24		31-35-13	ALL
	16		W0145	545B	24		31-35-13	ALL
	17		W0145	545Z			31-35-13	ALL
	18		W0145	203R	24		34-61-11	ALL
	19		W0145	203B	24		34-61-11	ALL
	20		W0145	203Z			34-61-11	ALL
	21		W0145	279B	24		34-53-21	ALL
	22		W0145	279R	24		34-53-21	ALL
	23		W0145	279Z			34-53-21	ALL
	24		W0145	202R	24		34-61-11	ALL
	25		W0145	202B	24		34-61-11	ALL
	26		W0145	202Z			34-61-11	ALL
	27		W0145	081	24		34-53-13	ALL
	28	UNUSED						ALL
	29		W0145	561R	24		34-61-26	ALL
	30		W0145	561B	24		34-61-26	ALL
	31		W0145	561Z			34-61-26	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05700

Page 15

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05713P		AE0314/ /		PLUG-E2-3 (continued)				ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35		W0145	260R	24		31-35-13	ALL
	36		W0145	260B	24		31-35-13	ALL
	37		W0145	260Z			31-35-13	ALL
	38		W0145	266R	24		31-35-13	ALL
	39		W0145	266B	24		31-35-13	ALL
	40		W0145	266Z			31-35-13	ALL
	41		W0145	558R	24		34-61-26	ALL
	42		W0145	558B	24		34-61-26	ALL
	43		W0145	558Z			34-61-26	ALL
	44		W0145	289R	24		31-31-20	ALL
	45		W0145	289B	24		31-31-20	ALL
	46		W0145	289Z			31-31-20	ALL
	47		W0145	543R	24		31-41-33	ALL
	48		W0145	543B	24		31-41-33	ALL
	49		W0145	543Z			31-41-33	ALL
	50	UNUSED						ALL
	51		W0145	577R	24		34-61-26	ALL
	52		W0145	577B	24		34-61-26	ALL
	53		W0145	577Z			34-61-26	ALL
	54		W0145	847	24		34-61-25	ALL
	55	UNUSED						ALL
D05714J		AE0209/ /		RCPT-P36				ALL
	1		W0176	091	18		33-42-11	ALL
	2		W0176	092	18		33-42-11	ALL
	3		W0176	737	18		33-42-21	ALL
	4		W0176	841	18		33-42-21	ALL
D05714P		AE0209/ /		PLUG-P36				ALL
	1		W0924	001	18		33-42-11	ALL
	2		W0924	002	18		33-42-11	ALL
	3		W0924	011	18		33-42-21	ALL
	4		W0924	012	18		33-42-21	ALL
D05715J		AE0316/ /		RCPT-E2-3				ALL
	1	UNUSED						050-099, 155-199, 276-299
	1		W0145	060	24		31-51-21	150-154, 275

HOOKUP LIST
D280T132

91-21-51
Section D05700
Page 16
Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05715J		AE0316/ /		RCPT-E2-3 (continued)				ALL
	2	UNUSED						ALL
	3	UNUSED						050-099
	3		W0145	725	24		27-81-31	150-199, 275-299
	4	UNUSED						050-099, 155-199, 276-299
	4		W0145	093	24		31-51-21	150-154, 275
	5		W0145	535Z			21-31-21	ALL
	6		W0145	535R	24		21-31-21	ALL
	7		W0145	535B	24		21-31-21	ALL
	8		W0145	838	24		27-32-11	ALL
	9		W0145	839	24		27-32-11	ALL
	10		W0145	840	24		27-32-11	ALL
	11		W0145	841	24		27-32-11	ALL
	12		W0145	842	24		27-32-21	ALL
	13		W0145	843	24		27-32-21	ALL
	14		W0145	844	24		27-32-21	ALL
	15		W0145	845	24		27-32-21	ALL
	16		W0145	225R	24		34-61-24	ALL
	17		W0145	225B	24		34-61-24	ALL
	18		W0145	225Z			34-61-24	ALL
	19		W0145	512B	24		34-12-62	ALL
	20		W0145	512R	24		34-12-62	ALL
	21		W0145	512Z			34-12-62	ALL
	22	UNUSED						050-099, 155-199, 276-299
	22		W0145	094	24		31-51-21	150-154, 275
	23		W0145	058	24		31-51-41	ALL
	24	UNUSED						050-099, 155-199, 276-299
	24		W0145	095	24		31-51-21	150-154, 275
	25		W0145	229R	24		22-33-11	ALL
	26		W0145	229B	24		22-33-11	ALL
	27		W0145	229Z			22-33-11	ALL
	28		W0145	566	24		31-31-14	ALL
	29		W0145	529Z			31-31-14	ALL
	30		W0145	529R	24		31-31-14	ALL
	31		W0145	529B	24		31-31-14	ALL
	32		W0145	235R	24		22-33-11	ALL
	33		W0145	235B	24		22-33-11	ALL
	34		W0145	235Z			22-33-11	ALL
	35		W0145	658	24		31-31-26	ALL
	36		W0145	659	24		31-31-26	ALL
	37		W0145	660	24		31-31-26	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05700

Page 17

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05715J		AE0316/ /		RCPT-E2-3 (continued)				ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
D05715P		AE0316/ /		PLUG-E2-4				ALL
	1	UNUSED						050-099, 155-199, 276-299
	1		W0016	034	24		31-51-21	150-154, 275
	2	UNUSED						ALL
	3		W0016	509	24		27-81-31	ALL
	4	UNUSED						050-099, 155-199, 276-299
	4		W0016	114	24		31-51-21	150-154, 275
	5		W0016	217Z			21-31-21	ALL
	6		W0016	217R	24		21-31-21	ALL
	7		W0016	217B	24		21-31-21	ALL
	8		W0016	115	24		27-32-11	ALL
	9		W0016	116	24		27-32-11	ALL
	10		W0016	117	24		27-32-11	ALL
	11		W0016	118	24		27-32-11	ALL
	12		W0016	119	24		27-32-21	ALL
	13		W0016	120	24		27-32-21	ALL
	14		W0016	121	24		27-32-21	ALL
	15		W0016	122	24		27-32-21	ALL
	16		W0016	220R	24		34-61-24	ALL
	17		W0016	220B	24		34-61-24	ALL
	18		W0016	220Z			34-61-24	ALL
	19		W0016	224B	24		34-12-62	ALL
	20		W0016	224R	24		34-12-62	ALL
	21		W0016	224Z			34-12-62	ALL
	22	UNUSED						050-099, 155-199, 276-299
	22		W0016	170	24		31-51-21	150-154, 275
	23		W0016	033	24		31-51-41	ALL
	24	UNUSED						050-099, 155-199, 276-299
	24		W0016	171	24		31-51-21	150-154, 275
	25		W0016	233R	24		22-33-11	ALL
	26		W0016	233B	24		22-33-11	ALL
	27		W0016	233Z			22-33-11	ALL
	28		W0016	181	24		31-31-14	ALL
	29		W0016	226Z			31-31-14	ALL
	30		W0016	226R	24		31-31-14	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05700

Page 18

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05715P		AE0316/ /		PLUG-E2-4 (continued)				ALL
	31		W0016	226B	24		31-31-14	ALL
	32		W0016	234R	24		22-33-11	ALL
	33		W0016	234B	24		22-33-11	ALL
	34		W0016	234Z			22-33-11	ALL
	35		W0016	505	24		31-31-26	ALL
	36		W0016	506	24		31-31-26	ALL
	37		W0016	507	24		31-31-26	ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	DED		W0016	507Z			31-31-26	ALL
D05719J		AE0324/ /		RCPT-E2-5				ALL
	1		W0149	201R	24		23-21-11	ALL
	2		W0149	201B	24		23-21-11	ALL
	3		W0149	242R	24		23-51-14	ALL
	4		W0149	242B	24		23-51-14	ALL
	5		W0149	305R	24		23-51-14	ALL
	6		W0149	305B	24		23-51-14	ALL
	7		W0149	305Y	24		23-51-14	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10		W0149	135	24		23-11-21	ALL
	11		W0149	076	24		23-11-21	ALL
	12	UNUSED						ALL
D05719P		AE0324/ /		PLUG-E2-6				ALL
	1		W0173	202R	24		23-21-11	ALL
	2		W0173	202B	24		23-21-11	ALL
	3		W0173	203R	24		23-51-14	050-099, 151-152, 275-276
	3		W0173	058	22		23-25-14	150, 153-155, 162-165
	3		W0173	058	24		23-25-14	156-157, 166-199, 277-299
	4		W0173	203B	24		23-51-14	050-099, 151-152, 275-276
	4		W0173	058Z			23-25-14	150, 153-199, 277-299
	5		W0173	301R	24		23-51-14	050-099, 151-152, 275-276
	5		W0173	057	22		23-25-14	150, 153-155, 162-165
	5		W0173	057	24		23-25-14	156-157, 166-199, 277-299
	6		W0173	301B	24		23-51-14	050-099, 151-152, 275-276
	6		W0173	057Z			23-25-14	150, 153-199, 277-299

HOOKUP LIST

D280T132

91-21-51

Section D05700

Page 19

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05719P		AE0324/ /		PLUG-E2-6 (continued)				ALL
	7		W0173	301Y	24		23-51-14	050-099, 151-152, 275-276
	7		W0173	056	22		23-25-14	150, 153-155, 162-165
	7		W0173	056	24		23-25-14	156-157, 166-199, 277-299
	8	UNUSED						ALL
	9	UNUSED						ALL
	10		W0173	005	24		23-11-21	ALL
	11		W0173	006	24		23-11-21	ALL
	12	UNUSED						ALL
D05720J		0470/270/L070		RCPT-				050-099
	=1		W1230	003	22		33-22-21	050-099
D05720P		0470/270/L070		PLUG-				050-099
	=1		W1178	001	22		33-22-21	050-099
D05722J		0470/270/L070		RCPT-				050-099
	=1		W1178	003	22		33-22-21	050-099
D05722P		0470/270/L070		PLUG-				050-099
	=1		W1230	005	20		33-22-21	050-099
D05723J		AE0314/ /		RCPT-E2-2				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W0153	205R	24		31-35-13	ALL
	8		W0153	205B	24		31-35-13	ALL
	9		W0153	205Z			31-35-13	ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12		W0153	202R	24		34-61-22	ALL
	13		W0153	202B	24		34-61-22	ALL
	14		W0153	202Z			34-61-22	ALL
	15	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D05700
Page 20
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05723P		AE0314/ /		PLUG-E2-3				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W0155	210R	24		31-35-13	ALL
	8		W0155	210B	24		31-35-13	ALL
	9		W0155	210Z			31-35-13	ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12		W0155	201R	24		34-61-22	ALL
	13		W0155	201B	24		34-61-22	ALL
	14		W0155	201Z			34-61-22	ALL
	15	UNUSED						ALL
D05724J		AF0204/ /		RCPT-P61				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W0066	52J	24		21-61-11	ALL
	4		W0066	505	22		21-61-11	ALL
	5		W0066	52L	24		21-61-11	ALL
	6		W0066	048	24		21-61-11	ALL
	7		W0066	046	24		21-61-11	ALL
	8		W0066	050	24		21-61-11	ALL
	9		W0066	049	24		21-61-11	ALL
	10		W0066	201B	24		21-61-11	ALL
	11		W0066	201R	24		21-61-11	ALL
	12		W0066	301B	24		21-61-11	ALL
	13		W0066	301R	24		21-61-11	ALL
	14		W0066	301Y	24		21-61-11	ALL
	15		W0066	65F	24		21-61-11	ALL
	16		W0066	52N	24		21-61-21	ALL
	17		W0066	060	24		21-61-21	ALL
	18		W0066	52P	24		21-61-21	ALL
	19	UNUSED						ALL
	20		W0066	179	24		21-61-81	ALL
	21		W0066	184	24		21-61-81	ALL
	22	UNUSED						ALL
	23	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D05700

Page 21

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05724J		AF0204/ /		RCPT-P61 (continued)				ALL
	24	UNUSED						ALL
	25		W0066	302B	24		21-61-21	ALL
	26		W0066	302R	24		21-61-21	ALL
	27		W0066	302Y	24		21-61-21	ALL
	28		W0066	52S	22		21-61-21	ALL
	29		W0066	52U	24		21-61-31	ALL
	30		W0066	070	24		21-61-31	ALL
	31		W0066	52V	24		21-61-31	ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38		W0066	303B	24		21-61-31	ALL
	39		W0066	303R	24		21-61-31	ALL
	40		W0066	303Y	24		21-61-31	ALL
	41		W0066	52X	22		21-61-31	ALL
	42		W0066	542	22		21-61-41	ALL
	43		W0066	543	24		21-61-41	ALL
	44		W0066	09K	24		21-61-41	ALL
	45		W0066	545	24		21-61-41	ALL
	46		W0066	315B	24		21-61-41	ALL
	47		W0066	315R	24		21-61-41	ALL
	48		W0066	315Y	24		21-61-41	ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
	56	UNUSED						ALL
	57	UNUSED						ALL
	58	UNUSED						ALL
	59	UNUSED						ALL
	60	UNUSED						ALL
	61	UNUSED						ALL



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05724P		AF0204/ /		PLUG-P61				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W0506	194	24		21-61-11	ALL
	4		W0506	195	22		21-61-11	ALL
	5		W0506	715	24		21-61-11	ALL
	6		W0506	197	24		21-61-11	ALL
	7		W0506	198	24		21-61-11	ALL
	8		W0506	199	24		21-61-11	ALL
	9		W0506	501	24		21-61-11	ALL
	10		W0506	205B	24		21-61-11	ALL
	11		W0506	205R	24		21-61-11	ALL
	12		W0506	301B	24		21-61-11	ALL
	13		W0506	301R	24		21-61-11	ALL
	14		W0506	301Y	24		21-61-11	ALL
	15		W0506	502	24		21-61-11	ALL
	16		W0506	504	24		21-61-21	ALL
	17		W0506	505	24		21-61-21	ALL
	18		W0506	716	24		21-61-21	ALL
	19	UNUSED						ALL
	20		W0506	745	24		21-61-81	ALL
	21		W0506	746	24		21-61-81	ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25		W0506	302B	24		21-61-21	ALL
	26		W0506	302R	24		21-61-21	ALL
	27		W0506	302Y	24		21-61-21	ALL
	28		W0506	511	22		21-61-21	ALL
	29		W0506	513	24		21-61-31	ALL
	30		W0506	514	24		21-61-31	ALL
	31		W0506	717	24		21-61-31	ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38		W0506	303B	24		21-61-31	ALL
	39		W0506	303R	24		21-61-31	ALL
	40		W0506	303Y	24		21-61-31	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05700

Page 23

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05724P		AF0204/ /		PLUG-P61 (continued)				ALL
	41		W0506	520	22		21-61-31	ALL
	42		W0506	690	22		21-61-41	ALL
	43		W0506	691	24		21-61-41	ALL
	44		W0506	692	24		21-61-41	ALL
	45		W0506	718	24		21-61-41	ALL
	46		W0506	305B	24		21-61-41	ALL
	47		W0506	305R	24		21-61-41	ALL
	48		W0506	305Y	24		21-61-41	ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
	56	UNUSED						ALL
	57	UNUSED						ALL
	58	UNUSED						ALL
	59	UNUSED						ALL
	60	UNUSED						ALL
	61	UNUSED						ALL
D05726J		AF0204/ /		RCPT-P61				ALL
	1		W0062	202B	24		21-61-11	ALL
	2		W0062	202R	24		21-61-11	ALL
	3		W0062	201B	24		21-61-11	ALL
	4		W0062	201R	24		21-61-11	ALL
	5		W0062	204B	24		21-61-21	ALL
	6		W0062	204R	24		21-61-21	ALL
	7		W0062	203B	24		21-61-21	ALL
	8		W0062	203R	24		21-61-21	ALL
	9		W0062	61H	24		36-21-11	ALL
	10		W0062	61F	24		36-11-51	ALL
	11		W0062	75M	22		21-66-11	050-099, 162-199
	11	UNUSED						150-157, 275-299
	12	UNUSED						ALL
	13	UNUSED						ALL
	14		W0062	098	24		36-11-41	ALL
	15		W0062	097	24		36-11-41	ALL
	16	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D05700
Page 24
Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05726J		AF0204/ /		RCPT-P61 (continued)				ALL
	17	UNUSED						ALL
	18	UNUSED						050-099, 150-155, 162-165, 275-276
	18	DK	W0062	61E	18		36-11-51	156-157, 166-199, 277-299
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22		W0062	51V	24		21-61-51	ALL
	23		W0062	61A	24		36-11-11	ALL
	24		W0062	071	24		36-11-11	ALL
	25		W0062	075	24		36-11-11	ALL
	26		W0062	076	22		36-11-11	ALL
	27		W0062	104	22		36-11-11	ALL
	28		W0062	61B	24		36-11-31	ALL
	29		W0062	083	24		36-11-31	ALL
	30		W0062	085	24		36-11-31	ALL
	31		W0062	119	22		36-11-31	ALL
	32		W0062	121	22		36-11-31	ALL
	33	DK	W0062	61E	18		36-11-51	050-099, 155, 162-165, 276
	33	UNUSED						150-154, 156-157, 166-199, 275, 277-299
	34		W0062	61G	22		36-11-51	ALL
	35		W0062	093	22		36-11-51	ALL
	36		W0062	080	24		36-11-51	ALL
	37	UNUSED						ALL
	38		W0062	125	22		36-11-61	ALL
	39		W0062	094	24		36-11-61	ALL
	40		W0062	211R	24		36-21-11	ALL
	41		W0062	211B	24		36-21-11	ALL
	42		W0062	56F	24		30-31-11	ALL
	43		W0062	05J	22		30-31-21	ALL
	44		W0062	05L	22		30-31-23	ALL
	45		W0062	56H	22		30-31-11	ALL
	46		W0062	781	24		30-31-11	ALL
	47		W0062	509	20		24-51-72	050-099, 162-164, 276
	47	UNUSED						150-157, 165-199, 275, 277-299
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52		W0062	56C	22		30-31-11	ALL
	53	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D05700

Page 25

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05726J		AF0204/ /		RCPT-P61 (continued)				ALL
	54	UNUSED						ALL
	55		W0062	06K	22		30-31-13	ALL
	56	UNUSED						ALL
	57	UNUSED						ALL
	58	UNUSED						ALL
	59	UNUSED						ALL
	60	UNUSED						ALL
	61		W0062	788R	22		26-18-21	ALL
D05726P		AF0204/ /		PLUG-P61				ALL
	1		W0572	205B	24		21-61-11	ALL
	2		W0572	205R	24		21-61-11	ALL
	3		W0572	206B	24		21-61-11	ALL
	4		W0572	206R	24		21-61-11	ALL
	5		W0572	207B	24		21-61-21	ALL
	6		W0572	207R	24		21-61-21	ALL
	7		W0572	208B	24		21-61-21	ALL
	8		W0572	208R	24		21-61-21	ALL
	9		W0572	134	24		36-21-11	ALL
	10		W0572	142	24		36-11-51	ALL
	11		W0572	690	22		21-66-11	050-099, 162-199
	11	UNUSED						150-157, 275-299
	12	UNUSED						ALL
	13	UNUSED						ALL
	14		W0572	137	24		36-11-41	ALL
	15		W0572	136	24		36-11-41	ALL
	16	UNUSED						ALL
	17	DL	W0572	666	18		SPARE	050-099, 155-199, 276-299
	17	UNUSED						150-154, 275
	18	UNUSED						050-099, 150-155, 162-165, 275-276
	18	DL	W0572	688	18		36-11-51	156-157, 166-199, 277-299
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22		W0572	083	24		21-61-51	ALL
	23		W0572	085	24		36-11-11	ALL
	24		W0572	086	24		36-11-11	ALL
	25		W0572	087	24		36-11-11	ALL
	26		W0572	088	22		36-11-11	ALL
	27		W0572	089	22		36-11-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05700

Page 26

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05726P		AF0204/ /		PLUG-P61 (continued)				ALL
	28		W0572	090	24		36-11-31	ALL
	29		W0572	091	24		36-11-31	ALL
	30		W0572	092	24		36-11-31	ALL
	31		W0572	093	22		36-11-31	ALL
	32		W0572	094	22		36-11-31	ALL
	33	DL	W0572	139	18		36-11-51	050-099, 155, 162-165, 276
	33	UNUSED						150-154, 275
	33	DL	W0572	139	18		SPARE	156-157, 166-199, 277-299
	34		W0572	095	22		36-11-51	ALL
	35		W0572	096	22		36-11-51	ALL
	36		W0572	097	24		36-11-51	ALL
	37	UNUSED						ALL
	38		W0572	113	22		36-11-61	ALL
	39		W0572	112	24		36-11-61	ALL
	40		W0572	212R	24		36-21-11	ALL
	41		W0572	212B	24		36-21-11	ALL
	42		W0572	152	24		30-31-11	ALL
	43		W0572	153	22		30-31-21	ALL
	44		W0572	154	22		30-31-23	ALL
	45		W0572	155	24		30-31-11	ALL
	46		W0572	156	24		30-31-11	ALL
	47		W0572	682	20		24-51-72	050-099, 162-164, 276
	47	UNUSED						150-154, 275
	47		W0572	682	20		SPARE	155-157, 165-199, 277-299
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52		W0572	162	22		30-31-11	ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55		W0572	165	22		30-31-13	ALL
	56	UNUSED						ALL
	57	UNUSED						ALL
	58	UNUSED						ALL
	59	UNUSED						ALL
	60		W0572	524	22		SPARE	050-099, 150-199
	60	UNUSED						275-299
	61		W0572	528R	22		26-18-21	ALL
	CAP	Y	W0572	139	22		SPARE	150-154, 275

HOOKUP LIST

D280T132

91-21-51

Section D05700

Page 27

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05728J		AP1003/ /		RCPT-P25				050-099
	1		W1112	004	16		35-21-13	050-099
	2	UNUSED						050-099
	3	UNUSED						050-099
D05728P		AP1003/ /		PLUG-P25				050-099
	1		W0728	001	16		35-21-13	050-099
	2	UNUSED						050-099
	3	UNUSED						050-099
D05730J		AP1003/ /		RCPT-P25				050-099
	1		W1112	005	16		35-21-14	050-099
	2	UNUSED						050-099
	3	UNUSED						050-099
D05730P		AP1003/ /		PLUG-P25				050-099
	1		W0726	001	16		35-21-14	050-099
	2	UNUSED						050-099
	3	UNUSED						050-099
D05732J		AF0204/ /		RCPT-P61				ALL
	1		W0062	54S	24		29-31-11	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W0062	04C	22		29-21-32	ALL
	5		W0062	879	22		29-21-32	ALL
	6		W0062	04E	22		29-21-32	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11		W0062	04K	22		29-33-11	ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14		W0062	858	22		29-33-11	ALL
	15		W0062	880	22		29-21-32	ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D05700
Page 28
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05732J		AF0204/ /		RCPT-P61 (continued)				ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	DED		W0062	54SZ			29-31-11	ALL
D05732P		AF0204/ /		PLUG-P61				ALL
	1		W1246	001	22		29-31-11	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W1246	004	22		29-21-32	ALL
	5		W1246	005	22		29-21-32	ALL
	6		W1246	023	22		29-21-32	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11		W1246	019	22		29-33-11	ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14		W1246	022	22		29-33-11	ALL
	15		W1246	024	22		29-21-32	ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D05733J		AE0314/ /		RCPT-E2-2				ALL
	1		W0133	255R	24		34-61-15	ALL
	2		W0133	255B	24		34-61-15	ALL
	3		W0133	255Z			34-61-15	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W0133	670R	24		34-61-16	ALL

HOOKUP LIST
D280T132

91-21-51
Section D05700
Page 29
Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05733J		AE0314/ /		RCPT-E2-2 (continued)				ALL
	8		W0133	670B	24		34-61-16	ALL
	9		W0133	670Z			34-61-16	ALL
	10		W0133	671R	24		34-61-16	ALL
	11		W0133	671B	24		34-61-16	ALL
	12		W0133	671Z			34-61-16	ALL
	13		W0133	151	24		31-31-13	ALL
	14		W0133	152	24		31-31-13	ALL
	15		W0133	178	24		31-31-18	ALL
	16		W0133	179	24		31-31-18	ALL
	17		W0133	180	24		31-31-18	ALL
	18		W0133	726	24		34-16-11	ALL
	19		W0133	719	24		31-51-43	ALL
	20		W0133	724	24		31-51-42	ALL
	21		W0133	720	24		31-51-41	ALL
	22		W0133	721	24		31-51-41	ALL
	23		W0133	722	24		31-51-41	ALL
	24		W0133	723	24		31-51-41	ALL
	25		W0133	797	24		34-61-14	050-099, 150-199, 276-299
	25	UNUSED						275
	26		W0133	778	24		34-61-15	ALL
	27		W0133	779	24		34-61-15	ALL
	28		W0133	734	24		34-61-15	ALL
	29		W0133	222R	24		34-61-14	ALL
	30		W0133	222B	24		34-61-14	ALL
	31		W0133	222Z			34-61-14	ALL
	32		W0133	298R	24		34-46-11	ALL
	33		W0133	298B	24		34-46-11	ALL
	34		W0133	298Z			34-46-11	ALL
	35		W0133	735	24		31-41-16	ALL
	36		W0133	736	24		34-53-11	ALL
	37		W0133	737	24		31-51-41	ALL
	38		W0133	506R	24		31-51-33	ALL
	39		W0133	506B	24		31-51-33	ALL
	40		W0133	506Z			31-51-33	ALL
	41		W0133	111	24		31-41-16	ALL
	42		W0133	286R	24		34-61-15	ALL
	43		W0133	286B	24		34-61-15	ALL
	44		W0133	286Z			34-61-15	ALL
	45		W0133	746	22		34-22-38	ALL
	46	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D05700

Page 30

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05733J		AE0314/ /		RCPT-E2-2 (continued)				ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50		W0133	782R	24		34-61-15	ALL
	51		W0133	782B	24		34-61-15	ALL
	52		W0133	782Z			34-61-15	ALL
	53		W0133	783R	24		34-61-15	ALL
	54		W0133	783B	24		34-61-15	ALL
	55		W0133	783Z			34-61-15	ALL
D05733P		AE0314/ /		PLUG-E2-2				ALL
	1		W0135	277R	24		34-61-15	ALL
	2		W0135	277B	24		34-61-15	ALL
	3		W0135	277Z			34-61-15	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W0135	597R	24		34-61-16	ALL
	8		W0135	597B	24		34-61-16	ALL
	9		W0135	597Z			34-61-16	ALL
	10		W0135	598R	24		34-61-16	ALL
	11		W0135	598B	24		34-61-16	ALL
	12		W0135	598Z			34-61-16	ALL
	13		W0135	798	24		31-31-13	ALL
	14		W0135	085	24		31-31-13	ALL
	15		W0135	045	24		31-31-18	ALL
	16		W0135	046	24		31-31-18	ALL
	17		W0135	047	24		31-31-18	ALL
	18		W0135	128	24		34-16-11	ALL
	19		W0135	129	24		31-51-43	ALL
	20		W0135	127	24		31-51-42	ALL
	21		W0135	123	24		31-51-41	ALL
	22		W0135	124	24		31-51-41	ALL
	23		W0135	125	24		31-51-41	ALL
	24		W0135	126	24		31-51-41	ALL
	25		W0135	852	24		34-61-14	050-099, 150-199, 276-299
	25	UNUSED						275
	26		W0135	847	24		34-61-15	ALL
	27		W0135	848	24		34-61-15	ALL
	28		W0135	132	24		34-61-15	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05700

Page 31

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05733P		AE0314/ /		PLUG-E2-2 (continued)				ALL
	29		W0135	276R	24		34-61-14	050-099, 150-156, 162-166
	29		W0135	681R	24		34-61-14	157, 167-199, 275-299
	30		W0135	276B	24		34-61-14	050-099, 150-156, 162-166
	30		W0135	681B	24		34-61-14	157, 167-199, 275-299
	31		W0135	FRF			34-61-14	050-099, 150-156, 162-166
	31		W0135	681Z			34-61-14	157, 167-199, 275-299
	32		W0135	518R	24		34-46-11	ALL
	33		W0135	518B	24		34-46-11	ALL
	34		W0135	518Z			34-46-11	ALL
	35		W0135	133	24		31-41-16	ALL
	36		W0135	130	24		34-53-11	ALL
	37		W0135	134	24		31-51-41	ALL
	38		W0135	510R	24		31-51-33	ALL
	39		W0135	510B	24		31-51-33	ALL
	40		W0135	510Z			31-51-33	ALL
	41		W0135	140	24		31-41-16	ALL
	42		W0135	296R	24		34-61-15	ALL
	43		W0135	296B	24		34-61-15	ALL
	44		W0135	296Z			34-61-15	ALL
	45		W0135	685	22		34-22-38	ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50		W0135	844R	24		34-61-15	ALL
	51		W0135	844B	24		34-61-15	ALL
	52		W0135	844Z			34-61-15	ALL
	53		W0135	845R	24		34-61-15	ALL
	54		W0135	845B	24		34-61-15	ALL
	55		W0135	845Z			34-61-15	ALL
	REF		W0135	276	20		34-61-14	050-099, 150-156, 162-166
	REF		W0135	276Z			34-61-14	050-099, 150-156, 162-166
	REF		W0135	FRF			34-61-14	050-099, 150-156, 162-166
D05734J		AE0306/ /		RCPT-E2-4				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W1246	013	22		29-33-11	ALL
	4		W1246	014	22		29-33-11	ALL
	5		W1246	015	22		29-33-11	ALL

HOOKUP LIST
D280T132

91-21-51
Section D05700
Page 32
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05734J		AE0306/ /		RCPT-E2-4 (continued)				ALL
	6		W1246	FRA			29-33-11	ALL
	7		W1246	FRB			29-33-11	ALL
	8		W1246	029	24		29-33-11	ALL
	9		W1246	028	24		29-33-11	ALL
	10	UNUSED						ALL
	11		W1246	019	22		29-33-11	ALL
	12		W1246	026	24		29-33-11	ALL
	13		W1246	027	24		29-33-11	ALL
	14		W1246	022	22		29-33-11	ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17		W1246	012	22		29-33-11	ALL
	18		W1246	FRC			29-33-11	ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
			W1246	012Z			29-33-11	ALL
			W1246	FRA			29-33-11	ALL
			W1246	FRB			29-33-11	ALL
			W1246	FRC			29-33-11	ALL
D05734P		AE0306/ /		PLUG-E2-4				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W0014	150	24		29-33-11	ALL
	4		W0014	151	24		29-33-11	ALL
	5		W0014	152	24		29-33-11	ALL
	6		W0014	FRW			29-33-11	ALL
	7		W0014	FRR			29-33-11	ALL
	8		W0014	115	24		29-33-11	ALL
	9		W0014	135	24		29-33-11	ALL
	10	UNUSED						ALL
	11		W0014	514	22		29-33-11	ALL
	12		W0014	139	24		29-33-11	ALL
	13		W0014	113	24		29-33-11	ALL
	14		W0014	510	22		29-33-11	ALL
	15	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D05700

Page 33

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05734P		AE0306/ /		PLUG-E2-4 (continued)				ALL
	16	UNUSED						ALL
	17		W0014	149	24		29-33-11	ALL
	18		W0014	FRS			29-33-11	ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	REF		W0014	149Z			29-33-11	ALL
	REF		W0014	FRR			29-33-11	ALL
	REF		W0014	FRS			29-33-11	ALL
	REF		W0014	FRW			29-33-11	ALL
D05736J		AP1003/ /		RCPT-P25				050-099
	1		W1112	003	16		35-21-12	050-099
	2	UNUSED						050-099
	3	UNUSED						050-099
D05736P		AP1003/ /		PLUG-P25				050-099
	1		W0724	001	16		35-21-12	050-099
	2	UNUSED						050-099
	3	UNUSED						050-099
D05738J		AE0220/ /		RCPT-E3-1				ALL
	1		W1226	206B	22		21-51-22	ALL
	2		W1226	206R	22		21-51-22	ALL
	3		W1226	207B	24		21-61-31	ALL
	4		W1226	207R	24		21-61-31	ALL
	5	UNUSED						ALL
	6		W1226	226B	24		21-61-31	ALL
	7		W1226	226R	24		21-61-31	ALL
	8		W1226	227R	24		21-61-41	ALL
	9		W1226	227B	24		21-61-41	ALL
	10		W1226	228R	24		21-61-41	ALL
	11		W1226	228B	24		21-61-41	ALL
	12	UNUSED						ALL
D05738P		AE0220/ /		PLUG-E3-1				ALL
	1		W0084	203B	22		21-51-22	ALL

HOOKUP LIST
D280T132

91-21-51
Section D05700
Page 34
Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05738P		AE0220/ /		PLUG-E3-1 (continued)				ALL
	2		W0084	203R	22		21-51-22	ALL
	3		W0084	212B	24		21-61-31	ALL
	4		W0084	212R	24		21-61-31	ALL
	5	UNUSED						ALL
	6		W0084	213B	24		21-61-31	ALL
	7		W0084	213R	24		21-61-31	ALL
	8		W0084	239R	24		21-61-41	ALL
	9		W0084	239B	24		21-61-41	ALL
	10		W0084	240R	24		21-61-41	ALL
	11		W0084	240B	24		21-61-41	ALL
	12	UNUSED						ALL
D05740J		AP0403/ /		RCPT-				ALL
	1	UNUSED						050-099
	1		W1110	042	16		35-21-12	150-199, 275-299
	2		W1110	043	16		35-21-12	ALL
	3	UNUSED						ALL
	4	UNUSED						150-199, 275-299
	C1	UNUSED						050-099
D05740P		AP0403/ /		PLUG-P19				ALL
	1	UNUSED						050-099
	1		W0718	001	14		35-21-12	150-199, 275-299
	2		W0718	002	16		35-21-12	050-099
	2		W0718	002	14		35-21-12	150-199, 275-299
	3	UNUSED						ALL
	4	UNUSED						150-199, 275-299
	C1	UNUSED						050-099
D05744J		AE0203/ /		RCPT-P33				ALL
	1		W0142	798	22		28-42-11	ALL
	2		W0142	787	22		28-42-12	ALL
	3		W0142	786	24		28-42-31	ALL
	4		W0142	203R	22		21-51-22	ALL
	5		W0142	203B	22		21-51-22	ALL
	6		W0142	204B	22		21-51-22	ALL
	7		W0142	204R	22		21-51-22	ALL
	8		W0142	03Z	24		21-44-11	ALL
	9		W0142	04A	24		21-44-11	ALL
	10		W0142	641	22		30-31-21	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05700

Page 35

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05744J		AE0203/ /		RCPT-P33 (continued)				ALL
	11		W0142	04D	24		21-44-11	ALL
	12		W0142	03M	24		21-44-21	ALL
	13		W0142	04C	24		21-44-11	ALL
	14		W0142	03P	22		21-44-21	ALL
	15		W0142	10F	22		28-22-31	ALL
	16		W0142	647	22		30-31-23	ALL
	17		W0142	05P	24		21-53-21	ALL
	18		W0142	05N	24		21-51-21	ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21		W0142	201R	24		21-51-21	ALL
	22		W0142	201B	24		21-51-21	ALL
	23		W0142	797	18		25-29-11	ALL
	24		W0142	05T	24		21-53-21	ALL
	25		W0142	05U	24		21-53-21	ALL
	26		W0142	05V	24		21-53-21	ALL
	27		W0142	06I	24		21-53-21	ALL
	28		W0142	06J	24		21-53-21	ALL
	29		W0142	06K	24		21-53-21	ALL
	30		W0142	06L	24		21-53-21	ALL
	31		W0142	05L	22		21-51-21	ALL
	32		W0142	03N	22		21-44-21	ALL
	33		W0142	08F	22		21-44-21	ALL
	34		W0142	04E	24		21-44-21	ALL
	35	UNUSED						ALL
	36		W0142	10H	20		28-22-31	ALL
	37		W0142	10I	20		28-22-31	ALL
	38		W0142	10D	22		28-22-31	ALL
	39		W0142	10G	22		28-22-31	ALL
	DED		W0142	10DZ			28-22-31	ALL
	DED		W0142	10FZ			28-22-31	ALL
	DED		W0142	10GZ			28-22-31	ALL
	DED		W0142	10HZ			28-22-31	ALL
	DED		W0142	10IZ			28-22-31	ALL
D05744P		AE0203/ /		PLUG-P33				ALL
	1		W0624	061	22		28-42-11	ALL
	2		W0624	062	22		28-42-12	ALL
	3		W0624	065	24		28-42-31	ALL
	4		W0624	212R	22		21-51-22	ALL

HOOKUP LIST
D280T132

91-21-51
Section D05700
Page 36
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05744P		AE0203/ /		PLUG-P33 (continued)				ALL
	5		W0624	212B	22		21-51-22	ALL
	6		W0624	213B	22		21-51-22	ALL
	7		W0624	213R	22		21-51-22	ALL
	8		W0624	082	24		21-44-11	ALL
	9		W0624	083	24		21-44-11	ALL
	10		W0624	010	22		30-31-21	ALL
	11		W0624	045	24		21-44-11	ALL
	12		W0624	071	24		21-44-21	ALL
	13		W0624	078	24		21-44-11	ALL
	14		W0624	069	22		21-44-21	ALL
	15		W0624	108	22		28-22-31	ALL
	16		W0624	016	22		30-31-23	ALL
	17		W0624	040	24		21-53-21	ALL
	18		W0624	075	24		21-51-21	ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21		W0624	214R	24		21-51-21	ALL
	22		W0624	214B	24		21-51-21	ALL
	23		W0624	055	18		25-29-11	ALL
	24		W0624	077	24		21-53-21	ALL
	25		W0624	035	24		21-53-21	ALL
	26		W0624	034	24		21-53-21	ALL
	27		W0624	039	24		21-53-21	ALL
	28		W0624	038	24		21-53-21	ALL
	29		W0624	037	24		21-53-21	ALL
	30		W0624	036	24		21-53-21	ALL
	31		W0624	076	22		21-51-21	ALL
	32		W0624	072	22		21-44-21	ALL
	33		W0624	084	22		21-44-21	ALL
	34		W0624	029	24		21-44-21	ALL
	35	UNUSED						ALL
	36		W0624	106	20		28-22-31	ALL
	37		W0624	107	20		28-22-31	ALL
	38		W0624	109	22		28-22-31	ALL
	39		W0624	110	22		28-22-31	ALL
	CAP	Y	W0624	070	24		SPARE	ALL
	DED		W0624	106Z			28-22-31	ALL
	DED		W0624	107Z			28-22-31	ALL
	DED		W0624	108Z			28-22-31	ALL
	DED		W0624	109Z			28-22-31	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05700

Page 37

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05744P		AE0203/ /		PLUG-P33 (continued)				ALL
	DED		W0624	110Z			28-22-31	ALL
D05746J		AP0403/ /		RCPT-				ALL
	1	UNUSED						050-099
	1		W1110	051	16		35-21-13	150-199, 275-299
	2		W1110	052	16		35-21-13	ALL
	3	UNUSED						ALL
	4	UNUSED						150-199, 275-299
D05746P		AP0403/ /		PLUG-P19				ALL
	1	UNUSED						050-099
	1		W0722	001	14		35-21-13	150-199, 275-299
	2		W0722	002	16		35-21-13	050-099
	2		W0722	002	14		35-21-13	150-199, 275-299
	3	UNUSED						ALL
	4	UNUSED						150-199, 275-299
D05750J		AP0403/ /		RCPT-				ALL
	1	FM	W1110	059	16		35-21-14	050-099
	1		W1110	059	16		35-21-14	150-199, 275-299
	2	FM	W1110	060	16		35-21-14	050-099
	2		W1110	060	16		35-21-14	150-199, 275-299
	3		W1110	042	16		35-21-12	050-099
	3	UNUSED						150-199, 275-299
	4		W1110	051	16		35-21-13	050-099
	4	UNUSED						150-199, 275-299
	5	UNUSED						050-099
	6	UNUSED						050-099
	7	UNUSED						050-099
D05750P		AP0403/ /		PLUG-P19				ALL
	1		W0720	001	16		35-21-14	050-099
	1		W0720	001	14		35-21-14	150-199, 275-299
	2		W0720	002	16		35-21-14	050-099
	2		W0720	002	14		35-21-14	150-199, 275-299
	3		W0720	067	16		35-21-12	050-099
	3	UNUSED						150-199, 275-299
	4		W0720	068	16		35-21-13	050-099
	4	UNUSED						150-199, 275-299
	5	UNUSED						050-099

HOOKUP LIST
D280T132

91-21-51
Section D05700
Page 38
Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05750P		AP0403/ /		PLUG-P19 (continued)				ALL
	6	UNUSED						050-099
	7	UNUSED						050-099
D05752J		AP1005/ /		RCPT-P25				050-099
	1		W1112	005	16		35-21-14	050-099
	2		W1112	003	16		35-21-12	050-099
	3		W1112	004	16		35-21-13	050-099
D05752P		AP1005/ /		PLUG-P25				050-099
	1		W0720	001	16		35-21-14	050-099
	2		W0720	067	16		35-21-12	050-099
	3		W0720	068	16		35-21-13	050-099
D05753J		AE0314/ /		RCPT E2-2				ALL
	1		W0133	538Z			31-31-20	ALL
	2		W0133	538R	24		31-31-20	ALL
	3		W0133	538B	24		31-31-20	ALL
	4		W0133	627	24		31-31-21	ALL
	5		W0133	628	24		31-31-21	ALL
	6		W0133	629	24		31-31-22	ALL
	7		W0133	574R	24		31-35-12	ALL
	8		W0133	574B	24		31-35-12	ALL
	9		W0133	574Z			31-35-12	ALL
	10		W0133	526R	24		31-35-11	ALL
	11		W0133	526B	24		31-35-11	ALL
	12		W0133	526Z			31-35-11	ALL
	13		W0133	284R	24		31-31-14	ALL
	14		W0133	284B	24		31-31-14	ALL
	15		W0133	284Z			31-31-14	ALL
	16		W0133	509R	24		31-31-20	ALL
	17		W0133	509B	24		31-31-20	ALL
	18		W0133	509Z			31-31-20	ALL
	19		W0133	274R	24		31-31-20	ALL
	20		W0133	274B	24		31-31-20	ALL
	21		W0133	274Z			31-31-20	ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						050-099, 155-199, 275-299
	24		W0133	270Z			31-35-11	150-154
	25		W0133	573R	24		31-35-12	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05700

Page 39

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05753J		AE0314/ /		RCPT E2-2 (continued)				ALL
	26		W0133	573B	24		31-35-12	ALL
	27		W0133	573Z			31-35-12	ALL
	28		W0133	566R	24		31-35-12	ALL
	29		W0133	566B	24		31-35-12	ALL
	30		W0133	566Z			31-35-12	ALL
	31		W0133	567R	24		31-35-12	ALL
	32		W0133	567B	24		31-35-12	ALL
	33		W0133	567Z			31-35-12	ALL
	34		W0133	568R	24		31-35-12	ALL
	35		W0133	568B	24		31-35-12	ALL
	36		W0133	568Z			31-35-12	ALL
	37	UNUSED						ALL
	38		W0133	570R	24		31-35-12	ALL
	39		W0133	570B	24		31-35-12	ALL
	40		W0133	570Z			31-35-12	ALL
	41		W0133	571R	24		31-35-12	ALL
	42		W0133	571B	24		31-35-12	ALL
	43		W0133	571Z			31-35-12	ALL
	44		W0133	634	22		31-35-11	ALL
	45		W0133	084	24		31-35-11	ALL
	46		W0133	572R	24		31-35-12	ALL
	47		W0133	572B	24		31-35-12	ALL
	48		W0133	572Z			31-35-12	ALL
	49	UNUSED						ALL
	50		W0133	590Z			31-36-11	ALL
	51		W0133	590R	24		31-36-11	ALL
	52		W0133	590B	24		31-36-11	ALL
	53		W0133	260R	24		31-35-11	ALL
	54		W0133	260B	24		31-35-11	ALL
	55		W0133	260Z			31-35-11	ALL
D05753P		AE0314/ /		PLUG-E2-2				ALL
	1		W0135	564Z			31-31-20	ALL
	2		W0135	564R	24		31-31-20	ALL
	3		W0135	564B	24		31-31-20	ALL
	4		W0135	739	24		31-31-21	ALL
	5		W0135	742	24		31-31-21	ALL
	6		W0135	747	24		31-31-22	ALL
	7		W0135	804R	24		31-35-12	ALL
	8		W0135	804B	24		31-35-12	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05700

Page 40

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05753P		AE0314/ /		PLUG-E2-2 (continued)				ALL
	9		W0135	804Z			31-35-12	ALL
	10		W0135	560R	24		31-35-11	ALL
	11		W0135	560B	24		31-35-11	ALL
	12		W0135	560Z			31-35-11	ALL
	13		W0135	535R	24		31-31-14	ALL
	14		W0135	535B	24		31-31-14	ALL
	15		W0135	535Z			31-31-14	ALL
	16		W0135	523R	24		31-31-20	ALL
	17		W0135	523B	24		31-31-20	ALL
	18		W0135	523Z			31-31-20	ALL
	19		W0135	562R	24		31-31-20	ALL
	20		W0135	562B	24		31-31-20	ALL
	21		W0135	562Z			31-31-20	ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25		W0135	585R	24		31-35-12	ALL
	26		W0135	585B	24		31-35-12	ALL
	27		W0135	585Z			31-35-12	ALL
	28		W0135	579R	24		31-35-12	ALL
	29		W0135	579B	24		31-35-12	ALL
	30		W0135	579Z			31-35-12	ALL
	31		W0135	580R	24		31-35-12	ALL
	32		W0135	580B	24		31-35-12	ALL
	33		W0135	580Z			31-35-12	ALL
	34		W0135	581R	24		31-35-12	ALL
	35		W0135	581B	24		31-35-12	ALL
	36		W0135	581Z			31-35-12	ALL
	37	UNUSED						ALL
	38		W0135	582R	24		31-35-12	ALL
	39		W0135	582B	24		31-35-12	ALL
	40		W0135	582Z			31-35-12	ALL
	41		W0135	583R	24		31-35-12	ALL
	42		W0135	583B	24		31-35-12	ALL
	43		W0135	583Z			31-35-12	ALL
	44		W0135	762	22		31-35-11	050-099, 150-154, 275-299
	44		W0135	753	22		31-35-11	155-199
	45		W0135	782	24		31-35-11	ALL
	46		W0135	584R	24		31-35-12	ALL
	47		W0135	584B	24		31-35-12	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05700

Page 41

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05753P		AE0314/ /		PLUG-E2-2 (continued)				ALL
	48		W0135	584Z			31-35-12	ALL
	49	UNUSED						ALL
	50		W0135	578Z			31-36-11	ALL
	51		W0135	578R	24		31-36-11	ALL
	52		W0135	578B	24		31-36-11	ALL
	53		W0135	561R	24		31-35-11	ALL
	54		W0135	561B	24		31-35-11	ALL
	55		W0135	561Z			31-35-11	ALL
D05760J		AE0218/ /		RCPT-P37				ALL
	1		W1118	066	12		38-32-11	ALL
	2		W1118	067	12		38-32-11	ALL
	3		W1118	068	12		38-32-11	ALL
	4	UNUSED						ALL
	5		W1118	556	12		28-31-21	050-099, 162-164, 276
	5	UNUSED						150-154, 275
	5		W1118	553	12		28-31-21	155-157, 165-199, 277-299
	6		W1118	150	20		38-32-11	050-099, 155-199, 277-299
	6	UNUSED						150-154, 275
	6		W1118	150	20		SPARE	276
	7		W1118	555	12		28-31-21	050-099, 162-164, 276
	7	UNUSED						150-154, 275
	7		W1118	552	12		28-31-21	155-157, 165-199, 277-299
	8		W1118	554	12		28-31-21	050-099, 162-164, 276
	8	UNUSED						150-154, 275
	8		W1118	551	12		28-31-21	155-157, 165-199, 277-299
D05760P		AE0218/ /		PLUG-P37				ALL
	1		W0580	093	12		38-32-11	ALL
	2		W0580	094	12		38-32-11	ALL
	3		W0580	095	12		38-32-11	ALL
	4	UNUSED						ALL
	5	EN	W0580	039	10		28-31-21	050-099, 155-199, 276-299
	5	UNUSED						150-154, 275
	6		W0580	031	20		38-32-11	050-099, 155-199, 277-299
	6		W0580	131	18		SPARE	150-154, 275
	6		W0580	031	20		SPARE	276
	7	EN	W0580	051	10		28-31-21	050-099, 155-199, 276-299
	7	UNUSED						150-154, 275
	8	EN	W0580	052	10		28-31-21	050-099, 155-199, 276-299

HOOKUP LIST

D280T132

91-21-51

Section D05700

Page 42

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05760P		AE0218/ /		PLUG-P37 (continued)				ALL
	8	UNUSED						150-154, 275
D05763J		AE0314/ /		RCPT-E2-2				ALL
	1		W0143	245R	24		34-61-25	ALL
	2		W0143	245B	24		34-61-25	ALL
	3		W0143	245Z			34-61-25	ALL
	4		W0143	501R	24		31-35-12	ALL
	5		W0143	501B	24		31-35-12	ALL
	6		W0143	501Z			31-35-12	ALL
	7		W0143	502R	24		31-35-12	ALL
	8		W0143	502B	24		31-35-12	ALL
	9		W0143	502Z			31-35-12	ALL
	10		W0143	503R	24		31-35-12	ALL
	11		W0143	503B	24		31-35-12	ALL
	12		W0143	503Z			31-35-12	ALL
	13		W0143	506R	24		31-35-12	ALL
	14		W0143	506B	24		31-35-12	ALL
	15		W0143	506Z			31-35-12	ALL
	16		W0143	221R	24		31-35-11	ALL
	17		W0143	221B	24		31-35-11	ALL
	18		W0143	221Z			31-35-11	ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22		W0143	507R	24		31-35-12	ALL
	23		W0143	507B	24		31-35-12	ALL
	24		W0143	507Z			31-35-12	ALL
	25		W0143	551R	24		31-35-12	ALL
	26		W0143	551B	24		31-35-12	ALL
	27		W0143	551Z			31-35-12	ALL
	28		W0143	552R	24		31-35-12	ALL
	29		W0143	552B	24		31-35-12	ALL
	30		W0143	552Z			31-35-12	ALL
	31		W0143	553R	24		31-35-12	ALL
	32		W0143	553B	24		31-35-12	ALL
	33		W0143	553Z			31-35-12	ALL
	34		W0143	554R	24		31-35-12	ALL
	35		W0143	554B	24		31-35-12	ALL
	36		W0143	554Z			31-35-12	ALL
	37		W0143	555R	24		31-35-12	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05700

Page 43

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05763J		AE0314/ /		RCPT-E2-2 (continued)				ALL
	38		W0143	555B	24		31-35-12	ALL
	39		W0143	555Z			31-35-12	ALL
	40		W0143	233R	24		31-36-11	ALL
	41		W0143	233B	24		31-36-11	ALL
	42		W0143	233Z			31-36-11	ALL
	43		W0143	240R	24		34-61-15	ALL
	44		W0143	240B	24		34-61-15	ALL
	45		W0143	240Z			34-61-15	ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
D05763P		AE0314/ /		PLUG-E2-2				ALL
	1		W0145	297R	24		34-61-25	ALL
	2		W0145	297B	24		34-61-25	ALL
	3		W0145	297Z			34-61-25	ALL
	4		W0145	501R	24		31-35-12	ALL
	5		W0145	501B	24		31-35-12	ALL
	6		W0145	501Z			31-35-12	ALL
	7		W0145	502R	24		31-35-12	ALL
	8		W0145	502B	24		31-35-12	ALL
	9		W0145	502Z			31-35-12	ALL
	10		W0145	503R	24		31-35-12	ALL
	11		W0145	503B	24		31-35-12	ALL
	12		W0145	503Z			31-35-12	ALL
	13		W0145	506R	24		31-35-12	ALL
	14		W0145	506B	24		31-35-12	ALL
	15		W0145	506Z			31-35-12	ALL
	16		W0145	250R	24		31-35-11	ALL
	17		W0145	250B	24		31-35-11	ALL
	18		W0145	250Z			31-35-11	ALL
	19	UNUSED						ALL
	20	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D05700

Page 44

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05763P		AE0314/ /		PLUG-E2-2 (continued)				ALL
	21	UNUSED						ALL
	22		W0145	507R	24		31-35-12	ALL
	23		W0145	507B	24		31-35-12	ALL
	24		W0145	507Z			31-35-12	ALL
	25		W0145	551R	24		31-35-12	ALL
	26		W0145	551B	24		31-35-12	ALL
	27		W0145	551Z			31-35-12	ALL
	28		W0145	552R	24		31-35-12	ALL
	29		W0145	552B	24		31-35-12	ALL
	30		W0145	552Z			31-35-12	ALL
	31		W0145	553R	24		31-35-12	ALL
	32		W0145	553B	24		31-35-12	ALL
	33		W0145	553Z			31-35-12	ALL
	34		W0145	554R	24		31-35-12	ALL
	35		W0145	554B	24		31-35-12	ALL
	36		W0145	554Z			31-35-12	ALL
	37		W0145	555R	24		31-35-12	ALL
	38		W0145	555B	24		31-35-12	ALL
	39		W0145	555Z			31-35-12	ALL
	40		W0145	270R	24		31-36-11	ALL
	41		W0145	270B	24		31-36-11	ALL
	42		W0145	270Z			31-36-11	ALL
	43		W0145	595R	24		34-61-15	ALL
	44		W0145	595B	24		34-61-15	ALL
	45		W0145	595Z			34-61-15	ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
D05764J		AF0204/ /		RCPT-P61				ALL
	1	DK	W0066	61E	18		36-11-52	050-099, 155-199, 276-299
	1		W0066	61E	22		36-11-52	150-154, 275
	2		W0066	61G	22		36-11-52	ALL

HOOKUP LIST
D280T132

91-21-51
Section D05700
Page 45
Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05764J		AF0204/ /		RCPT-P61 (continued)				ALL
	3		W0066	116	22		36-11-52	ALL
	4		W0066	082	24		36-11-52	ALL
	5		W0066	125	22		36-11-62	ALL
	6		W0066	096	24		36-11-62	ALL
	7	UNUSED						ALL
	8		W0066	61F	24		36-11-52	ALL
	9		W0066	51J	24		21-58-14	ALL
	10		W0066	145	24		21-58-14	ALL
	11		W0066	605	22		28-42-11	ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
D05764P		AF0204/ /		PLUG-P61				ALL
	1	DL	W0506	586	18		36-11-52	ALL
	2		W0506	540	22		36-11-52	ALL
	3		W0506	541	22		36-11-52	ALL
	4		W0506	542	24		36-11-52	ALL
	5		W0506	556	22		36-11-62	ALL
	6		W0506	557	24		36-11-62	ALL
	7	UNUSED						ALL
	8		W0506	589	24		36-11-52	ALL
	9		W0506	656	24		21-58-14	ALL
	10		W0506	657	24		21-58-14	ALL
	11		W0506	614	22		28-42-11	ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
D05766J		AE0202/ /		RCPT-				ALL
	1		W1080	139	24		36-11-52	ALL
	2		W1080	746	22		36-11-52	ALL
	3		W1080	745	22		36-11-52	ALL
	4		W1080	140	24		36-11-52	ALL
	5	UNUSED						ALL
	6		W1080	141	22		36-11-62	ALL
	7		W1080	130	24		36-11-62	ALL
	8		W1080	135	22		36-11-62	ALL

HOOKUP LIST
D280T132

91-21-51
Section D05700
Page 46
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05766J		AE0202/ /		RCPT- (continued)				ALL
	9		W1080	136	24		36-11-62	ALL
	10		W1080	131	22		36-11-62	ALL
	11		W1080	137	24		36-11-62	ALL
	12	UNUSED						ALL
	13		W1080	011	22		36-11-52	ALL
	14		W1080	116	22		36-11-52	ALL
	15		W1080	715	22		24-51-52	ALL
	16		W1080	716	22		24-51-52	ALL
	17		W1080	718	22		24-51-52	050-099, 150-199 275-299
	17	UNUSED						050-099, 150-199 275-299
	18		W1080	719	22		24-51-52	050-099, 150-199 275-299
	18	UNUSED						050-099, 150-199 275-299
	19		W1080	104R	22		26-18-22	ALL
	20		W1080	106R	22		26-18-22	ALL
	21		W1080	144	24		36-11-62	ALL
	22		W1080	145	24		36-11-62	ALL
	23		W1080	154	22		36-11-62	ALL
	24		W1080	192	22		36-11-62	ALL
	25		W1080	685	24		73-21-11	ALL
	26		W1080	685Z			73-21-11	ALL
	27	UNUSED						050-099, 150-156, 162-166, 275-276 157, 167-199, 277-299
	27		W1080	731	20		36-11-52	157, 167-199, 277-299
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31		W1080	217	24		36-11-62	ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D05700

Page 47

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05766J		AE0202/ /		RCPT- (continued)				ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
D05766P		AE0202/ /		PLUG-P50				ALL
	1		W0506	543	24		36-11-52	ALL
	2	DK	W0506	552	18		36-11-52	ALL
	3	DK	W0506	551	18		36-11-52	ALL
	4		W0506	553	24		36-11-52	ALL
	5	UNUSED						ALL
	6		W0506	556	22		36-11-62	ALL
	7		W0506	740	24		36-11-62	050-099, 150-156, 162-166, 275-276
	7		W0506	557	24		36-11-62	157, 167-199, 277-299
	8	DK	W0506	558	18		36-11-62	050-099
	8		W0506	558	22		36-11-62	150-199, 275-299
	9		W0506	559	24		36-11-62	ALL
	10	DK	W0506	560	18		36-11-62	050-099, 150-156, 162-166, 275-276
	10		W0506	560	20		36-11-62	157, 167-199, 277-299
	11		W0506	561	24		36-11-62	ALL
	12	UNUSED						ALL
	13		W0506	590	22		36-11-52	ALL
	14		W0506	591	22		36-11-52	ALL
	15		W0506	666	24		24-51-52	ALL
	16		W0506	667	24		24-51-52	ALL
	17		W0506	668	22		24-51-52	050-099, 150-199
	17	UNUSED						275-299
	18		W0506	669	22		24-51-52	050-099, 150-199
	18	UNUSED						275-299
	19		W0506	725R	22		26-18-22	ALL
	20		W0506	726R	22		26-18-22	ALL
	21		W0506	724	24		36-11-62	ALL
	22		W0506	723	24		36-11-62	ALL
	23		W0506	722	22		36-11-62	ALL

HOOKUP LIST
D280T132

91-21-51
Section D05700
Page 48
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05766P		AE0202/ /		PLUG-P50 (continued)				ALL
	24		W0506	721	22		36-11-62	ALL
	25		W0506	685	24		73-21-11	ALL
	26		W0506	685Z			73-21-11	ALL
	27	UNUSED						050-099, 150-156, 162-166, 275-276
	27	DK	W0506	586	18		36-11-52	157, 167-199, 277-299
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31		W0506	571	24		36-11-62	ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
D05768J		AE0218/ /		RCPT-P37				ALL
	1		W0192	077	24		21-61-51	ALL
	2		W0192	092	24		36-11-62	ALL
	3		W0192	72F	20		36-11-52	ALL
	4		W0192	206B	22		21-61-51	ALL
	5		W0192	206R	22		21-61-51	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05700

Page 49

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05768J		AE0218/ /		RCPT-P37 (continued)				ALL
	6		W0192	036	24		36-11-52	ALL
	7		W0192	71X	20		36-11-62	050-099, 155-156, 162-166, 276
	7		W0192	71X	20		36-11-52	150-154, 275
	7		W0192	0AG	22		36-11-62	157, 167-199, 277-299
	8		W0192	038	24		36-11-52	ALL
	9		W0192	781	24		36-23-21	ALL
	10		W0192	039	24		36-11-52	ALL
	11		W0192	040	22		36-11-52	ALL
	12		W0192	041	22		36-11-52	ALL
	13		W0192	042	24		36-11-52	ALL
	14	DL	W0192	808	18		36-11-52	050-099, 150-156, 162-166, 275-276
	14	UNUSED						157, 167-199, 277-299
	15		W0192	044	24		36-11-62	ALL
	16		W0192	045	24		36-11-62	ALL
	17		W0192	0AF	22		36-11-62	ALL
	18		W0192	049	20		36-11-62	ALL
	19		W0192	058	24		36-11-62	ALL
	20		W0192	059	24		36-11-62	ALL
	21		W0192	060	24		36-11-62	ALL
	22		W0192	509	24		24-22-21	ALL
	23		W0192	65U	24		36-11-62	ALL
	24		W0192	091	24		36-11-62	ALL
	25		W0192	71K	20		36-11-52	ALL
	26		W0192	779	24		36-23-21	ALL
	27		W0192	780	24		36-23-21	ALL
	28		W0192	783	24		36-23-21	ALL
	29		W0192	782	24		36-23-21	ALL
	30		W0192	307Z			36-23-21	ALL
	31		W0192	307B	24		36-23-21	ALL
	32		W0192	307R	24		36-23-21	ALL
	33		W0192	307Y	24		36-23-21	ALL
	34		W0192	093	22		36-22-11	ALL
	35		W0192	15P	22		21-61-41	ALL
	36		W0192	15S	24		21-61-41	ALL
	37		W0192	15T	24		21-61-41	ALL
	38		W0192	13V	22		36-11-52	ALL
	39		W0192	811	22		36-11-52	ALL
	40		W0192	812	24		36-11-52	ALL
	41		W0192	15U	24		21-61-41	ALL
	42		W0192	809	22		36-11-52	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05700

Page 50

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05768J		AE0218/ /		RCPT-P37 (continued)				ALL
	43		W0192	15V	24		21-61-41	ALL
	44		W0192	15W	24		21-61-41	ALL
	45		W0192	856	24		32-42-11	ALL
	46		W0192	292R	24		32-42-11	ALL
	47		W0192	292B	24		32-42-11	ALL
	48		W0192	292Z			32-42-11	ALL
	49		W0192	054	24		32-09-12	ALL
	50		W0192	0AJ	22		36-11-62	ALL
	51		W0192	15X	24		21-61-41	ALL
	52		W0192	270B	24		21-61-41	ALL
	53		W0192	270R	24		21-61-41	ALL
	54		W0192	15Y	24		21-61-41	ALL
	55		W0192	16A	24		21-61-41	ALL
	56		W0192	0AG	22		36-11-62	050-099, 150-156, 162-166, 275-276 157, 167-199, 277-299
	56	UNUSED						ALL
	57	UNUSED						ALL
	58	UNUSED						ALL
	59	UNUSED						ALL
	60	UNUSED						050-099, 150-155, 162-165, 275-276
	60		W0192	28A	24		21-26-11	156-157, 166-199, 277-299
	61	UNUSED						050-099, 150-155, 162-165, 275-276
	61		W0192	29A	24		21-26-11	156-157, 166-199, 277-299
	CAP	Y	W0192	037	18		SPARE	150-154, 275
D05768P		AE0218/ /		PLUG-P37				ALL
	1		W0506	530	24		21-61-51	ALL
	2		W0506	680	24		36-11-62	ALL
	3	DK	W0506	544	18		36-11-52	ALL
	4		W0506	208B	22		21-61-51	ALL
	5		W0506	208R	22		21-61-51	ALL
	6		W0506	546	24		36-11-52	ALL
	7	DK	W0506	752	18		36-11-62	050-099, 155-156, 162-166, 276
	7	DK	W0506	752	18		36-11-52	150-154, 275
	7		W0506	770	22		36-11-62	157, 167-199, 277-299
	8		W0506	548	24		36-11-52	ALL
	9		W0506	549	24		36-23-21	ALL
	10		W0506	550	24		36-11-52	ALL
	11	DK	W0506	551	18		36-11-52	ALL
	12	DK	W0506	552	18		36-11-52	ALL
	13		W0506	553	24		36-11-52	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05700

Page 51

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05768P		AE0218/ /		PLUG-P37 (continued)				ALL
	14	DK	W0506	586	18		36-11-52	050-099, 150-156, 162-166, 275-276
	14	UNUSED						157, 167-199, 277-299
	15		W0506	562	24		36-11-62	ALL
	16		W0506	563	24		36-11-62	ALL
	17		W0506	769	22		36-11-62	ALL
	18	DK	W0506	560	18		36-11-62	050-099, 150-156, 162-166, 275-276
	18		W0506	560	20		36-11-62	157, 167-199, 277-299
	19		W0506	566	24		36-11-62	ALL
	20		W0506	567	24		36-11-62	ALL
	21		W0506	568	24		36-11-62	ALL
	22		W0506	584	24		24-22-21	ALL
	23		W0506	570	24		36-11-62	ALL
	24		W0506	679	24		36-11-62	ALL
	25	DK	W0506	545	18		36-11-52	ALL
	26		W0506	573	24		36-23-21	ALL
	27		W0506	574	24		36-23-21	ALL
	28		W0506	575	24		36-23-21	ALL
	29		W0506	576	24		36-23-21	ALL
	30		W0506	304Z			36-23-21	ALL
	31		W0506	304B	24		36-23-21	ALL
	32		W0506	304R	24		36-23-21	ALL
	33		W0506	304Y	24		36-23-21	ALL
	34		W0506	578	22		36-22-11	ALL
	35		W0506	690	22		21-61-41	ALL
	36		W0506	691	24		21-61-41	ALL
	37		W0506	692	24		21-61-41	ALL
	38		W0506	689	22		36-11-52	ALL
	39		W0506	540	22		36-11-52	ALL
	40		W0506	587	24		36-11-52	ALL
	41		W0506	694	24		21-61-41	ALL
	42		W0506	539	22		36-11-52	ALL
	43		W0506	714	24		21-61-41	ALL
	44		W0506	695	24		21-61-41	ALL
	45		W0506	613	24		32-42-11	ALL
	46		W0506	211R	24		32-42-11	ALL
	47		W0506	211B	24		32-42-11	ALL
	48		W0506	211Z			32-42-11	ALL
	49		W0506	661	24		32-09-12	ALL
	50		W0506	768	22		36-11-62	ALL
	51		W0506	696	24		21-61-41	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05700

Page 52

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05768P		AE0218/ /		PLUG-P37 (continued)				ALL
	52		W0506	214B	24		21-61-41	ALL
	53		W0506	214R	24		21-61-41	ALL
	54		W0506	697	24		21-61-41	ALL
	55		W0506	698	24		21-61-41	ALL
	56		W0506	770	22		36-11-62	050-099, 150-156, 162-166, 275-276 157, 167-199, 277-299
	56	UNUSED						ALL
	57	UNUSED						ALL
	58	UNUSED						ALL
	59	UNUSED						ALL
	60	UNUSED						050-099, 150-155, 162-165, 275-276
	60		W0506	777	24		21-26-11	156-157, 166-199, 277-299
	61	UNUSED						050-099, 150-155, 162-165, 275-276
	61		W0506	778	24		21-26-11	156-157, 166-199, 277-299
	CAP	Y	W0506	564	18		SPARE	050-099
	CAP	Y	W0506	081	20		SPARE	ALL
	CAP	Y	W0506	547	18		SPARE	150-154, 275
	CAP	Y	W0506	752	18		SPARE	157, 167-199, 277-299
D05780J		AE0209/ /		RCPT-P36				ALL
	1		W0176	624	24		36-11-61	ALL
	2		W0176	625	24		36-11-61	ALL
	3		W0176	71U	22		36-11-61	ALL
	4	UNUSED						050-099
	4		W0176	040	24		32-71-11	150-199, 275-299
	5		W0176	71S	22		36-11-61	050-099, 275-299
	5		W0176	71S	20		36-11-61	150-199
	6		W0176	628	24		36-11-61	ALL
	7		W0176	629	24		36-11-61	ALL
	8		W0176	630	24		36-11-61	ALL
	9	UNUSED						ALL
	10		W0176	93D	24		36-11-61	ALL
	11	UNUSED						ALL
	12		W0176	547	24		36-23-11	ALL
	13		W0176	544	24		36-23-11	ALL
	14		W0176	545	24		36-23-11	ALL
	15		W0176	546	24		36-23-11	ALL
	16		W0176	548	24		36-23-11	ALL
	17		W0176	307Z			36-23-11	ALL
	18		W0176	307B	24		36-23-11	ALL
	19		W0176	307R	24		36-23-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05700

Page 53

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05780J		AE0209/ /		RCPT-P36 (continued)				ALL
	20		W0176	307Y	24		36-23-11	ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23		W0176	803	24		36-11-61	ALL
	24	UNUSED						ALL
	25		W0176	65F	24		36-21-11	050-099, 156-162, 166-199, 277-299
	25	UNUSED						150-155, 163-165, 275-276
	26		W0176	82FR	24		36-23-11	050-099, 156-162, 166-199, 277-299
	26	UNUSED						150-155, 163-165, 275-276
	27		W0176	82FB	24		36-23-11	050-099, 156-162, 166-199, 277-299
	27	UNUSED						150-155, 163-165, 275-276
	28	UNUSED						ALL
	29		W0176	563	22		29-11-12	ALL
	30		W0176	24SB	24		21-51-11	050-099
	30		W0176	234B	24		21-51-11	150-199, 275-299
	31		W0176	24SR	24		21-51-11	050-099
	31		W0176	234R	24		21-51-11	150-199, 275-299
	32	UNUSED						ALL
	33		W0176	701	24		36-11-61	ALL
	34		W0176	702	24		36-11-61	ALL
	35		W0176	75N	20		28-31-11	050-099, 155-199, 276-299
	35	UNUSED						150-154, 275
	36		W0176	75T	20		28-31-11	050-099, 155-199, 276-299
	36	UNUSED						150-154, 275
	37		W0176	75K	22		28-31-11	050-099, 155-199, 276-299
	37	UNUSED						150-154, 275
	38		W0176	75F	20		28-31-12	050-099, 155-199, 276-299
	38	UNUSED						150-154, 275
	39		W0176	75G	20		28-31-12	050-099, 155-199, 276-299
	39	UNUSED						150-154, 275
	40		W0176	75B	22		28-31-12	050-099, 155-199, 276-299
	40	UNUSED						150-154, 275
	41		W0176	53A	22		28-42-13	050-099, 155-199, 276-299
	41	UNUSED						150-154, 275
	DED		W0176	563Z			29-11-12	ALL
	DED		W0176	53AZ			28-42-13	050-099, 155-199, 276-299
D05780P		AE0209/ /		PLUG-P36				ALL
	1		W0602	093	24		36-11-61	ALL
	2		W0602	094	24		36-11-61	ALL

HOOKUP LIST
D280T132

91-21-51
Section D05700
Page 54
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05780P		AE0209/ /		PLUG-P36 (continued)				ALL
	3	DK	W0602	095	18		36-11-61	ALL
	4		W0602	049	20		SPARE	050-099
	4		W0602	049	22		32-71-11	150-199, 275-299
	5	DK	W0602	096	18		36-11-61	ALL
	6		W0602	097	24		36-11-61	ALL
	7		W0602	098	24		36-11-61	ALL
	8		W0602	099	24		36-11-61	ALL
	9		W0602	102	20		SPARE	ALL
	10		W0602	101	24		36-11-61	ALL
	11	UNUSED						ALL
	12		W0602	087	24		36-23-11	ALL
	13		W0602	103	24		36-23-11	ALL
	14		W0602	104	24		36-23-11	ALL
	15		W0602	105	24		36-23-11	ALL
	16		W0602	106	24		36-23-11	ALL
	17		W0602	301Z			36-23-11	ALL
	18		W0602	301B	24		36-23-11	ALL
	19		W0602	301R	24		36-23-11	ALL
	20		W0602	301Y	24		36-23-11	ALL
	21		W0602	111	20		SPARE	ALL
	22		W0602	112	20		SPARE	050-099, 150-157, 163-199, 275-299
	22		W0602	156	24		36-11-61	162
	23		W0602	156	24		36-11-61	050-099, 150-157, 163-199, 275-299
	23	UNUSED						162
	24	UNUSED						ALL
	25		W0602	191	24		36-11-61	ALL
	26		W0602	192R	24		36-11-61	ALL
	27		W0602	192B	24		36-11-61	050-099, 150-157, 163-199, 275-299
	27	UNUSED						162
	28	UNUSED						ALL
	29		W0602	136	22		29-11-12	ALL
	30		W0602	237B	24		21-51-11	ALL
	31		W0602	237R	24		21-51-11	ALL
	32		W0602	040	22		SPARE	050-099, 150-157, 163-199, 275-299
	32		W0602	192B	24		36-11-61	162
	33		W0602	107	24		36-11-61	ALL
	34		W0602	108	24		36-11-61	ALL
	35		W0602	502	20		28-31-11	050-099, 155-199, 276-299
	35		W0602	201B	22		SPARE	150-154, 275
	36		W0602	501	20		28-31-11	050-099, 155-199, 276-299

HOOKUP LIST

D280T132

91-21-51

Section D05700

Page 55

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05780P		AE0209/ /		PLUG-P36 (continued)				ALL
	36		W0602	201R	22		SPARE	150-154, 275
	37		W0602	500	20		28-31-11	050-099, 155-199, 276-299
	37	UNUSED						150-154, 275
	38		W0602	503	20		28-31-12	050-099, 155-199, 276-299
	38		W0602	041	20		SPARE	150-154, 275
	39		W0602	504	20		28-31-12	050-099, 155-199, 276-299
	39		W0602	042	20		SPARE	150-154, 275
	40		W0602	505	20		28-31-12	050-099, 155-199, 276-299
	40		W0602	043	20		SPARE	150-154, 275
	41		W0602	506	20		28-42-13	050-099, 155-199, 276-299
	41		W0602	044	20		SPARE	150-154, 275
	CAP	Y	W0602	040	22		SPARE	162
	CAP	Y	W0602	112	20		SPARE	162
	DED		W0602	506Z			28-42-13	050-099, 155-199, 276-299
D05782J		AE0220/ /		RCPT-E3-1				ALL
	1	UNUSED						050-099, 150-155, 163-165, 275-276
	1		W0572	693	22		36-11-61	156-162, 166-199, 277-299
	2		W0572	115	24		36-11-61	ALL
	3		W0572	116	24		36-11-61	ALL
	4	UNUSED						050-099, 150-155, 163-165, 275-276
	4		W0572	694	22		36-11-61	156-162, 166-199, 277-299
	5	DL	W0572	118	18		36-11-61	050-099, 150-155, 162-165, 275-276
	5		W0572	692	22		36-11-61	156-157, 166-199, 277-299
	6		W0572	119	24		36-11-61	ALL
	7		W0572	120	24		36-11-61	ALL
	8		W0572	121	24		36-11-61	ALL
	9		W0572	556	22		36-11-61	ALL
	10		W0572	584	24		36-11-61	ALL
	11		W0572	123	24		36-11-61	ALL
	12		W0572	126	24		36-11-61	ALL
	13	DL	W0572	127	18		36-11-61	050-099, 150-156, 162-166, 275-276
	13	UNUSED						157, 167-199, 277-299
	14	UNUSED						050-099, 150-155, 157, 163-165, 167-199, 275-299
	14	DL	W0572	118	18		36-11-61	156, 166
	14		W0572	692	22		36-11-61	162
	15	DL	W0572	170	18		SPARE	050-099, 155-156, 162-166, 275-276
	15	UNUSED						150-154, 157, 167-199, 277-299
	16		W0572	557	22		36-11-61	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05700

Page 56

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05782J		AE0220/ /		RCPT-E3-1 (continued)				ALL
	17		W0572	804	22		SPARE	ALL
	18		W0572	216B	24		21-51-12	ALL
	19		W0572	216R	24		21-51-12	ALL
	20		W0572	219R	22		21-51-12	ALL
	21		W0572	219B	22		21-51-12	ALL
	22		W0572	222B	22		21-51-12	ALL
	23		W0572	222R	22		21-51-12	ALL
	24		W0572	583	24		36-11-61	ALL
	CAP	Y	W0572	170	18		SPARE	150-154
D05782P		AE0220/ /		PLUG-E3-1				ALL
	1	UNUSED						050-099, 150-155, 163-165, 275-276
	1		W0082	168	22		36-23-11	156-162, 166-199, 277-299
	2		W0082	079	24		36-23-11	ALL
	3		W0082	080	24		36-23-11	ALL
	4	UNUSED						050-099, 150-155, 163-165, 275-276
	4		W0082	169	22		36-23-11	156-162, 166-199, 277-299
	5	DK	W0082	093	18		36-11-61	050-099, 150-155, 162-165, 275-276
	5		W0082	167	24		36-23-11	156, 166
	5		W0082	167	22		36-23-11	157, 167-199, 277-299
	6		W0082	091	24		36-11-61	ALL
	7		W0082	081	24		36-23-11	ALL
	8		W0082	082	24		36-23-11	ALL
	9		W0082	153	22		36-23-11	ALL
	10		W0082	131	24		36-23-11	ALL
	11		W0082	095	24		36-11-61	ALL
	12		W0082	090	24		36-11-61	ALL
	13	DK	W0082	092	18		36-11-61	050-099, 150-156, 162-166, 275-276
	13	UNUSED						157, 167-199, 277-299
	14	UNUSED						050-099, 150-155, 157, 163-165, 167-199, 275-299
	14	DK	W0082	093	18		36-11-61	156, 166
	14		W0082	167	22		36-23-11	162
	15	UNUSED						ALL
	16		W0082	154	22		36-23-11	ALL
	17	UNUSED						ALL
	18		W0082	228B	24		21-51-12	ALL
	19		W0082	228R	24		21-51-12	ALL
	20		W0082	226R	22		21-51-12	ALL
	21		W0082	226B	22		21-51-12	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05700

Page 57

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05782P		AE0220/ /		PLUG-E3-1 (continued)				ALL
	22		W0082	231B	22		21-51-12	ALL
	23		W0082	231R	22		21-51-12	ALL
	24		W0082	132	24		36-23-11	ALL
D05784J		AF0204/ /		RCPT-P61				ALL
	1		W0070	05M	22		33-16-12	ALL
	2		W0070	05N	22		33-16-12	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8		W0070	05J	24		33-13-11	ALL
	9		W0070	794R	22		26-17-11	ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14		W0070	09T	24		73-21-14	ALL
	15		W0070	11T	24		31-25-11	ALL
	16		W0070	768R	22		26-11-11	ALL
	17		W0070	661	22		33-51-11	ALL
	18		W0070	667	22		33-51-11	ALL
	19		W0070	671	22		33-51-11	ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	DED		W0070	05NZ			33-16-12	ALL
D05784P		AF0204/ /		PLUG-P61				ALL
	1		W0634	080	22		33-16-12	ALL

HOOKUP LIST
D280T132

91-21-51
Section D05700
Page 58
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05784P		AF0204/ /		PLUG-P61 (continued)				ALL
	2		W0634	090	22		33-16-12	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8		W0634	007	24		33-13-11	ALL
	9		W0634	540R	22		26-17-11	ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14		W0634	521	24		73-21-14	ALL
	15		W0634	019	24		31-25-11	ALL
	16		W0634	013R	22		26-11-11	ALL
	17		W0634	057	22		33-51-11	ALL
	18		W0634	058	22		33-51-11	ALL
	19		W0634	059	22		33-51-11	ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29		W0634	804	22		SPARE	ALL
	30		W0634	805	22		SPARE	ALL
	31	UNUSED						ALL
	DED		W0634	090Z			33-16-12	ALL
D05792J		AF0204/ /		RCPT-P61				ALL
	1		W0070	05P	22		33-16-12	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D05700

Page 59

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05792J		AF0204/ /		RCPT-P61 (continued)				ALL
	8		W0070	302B	24		33-11-13	ALL
	9		W0070	302R	24		33-11-13	ALL
	10		W0070	302Y	24		33-11-13	ALL
	11		W0070	05D	24		33-11-13	ALL
	12	UNUSED						ALL
	13		W0070	04S	22		32-41-11	ALL
	14	UNUSED						ALL
	15		W0070	11S	24		31-25-11	ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	DED		W0070	05PZ			33-16-12	ALL
D05792P		AF0204/ /		PLUG-P61				ALL
	1		W0634	091	22		33-16-12	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8		W0634	303B	24		33-11-13	ALL
	9		W0634	303R	24		33-11-13	ALL
	10		W0634	303Y	24		33-11-13	ALL
	11		W0634	035	24		33-11-13	ALL
	12	UNUSED						ALL
	13		W0634	021	22		32-41-11	ALL

HOOKUP LIST
D280T132

91-21-51
Section D05700
Page 60
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05792P		AF0204/ /		PLUG-P61 (continued)				ALL
	14	UNUSED						ALL
	15		W0634	020	24		31-25-11	ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28		W0634	801	22		SPARE	ALL
	29		W0634	802	22		SPARE	ALL
	30		W0634	803	22		SPARE	ALL
	31	UNUSED						ALL
	DED		W0634	091Z			33-16-12	ALL
D05798J		AE0207/ /		RCPT-P33				ALL
	1		W0144	05K	24		21-53-22	ALL
	2		W0144	708	24		30-31-11	ALL
	3	UNUSED						ALL
	4		W0144	600	22		30-34-11	ALL
	5	UNUSED						ALL
	6		W0144	01R	24		21-51-23	ALL
	7		W0144	01W	24		21-51-23	ALL
	8		W0144	019	22		30-31-11	ALL
	9		W0144	695	24		30-31-11	ALL
	10		W0144	726	22		30-31-21	ALL
	11		W0144	132	22		30-31-23	ALL
	12		W0144	694	22		30-31-11	ALL
	13		W0144	759	24		30-31-11	ALL
	14		W0144	01T	24		21-51-23	ALL
	15		W0144	01U	24		21-51-23	ALL
	16		W0144	01V	24		21-51-23	ALL
	17		W0144	01G	24		36-11-51	ALL
	18	UNUSED						050-099, 155, 163-165, 276
	18		W0144	01H	22		SPARE	150-154, 275

HOOKUP LIST

D280T132

91-21-51

Section D05700

Page 61

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05798J		AE0207/ /		RCPT-P33 (continued)				ALL
	18		W0144	740	24		36-11-51	156-162, 166-199, 277-299
	19		W0144	01J	22		36-11-51	ALL
	20		W0144	116	22		30-31-13	ALL
	21		W0144	01S	24		21-51-23	ALL
	22		W0144	01K	22		36-11-51	ALL
	23		W0144	020	24		36-11-41	ALL
	24		W0144	01Q	24		36-11-41	ALL
	25		W0144	747	24		30-34-11	ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28		W0144	03Q	22		29-11-22	ALL
	29		W0144	534	22		30-32-11	ALL
	30		W0144	03R	24		29-11-22	ALL
	31		W0144	134	22		30-32-21	ALL
	32		W0144	565	22		30-33-11	ALL
	33		W0144	03S	22		29-11-22	ALL
	34		W0144	04C	22		29-11-22	ALL
	35		W0144	05G	22		32-41-11	ALL
	36		W0144	03P	24		29-11-22	ALL
	37		W0144	05L	24		21-53-22	ALL
	38		W0144	205R	22		21-51-12	ALL
	39		W0144	205B	22		21-51-12	ALL
	40		W0144	206B	22		21-51-12	ALL
	41		W0144	206R	22		21-51-12	ALL
	42		W0144	764	22		29-11-22	ALL
	43	UNUSED						ALL
	44		W0144	740	24		36-11-51	050-099, 150-155, 163-165, 275-276
	44	UNUSED						156-162, 166-199, 277-299
	45		W0144	767	24		29-11-12	ALL
	46		W0144	768	24		29-11-22	ALL
	47		W0144	790	24		21-44-21	ALL
	48		W0144	796	22		36-11-51	ALL
	49	UNUSED						ALL
	50		W0144	07V	22		30-32-11	ALL
	51		W0144	05A	24		29-11-22	ALL
	52		W0144	05B	22		29-11-22	ALL
	53		W0144	05C	24		29-11-22	ALL
	54		W0144	04X	24		29-11-22	ALL
	55		W0144	05D	22		29-11-22	ALL
	56		W0144	05M	24		21-53-22	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05700

Page 62

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05798J		AE0207 / /		RCPT-P33 (continued)				ALL
	57		W0144	05N	24		21-53-22	ALL
	58		W0144	05U	24		21-53-22	ALL
	59		W0144	06B	24		21-53-22	ALL
	60		W0144	06H	24		21-53-22	ALL
	61		W0144	06J	24		21-53-22	ALL
	DED		W0144	05GZ			32-41-11	ALL
D05798P		AE0207 / /		PLUG-P33				ALL
	1		W0572	048	24		21-53-22	ALL
	2		W0572	565	24		30-31-11	ALL
	3	UNUSED						ALL
	4		W0572	010	22		30-34-11	ALL
	5	DK	W0572	169	18		SPARE	050-099, 150-156, 162-166, 275-276
	5	UNUSED						157, 167-199, 277-299
	6		W0572	566	24		21-51-23	ALL
	7		W0572	543	24		21-51-23	ALL
	8		W0572	162	22		30-31-11	ALL
	9		W0572	152	24		30-31-11	ALL
	10		W0572	153	22		30-31-21	ALL
	11		W0572	154	22		30-31-23	ALL
	12		W0572	155	24		30-31-11	ALL
	13		W0572	156	24		30-31-11	ALL
	14		W0572	559	24		21-51-23	ALL
	15		W0572	560	24		21-51-23	ALL
	16		W0572	561	24		21-51-23	ALL
	17		W0572	140	24		36-11-51	ALL
	18	UNUSED						050-099, 155, 163-165, 276
	18		W0572	139	22		SPARE	150-154, 275
	18		W0572	691	24		36-11-51	156-162, 166-199, 277-299
	19		W0572	110	22		36-11-51	ALL
	20		W0572	165	22		30-31-13	ALL
	21		W0572	567	24		21-51-23	ALL
	22		W0572	095	22		36-11-51	ALL
	23		W0572	563	24		36-11-41	ALL
	24		W0572	562	24		36-11-41	ALL
	25		W0572	550	24		30-34-11	ALL
	26	UNUSED						ALL
	27	DK	W0572	170	18		SPARE	050-099, 150-156, 162-166, 275-276
	27	UNUSED						157, 167-199, 277-299
	28		W0572	019	22		29-11-22	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05700

Page 63

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05798P		AE0207/ /		PLUG-P33 (continued)				ALL
	29		W0572	549	22		30-32-11	ALL
	30		W0572	021	24		29-11-22	ALL
	31		W0572	178	22		30-32-21	ALL
	32		W0572	179	22		30-33-11	ALL
	33		W0572	018	22		29-11-22	ALL
	34		W0572	020	22		29-11-22	ALL
	35		W0572	564	22		32-41-11	ALL
	36		W0572	017	24		29-11-22	ALL
	37		W0572	047	24		21-53-22	ALL
	38		W0572	219R	22		21-51-12	ALL
	39		W0572	219B	22		21-51-12	ALL
	40		W0572	222B	22		21-51-12	ALL
	41		W0572	222R	22		21-51-12	ALL
	42		W0572	576	22		32-42-11	ALL
	43	UNUSED						050-099, 150-199
	43		W0572	581	24		SPARE	275-299
	44		W0572	691	24		36-11-51	050-099, 150-154, 163-165, 275-276
	44	UNUSED						155-162, 166-199
	44		W0572	580	24		SPARE	277-299
	45		W0572	577	24		29-11-12	ALL
	46		W0572	578	24		29-11-22	ALL
	47		W0572	195	24		21-44-21	ALL
	48		W0572	601	22		36-11-51	ALL
	49	UNUSED						ALL
	50		W0572	805	20		30-32-11	ALL
	51		W0572	025	24		29-11-22	ALL
	52		W0572	026	22		29-11-22	ALL
	53		W0572	027	24		29-11-22	ALL
	54		W0572	030	20		29-11-22	ALL
	55		W0572	028	22		29-11-22	ALL
	56		W0572	054	24		21-53-22	ALL
	57		W0572	049	24		21-53-22	ALL
	58		W0572	050	24		21-53-22	ALL
	59		W0572	051	24		21-53-22	ALL
	60		W0572	052	24		21-53-22	ALL
	61		W0572	053	24		21-53-22	ALL
	CAP	Y	W0572	580	24		SPARE	275-276
	DED		W0572	564Z			32-41-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05700

Page 64 End

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05800J		AE0203/ /		RCPT-P33				ALL
	1	UNUSED						ALL
	2		W0142	02U	24		21-51-13	ALL
	3		W0142	02V	24		21-51-13	ALL
	4		W0142	09E	16		28-22-11	ALL
	5		W0142	12E	20		78-34-21	ALL
	6		W0142	13P	20		78-34-21	ALL
	7		W0142	09F	16		28-22-11	ALL
	8		W0142	12F	20		78-34-21	ALL
	9	UNUSED						ALL
	10		W0142	09G	16		28-22-11	ALL
	11	UNUSED						ALL
	12		W0142	12EZ			78-34-21	ALL
D05800P		AE0203/ /		PLUG-P33				ALL
	1	UNUSED						050-099, 155-199, 276-299
	1		W0620	801	20		SPARE	150-154, 275
	2		W0620	051	24		21-51-13	ALL
	3		W0620	052	24		21-51-13	ALL
	4		W0620	002	16		28-22-11	ALL
	5		W0620	073	20		78-34-21	ALL
	6		W0620	074	20		78-34-21	ALL
	7		W0620	003	16		28-22-11	ALL
	8		W0620	075	20		78-34-21	ALL
	9	UNUSED						ALL
	10		W0620	004	16		28-22-11	ALL
	11	UNUSED						ALL
	12		W0620	073Z			78-34-21	ALL
D05801J		AP1501/ /		RCPT-COAXIAL				ALL
	= A1		W1413	01CX			23-32-13	ALL
	= C1		W1413	01CO			23-32-13	ALL
D05801P		AP1501/ /		PLUG-COAXIAL				ALL
	= A1		W1419	01CX			23-32-13	ALL
	= C1		W1419	01CO			23-32-13	ALL
D05802J		AE0220/ /		RCPT-E3-1				ALL
	1	UNUSED						ALL
	2		W0506	559	24		36-11-62	ALL
	3	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D05800
Page 1
Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05802J		AE0220 / /		RCPT-E3-1 (continued)				ALL
	4	UNUSED						ALL
	5		W0506	562	24		36-11-62	ALL
	6		W0506	563	24		36-11-62	ALL
	7	DK	W0506	564	18		SPARE	050-099
	7	UNUSED						150-199, 275-299
	8	UNUSED						ALL
	9		W0506	566	24		36-11-62	ALL
	10		W0506	567	24		36-11-62	ALL
	11		W0506	568	24		36-11-62	ALL
	12	UNUSED						050-099
	12		W0506	096	24		21-51-21	150-199, 275-299
	13	UNUSED						050-099
	13		W0506	097	24		21-51-21	150-199, 275-299
	14		W0506	570	24		36-11-62	ALL
	15		W0506	573	24		36-23-21	ALL
	16		W0506	574	24		36-23-21	ALL
	17		W0506	575	24		36-23-21	ALL
	18		W0506	549	24		36-23-21	ALL
	19		W0506	576	24		36-23-21	ALL
	20		W0506	304Z			36-23-21	ALL
	21		W0506	304B	24		36-23-21	ALL
	22		W0506	304R	24		36-23-21	ALL
	23		W0506	304Y	24		36-23-21	ALL
	24		W0506	680	24		36-11-62	ALL
	25		W0506	679	24		36-11-62	ALL
	26		W0506	714	24		21-61-41	ALL
	27		W0506	718	24		21-61-41	ALL
	28		W0506	628	24		21-61-31	ALL
	29		W0506	627	24		21-61-21	ALL
	30		W0506	626	22		21-61-11	ALL
	31	UNUSED						ALL
	32		W0506	698	24		21-61-41	ALL
	33		W0506	697	24		21-61-41	ALL
	34		W0506	214R	24		21-61-41	ALL
	35		W0506	214B	24		21-61-41	ALL
	36		W0506	696	24		21-61-41	ALL
	37		W0506	695	24		21-61-41	ALL
	38		W0506	694	24		21-61-41	ALL
	39		W0506	305B	24		21-61-41	ALL
	40		W0506	305R	24		21-61-41	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05800

Page 2

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05802J		AE0220/ /		RCPT-E3-1 (continued)				ALL
	41		W0506	305Y	24		21-61-41	ALL
	42		W0506	738	22		36-23-21	ALL
	43		W0506	739	22		36-23-21	ALL
	44	UNUSED						ALL
	45		W0506	768	22		36-11-62	ALL
	46		W0506	769	22		36-11-62	ALL
	47		W0506	770	22		36-11-62	ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51		W0506	227R	24		36-23-21	ALL
	52		W0506	227B	24		36-23-21	ALL
	53	UNUSED						050-099, 150-155, 163-165, 275-276
	53		W0506	231R	24		36-23-21	156-162, 166-199, 277-299
	54	UNUSED						050-099, 150-155, 163-165, 275-276
	54		W0506	231B	24		36-23-21	156-162, 166-199, 277-299
	55	UNUSED						050-099, 150-155, 163-165, 275-276
	55		W0506	231Z			36-23-21	156-162, 166-199, 277-299
D05802P		AE0220/ /		PLUG-E3-1				ALL
	1	UNUSED						ALL
	2		W0084	043	24		36-11-62	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W0084	082	24		36-23-21	ALL
	6		W0084	083	24		36-23-21	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9		W0084	044	24		36-11-62	ALL
	10		W0084	085	24		36-23-21	ALL
	11		W0084	086	24		36-23-21	ALL
	12	UNUSED						050-099
	12		W0084	128	24		21-51-11	150-199, 275-299
	13	UNUSED						050-099
	13		W0084	129	24		21-51-11	150-199, 275-299
	14		W0084	093	24		36-23-21	ALL
	15		W0084	074	24		36-23-21	ALL
	16		W0084	075	24		36-23-21	ALL
	17		W0084	076	24		36-23-21	ALL
	18		W0084	097	20		36-23-21	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05800

Page 3

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05802P		AE0220/ /		PLUG-E3-1 (continued)				ALL
	19		W0084	077	24		36-23-21	ALL
	20		W0084	315Z			36-23-21	ALL
	21		W0084	315B	24		36-23-21	ALL
	22		W0084	315R	24		36-23-21	ALL
	23		W0084	315Y	24		36-23-21	ALL
	24		W0084	087	24		36-23-21	ALL
	25		W0084	094	24		36-23-21	ALL
	26		W0084	145	24		21-61-41	ALL
	27		W0084	146	24		21-61-41	ALL
	28		W0084	113	24		21-61-31	ALL
	29		W0084	112	24		21-61-21	ALL
	30		W0084	110	22		21-61-11	ALL
	31	UNUSED						ALL
	32		W0084	119	24		21-61-41	ALL
	33		W0084	120	24		21-61-41	ALL
	34		W0084	238R	24		21-61-41	ALL
	35		W0084	238B	24		21-61-41	ALL
	36		W0084	121	24		21-61-41	ALL
	37		W0084	122	24		21-61-41	ALL
	38		W0084	123	24		21-61-41	ALL
	39		W0084	316B	24		21-61-41	ALL
	40		W0084	316R	24		21-61-41	ALL
	41		W0084	316Y	24		21-61-41	ALL
	42		W0084	091	22		36-23-21	ALL
	43		W0084	092	22		36-23-21	ALL
	44	UNUSED						ALL
	45		W0084	169	24		36-23-21	ALL
	46		W0084	167	22		36-23-21	ALL
	47		W0084	168	22		36-23-21	ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51		W0084	271R	24		36-23-21	ALL
	52		W0084	271B	24		36-23-21	ALL
	53	UNUSED						050-099, 150-155, 163-165, 275-276
	53		W0084	272R	24		36-23-21	156-162, 166-199, 277-299
	54	UNUSED						050-099, 150-155, 163-165, 275-276
	54		W0084	272B	24		36-23-21	156-162, 166-199, 277-299
	55	UNUSED						050-099, 150-155, 163-165, 275-276
	55		W0084	272Z			36-23-21	156-162, 166-199, 277-299

HOOKUP LIST
D280T132

91-21-51
Section D05800
Page 4
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05808J		AP0403/ /		RCPT-P19				050-099
D05808J		AP0403/ /		RCPT-				150-199, 275-299
	1		W1104	054	16		33-21-12	ALL
	2		W1104	053	16		33-21-12	ALL
	3	UNUSED						ALL
	4	UNUSED						050-099
	4		W1104	526	16		33-21-31	150-199, 275-299
	5	UNUSED						050-099
	5		W1104	014	16		33-21-31	150-199, 275-299
	6		W1104	776	24		33-21-12	050-099, 150-199
	6	UNUSED						275-299
	7		W1104	777	24		33-21-12	050-099, 150-154, 162-165
	7		W1104	066	24		33-21-12	155-157, 166-199
	7	UNUSED						275-299
	8		W1104	778	24		33-21-12	050-099, 150-199
	8	UNUSED						275-299
	9		W1104	027	22		33-51-11	050-099
	10	UNUSED						050-099
	DED		W1104	014Z			33-21-31	155-156, 166
	DED		W1104	526Z			33-21-31	155-156, 166
D05808P		AP0403/ /		PLUG-P19				ALL
	1		W0812	147	16		33-21-12	050-099
	1		W0812	147	12		33-21-12	150-199, 275-299
	2		W0812	148	16		33-21-12	050-099
	2		W0812	148	12		33-21-12	150-199, 275-299
	3	UNUSED						ALL
	4	UNUSED						050-099
	4		W0812	043	16		33-21-34	150-199, 275-299
	5	UNUSED						050-099
	5		W0812	070	16		33-21-34	150-199, 275-278
	5	FM	W0812	070	16		33-21-34	280-299
	6		W0812	895	24		33-21-12	050-099, 150-199
	6	UNUSED						275-299
	7		W0812	898	24		33-21-12	050-099
	7		W0812	898	20		33-21-12	150-199
	7	UNUSED						275-299
	8		W0812	899	24		33-21-12	050-099
	8		W0812	899	20		33-21-12	150-199
	8	UNUSED						275-299
	9		W0812	009	22		33-51-11	050-099

HOOKUP LIST

D280T132

91-21-51

Section D05800

Page 5

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05808P		AP0403/ /		PLUG-P19 (continued)				ALL
	10	UNUSED						050-099
	DED		W0812	009Z			33-51-11	050-099
	DED		W0812	043Z			33-21-34	155-156, 166
	DED		W0812	070Z			33-21-34	155-156, 166
D05809J		AF0119/ /		RCPT-P1				ALL
	1	UNUSED						ALL
	2		W0731	225R	24		34-22-15	ALL
	3		W0731	225B	24		34-22-15	ALL
	4		W0731	039	24		34-22-16	ALL
	5		W0731	036	24		34-22-16	ALL
	6		W0731	015	24		34-22-16	ALL
	7		W0731	049	24		34-22-18	ALL
	8		W0731	050	24		34-22-18	ALL
	9		W0731	001	24		34-61-16	ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14		W0731	053	24		SPARE	ALL
	15		W0731	054	24		SPARE	ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D05809P		AF0119/ /		PLUG-P1				ALL
	1	UNUSED						ALL
	2		W0011	507R	24		34-22-15	ALL
	3		W0011	507B	24		34-22-15	ALL
	4		W0011	075	24		34-22-16	ALL
	5		W0011	025	24		34-22-16	ALL
	6		W0011	024	24		34-22-16	ALL
	7		W0011	064	24		34-22-18	ALL
	8		W0011	077	24		34-22-18	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05800

Page 6

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05809P		AF0119/ /		PLUG-P1 (continued)				ALL
	9		W0011	829	22		34-61-16	ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D05810J		P056-00/ /		RCPT-P56				ALL
	1		W1116	A-A			23-41-11	ALL
	2		W1116	A-B			23-41-11	ALL
	3		W1116	A-C			23-41-11	ALL
	4		W1116	001	18		33-31-11	ALL
	5		W1116	002	18		33-31-11	ALL
	6		W1116	003	18		33-31-11	ALL
	7	UNUSED						ALL
D05810P		P056-00/ /		PLUG-P56				ALL
	1		W0932	203R	20		23-41-11	ALL
	2		W0932	203B	20		23-41-11	ALL
	3		W0932	203Z			23-41-11	ALL
	4		W0932	005	20		33-31-11	ALL
	5		W0932	008	20		33-31-11	ALL
	6		W0932	009	20		33-31-11	ALL
	7	UNUSED						ALL
D05813J		AF0119/ /		RCPT-P1				ALL
	1	UNUSED						ALL
	2	UNUSED						050-099
	2		W0733	001	24		34-61-26	150-199, 275-299
	3	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D05800
Page 7
Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05813J		AF0119/ /		RCPT-P1 (continued)				ALL
	4		W0733	039	24		34-22-26	ALL
	5		W0733	031	24		34-22-26	ALL
	6		W0733	013	24		34-22-26	ALL
	7		W0733	049	24		34-22-28	ALL
	8		W0733	050	24		34-22-28	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14		W0733	053	24		SPARE	ALL
	15		W0733	054	24		SPARE	ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D05813P		AF0119/ /		PLUG-P1				ALL
	1	UNUSED						ALL
	2	UNUSED						050-099
	2		W0031	744	24		34-61-26	150-199, 275-299
	3	UNUSED						ALL
	4		W0031	075	24		34-22-26	ALL
	5		W0031	024	24		34-22-26	ALL
	6		W0031	023	24		34-22-26	ALL
	7		W0031	604	24		34-22-28	ALL
	8		W0031	072	24		34-22-28	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D05800
Page 8
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05813P		AF0119/ /		PLUG-P1 (continued)				ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D05817J		AE0305/ /		RCPT-E1-5				ALL
	1	UNUSED						ALL
	2		W0471	031	22		SPARE	ALL
	3		W0471	091	24		21-61-61	ALL
	4		W0471	086	22		34-22-36	ALL
	5		W0471	036	22		SPARE	ALL
	6		W0471	092	24		21-61-61	ALL
	7		W0471	238R	24		21-61-61	ALL
	8		W0471	238B	24		21-61-61	ALL
	9	UNUSED						ALL
	10		W0471	045	20		38-32-11	050-099, 150-199, 277-299
	10		W0471	045	22		SPARE	275
	10		W0471	045	20		SPARE	276
	11	UNUSED						ALL
	12		W0471	223R	24		27-32-11	ALL
	13		W0471	223B	24		27-32-11	ALL
	14		W0471	223Z			27-32-11	ALL
	15		W0471	040	24		27-32-11	ALL
	16		W0471	093	24		21-61-61	ALL
	17		W0471	109	24		21-61-71	050-099
	17		W0471	094	24		21-61-71	150-199, 275-299
	18		W0471	095	24		21-61-71	ALL
	19		W0471	096	24		21-61-71	ALL
	20		W0471	239R	24		21-61-71	ALL
	21		W0471	239B	24		21-61-71	ALL
	22		W0471	097	24		21-61-71	ALL
	23		W0471	098	24		21-61-71	ALL
	24	UNUSED						ALL
D05817P		AE0305/ /		PLUG-E1-5				ALL
	1	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D05800

Page 9

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05817P		AE0305/ /		PLUG-E1-5 (continued)				ALL
	2	UNUSED						ALL
	3		W0109	032	24		21-61-61	ALL
	4		W0109	611	22		34-22-36	ALL
	5	UNUSED						ALL
	6		W0109	033	24		21-61-61	ALL
	7		W0109	221R	24		21-61-61	ALL
	8		W0109	221B	24		21-61-61	ALL
	9	UNUSED						ALL
	10	UNUSED	W0109	112	20		38-32-11	050-099, 150-199, 277-299
	10	UNUSED						275
	10	UNUSED	W0109	112	20		SPARE	276
	11	UNUSED						ALL
	12		W0109	204R	24		27-32-11	ALL
	13		W0109	204B	24		27-32-11	ALL
	14		W0109	204Z			27-32-11	ALL
	15		W0109	020	24		27-32-11	ALL
	16		W0109	034	24		21-61-61	ALL
	17		W0109	035	24		21-61-71	ALL
	18		W0109	036	24		21-61-71	ALL
	19		W0109	037	24		21-61-71	ALL
	20		W0109	227R	24		21-61-71	ALL
	21		W0109	227B	24		21-61-71	ALL
	22		W0109	039	24		21-61-71	ALL
	23		W0109	040	24		21-61-71	ALL
	24	UNUSED						ALL
D05820J		AE0203/ /		RCPT-P33				ALL
	1		W0142	044	20		30-71-23	050-099, 150-199
	1		W0142	044	22		30-71-23	275-299
	2	UNUSED						050-099
	2		W0142	046	22		30-71-23	150-154, 275-299
	2		W0142	046	20		30-71-23	155-199
	3	UNUSED						050-099
	3		W0142	047	22		30-71-23	150-154, 275-299
	3		W0142	047	20		30-71-23	155-199
	4		W0142	887	20		30-71-23	050-099
	4	UNUSED						150-199, 275-299
	5	UNUSED						050-099
	5		W0142	045	22		30-71-23	150-154, 275-299
	5		W0142	045	20		30-71-23	155-199

HOOKUP LIST
D280T132

91-21-51
Section D05800
Page 10
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05820J		AE0203/ /		RCPT-P33 (continued)				ALL
	6	UNUSED						050-099
	6		W0142	887	20		30-71-23	150-199
	6		W0142	887	22		30-71-23	275-299
	7		W0142	048	20		30-71-23	050-099, 150-199
	7		W0142	048	22		30-71-23	275-299
	8	UNUSED						ALL
	9	DK	W0142	109	18		30-71-11	ALL
	10		W0142	110	20		30-71-11	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13		W0142	138	20		30-71-23	050-099, 150-199
	13		W0142	138	22		30-71-23	275-299
	14		W0142	795	20		30-71-23	050-099, 155-199
	14		W0142	795	22		30-71-23	150-154, 275-299
	15		W0142	09Q	20		30-71-23	050-099, 150-199
	15		W0142	09Q	22		30-71-23	275-299
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	DL	W0142	105	18		38-15-11	050-099
	20	DK	W0142	105	18		38-15-11	150-199, 275-299
	21	DL	W0142	106	18		38-15-11	050-099
	21	DK	W0142	106	18		38-15-11	150-199, 275-299
	22	DL	W0142	107	18		38-15-11	050-099
	22	DK	W0142	107	18		38-15-11	150-199, 275-299
	23	UNUSED						ALL
	24	UNUSED						ALL
D05820P		AE0203/ /		PLUG-P33				ALL
	1		W1256	036	20		30-71-23	050-099, 155-199
	1		W1256	036	22		30-71-23	150-154, 275-299
	2	UNUSED						050-099
	2		W1256	002	22		30-71-23	150-154, 275-299
	2		W1256	002	20		30-71-23	155-199
	3	UNUSED						050-099
	3		W1256	003	22		30-71-23	150-154, 275-299
	3		W1256	003	20		30-71-23	155-199
	4		W1256	011	20		30-71-23	050-099
	4	UNUSED						150-199, 275-299

HOOKUP LIST

D280T132

91-21-51

Section D05800

Page 11

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05820P		AE0203/ /		PLUG-P33 (continued)				ALL
	5	UNUSED						050-099
	5		W1256	042	20		30-71-23	150-199, 275-276
	5		W1256	042	22		30-71-23	277-299
	6	UNUSED						050-099
	6		W1256	010	20		30-71-23	150-199
	6		W1256	010	22		30-71-23	275-299
	7		W1256	001	20		30-71-23	050-099, 155-199
	7		W1256	001	22		30-71-23	150-154, 275-299
	8	UNUSED						ALL
	9	DL	W1256	017	18		30-71-11	ALL
	10		W1256	018	20		30-71-11	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13		W1256	071	20		30-71-23	050-099, 155-199
	13		W1256	071	22		30-71-23	150-154, 275-299
	14		W1256	072	20		30-71-23	050-099, 155-199
	14		W1256	072	22		30-71-23	150-154, 275-299
	15		W1256	075	20		30-71-23	050-099, 155-199
	15		W1256	075	22		30-71-23	150-154, 275-299
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	DL	W1256	047	18		38-15-11	ALL
	21	DL	W1256	048	18		38-15-11	ALL
	22	DL	W1256	049	18		38-15-11	ALL
	23	UNUSED						050-099
	23		W1256	814	22		SPARE	150-199, 275-299
	24		W1256	815	20		SPARE	ALL
D05821J		AE0317/ /		RCPT-E1-3				ALL
	1		W0475	016	24		77-35-11	ALL
	2		W0475	201R	24		31-31-12	ALL
	3		W0475	201B	24		31-31-12	ALL
	4		W0475	204R	24		73-21-14	ALL
	5		W0475	204B	24		73-21-14	ALL
	6		W0475	204Z	24		73-21-14	ALL
	7		W0475	006	24		77-35-11	ALL
	8		W0475	201Z	24		31-31-12	ALL
	9	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D05800
Page 12
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05821J		AE0317/ /		RCPT-E1-3 (continued)				ALL
	10		W0475	018	24		SPARE	ALL
	11	UNUSED						ALL
	12		W0475	007	24		34-12-22	ALL
	13	UNUSED						ALL
	14		W0475	013	22		SPARE	ALL
	15		W0475	014	24		SPARE	ALL
	16		W0475	015	24		34-31-31	ALL
	17		W0475	202R	24		31-31-12	ALL
	18		W0475	202B	24		31-31-12	ALL
	19		W0475	202Z			31-31-12	ALL
	20	UNUSED						ALL
	21		W0475	025	24		SPARE	ALL
	22	UNUSED						050-099
	22		W0475	203R	24		31-31-12	150-199, 275-299
	23	UNUSED						050-099
	23		W0475	203B	24		31-31-12	150-199, 275-299
	24	UNUSED						050-099
	24		W0475	203Z			31-31-12	150-199, 275-299
	25		W0475	205R	24		SPARE	050-099, 150-199
	25	UNUSED						275-299
	26		W0475	205B	24		SPARE	050-099, 150-199
	26	UNUSED						275-299
	27		W0475	205Z			SPARE	050-099, 150-199
	27	UNUSED						275-299
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
D05821P		AE0317/ /		PLUG-E1-3				ALL
	1		W0115	602	24		77-35-11	ALL
	2		W0115	201R	24		31-31-12	ALL
	3		W0115	201B	24		31-31-12	ALL
	4		W0115	552R	24		73-21-14	ALL
	5		W0115	552B	24		73-21-14	ALL
	6		W0115	552Z			73-21-14	ALL
	7		W0115	603	24		77-35-11	ALL
	8		W0115	201Z			31-31-12	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D05800

Page 13

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05821P		AE0317/ /		PLUG-E1-3 (continued)				ALL
	11	UNUSED						ALL
	12		W0115	188	24		34-12-22	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16		W0115	040	24		34-31-31	ALL
	17		W0115	202R	24		31-31-12	ALL
	18		W0115	202B	24		31-31-12	ALL
	19		W0115	202Z			31-31-12	ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
D05822J		AE0218/ /		RCPT-P37				ALL
	1		W0198	120	24		80-11-21	ALL
	2		W0198	169	24		80-11-21	ALL
	3	UNUSED						ALL
	4		W0198	634	20		78-34-21	ALL
	5		W0198	124	20		76-11-11	ALL
	6		W0198	148	20		76-11-11	050-099, 150-154, 275-276
	6		W0198	148	24		76-11-11	155-199, 277-299
	7		W0198	527	24		27-51-61	ALL
	8		W0198	529	22		27-51-61	ALL
	9	UNUSED						050-099, 151-199, 275-299
	9		W0198	026	24		SPARE	150
	10	DK	W0198	626	18		24-11-21	ALL
	11		W0198	128	20		76-11-11	ALL
	12		W0198	187	20		76-11-11	ALL
	13	UNUSED						ALL
	14		W0198	028Z			73-21-11	ALL
	15	UNUSED						050-099, 151-199

HOOKUP LIST
D280T132

91-21-51
Section D05800
Page 14
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05822J		AE0218/ /		RCPT-P37 (continued)				ALL
	15		W0198	027	24		SPARE	150
	15		W0198	91N	20		76-11-11	275-299
	16		W0198	028	24		73-21-11	ALL
	17	DK	W0198	138	18		28-22-21	ALL
	18	DK	W0198	139	18		28-22-21	ALL
	19		W0198	91N	20		76-11-11	050-099, 150-199
	19	UNUSED						275-299
	20		W0198	150	22		28-22-21	ALL
	21		W0198	91M	20		76-11-11	ALL
	22		W0198	136	20		76-11-11	ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26		W0198	182	24		73-21-11	ALL
	27		W0198	183	24		73-21-11	ALL
	28	DK	W0198	625	18		24-11-21	ALL
	29		W0198	134	20		76-11-11	ALL
	30	UNUSED						ALL
	31		W0198	185	24		31-31-26	ALL
	DED		W0198	625Z			24-11-21	ALL
	DED		W0198	626Z			24-11-21	ALL
	DED		W0198	634Z			78-34-21	ALL
D05822P		AE0218/ /		PLUG-P37				ALL
	1		W0262	007	24		80-11-21	ALL
	2		W0262	008	24		80-11-21	ALL
	3	UNUSED						ALL
	4	DL	W0262	030	18		78-34-21	ALL
	5		W0262	013	20		76-11-11	ALL
	6		W0262	014	20		76-11-11	ALL
	7		W0262	120	24		27-51-61	ALL
	8		W0262	121	22		27-51-61	ALL
	9	UNUSED						ALL
	10	DL	W0262	173	18		24-11-21	ALL
	11		W0262	021	20		76-11-11	ALL
	12		W0262	022	20		76-11-11	ALL
	13	UNUSED						ALL
	14		W0262	010Z			73-21-11	ALL
	15	UNUSED						050-099
	15		W0262	009	22		SPARE	150-199

HOOKUP LIST

D280T132

91-21-51

Section D05800

Page 15

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05822P		AE0218/ /		PLUG-P37 (continued)				ALL
	15		W0262	023	20		76-11-11	275-299
	16		W0262	010	22		73-21-11	ALL
	17	DL	W0262	039	18		28-22-21	050-099, 150-154, 156-162, 165-199
	17	DL	W0262	139	18		28-22-21	155, 163-164, 280-299
	17	DK	W0262	139	18		28-22-21	275-278
	18	DL	W0262	040	18		28-22-21	ALL
	19		W0262	023	20		76-11-11	050-099, 150-199
	19		W0262	041	20		SPARE	275-299
	20		W0262	048	22		28-22-21	ALL
	21		W0262	015	20		76-11-11	ALL
	22		W0262	062	20		76-11-11	ALL
	23		W0262	050	20		SPARE	ALL
	24		W0262	801	20		SPARE	ALL
	25		W0262	035	20		SPARE	050-099
	25	UNUSED						150-199, 275-299
	26		W0262	018	24		73-21-11	ALL
	27		W0262	020	24		73-21-11	ALL
	28	DL	W0262	011	18		24-11-21	ALL
	29		W0262	017	20		76-11-11	ALL
	30	UNUSED						ALL
	31		W0262	006	24		31-31-26	ALL
	CAP	Y	W0262	056	20		SPARE	050-099, 150-154, 275-276
D05824J		AC1402/ /		RCPT-P49				ALL
	1		W0580	014	18		38-15-11	ALL
	2		W0580	015	18		38-15-11	ALL
	3		W0580	016	18		38-15-11	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8		W0580	111	20		36-11-41	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
D05824P		AC1402/ /		PLUG-P49				ALL
	1		W0030	029	18		38-15-11	ALL
	2		W0030	028	18		38-15-11	ALL
	3		W0030	027	18		38-15-11	ALL
	4	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D05800
Page 16
Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05824P		AC1402/ /		PLUG-P49 (continued)				ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8		W0030	001	20		36-11-41	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
D05827J		AE0305/ /		RCPT-E1-3				050-099, 150-152, 277-299
D05827J		355/125/L 36		RCPT-E1-3				155-199
	1		W1633	228R	24		34-45-12	050-099, 150-152, 155-199, 277-299
	2		W1633	228B	24		34-45-12	050-099, 150-152, 155-199, 277-299
	3		W1633	228Z			34-45-12	050-099, 150-152, 155-199, 277-299
	4		W1633	225R	24		34-45-14	050-099, 150-152, 155-199, 277-299
	5		W1633	225B	24		34-45-14	050-099, 150-152, 155-199, 277-299
	6		W1633	225Z			34-45-14	050-099, 150-152, 155-199, 277-299
	7	UNUSED						050-099, 150-152, 155-199, 277-299
	8	UNUSED						050-099, 150-152, 155-199, 277-299
	9	UNUSED						050-099, 150-152, 155-199, 277-299
	10	UNUSED						050-099, 150-152, 155-199, 277-299
	11	UNUSED						050-099, 150-152, 155-199, 277-299
	12	UNUSED						050-099, 150-152, 155-199, 277-299
	13	UNUSED						050-099, 150-152, 155-199, 277-299
	14	UNUSED						050-099, 150-152, 155-199, 277-299
	15	UNUSED						050-099, 150-152, 155-199, 277-299
D05827P		AE0305/ /		PLUG-E1-3				050-099, 150-152, 155-199, 275-299
	1		W0105	549R	24		34-45-12	050-099, 150-152, 155-199, 275-299
	2		W0105	549B	24		34-45-12	050-099, 150-152, 155-199, 275-299
	3		W0105	549Z			34-45-12	050-099, 150-152, 155-199, 275-299
	4		W0105	564R	24		34-45-14	050-099, 150-152, 155-199, 275-299
	5		W0105	564B	24		34-45-14	050-099, 150-152, 155-199, 275-299
	6		W0105	564Z			34-45-14	050-099, 150-152, 155-199, 275-299
	7	UNUSED						050-099, 150-152, 155-199, 275-299
	8	UNUSED						050-099, 150-152, 155-199, 275-299
	9	UNUSED						050-099, 150-152, 155-199, 275-299
	10	UNUSED						050-099, 150-152, 155-199, 275-299
	11	UNUSED						050-099, 150-152, 155-199, 275-299
	12	UNUSED						050-099, 150-152, 155-199, 275-299
	13	UNUSED						050-099, 150-152, 155-199, 275-299
	14	UNUSED						050-099, 150-152, 155-199, 275-299

HOOKUP LIST

D280T132

91-21-51

Section D05800

Page 17

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05827P		AE0305/ /		PLUG-E1-3 (continued)				050-099, 150-152, 155-199, 275-299
	15	UNUSED						050-099, 150-152, 155-199, 275-299
D05828J		AF0232/ /		RCPT-P6				ALL
	1		W0028	198	16		34-21-21	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
D05828P		AF0232/ /		PLUG-P6				ALL
	1		W0070	11Y	12		34-21-21	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
D05832J		AE0209/ /		RCPT-P36				ALL
	1		W0176	81L	24		73-21-16	050-099, 150-199 275-299
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W0176	255B	24		73-21-14	ALL
	4		W0176	255R	24		73-21-14	ALL
	5	UNUSED						ALL
	6		W0176	82B	20		78-34-11	ALL
	7	UNUSED						ALL
	8		W0176	866	24		24-22-11	ALL
	9	FM	W0176	91F	16		73-21-20	050-099
	9	FL	W0176	91F	16		73-21-20	150-199, 275-299
	10	UNUSED						ALL
	11		W0176	692	24		73-21-17	ALL
	12		W0176	690	24		73-21-17	ALL
	13		W0176	681	22		73-21-19	ALL
	14		W0176	81ZZ			78-34-11	ALL
	15		W0176	684	22		73-21-19	ALL
	16		W0176	57A	24		24-11-11	ALL
	17		W0176	59R	24		24-11-11	ALL
	18		W0176	59L	24		24-11-11	ALL
	19		W0176	59P	24		24-11-11	ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23		W0176	58K	20		78-34-21	ALL

HOOKUP LIST
D280T132

91-21-51
Section D05800
Page 18
Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05832J		AE0209/ /		RCPT-P36 (continued)				ALL
	24		W0176	05K	22		28-22-21	ALL
	25		W0176	70K	22		32-45-11	ALL
	26		W0176	58G	20		78-34-21	ALL
	27		W0176	04H	24		32-09-13	ALL
	28	UNUSED						ALL
	29		W0176	FRA			73-21-11	050-099
	29		W0176	FR1			73-21-11	150-199, 280-299
	29		W0176	91FZ			73-21-20	275-276
	29	UNUSED						277-278
	30	UNUSED						ALL
	31		W0176	GRP			78-34-21	ALL
	32		W0176	04V	22		76-11-11	050-099, 155-199, 275-299
	32		W0176	04V	20		76-11-11	150-154
	33		W0176	11L	24		73-21-11	ALL
	34		W0176	11K	24		73-21-11	050-099, 150-199, 277-299
	34		W0176	11P	24		73-21-11	275-276
	35	UNUSED						ALL
	36		W0176	91G	24		73-21-11	ALL
	37		W0176	91GZ			73-21-11	ALL
	38		W0176	83Q	24		78-34-11	ALL
	39		W0176	59G	20		78-34-11	ALL
	40	UNUSED						ALL
	41		W0176	03R	22		78-36-11	ALL
	42	UNUSED						ALL
	43		W0176	255Z			73-21-14	ALL
	44		W0176	13B	24		73-21-17	ALL
	45		W0176	13C	24		73-21-17	ALL
	46		W0176	FRF			73-21-17	050-099
	46		W0176	13BZ			73-21-17	150-199
	46		W0176	FR4			73-21-17	275-299
	47		W0176	64S	24		78-36-11	ALL
	48		W0176	65P	24		78-36-11	ALL
	49	UNUSED						ALL
	50		W0176	81Z	20		78-34-11	ALL
	51		W0176	21H	24		30-81-11	050-099, 150-199
	51	UNUSED						275-299
	52		W0176	6A1	24		27-89-11	ALL
	53	UNUSED						ALL
	54		W0176	18XZ			73-21-11	ALL
	55	FL	W0176	18X	16		73-21-11	050-099, 155-199, 275-299

HOOKUP LIST

D280T132

91-21-51

Section D05800

Page 19

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05832J		AE0209/ /		RCPT-P36 (continued)				ALL
	55	FM	W0176	18X	16		73-21-11	150-154
	DED		W0176	59GZ			78-34-11	ALL
			W0176	FRA			73-21-11	050-099
			W0176	FRF			73-21-17	050-099
			W0176	11LZ			73-21-11	ALL
			W0176	58GZ			78-34-21	ALL
			W0176	58KZ			78-34-21	ALL
			W0176	GRP			78-34-21	ALL
			W0176	11KZ			73-21-11	050-099, 150-199, 277-299
			W0176	91FZ			73-21-20	050-099, 150-199, 277-299
			W0176	13BZ			73-21-17	050-099, 275-299
			W0176	13CZ			73-21-17	050-099, 275-299
			W0176	FR1			73-21-11	150-199, 280-299
			W0176	11PZ			73-21-11	275-276
			W0176	FR4			73-21-17	275-299
D05832P		AE0209/ /		PLUG-P36				ALL
	1		W0756	636	24		73-21-16	050-099, 150-199
	1	UNUSED						275-299
	2	UNUSED						ALL
	3		W0756	206B	24		73-21-14	ALL
	4		W0756	206R	24		73-21-14	ALL
	5	UNUSED						ALL
	6		W0756	683	20		78-34-11	ALL
	7	UNUSED						ALL
	8		W0756	808	24		24-22-11	ALL
	9	FM	W0756	093	16		73-21-20	ALL
	10	UNUSED						ALL
	11		W0756	170	24		73-21-17	ALL
	12		W0756	171	24		73-21-17	ALL
	13		W0756	158	22		73-21-19	ALL
	14		W0756	FRR			78-34-11	ALL
	15		W0756	159	22		73-21-19	ALL
	16		W0756	606	24		24-11-11	ALL
	17		W0756	608	24		24-11-11	ALL
	18		W0756	607	24		24-11-11	ALL
	19		W0756	605	24		24-11-11	ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D05800

Page 20

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05832P		AE0209/ /		PLUG-P36 (continued)				ALL
	23	DK	W0756	10I	18		78-34-21	ALL
	24		W0756	195	22		28-22-21	ALL
	25		W0756	021	22		32-45-11	ALL
	26	DK	W0756	10N	18		78-34-21	ALL
	27		W0756	080	24		32-09-13	ALL
	28	UNUSED						ALL
	29		W0756	FRE			73-21-11	050-099, 150-199, 277-299
	29		W0756	093Z			73-21-20	275-276
	30	UNUSED						ALL
	31		W0756	FRV			78-34-21	ALL
	32		W0756	111	22		76-11-11	ALL
	33		W0756	022	24		73-21-11	ALL
	34		W0756	023	24		73-21-11	ALL
	35	UNUSED						ALL
	36		W0756	813	24		73-21-11	ALL
	37		W0756	813Z			73-21-11	ALL
	38		W0756	685	24		78-34-11	ALL
	39	DK	W0756	10L	18		78-34-11	ALL
	40		W0756	099	24		78-36-11	ALL
	41		W0756	094	22		78-36-11	ALL
	42	UNUSED						ALL
	43		W0756	206Z			73-21-14	ALL
	44		W0756	560	24		73-21-17	ALL
	45		W0756	561	24		73-21-17	ALL
	46		W0756	FRZ			73-21-17	050-099
	46	UNUSED						150-199
	46		W0756	FRJ			73-21-17	275-299
	47		W0756	658	24		78-36-11	ALL
	48		W0756	659	24		78-36-11	ALL
	49	UNUSED						ALL
	50	DK	W0756	682	18		78-34-11	ALL
	51		W0756	293	24		30-81-11	050-099, 150-154, 156-157, 166-199
	51	UNUSED						155, 162-165, 275-299
	52		W0756	249	22		27-89-11	ALL
	53	UNUSED						ALL
	54	FM	W0756	641Z			73-21-11	050-099, 155-199, 277-299
	54	UNUSED						150-154, 275-276
	55	FM	W0756	641	16		73-21-11	050-099, 150-154, 275-299
	55	FM	W0756	641	18		73-21-11	155-199
	CAP	Y	W0756	047	22		SPARE	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05800

Page 21

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05832P		AE0209/ /		PLUG-P36 (continued)				ALL
			W0756	FRZ			73-21-17	050-099
			W0756	022Z			73-21-11	ALL
			W0756	023Z			73-21-11	ALL
			W0756	10IZ			78-34-21	ALL
			W0756	10LZ			78-34-11	ALL
			W0756	10NZ			78-34-21	ALL
			W0756	560Z			73-21-17	ALL
			W0756	561Z			73-21-17	ALL
			W0756	682Z			78-34-11	ALL
			W0756	684	20		78-34-11	ALL
			W0756	FRR			78-34-11	ALL
			W0756	FRV			78-34-21	ALL
			W0756	093Z			73-21-20	050-099, 150-199, 277-299
			W0756	FRE			73-21-11	050-099, 150-199, 277-299
			W0756	FRJ			73-21-17	275-299
D05840J		AE0203/ /		RCPT-P33				ALL
	1		W0142	594	22		30-11-11	ALL
	2		W0142	42U	22		30-11-11	050-099, 150-199
	2		W0142	593	22		30-11-11	275-299
	3	UNUSED						050-099, 150-199
	3		W0142	609	22		30-11-11	275-299
	4	UNUSED						ALL
	5		W0142	611	24		30-11-11	ALL
	6		W0142	597	22		30-11-11	050-099, 150-199
	6		W0142	584	22		30-11-11	275-299
	7	UNUSED						ALL
	8		W0142	11M	24		78-36-21	ALL
	9		W0142	11N	24		78-36-21	ALL
	10		W0142	11P	24		78-36-21	ALL
	11		W0142	11R	24		78-36-21	ALL
	12		W0142	11T	24		78-36-21	ALL
	13		W0142	091	24		36-11-41	ALL
	14		W0142	092	24		36-11-41	ALL
	15		W0142	093	24		36-11-41	ALL
	16		W0142	094	24		36-11-41	ALL
	17		W0142	02G	24		78-36-21	ALL
	18		W0142	11V	24		78-36-21	ALL
	19		W0142	13K	22		78-36-21	ALL
	20	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D05800

Page 22

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05840J		AE0203/ /		RCPT-P33 (continued)				ALL
	21		W0142	13M	22		78-36-21	ALL
	22		W0142	13N	22		78-36-21	ALL
	23		W0142	11L	24		78-36-21	ALL
	24		W0142	02J	22		78-36-21	050-099, 150-156, 162-166, 275-299
	24		W0142	02J	24		78-36-21	157, 167-199
D05840P		AE0203/ /		PLUG-P33				ALL
	1		W0656	011	22		30-11-11	ALL
	2		W0656	012	22		30-11-11	ALL
	3	UNUSED						050-099, 162-199
	3		W0656	014	22		SPARE	150-157
	3		W0656	014	22		30-11-11	275-299
	4	UNUSED						ALL
	5		W0656	015	24		30-11-11	ALL
	6		W0656	009	22		30-11-11	050-099
	6		W0656	017	22		30-11-11	150-199, 275-299
	7	DL	W0656	193	18		78-36-21	ALL
	8		W0656	184	24		78-36-21	ALL
	9		W0656	502	24		78-36-21	ALL
	10		W0656	504	24		78-36-21	ALL
	11		W0656	503	24		78-36-21	ALL
	12		W0656	505	24		78-36-21	ALL
	13		W0656	110	24		36-11-41	ALL
	14		W0656	111	24		36-11-41	ALL
	15		W0656	112	24		36-11-41	ALL
	16		W0656	113	24		36-11-41	ALL
	17		W0656	506	24		78-36-21	ALL
	18		W0656	507	24		78-36-21	ALL
	19		W0656	806	22		78-36-21	ALL
	20	UNUSED						ALL
	21		W0656	808	22		78-36-21	ALL
	22		W0656	809	22		78-36-21	ALL
	23		W0656	509	24		78-36-21	ALL
	24		W0656	508	22		78-36-21	ALL
	CAP	Y	W0656	250B	18		78-36-21	ALL
	CAP	Y	W0656	250R	18		78-36-21	ALL
	CAP	Y	W0656	251B	18		78-36-21	ALL
	CAP	Y	W0656	251R	18		78-36-21	ALL
	CAP	Y	W0656	066	22		SPARE	150-199, 275-299
	DED		W0656	250Z			78-36-21	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05800

Page 23

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05840P		AE0203/ /		PLUG-P33 (continued)				ALL
	DED		W0656	251Z			78-36-21	ALL
	REF	DL	W0656	194	18		78-36-21	ALL
	REF	DL	W0656	249B	18		78-36-21	ALL
	REF	DL	W0656	249R	18		78-36-21	ALL
	REF	DL	W0656	252B	18		78-36-21	ALL
	REF	DL	W0656	252R	18		78-36-21	ALL
			W0656	185	20		78-36-21	ALL
			W0656	193Z			78-36-21	ALL
			W0656	194Z			78-36-21	ALL
			W0656	249Z			78-36-21	ALL
			W0656	252Z			78-36-21	ALL
D05842J		AE0307/ /		RECP-				ALL
	1		W0596	308R	24		SPARE	050-099, 150-199 275-299
	1	UNUSED						
	2		W0596	308B	24		SPARE	050-099, 150-199 275-299
	2	UNUSED						
	3		W0596	308Y	24		SPARE	050-099, 150-199 275-299
	3	UNUSED						
	4		W0596	512	24		SPARE	050-099, 150-199 275-299
	4	UNUSED						
	5	UNUSED						050-099, 155-199, 276-299
	5		W0596	061	24		31-51-21	150-154, 275
	6	UNUSED						050-099, 155-199, 276-299
	6		W0596	062	24		31-51-21	150-154, 275
	7		W0596	036	22		28-21-11	ALL
	8		W0596	037	22		28-21-11	ALL
	9		W0596	038	22		28-21-11	ALL
	10		W0596	039	22		28-21-11	ALL
	11		W0596	040	22		28-21-11	ALL
	12		W0596	060	22		28-21-11	ALL
	13		W0596	217R	24		SPARE	050-099, 150-199 275-299
	13	UNUSED						
	14		W0596	217B	24		SPARE	050-099, 150-199 275-299
	14	UNUSED						
	15	UNUSED						ALL
	16	UNUSED						050-099, 275-299
	16		W0596	220R	24		SPARE	150-199
	17	UNUSED						050-099, 275-299
	17		W0596	220B	24		SPARE	150-199

HOOKUP LIST
D280T132

91-21-51
Section D05800
Page 24
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05842J		AE0307/ /		RECP- (continued)				ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						050-099, 275-299
	21		W0596	221R	24		SPARE	150-199
	22	UNUSED						050-099, 275-299
	22		W0596	221B	24		SPARE	150-199
	23	UNUSED						ALL
	24	UNUSED						050-099, 275-299
	24		W0596	305R	24		SPARE	150-199
	25	UNUSED						050-099, 275-299
	25		W0596	305B	24		SPARE	150-199
	26	UNUSED						050-099, 275-299
	26		W0596	305Y	24		SPARE	150-199
	27	UNUSED						ALL
	28	UNUSED						ALL
D05842P		AE0307/ /		PLUG-E2-4				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						050-099, 155-199, 276-299
	5		W0098	084	24		31-51-21	150-154, 275
	6	UNUSED						050-099, 155-199, 276-299
	6		W0098	085	24		31-51-21	150-154, 275
	7		W0098	003	22		28-21-11	ALL
	8		W0098	004	22		28-21-11	ALL
	9		W0098	005	22		28-21-11	ALL
	10		W0098	006	22		28-21-11	ALL
	11		W0098	007	22		28-21-11	ALL
	12		W0098	008	22		28-21-11	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D05800

Page 25

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05842P		AE0307/ /		PLUG-E2-4 (continued)				ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
D05846J		AF0232/ /		RCPT-P6				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W0048	401G	24		24-23-11	ALL
	6		W0048	401Y	24		24-23-11	ALL
	7		W0048	401R	24		24-23-11	ALL
	8		W0048	401B	24		24-23-11	ALL
	9		W0048	057	24		24-51-43	ALL
	10		W0048	058	24		24-51-43	ALL
	11		W0048	059	24		24-51-43	ALL
	12	UNUSED						ALL
	13		W0048	042	22		25-29-11	ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D05846P		AF0232/ /		PLUG-P6				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D05800
Page 26
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05846P		AF0232/ /		PLUG-P6 (continued)				ALL
	5		W0066	403G	24		24-23-11	ALL
	6		W0066	403Y	24		24-23-11	ALL
	7		W0066	403R	24		24-23-11	ALL
	8		W0066	403B	24		24-23-11	ALL
	9		W0066	53K	24		24-51-41	050-099
	9		W0066	53K	24		24-51-43	150-199, 275-299
	10		W0066	693	24		24-51-43	ALL
	11		W0066	692	24		24-51-43	ALL
	12	UNUSED						ALL
	13		W0066	53U	22		25-29-11	ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D05848J		AF0232/ /		RCPT-P6				ALL
	1	UNUSED						050-099, 151, 275-299
	1		W9046	901	20		23-19-11	150, 152-199
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W0046	401Y	24		24-23-11	ALL
	6		W0046	401R	24		24-23-11	ALL
	7		W0046	401G	24		24-23-11	ALL
	8		W0046	401B	24		24-23-11	ALL
	9		W0046	047	24		24-51-42	ALL
	10		W0046	048	24		24-51-42	ALL
	11		W0046	049	24		24-51-42	ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D05800

Page 27

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05848J		AF0232/ /		RCPT-P6 (continued)				ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D05848P		AF0232/ /		PLUG-P6				ALL
	1	UNUSED						050-099, 275-299
	1		W9081	901	20		23-19-11	150, 152-199
	1		W0062	53A	24		24-11-11	150-199
	2	UNUSED						050-099, 275-299
	2		W0062	53B	24		24-11-11	150-199
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W0062	403Y	24		24-23-11	ALL
	6		W0062	403R	24		24-23-11	ALL
	7		W0062	403G	24		24-23-11	ALL
	8		W0062	403B	24		24-23-11	ALL
	9		W0062	64J	24		24-51-42	ALL
	10		W0062	690	24		24-51-42	ALL
	11		W0062	689	24		24-51-42	ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D05850J		AL0202/ /		RCPT-NOSE WW DISC				ALL
	1		W0926	013	20		23-43-11	ALL

HOOKUP LIST
D280T132

91-21-51
Section D05800
Page 28
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05850J		AL0202/ /		RCPT-NOSE WW DISC (continued)				ALL
	2		W0926	014	20		23-43-11	ALL
	3		W0926	205B	20		23-41-11	ALL
	4		W0926	205R	20		23-41-11	ALL
	5		W0926	205Z			23-41-11	ALL
	6		W0926	206B	20		23-51-11	ALL
	7		W0926	206R	20		23-51-11	ALL
	8		W0926	206Z			23-51-11	ALL
	9		W0926	015	20		33-51-21	ALL
	10		W0926	016	20		33-51-21	ALL
	11		W0926	017	20		33-51-21	ALL
	12		W0926	018	18		33-31-11	ALL
	13		W0926	019	18		33-31-11	ALL
	14		W0926	208Z			32-45-12	ALL
	15		W0926	207R	20		32-09-12	ALL
	16		W0926	207B	20		32-09-12	ALL
	17		W0926	208B	20		32-45-12	ALL
	18		W0926	208R	20		32-45-12	ALL
	19	UNUSED						ALL
	20	UNUSED						050-099, 155-199, 275-299
	21	UNUSED						050-099, 155-199, 275-299
	22	UNUSED						050-099, 155-199, 275-299
	23	UNUSED						050-099, 155-199, 275-299
	24	UNUSED						050-099, 155-199, 275-299
	25	UNUSED						050-099, 155-199, 275-299
	26	UNUSED						050-099, 155-199, 275-299
	27	UNUSED						050-099, 155-199, 275-299
	28	UNUSED						050-099, 155-199, 275-299
	29	UNUSED						050-099, 155-199, 275-299
	30	UNUSED						050-099, 155-199, 275-299
D05850P		AL0202/ /		PLUG-NOSE WW DISC				ALL
	1		W0678	012	18		23-43-11	ALL
	2		W0678	013	18		23-43-11	ALL
	3		W0678	204B	20		23-41-11	ALL
	4		W0678	204R	20		23-41-11	ALL
	5		W0678	204Z			23-41-11	ALL
	6		W0678	205B	20		23-51-11	ALL
	7		W0678	205R	20		23-51-11	ALL
	8		W0678	205Z			23-51-11	ALL
	9		W0678	015	18		33-51-21	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05800

Page 29

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05850P		AL0202/ /		PLUG-NOSE WW DISC (continued)				ALL
	10		W0678	016	18		33-51-21	ALL
	11		W0678	017	18		33-51-21	ALL
	12		W0678	018	18		33-31-11	ALL
	13		W0678	019	18		33-31-11	ALL
	14		W0678	208Z			32-45-12	050-099, 155-199, 275-299
	14	UNUSED						150-154
	15		W0678	201R	18		32-09-12	ALL
	16		W0678	201B	18		32-09-12	ALL
	17		W0678	208B	20		32-45-12	050-099, 155-199, 275-299
	17	UNUSED						150-154
	18		W0678	208R	20		32-45-12	050-099, 155-199, 275-299
	18	UNUSED						150-154
	19	UNUSED						ALL
	20	UNUSED						050-099, 155-199, 275-299
	21	UNUSED						050-099, 155-199, 275-299
	22	UNUSED						050-099, 155-199, 275-299
	23	UNUSED						050-099, 155-199, 275-299
	24	UNUSED						050-099, 155-199, 275-299
	25	UNUSED						050-099, 155-199, 275-299
	26	UNUSED						050-099, 155-199, 275-299
	27	UNUSED						050-099, 155-199, 275-299
	28	UNUSED						050-099, 155-199, 275-299
	29	UNUSED						050-099, 155-199, 275-299
	30	UNUSED						050-099, 155-199, 275-299
D05852J		AE0322/ /		RCPT-E2-5				ALL
	1		W0926	013	20		23-43-11	ALL
	2		W0926	014	20		23-43-11	ALL
	3		W0926	205B	20		23-41-11	ALL
	4		W0926	205R	20		23-41-11	ALL
	5		W0926	205Z			23-41-11	ALL
	6		W0926	206B	20		23-51-11	ALL
	7		W0926	206R	20		23-51-11	ALL
	8		W0926	206Z			23-51-11	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D05800
Page 30
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05852P		AE0322/ /		PLUG-E2-5				ALL
	1		W0149	110	22		23-43-11	ALL
	2		W0149	111	22		23-43-11	ALL
	3		W0149	307B	24		23-41-11	ALL
	4		W0149	307R	24		23-41-11	ALL
	5		W0149	307Y	24		23-41-11	ALL
	6		W0149	205B	24		23-51-11	ALL
	7		W0149	205R	24		23-51-11	ALL
	8		W0149	016	20		23-51-11	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D05854J		AF0204/ /		RCPT-P61				ALL
	1		W0070	11U	12		34-21-11	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W0070	746	18		24-11-11	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11		W0070	13H	24		21-58-12	ALL
	12		W0070	13J	24		21-58-12	ALL
	13	UNUSED						ALL
	14		W0070	13G	24		21-58-16	ALL
	15		W0070	13N	22		21-58-16	ALL
	16		W0070	13P	22		21-58-16	ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19		W0070	127	20		78-34-11	ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D05800

Page 31

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05854J		AF0204/ /		RCPT-P61 (continued)				ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	DED		W0070	127Z			78-34-11	ALL
D05854P		AF0204/ /		PLUG-P61				ALL
	1		W0264	036	12		34-21-11	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W0264	083	18		SPARE	ALL
	5	UNUSED						ALL
	6		W0264	034	18		24-11-11	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11		W0264	130	24		21-58-12	ALL
	12		W0264	131	24		21-58-12	ALL
	13	UNUSED						ALL
	14		W0264	140	24		21-58-16	ALL
	15		W0264	141	22		21-58-16	ALL
	16		W0264	142	22		21-58-16	ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	DL	W0264	087	18		78-34-11	ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D05800

Page 32

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05854P		AF0204/ /		PLUG-P61 (continued)				ALL
	32	UNUSED						ALL
D05858J		AE0222/ /		RCPT-P6				ALL
	1		W1030	017	14		27-51-11	ALL
	2		W1030	018	14		27-51-11	ALL
	3		W1030	019	14		27-51-11	ALL
	4		W1030	016	12		24-51-52	ALL
	5		W1030	026	12		24-51-52	ALL
	6		W1030	027	12		24-51-52	ALL
	7		W1030	028	12		24-51-52	ALL
	8	UNUSED						ALL
D05858P		AE0222/ /		PLUG-P6				ALL
	1		W0272	001	14		27-51-11	ALL
	2		W0272	002	14		27-51-11	ALL
	3		W0272	003	14		27-51-11	ALL
	4		W0272	010	12		24-51-52	ALL
	5		W0272	011	12		24-51-52	ALL
	6		W0272	012	12		24-51-52	ALL
	7		W0272	013	12		24-51-52	ALL
	8	UNUSED						ALL
D05860J		AE0203/ /		RCPT-P33				ALL
	1		W0142	783	14		27-51-11	ALL
	2		W0142	784	14		27-51-11	ALL
	3		W0142	785	14		27-51-11	ALL
	4		W0142	773	12		24-51-52	ALL
	5		W0142	792	12		24-51-52	ALL
	6		W0142	793	12		24-51-52	ALL
	7		W0142	794	12		24-51-52	ALL
	8		W0142	788	18		25-29-11	ALL
	9		W0142	789	18		25-29-11	ALL
	10		W0142	028	18		25-29-11	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D05860P		AE0203/ /		PLUG-P33				ALL
	1		W0272	001	14		27-51-11	ALL
	2		W0272	002	14		27-51-11	ALL
	3		W0272	003	14		27-51-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05800

Page 33

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05860P		AE0203/ /		PLUG-P33 (continued)				ALL
	4		W0272	010	12		24-51-52	ALL
	5		W0272	011	12		24-51-52	ALL
	6		W0272	012	12		24-51-52	ALL
	7		W0272	013	12		24-51-52	ALL
	8		W0272	014	18		25-29-11	ALL
	9		W0272	015	18		25-29-11	ALL
	10		W0272	028	18		25-29-11	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D05861J		AE0320/ /		RCPT-E2-2				ALL
	1	UNUSED						ALL
	2		W1515	010	24		SPARE	ALL
	3		W1515	011	24		SPARE	ALL
	4		W1515	211Z			31-35-13	ALL
	5		W1515	005	24		SPARE	ALL
	6		W1515	207R	24		34-22-29	ALL
	7		W1515	207B	24		34-22-29	ALL
	8		W1515	207Z			34-22-29	ALL
	9		W1515	016	24		SPARE	050-099
	9		W1515	212Z			SPARE	150-199
	9	UNUSED						275-299
	10		W1515	017	24		SPARE	050-099
	10		W1515	213R	24		SPARE	150-199
	10	UNUSED						275-299
	11		W1515	018	24		SPARE	050-099
	11		W1515	213B	24		SPARE	150-199
	11	UNUSED						275-299
	12		W1515	019	24		SPARE	050-099
	12		W1515	213Z			SPARE	150-199
	12	UNUSED						275-299
	13		W1515	211R	24		31-35-13	ALL
	14		W1515	211B	24		31-35-13	ALL
	15		W1515	022	24		22-12-21	ALL
	16		W1515	209R	24		22-12-21	ALL
	17		W1515	209B	24		22-12-21	ALL
	18		W1515	209Z			22-12-21	ALL
	19		W1515	014	24		SPARE	050-099
	19		W1515	212R	24		SPARE	150-199
	19	UNUSED						275-299

HOOKUP LIST
D280T132

91-21-51
Section D05800
Page 34
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05861J		AE0320/ /		RCPT-E2-2 (continued)				ALL
	20		W1515	015	24		SPARE	050-099
	20		W1515	212B	24		SPARE	150-199
	20	UNUSED						275-299
	21		W1515	013	24		34-33-21	ALL
	22		W1515	210R	24		34-22-28	ALL
	23		W1515	210B	24		34-22-28	ALL
	24		W1515	210Z			34-22-28	ALL
D05861P		AE0320/ /		PLUG-E2-2				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W0143	227Z			31-35-13	ALL
	5	UNUSED						ALL
	6		W0143	213R	24		34-22-29	ALL
	7		W0143	213B	24		34-22-29	ALL
	8		W0143	213Z			34-22-29	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13		W0143	227R	24		31-35-13	ALL
	14		W0143	227B	24		31-35-13	ALL
	15		W0143	010	24		22-12-21	ALL
	16		W0143	215R	24		22-12-21	ALL
	17		W0143	215B	24		22-12-21	ALL
	18		W0143	215Z			22-12-21	ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21		W0143	009	24		34-33-21	ALL
	22		W0143	218R	24		34-22-28	ALL
	23		W0143	218B	24		34-22-28	ALL
	24		W0143	218Z			34-22-28	ALL
D05862J		AE0218/ /		RCPT-P37				ALL
	1		W1118	021	18		27-81-21	ALL
	2		W1118	022	18		27-81-21	ALL
	3		W1118	023	18		27-81-21	ALL
	4		W1118	031	20		27-81-11	ALL
	5		W1118	032	20		27-81-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05800

Page 35

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05862J		AE0218/ /		RCPT-P37 (continued)				ALL
	6		W1118	033	20		27-81-11	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
D05862P		AE0218/ /		PLUG-P37				ALL
	1		W0272	004	18		27-81-21	ALL
	2		W0272	005	18		27-81-21	ALL
	3		W0272	006	18		27-81-21	ALL
	4		W0272	007	20		27-81-11	ALL
	5		W0272	008	20		27-81-11	ALL
	6		W0272	009	20		27-81-11	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
D05867J		AE0319/ /		RCPT-E1-2				ALL
	1		W1499	201R	24		22-41-13	ALL
	2		W1499	201B	24		22-41-13	ALL
	3		W1499	201Z			22-41-13	ALL
	4		W1499	004	24		22-41-13	ALL
	5		W1499	005	24		22-41-13	ALL
	6		W1499	006	24		22-41-13	ALL
	7		W1499	007	24		22-41-13	ALL
	8		W1499	008	24		22-41-13	ALL
	9		W1499	009	24		22-41-13	ALL
	10		W1499	010	24		22-41-13	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14		W1499	014	24		22-41-13	ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D05800
Page 36
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05867J		AE0319/ /		RCPT-E1-2 (continued)				ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
D05867P		AE0319/ /		PLUG-E1-2				ALL
	1		W1103	231R	24		22-41-13	ALL
	2		W1103	231B	24		22-41-13	ALL
	3		W1103	231Z			22-41-13	ALL
	4		W1103	084	24		22-41-13	ALL
	5		W1103	085	24		22-41-13	ALL
	6		W1103	076	24		22-41-13	ALL
	7		W1103	077	24		22-41-13	ALL
	8		W1103	078	24		22-41-13	ALL
	9		W1103	079	24		22-41-13	ALL
	10		W1103	080	24		22-41-13	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14		W1103	081	20		22-41-13	ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D05800

Page 37

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05867P		AE0319/ /		PLUG-E1-2 (continued)				ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
D05868J		AE0222/ /		RCPT-P6				ALL
	1		W1030	020	18		27-81-21	ALL
	2		W1030	021	18		27-81-21	ALL
	3		W1030	022	18		27-81-21	ALL
	4		W1030	023	20		27-81-11	ALL
	5		W1030	024	20		27-81-11	ALL
	6		W1030	025	20		27-81-11	ALL
	7		W1030	032	18		25-29-11	ALL
	8		W1030	033	18		25-29-11	ALL
	9		W1030	040	22		30-31-21	ALL
	10		W1030	041	22		30-31-23	ALL
	11		W1030	055	18		25-29-11	ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
D05868P		AE0222/ /		PLUG-P6				ALL
	1		W0272	004	18		27-81-21	ALL
	2		W0272	005	18		27-81-21	ALL
	3		W0272	006	18		27-81-21	ALL
	4		W0272	007	20		27-81-11	ALL
	5		W0272	008	20		27-81-11	ALL
	6		W0272	009	20		27-81-11	ALL
	7		W0272	014	18		25-29-11	ALL
	8		W0272	015	18		25-29-11	ALL
	9		W0272	025	22		30-31-21	ALL
	10		W0272	026	22		30-31-23	ALL
	11		W0272	028	18		25-29-11	ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
D05870J		0215/270/R046		RCPT-				ALL
	1		W0622	010	20		30-41-11	ALL
	2		W0622	020	20		30-41-11	ALL
	3		W0622	203B	24		30-41-11	ALL

HOOKUP LIST
D280T132

91-21-51
Section D05800
Page 38
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05870J		0215/270/R046		RCPT- (continued)				ALL
	4		W0622	203R	24		30-41-11	ALL
	5		W0622	204B	24		30-41-11	ALL
	6		W0622	204R	24		30-41-11	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	DED		W0622	203Z			30-41-11	ALL
	DED		W0622	204Z			30-41-11	ALL
D05870P		0215/270/R046		PLUG-				ALL
	1		W1156	100K	20		30-41-11	ALL
	2		W1156	101O	20		30-41-11	ALL
	3		W1156	102Y	22		30-41-11	ALL
	4		W1156	103G	22		30-41-11	ALL
	5		W1156	104R	22		30-41-11	ALL
	6		W1156	105N	22		30-41-11	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D05872J		0196/264/L043		RCPT-				ALL
	1		W1158	A-A			30-41-12	ALL
	2		W1158	A-B			30-41-12	ALL
	3		W1158	B-A			30-41-12	ALL
	4		W1158	B-B			30-41-12	ALL
	5		W1158	C-A			30-41-12	ALL
	6		W1158	C-B			30-41-12	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D05800

Page 39

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05872P		0196/264/L043		PLUG-				ALL
	1		W0624	100K	20		30-41-12	ALL
	2		W0624	101O	20		30-41-12	ALL
	3		W0624	102Y	22		30-41-12	ALL
	4		W0624	103G	22		30-41-12	ALL
	5		W0624	104R	22		30-41-12	ALL
	6		W0624	105N	22		30-41-12	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D05874J		AC1402/ /		RCPT-P49				ALL
	1		W1256	032	24		38-15-11	ALL
	2		W1256	033	24		38-15-11	ALL
	3		W1256	034	24		38-15-11	ALL
	4	DK	W1256	051	18		38-32-11	ALL
	5		W1256	022	24		36-11-41	ALL
	6	UNUSED						050-099, 162-199, 275-299
	6		W1256	023	24		36-11-41	150-157
	7		W1256	024	22		36-11-41	ALL
	8		W1256	025	24		36-11-41	ALL
	9	DK	W1256	079	18		38-32-14	ALL
	10	UNUSED						050-099
	10		W1256	814	22		SPARE	150-199, 275-299
	11		W1256	815	20		SPARE	ALL
	12	UNUSED						ALL
	13	DK	W1256	047	18		38-15-11	ALL
	14	DK	W1256	048	18		38-15-11	ALL
	15	DK	W1256	049	18		38-15-11	ALL
D05874P		AC1402/ /		PLUG-P49				ALL
	1		W0030	056	24		38-15-11	ALL
	2		W0030	026	22		38-15-11	ALL
	3		W0030	002	24		38-15-11	ALL
	4	DL	W0030	017	18		38-32-11	ALL
	5		W0030	034	24		36-11-41	ALL
	6	UNUSED						050-099, 162-199, 275-299

HOOKUP LIST
D280T132

91-21-51
Section D05800
Page 40
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05874P		AC1402/ /		PLUG-P49 (continued)				ALL
	6		W0030	035	24		36-11-41	150-157
	7		W0030	039	22		36-11-41	ALL
	8		W0030	036	24		36-11-41	ALL
	9	DL	W0030	138	18		38-32-14	050-099, 150-199, 277-299
	9	UNUSED						275-276
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	DL	W0030	010	18		38-15-11	ALL
	14	DL	W0030	011	18		38-15-11	ALL
	15	DL	W0030	012	18		38-15-11	ALL
D05878J		AE0320/ /		RCPT-E2-4				ALL
	1		W0738	057	20		28-41-23	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	=C1		W0738	057Z			28-41-23	ALL
D05878P		AE0320/ /		PLUG-E2-4				ALL
	1		W0098	058	24		28-41-23	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	=C1		W0098	058Z			28-41-23	ALL
D05880J		AL1002/ /		RCPT-				ALL
	1	UNUSED						ALL
	2		W0738	061	24		28-41-23	ALL
	3		W0738	062	24		28-41-23	ALL
	4		W0738	063	24		28-41-23	ALL
	5		W0738	058	24		28-41-23	ALL
	6	UNUSED						ALL
	7		W0738	060	24		28-41-23	ALL
	8		W0738	084	22		SPARE	050-099, 150-199, 277-278
	8	UNUSED						275-276, 280-299
	9	UNUSED						ALL
	C1	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D05800

Page 41

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05880P		AL1002/ /		PLUG-R WING RS/BODY				ALL
	1	UNUSED						ALL
	2		W0448	0YEL	20		28-41-23	ALL
	3		W0448	0GRN	20		28-41-23	ALL
	4		W0448	0BLK	20		28-41-23	ALL
	5		W0448	0RED	20		28-41-23	ALL
	6	UNUSED						ALL
	7		W0448	0BLU	20		28-41-23	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	C1	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
D05884J		AL1001/ /		RCPT-				ALL
	1	UNUSED						ALL
	2		W0596	108	24		28-41-23	ALL
	3		W0596	109	24		28-41-23	ALL
	4		W0596	110	24		28-41-23	ALL
	5		W0596	111	24		28-41-23	ALL
	6		W0596	112	24		28-41-23	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	C1	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
D05884P		AL1001/ /		PLUG-L WING RS/BODY				ALL
	1	UNUSED						ALL
	2		W0454	0RED	20		28-41-23	ALL
	3		W0454	0BLU	20		28-41-23	ALL
	4		W0454	0YEL	20		28-41-23	ALL
	5		W0454	0GRN	20		28-41-23	ALL
	6		W0454	0BLK	20		28-41-23	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	C1	UNUSED						ALL
	10	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D05800
Page 42
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05884P		AL1001/ /		PLUG-L WING RS/BODY (continued)				ALL
	11	UNUSED						ALL
D05886J		AC0506/ /		RCPT-P35				ALL
	1		W1066	801	24		52-34-12	ALL
	2		W1066	802	24		52-34-12	ALL
	3		W1066	803	24		52-34-12	ALL
	4		W1066	804	24		52-34-12	ALL
	5	UNUSED						ALL
	6		W1066	526	24		52-34-12	ALL
	7		W1066	817	24		52-34-12	050-099
	7		W1066	807	24		52-34-12	150-199, 275-299
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11		W1066	057	20		33-31-61	ALL
	12		W1066	058	20		33-31-61	ALL
	13	DK	W1066	041	18		33-37-11	ALL
	14		W1066	042	20		33-37-11	050-099
	14	DK	W1066	042	18		33-37-11	150-199, 275-299
	15	DK	W1066	043	18		33-37-11	ALL
D05886P		AC0506/ /		PLUG-P35				ALL
	1		W1134	001	22		52-34-12	ALL
	2		W1134	002	22		52-34-12	ALL
	3		W1134	003	22		52-34-12	ALL
	4		W1134	031	22		52-34-12	ALL
	5	UNUSED						ALL
	6		W1134	008	22		52-34-12	ALL
	7		W1134	007	22		52-34-12	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11		W1134	011	20		33-31-61	ALL
	12		W1134	012	20		33-31-61	ALL
	13	DL	W1134	013	18		33-37-11	ALL
	14		W1134	014	20		33-37-11	050-099
	14	DL	W1134	014	18		33-37-11	150-199, 275-299
	15	DL	W1134	015	18		33-37-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05800

Page 43

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05888J		AC1304/ /		RCPT-P39				ALL
	1		W1068	801	24		52-35-12	ALL
	2		W1068	802	24		52-35-12	ALL
	3		W1068	803	24		52-35-12	ALL
	4		W1068	804	24		52-35-12	ALL
	5		W1068	805	24		52-35-12	ALL
	6		W1068	526	24		52-35-12	ALL
	7		W1068	807	24		52-35-12	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11		W1068	057	20		33-31-61	ALL
	12		W1068	058	20		33-31-61	ALL
	13	DK	W1068	041	18		33-37-21	050-099
	13	FM	W1068	041	16		33-37-21	150-199, 275-299
	14		W1068	042	20		33-37-21	050-099
	14	DK	W1068	042	18		33-37-21	150-199, 275-299
	15		W1068	043	20		33-37-21	050-099
	15	DK	W1068	043	18		33-37-21	150-199, 275-299
D05888P		AC1304/ /		PLUG-P39				ALL
	1		W1136	001	22		52-35-12	ALL
	2		W1136	002	22		52-35-12	ALL
	3		W1136	003	22		52-35-12	ALL
	4		W1136	004	22		52-35-12	ALL
	5		W1136	005	22		52-35-12	ALL
	6		W1136	008	22		52-35-12	ALL
	7		W1136	007	22		52-35-12	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11		W1136	011	20		33-31-61	ALL
	12		W1136	012	20		33-31-61	ALL
	13	DL	W1136	013	18		33-37-21	050-099
	13	FL	W1136	013	16		33-37-21	150-199, 275-299
	14		W1136	014	20		33-37-21	050-099
	14	FL	W1136	014	16		33-37-21	150-199, 275-299
	15		W1136	015	20		33-37-21	050-099
	15	FL	W1136	015	16		33-37-21	150-199, 275-299

HOOKUP LIST

D280T132

91-21-51

Section D05800

Page 44

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05890J		AE0207/ /		RCPT-P33				ALL
	1		W0142	10H	20		28-22-31	ALL
	2		W0142	10I	20		28-22-31	ALL
	3		W0142	10T	22		28-22-31	ALL
	4		W0142	09B	16		28-22-11	ALL
	5		W0142	786	24		28-42-31	ALL
	6		W0142	02B	22		28-42-11	ALL
	7		W0142	09C	16		28-22-11	ALL
	8		W0142	790	22		28-42-12	ALL
	9	UNUSED						ALL
	10		W0142	09D	16		28-22-11	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	DED		W0142	10HZ			28-22-31	ALL
	DED		W0142	10IZ			28-22-31	ALL
	DED		W0142	10TZ			28-22-31	ALL
D05890P		AE0207/ /		PLUG-P33				ALL
	1		W1274	100	20		28-22-31	ALL
	2		W1274	102	20		28-22-31	ALL
	3		W1274	103	20		28-22-31	ALL
	4	FN	W1274	007	14		28-22-11	ALL
	5		W1274	002	22		28-42-31	ALL
	6		W1274	003	22		28-42-11	ALL
	7	FN	W1274	008	14		28-22-11	ALL
	8		W1274	001	22		28-42-12	ALL
	9	UNUSED						ALL
	10	FN	W1274	009	14		28-22-11	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	CAP	Y	W1274	010	20		SPARE	ALL
	DED		W1274	100Z			28-22-31	ALL
	DED		W1274	102Z			28-22-31	ALL
	DED		W1274	103Z			28-22-31	ALL
D05892J		AE0209/ /		RCPT-				ALL
	1		W0182	138	16		28-22-11	ALL
	2		W0182	139	16		28-22-11	ALL
	3		W0182	140	16		28-22-11	ALL
	4	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D05800

Page 45

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05892J		AE0209/ /		RCPT- (continued)				ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
D05892P		AE0209/ /		PLUG-P36				ALL
	1	FN	W0202	034	14		28-22-11	ALL
	2	FN	W0202	035	14		28-22-11	ALL
	3	FN	W0202	036	14		28-22-11	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W0202	026	18		SPARE	ALL
	7		W0202	801	18		SPARE	ALL
D05894J		AE0223/ /		RCPT-P36				ALL
	1		W0176	647	24		27-51-31	ALL
	2	UNUSED						050-099, 150-157, 275-276
	2		W0176	6A1	24		27-89-11	162-199
	2	DK	W0176	01V	18		25-31-31	277-299
	3		W0176	642	24		27-81-31	ALL
	4		W0176	75E	22		28-31-12	050-099, 155-199, 276-299
	4	UNUSED						150-154, 275
	5		W0176	81Z	20		78-34-11	ALL
	6		W0176	649	24		27-51-31	ALL
	7		W0176	644	24		27-81-31	ALL
	8		W0176	880	20		25-31-21	050-099, 150-199
	8	UNUSED						275-299
	9		W0176	75F	20		28-31-12	050-099, 155-199, 276-299
	9	UNUSED						150-154, 275
	10		W0176	75G	20		28-31-12	050-099, 155-199, 276-299
	10	UNUSED						150-154, 275
	11		W0176	53K	22		28-42-13	050-099, 155-199, 276-299
	11	UNUSED						150-154, 275
	12		W0176	6A1	24		27-89-11	050-099, 150-157, 275-299
	12	UNUSED						162-199
	13		W0176	53D	22		28-42-12	050-099, 155-199, 276-299
	13	UNUSED						150-154, 275
	14	UNUSED						ALL
	15		W0176	81ZZ			78-34-11	ALL
	16	UNUSED						ALL
	17		W0176	76P	20		28-31-12	050-099, 155-199, 277-299

HOOKUP LIST
D280T132

91-21-51
Section D05800
Page 46
Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05894J		AE0223/ /		RCPT-P36 (continued)				ALL
	17	UNUSED						150-154, 275-276
	18	UNUSED						050-099, 150-199
	18		W0176	880	18		25-31-21	275-299
	19	UNUSED						ALL
	20		W0176	06S	12		28-22-12	ALL
	21		W0176	83B	20		78-34-11	ALL
	22		W0176	06T	12		28-22-12	ALL
	23	UNUSED						ALL
	24		W0176	06U	12		28-22-12	ALL
	25	UNUSED						ALL
	DED		W0176	83BZ			78-34-11	ALL
	DED		W0176	53DZ			28-42-12	050-099, 155-199, 276-299
	DED		W0176	53KZ			28-42-13	050-099, 155-199, 276-299
	DED		W0176	75EZ			28-31-12	050-099, 155-199, 276-299
	DED		W0176	76PZ			28-31-12	050-099, 155-199, 277-299
D05894P		AE0223/ /		PLUG-P36				ALL
	1		W0752	027	24		27-51-31	ALL
	2	UNUSED						050-099, 150-157, 276
	2		W0752	123	22		27-89-11	162-199
	2	DL	W0752	025	20		SPARE	275
	2	DL	W0752	025	18		25-31-31	277-299
	3		W0752	029	24		27-81-31	ALL
	4		W0752	070	22		28-31-12	050-099, 155-199, 276-299
	4		W0752	081	22		SPARE	150-154, 275
	5		W0752	502	20		78-34-11	ALL
	6		W0752	004	20		27-51-31	ALL
	7		W0752	009	20		27-81-31	ALL
	8		W0752	047	20		25-31-21	050-099, 150-199
	8	UNUSED						275-299
	9		W0752	071	20		28-31-12	050-099, 155-199, 276-299
	9	UNUSED						150-154, 275
	10		W0752	090	20		28-31-12	050-099, 155-199, 276-299
	10	UNUSED						150-154, 275
	11		W0752	093	22		28-42-13	050-099, 155-199, 276-299
	11	UNUSED						150-154, 275
	12		W0752	123	22		27-89-11	050-099, 150-157, 275-299
	12	UNUSED						162-199
	13		W0752	091	22		28-42-12	050-099, 155-199, 276-299
	13	UNUSED						150-154, 275

HOOKUP LIST

D280T132

91-21-51

Section D05800

Page 47

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05894P		AE0223 /		PLUG-P36 (continued)				ALL
	14	UNUSED						ALL
	15		W0752	FRB			78-34-11	ALL
	16	UNUSED						ALL
	17		W0752	094	20		28-31-12	050-099, 155-199, 277-299
	17	UNUSED						150-154, 275-276
	18	UNUSED						050-099, 150-199
	18	FL	W0752	047	18		25-31-21	275-276
	18		W0752	047	18		25-31-21	277-299
	19		W0752	086	24		SPARE	ALL
	20		W0752	022	12		28-22-12	ALL
	21		W0752	501	20		78-34-11	ALL
	22		W0752	023	12		28-22-12	ALL
	23	UNUSED						ALL
	24		W0752	024	12		28-22-12	ALL
	25	UNUSED						ALL
	CAP	Y	W0752	031	20		SPARE	ALL
	CAP	Y	W0752	025	20		SPARE	150-154
			W0752	500	20		78-34-11	ALL
			W0752	501Z			78-34-11	ALL
			W0752	502Z			78-34-11	ALL
			W0752	FRB			78-34-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05800

Page 48 End

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05904J		AC1402/ /		RCPT-P49				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W0588	239R	24		21-51-12	ALL
	4		W0588	239B	24		21-51-12	ALL
	5	UNUSED						ALL
D05904P		AC1402/ /		PLUG-E6				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W0030	201R	24		21-51-12	ALL
	4		W0030	201B	24		21-51-12	ALL
	5	UNUSED						ALL
D05906J		AF0204/ /		RCPT-P61				ALL
	1		W0066	501	20		24-51-72	050-099, 162-164, 276
	1	UNUSED						150-157, 165-199, 275, 277-299
	2		W0066	79A	20		30-81-11	050-099, 150-199
	2	UNUSED						275-299
	3		W0066	79C	20		30-81-11	050-099, 150-199
	3	UNUSED						275-299
	4	UNUSED						ALL
	5		W0066	05F	22		30-32-11	ALL
	6		W0066	79D	20		SPARE	050-099, 155-199
	6	UNUSED						150-154, 275-299
	7	UNUSED						050-099, 275-299
	7		W0066	79F	20		73-21-16	150-199
	8		W0066	79H	20		30-81-11	050-099, 150-199
	8	UNUSED						275-299
	9		W0066	79J	20		30-81-11	050-099, 150-199
	9	UNUSED						275-299
	10	UNUSED						ALL
	11		W0066	79L	22		30-11-11	050-099, 150-199
	11	UNUSED						275-299
	12		W0066	79M	22		30-11-11	050-099, 150-199
	12	UNUSED						275-299
	13		W0066	79N	22		30-11-11	050-099, 150-199
	13	UNUSED						275-299
	14		W0066	79P	22		30-11-11	050-099, 150-199
	14	UNUSED						275-299
	15		W0066	79V	22		30-11-11	050-099, 150-199

HOOKUP LIST

D280T132

91-21-51

Section D05900

Page 1

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05906J		AF0204/ /		RCPT-P61 (continued)				ALL
	15	UNUSED						275-299
	16		W0066	852	22		30-11-11	050-099, 150-199
	16	UNUSED						275-299
	17		W0066	56K	22		30-32-21	ALL
	18		W0066	56C	22		30-11-11	050-099, 150-199
	18	UNUSED						275-299
	19		W0066	63R	24		52-71-11	ALL
	20		W0066	05E	22		30-31-11	ALL
	21		W0066	781	24		30-31-21	ALL
	22		W0066	56F	24		30-31-21	ALL
	23		W0066	75K	22		21-66-21	050-099, 162-199
	23	UNUSED						150-157, 275-299
	24		W0066	75L	22		21-66-21	050-099, 162-199
	24	UNUSED						150-157, 275-299
	25		W0066	75M	22		21-66-21	050-099, 162-199
	25	UNUSED						150-157, 275-299
	26		W0066	75N	22		21-66-21	050-099, 162-199
	26	UNUSED						150-157, 275-299
	27		W0066	234R	22		21-66-21	050-099, 162-199
	27	UNUSED						150-157, 275-299
	28		W0066	234B	22		21-66-21	050-099, 162-199
	28	UNUSED						150-157, 275-299
	29		W0066	234Z			21-66-21	050-099, 162-199
	29	UNUSED						150-157, 275-299
	30		W0066	75R	22		21-66-41	050-099, 162-199
	30	UNUSED						150-157, 275-299
	31		W0066	75T	22		21-66-41	050-099, 162-199
	31	UNUSED						150-157, 275-299
	32		W0066	75H	22		21-66-21	050-099, 162-199
	32	UNUSED						150-157, 275-299
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D05900
Page 2
Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05906P		AF0204/ /		PLUG-P61				ALL
	1		W0902	118	20		24-51-72	050-099, 162-164, 276
	1	UNUSED						150-154, 275
	1		W0902	118	20		SPARE	155-157, 165-199, 277-299
	2		W0902	01L	20		30-81-11	050-099, 150-199
	2	UNUSED						275-299
	3		W0902	01R	20		30-81-11	050-099, 150-199
	3	UNUSED						275-299
	4	UNUSED						ALL
	5		W0902	078	22		30-32-11	ALL
	6	UNUSED						ALL
	7		W0902	01H	20		73-21-16	050-099, 155-199
	7	UNUSED						150-154, 275-299
	8		W0902	01J	20		30-81-11	050-099, 162-199
	8		W0902	01J	22		30-81-11	150-157
	8	UNUSED						275-299
	9		W0902	01K	20		30-81-11	050-099, 150-199
	9	UNUSED						275-299
	10	UNUSED						ALL
	11		W0902	01B	22		30-11-11	050-099, 150-199
	11	UNUSED						275-299
	12		W0902	01C	22		30-11-11	050-099, 150-199
	12	UNUSED						275-299
	13		W0902	01D	22		30-11-11	050-099, 150-199
	13	UNUSED						275-299
	14		W0902	01E	22		30-11-11	050-099, 150-199
	14	UNUSED						275-299
	15		W0902	01F	22		30-11-11	050-099, 150-199
	15	UNUSED						275-299
	16		W0902	034	22		30-11-11	050-099, 150-199
	16	UNUSED						275-299
	17		W0902	090	22		30-32-21	ALL
	18		W0902	033	22		30-11-11	050-099, 150-199
	18	UNUSED						275-299
	19		W0902	092	24		52-71-11	ALL
	20		W0902	110	22		30-31-11	ALL
	21		W0902	113	24		30-31-21	ALL
	22		W0902	112	24		30-31-21	ALL
	23		W0902	122	22		21-66-21	050-099, 162-199
	23	UNUSED						150-157, 275-299
	24		W0902	129	22		21-66-21	050-099, 162-199

HOOKUP LIST

D280T132

91-21-51

Section D05900

Page 3

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05906P		AF0204/ /		PLUG-P61 (continued)				ALL
	24	UNUSED						150-157, 275-299
	25	UNUSED	W0902	132	22		21-66-21	050-099, 162-199
	25	UNUSED						150-157, 275-299
	26	UNUSED	W0902	133	22		21-66-21	050-099, 162-199
	26	UNUSED						150-157, 275-299
	27	UNUSED	W0902	204R	22		21-66-21	050-099, 162-199
	27	UNUSED						150-157, 275-299
	28	UNUSED	W0902	204B	22		21-66-21	050-099, 162-199
	28	UNUSED						150-157, 275-299
	29	UNUSED	W0902	204Z			21-66-21	050-099, 162-199
	29	UNUSED						150-157, 275-299
	30	UNUSED	W0902	124	22		21-66-41	050-099, 162-199
	30	UNUSED						150-157, 275-299
	31	UNUSED	W0902	125	22		21-66-41	050-099, 162-199
	31	UNUSED						150-157, 275-299
	32	UNUSED	W0902	127	22		21-66-21	050-099, 162-199
	32	UNUSED						150-157, 275-299
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
D05908J		AE0203/ /		RCPT-P33				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D05900
Page 4
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05908J		AE0203/ /		RCPT-P33 (continued)				ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16		W0142	587	22		30-11-11	050-099, 150-154, 156-199
	16		W0142	588	22		30-11-11	155
	16	UNUSED						275-299
	17		W0142	588	22		30-11-11	050-099, 150-154, 156-199
	17		W0142	587	22		30-11-11	155
	17	UNUSED						275-299
	18		W0142	854	22		30-32-21	ALL
	19		W0142	894	22		30-31-11	ALL
	20		W0142	638	24		30-31-21	ALL
	21		W0142	644	24		30-31-21	ALL
	22		W0142	02Q	22		30-32-11	ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
D05908P		AE0203/ /		PLUG-P33				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D05900

Page 5

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05908P		AE0203/ /		PLUG-P33 (continued)				ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16		W0902	033	22		30-11-11	050-099, 150-154, 156-199
	16		W0902	034	22		30-11-11	155
	16	UNUSED						275-299
	17		W0902	034	22		30-11-11	050-099, 150-154, 156-199
	17		W0902	033	22		30-11-11	155
	17	UNUSED						275-299
	18		W0902	079	22		30-32-21	ALL
	19		W0902	110	22		30-31-11	ALL
	20		W0902	112	24		30-31-21	ALL
	21		W0902	113	24		30-31-21	ALL
	22		W0902	078	22		30-32-11	ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D05900

Page 6

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05910J		AF0204/ /		RCPT-P61				ALL
	1		W0062	51N	12		21-58-14	ALL
	2		W0062	51P	12		21-58-14	ALL
	3		W0062	51R	12		21-58-14	ALL
	4		W0062	66U	16		28-22-11	ALL
	5		W0062	66V	16		28-22-11	ALL
	6		W0062	66W	16		28-22-11	ALL
	7		W0062	66X	16		28-22-11	ALL
	8		W0062	66Y	16		28-22-11	ALL
	9		W0062	66Z	16		28-22-11	050-099, 150-156, 162-166, 275-276
	9		W0062	67F	16		28-22-11	157, 167-199, 277-299
	10	UNUSED						050-099, 155-199, 276-299
	10		W0062	61E	18		36-11-51	150-154, 275
	11	UNUSED						ALL
	12	UNUSED						ALL
D05910P		AF0204/ /		PLUG-P61				ALL
	1		W0572	192	12		21-58-14	ALL
	2		W0572	193	12		21-58-14	ALL
	3		W0572	194	12		21-58-14	ALL
	4		W0572	586	16		28-22-11	ALL
	5		W0572	587	16		28-22-11	ALL
	6		W0572	588	16		28-22-11	ALL
	7		W0572	589	16		28-22-11	ALL
	8		W0572	590	16		28-22-11	ALL
	9		W0572	591	16		28-22-11	ALL
	10		W0572	801	16		SPARE	050-099, 155-199, 276-299
	10		W0572	801	16		36-11-51	150-154, 275
	11		W0572	802	16		SPARE	ALL
	12		W0572	803	16		SPARE	ALL
D05912J		AP0403/ /		RCPT-P19				050-099
D05912J		AP0403/ /		RCPT-				150-199, 275-299
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						050-099, 150-199
	3		W1104	122	20		33-21-11	275-299
	4	UNUSED						050-099
	4		W1104	122	20		33-21-11	150-199
	4		W1104	567	20		33-21-11	275-299
	5		W1104	007	20		33-21-11	050-099

HOOKUP LIST

D280T132

91-21-51

Section D05900

Page 7

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05912J		AP0403/ /		RCPT-P19 (continued)				050-099
D05912J		AP0403/ /		RCPT- (continued)				150-199, 275-299
	5		W1104	042	20		33-21-11	150-199
	5		W1104	614	20		33-21-11	275-299
	6	UNUSED						050-099
	6		W1104	046	20		33-21-11	150-199
	6		W1104	152	20		33-21-11	275-299
	7		W1104	036	20		33-21-11	050-099, 150-199
	7		W1104	042	20		33-21-11	275-299
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						150-199, 275-299
	17	UNUSED						150-199, 275-299
	18	UNUSED						150-199, 275-299
	19	UNUSED						150-199, 275-299
	20	UNUSED						150-199, 275-299
	21	UNUSED						150-199, 275-299
	22	UNUSED						150-199, 275-299
	23	UNUSED						150-199, 275-299
	24	UNUSED						150-199, 275-299
D05912P		AP0403/ /		PLUG-P19				ALL
	1	UNUSED						050-099, 150-199, 275-278
	1		W0822	682	22		SPARE	280-299
	2	UNUSED						050-099, 150-199, 275-278
	2		W0822	683	22		SPARE	280-299
	3	UNUSED						050-099, 150-199
	3		W0822	067	20		33-21-11	275-299
	4	UNUSED						050-099
	4		W0822	054	20		33-21-13	150-199
	4		W0822	162	20		33-21-11	275-299
	5		W0822	807	20		33-21-11	050-099
	5		W0822	042	20		33-21-11	150-199, 275-299
	6	UNUSED						050-099
	6		W0822	038	20		33-21-11	150-199, 275-299

HOOKUP LIST

D280T132

91-21-51
 Section D05900
 Page 8
 Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05912P		AP0403/ /		PLUG-P19 (continued)				ALL
	7		W0822	080	20		33-21-11	ALL
	8	UNUSED						ALL
	9	UNUSED						050-099, 150-199, 275-278
	9		W0822	679	22		SPARE	280-299
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						150-199, 275-299
	17	UNUSED						150-199, 275-299
	18	UNUSED						150-199, 275-299
	19	UNUSED						150-199, 275-299
	20	UNUSED						150-199, 275-299
	21	UNUSED						150-199, 275-299
	22	UNUSED						150-199, 275-299
	23	UNUSED						150-199, 275-299
	24	UNUSED						150-199, 275-299
D05914J		AP1005/ /		RCPT-P25				050-099
D05914J		AP1005/ /		RCPT-				150-199, 275-299
	1	UNUSED						050-099, 150-199
	1		W1108	050	22		33-22-42	275-299
	2	UNUSED						050-099, 150-199
	2		W1108	051	22		33-22-42	275-299
	3		W1108	090	20		33-21-12	050-099, 150-199
	3		W1108	028	20		33-21-12	275-299
	4		W1108	631	20		33-21-12	050-099
	4		W1108	029	20		33-21-12	150-199, 275-278
	4		W1108	073	20		33-21-12	280-299
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						050-099, 275-278
	8		W1108	631	20		33-21-12	150-199, 280-299
	9	UNUSED						ALL
	10	UNUSED						050-099, 150-199
	10		W1108	090	20		33-21-12	275-299
	11	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D05900

Page 9

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05914J		AP1005/ /		RCPT-P25 (continued)				050-099
D05914J		AP1005/ /		RCPT- (continued)				150-199, 275-299
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
D05914P		AP1005/ /		PLUG-P25				ALL
	1	UNUSED						050-099, 150-199
	1		W0822	017	22		33-22-42	275-299
	2	UNUSED						050-099, 150-199
	2		W0822	018	22		33-22-42	275-299
	3		W0822	156	20		33-21-13	ALL
	4		W0822	136	20		33-21-13	050-099
	4		W0822	097	20		33-21-13	150-199, 275-299
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						050-099, 275-278
	8		W0822	039	20		33-21-11	150-199, 280-299
	9	UNUSED						ALL
	10	UNUSED						050-099, 150-199
	10		W0822	054	20		33-21-13	275-278
	10		W0822	054	20		33-21-11	280-299
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
D05916J		AP1003/ /		RCPT-P25				050-099
D05916J		AP1003/ /		RCPT-				150-199, 275-299
	1		W1108	024	20		33-21-12	ALL
	2		W1108	026	20		33-21-12	050-099
	2		W1108	075	20		33-21-12	150-199, 275-299
	3	UNUSED						050-099, 150-199
	3		W1108	651	20		33-21-12	275-299
	4	UNUSED						ALL
	5	UNUSED						050-099
	5		W1108	027	20		33-21-12	150-199, 275-299
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D05900

Page 10

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05916J		AP1003/ /		RCPT-P25 (continued)				050-099
D05916J		AP1003/ /		RCPT- (continued)				150-199, 275-299
	9	UNUSED						ALL
	10	UNUSED						ALL
D05916P		AP1003/ /		PLUG-P25				ALL
	1		W0824	027	20		33-21-14	ALL
	2		W0824	054	20		33-21-14	050-099, 150-199
	2		W0824	030	20		33-21-14	275-299
	3	UNUSED						050-099, 150-199
	3		W0824	043	20		33-21-14	275-299
	4	UNUSED						ALL
	5	UNUSED						050-099
	5		W0824	098	20		33-21-14	150-199, 275-299
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
D05918J		AF0232/ /		RCPT-P6				ALL
	1		W0046	038	16		28-22-11	ALL
	2		W0046	039	16		28-22-11	ALL
	3		W0046	040	16		28-22-11	ALL
	4		W0046	041	16		28-22-11	ALL
	5		W0046	042	16		28-22-11	ALL
	6		W0046	043	16		28-22-11	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
D05918P		AF0232/ /		PLUG-P6				ALL
	1		W0062	66U	16		28-22-11	ALL
	2		W0062	66V	16		28-22-11	ALL
	3		W0062	66W	16		28-22-11	ALL
	4		W0062	66X	16		28-22-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05900

Page 11

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05918P		AF0232/ /		PLUG-P6 (continued)				ALL
	5		W0062	66Y	16		28-22-11	ALL
	6		W0062	66Z	16		28-22-11	050-099, 150-156, 162-166, 275-276
	6		W0062	67F	16		28-22-11	157, 167-199, 277-299
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
D05920J		AF0232/ /		RCPT-P6				ALL
	1		W0048	048	16		28-22-11	ALL
	2		W0048	049	16		28-22-11	ALL
	3		W0048	050	16		28-22-11	ALL
	4		W0048	051	16		28-22-11	ALL
	5		W0048	052	16		28-22-11	ALL
	6		W0048	053	16		28-22-11	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10		W0048	027	12		21-58-15	ALL
	11		W0048	026	12		21-58-15	ALL
	12		W0048	025	12		21-58-15	ALL
D05920P		AF0232/ /		PLUG-P6				ALL
	1		W0066	66U	16		28-22-11	ALL
	2		W0066	66V	16		28-22-11	ALL
	3		W0066	66W	16		28-22-11	ALL
	4		W0066	66X	16		28-22-11	ALL
	5		W0066	66Y	16		28-22-11	ALL
	6		W0066	66Z	16		28-22-11	050-099, 150-156, 162-166, 275-276
	6		W0066	67F	16		28-22-11	157, 167-199, 277-299
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10		W0066	51X	12		21-58-15	ALL
	11		W0066	51W	12		21-58-15	ALL
	12		W0066	51V	12		21-58-15	ALL

HOOKUP LIST
D280T132

91-21-51
Section D05900
Page 12
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05928J		AF0204/ /		RCPT-P61				ALL
	1		W0066	51V	12		21-58-15	ALL
	2		W0066	51W	12		21-58-15	ALL
	3		W0066	51X	12		21-58-15	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W0066	66U	16		28-22-11	ALL
	8		W0066	66V	16		28-22-11	ALL
	9		W0066	66W	16		28-22-11	ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D05928P		AF0204/ /		PLUG-P61				ALL
	1		W0506	595	12		21-58-15	ALL
	2		W0506	596	12		21-58-15	ALL
	3		W0506	597	12		21-58-15	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W0506	682	16		28-22-11	ALL
	8		W0506	683	16		28-22-11	ALL
	9		W0506	684	16		28-22-11	ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D05930J		AE0223/ /		RCPT-P36				ALL
	1		W0176	95A	22		21-66-11	050-099, 162-199
	1	UNUSED						150-157, 275-299
	2		W0176	20T	22		30-21-11	050-099, 150-199
	2	UNUSED						275-299
	3	UNUSED						ALL
	4		W0176	894	16		28-22-11	ALL
	5		W0176	895	16		28-22-11	ALL
	6		W0176	896	16		28-22-11	ALL
	7		W0176	897	16		28-22-11	ALL
	8		W0176	898	16		28-22-11	ALL
	9		W0176	899	16		28-22-11	ALL
	10	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D05900

Page 13

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05930P		AE0223/ /		PLUG-P36				ALL
	1		W0572	690	22		21-66-11	050-099, 162-199
	1	UNUSED						150-157, 275-299
	2		W0572	710	22		30-21-11	050-099, 150-199
	2	UNUSED						275-299
	3	UNUSED						ALL
	4		W0572	586	16		28-22-11	ALL
	5		W0572	587	16		28-22-11	ALL
	6		W0572	588	16		28-22-11	ALL
	7		W0572	589	16		28-22-11	ALL
	8		W0572	590	16		28-22-11	ALL
	9		W0572	591	16		28-22-11	ALL
	10	UNUSED						ALL
D05932J		AE0320/ /		RCPT-E2-1				ALL
	1	UNUSED						ALL
	2		W0624	012	24		30-41-12	ALL
	3		W0624	013	24		30-41-12	ALL
	4		W0624	014	22		30-41-12	ALL
	5		W0624	005	24		30-41-12	ALL
	6		W0624	006	22		30-41-12	ALL
	7		W0624	007	24		30-41-12	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D05932P		AE0320/ /		PLUG-E2-1				ALL
	1	UNUSED						ALL
	2		W1120	003	24		30-41-12	ALL
	3		W1120	005	24		30-41-12	ALL
	4		W1120	004	22		30-41-12	ALL
	5		W1120	007	24		30-41-12	ALL
	6		W1120	006	22		30-41-12	ALL
	7		W1120	008	24		30-41-12	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D05900
Page 14
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05934J		AF0232/ /		RCPT-P6				ALL
	1		W0046	033	12		21-58-14	ALL
	2		W0046	044	12		28-22-12	ALL
	3	UNUSED						ALL
	4		W0046	045	12		28-22-12	ALL
	5	UNUSED						ALL
	6		W0046	046	12		28-22-12	ALL
	7	UNUSED						ALL
	8		W0046	034	12		21-58-14	ALL
	9	UNUSED						ALL
	10		W0046	035	12		21-58-14	ALL
	11		W0046	022	22		30-31-11	ALL
	12		W0046	023	22		30-31-11	ALL
	13		W0046	024	22		30-31-13	ALL
	14		W0046	025	22		30-31-13	ALL
	15		W0046	007	22		30-32-11	ALL
	16	UNUSED						ALL
	17		W0046	008	22		30-33-11	ALL
	18		W0046	009	22		30-34-11	ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21		W0046	001	22		25-11-11	ALL
	22		W0046	002	22		25-11-11	ALL
	23		W0046	003	22		25-11-11	ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	DED		W0046	007Z			30-32-11	ALL
	DED		W0046	008Z			30-33-11	ALL
D05934P		AF0232/ /		PLUG-P6				ALL
	1		W0062	51N	12		21-58-14	ALL
	2		W0062	67A	12		28-22-12	ALL
	3	UNUSED						ALL
	4		W0062	67B	12		28-22-12	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05900

Page 15

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05934P		AF0232/ /		PLUG-P6 (continued)				ALL
	5	UNUSED						ALL
	6		W0062	67C	12		28-22-12	ALL
	7	UNUSED						ALL
	8		W0062	51P	12		21-58-14	ALL
	9	UNUSED						ALL
	10		W0062	51R	12		21-58-14	ALL
	11		W0062	56G	22		30-31-11	ALL
	12		W0062	56H	22		30-31-11	ALL
	13		W0062	06J	22		30-31-13	ALL
	14		W0062	06K	22		30-31-13	ALL
	15		W0062	56L	22		30-32-11	ALL
	16	UNUSED						ALL
	17		W0062	56M	22		30-33-11	ALL
	18		W0062	56N	22		30-34-11	ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21		W0062	66K	22		25-11-11	ALL
	22		W0062	66L	22		25-11-11	ALL
	23		W0062	66M	22		25-11-11	ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
D05936J		AL0201/ /		RCPT-P40				ALL
	1	UNUSED						ALL
	2		W0678	002R	18		26-22-21	050-099, 155-199, 275-299
	2		W1132	001R	18		26-22-21	150-154
	3	UNUSED						ALL
	4		W0678	004R	18		26-22-21	050-099, 155-199, 275-299
	4		W1132	A-B			26-22-21	150-154
	5	UNUSED						ALL
	6		W0678	021R	18		49-61-11	050-099, 155-199, 275-299
	6		W1132	A-D			49-61-11	150-154
	7		W0678	006R	18		26-22-21	050-099, 155-199, 275-299

HOOKUP LIST
D280T132

91-21-51
Section D05900
Page 16
Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05936J		AL0201/ /		RCPT-P40 (continued)				ALL
	7		W1132	005R	18		26-22-21	150-154
	8		W0678	007R	18		26-15-12	050-099, 155-199, 275-299
	8		W1132	019R	18		26-15-12	150-154
	9	UNUSED						050-099, 150-199
	9		W0678	022R	18		26-22-21	275-299
	10	UNUSED						050-099, 150-199
	10		W0678	023R	18		26-22-21	275-299
	11		W0678	001R	18		26-22-21	050-099, 155-199, 275-299
	11		W1132	007R	18		26-22-21	150-154
	12		W0678	005R	18		26-15-12	050-099, 155-199, 275-299
	12		W1132	011R	18		26-15-12	150-154
	13		W0678	003R	18		26-15-12	050-099, 155-199, 275-299
	13		W1132	014R	18		26-15-12	150-154
	14		W0678	014R	18		26-15-12	050-099, 155-199, 275-299
	14		W1132	012R	18		26-15-12	150-154
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
D05936P		AL0201/ /		PLUG-P40				ALL
	1	UNUSED						ALL
	2		W1132	001R	18		26-22-21	050-099, 155-199, 275-299
	2		W0678	002R	18		26-22-21	150-154
	3	UNUSED						ALL
	4		W1132	A-B			26-22-21	050-099, 155-199, 275-299
	4		W0678	004R	18		26-22-21	150-154
	5	UNUSED						ALL
	6		W1132	A-D			49-61-11	050-099, 155-199, 275-299
	6		W0678	021R	18		49-61-11	150-154
	7		W1132	005R	18		26-22-21	050-099, 155-199, 275-299
	7		W0678	006R	18		26-22-21	150-154
	8		W1132	019R	18		26-15-12	050-099, 155-199, 275-299
	8		W0678	007R	18		26-15-12	150-154
	9	UNUSED						050-099, 150-199
	9		W1132	017R	18		26-22-21	275-299
	10	UNUSED						050-099, 150-199
	10		W1132	A-G			26-22-21	275-299
	11		W1132	007R	18		26-22-21	050-099, 155-199, 275-299

HOOKUP LIST

D280T132

91-21-51

Section D05900

Page 17

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05936P		AL0201/ /		PLUG-P40 (continued)				ALL
	11		W0678	001R	18		26-22-21	150-154
	12		W1132	011R	18		26-15-12	050-099, 155-199, 275-299
	12		W0678	005R	18		26-15-12	150-154
	13		W1132	014R	18		26-15-12	050-099, 155-199, 275-299
	13		W0678	003R	18		26-15-12	150-154
	14		W1132	012R	18		26-15-12	050-099, 155-199, 275-299
	14		W0678	014R	18		26-15-12	150-154
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
D05938J		AL0201/ /		RCPT-P40				ALL
	1		W0678	012	18		23-43-11	050-099, 155-199, 275-299
	1		W1130	001	18		23-43-11	150-154
	2		W0678	013	18		23-43-11	050-099, 155-199, 275-299
	2		W1130	002	18		23-43-11	150-154
	3		W0678	204B	20		23-41-11	050-099, 155-199, 275-299
	3		W1130	A-B			23-41-11	150-154
	4		W0678	204R	20		23-41-11	050-099, 155-199, 275-299
	4		W1130	A-A			23-41-11	150-154
	5		W0678	204Z			23-41-11	050-099, 155-199, 275-299
	5		W1130	A-C			23-41-11	150-154
	6		W0678	205B	20		23-51-11	050-099, 155-199, 275-299
	6		W1130	A-E			23-51-11	150-154
	7		W0678	205R	20		23-51-11	050-099, 155-199, 275-299
	7		W1130	A-D			23-51-11	150-154
	8		W0678	205Z			23-51-11	050-099, 155-199, 275-299
	8		W1130	A-F			23-51-11	150-154
	9		W0678	015	18		33-51-21	050-099, 155-199, 275-299
	9		W1130	003	18		33-51-21	150-154
	10		W0678	016	18		33-51-21	050-099, 155-199, 275-299
	10		W1130	004	18		33-51-21	150-154
	11		W0678	017	18		33-51-21	050-099, 155-199, 275-299
	11		W1130	005	18		33-51-21	150-154
	12		W0678	018	18		33-31-11	050-099, 155-199, 275-299
	12		W1130	006	18		33-31-11	150-154
	13		W0678	019	18		33-31-11	050-099, 155-199, 275-299
	13		W1130	007	18		33-31-11	150-154

HOOKUP LIST
D280T132

91-21-51
Section D05900
Page 18
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05938J		AL0201 / /		RCPT-P40 (continued)				ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
D05938P		AL0201 / /		PLUG				050-099
D05938P		AL0201 / /		PLUG-P40				150-199, 275-299
	1		W1130	001	18		23-43-11	050-099, 155-199, 275-299
	1		W0678	012	18		23-43-11	150-154
	2		W1130	002	18		23-43-11	050-099, 155-199, 275-299
	2		W0678	013	18		23-43-11	150-154
	3		W1130	A-B			23-41-11	050-099, 155-199, 275-299
	3		W0678	204B	20		23-41-11	150-154
	4		W1130	A-A			23-41-11	050-099, 155-199, 275-299
	4		W0678	204R	20		23-41-11	150-154
	5		W1130	A-C			23-41-11	050-099, 155-199, 275-299
	5		W0678	204Z			23-41-11	150-154
	6		W1130	A-E			23-51-11	050-099, 155-199, 275-299
	6		W0678	205B	20		23-51-11	150-154
	7		W1130	A-D			23-51-11	050-099, 155-199, 275-299
	7		W0678	205R	20		23-51-11	150-154
	8		W1130	A-F			23-51-11	050-099, 155-199, 275-299
	8		W0678	205Z			23-51-11	150-154
	9		W1130	003	18		33-51-21	050-099, 155-199, 275-299
	9		W0678	015	18		33-51-21	150-154
	10		W1130	004	18		33-51-21	050-099, 155-199, 275-299
	10		W0678	016	18		33-51-21	150-154
	11		W1130	005	18		33-51-21	050-099, 155-199, 275-299
	11		W0678	017	18		33-51-21	150-154
	12		W1130	006	18		33-31-11	050-099, 155-199, 275-299
	12		W0678	018	18		33-31-11	150-154
	13		W1130	007	18		33-31-11	050-099, 155-199, 275-299
	13		W0678	019	18		33-31-11	150-154
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D05900

Page 19

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05938P		AL0201/ /		PLUG (continued)				050-099
D05938P		AL0201/ /		PLUG-P40 (continued)				150-199, 275-299
	19	UNUSED						ALL
D05942J		AP1501/ /		RCPT-TAIL/BODY				ALL
	1		W0512	001	20		27-23-11	ALL
	2		W0512	002	20		27-23-11	ALL
	3		W0512	003	20		27-23-11	ALL
	4	UNUSED						050-099
	4		W0512	006	18		32-71-11	150-199, 275-299
	5	UNUSED						050-099
	5		W0512	008	18		32-71-11	150-199, 275-299
	6	UNUSED						ALL
	7	UNUSED						ALL
D05942P		AP1501/ /		PLUG-TAIL/BODY				ALL
	1		W0748	005	22		27-23-11	ALL
	2		W0748	004	20		27-23-11	ALL
	3		W0748	007	20		27-23-11	ALL
	4	UNUSED						050-099
	4		W0748	011	18		32-71-11	150-199, 275-299
	5	UNUSED						050-099
	5		W0748	012	18		32-71-11	150-199, 275-299
	6	UNUSED						ALL
	7	UNUSED						ALL
D05946J		AE0203/ /		RCPT-P33				ALL
	1		W0142	721	20		30-71-21	050-099
	1		W0142	170	20		30-71-21	150-199
	1		W0142	774	22		30-71-21	275-299
	2		W0142	715	20		30-71-21	050-099, 155-199
	2		W0142	715	22		30-71-21	150-154, 275-299
	3		W0142	816	20		30-71-21	050-099, 155-199
	3		W0142	816	22		30-71-21	150-154, 275-299
	4		W0142	173	20		30-71-21	050-099
	4		W0142	820	20		30-71-21	150-199
	4		W0142	820	22		30-71-21	275-299
	5		W0142	819	20		30-71-21	050-099
	5		W0142	19S	20		30-71-21	150-199
	5		W0142	819	22		30-71-21	275-299
	6		W0142	698	20		30-71-21	050-099, 155-199

HOOKUP LIST

D280T132

91-21-51
 Section D05900
 Page 20
 Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05946J		AE0203/ /		RCPT-P33 (continued)				ALL
	6		W0142	698	22		30-71-21	150-154, 275-299
	7		W0142	01H	20		30-71-22	050-099
	7	UNUSED						150-199, 275-299
	8		W0142	817	20		30-71-21	050-099, 155-199
	8		W0142	817	22		30-71-21	150-154, 275-299
	9	UNUSED						ALL
	10		W0142	19T	20		30-71-21	050-099, 150-199
	10		W0142	697	22		30-71-21	275-299
	11		W0142	687	20		30-71-21	050-099, 150-199
	11		W0142	023	22		30-71-21	275-299
	12	UNUSED						ALL
	13		W0142	882	20		30-71-22	050-099
	13		W0142	882	22		30-71-22	150-199, 275-299
	14	UNUSED						050-099
	14		W0142	883	22		30-71-22	150-154, 275-299
	14		W0142	883	20		30-71-22	155-199
	15	UNUSED						050-099, 275-299
	15		W0142	831	22		30-71-22	150-199
	16		W0142	878	20		30-71-22	050-099
	16		W0142	822	22		30-71-22	150-199
	16		W0142	853	22		30-71-22	275-299
	17		W0142	879	20		30-71-22	050-099
	17		W0142	879	22		30-71-22	150-199, 275-299
	18		W0142	829	20		30-71-22	050-099, 155-199
	18		W0142	829	22		30-71-22	150-154, 275-299
	19		W0142	19P	20		30-71-21	050-099, 150-199
	19	UNUSED						275-299
	20		W0142	19N	20		30-71-21	050-099, 150-199
	20	UNUSED						275-299
	21		W0142	19M	20		30-71-21	050-099, 150-199
	21	UNUSED						275-299
	22		W0142	19L	20		30-71-21	050-099, 150-199
	22	UNUSED						275-299
	23		W0142	04J	20		30-71-22	050-099
	23		W0142	19R	20		30-71-21	150-199
	23	UNUSED						275-299
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						050-099, 275-299

HOOKUP LIST

D280T132

91-21-51

Section D05900

Page 21

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05946J		AE0203/ /		RCPT-P33 (continued)				ALL
	27		W0142	718	22		30-71-22	150-199
	28		W0142	801	20		30-71-22	050-099
	28		W0142	801	22		30-71-22	150-199, 275-299
	29	UNUSED						050-099, 150-199
	29		W0142	06R	22		30-71-22	275-299
	30	UNUSED						ALL
	31	UNUSED						ALL
	32		W0142	164	20		30-71-21	050-099, 150-199
	33		W0142	101	20		30-71-21	050-099, 155-199
	33	UNUSED						150-154
	34	UNUSED						050-099
	34		W0142	157	20		30-71-21	150-199
	35	UNUSED						050-099
	35		W0142	158	20		30-71-21	150-199
	36	UNUSED						050-099
	36		W0142	159	20		30-71-21	150-199
	37	UNUSED						050-099, 150-199
	38	UNUSED						050-099
	38		W0142	161	20		30-71-21	150-199
	39	UNUSED						050-099, 150-199
	40		W0142	171	20		30-71-21	050-099, 150-199
	41	UNUSED						050-099, 150-199
	42	UNUSED						050-099, 150-199
	43	UNUSED						050-099, 150-199
	44	UNUSED						050-099, 150-199
	45	UNUSED						050-099, 150-199
	46	UNUSED						050-099, 150-199
	47	UNUSED						050-099, 150-199
	48	UNUSED						050-099, 150-199
	49	UNUSED						050-099, 150-199
	50	UNUSED						050-099, 150-199
	51	UNUSED						050-099, 150-199
	52	UNUSED						050-099, 150-199
	53	UNUSED						050-099, 150-199
	54	UNUSED						050-099, 150-199
	55	UNUSED						050-099, 150-199
D05946P		AE0203/ /		PLUG-P33				ALL
	1		W1258	001	20		30-71-21	050-099, 150-199
	1		W1258	001	22		30-71-21	275-299

HOOKUP LIST
D280T132

91-21-51
Section D05900
Page 22
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05946P		AE0203/ /		PLUG-P33 (continued)				ALL
	2		W1258	002	20		30-71-21	050-099, 150-199
	2		W1258	002	22		30-71-21	275-299
	3		W1258	003	20		30-71-21	050-099, 150-199
	3		W1258	003	22		30-71-21	275-299
	4		W1258	004	22		30-71-21	050-099, 275-299
	4		W1258	004	20		30-71-21	150-199
	5		W1258	005	22		30-71-21	050-099, 275-299
	5		W1258	005	20		30-71-21	150-199
	6		W1258	006	20		30-71-21	050-099, 150-199
	6		W1258	006	22		30-71-21	275-299
	7		W1258	648	20		30-71-22	050-099
	7	UNUSED						150-199, 275-299
	8		W1258	061	20		30-71-21	050-099, 150-199
	8		W1258	061	22		30-71-21	275-299
	9	UNUSED						ALL
	10		W1258	063	20		30-71-21	050-099, 150-199
	10		W1258	063	22		30-71-21	275-299
	11		W1258	069	20		30-71-21	050-099, 150-199
	11		W1258	069	22		30-71-21	275-299
	12	UNUSED						ALL
	13		W1258	086	20		30-71-22	050-099
	13		W1258	086	22		30-71-22	150-199, 275-299
	14	UNUSED						050-099
	14		W1258	088	22		30-71-22	150-154
	14		W1258	088	20		30-71-22	155-199
	14		W1258	055	22		30-71-22	275-299
	15	UNUSED						050-099, 275-299
	15		W1258	074	22		30-71-22	150-199
	16		W1258	076	20		30-71-22	050-099
	16		W1258	076	22		30-71-22	150-199, 275-299
	17		W1258	078	20		30-71-22	050-099
	17		W1258	078	22		30-71-22	150-199
	17		W1258	632	22		30-71-22	275-299
	18		W1258	082	20		30-71-22	050-099, 155-199
	18		W1258	082	22		30-71-22	150-154, 275-299
	19		W1258	187	20		30-71-21	050-099, 150-199
	19	UNUSED						275-299
	20		W1258	185	20		30-71-21	050-099, 150-199
	20	UNUSED						275-299
	21		W1258	184	20		30-71-21	050-099, 150-199

HOOKUP LIST

D280T132

91-21-51

Section D05900

Page 23

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05946P		AE0203/ /		PLUG-P33 (continued)				ALL
	21	UNUSED						275-299
	22		W1258	183	20		30-71-21	050-099, 150-199
	22	UNUSED						275-299
	23		W1258	649	20		30-71-22	050-099
	23		W1258	188	20		30-71-21	150-199
	23	UNUSED						275-299
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						050-099, 275-299
	27		W1258	132	22		30-71-22	150-199
	28		W1258	133	20		30-71-22	050-099
	28		W1258	133	22		30-71-22	150-199
	28		W1258	142	22		30-71-22	275-299
	29	UNUSED						050-099, 150-199
	29		W1258	631	22		30-71-22	275-299
	30	UNUSED						ALL
	31	UNUSED						ALL
	32		W1258	600	20		30-71-21	050-099, 150-199
	33		W1258	646	20		30-71-21	050-099
	33	UNUSED						150-154
	33		W1258	211	20		30-71-21	155-199
	34	UNUSED						050-099
	34		W1258	602	20		30-71-21	150-199
	35	UNUSED						050-099
	35		W1258	603	20		30-71-21	150-199
	36	UNUSED						050-099
	36		W1258	604	20		30-71-21	150-199
	37	UNUSED						050-099, 150-199
	38	UNUSED						050-099
	38		W1258	606	20		30-71-21	150-199
	39	UNUSED						050-099, 150-199
	40		W1258	174	20		30-71-21	050-099, 155-199
	40		W1258	174	22		30-71-21	150-154
	41	UNUSED						050-099, 150-199
	42	UNUSED						050-099, 150-199
	43	UNUSED						050-099, 150-199
	44	UNUSED						050-099, 150-199
	45	UNUSED						050-099, 150-199
	46	UNUSED						050-099, 150-199

HOOKUP LIST

D280T132

91-21-51

Section D05900

Page 24

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05946P		AE0203/ /		PLUG-P33 (continued)				ALL
	47	UNUSED						050-099, 150-199
	48	UNUSED						050-099, 150-199
	49	UNUSED						050-099, 150-199
	50	UNUSED						050-099, 150-199
	51	UNUSED						050-099, 150-199
	52	UNUSED						050-099, 150-199
	53	UNUSED						050-099, 150-199
	54	UNUSED						050-099, 150-199
	55	UNUSED						050-099, 150-199
D05948J		AC1201/ /		RCPT-				ALL
	1		W0580	110	24		21-44-11	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
D05948P		AC1201/ /		PLUG-				ALL
	1		W0934	002	24		21-44-11	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
D05950J		AC1201/ /		RCPT-				ALL
	1		W0578	022	24		21-44-11	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
D05950P		AC1201/ /		PLUG-				ALL
	1		W0934	001	24		21-44-11	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
D05952J		AE0209/ /		RCPT-P36				ALL
	1		W0182	129	22		38-32-12	050-099, 165, 275-276

HOOKUP LIST
D280T132

91-21-51
Section D05900
Page 25
Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05952J		AE0209/ /		RCPT-P36 (continued)				ALL
	1		W0182	129	20		38-32-12	150-155, 162-164
	1	DK	W0182	041	18		38-32-12	156
	1	UNUSED						157, 166-199, 277-299
	2		W0182	123	22		38-32-11	050-099, 275-299
	2		W0182	123	20		38-32-11	150-199
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W0182	512	24		21-44-21	ALL
	6		W0182	124	22		38-32-11	050-099, 155, 165, 275-276
	6		W0182	124	20		38-32-11	150-154, 156-164, 166-199
	6	DK	W0182	124	18		38-32-11	277-299
	7	UNUSED						050-099, 150-199, 277-299
	7		W0182	034	24		21-44-21	275-276
	8	UNUSED						050-099, 150-199, 277-299
	8		W0182	035	24		21-44-21	275-276
	9	DK	W0182	150	18		38-32-14	050-099, 150-154
	9	UNUSED						155-199, 277-299
	9		W0182	152	20		38-32-14	275-276
	10	DK	W0182	151	18		38-32-14	ALL
	11		W0182	156	20		38-32-11	050-099, 155-199, 277-299
	11	UNUSED						150-154, 275
	11		W0182	156	20		SPARE	276
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						050-099, 150-199
	14		W0182	196	12		21-73-11	275-299
	15	UNUSED						ALL
	16	UNUSED						050-099, 150-199
	16		W0182	197	12		21-73-11	275-299
	17	UNUSED						ALL
	18	UNUSED						050-099, 150-199
	18		W0182	198	12		21-73-11	275-299
	19	UNUSED						ALL
	20		W0182	120	12		38-32-11	ALL
	21	UNUSED						ALL
	22		W0182	121	12		38-32-11	ALL
	23	UNUSED						ALL
	24		W0182	122	12		38-32-11	ALL
	25	UNUSED						ALL
	CAP	Y	W0182	034	24		SPARE	051-099, 150-154

HOOKUP LIST

D280T132

91-21-51

Section D05900

Page 26

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05952J		AE0209/ /		RCPT-P36 (continued)				ALL
	CAP	Y	W0182	035	24		SPARE	051-099, 150-154
D05952P		AE0209/ /		PLUG-P36				ALL
	1		W0578	054	22		38-32-11	050-099, 275-276
	1		W0578	054	20		38-32-11	150-156, 162-165
	1	UNUSED						157, 166-199, 277-299
	2		W0578	059	22		38-32-11	050-099, 275-299
	2		W0578	059	20		38-32-11	150-199
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W0578	087	22		21-44-21	ALL
	6		W0578	053	22		38-32-11	050-099, 275-276
	6		W0578	053	20		38-32-11	150-156, 162-164
	6	DL	W0578	053	18		38-32-11	157, 165-199, 277-299
	7	UNUSED						050-099, 150-199, 277-299
	7		W0578	092	24		21-44-21	275-276
	8	UNUSED						050-099, 150-199, 277-299
	8		W0578	093	24		21-44-21	275-276
	9	DL	W0578	041	18		38-32-14	050-099, 150-154, 275-276
	9	UNUSED						155-199, 277-299
	10	DL	W0578	042	18		38-32-14	ALL
	11		W0578	067	20		38-32-11	050-099, 155-199, 277-299
	11	UNUSED						150-154, 275
	11		W0578	067	20		SPARE	276
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						050-099, 150-199
	14		W0578	134	12		21-73-11	275-299
	15	UNUSED						ALL
	16	UNUSED						050-099, 150-199
	16		W0578	135	12		21-73-11	275-299
	17	UNUSED						ALL
	18	UNUSED						050-099, 150-199
	18		W0578	136	12		21-73-11	275-299
	19	UNUSED						ALL
	20		W0578	056	12		38-32-11	ALL
	21	UNUSED						ALL
	22		W0578	057	12		38-32-11	ALL
	23		W0578	069	20		SPARE	050-099, 155, 162-165
	23	UNUSED						150-154, 156-157, 166-199, 275-299

HOOKUP LIST

D280T132

91-21-51

Section D05900

Page 27

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05952P		AE0209/ /		PLUG-P36 (continued)				ALL
	24		W0578	058	12		38-32-11	ALL
	25		W0578	068	20		SPARE	050-099, 155, 162-165
	25	UNUSED						150-154, 156-157, 166-199, 275-299
	CAP	Y	W0578	092	24		SPARE	051-099, 150-154
	CAP	Y	W0578	093	24		SPARE	051-099, 150-154
D05954J		AP1003/ /		RCPT-				150-154, 275-299
	1		W1106	114	22		SPARE	150-154
	1		W1106	114	22		38-32-12	275-276
	1		W1106	114	22		38-32-16	277-299
	2	UNUSED						150-154
	2		W1106	110	22		33-26-11	275-299
	3	UNUSED						150-154
	3	DK	W1106	111	18		38-32-12	275-276
	3	DK	W1106	111	18		38-32-16	277-299
	4	UNUSED						150-154
	4		W1106	109	16		38-13-11	275-299
	5	UNUSED						150-154
	5		W1106	119	20		25-42-11	275-299
	6	UNUSED						150-154, 275-299
	7	UNUSED						150-154
	7		W1106	116	20		33-26-11	275-299
	8	UNUSED						150-154
	8		W1106	142	22		33-25-11	275-299
	9	UNUSED						150-154
	9		W1106	141	22		33-26-11	275-299
	10	UNUSED						150-154
	10		W1106	115	20		33-26-21	275-299
	11	UNUSED						150-154, 275-299
	12	UNUSED						150-154
	12		W1106	140	20		33-24-11	275-299
D05954P		AP1003/ /		PLUG-P25				275-299
	1		W1276	020	22		38-32-12	275-276
	1		W1276	020	22		38-32-16	277-299
	2		W1276	043	22		33-26-11	275-299
	3	DL	W1276	015	18		38-32-12	275-276
	3	DL	W1276	019	18		38-32-16	277-299
	4		W1276	010	16		38-13-11	275-299
	5		W1276	021	20		25-42-11	275-299

HOOKUP LIST

D280T132

91-21-51

Section D05900

Page 28

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05954P		AP1003/ /		PLUG-P25 (continued)				275-299
	6	UNUSED						275-299
	7		W1276	004	20		33-26-11	275-299
	8		W1276	012	22		33-25-11	275-299
	9		W1276	003	22		33-26-11	275-299
	10		W1276	007	20		33-26-21	275-299
	11	UNUSED						275-299
	12		W1276	009	20		33-24-11	275-299
D05960J		AE0203/ /		RCPT-P33				ALL
	1	UNUSED						050-099, 150-199, 276-299
	1		W0142	838	22		30-71-22	275
	2	UNUSED						050-099, 150-199, 276-299
	2		W0142	826	22		30-71-23	275
	3	UNUSED						050-099, 150-199, 276-299
	3		W0142	736	22		30-71-23	275
	4	UNUSED						050-099, 150-199, 276-299
	4		W0142	815	22		30-71-21	275
	5	UNUSED						050-099, 150-199, 276-299
	5		W0142	821	20		30-71-22	275
	6	UNUSED						050-099, 155-199, 276-299
	6		W0142	828	20		SPARE	150-154
	6		W0142	828	20		30-71-22	275
	7	UNUSED						050-099, 150-199, 276-299
	7		W0142	771	22		30-71-23	275
	8	UNUSED						050-099, 150-199, 276-299
	8		W0142	732	22		30-71-22	275
	9		W0142	633	22		30-31-21	ALL
	10		W0142	868	22		30-31-23	ALL
D05960P		AE0203/ /		PLUG-P33				ALL
	1	UNUSED						050-099, 150-199, 276-299
	1		W0272	021	22		30-71-22	275
	2	UNUSED						050-099, 150-199, 276-299
	2		W0272	019	20		30-71-23	275
	3	UNUSED						050-099, 150-199, 276-299
	3		W0272	020	20		30-71-23	275
	4	UNUSED						050-099, 155-199, 276-299
	4		W0272	018	22		SPARE	150-154
	4		W0272	018	22		30-71-21	275
	5	UNUSED						050-099, 155-199, 276-299

HOOKUP LIST

D280T132

91-21-51

Section D05900

Page 29

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05960P		AE0203/ /		PLUG-P33 (continued)				ALL
	5		W0272	022	20		30-71-22	150-154, 275
	6	UNUSED						050-099, 155-199, 276-299
	6		W0272	024	22		SPARE	150-154
	6		W0272	023	20		30-71-22	275
	7	UNUSED						050-099, 150-199, 276-299
	7		W0272	027	20		30-71-23	275
	8	UNUSED						050-099, 155-199, 276-299
	8		W0272	021	22		SPARE	150-154
	8		W0272	024	22		30-71-22	275
	9		W0272	025	22		30-31-21	ALL
	10		W0272	026	22		30-31-23	ALL
D05962J		AE0218/ /		RCPT-P37				275
	1		W1118	144	22		30-71-22	275
	2		W1118	148	20		30-71-23	275
	3		W1118	149	20		30-71-23	275
	4		W1118	143	22		30-71-21	275
	5		W1118	145	20		30-71-22	275
	6		W1118	146	20		30-71-22	275
	7		W1118	188	20		30-71-23	275
	8		W1118	147	22		30-71-22	275
	9	UNUSED						275
	10	UNUSED						275
	11	UNUSED						275
	12	UNUSED						275
D05962P		AE0218/ /		PLUG-P37				150-154, 275
	1		W0272	021	22		SPARE	150-154
	1		W0272	021	22		30-71-22	275
	2	UNUSED						150-154
	2		W0272	019	20		30-71-23	275
	3	UNUSED						150-154
	3		W0272	020	20		30-71-23	275
	4		W0272	018	22		SPARE	150-154
	4		W0272	018	22		30-71-21	275
	5		W0272	022	20		30-71-22	150-154, 275
	6	UNUSED						150-154
	6		W0272	023	20		30-71-22	275
	7	UNUSED						150-154
	7		W0272	027	20		30-71-23	275

HOOKUP LIST

D280T132

91-21-51

Section D05900

Page 30

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05962P		AE0218/ /		PLUG-P37 (continued)				150-154, 275
	8		W0272	024	22		SPARE	150-154
	8		W0272	024	22		30-71-22	275
	9	UNUSED						150-154, 275
	10	UNUSED						150-154, 275
	11	UNUSED						150-154, 275
	12	UNUSED						150-154, 275
D05964J		0139/194/L010		RCPT-				ALL
	1		W0756	FRY			73-21-13	050-099, 157, 167-199, 277-299
	1		W0756	FRB			73-21-13	150-156, 162-166
	1	UNUSED						275-276
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W0756	302Y	24		73-21-13	ALL
	7		W0756	302B	24		73-21-13	ALL
	8		W0756	302R	24		73-21-13	ALL
	9	UNUSED						ALL
	10		W0756	FRX			73-21-13	050-099, 157, 167-199, 277-299
	10		W0756	FRA			73-21-13	150-156, 162-166
	10	UNUSED						275-276
	11		W0756	201B	24		73-21-13	ALL
	12		W0756	201R	24		73-21-13	ALL
			W0756	201Z			73-21-13	ALL
			W0756	302Z			73-21-13	ALL
			W0756	FR2			73-21-13	050-099, 157, 167-199, 277-299
			W0756	FR3			73-21-13	050-099, 157, 167-199, 277-299
			W0756	FRX			73-21-13	050-099, 157, 167-199, 277-299
			W0756	FRY			73-21-13	050-099, 157, 167-199, 277-299
			W0756	541	20		73-21-13	150-152
			W0756	542	20		73-21-13	150-152
			W0756	FRA			73-21-13	150-156, 162-166
			W0756	FRB			73-21-13	150-156, 162-166
			W0756	FRM			73-21-13	153-156, 162-166
			W0756	FRN			73-21-13	153-156, 162-166
			W0756	FRS			73-21-13	275-276
D05966J		0138/194/R010		RCPT-				ALL
	1		W0768	FRY			73-21-13	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05900

Page 31

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05966J		0138/194/R010		RCPT- (continued)				ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W0768	302R	24		73-21-13	ALL
	7		W0768	302B	24		73-21-13	ALL
	8		W0768	302Y	24		73-21-13	ALL
	9	UNUSED						ALL
	10		W0768	FRX			73-21-13	ALL
	11		W0768	201B	24		73-21-13	ALL
	12		W0768	201R	24		73-21-13	ALL
			W0768	143	20		73-21-13	050-099, 150-156, 162-166
			W0768	142	20		73-21-13	050-099, 150-156, 162-166, 275-276
			W0768	201Z			73-21-13	ALL
			W0768	302Z			73-21-13	ALL
			W0768	FRX			73-21-13	ALL
			W0768	FRY			73-21-13	ALL
			W0768	FR2			73-21-13	157, 167-199, 277-299
			W0768	FR3			73-21-13	157, 167-199, 277-299
D05968J		0372/280/L005		RCPT-				050-099, 276-299
D05968J		0373/280/L005		RCPT-				150-199, 275
	1	DK	W1138	001	18		33-24-13	ALL
	2	DK	W1138	002	18		33-24-13	ALL
	3		W1138	201B	22		23-31-16	ALL
	4		W1138	201R	22		23-31-16	ALL
	5		W1138	251B	22		23-31-16	050-099
	5		W1138	211B	22		23-31-16	150-199
	5	UNUSED						275-299
	6		W1138	251R	22		23-31-16	050-099
	6		W1138	211R	22		23-31-16	150-199
	7	UNUSED						050-099, 150-199
	8	UNUSED						050-099, 150-199
	9	UNUSED						050-099, 150-199
	10	UNUSED						050-099, 150-199
	11	UNUSED						050-099, 150-199
	12	UNUSED						050-099, 150-199

HOOKUP LIST

D280T132

91-21-51

Section D05900

Page 32

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05968P		0373/280/0000		PLUG-				050-099, 150-199, 275-278
D05968P		0373/280/L005		PLUG-				280-299
	1	DL	W0802	001	18		33-24-13	ALL
	2	DL	W0802	002	18		33-24-13	ALL
	3		W0802	201B	22		23-31-16	ALL
	4		W0802	201R	22		23-31-16	ALL
	5		W0802	202B	22		23-31-16	050-099, 150-199
	5	UNUSED						275-299
	6		W0802	202R	22		23-31-16	050-099, 150-199
	7	UNUSED						050-099, 150-199
	8	UNUSED						050-099, 150-199
	9	UNUSED						050-099, 150-199
	10	UNUSED						050-099, 150-199
	11	UNUSED						050-099, 150-199
	12	UNUSED						050-099, 150-199
D05970J		0504/280/L005		RCPT-				ALL
	1	DL	W1140	001	18		33-24-13	ALL
	2	DL	W1140	002	18		33-24-13	ALL
	3		W1140	201B	22		23-31-16	ALL
	4		W1140	201R	22		23-31-16	ALL
	5		W1140	251B	22		23-31-16	050-099
	5		W1140	221B	22		23-31-16	150-199
	5	UNUSED						275-299
	6		W1140	251R	22		23-31-16	050-099
	6		W1140	221R	22		23-31-16	150-199
	7	UNUSED						050-099, 150-199
	8	UNUSED						050-099, 150-199
	9	UNUSED						050-099, 150-199
	10	UNUSED						050-099, 150-199
	11	UNUSED						050-099, 150-199
	12	UNUSED						050-099, 150-199
D05970P		0504/280/L005		PLUG-				ALL
	1	DK	W1138	007	18		33-24-13	050-099, 276-299
	1	DK	W1138	026	18		33-24-13	150-199, 275
	2	DK	W1138	008	18		33-24-13	050-099, 276-299
	2	DK	W1138	027	18		33-24-13	150-199, 275
	3		W1138	207B	22		23-31-16	050-099, 276-299
	3		W1138	209B	22		23-31-16	150-199, 275

HOOKUP LIST

D280T132

91-21-51

Section D05900

Page 33

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05970P		0504/280/L005		PLUG- (continued)				ALL
	4		W1138	207R	22		23-31-16	050-099, 276-299
	4		W1138	209R	22		23-31-16	150-199, 275
	5		W1138	257B	22		23-31-16	050-099
	5		W1138	219B	22		23-31-16	150-199
	5	UNUSED						275-299
	6		W1138	257R	22		23-31-16	050-099
	6		W1138	219R	22		23-31-16	150-199
	7	UNUSED						050-099, 150-199
	8	UNUSED						050-099, 150-199
	9	UNUSED						050-099, 150-199
	10	UNUSED						050-099, 150-199
	11	UNUSED						050-099, 150-199
	12	UNUSED						050-099, 150-199
D05972J		0636/280/L005		RECP-				050-099
D05972J		0636/280/L005		PLUG-				150-199
D05972J		0636/280/L005		RCPT-				275-299
	1	DL	W1280	001	18		33-24-13	050-099, 150-199
	1	DL	W1142	001	18		33-24-13	275-299
	2	DL	W1280	002	18		33-24-13	050-099, 150-199
	2	DL	W1142	002	18		33-24-13	275-299
	3		W1280	201B	22		23-31-16	050-099, 150-199
	3		W1142	201B	22		23-31-16	275-299
	4		W1280	201R	22		23-31-16	050-099, 150-199
	4		W1142	201R	22		23-31-16	275-299
	5		W1280	251B	22		23-31-16	050-099
	5		W1280	238B	22		23-31-16	150-199
	5	UNUSED						275-299
	6		W1280	251R	22		23-31-16	050-099
	6		W1280	238R	22		23-31-16	150-199
	7	UNUSED						050-099, 150-199
	8	UNUSED						050-099, 150-199
	9	UNUSED						050-099, 150-199
	10	UNUSED						050-099, 150-199
	11	UNUSED						050-099, 150-199
	12	UNUSED						050-099, 150-199
D05972P		0636/280/L005		PLUG-				ALL
	1	DK	W1140	007	18		33-24-13	050-099, 276-299
	1	DK	W1140	026	18		33-24-13	150-199, 275

HOOKUP LIST
D280T132

91-21-51
Section D05900
Page 34
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05972P		0636/280/L005		PLUG- (continued)				ALL
	2	DK	W1140	008	18		33-24-13	050-099, 276-299
	2	DK	W1140	027	18		33-24-13	150-199, 275
	3		W1140	207B	22		23-31-16	050-099, 276-299
	3		W1140	217B	22		23-31-16	150-199
	3		W1140	219B	22		23-31-16	275
	4		W1140	207R	22		23-31-16	050-099, 276-299
	4		W1140	217R	22		23-31-16	150-199
	4		W1140	219R	22		23-31-16	275
	5		W1140	257B	22		23-31-16	050-099
	5		W1140	230B	22		23-31-16	150-199
	5	UNUSED						275-299
	6		W1140	257R	22		23-31-16	050-099
	6		W1140	230R	22		23-31-16	150-199
	7	UNUSED						050-099, 150-199
	8	UNUSED						050-099, 150-199
	9	UNUSED						050-099, 150-199
	10	UNUSED						050-099, 150-199
	11	UNUSED						050-099, 150-199
	12	UNUSED						050-099, 150-199
D05974J		0654+114/280/L005		RCPT-				275-299
	1	DL	W2062	001	18		33-24-13	275-299
	2	DL	W2062	002	18		33-24-13	275-299
	3		W2062	201B	22		23-31-16	275-299
	4		W2062	201R	22		23-31-16	275-299
	5	UNUSED						275-299
D05974P		0654+114/280/L005		PLUG-				275-299
	1	DK	W1142	026	18		33-24-13	275
	1	DK	W1142	007	18		33-24-13	276-299
	2	DK	W1142	027	18		33-24-13	275
	2	DK	W1142	008	18		33-24-13	276-299
	3		W1142	228B	22		23-31-16	275
	3		W1142	207B	22		23-31-16	276-299
	4		W1142	228R	22		23-31-16	275
	4		W1142	207R	22		23-31-16	276-299
	5	UNUSED						275-299
D05976J		0893/280/L005		RCPT-				050-099
	1	DL	W1144	001	18		33-24-13	050-099

HOOKUP LIST

D280T132

91-21-51

Section D05900

Page 35

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05976J		0893/280/L005		RCPT- (continued)				050-099
	2	DL	W1144	002	18		33-24-13	050-099
	3		W1144	201B	22		23-31-16	050-099
	4		W1144	201R	22		23-31-16	050-099
	5		W1144	251B	22		23-31-16	050-099
	6		W1144	251R	22		23-31-16	050-099
	7	UNUSED						050-099
	8	UNUSED						050-099
	9	UNUSED						050-099
	10	UNUSED						050-099
	11	UNUSED						050-099
	12	UNUSED						050-099
D05976P		0893/280/L005		PLUG-				050-099
	1	DK	W1280	009	18		33-24-13	050-099
	2	DK	W1280	010	18		33-24-13	050-099
	3		W1280	220B	22		23-31-16	050-099
	4		W1280	220R	22		23-31-16	050-099
	5		W1280	265B	22		23-31-16	050-099
	6		W1280	265R	22		23-31-16	050-099
	7	UNUSED						050-099
	8	UNUSED						050-099
	9	UNUSED						050-099
	10	UNUSED						050-099
	11	UNUSED						050-099
	12	UNUSED						050-099
D05978J		1025/280/L005		RCPT-				ALL
	1	DL	W1146	001	18		33-24-13	ALL
	2	DL	W1146	002	18		33-24-13	ALL
	3		W1146	201B	22		23-31-16	ALL
	4		W1146	201R	22		23-31-16	ALL
	5		W1146	251B	22		23-31-16	050-099
	5		W1146	209B	22		23-31-16	150-199
	5	UNUSED						275-299
	6		W1146	251R	22		23-31-16	050-099
	6		W1146	209R	22		23-31-16	150-199
	7	UNUSED						050-099, 150-199
	8	UNUSED						050-099, 150-199
	9	UNUSED						050-099, 150-199
	10	UNUSED						050-099, 150-199

HOOKUP LIST
D280T132

91-21-51
Section D05900
Page 36
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05978J		1025/280/L005		RCPT- (continued)				ALL
	11	UNUSED						050-099, 150-199
	12	UNUSED						050-099, 150-199
D05978P		1025/280/L005		PLUG-				ALL
	1	DK	W1144	007	18		33-24-13	050-099
	1	DK	W1280	034	18		33-24-13	150-199, 275-278
	1	DK	W1280	067	18		33-24-13	280-299
	2	DK	W1144	008	18		33-24-13	050-099
	2	DK	W1280	033	18		33-24-13	150-199, 275-278
	2	DK	W1280	068	18		33-24-13	280-299
	3		W1144	207B	22		23-31-16	050-099
	3		W1280	220B	22		23-31-16	150-199
	3		W1280	237B	22		23-31-16	275-278
	3		W1280	231B	22		23-31-16	280-299
	4		W1144	207R	22		23-31-16	050-099
	4		W1280	220R	22		23-31-16	150-199
	4		W1280	237R	22		23-31-16	275-278
	4		W1280	231R	22		23-31-16	280-299
	5		W1144	257B	22		23-31-16	050-099
	5		W1280	224B	22		23-31-16	150-199
	5	UNUSED						275-299
	6		W1144	257R	22		23-31-16	050-099
	6		W1280	224R	22		23-31-16	150-199
	7	UNUSED						050-099, 150-199
	8	UNUSED						050-099, 150-199
	9	UNUSED						050-099, 150-199
	10	UNUSED						050-099, 150-199
	11	UNUSED						050-099, 150-199
	12	UNUSED						050-099, 150-199
D05980J		1157/280/L005		RCPT-				ALL
	1	DL	W1148	001	18		33-24-13	ALL
	2	DL	W1148	002	18		33-24-13	ALL
	3		W1148	201B	22		23-31-16	ALL
	4		W1148	201R	22		23-31-16	ALL
	5		W1148	251B	22		23-31-16	050-099
	5		W1148	221B	22		23-31-16	150-199
	5	UNUSED						275-299
	6		W1148	251R	22		23-31-16	050-099
	6		W1148	221R	22		23-31-16	150-199

HOOKUP LIST

D280T132

91-21-51

Section D05900

Page 37

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05980J		1157/280/L005		RCPT- (continued)				ALL
	7	UNUSED						050-099, 150-199
	8	UNUSED						050-099, 150-199
	9	UNUSED						050-099, 150-199
	10	UNUSED						050-099, 150-199
	11	UNUSED						050-099, 150-199
	12	UNUSED						050-099, 150-199
D05980P		1157/280/L005		PLUG-				ALL
	1	DK	W1146	007	18		33-24-13	050-099, 276-299
	1	DK	W1146	026	18		33-24-13	150-199, 275
	2	DK	W1146	008	18		33-24-13	050-099, 276-299
	2	DK	W1146	027	18		33-24-13	150-199, 275
	3		W1146	207B	22		23-31-16	050-099, 276-299
	3		W1146	204B	22		23-31-16	150-199, 275
	4		W1146	207R	22		23-31-16	050-099, 276-299
	4		W1146	204R	22		23-31-16	150-199, 275
	5		W1146	257B	22		23-31-16	050-099
	5		W1146	259B	22		23-31-16	150-199
	5	UNUSED						275-299
	6		W1146	257R	22		23-31-16	050-099
	6		W1146	259R	22		23-31-16	150-199
	7	UNUSED						050-099, 150-199
	8	UNUSED						050-099, 150-199
	9	UNUSED						050-099, 150-199
	10	UNUSED						050-099, 150-199
	11	UNUSED						050-099, 150-199
	12	UNUSED						050-099, 150-199
D05982J		1289/280/L005		RCPT-				ALL
	1	DL	W1150	001	18		33-24-13	ALL
	2	DL	W1150	002	18		33-24-13	ALL
	3		W1150	201B	22		23-31-16	050-099, 276-299
	3		W1150	213B	22		23-31-16	150-199, 275
	4		W1150	201R	22		23-31-16	050-099, 276-299
	4		W1150	213R	22		23-31-16	150-199, 275
	5		W1150	251B	22		23-31-16	050-099
	5		W1150	253B	22		23-31-16	150-199
	5	UNUSED						275-299
	6		W1150	251R	22		23-31-16	050-099
	6		W1150	253R	22		23-31-16	150-199

HOOKUP LIST

D280T132

91-21-51

Section D05900

Page 38

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05982J		1289/280/L005		RCPT- (continued)				ALL
	7	UNUSED						050-099, 150-199
	8	UNUSED						050-099, 150-199
	9	UNUSED						050-099, 150-199
	10	UNUSED						050-099, 150-199
	11	UNUSED						050-099, 150-199
	12	UNUSED						050-099, 150-199
D05982P		1289/280/L005		PLUG-				ALL
	1	DK	W1148	007	18		33-24-13	050-099
	1	DK	W2064	026	18		33-24-13	150-199, 275
	1	DK	W2064	007	18		33-24-13	276-299
	2	DK	W1148	008	18		33-24-13	050-099
	2	DK	W2064	027	18		33-24-13	150-199, 275
	2	DK	W2064	008	18		33-24-13	276-299
	3		W1148	207B	22		23-31-16	050-099
	3		W2064	201B	22		23-31-16	150-199, 275
	3		W2064	207B	22		23-31-16	276-299
	4		W1148	207R	22		23-31-16	050-099
	4		W2064	201R	22		23-31-16	150-199, 275
	4		W2064	207R	22		23-31-16	276-299
	5		W1148	257B	22		23-31-16	050-099
	5		W2064	221B	22		23-31-16	150-199
	5	UNUSED						275-299
	6		W1148	257R	22		23-31-16	050-099
	6		W2064	221R	22		23-31-16	150-199
	7	UNUSED						050-099, 150-199
	8	UNUSED						050-099, 150-199
	9	UNUSED						050-099, 150-199
	10	UNUSED						050-099, 150-199
	11	UNUSED						050-099, 150-199
	12	UNUSED						050-099, 150-199
D05984J		1421/280/L005		RCPT-				ALL
	1	DL	W1152	001	18		33-24-13	ALL
	2	DL	W1152	002	18		33-24-13	ALL
	3		W1152	201B	22		23-31-16	ALL
	4		W1152	201R	22		23-31-16	ALL
	5		W1152	251B	22		23-31-16	050-099
	5		W1152	231B	22		23-31-16	150-199
	5	UNUSED						275-299

HOOKUP LIST

D280T132

91-21-51

Section D05900

Page 39

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05984J		1421/280/L005		RCPT- (continued)				ALL
	6		W1152	251R	22		23-31-16	050-099
	6		W1152	231R	22		23-31-16	150-199
	7	UNUSED						050-099, 150-199
	8	UNUSED						050-099, 150-199
	9	UNUSED						050-099, 150-199
	10	UNUSED						050-099, 150-199
	11	UNUSED						050-099, 150-199
	12	UNUSED						050-099, 150-199
D05984P		1421/280/L005		PLUG-				ALL
	1	DK	W1150	007	18		33-24-13	050-099, 276-299
	1	DK	W1150	026	18		33-24-13	150-199, 275
	2	DK	W1150	008	18		33-24-13	050-099, 276-299
	2	DK	W1150	027	18		33-24-13	150-199, 275
	3		W1150	207B	22		23-31-16	050-099, 276-299
	3		W1150	223B	22		23-31-16	150-199, 275
	4		W1150	207R	22		23-31-16	050-099, 276-299
	4		W1150	223R	22		23-31-16	150-199, 275
	5		W1150	257B	22		23-31-16	050-099
	5		W1150	263B	22		23-31-16	150-199
	5	UNUSED						275-299
	6		W1150	257R	22		23-31-16	050-099
	6		W1150	263R	22		23-31-16	150-199
	7	UNUSED						050-099, 150-199
	8	UNUSED						050-099, 150-199
	9	UNUSED						050-099, 150-199
	10	UNUSED						050-099, 150-199
	11	UNUSED						050-099, 150-199
	12	UNUSED						050-099, 150-199
D05988J		AC0701/ /		RCPT-				ALL
	1		W0942	220R	22		21-51-12	ALL
	2		W0942	220B	22		21-51-12	ALL
	3		W0942	126	24		21-51-11	ALL
	4		W0942	224R	22		21-52-31	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W0942	224B	22		21-52-31	ALL
	8		W0942	149	24		36-21-11	ALL
	9		W0942	218B	22		21-52-31	ALL

HOOKUP LIST
D280T132

91-21-51
Section D05900
Page 40
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05988J		AC0701/ /		RCPT- (continued)				ALL
	10		W0942	218R	22		21-52-31	ALL
	11		W0942	219B	22		21-52-31	ALL
	12		W0942	219R	22		21-52-31	ALL
	13		W0942	217B	22		21-52-31	ALL
	14		W0942	217R	22		21-52-31	ALL
	15	UNUSED						ALL
	16		W0942	168	24		21-61-41	ALL
	17		W0942	169	24		21-61-41	ALL
	18		W0942	323Y	24		21-61-41	ALL
	19		W0942	323R	24		21-61-41	ALL
	20		W0942	323B	24		21-61-41	ALL
	21		W0942	324B	24		21-64-11	ALL
	22		W0942	324Y	24		21-64-11	ALL
	23		W0942	324R	24		21-64-11	ALL
	24		W0942	172	24		21-61-11	ALL
	25		W0942	173	24		21-61-11	ALL
	26		W0942	174	24		21-61-21	ALL
	27		W0942	175	24		21-61-21	ALL
	28		W0942	176	24		21-61-31	ALL
	29		W0942	177	24		21-61-31	ALL
	30		W0942	179	24		21-61-41	ALL
	31		W0942	180	24		21-61-41	ALL
	32		W0942	504	24		21-61-61	ALL
	33		W0942	505	24		21-61-61	ALL
	34		W0942	506	24		21-61-61	ALL
	35		W0942	507	24		21-61-61	ALL
	36		W0942	325Y	24		21-61-61	ALL
	37		W0942	325R	24		21-61-61	ALL
	38		W0942	325B	24		21-61-61	ALL
	39		W0942	326R	24		21-61-71	ALL
	40		W0942	326B	24		21-61-71	ALL
	41		W0942	326Y	24		21-61-71	ALL
	42		W0942	508	24		21-61-71	ALL
	43		W0942	509	24		21-61-71	ALL
	44		W0942	510	24		21-61-71	ALL
	45		W0942	511	24		21-61-71	ALL
	46		W0942	319R	24		21-61-81	ALL
	47		W0942	319B	24		21-61-81	ALL
	48		W0942	319Y	24		21-61-81	ALL
	49		W0942	556	24		21-61-81	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05900

Page 41

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05988J		AC0701/ /		RCPT- (continued)				ALL
	50		W0942	557	24		21-61-81	ALL
	51		W0942	558	24		21-61-81	ALL
	52		W0942	559	24		21-61-81	ALL
	53		W0942	320R	24		21-64-11	ALL
	54		W0942	320Y	24		21-64-11	ALL
	55		W0942	320B	24		21-64-11	ALL
D05988P		AC0701/ /		PLUG-				ALL
	1		W0508	210R	20		21-51-12	ALL
	2		W0508	210B	20		21-51-12	ALL
	3		W0508	029	20		21-51-11	ALL
	4		W0508	211R	20		21-52-31	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W0508	211B	20		21-52-31	ALL
	8		W0508	036	20		36-21-11	ALL
	9		W0508	208B	20		21-52-31	ALL
	10		W0508	208R	20		21-52-31	ALL
	11		W0508	212B	20		21-52-31	ALL
	12		W0508	212R	20		21-52-31	ALL
	13		W0508	209B	20		21-52-31	ALL
	14		W0508	209R	20		21-52-31	ALL
	15	UNUSED						ALL
	16		W0508	042	20		21-61-41	ALL
	17		W0508	043	20		21-61-41	ALL
	18		W0508	312Y	20		21-61-41	ALL
	19		W0508	312R	20		21-61-41	ALL
	20		W0508	312B	20		21-61-41	ALL
	21		W0508	313B	20		21-64-11	ALL
	22		W0508	313Y	20		21-64-11	ALL
	23		W0508	313R	20		21-64-11	ALL
	24		W0508	051	20		21-61-11	ALL
	25		W0508	052	20		21-61-11	ALL
	26		W0508	053	20		21-61-21	ALL
	27		W0508	054	20		21-61-21	ALL
	28		W0508	055	20		21-61-31	ALL
	29		W0508	056	20		21-61-31	ALL
	30		W0508	057	20		21-61-41	ALL
	31		W0508	058	20		21-61-41	ALL
	32		W0508	060	20		21-61-61	ALL

HOOKUP LIST

D280T132

91-21-51
Section D05900
Page 42
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05988P		AC0701/ /		PLUG- (continued)				ALL
	33		W0508	061	20		21-61-61	ALL
	34		W0508	062	20		21-61-61	ALL
	35		W0508	063	20		21-61-61	ALL
	36		W0508	307Y	20		21-61-61	ALL
	37		W0508	307R	20		21-61-61	ALL
	38		W0508	307B	20		21-61-61	ALL
	39		W0508	308R	20		21-61-71	ALL
	40		W0508	308B	20		21-61-71	ALL
	41		W0508	308Y	20		21-61-71	ALL
	42		W0508	066	20		21-61-71	ALL
	43		W0508	067	20		21-61-71	ALL
	44		W0508	069	20		21-61-71	ALL
	45		W0508	070	20		21-61-71	ALL
	46		W0508	314R	20		21-61-81	ALL
	47		W0508	314B	20		21-61-81	ALL
	48		W0508	314Y	20		21-61-81	ALL
	49		W0508	072	20		21-61-81	ALL
	50		W0508	073	20		21-61-81	ALL
	51		W0508	074	20		21-61-81	ALL
	52		W0508	075	20		21-61-81	ALL
	53		W0508	315R	20		21-64-11	ALL
	54		W0508	315Y	20		21-64-11	ALL
	55		W0508	315B	20		21-64-11	ALL
D05990J		0372/280/L005		RCPT-				050-099, 276-299
D05990J		0373/280/L005		RCPT-				150-199, 275
	1		W1160	001	16		35-21-14	050-099
	1	FN	W1160	003	14		35-21-14	150-199, 275
	1	FN	W1160	001	14		35-21-14	276-299
	2	UNUSED						ALL
	3	UNUSED						ALL
D05990P		0373/280/0000		PLUG-				ALL
	1		W0720	002	16		35-21-14	050-099
	1	FO	W0720	002	14		35-21-14	150-199, 275-299
	2	UNUSED						ALL
	3	UNUSED						ALL
D05992J		0504/280/L005		RCPT-				ALL
	1		W1162	001	16		35-21-14	050-099

HOOKUP LIST

D280T132

91-21-51

Section D05900

Page 43

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05992J		0504/280/L005		RCPT- (continued)				ALL
	1	FN	W1162	001	14		35-21-14	150-199, 275-299
	2	UNUSED						ALL
	3	UNUSED						ALL
D05992P		0504/280/L005		PLUG-				ALL
	1		W1160	007	16		35-21-14	050-099
	1	FO	W1160	014	14		35-21-14	150-199, 275
	1	FO	W1160	007	14		35-21-14	276-299
	2	UNUSED						ALL
	3	UNUSED						ALL
D05994J		636/280/L005		RCPT-				050-099
D05994J		0636/280/L005		RCPT-				150-199, 275-299
	1		W1282	001	16		35-21-14	050-099
	1	FN	W1282	001	14		35-21-14	150-199
	1	FN	W1164	004	14		35-21-14	275
	1	FN	W1164	001	14		35-21-14	276-299
	2	UNUSED						ALL
	3	UNUSED						ALL
D05994P		0636/280/L005		PLUG-				ALL
	1		W1162	007	16		35-21-14	050-099
	1	FO	W1162	014	14		35-21-14	150-199, 275
	1	FO	W1162	007	14		35-21-14	276-299
	2	UNUSED						ALL
	3	UNUSED						ALL
D05996J		0654+114/280/L005		RCPT-				275-299
	1	FN	W2066	001	14		35-21-14	275-299
	2	UNUSED						275-299
	3	UNUSED						275-299
D05996P		0654+114/280/L005		PLUG-				275-299
	1	FO	W1164	019	14		35-21-14	275
	1	FO	W1164	007	14		35-21-14	276-299
	2	UNUSED						275-299
	3	UNUSED						275-299

HOOKUP LIST
D280T132

91-21-51
Section D05900
Page 44
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05997J		AE0303/ /		RCPT-E1-1				ALL
	1	UNUSED						ALL
	2		W1101	006	22		22-21-11	ALL
	3		W1101	007	22		22-21-11	ALL
	4		W1101	010	22		22-22-11	ALL
	5	UNUSED						ALL
	6		W1101	116	22		27-09-14	ALL
	7		W1101	117	22		27-09-14	ALL
	8		W1101	118	22		27-09-14	ALL
	9		W1101	119	22		27-09-14	ALL
	10	UNUSED	W1101	123	22		27-41-31	050-099, 155-199, 275-299 150-154
	11		W1101	028	22		27-09-14	ALL
	12		W1101	038	20		27-11-12	ALL
	13		W1101	041	20		27-11-12	ALL
	14		W1101	044	22		27-11-12	ALL
	15		W1101	047	22		27-11-12	ALL
	16		W1101	048	22		27-11-12	ALL
	17		W1101	049	22		27-11-12	ALL
	18		W1101	051	22		27-11-12	ALL
	19		W1101	057	22		27-21-12	ALL
	20		W1101	059	22		27-41-11	ALL
	21		W1101	063	22		27-41-11	ALL
	22		W1101	077	22		27-61-12	ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28		W1101	104	22		27-61-12	ALL
	29		W1101	102	22		27-61-12	ALL
	30		W1101	103	22		27-61-12	ALL
	31	UNUSED						ALL
D05997P		AE0303/ /		PLUG-E1-1				ALL
	1	UNUSED						ALL
	2		W1247	002	22		22-21-21	ALL
	3		W1247	003	22		22-21-21	ALL
	4		W1247	004	22		22-22-11	ALL
	5		W1247	005	22		SPARE	ALL
	6		W1247	031	22		27-09-14	ALL

HOOKUP LIST

D280T132

91-21-51

Section D05900

Page 45

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05997P		AE0303/ /		PLUG-E1-1 (continued)				ALL
	7		W1247	032	22		27-09-14	ALL
	8		W1247	033	22		27-09-14	ALL
	9		W1247	034	22		27-09-14	ALL
	10	UNUSED	W1247	035	22		27-41-31	050-099, 155-199, 275-299 150-154
	11		W1247	011	22		27-09-14	ALL
	12		W1247	012	20		27-11-12	ALL
	13		W1247	013	20		27-11-12	ALL
	14		W1247	014	22		27-11-12	ALL
	15		W1247	015	22		27-11-12	ALL
	16		W1247	016	22		27-11-12	ALL
	17		W1247	017	22		27-11-12	ALL
	18		W1247	018	22		27-11-12	ALL
	19		W1247	019	22		27-21-12	ALL
	20		W1247	020	22		27-41-11	ALL
	21		W1247	021	22		27-41-11	ALL
	22		W1247	022	22		27-61-12	ALL
	23		W1247	023	22		SPARE	ALL
	24		W1247	024	22		SPARE	ALL
	25		W1247	025	22		SPARE	ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28		W1247	028	22		27-61-12	ALL
	29		W1247	029	22		27-61-12	ALL
	30		W1247	030	22		27-61-12	ALL
	31	UNUSED						ALL
D05998J		0893/280/L005		RCPT-				050-099
	1		W1166	001	16		35-21-14	050-099
	2	UNUSED						050-099
	3	UNUSED						050-099
D05998P		0893/280/L005		PLUG-				050-099
	1		W1282	013	16		35-21-14	050-099
	2	UNUSED						050-099
	3	UNUSED						050-099

HOOKUP LIST
D280T132

91-21-51
Section D05900
Page 46 End
Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06000J		1025/280/L005		RCPT-				ALL
	1		W1168	001	16		35-21-14	050-099
	1	FN	W1168	001	14		35-21-14	150-199, 275-299
	2	UNUSED						ALL
	3	UNUSED						ALL
D06000P		1025/280/L005		PLUG-				ALL
	1		W0726	001	16		35-21-14	050-099
	1	FO	W0720	001	14		35-21-14	150-199, 275-299
	2	UNUSED						ALL
	3	UNUSED						ALL
D06002J		1157/280/L005		RCPT-				ALL
	1		W1170	001	16		35-21-14	050-099
	1	FN	W1170	001	14		35-21-14	150-199, 275-299
	2	UNUSED						ALL
	3	UNUSED						ALL
D06002P		1157/280/L005		PLUG-				ALL
	1		W1168	007	16		35-21-14	050-099
	1	FO	W1168	014	14		35-21-14	150-199, 275
	1	FO	W1168	007	14		35-21-14	276-299
	2	UNUSED						ALL
	3	UNUSED						ALL
D06004J		1289/280/L005		RCPT-				ALL
	1		W1172	001	16		35-21-14	050-099
	1	FN	W1172	001	14		35-21-14	150-199, 275-299
	2	UNUSED						ALL
	3	UNUSED						ALL
D06004P		1289/280/L005		PLUG-				ALL
	1		W1170	007	16		35-21-14	050-099
	1	FO	W2068	016	14		35-21-14	150-199, 275
	1	FO	W2068	007	14		35-21-14	276-299
	2	UNUSED						ALL
	3	UNUSED						ALL
D06006J		1421/280/L005		RCPT-				ALL
	1		W1174	001	16		35-21-14	050-099

HOOKUP LIST

D280T132

91-21-51

Section D06000

Page 1

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06006J		1421/280/L005		RCPT- (continued)				ALL
	1	FN	W1174	001	14		35-21-14	150-199, 275-299
	2	UNUSED						ALL
	3	UNUSED						ALL
D06006P		1421/280/L005		PLUG-				ALL
	1		W1172	007	16		35-21-14	050-099
	1	FO	W1172	014	14		35-21-14	150-199, 275
	1	FO	W1172	007	14		35-21-14	276-299
	2	UNUSED						ALL
	3	UNUSED						ALL
D06012J		AL1006/ /		RCPT-				ALL
	1		W0596	009	18		32-44-11	ALL
	2		W0596	008	18		32-44-11	ALL
	3		W0596	010	18		32-44-11	ALL
	4		W0596	007	22		32-44-11	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8		W0596	014	22		32-44-11	ALL
	9		W0596	013	20		32-44-11	ALL
	10		W0596	012	22		32-44-11	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
D06012P		AL1006/ /		PLUG-				ALL
	1		W1286	001	20		32-44-11	ALL
	2		W1286	002	20		32-44-11	ALL
	3		W1286	003	20		32-44-11	ALL
	4		W1286	004	20		32-44-11	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8		W1286	008	20		32-44-11	ALL
	9		W1286	009	20		32-44-11	ALL
	10		W1286	010	20		32-44-11	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D06000
Page 2
Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06012P		AL1006/ /		PLUG- (continued)				ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
D06023J		AC1402/190/R80		RCPT				050-099, 155-199, 275-299
	1		W0581	022Y	20		27-41-31	050-099, 155-199, 275-299
	2		W0581	023Y	20		27-41-31	050-099, 155-199, 275-299
	3	UNUSED						050-099, 155-199, 275-299
	4	UNUSED						050-099, 155-199, 275-299
	5	UNUSED						050-099, 155-199, 275-299
	6	UNUSED						050-099, 155-199, 275-299
	7	UNUSED						050-099, 155-199, 275-299
	8	UNUSED						050-099, 155-199, 275-299
	9	UNUSED						050-099, 155-199, 275-299
	10	UNUSED						050-099, 155-199, 275-299
	11	UNUSED						050-099, 155-199, 275-299
	12	UNUSED						050-099, 155-199, 275-299
D06023P		AC1402/ /		PLUG				050-099, 155-199, 275-299
	1		W0521	004Y	20		27-41-31	050-099, 155-199, 275-299
	2		W0521	005Y	20		27-41-31	050-099, 155-199, 275-299
	3	UNUSED						050-099, 155-199, 275-299
	4	UNUSED						050-099, 155-199, 275-299
	5	UNUSED						050-099, 155-199, 275-299
	6	UNUSED						050-099, 155-199, 275-299
	7	UNUSED						050-099, 155-199, 275-299
	8	UNUSED						050-099, 155-199, 275-299
	9	UNUSED						050-099, 155-199, 275-299
	10	UNUSED						050-099, 155-199, 275-299
	11	UNUSED						050-099, 155-199, 275-299
	12	UNUSED						050-099, 155-199, 275-299
D06025J		AC1402/190/R80		RCPT				050-099, 155-199, 275-299
	1		W0589	008Y	20		27-41-31	050-099, 155-199, 275-299
	2		W0589	009Y	20		27-41-31	050-099, 155-199, 275-299
	3	UNUSED						050-099, 155-199, 275-299
	4	UNUSED						050-099, 155-199, 275-299
	5	UNUSED						050-099, 155-199, 275-299
	6	UNUSED						050-099, 155-199, 275-299
	7	UNUSED						050-099, 155-199, 275-299
	8	UNUSED						050-099, 155-199, 275-299

HOOKUP LIST

D280T132

91-21-51

Section D06000

Page 3

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06025J		AC1402/190/R80		RCPT (continued)				050-099, 155-199, 275-299
	9	UNUSED						050-099, 155-199, 275-299
	10	UNUSED						050-099, 155-199, 275-299
	11	UNUSED						050-099, 155-199, 275-299
	12	UNUSED						050-099, 155-199, 275-299
D06025P		AC1402/ /		PLUG				050-099, 155-199, 275-299
	1		W0521	006Y	20		27-41-31	050-099, 155-199, 275-299
	2		W0521	007Y	20		27-41-31	050-099, 155-199, 275-299
	3	UNUSED						050-099, 155-199, 275-299
	4	UNUSED						050-099, 155-199, 275-299
	5	UNUSED						050-099, 155-199, 275-299
	6	UNUSED						050-099, 155-199, 275-299
	7	UNUSED						050-099, 155-199, 275-299
	8	UNUSED						050-099, 155-199, 275-299
	9	UNUSED						050-099, 155-199, 275-299
	10	UNUSED						050-099, 155-199, 275-299
	11	UNUSED						050-099, 155-199, 275-299
	12	UNUSED						050-099, 155-199, 275-299
	DED		W0521	006Z			27-41-31	050-099, 155-199, 275-299
	DED		W0521	007Z			27-41-31	050-099, 155-199, 275-299
D06026J		AP0802E/ /		RCPT-				050-099
D06026J		AP0901/ /		RCTP-				150-199
D06026J		AP0703/ /		RCTP-				275-299
	1	UNUSED						ALL
	2		W1252	003	20		25-63-11	ALL
	3		W1252	004	20		25-63-11	ALL
	4		W1252	005	20		25-63-11	ALL
	5		W1252	006	20		25-63-11	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D06000
Page 4
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06026P		AP0802E/ /		PLUG-				050-099
D06026P		AP0901/ /		PLUG-				150-199
D06026P		AP0703/ /		PLUG-				275-299
	1	UNUSED						ALL
	2		W1088	002	20		25-63-11	ALL
	3		W1088	003	20		25-63-11	ALL
	4		W1088	004	20		25-63-11	ALL
	5		W1088	005	20		25-63-11	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D06027J		AC1402/ /		RCPT				050-099, 155-199, 275-299
	1		W0587	008Y	20		27-41-31	050-099, 155-199, 275-299
	2		W0587	009Y	20		27-41-31	050-099, 155-199, 275-299
	3	UNUSED						050-099, 155-199, 275-299
	4	UNUSED						050-099, 155-199, 275-299
	5	UNUSED						050-099, 155-199, 275-299
	6	UNUSED						050-099, 155-199, 275-299
	7	UNUSED						050-099, 155-199, 275-299
	8	UNUSED						050-099, 155-199, 275-299
	9	UNUSED						050-099, 155-199, 275-299
	10	UNUSED						050-099, 155-199, 275-299
	11	UNUSED						050-099, 155-199, 275-299
	12	UNUSED						050-099, 155-199, 275-299
D06027P		1417/190/R 80		PLUG				050-099, 155-199, 275-299
	1		W0525	001Y	20		27-41-31	050-099, 155-199, 275-299
	2		W0525	002Y	20		27-41-31	050-099, 155-199, 275-299
	3	UNUSED						050-099, 155-199, 275-299
	4	UNUSED						050-099, 155-199, 275-299
	5	UNUSED						050-099, 155-199, 275-299
	6	UNUSED						050-099, 155-199, 275-299
	7	UNUSED						050-099, 155-199, 275-299
	8	UNUSED						050-099, 155-199, 275-299
	9	UNUSED						050-099, 155-199, 275-299

HOOKUP LIST

D280T132

91-21-51

Section D06000

Page 5

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06027P		1417/190/R 80		PLUG (continued)				050-099, 155-199, 275-299
	10	UNUSED						050-099, 155-199, 275-299
	11	UNUSED						050-099, 155-199, 275-299
	12	UNUSED						050-099, 155-199, 275-299
D06028J		AP0802E/ /		RCPT				050-099
D06028J		AP0901/ /		RCPT-				150-199
D06028J		AP0703/ /		RCPT-				275-299
	1	UNUSED						050-099, 275-299
	1		W1236	151	20		33-22-42	150-199
	2	DK	W1236	003	18		33-22-31	ALL
	3	DK	W1236	149	18		33-22-31	050-099, 150-199
	3	DK	W1236	001	18		33-22-31	275-299
	4	DK	W1236	002	18		33-22-31	ALL
	5	UNUSED						050-099, 275-299
	5		W1236	150	20		33-22-42	150-199
D06028P		AP0802E/ /		PLUG-				050-099
D06028P		AP0901/ /		PLUG-				150-199
D06028P		AP0703/ /		PLUG-				275-299
	1	UNUSED						050-099, 275-299
	1		W0122	047	20		33-22-42	150-199
	2	DL	W0110	006	18		33-22-31	050-099, 275-299
	2	DL	W0122	042	18		33-22-31	150-199
	3	DL	W0110	005	18		33-22-31	050-099
	3	DL	W0122	043	18		33-22-31	150-199
	3	DL	W0110	008	18		33-22-31	275-299
	4	DL	W0110	007	18		33-22-31	050-099, 275-299
	4	DL	W0122	045	18		33-22-31	150-199
	5	UNUSED						050-099, 275-299
	5		W0122	046	20		33-22-42	150-199
D06029J		AC1402/ /		RCPT				050-099, 155-199, 275-299
	1		W0575	022Y	20		27-41-31	050-099, 155-199, 275-299
	2		W0575	023Y	20		27-41-31	050-099, 155-199, 275-299
	3	UNUSED						050-099, 155-199, 275-299
	4	UNUSED						050-099, 155-199, 275-299
	5	UNUSED						050-099, 155-199, 275-299
	6	UNUSED						050-099, 155-199, 275-299
	7	UNUSED						050-099, 155-199, 275-299
	8	UNUSED						050-099, 155-199, 275-299

HOOKUP LIST

D280T132

91-21-51

Section D06000

Page 6

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06029J		AC1402/ /		RCPT (continued)				050-099, 155-199, 275-299
	9	UNUSED						050-099, 155-199, 275-299
	10	UNUSED						050-099, 155-199, 275-299
	11	UNUSED						050-099, 155-199, 275-299
	12	UNUSED						050-099, 155-199, 275-299
D06029P		1417/190/R 80		PLUG				050-099, 155-199, 275-299
	1		W0525	003Y	20		27-41-31	050-099, 155-199, 275-299
	2		W0525	004Y	20		27-41-31	050-099, 155-199, 275-299
	3	UNUSED						050-099, 155-199, 275-299
	4	UNUSED						050-099, 155-199, 275-299
	5	UNUSED						050-099, 155-199, 275-299
	6	UNUSED						050-099, 155-199, 275-299
	7	UNUSED						050-099, 155-199, 275-299
	8	UNUSED						050-099, 155-199, 275-299
	9	UNUSED						050-099, 155-199, 275-299
	10	UNUSED						050-099, 155-199, 275-299
	11	UNUSED						050-099, 155-199, 275-299
	12	UNUSED						050-099, 155-199, 275-299
	DED		W0525	003Z			27-41-31	050-099, 155-199, 275-299
	DED		W0525	004Z			27-41-31	050-099, 155-199, 275-299
D06031J		AP0307/ /		RECP				050-099, 150-199
	1	UNUSED						050-099
	1		W0645	160	24		23-31-11	150-199
	2	UNUSED						050-099
	2		W0645	161	24		23-31-11	150-199
	3	UNUSED						050-099
	3		W0645	217R	24		23-31-11	150-199
	4	UNUSED						050-099
	4		W0645	217B	24		23-31-11	150-199
	5	UNUSED						050-099
	5		W0645	217Z			23-31-11	150-199
	6		W0645	162	24		23-31-13	050-099, 150-199
	7		W0645	163	24		23-31-12	050-099, 150-199
	8		W0645	164	24		23-31-13	050-099, 150-199
	9		W0645	165	24		23-31-13	050-099, 150-199
	10		W0645	166	24		23-31-13	050-099, 150-199
	11		W0645	168	20		23-31-13	050, 162-166
	11		W0645	168	20		23-31-14	051-099, 150-157, 167-199
	12		W0645	169	24		23-31-13	050, 162-166

HOOKUP LIST

D280T132

91-21-51

Section D06000

Page 7

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06031J		AP0307/ /		RECP (continued)				050-099, 150-199
	12		W0645	169	24		23-31-14	051-099, 150-157, 167-199
	13		W0645	212R	24		23-22-12	050-099, 150-199
	14		W0645	212B	24		23-22-12	050-099, 150-199
	15		W0645	212Z			23-22-12	050-099, 150-199
	16		W0645	213R	24		23-22-12	050-099, 150-199
	17		W0645	213B	24		23-22-12	050-099, 150-199
	18		W0645	213Z			23-22-12	050-099, 150-199
	19		W0645	214R	20		23-22-12	050-099, 150-199
	20		W0645	214B	20		23-22-12	050-099, 150-199
	21		W0645	159	22		23-31-12	050-099, 150-199
	22		W0645	215Z			23-31-12	050-099, 150-199
	23		W0645	157	22		23-31-12	050-099, 150-199
	24		W0645	148	22		23-31-12	050-099, 150-199
	25		W0645	215B	24		23-31-12	050-099, 150-199
	26		W0645	215R	24		23-31-12	050-099, 150-199
	27		W0645	149	24		23-31-12	050-099, 150-199
	28		W0645	129	24		23-34-14	050-099, 150-199
	29		W0645	129Z			23-34-14	050-099, 150-199
	30		W0645	128	24		23-34-14	050-099, 150-199
	31		W0645	128Z			23-34-14	050-099, 150-199
	32		W0645	508	24		23-42-11	050-099, 162-199
	33	UNUSED						050-099, 162-199
	34	UNUSED						050-099, 162-199
	35	UNUSED						050-099, 162-199
	36		W0645	407R	24		23-42-11	050-099, 162-199
	37		W0645	407B	24		23-42-11	050-099, 162-199
	38		W0645	407Y	24		23-42-11	050-099, 162-199
	39		W0645	407G	24		23-42-11	050-099, 162-199
	40		W0645	407Z			23-42-11	050-099, 162-199
	41		W0645	509	22		23-42-11	050-099, 162-199
D06031P		AP0307/ /		PLUG				050-099, 150-199
	1	UNUSED						050-099
	1		W1447	056	24		23-31-11	150-199
	2	UNUSED						050-099
	2		W1447	057	24		23-31-11	150-199
	3	UNUSED						050-099
	3		W1447	205R	24		23-31-11	150-199
	4	UNUSED						050-099
	4		W1447	205B	24		23-31-11	150-199

HOOKUP LIST
D280T132

91-21-51
Section D06000
Page 8
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06031P		AP0307/ /		PLUG (continued)				050-099, 150-199
	5	UNUSED						050-099
	5		W1447	205Z			23-31-11	150-199
	6		W1447	058	24		23-31-13	050-099, 150-199
	7		W1447	059	24		23-31-12	050-099, 150-199
	8		W1447	060	24		23-31-13	050-099, 150-199
	9		W1447	061	24		23-31-13	050-099, 150-199
	10		W1447	062	24		23-31-13	050-099, 150-199
	11		W1447	063	24		23-31-13	050, 162-166
	11		W1447	063	24		23-31-14	051-099, 150-157, 167-199
	12		W1447	064	24		23-31-13	050, 162-166
	12		W1447	064	24		23-31-14	051-099, 150-157, 167-199
	13		W1447	208R	24		23-22-12	050-099, 150-199
	14		W1447	208B	24		23-22-12	050-099, 150-199
	15		W1447	208Z			23-22-12	050-099, 150-199
	16		W1447	207R	24		23-22-12	050-099, 150-199
	17		W1447	207B	24		23-22-12	050-099, 150-199
	18		W1447	207Z			23-22-12	050-099, 150-199
	19		W1447	206R	20		23-22-12	050-099, 150-199
	20		W1447	206B	20		23-22-12	050-099, 150-199
	21		W1447	069	22		23-31-12	050-099, 150-199
	22		W1447	216Z			23-31-12	050-099, 150-199
	23		W1447	068	22		23-31-12	050-099, 150-199
	24		W1447	067	22		23-31-12	050-099, 150-199
	25		W1447	216B	24		23-31-12	050-099, 150-199
	26		W1447	216R	24		23-31-12	050-099, 150-199
	27		W1447	070	24		23-31-12	050-099, 150-199
	28		W1447	111	24		23-34-14	050-099, 150-199
	29		W1447	111Z			23-34-14	050-099, 150-199
	30		W1447	112	24		23-34-14	050-099, 150-199
	31		W1447	112Z			23-34-14	050-099, 150-199
	32		W1447	077	22		23-42-11	050-099, 162-199
	33	UNUSED						050-099, 162-199
	34	UNUSED						050-099, 162-199
	35	UNUSED						050-099, 162-199
	36		W1447	402R	24		23-42-11	050-099, 162-199
	37		W1447	402B	24		23-42-11	050-099, 162-199
	38		W1447	402Y	24		23-42-11	050-099, 162-199
	39		W1447	402G	24		23-42-11	050-099, 162-199
	40		W1447	402Z			23-42-11	050-099, 162-199
	41		W1447	076	22		23-42-11	050-099, 162-199

HOOKUP LIST

D280T132

91-21-51

Section D06000

Page 9

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06033J		AP0307/ /		RCPT-				050-099
D06033J		AP0307/315/L08		RECP				150-199
	1		W0665	167	22		23-42-11	050-099, 150-199
	2		W0665	505	22		23-42-11	050-099, 162-199
	2	UNUSED						150-157
	3		W0665	506	22		23-42-11	050-099, 162-199
	3	UNUSED						150-157
	4		W0665	507	22		23-42-11	050-099, 162-199
	4	UNUSED						150-157
	5		W0665	508	22		23-42-11	050-099, 162-199
	5	UNUSED						150-157
	6	UNUSED						050-099, 150-199
	7	UNUSED						050-099, 150-199
	8	UNUSED						050-099, 150-199
	9	UNUSED						050-099, 150-199
	10	UNUSED						050-099, 150-199
	11	UNUSED						050-099, 150-199
	12	UNUSED						050-099, 150-199
	13	UNUSED						050-099, 150-199
	14	UNUSED						050-099, 150-199
	15	UNUSED						050-099, 150-199
	16	UNUSED						050-099, 150-199
	17	UNUSED						050-099, 150-199
	18	UNUSED						050-099, 150-199
	19	UNUSED						050-099, 150-199
	20	UNUSED						050-099, 150-199
	21	UNUSED						050-099, 150-199
	22	UNUSED						050-099, 150-199
	23	UNUSED						050-099, 150-199
	24	UNUSED						050-099, 150-199
	25	UNUSED						050-099, 150-199
	26	UNUSED						050-099, 150-199
	27	UNUSED						050-099, 150-199
	28	UNUSED						050-099, 150-199
	29	UNUSED						050-099, 150-199
	30	UNUSED						050-099, 150-199
	31	UNUSED						050-099, 150-199
D06033P		AP0307/ /		PLUG				050-099, 150-199
	1		W1449	042	22		23-42-11	050-099, 150-199
	2		W1449	119	22		23-42-11	050-099, 162-199

HOOKUP LIST
D280T132

91-21-51
Section D06000
Page 10
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06033P		AP0307/ /		PLUG (continued)				050-099, 150-199
	2	UNUSED						150-157
	3		W1449	114	22		23-42-11	050-099, 162-199
	3	UNUSED						150-157
	4		W1449	130	22		23-42-11	050-099, 162-199
	4	UNUSED						150-157
	5		W1449	129	22		23-42-11	050-099, 162-199
	5	UNUSED						150-157
	6	UNUSED						050-099, 150-199
	7	UNUSED						050-099, 150-199
	8	UNUSED						050-099, 150-199
	9	UNUSED						050-099, 150-199
	10	UNUSED						050-099, 150-199
	11	UNUSED						050-099, 150-199
	12	UNUSED						050-099, 150-199
	13	UNUSED						050-099, 150-199
	14	UNUSED						050-099, 150-199
	15	UNUSED						050-099, 150-199
	16	UNUSED						050-099, 150-199
	17	UNUSED						050-099, 150-199
	18	UNUSED						050-099, 150-199
	19	UNUSED						050-099, 150-199
	20	UNUSED						050-099, 150-199
	21	UNUSED						050-099, 150-199
	22	UNUSED						050-099, 150-199
	23	UNUSED						050-099, 150-199
	24	UNUSED						050-099, 150-199
	25	UNUSED						050-099, 150-199
	26	UNUSED						050-099, 150-199
	27	UNUSED						050-099, 150-199
	28	UNUSED						050-099, 150-199
	29	UNUSED						050-099, 150-199
	30	UNUSED						050-099, 150-199
	31	UNUSED						050-099, 150-199
D06035J		AP0307/ /		RECPT				050-099
D06035J		AP0307/ /		RECP				150-199
	1	UNUSED						050-099, 150-199
	2	UNUSED						050-099, 150-199
	3		W1407	017	20		23-32-11	050-099, 150-199
	4		W1407	001	24		23-32-12	050-099, 150-199

HOOKUP LIST

D280T132

91-21-51

Section D06000

Page 11

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06035J		AP0307/ /		RECPT (continued)				050-099
D06035J		AP0307/ /		RECP (continued)				150-199
	5		W1407	002	24		23-32-12	050-099, 150-199
	6		W1407	003	24		23-32-12	050-099, 150-199
	7		W1407	003Z			23-32-12	050-099, 150-199
	8		W1407	005	24		23-32-12	050-099, 150-199
	9		W1407	006	24		23-32-12	050-099, 150-199
	10		W1407	008	24		23-32-12	050-099, 150-199
	11		W1407	010	24		23-32-12	050-099, 150-199
	12		W1407	012	24		23-32-12	050-099, 150-199
	13		W1407	030	24		23-32-12	050-099, 150-199
	14		W1407	031	24		23-32-12	050-099, 150-199
	15		W1407	FRA			23-32-12	050-099, 150-199
	16		W1407	036	22		23-32-12	050-099, 150-199
	17		W1407	037	22		23-32-12	050-099, 150-199
	18		W1407	035	22		23-32-12	050-099, 150-199
	19	UNUSED						050-099, 150-199
	20	UNUSED						050-099, 150-199
	21		W1407	015	20		23-32-11	050-099, 150-199
	22	UNUSED						050-099, 150-199
	23		W1407	019	16		23-32-11	050-099, 150-199
	24	UNUSED						050-099, 150-199
	25	UNUSED						050-099, 150-199
	26	UNUSED						050-099, 150-199
	27	UNUSED						050-099, 150-199
	28	UNUSED						050-099, 150-199
	29	UNUSED						050-099, 150-199
	30	UNUSED						050-099, 150-199
	31	UNUSED						050-099, 150-199
	32	UNUSED						050-099, 150-199
	33	UNUSED						050-099, 150-199
	34	UNUSED						050-099, 150-199
	35	UNUSED						050-099, 150-199
	36	UNUSED						050-099, 150-199
	37	UNUSED						050-099, 150-199
	38	UNUSED						050-099, 150-199
	39	UNUSED						050-099, 150-199
			W1407	006Z			23-32-12	050-099, 150-199
			W1407	008Z			23-32-12	050-099, 150-199
			W1407	010Z			23-32-12	050-099, 150-199
			W1407	012Z			23-32-12	050-099, 150-199

HOOKUP LIST

D280T132

91-21-51

Section D06000

Page 12

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06035J		AP0307/ /		RECPT (continued)				050-099
D06035J		AP0307/ /		RECP (continued)				150-199
			W1407	030Z			23-32-12	050-099, 150-199
			W1407	031Z			23-32-12	050-099, 150-199
			W1407	FRA			23-32-12	050-099, 150-199
D06035P		AP0307/ /		PLUG				050-099, 150-199
	1	UNUSED						050-099, 150-199
	2	UNUSED						050-099, 150-199
	3		W1447	003	20		23-32-11	050-099, 150-199
	4		W1447	008	24		23-32-12	050-099, 150-199
	5		W1447	009	24		23-32-12	050-099, 150-199
	6		W1447	101	24		23-32-12	050-099, 150-199
	7		W1447	101Z			23-32-12	050-099, 150-199
	8		W1447	010	24		23-32-12	050-099, 150-199
	9		W1447	102	24		23-32-12	050-099, 150-199
	10		W1447	103	24		23-32-12	050-099, 150-199
	11		W1447	104	24		23-32-12	050-099, 150-199
	12		W1447	105	24		23-32-12	050-099, 150-199
	13		W1447	106	24		23-32-12	050-099, 150-199
	14		W1447	107	24		23-32-12	050-099, 150-199
	15		W1447	FRA			23-32-12	050-099, 150-199
	16		W1447	109	22		23-32-12	050-099, 150-199
	17		W1447	110	22		23-32-12	050-099, 150-199
	18		W1447	108	22		23-32-12	050-099, 150-199
	19	UNUSED						050-099, 150-199
	20	UNUSED						050-099, 150-199
	21		W1447	001	20		23-32-11	050-099, 150-199
	22	UNUSED						050-099, 150-199
	23		W1447	002	16		23-32-11	050-099, 150-199
	24	UNUSED						050-099, 150-199
	25	UNUSED						050-099, 150-199
	26	UNUSED						050-099, 150-199
	27	UNUSED						050-099, 150-199
	28	UNUSED						050-099, 150-199
	29	UNUSED						050-099, 150-199
	30	UNUSED						050-099, 150-199
	31	UNUSED						050-099, 150-199
	32	UNUSED						050-099, 150-199
	33	UNUSED						050-099, 150-199
	34	UNUSED						050-099, 150-199

HOOKUP LIST

D280T132

91-21-51

Section D06000

Page 13

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06035P		AP0307/ /		PLUG (continued)				050-099, 150-199
	35	UNUSED						050-099, 150-199
	36	UNUSED						050-099, 150-199
	37	UNUSED						050-099, 150-199
	38	UNUSED						050-099, 150-199
	39	UNUSED						050-099, 150-199
			W1447	102Z			23-32-12	050-099, 150-199
			W1447	103Z			23-32-12	050-099, 150-199
			W1447	104Z			23-32-12	050-099, 150-199
			W1447	105Z			23-32-12	050-099, 150-199
			W1447	106Z			23-32-12	050-099, 150-199
			W1447	107Z			23-32-12	050-099, 150-199
			W1447	FRA			23-32-12	050-099, 150-199
D06037J D06037J		AP0307/ / 380/315/L 8		RECP-MOA PER DWG REF BACC45FN20-28S6 RECP-MOA PER DWG REF BACC45FN20-28S6				050-099 150-199
	1		W1417	001	20		23-32-11	050-099, 150-199
	2		W1417	005	20		23-32-11	050-099, 150-199
	3		W1417	006	20		23-32-11	050-099, 150-199
	4		W1417	007	20		23-32-11	050-099, 150-199
	5		W1417	017	24		23-32-13	050-099, 150-199
	6		W1417	018	24		23-32-13	050-099, 150-199
	7		W1417	019	24		23-32-13	050-099, 150-199
	8		W1417	020	20		23-32-13	050-099, 150-199
	9		W1417	023	24		23-32-13	050-099, 150-199
	10		W1417	024	24		23-32-13	050-099, 150-199
	11		W1417	025	24		23-32-13	050-099, 150-199
	12		W1417	026	20		23-32-13	050-099, 150-199
	13		W1417	029	24		23-32-13	050-099, 150-199
	14		W1417	030	24		23-32-13	050-099, 150-199
	15		W1417	09CX			23-32-21	050-099, 150-199
	16		W1417	031	24		23-32-13	050-099, 150-199
	17		W1417	032	20		23-32-13	050-099, 150-199
	18		W1417	401G	20		23-32-13	050-099, 150-199
	19		W1417	01CX			23-32-13	050-099, 150-199
	20		W1417	401Y	20		23-32-13	050-099, 150-199
	21		W1417	401B	20		23-32-13	050-099, 150-199
	22		W1417	401R	20		23-32-13	050-099, 150-199
	23		W1417	02CX			23-32-13	050-099, 150-199
	24		W1417	502	20		23-32-11	050-099, 150-199
	25	UNUSED						050-099, 150-199

HOOKUP LIST

D280T132

91-21-51

Section D06000

Page 14

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06037J		AP0307/ /		RECP-MOA PER DWG REF BACC45FN20-28S6 (continued)				050-099
D06037J		380/315/L 8		RECP-MOA PER DWG REF BACC45FN20-28S6 (continued)				150-199
	26	UNUSED						050-099, 150-199
	27		W1417	03CX			23-32-13	050-099, 150-199
	28	UNUSED						050-099, 150-199
	=C15		W1417	09CO			23-32-21	050-099, 150-199
	=C19		W1417	01CO			23-32-13	050-099, 150-199
	=C23		W1417	02CO			23-32-13	050-099, 150-199
	=C27		W1417	03CO			23-32-13	050-099, 150-199
D06037P		AP0307/ /		PLUG-MOA PER DWG REF BACC45FT20-28P6				050-099, 150-199
	1		W1447	004	20		23-32-11	050-099, 150-199
	2		W1447	005	20		23-32-11	050-099, 150-199
	3		W1447	006	20		23-32-11	050-099, 150-199
	4		W1447	007	20		23-32-11	050-099, 150-199
	5		W1447	011	24		23-32-13	050-099, 150-199
	6		W1447	012	24		23-32-13	050-099, 150-199
	7		W1447	013	24		23-32-13	050-099, 150-199
	8		W1447	014	20		23-32-13	050-099, 150-199
	9		W1447	015	24		23-32-13	050-099, 150-199
	10		W1447	016	24		23-32-13	050-099, 150-199
	11		W1447	017	24		23-32-13	050-099, 150-199
	12		W1447	018	20		23-32-13	050-099, 150-199
	13		W1447	019	24		23-32-13	050-099, 150-199
	14		W1447	020	24		23-32-13	050-099, 150-199
	15		W1447	05CX			23-32-21	050-099, 150-199
	16		W1447	021	24		23-32-13	050-099, 150-199
	17		W1447	022	20		23-32-13	050-099, 150-199
	18		W1447	401G	20		23-32-13	050-099, 150-199
	19		W1447	02CX			23-32-13	050-099, 150-199
	20		W1447	401Y	20		23-32-13	050-099, 150-199
	21		W1447	401B	20		23-32-13	050-099, 150-199
	22		W1447	401R	20		23-32-13	050-099, 150-199
	23		W1447	03CX			23-32-13	050-099, 150-199
	24		W1447	004Z			23-32-11	050-099, 150-199
	25	UNUSED						050-099, 150-199
	26	UNUSED						050-099, 150-199
	27		W1447	04CX			23-32-13	050-099, 150-199
	28	UNUSED						050-099, 150-199
	=C15		W1447	05CO			23-32-21	050-099, 150-199
	=C19		W1447	02CO			23-32-13	050-099, 150-199

HOOKUP LIST

D280T132

91-21-51

Section D06000

Page 15

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06037P		AP0307/ /		PLUG-MOA PER DWG REF BACC45FT20-28P6 (continued)				050-099, 150-199
	= C23		W1447	03CO			23-32-13	050-099, 150-199
	= C27		W1447	04CO			23-32-13	050-099, 150-199
D06038J		1505/280/R013		RCPT-				050-099
D06038J		1518/283/R011		RCPT-				275-299
	1		W0818	187	20		33-22-42	050-099
	1		W0818	187	20		33-27-11	275-299
	2	UNUSED						050-099, 275-299
	3	UNUSED						050-099, 275-299
	4		W0818	186	22		33-22-42	050-099
	4		W0818	186	22		33-27-11	275-299
	5		W0818	195	22		33-22-42	050-099
	5		W0818	195	22		33-27-11	275-299
	6		W0818	503	20		33-22-42	050-099
	6		W0818	503	20		33-27-11	275-299
	7	UNUSED						050-099, 275-299
	8	UNUSED						050-099, 275-299
	9		W0818	196	20		33-22-42	050-099
	9		W0818	196	20		33-27-11	275-299
	10	UNUSED						050-099, 275-299
	11	UNUSED						050-099, 275-299
	12	UNUSED						050-099, 275-299
	13	UNUSED						050-099, 275-299
	14	UNUSED						050-099, 275-299
	15	UNUSED						050-099, 275-299
	16	UNUSED						050-099, 275-299
	17	UNUSED						050-099, 275-299
	18	UNUSED						050-099, 275-299
	19	UNUSED						050-099, 275-299
	20	UNUSED						050-099, 275-299
	21	UNUSED						050-099, 275-299
	22	UNUSED						050-099, 275-299
	23	UNUSED						050-099, 275-299
	24	UNUSED						050-099, 275-299
D06038P		1518/280/R 11		PLUG-				050-099
D06038P		1518/283/R011		PLUG-				275-299
	1		W0100	030	22		33-22-42	050-099
	1		W0100	030	22		33-27-11	275-299
	2	UNUSED						050-099, 275-299

HOOKUP LIST

D280T132

91-21-51
 Section D06000
 Page 16
 Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06038P		1518/280/R 11		PLUG- (continued)				050-099
D06038P		1518/283/R011		PLUG- (continued)				275-299
	3	UNUSED						050-099, 275-299
	4		W0100	027	22		33-22-42	050-099
	4		W0100	027	22		33-27-11	275-299
	5		W0100	031	22		33-22-42	050-099
	5		W0100	031	22		33-27-11	275-299
	6		W0100	008	22		33-22-42	050-099
	6		W0100	008	22		33-27-11	275-299
	7	UNUSED						050-099, 275-299
	8	UNUSED						050-099, 275-299
	9		W0100	032	22		33-22-42	050-099
	9		W0100	032	22		33-27-11	275-299
	10	UNUSED						050-099, 275-299
	11	UNUSED						050-099, 275-299
	12	UNUSED						050-099, 275-299
	13	UNUSED						050-099, 275-299
	14	UNUSED						050-099, 275-299
	15	UNUSED						050-099, 275-299
	16	UNUSED						050-099, 275-299
	17	UNUSED						050-099, 275-299
	18	UNUSED						050-099, 275-299
	19	UNUSED						050-099, 275-299
	20	UNUSED						050-099, 275-299
	21	UNUSED						050-099, 275-299
	22	UNUSED						050-099, 275-299
	23	UNUSED						050-099, 275-299
	24	UNUSED						050-099, 275-299
D06039J		AP0307/ /		RECP				050-099
D06039J		380/315/L 8		RECP				150-199
	1	UNUSED						050-099, 151
	1		W1417	900	20		23-32-21	150, 152-199
	2	UNUSED						050-099, 151
	2		W1417	904	20		23-32-21	150, 152-199
	3	UNUSED						050-099, 151
	3		W1417	905	20		23-32-21	150, 152-199
	4	UNUSED						050-099, 151
	4		W1417	906	20		23-32-21	150, 152-199
	5	UNUSED						050-099, 151
	5		W1417	916	20		23-32-21	150, 152-199

HOOKUP LIST

D280T132

91-21-51

Section D06000

Page 17

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06039J		AP0307/ /		RECP (continued)				050-099
D06039J		380/315/L 8		RECP (continued)				150-199
	6	UNUSED						050-099, 151
	6		W1417	917	20		23-32-21	150, 152-199
	7	UNUSED						050-099, 151
	7		W1417	FRN			23-32-21	150, 152-199
	8	UNUSED						050-099, 151
	8		W1417	907	20		23-32-21	150, 152-199
	9	UNUSED						050-099, 151
	9		W1417	908	20		23-32-21	150, 152-199
	10	UNUSED						050-099, 151
	10		W1417	909	20		23-32-21	150, 152-199
	11	UNUSED						050-099, 151
	11		W1417	910	20		23-32-21	150, 152-199
	12	UNUSED						050-099, 151
	12		W1417	911	20		23-32-21	150, 152-199
	13	UNUSED						050-099, 151
	13		W1417	912	20		23-32-21	150, 152-199
	14	UNUSED						050-099, 151
	14		W1417	912Z			23-32-21	150, 152-199
	15	UNUSED						050-099, 151
	15		W1417	913	20		23-32-21	150, 152-199
	16	UNUSED						050-099, 151
	16		W1417	914	20		23-32-21	150, 152-199
	17	UNUSED						050-099, 150-199
	18	UNUSED						050-099, 150-199
	19	UNUSED						050-099, 150-199
	20		W1417	206R	24		23-32-21	050-099, 150-199
	21	UNUSED						050-099, 150-199
	22		W1417	206B	24		23-32-21	050-099, 150-199
	23	UNUSED						050-099, 150-199
	24		W1417	207R	24		23-32-21	050-099, 150-199
	25		W1417	207B	24		23-32-21	050-099, 150-199
	26		W1417	FRB			23-32-21	050-099
	26		W1417	FRC			23-32-21	150-199
	27		W1417	301B	24		23-32-21	050-099, 150-199
	28		W1417	301R	24		23-32-21	050-099, 150-199
	29		W1417	301Y	24		23-32-21	050-099, 150-199
	30		W1417	302B	24		23-32-21	050-099, 150-199
	31		W1417	302R	24		23-32-21	050-099, 150-199
	32		W1417	302Y	24		23-32-21	050-099, 150-199

HOOKUP LIST

D280T132

91-21-51

Section D06000

Page 18

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06039J		AP0307/ /		RECP (continued)				050-099
D06039J		380/315/L 8		RECP (continued)				150-199
	33		W1417	208R	24		23-32-21	050-099, 150-199
	34		W1417	208B	24		23-32-21	050-099, 150-199
	35	UNUSED						050-099, 150-199
	36	UNUSED						050-099, 150-199
	37	UNUSED						050-099, 150-199
	38	UNUSED						050-099, 150-199
	39	UNUSED						050-099, 150-199
	40	UNUSED						050-099, 150-199
	41	UNUSED						050-099, 150-199
			W1417	FRB			23-32-21	050-099
			W1417	206Z			23-32-21	050-099, 150-199
			W1417	207Z			23-32-21	050-099, 150-199
			W1417	208Z			23-32-21	050-099, 150-199
			W1417	301Z			23-32-21	050-099, 150-199
			W1417	302Z			23-32-21	050-099, 150-199
			W1417	915	20		23-32-21	150, 152-199
			W1417	917Z			23-32-21	150, 152-199
			W1417	FRN			23-32-21	150, 152-199
			W1417	FRC			23-32-21	150-199
D06039P		AP0307/ /		PLUG				050-099, 150-199
	1	UNUSED						050-099, 151
	1		W1447	900	20		23-32-21	150, 152-199
	2	UNUSED						050-099, 151
	2		W1447	901	20		23-32-21	150, 152-199
	3	UNUSED						050-099, 151
	3		W1447	902	20		23-32-21	150, 152-199
	4	UNUSED						050-099, 151
	4		W1447	903	20		23-32-21	150, 152-199
	5	UNUSED						050-099, 151
	5		W1447	904	20		23-32-21	150, 152-199
	6	UNUSED						050-099, 151
	6		W1447	905	20		23-32-21	150, 152-199
	7	UNUSED						050-099, 151
	7		W1447	905Z			23-32-21	150, 152-199
	8	UNUSED						050-099, 151
	8		W1447	906	20		23-32-21	150, 152-199
	9	UNUSED						050-099, 151
	9		W1447	907	20		23-32-21	150, 152-199

HOOKUP LIST

D280T132

91-21-51

Section D06000

Page 19

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06039P		AP0307/ /		PLUG (continued)				050-099, 150-199
	10	UNUSED						050-099, 151
	10		W1447	908	20		23-32-21	150, 152-199
	11	UNUSED						050-099, 151
	11		W1447	909	20		23-32-21	150, 152-199
	12	UNUSED						050-099, 151
	12		W1447	910	20		23-32-21	150, 152-199
	13	UNUSED						050-099, 151
	13		W1447	911	20		23-32-21	150, 152-199
	14	UNUSED						050-099, 151
	14		W1447	911Z			23-32-21	150, 152-199
	15	UNUSED						050-099, 151
	15		W1447	912	20		23-32-21	150, 152-199
	16	UNUSED						050-099, 151
	16		W1447	913	20		23-32-21	150, 152-199
	17	UNUSED						050-099, 150-199
	18	UNUSED						050-099, 150-199
	19	UNUSED						050-099, 150-199
	20		W1447	201R	24		23-32-21	050-099, 150-199
	21	UNUSED						050-099, 150-199
	22		W1447	201B	24		23-32-21	050-099, 150-199
	23	UNUSED						050-099, 150-199
	24		W1447	202R	24		23-32-21	050-099, 150-199
	25		W1447	202B	24		23-32-21	050-099, 150-199
	26		W1447	FRC			23-32-21	050-099, 150-199
	27		W1447	301B	24		23-32-21	050-099, 150-199
	28		W1447	301R	24		23-32-21	050-099, 150-199
	29		W1447	301Y	24		23-32-21	050-099, 150-199
	30		W1447	302B	24		23-32-21	050-099, 150-199
	31		W1447	302R	24		23-32-21	050-099, 150-199
	32		W1447	302Y	24		23-32-21	050-099, 150-199
	33		W1447	203R	24		23-32-21	050-099, 150-199
	34		W1447	203B	24		23-32-21	050-099, 150-199
	35	UNUSED						050-099, 150-199
	36	UNUSED						050-099, 150-199
	37	UNUSED						050-099, 150-199
	38	UNUSED						050-099, 150-199
	39	UNUSED						050-099, 150-199
	40	UNUSED						050-099, 150-199
	41	UNUSED						050-099, 150-199
			W1447	201Z			23-32-21	050-099, 150-199

HOOKUP LIST
D280T132

91-21-51
Section D06000
Page 20
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06039P		AP0307 / /		PLUG (continued)				050-099, 150-199
			W1447	202Z			23-32-21	050-099, 150-199
			W1447	203Z			23-32-21	050-099, 150-199
			W1447	301Z			23-32-21	050-099, 150-199
			W1447	302Z			23-32-21	050-099, 150-199
			W1447	FRC			23-32-21	050-099, 150-199
D06041J		AP0307 / /		RECP				050-099, 150-199
	= A1		W1419	01CX			23-32-13	050-099, 150-199
	= C1		W1419	01CO			23-32-13	050-099, 150-199
D06041P		AP0307 / /		PLUG-COAXIAL				050-099, 150-199
	= A1		W1447	01CX			23-32-13	050-099, 150-199
	= C1		W1447	01CO			23-32-13	050-099, 150-199
D06042J		AP1401 / /		RCPT-				275-299
	1		W0818	151	22		33-22-42	275-299
	2		W0818	150	22		33-22-42	275-299
	3	UNUSED						275-299
	4		W0818	173	22		33-22-42	275-299
	5		W0818	172	22		33-22-42	275-299
	6		W0818	162	22		33-22-42	275-299
	7		W0818	161	22		33-22-42	275-299
	8	UNUSED						275-299
	9		W0818	154	22		33-22-42	275-299
	10		W0818	155	22		33-22-42	275-299
	11		W0818	175	22		33-22-42	275-299
	12		W0818	174	22		33-22-42	275-299
	13		W0818	183	20		33-22-42	275-299
	14		W0818	176	22		33-22-42	275-299
	15		W0818	177	22		33-22-42	275-299
	16		W0818	163	22		33-22-42	275-299
	17		W0818	164	22		33-22-42	275-299
	18	UNUSED						275-299
	19		W0818	165	22		33-22-42	275-299
	20		W0818	166	20		33-22-42	275-299
	21		W0818	156	22		33-22-42	275-299
	22		W0818	157	20		33-22-42	275-299
	23	UNUSED						275-299
	24	UNUSED						275-299

HOOKUP LIST

D280T132

91-21-51

Section D06000

Page 21

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06042P		AP1401/ /		PLUG-				275-299
	1		W0106	N-B			33-22-42	275-299
	2		W0106	N-A			33-22-42	275-299
	3	UNUSED						275-299
	4		W0106	N-D			33-22-42	275-299
	5		W0106	N-C			33-22-42	275-299
	6		W0106	047	22		33-22-42	275-299
	7		W0106	048	22		33-22-42	275-299
	8	UNUSED						275-299
	9		W0106	045	22		33-22-42	275-299
	10		W0106	046	22		33-22-42	275-299
	11		W0106	020	22		33-22-42	275-299
	12		W0106	021	22		33-22-42	275-299
	13		W0106	025	22		33-22-42	275-299
	14		W0106	L-C			33-22-42	275-299
	15		W0106	L-D			33-22-42	275-299
	16		W0106	039	22		33-22-42	275-299
	17		W0106	040	22		33-22-42	275-299
	18	UNUSED						275-299
	19		W0106	038	22		33-22-42	275-299
	20		W0106	041	22		33-22-42	275-299
	21		W0106	042	22		33-22-42	275-299
	22		W0106	043	22		33-22-42	275-299
	23	UNUSED						275-299
	24	UNUSED						275-299
D06043J		AP0405/ /		RECP				150-199
	1		W0047	516	24		23-31-11	150-199
	2		W0047	517	24		23-31-11	150-199
	3		W0047	289R	24		23-31-11	150-199
	4		W0047	289B	24		23-31-11	150-199
	5		W0047	289Z			23-31-11	150-199
	6		W0047	518	24		23-31-13	150-199
	7		W0047	530	24		23-31-12	150-199
	8		W0047	520	24		23-31-13	150-199
	9		W0047	521	24		23-31-13	150-199
	10		W0047	522	24		23-31-13	150-199
	11		W0047	523	24		23-31-14	150-153, 167-199
	11		W0047	523	24		23-31-13	154-166
	12		W0047	524	24		23-31-14	150-153, 167-199
	12		W0047	524	24		23-31-13	154-166

HOOKUP LIST
D280T132

91-21-51
Section D06000
Page 22
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06043J		AP0405/ /		RECP (continued)				150-199
	13		W0047	292R	24		23-22-12	150-199
	14		W0047	292B	24		23-22-12	150-199
	15		W0047	292Z			23-22-12	150-199
	16		W0047	291R	24		23-22-12	150-199
	17		W0047	291B	24		23-22-12	150-199
	18		W0047	291Z			23-22-12	150-199
	19		W0047	290R	20		23-22-12	150-199
	20		W0047	290B	20		23-22-12	150-199
	21		W0047	529	24		23-31-12	150-199
	22		W0047	294Z			23-31-12	150-199
	23		W0047	528	24		23-31-12	150-199
	24		W0047	527	24		23-31-12	150-199
	25		W0047	294B	24		23-31-12	150-199
	26		W0047	294R	24		23-31-12	150-199
	27		W0047	531	24		23-31-12	150-199
	28		W0047	536	24		23-34-14	150-199
	29		W0047	536Z			23-34-14	150-199
	30		W0047	537	24		23-34-14	150-199
	31		W0047	537Z			23-34-14	150-199
	32	UNUSED						150-199
	33	UNUSED						150-199
	34	UNUSED						150-199
	35	UNUSED						150-199
	36	UNUSED						150-199
	37	UNUSED						150-199
	38	UNUSED						150-199
	39	UNUSED						150-199
	40	UNUSED						150-199
	41	UNUSED						150-199
	42	UNUSED						150-199
	43	UNUSED						150-199
	44	UNUSED						150-199
	45	UNUSED						150-199
	46	UNUSED						150-199
	47	UNUSED						150-199
	48	UNUSED						150-199
	49	UNUSED						150-199
	50	UNUSED						150-199
	51	UNUSED						150-199
	52	UNUSED						150-199

HOOKUP LIST

D280T132

91-21-51

Section D06000

Page 23

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06043J		AP0405/ /		RECP (continued)				150-199
	53	UNUSED						150-199
	54	UNUSED						150-199
	55	UNUSED						150-199
D06043P		AP0305/ /		PLUG				050-099
D06043P		AP0405/ /		PLUG				150-199
	1	UNUSED						050-099
	1		W1447	056	24		23-31-11	150-199
	2	UNUSED						050-099
	2		W1447	057	24		23-31-11	150-199
	3	UNUSED						050-099
	3		W1447	205R	24		23-31-11	150-199
	4	UNUSED						050-099
	4		W1447	205B	24		23-31-11	150-199
	5	UNUSED						050-099
	5		W1447	205Z			23-31-11	150-199
	6		W1447	058	24		23-31-13	050-099, 150-199
	7		W1447	059	24		23-31-12	050-099, 150-199
	8		W1447	060	24		23-31-13	050-099, 150-199
	9		W1447	061	24		23-31-13	050-099, 150-199
	10		W1447	062	24		23-31-13	050-099, 150-199
	11		W1447	063	24		23-31-13	050, 162-166
	11		W1447	063	24		23-31-14	051-099, 150-157, 167-199
	12		W1447	064	24		23-31-13	050, 162-166
	12		W1447	064	24		23-31-14	051-099, 150-157, 167-199
	13		W1447	208R	24		23-22-12	050-099, 150-199
	14		W1447	208B	24		23-22-12	050-099, 150-199
	15		W1447	FRF			23-22-12	050-099, 150-199
	16		W1447	207R	24		23-22-12	050-099, 150-199
	17		W1447	207B	24		23-22-12	050-099, 150-199
	18		W1447	FRE			23-22-12	050-099, 150-199
	19		W1447	206R	20		23-22-12	050-099, 150-199
	20		W1447	206B	20		23-22-12	050-099, 150-199
	21		W1447	069	22		23-31-12	050-099, 150-199
	22		W1447	216Z			23-31-12	050-099, 150-199
	23		W1447	068	22		23-31-12	050-099, 150-199
	24		W1447	067	22		23-31-12	050-099, 150-199
	25		W1447	216B	24		23-31-12	050-099, 150-199
	26		W1447	216R	24		23-31-12	050-099, 150-199
	27		W1447	070	24		23-31-12	050-099, 150-199

HOOKUP LIST

D280T132

91-21-51

Section D06000

Page 24

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06043P		AP0305/ /		PLUG (continued)				050-099
D06043P		AP0405/ /		PLUG (continued)				150-199
	28		W1447	111	24		23-34-14	050-099, 150-199
	29		W1447	111Z			23-34-14	050-099, 150-199
	30		W1447	112	24		23-34-14	050-099, 150-199
	31		W1447	112Z			23-34-14	050-099, 150-199
	32	UNUSED						050-099, 150-199
	33	UNUSED						050-099, 150-199
	34	UNUSED						050-099, 150-199
	35	UNUSED						050-099, 150-199
	36	UNUSED						050-099, 150-199
	37	UNUSED						050-099, 150-199
	38	UNUSED						050-099, 150-199
	39	UNUSED						050-099, 150-199
	40	UNUSED						050-099, 150-199
	41	UNUSED						050-099, 150-199
	42	UNUSED						050-099, 150-199
	43	UNUSED						050-099, 150-199
	44	UNUSED						050-099, 150-199
	45	UNUSED						050-099, 150-199
	46	UNUSED						050-099, 150-199
	47	UNUSED						050-099, 150-199
	48	UNUSED						050-099, 150-199
	49	UNUSED						050-099, 150-199
	50	UNUSED						050-099, 150-199
	51	UNUSED						050-099, 150-199
	52	UNUSED						050-099, 150-199
	53	UNUSED						050-099, 150-199
	54	UNUSED						050-099, 150-199
	55	UNUSED						050-099, 150-199
			W1447	207	20		23-22-12	050-099, 150-199
			W1447	207Z			23-22-12	050-099, 150-199
			W1447	208	20		23-22-12	050-099, 150-199
			W1447	208Z			23-22-12	050-099, 150-199
			W1447	FRE			23-22-12	050-099, 150-199
			W1447	FRF			23-22-12	050-099, 150-199
D06045J		AP0305/ /		RECP-MOA PER DWG REF BACC45FN20-28P6				050-099
D06045J		AP0405/ /		RECP-MOA PER DWG REF BACC45FN20-28P6				150-199
	1		W0047	021	20		23-32-11	050-099, 150-199
	2		W0047	022	20		23-32-11	050-099, 150-199

HOOKUP LIST

D280T132

91-21-51

Section D06000

Page 25

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06045J		AP0305/ /		RECP-MOA PER DWG REF BACC45FN20-28P6 (continued)				050-099
D06045J		AP0405/ /		RECP-MOA PER DWG REF BACC45FN20-28P6 (continued)				150-199
	3		W0047	023	20		23-32-11	050-099, 150-199
	4		W0047	024	20		23-32-11	050-099, 150-199
	5		W0047	072	24		23-32-13	050-099, 150-199
	6		W0047	073	24		23-32-13	050-099, 150-199
	7		W0047	074	24		23-32-13	050-099, 150-199
	8		W0047	071	20		23-32-13	050-099, 150-199
	9		W0047	076	24		23-32-13	050-099, 150-199
	10		W0047	077	24		23-32-13	050-099, 150-199
	11		W0047	078	24		23-32-13	050-099, 150-199
	12		W0047	075	20		23-32-13	050-099, 150-199
	13		W0047	080	24		23-32-13	050-099, 150-199
	14		W0047	081	24		23-32-13	050-099, 150-199
	15		W0047	09CX			23-32-21	050-099, 151
	15		W0047	11CX			23-32-21	150, 152-199
	16		W0047	082	24		23-32-13	050-099, 150-199
	17		W0047	079	20		23-32-13	050-099, 150-199
	18		W0047	021Z			23-32-11	050-099, 150-199
	19		W0047	04CX			23-32-13	050-099, 150-199
	20		W0047	900	20		23-32-11	050-099, 150-155, 162-165
	20	UNUSED						156-157, 166-199
	21	UNUSED						050-099, 150-199
	22	UNUSED						050-099, 150-199
	23		W0047	05CX			23-32-13	050-099, 150-199
	24	UNUSED						050-099, 150-199
	25	UNUSED						050-099, 150-199
	26	UNUSED						050-099, 150-199
	27		W0047	08CX			23-32-13	050-099, 150-199
	28	UNUSED						050-099, 150-199
	= C15		W0047	09CO			23-32-21	050-099, 151
	= C15		W0047	11CO			23-32-21	150, 152-199
	= C19		W0047	04CO			23-32-13	050-099, 150-199
	= C23		W0047	05CO			23-32-13	050-099, 150-199
	= C27		W0047	08CO			23-32-13	050-099, 150-199
D06045P		AP0305/ /		PLUG-MOA PER DWG REF BACC45FT20-28S6				050-099
D06045P		AP0405/ /		PLUG-MOA PER DWG REF BACC45FT20-28S6				150-199
	1		W1447	004	20		23-32-11	050-099, 150-199
	2		W1447	005	20		23-32-11	050-099, 150-199
	3		W1447	006	20		23-32-11	050-099, 150-199

HOOKUP LIST

D280T132

91-21-51

Section D06000

Page 26

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06045P		AP0305/ /		PLUG-MOA PER DWG REF BACC45FT20-28S6 (continued)				050-099
D06045P		AP0405/ /		PLUG-MOA PER DWG REF BACC45FT20-28S6 (continued)				150-199
	4		W1447	007	20		23-32-11	050-099, 150-199
	5		W1447	011	24		23-32-13	050-099, 150-199
	6		W1447	012	24		23-32-13	050-099, 150-199
	7		W1447	013	24		23-32-13	050-099, 150-199
	8		W1447	014	20		23-32-13	050-099, 150-199
	9		W1447	015	24		23-32-13	050-099, 150-199
	10		W1447	016	24		23-32-13	050-099, 150-199
	11		W1447	017	24		23-32-13	050-099, 150-199
	12		W1447	018	20		23-32-13	050-099, 150-199
	13		W1447	019	24		23-32-13	050-099, 150-199
	14		W1447	020	24		23-32-13	050-099, 150-199
	15		W1447	05CX			23-32-21	050-099, 150-199
	16		W1447	021	24		23-32-13	050-099, 150-199
	17		W1447	022	20		23-32-13	050-099, 150-199
	18		W1447	004Z			23-32-11	050-099, 150-199
	19		W1447	02CX			23-32-13	050-099, 150-199
	20	UNUSED						050-099, 150, 153-199
	20		W9000	900	20		33-26-21	151-152
	21	UNUSED						050-099, 150-199
	22	UNUSED						050-099, 150-199
	23		W1447	03CX			23-32-13	050-099, 150-199
	24	UNUSED						050-099, 150-199
	25	UNUSED						050-099, 150-199
	26	UNUSED						050-099, 150-199
	27		W1447	04CX			23-32-13	050-099, 150-199
	28	UNUSED						050-099, 150-199
	= C15		W1447	05CO			23-32-21	050-099, 150-199
	= C19		W1447	02CO			23-32-13	050-099, 150-199
	= C23		W1447	03CO			23-32-13	050-099, 150-199
	= C27		W1447	04CO			23-32-13	050-099, 150-199
D06047J		AP0305/ /		RECP				050-099
D06047J		AP0405/ /		RECP				150-199
	1	UNUSED						050-099, 151
	1		W0047	950	20		23-32-21	150, 152-199
	2	UNUSED						050-099, 151
	2		W0047	901	20		23-32-21	150, 152-199
	3		W0047	067	20		23-32-11	050-099, 150-199
	4		W0047	064	24		23-32-12	050-099, 150-199

HOOKUP LIST

D280T132

91-21-51

Section D06000

Page 27

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06047J		AP0305/ /		RECP (continued)				050-099
D06047J		AP0405/ /		RECP (continued)				150-199
	5		W0047	066	24		23-32-12	050-099, 150-199
	6		W0047	059	24		23-32-12	050-099, 150-199
	7		W0047	059Z			23-32-12	050-099, 150-199
	8		W0047	061	24		23-32-12	050-099, 150-199
	9		W0047	051	24		23-32-12	050-099, 150-199
	10		W0047	052	24		23-32-12	050-099, 150-199
	11		W0047	054	24		23-32-12	050-099, 150-199
	12		W0047	055	24		23-32-12	050-099, 150-199
	13		W0047	056	24		23-32-12	050-099, 150-199
	14		W0047	057	24		23-32-12	050-099, 150-199
	15		W0047	FRA			23-32-12	050-099, 150-199
	16		W0047	534	22		23-32-12	050-099, 150-199
	17		W0047	535	22		23-32-12	050-099, 150-199
	18		W0047	533	22		23-32-12	050-099, 150-199
	19	UNUSED						050-099, 151
	19		W0047	902	20		23-32-21	150, 152-199
	20		W0047	286R	24		23-32-21	050-099, 150-199
	21	FN	W0047	065	14		23-32-11	050-099, 150-199
	22		W0047	286B	24		23-32-21	050-099, 150-199
	23		W0047	069	16		23-32-11	050-099, 150-199
	24		W0047	287R	24		23-32-21	050-099, 150-199
	25		W0047	287B	24		23-32-21	050-099, 150-199
	26		W0047	FRE			23-32-21	050-099, 151
	26		W0047	306Z			23-32-21	150, 152-199
	27		W0047	305B	24		23-32-21	050-099, 151
	27	UNUSED						150, 152-199
	28		W0047	305R	24		23-32-21	050-099, 151
	28		W0047	920R	22		23-32-21	150, 152-199
	29		W0047	305Y	24		23-32-21	050-099, 151
	29		W0047	920B	22		23-32-21	150, 152-199
	30		W0047	306B	24		23-32-21	050-099, 150-199
	31		W0047	306R	24		23-32-21	050-099, 150-199
	32		W0047	306Y	24		23-32-21	050-099, 150-199
	33		W0047	288R	24		23-32-21	050-099, 151
	33		W0047	909R	20		23-32-21	150, 152-156, 162-199
	33		W0047	909R	22		23-32-21	157
	34		W0047	288B	24		23-32-21	050-099, 151
	34		W0047	909B	20		23-32-21	150, 152-156, 162-199
	34		W0047	909B	22		23-32-21	157

HOOKUP LIST

D280T132

91-21-51

Section D06000

Page 28

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06047J		AP0305/ /		RECP (continued)				050-099
D06047J		AP0405/ /		RECP (continued)				150-199
	35	UNUSED						050-099
	35		W0047	401G	20		23-32-13	150-199
	36	UNUSED						050-099
	36		W0047	401Y	20		23-32-13	150-199
	37	UNUSED						050-099
	37		W0047	401B	20		23-32-13	150-199
	38	UNUSED						050-099
	38		W0047	401R	20		23-32-13	150-199
	39	UNUSED						050-099, 151
	39		W0047	903	20		23-32-21	150, 152-199
	DED		W0047	909Z			23-32-21	150, 152-199
	DED		W0047	920Z			23-32-21	150, 152-199
			W0047	051Z			23-32-12	050-099, 150-199
			W0047	052Z			23-32-12	050-099, 150-199
			W0047	054Z			23-32-12	050-099, 150-199
			W0047	055Z			23-32-12	050-099, 150-199
			W0047	056Z			23-32-12	050-099, 150-199
			W0047	057Z			23-32-12	050-099, 150-199
			W0047	286Z			23-32-21	050-099, 150-199
			W0047	287Z			23-32-21	050-099, 150-199
			W0047	FRA			23-32-12	050-099, 150-199
			W0047	288Z			23-32-21	050-099, 151
			W0047	305Z			23-32-21	050-099, 151
			W0047	306Z			23-32-21	050-099, 151
			W0047	FRE			23-32-21	050-099, 151
D06047P		AP0305/ /		PLUG				050-099
D06047P		AP0405/ /		PLUG				150-199
	1	UNUSED						050-099, 151
	1		W1447	900	20		23-32-21	150, 152-199
	2	UNUSED						050-099, 151
	2		W1447	901	20		23-32-21	150, 152-199
	3		W1447	003	20		23-32-11	050-099, 150-199
	4		W1447	008	24		23-32-12	050-099, 150-199
	5		W1447	009	24		23-32-12	050-099, 150-199
	6		W1447	101	24		23-32-12	050-099, 150-199
	7		W1447	101Z			23-32-12	050-099, 150-199
	8		W1447	010	24		23-32-12	050-099, 150-199
	9		W1447	102	24		23-32-12	050-099, 150-199

HOOKUP LIST

D280T132

91-21-51

Section D06000

Page 29

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06047P		AP0305/ /		PLUG (continued)				050-099
D06047P		AP0405/ /		PLUG (continued)				150-199
	10		W1447	103	24		23-32-12	050-099, 150-199
	11		W1447	104	24		23-32-12	050-099, 150-199
	12		W1447	105	24		23-32-12	050-099, 150-199
	13		W1447	106	24		23-32-12	050-099, 150-199
	14		W1447	107	24		23-32-12	050-099, 150-199
	15		W1447	FRB			23-32-12	050-099, 150-199
	16		W1447	109	22		23-32-12	050-099, 150-199
	17		W1447	110	22		23-32-12	050-099, 150-199
	18		W1447	108	22		23-32-12	050-099, 150-199
	19	UNUSED						050-099, 151
	19		W1447	902	20		23-32-21	150, 152-199
	20		W1447	201R	24		23-32-21	050-099, 150-199
	21		W1447	001	20		23-32-11	050-099, 150-199
	22		W1447	201B	24		23-32-21	050-099, 150-199
	23		W1447	002	16		23-32-11	050-099, 150-199
	24		W1447	202R	24		23-32-21	050-099, 150-199
	25		W1447	202B	24		23-32-21	050-099, 150-199
	26		W1447	FRD			23-32-21	050-099, 150-199
	27		W1447	301B	24		23-32-21	050-099, 150-199
	28		W1447	301R	24		23-32-21	050-099, 150-199
	29		W1447	301Y	24		23-32-21	050-099, 150-199
	30		W1447	302B	24		23-32-21	050-099, 150-199
	31		W1447	302R	24		23-32-21	050-099, 150-199
	32		W1447	302Y	24		23-32-21	050-099, 150-199
	33		W1447	203R	24		23-32-21	050-099, 150-199
	34		W1447	203B	24		23-32-21	050-099, 150-199
	35		W1447	401G	20		23-32-13	050-099, 150-199
	36		W1447	401Y	20		23-32-13	050-099, 150-199
	37		W1447	401B	20		23-32-13	050-099, 150-199
	38		W1447	401R	20		23-32-13	050-099, 150-199
	39	UNUSED						050-099, 151
	39		W1447	903	20		23-32-21	150, 152-199
			W1447	102Z			23-32-12	050-099, 150-199
			W1447	103Z			23-32-12	050-099, 150-199
			W1447	104Z			23-32-12	050-099, 150-199
			W1447	105Z			23-32-12	050-099, 150-199
			W1447	106Z			23-32-12	050-099, 150-199
			W1447	107Z			23-32-12	050-099, 150-199
			W1447	201Z			23-32-21	050-099, 150-199

HOOKUP LIST

D280T132

91-21-51

Section D06000

Page 30

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06047P		AP0305/ /		PLUG (continued)				050-099
D06047P		AP0405/ /		PLUG (continued)				150-199
			W1447	202Z			23-32-21	050-099, 150-199
			W1447	203Z			23-32-21	050-099, 150-199
			W1447	301Z			23-32-21	050-099, 150-199
			W1447	302Z			23-32-21	050-099, 150-199
			W1447	FRB			23-32-12	050-099, 150-199
			W1447	FRD			23-32-21	050-099, 150-199
D06049J		AP0405/ /		RECP-COAXIAL				151-152
	= A1		W0047	07CX			23-32-13	151-152
	= C1		W0047	07CO			23-32-13	151-152
D06049P		AP0305/ /		PLUG-COAXIAL				050-099
D06049P		AP0405/ /		PLUG-COAXIAL				150-199
	= A1		W1447	01CX			23-32-13	050-099, 150-199
	= C1		W1447	01CO			23-32-13	050-099, 150-199
D06051J		0639/295/R016		RCPT-				050-099
D06051J		639/295/R016		RECP				150-199
	1		W0665	159	22		23-42-11	050-099, 150-199
	2		W0665	173	24		23-34-13	050-099, 150-199
	3		W0665	181	22		33-25-11	050-099, 150-199
	4		W0665	157	20		23-42-11	050-099, 150-199
	5	UNUSED						050-099, 150-199
D06051P		0639/295/R 16		PLUG				050-099, 150-199
	1		W1109	001	22		23-42-11	050-099, 150-199
	2		W1109	002	22		23-34-13	050-099, 150-199
	3		W1109	003	22		33-25-11	050-099, 150-199
	4		W1109	004	20		23-42-11	050-099, 150-199
	5	UNUSED						050-099, 150-199
D06052J		AP1402/ /		RCPT-				275-299
	1	UNUSED						275-299
	2		W0818	151	22		33-22-42	275-299
	3		W0818	150	22		33-22-42	275-299
	4	UNUSED						275-299
	5	UNUSED						275-299
	6		W0818	172	22		33-22-42	275-299

HOOKUP LIST

D280T132

91-21-51

Section D06000

Page 31

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06052J		AP1402/ /		RCPT- (continued)				275-299
	7		W0818	173	22		33-22-42	275-299
	8		W0818	174	22		33-22-42	275-299
	9		W0818	175	22		33-22-42	275-299
	10		W0818	179	20		33-22-42	275-299
	11		W0818	164	22		33-22-42	275-299
	12		W0818	163	22		33-22-42	275-299
	13	UNUSED						275-299
	14		W0818	154	22		33-22-42	275-299
	15		W0818	155	22		33-22-42	275-299
	16		W0818	177	22		33-22-42	275-299
	17		W0818	176	22		33-22-42	275-299
	18		W0818	162	22		33-22-42	275-299
	19		W0818	161	22		33-22-42	275-299
	20		W0818	148	20		33-22-42	275-299
	21	UNUSED						275-299
	22	UNUSED						275-299
	23		W0818	147	22		33-22-42	275-299
	24	UNUSED						275-299
D06052P		AP1402/ /		PLUG-				275-299
	1	UNUSED						275-299
	2		W0108	037	22		33-22-42	275-299
	3		W0108	036	22		33-22-42	275-299
	4	UNUSED						275-299
	5	UNUSED						275-299
	6		W0108	018	22		33-22-42	275-299
	7		W0108	019	22		33-22-42	275-299
	8		W0108	026	22		33-22-42	275-299
	9		W0108	027	22		33-22-42	275-299
	10		W0108	023	22		33-22-42	275-299
	11		W0108	024	22		33-22-42	275-299
	12		W0108	025	22		33-22-42	275-299
	13	UNUSED						275-299
	14		W0108	K-A			33-22-42	275-299
	15		W0108	K-B			33-22-42	275-299
	16		W0108	028	22		33-22-42	275-299
	17		W0108	029	22		33-22-42	275-299
	18		W0108	033	22		33-22-42	275-299
	19		W0108	034	22		33-22-42	275-299
	20		W0108	038	22		33-22-42	275-299

HOOKUP LIST
D280T132

91-21-51
Section D06000
Page 32
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06052P		AP1402/ /		PLUG- (continued)				275-299
	21	UNUSED						275-299
	22	UNUSED						275-299
	23		W0108	035	22		33-22-42	275-299
	24	UNUSED						275-299
D06053J D06053J		0639/295/L016 639/295/L016		RCPT- RECP				050-099 150-199
	1		W0665	160	22		23-42-11	050-099, 150-199
	2		W0665	170	24		23-34-13	050-099, 150-199
	3		W0665	190	22		33-25-11	050-099, 150-199
	4		W0665	161	20		23-42-11	050-099, 150-199
	5	UNUSED						050-099, 150-199
D06053P		0639/295/L 16		PLUG				050-099, 150-199
	1		W1111	001	22		23-42-11	050-099, 150-199
	2		W1111	002	22		23-34-13	050-099, 150-199
	3		W1111	003	22		33-25-11	050-099, 150-199
	4		W1111	004	20		23-42-11	050-099, 150-199
	5	UNUSED						050-099, 150-199
D06055J D06055J D06055J		0860/295/R014 0860/295/R014 0888/295/R014		RCPT- RECP RECP				050-099 150-154, 156, 162-199 277-299
	1		W0665	007	22		23-42-11	050-099, 150-154, 156, 162-199, 277-299
	2		W0665	131	24		23-34-13	050-099
	2		W0665	172	24		23-34-13	150-154, 156, 162-199
	2		W0665	012	24		23-34-13	277-299
	3		W0665	191	22		33-25-11	050-099, 150-154, 156, 162-199, 277-299
	4		W0665	033	20		23-42-11	050-099, 150-154, 156, 162-199, 277-299
	5	UNUSED						050-099, 150-154, 156, 162-199, 277-299
D06055P D06055P		0860/295/R 14 0888/295/R 14		PLUG PLUG				050-099, 150-154, 156, 162-199 277-299
	1		W1115	001	22		23-42-11	050-099, 150-154, 156, 162-199, 277-299
	2		W1115	002	22		23-34-13	050-099, 150-154, 156, 162-199, 277-299
	3		W1115	003	22		33-25-11	050-099, 150-154, 156, 162-199, 277-299
	4		W1115	004	20		23-42-11	050-099, 150-154, 156, 162-199, 277-299
	5	UNUSED						050-099, 150-154, 156, 162-199, 277-299

HOOKUP LIST

D280T132

91-21-51

Section D06000

Page 33

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06057J		0860/295/L014		RCPT-				050-099
D06057J		0860/295/L014		RECP				150-154, 156, 162-199
D06057J		0888/295/L014		RECP				277-299
	1		W0665	008	22		23-42-11	050-099, 150-154, 156, 162-199, 277-299
	2		W0665	132	24		23-34-13	050-099
	2		W0665	171	24		23-34-13	150-154, 156, 162-199
	2		W0665	015	24		23-34-13	277-299
	3		W0665	199	22		33-25-11	050-099, 150-154, 156, 162-199, 277-299
	4		W0665	032	20		23-42-11	050-099, 150-154, 156, 162-199, 277-299
	5	UNUSED						050-099, 150-154, 156, 162-199, 277-299
D06057P		0860/295/L 14		PLUG				050-099, 150-154, 156, 162-199
D06057P		0888/295/L 14		PLUG				277-299
	1		W1113	001	22		23-42-11	050-099, 150-154, 156, 162-199, 277-299
	2		W1113	002	22		23-34-13	050-099, 150-154, 156, 162-199, 277-299
	3		W1113	003	22		33-25-11	050-099, 150-154, 156, 162-199, 277-299
	4		W1113	004	20		23-42-11	050-099, 150-154, 156, 162-199, 277-299
	5	UNUSED						050-099, 150-154, 156, 162-199, 277-299
D06059J		1197/295/L014		RCPT-				050-099
D06059J		1197+52/295/L014		RECP				150-199
	1		W0665	163	22		23-42-11	050-099, 150-199
	2		W0665	015	24		23-34-13	050-099, 150-199
	3		W0665	020	22		33-25-11	050-099, 150-199
	4		W0665	162	20		23-42-11	050-099, 150-199
	5	UNUSED						050-099, 150-199
D06059P		1204/295/L 14		PLUG				050-099
D06059P		1197+52/295/L 14		PLUG				150-199
	1		W1117	001	22		23-42-11	050-099, 150-199
	2		W1117	002	22		23-34-13	050-099, 150-199
	3		W1117	003	22		33-25-11	050-099, 150-199
	4		W1117	004	20		23-42-11	050-099, 150-199
	5	UNUSED						050-099, 150-199
D06061J		1197/295/R014		RCPT-				050-099
D06061J		1197+52/295/R014		RECP				150-199
	1		W0665	164	22		23-42-11	050-099, 150-199
	2		W0665	012	24		23-34-13	050-099, 150-199
	3		W0665	021	22		33-25-11	050-099, 150-199

HOOKUP LIST

D280T132

91-21-51

Section D06000

Page 34

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06061J		1197/295/R014		RCPT- (continued)				050-099
D06061J		1197+52/295/R014		RECP (continued)				150-199
	4		W0665	165	20		23-42-11	050-099, 150-199
	5	UNUSED						050-099, 150-199
D06061P		1204/295/R 14		PLUG				050-099
D06061P		1197+52/295/R 14		PLUG				150-199
	1		W1141	001	22		23-42-11	050-099, 150-199
	2		W1141	002	22		23-34-13	050-099, 150-199
	3		W1141	003	22		33-25-11	050-099, 150-199
	4		W1141	004	20		23-42-11	050-099, 150-199
	5	UNUSED						050-099, 150-199
D06062J		0330/283/L010		RCPT-				ALL
	1		W1224	078	22		33-22-41	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W1224	608	22		33-22-41	050-099
	5		W1224	608	20		33-22-41	150-199
	5		W1224	072	22		33-22-41	275-299
	6	UNUSED						ALL
	7		W1224	086	20		33-22-41	ALL
	8		W1224	077	20		33-22-41	ALL
	9		W1224	088	20		33-22-41	ALL
	10		W1224	087	22		33-22-41	050-099, 275-299
	10		W1224	816	22		33-22-41	150-199
	11		W1224	095	20		33-22-41	ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D06000

Page 35

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06062P		0330/283/L010		PLUG-				ALL
	1		W0114	001	22		33-22-41	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W0114	014	22		33-22-41	ALL
	6	UNUSED						ALL
	7		W0114	022	22		33-22-41	ALL
	8		W0114	027	22		33-22-41	ALL
	9		W0114	026	22		33-22-41	ALL
	10		W0114	025	22		33-22-41	ALL
	11		W0114	024	22		33-22-41	ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D06069J		AP0202/ /		RCPT				275
D06069J		AP0205/ /		RCPT				276-278
	1	UNUSED						275-278
	2	UNUSED						275-278
	3	UNUSED						275-278
	4	UNUSED						275-278
	5	UNUSED						275-278
	6	UNUSED						275-278
	7	UNUSED						275-278
	8	UNUSED						275-278
	9	UNUSED						275-278
	10	UNUSED						275-278
	11	UNUSED						275-278
	12	UNUSED						275-278
	13		W0645	212R	24		23-22-12	275-278

HOOKUP LIST
D280T132

91-21-51
Section D06000
Page 36
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06069J		AP0202/ /		RCPT (continued)				275
D06069J		AP0205/ /		RCPT (continued)				276-278
	14		W0645	212B	24		23-22-12	275-278
	15		W0645	FRA			23-22-12	275-278
	16		W0645	213R	24		23-22-12	275-278
	17		W0645	213B	24		23-22-12	275-278
	18		W0645	FRB			23-22-12	275-278
	19		W0645	214R	20		23-22-12	275-278
	20		W0645	214B	20		23-22-12	275-278
	21	UNUSED						275-278
	22	UNUSED						275-278
	23	UNUSED						275-278
	24	UNUSED						275-278
	25	UNUSED						275-278
	26	UNUSED						275-278
	27	UNUSED						275-278
	28	UNUSED						275-278
	29	UNUSED						275-278
	30	UNUSED						275-278
	31	UNUSED						275-278
			W0645	212	20		23-22-12	275-278
			W0645	212Z			23-22-12	275-278
			W0645	213	20		23-22-12	275-278
			W0645	213Z			23-22-12	275-278
			W0645	FRA			23-22-12	275-278
			W0645	FRB			23-22-12	275-278
D06069P		AP0202/ /		PLUG				275
D06069P		AP0205/ /		PLUG				276-278
	1	UNUSED						275-278
	2	UNUSED						275-278
	3	UNUSED						275-278
	4	UNUSED						275-278
	5	UNUSED						275-278
	6	UNUSED						275-278
	7	UNUSED						275-278
	8	UNUSED						275-278
	9	UNUSED						275-278
	10	UNUSED						275-278
	11	UNUSED						275-278
	12	UNUSED						275-278

HOOKUP LIST

D280T132

91-21-51

Section D06000

Page 37

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06069P		AP0202/ /		PLUG (continued)				275
D06069P		AP0205/ /		PLUG (continued)				276-278
	13		W0047	292R	24		23-22-12	275-278
	14		W0047	292B	24		23-22-12	275-278
	15		W0047	292Z			23-22-12	275-278
	16		W0047	291R	24		23-22-12	275-278
	17		W0047	291B	24		23-22-12	275-278
	18		W0047	291Z			23-22-12	275-278
	19		W0047	290R	20		23-22-12	275-278
	20		W0047	290B	20		23-22-12	275-278
	21	UNUSED						275-278
	22	UNUSED						275-278
	23	UNUSED						275-278
	24	UNUSED						275-278
	25	UNUSED						275-278
	26	UNUSED						275-278
	27	UNUSED						275-278
	28	UNUSED						275-278
	29	UNUSED						275-278
	30	UNUSED						275-278
	31	UNUSED						275-278
D06074J		AE0319/ /		RCPT-				ALL
	1		W0942	061	12		21-58-14	ALL
	2		W0942	062	12		21-58-14	ALL
	3		W0942	063	12		21-58-14	ALL
	4		W0942	064	18		21-58-14	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
D06074P		AE0319/ /		PLUG-				ALL
	1		W0986	025	12		21-58-14	ALL
	2		W0986	026	12		21-58-14	ALL
	3		W0986	027	12		21-58-14	ALL
	4		W0986	030	18		21-58-14	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D06000
Page 38
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06076J		AE0218/ /		RCPT-P37				ALL
	1		W0192	20U	22		21-26-31	ALL
	2		W0192	504	24		21-58-15	ALL
	3		W0192	765	22		21-61-11	ALL
	4		W0192	02Y	24		21-61-21	ALL
	5		W0192	02Z	24		21-61-31	ALL
	6		W0192	89A	24		21-58-15	ALL
	7	UNUSED						050-099
	7		W0192	19B	24		21-58-16	150-199, 275-299
	8		W0192	545	24		21-58-16	ALL
	9		W0192	65Y	24		36-11-62	ALL
	10		W0192	14G	24		73-21-11	ALL
	11	UNUSED						ALL
	12		W0192	17Y	24		21-58-12	ALL
	13		W0192	19F	24		21-58-12	ALL
	14		W0192	19G	24		21-58-12	ALL
	15	UNUSED						050-099
	15		W0192	19A	24		21-58-16	150-199, 275-299
	16		W0192	14GZ			73-21-11	ALL
	17		W0192	65P	24		36-11-62	ALL
	18		W0192	71W	22		36-11-62	ALL
	19		W0192	71V	22		36-11-62	ALL
	20		W0192	24A	22		36-11-62	ALL
	21		W0192	683	24		36-11-62	ALL
	22		W0192	682	24		36-11-62	ALL
	23		W0192	681	22		36-11-62	ALL
	24		W0192	680	22		36-11-62	ALL
D06076P		AE0218/ /		PLUG-P37				ALL
	1		W0506	743	22		21-26-31	ALL
	2		W0506	140	24		21-58-15	ALL
	3		W0506	626	22		21-61-11	ALL
	4		W0506	627	24		21-61-21	ALL
	5		W0506	628	24		21-61-31	ALL
	6		W0506	710	24		21-58-15	ALL
	7	UNUSED						050-099
	7		W0506	011	24		21-58-16	150-199, 275-299
	8		W0506	625	24		21-58-16	ALL
	9		W0506	561	24		36-11-62	ALL
	10		W0506	685	24		73-21-11	ALL
	11	UNUSED						050-099, 275-299

HOOKUP LIST

D280T132

91-21-51

Section D06000

Page 39

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06076P		AE0218/ /		PLUG-P37 (continued)				ALL
	11		W0506	702	24		SPARE	150-199
	12		W0506	703	24		21-58-12	ALL
	13		W0506	704	24		21-58-12	ALL
	14		W0506	705	24		21-58-12	ALL
	15	UNUSED						050-099
	15		W0506	010	24		21-58-16	150-199, 275-299
	16		W0506	685Z			73-21-11	ALL
	17		W0506	571	24		36-11-62	ALL
	18		W0506	738	22		36-23-21	ALL
	19		W0506	739	22		36-23-21	ALL
	20	DK	W0506	558	18		36-11-62	050-099
	20		W0506	558	22		36-11-62	150-199, 275-299
	21		W0506	724	24		36-11-62	ALL
	22		W0506	723	24		36-11-62	ALL
	23		W0506	722	22		36-11-62	ALL
	24		W0506	721	22		36-11-62	ALL
	CAP	Y	W0506	010	24		SPARE	050-099
	CAP	Y	W0506	011	24		SPARE	050-099
D06078J		AL1001/ /		RCPT-				ALL
	1		W0596	107	20		28-41-23	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	=C1		W0596	107Z			28-41-23	ALL
D06078P		AL1001/ /		PLUG-L WING RS/BODY				ALL
	1		W0454	19TX			28-41-23	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	=C1		W0454	19TI			28-41-23	ALL
D06079J		368/315/0		RCPT				050-099, 150-199, 277-299
	=A1		W1771	01CX			34-45-11	050-099, 150-199, 277-299
	=C1		W1771	01CO			34-45-11	050-099, 150-199, 277-299
D06079P		368/315/0		PLUG				050-099, 150-199, 277-299
	=A1		W1791	01CX			34-45-11	050-099, 150-199, 277-299
	=C1		W1791	01CO			34-45-11	050-099, 150-199, 277-299

HOOKUP LIST
D280T132

91-21-51
Section D06000
Page 40
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06080J		AL1002/ /		RCPT-R FWD OUTBD				ALL
	1		W0738	057	20		28-41-23	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	=C1		W0738	057Z			28-41-23	ALL
D06080P		AL1002/ /		PLUG-R WING RS/BODY				ALL
	1		W0448	38TX			28-41-23	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	=C1		W0448	38TI			28-41-23	ALL
D06081J		368/315/0		RCPT				050-099, 150-199, 277-299
	=A1		W1775	01CX			34-45-11	050-099, 150-199, 277-299
	=C1		W1775	01CO			34-45-11	050-099, 150-199, 277-299
D06081P		368/315/0		PLUG				050-099, 150-199, 277-299
	=A1		W1795	01CX			34-45-11	050-099, 150-199, 277-299
	=C1		W1795	01CO			34-45-11	050-099, 150-199, 277-299
D06083J		373/315/0		RCPT				050-099, 150-199, 277-299
	=A1		W1777	01CX			34-45-11	050-099, 150-199, 277-299
	=C1		W1777	01CO			34-45-11	050-099, 150-199, 277-299
D06083P		368/315/0		PLUG				050-099, 150-199, 277-299
	=A1		W1797	01CX			34-45-11	050-099, 150-199, 277-299
	=C1		W1797	01CO			34-45-11	050-099, 150-199, 277-299
D06085J		373/315/0		RCPT				050-099, 150-199, 277-299
	=A1		W1779	01CX			34-45-11	050-099, 150-199, 277-299
	=C1		W1779	01CO			34-45-11	050-099, 150-199, 277-299
D06085P		368/315/0		PLUG				050-099, 150-199, 277-299
	=A1		W1799	01CX			34-45-11	050-099, 150-199, 277-299
	=C1		W1799	01CO			34-45-11	050-099, 150-199, 277-299
D06087J		AE0325/ /		RCPT				050-099, 150-199, 277-299
	=A1		W1771	01CX			34-45-11	050-099, 150-199, 277-299
	=C1		W1771	01CO			34-45-11	050-099, 150-199, 277-299

HOOKUP LIST

D280T132

91-21-51

Section D06000

Page 41

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06087P		AE0325/ /		PLUG				050-099, 150-199, 277-299
	= A1		W1171	01CX			34-45-11	050-099, 150-199, 277-299
	= C1		W1171	01CO			34-45-11	050-099, 150-199, 277-299
D06089J		AE0325/ /		RCPT				050-099, 150-199, 277-299
	= A1		W1775	01CX			34-45-11	050-099, 150-199, 277-299
	= C1		W1775	01CO			34-45-11	050-099, 150-199, 277-299
D06089P		AE0325/ /		PLUG				050-099, 150-199, 277-299
	= A1		W1175	01CX			34-45-11	050-099, 150-199, 277-299
	= C1		W1175	01CO			34-45-11	050-099, 150-199, 277-299
D06091J		AE0325/ /		RCPT				050-099, 150-199, 277-299
	= A1		W1777	01CX			34-45-11	050-099, 150-199, 277-299
	= C1		W1777	01CO			34-45-11	050-099, 150-199, 277-299
D06091P		AE0325/ /		PLUG				050-099, 150-199, 277-299
	= A1		W1177	01CX			34-45-11	050-099, 150-199, 277-299
	= C1		W1177	01CO			34-45-11	050-099, 150-199, 277-299
D06093J		AE0325/ /		RCPT				050-099, 150-199, 277-299
	= A1		W1779	01CX			34-45-11	050-099, 150-199, 277-299
	= C1		W1779	01CO			34-45-11	050-099, 150-199, 277-299
D06093P		AE0325/ /		PLUG				050-099, 150-199, 277-299
	= A1		W1179	01CX			34-45-11	050-099, 150-199, 277-299
	= C1		W1179	01CO			34-45-11	050-099, 150-199, 277-299
D06095J		AE0325/ /		RCPT				050-099, 150-199, 277-299
	= A1		W1769	01CX			34-45-11	050-099, 150-199, 277-299
	= C1		W1769	01CO			34-45-11	050-099, 150-199, 277-299
D06095P		AE0325/****/		PLUG				050-099, 150-199, 277-299
	= A1		W1181	01CX			34-45-11	050-099, 150-199, 277-299
	= C1		W1181	01CO			34-45-11	050-099, 150-199, 277-299
D06096J		0455/284/R040		RCPT-				275-278
D06096J		0451/286/R051		RCPT-				280-299
	= 1		W1236	007	22		33-21-21	275-299

HOOKUP LIST
D280T132

91-21-51
Section D06000
Page 42
Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06096P		0455/284/R040		PLUG-				275-299
	= 1		W0132	001	22		33-21-21	275-299
D06097J		AE0326/ /		RCPT				050-099, 150-199, 277-299
	= A1		W1769	01CX			34-45-11	050-099, 150-199, 277-299
	= C1		W1769	01CO			34-45-11	050-099, 150-199, 277-299
D06097P		AE0326/ /		RCPT				050-099, 150-199, 277-299
	= A1		W1901	01CX			34-45-11	050-099, 150-199, 277-299
	= C1		W1901	01CO			34-45-11	050-099, 150-199, 277-299
D06098J		0365/284/R025		RCPT-				275-299
	1		W0132	018	20		33-21-11	275-299
	2		W0132	L-C			33-21-11	275-299
	3		W0132	L-D			33-21-11	275-299
	4		W0132	L-A			33-21-11	275-299
	5		W0132	L-B			33-21-11	275-299
	6	UNUSED						275-299
	7	UNUSED						275-299
	8	UNUSED						275-299
	9	UNUSED						275-299
	10	UNUSED						275-299
	11	UNUSED						275-299
	12	UNUSED						275-299
D06098P		0365/284/R025		PLUG-				275-278
D06098P		0411/284/R027		PLUG-				280-299
	1		W0822	077	20		33-21-11	275-299
	2		W0822	074	20		33-21-11	275-299
	3		W0822	075	20		33-21-11	275-299
	4		W0822	065	20		33-21-11	275-299
	5		W0822	066	20		33-21-11	275-299
	6	UNUSED						275-299
	7	UNUSED						275-299
	8	UNUSED						275-299
	9	UNUSED						275-299
	10	UNUSED						275-299
	11	UNUSED						275-299
	12	UNUSED						275-299

HOOKUP LIST

D280T132

91-21-51

Section D06000

Page 43

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06099J		255/270/R020		RECP-MOA PER DWG REF BACC45FN20-28S9				275
D06099J		244/284/L013		RECP-MOA PER DWG REF BACC45FN20-28S9				276-278
D06099J		AP0205/ /		RECP-MOA PER DWG REF BACC45FN20-28S				280-299
	1		W1417	206R	24		23-32-21	275-299
	2		W1417	206B	24		23-32-21	275-299
	3		W1417	207R	24		23-32-21	275-299
	4		W1417	207B	24		23-32-21	275-299
	5		W1417	301B	24		23-32-21	275-299
	6		W1417	301R	24		23-32-21	275-299
	7		W1417	301Y	24		23-32-21	275-299
	8		W1417	302B	24		23-32-21	275-299
	9		W1417	302R	24		23-32-21	275-299
	10		W1417	302Y	24		23-32-21	275-299
	11		W1417	208R	24		23-32-21	275-299
	12		W1417	208B	24		23-32-21	275-299
	13	UNUSED						275-278
	13		W1417	617	20		23-32-21	280-299
	14	UNUSED						275-299
	15		W1417	09CX			23-32-21	275-299
	16	UNUSED						275-299
	17	UNUSED						275-299
	18	UNUSED						275-299
	19	UNUSED						275-299
	20	UNUSED						275-299
	21	UNUSED						275-299
	22	UNUSED						275-299
	23	UNUSED						275-299
	24	UNUSED						275-299
	25	UNUSED						275-299
	26		W1417	FRC			23-32-21	275-299
	27	UNUSED						275-299
	28	UNUSED						275-299
	C19	UNUSED						275-299
	C23	UNUSED						275-299
	C27	UNUSED						275-299
	=C15		W1417	09CO			23-32-21	275-299
			W1417	206Z			23-32-21	275-299
			W1417	207Z			23-32-21	275-299
			W1417	208Z			23-32-21	275-299
			W1417	301Z			23-32-21	275-299
			W1417	302Z			23-32-21	275-299

HOOKUP LIST

D280T132

91-21-51

Section D06000

Page 44

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06099J		255/270/R020		RECP-MOA PER DWG REF BACC45FN20-28S9 (continued)				275
D06099J		244/284/L013		RECP-MOA PER DWG REF BACC45FN20-28S9 (continued)				276-278
D06099J		AP0205/ /		RECP-MOA PER DWG REF BACC45FN20-28S (continued)				280-299
			W1417	FRC			23-32-21	275-299
D06099P		AP0202/ /		PLUG-MOA PER DWG REF BACC45FT20-28P9				275
D06099P		AP0205/ /		PLUG-MOA PER DWG REF BACC45FT20-28P9				276-278
D06099P		AP0205/ /		PLUG-MOA PER DWG REF BACC45FT20-28P				280-299
	1		W0047	286R	24		23-32-21	275-299
	2		W0047	286B	24		23-32-21	275-299
	3		W0047	287R	24		23-32-21	275-299
	4		W0047	287B	24		23-32-21	275-299
	5		W0047	305B	24		23-32-21	275-299
	6		W0047	305R	24		23-32-21	275-299
	7		W0047	305Y	24		23-32-21	275-299
	8		W0047	306B	24		23-32-21	275-299
	9		W0047	306R	24		23-32-21	275-299
	10		W0047	306Y	24		23-32-21	275-299
	11		W0047	288R	24		23-32-21	275-299
	12		W0047	288B	24		23-32-21	275-299
	13	UNUSED						275-278
	13		W0047	626	20		23-32-21	280-299
	14	UNUSED						275-299
	15		W0047	09CX			23-32-21	275-299
	16	UNUSED						275-299
	17	UNUSED						275-299
	18	UNUSED						275-299
	19	UNUSED						275-299
	20	UNUSED						275-299
	21	UNUSED						275-299
	22	UNUSED						275-299
	23	UNUSED						275-299
	24	UNUSED						275-299
	25	UNUSED						275-299
	26		W0047	FRE			23-32-21	275-299
	27	UNUSED						275-299
	28	UNUSED						275-299
	C19	UNUSED						275-299
	C23	UNUSED						275-299
	C27	UNUSED						275-299
	= C15		W0047	09CO			23-32-21	275-299

HOOKUP LIST

D280T132

91-21-51

Section D06000

Page 45

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06099P		AP0202/ /		PLUG-MOA PER DWG REF BACC45FT20-28P9 (continued)				275
D06099P		AP0205/ /		PLUG-MOA PER DWG REF BACC45FT20-28P9 (continued)				276-278
D06099P		AP0205/ /		PLUG-MOA PER DWG REF BACC45FT20-28P (continued)				280-299
			W0047	286Z			23-32-21	275-299
			W0047	287Z			23-32-21	275-299
			W0047	288Z			23-32-21	275-299
			W0047	305Z			23-32-21	275-299
			W0047	306Z			23-32-21	275-299
			W0047	FRE			23-32-21	275-299

HOOKUP LIST

D280T132

91-21-51

Section D06000

Page 46 End

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06100J		0383/284/R040		RCPT-				275-299
	1		W0820	005	20		33-26-21	275-299
	2	UNUSED						275-299
	3	UNUSED						275-299
	4		W0820	026	22		33-26-21	275-299
	5		W0820	025	22		33-26-21	275-299
	6	UNUSED						275-299
	7	UNUSED						275-299
	8	UNUSED						275-299
	9	UNUSED						275-299
	10	UNUSED						275-299
	11	UNUSED						275-299
	12	UNUSED						275-299
D06100P		0364/284/R032		PLUG-				275-299
	1		W0132	008	22		33-26-21	275-299
	2	UNUSED						275-299
	3	UNUSED						275-299
	4		W0132	011	22		33-26-21	275-299
	5		W0132	012	22		33-26-21	275-299
	6	UNUSED						275-299
	7	UNUSED						275-299
	8	UNUSED						275-299
	9	UNUSED						275-299
	10	UNUSED						275-299
	11	UNUSED						275-299
	12	UNUSED						275-299
D06102J		0455/284/R040		RCPT-				275-299
	=1		W0132	002	22		33-21-21	275-299
D06102P		0456/284/R040		PLUG-				275-278
D06102P		0451/286/R051		PLUG-				280-299
	=1		W1236	009	20		33-21-21	275-299
D06103J		0352/284/L 49		RECPT				275-299
	1		W0645	149	24		23-31-12	275-299
	2		W0645	090	22		SPARE	275-299
	3		W0645	154	24		23-31-12	275-299
	4	UNUSED						275-299
	5		W0645	156	20		23-31-12	275-299

HOOKUP LIST

D280T132

91-21-51

Section D06100

Page 1

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06103J		0352/284/L 49		RECPT (continued)				275-299
	6		W0645	216R	24		23-31-12	275-299
	7		W0645	215R	24		23-31-12	275-299
	8	UNUSED						275-299
	9	UNUSED						275-299
	10	UNUSED						275-299
	11	UNUSED						275-299
	12		W0645	153	24		23-31-12	275-299
	13	UNUSED						275-299
	14		W0645	150	24		23-31-12	275-299
	15	UNUSED						275-299
	16	UNUSED						275-299
	17		W0645	216B	24		23-31-12	275-299
	18		W0645	215B	24		23-31-12	275-299
	19		W0645	216Z			23-31-12	275-299
	20		W0645	148	22		23-31-12	275-299
	21		W0645	159	20		23-31-12	275-299
	22		W0645	215Z			23-31-12	275-299
	23		W0645	157	20		23-31-12	275-299
	24		W0645	152	24		23-31-12	275-299
	DED		W0645	149Z			23-31-12	280-299
	DED		W0645	150Z			23-31-12	280-299
	DED		W0645	152Z			23-31-12	280-299
	DED		W0645	153Z			23-31-12	280-299
	DED		W0645	154Z			23-31-12	280-299
D06103P		0352/284/L 49		PLUG				275-299
	1		W0069	001	24		23-31-12	275-299
	2	UNUSED						275-299
	3		W0069	003	24		23-31-12	275-299
	4	UNUSED						275-299
	5		W0069	005	22		23-31-12	275-278
	5		W0069	005	20		23-31-12	280-299
	6		W0069	202R	24		23-31-12	275-299
	7		W0069	201R	24		23-31-12	275-299
	8	UNUSED						275-299
	9	UNUSED						275-299
	10	UNUSED						275-299
	11	UNUSED						275-299
	12		W0069	012	24		23-31-12	275-299
	13	UNUSED						275-299

HOOKUP LIST
D280T132

91-21-51
Section D06100
Page 2
Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06103P		0352/284/L 49		PLUG (continued)				275-299
	14		W0069	014	24		23-31-12	275-299
	15	UNUSED						275-299
	16	UNUSED						275-299
	17		W0069	202B	24		23-31-12	275-299
	18		W0069	201B	24		23-31-12	275-299
	19		W0069	202Z			23-31-12	275-299
	20		W0069	020	22		23-31-12	275-299
	21		W0069	021	22		23-31-12	275-278
	21		W0069	021	20		23-31-12	280-299
	22		W0069	201Z			23-31-12	275-299
	23		W0069	023	22		23-31-12	275-278
	23		W0069	023	20		23-31-12	280-299
	24		W0069	024	24		23-31-12	275-299
	DED		W0069	001Z			23-31-12	280-299
	DED		W0069	003Z			23-31-12	280-299
	DED		W0069	012Z			23-31-12	280-299
	DED		W0069	014Z			23-31-12	280-299
	DED		W0069	024Z			23-31-12	280-299
D06105J		AP0307/ /		RCPT-				050-099, 162-199
	1		W1379	304Y	24		23-34-15	050-099, 162-199
	2	FM	W1379	026	16		23-34-15	050-099
	2	FL	W1379	026	16		23-34-15	162-199
	3	FM	W1379	027	16		23-34-15	050-099
	3	FL	W1379	027	16		23-34-15	162-199
	4		W1379	304B	24		23-34-15	050-099, 162-199
	5		W1379	304R	24		23-34-15	050-099, 162-199
D06105P		AP0307/ /		PLUG				050-099, 162-199
	1		W1449	304Y	24		23-34-15	050-099, 162-199
	2	FL	W1449	072	16		23-34-15	050-099, 162-199
	3	FL	W1449	073	16		23-34-15	050-099, 162-199
	4		W1449	304B	24		23-34-15	050-099, 162-199
	5		W1449	304R	24		23-34-15	050-099, 162-199
D06106J		0278/072/0000		RCPT-TORQUE LINK				050-099, 155-199, 275-299
	1	UNUSED						050-099, 155-199, 275-299
	2	UNUSED						050-099, 155-199, 275-299
	3	UNUSED						050-099, 155-199, 275-299
	4	UNUSED						050-099, 155-199, 275-299

HOOKUP LIST

D280T132

91-21-51

Section D06100

Page 3

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06106J		0278/072/0000		RCPT-TORQUE LINK (continued)				050-099, 155-199, 275-299
	5	UNUSED						050-099, 155-199, 275-299
	6	UNUSED						050-099, 155-199, 275-299
	7	UNUSED						050-099, 155-199, 275-299
	8		W1294	207B	20		32-45-12	050-099, 155-156, 163-199, 275-299
	8	UNUSED						157-162
	9		W1294	207R	20		32-45-12	050-099, 155-156, 163-199, 275-299
	9	UNUSED						157-162
	10		W1294	207Z			32-45-12	050-099, 155-156, 163-199, 275-299
	10	UNUSED						157-162
	11		W1294	208B	20		32-45-12	050-099, 155-156, 163-199, 275-299
	11	UNUSED						157-162
	12		W1294	208R	20		32-45-12	050-099, 155-156, 163-199, 275-299
	12	UNUSED						157-162
	13		W1294	208Z			32-45-12	050-099, 155-156, 163-199, 275-299
	13	UNUSED						157-162
	14	UNUSED						050-099, 155-199, 275-299
D06106P		278/72/0		PLUG-TORQUE LINK				050-099, 155-199, 275-299
	1	UNUSED						050-099, 155-199, 275-299
	2	UNUSED						050-099, 155-199, 275-299
	3	UNUSED						050-099, 155-199, 275-299
	4	UNUSED						050-099, 155-199, 275-299
	5	UNUSED						050-099, 155-199, 275-299
	6	UNUSED						050-099, 155-199, 275-299
	7	UNUSED						050-099, 155-199, 275-299
	8		W0678	207B	20		32-45-12	050-099, 155-199, 275-299
	9		W0678	207R	20		32-45-12	050-099, 155-199, 275-299
	10		W0678	207Z			32-45-12	050-099, 155-199, 275-299
	11		W0678	208B	20		32-45-12	050-099, 155-199, 275-299
	12		W0678	208R	20		32-45-12	050-099, 155-199, 275-299
	13		W0678	208Z			32-45-12	050-099, 155-199, 275-299
	14	UNUSED						050-099, 155-199, 275-299
D06107J		AP0307/315/L 8		RCPT-MOA PER DWG REF BACC45FN20-28S6				050-099, 162-199
	1		W0873	202R	20		23-34-15	050-099, 162-199
	2		W0873	202B	20		23-34-15	050-099, 162-199
	3		W0873	302Y	24		23-34-15	050-099, 162-199
	4		W0873	302R	24		23-34-15	050-099, 162-199
	5		W0873	302B	24		23-34-15	050-099, 162-199
	6	UNUSED						050-099, 162-199

HOOKUP LIST
D280T132

91-21-51
Section D06100
Page 4
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06107J		AP0307/315/L 8		RCPT-MOA PER DWG REF BACC45FN20-28S6 (continued)				050-099, 162-199
	7	UNUSED						050-099, 162-199
	8	UNUSED						050-099, 162-199
	9	UNUSED						050-099, 162-199
	10	UNUSED						050-099, 162-199
	11	UNUSED						050-099, 162-199
	12	UNUSED						050-099, 162-199
	13	UNUSED						050-099, 162-199
	14	UNUSED						050-099, 162-199
	15		W0873	02CX			23-34-15	050-099, 162-199
	16	UNUSED						050-099, 162-199
	17	UNUSED						050-099, 162-199
	18	UNUSED						050-099, 162-199
	19	UNUSED						050-099, 162-199
	20	UNUSED						050-099, 162-199
	21	UNUSED						050-099, 162-199
	22	UNUSED						050-099, 162-199
	23	UNUSED						050-099, 162-199
	24	UNUSED						050-099, 162-199
	25	UNUSED						050-099, 162-199
	26	UNUSED						050-099, 162-199
	27	UNUSED						050-099, 162-199
	28	UNUSED						050-099, 162-199
	C15		W0873	02CO			23-34-15	050-099, 162-199
D06107P		AP0307/ /		PLUG-MOA PER DWG REF BACC45FT20-28P6				050-099, 162-199
	1		W1449	203R	20		23-34-15	050-099, 162-199
	2		W1449	203B	20		23-34-15	050-099, 162-199
	3		W1449	303Y	24		23-34-15	050-099, 162-199
	4		W1449	303R	24		23-34-15	050-099, 162-199
	5		W1449	303B	24		23-34-15	050-099, 162-199
	6	UNUSED						050-099, 162-199
	7	UNUSED						050-099, 162-199
	8	UNUSED						050-099, 162-199
	9	UNUSED						050-099, 162-199
	10	UNUSED						050-099, 162-199
	11	UNUSED						050-099, 162-199
	12	UNUSED						050-099, 162-199
	13	UNUSED						050-099, 162-199
	14	UNUSED						050-099, 162-199
	15		W1449	01CX			23-34-15	050-099, 162-199

HOOKUP LIST
D280T132

91-21-51
Section D06100
Page 5
Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06107P		AP0307/ /		PLUG-MOA PER DWG REF BACC45FT20-28P6 (continued)				050-099, 162-199
	16	UNUSED						050-099, 162-199
	17	UNUSED						050-099, 162-199
	18	UNUSED						050-099, 162-199
	19	UNUSED						050-099, 162-199
	20	UNUSED						050-099, 162-199
	21	UNUSED						050-099, 162-199
	22	UNUSED						050-099, 162-199
	23	UNUSED						050-099, 162-199
	24	UNUSED						050-099, 162-199
	25	UNUSED						050-099, 162-199
	26	UNUSED						050-099, 162-199
	27	UNUSED						050-099, 162-199
	28	UNUSED						050-099, 162-199
	=C15		W1449	01CO			23-34-15	050-099, 162-199
D06109J		AP0205/ /		RECT-MOA PER DWG REF BACC45FN20-28S6				050-099
D06109J		AP0205/ /		RECPT-MOA PER DWG REF BACC45FN20-28S6				162-199
	1		W1449	203R	20		23-34-15	050-099, 162-199
	2		W1449	203B	20		23-34-15	050-099, 162-199
	3		W1449	303Y	24		23-34-15	050-099, 162-199
	4		W1449	303R	24		23-34-15	050-099, 162-199
	5		W1449	303B	24		23-34-15	050-099, 162-199
	6		W1449	305Y	22		21-66-11	050-099, 162-199
	7		W1449	305R	22		21-66-11	050-099, 162-199
	8		W1449	305B	22		21-66-11	050-099, 162-199
	9		W1449	078	22		33-22-33	050-099, 162-199
	10		W1449	083	20		33-22-33	050-099, 162-199
	11		W1449	085	20		33-26-21	050-099, 162-199
	12		W1449	144	20		33-26-21	050-099, 162-199
	13		W1449	097	20		33-51-13	050-099, 162-199
	14		W1449	100	20		33-51-13	050-099, 162-199
	15		W1449	01CX			23-34-15	050-099, 162-199
	16		W1449	142	20		23-34-15	050-099, 162-199
	17		W1449	129	22		23-42-11	050-099, 162-199
	18		W1449	130	22		23-42-11	050-099, 162-199
	19	UNUSED						050-099, 162-199
	20	UNUSED						050-099, 162-199
	21	UNUSED						050-099, 162-199
	22	UNUSED						050-099, 162-199
	23	UNUSED						050-099, 162-199

HOOKUP LIST

D280T132

91-21-51

Section D06100

Page 6

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06109J		AP0205/ /		RECT-MOA PER DWG REF BACC45FN20-28S6 (continued)				050-099
D06109J		AP0205/ /		RECPT-MOA PER DWG REF BACC45FN20-28S6 (continued)				162-199
	24	UNUSED						050-099, 162-199
	25	UNUSED						050-099, 162-199
	26	UNUSED						050-099, 162-199
	27	UNUSED						050-099, 162-199
	28	UNUSED						050-099, 162-199
	=C15		W1449	01CO			23-34-15	050-099, 162-199
D06109P		AP0205/ /		PLUG				050-099, 162-199
	1		W3006	201R	20		23-34-15	050-099, 162-199
	2		W3006	201B	20		23-34-15	050-099, 162-199
	3		W3006	302Y	24		23-34-15	050-099, 162-199
	4		W3006	302R	24		23-34-15	050-099, 162-199
	5		W3006	302B	24		23-34-15	050-099, 162-199
	6		W3006	301Y	22		21-66-11	050-099, 162-199
	7		W3006	301R	22		21-66-11	050-099, 162-199
	8		W3006	301B	22		21-66-11	050-099, 162-199
	9		W3006	007	22		33-22-33	050-099, 162-199
	10		W3006	011	22		33-22-33	050-099, 162-199
	11		W3006	038	20		33-26-21	050-099, 162-199
	12		W3006	039	20		33-26-21	050-099, 162-199
	13		W3006	005	20		33-51-13	050-099, 162-199
	14		W3006	006	20		33-51-13	050-099, 162-199
	15		W3006	01CX			23-34-15	050-099, 162-199
	16		W3006	013	20		23-34-15	050-099, 162-199
	17		W3006	023	20		23-42-11	050-099, 162-199
	18		W3006	017	22		23-42-11	050-099, 162-199
	19	UNUSED						050-099, 162-199
	20	UNUSED						050-099, 162-199
	21	UNUSED						050-099, 162-199
	22	UNUSED						050-099, 162-199
	23	UNUSED						050-099, 162-199
	24	UNUSED						050-099, 162-199
	25	UNUSED						050-099, 162-199
	26	UNUSED						050-099, 162-199
	27	UNUSED						050-099, 162-199
	28	UNUSED						050-099, 162-199
	=C15		W3006	01CO			23-34-15	050-099, 162-199

HOOKUP LIST

D280T132

91-21-51

Section D06100

Page 7

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06110J		AC1402/ /		RCPT-				ALL
	1		W1296	001R	20		26-15-11	ALL
	2		W1296	003R	20		26-15-11	ALL
	3		W1296	002R	20		26-15-11	ALL
	4		W1296	004R	20		26-22-21	ALL
	5		W1296	009R	20		26-22-21	ALL
	6	UNUSED						050-099, 150-199
	6		W1296	012R	20		26-22-21	275-299
	7	UNUSED						050-099, 150-199
	7		W1296	017R	20		26-22-21	275-299
	8	DL	W1296	018R	18		26-18-31	ALL
	9		W1296	010R	20		SPARE	ALL
	10		W1296	011R	20		SPARE	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D06110P		AC1402/ /		PLUG-				ALL
	1		W0606	066R	22		26-15-11	ALL
	2		W0606	067R	22		26-15-11	ALL
	3		W0606	068R	22		26-15-11	ALL
	4		W0606	006R	20		26-22-21	ALL
	5		W0606	011R	20		26-22-21	ALL
	6	UNUSED						050-099, 150-199
	6		W0606	186R	20		26-22-21	275-299
	7	UNUSED						050-099, 150-199
	7		W0606	187R	20		26-22-21	275-299
	8	DK	W0606	171R	18		26-18-31	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D06111J		AP0205/ /		RECPT				050-099, 162-199
	1		W1447	075	20		23-42-11	050-099, 162-199
	2		W1447	076	22		23-42-11	050-099, 162-199
	3	UNUSED						050-099, 162-199
	4	UNUSED						050-099, 162-199
	5		W1447	077	22		23-42-11	050-099, 162-199
	6		W1447	078	20		23-42-11	050-099, 162-199
	7	UNUSED						050-099, 162-199

HOOKUP LIST
D280T132

91-21-51
Section D06100
Page 8
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06111J		AP0205/ /		RECPT (continued)				050-099, 162-199
	8	UNUSED						050-099, 162-199
	9	UNUSED						050-099, 162-199
	10	UNUSED						050-099, 162-199
	11	UNUSED						050-099, 162-199
	12	UNUSED						050-099, 162-199
	13	UNUSED						050-099, 162-199
	14	UNUSED						050-099, 162-199
	15	UNUSED						050-099, 162-199
	16	UNUSED						050-099, 162-199
	17	UNUSED						050-099, 162-199
	18	UNUSED						050-099, 162-199
	19	UNUSED						050-099, 162-199
	20	UNUSED						050-099, 162-199
	21	UNUSED						050-099, 162-199
	22	UNUSED						050-099, 162-199
	23	UNUSED						050-099, 162-199
	24	UNUSED						050-099, 162-199
	25	UNUSED						050-099, 162-199
	26	UNUSED						050-099, 162-199
	27	UNUSED						050-099, 162-199
	28	UNUSED						050-099, 162-199
	29	UNUSED						050-099, 162-199
	30	UNUSED						050-099, 162-199
	31	UNUSED						050-099, 162-199
	32	UNUSED						050-099, 162-199
	33	UNUSED						050-099, 162-199
	34	UNUSED						050-099, 162-199
	35	UNUSED						050-099, 162-199
	36		W1447	402R	24		23-42-11	050-099, 162-199
	37		W1447	402B	24		23-42-11	050-099, 162-199
	38		W1447	402Y	24		23-42-11	050-099, 162-199
	39		W1447	402G	24		23-42-11	050-099, 162-199
	40		W1447	402Z			23-42-11	050-099, 162-199
	41	UNUSED						050-099, 162-199
D06111P		AP0205/ /		PLUG				050-099, 162-199
	1		W3006	021	20		23-42-11	050-099, 162-199
	2		W3006	022	22		23-42-11	050-099, 162-199
	3	UNUSED						050-099, 162-199
	4	UNUSED						050-099, 162-199

HOOKUP LIST
D280T132



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06111P		AP0205/ /		PLUG (continued)				050-099, 162-199
	5		W3006	024	22		23-42-11	050-099, 162-199
	6		W3006	029	20		23-42-11	050-099, 162-199
	7	UNUSED						050-099, 162-199
	8	UNUSED						050-099, 162-199
	9	UNUSED						050-099, 162-199
	10	UNUSED						050-099, 162-199
	11	UNUSED						050-099, 162-199
	12	UNUSED						050-099, 162-199
	13	UNUSED						050-099, 162-199
	14	UNUSED						050-099, 162-199
	15	UNUSED						050-099, 162-199
	16	UNUSED						050-099, 162-199
	17	UNUSED						050-099, 162-199
	18	UNUSED						050-099, 162-199
	19	UNUSED						050-099, 162-199
	20	UNUSED						050-099, 162-199
	21	UNUSED						050-099, 162-199
	22	UNUSED						050-099, 162-199
	23	UNUSED						050-099, 162-199
	24	UNUSED						050-099, 162-199
	25	UNUSED						050-099, 162-199
	26	UNUSED						050-099, 162-199
	27	UNUSED						050-099, 162-199
	28	UNUSED						050-099, 162-199
	29	UNUSED						050-099, 162-199
	30	UNUSED						050-099, 162-199
	31	UNUSED						050-099, 162-199
	32	UNUSED						050-099, 162-199
	33	UNUSED						050-099, 162-199
	34	UNUSED						050-099, 162-199
	35	UNUSED						050-099, 162-199
	36		W3006	401R	24		23-42-11	050-099, 162-199
	37		W3006	401B	24		23-42-11	050-099, 162-199
	38		W3006	401Y	24		23-42-11	050-099, 162-199
	39		W3006	401G	24		23-42-11	050-099, 162-199
	40		W3006	401Z			23-42-11	050-099, 162-199
	41	UNUSED						050-099, 162-199
D06112J		AC1402/ /		RCPT-				ALL
	1		W1298	003R	20		26-15-11	ALL

HOOKUP LIST
D280T132

91-21-51
Section D06100
Page 10
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06112J		AC1402/ /		RCPT- (continued)				ALL
	2		W1298	001R	20		26-15-11	ALL
	3		W1298	002R	20		26-15-11	ALL
	4		W1298	004R	20		SPARE	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D06112P		AC1402/ /		PLUG-				ALL
	1		W0614	067R	22		26-15-11	ALL
	2		W0614	066R	22		26-15-11	ALL
	3		W0614	068R	22		26-15-11	ALL
	4		W0614	152R	20		SPARE	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D06114J		AC0702/ /		RCPT-				ALL
	1		W0598	111	20		28-21-12	ALL
	2		W0598	110Z			28-21-12	ALL
	3		W0598	110	20		28-21-12	ALL
	=C1		W0598	111Z			28-21-12	ALL
D06114P		AC0702/ /		PLUG				ALL
	1		W0422	018	20		28-21-12	ALL
	2		W0422	017Z			28-21-12	ALL
	3		W0422	017	20		28-21-12	ALL
	=C1		W0422	018Z			28-21-12	ALL
D06116J		AC0701/ /		RCPT-				ALL
	1		W0598	113	20		28-21-12	ALL

HOOKUP LIST

D280T132

91-21-51

Section D06100

Page 11

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06116J		AC0701/ /		RCPT- (continued)				ALL
	2		W0598	112Z			28-21-12	ALL
	3		W0598	112	20		28-21-12	ALL
	= C1		W0598	113Z			28-21-12	ALL
D06116P		AC0701/ /		PLUG				ALL
	1		W0420	018	20		28-21-12	ALL
	2		W0420	017Z			28-21-12	ALL
	3		W0420	017	20		28-21-12	ALL
	= C1		W0420	018Z			28-21-12	ALL
D06119J		AE0322/ /		RCPT-E2-2				ALL
	1		W0807	001	24		34-53-13	ALL
	2		W0807	002	24		34-53-13	ALL
	3		W0807	003	24		34-53-13	ALL
	4		W0807	004	24		34-53-13	ALL
	5	UNUSED						ALL
D06119P		AE0322/ /		PLUG-E2-2				ALL
	1		W0143	508	24		34-53-13	ALL
	2		W0143	509	24		34-53-13	ALL
	3		W0143	510	24		34-53-13	ALL
	4		W0143	511	24		34-53-13	ALL
	5	UNUSED						ALL
D06123J		AP0205/ /		RECPT				050-099, 162-199
	1	UNUSED						050-099, 162-199
	2	UNUSED						050-099, 162-199
	3		W1449	174	22		21-66-11	050-099, 162-199
	4	UNUSED						050-099, 162-199
	5		W1449	179	20		21-66-11	050-099, 162-199
	6	UNUSED						050-099, 162-199
	7	UNUSED						050-099, 162-199
	8	UNUSED						050-099, 162-199
	9	UNUSED						050-099, 162-199
	10	UNUSED						050-099, 162-199
	11		W1449	114	22		23-42-11	050-099, 162-199
	12		W1449	118	20		23-42-11	050-099, 162-199
	13		W1449	119	22		23-42-11	050-099, 162-199
	14		W1449	163	20		21-66-11	050-099, 162-199
	15		W1449	170	22		21-66-11	050-099, 162-199

HOOKUP LIST
D280T132

91-21-51
Section D06100
Page 12
Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06123J		AP0205/ /		RECPT (continued)				050-099, 162-199
	16		W1449	165	22		21-66-11	050-099, 162-199
	17		W1449	164	20		21-66-11	050-099, 162-199
	18		W1449	166	22		21-66-11	050-099, 162-199
	19		W1449	171	22		21-66-11	050-099, 162-199
	20	UNUSED						050-099, 162-199
	21		W1449	169	20		21-66-11	050-099, 162-199
	22		W1449	205B	22		21-66-11	050-099, 162-199
	23		W1449	205R	22		21-66-11	050-099, 162-199
	24	UNUSED						050-099, 162-199
	25		W1449	146	20		26-13-12	050-099, 162-199
	26		W1449	147	20		26-13-12	050-099, 162-199
	27		W1449	123	20		26-13-12	050-099, 162-199
	28		W1449	124	20		SPARE	050-099
	28	UNUSED						162-199
	29		W1449	125	20		26-13-12	050-099, 162-199
	30		W1449	126	20		26-13-12	050-099, 162-199
	31	UNUSED						050-099, 162-199
	32	UNUSED						050-099, 162-199
D06123P		AP0205/ /		PLUG				050-099, 162-199
	1	UNUSED						050-099, 162-199
	2	UNUSED						050-099, 162-199
	3		W3008	015	20		21-66-11	050-099, 162-199
	4	UNUSED						050-099, 162-199
	5		W3008	003	20		21-66-11	050-099, 162-199
	6	UNUSED						050-099, 162-199
	7	UNUSED						050-099, 162-199
	8	UNUSED						050-099, 162-199
	9	UNUSED						050-099, 162-199
	10	UNUSED						050-099, 162-199
	11		W3008	021	22		23-42-11	050-099, 162-199
	12		W3008	022	20		23-42-11	050-099, 162-199
	13		W3008	023	22		23-42-11	050-099, 162-199
	14		W3008	032	20		21-66-11	050-099, 162-199
	15		W3008	012	20		21-66-11	050-099, 162-199
	16		W3008	011	20		21-66-11	050-099, 162-199
	17		W3008	010	20		21-66-11	050-099, 162-199
	18		W3008	009	20		21-66-11	050-099, 162-199
	19		W3008	008	20		21-66-11	050-099, 162-199
	20	UNUSED						050-099, 162-199

HOOKUP LIST

D280T132

91-21-51

Section D06100

Page 13

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06123P		AP0205/ /		PLUG (continued)				050-099, 162-199
	21		W3008	014	20		21-66-11	050-099, 162-199
	22		W3008	201B	22		21-66-11	050-099, 162-199
	23		W3008	201R	22		21-66-11	050-099, 162-199
	24	UNUSED						050-099, 162-199
	25		W3008	002	20		26-13-12	050-099, 162-199
	26		W3008	005	20		26-13-12	050-099, 162-199
	27		W3008	004	20		26-13-12	050-099, 162-199
	28	UNUSED						050-099, 162-199
	29		W3008	006	20		26-13-12	050-099, 162-199
	30		W3008	001	20		26-13-12	050-099, 162-199
	31	UNUSED						050-099, 162-199
	32	UNUSED						050-099, 162-199
D06125J		AP0205/ /		RECPT				050-099, 162-199
	1		W1449	304Y	24		23-34-15	050-099, 162-199
	2	FM	W1449	072	16		23-34-15	050-099, 162-199
	3	FM	W1449	073	16		23-34-15	050-099, 162-199
	4		W1449	304B	24		23-34-15	050-099, 162-199
	5		W1449	304R	24		23-34-15	050-099, 162-199
	6		W1449	140	20		35-21-14	050-099, 162-199
	7		W1449	141	20		35-21-14	050-099, 162-199
	8		W1449	086	22		33-24-13	050-099
	8		W1449	086	20		33-24-13	162-199
	9		W1449	089	22		33-24-13	050-099, 162-199
	10		W1449	090	20		33-24-13	050-099, 162-199
	11	UNUSED						050-099, 162-199
	12	UNUSED						050-099, 162-199
	13	UNUSED						050-099, 162-199
	14	UNUSED						050-099, 162-199
	15	UNUSED						050-099, 162-199
	16	UNUSED						050-099, 162-199
	17	UNUSED						050-099, 162-199
	18	UNUSED						050-099, 162-199
	19	UNUSED						050-099, 162-199
	20	UNUSED						050-099, 162-199
	21	UNUSED						050-099, 162-199
	22	UNUSED						050-099, 162-199
	23	UNUSED						050-099, 162-199
	24	UNUSED						050-099, 162-199
	25	UNUSED						050-099, 162-199

HOOKUP LIST
D280T132

91-21-51
Section D06100
Page 14
Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06125P		AP0205/ /		PLUG				050-099, 162-199
	1		W3000	301Y	24		23-34-15	050-099, 162-199
	2	FL	W3000	201R	16		23-34-15	050-099, 162-199
	3	FL	W3000	201B	16		23-34-15	050-099, 162-199
	4		W3000	301B	24		23-34-15	050-099, 162-199
	5		W3000	301R	24		23-34-15	050-099, 162-199
	6		W3000	006	20		35-21-14	050-099, 162-199
	7		W3000	007	20		35-21-14	050-099, 162-199
	8		W3000	001	22		33-24-13	050-099, 162-199
	9		W3000	002	22		33-24-13	050-099, 162-199
	10		W3000	003	20		33-24-13	050-099, 162-199
	11	UNUSED						050-099, 162-199
	12	UNUSED						050-099, 162-199
	13	UNUSED						050-099, 162-199
	14	UNUSED						050-099, 162-199
	15	UNUSED						050-099, 162-199
	16	UNUSED						050-099, 162-199
	17	UNUSED						050-099, 162-199
	18	UNUSED						050-099, 162-199
	19	UNUSED						050-099, 162-199
	20	UNUSED						050-099, 162-199
	21	UNUSED						050-099, 162-199
	22	UNUSED						050-099, 162-199
	23	UNUSED						050-099, 162-199
	24	UNUSED						050-099, 162-199
	25	UNUSED						050-099, 162-199
D06127J		AE0326/ /		RCPT				050-099, 150-152, 277-299
D06127J		AE0326/ /		RCPT				153-199
	= A1		W1769	02CX			34-45-11	050-099, 150-199, 277-299
	= C1		W1769	02CO			34-45-11	050-099, 150-199, 277-299
D06127P		AE0326/ /		RCPT				050-099, 150-199, 277-299
	= A1		W1901	02CX			34-45-11	050-099, 150-199, 277-299
	= C1		W1901	02CO			34-45-11	050-099, 150-199, 277-299
D06129J		AE0326/ /		RCPT				050-099, 150-199, 277-299
	= A1		W1769	03CX			34-45-11	050-099, 150-199, 277-299
	= C1		W1769	03CO			34-45-11	050-099, 150-199, 277-299

HOOKUP LIST

D280T132

91-21-51

Section D06100

Page 15

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06129P		AE0326/ /		RCPT				050-099, 150-199, 277-299
	= A1		W1901	03CX			34-45-11	050-099, 150-199, 277-299
	= C1		W1901	03CO			34-45-11	050-099, 150-199, 277-299
D06131J		AE0326/ /		RCPT				050-099, 150-199, 277-299
	= A1		W1769	04CX			34-45-11	050-099, 150-199, 277-299
	= C1		W1769	04CO			34-45-11	050-099, 150-199, 277-299
D06131P		AE0326/ /		RCPT				050-099, 150-199, 277-299
	= A1		W1901	04CX			34-45-11	050-099, 150-199, 277-299
	= C1		W1901	04CO			34-45-11	050-099, 150-199, 277-299
D06133J		AE0325/ /		RCPT				050-099, 150-199, 277-299
	= A1		W1769	02CX			34-45-11	050-099, 150-199, 277-299
	= C1		W1769	02CO			34-45-11	050-099, 150-199, 277-299
D06133P		AE0325/****/		PLUG				050-099, 150-199, 277-299
	= A1		W1181	02CX			34-45-11	050-099, 150-199, 277-299
	= C1		W1181	02CO			34-45-11	050-099, 150-199, 277-299
D06135J		AE0325/ /		RCPT				050-099, 150-199, 277-299
	= A1		W1769	03CX			34-45-11	050-099, 150-199, 277-299
	= C1		W1769	03CO			34-45-11	050-099, 150-199, 277-299
D06135P		AE0325/****/		PLUG				050-099, 150-199, 277-299
	= A1		W1181	03CX			34-45-11	050-099, 150-199, 277-299
	= C1		W1181	03CO			34-45-11	050-099, 150-199, 277-299
D06136J		0358/284/L054		RCPT-				275-299
	1		W0714	005	20		35-21-12	275-299
	2		W0714	006	20		35-21-12	275-299
	3	DK	W0714	045	18		33-22-31	275-299
	4	DK	W0714	046	18		33-22-31	275-299
	5	DK	W0714	047	18		33-22-31	275-299
	6		W0714	048	20		33-24-12	275-299
	7		W0714	049	20		33-24-12	275-299
	8		W0714	050	20		33-24-12	275-299
	9	UNUSED						275-299
	10	UNUSED						275-299
	11	UNUSED						275-299

HOOKUP LIST
D280T132

91-21-51
Section D06100
Page 16
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06136J		0358/284/L054		RCPT- (continued)				275-299
	12	UNUSED						275-299
	DED		W0714	048Z			33-24-12	277-278
	DED		W0714	049Z			33-24-12	277-278
	DED		W0714	050Z			33-24-12	277-278
D06136P		0358/284/L050		PLUG-				275-299
	1		W1198	001	20		35-21-12	275-299
	2		W1198	002	20		35-21-12	275-299
	3	DL	W1198	003	18		33-22-31	275-299
	4	DL	W1198	004	18		33-22-31	275-299
	5	DL	W1198	006	18		33-22-31	275-299
	6		W1198	007	20		33-24-12	275-299
	7		W1198	008	20		33-24-12	275-299
	8		W1198	009	20		33-24-12	275-299
	9	UNUSED						275-299
	10	UNUSED						275-299
	11	UNUSED						275-299
	12	UNUSED						275-299
D06137J		AE0325/ /		RCPT				050-099, 150-199, 277-299
	= A1		W1769	04CX			34-45-11	050-099, 150-199, 277-299
	= C1		W1769	04CO			34-45-11	050-099, 150-199, 277-299
D06137P		AE0325/***/		PLUG				050-099, 150-199, 277-299
	= A1		W1181	04CX			34-45-11	050-099, 150-199, 277-299
	= C1		W1181	04CO			34-45-11	050-099, 150-199, 277-299
D06140J		AE0320/ /		RCPT-E2-4				ALL
	1		W0768	150	24		27-51-11	ALL
	2		W0768	151	24		27-51-11	ALL
	3		W0768	152	24		27-51-11	ALL
	4		W0768	153	24		27-51-11	ALL
	5		W0768	154	24		27-51-11	ALL
	6		W0768	155	24		27-51-11	ALL
	7		W0768	156	24		27-51-11	ALL
	8		W0768	157	24		27-51-11	ALL
	9		W0768	158	24		27-51-11	ALL
	10		W0768	159	24		27-51-11	ALL
	11		W0768	517	24		27-51-11	ALL
	12		W0768	251B	24		73-21-14	ALL

HOOKUP LIST

D280T132

91-21-51

Section D06100

Page 17

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06140J		AE0320/ /		RCPT-E2-4 (continued)				ALL
	13		W0768	251R	24		73-21-14	ALL
	14		W0768	251Z			73-21-14	ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18		W0768	218R	24		77-31-11	ALL
	19		W0768	218B	24		77-31-11	ALL
	20		W0768	218Z			77-31-11	ALL
	21		W0768	217R	24		77-31-11	ALL
	22		W0768	217B	24		77-31-11	ALL
	23		W0768	217Z			77-31-11	ALL
	24	UNUSED						ALL
D06140P		AE0320/ /		PLUG-E2-4				ALL
	1		W0016	150	24		27-51-11	ALL
	2		W0016	151	24		27-51-11	ALL
	3		W0016	152	24		27-51-11	ALL
	4		W0016	153	24		27-51-11	ALL
	5		W0016	154	24		27-51-11	ALL
	6		W0016	155	24		27-51-11	ALL
	7		W0016	156	24		27-51-11	ALL
	8		W0016	147	24		27-51-11	ALL
	9		W0016	148	24		27-51-11	ALL
	10		W0016	149	24		27-51-11	ALL
	11		W0016	085	24		27-51-11	ALL
	12		W0016	232B	24		73-21-14	ALL
	13		W0016	232R	24		73-21-14	ALL
	14		W0016	232Z			73-21-14	ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18		W0016	247R	24		77-31-11	ALL
	19		W0016	247B	24		77-31-11	ALL
	20		W0016	247Z			77-31-11	ALL
	21		W0016	249R	24		77-31-11	ALL
	22		W0016	249B	24		77-31-11	ALL
	23		W0016	249Z			77-31-11	ALL
	24	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D06100
Page 18
Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06141J		AE0305/ /		RCPT-E1-3				050-099, 150-199, 277-299
	1		W0471	245R	24		34-45-14	050-099, 150-199, 277-299
	2		W0471	245B	24		34-45-14	050-099, 150-199, 277-299
	3		W0471	245Z			34-45-14	050-099, 150-199, 277-299
	4	UNUSED						050-099, 150-199, 277-299
	5	UNUSED						050-099, 150-199, 277-299
	6	UNUSED						050-099, 150-199, 277-299
	7	UNUSED						050-099, 150-199, 277-299
	8	UNUSED						050-099, 150-199, 277-299
	9	UNUSED						050-099, 150-199, 277-299
	10	UNUSED						050-099, 150-199, 277-299
	11	UNUSED						050-099, 150-199, 277-299
	12	UNUSED						050-099, 150-199, 277-299
	13	UNUSED						050-099, 150-199, 277-299
	14	UNUSED						050-099, 150-199, 277-299
	15	UNUSED						050-099, 150-199, 277-299
	16	UNUSED						050-099, 150-199, 277-299
	17	UNUSED						050-099, 150-199, 277-299
	18	UNUSED						050-099, 150-199, 277-299
	19	UNUSED						050-099, 150-199, 277-299
	20	UNUSED						050-099, 150-199, 277-299
	21	UNUSED						050-099, 150-199, 277-299
	22	UNUSED						050-099, 150-199, 277-299
	23	UNUSED						050-099, 150-199, 277-299
	24	UNUSED						050-099, 150-199, 277-299
D06141P		AE0305/ /		PLUG-E1-3				ALL
	1		W0105	527R	24		34-45-14	ALL
	2		W0105	527B	24		34-45-14	ALL
	3		W0105	527Z			34-45-14	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D06100

Page 19

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06141P		AE0305/ /		PLUG-E1-3 (continued)				ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D06143J		AE0305/ /		RCPT				050-099, 150-152, 155-199, 275-299
	1		W1605	222R	24		34-45-12	050-099, 150-152, 155-199, 275-299
	2		W1605	222B	24		34-45-12	050-099, 150-152, 155-199, 275-299
	3		W1605	222Z			34-45-12	050-099, 150-152, 155-199, 275-299
	4		W1605	221R	24		34-45-12	050-099, 150-152, 155-199, 275-299
	5		W1605	221B	24		34-45-12	050-099, 150-152, 155-199, 275-299
	6		W1605	221Z			34-45-12	050-099, 150-152, 155-199, 275-299
	7	UNUSED						050-099
	7		W1605	034	22		34-45-12	150-152, 155-199, 275-299
	8	UNUSED						050-099
	8		W1605	029	22		34-45-12	150-152, 155-199, 275-299
	9		W1605	039	22		34-45-12	050-099, 150-152, 155-199, 275-299
	10	UNUSED						050-099, 150-152, 155-199, 275-299
	11	UNUSED						050-099, 150-152, 155-199, 275-299
	12	UNUSED						050-099, 150-152, 155-199, 275-299
	13	UNUSED						050-099, 150-152, 155-199, 275-299
	14	UNUSED						050-099, 150-152, 155-199, 275-299
	15	UNUSED						050-099, 150-152, 155-199, 275-299
	16	UNUSED						050-099, 150-152, 155-199, 275-299
	17	UNUSED						050-099, 150-152, 155-199, 275-299
	18	UNUSED						050-099, 150-152, 155-199, 275-299
	19	UNUSED						050-099, 150-152, 155-199, 275-299
	20	UNUSED						050-099, 150-152, 155-199, 275-299
	21	UNUSED						050-099, 150-152, 155-199, 275-299
	22	UNUSED						050-099, 150-152, 155-199, 275-299
	23	UNUSED						050-099, 150-152, 155-199, 275-299
	24	UNUSED						050-099, 150-152, 155-199, 275-299
	25	UNUSED						050-099, 150-152, 155-199, 275-299
	26	UNUSED						050-099, 150-152, 155-199, 275-299

HOOKUP LIST
D280T132

91-21-51
Section D06100
Page 20
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06143J		AE0305/ /		RCPT (continued)				050-099, 150-152, 155-199, 275-299
	27	UNUSED						050-099, 150-152, 155-199, 275-299
	28	UNUSED						050-099, 150-152, 155-199, 275-299
	29	UNUSED						050-099, 150-152, 155-199, 275-299
	30	UNUSED						050-099, 150-152, 155-199, 275-299
	31	UNUSED						050-099, 150-152, 155-199, 275-299
D06143P		AE0305/ /		PLUG-E1-3				050-099, 150-152, 155-199, 275-299
	1		W0105	560R	24		34-45-12	050-099, 150-152, 155-199, 275-299
	2		W0105	560B	24		34-45-12	050-099, 150-152, 155-199, 275-299
	3		W0105	560Z			34-45-12	050-099, 150-152, 155-199, 275-299
	4		W0105	555R	24		34-45-12	050-099, 150-152, 155-199, 275-299
	5		W0105	555B	24		34-45-12	050-099, 150-152, 155-199, 275-299
	6		W0105	555Z			34-45-12	050-099, 150-152, 155-199, 275-299
	7		W0105	134	22		34-45-12	050-099, 150-152, 155-199, 275-299
	8		W0105	135	22		34-45-12	050-099, 150-152, 155-199, 275-299
	9		W0105	623	22		34-45-12	050-099, 150-152, 155-199, 275-299
	10	UNUSED						050-099, 150-152, 155-199, 275-299
	11	UNUSED						050-099, 150-152, 155-199, 275-299
	12	UNUSED						050-099, 150-152, 155-199, 275-299
	13	UNUSED						050-099, 150-152, 155-199, 275-299
	14	UNUSED						050-099, 150-152, 155-199, 275-299
	15	UNUSED						050-099, 150-152, 155-199, 275-299
	16	UNUSED						050-099, 150-152, 155-199, 275-299
	17	UNUSED						050-099, 150-152, 155-199, 275-299
	18	UNUSED						050-099, 150-152, 155-199, 275-299
	19	UNUSED						050-099, 150-152, 155-199, 275-299
	20	UNUSED						050-099, 150-152, 155-199, 275-299
	21	UNUSED						050-099, 150-152, 155-199, 275-299
	22	UNUSED						050-099, 150-152, 155-199, 275-299
	23	UNUSED						050-099, 150-152, 155-199, 275-299
	24	UNUSED						050-099, 150-152, 155-199, 275-299
	25	UNUSED						050-099, 150-152, 155-199, 275-299
	26	UNUSED						050-099, 150-152, 155-199, 275-299
	27	UNUSED						050-099, 150-152, 155-199, 275-299
	28	UNUSED						050-099, 150-152, 155-199, 275-299
	29	UNUSED						050-099, 150-152, 155-199, 275-299
	30	UNUSED						050-099, 150-152, 155-199, 275-299
	31	UNUSED						050-099, 150-152, 155-199, 275-299

HOOKUP LIST

D280T132

91-21-51

Section D06100

Page 21

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06148J		AP0802E/ /		RCPT				050-099
D06148J		654+105/285/L005		PLUG				150-199
D06148J		AP0703/ /		RCPT				275-299
	1		W1224	807	20		33-22-41	050-099, 150-199
	1		W0822	037	20		33-22-42	275-299
	2		W1224	808	20		33-22-41	050-099, 150-199
	2		W0822	018	22		33-22-42	275-299
	3	UNUSED						050-099, 150-199
	3		W0822	030	20		33-22-42	275-299
	4	UNUSED						ALL
	5	UNUSED						050-099, 150-199
	5		W0822	017	22		33-22-42	275-299
D06148P		AP0802E/ /		PLUG				050-099
D06148P		654+105/285/L005		PLUG				150-199
D06148P		AP0703/ /		PLUG				275-299
	1		W0110	100	20		33-22-41	050-099, 150-199
	1		W0110	037	22		33-22-42	275-299
	2		W0110	101	20		33-22-41	050-099, 150-199
	2		W0110	039	22		33-22-42	275-299
	3	UNUSED						050-099, 150-199
	3		W0110	036	22		33-22-42	275-299
	4	UNUSED						ALL
	5	UNUSED						050-099, 150-199
	5		W0110	067	22		33-22-42	275-299
D06149J		AC1102/ /		RCPT-E9-1				150, 153-199, 277-299
	1		W0819	202Z			23-25-13	150, 153-199, 277-299
	2		W0819	202R	22		23-25-13	150, 153-155, 162-165
	2		W0819	202R	24		23-25-13	156-157, 166-199, 277-299
	3		W0819	202B	22		23-25-13	150, 153-155, 162-165
	3		W0819	202B	24		23-25-13	156-157, 166-199, 277-299
	4		W0819	204B	22		23-25-13	150, 153-155, 162-165
	4		W0819	204B	24		23-25-13	156-157, 166-199, 277-299
	5		W0819	204Z			23-25-13	150, 153-199, 277-299
	6		W0819	204R	22		23-25-13	150, 153-155, 162-165
	6		W0819	204R	24		23-25-13	156-157, 166-199, 277-299
	7		W0819	911	22		23-25-14	150, 153-199
	7	UNUSED						277-299
	8	UNUSED						150, 153-199, 277-299

HOOKUP LIST

D280T132

91-21-51

Section D06100

Page 22

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06149J		AC1102/ /		RCPT-E9-1 (continued)				150, 153-199, 277-299
	9	UNUSED						150, 153-199, 277-299
	10		W0819	205Z			23-25-13	150, 153-199, 277-299
	11		W0819	205R	22		23-25-13	150, 153-155, 162-165
	11		W0819	205R	24		23-25-13	156-157, 166-199, 277-299
	12		W0819	205B	22		23-25-13	150, 153-155, 162-165
	12		W0819	205B	24		23-25-13	156-157, 166-199, 277-299
	13		W0819	008	22		23-25-13	150, 153-155, 162-165
	13		W0819	008	24		23-25-13	156-157, 166-199, 277-299
	14		W0819	206Z			23-25-13	150, 153-199, 277-299
	15		W0819	206R	24		23-25-13	150, 153-199, 277-299
	16		W0819	206B	24		23-25-13	150, 153-199, 277-299
	17		W9014	207Z			23-25-13	150, 153-155, 162-165
	17		W0819	207Z			23-25-13	156-157, 166-199, 277-299
	18		W9014	207R	22		23-25-13	150, 153-155, 162-165
	18		W0819	207R	24		23-25-13	156-157, 166-199, 277-299
	19		W9014	207B	22		23-25-13	150, 153-155, 162-165
	19		W0819	207B	24		23-25-13	156-157, 166-199, 277-299
	20		W9012	208Z			23-25-13	150, 153-155, 162-165
	20		W0819	208Z			23-25-13	156-157, 166-199, 277-299
	21		W9011	901	16		23-25-11	150, 153-155, 162-165
	21		W0819	001	16		23-25-11	156-157, 166-199, 277-299
	22		W9012	208R	22		23-25-13	150, 153-155, 162-165
	22		W0819	208R	24		23-25-13	156-157, 166-199, 277-299
	23		W9011	903	16		23-25-11	150, 153-199
	23	UNUSED						277-299
	24		W9012	208B	22		23-25-13	150, 153-155, 162-165
	24		W0819	208B	24		23-25-13	156-157, 166-199, 277-299
	25		W0819	007	24		23-25-14	150, 153-199, 277-299
	26		W0819	915B	22		23-25-14	150, 153-199
	26		W0819	006Z			23-25-14	277-299
	27		W0819	915R	22		23-25-14	150, 153-199
	27		W0819	006	24		23-25-14	277-299
	28		W0819	914B	22		23-25-14	150, 153-199
	28		W0819	005Z			23-25-14	277-299
	29		W0819	914R	22		23-25-14	150, 153-199
	29		W0819	005	24		23-25-14	277-299
	30		W0819	004	24		23-25-14	150, 153-199, 277-299
	31		W0819	003	24		23-25-14	150, 153-199, 277-299
	32		W0819	203Z			23-25-13	150, 153-199, 277-299
	33		W0819	203R	22		23-25-13	150, 153-155, 162-165

HOOKUP LIST

D280T132

91-21-51

Section D06100

Page 23

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06149J		AC1102/ /		RCPT-E9-1 (continued)				150, 153-199, 277-299
	33		W0819	203R	24		23-25-13	156-157, 166-199, 277-299
	34		W0819	203B	22		23-25-13	150, 153-155, 162-165
	34		W0819	203B	24		23-25-13	156-157, 166-199, 277-299
	35		W9013	209	22		23-25-13	150, 153-199
	35	UNUSED						277-299
	36		W9013	210R	22		23-25-13	150, 153-199
	36	UNUSED						277-299
	37		W9013	210B	22		23-25-13	150, 153-199
	37	UNUSED						277-299
	38		W9013	210Z			23-25-13	150, 153-199
	38	UNUSED						277-299
	39		W9011	902	20		23-25-13	150, 153-199
	39	UNUSED						277-299
	DED		W0819	914Z			23-25-14	150, 153-199
	DED		W0819	915Z			23-25-14	150, 153-199
D06149P		AC1102/ /		PLUG-E9-1				150, 153-199, 277-299
	1		W9026	229Z			23-25-13	150, 153-155, 162-165
	1		W0091	229Z			23-25-13	156-157, 166-199, 277-299
	2		W9026	229R	22		23-25-13	150, 153-155, 162-165
	2		W0091	229R	24		23-25-13	156-157, 166-199, 277-299
	3		W9026	229B	22		23-25-13	150, 153-155, 162-165
	3		W0091	229B	24		23-25-13	156-157, 166-199, 277-299
	4	UNUSED						150, 153-155, 162-165
	4		W0091	201B	24		23-25-11	156-157, 166-199, 277-299
	5	UNUSED						150, 153-155, 162-165
	5		W0091	201Z			23-25-11	156-157, 166-199, 277-299
	6	UNUSED						150, 153-155, 162-165
	6		W0091	201R	24		23-25-11	156-157, 166-199, 277-299
	7		W9026	950	22		23-25-14	150, 153-155, 162-165
	7		W0091	950	22		23-25-14	156-157, 166-199
	7	UNUSED						277-299
	8	UNUSED						150, 153-199, 277-299
	9	UNUSED						150, 153-199, 277-299
	10	UNUSED						150, 153-155, 162-165
	10		W0091	231Z			23-25-13	156-157, 166-199, 277-299
	11	UNUSED						150, 153-155, 162-165
	11		W0091	231R	24		23-25-13	156-157, 166-199, 277-299
	12	UNUSED						150, 153-155, 162-165
	12		W0091	231B	24		23-25-13	156-157, 166-199, 277-299

HOOKUP LIST

D280T132

91-21-51

Section D06100

Page 24

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06149P		AC1102/ /		PLUG-E9-1 (continued)				150, 153-199, 277-299
	13	UNUSED						150, 153-155, 162-165
	13		W0091	100	22		23-25-13	156-157, 166-199
	13		W0091	100	24		23-25-13	277-299
	14		W9026	232Z			23-25-13	150, 153-155, 162-165
	14		W0091	232Z			23-25-13	156-157, 166-199, 277-299
	15		W9026	232R	22		23-25-13	150, 153-155, 162-165
	15		W0091	232R	24		23-25-13	156-157, 166-199, 277-299
	16		W9026	232B	22		23-25-13	150, 153-155, 162-165
	16		W0091	232B	24		23-25-13	156-157, 166-199, 277-299
	17		W9026	233Z			23-25-13	150, 153-155, 162-165
	17		W0091	233Z			23-25-13	156-157, 166-199, 277-299
	18		W9026	233R	22		23-25-13	150, 153-155, 162-165
	18		W0091	233R	24		23-25-13	156-157, 166-199, 277-299
	19		W9026	233B	22		23-25-13	150, 153-155, 162-165
	19		W0091	233B	24		23-25-13	156-157, 166-199, 277-299
	20		W9026	234Z			23-25-13	150, 153-155, 162-165
	20		W0091	234Z			23-25-13	156-157, 166-199, 277-299
	21		W9026	001	16		23-25-11	150, 153-155, 162-165
	21		W0091	001	16		23-25-11	156-157, 166-199, 277-299
	22		W9026	234R	22		23-25-13	150, 153-155, 162-165
	22		W0091	234R	24		23-25-13	156-157, 166-199, 277-299
	23		W9026	009	16		23-25-11	150, 153-155, 162-165
	23		W0091	009	16		23-25-11	156-157, 166-199
	23	UNUSED						277-299
	24		W9026	234B	22		23-25-13	150, 153-155, 162-165
	24		W0091	234B	24		23-25-13	156-157, 166-199, 277-299
	25		W9026	011	22		23-25-14	150, 153-155, 162-165
	25		W0091	011	24		23-25-14	156-157, 166-199, 277-299
	26		W9026	012Z			23-25-14	150, 153-155, 162-165
	26		W0091	012Z			23-25-14	156-157, 166-199, 277-299
	27		W9026	012	22		23-25-14	150, 153-155, 162-165
	27		W0091	012	24		23-25-14	156-157, 166-199, 277-299
	28		W9026	013Z			23-25-14	150, 153-155, 162-165
	28		W0091	013Z			23-25-14	156-157, 166-199, 277-299
	29		W9026	013	22		23-25-14	150, 153-155, 162-165
	29		W0091	013	24		23-25-14	156-157, 166-199, 277-299
	30		W9026	014	22		23-25-14	150, 153-155, 162-165
	30		W0091	014	24		23-25-14	156-157, 166-199, 277-299
	31		W9026	015	22		23-25-14	150, 153-155, 162-165
	31		W0091	015	24		23-25-14	156-157, 166-199, 277-299

HOOKUP LIST

D280T132

91-21-51

Section D06100

Page 25

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06149P		AC1102/ /		PLUG-E9-1 (continued)				150, 153-199, 277-299
	32		W9026	230Z			23-25-13	150, 153-155, 162-165
	32		W0091	230Z			23-25-13	156-157, 166-199, 277-299
	33		W9026	230R	22		23-25-13	150, 153-155, 162-165
	33		W0091	230R	24		23-25-13	156-157, 166-199, 277-299
	34		W9026	230B	22		23-25-13	150, 153-155, 162-165
	34		W0091	230B	24		23-25-13	156-157, 166-199, 277-299
	35		W9026	901	22		23-25-13	150, 153-155, 162-165
	35		W0091	901	22		23-25-13	156-157, 166-199
	35	UNUSED						277-299
	36		W9026	902B	22		23-25-13	150, 153-155, 162-165
	36		W0091	902B	22		23-25-13	156-157, 166-199
	36	UNUSED						277-299
	37		W9026	902R	22		23-25-13	150, 153-155, 162-165
	37		W0091	902R	22		23-25-13	156-157, 166-199
	37	UNUSED						277-299
	38		W9026	902Z			23-25-13	150, 153-155, 162-165
	38		W0091	902Z			23-25-13	156-157, 166-199
	38	UNUSED						277-299
	39		W9026	922	20		23-25-13	150, 153-155, 162-165
	39		W0091	922	20		23-25-13	156-157, 166-199
	39	UNUSED						277-299
D06151J		AE0306/ /		RCPT-E2-2				150, 153-199, 277-299
	1		W0819	204Z			23-25-13	150, 153-199, 277-299
	2		W0819	204R	22		23-25-13	150, 153-155, 162-165
	2		W0819	204R	24		23-25-13	156-157, 166-199, 277-299
	3		W0819	204B	22		23-25-13	150, 153-155, 162-165
	3		W0819	204B	24		23-25-13	156-157, 166-199, 277-299
	4		W0819	205Z			23-25-13	150, 153-199, 277-299
	5		W0819	205R	22		23-25-13	150, 153-155, 162-165
	5		W0819	205R	24		23-25-13	156-157, 166-199, 277-299
	6		W0819	205B	22		23-25-13	150, 153-155, 162-165
	6		W0819	205B	24		23-25-13	156-157, 166-199, 277-299
	7		W0819	008	22		23-25-13	150, 153-155, 162-165
	7		W0819	008	24		23-25-13	156-157, 166-199, 277-299
	8		W0819	206Z			23-25-13	150, 153-199, 277-299
	9		W0819	206R	24		23-25-13	150, 153-199, 277-299
	10		W0819	206B	24		23-25-13	150, 153-199, 277-299
	11	UNUSED						150, 153-155, 162-165
	11		W0819	207Z			23-25-13	156-157, 166-199, 277-299

HOOKUP LIST
D280T132

91-21-51
Section D06100
Page 26
Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06151J		AE0306/ /		RCPT-E2-2 (continued)				150, 153-199, 277-299
	12	UNUSED						150, 153-155, 162-165
	12	UNUSED	W0819	207R	24		23-25-13	156-157, 166-199, 277-299
	13	UNUSED						150, 153-155, 162-165
	13	UNUSED	W0819	207B	24		23-25-13	156-157, 166-199, 277-299
	14	UNUSED						150, 153-155, 162-165
	14	UNUSED	W0819	208Z			23-25-13	156-157, 166-199, 277-299
	15	UNUSED						150, 153-155, 162-165
	15	UNUSED	W0819	208R	24		23-25-13	156-157, 166-199, 277-299
	16	UNUSED						150, 153-155, 162-165
	16	UNUSED	W0819	208B	24		23-25-13	156-157, 166-199, 277-299
	17	UNUSED						150, 153-199, 277-299
	18	UNUSED						150, 153-199, 277-299
	19	UNUSED						150, 153-199, 277-299
	20	UNUSED						150, 153-199, 277-299
	21	UNUSED						150, 153-155, 162-165
	21	UNUSED	W0819	001	16		23-25-11	156-157, 166-199, 277-299
	22	UNUSED						150, 153-199, 277-299
	23	UNUSED						150, 153-199, 277-299
	24	UNUSED						150, 153-199, 277-299
	25	UNUSED						150, 153-199, 277-299
	26	UNUSED						150, 153-199, 277-299
	27	UNUSED						150, 153-199, 277-299
	28	UNUSED						150, 153-199, 277-299
	29	UNUSED						150, 153-199, 277-299
	30	UNUSED						150, 153-199, 277-299
	31	UNUSED						150, 153-199, 277-299
	32	UNUSED						150, 153-199, 277-299
	33	UNUSED						150, 153-199, 277-299
	34	UNUSED						150, 153-199, 277-299
	35	UNUSED						150, 153-199, 277-299
	36	UNUSED						150, 153-199, 277-299
	37	UNUSED						150, 153-199, 277-299
	38	UNUSED						150, 153-199, 277-299
	39	UNUSED						150, 153-199, 277-299
D06151P		AE0306/ /		PLUG-E2-2				150, 153-199, 277-299
	1	UNUSED						150, 153-199, 277-299
	2	UNUSED						150, 153-199, 277-299
	3	UNUSED						150, 153-199, 277-299
	4	UNUSED						150, 153-199, 277-299

HOOKUP LIST

D280T132

91-21-51

Section D06100

Page 27

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06151P		AE0306/ /		PLUG-E2-2 (continued)				150, 153-199, 277-299
	5	UNUSED						150, 153-199, 277-299
	6	UNUSED						150, 153-199, 277-299
	7	UNUSED						150, 153-199, 277-299
	8		W0133	804Z			23-25-13	150, 153-199, 277-299
	9		W0133	804R	22		23-25-13	150, 153-155, 162-165
	9		W0133	804R	24		23-25-13	156-157, 166-199, 277-299
	10		W0133	804B	22		23-25-13	150, 153-155, 162-165
	10		W0133	804B	24		23-25-13	156-157, 166-199, 277-299
	11	UNUSED						150, 153-155, 162-165
	11		W0133	805Z			23-25-13	156-157, 166-199, 277-299
	12	UNUSED						150, 153-155, 162-165
	12		W0133	805R	24		23-25-13	156-157, 166-199, 277-299
	13	UNUSED						150, 153-155, 162-165
	13		W0133	805B	24		23-25-13	156-157, 166-199, 277-299
	14	UNUSED						150, 153-155, 162-165
	14		W0133	806Z			23-25-13	156-157, 166-199, 277-299
	15	UNUSED						150, 153-155, 162-165
	15		W0133	806R	24		23-25-13	156-157, 166-199, 277-299
	16	UNUSED						150, 153-155, 162-165
	16		W0133	806B	24		23-25-13	156-157, 166-199, 277-299
	17	UNUSED						150, 153-199, 277-299
	18	UNUSED						150, 153-199, 277-299
	19	UNUSED						150, 153-199, 277-299
	20	UNUSED						150, 153-199, 277-299
	21	UNUSED						150, 153-155, 162-165
	21		W0133	796	16		23-25-11	156-157, 166-199, 277-299
	22	UNUSED						150, 153-199, 277-299
	23	UNUSED						150, 153-199, 277-299
	24	UNUSED						150, 153-199, 277-299
	25	UNUSED						150, 153-199, 277-299
	26	UNUSED						150, 153-199, 277-299
	27	UNUSED						150, 153-199, 277-299
	28	UNUSED						150, 153-199, 277-299
	29	UNUSED						150, 153-199, 277-299
	30	UNUSED						150, 153-199, 277-299
	31	UNUSED						150, 153-199, 277-299
	32	UNUSED						150, 153-199, 277-299
	33	UNUSED						150, 153-199, 277-299
	34	UNUSED						150, 153-199, 277-299
	35	UNUSED						150, 153-199, 277-299

HOOKUP LIST
D280T132

91-21-51
Section D06100
Page 28
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06151P		AE0306/ /		PLUG-E2-2 (continued)				150, 153-199, 277-299
	36	UNUSED						150, 153-199, 277-299
	37	UNUSED						150, 153-199, 277-299
	38	UNUSED						150, 153-199, 277-299
	39	UNUSED						150, 153-199, 277-299
D06152J		AF0232/ /		RCPT-P6-5				ALL
	1		W0148	001	24		33-11-11	ALL
	2		W0148	022	22		33-16-12	ALL
	3	UNUSED						ALL
	4		W0148	028	22		33-16-12	ALL
	5		W0148	013	22		33-16-12	ALL
	6		W0148	002	24		33-16-11	ALL
	7		W0148	012	24		33-16-11	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11		W0148	039	22		33-16-17	ALL
	12		W0148	042	22		33-16-17	ALL
	13		W0148	050	22		33-16-22	ALL
	14		W0148	051	22		33-16-22	ALL
	15		W0148	052	22		33-16-22	ALL
	16		W0148	053	22		33-16-22	ALL
	17		W0148	054	22		33-16-22	ALL
	18	UNUSED						ALL
	19		W0148	041	22		33-16-17	ALL
	20	UNUSED						ALL
	21		W0148	058	24		80-11-11	ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D06100

Page 29

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06152J		AF0232/ /		RCPT-P6-5 (continued)				ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	DED		W0148	050Z			33-16-22	ALL
D06152P		AF0232/ /		PLUG-P6				ALL
	1		W0062	59K	24		33-11-11	ALL
	2		W0062	60D	22		33-16-12	ALL
	3	UNUSED						ALL
	4		W0062	60F	22		33-16-12	ALL
	5		W0062	60G	22		33-16-12	ALL
	6		W0062	59V	24		33-16-11	ALL
	7		W0062	650	24		33-16-11	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11		W0062	60H	22		33-16-17	ALL
	12		W0062	60J	22		33-16-17	ALL
	13		W0062	60K	22		33-16-22	ALL
	14		W0062	60L	22		33-16-22	ALL
	15		W0062	60S	22		33-16-22	ALL
	16		W0062	60T	22		33-16-22	ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19		W0062	64N	22		33-16-17	ALL
	20	UNUSED						ALL
	21		W0062	568	24		80-11-11	ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D06100
Page 30
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06152P		AF0232/ /		PLUG-P6 (continued)				ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
D06153J		AE0306/ /		RCPT-E2-6				150, 153-199, 277-299
	1		W0819	202Z			23-25-13	150, 153-199, 277-299
	2		W0819	202R	22		23-25-13	150, 153-155, 162-165
	2		W0819	202R	24		23-25-13	156-157, 166-199, 277-299
	3		W0819	202B	22		23-25-13	150, 153-155, 162-165
	3		W0819	202B	24		23-25-13	156-157, 166-199, 277-299
	4		W0819	203Z			23-25-13	150, 153-199, 277-299
	5		W0819	203R	22		23-25-13	150, 153-155, 162-165
	5		W0819	203R	24		23-25-13	156-157, 166-199, 277-299
	6		W0819	203B	22		23-25-13	150, 153-155, 162-165
	6		W0819	203B	24		23-25-13	156-157, 166-199, 277-299
	7		W0819	003	24		23-25-14	150, 153-199, 277-299
	8		W0819	004	24		23-25-14	150, 153-199, 277-299
	9		W0819	914B	22		23-25-14	150, 153-199
	9		W0819	005Z			23-25-14	277-299
	10		W0819	914R	22		23-25-14	150, 153-199
	10		W0819	005	24		23-25-14	277-299
	11		W0819	915R	22		23-25-14	150, 153-199
	11		W0819	006	24		23-25-14	277-299
	12		W0819	915B	22		23-25-14	150, 153-199
	12		W0819	006Z			23-25-14	277-299
	13		W0819	007	24		23-25-14	150, 153-199, 277-299
	14		W0819	FRX			23-25-14	150, 153-199
	14	UNUSED						277-299
	15		W0819	911	22		23-25-14	150, 153-199
	15	UNUSED						277-299
	16	UNUSED						150, 153-199, 277-299
	17	UNUSED						150, 153-199, 277-299

HOOKUP LIST

D280T132

91-21-51

Section D06100

Page 31

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06153J		AE0306/ /		RCPT-E2-6 (continued)				150, 153-199, 277-299
	18	UNUSED						150, 153-199, 277-299
	19	UNUSED						150, 153-199, 277-299
	20	UNUSED						150, 153-199, 277-299
	21	UNUSED						150, 153-199, 277-299
	22	UNUSED						150, 153-199, 277-299
	23	UNUSED						150, 153-199, 277-299
	24	UNUSED						150, 153-199, 277-299
	REF		W0819	914Z			23-25-14	150, 153-199
	REF		W0819	915Z			23-25-14	150, 153-199
	REF		W0819	FRX			23-25-14	150, 153-199
D06153P		AE0306/ /		PLUG-E2-6				150, 153-199, 277-299
	1		W0163	205Z			23-25-13	150, 153-199, 277-299
	2		W0163	205R	22		23-25-13	150, 153-155, 162-165
	2		W0163	205R	24		23-25-13	156-157, 166-199, 277-299
	3		W0163	205B	22		23-25-13	150, 153-155, 162-165
	3		W0163	205B	24		23-25-13	156-157, 166-199, 277-299
	4		W0163	206Z			23-25-13	150, 153-199, 277-299
	5		W0163	206R	22		23-25-13	150, 153-155, 162-165
	5		W0163	206R	24		23-25-13	156-157, 166-199, 277-299
	6		W0163	206B	22		23-25-13	150, 153-155, 162-165
	6		W0163	206B	24		23-25-13	156-157, 166-199, 277-299
	7		W0163	066	22		23-25-14	150, 153-155, 162-165
	7		W0163	066	24		23-25-14	156-157, 166-199, 277-299
	8		W0163	062	22		23-25-14	150, 153-155, 162-165
	8		W0163	062	24		23-25-14	156-157, 166-199, 277-299
	9		W0163	051B	22		23-25-14	150, 153-199
	9		W0163	051Z			23-25-14	277-299
	10		W0163	051R	22		23-25-14	150, 153-199
	10		W0163	051	24		23-25-14	277-299
	11		W0163	052R	22		23-25-14	150, 153-199
	11		W0163	052	24		23-25-14	277-299
	12		W0163	052B	22		23-25-14	150, 153-199
	12		W0163	052Z			23-25-14	277-299
	13		W0163	053	22		23-25-14	150, 153-155, 162-165
	13		W0163	053	24		23-25-14	156-157, 166-199, 277-299
	14		W0163	FRB			23-25-14	150, 153-199
	14	UNUSED						277-299
	15	UNUSED						150, 153-155, 162-165, 277-299
	15		W0163	049	24		23-25-14	156-157, 166-199

HOOKUP LIST
D280T132

91-21-51
Section D06100
Page 32
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06153P		AE0306/ /		PLUG-E2-6 (continued)				150, 153-199, 277-299
	16	UNUSED						150, 153-199, 277-299
	17	UNUSED						150, 153-199, 277-299
	18	UNUSED						150, 153-199, 277-299
	19	UNUSED						150, 153-199, 277-299
	20	UNUSED						150, 153-199, 277-299
	21	UNUSED						150, 153-199, 277-299
	22	UNUSED						150, 153-199, 277-299
	23	UNUSED						150, 153-199, 277-299
	24	UNUSED						150, 153-199, 277-299
			W0163	051Z			23-25-14	150, 153-199
			W0163	052Z			23-25-14	150, 153-199
			W0163	FRB			23-25-14	150, 153-199
D06154J		AF0232/ /		RCPT-P6-5				ALL
	1	UNUSED						ALL
	2		W0150	001	22		33-16-12	ALL
	3		W0150	005	22		33-16-12	ALL
	4		W0150	010	22		33-16-12	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13		W0150	015	22		33-16-22	ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16		W0150	017	22		33-16-22	ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20		W0150	020	24		24-51-71	ALL
	21		W0150	021	24		24-51-71	ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D06100
Page 33
Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06154J		AF0232/ /		RCPT-P6-5 (continued)				ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	DED		W0150	010Z			33-16-12	ALL
	DED		W0150	017Z			33-16-22	ALL
	DED		W0150	020Z			24-51-71	ALL
	DED		W0150	021Z			24-51-71	ALL
D06154P		AF0232/ /		PLUG-P6				ALL
	1	UNUSED						ALL
	2		W0062	60A	22		33-16-12	ALL
	3		W0062	60B	22		33-16-12	ALL
	4		W0062	60C	22		33-16-12	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13		W0062	60M	22		33-16-22	ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16		W0062	60R	22		33-16-22	ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20		W0062	53K	24		24-51-71	ALL
	21		W0062	64H	24		24-51-71	ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D06100
Page 34
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06154P		AF0232/ /		PLUG-P6 (continued)				ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	DED		W0062	60AZ			33-16-12	ALL
	DED		W0062	60BZ			33-16-12	ALL
	DED		W0062	60CZ			33-16-12	ALL
	DED		W0062	60MZ			33-16-22	ALL
	DED		W0062	60RZ			33-16-22	ALL
D06155J		AC1102/ /		RCPT-E9-1				150, 153-199, 277-299
	1		W0817	203Z			23-25-13	150, 153-199, 277-299
	2		W0817	203R	22		23-25-13	150, 153-155, 162-165
	2		W0817	203R	24		23-25-13	156-157, 166-199, 277-299
	3		W0817	203B	22		23-25-13	150, 153-155, 162-165
	3		W0817	203B	24		23-25-13	156-157, 166-199, 277-299
	4		W9012	201R	22		23-25-13	150, 153-155, 162-165
	4		W0817	201R	24		23-25-13	156-157, 166-199, 277-299
	5		W9012	201B	22		23-25-13	150, 153-155, 162-165
	5		W0817	201B	24		23-25-13	156-157, 166-199, 277-299
	6		W0817	202Z			23-25-13	150, 153-199, 277-299
	7		W0817	202R	22		23-25-13	150, 153-155, 162-165
	7		W0817	202R	24		23-25-13	156-157, 166-199, 277-299
	8		W0817	202B	22		23-25-13	150, 153-155, 162-165
	8		W0817	202B	24		23-25-13	156-157, 166-199, 277-299
	9		W0817	910	22		23-25-14	150, 153-199
	9	UNUSED						277-299
	10	UNUSED						150, 153-199, 277-299
	11	UNUSED						150, 153-199, 277-299
	12		W0817	204Z			23-25-13	150, 153-199, 277-299
	13		W0817	204R	22		23-25-13	150, 153-155, 162-165
	13		W0817	204R	24		23-25-13	156-157, 166-199, 277-299
	14		W0817	204B	22		23-25-13	150, 153-155, 162-165
	14		W0817	204B	24		23-25-13	156-157, 166-199, 277-299
	15		W9014	205Z			23-25-13	150, 153-155, 162-165
	15		W0817	205Z			23-25-13	156-157, 166-199, 277-299
	16		W9014	205R	22		23-25-13	150, 153-155, 162-165
	16		W0817	205R	24		23-25-13	156-157, 166-199, 277-299
	17		W9014	205B	22		23-25-13	150, 153-155, 162-165
	17		W0817	205B	24		23-25-13	156-157, 166-199, 277-299
	18		W0817	912B	22		23-25-14	150, 153-199
	18		W0817	004Z			23-25-14	277-299

HOOKUP LIST

D280T132

91-21-51

Section D06100

Page 35

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06155J		AC1102/ /		RCPT-E9-1 (continued)				150, 153-199, 277-299
	19		W0817	912R	22		23-25-14	150, 153-199
	19		W0817	004	24		23-25-14	277-299
	20		W0817	913B	22		23-25-14	150, 153-199
	20		W0817	003Z			23-25-14	277-299
	21		W0817	913R	22		23-25-14	150, 153-199
	21		W0817	003	24		23-25-14	277-299
	22		W0817	002	24		23-25-14	150, 153-199, 277-299
	23		W0817	001	24		23-25-14	150, 153-199, 277-299
	24		W9012	201Z			23-25-13	150, 153-155, 162-165
	24		W0817	201Z			23-25-13	156-157, 166-199, 277-299
	DED		W0817	912Z			23-25-14	150, 153-199
	DED		W0817	913Z			23-25-14	150, 153-199
D06155P		AC1102/ /		PLUG-E9-1				150, 153-155, 162-165
D06155P		AC1102/ /		PLUG-				156-157, 166-199, 277-299
	1	UNUSED						150, 153-155, 162-165
	1		W0095	201Z			23-25-11	156-157, 166-199, 277-299
	2	UNUSED						150, 153-155, 162-165
	2		W0095	201R	24		23-25-11	156-157, 166-199, 277-299
	3	UNUSED						150, 153-155, 162-165
	3		W0095	201B	24		23-25-11	156-157, 166-199, 277-299
	4		W9026	907R	22		23-25-13	150, 153-155, 162-165
	4		W0095	205R	24		23-25-13	156-157, 166-199, 277-299
	5		W9026	907B	22		23-25-13	150, 153-155, 162-165
	5		W0095	205B	24		23-25-13	156-157, 166-199, 277-299
	6		W9026	906Z			23-25-13	150, 153-155, 162-165
	6		W0091	906Z			23-25-13	156-157, 166-199
	6	UNUSED						277-299
	7		W9026	906R	22		23-25-13	150, 153-155, 162-165
	7		W0091	906R	22		23-25-13	156-157, 166-199
	7	UNUSED						277-299
	8		W9026	906B	22		23-25-13	150, 153-155, 162-165
	8		W0091	906B	22		23-25-13	156-157, 166-199
	8	UNUSED						277-299
	9		W9026	951	22		23-25-14	150, 153-155, 162-165
	9		W0091	951	22		23-25-14	156-157, 166-199
	9	UNUSED						277-299
	10	UNUSED						150, 153-199, 277-299
	11	UNUSED						150, 153-199, 277-299
	12	UNUSED						150, 153-155, 162-165

HOOKUP LIST

D280T132

91-21-51

Section D06100

Page 36

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06155P		AC1102/ /		PLUG-E9-1 (continued)				150, 153-155, 162-165
D06155P		AC1102/ /		PLUG- (continued)				156-157, 166-199, 277-299
	12		W0095	206Z			23-25-13	156-157, 166-199, 277-299
	13	UNUSED						150, 153-155, 162-165
	13		W0095	206R	24		23-25-13	156-157, 166-199, 277-299
	14	UNUSED						150, 153-155, 162-165
	14		W0095	206B	24		23-25-13	156-157, 166-199, 277-299
	15	UNUSED						150, 153-155, 162-165
	15		W0095	207Z			23-25-13	156-157, 166-199, 277-299
	16	UNUSED						150, 153-155, 162-165
	16		W0095	207R	24		23-25-13	156-157, 166-199, 277-299
	17	UNUSED						150, 153-155, 162-165
	17		W0095	207B	24		23-25-13	156-157, 166-199, 277-299
	18		W9026	016Z			23-25-14	150, 153-155, 162-165
	18		W0095	001Z			23-25-14	156-157, 166-199, 277-299
	19		W9026	016	22		23-25-14	150, 153-155, 162-165
	19		W0095	001	24		23-25-14	156-157, 166-199, 277-299
	20		W9026	017Z			23-25-14	150, 153-155, 162-165
	20		W0095	002Z			23-25-14	156-157, 166-199, 277-299
	21		W9026	017	22		23-25-14	150, 153-155, 162-165
	21		W0095	002	24		23-25-14	156-157, 166-199, 277-299
	22		W9026	018	22		23-25-14	150, 153-155, 162-165
	22		W0095	003	24		23-25-14	156-157, 166-199, 277-299
	23		W9026	019	22		23-25-14	150, 153-155, 162-165
	23		W0095	004	24		23-25-14	156-157, 166-199, 277-299
	24		W9026	907Z			23-25-13	150, 153-155, 162-165
	24		W0095	205Z			23-25-13	156-157, 166-199, 277-299
D06156J		AF0232/ /		RCPT-P6-5				ALL
	1		W0152	009	24		33-16-11	ALL
	2		W0152	001	20		33-11-14	ALL
	3	UNUSED						ALL
	4		W0152	011	22		33-16-12	ALL
	5		W0152	045	22		33-16-12	ALL
	6	UNUSED						ALL
	7		W0152	048	22		33-16-21	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11		W0152	024	22		33-16-17	ALL
	12		W0152	027	22		33-16-17	ALL

HOOKUP LIST

D280T132

91-21-51

Section D06100

Page 37

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06156J		AF0232/ /		RCPT-P6-5 (continued)				ALL
	13		W0152	035	22		33-16-22	ALL
	14		W0152	036	22		33-16-22	ALL
	15		W0152	037	22		33-16-22	ALL
	16		W0152	038	22		33-16-22	ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19		W0152	026	22		33-16-17	ALL
	20	UNUSED						ALL
	21		W0152	043	24		80-11-21	ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30		W0152	046	24		80-11-11	ALL
	31		W0152	047	24		80-11-21	ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	DED		W0152	035Z			33-16-22	ALL
	DED		W0152	046Z			80-11-11	ALL
	DED		W0152	047Z			80-11-21	ALL
D06156P		AF0232/ /		PLUG-P6				ALL
	1		W0066	59V	24		33-16-11	ALL
	2		W0066	59M	20		33-11-14	ALL
	3	UNUSED						ALL
	4		W0066	60F	22		33-16-12	ALL
	5		W0066	60G	22		33-16-12	ALL
	6	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D06100
Page 38
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06156P		AF0232/ /		PLUG-P6 (continued)				ALL
	7		W0066	82G	24		33-16-11	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11		W0066	60H	22		33-16-17	ALL
	12		W0066	60J	22		33-16-17	ALL
	13		W0066	60K	22		33-16-22	ALL
	14		W0066	60L	22		33-16-22	ALL
	15		W0066	60S	22		33-16-22	ALL
	16		W0066	60T	22		33-16-22	ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19		W0066	64N	22		33-16-17	ALL
	20	UNUSED						ALL
	21		W0066	568	24		80-11-21	ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30		W0066	65A	24		80-11-11	ALL
	31		W0066	65B	24		80-11-21	ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	DED		W0066	65AZ			80-11-11	ALL
	DED		W0066	65BZ			80-11-21	ALL
D06157J		AE0322/ /		RCPT-E2-3				150, 153-199, 277-299
	1	UNUSED						150, 153-155, 162-165

HOOKUP LIST

D280T132

91-21-51

Section D06100

Page 39

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06157J		AE0322/ /		RCPT-E2-3 (continued)				150, 153-199, 277-299
	1		W0817	201R	24		23-25-13	156-157, 166-199, 277-299
	2	UNUSED						150, 153-155, 162-165
	2		W0817	201B	24		23-25-13	156-157, 166-199, 277-299
	3	UNUSED						150, 153-155, 162-165
	3		W0817	201Z			23-25-13	156-157, 166-199, 277-299
	4		W0817	202Z			23-25-13	150, 153-199, 277-299
	5		W0817	202R	22		23-25-13	150, 153-155, 162-165
	5		W0817	202R	24		23-25-13	156-157, 166-199, 277-299
	6		W0817	202B	22		23-25-13	150, 153-155, 162-165
	6		W0817	202B	24		23-25-13	156-157, 166-199, 277-299
	7		W0817	203Z			23-25-13	150, 153-199, 277-299
	8		W0817	203R	22		23-25-13	150, 153-155, 162-165
	8		W0817	203R	24		23-25-13	156-157, 166-199, 277-299
	9		W0817	203B	22		23-25-13	150, 153-155, 162-165
	9		W0817	203B	24		23-25-13	156-157, 166-199, 277-299
	10		W0817	204Z			23-25-13	150, 153-199, 277-299
	11		W0817	204R	22		23-25-13	150, 153-155, 162-165
	11		W0817	204R	24		23-25-13	156-157, 166-199, 277-299
	12		W0817	204B	22		23-25-13	150, 153-155, 162-165
	12		W0817	204B	24		23-25-13	156-157, 166-199, 277-299
	13	UNUSED						150, 153-155, 162-165
	13		W0817	205Z			23-25-13	156-157, 166-199, 277-299
	14	UNUSED						150, 153-155, 162-165
	14		W0817	205R	24		23-25-13	156-157, 166-199, 277-299
	15	UNUSED						150, 153-155, 162-165
	15		W0817	205B	24		23-25-13	156-157, 166-199, 277-299
	16	UNUSED						150, 153-199, 277-299
	17	UNUSED						150, 153-199, 277-299
	18	UNUSED						150, 153-199, 277-299
	19	UNUSED						150, 153-199, 277-299
	20	UNUSED						150, 153-199, 277-299
	21	UNUSED						150, 153-199, 277-299
	22	UNUSED						150, 153-199, 277-299
	23	UNUSED						150, 153-199, 277-299
	24	UNUSED						150, 153-199, 277-299
D06157P		AE0322/ /		PLUG-E2-3				150, 153-199, 277-299
	1	UNUSED						150, 153-155, 162-165
	1		W0145	597R	24		23-25-13	156-157, 166-199, 277-299
	2	UNUSED						150, 153-155, 162-165

HOOKUP LIST
D280T132

91-21-51
Section D06100
Page 40
Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06157P		AE0322/ /		PLUG-E2-3 (continued)				150, 153-199, 277-299
	2		W0145	597B	24		23-25-13	156-157, 166-199, 277-299
	3	UNUSED						150, 153-155, 162-165
	3		W0145	597Z			23-25-13	156-157, 166-199, 277-299
	4		W0145	598Z			23-25-13	150, 153-199, 277-299
	5		W0145	598R	22		23-25-13	150, 153-155, 162-165
	5		W0145	598R	24		23-25-13	156-157, 166-199, 277-299
	6		W0145	598B	22		23-25-13	150, 153-155, 162-165
	6		W0145	598B	24		23-25-13	156-157, 166-199, 277-299
	7	UNUSED						150, 153-199, 277-299
	8	UNUSED						150, 153-199, 277-299
	9	UNUSED						150, 153-199, 277-299
	10	UNUSED						150, 153-199, 277-299
	11	UNUSED						150, 153-199, 277-299
	12	UNUSED						150, 153-199, 277-299
	13	UNUSED						150, 153-155, 162-165
	13		W0145	599Z			23-25-13	156-157, 166-199, 277-299
	14	UNUSED						150, 153-155, 162-165
	14		W0145	599R	24		23-25-13	156-157, 166-199, 277-299
	15	UNUSED						150, 153-155, 162-165
	15		W0145	599B	24		23-25-13	156-157, 166-199, 277-299
	16	UNUSED						150, 153-199, 277-299
	17	UNUSED						150, 153-199, 277-299
	18	UNUSED						150, 153-199, 277-299
	19	UNUSED						150, 153-199, 277-299
	20	UNUSED						150, 153-199, 277-299
	21	UNUSED						150, 153-199, 277-299
	22	UNUSED						150, 153-199, 277-299
	23	UNUSED						150, 153-199, 277-299
	24	UNUSED						150, 153-199, 277-299
D06158J		AF0232/ /		RCPT-P6-5				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W0154	002	22		33-16-12	ALL
	5		W0154	005	22		33-16-12	ALL
	6		W0154	018	22		33-16-12	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D06100

Page 41

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06158J		AF0232/ /		RCPT-P6-5 (continued)				ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13		W0154	016	22		33-16-22	ALL
	14		W0154	017	22		33-16-22	ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	DED		W0154	016Z			33-16-22	ALL
	DED		W0154	018Z			33-16-12	ALL
D06158P		AF0232/ /		PLUG-P6				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W0066	60B	22		33-16-12	ALL
	5		W0066	60C	22		33-16-12	ALL
	6		W0066	60D	22		33-16-12	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13		W0066	60M	22		33-16-22	ALL
	14		W0066	60N	22		33-16-22	ALL

HOOKUP LIST
D280T132

91-21-51
Section D06100
Page 42
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06158P		AF0232/ /		PLUG-P6 (continued)				ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	DED		W0066	60BZ			33-16-12	ALL
	DED		W0066	60CZ			33-16-12	ALL
	DED		W0066	60DZ			33-16-12	ALL
	DED		W0066	60MZ			33-16-22	ALL
	DED		W0066	60NZ			33-16-22	ALL
D06159J		AE0320/ /		RCPT-E2-6				150, 153-199, 277-299
	1		W0817	001	24		23-25-14	150, 153-199, 277-299
	2		W0817	002	24		23-25-14	150, 153-199, 277-299
	3		W0817	913B	22		23-25-14	150, 153-199
	3		W0817	003Z			23-25-14	277-299
	4		W0817	913R	22		23-25-14	150, 153-199
	4		W0817	003	24		23-25-14	277-299
	5		W0817	912R	22		23-25-14	150, 153-199
	5		W0817	004	24		23-25-14	277-299
	6		W0817	912B	22		23-25-14	150, 153-199
	6		W0817	004Z			23-25-14	277-299
	7		W0817	FRA			23-25-14	150, 153-199
	7	UNUSED						277-299
	8		W0817	910	22		23-25-14	150, 153-199
	8	UNUSED						277-299
	9	UNUSED						150, 153-199, 277-299
	10	UNUSED						150, 153-199, 277-299

HOOKUP LIST

D280T132

91-21-51

Section D06100

Page 43

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06159J		AE0320/ /		RCPT-E2-6 (continued)				150, 153-199, 277-299
	11	UNUSED						150, 153-199, 277-299
	12	UNUSED						150, 153-199, 277-299
	13	UNUSED						150, 153-199, 277-299
	14	UNUSED						150, 153-199, 277-299
	15	UNUSED						150, 153-199, 277-299
	16	UNUSED						150, 153-199, 277-299
	17	UNUSED						150, 153-199, 277-299
	18	UNUSED						150, 153-199, 277-299
	19	UNUSED						150, 153-199, 277-299
	20	UNUSED						150, 153-199, 277-299
	21	UNUSED						150, 153-199, 277-299
	22	UNUSED						150, 153-199, 277-299
	23	UNUSED						150, 153-199, 277-299
	24	UNUSED						150, 153-199, 277-299
			W0817	912Z			23-25-14	150, 153-199
			W0817	913Z			23-25-14	150, 153-199
			W0817	FRA			23-25-14	150, 153-199
D06159P		AE0320/ /		PLUG-E2-6				150, 153-199, 277-299
	1		W0173	060	22		23-25-14	150, 153-155, 162-165
	1		W0173	060	24		23-25-14	156-157, 166-199, 277-299
	2		W0173	051	22		23-25-14	150, 153-155, 162-165
	2		W0173	051	24		23-25-14	156-157, 166-199, 277-299
	3		W0173	054B	22		23-25-14	150, 153-199
	3		W0173	054Z			23-25-14	277-299
	4		W0173	054R	22		23-25-14	150, 153-199
	4		W0173	054	24		23-25-14	277-299
	5		W0173	055R	22		23-25-14	150, 153-199
	5		W0173	055	24		23-25-14	277-299
	6		W0173	055B	22		23-25-14	150, 153-199
	6		W0173	055Z			23-25-14	277-299
	7		W0173	FRC			23-25-14	150, 153-199
	7	UNUSED						277-299
	8		W0173	052	22		23-25-14	150, 153-155, 162-165
	8		W0173	052	24		23-25-14	156-157, 166-199
	8	UNUSED						277-299
	9	UNUSED						150, 153-199, 277-299
	10	UNUSED						150, 153-199, 277-299
	11	UNUSED						150, 153-199, 277-299
	12	UNUSED						150, 153-199, 277-299

HOOKUP LIST

D280T132

91-21-51

Section D06100

Page 44

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06159P		AE0320/ /		PLUG-E2-6 (continued)				150, 153-199, 277-299
	13	UNUSED						150, 153-199, 277-299
	14	UNUSED						150, 153-199, 277-299
	15	UNUSED						150, 153-199, 277-299
	16	UNUSED						150, 153-199, 277-299
	17	UNUSED						150, 153-199, 277-299
	18	UNUSED						150, 153-199, 277-299
	19	UNUSED						150, 153-199, 277-299
	20	UNUSED						150, 153-199, 277-299
	21	UNUSED						150, 153-199, 277-299
	22	UNUSED						150, 153-199, 277-299
	23	UNUSED						150, 153-199, 277-299
	24	UNUSED						150, 153-199, 277-299
			W0173	054Z			23-25-14	150, 153-199
			W0173	055Z			23-25-14	150, 153-199
			W0173	FRC			23-25-14	150, 153-199
D06160J		AF0232/ /		RCPT-P6-5				ALL
	1		W0156	004	24		33-11-11	ALL
	2	UNUSED						ALL
	3	FL	W0156	018	16		33-11-14	ALL
	4	FL	W0156	021	16		33-11-14	ALL
	5		W0156	022	24		33-11-15	ALL
	6		W0156	027	24		33-16-11	ALL
	7		W0156	028	24		33-16-11	ALL
	8		W0156	044	22		33-16-12	ALL
	9		W0156	055	22		33-16-12	ALL
	10		W0156	058	22		33-16-12	ALL
	11		W0156	063	22		33-16-17	ALL
	12		W0156	066	22		33-16-17	ALL
	13		W0156	080	22		33-16-22	ALL
	14		W0156	081	22		33-16-22	ALL
	15		W0156	083	22		33-16-22	ALL
	16		W0156	085	22		33-16-22	ALL
	17		W0156	086	22		33-16-22	ALL
	18		W0156	087	22		33-16-22	ALL
	19		W0156	065	22		33-16-17	ALL
	20		W0156	136	22		36-11-52	ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D06100

Page 45

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06160J		AF0232/ /		RCPT-P6-5 (continued)				ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28		W0156	100	20		80-11-21	ALL
	29		W0156	110	20		80-11-21	ALL
	30		W0156	104	24		80-11-21	ALL
	31		W0156	111	20		80-11-21	ALL
	32		W0156	090	24		80-11-21	ALL
	33		W0156	092	24		80-11-21	ALL
	34		W0156	094	24		80-11-21	ALL
	35		W0156	096	24		80-11-21	ALL
	36		W0156	097	24		80-11-21	ALL
	37		W0156	098	24		80-11-21	ALL
	38		W0156	106	20		80-11-21	ALL
	39		W0156	107	24		80-11-21	ALL
	40	UNUSED						ALL
	41		W0156	109	24		80-11-21	ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45		W0156	175	24		49-72-11	ALL
	46		W0156	176	24		49-72-11	ALL
	47	UNUSED						ALL
	48		W0156	141	22		33-16-12	ALL
	49		W0156	142	22		33-16-12	ALL
	50		W0156	160	20		33-11-13	ALL
	51		W0156	156	20		33-11-13	ALL
	52		W0156	157	20		33-11-13	ALL
	53		W0156	158	24		33-11-13	ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
	DED		W0156	065Z			33-16-17	ALL
	DED		W0156	066Z			33-16-17	ALL
	DED		W0156	080Z			33-16-22	ALL
	DED		W0156	175Z			49-72-11	ALL
	DED		W0156	176Z			49-72-11	ALL
D06160P		AF0232/ /		PLUG-P6				ALL
	1		W0070	05A	24		33-11-11	ALL

HOOKUP LIST
D280T132

91-21-51
Section D06100
Page 46
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06160P		AF0232/ /		PLUG-P6 (continued)				ALL
	2	UNUSED						ALL
	3	FM	W0070	645	16		33-11-14	ALL
	4	FM	W0070	05F	16		33-11-14	ALL
	5		W0070	616	24		33-11-15	ALL
	6		W0070	05K	24		33-16-11	ALL
	7		W0070	637	24		33-16-11	ALL
	8		W0070	05T	22		33-16-12	ALL
	9		W0070	05U	22		33-16-12	ALL
	10		W0070	05V	22		33-16-12	ALL
	11		W0070	05W	22		33-16-17	ALL
	12		W0070	05X	22		33-16-17	ALL
	13		W0070	06E	22		33-16-22	ALL
	14		W0070	06F	22		33-16-22	ALL
	15		W0070	06G	22		33-16-22	ALL
	16		W0070	06H	22		33-16-22	ALL
	17		W0070	06J	22		33-16-22	ALL
	18		W0070	06K	22		33-16-22	ALL
	19		W0070	05Y	22		33-16-17	ALL
	20		W0070	06W	22		36-11-52	ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	DK	W0070	140	18		80-11-21	ALL
	29	DK	W0070	141	18		80-11-21	ALL
	30		W0070	142	24		80-11-21	ALL
	31	DK	W0070	11A	18		80-11-21	ALL
	32		W0070	11B	24		80-11-21	ALL
	33		W0070	11C	24		80-11-21	ALL
	34		W0070	11D	24		80-11-21	ALL
	35		W0070	11E	24		80-11-21	ALL
	36		W0070	11F	24		80-11-21	ALL
	37		W0070	11G	24		80-11-21	ALL
	38	DK	W0070	11H	18		80-11-21	ALL
	39		W0070	11J	24		80-11-21	ALL
	40	UNUSED						ALL
	41		W0070	11L	24		80-11-21	ALL

HOOKUP LIST

D280T132

91-21-51

Section D06100

Page 47

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06160P		AF0232/ /		PLUG-P6 (continued)				ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45		W0070	033	24		49-72-11	ALL
	46		W0070	032	24		49-72-11	ALL
	47	UNUSED						ALL
	48		W0070	018	22		33-16-12	ALL
	49		W0070	019	22		33-16-12	ALL
	50		W0070	14B	20		33-11-13	ALL
	51		W0070	14C	20		33-11-13	ALL
	52		W0070	614	20		33-11-13	ALL
	53		W0070	14D	24		33-11-13	ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
	DED		W0070	032Z			49-72-11	ALL
	DED		W0070	033Z			49-72-11	ALL
	DED		W0070	05XZ			33-16-17	ALL
	DED		W0070	05YZ			33-16-17	ALL
D06161J		AC1102/180/R80		RCPT-E9-1				156-157, 166-199, 277-299
	1		W0815	009	20		23-25-11	156-157, 166-199, 277-299
	2		W0815	005	20		23-25-11	156-157, 166-199, 277-299
	3		W0815	001	24		23-25-11	156-157, 166-199, 277-299
	4		W0815	002	24		23-25-11	156-157, 166-199, 277-299
	5		W0815	201Z			23-25-11	156-157, 166-199, 277-299
	6		W0815	201R	24		23-25-11	156-157, 166-199, 277-299
	7		W0815	201B	24		23-25-11	156-157, 166-199, 277-299
	8		W0815	202R	24		23-25-11	156-157, 166-199, 277-299
	9		W0815	202B	24		23-25-11	156-157, 166-199, 277-299
	10		W0815	202Z			23-25-11	156-157, 166-199, 277-299
	11	UNUSED						156-157, 166-199, 277-299
	12	UNUSED						156-157, 166-199, 277-299
	13	UNUSED						156-157, 166-199, 277-299
	14	UNUSED						156-157, 166-199, 277-299
	15	UNUSED						156-157, 166-199, 277-299
	16	UNUSED						156-157, 166-199, 277-299
	17	UNUSED						156-157, 166-199, 277-299
	18	UNUSED						156-157, 166-199, 277-299
	19	UNUSED						156-157, 166-199, 277-299
	20	UNUSED						156-157, 166-199, 277-299

HOOKUP LIST
D280T132

91-21-51
Section D06100
Page 48
Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06161J		AC1102/180/R80		RCPT-E9-1 (continued)				156-157, 166-199, 277-299
	21	UNUSED						156-157, 166-199, 277-299
	22	UNUSED						156-157, 166-199, 277-299
	23	UNUSED						156-157, 166-199, 277-299
	24	UNUSED						156-157, 166-199, 277-299
D06161P		AC1102/ /		PLUG-E9-1				167-199, 277-299
	1		W0091	007	20		23-25-11	167-199, 277-299
	2		W0091	008	20		23-25-11	167-199, 277-299
	3		W0091	005	24		23-25-11	167-199, 277-299
	4		W0091	006	24		23-25-11	167-199, 277-299
	5	UNUSED						167-199
	5		W0091	203Z			23-25-11	277-299
	6	UNUSED						167-199
	6		W0091	203R	24		23-25-11	277-299
	7	UNUSED						167-199
	7		W0091	203B	24		23-25-11	277-299
	8	UNUSED						167-199
	8		W0091	205R	24		23-25-11	277-299
	9	UNUSED						167-199
	9		W0091	205B	24		23-25-11	277-299
	10	UNUSED						167-199
	10		W0091	205Z			23-25-11	277-299
	11	UNUSED						167-199, 277-299
	12	UNUSED						167-199, 277-299
	13	UNUSED						167-199, 277-299
	14	UNUSED						167-199, 277-299
	15	UNUSED						167-199, 277-299
	16	UNUSED						167-199, 277-299
	17	UNUSED						167-199, 277-299
	18	UNUSED						167-199, 277-299
	19	UNUSED						167-199, 277-299
	20	UNUSED						167-199, 277-299
	21	UNUSED						167-199, 277-299
	22	UNUSED						167-199, 277-299
	23	UNUSED						167-199, 277-299
	24	UNUSED						167-199, 277-299
D06162J		AF0232/ /		RCPT-P6-5				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D06100
Page 49
Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06162J		AF0232/ /		RCPT-P6-5 (continued)				ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W0158	101	22		33-16-21	ALL
	8		W0158	011	22		33-16-12	ALL
	9		W0158	021	22		33-16-12	ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13		W0158	023	22		33-16-22	ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17		W0158	024	22		33-16-22	ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20		W0158	078	22		36-11-51	ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28		W0158	038	20		80-11-11	ALL
	29		W0158	051	20		80-11-11	ALL
	30		W0158	042	24		80-11-11	ALL
	31		W0158	052	20		80-11-11	ALL
	32		W0158	028	24		80-11-11	ALL
	33		W0158	030	24		80-11-11	ALL
	34		W0158	032	24		80-11-11	ALL
	35		W0158	034	24		80-11-11	ALL
	36		W0158	035	24		80-11-11	ALL
	37		W0158	036	24		80-11-11	ALL
	38		W0158	044	20		80-11-11	ALL
	39		W0158	045	24		80-11-11	ALL
	40		W0158	046	22		80-11-11	ALL
	41		W0158	048	24		80-11-11	ALL
	42		W0158	049	22		80-11-11	ALL

HOOKUP LIST
D280T132

91-21-51
Section D06100
Page 50
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06162J		AF0232/ /		RCPT-P6-5 (continued)				ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
	DED		W0158	011Z			33-16-12	ALL
	DED		W0158	021Z			33-16-12	ALL
	DED		W0158	024Z			33-16-22	ALL
D06162P		AF0232/ /		PLUG-P6				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W0070	50E	24		33-16-11	ALL
	8		W0070	05R	22		33-16-12	ALL
	9		W0070	05S	22		33-16-12	ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13		W0070	06A	22		33-16-22	ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17		W0070	06C	22		33-16-22	ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20		W0070	06U	22		36-11-51	ALL
	21	UNUSED						ALL
	22	UNUSED						ALL

HOOKUP LIST
D280T132



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06162P		AF0232/ /		PLUG-P6 (continued)				ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	DK	W0070	110	18		80-11-11	ALL
	29	DK	W0070	111	18		80-11-11	ALL
	30		W0070	112	24		80-11-11	ALL
	31	DK	W0070	10A	18		80-11-11	ALL
	32		W0070	10B	24		80-11-11	ALL
	33		W0070	10C	24		80-11-11	ALL
	34		W0070	10D	24		80-11-11	ALL
	35		W0070	10E	24		80-11-11	ALL
	36		W0070	10F	24		80-11-11	ALL
	37		W0070	10G	24		80-11-11	ALL
	38	DK	W0070	10H	18		80-11-11	ALL
	39		W0070	10J	24		80-11-11	ALL
	40		W0070	10K	22		80-11-11	ALL
	41		W0070	10L	24		80-11-11	ALL
	42		W0070	10M	24		80-11-11	ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
	DED		W0070	05RZ			33-16-12	ALL
	DED		W0070	05SZ			33-16-12	ALL
	DED		W0070	06AZ			33-16-22	ALL
	DED		W0070	06CZ			33-16-22	ALL
	DED		W0070	10AZ			80-11-11	ALL
	DED		W0070	10BZ			80-11-11	ALL
	DED		W0070	10CZ			80-11-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D06100

Page 52

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06162P		AF0232/ /		PLUG-P6 (continued)				ALL
	DED		W0070	10DZ			80-11-11	ALL
	DED		W0070	10EZ			80-11-11	ALL
	DED		W0070	10FZ			80-11-11	ALL
	DED		W0070	10GZ			80-11-11	ALL
	DED		W0070	10HZ			80-11-11	ALL
	DED		W0070	10JZ			80-11-11	ALL
	DED		W0070	10LZ			80-11-11	ALL
	DED		W0070	110Z			80-11-11	ALL
	DED		W0070	112Z			80-11-11	ALL
D06163J		AP1101-1/169/L14		RCPT-E11				156-157, 166-199, 277-299
	1		W1011	001	20		23-25-11	156-157, 166-199, 277-299
	2		W1011	002	20		23-25-11	156-157, 166-199, 277-299
	3		W1011	003	20		23-25-11	156-157, 166-199, 277-299
	4		W1011	202Z			23-25-11	156-157, 166-199, 277-299
	5		W1011	202R	24		23-25-11	156-157, 166-199, 277-299
	6		W1011	202B	24		23-25-11	156-157, 166-199, 277-299
	7		W1011	203R	24		23-25-11	156-157, 166-199, 277-299
	8		W1011	203B	24		23-25-11	156-157, 166-199, 277-299
	9		W1011	203Z			23-25-11	156-157, 166-199, 277-299
	10	UNUSED						156-157, 166-199, 277-299
	11	UNUSED						156-157, 166-199, 277-299
	12	UNUSED						156-157, 166-199, 277-299
	13	UNUSED						156-157, 166-199, 277-299
	14	UNUSED						156-157, 166-199, 277-299
	15	UNUSED						156-157, 166-199, 277-299
	16	UNUSED						156-157, 166-199, 277-299
	17	UNUSED						156-157, 166-199, 277-299
	18	UNUSED						156-157, 166-199, 277-299
	19	UNUSED						156-157, 166-199, 277-299
	20	UNUSED						156-157, 166-199, 277-299
	21	UNUSED						156-157, 166-199, 277-299
	22	UNUSED						156-157, 166-199, 277-299
	23	UNUSED						156-157, 166-199, 277-299
	24	UNUSED						156-157, 166-199, 277-299
D06163P		AP1101/294/L14		PLUG-E11				156-157, 166-199, 277-299
	1		W0815	007	20		23-25-11	156-157, 166-199, 277-299
	2		W0815	006	20		23-25-11	156-157, 166-199, 277-299
	3		W0815	005	20		23-25-11	156-157, 166-199, 277-299

HOOKUP LIST

D280T132

91-21-51

Section D06100

Page 53

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06163P		AP1101/294/L14		PLUG-E11 (continued)				156-157, 166-199, 277-299
	4		W0815	FRA			23-25-11	156-157, 166-199, 277-299
	5		W0815	201R	24		23-25-11	156-157, 166-199, 277-299
	6		W0815	201B	24		23-25-11	156-157, 166-199, 277-299
	7		W0815	202R	24		23-25-11	156-157, 166-199, 277-299
	8		W0815	202B	24		23-25-11	156-157, 166-199, 277-299
	9		W0815	FRB			23-25-11	156-157, 166-199, 277-299
	10	UNUSED						156-157, 166-199, 277-299
	11	UNUSED						156-157, 166-199, 277-299
	12	UNUSED						156-157, 166-199, 277-299
	13	UNUSED						156-157, 166-199, 277-299
	14	UNUSED						156-157, 166-199, 277-299
	15	UNUSED						156-157, 166-199, 277-299
	16	UNUSED						156-157, 166-199, 277-299
	17	UNUSED						156-157, 166-199, 277-299
	18	UNUSED						156-157, 166-199, 277-299
	19	UNUSED						156-157, 166-199, 277-299
	20	UNUSED						156-157, 166-199, 277-299
	21	UNUSED						156-157, 166-199, 277-299
	22	UNUSED						156-157, 166-199, 277-299
	23	UNUSED						156-157, 166-199, 277-299
	24	UNUSED						156-157, 166-199, 277-299
	REF		W0815	201	20		23-25-11	156-157, 166-199, 277-299
	REF		W0815	201Z			23-25-11	156-157, 166-199, 277-299
	REF		W0815	202	20		23-25-11	156-157, 166-199, 277-299
	REF		W0815	202Z			23-25-11	156-157, 166-199, 277-299
	REF		W0815	FRA			23-25-11	156-157, 166-199, 277-299
	REF		W0815	FRB			23-25-11	156-157, 166-199, 277-299
D06164J		AE0222/ /		RCPT-P6-5				ALL
	1	UNUSED						ALL
	2		W0148	019	22		33-16-12	ALL
	3		W0148	020	22		33-16-12	ALL
	4		W0148	023	22		33-16-12	ALL
	5	UNUSED						ALL
	6		W0148	030	22		33-16-12	ALL
	7		W0148	031	22		33-16-12	ALL
	8		W0148	032	22		33-16-12	ALL
	9	UNUSED						ALL
	10		W0148	049	22		33-16-22	ALL
	11	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D06100
Page 54
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06164J		AE0222/ /		RCPT-P6-5 (continued)				ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15		W0148	014	24		33-16-11	ALL
	16		W0148	063	24		33-16-11	ALL
	17		W0148	039	22		33-16-17	ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20		W0148	048	22		33-16-21	ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30		W0148	007	24		33-16-11	ALL
	31	UNUSED						ALL
D06164P		AE0222/ /		PLUG-P6				ALL
	1	UNUSED						ALL
	2		W0632	112	22		33-16-12	ALL
	3		W0632	113	22		33-16-12	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W0632	116	22		33-16-12	ALL
	7		W0632	117	22		33-16-12	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10		W0632	120	22		33-16-22	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15		W0632	125	24		33-16-11	ALL
	16		W0632	126	24		33-16-11	ALL
	17		W0632	127	22		33-16-17	ALL
	18	UNUSED						ALL

HOOKUP LIST
D280T132



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06164P		AE0222/ /		PLUG-P6 (continued)				ALL
	19	UNUSED						ALL
	20		W0632	130	22		33-16-21	ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30		W0632	140	24		33-16-11	ALL
	31	UNUSED						ALL
D06165J		//		RECP-E9-1 (C MTO 230591-1)				150, 153-155, 162-165
D06165J		1197/180/R080		RECEPT				152
D06165J		1197+132/180/R80		RCPT-E9-1				156-157, 166-199, 277-299
	1		W1417	919Z			23-32-21	150, 152-199
	1		W0809	201R	24		23-25-16	156-157, 166-199, 277-299
	2		W1417	919R	22		23-32-21	150, 152-199
	2		W0809	201B	24		23-25-16	156-157, 166-199, 277-299
	3		W1417	919B	22		23-32-21	150, 152-199
	3		W0809	201Z			23-25-16	156-157, 166-199, 277-299
	4		W1417	920R	22		23-32-21	150, 152-199
	4		W0809	202R	24		23-25-16	156-157, 166-199, 277-299
	5		W1417	920B	22		23-32-21	150, 152-199
	5		W0809	202B	24		23-25-16	156-157, 166-199, 277-299
	6		W1417	920Z			23-32-21	150, 152-199
	6		W0809	202Z			23-25-16	156-157, 166-199, 277-299
	7		W1417	921	20		23-32-21	150, 152-199
	7		W0809	203R	24		23-25-16	156-157, 166-199, 277-299
	8		W1417	922	20		23-32-21	150, 152-199
	8		W0809	203B	24		23-25-16	156-157, 166-199, 277-299
	9		W1417	923	20		23-32-21	150, 152-199
	9		W0809	203Z			23-25-16	156-157, 166-199, 277-299
	10		W9019	206R	22		23-25-16	150, 153-155, 162-165
	10	UNUSED						152
	10		W0809	301Y	24		23-25-16	156-157, 166-199, 277-299
	11	UNUSED						150, 152-155, 162-165
	11		W0809	301R	24		23-25-16	156-157, 166-199, 277-299

HOOKUP LIST

D280T132

91-21-51

Section D06100

Page 56

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06165J		//		RECP-E9-1 (C MTO 230591-1) (continued)				150, 153-155, 162-165
D06165J		1197/180/R080		RECEPT (continued)				152
D06165J		1197+132/180/R80		RCPT-E9-1 (continued)				156-157, 166-199, 277-299
	12	UNUSED						150, 152-155, 162-165
	12		W0809	301B	24		23-25-16	156-157, 166-199, 277-299
	13	UNUSED						150, 152-155, 162-165
	13		W0809	002	20		23-25-16	156-157, 166-199, 277-299
	14		W9019	003	20		23-25-16	150, 153-155, 162-165
	14	UNUSED						152
	14		W0809	003	20		23-25-16	156-157, 166-199, 277-299
	15	UNUSED						150, 152-155, 162-165
	15		W0809	204R	24		23-25-16	156-157, 166-199, 277-299
	16	UNUSED						150, 152-155, 162-165
	16		W0809	204B	24		23-25-16	156-157, 166-199, 277-299
	17		W9019	205R	22		23-25-16	150, 153-155, 162-165
	17	UNUSED						152
	17		W0809	205R	24		23-25-16	156-157, 166-199, 277-299
	18		W9019	205B	22		23-25-16	150, 153-155, 162-165
	18	UNUSED						152
	18		W0809	205B	24		23-25-16	156-157, 166-199, 277-299
	19		W9019	205Z			23-25-16	150, 153-155, 162-165
	19	UNUSED						152
	19		W0809	205Z			23-25-16	156-157, 166-199, 277-299
	20	UNUSED						150, 152-155, 162-165
	20		W0809	206R	24		23-25-16	156-157, 166-199, 277-299
	21		W9019	206B	22		23-25-16	150, 153-155, 162-165
	21	UNUSED						152
	21		W0809	206B	24		23-25-16	156-157, 166-199, 277-299
	22		W9019	206Z			23-25-16	150, 153-155, 162-165
	22	UNUSED						152
	22		W0809	206Z			23-25-16	156-157, 166-199, 277-299
	23		W9019	210B	22		23-25-17	150, 153-155, 162-165
	23	UNUSED						152
	23		W0809	210B	24		23-25-17	156-157, 166-199, 277-299
	24		W9019	210R	22		23-25-17	150, 153-155, 162-165
	24	UNUSED						152
	24		W0809	210R	24		23-25-17	156-157, 166-199, 277-299
	25		W9019	211R	22		23-25-17	150, 153-155, 162-165
	25	UNUSED						152
	25		W0809	211R	24		23-25-17	156-157, 166-199, 277-299
	26		W9019	211B	22		23-25-17	150, 153-155, 162-165

HOOKUP LIST

D280T132

91-21-51

Section D06100

Page 57

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06165J		//		RECP-E9-1 (C MTO 230591-1) (continued)				150, 153-155, 162-165
D06165J		1197/180/R080		RECEPT (continued)				152
D06165J		1197+132/180/R80		RCPT-E9-1 (continued)				156-157, 166-199, 277-299
	26	UNUSED						152
	26	UNUSED	W0809	211B	24		23-25-17	156-157, 166-199, 277-299
	27	UNUSED						150, 152-155, 162-165
	27	UNUSED	W0809	212R	24		23-25-16	156-157, 166-199, 277-299
	28	UNUSED						150, 152-155, 162-165
	28	UNUSED	W0809	212B	24		23-25-16	156-157, 166-199, 277-299
	29	UNUSED						150, 152-155, 162-165
	29	UNUSED	W0809	212Z			23-25-16	156-157, 166-199, 277-299
	30	UNUSED						150, 152-155, 162-165
	30	UNUSED	W0809	213R	24		23-25-16	156-157, 166-199, 277-299
	31	UNUSED						150, 152-155, 162-165
	31	UNUSED	W0809	213B	24		23-25-16	156-157, 166-199, 277-299
	32	UNUSED						150, 152-155, 162-165
	32	UNUSED	W0809	213Z			23-25-16	156-157, 166-199, 277-299
	33	UNUSED						150, 152-155, 162-165
	33	UNUSED	W0809	214R	20		23-25-16	156-157, 166-199, 277-299
	34	UNUSED						150, 152-155, 162-165
	34	UNUSED	W0809	214B	20		23-25-16	156-157, 166-199, 277-299
	35	UNUSED						150, 152-155, 162-165
	35	UNUSED	W0809	215R	20		23-25-16	156-157, 166-199, 277-299
	36	UNUSED						150, 152-155, 162-165
	36	UNUSED	W0809	215B	20		23-25-16	156-157, 166-199, 277-299
	37	UNUSED						150, 152-199, 277-299
	38	UNUSED						150, 152-199, 277-299
	39	UNUSED	W9015	215R	22		23-25-13	150, 153-199
	39	UNUSED						152, 277-299
	40	UNUSED	W9015	215B	22		23-25-13	150, 153-199
	40	UNUSED						152, 277-299
	41	UNUSED	W9015	215Z			23-25-13	150, 153-199
	41	UNUSED						152, 277-299
	42	UNUSED						150, 152-155, 162-165
	43	UNUSED						150, 152-155, 162-165
	44	UNUSED						150, 152-155, 162-165
	45	UNUSED						150, 152-155, 162-165
	46	UNUSED						150, 152-155, 162-165
	47	UNUSED						150, 152-155, 162-165
	48	UNUSED						150, 152-155, 162-165
	49	UNUSED						150, 152-155, 162-165

HOOKUP LIST

D280T132

91-21-51

Section D06100

Page 58

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06165J		//		RECP-E9-1 (C MTO 230591-1) (continued)				150, 153-155, 162-165
D06165J		1197/180/R080		RECEPT (continued)				152
D06165J		1197+132/180/R80		RCPT-E9-1 (continued)				156-157, 166-199, 277-299
	50	UNUSED						150, 152-155, 162-165
	51	UNUSED						150, 152-155, 162-165
	52	UNUSED						150, 152-155, 162-165
	53	UNUSED						150, 152-155, 162-165
	54	UNUSED						150, 152-155, 162-165
	= C27	UNUSED						150, 152-155, 162-165
D06165P		1197/180/R080		PLUG-E9-1 (C MTO 230591-1)				150, 153-155, 162-165
D06165P		1197/180/R080		PLUG				152
D06165P		AC1102/ /		PLUG-E9-1				156-157, 166-199, 277-299
	1		W9026	900Z			23-32-21	150, 152-199
	1		W0091	244R	24		23-25-16	167-199
	1	UNUSED						277-299
	2		W9026	900R	22		23-32-21	150, 152-199
	2		W0091	244B	24		23-25-16	167-199
	2	UNUSED						277-299
	3		W9026	900B	22		23-32-21	150, 152-199
	3		W0091	244Z			23-25-16	167-199
	3	UNUSED						277-299
	4		W9026	952R	22		23-32-21	150, 152-199
	4		W0091	245R	24		23-25-16	167-199
	4	UNUSED						277-299
	5		W9026	952B	22		23-32-21	150, 152-199
	5		W0091	245B	24		23-25-16	167-199
	5	UNUSED						277-299
	6		W9026	952Z			23-32-21	150, 152-199
	6		W0091	245Z			23-25-16	167-199
	6	UNUSED						277-299
	7		W9026	942	22		23-32-21	150, 152-199
	7	UNUSED						277-299
	8		W9026	903	22		23-32-21	150, 152-199
	8	UNUSED						277-299
	9		W9026	943	22		23-32-21	150, 152-199
	9	UNUSED						277-299
	10	UNUSED						150, 152-166, 277-299
	10		W0091	301Y	24		23-25-16	167-199
	11	UNUSED						150, 152-166, 277-299
	11		W0091	301R	24		23-25-16	167-199

HOOKUP LIST

D280T132

91-21-51

Section D06100

Page 59

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06165P		1197/180/R080		PLUG-E9-1 (C MTO 230591-1) (continued)				150, 153-155, 162-165
D06165P		1197/180/R080		PLUG (continued)				152
D06165P		AC1102/ /		PLUG-E9-1 (continued)				156-157, 166-199, 277-299
	12	UNUSED						150, 152-166, 277-299
	12		W0091	301B	24		23-25-16	167-199
	13	UNUSED						150, 152-155, 162-165
	13		W0091	021	20		23-25-16	156-157, 166-199, 277-299
	14		W9026	022	20		23-25-16	150, 153-155, 162-165
	14	UNUSED						152
	14		W0091	022	20		23-25-16	156-157, 166-199, 277-299
	15	UNUSED						150, 152-166, 277-299
	15		W0091	247R	24		23-25-16	167-199
	16	UNUSED						150, 152-166, 277-299
	16		W0091	247B	24		23-25-16	167-199
	16		W9026	216R	24		23-25-16	150, 153-155, 162-165
	17	UNUSED						152
	17		W0091	216R	24		23-25-16	156-157, 166-199, 277-299
	18		W9026	216B	24		23-25-16	150, 153-155, 162-165
	18	UNUSED						152
	18		W0091	216B	24		23-25-16	156-157, 166-199, 277-299
	19		W9026	216Z			23-25-16	150, 153-155, 162-165
	19	UNUSED						152
	19		W0091	216Z			23-25-16	156-157, 166-199, 277-299
	20		W9026	217R	24		23-25-16	150, 153-155, 162-165
	20	UNUSED						152
	20		W0091	217R	24		23-25-16	156-157, 166-199, 277-299
	21		W9026	217B	24		23-25-16	150, 153-155, 162-165
	21	UNUSED						152
	21		W0091	217B	24		23-25-16	156-157, 166-199, 277-299
	22		W9026	217Z			23-25-16	150, 153-155, 162-165
	22	UNUSED						152
	22		W0091	217Z			23-25-16	156-157, 166-199, 277-299
	23		W9026	222B	22		23-25-17	150, 153-155, 162-165
	23	UNUSED						152
	23		W0091	222B	24		23-25-17	156-157, 166-199, 277-299
	24		W9026	222R	22		23-25-17	150, 153-155, 162-165
	24	UNUSED						152
	24		W0091	222R	24		23-25-17	156-157, 166-199, 277-299
	25		W9026	224R	22		23-25-17	150, 153-155, 162-165
	25	UNUSED						152
	25		W0091	224R	24		23-25-17	156-157, 166-199, 277-299

HOOKUP LIST

D280T132

91-21-51

Section D06100

Page 60

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06165P		1197/180/R080		PLUG-E9-1 (C MTO 230591-1) (continued)				150, 153-155, 162-165
D06165P		1197/180/R080		PLUG (continued)				152
D06165P		AC1102/ /		PLUG-E9-1 (continued)				156-157, 166-199, 277-299
	26		W9026	224B	22		23-25-17	150, 153-155, 162-165
	26	UNUSED						152
	26		W0091	224B	24		23-25-17	156-157, 166-199, 277-299
	27	UNUSED						150, 152-199, 277-299
	28	UNUSED						150, 152-199, 277-299
	29	UNUSED						150, 152-199, 277-299
	30	UNUSED						150, 152-199, 277-299
	31	UNUSED						150, 152-199, 277-299
	32	UNUSED						150, 152-199, 277-299
	33	UNUSED						150, 152-166, 277-299
	33		W0091	246R	22		23-25-16	167-199
	34	UNUSED						150, 152-166, 277-299
	34		W0091	246B	22		23-25-16	167-199
	35	UNUSED						150, 152-199, 277-299
	36	UNUSED						150, 152-199, 277-299
	37	UNUSED						150, 152-199, 277-299
	38	UNUSED						150, 152-199, 277-299
	39		W9026	904R	22		23-25-13	150, 153-155, 162-165
	39	UNUSED						152, 277-299
	39		W0091	904R	22		23-25-13	156-157, 166-199
	40		W9026	904B	22		23-25-13	150, 153-155, 162-165
	40	UNUSED						152, 277-299
	40		W0091	904B	22		23-25-13	156-157, 166-199
	41		W9026	904Z			23-25-13	150, 153-155, 162-165
	41	UNUSED						152, 277-299
	41		W0091	904Z			23-25-13	156-157, 166-199
	42	UNUSED						150, 152-155, 162-165
	43	UNUSED						150, 152-155, 162-165
	44	UNUSED						150, 152-155, 162-165
	45	UNUSED						150, 152-155, 162-165
	46	UNUSED						150, 152-155, 162-165
	47	UNUSED						150, 152-155, 162-165
	48	UNUSED						150, 152-155, 162-165
	49	UNUSED						150, 152-155, 162-165
	50	UNUSED						150, 152-155, 162-165
	51	UNUSED						150, 152-155, 162-165
	52	UNUSED						150, 152-155, 162-165
	53	UNUSED						150, 152-155, 162-165

HOOKUP LIST

D280T132

91-21-51

Section D06100

Page 61

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06165P		1197/180/R080		PLUG-E9-1 (C MTO 230591-1) (continued)				150, 153-155, 162-165
D06165P		1197/180/R080		PLUG (continued)				152
D06165P		AC1102/ /		PLUG-E9-1 (continued)				156-157, 166-199, 277-299
	54	UNUSED						150, 152-155, 162-165
	=C27	UNUSED						150, 152-155, 162-165
D06166J		AE0222/ /		RCPT-P6-5				ALL
	1	UNUSED						ALL
	2		W0150	004	22		33-16-12	ALL
	3		W0150	006	22		33-16-12	ALL
	4		W0150	007	22		33-16-12	ALL
	5		W0150	008	22		33-16-12	ALL
	6		W0150	011	22		33-16-12	ALL
	7		W0150	012	22		33-16-12	ALL
	8		W0150	013	22		33-16-12	ALL
	9	UNUSED						ALL
	10		W0150	014	22		33-16-22	ALL
	11		W0150	017	22		33-16-22	ALL
	12	FM	W0150	025	16		33-13-18	ALL
	13	UNUSED						ALL
	14		W0150	026	24		33-13-18	ALL
	15	UNUSED						ALL
	16	FM	W0150	024	16		33-13-18	ALL
	17	UNUSED						ALL
	18	UNUSED						050-099, 150-155, 162-165, 275-276
	18	FM	W0150	037	16		33-13-18	156-157, 166-199, 277-299
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	DED		W0150	008Z			33-16-12	ALL
	DED		W0150	011Z			33-16-12	ALL

HOOKUP LIST

D280T132

91-21-51

Section D06100

Page 62

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06166J		AE0222/ /		RCPT-P6-5 (continued)				ALL
	DED		W0150	012Z			33-16-12	ALL
	DED		W0150	013Z			33-16-12	ALL
	DED		W0150	014Z			33-16-22	ALL
	DED		W0150	017Z			33-16-22	ALL
D06166P		AE0222/ /		PLUG-P6				ALL
	1	UNUSED						ALL
	2		W0632	152	22		33-16-12	ALL
	3		W0632	153	22		33-16-12	ALL
	4		W0632	154	22		33-16-12	ALL
	5		W0632	155	22		33-16-12	ALL
	6		W0632	156	22		33-16-12	ALL
	7		W0632	157	22		33-16-12	ALL
	8		W0632	158	22		33-16-12	ALL
	9	UNUSED						ALL
	10		W0632	160	22		33-16-22	ALL
	11		W0632	161	22		33-16-22	ALL
	12	FL	W0632	172	16		33-13-18	ALL
	13	UNUSED						ALL
	14		W0632	168	24		33-13-18	ALL
	15	UNUSED						ALL
	16	FL	W0632	166	16		33-13-18	ALL
	17	UNUSED						ALL
	18	UNUSED						050-099, 150-155, 162-165, 275-276
	18	FL	W0632	137	16		33-13-18	156-157, 166-199, 277-299
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	DED		W0632	152Z			33-16-12	ALL
	DED		W0632	153Z			33-16-12	ALL

HOOKUP LIST

D280T132

91-21-51

Section D06100

Page 63

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06166P		AE0222/ /		PLUG-P6 (continued)				ALL
	DED		W0632	154Z			33-16-12	ALL
	DED		W0632	155Z			33-16-12	ALL
	DED		W0632	156Z			33-16-12	ALL
	DED		W0632	157Z			33-16-12	ALL
	DED		W0632	158Z			33-16-12	ALL
	DED		W0632	160Z			33-16-22	ALL
	DED		W0632	161Z			33-16-22	ALL
D06167J		AP1001-1/070/L14		RCPT-E10				150, 153-199, 277-299
	1		W9020	201B	22		23-25-16	150, 153-155, 162-165
	1		W1003	201B	24		23-25-16	156-157, 166-199, 277-299
	2		W9020	201R	22		23-25-16	150, 153-155, 162-165
	2		W1003	201R	24		23-25-16	156-157, 166-199, 277-299
	3		W9020	201Z			23-25-16	150, 153-155, 162-165
	3		W1003	201Z			23-25-16	156-157, 166-199, 277-299
	4		W9020	202B	22		23-25-16	150, 153-155, 162-165
	4		W1003	202B	24		23-25-16	156-157, 166-199, 277-299
	5		W9020	202R	22		23-25-16	150, 153-155, 162-165
	5		W1003	202R	24		23-25-16	156-157, 166-199, 277-299
	6		W9020	202Z			23-25-16	150, 153-155, 162-165
	6		W1003	202Z			23-25-16	156-157, 166-199, 277-299
	7	UNUSED						150, 153-155, 162-165
	7		W1003	203B	24		23-25-16	156-157, 166-199, 277-299
	8	UNUSED						150, 153-155, 162-165
	8		W1003	203R	24		23-25-16	156-157, 166-199, 277-299
	9		W9020	005	20		23-25-16	150, 153-155, 162-165
	9		W1003	005	20		23-25-16	156-157, 166-199, 277-299
	10		W9020	006	20		23-25-16	150, 153-155, 162-165
	10		W1003	006	20		23-25-16	156-157, 166-199, 277-299
	11		W9020	007	20		23-25-16	150, 153-155, 162-165
	11		W1003	007	20		23-25-16	156-157, 166-199, 277-299
	12		W9020	901B	22		23-25-17	150, 153-155, 162-165
	12		W1003	901B	22		23-25-17	156-157, 166-199
	12	UNUSED						277-299
	13		W9020	901R	22		23-25-17	150, 153-155, 162-165
	13		W1003	901R	22		23-25-17	156-157, 166-199
	13	UNUSED						277-299
	14		W9020	902R	22		23-25-17	150, 153-155, 162-165
	14		W1003	902R	22		23-25-17	156-157, 166-199
	14	UNUSED						277-299

HOOKUP LIST

D280T132

91-21-51

Section D06100

Page 64

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06167J		AP1001-1/070/L14		RCPT-E10 (continued)				150, 153-199, 277-299
	15		W9020	902B	22		23-25-17	150, 153-155, 162-165
	15		W1003	902B	22		23-25-17	156-157, 166-199
	15	UNUSED						277-299
	16	UNUSED						150, 153-199, 277-299
	17	UNUSED						150, 153-199, 277-299
	18	UNUSED						150, 153-199, 277-299
	19	UNUSED						150, 153-199, 277-299
	20	UNUSED						150, 153-199, 277-299
	21	UNUSED						150, 153-199, 277-299
	22	UNUSED						150, 153-199, 277-299
	23	UNUSED						150, 153-199, 277-299
	24	UNUSED						150, 153-199, 277-299
D06167P		1070/294/L014		PLUG-E10				150, 153-155, 162-165
D06167P		1070/294/L14		PLUG-E10				156-157, 166-199, 277-299
	1		W9019	206B	22		23-25-16	150, 153-155, 162-165
	1		W0809	206B	24		23-25-16	156-157, 166-199, 277-299
	2		W9019	206R	22		23-25-16	150, 153-155, 162-165
	2		W0809	206R	24		23-25-16	156-157, 166-199, 277-299
	3		W9019	FRF			23-25-16	150, 153-155, 162-165
	3		W0809	FRF			23-25-16	156-157, 166-199, 277-299
	4		W9019	205B	22		23-25-16	150, 153-155, 162-165
	4		W0809	205B	24		23-25-16	156-157, 166-199, 277-299
	5		W9019	205R	22		23-25-16	150, 153-155, 162-165
	5		W0809	205R	24		23-25-16	156-157, 166-199, 277-299
	6		W9019	FRE			23-25-16	150, 153-155, 162-165
	6		W0809	FRE			23-25-16	156-157, 166-199, 277-299
	7	UNUSED						150, 153-155, 162-165
	7		W0809	204B	24		23-25-16	156-157, 166-199, 277-299
	8	UNUSED						150, 153-155, 162-165
	8		W0809	204R	24		23-25-16	156-157, 166-199, 277-299
	9		W9019	003	20		23-25-16	150, 153-155, 162-165
	9		W0809	003	20		23-25-16	156-157, 166-199, 277-299
	10		W9019	004	20		23-25-16	150, 153-155, 162-165
	10		W0809	004	20		23-25-16	156-157, 166-199, 277-299
	11		W9019	005	20		23-25-16	150, 153-155, 162-165
	11		W0809	005	20		23-25-16	156-157, 166-199, 277-299
	12		W9019	210B	22		23-25-17	150, 153-155, 162-165
	12		W0809	210B	24		23-25-17	156-157, 166-199, 277-299
	13		W9019	210R	22		23-25-17	150, 153-155, 162-165

HOOKUP LIST

D280T132

91-21-51

Section D06100

Page 65

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06167P		1070/294/L014		PLUG-E10 (continued)				150, 153-155, 162-165
D06167P		1070/294/L14		PLUG-E10 (continued)				156-157, 166-199, 277-299
	13		W0809	210R	24		23-25-17	156-157, 166-199, 277-299
	14		W9019	211R	22		23-25-17	150, 153-155, 162-165
	14		W0809	211R	24		23-25-17	156-157, 166-199, 277-299
	15		W9019	211B	22		23-25-17	150, 153-155, 162-165
	15		W0809	211B	24		23-25-17	156-157, 166-199, 277-299
	16	UNUSED						150, 153-199, 277-299
	17	UNUSED						150, 153-199, 277-299
	18	UNUSED						150, 153-199, 277-299
	19	UNUSED						150, 153-199, 277-299
	20	UNUSED						150, 153-199, 277-299
	21	UNUSED						150, 153-199, 277-299
	22	UNUSED						150, 153-199, 277-299
	23	UNUSED						150, 153-199, 277-299
	24	UNUSED						150, 153-199, 277-299
	REF		W9019	205	20		23-25-16	150, 153-155, 162-165
	REF		W9019	205Z			23-25-16	150, 153-155, 162-165
	REF		W9019	206	20		23-25-16	150, 153-155, 162-165
	REF		W9019	206Z			23-25-16	150, 153-155, 162-165
	REF		W9019	FRE			23-25-16	150, 153-155, 162-165
	REF		W9019	FRF			23-25-16	150, 153-155, 162-165
	REF		W0809	205	20		23-25-16	156-157, 166-199, 277-299
	REF		W0809	205Z			23-25-16	156-157, 166-199, 277-299
	REF		W0809	206	20		23-25-16	156-157, 166-199, 277-299
	REF		W0809	206Z			23-25-16	156-157, 166-199, 277-299
	REF		W0809	FRE			23-25-16	156-157, 166-199, 277-299
	REF		W0809	FRF			23-25-16	156-157, 166-199, 277-299
D06168J		AE0222/ /		RCPT-P6-5				ALL
	1		W0156	005	24		33-11-11	ALL
	2		W0156	008	24		33-11-11	ALL
	3		W0156	201B	24		33-11-11	ALL
	4		W0156	201R	24		33-11-11	ALL
	5		W0156	301B	24		33-11-11	ALL
	6		W0156	301R	24		33-11-11	ALL
	7		W0156	301Y	24		33-11-11	ALL
	8		W0156	FRA			33-11-11	ALL
	9		W0156	187	22		34-12-61	ALL
	10		W0156	077	22		33-16-22	ALL
	11		W0156	078	22		33-16-22	ALL

HOOKUP LIST

D280T132

91-21-51

Section D06100

Page 66

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06168J		AE0222/ /		RCPT-P6-5 (continued)				ALL
	12		W0156	079	22		33-16-22	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15		W0156	031	24		33-16-11	ALL
	16		W0156	032	24		33-16-11	ALL
	17		W0156	063	22		33-16-17	ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20		W0156	076	22		33-16-21	ALL
	21		W0156	046	22		33-16-12	ALL
	22		W0156	047	22		33-16-12	ALL
	23		W0156	049	22		33-16-12	ALL
	24		W0156	050	22		33-16-12	ALL
	25		W0156	051	22		33-16-12	ALL
	26		W0156	052	22		33-16-12	ALL
	27		W0156	054	22		33-16-12	ALL
	28		W0156	057	22		33-16-12	ALL
	29	UNUSED						ALL
	30		W0156	038	24		33-16-11	ALL
	31		W0156	039	24		33-16-11	ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	FM	W0156	174	16		33-13-18	ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	DED		W0156	077Z			33-16-22	ALL
			W0156	201Z			33-11-11	ALL
			W0156	301Z			33-11-11	ALL
			W0156	FRA			33-11-11	ALL
D06168P		AE0222/ /		PLUG-P6				ALL
	1		W0634	041	24		33-11-11	ALL
	2		W0634	042	24		33-11-11	ALL
	3		W0634	201B	24		33-11-11	ALL
	4		W0634	201R	24		33-11-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D06100

Page 67

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06168P		AE0222/ /		PLUG-P6 (continued)				ALL
	5		W0634	301B	24		33-11-11	ALL
	6		W0634	301R	24		33-11-11	ALL
	7		W0634	301Y	24		33-11-11	ALL
	8		W0634	FRC			33-11-11	ALL
	9		W0634	050	22		34-12-61	ALL
	10		W0634	120	22		33-16-22	ALL
	11		W0634	121	22		33-16-22	ALL
	12		W0634	122	22		33-16-22	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15		W0634	125	24		33-16-11	ALL
	16		W0634	126	24		33-16-11	ALL
	17		W0634	127	22		33-16-17	ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20		W0634	130	22		33-16-21	ALL
	21		W0634	131	22		33-16-12	ALL
	22		W0634	142	22		33-16-12	ALL
	23		W0634	133	22		33-16-12	ALL
	24		W0634	134	22		33-16-12	ALL
	25		W0634	145	22		33-16-12	ALL
	26		W0634	136	22		33-16-12	ALL
	27		W0634	137	22		33-16-12	ALL
	28		W0634	138	22		33-16-12	ALL
	29	UNUSED						ALL
	30		W0634	140	24		33-16-11	ALL
	31		W0634	141	24		33-16-11	ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	FL	W0634	188	16		33-13-18	ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
			W0634	201Z			33-11-11	ALL
			W0634	301Z			33-11-11	ALL
			W0634	FRC			33-11-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D06100

Page 68

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06169J		1040/310/L015		PLUG				156-157, 166, 277-299
D06169J		1040/310/L015		RECP				167-199
	1		W0809	201R	24		23-25-16	156-157, 166-199, 277-299
	2		W0809	201B	24		23-25-16	156-157, 166-199, 277-299
	3		W0809	FRA			23-25-16	156-157, 166-199, 277-299
	4		W0809	202R	24		23-25-16	156-157, 166-199, 277-299
	5		W0809	202B	24		23-25-16	156-157, 166-199, 277-299
	6		W0809	FRB			23-25-16	156-157, 166-199, 277-299
	7		W0809	203R	24		23-25-16	156-157, 166-199, 277-299
	8		W0809	203B	24		23-25-16	156-157, 166-199, 277-299
	9		W0809	FRC			23-25-16	156-157, 166-199, 277-299
	10		W0809	006	20		23-25-16	156-157, 166-199, 277-299
	11		W0809	212R	24		23-25-16	156-157, 166-199, 277-299
	12		W0809	212B	24		23-25-16	156-157, 166-199, 277-299
	13		W0809	FRL			23-25-16	156-157, 166-199, 277-299
	14		W0809	213R	24		23-25-16	156-157, 166-199, 277-299
	15		W0809	213B	24		23-25-16	156-157, 166-199, 277-299
	16		W0809	FRM			23-25-16	156-157, 166-199, 277-299
	17		W0809	214R	20		23-25-16	156-157, 166-199, 277-299
	18		W0809	214B	20		23-25-16	156-157, 166-199, 277-299
	19		W0809	215R	20		23-25-16	156-157, 166-199, 277-299
	20		W0809	215B	20		23-25-16	156-157, 166-199, 277-299
	21	UNUSED						156-157, 166-199, 277-299
	22	UNUSED						156-157, 166-199, 277-299
	23	UNUSED						156-157, 166-199, 277-299
	24	UNUSED						156-157, 166-199, 277-299
	REF		W0809	201	20		23-25-16	156-157, 166-199, 277-299
	REF		W0809	201Z			23-25-16	156-157, 166-199, 277-299
	REF		W0809	202	20		23-25-16	156-157, 166-199, 277-299
	REF		W0809	202Z			23-25-16	156-157, 166-199, 277-299
	REF		W0809	203	20		23-25-16	156-157, 166-199, 277-299
	REF		W0809	203Z			23-25-16	156-157, 166-199, 277-299
	REF		W0809	212	20		23-25-16	156-157, 166-199, 277-299
	REF		W0809	212Z			23-25-16	156-157, 166-199, 277-299
	REF		W0809	213	20		23-25-16	156-157, 166-199, 277-299
	REF		W0809	213Z			23-25-16	156-157, 166-199, 277-299
	REF		W0809	FRA			23-25-16	156-157, 166-199, 277-299
	REF		W0809	FRB			23-25-16	156-157, 166-199, 277-299
	REF		W0809	FRC			23-25-16	156-157, 166-199, 277-299
	REF		W0809	FRL			23-25-16	156-157, 166-199, 277-299
	REF		W0809	FRM			23-25-16	156-157, 166-199, 277-299

HOOKUP LIST

D280T132

91-21-51

Section D06100

Page 69

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06170J		AE0222/ /		RCPT-P6-5				ALL
	1		W0158	004	24		33-11-11	ALL
	2		W0158	007	24		33-11-11	ALL
	3		W0158	201B	24		33-11-11	ALL
	4		W0158	201R	24		33-11-11	ALL
	5		W0158	301B	24		33-11-11	ALL
	6		W0158	301R	24		33-11-11	ALL
	7		W0158	301Y	24		33-11-11	ALL
	8		W0158	FRA			33-11-11	ALL
	9	UNUSED						ALL
	10		W0158	022	22		33-16-22	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21		W0158	012	22		33-16-12	ALL
	22		W0158	013	22		33-16-12	ALL
	23		W0158	014	22		33-16-12	ALL
	24		W0158	015	22		33-16-12	ALL
	25		W0158	016	22		33-16-12	ALL
	26		W0158	017	22		33-16-12	ALL
	27		W0158	018	22		33-16-12	ALL
	28		W0158	105	22		33-16-12	ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	DED		W0158	014Z			33-16-12	ALL
	DED		W0158	015Z			33-16-12	ALL
	DED		W0158	016Z			33-16-12	ALL
	DED		W0158	017Z			33-16-12	ALL
	DED		W0158	018Z			33-16-12	ALL
	DED		W0158	022Z			33-16-22	ALL
	DED		W0158	105Z			33-16-12	ALL
			W0158	201Z			33-11-11	ALL
			W0158	301Z			33-11-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D06100

Page 70

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06170J		AE0222/ /		RCPT-P6-5 (continued)				ALL
			W0158	FRA			33-11-11	ALL
D06170P		AE0222/ /		PLUG-P6				ALL
	1		W0634	043	24		33-11-11	ALL
	2		W0634	044	24		33-11-11	ALL
	3		W0634	202B	24		33-11-11	ALL
	4		W0634	202R	24		33-11-11	ALL
	5		W0634	302B	24		33-11-11	ALL
	6		W0634	302R	24		33-11-11	ALL
	7		W0634	302Y	24		33-11-11	ALL
	8		W0634	FRD			33-11-11	ALL
	9	UNUSED						ALL
	10		W0634	160	22		33-16-22	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21		W0634	171	22		33-16-12	ALL
	22		W0634	172	22		33-16-12	ALL
	23		W0634	173	22		33-16-12	ALL
	24		W0634	174	22		33-16-12	ALL
	25		W0634	175	22		33-16-12	ALL
	26		W0634	176	22		33-16-12	ALL
	27		W0634	177	22		33-16-12	ALL
	28		W0634	178	22		33-16-12	ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	DED		W0634	160Z			33-16-22	ALL
	DED		W0634	171Z			33-16-12	ALL
	DED		W0634	172Z			33-16-12	ALL
	DED		W0634	173Z			33-16-12	ALL
	DED		W0634	174Z			33-16-12	ALL
	DED		W0634	175Z			33-16-12	ALL

HOOKUP LIST

D280T132

91-21-51

Section D06100

Page 71

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06170P		AE0222/ /		PLUG-P6 (continued)				ALL
	DED		W0634	176Z			33-16-12	ALL
	DED		W0634	177Z			33-16-12	ALL
	DED		W0634	178Z			33-16-12	ALL
			W0634	202Z			33-11-11	ALL
			W0634	302Z			33-11-11	ALL
			W0634	FRD			33-11-11	ALL
D06171J		AC1102/ /		RCPT-E9-1				150, 153-199, 277-299
	1		W9035	201R	22		23-25-17	150, 153-155, 162-165
	1		W0811	201R	24		23-25-17	156-157, 166-199, 277-299
	2		W9035	201B	22		23-25-17	150, 153-155, 162-165
	2		W0811	201B	24		23-25-17	156-157, 166-199, 277-299
	3		W9035	202R	22		23-25-17	150, 153-155, 162-165
	3		W0811	202R	24		23-25-17	156-157, 166-199, 277-299
	4		W9035	202B	22		23-25-17	150, 153-155, 162-165
	4		W0811	202B	24		23-25-17	156-157, 166-199, 277-299
	5		W9035	202Z			23-25-17	150, 153-155, 162-165
	5		W0811	202Z			23-25-17	156-157, 166-199, 277-299
	6		W9035	203R	22		23-25-17	150, 153-155, 162-165
	6		W0811	203R	24		23-25-17	156-157, 166-199, 277-299
	7		W9035	203B	22		23-25-17	150, 153-155, 162-165
	7		W0811	203B	24		23-25-17	156-157, 166-199, 277-299
	8		W9035	203Z			23-25-17	150, 153-155, 162-165
	8		W0811	203Z			23-25-17	156-157, 166-199, 277-299
	9		W9035	204R	22		23-25-17	150, 153-155, 162-165
	9		W0811	204R	24		23-25-17	156-157, 166-199, 277-299
	10		W9035	204B	22		23-25-17	150, 153-155, 162-165
	10		W0811	204B	24		23-25-17	156-157, 166-199, 277-299
	11		W9035	204Z			23-25-17	150, 153-155, 162-165
	11		W0811	204Z			23-25-17	156-157, 166-199, 277-299
	12		W9035	206R	22		23-25-17	150, 153-155, 162-165
	12		W0811	206R	24		23-25-17	156-157, 166-199, 277-299
	13		W9035	206B	22		23-25-17	150, 153-155, 162-165
	13		W0811	206B	24		23-25-17	156-157, 166-199, 277-299
	14		W9035	001	20		23-25-17	150, 153-155, 162-165
	14		W0811	001	20		23-25-17	156-157, 166-199, 277-299
	15		W9031	002	20		23-25-17	150, 153-155, 162-165
	15		W0811	002	20		23-25-17	156-157, 166-199, 277-299
	16	UNUSED						150, 153-199, 277-299
	17	UNUSED						150, 153-199, 277-299

HOOKUP LIST

D280T132

91-21-51

Section D06100

Page 72

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06171J		AC1102/ /		RCPT-E9-1 (continued)				150, 153-199, 277-299
	18	UNUSED						150, 153-199, 277-299
	19	UNUSED						150, 153-199, 277-299
	20	UNUSED						150, 153-199, 277-299
	21	UNUSED						150, 153-199, 277-299
	22	UNUSED						150, 153-199, 277-299
	23	UNUSED						150, 153-199, 277-299
	24	UNUSED						150, 153-199, 277-299
D06171P		AC1102/ /		PLUG-E9-1				150, 153-199, 277-299
	1		W9026	218R	22		23-25-17	150, 153-155, 162-165
	1		W0091	218R	24		23-25-17	156-157, 166-199, 277-299
	2		W9026	218B	22		23-25-17	150, 153-155, 162-165
	2		W0091	218B	24		23-25-17	156-157, 166-199, 277-299
	3		W9026	219R	22		23-25-17	150, 153-155, 162-165
	3		W0091	219R	24		23-25-17	156-157, 166-199, 277-299
	4		W9026	219B	22		23-25-17	150, 153-155, 162-165
	4		W0091	219B	24		23-25-17	156-157, 166-199, 277-299
	5		W9026	219Z			23-25-17	150, 153-155, 162-165
	5		W0091	219Z			23-25-17	156-157, 166-199, 277-299
	6		W9026	220R	22		23-25-17	150, 153-155, 162-165
	6		W0091	220R	24		23-25-17	156-157, 166-199, 277-299
	7		W9026	220B	22		23-25-17	150, 153-155, 162-165
	7		W0091	220B	24		23-25-17	156-157, 166-199, 277-299
	8		W9026	220Z			23-25-17	150, 153-155, 162-165
	8		W0091	220Z			23-25-17	156-157, 166-199, 277-299
	9		W9026	221R	22		23-25-17	150, 153-155, 162-165
	9		W0091	221R	24		23-25-17	156-157, 166-199, 277-299
	10		W9026	221B	22		23-25-17	150, 153-155, 162-165
	10		W0091	221B	24		23-25-17	156-157, 166-199, 277-299
	11		W9026	221Z			23-25-17	150, 153-155, 162-165
	11		W0091	221Z			23-25-17	156-157, 166-199, 277-299
	12		W9026	222R	22		23-25-17	150, 153-155, 162-165
	12		W0091	222R	24		23-25-17	156-157, 166-199, 277-299
	13		W9026	222B	22		23-25-17	150, 153-155, 162-165
	13		W0091	222B	24		23-25-17	156-157, 166-199, 277-299
	14		W9026	051	20		23-25-17	150, 153-155, 162-165
	14		W0091	051	20		23-25-17	156-157, 166-199, 277-299
	15		W9026	052	20		23-25-17	150, 153-155, 162-165
	15		W0091	052	20		23-25-17	156-157, 166-199, 277-299
	16	UNUSED						150, 153-199, 277-299

HOOKUP LIST

D280T132

91-21-51

Section D06100

Page 73

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06171P		AC1102/ /		PLUG-E9-1 (continued)				150, 153-199, 277-299
	17	UNUSED						150, 153-199, 277-299
	18	UNUSED						150, 153-199, 277-299
	19	UNUSED						150, 153-199, 277-299
	20	UNUSED						150, 153-199, 277-299
	21	UNUSED						150, 153-199, 277-299
	22	UNUSED						150, 153-199, 277-299
	23	UNUSED						150, 153-199, 277-299
	24	UNUSED						150, 153-199, 277-299
D06172J		AF0232/ /		RCPT-P6-5				ALL
	1	UNUSED						ALL
	2		W0152	013	22		33-16-12	ALL
	3		W0152	014	22		33-16-12	ALL
	4	UNUSED						ALL
	5		W0152	018	22		33-16-12	ALL
	6		W0152	019	22		33-16-12	ALL
	7		W0152	020	22		33-16-12	ALL
	8		W0152	059	22		34-12-62	ALL
	9	UNUSED						ALL
	10		W0152	034	22		33-16-22	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17		W0152	024	22		33-16-17	ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20		W0152	031	22		33-16-21	ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30		W0152	006	24		33-16-11	ALL

HOOKUP LIST
D280T132

91-21-51
Section D06100
Page 74
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06172J		AF0232/ /		RCPT-P6-5 (continued)				ALL
	31	UNUSED						ALL
D06172P		AF0232/ /		PLUG-P6				ALL
	1	UNUSED						ALL
	2		W0638	112	22		33-16-12	ALL
	3		W0638	113	22		33-16-12	ALL
	4	UNUSED						ALL
	5		W0638	115	22		33-16-12	ALL
	6		W0638	116	22		33-16-12	ALL
	7	UNUSED						ALL
	8		W0638	049	22		34-12-62	ALL
	9	UNUSED						ALL
	10		W0638	120	22		33-16-22	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17		W0638	127	22		33-16-17	ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20		W0638	130	22		33-16-21	ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30		W0638	140	24		33-16-11	ALL
	31	UNUSED						ALL
D06173J		AC1102/ /		RCPT-E9-1				150, 153-199, 277-299
D06173J		AC1102/ /		REPT-E9-1				152
	1		W9032	001	20		23-25-17	150, 153-155, 162-165
	1	UNUSED						152
	1		W0813	001	20		23-25-17	156-157, 166-199, 277-299

HOOKUP LIST
D280T132

91-21-51
Section D06100
Page 75
Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06173J		AC1102/ /		RCPT-E9-1 (continued)				150, 153-199, 277-299
D06173J		AC1102/ /		REPT-E9-1 (continued)				152
	2		W9024	201B	22		23-25-17	150, 153-155, 162-165
	2	UNUSED						152
	2		W0813	201B	24		23-25-17	156-157, 166-199, 277-299
	3		W9024	201R	22		23-25-17	150, 153-155, 162-165
	3	UNUSED						152
	3		W0813	201R	24		23-25-17	156-157, 166-199, 277-299
	4		W9024	002	20		23-25-17	150, 153-155, 162-165
	4	UNUSED						152
	4		W0813	002	20		23-25-17	156-157, 166-199, 277-299
	5		W9024	202B	22		23-25-17	150, 153-155, 162-165
	5	UNUSED						152
	5		W0813	202B	24		23-25-17	156-157, 166-199, 277-299
	6		W9024	202R	22		23-25-17	150, 153-155, 162-165
	6	UNUSED						152
	6		W0813	202R	24		23-25-17	156-157, 166-199, 277-299
	7		W9024	202Z			23-25-17	150, 153-155, 162-165
	7	UNUSED						152
	7		W0813	202Z			23-25-17	156-157, 166-199, 277-299
	8		W9024	203B	22		23-25-17	150, 153-155, 162-165
	8	UNUSED						152
	8		W0813	203B	24		23-25-17	156-157, 166-199, 277-299
	9		W9024	203R	22		23-25-17	150, 153-155, 162-165
	9	UNUSED						152
	9		W0813	203R	24		23-25-17	156-157, 166-199, 277-299
	10		W9024	203Z			23-25-17	150, 153-155, 162-165
	10	UNUSED						152
	10		W0813	203Z			23-25-17	156-157, 166-199, 277-299
	11		W9024	204B	22		23-25-17	150, 153-155, 162-165
	11	UNUSED						152
	11		W0813	204B	24		23-25-17	156-157, 166-199, 277-299
	12		W9024	204R	22		23-25-17	150, 153-155, 162-165
	12	UNUSED						152
	12		W0813	204R	24		23-25-17	156-157, 166-199, 277-299
	13		W9024	204Z			23-25-17	150, 153-155, 162-165
	13	UNUSED						152
	13		W0813	204Z			23-25-17	156-157, 166-199, 277-299
	14		W9024	205B	22		23-25-17	150, 153-155, 162-165
	14	UNUSED						152
	14		W0813	205B	24		23-25-17	156-157, 166-199, 277-299

HOOKUP LIST

D280T132

91-21-51

Section D06100

Page 76

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06173J		AC1102/ /		RCPT-E9-1 (continued)				150, 153-199, 277-299
D06173J		AC1102/ /		REPT-E9-1 (continued)				152
	15		W9024	205R	22		23-25-17	150, 153-155, 162-165
	15	UNUSED						152
	15		W0813	205R	24		23-25-17	156-157, 166-199, 277-299
	16	UNUSED						150, 152-199, 277-299
	17	UNUSED						150, 152-199, 277-299
	18	UNUSED						150, 152-199, 277-299
	19		W9034	205R	26		23-25-14	150, 152-199
	19	UNUSED						277-299
	20		W9034	205B	26		23-25-14	150, 152-199
	20	UNUSED						277-299
	21		W9034	205Z			23-25-14	150, 152-199
	21	UNUSED						277-299
	22		W9034	205G	26		23-25-14	150, 152-199
	22	UNUSED						277-299
	23		W9034	205Y	26		23-25-14	150, 152-199
	23	UNUSED						277-299
	24		W9034	206Z			23-25-14	150, 152-199
	24	UNUSED						277-299
	25	UNUSED						152
	26	UNUSED						152
	27	UNUSED						152
	28	UNUSED						152
	29	UNUSED						152
	30	UNUSED						152
	31	UNUSED						152
	32	UNUSED						152
	33	UNUSED						152
	34	UNUSED						152
	35	UNUSED						152
	36	UNUSED						152
	37	UNUSED						152
	38	UNUSED						152
	39	UNUSED						152
	40	UNUSED						152
	41	UNUSED						152
	42	UNUSED						152
	43	UNUSED						152
	44	UNUSED						152
	45	UNUSED						152

HOOKUP LIST

D280T132

91-21-51

Section D06100

Page 77

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06173J		AC1102/ /		RCPT-E9-1 (continued)				150, 153-199, 277-299
D06173J		AC1102/ /		REPT-E9-1 (continued)				152
	46	UNUSED						152
	47	UNUSED						152
	48	UNUSED						152
	49	UNUSED						152
	50	UNUSED						152
	51	UNUSED						152
	52	UNUSED						152
	53	UNUSED						152
	54	UNUSED						152
	= C27	UNUSED						152
	= CC	D	W9034	YAA			23-25-14	150, 152-199
D06173P		AC1102/ /		PLUG-E9-1				150, 153-199, 277-299
	1		W9026	024	20		23-25-17	150, 153-155, 162-165
	1		W0091	024	20		23-25-17	156-157, 166-199, 277-299
	2		W9026	224B	22		23-25-17	150, 153-155, 162-165
	2		W0091	224B	24		23-25-17	156-157, 166-199, 277-299
	3		W9026	224R	22		23-25-17	150, 153-155, 162-165
	3		W0091	224R	24		23-25-17	156-157, 166-199, 277-299
	4		W9026	025	20		23-25-17	150, 153-155, 162-165
	4		W0091	025	20		23-25-17	156-157, 166-199, 277-299
	5		W9026	225B	22		23-25-17	150, 153-155, 162-165
	5		W0091	225B	24		23-25-17	156-157, 166-199, 277-299
	6		W9026	225R	22		23-25-17	150, 153-155, 162-165
	6		W0091	225R	24		23-25-17	156-157, 166-199, 277-299
	7		W9026	225Z			23-25-17	150, 153-155, 162-165
	7		W0091	225Z			23-25-17	156-157, 166-199, 277-299
	8		W9026	226B	22		23-25-17	150, 153-155, 162-165
	8		W0091	226B	24		23-25-17	156-157, 166-199, 277-299
	9		W9026	226R	22		23-25-17	150, 153-155, 162-165
	9		W0091	226R	24		23-25-17	156-157, 166-199, 277-299
	10		W9026	226Z			23-25-17	150, 153-155, 162-165
	10		W0091	226Z			23-25-17	156-157, 166-199, 277-299
	11		W9026	227B	22		23-25-17	150, 153-155, 162-165
	11		W0091	227B	24		23-25-17	156-157, 166-199, 277-299
	12		W9026	227R	22		23-25-17	150, 153-155, 162-165
	12		W0091	227R	24		23-25-17	156-157, 166-199, 277-299
	13		W9026	227Z			23-25-17	150, 153-155, 162-165
	13		W0091	227Z			23-25-17	156-157, 166-199, 277-299

HOOKUP LIST

D280T132

91-21-51

Section D06100

Page 78

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06173P		AC1102/ /		PLUG-E9-1 (continued)				150, 153-199, 277-299
	14		W9026	228B	22		23-25-17	150, 153-155, 162-165
	14		W0091	228B	24		23-25-17	156-157, 166-199, 277-299
	15		W9026	228R	22		23-25-17	150, 153-155, 162-165
	15		W0091	228R	24		23-25-17	156-157, 166-199, 277-299
	16	UNUSED						150, 153-199, 277-299
	17	UNUSED						150, 153-199, 277-299
	18	UNUSED						150, 153-199, 277-299
	19		W9026	908R	22		23-25-14	150, 153-155, 162-165
	19		W0091	908R	22		23-25-14	156-157, 166-199
	19	UNUSED						277-299
	20		W9026	908B	22		23-25-14	150, 153-155, 162-165
	20		W0091	908B	22		23-25-14	156-157, 166-199
	20	UNUSED						277-299
	21		W9026	908Z			23-25-14	150, 153-155, 162-165
	21		W0091	908Z			23-25-14	156-157, 166-199
	21	UNUSED						277-299
	22		W9026	909R	22		23-25-14	150, 153-155, 162-165
	22		W0091	909R	22		23-25-14	156-157, 166-199
	22	UNUSED						277-299
	23		W9026	909B	22		23-25-14	150, 153-155, 162-165
	23		W0091	909B	22		23-25-14	156-157, 166-199
	23	UNUSED						277-299
	24		W9026	909Z			23-25-14	150, 153-155, 162-165
	24		W0091	909Z			23-25-14	156-157, 166-199
	24	UNUSED						277-299
D06174J		AF0232/ /		RCPT-P6-5				ALL
	1		W0154	003	22		33-16-12	ALL
	2		W0154	006	22		33-16-12	ALL
	3		W0154	007	22		33-16-12	ALL
	4		W0154	008	22		33-16-12	ALL
	5		W0154	009	22		33-16-12	ALL
	6		W0154	010	22		33-16-12	ALL
	7		W0154	012	22		33-16-12	050-099, 155-199, 280-299
	7		W0154	013	22		33-16-12	150-154, 275-278
	8	UNUSED						050-099, 155-199, 280-299
	8		W0154	014	22		33-16-12	150-154, 275-278
	9	UNUSED						ALL
	10		W0154	015	22		33-16-22	ALL
	11	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D06100

Page 79

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06174J		AF0232/ /		RCPT-P6-5 (continued)				ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	DED		W0154	008Z			33-16-12	ALL
	DED		W0154	009Z			33-16-12	ALL
	DED		W0154	010Z			33-16-12	ALL
	DED		W0154	012Z			33-16-12	050-099, 155-199, 280-299
	DED		W0154	013Z			33-16-12	150-154, 275-278
	DED		W0154	014Z			33-16-12	150-154, 275-278
D06174P		AF0232/ /		PLUG-P6				ALL
	1		W0638	151	22		33-16-12	ALL
	2		W0638	152	22		33-16-12	ALL
	3	UNUSED						ALL
	4		W0638	154	22		33-16-12	ALL
	5		W0638	155	22		33-16-12	ALL
	6		W0638	156	22		33-16-12	ALL
	7		W0638	157	22		33-16-12	ALL
	8	UNUSED						050-099, 155-199, 280-299
	8		W0638	158	22		33-16-12	150-154, 275-278
	9	UNUSED						ALL
	10		W0638	160	22		33-16-22	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D06100
Page 80
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06174P		AF0232/ /		PLUG-P6 (continued)				ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	DED		W0638	151Z			33-16-12	ALL
	DED		W0638	152Z			33-16-12	ALL
	DED		W0638	154Z			33-16-12	ALL
	DED		W0638	155Z			33-16-12	ALL
	DED		W0638	156Z			33-16-12	ALL
	DED		W0638	157Z			33-16-12	ALL
	DED		W0638	160Z			33-16-22	ALL
	DED		W0638	158Z			33-16-12	150-154, 275-278
D06175J		AC1102/180/R080		JACK				150, 153-199, 277-299
	= A1		W9123	01CX			23-25-12	150, 153-199
	= A1		W1915	01CX			23-25-12	277-299
	= C1		W9123	01CO			23-25-12	150, 153-199
	= C1		W1915	01CO			23-25-12	277-299
D06175P		AC1102/ /		PLUG				150, 153-199, 277-299
	= A1		W1195	01CX			23-25-12	150, 153-199, 277-299
	= C1		W1195	01CO			23-25-12	150, 153-199, 277-299
D06177J		AC1102/ /		RECP				150, 153-199, 277-299
	= A1		W9121	01CX			23-25-12	150, 153-199
	= A1		W1919	01CX			23-25-12	277-299
	= C1		W9121	01CO			23-25-12	150, 153-199
	= C1		W1919	01CO			23-25-12	277-299
D06177P		AC1102/ /		PLUG				150, 153-199, 277-299
	= A1		W1197	01CX			23-25-12	150, 153-199, 277-299
	= C1		W1197	01CO			23-25-12	150, 153-199, 277-299
D06178J		AF0120/ /		RCPT-P3				ALL
	1		W0764	036	22		32-31-11	ALL
	2		W0764	037	22		32-31-11	ALL
	3		W0764	038	24		32-41-11	ALL
	4		W0764	039	24		32-41-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D06100

Page 81

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06178J		AF0120/ /		RCPT-P3 (continued)				ALL
	5		W0764	040	24		32-41-11	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9		W0764	210R	24		73-21-14	ALL
	10		W0764	210B	24		73-21-14	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	DK	W0764	031	18		27-81-21	ALL
	15	DK	W0764	032	18		27-81-21	ALL
	16	DK	W0764	033	18		27-81-21	ALL
	17		W0764	034	20		27-81-21	ALL
	18		W0764	210Z			73-21-14	ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D06178P		AF0120/ /		PLUG				ALL
	1		W0031	619	22		32-31-11	ALL
	2		W0031	620	22		32-31-11	ALL
	3		W0031	623	24		32-41-11	ALL
	4		W0031	624	24		32-41-11	ALL
	5		W0031	625	24		32-41-11	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9		W0031	510R	24		73-21-14	ALL
	10		W0031	510B	24		73-21-14	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	DL	W0031	714	18		27-81-21	ALL
	15	DL	W0031	715	18		27-81-21	ALL
	16	DL	W0031	716	18		27-81-21	ALL
	17		W0031	717	20		27-81-21	ALL
	18		W0031	510Z			73-21-14	ALL

HOOKUP LIST
D280T132

91-21-51
Section D06100
Page 82
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06178P		AF0120/ /		PLUG (continued)				ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D06179J		AP1101/ /		JACK				156-157, 166-199, 277-299
	= A1		W1047	01CX			23-25-11	156-157, 166-199, 277-299
	= C1		W1047	01CO			23-25-11	156-157, 166-199, 277-299
D06179P		AP1101/ /		PLUG				277-299
	= A1		W1913	01CX			23-25-11	277-299
	= C1		W1913	01CO			23-25-11	277-299
D06180J		AF0120/ /		RCPT-P1				ALL
	1		W0766	065	24		32-42-12	ALL
	2		W0766	066	24		32-42-12	ALL
	3		W0766	067	24		32-42-12	ALL
	4		W0766	068	24		32-42-12	ALL
	5		W0766	069	24		32-42-12	ALL
	6		W0766	070	24		32-42-12	ALL
	7		W0766	071	24		32-42-12	ALL
	8		W0766	072	24		32-42-12	ALL
	9		W0766	073	24		32-42-12	ALL
	10		W0766	074	24		32-42-12	ALL
	11		W0766	075	24		32-42-12	ALL
	12		W0766	076	24		32-42-12	ALL
	13		W0766	077	24		32-42-12	ALL
	14		W0766	078	24		32-42-12	ALL
	15		W0766	064	22		79-33-11	ALL
	16		W0766	050	24		27-51-11	ALL
	17		W0766	051	24		27-51-11	ALL
	18		W0766	052	24		27-51-11	ALL
	19		W0766	053	24		27-51-11	ALL
	20		W0766	054	24		27-51-11	ALL
	21		W0766	055	24		27-51-11	ALL
	22		W0766	056	24		27-51-11	ALL
	23		W0766	057	24		27-51-11	ALL
	24		W0766	058	24		27-51-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D06100

Page 83

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06180J		AF0120/ /		RCPT-P1 (continued)				ALL
	25		W0766	059	24		27-51-11	ALL
	26		W0766	202B	24		73-21-14	ALL
	27		W0766	202R	24		73-21-14	ALL
	28		W0766	023	24		73-21-14	ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31		W0766	202Z			73-21-14	ALL
D06180P		AF0120/ /		PLUG				ALL
	1		W0031	627	24		32-42-12	ALL
	2		W0031	633	24		32-42-12	ALL
	3		W0031	634	24		32-42-12	ALL
	4		W0031	635	24		32-42-12	ALL
	5		W0031	636	24		32-42-12	ALL
	6		W0031	637	24		32-42-12	ALL
	7		W0031	638	24		32-42-12	ALL
	8		W0031	639	24		32-42-12	ALL
	9		W0031	640	24		32-42-12	ALL
	10		W0031	647	24		32-42-12	ALL
	11		W0031	658	24		32-42-12	ALL
	12		W0031	654	24		32-42-12	ALL
	13		W0031	655	24		32-42-12	ALL
	14		W0031	656	24		32-42-12	ALL
	15		W0031	673	22		79-33-11	ALL
	16		W0031	688	24		27-51-11	ALL
	17		W0031	689	24		27-51-11	ALL
	18		W0031	690	24		27-51-11	ALL
	19		W0031	691	24		27-51-11	ALL
	20		W0031	692	24		27-51-11	ALL
	21		W0031	693	24		27-51-11	ALL
	22		W0031	694	24		27-51-11	ALL
	23		W0031	696	24		27-51-11	ALL
	24		W0031	697	24		27-51-11	ALL
	25		W0031	698	24		27-51-11	ALL
	26		W0031	509B	24		73-21-14	ALL
	27		W0031	509R	24		73-21-14	ALL
	28		W0031	672	24		73-21-14	ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31		W0031	509Z			73-21-14	ALL

HOOKUP LIST
D280T132

91-21-51
Section D06100
Page 84
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06181J		AP1101/ /		JACK				156-157, 166-199, 277-299
	= A1		W1045	01CX			23-25-11	156-157, 166-199, 277-299
	= C1		W1045	01CO			23-25-11	156-157, 166-199, 277-299
D06181P		AP1101/ /		PLUG				156-157, 166-199, 277-299
	= A1		W1935	01CX			23-25-11	156-157, 166-199, 277-299
	= C1		W1935	01CO			23-25-11	156-157, 166-199, 277-299
D06182J		AF0120/ /		RCPT-P1				ALL
	1		W0766	079	24		32-61-14	ALL
	2		W0766	080	24		32-61-14	ALL
	3		W0766	102	24		31-31-26	ALL
	4	UNUSED						ALL
	5	DK	W0766	081	18		27-51-11	ALL
	6		W0766	039	22		27-51-11	ALL
	7	DK	W0766	040	18		27-51-11	ALL
	8		W0766	041	20		27-51-11	ALL
	9		W0766	042	24		27-51-11	ALL
	10		W0766	043	24		27-51-11	ALL
	11		W0766	044	24		27-51-11	ALL
	12		W0766	045	24		27-51-11	ALL
	13		W0766	046	24		27-51-11	ALL
	14		W0766	047	24		27-51-11	ALL
	15		W0766	048	24		27-51-11	ALL
	16		W0766	049	24		27-51-11	ALL
	17	DK	W0766	060	18		27-81-11	ALL
	18		W0766	061	22		27-81-11	ALL
	19	DK	W0766	062	18		27-81-11	ALL
	20		W0766	063	22		27-81-11	ALL
	21	UNUSED						ALL
	22		W0766	801	24		32-61-14	ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	DED		W0766	079Z			32-61-14	ALL
D06182P		AF0120/ /		PLUG				ALL
	1		W0031	665	24		32-61-14	ALL
	2		W0031	666	24		32-61-14	ALL
	3		W0031	746	24		31-31-26	ALL
	4	UNUSED						ALL
	5	DL	W0031	674	18		27-51-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D06100

Page 85

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06182P		AF0120/ /		PLUG (continued)				ALL
	6		W0031	675	22		27-51-11	ALL
	7	DL	W0031	676	18		27-51-11	ALL
	8		W0031	677	20		27-51-11	ALL
	9		W0031	679	24		27-51-11	ALL
	10		W0031	680	24		27-51-11	ALL
	11		W0031	681	24		27-51-11	ALL
	12		W0031	682	24		27-51-11	ALL
	13		W0031	683	24		27-51-11	ALL
	14		W0031	684	24		27-51-11	ALL
	15		W0031	685	24		27-51-11	ALL
	16		W0031	686	24		27-51-11	ALL
	17	DL	W0031	710	18		27-81-11	ALL
	18		W0031	711	22		27-81-11	ALL
	19	DL	W0031	712	18		27-81-11	ALL
	20		W0031	713	22		27-81-11	ALL
	21	UNUSED						ALL
	22		W0031	796	24		32-61-14	ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	DED		W0031	665Z			32-61-14	ALL
D06183J		AP1001/ /		JACK				150, 153-199, 277-299
	= A1		W9126	01CX			23-25-17	150, 153-155, 162-165
	= A1		W1043	01CX			23-25-17	156-157, 166-199
	= A1		W1043	01CX			23-25-16	277-299
	= C1		W9126	01CO			23-25-17	150, 153-155, 162-165
	= C1		W1043	01CO			23-25-17	156-157, 166-199
	= C1		W1043	01CO			23-25-16	277-299
D06183P		AP1001/294/L014		PLUG				150, 153-199
D06183P		AP1001/294/L14		PLUG				277-299
	= A1		W9119	01CX			23-25-17	150, 153-199
	= A1		W1927	01CX			23-25-16	277-299
	= C1		W9119	01CO			23-25-17	150, 153-199
	= C1		W1927	01CO			23-25-16	277-299
D06184J		AF0120/ /		RCPT-P1				ALL
	1	DK	W0744	055	18		32-35-11	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D06100
Page 86
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06184J		AF0120/ /		RCPT-P1 (continued)				ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11		W0744	210B	24		73-21-14	ALL
	12		W0744	210R	24		73-21-14	ALL
	13		W0744	210Z			73-21-14	ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
D06184P		AF0120/ /		PLUG-				ALL
	1	DL	W0011	723	18		32-35-11	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D06100
Page 87
Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06184P		AF0120/ /		PLUG- (continued)				ALL
	11		W0011	510B	24		73-21-14	ALL
	12		W0011	510R	24		73-21-14	ALL
	13		W0011	510Z			73-21-14	ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
D06185P		1081/294/L14		PLUG				277-299
	= A1		W1933	01CX			23-25-17	277-299
	= C1		W1933	01CO			23-25-17	277-299
D06186J		AF0120/ /		RCPT-P1				ALL
	1		W0746	058	22		32-46-11	ALL
	2		W0746	059	24		32-61-14	ALL
	3		W0746	060	24		32-61-14	ALL
	4		W0746	061	24		32-61-14	ALL
	5		W0746	062	24		32-61-14	ALL
	6		W0746	063	24		32-61-14	ALL
	7	UNUSED						050-099
	7		W0746	064	22		SPARE	150-199, 275-299
	8	UNUSED						ALL
	9	UNUSED						ALL
	10		W0746	057	22		79-33-11	ALL
	11		W0746	054	24		27-51-11	ALL
	12		W0746	053	24		27-58-11	ALL

HOOKUP LIST
D280T132

91-21-51
Section D06100
Page 88
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06186J		AF0120/ /		RCPT-P1 (continued)				ALL
	13		W0746	052	24		27-58-11	ALL
	14		W0746	051	24		27-58-11	ALL
	15		W0746	050	24		27-58-11	ALL
	16		W0746	049	24		27-58-11	ALL
	17		W0746	048	24		27-58-11	ALL
	18		W0746	055	22		27-58-31	ALL
	19		W0746	056	22		27-88-11	ALL
	20		W0746	010	24		73-21-14	ALL
	21		W0746	201B	24		73-21-14	ALL
	22		W0746	201R	24		73-21-14	ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25		W0746	201Z			73-21-14	ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						050-099
	32		W0746	074	22		32-71-11	150-199, 275-299
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D06100

Page 89

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06186J		AF0120/ /		RCPT-P1 (continued)				ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
D06186P		AF0120/ /		PLUG-				ALL
	1		W0011	728	22		32-46-11	ALL
	2		W0011	729	24		32-61-14	ALL
	3		W0011	730	24		32-61-14	ALL
	4		W0011	731	24		32-61-14	ALL
	5		W0011	732	24		32-61-14	ALL
	6		W0011	733	24		32-61-14	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10		W0011	739	22		79-33-11	ALL
	11		W0011	741	24		27-51-11	ALL
	12		W0011	742	24		27-58-11	ALL
	13		W0011	743	24		27-58-11	ALL
	14		W0011	744	24		27-58-11	ALL
	15		W0011	745	24		27-58-11	ALL
	16		W0011	747	24		27-58-11	ALL
	17		W0011	749	24		27-58-11	ALL
	18		W0011	751	22		27-58-31	ALL
	19		W0011	752	22		27-88-11	ALL
	20		W0011	738	24		73-21-14	ALL
	21		W0011	509B	24		73-21-14	ALL
	22		W0011	509R	24		73-21-14	ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25		W0011	509Z			73-21-14	ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						050-099
	32		W0011	662	24		32-71-11	150-199, 275-299
	33	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D06100
Page 90
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06186P		AF0120/ /		PLUG- (continued)				ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
D06187J		AP1001/ /		JACK				150, 153-199, 277-299
	= A1		W9120	01CX			23-25-12	150, 153-155, 162-165
	= A1		W1199	01CX			23-25-12	156-157, 166-199, 277-299
	= C1		W9120	01CO			23-25-12	150, 153-155, 162-165
	= C1		W1199	01CO			23-25-12	156-157, 166-199, 277-299
D06187P		AP1001/ /		PLUG				150, 153-199, 277-299
	= A1		W9123	01CX			23-25-12	150, 153-199
	= A1		W1917	01CX			23-25-12	277-299
	= C1		W9123	01CO			23-25-12	150, 153-199
	= C1		W1917	01CO			23-25-12	277-299
D06188J		AP0802E/ /		RCPT				050-099
D06188J		AP0901/ /		RECPT				150-199
D06188J		AP0703/ /		RECPT				275-299
	1	DK	W1236	005	18		33-22-31	ALL
	2	DK	W1236	003	18		33-22-31	ALL

HOOKUP LIST

D280T132

91-21-51

Section D06100

Page 91

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06188J		AP0802E/ /		RCPT (continued)				050-099
D06188J		AP0901/ /		RECPT (continued)				150-199
D06188J		AP0703/ /		RECPT (continued)				275-299
	3	DK	W1236	011	18		33-22-31	ALL
	4	DK	W1236	002	18		33-22-31	ALL
	5	UNUSED						ALL
D06188P		AP0802E/ /		PLUG-				050-099
D06188P		AP0901/ /		PLUG-				150-199
D06188P		AP0703/ /		PLUG-				275-299
	1	DL	W1086	001	18		33-22-31	ALL
	2	DL	W1086	002	18		33-22-31	ALL
	3	DL	W1086	003	18		33-22-31	ALL
	4	DL	W1086	004	18		33-22-31	ALL
	5	UNUSED						ALL
D06191J		500/270/R 73		RECPT REF: BACC45FN20-28S8				050-099
	1		W1597	007	20		23-32-11	050-099
	2		W1597	004	20		23-32-13	050-099
	3		W1597	005	20		23-32-13	050-099
	4		W1597	008	20		23-32-11	050-099
	5		W1597	006	20		23-32-13	050-099
	6		W1597	001	24		23-32-13	050-099
	7		W1597	002	24		23-32-13	050-099
	8		W1597	003	24		23-32-13	050-099
	9	UNUSED						050-099
	10	UNUSED						050-099
	11	UNUSED						050-099
	12	UNUSED						050-099
	13	UNUSED						050-099
	14	UNUSED						050-099
	16	UNUSED						050-099
	17	UNUSED						050-099
	18	UNUSED						050-099
	19	UNUSED						050-099
	20	UNUSED						050-099
	21	UNUSED						050-099
	22	UNUSED						050-099
	23	UNUSED						050-099
	24	UNUSED						050-099
	25	UNUSED						050-099

HOOKUP LIST

D280T132

91-21-51

Section D06100

Page 92

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06191J		500/270/R 73		RECPT REF: BACC45FN20-28S8 (continued)				050-099
	26	UNUSED						050-099
	27	UNUSED						050-099
	28	UNUSED						050-099
	= 15		W1597	01CX			23-32-13	050-099
	C19	UNUSED						050-099
	C23	UNUSED						050-099
	C27	UNUSED						050-099
	= C15		W1597	01CO			23-32-13	050-099
D06192J		AF0232/ /		RCPT-P6				ALL
	1	UNUSED						ALL
	2		W0048	054	12		28-22-12	ALL
	3	UNUSED						ALL
	4		W0048	055	12		28-22-12	ALL
	5	UNUSED						ALL
	6		W0048	056	12		28-22-12	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11		W0048	004	22		30-31-21	ALL
	12	UNUSED						ALL
	13		W0048	006	22		30-31-23	ALL
	14	UNUSED						ALL
	15		W0048	009	22		30-32-21	ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18		W0048	011	22		30-34-21	ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21		W0048	001	22		25-11-21	ALL
	22		W0048	002	22		25-11-21	ALL
	23		W0048	003	22		25-11-21	ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D06100

Page 93

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06192J		AF0232/ /		RCPT-P6 (continued)				ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	DED		W0048	009Z			30-32-21	ALL
D06192P		AF0232/ /		PLUG-P6				ALL
	1	UNUSED						ALL
	2		W0066	67A	12		28-22-12	ALL
	3	UNUSED						ALL
	4		W0066	67B	12		28-22-12	ALL
	5	UNUSED						ALL
	6		W0066	67C	12		28-22-12	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11		W0066	56G	22		30-31-21	ALL
	12	UNUSED						ALL
	13		W0066	56J	22		30-31-23	ALL
	14	UNUSED						ALL
	15		W0066	56L	22		30-32-21	ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18		W0066	56N	22		30-34-21	ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21		W0066	66K	22		25-11-21	ALL
	22		W0066	66L	22		25-11-21	ALL
	23		W0066	66M	22		25-11-21	ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
D06198J		0240/200/L040		RCPT-				ALL
	1		W1306	003	12		32-35-11	ALL

HOOKUP LIST
D280T132

91-21-51
Section D06100
Page 94
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06198J		0240/200/L040		RCPT- (continued)				ALL
	2		W1306	001	18		32-35-11	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
D06198P		0240/200/L040		PLUG-				ALL
	1		W0634	533	12		32-35-11	ALL
	2		W0634	532	18		32-35-11	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
D06199J		AE0314/ /		RCPT-E2-2				157, 167-199, 275-299
	1		W0133	822	24		34-61-27	157, 167-199, 277-299
	1	UNUSED						275-276
	2		W0133	821	24		34-61-17	157, 167-199, 277-299
	2	UNUSED						275-276
	3		W0133	258R	24		34-61-14	157, 167-199, 275-299
	4		W0133	258B	24		34-61-14	157, 167-199, 275-299
	5		W0133	258Z			34-61-14	157, 167-199, 275-299
	6		W0133	833	24		34-61-17	157, 167-199, 275-299
	7		W0133	828	24		34-61-27	157, 167-199, 275-299
	8	UNUSED						157, 167-199, 275-299
	9	UNUSED						157, 167-199, 275-299
	10	UNUSED						157, 167-199, 275-299
	11		W0133	840	24		34-61-27	157, 167-199, 275-299
	12	UNUSED						157, 167-199, 275-299
	13	UNUSED						157, 167-199, 275-299
	14	UNUSED						157, 167-199, 275-299
	15	UNUSED						157, 167-199, 275-299
	16	UNUSED						157, 167-199, 275-299
	17	UNUSED						157, 167-199, 275-299
	18	UNUSED						157, 167-199, 275-299
	19	UNUSED						157, 167-199, 275-299
	20	UNUSED						157, 167-199, 275-299
	21	UNUSED						157, 167-199, 275-299
	22	UNUSED						157, 167-199, 275-299
	23	UNUSED						157, 167-199, 275-299
	24	UNUSED						157, 167-199, 275-299
	25	UNUSED						157, 167-199, 275-299
	26	UNUSED						157, 167-199, 275-299
	27	UNUSED						157, 167-199, 275-299

HOOKUP LIST

D280T132

91-21-51

Section D06100

Page 95

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06199J		AE0314/ /		RCPT-E2-2 (continued)				157, 167-199, 275-299
	28	UNUSED						157, 167-199, 275-299
	29	UNUSED						157, 167-199, 275-299
	30	UNUSED						157, 167-199, 275-299
	31	UNUSED						157, 167-199, 275-299
	32	UNUSED						157, 167-199, 275-299
	33	UNUSED						157, 167-199, 275-299
	34	UNUSED						157, 167-199, 275-299
	35	UNUSED						157, 167-199, 275-299
	36	UNUSED						157, 167-199, 275-299
	37	UNUSED						157, 167-199, 275-299
	38	UNUSED						157, 167-199, 275-299
	39	UNUSED						157, 167-199, 275-299
	40	UNUSED						157, 167-199, 275-299
	41	UNUSED						157, 167-199, 275-299
	42	UNUSED						157, 167-199, 275-299
	43	UNUSED						157, 167-199, 275-299
	44	UNUSED						157, 167-199, 275-299
	45	UNUSED						157, 167-199, 275-299
	46	UNUSED						157, 167-199, 275-299
	47	UNUSED						157, 167-199, 275-299
	48	UNUSED						157, 167-199, 275-299
	49	UNUSED						157, 167-199, 275-299
	50	UNUSED						157, 167-199, 275-299
	51	UNUSED						157, 167-199, 275-299
	52	UNUSED						157, 167-199, 275-299
	53	UNUSED						157, 167-199, 275-299
	54	UNUSED						157, 167-199, 275-299
	55	UNUSED						157, 167-199, 275-299
D06199P		AE0314/ /		PLUG-E2-2				157, 167-199, 275-299
	1		W0135	165	24		34-61-27	157, 167-199, 277-299
	1	UNUSED						275-276
	2		W0135	060	24		34-61-17	157, 167-199, 277-299
	2	UNUSED						275-276
	3		W0135	600R	24		34-61-14	157, 167-199, 275-299
	4		W0135	600B	24		34-61-14	157, 167-199, 275-299
	5		W0135	600Z			34-61-14	157, 167-199, 275-299
	6		W0135	682	24		34-61-17	157, 167-199, 275-299
	7		W0135	883	24		34-61-27	157, 167-199, 275-299
	8	UNUSED						157, 167-199, 275-299

HOOKUP LIST
D280T132

91-21-51
Section D06100
Page 96
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06199P		AE0314/ /		PLUG-E2-2 (continued)				157, 167-199, 275-299
	9	UNUSED						157, 167-199, 275-299
	10	UNUSED						157, 167-199, 275-299
	11		W0135	05A	24		34-61-27	157, 167-199, 275-299
	12	UNUSED						157, 167-199, 275-299
	13	UNUSED						157, 167-199, 275-299
	14	UNUSED						157, 167-199, 275-299
	15	UNUSED						157, 167-199, 275-299
	16	UNUSED						157, 167-199, 275-299
	17	UNUSED						157, 167-199, 275-299
	18	UNUSED						157, 167-199, 275-299
	19	UNUSED						157, 167-199, 275-299
	20	UNUSED						157, 167-199, 275-299
	21	UNUSED						157, 167-199, 275-299
	22	UNUSED						157, 167-199, 275-299
	23	UNUSED						157, 167-199, 275-299
	24	UNUSED						157, 167-199, 275-299
	25	UNUSED						157, 167-199, 275-299
	26	UNUSED						157, 167-199, 275-299
	27	UNUSED						157, 167-199, 275-299
	28	UNUSED						157, 167-199, 275-299
	29	UNUSED						157, 167-199, 275-299
	30	UNUSED						157, 167-199, 275-299
	31	UNUSED						157, 167-199, 275-299
	32	UNUSED						157, 167-199, 275-299
	33	UNUSED						157, 167-199, 275-299
	34	UNUSED						157, 167-199, 275-299
	35	UNUSED						157, 167-199, 275-299
	36	UNUSED						157, 167-199, 275-299
	37	UNUSED						157, 167-199, 275-299
	38	UNUSED						157, 167-199, 275-299
	39	UNUSED						157, 167-199, 275-299
	40	UNUSED						157, 167-199, 275-299
	41	UNUSED						157, 167-199, 275-299
	42	UNUSED						157, 167-199, 275-299
	43	UNUSED						157, 167-199, 275-299
	44	UNUSED						157, 167-199, 275-299
	45	UNUSED						157, 167-199, 275-299
	46	UNUSED						157, 167-199, 275-299
	47	UNUSED						157, 167-199, 275-299
	48	UNUSED						157, 167-199, 275-299

HOOKUP LIST

D280T132

91-21-51

Section D06100

Page 97

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06199P		AE0314/ /		PLUG-E2-2 (continued)				157, 167-199, 275-299
	49	UNUSED						157, 167-199, 275-299
	50	UNUSED						157, 167-199, 275-299
	51	UNUSED						157, 167-199, 275-299
	52	UNUSED						157, 167-199, 275-299
	53	UNUSED						157, 167-199, 275-299
	54	UNUSED						157, 167-199, 275-299
	55	UNUSED						157, 167-199, 275-299

HOOKUP LIST

D280T132

91-21-51

Section D06100

Page 98 End

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06200J		AE0219/ /		RCPT-SHELL				ALL
	A01	\$D	W2002	EK01	24		99-99-99	050-099, 150-154, 275-276
	A01	\$D	W2002	EM01	24		SPARE	ALL
	A01	\$D	W2002	EK01	24		SPARE	155-199, 277-299
	A02	\$D	W2002	EK02	24		SPARE	ALL
	A02	\$D	W2002	EM02	24		21-65-11	ALL
	A03	\$D	W2002	EK03	24		21-31-11	ALL
	A03	\$D	W2002	EM03	24		21-31-11	ALL
	A04	\$D	W2002	EK04	24		28-41-13	ALL
	A04	\$D	W2002	EM04	24		28-41-13	ALL
	A05	\$D	W2002	EK05	24		80-11-11	ALL
	A05	\$D	W2002	EM05	24		80-11-11	ALL
	A06	\$D	W2002	EK06	24		80-11-11	ALL
	A06	\$D	W2002	EM06	24		80-11-11	ALL
	A07	\$D	W2002	EK07	24		28-42-12	ALL
	A07	\$D	W2002	EM07	24		28-42-12	ALL
	A08	\$D	W2002	EK08	24		SPARE	ALL
	A08	\$D	W2002	EM08	24		21-65-11	ALL
	A09	\$D	W2002	EK09	24		SPARE	ALL
	A09	\$D	W2002	EM09	24		21-65-11	ALL
	A10	\$D	W2002	EK10	24		SPARE	ALL
	A10	\$D	W2002	EM10	24		21-65-11	ALL
	A11	\$D	W2002	EK11	24		36-11-11	ALL
	A11	\$D	W2002	EM11	24		36-11-11	ALL
	A12	\$D	W2002	EK12	24		21-64-11	ALL
	A12	\$D	W2002	EM12	24		SPARE	ALL
	A13	\$D	W2002	EK13	24		21-64-11	ALL
	A13	\$D	W2002	EM13	24		21-64-11	ALL
	A14	\$D	W2002	EK14	24		21-64-11	ALL
	A14	\$D	W2002	EM14	24		SPARE	ALL
	A15	\$D	W2002	EK15	24		21-33-11	ALL
	A15	\$D	W2002	EM15	24		21-33-11	ALL
	A16	\$D	W2002	EK16	24		74-31-11	ALL
	A16	\$D	W2002	EM16	24		74-31-11	ALL
	A17	\$D	W2002	EK17	24		24-51-42	ALL
	A17	\$D	W2002	EM17	24		24-51-42	ALL
	A18	\$D	W2002	EK18	24		24-11-11	ALL
	A18	\$D	W2002	EM18	24		24-11-11	ALL
	A19	\$D	W2002	EK19	24		SPARE	ALL
	A19	\$D	W2002	EM19	24		SPARE	ALL
	A20	\$D	W2002	EK20	24		99-99-99	050-099, 150-154, 275-276

HOOKUP LIST

D280T132

91-21-51

Section D06200

Page 1

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06200J		AE0219/ /		RCPT-SHELL (continued)				ALL
	A20	\$D	W2002	EM20	24		99-99-99	050-099, 150-154, 275-276
	A20	\$D	W2002	EK20	24		SPARE	155-199, 277-299
	A20	\$D	W2002	EM20	24		SPARE	155-199, 277-299
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04	UNUSED						ALL
	B05	UNUSED						ALL
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13	UNUSED						ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	B16	UNUSED						ALL
	B17	UNUSED						ALL
	B18	UNUSED						ALL
	B19	UNUSED						ALL
	B20	UNUSED						ALL
D06200P		AE0219/ /		PLUG-E8				ALL
	A01	UNUSED						ALL
	A02	\$D	W1700	202R	20		21-65-11	ALL
	A03	\$D	W1700	003	24		21-31-11	ALL
	A04	\$D	W1700	004	24		28-41-13	ALL
	A05	\$D	W1700	005	24		80-11-11	ALL
	A06	\$D	W1700	006	24		80-11-11	ALL
	A07	\$D	W1700	007	24		28-42-12	ALL
	A08	\$D	W1700	202B	20		21-65-11	ALL
	A09	\$D	W1700	201R	20		21-65-11	ALL
	A10	\$D	W1700	201B	20		21-65-11	ALL
	A11	\$D	W1700	011	24		36-11-11	ALL
	A12	\$D	W1700	301B	24		21-64-11	ALL
	A13	\$D	W1700	301R	24		21-64-11	ALL
	A14	\$D	W1700	301Y	24		21-64-11	ALL
	A15	\$D	W1700	015	24		21-33-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D06200

Page 2

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06200P		AE0219/ /		PLUG-E8 (continued)				ALL
	A16	\$D	W1700	016	24		74-31-11	ALL
	A17	\$D	W1700	017	24		24-51-42	ALL
	A18	\$D	W1700	018	24		24-11-11	ALL
	A19	\$D	W1700	019	24		SPARE	ALL
	A20	UNUSED						ALL
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04	UNUSED						ALL
	B05	UNUSED						ALL
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13	UNUSED						ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	B16	UNUSED						ALL
	B17	UNUSED						ALL
	B18	UNUSED						ALL
	B19	UNUSED						ALL
	B20	UNUSED						ALL
	CAP	Y	W1700	019	24		SPARE	ALL
	DED		W1700	005Z			80-11-11	ALL
	DED		W1700	006Z			80-11-11	ALL
D06202J		AE0219/ /		RCPT-SHELL				ALL
	A01	\$D	W2000	GK01	24		99-99-99	ALL
	A01	\$D	W2000	GM01	24		SPARE	ALL
	A02	\$D	W2000	GK02	24		21-25-11	ALL
	A02	\$D	W2000	GM02	24		21-25-11	ALL
	A03	\$D	W2000	GM03	24		27-18-11	050-099, 150-154, 162-165, 275-276
	A03	\$D	W2000	GK03	24		SPARE	ALL
	A03	\$D	W2000	GM03	24		SPARE	155-157, 166-199, 277-299
	A04	\$D	W2000	GK04	24		27-18-11	050-099, 150-154, 162-165, 275-276
	A04	\$D	W2000	GM04	24		27-18-11	050-099, 150-154, 162-165, 275-276
	A04	\$D	W2000	GK04	24		SPARE	155-157, 166-199, 277-299

HOOKUP LIST

D280T132

91-21-51

Section D06200

Page 3

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06202J		AE0219/ /		RCPT-SHELL (continued)				ALL
	A04	\$D	W2000	GM04	24		SPARE	155-157, 166-199, 277-299
	A05	\$D	W2000	GK05	24		27-13-11	ALL
	A05	\$D	W2000	GM05	24		27-13-11	ALL
	A06	\$D	W2000	GK06	24		30-21-11	ALL
	A06	\$D	W2000	GM06	24		30-21-11	ALL
	A07	\$D	W2000	GK07	24		27-18-11	050-099, 150-154, 162-165, 275-276
	A07	\$D	W2000	GM07	24		27-18-11	050-099, 150-154, 162-165, 275-276
	A07	\$D	W2000	GK07	24		SPARE	155-157, 166-199, 277-299
	A07	\$D	W2000	GM07	24		SPARE	155-157, 166-199, 277-299
	A08	\$D	W2000	GM08	24		27-18-11	050-099, 150-156, 162-166, 275-276
	A08	\$D	W2000	GK08	24		SPARE	ALL
	A08	\$D	W2000	GM08	24		SPARE	157, 167-199, 277-299
	A09	\$D	W2000	GK09	24		21-58-16	ALL
	A09	\$D	W2000	GM09	24		21-58-16	ALL
	A10	\$D	W2000	GK10	24		29-31-11	ALL
	A10	\$D	W2000	GM10	24		SPARE	ALL
	A11	\$D	W2000	GK11	24		28-42-11	ALL
	A11	\$D	W2000	GM11	24		28-42-11	ALL
	A12	\$D	W2000	GK12	24		29-31-11	ALL
	A12	\$D	W2000	GM12	24		29-31-11	ALL
	A13	\$D	W2000	GK13	24		24-11-11	ALL
	A13	\$D	W2000	GM13	24		24-11-11	ALL
	A14	\$D	W2000	GK14	24		27-23-11	ALL
	A14	\$D	W2000	GM14	24		27-23-11	ALL
	A15	\$D	W2000	GK15	24		78-36-11	ALL
	A15	\$D	W2000	GM15	24		78-36-11	ALL
	A16	\$D	W2000	GK16	24		30-21-11	ALL
	A16	\$D	W2000	GM16	24		30-21-11	ALL
	A17	\$D	W2000	GK17	24		29-32-11	ALL
	A17	\$D	W2000	GM17	24		SPARE	ALL
	A18	\$D	W2000	GK18	24		29-32-11	ALL
	A18	\$D	W2000	GM18	24		SPARE	ALL
	A19	\$D	W2000	GK19	24		79-35-11	ALL
	A19	\$D	W2000	GM19	24		79-35-11	ALL
	A20	\$D	W2000	GK20	24		99-99-99	ALL
	A20	\$D	W2000	GM20	24		99-99-99	ALL
	B01	\$D	W2000	GL01	24		99-99-99	ALL
	B01	\$D	W2000	GN01	24		SPARE	ALL
	B02	\$D	W2000	GL02	24		73-21-14	ALL
	B02	\$D	W2000	GN02	24		73-21-14	ALL

HOOKUP LIST

D280T132

91-21-51

Section D06200

Page 4

Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06202J		AE0219/ /		RCPT-SHELL (continued)				ALL
	B03	\$D	W2000	GL03	24		73-21-14	ALL
	B03	\$D	W2000	GN03	24		73-21-14	ALL
	B04	\$D	W2000	GL04	24		73-21-14	ALL
	B04	\$D	W2000	GN04	24		SPARE	ALL
	B05	\$D	W2000	GL05	24		75-23-11	ALL
	B05	\$D	W2000	GN05	24		75-23-11	ALL
	B06	\$D	W2000	GL06	24		21-44-22	050-099, 150-199
	B06	\$D	W2000	GN06	24		SPARE	ALL
	B06	\$D	W2000	GL06	24		SPARE	275-299
	B07	\$D	W2000	GL07	24		21-44-22	050-099, 150-199
	B07	\$D	W2000	GN07	24		SPARE	ALL
	B07	\$D	W2000	GL07	24		SPARE	275-299
	B08	\$D	W2000	GL08	24		30-21-11	050-099, 150-199
	B08	\$D	W2000	GN08	24		30-21-11	050-099, 150-199
	B08	\$D	W2000	GL08	24		SPARE	275-299
	B08	\$D	W2000	GN08	24		SPARE	275-299
	B09	\$D	W2000	GL09	24		SPARE	ALL
	B09	\$D	W2000	GN09	24		SPARE	ALL
	B10	\$D	W2000	GL10	24		79-31-11	ALL
	B10	\$D	W2000	GN10	24		79-31-11	ALL
	B11	\$D	W2000	GL11	24		79-31-11	ALL
	B11	\$D	W2000	GN11	24		SPARE	ALL
	B12	\$D	W2000	GL12	24		79-31-11	ALL
	B12	\$D	W2000	GN12	24		SPARE	ALL
	B13	\$D	W2000	GL13	24		32-09-11	ALL
	B13	\$D	W2000	GN13	24		32-09-11	ALL
	B14	\$D	W2000	GL14	24		32-09-11	ALL
	B14	\$D	W2000	GN14	24		32-09-11	ALL
	B15	\$D	W2000	GL15	24		27-28-11	ALL
	B15	\$D	W2000	GN15	24		27-28-11	ALL
	B16	\$D	W2000	GL16	24		27-28-11	ALL
	B16	\$D	W2000	GN16	24		SPARE	ALL
	B17	\$D	W2000	GL17	24		21-43-11	ALL
	B17	\$D	W2000	GN17	24		21-43-11	ALL
	B18	\$D	W2000	GL18	24		21-44-11	ALL
	B18	\$D	W2000	GN18	24		21-44-11	ALL
	B19	\$D	W2000	GL19	24		27-31-11	ALL
	B19	\$D	W2000	GN19	24		27-31-11	ALL
	B20	\$D	W2000	GL20	24		99-99-99	ALL
	B20	\$D	W2000	GN20	24		99-99-99	ALL

HOOKUP LIST

D280T132

91-21-51

Section D06200

Page 5

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06202P		AE0219/ /		PLUG-E8				ALL
	A01	UNUSED						ALL
	A02	\$D	W1702	002	24		21-25-11	ALL
	A03	\$D	W1702	003	24		27-18-11	050-099, 150-154, 162-165, 275-276
	A03	UNUSED						155-157, 166-199, 277-299
	A04	\$D	W1702	004	24		27-18-11	050-099, 150-154, 162-165, 275-276
	A04	UNUSED						155-157, 166-199, 277-299
	A05	\$D	W1702	005	24		27-13-11	ALL
	A06	\$D	W1702	006	24		30-21-11	ALL
	A07	\$D	W1702	007	24		27-18-11	050-099, 150-156, 162-166, 275-276
	A07	\$D	W1702	007	24		SPARE	157, 167-199, 277-299
	A08	\$D	W1702	008	24		27-18-11	050-099, 150-156, 162-166, 275-276
	A08	\$D	W1702	008	24		SPARE	157, 167-199, 277-299
	A09	\$D	W1702	009	24		21-58-16	ALL
	A10	\$D	W1702	205B	24		29-31-11	ALL
	A11	\$D	W1702	011	24		28-42-11	ALL
	A12	\$D	W1702	205R	24		29-31-11	ALL
	A13	\$D	W1702	013	24		24-11-11	ALL
	A14	\$D	W1702	014	24		27-23-11	ALL
	A15	\$D	W1702	015	24		78-36-11	ALL
	A16	\$D	W1702	016	24		30-21-11	ALL
	A17	\$D	W1702	017	24		29-32-11	ALL
	A18	\$D	W1702	018	24		29-32-11	ALL
	A19	\$D	W1702	019	24		79-35-11	ALL
	A20	UNUSED						ALL
	B01	UNUSED						ALL
	B02	\$D	W1702	201B	24		73-21-14	ALL
	B03	\$D	W1702	201R	24		73-21-14	ALL
	B04	\$D	W1702	201Z	24		73-21-14	ALL
	B05	\$D	W1702	025	24		75-23-11	ALL
	B06	\$D	W1702	202B	24		21-44-22	050-099, 150-199
	B06	\$D	W1702	026	24		SPARE	275-299
	B07	\$D	W1702	202R	24		21-44-22	050-099, 150-199
	B07	\$D	W1702	027	24		SPARE	275-299
	B08	\$D	W1702	028	24		30-21-11	050-099, 150-199
	B08	\$D	W1702	203B	24		SPARE	275-299
	B09	UNUSED						050-099
	B09	\$D	W1702	029	24		SPARE	150-199
	B09	\$D	W1702	203R	24		SPARE	275-299
	B10	\$D	W1702	301R	24		79-31-11	ALL
	B11	\$D	W1702	301B	24		79-31-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D06200

Page 6

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06202P		AE0219/ /		PLUG-E8 (continued)				ALL
	B12	\$D	W1702	301Y	24		79-31-11	ALL
	B13	\$D	W1702	033	24		32-09-11	ALL
	B14	\$D	W1702	034	24		32-09-11	ALL
	B15	\$D	W1702	035	24		27-28-11	ALL
	B16	\$D	W1702	036	24		27-28-11	ALL
	B17	\$D	W1702	037	24		21-43-11	ALL
	B18	\$D	W1702	038	24		21-44-11	ALL
	B19	\$D	W1702	039	24		27-31-11	ALL
	B20	UNUSED						ALL
	CAP	Y	W1702	029	24		SPARE	150-199
	CAP	Y	W1702	203B	24		SPARE	275-299
	CAP	Y	W1702	203R	24		SPARE	275-299
D06204J		AE0219/ /		RCPT-SHELL				ALL
	A01	\$D	W2002	FM01	24		99-99-99	050-099, 150-154, 275-276
	A01	\$D	W2002	FK01	24		SPARE	ALL
	A01	\$D	W2002	FM01	24		SPARE	155-199, 277-299
	A02	\$D	W2002	FK02	24		78-36-11	ALL
	A02	\$D	W2002	FM02	24		78-36-11	ALL
	A03	\$D	W2002	FK03	24		27-18-11	050-099, 150-156, 162-166, 275-276
	A03	\$D	W2002	FM03	24		SPARE	ALL
	A03	\$D	W2002	FK03	24		SPARE	157, 167-199, 277-299
	A04	\$D	W2002	FK04	24		27-18-11	050-099, 150-154, 162-165, 275-276
	A04	\$D	W2002	FM04	24		27-18-11	050-099, 150-154, 162-165, 275-276
	A04	\$D	W2002	FK04	24		SPARE	155-157, 166-199, 277-299
	A04	\$D	W2002	FM04	24		SPARE	155-157, 166-199, 277-299
	A05	\$D	W2002	FK05	24		28-42-12	ALL
	A05	\$D	W2002	FM05	24		28-42-12	ALL
	A06	\$D	W2002	FK06	24		27-51-61	ALL
	A06	\$D	W2002	FM06	24		27-51-61	ALL
	A07	\$D	W2002	FK07	24		27-18-11	050-099, 150-156, 162-166, 275-276
	A07	\$D	W2002	FM07	24		SPARE	ALL
	A07	\$D	W2002	FK07	24		SPARE	157, 167-199, 277-299
	A08	\$D	W2002	FK08	24		27-18-11	050-099, 150-154, 162-165, 275-276
	A08	\$D	W2002	FM08	24		27-18-11	050-099, 150-154, 162-165, 275-276
	A08	\$D	W2002	FK08	24		SPARE	155-157, 166-199, 277-299
	A08	\$D	W2002	FM08	24		SPARE	155-157, 166-199, 277-299
	A09	\$D	W2002	FK09	24		30-81-11	050-099, 150-199
	A09	\$D	W2002	FM09	24		30-81-11	050-099, 150-199
	A09	\$D	W2002	FK09	24		SPARE	275-299

HOOKUP LIST

D280T132

91-21-51

Section D06200

Page 7

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06204J		AE0219/ /		RCPT-SHELL (continued)				ALL
	A09	\$D	W2002	FM09	24		SPARE	275-299
	A10	\$D	W2002	FK10	24		30-81-11	050-099, 150-199
	A10	\$D	W2002	FM10	24		30-81-11	050-099, 150-199
	A10	\$D	W2002	FK10	24		SPARE	275-299
	A10	\$D	W2002	FM10	24		SPARE	275-299
	A11	\$D	W2002	FK11	24		28-42-11	ALL
	A11	\$D	W2002	FM11	24		28-42-11	ALL
	A12	\$D	W2002	FK12	24		78-36-21	ALL
	A12	\$D	W2002	FM12	24		78-36-21	ALL
	A13	\$D	W2002	FK13	24		26-18-11	ALL
	A13	\$D	W2002	FM13	24		26-18-11	ALL
	A14	\$D	W2002	FK14	24		26-18-21	ALL
	A14	\$D	W2002	FM14	24		26-18-21	ALL
	A15	\$D	W2002	FK15	24		26-18-31	ALL
	A15	\$D	W2002	FM15	24		26-18-31	ALL
	A16	\$D	W2002	FK16	24		SPARE	ALL
	A16	\$D	W2002	FM16	24		SPARE	ALL
	A17	\$D	W2002	FK17	24		SPARE	ALL
	A17	\$D	W2002	FM17	24		SPARE	ALL
	A18	\$D	W2002	FK18	24		26-18-12	ALL
	A18	\$D	W2002	FM18	24		26-18-12	ALL
	A19	\$D	W2002	FK19	24		28-31-12	050-099, 155-199, 276-299
	A19	\$D	W2002	FM19	24		28-31-12	050-099, 155-199, 276-299
	A19	\$D	W2002	FK19	24		SPARE	150-154, 275
	A19	\$D	W2002	FM19	24		SPARE	150-154, 275
	A20	\$D	W2002	FK20	24		99-99-99	050-099, 150-154, 275-276
	A20	\$D	W2002	FM20	24		99-99-99	050-099, 150-154, 275-276
	A20	\$D	W2002	FK20	24		SPARE	155-199, 277-299
	A20	\$D	W2002	FM20	24		SPARE	155-199, 277-299
	B01	\$D	W2002	FN01	24		99-99-99	050-099, 150-154, 275-276
	B01	\$D	W2002	FL01	24		SPARE	ALL
	B01	\$D	W2002	FN01	24		SPARE	155-199, 277-299
	B02	\$D	W2002	FL02	24		27-62-11	ALL
	B02	\$D	W2002	FN02	24		27-62-11	ALL
	B03	\$D	W2002	FL03	24		30-31-21	ALL
	B03	\$D	W2002	FN03	24		30-31-21	ALL
	B04	\$D	W2002	FL04	24		30-31-21	ALL
	B04	\$D	W2002	FN04	24		30-31-21	ALL
	B05	\$D	W2002	FL05	24		30-31-23	ALL
	B05	\$D	W2002	FN05	24		30-31-23	ALL

HOOKUP LIST

D280T132

91-21-51

Section D06200

Page 8

Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06204J		AE0219/ /		RCPT-SHELL (continued)				ALL
	B06	\$D	W2002	FL06	24		30-31-23	ALL
	B06	\$D	W2002	FN06	24		30-31-23	ALL
	B07	\$D	W2002	FL07	24		30-32-21	ALL
	B07	\$D	W2002	FN07	24		30-32-21	ALL
	B08	\$D	W2002	FL08	24		SPARE	ALL
	B08	\$D	W2002	FN08	24		SPARE	ALL
	B09	\$D	W2002	FL09	24		76-11-11	ALL
	B09	\$D	W2002	FN09	24		76-11-11	ALL
	B10	\$D	W2002	FL10	24		SPARE	ALL
	B10	\$D	W2002	FN10	24		SPARE	ALL
	B11	\$D	W2002	FL11	24		SPARE	ALL
	B11	\$D	W2002	FN11	24		SPARE	ALL
	B12	\$D	W2002	FL12	24		SPARE	ALL
	B12	\$D	W2002	FN12	24		SPARE	ALL
	B13	\$D	W2002	FL13	24		SPARE	ALL
	B13	\$D	W2002	FN13	24		SPARE	ALL
	B14	\$D	W2002	FL14	24		SPARE	ALL
	B14	\$D	W2002	FN14	24		SPARE	ALL
	B15	\$D	W2002	FL15	24		29-11-22	ALL
	B15	\$D	W2002	FN15	24		29-11-22	ALL
	B16	\$D	W2002	FL16	24		29-11-22	ALL
	B16	\$D	W2002	FN16	24		29-11-22	ALL
	B17	\$D	W2002	FL17	24		28-42-13	050-099, 155-199, 276-299
	B17	\$D	W2002	FN17	24		28-42-13	050-099, 155-199, 276-299
	B17	\$D	W2002	FL17	24		SPARE	150-154, 275
	B17	\$D	W2002	FN17	24		SPARE	150-154, 275
	B18	\$D	W2002	FL18	24		SPARE	ALL
	B18	\$D	W2002	FN18	24		SPARE	ALL
	B19	\$D	W2002	FL19	24		SPARE	ALL
	B19	\$D	W2002	FN19	24		SPARE	ALL
	B20	\$D	W2002	FL20	24		99-99-99	050-099, 150-154, 275-276
	B20	\$D	W2002	FN20	24		99-99-99	050-099, 150-154, 275-276
	B20	\$D	W2002	FL20	24		SPARE	155-199, 277-299
	B20	\$D	W2002	FN20	24		SPARE	155-199, 277-299
D06204P		AE0219/ /		PLUG-E8				ALL
	A01	UNUSED						ALL
	A02	\$D	W1704	002	24		78-36-11	ALL
	A03	\$D	W1704	003	24		27-18-11	050-099, 150-156, 162-166, 275-276
	A03	\$D	W1704	003	24		SPARE	157, 167-199, 277-299

HOOKUP LIST

D280T132

91-21-51

Section D06200

Page 9

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06204P		AE0219/ /		PLUG-E8 (continued)				ALL
	A04	\$D	W1704	004	24		27-18-11	050-099, 150-156, 162-166, 275-276
	A04	\$D	W1704	004	24		SPARE	157, 167-199, 277-299
	A05	\$D	W1704	005	24		28-42-12	ALL
	A06	\$D	W1704	006	24		27-51-61	ALL
	A07	\$D	W1704	007	24		27-18-11	050-099, 150-156, 162-166, 275-276
	A07	\$D	W1704	007	24		SPARE	157, 167-199, 277-299
	A08	\$D	W1704	008	24		27-18-11	050-099, 150-156, 162-166, 275-276
	A08	\$D	W1704	008	24		SPARE	157, 167-199, 277-299
	A09	\$D	W1704	009	22		30-81-11	050-099, 150-199
	A09	\$D	W1704	009	24		SPARE	275-299
	A10	\$D	W1704	010	22		30-81-11	050-099, 150-199
	A10	\$D	W1704	010	24		SPARE	275-299
	A11	\$D	W1704	011	24		28-42-11	ALL
	A12	\$D	W1704	012	24		78-36-21	ALL
	A13	\$D	W1704	013R	22		26-18-11	050-099, 275-299
	A13		W1704	013R	22		26-18-11	150-199
	A14	\$D	W1704	014R	22		26-18-21	ALL
	A15	\$D	W1704	015R	22		26-18-31	ALL
	A16	\$D	W1704	016	24		SPARE	050-099
	A16	UNUSED						150-199, 275-299
	A17	\$D	W1704	017	24		SPARE	ALL
	A18	\$D	W1704	018R	22		26-18-12	ALL
	A19	\$D	W1704	019	22		28-31-12	050-099, 155-199, 276-299
	A19	\$D	W1704	019	24		SPARE	150-154, 275
	A20	UNUSED						ALL
	B01	UNUSED						ALL
	B02	\$D	W1704	022	24		27-62-11	ALL
	B03	\$D	W1704	023	24		30-31-21	ALL
	B04	\$D	W1704	024	24		30-31-21	ALL
	B05	\$D	W1704	025	24		30-31-23	ALL
	B06	\$D	W1704	026	24		30-31-23	ALL
	B07	\$D	W1704	027	24		30-32-21	ALL
	B08	UNUSED						050-099
	B08	\$D	W1704	028	24		SPARE	150-199, 275-299
	B09	\$D	W1704	029	24		76-11-11	ALL
	B10	\$D	W1704	030	24		SPARE	ALL
	B11	\$D	W1704	031	24		SPARE	ALL
	B12	\$D	W1704	032	24		SPARE	ALL
	B13	\$D	W1704	033	24		SPARE	ALL
	B14	\$D	W1704	034	24		SPARE	ALL

HOOKUP LIST

D280T132

91-21-51

Section D06200

Page 10

Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06204P		AE0219/ /		PLUG-E8 (continued)				ALL
	B15	\$D	W1704	035	24		29-11-22	ALL
	B16	\$D	W1704	036	24		29-11-22	ALL
	B17	\$D	W1704	037	22		28-42-13	050-099, 155-199, 276-299
	B17	\$D	W1704	037	24		SPARE	150-154, 275
	B18	\$D	W1704	038	24		SPARE	ALL
	B19	\$D	W1704	039	24		SPARE	ALL
	B20	UNUSED						ALL
	CAP	Y	W1704	016	24		SPARE	050-099
	CAP	Y	W1704	017	24		SPARE	ALL
	CAP	Y	W1704	019	24		SPARE	150-154, 275
	CAP	Y	W1704	037	24		SPARE	150-154, 275
	CAP	Y	W1704	028	24		SPARE	275-299
D06206J		AE0219/ /		RCPT-SHELL				ALL
	A01	\$D	W2000	CK01	24		99-99-99	ALL
	A01	\$D	W2000	CM01	24		SPARE	ALL
	A02	\$D	W2000	CK02	24		29-21-32	ALL
	A02	\$D	W2000	CM02	24		29-21-32	ALL
	A03	\$D	W2000	CK03	24		21-31-21	ALL
	A03	\$D	W2000	CM03	24		21-31-21	ALL
	A04	\$D	W2000	CK04	24		24-51-13	ALL
	A04	\$D	W2000	CM04	24		24-51-13	ALL
	A05	\$D	W2000	CK05	24		27-13-11	ALL
	A05	\$D	W2000	CM05	24		27-13-11	ALL
	A06	\$D	W2000	CK06	24		29-11-22	ALL
	A06	\$D	W2000	CM06	24		29-11-22	ALL
	A07	\$D	W2000	CK07	24		29-11-31	ALL
	A07	\$D	W2000	CM07	24		29-11-31	ALL
	A08	\$D	W2000	CK08	24		SPARE	ALL
	A08	\$D	W2000	CM08	24		SPARE	ALL
	A09	\$D	W2000	CK09	24		SPARE	050-099, 275-299
	A09	\$D	W2000	CM09	24		SPARE	050-099, 275-299
	A09	\$D	W2000	CK09	24		73-14-11	150-199
	A09	\$D	W2000	CM09	24		73-14-11	150-199
	A10	\$D	W2000	CK10	24		SPARE	ALL
	A10	\$D	W2000	CM10	24		SPARE	ALL
	A11	\$D	W2000	CK11	24		36-11-31	ALL
	A11	\$D	W2000	CM11	24		36-11-31	ALL
	A12	\$D	W2000	CK12	24		29-32-11	ALL
	A12	\$D	W2000	CM12	24		29-32-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D06200

Page 11

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06206J		AE0219/ /		RCPT-SHELL (continued)				ALL
	A13	\$D	W2000	CK13	24		29-32-11	ALL
	A13	\$D	W2000	CM13	24		29-32-11	ALL
	A14	\$D	W2000	CK14	24		30-21-11	ALL
	A14	\$D	W2000	CM14	24		30-21-11	ALL
	A15	\$D	W2000	CK15	24		SPARE	050-099, 150-199
	A15	\$D	W2000	CM15	24		SPARE	050-099, 150-199
	A15	\$D	W2000	CK15	24		30-21-11	275-299
	A15	\$D	W2000	CM15	24		30-21-11	275-299
	A16	\$D	W2000	CK16	24		SPARE	ALL
	A16	\$D	W2000	CM16	24		SPARE	ALL
	A17	\$D	W2000	CK17	24		SPARE	ALL
	A17	\$D	W2000	CM17	24		SPARE	ALL
	A18	\$D	W2000	CK18	24		SPARE	ALL
	A18	\$D	W2000	CM18	24		SPARE	ALL
	A19	\$D	W2000	CK19	24		28-31-11	050-099, 155-199, 276-299
	A19	\$D	W2000	CM19	24		28-31-11	050-099, 155-199, 276-299
	A19	\$D	W2000	CK19	24		SPARE	150-154, 275
	A19	\$D	W2000	CM19	24		SPARE	150-154, 275
	A20	\$D	W2000	CK20	24		99-99-99	ALL
	A20	\$D	W2000	CM20	24		99-99-99	ALL
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04	UNUSED						ALL
	B05	UNUSED						ALL
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13	UNUSED						ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	B16	UNUSED						ALL
	B17	UNUSED						ALL
	B18	UNUSED						ALL
	B19	UNUSED						ALL
	B20	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D06200

Page 12

Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06206P		AE0219/ /		PLUG-E8				ALL
	A01	UNUSED						ALL
	A02	\$D	W1706	002	24		29-21-32	ALL
	A03	\$D	W1706	003	24		21-31-21	ALL
	A04	\$D	W1706	004	24		24-51-13	ALL
	A05	\$D	W1706	005	24		27-13-11	ALL
	A06	\$D	W1706	006	24		29-11-22	ALL
	A07	\$D	W1706	007	24		29-11-31	ALL
	A08	\$D	W1706	008	24		SPARE	ALL
	A09	UNUSED						050-099
	A09	\$D	W1706	009	24		SPARE	150-199, 275-299
	A10	UNUSED						050-099
	A10	\$D	W1706	010	24		SPARE	150-199, 275-299
	A11	\$D	W1706	011	24		36-11-31	ALL
	A12	\$D	W1706	012	24		29-32-11	ALL
	A13	\$D	W1706	013	24		29-32-11	ALL
	A14	\$D	W1706	014	24		30-21-11	ALL
	A15	\$D	W1706	015	24		SPARE	050-099, 150-199
	A15	\$D	W1706	015	24		30-21-11	275-299
	A16	UNUSED						050-099
	A16	\$D	W1706	016	24		SPARE	150-199, 275-299
	A17	UNUSED						050-099
	A17	\$D	W1706	017	24		SPARE	150-199, 275-299
	A18	UNUSED						050-099
	A18	\$D	W1706	018	24		SPARE	150-199, 275-299
	A19	\$D	W1706	019	22		28-31-11	050-099, 155-199, 276-299
	A19	\$D	W1706	019	24		SPARE	150-154, 275
	A20	UNUSED						ALL
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04	UNUSED						ALL
	B05	UNUSED						ALL
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D06200

Page 13

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06206P		AE0219/ /		PLUG-E8 (continued)				ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	B16	UNUSED						ALL
	B17	UNUSED						ALL
	B18	UNUSED						ALL
	B19	UNUSED						ALL
	B20	UNUSED						ALL
	CAP	Y	W1706	019	24		SPARE	150-154, 275
	CAP	Y	W1706	009	24		SPARE	150-199, 275-299
	CAP	Y	W1706	010	24		SPARE	150-199, 275-299
	CAP	Y	W1706	016	24		SPARE	150-199, 275-299
	CAP	Y	W1706	017	24		SPARE	150-199, 275-299
	CAP	Y	W1706	018	24		SPARE	150-199, 275-299
D06208J		AE0219/ /		RCPT-SHELL				ALL
	A01	\$D	W2000	EK01	24		99-99-99	ALL
	A01	\$D	W2000	EM01	24		SPARE	ALL
	A02	\$D	W2000	EK02	24		27-38-11	ALL
	A02	\$D	W2000	EM02	24		27-38-11	ALL
	A03	\$D	W2000	EK03	24		27-38-11	ALL
	A03	\$D	W2000	EM03	24		SPARE	ALL
	A04	\$D	W2000	EK04	24		27-38-11	ALL
	A04	\$D	W2000	EM04	24		27-38-11	ALL
	A05	\$D	W2000	EK05	24		SPARE	ALL
	A05	\$D	W2000	EM05	24		27-38-11	ALL
	A06	\$D	W2000	EK06	24		28-22-21	ALL
	A06	\$D	W2000	EM06	24		28-22-21	ALL
	A07	\$D	W2000	EK07	24		77-35-11	ALL
	A07	\$D	W2000	EM07	24		77-35-11	ALL
	A08	\$D	W2000	EK08	24		73-33-11	ALL
	A08	\$D	W2000	EM08	24		73-33-11	ALL
	A09	\$D	W2000	EK09	24		36-22-21	ALL
	A09	\$D	W2000	EM09	24		SPARE	ALL
	A10	\$D	W2000	EK10	24		36-22-21	ALL
	A10	\$D	W2000	EM10	24		SPARE	ALL
	A11	\$D	W2000	EK11	24		79-33-11	ALL
	A11	\$D	W2000	EM11	24		79-33-11	ALL
	A12	\$D	W2000	EK12	24		29-32-11	ALL
	A12	\$D	W2000	EM12	24		29-32-11	ALL
	A13	\$D	W2000	EK13	24		SPARE	ALL

HOOKUP LIST

D280T132

91-21-51

Section D06200

Page 14

Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06208J		AE0219/ /		RCPT-SHELL (continued)				ALL
	A13	\$D	W2000	EM13	24		SPARE	ALL
	A14	\$D	W2000	EK14	24		SPARE	ALL
	A14	\$D	W2000	EM14	24		SPARE	ALL
	A15	\$D	W2000	EK15	24		77-12-12	ALL
	A15	\$D	W2000	EM15	24		SPARE	ALL
	A16	\$D	W2000	EK16	24		77-12-12	ALL
	A16	\$D	W2000	EM16	24		77-12-12	ALL
	A17	\$D	W2000	EK17	24		77-12-12	ALL
	A17	\$D	W2000	EM17	24		77-12-12	ALL
	A18	\$D	W2000	EK18	24		77-12-12	ALL
	A18	\$D	W2000	EM18	24		SPARE	ALL
	A19	\$D	W2000	EK19	24		SPARE	ALL
	A19	\$D	W2000	EM19	24		SPARE	ALL
	A20	\$D	W2000	EK20	24		99-99-99	ALL
	A20	\$D	W2000	EM20	24		99-99-99	ALL
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04	UNUSED						ALL
	B05	UNUSED						ALL
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13	UNUSED						ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	B16	UNUSED						ALL
	B17	UNUSED						ALL
	B18	UNUSED						ALL
	B19	UNUSED						ALL
	B20	UNUSED						ALL
D06208P		AE0219/ /		PLUG-E8				ALL
	A01	UNUSED						ALL
	A02	\$D	W1702	042	24		27-38-11	ALL
	A03	\$D	W1702	043	24		27-38-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D06200

Page 15

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06208P		AE0219/ /		PLUG-E8 (continued)				ALL
	A04	\$D	W1702	044	24		27-38-11	ALL
	A05	\$D	W1702	045	24		27-38-11	ALL
	A06	\$D	W1702	046	24		28-22-21	ALL
	A07	\$D	W1702	047	24		77-35-11	ALL
	A08	\$D	W1702	048	24		73-33-11	ALL
	A09	\$D	W1702	204B	24		36-22-21	ALL
	A10	\$D	W1702	204R	24		36-22-21	ALL
	A11	\$D	W1702	051	24		79-33-11	ALL
	A12	\$D	W1702	052	24		29-32-11	ALL
	A13	\$D	W1702	053	24		SPARE	ALL
	A14	\$D	W1702	054	24		SPARE	ALL
	A15	\$D	W1702	FRB			77-12-12	ALL
	A16	\$D	W1702	206B	24		77-12-12	ALL
	A17	\$D	W1702	206R	24		77-12-12	ALL
	A18	\$D	W1702	FRA			77-12-12	ALL
	A19	\$D	W1702	059	24		SPARE	ALL
	A20	UNUSED						ALL
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04	UNUSED						ALL
	B05	UNUSED						ALL
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13	UNUSED						ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	B16	UNUSED						ALL
	B17	UNUSED						ALL
	B18	UNUSED						ALL
	B19	UNUSED						ALL
	B20	UNUSED						ALL
	CAP	Y	W1702	053	24		SPARE	ALL
	CAP	Y	W1702	054	24		SPARE	ALL
	CAP	Y	W1702	059	24		SPARE	ALL

HOOKUP LIST

D280T132

91-21-51

Section D06200

Page 16

Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06208P		AE0219/ /		PLUG-E8 (continued)				ALL
			W1702	206Z			77-12-12	ALL
			W1702	FRA			77-12-12	ALL
			W1702	FRB			77-12-12	ALL
D06210J		AE0219/ /		RCPT-SHELL				ALL
	A01	\$D	W2002	LK01	24		99-99-99	050-099, 150-154, 275-276
	A01	\$D	W2002	LM01	24		SPARE	ALL
	A01	\$D	W2002	LK01	24		SPARE	155-199, 277-299
	A02	\$D	W2002	LK02	24		33-51-11	ALL
	A02	\$D	W2002	LM02	24		33-51-11	ALL
	A03	\$D	W2002	LK03	24		21-61-51	ALL
	A03	\$D	W2002	LM03	24		21-61-51	ALL
	A04	\$D	W2002	LK04	24		24-51-23	ALL
	A04	\$D	W2002	LM04	24		24-51-23	ALL
	A05	\$D	W2002	LK05	24		27-13-11	ALL
	A05	\$D	W2002	LM05	24		27-13-11	ALL
	A06	\$D	W2002	LK06	24		29-11-12	ALL
	A06	\$D	W2002	LM06	24		29-11-12	ALL
	A07	\$D	W2002	LK07	24		28-42-12	ALL
	A07	\$D	W2002	LM07	24		28-42-12	ALL
	A08	\$D	W2002	LK08	24		SPARE	ALL
	A08	\$D	W2002	LM08	24		SPARE	ALL
	A09	\$D	W2002	LK09	24		SPARE	ALL
	A09	\$D	W2002	LM09	24		SPARE	ALL
	A10	\$D	W2002	LK10	24		SPARE	ALL
	A10	\$D	W2002	LM10	24		SPARE	ALL
	A11	\$D	W2002	LK11	24		36-11-21	ALL
	A11	\$D	W2002	LM11	24		36-11-21	ALL
	A12	\$D	W2002	LK12	24		21-26-21	ALL
	A12	\$D	W2002	LM12	24		21-26-21	ALL
	A13	\$D	W2002	LK13	24		21-65-11	ALL
	A13	\$D	W2002	LM13	24		SPARE	ALL
	A14	\$D	W2002	LK14	24		21-65-11	ALL
	A14	\$D	W2002	LM14	24		SPARE	ALL
	A15	\$D	W2002	LK15	24		SPARE	ALL
	A15	\$D	W2002	LM15	24		21-65-11	ALL
	A16	\$D	W2002	LK16	24		SPARE	ALL
	A16	\$D	W2002	LM16	24		21-65-11	ALL
	A17	\$D	W2002	LK17	24		SPARE	ALL
	A17	\$D	W2002	LM17	24		21-65-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D06200

Page 17

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06210J		AE0219/ /		RCPT-SHELL (continued)				ALL
	A18	\$D	W2002	LK18	24		SPARE	ALL
	A18	\$D	W2002	LM18	24		21-65-11	ALL
	A19	\$D	W2002	LK19	24		SPARE	ALL
	A19	\$D	W2002	LM19	24		SPARE	ALL
	A20	\$D	W2002	LK20	24		99-99-99	050-099, 150-154, 275-276
	A20	\$D	W2002	LM20	24		99-99-99	050-099, 150-154, 275-276
	A20	\$D	W2002	LK20	24		SPARE	155-199, 277-299
	A20	\$D	W2002	LM20	24		SPARE	155-199, 277-299
	B01	\$D	W2002	LL01	24		99-99-99	050-099, 150-154, 275-276
	B01	\$D	W2002	LN01	24		SPARE	ALL
	B01	\$D	W2002	LL01	24		SPARE	155-199, 277-299
	B02	\$D	W2002	LL02	24		24-51-43	ALL
	B02	\$D	W2002	LN02	24		24-51-43	ALL
	B03	\$D	W2002	LL03	24		29-32-11	ALL
	B03	\$D	W2002	LN03	24		29-32-11	ALL
	B04	\$D	W2002	LL04	24		29-32-11	ALL
	B04	\$D	W2002	LN04	24		29-32-11	ALL
	B05	\$D	W2002	LL05	24		30-41-12	ALL
	B05	\$D	W2002	LN05	24		30-41-12	ALL
	B06	\$D	W2002	LL06	24		30-41-12	ALL
	B06	\$D	W2002	LN06	24		30-41-12	ALL
	B07	\$D	W2002	LL07	24		29-11-31	ALL
	B07	\$D	W2002	LN07	24		29-11-31	ALL
	B08	\$D	W2002	LL08	24		SPARE	ALL
	B08	\$D	W2002	LN08	24		SPARE	ALL
	B09	\$D	W2002	LL09	24		32-42-12	ALL
	B09	\$D	W2002	LN09	24		32-42-12	ALL
	B10	\$D	W2002	LL10	24		SPARE	ALL
	B10	\$D	W2002	LN10	24		SPARE	ALL
	B11	\$D	W2002	LL11	24		SPARE	ALL
	B11	\$D	W2002	LN11	24		SPARE	ALL
	B12	\$D	W2002	LL12	24		SPARE	ALL
	B12	\$D	W2002	LN12	24		SPARE	ALL
	B13	\$D	W2002	LL13	24		SPARE	ALL
	B13	\$D	W2002	LN13	24		SPARE	ALL
	B14	\$D	W2002	LL14	24		30-21-11	ALL
	B14	\$D	W2002	LN14	24		30-21-11	ALL
	B15	\$D	W2002	LL15	24		SPARE	050-099, 150-199
	B15	\$D	W2002	LN15	24		SPARE	050-099, 150-199
	B15	\$D	W2002	LL15	24		30-21-11	275-299

HOOKUP LIST

D280T132

91-21-51

Section D06200

Page 18

Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06210J		AE0219/ /		RCPT-SHELL (continued)				ALL
	B15	\$D	W2002	LN15	24		30-21-11	275-299
	B16	\$D	W2002	LL16	24		21-58-16	ALL
	B16	\$D	W2002	LN16	24		21-58-16	ALL
	B17	\$D	W2002	LL17	24		21-65-11	ALL
	B17	\$D	W2002	LN17	24		SPARE	ALL
	B18	\$D	W2002	LL18	24		21-65-11	ALL
	B18	\$D	W2002	LN18	24		SPARE	ALL
	B19	\$D	W2002	LL19	24		SPARE	ALL
	B19	\$D	W2002	LN19	24		SPARE	ALL
	B20	\$D	W2002	LL20	24		99-99-99	050-099, 150-154, 275-276
	B20	\$D	W2002	LN20	24		99-99-99	050-099, 150-154, 275-276
	B20	\$D	W2002	LL20	24		SPARE	155-199, 277-299
	B20	\$D	W2002	LN20	24		SPARE	155-199, 277-299
D06210P		AE0219/ /		PLUG-E8				ALL
	A01	UNUSED						ALL
	A02	\$D	W1710	002	24		33-51-11	ALL
	A03	\$D	W1710	003	24		21-61-51	ALL
	A04	\$D	W1710	004	24		24-51-23	ALL
	A05	\$D	W1710	005	24		27-13-11	ALL
	A06	\$D	W1710	006	24		29-11-12	ALL
	A07	\$D	W1710	007	24		28-42-12	ALL
	A08	UNUSED						050-099
	A08	\$D	W1710	008R	22		SPARE	150-199, 275-299
	A09	UNUSED						050-099
	A09	\$D	W1710	009R	22		SPARE	150-199, 275-299
	A10	UNUSED						050-099
	A10	\$D	W1710	010R	22		SPARE	150-199, 275-299
	A11	\$D	W1710	011	24		36-11-21	ALL
	A12	\$D	W1710	012	24		21-26-21	ALL
	A13	\$D	W1710	201B	24		21-65-11	ALL
	A14	\$D	W1710	201R	24		21-65-11	ALL
	A15	\$D	W1710	202B	24		21-65-11	ALL
	A16	\$D	W1710	202R	24		21-65-11	ALL
	A17	\$D	W1710	203B	24		21-65-11	ALL
	A18	\$D	W1710	203R	24		21-65-11	ALL
	A19	\$D	W1710	019	24		SPARE	ALL
	A20	UNUSED						ALL
	B01	UNUSED						ALL
	B02	\$D	W1710	022	24		24-51-43	ALL

HOOKUP LIST

D280T132

91-21-51

Section D06200

Page 19

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06210P		AE0219/ /		PLUG-E8 (continued)				ALL
	B03	\$D	W1710	023	24		29-32-11	ALL
	B04	\$D	W1710	024	24		29-32-11	ALL
	B05	\$D	W1710	025	24		30-41-12	ALL
	B06	\$D	W1710	026	24		30-41-12	ALL
	B07	\$D	W1710	027	24		29-11-31	ALL
	B08	UNUSED						050-099
	B08	\$D	W1710	028	24		SPARE	150-199, 275-299
	B09	\$D	W1710	029	24		32-42-12	ALL
	B10	UNUSED						050-099
	B10	\$D	W1710	030R	22		SPARE	150-199, 275-299
	B11	UNUSED						050-099
	B11	\$D	W1710	031R	22		SPARE	150-199, 275-299
	B12	UNUSED						050-099
	B12	\$D	W1710	032	24		SPARE	150-199, 275-299
	B13	\$D	W1710	033	24		SPARE	ALL
	B14	\$D	W1710	034	24		30-21-11	ALL
	B15	\$D	W1710	035	24		SPARE	050-099, 150-199
	B15	\$D	W1710	035	24		30-21-11	275-299
	B16	\$D	W1710	036	24		21-58-16	ALL
	B17	\$D	W1710	204B	24		21-65-11	ALL
	B18	\$D	W1710	204R	24		21-65-11	ALL
	B19	UNUSED						050-099
	B19	\$D	W1710	039	24		SPARE	150-199, 275-299
	B20	UNUSED						ALL
	CAP	Y	W1710	019	24		SPARE	ALL
	CAP	Y	W1710	039	24		SPARE	150-199, 275-299
	CAP	Y	W1710	008R	22		SPARE	275-299
	CAP	Y	W1710	009R	22		SPARE	275-299
	CAP	Y	W1710	010R	22		SPARE	275-299
	CAP	Y	W1710	030R	22		SPARE	275-299
	CAP	Y	W1710	031R	22		SPARE	275-299
D06212J		AE0219/ /		RCPT-SHELL				ALL
	A01	\$D	W2000	NK01	24		99-99-99	ALL
	A01	\$D	W2000	NM01	24		SPARE	ALL
	A02	\$D	W2000	NK02	24		21-25-21	ALL
	A02	\$D	W2000	NM02	24		21-25-21	ALL
	A03	\$D	W2000	NK03	24		27-81-11	ALL
	A03	\$D	W2000	NM03	24		27-81-11	ALL
	A04	\$D	W2000	NK04	24		21-61-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D06200

Page 20

Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06212J		AE0219/ /		RCPT-SHELL (continued)				ALL
	A04	\$D	W2000	NM04	24		21-61-11	ALL
	A05	\$D	W2000	NK05	24		21-61-21	ALL
	A05	\$D	W2000	NM05	24		21-61-21	ALL
	A06	\$D	W2000	NK06	24		21-61-31	ALL
	A06	\$D	W2000	NM06	24		21-61-31	ALL
	A07	\$D	W2000	NK07	24		30-21-11	050-099, 150-199
	A07	\$D	W2000	NM07	24		30-21-11	050-099, 150-199
	A07	\$D	W2000	NK07	24		SPARE	275-299
	A07	\$D	W2000	NM07	24		SPARE	275-299
	A08	\$D	W2000	NK08	24		SPARE	ALL
	A08	\$D	W2000	NM08	24		SPARE	ALL
	A09	\$D	W2000	NK09	24		21-61-41	ALL
	A09	\$D	W2000	NM09	24		21-61-41	ALL
	A10	\$D	W2000	NK10	24		29-33-11	ALL
	A10	\$D	W2000	NM10	24		29-33-11	ALL
	A11	\$D	W2000	NK11	24		28-42-11	ALL
	A11	\$D	W2000	NM11	24		28-42-11	ALL
	A12	\$D	W2000	NK12	24		29-31-11	ALL
	A12	\$D	W2000	NM12	24		29-31-11	ALL
	A13	\$D	W2000	NK13	24		29-31-11	ALL
	A13	\$D	W2000	NM13	24		SPARE	ALL
	A14	\$D	W2000	NK14	24		27-23-11	ALL
	A14	\$D	W2000	NM14	24		27-23-11	ALL
	A15	\$D	W2000	NK15	24		29-11-12	ALL
	A15	\$D	W2000	NM15	24		29-11-12	ALL
	A16	\$D	W2000	NK16	24		29-11-12	ALL
	A16	\$D	W2000	NM16	24		29-11-12	ALL
	A17	\$D	W2000	NK17	24		SPARE	ALL
	A17	\$D	W2000	NM17	24		29-32-11	ALL
	A18	\$D	W2000	NK18	24		SPARE	ALL
	A18	\$D	W2000	NM18	24		29-32-11	ALL
	A19	\$D	W2000	NK19	24		79-35-11	ALL
	A19	\$D	W2000	NM19	24		79-35-11	ALL
	A20	\$D	W2000	NK20	24		99-99-99	ALL
	A20	\$D	W2000	NM20	24		99-99-99	ALL
	B01	\$D	W2000	NL01	24		99-99-99	ALL
	B01	\$D	W2000	NN01	24		77-12-11	050-099, 162-199, 277-299
	B01	\$D	W2000	NN01	24		SPARE	150-157, 275-276
	B02	\$D	W2000	NL02	24		SPARE	ALL
	B02	\$D	W2000	NN02	24		SPARE	ALL

HOOKUP LIST

D280T132

91-21-51

Section D06200

Page 21

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06212J		AE0219/ /		RCPT-SHELL (continued)				ALL
	B03	\$D	W2000	NL03	24		SPARE	ALL
	B03	\$D	W2000	NN03	24		SPARE	ALL
	B04	\$D	W2000	NL04	24		SPARE	ALL
	B04	\$D	W2000	NN04	24		SPARE	ALL
	B05	\$D	W2000	NL05	24		75-23-11	ALL
	B05	\$D	W2000	NN05	24		75-23-11	ALL
	B06	\$D	W2000	NL06	24		77-12-11	ALL
	B06	\$D	W2000	NN06	24		77-12-11	ALL
	B07	\$D	W2000	NL07	24		77-12-11	ALL
	B07	\$D	W2000	NN07	24		77-12-11	ALL
	B08	\$D	W2000	NL08	24		SPARE	ALL
	B08	\$D	W2000	NN08	24		SPARE	ALL
	B09	\$D	W2000	NL09	24		SPARE	ALL
	B09	\$D	W2000	NN09	24		SPARE	ALL
	B10	\$D	W2000	NL10	24		79-31-11	ALL
	B10	\$D	W2000	NN10	24		79-31-11	ALL
	B11	\$D	W2000	NL11	24		SPARE	ALL
	B11	\$D	W2000	NN11	24		79-31-11	ALL
	B12	\$D	W2000	NL12	24		SPARE	ALL
	B12	\$D	W2000	NN12	24		79-31-11	ALL
	B13	\$D	W2000	NL13	24		32-09-12	ALL
	B13	\$D	W2000	NN13	24		32-09-12	ALL
	B14	\$D	W2000	NL14	24		32-09-12	ALL
	B14	\$D	W2000	NN14	24		32-09-12	ALL
	B15	\$D	W2000	NL15	24		24-11-21	ALL
	B15	\$D	W2000	NN15	24		24-11-21	ALL
	B16	\$D	W2000	NL16	24		30-21-11	ALL
	B16	\$D	W2000	NN16	24		30-21-11	ALL
	B17	\$D	W2000	NL17	24		SPARE	ALL
	B17	\$D	W2000	NN17	24		SPARE	ALL
	B18	\$D	W2000	NL18	24		21-44-11	ALL
	B18	\$D	W2000	NN18	24		21-44-11	ALL
	B19	\$D	W2000	NL19	24		29-33-11	ALL
	B19	\$D	W2000	NN19	24		29-33-11	ALL
	B20	\$D	W2000	NL20	24		99-99-99	ALL
	B20	\$D	W2000	NN20	24		99-99-99	ALL
D06212P		AE0219/ /		PLUG-E8				ALL
	A01	UNUSED						ALL
	A02	\$D	W1712	002	24		21-25-21	ALL

HOOKUP LIST
D280T132

91-21-51
Section D06200
Page 22
Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06212P		AE0219/ /		PLUG-E8 (continued)				ALL
	A03	\$D	W1712	003	24		27-81-11	ALL
	A04	\$D	W1712	004	24		21-61-11	ALL
	A05	\$D	W1712	005	24		21-61-21	ALL
	A06	\$D	W1712	006	24		21-61-31	ALL
	A07	\$D	W1712	007	24		30-21-11	050-099, 150-199
	A07	\$D	W1712	007	24		SPARE	275-299
	A08	\$D	W1712	008	24		SPARE	ALL
	A09	\$D	W1712	009	24		21-61-41	ALL
	A10	\$D	W1712	010	24		29-33-11	ALL
	A11	\$D	W1712	011	24		28-42-11	ALL
	A12	\$D	W1712	205R	24		29-31-11	ALL
	A13	\$D	W1712	205B	24		29-31-11	ALL
	A14	\$D	W1712	014	24		27-23-11	ALL
	A15	\$D	W1712	015	24		29-11-12	ALL
	A16	\$D	W1712	016	24		29-11-12	ALL
	A17	\$D	W1712	017	24		29-32-11	ALL
	A18	\$D	W1712	018	24		29-32-11	ALL
	A19	\$D	W1712	019	24		79-35-11	ALL
	A20	UNUSED						ALL
	B01	\$D	W1712	202Z			77-12-11	ALL
	B02	\$D	W1712	022	24		SPARE	ALL
	B03	\$D	W1712	023	24		SPARE	ALL
	B04	\$D	W1712	024	24		SPARE	ALL
	B05	\$D	W1712	025	24		75-23-11	ALL
	B06	\$D	W1712	202R	24		77-12-11	ALL
	B07	\$D	W1712	202B	24		77-12-11	ALL
	B08	UNUSED						050-099, 155-199, 276-299
	B08	\$D	W1712	028	24		SPARE	150-154, 275
	B09	\$D	W1712	029	24		SPARE	ALL
	B10	\$D	W1712	301R	24		79-31-11	ALL
	B11	\$D	W1712	301B	24		79-31-11	ALL
	B12	\$D	W1712	301Y	24		79-31-11	ALL
	B13	\$D	W1712	033	24		32-09-12	ALL
	B14	\$D	W1712	034	24		32-09-12	ALL
	B15	\$D	W1712	035	24		24-11-21	ALL
	B16	\$D	W1712	036	24		30-21-11	ALL
	B17	UNUSED						050-099, 150-199
	B17	\$D	W1712	037	24		SPARE	275-299
	B18	\$D	W1712	038	24		21-44-11	ALL
	B19	\$D	W1712	039	24		29-33-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D06200

Page 23

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06212P		AE0219/ /		PLUG-E8 (continued)				ALL
	B20	UNUSED						ALL
	CAP	Y	W1712	024	24		SPARE	050-099, 150-199
	CAP	Y	W1712	037	24		SPARE	275-299
D06214J		AE0219/ /		RCPT-SHELL				ALL
	A01	\$D	W2000	LK01	24		99-99-99	ALL
	A01	\$D	W2000	LM01	24		SPARE	ALL
	A02	\$D	W2000	LK02	24		29-32-11	ALL
	A02	\$D	W2000	LM02	24		29-32-11	ALL
	A03	\$D	W2000	LK03	24		SPARE	ALL
	A03	\$D	W2000	LM03	24		SPARE	ALL
	A04	\$D	W2000	LK04	24		SPARE	ALL
	A04	\$D	W2000	LM04	24		SPARE	ALL
	A05	\$D	W2000	LK05	24		SPARE	050-099, 150-199
	A05	\$D	W2000	LM05	24		SPARE	050-099, 150-199
	A05	\$D	W2000	LK05	24		30-21-11	275-299
	A05	\$D	W2000	LM05	24		30-21-11	275-299
	A06	\$D	W2000	LK06	24		28-22-21	ALL
	A06	\$D	W2000	LM06	24		28-22-21	ALL
	A07	\$D	W2000	LM07	24		SPARE	050-099
	A07	\$D	W2000	LK07	24		SPARE	ALL
	A07	\$D	W2000	LM07	24		73-33-11	150-199, 275-299
	A08	\$D	W2000	LK08	24		73-33-11	ALL
	A08	\$D	W2000	LM08	24		73-33-11	ALL
	A09	\$D	W2000	LK09	24		SPARE	ALL
	A09	\$D	W2000	LM09	24		36-22-21	ALL
	A10	\$D	W2000	LK10	24		SPARE	ALL
	A10	\$D	W2000	LM10	24		36-22-21	ALL
	A11	\$D	W2000	LK11	24		79-33-11	ALL
	A11	\$D	W2000	LM11	24		79-33-11	ALL
	A12	\$D	W2000	LK12	24		30-21-11	050-099, 150-199
	A12	\$D	W2000	LM12	24		30-21-11	050-099, 150-199
	A12	\$D	W2000	LK12	24		SPARE	275-299
	A12	\$D	W2000	LM12	24		SPARE	275-299
	A13	\$D	W2000	LM13	24		73-33-11	050-099
	A13	\$D	W2000	LK13	24		SPARE	ALL
	A13	\$D	W2000	LM13	24		SPARE	150-199, 275-299
	A14	\$D	W2000	LK14	24		73-21-18	ALL
	A14	\$D	W2000	LM14	24		73-21-18	ALL
	A15	\$D	W2000	LK15	24		28-31-11	050-099, 155-199, 276-299

HOOKUP LIST

D280T132

91-21-51

Section D06200

Page 24

Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06214J		AE0219/ /		RCPT-SHELL (continued)				ALL
	A15	\$D	W2000	LM15	24		28-31-11	050-099, 155-199, 276-299
	A15	\$D	W2000	LK15	24		SPARE	150-154, 275
	A15	\$D	W2000	LM15	24		SPARE	150-154, 275
	A16	\$D	W2000	LK16	24		28-42-13	050-099, 155-199, 276-299
	A16	\$D	W2000	LM16	24		28-42-13	050-099, 155-199, 276-299
	A16	\$D	W2000	LK16	24		SPARE	150-154, 275
	A16	\$D	W2000	LM16	24		SPARE	150-154, 275
	A17	\$D	W2000	LK17	24		73-21-14	ALL
	A17	\$D	W2000	LM17	24		SPARE	ALL
	A18	\$D	W2000	LK18	24		73-21-14	ALL
	A18	\$D	W2000	LM18	24		73-21-14	ALL
	A19	\$D	W2000	LK19	24		73-21-14	ALL
	A19	\$D	W2000	LM19	24		73-21-14	ALL
	A20	\$D	W2000	LK20	24		99-99-99	ALL
	A20	\$D	W2000	LM20	24		99-99-99	ALL
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04	UNUSED						ALL
	B05	UNUSED						ALL
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13	UNUSED						ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	B16	UNUSED						ALL
	B17	UNUSED						ALL
	B18	UNUSED						ALL
	B19	UNUSED						ALL
	B20	UNUSED						ALL
D06214P		AE0219/ /		PLUG-E8				ALL
	A01	UNUSED						ALL
	A02	\$D	W1712	042	24		29-32-11	ALL
	A03	\$D	W1712	043	24		SPARE	ALL

HOOKUP LIST

D280T132

91-21-51

Section D06200

Page 25

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06214P		AE0219/ /		PLUG-E8 (continued)				ALL
	A04	\$D	W1712	044	24		SPARE	ALL
	A05	UNUSED						050-099, 150-199
	A05	\$D	W1712	045	24		30-21-11	275-299
	A06	\$D	W1712	046	24		28-22-21	ALL
	A07	\$D	W1712	047	24		73-33-11	ALL
	A08	\$D	W1712	048	24		73-33-11	ALL
	A09	\$D	W1712	204B	24		36-22-21	ALL
	A10	\$D	W1712	204R	24		36-22-21	ALL
	A11	\$D	W1712	051	24		79-33-11	ALL
	A12	\$D	W1712	045	24		30-21-11	050-099, 150-199
	A12	\$D	W1712	052	24		SPARE	275-299
	A13	\$D	W1712	053	24		73-33-11	050-099
	A13	\$D	W1712	053	24		SPARE	150-154, 275-299
	A13	UNUSED						155-199
	A14	\$D	W1712	054	24		73-21-18	ALL
	A15	\$D	W1712	055	22		28-31-11	050-099, 155-199, 276-299
	A15	\$D	W1712	055	24		SPARE	150-154, 275
	A16	\$D	W1712	056	24		28-42-13	050-099
	A16	\$D	W1712	056	24		SPARE	150-154, 275
	A16	\$D	W1712	056	22		28-42-13	155-199, 276-299
	A17	\$D	W1712	207Z			73-21-14	ALL
	A18	\$D	W1712	207B	24		73-21-14	ALL
	A19	\$D	W1712	207R	24		73-21-14	ALL
	A20	UNUSED						ALL
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04	UNUSED						ALL
	B05	UNUSED						ALL
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13	UNUSED						ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	B16	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D06200

Page 26

Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06214P		AE0219/ /		PLUG-E8 (continued)				ALL
	B17	UNUSED						ALL
	B18	UNUSED						ALL
	B19	UNUSED						ALL
	B20	UNUSED						ALL
	CAP	Y	W1712	043	24		SPARE	ALL
	CAP	Y	W1712	044	24		SPARE	ALL
	CAP	Y	W1712	055	24		SPARE	150-154, 275
	CAP	Y	W1712	056	24		SPARE	150-154, 275
	CAP	Y	W1712	053	24		SPARE	150-154, 275-299
	CAP	Y	W1712	052	24		SPARE	275-299
D06216J		AE0219/ /		RCPT-SHELL				ALL
	A01	\$D	W2002	PM01	24		99-99-99	050-099, 150-154, 275-276
	A01	\$D	W2002	PK01	24		SPARE	ALL
	A01	\$D	W2002	PM01	24		SPARE	155-199, 277-299
	A02	\$D	W2002	PK02	24		SPARE	ALL
	A02	\$D	W2002	PM02	24		SPARE	ALL
	A03	\$D	W2002	PK03	24		35-21-11	ALL
	A03	\$D	W2002	PM03	24		35-21-11	ALL
	A04	\$D	W2002	PK04	24		28-22-31	ALL
	A04	\$D	W2002	PM04	24		28-22-31	ALL
	A05	\$D	W2002	PK05	24		80-11-21	ALL
	A05	\$D	W2002	PM05	24		80-11-21	ALL
	A06	\$D	W2002	PK06	24		80-11-21	ALL
	A06	\$D	W2002	PM06	24		80-11-21	ALL
	A07	\$D	W2002	PK07	24		29-32-11	ALL
	A07	\$D	W2002	PM07	24		29-32-11	ALL
	A08	\$D	W2002	PK08	24		32-42-11	ALL
	A08	\$D	W2002	PM08	24		32-42-11	ALL
	A09	\$D	W2002	PK09	24		24-28-11	ALL
	A09	\$D	W2002	PM09	24		24-28-11	ALL
	A10	\$D	W2002	PK10	24		24-33-11	ALL
	A10	\$D	W2002	PM10	24		24-33-11	ALL
	A11	\$D	W2002	PK11	24		24-33-11	ALL
	A11	\$D	W2002	PM11	24		24-33-11	ALL
	A12	\$D	W2002	PK12	24		SPARE	ALL
	A12	\$D	W2002	PM12	24		SPARE	ALL
	A13	\$D	W2002	PK13	24		SPARE	ALL
	A13	\$D	W2002	PM13	24		SPARE	ALL
	A14	\$D	W2002	PK14	24		SPARE	050-099, 275-299

HOOKUP LIST

D280T132

91-21-51

Section D06200

Page 27

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06216J		AE0219/ /		RCPT-SHELL (continued)				ALL
	A14	\$D	W2002	PM14	24		SPARE	050-099, 275-299
	A14	\$D	W2002	PK14	24		73-14-11	150-199
	A14	\$D	W2002	PM14	24		73-14-11	150-199
	A15	\$D	W2002	PK15	24		SPARE	050-099, 275-299
	A15	\$D	W2002	PM15	24		SPARE	050-099, 275-299
	A15	\$D	W2002	PK15	24		73-14-11	150-199
	A15	\$D	W2002	PM15	24		73-14-11	150-199
	A16	\$D	W2002	PK16	24		74-31-11	ALL
	A16	\$D	W2002	PM16	24		74-31-11	ALL
	A17	\$D	W2002	PK17	24		SPARE	ALL
	A17	\$D	W2002	PM17	24		SPARE	ALL
	A18	\$D	W2002	PK18	24		29-11-32	ALL
	A18	\$D	W2002	PM18	24		29-11-32	ALL
	A19	\$D	W2002	PK19	24		SPARE	ALL
	A19	\$D	W2002	PM19	24		SPARE	ALL
	A20	\$D	W2002	PK20	24		99-99-99	050-099, 150-154, 275-276
	A20	\$D	W2002	PM20	24		99-99-99	050-099, 150-154, 275-276
	A20	\$D	W2002	PK20	24		SPARE	155-199, 277-299
	A20	\$D	W2002	PM20	24		SPARE	155-199, 277-299
	B01	\$D	W2002	PN01	24		99-99-99	050-099, 150-154, 275-276
	B01	\$D	W2002	PL01	24		SPARE	ALL
	B01	\$D	W2002	PN01	24		SPARE	155-199, 277-299
	B02	\$D	W2002	PL02	24		24-34-11	ALL
	B02	\$D	W2002	PN02	24		24-34-11	ALL
	B03	\$D	W2002	PL03	24		24-34-11	ALL
	B03	\$D	W2002	PN03	24		24-34-11	ALL
	B04	\$D	W2002	PL04	24		24-34-11	ALL
	B04	\$D	W2002	PN04	24		24-34-11	ALL
	B05	\$D	W2002	PL05	24		24-34-11	ALL
	B05	\$D	W2002	PN05	24		24-34-11	ALL
	B06	\$D	W2002	PL06	24		24-34-11	ALL
	B06	\$D	W2002	PN06	24		24-34-11	ALL
	B07	\$D	W2002	PL07	24		24-34-11	ALL
	B07	\$D	W2002	PN07	24		24-34-11	ALL
	B08	\$D	W2002	PL08	24		24-34-11	ALL
	B08	\$D	W2002	PN08	24		24-34-11	ALL
	B09	\$D	W2002	PL09	24		24-34-11	ALL
	B09	\$D	W2002	PN09	24		24-34-11	ALL
	B10	\$D	W2002	PL10	24		24-34-11	ALL
	B10	\$D	W2002	PN10	24		24-34-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D06200

Page 28

Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06216J		AE0219/ /		RCPT-SHELL (continued)				ALL
	B11	\$D	W2002	PL11	24		24-34-11	ALL
	B11	\$D	W2002	PN11	24		24-34-11	ALL
	B12	\$D	W2002	PL12	24		21-58-16	ALL
	B12	\$D	W2002	PN12	24		21-58-16	ALL
	B13	\$D	W2002	PL13	24		24-34-11	ALL
	B13	\$D	W2002	PN13	24		24-34-11	ALL
	B14	\$D	W2002	PL14	24		24-34-11	ALL
	B14	\$D	W2002	PN14	24		24-34-11	ALL
	B15	\$D	W2002	PL15	24		35-11-13	ALL
	B15	\$D	W2002	PN15	24		35-11-13	ALL
	B16	\$D	W2002	PL16	24		35-11-13	ALL
	B16	\$D	W2002	PN16	24		35-11-13	ALL
	B17	\$D	W2002	PL17	24		49-94-14	ALL
	B17	\$D	W2002	PN17	24		49-94-14	ALL
	B18	\$D	W2002	PL18	24		49-94-14	ALL
	B18	\$D	W2002	PN18	24		SPARE	ALL
	B19	\$D	W2002	PL19	24		49-94-14	ALL
	B19	\$D	W2002	PN19	24		SPARE	ALL
	B20	\$D	W2002	PL20	24		99-99-99	050-099, 150-154, 275-276
	B20	\$D	W2002	PN20	24		99-99-99	050-099, 150-154, 275-276
	B20	\$D	W2002	PL20	24		SPARE	155-199, 277-299
	B20	\$D	W2002	PN20	24		SPARE	155-199, 277-299
D06216P		AE0219/ /		PLUG-E8				ALL
	A01	UNUSED						ALL
	A02	\$D	W1716	002	24		SPARE	ALL
	A03	\$D	W1716	003	24		35-21-11	ALL
	A04	\$D	W1716	004	24		28-22-31	ALL
	A05	\$D	W1716	005	24		80-11-21	ALL
	A06	\$D	W1716	006	24		80-11-21	ALL
	A07	\$D	W1716	007	24		29-32-11	ALL
	A08	\$D	W1716	008	24		32-42-11	ALL
	A09	\$D	W1716	009	24		24-28-11	ALL
	A10	\$D	W1716	010	24		24-33-11	ALL
	A11	\$D	W1716	011	24		24-33-11	ALL
	A12	\$D	W1716	012	24		SPARE	ALL
	A13	\$D	W1716	013	24		SPARE	ALL
	A14	UNUSED						050-099
	A14	\$D	W1716	014	24		SPARE	150-199, 275-299
	A15	UNUSED						050-099

HOOKUP LIST

D280T132

91-21-51

Section D06200

Page 29

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06216P		AE0219/ /		PLUG-E8 (continued)				ALL
	A15	\$D	W1716	015	24		SPARE	150-199, 275-299
	A16	\$D	W1716	016	24		74-31-11	ALL
	A17	\$D	W1716	017	24		SPARE	ALL
	A18	\$D	W1716	018	24		29-11-32	ALL
	A19	\$D	W1716	019	24		SPARE	ALL
	A20	UNUSED						ALL
	B01	UNUSED						ALL
	B02	\$D	W1716	201R	24		24-34-11	ALL
	B03	\$D	W1716	201B	24		24-34-11	ALL
	B04	\$D	W1716	202R	24		24-34-11	ALL
	B05	\$D	W1716	202B	24		24-34-11	ALL
	B06	\$D	W1716	203R	24		24-34-11	ALL
	B07	\$D	W1716	203B	24		24-34-11	ALL
	B08	\$D	W1716	028	24		24-34-11	ALL
	B09	\$D	W1716	029	24		24-34-11	ALL
	B10	\$D	W1716	030	24		24-34-11	ALL
	B11	\$D	W1716	031	24		24-34-11	ALL
	B12	\$D	W1716	032	24		21-58-16	ALL
	B13	\$D	W1716	033	24		24-34-11	ALL
	B14	\$D	W1716	034	24		24-34-11	ALL
	B15	\$D	W1716	204B	24		35-11-13	ALL
	B16	\$D	W1716	204R	24		35-11-13	ALL
	B17	\$D	W1716	301B	24		49-94-14	ALL
	B18	\$D	W1716	301R	24		49-94-14	ALL
	B19	\$D	W1716	301Y	24		49-94-14	ALL
	B20	UNUSED						ALL
	CAP	Y	W1716	014	24		SPARE	150-199, 275-299
	CAP	Y	W1716	015	24		SPARE	150-199, 275-299
D06218J		AE0219/ /		RCPT-SHELL				ALL
	A01	\$D	W2002	QK01	24		99-99-99	050-099, 150-154, 275-276
	A01	\$D	W2002	QM01	24		SPARE	ALL
	A01	\$D	W2002	QK01	24		SPARE	155-199, 277-299
	A02	\$D	W2002	QK02	24		26-11-11	ALL
	A02	\$D	W2002	QM02	24		26-11-11	ALL
	A03	\$D	W2002	QK03	24		26-11-12	ALL
	A03	\$D	W2002	QM03	24		26-11-12	ALL
	A04	\$D	W2002	QK04	24		26-11-21	ALL
	A04	\$D	W2002	QM04	24		26-11-21	ALL
	A05	\$D	W2002	QK05	24		26-11-22	ALL

HOOKUP LIST

D280T132

91-21-51

Section D06200

Page 30

Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06218J		AE0219/ /		RCPT-SHELL (continued)				ALL
	A05	\$D	W2002	QM05	24		26-11-22	ALL
	A06	\$D	W2002	QK06	24		26-15-11	ALL
	A06	\$D	W2002	QM06	24		26-15-11	ALL
	A07	\$D	W2002	QK07	24		26-11-11	ALL
	A07	\$D	W2002	QM07	24		26-11-11	ALL
	A08	\$D	W2002	QK08	24		26-11-12	ALL
	A08	\$D	W2002	QM08	24		26-11-12	ALL
	A09	\$D	W2002	QK09	24		SPARE	ALL
	A09	\$D	W2002	QM09	24		SPARE	ALL
	A10	\$D	W2002	QK10	24		26-11-11	ALL
	A10	\$D	W2002	QM10	24		26-11-11	ALL
	A11	\$D	W2002	QK11	24		77-12-11	ALL
	A11	\$D	W2002	QM11	24		77-12-11	ALL
	A12	\$D	W2002	QK12	24		77-12-11	ALL
	A12	\$D	W2002	QM12	24		77-12-11	ALL
	A13	\$D	W2002	QK13	24		SPARE	ALL
	A13	\$D	W2002	QM13	24		77-12-11	ALL
	A14	\$D	W2002	QK14	24		28-22-31	ALL
	A14	\$D	W2002	QM14	24		28-22-31	ALL
	A15	\$D	W2002	QK15	24		27-23-11	ALL
	A15	\$D	W2002	QM15	24		27-23-11	ALL
	A16	\$D	W2002	QK16	24		28-42-21	ALL
	A16	\$D	W2002	QM16	24		28-42-21	ALL
	A17	\$D	W2002	QK17	24		31-31-13	ALL
	A17	\$D	W2002	QM17	24		31-31-13	ALL
	A18	\$D	W2002	QK18	24		29-11-32	ALL
	A18	\$D	W2002	QM18	24		29-11-32	ALL
	A19	\$D	W2002	QK19	24		32-41-11	ALL
	A19	\$D	W2002	QM19	24		32-41-11	ALL
	A20	\$D	W2002	QK20	24		99-99-99	050-099, 150-154, 275-276
	A20	\$D	W2002	QM20	24		99-99-99	050-099, 150-154, 275-276
	A20	\$D	W2002	QK20	24		SPARE	155-199, 277-299
	A20	\$D	W2002	QM20	24		SPARE	155-199, 277-299
	B01	\$D	W2002	QL01	24		99-99-99	050-099, 150-154, 275-276
	B01	\$D	W2002	QN01	24		SPARE	ALL
	B01	\$D	W2002	QL01	24		SPARE	155-199, 277-299
	B02	\$D	W2002	QL02	24		26-21-11	ALL
	B02	\$D	W2002	QN02	24		26-21-11	ALL
	B03	\$D	W2002	QL03	24		26-23-12	ALL
	B03	\$D	W2002	QN03	24		26-23-12	ALL

HOOKUP LIST

D280T132

91-21-51

Section D06200

Page 31

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06218J		AE0219/ /		RCPT-SHELL (continued)				ALL
	B04	\$D	W2002	QL04	24		29-21-31	ALL
	B04	\$D	W2002	QN04	24		29-21-31	ALL
	B05	\$D	W2002	QL05	24		73-21-14	ALL
	B05	\$D	W2002	QN05	24		SPARE	ALL
	B06	\$D	W2002	QL06	24		76-11-11	ALL
	B06	\$D	W2002	QN06	24		76-11-11	ALL
	B07	\$D	W2002	QL07	24		76-11-11	ALL
	B07	\$D	W2002	QN07	24		76-11-11	ALL
	B08	\$D	W2002	QL08	24		26-16-21	ALL
	B08	\$D	W2002	QN08	24		26-16-21	ALL
	B09	\$D	W2002	QL09	24		26-16-21	ALL
	B09	\$D	W2002	QN09	24		26-16-21	ALL
	B10	\$D	W2002	QL10	24		32-42-11	ALL
	B10	\$D	W2002	QN10	24		32-42-11	ALL
	B11	\$D	W2002	QL11	24		32-42-11	ALL
	B11	\$D	W2002	QN11	24		32-42-11	ALL
	B12	\$D	W2002	QL12	24		32-44-11	ALL
	B12	\$D	W2002	QN12	24		32-44-11	ALL
	B13	\$D	W2002	QL13	24		32-42-11	ALL
	B13	\$D	W2002	QN13	24		32-42-11	ALL
	B14	\$D	W2002	QL14	24		73-21-14	ALL
	B14	\$D	W2002	QN14	24		73-21-14	ALL
	B15	\$D	W2002	QL15	24		73-21-14	ALL
	B15	\$D	W2002	QN15	24		73-21-14	ALL
	B16	\$D	W2002	QL16	24		26-16-11	ALL
	B16	\$D	W2002	QN16	24		26-16-11	ALL
	B17	\$D	W2002	QL17	24		26-16-11	ALL
	B17	\$D	W2002	QN17	24		26-16-11	ALL
	B18	\$D	W2002	QL18	24		26-16-11	ALL
	B18	\$D	W2002	QN18	24		26-16-11	ALL
	B19	\$D	W2002	QL19	24		SPARE	ALL
	B19	\$D	W2002	QN19	24		SPARE	ALL
	B20	\$D	W2002	QL20	24		99-99-99	050-099, 150-154, 275-276
	B20	\$D	W2002	QN20	24		99-99-99	050-099, 150-154, 275-276
	B20	\$D	W2002	QL20	24		SPARE	155-199, 277-299
	B20	\$D	W2002	QN20	24		SPARE	155-199, 277-299
D06218P		AE0219/ /		PLUG-E8				ALL
	A01	UNUSED						ALL
	A02	\$D	W1718	002R	22		26-11-11	ALL

HOOKUP LIST
D280T132

91-21-51
Section D06200
Page 32
Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06218P		AE0219/ /		PLUG-E8 (continued)				ALL
	A03	\$D	W1718	003R	22		26-11-12	ALL
	A04	\$D	W1718	004R	22		26-11-21	ALL
	A05	\$D	W1718	005R	22		26-11-22	ALL
	A06	\$D	W1718	006R	22		26-15-11	ALL
	A07	\$D	W1718	007R	22		26-11-11	ALL
	A08	\$D	W1718	008R	22		26-11-12	ALL
	A09	\$D	W1718	009	24		SPARE	ALL
	A10	\$D	W1718	010R	22		26-11-11	ALL
	A11	\$D	W1718	207R	24		77-12-11	050-099, 275-299
	A11		W1718	207R	24		77-12-11	150-199
	A12	\$D	W1718	207B	24		77-12-11	050-099, 275-299
	A12		W1718	207B	24		77-12-11	150-199
	A13	\$D	W1718	207Z			77-12-11	050-099, 275-299
	A13		W1718	207Z			77-12-11	150-199
	A14	\$D	W1718	014	24		28-22-31	ALL
	A15	\$D	W1718	015	24		27-23-11	ALL
	A16	\$D	W1718	016	24		28-42-21	ALL
	A17	\$D	W1718	017	24		31-31-13	ALL
	A18	\$D	W1718	018	24		29-11-32	ALL
	A19	\$D	W1718	019	24		32-41-11	ALL
	A20	UNUSED						ALL
	B01	UNUSED						ALL
	B02	\$D	W1718	022R	22		26-21-11	ALL
	B03	\$D	W1718	023R	22		26-23-12	ALL
	B04	\$D	W1718	024	24		29-21-31	ALL
	B05	\$D	W1718	202Z			73-21-14	ALL
	B06	\$D	W1718	026	24		76-11-11	ALL
	B07	\$D	W1718	027	24		76-11-11	ALL
	B08	\$D	W1718	028	24		26-16-21	ALL
	B09	\$D	W1718	029	24		26-16-21	ALL
	B10	\$D	W1718	030	24		32-42-11	ALL
	B11	\$D	W1718	031	24		32-42-11	ALL
	B12	\$D	W1718	032	24		32-44-11	ALL
	B13	\$D	W1718	033	24		32-42-11	ALL
	B14	\$D	W1718	202R	24		73-21-14	ALL
	B15	\$D	W1718	202B	24		73-21-14	ALL
	B16	\$D	W1718	036R	24		26-16-11	ALL
	B17	\$D	W1718	037R	24		26-16-11	ALL
	B18	\$D	W1718	038R	24		26-16-11	ALL
	B19	\$D	W1718	039	24		SPARE	ALL

HOOKUP LIST

D280T132

91-21-51

Section D06200

Page 33

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06218P		AE0219/ /		PLUG-E8 (continued)				ALL
	B20	UNUSED						ALL
D06220J		AE0219/ /		RCPT-SHELL				ALL
	A01	\$D	W2002	NK01	24		99-99-99	050-099, 150-154, 275-276
	A01	\$D	W2002	NM01	24		SPARE	ALL
	A01	\$D	W2002	NK01	24		SPARE	155-199, 277-299
	A02	\$D	W2002	NK02	24		26-11-11	ALL
	A02	\$D	W2002	NM02	24		26-11-11	ALL
	A03	\$D	W2002	NK03	24		26-11-12	ALL
	A03	\$D	W2002	NM03	24		26-11-12	ALL
	A04	\$D	W2002	NK04	24		26-11-21	ALL
	A04	\$D	W2002	NM04	24		26-11-21	ALL
	A05	\$D	W2002	NK05	24		26-11-22	ALL
	A05	\$D	W2002	NM05	24		26-11-22	ALL
	A06	\$D	W2002	NK06	24		26-15-11	ALL
	A06	\$D	W2002	NM06	24		26-15-11	ALL
	A07	\$D	W2002	NK07	24		26-11-21	ALL
	A07	\$D	W2002	NM07	24		26-11-21	ALL
	A08	\$D	W2002	NK08	24		26-11-22	ALL
	A08	\$D	W2002	NM08	24		26-11-22	ALL
	A09	\$D	W2002	NK09	24		26-15-11	ALL
	A09	\$D	W2002	NM09	24		26-15-11	ALL
	A10	\$D	W2002	NK10	24		SPARE	ALL
	A10	\$D	W2002	NM10	24		SPARE	ALL
	A11	\$D	W2002	NK11	24		SPARE	ALL
	A11	\$D	W2002	NM11	24		SPARE	ALL
	A12	\$D	W2002	NK12	24		26-16-11	ALL
	A12	\$D	W2002	NM12	24		26-16-11	ALL
	A13	\$D	W2002	NK13	24		26-16-11	ALL
	A13	\$D	W2002	NM13	24		26-16-11	ALL
	A14	\$D	W2002	NK14	24		26-16-11	ALL
	A14	\$D	W2002	NM14	24		26-16-11	ALL
	A15	\$D	W2002	NK15	24		26-17-11	ALL
	A15	\$D	W2002	NM15	24		26-17-11	ALL
	A16	\$D	W2002	NK16	24		SPARE	ALL
	A16	\$D	W2002	NM16	24		SPARE	ALL
	A17	\$D	W2002	NK17	24		SPARE	ALL
	A17	\$D	W2002	NM17	24		SPARE	ALL
	A18	\$D	W2002	NK18	24		SPARE	ALL
	A18	\$D	W2002	NM18	24		SPARE	ALL

HOOKUP LIST

D280T132

91-21-51

Section D06200

Page 34

Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06220J		AE0219/ /		RCPT-SHELL (continued)				ALL
	A19	\$D	W2002	NK19	24		SPARE	ALL
	A19	\$D	W2002	NM19	24		SPARE	ALL
	A20	\$D	W2002	NK20	24		99-99-99	050-099, 150-154, 275-276
	A20	\$D	W2002	NM20	24		99-99-99	050-099, 150-154, 275-276
	A20	\$D	W2002	NK20	24		SPARE	155-199, 277-299
	A20	\$D	W2002	NM20	24		SPARE	155-199, 277-299
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04	UNUSED						ALL
	B05	UNUSED						ALL
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13	UNUSED						ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	B16	UNUSED						ALL
	B17	UNUSED						ALL
	B18	UNUSED						ALL
	B19	UNUSED						ALL
	B20	UNUSED						ALL
D06220P		AE0219/ /		PLUG-E8				ALL
	A01	UNUSED						ALL
	A02	\$D	W1720	002R	22		26-11-11	ALL
	A03	\$D	W1720	003R	22		26-11-12	ALL
	A04	\$D	W1720	004R	22		26-11-21	ALL
	A05	\$D	W1720	005R	22		26-11-22	ALL
	A06	\$D	W1720	006R	22		26-15-11	ALL
	A07	\$D	W1720	007R	22		26-11-21	ALL
	A08	\$D	W1720	008R	22		26-11-22	ALL
	A09	\$D	W1720	009R	22		26-15-11	ALL
	A10	\$D	W1720	010	24		SPARE	ALL
	A11	\$D	W1720	011	24		SPARE	ALL
	A12	\$D	W1720	012R	24		26-16-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D06200

Page 35

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06220P		AE0219/ /		PLUG-E8 (continued)				ALL
	A13	\$D	W1720	013R	24		26-16-11	ALL
	A14	\$D	W1720	014R	24		26-16-11	ALL
	A15	\$D	W1720	015R	22		26-17-11	ALL
	A16	\$D	W1720	016	24		SPARE	ALL
	A17	\$D	W1720	017	24		SPARE	ALL
	A18	\$D	W1720	018	24		SPARE	ALL
	A19	\$D	W1720	019	24		SPARE	ALL
	A20	UNUSED						ALL
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04	UNUSED						ALL
	B05	UNUSED						ALL
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13	UNUSED						ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	B16	UNUSED						ALL
	B17	UNUSED						ALL
	B18	UNUSED						ALL
	B19	UNUSED						ALL
	B20	UNUSED						ALL
	CAP	Y	W1720	016	24		SPARE	ALL
	CAP	Y	W1720	017	24		SPARE	ALL
	CAP	Y	W1720	018	24		SPARE	ALL
	CAP	Y	W1720	019	24		SPARE	ALL
D06222J		AE0219/ /		RCPT-SHELL				ALL
	A01	\$D	W2002	HM01	24		99-99-99	050-099, 150-154, 275-276
	A01	\$D	W2002	HK01	24		SPARE	ALL
	A01	\$D	W2002	HM01	24		SPARE	155-199, 277-299
	A02	\$D	W2002	HK02	24		24-27-41	ALL
	A02	\$D	W2002	HM02	24		24-27-41	ALL
	A03	\$D	W2002	HK03	24		24-28-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D06200

Page 36

Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06222J		AE0219/ /		RCPT-SHELL (continued)				ALL
	A03	\$D	W2002	HM03	24		SPARE	ALL
	A04	\$D	W2002	HK04	24		24-28-11	ALL
	A04	\$D	W2002	HM04	24		24-28-11	ALL
	A05	\$D	W2002	HK05	24		49-71-11	ALL
	A05	\$D	W2002	HM05	24		49-71-11	ALL
	A06	\$D	W2002	HK06	24		SPARE	ALL
	A06	\$D	W2002	HM06	24		SPARE	ALL
	A07	\$D	W2002	HK07	24		49-73-11	ALL
	A07	\$D	W2002	HM07	24		49-73-11	ALL
	A08	\$D	W2002	HK08	24		SPARE	ALL
	A08	\$D	W2002	HM08	24		SPARE	ALL
	A09	\$D	W2002	HK09	24		24-34-11	ALL
	A09	\$D	W2002	HM09	24		SPARE	ALL
	A10	\$D	W2002	HK10	24		24-34-11	ALL
	A10	\$D	W2002	HM10	24		24-34-11	ALL
	A11	\$D	W2002	HK11	24		24-34-11	ALL
	A11	\$D	W2002	HM11	24		24-34-11	ALL
	A12	\$D	W2002	HK12	24		SPARE	ALL
	A12	\$D	W2002	HM12	24		SPARE	ALL
	A13	\$D	W2002	HK13	24		24-28-21	ALL
	A13	\$D	W2002	HM13	24		24-28-21	ALL
	A14	\$D	W2002	HK14	24		24-28-21	ALL
	A14	\$D	W2002	HM14	24		24-28-21	ALL
	A15	\$D	W2002	HK15	24		24-28-21	ALL
	A15	\$D	W2002	HM15	24		24-28-21	ALL
	A16	\$D	W2002	HK16	24		SPARE	ALL
	A16	\$D	W2002	HM16	24		SPARE	ALL
	A17	\$D	W2002	HK17	24		SPARE	ALL
	A17	\$D	W2002	HM17	24		SPARE	ALL
	A18	\$D	W2002	HK18	24		SPARE	ALL
	A18	\$D	W2002	HM18	24		SPARE	ALL
	A19	\$D	W2002	HK19	24		SPARE	050-099, 150-199
	A19	\$D	W2002	HM19	24		SPARE	050-099, 150-199
	A19	\$D	W2002	HK19	24		26-22-21	275-299
	A19	\$D	W2002	HM19	24		26-22-21	275-299
	A20	\$D	W2002	HK20	24		99-99-99	050-099, 150-154, 275-276
	A20	\$D	W2002	HM20	24		99-99-99	050-099, 150-154, 275-276
	A20	\$D	W2002	HK20	24		SPARE	155-199, 277-299
	A20	\$D	W2002	HM20	24		SPARE	155-199, 277-299
	B01	\$D	W2002	HN01	24		99-99-99	050-099, 150-154, 275-276

HOOKUP LIST

D280T132

91-21-51

Section D06200

Page 37

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06222J		AE0219/ /		RCPT-SHELL (continued)				ALL
	B01	\$D	W2002	HL01	24		SPARE	ALL
	B01	\$D	W2002	HN01	24		SPARE	155-199, 277-299
	B02	\$D	W2002	HL02	24		26-21-11	ALL
	B02	\$D	W2002	HN02	24		26-21-11	ALL
	B03	\$D	W2002	HL03	24		26-16-21	ALL
	B03	\$D	W2002	HN03	24		26-16-21	ALL
	B04	\$D	W2002	HL04	24		28-25-21	ALL
	B04	\$D	W2002	HN04	24		28-25-21	ALL
	B05	\$D	W2002	HL05	24		SPARE	ALL
	B05	\$D	W2002	HN05	24		SPARE	ALL
	B06	\$D	W2002	HL06	24		SPARE	ALL
	B06	\$D	W2002	HN06	24		SPARE	ALL
	B07	\$D	W2002	HL07	24		36-11-41	ALL
	B07	\$D	W2002	HN07	24		36-11-41	ALL
	B08	\$D	W2002	HL08	24		49-61-11	ALL
	B08	\$D	W2002	HN08	24		49-61-11	ALL
	B09	\$D	W2002	HL09	24		49-61-11	ALL
	B09	\$D	W2002	HN09	24		49-61-11	ALL
	B10	\$D	W2002	HL10	24		26-22-21	ALL
	B10	\$D	W2002	HN10	24		26-22-21	ALL
	B11	\$D	W2002	HL11	24		26-23-11	ALL
	B11	\$D	W2002	HN11	24		26-23-11	ALL
	B12	\$D	W2002	HL12	24		49-15-11	ALL
	B12	\$D	W2002	HN12	24		49-15-11	ALL
	B13	\$D	W2002	HL13	24		SPARE	ALL
	B13	\$D	W2002	HN13	24		SPARE	ALL
	B14	\$D	W2002	HL14	24		SPARE	ALL
	B14	\$D	W2002	HN14	24		SPARE	ALL
	B15	\$D	W2002	HL15	24		SPARE	ALL
	B15	\$D	W2002	HN15	24		SPARE	ALL
	B16	\$D	W2002	HL16	24		SPARE	ALL
	B16	\$D	W2002	HN16	24		SPARE	ALL
	B17	\$D	W2002	HL17	24		SPARE	ALL
	B17	\$D	W2002	HN17	24		SPARE	ALL
	B18	\$D	W2002	HL18	24		31-41-35	ALL
	B18	\$D	W2002	HN18	24		31-41-35	ALL
	B19	\$D	W2002	HL19	24		31-41-35	ALL
	B19	\$D	W2002	HN19	24		31-41-35	ALL
	B20	\$D	W2002	HL20	24		99-99-99	050-099, 150-154, 275-276
	B20	\$D	W2002	HN20	24		99-99-99	050-099, 150-154, 275-276

HOOKUP LIST

D280T132

91-21-51

Section D06200

Page 38

Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06222J		AE0219/ /		RCPT-SHELL (continued)				ALL
	B20	\$D	W2002	HL20	24		SPARE	155-199, 277-299
	B20	\$D	W2002	HN20	24		SPARE	155-199, 277-299
D06222P		AE0219/ /		PLUG-E8				ALL
	A01	UNUSED						ALL
	A02	\$D	W1722	002	24		24-27-41	ALL
	A03	\$D	W1722	003	24		24-28-11	ALL
	A04	\$D	W1722	004	24		24-28-11	ALL
	A05	\$D	W1722	005	24		49-71-11	ALL
	A06	\$D	W1722	006	24		SPARE	050-099, 275-299
	A06	\$D	W1722	006	24		49-94-11	150-199
	A07	\$D	W1722	007	24		49-73-11	ALL
	A08	\$D	W1722	008	24		SPARE	ALL
	A09	\$D	W1722	009	24		24-34-11	ALL
	A10	\$D	W1722	201R	24		24-34-11	ALL
	A11	\$D	W1722	201B	24		24-34-11	ALL
	A12	\$D	W1722	012	24		SPARE	ALL
	A13	\$D	W1722	013	24		24-28-21	ALL
	A14	\$D	W1722	014	24		24-28-21	ALL
	A15	\$D	W1722	015	24		24-28-21	ALL
	A16	\$D	W1722	016	24		SPARE	ALL
	A17	\$D	W1722	017	24		SPARE	ALL
	A18	\$D	W1722	018	24		SPARE	ALL
	A19	\$D	W1722	019	24		SPARE	050-099
	A19	\$D	W1722	019R	22		SPARE	150-199
	A19	\$D	W1722	019R	22		26-22-21	275-299
	A20	UNUSED						ALL
	B01	UNUSED						ALL
	B02	\$D	W1722	022R	22		26-21-11	ALL
	B03	\$D	W1722	023	24		26-16-21	ALL
	B04	\$D	W1722	024	24		28-25-21	ALL
	B05	UNUSED						ALL
	B06	\$D	W1722	026	24		SPARE	ALL
	B07	\$D	W1722	027	24		36-11-41	ALL
	B08	\$D	W1722	028	24		49-61-11	ALL
	B09	\$D	W1722	029	24		49-61-11	ALL
	B10	\$D	W1722	030R	22		26-22-21	ALL
	B11	\$D	W1722	031R	22		26-23-11	ALL
	B12	\$D	W1722	032	24		49-15-11	ALL
	B13	\$D	W1722	203B	24		SPARE	050-099, 275-299

HOOKUP LIST

D280T132

91-21-51

Section D06200

Page 39

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06222P		AE0219/ /		PLUG-E8 (continued)				ALL
	B13	\$D	W1722	033	24		SPARE	150-199
	B14	\$D	W1722	203R	24		SPARE	050-099, 275-299
	B14	\$D	W1722	034	24		SPARE	150-199
	B15	\$D	W1722	035	24		SPARE	ALL
	B16	\$D	W1722	036	24		SPARE	ALL
	B17	\$D	W1722	FRC			31-41-35	ALL
	B18	\$D	W1722	204B	24		31-41-35	ALL
	B19	\$D	W1722	204R	24		31-41-35	ALL
	B20	\$D	W1722	FRD			31-41-35	ALL
	CAP	Y	W1722	019	24		SPARE	050-099
	CAP	Y	W1722	018	24		SPARE	ALL
	CAP	Y	W1722	036	24		SPARE	ALL
	CAP	Y	W1722	006	24		49-94-11	150-199
	CAP	Y	W1722	033	24		SPARE	150-199
	CAP	Y	W1722	034	24		SPARE	150-199
	CAP	Y	W1722	006	24		SPARE	275-299
	CAP	Y	W1722	203B	24		SPARE	275-299
	CAP	Y	W1722	203R	24		SPARE	275-299
			W1722	204Z			31-41-35	ALL
			W1722	FRC			31-41-35	ALL
			W1722	FRD			31-41-35	ALL
D06223J		AE0322/ /		RCPT-E2-3				ALL
	1		W0691	057	22		SPARE	050-099
	1	UNUSED						150-199, 275-299
	2		W0691	058	24		34-61-15	ALL
	3		W0691	059	24		34-61-15	ALL
	4		W0691	212R	24		34-61-15	ALL
	5		W0691	212B	24		34-61-15	ALL
	6		W0691	212Z			34-61-15	ALL
	7		W0691	213R	24		34-61-15	ALL
	8		W0691	213B	24		34-61-15	ALL
	9		W0691	213Z			34-61-15	ALL
	10		W0691	060	24		34-61-15	ALL
	11		W0691	061	24		34-61-15	ALL
	12		W0691	214R	24		34-61-15	ALL
	13		W0691	214B	24		34-61-15	ALL
	14		W0691	214Z			34-61-15	ALL
	15	UNUSED						ALL
	16	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D06200

Page 40

Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06223J		AE0322/ /		RCPT-E2-3 (continued)				ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D06200

Page 41

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06223P		AE0322/ /		PLUG-E2-3				ALL
	1	UNUSED						ALL
	2		W0135	847	24		34-61-15	ALL
	3		W0135	848	24		34-61-15	ALL
	4		W0135	844R	24		34-61-15	ALL
	5		W0135	844B	24		34-61-15	ALL
	6		W0135	844Z			34-61-15	ALL
	7		W0135	845R	24		34-61-15	ALL
	8		W0135	845B	24		34-61-15	ALL
	9		W0135	845Z			34-61-15	ALL
	10		W0135	849	24		34-61-15	ALL
	11		W0135	850	24		34-61-15	ALL
	12		W0135	846R	24		34-61-15	ALL
	13		W0135	846B	24		34-61-15	ALL
	14		W0135	846Z			34-61-15	ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D06200

Page 42

Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06223P		AE0322/ /		PLUG-E2-3 (continued)				ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
D06224J		AE0219/ /		RCPT-SHELL				ALL
	A01	\$D	W2002	DK01	24		SPARE	ALL
	A01	\$D	W2002	DM01	24		99-99-99	ALL
	A02	\$D	W2002	DK02	24		32-61-14	ALL
	A02	\$D	W2002	DM02	24		32-61-14	ALL
	A03	\$D	W2002	DK03	24		SPARE	ALL
	A03	\$D	W2002	DM03	24		SPARE	ALL
	A04	\$D	W2002	DK04	24		SPARE	050-099
	A04	\$D	W2002	DM04	24		SPARE	050-099
	A04	\$D	W2002	DK04	24		32-71-11	150-199, 275-299
	A04	\$D	W2002	DM04	24		32-71-11	150-199, 275-299
	A05	\$D	W2002	DK05	24		32-61-14	ALL
	A05	\$D	W2002	DM05	24		32-61-14	ALL
	A06	\$D	W2002	DK06	24		32-61-14	ALL
	A06	\$D	W2002	DM06	24		32-61-14	ALL
	A07	\$D	W2002	DK07	24		32-61-14	ALL
	A07	\$D	W2002	DM07	24		32-61-14	ALL
	A08	\$D	W2002	DK08	24		32-61-14	ALL
	A08	\$D	W2002	DM08	24		32-61-14	ALL
	A09	\$D	W2002	DK09	24		32-61-14	ALL
	A09	\$D	W2002	DM09	24		32-61-14	ALL
	A10	\$D	W2002	DK10	24		32-61-14	ALL
	A10	\$D	W2002	DM10	24		32-61-14	ALL
	A11	\$D	W2002	DK11	24		32-61-14	ALL

HOOKUP LIST

D280T132

91-21-51

Section D06200

Page 43

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06224J		AE0219/ /		RCPT-SHELL (continued)				ALL
	A11	\$D	W2002	DM11	24		32-61-14	ALL
	A12	\$D	W2002	DK12	24		SPARE	050-099
	A12	\$D	W2002	DM12	24		SPARE	050-099
	A12	\$D	W2002	DK12	24		52-71-12	150-199, 275-299
	A12	\$D	W2002	DM12	24		52-71-12	150-199, 275-299
	A13	\$D	W2002	DK13	24		SPARE	050-099
	A13	\$D	W2002	DM13	24		SPARE	050-099
	A13	\$D	W2002	DK13	24		52-71-12	150-199, 275-299
	A13	\$D	W2002	DM13	24		52-71-12	150-199, 275-299
	A14	\$D	W2002	DK14	24		78-36-21	ALL
	A14	\$D	W2002	DM14	24		78-36-21	ALL
	A15	\$D	W2002	DK15	24		78-36-21	ALL
	A15	\$D	W2002	DM15	24		78-36-21	ALL
	A16	\$D	W2002	DK16	24		32-61-14	ALL
	A16	\$D	W2002	DM16	24		32-61-14	ALL
	A17	\$D	W2002	DK17	24		32-61-14	ALL
	A17	\$D	W2002	DM17	24		32-61-14	ALL
	A18	\$D	W2002	DK18	24		32-61-14	ALL
	A18	\$D	W2002	DM18	24		32-61-14	ALL
	A19	\$D	W2002	DK19	24		SPARE	ALL
	A19	\$D	W2002	DM19	24		SPARE	ALL
	A20	\$D	W2002	DK20	24		99-99-99	050-099, 150-154, 275-276
	A20	\$D	W2002	DM20	24		99-99-99	050-099, 150-154, 275-276
	A20	\$D	W2002	DK20	24		SPARE	155-199, 277-299
	A20	\$D	W2002	DM20	24		SPARE	155-199, 277-299
	B01	\$D	W2002	DL01	24		SPARE	ALL
	B01	\$D	W2002	DN01	24		99-99-99	ALL
	B02	\$D	W2002	DL02	24		52-71-11	ALL
	B02	\$D	W2002	DN02	24		52-71-11	ALL
	B03	\$D	W2002	DL03	24		52-71-11	ALL
	B03	\$D	W2002	DN03	24		52-71-11	ALL
	B04	\$D	W2002	DL04	24		52-71-13	ALL
	B04	\$D	W2002	DN04	24		52-71-13	ALL
	B05	\$D	W2002	DL05	24		52-71-11	ALL
	B05	\$D	W2002	DN05	24		52-71-11	ALL
	B06	\$D	W2002	DL06	24		52-71-11	ALL
	B06	\$D	W2002	DN06	24		52-71-11	ALL
	B07	\$D	W2002	DL07	24		52-71-12	ALL
	B07	\$D	W2002	DN07	24		52-71-12	ALL
	B08	\$D	W2002	DL08	24		52-71-12	ALL

HOOKUP LIST

D280T132

91-21-51

Section D06200

Page 44

Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06224J		AE0219/ /		RCPT-SHELL (continued)				ALL
	B08	\$D	W2002	DN08	24		52-71-12	ALL
	B09	\$D	W2002	DL09	24		52-71-12	ALL
	B09	\$D	W2002	DN09	24		52-71-12	ALL
	B10	\$D	W2002	DL10	24		52-71-12	ALL
	B10	\$D	W2002	DN10	24		52-71-12	ALL
	B11	\$D	W2002	DL11	24		52-71-14	ALL
	B11	\$D	W2002	DN11	24		52-71-14	ALL
	B12	\$D	W2002	DL12	24		52-71-14	ALL
	B12	\$D	W2002	DN12	24		52-71-14	ALL
	B13	\$D	W2002	DL13	24		52-71-13	ALL
	B13	\$D	W2002	DN13	24		52-71-13	ALL
	B14	\$D	W2002	DL14	24		52-71-13	ALL
	B14	\$D	W2002	DN14	24		52-71-13	ALL
	B15	\$D	W2002	DL15	24		27-88-11	ALL
	B15	\$D	W2002	DN15	24		27-88-11	ALL
	B16	\$D	W2002	DL16	24		27-88-11	ALL
	B16	\$D	W2002	DN16	24		27-88-11	ALL
	B17	\$D	W2002	DL17	24		SPARE	ALL
	B17	\$D	W2002	DN17	24		SPARE	ALL
	B18	\$D	W2002	DL18	24		SPARE	ALL
	B18	\$D	W2002	DN18	24		SPARE	ALL
	B19	\$D	W2002	DL19	24		SPARE	ALL
	B19	\$D	W2002	DN19	24		SPARE	ALL
	B20	\$D	W2002	DL20	24		99-99-99	050-099, 150-154, 275-276
	B20	\$D	W2002	DN20	24		99-99-99	050-099, 150-154, 275-276
	B20	\$D	W2002	DL20	24		SPARE	155-199, 277-299
	B20	\$D	W2002	DN20	24		SPARE	155-199, 277-299
D06224P		AE0219/ /		PLUG-E8				ALL
	A01	UNUSED						ALL
	A02	\$D	W1724	002	24		32-61-14	ALL
	A03	UNUSED						ALL
	A04	\$D	W1724	004	24		SPARE	050-099
	A04	\$D	W1724	004	24		32-71-11	150-199, 275-299
	A05	\$D	W1724	005	24		32-61-14	ALL
	A06	\$D	W1724	006	24		32-61-14	ALL
	A07	\$D	W1724	007	24		32-61-14	ALL
	A08	\$D	W1724	008	24		32-61-14	ALL
	A09	\$D	W1724	009	24		32-61-14	ALL
	A10	\$D	W1724	010	24		32-61-14	ALL

HOOKUP LIST

D280T132

91-21-51

Section D06200

Page 45

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06224P		AE0219/ /		PLUG-E8 (continued)				ALL
	A11	\$D	W1724	011	24		32-61-14	ALL
	A12	\$D	W1724	012	24		SPARE	050-099
	A12	\$D	W1724	012	24		52-71-12	150-199, 275-299
	A13	\$D	W1724	013	24		SPARE	050-099
	A13	\$D	W1724	013	24		52-71-12	150-199, 275-299
	A14	\$D	W1724	014	24		78-36-21	ALL
	A15	\$D	W1724	015	24		78-36-21	ALL
	A16	\$D	W1724	016	24		32-61-14	ALL
	A17	\$D	W1724	017	24		32-61-14	ALL
	A18	\$D	W1724	018	24		32-61-14	ALL
	A19	\$D	W1724	019	24		SPARE	ALL
	A20	UNUSED						ALL
	B01	UNUSED						ALL
	B02	\$D	W1724	022	24		52-71-11	ALL
	B03	\$D	W1724	023	24		52-71-11	ALL
	B04	\$D	W1724	024	24		52-71-13	ALL
	B05	\$D	W1724	025	24		52-71-11	ALL
	B06	\$D	W1724	026	24		52-71-11	ALL
	B07	\$D	W1724	027	24		52-71-12	ALL
	B08	\$D	W1724	028	24		52-71-12	ALL
	B09	\$D	W1724	029	24		52-71-12	ALL
	B10	\$D	W1724	030	24		52-71-12	ALL
	B11	\$D	W1724	031	24		52-71-14	ALL
	B12	\$D	W1724	032	24		52-71-14	ALL
	B13	\$D	W1724	033	24		52-71-13	ALL
	B14	\$D	W1724	034	24		52-71-13	ALL
	B15	\$D	W1724	035	24		27-88-11	ALL
	B16	\$D	W1724	036	24		27-88-11	ALL
	B17	\$D	W1724	037	24		SPARE	ALL
	B18	\$D	W1724	038	24		SPARE	ALL
	B19	\$D	W1724	039	24		SPARE	ALL
	B20	UNUSED						ALL
D06225J		AF0204/ /		RCPT-				ALL
	1	UNUSED						ALL
	2		W0065	111	24		34-61-15	ALL
	3		W0065	112	24		34-61-15	ALL
	4		W0065	234R	24		34-61-15	ALL
	5		W0065	234B	24		34-61-15	ALL
	6		W0065	234Z			34-61-15	ALL

HOOKUP LIST
D280T132

91-21-51
Section D06200
Page 46
Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06225J		AF0204/ /		RCPT- (continued)				ALL
	7		W0065	235R	24		34-61-15	ALL
	8		W0065	235B	24		34-61-15	ALL
	9		W0065	235Z			34-61-15	ALL
	10		W0065	098	24		34-61-15	ALL
	11		W0065	099	24		34-61-15	ALL
	12		W0065	237R	24		34-61-15	ALL
	13		W0065	237B	24		34-61-15	ALL
	14		W0065	237Z			34-61-15	ALL
	15	UNUSED						ALL
	16	UNUSED						050-099, 151-152, 275-299
	16		W0065	901R	22		23-25-13	150, 153-199
	17	UNUSED						050-099, 151-152, 275-299
	17		W0065	901B	22		23-25-13	150, 153-199
	18	UNUSED						050-099, 151-152, 275-299
	18		W0065	FRJ			23-25-13	150, 153-199
	19	UNUSED						050-099, 151-152, 275-299
	19		W0065	903	22		23-25-13	150, 153-199
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D06200

Page 47

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06225J		AF0204/ /		RCPT- (continued)				ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
			W0065	901	20		23-25-13	150, 153-199
			W0065	901Z			23-25-13	150, 153-199
			W0065	FRJ			23-25-13	150, 153-199
D06225P		AF0204/ /		PLUG-P61				ALL
	1		W0691	057	22		SPARE	050-099
	1	UNUSED						150-199, 275-299
	2		W0691	058	24		34-61-15	ALL
	3		W0691	059	24		34-61-15	ALL
	4		W0691	212R	24		34-61-15	ALL
	5		W0691	212B	24		34-61-15	ALL
	6		W0691	212F	20		34-61-15	ALL
	7		W0691	213R	24		34-61-15	ALL
	8		W0691	213B	24		34-61-15	ALL
	9		W0691	213F	20		34-61-15	ALL
	10		W0691	060	24		34-61-15	ALL
	11		W0691	061	24		34-61-15	ALL
	12		W0691	214R	24		34-61-15	ALL
	13		W0691	214B	24		34-61-15	ALL
	14		W0691	214F	20		34-61-15	ALL
	15	UNUSED						ALL
	16	UNUSED						050-099, 151-152, 275-299
	16		W9013	210R	22		23-25-13	150, 153-199
	17	UNUSED						050-099, 151-152, 275-299
	17		W9013	210B	22		23-25-13	150, 153-199
	18	UNUSED						050-099, 151-152, 275-299
	18		W9013	210Z			23-25-13	150, 153-199

HOOKUP LIST
D280T132

91-21-51
Section D06200
Page 48
Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06225P		AF0204/ /		PLUG-P61 (continued)				ALL
	19	UNUSED						050-099, 151-152, 275-299
	19		W9013	209	22		23-25-13	150, 153-199
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
	REF		W0691	212	20		34-61-15	050-099
	REF		W0691	212F	20		34-61-15	050-099

HOOKUP LIST

D280T132

91-21-51

Section D06200

Page 49

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06225P		AF0204/ /		PLUG-P61 (continued)				ALL
	REF		W0691	212Z			34-61-15	050-099
	REF		W0691	213	20		34-61-15	050-099
	REF		W0691	213F	20		34-61-15	050-099
	REF		W0691	213Z			34-61-15	050-099
			W0691	214	20		34-61-15	ALL
			W0691	214F	20		34-61-15	ALL
			W0691	214Z			34-61-15	ALL
			W0691	212	20		34-61-15	150-199, 275-299
			W0691	212F	20		34-61-15	150-199, 275-299
			W0691	212Z			34-61-15	150-199, 275-299
			W0691	213	20		34-61-15	150-199, 275-299
			W0691	213F	20		34-61-15	150-199, 275-299
			W0691	213Z			34-61-15	150-199, 275-299
D06226J		AE0219/ /		RCPT-SHELL				ALL
	A01	\$D	W2002	BM01	24		99-99-99	050-099, 150-154, 275-276
	A01	\$D	W2002	BK01	24		SPARE	ALL
	A01	\$D	W2002	BM01	24		SPARE	155-199, 277-299
	A02	\$D	W2002	BK02	24		28-41-11	ALL
	A02	\$D	W2002	BM02	24		28-41-11	ALL
	A03	\$D	W2002	BK03	24		27-51-41	ALL
	A03	\$D	W2002	BM03	24		27-51-41	ALL
	A04	\$D	W2002	BK04	24		27-51-51	ALL
	A04	\$D	W2002	BM04	24		27-51-51	ALL
	A05	\$D	W2002	BK05	24		27-58-31	ALL
	A05	\$D	W2002	BM05	24		27-58-31	ALL
	A06	\$D	W2002	BK06	24		SPARE	ALL
	A06	\$D	W2002	BM06	24		77-31-11	ALL
	A07	\$D	W2002	BK07	24		77-31-11	ALL
	A07	\$D	W2002	BM07	24		77-31-11	ALL
	A08	\$D	W2002	BK08	24		77-31-11	ALL
	A08	\$D	W2002	BM08	24		77-31-11	ALL
	A09	\$D	W2002	BK09	24		SPARE	ALL
	A09	\$D	W2002	BM09	24		77-31-11	ALL
	A10	\$D	W2002	BK10	24		32-46-11	ALL
	A10	\$D	W2002	BM10	24		32-46-11	ALL
	A11	\$D	W2002	BK11	24		32-46-11	ALL
	A11	\$D	W2002	BM11	24		32-46-11	ALL
	A12	\$D	W2002	BK12	24		32-46-11	ALL
	A12	\$D	W2002	BM12	24		32-46-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D06200

Page 50

Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06226J		AE0219/ /		RCPT-SHELL (continued)				ALL
	A13	\$D	W2002	BK13	24		32-46-11	ALL
	A13	\$D	W2002	BM13	24		32-46-11	ALL
	A14	\$D	W2002	BK14	24		32-46-11	ALL
	A14	\$D	W2002	BM14	24		32-46-11	ALL
	A15	\$D	W2002	BK15	24		32-46-11	ALL
	A15	\$D	W2002	BM15	24		32-46-11	ALL
	A16	\$D	W2002	BK16	24		32-46-11	ALL
	A16	\$D	W2002	BM16	24		32-46-11	ALL
	A17	\$D	W2002	BK17	24		32-46-11	ALL
	A17	\$D	W2002	BM17	24		32-46-11	ALL
	A18	\$D	W2002	BK18	24		32-46-11	ALL
	A18	\$D	W2002	BM18	24		32-46-11	ALL
	A19	\$D	W2002	BK19	24		28-41-13	ALL
	A19	\$D	W2002	BM19	24		28-41-13	ALL
	A20	\$D	W2002	BK20	24		99-99-99	050-099, 150-154, 275-276
	A20	\$D	W2002	BM20	24		99-99-99	050-099, 150-154, 275-276
	A20	\$D	W2002	BK20	24		SPARE	155-199, 277-299
	A20	\$D	W2002	BM20	24		SPARE	155-199, 277-299
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04	UNUSED						ALL
	B05	UNUSED						ALL
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13	UNUSED						ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	B16	UNUSED						ALL
	B17	UNUSED						ALL
	B18	UNUSED						ALL
	B19	UNUSED						ALL
	B20	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D06200

Page 51

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06226P		AE0219/ /		PLUG-E8				ALL
	A01	UNUSED						ALL
	A02	\$D	W1726	002	24		28-41-11	ALL
	A03	\$D	W1726	003	24		27-51-41	ALL
	A04	\$D	W1726	004	24		27-51-51	ALL
	A05	\$D	W1726	005	24		27-58-31	ALL
	A06	\$D	W1726	FRA			77-31-11	ALL
	A07	\$D	W1726	201R	24		77-31-11	ALL
	A08	\$D	W1726	201B	24		77-31-11	ALL
	A09	\$D	W1726	FRB			77-31-11	ALL
	A10	\$D	W1726	010	24		32-46-11	ALL
	A11	\$D	W1726	011	24		32-46-11	ALL
	A12	\$D	W1726	012	24		32-46-11	ALL
	A13	\$D	W1726	013	24		32-46-11	ALL
	A14	\$D	W1726	014	24		32-46-11	ALL
	A15	\$D	W1726	015	24		32-46-11	ALL
	A16	\$D	W1726	016	24		32-46-11	ALL
	A17	\$D	W1726	017	24		32-46-11	ALL
	A18	\$D	W1726	018	24		32-46-11	ALL
	A19	\$D	W1726	019	24		28-41-13	ALL
	A20	UNUSED						ALL
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04	UNUSED						ALL
	B05	UNUSED						ALL
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13	UNUSED						ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	B16	UNUSED						ALL
	B17	UNUSED						ALL
	B18	UNUSED						ALL
	B19	UNUSED						ALL
	B20	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D06200

Page 52

Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06226P		AE0219/ /		PLUG-E8 (continued)				ALL
			W1726	201Z			77-31-11	ALL
			W1726	FRA			77-31-11	ALL
			W1726	FRB			77-31-11	ALL
D06228J		AE0219/ /		RCPT-SHELL				ALL
	A01	\$D	W2000	SK01	24		99-99-99	ALL
	A01	\$D	W2000	SM01	24		SPARE	ALL
	A02	\$D	W2000	SK02	24		32-61-14	ALL
	A02	\$D	W2000	SM02	24		32-61-14	ALL
	A03	\$D	W2000	SK03	24		SPARE	ALL
	A03	\$D	W2000	SM03	24		SPARE	ALL
	A04	\$D	W2000	SK04	24		SPARE	ALL
	A04	\$D	W2000	SM04	24		SPARE	ALL
	A05	\$D	W2000	SK05	24		32-61-14	ALL
	A05	\$D	W2000	SM05	24		32-61-14	ALL
	A06	\$D	W2000	SK06	24		32-61-14	ALL
	A06	\$D	W2000	SM06	24		32-61-14	ALL
	A07	\$D	W2000	SK07	24		32-61-14	ALL
	A07	\$D	W2000	SM07	24		32-61-14	ALL
	A08	\$D	W2000	SK08	24		32-61-14	ALL
	A08	\$D	W2000	SM08	24		32-61-14	ALL
	A09	\$D	W2000	SK09	24		32-61-14	ALL
	A09	\$D	W2000	SM09	24		32-61-14	ALL
	A10	\$D	W2000	SK10	24		32-61-14	ALL
	A10	\$D	W2000	SM10	24		32-61-14	ALL
	A11	\$D	W2000	SK11	24		32-61-14	ALL
	A11	\$D	W2000	SM11	24		32-61-14	ALL
	A12	\$D	W2000	SK12	24		32-61-14	ALL
	A12	\$D	W2000	SM12	24		32-61-14	ALL
	A13	\$D	W2000	SK13	24		SPARE	ALL
	A13	\$D	W2000	SM13	24		SPARE	ALL
	A14	\$D	W2000	SK14	24		SPARE	ALL
	A14	\$D	W2000	SM14	24		SPARE	ALL
	A15	\$D	W2000	SK15	24		SPARE	ALL
	A15	\$D	W2000	SM15	24		SPARE	ALL
	A16	\$D	W2000	SK16	24		SPARE	ALL
	A16	\$D	W2000	SM16	24		SPARE	ALL
	A17	\$D	W2000	SK17	24		SPARE	ALL
	A17	\$D	W2000	SM17	24		77-12-12	ALL
	A18	\$D	W2000	SK18	24		77-12-12	ALL

HOOKUP LIST

D280T132

91-21-51

Section D06200

Page 53

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06228J		AE0219/ /		RCPT-SHELL (continued)				ALL
	A18	\$D	W2000	SM18	24		77-12-12	ALL
	A19	\$D	W2000	SK19	24		77-12-12	ALL
	A19	\$D	W2000	SM19	24		77-12-12	ALL
	A20	\$D	W2000	SK20	24		99-99-99	ALL
	A20	\$D	W2000	SM20	24		99-99-99	ALL
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04	UNUSED						ALL
	B05	UNUSED						ALL
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13	UNUSED						ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	B16	UNUSED						ALL
	B17	UNUSED						ALL
	B18	UNUSED						ALL
	B19	UNUSED						ALL
	B20	UNUSED						ALL
D06228P		242/169/L 58		PLUG-E8				ALL
	A01	UNUSED						ALL
	A02	\$D	W1728	002	24		32-61-14	ALL
	A03	\$D	W1728	003	24		SPARE	ALL
	A04	\$D	W1728	004	24		SPARE	ALL
	A05	\$D	W1728	005	24		32-61-14	ALL
	A06	\$D	W1728	006	24		32-61-14	ALL
	A07	\$D	W1728	007	24		32-61-14	ALL
	A08	\$D	W1728	008	24		32-61-14	ALL
	A09	\$D	W1728	009	24		32-61-14	ALL
	A10	\$D	W1728	010	24		32-61-14	ALL
	A11	\$D	W1728	011	24		32-61-14	ALL
	A12	\$D	W1728	012	24		32-61-14	ALL
	A13	\$D	W1728	013	24		SPARE	ALL

HOOKUP LIST

D280T132

91-21-51

Section D06200

Page 54

Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06228P		242/169/L 58		PLUG-E8 (continued)				ALL
	A14	\$D	W1728	014	24		SPARE	ALL
	A15	\$D	W1728	015	24		SPARE	ALL
	A16	\$D	W1728	016	24		SPARE	ALL
	A17	\$D	W1728	202Z			77-12-12	ALL
	A18	\$D	W1728	202B	24		77-12-12	ALL
	A19	\$D	W1728	202R	24		77-12-12	ALL
	A20	UNUSED						ALL
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04	UNUSED						ALL
	B05	UNUSED						ALL
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13	UNUSED						ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	B16	UNUSED						ALL
	B17	UNUSED						ALL
	B18	UNUSED						ALL
	B19	UNUSED						ALL
	B20	UNUSED						ALL
	CAP	Y	W1728	015	24		SPARE	ALL
	CAP	Y	W1728	016	24		SPARE	ALL
D06230J		AE0219/ /		RCPT-SHELL				ALL
	A01	\$D	W2000	QK01	24		99-99-99	ALL
	A01	\$D	W2000	QM01	24		SPARE	ALL
	A02	\$D	W2000	QK02	24		78-36-21	ALL
	A02	\$D	W2000	QM02	24		78-36-21	ALL
	A03	\$D	W2000	QK03	24		30-31-11	ALL
	A03	\$D	W2000	QM03	24		30-31-11	ALL
	A04	\$D	W2000	QK04	24		30-31-11	ALL
	A04	\$D	W2000	QM04	24		30-31-11	ALL
	A05	\$D	W2000	QK05	24		30-31-13	ALL

HOOKUP LIST

D280T132

91-21-51

Section D06200

Page 55

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06230J		AE0219/ /		RCPT-SHELL (continued)				ALL
	A05	\$D	W2000	QM05	24		30-31-13	ALL
	A06	\$D	W2000	QK06	24		30-31-13	ALL
	A06	\$D	W2000	QM06	24		30-31-13	ALL
	A07	\$D	W2000	QK07	24		30-32-11	ALL
	A07	\$D	W2000	QM07	24		30-32-11	ALL
	A08	\$D	W2000	QK08	24		SPARE	ALL
	A08	\$D	W2000	QM08	24		SPARE	ALL
	A09	\$D	W2000	QK09	24		30-33-11	ALL
	A09	\$D	W2000	QM09	24		30-33-11	ALL
	A10	\$D	W2000	QK10	24		SPARE	ALL
	A10	\$D	W2000	QM10	24		SPARE	ALL
	A11	\$D	W2000	QK11	24		28-42-11	ALL
	A11	\$D	W2000	QM11	24		28-42-11	ALL
	A12	\$D	W2000	QK12	24		30-11-11	ALL
	A12	\$D	W2000	QM12	24		30-11-11	ALL
	A13	\$D	W2000	QK13	24		30-11-11	ALL
	A13	\$D	W2000	QM13	24		30-11-11	ALL
	A14	\$D	W2000	QK14	24		30-11-11	ALL
	A14	\$D	W2000	QM14	24		30-11-11	ALL
	A15	\$D	W2000	QK15	24		30-11-11	ALL
	A15	\$D	W2000	QM15	24		30-11-11	ALL
	A16	\$D	W2000	QK16	24		21-44-21	ALL
	A16	\$D	W2000	QM16	24		21-44-21	ALL
	A17	\$D	W2000	QK17	24		28-42-12	ALL
	A17	\$D	W2000	QM17	24		28-42-12	ALL
	A18	\$D	W2000	QK18	24		27-51-11	ALL
	A18	\$D	W2000	QM18	24		27-51-11	ALL
	A19	\$D	W2000	QK19	24		SPARE	ALL
	A19	\$D	W2000	QM19	24		SPARE	ALL
	A20	\$D	W2000	QK20	24		99-99-99	ALL
	A20	\$D	W2000	QM20	24		99-99-99	ALL
	B01	\$D	W2000	QL01	24		99-99-99	ALL
	B01	\$D	W2000	QN01	24		SPARE	ALL
	B02	\$D	W2000	QL02	24		30-81-11	050-099, 150-199
	B02	\$D	W2000	QN02	24		30-81-11	050-099, 150-199
	B02	\$D	W2000	QL02	24		SPARE	275-299
	B02	\$D	W2000	QN02	24		SPARE	275-299
	B03	\$D	W2000	QL03	24		30-81-11	050-099, 150-199
	B03	\$D	W2000	QN03	24		30-81-11	050-099, 150-199
	B03	\$D	W2000	QL03	24		SPARE	275-299

HOOKUP LIST

D280T132

91-21-51

Section D06200

Page 56

Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06230J		AE0219/ /		RCPT-SHELL (continued)				ALL
	B03	\$D	W2000	QN03	24		SPARE	275-299
	B04	\$D	W2000	QL04	24		28-22-31	ALL
	B04	\$D	W2000	QN04	24		28-22-31	ALL
	B05	\$D	W2000	QL05	24		28-22-31	ALL
	B05	\$D	W2000	QN05	24		28-22-31	ALL
	B06	\$D	W2000	QL06	24		SPARE	ALL
	B06	\$D	W2000	QN06	24		SPARE	ALL
	B07	\$D	W2000	QL07	24		SPARE	ALL
	B07	\$D	W2000	QN07	24		SPARE	ALL
	B08	\$D	W2000	QL08	24		SPARE	ALL
	B08	\$D	W2000	QN08	24		SPARE	ALL
	B09	\$D	W2000	QL09	24		SPARE	ALL
	B09	\$D	W2000	QN09	24		SPARE	ALL
	B10	\$D	W2000	QL10	24		SPARE	ALL
	B10	\$D	W2000	QN10	24		SPARE	ALL
	B11	\$D	W2000	QL11	24		SPARE	ALL
	B11	\$D	W2000	QN11	24		SPARE	ALL
	B12	\$D	W2000	QL12	24		SPARE	ALL
	B12	\$D	W2000	QN12	24		SPARE	ALL
	B13	\$D	W2000	QL13	24		SPARE	ALL
	B13	\$D	W2000	QN13	24		SPARE	ALL
	B14	\$D	W2000	QL14	24		SPARE	ALL
	B14	\$D	W2000	QN14	24		SPARE	ALL
	B15	\$D	W2000	QL15	24		SPARE	ALL
	B15	\$D	W2000	QN15	24		SPARE	ALL
	B16	\$D	W2000	QL16	24		SPARE	ALL
	B16	\$D	W2000	QN16	24		SPARE	ALL
	B17	\$D	W2000	QL17	24		SPARE	ALL
	B17	\$D	W2000	QN17	24		SPARE	ALL
	B18	\$D	W2000	QL18	24		SPARE	ALL
	B18	\$D	W2000	QN18	24		SPARE	ALL
	B19	\$D	W2000	QL19	24		SPARE	ALL
	B19	\$D	W2000	QN19	24		SPARE	ALL
	B20	\$D	W2000	QL20	24		99-99-99	ALL
	B20	\$D	W2000	QN20	24		99-99-99	ALL
D06230P		242/169/L 58		PLUG-E8				ALL
	A01	UNUSED						ALL
	A02	\$D	W1730	002	24		78-36-21	ALL
	A03	\$D	W1730	003	24		30-31-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D06200

Page 57

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06230P		242/169/L 58		PLUG-E8 (continued)				ALL
	A04	\$D	W1730	004	24		30-31-11	ALL
	A05	\$D	W1730	005	24		30-31-13	ALL
	A06	\$D	W1730	006	24		30-31-13	ALL
	A07	\$D	W1730	007	24		30-32-11	ALL
	A08	UNUSED						050-099
	A08	\$D	W1730	008	24		SPARE	150-199, 275-299
	A09	\$D	W1730	009	24		30-33-11	ALL
	A10	UNUSED						050-099
	A10	\$D	W1730	010	24		SPARE	150-199, 275-299
	A11	\$D	W1730	011	24		28-42-11	ALL
	A12	\$D	W1730	012	24		30-11-11	ALL
	A13	\$D	W1730	013	24		30-11-11	ALL
	A14	\$D	W1730	014	24		30-11-11	ALL
	A15	\$D	W1730	015	24		30-11-11	ALL
	A16	\$D	W1730	016	24		21-44-21	ALL
	A17	\$D	W1730	017	24		28-42-12	ALL
	A18	\$D	W1730	018	24		27-51-11	ALL
	A19	\$D	W1730	019	24		SPARE	ALL
	A20	UNUSED						ALL
	B01	UNUSED						ALL
	B02	\$D	W1730	022	22		30-81-11	050-099, 150-199
	B02	UNUSED						275-299
	B03	\$D	W1730	023	22		30-81-11	050-099, 150-199
	B03	UNUSED						275-299
	B04	\$D	W1730	024	24		28-22-31	ALL
	B05	\$D	W1730	025	24		28-22-31	ALL
	B06	UNUSED						050-099, 155-199, 275-299
	B06	\$D	W1730	026	22		SPARE	150-154
	B07	UNUSED						050-099, 155-199, 275-299
	B07	\$D	W1730	027	22		SPARE	150-154
	B08	UNUSED						050-099, 155-199, 275-299
	B08	\$D	W1730	028	22		SPARE	150-154
	B09	UNUSED						050-099, 155-199, 275-299
	B09	\$D	W1730	029	22		SPARE	150-154
	B10	UNUSED						050-099, 155-199, 275-299
	B10	\$D	W1730	030	22		SPARE	150-154
	B11	UNUSED						050-099, 155-199, 275-299
	B11	\$D	W1730	031	22		SPARE	150-154
	B12	UNUSED						050-099, 155-199, 275-299
	B12	\$D	W1730	032	22		SPARE	150-154

HOOKUP LIST

D280T132

91-21-51

Section D06200

Page 58

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06230P		242/169/L 58		PLUG-E8 (continued)				ALL
	B13	UNUSED						050-099, 155-199, 275-299
	B13	\$D	W1730	033	22		SPARE	150-154
	B14	UNUSED						050-099, 155-199, 275-299
	B14		W1730	034	22		SPARE	150-154
	B15	UNUSED						050-099, 155-199, 275-299
	B15	\$D	W1730	035	22		SPARE	150-154
	B16	UNUSED						050-099, 155-199, 275-299
	B16	\$D	W1730	036	22		SPARE	150-154
	B17	UNUSED						050-099, 155-199, 275-299
	B17	\$D	W1730	037	22		SPARE	150-154
	B18	UNUSED						050-099, 155-199, 275-299
	B18	\$D	W1730	038	22		SPARE	150-154
	B19	UNUSED						050-099, 155-199, 275-299
	B19	\$D	W1730	039	22		SPARE	150-154
	B20	UNUSED						ALL
	CAP	Y	W1730	026	22		SPARE	150-154
	CAP	Y	W1730	027	22		SPARE	150-154
	CAP	Y	W1730	028	22		SPARE	150-154
	CAP	Y	W1730	029	22		SPARE	150-154
	CAP	Y	W1730	030	22		SPARE	150-154
	CAP	Y	W1730	031	22		SPARE	150-154
	CAP	Y	W1730	032	22		SPARE	150-154
	CAP	Y	W1730	033	22		SPARE	150-154
	CAP	Y	W1730	034	22		SPARE	150-154
	CAP	Y	W1730	035	22		SPARE	150-154
	CAP	Y	W1730	036	22		SPARE	150-154
	CAP	Y	W1730	037	22		SPARE	150-154
	CAP	Y	W1730	038	22		SPARE	150-154
	CAP	Y	W1730	039	22		SPARE	150-154
	CAP	Y	W1730	010	24		SPARE	150-199
	CAP	Y	W1730	008	24		SPARE	150-199, 275-299
	DED		W1730	024Z				ALL
	DED		W1730	025Z				ALL
								28-22-31
								28-22-31
D06232J		AE0219/ /		RCPT-SHELL				ALL
	A01	\$D	W2000	HK01	24		SPARE	ALL
	A01	\$D	W2000	HM01	24		99-99-99	ALL
	A02	\$D	W2000	HK02	24		24-11-11	ALL
	A02	\$D	W2000	HM02	24		24-11-11	ALL
	A03	\$D	W2000	HK03	24		24-11-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D06200

Page 59

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06232J		AE0219/ /		RCPT-SHELL (continued)				ALL
	A03	\$D	W2000	HM03	24		24-11-11	ALL
	A04	\$D	W2000	HK04	24		24-28-11	ALL
	A04	\$D	W2000	HM04	24		24-28-11	ALL
	A05	\$D	W2000	HK05	24		24-28-21	ALL
	A05	\$D	W2000	HM05	24		24-28-21	ALL
	A06	\$D	W2000	HK06	24		30-41-11	ALL
	A06	\$D	W2000	HM06	24		30-41-11	ALL
	A07	\$D	W2000	HK07	24		30-41-11	ALL
	A07	\$D	W2000	HM07	24		30-41-11	ALL
	A08	\$D	W2000	HK08	24		24-27-11	ALL
	A08	\$D	W2000	HM08	24		24-27-11	ALL
	A09	\$D	W2000	HK09	24		24-27-11	ALL
	A09	\$D	W2000	HM09	24		24-27-11	ALL
	A10	\$D	W2000	HK10	24		24-27-11	ALL
	A10	\$D	W2000	HM10	24		24-27-11	ALL
	A11	\$D	W2000	HK11	24		24-11-11	ALL
	A11	\$D	W2000	HM11	24		SPARE	ALL
	A12	\$D	W2000	HK12	24		24-11-11	ALL
	A12	\$D	W2000	HM12	24		24-11-11	ALL
	A13	\$D	W2000	HK13	24		SPARE	ALL
	A13	\$D	W2000	HM13	24		SPARE	ALL
	A14	\$D	W2000	HK14	24		SPARE	ALL
	A14	\$D	W2000	HM14	24		SPARE	ALL
	A15	\$D	W2000	HK15	24		SPARE	ALL
	A15	\$D	W2000	HM15	24		SPARE	ALL
	A16	\$D	W2000	HK16	24		SPARE	ALL
	A16	\$D	W2000	HM16	24		SPARE	ALL
	A17	\$D	W2000	HK17	24		SPARE	ALL
	A17	\$D	W2000	HM17	24		SPARE	ALL
	A18	\$D	W2000	HK18	24		SPARE	ALL
	A18	\$D	W2000	HM18	24		SPARE	ALL
	A19	\$D	W2000	HK19	24		SPARE	ALL
	A19	\$D	W2000	HM19	24		SPARE	ALL
	A20	\$D	W2000	HK20	24		99-99-99	ALL
	A20	\$D	W2000	HM20	24		99-99-99	ALL
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04	UNUSED						ALL
	B05	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D06200

Page 60

Jun 06/2008



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06232J		AE0219/ /		RCPT-SHELL (continued)				ALL
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13	UNUSED						ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	B16	UNUSED						ALL
	B17	UNUSED						ALL
	B18	UNUSED						ALL
	B19	UNUSED						ALL
	B20	UNUSED						ALL
D06232P		AE0219/ /		PLUG-E8				ALL
	A01	UNUSED						ALL
	A02	\$D	W0214	112	24		24-11-11	ALL
	A03	\$D	W0214	006	24		24-11-11	ALL
	A04	\$D	W0214	034	24		24-28-11	ALL
	A05	\$D	W0214	111	24		24-28-21	ALL
	A06	\$D	W0214	007	24		30-41-11	ALL
	A07	\$D	W0214	015	24		30-41-11	ALL
	A08	\$D	W0214	032	24		24-27-11	ALL
	A09	\$D	W0214	033	24		24-27-11	ALL
	A10	\$D	W0214	014	24		24-27-11	ALL
	A11	\$D	W0214	141	24		24-11-11	ALL
	A12	\$D	W0214	118	24		24-11-11	ALL
	A13	\$D	W0214	119	24		SPARE	ALL
	A14	\$D	W0214	120	24		SPARE	ALL
	A15	\$D	W0214	121	24		SPARE	ALL
	A16	\$D	W0214	122	24		SPARE	ALL
	A17	\$D	W0214	123	24		SPARE	ALL
	A18	\$D	W0214	124	24		SPARE	ALL
	A19	\$D	W0214	125	24		SPARE	ALL
	A20	UNUSED						ALL
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D06200

Page 61

Jun 06/2008



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06232P		AE0219/ /		PLUG-E8 (continued)				ALL
	B04	UNUSED						ALL
	B05	UNUSED						ALL
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13	UNUSED						ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	B16	UNUSED						ALL
	B17	UNUSED						ALL
	B18	UNUSED						ALL
	B19	UNUSED						ALL
	B20	UNUSED						ALL
	CAP	Y	W0214	119	24		SPARE	ALL
	CAP	Y	W0214	120	24		SPARE	ALL
	CAP	Y	W0214	121	24		SPARE	ALL
	CAP	Y	W0214	122	24		SPARE	ALL
	CAP	Y	W0214	123	24		SPARE	ALL
	CAP	Y	W0214	124	24		SPARE	ALL
	CAP	Y	W0214	125	24		SPARE	ALL
D06234J		AE0219/ /		RCPT-SHELL				ALL
	A01	\$D	W2000	RK01	24		SPARE	ALL
	A01	\$D	W2000	RM01	24		99-99-99	ALL
	A02	\$D	W2000	RK02	24		24-11-21	ALL
	A02	\$D	W2000	RM02	24		24-11-21	ALL
	A03	\$D	W2000	RK03	24		24-11-21	ALL
	A03	\$D	W2000	RM03	24		24-11-21	ALL
	A04	\$D	W2000	RK04	24		24-28-11	ALL
	A04	\$D	W2000	RM04	24		24-28-11	ALL
	A05	\$D	W2000	RK05	24		24-11-21	ALL
	A05	\$D	W2000	RM05	24		24-11-21	ALL
	A06	\$D	W2000	RK06	24		SPARE	ALL
	A06	\$D	W2000	RM06	24		SPARE	ALL
	A07	\$D	W2000	RK07	24		SPARE	ALL
	A07	\$D	W2000	RM07	24		SPARE	ALL

HOOKUP LIST

D280T132

91-21-51

Section D06200

Page 62

Jun 06/2008



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06234J		AE0219/ /		RCPT-SHELL (continued)				ALL
	A08	\$D	W2000	RK08	24		24-27-21	ALL
	A08	\$D	W2000	RM08	24		24-27-21	ALL
	A09	\$D	W2000	RK09	24		24-27-21	ALL
	A09	\$D	W2000	RM09	24		24-27-21	ALL
	A10	\$D	W2000	RK10	24		24-27-21	ALL
	A10	\$D	W2000	RM10	24		24-27-21	ALL
	A11	\$D	W2000	RK11	24		SPARE	ALL
	A11	\$D	W2000	RM11	24		24-11-21	ALL
	A12	\$D	W2000	RK12	24		SPARE	ALL
	A12	\$D	W2000	RM12	24		SPARE	ALL
	A13	\$D	W2000	RK13	24		SPARE	ALL
	A13	\$D	W2000	RM13	24		SPARE	ALL
	A14	\$D	W2000	RK14	24		SPARE	ALL
	A14	\$D	W2000	RM14	24		SPARE	ALL
	A15	\$D	W2000	RK15	24		SPARE	ALL
	A15	\$D	W2000	RM15	24		SPARE	ALL
	A16	\$D	W2000	RK16	24		SPARE	ALL
	A16	\$D	W2000	RM16	24		SPARE	ALL
	A17	\$D	W2000	RK17	24		SPARE	ALL
	A17	\$D	W2000	RM17	24		SPARE	ALL
	A18	\$D	W2000	RK18	24		SPARE	ALL
	A18	\$D	W2000	RM18	24		SPARE	ALL
	A19	\$D	W2000	RK19	24		SPARE	ALL
	A19	\$D	W2000	RM19	24		SPARE	ALL
	A20	\$D	W2000	RK20	24		99-99-99	ALL
	A20	\$D	W2000	RM20	24		99-99-99	ALL
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04	UNUSED						ALL
	B05	UNUSED						ALL
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13	UNUSED						ALL
	B14	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D06200

Page 63

Jun 06/2008



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06234J		AE0219/ /		RCPT-SHELL (continued)				ALL
	B15	UNUSED						ALL
	B16	UNUSED						ALL
	B17	UNUSED						ALL
	B18	UNUSED						ALL
	B19	UNUSED						ALL
	B20	UNUSED						ALL
D06234P		AE0219/ /		PLUG-E8				ALL
	A01	UNUSED						ALL
	A02	\$D	W0222	112	24		24-11-21	ALL
	A03	\$D	W0222	030	24		24-11-21	050-099
	A03		W0222	030	24		24-11-21	150-199, 275-299
	A04	\$D	W0222	068	24		24-28-11	ALL
	A05	\$D	W0222	115	24		24-11-21	ALL
	A06	\$D	W0222	116	24		SPARE	ALL
	A07	\$D	W0222	117	24		SPARE	ALL
	A08	\$D	W0222	065	24		24-27-21	ALL
	A09	\$D	W0222	066	24		24-27-21	ALL
	A10	\$D	W0222	058	24		24-27-21	ALL
	A11	\$D	W0222	135	24		24-11-21	ALL
	A12	\$D	W0222	119	24		SPARE	ALL
	A13	\$D	W0222	120	24		SPARE	ALL
	A14	\$D	W0222	121	24		SPARE	ALL
	A15	\$D	W0222	122	24		SPARE	ALL
	A16	\$D	W0222	123	24		SPARE	ALL
	A17	\$D	W0222	124	24		SPARE	ALL
	A18	UNUSED						050-099, 275-299
	A18	\$D	W0222	125	24		SPARE	150-199
	A19	UNUSED						050-099, 275-299
	A19	\$D	W0222	126	24		SPARE	150-199
	A20	UNUSED						ALL
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04	UNUSED						ALL
	B05	UNUSED						ALL
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D06200

Page 64

Jun 06/2008



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06234P		AE0219/ /		PLUG-E8 (continued)				ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13	UNUSED						ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	B16	UNUSED						ALL
	B17	UNUSED						ALL
	B18	UNUSED						ALL
	B19	UNUSED						ALL
	B20	UNUSED						ALL
	CAP	Y	W0222	116	24		SPARE	ALL
	CAP	Y	W0222	117	24		SPARE	ALL
	CAP	Y	W0222	119	24		SPARE	ALL
	CAP	Y	W0222	120	24		SPARE	ALL
	CAP	Y	W0222	121	24		SPARE	ALL
	CAP	Y	W0222	122	24		SPARE	ALL
	CAP	Y	W0222	123	24		SPARE	ALL
	CAP	Y	W0222	124	24		SPARE	ALL
	CAP	Y	W0222	125	24		SPARE	150-199
	CAP	Y	W0222	126	24		SPARE	150-199
D06236J		AE0219/ /		RCPT-SHELL				ALL
	A01	\$D	W2000	PK01	24		SPARE	ALL
	A01	\$D	W2000	PM01	24		99-99-99	ALL
	A02	\$D	W2000	PK02	24		SPARE	ALL
	A02	\$D	W2000	PM02	24		21-52-21	ALL
	A03	\$D	W2000	PK03	24		SPARE	ALL
	A03	\$D	W2000	PM03	24		21-52-21	ALL
	A04	\$D	W2000	PK04	24		SPARE	ALL
	A04	\$D	W2000	PM04	24		21-52-21	ALL
	A05	\$D	W2000	PK05	24		SPARE	ALL
	A05	\$D	W2000	PM05	24		21-52-21	ALL
	A06	\$D	W2000	PK06	24		SPARE	ALL
	A06	\$D	W2000	PM06	24		21-52-21	ALL
	A07	\$D	W2000	PK07	24		SPARE	ALL
	A07	\$D	W2000	PM07	24		21-52-21	ALL
	A08	\$D	W2000	PK08	24		SPARE	ALL
	A08	\$D	W2000	PM08	24		21-52-31	ALL
	A09	\$D	W2000	PK09	24		SPARE	ALL

HOOKUP LIST

D280T132

91-21-51

Section D06200

Page 65

Jun 06/2008



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06236J		AE0219/ /		RCPT-SHELL (continued)				ALL
	A09	\$D	W2000	PM09	24		21-52-31	ALL
	A10	\$D	W2000	PK10	24		SPARE	ALL
	A10	\$D	W2000	PM10	24		21-52-41	ALL
	A11	\$D	W2000	PK11	24		SPARE	ALL
	A11	\$D	W2000	PM11	24		21-52-41	ALL
	A12	\$D	W2000	PK12	24		SPARE	ALL
	A12	\$D	W2000	PM12	24		SPARE	ALL
	A13	\$D	W2000	PK13	24		SPARE	ALL
	A13	\$D	W2000	PM13	24		SPARE	ALL
	A14	\$D	W2000	PK14	24		21-61-51	ALL
	A14	\$D	W2000	PM14	24		21-61-51	ALL
	A15	\$D	W2000	PK15	24		SPARE	ALL
	A15	\$D	W2000	PM15	24		73-21-14	ALL
	A16	\$D	W2000	PK16	24		SPARE	ALL
	A16	\$D	W2000	PM16	24		36-21-11	ALL
	A17	\$D	W2000	PK17	24		SPARE	ALL
	A17	\$D	W2000	PM17	24		36-21-11	ALL
	A18	\$D	W2000	PK18	24		SPARE	ALL
	A18	\$D	W2000	PM18	24		21-52-31	ALL
	A19	\$D	W2000	PK19	24		SPARE	ALL
	A19	\$D	W2000	PM19	24		21-52-31	ALL
	A20	\$D	W2000	PK20	24		99-99-99	ALL
	A20	\$D	W2000	PM20	24		99-99-99	ALL
	B01	\$D	W2000	PL01	24		99-99-99	050-099, 150-154, 275-276
	B01	\$D	W2000	PN01	24		99-99-99	ALL
	B01	\$D	W2000	PL01	24		SPARE	155-199, 277-299
	B02	\$D	W2000	PL02	24		73-21-14	ALL
	B02	\$D	W2000	PN02	24		73-21-14	ALL
	B03	\$D	W2000	PL03	24		73-21-14	ALL
	B03	\$D	W2000	PN03	24		73-21-14	ALL
	B04	\$D	W2000	PL04	24		SPARE	ALL
	B04	\$D	W2000	PN04	24		73-21-14	ALL
	B05	\$D	W2000	PL05	24		SPARE	ALL
	B05	\$D	W2000	PN05	24		21-52-31	ALL
	B06	\$D	W2000	PL06	24		SPARE	ALL
	B06	\$D	W2000	PN06	24		21-52-31	ALL
	B07	\$D	W2000	PL07	24		SPARE	ALL
	B07	\$D	W2000	PN07	24		21-52-31	ALL
	B08	\$D	W2000	PL08	24		SPARE	ALL
	B08	\$D	W2000	PN08	24		21-52-31	ALL

HOOKUP LIST

D280T132

91-21-51

Section D06200

Page 66

Jun 06/2008



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06236J		AE0219/ /		RCPT-SHELL (continued)				ALL
	B09	\$D	W2000	PL09	24		SPARE	ALL
	B09	\$D	W2000	PN09	24		21-52-31	ALL
	B10	\$D	W2000	PL10	24		SPARE	ALL
	B10	\$D	W2000	PN10	24		21-52-31	ALL
	B11	\$D	W2000	PL11	24		SPARE	ALL
	B11	\$D	W2000	PN11	24		21-52-21	ALL
	B12	\$D	W2000	PL12	24		SPARE	ALL
	B12	\$D	W2000	PN12	24		21-52-21	ALL
	B13	\$D	W2000	PL13	24		SPARE	ALL
	B13	\$D	W2000	PN13	24		21-52-21	ALL
	B14	\$D	W2000	PL14	24		21-51-21	ALL
	B14	\$D	W2000	PN14	24		21-51-21	ALL
	B15	\$D	W2000	PL15	24		SPARE	ALL
	B15	\$D	W2000	PN15	24		21-52-31	ALL
	B16	\$D	W2000	PL16	24		SPARE	ALL
	B16	\$D	W2000	PN16	24		21-52-31	ALL
	B17	\$D	W2000	PL17	24		SPARE	ALL
	B17	\$D	W2000	PN17	24		SPARE	ALL
	B18	\$D	W2000	PL18	24		SPARE	ALL
	B18	\$D	W2000	PN18	24		SPARE	ALL
	B19	\$D	W2000	PL19	24		SPARE	ALL
	B19	\$D	W2000	PN19	24		SPARE	ALL
	B20	\$D	W2000	PL20	24		99-99-99	ALL
	B20	\$D	W2000	PN20	24		99-99-99	ALL
D06236P		AE0219/ /		PLUG-E8				ALL
	A01	UNUSED						ALL
	A02	\$D	W0738	304B	24		21-52-21	ALL
	A03	\$D	W0738	304R	24		21-52-21	ALL
	A04	\$D	W0738	304Y	24		21-52-21	ALL
	A05	\$D	W0738	305B	24		21-52-21	ALL
	A06	\$D	W0738	305R	24		21-52-21	ALL
	A07	\$D	W0738	305Y	24		21-52-21	ALL
	A08	\$D	W0738	218B	22		21-52-31	ALL
	A09	\$D	W0738	218R	22		21-52-31	ALL
	A10	\$D	W0738	223B	24		21-52-41	ALL
	A11	\$D	W0738	223R	24		21-52-41	ALL
	A12	\$D	W0738	098	24		SPARE	ALL
	A13	\$D	W0738	097	24		SPARE	ALL
	A14	\$D	W0738	102	24		21-61-51	ALL

HOOKUP LIST

D280T132

91-21-51

Section D06200

Page 67

Jun 06/2008



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06236P		AE0219/ /		PLUG-E8 (continued)				ALL
	A15	\$D	W0738	105	24		73-21-14	ALL
	A16	\$D	W0738	228R	24		36-21-11	ALL
	A17	\$D	W0738	228B	24		36-21-11	ALL
	A18	\$D	W0738	219B	22		21-52-31	ALL
	A19	\$D	W0738	219R	22		21-52-31	ALL
	A20	UNUSED						ALL
	B01	UNUSED						ALL
	B02	\$D	W0738	226B	24		73-21-14	ALL
	B03	\$D	W0738	226R	24		73-21-14	ALL
	B04	\$D	W0738	226Z			73-21-14	ALL
	B05	\$D	W0738	220B	22		21-52-31	ALL
	B06	\$D	W0738	220R	22		21-52-31	ALL
	B07	\$D	W0738	227B	22		21-52-31	ALL
	B08	\$D	W0738	227R	22		21-52-31	ALL
	B09	\$D	W0738	221B	22		21-52-31	ALL
	B10	\$D	W0738	221R	22		21-52-31	ALL
	B11	\$D	W0738	309B	22		21-52-21	050-099, 275-299
	B11		W0738	309B	22		21-52-21	150-199
	B12	\$D	W0738	309R	22		21-52-21	050-099, 275-299
	B12		W0738	309R	22		21-52-21	150-199
	B13	\$D	W0738	309Y	22		21-52-21	050-099, 275-299
	B13		W0738	309Y	22		21-52-21	150-199
	B14	\$D	W0738	106	24		21-51-21	ALL
	B15	\$D	W0738	224B	22		21-52-31	ALL
	B16	\$D	W0738	224R	22		21-52-31	ALL
	B17	\$D	W0738	816	24		SPARE	ALL
	B18	\$D	W0738	817	24		SPARE	ALL
	B19	\$D	W0738	818	24		SPARE	ALL
	B20	UNUSED						ALL
	CAP	Y	W0738	097	24		SPARE	ALL
	CAP	Y	W0738	098	24		SPARE	ALL
	CAP	Y	W0738	816	24		SPARE	ALL
	CAP	Y	W0738	817	24		SPARE	ALL
	CAP	Y	W0738	818	24		SPARE	ALL
D06237		367/278/L058		RECP-				280-299
	1	UNUSED						280-299
	2	UNUSED						280-299
	3	UNUSED						280-299
	4	UNUSED						280-299

HOOKUP LIST

D280T132

91-21-51

Section D06200

Page 68

Jun 06/2008



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06237		367/278/L058		RECP- (continued)				280-299
	5	UNUSED						280-299
	6	UNUSED						280-299
	7	UNUSED						280-299
	8	UNUSED						280-299
	9	UNUSED						280-299
	10	UNUSED						280-299
	11	UNUSED						280-299
	12	UNUSED						280-299
	13		W2029	001	20		33-26-21	280-299
	14		W2029	001	20		33-26-21	280-299
	15	UNUSED						280-299
	16	UNUSED						280-299
	17	UNUSED						280-299
	18	UNUSED						280-299
	19	UNUSED						280-299
	20	UNUSED						280-299
	21	UNUSED						280-299
	22	UNUSED						280-299
	23	UNUSED						280-299
	24	UNUSED						280-299
	25	UNUSED						280-299
	26	UNUSED						280-299
	27	UNUSED						280-299
	28	UNUSED						280-299
	29	UNUSED						280-299
	30	UNUSED						280-299
	31	UNUSED						280-299
	32	UNUSED						280-299
D06238J		AE0219/ /		RCPT-SHELL				ALL
	A01	\$D	W2000	MK01	24		SPARE	ALL
	A01	\$D	W2000	MM01	24		99-99-99	ALL
	A02	\$D	W2000	MK02	24		73-31-11	ALL
	A02	\$D	W2000	MM02	24		73-31-11	ALL
	A03	\$D	W2000	MK03	24		73-31-11	ALL
	A03	\$D	W2000	MM03	24		73-31-11	ALL
	A04	\$D	W2000	MK04	24		73-31-11	ALL
	A04	\$D	W2000	MM04	24		73-31-11	ALL
	A05	\$D	W2000	MK05	24		79-32-11	ALL
	A05	\$D	W2000	MM05	24		79-32-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D06200

Page 69

Jun 06/2008



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06238J		AE0219/ /		RCPT-SHELL (continued)				ALL
	A06	\$D	W2000	MK06	24		SPARE	ALL
	A06	\$D	W2000	MM06	24		79-32-11	ALL
	A07	\$D	W2000	MK07	24		79-32-11	ALL
	A07	\$D	W2000	MM07	24		79-32-11	ALL
	A08	\$D	W2000	MK08	24		SPARE	ALL
	A08	\$D	W2000	MM08	24		SPARE	ALL
	A09	\$D	W2000	MK09	24		SPARE	ALL
	A09	\$D	W2000	MM09	24		SPARE	ALL
	A10	\$D	W2000	MK10	24		79-32-11	ALL
	A10	\$D	W2000	MM10	24		79-32-11	ALL
	A11	\$D	W2000	MM11	24		73-34-11	ALL
	A11	\$D	W2000	MK11	24		73-34-11	050-099, 150-199, 277-299
	A11	\$D	W2000	MK11	24		74-34-11	275-276
	A12	\$D	W2000	MK12	24		78-36-11	ALL
	A12	\$D	W2000	MM12	24		78-36-11	ALL
	A13	\$D	W2000	MK13	24		78-36-11	ALL
	A13	\$D	W2000	MM13	24		78-36-11	ALL
	A14	\$D	W2000	MK14	24		SPARE	ALL
	A14	\$D	W2000	MM14	24		SPARE	ALL
	A15	\$D	W2000	MK15	24		SPARE	ALL
	A15	\$D	W2000	MM15	24		SPARE	ALL
	A16	\$D	W2000	MK16	24		73-31-11	ALL
	A16	\$D	W2000	MM16	24		SPARE	ALL
	A17	\$D	W2000	MK17	24		SPARE	ALL
	A17	\$D	W2000	MM17	24		SPARE	ALL
	A18	\$D	W2000	MK18	24		SPARE	ALL
	A18	\$D	W2000	MM18	24		SPARE	ALL
	A19	\$D	W2000	MK19	24		SPARE	ALL
	A19	\$D	W2000	MM19	24		SPARE	ALL
	A20	\$D	W2000	MK20	24		99-99-99	ALL
	A20	\$D	W2000	MM20	24		99-99-99	ALL
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04	UNUSED						ALL
	B05	UNUSED						ALL
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D06200

Page 70

Jun 06/2008



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06238J		AE0219/ /		RCPT-SHELL (continued)				ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13	UNUSED						ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	B16	UNUSED						ALL
	B17	UNUSED						ALL
	B18	UNUSED						ALL
	B19	UNUSED						ALL
	B20	UNUSED						ALL
D06238P		AE0219/ /		PLUG-E8				ALL
	A01	UNUSED						050-099, 275-299
	A01	\$D	W0764	070	24		SPARE	150-199
	A02	\$D	W0764	302R	24		73-31-11	ALL
	A03	\$D	W0764	302B	24		73-31-11	ALL
	A04	\$D	W0764	302Y	24		73-31-11	ALL
	A05	\$D	W0764	303Y	24		79-32-11	ALL
	A06	\$D	W0764	303B	24		79-32-11	ALL
	A07	\$D	W0764	303R	24		79-32-11	ALL
	A08	UNUSED						050-099, 275-299
	A08	\$D	W0764	064	24		SPARE	150-199
	A09	UNUSED						050-099, 275-299
	A09	\$D	W0764	069	24		SPARE	150-199
	A10	\$D	W0764	053	24		79-32-11	ALL
	A11	\$D	W0764	002	24		73-34-11	050-099
	A11		W0764	002	24		73-34-11	150-199, 275-299
	A12		W0764	503	24		78-36-11	050-099
	A12	\$D	W0764	503	24		78-36-11	150-199, 275-299
	A13		W0764	504	24		78-36-11	050-099
	A13	\$D	W0764	504	24		78-36-11	150-199, 275-299
	A14	\$D	W0764	067	24		SPARE	050-099
	A14	\$D	W0764	080	24		SPARE	150-199
	A14	UNUSED						275-299
	A15	\$D	W0764	068	24		SPARE	050-099
	A15	\$D	W0764	078	24		SPARE	150-199
	A15	UNUSED						275-299
	A16	\$D	W0764	302Z			73-31-11	ALL
	A17	\$D	W0764	070	24		SPARE	050-099, 275-299

HOOKUP LIST

D280T132

91-21-51

Section D06200

Page 71

Jun 06/2008



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06238P		AE0219/ /		PLUG-E8 (continued)				ALL
	A17	UNUSED						150-199
	A18	\$D	W0764	071	24		SPARE	ALL
	A19	\$D	W0764	072	24		SPARE	ALL
	A20	UNUSED						ALL
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04	UNUSED						ALL
	B05	UNUSED						ALL
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13	UNUSED						ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	B16	UNUSED						ALL
	B17	UNUSED						ALL
	B18	UNUSED						ALL
	B19	UNUSED						ALL
	B20	UNUSED						ALL
	CAP	Y	W0764	067	24		SPARE	050-099
	CAP	Y	W0764	068	24		SPARE	050-099
	CAP	Y	W0764	070	24		SPARE	050-099, 275-299
	CAP	Y	W0764	071	24		SPARE	050-099, 275-299
	CAP	Y	W0764	072	24		SPARE	050-099, 275-299
D06240J		AE0219/ /		RCPT-SHELL				ALL
	A01	\$D	W2000	AK01	24		99-99-99	ALL
	A01	\$D	W2000	AM01	24		SPARE	ALL
	A02	\$D	W2000	AK02	24		73-31-11	ALL
	A02	\$D	W2000	AM02	24		73-31-11	ALL
	A03	\$D	W2000	AK03	24		73-31-11	ALL
	A03	\$D	W2000	AM03	24		73-31-11	ALL
	A04	\$D	W2000	AK04	24		73-31-11	ALL
	A04	\$D	W2000	AM04	24		73-31-11	ALL
	A05	\$D	W2000	AK05	24		79-32-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D06200

Page 72

Jun 06/2008



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06240J		AE0219/ /		RCPT-SHELL (continued)				ALL
	A05	\$D	W2000	AM05	24		79-32-11	ALL
	A06	\$D	W2000	AK06	24		79-32-11	ALL
	A06	\$D	W2000	AM06	24		SPARE	ALL
	A07	\$D	W2000	AK07	24		79-32-11	ALL
	A07	\$D	W2000	AM07	24		79-32-11	ALL
	A08	\$D	W2000	AK08	24		SPARE	ALL
	A08	\$D	W2000	AM08	24		SPARE	ALL
	A09	\$D	W2000	AK09	24		SPARE	ALL
	A09	\$D	W2000	AM09	24		SPARE	ALL
	A10	\$D	W2000	AK10	24		79-32-11	ALL
	A10	\$D	W2000	AM10	24		79-32-11	ALL
	A11	\$D	W2000	AK11	24		73-34-11	ALL
	A11	\$D	W2000	AM11	24		73-34-11	ALL
	A12	\$D	W2000	AK12	24		SPARE	ALL
	A12	\$D	W2000	AM12	24		SPARE	ALL
	A13	\$D	W2000	AK13	24		SPARE	ALL
	A13	\$D	W2000	AM13	24		SPARE	ALL
	A14	\$D	W2000	AK14	24		SPARE	ALL
	A14	\$D	W2000	AM14	24		SPARE	ALL
	A15	\$D	W2000	AK15	24		73-33-11	ALL
	A15	\$D	W2000	AM15	24		SPARE	ALL
	A16	\$D	W2000	AK16	24		73-31-11	ALL
	A16	\$D	W2000	AM16	24		SPARE	ALL
	A17	\$D	W2000	AK17	24		76-11-11	ALL
	A17	\$D	W2000	AM17	24		76-11-11	ALL
	A18	\$D	W2000	AK18	24		SPARE	ALL
	A18	\$D	W2000	AM18	24		SPARE	ALL
	A19	\$D	W2000	AK19	24		SPARE	ALL
	A19	\$D	W2000	AM19	24		SPARE	ALL
	A20	\$D	W2000	AK20	24		99-99-99	ALL
	A20	\$D	W2000	AM20	24		99-99-99	ALL
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04	UNUSED						ALL
	B05	UNUSED						ALL
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D06200

Page 73

Jun 06/2008



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06240J		AE0219/ /		RCPT-SHELL (continued)				ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13	UNUSED						ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	B16	UNUSED						ALL
	B17	UNUSED						ALL
	B18	UNUSED						ALL
	B19	UNUSED						ALL
	B20	UNUSED						ALL
D06240P		AE0219/ /		PLUG-E8				ALL
	A01	UNUSED						ALL
	A02	\$D	W0744	302R	24		73-31-11	ALL
	A03	\$D	W0744	302B	24		73-31-11	ALL
	A04	\$D	W0744	302Y	24		73-31-11	ALL
	A05	\$D	W0744	303Y	24		79-32-11	ALL
	A06	\$D	W0744	303B	24		79-32-11	ALL
	A07	\$D	W0744	303R	24		79-32-11	ALL
	A08	UNUSED						ALL
	A09	UNUSED						ALL
	A10	\$D	W0744	044	24		79-32-11	ALL
	A11	\$D	W0744	002	24		73-34-11	ALL
	A12	UNUSED						050-099, 150-199
	A12	\$D	W0744	046	24		SPARE	275-299
	A13	UNUSED						050-099, 150-199
	A13	\$D	W0744	051	24		SPARE	275-299
	A14	\$D	W0744	049	24		SPARE	050-099
	A14	\$D	W0744	061	24		SPARE	150-199
	A14	UNUSED						275-299
	A15	\$D	W0744	059	24		73-33-11	ALL
	A16	\$D	W0744	302Z			73-31-11	ALL
	A17	\$D	W0744	052	24		76-11-11	ALL
	A18	UNUSED						050-099
	A18	\$D	W0744	053	24		SPARE	150-199, 275-299
	A19	UNUSED						050-099
	A19	\$D	W0744	054	24		SPARE	150-199, 275-299
	A20	UNUSED						ALL
	B01	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D06200

Page 74

Jun 06/2008



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06240P		AE0219/ /		PLUG-E8 (continued)				ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04	UNUSED						ALL
	B05	UNUSED						ALL
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13	UNUSED						ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	B16	UNUSED						ALL
	B17	UNUSED						ALL
	B18	UNUSED						ALL
	B19	UNUSED						ALL
	B20	UNUSED						ALL
	CAP	Y	W0744	049	24		SPARE	050-099
	CAP	Y	W0744	053	24		SPARE	150-199, 275-299
	CAP	Y	W0744	054	24		SPARE	150-199, 275-299
	CAP	Y	W0744	046	24		SPARE	275-299
	CAP	Y	W0744	051	24		SPARE	275-299
D06242J		AE0219/ /		RCPT-SHELL				ALL
	A01	\$D	W2000	FK01	24		SPARE	ALL
	A01	\$D	W2000	FM01	24		99-99-99	ALL
	A02	\$D	W2000	FK02	24		21-52-11	ALL
	A02	\$D	W2000	FM02	24		SPARE	ALL
	A03	\$D	W2000	FK03	24		21-52-11	ALL
	A03	\$D	W2000	FM03	24		SPARE	ALL
	A04	\$D	W2000	FK04	24		21-52-11	ALL
	A04	\$D	W2000	FM04	24		SPARE	ALL
	A05	\$D	W2000	FK05	24		21-52-11	ALL
	A05	\$D	W2000	FM05	24		SPARE	ALL
	A06	\$D	W2000	FK06	24		21-52-11	ALL
	A06	\$D	W2000	FM06	24		SPARE	ALL
	A07	\$D	W2000	FK07	24		21-52-11	ALL
	A07	\$D	W2000	FM07	24		SPARE	ALL

HOOKUP LIST

D280T132

91-21-51

Section D06200

Page 75

Jun 06/2008



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06242J		AE0219/ /		RCPT-SHELL (continued)				ALL
	A08	\$D	W2000	FK08	24		21-52-31	ALL
	A08	\$D	W2000	FM08	24		SPARE	ALL
	A09	\$D	W2000	FK09	24		21-52-31	ALL
	A09	\$D	W2000	FM09	24		SPARE	ALL
	A10	\$D	W2000	FK10	24		21-52-41	ALL
	A10	\$D	W2000	FM10	24		SPARE	ALL
	A11	\$D	W2000	FK11	24		21-52-41	ALL
	A11	\$D	W2000	FM11	24		SPARE	ALL
	A12	\$D	W2000	FK12	24		21-51-11	ALL
	A12	\$D	W2000	FM12	24		21-51-11	ALL
	A13	\$D	W2000	FK13	24		21-28-11	050-099, 155-199, 277-299
	A13	\$D	W2000	FM13	24		21-28-11	050-099, 155-199, 277-299
	A13	\$D	W2000	FK13	24		21-51-11	150-154, 275-276
	A13	\$D	W2000	FM13	24		21-51-11	150-154, 275-276
	A14	\$D	W2000	FK14	24		21-51-11	ALL
	A14	\$D	W2000	FM14	24		21-51-11	ALL
	A15	\$D	W2000	FK15	24		21-43-12	ALL
	A15	\$D	W2000	FM15	24		SPARE	ALL
	A16	\$D	W2000	FK16	24		21-58-11	ALL
	A16	\$D	W2000	FM16	24		21-58-11	ALL
	A17	\$D	W2000	FK17	24		21-58-11	ALL
	A17	\$D	W2000	FM17	24		21-58-11	ALL
	A18	\$D	W2000	FK18	24		21-58-14	ALL
	A18	\$D	W2000	FM18	24		21-58-14	ALL
	A19	\$D	W2000	FK19	24		21-43-12	ALL
	A19	\$D	W2000	FM19	24		SPARE	ALL
	A20	\$D	W2000	FK20	24		99-99-99	ALL
	A20	\$D	W2000	FM20	24		99-99-99	ALL
	B01	\$D	W2000	FL01	24		SPARE	ALL
	B01	\$D	W2000	FN01	24		99-99-99	ALL
	B02	\$D	W2000	FL02	24		21-64-11	ALL
	B02	\$D	W2000	FN02	24		SPARE	ALL
	B03	\$D	W2000	FL03	24		21-64-11	ALL
	B03	\$D	W2000	FN03	24		SPARE	ALL
	B04	\$D	W2000	FL04	24		21-64-11	ALL
	B04	\$D	W2000	FN04	24		SPARE	ALL
	B05	\$D	W2000	FL05	24		21-64-11	ALL
	B05	\$D	W2000	FN05	24		SPARE	ALL
	B06	\$D	W2000	FL06	24		21-64-11	ALL
	B06	\$D	W2000	FN06	24		SPARE	ALL

HOOKUP LIST

D280T132

91-21-51

Section D06200

Page 76

Jun 06/2008



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06242J		AE0219/ /		RCPT-SHELL (continued)				ALL
	B07	\$D	W2000	FL07	24		21-64-11	ALL
	B07	\$D	W2000	FN07	24		SPARE	ALL
	B08	\$D	W2000	FL08	24		SPARE	ALL
	B08	\$D	W2000	FN08	24		21-64-11	ALL
	B09	\$D	W2000	FL09	24		SPARE	ALL
	B09	\$D	W2000	FN09	24		21-64-11	ALL
	B10	\$D	W2000	FL10	24		SPARE	ALL
	B10	\$D	W2000	FN10	24		21-64-11	ALL
	B11	\$D	W2000	FL11	24		21-58-15	ALL
	B11	\$D	W2000	FN11	24		21-58-15	ALL
	B12	\$D	W2000	FL12	24		21-51-21	ALL
	B12	\$D	W2000	FN12	24		21-51-21	ALL
	B13	\$D	W2000	FL13	24		21-51-21	ALL
	B13	\$D	W2000	FN13	24		21-51-21	ALL
	B14	\$D	W2000	FL14	24		36-11-62	ALL
	B14	\$D	W2000	FN14	24		36-11-62	ALL
	B15	\$D	W2000	FL15	24		21-26-11	ALL
	B15	\$D	W2000	FN15	24		21-26-11	ALL
	B16	\$D	W2000	FL16	24		21-26-11	ALL
	B16	\$D	W2000	FN16	24		21-26-11	ALL
	B17	\$D	W2000	FL17	24		21-51-11	050, 150-154, 275-276
	B17	\$D	W2000	FN17	24		21-51-11	050, 150-154, 275-276
	B17	\$D	W2000	FL17	24		SPARE	051-099, 155-199, 277-299
	B17	\$D	W2000	FN17	24		SPARE	051-099, 155-199, 277-299
	B18	\$D	W2000	FL18	24		21-51-11	ALL
	B18	\$D	W2000	FN18	24		21-51-11	ALL
	B19	\$D	W2000	FL19	24		26-18-22	ALL
	B19	\$D	W2000	FN19	24		26-18-22	ALL
	B20	\$D	W2000	FL20	24		99-99-99	ALL
	B20	\$D	W2000	FN20	24		99-99-99	ALL
D06242P		AE0219/ /		PLUG-E8				ALL
	A01	UNUSED						ALL
	A02	\$D	W0942	305B	24		21-52-11	ALL
	A03	\$D	W0942	305R	24		21-52-11	ALL
	A04	\$D	W0942	305Y	24		21-52-11	ALL
	A05	\$D	W0942	304B	24		21-52-11	ALL
	A06	\$D	W0942	304R	24		21-52-11	ALL
	A07	\$D	W0942	304Y	24		21-52-11	ALL
	A08	\$D	W0942	202B	22		21-52-31	ALL

HOOKUP LIST

D280T132

91-21-51

Section D06200

Page 77

Jun 06/2008



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06242P		AE0219/ /		PLUG-E8 (continued)				ALL
	A09	\$D	W0942	202R	22		21-52-31	ALL
	A10	\$D	W0942	221B	24		21-52-41	ALL
	A11	\$D	W0942	221R	24		21-52-41	ALL
	A12	\$D	W0942	140	24		21-51-11	ALL
	A13	\$D	W0942	139	24		21-28-11	050-099, 155-199, 277-299
	A13	\$D	W0942	139	24		21-51-11	150-154, 275-276
	A14	\$D	W0942	141	24		21-51-11	ALL
	A15	\$D	W0942	239B	24		21-43-12	050-099, 275-299
	A15		W0942	239B	24		21-43-12	150-199
	A16	\$D	W0942	129	24		21-58-11	ALL
	A17	\$D	W0942	128	24		21-58-11	ALL
	A18	\$D	W0942	130	24		21-58-14	ALL
	A19	\$D	W0942	239R	24		21-43-12	050-099, 275-299
	A19		W0942	239R	24		21-43-12	150-199
	A20	UNUSED						ALL
	B01	UNUSED						ALL
	B02	\$D	W0942	313B	24		21-64-11	ALL
	B03	\$D	W0942	313R	24		21-64-11	ALL
	B04	\$D	W0942	313Y	24		21-64-11	ALL
	B05	\$D	W0942	314B	24		21-64-11	ALL
	B06	\$D	W0942	314R	24		21-64-11	ALL
	B07	\$D	W0942	314Y	24		21-64-11	ALL
	B08	\$D	W0942	315B	24		21-64-11	ALL
	B09	\$D	W0942	315R	24		21-64-11	ALL
	B10	\$D	W0942	315Y	24		21-64-11	ALL
	B11	\$D	W0942	132	24		21-58-15	ALL
	B12	\$D	W0942	142	24		21-51-21	ALL
	B13	\$D	W0942	143	24		21-51-21	ALL
	B14	\$D	W0942	192	24		36-11-62	ALL
	B15	\$D	W0942	133	24		21-26-11	ALL
	B16	\$D	W0942	134	24		21-26-11	ALL
	B17	\$D	W0942	137	24		21-51-11	050, 150-154, 275-276
	B17	\$D	W0942	137	24		SPARE	051-099, 155-199, 277-299
	B18	\$D	W0942	138	24		21-51-11	ALL
	B19	\$D	W0942	811R	22		26-18-22	ALL
	B20	UNUSED						ALL
D06244J		AE0219/ /		RCPT-SHELL				ALL
	A01	\$D	W2000	BK01	24		SPARE	ALL
	A01	\$D	W2000	BM01	24		99-99-99	ALL

HOOKUP LIST

D280T132

91-21-51

Section D06200

Page 78

Jun 06/2008



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06244J		AE0219/ /		RCPT-SHELL (continued)				ALL
	A02	\$D	W2000	BK02	24		SPARE	ALL
	A02	\$D	W2000	BM02	24		SPARE	ALL
	A03	\$D	W2000	BK03	24		29-33-11	ALL
	A03	\$D	W2000	BM03	24		29-33-11	ALL
	A04	\$D	W2000	BK04	24		29-33-11	ALL
	A04	\$D	W2000	BM04	24		29-33-11	ALL
	A05	\$D	W2000	BK05	24		29-33-11	ALL
	A05	\$D	W2000	BM05	24		29-33-11	ALL
	A06	\$D	W2000	BK06	24		29-33-11	ALL
	A06	\$D	W2000	BM06	24		29-33-11	ALL
	A07	\$D	W2000	BK07	24		29-32-11	ALL
	A07	\$D	W2000	BM07	24		SPARE	ALL
	A08	\$D	W2000	BK08	24		29-32-11	ALL
	A08	\$D	W2000	BM08	24		SPARE	ALL
	A09	\$D	W2000	BK09	24		SPARE	ALL
	A09	\$D	W2000	BM09	24		SPARE	ALL
	A10	\$D	W2000	BK10	24		SPARE	ALL
	A10	\$D	W2000	BM10	24		SPARE	ALL
	A11	\$D	W2000	BK11	24		SPARE	ALL
	A11	\$D	W2000	BM11	24		SPARE	ALL
	A12	\$D	W2000	BK12	24		29-31-11	ALL
	A12	\$D	W2000	BM12	24		29-31-11	ALL
	A13	\$D	W2000	BK13	24		29-31-11	ALL
	A13	\$D	W2000	BM13	24		SPARE	ALL
	A14	\$D	W2000	BK14	24		21-64-11	ALL
	A14	\$D	W2000	BM14	24		SPARE	ALL
	A15	\$D	W2000	BK15	24		SPARE	050-099, 155-199, 276-299
	A15	\$D	W2000	BM15	24		21-64-11	050-099, 155-199, 276-299
	A15	\$D	W2000	BK15	24		21-64-11	150-154, 275
	A15	\$D	W2000	BM15	24		SPARE	150-154, 275
	A16	\$D	W2000	BK16	24		21-64-11	ALL
	A16	\$D	W2000	BM16	24		SPARE	ALL
	A17	\$D	W2000	BK17	24		SPARE	ALL
	A17	\$D	W2000	BM17	24		21-64-11	ALL
	A18	\$D	W2000	BK18	24		SPARE	ALL
	A18	\$D	W2000	BM18	24		21-64-11	ALL
	A19	\$D	W2000	BK19	24		21-64-11	050-099, 155-199, 276-299
	A19	\$D	W2000	BM19	24		SPARE	050-099, 155-199, 276-299
	A19	\$D	W2000	BK19	24		SPARE	150-154, 275
	A19	\$D	W2000	BM19	24		21-64-11	150-154, 275

HOOKUP LIST

D280T132

91-21-51

Section D06200

Page 79

Jun 06/2008



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06244J		AE0219/ /		RCPT-SHELL (continued)				ALL
	A20	\$D	W2000	BK20	24		99-99-99	ALL
	A20	\$D	W2000	BM20	24		99-99-99	ALL
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04	UNUSED						ALL
	B05	UNUSED						ALL
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13	UNUSED						ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	B16	UNUSED						ALL
	B17	UNUSED						ALL
	B18	UNUSED						ALL
	B19	UNUSED						ALL
	B20	UNUSED						ALL
D06244P		AE0219/ /		PLUG-E8				ALL
	A01	UNUSED						ALL
	A02	UNUSED						ALL
	A03	\$D	W1246	026	24		29-33-11	ALL
	A04	\$D	W1246	028	24		29-33-11	ALL
	A05	\$D	W1246	029	24		29-33-11	ALL
	A06	\$D	W1246	027	24		29-33-11	ALL
	A07	\$D	W1246	009	24		29-32-11	ALL
	A08	\$D	W1246	010	24		29-32-11	ALL
	A09	\$D	W1246	030	24		SPARE	ALL
	A10	\$D	W1246	032	24		SPARE	ALL
	A11	\$D	W1246	033	24		SPARE	ALL
	A12	\$D	W1246	201R	24		29-31-11	ALL
	A13	\$D	W1246	201B	24		29-31-11	ALL
	A14	\$D	W1246	320B	24		21-64-11	ALL
	A15	\$D	W1246	320R	24		21-64-11	050-099, 155-199, 276-299
	A15	\$D	W1246	327R	24		21-64-11	150-154, 275

HOOKUP LIST
D280T132

91-21-51
Section D06200
Page 80
Jun 06/2008



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06244P		AE0219/ /		PLUG-E8 (continued)				ALL
	A16	\$D	W1246	320Y	24		21-64-11	ALL
	A17	\$D	W1246	327B	24		21-64-11	ALL
	A18	\$D	W1246	327Y	24		21-64-11	ALL
	A19	\$D	W1246	327R	24		21-64-11	050-099, 155-199, 276-299
	A19	\$D	W1246	320R	24		21-64-11	150-154, 275
	A20	UNUSED						ALL
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04	UNUSED						ALL
	B05	UNUSED						ALL
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13	UNUSED						ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	B16	UNUSED						ALL
	B17	UNUSED						ALL
	B18	UNUSED						ALL
	B19	UNUSED						ALL
	B20	UNUSED						ALL
	CAP	Y	W1246	030	24		SPARE	ALL
	CAP	Y	W1246	032	24		SPARE	ALL
	CAP	Y	W1246	033	24		SPARE	ALL
D06246J		AE0219/ /		RCPT-SHELL				ALL
	A01	\$D	W2000	DK01	24		SPARE	ALL
	A01	\$D	W2000	DM01	24		99-99-99	ALL
	A02	\$D	W2000	DK02	24		36-11-51	ALL
	A02	\$D	W2000	DM02	24		36-11-51	ALL
	A03	\$D	W2000	DK03	24		36-11-52	ALL
	A03	\$D	W2000	DM03	24		36-11-52	ALL
	A04	\$D	W2000	DK04	24		36-22-11	ALL
	A04	\$D	W2000	DM04	24		36-22-11	ALL
	A05	\$D	W2000	DK05	24		36-22-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D06200

Page 81

Jun 06/2008



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06246J		AE0219/ /		RCPT-SHELL (continued)				ALL
	A05	\$D	W2000	DM05	24		36-22-11	ALL
	A06	\$D	W2000	DK06	24		36-21-11	ALL
	A06	\$D	W2000	DM06	24		SPARE	ALL
	A07	\$D	W2000	DK07	24		36-21-11	ALL
	A07	\$D	W2000	DM07	24		SPARE	ALL
	A08	\$D	W2000	DK08	24		36-11-62	ALL
	A08	\$D	W2000	DM08	24		36-11-62	ALL
	A09	\$D	W2000	DK09	24		36-11-61	ALL
	A09	\$D	W2000	DM09	24		36-11-61	ALL
	A10	\$D	W2000	DK10	24		SPARE	ALL
	A10	\$D	W2000	DM10	24		SPARE	ALL
	A11	\$D	W2000	DK11	24		SPARE	ALL
	A11	\$D	W2000	DM11	24		SPARE	ALL
	A12	\$D	W2000	DK12	24		21-44-21	ALL
	A12	\$D	W2000	DM12	24		21-44-21	ALL
	A13	\$D	W2000	DK13	24		73-21-14	ALL
	A13	\$D	W2000	DM13	24		SPARE	ALL
	A14	\$D	W2000	DK14	24		73-21-18	ALL
	A14	\$D	W2000	DM14	24		73-21-18	ALL
	A15	\$D	W2000	DK15	24		SPARE	ALL
	A15	\$D	W2000	DM15	24		SPARE	ALL
	A16	\$D	W2000	DK16	24		32-42-11	ALL
	A16	\$D	W2000	DM16	24		32-42-11	ALL
	A17	\$D	W2000	DK17	24		21-58-11	ALL
	A17	\$D	W2000	DM17	24		21-58-11	ALL
	A18	\$D	W2000	DK18	24		21-52-31	ALL
	A18	\$D	W2000	DM18	24		SPARE	ALL
	A19	\$D	W2000	DK19	24		21-52-31	ALL
	A19	\$D	W2000	DM19	24		SPARE	ALL
	A20	\$D	W2000	DK20	24		99-99-99	ALL
	A20	\$D	W2000	DM20	24		99-99-99	ALL
	B01	\$D	W2000	DL01	24		SPARE	ALL
	B01	\$D	W2000	DN01	24		99-99-99	ALL
	B02	\$D	W2000	DL02	24		36-11-61	ALL
	B02	\$D	W2000	DN02	24		36-11-61	ALL
	B03	\$D	W2000	DL03	24		21-28-11	ALL
	B03	\$D	W2000	DN03	24		21-28-11	ALL
	B04	\$D	W2000	DL04	24		21-28-11	ALL
	B04	\$D	W2000	DN04	24		21-28-11	ALL
	B05	\$D	W2000	DL05	24		21-52-31	ALL

HOOKUP LIST

D280T132

91-21-51

Section D06200

Page 82

Jun 06/2008



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06246J		AE0219/ /		RCPT-SHELL (continued)				ALL
	B05	\$D	W2000	DN05	24		SPARE	ALL
	B06	\$D	W2000	DL06	24		21-52-31	ALL
	B06	\$D	W2000	DN06	24		SPARE	ALL
	B07	\$D	W2000	DL07	24		21-52-31	ALL
	B07	\$D	W2000	DN07	24		SPARE	ALL
	B08	\$D	W2000	DL08	24		21-52-31	ALL
	B08	\$D	W2000	DN08	24		SPARE	ALL
	B09	\$D	W2000	DL09	24		21-52-31	ALL
	B09	\$D	W2000	DN09	24		SPARE	ALL
	B10	\$D	W2000	DL10	24		21-52-31	ALL
	B10	\$D	W2000	DN10	24		SPARE	ALL
	B11	\$D	W2000	DL11	24		21-52-11	ALL
	B11	\$D	W2000	DN11	24		SPARE	ALL
	B12	\$D	W2000	DL12	24		21-52-11	ALL
	B12	\$D	W2000	DN12	24		SPARE	ALL
	B13	\$D	W2000	DL13	24		21-52-11	ALL
	B13	\$D	W2000	DN13	24		SPARE	ALL
	B14	\$D	W2000	DL14	24		21-58-11	ALL
	B14	\$D	W2000	DN14	24		21-58-11	ALL
	B15	\$D	W2000	DL15	24		21-52-31	ALL
	B15	\$D	W2000	DN15	24		SPARE	ALL
	B16	\$D	W2000	DL16	24		21-52-31	ALL
	B16	\$D	W2000	DN16	24		SPARE	ALL
	B17	\$D	W2000	DL17	24		SPARE	ALL
	B17	\$D	W2000	DN17	24		21-64-11	ALL
	B18	\$D	W2000	DL18	24		SPARE	ALL
	B18	\$D	W2000	DN18	24		21-64-11	ALL
	B19	\$D	W2000	DL19	24		SPARE	ALL
	B19	\$D	W2000	DN19	24		21-64-11	ALL
	B20	\$D	W2000	DL20	24		99-99-99	ALL
	B20	\$D	W2000	DN20	24		99-99-99	ALL
D06246P		AE0219/ /		PLUG-E8				ALL
	A01	UNUSED						ALL
	A02	\$D	W0942	145	24		36-11-51	ALL
	A03	\$D	W0942	146	24		36-11-52	ALL
	A04	\$D	W0942	147	24		36-22-11	ALL
	A05	\$D	W0942	148	24		36-22-11	ALL
	A06	\$D	W0942	226R	24		36-21-11	ALL
	A07	\$D	W0942	226B	24		36-21-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D06200

Page 83

Jun 06/2008



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06246P		AE0219/ /		PLUG-E8 (continued)				ALL
	A08	\$D	W0942	150	24		36-11-62	ALL
	A09	\$D	W0942	151	24		36-11-61	ALL
	A10	\$D	W0942	152	24		SPARE	050-099, 275-299
	A10	UNUSED						150-199
	A11	\$D	W0942	153	24		SPARE	050-099, 275-299
	A11	UNUSED						150-199
	A12	\$D	W0942	135	24		21-44-21	ALL
	A13	\$D	W0942	136	22		73-21-14	ALL
	A14	\$D	W0942	157	24		73-21-18	ALL
	A15	\$D	W0942	806	24		SPARE	ALL
	A16	\$D	W0942	807	24		32-42-11	ALL
	A17	\$D	W0942	165	24		21-58-11	ALL
	A18	\$D	W0942	217B	22		21-52-31	ALL
	A19	\$D	W0942	217R	22		21-52-31	ALL
	A20	UNUSED						ALL
	B01	UNUSED						ALL
	B02	\$D	W0942	191	24		36-11-61	ALL
	B03	\$D	W0942	235R	24		21-28-11	050-099, 275-299
	B03		W0942	235R	24		21-28-11	150-199
	B04	\$D	W0942	235B	24		21-28-11	050-099, 275-299
	B04		W0942	235B	24		21-28-11	150-199
	B05	\$D	W0942	218B	22		21-52-31	ALL
	B06	\$D	W0942	218R	22		21-52-31	ALL
	B07	\$D	W0942	225B	22		21-52-31	ALL
	B08	\$D	W0942	225R	22		21-52-31	ALL
	B09	\$D	W0942	219B	22		21-52-31	ALL
	B10	\$D	W0942	219R	22		21-52-31	ALL
	B11	\$D	W0942	322B	22		21-52-11	050-099, 275-299
	B11		W0942	322B	22		21-52-11	150-199
	B12	\$D	W0942	322R	22		21-52-11	050-099, 275-299
	B12		W0942	322R	22		21-52-11	150-199
	B13	\$D	W0942	322Y	22		21-52-11	050-099, 275-299
	B13		W0942	322Y	22		21-52-11	150-199
	B14	\$D	W0942	144	24		21-58-11	ALL
	B15	\$D	W0942	224B	22		21-52-31	ALL
	B16	\$D	W0942	224R	22		21-52-31	ALL
	B17	\$D	W0942	324B	24		21-64-11	ALL
	B18	\$D	W0942	324Y	24		21-64-11	ALL
	B19	\$D	W0942	324R	24		21-64-11	ALL
	B20	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D06200

Page 84

Jun 06/2008



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06246P		AE0219/ /		PLUG-E8 (continued)				ALL
	CAP	Y	W0942	152	24		SPARE	050-099
	CAP	Y	W0942	153	24		SPARE	050-099
	CAP	Y	W0942	806	24		SPARE	ALL
D06252J		AE0203/ /		RCPT-P33				ALL
	1	UNUSED						ALL
	2		W0142	073	24		36-11-41	ALL
	3		W0142	40F	22		30-81-11	050-099, 150-199
	3	UNUSED						275-299
	4		W0142	024	24		33-16-14	ALL
	5		W0142	02Z	24		21-26-21	ALL
	6		W0142	03J	24		21-44-21	ALL
	7		W0142	03K	22		21-44-21	ALL
	8		W0142	03L	24		21-26-21	ALL
	9		W0142	02Y	24		21-44-21	ALL
	10		W0142	03W	24		21-44-21	ALL
	11		W0142	02T	24		21-51-13	ALL
	12		W0142	06N	24		21-51-13	ALL
	13		W0142	06P	24		21-51-13	ALL
	14		W0142	05M	24		21-51-21	ALL
	15		W0142	202R	24		21-51-21	ALL
	16		W0142	202B	24		21-51-21	ALL
	17		W0142	06A	24		21-53-21	ALL
	18		W0142	06B	24		21-53-21	ALL
	19		W0142	06C	24		21-53-21	ALL
	20		W0142	06D	24		21-53-21	ALL
	21		W0142	06E	24		21-53-21	ALL
	22		W0142	06F	24		21-53-21	ALL
	23		W0142	06Q	24		21-51-13	ALL
	24		W0142	163	20		30-71-24	050-099, 150-199
	24	UNUSED						275-299
D06252P		AE0203/ /		PLUG-P33				ALL
	1		W1204	063	24		SPARE	ALL
	2		W1204	095	24		36-11-41	ALL
	3		W1204	060	20		30-81-11	050-099, 150-199
	3		W1204	065	22		SPARE	275-299
	4		W1204	096	24		33-16-14	ALL
	5		W1204	038	24		21-26-21	ALL
	6		W1204	039	24		21-44-21	ALL

HOOKUP LIST

D280T132

91-21-51

Section D06200

Page 85

Jun 06/2008



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06252P		AE0203/ /		PLUG-P33 (continued)				ALL
	7		W1204	046	22		21-44-21	ALL
	8		W1204	051	24		21-26-21	ALL
	9		W1204	071	24		21-44-21	ALL
	10		W1204	072	24		21-44-21	ALL
	11		W1204	062	24		21-51-13	ALL
	12		W1204	084	24		21-51-13	ALL
	13		W1204	085	24		21-51-13	ALL
	14		W1204	073	24		21-51-21	ALL
	15		W1204	208R	24		21-51-21	ALL
	16		W1204	208B	24		21-51-21	ALL
	17		W1204	078	24		21-53-21	ALL
	18		W1204	079	24		21-53-21	ALL
	19		W1204	080	24		21-53-21	ALL
	20		W1204	081	24		21-53-21	ALL
	21		W1204	082	24		21-53-21	ALL
	22		W1204	083	24		21-53-21	ALL
	23		W1204	086	24		21-51-13	ALL
	24		W1204	114	20		30-71-24	050-099, 150-199
	24	UNUSED						275-299
	CAP	Y	W1204	065	22		SPARE	150-154
D06253J		SHELF/E09/-01		RECEPTICLE				167-199
	1		W0091	060	24		23-25-15	167-199
	2		W0091	061	24		23-25-15	167-199
	3		W0091	062	24		23-25-15	167-199
	4		W0091	063	24		23-25-15	167-199
	5		W0091	064	24		23-25-15	167-199
	6		W0091	065	24		23-25-15	167-199
	7		W0091	066	24		23-25-15	167-199
	8	UNUSED						167-199
	9		W0091	068	20		23-25-15	167-199
	10		W0091	242R	24		23-25-15	167-199
	11		W0091	242B	24		23-25-15	167-199
	12		W0091	242Z			23-25-15	167-199
	13		W0091	243R	24		23-25-15	167-199
	14		W0091	243B	24		23-25-15	167-199
	15		W0091	243Z			23-25-15	167-199
	16		W0091	057	24		23-25-15	167-199
	17		W0091	058	20		23-25-15	167-199
	18		W0091	059	20		23-25-15	167-199

HOOKUP LIST

D280T132

91-21-51

Section D06200

Page 86

Jun 06/2008



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06253J		SHELF/E09/-01		RECEPTICLE (continued)				167-199
	19		W0091	251R	24		23-25-15	167-199
	20		W0091	251B	24		23-25-15	167-199
	21		W0091	251Z			23-25-15	167-199
	22	UNUSED						167-199
	23	UNUSED						167-199
	24	UNUSED						167-199
D06254J		AE0221/ /		RCPT-E8				ALL
	1		W2004	001	22		31-41-11	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W2004	016	24		24-25-13	ALL
	7		W2004	017	24		24-25-13	ALL
	8		W2004	018	24		24-25-13	ALL
	9		W2004	019	24		24-25-13	ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D06254P		AE0221/ /		PLUG-E8				ALL
	1		W0744	042	22		31-41-11	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W0744	063	24		24-25-13	ALL
	7		W0744	064	24		24-25-13	ALL
	8		W0744	065	24		24-25-13	ALL
	9		W0744	066	24		24-25-13	ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D06256J		AE0221/ /		RCPT-E8				ALL
	1		W2006	001	22		31-41-11	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D06200
Page 87
Jun 06/2008



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06256J		AE0221/ /		RCPT-E8 (continued)				ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W2006	007	22		31-41-17	ALL
	8		W2006	008	24		31-41-13	ALL
	9		W2006	009	24		31-41-13	ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D06256P		AE0221/ /		PLUG-E8				ALL
	1		W0764	041	22		31-41-11	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W0764	042	22		31-41-17	ALL
	8		W0764	076	24		31-41-13	ALL
	9		W0764	077	24		31-41-13	ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D06258J		AF0204/ /		RCPT-P61				ALL
	1		W0066	67A	12		28-22-12	ALL
	2		W0066	67B	12		28-22-12	ALL
	3	UNUSED						ALL
	4		W0066	67C	12		28-22-12	ALL
	5		W0066	68E	22		73-21-11	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14		W0066	68D	22		73-21-11	ALL
	15		W0066	68G	22		73-21-11	ALL
	16		W0066	FRC			73-21-11	ALL

HOOKUP LIST
D280T132

91-21-51
Section D06200
Page 88
Jun 06/2008



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06258J		AF0204/ /		RCPT-P61 (continued)				ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
			W0066	68DZ			73-21-11	ALL
			W0066	68EZ			73-21-11	ALL
			W0066	68GZ			73-21-11	ALL
			W0066	FRC			73-21-11	ALL
D06258P		AF0204/ /		PLUG-P61				ALL
	1		W0768	509	12		28-22-12	ALL
	2		W0768	510	12		28-22-12	ALL
	3	UNUSED						ALL
	4		W0768	511	12		28-22-12	ALL
	5		W0768	020	24		73-21-11	050-099, 150-199, 277-299
	5		W0768	020	22		73-21-11	275-276
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14		W0768	050	24		73-21-11	ALL
	15		W0768	051	22		73-21-11	050-099, 150-199, 275-276
	15		W0768	051	24		73-21-11	277-299
	16		W0768	FRF			73-21-11	050-099, 150-199

HOOKUP LIST

D280T132

91-21-51

Section D06200

Page 89

Jun 06/2008



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06258P		AF0204/ /		PLUG-P61 (continued)				ALL
	16		W0768	FRH			73-21-11	275-299
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
			W0768	FRF			73-21-11	050-099, 150-199
			W0768	020Z			73-21-11	ALL
			W0768	050Z			73-21-11	ALL
			W0768	051Z			73-21-11	ALL
			W0768	FRH			73-21-11	275-299
D06260J		AE0218/ /		RCPT-				ALL
	1		W0192	12U	12		28-22-12	ALL
	2		W0192	12V	12		28-22-12	ALL
	3		W0192	596	22		27-09-12	ALL
	4		W0192	12W	12		28-22-12	ALL
	5		W0192	542	22		27-23-11	ALL
	6		W0192	062	12		24-51-24	ALL
	7		W0192	540	20		27-23-11	ALL
	8	FM	W0192	115	16		21-58-11	050-099
	8		W0192	115	16		21-58-11	150-199, 275-299
	9	FM	W0192	91F	16		73-21-20	ALL
	10		W0192	18J	24		73-21-11	ALL
	11		W0192	185Z			73-21-19	ALL
	12		W0192	508	24		21-51-21	ALL
	13		W0192	03X	24		21-58-11	ALL
	14		W0192	511	24		21-58-11	ALL
	15		W0192	299B	24		77-12-11	ALL

HOOKUP LIST
D280T132

91-21-51
Section D06200
Page 90
Jun 06/2008



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06260J		AE0218/ /		RCPT- (continued)				ALL
	16		W0192	02U	24		21-58-11	ALL
	17		W0192	07S	24		24-51-52	ALL
	18		W0192	07R	24		24-51-52	ALL
	19		W0192	78C	20		78-34-21	ALL
	20		W0192	78CZ			78-34-21	ALL
	21		W0192	08Y	24		24-51-71	ALL
	22		W0192	08Z	24		24-51-71	ALL
	23		W0192	03K	24		21-51-21	ALL
	24		W0192	251B	24		73-21-14	ALL
	25		W0192	251R	24		73-21-14	ALL
	26		W0192	251Z			73-21-14	ALL
	27		W0192	184	22		73-21-19	ALL
	28		W0192	299R	24		77-12-11	ALL
	29		W0192	FRS			73-21-11	050-099, 150-199, 277-299
	29		W0192	91FZ			73-21-20	275-276
	30		W0192	185	20		73-21-19	ALL
	31		W0192	18L	24		73-21-11	ALL
	32		W0192	299Z			77-12-11	ALL
	DED		W0192	03XZ			21-58-11	ALL
	DED		W0192	115Z			21-58-11	ALL
	DED		W0192	511Z			21-58-11	ALL
			W0192	18JZ			73-21-11	ALL
			W0192	18LZ			73-21-11	ALL
			W0192	91FZ			73-21-20	050-099, 150-199, 277-299
			W0192	FRS			73-21-11	050-099, 150-199, 277-299
D06260P		AE0218/ /		PLUG-P37				ALL
	1		W0768	509	12		28-22-12	ALL
	2		W0768	510	12		28-22-12	ALL
	3		W0768	010	22		27-09-12	ALL
	4		W0768	511	12		28-22-12	ALL
	5		W0768	047	22		27-23-11	ALL
	6		W0768	518	12		24-51-24	ALL
	7		W0768	049	20		27-23-11	ALL
	8		W0768	137	16		21-58-11	ALL
	9	FL	W0768	019	16		73-21-20	ALL
	10		W0768	028	24		73-21-11	050-099, 162-199, 276-299
	10		W0768	235	24		73-21-11	150-157, 275
	11		W0768	096Z			73-21-19	ALL
	12		W0768	111	24		21-51-21	ALL

HOOKUP LIST

D280T132

91-21-51

Section D06200

Page 91

Jun 06/2008



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06260P		AE0218/ /		PLUG-P37 (continued)				ALL
	13		W0768	135	24		21-58-11	ALL
	14		W0768	136	24		21-58-11	ALL
	15		W0768	227B	24		77-12-11	ALL
	16		W0768	138	24		21-58-11	ALL
	17		W0768	164	24		24-51-52	ALL
	18		W0768	166	24		24-51-52	ALL
	19	DL	W0768	610	18		78-34-21	ALL
	20		W0768	610Z			78-34-21	ALL
	21		W0768	189	24		24-51-71	ALL
	22		W0768	190	24		24-51-71	ALL
	23		W0768	173	24		21-51-21	ALL
	24		W0768	251B	24		73-21-14	ALL
	25		W0768	251R	24		73-21-14	ALL
	26		W0768	251Z			73-21-14	ALL
	27		W0768	095	22		73-21-19	ALL
	28		W0768	227R	24		77-12-11	ALL
	29		W0768	FRH			73-21-11	050-099, 150-199
	29		W0768	FRK			73-21-11	275-299
	30		W0768	096	20		73-21-19	ALL
	31		W0768	004	24		73-21-11	ALL
	32		W0768	227Z			77-12-11	ALL
	CAP	Y	W0768	141	24		SPARE	050-099
	CAP	Y	W0768	180	22		SPARE	ALL
	CAP	Y	W0768	181	24		SPARE	ALL
	CAP	Y	W0768	514	24		SPARE	150-199
	CAP	Y	W0768	515	24		SPARE	150-199
			W0768	FRH			73-21-11	050-099, 150-199
			W0768	004Z			73-21-11	ALL
			W0768	019Z			73-21-20	ALL
			W0768	028Z			73-21-11	050-099, 162-199, 276-299
			W0768	235Z			73-21-11	150-157, 275
			W0768	FRK			73-21-11	275-299
D06261J		AE0314/ /		RCPT-E2-2				150-199
D06261J		/ /		RCPT-E2-2				275-299
	1		W0143	248R	24		22-21-31	150-199, 275-299
	2		W0143	248B	24		22-21-31	150-199, 275-299
	3		W0143	248Z			22-21-31	150-199, 275-299
	4	UNUSED						150-199, 275-299
	5	UNUSED						150-199, 275-299

HOOKUP LIST

D280T132

91-21-51

Section D06200

Page 92

Jun 06/2008



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06261J		AEO314/ /		RCPT-E2-2 (continued)				150-199
D06261J		//		RCPT-E2-2 (continued)				275-299
	6	UNUSED						150-199, 275-299
	7	UNUSED						150-199, 275-299
	8	UNUSED						150-199, 275-299
	9	UNUSED						150-199, 275-299
	10	UNUSED						150-199, 275-299
	11	UNUSED						150-199, 275-299
	12	UNUSED						150-199, 275-299
	13	UNUSED						150-199, 275-299
	14	UNUSED						150-199, 275-299
	15	UNUSED						150-199, 275-299
	16	UNUSED						150-199, 275-299
	17	UNUSED						150-199, 275-299
	18	UNUSED						150-199, 275-299
	19	UNUSED						150-199, 275-299
	20	UNUSED						150-199, 275-299
	21	UNUSED						150-199, 275-299
	22	UNUSED						150-199, 275-299
	23	UNUSED						150-199, 275-299
	24	UNUSED						150-199, 275-299
	25	UNUSED						150-199, 275-299
	26	UNUSED						150-199, 275-299
	27	UNUSED						150-199, 275-299
	28	UNUSED						150-199, 275-299
	29	UNUSED						150-199, 275-299
	30	UNUSED						150-199, 275-299
	31	UNUSED						150-199, 275-299
D06261P		AEO314/ /		PLUG-E2-2				167-199
D06261P		//		PLUG-E2-2				275-299
	1		W0145	730R	24		22-21-31	167-199, 275-299
	2		W0145	730B	24		22-21-31	167-199, 275-299
	3		W0145	730Z			22-21-31	167-199, 275-299
	4	UNUSED						167-199, 275-299
	5	UNUSED						167-199, 275-299
	6	UNUSED						167-199, 275-299
	7	UNUSED						167-199, 275-299
	8	UNUSED						167-199, 275-299
	9	UNUSED						167-199, 275-299
	10	UNUSED						167-199, 275-299

HOOKUP LIST

D280T132

91-21-51

Section D06200

Page 93

Jun 06/2008



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06261P		AE0314/ /		PLUG-E2-2 (continued)				167-199
D06261P		//		PLUG-E2-2 (continued)				275-299
	11	UNUSED						167-199, 275-299
	12	UNUSED						167-199, 275-299
	13	UNUSED						167-199, 275-299
	14	UNUSED						167-199, 275-299
	15	UNUSED						167-199, 275-299
	16	UNUSED						167-199, 275-299
	17	UNUSED						167-199, 275-299
	18	UNUSED						167-199, 275-299
	19	UNUSED						167-199, 275-299
	20	UNUSED						167-199, 275-299
	21	UNUSED						167-199, 275-299
	22	UNUSED						167-199, 275-299
	23	UNUSED						167-199, 275-299
	24	UNUSED						167-199, 275-299
	25	UNUSED						167-199, 275-299
	26	UNUSED						167-199, 275-299
	27	UNUSED						167-199, 275-299
	28	UNUSED						167-199, 275-299
	29	UNUSED						167-199, 275-299
	30	UNUSED						167-199, 275-299
	31	UNUSED						167-199, 275-299
D06262J		AE0220/ /		RCPT-E3-2				ALL
	1		W1204	084	24		21-51-13	ALL
	2		W1204	085	24		21-51-13	ALL
	3		W1204	086	24		21-51-13	ALL
	4		W1204	203B	22		21-51-13	ALL
	5		W1204	203R	22		21-51-13	ALL
	6		W1204	204B	22		21-51-13	ALL
	7		W1204	204R	22		21-51-13	ALL
	8		W1204	088	20		21-51-13	ALL
	9		W1204	089	20		21-51-13	ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D06262P		AE0220/ /		PLUG-E3-1				ALL
	1		W2052	005	24		21-51-13	ALL
	2		W2052	006	24		21-51-13	ALL

HOOKUP LIST

D280T132

91-21-51
 Section D06200
 Page 94
 Jun 06/2008



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06262P		AE0220/ /		PLUG-E3-1 (continued)				ALL
	3		W2052	007	24		21-51-13	ALL
	4		W2052	203B	22		21-51-13	ALL
	5		W2052	203R	22		21-51-13	ALL
	6		W2052	204B	22		21-51-13	ALL
	7		W2052	204R	22		21-51-13	ALL
	8		W2052	008	22		21-51-13	ALL
	9		W2052	009	20		21-51-13	ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D06264J		AE0220/ /		RCPT-E3-2				ALL
	1		W0572	559	24		21-51-23	ALL
	2		W0572	560	24		21-51-23	ALL
	3		W0572	561	24		21-51-23	ALL
	4		W0572	221B	22		21-51-23	ALL
	5		W0572	221R	22		21-51-23	ALL
	6		W0572	220B	22		21-51-23	ALL
	7		W0572	220R	22		21-51-23	ALL
	8		W0572	572	20		21-51-23	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D06264P		AE0220/ /		PLUG-E3-1				ALL
	1		W2052	001	24		21-51-23	ALL
	2		W2052	002	24		21-51-23	ALL
	3		W2052	003	24		21-51-23	ALL
	4		W2052	201B	22		21-51-23	ALL
	5		W2052	201R	22		21-51-23	ALL
	6		W2052	202B	22		21-51-23	ALL
	7		W2052	202R	22		21-51-23	ALL
	8		W2052	004	22		21-51-23	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D06200

Page 95

Jun 06/2008



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06266J		0515/181/R087		RCPT-				050-099
D06266J		0515/181/R087		RCPT				150-199, 275-299
	1		W0960	206B	24		52-71-13	ALL
	2		W0960	206R	24		52-71-13	ALL
	3		W0960	202B	24		52-34-13	ALL
	4		W0960	202R	24		52-34-13	ALL
	5		W0960	203B	24		52-34-13	ALL
	6		W0960	203R	24		52-34-13	ALL
	7		W0960	204B	24		52-71-13	ALL
	8		W0960	204R	24		52-71-13	ALL
	9		W0960	205B	24		52-34-13	ALL
	10		W0960	205R	24		52-34-13	ALL
	11		W0960	011	20		52-34-11	ALL
	12		W0960	012	20		52-34-11	ALL
	13		W0960	013	20		52-34-11	ALL
	14		W0960	008	20		52-34-11	ALL
	15		W0960	015	20		52-34-11	ALL
	16		W0960	016	20		52-34-11	ALL
	17		W0960	017	20		33-31-61	ALL
	18		W0960	018	20		33-31-61	ALL
	19	UNUSED						ALL
	20		W0960	020	20		33-37-11	050-099
	20	DL	W0960	020	18		33-37-11	150-199, 275-299
	21		W0960	021	20		33-37-11	050-099
	21	DL	W0960	021	18		33-37-11	150-199, 275-299
	22		W0960	009	20		33-31-61	ALL
	23		W0960	010	20		33-31-61	ALL
	24		W0960	024	20		52-34-11	ALL
D06266P		0515/181/R087		PLUG-				ALL
	1		W0958	206B	24		52-71-13	ALL
	2		W0958	206R	24		52-71-13	ALL
	3		W0958	202B	24		52-34-13	ALL
	4		W0958	202R	24		52-34-13	ALL
	5		W0958	203B	24		52-34-13	ALL
	6		W0958	203R	24		52-34-13	ALL
	7		W0958	204B	24		52-71-13	ALL
	8		W0958	204R	24		52-71-13	ALL
	9		W0958	205B	24		52-34-13	ALL
	10		W0958	205R	24		52-34-13	ALL
	11		W0958	011	20		52-34-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D06200

Page 96

Jun 06/2008



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06266P		0515/181/R087		PLUG- (continued)				ALL
	12		W0958	012	20		52-34-11	ALL
	13		W0958	013	20		52-34-11	ALL
	14		W0958	005	20		52-34-11	ALL
	15		W0958	014	20		52-34-11	ALL
	16		W0958	016	20		52-34-11	ALL
	17		W0958	017	20		33-31-61	ALL
	18		W0958	018	20		33-31-61	ALL
	19	UNUSED						ALL
	20		W0958	020	20		33-37-11	ALL
	21		W0958	064	20		33-37-11	ALL
	22		W0958	009	20		33-31-61	ALL
	23		W0958	010	20		33-31-61	ALL
	24		W0958	015	20		52-34-11	ALL
D06272J		0285/282/L040		RCPT-				ALL
	= 1		W0130	004	22		33-22-41	ALL
D06272P		0285/282/L040		PLUG-				ALL
	= 1		W1224	110	20		33-22-41	ALL
D06274J		0285/282/L040		RCPT-				ALL
	= 1		W1224	107	22		33-22-41	ALL
D06274P		0285/282/L040		PLUG-				ALL
	= 1		W0130	001	22		33-22-41	ALL
D06278J		AE0317/ /		RECP-E1-2				050-099, 275-299
D06278J		AE0317/ /		RCPT-E1-2				150-199
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10		W0768	218R	24		77-31-11	ALL
	11		W0768	218B	24		77-31-11	ALL
	12		W0768	218Z			77-31-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D06200

Page 97

Jun 06/2008



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06278J		AE0317/ /		RECP-E1-2 (continued)				050-099, 275-299
D06278J		AE0317/ /		RCPT-E1-2 (continued)				150-199
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D06278P		AE0317/ /		PLUG-E1-2				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10		W1100	232R	24		77-31-11	ALL
	11		W1100	232B	24		77-31-11	ALL
	12		W1100	232Z			77-31-11	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D06200

Page 98

Jun 06/2008



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06280J		AL1008/ /		RCPT-R W/W DISC				ALL
	1		W0656	141	20		29-11-31	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W0656	144	20		29-11-31	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W0656	147	20		29-11-31	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
D06280P		AL1008/ /		PLUG-R W/W DISC				ALL
	1		W1308	301B	18		29-11-31	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W1308	301Y	18		29-11-31	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W1308	301R	18		29-11-31	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
D06286J		AE0223/ /		RCPT-P36				ALL
	1		W0176	773	12		21-58-14	ALL
	2		W0176	774	12		21-58-14	ALL
	3		W0176	775	12		21-58-14	ALL
	4	UNUSED						050-099, 150-199
	4		W0176	70K	22		32-45-11	275-299
	5	UNUSED						050-099, 150-199
	5		W0176	19J	22		32-45-11	275-299

HOOKUP LIST
D280T132



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06286J		AE0223/ /		RCPT-P36 (continued)				ALL
	6		W0176	77F	20		36-23-11	050-099, 156-162, 166-199, 277-299
	6	UNUSED						150-155, 163-165, 275-276
	7		W0176	78F	20		36-23-11	050-099, 156-162, 166-199, 277-299
	7	UNUSED						150-155, 163-165, 275-276
	8		W0176	79F	20		36-23-11	050-099, 156-162, 166-199, 277-299
	8	UNUSED						150-155, 163-165, 275-276
D06286P		AE0223/ /		PLUG-				ALL
	1		W0572	192	12		21-58-14	ALL
	2		W0572	193	12		21-58-14	ALL
	3		W0572	194	12		21-58-14	ALL
	4	UNUSED						050-099, 150-199
	4		W0572	663	22		32-45-11	275-299
	5	UNUSED						050-099, 150-199
	5		W0572	665	22		32-45-11	275-299
	6		W0572	695	20		36-23-11	ALL
	7		W0572	696	20		36-23-11	ALL
	8		W0572	697	20		36-23-11	ALL
D06288J		AE0224/ /		RCPT-P37				ALL
	1		W0192	065	12		21-58-15	ALL
	2		W0192	066	12		21-58-15	ALL
	3		W0192	067	12		21-58-15	ALL
	4		W0192	626	12		21-58-15	ALL
	5		W0192	627	12		21-58-15	ALL
	6		W0192	628	12		21-58-15	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
D06288P		AE0224/ /		PLUG-				ALL
	1		W0506	151	12		21-58-15	ALL
	2		W0506	150	12		21-58-15	ALL
	3		W0506	149	12		21-58-15	ALL
	4		W0506	595	12		21-58-15	ALL
	5		W0506	596	12		21-58-15	ALL
	6		W0506	597	12		21-58-15	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D06200

Page 100

Jun 06/2008



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06292J		AW0319/ /		RCPT-L WING/STRUT				ALL
	1		W0406	01TW	20		77-31-11	050-099, 155-199, 277-299
	1		W0406	203W	20		77-31-11	150-154, 275-276
	2		W0406	01TR	20		77-31-11	050-099, 155-199, 277-299
	2		W0406	203R	20		77-31-11	150-154, 275-276
	3		W0406	01TI			77-31-11	050-099, 155-199, 277-299
	3		W0406	203Z			77-31-11	150-154, 275-276
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	= CC	M	W0406	01TO			77-31-11	050-099, 155-199, 277-299
D06292P		AW0319/ /		PLUG-L WING/STRUT				050-099, 155-157, 164-199, 277-299
D06292P		AW0319/POS/05..		PLUG-L WING/STRUT				150-154, 162-163, 275-276
	1		W0380	01TW	20		77-31-11	050-099, 155-199, 277-299
	1		W0380	201W	20		77-31-11	150-154, 275-276
	2		W0380	01TR	20		77-31-11	050-099, 155-199, 277-299

HOOKUP LIST

D280T132

91-21-51

Section D06200

Page 101

Jun 06/2008



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06292P		AW0319/ /		PLUG-L WING/STRUT (continued)				050-099, 155-157, 164-199, 277-299
D06292P		AW0319/POS/05..		PLUG-L WING/STRUT (continued)				150-154, 162-163, 275-276
	2		W0380	201R	20		77-31-11	150-154, 275-276
	3		W0380	01TI			77-31-11	050-099, 155-199, 277-299
	3		W0380	201Z			77-31-11	150-154, 275-276
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W0380	301R	20		SPARE	050-099, 155-157, 164-199, 277-299
	6	UNUSED						150-154, 162-163, 275-276
	7		W0380	301B	20		SPARE	050-099, 155-157, 164-199, 277-299
	7	UNUSED						150-154, 162-163, 275-276
	8		W0380	301Y	20		SPARE	050-099, 155-157, 164-199, 277-299
	8	UNUSED						150-154, 162-163, 275-276
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	= CC	M	W0380	01TO			77-31-11	050-099, 155-199, 277-299
	= CC	M	W0380	301Z			SPARE	050-099, 155-157, 164-199, 277-299
D06296J		AW0320/ /		RCPT-R WING/STRUT				ALL
	1		W0408	01TW	20		77-31-11	050-099, 155-199, 277-299
	1		W0408	204W	20		77-31-11	150-154, 275-276

HOOKUP LIST
D280T132

91-21-51
Section D06200
Page 102
Jun 06/2008



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06296J		AW0320/ /		RCPT-R WING/STRUT (continued)				ALL
	2		W0408	01TR	20		77-31-11	050-099, 155-199, 277-299
	2		W0408	204R	20		77-31-11	150-154, 275-276
	3		W0408	01TI			77-31-11	050-099, 155-199, 277-299
	3		W0408	204Z			77-31-11	150-154, 275-276
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	= CC	M	W0408	01TO			77-31-11	050-099, 155-199, 277-299
D06296P		AW0320/ /		PLUG-R WING/STRUT				050-099, 155-157, 164-199, 277-299
D06296P		AW0320/POS/05..		PLUG-R WING/STRUT				150-154, 162-163, 275-276
	1		W0384	01TW	20		77-31-11	050-099, 155-199, 277-299
	1		W0384	201W	20		77-31-11	150-154, 275-276
	2		W0384	01TR	20		77-31-11	050-099, 155-199, 277-299
	2		W0384	201R	20		77-31-11	150-154, 275-276
	3		W0384	01TI			77-31-11	050-099, 155-199, 277-299

HOOKUP LIST

D280T132

91-21-51

Section D06200

Page 103

Jun 06/2008



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06296P		AW0320/ /		PLUG-R WING/STRUT (continued)				050-099, 155-157, 164-199, 277-299
D06296P		AW0320/POS/05..		PLUG-R WING/STRUT (continued)				150-154, 162-163, 275-276
	3		W0384	201Z			77-31-11	150-154, 275-276
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W0384	301R	20		SPARE	050-099, 155-157, 164-199, 277-299
	6	UNUSED						150-154, 162-163, 275-276
	7		W0384	301B	20		SPARE	050-099, 155-157, 164-199, 277-299
	7	UNUSED						150-154, 162-163, 275-276
	8		W0384	301Y	20		SPARE	050-099, 155-157, 164-199, 277-299
	8	UNUSED						150-154, 162-163, 275-276
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	= CC	M	W0384	01TO			77-31-11	050-099, 155-199, 277-299
	= CC	M	W0384	301Z			SPARE	050-099, 155-157, 164-199, 277-299
D06298J		AC0702/ /		RCPT-				150-199, 275-299
	1	UNUSED						150-199, 275-299
	2	UNUSED						150-199, 275-299
	3	UNUSED						150-199, 275-299
	4	UNUSED						150-199, 275-299

HOOKUP LIST
D280T132

91-21-51
Section D06200
Page 104
Jun 06/2008



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06298J		AC0702/ /		RCPT- (continued)				150-199, 275-299
	5	UNUSED						150-199, 275-299
	6	UNUSED						150-199, 275-299
	7	UNUSED						150-199, 275-299
	8	UNUSED						150-199, 275-299
	9	UNUSED						150-199, 275-299
	10	UNUSED						150-199, 275-299
	11	UNUSED						150-199, 275-299
	12	UNUSED						150-199, 275-299
	13	UNUSED						150-199, 275-299
	14	UNUSED						150-199, 275-299
	15	UNUSED						150-199, 275-299
	16	UNUSED						150-199, 275-299
	17	UNUSED						150-199, 275-299
	18		W0671	203R	22		SPARE	150-199, 275-299
	19		W0671	203B	22		SPARE	150-199, 275-299
	20		W0671	203Z			SPARE	150-199, 275-299
	21	UNUSED						150-199, 275-299
	22	UNUSED						150-199, 275-299
	23	UNUSED						150-199, 275-299
	24	UNUSED						150-199, 275-299
	25		W0671	003	22		SPARE	150-199, 275-299
	26	UNUSED						150-199, 275-299
	27	UNUSED						150-199, 275-299
	28	UNUSED						150-199, 275-299
	29	UNUSED						150-199, 275-299
	30	UNUSED						150-199, 275-299
	31	UNUSED						150-199, 275-299

HOOKUP LIST

D280T132

91-21-51

Section D06200

Page 105 End

Jun 06/2008



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06300J		AC0701 / /		RCPT-				150-199, 275-299
	1		W0669	302R	20		SPARE	150-199
	1	UNUSED						275-299
	2		W0669	302B	20		SPARE	150-199
	2	UNUSED						275-299
	3		W0669	302Y	20		SPARE	150-199
	3	UNUSED						275-299
	4		W0669	303Z			SPARE	150-199
	4	UNUSED						275-299
	5		W0669	303R	20		SPARE	150-199
	5	UNUSED						275-299
	6	UNUSED						150-199, 275-299
	7	UNUSED						150-199, 275-299
	8	UNUSED						150-199, 275-299
	9	UNUSED						150-199, 275-299
	10	UNUSED						150-199, 275-299
	11	UNUSED						150-199, 275-299
	12	UNUSED						150-199, 275-299
	13		W0669	303B	20		SPARE	150-199
	13	UNUSED						275-299
	14		W0669	303Y	20		SPARE	150-199
	14	UNUSED						275-299
	15	UNUSED						150-199, 275-299
	16	UNUSED						150-199, 275-299
	17	UNUSED						150-199, 275-299
	18		W0669	203R	22		SPARE	150-199, 275-299
	19		W0669	203B	22		SPARE	150-199, 275-299
	20		W0669	203Z			SPARE	150-199, 275-299
	21	UNUSED						150-199, 275-299
	22	UNUSED						150-199, 275-299
	23	UNUSED						150-199, 275-299
	24	UNUSED						150-199, 275-299
	25		W0669	003	22		SPARE	150-199, 275-299
	26	UNUSED						150-199, 275-299
	27	UNUSED						150-199, 275-299
	28	UNUSED						150-199, 275-299
	29	UNUSED						150-199, 275-299
	30	UNUSED						150-199, 275-299
	31	UNUSED						150-199, 275-299

HOOKUP LIST

D280T132

91-21-51

Section D06300

Page 1

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06302J		1384/127/L050		PLUG-				ALL
	1	UNUSED						050-099, 150-199
	1		W1366	001	22		30-71-23	275-299
	2		W1366	002	20		30-71-23	050-099, 155-199
	2		W1366	002	22		30-71-23	150-154, 275-299
	3	UNUSED						050-099, 150-199, 277-299
	3		W1366	003	20		30-71-23	275-276
	4	DL	W1366	004	18		30-71-11	ALL
	5		W1366	005	20		30-71-23	050-099, 155-199
	5		W1366	005	22		30-71-23	150-154, 275-299
	6	UNUSED						050-099
	7	UNUSED						050-099
	8	UNUSED						050-099
	9	UNUSED						050-099
	10	UNUSED						050-099
	11	UNUSED						050-099
	12	UNUSED						050-099
D06302P		1384/127/L050		PLUG-				ALL
	1	UNUSED						050-099, 150-199
	1		W1256	010	22		30-71-23	275-299
	2		W1256	036	20		30-71-23	050-099, 155-199
	2		W1256	036	22		30-71-23	150-154, 275-299
	3	UNUSED						050-099, 150-199, 277-299
	3		W1256	042	20		30-71-23	275-276
	4	DK	W1256	020	18		30-71-11	ALL
	5		W1256	075	20		30-71-23	050-099, 155-199
	5		W1256	075	22		30-71-23	150-154, 275-299
	6	UNUSED						050-099
	7	UNUSED						050-099
	8	UNUSED						050-099
	9	UNUSED						050-099
	10	UNUSED						050-099
	11	UNUSED						050-099
	12	UNUSED						050-099
D06304J		AC1402/ /		RCPT-				ALL
	1		W1356	025	20		30-71-24	050-099
	1		W1356	025	22		30-71-23	150-154
	1		W1356	025	20		30-71-23	155-199

HOOKUP LIST

D280T132

91-21-51

Section D06300

Page 2

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06304J		AC1402/ /		RCPT- (continued)				ALL
	1	UNUSED						275-299
	2		W1356	002	20		30-71-23	050-099, 155-199
	2		W1356	002	22		30-71-23	150-154, 275-299
	3		W1356	003	20		30-71-24	050-099
	3		W1356	003	22		30-71-23	150-154, 277-299
	3		W1356	003	20		30-71-23	155-199
	3	UNUSED						275-276
	4		W1356	004	20		30-71-24	050-099
	4		W1356	004	22		30-71-23	150-154, 275-299
	4		W1356	004	20		30-71-23	155-199
	5		W1356	005	20		30-71-23	050-099
	5		W1356	005	20		30-71-24	150-199
	5	UNUSED						275-299
	6		W1356	006	20		30-71-24	050-099
	6		W1356	006	22		30-71-23	150-154, 275-299
	6		W1356	006	20		30-71-23	155-199
	7	UNUSED						050-099, 275-299
	7		W1356	018	24		38-15-11	150-199
	8	UNUSED						050-099, 275-299
	8		W1356	019	24		21-44-21	150-199
	9	UNUSED						050-099, 275-299
	9		W1356	020	24		21-44-21	150-199
	10		W1356	022	20		30-71-23	050-099, 155-199
	10		W1356	022	22		30-71-23	150-154
	10	UNUSED						275-299
	11		W1356	023	20		30-71-23	050-099, 155-199
	11		W1356	023	22		30-71-23	150-154
	11	UNUSED						275-299
	12	FL	W1356	001	16		30-71-24	050-099, 150-199
	12	UNUSED						275-299
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						050-099, 275-299
	16	UNUSED						050-099, 275-299
	17	UNUSED						050-099, 275-299
	18		W1356	018	24		38-15-11	050-099, 275-299
	19		W1356	019	24		21-44-21	050-099, 275-299
	20		W1356	020	24		21-44-21	050-099, 275-299
	21	UNUSED						050-099, 275-299
	22	UNUSED						050-099

HOOKUP LIST
D280T132

91-21-51
Section D06300
Page 3
Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06304J		AC1402/ /		RCPT- (continued)				ALL
	22		W1356	022	22		30-71-23	275-299
	23	UNUSED						050-099
	23		W1356	023	22		30-71-23	275-299
	24	UNUSED						050-099, 275-299
D06304P		AC1402/ /		PLUG-				ALL
	1		W1256	010	20		30-71-24	050-099
	1		W1256	010	20		30-71-23	150-199
	1	UNUSED						275-299
	2		W1256	001	20		30-71-23	050-099, 155-199
	2		W1256	001	22		30-71-23	150-154, 275-299
	3		W1256	042	20		30-71-24	050-099
	3		W1256	042	20		30-71-23	150-199
	3	UNUSED						275-276
	3		W1256	042	22		30-71-23	277-299
	4		W1256	003	20		30-71-24	050-099
	4		W1256	003	22		30-71-23	150-154, 275-299
	4		W1256	003	20		30-71-23	155-199
	5		W1256	011	20		30-71-23	050-099
	5		W1256	011	20		30-71-24	150-199
	5	UNUSED						275-299
	6		W1256	002	20		30-71-24	050-099
	6		W1256	002	22		30-71-23	150-154, 275-299
	6		W1256	002	20		30-71-23	155-199
	7	UNUSED						050-099, 275-299
	7		W1256	033	24		38-15-11	150-199
	8	UNUSED						050-099, 275-299
	8		W1256	028	24		21-44-21	150-199
	9	UNUSED						050-099, 275-299
	9		W1256	029	24		21-44-21	150-199
	10		W1256	071	20		30-71-23	050-099, 155-199
	10		W1256	071	22		30-71-23	150-154
	10	UNUSED						275-299
	11		W1256	072	20		30-71-23	050-099, 155-199
	11		W1256	072	22		30-71-23	150-154
	11	UNUSED						275-299
	12	FM	W1256	602	16		30-71-24	050-099
	12		W1256	602	16		30-71-24	150-199
	12	UNUSED						275-299
	13	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D06300

Page 4

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06304P		AC1402/ /		PLUG- (continued)				ALL
	14	UNUSED						ALL
	15	UNUSED						050-099, 275-299
	16	UNUSED						050-099, 275-299
	17	UNUSED						050-099, 275-299
	18		W1256	033	24		38-15-11	050-099, 275-299
	19		W1256	028	24		21-44-21	050-099, 275-299
	20		W1256	029	24		21-44-21	050-099, 275-299
	21	UNUSED						050-099, 275-299
	22	UNUSED						050-099
	22		W1256	071	22		30-71-23	275-299
	23	UNUSED						050-099
	23		W1256	072	22		30-71-23	275-299
	24	UNUSED						050-099, 275-299
D06306J		AC1402/ /		RCPT-				ALL
	1		W1358	101	24		21-26-11	ALL
	2		W1358	102	24		21-26-21	ALL
	3		W1358	103	22		21-26-21	ALL
	4		W1358	104	22		21-26-21	ALL
	5		W1358	105	22		21-26-21	ALL
	6	DL	W1358	106	18		38-15-11	ALL
	7	DL	W1358	107	18		38-15-11	ALL
	8	DL	W1358	108	18		38-15-11	ALL
	9		W1358	109	22		38-32-11	ALL
	10	DL	W1358	044	18		38-32-14	050-099, 150-154, 275-276
	10	UNUSED						155-199, 277-299
	11	DL	W1358	045	18		38-32-14	ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14		W1358	114	16		21-26-11	ALL
	15	UNUSED						ALL
	16		W1358	116	16		21-26-11	ALL
	17	UNUSED						ALL
	18		W1358	118	16		21-26-11	ALL
	19	UNUSED						ALL
	20		W1358	120	12		38-32-11	ALL
	21	UNUSED						ALL
	22		W1358	122	12		38-32-11	ALL
	23	UNUSED						ALL
	24		W1358	124	12		38-32-11	ALL

HOOKUP LIST
D280T132

91-21-51
Section D06300
Page 5
Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06306J		AC1402/ /		RCPT- (continued)				ALL
	25	UNUSED						ALL
D06306P		AC1402/ /		PLUG-				ALL
	1		W0580	103	24		21-26-11	ALL
	2		W0580	132	24		21-26-21	ALL
	3		W0580	112	22		21-26-21	ALL
	4		W0580	113	22		21-26-21	ALL
	5		W0580	114	22		21-26-21	ALL
	6	DK	W0580	016	18		38-15-11	ALL
	7	DK	W0580	015	18		38-15-11	ALL
	8	DK	W0580	014	18		38-15-11	ALL
	9		W0580	044	22		38-32-11	ALL
	10	DK	W0580	045	18		38-32-14	050-099, 150-154, 275-276
	10	UNUSED						155-199, 277-299
	11	DK	W0580	022	18		38-32-14	ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14		W0580	097	14		21-26-11	ALL
	15	UNUSED						ALL
	16		W0580	098	14		21-26-11	ALL
	17	UNUSED						ALL
	18		W0580	099	14		21-26-11	ALL
	19	UNUSED						ALL
	20		W0580	041	12		38-32-11	ALL
	21	UNUSED						ALL
	22		W0580	042	12		38-32-11	ALL
	23	UNUSED						ALL
	24		W0580	043	12		38-32-11	ALL
	25	UNUSED						ALL
D06308J		AC1501/ /		RCPT-				ALL
	1	UNUSED						ALL
	2		W1358	002	20		30-71-24	050-099
	2		W1358	002	22		30-71-23	150-154, 275-299
	2		W1358	002	20		30-71-23	155-199
	3		W1358	003	20		30-71-23	050-099, 155-199
	3		W1358	003	22		30-71-23	150-154, 275-299
	4		W1358	004	20		30-71-23	050-099
	4		W1358	004	20		30-71-24	150-199
	4	UNUSED						275-299

HOOKUP LIST

D280T132

91-21-51

Section D06300

Page 6

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06308J		AC1501/ /		RCPT- (continued)				ALL
	5	UNUSED						050-099, 150-199, 277-299
	5		W1358	005	22		30-71-23	275-276
	6		W1358	006	20		30-71-23	050-099, 155-199
	6		W1358	006	22		30-71-23	150-154, 275-299
	7		W1358	220Z			21-31-21	ALL
	8		W1358	008	20		30-71-23	050-099, 150-199, 275-276
	8		W1358	008	22		30-71-23	277-299
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15		W1358	015	16		30-71-24	050-099, 150-199
	15	UNUSED						275-299
	16	UNUSED						ALL
	17	UNUSED						ALL
	18		W1358	018	20		21-31-21	ALL
	19	UNUSED						ALL
	20		W1358	220B	24		21-31-21	ALL
	21		W1358	220R	24		21-31-21	ALL
	22		W1358	222B	20		21-31-21	ALL
	23	UNUSED						ALL
	24		W1358	222R	20		21-31-21	ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
D06308P		AC1501/ /		PLUG-				ALL
	1	UNUSED						ALL
	2		W1258	035	20		30-71-24	050-099
	2		W1258	035	22		30-71-23	150-154, 275-299
	2		W1258	035	20		30-71-23	155-199
	3		W1258	036	20		30-71-23	050-099, 155-199
	3		W1258	036	22		30-71-23	150-154, 275-299
	4		W1258	060	20		30-71-23	050-099
	4		W1258	060	20		30-71-24	150-199
	4	UNUSED						275-299
	5	UNUSED						050-099, 150-199, 277-299

HOOKUP LIST
D280T132

91-21-51
Section D06300
Page 7
Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06308P		AC1501/ /		PLUG- (continued)				ALL
	5		W1258	057	22		30-71-23	275-276
	6		W1258	058	20		30-71-23	050-099, 155-199
	6		W1258	058	22		30-71-23	150-154, 275-299
	7		W1258	201Z			21-31-21	ALL
	8		W1258	034	20		30-71-23	050-099, 150-199, 275-276
	8		W1258	034	22		30-71-23	277-299
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15		W1258	097	16		30-71-24	050-099, 150-199
	15	UNUSED						275-299
	16	UNUSED						ALL
	17	UNUSED						ALL
	18		W1258	050	20		21-31-21	ALL
	19	UNUSED						ALL
	20		W1258	201B	24		21-31-21	ALL
	21		W1258	201R	24		21-31-21	ALL
	22		W1258	202B	20		21-31-21	ALL
	23	UNUSED						ALL
	24		W1258	202R	20		21-31-21	ALL
	25		W1258	500	20		SPARE	050-099, 155, 162-165
	25	UNUSED						150-154, 156-157, 166-199, 275-299
	26		W1258	507	20		SPARE	050-099, 155, 162-165
	26	UNUSED						150-154, 156-157, 166-199, 275-299
	27	UNUSED						ALL
	28	UNUSED						ALL
	CAP	Y	W1258	814	22		SPARE	ALL
	CAP	Y	W1258	815	20		SPARE	150-199, 275-299
D06310J		AE0209/ /		RCPT-P36				ALL
	1		W0184	880	24		21-58-12	ALL
	2		W0184	878	24		21-58-12	ALL
	3		W0184	881	24		21-58-12	ALL
	4		W0184	75P	24		21-58-12	ALL
	5		W0184	91C	24		73-21-14	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D06300

Page 8

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06310J		AE0209/ /		RCPT-P36 (continued)				ALL
	8		W0184	02H	20		78-34-11	ALL
	9	UNUSED						ALL
	10		W0184	75T	24		21-58-12	ALL
	11		W0184	025	24		21-58-12	ALL
	12		W0184	054	24		21-58-12	ALL
	13		W0184	91CZ			73-21-14	ALL
	14		W0184	068	24		21-58-16	ALL
	15		W0184	754	22		21-58-16	ALL
	16		W0184	087	22		21-58-16	ALL
	17		W0184	843	24		21-58-16	ALL
	18		W0184	852	24		21-58-16	ALL
	19		W0184	842	24		21-58-16	ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	DL	W0184	01U	18		24-11-11	ALL
	24	DL	W0184	01V	18		24-11-11	ALL
	DED		W0184	01UZ			24-11-11	ALL
	DED		W0184	01VZ			24-11-11	ALL
	DED		W0184	02HZ			78-34-11	ALL
D06310P		AE0209/ /		PLUG-P36				ALL
	1		W0264	132	24		21-58-12	ALL
	2		W0264	133	24		21-58-12	ALL
	3		W0264	134	24		21-58-12	ALL
	4		W0264	135	24		21-58-12	ALL
	5		W0264	017	24		73-21-14	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	DK	W0264	087	18		78-34-11	ALL
	9	UNUSED						ALL
	10		W0264	138	24		21-58-14	ALL
	11		W0264	130	24		21-58-12	ALL
	12		W0264	131	24		21-58-12	ALL
	13		W0264	017Z			73-21-14	ALL
	14		W0264	140	24		21-58-16	ALL
	15		W0264	141	22		21-58-16	ALL
	16		W0264	142	22		21-58-16	ALL
	17		W0264	144	24		21-58-16	ALL
	18		W0264	145	24		21-58-16	ALL

HOOKUP LIST

D280T132

91-21-51

Section D06300

Page 9

Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06310P		AE0209/ /		PLUG-P36 (continued)				ALL
	19		W0264	143	24		21-58-16	ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	DK	W0264	173	18		24-11-11	ALL
	24	DK	W0264	034	18		24-11-11	ALL
D06312J		AE0319/ /		RCPT-				ALL
	1		W0264	132	24		21-58-12	ALL
	2		W0264	133	24		21-58-12	ALL
	3		W0264	134	24		21-58-12	ALL
	4		W0264	135	24		21-58-12	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
D06312P		AE0319/ /		PLUG-				ALL
	1		W0986	036	24		21-58-12	ALL
	2		W0986	037	24		21-58-12	ALL
	3		W0986	052	24		21-58-12	ALL
	4		W0986	053	24		21-58-12	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D06300
Page 10
Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06312P		AE0319/ /		PLUG- (continued)				ALL
	DED		W0986	036Z			21-58-12	ALL
	DED		W0986	037Z			21-58-12	ALL
	DED		W0986	052Z			21-58-12	ALL
	DED		W0986	053Z			21-58-12	ALL
D06314J		AC1501/ /		RCPT-				ALL
	1		W1354	004	24		21-26-11	ALL
	2		W1354	201B	24		21-31-11	ALL
	3		W1354	201R	24		21-31-11	ALL
	4		W1354	201Z			21-31-11	ALL
	5		W1354	010	20		21-31-11	ALL
	6		W1354	202B	20		21-31-11	ALL
	7		W1354	202R	20		21-31-11	ALL
	8		W1354	015	22		38-32-11	050-099, 275-299
	8		W1354	015	20		38-32-11	150-199
	9		W1354	019	22		38-32-11	050-099, 275-299
	9		W1354	019	20		38-32-11	150-199
	10		W1354	020	22		38-32-11	050-099, 275-276
	10		W1354	020	20		38-32-11	150-156, 162-165
	10	DL	W1354	020	18		38-32-11	157, 166-199, 277-299
	11		W1354	021	22		38-32-11	050-099, 275-276
	11		W1354	021	20		38-32-11	150-156, 162-165
	11	DL	W1354	021	18		38-32-11	157, 166-199, 277-299
	12	DL	W1354	044	18		38-32-14	050-099, 150-154, 275-276
	12	UNUSED						155-199, 277-299
	13	DL	W1354	045	18		38-32-14	ALL
	14		W1354	001	16		21-26-11	ALL
	15		W1354	009	20		38-32-11	050-099, 155-199, 277-299
	15	UNUSED						150-154, 275-276
	16		W1354	002	16		21-26-11	ALL
	17	UNUSED						ALL
	18		W1354	003	16		21-26-11	ALL
	19	UNUSED						ALL
	20		W1354	016	12		38-32-11	ALL
	21	UNUSED						ALL
	22		W1354	017	12		38-32-11	ALL
	23	UNUSED						ALL
	24		W1354	018	12		38-32-11	ALL
	25	UNUSED						ALL
	DED		W1354	004Z			21-26-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D06300

Page 11

Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06314P		AC1501/ /		PLUG-				ALL
	1		W0578	031	24		21-26-11	ALL
	2		W0578	201B	24		21-31-11	ALL
	3		W0578	201R	24		21-31-11	ALL
	4		W0578	201Z			21-31-11	ALL
	5		W0578	039	20		21-31-11	ALL
	6		W0578	202B	20		21-31-11	ALL
	7		W0578	202R	20		21-31-11	ALL
	8		W0578	060	22		38-32-11	050-099, 277-299
	8		W0578	060	20		38-32-11	150-199
	8		W0578	060	22		38-32-12	275-276
	9		W0578	059	22		38-32-11	050-099, 275-299
	9		W0578	059	20		38-32-11	150-199
	10		W0578	054	22		38-32-11	050-099, 275-276
	10		W0578	054	20		38-32-11	150-156, 162-165
	10	DK	W0578	054	18		38-32-11	157, 166-199, 277-299
	11		W0578	053	22		38-32-11	050-099, 275-276
	11		W0578	053	20		38-32-11	150-156, 162-164
	11	DK	W0578	053	18		38-32-11	157, 165-199, 277-299
	12	DK	W0578	041	18		38-32-14	050-099, 150-154, 275-276
	12	UNUSED						155-199, 277-299
	13	DK	W0578	042	18		38-32-14	ALL
	14		W0578	028	14		21-26-11	ALL
	15		W0578	067	20		38-32-11	050-099, 155-199, 277-299
	15	UNUSED						150-154, 275
	15		W0578	067	20		SPARE	276
	16		W0578	029	14		21-26-11	ALL
	17	UNUSED						ALL
	18		W0578	030	14		21-26-11	ALL
	19	UNUSED						ALL
	20		W0578	058	12		38-32-11	ALL
	21	UNUSED						ALL
	22		W0578	057	12		38-32-11	ALL
	23		W0578	069	20		SPARE	050-099, 155, 162-165
	23	UNUSED						150-154, 156-157, 166-199, 275-299
	24		W0578	056	12		38-32-11	ALL
	25		W0578	068	20		SPARE	050-099, 155, 162-165
	25	UNUSED						150-154, 156-157, 166-199, 275-299
	DED		W0578	031Z			21-26-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D06300

Page 12

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06316J		1568/260/R093		RCPT-				ALL
	= 1	FO	W0786	078	14		33-51-21	ALL
D06316P		1568/260/R093		PLUG-				ALL
	= 1		W0786	C-B			33-51-21	ALL
D06318J		1568/260/R093		RCPT-				ALL
	= 1		W0786	C-A			33-51-21	ALL
D06318P		1568/260/R093		PLUG-				ALL
	= 1		W0786	079	16		33-51-21	ALL
D06320J		1568/260/L093		RCPT-				ALL
	= 1		W0784	115	16		33-51-21	ALL
D06320P		1568/260/L093		PLUG-				ALL
	= 1		W0784	C-B			33-51-21	ALL
D06322J		1568/260/L093		RCPT-				ALL
	= 1		W0784	C-A			33-51-21	ALL
D06322P		1568/260/L093		PLUG-				ALL
	= 1		W0784	102	16		33-51-21	ALL
D06324J		0357/262/R090		RCPT-				050-099
D06324J		0357/260/R090		RCPT-				150-199, 275-299
	= 1		W0786	036	16		33-51-21	ALL
D06324P		0357/262/R090		PLUG-				050-099
D06324P		0357/260/R090		PLUG-				150-199, 275-299
	= 1		W0786	B-B			33-51-21	ALL
D06326J		0357/262/R090		RCPT-				050-099
D06326J		0357/260/R090		RCPT-				150-199, 275-299
	= 1		W0786	B-A			33-51-21	ALL
D06326P		0357/262/R090		PLUG-				050-099
D06326P		0357/260/R090		PLUG-				150-199, 275-299
	= 1		W0786	037	16		33-51-21	ALL

HOOKUP LIST

D280T132

91-21-51

Section D06300

Page 13

Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06328J		0357/262/L096		RCPT-				ALL
	=1		W0788	090	16		33-51-21	ALL
D06328P		0357/262/L096		PLUG-				ALL
	=1		W0788	D-B			33-51-21	ALL
D06330J		0357/262/L096		RCPT-				ALL
	=1		W0788	D-A			33-51-21	ALL
D06330P		0357/262/L096		PLUG-				ALL
	=1		W0788	072	16		33-51-21	ALL
D06340J		AL1003/ /		RCPT-				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9		W0602	241B	20		32-45-13	ALL
	10		W0602	241R	20		32-45-13	ALL
	11		W0602	241Z			32-45-13	ALL
	12		W0602	242B	20		32-45-13	ALL
	13		W0602	242R	20		32-45-13	ALL
	14		W0602	242Z			32-45-13	ALL
D06340P		AL1003/ /		PLUG-				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9		W0840	207B	20		32-45-13	ALL
	10		W0840	207R	20		32-45-13	ALL
	11		W0840	207Z			32-45-13	ALL

HOOKUP LIST

D280T132

91-21-51

Section D06300

Page 14

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06340P		AL1003/ /		PLUG- (continued)				ALL
	12		W0840	208B	20		32-45-13	ALL
	13		W0840	208R	20		32-45-13	ALL
	14		W0840	208Z			32-45-13	ALL
D06342J		AL1004/ /		RCPT-				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9		W0628	243B	20		32-45-14	ALL
	10		W0628	243R	20		32-45-14	ALL
	11		W0628	243Z			32-45-14	ALL
	12		W0628	244B	20		32-45-14	ALL
	13		W0628	244R	20		32-45-14	ALL
	14		W0628	244Z			32-45-14	ALL
D06342P D06342P		AL1004/ / AL1004/ /		PLUG- PLUG-R WING/BODY RS DISC				050-099 150-199, 275-299
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9		W0864	207B	20		32-45-14	ALL
	10		W0864	207R	20		32-45-14	ALL
	11		W0864	207Z			32-45-14	ALL
	12		W0864	208B	20		32-45-14	ALL
	13		W0864	208R	20		32-45-14	ALL
	14		W0864	208Z			32-45-14	ALL
D06348J		AF0119/ /		RCPT-P1				ALL
	1	DL	W0584	031	18		33-13-11	ALL
	2		W0584	037	20		SPARE	ALL

HOOKUP LIST
D280T132

91-21-51
Section D06300
Page 15
Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06348J		AF0119/ /		RCPT-P1 (continued)				ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
D06348P		AF0119/ /		PLUG-				ALL
	1		W0051	798	20		33-13-11	050-099
	1	DK	W0051	798	18		33-13-11	150-199, 275-299
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
D06350J		AF0120/ /		RCPT-P3				ALL
	1	DL	W0586	044	18		33-13-13	ALL
	2		W0586	037	20		SPARE	ALL
	3		W0586	038	20		SPARE	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
D06350P		AF0120/ /		PLUG-				ALL
	1		W0051	079	20		33-13-13	050-099
	1	DK	W0051	079	18		33-13-13	150-199, 275-299
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	DED		W0051	079Z			33-13-13	ALL
D06366J		0150/250/0000		RCPT-				ALL
	=1		W0051	127	18		33-13-11	ALL
D06366P		0157/250/0000		PLUG-				ALL
	=1		W0636	001	18		33-13-11	ALL
D06368J		0157/250/0000		RCPT-				ALL
	=1		W0636	001Z			33-13-11	ALL
D06368P		0150/250/0000		PLUG-				ALL
	=1		W0051	128	18		33-13-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D06300

Page 16

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06380J		AE0311/ /		RCPT-P31				275-299
	1		W0022	157	24		25-31-31	275-278
	1	UNUSED						280-299
	2		W0022	158	24		25-31-31	275-278
	2	UNUSED						280-299
	3		W0022	159	24		25-31-31	275-278
	3	UNUSED						280-299
	4	UNUSED						275-299
	5		W0022	160	24		25-31-31	275-278
	5		W0022	158	24		25-31-31	280-299
	6	UNUSED						275-278
	6		W0022	159	24		25-31-31	280-299
	7	UNUSED						275-299
	8	UNUSED						275-278
	8		W0022	157	24		25-31-31	280-299
	9	UNUSED						275-278
	9		W0022	160	24		25-31-31	280-299
	10		W0022	173	16		25-31-31	275-276
	10		W0022	163	16		25-31-31	277-299
	11	UNUSED						275-299
	12	UNUSED						275-299
D06380P		AE0311/ /		PLUG-P31				275-299
	1		W0304	001	24		25-31-31	275-278
	1	UNUSED						280-299
	2		W0304	002	24		25-31-31	275-278
	2	UNUSED						280-299
	3		W0304	003	24		25-31-31	275-278
	3	UNUSED						280-299
	4	UNUSED						275-299
	5		W0304	004	24		25-31-31	275-278
	5		W0304	002	24		25-31-31	280-299
	6	UNUSED						275-278
	6		W0304	003	24		25-31-31	280-299
	7	UNUSED						275-299
	8	UNUSED						275-278
	8		W0304	001	24		25-31-31	280-299
	9	UNUSED						275-278
	9		W0304	004	24		25-31-31	280-299
	10		W0304	014	16		25-31-31	275-299
	11	UNUSED						275-299

HOOKUP LIST
D280T132

91-21-51
Section D06300
Page 17
Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06380P		AE0311/ /		PLUG-P31 (continued)				275-299
	12	UNUSED						275-299
D06382J		AW0320/ /		RCPT-R WING/STRUT				ALL
	1		W0518	001	18		30-34-21	ALL
	2		W0518	205R	20		77-12-11	ALL
	3		W0518	205B	20		77-12-11	ALL
	4	UNUSED						ALL
	5		W0518	202R	20		73-21-14	ALL
	6		W0518	202B	20		73-21-14	ALL
	7		W0518	223R	20		73-21-14	ALL
	8		W0518	223B	20		73-21-14	ALL
	9	UNUSED						ALL
	10		W0518	225B	20		73-21-11	ALL
	11		W0518	101	20		73-21-14	ALL
	12	UNUSED						ALL
	13		W0518	002	16		73-21-20	ALL
	14	UNUSED						ALL
	15		W0518	201B	20		73-21-13	ALL
	16		W0518	201R	20		73-21-13	ALL
	17		W0518	211R	20		73-21-12	ALL
	18	UNUSED						ALL
	19		W0518	225R	20		73-21-11	ALL
	20		W0518	203R	20		31-35-15	050-099, 150-199, 275-276, 278-299
	20	UNUSED						277
	21		W0518	203B	20		31-35-15	050-099, 150-199, 275-276, 278-299
	21	UNUSED						277
	22	UNUSED						ALL
	23		W0518	204R	20		73-21-14	ALL
	24		W0518	204B	20		73-21-14	ALL
	25		W0518	302Y	20		73-21-13	ALL
	26		W0518	302R	20		73-21-13	ALL
	27		W0518	302B	20		73-21-13	ALL
	28		W0518	211B	20		73-21-17	ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	= CC	M	W0518	203Z			31-35-15	050-099, 150-199, 275-276, 278-299
	= CC	M	W0518	002Z			73-21-20	ALL
	= CC	M	W0518	101Z			73-21-14	ALL
	= CC	M	W0518	201Z			73-21-13	ALL
	= CC	M	W0518	202Z			73-21-14	ALL

HOOKUP LIST

D280T132

91-21-51

Section D06300

Page 18

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06382J		AW0320/ /		RCPT-R WING/STRUT (continued)				ALL
	= CC	M	W0518	204Z			73-21-14	ALL
	= CC	M	W0518	205Z			77-12-11	ALL
	= CC	M	W0518	211Z			73-21-12	ALL
	= CC	M	W0518	223Z			73-21-14	ALL
	= CC	M	W0518	225Z			73-21-11	ALL
	= CC	M	W0518	302Z			73-21-13	ALL
D06382P		AW0320/ /		PLUG R. WING STRUT				ALL
	1		W0392	001	18		30-34-21	ALL
	2		W0392	205R	20		77-12-11	ALL
	3		W0392	205B	20		77-12-11	ALL
	4	UNUSED						ALL
	5		W0392	208R	20		73-21-14	ALL
	6		W0392	208B	20		73-21-14	ALL
	7		W0392	223R	20		73-21-14	ALL
	8		W0392	223B	20		73-21-14	ALL
	9	UNUSED						ALL
	10		W0392	225B	20		73-21-11	ALL
	11		W0392	109	20		73-21-14	ALL
	12	UNUSED						ALL
	13		W0392	002	16		73-21-20	ALL
	14	UNUSED						ALL
	15		W0392	202B	20		73-21-13	ALL
	16		W0392	202R	20		73-21-13	ALL
	17		W0392	215R	20		73-21-12	ALL
	18	UNUSED						ALL
	19		W0392	225R	20		73-21-11	ALL
	20		W0392	201R	20		31-35-15	050-099, 150-199, 275-276, 278-299
	20	UNUSED						277
	21		W0392	201B	20		31-35-15	050-099, 150-199, 275-276, 278-299
	21	UNUSED						277
	22		W0392	025	20		SPARE	ALL
	23		W0392	204R	20		73-21-14	ALL
	24		W0392	204B	20		73-21-14	ALL
	25		W0392	301Y	20		73-21-13	ALL
	26		W0392	301R	20		73-21-13	ALL
	27		W0392	301B	20		73-21-13	ALL
	28		W0392	215B	20		73-21-17	ALL
	29	UNUSED						ALL
	30	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D06300

Page 19

Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06382P		AW0320/ /		PLUG R. WING STRUT (continued)				ALL
	= CC	M	W0392	201Z			31-35-15	050-099, 150-199, 275-276, 278-299
	= CC	M	W0392	002Z			73-21-20	ALL
	= CC	M	W0392	025Z			SPARE	ALL
	= CC	M	W0392	109Z			73-21-14	ALL
	= CC	M	W0392	202Z			73-21-13	ALL
	= CC	M	W0392	204Z			73-21-14	ALL
	= CC	M	W0392	205Z			77-12-11	ALL
	= CC	M	W0392	208Z			73-21-14	ALL
	= CC	M	W0392	223Z			73-21-14	ALL
	= CC	M	W0392	225Z			73-21-11	ALL
	= CC	M	W0392	301Z			73-21-13	ALL
	= CC	M	W0392	215Z			73-21-12	050-099, 155-199, 277-299
	= CC	M	W0392	215Z			73-21-17	150-154, 275-276
D06384J		AW0319/ /		RCPT-L WING/STRUT				ALL
	1		W0516	001	18		30-34-11	ALL
	2		W0516	205R	20		77-12-11	ALL
	3		W0516	205B	20		77-12-11	ALL
	4	UNUSED						ALL
	5		W0516	202R	20		73-21-14	ALL
	6		W0516	202B	20		73-21-14	ALL
	7		W0516	223R	20		73-21-14	ALL
	8		W0516	223B	20		73-21-14	ALL
	9	UNUSED						ALL
	10		W0516	225B	20		73-21-11	ALL
	11		W0516	101	20		73-21-14	ALL
	12	UNUSED						ALL
	13		W0516	002	16		73-21-20	ALL
	14	UNUSED						ALL
	15		W0516	201B	20		73-21-13	ALL
	16		W0516	201R	20		73-21-13	ALL
	17		W0516	211R	20		73-21-12	ALL
	18	UNUSED						ALL
	19		W0516	225R	20		73-21-11	ALL
	20		W0516	203R	20		31-35-14	050-099, 150-199, 275-276, 278-299
	20	UNUSED						277
	21		W0516	203B	20		31-35-14	050-099, 150-199, 275-276, 278-299
	21	UNUSED						277
	22	UNUSED						ALL
	23		W0516	204R	20		73-21-14	ALL

HOOKUP LIST

D280T132

91-21-51

Section D06300

Page 20

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06384J		AW0319/ /		RCPT-L WING/STRUT (continued)				ALL
	24		W0516	204B	20		73-21-14	ALL
	25		W0516	302Y	20		73-21-13	ALL
	26		W0516	302R	20		73-21-13	ALL
	27		W0516	302B	20		73-21-13	ALL
	28		W0516	211B	20		73-21-17	ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	= CC	M	W0516	203Z			31-35-14	050-099, 150-199, 275-276, 278-299
	= CC	M	W0516	002Z			73-21-20	ALL
	= CC	M	W0516	101Z			73-21-14	ALL
	= CC	M	W0516	201Z			73-21-13	ALL
	= CC	M	W0516	202Z			73-21-14	ALL
	= CC	M	W0516	204Z			73-21-14	ALL
	= CC	M	W0516	205Z			77-12-11	ALL
	= CC	M	W0516	211Z			73-21-12	ALL
	= CC	M	W0516	223Z			73-21-14	ALL
	= CC	M	W0516	225Z			73-21-11	ALL
	= CC	M	W0516	302Z			73-21-13	ALL
D06384P		AW0319/ /		PLUG L.WING STRUT				ALL
	1		W0396	001	18		30-34-11	ALL
	2		W0396	205R	20		77-12-11	ALL
	3		W0396	205B	20		77-12-11	ALL
	4	UNUSED						ALL
	5		W0396	208R	20		73-21-14	ALL
	6		W0396	208B	20		73-21-14	ALL
	7		W0396	223R	20		73-21-14	ALL
	8		W0396	223B	20		73-21-14	ALL
	9	UNUSED						ALL
	10		W0396	225B	20		73-21-11	ALL
	11		W0396	109	20		73-21-14	ALL
	12	UNUSED						ALL
	13		W0396	002	16		73-21-20	ALL
	14	UNUSED						ALL
	15		W0396	202B	20		73-21-13	ALL
	16		W0396	202R	20		73-21-13	ALL
	17		W0396	215R	20		73-21-12	ALL
	18	UNUSED						ALL
	19		W0396	225R	20		73-21-11	ALL
	20		W0396	201R	20		31-35-14	050-099, 150-199, 275-276, 278-299

HOOKUP LIST

D280T132

91-21-51

Section D06300

Page 21

Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06384P		AW0319/ /		PLUG L.WING STRUT (continued)				ALL
	20	UNUSED						277
	21		W0396	201B	20		31-35-14	050-099, 150-199, 275-276, 278-299
	21	UNUSED						277
	22		W0396	025	16		SPARE	ALL
	23		W0396	204R	20		73-21-14	ALL
	24		W0396	204B	20		73-21-14	ALL
	25		W0396	301Y	20		73-21-13	ALL
	26		W0396	301R	20		73-21-13	ALL
	27		W0396	301B	20		73-21-13	ALL
	28		W0396	215B	20		73-21-17	ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	= CC	M	W0396	201Z			31-35-14	050-099, 150-199, 275-276, 278-299
	= CC	M	W0396	002Z			73-21-20	ALL
	= CC	M	W0396	025Z			SPARE	ALL
	= CC	M	W0396	109Z			73-21-14	ALL
	= CC	M	W0396	202Z			73-21-13	ALL
	= CC	M	W0396	204Z			73-21-14	ALL
	= CC	M	W0396	205Z			77-12-11	ALL
	= CC	M	W0396	208Z			73-21-14	ALL
	= CC	M	W0396	223Z			73-21-14	ALL
	= CC	M	W0396	225Z			73-21-11	ALL
	= CC	M	W0396	301Z			73-21-13	ALL
	= CC	M	W0396	215Z			73-21-12	050-099, 155-199, 277-299
	= CC	M	W0396	215Z			73-21-17	150-154, 275-276
D06386J		0256/310/R006		RCPT-				150-154
D06386J		0266/310/L017		RCPT-				155-157
D06386J		0370/310/L045		RCPT-FWD COAT CLOSET				275-299
	= 1		W1154	001	22		33-22-21	150-157, 275-299
D06386P		256/310/R006		PLUG-FWD CLOSET				150-154
D06386P		266/310/L017		PLUG-FWD CLOSET				155-157
D06386P		364/282/L050		PLUG-FWD CLOSET				275-299
	= 1		W1230	067	20		33-22-21	150-157, 275-299
D06388J		256/310/R006		RCPT-FWD CLOSET				150-154
D06388J		266/310/L017		RCPT-FWD CLOSET				155-157
D06388J		364/282/L050		RCPT-FWD CLOSET				275-299
	= 1		W1230	068	22		33-22-21	150-157, 280-299

HOOKUP LIST

D280T132

91-21-51

Section D06300

Page 22

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06388J		256/310/R006		RCPT-FWD CLOSET (continued)				150-154
D06388J		266/310/L017		RCPT-FWD CLOSET (continued)				155-157
D06388J		364/282/L050		RCPT-FWD CLOSET (continued)				275-299
	= 1		W1230	001	22		33-22-21	275-278
D06388P		0256/310/R006		PLUG-				150-154
D06388P		0266/310/L017		PLUG-				155-157
D06388P		0370/310/L045		PLUG-FWD COAT CLOSET				275-299
	= 1		W1154	011	22		33-22-21	150-157, 275-299
D06394J		P049-00/ /		RCPT-P49				ALL
	1	UNUSED						ALL
	2	DL	W0030	064	18		24-31-41	ALL
	3	DL	W0030	065	18		24-31-41	ALL
	4	DL	W0030	066	18		24-31-41	ALL
	5		W0030	045	20		36-11-41	ALL
	6		W0030	046	20		36-11-41	ALL
	7		W0030	051	24		36-11-41	ALL
	8		W0030	050	24		36-11-41	ALL
	9		W0030	052	24		36-11-41	ALL
	10	UNUSED						050-099, 162-199, 275-299
	10		W0030	035	24		36-11-41	150-157
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16		W0030	126	22		24-31-41	ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D06300

Page 23

Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06394J		P049-00/ /		RCPT-P49 (continued)				ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
D06394P		P049-00/ /		PLUG-P49				ALL
	1	UNUSED						ALL
	2	DK	W1038	002	18		24-31-41	ALL
	3	DK	W1038	003	18		24-31-41	ALL
	4	DK	W1038	004	18		24-31-41	ALL
	5		W1038	017	20		36-11-41	ALL
	6		W1038	018	20		36-11-41	ALL
	7		W1038	021	24		36-11-41	ALL
	8		W1038	020	24		36-11-41	ALL
	9		W1038	022	24		36-11-41	ALL
	10	UNUSED						050-099, 162-199, 275-299
	10		W1038	019	24		36-11-41	150-157
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16		W1038	014	24		24-31-41	ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D06300

Page 24

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06394P		P049-00/ /		PLUG-P49 (continued)				ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
D06396J		P049-00/ /		RCPT-P49				ALL
	1		W1050	064	24		31-31-22	ALL
	2		W1050	130	24		31-31-22	ALL
	3		W1050	129	24		31-31-22	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8		W1050	099	22		49-15-11	ALL
	9		W1050	094	24		49-15-11	ALL
	10	UNUSED						050-099, 150-199
	10		W1050	054	20		24-32-41	275-299
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15		W1050	046	24		24-34-11	ALL
	16		W1050	047	24		24-34-11	ALL
	17		W1050	079	24		24-34-11	ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20		W1050	093	24		24-51-71	ALL
	21		W1050	018	16		49-15-11	ALL
	22		W1050	052	24		49-15-11	ALL
	23		W1050	119	16		49-15-11	ALL
	24		W1050	020	22		49-15-11	ALL
	25		W1050	092	24		24-51-71	ALL

HOOKUP LIST
D280T132

91-21-51
Section D06300
Page 25
Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06396J		P049-00/ /		RCPT-P49 (continued)				ALL
	26		W1050	021	24		49-15-11	ALL
	27		W1050	048	24		49-15-11	ALL
	28		W1050	044	22		49-15-11	ALL
	29		W1050	033	24		49-41-11	ALL
	30	FL	W1050	038	16		49-61-11	ALL
	31		W1050	034	22		49-61-11	ALL
	32		W1050	039	22		49-61-11	ALL
	33	FL	W1050	082	16		49-61-11	ALL
	34		W1050	098	24		38-15-11	ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
D06396P		P049-00/ /		PLUG-P49				ALL
	1		W0020	064	24		31-31-22	ALL
	2		W0020	130	24		31-31-22	ALL
	3		W0020	129	24		31-31-22	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8		W0020	087	22		49-15-11	ALL
	9		W0020	050	24		49-15-11	ALL
	10	UNUSED						050-099, 150-199
	10		W0020	007	20		24-32-41	275-299
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15		W0020	217B	24		24-34-11	ALL
	16		W0020	217R	24		24-34-11	ALL
	17		W0020	073	24		24-34-11	ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20		W0020	015	24		24-51-71	ALL
	21		W0020	018	16		49-15-11	ALL
	22		W0020	022	24		49-15-11	ALL
	23		W0020	019	16		49-15-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D06300

Page 26

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Station / WL / BL	Description	GA	CO	Diagram	Effectivity
Term	Type	Bundle	Wire No.			
D06396P	P049-00/ /	PLUG-P49 (continued)				ALL
24		W0020	020	20	49-15-11	ALL
25		W0020	014	24	24-51-71	ALL
26		W0020	021	24	49-15-11	ALL
27		W0020	049	24	49-15-11	ALL
28		W0020	017	22	49-15-11	ALL
29		W0020	032	24	49-41-11	ALL
30	FM	W0020	034	16	49-61-11	ALL
31		W0020	052	22	49-61-11	ALL
32		W0020	023	22	49-61-11	ALL
33	FM	W0020	037	16	49-61-11	ALL
34		W0020	086	24	38-15-11	ALL
35	UNUSED					ALL
36	UNUSED					ALL
37	UNUSED					ALL
38	UNUSED					ALL
39	UNUSED					ALL

HOOKUP LIST

D280T132

91-21-51

Section D06300
Page 27 End
Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06402J		0865/260/L089		RCPT-P70				ALL
	1		W0072	001	22		25-65-11	ALL
	2		W0072	002	22		25-65-11	ALL
	3		W0072	003	20		25-65-11	ALL
	4		W0072	004	18		25-65-11	ALL
	5		W0072	005	22		25-65-11	ALL
	6		W0072	006	20		25-65-11	ALL
	7		W0072	007	18		25-65-11	ALL
	8		W0072	008	20		25-65-11	ALL
	9	UNUSED						ALL
	10	UNUSED						050-099
	10		W0072	010	18		25-65-11	150-199, 275-299
	11	UNUSED						ALL
	12	UNUSED						ALL
D06402P		0865/260/L089		PLUG-				ALL
	1		W0786	113	22		25-65-11	050-099
	1		W0786	135	22		25-65-11	150-199, 275-299
	2		W0786	112	22		25-65-11	050-099
	2		W0786	133	22		25-65-11	150-199, 275-299
	3		W0786	111	20		25-65-11	050-099
	3		W0786	131	20		25-65-11	150-199, 275-299
	4		W0786	049	18		25-65-11	050-099
	4		W0786	128	18		25-65-11	150-199, 275-299
	5		W0786	114	22		25-65-11	ALL
	6		W0786	118	20		25-65-11	050-099
	6		W0786	142	20		25-65-11	150-199, 275-299
	7		W0786	041	18		25-65-11	050-099
	7		W0786	127	18		25-65-11	150-199, 275-299
	8		W0786	115	20		25-65-11	050-099
	8		W0786	143	20		25-65-11	150-199, 275-299
	9	UNUSED						ALL
	10	UNUSED						050-099
	10		W0786	130	18		25-65-11	150-199, 275-299
	11	UNUSED						ALL
	12	UNUSED						ALL
D06404J		0909/260/L089		RCPT-P72				150-199, 275-299
	1		W0074	001	22		25-65-11	150-199, 275-299
	2		W0074	002	22		25-65-11	150-199, 275-299
	3	UNUSED						150-199, 275-299

HOOKUP LIST

D280T132

91-21-51

Section D06400

Page 1

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06404J		0909/260/L089		RCPT-P72 (continued)				150-199, 275-299
	4	DL	W0074	004	18		25-65-11	150-199, 275-299
	5		W0074	005	22		25-65-11	150-199, 275-299
	6		W0074	006	20		25-65-11	150-199, 275-299
	7	DL	W0074	007	18		25-65-11	150-199, 275-299
	8		W0074	008	20		25-65-11	150-199, 275-299
	9		W0074	009	20		25-65-11	150-199, 275-299
	10	DL	W0074	010	18		25-65-11	150-199, 275-299
	11	UNUSED						150-199, 275-299
	12		W0074	012	22		25-65-11	150-199, 275-299
	13	UNUSED						150-199, 275-299
	14	DL	W0074	014	18		25-65-11	150-199, 275-299
	15	UNUSED						150-199, 275-299
	16	DL	W0074	016	18		25-65-11	150-199, 275-299
	17	UNUSED						150-199, 275-299
	18	UNUSED						150-199, 275-299
	19	UNUSED						150-199, 275-299
	20	DL	W0074	020	18		25-65-11	150-199, 275-299
	21	UNUSED						150-199, 275-299
	22	UNUSED						150-199, 275-299
	23	UNUSED						150-199, 275-299
	24	DL	W0074	024	18		25-65-11	150-199, 275-299
D06404P		0909/260/L089		PLUG-				150-199, 275-299
	1		W0786	113	22		25-65-11	150-199, 275-299
	2		W0786	112	22		25-65-11	150-199, 275-299
	3	UNUSED						150-199, 275-299
	4	DK	W0786	049	18		25-65-11	150-199, 275-299
	5		W0786	145	22		25-65-11	150-199, 275-299
	6		W0786	118	20		25-65-11	150-199, 275-299
	7	DK	W0786	041	18		25-65-11	150-199, 275-299
	8		W0786	115	20		25-65-11	150-199, 275-299
	9		W0786	137	20		25-65-11	150-199, 275-299
	10	DK	W0786	130	18		25-65-11	150-199, 275-299
	11	UNUSED						150-199, 275-299
	12		W0786	136	22		25-65-11	150-199, 275-299
	13	UNUSED						150-199, 275-299
	14	DK	W0786	128	18		25-65-11	150-199, 275-299
	15	UNUSED						150-199, 275-299
	16	DK	W0786	127	18		25-65-11	150-199, 275-299
	17	UNUSED						150-199, 275-299

HOOKUP LIST
D280T132

91-21-51
Section D06400
Page 2
Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06404P		0909/260/L089		PLUG- (continued)				150-199, 275-299
	18	UNUSED						150-199, 275-299
	19	UNUSED						150-199, 275-299
	20	DK	W0786	146	18		25-65-11	150-199, 275-299
	21	UNUSED						150-199, 275-299
	22	UNUSED						150-199, 275-299
	23	UNUSED						150-199, 275-299
	24	DK	W0786	144	18		25-65-11	150-199, 275-299
D06406J		0865/260/R089		RCPT-P71				ALL
	1		W0076	001	22		25-65-12	ALL
	2		W0076	002	22		25-65-12	ALL
	3		W0076	003	20		25-65-12	ALL
	4		W0076	004	18		25-65-12	ALL
	5		W0076	005	22		25-65-12	ALL
	6		W0076	006	20		25-65-12	ALL
	7		W0076	007	18		25-65-12	ALL
	8		W0076	008	20		25-65-12	ALL
	9	UNUSED						ALL
	10	UNUSED						050-099
	10		W0076	010	18		25-65-12	150-199, 275-299
	11	UNUSED						ALL
	12	UNUSED						ALL
D06406P		0865/260/R089		PLUG-				ALL
	1		W0786	099	22		25-65-12	050-099
	1		W0786	156	22		25-65-12	150-199, 275-299
	2		W0786	098	22		25-65-12	050-099
	2		W0786	163	22		25-65-12	150-199, 275-299
	3		W0786	097	20		25-65-12	050-099
	3		W0786	150	20		25-65-12	150-199, 275-299
	4		W0786	042	18		25-65-12	050-099
	4		W0786	149	18		25-65-12	150-199, 275-299
	5		W0786	100	22		25-65-12	ALL
	6		W0786	104	20		25-65-12	050-099
	6		W0786	159	20		25-65-12	150-199, 275-299
	7		W0786	048	18		25-65-12	050-099
	7		W0786	151	18		25-65-12	150-199, 275-299
	8		W0786	101	20		25-65-12	050-099
	8		W0786	160	20		25-65-12	150-199, 275-299
	9	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D06400

Page 3

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06406P		0865/260/R089		PLUG- (continued)				ALL
	10	UNUSED						050-099
	10		W0786	153	18		25-65-12	150-199, 275-299
	11	UNUSED						ALL
	12	UNUSED						ALL
D06408J		0909/260/R089		RCPT-P73				150-199, 275-299
	1		W0078	001	22		25-65-12	150-199, 275-299
	2		W0078	002	22		25-65-12	150-199, 275-299
	3	UNUSED						150-199, 275-299
	4	DL	W0078	004	18		25-65-12	150-199, 275-299
	5		W0078	005	22		25-65-12	150-199, 275-299
	6		W0078	006	20		25-65-12	150-199, 275-299
	7	DL	W0078	007	18		25-65-12	150-199, 275-299
	8		W0078	008	20		25-65-12	150-199, 275-299
	9		W0078	009	20		25-65-12	150-199, 275-299
	10	DL	W0078	010	18		25-65-12	150-199, 275-299
	11	UNUSED						150-199, 275-299
	12		W0078	012	22		25-65-12	150-199, 275-299
	13	UNUSED						150-199, 275-299
	14	DL	W0078	014	18		25-65-12	150-199, 275-299
	15	UNUSED						150-199, 275-299
	16	DL	W0078	016	18		25-65-12	150-199, 275-299
	17	UNUSED						150-199, 275-299
	18	UNUSED						150-199, 275-299
	19	UNUSED						150-199, 275-299
	20	DL	W0078	020	18		25-65-12	150-199, 275-299
	21	UNUSED						150-199, 275-299
	22	UNUSED						150-199, 275-299
	23	UNUSED						150-199, 275-299
	24	DL	W0078	024	18		25-65-12	150-199, 275-299
D06408P		0909/260/R089		PLUG-				150-199, 275-299
	1		W0786	099	22		25-65-12	150-199, 275-299
	2		W0786	098	22		25-65-12	150-199, 275-299
	3	UNUSED						150-199, 275-299
	4	DK	W0786	042	18		25-65-12	150-199, 275-299
	5		W0786	166	22		25-65-12	150-199, 275-299
	6		W0786	104	20		25-65-12	150-199, 275-299
	7	DK	W0786	048	18		25-65-12	150-199, 275-299
	8		W0786	101	20		25-65-12	150-199, 275-299

HOOKUP LIST

D280T132

91-21-51

Section D06400

Page 4

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06408P		0909/260/R089		PLUG- (continued)				150-199, 275-299
	9		W0786	157	20		25-65-12	150-199, 275-299
	10	DK	W0786	153	18		25-65-12	150-199, 275-299
	11	UNUSED						150-199, 275-299
	12		W0786	164	22		25-65-12	150-199, 275-299
	13	UNUSED						150-199, 275-299
	14	DK	W0786	149	18		25-65-12	150-199, 275-299
	15	UNUSED						150-199, 275-299
	16	DK	W0786	151	18		25-65-12	150-199, 275-299
	17	UNUSED						150-199, 275-299
	18	UNUSED						150-199, 275-299
	19	UNUSED						150-199, 275-299
	20	DK	W0786	162	18		25-65-12	150-199, 275-299
	21	UNUSED						150-199, 275-299
	22	UNUSED						150-199, 275-299
	23	UNUSED						150-199, 275-299
	24	DK	W0786	161	18		25-65-12	150-199, 275-299
D06410J		AP0401/ /		RCPT-				ALL
	1	UNUSED						ALL
	2		W1060	025	20		33-51-11	ALL
	3		W1060	060	22		33-51-11	ALL
	4		W1060	059	22		33-51-11	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8		W1060	641	22		33-51-11	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D06410P		AP0401/ /		PLUG-P19				ALL
	1	UNUSED						ALL
	2		W0832	002	20		33-51-11	ALL
	3		W0832	003	22		33-51-11	ALL
	4		W0832	004	22		33-51-11	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8		W0832	008	22		33-51-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D06400

Page 5

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06410P		AP0401/ /		PLUG-P19 (continued)				ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D06412J		AP0403/ /		RCPT-				ALL
	1	UNUSED						ALL
	2		W1060	104	20		33-51-11	ALL
	3		W1060	110	22		33-51-11	ALL
	4		W1060	107	22		33-51-11	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						050-099, 150-157, 275-299
	7		W1060	849	22		33-22-21	162-199
	8		W1060	106	22		33-51-11	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D06412P		AP0403/ /		PLUG-P19				ALL
	1	UNUSED						ALL
	2		W0834	002	20		33-51-11	ALL
	3		W0834	003	22		33-51-11	ALL
	4		W0834	004	22		33-51-11	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						050-099, 150-157, 275-299
	7		W0834	078	22		33-22-21	162-199
	8		W0834	008	22		33-51-11	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D06414J		AP1003/ /		RCPT-				ALL
	1	UNUSED						ALL
	2		W1064	025	20		33-51-11	ALL
	3	UNUSED						ALL
	4		W1064	030	22		33-51-11	ALL

HOOKUP LIST
D280T132

91-21-51
Section D06400
Page 6
Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06414J		AP1003/ /		RCPT- (continued)				ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8		W1064	029	22		33-51-11	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
D06414P		AP1003/ /		PLUG-P25				ALL
	1	UNUSED						ALL
	2		W0836	002	20		33-51-11	050-099, 275-299
	2		W0836	029	20		33-51-11	150-199
	3	UNUSED						ALL
	4		W0836	004	22		33-51-11	050-099, 275-299
	4		W0836	030	22		33-51-11	150-199
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8		W0836	008	22		33-51-11	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
D06420J		AW0309/ /		RCPT-ENGINE FANCASE				ALL
	1		W0380	01TW	20		77-31-11	050-099, 155-199, 277-299
	1		W0380	201W	20		77-31-11	150-154, 275-276
	2		W0380	01TR	20		77-31-11	050-099, 155-199, 277-299
	2		W0380	201R	20		77-31-11	150-154, 275-276
	3		W0380	01TI			77-31-11	050-099, 155-199, 277-299
	3		W0380	201Z			77-31-11	150-154, 275-276
	4		W0380	027	16		73-21-13	ALL
	5		W0380	028	16		73-21-13	ALL

HOOKUP LIST

D280T132

91-21-51

Section D06400

Page 7

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06420J		AW0309/ /		RCPT-ENGINE FANCASE (continued)				ALL
	6		W0380	301B	20		SPARE	050-099, 155-157, 164-199, 277-299
	6	UNUSED						150-154, 162-163, 275-276
	7		W0380	301Y	20		SPARE	050-099, 155-157, 164-199, 277-299
	7	UNUSED						150-154, 162-163, 275-276
	8		W0380	301R	20		SPARE	050-099, 155-157, 164-199, 277-299
	8	UNUSED						150-154, 162-163, 275-276
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	= CC	M	W0380	01TO			77-31-11	050-099, 155-199, 277-299
	= CC	M	W0380	301Z			SPARE	050-099, 155-157, 164-199, 277-299
D06422J		AW0309/ /		RCPT-ENGINE FANCASE				ALL
	1		W0384	01TW	20		77-31-11	050-099, 155-199, 277-299
	1		W0384	201W	20		77-31-11	150-154, 275-276
	2		W0384	01TR	20		77-31-11	050-099, 155-199, 277-299
	2		W0384	201R	20		77-31-11	150-154, 275-276
	3		W0384	01TI			77-31-11	050-099, 155-199, 277-299
	3		W0384	201Z			77-31-11	150-154, 275-276
	4		W0384	027	16		73-21-13	ALL
	5		W0384	028	16		73-21-13	ALL
	6		W0384	301B	20		SPARE	050-099, 155-157, 164-199, 277-299
	6	UNUSED						150-154, 162-163, 275-276
	7		W0384	301Y	20		SPARE	050-099, 155-157, 164-199, 277-299
	7	UNUSED						150-154, 162-163, 275-276
	8		W0384	301R	20		SPARE	050-099, 155-157, 164-199, 277-299
	8	UNUSED						150-154, 162-163, 275-276
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D06400

Page 8

Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06422J		AW0309/ /		RCPT-ENGINE FANCASE (continued)				ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	= CC	M	W0384	01TO			77-31-11	050-099, 155-199, 277-299
	= CC	M	W0384	301Z			SPARE	050-099, 155-157, 164-199, 277-299
D06424J		AC1402/ /		RCPT-E6				ALL
	1		W0242	302R	20		49-94-14	ALL
	2		W0242	302B	20		49-94-14	ALL
	3		W0242	302Y	20		49-94-14	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D06424P		AC1402/ /		PLUG - E6				ALL
	1		W0020	302R	24		49-94-14	ALL
	2		W0020	302B	24		49-94-14	ALL
	3		W0020	302Y	24		49-94-14	ALL
	4	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D06400
Page 9
Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06424P		AC1402/ /		PLUG - E6 (continued)				ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D06430J D06430J		AE0222/ / AF0232/ /		RCPT-P6 RCPT-P6				050-099 150-199, 275-299
	1		W0048	064	20		24-51-43	ALL
	2		W0048	063	20		24-51-43	ALL
	3		W0048	066	20		24-51-43	ALL
	4		W0048	065	20		24-51-43	ALL
	5		W0048	068	20		24-51-43	ALL
	6		W0048	067	20		24-51-43	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15		W0048	082	12		24-51-24	ALL
	16	UNUSED						ALL
	17	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D06400
Page 10
Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06430J		AE0222/ /		RCPT-P6 (continued)				050-099
D06430J		AF0232/ /		RCPT-P6 (continued)				150-199, 275-299
	18	UNUSED						ALL
	19		W0048	083	12		24-51-24	ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23		W0048	087	18		24-51-24	ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27		W0048	088	12		24-51-24	ALL
	28	UNUSED						ALL
D06430P		AE0222/ /		PLUG-P6				050-099
D06430P		AF0232/ /		PLUG-P6				150-199, 275-299
	1		W0280	014	20		24-51-43	ALL
	2		W0280	011	20		24-51-43	ALL
	3		W0280	015	20		24-51-43	ALL
	4		W0280	012	20		24-51-43	ALL
	5		W0280	016	20		24-51-43	ALL
	6		W0280	013	20		24-51-43	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15		W0280	017	12		24-51-24	ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19		W0280	018	12		24-51-24	ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23		W0280	019	18		24-51-24	ALL
	24	UNUSED						ALL
	25	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D06400

Page 11

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06430P		AE0222/ /		PLUG-P6 (continued)				050-099
D06430P		AF0232/ /		PLUG-P6 (continued)				150-199, 275-299
	26	UNUSED						ALL
	27		W0280	020	12		24-51-24	ALL
	28	UNUSED						ALL
D06442J		AF0204/ /		RCPT-P61				ALL
	1	UNUSED						ALL
	2		W0066	774	22		24-25-11	ALL
	3	UNUSED						ALL
	4		W0066	785	22		24-25-11	ALL
	5		W0066	786	22		24-25-11	ALL
	6		W0066	787	22		24-25-11	ALL
	7	UNUSED						ALL
	8		W0066	045	22		33-51-11	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	DED		W0066	786Z			24-25-11	ALL
	DED		W0066	787Z			24-25-11	ALL
D06442P		AF0204/ /		PLUG-P61				ALL
	1	UNUSED						ALL
	2		W1338	001	22		24-25-11	ALL
	3	UNUSED						ALL
	4		W1338	002	22		24-25-11	ALL
	5		W1338	003	22		24-25-11	ALL
	6		W1338	004	22		24-25-11	ALL
	7		W1338	005	22		SPARE	ALL
	8		W1338	014	22		33-51-11	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D06444J		AF0232/ /		RCPT-P6				ALL
	1		W1026	077	12		24-51-14	ALL
	2		W1026	062	12		24-51-14	ALL
	3		W1026	067	12		24-51-14	ALL
	4		W1026	040	12		24-51-42	ALL

HOOKUP LIST

D280T132

91-21-51

Section D06400

Page 12

Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06444J		AF0232/ /		RCPT-P6 (continued)				ALL
	5		W1026	042	12		24-51-42	ALL
	6		W1026	044	12		24-51-42	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
D06444P		AF0232/ /		PLUG-P6				ALL
	1		W1340	001	12		24-51-14	ALL
	2		W1340	002	12		24-51-14	ALL
	3		W1340	003	12		24-51-14	ALL
	4		W1340	007	12		24-51-42	ALL
	5		W1340	008	12		24-51-42	ALL
	6		W1340	009	12		24-51-42	ALL
	7		W1340	013	12		SPARE	ALL
	8	UNUSED						ALL
D06446J		AFO232/ /		RCPT-P6				050-099
D06446J		AF0232/ /		RCPT-P6				150-199, 275-299
	1		W0048	082	12		24-51-24	ALL
	2		W0048	084	12		24-51-24	ALL
	3		W0048	089	12		24-51-24	ALL
	4	UNUSED						ALL
D06446P		AF0232/ /		PLUG-P6				ALL
	1		W1342	001	12		24-51-24	ALL
	2		W1342	002	12		24-51-24	ALL
	3		W1342	003	12		24-51-24	ALL
	4		W1342	010	12		SPARE	ALL
D06448J		AF0232/ /		RCPT-P6				ALL
	1		W1026	073	14		24-51-14	ALL
	2		W1026	072	14		24-51-14	ALL
	3		W1026	071	14		24-51-14	ALL
	4		W1026	076	20		24-51-42	ALL
	5		W1026	075	20		24-51-42	ALL
	6		W1026	074	20		24-51-42	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
D06448P		AF0232/ /		PLUG-P6				ALL
	1		W1340	004	14		24-51-14	ALL

HOOKUP LIST

D280T132

91-21-51

Section D06400

Page 13

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06448P		AF0232/ /		PLUG-P6 (continued)				ALL
	2		W1340	005	14		24-51-14	ALL
	3		W1340	006	14		24-51-14	ALL
	4		W1340	012	16		24-51-42	ALL
	5		W1340	011	16		24-51-42	ALL
	6		W1340	010	16		24-51-42	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
D06450J		AE0222/ /		RCPT-P6				ALL
	1		W0048	092	18		24-51-24	ALL
	2		W0048	091	18		24-51-24	ALL
	3		W0048	090	18		24-51-24	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
D06450P		AE0222/ /		PLUG-P6				ALL
	1		W1342	004	18		24-51-24	ALL
	2		W1342	005	18		24-51-24	ALL
	3		W1342	006	18		24-51-24	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
D06452J		AE0225/ /		RECP-P65				ALL
	1		W2058	004	22		24-25-11	ALL
	2		W2058	011	22		24-25-11	ALL
	3		W2058	061	22		24-25-11	ALL
	4		W2058	007	22		24-25-11	ALL
	5	UNUSED						ALL
	6		W2058	001	22		24-25-11	ALL
	7		W2058	008	22		24-25-11	ALL

HOOKUP LIST
D280T132

91-21-51
Section D06400
Page 14
Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06452J		AE0225/ /		RECP-P65 (continued)				ALL
	8		W2058	080	24		24-25-13	ALL
	9		W2058	081	24		24-25-13	ALL
	10		W2058	082	24		24-25-13	ALL
	11		W2058	083	24		24-25-13	ALL
	12		W2058	108	22		33-51-11	ALL
	13		W2058	088	22		29-11-32	ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D06452P		AE0225/ /		PLUG-P65				ALL
	1		W1338	001	22		24-25-11	ALL
	2		W1338	002	22		24-25-11	ALL
	3		W1338	003	22		24-25-11	ALL
	4		W1338	004	22		24-25-11	ALL
	5		W1338	005	22		SPARE	ALL
	6		W1338	006	22		24-25-11	ALL
	7		W1338	007	22		24-25-11	ALL
	8		W1338	010	24		24-25-13	ALL
	9		W1338	011	24		24-25-13	ALL
	10		W1338	012	24		24-25-13	ALL
	11		W1338	013	24		24-25-13	ALL
	12		W1338	014	22		33-51-11	ALL
	13		W1338	015	22		29-11-32	ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D06400

Page 15

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06452P		AE0225/ /		PLUG-P65 (continued)				ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D06454J		AE0225/ /		RECP-P65				ALL
	1		W2058	090	12		24-51-14	ALL
	2		W2058	091	12		24-51-14	ALL
	3		W2058	092	12		24-51-14	ALL
	4		W2058	102	12		24-51-42	ALL
	5		W2058	103	12		24-51-42	ALL
	6		W2058	104	12		24-51-42	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D06454P		AE0225/ /		PLUG-P65				ALL
	1		W1340	001	12		24-51-14	ALL
	2		W1340	002	12		24-51-14	ALL
	3		W1340	003	12		24-51-14	ALL
	4		W1340	007	12		24-51-42	ALL
	5		W1340	008	12		24-51-42	ALL
	6		W1340	009	12		24-51-42	ALL
	7		W1340	013	12		SPARE	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D06456J		AE0225/ /		RECP-P65				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W2058	112	22		34-22-81	ALL

HOOKUP LIST
D280T132

91-21-51
Section D06400
Page 16
Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06456J		AE0225/ /		RECP-P65 (continued)				ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14		W2058	095	14		24-51-14	ALL
	15	UNUSED						ALL
	16		W2058	094	14		24-51-14	ALL
	17	UNUSED						ALL
	18		W2058	093	14		24-51-14	ALL
	19	UNUSED						ALL
	20		W2058	105	16		24-51-42	ALL
	21	UNUSED						ALL
	22		W2058	107	16		24-51-42	ALL
	23	UNUSED						ALL
	24		W2058	106	16		24-51-42	ALL
	25	UNUSED						ALL
D06456P		AE0225/ /		PLUG-P65				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W1340	014	22		34-22-81	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14		W1340	004	14		24-51-14	ALL
	15	UNUSED						ALL
	16		W1340	005	14		24-51-14	ALL
	17	UNUSED						ALL
	18		W1340	006	14		24-51-14	ALL
	19	UNUSED						ALL
	20		W1340	010	16		24-51-42	ALL

HOOKUP LIST
D280T132



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06456P		AE0225/ /		PLUG-P65 (continued)				ALL
	21	UNUSED						ALL
	22		W1340	011	16		24-51-42	ALL
	23	UNUSED						ALL
	24		W1340	012	16		24-51-42	ALL
	25	UNUSED						ALL
D06458J		AE0225/ /		RECP-P65				ALL
	1		W2058	096	12		24-51-24	ALL
	2		W2058	097	12		24-51-24	ALL
	3		W2058	098	12		24-51-24	ALL
	4	UNUSED						ALL
D06458P		AE0225/ /		PLUG-P65				ALL
	1		W1342	007	12		24-51-24	ALL
	2		W1342	008	12		24-51-24	ALL
	3		W1342	003	12		24-51-24	ALL
	4		W1342	010	12		SPARE	ALL
D06460J		AE0225/ /		RECP-P65				ALL
	1		W2058	050	22		24-25-11	ALL
	2		W2058	051	22		24-25-11	ALL
	3		W2058	301B	20		24-25-12	ALL
	4		W2058	301R	20		24-25-12	ALL
	5		W2058	301Y	20		24-25-12	ALL
	6		W2058	302B	20		24-25-12	ALL
	7		W2058	302R	20		24-25-12	ALL
	8		W2058	302Y	20		24-25-12	ALL
	9		W2058	201Z			24-25-12	ALL
	10		W2058	201B	20		24-25-12	ALL
	11		W2058	201R	20		24-25-12	ALL
	12		W2058	083	24		24-25-13	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D06400

Page 18

Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06460J		AE0225/ /		RECP-P65 (continued)				ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D06460P		AE0225/ /		PLUG-P65				ALL
	1		W1332	001	20		24-25-11	ALL
	2		W1332	003	20		24-25-11	ALL
	3		W1332	301B	20		24-25-12	ALL
	4		W1332	301R	20		24-25-12	ALL
	5		W1332	301Y	20		24-25-12	ALL
	6		W1332	302B	20		24-25-12	ALL
	7		W1332	302R	20		24-25-12	ALL
	8		W1332	302Y	20		24-25-12	ALL
	9		W1332	201Z			24-25-12	ALL
	10		W1332	201B	20		24-25-12	ALL
	11		W1332	201R	20		24-25-12	ALL
	12		W1332	005	20		24-25-13	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18		W1332	818	20		SPARE	ALL
	19		W1332	819	20		SPARE	ALL
	20		W1332	820	20		SPARE	ALL
	21		W1332	821	20		SPARE	ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D06462J		AE0225/ /		RECP-P65				ALL
	1		W2058	073	12		24-25-12	ALL
	2		W2058	074	12		24-25-12	ALL
	3		W2058	075	12		24-25-12	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D06400
Page 19
Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06462P		AE0225/ /		PLUG-P65				ALL
	1		W1336	001	12		24-25-12	ALL
	2		W1336	002	12		24-25-12	ALL
	3		W1336	003	12		24-25-12	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
D06464J		AL1003/ /		RCPT-MN W/W DISC				ALL
	1		W1332	001	20		24-25-11	ALL
	2		W1332	002	20		24-25-11	ALL
	3		W1332	003	20		24-25-11	ALL
	4		W1332	301B	20		24-25-12	ALL
	5		W1332	301R	20		24-25-12	ALL
	6		W1332	301Y	20		24-25-12	ALL
	7		W1332	004	20		24-25-12	ALL
	8		W1332	302B	20		24-25-12	ALL
	9		W1332	302R	20		24-25-12	ALL
	10		W1332	302Y	20		24-25-12	ALL
	11	DL	W1332	201Z			24-25-12	ALL
	12		W1332	201B	20		24-25-12	ALL
	13		W1332	201R	20		24-25-12	ALL
	14		W1332	005	20		24-25-13	ALL
	15	UNUSED						ALL
	16		W1332	007	20		24-25-13	ALL
	17		W1332	008	20		24-25-12	ALL
	18		W1332	818	20		SPARE	ALL
	19		W1332	819	20		SPARE	ALL
	20		W1332	820	20		SPARE	ALL
	21		W1332	821	20		SPARE	ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D06464P		AL1003/ /		PLUG				ALL
	1		W1328	001	20		24-25-11	ALL
	2		W1328	002	20		24-25-11	ALL
	3		W1328	003	20		24-25-11	ALL

HOOKUP LIST
D280T132

91-21-51
Section D06400
Page 20
Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06464P		AL1003/ /		PLUG (continued)				ALL
	4		W1328	301B	20		24-25-12	ALL
	5		W1328	301R	20		24-25-12	ALL
	6		W1328	301Y	20		24-25-12	ALL
	7		W1328	004	20		24-25-12	ALL
	8		W1328	302B	20		24-25-12	ALL
	9		W1328	302R	20		24-25-12	ALL
	10		W1328	302Y	20		24-25-12	ALL
	11	DK	W1328	201Z			24-25-12	ALL
	12		W1328	201B	20		24-25-12	ALL
	13		W1328	201R	20		24-25-12	ALL
	14		W1328	010	20		24-25-13	ALL
	15	UNUSED						ALL
	16		W1328	012	20		24-25-13	ALL
	17		W1328	005	20		24-25-12	ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D06466J		AL1003/ /		RCPT-MN W/W DISC				ALL
	1		W1334	001	12		24-25-12	ALL
	2		W1334	002	12		24-25-12	ALL
	3		W1334	003	12		24-25-12	ALL
	4		W1334	004	12		24-25-12	ALL
D06466P		AL1003/ /		PLUG				ALL
	1		W1328	006	12		24-25-12	ALL
	2		W1328	007	12		24-25-12	ALL
	3		W1328	008	12		24-25-12	ALL
	4		W1328	009	12		24-25-12	ALL
D06468J		AL1003/ /		RCPT-MN W/W DISC				ALL
	1		W1336	001	12		24-25-12	ALL
	2		W1336	002	12		24-25-12	ALL
	3		W1336	003	12		24-25-12	ALL
	4		W1336	004	12		24-25-12	ALL
	5	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D06400

Page 21

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06468J		AL1003/ /		RCPT-MN W/W DISC (continued)				ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
D06468P		AL1003/ /		PLUG-MN W/W DISC				ALL
	1		W1330	001	12		24-25-12	ALL
	2		W1330	002	12		24-25-12	ALL
	3		W1330	003	12		24-25-12	ALL
	4		W1330	004	12		24-25-12	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
D06470J		AE0209/ /		RCPT-P36				ALL
	1		W0184	864	22		24-25-11	ALL
	2		W0184	865	22		24-25-11	ALL
	3		W0184	866	24		24-25-13	ALL
	4		W0184	867	24		24-25-13	ALL
	5		W0184	868	24		24-25-13	ALL
	6		W0184	869	24		24-25-13	ALL
	7		W0184	870	22		29-11-32	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D06470P		AE0209/ /		PLUG-P36				ALL
	1		W1338	006	22		24-25-11	ALL
	2		W1338	007	22		24-25-11	ALL
	3		W1338	010	24		24-25-13	ALL
	4		W1338	011	24		24-25-13	ALL
	5		W1338	012	24		24-25-13	ALL
	6		W1338	013	24		24-25-13	ALL
	7		W1338	015	22		29-11-32	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D06400

Page 22

Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06470P		AE0209/ /		PLUG-P36 (continued)				ALL
	12	UNUSED						ALL
D06474J		AE0225/ /		RECP-P65				ALL
	1		W2058	101	18		24-51-24	ALL
	2		W2058	100	18		24-51-24	ALL
	3		W2058	099	18		24-51-24	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
D06474P		AE0225/ /		PLUG-P65				ALL
	1		W1342	004	18		24-51-24	ALL
	2		W1342	005	18		24-51-24	ALL
	3		W1342	006	18		24-51-24	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
D06476J		AE0207/ /		RCPT-P33				ALL
	1		W0138	106	12		24-51-24	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
D06476P		AE0207/ /		PLUG-P33				ALL
	1		W1342	009	12		24-51-24	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
D06482J		AP0901/ /		RCPT				150-199
	1		W0665	024	22		23-42-11	150-199

HOOKUP LIST
D280T132



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06482J		AP0901 / /		RCPT (continued)				150-199
	2		W0665	066	22		33-25-11	150-199
	3		W0665	067	22		33-25-11	150-199
	4		W0665	029	20		23-42-11	150-199
	5		W0665	180	22		33-25-11	150-199
	6		W0665	179	22		33-25-11	150-199
	7		W0665	206R	22		23-31-14	150-199
	8		W0665	206B	22		23-31-14	150-199
	9	UNUSED						150-199
	10	UNUSED						150-199
	11	UNUSED						150-199
	12		W0665	050	24		23-42-12	150-199
	13		W0665	049	22		23-42-12	150-199
	14		W0665	048	20		23-42-12	150-199
	15	UNUSED						150-199
	16		W0665	053	24		23-42-12	150-199
	17		W0665	052	22		23-42-12	150-199
	18		W0665	051	20		23-42-12	150-199
	19		W0665	062	24		23-34-13	150-199
	20		W0665	063	24		23-34-13	150-199
	21	UNUSED						150-199
	22	UNUSED						150-199
	23		W0665	178	24		23-34-13	150-199
	24		W0665	177	24		23-34-13	150-199
D06482P		AP0901 / /		PLUG-				150-199
	1		W0122	009	22		23-42-11	150-199
	2		W0122	013	22		33-25-11	150-199
	3		W0122	128	22		33-25-11	150-199
	4		W0122	010	20		23-42-11	150-199
	5		W0122	129	22		33-25-11	150-199
	6		W0122	014	22		33-25-11	150-199
	7		W0122	206R	22		23-31-14	150-199
	8		W0122	206B	22		23-31-14	150-199
	9	UNUSED						150-199
	10	UNUSED						150-199
	11	UNUSED						150-199
	12		W0122	112	24		23-42-12	150-199
	13		W0122	113	22		23-42-12	150-199
	14		W0122	114	20		23-42-12	150-199
	15	UNUSED						150-199

HOOKUP LIST
D280T132

91-21-51
Section D06400
Page 24
Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06482P		AP0901 / /		PLUG- (continued)				150-199
	16		W0122	116	24		23-42-12	150-199
	17		W0122	117	22		23-42-12	150-199
	18		W0122	118	20		23-42-12	150-199
	19		W0122	119	24		23-34-13	150-199
	20		W0122	120	24		23-34-13	150-199
	21	UNUSED						150-199
	22	UNUSED						150-199
	23		W0122	123	22		23-34-13	150-199
	24		W0122	124	22		23-34-13	150-199
	DED		W0122	113Z			23-42-12	150-199
	DED		W0122	117Z			23-42-12	150-199

HOOKUP LIST
D280T132

91-21-51
Section D06400
Page 25 End
Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06514J		0763/269/L074		RCPT-				150-199
D06514J		0675/269/L074		RCPT-				275-278
D06514J		0686/269/L074		RCPT-				280-299
	1		W0800	221R	22		23-31-15	150-199, 275-278
	1		W0800	231R	22		23-31-15	280-299
	2		W0800	221B	22		23-31-15	150-199, 275-278
	2		W0800	231B	22		23-31-15	280-299
	3	DK	W0800	052	18		33-24-12	150-199, 275-299
	4	DK	W0800	051	18		33-24-12	150-199, 275-299
	5		W0800	269R	22		23-31-15	150-199
	5	UNUSED						275-299
	6		W0800	269B	22		23-31-15	150-199
	7	UNUSED						150-199
	8	UNUSED						150-199
	9	UNUSED						150-199
	10	UNUSED						150-199
	11	UNUSED						150-199
	12	UNUSED						150-199
D06514P		0763/269/L074		PLUG-				150-199
D06514P		0675/269/L074		PLUG-				275-278
D06514P		0676/269/L074		PLUG-				280-299
	1		W0806	221R	22		23-31-15	150-199, 275-278
	1		W0806	201R	22		23-31-15	280-299
	2		W0806	221B	22		23-31-15	150-199, 275-278
	2		W0806	201B	22		23-31-15	280-299
	3	DL	W0806	052	18		33-24-12	150-199, 275-299
	4	DL	W0806	051	18		33-24-12	150-199, 275-299
	5		W0806	651R	22		23-31-15	150-199
	5	UNUSED						275-299
	6		W0806	651B	22		23-31-15	150-199
	7	UNUSED						150-199
	8	UNUSED						150-199
	9	UNUSED						150-199
	10	UNUSED						150-199
	11	UNUSED						150-199
	12	UNUSED						150-199

HOOKUP LIST

D280T132

91-21-51

Section D06500

Page 1

Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06516J		0763/269/R074		RCPT-				150-199
D06516J		0675/269/R074		RCPT-				275-278
D06516J		0687/269/R074		RCPT-				280-299
	1		W0804	221R	22		23-31-17	150-199, 275-278
	1		W0804	231R	22		23-31-17	280-299
	2		W0804	221B	22		23-31-17	150-199, 275-278
	2		W0804	231B	22		23-31-17	280-299
	3	DK	W0804	052	18		33-24-14	150-199, 275-299
	4	DK	W0804	051	18		33-24-14	150-199, 275-299
	5		W0804	269R	22		23-31-17	150-199
	5	UNUSED						275-299
	6		W0804	269B	22		23-31-17	150-199
	7	UNUSED						150-199
	8	UNUSED						150-199
	9	UNUSED						150-199
	10	UNUSED						150-199
	11	UNUSED						150-199
	12	UNUSED						150-199
D06516P		0763/269/R074		PLUG-				150-199
D06516P		0675/269/R074		PLUG-				275-278
D06516P		0675/270/R073		PLUG-				280-299
	1		W0810	221R	22		23-31-17	150-199, 275-278
	1		W0810	201R	22		23-31-17	280-299
	2		W0810	221B	22		23-31-17	150-199, 275-278
	2		W0810	201B	22		23-31-17	280-299
	3	DL	W0810	052	18		33-24-14	150-199, 275-299
	4	DL	W0810	051	18		33-24-14	150-199, 275-299
	5		W0810	651R	22		23-31-17	150-199
	5	UNUSED						275-299
	6		W0810	651B	22		23-31-17	150-199
	7	UNUSED						150-199
	8	UNUSED						150-199
	9	UNUSED						150-199
	10	UNUSED						150-199
	11	UNUSED						150-199
	12	UNUSED						150-199
D06578J		AC0701/ /		RECP				ALL
	1		W0758	211R	20		73-21-12	ALL

HOOKUP LIST

D280T132

91-21-51

Section D06500

Page 2

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06578J		AC0701/ /		RECP (continued)				ALL
	2		W0758	002	20		73-21-14	ALL
	3		W0758	230B	24		77-12-11	ALL
	4		W0758	230R	24		77-12-11	ALL
	5		W0758	200R	24		31-35-14	050-099, 150-199, 275-276, 278-299
	5	UNUSED						277
	6		W0758	200B	24		31-35-14	050-099, 150-199, 275-276, 278-299
	6	UNUSED						277
	7	UNUSED						ALL
	8		W0758	004	24		73-21-11	ALL
	9		W0758	009	24		73-21-11	ALL
	10		W0758	211B	20		73-21-17	ALL
	11		W0758	203R	24		73-21-14	ALL
	12		W0758	203B	24		73-21-14	ALL
	13	FM	W0758	013	16		73-21-20	ALL
	14		W0758	001	20		30-34-11	ALL
	15		W0758	205B	24		73-21-13	ALL
	16		W0758	205R	24		73-21-13	ALL
	17		W0758	202B	24		73-21-14	ALL
	18		W0758	202R	24		73-21-14	ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21		W0758	201B	22		73-21-14	ALL
	22		W0758	201R	22		73-21-14	ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25		W0758	302Y	24		73-21-13	ALL
	26		W0758	302R	24		73-21-13	ALL
	27		W0758	302B	24		73-21-13	ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D06500

Page 3

Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06578J		AC0701/ /		RECP (continued)				ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
	= CC	M	W0758	002Z			73-21-14	ALL
	= CC	M	W0758	004Z			73-21-11	ALL
	= CC	M	W0758	009Z			73-21-11	ALL
	= CC	M	W0758	013Z			73-21-20	ALL
	= CC	M	W0758	201Z			73-21-14	ALL
	= CC	M	W0758	202Z			73-21-14	ALL
	= CC	M	W0758	203Z			73-21-14	ALL
	= CC	M	W0758	205Z			73-21-13	ALL
	= CC	M	W0758	211Z			73-21-12	ALL
	= CC	M	W0758	230Z			77-12-11	ALL
	= CC	M	W0758	302Z			73-21-13	ALL
	= CC	M	W0758	200Z			31-35-14	050-099, 155-199, 275-276, 278-299
	= CC	D	W0758	200Z			31-35-14	150-154
D06578P		AC0701/ /		PLUG				ALL
	1		W0516	211R	20		73-21-12	ALL
	2		W0516	101	20		73-21-14	ALL
	3		W0516	205B	20		77-12-11	ALL
	4		W0516	205R	20		77-12-11	ALL
	5		W0516	203R	20		31-35-14	050-099, 150-199, 275-276, 278-299
	5	UNUSED						277
	6		W0516	203B	20		31-35-14	050-099, 150-199, 275-276, 278-299
	6	UNUSED						277
	7	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D06500

Page 4

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06578P		AC0701/ /		PLUG (continued)				ALL
	8		W0516	225B	20		73-21-11	ALL
	9		W0516	225R	20		73-21-11	ALL
	10		W0516	211B	20		73-21-17	ALL
	11		W0516	223R	20		73-21-14	ALL
	12		W0516	223B	20		73-21-14	ALL
	13	FL	W0516	002	16		73-21-20	ALL
	14	DL	W0516	001	18		30-34-11	ALL
	15		W0516	201B	20		73-21-13	ALL
	16		W0516	201R	20		73-21-13	ALL
	17		W0516	202B	20		73-21-14	ALL
	18		W0516	202R	20		73-21-14	ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21		W0516	204B	20		73-21-14	ALL
	22		W0516	204R	20		73-21-14	ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25		W0516	302Y	20		73-21-13	ALL
	26		W0516	302R	20		73-21-13	ALL
	27		W0516	302B	20		73-21-13	ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D06500

Page 5

Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06578P		AC0701/ /		PLUG (continued)				ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
	= CC	M	W0516	203Z			31-35-14	050-099, 150-199, 275-276, 278-299
	= CC	M	W0516	002Z			73-21-20	ALL
	= CC	M	W0516	101Z			73-21-14	ALL
	= CC	M	W0516	201Z			73-21-13	ALL
	= CC	M	W0516	202Z			73-21-14	ALL
	= CC	M	W0516	204Z			73-21-14	ALL
	= CC	M	W0516	205Z			77-12-11	ALL
	= CC	M	W0516	211Z			73-21-12	ALL
	= CC	M	W0516	223Z			73-21-14	ALL
	= CC	M	W0516	225Z			73-21-11	ALL
	= CC	M	W0516	302Z			73-21-13	ALL
D06580J		AC0702/ /		RECP				ALL
	1		W0782	211R	24		73-21-12	ALL
	2		W0782	009	24		73-21-14	ALL
	3		W0782	213B	24		77-12-11	ALL
	4		W0782	213R	24		77-12-11	ALL
	5		W0782	200R	24		31-35-15	050-099, 150-199, 275-276, 278
	5	UNUSED						277
	5		W0782	200R	24		31-31-27	280-299
	6		W0782	200B	24		31-35-15	050-099, 150-199, 275-276, 278
	6	UNUSED						277
	6		W0782	200B	24		31-31-27	280-299
	7	UNUSED						ALL
	8		W0782	014	24		73-21-11	ALL
	9		W0782	018	24		73-21-11	ALL
	10		W0782	211B	24		73-21-17	ALL
	11		W0782	210R	24		73-21-14	ALL
	12		W0782	210B	24		73-21-14	ALL
	13	FM	W0782	013	16		73-21-20	ALL
	14		W0782	001	20		30-34-21	ALL
	15		W0782	203B	24		73-21-13	ALL

HOOKUP LIST

D280T132

91-21-51

Section D06500

Page 6

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06580J		AC0702/ /		RECP (continued)				ALL
	16		W0782	203R	24		73-21-13	ALL
	17		W0782	202B	24		73-21-14	ALL
	18		W0782	202R	24		73-21-14	ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21		W0782	201B	22		73-21-14	ALL
	22		W0782	201R	22		73-21-14	ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25		W0782	302Y	24		73-21-13	ALL
	26		W0782	302R	24		73-21-13	ALL
	27		W0782	302B	24		73-21-13	ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D06500

Page 7

Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06580J		AC0702/ /		RECP (continued)				ALL
	= CC	M	W0782	009Z			73-21-14	050-099, 150-199, 280-299
	= CC	M	W0782	013Z			73-21-20	050-099, 150-199, 280-299
	= CC	M	W0782	014Z			73-21-11	050-099, 150-199, 280-299
	= CC	M	W0782	018Z			73-21-11	050-099, 150-199, 280-299
	= CC	M	W0782	201Z			73-21-14	050-099, 150-199, 280-299
	= CC	M	W0782	202Z			73-21-14	050-099, 150-199, 280-299
	= CC	M	W0782	203Z			73-21-13	050-099, 150-199, 280-299
	= CC	M	W0782	210Z			73-21-14	050-099, 150-199, 280-299
	= CC	M	W0782	211Z			73-21-12	050-099, 150-199, 280-299
	= CC	M	W0782	213Z			77-12-11	050-099, 150-199, 280-299
	= CC	M	W0782	302Z			73-21-13	050-099, 150-199, 280-299
	= CC	M	W0782	200Z			31-35-15	050-099, 155-199
	= CC	D	W0782	200Z			31-35-15	150-154, 275-276, 278
	= CC	D	W0782	009Z			73-21-14	275-278
	= CC	D	W0782	013Z			73-21-20	275-278
	= CC	D	W0782	014Z			73-21-11	275-278
	= CC	D	W0782	018Z			73-21-11	275-278
	= CC	D	W0782	201Z			73-21-14	275-278
	= CC	D	W0782	202Z			73-21-14	275-278
	= CC	D	W0782	203Z			73-21-13	275-278
	= CC	D	W0782	210Z			73-21-14	275-278
	= CC	D	W0782	211Z			73-21-12	275-278
	= CC	D	W0782	213Z			77-12-11	275-278
	= CC	D	W0782	302Z			73-21-13	275-278
	= CC	M	W0782	200Z			31-31-27	280-299
D06580P		AC0702/ /		PLUG				ALL
	1		W0518	211R	20		73-21-12	ALL
	2		W0518	101	20		73-21-14	ALL
	3		W0518	205B	20		77-12-11	ALL
	4		W0518	205R	20		77-12-11	ALL
	5		W0518	203R	20		31-35-15	050-099, 150-199, 275-276, 278-299
	5	UNUSED						277
	6		W0518	203B	20		31-35-15	050-099, 150-199, 275-276, 278-299
	6	UNUSED						277
	7	UNUSED						ALL
	8		W0518	225B	20		73-21-11	ALL
	9		W0518	225R	20		73-21-11	ALL
	10		W0518	211B	20		73-21-17	ALL
	11		W0518	223R	20		73-21-14	ALL

HOOKUP LIST

D280T132

91-21-51

Section D06500

Page 8

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06580P		AC0702/ /		PLUG (continued)				ALL
	12		W0518	223B	20		73-21-14	ALL
	13	FL	W0518	002	16		73-21-20	ALL
	14	DL	W0518	001	18		30-34-21	ALL
	15		W0518	201B	20		73-21-13	ALL
	16		W0518	201R	20		73-21-13	ALL
	17		W0518	202B	20		73-21-14	ALL
	18		W0518	202R	20		73-21-14	ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21		W0518	204B	20		73-21-14	ALL
	22		W0518	204R	20		73-21-14	ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25		W0518	302Y	20		73-21-13	ALL
	26		W0518	302R	20		73-21-13	ALL
	27		W0518	302B	20		73-21-13	ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D06500

Page 9

Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06580P		AC0702/ /		PLUG (continued)				ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
	= CC	M	W0518	203Z			31-35-15	050-099, 150-199, 275-276, 278-299
	= CC	M	W0518	002Z			73-21-20	ALL
	= CC	M	W0518	101Z			73-21-14	ALL
	= CC	M	W0518	201Z			73-21-13	ALL
	= CC	M	W0518	202Z			73-21-14	ALL
	= CC	M	W0518	204Z			73-21-14	ALL
	= CC	M	W0518	205Z			77-12-11	ALL
	= CC	M	W0518	211Z			73-21-12	ALL
	= CC	M	W0518	223Z			73-21-14	ALL
	= CC	M	W0518	225Z			73-21-11	ALL
	= CC	M	W0518	302Z			73-21-13	ALL
D06582J		AE0209/ /		RCPT-P36				ALL
	1	UNUSED						ALL
	2	FM	W0176	91F	16		73-21-20	050-099, 280-299
	2	FL	W0176	91F	16		73-21-20	150-199, 275-278
	3		W0176	256B	24		73-21-14	ALL
	4		W0176	256R	24		73-21-14	ALL
	5		W0176	255B	24		73-21-14	050-099, 275-299
	5	C	W0176	255B	24		73-21-14	150-199
	6		W0176	255R	24		73-21-14	050-099, 275-299
	6	C	W0176	255R	24		73-21-14	150-199
	7		W0176	258R	24		73-21-14	ALL
	8		W0176	64A	22		30-34-11	ALL
	9		W0176	FRJ			73-21-14	050-099
	9		W0176	FRS			73-21-14	150-199, 275-299
	10		W0176	258B	24		73-21-14	ALL
	11		W0176	91C	24		73-21-14	ALL
	12	UNUSED						ALL
	13		W0176	FRB			73-21-14	050-099
	13		W0176	FRC			73-21-14	150-199, 277-299
	13		W0176	91FZ			73-21-20	275-276
	14		W0176	239R	24		73-21-12	ALL
	15		W0176	239Z			73-21-12	ALL
	16		W0176	FRC			73-21-11	050-099
	16		W0176	FR3			73-21-11	150-199, 275-299

HOOKUP LIST

D280T132

91-21-51

Section D06500

Page 10

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06582J		AE0209/ /		RCPT-P36 (continued)				ALL
	17		W0176	11C	24		73-21-11	ALL
	18		W0176	11D	24		73-21-11	ALL
	19		W0176	239B	24		73-21-17	ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22		W0176	287R	24		77-12-11	ALL
	23		W0176	287B	24		77-12-11	ALL
	24		W0176	287Z			77-12-11	ALL
	25		W0176	19UR	24		31-35-14	050-099, 150-199, 275-276, 278-299
	25	UNUSED						277
	26		W0176	19UB	24		31-35-14	050-099, 150-199, 275-276, 278-299
	26	UNUSED						277
	27		W0176	19UZ			31-35-14	050-099, 150-199, 275-276, 278-299
	27	UNUSED						277
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
			W0176	FRB			73-21-14	050-099
			W0176	FRC			73-21-11	050-099
			W0176	FRJ			73-21-14	050-099
			W0176	11CZ			73-21-11	ALL
			W0176	11DZ			73-21-11	ALL
			W0176	255Z			73-21-14	ALL
			W0176	256Z			73-21-14	ALL
			W0176	258Z			73-21-14	ALL
			W0176	91CZ			73-21-14	ALL
			W0176	91FZ			73-21-20	050-099, 150-199, 277-299
			W0176	FR3			73-21-11	150-199, 275-299
			W0176	FRS			73-21-14	150-199, 275-299
			W0176	FRC			73-21-14	150-199, 277-299
D06582P		AE0209/ /		RECP-P36				ALL
	1	UNUSED						ALL
	2	FL	W0758	013	16		73-21-20	ALL
	3		W0758	201B	22		73-21-14	ALL
	4		W0758	201R	22		73-21-14	ALL
	5		W0758	202B	24		73-21-14	ALL
	6		W0758	202R	24		73-21-14	ALL
	7		W0758	203R	24		73-21-14	ALL

HOOKUP LIST

D280T132

91-21-51

Section D06500

Page 11

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06582P		AE0209/ /		RECP-P36 (continued)				ALL
	8		W0758	001	20		30-34-11	ALL
	9		W0758	FRI			73-21-14	ALL
	10		W0758	203B	24		73-21-14	ALL
	11		W0758	002	20		73-21-14	ALL
	12	UNUSED						ALL
	13		W0758	FRD			73-21-14	ALL
	14		W0758	211R	20		73-21-12	ALL
	15		W0758	211Z			73-21-12	ALL
	16		W0758	FRC			73-21-11	ALL
	17		W0758	004	24		73-21-11	ALL
	18		W0758	009	24		73-21-11	ALL
	19		W0758	211B	20		73-21-17	ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22		W0758	230R	24		77-12-11	ALL
	23		W0758	230B	24		77-12-11	ALL
	24		W0758	230Z			77-12-11	ALL
	25		W0758	200R	24		31-35-14	050-099, 150-199, 275-276, 278-299
	25	UNUSED						277
	26		W0758	200B	24		31-35-14	050-099, 150-199, 275-276, 278-299
	26	UNUSED						277
	27		W0758	200Z			31-35-14	050-099, 150-199, 275-276, 278-299
	27	UNUSED						277
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
			W0758	002Z			73-21-14	ALL
			W0758	004Z			73-21-11	ALL
			W0758	009Z			73-21-11	ALL
			W0758	013Z			73-21-20	ALL
			W0758	201Z			73-21-14	ALL
			W0758	202Z			73-21-14	ALL
			W0758	203Z			73-21-14	ALL
			W0758	FRC			73-21-11	ALL
			W0758	FRD			73-21-14	ALL
			W0758	FRI			73-21-14	ALL
D06584J		AE0218/ /		RCPT-P37				ALL
	1		W0192	853	22		78-36-21	ALL

HOOKUP LIST

D280T132

91-21-51

Section D06500

Page 12

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06584J		AE0218/ /		RCPT-P37 (continued)				ALL
	2		W0192	91D	24		73-21-14	ALL
	3		W0192	284R	24		73-21-14	ALL
	4		W0192	284B	24		73-21-14	ALL
	5		W0192	845	22		78-36-21	ALL
	6		W0192	846	22		78-36-21	ALL
	7	FM	W0192	91F	16		73-21-20	ALL
	8		W0192	64A	20		30-34-21	ALL
	9		W0192	18C	24		73-21-11	ALL
	10		W0192	18D	24		73-21-11	ALL
	11	UNUSED						ALL
	12		W0192	FRW			73-21-14	ALL
	13		W0192	283B	24		73-21-17	ALL
	14		W0192	283R	24		73-21-12	ALL
	15		W0192	283Z			73-21-12	ALL
	16		W0192	24NR	24		31-35-15	050-099, 150-199, 275-276, 278-299
	16	UNUSED						277
	17		W0192	24NB	24		31-35-15	050-099, 150-199, 275-276, 278-299
	17	UNUSED						277
	18		W0192	24NZ			31-35-15	050-099, 150-199, 275-276, 278-299
	18	UNUSED						277
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22		W0192	277R	24		77-12-11	ALL
	23		W0192	277B	24		77-12-11	ALL
	24		W0192	277Z			77-12-11	ALL
	25		W0192	268B	24		73-21-14	ALL
	26		W0192	268R	24		73-21-14	ALL
	27		W0192	267B	24		73-21-14	ALL
	28		W0192	267R	24		73-21-14	ALL
	29		W0192	FRA			73-21-14	050-099
	29		W0192	FR1			73-21-14	150-199, 275-299
	30	UNUSED						ALL
	31	UNUSED						ALL
			W0192	FRA			73-21-14	050-099
			W0192	18CZ			73-21-11	ALL
			W0192	18DZ			73-21-11	ALL
			W0192	267Z			73-21-14	ALL
			W0192	268Z			73-21-14	ALL
			W0192	284Z			73-21-14	ALL

HOOKUP LIST

D280T132

91-21-51

Section D06500

Page 13

Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06584J		AE0218/ /		RCPT-P37 (continued)				ALL
			W0192	91DZ			73-21-14	ALL
			W0192	91FZ			73-21-20	ALL
			W0192	FRW			73-21-14	ALL
			W0192	FR1			73-21-14	150-199, 275-299
D06584P		AE0218/ /		PLUG				ALL
	1		W0782	052	22		78-36-21	ALL
	2		W0782	009	24		73-21-14	ALL
	3		W0782	210R	24		73-21-14	ALL
	4		W0782	210B	24		73-21-14	ALL
	5		W0782	032	22		78-36-21	ALL
	6		W0782	027	22		78-36-21	ALL
	7	FL	W0782	013	16		73-21-20	ALL
	8		W0782	001	20		30-34-21	ALL
	9		W0782	014	24		73-21-11	ALL
	10		W0782	018	24		73-21-11	ALL
	11	UNUSED						ALL
	12		W0782	FRE			73-21-14	ALL
	13		W0782	211B	24		73-21-17	ALL
	14		W0782	211R	24		73-21-12	ALL
	15		W0782	211Z			73-21-12	ALL
	16		W0782	200R	24		31-35-15	050-099, 150-199, 275-276, 278
	16	UNUSED						277
	16		W0782	200R	24		31-31-27	280-299
	17		W0782	200B	24		31-35-15	050-099, 150-199, 275-276, 278
	17	UNUSED						277
	17		W0782	200B	24		31-31-27	280-299
	18		W0782	200Z			31-35-15	050-099, 150-199, 275-276, 278
	18	UNUSED						277
	18		W0782	200Z			31-31-27	280-299
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22		W0782	213R	24		77-12-11	ALL
	23		W0782	213B	24		77-12-11	ALL
	24		W0782	213Z			77-12-11	ALL
	25		W0782	201B	22		73-21-14	ALL
	26		W0782	201R	22		73-21-14	ALL
	27		W0782	202B	24		73-21-14	ALL
	28		W0782	202R	24		73-21-14	ALL

HOOKUP LIST

D280T132

91-21-51

Section D06500

Page 14

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06584P		AE0218/ /		PLUG (continued)				ALL
	29		W0782	FRC			73-21-14	ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
			W0782	009Z			73-21-14	ALL
			W0782	013Z			73-21-20	ALL
			W0782	014Z			73-21-11	ALL
			W0782	018Z			73-21-11	ALL
			W0782	201Z			73-21-14	ALL
			W0782	202Z			73-21-14	ALL
			W0782	210Z			73-21-14	ALL
			W0782	FRC			73-21-14	ALL
			W0782	FRE			73-21-14	ALL
D06586J		AC0701/ /		RECP				ALL
	1		W0756	606	24		24-11-11	ALL
	2		W0756	608	24		24-11-11	ALL
	3		W0756	607	24		24-11-11	ALL
	4		W0756	605	24		24-11-11	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D06500

Page 15

Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06586J		AC0701/ /		RECP (continued)				ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
D06586P		AC0701/ /		PLUG-L WING FS/BODY				ALL
	1		W0412	002	20		24-11-11	ALL
	2		W0412	006	20		24-11-11	ALL
	3		W0412	007	20		24-11-11	ALL
	4		W0412	008	20		24-11-11	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D06500

Page 16

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06588J		AC0702/ /		PLUG				050-099, 150-199
D06588J		AC0702/ /		RECP				275-299
	1		W0768	148	24		24-11-21	ALL
	2		W0768	544	24		24-11-21	ALL
	3		W0768	149	24		24-11-21	ALL
	4		W0768	147	24		24-11-21	050-099, 280-299
	4		W0768	147	22		24-11-21	150-199, 275-278
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
D06588P		AC0702/ /		PLUG-R WING/BODY				ALL
	1		W0414	002	20		24-11-21	ALL
	2		W0414	006	20		24-11-21	ALL
	3		W0414	007	20		24-11-21	ALL
	4		W0414	008	20		24-11-21	ALL
	5	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D06500

Page 17

Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06588P		AC0702/ /		PLUG-R WING/BODY (continued)				ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
D06594J		AE0322/ /		RCPT-				ALL
	1		W0606	203R	22		31-31-22	ALL
	2		W0606	203B	22		31-31-22	ALL
	3		W0606	203Z			31-31-22	ALL
	4		W0606	020	22		31-31-22	ALL
	5		W0606	021	22		31-31-22	ALL
	6		W0606	202R	22		31-31-22	ALL
	7		W0606	202B	22		31-31-22	ALL
	8		W0606	202Z			31-31-22	ALL
	9		W0606	073	22		31-31-22	ALL
	10		W0606	074	22		31-31-22	ALL
	11		W0606	075	22		31-31-22	ALL
	12	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D06500

Page 18

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06594J		AE0322/ /		RCPT- (continued)				ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
D06594P		AE0322/ /		PLUG E2-3				ALL
	1		W0135	778R	24		31-31-22	ALL
	2		W0135	778B	24		31-31-22	ALL
	3		W0135	778Z			31-31-22	ALL
	4		W0135	771	22		31-31-22	ALL
	5		W0135	773	22		31-31-22	ALL
	6		W0135	779R	24		31-31-22	ALL
	7		W0135	779B	24		31-31-22	ALL
	8		W0135	779Z			31-31-22	ALL
	9		W0135	749	24		31-31-22	ALL
	10		W0135	750	24		31-31-22	ALL
	11		W0135	751	24		31-31-22	ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D06500
Page 19
Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06594P		AE0322/ /		PLUG E2-3 (continued)				ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D06500

Page 20 End

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06604J		0320/282/L070		RCPT-				ALL
	1		W0842	001	20		30-46-11	ALL
	2		W0842	002	20		30-46-11	ALL
	3		W0842	003	20		30-46-11	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
D06604P		0320/282/L070		PLUG-				ALL
	1		W1230	089	22		30-46-11	ALL
	2		W1230	090	20		30-46-11	ALL
	3		W1230	091	20		30-46-11	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
D06606J		0320/282/R070		RCPT-				ALL
	1		W0844	001	20		30-46-11	ALL
	2		W0844	002	20		30-46-11	ALL
	3		W0844	003	20		30-46-11	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
D06606P		320/282/R070		PLUG-				050-099
D06606P		0320/282/R070		PLUG-				150-199, 275-299
	1		W1222	174	22		30-46-11	ALL
	2		W1222	175	20		30-46-11	ALL
	3		W1222	176	20		30-46-11	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
D06612J		1510/282/L070		RCPT-				ALL
	1		W0850	001	20		30-46-11	ALL
	2		W0850	002	20		30-46-11	ALL
	3		W0850	003	20		30-46-11	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
D06612P		1510/282/L070		PLUG-				ALL
	1		W0788	108	22		30-46-11	ALL
	2		W0788	109	20		30-46-11	ALL
	3		W0788	110	20		30-46-11	ALL
	4	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D06600
Page 1
Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06612P		1510/282/L070		PLUG- (continued)				ALL
	5	UNUSED						ALL
D06614J		1510/282/R070		RCPT-				ALL
	1		W0852	001	20		30-46-11	ALL
	2		W0852	002	20		30-46-11	ALL
	3		W0852	003	20		30-46-11	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
D06614P		1510/282/R070		PLUG-				ALL
	1		W0790	125	22		30-46-11	ALL
	2		W0790	126	20		30-46-11	ALL
	3		W0790	127	20		30-46-11	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
D06644J		0763/269/L074		RCPT-				150-199
D06644J		0675/269/L074		RCPT-				275-278
D06644J		0687/269/L074		RCPT-				280-299
	1	FO	W0718	001	14		35-21-12	150-199, 275-299
	2	FN	W0718	035	14		35-21-12	150-199
	2	FO	W0718	065	14		35-21-12	275-299
	3	UNUSED						150-199, 275-299
D06644P		0763/269/L074		PLUG-				150-199
D06644P		0675/269/L074		PLUG-				275-278
D06644P		0676/269/L074		PLUG-				280-299
	1	FN	W0724	001	14		35-21-12	150-199, 275-299
	2	FN	W0724	080	14		35-21-12	150-199
	2	FN	W0724	072	14		35-21-12	275-299
	3	UNUSED						150-199, 275-299
D06646J		0763/269/R074		RCPT-				150-199
D06646J		0675/269/R074		RCPT-				275-278
D06646J		0687/269/R074		RCPT-				280-299
	1	FO	W0722	001	14		35-21-13	150-199, 275-299
	2	FO	W0722	039	14		35-21-13	150-199
	2	FO	W0722	033	14		35-21-13	275-299
	3	UNUSED						150-199, 275-299

HOOKUP LIST

D280T132

91-21-51

Section D06600

Page 2

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06646P		0763/269/R074		PLUG-				150-199
D06646P		0675/269/R074		PLUG-				275-278
D06646P		0676/269/R074		PLUG-				280-299
	1	FN	W0728	001	14		35-21-13	150-199, 275-299
	2	FN	W0728	080	14		35-21-13	150-199
	2	FN	W0728	072	14		35-21-13	275-299
	3	UNUSED						150-199, 275-299
D06650J		AP0901/ /		RCPT-				150-199
	1	DK	W1222	068	18		33-51-12	150-154, 156, 162-199
	1	DK	W1222	544	18		33-51-12	155, 157
	2	DK	W1222	099	18		33-51-12	150-199
	3	UNUSED						150-199
	4	UNUSED						150-199
	5	UNUSED						150-199
	6	UNUSED						150-199
	7	UNUSED						150-199
	8	UNUSED						150-199
	9	UNUSED						150-199
	10	UNUSED						150-199
	11	UNUSED						150-199
	12	UNUSED						150-199
D06650P		AP0901/POS/4		PLUG-				150-199
	1	DL	W0122	121	18		33-51-12	150-199
	2	DL	W0122	122	18		33-51-12	150-199
	3	UNUSED						150-199
	4	UNUSED						150-199
	5	UNUSED						150-199
	6	UNUSED						150-199
	7	UNUSED						150-199
	8	UNUSED						150-199
	9	UNUSED						150-199
	10	UNUSED						150-199
	11	UNUSED						150-199
	12	UNUSED						150-199
D06652J		AP0901/ /		RCPT-				150-199
	1		W0790	076	20		33-51-13	150-199
	2		W0790	077	20		33-51-13	150-199

HOOKUP LIST
D280T132

91-21-51
Section D06600
Page 3
Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06652J		AP0901/ /		RCPT- (continued)				150-199
	3	UNUSED						150-199
	4	UNUSED						150-199
	5	UNUSED						150-199
	6	UNUSED						150-199
	7	UNUSED						150-199
	8	UNUSED						150-199
	9	UNUSED						150-199
	10	UNUSED						150-199
	11	UNUSED						150-199
	12	UNUSED						150-199
D06652P		AP0901/POS/3		PLUG-				150-199
	1		W0122	131	20		33-51-13	150-199
	2		W0122	132	20		33-51-13	150-199
	3	UNUSED						150-199
	4	UNUSED						150-199
	5	UNUSED						150-199
	6	UNUSED						150-199
	7	UNUSED						150-199
	8	UNUSED						150-199
	9	UNUSED						150-199
	10	UNUSED						150-199
	11	UNUSED						150-199
	12	UNUSED						150-199
D06658J		P037-00/ /		RECPT-P37				050-099
D06658J		AE0218/ /		RECPT-P37				150-199, 275-299
	1		W1118	11T	20		21-26-31	ALL
	2		W1118	11W	24		21-26-31	ALL
	3		W1118	11U	24		21-26-31	ALL
	4		W1118	11G	22		21-26-31	ALL
	5		W1118	11H	22		21-26-31	ALL
	6		W1118	11J	22		21-26-31	ALL
	7		W1118	11K	24		21-26-31	ALL
	8		W1118	13B	24		21-28-11	050-099, 150-199, 275-276
	8	UNUSED						277-299
	9		W1118	12X	24		21-28-11	ALL
	10		W1118	12T	24		21-28-11	ALL
	11		W1118	13A	24		21-28-11	ALL
	12		W1118	12W	24		21-28-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D06600

Page 4

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06658J		P037-00/ /		RECPT-P37 (continued)				050-099
D06658J		AE0218/ /		RECPT-P37 (continued)				150-199, 275-299
	13		W1118	14A	24		28-22-12	050-099, 275-299
	13	UNUSED						150-199
	14		W1118	12V	22		21-28-11	ALL
	15		W1118	12U	22		21-28-11	ALL
	16		W1118	12S	22		21-28-11	ALL
	17		W1118	12R	22		21-28-11	ALL
	18		W1118	12J	24		21-51-11	ALL
	19		W1118	12A	24		21-43-11	ALL
	20		W1118	12B	24		21-43-11	ALL
	21		W1118	12D	24		21-43-11	ALL
	22		W1118	550	24		21-43-11	ALL
	23		W1118	500	24		21-26-31	ALL
	24		W1118	538	22		21-26-31	ALL
	DED		W1118	12RZ			21-28-11	050-099
	DED		W1118	12SZ			21-28-11	050-099
D06658P		292/169/R68		PLUG-P37				ALL
	1		W0942	514	24		21-26-31	ALL
	2		W0942	513	24		21-26-31	ALL
	3		W0942	512	24		21-26-31	ALL
	4		W0942	515	22		21-26-31	ALL
	5		W0942	516	22		21-26-31	ALL
	6		W0942	517	22		21-26-31	ALL
	7		W0942	518	24		21-26-31	ALL
	8		W0942	521	24		21-28-11	050-099, 150-199, 275-276
	8	UNUSED						277-299
	9		W0942	522	24		21-28-11	ALL
	10		W0942	523	24		21-28-11	ALL
	11		W0942	524	24		21-28-11	ALL
	12		W0942	525	24		21-28-11	ALL
	13		W0942	011	24		28-22-12	050-099, 275-299
	13	UNUSED						150-199
	14		W0942	531	22		21-28-11	ALL
	15		W0942	533	22		21-28-11	ALL
	16		W0942	537	22		21-28-11	ALL
	17		W0942	538	22		21-28-11	ALL
	18		W0942	081	24		21-51-11	ALL
	19		W0942	542	24		21-43-11	ALL
	20		W0942	543	24		21-43-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D06600

Page 5

Feb 06/2009



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06658P		292/169/R68		PLUG-P37 (continued)				ALL
	21		W0942	544	24		21-43-11	ALL
	22		W0942	568	24		21-43-11	ALL
	23		W0942	619	24		21-26-31	ALL
	24		W0942	620	22		21-26-31	ALL
	DED		W0942	537Z			21-28-11	050-099
	DED		W0942	538Z			21-28-11	050-099
	DED		W0942	515Z			21-26-31	050-099, 155-199, 276-299
	DED		W0942	516Z			21-26-31	050-099, 155-199, 276-299
	DED		W0942	517Z			21-26-31	050-099, 155-199, 276-299
D06666J		AP0202/ /		RECP				275
D06666J		AP0205/ /		RECP				276-299
	1		W1407	201Z			23-32-12	275-299
	2		W1407	201R	24		23-32-12	275-299
	3		W1407	201B	24		23-32-12	275-299
	4		W1407	015	20		23-32-11	275-299
	5		W1407	019	20		23-32-11	275-299
	6	UNUSED						275-299
	7	UNUSED						275-299
	8	UNUSED						275-299
	9		W1407	005	24		23-32-12	275-299
	10	UNUSED						275-299
	11	UNUSED						275-299
	12	UNUSED						275-299
	13	UNUSED						275-299
	14		W1407	204R	24		23-32-12	275-299
	15		W1407	204B	24		23-32-12	275-299
	16		W1407	FRF			23-32-12	275-299
	17		W1407	206R	24		23-32-12	275-299
	18		W1407	202R	24		23-32-12	275-299
	19		W1407	202B	24		23-32-12	275-299
	20		W1407	203R	24		23-32-12	275-299
	21	UNUSED						275-299
	22	UNUSED						275-299
	23	UNUSED						275-299
	24	UNUSED						275-299
	25	UNUSED						275-299
	26	UNUSED						275-299
	27	UNUSED						275-299
	28		W1407	002	24		23-32-12	275-299

HOOKUP LIST

D280T132

91-21-51

Section D06600

Page 6

Feb 06/2009



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06666J		AP0202/ /		RECP (continued)				275
D06666J		AP0205/ /		RECP (continued)				276-299
	29	UNUSED						275-299
	30		W1407	205R	24		23-32-12	275-299
	31		W1407	205B	24		23-32-12	275-299
	32		W1407	FRD			23-32-12	275-299
	33		W1407	206B	24		23-32-12	275-299
	34		W1407	207R	24		23-32-12	275-299
	35		W1407	207B	24		23-32-12	275-299
	36	UNUSED						275-299
	37		W1407	203B	24		23-32-12	275-299
	38		W1407	FRB			23-32-12	275-299
	39	UNUSED						275-299
	40	UNUSED						275-299
	41	UNUSED						275-299
	42		W1407	001	24		23-32-12	275-299
	43	UNUSED						275-299
	44	UNUSED						275-299
	45	UNUSED						275-299
	46	UNUSED						275-299
	47	UNUSED						275-299
	48	UNUSED						275-299
	49	UNUSED						275-299
	50	UNUSED						275-299
	51	UNUSED						275-299
	52	UNUSED						275-299
	53	UNUSED						275-299
	54	UNUSED						275-299
	55	UNUSED						275-299
			W1407	202Z			23-32-12	275-299
			W1407	203Z			23-32-12	275-299
			W1407	204Z			23-32-12	275-299
			W1407	205Z			23-32-12	275-299
			W1407	206Z			23-32-12	275-299
			W1407	207Z			23-32-12	275-299
			W1407	FRB			23-32-12	275-299
			W1407	FRD			23-32-12	275-299
			W1407	FRF			23-32-12	275-299

HOOKUP LIST

D280T132

91-21-51

Section D06600

Page 7

Feb 06/2009



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06666P		AP0202/ /		PLUG				275
D06666P		AP0205/ /		PLUG				276-299
	1		W0047	544Z			23-32-12	275-299
	2		W0047	544R	24		23-32-12	275-299
	3		W0047	544B	24		23-32-12	275-299
	4		W0047	570	20		23-32-11	275-299
	5		W0047	023	20		23-32-11	275-299
	6	UNUSED						275-299
	7	UNUSED						275-299
	8	UNUSED						275-299
	9		W0047	578	24		23-32-12	275-299
	10	UNUSED						275-299
	11	UNUSED						275-299
	12	UNUSED						275-299
	13	UNUSED						275-299
	14		W0047	547R	24		23-32-12	275-299
	15		W0047	547B	24		23-32-12	275-299
	16		W0047	FRK			23-32-12	275-299
	17		W0047	549R	24		23-32-12	275-299
	18		W0047	545R	24		23-32-12	275-299
	19		W0047	545B	24		23-32-12	275-299
	20		W0047	546R	24		23-32-12	275-299
	21	UNUSED						275-299
	22	UNUSED						275-299
	23	UNUSED						275-299
	24	UNUSED						275-299
	25	UNUSED						275-299
	26	UNUSED						275-299
	27	UNUSED						275-299
	28		W0047	579	24		23-32-12	275-299
	29	UNUSED						275-299
	30		W0047	548R	24		23-32-12	275-299
	31		W0047	548B	24		23-32-12	275-299
	32		W0047	FRJ			23-32-12	275-299
	33		W0047	549B	24		23-32-12	275-299
	34		W0047	550R	24		23-32-12	275-299
	35		W0047	550B	24		23-32-12	275-299
	36	UNUSED						275-299
	37		W0047	546B	24		23-32-12	275-299
	38		W0047	FRI			23-32-12	275-299
	39	UNUSED						275-299

HOOKUP LIST

D280T132

91-21-51

Section D06600

Page 8

Feb 06/2009



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06666P		AP0202/ /		PLUG (continued)				275
D06666P		AP0205/ /		PLUG (continued)				276-299
	40	UNUSED						275-299
	41	UNUSED						275-299
	42		W0047	577	24		23-32-12	275-299
	43	UNUSED						275-299
	44	UNUSED						275-299
	45	UNUSED						275-299
	46	UNUSED						275-299
	47	UNUSED						275-299
	48	UNUSED						275-299
	49	UNUSED						275-299
	50	UNUSED						275-299
	51	UNUSED						275-299
	52	UNUSED						275-299
	53	UNUSED						275-299
	54	UNUSED						275-299
	55	UNUSED						275-299
			W0047	545Z			23-32-12	275-299
			W0047	546Z			23-32-12	275-299
			W0047	547Z			23-32-12	275-299
			W0047	548Z			23-32-12	275-299
			W0047	549Z			23-32-12	275-299
			W0047	550Z			23-32-12	275-299
			W0047	FRI			23-32-12	275-299
			W0047	FRJ			23-32-12	275-299
			W0047	FRK			23-32-12	275-299
D06668J		AP0202/ /		PLUG				275
D06668J		AP0205/ /		PLUG				276-299
	1		W1417	209R	24		23-32-31	275-299
	2		W1417	209B	24		23-32-31	275-299
	3		W1417	209Z			23-32-31	275-299
	4	UNUSED						275-299
	5	UNUSED						275-299
	6	UNUSED						275-299
	7	UNUSED						275-299
	8		W1417	210BN	24		23-32-31	275-299
	9		W1417	210B	24		23-32-31	275-299
	10		W1417	210Z			23-32-31	275-299
	11	UNUSED						275-299

HOOKUP LIST
D280T132

91-21-51
Section D06600
Page 9
Feb 06/2009



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06668J		AP0202/ /		PLUG (continued)				275
D06668J		AP0205/ /		PLUG (continued)				276-299
	12	UNUSED						275-299
	13	UNUSED						275-299
	14	UNUSED						275-299
	15		W1417	211BN	24		23-32-31	275-299
	16		W1417	211B	24		23-32-31	275-299
	17		W1417	211Z			23-32-31	275-299
	18		W1417	212BN	24		23-32-31	275-299
	19		W1417	212B	24		23-32-31	275-299
	20		W1417	212Z			23-32-31	275-299
	21	UNUSED						275-299
	22	UNUSED						275-299
	23	UNUSED						275-299
	24	UNUSED						275-299
	25	UNUSED						275-299
	26		W1417	001	20		23-32-11	275-299
	27	UNUSED						275-299
	28	UNUSED						275-299
	29	UNUSED						275-299
	30	UNUSED						275-299
	31	UNUSED						275-299
	32	UNUSED						275-299
	33	UNUSED						275-299
	34		W1417	401G	20		23-32-13	275-299
	35		W1417	401Y	20		23-32-13	275-299
	36		W1417	401B	20		23-32-13	275-299
	37		W1417	401R	20		23-32-13	275-299
	38		W1417	007	20		23-32-11	275-299
	39	UNUSED						275-299
	40	UNUSED						275-299
	41	UNUSED						275-299
	42		W1417	005	20		23-32-11	275-299
	43		W1417	226R	24		23-32-51	275-299
	44		W1417	226B	24		23-32-51	275-299
	45		W1417	226Z			23-32-51	275-299
	46		W1417	227BN	24		23-32-51	275-299
	47		W1417	227B	24		23-32-51	275-299
	48		W1417	227Z			23-32-51	275-299
	49		W1417	228BN	24		23-32-51	275-299
	50		W1417	228B	24		23-32-51	275-299

HOOKUP LIST

D280T132

91-21-51

Section D06600

Page 10

Feb 06/2009



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06668J		AP0202/ /		PLUG (continued)				275
D06668J		AP0205/ /		PLUG (continued)				276-299
	51		W1417	228Z			23-32-51	275-299
	52		W1417	229BN	24		23-32-51	275-299
	53		W1417	229B	24		23-32-51	275-299
	54		W1417	229Z			23-32-51	275-299
	55	UNUSED						275-299
D06668P		AP0202/ /		PLUG				275
D06668P		AP0205/ /		PLUG				276-299
	1		W0047	555R	24		23-32-31	275-299
	2		W0047	555B	24		23-32-31	275-299
	3		W0047	555Z			23-32-31	275-299
	4	UNUSED						275-299
	5	UNUSED						275-299
	6	UNUSED						275-299
	7	UNUSED						275-299
	8		W0047	556BN	24		23-32-31	275-299
	9		W0047	556B	24		23-32-31	275-299
	10		W0047	556Z			23-32-31	275-299
	11	UNUSED						275-299
	12	UNUSED						275-299
	13	UNUSED						275-299
	14	UNUSED						275-299
	15		W0047	557BN	24		23-32-31	275-299
	16		W0047	557B	24		23-32-31	275-299
	17		W0047	557Z			23-32-31	275-299
	18		W0047	558BN	24		23-32-31	275-299
	19		W0047	558B	24		23-32-31	275-299
	20		W0047	558Z			23-32-31	275-299
	21	UNUSED						275-299
	22	UNUSED						275-299
	23	UNUSED						275-299
	24	UNUSED						275-299
	25	UNUSED						275-299
	26		W0047	021	20		23-32-11	275-299
	27	UNUSED						275-299
	28	UNUSED						275-299
	29	UNUSED						275-299
	30	UNUSED						275-299
	31	UNUSED						275-299

HOOKUP LIST

D280T132

91-21-51

Section D06600

Page 11

Feb 06/2009



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06668P		AP0202/ /		PLUG (continued)				275
D06668P		AP0205/ /		PLUG (continued)				276-299
	32	UNUSED						275-299
	33	UNUSED						275-299
	34		W0047	401G	20		23-32-13	275-299
	35		W0047	401Y	20		23-32-13	275-299
	36		W0047	401B	20		23-32-13	275-299
	37		W0047	401R	20		23-32-13	275-299
	38		W0047	024	20		23-32-11	275-299
	39	UNUSED						275-299
	40	UNUSED						275-299
	41	UNUSED						275-299
	42		W0047	022	20		23-32-11	275-299
	43		W0047	559R	24		23-32-51	275-299
	44		W0047	559B	24		23-32-51	275-299
	45		W0047	559Z			23-32-51	275-299
	46		W0047	560BN	24		23-32-51	275-299
	47		W0047	560B	24		23-32-51	275-299
	48		W0047	560Z			23-32-51	275-299
	49		W0047	561BN	24		23-32-51	275-299
	50		W0047	561B	24		23-32-51	275-299
	51		W0047	561Z			23-32-51	275-299
	52		W0047	562BN	24		23-32-51	275-299
	53		W0047	562B	24		23-32-51	275-299
	54		W0047	562Z			23-32-51	275-299
	55	UNUSED						275-299

HOOKUP LIST

D280T132

91-21-51

Section D06600

Page 12 End

Feb 06/2009



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06730		0360/280/L 60		RECPT				050-099, 150-199
	1		W0645	406R	24		23-42-11	050-099, 150-199
	2		W0645	406Z			23-42-11	050-099, 150-199
	3		W0645	406B	24		23-42-11	050-099, 150-199
	4		W0645	406Y	24		23-42-11	050-099, 150-199
	5		W0645	406G	24		23-42-11	050-099, 150-199
D06732J		AE0305/ /		RCPT-E1-5				ALL
	1		W0510	513	24		21-61-51	ALL
	2		W0510	215B	24		21-61-51	ALL
	3		W0510	215R	24		21-61-51	ALL
	4		W0510	306B	24		21-61-61	ALL
	5		W0510	306R	24		21-61-61	ALL
	6		W0510	306Y	24		21-61-61	ALL
	7		W0510	216B	24		21-61-61	ALL
	8		W0510	216R	24		21-61-61	ALL
	9		W0510	217B	24		21-61-61	ALL
	10		W0510	217R	24		21-61-61	ALL
	11		W0510	219B	24		21-61-71	ALL
	12		W0510	219R	24		21-61-71	ALL
	13		W0510	218R	24		21-61-71	ALL
	14		W0510	218B	24		21-61-71	ALL
	15		W0510	307B	24		21-61-71	ALL
	16		W0510	307R	24		21-61-71	ALL
	17		W0510	307Y	24		21-61-71	ALL
	18		W0510	515	24		21-61-71	ALL
	19		W0510	514	24		21-61-61	ALL
	20		W0510	516	24		21-26-31	ALL
	21		W0510	517	24		21-26-31	ALL
	22		W0510	518	24		21-28-11	ALL
	23	UNUSED						ALL
	24		W0510	073	24		21-25-11	ALL
	25		W0510	544	24		21-51-11	ALL
	26		W0510	549	24		21-61-81	ALL
	27		W0510	548	24		21-61-81	ALL
	28	UNUSED						ALL
	29		W0510	522	24		21-43-11	ALL
	30		W0510	520	24		21-43-11	ALL
	31		W0510	521	24		21-43-11	ALL
	32		W0510	134	22		21-51-11	ALL
	33		W0510	135	22		21-51-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D06700

Page 1

Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06732J		AE0305/ /		RCPT-E1-5 (continued)				ALL
	34		W0510	119	22		21-51-11	ALL
	35		W0510	130	24		21-51-11	ALL
	36		W0510	129	24		21-51-11	ALL
	37		W0510	131	24		21-51-11	ALL
	38		W0510	118	22		21-51-11	ALL
	39		W0510	132	24		21-51-11	ALL
	40		W0510	133	24		21-51-11	ALL
	41		W0510	127	24		21-51-11	ALL
	42		W0510	708	24		21-51-11	ALL
	43		W0510	535	24		21-58-16	ALL
	44		W0510	523	24		21-51-11	ALL
	45		W0510	524	24		21-51-11	ALL
	46		W0510	525	24		21-51-11	ALL
	47		W0510	526	24		21-51-11	ALL
	48		W0510	527	24		21-51-11	ALL
	49		W0510	528	24		21-51-11	ALL
	50		W0510	529	24		21-51-11	ALL
	51		W0510	530	24		21-51-11	ALL
	52		W0510	531	24		21-51-11	ALL
	53		W0510	532	24		21-51-11	ALL
	54		W0510	533	24		21-51-11	050, 150-154, 275-276
	54		W0510	533	24		SPARE	051-099, 155-199, 277-299
	55		W0510	534	24		21-51-11	ALL
D06732P		AE0305/ /		PLUG-E1-5				ALL
	1		W0109	028	24		21-61-51	ALL
	2		W0109	220B	24		21-61-51	ALL
	3		W0109	220R	24		21-61-51	ALL
	4		W0109	301B	24		21-61-61	ALL
	5		W0109	301R	24		21-61-61	ALL
	6		W0109	301Y	24		21-61-61	ALL
	7		W0109	222B	24		21-61-61	ALL
	8		W0109	222R	24		21-61-61	ALL
	9		W0109	224B	24		21-61-61	ALL
	10		W0109	224R	24		21-61-61	ALL
	11		W0109	225B	24		21-61-71	ALL
	12		W0109	225R	24		21-61-71	ALL
	13		W0109	226R	24		21-61-71	ALL
	14		W0109	226B	24		21-61-71	ALL
	15		W0109	303B	24		21-61-71	ALL

HOOKUP LIST

D280T132

91-21-51

Section D06700

Page 2

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06732P		AE0305/ /		PLUG-E1-5 (continued)				ALL
	16		W0109	303R	24		21-61-71	ALL
	17		W0109	303Y	24		21-61-71	ALL
	18		W0109	038	24		21-61-71	ALL
	19		W0109	031	24		21-61-61	ALL
	20		W0109	041	24		21-26-31	ALL
	21		W0109	042	24		21-26-31	ALL
	22		W0109	057	24		21-28-11	ALL
	23	UNUSED						ALL
	24		W0109	165	24		21-25-11	ALL
	25		W0109	166	24		21-51-11	ALL
	26		W0109	079	24		21-51-11	ALL
	27		W0109	080	24		21-51-11	ALL
	28	UNUSED						ALL
	29		W0109	069	24		21-43-11	ALL
	30		W0109	067	24		21-43-11	ALL
	31		W0109	156	24		21-43-11	ALL
	32		W0109	117	24		21-51-11	ALL
	33		W0109	118	24		21-51-11	ALL
	34		W0109	119	24		21-51-11	ALL
	35		W0109	120	24		21-51-11	ALL
	36		W0109	121	24		21-51-11	ALL
	37		W0109	122	24		21-51-11	ALL
	38		W0109	123	22		21-51-11	ALL
	39		W0109	128	24		21-51-11	ALL
	40		W0109	129	24		21-51-11	ALL
	41		W0109	130	24		21-51-11	ALL
	42		W0109	131	24		21-51-11	ALL
	43		W0109	132	24		21-51-11	ALL
	44		W0109	136	24		21-51-11	ALL
	45		W0109	137	24		21-51-11	ALL
	46		W0109	138	24		21-51-11	ALL
	47		W0109	139	24		21-51-11	ALL
	48		W0109	140	24		21-51-11	ALL
	49		W0109	141	24		21-51-11	ALL
	50		W0109	142	24		21-51-11	ALL
	51		W0109	145	24		21-51-11	ALL
	52		W0109	146	24		21-51-11	ALL
	53		W0109	147	24		21-51-11	ALL
	54		W0109	148	24		21-51-11	050, 150-154, 275-276
	54	UNUSED						051-099, 155-199, 277-299

HOOKUP LIST

D280T132

91-21-51

Section D06700

Page 3

Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06732P		AE0305/ /		PLUG-E1-5 (continued)				ALL
	55		W0109	149	24		21-51-11	ALL
	DED		W0109	028Z			21-61-51	ALL
	DED		W0109	123Z			21-51-11	ALL
D06734J		355/125/L38		RCPT-E1-5				ALL
	1		W0942	502	24		SPARE	ALL
	2		W0942	503	24		21-61-51	ALL
	3		W0942	229B	24		21-61-51	ALL
	4		W0942	229R	24		21-61-51	ALL
	5		W0942	230B	24		21-61-51	ALL
	6		W0942	230R	24		21-61-51	ALL
	7		W0942	231B	24		21-61-51	ALL
	8		W0942	231R	24		21-61-51	ALL
	9		W0942	232B	24		21-61-51	ALL
	10		W0942	232R	24		21-61-51	ALL
	11		W0942	233B	24		21-61-51	ALL
	12		W0942	233R	24		21-61-51	ALL
	13		W0942	228B	24		21-61-51	ALL
	14		W0942	228R	24		21-61-51	ALL
	15		W0942	505	24		21-61-61	ALL
	16		W0942	325Y	24		21-61-61	ALL
	17		W0942	325R	24		21-61-61	ALL
	18		W0942	325B	24		21-61-61	ALL
	19		W0942	326R	24		21-61-71	ALL
	20		W0942	326B	24		21-61-71	ALL
	21		W0942	326Y	24		21-61-71	ALL
	22		W0942	509	24		21-61-71	ALL
	23		W0942	510	24		21-61-71	ALL
	24		W0942	511	24		21-61-71	ALL
	25		W0942	512	24		21-26-31	ALL
	26		W0942	513	24		21-26-31	ALL
	27		W0942	514	24		21-26-31	ALL
	28		W0942	520	24		21-26-31	ALL
	29		W0942	530	24		21-28-11	ALL
	30		W0942	529	24		21-28-11	ALL
	31		W0942	528	24		21-28-11	ALL
	32		W0942	527	24		21-28-11	ALL
	33		W0942	521	24		21-28-11	ALL
	34		W0942	522	24		21-28-11	ALL
	35		W0942	523	24		21-28-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D06700

Page 4

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06734J		355/125/L38		RCPT-E1-5 (continued)				ALL
	36		W0942	524	24		21-28-11	ALL
	37		W0942	525	24		21-28-11	ALL
	38		W0942	619	24		21-26-31	ALL
	39		W0942	235R	24		21-28-11	ALL
	40		W0942	235B	24		21-28-11	ALL
	41		W0942	137	24		21-51-11	050, 150-154, 275-276
	41		W0942	137	24		SPARE	051-099, 155-199, 277-299
	42		W0942	140	24		21-51-11	ALL
	43		W0942	139	24		21-28-11	050-099, 155-199, 277-299
	43		W0942	139	24		21-51-11	150-154, 275-276
	44		W0942	138	24		21-51-11	ALL
	45		W0942	081	24		21-51-11	ALL
	46		W0942	620	22		21-26-31	ALL
	47		W0942	565	24		21-58-12	ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50		W0942	552	24		21-61-81	ALL
	51		W0942	541	24		21-43-11	ALL
	52		W0942	542	24		21-43-11	ALL
	53		W0942	543	24		21-43-11	ALL
	54		W0942	544	24		21-43-11	ALL
	55		W0942	545	24		21-43-11	ALL
D06734P		AE0305/ /		PLUG-E1-5				ALL
	1	UNUSED						ALL
	2		W0109	077	24		21-51-11	ALL
	3		W0109	214B	24		21-61-51	ALL
	4		W0109	214R	24		21-61-51	ALL
	5		W0109	215B	24		21-61-51	ALL
	6		W0109	215R	24		21-61-51	ALL
	7		W0109	216B	24		21-61-51	ALL
	8		W0109	216R	24		21-61-51	ALL
	9		W0109	217B	24		21-61-51	ALL
	10		W0109	217R	24		21-61-51	ALL
	11		W0109	218B	24		21-61-51	ALL
	12		W0109	218R	24		21-61-51	ALL
	13		W0109	219B	24		21-61-51	ALL
	14		W0109	219R	24		21-61-51	ALL
	15		W0109	031	24		21-61-61	ALL
	16		W0109	302Y	24		21-61-61	ALL

HOOKUP LIST

D280T132

91-21-51

Section D06700

Page 5

Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06734P		AE0305/ /		PLUG-E1-5 (continued)				ALL
	17		W0109	302R	24		21-61-61	ALL
	18		W0109	302B	24		21-61-61	ALL
	19		W0109	304R	24		21-61-71	ALL
	20		W0109	304B	24		21-61-71	ALL
	21		W0109	304Y	24		21-61-71	ALL
	22		W0109	038	24		21-61-71	ALL
	23		W0109	039	24		21-61-71	ALL
	24		W0109	040	24		21-61-71	ALL
	25		W0109	043	24		21-26-31	ALL
	26		W0109	044	24		21-26-31	ALL
	27		W0109	045	24		21-26-31	ALL
	28		W0109	046	24		21-26-31	ALL
	29		W0109	047	24		21-28-11	ALL
	30		W0109	048	24		21-28-11	ALL
	31		W0109	049	24		21-28-11	ALL
	32		W0109	050	24		21-28-11	ALL
	33		W0109	051	24		21-28-11	ALL
	34		W0109	054	24		21-28-11	ALL
	35		W0109	058	24		21-28-11	ALL
	36		W0109	059	24		21-28-11	ALL
	37		W0109	060	24		21-28-11	ALL
	38		W0109	619	24		21-26-31	ALL
	39		W0109	228R	24		21-28-11	ALL
	40		W0109	228B	24		21-28-11	ALL
	41		W0109	084	24		21-51-11	050, 150-154, 275-276
	41	UNUSED						051-099, 155-199, 277-299
	42		W0109	086	24		21-51-11	ALL
	43		W0109	076	24		21-28-11	ALL
	44		W0109	085	24		21-51-11	ALL
	45		W0109	099	24		21-51-11	ALL
	46		W0109	620	22		21-26-31	ALL
	47		W0109	167	24		21-51-11	ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50		W0109	078	24		21-51-11	ALL
	51		W0109	153	24		21-43-11	ALL
	52		W0109	061	24		21-43-11	ALL
	53		W0109	062	24		21-43-11	ALL
	54		W0109	063	24		21-43-11	ALL
	55		W0109	066	24		21-43-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D06700

Page 6

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06736J		AP1005/ /		RCPT				050-099
D06736J		AP1005/ /		RECP				150-199
	1		W1108	152	24		33-21-12	050-099, 150-199
	2		W1108	153	24		33-21-12	050-099, 150-199
	3		W1108	192	24		33-21-12	050-099, 150-199
	4		W1108	003	24		33-21-12	050-099, 150-199
	5		W1108	199	24		33-21-12	050-099, 150-199
	6		W1108	197	24		33-21-12	050-099, 150-199
	7		W1108	190	24		33-21-12	050-099, 150-199
	8		W1108	188	24		33-21-12	050-099, 150-199
	9		W1108	632	22		33-22-42	050-099, 150-199
	10		W1108	633	22		33-22-42	050-099, 150-199
	11		W1108	196	24		33-21-12	050-099, 150-199
	12		W1108	151	24		33-21-12	050-099, 150-199
	13		W1108	198	24		33-21-12	050-099, 150-199
	14	UNUSED						050-099, 150-199
	15	UNUSED						050-099, 150-199
	16	UNUSED						050-099, 150-199
	17	UNUSED						050-099, 150-199
	18	UNUSED						050-099, 150-199
	19	UNUSED						050-099, 150-199
	20	UNUSED						050-099, 150-199
	21	UNUSED						050-099, 150-199
	22	UNUSED						050-099, 150-199
	23	UNUSED						050-099, 150-199
	24	UNUSED						050-099, 150-199
	25	UNUSED						050-099, 150-199
	26	UNUSED						050-099, 150-199
	27	UNUSED						050-099, 150-199
	28	UNUSED						050-099, 150-199
	29	UNUSED						050-099, 150-199
	30	UNUSED						050-099, 150-199
	31	UNUSED						050-099, 150-199
D06736P		AP1005/ /		PLUG				050-099, 150-199
	1		W0812	879	24		33-21-12	050-099
	1		W0812	879	20		33-21-12	150-199
	2		W0812	887	24		33-21-12	050-099
	2		W0812	887	20		33-21-12	150-199
	3		W0812	881	24		33-21-12	050-099
	3		W0812	881	20		33-21-12	150-199

HOOKUP LIST

D280T132

91-21-51

Section D06700

Page 7

Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06736P		AP1005/ /		PLUG (continued)				050-099, 150-199
	4		W0812	01K	24		33-21-12	050-099
	4		W0812	910	20		33-21-12	150-199
	5		W0812	883	24		33-21-12	050-099
	5		W0812	883	20		33-21-12	150-199
	6		W0812	884	24		33-21-12	050-099
	6		W0812	884	20		33-21-12	150-199
	7		W0812	885	24		33-21-12	050-099
	7		W0812	885	20		33-21-12	150-199
	8		W0812	886	24		33-21-12	050-099
	8		W0812	886	20		33-21-12	150-199
	9		W0812	896	20		33-22-42	050-099, 150-199
	10		W0812	897	20		33-22-42	050-099, 150-199
	11		W0812	898	24		33-21-12	050-099
	11		W0812	898	20		33-21-12	150-199
	12		W0812	899	24		33-21-12	050-099
	12		W0812	899	20		33-21-12	150-199
	13		W0812	895	24		33-21-12	050-099, 150-199
	14	UNUSED						050-099, 150-199
	15	UNUSED						050-099, 150-199
	16	UNUSED						050-099, 150-199
	17	UNUSED						050-099, 150-199
	18	UNUSED						050-099, 150-199
	19	UNUSED						050-099, 150-199
	20	UNUSED						050-099, 150-199
	21	UNUSED						050-099, 150-199
	22	UNUSED						050-099, 150-199
	23	UNUSED						050-099, 150-199
	24	UNUSED						050-099, 150-199
	25	UNUSED						050-099, 150-199
	26	UNUSED						050-099, 150-199
	27	UNUSED						050-099, 150-199
	28	UNUSED						050-099, 150-199
	29	UNUSED						050-099, 150-199
	30	UNUSED						050-099, 150-199
	31	UNUSED						050-099, 150-199
D06738J		411/285/R 38		RCPT				050-099
D06738J		411/285/R038		RECPT				150-199
	1		W1228	601	20		33-27-11	050-099, 150-199
	2		W1228	602	20		33-27-11	050-099, 150-199

HOOKUP LIST

D280T132

91-21-51

Section D06700

Page 8

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06738J		411/285/R 38		RCPT (continued)				050-099
D06738J		411/285/R038		RECPT (continued)				150-199
	3		W1228	609	20		33-27-11	050-099, 150-199
	4		W1228	610	20		33-27-11	050-099, 150-199
	5		W1228	604	20		33-27-11	050-099, 150-199
	6		W1228	605	20		33-27-11	050-099, 150-199
	7		W1228	606	20		33-27-11	050-099, 150-199
	8		W1228	611	20		33-27-11	050-099, 150-199
	9	UNUSED						050-099, 150-199
	10	UNUSED						050-099, 150-199
	11	UNUSED						050-099, 150-199
	12	UNUSED						050-099, 150-199
	DED		W1228	601Z			33-27-11	155-156, 166
	DED		W1228	604Z			33-27-11	155-156, 166
	DED		W1228	606Z			33-27-11	155-156, 166
	DED		W1228	609Z			33-27-11	155-156, 166
D06738P		411/285/R 38		PLUG-				050-099, 150-199
	1		W0123	034	20		33-27-11	050-099, 150-199
	2		W0123	032	20		33-27-11	050-099, 150-199
	3		W0123	033	20		33-27-11	050-099, 150-199
	4		W0123	035	20		33-27-11	050-099, 150-199
	5		W0123	041	20		33-27-11	050-099, 150-199
	6		W0123	044	20		33-27-11	050-099, 150-199
	7		W0123	049	20		33-27-11	050-099, 150-199
	8		W0123	054	20		33-27-11	050-099, 150-199
	9	UNUSED						050-099, 150-199
	10	UNUSED						050-099, 150-199
	11	UNUSED						050-099, 150-199
	12	UNUSED						050-099, 150-199
	DED		W0123	033Z			33-27-11	155-156, 166
	DED		W0123	034Z			33-27-11	155-156, 166
	DED		W0123	041Z			33-27-11	155-156, 166
	DED		W0123	049Z			33-27-11	155-156, 166
D06740J		411/285/L 38		RCPT				050-099
D06740J		411/285/L038		RECPT				150-199
	1		W1228	603	20		33-27-11	050-099, 150-199
	2		W1228	612	20		33-27-11	050-099, 150-199
	3		W1228	607	20		33-27-11	050-099, 150-199
	4		W1228	613	20		33-27-11	050-099, 150-199

HOOKUP LIST
D280T132

91-21-51
Section D06700
Page 9
Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06740J		411/285/L 38		RCPT (continued)				050-099
D06740J		411/285/L038		RECPT (continued)				150-199
	5		W1228	608	20		33-27-11	050-099, 150-199
	6		W1228	614	20		33-27-11	050-099, 150-199
	7		W1228	615	20		33-27-11	050-099, 150-199
	8		W1228	600	20		33-27-11	050-099, 150-199
	9	UNUSED						050-099, 150-199
	10	UNUSED						050-099, 150-199
	11	UNUSED						050-099, 150-199
	12	UNUSED						050-099, 150-199
	DED		W1228	600Z			33-27-11	155-156, 166
	DED		W1228	603Z			33-27-11	155-156, 166
	DED		W1228	608Z			33-27-11	155-156, 166
	DED		W1228	612Z			33-27-11	155-156, 166
D06740P		411/285/L038		PLUG-				050-099, 150-199
	1		W0157	029	20		33-27-11	050-099, 150-199
	2		W0157	030	20		33-27-11	050-099, 150-199
	3		W0157	033	20		33-27-11	050-099, 150-199
	4		W0157	036	20		33-27-11	050-099, 150-199
	5		W0157	044	20		33-27-11	050-099, 150-199
	6		W0157	052	20		33-27-11	050-099, 150-199
	7		W0157	058	20		33-27-11	050-099, 150-199
	8		W0157	028	20		33-27-11	050-099, 150-199
	9	UNUSED						050-099, 150-199
	10	UNUSED						050-099, 150-199
	11	UNUSED						050-099, 150-199
	12	UNUSED						050-099, 150-199
	DED		W0157	028Z			33-27-11	155-156, 166
	DED		W0157	029Z			33-27-11	155-156, 166
	DED		W0157	030Z			33-27-11	155-156, 166
	DED		W0157	044Z			33-27-11	155-156, 166
D06742J		AP1003/ /		RECP				050-099, 150-199
	1		W1108	150	20		38-32-12	050-099, 150-156, 162-165
	1		W1108	150	20		38-32-16	157, 166-199
	2	DL	W1108	605	18		26-13-11	050-099
	2	DK	W1108	605	18		26-13-11	150-199
	3	UNUSED						050-099
	3		W1108	613	22		33-26-11	150-199
	4	UNUSED						050-099

HOOKUP LIST

D280T132

91-21-51

Section D06700

Page 10

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06742J		AP1003/ /		RECP (continued)				050-099, 150-199
	4		W1108	614	22		33-26-11	150-199
	5	UNUSED						050-099
	5		W1108	615	22		33-26-11	150-199
	6	UNUSED						050-099
	6		W1108	617	22		33-26-11	150-199
	7		W1108	601	20		38-32-12	050-099, 150-156, 162-165
	7		W1108	601	20		38-32-16	157, 166-199
	8		W1108	085	22		21-66-31	050-099, 150, 152-199
	8	UNUSED						151
	9		W1108	533	22		21-66-31	050-099, 150, 152-199
	9	UNUSED						151
	10		W1108	535	22		21-66-41	050-099, 150, 152-199
	10	UNUSED						151
	11		W1108	534	22		21-66-41	050-099, 150, 152-199
	11	UNUSED						151
	12	UNUSED						050-099, 150-199
	13	UNUSED						050-099, 150-199
	14	UNUSED						050-099, 150-199
	15	UNUSED						050-099
	15		W1108	043	22		33-26-11	150-199
	16		W1108	521	20		26-13-11	050-099
	16		W1108	607	20		26-13-11	150-199
	17	UNUSED						050-099
	17		W1108	608	20		26-13-11	150-199
	18		W1108	607	20		26-13-11	050-099
	18		W1108	609	20		26-13-11	150-199
	19		W1108	522	20		26-13-11	050-099
	19		W1108	610	20		26-13-11	150-199
	20		W1108	523	20		26-13-11	050-099
	20		W1108	611	20		26-13-11	150-199
	21	UNUSED						050-099, 150-199
	22	UNUSED						050-099, 150-199
	23	UNUSED						050-099, 150-199
	24		W1108	520	20		26-13-11	050-099
	24		W1108	612	20		26-13-11	150-199
	25	UNUSED						050-099, 150-199
	26	UNUSED						050-099, 150-199
	27	UNUSED						050-099, 150-199
	28	UNUSED						050-099, 150-199
	29		W1108	606	20		26-13-11	050-099, 150-199

HOOKUP LIST
D280T132

91-21-51
Section D06700
Page 11
Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06742J		AP1003/ /		RECP (continued)				050-099, 150-199
	30	UNUSED						050-099, 150-199
	31	UNUSED						050-099
	31		W1108	618	22		33-26-11	150-199
D06742P		AP1003/ /		PLUG-P25				050-099, 150-199
	1		W0828	603	22		38-32-12	050-099
	1		W0828	603	20		38-32-12	150-156, 162-165
	1		W0828	603	20		38-32-16	157, 166-199
	2	DL	W0828	133	18		26-13-11	050-099, 150-199
	3	UNUSED						050-099
	3		W0828	156	20		33-26-11	150-199
	4	UNUSED						050-099
	4		W0828	105	20		33-26-11	150-199
	5	UNUSED						050-099
	5		W0828	106	20		33-26-11	150-199
	6	UNUSED						050-099
	6		W0828	099	22		33-26-11	150-199
	7	DL	W0828	130	18		38-32-12	050-099, 150-156, 162-165
	7	DL	W0828	130	18		38-32-16	157, 166-199
	8		W0828	612	22		21-66-31	050-099, 150, 152-199
	8	UNUSED						151
	9		W0828	613	22		21-66-31	050-099, 150, 152-199
	9	UNUSED						151
	10		W0828	615	22		21-66-41	050-099, 150, 152-199
	10	UNUSED						151
	11		W0828	614	22		21-66-41	050-099, 150, 152-199
	11	UNUSED						151
	12	UNUSED						050-099, 150-199
	13	UNUSED						050-099, 150-199
	14	UNUSED						050-099, 150-199
	15	UNUSED						050-099
	15		W0828	022	20		33-26-11	150-199
	16		W0828	137	20		26-13-11	050-099, 150-199
	17	UNUSED						050-099
	17		W0828	138	20		26-13-11	150-199
	18		W0828	139	20		26-13-11	050-099, 150-199
	19		W0828	148	20		26-13-11	050-099, 150-199
	20		W0828	150	20		26-13-11	050-099, 150-199
	21	UNUSED						050-099, 150-199
	22	UNUSED						050-099, 150-199

HOOKUP LIST

D280T132

91-21-51

Section D06700

Page 12

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06742P		AP1003/ /		PLUG-P25 (continued)				050-099, 150-199
	23	UNUSED						050-099, 150-199
	24		W0828	152	20		26-13-11	050-099, 150-199
	25	UNUSED						050-099, 150-199
	26	UNUSED						050-099, 150-199
	27	UNUSED						050-099, 150-199
	28	UNUSED						050-099, 150-199
	29		W0828	134	20		26-13-11	050-099, 150-199
	30	UNUSED						050-099, 150-199
	31	UNUSED						050-099
	31		W0828	021	22		33-26-11	150-199
D06752J		AE0305/ /		RCPT-E1-5				ALL
	1		W0510	308B	24		21-61-81	ALL
	2		W0510	308R	24		21-61-81	ALL
	3		W0510	308Y	24		21-61-81	ALL
	4		W0510	536	24		21-61-81	ALL
	5		W0510	555	22		21-66-21	050-099, 162-199
	5	UNUSED						150-157, 275-299
	6		W0510	140	24		21-53-11	ALL
	7		W0510	556	22		21-66-31	050-099, 150, 152-199
	7	UNUSED						151, 275-299
	8		W0510	557	22		21-66-41	050-099, 150, 152-199
	8	UNUSED						151, 275-299
	9		W0510	551	24		73-21-15	ALL
	10		W0510	550	22		21-66-11	050-099, 162-199
	10	UNUSED						150-157, 275-299
	11		W0510	552	22		21-66-11	050-099, 162-199
	11	UNUSED						150-157, 275-299
	12		W0510	553	22		21-66-11	050-099, 162-199
	12	UNUSED						150-157, 275-299
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D06700

Page 13

Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06752J		AE0305/ /		RCPT-E1-5 (continued)				ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D06752P		AE0305/ /		PLUG-E1-5				ALL
	1		W0109	305B	24		21-61-81	ALL
	2		W0109	305R	24		21-61-81	ALL
	3		W0109	305Y	24		21-61-81	ALL
	4		W0109	162	24		21-61-81	ALL
	5		W0109	522	22		21-66-21	050-099, 162-199
	5	UNUSED						150-157, 275-299
	6		W0109	168	24		21-53-11	ALL
	7		W0109	521	22		21-66-31	050-099, 150, 152-199
	7	UNUSED						151, 275-299
	8	UNUSED						050-099, 151, 275-299
	8		W0109	523	22		21-66-41	150, 152-199
	9		W0109	195	24		73-21-15	ALL
	10		W0109	517	22		21-66-11	050-099, 162-199
	10	UNUSED						150-157, 275-299
	11		W0109	518	22		21-66-11	050-099, 162-199
	11	UNUSED						150-157, 275-299
	12		W0109	519	22		21-66-11	050-099, 162-199
	12	UNUSED						150-157, 275-299
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D06754J		355/125/L38		RECP-E1-5				ALL
	1		W0942	237B	24		21-61-81	ALL
	2		W0942	237R	24		21-61-81	ALL
	3		W0942	238R	24		21-61-81	ALL
	4		W0942	238B	24		21-61-81	ALL

HOOKUP LIST

D280T132

91-21-51

Section D06700

Page 14

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06754J		355/125/L38		RECP-E1-5 (continued)				ALL
	5		W0942	319R	24		21-61-81	ALL
	6		W0942	319B	24		21-61-81	ALL
	7		W0942	319Y	24		21-61-81	ALL
	8		W0942	556	24		21-61-81	ALL
	9	UNUSED						ALL
	10		W0942	554	24		21-61-81	ALL
	11		W0942	555	24		21-61-81	ALL
	12		W0942	236R	24		21-61-81	ALL
	13		W0942	236B	24		21-61-81	ALL
	14		W0942	569	24		21-43-11	ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23		W0942	241R	22		21-61-81	050-099, 151-199, 275-299
	23	UNUSED						150
	24		W0942	241B	22		21-61-81	050-099, 151-199, 275-299
	24	UNUSED						150
D06754P		AE0305/ /		PLUG-E1-5				ALL
	1		W0109	257B	22		21-61-81	050-099, 151-199, 275-299
	1		W0109	229B	24		21-61-81	150
	2		W0109	257R	22		21-61-81	050-099, 151-199, 275-299
	2		W0109	229R	24		21-61-81	150
	3		W0109	230R	24		21-61-81	ALL
	4		W0109	230B	24		21-61-81	ALL
	5		W0109	306R	24		21-61-81	ALL
	6		W0109	306B	24		21-61-81	ALL
	7		W0109	306Y	24		21-61-81	ALL
	8		W0109	162	24		21-61-81	ALL
	9	UNUSED						ALL
	10		W0109	160	24		21-61-81	ALL
	11		W0109	161	24		21-61-81	ALL
	12		W0109	232R	24		21-61-81	ALL
	13		W0109	232B	24		21-61-81	ALL
	14		W0109	155	24		21-43-11	ALL

HOOKUP LIST
D280T132

91-21-51
Section D06700
Page 15
Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06754P		AE0305/ /		PLUG-E1-5 (continued)				ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23		W0109	256R	22		21-61-81	050-099, 151-199, 275-299
	23	UNUSED						150
	24		W0109	256B	22		21-61-81	050-099, 151-199, 275-299
	24	UNUSED						150
D06756J		AE0305/ /		PLUG-E1-1				050-099, 150-199
	1		W0602	241B	20		32-45-13	050-099, 150-199
	2		W0602	241R	20		32-45-13	050-099, 150-199
	3		W0602	241Z			32-45-13	050-099, 150-199
	4		W0602	242B	20		32-45-13	050-099, 150-199
	5		W0602	242R	20		32-45-13	050-099, 150-199
	6		W0602	242Z			32-45-13	050-099, 150-199
	7		W0602	243B	20		32-45-13	050-099, 150-199
	8		W0602	243R	20		32-45-13	050-099, 150-199
	9		W0602	243Z			32-45-13	050-099, 150-199
	10		W0602	244B	20		32-45-13	050-099, 150-199
	11		W0602	244R	20		32-45-13	050-099, 150-199
	12		W0602	244Z			32-45-13	050-099, 150-199
	13	UNUSED						050-099, 150-199
	14	UNUSED						050-099, 150-199
	15	UNUSED						050-099, 150-199
	16	UNUSED						050-099, 150-199
	17	UNUSED						050-099, 150-199
	18	UNUSED						050-099, 150-199
	19	UNUSED						050-099, 150-199
	20	UNUSED						050-099, 150-199
	21	UNUSED						050-099, 150-199
	22	UNUSED						050-099, 150-199
	23	UNUSED						050-099, 150-199
	24	UNUSED						050-099, 150-199

HOOKUP LIST

D280T132

91-21-51

Section D06700

Page 16

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06756P		AE0305/ /		PLUG-E1-1				050-099, 150-199
	1		W0121	241B	24		32-45-13	050-099, 150-199
	2		W0121	241R	24		32-45-13	050-099, 150-199
	3		W0121	241Z			32-45-13	050-099, 150-199
	4		W0121	242B	24		32-45-13	050-099, 150-199
	5		W0121	242R	24		32-45-13	050-099, 150-199
	6		W0121	242Z			32-45-13	050-099, 150-199
	7		W0121	243B	24		32-45-13	050-099, 150-199
	8		W0121	243R	24		32-45-13	050-099, 150-199
	9		W0121	243Z			32-45-13	050-099, 150-199
	10		W0121	244B	24		32-45-13	050-099, 150-199
	11		W0121	244R	24		32-45-13	050-099, 150-199
	12		W0121	244Z			32-45-13	050-099, 150-199
	13	UNUSED						050-099, 150-199
	14	UNUSED						050-099, 150-199
	15	UNUSED						050-099, 150-199
	16	UNUSED						050-099, 150-199
	17	UNUSED						050-099, 150-199
	18	UNUSED						050-099, 150-199
	19	UNUSED						050-099, 150-199
	20	UNUSED						050-099, 150-199
	21	UNUSED						050-099, 150-199
	22	UNUSED						050-099, 150-199
	23	UNUSED						050-099, 150-199
	24	UNUSED						050-099, 150-199

HOOKUP LIST

D280T132

91-21-51

Section D06700
Page 17 End
Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06802J		AE0306/ /		RCPT- E2-6				275-299
	1		W0572	663	22		32-45-11	275-299
	2		W0572	664	22		32-45-11	275-299
	3		W0572	223R	20		32-45-12	275-299
	4		W0572	223B	20		32-45-12	275-299
	5		W0572	223Z			32-45-12	275-299
	6		W0572	224R	20		32-45-12	275-299
	7		W0572	224B	20		32-45-12	275-299
	8		W0572	224Z			32-45-12	275-299
	9	UNUSED						275-299
	10	UNUSED						275-299
	11	UNUSED						275-299
	12	UNUSED						275-299
	13	UNUSED						275-299
	14	UNUSED						275-299
	15	UNUSED						275-299
	16	UNUSED						275-299
	17	UNUSED						275-299
	18	UNUSED						275-299
	19	UNUSED						275-299
	20	UNUSED						275-299
	21	UNUSED						275-299
	22	UNUSED						275-299
	23	UNUSED						275-299
	24	UNUSED						275-299
	25	UNUSED						275-299
	26	UNUSED						275-299
	27	UNUSED						275-299
	28	UNUSED						275-299
	29	UNUSED						275-299
	30	UNUSED						275-299
	31	UNUSED						275-299
D06802P		AE0306/ /		PLUG-E2-6				275-299
	1		W0183	068	24		32-45-11	275-299
	2		W0183	069	24		32-45-11	275-299
	3		W0183	235R	24		32-45-12	275-299
	4		W0183	235B	24		32-45-12	275-299
	5		W0183	235Z			32-45-12	275-299
	6		W0183	236R	24		32-45-12	275-299
	7		W0183	236B	24		32-45-12	275-299

HOOKUP LIST

D280T132

91-21-51

Section D06800

Page 1

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06802P		AE0306/ /		PLUG-E2-6 (continued)				275-299
	8		W0183	236Z			32-45-12	275-299
	9	UNUSED						275-299
	10	UNUSED						275-299
	11	UNUSED						275-299
	12	UNUSED						275-299
	13	UNUSED						275-299
	14	UNUSED						275-299
	15	UNUSED						275-299
	16	UNUSED						275-299
	17	UNUSED						275-299
	18	UNUSED						275-299
	19	UNUSED						275-299
	20	UNUSED						275-299
	21	UNUSED						275-299
	22	UNUSED						275-299
	23	UNUSED						275-299
	24	UNUSED						275-299
	25	UNUSED						275-299
	26	UNUSED						275-299
	27	UNUSED						275-299
	28	UNUSED						275-299
	29	UNUSED						275-299
	30	UNUSED						275-299
	31	UNUSED						275-299
D06804J		AE0307/ /		REPT-E2-6				275-299
	1		W1287	247R	24		32-45-11	275-299
	2		W1287	247B	24		32-45-11	275-299
	3		W1287	247Z			32-45-11	275-299
	4	UNUSED						275-299
	5	UNUSED						275-299
	6	UNUSED						275-299
	7	UNUSED						275-299
	8	UNUSED						275-299
	9	UNUSED						275-299
	10	UNUSED						275-299
	11	UNUSED						275-299
	12	UNUSED						275-299
	13	UNUSED						275-299
	14	UNUSED						275-299

HOOKUP LIST
D280T132

91-21-51
Section D06800
Page 2
Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06804J		AE0307/ /		REPT-E2-6 (continued)				275-299
	15	UNUSED						275-299
	16	UNUSED						275-299
	17	UNUSED						275-299
	18	UNUSED						275-299
	19	UNUSED						275-299
	20	UNUSED						275-299
	21	UNUSED						275-299
	22	UNUSED						275-299
	23	UNUSED						275-299
	24	UNUSED						275-299
	25	UNUSED						275-299
	26	UNUSED						275-299
	27	UNUSED						275-299
	28	UNUSED						275-299
	29	UNUSED						275-299
	30	UNUSED						275-299
	31	UNUSED						275-299
D06804P		AE0307/ /		PLUG-E2-6				275-299
	1		W0183	234R	24		32-45-11	275-299
	2		W0183	234B	24		32-45-11	275-299
	3		W0183	234Z			32-45-11	275-299
	4	UNUSED						275-299
	5	UNUSED						275-299
	6	UNUSED						275-299
	7	UNUSED						275-299
	8	UNUSED						275-299
	9	UNUSED						275-299
	10	UNUSED						275-299
	11	UNUSED						275-299
	12	UNUSED						275-299
	13	UNUSED						275-299
	14	UNUSED						275-299
	15	UNUSED						275-299
	16	UNUSED						275-299
	17	UNUSED						275-299
	18	UNUSED						275-299
	19	UNUSED						275-299
	20	UNUSED						275-299
	21	UNUSED						275-299

HOOKUP LIST

D280T132

91-21-51

Section D06800

Page 3

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06804P		AE0307/ /		PLUG-E2-6 (continued)				275-299
	22	UNUSED						275-299
	23	UNUSED						275-299
	24	UNUSED						275-299
	25	UNUSED						275-299
	26	UNUSED						275-299
	27	UNUSED						275-299
	28	UNUSED						275-299
	29	UNUSED						275-299
	30	UNUSED						275-299
	31	UNUSED						275-299
D06806J		AE0306/ /		RCPT-E2-6				275-299
	1		W0602	241B	20		32-45-13	275-299
	2		W0602	241R	20		32-45-13	275-299
	3		W0602	241Z			32-45-13	275-299
	4		W0602	242B	20		32-45-13	275-299
	5		W0602	242R	20		32-45-13	275-299
	6		W0602	242Z			32-45-13	275-299
	7		W0602	243B	20		32-45-13	275-299
	8		W0602	243R	20		32-45-13	275-299
	9		W0602	243Z			32-45-13	275-299
	10		W0602	244B	20		32-45-13	275-299
	11		W0602	244R	20		32-45-13	275-299
	12		W0602	244Z			32-45-13	275-299
	13	UNUSED						275-299
	14	UNUSED						275-299
	15	UNUSED						275-299
	16	UNUSED						275-299
	17	UNUSED						275-299
	18	UNUSED						275-299
	19	UNUSED						275-299
	20	UNUSED						275-299
	21	UNUSED						275-299
	22	UNUSED						275-299
	23	UNUSED						275-299
	24	UNUSED						275-299
	25	UNUSED						275-299
	26	UNUSED						275-299
	27	UNUSED						275-299
	28	UNUSED						275-299

HOOKUP LIST

D280T132

91-21-51

Section D06800

Page 4

Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06806J		AE0306/ /		RCPT-E2-6 (continued)				275-299
	29	UNUSED						275-299
	30	UNUSED						275-299
	31	UNUSED						275-299
D06806P		AE0306/ /		PLUG-E2-6				275-299
	1		W0183	237B	24		32-45-13	275-299
	2		W0183	237R	24		32-45-13	275-299
	3		W0183	237Z			32-45-13	275-299
	4		W0183	238B	24		32-45-13	275-299
	5		W0183	238R	24		32-45-13	275-299
	6		W0183	238Z			32-45-13	275-299
	7		W0183	239B	24		32-45-13	275-299
	8		W0183	239R	24		32-45-13	275-299
	9		W0183	239Z			32-45-13	275-299
	10		W0183	240B	24		32-45-13	275-299
	11		W0183	240R	24		32-45-13	275-299
	12		W0183	240Z			32-45-13	275-299
	13	UNUSED						275-299
	14	UNUSED						275-299
	15	UNUSED						275-299
	16	UNUSED						275-299
	17	UNUSED						275-299
	18	UNUSED						275-299
	19	UNUSED						275-299
	20	UNUSED						275-299
	21	UNUSED						275-299
	22	UNUSED						275-299
	23	UNUSED						275-299
	24	UNUSED						275-299
	25	UNUSED						275-299
	26	UNUSED						275-299
	27	UNUSED						275-299
	28	UNUSED						275-299
	29	UNUSED						275-299
	30	UNUSED						275-299
	31	UNUSED						275-299
D06808J		AE0307/ /		RCPT-E2-6				275-278
D06808J		AE0307/ /		RCP-E2-6				280-299
	1		W0628	241B	20		32-45-14	275-299

HOOKUP LIST

D280T132

91-21-51

Section D06800

Page 5

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06808J		AE0307/ /		RCPT-E2-6 (continued)				275-278
D06808J		AE0307/ /		RCP-E2-6 (continued)				280-299
	2		W0628	241R	20		32-45-14	275-299
	3		W0628	241Z			32-45-14	275-299
	4		W0628	242B	20		32-45-14	275-299
	5		W0628	242R	20		32-45-14	275-299
	6		W0628	242Z			32-45-14	275-299
	7		W0628	243B	20		32-45-14	275-299
	8		W0628	243R	20		32-45-14	275-299
	9		W0628	243Z			32-45-14	275-299
	10		W0628	244B	20		32-45-14	275-299
	11		W0628	244R	20		32-45-14	275-299
	12		W0628	244Z			32-45-14	275-299
	13	UNUSED						275-299
	14	UNUSED						275-299
	15	UNUSED						275-299
	16	UNUSED						275-299
	17	UNUSED						275-299
	18	UNUSED						275-299
	19	UNUSED						275-299
	20	UNUSED						275-299
	21	UNUSED						275-299
	22	UNUSED						275-299
	23	UNUSED						275-299
	24	UNUSED						275-299
	25	UNUSED						275-299
	26	UNUSED						275-299
	27	UNUSED						275-299
	28	UNUSED						275-299
	29	UNUSED						275-299
	30	UNUSED						275-299
	31	UNUSED						275-299
D06808P		AE0307/ /		PLUG-E2-6				275-299
	1		W0183	241B	24		32-45-14	275-299
	2		W0183	241R	24		32-45-14	275-299
	3		W0183	241Z			32-45-14	275-299
	4		W0183	242B	24		32-45-14	275-299
	5		W0183	242R	24		32-45-14	275-299
	6		W0183	242Z			32-45-14	275-299
	7		W0183	243B	24		32-45-14	275-299

HOOKUP LIST

D280T132

91-21-51

Section D06800

Page 6

Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06808P		AE0307/ /		PLUG-E2-6 (continued)				275-299
	8		W0183	243R	24		32-45-14	275-299
	9		W0183	243Z			32-45-14	275-299
	10		W0183	244B	24		32-45-14	275-299
	11		W0183	244R	24		32-45-14	275-299
	12		W0183	244Z			32-45-14	275-299
	13	UNUSED						275-299
	14	UNUSED						275-299
	15	UNUSED						275-299
	16	UNUSED						275-299
	17	UNUSED						275-299
	18	UNUSED						275-299
	19	UNUSED						275-299
	20	UNUSED						275-299
	21	UNUSED						275-299
	22	UNUSED						275-299
	23	UNUSED						275-299
	24	UNUSED						275-299
	25	UNUSED						275-299
	26	UNUSED						275-299
	27	UNUSED						275-299
	28	UNUSED						275-299
	29	UNUSED						275-299
	30	UNUSED						275-299
	31	UNUSED						275-299
D06810J		878/254/L090		RCPT				050-099, 155-199, 275-299
D06810J		872/245/L095		RCPT				150-154
	1		W1256	096	22		21-45-22	ALL
	2		W1256	097	20		21-45-22	ALL
	3	DK	W1256	098	18		21-45-22	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
D06810P		878/254/L090		PLUG				ALL
	1		W1398	001	20		21-45-22	ALL
	2		W1398	002	20		21-45-22	ALL
	3	DL	W1398	003	18		21-45-22	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D06800

Page 7

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06812J		916/245/L095		RCPT				150-154
D06812J		922/254/L090		RCPT				155-199, 275-299
	1		W1256	104	22		21-45-22	150-199, 275-299
	2		W1256	105	20		21-45-22	150-199, 275-299
	3	DK	W1256	106	18		21-45-22	150-199, 275-299
	4	UNUSED						150-199, 275-299
	5	UNUSED						150-199, 275-299
D06812P		922/254/L090		PLUG				150-199, 275-299
	1		W1498	001	20		21-45-22	150-199, 275-299
	2		W1498	002	20		21-45-22	150-199, 275-299
	3	DL	W1498	003	18		21-45-22	150-199, 275-299
	4	UNUSED						150-199, 275-299
	5	UNUSED						150-199, 275-299
D06814J		878/254/R090		RCPT				050-099, 155-199, 275-299
D06814J		872/245/R095		RCPT				150-154
	1		W1256	107	22		21-45-22	ALL
	2		W1256	108	20		21-45-22	ALL
	3	DK	W1256	109	18		21-45-22	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
D06814P		878/254/R090		PLUG				ALL
	1		W1400	001	20		21-45-22	ALL
	2		W1400	002	20		21-45-22	ALL
	3	DL	W1400	003	18		21-45-22	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
D06816J		916/245/R095		RCPT				150-154
D06816J		922/254/R090		RCPT				155-199, 275-299
	1		W1256	111	22		21-45-22	150-199, 275-299
	2		W1256	112	20		21-45-22	150-199, 275-299
	3	DK	W1256	113	18		21-45-22	150-199, 275-299
	4	UNUSED						150-199, 275-299
	5	UNUSED						150-199, 275-299
D06816P		922/254/R090		PLUG				150-199, 275-299
	1		W1500	001	20		21-45-22	150-199, 275-299

HOOKUP LIST
D280T132

91-21-51
Section D06800
Page 8
Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06816P		922/254/R090		PLUG (continued)				150-199, 275-299
	2		W1500	002	20		21-45-22	150-199, 275-299
	3	DL	W1500	003	18		21-45-22	150-199, 275-299
	4	UNUSED						150-199, 275-299
	5	UNUSED						150-199, 275-299
D06834J		1542/195/R009		RCPT-				275-299
	= 1		W0836	202B	20		33-51-16	275-299
D06834P		1542/195/R009		PLUG-				275-299
	= 1		W0836	A-A			33-51-16	275-299
D06836J		1542/195/R009		RCPT-				275-299
	= 1		W0836	202R	20		33-51-16	275-299
D06836P		1542/195/R009		PLUG-				275-299
	= 1		W0836	A-B			33-51-16	275-299
D06842J		1542/195/L009		RCPT-				275-299
	= 1		W0836	204B	20		33-51-16	275-299
D06842P		1542/195/L009		PLUG-				275-299
	= 1		W0836	A-E			33-51-16	275-299
D06844J		1542/195/L009		RCPT-				275-299
	= 1		W0836	204R	20		33-51-16	275-299
D06844P		1542/195/L009		PLUG-				275-299
	= 1		W0836	A-F			33-51-16	275-299
D06858J		654+90/283/R 53		RCPT				162-199
	= 1		W0834	078	22		33-22-21	162-199
D06858P		654+90/283/R053		PLUG-				162-199
	= 1		W1284	001	22		33-22-21	162-199
D06860J		654+90/283/R053		RCPT-				162-199
	= 1		W1284	003	22		33-22-21	162-199

HOOKUP LIST
D280T132

91-21-51
Section D06800
Page 9
Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06860P		654+90/283/R 53		PLUG				162-199
	= 1		W0834	079	20		33-22-21	162-199
D06880J		666/148/R 70		PLUG				050-099
	1	UNUSED						050-099
	2	UNUSED						050-099
	3	UNUSED						050-099
	4	UNUSED						050-099
	5	UNUSED						050-099
	6		W0640	001R	20		26-23-11	050-099
	7	UNUSED						050-099
	8	UNUSED						050-099
	9		W0640	002R	20		26-23-11	050-099
	10	UNUSED						050-099
	11	UNUSED						050-099
	12		W0640	003R	20		26-23-11	050-099
	13	UNUSED						050-099
	14	UNUSED						050-099
	15	UNUSED						050-099
	16	UNUSED						050-099
	17	UNUSED						050-099
	18	UNUSED						050-099
	19	UNUSED						050-099
	20	UNUSED						050-099
	21	UNUSED						050-099
	22	UNUSED						050-099
	23	UNUSED						050-099
	24	UNUSED						050-099
D06880P		666/148/R 70		PLUG-				050-099
	1	UNUSED						050-099
	2	UNUSED						050-099
	3	UNUSED						050-099
	4	UNUSED						050-099
	5	UNUSED						050-099
	6		W0614	099R	20		26-23-11	050-099
	7	UNUSED						050-099
	8	UNUSED						050-099
	9		W0614	093R	20		26-23-11	050-099
	10	UNUSED						050-099

HOOKUP LIST
D280T132

91-21-51
Section D06800
Page 10
Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06880P		666/148/R 70		PLUG- (continued)				050-099
	11	UNUSED						050-099
	12	UNUSED	W0614	096R	20		26-23-11	050-099
	13	UNUSED						050-099
	14	UNUSED						050-099
	15	UNUSED						050-099
	16	UNUSED						050-099
	17	UNUSED						050-099
	18	UNUSED						050-099
	19	UNUSED						050-099
	20	UNUSED						050-099
	21	UNUSED						050-099
	22	UNUSED						050-099
	23	UNUSED						050-099
	24	UNUSED						050-099
D06882J		658/169/R 81		PLUG				050-099
	1	UNUSED						050-099
	2	UNUSED						050-099
	3	UNUSED						050-099
	4	UNUSED						050-099
	5	UNUSED						050-099
	6	UNUSED						050-099
	7	UNUSED						050-099
	8	UNUSED	W0642	001R	20		26-23-12	050-099
	9	UNUSED						050-099
	10	UNUSED						050-099
	11	UNUSED						050-099
	12	UNUSED	W0642	002R	20		26-23-12	050-099
	13	UNUSED						050-099
	14	UNUSED						050-099
	15	UNUSED	W0642	003R	20		26-23-12	050-099
D06882P		658/169/R 81		PLUG-				050-099
	1	UNUSED						050-099
	2	UNUSED						050-099
	3	UNUSED						050-099
	4	UNUSED						050-099
	5	UNUSED						050-099
	6	UNUSED						050-099
	7	UNUSED						050-099

HOOKUP LIST
D280T132

91-21-51
Section D06800
Page 11
Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06882P		658/169/R 81		PLUG- (continued)				050-099
	8		W0606	099R	20		26-23-12	050-099
	9	UNUSED						050-099
	10	UNUSED						050-099
	11	UNUSED						050-099
	12		W0606	093R	20		26-23-12	050-099
	13	UNUSED						050-099
	14	UNUSED						050-099
	15		W0606	096R	20		26-23-12	050-099
D06884J		697/150/R 70		PLUG				050-099
	1	UNUSED						050-099
	2	UNUSED						050-099
	3	UNUSED						050-099
	4	UNUSED						050-099
	5		W0644	001R	20		26-23-12	050-099
	6	UNUSED						050-099
	7	UNUSED						050-099
	8		W0644	002R	20		26-23-12	050-099
	9	UNUSED						050-099
	10	UNUSED						050-099
	11		W0644	003R	20		26-23-12	050-099
	12	UNUSED						050-099
D06884P		697/150/R 70		PLUG-				050-099
	1	UNUSED						050-099
	2	UNUSED						050-099
	3	UNUSED						050-099
	4	UNUSED						050-099
	5		W0606	599R	20		26-23-12	050-099
	6	UNUSED						050-099
	7	UNUSED						050-099
	8		W0606	593R	20		26-23-12	050-099
	9	UNUSED						050-099
	10	UNUSED						050-099
	11		W0606	596R	20		26-23-12	050-099
	12	UNUSED						050-099
D06886J		699/155/R 68		PLUG				050-099
D06886J		654+122/154/R 68		PLUG				155-199, 275-299
	1	UNUSED						050-099, 155-199, 275-299

HOOKUP LIST
D280T132

91-21-51
Section D06800
Page 12
Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06886J		699/155/R 68		PLUG (continued)				050-099
D06886J		654+122/154/R 68		PLUG (continued)				155-199, 275-299
	2	UNUSED						050-099, 155-199, 275-299
	3		W0546	001R	20		26-21-11	050-099, 155-199, 275-299
	4	UNUSED						050-099, 155-199, 275-299
	5		W0546	002R	20		26-21-11	050-099, 155-199, 275-299
	6	UNUSED						050-099, 155-199, 275-299
	7		W0546	003R	20		26-21-11	050-099, 155-199, 275-299
D06886P		699/155/R 68		PLUG-				050-099
D06886P		654+122/154/R 68		PLUG-				150-199, 275-299
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W0614	091R	20		26-21-11	ALL
	4	UNUSED						ALL
	5		W0614	085R	20		26-21-11	ALL
	6	UNUSED						ALL
	7		W0614	088R	20		26-21-11	ALL
D06888J		721/165/R 68		PLUG				050-099
D06888J		670/165/R 68		PLUG				155-199, 275-299
	1	UNUSED						050-099, 155-199, 275-299
	2	UNUSED						050-099, 155-199, 275-299
	3	UNUSED						050-099, 155-199, 275-299
	4	UNUSED						050-099, 155-199, 275-299
	5	UNUSED						050-099, 155-199, 275-299
	6		W0548	001R	20		26-21-11	050-099, 155-199, 275-299
	7	UNUSED						050-099, 155-199, 275-299
	8	UNUSED						050-099, 155-199, 275-299
	9		W0548	002R	20		26-21-11	050-099, 155-199, 275-299
	10	UNUSED						050-099, 155-199, 275-299
	11	UNUSED						050-099, 155-199, 275-299
	12		W0548	003R	20		26-21-11	050-099, 155-199, 275-299
	13	UNUSED						050-099, 155-199, 275-299
	14	UNUSED						050-099, 155-199, 275-299
	15	UNUSED						050-099, 155-199, 275-299
	16	UNUSED						050-099, 155-199, 275-299
	17	UNUSED						050-099, 155-199, 275-299
	18	UNUSED						050-099, 155-199, 275-299
	19	UNUSED						050-099, 155-199, 275-299
	20	UNUSED						050-099, 155-199, 275-299

HOOKUP LIST

D280T132

91-21-51

Section D06800

Page 13

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06888J		721/165/R 68		PLUG (continued)				050-099
D06888J		670/165/R 68		PLUG (continued)				155-199, 275-299
	21	UNUSED						050-099, 155-199, 275-299
	22	UNUSED						050-099, 155-199, 275-299
	23	UNUSED						050-099, 155-199, 275-299
	24	UNUSED						050-099, 155-199, 275-299
D06888P		721/165/R 68		PLUG-				050-099
D06888P		676/165/R 68		PLUG-				150-154
D06888P		670/165/R 68		PLUG-				155-199, 275-299
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W0606	091R	20		26-21-11	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9		W0606	085R	20		26-21-11	ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12		W0606	088R	20		26-21-11	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D06890J		260/280/R 15		RCPT				050-099, 162-199
	1		W3000	014	20		23-34-15	050-099, 162-199
	2		W3000	013	20		23-34-15	050-099, 162-199
	3		W3000	004	20		35-21-14	050-099, 162-199
	4		W3000	005	20		35-21-14	050-099, 162-199
	5	UNUSED						050-099, 162-199

HOOKUP LIST
D280T132

91-21-51
Section D06800
Page 14
Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06890J		260/280/R 15		RCPT (continued)				050-099, 162-199
	6	UNUSED						050-099, 162-199
	7	UNUSED						050-099, 162-199
	8		W3000	001	22		33-24-13	050-099, 162-199
	9		W3000	002	22		33-24-13	050-099, 162-199
	10		W3000	003	20		33-24-13	050-099, 162-199
	11	UNUSED						050-099, 162-199
	12	UNUSED						050-099, 162-199
D06890P		260/280/R 15		PLUG				050-099, 162-199
	1		W3002	009	20		23-34-15	050-099, 162-199
	2		W3002	010	20		23-34-15	050-099, 162-199
	3		W3002	007	20		35-21-14	050-099, 162-199
	4		W3002	008	20		35-21-14	050-099, 162-199
	5	UNUSED						050-099, 162-199
	6	UNUSED						050-099, 162-199
	7	UNUSED						050-099, 162-199
	8		W3002	001	22		33-24-13	050-099, 162-199
	9		W3002	002	22		33-24-13	050-099, 162-199
	10		W3002	003	20		33-24-13	050-099, 162-199
	11	UNUSED						050-099, 162-199
	12	UNUSED						050-099, 162-199
D06892J		260/235/R 15		RCPT				050-099, 162-199
	1		W3004	006	20		23-34-15	050-099, 162-199
	2		W3004	007	20		23-34-15	050-099, 162-199
	3		W3004	004	20		35-21-14	050-099, 162-199
	4		W3004	005	20		35-21-14	050-099, 162-199
	5	UNUSED						050-099, 162-199
	6	UNUSED						050-099, 162-199
	7	UNUSED						050-099, 162-199
	8		W3004	001	22		33-24-13	050-099, 162-199
	9		W3004	002	22		33-24-13	050-099, 162-199
	10		W3004	003	20		33-24-13	050-099, 162-199
	11	UNUSED						050-099, 162-199
	12	UNUSED						050-099, 162-199
D06892P		260/235/R 15		PLUG				050-099, 162-199
	1		W3002	009	20		23-34-15	050-099, 162-199
	2		W3002	010	20		23-34-15	050-099, 162-199
	3		W3002	007	20		35-21-14	050-099, 162-199

HOOKUP LIST

D280T132

91-21-51

Section D06800

Page 15

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06892P		260/235/R 15		PLUG (continued)				050-099, 162-199
	4		W3002	008	20		35-21-14	050-099, 162-199
	5	UNUSED						050-099, 162-199
	6	UNUSED						050-099, 162-199
	7	UNUSED						050-099, 162-199
	8		W3002	004	22		33-24-13	050-099, 162-199
	9		W3002	005	22		33-24-13	050-099, 162-199
	10		W3002	006	20		33-24-13	050-099, 162-199
	11	UNUSED						050-099, 162-199
	12	UNUSED						050-099, 162-199
D06894J		0654+87/149/R071		PLUG				155-199, 275-299
	1	UNUSED						155-199, 275-299
	2	UNUSED						155-199, 275-299
	3	UNUSED						155-199, 275-299
	4	UNUSED						155-199, 275-299
	5		W0646	001R	20		26-23-11	155-199, 275-299
	6	UNUSED						155-199, 275-299
	7	UNUSED						155-199, 275-299
	8		W0646	002R	20		26-23-11	155-199, 275-299
	9	UNUSED						155-199, 275-299
	10	UNUSED						155-199, 275-299
	11		W0646	003R	20		26-23-11	155-199, 275-299
	12	UNUSED						155-199, 275-299
D06894P		654+87/148/R 70		PLUG-				150-199, 275-299
	1	UNUSED						150-199, 275-299
	2	UNUSED						150-199, 275-299
	3	UNUSED						150-199, 275-299
	4	UNUSED						150-199, 275-299
	5		W0614	099R	20		26-23-11	150-199, 275-299
	6	UNUSED						150-199, 275-299
	7	UNUSED						150-199, 275-299
	8		W0614	093R	20		26-23-11	150-199, 275-299
	9	UNUSED						150-199, 275-299
	10	UNUSED						150-199, 275-299
	11		W0614	096R	20		26-23-11	150-199, 275-299
	12	UNUSED						150-199, 275-299
D06896J		654+67/147/R 70		PLUG				155-199, 275-299
	1	UNUSED						155-199, 275-299

HOOKUP LIST
D280T132

91-21-51
Section D06800
Page 16
Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06896J		654+67/147/R 70		PLUG (continued)				155-199, 275-299
	2	UNUSED						155-199, 275-299
	3	UNUSED						155-199, 275-299
	4	UNUSED						155-199, 275-299
	5	UNUSED						155-199, 275-299
	6		W0648	001R	20		26-23-12	155-199, 275-299
	7	UNUSED						155-199, 275-299
	8	UNUSED						155-199, 275-299
	9		W0648	002R	20		26-23-12	155-199, 275-299
	10	UNUSED						155-199, 275-299
	11	UNUSED						155-199, 275-299
	12		W0648	003R	20		26-23-12	155-199, 275-299
	13	UNUSED						155-199, 275-299
	14	UNUSED						155-199, 275-299
	15	UNUSED						155-199, 275-299
	16	UNUSED						155-199, 275-299
	17	UNUSED						155-199, 275-299
	18	UNUSED						155-199, 275-299
	19	UNUSED						155-199, 275-299
	20	UNUSED						155-199, 275-299
	21	UNUSED						155-199, 275-299
	22	UNUSED						155-199, 275-299
	23	UNUSED						155-199, 275-299
	24	UNUSED						155-199, 275-299
D06896P		654+67/147/R 70		PLUG-				150-199, 275-299
	1	UNUSED						150-199, 275-299
	2	UNUSED						150-199, 275-299
	3	UNUSED						150-199, 275-299
	4	UNUSED						150-199, 275-299
	5	UNUSED						150-199, 275-299
	6		W0606	099R	20		26-23-12	150-199, 275-299
	7	UNUSED						150-199, 275-299
	8	UNUSED						150-199, 275-299
	9		W0606	093R	20		26-23-12	150-199, 275-299
	10	UNUSED						150-199, 275-299
	11	UNUSED						150-199, 275-299
	12		W0606	096R	20		26-23-12	150-199, 275-299
	13	UNUSED						150-199, 275-299
	14	UNUSED						150-199, 275-299
	15	UNUSED						150-199, 275-299

HOOKUP LIST
D280T132

91-21-51
Section D06800
Page 17
Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06896P		654+67/147/R 70		PLUG- (continued)				150-199, 275-299
	16	UNUSED						150-199, 275-299
	17	UNUSED						150-199, 275-299
	18	UNUSED						150-199, 275-299
	19	UNUSED						150-199, 275-299
	20	UNUSED						150-199, 275-299
	21	UNUSED						150-199, 275-299
	22	UNUSED						150-199, 275-299
	23	UNUSED						150-199, 275-299
	24	UNUSED						150-199, 275-299
D06898J		0654+25/147/R070		PLUG				155-199, 275-299
	1	UNUSED						155-199, 275-299
	2	UNUSED						155-199, 275-299
	3	UNUSED						155-199, 275-299
	4	UNUSED						155-199, 275-299
	5	UNUSED						155-199, 275-299
	6	UNUSED						155-199, 275-299
	7	UNUSED						155-199, 275-299
	8		W0650	001R	20		26-23-12	155-199, 275-299
	9	UNUSED						155-199, 275-299
	10	UNUSED						155-199, 275-299
	11	UNUSED						155-199, 275-299
	12		W0650	002R	20		26-23-12	155-199, 275-299
	13	UNUSED						155-199, 275-299
	14	UNUSED						155-199, 275-299
	15		W0650	003R	20		26-23-12	155-199, 275-299
D06898P		654+26/148/R 70		PLUG-				155-199, 275-299
	1	UNUSED						155-199, 275-299
	2	UNUSED						155-199, 275-299
	3	UNUSED						155-199, 275-299
	4	UNUSED						155-199, 275-299
	5	UNUSED						155-199, 275-299
	6	UNUSED						155-199, 275-299
	7	UNUSED						155-199, 275-299
	8		W0606	599R	20		26-23-12	155-199, 275-299
	9	UNUSED						155-199, 275-299
	10	UNUSED						155-199, 275-299
	11	UNUSED						155-199, 275-299
	12		W0606	593R	20		26-23-12	155-199, 275-299

HOOKUP LIST
D280T132

91-21-51
Section D06800
Page 18
Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06898P		654+26/148/R 70		PLUG- (continued)				155-199, 275-299
	13	UNUSED						155-199, 275-299
	14	UNUSED						155-199, 275-299
	15		W0606	596R	20		26-23-12	155-199, 275-299

HOOKUP LIST
D280T132

91-21-51
Section D06800
Page 19 End
Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06900J		437/275/R075		RCPT				050-099, 162-199
	1		W2008	006	20		26-13-12	050-099, 162-163
	1		W2008	011	20		26-13-12	164-199
	2		W2008	003	20		26-13-12	050-099, 162-199
	3		W2008	004	20		26-13-12	050-099, 162-199
	4		W2008	005	20		26-13-12	050-099, 162-199
	5		W2008	001	24		33-21-31	050-099, 162-199
	6		W2008	002	24		33-21-31	050-099, 162-199
	7	UNUSED						050-099, 162-199
	8		W2008	008	20		26-13-12	050-099, 162-199
	9		W2008	009	22		21-66-21	050-099, 162-199
	10	UNUSED						050-099, 162-199
	11		W2008	010	22		21-66-21	050-099, 162-199
	12	UNUSED						050-099, 162-163
	12		W2008	012	20		26-13-12	164-199
D06900P		437/275/R055		PLUG-				050-099, 162-199
	1		W1236	171	20		26-13-12	050-099, 162-199
	2		W1236	170	20		26-13-12	050-099, 162-199
	3		W1236	168	20		26-13-12	050-099, 162-163
	3		W1236	506	20		26-13-12	164-199
	4		W1236	169	20		26-13-12	050-099, 162-199
	5		W1236	165	24		33-21-31	050-099, 162-199
	6		W1236	166	20		33-21-31	050-099, 162-199
	7		W1236	167	24		33-21-31	050-099, 162-199
	8		W1236	183	20		26-13-12	050-099, 162-199
	9		W1236	192	22		21-66-21	050-099, 162-199
	10	UNUSED						050-099, 162-199
	11		W1236	193	22		21-66-21	050-099, 162-199
	12	UNUSED						050-099, 162-163
	12		W1236	505	20		26-13-12	164-199
D06902J		MULTI- /		RCPT				050-099, 162-199
	1	UNUSED						050-099, 162-199
	2	UNUSED						050-099, 162-199
	3	UNUSED						050-099, 162-199
	4	UNUSED						050-099, 162-199
	5		W2024	001	24		33-21-31	050-099, 162-199
	6	UNUSED						050-099, 162-199
	7		W2024	001	24		33-21-31	050-099, 162-199
	8	UNUSED						050-099, 162-199

HOOKUP LIST D280T132

91-21-51
Section D06900
Page 1
Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06902J		MULTI- / /		RCPT (continued)				050-099, 162-199
	9	UNUSED						050-099, 162-199
	10	UNUSED						050-099, 162-199
	11	UNUSED						050-099, 162-199
	12	UNUSED						050-099, 162-199
D06904P		1414/280/L050		PLUG-				050-099, 162-199
	1		W0828	143	20		26-13-12	050-099, 162-199
	2		W0828	192	20		26-13-12	050-099
	2		W0828	147	20		26-13-12	162-199
	3		W0828	193	20		26-13-12	050-099
	3		W0828	149	20		26-13-12	162-199
	4		W0828	194	20		26-13-12	050-099
	4		W0828	151	20		26-13-12	162-199
	5		W0828	183	24		33-21-31	050-099, 162-199
	6		W0828	184	20		33-21-31	050-099, 162-199
	7		W0828	185	24		33-21-31	050-099, 162-199
	8		W0828	211	20		26-13-12	050-099
	8		W0828	513	20		26-13-12	162-199
	9		W0828	612	22		21-66-31	050-099, 162-199
	10		W0828	109	20		25-42-11	050-099, 162-199
	11		W0828	613	22		21-66-31	050-099, 162-199
	12	UNUSED						050-099, 162-163
	12		W0828	511	20		26-13-12	164-199
D06906P		1414/280/R050		PLUG-				050-099, 150, 152-199
	1		W0828	144	20		26-13-12	050-099, 162-199
	1	UNUSED						150, 152-157
	2		W0828	196	20		26-13-12	050-099
	2	UNUSED						150, 152-157
	2		W0828	155	20		26-13-12	162-199
	3		W0828	197	20		26-13-12	050-099
	3	UNUSED						150, 152-157
	3		W0828	154	20		26-13-12	162-199
	4		W0828	198	20		26-13-12	050-099
	4	UNUSED						150, 152-157
	4		W0828	153	20		26-13-12	162-199
	5		W0828	188	24		33-21-31	050-099, 162-199
	5	UNUSED						150, 152-157
	6		W0828	189	20		33-21-31	050-099, 162-199
	6	UNUSED						150, 152-157

HOOKUP LIST

D280T132

91-21-51

Section D06900

Page 2

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06906P		1414/280/R050		PLUG- (continued)				050-099, 150, 152-199
	7		W0828	190	24		33-21-31	050-099, 162-199
	7	UNUSED						150, 152-157
	8		W0828	213	20		26-13-12	050-099
	8	UNUSED						150, 152-157
	8		W0828	515	20		26-13-12	162-199
	9		W0828	614	22		21-66-41	050-099, 150, 152-199
	10		W0828	110	20		25-42-11	050-099, 162-199
	10	UNUSED						150, 152-157
	11		W0828	615	22		21-66-41	050-099, 150, 152-199
	12	UNUSED						050-099, 150, 152-163
	12		W0828	508	20		26-13-12	164-199
D06934J		AE0209/ /		RCPT-				ALL
	1		W0176	21A	22		21-66-11	050-099, 162-199
	1	UNUSED						150-157, 275-299
	2		W0176	22A	20		21-66-11	050-099, 162-199
	2	UNUSED						150-157, 275-299
	3		W0176	23A	20		21-66-11	050-099, 162-199
	3	UNUSED						150-157
	3		W0176	86W	20		21-73-11	275-299
	4		W0176	25A	20		21-66-11	050-099, 162-199
	4	UNUSED						150-157, 275-299
	5		W0176	26A	22		21-66-11	050-099, 162-199
	5	UNUSED						150-157, 275-299
	6		W0176	36A	20		21-66-11	050-099, 162-199
	6	UNUSED						150-157, 275-299
	7		W0176	37A	20		21-66-11	050-099, 162-199
	7	UNUSED						150-157, 275-299
	8		W0176	38A	20		21-66-11	050-099, 162-199
	8	UNUSED						150-157, 275-299
	9		W0176	42A	22		21-66-11	050-099, 162-199
	9	UNUSED						150-157, 275-299
	10		W0176	46A	22		21-66-11	050-099, 162-199
	10	UNUSED						150-157, 275-299
	11		W0176	67A	22		21-66-11	050-099, 162-199
	11	UNUSED						150-157, 275-299
	12		W0176	68A	22		21-66-11	050-099, 162-199
	12	UNUSED						150-157, 275-299
	13		W0176	84A	22		21-66-11	050-099, 162-199
	13	UNUSED						150-157, 275-299

HOOKUP LIST
D280T132

91-21-51
Section D06900
Page 3
Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06934J		AE0209/ /		RCPT- (continued)				ALL
	14		W0176	85A	22		21-66-11	050-099, 162-199
	14	UNUSED						150-157, 275-299
	15		W0176	86A	22		21-66-11	050-099, 162-199
	15	UNUSED						150-157, 275-299
	16		W0176	87A	22		21-66-11	050-099, 162-199
	16	UNUSED						150-157, 275-299
	17		W0176	97A	22		21-66-11	050-099, 162-199
	17	UNUSED						150-157, 275-299
	18		W0176	22B	22		21-66-11	050-099, 162-199
	18	UNUSED						150-157, 275-299
	19		W0176	29E	22		21-66-31	050-099, 150, 152-199
	19	UNUSED						151, 275-299
	20		W0176	31E	20		21-66-31	050-099, 150, 152-199
	20	UNUSED						151, 275-299
	21		W0176	32E	20		21-66-31	050-099, 150, 152-199
	21	UNUSED						151, 275-299
	22		W0176	33E	20		21-66-31	050-099, 150, 152-199
	22	UNUSED						151, 275-299
	23		W0176	34E	22		21-66-31	050-099, 150, 152-199
	23	UNUSED						151, 275-299
	24		W0176	36E	22		21-66-31	050-099, 150, 152-199
	24	UNUSED						151, 275-299
	25		W0176	35E	22		21-66-31	050-099, 150, 152-199
	25	UNUSED						151, 275-299
	26		W0176	37E	20		21-66-31	050-099, 150, 152-199
	26	UNUSED						151, 275-299
	27		W0176	38E	20		21-66-31	050-099, 150, 152-199
	27	UNUSED						151, 275-299
	28		W0176	40E	22		21-66-31	050-099, 150, 152-199
	28	UNUSED						151, 275-299
	29		W0176	41E	20		21-66-31	050-099, 150, 152-199
	29	UNUSED						151, 275-299
	30		W0176	43ER	22		21-66-31	050-099, 150, 152-199
	30	UNUSED						151, 275-299
	31		W0176	43EB	22		21-66-31	050-099, 150, 152-199
	31	UNUSED						151, 275-299
	32		W0176	43EZ			21-66-31	050-099, 150, 152-199
	32	UNUSED						151, 275-299
	33		W0176	44E	22		21-66-31	050-099, 150, 152-199
	33	UNUSED						151, 275-299

HOOKUP LIST

D280T132

91-21-51

Section D06900

Page 4

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06934J		AE0209/ /		RCPT- (continued)				ALL
	34		W0176	39FB	22		21-66-11	050-099, 162-199
	34	UNUSED						150-157, 275-299
	35		W0176	39FR	22		21-66-11	050-099, 162-199
	35	UNUSED						150-157, 275-299
	36		W0176	39FZ			21-66-11	050-099, 162-199
	36	UNUSED						150-157, 275-299
	37	UNUSED						050-099, 162-199
	37		W0176	21D	24		21-45-24	150-157, 275-299
	38	UNUSED						050-099, 162-199
	38		W0176	21G	24		21-45-24	150-157, 275-299
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
D06934P D06934P		AE0209/ / AE0209/ /		PLUG- PLUG-P36 PNL				050-099, 162-199, 278-299 150-157, 275-277
	1		W1232	100	22		21-66-11	050-099, 162-199
	1	UNUSED						150-157, 275-299
	2	DL	W1232	300R	18		21-66-11	050-099, 162-199
	2	UNUSED						150-157, 275-299
	3	DL	W1232	300Y	18		21-66-11	050-099, 162-199
	3		W1232	520	20		SPARE	150-157
	3		W1232	560	20		21-73-11	275-299
	4	DL	W1232	300B	18		21-66-11	050-099, 162-199
	4		W1232	521	20		SPARE	150-157, 275-299
	5		W1232	101	22		21-66-11	050-099, 162-199
	5		W1232	522	20		SPARE	150-157, 275-299
	6		W1232	301R	22		21-66-11	050-099, 162-199
	6		W1232	523	20		SPARE	150-157, 275-299
	7		W1232	301Y	22		21-66-11	050-099, 162-199
	7	UNUSED						150-157, 275-299
	8		W1232	301B	22		21-66-11	050-099, 162-199
	8	UNUSED						150-157, 275-299
	9		W1232	114	22		21-66-11	050-099, 162-199
	9	UNUSED						150-157, 275-299
	10		W1232	115	22		21-66-11	050-099, 162-199
	10	UNUSED						150-157, 275-299
	11		W1232	113	22		21-66-11	050-099, 162-199
	11	UNUSED						150-157, 275-299
	12		W1232	116	22		21-66-11	050-099, 162-199

HOOKUP LIST
D280T132

91-21-51
Section D06900
Page 5
Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06934P		AE0209/ /		PLUG- (continued)				050-099, 162-199, 278-299
D06934P		AE0209/ /		PLUG-P36 PNL (continued)				150-157, 275-277
	12	UNUSED						150-157, 275-299
	13	UNUSED	W1232	119	22		21-66-11	050-099, 162-199
	13	UNUSED						150-157, 275-299
	14	UNUSED	W1232	121	22		21-66-11	050-099, 162-199
	14	UNUSED						150-157, 275-299
	15	UNUSED	W1232	131	22		21-66-11	050-099, 162-199
	15	UNUSED						150-157, 275-299
	16	UNUSED	W1232	132	22		21-66-11	050-099, 162-199
	16	UNUSED						150-157, 275-299
	17	UNUSED	W1232	126	22		21-66-11	050-099, 162-199
	17	UNUSED						150-157, 275-299
	18	UNUSED	W1232	127	22		21-66-11	050-099, 162-199
	18	UNUSED						150-157, 275-299
	19	UNUSED	W1232	140	22		21-66-31	050-099, 150, 152-199
	19	UNUSED						151, 275-299
	20	DL	W1232	302R	18		21-66-31	050-099, 150, 152-199
	20	UNUSED						151, 275-299
	21	DL	W1232	302Y	18		21-66-31	050-099, 150, 152-199
	21	UNUSED						151, 275-299
	22	DL	W1232	302B	18		21-66-31	050-099, 150, 152-199
	22	UNUSED						151, 275-299
	23	UNUSED	W1232	139	22		21-66-31	050-099, 150, 152-199
	23	UNUSED						151, 275-299
	24	UNUSED	W1232	158	22		21-66-31	050-099, 150, 152-199
	24	UNUSED						151, 275-299
	25	UNUSED	W1232	150	22		21-66-31	050-099, 150, 152-199
	25	UNUSED						151, 275-299
	26	UNUSED	W1232	147	20		21-66-31	050-099, 150, 152-199
	26	UNUSED						151, 275-299
	27	UNUSED	W1232	148	20		21-66-31	050-099, 150, 152-199
	27	UNUSED						151, 275-299
	28	UNUSED	W1232	152	22		21-66-31	050-099, 150, 152-199
	28	UNUSED						151, 275-299
	29	UNUSED	W1232	149	20		21-66-31	050-099, 150, 152-199
	29	UNUSED						151, 275-299
	30	UNUSED	W1232	204R	22		21-66-31	050-099, 150, 152-199
	30	UNUSED						151, 275-299
	31	UNUSED	W1232	204B	22		21-66-31	050-099, 150, 152-199
	31	UNUSED						151, 275-299

HOOKUP LIST

D280T132

91-21-51

Section D06900

Page 6

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06934P		AE0209/ /		PLUG- (continued)				050-099, 162-199, 278-299
D06934P		AE0209/ /		PLUG-P36 PNL (continued)				150-157, 275-277
	32		W1232	204Z			21-66-31	050-099, 150, 152-199
	32	UNUSED						151, 275-299
	33		W1232	157	22		21-66-31	050-099, 150, 152-199
	33	UNUSED						151, 275-299
	34		W1232	203B	22		21-66-11	050-099, 162-199
	34	UNUSED						150-157, 275-299
	35		W1232	203R	22		21-66-11	050-099, 162-199
	35	UNUSED						150-157, 275-299
	36		W1232	203Z			21-66-11	050-099, 162-199
	36	UNUSED						150-157, 275-299
	37		W1232	175	24		21-45-24	050-099, 150-157, 275-299
	37	UNUSED						162-199
	38		W1232	176	24		21-45-24	050-099, 150-157, 275-299
	38	UNUSED						162-199
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	CAP	Y	W1232	520	20		SPARE	275-299
D06936J		326/280/L012		RECP-				050-099, 162-199
	1		W1232	100	22		21-66-11	050-099, 162-199
	2		W1232	101	22		21-66-11	050-099, 162-199
	3		W1232	114	22		21-66-11	050-099, 162-199
	4		W1232	115	22		21-66-11	050-099, 162-199
	5		W1232	116	22		21-66-11	050-099, 162-199
	6		W1232	131	22		21-66-11	050-099, 162-199
	7		W1232	132	22		21-66-11	050-099, 162-199
	8		W1232	125	22		21-66-11	050-099, 162-199
	9		W1232	118	22		21-66-11	050-099, 162-199
	10		W1232	126	22		21-66-11	050-099, 162-199
	11		W1232	127	22		21-66-11	050-099, 162-199
	12	UNUSED						050-099, 162-199
	13	UNUSED						050-099, 162-199
	14	UNUSED						050-099, 162-199
	15	UNUSED						050-099, 162-199
D06936P		326/280/L 12		PLUG				050-099, 162-199
	1		W1230	502	22		21-66-11	050-099, 162-199
	2		W1230	504	22		21-66-11	050-099, 162-199

HOOKUP LIST
D280T132

91-21-51
Section D06900
Page 7
Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06936P		326/280/L 12		PLUG (continued)				050-099, 162-199
	3		W1230	508	22		21-66-11	050-099, 162-199
	4		W1230	509	22		21-66-11	050-099, 162-199
	5		W1230	510	22		21-66-11	050-099, 162-199
	6		W1230	522	22		21-66-11	050-099, 162-199
	7		W1230	523	22		21-66-11	050-099, 162-199
	8		W1230	516	22		21-66-11	050-099, 162-199
	9		W1230	517	22		21-66-11	050-099, 162-199
	10		W1230	519	22		21-66-11	050-099, 162-199
	11		W1230	520	22		21-66-11	050-099, 162-199
	12	UNUSED						050-099, 162-199
	13	UNUSED						050-099, 162-199
	14	UNUSED						050-099, 162-199
	15	UNUSED						050-099, 162-199
	DED		W1230	502Z			21-66-11	050-099, 162-199
	DED		W1230	504Z			21-66-11	050-099, 162-199
	DED		W1230	508Z			21-66-11	050-099, 162-199
	DED		W1230	509Z			21-66-11	050-099, 162-199
	DED		W1230	510Z			21-66-11	050-099, 162-199
	DED		W1230	516Z			21-66-11	050-099, 162-199
	DED		W1230	517Z			21-66-11	050-099, 162-199
	DED		W1230	519Z			21-66-11	050-099, 162-199
	DED		W1230	520Z			21-66-11	050-099, 162-199
	DED		W1230	522Z			21-66-11	050-099, 162-199
	DED		W1230	523Z			21-66-11	050-099, 162-199
D06944J		352/184/L067		PLUG-				ALL
	1		W0664	001R	24		26-16-11	ALL
	2	UNUSED						ALL
	3		W0664	003R	20		26-16-11	ALL
	4	UNUSED						ALL
	5		W0664	005R	20		26-16-11	ALL
	6	UNUSED						ALL
	7		W0664	007R	20		26-16-11	ALL
	8	UNUSED						ALL
	9		W0664	009R	24		26-16-11	ALL
	10	UNUSED						ALL
	11		W0664	011R	24		26-16-11	ALL
	12	UNUSED						ALL

HOOKUP LIST
D280T132



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06944P		352/184/L067		PLUG-				ALL
	1		W0606	028R	24		26-16-11	ALL
	2	UNUSED						ALL
	3		W0606	032R	20		26-16-11	ALL
	4	UNUSED						ALL
	5		W0606	029R	20		26-16-11	ALL
	6	UNUSED						ALL
	7		W0606	025R	20		26-16-11	ALL
	8	UNUSED						ALL
	9		W0606	031R	24		26-16-11	ALL
	10	UNUSED						ALL
	11		W0606	030R	24		26-16-11	ALL
	12	UNUSED						ALL
D06946J		1406/163/L071		PLUG-				ALL
	1	UNUSED						ALL
	2		W0672	002R	24		26-16-11	ALL
	3	UNUSED						ALL
	4		W0672	004R	20		26-16-11	ALL
	5	UNUSED						ALL
	6		W0672	006R	20		26-16-11	ALL
	7	UNUSED						ALL
	8		W0672	008R	20		26-16-11	ALL
	9	UNUSED						ALL
	10		W0672	010R	24		26-16-11	ALL
	11	UNUSED						ALL
	12		W0672	012R	24		26-16-11	ALL
D06946P		1406/163/L067		PLUG-				ALL
	1	UNUSED						ALL
	2		W0606	034R	24		26-16-11	ALL
	3	UNUSED						ALL
	4		W0606	038R	20		26-16-11	ALL
	5	UNUSED						ALL
	6		W0606	035R	20		26-16-11	ALL
	7	UNUSED						ALL
	8		W0606	039R	20		26-16-11	ALL
	9	UNUSED						ALL
	10		W0606	037R	24		26-16-11	ALL
	11	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D06900

Page 9

Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06946P		1406/163/L067		PLUG- (continued)				ALL
	12		W0606	036R	24		26-16-11	ALL
D06948J		352/184/L067		PLUG-				ALL
	1		W0692	001	20		26-16-21	ALL
	2		W0692	002	20		26-16-21	ALL
	3		W0692	003	20		26-16-21	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
D06948P		352/184/L067		PLUG-				ALL
	1		W0606	123	20		26-16-21	ALL
	2		W0606	124	20		26-16-21	ALL
	3		W0606	156	20		26-16-21	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
D06950J		1406/137/L071		PLUG-				ALL
	1		W0694	001	20		26-16-21	ALL
	2		W0694	002	20		26-16-21	ALL
	3		W0694	003	20		26-16-21	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
D06950P		1406/163/L067		PLUG-				ALL
	1		W0606	133	20		26-16-21	ALL
	2		W0606	134	20		26-16-21	ALL
	3		W0606	158	20		26-16-21	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
D06966J		AE0221/ /		RCPT-E8				155-157, 166-199, 277-299
	1		W1039	019	24		27-18-11	155-157, 166-199, 277-299
	2		W1039	020	24		27-18-11	155-157, 166-199, 277-299
	3		W1039	015	24		27-18-11	155-157, 166-199, 277-299
	4		W1039	016	24		27-18-11	155-157, 166-199, 277-299
	5		W1039	021	24		27-18-11	155-157, 166-199, 277-299
	6		W1039	022	24		27-18-11	155-157, 166-199, 277-299
	7		W1039	023	24		27-18-11	155-157, 166-199, 277-299
	8		W1039	024	24		27-18-11	155-157, 166-199, 277-299
	9		W1039	029	24		27-18-11	155-157, 166-199, 277-299

HOOKUP LIST

D280T132

91-21-51

Section D06900

Page 10

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06966J		AE0221 / /		RCPT-E8 (continued)				155-157, 166-199, 277-299
	10		W1039	025	24		27-18-11	155-157, 166-199, 277-299
	11		W1039	031	24		27-18-11	155-157, 166-199, 277-299
	12		W1039	026	24		27-18-11	155-157, 166-199, 277-299
	13		W1039	033	24		27-28-11	155-157, 166-199, 277-299
	14		W1039	034	24		27-28-11	155-157, 166-199, 277-299
	15		W1039	035	24		27-28-11	155-157, 166-199, 277-299
	16		W1039	036	24		27-38-11	155-157, 166-199, 277-299
	17		W1039	037	24		27-38-11	155-157, 166-199, 277-299
	18		W1039	038	24		27-38-11	155-157, 166-199, 277-299
	19		W1039	039	24		27-38-11	155-157, 166-199, 277-299
	20		W1039	040	24		27-38-11	155-157, 166-199, 277-299
	21		W1039	041	24		27-38-11	155-157, 166-199, 277-299
	22	UNUSED						155-157, 166-199, 277-299
	23	UNUSED						155-157, 166-199, 277-299
	24	UNUSED						155-157, 166-199, 277-299
	25	UNUSED						155-157, 166-199, 277-299
	26	UNUSED						155-157, 166-199, 277-299
	27	UNUSED						155-157, 166-199, 277-299
	28	UNUSED						155-157, 166-199, 277-299
	29	UNUSED						155-157, 166-199, 277-299
	30	UNUSED						155-157, 166-199, 277-299
	31	UNUSED						155-157, 166-199, 277-299
	32	UNUSED						155-156, 166
	32		W1039	043	24		27-48-11	157, 167-199, 277-299
	33	UNUSED						155-156, 166
	33		W1039	042	24		27-48-11	157, 167-199, 277-299
	34	UNUSED						155-156, 166
	34		W1039	044	20		27-48-11	157, 167-199, 277-299
	35	UNUSED						155-157, 166-199, 277-299
	36	UNUSED						155-157, 166-199, 277-299
	37	UNUSED						155-157, 166-199, 277-299
	38	UNUSED						155-157, 166-199, 277-299
	39	UNUSED						155-157, 166-199, 277-299
	40	UNUSED						155-157, 166-199, 277-299
	41	UNUSED						155-157, 166-199, 277-299
	42	UNUSED						155-157, 166-199, 277-299
	43	UNUSED						155-157, 166-199, 277-299
	44	UNUSED						155-157, 166-199, 277-299
	45	UNUSED						155-157, 166-199, 277-299
	46	UNUSED						155-157, 166-199, 277-299

HOOKUP LIST
D280T132

91-21-51
Section D06900
Page 11
Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06966J		AE0221 / /		RCPT-E8 (continued)				155-157, 166-199, 277-299
	47	UNUSED						155-157, 166-199, 277-299
	48	UNUSED						155-157, 166-199, 277-299
	49	UNUSED						155-157, 166-199, 277-299
	50	UNUSED						155-157, 166-199, 277-299
	51	UNUSED						155-157, 166-199, 277-299
	52	UNUSED						155-157, 166-199, 277-299
	53	UNUSED						155-157, 166-199, 277-299
	54	UNUSED						155-157, 166-199, 277-299
	55	UNUSED						155-157, 166-199, 277-299
D06968J		AE0221 / /		RCPT-E8				155-157, 166-199, 277-299
	1		W1039	013	24		27-18-11	155-157, 166-199, 277-299
	2		W1039	014	24		27-18-11	155-157, 166-199, 277-299
	3		W1039	015	24		27-18-11	155-157, 166-199, 277-299
	4		W1039	016	24		27-18-11	155-157, 166-199, 277-299
	5		W1039	017	24		27-18-11	155-157, 166-199, 277-299
	6		W1039	018	24		27-18-11	155-157, 166-199, 277-299
	7	UNUSED						155-157, 166-199, 277-299
	8	UNUSED						155-157, 166-199, 277-299
	9	UNUSED						155-157, 166-199, 277-299
	10	UNUSED						155-157, 166-199, 277-299
	11	UNUSED						155-157, 166-199, 277-299
	12	UNUSED						155-157, 166-199, 277-299
D06968P		AE0221 / /		PLUG-E8				155-157, 166-199, 277-299
	1		W0738	511	20		27-18-11	155-157, 166-199, 277-299
	2		W0738	512	20		27-18-11	155-157, 166-199, 277-299
	3		W0738	513	20		27-18-11	155-157, 166-199, 277-299
	4		W0738	514	20		27-18-11	155-157, 166-199, 277-299
	5		W0738	515	20		27-18-11	155-157, 166-199, 277-299
	6		W0738	516	20		27-18-11	155-157, 166-199, 277-299
	7	UNUSED						155-157, 166-199, 277-299
	8	UNUSED						155-157, 166-199, 277-299
	9	UNUSED						155-157, 166-199, 277-299
	10	UNUSED						155-157, 166-199, 277-299
	11	UNUSED						155-157, 166-199, 277-299
	12	UNUSED						155-157, 166-199, 277-299
D06970J		AE0221 / /		RCPT-E8				155-157, 166-199, 277-299
	1		W1039	027	24		27-18-11	155-157, 166-199, 277-299

HOOKUP LIST
D280T132

91-21-51
Section D06900
Page 12
Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06970J		AE0221 / /		RCPT-E8 (continued)				155-157, 166-199, 277-299
	2		W1039	028	24		27-18-11	155-157, 166-199, 277-299
	3		W1039	029	24		27-18-11	155-157, 166-199, 277-299
	4		W1039	030	24		27-18-11	155-157, 166-199, 277-299
	5		W1039	031	24		27-18-11	155-157, 166-199, 277-299
	6		W1039	032	24		27-18-11	155-157, 166-199, 277-299
	7	UNUSED						155-157, 166-199, 277-299
	8	UNUSED						155-157, 166-199, 277-299
	9	UNUSED						155-157, 166-199, 277-299
	10	UNUSED						155-157, 166-199, 277-299
	11	UNUSED						155-157, 166-199, 277-299
	12	UNUSED						155-157, 166-199, 277-299
D06970P		AE0221 / /		PLUG-E8				155-157, 166-199, 277-299
	1		W0942	585	20		27-18-11	155-157, 166-199, 277-299
	2		W0942	586	20		27-18-11	155-157, 166-199, 277-299
	3		W0942	587	20		27-18-11	155-157, 166-199, 277-299
	4		W0942	588	20		27-18-11	155-157, 166-199, 277-299
	5		W0942	589	20		27-18-11	155-157, 166-199, 277-299
	6		W0942	590	20		27-18-11	155-157, 166-199, 277-299
	7	UNUSED						155-157, 166-199, 277-299
	8	UNUSED						155-157, 166-199, 277-299
	9	UNUSED						155-157, 166-199, 277-299
	10	UNUSED						155-157, 166-199, 277-299
	11	UNUSED						155-157, 166-199, 277-299
	12	UNUSED						155-157, 166-199, 277-299
D06976J		MULTI- / /		RCPT				050-099, 150, 152-199
	1		W2040	006	20		26-13-12	050-099, 162-163
	1		W2040	011	20		SPARE	150, 152-157
	1		W2040	011	20		26-13-12	164-199
	2		W2040	003	20		26-13-12	050-099, 162-199
	2	UNUSED						150, 152-157
	3		W2040	004	20		26-13-12	050-099, 162-199
	3	UNUSED						150, 152-157
	4		W2040	005	20		26-13-12	050-099, 162-199
	4	UNUSED						150, 152-157
	5		W2040	001	24		33-21-31	050-099, 150, 152-199
	6		W2040	002	24		33-21-31	050-099, 150, 152-199
	7	UNUSED						050-099, 150, 152-199
	8		W2040	008	20		26-13-12	050-099, 162-199

HOOKUP LIST
D280T132

91-21-51
Section D06900
Page 13
Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06976J		MULTI- / /		RCPT (continued)				050-099, 150, 152-199
	8		W0828	515	20		26-13-12	150, 152-157
	9		W2040	009	22		21-66-31	050-099, 162-199
	9		W0828	612	22		21-66-31	150, 152-157
	10	UNUSED						050-099, 150, 152-199
	11		W2040	010	22		21-66-31	050-099, 162-199
	11		W0828	613	22		21-66-31	150, 152-157
	12	UNUSED						050-099, 162-163
	12		W2040	012	20		SPARE	150, 152-157
	12		W2040	012	20		26-13-12	164-199
D06978J		AL1002/ /		RCPT-				155-157, 166-199, 277-299
	1		W0738	514	20		27-18-11	155-157, 166-199, 277-299
	2		W0738	515	20		27-18-11	155-157, 166-199, 277-299
	3		W0738	516	20		27-18-11	155-157, 166-199, 277-299
	4	UNUSED						155-157, 166-199, 277-299
	5	UNUSED						155-157, 166-199, 277-299
	6	UNUSED						155-157, 166-199, 277-299
	7	UNUSED						155-157, 166-199, 277-299
D06978P		AL1002/ /		PLUG-R WING RS/BODY				155-157, 166-199, 277-299
	1		W0464	305R	20		27-18-11	155-157, 166-199, 277-299
	2		W0464	305B	20		27-18-11	155-157, 166-199, 277-299
	3		W0464	305Y	20		27-18-11	155-157, 166-199, 277-299
	4	UNUSED						155-157, 166-199, 277-299
	5	UNUSED						155-157, 166-199, 277-299
	6	UNUSED						155-157, 166-199, 277-299
	7	UNUSED						155-157, 166-199, 277-299
D06980J		AE0221/ /		RCPT-E8				155-157, 166-199, 277-299
	1		W1039	033	24		27-28-11	155-157, 166-199, 277-299
	2		W1039	034	24		27-28-11	155-157, 166-199, 277-299
	3		W1039	035	24		27-28-11	155-157, 166-199, 277-299
	4		W1039	036	24		27-38-11	155-157, 166-199, 277-299
	5		W1039	037	24		27-38-11	155-157, 166-199, 277-299
	6		W1039	038	24		27-38-11	155-157, 166-199, 277-299
	7		W1039	039	24		27-38-11	155-157, 166-199, 277-299
	8		W1039	040	24		27-38-11	155-157, 166-199, 277-299
	9		W1039	041	24		27-38-11	155-157, 166-199, 277-299
	10	UNUSED						155-156, 166
	10		W1039	042	24		27-48-11	157, 167-199, 277-299

HOOKUP LIST

D280T132

91-21-51

Section D06900

Page 14

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06980J		AE0221 / /		RCPT-E8 (continued)				155-157, 166-199, 277-299
	11	UNUSED						155-156, 166
	11		W1039	043	24		27-48-11	157, 167-199, 277-299
	12	UNUSED						155-157, 166-199, 277-299
	13	UNUSED						155-157, 166-199, 277-299
	14	UNUSED						155-157, 166-199, 277-299
	15	UNUSED						155-157, 166-199, 277-299
	16	UNUSED						155-157, 166-199, 277-299
	17	UNUSED						155-157, 166-199, 277-299
	18	UNUSED						155-157, 166-199, 277-299
	19	UNUSED						155-157, 166-199, 277-299
	20	UNUSED						155-157, 166-199, 277-299
	21	UNUSED						155-157, 166-199, 277-299
	22	UNUSED						155-157, 166-199, 277-299
	23	UNUSED						155-157, 166-199, 277-299
	24	UNUSED						155-157, 166-199, 277-299
	25	UNUSED						155-157, 166-199, 277-299
	26	UNUSED						155-157, 166-199, 277-299
	27	UNUSED						155-157, 166-199, 277-299
	28	UNUSED						155-157, 166-199, 277-299
	29	UNUSED						155-157, 166-199, 277-299
	30	UNUSED						155-157, 166-199, 277-299
	31	UNUSED						155-157, 166-199, 277-299
	32	UNUSED						155-157, 166-199, 277-299
	33	UNUSED						155-157, 166-199, 277-299
	34	UNUSED						155-157, 166-199, 277-299
	35	UNUSED						155-157, 166-199, 277-299
	36	UNUSED						155-157, 166-199, 277-299
	37	UNUSED						155-157, 166-199, 277-299
	38	UNUSED						155-157, 166-199, 277-299
	39	UNUSED						155-157, 166-199, 277-299
	40	UNUSED						155-157, 166-199, 277-299
	41	UNUSED						155-157, 166-199, 277-299
	42	UNUSED						155-157, 166-199, 277-299
	43	UNUSED						155-157, 166-199, 277-299
	44	UNUSED						155-157, 166-199, 277-299
	45	UNUSED						155-157, 166-199, 277-299
	46	UNUSED						155-157, 166-199, 277-299
	47	UNUSED						155-157, 166-199, 277-299
	48	UNUSED						155-157, 166-199, 277-299
	49	UNUSED						155-157, 166-199, 277-299

HOOKUP LIST
D280T132

91-21-51
Section D06900
Page 15
Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06980J		AE0221 / /		RCPT-E8 (continued)				155-157, 166-199, 277-299
	50	UNUSED						155-157, 166-199, 277-299
	51	UNUSED						155-157, 166-199, 277-299
	52	UNUSED						155-157, 166-199, 277-299
	53	UNUSED						155-157, 166-199, 277-299
	54	UNUSED						155-157, 166-199, 277-299
	55	UNUSED						155-157, 166-199, 277-299
D06980P		AE0221 / /		PLUG-E8				155-157, 166-199, 277-299
	1		W1702	065	24		27-28-11	155-157, 166-199, 277-299
	2		W1702	066	24		27-28-11	155-157, 166-199, 277-299
	3		W1702	061	24		27-28-11	155-157, 166-199, 277-299
	4		W1702	071	24		27-38-11	155-157, 166-199, 277-299
	5		W1702	072	24		27-38-11	155-157, 166-199, 277-299
	6		W1702	073	24		27-38-11	155-157, 166-199, 277-299
	7		W1702	062	24		27-38-11	155-157, 166-199, 277-299
	8		W1702	063	24		27-38-11	155-157, 166-199, 277-299
	9		W1702	064	24		27-38-11	155-157, 166-199, 277-299
	10	UNUSED						155-156, 166
	10		W1702	095	24		27-48-11	157, 167-199, 277-299
	11	UNUSED						155-156, 166
	11		W1702	096	24		27-48-11	157, 167-199, 277-299
	12	UNUSED						155-157, 166-199, 277-299
	13	UNUSED						155-157, 166-199, 277-299
	14	UNUSED						155-157, 166-199, 277-299
	15	UNUSED						155-157, 166-199, 277-299
	16	UNUSED						155-157, 166-199, 277-299
	17	UNUSED						155-157, 166-199, 277-299
	18	UNUSED						155-157, 166-199, 277-299
	19	UNUSED						155-157, 166-199, 277-299
	20	UNUSED						155-157, 166-199, 277-299
	21	UNUSED						155-157, 166-199, 277-299
	22	UNUSED						155-157, 166-199, 277-299
	23	UNUSED						155-157, 166-199, 277-299
	24	UNUSED						155-157, 166-199, 277-299
	25	UNUSED						155-157, 166-199, 277-299
	26	UNUSED						155-157, 166-199, 277-299
	27	UNUSED						155-157, 166-199, 277-299
	28	UNUSED						155-157, 166-199, 277-299
	29	UNUSED						155-157, 166-199, 277-299
	30	UNUSED						155-157, 166-199, 277-299

HOOKUP LIST

D280T132

91-21-51

Section D06900

Page 16

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06980P		AE0221 / /		PLUG-E8 (continued)				155-157, 166-199, 277-299
	31	UNUSED						155-157, 166-199, 277-299
	32	UNUSED						155-157, 166-199, 277-299
	33	UNUSED						155-157, 166-199, 277-299
	34	UNUSED						155-157, 166-199, 277-299
	35	UNUSED						155-157, 166-199, 277-299
	36	UNUSED						155-157, 166-199, 277-299
	37	UNUSED						155-157, 166-199, 277-299
	38	UNUSED						155-157, 166-199, 277-299
	39	UNUSED						155-157, 166-199, 277-299
	40	UNUSED						155-157, 166-199, 277-299
	41	UNUSED						155-157, 166-199, 277-299
	42	UNUSED						155-157, 166-199, 277-299
	43	UNUSED						155-157, 166-199, 277-299
	44	UNUSED						155-157, 166-199, 277-299
	45	UNUSED						155-157, 166-199, 277-299
	46	UNUSED						155-157, 166-199, 277-299
	47	UNUSED						155-157, 166-199, 277-299
	48	UNUSED						155-157, 166-199, 277-299
	49	UNUSED						155-157, 166-199, 277-299
	50	UNUSED						155-157, 166-199, 277-299
	51	UNUSED						155-157, 166-199, 277-299
	52	UNUSED						155-157, 166-199, 277-299
	53	UNUSED						155-157, 166-199, 277-299
	54	UNUSED						155-157, 166-199, 277-299
	55	UNUSED						155-157, 166-199, 277-299

HOOKUP LIST
D280T132

91-21-51
Section D06900
Page 17 End
Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D07040J		AC0702/ /		RCPT-R WING FS/BODY				050-099, 150-199, 275-278
D07040J		AC0702/POS/15		RCPT-R WING FS/BODY				280-299
	1		W0656	193	18		78-36-21	ALL
	2		W0656	194	18		78-36-21	ALL
	3		W0656	184	24		78-36-21	ALL
	4		W0656	250B	18		78-36-21	ALL
	5		W0656	250R	18		78-36-21	ALL
	6		W0656	251B	18		78-36-21	ALL
	7		W0656	251R	18		78-36-21	ALL
	8		W0656	249B	18		78-36-21	ALL
	9		W0656	249R	18		78-36-21	ALL
	10		W0656	252B	18		78-36-21	ALL
	11		W0656	252R	18		78-36-21	ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	= CC	D	W0656	193Z			78-36-21	ALL
	= CC	D	W0656	194Z			78-36-21	ALL
	= CC	D	W0656	249Z			78-36-21	ALL
	= CC	D	W0656	250Z			78-36-21	ALL
	= CC	D	W0656	251Z			78-36-21	ALL
	= CC	D	W0656	252Z			78-36-21	ALL
D07040P		AC0702/POS/15		PLUG-R WING FS/BODY				050-099, 150-156, 162-166, 275-276
D07040P		AC0702/ /		PLUG-R WING FS/BODY				157, 167-199, 277-299
	1		W0408	125	18		78-36-21	ALL
	2		W0408	126	18		78-36-21	ALL
	3		W0408	131	18		78-36-21	ALL
	4		W0408	225B	18		78-36-21	ALL
	5		W0408	225R	18		78-36-21	ALL
	6		W0408	226B	18		78-36-21	ALL
	7		W0408	226R	18		78-36-21	ALL
	8		W0408	248B	18		78-36-21	ALL
	9		W0408	248R	18		78-36-21	ALL
	10		W0408	249B	18		78-36-21	ALL
	11		W0408	249R	18		78-36-21	ALL

HOOKUP LIST

D280T132

91-21-51

Section D07000

Page 1

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D07040P		AC0702/POS/15		PLUG-R WING FS/BODY (continued)				050-099, 150-156, 162-166, 275-276
D07040P		AC0702/ /		PLUG-R WING FS/BODY (continued)				157, 167-199, 277-299
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	= CC	M	W0408	125Z			78-36-21	ALL
	= CC	M	W0408	126Z			78-36-21	ALL
	= CC	M	W0408	225Z			78-36-21	ALL
	= CC	M	W0408	226Z			78-36-21	ALL
	= CC	M	W0408	248Z			78-36-21	ALL
	= CC	M	W0408	249Z			78-36-21	ALL
D07082J		1417/314/R032		RCPT-				280-299
	1	DK	W0818	610	18		33-22-42	280-299
	2	DK	W0818	609	18		33-22-42	280-299
	3	DK	W0818	608	18		33-22-42	280-299
	4	UNUSED						280-299
	5	UNUSED						280-299
D07084J		1417/314/R032		RCPT-				280-299
	1	UNUSED						280-299
	2	DK	W1240	133	18		33-22-31	280-299
	3	DK	W1240	137	18		33-22-31	280-299
	4	DK	W1240	135	18		33-22-31	280-299
	5	UNUSED						280-299
D07086J		1417/314/R032		RCPT-				280-299
	1	DK	W1240	132	18		33-22-31	280-299
	2	DK	W1240	133	18		33-22-31	280-299
	3	DK	W1240	134	18		33-22-31	280-299
	4	DK	W1240	135	18		33-22-31	280-299
	5	UNUSED						280-299
D07090P		AP0604/ /		PLUG				280-299
	1		W0665	521	22		23-42-11	280-299
	2		W0665	524	24		23-34-13	280-299

HOOKUP LIST

D280T132

91-21-51

Section D07000

Page 2

Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D07090P		AP0604/ /		PLUG (continued)				280-299
	3		W0665	525	24		23-34-13	280-299
	4		W0665	522	20		23-42-11	280-299
	5		W0665	529	22		SPARE	280-299
	6		W0665	526	22		SPARE	280-299
	7		W0665	220R	22		23-31-14	280-299
	8		W0665	220B	22		23-31-14	280-299
	9	UNUSED						280-299
	10		W0665	184	20		23-42-12	280-299
	11		W0665	185	24		23-42-12	280-299
	12		W0665	183	22		23-42-12	280-299
D07092J		AP1404/ /		RCPT-				280-299
	1		W0665	227R	22		23-31-14	280-299
	2		W0665	227B	22		23-31-14	280-299
	3	UNUSED						280-299
	4	UNUSED						280-299
	5	UNUSED						280-299
D07096J		628/291/L026		RCPT-				280-299
	1		W0822	038	20		33-21-11	280-299
	2		W0822	686	20		33-21-11	280-299
	3		W0822	687	20		33-21-11	280-299
	4		W0822	689	20		33-21-11	280-299
	5		W0822	688	20		33-21-11	280-299
	6		W0822	054	20		33-21-11	280-299
	7		W0822	692	20		33-21-11	280-299
	8		W0822	693	20		33-21-11	280-299
	9		W0822	039	20		33-21-11	280-299
	10		W0822	690	20		33-21-11	280-299
	11		W0822	691	20		33-21-11	280-299
	12		W0822	162	20		33-21-11	280-299
	13		W0822	679	22		SPARE	280-299
	14		W0822	680	20		SPARE	280-299
	15		W0822	682	22		SPARE	280-299
	16		W0822	681	20		SPARE	280-299
	17		W0822	683	22		SPARE	280-299
	18	UNUSED						280-299
	19	UNUSED						280-299
	20	UNUSED						280-299
	21	UNUSED						280-299

HOOKUP LIST

D280T132

91-21-51

Section D07000

Page 3

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D07096J		628/291/L026		RCPT- (continued)				280-299
	22	UNUSED						280-299
	23	UNUSED						280-299
	24	UNUSED						280-299
D07098J		654+108/291/L024		RCPT-				280-299
	1	UNUSED						280-299
	2	UNUSED						280-299
	3	UNUSED						280-299
	4	UNUSED						280-299
	5	UNUSED						280-299
	6		W3014	027	20		33-21-11	280-299
	7		W3014	028	20		33-21-11	280-299
	8		W3014	029	20		33-21-11	280-299
	9	UNUSED						280-299
	10	UNUSED						280-299
	11	UNUSED						280-299
	12	UNUSED						280-299
	13	UNUSED						280-299
	14	UNUSED						280-299
	15	UNUSED						280-299
	16	UNUSED						280-299
	17	UNUSED						280-299
	18	UNUSED						280-299
	19	UNUSED						280-299
	20	UNUSED						280-299
	21	UNUSED						280-299
	22	UNUSED						280-299
	23	UNUSED						280-299
	24	UNUSED						280-299
D07098P		654+108/291/L024		PLUG-				280-299
	1	UNUSED						280-299
	2	UNUSED						280-299
	3	UNUSED						280-299
	4	UNUSED						280-299
	5	UNUSED						280-299
	6		W3016	003	20		33-21-11	280-299
	7		W3016	004	20		33-21-11	280-299
	8		W3016	005	20		33-21-11	280-299
	9	UNUSED						280-299

HOOKUP LIST
D280T132

91-21-51
Section D07000
Page 4
Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D07098P		654+108/291/L024		PLUG- (continued)				280-299
	10	UNUSED						280-299
	11	UNUSED						280-299
	12	UNUSED						280-299
	13	UNUSED						280-299
	14	UNUSED						280-299
	15	UNUSED						280-299
	16	UNUSED						280-299
	17	UNUSED						280-299
	18	UNUSED						280-299
	19	UNUSED						280-299
	20	UNUSED						280-299
	21	UNUSED						280-299
	22	UNUSED						280-299
	23	UNUSED						280-299
	24	UNUSED						280-299

HOOKUP LIST
D280T132

91-21-51
Section D07000
Page 5 End
Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D07100P		0630/291/L024		PLUG-				280-299
	1		W3014	003	20		33-21-11	280-299
	2		W3014	004	20		33-21-11	280-299
	3		W3014	005	20		33-21-11	280-299
	4		W3014	017	20		33-21-11	280-299
	5		W3014	018	20		33-21-11	280-299
	6		W3014	027	20		33-21-11	280-299
	7		W3014	028	20		33-21-11	280-299
	8		W3014	029	20		33-21-11	280-299
	9	UNUSED						280-299
	10	UNUSED						280-299
	11	UNUSED						280-299
	12		W3014	016	20		33-21-11	280-299
	13	UNUSED						280-299
	14	UNUSED						280-299
	15	UNUSED						280-299
	16	UNUSED						280-299
	17	UNUSED						280-299
	18	UNUSED						280-299
	19	UNUSED						280-299
	20	UNUSED						280-299
	21	UNUSED						280-299
	22	UNUSED						280-299
	23	UNUSED						280-299
	24	UNUSED						280-299
D07126J		AE0227/ /		RCPT-P87				278-299
	1		W2112	017	24		21-45-24	278-299
	2		W2112	016	24		21-45-24	278-299
	3	UNUSED						278-299
	4	UNUSED						278-299
	5	UNUSED						278-299
	6	UNUSED						278-299
	7	UNUSED						278-299
	8	UNUSED						278-299
	9	UNUSED						278-299
	10	UNUSED						278-299
	11	UNUSED						278-299
	12		W2112	007	20		21-45-24	278-299
	13		W2112	008	20		21-45-24	278-299
	14		W2112	009	20		21-45-24	278-299

HOOKUP LIST
D280T132

91-21-51
Section D07100
Page 1
Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D07126J		AE0227/ /		RCPT-P87 (continued)				278-299
	15		W2112	010	20		21-45-24	278-299
	16		W2112	011	20		21-45-24	278-299
	17		W2112	012	20		21-45-24	278-299
	18	UNUSED						278-299
	19	UNUSED						278-299
	20	UNUSED						278-299
	21		W2112	202R	18		21-45-24	278-299
	22		W2112	202Z			21-45-24	278-299
	23		W2112	202B	18		21-45-24	278-299
	24	UNUSED						278-299
	25	UNUSED						278-299
	26	UNUSED						278-299
	27	UNUSED						278-299
	28	UNUSED						278-299
	29	UNUSED						278-299
	30	UNUSED						278-299
	31	UNUSED						278-299
	32	UNUSED						278-299
	33	UNUSED						278-299
	34	UNUSED						278-299
	35	UNUSED						278-299
	36	UNUSED						278-299
	37	UNUSED						278-299
	38	UNUSED						278-299
	39	UNUSED						278-299
D07126P D07126P		AE0227/ / AE0227/ /		PLUG- PLUG-P36 PNL				050-099, 278-299 150-199, 275-277
	1		W1232	176	24		21-45-24	050-099, 150-157, 275-299
	1	UNUSED						162-199
	2		W1232	175	24		21-45-24	050-099, 150-157, 275-299
	2	UNUSED						162-199
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D07100

Page 2

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D07126P		AE0227/ /		PLUG- (continued)				050-099, 278-299
D07126P		AE0227/ /		PLUG-P36 PNL (continued)				150-199, 275-277
	11	UNUSED						ALL
	12		W1232	510	20		21-45-24	ALL
	13		W1232	511	20		21-45-24	ALL
	14		W1232	512	20		21-45-24	ALL
	15		W1232	514	20		21-45-24	ALL
	16		W1232	515	20		21-45-24	ALL
	17		W1232	516	20		21-45-24	ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	DK	W1232	205R	18		21-45-24	050-099
	21		W1232	205R	18		21-45-24	150-199, 275-299
	22		W1232	205Z			21-45-24	ALL
	23	DK	W1232	205B	18		21-45-24	050-099
	23		W1232	205B	18		21-45-24	150-199, 275-299
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						050-099, 162-199
	36		W1232	520	20		SPARE	150-157, 275-299
	37	UNUSED						050-099, 162-199
	37		W1232	521	20		SPARE	150-157, 275-299
	38	UNUSED						050-099, 162-199
	38		W1232	522	20		SPARE	150-157, 275-299
	39	UNUSED						050-099, 162-199
	39		W1232	523	20		SPARE	150-157, 275-299
D07160J		AE0305/ /		RCPT-E1-4				ALL
	1		W0471	117	22		78-36-11	ALL
	2		W0471	118	22		78-36-11	ALL

HOOKUP LIST

D280T132

91-21-51
 Section D07100
 Page 3
 Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D07160J		AE0305/ /		RCPT-E1-4 (continued)				ALL
	3		W0471	121	22		78-36-11	ALL
	4		W0471	120	22		78-36-11	ALL
	5		W0471	124	22		78-36-11	ALL
	6		W0471	123	22		78-36-11	ALL
	7		W0471	119	22		78-36-11	ALL
	8		W0471	122	22		78-36-11	ALL
	9		W0471	125	22		78-36-11	ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D07160P		AE0305/ /		PLUG E1-4				ALL
	1		W0107	078	22		78-36-11	ALL
	2		W0107	080	22		78-36-11	ALL
	3		W0107	081	22		78-36-11	ALL
	4		W0107	082	22		78-36-11	ALL
	5		W0107	091	22		78-36-11	ALL
	6		W0107	085	22		78-36-11	ALL
	7		W0107	084	22		78-36-11	ALL
	8		W0107	083	22		78-36-11	ALL
	9		W0107	087	22		78-36-11	ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D07162J		AE0317/ /		RCPT				ALL
	1		W0656	801	22		78-36-21	ALL
	2		W0656	802	22		78-36-21	ALL
	3		W0656	803	22		78-36-21	ALL
	4		W0656	804	22		78-36-21	ALL
	5		W0656	805	22		78-36-21	ALL
	6		W0656	806	22		78-36-21	ALL
	7		W0656	807	22		78-36-21	ALL
	8		W0656	808	22		78-36-21	ALL
	9		W0656	809	22		78-36-21	ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D07100

Page 4

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D07162P		E1-4/ /		PLUG-E1-4				ALL
	1		W0117	070	22		78-36-21	ALL
	2		W0117	071	22		78-36-21	ALL
	3		W0117	072	22		78-36-21	ALL
	4		W0117	073	22		78-36-21	ALL
	5		W0117	074	22		78-36-21	ALL
	6		W0117	076	22		78-36-21	ALL
	7		W0117	077	22		78-36-21	ALL
	8		W0117	078	22		78-36-21	ALL
	9		W0117	079	22		78-36-21	ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D07170J		AW0310/ /		RCPT-RH COWL				050-099, 150-199, 275-278
	1		W0352	124	18		78-34-11	050-099, 150-199, 275-278
	2	UNUSED						050-099, 150-199, 275-278
	3	UNUSED						050-099, 150-199, 275-278
	= CC	L	W0352	124Z			78-34-11	050-099, 150-199, 275-278
D07170P		0/0/R004		PLUG-RH COWL				ALL
	1		W3526	101	18		78-34-11	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	= CC	G7	W3526	101Z			78-34-11	ALL
D07172J		AW0311/ /		RCPT-LH COWL				050-099, 150-199, 275-278
	1		W0352	125	18		78-34-11	050-099, 150-199, 275-278
	2	UNUSED						050-099, 150-199, 275-278
	3	UNUSED						050-099, 150-199, 275-278
	= CC	L	W0352	125Z			78-34-11	050-099, 150-199, 275-278
D07172P		79/0/R018		PLUG-LH COWL				ALL
	1		W3528	101	18		78-34-11	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	= CC	G7	W3528	101Z			78-34-11	ALL
D07190J		AW0310/ /		RCPT-RH COWL				050-099, 150-166, 275-299
	1		W0374	124	18		78-34-21	050-099, 150-166, 275-299

HOOKUP LIST
D280T132

91-21-51
Section D07100
Page 5
Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D07190J		AW0310/ /		RCPT-RH COWL (continued)				050-099, 150-166, 275-299
	2	UNUSED						050-099, 150-166, 275-299
	3	UNUSED						050-099, 150-166, 275-299
	= CC	L	W0374	124Z			78-34-21	050-099, 150-166, 275-299
D07192J		AW0311/ /		RCPT-LH COWL				050-099, 150-166, 275-299
	1		W0374	125	18		78-34-21	050-099, 150-166, 275-299
	2	UNUSED						050-099, 150-166, 275-299
	3	UNUSED						050-099, 150-166, 275-299
	= CC	L	W0374	125Z			78-34-21	050-099, 150-166, 275-299

HOOKUP LIST
D280T132

91-21-51
Section D07100
Page 6 End
Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D07546J		1098/FS/L		RECP-L WING (SB 27A0140)				050-099, 150-199, 275-278
D07546J		1098/FS/		RECP-L WING				280-299
	1		W0430	216R	18		27-89-11	ALL
	2		W0430	216B	18		27-89-11	ALL
	3	UNUSED						ALL
D07546P		1098/FS/L		PLUG				050-099, 151
	1		W0401	002	20		27-89-11	050-099, 151
	2		W0401	001	20		27-89-11	050-099, 151
	3	UNUSED						050-099, 151
	DED		W0401	001Z			27-89-11	050-099, 151
	DED		W0401	002Z			27-89-11	050-099, 151
D07550J		1098/FS/R		RECP-R-WING (SB 27A0140)				050-099, 150-199, 275-278
D07550J		1098/FS/		RECP-R-WING				280-299
	1		W0480	216R	18		27-89-11	ALL
	2		W0480	216B	18		27-89-11	ALL
	3	UNUSED						ALL
D07550P		1098/FS/R		PLUG				050-099, 151
	1		W0403	002	20		27-89-11	050-099, 151
	2		W0403	001	20		27-89-11	050-099, 151
	3	UNUSED						050-099, 151
	DED		W0403	001Z			27-89-11	050-099, 151
	DED		W0403	002Z			27-89-11	050-099, 151

HOOKUP LIST

D280T132

91-21-51

Section D07500

Page 1 End

Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D07960J		AF0204/ /		RCPT-P61				ALL
	1		W0062	50A	24		21-25-11	ALL
	2		W0062	50E	24		21-26-11	ALL
	3		W0062	50V	22		21-51-11	ALL
	4		W0062	50W	24		21-51-23	ALL
	5		W0062	50X	24		21-51-23	ALL
	6		W0062	50Y	24		21-52-41	ALL
	7		W0062	518	24		21-53-11	ALL
	8		W0062	50Z	24		21-53-11	ALL
	9		W0062	51A	24		21-53-22	ALL
	10		W0062	51D	24		21-53-22	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13		W0062	058	24		21-61-51	ALL
	14		W0062	51K	24		21-58-14	ALL
	15		W0062	63P	24		21-58-13	ALL
	16		W0062	090	24		21-61-61	ALL
	17		W0062	68F	24		21-45-22	ALL
	18		W0062	091	24		21-61-61	ALL
	19		W0062	079	24		21-61-71	ALL
	20		W0062	088	24		21-61-71	ALL
	21		W0062	743	20		28-31-12	050-099, 155-199, 276-299
	21	UNUSED						150-154, 275
	22		W0062	79A	20		30-81-11	050-099, 150-199
	22	UNUSED						275-299
	23	UNUSED						ALL
	24	UNUSED						ALL
	25		W0062	51U	24		21-61-51	ALL
	26		W0062	51V	24		21-61-51	ALL
	27		W0062	66D	24		21-24-11	050-099, 150-199
	27	UNUSED						275-299
	28		W0062	025	24		21-45-21	ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
D07960P		AF0204/ /		PLUG-P61				ALL
	1		W0040	107	24		21-25-11	ALL
	2		W0040	163	24		21-26-11	ALL
	3		W0040	113	22		21-51-11	ALL
	4		W0040	134	24		21-51-23	ALL

HOOKUP LIST

D280T132

91-21-51

Section D07900

Page 1

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D07960P		AF0204/ /		PLUG-P61 (continued)				ALL
	5		W0040	133	24		21-51-23	ALL
	6		W0040	120	24		21-52-41	ALL
	7		W0040	116	24		21-53-11	ALL
	8		W0040	115	24		21-53-11	ALL
	9		W0040	160	24		21-53-22	ALL
	10		W0040	161	24		21-53-22	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13		W0040	513	24		21-61-51	ALL
	14		W0040	117	24		21-58-14	ALL
	15		W0040	112	24		21-58-13	ALL
	16		W0040	605	24		21-61-61	050-099, 275-299
	16		W0040	514	24		21-61-61	150-199
	17		W0040	70B	24		21-45-22	ALL
	18		W0040	606	24		21-61-61	050-099, 275-299
	18		W0040	515	24		21-61-61	150-199
	19		W0040	511	24		21-61-71	ALL
	20		W0040	512	24		21-61-71	ALL
	21		W0040	517	20		28-31-12	050-099, 155-199, 276-299
	21	UNUSED						150-154, 275
	22		W0040	825	20		30-81-11	050-099, 150-199
	22	UNUSED						275-299
	23	UNUSED						ALL
	24	UNUSED						ALL
	25		W0040	077	24		21-61-51	ALL
	26		W0040	165	24		21-61-51	ALL
	27		W0040	721	24		21-24-11	050-099, 150-199
	27	UNUSED						275-299
	28		W0040	760	24		21-45-21	ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
D07962J		AF0204/ /		RCPT-P61				ALL
	1		W0062	072	24		36-11-11	ALL
	2		W0062	61A	24		36-11-11	ALL
	3		W0062	084	24		36-11-31	ALL
	4		W0062	61B	24		36-11-31	ALL
	5	DL	W0062	61E	18		36-11-51	ALL
	6		W0062	61F	24		36-11-51	ALL

HOOKUP LIST

D280T132

91-21-51

Section D07900

Page 2

Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D07962J		AF0204/ /		RCPT-P61 (continued)				ALL
	7		W0062	58E	24		36-21-11	ALL
	8		W0062	61H	24		36-21-11	ALL
	9	DL	W0062	61K	18		38-32-14	ALL
	10		W0062	54S	24		29-31-11	ALL
	11	UNUSED						ALL
	12	DL	W0062	61N	18		38-32-11	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16		W0062	53E	24		24-11-11	ALL
	17	UNUSED						ALL
	18		W0062	770	22		24-25-11	ALL
	19		W0062	660	24		24-51-13	ALL
	20		W0062	53J	24		24-51-71	ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24		W0062	54N	22		52-11-12	050-099, 150-199
	24		W0062	54N	20		52-11-12	275-299
	25	UNUSED						ALL
	26	UNUSED						ALL
	27		W0062	56F	24		30-31-11	ALL
	28		W0062	56A	24		30-41-11	ALL
	29	UNUSED						ALL
	30	UNUSED						050-099, 275-299
	30		W0062	65N	24		30-34-31	150-199
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	DED		W0062	54SZ			29-31-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D07900

Page 3

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D07962P		AF0204/ /		PLUG-P61				ALL
	1		W0040	167	24		36-11-11	ALL
	2		W0040	166	24		36-11-11	ALL
	3		W0040	169	24		36-11-31	ALL
	4		W0040	168	24		36-11-31	ALL
	5	DK	W0040	719	18		36-11-51	ALL
	6		W0040	702	24		36-11-51	ALL
	7		W0040	151	24		36-21-11	ALL
	8		W0040	179	24		36-21-11	ALL
	9	GB	W0040	780	18		38-32-14	050-099
	9	DK	W0040	780	18		38-32-14	150-199, 275-299
	10		W0040	178	24		29-31-11	ALL
	11	UNUSED						ALL
	12	DK	W0040	150	18		38-32-11	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16		W0040	087	24		24-11-11	ALL
	17	UNUSED						ALL
	18		W0040	762	22		24-25-11	ALL
	19		W0040	066	20		24-51-13	ALL
	20		W0040	023	22		24-51-71	ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24		W0040	199	22		52-11-12	050-099, 150-199
	24		W0040	199	20		52-11-12	275-299
	25	UNUSED						ALL
	26	UNUSED						ALL
	27		W0040	093	24		30-31-11	ALL
	28		W0040	135	24		30-41-11	ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D07900

Page 4

Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D07962P		AF0204/ /		PLUG-P61 (continued)				ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
D07964J		AF0204/ /		RCPT-P61				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W0062	52A	24		27-11-11	ALL
	7	UNUSED						ALL
	8		W0062	52G	20		27-21-11	ALL
	9		W0062	52H	24		27-28-11	ALL
	10		W0062	52J	24		27-28-13	ALL
	11		W0062	52K	24		27-38-11	ALL
	12		W0062	52L	24		27-51-31	ALL
	13		W0062	52M	22		27-51-51	ALL
	14		W0062	55B	24		27-51-61	ALL
	15		W0062	55A	24		27-51-61	ALL
	16		W0062	52N	24		27-58-11	ALL
	17		W0062	52S	24		27-58-11	ALL
	18		W0062	52V	24		27-58-11	ALL
	19		W0062	55C	24		27-58-21	ALL
	20		W0062	53R	20		27-62-11	ALL
	21		W0062	53M	24		27-81-31	ALL
	22		W0062	52B	24		27-18-11	ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
D07964P		AF0204/ /		PLUG-P61				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D07900

Page 5

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D07964P		AF0204/ /		PLUG-P61 (continued)				ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W0040	086	24		27-11-11	ALL
	7	UNUSED						ALL
	8		W0040	068	20		27-21-11	ALL
	9		W0040	069	24		27-28-11	ALL
	10		W0040	070	24		27-28-13	ALL
	11		W0040	182	24		27-38-11	ALL
	12		W0040	071	24		27-51-31	ALL
	13		W0040	076	24		27-51-51	ALL
	14		W0040	074	24		27-51-61	ALL
	15		W0040	073	24		27-51-61	ALL
	16		W0040	079	24		27-58-11	ALL
	17		W0040	078	24		27-58-11	ALL
	18		W0040	083	24		27-58-11	ALL
	19		W0040	082	24		27-58-21	ALL
	20		W0040	089	20		27-62-11	ALL
	21		W0040	084	24		27-81-31	ALL
	22		W0040	067	24		27-18-11	ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
D07966J		AF0204/ /		RCPT-P61				ALL
	1		W0062	55P	22		29-11-11	ALL
	2		W0062	053	22		32-45-11	050-099, 150-199, 277-299
	2		W0062	053	24		32-45-11	275-276
	3	UNUSED						ALL
	4	FL	W0062	80V	16		73-21-11	ALL
	5		W0062	80C	22		23-51-41	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D07900
Page 6
Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D07966J		AF0204/ /		RCPT-P61 (continued)				ALL
	9	UNUSED						ALL
	10		W0062	54R	24		29-31-11	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13		W0062	01J	24		28-43-11	ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18		W0062	57A	24		32-09-11	ALL
	19	DL	W0062	57B	18		32-35-11	ALL
	20	UNUSED						ALL
	21		W0062	57K	24		32-42-11	ALL
	22		W0062	57L	24		32-42-11	ALL
	23		W0062	57S	24		32-46-11	ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
D07966P		AF0204/ /		PLUG-P61				ALL
	1		W0040	198	22		29-11-11	ALL
	2		W0040	20B	22		32-45-11	ALL
	3	UNUSED						ALL
	4	FM	W0040	519	16		73-21-11	ALL
	5		W0040	145	22		23-51-41	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10		W0040	132	24		29-31-11	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13		W0040	105	24		28-43-11	ALL
	14	UNUSED						ALL
	15	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D07900
Page 7
Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D07966P		AF0204/ /		PLUG-P61 (continued)				ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18		W0040	136	24		32-09-11	ALL
	19	DK	W0040	052	18		32-35-11	ALL
	20	UNUSED						ALL
	21		W0040	060	24		32-42-11	ALL
	22		W0040	059	24		32-42-11	ALL
	23		W0040	196	24		32-46-11	ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
D07968J		AF0204/ /		RCPT-P61				ALL
	1		W0062	59K	24		33-11-11	ALL
	2		W0062	59W	22		33-16-12	ALL
	3		W0062	59X	22		33-16-12	ALL
	4		W0062	64N	22		33-16-17	ALL
	5	UNUSED						ALL
	6	FL	W0062	61L	16		73-21-20	ALL
	7	UNUSED						ALL
	8		W0062	59E	22		33-26-11	ALL
	9	FL	W0062	59D	16		33-26-21	ALL
	10		W0062	827	20		27-13-11	ALL
	11		W0062	817	20		27-23-11	ALL
	12	UNUSED						ALL
	13		W0062	66R	24		33-11-13	ALL
	14		W0062	59R	24		33-14-21	ALL
	15		W0062	59N	24		33-13-11	ALL
	16		W0062	62B	24		73-21-17	ALL
	17		W0062	62K	24		75-23-11	ALL
	18	FL	W0062	62L	16		73-21-20	ALL
	19	UNUSED						050-099, 275-299
	19		W0062	62M	20		75-32-11	150-157
	19		W0062	62M	20		SPARE	162-199
	20	UNUSED						050-099, 275-299

HOOKUP LIST

D280T132

91-21-51

Section D07900

Page 8

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D07968J		AF0204/ /		RCPT-P61 (continued)				ALL
	20		W0062	62N	20		75-32-11	150-157
	20		W0062	62N	20		SPARE	162-199
	21		W0062	62P	20		73-21-19	ALL
	22	UNUSED						ALL
	23		W0062	62T	24		77-31-11	ALL
	24		W0062	62W	24		78-34-11	ALL
	25		W0062	63A	24		78-36-11	ALL
	26		W0062	63B	24		78-36-11	ALL
	27		W0062	63C	22		79-32-11	ALL
	28	UNUSED						ALL
	29		W0062	66N	24		73-33-11	ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	DED		W0062	59XZ			33-16-12	ALL
D07968P		AF0204/ /		PLUG-P61				ALL
	1		W0040	138	24		33-11-11	ALL
	2		W0040	110	22		33-16-12	ALL
	3		W0040	111	22		33-16-12	ALL
	4		W0040	114	22		33-16-17	ALL
	5	UNUSED						ALL
	6	FM	W0040	775	16		73-21-20	ALL
	7	UNUSED						ALL
	8		W0040	153	22		33-26-11	ALL
	9	FM	W0040	157	16		33-26-21	ALL
	10		W0040	090	20		27-13-11	ALL
	11		W0040	091	20		27-23-11	050-099
	11	DK	W0040	091	18		27-23-11	150-199, 275-299
	12	UNUSED						ALL
	13		W0040	727	24		33-11-13	ALL

HOOKUP LIST

D280T132

91-21-51

Section D07900

Page 9

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D07968P		AF0204/ /		PLUG-P61 (continued)				ALL
	14		W0040	144	24		33-14-21	ALL
	15		W0040	140	24		33-13-11	ALL
	16		W0040	104	24		73-21-17	ALL
	17		W0040	126	24		75-23-11	ALL
	18	FM	W0040	101	16		73-21-20	050-099, 275-299
	18		W0040	101	20		73-21-20	150-199
	19	UNUSED						ALL
	20	UNUSED						ALL
	21		W0040	103	20		73-21-19	ALL
	22	UNUSED						ALL
	23		W0040	095	24		77-31-11	ALL
	24		W0040	096	24		78-34-11	ALL
	25		W0040	124	24		78-36-11	ALL
	26		W0040	035	24		78-36-11	ALL
	27		W0040	100	22		79-32-11	ALL
	28	UNUSED						ALL
	29		W0040	098	24		73-33-11	ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	DED		W0040	111Z			33-16-12	ALL
D07970J		AF0204/ /		RCPT-P61				ALL
	1	UNUSED						ALL
	2		W0062	59Y	22		33-16-12	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W0062	63F	22		31-41-11	ALL
	6		W0062	59F	24		33-24-11	ALL
	7	FL	W0062	58P	16		33-42-11	ALL
	8	FL	W0062	58R	16		33-42-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D07900

Page 10

Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D07970J		AF0204/ /		RCPT-P61 (continued)				ALL
	9		W0062	59V	24		33-16-11	ALL
	10		W0062	807	20		27-13-11	ALL
	11		W0062	837	20		27-23-11	ALL
	12		W0062	66H	20		33-42-21	050-099
	12	DL	W0062	66H	18		33-42-21	150-199, 275-299
	13		W0062	66J	20		33-42-21	050-099
	13	DL	W0062	66J	18		33-42-21	150-199, 275-299
	14	UNUSED						ALL
	15		W0062	59P	22		33-13-18	ALL
	16		W0062	66P	24		33-11-13	ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	DED		W0062	59YZ			33-16-12	ALL
	DED		W0062	807Z			27-13-11	ALL
	DED		W0062	837Z			27-23-11	ALL
D07970P		AF0204/ /		PLUG-P61				ALL
	1	UNUSED						ALL
	2		W0040	106	22		33-16-12	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W0040	137	22		31-41-11	ALL
	6		W0040	706	24		33-24-11	ALL
	7	FM	W0040	048	16		33-42-11	ALL
	8	FM	W0040	049	16		33-42-11	ALL
	9		W0040	146	24		33-16-11	ALL
	10		W0040	055	20		27-13-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D07900

Page 11

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D07970P		AF0204/ /		PLUG-P61 (continued)				ALL
	11		W0040	056	20		27-23-11	050-099
	11	DK	W0040	056	18		27-23-11	150-199, 275-299
	12		W0040	722	20		33-42-21	050-099
	12	DK	W0040	722	18		33-42-21	150-199, 275-299
	13		W0040	125	20		33-42-21	050-099
	13	DK	W0040	125	18		33-42-21	150-199, 275-299
	14	UNUSED						ALL
	15		W0040	142	22		33-13-18	ALL
	16		W0040	750	24		33-11-13	ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	DED		W0040	055Z			27-13-11	ALL
	DED		W0040	056Z			27-23-11	ALL
	DED		W0040	106Z			33-16-12	ALL
D07972J		AF0204/ /		RCPT-P61				ALL
	1		W0066	50A	24		21-25-21	ALL
	2		W0066	50D	24		21-26-11	ALL
	3		W0066	50V	24		21-51-21	ALL
	4		W0066	50W	24		21-51-13	ALL
	5		W0066	50X	24		21-51-13	ALL
	6		W0066	184	24		21-61-81	ALL
	7		W0066	518	24		21-53-21	ALL
	8		W0066	50Z	24		21-53-21	ALL
	9		W0066	51A	24		21-53-12	ALL
	10		W0066	51D	24		21-53-12	ALL
	11		W0066	51E	24		21-58-11	ALL

HOOKUP LIST
D280T132

91-21-51
Section D07900
Page 12
Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D07972J		AF0204/ /		RCPT-P61 (continued)				ALL
	12		W0066	543	24		21-61-41	ALL
	13		W0066	545	24		21-61-41	ALL
	14		W0066	185	24		21-61-81	ALL
	15		W0066	51J	24		21-58-14	ALL
	16		W0066	51S	24		21-58-15	ALL
	17		W0066	51Y	24		21-58-16	ALL
	18	UNUSED						050-099
	18	DL	W0066	52T	18		32-71-11	150-199, 275-299
	19		W0066	52H	24		21-61-11	ALL
	20		W0066	52K	24		21-61-11	ALL
	21		W0066	52N	24		21-61-21	ALL
	22		W0066	52P	24		21-61-21	ALL
	23		W0066	52U	24		21-61-31	ALL
	24		W0066	52V	24		21-61-31	ALL
	25		W0066	173	22		30-46-11	ALL
	26		W0066	172	22		21-26-31	ALL
	27		W0066	743	20		28-31-12	050-099, 155-199, 276-299
	27	UNUSED						150-154, 275
	28		W0066	79A	20		30-81-11	050-099, 150-199
	28	UNUSED						275-299
	29		W0066	521	22		28-22-31	ALL
	30		W0066	536	22		28-22-31	ALL
	31	UNUSED						ALL
	DED		W0066	521Z			28-22-31	ALL
	DED		W0066	536Z			28-22-31	ALL
D07972P		AF0204/ /		PLUG-P61				ALL
	1		W0042	040	24		21-25-21	ALL
	2		W0042	043	24		21-26-11	ALL
	3		W0042	030	24		21-51-21	ALL
	4		W0042	134	24		21-51-13	ALL
	5		W0042	133	24		21-51-13	ALL
	6		W0042	01B	24		21-61-81	ALL
	7		W0042	038	24		21-53-21	ALL
	8		W0042	037	24		21-53-21	ALL
	9		W0042	033	24		21-53-12	ALL
	10		W0042	034	24		21-53-12	ALL
	11		W0042	177	24		21-58-11	ALL
	12		W0042	743	24		21-61-41	ALL
	13		W0042	744	24		21-61-41	ALL

HOOKUP LIST

D280T132

91-21-51

Section D07900

Page 13

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D07972P		AF0204/ /		PLUG-P61 (continued)				ALL
	14		W0042	01C	24		21-61-81	ALL
	15		W0042	064	24		21-58-14	ALL
	16		W0042	042	24		21-58-15	ALL
	17		W0042	187	24		21-58-16	ALL
	18	UNUSED						050-099
	18	DK	W0042	715	18		32-71-11	150-199, 275-299
	19		W0042	052	24		21-61-11	ALL
	20		W0042	053	24		21-61-11	ALL
	21		W0042	054	24		21-61-21	ALL
	22		W0042	055	24		21-61-21	ALL
	23		W0042	056	24		21-61-31	ALL
	24		W0042	057	24		21-61-31	ALL
	25		W0042	531	22		30-46-11	ALL
	26		W0042	01A	22		21-26-31	ALL
	27		W0042	538	20		28-31-12	050-099, 155-199, 276-299
	27	UNUSED						150-154, 275
	28		W0042	825	20		30-81-11	050-099, 150-199
	28	UNUSED						275-299
	29		W0042	546	20		28-22-31	ALL
	30		W0042	547	20		28-22-31	ALL
	31	UNUSED						ALL
	DED		W0042	546Z			28-22-31	ALL
	DED		W0042	547Z			28-22-31	ALL
D07974J		AF0204/ /		RCPT-P61				ALL
	1		W0066	077	24		36-11-21	ALL
	2		W0066	61A	24		36-11-21	ALL
	3		W0066	61B	20		36-11-41	ALL
	4		W0066	61C	24		36-11-41	ALL
	5	DL	W0066	61E	18		36-11-52	050-099, 155-199, 276-299
	5		W0066	61E	22		36-11-52	150-154, 275
	6		W0066	61F	24		36-11-52	ALL
	7		W0066	61H	24		36-21-11	ALL
	8	UNUSED						050-099, 155-199, 275-299
	8	DL	W0066	61J	18		36-11-52	150-154
	9	UNUSED						ALL
	10	UNUSED						ALL
	11		W0066	61M	24		38-15-11	ALL
	12	DL	W0066	61N	18		38-32-11	050-099, 150-156, 162-165, 275-276
	12	DL	W0066	61X	18		38-32-11	157, 166-199, 277-299

HOOKUP LIST

D280T132

91-21-51

Section D07900

Page 14

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D07974J		AF0204/ /		RCPT-P61 (continued)				ALL
	13	DL	W0066	61K	18		38-32-14	ALL
	14	UNUSED						050-099, 150-199
	14		W0066	72A	20		24-32-41	275-299
	15	UNUSED						ALL
	16		W0066	53E	24		24-11-21	ALL
	17	UNUSED						ALL
	18		W0066	53F	20		24-41-11	ALL
	19		W0066	669	24		24-51-23	ALL
	20		W0066	55Z	24		24-51-52	ALL
	21		W0066	53U	22		25-29-11	ALL
	22	UNUSED						ALL
	23		W0066	63R	24		52-71-11	ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26		W0066	56A	22		30-11-11	ALL
	27		W0066	56F	24		30-31-21	ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38		W0066	66R	24		35-11-13	ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
D07974P		AF0204/ /		PLUG-P61				ALL
	1		W0042	013	24		36-11-21	ALL
	2		W0042	746	24		36-11-21	ALL
	3		W0042	158	20		36-11-41	ALL
	4		W0042	120	24		36-11-41	ALL
	5	DK	W0042	178	18		36-11-52	ALL
	6		W0042	179	24		36-11-52	ALL
	7		W0042	164	24		36-21-11	ALL
	8	UNUSED						050-099, 155-199, 275-299

HOOKUP LIST

D280T132

91-21-51

Section D07900

Page 15

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D07974P		AF0204/ /		PLUG-P61 (continued)				ALL
	8	DK	W0042	798	18		36-11-52	150-154
	9	UNUSED						ALL
	10	UNUSED						ALL
	11		W0042	165	24		38-15-11	ALL
	12	DK	W0042	108	18		38-32-11	ALL
	13	DK	W0042	788	18		38-32-14	ALL
	14	UNUSED						050-099, 150-199
	14		W0042	722	20		24-32-41	275-299
	15	UNUSED						ALL
	16		W0042	170	24		24-11-21	ALL
	17	UNUSED						ALL
	18		W0042	183	20		24-41-11	ALL
	19		W0042	100	20		24-51-23	ALL
	20		W0042	001	24		24-51-52	ALL
	21		W0042	063	22		25-29-11	ALL
	22	UNUSED						ALL
	23		W0042	166	24		52-71-11	ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26		W0042	136	22		30-11-11	ALL
	27		W0042	027	24		30-31-21	ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38		W0042	720	24		35-11-13	ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
D07976J		AF0204/ /		RCPT-P61				ALL
	1		W0066	64W	20		26-16-21	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D07900
Page 16
Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D07976J		AF0204/ /		RCPT-P61 (continued)				ALL
	4	FL	W0066	80A	16		73-21-11	ALL
	5	UNUSED						ALL
	6	DL	W0066	55E	18		27-81-11	ALL
	7	DL	W0066	55H	18		27-81-21	ALL
	8	DL	W0066	53X	18		27-51-11	ALL
	9	UNUSED						ALL
	10		W0066	807	20		27-13-11	ALL
	11		W0066	817	20		27-23-11	ALL
	12	UNUSED						ALL
	13		W0066	771	22		24-25-11	ALL
	14		W0066	55A	24		27-51-61	ALL
	15		W0066	55B	24		27-51-61	ALL
	16	UNUSED						ALL
	17		W0066	64X	20		26-16-21	ALL
	18	UNUSED						ALL
	19		W0066	55C	24		27-58-21	ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22		W0066	64B	24		27-18-11	ALL
	23		W0066	64C	24		27-38-11	ALL
	24	UNUSED						ALL
D07976P		AF0204/ /		PLUG-P61				ALL
	1		W0042	195	20		26-16-21	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	FM	W0042	539	16		73-21-11	ALL
	5	UNUSED						ALL
	6	DK	W0042	004	18		27-81-11	ALL
	7	DK	W0042	005	18		27-81-21	ALL
	8	DK	W0042	003	18		27-51-11	ALL
	9	UNUSED						ALL
	10		W0042	101	20		27-13-11	ALL
	11		W0042	102	20		27-23-11	ALL
	12	UNUSED						ALL
	13		W0042	758	22		24-25-11	ALL
	14		W0042	007	24		27-51-61	ALL
	15		W0042	006	24		27-51-61	ALL
	16	UNUSED						ALL
	17		W0042	180	20		26-16-21	ALL

HOOKUP LIST

D280T132

91-21-51

Section D07900

Page 17

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D07976P		AF0204/ /		PLUG-P61 (continued)				ALL
	18	UNUSED						ALL
	19		W0042	002	24		27-58-21	ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22		W0042	018	24		27-18-11	ALL
	23		W0042	019	24		27-38-11	ALL
	24	UNUSED						ALL
D07978J		AF0204/ /		RCPT-P61				ALL
	1		W0066	55P	22		29-11-21	ALL
	2		W0066	55X	24		29-33-11	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W0066	59H	22		33-25-11	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	DL	W0066	59T	18		26-13-11	050-099, 150-199 275-299
	16	UNUSED						ALL
	17	UNUSED						ALL
	18		W0066	57A	24		32-09-12	ALL
	19		W0066	57B	24		32-09-21	ALL
	20		W0066	57C	22		32-31-11	ALL
	21		W0066	57K	24		32-42-11	ALL
	22		W0066	57L	24		32-42-12	ALL
	23		W0066	57G	24		32-41-11	ALL
	24	UNUSED						ALL
	DED		W0066	55XZ			29-33-11	ALL
D07978P		AF0204/ /		PLUG-P61				ALL
	1		W0042	036	22		29-11-21	ALL
	2		W0042	028	24		29-33-11	ALL
	3	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D07900
Page 18
Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D07978P		AF0204/ /		PLUG-P61 (continued)				ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W0042	014	22		33-25-11	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	DK	W0042	20B	18		26-13-11	050-099, 150-199 275-299
	16	UNUSED						ALL
	17	UNUSED						ALL
	18		W0042	603	24		32-09-12	ALL
	19		W0042	058	24		32-09-21	ALL
	20		W0042	160	22		32-31-11	ALL
	21		W0042	140	24		32-42-11	ALL
	22		W0042	031	24		32-42-12	ALL
	23		W0042	723	24		32-41-11	ALL
	24	UNUSED						ALL
D07980J		AF0204/ /		RCPT-P61				ALL
	1	UNUSED						ALL
	2		W0070	763R	22		26-11-11	ALL
	3		W0070	770R	22		26-11-12	ALL
	4		W0070	762R	22		26-11-11	ALL
	5		W0070	120	22		21-28-11	ALL
	6		W0070	722R	22		26-15-11	ALL
	7		W0070	897R	24		26-16-11	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	FL	W0070	03G	16		28-25-11	ALL
	12		W0070	03H	22		28-25-11	050-099
	12		W0070	03H	20		28-25-11	150-199, 275-299
	13	UNUSED						ALL
	14		W0070	123	20		78-34-11	ALL
	15		W0070	03S	22		29-11-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D07900

Page 19

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D07980J		AF0204/ /		RCPT-P61 (continued)				ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21		W0070	05M	22		33-16-12	ALL
	22		W0070	05N	22		33-16-12	ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25		W0070	14C	20		33-11-13	ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29		W0070	05K	24		33-16-11	ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33		W0070	08K	24		73-21-18	ALL
	34		W0070	08L	24		73-21-18	ALL
	35		W0070	09N	20		76-11-11	ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	DL	W0070	11A	18		80-11-21	ALL
	39		W0070	12G	24		73-21-15	ALL
	40		W0070	11P	20		27-41-11	ALL
	41	UNUSED						ALL
	DED		W0070	120Z			21-28-11	050-099
	DED		W0070	05NZ			33-16-12	ALL
	DED		W0070	123Z			78-34-11	ALL
D07980P		AF0204/ /		PLUG-P61				ALL
	1	UNUSED						ALL
	2		W0044	171R	22		26-11-11	ALL
	3		W0044	044R	22		26-11-12	ALL
	4		W0044	043R	22		26-11-11	ALL
	5		W0044	01A	22		21-28-11	ALL
	6		W0044	033R	22		26-15-11	ALL
	7		W0044	750R	24		26-16-11	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D07900
Page 20
Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D07980P		AF0204/ /		PLUG-P61 (continued)				ALL
	10	UNUSED						ALL
	11	FM	W0044	019	16		28-25-11	ALL
	12		W0044	707	22		28-25-11	050-099
	12		W0044	707	20		28-25-11	150-199, 275-299
	13	UNUSED						ALL
	14		W0044	511	20		78-34-11	ALL
	15		W0044	166	22		29-11-11	ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21		W0044	015	22		33-16-12	ALL
	22		W0044	038	22		33-16-12	ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25		W0044	011	20		33-11-13	ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29		W0044	003	24		33-16-11	ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33		W0044	071	24		73-21-18	ALL
	34		W0044	072	24		73-21-18	ALL
	35		W0044	183	22		76-11-11	ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	DK	W0044	179	18		80-11-21	ALL
	39		W0044	081	24		73-21-15	ALL
	40		W0044	023	20		27-41-11	ALL
	41	UNUSED						ALL
	DED		W0044	038Z			33-16-12	ALL
D07982J		AF0204/ /		RCPT-P61				ALL
	1		W0070	724R	22		26-15-12	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W0070	772R	22		26-11-21	ALL

HOOKUP LIST

D280T132

91-21-51

Section D07900

Page 21

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D07982J		AF0204/ /		RCPT-P61 (continued)				ALL
	5		W0070	780R	22		26-11-22	ALL
	6		W0070	721R	22		26-15-11	ALL
	7		W0070	898R	24		26-16-11	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	DL	W0070	13E	18		28-41-12	ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15		W0070	03V	22		29-11-21	ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20		W0070	129	20		78-34-21	ALL
	21		W0070	05P	22		33-16-12	ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24		W0070	05Y	22		33-16-17	ALL
	25		W0070	05A	24		33-11-11	ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30		W0070	05J	24		33-13-11	ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33		W0070	09K	24		73-21-18	ALL
	34		W0070	09L	24		73-21-18	ALL
	35		W0070	08N	20		76-11-11	ALL
	36	UNUSED						ALL
	37		W0070	09T	24		73-21-14	ALL
	38	DL	W0070	10A	18		80-11-11	ALL
	39		W0070	10M	24		80-11-11	ALL
	40		W0070	11R	20		27-41-21	ALL
	41	UNUSED						ALL
	DED		W0070	05PZ			33-16-12	ALL
	DED		W0070	05YZ			33-16-17	ALL
	DED		W0070	08NZ			76-11-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D07900

Page 22

Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D07982J		AF0204/ /		RCPT-P61 (continued)				ALL
	DED		W0070	09KZ			73-21-18	ALL
	DED		W0070	09LZ			73-21-18	ALL
	DED		W0070	10AZ			80-11-11	ALL
D07982P		AF0204/ /		PLUG-P61				ALL
	1		W0044	034R	22		26-15-12	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W0044	030R	22		26-11-21	ALL
	5		W0044	032R	22		26-11-22	ALL
	6		W0044	749R	22		26-15-11	ALL
	7		W0044	025R	24		26-16-11	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	DK	W0044	738	18		28-41-12	ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15		W0044	181	22		29-11-21	ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20		W0044	512	20		78-34-21	ALL
	21		W0044	040	22		33-16-12	ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24		W0044	041	22		33-16-17	ALL
	25		W0044	036	24		33-11-11	ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30		W0044	012	24		33-13-11	ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33		W0044	073	24		73-21-18	ALL
	34		W0044	074	24		73-21-18	ALL
	35		W0044	169	22		76-11-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D07900

Page 23

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D07982P		AF0204/ /		PLUG-P61 (continued)				ALL
	36	UNUSED						ALL
	37		W0044	138	24		73-21-14	ALL
	38	DM	W0044	712	18		80-11-11	050-099
	38	DK	W0044	712	18		80-11-11	150-199, 275-299
	39		W0044	141	24		80-11-11	ALL
	40		W0044	060	20		27-41-21	ALL
	41	UNUSED						ALL
	DED		W0044	040Z			33-16-12	ALL
	DED		W0044	041Z			33-16-17	ALL
	DED		W0044	073Z			73-21-18	ALL
	DED		W0044	074Z			73-21-18	ALL
	DED		W0044	169Z			76-11-11	ALL
	DED		W0044	712Z			80-11-11	ALL
D07984J		AF0204/ /		RCPT-P61				ALL
	1		W0070	781R	22		26-11-11	ALL
	2	UNUSED						ALL
	3		W0070	769R	22		26-11-12	ALL
	4		W0070	771R	22		26-11-21	ALL
	5		W0070	779R	22		26-11-22	ALL
	6		W0070	792R	22		26-17-11	ALL
	7		W0070	793R	22		26-17-11	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12		W0070	02U	24		27-88-11	ALL
	13	UNUSED						ALL
	14		W0070	02S	24		27-51-61	ALL
	15		W0070	02T	24		27-51-61	ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18		W0070	04M	24		32-09-11	ALL
	19		W0070	05C	24		27-58-21	ALL
	20	UNUSED						ALL
	21		W0070	04T	24		32-42-11	ALL
	22		W0070	04U	24		32-42-11	ALL
	23		W0070	02A	24		24-33-11	ALL
	24		W0070	02B	24		24-33-11	ALL
	25	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D07900

Page 24

Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D07984J		AF0204/ /		RCPT-P61 (continued)				ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31		W0070	02V	24		21-58-16	ALL
	32	UNUSED						ALL
	33		W0070	13H	24		21-58-12	ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
D07984P		AF0204/ /		PLUG-P61				ALL
	1		W0044	745R	22		26-11-11	ALL
	2	UNUSED						ALL
	3		W0044	746R	22		26-11-12	ALL
	4		W0044	747R	22		26-11-21	ALL
	5		W0044	748R	22		26-11-22	ALL
	6		W0044	735R	22		26-17-11	ALL
	7		W0044	736R	22		26-17-11	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12		W0044	065	24		27-88-11	ALL
	13	UNUSED						ALL
	14		W0044	063	24		27-51-61	ALL
	15		W0044	064	24		27-51-61	ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18		W0044	002	24		32-09-11	ALL
	19		W0044	039	24		27-58-21	ALL
	20	UNUSED						ALL
	21		W0044	172	24		32-42-11	ALL
	22		W0044	170	24		32-42-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D07900

Page 25

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D07984P		AF0204/ /		PLUG-P61 (continued)				ALL
	23		W0044	704	24		24-33-11	ALL
	24		W0044	705	24		24-33-11	ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31		W0044	136	24		21-58-16	ALL
	32	UNUSED						ALL
	33		W0044	740	24		21-58-12	ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
D07986J		AF0204/ /		RCPT-P61				ALL
	1		W0066	120	22		78-36-21	ALL
	2		W0066	59W	22		33-16-12	ALL
	3		W0066	59X	22		33-16-12	ALL
	4		W0066	64N	22		33-16-17	ALL
	5		W0066	118	22		78-36-11	ALL
	6	DL	W0066	58W	18		33-51-11	ALL
	7	DL	W0066	58Y	18		33-51-11	ALL
	8		W0066	59E	22		33-26-11	ALL
	9	FL	W0066	59D	16		33-26-21	ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12		W0066	64D	20		78-34-21	ALL
	13	UNUSED						ALL
	14		W0066	59R	24		33-14-11	ALL
	15		W0066	59N	22		33-13-13	ALL
	16		W0066	62B	24		73-21-17	ALL
	17		W0066	62K	24		75-23-11	ALL
	18	FL	W0066	62L	16		73-21-20	ALL
	19	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D07900
Page 26
Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D07986J		AF0204/ /		RCPT-P61 (continued)				ALL
	20	UNUSED						ALL
	21		W0066	62R	20		73-21-19	ALL
	22		W0066	64V	20		33-21-21	ALL
	23	UNUSED						ALL
	24		W0066	62W	24		78-34-21	ALL
	25		W0066	63A	24		78-36-21	ALL
	26	UNUSED						ALL
	27		W0066	63C	22		79-32-11	ALL
	28		W0066	600	22		33-22-33	050-099, 162-199
	28	UNUSED						150-157, 275-299
	29		W0066	66N	24		73-33-11	ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35		W0066	196	20		73-21-11	ALL
	36		W0066	195	20		73-21-11	ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	FL	W0066	61L	16		73-21-20	ALL
	DED		W0066	59XZ			33-16-12	ALL
D07986P		AF0204/ /		PLUG-P61				ALL
	1		W0042	523	22		78-36-21	ALL
	2		W0042	023	22		33-16-12	ALL
	3		W0042	024	22		33-16-12	ALL
	4		W0042	026	22		33-16-17	ALL
	5		W0042	520	22		78-36-11	ALL
	6	DK	W0042	045	18		33-51-11	ALL
	7	DK	W0042	047	18		33-51-11	ALL
	8		W0042	049	22		33-26-11	ALL
	9	FM	W0042	161	16		33-26-21	ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	DK	W0042	772	18		78-34-21	ALL
	13	UNUSED						ALL
	14		W0042	176	24		33-14-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D07900

Page 27

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D07986P		AF0204/ /		PLUG-P61 (continued)				ALL
	15		W0042	008	22		33-13-13	ALL
	16		W0042	750	24		73-21-17	ALL
	17		W0042	113	24		75-23-11	ALL
	18	FM	W0042	020	16		73-21-20	050-099, 275-299
	18		W0042	020	20		73-21-20	150-199
	19	UNUSED						ALL
	20	UNUSED						ALL
	21		W0042	048	20		73-21-19	ALL
	22		W0042	046	20		33-21-21	ALL
	23	DK	W0042	771	18		78-34-21	050-099, 150-156, 162-199, 277-299
	23	DK	W0042	771	18		SPARE	157, 275-276
	24		W0042	751	24		78-34-21	ALL
	25		W0042	114	24		78-36-21	ALL
	26	UNUSED						ALL
	27		W0042	016	22		79-32-11	ALL
	28		W0042	600	22		33-22-33	050-099, 162-199
	28	UNUSED						150-157, 275-299
	29		W0042	710	24		73-33-11	ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35		W0042	787	24		73-21-11	ALL
	36		W0042	786	24		73-21-11	ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	FM	W0042	781	16		73-21-20	ALL
	DED		W0042	024Z			33-16-12	ALL
D07988J		AF0204/ /		RCPT-P61				ALL
	1		W0066	10M	22		33-13-21	ALL
	2		W0066	59Y	22		33-16-12	ALL
	3	UNUSED						ALL
	4		W0066	63F	22		31-41-11	ALL
	5		W0066	63J	22		31-41-17	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D07900
Page 28
Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D07988J		AF0204/ /		RCPT-P61 (continued)				ALL
	8		W0066	71B	20		33-21-11	050-099
	8	UNUSED						150-199, 275-299
	9	UNUSED						ALL
	10		W0066	55S	24		29-31-11	ALL
	11	DL	W0066	55L	18		28-41-12	ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14		W0066	59S	24		33-14-31	ALL
	15		W0066	59P	24		33-13-17	ALL
	16	UNUSED						050-099, 275-299
	16		W0066	71G	20		33-21-11	150-199
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	DED		W0066	55LZ			28-41-12	ALL
	DED		W0066	59YZ			33-16-12	ALL
D07988P		AF0204/ /		PLUG-P61				ALL
	1		W0042	721	22		33-13-21	ALL
	2		W0042	044	22		33-16-12	ALL
	3	UNUSED						ALL
	4		W0042	137	22		31-41-11	ALL
	5		W0042	109	22		31-41-17	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8		W0042	190	20		33-21-11	050-099
	8	UNUSED						150-199, 275-299
	9	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D07900

Page 29

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D07988P		AF0204/ /		PLUG-P61 (continued)				ALL
	10		W0042	032	24		29-31-11	ALL
	11	DK	W0042	117	18		28-41-12	ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14		W0042	175	24		33-14-31	ALL
	15		W0042	009	24		33-13-17	ALL
	16	UNUSED						050-099, 275-299
	16		W0042	20A	20		33-21-11	150-199
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	DED		W0042	044Z			33-16-12	ALL
D07990J		AE0226/ /		RCPT-P54				ALL
	1		W1082	101R	22		26-11-11	ALL
	2		W1082	102R	22		26-11-11	ALL
	3	UNUSED						ALL
	4		W1082	104R	22		26-11-11	ALL
	5		W1082	105R	22		26-11-11	ALL
	6		W1082	106R	22		26-11-11	ALL
	7		W1082	107R	22		26-11-11	ALL
	8		W1082	108R	22		26-11-11	ALL
	9		W1082	109R	22		26-11-11	ALL
	10		W1082	110R	22		26-11-11	ALL
	11		W1082	111R	22		26-11-12	ALL
	12		W1082	112R	22		26-11-12	ALL
	13	UNUSED						ALL
	14		W1082	114R	22		26-11-12	ALL

HOOKUP LIST
D280T132

91-21-51
Section D07900
Page 30
Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D07990J		AE0226 / /		RCPT-P54 (continued)				ALL
	15		W1082	115R	22		26-11-12	ALL
	16		W1082	116R	22		26-11-12	ALL
	17		W1082	117R	22		26-11-12	ALL
	18		W1082	118R	22		26-11-12	ALL
	19		W1082	119R	22		26-11-12	ALL
	20		W1082	120R	22		49-61-11	ALL
	21		W1082	121R	22		26-15-11	ALL
	22		W1082	122R	22		26-11-11	ALL
	23		W1082	123R	22		26-11-11	ALL
	24	UNUSED						ALL
	25		W1082	125R	22		26-15-11	ALL
	26		W1082	126R	22		26-15-11	ALL
	27		W1082	127R	22		26-15-11	ALL
	28		W1082	128R	22		26-15-11	ALL
	29		W1082	129R	22		26-15-11	ALL
	30		W1082	130R	22		26-15-11	ALL
	31		W1082	131R	24		26-16-11	ALL
	32		W1082	132R	24		26-16-11	ALL
	33		W1082	133R	24		26-16-11	ALL
	34		W1082	134R	24		26-16-11	ALL
	35		W1082	135R	24		26-16-11	ALL
	36		W1082	136R	24		26-16-11	ALL
	37		W1082	137R	24		26-16-11	ALL
	38		W1082	138R	24		26-16-11	ALL
	39		W1082	139R	22		26-16-11	ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43		W1082	143R	24		26-16-11	ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46		W1082	146R	22		26-17-11	ALL
	47		W1082	147R	22		26-17-11	ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D07900

Page 31

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D07990J		AE0226/ /		RCPT-P54 (continued)				ALL
	55	UNUSED						ALL
D07990P		AE0226/ /		PLUG-P54				ALL
	1		W0614	041R	22		26-11-11	ALL
	2		W0614	042R	20		26-11-11	ALL
	3	UNUSED						ALL
	4		W0614	044R	22		26-11-11	ALL
	5		W0614	045R	22		26-11-11	ALL
	6		W0614	046R	22		26-11-11	ALL
	7		W0614	047R	22		26-11-11	ALL
	8		W0614	048R	22		26-11-11	ALL
	9		W0614	049R	20		26-11-11	ALL
	10		W0614	050R	22		26-11-11	ALL
	11		W0614	051R	22		26-11-12	ALL
	12		W0614	052R	20		26-11-12	ALL
	13	UNUSED						ALL
	14		W0614	054R	22		26-11-12	ALL
	15		W0614	055R	22		26-11-12	ALL
	16		W0614	058R	22		26-11-12	ALL
	17		W0614	056R	22		26-11-12	ALL
	18		W0614	057R	22		26-11-12	ALL
	19		W0614	059R	20		26-11-12	ALL
	20		W0614	154	22		49-61-11	ALL
	21		W0614	061R	22		26-15-11	ALL
	22		W0614	062R	22		26-11-11	ALL
	23		W0614	063R	22		26-11-11	ALL
	24	UNUSED						050-099, 150-199
	24		W0614	064R	22		SPARE	275-299
	25		W0614	065R	22		26-15-11	ALL
	26		W0614	068R	22		26-15-11	ALL
	27		W0614	066R	22		26-15-11	ALL
	28		W0614	067R	22		26-15-11	ALL
	29		W0614	069R	20		26-15-11	ALL
	30		W0614	070R	22		26-15-11	ALL
	31		W0614	026R	24		26-16-11	ALL
	32		W0614	027R	20		26-16-11	ALL
	33		W0614	028R	24		26-16-11	ALL
	34		W0614	034R	24		26-16-11	ALL
	35		W0614	031R	24		26-16-11	ALL
	36		W0614	030R	24		26-16-11	ALL

HOOKUP LIST
D280T132

91-21-51
Section D07900
Page 32
Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D07990P		AE0226/ /		PLUG-P54 (continued)				ALL
	37		W0614	037R	24		26-16-11	ALL
	38		W0614	036R	24		26-16-11	ALL
	39		W0614	033R	22		26-16-11	ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43		W0614	072R	24		26-16-11	ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46		W0614	146R	20		26-17-11	ALL
	47		W0614	147R	22		26-17-11	ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
D07992J		AE0226/ /		RCPT-P54				ALL
	1		W1082	001R	22		26-11-11	ALL
	2		W1082	002	24		31-51-21	ALL
	3		W1082	003	24		31-51-21	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W1082	006R	22		26-11-11	ALL
	7		W1082	007R	22		26-11-11	ALL
	8		W1082	008R	22		26-11-11	ALL
	9		W1082	009R	22		26-11-11	ALL
	10	UNUSED						ALL
	11		W1082	011R	22		26-11-12	ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16		W1082	016R	22		26-11-12	ALL
	17		W1082	017R	22		26-11-12	ALL
	18		W1082	018R	22		26-11-12	ALL
	19		W1082	019R	22		26-11-12	ALL

HOOKUP LIST

D280T132

91-21-51

Section D07900

Page 33

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D07992J		AE0226/ /		RCPT-P54 (continued)				ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D07992P		AE0226/ /		PLUG-				ALL
	1		W0596	041R	22		26-11-11	ALL
	2		W0596	061	24		31-51-21	ALL
	3		W0596	062	24		31-51-21	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W0596	046R	22		26-11-11	ALL
	7		W0596	047R	22		26-11-11	ALL
	8		W0596	048R	22		26-11-11	ALL
	9		W0596	049R	20		26-11-11	ALL
	10	UNUSED						ALL
	11		W0596	051R	22		26-11-12	ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16		W0596	056R	22		26-11-12	ALL
	17		W0596	057R	22		26-11-12	ALL
	18		W0596	058R	22		26-11-12	ALL
	19		W0596	059R	20		26-11-12	ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D07994J		AE0226/ /		RCPT-P54				ALL
	1		W1082	601R	22		26-11-21	ALL
	2		W1082	602R	22		26-11-21	ALL
	3	UNUSED						ALL
	4		W1082	604R	22		26-11-21	ALL
	5		W1082	605R	22		26-11-21	ALL
	6		W1082	606R	22		26-11-21	ALL
	7		W1082	607R	22		26-11-21	ALL

HOOKUP LIST
D280T132

91-21-51
Section D07900
Page 34
Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D07994J		AE0226/ /		RCPT-P54 (continued)				ALL
	8		W1082	608R	22		26-11-21	ALL
	9		W1082	609R	22		26-11-21	ALL
	10		W1082	610R	22		26-11-21	ALL
	11		W1082	611R	22		26-11-22	ALL
	12		W1082	612R	22		26-11-22	ALL
	13	UNUSED						ALL
	14		W1082	614R	22		26-11-22	ALL
	15		W1082	615R	22		26-11-22	ALL
	16		W1082	616R	22		26-11-22	ALL
	17		W1082	617R	22		26-11-22	ALL
	18		W1082	618R	22		26-11-22	ALL
	19		W1082	619R	22		26-11-22	ALL
	20		W1082	620R	22		26-15-12	ALL
	21		W1082	621R	22		26-15-11	ALL
	22		W1082	622R	22		26-15-11	ALL
	23	UNUSED						ALL
	24		W1082	624R	22		26-15-11	ALL
	25	UNUSED						ALL
	26		W1082	626R	22		26-15-11	ALL
	27		W1082	627R	22		26-15-11	ALL
	28		W1082	628R	22		26-15-11	ALL
	29		W1082	629R	22		26-15-11	ALL
	30	UNUSED						ALL
	31		W1082	631R	24		26-16-11	ALL
	32		W1082	632R	24		26-16-11	ALL
	33		W1082	633R	24		26-16-11	ALL
	34		W1082	634R	24		26-16-11	ALL
	35		W1082	635R	24		26-16-11	ALL
	36		W1082	636R	24		26-16-11	ALL
	37		W1082	637R	24		26-16-11	ALL
	38		W1082	638R	24		26-16-11	ALL
	39		W1082	639R	22		26-16-11	ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43		W1082	643R	24		26-16-11	ALL
	44		W1082	644R	22		26-17-11	ALL
	45		W1082	645R	22		26-17-11	ALL
	46	UNUSED						ALL
	47	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D07900

Page 35

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D07994J		AE0226/ /		RCPT-P54 (continued)				ALL
	48		W1082	648R	22		26-17-11	ALL
	49		W1082	649R	22		26-17-11	ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
D07994P		AE0226/ /		PLUG-P54				ALL
	1		W0606	041R	22		26-11-21	ALL
	2		W0606	042R	20		26-11-21	ALL
	3	UNUSED						ALL
	4		W0606	044R	22		26-11-21	ALL
	5		W0606	045R	22		26-11-21	ALL
	6		W0606	046R	22		26-11-21	ALL
	7		W0606	048R	22		26-11-21	ALL
	8		W0606	047R	22		26-11-21	ALL
	9		W0606	049R	20		26-11-21	ALL
	10		W0606	050R	22		26-11-21	ALL
	11		W0606	051R	22		26-11-22	ALL
	12		W0606	052R	20		26-11-22	ALL
	13	UNUSED						ALL
	14		W0606	054R	22		26-11-22	ALL
	15		W0606	055R	22		26-11-22	ALL
	16		W0606	058R	22		26-11-22	ALL
	17		W0606	056R	22		26-11-22	ALL
	18		W0606	057R	22		26-11-22	ALL
	19		W0606	059R	20		26-11-22	ALL
	20		W0606	070R	22		26-15-12	ALL
	21		W0606	061R	22		26-15-11	ALL
	22		W0606	062R	20		26-15-11	ALL
	23	UNUSED						ALL
	24		W0606	064R	22		26-15-11	ALL
	25	UNUSED						ALL
	26		W0606	068R	22		26-15-11	ALL
	27		W0606	066R	22		26-15-11	ALL
	28		W0606	067R	22		26-15-11	ALL
	29		W0606	069R	20		26-15-11	ALL
	30	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D07900

Page 36

Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D07994P		AE0226/ /		PLUG-P54 (continued)				ALL
	31		W0606	026R	24		26-16-11	ALL
	32		W0606	027R	20		26-16-11	ALL
	33		W0606	028R	24		26-16-11	ALL
	34		W0606	034R	24		26-16-11	ALL
	35		W0606	031R	24		26-16-11	ALL
	36		W0606	030R	24		26-16-11	ALL
	37		W0606	037R	24		26-16-11	ALL
	38		W0606	036R	24		26-16-11	ALL
	39		W0606	033R	22		26-16-11	ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43		W0606	072R	24		26-16-11	ALL
	44		W0606	634R	22		26-17-11	ALL
	45		W0606	635R	20		26-17-11	ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48		W0606	148R	22		26-17-11	ALL
	49		W0606	149R	22		26-17-11	ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
D07996J		AE0226/ /		RCPT-P54				ALL
	1		W1082	501R	22		26-11-21	ALL
	2		W1082	502	24		31-51-21	ALL
	3		W1082	503	24		31-51-21	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W1082	506R	22		26-11-21	ALL
	7		W1082	507R	22		26-11-21	ALL
	8		W1082	508R	22		26-11-21	ALL
	9		W1082	509R	22		26-11-21	ALL
	10	UNUSED						ALL
	11		W1082	511R	22		26-11-22	ALL
	12	UNUSED						ALL
	13	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D07900

Page 37

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D07996J		AE0226/ /		RCPT-P54 (continued)				ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16		W1082	516R	22		26-11-22	ALL
	17		W1082	517R	22		26-11-22	ALL
	18		W1082	518R	22		26-11-22	ALL
	19		W1082	519R	22		26-11-22	ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D07996P		AE0226/ /		PLUG-P54				ALL
	1		W0598	041R	22		26-11-21	ALL
	2		W0598	066	24		31-51-21	ALL
	3		W0598	015	24		31-51-21	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W0598	047R	22		26-11-21	ALL
	7		W0598	046R	22		26-11-21	ALL
	8		W0598	048R	22		26-11-21	ALL
	9		W0598	049R	20		26-11-21	ALL
	10	UNUSED						ALL
	11		W0598	051R	22		26-11-22	ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16		W0598	058R	22		26-11-22	ALL
	17		W0598	056R	22		26-11-22	ALL
	18		W0598	057R	22		26-11-22	ALL
	19		W0598	059R	20		26-11-22	ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D07900

Page 38 End

Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D08004J		AE0305/ /		RCPT-				ALL
	1		W0942	207B	22		21-51-12	ALL
	2		W0942	207R	22		21-51-12	ALL
	3		W0942	015	24		21-58-13	ALL
	4		W0942	039	24		21-58-13	ALL
	5		W0942	034	24		21-58-13	ALL
	6		W0942	047	24		21-58-13	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11		W0942	529	24		21-28-11	ALL
	12		W0942	530	24		21-28-11	ALL
	13		W0942	537	22		21-28-11	ALL
	14		W0942	538	22		21-28-11	ALL
	15		W0942	541	24		21-43-11	ALL
	16		W0942	238R	24		21-61-81	ALL
	17		W0942	238B	24		21-61-81	ALL
	18		W0942	239B	24		21-43-12	ALL
	19		W0942	239R	24		21-43-12	ALL
	20	UNUSED						ALL
	21		W0942	003	24		21-58-11	ALL
	22		W0942	104	24		21-58-12	ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25		W0942	105	24		21-58-12	ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30		W0942	072	24		21-58-12	ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33		W0942	073	24		21-58-12	ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D08000

Page 1

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D08004J		AE0305/ /		RCPT- (continued)				ALL
	41	UNUSED						ALL
	DED		W0942	537Z			21-28-11	050-099
	DED		W0942	538Z			21-28-11	050-099
D08004P		AE0305/ /		PLUG-				ALL
	1		W0986	201B	22		21-51-12	ALL
	2		W0986	201R	22		21-51-12	ALL
	3		W0986	002	24		21-58-13	ALL
	4		W0986	003	24		21-58-13	ALL
	5		W0986	004	24		21-58-13	ALL
	6		W0986	005	24		21-58-13	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11		W0986	066	24		21-28-11	ALL
	12		W0986	067	24		21-28-11	ALL
	13		W0986	068	22		21-28-11	ALL
	14		W0986	070	22		21-28-11	ALL
	15		W0986	074	24		21-43-11	ALL
	16		W0986	204R	24		21-61-81	ALL
	17		W0986	204B	24		21-61-81	ALL
	18		W0986	205B	20		21-43-12	ALL
	19		W0986	205R	20		21-43-12	ALL
	20	UNUSED						ALL
	21		W0986	032	24		21-58-11	ALL
	22		W0986	035	24		21-58-12	ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25		W0986	038	24		21-58-12	ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30		W0986	051	24		21-58-12	ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33		W0986	054	24		21-58-12	ALL
	34	UNUSED						ALL
	35	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D08000
Page 2
Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D08004P		AE0305/ /		PLUG- (continued)				ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	DED		W0986	068Z			21-28-11	050-099
	DED		W0986	070Z			21-28-11	050-099
D08016J		AE0204/ /		RCPT-P34				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W0054	061	22		73-21-19	ALL
	6		W0054	093	24		31-31-22	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D08016P		AE0204/ /		PLUG-P34				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W0756	817	22		73-21-19	ALL
	6		W0756	147	24		31-31-22	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D08018J		AE0204/ /		RCPT-P34				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D08000
Page 3
Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D08018J		AE0204/ /		RCPT-P34 (continued)				ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W0054	059	22		73-21-19	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8		W0054	068	22		32-45-11	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D08018P		AE0204/ /		PLUG-P34				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W0768	817	22		73-21-19	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8		W0768	087	22		32-45-11	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D08020J		AE0319/ /		RCPT-E1-2				ALL
	1		W0744	201B	24		78-34-11	ALL
	2		W0744	201R	24		78-34-11	ALL
	3		W0744	202B	24		78-34-11	ALL
	4		W0744	202R	24		78-34-11	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W0744	221R	24		77-12-11	050-099, 162-199, 277-299 150-157, 275-276
	7	UNUSED						
	8		W0744	221B	24		77-12-11	050-099, 162-199, 277-299 150-157, 275-276
	8	UNUSED						
	9		W0744	221Z			77-12-11	050-099, 162-199, 277-299 150-157, 275-276
	9	UNUSED						
	10		W0744	200Z			77-35-11	ALL
	11		W0744	212Z			77-35-11	ALL

HOOKUP LIST
D280T132

91-21-51
Section D08000
Page 4
Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D08020J		AE0319/ /		RCPT-E1-2 (continued)				ALL
	12	UNUSED						ALL
	13		W0744	200R	24		77-35-11	ALL
	14		W0744	200B	24		77-35-11	ALL
	15		W0744	212R	24		77-35-11	ALL
	16		W0744	212B	24		77-35-11	ALL
	17		W0744	204R	24		73-21-14	050-099, 150-199, 277-299
	17	UNUSED						275-276
	18		W0744	204B	24		73-21-14	050-099, 150-199, 277-299
	18	UNUSED						275-276
	19		W0744	204Z			73-21-14	050-099, 150-199, 277-299
	19	UNUSED						275-276
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D08020P		AE0319/ /		PLUG-E1-2				ALL
	1		W1092	207B	24		78-34-11	ALL
	2		W1092	207R	24		78-34-11	ALL
	3		W1092	236B	24		78-34-11	ALL
	4		W1092	236R	24		78-34-11	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W1092	682R	24		77-12-11	050-099, 162-199, 277-299
	7	UNUSED						150-157, 275-276
	8		W1092	682B	24		77-12-11	050-099, 162-199, 277-299
	8	UNUSED						150-157, 275-276
	9		W1092	682Z			77-12-11	050-099, 162-199, 277-299
	9	UNUSED						150-157, 275-276
	10		W1092	659Z			77-35-11	ALL
	11		W1092	660Z			77-35-11	ALL
	12	UNUSED						ALL
	13		W1092	659R	24		77-35-11	ALL
	14		W1092	659B	24		77-35-11	ALL
	15		W1092	660R	24		77-35-11	ALL
	16		W1092	660B	24		77-35-11	ALL
	17		W1092	670R	24		73-21-14	ALL
	18		W1092	670B	24		73-21-14	ALL
	19		W1092	670Z			73-21-14	ALL

HOOKUP LIST

D280T132

91-21-51

Section D08000

Page 5

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D08020P		AE0319/ /		PLUG-E1-2 (continued)				ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	DED		W1092	207Z			78-34-11	ALL
	DED		W1092	236Z			78-34-11	ALL
D08022J		AE0319/ /		RCPT-E1-2				ALL
	1		W0746	01TR	20		77-31-11	050-099, 155-199, 277-299
	1		W0746	203R	20		77-31-11	150-154, 275-276
	2		W0746	01TW	20		77-31-11	050-099, 155-199, 277-299
	2		W0746	203W	20		77-31-11	150-154, 275-276
	3		W0746	01TI			77-31-11	050-099, 155-199, 277-299
	3		W0746	203Z			77-31-11	150-154, 275-276
	4		W0746	204B	24		78-36-11	ALL
	5		W0746	204R	24		78-36-11	ALL
	6		W0746	205B	24		78-36-11	ALL
	7		W0746	205R	24		78-36-11	ALL
	8		W0746	206B	24		78-36-11	ALL
	9		W0746	206R	24		78-36-11	ALL
	10		W0746	207B	24		78-36-11	ALL
	11		W0746	207R	24		78-36-11	ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15		W0746	029	24		78-36-11	ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18		W0746	059	24		32-61-14	ALL
	19		W0746	060	24		32-61-14	ALL
	20		W0746	061	24		32-61-14	ALL
	21		W0746	062	24		32-61-14	ALL
	22		W0746	063	24		32-61-14	ALL
	23	UNUSED						050-099
	23		W0746	074	22		32-71-11	150-199, 275-299
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D08000

Page 6

Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D08022J		AE0319/ /		RCPT-E1-2 (continued)				ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	= CC	D	W0746	01TO			77-31-11	050-099
	= CC	M	W0746	01TO			77-31-11	155-199, 277-299
	CAP	Y	W0746	064	22		SPARE	150-199, 275-299
D08022P		AE0319/ /		PLUG-E1-2				ALL
	1		W1092	268R	20		77-31-11	ALL
	2		W1092	268W	20		77-31-11	ALL
	3		W1092	268Z			77-31-11	ALL
	4		W1092	271B	24		78-36-11	ALL
	5		W1092	271R	24		78-36-11	ALL
	6		W1092	272B	24		78-36-11	ALL
	7		W1092	272R	24		78-36-11	ALL
	8		W1092	273B	24		78-36-11	ALL
	9		W1092	273R	24		78-36-11	ALL
	10		W1092	274B	24		78-36-11	ALL
	11		W1092	274R	24		78-36-11	ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15		W1092	171	24		78-36-11	ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18		W1092	526	24		32-61-14	ALL
	19		W1092	532	24		32-61-14	ALL
	20		W1092	533	24		32-61-14	ALL
	21		W1092	010	24		32-61-14	ALL
	22		W1092	013	24		32-61-14	ALL
	23	UNUSED						050-099
	23		W1092	757	24		32-71-11	150-199, 275-299
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D08000

Page 7

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D08022P		AE0319/ /		PLUG-E1-2 (continued)				ALL
	31	UNUSED						ALL
	DED		W1092	171Z			78-36-11	ALL
	DED		W1092	271Z			78-36-11	ALL
	DED		W1092	272Z			78-36-11	ALL
	DED		W1092	273Z			78-36-11	ALL
	DED		W1092	274Z			78-36-11	ALL
D08024J		AE0306/ /		RCPT-E2-4				ALL
	1		W0752	201B	22		27-51-41	ALL
	2		W0752	201R	22		27-51-41	ALL
	3		W0752	401B	22		27-51-41	ALL
	4		W0752	401R	22		27-51-41	ALL
	5		W0752	401Y	22		27-51-41	ALL
	6		W0752	401G	22		27-51-41	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19		W0752	204B	22		27-81-31	ALL
	20		W0752	204R	22		27-81-31	ALL
	21		W0752	301B	24		27-81-31	ALL
	22		W0752	301R	24		27-81-31	ALL
	23		W0752	301Y	24		27-81-31	ALL
	24		W0752	205B	22		27-51-41	ALL
	25		W0752	205R	22		27-51-41	ALL
	26		W0752	404B	24		27-51-41	ALL
	27		W0752	404R	24		27-51-41	ALL
	28		W0752	404Y	24		27-51-41	ALL
	29		W0752	404G	24		27-51-41	ALL
	30		W0752	036	22		SPARE	ALL
	31		W0752	037	22		SPARE	ALL
	32		W0752	077	22		SPARE	ALL

HOOKUP LIST

D280T132

91-21-51

Section D08000

Page 8

Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D08024J		AE0306/ /		RCPT-E2-4 (continued)				ALL
	33		W0752	076	20		SPARE	ALL
	34	UNUSED						ALL
	35		W0752	051	22		28-41-13	ALL
	36		W0752	207R	24		28-41-13	ALL
	37		W0752	207B	24		28-41-13	ALL
	38		W0752	052	24		29-11-22	ALL
	39		W0752	053	24		29-11-22	ALL
	40		W0752	097	24		27-81-31	ALL
	41		W0752	098	24		27-81-31	ALL
D08024P		AE0306/ /		PLUG-E2-4				ALL
	1		W0014	209B	22		27-51-41	ALL
	2		W0014	209R	22		27-51-41	ALL
	3		W0014	405B	24		27-51-41	ALL
	4		W0014	405R	24		27-51-41	ALL
	5		W0014	405Y	24		27-51-41	ALL
	6		W0014	405G	24		27-51-41	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19		W0014	216B	22		27-81-31	ALL
	20		W0014	216R	22		27-81-31	ALL
	21		W0014	305B	24		27-81-31	ALL
	22		W0014	305R	24		27-81-31	ALL
	23		W0014	305Y	24		27-81-31	ALL
	24		W0014	212B	22		27-51-41	ALL
	25		W0014	212R	22		27-51-41	ALL
	26		W0014	408B	24		27-51-41	ALL
	27		W0014	408R	24		27-51-41	ALL
	28		W0014	408Y	24		27-51-41	ALL
	29		W0014	408G	24		27-51-41	ALL

HOOKUP LIST

D280T132

91-21-51

Section D08000

Page 9

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D08024P		AE0306/ /		PLUG-E2-4 (continued)				ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35		W0014	197	22		28-41-13	ALL
	36		W0014	236R	24		28-41-13	ALL
	37		W0014	236B	24		28-41-13	ALL
	38		W0014	578	24		29-11-22	ALL
	39		W0014	577	24		29-11-22	ALL
	40		W0014	622	24		27-81-31	ALL
	41		W0014	623	24		27-81-31	ALL
D08026J		AE0209/ /		RCPT-P36				ALL
	1		W0184	174	20		76-11-11	ALL
	2		W0184	171	20		76-11-11	ALL
	3	DL	W0184	199	18		28-22-21	ALL
	4	DL	W0184	198	18		28-22-21	ALL
	5		W0184	10D	22		28-42-12	050-099, 155-199, 276-299
	5	UNUSED						150-154, 275
	6		W0184	809	22		32-44-11	ALL
	7		W0184	668	24		29-11-32	ALL
	8	DL	W0184	070	18		32-44-11	ALL
	9	DL	W0184	071	18		32-44-11	ALL
	10		W0184	180	22		76-11-11	050-099, 155-199, 275-299
	10		W0184	180	20		76-11-11	150-154
	11		W0184	51A	20		76-11-11	ALL
	12		W0184	91N	20		76-11-11	ALL
	13		W0184	91M	20		76-11-11	ALL
	14		W0184	004	24		27-58-21	ALL
	15		W0184	167	24		80-11-11	ALL
	16		W0184	168	24		80-11-11	ALL
	17		W0184	005	22		27-58-21	ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21		W0184	669	24		29-11-32	ALL
	22	UNUSED						ALL
	23		W0184	203B	22		27-51-41	ALL
	24		W0184	203R	22		27-51-41	ALL

HOOKUP LIST
D280T132

91-21-51
Section D08000
Page 10
Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D08026J		AE0209/ /		RCPT-P36 (continued)				ALL
	25		W0184	401B	24		27-51-41	ALL
	26		W0184	401R	24		27-51-41	ALL
	27		W0184	401Y	24		27-51-41	ALL
	28		W0184	401G	24		27-51-41	ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31		W0184	609	24		28-22-11	ALL
	32		W0184	610	24		28-25-11	ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35		W0184	708	22		28-22-21	ALL
	36		W0184	564	20		28-26-11	ALL
	37		W0184	565	20		28-26-11	ALL
	38		W0184	562	24		28-26-11	ALL
	39	UNUSED						ALL
	40		W0184	64A	22		30-34-11	ALL
	41	UNUSED						050-099, 155-199, 276-299
	41		W0184	16A	22		28-42-12	150-154, 275
	42	UNUSED						ALL
	43		W0184	217	24		73-21-11	ALL
	44		W0184	216	24		73-21-11	ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47		W0184	034	24		32-09-11	ALL
	48	UNUSED						ALL
	49		W0184	172	20		76-11-11	ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52		W0184	173	20		76-11-11	ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
	DED		W0184	034Z			32-09-11	ALL
	DED		W0184	10DZ			28-42-12	050-099, 155-199, 276-299
	DED		W0184	16AZ			28-42-12	150-154, 275
D08026P		AE0209/ /		PLUG-P36				ALL
	1		W0264	001	20		76-11-11	ALL
	2		W0264	002	20		76-11-11	ALL
	3	DK	W0264	051	18		28-22-21	050-099, 150-154, 156-162, 165-199

HOOKUP LIST
D280T132



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D08026P		AE0209/ /		PLUG-P36 (continued)				ALL
	3	DK	W0264	658	18		28-22-21	155, 163-164, 275-299
	4	DK	W0264	052	18		28-22-21	ALL
	5		W0264	006	22		28-42-12	050-099, 155-199, 276-299
	5		W0264	006	22		SPARE	150-154
	5	UNUSED						275
	6		W0264	005	22		32-44-11	ALL
	7		W0264	007	24		29-11-32	ALL
	8	DK	W0264	008	18		32-44-11	ALL
	9	DK	W0264	009	18		32-44-11	ALL
	10		W0264	010	20		76-11-11	ALL
	11		W0264	011	20		76-11-11	ALL
	12		W0264	003	20		76-11-11	ALL
	13		W0264	099	20		76-11-11	ALL
	14		W0264	023	24		27-58-21	ALL
	15		W0264	024	24		80-11-11	ALL
	16		W0264	025	24		80-11-11	ALL
	17		W0264	026	22		27-58-21	ALL
	18	UNUSED						050-099, 155-199, 277-299
	18		W0264	027	22		SPARE	150-154, 275-276
	19		W0264	028	22		SPARE	ALL
	20	UNUSED						ALL
	21		W0264	031	24		29-11-32	ALL
	22	UNUSED						ALL
	23		W0264	202B	22		27-51-41	ALL
	24		W0264	202R	22		27-51-41	ALL
	25		W0264	402B	22		27-51-41	ALL
	26		W0264	402R	22		27-51-41	ALL
	27		W0264	402Y	22		27-51-41	ALL
	28		W0264	402G	22		27-51-41	ALL
	29		W0264	123	24		SPARE	ALL
	30	UNUSED						ALL
	31		W0264	058	24		28-22-11	ALL
	32		W0264	059	24		28-25-11	ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35		W0264	066	22		28-22-21	ALL
	36		W0264	073	20		28-26-11	ALL
	37		W0264	070	20		28-26-11	ALL
	38		W0264	072	20		28-26-11	ALL
	39		W0264	085	20		SPARE	ALL

HOOKUP LIST

D280T132

91-21-51

Section D08000

Page 12

Feb 06/2009



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D08026P		AE0209/ /		PLUG-P36 (continued)				ALL
	40		W0264	013	20		30-34-11	ALL
	41	UNUSED						050-099, 155-199, 276-299
	41		W0264	16A	22		28-42-12	150-154, 275
	42		W0264	092	24		SPARE	ALL
	43		W0264	047	24		73-21-11	ALL
	44		W0264	048	24		73-21-11	ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47		W0264	103	24		32-09-11	ALL
	48	UNUSED						ALL
	49		W0264	074	20		76-11-11	ALL
	50	UNUSED						ALL
	51		W0264	035	20		SPARE	050-099
	51	UNUSED						150-199, 275-299
	52		W0264	106	20		76-11-11	ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
	DED		W0264	006Z			28-42-12	050-099, 155-199, 276-299
	DED		W0264	16AZ			28-42-12	150-154, 275
D08028		AE0202/ /		PLUG				051-099
	1	UNUSED						051-099
	2	UNUSED						051-099
	3	UNUSED						051-099
	4	UNUSED						051-099
	5	UNUSED						051-099
	6	UNUSED						051-099
	7	UNUSED						051-099
	8	UNUSED						051-099
	9	UNUSED						051-099
	10	UNUSED						051-099
	11	UNUSED						051-099
	12	UNUSED						051-099
	13	UNUSED						051-099
	14	UNUSED						051-099
	15	UNUSED						051-099
	16	UNUSED						051-099
	17	UNUSED						051-099
	18	UNUSED						051-099

HOOKUP LIST

D280T132

91-21-51

Section D08000

Page 13

Feb 06/2009



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D08028		AE0202/ /		PLUG (continued)				051-099
	19	UNUSED						051-099
	20	UNUSED						051-099
	21	UNUSED						051-099
	22	UNUSED						051-099
	23	UNUSED						051-099
	24	UNUSED						051-099
	25	UNUSED						051-099
	26	UNUSED						051-099
	27	UNUSED						051-099
	28	UNUSED						051-099
	29	UNUSED						051-099
	30	UNUSED						051-099
	31	UNUSED						051-099
	32	UNUSED						051-099
	33	UNUSED						051-099
	34	UNUSED						051-099
	35	UNUSED						051-099
	36	UNUSED						051-099
	37	UNUSED						051-099
	38	UNUSED						051-099
	39	UNUSED						051-099
	40	UNUSED						051-099
	41	UNUSED						051-099
	42	UNUSED						051-099
	43	UNUSED						051-099
	44	UNUSED						051-099
	45	UNUSED						051-099
	46	UNUSED						051-099
	47	UNUSED						051-099
	48	UNUSED						051-099
	49	UNUSED						051-099
	50	UNUSED						051-099
	51	UNUSED						051-099
	52	UNUSED						051-099
	53	UNUSED						051-099
	54	UNUSED						051-099
	=C27	UNUSED						051-099
D08028J		AE0202/ /		RCPT-				ALL
	1		W1114	019	22		27-58-21	ALL

HOOKUP LIST
D280T132

91-21-51
Section D08000
Page 14
Feb 06/2009



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D08028J		AE0202/ /		RCPT- (continued)				ALL
	2		W1114	060	24		73-21-18	050-099, 155-199, 277-299
	2		W1114	060A	24		73-21-18	150-154, 275-276
	3		W1114	061	24		73-21-18	ALL
	4		W1114	096	24		73-21-11	ALL
	5		W1114	096Z			73-21-11	ALL
	6		W1114	301B	24		27-58-21	ALL
	7		W1114	301R	24		27-58-21	ALL
	8		W1114	301Y	24		27-58-21	ALL
	9		W1114	202B	22		27-58-21	ALL
	10		W1114	202R	22		27-58-21	ALL
	11		W1114	205B	22		27-58-21	ALL
	12		W1114	205R	22		27-58-21	ALL
	13		W1114	304B	24		27-58-21	ALL
	14		W1114	304R	24		27-58-21	ALL
	15		W1114	304Y	24		27-58-21	ALL
	16		W1114	134	22		28-31-12	050-099, 155-199, 277-299
	16	UNUSED						150-154, 275-276
	17	UNUSED						ALL
	18		W1114	070	24		80-11-11	ALL
	19		W1114	071	24		80-11-11	ALL
	20		W1114	091	24		73-21-15	ALL
	21		W1114	112	24		21-58-14	ALL
	22		W1114	117	24		21-58-11	ALL
	23		W1114	115	24		21-58-11	ALL
	24		W1114	116	24		21-58-11	ALL
	DED		W1114	070Z			80-11-11	ALL
	DED		W1114	071Z			80-11-11	ALL
D08028P		AE0202/ /		PLUG-P50				ALL
	1		W0264	026	22		27-58-21	ALL
	2		W0264	112	24		73-21-18	ALL
	3		W0264	113	24		73-21-18	ALL
	4		W0264	029	22		73-21-11	ALL
	5		W0264	029Z			73-21-11	ALL
	6		W0264	301B	22		27-58-21	ALL
	7		W0264	301R	22		27-58-21	ALL
	8		W0264	301Y	22		27-58-21	ALL
	9		W0264	201B	22		27-58-21	ALL
	10		W0264	201R	22		27-58-21	ALL
	11		W0264	203B	22		27-58-21	ALL

HOOKUP LIST

D280T132

91-21-51

Section D08000

Page 15

Feb 06/2009



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D08028P		AE0202/ /		PLUG-P50 (continued)				ALL
	12		W0264	203R	22		27-58-21	ALL
	13		W0264	303B	24		27-58-21	ALL
	14		W0264	303R	24		27-58-21	ALL
	15		W0264	303Y	24		27-58-21	ALL
	16		W0264	027	22		28-31-12	050-099, 155-199, 277-299
	16		W0264	027	22		SPARE	150-154, 275-276
	17		W0264	028	22		SPARE	ALL
	18		W0264	121	24		80-11-11	ALL
	19		W0264	122	24		80-11-11	ALL
	20		W0264	107	24		73-21-15	ALL
	21		W0264	138	24		21-58-14	ALL
	22		W0264	143	24		21-58-16	ALL
	23		W0264	144	24		21-58-16	ALL
	24		W0264	145	24		21-58-16	ALL
	DED		W0264	027Z			28-31-12	050, 155-199, 277-299
D08030J		AE0202/ /		RCPT-				ALL
	1		W1078	141	24		73-21-16	050-099, 150-199 275-299
	1	UNUSED						
	2		W1078	523	24		73-21-11	ALL
	3	UNUSED						ALL
	4		W1078	149	24		73-21-17	ALL
	5	UNUSED						ALL
	6		W1078	133	24		73-21-12	ALL
	7		W1078	535	24		73-21-17	ALL
	8		W1078	535Z			73-21-17	ALL
	9		W1078	609	24		73-21-17	ALL
	10		W1078	088	24		73-21-18	ALL
	11		W1078	766	24		27-51-31	ALL
	12		W1078	089	24		73-21-18	ALL
	13		W1078	FRD			73-21-17	050-099, 150-199
	13		W1078	FRB			73-21-17	275-278
	13		W1078	FRF			73-21-17	280-299
	14		W1078	125	22		73-21-19	ALL
	15		W1078	124	24		73-21-19	ALL
	16		W1078	160	24		73-21-17	ALL
	17		W1078	780	22		73-21-19	ALL
	18		W1078	207B	24		27-51-31	ALL
	19		W1078	207R	24		27-51-31	ALL
	20		W1078	201B	24		27-58-31	ALL

HOOKUP LIST

D280T132

91-21-51

Section D08000

Page 16

Feb 06/2009



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D08030J		AE0202 / /		RCPT- (continued)				ALL
	21		W1078	201R	24		27-58-31	ALL
	22		W1078	203B	24		27-58-21	ALL
	23		W1078	203R	24		27-58-21	ALL
	24		W1078	301B	24		27-58-21	ALL
	25		W1078	301R	24		27-58-21	ALL
	26		W1078	301Y	24		27-58-21	ALL
	27		W1078	124Z			73-21-19	ALL
	28	UNUSED						ALL
	29		W1078	117	24		27-58-21	ALL
	30	UNUSED						ALL
	31		W1078	126	22		73-21-19	ALL
	32		W1078	122	22		73-21-19	ALL
	33		W1078	134	24		73-21-12	ALL
	34	UNUSED						050-099, 150-199
	34		W1078	141	24		73-21-16	275-299
	35	UNUSED						ALL
	36		W1078	140	24		73-21-17	ALL
	37		W1078	146	24		73-21-17	ALL
	38		W1078	211R	24		77-12-12	ALL
	39		W1078	211Z			77-12-12	ALL
	40		W1078	211B	24		77-12-12	ALL
	41		W1078	702	22		36-22-11	ALL
	42		W1078	767	24		27-58-31	ALL
	43		W1078	779	22		73-21-19	ALL
	44		W1078	099	22		36-22-11	ALL
	45	UNUSED						ALL
	46		W1078	764	24		73-21-11	ALL
	47	UNUSED						ALL
	48		W1078	FRA			73-21-11	050-099, 150-199
	48		W1078	FRM			73-21-11	275-299
	49	UNUSED						ALL
	50		W1078	618	24		73-21-18	ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
			W1078	FRA			73-21-11	050-099, 150-199
			W1078	FRD			73-21-17	050-099, 150-199
			W1078	133Z			73-21-12	ALL

HOOKUP LIST

D280T132

91-21-51

Section D08000

Page 17

Feb 06/2009



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D08030J		AE0202/ /		RCPT- (continued)				ALL
			W1078	149Z			73-21-17	ALL
			W1078	523Z			73-21-11	ALL
			W1078	609Z			73-21-17	ALL
			W1078	764Z			73-21-11	ALL
			W1078	134Z			73-21-12	275-276
			W1078	FRB			73-21-17	275-278
			W1078	FRM			73-21-11	275-299
			W1078	FRF			73-21-17	280-299
D08030P		AE0202/ /		PLUG-P50				ALL
	1		W0756	636	24		73-21-16	050-099, 150-199
	1	UNUSED						275-299
	2		W0756	091	24		73-21-11	ALL
	3	UNUSED						050-099, 275-299
	3		W0756	811	24		SPARE	150-199
	4		W0756	239B	24		73-21-17	ALL
	5	UNUSED						ALL
	6		W0756	239R	24		73-21-12	ALL
	7		W0756	560	24		73-21-17	ALL
	8		W0756	560Z			73-21-17	ALL
	9		W0756	609	24		73-21-14	ALL
	10		W0756	087	24		73-21-18	ALL
	11		W0756	815	24		27-51-31	ALL
	12		W0756	088	24		73-21-18	ALL
	13		W0756	FRI			73-21-17	050-099, 275-299
	13		W0756	FRF			73-21-17	150-199
	14		W0756	102	22		73-21-19	ALL
	15		W0756	103	20		73-21-19	ALL
	16		W0756	553	24		73-21-17	ALL
	17		W0756	105	20		73-21-19	ALL
	18		W0756	224B	24		27-51-31	ALL
	19		W0756	224R	24		27-51-31	ALL
	20		W0756	225B	24		27-58-31	ALL
	21		W0756	225R	24		27-58-31	ALL
	22		W0756	226B	22		27-58-21	ALL
	23		W0756	226R	22		27-58-21	ALL
	24		W0756	304B	22		27-58-21	ALL
	25		W0756	304R	22		27-58-21	ALL
	26		W0756	304Y	22		27-58-21	ALL
	27		W0756	103Z			73-21-19	ALL

HOOKUP LIST

D280T132

91-21-51

Section D08000

Page 18

Feb 06/2009



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D08030P		AE0202/ /		PLUG-P50 (continued)				ALL
	28		W0756	176	24		SPARE	ALL
	29		W0756	177	24		27-58-21	ALL
	30	UNUSED						ALL
	31		W0756	158	22		73-21-19	ALL
	32		W0756	159	22		73-21-19	ALL
	33		W0756	167	24		73-21-12	ALL
	34	UNUSED						050-099
	34		W0756	168	24		SPARE	150-199
	34		W0756	168	24		73-21-16	275-299
	35	UNUSED						ALL
	36		W0756	170	24		73-21-17	ALL
	37		W0756	171	24		73-21-17	ALL
	38		W0756	245R	24		77-12-12	ALL
	39		W0756	245Z			77-12-12	ALL
	40		W0756	245B	24		77-12-12	ALL
	41		W0756	803	22		36-22-11	ALL
	42		W0756	816	24		27-58-31	ALL
	43		W0756	817	22		73-21-19	ALL
	44		W0756	802	22		36-22-11	ALL
	45	UNUSED						ALL
	46		W0756	092	24		73-21-11	ALL
	47	UNUSED						ALL
	48		W0756	FRD			73-21-11	050-099, 150-199
	48		W0756	FRA			73-21-11	275-299
	49	UNUSED						ALL
	50		W0756	639	24		73-21-18	ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
			W0756	FRD			73-21-11	050-099, 150-199
			W0756	091Z			73-21-11	ALL
			W0756	092Z			73-21-11	ALL
			W0756	609Z			73-21-14	ALL
			W0756	239Z			73-21-12	050-099, 275-299
			W0756	FRI			73-21-17	050-099, 275-299
			W0756	239Z			73-21-17	150-199
			W0756	FRF			73-21-17	150-199
			W0756	FRA			73-21-11	275-299

HOOKUP LIST

D280T132

91-21-51

Section D08000

Page 19

Feb 06/2009



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D08032J		AE0202/ /		RCPT-				ALL
	1	UNUSED						ALL
	2		W1080	152	24		27-58-21	ALL
	3		W1080	182	24		73-21-17	ALL
	4		W1080	528	24		21-51-21	ALL
	5		W1080	172	22		73-21-11	050-099, 150-199, 275-278
	5		W1080	172	24		73-21-11	280-299
	6		W1080	181	24		73-21-18	ALL
	7		W1080	186	24		73-21-17	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11		W1080	609	24		73-21-17	ALL
	12	UNUSED						ALL
	13		W1080	218R	24		77-12-12	ALL
	14		W1080	218B	24		77-12-12	ALL
	15		W1080	218Z			77-12-12	ALL
	16		W1080	169	24		73-21-12	ALL
	17		W1080	183	24		73-21-15	ALL
	18	UNUSED						ALL
	19		W1080	162	22		73-21-19	ALL
	20		W1080	202B	24		27-58-21	ALL
	21		W1080	202R	24		27-58-21	ALL
	22		W1080	301B	24		27-58-21	ALL
	23		W1080	301R	24		27-58-21	ALL
	24		W1080	301Y	24		27-58-21	ALL
	25		W1080	201B	24		27-51-11	ALL
	26		W1080	201R	24		27-51-11	ALL
	27	UNUSED						ALL
	28		W1080	FRB			73-21-17	050-099, 150-199
	28		W1080	FRF			73-21-17	275-299
	29		W1080	170	24		73-21-12	ALL
	30	UNUSED						050-099, 150-199
	30		W1080	534	24		73-21-16	275-299
	31		W1080	533	24		73-21-17	ALL
	32		W1080	163	24		73-21-19	050-099, 150-199
	32		W1080	163	22		73-21-19	275-299
	33		W1080	160	24		73-21-19	ALL
	34	UNUSED						ALL
	35		W1080	178	24		73-21-16	ALL
	36		W1080	769	24		27-51-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D08000

Page 20

Feb 06/2009



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D08032J		AE0202/ /		RCPT- (continued)				ALL
	37		W1080	540	24		21-58-11	ALL
	38		W1080	009	24		21-51-21	ALL
	39		W1080	FRA			73-21-11	050-099, 150-199
	39		W1080	FRM			73-21-11	275-299
	40		W1080	768	24		21-58-11	ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43		W1080	177	22		73-21-19	ALL
	44		W1080	177Z			73-21-19	ALL
	45		W1080	781	24		73-21-19	ALL
	46		W1080	022	24		21-53-21	ALL
	47		W1080	211R	24		77-12-12	ALL
	48		W1080	764	24		73-21-11	ALL
	49		W1080	211Z			77-12-12	ALL
	50		W1080	211B	24		77-12-12	ALL
	51		W1080	706	24		30-31-21	ALL
	52		W1080	707	24		30-34-21	ALL
	53		W1080	714	22		73-21-19	ALL
	54		W1080	701	22		21-51-21	ALL
	55		W1080	552	24		73-21-17	ALL
	56		W1080	552Z			73-21-17	ALL
	57	UNUSED						ALL
	58	UNUSED						ALL
	59	UNUSED						ALL
	60	UNUSED						ALL
	61	UNUSED						ALL
			W1080	FRA			73-21-11	050-099, 150-199
			W1080	FRB			73-21-17	050-099, 150-199
			W1080	169Z			73-21-12	ALL
			W1080	172Z			73-21-11	ALL
			W1080	186Z			73-21-17	ALL
			W1080	609Z			73-21-17	ALL
			W1080	764Z			73-21-11	ALL
			W1080	FRF			73-21-17	275-299
			W1080	FRM			73-21-11	275-299
D08032P		AE0202/ /		PLUG-P50				ALL
	1		W0768	015	24		SPARE	ALL
	2		W0768	016	24		27-58-21	ALL
	3		W0768	017	24		73-21-17	ALL

HOOKUP LIST

D280T132

91-21-51

Section D08000

Page 21

Feb 06/2009



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D08032P		AE0202/ /		PLUG-P50 (continued)				ALL
	4		W0768	173	24		21-51-21	ALL
	5		W0768	051	22		73-21-11	050-099, 150-199, 275-276
	5		W0768	051	24		73-21-11	277-299
	6		W0768	026	24		73-21-18	ALL
	7		W0768	225B	20		73-21-17	050-099, 275-299
	7		W0768	225B	24		73-21-17	150-199
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11		W0768	609	24		73-21-14	ALL
	12	UNUSED						ALL
	13		W0768	239R	24		77-12-12	ALL
	14		W0768	239B	24		77-12-12	ALL
	15		W0768	239Z			77-12-12	ALL
	16		W0768	225R	20		73-21-12	050-099, 275-299
	16		W0768	225R	24		73-21-12	150-199
	17		W0768	063	24		73-21-15	ALL
	18		W0768	064	24		SPARE	ALL
	19		W0768	065	22		73-21-19	ALL
	20		W0768	208B	22		27-58-21	ALL
	21		W0768	208R	22		27-58-21	ALL
	22		W0768	304B	22		27-58-21	ALL
	23		W0768	304R	22		27-58-21	ALL
	24		W0768	304Y	22		27-58-21	ALL
	25		W0768	209B	24		27-51-11	ALL
	26		W0768	209R	24		27-51-11	ALL
	27	UNUSED						ALL
	28		W0768	FRI			73-21-17	050-099, 275-299
	28		W0768	FRD			73-21-17	150-199
	29		W0768	090	24		73-21-12	ALL
	30	UNUSED						050-099
	30		W0768	097	24		SPARE	150-199
	30		W0768	097	24		73-21-16	275-299
	31		W0768	092	24		73-21-17	ALL
	32		W0768	095	22		73-21-19	ALL
	33		W0768	094	20		73-21-19	ALL
	34	UNUSED						ALL
	35		W0768	091	24		73-21-16	ALL
	36		W0768	517	24		27-51-11	ALL
	37		W0768	135	24		21-58-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D08000

Page 22

Feb 06/2009



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D08032P		AE0202/ /		PLUG-P50 (continued)				ALL
	38		W0768	111	24		21-51-21	ALL
	39		W0768	FRM			73-21-11	050-099, 150-199
	39		W0768	FRC			73-21-11	275-299
	40	FM	W0768	137	16		21-58-11	ALL
	41		W0768	178	22		SPARE	ALL
	42		W0768	141	24		SPARE	050-099
	42	UNUSED						150-199, 275-299
	43		W0768	096	20		73-21-19	ALL
	44		W0768	096Z			73-21-19	ALL
	45		W0768	817	22		73-21-19	ALL
	46		W0768	194	24		21-53-21	ALL
	47		W0768	223R	24		77-12-12	ALL
	48		W0768	020	24		73-21-11	050-099, 150-199, 277-299
	48		W0768	020	22		73-21-11	275-276
	49		W0768	223Z			77-12-12	ALL
	50		W0768	223B	24		77-12-12	ALL
	51		W0768	192	24		30-31-21	ALL
	52		W0768	195	24		30-34-21	ALL
	53		W0768	179	22		73-21-19	ALL
	54		W0768	191	22		21-51-21	ALL
	55		W0768	548	24		73-21-17	ALL
	56		W0768	548Z			73-21-17	ALL
	57	UNUSED						ALL
	58	UNUSED						ALL
	59	UNUSED						ALL
	60	UNUSED						ALL
	61	UNUSED						ALL
			W0768	FRM			73-21-11	050-099, 150-199
			W0768	020Z			73-21-11	ALL
			W0768	051Z			73-21-11	ALL
			W0768	609Z			73-21-14	ALL
			W0768	225Z			73-21-12	050-099, 275-299
			W0768	FRI			73-21-17	050-099, 275-299
			W0768	225Z			73-21-17	150-199
			W0768	FRD			73-21-17	150-199
			W0768	FRC			73-21-11	275-299
D08034J		AE0306/ /		RCPT-E2-4				ALL
	1	UNUSED						ALL
	2		W0756	240Z			77-31-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D08000

Page 23

Feb 06/2009



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D08034J		AE0306/ /		RCPT-E2-4 (continued)				ALL
	3		W0756	057	24		27-51-31	ALL
	4		W0756	815	24		27-51-31	ALL
	5		W0756	059	24		27-51-61	ALL
	6		W0756	060	24		27-51-61	ALL
	7	UNUSED						ALL
	8		W0756	222B	22		27-51-31	ALL
	9		W0756	222R	22		27-51-31	ALL
	10		W0756	303B	24		27-51-31	ALL
	11		W0756	303R	24		27-51-31	ALL
	12		W0756	303Y	24		27-51-31	ALL
	13		W0756	223B	24		27-58-31	ALL
	14		W0756	223R	24		27-58-31	ALL
	15		W0756	313B	24		27-58-31	ALL
	16		W0756	313R	24		27-58-31	ALL
	17		W0756	313Y	24		27-58-31	ALL
	18		W0756	816	24		27-58-31	ALL
	19		W0756	039	24		27-88-11	ALL
	20	UNUSED						050-099
	20		W0756	040	24		SPARE	150-199, 275-299
	21	UNUSED						050-099
	21		W0756	041	24		SPARE	150-199, 275-299
	22	UNUSED						050-099
	22		W0756	042	24		SPARE	150-199, 275-299
	23	UNUSED						050-099
	23		W0756	043	24		SPARE	150-199, 275-299
	24		W0756	044	24		27-81-21	ALL
	25		W0756	045	24		27-81-11	ALL
	26		W0756	240R	24		77-31-11	ALL
	27		W0756	240B	24		77-31-11	ALL
	28		W0756	224B	24		27-51-31	ALL
	29		W0756	224R	24		27-51-31	ALL
	30		W0756	225B	24		27-58-31	ALL
	31		W0756	225R	24		27-58-31	ALL
	32		W0756	075	24		27-51-51	ALL
	33	UNUSED						ALL
	34		W0756	077	24		27-58-11	ALL
	35		W0756	402B	22		21-31-21	ALL
	36		W0756	402G	22		21-31-21	ALL
	37		W0756	402R	22		21-31-21	ALL
	38		W0756	402Y	22		21-31-21	ALL

HOOKUP LIST

D280T132

91-21-51

Section D08000

Page 24

Feb 06/2009



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D08034J		AE0306/ /		RCPT-E2-4 (continued)				ALL
	39		W0756	402Z			21-31-21	ALL
	40	UNUSED						ALL
	41		W0756	063	24		21-31-21	ALL
	42		W0756	064	24		21-31-21	ALL
	43		W0756	065	20		21-31-21	ALL
	44		W0756	206B	24		73-21-14	ALL
	45		W0756	206R	24		73-21-14	ALL
	46		W0756	207B	24		73-21-14	ALL
	47		W0756	207R	24		73-21-14	ALL
	48		W0756	FRL			73-21-14	050-099, 150-199
	48		W0756	FRG			73-21-14	275-299
	49		W0756	285Z			77-31-11	ALL
	50		W0756	235R	20		77-31-11	ALL
	51		W0756	235W	20		77-31-11	ALL
	52		W0756	235Z			77-31-11	ALL
	53		W0756	285R	24		77-31-11	ALL
	54		W0756	285B	24		77-31-11	ALL
	55	UNUSED						ALL
	DED		W0756	065Z			21-31-21	ALL
			W0756	FRL			73-21-14	050-099, 150-199
			W0756	206Z			73-21-14	ALL
			W0756	207Z			73-21-14	ALL
			W0756	FRG			73-21-14	275-299
D08034P		AE0306/ /		PLUG-E2-4				ALL
	1	UNUSED						ALL
	2		W0014	250Z			77-31-11	ALL
	3		W0014	018	24		27-51-31	ALL
	4		W0014	590	24		27-51-31	ALL
	5		W0014	034	24		27-51-61	ALL
	6		W0014	630	24		27-51-61	ALL
	7	UNUSED						ALL
	8		W0014	202B	22		27-51-31	ALL
	9		W0014	202R	22		27-51-31	ALL
	10		W0014	301B	24		27-51-31	ALL
	11		W0014	301R	24		27-51-31	ALL
	12		W0014	301Y	24		27-51-31	ALL
	13		W0014	213B	24		27-58-31	ALL
	14		W0014	213R	24		27-58-31	ALL
	15		W0014	302B	24		27-58-31	ALL

HOOKUP LIST

D280T132

91-21-51

Section D08000

Page 25

Feb 06/2009



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D08034P		AE0306/ /		PLUG-E2-4 (continued)				ALL
	16		W0014	302R	24		27-58-31	ALL
	17		W0014	302Y	24		27-58-31	ALL
	18		W0014	591	24		27-58-31	ALL
	19		W0014	023	24		27-88-11	ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24		W0014	045	24		27-81-21	ALL
	25		W0014	046	24		27-81-11	ALL
	26		W0014	250R	24		77-31-11	ALL
	27		W0014	250B	24		77-31-11	ALL
	28		W0014	203B	24		27-51-31	ALL
	29		W0014	203R	24		27-51-31	ALL
	30		W0014	204B	24		27-58-31	ALL
	31		W0014	204R	24		27-58-31	ALL
	32		W0014	043	24		27-51-51	ALL
	33	UNUSED						ALL
	34		W0014	048	24		27-58-11	ALL
	35		W0014	409B	22		21-31-21	ALL
	36		W0014	409G	22		21-31-21	ALL
	37		W0014	409R	22		21-31-21	ALL
	38		W0014	409Y	22		21-31-21	ALL
	39		W0014	409Z			21-31-21	ALL
	40	UNUSED						ALL
	41		W0014	073	24		21-31-21	ALL
	42		W0014	074	24		21-31-21	ALL
	43		W0014	075	22		21-31-21	ALL
	44		W0014	242B	24		73-21-14	ALL
	45		W0014	242R	24		73-21-14	ALL
	46		W0014	243B	24		73-21-14	ALL
	47		W0014	243R	24		73-21-14	ALL
	48		W0014	FRQ			73-21-14	ALL
	49		W0014	248Z			77-31-11	ALL
	50		W0014	232R	22		77-31-11	ALL
	51		W0014	232B	22		77-31-11	ALL
	52		W0014	232Z			77-31-11	ALL
	53		W0014	248R	24		77-31-11	ALL
	54		W0014	248B	24		77-31-11	ALL
	55	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D08000

Page 26

Feb 06/2009



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D08034P		AE0306/ /		PLUG-E2-4 (continued)				ALL
	DED		W0014	075Z			21-31-21	ALL
			W0014	242Z			73-21-14	ALL
			W0014	243Z			73-21-14	ALL
			W0014	FRQ			73-21-14	ALL
D08036J		AE0202/ /		RCPT-				ALL
	1		W1114	034	22		29-11-32	ALL
	2		W1114	206Z			29-11-32	ALL
	3		W1114	036	22		29-11-32	ALL
	4		W1114	009	22		28-21-12	ALL
	5		W1114	008	22		28-21-12	ALL
	6		W1114	001	22		28-21-12	ALL
	7		W1114	035	22		29-11-32	ALL
	8		W1114	041	22		29-11-32	ALL
	9		W1114	206R	24		29-11-32	ALL
	10		W1114	206B	24		29-11-32	ALL
	11		W1114	042	24		29-11-32	ALL
	12		W1114	040	22		29-11-32	ALL
	13		W1114	052	24		28-22-12	ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16		W1114	062	24		73-21-18	ALL
	17		W1114	063	24		73-21-18	ALL
	18		W1114	046	24		29-21-31	ALL
	19		W1114	048	24		29-21-31	ALL
	20		W1114	084	24		80-11-21	ALL
	21		W1114	085	24		80-11-21	ALL
	22		W1114	113	24		21-58-15	ALL
	23		W1114	114	24		21-58-11	ALL
	24		W1114	111	22		21-58-11	ALL
	DED		W1114	062Z			73-21-18	ALL
	DED		W1114	063Z			73-21-18	ALL
D08036P		AE0202/ /		PLUG-P50				ALL
	1		W0596	088	20		29-11-32	ALL
	2		W0596	213Z			29-11-32	ALL
	3		W0596	094	20		29-11-32	ALL
	4		W0596	065	22		28-21-12	ALL
	5		W0596	066	22		28-21-12	ALL
	6		W0596	067	22		28-21-12	ALL

HOOKUP LIST

D280T132

91-21-51

Section D08000

Page 27

Feb 06/2009



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D08036P		AE0202/ /		PLUG-P50 (continued)				ALL
	7		W0596	081	20		29-11-32	ALL
	8	DL	W0596	095	18		29-11-32	ALL
	9		W0596	213R	24		29-11-32	ALL
	10		W0596	213B	24		29-11-32	ALL
	11		W0596	096	24		29-11-32	ALL
	12		W0596	097	22		29-11-32	ALL
	13		W0596	501	24		28-22-12	ALL
	14	UNUSED						050-099, 155-199, 277-299
	14		W0596	502	24		SPARE	150-154, 275-276
	15	UNUSED						050-099, 155-199, 277-299
	15		W0596	503	24		SPARE	150-154, 275-276
	16		W0596	063	24		73-21-18	ALL
	17		W0596	064	24		73-21-18	ALL
	18		W0596	103	24		29-21-31	ALL
	19		W0596	104	24		29-21-31	ALL
	20		W0596	188	24		80-11-21	ALL
	21		W0596	189	24		80-11-21	ALL
	22		W0596	025	24		21-58-15	ALL
	23		W0596	018	24		21-58-16	ALL
	24		W0596	019	22		21-58-16	ALL
D08038J		AE0202/ /		RCPT-				ALL
	1		W1114	025Z			28-21-12	ALL
	2		W1114	FRA			28-21-12	ALL
	3		W1114	FRD			28-21-12	ALL
	4		W1114	025	22		28-21-12	ALL
	5		W1114	021Z			28-21-12	ALL
	6		W1114	021	22		28-21-12	ALL
	7		W1114	FRB			28-21-12	ALL
	8		W1114	024	22		28-21-12	ALL
	9		W1114	FRC			28-21-12	ALL
	10		W1114	FRE			28-21-12	ALL
	11		W1114	020	22		28-21-12	ALL
	12		W1114	FRF			28-21-12	ALL
			W1114	020Z			28-21-12	ALL
			W1114	024Z			28-21-12	ALL
			W1114	FRA			28-21-12	ALL
			W1114	FRB			28-21-12	ALL
			W1114	FRC			28-21-12	ALL
			W1114	FRD			28-21-12	ALL

HOOKUP LIST

D280T132

91-21-51

Section D08000

Page 28

Feb 06/2009



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D08038J		AE0202/ /		RCPT- (continued)				ALL
			W1114	FRE			28-21-12	ALL
			W1114	FRF			28-21-12	ALL
D08038P		AE0202/ /		PLUG-50				ALL
	1		W0598	112Z			28-21-12	ALL
	2		W0598	FRA			28-21-12	ALL
	3		W0598	FRD			28-21-12	ALL
	4		W0598	112	20		28-21-12	ALL
	5		W0598	110Z			28-21-12	ALL
	6		W0598	110	20		28-21-12	ALL
	7		W0598	FRB			28-21-12	ALL
	8		W0598	111	20		28-21-12	ALL
	9		W0598	FRC			28-21-12	ALL
	10		W0598	FRE			28-21-12	ALL
	11		W0598	113	20		28-21-12	ALL
	12		W0598	FRF			28-21-12	ALL
			W0598	111Z			28-21-12	ALL
			W0598	113Z			28-21-12	ALL
			W0598	FRA			28-21-12	ALL
			W0598	FRB			28-21-12	ALL
			W0598	FRC			28-21-12	ALL
			W0598	FRD			28-21-12	ALL
			W0598	FRE			28-21-12	ALL
			W0598	FRF			28-21-12	ALL
D08040J		AE0220/ /		RCPT-E3-1				ALL
	1		W0622	033	24		21-53-11	ALL
	2		W0622	034	24		21-53-11	ALL
	3		W0622	035	24		21-53-11	ALL
	4		W0622	036	24		21-53-11	ALL
	5		W0622	037	24		21-53-11	ALL
	6		W0622	038	24		21-53-11	ALL
	7		W0622	039	24		21-53-11	ALL
	8		W0622	056	24		21-52-41	ALL
	9		W0622	041	24		21-53-11	ALL
	10		W0622	069	22		SPARE	ALL
	11		W0622	070	22		SPARE	ALL
	12	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D08000

Page 29

Feb 06/2009



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D08040P		AE0220/ /		PLUG-E3-1				ALL
	1		W0082	001	20		21-53-11	ALL
	2		W0082	002	24		21-53-11	ALL
	3		W0082	003	24		21-53-11	ALL
	4		W0082	004	24		21-53-11	ALL
	5		W0082	005	24		21-53-11	ALL
	6		W0082	006	24		21-53-11	ALL
	7		W0082	007	24		21-53-11	ALL
	8		W0082	104	24		21-52-41	ALL
	9		W0082	113	24		21-53-11	ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	DED		W0082	001Z			21-53-11	ALL
	DED		W0082	104Z			21-52-41	ALL
D08042J		AC0701/ /		RCPT-				ALL
	1		W0942	301B	24		21-53-11	ALL
	2		W0942	301R	24		21-53-11	ALL
	3		W0942	301Y	24		21-53-11	ALL
	4		W0942	302B	24		21-53-11	ALL
	5		W0942	302R	24		21-53-11	ALL
	6		W0942	302Y	24		21-53-11	ALL
	7		W0942	303B	24		21-53-11	ALL
	8		W0942	303R	24		21-53-11	ALL
	9		W0942	303Y	24		21-53-11	ALL
	10		W0942	304B	24		21-52-11	ALL
	11		W0942	304R	24		21-52-11	ALL
	12		W0942	304Y	24		21-52-11	ALL
	13		W0942	307B	22		21-51-12	ALL
	14		W0942	307R	22		21-51-12	ALL
	15		W0942	307Y	22		21-51-12	ALL
	16		W0942	306B	22		21-51-12	ALL
	17		W0942	306R	22		21-51-12	ALL
	18		W0942	306Y	22		21-51-12	ALL
	19		W0942	092	24		36-11-11	ALL
	20		W0942	093	24		36-11-11	ALL
	21		W0942	094	24		36-11-11	ALL
	22		W0942	095	24		36-11-11	ALL
	23		W0942	321B	22		SPARE	ALL
	24		W0942	321R	22		SPARE	ALL

HOOKUP LIST

D280T132

91-21-51

Section D08000

Page 30

Feb 06/2009



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D08042J		AC0701/ /		RCPT- (continued)				ALL
	25		W0942	321Y	22		SPARE	ALL
	26		W0942	801	20		SPARE	ALL
	27		W0942	802	20		SPARE	ALL
	28		W0942	125R	22		26-18-11	ALL
	29		W0942	322B	22		21-52-11	ALL
	30		W0942	322R	22		21-52-11	ALL
	31		W0942	322Y	22		21-52-11	ALL
D08042P		AC0701/ /		PLUG-				ALL
	1		W0938	301B	20		21-53-11	ALL
	2		W0938	301R	20		21-53-11	ALL
	3		W0938	301Y	20		21-53-11	ALL
	4		W0938	302B	20		21-53-11	ALL
	5		W0938	302R	20		21-53-11	ALL
	6		W0938	302Y	20		21-53-11	ALL
	7		W0938	303B	20		21-53-11	ALL
	8		W0938	303R	20		21-53-11	ALL
	9		W0938	303Y	20		21-53-11	ALL
	10		W0938	304B	20		21-52-11	ALL
	11		W0938	304R	20		21-52-11	ALL
	12		W0938	304Y	20		21-52-11	ALL
	13		W0938	305B	20		21-51-12	ALL
	14		W0938	305R	20		21-51-12	ALL
	15		W0938	305Y	20		21-51-12	ALL
	16		W0938	306B	20		21-51-12	ALL
	17		W0938	306R	20		21-51-12	ALL
	18		W0938	306Y	20		21-51-12	ALL
	19		W0938	037	20		36-11-11	ALL
	20		W0938	038	20		36-11-11	ALL
	21		W0938	039	20		36-11-11	ALL
	22		W0938	040	20		36-11-11	ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	DL	W0938	054R	18		26-18-11	ALL
	29		W0938	307B	20		21-52-11	ALL
	30		W0938	307R	20		21-52-11	ALL
	31		W0938	307Y	20		21-52-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D08000

Page 31

Feb 06/2009



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D08044J		AC0701/ /		RCPT-				ALL
	1		W0578	013	24		21-53-11	ALL
	2		W0578	014	24		21-53-11	ALL
	3		W0578	015	24		21-53-11	ALL
	4		W0578	027	18		33-31-21	ALL
	5		W0578	017	24		21-53-11	ALL
	6		W0578	018	24		21-53-11	ALL
	7		W0578	802	18		SPARE	ALL
	8		W0578	016	24		21-53-11	ALL
	9	UNUSED						ALL
	10		W0578	026	18		33-31-21	ALL
	11		W0578	801	22		SPARE	ALL
	12	UNUSED						ALL
D08044P		AC0701/ /		PLUG-				ALL
	1		W0938	001	20		21-53-11	ALL
	2		W0938	002	20		21-53-11	ALL
	3		W0938	003	20		21-53-11	ALL
	4		W0938	025	18		33-31-21	ALL
	5		W0938	005	20		21-53-11	ALL
	6		W0938	006	20		21-53-11	ALL
	7	UNUSED						ALL
	8		W0938	004	20		21-53-11	ALL
	9	UNUSED						ALL
	10		W0938	026	18		33-31-21	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D08046J		AC0701/ /		RCPT-				ALL
	1		W0628	041	24		21-53-12	ALL
	2		W0628	042	24		21-53-12	ALL
	3		W0628	043	24		21-53-12	ALL
	4		W0628	044	24		21-53-12	ALL
	5		W0628	045	24		21-53-12	ALL
	6		W0628	046	24		21-53-12	ALL
	7		W0628	049	24		21-61-51	ALL
	8		W0628	101	20		SPARE	ALL
	9		W0628	031	20		33-44-11	ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D08000

Page 32

Feb 06/2009



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D08046J		AC0701 /		RCPT- (continued)				ALL
	13		W0628	218B	22		21-51-13	ALL
	14		W0628	218R	22		21-51-13	ALL
	15		W0628	219B	22		21-51-13	ALL
	16		W0628	219R	22		21-51-13	ALL
	17		W0628	012	24		SPARE	ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D08046P		AC0701 /		PLUG-				ALL
	1		W0938	010	20		21-53-12	ALL
	2		W0938	012	20		21-53-12	ALL
	3		W0938	015	20		21-53-12	ALL
	4		W0938	017	20		21-53-12	ALL
	5		W0938	020	20		21-53-12	ALL
	6		W0938	022	20		21-53-12	ALL
	7		W0938	033	20		21-61-51	ALL
	8	UNUSED						ALL
	9	DL	W0938	051	18		33-44-11	050-099, 153-199, 275-299
	9		W0938	051	20		33-44-11	150-152
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13		W0938	201B	20		21-51-13	ALL
	14		W0938	201R	20		21-51-13	ALL
	15		W0938	202B	20		21-51-13	ALL
	16		W0938	202R	20		21-51-13	ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D08000

Page 33

Feb 06/2009



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D08048J		AC0702/ /		RCPT-				ALL
	1		W0580	008	24		21-53-21	ALL
	2		W0580	009	24		21-53-21	ALL
	3		W0580	010	24		21-53-21	ALL
	4		W0580	011	24		21-53-21	ALL
	5		W0580	012	24		21-53-21	ALL
	6		W0580	013	24		21-53-21	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D08048P		AC0702/ /		PLUG-				ALL
	1		W0612	001	20		21-53-21	ALL
	2		W0612	002	20		21-53-21	ALL
	3		W0612	003	20		21-53-21	ALL
	4		W0612	004	20		21-53-21	ALL
	5		W0612	005	20		21-53-21	ALL
	6		W0612	006	20		21-53-21	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D08000
Page 34
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D08048P		AC0702/ /		PLUG- (continued)				ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D08050J		AE0220/ /		RCPT-E3-1				050-099, 150-199, 275-278
D08050J		290 E3-1/152/R 58		RCPT-E3-1				280-299
	1		W0738	301B	24		21-53-21	ALL
	2		W0738	301R	24		21-53-21	ALL
	3		W0738	301Y	24		21-53-21	ALL
	4		W0738	302B	24		21-53-21	ALL
	5		W0738	302R	24		21-53-21	ALL
	6		W0738	302Y	24		21-53-21	ALL
	7		W0738	303B	24		21-53-21	ALL
	8		W0738	303R	24		21-53-21	ALL
	9		W0738	303Y	24		21-53-21	ALL
	10		W0738	306B	22		21-51-22	ALL
	11		W0738	306R	22		21-51-22	ALL
	12		W0738	306Y	22		21-51-22	ALL
	13		W0738	307B	22		21-51-22	ALL
	14		W0738	307R	22		21-51-22	ALL
	15		W0738	307Y	22		21-51-22	ALL
	16		W0738	308B	22		21-51-22	ALL
	17		W0738	308R	22		21-51-22	ALL
	18		W0738	308Y	22		21-51-22	ALL
	19		W0738	206B	22		21-51-22	ALL
	20		W0738	206R	22		21-51-22	ALL
	21		W0738	207B	22		21-51-22	ALL
	22		W0738	207R	22		21-51-22	ALL
	23		W0738	213B	24		21-52-41	ALL
	24		W0738	213R	24		21-52-41	ALL
	25		W0738	209B	22		21-51-22	ALL
	26		W0738	209R	22		21-51-22	ALL
	27		W0738	210B	24		21-51-22	ALL

HOOKUP LIST

D280T132

91-21-51

Section D08000

Page 35

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D08050J		AE0220/ /		RCPT-E3-1 (continued)				050-099, 150-199, 275-278
D08050J		290 E3-1/152/R 58		RCPT-E3-1 (continued)				280-299
	28		W0738	210R	24		21-51-22	ALL
	29		W0738	082	22		SPARE	ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32		W0738	211B	24		21-61-51	ALL
	33		W0738	211R	24		21-61-51	ALL
	34		W0738	053	24		36-23-21	ALL
	35		W0738	054	24		36-23-21	ALL
	36		W0738	401G	24		21-52-41	ALL
	37		W0738	401R	24		21-52-41	ALL
	38		W0738	401Y	24		21-52-41	ALL
	39		W0738	401B	24		21-52-41	ALL
	40		W0738	214R	24		21-52-41	ALL
	41		W0738	214B	24		21-52-41	ALL
	42		W0738	115	24		36-23-21	ALL
	43		W0738	222R	22		21-51-22	ALL
	44		W0738	222B	22		21-51-22	ALL
	45		W0738	223B	24		21-52-41	ALL
	46		W0738	223R	24		21-52-41	ALL
	47		W0738	102	24		21-61-51	ALL
	48		W0738	106	24		21-51-21	ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52		W0738	117	24		36-23-21	ALL
	53		W0738	118	24		36-23-21	ALL
	54		W0738	119	24		36-23-21	ALL
	55	UNUSED						ALL
D08050P		AE0220/ /		PLUG-E3-1				ALL
	1		W0084	301B	24		21-53-21	ALL
	2		W0084	301R	24		21-53-21	ALL
	3		W0084	301Y	24		21-53-21	ALL
	4		W0084	302B	24		21-53-21	ALL
	5		W0084	302R	24		21-53-21	ALL
	6		W0084	302Y	24		21-53-21	ALL
	7		W0084	303B	24		21-53-21	ALL
	8		W0084	303R	24		21-53-21	ALL
	9		W0084	303Y	24		21-53-21	ALL

HOOKUP LIST

D280T132

91-21-51

Section D08000

Page 36

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D08050P		AE0220 / /		PLUG-E3-1 (continued)				ALL
	10		W0084	306B	22		21-51-22	ALL
	11		W0084	306R	22		21-51-22	ALL
	12		W0084	306Y	22		21-51-22	ALL
	13		W0084	307B	22		21-51-22	ALL
	14		W0084	307R	22		21-51-22	ALL
	15		W0084	307Y	22		21-51-22	ALL
	16		W0084	304B	22		21-51-22	ALL
	17		W0084	304R	22		21-51-22	ALL
	18		W0084	304Y	22		21-51-22	ALL
	19		W0084	201B	22		21-51-22	ALL
	20		W0084	201R	22		21-51-22	ALL
	21		W0084	202B	22		21-51-22	ALL
	22		W0084	202R	22		21-51-22	ALL
	23		W0084	229B	24		21-52-41	ALL
	24		W0084	229R	24		21-52-41	ALL
	25		W0084	204B	22		21-51-22	ALL
	26		W0084	204R	22		21-51-22	ALL
	27		W0084	205B	24		21-51-22	ALL
	28		W0084	205R	24		21-51-22	ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32		W0084	221B	24		21-61-51	ALL
	33		W0084	221R	24		21-61-51	ALL
	34		W0084	095	24		36-23-21	ALL
	35		W0084	096	24		36-23-21	ALL
	36		W0084	401G	24		21-52-41	ALL
	37		W0084	401R	24		21-52-41	ALL
	38		W0084	401Y	24		21-52-41	ALL
	39		W0084	401B	24		21-52-41	ALL
	40		W0084	230R	24		21-52-41	ALL
	41		W0084	230B	24		21-52-41	ALL
	42		W0084	152	24		36-23-21	ALL
	43		W0084	237R	22		21-51-22	ALL
	44		W0084	237B	22		21-51-22	ALL
	45		W0084	231B	24		21-52-41	ALL
	46		W0084	231R	24		21-52-41	ALL
	47		W0084	012	24		21-61-51	ALL
	48		W0084	117	24		21-51-21	ALL
	49	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D08000

Page 37

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D08050P		AE0220/ /		PLUG-E3-1 (continued)				ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52		W0084	170	24		36-23-21	ALL
	53		W0084	171	24		36-23-21	ALL
	54		W0084	172	24		36-23-21	ALL
	55	UNUSED						ALL
D08052J		AE0220/ /		RCPT-E3-1				ALL
	1		W0624	033	24		21-53-21	ALL
	2		W0624	034	24		21-53-21	ALL
	3		W0624	035	24		21-53-21	ALL
	4		W0624	036	24		21-53-21	ALL
	5		W0624	037	24		21-53-21	ALL
	6		W0624	038	24		21-53-21	ALL
	7		W0624	039	24		21-53-21	ALL
	8		W0624	040	24		21-53-21	ALL
	9		W0624	212R	22		21-51-22	ALL
	10		W0624	212B	22		21-51-22	ALL
	11		W0624	213B	22		21-51-22	ALL
	12		W0624	213R	22		21-51-22	ALL
	13		W0624	214R	24		21-51-21	ALL
	14		W0624	214B	24		21-51-21	ALL
	15		W0624	075	24		21-51-21	ALL
	16		W0624	076	22		21-51-21	ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D08052P		AE0220/ /		PLUG-E3-1				ALL
	1	DL	W0084	001	18		21-53-21	ALL
	2		W0084	002	24		21-53-21	ALL
	3		W0084	003	24		21-53-21	ALL
	4		W0084	004	24		21-53-21	ALL
	5		W0084	005	24		21-53-21	ALL
	6		W0084	006	24		21-53-21	ALL

HOOKUP LIST
D280T132

91-21-51
Section D08000
Page 38
Mar 14/2007

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D08052P		AE0220/ /		PLUG-E3-1 (continued)				ALL
	7		W0084	007	24		21-53-21	ALL
	8		W0084	105	24		21-53-21	ALL
	9		W0084	234R	22		21-51-22	ALL
	10		W0084	234B	22		21-51-22	ALL
	11		W0084	237B	22		21-51-22	ALL
	12		W0084	237R	22		21-51-22	ALL
	13		W0084	232R	24		21-51-21	ALL
	14		W0084	232B	24		21-51-21	ALL
	15		W0084	106	24		21-51-21	ALL
	16		W0084	108	22		21-51-21	ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	DED		W0084	001Z			21-53-21	ALL
D08054J		AF0204/ /		RCPT-P61				ALL
	1		W0070	043	20		21-31-31	ALL
	2		W0070	042	20		21-31-31	ALL
	3		W0070	02V	24		21-58-16	ALL
	4		W0070	305B	22		21-31-31	ALL
	5		W0070	305R	22		21-31-31	ALL
	6		W0070	305Y	22		21-31-31	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D08054P		AF0204/ /		PLUG-P61				ALL
	1		W0984	001	20		21-31-31	ALL
	2		W0984	002	20		21-31-31	ALL
	3		W0984	011	24		21-58-16	ALL
	4		W0984	301B	22		21-31-31	ALL
	5		W0984	301R	22		21-31-31	ALL

HOOKUP LIST

D280T132

91-21-51

Section D08000

Page 39

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D08054P		AF0204/ /		PLUG-P61 (continued)				ALL
	6		W0984	301Y	22		21-31-31	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D08060J		AC0701/ /		RCPT-				ALL
	1		W0984	001	20		21-31-31	ALL
	2		W0984	002	20		21-31-31	ALL
	3		W0984	301B	22		21-31-31	ALL
	4		W0984	301R	22		21-31-31	ALL
	5		W0984	301Y	22		21-31-31	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D08060P		AC0701/ /		PLUG-				ALL
	1		W0998	001	20		21-31-31	ALL
	2		W0998	002	20		21-31-31	ALL
	3		W0998	301B	22		21-31-31	ALL
	4		W0998	301R	22		21-31-31	ALL
	5		W0998	301Y	22		21-31-31	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D08064J		AE0218/ /		RCPT-P37				ALL
	1		W1118	042	18		27-81-21	ALL
	2		W1118	044	18		27-81-21	ALL
	3		W1118	043	18		27-81-21	ALL

HOOKUP LIST
D280T132

91-21-51
Section D08000
Page 40
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D08064J		AE0218/ /		RCPT-P37 (continued)				ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
D08064P		AE0218/ /		PLUG-P37				ALL
	1		W0274	001	18		27-81-21	ALL
	2		W0274	002	18		27-81-21	ALL
	3		W0274	003	18		27-81-21	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
D08066J		AC0702/ /		RCPT-				ALL
	1		W0588	021	24		21-53-22	ALL
	2		W0588	022	24		21-53-22	ALL
	3		W0588	023	24		21-53-22	ALL
	4		W0588	024	24		21-53-22	ALL
	5		W0588	025	24		21-53-22	ALL
	6		W0588	026	24		21-53-22	ALL
	7		W0588	019	22		SPARE	ALL
	8		W0588	040R	22		26-18-21	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13		W0588	211B	22		21-51-23	ALL
	14		W0588	211R	22		21-51-23	ALL
	15		W0588	212B	22		21-51-23	ALL
	16		W0588	212R	22		21-51-23	ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D08000

Page 41

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D08066P		AC0702/ /		PLUG-				ALL
	1		W0612	015	20		21-53-22	ALL
	2		W0612	017	20		21-53-22	ALL
	3		W0612	010	20		21-53-22	ALL
	4		W0612	012	20		21-53-22	ALL
	5		W0612	020	20		21-53-22	ALL
	6		W0612	022	20		21-53-22	ALL
	7	UNUSED						ALL
	8	DL	W0612	032R	18		26-18-21	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13		W0612	201B	20		21-51-23	ALL
	14		W0612	201R	20		21-51-23	ALL
	15		W0612	202B	20		21-51-23	ALL
	16		W0612	202R	20		21-51-23	ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D08068J		AE0202/ /		RCPT-				ALL
	1		W1078	083	24		21-53-22	ALL
	2		W1078	082	24		21-53-22	ALL
	3		W1078	081	24		21-53-22	ALL
	4		W1078	080	24		21-53-22	ALL
	5		W1078	079	24		21-53-22	ALL
	6		W1078	078	24		21-53-22	ALL
	7		W1078	084	24		21-53-22	ALL
	8		W1078	076	24		21-53-22	ALL
	9		W1078	077	24		21-53-22	ALL
	10		W1078	074	24		21-53-22	ALL
	11		W1078	075	24		21-53-22	ALL
	12		W1078	072	24		21-53-22	ALL
	13		W1078	073	24		21-53-22	ALL
	14	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D08000
Page 42
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D08068J		AE0202/ /		RCPT- (continued)				ALL
	15		W1078	048	24		21-26-11	ALL
	16		W1078	050	24		21-26-11	ALL
	17		W1078	157	22		36-11-51	ALL
	18		W1078	049	24		21-26-11	ALL
	19		W1078	051	24		21-26-11	ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22		W1078	093	22		36-11-51	ALL
	23		W1078	097	24		36-11-51	ALL
	24		W1078	740	22		36-11-51	ALL
	25		W1078	092	24		36-11-51	ALL
	26		W1078	106	24		36-11-51	ALL
	27		W1078	744	22		36-11-51	ALL
	28		W1078	738	22		36-11-51	ALL
	29		W1078	107	24		36-11-51	ALL
	30		W1078	136	24		36-11-41	ALL
	31		W1078	100	22		36-11-61	ALL
	32		W1078	103	24		36-11-61	ALL
	33		W1078	102	22		36-11-61	ALL
	34		W1078	095	24		36-11-61	ALL
	35		W1078	101	24		36-11-61	ALL
	36		W1078	104	22		36-11-61	ALL
	37		W1078	514	24		21-24-11	050-099, 150-199 275-299
	37	UNUSED						050-099, 150-199 275-299
	38		W1078	515	24		21-24-11	050-099, 150-199 275-299
	38	UNUSED						050-099, 150-199 275-299
	39		W1078	509	24		21-24-11	050-099, 150-199 275-299
	39	UNUSED						050-099, 150-199 275-299
	40		W1078	741	24		36-11-51	ALL
	41		W1078	087	22		36-11-51	ALL
	42		W1078	086	22		36-11-51	ALL
	43		W1078	510	24		21-24-11	050-099, 150-199 275-299
	43	UNUSED						050-099, 150-199 275-299
	44		W1078	252	22		36-11-51	ALL
	45		W1078	038	24		21-51-23	ALL
	46		W1078	055	24		21-58-14	ALL
	47		W1078	110	24		28-22-12	ALL
	48	UNUSED						050-099
	48		W1078	035	24		21-51-11	150-199, 275-299

HOOKUP LIST

D280T132

91-21-51

Section D08000

Page 43

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D08068J		AE0202/ /		RCPT- (continued)				ALL
	49	UNUSED						050-099, 150-155, 157-165, 167-199, 275-299
	49		W1078	781	22		36-11-51	156, 166
	50		W1078	046	24		21-26-11	ALL
	51		W1078	156	24		30-31-11	ALL
	52		W1078	158	24		30-34-11	ALL
	53		W1078	512	24		21-24-11	050-099, 150-199 275-299
	53	UNUSED						050-099, 150-199 275-299
	54		W1078	513	22		21-24-11	050-099, 150-199 275-299
	54	UNUSED						050-099
	55	UNUSED						050-099
	55		W1078	090	24		21-51-11	150-199, 275-299
D08068P		AE0202/ /		PLUG-P50				ALL
	1		W0572	049	24		21-53-22	ALL
	2		W0572	050	24		21-53-22	ALL
	3		W0572	051	24		21-53-22	ALL
	4		W0572	052	24		21-53-22	ALL
	5		W0572	053	24		21-53-22	ALL
	6		W0572	054	24		21-53-22	ALL
	7		W0572	055	24		21-53-22	ALL
	8		W0572	056	24		21-53-22	ALL
	9		W0572	057	24		21-53-22	ALL
	10		W0572	013	24		21-53-22	ALL
	11		W0572	022	24		21-53-22	ALL
	12		W0572	023	24		21-53-22	ALL
	13		W0572	037	24		21-53-22	ALL
	14		W0572	058	24		SPARE	ALL
	15		W0572	060	24		21-26-11	ALL
	16		W0572	062	24		21-26-11	ALL
	17		W0572	601	22		36-11-51	ALL
	18		W0572	064	24		21-26-11	ALL
	19		W0572	065	24		21-26-11	ALL
	20	UNUSED						050-099, 275-299
	20		W0572	081	24		SPARE	150-199
	21	UNUSED						ALL
	22		W0572	096	22		36-11-51	ALL
	23		W0572	097	24		36-11-51	ALL
	24		W0572	110	22		36-11-51	ALL
	25		W0572	140	24		36-11-51	ALL

HOOKUP LIST

D280T132

91-21-51

Section D08000

Page 44

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D08068P		AE0202/ /		PLUG-P50 (continued)				ALL
	26		W0572	098	24		36-11-51	ALL
	27	DL	W0572	108	18		36-11-51	ALL
	28	DL	W0572	106	18		36-11-51	ALL
	29		W0572	107	24		36-11-51	ALL
	30		W0572	600	24		36-11-41	ALL
	31	DL	W0572	114	18		36-11-61	ALL
	32		W0572	126	24		36-11-61	ALL
	33	DL	W0572	127	18		36-11-61	ALL
	34		W0572	128	24		36-11-61	ALL
	35		W0572	628	24		36-11-61	050-099, 150-156, 162-166, 275-276
	35		W0572	112	24		36-11-61	157, 167-199, 277-299
	36		W0572	113	22		36-11-61	ALL
	37		W0572	507	24		21-24-11	050-099, 150-199
	37	UNUSED						275-299
	38		W0572	508	24		21-24-11	050-099, 150-199
	38	UNUSED						275-299
	39		W0572	509	24		21-24-11	050-099, 150-199
	39	UNUSED						275-299
	40		W0572	142	24		36-11-51	ALL
	41		W0572	143	22		36-11-51	ALL
	42		W0572	144	22		36-11-51	ALL
	43		W0572	510	24		21-24-11	050-099, 150-199
	43	UNUSED						275-299
	44		W0572	529	22		36-11-51	050-099, 150-155, 162-165, 275-276
	44	DL	W0572	688	18		36-11-51	156-157, 166-199, 277-299
	45		W0572	543	24		21-51-23	ALL
	46		W0572	542	24		21-58-14	ALL
	47		W0572	544	24		28-22-12	ALL
	48		W0572	592	24		SPARE	050-099
	48		W0572	592	24		21-58-16	150-199, 275-299
	49	UNUSED						050-099, 150-155, 157-165, 167-199, 275-299
	49		W0572	689	22		36-11-51	156, 166
	50		W0572	593	24		21-26-11	ALL
	51		W0572	565	24		30-31-11	ALL
	52		W0572	550	24		30-34-11	ALL
	53		W0572	512	24		21-24-11	050-099, 150-199
	53	UNUSED						275-299
	54		W0572	538	22		21-24-11	050-099, 150-199
	54	UNUSED						275-299

HOOKUP LIST

D280T132

91-21-51

Section D08000

Page 45

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D08068P		AE0202/ /		PLUG-P50 (continued)				ALL
	55		W0572	594	24		SPARE	050-099
	55		W0572	594	24		21-58-16	150-199, 275-299
D08070J		AC0506/ /		RCPT-P35				ALL
	1		W1066	201B	24		52-71-13	ALL
	2		W1066	201R	24		52-71-13	ALL
	3		W1066	202B	24		52-34-13	ALL
	4		W1066	202R	24		52-34-13	ALL
	5		W1066	203B	24		52-34-13	ALL
	6		W1066	203R	24		52-34-13	ALL
	7		W1066	204B	24		52-71-13	ALL
	8		W1066	204R	24		52-71-13	ALL
	9		W1066	205B	24		52-34-13	ALL
	10		W1066	205R	24		52-34-13	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13		W1066	310R	20		23-41-11	ALL
	14		W1066	310B	20		23-41-11	ALL
	15		W1066	310Y	20		23-41-11	ALL
D08070P		AC0506/ /		PLUG-P35				ALL
	1		W0916	211B	24		52-71-13	ALL
	2		W0916	211R	24		52-71-13	ALL
	3		W0916	207B	24		52-34-13	ALL
	4		W0916	207R	24		52-34-13	ALL
	5		W0916	208B	24		52-34-13	ALL
	6		W0916	208R	24		52-34-13	ALL
	7		W0916	209B	24		52-71-13	ALL
	8		W0916	209R	24		52-71-13	ALL
	9		W0916	210B	24		52-34-13	ALL
	10		W0916	210R	24		52-34-13	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13		W0916	231R	24		23-41-11	ALL
	14		W0916	231B	24		23-41-11	ALL
	15		W0916	231Z			23-41-11	ALL
D08072J		AC1304/ /		RCPT-P39				ALL
	1		W1068	201B	24		52-71-13	ALL
	2		W1068	201R	24		52-71-13	ALL

HOOKUP LIST
D280T132

91-21-51
Section D08000
Page 46
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D08072J		AC1304/ /		RCPT-P39 (continued)				ALL
	3		W1068	202B	24		52-35-13	ALL
	4		W1068	202R	24		52-35-13	ALL
	5		W1068	203B	24		52-35-13	ALL
	6		W1068	203R	24		52-35-13	ALL
	7		W1068	204B	24		52-35-13	ALL
	8		W1068	204R	24		52-35-13	ALL
	9		W1068	205B	24		52-35-13	050-099
	9	UNUSED						150-199, 275-299
	10		W1068	205R	24		52-35-13	050-099
	10	UNUSED						150-199, 275-299
	11	UNUSED						ALL
	12	UNUSED						ALL
	13		W1068	310R	20		23-41-11	ALL
	14		W1068	310B	20		23-41-11	ALL
	15		W1068	310Y	20		23-41-11	ALL
D08072P		AC1304/ /		PLUG-P39				ALL
	1		W0916	214B	24		52-71-13	ALL
	2		W0916	214R	24		52-71-13	ALL
	3		W0916	202B	24		52-35-13	ALL
	4		W0916	202R	24		52-35-13	ALL
	5		W0916	203B	24		52-35-13	ALL
	6		W0916	203R	24		52-35-13	ALL
	7		W0916	204B	24		52-35-13	ALL
	8		W0916	204R	24		52-35-13	ALL
	9		W0916	205B	24		52-35-13	050-099
	9	UNUSED						150-199, 275-299
	10		W0916	205R	24		52-35-13	050-099
	10	UNUSED						150-199, 275-299
	11	UNUSED						ALL
	12	UNUSED						ALL
	13		W0916	232R	24		23-41-11	ALL
	14		W0916	232B	24		23-41-11	ALL
	15		W0916	232Z			23-41-11	ALL
D08080J		AP0403/ /		RCPT-				ALL
	1		W1058	201B	22		21-51-12	ALL
	2		W1058	201R	22		21-51-12	ALL
	3		W1058	202B	24		21-61-21	ALL
	4		W1058	202R	24		21-61-21	ALL

HOOKUP LIST

D280T132

91-21-51

Section D08000

Page 47

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D08080J		AP0403/ /		RCPT- (continued)				ALL
	5		W1058	203B	24		21-61-21	ALL
	6		W1058	203R	24		21-61-21	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9		W1058	205B	20		21-65-11	ALL
	10		W1058	205R	20		21-65-11	ALL
	11		W1058	015	20		33-44-11	ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16		W1058	212B	20		21-65-11	ALL
	17		W1058	212R	20		21-65-11	ALL
	18		W1058	208R	24		21-61-61	ALL
	19		W1058	208B	24		21-61-61	ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
D08080P		AP0403/ /		PLUG-P19				ALL
	1		W0798	201B	22		21-51-12	ALL
	2		W0798	201R	22		21-51-12	ALL
	3		W0798	202B	24		21-61-21	ALL
	4		W0798	202R	24		21-61-21	ALL
	5		W0798	203B	24		21-61-21	ALL
	6		W0798	203R	24		21-61-21	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9		W0798	205B	20		21-65-11	ALL
	10		W0798	205R	20		21-65-11	ALL
	11		W0798	004	20		33-44-11	ALL

HOOKUP LIST
D280T132

91-21-51
Section D08000
Page 48
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D08080P		AP0403/ /		PLUG-P19 (continued)				ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16		W0798	208B	20		21-65-11	ALL
	17		W0798	208R	20		21-65-11	ALL
	18		W0798	206R	24		21-61-61	ALL
	19		W0798	206B	24		21-61-61	ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
D08092J		AE0220/ /		RCPT-E03-01				ALL
	1		W0572	204B	22		21-51-12	ALL
	2		W0572	204R	22		21-51-12	ALL
	3	UNUSED						ALL
	4		W0572	694	22		36-11-61	050-099, 150-155, 163-165, 275-276
	4	UNUSED						156-162, 166-199, 277-299
	5		W0572	692	22		36-11-61	050-099, 150-155, 163-165, 275-276
	5	UNUSED						156-162, 166-199, 277-299
	6	UNUSED						ALL
	7		W0572	693	22		36-11-61	050-099, 150-155, 163-165, 275-276
	7	UNUSED						156-162, 166-199, 277-299
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15		W0572	205B	24		21-61-11	ALL

HOOKUP LIST
D280T132

91-21-51
Section D08000
Page 49
Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D08092J		AE0220/ /		RCPT-E03-01 (continued)				ALL
	16		W0572	205R	24		21-61-11	ALL
	17		W0572	206B	24		21-61-11	ALL
	18		W0572	206R	24		21-61-11	ALL
	19		W0572	207B	24		21-61-21	ALL
	20		W0572	207R	24		21-61-21	ALL
	21		W0572	208B	24		21-61-21	ALL
	22		W0572	208R	24		21-61-21	ALL
	23		W0572	098	24		36-11-51	ALL
	24	DK	W0572	099	18		36-11-51	ALL
	25		W0572	695	20		36-23-11	ALL
	26		W0572	696	20		36-23-11	ALL
	27		W0572	083	24		21-61-51	ALL
	28		W0572	103	24		36-11-51	ALL
	29		W0572	101	24		36-11-51	ALL
	30		W0572	105	24		36-11-51	ALL
	31		W0572	697	20		36-23-11	ALL
	32	DK	W0572	100	18		36-11-51	ALL
	33	UNUSED						ALL
	34	UNUSED						050-099, 155-199, 276-299
	34	DK	W0572	102	18		36-11-51	150-154, 275
	35	UNUSED						ALL
	36		W0572	691	24		36-11-51	050-099, 150-154, 156-199, 275-299
	36	UNUSED						155
	37	UNUSED						ALL
	38		W0572	143	22		36-11-51	ALL
	39		W0572	144	22		36-11-51	ALL
	40	FM	W0572	801	16		SPARE	050-099, 155-199, 276-299
	40	FM	W0572	801	16		36-11-51	150-154, 275
	41	UNUSED						ALL
D08092P		AE0220/ /		PLUG-E3-1				ALL
	1		W0082	203B	22		21-51-12	ALL
	2		W0082	203R	22		21-51-12	ALL
	3	UNUSED						ALL
	4		W0082	169	22		36-23-11	050-099
	4	UNUSED						150-199, 275-299
	5		W0082	167	22		36-23-11	050-099
	5	UNUSED						150-199, 275-299
	6	UNUSED						ALL
	7		W0082	168	22		36-23-11	050-099

HOOKUP LIST
D280T132

91-21-51
Section D08000
Page 50
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D08092P		AE0220/ /		PLUG-E3-1 (continued)				ALL
	7	UNUSED						150-199, 275-299
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15		W0082	208B	24		21-61-11	ALL
	16		W0082	208R	24		21-61-11	ALL
	17		W0082	207B	24		21-61-11	ALL
	18		W0082	207R	24		21-61-11	ALL
	19		W0082	209B	24		21-61-21	ALL
	20		W0082	209R	24		21-61-21	ALL
	21		W0082	210B	24		21-61-21	ALL
	22		W0082	210R	24		21-61-21	ALL
	23		W0082	075	24		36-23-11	ALL
	24	DL	W0082	083	18		36-11-51	ALL
	25		W0082	164	24		36-23-11	050-099, 156-162, 166-199, 277-299
	25	UNUSED						150-155, 163-165, 275-276
	26		W0082	165	24		36-23-11	050-099, 156-162, 166-199, 277-299
	26	UNUSED						150-155, 163-165, 275-276
	27		W0082	069	24		21-61-51	ALL
	28		W0082	077	24		36-23-11	ALL
	29		W0082	076	24		36-23-11	ALL
	30		W0082	078	24		36-23-11	ALL
	31		W0082	166	24		36-23-11	050-099, 156-162, 166-199, 277-299
	31	UNUSED						150-155, 163-165, 275-276
	32	DL	W0082	085	18		36-11-51	ALL
	33	UNUSED						ALL
	34	UNUSED						050-099, 155-199, 276-299
	34	DL	W0082	087	18		36-11-51	150-154, 275
	35	UNUSED						ALL
	36		W0082	161	24		36-23-11	050-099, 156-162, 166-199, 277-299
	36	UNUSED						150-155, 163-165, 275-276
	37	UNUSED						ALL
	38		W0082	107	20		36-11-51	ALL
	39		W0082	108	20		36-11-51	ALL
	40	UNUSED						050-099, 155-199, 276-299
	40	DL	W0082	087	18		36-11-51	150-154, 275

HOOKUP LIST

D280T132

91-21-51

Section D08000

Page 51

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D08092P		AE0220/ /		PLUG-E3-1 (continued)				ALL
	41	UNUSED						ALL
D08094J		AP0401/ /		RCPT-P19				ALL
	1		W1110	066	20		25-63-11	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	DL	W1110	065	18		25-63-11	050-099, 150-199
	4		W1110	065	18		25-63-11	275-299
	5	UNUSED						ALL
	6	UNUSED						150-199, 275-299
	7	UNUSED						150-199, 275-299
D08094P		AP0401/ /		PLUG-P19				ALL
	1		W1248	008	20		25-63-11	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	DK	W1248	007	18		25-63-11	050-099
	4		W1248	007	18		25-63-11	150-199, 275-299
	5	UNUSED						ALL
	6	UNUSED						150-199, 275-299
	7	UNUSED						150-199, 275-299
D08098J		AP0403/ /		RCPT-P19				ALL
	1		W1110	066	20		25-63-11	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W1110	065	18		25-63-11	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
D08098P		AP0403/ /		PLUG-P19				ALL
	1		W1252	002	20		25-63-11	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W1252	001	18		25-63-11	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D08000
Page 52 End
Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D08100J		AP1005/ /		RCPT-P25				050-099
D08100J		AP1005/ /		RCPT-				150-199, 275-299
	1		W1112	002	20		25-63-11	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	DL	W1112	001	18		25-63-11	ALL
	5	UNUSED						ALL
D08100P		AP1005/ /		PLUG-P25				ALL
	1		W1252	008	20		25-63-11	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	DK	W1252	007	18		25-63-11	ALL
	5	UNUSED						ALL
D08102J		AP1003/ /		RCPT-P25				050-099
D08102J		AP1003/ /		RCPT-				150-199, 275-299
	1		W1112	002	20		25-63-11	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	DK	W1112	001	18		25-63-11	ALL
	5	UNUSED						ALL
D08102P		AP1003/ /		PLUG-P25				ALL
	1		W1254	002	20		25-63-11	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	DL	W1254	001	18		25-63-11	ALL
	5	UNUSED						ALL
D08104J		AF0204/ /		RCPT-P61				ALL
	1		W0070	854	20		25-63-11	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	DK	W0070	12F	18		25-63-11	ALL
	5	UNUSED						ALL
D08104P		AF0204/ /		PLUG-P61				ALL
	1		W1248	002	20		25-63-11	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D08100

Page 1

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D08104P		AF0204/ /		PLUG-P61 (continued)				ALL
	4	DL	W1248	001	18		25-63-11	ALL
	5	UNUSED						ALL
D08112J		AE0202/ /		RCPT-				ALL
	1		W1078	722	24		21-58-14	ALL
	2	UNUSED						ALL
	3		W1078	724	24		21-58-15	ALL
	4		W1078	177	24		36-11-61	ALL
	5		W1078	195	24		36-11-62	ALL
	6		W1078	701	24		36-22-11	ALL
	7	UNUSED						ALL
	8		W1078	057	24		21-58-14	ALL
	9		W1078	703	24		36-22-11	ALL
	10		W1078	056	24		21-58-14	ALL
	11		W1078	058	24		21-58-14	ALL
	12		W1078	728	24		21-26-11	ALL
	13		W1078	062	24		21-26-11	ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18		W1078	901	24		21-58-11	ALL
	19		W1078	708	24		21-51-21	ALL
	20		W1078	709	24		21-51-21	ALL
	21		W1078	529R	22		26-18-22	ALL
	22		W1078	161	24		73-21-18	ALL
	23		W1078	246	24		36-11-61	ALL
	24		W1078	247	24		36-11-62	ALL
	25		W1078	176	24		36-11-52	ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28		W1078	061	24		36-11-51	ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32		W1078	720	24		21-58-11	ALL
	33		W1078	053	24		21-58-14	ALL
	34		W1078	108	22		21-58-11	ALL
	35	UNUSED						ALL
	36		W1078	240	22		36-11-61	ALL

HOOKUP LIST

D280T132

91-21-51

Section D08100

Page 2

Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D08112J		AE0202/ /		RCPT- (continued)				ALL
	37		W1078	241	22		36-11-61	ALL
	38		W1078	242	24		36-11-61	ALL
	39		W1078	243	24		36-11-61	ALL
	40		W1078	251	24		36-11-61	ALL
	41		W1078	250R	24		77-12-12	ALL
	42		W1078	250B	24		77-12-12	ALL
	43		W1078	250Z			77-12-12	ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
	DED		W1078	529Z			26-18-22	050-099, 275-299
D08112P		AE0202/ /		PLUG-P50				ALL
	1		W0942	130	24		21-58-14	ALL
	2	UNUSED						ALL
	3		W0942	132	24		21-58-15	ALL
	4		W0942	151	24		36-11-61	ALL
	5		W0942	150	24		36-11-62	ALL
	6		W0942	148	24		36-22-11	ALL
	7	UNUSED						ALL
	8		W0942	065	24		21-58-14	ALL
	9		W0942	147	24		36-22-11	ALL
	10		W0942	067	24		21-58-14	ALL
	11	DK	W0942	064	18		21-58-14	ALL
	12		W0942	133	24		21-26-11	ALL
	13		W0942	134	24		21-26-11	ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18		W0942	501	24		21-58-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D08100

Page 3

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D08112P		AE0202/ /		PLUG-P50 (continued)				ALL
	19		W0942	142	24		21-51-21	ALL
	20		W0942	143	24		21-51-21	ALL
	21		W0942	811R	22		26-18-22	ALL
	22		W0942	157	24		73-21-18	ALL
	23		W0942	191	24		36-11-61	ALL
	24		W0942	192	24		36-11-62	ALL
	25		W0942	146	24		36-11-52	ALL
	26	UNUSED						050-099, 150-199
	26		W0942	152	24		SPARE	275-299
	27	UNUSED						050-099, 150-199
	27		W0942	153	24		SPARE	275-299
	28		W0942	145	24		36-11-51	ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32		W0942	003	24		21-58-11	ALL
	33		W0942	167	24		21-58-14	ALL
	34		W0942	129	24		21-58-11	ALL
	35	UNUSED						ALL
	36		W0942	190	22		36-11-61	ALL
	37		W0942	189	22		36-11-61	ALL
	38		W0942	188	24		36-11-61	ALL
	39		W0942	187	24		36-11-61	ALL
	40		W0942	185	24		36-11-61	ALL
	41		W0942	227R	24		77-12-12	ALL
	42		W0942	227B	24		77-12-12	ALL
	43		W0942	227Z			77-12-12	ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D08100

Page 4

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D08114J		AE0104/ /		RCPT-				ALL
	1		W5150	255	22		76-11-11	ALL
	2	UNUSED						050-099, 275-299
	2		W5150	265	22		SPARE	150-199
	3		W5150	250	22		76-11-11	ALL
	4		W5150	257	22		76-11-11	ALL
	5		W5150	253	22		76-11-11	ALL
	6		W5150	258	22		73-21-11	ALL
	7	UNUSED						ALL
	8	UNUSED						050-099, 275-299
	8		W5150	264	22		SPARE	150-199
	9		W5150	254	22		26-11-21	ALL
	10		W5150	259	22		28-22-21	ALL
	11		W5150	266	20		27-41-21	ALL
	12		W5150	252	22		33-16-18	ALL
	13		W5150	251	22		33-16-18	ALL
	14		W5150	260	22		28-22-21	ALL
	15		W5150	261	22		28-22-21	ALL
	16		W5150	256	22		SPARE	050-099, 275-299
	16	UNUSED						150-199
	17		W5150	262	22		28-22-21	ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21		W5150	277	22		73-21-11	ALL
	22		W5150	278	22		73-21-11	ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D08114P		AE0104/ /		PLUG-P10				ALL
	1		W0262	001	20		76-11-11	ALL
	2	UNUSED						ALL
	3		W0262	013	20		76-11-11	ALL
	4		W0262	014	20		76-11-11	ALL
	5		W0262	015	20		76-11-11	ALL
	6		W0262	020	24		73-21-11	ALL
	7	UNUSED						ALL
	8	UNUSED						050-099, 275-299
	8		W0262	009	22		SPARE	150-199
	9		W0262	025R	22		26-11-21	ALL
	10		W0262	026	20		28-22-21	ALL

HOOKUP LIST

D280T132

91-21-51

Section D08100

Page 5

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D08114P		AE0104/ /		PLUG-P10 (continued)				ALL
	11		W0262	031	20		27-41-21	ALL
	12		W0262	037	22		33-16-18	ALL
	13		W0262	036	22		33-16-18	ALL
	14	DK	W0262	039	18		28-22-21	ALL
	15	DK	W0262	040	18		28-22-21	ALL
	16	UNUSED						ALL
	17		W0262	048	22		28-22-21	ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21		W0262	018	24		73-21-11	ALL
	22		W0262	024	24		73-21-11	ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D08116J		AE0102/ /		RCPT-				ALL
	1		W5150	272	22		SPARE	050-099, 150-154, 275-299
	1		W5150	272	22		73-21-11	155-199
	2		W5150	268	22		SPARE	050-099, 150-199
	2	UNUSED						275-299
	3		W5150	305	22		78-34-21	ALL
	4		W5150	304	22		78-34-21	ALL
	5		W5150	300	22		78-34-21	ALL
	6	UNUSED						050-099, 275-299
	6		W5150	270	22		75-24-11	150-157
	6		W5150	270	22		SPARE	162-199
	7		W5150	406	22		32-42-12	ALL
	8		W5150	407	22		32-42-12	ALL
	9		W5150	407	22		32-42-12	ALL
	10		W5150	390	20		33-13-18	ALL
	11		W5150	267	22		28-22-21	ALL
	12	UNUSED						050-099, 275-299
	12		W5150	269	22		75-24-11	150-157
	12		W5150	269	22		SPARE	162-199
	13		W5150	271	22		SPARE	ALL
	14		W5150	408	22		32-42-12	ALL
	15		W5150	404	22		32-42-12	ALL
	16		W5150	408	22		32-42-12	ALL
	17		W5150	405	22		32-42-12	ALL
	18		W5150	410	22		SPARE	ALL

HOOKUP LIST
D280T132

91-21-51
Section D08100
Page 6
Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D08116J		AE0102/ /		RCPT- (continued)				ALL
	19		W5150	411	22		31-51-42	ALL
	20		W5150	433	22		78-36-11	ALL
	21		W5150	357	22		27-62-11	ALL
	22		W5150	356	22		27-62-11	ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D08116P		AE0102/ /		PLUG-P10				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W0768	054	24		78-34-21	ALL
	4		W0768	055	24		78-34-21	ALL
	5		W0768	10H	20		78-34-21	ALL
	6	UNUSED						ALL
	7		W0768	116	24		32-42-12	ALL
	8		W0768	117	24		32-42-12	ALL
	9		W0768	118	24		32-42-12	ALL
	10	DK	W0768	128	18		33-13-18	ALL
	11		W0768	108	22		28-22-21	ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14		W0768	119	24		32-42-12	ALL
	15		W0768	120	24		32-42-12	ALL
	16		W0768	121	24		32-42-12	ALL
	17		W0768	122	24		32-42-12	ALL
	18	UNUSED						ALL
	19		W0768	124	24		31-51-42	ALL
	20		W0768	183	22		78-36-11	ALL
	21		W0768	093	22		27-62-11	ALL
	22		W0768	056	22		27-62-11	ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	DED		W0768	183Z			78-36-11	ALL
D08118J		AE0102/ /		RCPT-				ALL
	1		W5150	200	22		76-11-11	ALL
	2		W5150	207	22		76-11-11	ALL
	3		W5150	203	22		76-11-11	ALL
	4		W5150	208	22		73-21-11	ALL
	5		W5150	423	22		32-44-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D08100

Page 7

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D08118J		AE0102/ /		RCPT- (continued)				ALL
	6	UNUSED						ALL
	7		W5150	228	22		73-21-11	ALL
	8		W5150	428	22		29-11-32	ALL
	9	UNUSED						ALL
	10		W5150	205	22		76-11-11	ALL
	11		W5150	215	20		SPARE	050-099, 150-154, 275-299
	11		W5150	215	20		73-21-11	155-199
	12		W5150	227	22		73-21-11	ALL
	13		W5150	206	22		SPARE	050-099, 275-299
	13	UNUSED						150-199
	14	UNUSED						050-099, 275-299
	14		W5150	214	22		SPARE	150-199
	15		W5150	204	22		26-11-11	ALL
	16		W5150	209	22		28-22-21	ALL
	17		W5150	216	20		27-41-11	ALL
	18		W5150	211	22		28-22-21	ALL
	19		W5150	210	22		28-22-21	ALL
	20		W5150	425	22		33-16-18	ALL
	21		W5150	424	22		33-16-18	ALL
	22		W5150	202	22		33-16-18	ALL
	23		W5150	201	22		33-16-18	ALL
	24		W5150	391	20		33-13-18	050-099, 150-155, 162-165, 275-276
	24		W5150	229R	20		33-13-18	156-157, 166-199, 277-299
	25	UNUSED						050-099, 150-155, 162-165, 275-276
	25		W5150	229B	20		33-13-18	156-157, 166-199, 277-299
	26		W5150	212	22		28-22-21	ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
D08118P		AE0102/ /		PLUG-P10				ALL
	1		W0264	001	20		76-11-11	ALL
	2		W0264	002	20		76-11-11	ALL
	3		W0264	003	20		76-11-11	ALL
	4		W0264	048	24		73-21-11	ALL
	5		W0264	005	22		32-44-11	ALL
	6	UNUSED						050-099, 155-199, 275-299
	6		W0264	006	22		SPARE	150-154

HOOKUP LIST
D280T132

91-21-51
Section D08100
Page 8
Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D08118P		AE0102/ /		PLUG-P10 (continued)				ALL
	7		W0264	040	24		73-21-11	ALL
	8		W0264	007	24		29-11-32	ALL
	9	UNUSED						ALL
	10		W0264	014	20		76-11-11	ALL
	11	UNUSED						050-099, 150-199
	11		W0264	015	20		SPARE	275-299
	12		W0264	047	24		73-21-11	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15		W0264	039R	22		26-11-11	ALL
	16		W0264	046	20		28-22-21	ALL
	17		W0264	050	20		27-41-11	ALL
	18	DK	W0264	052	18		28-22-21	ALL
	19	DK	W0264	051	18		28-22-21	ALL
	20		W0264	053	22		33-16-18	ALL
	21		W0264	054	22		33-16-18	ALL
	22		W0264	055	22		33-16-18	ALL
	23		W0264	056	22		33-16-18	ALL
	24	FM	W0264	057	16		33-13-18	050-099, 150-155, 162-165, 275-276
	24	FM	W0264	204R	16		33-13-18	156-157, 166-199, 277-299
	25	UNUSED						050-099, 150-155, 162-165, 275-276
	25	FM	W0264	204B	16		33-13-18	156-157, 166-199, 277-299
	26		W0264	066	22		28-22-21	ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
D08120J		AE0102/ /		RCPT-				ALL
	1		W5150	224	22		SPARE	050-099, 150-154, 275-299
	1		W5150	224	22		73-21-11	155-199
	2		W5150	220	22		SPARE	050-099, 150-154, 275-299
	2		W5150	220	22		73-21-11	155-199
	3		W5150	358	22		27-62-11	ALL
	4		W5150	361	22		27-62-11	ALL
	5		W5150	398	22		27-62-11	ALL
	6		W5150	398	22		27-62-11	ALL
	7		W5150	397	22		SPARE	ALL
	8	UNUSED						050-099, 275-299

HOOKUP LIST

D280T132

91-21-51

Section D08100

Page 9

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D08120J		AE0102/ /		RCPT- (continued)				ALL
	8		W5150	221	22		75-24-11	150-157
	8		W5150	221	22		SPARE	162-199
	9		W5150	321	22		78-34-11	ALL
	10		W5150	392	20		33-13-18	ALL
	11		W5150	219	22		28-22-21	ALL
	12		W5150	360	22		27-62-11	ALL
	13		W5150	396	22		31-51-42	ALL
	14		W5150	359	22		27-62-11	ALL
	15		W5150	223	22		SPARE	050-099, 150-154, 275-299
	15		W5150	223	22		73-21-11	155-199
	16	UNUSED						050-099, 275-299
	16		W5150	222	22		75-24-11	150-157
	16		W5150	222	22		SPARE	162-199
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20		W5150	401	22		32-42-12	ALL
	21		W5150	352	20		27-62-11	ALL
	22		W5150	320	22		78-34-11	ALL
	23		W5150	353	20		27-62-11	ALL
	24		W5150	322	22		78-34-11	ALL
	25		W5150	413	22		27-51-31	ALL
	26		W5150	414	22		27-51-31	ALL
	27		W5150	415	22		27-51-31	ALL
	28		W5150	416	22		27-51-31	ALL
	29		W5150	417	22		27-51-31	ALL
	30		W5150	418	22		27-58-31	ALL
	31		W5150	419	22		27-58-31	ALL
	32		W5150	420	22		27-58-31	ALL
	33		W5150	421	22		27-58-31	ALL
	34		W5150	422	22		27-58-31	ALL
	35		W5150	399	22		32-42-12	ALL
	36		W5150	399	22		32-42-12	ALL
	37		W5150	403	22		32-42-12	ALL
	38		W5150	400	22		32-42-12	ALL
	39		W5150	400	22		32-42-12	ALL
	40		W5150	402	22		32-42-12	ALL
	41		W5150	409	22		32-42-12	ALL

HOOKUP LIST

D280T132

91-21-51

Section D08100

Page 10

Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D08120P		AE0102/ /		PLUG-P10				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W0756	504	22		27-62-11	ALL
	4		W0756	505	22		27-62-11	ALL
	5		W0756	506	22		27-62-11	ALL
	6		W0756	507	22		27-62-11	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9		W0756	100	24		78-34-11	ALL
	10	DK	W0756	521	18		33-13-18	ALL
	11		W0756	195	22		28-22-21	ALL
	12		W0756	071	22		27-62-11	ALL
	13		W0756	509	24		31-51-42	ALL
	14		W0756	073	22		27-62-11	ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20		W0756	513	24		32-42-12	ALL
	21		W0756	068	20		27-62-11	ALL
	22		W0756	101	24		78-34-11	ALL
	23		W0756	069	20		27-62-11	ALL
	24		W0756	650	20		78-34-11	ALL
	25		W0756	222B	22		27-51-31	ALL
	26		W0756	222R	22		27-51-31	ALL
	27		W0756	303R	24		27-51-31	ALL
	28		W0756	303Y	24		27-51-31	ALL
	29		W0756	303B	24		27-51-31	ALL
	30		W0756	223B	24		27-58-31	ALL
	31		W0756	223R	24		27-58-31	ALL
	32		W0756	313R	24		27-58-31	ALL
	33		W0756	313Y	24		27-58-31	ALL
	34		W0756	313B	24		27-58-31	ALL
	35		W0756	514	24		32-42-12	ALL
	36		W0756	515	24		32-42-12	ALL
	37		W0756	516	24		32-42-12	ALL
	38		W0756	517	24		32-42-12	ALL
	39		W0756	518	24		32-42-12	ALL
	40		W0756	522	24		32-42-12	ALL

HOOKUP LIST

D280T132

91-21-51

Section D08100

Page 11

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D08120P		AE0102/ /		PLUG-P10 (continued)				ALL
	41		W0756	525	24		32-42-12	ALL
D08124J		0840/280/0000		RCPT-				050-099
	= 1		W0784	079	22		33-22-21	050-099
D08124P		0840/280/0000		PLUG-				050-099
	= 1		W1192	001	22		33-22-21	050-099
D08126J		0840/280/0000		RCPT-				050-099
	= 1		W1192	003	22		33-22-21	050-099
D08126P		0840/280/0000		PLUG-CLOSET LTS				050-099
	= 1		W0784	078	20		33-22-21	050-099
D08128J		AE0222/ /		RCPT-P6				ALL
	1	UNUSED						ALL
	2		W1026	041	20		24-51-42	ALL
	3	UNUSED						ALL
	4		W1026	043	20		24-51-42	ALL
	5	UNUSED						ALL
	6		W1026	045	20		24-51-42	ALL
	7	UNUSED						ALL
	8	DK	W1026	065	18		24-51-14	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14		W1026	060	12		24-51-14	ALL
	15	UNUSED						ALL
	16		W1026	040	12		24-51-42	ALL
	17	UNUSED						ALL
	18		W1026	057	12		24-51-14	ALL
	19	UNUSED						ALL
	20		W1026	042	12		24-51-42	ALL
	21	UNUSED						ALL
	22		W1026	070	12		24-51-14	ALL
	23	UNUSED						ALL
	24		W1026	044	12		24-51-42	ALL
	25	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D08100

Page 12

Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D08128P		AE0222/ /		PLUG-P6				ALL
	1	UNUSED						ALL
	2		W0276	014	20		24-51-42	ALL
	3	UNUSED						ALL
	4		W0276	015	20		24-51-42	ALL
	5	UNUSED						ALL
	6		W0276	016	20		24-51-42	ALL
	7	UNUSED						ALL
	8	DL	W0276	018	18		24-51-14	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14		W0276	017	12		24-51-14	ALL
	15	UNUSED						ALL
	16		W0276	011	12		24-51-42	ALL
	17	UNUSED						ALL
	18		W0276	020	12		24-51-14	ALL
	19	UNUSED						ALL
	20		W0276	012	12		24-51-42	ALL
	21	UNUSED						ALL
	22		W0276	019	12		24-51-14	ALL
	23	UNUSED						ALL
	24		W0276	013	12		24-51-42	ALL
	25	UNUSED						ALL
D08138		0654+014/270/L073		RCPT-				150-199, 275-278
D08138		0654+015/270/L073		RCPT-				280-299
	1		W0800	248R	22		23-31-15	150-199, 275-278
	1		W0800	220R	22		23-31-15	280-299
	2		W0800	248B	22		23-31-15	150-199, 275-278
	2		W0800	220B	22		23-31-15	280-299
	3		W0800	544	20		33-24-12	150-199, 275-299
	4		W0800	543	20		33-24-12	150-199, 275-299
	5		W0800	545	20		33-24-12	150-199, 275-299
	6		W0800	577R	22		23-31-15	150-199
	7		W0800	577B	22		23-31-15	150-199
	8	UNUSED						150-199
	9	UNUSED						150-199
	10	UNUSED						150-199

HOOKUP LIST

D280T132

91-21-51

Section D08100

Page 13

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D08138		0654+014/270/L073		RCPT- (continued)				150-199, 275-278
D08138		0654+015/270/L073		RCPT- (continued)				280-299
	11	UNUSED						150-199
	12	UNUSED						150-199
D08140		0654+044/270/L073		RCPT-				150-199, 275-299
	1		W0800	298R	22		23-31-15	150-199, 275-278
	1		W0800	222R	22		23-31-15	280-299
	2		W0800	298B	22		23-31-15	150-199, 275-278
	2		W0800	222B	22		23-31-15	280-299
	3		W0800	547	20		33-24-12	150-199, 275-299
	4		W0800	546	20		33-24-12	150-199, 275-299
	5		W0800	548	20		33-24-12	150-199, 275-299
	6		W0800	578R	22		23-31-15	150-199
	7		W0800	578B	22		23-31-15	150-199
	8	UNUSED						150-199
	9	UNUSED						150-199
	10	UNUSED						150-199
	11	UNUSED						150-199
	12	UNUSED						150-199
D08142		0654+087/270/L073		RCPT-				150-199
D08142		0654+071/270/L073		RCPT-				275-278
D08142		0654+073/270/L073		RCPT-				280-299
	1		W0800	502R	22		23-31-15	150-199, 275-278
	1		W0800	224R	22		23-31-15	280-299
	2		W0800	502B	22		23-31-15	150-199, 275-278
	2		W0800	224B	22		23-31-15	280-299
	3		W0800	550	20		33-24-12	150-199, 275-299
	4		W0800	549	20		33-24-12	150-199, 275-299
	5		W0800	551	20		33-24-12	150-199, 275-299
	6		W0800	580R	22		23-31-15	150-199
	7		W0800	580B	22		23-31-15	150-199
	8	UNUSED						150-199
	9	UNUSED						150-199
	10	UNUSED						150-199
	11	UNUSED						150-199
	12	UNUSED						150-199

HOOKUP LIST

D280T132

91-21-51

Section D08100

Page 14

Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D08144		0654+099/270/L073		RCPT-				275-278
D08144		0654+103/270/L073		RCPT-				280-299
	1		W0800	504R	22		23-31-15	275-278
	1		W0800	226R	22		23-31-15	280-299
	2		W0800	504B	22		23-31-15	275-278
	2		W0800	226B	22		23-31-15	280-299
	3		W0800	553	20		33-24-12	275-299
	4		W0800	552	20		33-24-12	275-299
	5		W0800	554	20		33-24-12	275-299
D08146		0771/270/L073		RCPT-				150-199, 275-299
	1		W0806	506R	22		23-31-15	150-199, 275-278
	1		W0806	208R	22		23-31-15	280-299
	2		W0806	506B	22		23-31-15	150-199, 275-278
	2		W0806	208B	22		23-31-15	280-299
	3		W0806	121	20		33-24-12	150-199, 275-299
	4		W0806	122	20		33-24-12	150-199, 275-299
	5		W0806	123	20		33-24-12	150-199, 275-299
	6		W0806	654R	22		23-31-15	150-199
	7		W0806	654B	22		23-31-15	150-199
	8	UNUSED						150-199
	9	UNUSED						150-199
	10	UNUSED						150-199
	11	UNUSED						150-199
	12	UNUSED						150-199
D08148		1197+022/270/L073		RCPT-				150-199, 275-299
	1		W0806	620R	22		23-31-15	150-199, 275-278
	1		W0806	240R	22		23-31-15	280-299
	2		W0806	620B	22		23-31-15	150-199, 275-278
	2		W0806	240B	22		23-31-15	280-299
	3		W0806	179	20		33-24-12	150-199, 275-299
	4		W0806	180	20		33-24-12	150-199, 275-299
	5		W0806	181	20		33-24-12	150-199, 275-299
	6		W0806	668R	22		23-31-15	150-199
	7		W0806	668B	22		23-31-15	150-199
	8	UNUSED						150-199
	9	UNUSED						150-199
	10	UNUSED						150-199
	11	UNUSED						150-199

HOOKUP LIST

D280T132

91-21-51

Section D08100

Page 15

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D08148		1197+022/270/L073		RCPT- (continued)				150-199, 275-299
	12	UNUSED						150-199
D08150		1197+050/270/L073		RCPT-				150-199, 275-299
	1		W0806	622R	22		23-31-15	150-199, 275-278
	1		W0806	242R	22		23-31-15	280-299
	2		W0806	622B	22		23-31-15	150-199, 275-278
	2		W0806	242B	22		23-31-15	280-299
	3		W0806	182	20		33-24-12	150-199, 275-299
	4		W0806	183	20		33-24-12	150-199, 275-299
	5		W0806	184	20		33-24-12	150-199, 275-299
	6		W0806	669R	22		23-31-15	150-199
	7		W0806	669B	22		23-31-15	150-199
	8	UNUSED						150-199
	9	UNUSED						150-199
	10	UNUSED						150-199
	11	UNUSED						150-199
	12	UNUSED						150-199
D08152		1197+080/270/L073		RCPT-				150-199, 275-299
	1		W0806	624R	22		23-31-15	150-199, 275-278
	1		W0806	244R	22		23-31-15	280-299
	2		W0806	624B	22		23-31-15	150-199, 275-278
	2		W0806	244B	22		23-31-15	280-299
	3		W0806	185	20		33-24-12	150-199, 275-299
	4		W0806	186	20		33-24-12	150-199, 275-299
	5		W0806	187	20		33-24-12	150-199, 275-299
	6		W0806	670R	22		23-31-15	150-199
	7		W0806	670B	22		23-31-15	150-199
	8	UNUSED						150-199
	9	UNUSED						150-199
	10	UNUSED						150-199
	11	UNUSED						150-199
	12	UNUSED						150-199
D08154		1197+110/270/L073		RCPT-				150-199, 275-299
	1		W0806	626R	22		23-31-15	150-199, 275-278
	1		W0806	246R	22		23-31-15	280-299
	2		W0806	626B	22		23-31-15	150-199, 275-278
	2		W0806	246B	22		23-31-15	280-299
	3		W0806	188	20		33-24-12	150-199, 275-299

HOOKUP LIST

D280T132

91-21-51

Section D08100

Page 16

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D08154		1197+110/270/L073		RCPT- (continued)				150-199, 275-299
	4		W0806	189	20		33-24-12	150-199, 275-299
	5		W0806	190	20		33-24-12	150-199, 275-299
	6		W0806	671R	22		23-31-15	150-199
	7		W0806	671B	22		23-31-15	150-199
	8	UNUSED						150-199
	9	UNUSED						150-199
	10	UNUSED						150-199
	11	UNUSED						150-199
	12	UNUSED						150-199
D08156		0654+014/270/R070		RCPT-				150-199, 275-278
D08156		0630/270/R074		RCPT-				280-299
	1		W0804	248R	22		23-31-17	150-199, 275-278
	1		W0804	220R	22		23-31-17	280-299
	2		W0804	248B	22		23-31-17	150-199, 275-278
	2		W0804	220B	22		23-31-17	280-299
	3		W0804	544	20		33-24-14	150-199, 275-299
	4		W0804	543	20		33-24-14	150-199, 275-299
	5		W0804	545	20		33-24-14	150-199, 275-299
	6		W0804	577R	22		23-31-17	150-199
	7		W0804	577B	22		23-31-17	150-199
	8	UNUSED						150-199
	9	UNUSED						150-199
	10	UNUSED						150-199
	11	UNUSED						150-199
	12	UNUSED						150-199
D08158		0654+044/270/R070		RCPT-				150-199, 275-278
D08158		0630/270/R074		RCPT-				280-299
	1		W0804	298R	22		23-31-17	150-199, 275-278
	1		W0804	222R	22		23-31-17	280-299
	2		W0804	298B	22		23-31-17	150-199, 275-278
	2		W0804	222B	22		23-31-17	280-299
	3		W0804	547	20		33-24-14	150-199, 275-299
	4		W0804	546	20		33-24-14	150-199, 275-299
	5		W0804	548	20		33-24-14	150-199, 275-299
	6		W0804	578R	22		23-31-17	150-199
	7		W0804	578B	22		23-31-17	150-199
	8	UNUSED						150-199
	9	UNUSED						150-199

HOOKUP LIST

D280T132

91-21-51

Section D08100

Page 17

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D08158		0654+044/270/R070		RCPT- (continued)				150-199, 275-278
D08158		0630/270/R074		RCPT- (continued)				280-299
	10	UNUSED						150-199
	11	UNUSED						150-199
	12	UNUSED						150-199
D08160		0654+087/270/R070		RCPT-				150-199
D08160		0654+071/270/R070		RCPT-				275-278
D08160		0654+071/270/R074		RCPT-				280-299
	1		W0804	602R	22		23-31-17	150-199, 275-278
	1		W0804	224R	22		23-31-17	280-299
	2		W0804	602B	22		23-31-17	150-199, 275-278
	2		W0804	224B	22		23-31-17	280-299
	3		W0804	550	20		33-24-14	150-199, 275-299
	4		W0804	549	20		33-24-14	150-199, 275-299
	5		W0804	551	20		33-24-14	150-199, 275-299
	6		W0804	580R	22		23-31-17	150-199
	7		W0804	580B	22		23-31-17	150-199
	8	UNUSED						150-199
	9	UNUSED						150-199
	10	UNUSED						150-199
	11	UNUSED						150-199
	12	UNUSED						150-199
D08162		0654+099/270/R070		RCPT-				275-278
D08162		0654+099/270/R074		RCPT-				280-299
	1		W0804	604R	22		23-31-17	275-278
	1		W0804	226R	22		23-31-17	280-299
	2		W0804	604B	22		23-31-17	275-278
	2		W0804	226B	22		23-31-17	280-299
	3		W0804	553	20		33-24-14	275-299
	4		W0804	552	20		33-24-14	275-299
	5		W0804	554	20		33-24-14	275-299
D08164		771/270/R070		RCPT-				150-199
D08164		770/270/R070		RCPT-				275-278
D08164		770/270/R073		RCPT-				280-299
	1		W0810	606R	22		23-31-17	150-199, 275-278
	1		W0810	208R	22		23-31-17	280-299
	2		W0810	606B	22		23-31-17	150-199, 275-278
	2		W0810	208B	22		23-31-17	280-299

HOOKUP LIST

D280T132

91-21-51

Section D08100

Page 18

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D08164		771/270/R070		RCPT- (continued)				150-199
D08164		770/270/R070		RCPT- (continued)				275-278
D08164		770/270/R073		RCPT- (continued)				280-299
	3		W0810	123	20		33-24-14	150-199, 275-299
	4		W0810	124	20		33-24-14	150-199, 275-299
	5		W0810	120	20		33-24-14	150-199, 275-299
	6		W0810	654R	22		23-31-17	150-199
	7		W0810	654B	22		23-31-17	150-199
	8	UNUSED						150-199
	9	UNUSED						150-199
	10	UNUSED						150-199
	11	UNUSED						150-199
	12	UNUSED						150-199
D08166		1197+022/270/R073		RCPT-				150-199, 275-299
	1		W0810	620R	22		23-31-17	150-199, 275-278
	1		W0810	240R	22		23-31-17	280-299
	2		W0810	620B	22		23-31-17	150-199, 275-278
	2		W0810	240B	22		23-31-17	280-299
	3		W0810	179	20		33-24-14	150-199, 275-299
	4		W0810	180	20		33-24-14	150-199, 275-299
	5		W0810	181	20		33-24-14	150-199, 275-299
	6		W0810	668R	22		23-31-17	150-199
	7		W0810	668B	22		23-31-17	150-199
	8	UNUSED						150-199
	9	UNUSED						150-199
	10	UNUSED						150-199
	11	UNUSED						150-199
	12	UNUSED						150-199
D08168		1197+050/270/R073		RCPT-				150-199, 275-299
	1		W0810	622R	22		23-31-17	150-199, 275-278
	1		W0810	242R	22		23-31-17	280-299
	2		W0810	622B	22		23-31-17	150-199, 275-278
	2		W0810	242B	22		23-31-17	280-299
	3		W0810	182	20		33-24-14	150-199, 275-299
	4		W0810	183	20		33-24-14	150-199, 275-299
	5		W0810	184	20		33-24-14	150-199, 275-299
	6		W0810	669R	22		23-31-17	150-199
	7		W0810	669B	22		23-31-17	150-199
	8	UNUSED						150-199

HOOKUP LIST

D280T132

91-21-51

Section D08100

Page 19

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D08168		1197+050/270/R073		RCPT- (continued)				150-199, 275-299
	9	UNUSED						150-199
	10	UNUSED						150-199
	11	UNUSED						150-199
	12	UNUSED						150-199
D08170		1197+080/270/R073		RCPT-				150-199, 275-299
	1		W0810	624R	22		23-31-17	150-199, 275-278
	1		W0810	244R	22		23-31-17	280-299
	2		W0810	624B	22		23-31-17	150-199, 275-278
	2		W0810	244B	22		23-31-17	280-299
	3		W0810	185	20		33-24-14	150-199, 275-299
	4		W0810	186	20		33-24-14	150-199, 275-299
	5		W0810	187	20		33-24-14	150-199, 275-299
	6		W0810	670R	22		23-31-17	150-199
	7		W0810	670B	22		23-31-17	150-199
	8	UNUSED						150-199
	9	UNUSED						150-199
	10	UNUSED						150-199
	11	UNUSED						150-199
	12	UNUSED						150-199
D08172		1197+110/270/R073		RCPT-				150-199, 275-299
	1		W0810	626R	22		23-31-17	150-199, 275-278
	1		W0810	246R	22		23-31-17	280-299
	2		W0810	626B	22		23-31-17	150-199, 275-278
	2		W0810	246B	22		23-31-17	280-299
	3		W0810	188	20		33-24-14	150-199, 275-299
	4		W0810	189	20		33-24-14	150-199, 275-299
	5		W0810	190	20		33-24-14	150-199, 275-299
	6		W0810	671R	22		23-31-17	150-199
	7		W0810	671B	22		23-31-17	150-199
	8	UNUSED						150-199
	9	UNUSED						150-199
	10	UNUSED						150-199
	11	UNUSED						150-199
	12	UNUSED						150-199
D08174		0654+114/280/L005		RCPT-				275-299
	1		W2062	203R	22		23-31-16	275
	1		W2062	202R	22		23-31-16	276-299

HOOKUP LIST
D280T132

91-21-51
Section D08100
Page 20
Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D08174		0654+114/280/L005		RCPT- (continued)				275-299
	2		W2062	203B	22		23-31-16	275
	2		W2062	202B	22		23-31-16	276-299
	3		W2062	003	20		33-24-13	275
	3		W2062	103	20		33-24-13	276-299
	4		W2062	004	20		33-24-13	275
	4		W2062	104	20		33-24-13	276-299
	5		W2062	005	20		33-24-13	275
	5		W2062	105	20		33-24-13	276-299
D08176		666/280/L005		RCPT-				275-299
	1		W2062	205R	22		23-31-16	275
	1		W2062	204R	22		23-31-16	276-299
	2		W2062	205B	22		23-31-16	275
	2		W2062	204B	22		23-31-16	276-299
	3		W2062	008	20		33-24-13	275
	3		W2062	113	20		33-24-13	276-299
	4		W2062	009	20		33-24-13	275
	4		W2062	114	20		33-24-13	276-299
	5		W2062	010	20		33-24-13	275
	5		W2062	115	20		33-24-13	276-299
D08178		0694/280/L005		RCPT-				150-199
D08178		694/280/L005		RCPT-				275-299
	1		W1280	204R	22		23-31-16	150-199
	1		W2062	207R	22		23-31-16	275
	1		W2062	206R	22		23-31-16	276-299
	2		W1280	204B	22		23-31-16	150-199
	2		W2062	207B	22		23-31-16	275
	2		W2062	206B	22		23-31-16	276-299
	3		W1280	016	20		33-24-13	150-199
	3		W2062	013	20		33-24-13	275
	3		W2062	123	20		33-24-13	276-299
	4		W1280	017	20		33-24-13	150-199
	4		W2062	014	20		33-24-13	275
	4		W2062	124	20		33-24-13	276-299
	5		W1280	015	20		33-24-13	150-199
	5		W2062	015	20		33-24-13	275
	5		W2062	125	20		33-24-13	276-299
	6		W1280	245R	22		23-31-16	150-199
	7		W1280	245B	22		23-31-16	150-199

HOOKUP LIST

D280T132

91-21-51

Section D08100

Page 21

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D08178		0694/280/L005		RCPT- (continued)				150-199
D08178		694/280/L005		RCPT- (continued)				275-299
	8	UNUSED						150-199
	9	UNUSED						150-199
	10	UNUSED						150-199
	11	UNUSED						150-199
	12	UNUSED						150-199
D08180		0716/280/L005		RCPT-				150-199
D08180		716/280/L005		RCPT-				275-299
	1		W1280	225R	22		23-31-16	150-199
	1		W2062	209R	22		23-31-16	275
	1		W2062	208R	22		23-31-16	276-299
	2		W1280	225B	22		23-31-16	150-199
	2		W2062	209B	22		23-31-16	275
	2		W2062	208B	22		23-31-16	276-299
	3		W1280	043	20		33-24-13	150-199
	3		W2062	018	20		33-24-13	275
	3		W2062	133	20		33-24-13	276-299
	4		W1280	044	20		33-24-13	150-199
	4		W2062	019	20		33-24-13	275
	4		W2062	134	20		33-24-13	276-299
	5		W1280	045	20		33-24-13	150-199
	5		W2062	020	20		33-24-13	275
	5		W2062	135	20		33-24-13	276-299
	6		W1280	246R	22		23-31-16	150-199
	7		W1280	246B	22		23-31-16	150-199
	8	UNUSED						150-199
	9	UNUSED						150-199
	10	UNUSED						150-199
	11	UNUSED						150-199
	12	UNUSED						150-199
D08182		0744/280/L005		RCPT-				150-199
D08182		744/280/L005		RCPT-				275-299
	1		W1280	236R	22		23-31-16	150-199
	1		W2062	211R	22		23-31-16	275
	1		W2062	210R	22		23-31-16	276-299
	2		W1280	236B	22		23-31-16	150-199
	2		W2062	211B	22		23-31-16	275
	2		W2062	210B	22		23-31-16	276-299

HOOKUP LIST

D280T132

91-21-51

Section D08100

Page 22

Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D08182		0744/280/L005		RCPT- (continued)				150-199
D08182		744/280/L005		RCPT- (continued)				275-299
	3		W1280	036	20		33-24-13	150-199
	3		W2062	023	20		33-24-13	275
	3		W2062	143	20		33-24-13	276-299
	4		W1280	035	20		33-24-13	150-199
	4		W2062	024	20		33-24-13	275
	4		W2062	144	20		33-24-13	276-299
	5		W1280	037	20		33-24-13	150-199
	5		W2062	025	20		33-24-13	275
	5		W2062	145	20		33-24-13	276-299
	6		W1280	247R	22		23-31-16	150-199
	7		W1280	247B	22		23-31-16	150-199
	8	UNUSED						150-199
	9	UNUSED						150-199
	10	UNUSED						150-199
	11	UNUSED						150-199
	12	UNUSED						150-199
D08184J		0768/280/L005		RCPT-				275-299
	1	DL	W1280	001	18		33-24-13	275
	1	DL	W1280	002	18		33-24-13	276-278
	1	DL	W1280	041	18		33-24-13	280-299
	2	DL	W1280	002	18		33-24-13	275
	2	DL	W1280	001	18		33-24-13	276-278
	2	DL	W1280	042	18		33-24-13	280-299
	3		W1280	201B	22		23-31-16	275-278
	3		W1280	217B	22		23-31-16	280-299
	4		W1280	201R	22		23-31-16	275-278
	4		W1280	217R	22		23-31-16	280-299
	5	UNUSED						275-299
D08184P		768/280/L005		PLUG-				275-299
	1	DK	W2062	026	18		33-24-13	275
	1	DK	W2062	007	18		33-24-13	276-299
	2	DK	W2062	027	18		33-24-13	275
	2	DK	W2062	008	18		33-24-13	276-299
	3		W2062	210B	22		23-31-16	275
	3		W2062	207B	22		23-31-16	276-299
	4		W2062	210R	22		23-31-16	275
	4		W2062	207R	22		23-31-16	276-299

HOOKUP LIST

D280T132

91-21-51

Section D08100

Page 23

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D08184P		768/280/L005		PLUG- (continued)				275-299
	5	UNUSED						275-299
D08186J		1197+092/280/L005		RCPT-				150-199, 275-299
	1	DL	W2064	001	18		33-24-13	150-199, 275-299
	2	DL	W2064	002	18		33-24-13	150-199, 275-299
	3		W2064	210B	22		23-31-16	150-199, 275
	3		W2064	201B	22		23-31-16	276-299
	4		W2064	210R	22		23-31-16	150-199, 275
	4		W2064	201R	22		23-31-16	276-299
	5		W2064	230B	22		23-31-16	150-199
	5	UNUSED						275-299
	6		W2064	230R	22		23-31-16	150-199
	7	UNUSED						150-199
	8	UNUSED						150-199
	9	UNUSED						150-199
	10	UNUSED						150-199
	11	UNUSED						150-199
	12	UNUSED						150-199
D08186P		1197+092/280/L005		PLUG-				150-199, 275-299
	1	DK	W1148	026	18		33-24-13	150-199, 275
	1	DK	W1148	007	18		33-24-13	276-299
	2	DK	W1148	027	18		33-24-13	150-199, 275
	2	DK	W1148	008	18		33-24-13	276-299
	3		W1148	202B	22		23-31-16	150-199, 275
	3		W1148	207B	22		23-31-16	276-299
	4		W1148	202R	22		23-31-16	150-199, 275
	4		W1148	207R	22		23-31-16	276-299
	5		W1148	222B	22		23-31-16	150-199
	5	UNUSED						275-299
	6		W1148	222R	22		23-31-16	150-199
	7	UNUSED						150-199
	8	UNUSED						150-199
	9	UNUSED						150-199
	10	UNUSED						150-199
	11	UNUSED						150-199
	12	UNUSED						150-199
D08188		1197+092/280/L005		RCPT-				150-199, 275-299
	1		W2064	211R	22		23-31-16	150-199, 275

HOOKUP LIST
D280T132

91-21-51
Section D08100
Page 24
Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D08188		1197+092/280/L005		RCPT- (continued)				150-199, 275-299
	1		W2064	202R	22		23-31-16	276-299
	2		W2064	211B	22		23-31-16	150-199, 275
	2		W2064	202B	22		23-31-16	276-299
	3		W2064	003	20		33-24-13	150-199, 275
	3		W2064	103	20		33-24-13	276-299
	4		W2064	004	20		33-24-13	150-199, 275
	4		W2064	104	20		33-24-13	276-299
	5		W2064	005	20		33-24-13	150-199, 275
	5		W2064	105	20		33-24-13	276-299
	6		W2064	231R	22		23-31-16	150-199
	7		W2064	231B	22		23-31-16	150-199
	8	UNUSED						150-199
	9	UNUSED						150-199
	10	UNUSED						150-199
	11	UNUSED						150-199
	12	UNUSED						150-199
D08190		1197+116/280/L005		RCPT-				150-199, 275-299
	1		W2064	209R	22		23-31-16	150-199, 275
	1		W2064	204R	22		23-31-16	276-299
	2		W2064	209B	22		23-31-16	150-199, 275
	2		W2064	204B	22		23-31-16	276-299
	3		W2064	008	20		33-24-13	150-199, 275
	3		W2064	113	20		33-24-13	276-299
	4		W2064	009	20		33-24-13	150-199, 275
	4		W2064	114	20		33-24-13	276-299
	5		W2064	010	20		33-24-13	150-199, 275
	5		W2064	115	20		33-24-13	276-299
	6		W2064	229R	22		23-31-16	150-199
	7		W2064	229B	22		23-31-16	150-199
	8	UNUSED						150-199
	9	UNUSED						150-199
	10	UNUSED						150-199
	11	UNUSED						150-199
	12	UNUSED						150-199
D08192		1212/280/L005		RCPT-				150-199, 275-299
	1		W2064	207R	22		23-31-16	150-199, 275
	1		W2064	206R	22		23-31-16	276-299
	2		W2064	207B	22		23-31-16	150-199, 275

HOOKUP LIST

D280T132

91-21-51

Section D08100

Page 25

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D08192		1212/280/L005		RCPT- (continued)				150-199, 275-299
	2		W2064	206B	22		23-31-16	276-299
	3		W2064	013	20		33-24-13	150-199, 275
	3		W2064	123	20		33-24-13	276-299
	4		W2064	014	20		33-24-13	150-199, 275
	4		W2064	124	20		33-24-13	276-299
	5		W2064	015	20		33-24-13	150-199, 275
	5		W2064	125	20		33-24-13	276-299
	6		W2064	227R	22		23-31-16	150-199
	7		W2064	227B	22		23-31-16	150-199
	8	UNUSED						150-199
	9	UNUSED						150-199
	10	UNUSED						150-199
	11	UNUSED						150-199
	12	UNUSED						150-199
D08194		1238/280/L005		RCPT-				150-199, 275-299
	1		W2064	205R	22		23-31-16	150-199, 275
	1		W2064	208R	22		23-31-16	276-299
	2		W2064	205B	22		23-31-16	150-199, 275
	2		W2064	208B	22		23-31-16	276-299
	3		W2064	018	20		33-24-13	150-199, 275
	3		W2064	133	20		33-24-13	276-299
	4		W2064	019	20		33-24-13	150-199, 275
	4		W2064	134	20		33-24-13	276-299
	5		W2064	020	20		33-24-13	150-199, 275
	5		W2064	135	20		33-24-13	276-299
	6		W2064	225R	22		23-31-16	150-199
	7		W2064	225B	22		23-31-16	150-199
	8	UNUSED						150-199
	9	UNUSED						150-199
	10	UNUSED						150-199
	11	UNUSED						150-199
	12	UNUSED						150-199
D08196		1265/280/L005		RCPT-				150-199, 275-299
	1		W2064	203R	22		23-31-16	150-199, 275
	1		W2064	210R	22		23-31-16	276-299
	2		W2064	203B	22		23-31-16	150-199, 275
	2		W2064	210B	22		23-31-16	276-299
	3		W2064	023	20		33-24-13	150-199, 275

HOOKUP LIST

D280T132

91-21-51

Section D08100

Page 26

Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D08196		1265/280/L005		RCPT- (continued)				150-199, 275-299
	3		W2064	143	20		33-24-13	276-299
	4		W2064	024	20		33-24-13	150-199, 275
	4		W2064	144	20		33-24-13	276-299
	5		W2064	025	20		33-24-13	150-199, 275
	5		W2064	145	20		33-24-13	276-299
	6		W2064	223R	22		23-31-16	150-199
	7		W2064	223B	22		23-31-16	150-199
	8	UNUSED						150-199
	9	UNUSED						150-199
	10	UNUSED						150-199
	11	UNUSED						150-199
	12	UNUSED						150-199
D08198J		0768/280/L005		RECP-				275-299
	1	FN	W1282	001	14		35-21-14	275-278
	1	FN	W1282	041	14		35-21-14	280-299
	2	UNUSED						275-299
	3	UNUSED						275-299
D08198P		768/280/L005		PLUG-				275-299
	1	FO	W2066	016	14		35-21-14	275
	1	FO	W2066	007	14		35-21-14	276-299
	2	UNUSED						275-299
	3	UNUSED						275-299

HOOKUP LIST
D280T132

91-21-51
Section D08100
Page 27 End
Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D08200J		1197+092/280/L005		RCPT-				150-199, 275-299
	1	FN	W2068	001	14		35-21-14	150-199, 275-299
	2	UNUSED						150-199, 275-299
	3	UNUSED						150-199, 275-299
D08200P		1197+092/280/L005		PLUG-				150-199, 275-299
	1	FO	W1170	016	14		35-21-14	150-199, 275
	1	FO	W1170	007	14		35-21-14	276-299
	2	UNUSED						150-199, 275-299
	3	UNUSED						150-199, 275-299
D08202J		AE0307/ /		RCPT-E1-2				150-199, 275-299
	1		W0908	201R	22		32-71-11	150-199, 275-299
	2		W0908	201B	22		32-71-11	150-199, 275-299
	3		W0908	202R	22		32-71-11	150-199, 275-299
	4		W0908	202B	22		32-71-11	150-199, 275-299
	5	UNUSED						150-199, 275-299
	6	UNUSED						150-199, 275-299
	7	UNUSED						150-199, 275-299
	8	UNUSED						150-199, 275-299
	9	UNUSED						150-199, 275-299
	10	UNUSED						150-199, 275-299
	11	UNUSED						150-199, 275-299
	12	UNUSED						150-199, 275-299
D08202P		AE0307/ /		PLUG E1-2				150-199, 275-299
	1		W1092	700R	24		32-71-11	150-199, 275-299
	2		W1092	700B	24		32-71-11	150-199, 275-299
	3		W1092	706R	24		32-71-11	150-199, 275-299
	4		W1092	706B	24		32-71-11	150-199, 275-299
	5	UNUSED						150-199, 275-299
	6	UNUSED						150-199, 275-299
	7	UNUSED						150-199, 275-299
	8	UNUSED						150-199, 275-299
	9	UNUSED						150-199, 275-299
	10	UNUSED						150-199, 275-299
	11	UNUSED						150-199, 275-299
	12	UNUSED						150-199, 275-299
D08204J		AP1501/ /		RCPT TAIL-DISC				150-199, 275-299
	1		W0910	201R	20		32-71-11	150-199, 275-299

HOOKUP LIST
D280T132

91-21-51
Section D08200
Page 1
Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D08204J		AP1501/ /		RCPT TAIL-DISC (continued)				150-199, 275-299
	2		W0910	201B	20		32-71-11	150-199, 275-299
	3		W0910	202R	20		32-71-11	150-199, 275-299
	4		W0910	202B	20		32-71-11	150-199, 275-299
	5	UNUSED						150-199, 275-299
	6	UNUSED						150-199, 275-299
	7	UNUSED						150-199, 275-299
	8	UNUSED						150-199, 275-299
	9	UNUSED						150-199, 275-299
	10	UNUSED						150-199, 275-299
	11	UNUSED						150-199, 275-299
	12	UNUSED						150-199, 275-299
D08204P		AP1501/ /		PLUG TAIL-DISC				150-199, 275-299
	1		W0908	201R	22		32-71-11	150-199, 275-299
	2		W0908	201B	22		32-71-11	150-199, 275-299
	3		W0908	202R	22		32-71-11	150-199, 275-299
	4		W0908	202B	22		32-71-11	150-199, 275-299
	5	UNUSED						150-199, 275-299
	6	UNUSED						150-199, 275-299
	7	UNUSED						150-199, 275-299
	8	UNUSED						150-199, 275-299
	9	UNUSED						150-199, 275-299
	10	UNUSED						150-199, 275-299
	11	UNUSED						150-199, 275-299
	12	UNUSED						150-199, 275-299
D08268J		AL1003/ /		RCPT-				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8		W0602	243B	20		32-45-13	ALL
	9		W0602	243R	20		32-45-13	ALL
	10		W0602	243Z			32-45-13	ALL
	11		W0602	244B	20		32-45-13	ALL
	12		W0602	244R	20		32-45-13	ALL
	13		W0602	244Z			32-45-13	ALL

HOOKUP LIST

D280T132

91-21-51

Section D08200

Page 2

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D08268J		AL1003/ /		RCPT- (continued)				ALL
	14	UNUSED						ALL
D08268P		AL1003/ /		PLUG-				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8		W0690	207B	20		32-45-13	ALL
	9		W0690	207R	20		32-45-13	ALL
	10		W0690	207Z			32-45-13	ALL
	11		W0690	208B	20		32-45-13	ALL
	12		W0690	208R	20		32-45-13	ALL
	13		W0690	208Z			32-45-13	ALL
	14	UNUSED						ALL
D08272J		AL1004/ /		RCPT-				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8		W0628	241B	20		32-45-14	ALL
	9		W0628	241R	20		32-45-14	ALL
	10		W0628	241Z			32-45-14	ALL
	11		W0628	242B	20		32-45-14	ALL
	12		W0628	242R	20		32-45-14	ALL
	13		W0628	242Z			32-45-14	ALL
	14	UNUSED						ALL
D08272P		AL1004/ /		PLUG-				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D08200
Page 3
Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D08272P		AL1004/ /		PLUG- (continued)				ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8		W0928	207B	20		32-45-14	ALL
	9		W0928	207R	20		32-45-14	ALL
	10		W0928	207Z			32-45-14	ALL
	11		W0928	208B	20		32-45-14	ALL
	12		W0928	208R	20		32-45-14	ALL
	13		W0928	208Z			32-45-14	ALL
	14	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D08200
Page 4 End
Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D08306J		L0163/ /FS		RCPT-				ALL
	1		W1300	FRB			28-21-12	ALL
	2		W1300	001Z			28-21-12	ALL
	3		W1300	001	20		28-21-12	ALL
	4	UNUSED						ALL
	5		W1300	FRA			28-21-12	ALL
	6		W1300	002	20		28-21-12	ALL
	7		W1300	FRC			28-21-12	ALL
			W1300	002Z			28-21-12	ALL
			W1300	FRA			28-21-12	ALL
			W1300	FRB			28-21-12	ALL
			W1300	FRC			28-21-12	ALL
D08306P		L0163/ /FS		PLUG				ALL
	1		W0420	FRE			28-21-12	ALL
	2		W0420	017Z			28-21-12	ALL
	3		W0420	017	20		28-21-12	ALL
	4	UNUSED						ALL
	5		W0420	FRD			28-21-12	ALL
	6		W0420	018	20		28-21-12	ALL
	7		W0420	FRF			28-21-12	ALL
			W0420	018Z			28-21-12	ALL
			W0420	FRD			28-21-12	ALL
			W0420	FRE			28-21-12	ALL
			W0420	FRF			28-21-12	ALL
D08308J		R0163/ /FS		RCPT-				ALL
	1		W1302	FRB			28-21-12	ALL
	2		W1302	001Z			28-21-12	ALL
	3		W1302	001	20		28-21-12	ALL
	4	UNUSED						ALL
	5		W1302	FRC			28-21-12	ALL
	6		W1302	002	20		28-21-12	ALL
	7		W1302	FRA			28-21-12	ALL
			W1302	002Z			28-21-12	ALL
			W1302	FRA			28-21-12	ALL
			W1302	FRB			28-21-12	ALL
			W1302	FRC			28-21-12	ALL
D08308P		R0163/ /FS		PLUG				ALL
	1		W0422	FRE			28-21-12	ALL

HOOKUP LIST
D280T132

91-21-51
Section D08300
Page 1
Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D08308P		R0163/ /FS		PLUG (continued)				ALL
	2		W0422	017Z			28-21-12	ALL
	3		W0422	017	20		28-21-12	ALL
	4	UNUSED						ALL
	5		W0422	FRD			28-21-12	ALL
	6		W0422	018	20		28-21-12	ALL
	7		W0422	FRF			28-21-12	ALL
			W0422	018Z			28-21-12	ALL
			W0422	FRD			28-21-12	ALL
			W0422	FRE			28-21-12	ALL
			W0422	FRF			28-21-12	ALL
D08312		NR152/080/		PLUG-				ALL
	1		W3506	472R	16		76-11-11	ALL
	2	UNUSED						ALL
	3		W3506	460	18		76-11-11	ALL
	4		W3506	455R	16		76-11-11	ALL
	5		W3506	463R	16		76-11-11	ALL
	6		W3506	454R	16		76-11-11	ALL
	7	UNUSED						ALL
	8		W3506	456R	16		76-11-11	ALL
	9		W3506	462R	16		76-11-11	ALL
	10		W3506	457R	16		76-11-11	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13		W3506	461R	16		76-11-11	ALL
	14		W3506	458R	16		76-11-11	ALL
D08314		NL144/121/		PLUG-				ALL
	1		W3530	005	20		75-23-11	ALL
	2		W3530	007	20		75-23-11	ALL
	3	UNUSED						ALL
	4		W3530	012	20		75-23-11	ALL
	5		W3530	006	18		75-23-11	ALL
	6		W3530	013	16		75-23-11	ALL
	7		W3530	011	18		75-23-11	ALL
	8		W3530	008	20		75-23-11	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D08300

Page 2

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D08316J		NR095/150/		RCPT-FANCASE/INLET COWL				ALL
	1		W3542	102	16		30-34-11	ALL
	2		W3542	101	16		30-34-11	ALL
	3	UNUSED						ALL
	= CC	G7	W3542	101Z			30-34-11	ALL
	= CC	G7	W3542	102Z			30-34-11	ALL
D08316P		NR100/150/		PLUG-ENGINE				ALL
	1		W3504	001	16		30-34-11	ALL
	2		W3504	004	16		30-34-11	ALL
	3	UNUSED						ALL
	= CC	G3	W3504	001Z			30-34-11	ALL
D08320J		AW0310/POS/02		RCPT-STRUT/FANCASE RH				ALL
	1		W0396	001	18		30-34-11	ALL
	2		W0396	205R	20		77-12-11	ALL
	3		W0396	205B	20		77-12-11	ALL
	4		W0396	003	16		73-21-11	ALL
	5		W0396	203R	20		73-21-14	ALL
	6		W0396	203B	20		73-21-14	ALL
	7		W0396	111	20		73-21-11	ALL
	8		W0396	014	20		73-21-11	ALL
	9		W0396	103	20		73-21-14	ALL
	10		W0396	201R	20		31-35-14	050-099, 150-199, 275-276, 278-299
	10		W0372	207R	20		31-35-14	277
	11		W0396	201B	20		31-35-14	050-099, 150-199, 275-276, 278-299
	11		W0372	207B	20		31-35-14	277
	12		W0396	230B	20		73-21-14	050-099, 153
	12		W0396	010	18		73-21-14	150-152, 154-199, 275-299
	13		W0396	002	16		73-21-20	ALL
	14		W0396	230R	20		73-21-14	050-099, 153
	14		W0396	010	18		73-21-14	150-152, 154-199, 275-299
	15		W0396	202B	20		73-21-13	ALL
	16		W0396	202R	20		73-21-13	ALL
	17		W0396	215R	20		73-21-12	ALL
	18		W0396	107	20		73-21-19	ALL
	19		W0396	132	20		78-36-11	ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D08300

Page 3

Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D08320J		AW0310/POS/02		RCPT-STRUT/FANCASE RH (continued)				ALL
	23		W0396	204R	20		73-21-14	ALL
	24		W0396	204B	20		73-21-14	ALL
	25		W0396	301Y	20		73-21-13	ALL
	26		W0396	301R	20		73-21-13	ALL
	27		W0396	301B	20		73-21-13	ALL
	28		W0396	215B	20		73-21-17	ALL
	29		W0396	224R	20		78-36-11	ALL
	30		W0396	224B	20		78-36-11	ALL
	31		W0396	102	20		78-36-11	ALL
	32		W0396	210R	20		73-21-14	ALL
	33		W0396	210B	20		73-21-14	ALL
	34		W0396	101	20		78-36-11	ALL
	35		W0396	025	16		SPARE	ALL
	36		W0396	222R	20		73-21-14	ALL
	37		W0396	222B	20		73-21-14	ALL
	38	UNUSED						ALL
	39		W0396	225R	20		73-21-11	ALL
	40		W0396	225B	20		73-21-11	ALL
	41		W0396	010	20		73-21-14	050-099, 153
	41	UNUSED						150-152, 154-199, 275-299
	42		W0396	100	20		73-21-17	ALL
	= CC	M	W0396	201Z			31-35-14	050-099, 150-199, 275-276, 278-299
	= CC	M	W0396	002Z			73-21-20	ALL
	= CC	M	W0396	003Z			73-21-11	ALL
	= CC	M	W0396	014Z			73-21-11	ALL
	= CC	M	W0396	025Z			SPARE	ALL
	= CC	M	W0396	100Z			73-21-17	ALL
	= CC	M	W0396	101Z			78-36-11	ALL
	= CC	M	W0396	102Z			78-36-11	ALL
	= CC	M	W0396	103Z			73-21-14	ALL
	= CC	M	W0396	107Z			73-21-19	ALL
	= CC	M	W0396	111Z			73-21-11	ALL
	= CC	M	W0396	132Z			78-36-11	ALL
	= CC	M	W0396	202Z			73-21-13	ALL
	= CC	M	W0396	203Z			73-21-14	ALL
	= CC	M	W0396	204Z			73-21-14	ALL
	= CC	M	W0396	205Z			77-12-11	ALL
	= CC	M	W0396	210Z			73-21-14	ALL
	= CC	M	W0396	222Z			73-21-14	ALL
	= CC	M	W0396	224Z			78-36-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D08300

Page 4

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D08320J		AW0310/POS/02		RCPT-STRUT/FANCASE RH (continued)				ALL
	= CC	M	W0396	225Z			73-21-11	ALL
	= CC	M	W0396	301Z			73-21-13	ALL
	= CC	M	W0396	010Z			73-21-14	050-099, 153
	= CC	M	W0396	230Z			73-21-14	050-099, 153
	= CC	M	W0396	215Z			73-21-12	050-099, 155-199, 277-299
	= CC	M	W0396	215Z			73-21-17	150-154, 275-276
	= CC	M	W0372	207Z			31-35-14	277
D08320P		AW0310/ /		PLUG-STRUT/FANCASE RH				ALL
	1		W3504	001	16		30-34-11	ALL
	2		W3504	201R	20		77-12-11	ALL
	3		W3504	201B	20		77-12-11	ALL
	4		W3504	003	16		73-21-11	ALL
	5		W3504	205R	20		73-21-14	ALL
	6		W3504	205B	20		73-21-14	ALL
	7		W3504	040	20		73-21-11	ALL
	8		W3504	027	20		73-21-11	ALL
	9		W3504	101	20		73-21-14	ALL
	10		W3504	216R	20		31-35-14	ALL
	11		W3504	216B	20		31-35-14	ALL
	12		W3504	401B	20		73-21-14	ALL
	13		W3504	002	16		73-21-20	ALL
	14		W3504	028	20		73-21-14	ALL
	15		W3504	203B	20		73-21-13	ALL
	16		W3504	203R	20		73-21-13	ALL
	17		W3504	211R	20		73-21-12	ALL
	18		W3504	114	20		73-21-19	ALL
	19		W3504	026	20		78-36-11	ALL
	20		W3504	401R	20		73-21-14	ALL
	21		W3504	401Y	20		73-21-14	ALL
	22		W3504	401G	20		73-21-14	ALL
	23		W3504	207R	20		73-21-14	ALL
	24		W3504	207B	20		73-21-14	ALL
	25		W3504	301Y	20		73-21-13	ALL
	26		W3504	301R	20		73-21-13	ALL
	27		W3504	301B	20		73-21-13	ALL
	28		W3504	211B	20		73-21-17	ALL
	29		W3504	233R	20		78-36-11	ALL
	30		W3504	233B	20		78-36-11	ALL
	31		W3504	231R	20		78-36-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D08300

Page 5

Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D08320P		AW0310/ /		PLUG-STRUT/FANCASE RH (continued)				ALL
	32		W3504	212R	20		73-21-14	ALL
	33		W3504	212B	20		73-21-14	ALL
	34		W3504	231B	20		78-36-11	ALL
	35	UNUSED						ALL
	36		W3504	208R	20		73-21-14	ALL
	37		W3504	208B	20		73-21-14	ALL
	38	UNUSED						ALL
	39		W3504	209R	20		73-21-11	ALL
	40		W3504	209B	20		73-21-11	ALL
	41		W3504	213R	20		73-21-17	ALL
	42		W3504	213B	20		73-21-17	ALL
	= CC	G3	W3504	001Z			30-34-11	ALL
	= CC	G3	W3504	002Z			73-21-20	ALL
	= CC	G3	W3504	003Z			73-21-11	ALL
	= CC	G3	W3504	026Z			78-36-11	ALL
	= CC	G3	W3504	027Z			73-21-11	ALL
	= CC	G3	W3504	028Z			73-21-14	ALL
	= CC	G3	W3504	040Z			73-21-11	ALL
	= CC	G3	W3504	101Z			73-21-14	ALL
	= CC	G3	W3504	114Z			73-21-19	ALL
	= CC	G3	W3504	201Z			77-12-11	ALL
	= CC	G3	W3504	203Z			73-21-13	ALL
	= CC	G3	W3504	205Z			73-21-14	ALL
	= CC	G3	W3504	207Z			73-21-14	ALL
	= CC	G3	W3504	208Z			73-21-14	ALL
	= CC	G3	W3504	209Z			73-21-11	ALL
	= CC	G3	W3504	211Z			73-21-12	ALL
	= CC	G3	W3504	212Z			73-21-14	ALL
	= CC	G3	W3504	213Z			73-21-17	ALL
	= CC	G3	W3504	216Z			31-35-14	ALL
	= CC	G3	W3504	231Z			78-36-11	ALL
	= CC	G3	W3504	233Z			78-36-11	ALL
	= CC	G3	W3504	301Z			73-21-13	ALL
	= CC	G3	W3504	401Z			73-21-14	ALL
D08328J		NR095/150/		RCPT FANCASE/INLET COWL M/W VENDOR				ALL
	1		W3544	301Y	20		73-21-12	ALL
	2		W3544	301R	20		73-21-12	ALL
	3		W3544	301B	20		73-21-12	ALL
	= CC	G7	W3544	301Z			73-21-12	ALL

HOOKUP LIST

D280T132

91-21-51

Section D08300

Page 6

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D08330P		NR100/150/		PLUG-ENG (PW4000)				050-099, 155-199, 277-299
D08330P		NR100/150/		PLUG-ENG VENDOR BRKT LOWER				150-154, 275-276
	1		W3504	209R	20		73-21-11	ALL
	2		W3504	209B	20		73-21-11	ALL
	3		W3504	002	16		73-21-20	ALL
	4		W3504	029	16		73-21-20	ALL
	5		W3504	003	16		73-21-11	ALL
	6		W3504	005	16		73-21-11	050-099, 155-199, 277-299
	6		W3504	030	16		73-21-11	150-154, 275-276
	7		W3504	027	20		73-21-11	ALL
	8		W3504	026	20		78-36-11	ALL
	9		W3504	024	16		73-21-11	ALL
	10		W3504	216R	20		31-35-14	ALL
	11		W3504	216B	20		31-35-14	ALL
	12		W3504	217R	20		SPARE	ALL
	13		W3504	217B	20		SPARE	ALL
	14		W3504	231R	20		78-36-11	ALL
	15		W3504	231B	20		78-36-11	ALL
	16		W3504	233B	20		78-36-11	ALL
	17		W3504	233R	20		78-36-11	ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	= CC	G3	W3504	002Z			73-21-20	ALL
	= CC	G3	W3504	003Z			73-21-11	ALL
	= CC	G3	W3504	026Z			78-36-11	ALL
	= CC	G3	W3504	027Z			73-21-11	ALL
	= CC	G3	W3504	209Z			73-21-11	ALL
	= CC	G3	W3504	216Z			31-35-14	ALL
	= CC	G3	W3504	217Z			SPARE	ALL
	= CC	G3	W3504	231Z			78-36-11	ALL
	= CC	G3	W3504	233Z			78-36-11	ALL
D08332J		NR095/150/		RCPT-FANCASE/INLET COWL M/W VENDOR				ALL
	1		W3542	301R	20		73-21-12	ALL
	2		W3542	301B	20		73-21-12	ALL
	3		W3542	301Y	20		73-21-12	ALL
	= CC	G7	W3542	301Z			73-21-12	ALL
D08334J		AW0310/POS/02		RCPT STRUT FANCASE RH				ALL
	1		W0392	001	18		30-34-21	ALL
	2		W0392	205R	20		77-12-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D08300

Page 7

Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D08334J		AW0310/POS/02		RCPT STRUT FANCASE RH (continued)				ALL
	3		W0392	205B	20		77-12-11	ALL
	4		W0392	003	16		73-21-11	ALL
	5		W0392	203R	20		73-21-14	ALL
	6		W0392	203B	20		73-21-14	ALL
	7		W0392	111	20		73-21-11	ALL
	8		W0392	014	20		73-21-11	ALL
	9		W0392	103	20		73-21-14	ALL
	10		W0392	201R	20		31-35-15	050-099, 150-199, 275-276, 278-299
	10		W0382	207R	20		31-35-15	277
	11		W0392	201B	20		31-35-15	050-099, 150-199, 275-276, 278-299
	11		W0382	207B	20		31-35-15	277
	12		W0392	242B	20		73-21-14	ALL
	13		W0392	002	16		73-21-20	ALL
	14		W0392	306R	20		73-21-14	050-099, 153
	14		W0392	243R	20		73-21-14	150-152, 154-199, 275-299
	15		W0392	202B	20		73-21-13	ALL
	16		W0392	202R	20		73-21-13	ALL
	17		W0392	215R	20		73-21-12	ALL
	18		W0392	107	20		73-21-19	ALL
	19		W0392	132	20		78-36-21	ALL
	20		W0392	306B	20		73-21-14	050-099, 153
	20		W0392	243B	20		73-21-14	150-152, 154-199, 275-299
	21		W0392	242R	20		73-21-14	ALL
	22	UNUSED						ALL
	23		W0392	204R	20		73-21-14	ALL
	24		W0392	204B	20		73-21-14	ALL
	25		W0392	301Y	20		73-21-13	ALL
	26		W0392	301R	20		73-21-13	ALL
	27		W0392	301B	20		73-21-13	ALL
	28		W0392	215B	20		73-21-17	ALL
	29		W0392	224R	20		78-36-21	ALL
	30		W0392	224B	20		78-36-21	ALL
	31		W0392	102	20		78-36-21	ALL
	32		W0392	210R	20		73-21-14	ALL
	33		W0392	210B	20		73-21-14	ALL
	34		W0392	101	20		78-36-21	ALL
	35		W0392	025	20		SPARE	ALL
	36		W0392	222R	20		73-21-14	ALL
	37		W0392	222B	20		73-21-14	ALL
	38	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D08300

Page 8

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D08334J		AW0310/POS/02		RCPT STRUT FANCASE RH (continued)				ALL
	39		W0392	225R	20		73-21-11	ALL
	40		W0392	225B	20		73-21-11	ALL
	41		W0392	306Y	20		73-21-14	050-099, 153
	41	UNUSED						150-152, 154-199, 275-299
	42		W0392	100	20		73-21-17	ALL
	= CC	M	W0392	201Z			31-35-15	050-099, 150-199, 275-276, 278-299
	= CC	M	W0392	002Z			73-21-20	ALL
	= CC	M	W0392	003Z			73-21-11	ALL
	= CC	M	W0392	014Z			73-21-11	ALL
	= CC	M	W0392	025Z			SPARE	ALL
	= CC	M	W0392	100Z			73-21-17	ALL
	= CC	M	W0392	101Z			78-36-21	ALL
	= CC	M	W0392	102Z			78-36-21	ALL
	= CC	M	W0392	103Z			73-21-14	ALL
	= CC	M	W0392	107Z			73-21-19	ALL
	= CC	M	W0392	111Z			73-21-11	ALL
	= CC	M	W0392	132Z			78-36-21	ALL
	= CC	M	W0392	202Z			73-21-13	ALL
	= CC	M	W0392	203Z			73-21-14	ALL
	= CC	M	W0392	204Z			73-21-14	ALL
	= CC	M	W0392	205Z			77-12-11	ALL
	= CC	M	W0392	210Z			73-21-14	ALL
	= CC	M	W0392	222Z			73-21-14	ALL
	= CC	M	W0392	224Z			78-36-21	ALL
	= CC	M	W0392	225Z			73-21-11	ALL
	= CC	M	W0392	242Z			73-21-14	ALL
	= CC	M	W0392	301Z			73-21-13	ALL
	= CC	M	W0392	306Z			73-21-14	050-099, 153
	= CC	M	W0392	215Z			73-21-12	050-099, 155-199, 277-299
	= CC	M	W0392	243Z			73-21-14	150-152, 154-199, 275-299
	= CC	M	W0392	215Z			73-21-17	150-154, 275-276
	= CC	M	W0382	207Z			31-35-15	277
D08336P		NL113/147/		PLUG-FANCASE L/H				ALL
	1		W3504	01TW	20		77-31-11	050-099, 155-199, 277-299
	1		W3504	218W	20		77-31-11	150-154, 275-276
	2		W3504	01TR	20		77-31-11	050-099, 155-199, 277-299
	2		W3504	218R	20		77-31-11	150-154, 275-276
	3		W3504	01TI			77-31-11	050-099, 155-199, 277-299
	3		W3504	218Z			77-31-11	150-154, 275-276

HOOKUP LIST

D280T132

91-21-51

Section D08300

Page 9

Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D08336P		NL113/147/		PLUG-FANCASE L/H (continued)				ALL
	4		W3504	033	16		73-21-13	050-099, 155-199, 277-299
	4		W3504	033	16		73-31-11	150-154, 275-276
	5		W3504	034	16		73-21-13	050-099, 155-199, 277-299
	5		W3504	034	16		73-31-11	150-154, 275-276
	6	UNUSED						ALL
	7	UNUSED						ALL
	8		W3504	217R	20		SPARE	ALL
	9		W3504	217B	20		SPARE	ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	= CC	GW	W3504	217Z			SPARE	ALL
	= CC	G3	W3504	01TO			77-31-11	050-099, 155-199, 277-299
D08338J		15/0/R029		RECP M/W VENDOR LVDT				ALL
	1		W3528	201R	20		78-36-11	ALL
	2		W3528	201B	20		78-36-11	ALL
	3		W3528	203R	20		78-36-11	ALL
	4		W3528	203B	20		78-36-11	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	= CC	G7	W3528	201Z			78-36-11	ALL
	= CC	G7	W3528	203Z			78-36-11	ALL
D08340J		-63/0/R005		RECP M/W VENDOR LVDT				ALL
	1		W3526	201R	20		78-36-11	ALL
	2		W3526	201B	20		78-36-11	ALL
	3		W3526	203B	20		78-36-11	ALL
	4		W3526	203R	20		78-36-11	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D08300

Page 10

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D08340J		-63/0/R005		RECP M/W VENDOR LVDT (continued)				ALL
	= CC	G7	W3526	201Z			78-36-11	ALL
	= CC	G7	W3526	203Z			78-36-11	ALL
D08342J		NL126/ /		RECP M/W VENDOR LVDT				ALL
	1		W3530	201R	20		78-36-11	ALL
	2		W3530	201B	20		78-36-11	ALL
	3		W3530	203R	20		78-36-11	ALL
	4		W3530	203B	20		78-36-11	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	= CC	G7	W3530	201Z			78-36-11	ALL
	= CC	G7	W3530	203Z			78-36-11	ALL
D08344J		NL 126/ /		RECP M/W VENDOR LVDT				ALL
	1		W3532	201R	20		78-36-11	ALL
	2		W3532	201B	20		78-36-11	ALL
	3		W3532	203B	20		78-36-11	ALL
	4		W3532	203R	20		78-36-11	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	= CC	G7	W3532	201Z			78-36-11	ALL
	= CC	G7	W3532	203Z			78-36-11	ALL
D08346P D08346P		NR190/150/ NR100/150/		PLUG - ENGINE PLUG - ENGINE VENDOR BRK UPPER				050-099, 155-199, 277-299 150-154, 275-276
	1		W3502	305R	20		73-21-11	ALL
	2		W3502	305B	20		73-21-11	ALL
	3		W3502	002	16		73-21-20	ALL
	4		W3502	029	16		73-21-20	ALL
	5		W3502	003	16		73-21-11	ALL
	6		W3502	030	16		73-21-11	ALL
	7		W3502	023	20		73-21-11	ALL
	8		W3502	026	20		78-36-11	ALL
	9		W3502	025	16		73-21-11	ALL
	10		W3502	201R	20		77-12-12	ALL
	11		W3502	201B	20		77-12-12	ALL
	12		W3502	305Y	20		73-21-11	ALL
	13	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D08300

Page 11

Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D08346P		NR190/150/		PLUG - ENGINE (continued)				050-099, 155-199, 277-299
D08346P		NR100/150/		PLUG - ENGINE VENDOR BRK UPPER (continued)				150-154, 275-276
	14		W3502	231R	20		78-36-11	ALL
	15		W3502	231B	20		78-36-11	ALL
	16		W3502	233B	20		78-36-11	ALL
	17		W3502	233R	20		78-36-11	ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	= CC	G3	W3502	002Z			73-21-20	ALL
	= CC	G3	W3502	003Z			73-21-11	ALL
	= CC	G3	W3502	023Z			73-21-11	ALL
	= CC	G3	W3502	026Z			78-36-11	ALL
	= CC	G3	W3502	201Z			77-12-12	ALL
	= CC	G3	W3502	231Z			78-36-11	ALL
	= CC	G3	W3502	233Z			78-36-11	ALL
	= CC	G3	W3502	305Z			73-21-11	ALL
D08370P		NR190/150/		PLUG-ENGINE				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15		W3502	206R	20		73-21-11	ALL
	16		W3502	206B	20		73-21-11	ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D08300

Page 12

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D08370P		NR190/150/		PLUG-ENGINE (continued)				ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	= CC	G3	W3502	206Z			73-21-11	ALL
D08374J		AL1003/ /		RCPT				050-099, 155-199, 276-299
	1		W0602	500	20		28-31-11	050-099, 155-199, 276-299
	2		W0602	501	20		28-31-11	050-099, 155-199, 276-299
	3		W0602	502	20		28-31-11	050-099, 155-199, 276-299
	4		W0602	503	20		28-31-12	050-099, 155-199, 276-299
	5		W0602	504	20		28-31-12	050-099, 155-199, 276-299
	6		W0602	505	20		28-31-12	050-099, 155-199, 276-299
	7		W0602	506	20		28-42-13	050-099, 155-199, 276-299
	8	UNUSED						050-099, 155-199, 276-299
	9	UNUSED						050-099, 155-199, 276-299
	10	UNUSED						050-099, 155-199, 276-299
	11	UNUSED						050-099, 155-199, 276-299
	12	UNUSED						050-099, 155-199, 276-299
	13	UNUSED						050-099, 155-199, 276-299
	14	UNUSED						050-099, 155-199, 276-299
	15	UNUSED						050-099, 155-199, 276-299
	16	UNUSED						050-099, 155-199, 276-299
	17	UNUSED						050-099, 155-199, 276-299
	18	UNUSED						050-099, 155-199, 276-299
	19	UNUSED						050-099, 155-199, 276-299
	20	UNUSED						050-099, 155-199, 276-299
	21	UNUSED						050-099, 155-199, 276-299
	22	UNUSED						050-099, 155-199, 276-299
	23	UNUSED						050-099, 155-199, 276-299
	24	UNUSED						050-099, 155-199, 276-299
	DED		W0602	506Z			28-42-13	050-099, 155-199, 276-299
D08374P		AL1003/ /		PLUG- R FWD INBD PANEL				050-099, 155-199, 276-299
	1		W0450	302Y	20		28-31-11	050-099, 155-199, 276-299
	2		W0450	302B	20		28-31-11	050-099, 155-199, 276-299
	3		W0450	302R	20		28-31-11	050-099, 155-199, 276-299

HOOKUP LIST
D280T132

91-21-51
Section D08300
Page 13
Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D08374P		AL1003/ /		PLUG- R FWD INBD PANEL (continued)				050-099, 155-199, 276-299
	4		W0450	300B	20		28-31-12	050-099, 155-199, 276-299
	5		W0450	300R	20		28-31-12	050-099, 155-199, 276-299
	6		W0450	300Y	20		28-31-12	050-099, 155-199, 276-299
	7	UNUSED						050-099, 162-164, 276
	7		W0450	100	20		28-42-13	155-157, 165-199, 277-299
	8	UNUSED						050-099, 155-199, 276-299
	9	UNUSED						050-099, 155-199, 276-299
	10	UNUSED						050-099, 155-199, 276-299
	11	UNUSED						050-099, 155-199, 276-299
	12	UNUSED						050-099, 155-199, 276-299
	13	UNUSED						050-099, 155-199, 276-299
	14	UNUSED						050-099, 155-199, 276-299
	15	UNUSED						050-099, 155-199, 276-299
	16	UNUSED						050-099, 155-199, 276-299
	17	UNUSED						050-099, 155-199, 276-299
	18	UNUSED						050-099, 155-199, 276-299
	19	UNUSED						050-099, 155-199, 276-299
	20	UNUSED						050-099, 155-199, 276-299
	21	UNUSED						050-099, 155-199, 276-299
	22	UNUSED						050-099, 155-199, 276-299
	23	UNUSED						050-099, 155-199, 276-299
	24	UNUSED						050-099, 155-199, 276-299
D08376J		AL1002/ /		RCPT-R FWD OUTBD PANEL				050-099, 155-199, 276-299
	1		W0656	173	20		28-31-11	050-099, 155-199, 276-299
	2		W0656	174	20		28-31-11	050-099, 155-199, 276-299
	3		W0656	175	20		28-31-11	050-099, 155-199, 276-299
	4		W0656	176	20		28-31-12	050-099, 155-199, 276-299
	5		W0656	177	20		28-31-12	050-099, 155-199, 276-299
	6		W0656	178	20		28-31-12	050-099, 155-199, 276-299
	7		W0656	179	20		28-42-13	050-099, 155-199, 276-299
	8	UNUSED						050-099, 155-199, 276-299
	9	UNUSED						050-099, 155-199, 276-299
	10	UNUSED						050-099, 155-199, 276-299
	11	UNUSED						050-099, 155-199, 276-299
	12	UNUSED						050-099, 155-199, 276-299
	13	UNUSED						050-099, 155-199, 276-299
	14	UNUSED						050-099, 155-199, 276-299
	15	UNUSED						050-099, 155-199, 276-299
	DED		W0656	179Z			28-42-13	050-099, 155-199, 276-299

HOOKUP LIST

D280T132

91-21-51

Section D08300

Page 14

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D08376P		AL1002/ /		PLUG- R FWD OUTBD PANEL				050-099, 155-199, 276-299
	1		W0452	302Y	20		28-31-11	050-099, 155-199, 276-299
	2		W0452	302B	20		28-31-11	050-099, 155-199, 276-299
	3		W0452	302R	20		28-31-11	050-099, 155-199, 276-299
	4		W0452	300B	20		28-31-12	050-099, 155-199, 276-299
	5		W0452	300R	20		28-31-12	050-099, 155-199, 276-299
	6		W0452	300Y	20		28-31-12	050-099, 155-199, 276-299
	7	UNUSED						050-099, 162-164, 276
	7		W0452	100	20		28-42-13	155-157, 165-199, 277-299
	8	UNUSED						050-099, 155-199, 276-299
	9	UNUSED						050-099, 155-199, 276-299
	10	UNUSED						050-099, 155-199, 276-299
	11	UNUSED						050-099, 155-199, 276-299
	12	UNUSED						050-099, 155-199, 276-299
	13	UNUSED						050-099, 155-199, 276-299
	14	UNUSED						050-099, 155-199, 276-299
	15	UNUSED						050-099, 155-199, 276-299

HOOKUP LIST

D280T132

91-21-51

Section D08300

Page 15 End

Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D08503		1678/183/R047		JACK-GROUND SUPPORT EQUIPMENT				ALL
	BLK		W0571	A-C			23-41-11	ALL
	BLU		W0571	A-B			23-41-11	ALL
	RED		W0571	A-A			23-41-11	ALL
D08505		1832/215/R020		JACK-GROUND SUPPORT EQUIPMENT				ALL
	BLK		W0250	A-C			23-41-11	ALL
	BLU		W0250	A-B			23-41-11	ALL
	RED		W0250	A-A			23-41-11	ALL
D08539		0287/171/R004		JACK-GROUND SUPPORT EQUIPMENT				ALL
	BLK		W1343	A-C			23-41-11	ALL
	BLU		W1343	A-B			23-41-11	ALL
	RED		W1343	A-A			23-41-11	ALL
D08541		0147/169/L008		JACK-GROUND SUPPORT EQUIPMENT				ALL
	BLK		W1343	A-F			23-41-11	ALL
	BLU		W1343	A-E			23-41-11	ALL
	RED		W1343	A-D			23-41-11	ALL
D08543		P040-00/ /		JACK-P40 GROUND SUPPORT EQUIPMENT				ALL
	BLK		W1130	A-C			23-41-11	ALL
	BLU		W1130	A-B			23-41-11	ALL
	RED		W1130	A-A			23-41-11	ALL
D08545		P040-00/ /		JACK-P40 GROUND SUPPORT EQUIPMENT				ALL
	BLK		W1130	A-F			23-51-11	ALL
	BLU		W1130	A-E			23-51-11	ALL
	RED		W1130	A-D			23-51-11	ALL
D08547		P035-00/ /		JACK-P35 GROUND SUPPORT EQUIPMENT				ALL
	BLK		W1066	A-C			23-41-11	ALL
	BLU		W1066	A-B			23-41-11	ALL
	RED		W1066	A-A			23-41-11	ALL
D08549		P028-00/ /		JACK-P28 GROUND SUPPORT EQUIPMENT				ALL
	BLK		W0472	A-G			23-41-11	ALL
	BLU		W0472	A-F			23-41-11	ALL
	RED		W0472	A-E			23-41-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D08500

Page 1

Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D08553		0953/115/R035		JACK-GROUND SUPPORT EQUIPMENT				ALL
	BLK		W1116	A-C			23-41-11	ALL
	BLU		W1116	A-B			23-41-11	ALL
	RED		W1116	A-A			23-41-11	ALL
D08555		P039-00/ /		JACK-P39 GROUND SUPPORT EQUIPMENT				ALL
	BLK		W1068	A-C			23-41-11	ALL
	BLU		W1068	A-B			23-41-11	ALL
	RED		W1068	A-A			23-41-11	ALL



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D08608		0243/211/R043		RECPT-P6 L ENG EEC MAINT I/F				ALL
	1		W0744	077	20		77-35-11	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W0744	212R	24		77-35-11	ALL
	6		W0744	212B	24		77-35-11	ALL
	7	UNUSED						ALL
	8		W0744	200R	24		77-35-11	ALL
	9		W0744	200B	24		77-35-11	ALL
	10	UNUSED						ALL
	11		W0744	204R	24		73-21-14	050-099, 150-199, 277-299
	11	UNUSED						275-276
	12		W0744	204B	24		73-21-14	050-099, 150-199, 277-299
	12	UNUSED						275-276
			W0744	204F	20		73-21-14	050-099, 150-199, 277-299
			W0744	204Z			73-21-14	050-099, 150-199, 277-299
			W0744	200	20		77-35-11	051-099, 150-199, 275-299
			W0744	200Z			77-35-11	051-099, 150-199, 275-299
			W0744	212	20		77-35-11	051-099, 150-199, 275-299
			W0744	212Z			77-35-11	051-099, 150-199, 275-299
D08610		243/211/R043		RECPT-P6 R ENG EEC MAINT I/F				050-099
D08610		0243/211/R043		RECPT-P6 R ENG EEC MAINT I/F				150-199
D08610		0243/211/R043		RECPT-P6 R ENG EEC MAINT I/F				275-299
	1		W0764	046	20		77-35-11	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W0764	249R	24		77-35-11	ALL
	6		W0764	249B	24		77-35-11	ALL
	7	UNUSED						ALL
	8		W0764	246R	24		77-35-11	ALL
	9		W0764	246B	24		77-35-11	ALL
	10	UNUSED						ALL
	11		W0764	047B	24		28-41-11	ALL
	11		W0764	047R	24		28-41-11	ALL
	12		W0764	047	20		28-41-11	ALL
			W0764	047Z			28-41-11	ALL
			W0764	246	20		77-35-11	050-099, 275-299
			W0764	246Z			77-35-11	050-099, 275-299

HOOKUP LIST

D280T132

91-21-51

Section D08600

Page 1

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D08610		243/211/R043		RECPT-P6 R ENG EEC MAINT I/F (continued)				050-099
D08610		0243/211/R043		RECPT-P6 R ENG EEC MAINT I/F (continued)				150-199
D08610		0243/211/R043		RECP-P6 R ENG EEC MAINT I/F (continued)				275-299
			W0764	249	20		77-35-11	050-099, 275-299
			W0764	249Z			77-35-11	050-099, 275-299
D08614J		AE0320/ /		RCPT-E2-4				ALL
	1		W0656	210B	24		77-35-11	ALL
	2		W0656	210R	24		77-35-11	ALL
	3		W0656	210Z			77-35-11	ALL
	4		W0656	209B	24		77-35-11	ALL
	5		W0656	209R	24		77-35-11	ALL
	6		W0656	209Z			77-35-11	ALL
	7		W0656	208Z			28-41-11	ALL
	8		W0656	208R	24		28-41-11	ALL
	9		W0656	208B	24		28-41-11	ALL
	10		W0656	213R	22		31-31-22	ALL
	11		W0656	213B	22		31-31-22	ALL
	12		W0656	213Z			31-31-22	ALL
	13		W0656	214	20		31-31-22	ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
D08614P		AE0320/ /		PLUG-E2-4				ALL
	1		W0016	230B	24		77-35-11	ALL
	2		W0016	230R	24		77-35-11	ALL
	3		W0016	230Z			77-35-11	ALL
	4		W0016	228B	24		77-35-11	ALL
	5		W0016	228R	24		77-35-11	ALL
	6		W0016	228Z			77-35-11	ALL
	7		W0016	235Z			28-41-11	ALL
	8		W0016	235R	24		28-41-11	ALL
	9		W0016	235B	24		28-41-11	ALL
	10		W0016	243R	22		31-31-22	ALL
	11		W0016	243B	22		31-31-22	ALL
	12		W0016	243Z			31-31-22	ALL
	13		W0016	504	22		31-31-22	ALL
	14	UNUSED						ALL
	15	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D08600

Page 2

Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D08680J		P037-00/ /		RECPT P037				050-099
D08680J		AE0218/ /		RECPT-P37				150-199, 275-299
	1	UNUSED						ALL
	2		W0192	20F	24		21-61-81	ALL
	3		W0192	20G	24		21-61-81	ALL
	4		W0192	20HR	24		21-61-81	ALL
	5		W0192	20HB	24		21-61-81	ALL
	6		W0192	20J	24		21-61-81	ALL
	7		W0192	20K	24		21-61-81	ALL
	8		W0192	20L	24		21-61-81	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13		W0192	18V	24		21-61-81	ALL
	14		W0192	17X	24		21-58-12	ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20		W0192	22XR	22		21-61-81	050-099, 151-199, 275-299
	20	UNUSED						150
	21		W0192	22XB	22		21-61-81	050-099, 151-199, 275-299
	21	UNUSED						150
	22		W0192	22YR	22		21-61-81	050-099, 151-199, 275-299
	22	UNUSED						150
	23		W0192	22YB	22		21-61-81	050-099, 151-199, 275-299
	23	UNUSED						150
	24		W0192	80F	24		21-61-81	050-099, 151-199, 275-299
	24	UNUSED						150
D08680P		292/169/R68		PLUG				ALL
	1	UNUSED						ALL
	2		W0942	554	24		21-61-81	ALL
	3		W0942	555	24		21-61-81	ALL
	4		W0942	236R	24		21-61-81	ALL
	5		W0942	236B	24		21-61-81	ALL
	6		W0942	557	24		21-61-81	ALL
	7		W0942	558	24		21-61-81	ALL
	8		W0942	559	24		21-61-81	ALL

HOOKUP LIST

D280T132

91-21-51

Section D08600

Page 3

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D08680P		292/169/R68		PLUG (continued)				ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13		W0942	552	24		21-61-81	ALL
	14		W0942	565	24		21-58-12	ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20		W0942	240R	22		21-61-81	050-099, 151-199, 275-299
	20	UNUSED						150
	21		W0942	240B	22		21-61-81	050-099, 151-199, 275-299
	21	UNUSED						150
	22		W0942	241R	22		21-61-81	050-099, 151-199, 275-299
	22	UNUSED						150
	23		W0942	241B	22		21-61-81	050-099, 151-199, 275-299
	23	UNUSED						150
	24		W0942	575	22		21-61-81	050-099, 151-199, 275-299
	24	UNUSED						150
D08686J		AE0312/ /		RECP-P32				050-099, 150-199
	1	UNUSED						050-099, 150-199
	2	UNUSED						050-099, 150-199
	3	UNUSED						050-099, 150-199
	4		W0024	181	18		30-71-25	050-099, 150-199
	5		W0024	172	24		25-31-12	050-099, 150-199
	6		W0024	174	24		25-31-12	050-099, 150-199
	7	UNUSED						050-099, 150-199
	8		W0024	171	24		25-31-12	050-099, 150-199
	9		W0024	175	24		25-31-12	050-099, 150-199
	10		W0024	169	18		25-31-12	050-099, 150-199
	11	UNUSED						050-099, 150-199
	12	UNUSED						050-099, 150-199
D08686P		345/150/R75		PLUG-P32				050-099, 150-199
	1	UNUSED						050-099, 150-199
	2	UNUSED						050-099, 150-199
	3	UNUSED						050-099, 150-199

HOOKUP LIST
D280T132

91-21-51
Section D08600
Page 4
Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D08686P		345/150/R75		PLUG-P32 (continued)				050-099, 150-199
	4		W0428	015	18		30-71-25	050-099, 150-199
	5		W0428	005	24		25-31-12	050-099, 150-199
	6		W0428	006	24		25-31-12	050-099, 150-199
	7	UNUSED						050-099, 150-199
	8		W0428	004	24		25-31-12	050-099, 150-199
	9		W0428	007	24		25-31-12	050-099, 150-199
	10		W0428	010	16		25-31-12	050-099, 150-199
	11	UNUSED						050-099, 150-199
	12	UNUSED						050-099, 150-199
D08688J		AP0307/ /		PLUG				050-099, 150-199
	1		W0812	812	20		33-21-11	050-099
	1		W0812	871	20		33-21-11	150-199
	2		W0812	872	24		33-21-11	050-099, 150-199
	3		W0812	873	24		33-21-11	050-099, 150-199
	4		W0812	874	20		33-21-11	050-099, 150-199
	5		W0812	875	24		33-21-11	050-099, 150-199
	6		W0812	876	24		33-21-11	050-099, 150-199
	7		W0812	877	20		33-21-11	050-099, 150-199
	8		W0812	878	24		33-21-11	050-099, 150-199
	9		W0812	879	24		33-21-12	050-099
	9		W0812	879	20		33-21-12	150-199
	10		W0812	880	24		33-21-12	050-099, 150-199
	11		W0812	881	24		33-21-12	050-099
	11		W0812	881	20		33-21-12	150-199
	12		W0812	882	24		33-21-12	050-099, 150-199
	13		W0812	883	24		33-21-12	050-099
	13		W0812	883	20		33-21-12	150-199
	14		W0812	884	24		33-21-12	050-099
	14		W0812	884	20		33-21-12	150-199
	15		W0812	885	24		33-21-12	050-099
	15		W0812	885	20		33-21-12	150-199
	16		W0812	886	24		33-21-12	050-099
	16		W0812	886	20		33-21-12	150-199
	17		W0812	888	22		33-22-41	050-099
	17		W0812	888	24		33-22-41	150-199
	18		W0812	889	22		33-22-41	050-099
	18		W0812	889	24		33-22-41	150-199
	19		W0812	890	22		33-22-41	050-099
	19		W0812	890	24		33-22-41	150-199

HOOKUP LIST

D280T132

91-21-51

Section D08600

Page 5

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D08688J		AP0307/ /		PLUG (continued)				050-099, 150-199
	20		W0812	891	22		33-22-41	050-099
	20		W0812	891	24		33-22-41	150-199
	21		W0812	01J	24		33-21-12	050-099
	21		W0812	911	20		33-21-12	150-199
	22		W0812	896	20		33-22-42	050-099, 150-199
	23	UNUSED						050-099, 150-199
	24		W0812	897	20		33-22-42	050-099, 150-199
	25	UNUSED						050-099, 150-199
	26	UNUSED						050-099, 150-199
	27	UNUSED						050-099, 150-199
	28	UNUSED						050-099, 150-199
	29	UNUSED						050-099, 150-199
	30		W0812	01P	20		33-26-21	050-099
	30		W0812	904	20		33-26-21	150-199
	31		W0812	01N	20		33-26-21	050-099
	31		W0812	905	20		33-26-21	150-199
	32		W0812	01M	20		33-26-21	050-099
	32		W0812	906	20		33-26-21	150-199
	33		W0812	01L	20		33-26-21	050-099
	33		W0812	908	20		33-26-21	150-199
	34	UNUSED						050-099, 150-199
	35	UNUSED						050-099, 150-199
	36	UNUSED						050-099, 150-199
	37	UNUSED						050-099, 150-199
	38	UNUSED						050-099, 150-199
	39	UNUSED						050-099, 150-199
D08688P		380/315/L8		PLUG				050-099, 150-199
	1		W1449	021	20		33-21-11	050-099, 150-199
	2		W1449	022	24		33-21-11	050-099, 150-199
	3		W1449	023	24		33-21-11	050-099, 150-199
	4		W1449	024	20		33-21-11	050-099, 150-199
	5		W1449	025	24		33-21-11	050-099, 150-199
	6		W1449	026	24		33-21-11	050-099, 150-199
	7		W1449	027	20		33-21-11	050-099, 150-199
	8		W1449	028	24		33-21-11	050-099
	8		W1449	028	20		33-21-11	150-199
	9		W1449	029	24		33-21-12	050-099, 150-199
	10		W1449	030	20		33-21-12	050-099, 150-199
	11		W1449	031	24		33-21-12	050-099, 150-199

HOOKUP LIST

D280T132

91-21-51

Section D08600

Page 6

Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D08688P		380/315/L8		PLUG (continued)				050-099, 150-199
	12		W1449	032	24		33-21-12	050-099
	12		W1449	032	20		33-21-12	150-199
	13		W1449	033	24		33-21-12	050-099, 150-199
	14		W1449	034	24		33-21-12	050-099, 150-199
	15		W1449	035	24		33-21-12	050-099, 150-199
	16		W1449	036	24		33-21-12	050-099, 150-199
	17		W1449	043	22		33-22-41	050-099, 150-199
	18		W1449	044	22		33-22-41	050-099, 150-199
	19		W1449	045	22		33-22-41	050-099, 150-199
	20		W1449	046	22		33-22-41	050-099, 150-199
	21		W1449	054	24		33-21-12	050-099, 150-199
	22		W1449	039	22		33-22-42	050-099, 150-199
	23	UNUSED						050-099, 150-199
	24		W1449	040	22		33-22-42	050-099, 150-199
	25	UNUSED						050-099, 150-199
	26	UNUSED						050-099, 150-199
	27	UNUSED						050-099, 150-199
	28	UNUSED						050-099, 150-199
	29	UNUSED						050-099, 150-199
	30		W1449	067	20		33-26-21	050-099, 150-157, 167-199
	30		W1449	067	20		23-31-13	162-166
	31		W1449	068	20		33-26-21	050-099, 150-157, 167-199
	31		W1449	068	20		23-31-13	162-166
	32		W1449	069	20		33-26-21	050-099, 150-157, 167-199
	32		W1449	069	20		23-31-13	162-166
	33		W1449	070	20		33-26-21	050-099, 150-157, 167-199
	33		W1449	070	20		23-31-13	162-166
	34	UNUSED						050-099, 150-199
	35	UNUSED						050-099, 150-199
	36	UNUSED						050-099, 150-199
	37	UNUSED						050-099, 150-199
	38	UNUSED						050-099, 150-199
	39	UNUSED						050-099, 150-199

HOOKUP LIST

D280T132

91-21-51

Section D08600

Page 7 End

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D08706J		AP0307/ /		RECP-				050-099
D08706J		AP0307/ /		RCPT				162-199
	1		W1230	104	20		35-21-14	050-099, 162-199
	2	UNUSED						050-099, 162-199
	3		W1230	118	20		26-13-12	050-099, 162-199
	4		W1230	501	20		33-26-21	050-099, 162-199
	5		W1230	120	20		26-13-12	050-099, 162-199
	6		W1230	106	22		33-22-33	050-099, 162-199
	7		W1230	105	20		33-51-13	050-099, 162-199
	8		W1230	522	22		21-66-11	050-099, 162-199
	9		W1230	523	22		21-66-11	050-099, 162-199
	10		W1230	207B	22		21-66-11	050-099, 162-199
	11		W1230	207R	22		21-66-11	050-099, 162-199
	12		W1230	116	22		33-24-13	050-099, 162-199
	13		W1230	117	22		33-24-13	050-099, 162-199
	14		W1230	119	20		26-13-12	050-099, 164-199
	14		W1230	125	20		26-13-12	162-163
	15		W1230	126	20		26-13-12	050-099, 162-199
	16		W1230	514	22		21-66-11	050-099, 162-199
	17		W1230	515	22		21-66-11	050-099, 162-199
	18		W1230	526	20		26-13-12	050-099, 162-199
	19	UNUSED						050-099, 162-199
	20	UNUSED						050-099, 162-199
	21	UNUSED						050-099, 162-199
	22	UNUSED						050-099, 162-199
	23	UNUSED						050-099, 162-199
	24		W1230	301B	22		21-66-11	050-099, 162-199
	25		W1230	301R	22		21-66-11	050-099, 162-199
	26		W1230	301Y	22		21-66-11	050-099, 162-199
	27	UNUSED						050-099, 162-199
	28		W1230	525	22		21-66-11	050-099, 162-199
	29	UNUSED						050-099, 162-199
	30	UNUSED						050-099, 162-199
	31	UNUSED						050-099, 162-199
	32	UNUSED						050-099, 162-199
	33	UNUSED						050-099, 162-199
	34	UNUSED						050-099, 162-199
	35	UNUSED						050-099, 162-199
	36	UNUSED						050-099, 162-199
	37	UNUSED						050-099, 162-199
	38	UNUSED						050-099, 162-199

HOOKUP LIST

D280T132

91-21-51

Section D08700

Page 1

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D08706J		AP0307 / /		RECP- (continued)				050-099
D08706J		AP0307 / /		RCPT (continued)				162-199
	39	UNUSED						050-099, 162-199
	DED		W1230	522Z			21-66-11	050-099, 162-199
	DED		W1230	523Z			21-66-11	050-099, 162-199
D08706P		AP0307 / /		PLUG				050-099, 162-199
	1		W1449	140	20		35-21-14	050-099, 162-199
	2		W1449	124	20		SPARE	050-099
	2	UNUSED						162-199
	3		W1449	125	20		26-13-12	050-099, 162-199
	4		W1449	085	20		33-26-21	050-099, 162-199
	5		W1449	123	20		26-13-12	050-099, 162-199
	6		W1449	078	22		33-22-33	050-099, 162-199
	7		W1449	097	20		33-51-13	050-099, 162-199
	8		W1449	165	22		21-66-11	050-099, 162-199
	9		W1449	166	22		21-66-11	050-099, 162-199
	10		W1449	205B	22		21-66-11	050-099, 162-199
	11		W1449	205R	22		21-66-11	050-099, 162-199
	12		W1449	086	22		33-24-13	050-099
	12		W1449	086	20		33-24-13	162-199
	13		W1449	089	22		33-24-13	050-099, 162-199
	14		W1449	146	20		26-13-12	050-099, 162-199
	15		W1449	147	20		26-13-12	050-099, 162-199
	16		W1449	170	22		21-66-11	050-099, 162-199
	17		W1449	171	22		21-66-11	050-099, 162-199
	18		W1449	126	20		26-13-12	050-099, 162-199
	19	UNUSED						050-099, 162-199
	20	UNUSED						050-099, 162-199
	21	UNUSED						050-099, 162-199
	22	UNUSED						050-099, 162-199
	23	UNUSED						050-099, 162-199
	24		W1449	305B	22		21-66-11	050-099, 162-199
	25		W1449	305R	22		21-66-11	050-099, 162-199
	26		W1449	305Y	22		21-66-11	050-099, 162-199
	27	UNUSED						050-099, 162-199
	28		W1449	174	22		21-66-11	050-099, 162-199
	29	UNUSED						050-099, 162-199
	30	UNUSED						050-099, 162-199
	31	UNUSED						050-099, 162-199
	32	UNUSED						050-099, 162-199

HOOKUP LIST

D280T132

91-21-51

Section D08700

Page 2

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D08706P		AP0307/ /		PLUG (continued)				050-099, 162-199
	33	UNUSED						050-099, 162-199
	34	UNUSED						050-099, 162-199
	35	UNUSED						050-099, 162-199
	36	UNUSED						050-099, 162-199
	37	UNUSED						050-099, 162-199
	38	UNUSED						050-099, 162-199
	39	UNUSED						050-099, 162-199

HOOKUP LIST

D280T132

91-21-51

Section D08700

Page 3 End

Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D09000		E002-06/ /		RECEPT				150, 153-199
D09000		451/300/L014		PLUG				275-299
	1		W9008	001	06		25-25-23	150, 153-199
	2		W9008	002	06		25-25-23	150, 153-199
	3	UNUSED						150, 153-199
	4	UNUSED						150, 153-199
	5	UNUSED						150, 153-199
	6	UNUSED						150, 153-199
	7	UNUSED						150, 153-199
	8	UNUSED						150, 153-199
	9	UNUSED						150, 153-199
	10	UNUSED						150, 153-199
	11	UNUSED						150, 153-199
	12	UNUSED						150, 153-199
	13	UNUSED						150, 153-199
	14	UNUSED						150, 153-199
	15	UNUSED						150, 153-199
	16	UNUSED						150, 153-199
	17	UNUSED						150, 153-199
	18	UNUSED						150, 153-199
	19	UNUSED						150, 153-199
	20	UNUSED						150, 153-199
	21	UNUSED						150, 153-199
	22	UNUSED						150, 153-199
	23	UNUSED						150, 153-199
	24	UNUSED						150, 153-199
	25	UNUSED						150, 153-199
	26	UNUSED						150, 153-199
	27	UNUSED						150, 153-199
	28	UNUSED						150, 153-199
	29	UNUSED						150, 153-199
	30	UNUSED						150, 153-199
	31	UNUSED						150, 153-199
	32	UNUSED						150, 153-199
	33	UNUSED						150, 153-199
	34	UNUSED						150, 153-199
	35	UNUSED						150, 153-199
	36	UNUSED						150, 153-199
	37	UNUSED						150, 153-199
	38	UNUSED						150, 153-199
	39	UNUSED						150, 153-199

HOOKUP LIST

D280T132

91-21-51

Section D09000

Page 1

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D09000		E002-06/ /		RECEPT (continued)				150, 153-199
D09000		451/300/L014		PLUG (continued)				275-299
	40	UNUSED						150, 153-199
	41	UNUSED						150, 153-199
	42	UNUSED						150, 153-199
	43	UNUSED						150, 153-199
	44	UNUSED						150, 153-199
	45	UNUSED						150, 153-199
	46	UNUSED						150, 153-199
	47	UNUSED						150, 153-199
	48	UNUSED						150, 153-199
	49	UNUSED						150, 153-199
	50	UNUSED						150, 153-199
	51	UNUSED						150, 153-199
	52	UNUSED						150, 153-199
	53	UNUSED						150, 153-199
	54	UNUSED						150, 153-199
	= A1	UNUSED						275-299
	= C1	UNUSED						275-299
	= C27	UNUSED						150, 153-199
	A	UNUSED						275-299
	B	UNUSED						275-299
	C		W1232	570	20		21-73-11	275-299
	D		W1232	562	20		21-73-11	275-299
	E	UNUSED						275-299
	F	UNUSED						275-299
	G	UNUSED						275-299
	H	UNUSED						275-299
	I	UNUSED						275-299
	J		W1232	561	16		21-73-11	275-299
	K		W1232	318R	16		21-73-11	275-299
	L		W1232	318B	16		21-73-11	275-299
	M		W1232	318Y	16		21-73-11	275-299
	N	UNUSED						275-299
	O	UNUSED						275-299
	P	UNUSED						275-299
	Q	UNUSED						275-299
	R	UNUSED						275-299
	S	UNUSED						275-299
	T	UNUSED						275-299
	U	UNUSED						275-299

HOOKUP LIST

D280T132

91-21-51

Section D09000

Page 2

Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D09000		E002-06/ /		RECEPT (continued)				150, 153-199
D09000		451/300/L014		PLUG (continued)				275-299
	V	UNUSED						275-299
	W	UNUSED						275-299
	X	UNUSED						275-299
	Y	UNUSED						275-299
	Z	UNUSED						275-299
	A-	UNUSED						275-299
	B-	UNUSED						275-299
	C-	UNUSED						275-299
	D-	UNUSED						275-299
	E-	UNUSED						275-299
	F-	UNUSED						275-299
	G-	UNUSED						275-299
	H-	UNUSED						275-299
	I-	UNUSED						275-299
	J-	UNUSED						275-299
	K-	UNUSED						275-299
	L-	UNUSED						275-299
	M-	UNUSED						275-299
	N-	UNUSED						275-299
	O-	UNUSED						275-299
	P-	UNUSED						275-299
	Q-	UNUSED						275-299
	R-	UNUSED						275-299
	S-	UNUSED						275-299
	T-	UNUSED						275-299
	U-	UNUSED						275-299
	V-	UNUSED						275-299
	W-	UNUSED						275-299
	X-	UNUSED						275-299
	Y-	UNUSED						275-299
	Z-	UNUSED						275-299
D09001		931/300/R031		PLUG				275-278
D09001		451/300/R031		PLUG				280-299
	= A1	UNUSED						275-299
	= C1	UNUSED						275-299
	A	UNUSED						275-299
	B	UNUSED						275-299
	C		W1232	571	20		21-73-11	275-299

HOOKUP LIST
D280T132

91-21-51
Section D09000
Page 3
Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D09001		931/300/R031		PLUG (continued)				275-278
D09001		451/300/R031		PLUG (continued)				280-299
	D		W1232	565	20		21-73-11	275-299
	E	UNUSED						275-299
	F	UNUSED						275-299
	G	UNUSED						275-299
	H	UNUSED						275-299
	I	UNUSED						275-299
	J		W1232	564	16		21-73-11	275-299
	K		W1232	319R	16		21-73-11	275-299
	L		W1232	319B	16		21-73-11	275-299
	M		W1232	319Y	16		21-73-11	275-299
	N	UNUSED						275-299
	O	UNUSED						275-299
	P	UNUSED						275-299
	Q	UNUSED						275-299
	R	UNUSED						275-299
	S	UNUSED						275-299
	T	UNUSED						275-299
	U	UNUSED						275-299
	V	UNUSED						275-299
	W	UNUSED						275-299
	X	UNUSED						275-299
	Y	UNUSED						275-299
	Z	UNUSED						275-299
	A-	UNUSED						275-299
	B-	UNUSED						275-299
	C-	UNUSED						275-299
	D-	UNUSED						275-299
	E-	UNUSED						275-299
	F-	UNUSED						275-299
	G-	UNUSED						275-299
	H-	UNUSED						275-299
	I-	UNUSED						275-299
	J-	UNUSED						275-299
	K-	UNUSED						275-299
	L-	UNUSED						275-299
	M-	UNUSED						275-299
	N-	UNUSED						275-299
	O-	UNUSED						275-299
	P-	UNUSED						275-299

HOOKUP LIST

D280T132

91-21-51

Section D09000

Page 4

Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D09001		931/300/R031		PLUG (continued)				275-278
D09001		451/300/R031		PLUG (continued)				280-299
	Q-	UNUSED						275-299
	R-	UNUSED						275-299
	S-	UNUSED						275-299
	T-	UNUSED						275-299
	U-	UNUSED						275-299
	V-	UNUSED						275-299
	W-	UNUSED						275-299
	X-	UNUSED						275-299
	Y-	UNUSED						275-299
	Z-	UNUSED						275-299
D09001J		AP0405/ /		RECP-MOA REF BACC45FN20-28S9(MTO 230523)				150, 153-157
D09001J		AP0405/ /		RECP (MTO 330348)				162-199
	1		W9003	002	20		23-32-13	150, 153-157
	1	UNUSED						162-199
	2		W9003	009	20		23-32-13	150, 153-157
	2	UNUSED						162-199
	3		W9003	008	20		23-32-13	150, 153-157
	3	UNUSED						162-199
	4		W9003	003	20		23-32-13	150, 153-157
	4	UNUSED						162-199
	5		W9003	004	20		23-32-13	150, 153-157
	5	UNUSED						162-199
	6		W9003	005	22		23-32-13	150, 153-157
	6	UNUSED						162-199
	7		W9003	007	22		23-32-13	150, 153-157
	7	UNUSED						162-199
	8		W9003	006	22		23-32-13	150, 153-157
	8	UNUSED						162-199
	9	UNUSED						150, 153-199
	10	UNUSED						150, 153-199
	11	UNUSED						150, 153-199
	12	UNUSED						150, 153-199
	13	UNUSED						150, 153-199
	14	UNUSED						150, 153-199
	15		W9003	01CX			23-32-13	150, 153-157
	15	UNUSED						162-199
	16		W9003	010	22		33-22-21	150, 153-199
	17		W9003	011	22		33-22-21	150, 153-199

HOOKUP LIST

D280T132

91-21-51

Section D09000

Page 5

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D09001J		AP0405/ /		RECP-MOA REF BACC45FN20-28S9(MTO 230523) (continued)				150, 153-157
D09001J		AP0405/ /		RECP (MTO 330348) (continued)				162-199
	18	UNUSED						150, 153-199
	19	UNUSED						150, 153-199
	20	UNUSED						150, 153-199
	21	UNUSED						150, 153-199
	22	UNUSED						150, 153-199
	23	UNUSED						150, 153-199
	24	UNUSED						150, 153-199
	25	UNUSED						150, 153-199
	26	UNUSED						150, 153-199
	27	UNUSED						150, 153-199
	28	UNUSED						150, 153-199
	C15		W9003	01CO			23-32-13	150, 153-157
	C19	UNUSED						150, 153-157
	C23	UNUSED						150, 153-157
	C27	UNUSED						150, 153-157
D09001P		AP0405/ /		PLUG-MOA REF BACC45FT20-28P9(MTO 230523)				150, 153-157
D09001P		AP0405/ /		PLUG (MTO 330348)				162-199
	1		W9002	022	20		23-32-13	150, 153-157
	1	UNUSED						162-199
	2		W9002	029	20		23-32-13	150, 153-157
	2	UNUSED						162-199
	3		W9002	028	20		23-32-13	150, 153-157
	3	UNUSED						162-199
	4		W9002	023	20		23-32-13	150, 153-157
	4	UNUSED						162-199
	5		W9002	024	20		23-32-13	150, 153-157
	5	UNUSED						162-199
	6		W9002	025	22		23-32-13	150, 153-157
	6	UNUSED						162-199
	7		W9002	027	22		23-32-13	150, 153-157
	7	UNUSED						162-199
	8		W9002	026	22		23-32-13	150, 153-157
	8	UNUSED						162-199
	9	UNUSED						150, 153-199
	10	UNUSED						150, 153-199
	11	UNUSED						150, 153-199
	12	UNUSED						150, 153-199
	13	UNUSED						150, 153-199

HOOKUP LIST

D280T132

91-21-51

Section D09000

Page 6

Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D09001P		AP0405/ /		PLUG-MOA REF BACC45FT20-28P9(MTO 230523) (continued)				150, 153-157
D09001P		AP0405/ /		PLUG (MTO 330348) (continued)				162-199
	14	UNUSED						150, 153-199
	15		W9002	02CX			23-32-13	150, 153-157
	15	UNUSED						162-199
	16		W9005	001	22		33-22-21	150, 153-199
	17		W9005	002	22		33-22-21	150, 153-157
	17		W9005	A02	22		33-22-21	162-199
	18	UNUSED						150, 153-199
	19	UNUSED						150, 153-199
	20	UNUSED						150, 153-199
	21	UNUSED						150, 153-199
	22	UNUSED						150, 153-199
	23	UNUSED						150, 153-199
	24	UNUSED						150, 153-199
	25	UNUSED						150, 153-199
	26	UNUSED						150, 153-199
	27	UNUSED						150, 153-199
	28	UNUSED						150, 153-199
	C15		W9002	02CO			23-32-13	150, 153-157
	C19	UNUSED						150, 153-157
	C23	UNUSED						150, 153-157
	C27	UNUSED						150, 153-157
D09002		1356/300/L010		PLUG				275-299
	=A1	UNUSED						275-299
	=C1	UNUSED						275-299
	A	UNUSED						275-299
	B	UNUSED						275-299
	C		W1232	572	20		21-73-11	275-299
	D		W1232	568	20		21-73-11	275-299
	E	UNUSED						275-299
	F	UNUSED						275-299
	G	UNUSED						275-299
	H	UNUSED						275-299
	I	UNUSED						275-299
	J		W1232	567	16		21-73-11	275-299
	K		W1232	320R	16		21-73-11	275-299
	L		W1232	320B	16		21-73-11	275-299
	M		W1232	320Y	16		21-73-11	275-299
	N	UNUSED						275-299

HOOKUP LIST

D280T132

91-21-51

Section D09000

Page 7

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D09002		1356/300/L010		PLUG (continued)				275-299
	O	UNUSED						275-299
	P	UNUSED						275-299
	Q	UNUSED						275-299
	R	UNUSED						275-299
	S	UNUSED						275-299
	T	UNUSED						275-299
	U	UNUSED						275-299
	V	UNUSED						275-299
	W	UNUSED						275-299
	X	UNUSED						275-299
	Y	UNUSED						275-299
	Z	UNUSED						275-299
	A-	UNUSED						275-299
	B-	UNUSED						275-299
	C-	UNUSED						275-299
	D-	UNUSED						275-299
	E-	UNUSED						275-299
	F-	UNUSED						275-299
	G-	UNUSED						275-299
	H-	UNUSED						275-299
	I-	UNUSED						275-299
	J-	UNUSED						275-299
	K-	UNUSED						275-299
	L-	UNUSED						275-299
	M-	UNUSED						275-299
	N-	UNUSED						275-299
	O-	UNUSED						275-299
	P-	UNUSED						275-299
	Q-	UNUSED						275-299
	R-	UNUSED						275-299
	S-	UNUSED						275-299
	T-	UNUSED						275-299
	U-	UNUSED						275-299
	V-	UNUSED						275-299
	W-	UNUSED						275-299
	X-	UNUSED						275-299
	Y-	UNUSED						275-299
	Z-	UNUSED						275-299

HOOKUP LIST

D280T132

91-21-51

Section D09000

Page 8

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D09002J		AP0901/ /		RECP-MOA REF BACC45FN20-28S8(MTO 230523)				150, 153-157
	1		W9004	002	20		23-32-13	150, 153-157
	2		W9004	009	20		23-32-13	150, 153-157
	3		W9004	008	20		23-32-13	150, 153-157
	4		W9004	003	20		23-32-13	150, 153-157
	5		W9004	004	20		23-32-13	150, 153-157
	6		W9004	005	22		23-32-13	150, 153-157
	7		W9004	007	22		23-32-13	150, 153-157
	8		W9004	006	22		23-32-13	150, 153-157
	9	UNUSED						150, 153-157
	10	UNUSED						150, 153-157
	11	UNUSED						150, 153-157
	12	UNUSED						150, 153-157
	13	UNUSED						150, 153-157
	14	UNUSED						150, 153-157
	15		W9004	01CX			23-32-13	150, 153-157
	16		W9004	010	22		33-22-21	150, 153-157
	17		W9004	011	22		33-22-21	150, 153-157
	18	UNUSED						150, 153-157
	19		W9004	02CX			23-32-13	150, 153-157
	20	UNUSED						150, 153-157
	21	UNUSED						150, 153-157
	22	UNUSED						150, 153-157
	23	UNUSED						150, 153-157
	24	UNUSED						150, 153-157
	25	UNUSED						150, 153-157
	26	UNUSED						150, 153-157
	27	UNUSED						150, 153-157
	28	UNUSED						150, 153-157
	C15		W9004	01CO			23-32-13	150, 153-157
	C19		W9004	02CO			23-32-13	150, 153-157
	C23	UNUSED						150, 153-157
	C27	UNUSED						150, 153-157
D09002P		AP0901/ /		PLUG-MOA REF BACC45FT20-28P8(MTO 230523)				150, 153-157
	1		W9002	012	20		23-32-13	150, 153-157
	2		W9002	019	20		23-32-13	150, 153-157
	3		W9002	018	20		23-32-13	150, 153-157
	4		W9002	013	20		23-32-13	150, 153-157
	5		W9002	014	20		23-32-13	150, 153-157
	6		W9002	015	22		23-32-13	150, 153-157

HOOKUP LIST

D280T132

91-21-51

Section D09000

Page 9

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D09002P		AP0901 / /		PLUG-MOA REF BACC45FT20-28P8(MTO 230523) (continued)				150, 153-157
	7		W9002	017	22		23-32-13	150, 153-157
	8		W9002	016	22		23-32-13	150, 153-157
	9	UNUSED						150, 153-157
	10	UNUSED						150, 153-157
	11	UNUSED						150, 153-157
	12	UNUSED						150, 153-157
	13	UNUSED						150, 153-157
	14	UNUSED						150, 153-157
	15		W9002	01CX			23-32-13	150, 153-157
	16		W9006	001	22		33-22-21	150, 153-157
	17		W9006	002	22		33-22-21	150, 153-157
	18	UNUSED						150, 153-157
	19		W9002	02CX			23-32-13	150, 153-157
	20	UNUSED						150, 153-157
	21	UNUSED						150, 153-157
	22	UNUSED						150, 153-157
	23	UNUSED						150, 153-157
	24	UNUSED						150, 153-157
	25	UNUSED						150, 153-157
	26	UNUSED						150, 153-157
	27	UNUSED						150, 153-157
	28	UNUSED						150, 153-157
	C15		W9002	01CO			23-32-13	150, 153-157
	C19		W9002	02CO			23-32-13	150, 153-157
	C23	UNUSED						150, 153-157
	C27	UNUSED						150, 153-157
D09004		621/308/R 36		PLUG (MTO 230523)				150, 153-157
	A	UNUSED						150, 153-157
	B	UNUSED						150, 153-157
	C	UNUSED						150, 153-157
	D	UNUSED						150, 153-157
	E		W9002	007	22		23-32-13	150, 153-157
	F		W9002	006	22		23-32-13	150, 153-157
	G		W9002	008	20		23-32-13	150, 153-157
	H		W9002	005	22		23-32-13	150, 153-157
	J		W9002	004	20		23-32-13	150, 153-157
	K		W9002	002	20		23-32-13	150, 153-157
	L		W9002	003	20		23-32-13	150, 153-157
	M		W9002	009	20		23-32-13	150, 153-157

HOOKUP LIST

D280T132

91-21-51

Section D09000

Page 10

Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D09006		621/308/R 36		PLUG-COAXIAL (MTO 230523)				150, 153-157
	= A1		W9002	01CX			23-32-13	150, 153-157
	= C1		W9002	01CO			23-32-13	150, 153-157
D09007		458/295/L69		PLUG (DMA11W1S) (MTO 230523)				150, 153-157
	1		W9003	002	20		23-32-13	150, 153-157
	2		W9003	009	20		23-32-13	150, 153-157
	3		W9003	008	20		23-32-13	150, 153-157
	4		W9003	003	20		23-32-13	150, 153-157
	5		W9003	004	20		23-32-13	150, 153-157
	6		W9003	005	22		23-32-13	150, 153-157
	7		W9003	007	22		23-32-13	150, 153-157
	8		W9003	006	22		23-32-13	150, 153-157
	9	UNUSED						150, 153-157
	10	UNUSED						150, 153-157
	= A1		W9003	01CX			23-32-13	150, 153-157
	= C1		W9003	01CO			23-32-13	150, 153-157
D09008		458/295/R 69		PLUG (DMA11W1S) (MTO 230523)				150, 153-157
	1		W9004	002	20		23-32-13	150, 153-157
	2		W9004	009	20		23-32-13	150, 153-157
	3		W9004	008	20		23-32-13	150, 153-157
	4		W9004	003	20		23-32-13	150, 153-157
	5		W9004	004	20		23-32-13	150, 153-157
	6		W9004	005	22		23-32-13	150, 153-157
	7		W9004	007	22		23-32-13	150, 153-157
	8		W9004	006	22		23-32-13	150, 153-157
	9	UNUSED						150, 153-157
	10	UNUSED						150, 153-157
	= A1		W9004	01CX			23-32-13	150, 153-157
	= C1		W9004	01CO			23-32-13	150, 153-157
D09010		458/295/R 69		PLUG-COAXIAL (MTO 230523)				150, 153-157
	= A1		W9004	02CX			23-32-13	150, 153-157
	= C1		W9004	02CO			23-32-13	150, 153-157
D09015		621/308/R 36		PLUG (MTO 230532)				162-199
	A	UNUSED						162-199
	B	UNUSED						162-199
	C	UNUSED						162-199
	D	UNUSED						162-199

HOOKUP LIST

D280T132

91-21-51

Section D09000

Page 11

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D09015		621/308/R 36		PLUG (MTO 230532) (continued)				162-199
	E		W9005	007	22		23-32-13	162-199
	F		W9005	006	22		23-32-13	162-199
	G		W9005	008	20		23-32-13	162-199
	H		W9005	005	22		23-32-13	162-199
	J		W9005	004	20		23-32-13	162-199
	K		W9005	002	20		23-32-13	162-199
	L		W9005	003	20		23-32-13	162-199
	M		W9005	009	20		23-32-13	162-199
D09016		621/308/R 36		PLUG-COAXIAL (MTO 230532)				162-199
	= A1		W9005	01CX			23-32-13	162-199
	= C1		W9005	01CO			23-32-13	162-199
D09017		535/280/R 36		PLUG (MTO 230532)				162-199
	1		W9005	002	20		23-32-13	162-199
	2		W9005	009	20		23-32-13	162-199
	3		W9005	008	20		23-32-13	162-199
	4		W9005	003	20		23-32-13	162-199
	5		W9005	004	20		23-32-13	162-199
	6		W9005	005	22		23-32-13	162-199
	7		W9005	007	22		23-32-13	162-199
	8		W9005	006	22		23-32-13	162-199
	9	UNUSED						162-199
	10	UNUSED						162-199
	11	UNUSED						162-199
	12	UNUSED						162-199
D09018		535/280/R 36		PLUG-COAXIAL (MTO 230532)				162-199
	= A1		W9005	01CX			23-32-13	162-199
	= C1		W9005	01CO			23-32-13	162-199
D09019J		850/280/0		RECP				050-099
	= A1		W1417	04CX			23-32-13	050-099
	= C1		W1417	04CO			23-32-13	050-099
D09019P		850/280/0		PLUG				050-099
	= A1		W1417	02CX			23-32-13	050-099
	= C1		W1417	02CO			23-32-13	050-099

HOOKUP LIST
D280T132

91-21-51
Section D09000
Page 12
Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D09020		800/295/R 69		PLUG-COAXIAL (MTO 230532)				162-199
	= A1		W9022	02CX			23-32-13	162-199
	= C1		W9022	02CO			23-32-13	162-199
D09024		820/308/R 36		PLUG (MTO 230532)				162-199
	A	UNUSED						162-199
	B	UNUSED						162-199
	C	UNUSED						162-199
	D	UNUSED						162-199
	E		W9022	007	22		23-32-13	162-199
	F		W9022	006	22		23-32-13	162-199
	G		W9022	008	20		23-32-13	162-199
	H		W9022	005	22		23-32-13	162-199
	J		W9022	004	20		23-32-13	162-199
	K		W9022	002	20		23-32-13	162-199
	L		W9022	003	20		23-32-13	162-199
	M		W9022	009	20		23-32-13	162-199
D09026		820/308/R 36		PLUG-COAXIAL (MTO 230532)				162-199
	= A1		W9022	01CX			23-32-13	162-199
	= C1		W9022	01CO			23-32-13	162-199
D09027		800/295/L 69		PLUG (DMA11W1S) (MTO 230532)				162-199
	1		W9022	022	20		23-32-13	162-199
	2		W9022	029	20		23-32-13	162-199
	3		W9022	028	20		23-32-13	162-199
	4		W9022	023	20		23-32-13	162-199
	5		W9022	024	20		23-32-13	162-199
	6		W9022	025	22		23-32-13	162-199
	7		W9022	027	22		23-32-13	162-199
	8		W9022	026	22		23-32-13	162-199
	9	UNUSED						162-199
	10	UNUSED						162-199
	= A1		W9022	02CX			23-32-13	162-199
	= C1		W9022	02CO			23-32-13	162-199
D09028		800/295/R 69		PLUG (DMA11W1S) (MTO 230532)				162-199
	1		W9022	012	20		23-32-13	162-199
	2		W9022	019	20		23-32-13	162-199
	3		W9022	018	20		23-32-13	162-199

HOOKUP LIST

D280T132

91-21-51

Section D09000

Page 13

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D09028		800/295/R 69		PLUG (DMA11W1S) (MTO 230532) (continued)				162-199
	4		W9022	013	20		23-32-13	162-199
	5		W9022	014	20		23-32-13	162-199
	6		W9022	015	22		23-32-13	162-199
	7		W9022	017	22		23-32-13	162-199
	8		W9022	016	22		23-32-13	162-199
	9	UNUSED						162-199
	10	UNUSED						162-199
	=A1		W9022	01CX			23-32-13	162-199
	=C1		W9022	01CO			23-32-13	162-199
D09047J		356/282/80		RECEPT				150, 153-199
	1		W9009	014	16		25-25-24	150, 153-199
	2		W9009	013	16		25-25-23	150, 153-199
	3	UNUSED						150, 153-199
	4	UNUSED						150, 153-199
	5	UNUSED						150, 153-199
	6	UNUSED						150, 153-199
	7	UNUSED						150, 153-199
	8	UNUSED						150, 153-199
	9	UNUSED						150, 153-199
	10	UNUSED						150, 153-199
	11	UNUSED						150, 153-199
	12	UNUSED						150, 153-199
	13	UNUSED						150, 153-199
	14	UNUSED						150, 153-199
	15	UNUSED						150, 153-199
	16	UNUSED						150, 153-199
	17	UNUSED						150, 153-199
	18	UNUSED						150, 153-199
	19	UNUSED						150, 153-199
	20	UNUSED						150, 153-199
	21	UNUSED						150, 153-199
	22	UNUSED						150, 153-199
	23	UNUSED						150, 153-199
	24	UNUSED						150, 153-199
	25	UNUSED						150, 153-199
	26	UNUSED						150, 153-199
	27	UNUSED						150, 153-199
	28	UNUSED						150, 153-199
	29	UNUSED						150, 153-199

HOOKUP LIST

D280T132

91-21-51

Section D09000

Page 14

Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D09047J		356/282/80		RECEPT (continued)				150, 153-199
	30	UNUSED						150, 153-199
	31	UNUSED						150, 153-199
	32	UNUSED						150, 153-199
	33	UNUSED						150, 153-199
	34	UNUSED						150, 153-199
	35	UNUSED						150, 153-199
	36	UNUSED						150, 153-199
	37	UNUSED						150, 153-199
	38	UNUSED						150, 153-199
	39	UNUSED						150, 153-199
	40	UNUSED						150, 153-199
	41	UNUSED						150, 153-199
	42	UNUSED						150, 153-199
	43	UNUSED						150, 153-199
	44	UNUSED						150, 153-199
	45	UNUSED						150, 153-199
	46	UNUSED						150, 153-199
	47	UNUSED						150, 153-199
	48	UNUSED						150, 153-199
	49	UNUSED						150, 153-199
	50	UNUSED						150, 153-199
	51	UNUSED						150, 153-199
	52	UNUSED						150, 153-199
	53	UNUSED						150, 153-199
	54	UNUSED						150, 153-199
	= C27	UNUSED						150, 153-199
D09048		E002-06/ /		PLUG				150, 153-199
	= A1	UNUSED						150, 153-199
	= C1	UNUSED						150, 153-199
	A		W9007	001	16		25-25-23	150, 153-199
	B		W9007	002	16		25-25-23	150, 153-199
	C		W9007	003	16		25-25-23	150, 153-199
	D		W9007	004	16		25-25-23	150, 153-199
	E	UNUSED						150, 153-199
	F	UNUSED						150, 153-199
	G	UNUSED						150, 153-199
	H	UNUSED						150, 153-199
	I	UNUSED						150, 153-199
	J	UNUSED						150, 153-199

HOOKUP LIST

D280T132

91-21-51

Section D09000

Page 15

Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D09048		E002-06/ /		PLUG (continued)				150, 153-199
	K	UNUSED						150, 153-199
	L	UNUSED						150, 153-199
	M	UNUSED						150, 153-199
	N	UNUSED						150, 153-199
	O	UNUSED						150, 153-199
	P	UNUSED						150, 153-199
	Q	UNUSED						150, 153-199
	R	UNUSED						150, 153-199
	S	UNUSED						150, 153-199
	T	UNUSED						150, 153-199
	U	UNUSED						150, 153-199
	V	UNUSED						150, 153-199
	W	UNUSED						150, 153-199
	X	UNUSED						150, 153-199
	Y	UNUSED						150, 153-199
	Z	UNUSED						150, 153-199
	A-	UNUSED						150, 153-199
	B-	UNUSED						150, 153-199
	C-	UNUSED						150, 153-199
	D-	UNUSED						150, 153-199
	E-	UNUSED						150, 153-199
	F-	UNUSED						150, 153-199
	G-	UNUSED						150, 153-199
	H-	UNUSED						150, 153-199
	I-	UNUSED						150, 153-199
	J-	UNUSED						150, 153-199
	K-	UNUSED						150, 153-199
	L-	UNUSED						150, 153-199
	M-	UNUSED						150, 153-199
	N-	UNUSED						150, 153-199
	O-	UNUSED						150, 153-199
	P-	UNUSED						150, 153-199
	Q-	UNUSED						150, 153-199
	R-	UNUSED						150, 153-199
	S-	UNUSED						150, 153-199
	T-	UNUSED						150, 153-199
	U-	UNUSED						150, 153-199
	V-	UNUSED						150, 153-199
	W-	UNUSED						150, 153-199
	X-	UNUSED						150, 153-199

HOOKUP LIST

D280T132

91-21-51

Section D09000

Page 16

Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D09048		E002-06/ /		PLUG (continued)				150, 153-199
	Y-	UNUSED						150, 153-199
	Z-	UNUSED						150, 153-199
D09049J		467/ /		RECEPT				150, 153-199
	1		W9009	002	16		25-25-23	150, 153-199
	2		W9009	001	16		25-25-23	150, 153-199
	3	UNUSED						150, 153-199
	4	UNUSED						150, 153-199
	5	UNUSED						150, 153-199
	6	UNUSED						150, 153-199
	7	UNUSED						150, 153-199
	8	UNUSED						150, 153-199
	9	UNUSED						150, 153-199
	10	UNUSED						150, 153-199
	11	UNUSED						150, 153-199
	12	UNUSED						150, 153-199
	13	UNUSED						150, 153-199
	14	UNUSED						150, 153-199
	15	UNUSED						150, 153-199
	16	UNUSED						150, 153-199
	17	UNUSED						150, 153-199
	18	UNUSED						150, 153-199
	19	UNUSED						150, 153-199
	20	UNUSED						150, 153-199
	21	UNUSED						150, 153-199
	22	UNUSED						150, 153-199
	23	UNUSED						150, 153-199
	24	UNUSED						150, 153-199
	25	UNUSED						150, 153-199
	26	UNUSED						150, 153-199
	27	UNUSED						150, 153-199
	28	UNUSED						150, 153-199
	29	UNUSED						150, 153-199
	30	UNUSED						150, 153-199
	31	UNUSED						150, 153-199
	32	UNUSED						150, 153-199
	33	UNUSED						150, 153-199
	34	UNUSED						150, 153-199
	35	UNUSED						150, 153-199
	36	UNUSED						150, 153-199

HOOKUP LIST

D280T132

91-21-51

Section D09000

Page 17

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D09049J		467/ /		RECEPT (continued)				150, 153-199
	37	UNUSED						150, 153-199
	38	UNUSED						150, 153-199
	39	UNUSED						150, 153-199
	40	UNUSED						150, 153-199
	41	UNUSED						150, 153-199
	42	UNUSED						150, 153-199
	43	UNUSED						150, 153-199
	44	UNUSED						150, 153-199
	45	UNUSED						150, 153-199
	46	UNUSED						150, 153-199
	47	UNUSED						150, 153-199
	48	UNUSED						150, 153-199
	49	UNUSED						150, 153-199
	50	UNUSED						150, 153-199
	51	UNUSED						150, 153-199
	52	UNUSED						150, 153-199
	53	UNUSED						150, 153-199
	54	UNUSED						150, 153-199
	= C27	UNUSED						150, 153-199
D09050J		654+29/ /		RECEPT				150, 153-199
	1		W9009	004	16		25-25-23	150, 153-199
	2		W9009	003	16		25-25-23	150, 153-199
	3	UNUSED						150, 153-199
	4	UNUSED						150, 153-199
	5	UNUSED						150, 153-199
	6	UNUSED						150, 153-199
	7	UNUSED						150, 153-199
	8	UNUSED						150, 153-199
	9	UNUSED						150, 153-199
	10	UNUSED						150, 153-199
	11	UNUSED						150, 153-199
	12	UNUSED						150, 153-199
	13	UNUSED						150, 153-199
	14	UNUSED						150, 153-199
	15	UNUSED						150, 153-199
	16	UNUSED						150, 153-199
	17	UNUSED						150, 153-199
	18	UNUSED						150, 153-199
	19	UNUSED						150, 153-199

HOOKUP LIST

D280T132

91-21-51

Section D09000

Page 18

Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D09050J		654+29/ /		RECEPT (continued)				150, 153-199
	20	UNUSED						150, 153-199
	21	UNUSED						150, 153-199
	22	UNUSED						150, 153-199
	23	UNUSED						150, 153-199
	24	UNUSED						150, 153-199
	25	UNUSED						150, 153-199
	26	UNUSED						150, 153-199
	27	UNUSED						150, 153-199
	28	UNUSED						150, 153-199
	29	UNUSED						150, 153-199
	30	UNUSED						150, 153-199
	31	UNUSED						150, 153-199
	32	UNUSED						150, 153-199
	33	UNUSED						150, 153-199
	34	UNUSED						150, 153-199
	35	UNUSED						150, 153-199
	36	UNUSED						150, 153-199
	37	UNUSED						150, 153-199
	38	UNUSED						150, 153-199
	39	UNUSED						150, 153-199
	40	UNUSED						150, 153-199
	41	UNUSED						150, 153-199
	42	UNUSED						150, 153-199
	43	UNUSED						150, 153-199
	44	UNUSED						150, 153-199
	45	UNUSED						150, 153-199
	46	UNUSED						150, 153-199
	47	UNUSED						150, 153-199
	48	UNUSED						150, 153-199
	49	UNUSED						150, 153-199
	50	UNUSED						150, 153-199
	51	UNUSED						150, 153-199
	52	UNUSED						150, 153-199
	53	UNUSED						150, 153-199
	54	UNUSED						150, 153-199
	= C27	UNUSED						150, 153-199
D09051J		467/ /		RECEPT				150, 153-199
	1		W9009	006			25-25-23	150, 153-199
	2		W9009	005			25-25-23	150, 153-199

HOOKUP LIST
D280T132

91-21-51
Section D09000
Page 19
Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D09051J		467/ I		RECEPT (continued)				150, 153-199
	3	UNUSED						150, 153-199
	4	UNUSED						150, 153-199
	5	UNUSED						150, 153-199
	6	UNUSED						150, 153-199
	7	UNUSED						150, 153-199
	8	UNUSED						150, 153-199
	9	UNUSED						150, 153-199
	10	UNUSED						150, 153-199
	11	UNUSED						150, 153-199
	12	UNUSED						150, 153-199
	13	UNUSED						150, 153-199
	14	UNUSED						150, 153-199
	15	UNUSED						150, 153-199
	16	UNUSED						150, 153-199
	17	UNUSED						150, 153-199
	18	UNUSED						150, 153-199
	19	UNUSED						150, 153-199
	20	UNUSED						150, 153-199
	21	UNUSED						150, 153-199
	22	UNUSED						150, 153-199
	23	UNUSED						150, 153-199
	24	UNUSED						150, 153-199
	25	UNUSED						150, 153-199
	26	UNUSED						150, 153-199
	27	UNUSED						150, 153-199
	28	UNUSED						150, 153-199
	29	UNUSED						150, 153-199
	30	UNUSED						150, 153-199
	31	UNUSED						150, 153-199
	32	UNUSED						150, 153-199
	33	UNUSED						150, 153-199
	34	UNUSED						150, 153-199
	35	UNUSED						150, 153-199
	36	UNUSED						150, 153-199
	37	UNUSED						150, 153-199
	38	UNUSED						150, 153-199
	39	UNUSED						150, 153-199
	40	UNUSED						150, 153-199
	41	UNUSED						150, 153-199
	42	UNUSED						150, 153-199

HOOKUP LIST

D280T132

91-21-51

Section D09000

Page 20

Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D09051J		467/ /		RECEPT (continued)				150, 153-199
	43	UNUSED						150, 153-199
	44	UNUSED						150, 153-199
	45	UNUSED						150, 153-199
	46	UNUSED						150, 153-199
	47	UNUSED						150, 153-199
	48	UNUSED						150, 153-199
	49	UNUSED						150, 153-199
	50	UNUSED						150, 153-199
	51	UNUSED						150, 153-199
	52	UNUSED						150, 153-199
	53	UNUSED						150, 153-199
	54	UNUSED						150, 153-199
	=C27	UNUSED						150, 153-199
D09052J		709/ /		RECEPT				150, 153-199
	1		W9009	008	16		25-25-24	150, 153-199
	2		W9009	007	16		25-25-24	150, 153-199
	3	UNUSED						150, 153-199
	4	UNUSED						150, 153-199
	5	UNUSED						150, 153-199
	6	UNUSED						150, 153-199
	7	UNUSED						150, 153-199
	8	UNUSED						150, 153-199
	9	UNUSED						150, 153-199
	10	UNUSED						150, 153-199
	11	UNUSED						150, 153-199
	12	UNUSED						150, 153-199
	13	UNUSED						150, 153-199
	14	UNUSED						150, 153-199
	15	UNUSED						150, 153-199
	16	UNUSED						150, 153-199
	17	UNUSED						150, 153-199
	18	UNUSED						150, 153-199
	19	UNUSED						150, 153-199
	20	UNUSED						150, 153-199
	21	UNUSED						150, 153-199
	22	UNUSED						150, 153-199
	23	UNUSED						150, 153-199
	24	UNUSED						150, 153-199
	25	UNUSED						150, 153-199

HOOKUP LIST

D280T132

91-21-51

Section D09000

Page 21

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D09052J		709/ /		RECEPT (continued)				150, 153-199
	26	UNUSED						150, 153-199
	27	UNUSED						150, 153-199
	28	UNUSED						150, 153-199
	29	UNUSED						150, 153-199
	30	UNUSED						150, 153-199
	31	UNUSED						150, 153-199
	32	UNUSED						150, 153-199
	33	UNUSED						150, 153-199
	34	UNUSED						150, 153-199
	35	UNUSED						150, 153-199
	36	UNUSED						150, 153-199
	37	UNUSED						150, 153-199
	38	UNUSED						150, 153-199
	39	UNUSED						150, 153-199
	40	UNUSED						150, 153-199
	41	UNUSED						150, 153-199
	42	UNUSED						150, 153-199
	43	UNUSED						150, 153-199
	44	UNUSED						150, 153-199
	45	UNUSED						150, 153-199
	46	UNUSED						150, 153-199
	47	UNUSED						150, 153-199
	48	UNUSED						150, 153-199
	49	UNUSED						150, 153-199
	50	UNUSED						150, 153-199
	51	UNUSED						150, 153-199
	52	UNUSED						150, 153-199
	53	UNUSED						150, 153-199
	54	UNUSED						150, 153-199
	=C27	UNUSED						150, 153-199
D09053J		705/ /		RECEPT				150, 153-199
	1		W9009	010	16		25-25-24	150, 153-199
	2		W9009	009	16		25-25-24	150, 153-199
	3	UNUSED						150, 153-199
	4	UNUSED						150, 153-199
	5	UNUSED						150, 153-199
	6	UNUSED						150, 153-199
	7	UNUSED						150, 153-199
	8	UNUSED						150, 153-199

HOOKUP LIST
D280T132

91-21-51
Section D09000
Page 22
Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D09053J		705/ /		RECEPT (continued)				150, 153-199
	9	UNUSED						150, 153-199
	10	UNUSED						150, 153-199
	11	UNUSED						150, 153-199
	12	UNUSED						150, 153-199
	13	UNUSED						150, 153-199
	14	UNUSED						150, 153-199
	15	UNUSED						150, 153-199
	16	UNUSED						150, 153-199
	17	UNUSED						150, 153-199
	18	UNUSED						150, 153-199
	19	UNUSED						150, 153-199
	20	UNUSED						150, 153-199
	21	UNUSED						150, 153-199
	22	UNUSED						150, 153-199
	23	UNUSED						150, 153-199
	24	UNUSED						150, 153-199
	25	UNUSED						150, 153-199
	26	UNUSED						150, 153-199
	27	UNUSED						150, 153-199
	28	UNUSED						150, 153-199
	29	UNUSED						150, 153-199
	30	UNUSED						150, 153-199
	31	UNUSED						150, 153-199
	32	UNUSED						150, 153-199
	33	UNUSED						150, 153-199
	34	UNUSED						150, 153-199
	35	UNUSED						150, 153-199
	36	UNUSED						150, 153-199
	37	UNUSED						150, 153-199
	38	UNUSED						150, 153-199
	39	UNUSED						150, 153-199
	40	UNUSED						150, 153-199
	41	UNUSED						150, 153-199
	42	UNUSED						150, 153-199
	43	UNUSED						150, 153-199
	44	UNUSED						150, 153-199
	45	UNUSED						150, 153-199
	46	UNUSED						150, 153-199
	47	UNUSED						150, 153-199
	48	UNUSED						150, 153-199

HOOKUP LIST

D280T132

91-21-51

Section D09000

Page 23

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D09053J		705/ /		RECEPT (continued)				150, 153-199
	49	UNUSED						150, 153-199
	50	UNUSED						150, 153-199
	51	UNUSED						150, 153-199
	52	UNUSED						150, 153-199
	53	UNUSED						150, 153-199
	54	UNUSED						150, 153-199
	= C27	UNUSED						150, 153-199
D09054J		709/ /		RECEPT				150, 153-199
	1		W9009	012	16		25-25-24	150, 153-199
	2		W9009	011	16		25-25-24	150, 153-199
	3	UNUSED						150, 153-199
	4	UNUSED						150, 153-199
	5	UNUSED						150, 153-199
	6	UNUSED						150, 153-199
	7	UNUSED						150, 153-199
	8	UNUSED						150, 153-199
	9	UNUSED						150, 153-199
	10	UNUSED						150, 153-199
	11	UNUSED						150, 153-199
	12	UNUSED						150, 153-199
	13	UNUSED						150, 153-199
	14	UNUSED						150, 153-199
	15	UNUSED						150, 153-199
	16	UNUSED						150, 153-199
	17	UNUSED						150, 153-199
	18	UNUSED						150, 153-199
	19	UNUSED						150, 153-199
	20	UNUSED						150, 153-199
	21	UNUSED						150, 153-199
	22	UNUSED						150, 153-199
	23	UNUSED						150, 153-199
	24	UNUSED						150, 153-199
	25	UNUSED						150, 153-199
	26	UNUSED						150, 153-199
	27	UNUSED						150, 153-199
	28	UNUSED						150, 153-199
	29	UNUSED						150, 153-199
	30	UNUSED						150, 153-199
	31	UNUSED						150, 153-199

HOOKUP LIST

D280T132

91-21-51

Section D09000

Page 24

Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D09054J		709/ /		RECEPT (continued)				150, 153-199
	32	UNUSED						150, 153-199
	33	UNUSED						150, 153-199
	34	UNUSED						150, 153-199
	35	UNUSED						150, 153-199
	36	UNUSED						150, 153-199
	37	UNUSED						150, 153-199
	38	UNUSED						150, 153-199
	39	UNUSED						150, 153-199
	40	UNUSED						150, 153-199
	41	UNUSED						150, 153-199
	42	UNUSED						150, 153-199
	43	UNUSED						150, 153-199
	44	UNUSED						150, 153-199
	45	UNUSED						150, 153-199
	46	UNUSED						150, 153-199
	47	UNUSED						150, 153-199
	48	UNUSED						150, 153-199
	49	UNUSED						150, 153-199
	50	UNUSED						150, 153-199
	51	UNUSED						150, 153-199
	52	UNUSED						150, 153-199
	53	UNUSED						150, 153-199
	54	UNUSED						150, 153-199
	= C27	UNUSED						150, 153-199
D09055J		AE0306/ /		RECEPT				150, 153-199
	1		W9009	001	16		25-25-23	150, 153-199
	2		W9009	002	16		25-25-23	150, 153-199
	3		W9009	003	16		25-25-23	150, 153-199
	4		W9009	004	16		25-25-23	150, 153-199
	5		W9009	005	16		25-25-23	150, 153-199
	6		W9009	006	16		25-25-23	150, 153-199
	7		W9009	007	16		25-25-24	150, 153-199
	8		W9009	008	16		25-25-24	150, 153-199
	9		W9009	009	16		25-25-24	150, 153-199
	10		W9009	010	16		25-25-24	150, 153-199
	11		W9009	011	16		25-25-24	150, 153-199
	12		W9009	012	16		25-25-24	150, 153-199
	13		W9009	013	16		25-25-23	150, 153-199
	14		W9009	014	16		25-25-24	150, 153-199

HOOKUP LIST

D280T132

91-21-51

Section D09000

Page 25

Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D09055J		AE0306/ /		RECEPT (continued)				150, 153-199
	15	UNUSED						150, 153-199
	16	UNUSED						150, 153-199
	17	UNUSED						150, 153-199
	18	UNUSED						150, 153-199
	19	UNUSED						150, 153-199
	20	UNUSED						150, 153-199
	21	UNUSED						150, 153-199
	22	UNUSED						150, 153-199
	23	UNUSED						150, 153-199
	24	UNUSED						150, 153-199
	25	UNUSED						150, 153-199
	26	UNUSED						150, 153-199
	27	UNUSED						150, 153-199
	28	UNUSED						150, 153-199
	29	UNUSED						150, 153-199
	30	UNUSED						150, 153-199
	31	UNUSED						150, 153-199
	32	UNUSED						150, 153-199
	33	UNUSED						150, 153-199
	34	UNUSED						150, 153-199
	35	UNUSED						150, 153-199
	36	UNUSED						150, 153-199
	37	UNUSED						150, 153-199
	38	UNUSED						150, 153-199
	39	UNUSED						150, 153-199
	40	UNUSED						150, 153-199
	41	UNUSED						150, 153-199
	42	UNUSED						150, 153-199
	43	UNUSED						150, 153-199
	44	UNUSED						150, 153-199
	45	UNUSED						150, 153-199
	46	UNUSED						150, 153-199
	47	UNUSED						150, 153-199
	48	UNUSED						150, 153-199
	49	UNUSED						150, 153-199
	50	UNUSED						150, 153-199
	51	UNUSED						150, 153-199
	52	UNUSED						150, 153-199
	53	UNUSED						150, 153-199
	54	UNUSED						150, 153-199

HOOKUP LIST

D280T132

91-21-51

Section D09000

Page 26

Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D09055J		AE0306/ /		RECEPT (continued)				150, 153-199
	= C27	UNUSED						150, 153-199
D09055P		AE0306/ /		PLUG				150, 153-199
	1		W9008	003	16		25-25-23	150, 153-199
	2		W9008	004	16		25-25-23	150, 153-199
	3		W9008	005	16		25-25-23	150, 153-199
	4		W9008	006	16		25-25-23	150, 153-199
	5		W9008	007	16		25-25-23	150, 153-199
	6		W9008	008	16		25-25-23	150, 153-199
	7		W9008	009	16		25-25-24	150, 153-199
	8		W9008	010	16		25-25-24	150, 153-199
	9		W9008	011	16		25-25-24	150, 153-199
	10		W9008	012	16		25-25-24	150, 153-199
	11		W9008	013	16		25-25-24	150, 153-199
	12		W9008	014	16		25-25-24	150, 153-199
	13		W9008	015	16		25-25-23	150, 153-199
	14		W9008	016	16		25-25-24	150, 153-199
	15	UNUSED						150, 153-199
	16	UNUSED						150, 153-199
	17	UNUSED						150, 153-199
	18	UNUSED						150, 153-199
	19	UNUSED						150, 153-199
	20	UNUSED						150, 153-199
	21	UNUSED						150, 153-199
	22	UNUSED						150, 153-199
	23	UNUSED						150, 153-199
	24	UNUSED						150, 153-199
	25	UNUSED						150, 153-199
	26	UNUSED						150, 153-199
	27	UNUSED						150, 153-199
	28	UNUSED						150, 153-199
	29	UNUSED						150, 153-199
	30	UNUSED						150, 153-199
	31	UNUSED						150, 153-199
	32	UNUSED						150, 153-199
	33	UNUSED						150, 153-199
	34	UNUSED						150, 153-199
	35	UNUSED						150, 153-199
	36	UNUSED						150, 153-199
	37	UNUSED						150, 153-199

HOOKUP LIST

D280T132

91-21-51

Section D09000

Page 27

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D09055P		AE0306/ /		PLUG (continued)				150, 153-199
	38	UNUSED						150, 153-199
	39	UNUSED						150, 153-199
	40	UNUSED						150, 153-199
	41	UNUSED						150, 153-199
	42	UNUSED						150, 153-199
	43	UNUSED						150, 153-199
	44	UNUSED						150, 153-199
	45	UNUSED						150, 153-199
	46	UNUSED						150, 153-199
	47	UNUSED						150, 153-199
	48	UNUSED						150, 153-199
	49	UNUSED						150, 153-199
	50	UNUSED						150, 153-199
	51	UNUSED						150, 153-199
	52	UNUSED						150, 153-199
	53	UNUSED						150, 153-199
	54	UNUSED						150, 153-199
	=C27	UNUSED						150, 153-199
D09060J		E090-90/ /		RECP				150, 152-199
	=A1	UNUSED						150, 152-199
	=C1	UNUSED						150, 152-199
	A		W9077	989O	16		23-19-11	150, 152-199
	B		W9077	989B	16		23-19-11	150, 152-199
	C		W9077	989G	16		23-19-11	150, 152-199
	D		W9077	989W	16		23-19-11	150, 152-199
	E		W9077	989Z			23-19-11	150, 152-199
	F		W9077	988O	16		23-19-11	150, 152-199
	G		W9077	988G	16		23-19-11	150, 152-199
	H		W9077	988B	16		23-19-11	150, 152-199
	I	UNUSED						150, 152-199
	J		W9077	988W	16		23-19-11	150, 152-199
	K		W9077	988Z			23-19-11	150, 152-199
	L		W9077	987O	16		23-19-11	150, 152-199
	M		W9077	987G	16		23-19-11	150, 152-199
	N		W9077	987B	16		23-19-11	150, 152-199
	O	UNUSED						150, 152-199
	P		W9077	987W	16		23-19-11	150, 152-199
	Q	UNUSED						150, 152-199
	R		W9077	987Z			23-19-11	150, 152-199

HOOKUP LIST

D280T132

91-21-51

Section D09000

Page 28

Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D09060J		E090-90/ /		RECP (continued)				150, 152-199
	S		W9077	986O	16		23-19-11	150, 152-199
	T		W9077	986G	16		23-19-11	150, 152-199
	U		W9077	986B	16		23-19-11	150, 152-199
	V		W9077	986W	16		23-19-11	150, 152-199
	W		W9077	986Z			23-19-11	150, 152-199
	X		W9077	985O	16		23-19-11	150, 152-199
	Y		W9077	985G	16		23-19-11	150, 152-199
	Z		W9077	985B	16		23-19-11	150, 152-199
	A-		W9077	985W	16		23-19-11	150, 152-199
	B-		W9077	985Z			23-19-11	150, 152-199
	C-		W9077	984	16		23-19-11	150, 152-199
	D-		W9077	982	16		23-19-11	150, 152-199
	E-	UNUSED						150, 152-199
	F-	UNUSED						150, 152-199
	G-	UNUSED						150, 152-199
	H-	UNUSED						150, 152-199
	I-	UNUSED						150, 152-199
	J-	UNUSED						150, 152-199
	K-	UNUSED						150, 152-199
	L-	UNUSED						150, 152-199
	M-	UNUSED						150, 152-199
	N-	UNUSED						150, 152-199
	O-	UNUSED						150, 152-199
	P-	UNUSED						150, 152-199
	Q-	UNUSED						150, 152-199
	R-	UNUSED						150, 152-199
	S-	UNUSED						150, 152-199
	T-	UNUSED						150, 152-199
	U-	UNUSED						150, 152-199
	V-	UNUSED						150, 152-199
	W-	UNUSED						150, 152-199
	X-	UNUSED						150, 152-199
	Y-	UNUSED						150, 152-199
	Z-	UNUSED						150, 152-199
D09060P		E090-90/ /		PLUG				150, 152-199
	=A1	UNUSED						150, 152-199
	=C1	UNUSED						150, 152-199
	A		W9040	909O	16		23-19-11	150, 152-199
	B		W9040	909B	16		23-19-11	150, 152-199

HOOKUP LIST

D280T132

91-21-51

Section D09000

Page 29

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D09060P		E090-90/ /		PLUG (continued)				150, 152-199
	C		W9040	909G	16		23-19-11	150, 152-199
	D		W9040	909W	16		23-19-11	150, 152-199
	E		W9040	909Z			23-19-11	150, 152-199
	F		W9040	908O	16		23-19-11	150, 152-199
	G		W9040	908G	16		23-19-11	150, 152-199
	H		W9040	908B	16		23-19-11	150, 152-199
	I	UNUSED						150, 152-199
	J		W9040	908W	16		23-19-11	150, 152-199
	K		W9040	908Z			23-19-11	150, 152-199
	L		W9040	907O	16		23-19-11	150, 152-199
	M		W9040	907G	16		23-19-11	150, 152-199
	N		W9040	907B	16		23-19-11	150, 152-199
	O	UNUSED						150, 152-199
	P		W9040	907W	16		23-19-11	150, 152-199
	Q	UNUSED						150, 152-199
	R		W9040	907Z			23-19-11	150, 152-199
	S		W9040	906O	16		23-19-11	150, 152-199
	T		W9040	906G	16		23-19-11	150, 152-199
	U		W9040	906B	16		23-19-11	150, 152-199
	V		W9040	906W	16		23-19-11	150, 152-199
	W		W9040	906Z			23-19-11	150, 152-199
	X		W9040	905O	16		23-19-11	150, 152-199
	Y		W9040	905G	16		23-19-11	150, 152-199
	Z		W9040	905B	16		23-19-11	150, 152-199
	A-		W9040	905W	16		23-19-11	150, 152-199
	B-		W9040	905Z			23-19-11	150, 152-199
	C-		W9040	904	16		23-19-11	150, 152-199
	D-		W9040	902	16		23-19-11	150, 152-199
	E-	UNUSED						150, 152-199
	F-	UNUSED						150, 152-199
	G-	UNUSED						150, 152-199
	H-	UNUSED						150, 152-199
	I-	UNUSED						150, 152-199
	J-	UNUSED						150, 152-199
	K-	UNUSED						150, 152-199
	L-	UNUSED						150, 152-199
	M-	UNUSED						150, 152-199
	N-	UNUSED						150, 152-199
	O-	UNUSED						150, 152-199
	P-	UNUSED						150, 152-199

HOOKUP LIST

D280T132

91-21-51

Section D09000

Page 30

Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D09060P		E090-90/ /		PLUG (continued)				150, 152-199
	Q-	UNUSED						150, 152-199
	R-	UNUSED						150, 152-199
	S-	UNUSED						150, 152-199
	T-	UNUSED						150, 152-199
	U-	UNUSED						150, 152-199
	V-	UNUSED						150, 152-199
	W-	UNUSED						150, 152-199
	X-	UNUSED						150, 152-199
	Y-	UNUSED						150, 152-199
	Z-	UNUSED						150, 152-199
D09061J		E090-90/ /		RECP				150, 152-199
	1		W9040	903	20		23-19-11	150, 152-199
	2		W9040	901	20		23-19-11	150, 152-199
	3	UNUSED						150, 152-199
	4	UNUSED						150, 152-199
	5	UNUSED						150, 152-199
	6	UNUSED						150, 152-199
	7	UNUSED						150, 152-199
	8	UNUSED						150, 152-199
	9	UNUSED						150, 152-199
	10	UNUSED						150, 152-199
	11	UNUSED						150, 152-199
	12	UNUSED						150, 152-199
	13	UNUSED						150, 152-199
	14	UNUSED						150, 152-199
	15	UNUSED						150, 152-199
	16	UNUSED						150, 152-199
	17	UNUSED						150, 152-199
	18	UNUSED						150, 152-199
	19	UNUSED						150, 152-199
	20	UNUSED						150, 152-199
	21	UNUSED						150, 152-199
	22	UNUSED						150, 152-199
	23	UNUSED						150, 152-199
	24	UNUSED						150, 152-199
	25	UNUSED						150, 152-199
	26	UNUSED						150, 152-199
	27	UNUSED						150, 152-199
	28	UNUSED						150, 152-199

HOOKUP LIST

D280T132

91-21-51

Section D09000

Page 31

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D09061J		E090-90/ /		RECP (continued)				150, 152-199
	29	UNUSED						150, 152-199
	30	UNUSED						150, 152-199
	31	UNUSED						150, 152-199
	32	UNUSED						150, 152-199
	33	UNUSED						150, 152-199
	34	UNUSED						150, 152-199
	35	UNUSED						150, 152-199
	36	UNUSED						150, 152-199
	37	UNUSED						150, 152-199
	38	UNUSED						150, 152-199
	39	UNUSED						150, 152-199
	40	UNUSED						150, 152-199
	41	UNUSED						150, 152-199
	42	UNUSED						150, 152-199
	43	UNUSED						150, 152-199
	44	UNUSED						150, 152-199
	45	UNUSED						150, 152-199
	46	UNUSED						150, 152-199
	47	UNUSED						150, 152-199
	48	UNUSED						150, 152-199
	49	UNUSED						150, 152-199
	50	UNUSED						150, 152-199
	51	UNUSED						150, 152-199
	52	UNUSED						150, 152-199
	53	UNUSED						150, 152-199
	54	UNUSED						150, 152-199
	=C27	UNUSED						150, 152-199
D09061P		E090-90/ /		PLUG				150, 152-199
	1		W9077	983	20		23-19-11	150, 152-199
	2		W9077	981	20		23-19-11	150, 152-199
	=A1	UNUSED						150, 152-199
	=C1	UNUSED						150, 152-199
	A	UNUSED						150, 152-199
	B	UNUSED						150, 152-199
	C	UNUSED						150, 152-199
	D	UNUSED						150, 152-199
	E	UNUSED						150, 152-199
	F	UNUSED						150, 152-199
	G	UNUSED						150, 152-199

HOOKUP LIST

D280T132

91-21-51

Section D09000

Page 32

Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D09061P		E090-90/ /		PLUG (continued)				150, 152-199
	H	UNUSED						150, 152-199
	I	UNUSED						150, 152-199
	J	UNUSED						150, 152-199
	K	UNUSED						150, 152-199
	L	UNUSED						150, 152-199
	M	UNUSED						150, 152-199
	N	UNUSED						150, 152-199
	O	UNUSED						150, 152-199
	P	UNUSED						150, 152-199
	Q	UNUSED						150, 152-199
	R	UNUSED						150, 152-199
	S	UNUSED						150, 152-199
	T	UNUSED						150, 152-199
	U	UNUSED						150, 152-199
	V	UNUSED						150, 152-199
	W	UNUSED						150, 152-199
	X	UNUSED						150, 152-199
	Y	UNUSED						150, 152-199
	Z	UNUSED						150, 152-199
	A-	UNUSED						150, 152-199
	B-	UNUSED						150, 152-199
	C-	UNUSED						150, 152-199
	D-	UNUSED						150, 152-199
	E-	UNUSED						150, 152-199
	F-	UNUSED						150, 152-199
	G-	UNUSED						150, 152-199
	H-	UNUSED						150, 152-199
	I-	UNUSED						150, 152-199
	J-	UNUSED						150, 152-199
	K-	UNUSED						150, 152-199
	L-	UNUSED						150, 152-199
	M-	UNUSED						150, 152-199
	N-	UNUSED						150, 152-199
	O-	UNUSED						150, 152-199
	P-	UNUSED						150, 152-199
	Q-	UNUSED						150, 152-199
	R-	UNUSED						150, 152-199
	S-	UNUSED						150, 152-199
	T-	UNUSED						150, 152-199
	U-	UNUSED						150, 152-199

HOOKUP LIST

D280T132

91-21-51

Section D09000

Page 33

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D09061P		E090-90/ /		PLUG (continued)				150, 152-199
	V-	UNUSED						150, 152-199
	W-	UNUSED						150, 152-199
	X-	UNUSED						150, 152-199
	Y-	UNUSED						150, 152-199
	Z-	UNUSED						150, 152-199
D09062A		0420/170/R074		PLUG				150, 152-199
	6		W9040	903	20		23-19-11	150, 152-199
	6		W9040	904	16		23-19-11	150, 152-199
	7		W9040	901	20		23-19-11	150, 152-199
	7		W9040	902	16		23-19-11	150, 152-199
	9		W9040	905W	16		23-19-11	150, 152-199
	10		W9040	905B	16		23-19-11	150, 152-199
	11		W9040	905G	16		23-19-11	150, 152-199
	12		W9040	905O	16		23-19-11	150, 152-199
	13		W9040	905Z			23-19-11	150, 152-199
	17		W9040	906W	16		23-19-11	150, 152-199
	18		W9040	906B	16		23-19-11	150, 152-199
	19		W9040	906G	16		23-19-11	150, 152-199
	20		W9040	906O	16		23-19-11	150, 152-199
	21		W9040	906Z			23-19-11	150, 152-199
D09062B		0420/170/R074		PLUG				150, 152-199
	1		W9040	907W	16		23-19-11	150, 152-199
	2		W9040	907G	16		23-19-11	150, 152-199
	3		W9040	907B	16		23-19-11	150, 152-199
	4		W9040	907O	16		23-19-11	150, 152-199
	5		W9040	907Z			23-19-11	150, 152-199
	9		W9040	908W	16		23-19-11	150, 152-199
	10		W9040	908B	16		23-19-11	150, 152-199
	11		W9040	908G	16		23-19-11	150, 152-199
	12		W9040	908O	16		23-19-11	150, 152-199
	13		W9040	908Z			23-19-11	150, 152-199
	17		W9040	909W	16		23-19-11	150, 152-199
	18		W9040	909B	16		23-19-11	150, 152-199
	19		W9040	909G	16		23-19-11	150, 152-199
	20		W9040	909O	16		23-19-11	150, 152-199
	21		W9040	909Z			23-19-11	150, 152-199

HOOKUP LIST

D280T132

91-21-51

Section D09000

Page 34

Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D09062C		0420/170/R064		PLUG				150, 152-199
	3		W9044	902W	10		23-19-11	150, 152-199
	4		W9044	902B	10		23-19-11	150, 152-199
	5		W9044	902O	10		23-19-11	150, 152-199
	6		W9044	901	10		23-19-11	150, 152-199
D09063J		E090-90/ /		RECEPT				150, 152-199
	= A1	UNUSED						150, 152-199
	= C1	UNUSED						150, 152-199
	A		W9077	932W	24		23-19-11	150, 152-199
	B		W9077	932B	24		23-19-11	150, 152-199
	C		W9077	FRL			23-19-11	150, 152-199
	D		W9077	933W	24		23-19-11	150, 152-199
	E		W9077	933B	24		23-19-11	150, 152-199
	F		W9077	934	24		23-19-11	150, 152-199
	G		W9077	935	24		23-19-11	150, 152-199
	H		W9077	940	24		23-19-11	150, 152-199
	I	UNUSED						150, 152-199
	J		W9077	941	24		23-19-11	150, 152-199
	K		W9077	944	24		23-19-11	150, 152-199
	L		W9077	945	24		23-19-11	150, 152-199
	M		W9077	946W	24		23-19-11	150, 152-199
	N		W9077	946B	24		23-19-11	150, 152-199
	O	UNUSED						150, 152-199
	P		W9077	946Z			23-19-11	150, 152-199
	Q	UNUSED						150, 152-199
	R		W9077	947	24		23-19-11	150, 152-199
	S		W9077	948	24		23-19-11	150, 152-199
	T		W9077	949	24		23-19-11	150, 152-199
	U		W9077	950	24		23-19-11	150, 152-199
	V		W9077	951	24		23-19-11	150, 152-199
	W		W9077	952	24		23-19-11	150, 152-199
	X		W9077	953	24		23-19-11	150, 152-199
	Y		W9077	954	24		23-19-11	150, 152-199
	Z		W9077	936W	24		23-19-11	150, 152-199
			W9077	932Z			23-19-11	150, 152-199
			W9077	933Z			23-19-11	150, 152-199
			W9077	936Z			23-19-11	150, 152-199
			W9077	937Z			23-19-11	150, 152-199
			W9077	FRL			23-19-11	150, 152-199
			W9077	FRN			23-19-11	150, 152-199

HOOKUP LIST

D280T132

91-21-51

Section D09000

Page 35

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D09063J		E090-90/ /		RECEPT (continued)				150, 152-199
	A-		W9077	936B	24		23-19-11	150, 152-199
	B-		W9077	FRN			23-19-11	150, 152-199
	C-		W9077	937W	24		23-19-11	150, 152-199
	D-		W9077	937B	24		23-19-11	150, 152-199
	E-		W9077	938W	24		23-19-11	150, 152-199
	F-		W9077	938B	24		23-19-11	150, 152-199
	G-		W9077	938Z			23-19-11	150, 152-199
	H-		W9077	939	24		23-19-11	150, 152-199
	I-		W9077	943	24		23-19-11	150, 152-199
	J-		W9077	942	24		23-19-11	150, 152-199
	K-		W9077	959	24		23-19-11	150, 152-199
	L-	UNUSED						150, 152-199
	M-		W9077	960	24		23-19-11	150, 152-199
	N-		W9077	955	24		23-19-11	150, 152-199
	O-	UNUSED						150, 152-199
	P-		W9077	956	24		23-19-11	150, 152-199
	Q-		W9077	957	24		23-19-11	150, 152-199
	R-		W9077	958	24		23-19-11	150, 152-199
	S-	UNUSED						150, 152-199
	T-	UNUSED						150, 152-199
	U-	UNUSED						150, 152-199
	V-	UNUSED						150, 152-199
	W-	UNUSED						150, 152-199
	X-	UNUSED						150, 152-199
	Y-	UNUSED						150, 152-199
	Z-	UNUSED						150, 152-199
D09063P		E090-90/ /		PLUG				150, 152-199
	=A1	UNUSED						150, 152-199
	=C1	UNUSED						150, 152-199
	A	UNUSED						150, 152-199
	B	UNUSED						150, 152-199
	C	UNUSED						150, 152-199
	D	UNUSED						150, 152-199
	E	UNUSED						150, 152-199
	F	UNUSED						150, 152-199
	G	UNUSED						150, 152-199
	H		W9047	900	24		23-19-11	150, 152-199
	I	UNUSED						150, 152-199
	J		W9047	901	24		23-19-11	150, 152-199

HOOKUP LIST
D280T132

91-21-51
Section D09000
Page 36
Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D09063P		E090-90/ /		PLUG (continued)				150, 152-199
	K	UNUSED						150, 152-199
	L	UNUSED						150, 152-199
	M	UNUSED						150, 152-199
	N	UNUSED						150, 152-199
	O	UNUSED						150, 152-199
	P	UNUSED						150, 152-199
	Q	UNUSED						150, 152-199
	R	UNUSED						150, 152-199
	S	UNUSED						150, 152-199
	T	UNUSED						150, 152-199
	U	UNUSED						150, 152-199
	V	UNUSED						150, 152-199
	W	UNUSED						150, 152-199
	X	UNUSED						150, 152-199
	Y	UNUSED						150, 152-199
	Z	UNUSED						150, 152-199
	=CC	D	W9047	906O	24		23-19-11	150, 152-199
	=CC	D	W9047	906Z			23-19-11	150, 152-199
	CAP	Y	W9047	904B	24		23-19-11	150, 152-199
	CAP	Y	W9047	904O	24		23-19-11	150, 152-199
	CAP	Y	W9047	904W	24		23-19-11	150, 152-199
	CAP	Y	W9047	905B	24		23-19-11	150, 152-199
	CAP	Y	W9047	905O	24		23-19-11	150, 152-199
	CAP	Y	W9047	905W	24		23-19-11	150, 152-199
	REF	%A	W9047	904Z			23-19-11	150, 152-199
	REF	%A	W9047	905Z			23-19-11	150, 152-199
	A-	UNUSED						150, 152-199
	B-	UNUSED						150, 152-199
	C-	UNUSED						150, 152-199
	D-	UNUSED						150, 152-199
	E-	UNUSED						150, 152-199
	F-	UNUSED						150, 152-199
	G-	UNUSED						150, 152-199
	H-	UNUSED						150, 152-199
	I-		W9047	903	24		23-19-11	150, 152-199
	J-		W9047	902	24		23-19-11	150, 152-199
	K-		W9047	906W	24		23-19-11	150, 152-199
	L-	UNUSED						150, 152-199
	M-		W9047	906B	24		23-19-11	150, 152-199
	N-		W9047	907	24		23-19-11	150, 152-199

HOOKUP LIST

D280T132

91-21-51

Section D09000

Page 37

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D09063P		E090-90/ /		PLUG (continued)				150, 152-199
	O-	UNUSED						150, 152-199
	P-		W9047	907Z			23-19-11	150, 152-199
	Q-	UNUSED						150, 152-199
	R-	UNUSED						150, 152-199
	S-	UNUSED						150, 152-199
	T-	UNUSED						150, 152-199
	U-	UNUSED						150, 152-199
	V-	UNUSED						150, 152-199
	W-	UNUSED						150, 152-199
	X-	UNUSED						150, 152-199
	Y-	UNUSED						150, 152-199
	Z-	UNUSED						150, 152-199
D09064J		654+57R/ /		RECEPT				150, 152-199
	1		W9047	907	24		23-19-11	150, 152-199
	2		W9047	905W	24		23-19-11	150, 152-199
	3		W9047	905B	24		23-19-11	150, 152-199
	4		W9047	906W	24		23-19-11	150, 152-199
	5		W9047	905O	24		23-19-11	150, 152-199
	6		W9047	906O	24		23-19-11	150, 152-199
	7		W9047	906B	24		23-19-11	150, 152-199
	8		W9047	904W	24		23-19-11	150, 152-199
	9		W9047	904B	24		23-19-11	150, 152-199
	10		W9047	904O	24		23-19-11	150, 152-199
	11	UNUSED						150, 152-199
	12	UNUSED						150, 152-199
	13	UNUSED						150, 152-199
	14	UNUSED						150, 152-199
	15		W9047	907Z			23-19-11	150, 152-199
	16	UNUSED						150, 152-199
	17	UNUSED						150, 152-199
	18	UNUSED						150, 152-199
	19	UNUSED						150, 152-199
	20	UNUSED						150, 152-199
	21	UNUSED						150, 152-199
	22	UNUSED						150, 152-199
	23	UNUSED						150, 152-199
	24	UNUSED						150, 152-199
	25	UNUSED						150, 152-199
	26	UNUSED						150, 152-199

HOOKUP LIST

D280T132

91-21-51

Section D09000

Page 38

Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D09064J		654+57R/ /		RECEPT (continued)				150, 152-199
	27	UNUSED						150, 152-199
	28	UNUSED						150, 152-199
	29	UNUSED						150, 152-199
	30	UNUSED						150, 152-199
	31	UNUSED						150, 152-199
	32	UNUSED						150, 152-199
	33	UNUSED						150, 152-199
	34	UNUSED						150, 152-199
	35	UNUSED						150, 152-199
	36	UNUSED						150, 152-199
	37	UNUSED						150, 152-199
	38	UNUSED						150, 152-199
	39	UNUSED						150, 152-199
	40	UNUSED						150, 152-199
	41	UNUSED						150, 152-199
	42	UNUSED						150, 152-199
	43	UNUSED						150, 152-199
	44	UNUSED						150, 152-199
	45	UNUSED						150, 152-199
	46	UNUSED						150, 152-199
	47	UNUSED						150, 152-199
	48	UNUSED						150, 152-199
	49	UNUSED						150, 152-199
	50	UNUSED						150, 152-199
	51	UNUSED						150, 152-199
	52	UNUSED						150, 152-199
	53	UNUSED						150, 152-199
	54	UNUSED						150, 152-199
	= C27	UNUSED						150, 152-199
	DED		W9047	904Z			23-19-11	150, 152-199
	DED		W9047	905Z			23-19-11	150, 152-199
	DED		W9047	906Z			23-19-11	150, 152-199
D09065J		E090-90/ /		RECEPT				150, 152-199
	= A1	UNUSED						150, 152-199
	= C1	UNUSED						150, 152-199
	A	UNUSED						150, 152-199
	B		W9077	901Y	26		23-19-11	150, 152-199
	C		W9077	901G	26		23-19-11	150, 152-199
	D		W9077	FRA			23-19-11	150, 152-199

HOOKUP LIST

D280T132

91-21-51

Section D09000

Page 39

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D09065J		E090-90/ /		RECEPT (continued)				150, 152-199
	E		W9077	900R	26		23-19-11	150, 152-199
	F		W9077	900B	26		23-19-11	150, 152-199
	G	UNUSED						150, 152-199
	H	UNUSED						150, 152-199
	I	UNUSED						150, 152-199
	J	UNUSED						150, 152-199
	K	UNUSED						150, 152-199
	L	UNUSED						150, 152-199
	M	UNUSED						150, 152-199
	N	UNUSED						150, 152-199
	O	UNUSED						150, 152-199
	P	UNUSED						150, 152-199
	Q	UNUSED						150, 152-199
	R	UNUSED						150, 152-199
	S	UNUSED						150, 152-199
	T	UNUSED						150, 152-199
	U	UNUSED						150, 152-199
	V	UNUSED						150, 152-199
	W	UNUSED						150, 152-199
	X	UNUSED						150, 152-199
	Y	UNUSED						150, 152-199
	Z	UNUSED						150, 152-199
			W9077	900Z			23-19-11	150, 152-199
			W9077	901Z			23-19-11	150, 152-199
			W9077	FRA			23-19-11	150, 152-199
	A-	UNUSED						150, 152-199
	B-	UNUSED						150, 152-199
	C-	UNUSED						150, 152-199
	D-	UNUSED						150, 152-199
	E-	UNUSED						150, 152-199
	F-	UNUSED						150, 152-199
	G-	UNUSED						150, 152-199
	H-	UNUSED						150, 152-199
	I-	UNUSED						150, 152-199
	J-	UNUSED						150, 152-199
	K-	UNUSED						150, 152-199
	L-	UNUSED						150, 152-199
	M-	UNUSED						150, 152-199
	N-	UNUSED						150, 152-199
	O-	UNUSED						150, 152-199

HOOKUP LIST

D280T132

91-21-51

Section D09000

Page 40

Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D09065J		E090-90/ /		RECEPT (continued)				150, 152-199
	P-	UNUSED						150, 152-199
	Q-	UNUSED						150, 152-199
	R-	UNUSED						150, 152-199
	S-	UNUSED						150, 152-199
	T-	UNUSED						150, 152-199
	U-	UNUSED						150, 152-199
	V-	UNUSED						150, 152-199
	W-	UNUSED						150, 152-199
	X-	UNUSED						150, 152-199
	Y-	UNUSED						150, 152-199
	Z-	UNUSED						150, 152-199
D09065P		E090-90/ /		PLUG				150, 152-199
	B		W9034	205G	26		23-25-14	150, 152-199
	C		W9034	205Y	26		23-25-14	150, 152-199
	D		W9034	FRA			23-25-14	150, 152-199
	E		W9034	205R	26		23-25-14	150, 152-199
	F		W9034	205B	26		23-25-14	150, 152-199
	= CC	D	W9034	YAA			23-25-14	150, 152-199
			W9034	205Z			23-25-14	150, 152-199
			W9034	206Z			23-25-14	150, 152-199
			W9034	FRA			23-25-14	150, 152-199
D09066J		E090-90/ /		RECEPT				150, 152-199
	= A1	UNUSED						150, 152-199
	= C1	UNUSED						150, 152-199
	A		W9077	964GY	24		23-19-11	150, 152-199
	B		W9077	964W	24		23-19-11	150, 152-199
	C		W9077	962Y	24		23-19-11	150, 152-199
	D		W9077	962G	24		23-19-11	150, 152-199
	E		W9077	961R	24		23-19-11	150, 152-199
	F		W9077	961B	24		23-19-11	150, 152-199
	G		W9077	FRZ			23-19-11	150, 152-199
	H		W9077	FRP			23-19-11	150, 152-199
	I	UNUSED						150, 152-199
	J		W9077	986G	16		23-19-11	150, 152-199
	K		W9077	986W	16		23-19-11	150, 152-199
	L		W9077	986O	16		23-19-11	150, 152-199
	M		W9077	986B	16		23-19-11	150, 152-199
	N	UNUSED						150, 152-199

HOOKUP LIST

D280T132

91-21-51

Section D09000

Page 41

Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D09066J		E090-90/ /		RECEPT (continued)				150, 152-199
	O	UNUSED						150, 152-199
	P	UNUSED						150, 152-199
	Q	UNUSED						150, 152-199
	R	UNUSED						150, 152-199
	S	UNUSED						150, 152-199
	T	UNUSED						150, 152-199
	U	UNUSED						150, 152-199
	V	UNUSED						150, 152-199
	W	UNUSED						150, 152-199
	X	UNUSED						150, 152-199
	Y	UNUSED						150, 152-199
	Z	UNUSED						150, 152-199
			W9077	961Z			23-19-11	150, 152-199
			W9077	962Z			23-19-11	150, 152-199
			W9077	963	22		23-19-11	150, 152-199
			W9077	964Z			23-19-11	150, 152-199
			W9077	986Z			23-19-11	150, 152-199
			W9077	FRP			23-19-11	150, 152-199
			W9077	FRZ			23-19-11	150, 152-199
	A-	UNUSED						150, 152-199
	B-	UNUSED						150, 152-199
	C-	UNUSED						150, 152-199
	D-	UNUSED						150, 152-199
	E-	UNUSED						150, 152-199
	F-	UNUSED						150, 152-199
	G-	UNUSED						150, 152-199
	H-	UNUSED						150, 152-199
	I-	UNUSED						150, 152-199
	J-	UNUSED						150, 152-199
	K-	UNUSED						150, 152-199
	L-	UNUSED						150, 152-199
	M-	UNUSED						150, 152-199
	N-	UNUSED						150, 152-199
	O-	UNUSED						150, 152-199
	P-	UNUSED						150, 152-199
	Q-	UNUSED						150, 152-199
	R-	UNUSED						150, 152-199
	S-	UNUSED						150, 152-199
	T-	UNUSED						150, 152-199
	U-	UNUSED						150, 152-199

HOOKUP LIST

D280T132

91-21-51

Section D09000

Page 42

Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D09066J		E090-90/ /		RECEPT (continued)				150, 152-199
	V-	UNUSED						150, 152-199
	W-	UNUSED						150, 152-199
	X-	UNUSED						150, 152-199
	Y-	UNUSED						150, 152-199
	Z-	UNUSED						150, 152-199
D09066P		E090-90/ /		PLUG				150, 152-199
	=A1	UNUSED						150, 152-199
	=C1	UNUSED						150, 152-199
	A		W9049	903GY	26		23-19-11	150, 152-199
	B		W9049	903W	26		23-19-11	150, 152-199
	C		W9049	902Y	26		23-19-11	150, 152-199
	D		W9049	902G	26		23-19-11	150, 152-199
	E		W9049	901R	26		23-19-11	150, 152-199
	F		W9049	901B	26		23-19-11	150, 152-199
	G		W9049	FRC			23-19-11	150, 152-199
	H		W9049	FRA			23-19-11	150, 152-199
	I	UNUSED						150, 152-199
	J		W9049	904G	18		23-19-11	150, 152-199
	K		W9049	904R	18		23-19-11	150, 152-199
	L		W9049	904BK	18		23-19-11	150, 152-199
	M		W9049	904B	18		23-19-11	150, 152-199
	N	UNUSED						150, 152-199
	O	UNUSED						150, 152-199
	P	UNUSED						150, 152-199
	Q	UNUSED						150, 152-199
	R	UNUSED						150, 152-199
	S	UNUSED						150, 152-199
	T	UNUSED						150, 152-199
	U	UNUSED						150, 152-199
	V	UNUSED						150, 152-199
	W	UNUSED						150, 152-199
	X	UNUSED						150, 152-199
	Y	UNUSED						150, 152-199
	Z	UNUSED						150, 152-199
	=CC	D	W9049	YAA			23-19-11	150, 152-199
			W9049	901Z			23-19-11	150, 152-199
			W9049	902Z			23-19-11	150, 152-199
			W9049	903Z			23-19-11	150, 152-199
			W9049	904Z			23-19-11	150, 152-199

HOOKUP LIST

D280T132

91-21-51

Section D09000

Page 43

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D09066P		E090-90/ /		PLUG (continued)				150, 152-199
			W9049	FRA			23-19-11	150, 152-199
			W9049	FRC			23-19-11	150, 152-199
	A-	UNUSED						150, 152-199
	B-	UNUSED						150, 152-199
	C-	UNUSED						150, 152-199
	D-	UNUSED						150, 152-199
	E-	UNUSED						150, 152-199
	F-	UNUSED						150, 152-199
	G-	UNUSED						150, 152-199
	H-	UNUSED						150, 152-199
	I-	UNUSED						150, 152-199
	J-	UNUSED						150, 152-199
	K-	UNUSED						150, 152-199
	L-	UNUSED						150, 152-199
	M-	UNUSED						150, 152-199
	N-	UNUSED						150, 152-199
	O-	UNUSED						150, 152-199
	P-	UNUSED						150, 152-199
	Q-	UNUSED						150, 152-199
	R-	UNUSED						150, 152-199
	S-	UNUSED						150, 152-199
	T-	UNUSED						150, 152-199
	U-	UNUSED						150, 152-199
	V-	UNUSED						150, 152-199
	W-	UNUSED						150, 152-199
	X-	UNUSED						150, 152-199
	Y-	UNUSED						150, 152-199
	Z-	UNUSED						150, 152-199
D09067J		E090-90/ /		RECEPT				150, 152-199
	= A1	UNUSED						150, 152-199
	= C1	UNUSED						150, 152-199
	A		W9077	972GY	24		23-19-11	150, 152-199
	B		W9077	972W	24		23-19-11	150, 152-199
	C		W9077	970Y	24		23-19-11	150, 152-199
	D		W9077	970G	24		23-19-11	150, 152-199
	E		W9077	969R	24		23-19-11	150, 152-199
	F		W9077	969B	24		23-19-11	150, 152-199
	G		W9077	FR2			23-19-11	150, 152-199
	H		W9077	FRT			23-19-11	150, 152-199

HOOKUP LIST

D280T132

91-21-51

Section D09000

Page 44

Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D09067J		E090-90/ /		RECEPT (continued)				150, 152-199
	I	UNUSED						150, 152-199
	J		W9077	987G	16		23-19-11	150, 152-199
	K		W9077	987W	16		23-19-11	150, 152-199
	L		W9077	987O	16		23-19-11	150, 152-199
	M		W9077	987B	16		23-19-11	150, 152-199
	N	UNUSED						150, 152-199
	O	UNUSED						150, 152-199
	P	UNUSED						150, 152-199
	Q	UNUSED						150, 152-199
	R	UNUSED						150, 152-199
	S	UNUSED						150, 152-199
	T	UNUSED						150, 152-199
	U	UNUSED						150, 152-199
	V	UNUSED						150, 152-199
	W	UNUSED						150, 152-199
	X	UNUSED						150, 152-199
	Y	UNUSED						150, 152-199
	Z	UNUSED						150, 152-199
			W9077	969Z			23-19-11	150, 152-199
			W9077	970Z			23-19-11	150, 152-199
			W9077	971	22		23-19-11	150, 152-199
			W9077	972Z			23-19-11	150, 152-199
			W9077	987Z			23-19-11	150, 152-199
			W9077	FR2			23-19-11	150, 152-199
			W9077	FRT			23-19-11	150, 152-199
	A-	UNUSED						150, 152-199
	B-	UNUSED						150, 152-199
	C-	UNUSED						150, 152-199
	D-	UNUSED						150, 152-199
	E-	UNUSED						150, 152-199
	F-	UNUSED						150, 152-199
	G-	UNUSED						150, 152-199
	H-	UNUSED						150, 152-199
	I-	UNUSED						150, 152-199
	J-	UNUSED						150, 152-199
	K-	UNUSED						150, 152-199
	L-	UNUSED						150, 152-199
	M-	UNUSED						150, 152-199
	N-	UNUSED						150, 152-199
	O-	UNUSED						150, 152-199

HOOKUP LIST

D280T132

91-21-51

Section D09000

Page 45

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D09067J		E090-90/ /		RECEPT (continued)				150, 152-199
	P-	UNUSED						150, 152-199
	Q-	UNUSED						150, 152-199
	R-	UNUSED						150, 152-199
	S-	UNUSED						150, 152-199
	T-	UNUSED						150, 152-199
	U-	UNUSED						150, 152-199
	V-	UNUSED						150, 152-199
	W-	UNUSED						150, 152-199
	X-	UNUSED						150, 152-199
	Y-	UNUSED						150, 152-199
	Z-	UNUSED						150, 152-199
D09067P		E090-90/ /		PLUG				150, 152-199
	= A1	UNUSED						150, 152-199
	= C1	UNUSED						150, 152-199
	A		W9050	903GY	26		23-19-11	150, 152-199
	B		W9050	903W	26		23-19-11	150, 152-199
	C		W9050	902Y	26		23-19-11	150, 152-199
	D		W9050	902G	26		23-19-11	150, 152-199
	E		W9050	901R	26		23-19-11	150, 152-199
	F		W9050	901B	26		23-19-11	150, 152-199
	G		W9050	FRC			23-19-11	150, 152-199
	H		W9050	FRA			23-19-11	150, 152-199
	I	UNUSED						150, 152-199
	J		W9050	904G	18		23-19-11	150, 152-199
	K		W9050	904R	18		23-19-11	150, 152-199
	L		W9050	904BK	18		23-19-11	150, 152-199
	M		W9050	904B	18		23-19-11	150, 152-199
	N	UNUSED						150, 152-199
	O	UNUSED						150, 152-199
	P	UNUSED						150, 152-199
	Q	UNUSED						150, 152-199
	R	UNUSED						150, 152-199
	S	UNUSED						150, 152-199
	T	UNUSED						150, 152-199
	U	UNUSED						150, 152-199
	V	UNUSED						150, 152-199
	W	UNUSED						150, 152-199
	X	UNUSED						150, 152-199
	Y	UNUSED						150, 152-199

HOOKUP LIST

D280T132

91-21-51

Section D09000

Page 46

Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D09067P		E090-90/ /		PLUG (continued)				150, 152-199
	Z	UNUSED						150, 152-199
	= CC	D	W9050	YAA			23-19-11	150, 152-199
			W9050	901Z			23-19-11	150, 152-199
			W9050	902Z			23-19-11	150, 152-199
			W9050	903Z			23-19-11	150, 152-199
			W9050	904Z			23-19-11	150, 152-199
			W9050	FRA			23-19-11	150, 152-199
			W9050	FRC			23-19-11	150, 152-199
	A-	UNUSED						150, 152-199
	B-	UNUSED						150, 152-199
	C-	UNUSED						150, 152-199
	D-	UNUSED						150, 152-199
	E-	UNUSED						150, 152-199
	F-	UNUSED						150, 152-199
	G-	UNUSED						150, 152-199
	H-	UNUSED						150, 152-199
	I-	UNUSED						150, 152-199
	J-	UNUSED						150, 152-199
	K-	UNUSED						150, 152-199
	L-	UNUSED						150, 152-199
	M-	UNUSED						150, 152-199
	N-	UNUSED						150, 152-199
	O-	UNUSED						150, 152-199
	P-	UNUSED						150, 152-199
	Q-	UNUSED						150, 152-199
	R-	UNUSED						150, 152-199
	S-	UNUSED						150, 152-199
	T-	UNUSED						150, 152-199
	U-	UNUSED						150, 152-199
	V-	UNUSED						150, 152-199
	W-	UNUSED						150, 152-199
	X-	UNUSED						150, 152-199
	Y-	UNUSED						150, 152-199
	Z-	UNUSED						150, 152-199
D09068P		654+30/304/R051		PLUG				150, 152-199
	1		W9049	902Y	26		23-19-11	150, 152-199
	2		W9049	902G	26		23-19-11	150, 152-199
	3		W9049	FRB			23-19-11	150, 152-199
	4		W9049	904G	18		23-19-11	150, 152-199

HOOKUP LIST

D280T132

91-21-51

Section D09000

Page 47

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D09068P		654+30/304/R051		PLUG (continued)				150, 152-199
	5	UNUSED						150, 152-199
	6		W9049	904R	18		23-19-11	150, 152-199
	7	UNUSED						150, 152-199
	8		W9049	FRD			23-19-11	150, 152-199
	9		W9049	901R	26		23-19-11	150, 152-199
	10		W9049	901B	26		23-19-11	150, 152-199
	11		W9049	904BK	18		23-19-11	150, 152-199
	12		W9049	903GY	26		23-19-11	150, 152-199
	13		W9049	904B	18		23-19-11	150, 152-199
	14		W9049	903W	26		23-19-11	150, 152-199
	15	UNUSED						150, 152-199
	16	UNUSED						150, 152-199
	17	UNUSED						150, 152-199
	18	UNUSED						150, 152-199
	19	UNUSED						150, 152-199
	20	UNUSED						150, 152-199
	21	UNUSED						150, 152-199
	22	UNUSED						150, 152-199
	23	UNUSED						150, 152-199
	24	UNUSED						150, 152-199
	25	UNUSED						150, 152-199
	26	UNUSED						150, 152-199
	27	UNUSED						150, 152-199
	28	UNUSED						150, 152-199
	29	UNUSED						150, 152-199
	30	UNUSED						150, 152-199
	31	UNUSED						150, 152-199
	32	UNUSED						150, 152-199
	33	UNUSED						150, 152-199
	34	UNUSED						150, 152-199
	35	UNUSED						150, 152-199
	36	UNUSED						150, 152-199
	37	UNUSED						150, 152-199
	38	UNUSED						150, 152-199
	39	UNUSED						150, 152-199
	40	UNUSED						150, 152-199
	41	UNUSED						150, 152-199
	42	UNUSED						150, 152-199
	43	UNUSED						150, 152-199
	44	UNUSED						150, 152-199

HOOKUP LIST

D280T132

91-21-51

Section D09000

Page 48

Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D09068P		654+30/304/R051		PLUG (continued)				150, 152-199
	45	UNUSED						150, 152-199
	46	UNUSED						150, 152-199
	47	UNUSED						150, 152-199
	48	UNUSED						150, 152-199
	49	UNUSED						150, 152-199
	50	UNUSED						150, 152-199
	51	UNUSED						150, 152-199
	52	UNUSED						150, 152-199
	53	UNUSED						150, 152-199
	54	UNUSED						150, 152-199
	= C27	UNUSED						150, 152-199
	= CC	D	W9049	YAA			23-19-11	150, 152-199
			W9049	901Z			23-19-11	150, 152-199
			W9049	902Z			23-19-11	150, 152-199
			W9049	903Z			23-19-11	150, 152-199
			W9049	904Z			23-19-11	150, 152-199
			W9049	FRB			23-19-11	150, 152-199
			W9049	FRD			23-19-11	150, 152-199
D09069P		687/304/R051		PLUG				150, 152-199
	1		W9050	902Y	26		23-19-11	150, 152-199
	2		W9050	902G	26		23-19-11	150, 152-199
	3		W9050	FRB			23-19-11	150, 152-199
	4		W9050	904G	18		23-19-11	150, 152-199
	5	UNUSED						150, 152-199
	6		W9050	904R	18		23-19-11	150, 152-199
	7	UNUSED						150, 152-199
	8		W9050	FRD			23-19-11	150, 152-199
	9		W9050	901R	26		23-19-11	150, 152-199
	10		W9050	901B	26		23-19-11	150, 152-199
	11		W9050	904BK	18		23-19-11	150, 152-199
	12		W9050	903GY	26		23-19-11	150, 152-199
	13		W9050	904B	18		23-19-11	150, 152-199
	14		W9050	903W	26		23-19-11	150, 152-199
	15	UNUSED						150, 152-199
	16	UNUSED						150, 152-199
	17	UNUSED						150, 152-199
	18	UNUSED						150, 152-199
	19	UNUSED						150, 152-199
	20	UNUSED						150, 152-199

HOOKUP LIST

D280T132

91-21-51

Section D09000

Page 49

Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D09069P		687/304/R051		PLUG (continued)				150, 152-199
	21	UNUSED						150, 152-199
	22	UNUSED						150, 152-199
	23	UNUSED						150, 152-199
	24	UNUSED						150, 152-199
	25	UNUSED						150, 152-199
	26	UNUSED						150, 152-199
	27	UNUSED						150, 152-199
	28	UNUSED						150, 152-199
	29	UNUSED						150, 152-199
	30	UNUSED						150, 152-199
	31	UNUSED						150, 152-199
	32	UNUSED						150, 152-199
	33	UNUSED						150, 152-199
	34	UNUSED						150, 152-199
	35	UNUSED						150, 152-199
	36	UNUSED						150, 152-199
	37	UNUSED						150, 152-199
	38	UNUSED						150, 152-199
	39	UNUSED						150, 152-199
	40	UNUSED						150, 152-199
	41	UNUSED						150, 152-199
	42	UNUSED						150, 152-199
	43	UNUSED						150, 152-199
	44	UNUSED						150, 152-199
	45	UNUSED						150, 152-199
	46	UNUSED						150, 152-199
	47	UNUSED						150, 152-199
	48	UNUSED						150, 152-199
	49	UNUSED						150, 152-199
	50	UNUSED						150, 152-199
	51	UNUSED						150, 152-199
	52	UNUSED						150, 152-199
	53	UNUSED						150, 152-199
	54	UNUSED						150, 152-199
	= C27	UNUSED						150, 152-199
	= CC	D	W9050	YAA			23-19-11	150, 152-199
			W9050	901Z			23-19-11	150, 152-199
			W9050	902Z			23-19-11	150, 152-199
			W9050	903Z			23-19-11	150, 152-199
			W9050	904Z			23-19-11	150, 152-199

HOOKUP LIST

D280T132

91-21-51

Section D09000

Page 50

Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D09069P		687/304/R051		PLUG (continued)				150, 152-199
			W9050	FRB			23-19-11	150, 152-199
			W9050	FRD			23-19-11	150, 152-199
D09070P		654+30/304/R051		PLUG				150, 152-199
	1		W9051	904R	18		23-19-11	150, 152-199
	2		W9051	904B	18		23-19-11	150, 152-199
	3		W9051	902Z			23-19-11	150, 152-199
	4		W9051	902Y	26		23-19-11	150, 152-199
	5		W9051	901R	26		23-19-11	150, 152-199
	6	UNUSED						150, 152-199
	7		W9051	903GY	26		23-19-11	150, 152-199
	8	UNUSED						150, 152-199
	9		W9051	904G	18		23-19-11	150, 152-199
	10	UNUSED						150, 152-199
	11		W9051	902G	26		23-19-11	150, 152-199
	12		W9051	901Z			23-19-11	150, 152-199
	13		W9051	901B	26		23-19-11	150, 152-199
	14		W9051	903Z			23-19-11	150, 152-199
	15		W9051	903W	26		23-19-11	150, 152-199
	16	UNUSED						150, 152-199
	17	UNUSED						150, 152-199
	18	UNUSED						150, 152-199
	19	UNUSED						150, 152-199
	20	UNUSED						150, 152-199
	21	UNUSED						150, 152-199
	22	UNUSED						150, 152-199
	23	UNUSED						150, 152-199
	24	UNUSED						150, 152-199
	25	UNUSED						150, 152-199
	26	UNUSED						150, 152-199
	27	UNUSED						150, 152-199
	28	UNUSED						150, 152-199
	29	UNUSED						150, 152-199
	30	UNUSED						150, 152-199
	31	UNUSED						150, 152-199
	32	UNUSED						150, 152-199
	33	UNUSED						150, 152-199
	34	UNUSED						150, 152-199
	35	UNUSED						150, 152-199
	36	UNUSED						150, 152-199

HOOKUP LIST

D280T132

91-21-51

Section D09000

Page 51

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D09070P		654+30/304/R051		PLUG (continued)				150, 152-199
	37	UNUSED						150, 152-199
	38	UNUSED						150, 152-199
	39	UNUSED						150, 152-199
	40	UNUSED						150, 152-199
	41	UNUSED						150, 152-199
	42	UNUSED						150, 152-199
	43	UNUSED						150, 152-199
	44	UNUSED						150, 152-199
	45	UNUSED						150, 152-199
	46	UNUSED						150, 152-199
	47	UNUSED						150, 152-199
	48	UNUSED						150, 152-199
	49	UNUSED						150, 152-199
	50	UNUSED						150, 152-199
	51	UNUSED						150, 152-199
	52	UNUSED						150, 152-199
	53	UNUSED						150, 152-199
	54	UNUSED						150, 152-199
	= C27	UNUSED						150, 152-199
	= CC	D	W9051	YAA			23-19-11	150, 152-199
D09071P		654+30/304/R051		PLUG				150, 152-199
	1		W9052	904R	18		23-19-11	150, 152-199
	2		W9052	904B	18		23-19-11	150, 152-199
	3		W9052	902Z			23-19-11	150, 152-199
	4		W9052	902Y	26		23-19-11	150, 152-199
	5		W9052	901R	26		23-19-11	150, 152-199
	6	UNUSED						150, 152-199
	7		W9052	903GY	26		23-19-11	150, 152-199
	8	UNUSED						150, 152-199
	9		W9052	904G	18		23-19-11	150, 152-199
	10	UNUSED						150, 152-199
	11		W9052	902G	26		23-19-11	150, 152-199
	12		W9052	901Z			23-19-11	150, 152-199
	13		W9052	901B	26		23-19-11	150, 152-199
	14		W9052	903Z			23-19-11	150, 152-199
	15		W9052	903W	26		23-19-11	150, 152-199
	16	UNUSED						150, 152-199
	17	UNUSED						150, 152-199
	18	UNUSED						150, 152-199

HOOKUP LIST

D280T132

91-21-51

Section D09000

Page 52

Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D09071P		654+30/304/R051		PLUG (continued)				150, 152-199
	19	UNUSED						150, 152-199
	20	UNUSED						150, 152-199
	21	UNUSED						150, 152-199
	22	UNUSED						150, 152-199
	23	UNUSED						150, 152-199
	24	UNUSED						150, 152-199
	25	UNUSED						150, 152-199
	26	UNUSED						150, 152-199
	27	UNUSED						150, 152-199
	28	UNUSED						150, 152-199
	29	UNUSED						150, 152-199
	30	UNUSED						150, 152-199
	31	UNUSED						150, 152-199
	32	UNUSED						150, 152-199
	33	UNUSED						150, 152-199
	34	UNUSED						150, 152-199
	35	UNUSED						150, 152-199
	36	UNUSED						150, 152-199
	37	UNUSED						150, 152-199
	38	UNUSED						150, 152-199
	39	UNUSED						150, 152-199
	40	UNUSED						150, 152-199
	41	UNUSED						150, 152-199
	42	UNUSED						150, 152-199
	43	UNUSED						150, 152-199
	44	UNUSED						150, 152-199
	45	UNUSED						150, 152-199
	46	UNUSED						150, 152-199
	47	UNUSED						150, 152-199
	48	UNUSED						150, 152-199
	49	UNUSED						150, 152-199
	50	UNUSED						150, 152-199
	51	UNUSED						150, 152-199
	52	UNUSED						150, 152-199
	53	UNUSED						150, 152-199
	54	UNUSED						150, 152-199
	= C27	UNUSED						150, 152-199
	= CC	D	W9052	YAA			23-19-11	150, 152-199

HOOKUP LIST

D280T132

91-21-51

Section D09000

Page 53

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D09072P		654+30/304/R051		PLUG				150, 152-199
	1		W9053	904R	18		23-19-11	150, 152-199
	2		W9053	904B	18		23-19-11	150, 152-199
	3		W9053	902Z			23-19-11	150, 152-199
	4		W9053	902Y	26		23-19-11	150, 152-199
	5		W9053	901R	26		23-19-11	150, 152-199
	6	UNUSED						150, 152-199
	7		W9053	903GY	26		23-19-11	150, 152-199
	8	UNUSED						150, 152-199
	9		W9053	904G	18		23-19-11	150, 152-199
	10	UNUSED						150, 152-199
	11		W9053	902G	26		23-19-11	150, 152-199
	12		W9053	901Z			23-19-11	150, 152-199
	13		W9053	901B	26		23-19-11	150, 152-199
	14		W9053	903Z			23-19-11	150, 152-199
	15		W9053	903W	26		23-19-11	150, 152-199
	16	UNUSED						150, 152-199
	17	UNUSED						150, 152-199
	18	UNUSED						150, 152-199
	19	UNUSED						150, 152-199
	20	UNUSED						150, 152-199
	21	UNUSED						150, 152-199
	22	UNUSED						150, 152-199
	23	UNUSED						150, 152-199
	24	UNUSED						150, 152-199
	25	UNUSED						150, 152-199
	26	UNUSED						150, 152-199
	27	UNUSED						150, 152-199
	28	UNUSED						150, 152-199
	29	UNUSED						150, 152-199
	30	UNUSED						150, 152-199
	31	UNUSED						150, 152-199
	32	UNUSED						150, 152-199
	33	UNUSED						150, 152-199
	34	UNUSED						150, 152-199
	35	UNUSED						150, 152-199
	36	UNUSED						150, 152-199
	37	UNUSED						150, 152-199
	38	UNUSED						150, 152-199
	39	UNUSED						150, 152-199
	40	UNUSED						150, 152-199

HOOKUP LIST

D280T132

91-21-51

Section D09000

Page 54

Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D09072P		654+30/304/R051		PLUG (continued)				150, 152-199
	41	UNUSED						150, 152-199
	42	UNUSED						150, 152-199
	43	UNUSED						150, 152-199
	44	UNUSED						150, 152-199
	45	UNUSED						150, 152-199
	46	UNUSED						150, 152-199
	47	UNUSED						150, 152-199
	48	UNUSED						150, 152-199
	49	UNUSED						150, 152-199
	50	UNUSED						150, 152-199
	51	UNUSED						150, 152-199
	52	UNUSED						150, 152-199
	53	UNUSED						150, 152-199
	54	UNUSED						150, 152-199
	= C27	UNUSED						150, 152-199
	= CC	D	W9053	YAA			23-19-11	150, 152-199
D09073J		654+80/22/L90		RECEPT				150, 152-199
	1		W9051	904R	18		23-19-11	150, 152-199
	2		W9051	904B	18		23-19-11	150, 152-199
	3		W9051	902Z			23-19-11	150, 152-199
	4		W9051	902Y	26		23-19-11	150, 152-199
	5		W9051	901R	26		23-19-11	150, 152-199
	6	UNUSED						150, 152-199
	7		W9051	903GY	26		23-19-11	150, 152-199
	8	UNUSED						150, 152-199
	9		W9051	904G	18		23-19-11	150, 152-199
	10	UNUSED						150, 152-199
	11		W9051	902G	26		23-19-11	150, 152-199
	12		W9051	901Z			23-19-11	150, 152-199
	13		W9051	901B	26		23-19-11	150, 152-199
	14		W9051	903Z			23-19-11	150, 152-199
	15		W9051	903W	26		23-19-11	150, 152-199
	16	UNUSED						150, 152-199
	17	UNUSED						150, 152-199
	18	UNUSED						150, 152-199
	19	UNUSED						150, 152-199
	20	UNUSED						150, 152-199
	21	UNUSED						150, 152-199
	22	UNUSED						150, 152-199

HOOKUP LIST

D280T132

91-21-51

Section D09000

Page 55

Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D09073J		654+80/22/L90		RECEPT (continued)				150, 152-199
	23	UNUSED						150, 152-199
	24	UNUSED						150, 152-199
	25	UNUSED						150, 152-199
	26	UNUSED						150, 152-199
	27	UNUSED						150, 152-199
	28	UNUSED						150, 152-199
	29	UNUSED						150, 152-199
	30	UNUSED						150, 152-199
	31	UNUSED						150, 152-199
	32	UNUSED						150, 152-199
	33	UNUSED						150, 152-199
	34	UNUSED						150, 152-199
	35	UNUSED						150, 152-199
	36	UNUSED						150, 152-199
	37	UNUSED						150, 152-199
	38	UNUSED						150, 152-199
	39	UNUSED						150, 152-199
	40	UNUSED						150, 152-199
	41	UNUSED						150, 152-199
	42	UNUSED						150, 152-199
	43	UNUSED						150, 152-199
	44	UNUSED						150, 152-199
	45	UNUSED						150, 152-199
	46	UNUSED						150, 152-199
	47	UNUSED						150, 152-199
	48	UNUSED						150, 152-199
	49	UNUSED						150, 152-199
	50	UNUSED						150, 152-199
	51	UNUSED						150, 152-199
	52	UNUSED						150, 152-199
	53	UNUSED						150, 152-199
	54	UNUSED						150, 152-199
	= C27	UNUSED						150, 152-199
	= CC	D	W9051	YAA			23-19-11	150, 152-199
D09073P		654+180/202/L90		PLUG				150, 152-199
	1		W9059	903R	18		23-19-11	150, 152-199
	2		W9059	903B	18		23-19-11	150, 152-199
	3		W9059	902Z			23-19-11	150, 152-199
	4		W9059	902Y	26		23-19-11	150, 152-199

HOOKUP LIST
D280T132

91-21-51
Section D09000
Page 56
Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D09073P		654+180/202/L90		PLUG (continued)				150, 152-199
	5		W9059	901R	26		23-19-11	150, 152-199
	6	UNUSED						150, 152-199
	7	UNUSED						150, 152-199
	8	UNUSED						150, 152-199
	9		W9059	903G	18		23-19-11	150, 152-199
	10	UNUSED						150, 152-199
	11		W9059	902G	26		23-19-11	150, 152-199
	12		W9059	901Z			23-19-11	150, 152-199
	13		W9059	901B	26		23-19-11	150, 152-199
	14	UNUSED						150, 152-199
	15	UNUSED						150, 152-199
	16	UNUSED						150, 152-199
	17	UNUSED						150, 152-199
	18	UNUSED						150, 152-199
	19	UNUSED						150, 152-199
	20	UNUSED						150, 152-199
	21	UNUSED						150, 152-199
	22	UNUSED						150, 152-199
	23	UNUSED						150, 152-199
	24	UNUSED						150, 152-199
	25	UNUSED						150, 152-199
	26	UNUSED						150, 152-199
	27	UNUSED						150, 152-199
	28	UNUSED						150, 152-199
	29	UNUSED						150, 152-199
	30	UNUSED						150, 152-199
	31	UNUSED						150, 152-199
	32	UNUSED						150, 152-199
	33	UNUSED						150, 152-199
	34	UNUSED						150, 152-199
	35	UNUSED						150, 152-199
	36	UNUSED						150, 152-199
	37	UNUSED						150, 152-199
	38	UNUSED						150, 152-199
	39	UNUSED						150, 152-199
	40	UNUSED						150, 152-199
	41	UNUSED						150, 152-199
	42	UNUSED						150, 152-199
	43	UNUSED						150, 152-199
	44	UNUSED						150, 152-199

HOOKUP LIST

D280T132

91-21-51

Section D09000

Page 57

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D09073P		654+180/202/L90		PLUG (continued)				150, 152-199
	45	UNUSED						150, 152-199
	46	UNUSED						150, 152-199
	47	UNUSED						150, 152-199
	48	UNUSED						150, 152-199
	49	UNUSED						150, 152-199
	50	UNUSED						150, 152-199
	51	UNUSED						150, 152-199
	52	UNUSED						150, 152-199
	53	UNUSED						150, 152-199
	54	UNUSED						150, 152-199
	= C27	UNUSED						150, 152-199
	= CC	D	W9059	YAA			23-19-11	150, 152-199
D09074J		654+29/200/00		RECEPT				150, 152-199
	1		W9052	904R	18		23-19-11	150, 152-199
	2		W9052	904B	18		23-19-11	150, 152-199
	3		W9052	902Z			23-19-11	150, 152-199
	4		W9052	902Y	26		23-19-11	150, 152-199
	5		W9052	901R	26		23-19-11	150, 152-199
	6	UNUSED						150, 152-199
	7		W9052	903GY	26		23-19-11	150, 152-199
	8	UNUSED						150, 152-199
	9		W9052	904G	18		23-19-11	150, 152-199
	10	UNUSED						150, 152-199
	11		W9052	902G	26		23-19-11	150, 152-199
	12		W9052	901Z			23-19-11	150, 152-199
	13		W9052	901B	26		23-19-11	150, 152-199
	14		W9052	903Z			23-19-11	150, 152-199
	15		W9052	903W	26		23-19-11	150, 152-199
	16	UNUSED						150, 152-199
	17	UNUSED						150, 152-199
	18	UNUSED						150, 152-199
	19	UNUSED						150, 152-199
	20	UNUSED						150, 152-199
	21	UNUSED						150, 152-199
	22	UNUSED						150, 152-199
	23	UNUSED						150, 152-199
	24	UNUSED						150, 152-199
	25	UNUSED						150, 152-199
	26	UNUSED						150, 152-199

HOOKUP LIST
D280T132

91-21-51
Section D09000
Page 58
Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D09074J		654+29/200/00		RECEPT (continued)				150, 152-199
	27	UNUSED						150, 152-199
	28	UNUSED						150, 152-199
	29	UNUSED						150, 152-199
	30	UNUSED						150, 152-199
	31	UNUSED						150, 152-199
	32	UNUSED						150, 152-199
	33	UNUSED						150, 152-199
	34	UNUSED						150, 152-199
	35	UNUSED						150, 152-199
	36	UNUSED						150, 152-199
	37	UNUSED						150, 152-199
	38	UNUSED						150, 152-199
	39	UNUSED						150, 152-199
	40	UNUSED						150, 152-199
	41	UNUSED						150, 152-199
	42	UNUSED						150, 152-199
	43	UNUSED						150, 152-199
	44	UNUSED						150, 152-199
	45	UNUSED						150, 152-199
	46	UNUSED						150, 152-199
	47	UNUSED						150, 152-199
	48	UNUSED						150, 152-199
	49	UNUSED						150, 152-199
	50	UNUSED						150, 152-199
	51	UNUSED						150, 152-199
	52	UNUSED						150, 152-199
	53	UNUSED						150, 152-199
	54	UNUSED						150, 152-199
	= C27	UNUSED						150, 152-199
	= CC	D	W9052	YAA			23-19-11	150, 152-199
D09074P		654+29/200/		PLUG				150, 152-199
	1		W9060	903R	18		23-19-11	150, 152-199
	2		W9060	903B	18		23-19-11	150, 152-199
	3		W9060	902Z			23-19-11	150, 152-199
	4		W9060	902Y	26		23-19-11	150, 152-199
	5		W9060	901R	26		23-19-11	150, 152-199
	6	UNUSED						150, 152-199
	7	UNUSED						150, 152-199
	8	UNUSED						150, 152-199

HOOKUP LIST

D280T132

91-21-51

Section D09000

Page 59

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D09074P		654+29/200/		PLUG (continued)				150, 152-199
	9		W9060	903G	18		23-19-11	150, 152-199
	10	UNUSED						150, 152-199
	11		W9060	902G	26		23-19-11	150, 152-199
	12		W9060	901Z			23-19-11	150, 152-199
	13		W9060	901B	26		23-19-11	150, 152-199
	14	UNUSED						150, 152-199
	15	UNUSED						150, 152-199
	16	UNUSED						150, 152-199
	17	UNUSED						150, 152-199
	18	UNUSED						150, 152-199
	19	UNUSED						150, 152-199
	20	UNUSED						150, 152-199
	21	UNUSED						150, 152-199
	22	UNUSED						150, 152-199
	23	UNUSED						150, 152-199
	24	UNUSED						150, 152-199
	25	UNUSED						150, 152-199
	26	UNUSED						150, 152-199
	27	UNUSED						150, 152-199
	28	UNUSED						150, 152-199
	29	UNUSED						150, 152-199
	30	UNUSED						150, 152-199
	31	UNUSED						150, 152-199
	32	UNUSED						150, 152-199
	33	UNUSED						150, 152-199
	34	UNUSED						150, 152-199
	35	UNUSED						150, 152-199
	36	UNUSED						150, 152-199
	37	UNUSED						150, 152-199
	38	UNUSED						150, 152-199
	39	UNUSED						150, 152-199
	40	UNUSED						150, 152-199
	41	UNUSED						150, 152-199
	42	UNUSED						150, 152-199
	43	UNUSED						150, 152-199
	44	UNUSED						150, 152-199
	45	UNUSED						150, 152-199
	46	UNUSED						150, 152-199
	47	UNUSED						150, 152-199
	48	UNUSED						150, 152-199

HOOKUP LIST

D280T132

91-21-51

Section D09000

Page 60

Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D09074P		654+29/200/		PLUG (continued)				150, 152-199
	49	UNUSED						150, 152-199
	50	UNUSED						150, 152-199
	51	UNUSED						150, 152-199
	52	UNUSED						150, 152-199
	53	UNUSED						150, 152-199
	54	UNUSED						150, 152-199
	= C27	UNUSED						150, 152-199
	= CC	D	W9060	YAA			23-19-11	150, 152-199
D09075J		654+80/202/R90		RECEPT				150, 152-199
	1		W9053	904R	18		23-19-11	150, 152-199
	2		W9053	904B	18		23-19-11	150, 152-199
	3		W9053	902Z			23-19-11	150, 152-199
	4		W9053	902Y	26		23-19-11	150, 152-199
	5		W9053	901R	26		23-19-11	150, 152-199
	6	UNUSED						150, 152-199
	7		W9053	903GY	26		23-19-11	150, 152-199
	8	UNUSED						150, 152-199
	9		W9053	904G	18		23-19-11	150, 152-199
	10	UNUSED						150, 152-199
	11		W9053	902G	26		23-19-11	150, 152-199
	12		W9053	901Z			23-19-11	150, 152-199
	13		W9053	901B	26		23-19-11	150, 152-199
	14		W9053	903Z			23-19-11	150, 152-199
	15		W9053	903W	26		23-19-11	150, 152-199
	16	UNUSED						150, 152-199
	17	UNUSED						150, 152-199
	18	UNUSED						150, 152-199
	19	UNUSED						150, 152-199
	20	UNUSED						150, 152-199
	21	UNUSED						150, 152-199
	22	UNUSED						150, 152-199
	23	UNUSED						150, 152-199
	24	UNUSED						150, 152-199
	25	UNUSED						150, 152-199
	26	UNUSED						150, 152-199
	27	UNUSED						150, 152-199
	28	UNUSED						150, 152-199
	29	UNUSED						150, 152-199
	30	UNUSED						150, 152-199

HOOKUP LIST

D280T132

91-21-51

Section D09000

Page 61

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D09075J		654+80/202/R90		RECEPT (continued)				150, 152-199
	31	UNUSED						150, 152-199
	32	UNUSED						150, 152-199
	33	UNUSED						150, 152-199
	34	UNUSED						150, 152-199
	35	UNUSED						150, 152-199
	36	UNUSED						150, 152-199
	37	UNUSED						150, 152-199
	38	UNUSED						150, 152-199
	39	UNUSED						150, 152-199
	40	UNUSED						150, 152-199
	41	UNUSED						150, 152-199
	42	UNUSED						150, 152-199
	43	UNUSED						150, 152-199
	44	UNUSED						150, 152-199
	45	UNUSED						150, 152-199
	46	UNUSED						150, 152-199
	47	UNUSED						150, 152-199
	48	UNUSED						150, 152-199
	49	UNUSED						150, 152-199
	50	UNUSED						150, 152-199
	51	UNUSED						150, 152-199
	52	UNUSED						150, 152-199
	53	UNUSED						150, 152-199
	54	UNUSED						150, 152-199
	= C27	UNUSED						150, 152-199
	= CC	D	W9053	YAA			23-19-11	150, 152-199
D09075P		654+80/202/R90		PLUG				150, 152-199
	1		W9061	903R	18		23-19-11	150, 152-199
	2		W9061	903B	18		23-19-11	150, 152-199
	3		W9061	902Z			23-19-11	150, 152-199
	4		W9061	902Y	26		23-19-11	150, 152-199
	5		W9061	901R	26		23-19-11	150, 152-199
	6	UNUSED						150, 152-199
	7	UNUSED						150, 152-199
	8	UNUSED						150, 152-199
	9		W9061	903G	18		23-19-11	150, 152-199
	10	UNUSED						150, 152-199
	11		W9061	902G	26		23-19-11	150, 152-199
	12		W9061	901Z			23-19-11	150, 152-199

HOOKUP LIST

D280T132

91-21-51

Section D09000

Page 62

Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D09075P		654+80/202/R90		PLUG (continued)				150, 152-199
	13		W9061	901B	26		23-19-11	150, 152-199
	14	UNUSED						150, 152-199
	15	UNUSED						150, 152-199
	16	UNUSED						150, 152-199
	17	UNUSED						150, 152-199
	18	UNUSED						150, 152-199
	19	UNUSED						150, 152-199
	20	UNUSED						150, 152-199
	21	UNUSED						150, 152-199
	22	UNUSED						150, 152-199
	23	UNUSED						150, 152-199
	24	UNUSED						150, 152-199
	25	UNUSED						150, 152-199
	26	UNUSED						150, 152-199
	27	UNUSED						150, 152-199
	28	UNUSED						150, 152-199
	29	UNUSED						150, 152-199
	30	UNUSED						150, 152-199
	31	UNUSED						150, 152-199
	32	UNUSED						150, 152-199
	33	UNUSED						150, 152-199
	34	UNUSED						150, 152-199
	35	UNUSED						150, 152-199
	36	UNUSED						150, 152-199
	37	UNUSED						150, 152-199
	38	UNUSED						150, 152-199
	39	UNUSED						150, 152-199
	40	UNUSED						150, 152-199
	41	UNUSED						150, 152-199
	42	UNUSED						150, 152-199
	43	UNUSED						150, 152-199
	44	UNUSED						150, 152-199
	45	UNUSED						150, 152-199
	46	UNUSED						150, 152-199
	47	UNUSED						150, 152-199
	48	UNUSED						150, 152-199
	49	UNUSED						150, 152-199
	50	UNUSED						150, 152-199
	51	UNUSED						150, 152-199
	52	UNUSED						150, 152-199

HOOKUP LIST

D280T132

91-21-51

Section D09000

Page 63

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D09075P		654+80/202/R90		PLUG (continued)				150, 152-199
	53	UNUSED						150, 152-199
	54	UNUSED						150, 152-199
	= C27	UNUSED						150, 152-199
	= CC	D	W9061	YAA			23-19-11	150, 152-199
D09076P		0687/304/R051		RECEPT				150, 152-199
	1		W9054	904R	18		23-19-11	150, 152-199
	2		W9054	904B	18		23-19-11	150, 152-199
	3		W9054	902Z			23-19-11	150, 152-199
	4		W9054	902Y	26		23-19-11	150, 152-199
	5		W9054	901R	26		23-19-11	150, 152-199
	6	UNUSED						150, 152-199
	7		W9054	903GY	26		23-19-11	150, 152-199
	8	UNUSED						150, 152-199
	9		W9054	904G	18		23-19-11	150, 152-199
	10	UNUSED						150, 152-199
	11		W9054	902G	26		23-19-11	150, 152-199
	12		W9054	901Z			23-19-11	150, 152-199
	13		W9054	901B	26		23-19-11	150, 152-199
	14		W9054	903Z			23-19-11	150, 152-199
	15		W9054	903W	26		23-19-11	150, 152-199
	16	UNUSED						150, 152-199
	17	UNUSED						150, 152-199
	18	UNUSED						150, 152-199
	19	UNUSED						150, 152-199
	20	UNUSED						150, 152-199
	21	UNUSED						150, 152-199
	22	UNUSED						150, 152-199
	23	UNUSED						150, 152-199
	24	UNUSED						150, 152-199
	25	UNUSED						150, 152-199
	26	UNUSED						150, 152-199
	27	UNUSED						150, 152-199
	28	UNUSED						150, 152-199
	29	UNUSED						150, 152-199
	30	UNUSED						150, 152-199
	31	UNUSED						150, 152-199
	32	UNUSED						150, 152-199
	33	UNUSED						150, 152-199
	34	UNUSED						150, 152-199

HOOKUP LIST

D280T132

91-21-51

Section D09000

Page 64

Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D09076P		0687/304/R051		RECEPT (continued)				150, 152-199
	35	UNUSED						150, 152-199
	36	UNUSED						150, 152-199
	37	UNUSED						150, 152-199
	38	UNUSED						150, 152-199
	39	UNUSED						150, 152-199
	40	UNUSED						150, 152-199
	41	UNUSED						150, 152-199
	42	UNUSED						150, 152-199
	43	UNUSED						150, 152-199
	44	UNUSED						150, 152-199
	45	UNUSED						150, 152-199
	46	UNUSED						150, 152-199
	47	UNUSED						150, 152-199
	48	UNUSED						150, 152-199
	49	UNUSED						150, 152-199
	50	UNUSED						150, 152-199
	51	UNUSED						150, 152-199
	52	UNUSED						150, 152-199
	53	UNUSED						150, 152-199
	54	UNUSED						150, 152-199
	= C27	UNUSED						150, 152-199
	= CC	D	W9054	YAA			23-19-11	150, 152-199
D09077P		687/304/R051		PLUG				150, 152-199
	1		W9055	904R	18		23-19-11	150, 152-199
	2		W9055	904B	18		23-19-11	150, 152-199
	3		W9055	902Z			23-19-11	150, 152-199
	4		W9055	902Y	26		23-19-11	150, 152-199
	5		W9055	901R	26		23-19-11	150, 152-199
	6	UNUSED						150, 152-199
	7		W9055	903GY	26		23-19-11	150, 152-199
	8	UNUSED						150, 152-199
	9		W9055	904G	18		23-19-11	150, 152-199
	10	UNUSED						150, 152-199
	11		W9055	902G	26		23-19-11	150, 152-199
	12		W9055	901Z			23-19-11	150, 152-199
	13		W9055	901B	26		23-19-11	150, 152-199
	14		W9055	903Z			23-19-11	150, 152-199
	15		W9055	903W	26		23-19-11	150, 152-199
	16	UNUSED						150, 152-199

HOOKUP LIST

D280T132

91-21-51

Section D09000

Page 65

Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D09077P		687/304/R051		PLUG (continued)				150, 152-199
	17	UNUSED						150, 152-199
	18	UNUSED						150, 152-199
	19	UNUSED						150, 152-199
	20	UNUSED						150, 152-199
	21	UNUSED						150, 152-199
	22	UNUSED						150, 152-199
	23	UNUSED						150, 152-199
	24	UNUSED						150, 152-199
	25	UNUSED						150, 152-199
	26	UNUSED						150, 152-199
	27	UNUSED						150, 152-199
	28	UNUSED						150, 152-199
	29	UNUSED						150, 152-199
	30	UNUSED						150, 152-199
	31	UNUSED						150, 152-199
	32	UNUSED						150, 152-199
	33	UNUSED						150, 152-199
	34	UNUSED						150, 152-199
	35	UNUSED						150, 152-199
	36	UNUSED						150, 152-199
	37	UNUSED						150, 152-199
	38	UNUSED						150, 152-199
	39	UNUSED						150, 152-199
	40	UNUSED						150, 152-199
	41	UNUSED						150, 152-199
	42	UNUSED						150, 152-199
	43	UNUSED						150, 152-199
	44	UNUSED						150, 152-199
	45	UNUSED						150, 152-199
	46	UNUSED						150, 152-199
	47	UNUSED						150, 152-199
	48	UNUSED						150, 152-199
	49	UNUSED						150, 152-199
	50	UNUSED						150, 152-199
	51	UNUSED						150, 152-199
	52	UNUSED						150, 152-199
	53	UNUSED						150, 152-199
	54	UNUSED						150, 152-199
	= C27	UNUSED						150, 152-199
	= CC	D	W9055	YAA			23-19-11	150, 152-199

HOOKUP LIST
D280T132

91-21-51
Section D09000
Page 66
Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D09078P		687/304/R051		PLUG				150, 152-199
	1		W9056	904R	18		23-19-11	150, 152-199
	2		W9056	904B	18		23-19-11	150, 152-199
	3		W9056	902Z			23-19-11	150, 152-199
	4		W9056	902Y	26		23-19-11	150, 152-199
	5		W9056	901R	26		23-19-11	150, 152-199
	6	UNUSED						150, 152-199
	7		W9056	903GY	26		23-19-11	150, 152-199
	8	UNUSED						150, 152-199
	9		W9056	904G	18		23-19-11	150, 152-199
	10	UNUSED						150, 152-199
	11		W9056	902G	26		23-19-11	150, 152-199
	12		W9056	901Z			23-19-11	150, 152-199
	13		W9056	901B	26		23-19-11	150, 152-199
	14		W9056	903Z			23-19-11	150, 152-199
	15		W9056	903W	26		23-19-11	150, 152-199
	16	UNUSED						150, 152-199
	17	UNUSED						150, 152-199
	18	UNUSED						150, 152-199
	19	UNUSED						150, 152-199
	20	UNUSED						150, 152-199
	21	UNUSED						150, 152-199
	22	UNUSED						150, 152-199
	23	UNUSED						150, 152-199
	24	UNUSED						150, 152-199
	25	UNUSED						150, 152-199
	26	UNUSED						150, 152-199
	27	UNUSED						150, 152-199
	28	UNUSED						150, 152-199
	29	UNUSED						150, 152-199
	30	UNUSED						150, 152-199
	31	UNUSED						150, 152-199
	32	UNUSED						150, 152-199
	33	UNUSED						150, 152-199
	34	UNUSED						150, 152-199
	35	UNUSED						150, 152-199
	36	UNUSED						150, 152-199
	37	UNUSED						150, 152-199
	38	UNUSED						150, 152-199
	39	UNUSED						150, 152-199
	40	UNUSED						150, 152-199

HOOKUP LIST

D280T132

91-21-51

Section D09000

Page 67

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D09078P		687/304/R051		PLUG (continued)				150, 152-199
	41	UNUSED						150, 152-199
	42	UNUSED						150, 152-199
	43	UNUSED						150, 152-199
	44	UNUSED						150, 152-199
	45	UNUSED						150, 152-199
	46	UNUSED						150, 152-199
	47	UNUSED						150, 152-199
	48	UNUSED						150, 152-199
	49	UNUSED						150, 152-199
	50	UNUSED						150, 152-199
	51	UNUSED						150, 152-199
	52	UNUSED						150, 152-199
	53	UNUSED						150, 152-199
	54	UNUSED						150, 152-199
	= C27	UNUSED						150, 152-199
	= CC	D	W9056	YAA			23-19-11	150, 152-199
D09079J		688/202/L90		RECPT				150, 152-199
	1		W9054	904R	18		23-19-11	150, 152-199
	2		W9054	904B	18		23-19-11	150, 152-199
	3		W9054	902Z			23-19-11	150, 152-199
	4		W9054	902Y	26		23-19-11	150, 152-199
	5		W9054	901R	26		23-19-11	150, 152-199
	6	UNUSED						150, 152-199
	7		W9054	903GY	26		23-19-11	150, 152-199
	8	UNUSED						150, 152-199
	9		W9054	904G	18		23-19-11	150, 152-199
	10	UNUSED						150, 152-199
	11		W9054	902G	26		23-19-11	150, 152-199
	12		W9054	901Z			23-19-11	150, 152-199
	13		W9054	901B	26		23-19-11	150, 152-199
	14		W9054	903Z			23-19-11	150, 152-199
	15		W9054	903W	26		23-19-11	150, 152-199
	16	UNUSED						150, 152-199
	17	UNUSED						150, 152-199
	18	UNUSED						150, 152-199
	19	UNUSED						150, 152-199
	20	UNUSED						150, 152-199
	21	UNUSED						150, 152-199
	22	UNUSED						150, 152-199

HOOKUP LIST

D280T132

91-21-51

Section D09000

Page 68

Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D09079J		688/202/L90		RECPT (continued)				150, 152-199
	23	UNUSED						150, 152-199
	24	UNUSED						150, 152-199
	25	UNUSED						150, 152-199
	26	UNUSED						150, 152-199
	27	UNUSED						150, 152-199
	28	UNUSED						150, 152-199
	29	UNUSED						150, 152-199
	30	UNUSED						150, 152-199
	31	UNUSED						150, 152-199
	32	UNUSED						150, 152-199
	33	UNUSED						150, 152-199
	34	UNUSED						150, 152-199
	35	UNUSED						150, 152-199
	36	UNUSED						150, 152-199
	37	UNUSED						150, 152-199
	38	UNUSED						150, 152-199
	39	UNUSED						150, 152-199
	40	UNUSED						150, 152-199
	41	UNUSED						150, 152-199
	42	UNUSED						150, 152-199
	43	UNUSED						150, 152-199
	44	UNUSED						150, 152-199
	45	UNUSED						150, 152-199
	46	UNUSED						150, 152-199
	47	UNUSED						150, 152-199
	48	UNUSED						150, 152-199
	49	UNUSED						150, 152-199
	50	UNUSED						150, 152-199
	51	UNUSED						150, 152-199
	52	UNUSED						150, 152-199
	53	UNUSED						150, 152-199
	54	UNUSED						150, 152-199
	= C27	UNUSED						150, 152-199
	= CC	D	W9054	YAA			23-19-11	150, 152-199
D09079P		688/202/L90		PLUG				150, 152-199
	1		W9074	903R	18		23-19-11	150, 152-199
	2		W9074	903B	18		23-19-11	150, 152-199
	3		W9074	902Z			23-19-11	150, 152-199
	4		W9074	902Y	26		23-19-11	150, 152-199

HOOKUP LIST

D280T132

91-21-51

Section D09000

Page 69

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D09079P		688/202/L90		PLUG (continued)				150, 152-199
	5		W9074	901R	26		23-19-11	150, 152-199
	6	UNUSED						150, 152-199
	7	UNUSED						150, 152-199
	8	UNUSED						150, 152-199
	9		W9074	903G	18		23-19-11	150, 152-199
	10	UNUSED						150, 152-199
	11		W9074	902G	26		23-19-11	150, 152-199
	12		W9074	901Z			23-19-11	150, 152-199
	13		W9074	901B	26		23-19-11	150, 152-199
	14	UNUSED						150, 152-199
	15	UNUSED						150, 152-199
	16	UNUSED						150, 152-199
	17	UNUSED						150, 152-199
	18	UNUSED						150, 152-199
	19	UNUSED						150, 152-199
	20	UNUSED						150, 152-199
	21	UNUSED						150, 152-199
	22	UNUSED						150, 152-199
	23	UNUSED						150, 152-199
	24	UNUSED						150, 152-199
	25	UNUSED						150, 152-199
	26	UNUSED						150, 152-199
	27	UNUSED						150, 152-199
	28	UNUSED						150, 152-199
	29	UNUSED						150, 152-199
	30	UNUSED						150, 152-199
	31	UNUSED						150, 152-199
	32	UNUSED						150, 152-199
	33	UNUSED						150, 152-199
	34	UNUSED						150, 152-199
	35	UNUSED						150, 152-199
	36	UNUSED						150, 152-199
	37	UNUSED						150, 152-199
	38	UNUSED						150, 152-199
	39	UNUSED						150, 152-199
	40	UNUSED						150, 152-199
	41	UNUSED						150, 152-199
	42	UNUSED						150, 152-199
	43	UNUSED						150, 152-199
	44	UNUSED						150, 152-199

HOOKUP LIST

D280T132

91-21-51

Section D09000

Page 70

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D09079P		688/202/L90		PLUG (continued)				150, 152-199
	45	UNUSED						150, 152-199
	46	UNUSED						150, 152-199
	47	UNUSED						150, 152-199
	48	UNUSED						150, 152-199
	49	UNUSED						150, 152-199
	50	UNUSED						150, 152-199
	51	UNUSED						150, 152-199
	52	UNUSED						150, 152-199
	53	UNUSED						150, 152-199
	54	UNUSED						150, 152-199
	= C27	UNUSED						150, 152-199
	= CC	D	W9074	YAA			23-19-11	150, 152-199
D09080J		723/200/000		RECEPT				150, 152-199
	1		W9055	904R	18		23-19-11	150, 152-199
	2		W9055	904B	18		23-19-11	150, 152-199
	3		W9055	902Z			23-19-11	150, 152-199
	4		W9055	902Y	26		23-19-11	150, 152-199
	5		W9055	901R	26		23-19-11	150, 152-199
	6	UNUSED						150, 152-199
	7		W9055	903GY	26		23-19-11	150, 152-199
	8	UNUSED						150, 152-199
	9		W9055	904G	18		23-19-11	150, 152-199
	10	UNUSED						150, 152-199
	11		W9055	902G	26		23-19-11	150, 152-199
	12		W9055	901Z			23-19-11	150, 152-199
	13		W9055	901B	26		23-19-11	150, 152-199
	14		W9055	903Z			23-19-11	150, 152-199
	15		W9055	903W	26		23-19-11	150, 152-199
	16	UNUSED						150, 152-199
	17	UNUSED						150, 152-199
	18	UNUSED						150, 152-199
	19	UNUSED						150, 152-199
	20	UNUSED						150, 152-199
	21	UNUSED						150, 152-199
	22	UNUSED						150, 152-199
	23	UNUSED						150, 152-199
	24	UNUSED						150, 152-199
	25	UNUSED						150, 152-199
	26	UNUSED						150, 152-199

HOOKUP LIST

D280T132

91-21-51

Section D09000

Page 71

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D09080J		723/200/000		RECEPT (continued)				150, 152-199
	27	UNUSED						150, 152-199
	28	UNUSED						150, 152-199
	29	UNUSED						150, 152-199
	30	UNUSED						150, 152-199
	31	UNUSED						150, 152-199
	32	UNUSED						150, 152-199
	33	UNUSED						150, 152-199
	34	UNUSED						150, 152-199
	35	UNUSED						150, 152-199
	36	UNUSED						150, 152-199
	37	UNUSED						150, 152-199
	38	UNUSED						150, 152-199
	39	UNUSED						150, 152-199
	40	UNUSED						150, 152-199
	41	UNUSED						150, 152-199
	42	UNUSED						150, 152-199
	43	UNUSED						150, 152-199
	44	UNUSED						150, 152-199
	45	UNUSED						150, 152-199
	46	UNUSED						150, 152-199
	47	UNUSED						150, 152-199
	48	UNUSED						150, 152-199
	49	UNUSED						150, 152-199
	50	UNUSED						150, 152-199
	51	UNUSED						150, 152-199
	52	UNUSED						150, 152-199
	53	UNUSED						150, 152-199
	54	UNUSED						150, 152-199
	= C27	UNUSED						150, 152-199
	= CC	D	W9055	YAA			23-19-11	150, 152-199
D09080P		723/200/000		PLUG				150, 152-199
	1		W9075	903R	18		23-19-11	150, 152-199
	2		W9075	903B	18		23-19-11	150, 152-199
	3		W9075	902Z			23-19-11	150, 152-199
	4		W9075	902Y	26		23-19-11	150, 152-199
	5		W9075	901R	26		23-19-11	150, 152-199
	6	UNUSED						150, 152-199
	7	UNUSED						150, 152-199
	8	UNUSED						150, 152-199

HOOKUP LIST
D280T132

91-21-51
Section D09000
Page 72
Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D09080P		723/200/000		PLUG (continued)				150, 152-199
	9		W9075	903G	18		23-19-11	150, 152-199
	10	UNUSED						150, 152-199
	11		W9075	902G	26		23-19-11	150, 152-199
	12		W9075	901Z			23-19-11	150, 152-199
	13		W9075	901B	26		23-19-11	150, 152-199
	14	UNUSED						150, 152-199
	15	UNUSED						150, 152-199
	16	UNUSED						150, 152-199
	17	UNUSED						150, 152-199
	18	UNUSED						150, 152-199
	19	UNUSED						150, 152-199
	20	UNUSED						150, 152-199
	21	UNUSED						150, 152-199
	22	UNUSED						150, 152-199
	23	UNUSED						150, 152-199
	24	UNUSED						150, 152-199
	25	UNUSED						150, 152-199
	26	UNUSED						150, 152-199
	27	UNUSED						150, 152-199
	28	UNUSED						150, 152-199
	29	UNUSED						150, 152-199
	30	UNUSED						150, 152-199
	31	UNUSED						150, 152-199
	32	UNUSED						150, 152-199
	33	UNUSED						150, 152-199
	34	UNUSED						150, 152-199
	35	UNUSED						150, 152-199
	36	UNUSED						150, 152-199
	37	UNUSED						150, 152-199
	38	UNUSED						150, 152-199
	39	UNUSED						150, 152-199
	40	UNUSED						150, 152-199
	41	UNUSED						150, 152-199
	42	UNUSED						150, 152-199
	43	UNUSED						150, 152-199
	44	UNUSED						150, 152-199
	45	UNUSED						150, 152-199
	46	UNUSED						150, 152-199
	47	UNUSED						150, 152-199
	48	UNUSED						150, 152-199

HOOKUP LIST

D280T132

91-21-51

Section D09000

Page 73

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D09080P		723/200/000		PLUG (continued)				150, 152-199
	49	UNUSED						150, 152-199
	50	UNUSED						150, 152-199
	51	UNUSED						150, 152-199
	52	UNUSED						150, 152-199
	53	UNUSED						150, 152-199
	54	UNUSED						150, 152-199
	= C27	UNUSED						150, 152-199
	= CC	D	W9075	YAA			23-19-11	150, 152-199
D09081J		688/202/R90		RECEPT				150, 152-199
	1		W9056	904R	18		23-19-11	150, 152-199
	2		W9056	904B	18		23-19-11	150, 152-199
	3		W9056	902Z			23-19-11	150, 152-199
	4		W9056	902Y	26		23-19-11	150, 152-199
	5		W9056	901R	26		23-19-11	150, 152-199
	6	UNUSED						150, 152-199
	7		W9056	903GY	26		23-19-11	150, 152-199
	8	UNUSED						150, 152-199
	9		W9056	904G	18		23-19-11	150, 152-199
	10	UNUSED						150, 152-199
	11		W9056	902G	26		23-19-11	150, 152-199
	12		W9056	901Z			23-19-11	150, 152-199
	13		W9056	901B	26		23-19-11	150, 152-199
	14		W9056	903Z			23-19-11	150, 152-199
	15		W9056	903W	26		23-19-11	150, 152-199
	16	UNUSED						150, 152-199
	17	UNUSED						150, 152-199
	18	UNUSED						150, 152-199
	19	UNUSED						150, 152-199
	20	UNUSED						150, 152-199
	21	UNUSED						150, 152-199
	22	UNUSED						150, 152-199
	23	UNUSED						150, 152-199
	24	UNUSED						150, 152-199
	25	UNUSED						150, 152-199
	26	UNUSED						150, 152-199
	27	UNUSED						150, 152-199
	28	UNUSED						150, 152-199
	29	UNUSED						150, 152-199
	30	UNUSED						150, 152-199

HOOKUP LIST

D280T132

91-21-51

Section D09000

Page 74

Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D09081J		688/202/R90		RECEPT (continued)				150, 152-199
	31	UNUSED						150, 152-199
	32	UNUSED						150, 152-199
	33	UNUSED						150, 152-199
	34	UNUSED						150, 152-199
	35	UNUSED						150, 152-199
	36	UNUSED						150, 152-199
	37	UNUSED						150, 152-199
	38	UNUSED						150, 152-199
	39	UNUSED						150, 152-199
	40	UNUSED						150, 152-199
	41	UNUSED						150, 152-199
	42	UNUSED						150, 152-199
	43	UNUSED						150, 152-199
	44	UNUSED						150, 152-199
	45	UNUSED						150, 152-199
	46	UNUSED						150, 152-199
	47	UNUSED						150, 152-199
	48	UNUSED						150, 152-199
	49	UNUSED						150, 152-199
	50	UNUSED						150, 152-199
	51	UNUSED						150, 152-199
	52	UNUSED						150, 152-199
	53	UNUSED						150, 152-199
	54	UNUSED						150, 152-199
	= C27	UNUSED						150, 152-199
	= CC	D	W9056	YAA			23-19-11	150, 152-199
D09081P		688/202/R90		PLUG				150, 152-199
	1		W9076	903R	18		23-19-11	150, 152-199
	2		W9076	903B	18		23-19-11	150, 152-199
	3		W9076	902Z			23-19-11	150, 152-199
	4		W9076	902Y	26		23-19-11	150, 152-199
	5		W9076	901R	26		23-19-11	150, 152-199
	6	UNUSED						150, 152-199
	7	UNUSED						150, 152-199
	8	UNUSED						150, 152-199
	9		W9076	903G	18		23-19-11	150, 152-199
	10	UNUSED						150, 152-199
	11		W9076	902G	26		23-19-11	150, 152-199
	12		W9076	901Z			23-19-11	150, 152-199

HOOKUP LIST

D280T132

91-21-51

Section D09000

Page 75

Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D09081P		688/202/R90		PLUG (continued)				150, 152-199
	13		W9076	901B	26		23-19-11	150, 152-199
	14	UNUSED						150, 152-199
	15	UNUSED						150, 152-199
	16	UNUSED						150, 152-199
	17	UNUSED						150, 152-199
	18	UNUSED						150, 152-199
	19	UNUSED						150, 152-199
	20	UNUSED						150, 152-199
	21	UNUSED						150, 152-199
	22	UNUSED						150, 152-199
	23	UNUSED						150, 152-199
	24	UNUSED						150, 152-199
	25	UNUSED						150, 152-199
	26	UNUSED						150, 152-199
	27	UNUSED						150, 152-199
	28	UNUSED						150, 152-199
	29	UNUSED						150, 152-199
	30	UNUSED						150, 152-199
	31	UNUSED						150, 152-199
	32	UNUSED						150, 152-199
	33	UNUSED						150, 152-199
	34	UNUSED						150, 152-199
	35	UNUSED						150, 152-199
	36	UNUSED						150, 152-199
	37	UNUSED						150, 152-199
	38	UNUSED						150, 152-199
	39	UNUSED						150, 152-199
	40	UNUSED						150, 152-199
	41	UNUSED						150, 152-199
	42	UNUSED						150, 152-199
	43	UNUSED						150, 152-199
	44	UNUSED						150, 152-199
	45	UNUSED						150, 152-199
	46	UNUSED						150, 152-199
	47	UNUSED						150, 152-199
	48	UNUSED						150, 152-199
	49	UNUSED						150, 152-199
	50	UNUSED						150, 152-199
	51	UNUSED						150, 152-199
	52	UNUSED						150, 152-199

HOOKUP LIST
D280T132

91-21-51
Section D09000
Page 76
Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D09081P		688/202/R90		PLUG (continued)				150, 152-199
	53	UNUSED						150, 152-199
	54	UNUSED						150, 152-199
	= C27	UNUSED						150, 152-199
	= CC	D	W9076	YAA			23-19-11	150, 152-199
D09082A		E090-90/ /		RECEPT				150, 152-199
	10A		W9077	947	24		23-19-11	150, 152-199
	12A		W9077	906W	24		23-19-11	150, 152-199
	14A		W9077	939	24		23-19-11	150, 152-199
	10B		W9077	948	24		23-19-11	150, 152-199
	12B		W9077	906B	24		23-19-11	150, 152-199
	10C		W9077	949	24		23-19-11	150, 152-199
	12C		W9077	907W	24		23-19-11	150, 152-199
	10D		W9077	950	24		23-19-11	150, 152-199
	12D		W9077	907B	24		23-19-11	150, 152-199
	10E		W9077	951	24		23-19-11	150, 152-199
	12E		W9077	908W	24		23-19-11	150, 152-199
	10F		W9077	952	24		23-19-11	150, 152-199
	12F		W9077	908B	24		23-19-11	150, 152-199
	10G		W9077	953	24		23-19-11	150, 152-199
	12G		W9077	909W	24		23-19-11	150, 152-199
	10H		W9077	954	24		23-19-11	150, 152-199
	12H		W9077	909B	24		23-19-11	150, 152-199
	12J		W9077	FRH			23-19-11	150, 152-199
	12K		W9077	FRJ			23-19-11	150, 152-199
	1A		W9077	900R	26		23-19-11	150, 152-199
	2A		W9077	902R	26		23-19-11	150, 152-199
	3A		W9077	904R	26		23-19-11	150, 152-199
	5A		W9077	936W	24		23-19-11	150, 152-199
	6A		W9077	907	24		23-19-11	150, 152-199
	7A		W9077	917	24		23-19-11	150, 152-199
	8A		W9077	927	24		23-19-11	150, 152-199
	9A		W9077	943	24		23-19-11	150, 152-199
	1B		W9077	900B	26		23-19-11	150, 152-199
	2B		W9077	902B	26		23-19-11	150, 152-199
	3B		W9077	904B	26		23-19-11	150, 152-199
	5B		W9077	936B	24		23-19-11	150, 152-199
	6B		W9077	908	24		23-19-11	150, 152-199
	7B		W9077	918	24		23-19-11	150, 152-199
	8B		W9077	928	24		23-19-11	150, 152-199

HOOKUP LIST

D280T132

91-21-51

Section D09000

Page 77

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D09082A		E090-90/ /		RECEPT (continued)				150, 152-199
	9B		W9077	942	24		23-19-11	150, 152-199
	1C		W9077	901Y	26		23-19-11	150, 152-199
	2C		W9077	903Y	26		23-19-11	150, 152-199
	3C		W9077	905Y	26		23-19-11	150, 152-199
	5C		W9077	937W	24		23-19-11	150, 152-199
	6C		W9077	909	24		23-19-11	150, 152-199
	7C		W9077	919	24		23-19-11	150, 152-199
	8C		W9077	929	24		23-19-11	150, 152-199
	9C		W9077	940	24		23-19-11	150, 152-199
	1D		W9077	901G	26		23-19-11	150, 152-199
	2D		W9077	903G	26		23-19-11	150, 152-199
	3D		W9077	905G	26		23-19-11	150, 152-199
	5D		W9077	937B	24		23-19-11	150, 152-199
	6D		W9077	910	24		23-19-11	150, 152-199
	7D		W9077	920	24		23-19-11	150, 152-199
	8D		W9077	930	24		23-19-11	150, 152-199
	9D		W9077	941	24		23-19-11	150, 152-199
	1E		W9077	FRB			23-19-11	150, 152-199
	2E		W9077	FRD			23-19-11	150, 152-199
	3E		W9077	FRF			23-19-11	150, 152-199
	5E		W9077	FRO			23-19-11	150, 152-199
	6E		W9077	911	24		23-19-11	150, 152-199
	7E		W9077	921	24		23-19-11	150, 152-199
	8E		W9077	931	24		23-19-11	150, 152-199
	9E		W9077	944	24		23-19-11	150, 152-199
	4F		W9077	932W	24		23-19-11	150, 152-199
	6F		W9077	912	24		23-19-11	150, 152-199
	7F		W9077	922	24		23-19-11	150, 152-199
	8F		W9077	938W	24		23-19-11	150, 152-199
	9F		W9077	945	24		23-19-11	150, 152-199
	4G		W9077	932B	24		23-19-11	150, 152-199
	6G		W9077	913	24		23-19-11	150, 152-199
	7G		W9077	923	24		23-19-11	150, 152-199
	8G		W9077	938B	24		23-19-11	150, 152-199
	9G		W9077	946W	24		23-19-11	150, 152-199
	4H		W9077	933W	24		23-19-11	150, 152-199
	6H		W9077	914	24		23-19-11	150, 152-199
	7H		W9077	924	24		23-19-11	150, 152-199
	8H		W9077	938Z			23-19-11	150, 152-199
	9H		W9077	946B	24		23-19-11	150, 152-199

HOOKUP LIST

D280T132

91-21-51

Section D09000

Page 78

Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D09082A		E090-90/ /		RECEPT (continued)				150, 152-199
	4J		W9077	933B	24		23-19-11	150, 152-199
	6J		W9077	915	24		23-19-11	150, 152-199
	7J		W9077	925	24		23-19-11	150, 152-199
	8J		W9077	934	24		23-19-11	150, 152-199
	9J		W9077	946Z			23-19-11	150, 152-199
	4K		W9077	FRM			23-19-11	150, 152-199
	6K		W9077	916	24		23-19-11	150, 152-199
	7K		W9077	926	24		23-19-11	150, 152-199
	8K		W9077	935	24		23-19-11	150, 152-199
			W9077	900Z			23-19-11	150, 152-199
			W9077	901Z			23-19-11	150, 152-199
			W9077	902Z			23-19-11	150, 152-199
			W9077	903Z			23-19-11	150, 152-199
			W9077	904Z			23-19-11	150, 152-199
			W9077	905Z			23-19-11	150, 152-199
			W9077	906Z			23-19-11	150, 152-199
			W9077	907Z			23-19-11	150, 152-199
			W9077	908Z			23-19-11	150, 152-199
			W9077	909Z			23-19-11	150, 152-199
			W9077	932Z			23-19-11	150, 152-199
			W9077	933Z			23-19-11	150, 152-199
			W9077	936Z			23-19-11	150, 152-199
			W9077	937Z			23-19-11	150, 152-199
			W9077	FRB			23-19-11	150, 152-199
			W9077	FRD			23-19-11	150, 152-199
			W9077	FRF			23-19-11	150, 152-199
			W9077	FRH			23-19-11	150, 152-199
			W9077	FRJ			23-19-11	150, 152-199
			W9077	FRM			23-19-11	150, 152-199
			W9077	FRO			23-19-11	150, 152-199
D09082B		E090-90/ /		PLUG				150, 152-199
	10A		W9077	965R	24		23-19-11	150, 152-199
	11A		W9077	973R	24		23-19-11	150, 152-199
	10B		W9077	965B	24		23-19-11	150, 152-199
	11B		W9077	973B	24		23-19-11	150, 152-199
	10C		W9077	966Y	24		23-19-11	150, 152-199
	11C		W9077	974Y	24		23-19-11	150, 152-199
	13C		W9077	959	24		23-19-11	150, 152-199
	10D		W9077	966G	24		23-19-11	150, 152-199

HOOKUP LIST

D280T132

91-21-51

Section D09000

Page 79

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D09082B		E090-90/ /		PLUG (continued)				150, 152-199
	11D		W9077	974G	24		23-19-11	150, 152-199
	13D		W9077	960	24		23-19-11	150, 152-199
	10E		W9077	FRS			23-19-11	150, 152-199
	11E		W9077	FRW			23-19-11	150, 152-199
	10F		W9077	FRU			23-19-11	150, 152-199
	11F		W9077	FRY			23-19-11	150, 152-199
	10G		W9077	970G	24		23-19-11	150, 152-199
	11G		W9077	978G	24		23-19-11	150, 152-199
	10H		W9077	970Y	24		23-19-11	150, 152-199
	11H		W9077	978Y	24		23-19-11	150, 152-199
	10J		W9077	969B	24		23-19-11	150, 152-199
	11J		W9077	977B	24		23-19-11	150, 152-199
	10K		W9077	969R	24		23-19-11	150, 152-199
	11K		W9077	977R	24		23-19-11	150, 152-199
	1A		W9077	961R	24		23-19-11	150, 152-199
	9A		W9077	955	24		23-19-11	150, 152-199
	1B		W9077	961B	24		23-19-11	150, 152-199
	9B		W9077	956	24		23-19-11	150, 152-199
	1C		W9077	962Y	24		23-19-11	150, 152-199
	9C		W9077	957	24		23-19-11	150, 152-199
	1D		W9077	962G	24		23-19-11	150, 152-199
	9D		W9077	958	24		23-19-11	150, 152-199
	1E		W9077	FRQ			23-19-11	150, 152-199
			W9077	961Z			23-19-11	150, 152-199
			W9077	962Z			23-19-11	150, 152-199
			W9077	965Z			23-19-11	150, 152-199
			W9077	966Z			23-19-11	150, 152-199
			W9077	969Z			23-19-11	150, 152-199
			W9077	970Z			23-19-11	150, 152-199
			W9077	973Z			23-19-11	150, 152-199
			W9077	974Z			23-19-11	150, 152-199
			W9077	977Z			23-19-11	150, 152-199
			W9077	978Z			23-19-11	150, 152-199
			W9077	FRQ			23-19-11	150, 152-199
			W9077	FRS			23-19-11	150, 152-199
			W9077	FRU			23-19-11	150, 152-199
			W9077	FRW			23-19-11	150, 152-199
			W9077	FRY			23-19-11	150, 152-199

HOOKUP LIST

D280T132

91-21-51

Section D09000

Page 80

Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D09082C		E090-90/ /		RECEPT				150, 152-199
	2		W9077	984	16		23-19-11	150, 152-199
	3		W9077	982	16		23-19-11	150, 152-199
	8		W9077	990	16		23-19-11	150, 152-199
D09083P		654+30/304/R051		PLUG				150, 152-199
	1		W9057	904R	18		23-19-11	150, 152-199
	2		W9057	904B	18		23-19-11	150, 152-199
	3		W9057	902Z			23-19-11	150, 152-199
	4		W9057	902Y	26		23-19-11	150, 152-199
	5		W9057	901R	26		23-19-11	150, 152-199
	6	UNUSED						150, 152-199
	7		W9057	903GY	26		23-19-11	150, 152-199
	8	UNUSED						150, 152-199
	9		W9057	904G	18		23-19-11	150, 152-199
	10	UNUSED						150, 152-199
	11		W9057	902G	26		23-19-11	150, 152-199
	12		W9057	901Z			23-19-11	150, 152-199
	13		W9057	901B	26		23-19-11	150, 152-199
	14		W9057	903Z			23-19-11	150, 152-199
	15		W9057	903W	26		23-19-11	150, 152-199
	16	UNUSED						150, 152-199
	17	UNUSED						150, 152-199
	18	UNUSED						150, 152-199
	19	UNUSED						150, 152-199
	20	UNUSED						150, 152-199
	21	UNUSED						150, 152-199
	22	UNUSED						150, 152-199
	23	UNUSED						150, 152-199
	24	UNUSED						150, 152-199
	25	UNUSED						150, 152-199
	26	UNUSED						150, 152-199
	27	UNUSED						150, 152-199
	28	UNUSED						150, 152-199
	29	UNUSED						150, 152-199
	30	UNUSED						150, 152-199
	31	UNUSED						150, 152-199
	32	UNUSED						150, 152-199
	33	UNUSED						150, 152-199
	34	UNUSED						150, 152-199
	35	UNUSED						150, 152-199

HOOKUP LIST

D280T132

91-21-51

Section D09000

Page 81

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D09083P		654+30/304/R051		PLUG (continued)				150, 152-199
	36	UNUSED						150, 152-199
	37	UNUSED						150, 152-199
	38	UNUSED						150, 152-199
	39	UNUSED						150, 152-199
	40	UNUSED						150, 152-199
	41	UNUSED						150, 152-199
	42	UNUSED						150, 152-199
	43	UNUSED						150, 152-199
	44	UNUSED						150, 152-199
	45	UNUSED						150, 152-199
	46	UNUSED						150, 152-199
	47	UNUSED						150, 152-199
	48	UNUSED						150, 152-199
	49	UNUSED						150, 152-199
	50	UNUSED						150, 152-199
	51	UNUSED						150, 152-199
	52	UNUSED						150, 152-199
	53	UNUSED						150, 152-199
	54	UNUSED						150, 152-199
	= C27	UNUSED						150, 152-199
	= CC	D	W9057	YAA			23-19-11	150, 152-199
D09084P		284/286/L72		PLUG				150, 152-199
	1		W9057	904R	18		23-19-11	150, 152-199
	2		W9057	904B	18		23-19-11	150, 152-199
	3		W9057	902Z			23-19-11	150, 152-199
	4		W9057	902Y	26		23-19-11	150, 152-199
	5		W9057	901R	26		23-19-11	150, 152-199
	6	UNUSED						150, 152-199
	7		W9057	903GY	26		23-19-11	150, 152-199
	8	UNUSED						150, 152-199
	9		W9057	904G	18		23-19-11	150, 152-199
	10	UNUSED						150, 152-199
	11		W9057	902G	26		23-19-11	150, 152-199
	12		W9057	901Z			23-19-11	150, 152-199
	13		W9057	901B	26		23-19-11	150, 152-199
	14		W9057	903Z			23-19-11	150, 152-199
	15		W9057	903W	26		23-19-11	150, 152-199
	16	UNUSED						150, 152-199
	17	UNUSED						150, 152-199

HOOKUP LIST

D280T132

91-21-51

Section D09000

Page 82

Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D09084P		284/286/L72		PLUG (continued)				150, 152-199
	18	UNUSED						150, 152-199
	19	UNUSED						150, 152-199
	20	UNUSED						150, 152-199
	21	UNUSED						150, 152-199
	22	UNUSED						150, 152-199
	23	UNUSED						150, 152-199
	24	UNUSED						150, 152-199
	25	UNUSED						150, 152-199
	26	UNUSED						150, 152-199
	27	UNUSED						150, 152-199
	28	UNUSED						150, 152-199
	29	UNUSED						150, 152-199
	30	UNUSED						150, 152-199
	31	UNUSED						150, 152-199
	32	UNUSED						150, 152-199
	33	UNUSED						150, 152-199
	34	UNUSED						150, 152-199
	35	UNUSED						150, 152-199
	36	UNUSED						150, 152-199
	37	UNUSED						150, 152-199
	38	UNUSED						150, 152-199
	39	UNUSED						150, 152-199
	40	UNUSED						150, 152-199
	41	UNUSED						150, 152-199
	42	UNUSED						150, 152-199
	43	UNUSED						150, 152-199
	44	UNUSED						150, 152-199
	45	UNUSED						150, 152-199
	46	UNUSED						150, 152-199
	47	UNUSED						150, 152-199
	48	UNUSED						150, 152-199
	49	UNUSED						150, 152-199
	50	UNUSED						150, 152-199
	51	UNUSED						150, 152-199
	52	UNUSED						150, 152-199
	53	UNUSED						150, 152-199
	54	UNUSED						150, 152-199
	= C27	UNUSED						150, 152-199
	= CC	D	W9057	YAA			23-19-11	150, 152-199

HOOKUP LIST

D280T132

91-21-51

Section D09000

Page 83

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D09085P		687/304/R051		PLUG				150, 152-199
	1		W9058	903R	18		23-19-11	150, 152-199
	2		W9058	903B	18		23-19-11	150, 152-199
	3		W9058	902Z			23-19-11	150, 152-199
	4		W9058	902Y	26		23-19-11	150, 152-199
	5		W9058	901R	26		23-19-11	150, 152-199
	6	UNUSED						150, 152-199
	7	UNUSED						150, 152-199
	8	UNUSED						150, 152-199
	9		W9058	903G	18		23-19-11	150, 152-199
	10	UNUSED						150, 152-199
	11		W9058	902G	26		23-19-11	150, 152-199
	12		W9058	901Z			23-19-11	150, 152-199
	13		W9058	901B	26		23-19-11	150, 152-199
	14	UNUSED						150, 152-199
	15	UNUSED						150, 152-199
	16	UNUSED						150, 152-199
	17	UNUSED						150, 152-199
	18	UNUSED						150, 152-199
	19	UNUSED						150, 152-199
	20	UNUSED						150, 152-199
	21	UNUSED						150, 152-199
	22	UNUSED						150, 152-199
	23	UNUSED						150, 152-199
	24	UNUSED						150, 152-199
	25	UNUSED						150, 152-199
	26	UNUSED						150, 152-199
	27	UNUSED						150, 152-199
	28	UNUSED						150, 152-199
	29	UNUSED						150, 152-199
	30	UNUSED						150, 152-199
	31	UNUSED						150, 152-199
	32	UNUSED						150, 152-199
	33	UNUSED						150, 152-199
	34	UNUSED						150, 152-199
	35	UNUSED						150, 152-199
	36	UNUSED						150, 152-199
	37	UNUSED						150, 152-199
	38	UNUSED						150, 152-199
	39	UNUSED						150, 152-199
	40	UNUSED						150, 152-199

HOOKUP LIST

D280T132

91-21-51

Section D09000

Page 84

Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D09085P		687/304/R051		PLUG (continued)				150, 152-199
	41	UNUSED						150, 152-199
	42	UNUSED						150, 152-199
	43	UNUSED						150, 152-199
	44	UNUSED						150, 152-199
	45	UNUSED						150, 152-199
	46	UNUSED						150, 152-199
	47	UNUSED						150, 152-199
	48	UNUSED						150, 152-199
	49	UNUSED						150, 152-199
	50	UNUSED						150, 152-199
	51	UNUSED						150, 152-199
	52	UNUSED						150, 152-199
	53	UNUSED						150, 152-199
	54	UNUSED						150, 152-199
	= C27	UNUSED						150, 152-199
	= CC	D	W9058	YAA			23-19-11	150, 152-199
D09086P		654/119/R15		PLUG				150, 152-199
	1		W9058	903R	18		23-19-11	150, 152-199
	2		W9058	903B	18		23-19-11	150, 152-199
	3		W9058	902Z			23-19-11	150, 152-199
	4		W9058	902Y	26		23-19-11	150, 152-199
	5		W9058	901R	26		23-19-11	150, 152-199
	6	UNUSED						150, 152-199
	7	UNUSED						150, 152-199
	8	UNUSED						150, 152-199
	9		W9058	903G	18		23-19-11	150, 152-199
	10	UNUSED						150, 152-199
	11		W9058	902G	26		23-19-11	150, 152-199
	12		W9058	901Z			23-19-11	150, 152-199
	13		W9058	901B	26		23-19-11	150, 152-199
	14	UNUSED						150, 152-199
	15	UNUSED						150, 152-199
	16	UNUSED						150, 152-199
	17	UNUSED						150, 152-199
	18	UNUSED						150, 152-199
	19	UNUSED						150, 152-199
	20	UNUSED						150, 152-199
	21	UNUSED						150, 152-199
	22	UNUSED						150, 152-199

HOOKUP LIST

D280T132

91-21-51

Section D09000

Page 85

Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D09086P		654/119/R15		PLUG (continued)				150, 152-199
	23	UNUSED						150, 152-199
	24	UNUSED						150, 152-199
	25	UNUSED						150, 152-199
	26	UNUSED						150, 152-199
	27	UNUSED						150, 152-199
	28	UNUSED						150, 152-199
	29	UNUSED						150, 152-199
	30	UNUSED						150, 152-199
	31	UNUSED						150, 152-199
	32	UNUSED						150, 152-199
	33	UNUSED						150, 152-199
	34	UNUSED						150, 152-199
	35	UNUSED						150, 152-199
	36	UNUSED						150, 152-199
	37	UNUSED						150, 152-199
	38	UNUSED						150, 152-199
	39	UNUSED						150, 152-199
	40	UNUSED						150, 152-199
	41	UNUSED						150, 152-199
	42	UNUSED						150, 152-199
	43	UNUSED						150, 152-199
	44	UNUSED						150, 152-199
	45	UNUSED						150, 152-199
	46	UNUSED						150, 152-199
	47	UNUSED						150, 152-199
	48	UNUSED						150, 152-199
	49	UNUSED						150, 152-199
	50	UNUSED						150, 152-199
	51	UNUSED						150, 152-199
	52	UNUSED						150, 152-199
	53	UNUSED						150, 152-199
	54	UNUSED						150, 152-199
	= C27	UNUSED						150, 152-199
	= CC	D	W9058	YAA			23-19-11	150, 152-199
D09090		196/223/0000		PLUG (TD2891) (TO-230607)				150, 152-199
	1		W0851	907R	20		23-22-12	150, 152-199
	2		W0851	907B	20		23-22-12	150, 152-199
	3		W0851	901	22		23-22-12	150, 152-199
	4		W0851	903	22		23-22-12	150, 152-199

HOOKUP LIST
D280T132

91-21-51
Section D09000
Page 86
Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D09090		196/223/0000		PLUG (TD2891) (TO-230607) (continued)				150, 152-199
	5		W0851	902	22		23-22-12	150, 152-199
	6		W0851	904	22		23-22-12	150, 152-199
	7		W0851	905	20		23-22-12	150, 152-199
	8		W0851	906	22		23-22-12	150, 152-199
	DED		W0851	905Z			23-22-12	150, 152-199
D09091J		AP0405/ /		RCPT (MS24264R20B28PN)				150, 152-199
	1		W0047	907	20		23-32-21	150, 152-199
	2		W0047	908	20		23-32-21	150, 152-199
	3		W0047	908Z			23-32-21	150, 152-199
	4		W0047	910	20		23-32-21	150, 152-199
	5		W0047	911	20		23-32-21	150, 152-199
	6		W0047	912	20		23-32-21	150, 152-199
	7		W0047	913	20		23-32-21	150, 152-199
	8		W0047	914	20		23-32-21	150, 152-199
	9		W0047	915	20		23-32-21	150, 152-199
	10		W0047	915Z			23-32-21	150, 152-199
	11		W0047	917	20		23-32-21	150, 152-199
	12		W0047	918	20		23-32-21	150, 152-199
	13	UNUSED						150, 152-199
	14	UNUSED						150, 152-199
	15	UNUSED						150, 152-199
	16	UNUSED						150, 152-199
	17	UNUSED						150, 152-199
	18	UNUSED						150, 152-199
	19	UNUSED						150, 152-199
	20	UNUSED						150, 152-199
	21	UNUSED						150, 152-199
	22	UNUSED						150, 152-199
	23	UNUSED						150, 152-199
	24	UNUSED						150, 152-199
	25	UNUSED						150, 152-199
	26	UNUSED						150, 152-199
	27	UNUSED						150, 152-199
	28	UNUSED						150, 152-199
	29	UNUSED						150, 152-199
	30	UNUSED						150, 152-199
	31	UNUSED						150, 152-199
	32	UNUSED						150, 152-199
	33	UNUSED						150, 152-199

HOOKUP LIST

D280T132

91-21-51

Section D09000

Page 87

Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D09091J		AP0405/ /		RCPT (MS24264R20B28PN) (continued)				150, 152-199
	34	UNUSED						150, 152-199
	35	UNUSED						150, 152-199
	36	UNUSED						150, 152-199
	37	UNUSED						150, 152-199
	38	UNUSED						150, 152-199
	39	UNUSED						150, 152-199
	40	UNUSED						150, 152-199
	41	UNUSED						150, 152-199
	42	UNUSED						150, 152-199
	43	UNUSED						150, 152-199
	44	UNUSED						150, 152-199
	45	UNUSED						150, 152-199
	46	UNUSED						150, 152-199
	47	UNUSED						150, 152-199
	48	UNUSED						150, 152-199
	49	UNUSED						150, 152-199
	50	UNUSED						150, 152-199
	51	UNUSED						150, 152-199
	52	UNUSED						150, 152-199
	53	UNUSED						150, 152-199
	54	UNUSED						150, 152-199
	=C27	UNUSED						150, 152-199
D09091P		AP0405/ /		PLUG				150, 152-199
	1		W1447	904	20		23-32-21	150, 152-199
	2		W1447	905	20		23-32-21	150, 152-199
	3		W1447	905Z			23-32-21	150, 152-199
	4		W1447	906	20		23-32-21	150, 152-199
	5		W1447	907	20		23-32-21	150, 152-199
	6		W1447	908	20		23-32-21	150, 152-199
	7		W1447	909	20		23-32-21	150, 152-199
	8		W1447	910	20		23-32-21	150, 152-199
	9		W1447	911	20		23-32-21	150, 152-199
	10		W1447	911Z			23-32-21	150, 152-199
	11		W1447	912	20		23-32-21	150, 152-199
	12		W1447	913	20		23-32-21	150, 152-199
	13	UNUSED						150, 152-199
	14	UNUSED						150, 152-199
	15	UNUSED						150, 152-199
	16	UNUSED						150, 152-199

HOOKUP LIST
D280T132



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D09091P		AP0405/ /		PLUG (continued)				150, 152-199
	17	UNUSED						150, 152-199
	18	UNUSED						150, 152-199
	19	UNUSED						150, 152-199
	20	UNUSED						150, 152-199
	21	UNUSED						150, 152-199
	22	UNUSED						150, 152-199
	23	UNUSED						150, 152-199
	24	UNUSED						150, 152-199
	25	UNUSED						150, 152-199
	26	UNUSED						150, 152-199
	27	UNUSED						150, 152-199
	28	UNUSED						150, 152-199
D09093J		E090-90/ /		RECEPT				150, 152-199
	=A1	UNUSED						150, 152-199
	=C1	UNUSED						150, 152-199
	A	UNUSED						150, 152-199
	B		W9077	903Y	26		23-19-11	150, 152-199
	C		W9077	903G	26		23-19-11	150, 152-199
	D		W9077	FRC			23-19-11	150, 152-199
	E		W9077	902R	26		23-19-11	150, 152-199
	F		W9077	902B	26		23-19-11	150, 152-199
	G	UNUSED						150, 152-199
	H	UNUSED						150, 152-199
	I	UNUSED						150, 152-199
	J	UNUSED						150, 152-199
	K	UNUSED						150, 152-199
	L	UNUSED						150, 152-199
	M	UNUSED						150, 152-199
	N	UNUSED						150, 152-199
	O	UNUSED						150, 152-199
	P	UNUSED						150, 152-199
	Q	UNUSED						150, 152-199
	R	UNUSED						150, 152-199
	S	UNUSED						150, 152-199
	T	UNUSED						150, 152-199
	U	UNUSED						150, 152-199
	V	UNUSED						150, 152-199
	W	UNUSED						150, 152-199
	X	UNUSED						150, 152-199

HOOKUP LIST

D280T132

91-21-51

Section D09000

Page 89

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D09093J		E090-90/ /		RECEPT (continued)				150, 152-199
	Y	UNUSED						150, 152-199
	Z	UNUSED						150, 152-199
			W9077	902Z			23-19-11	150, 152-199
			W9077	903Z			23-19-11	150, 152-199
			W9077	FRC			23-19-11	150, 152-199
	A-	UNUSED						150, 152-199
	B-	UNUSED						150, 152-199
	C-	UNUSED						150, 152-199
	D-	UNUSED						150, 152-199
	E-	UNUSED						150, 152-199
	F-	UNUSED						150, 152-199
	G-	UNUSED						150, 152-199
	H-	UNUSED						150, 152-199
	I-	UNUSED						150, 152-199
	J-	UNUSED						150, 152-199
	K-	UNUSED						150, 152-199
	L-	UNUSED						150, 152-199
	M-	UNUSED						150, 152-199
	N-	UNUSED						150, 152-199
	O-	UNUSED						150, 152-199
	P-	UNUSED						150, 152-199
	Q-	UNUSED						150, 152-199
	R-	UNUSED						150, 152-199
	S-	UNUSED						150, 152-199
	T-	UNUSED						150, 152-199
	U-	UNUSED						150, 152-199
	V-	UNUSED						150, 152-199
	W-	UNUSED						150, 152-199
	X-	UNUSED						150, 152-199
	Y-	UNUSED						150, 152-199
	Z-	UNUSED						150, 152-199
D09094J		E090-90/ /		RECEPT				150, 152-199
	=A1	UNUSED						150, 152-199
	=C1	UNUSED						150, 152-199
	A	UNUSED						150, 152-199
	B		W9077	905Y	26		23-19-11	150, 152-199
	C		W9077	905G	26		23-19-11	150, 152-199
	D		W9077	FRE			23-19-11	150, 152-199
	E		W9077	904R	26		23-19-11	150, 152-199

HOOKUP LIST
D280T132

91-21-51
Section D09000
Page 90
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D09094J		E090-90/ /		RECEPT (continued)				150, 152-199
	F		W9077	904B	26		23-19-11	150, 152-199
	G	UNUSED						150, 152-199
	H	UNUSED						150, 152-199
	I	UNUSED						150, 152-199
	J	UNUSED						150, 152-199
	K	UNUSED						150, 152-199
	L	UNUSED						150, 152-199
	M	UNUSED						150, 152-199
	N	UNUSED						150, 152-199
	O	UNUSED						150, 152-199
	P	UNUSED						150, 152-199
	Q	UNUSED						150, 152-199
	R	UNUSED						150, 152-199
	S	UNUSED						150, 152-199
	T	UNUSED						150, 152-199
	U	UNUSED						150, 152-199
	V	UNUSED						150, 152-199
	W	UNUSED						150, 152-199
	X	UNUSED						150, 152-199
	Y	UNUSED						150, 152-199
	Z	UNUSED						150, 152-199
			W9077	904Z			23-19-11	150, 152-199
			W9077	905Z			23-19-11	150, 152-199
			W9077	FRE			23-19-11	150, 152-199
	A-	UNUSED						150, 152-199
	B-	UNUSED						150, 152-199
	C-	UNUSED						150, 152-199
	D-	UNUSED						150, 152-199
	E-	UNUSED						150, 152-199
	F-	UNUSED						150, 152-199
	G-	UNUSED						150, 152-199
	H-	UNUSED						150, 152-199
	I-	UNUSED						150, 152-199
	J-	UNUSED						150, 152-199
	K-	UNUSED						150, 152-199
	L-	UNUSED						150, 152-199
	M-	UNUSED						150, 152-199
	N-	UNUSED						150, 152-199
	O-	UNUSED						150, 152-199
	P-	UNUSED						150, 152-199

HOOKUP LIST

D280T132

91-21-51

Section D09000

Page 91

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D09094J		E090-90/ /		RECEPT (continued)				150, 152-199
	Q-	UNUSED						150, 152-199
	R-	UNUSED						150, 152-199
	S-	UNUSED						150, 152-199
	T-	UNUSED						150, 152-199
	U-	UNUSED						150, 152-199
	V-	UNUSED						150, 152-199
	W-	UNUSED						150, 152-199
	X-	UNUSED						150, 152-199
	Y-	UNUSED						150, 152-199
	Z-	UNUSED						150, 152-199
D09095J		E090-90/ /		RECEPT				150, 152-199
	=A1	UNUSED						150, 152-199
	=C1	UNUSED						150, 152-199
	A		W9077	906W	24		23-19-11	150, 152-199
	B		W9077	906B	24		23-19-11	150, 152-199
	C		W9077	907W	24		23-19-11	150, 152-199
	D		W9077	907B	24		23-19-11	150, 152-199
	E		W9077	909W	24		23-19-11	150, 152-199
	F		W9077	909B	24		23-19-11	150, 152-199
	G		W9077	908W	24		23-19-11	150, 152-199
	H		W9077	908B	24		23-19-11	150, 152-199
	I	UNUSED						150, 152-199
	J		W9077	FRG			23-19-11	150, 152-199
	K		W9077	FRI			23-19-11	150, 152-199
	L	UNUSED						150, 152-199
	M	UNUSED						150, 152-199
	N	UNUSED						150, 152-199
	O	UNUSED						150, 152-199
	P	UNUSED						150, 152-199
	Q	UNUSED						150, 152-199
	R	UNUSED						150, 152-199
	S	UNUSED						150, 152-199
	T	UNUSED						150, 152-199
	U	UNUSED						150, 152-199
	V	UNUSED						150, 152-199
	W	UNUSED						150, 152-199
	X	UNUSED						150, 152-199
	Y	UNUSED						150, 152-199
	Z	UNUSED						150, 152-199

HOOKUP LIST

D280T132

91-21-51

Section D09000

Page 92

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D09095J		E090-90/ /		RECEPT (continued)				150, 152-199
			W9077	906Z			23-19-11	150, 152-199
			W9077	907Z			23-19-11	150, 152-199
			W9077	908Z			23-19-11	150, 152-199
			W9077	909Z			23-19-11	150, 152-199
			W9077	FRG			23-19-11	150, 152-199
			W9077	FRI			23-19-11	150, 152-199
	A-	UNUSED						150, 152-199
	B-	UNUSED						150, 152-199
	C-	UNUSED						150, 152-199
	D-	UNUSED						150, 152-199
	E-	UNUSED						150, 152-199
	F-	UNUSED						150, 152-199
	G-	UNUSED						150, 152-199
	H-	UNUSED						150, 152-199
	I-	UNUSED						150, 152-199
	J-	UNUSED						150, 152-199
	K-	UNUSED						150, 152-199
	L-	UNUSED						150, 152-199
	M-	UNUSED						150, 152-199
	N-	UNUSED						150, 152-199
	O-	UNUSED						150, 152-199
	P-	UNUSED						150, 152-199
	Q-	UNUSED						150, 152-199
	R-	UNUSED						150, 152-199
	S-	UNUSED						150, 152-199
	T-	UNUSED						150, 152-199
	U-	UNUSED						150, 152-199
	V-	UNUSED						150, 152-199
	W-	UNUSED						150, 152-199
	X-	UNUSED						150, 152-199
	Y-	UNUSED						150, 152-199
	Z-	UNUSED						150, 152-199
D09096J		E090-90/ /		RECEPT				150, 152-199
	= A1	UNUSED						150, 152-199
	= C1	UNUSED						150, 152-199
	A		W9077	907	24		23-19-11	150, 152-199
	B		W9077	908	24		23-19-11	150, 152-199
	C		W9077	909	24		23-19-11	150, 152-199
	D		W9077	910	24		23-19-11	150, 152-199

HOOKUP LIST

D280T132

91-21-51

Section D09000

Page 93

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D09096J		E090-90/ /		RECEPT (continued)				150, 152-199
	E		W9077	911	24		23-19-11	150, 152-199
	F		W9077	912	24		23-19-11	150, 152-199
	G		W9077	913	24		23-19-11	150, 152-199
	H		W9077	914	24		23-19-11	150, 152-199
	I	UNUSED						150, 152-199
	J		W9077	915	24		23-19-11	150, 152-199
	K		W9077	916	24		23-19-11	150, 152-199
	L		W9077	917	24		23-19-11	150, 152-199
	M		W9077	918	24		23-19-11	150, 152-199
	N		W9077	919	24		23-19-11	150, 152-199
	O	UNUSED						150, 152-199
	P		W9077	920	24		23-19-11	150, 152-199
	Q	UNUSED						150, 152-199
	R		W9077	921	24		23-19-11	150, 152-199
	S		W9077	922	24		23-19-11	150, 152-199
	T		W9077	923	24		23-19-11	150, 152-199
	U		W9077	924	24		23-19-11	150, 152-199
	V		W9077	925	24		23-19-11	150, 152-199
	W		W9077	926	24		23-19-11	150, 152-199
	X		W9077	927	24		23-19-11	150, 152-199
	Y		W9077	928	24		23-19-11	150, 152-199
	Z		W9077	929	24		23-19-11	150, 152-199
	A-		W9077	930	24		23-19-11	150, 152-199
	B-		W9077	931	24		23-19-11	150, 152-199
	C-	UNUSED						150, 152-199
	D-	UNUSED						150, 152-199
	E-	UNUSED						150, 152-199
	F-	UNUSED						150, 152-199
	G-	UNUSED						150, 152-199
	H-	UNUSED						150, 152-199
	I-	UNUSED						150, 152-199
	J-	UNUSED						150, 152-199
	K-	UNUSED						150, 152-199
	L-	UNUSED						150, 152-199
	M-	UNUSED						150, 152-199
	N-	UNUSED						150, 152-199
	O-	UNUSED						150, 152-199
	P-	UNUSED						150, 152-199
	Q-	UNUSED						150, 152-199
	R-	UNUSED						150, 152-199

HOOKUP LIST

D280T132

91-21-51

Section D09000

Page 94

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D09096J		E090-90/ /		RECEPT (continued)				150, 152-199
	S-	UNUSED						150, 152-199
	T-	UNUSED						150, 152-199
	U-	UNUSED						150, 152-199
	V-	UNUSED						150, 152-199
	W-	UNUSED						150, 152-199
	X-	UNUSED						150, 152-199
	Y-	UNUSED						150, 152-199
	Z-	UNUSED						150, 152-199
D09097J		E090-90/ /		RECEPT				150, 152-199
	=A1	UNUSED						150, 152-199
	=C1	UNUSED						150, 152-199
	A		W9077	968GY	24		23-19-11	150, 152-199
	B		W9077	964GY	24		23-19-11	150, 152-199
	C		W9077	964W	24		23-19-11	150, 152-199
	D	UNUSED						150, 152-199
	E		W9077	972GY	24		23-19-11	150, 152-199
	F		W9077	972W	24		23-19-11	150, 152-199
	G	UNUSED						150, 152-199
	H		W9077	976GY	24		23-19-11	150, 152-199
	I	UNUSED						150, 152-199
	J		W9077	976W	24		23-19-11	150, 152-199
	K		W9077	980GY	24		23-19-11	150, 152-199
	L		W9077	980W	24		23-19-11	150, 152-199
	M		W9077	968W	24		23-19-11	150, 152-199
	N		W9077	968Z			23-19-11	150, 152-199
	O	UNUSED						150, 152-199
	P		W9077	964Z			23-19-11	150, 152-199
	Q	UNUSED						150, 152-199
	R	UNUSED						150, 152-199
	S		W9077	972Z			23-19-11	150, 152-199
	T		W9077	976Z			23-19-11	150, 152-199
	U		W9077	980Z			23-19-11	150, 152-199
	V	UNUSED						150, 152-199
	W	UNUSED						150, 152-199
	X	UNUSED						150, 152-199
	Y	UNUSED						150, 152-199
	Z	UNUSED						150, 152-199
	A-	UNUSED						150, 152-199
	B-	UNUSED						150, 152-199

HOOKUP LIST

D280T132

91-21-51

Section D09000

Page 95

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D09097J		E090-90/ /		RECEPT (continued)				150, 152-199
	C-	UNUSED						150, 152-199
	D-	UNUSED						150, 152-199
	E-	UNUSED						150, 152-199
	F-	UNUSED						150, 152-199
	G-	UNUSED						150, 152-199
	H-	UNUSED						150, 152-199
	I-	UNUSED						150, 152-199
	J-	UNUSED						150, 152-199
	K-	UNUSED						150, 152-199
	L-	UNUSED						150, 152-199
	M-	UNUSED						150, 152-199
	N-	UNUSED						150, 152-199
	O-	UNUSED						150, 152-199
	P-	UNUSED						150, 152-199
	Q-	UNUSED						150, 152-199
	R-	UNUSED						150, 152-199
	S-	UNUSED						150, 152-199
	T-	UNUSED						150, 152-199
	U-	UNUSED						150, 152-199
	V-	UNUSED						150, 152-199
	W-	UNUSED						150, 152-199
	X-	UNUSED						150, 152-199
	Y-	UNUSED						150, 152-199
	Z-	UNUSED						150, 152-199
D09098J		E090-90/ /		RECEPT				150, 152-199
	=A1	UNUSED						150, 152-199
	=C1	UNUSED						150, 152-199
	A		W9077	968GY	24		23-19-11	150, 152-199
	B		W9077	968W	24		23-19-11	150, 152-199
	C		W9077	966Y	24		23-19-11	150, 152-199
	D		W9077	966G	24		23-19-11	150, 152-199
	E		W9077	965R	24		23-19-11	150, 152-199
	F		W9077	965B	24		23-19-11	150, 152-199
	G		W9077	FRK			23-19-11	150, 152-199
	H		W9077	FRR			23-19-11	150, 152-199
	I	UNUSED						150, 152-199
	J		W9077	985G	16		23-19-11	150, 152-199
	K		W9077	985W	16		23-19-11	150, 152-199
	L		W9077	985O	16		23-19-11	150, 152-199

HOOKUP LIST
D280T132

91-21-51
Section D09000
Page 96
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D09098J		E090-90/ /		RECEPT (continued)				150, 152-199
	M		W9077	985B	16		23-19-11	150, 152-199
	N	UNUSED						150, 152-199
	O	UNUSED						150, 152-199
	P	UNUSED						150, 152-199
	Q	UNUSED						150, 152-199
	R	UNUSED						150, 152-199
	S	UNUSED						150, 152-199
	T	UNUSED						150, 152-199
	U	UNUSED						150, 152-199
	V	UNUSED						150, 152-199
	W	UNUSED						150, 152-199
	X	UNUSED						150, 152-199
	Y	UNUSED						150, 152-199
	Z	UNUSED						150, 152-199
			W9077	965Z			23-19-11	150, 152-199
			W9077	966Z			23-19-11	150, 152-199
			W9077	967	22		23-19-11	150, 152-199
			W9077	968Z			23-19-11	150, 152-199
			W9077	985Z			23-19-11	150, 152-199
			W9077	FRK			23-19-11	150, 152-199
			W9077	FRR			23-19-11	150, 152-199
	A-	UNUSED						150, 152-199
	B-	UNUSED						150, 152-199
	C-	UNUSED						150, 152-199
	D-	UNUSED						150, 152-199
	E-	UNUSED						150, 152-199
	F-	UNUSED						150, 152-199
	G-	UNUSED						150, 152-199
	H-	UNUSED						150, 152-199
	I-	UNUSED						150, 152-199
	J-	UNUSED						150, 152-199
	K-	UNUSED						150, 152-199
	L-	UNUSED						150, 152-199
	M-	UNUSED						150, 152-199
	N-	UNUSED						150, 152-199
	O-	UNUSED						150, 152-199
	P-	UNUSED						150, 152-199
	Q-	UNUSED						150, 152-199
	R-	UNUSED						150, 152-199
	S-	UNUSED						150, 152-199

HOOKUP LIST

D280T132

91-21-51

Section D09000

Page 97

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D09098J		E090-90/ /		RECEPT (continued)				150, 152-199
	T-	UNUSED						150, 152-199
	U-	UNUSED						150, 152-199
	V-	UNUSED						150, 152-199
	W-	UNUSED						150, 152-199
	X-	UNUSED						150, 152-199
	Y-	UNUSED						150, 152-199
	Z-	UNUSED						150, 152-199
D09099J		E090-90/ /		RECEPT				150, 152-199
	=A1	UNUSED						150, 152-199
	=C1	UNUSED						150, 152-199
	A		W9077	976GY	24		23-19-11	150, 152-199
	B		W9077	976W	24		23-19-11	150, 152-199
	C		W9077	974Y	24		23-19-11	150, 152-199
	D		W9077	974G	24		23-19-11	150, 152-199
	E		W9077	973R	24		23-19-11	150, 152-199
	F		W9077	973B	24		23-19-11	150, 152-199
	G		W9077	FR3			23-19-11	150, 152-199
	H		W9077	FRV			23-19-11	150, 152-199
	I	UNUSED						150, 152-199
	J		W9077	988G	16		23-19-11	150, 152-199
	K		W9077	988W	16		23-19-11	150, 152-199
	L		W9077	988O	16		23-19-11	150, 152-199
	M		W9077	988B	16		23-19-11	150, 152-199
	N	UNUSED						150, 152-199
	O	UNUSED						150, 152-199
	P	UNUSED						150, 152-199
	Q	UNUSED						150, 152-199
	R	UNUSED						150, 152-199
	S	UNUSED						150, 152-199
	T	UNUSED						150, 152-199
	U	UNUSED						150, 152-199
	V	UNUSED						150, 152-199
	W	UNUSED						150, 152-199
	X	UNUSED						150, 152-199
	Y	UNUSED						150, 152-199
	Z	UNUSED						150, 152-199
			W9077	973Z			23-19-11	150, 152-199
			W9077	974Z			23-19-11	150, 152-199
			W9077	975	22		23-19-11	150, 152-199

HOOKUP LIST
D280T132

91-21-51
Section D09000
Page 98
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D09099J		E090-90/ /		RECEPT (continued)				150, 152-199
			W9077	976Z			23-19-11	150, 152-199
			W9077	988Z			23-19-11	150, 152-199
			W9077	FR3			23-19-11	150, 152-199
			W9077	FRV			23-19-11	150, 152-199
	A-	UNUSED						150, 152-199
	B-	UNUSED						150, 152-199
	C-	UNUSED						150, 152-199
	D-	UNUSED						150, 152-199
	E-	UNUSED						150, 152-199
	F-	UNUSED						150, 152-199
	G-	UNUSED						150, 152-199
	H-	UNUSED						150, 152-199
	I-	UNUSED						150, 152-199
	J-	UNUSED						150, 152-199
	K-	UNUSED						150, 152-199
	L-	UNUSED						150, 152-199
	M-	UNUSED						150, 152-199
	N-	UNUSED						150, 152-199
	O-	UNUSED						150, 152-199
	P-	UNUSED						150, 152-199
	Q-	UNUSED						150, 152-199
	R-	UNUSED						150, 152-199
	S-	UNUSED						150, 152-199
	T-	UNUSED						150, 152-199
	U-	UNUSED						150, 152-199
	V-	UNUSED						150, 152-199
	W-	UNUSED						150, 152-199
	X-	UNUSED						150, 152-199
	Y-	UNUSED						150, 152-199
	Z-	UNUSED						150, 152-199

HOOKUP LIST

D280T132

91-21-51

Section D09000

Page 99 End

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D09100J		E090-90/ /		RECEPT				150, 152-199
	= A1	UNUSED						150, 152-199
	= C1	UNUSED						150, 152-199
	A		W9077	980GY	24		23-19-11	150, 152-199
	B		W9077	980W	24		23-19-11	150, 152-199
	C		W9077	978Y	24		23-19-11	150, 152-199
	D		W9077	978G	24		23-19-11	150, 152-199
	E		W9077	977R	24		23-19-11	150, 152-199
	F		W9077	977B	24		23-19-11	150, 152-199
	G		W9077	FR4			23-19-11	150, 152-199
	H		W9077	FRX			23-19-11	150, 152-199
	I	UNUSED						150, 152-199
	J		W9077	989G	16		23-19-11	150, 152-199
	K		W9077	989W	16		23-19-11	150, 152-199
	L		W9077	989O	16		23-19-11	150, 152-199
	M		W9077	989B	16		23-19-11	150, 152-199
	N	UNUSED						150, 152-199
	O	UNUSED						150, 152-199
	P	UNUSED						150, 152-199
	Q	UNUSED						150, 152-199
	R	UNUSED						150, 152-199
	S	UNUSED						150, 152-199
	T	UNUSED						150, 152-199
	U	UNUSED						150, 152-199
	V	UNUSED						150, 152-199
	W	UNUSED						150, 152-199
	X	UNUSED						150, 152-199
	Y	UNUSED						150, 152-199
	Z	UNUSED						150, 152-199
			W9077	977Z			23-19-11	150, 152-199
			W9077	978Z			23-19-11	150, 152-199
			W9077	979	22		23-19-11	150, 152-199
			W9077	980Z			23-19-11	150, 152-199
			W9077	989Z			23-19-11	150, 152-199
			W9077	FR4			23-19-11	150, 152-199
			W9077	FRX			23-19-11	150, 152-199
	A-	UNUSED						150, 152-199
	B-	UNUSED						150, 152-199
	C-	UNUSED						150, 152-199
	D-	UNUSED						150, 152-199
	E-	UNUSED						150, 152-199

HOOKUP LIST

D280T132

91-21-51

Section D09100

Page 1

Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D09100J		E090-90/ /		RECEPT (continued)				150, 152-199
	F-	UNUSED						150, 152-199
	G-	UNUSED						150, 152-199
	H-	UNUSED						150, 152-199
	I-	UNUSED						150, 152-199
	J-	UNUSED						150, 152-199
	K-	UNUSED						150, 152-199
	L-	UNUSED						150, 152-199
	M-	UNUSED						150, 152-199
	N-	UNUSED						150, 152-199
	O-	UNUSED						150, 152-199
	P-	UNUSED						150, 152-199
	Q-	UNUSED						150, 152-199
	R-	UNUSED						150, 152-199
	S-	UNUSED						150, 152-199
	T-	UNUSED						150, 152-199
	U-	UNUSED						150, 152-199
	V-	UNUSED						150, 152-199
	W-	UNUSED						150, 152-199
	X-	UNUSED						150, 152-199
	Y-	UNUSED						150, 152-199
	Z-	UNUSED						150, 152-199
D09101P		MULTI/ /		PLUG				150, 152-199
	1		W9062	903R	18		23-19-11	150, 152-199
	1		W9063	903R	18		23-19-11	150, 152-199
	1		W9064	903R	18		23-19-11	150, 152-199
	1		W9065	903R	18		23-19-11	150, 152-199
	1		W9067	903R	18		23-19-11	150, 152-199
	1		W9068	903R	18		23-19-11	150, 152-199
	2		W9062	903B	18		23-19-11	150, 152-199
	2		W9063	903B	18		23-19-11	150, 152-199
	2		W9064	903B	18		23-19-11	150, 152-199
	2		W9065	903B	18		23-19-11	150, 152-199
	2		W9067	903B	18		23-19-11	150, 152-199
	2		W9068	903B	18		23-19-11	150, 152-199
	3		W9062	902Z			23-19-11	150, 152-199
	3		W9063	902Z			23-19-11	150, 152-199
	3		W9064	902Z			23-19-11	150, 152-199
	3		W9065	902Z			23-19-11	150, 152-199
	3		W9067	902Z			23-19-11	150, 152-199

HOOKUP LIST

D280T132

91-21-51

Section D09100

Page 2

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D09101P		MULTI / /		PLUG (continued)				150, 152-199
	3		W9068	902Z			23-19-11	150, 152-199
	4		W9062	902Y	26		23-19-11	150, 152-199
	4		W9063	902Y	26		23-19-11	150, 152-199
	4		W9064	902Y	26		23-19-11	150, 152-199
	4		W9065	902Y	26		23-19-11	150, 152-199
	4		W9067	902Y	26		23-19-11	150, 152-199
	4		W9068	902Y	26		23-19-11	150, 152-199
	5		W9062	901R	26		23-19-11	150, 152-199
	5		W9063	901R	26		23-19-11	150, 152-199
	5		W9064	901R	26		23-19-11	150, 152-199
	5		W9065	901R	26		23-19-11	150, 152-199
	5		W9067	901R	26		23-19-11	150, 152-199
	5		W9068	901R	26		23-19-11	150, 152-199
	6	UNUSED						150, 152-199
	7	UNUSED						150, 152-199
	8	UNUSED						150, 152-199
	9		W9062	903G	18		23-19-11	150, 152-199
	9		W9063	903G	18		23-19-11	150, 152-199
	9		W9064	903G	18		23-19-11	150, 152-199
	9		W9065	903G	18		23-19-11	150, 152-199
	9		W9067	903G	18		23-19-11	150, 152-199
	9		W9068	903G	18		23-19-11	150, 152-199
	10	UNUSED						150, 152-199
	11		W9062	902G	26		23-19-11	150, 152-199
	11		W9063	902G	26		23-19-11	150, 152-199
	11		W9064	902G	26		23-19-11	150, 152-199
	11		W9065	902G	26		23-19-11	150, 152-199
	11		W9067	902G	26		23-19-11	150, 152-199
	11		W9068	902G	26		23-19-11	150, 152-199
	12		W9062	901Z			23-19-11	150, 152-199
	12		W9063	901Z			23-19-11	150, 152-199
	12		W9064	901Z			23-19-11	150, 152-199
	12		W9065	901Z			23-19-11	150, 152-199
	12		W9067	901Z			23-19-11	150, 152-199
	12		W9068	901Z			23-19-11	150, 152-199
	13		W9062	901B	26		23-19-11	150, 152-199
	13		W9063	901B	26		23-19-11	150, 152-199
	13		W9064	901B	26		23-19-11	150, 152-199
	13		W9065	901B	26		23-19-11	150, 152-199
	13		W9067	901B	26		23-19-11	150, 152-199

HOOKUP LIST

D280T132

91-21-51

Section D09100

Page 3

Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D09101P		MULTI /		PLUG (continued)				150, 152-199
	13		W9068	901B	26		23-19-11	150, 152-199
	14	UNUSED						150, 152-199
	15	UNUSED						150, 152-199
	16	UNUSED						150, 152-199
	17	UNUSED						150, 152-199
	18	UNUSED						150, 152-199
	19	UNUSED						150, 152-199
	20	UNUSED						150, 152-199
	21	UNUSED						150, 152-199
	22	UNUSED						150, 152-199
	23	UNUSED						150, 152-199
	24	UNUSED						150, 152-199
	25	UNUSED						150, 152-199
	26	UNUSED						150, 152-199
	27	UNUSED						150, 152-199
	28	UNUSED						150, 152-199
	29	UNUSED						150, 152-199
	30	UNUSED						150, 152-199
	31	UNUSED						150, 152-199
	32	UNUSED						150, 152-199
	33	UNUSED						150, 152-199
	34	UNUSED						150, 152-199
	35	UNUSED						150, 152-199
	36	UNUSED						150, 152-199
	37	UNUSED						150, 152-199
	38	UNUSED						150, 152-199
	39	UNUSED						150, 152-199
	40	UNUSED						150, 152-199
	41	UNUSED						150, 152-199
	42	UNUSED						150, 152-199
	43	UNUSED						150, 152-199
	44	UNUSED						150, 152-199
	45	UNUSED						150, 152-199
	46	UNUSED						150, 152-199
	47	UNUSED						150, 152-199
	48	UNUSED						150, 152-199
	49	UNUSED						150, 152-199
	50	UNUSED						150, 152-199
	51	UNUSED						150, 152-199
	52	UNUSED						150, 152-199

HOOKUP LIST

D280T132

91-21-51

Section D09100

Page 4

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D09101P		MULTI/ /		PLUG (continued)				150, 152-199
	53	UNUSED						150, 152-199
	54	UNUSED						150, 152-199
	= C27	UNUSED						150, 152-199
	= CC	D	W9062	YAA			23-19-11	150, 152-199
	= CC	D	W9063	YAA			23-19-11	150, 152-199
	= CC	D	W9064	YAA			23-19-11	150, 152-199
	= CC	D	W9065	YAA			23-19-11	150, 152-199
	= CC	D	W9067	YAA			23-19-11	150, 152-199
	= CC	D	W9068	YAA			23-19-11	150, 152-199
D09102P		MULTI/ /		PLUG				150, 152-199
	1		W9059	903R	18		23-19-11	150, 152-199
	1		W9060	903R	18		23-19-11	150, 152-199
	1		W9061	903R	18		23-19-11	150, 152-199
	1		W9062	903R	18		23-19-11	150, 152-199
	1		W9063	903R	18		23-19-11	150, 152-199
	1		W9064	903R	18		23-19-11	150, 152-199
	1		W9065	903R	18		23-19-11	150, 152-199
	1		W9067	903R	18		23-19-11	150, 152-199
	1		W9068	903R	18		23-19-11	150, 152-199
	1		W9074	903R	18		23-19-11	150, 152-199
	1		W9075	903R	18		23-19-11	150, 152-199
	1		W9076	903R	18		23-19-11	150, 152-199
	2		W9059	903B	18		23-19-11	150, 152-199
	2		W9060	903B	18		23-19-11	150, 152-199
	2		W9061	903B	18		23-19-11	150, 152-199
	2		W9062	903B	18		23-19-11	150, 152-199
	2		W9063	903B	18		23-19-11	150, 152-199
	2		W9064	903B	18		23-19-11	150, 152-199
	2		W9065	903B	18		23-19-11	150, 152-199
	2		W9067	903B	18		23-19-11	150, 152-199
	2		W9068	903B	18		23-19-11	150, 152-199
	2		W9074	903B	18		23-19-11	150, 152-199
	2		W9075	903B	18		23-19-11	150, 152-199
	2		W9076	903B	18		23-19-11	150, 152-199
	3		W9059	902Z			23-19-11	150, 152-199
	3		W9060	902Z			23-19-11	150, 152-199
	3		W9061	902Z			23-19-11	150, 152-199
	3		W9062	902Z			23-19-11	150, 152-199
	3		W9063	902Z			23-19-11	150, 152-199

HOOKUP LIST

D280T132

91-21-51

Section D09100

Page 5

Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D09102P		MULTI/ /		PLUG (continued)				150, 152-199
	3		W9064	902Z			23-19-11	150, 152-199
	3		W9065	902Z			23-19-11	150, 152-199
	3		W9067	902Z			23-19-11	150, 152-199
	3		W9068	902Z			23-19-11	150, 152-199
	3		W9074	902Z			23-19-11	150, 152-199
	3		W9075	902Z			23-19-11	150, 152-199
	3		W9076	902Z			23-19-11	150, 152-199
	4		W9059	902Y	26		23-19-11	150, 152-199
	4		W9060	902Y	26		23-19-11	150, 152-199
	4		W9061	902Y	26		23-19-11	150, 152-199
	4		W9062	902Y	26		23-19-11	150, 152-199
	4		W9063	902Y	26		23-19-11	150, 152-199
	4		W9064	902Y	26		23-19-11	150, 152-199
	4		W9065	902Y	26		23-19-11	150, 152-199
	4		W9067	902Y	26		23-19-11	150, 152-199
	4		W9068	902Y	26		23-19-11	150, 152-199
	4		W9074	902Y	26		23-19-11	150, 152-199
	4		W9075	902Y	26		23-19-11	150, 152-199
	4		W9076	902Y	26		23-19-11	150, 152-199
	5		W9059	901R	26		23-19-11	150, 152-199
	5		W9060	901R	26		23-19-11	150, 152-199
	5		W9061	901R	26		23-19-11	150, 152-199
	5		W9062	901R	26		23-19-11	150, 152-199
	5		W9063	901R	26		23-19-11	150, 152-199
	5		W9064	901R	26		23-19-11	150, 152-199
	5		W9065	901R	26		23-19-11	150, 152-199
	5		W9067	901R	26		23-19-11	150, 152-199
	5		W9068	901R	26		23-19-11	150, 152-199
	5		W9074	901R	26		23-19-11	150, 152-199
	5		W9075	901R	26		23-19-11	150, 152-199
	5		W9076	901R	26		23-19-11	150, 152-199
	6	UNUSED						150, 152-199
	7	UNUSED						150, 152-199
	8	UNUSED						150, 152-199
	9		W9059	903G	18		23-19-11	150, 152-199
	9		W9060	903G	18		23-19-11	150, 152-199
	9		W9061	903G	18		23-19-11	150, 152-199
	9		W9062	903G	18		23-19-11	150, 152-199
	9		W9063	903G	18		23-19-11	150, 152-199
	9		W9064	903G	18		23-19-11	150, 152-199

HOOKUP LIST

D280T132

91-21-51

Section D09100

Page 6

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D09102P		MULTI / /		PLUG (continued)				150, 152-199
	9		W9065	903G	18		23-19-11	150, 152-199
	9		W9067	903G	18		23-19-11	150, 152-199
	9		W9068	903G	18		23-19-11	150, 152-199
	9		W9074	903G	18		23-19-11	150, 152-199
	9		W9075	903G	18		23-19-11	150, 152-199
	9		W9076	903G	18		23-19-11	150, 152-199
	10	UNUSED						150, 152-199
	11		W9059	902G	26		23-19-11	150, 152-199
	11		W9060	902G	26		23-19-11	150, 152-199
	11		W9061	902G	26		23-19-11	150, 152-199
	11		W9062	902G	26		23-19-11	150, 152-199
	11		W9063	902G	26		23-19-11	150, 152-199
	11		W9064	902G	26		23-19-11	150, 152-199
	11		W9065	902G	26		23-19-11	150, 152-199
	11		W9067	902G	26		23-19-11	150, 152-199
	11		W9068	902G	26		23-19-11	150, 152-199
	11		W9074	902G	26		23-19-11	150, 152-199
	11		W9075	902G	26		23-19-11	150, 152-199
	11		W9076	902G	26		23-19-11	150, 152-199
	12		W9059	901Z			23-19-11	150, 152-199
	12		W9060	901Z			23-19-11	150, 152-199
	12		W9061	901Z			23-19-11	150, 152-199
	12		W9062	901Z			23-19-11	150, 152-199
	12		W9063	901Z			23-19-11	150, 152-199
	12		W9064	901Z			23-19-11	150, 152-199
	12		W9065	901Z			23-19-11	150, 152-199
	12		W9067	901Z			23-19-11	150, 152-199
	12		W9068	901Z			23-19-11	150, 152-199
	12		W9074	901Z			23-19-11	150, 152-199
	12		W9075	901Z			23-19-11	150, 152-199
	12		W9076	901Z			23-19-11	150, 152-199
	13		W9059	901B	26		23-19-11	150, 152-199
	13		W9060	901B	26		23-19-11	150, 152-199
	13		W9061	901B	26		23-19-11	150, 152-199
	13		W9062	901B	26		23-19-11	150, 152-199
	13		W9063	901B	26		23-19-11	150, 152-199
	13		W9064	901B	26		23-19-11	150, 152-199
	13		W9065	901B	26		23-19-11	150, 152-199
	13		W9067	901B	26		23-19-11	150, 152-199
	13		W9068	901B	26		23-19-11	150, 152-199

HOOKUP LIST

D280T132

91-21-51

Section D09100

Page 7

Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D09102P		MULTI /		PLUG (continued)				150, 152-199
	13		W9074	901B	26		23-19-11	150, 152-199
	13		W9075	901B	26		23-19-11	150, 152-199
	13		W9076	901B	26		23-19-11	150, 152-199
	14	UNUSED						150, 152-199
	15	UNUSED						150, 152-199
	16	UNUSED						150, 152-199
	17	UNUSED						150, 152-199
	18	UNUSED						150, 152-199
	19	UNUSED						150, 152-199
	20	UNUSED						150, 152-199
	21	UNUSED						150, 152-199
	22	UNUSED						150, 152-199
	23	UNUSED						150, 152-199
	24	UNUSED						150, 152-199
	25	UNUSED						150, 152-199
	26	UNUSED						150, 152-199
	27	UNUSED						150, 152-199
	28	UNUSED						150, 152-199
	29	UNUSED						150, 152-199
	30	UNUSED						150, 152-199
	31	UNUSED						150, 152-199
	32	UNUSED						150, 152-199
	33	UNUSED						150, 152-199
	34	UNUSED						150, 152-199
	35	UNUSED						150, 152-199
	36	UNUSED						150, 152-199
	37	UNUSED						150, 152-199
	38	UNUSED						150, 152-199
	39	UNUSED						150, 152-199
	40	UNUSED						150, 152-199
	41	UNUSED						150, 152-199
	42	UNUSED						150, 152-199
	43	UNUSED						150, 152-199
	44	UNUSED						150, 152-199
	45	UNUSED						150, 152-199
	46	UNUSED						150, 152-199
	47	UNUSED						150, 152-199
	48	UNUSED						150, 152-199
	49	UNUSED						150, 152-199
	50	UNUSED						150, 152-199

HOOKUP LIST

D280T132

91-21-51

Section D09100

Page 8

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D09102P		MULTI/ /		PLUG (continued)				150, 152-199
	51	UNUSED						150, 152-199
	52	UNUSED						150, 152-199
	53	UNUSED						150, 152-199
	54	UNUSED						150, 152-199
	= C27	UNUSED						150, 152-199
	= CC	D	W9059	YAA			23-19-11	150, 152-199
	= CC	D	W9060	YAA			23-19-11	150, 152-199
	= CC	D	W9061	YAA			23-19-11	150, 152-199
	= CC	D	W9062	YAA			23-19-11	150, 152-199
	= CC	D	W9063	YAA			23-19-11	150, 152-199
	= CC	D	W9064	YAA			23-19-11	150, 152-199
	= CC	D	W9065	YAA			23-19-11	150, 152-199
	= CC	D	W9067	YAA			23-19-11	150, 152-199
	= CC	D	W9068	YAA			23-19-11	150, 152-199
	= CC	D	W9074	YAA			23-19-11	150, 152-199
	= CC	D	W9075	YAA			23-19-11	150, 152-199
	= CC	D	W9076	YAA			23-19-11	150, 152-199
D09103		MULTI/ /		PLUG				150, 152-199
	1		W9071	901BK	24		23-19-11	150, 152-199
	2		W9071	901W	24		23-19-11	150, 152-199
	3		W9071	903BR	24		23-19-11	150, 152-199
	4		W9071	903Y	24		23-19-11	150, 152-199
	5		W9071	904B	24		23-19-11	150, 152-199
	6	UNUSED						150, 152-199
	7	UNUSED						150, 152-199
	8	UNUSED						150, 152-199
	9		W9071	901R	24		23-19-11	150, 152-199
	10		W9071	902G	24		23-19-11	150, 152-199
	11		W9071	903GY	24		23-19-11	150, 152-199
	12		W9071	904O	24		23-19-11	150, 152-199
	13	UNUSED						150, 152-199
	14	UNUSED						150, 152-199
	15	UNUSED						150, 152-199
	16	UNUSED						150, 152-199
	17	UNUSED						150, 152-199
	18	UNUSED						150, 152-199
	19	UNUSED						150, 152-199
	20	UNUSED						150, 152-199
	21	UNUSED						150, 152-199

HOOKUP LIST

D280T132

91-21-51

Section D09100

Page 9

Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D09103		MULTI /		PLUG (continued)				150, 152-199
	22	UNUSED						150, 152-199
	23	UNUSED						150, 152-199
	24	UNUSED						150, 152-199
	25	UNUSED						150, 152-199
	26	UNUSED						150, 152-199
	27	UNUSED						150, 152-199
	28	UNUSED						150, 152-199
	29	UNUSED						150, 152-199
	30	UNUSED						150, 152-199
	31	UNUSED						150, 152-199
	32	UNUSED						150, 152-199
	33	UNUSED						150, 152-199
	34	UNUSED						150, 152-199
	35	UNUSED						150, 152-199
	36	UNUSED						150, 152-199
	37	UNUSED						150, 152-199
	38	UNUSED						150, 152-199
	39	UNUSED						150, 152-199
	40	UNUSED						150, 152-199
	41	UNUSED						150, 152-199
	42	UNUSED						150, 152-199
	43	UNUSED						150, 152-199
	44	UNUSED						150, 152-199
	45	UNUSED						150, 152-199
	46	UNUSED						150, 152-199
	47	UNUSED						150, 152-199
	48	UNUSED						150, 152-199
	49	UNUSED						150, 152-199
	50	UNUSED						150, 152-199
	51	UNUSED						150, 152-199
	52	UNUSED						150, 152-199
	53	UNUSED						150, 152-199
	54	UNUSED						150, 152-199
	= C27	UNUSED						150, 152-199
D09104J		MULTI /		RECEPT				150, 152-199
	1		W9071	904O	24		23-19-11	150, 152-199
	2		W9071	904B	24		23-19-11	150, 152-199
	3		W9071	901W	24		23-19-11	150, 152-199
	4		W9071	901R	24		23-19-11	150, 152-199

HOOKUP LIST

D280T132

91-21-51

Section D09100

Page 10

Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D09104J		MULTI /		RECEPT (continued)				150, 152-199
	5		W9071	901BK	24		23-19-11	150, 152-199
	6		W9071	902G	24		23-19-11	150, 152-199
	7		W9071	903BR	24		23-19-11	150, 152-199
	8		W9071	903Y	24		23-19-11	150, 152-199
	9		W9071	903GY	24		23-19-11	150, 152-199
	10	UNUSED						150, 152-199
	11	UNUSED						150, 152-199
	12	UNUSED						150, 152-199
	13	UNUSED						150, 152-199
	14	UNUSED						150, 152-199
	15	UNUSED						150, 152-199
	16	UNUSED						150, 152-199
	17	UNUSED						150, 152-199
	18	UNUSED						150, 152-199
	19	UNUSED						150, 152-199
	20	UNUSED						150, 152-199
	21	UNUSED						150, 152-199
	22	UNUSED						150, 152-199
	23	UNUSED						150, 152-199
	24	UNUSED						150, 152-199
	25	UNUSED						150, 152-199
	26	UNUSED						150, 152-199
	27	UNUSED						150, 152-199
	28	UNUSED						150, 152-199
	29	UNUSED						150, 152-199
	30	UNUSED						150, 152-199
	31	UNUSED						150, 152-199
	32	UNUSED						150, 152-199
	33	UNUSED						150, 152-199
	34	UNUSED						150, 152-199
	35	UNUSED						150, 152-199
	36	UNUSED						150, 152-199
	37	UNUSED						150, 152-199
	38	UNUSED						150, 152-199
	39	UNUSED						150, 152-199
	40	UNUSED						150, 152-199
	41	UNUSED						150, 152-199
	42	UNUSED						150, 152-199
	43	UNUSED						150, 152-199
	44	UNUSED						150, 152-199

HOOKUP LIST

D280T132

91-21-51

Section D09100

Page 11

Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D09104J		MULTI / /		RECEPT (continued)				150, 152-199
	45	UNUSED						150, 152-199
	46	UNUSED						150, 152-199
	47	UNUSED						150, 152-199
	48	UNUSED						150, 152-199
	49	UNUSED						150, 152-199
	50	UNUSED						150, 152-199
	51	UNUSED						150, 152-199
	52	UNUSED						150, 152-199
	53	UNUSED						150, 152-199
	54	UNUSED						150, 152-199
	=C27	UNUSED						150, 152-199
D09104P		TBD / /		PLUG				150, 152-199
	1		W9073	904O	24		23-19-11	150, 152-199
	2		W9073	904B	24		23-19-11	150, 152-199
	3		W9073	901W	24		23-19-11	150, 152-199
	4		W9073	901R	24		23-19-11	150, 152-199
	5		W9073	901BK	24		23-19-11	150, 152-199
	6		W9073	902G	24		23-19-11	150, 152-199
	7		W9073	903BR	24		23-19-11	150, 152-199
	8		W9073	903Y	24		23-19-11	150, 152-199
	9		W9073	903GY	24		23-19-11	150, 152-199
	10	UNUSED						150, 152-199
	11	UNUSED						150, 152-199
	12	UNUSED						150, 152-199
	13	UNUSED						150, 152-199
	14	UNUSED						150, 152-199
	15	UNUSED						150, 152-199
	16	UNUSED						150, 152-199
	17	UNUSED						150, 152-199
	18	UNUSED						150, 152-199
	19	UNUSED						150, 152-199
	20	UNUSED						150, 152-199
	21	UNUSED						150, 152-199
	22	UNUSED						150, 152-199
	23	UNUSED						150, 152-199
	24	UNUSED						150, 152-199
	25	UNUSED						150, 152-199
	26	UNUSED						150, 152-199
	27	UNUSED						150, 152-199

HOOKUP LIST

D280T132

91-21-51

Section D09100

Page 12

Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D09104P		TBD/ /		PLUG (continued)				150, 152-199
	28	UNUSED						150, 152-199
	29	UNUSED						150, 152-199
	30	UNUSED						150, 152-199
	31	UNUSED						150, 152-199
	32	UNUSED						150, 152-199
	33	UNUSED						150, 152-199
	34	UNUSED						150, 152-199
	35	UNUSED						150, 152-199
	36	UNUSED						150, 152-199
	37	UNUSED						150, 152-199
	38	UNUSED						150, 152-199
	39	UNUSED						150, 152-199
	40	UNUSED						150, 152-199
	41	UNUSED						150, 152-199
	42	UNUSED						150, 152-199
	43	UNUSED						150, 152-199
	44	UNUSED						150, 152-199
	45	UNUSED						150, 152-199
	46	UNUSED						150, 152-199
	47	UNUSED						150, 152-199
	48	UNUSED						150, 152-199
	49	UNUSED						150, 152-199
	50	UNUSED						150, 152-199
	51	UNUSED						150, 152-199
	52	UNUSED						150, 152-199
	53	UNUSED						150, 152-199
	54	UNUSED						150, 152-199
	= C27	UNUSED						150, 152-199
D09105		TBD/ /		PLUG				150, 152-199
	1		W9073	901R	24		23-19-11	150, 152-199
	2		W9073	901BK	24		23-19-11	150, 152-199
	3		W9073	902G	24		23-19-11	150, 152-199
	4		W9073	901W	24		23-19-11	150, 152-199
	5		W9073	903BR	24		23-19-11	150, 152-199
	6		W9073	903Y	24		23-19-11	150, 152-199
	7		W9073	903GY	24		23-19-11	150, 152-199
	8	UNUSED						150, 152-199
	9	UNUSED						150, 152-199
	10	UNUSED						150, 152-199

HOOKUP LIST
D280T132

91-21-51
Section D09100
Page 13
Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D09105		TBD/ /		PLUG (continued)				150, 152-199
	11	UNUSED						150, 152-199
	12	UNUSED						150, 152-199
	13	UNUSED						150, 152-199
	14	UNUSED						150, 152-199
	15	UNUSED						150, 152-199
	16	UNUSED						150, 152-199
	17	UNUSED						150, 152-199
	18	UNUSED						150, 152-199
	19	UNUSED						150, 152-199
	20	UNUSED						150, 152-199
	21	UNUSED						150, 152-199
	22	UNUSED						150, 152-199
	23	UNUSED						150, 152-199
	24	UNUSED						150, 152-199
	25	UNUSED						150, 152-199
	26	UNUSED						150, 152-199
	27	UNUSED						150, 152-199
	28	UNUSED						150, 152-199
	29	UNUSED						150, 152-199
	30	UNUSED						150, 152-199
	31	UNUSED						150, 152-199
	32	UNUSED						150, 152-199
	33	UNUSED						150, 152-199
	34	UNUSED						150, 152-199
	35	UNUSED						150, 152-199
	36	UNUSED						150, 152-199
	37	UNUSED						150, 152-199
	38	UNUSED						150, 152-199
	39	UNUSED						150, 152-199
	40	UNUSED						150, 152-199
	41	UNUSED						150, 152-199
	42	UNUSED						150, 152-199
	43	UNUSED						150, 152-199
	44	UNUSED						150, 152-199
	45	UNUSED						150, 152-199
	46	UNUSED						150, 152-199
	47	UNUSED						150, 152-199
	48	UNUSED						150, 152-199
	49	UNUSED						150, 152-199
	50	UNUSED						150, 152-199

HOOKUP LIST

D280T132

91-21-51

Section D09100

Page 14

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D09105		TBD/ /		PLUG (continued)				150, 152-199
	51	UNUSED						150, 152-199
	52	UNUSED						150, 152-199
	53	UNUSED						150, 152-199
	54	UNUSED						150, 152-199
	= C27	UNUSED						150, 152-199
D09106		TBD/ /		PLUG				150, 152-199
	1		W9073	9040	24		23-19-11	150, 152-199
	2		W9073	904B	24		23-19-11	150, 152-199
	3	UNUSED						150, 152-199
	4	UNUSED						150, 152-199
	5	UNUSED						150, 152-199
	6	UNUSED						150, 152-199
	7	UNUSED						150, 152-199
	8	UNUSED						150, 152-199
	9	UNUSED						150, 152-199
	10	UNUSED						150, 152-199
	11	UNUSED						150, 152-199
	12	UNUSED						150, 152-199
	13	UNUSED						150, 152-199
	14	UNUSED						150, 152-199
	15	UNUSED						150, 152-199
	16	UNUSED						150, 152-199
	17	UNUSED						150, 152-199
	18	UNUSED						150, 152-199
	19	UNUSED						150, 152-199
	20	UNUSED						150, 152-199
	21	UNUSED						150, 152-199
	22	UNUSED						150, 152-199
	23	UNUSED						150, 152-199
	24	UNUSED						150, 152-199
	25	UNUSED						150, 152-199
	26	UNUSED						150, 152-199
	27	UNUSED						150, 152-199
	28	UNUSED						150, 152-199
	29	UNUSED						150, 152-199
	30	UNUSED						150, 152-199
	31	UNUSED						150, 152-199
	32	UNUSED						150, 152-199
	33	UNUSED						150, 152-199

HOOKUP LIST

D280T132

91-21-51

Section D09100

Page 15

Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D09106		TBD / /		PLUG (continued)				150, 152-199
	34	UNUSED						150, 152-199
	35	UNUSED						150, 152-199
	36	UNUSED						150, 152-199
	37	UNUSED						150, 152-199
	38	UNUSED						150, 152-199
	39	UNUSED						150, 152-199
	40	UNUSED						150, 152-199
	41	UNUSED						150, 152-199
	42	UNUSED						150, 152-199
	43	UNUSED						150, 152-199
	44	UNUSED						150, 152-199
	45	UNUSED						150, 152-199
	46	UNUSED						150, 152-199
	47	UNUSED						150, 152-199
	48	UNUSED						150, 152-199
	49	UNUSED						150, 152-199
	50	UNUSED						150, 152-199
	51	UNUSED						150, 152-199
	52	UNUSED						150, 152-199
	53	UNUSED						150, 152-199
	54	UNUSED						150, 152-199
	= C27	UNUSED						150, 152-199
D09107		284/273/L54		PLUG				150, 152-199
	1		W9072	901R	24		23-19-11	150, 152-199
	2		W9072	901BK	24		23-19-11	150, 152-199
	3		W9072	902G	24		23-19-11	150, 152-199
	4		W9072	901W	24		23-19-11	150, 152-199
	5		W9072	903BR	24		23-19-11	150, 152-199
	6		W9072	903Y	24		23-19-11	150, 152-199
	7		W9072	903GY	24		23-19-11	150, 152-199
	8	UNUSED						150, 152-199
	9	UNUSED						150, 152-199
	10	UNUSED						150, 152-199
	11	UNUSED						150, 152-199
	12	UNUSED						150, 152-199
	13	UNUSED						150, 152-199
	14	UNUSED						150, 152-199
	15	UNUSED						150, 152-199
	16	UNUSED						150, 152-199

HOOKUP LIST

D280T132

91-21-51

Section D09100

Page 16

Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D09107		284/273/L54		PLUG (continued)				150, 152-199
	17	UNUSED						150, 152-199
	18	UNUSED						150, 152-199
	19	UNUSED						150, 152-199
	20	UNUSED						150, 152-199
	21	UNUSED						150, 152-199
	22	UNUSED						150, 152-199
	23	UNUSED						150, 152-199
	24	UNUSED						150, 152-199
	25	UNUSED						150, 152-199
	26	UNUSED						150, 152-199
	27	UNUSED						150, 152-199
	28	UNUSED						150, 152-199
	29	UNUSED						150, 152-199
	30	UNUSED						150, 152-199
	31	UNUSED						150, 152-199
	32	UNUSED						150, 152-199
	33	UNUSED						150, 152-199
	34	UNUSED						150, 152-199
	35	UNUSED						150, 152-199
	36	UNUSED						150, 152-199
	37	UNUSED						150, 152-199
	38	UNUSED						150, 152-199
	39	UNUSED						150, 152-199
	40	UNUSED						150, 152-199
	41	UNUSED						150, 152-199
	42	UNUSED						150, 152-199
	43	UNUSED						150, 152-199
	44	UNUSED						150, 152-199
	45	UNUSED						150, 152-199
	46	UNUSED						150, 152-199
	47	UNUSED						150, 152-199
	48	UNUSED						150, 152-199
	49	UNUSED						150, 152-199
	50	UNUSED						150, 152-199
	51	UNUSED						150, 152-199
	52	UNUSED						150, 152-199
	53	UNUSED						150, 152-199
	54	UNUSED						150, 152-199
	=C27	UNUSED						150, 152-199

HOOKUP LIST
D280T132

91-21-51
Section D09100
Page 17
Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D09108		TBD/ /		PLUG				150, 152-199
	1		W9072	9040	24		23-19-11	150, 152-199
	2		W9072	904B	24		23-19-11	150, 152-199
	3	UNUSED						150, 152-199
	4	UNUSED						150, 152-199
	5	UNUSED						150, 152-199
	6	UNUSED						150, 152-199
	7	UNUSED						150, 152-199
	8	UNUSED						150, 152-199
	9	UNUSED						150, 152-199
	10	UNUSED						150, 152-199
	11	UNUSED						150, 152-199
	12	UNUSED						150, 152-199
	13	UNUSED						150, 152-199
	14	UNUSED						150, 152-199
	15	UNUSED						150, 152-199
	16	UNUSED						150, 152-199
	17	UNUSED						150, 152-199
	18	UNUSED						150, 152-199
	19	UNUSED						150, 152-199
	20	UNUSED						150, 152-199
	21	UNUSED						150, 152-199
	22	UNUSED						150, 152-199
	23	UNUSED						150, 152-199
	24	UNUSED						150, 152-199
	25	UNUSED						150, 152-199
	26	UNUSED						150, 152-199
	27	UNUSED						150, 152-199
	28	UNUSED						150, 152-199
	29	UNUSED						150, 152-199
	30	UNUSED						150, 152-199
	31	UNUSED						150, 152-199
	32	UNUSED						150, 152-199
	33	UNUSED						150, 152-199
	34	UNUSED						150, 152-199
	35	UNUSED						150, 152-199
	36	UNUSED						150, 152-199
	37	UNUSED						150, 152-199
	38	UNUSED						150, 152-199
	39	UNUSED						150, 152-199
	40	UNUSED						150, 152-199

HOOKUP LIST

D280T132

91-21-51

Section D09100

Page 18

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D09108		TBD/ /		PLUG (continued)				150, 152-199
	41	UNUSED						150, 152-199
	42	UNUSED						150, 152-199
	43	UNUSED						150, 152-199
	44	UNUSED						150, 152-199
	45	UNUSED						150, 152-199
	46	UNUSED						150, 152-199
	47	UNUSED						150, 152-199
	48	UNUSED						150, 152-199
	49	UNUSED						150, 152-199
	50	UNUSED						150, 152-199
	51	UNUSED						150, 152-199
	52	UNUSED						150, 152-199
	53	UNUSED						150, 152-199
	54	UNUSED						150, 152-199
	= C27	UNUSED						150, 152-199
D09109		265/ /		PLUG				150, 152-199
	1		W9072	901BK	24		23-19-11	150, 152-199
	2		W9072	901W	24		23-19-11	150, 152-199
	3		W9072	903BR	24		23-19-11	150, 152-199
	4		W9072	903Y	24		23-19-11	150, 152-199
	5		W9072	904B	24		23-19-11	150, 152-199
	6	UNUSED						150, 152-199
	7	UNUSED						150, 152-199
	8	UNUSED						150, 152-199
	9		W9072	901R	24		23-19-11	150, 152-199
	10		W9072	902G	24		23-19-11	150, 152-199
	11		W9072	903GY	24		23-19-11	150, 152-199
	12		W9072	904O	24		23-19-11	150, 152-199
	13	UNUSED						150, 152-199
	14	UNUSED						150, 152-199
	15	UNUSED						150, 152-199
	16	UNUSED						150, 152-199
	17	UNUSED						150, 152-199
	18	UNUSED						150, 152-199
	19	UNUSED						150, 152-199
	20	UNUSED						150, 152-199
	21	UNUSED						150, 152-199
	22	UNUSED						150, 152-199
	23	UNUSED						150, 152-199

HOOKUP LIST

D280T132

91-21-51

Section D09100

Page 19

Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D09109		265/ /		PLUG (continued)				150, 152-199
	24	UNUSED						150, 152-199
	25	UNUSED						150, 152-199
	26	UNUSED						150, 152-199
	27	UNUSED						150, 152-199
	28	UNUSED						150, 152-199
	29	UNUSED						150, 152-199
	30	UNUSED						150, 152-199
	31	UNUSED						150, 152-199
	32	UNUSED						150, 152-199
	33	UNUSED						150, 152-199
	34	UNUSED						150, 152-199
	35	UNUSED						150, 152-199
	36	UNUSED						150, 152-199
	37	UNUSED						150, 152-199
	38	UNUSED						150, 152-199
	39	UNUSED						150, 152-199
	40	UNUSED						150, 152-199
	41	UNUSED						150, 152-199
	42	UNUSED						150, 152-199
	43	UNUSED						150, 152-199
	44	UNUSED						150, 152-199
	45	UNUSED						150, 152-199
	46	UNUSED						150, 152-199
	47	UNUSED						150, 152-199
	48	UNUSED						150, 152-199
	49	UNUSED						150, 152-199
	50	UNUSED						150, 152-199
	51	UNUSED						150, 152-199
	52	UNUSED						150, 152-199
	53	UNUSED						150, 152-199
	54	UNUSED						150, 152-199
	=C27	UNUSED						150, 152-199
D09110J		P061-00/ /		RECEPT				150, 152-199
	1		W9069	900	24		23-19-11	150, 152-199
	2		W9069	901	24		23-19-11	150, 152-199
	3	UNUSED						150, 152-199
	4	UNUSED						150, 152-199
	5	UNUSED						150, 152-199
	6	UNUSED						150, 152-199

HOOKUP LIST
D280T132

91-21-51
Section D09100
Page 20
Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D09110J		P061-00/ /		RECEPT (continued)				150, 152-199
	7	UNUSED						150, 152-199
	8	UNUSED						150, 152-199
	9	UNUSED						150, 152-199
	10	UNUSED						150, 152-199
	11	UNUSED						150, 152-199
	12	UNUSED						150, 152-199
	13	UNUSED						150, 152-199
	14	UNUSED						150, 152-199
	15	UNUSED						150, 152-199
	16	UNUSED						150, 152-199
	17	UNUSED						150, 152-199
	18	UNUSED						150, 152-199
	19	UNUSED						150, 152-199
	20	UNUSED						150, 152-199
	21	UNUSED						150, 152-199
	22	UNUSED						150, 152-199
	23	UNUSED						150, 152-199
	24	UNUSED						150, 152-199
	25	UNUSED						150, 152-199
	26	UNUSED						150, 152-199
	27	UNUSED						150, 152-199
	28	UNUSED						150, 152-199
	29	UNUSED						150, 152-199
	30	UNUSED						150, 152-199
	31	UNUSED						150, 152-199
	32	UNUSED						150, 152-199
	33	UNUSED						150, 152-199
	34	UNUSED						150, 152-199
	35	UNUSED						150, 152-199
	36	UNUSED						150, 152-199
	37	UNUSED						150, 152-199
	38	UNUSED						150, 152-199
	39	UNUSED						150, 152-199
	40	UNUSED						150, 152-199
	41	UNUSED						150, 152-199
	42	UNUSED						150, 152-199
	43	UNUSED						150, 152-199
	44	UNUSED						150, 152-199
	45	UNUSED						150, 152-199
	46	UNUSED						150, 152-199

HOOKUP LIST

D280T132

91-21-51

Section D09100

Page 21

Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D09110J		P061-00/ /		RECEPT (continued)				150, 152-199
	47	UNUSED						150, 152-199
	48	UNUSED						150, 152-199
	49	UNUSED						150, 152-199
	50	UNUSED						150, 152-199
	51	UNUSED						150, 152-199
	52	UNUSED						150, 152-199
	53	UNUSED						150, 152-199
	54	UNUSED						150, 152-199
	=C27	UNUSED						150, 152-199
D09110P		P061-00/ /		PLUG				150, 152-199
	1		W9047	900	24		23-19-11	150, 152-199
	2		W9047	901	24		23-19-11	150, 152-199
	3	UNUSED						150, 152-199
	4	UNUSED						150, 152-199
	5	UNUSED						150, 152-199
	6	UNUSED						150, 152-199
	7	UNUSED						150, 152-199
	8	UNUSED						150, 152-199
	9	UNUSED						150, 152-199
	10	UNUSED						150, 152-199
	11	UNUSED						150, 152-199
	12	UNUSED						150, 152-199
	13	UNUSED						150, 152-199
	14	UNUSED						150, 152-199
	15	UNUSED						150, 152-199
	16	UNUSED						150, 152-199
	17	UNUSED						150, 152-199
	18	UNUSED						150, 152-199
	19	UNUSED						150, 152-199
	20	UNUSED						150, 152-199
	21	UNUSED						150, 152-199
	22	UNUSED						150, 152-199
	23	UNUSED						150, 152-199
	24	UNUSED						150, 152-199
	25	UNUSED						150, 152-199
	26	UNUSED						150, 152-199
	27	UNUSED						150, 152-199
	28	UNUSED						150, 152-199
	29	UNUSED						150, 152-199

HOOKUP LIST

D280T132

91-21-51

Section D09100

Page 22

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D09110P		P061-00/ /		PLUG (continued)				150, 152-199
	30	UNUSED						150, 152-199
	31	UNUSED						150, 152-199
	32	UNUSED						150, 152-199
	33	UNUSED						150, 152-199
	34	UNUSED						150, 152-199
	35	UNUSED						150, 152-199
	36	UNUSED						150, 152-199
	37	UNUSED						150, 152-199
	38	UNUSED						150, 152-199
	39	UNUSED						150, 152-199
	40	UNUSED						150, 152-199
	41	UNUSED						150, 152-199
	42	UNUSED						150, 152-199
	43	UNUSED						150, 152-199
	44	UNUSED						150, 152-199
	45	UNUSED						150, 152-199
	46	UNUSED						150, 152-199
	47	UNUSED						150, 152-199
	48	UNUSED						150, 152-199
	49	UNUSED						150, 152-199
	50	UNUSED						150, 152-199
	51	UNUSED						150, 152-199
	52	UNUSED						150, 152-199
	53	UNUSED						150, 152-199
	54	UNUSED						150, 152-199
	= C27	UNUSED						150, 152-199
D09123J		AE0319/ /		RCPT-				150, 152-199, 275-299
	1		W9090	901	22		34-46-13	150, 152-199, 275-299
	2		W9090	902	22		34-46-13	150, 152-199, 275-299
	3		W9090	903	22		34-46-13	150, 152-199, 275-299
	4		W9090	904	22		34-46-13	150, 152-199, 275-299
	5		W9090	901W	24		34-46-13	150, 152-199, 275-299
	6		W9090	901WB	24		34-46-13	150, 152-199, 275-299
	7		W9090	901Z			34-46-13	150, 152-199, 275-299
	8		W9090	902W	24		34-46-13	150, 152-199, 275-299
	9		W9090	902WB	24		34-46-13	150, 152-199, 275-299
	10		W9090	902Z			34-46-13	150, 152-199, 275-299
	11		W9090	905	22		34-46-13	150, 152-199, 275-299
	12		W9090	906	22		34-46-13	150, 152-199, 275-299

HOOKUP LIST

D280T132

91-21-51

Section D09100

Page 23

Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D09123J		AE0319/ /		RCPT- (continued)				150, 152-199, 275-299
	13		W9090	903W	24		34-46-13	150, 152-199, 275-299
	14		W9090	903WB	24		34-46-13	150, 152-199, 275-299
	15		W9090	903Z			34-46-13	150, 152-199, 275-299
	16		W9090	904W	24		34-46-13	150, 152-199, 275-299
	17		W9090	904WB	24		34-46-13	150, 152-199, 275-299
	18		W9090	904Z			34-46-13	150, 152-199, 275-299
	19		W9090	907	22		34-46-13	150, 152-199, 275-299
	20		W9090	908	22		34-46-13	150, 152-199, 275-299
	21		W9090	909	22		34-46-13	150, 152-199, 275-299
	22		W9090	910	22		34-46-13	150, 152-199, 275-299
	23		W9090	911	22		34-46-13	150, 152-199, 275-299
	24		W9090	912	22		34-46-13	150, 152-199, 275-299
	25		W9090	913	22		34-46-13	150, 152-199, 275-299
	26		W9090	914	22		34-46-13	150, 152-199, 275-299
	27		W9090	927	22		34-46-12	150, 152-199, 275-299
	28	UNUSED						150, 152-199, 275-299
	29	UNUSED						150, 152-199, 275-299
	30	UNUSED						150, 152-199, 275-299
	31	UNUSED						150, 152-199, 275-299
	32	UNUSED						150, 152-199, 275-299
	33	UNUSED						150, 152-199, 275-299
	34	UNUSED						150, 152-199, 275-299
	35	UNUSED						150, 152-199, 275-299
	36	UNUSED						150, 152-199, 275-299
	37	UNUSED						150, 152-199, 275-299
	38	UNUSED						150, 152-199, 275-299
	39	UNUSED						150, 152-199, 275-299
	40	UNUSED						150, 152-199, 275-299
	41	UNUSED						150, 152-199, 275-299
	42	UNUSED						150, 152-199, 275-299
	43	UNUSED						150, 152-199, 275-299
	44	UNUSED						150, 152-199, 275-299
	45	UNUSED						150, 152-199, 275-299
	46	UNUSED						150, 152-199, 275-299
	47	UNUSED						150, 152-199, 275-299
	48	UNUSED						150, 152-199, 275-299
	49	UNUSED						150, 152-199, 275-299
	50	UNUSED						150, 152-199, 275-299
	51	UNUSED						150, 152-199, 275-299
	52	UNUSED						150, 152-199, 275-299

HOOKUP LIST

D280T132

91-21-51

Section D09100

Page 24

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D09123J		AE0319/ /		RCPT- (continued)				150, 152-199, 275-299
	53	UNUSED						150, 152-199, 275-299
	54	UNUSED						150, 152-199, 275-299
	55	UNUSED						150, 152-199, 275-299
D09123P		AE0319/ /		PLUG				150, 152-199, 275-299
	1		W0109	964	22		34-46-13	150, 152-199, 275-299
	2		W0109	965	22		34-46-13	150, 152-199, 275-299
	3		W0109	917	22		34-46-13	150, 152-199, 275-299
	4		W0109	918	22		34-46-13	150, 152-199, 275-299
	5		W0109	904W	24		34-46-13	150, 152-199, 275-299
	6		W0109	904WB	24		34-46-13	150, 152-199, 275-299
	7		W0109	904Z			34-46-13	150, 152-199, 275-299
	8		W0109	905W	24		34-46-13	150, 152-199, 275-299
	9		W0109	905WB	24		34-46-13	150, 152-199, 275-299
	10		W0109	905Z			34-46-13	150, 152-199, 275-299
	11		W0109	974	22		34-46-13	150, 152-199, 275-299
	12		W0109	976	22		34-46-13	150, 152-199, 275-299
	13		W0109	990W	24		34-46-13	150, 152-199, 275-299
	14		W0109	990WB	24		34-46-13	150, 152-199, 275-299
	15		W0109	990Z			34-46-13	150, 152-199, 275-299
	16		W0109	907W	24		34-46-13	150, 152-199, 275-299
	17		W0109	907WB	24		34-46-13	150, 152-199, 275-299
	18		W0109	907Z			34-46-13	150, 152-199, 275-299
	19		W0109	979	22		34-46-13	150, 152-199, 275-299
	20		W0109	980	22		34-46-13	150, 152-199, 275-299
	21		W0109	981	22		34-46-13	150, 152-199, 275-299
	22		W0109	982	22		34-46-13	150, 152-199, 275-299
	23		W0109	983	22		34-46-13	150, 152-199, 275-299
	24		W0109	925	22		34-46-13	150, 152-199, 275-299
	25		W0109	926	22		34-46-13	150, 152-199, 275-299
	26		W0109	978	22		34-46-13	150, 152-199, 275-299
	27		W0109	987	22		34-46-12	150, 152-199, 275-299
	28	UNUSED						150, 152-199, 275-299
	29	UNUSED						150, 152-199, 275-299
	30	UNUSED						150, 152-199, 275-299
	31	UNUSED						150, 152-199, 275-299
	32	UNUSED						150, 152-199, 275-299
	33	UNUSED						150, 152-199, 275-299
	34	UNUSED						150, 152-199, 275-299
	35	UNUSED						150, 152-199, 275-299

HOOKUP LIST

D280T132

91-21-51

Section D09100

Page 25

Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D09123P		AE0319/ /		PLUG (continued)				150, 152-199, 275-299
	36	UNUSED						150, 152-199, 275-299
	37	UNUSED						150, 152-199, 275-299
	38	UNUSED						150, 152-199, 275-299
	39	UNUSED						150, 152-199, 275-299
	40	UNUSED						150, 152-199, 275-299
	41	UNUSED						150, 152-199, 275-299
	42	UNUSED						150, 152-199, 275-299
	43	UNUSED						150, 152-199, 275-299
	44	UNUSED						150, 152-199, 275-299
	45	UNUSED						150, 152-199, 275-299
	46	UNUSED						150, 152-199, 275-299
	47	UNUSED						150, 152-199, 275-299
	48	UNUSED						150, 152-199, 275-299
	49	UNUSED						150, 152-199, 275-299
	50	UNUSED						150, 152-199, 275-299
	51	UNUSED						150, 152-199, 275-299
	52	UNUSED						150, 152-199, 275-299
	53	UNUSED						150, 152-199, 275-299
	54	UNUSED						150, 152-199, 275-299
	55	UNUSED						150, 152-199, 275-299
D09124		P003-01/ /		PLUG (D09124P)				150, 152-199, 275-299
	1		W9090	919	20		34-46-13	150, 152-199, 275-299
	2		W9090	910	22		34-46-13	150, 152-199, 275-299
	3		W9090	920	22		33-16-13	150, 152-199, 275-299
	4		W9090	913	22		34-46-13	150, 152-199, 275-299
	5		W9090	921	22		33-16-13	150, 152-199, 275-299
	6		W9090	912	22		34-46-13	150, 152-199, 275-299
	7		W9090	922	20		34-46-13	150, 152-199, 275-299
	8		W9090	908	22		34-46-13	150, 152-199, 275-299
	9		W9090	911	22		34-46-13	150, 152-199, 275-299
	10		W9090	923	20		34-46-13	150, 152-199, 275-299
	11		W9090	909	22		34-46-13	150, 152-199, 275-299
	12		W9090	924	20		34-46-13	150, 152-199, 275-299
	13	UNUSED						150, 152-199, 275-299
	14	UNUSED						150, 152-199, 275-299
	15	UNUSED						150, 152-199, 275-299
	16	UNUSED						150, 152-199, 275-299
	17	UNUSED						150, 152-199, 275-299
	18	UNUSED						150, 152-199, 275-299

HOOKUP LIST

D280T132

91-21-51

Section D09100

Page 26

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D09124		P003-01/ /		PLUG (D09124P) (continued)				150, 152-199, 275-299
	19	UNUSED						150, 152-199, 275-299
	20	UNUSED						150, 152-199, 275-299
	21	UNUSED						150, 152-199, 275-299
	22		W9090	926	20		33-13-13	150, 152-199, 275-299
	23		W9090	925	20		33-13-13	150, 152-199, 275-299
	24	UNUSED						150, 152-199, 275-299
D09125J		AE0325/ /		RCPT-				150, 152-199, 275-299
	= A1		W9092	01CX			34-46-11	150, 152-199, 275-299
	= C1		W9092	01CO			34-46-11	150, 152-199, 275-299
D09125P		AE0325/ /		PLUG				150, 152-199, 275-299
	= A1		W9091	01CX			34-46-11	150, 152-199, 275-299
	= C1		W9091	01CO			34-46-11	150, 152-199, 275-299
D09126		600/319/		PLUG				150, 152-199, 275-299
	= A1		W9092	01CX			34-46-11	150, 152-199, 275-299
	= C1		W9092	01CO			34-46-11	150, 152-199, 275-299
D09127		E001-05/ /		RELAY SOCKET				150, 152-199, 275-299
	1		W0109	916	22		34-46-13	150, 152-199, 275-299
	2		W0109	918	22		34-46-13	150, 152-199, 275-299
	3		W0109	905WB	24		34-46-13	150, 152-199, 275-299
	4		W0109	902WB	24		34-46-13	150, 152-199, 275-299
	5		W0109	904WB	24		34-46-13	150, 152-199, 275-299
	6		W0109	969	22		34-46-13	150, 152-199, 275-299
	7		W0109	904W	24		34-46-13	150, 152-199, 275-299
	8		W0109	902W	24		34-46-13	150, 152-199, 275-299
	9		W0109	974	22		34-46-13	150, 152-199, 275-299
	10	UNUSED						150, 152-199, 275-299
	11		W0109	975	22		34-46-13	150, 152-199, 275-299
	12		W0109	967	22		34-46-13	150, 152-199, 275-299
	13		W0109	917	22		34-46-13	150, 152-199, 275-299
	14		W0109	905W	24		34-46-13	150, 152-199, 275-299
			W0109	9002	20		34-46-13	150, 152-199, 275-299
			W0109	9004	20		34-46-13	150, 152-199, 275-299
			W0109	9005	20		34-46-13	150, 152-199, 275-299
			W0109	902Z			34-46-13	150, 152-199, 275-299
			W0109	904Z			34-46-13	150, 152-199, 275-299
			W0109	905Z			34-46-13	150, 152-199, 275-299

HOOKUP LIST
D280T132

91-21-51
Section D09100
Page 27
Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D09128		E001-05/ /		RELAY SOCKET				150, 152-199, 275-299
	1		W0109	990WB	24		34-46-13	150, 152-199, 275-299
	2		W0109	903WB	24		34-46-13	150, 152-199, 275-299
	3		W0109	907W	24		34-46-13	150, 152-199, 275-299
	4		W0109	903W	24		34-46-13	150, 152-199, 275-299
	5		W0109	990W	24		34-46-13	150, 152-199, 275-299
	6		W0109	970	22		34-46-13	150, 152-199, 275-299
	7	UNUSED						150, 152-199, 275-299
	8	UNUSED						150, 152-199, 275-299
	9	UNUSED						150, 152-199, 275-299
	10	UNUSED						150, 152-199, 275-299
	11	UNUSED						150, 152-199, 275-299
	12		W0109	968	22		34-46-13	150, 152-199, 275-299
	13		W0109	907WB	24		34-46-13	150, 152-199, 275-299
	14	UNUSED						150, 152-199, 275-299
			W0109	9003	20		34-46-13	150, 152-199, 275-299
			W0109	9006	20		34-46-13	150, 152-199, 275-299
			W0109	9007	20		34-46-13	150, 152-199, 275-299
			W0109	903Z			34-46-13	150, 152-199, 275-299
			W0109	907Z			34-46-13	150, 152-199, 275-299
			W0109	990Z			34-46-13	150, 152-199, 275-299
D09129		E001-05/ /		RELAY SOCKET				150, 152-199, 275-299
	1		W0109	924	22		34-46-13	150, 152-199, 275-299
	2		W0109	926	22		34-46-13	150, 152-199, 275-299
	3		W0109	912WB	24		34-46-13	150, 152-199, 275-299
	4		W0109	909WB	24		34-46-13	150, 152-199, 275-299
	5		W0109	911WB	24		34-46-13	150, 152-199, 275-299
	6		W0109	972	22		34-46-13	150, 152-199, 275-299
	7		W0109	911W	24		34-46-13	150, 152-199, 275-299
	8		W0109	909W	24		34-46-13	150, 152-199, 275-299
	9		W0109	978	22		34-46-13	150, 152-199, 275-299
	10	UNUSED						150, 152-199, 275-299
	11		W0109	977	22		34-46-13	150, 152-199, 275-299
	12		W0109	985	22		34-46-13	150, 152-199, 275-299
	13		W0109	925	22		34-46-13	150, 152-199, 275-299
	14		W0109	912W	24		34-46-13	150, 152-199, 275-299
			W0109	9009	20		34-46-13	150, 152-199, 275-299
			W0109	9011	20		34-46-13	150, 152-199, 275-299
			W0109	9012	20		34-46-13	150, 152-199, 275-299
			W0109	909Z			34-46-13	150, 152-199, 275-299

HOOKUP LIST

D280T132

91-21-51

Section D09100

Page 28

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D09129		E001-05/ /		RELAY SOCKET (continued)				150, 152-199, 275-299
			W0109	911Z			34-46-13	150, 152-199, 275-299
			W0109	912Z			34-46-13	150, 152-199, 275-299
D09130		E001-05/ /		RELAY SOCKET				150, 152-199, 275-299
	1		W0109	913WB	24		34-46-13	150, 152-199, 275-299
	2		W0109	910WB	24		34-46-13	150, 152-199, 275-299
	3		W0109	914W	24		34-46-13	150, 152-199, 275-299
	4		W0109	910W	24		34-46-13	150, 152-199, 275-299
	5		W0109	913W	24		34-46-13	150, 152-199, 275-299
	6		W0109	973	22		34-46-13	150, 152-199, 275-299
	7	UNUSED						150, 152-199, 275-299
	8	UNUSED						150, 152-199, 275-299
	9	UNUSED						150, 152-199, 275-299
	10	UNUSED						150, 152-199, 275-299
	11	UNUSED						150, 152-199, 275-299
	12		W0109	986	22		34-46-13	150, 152-199, 275-299
	13		W0109	914WB	24		34-46-13	150, 152-199, 275-299
	14	UNUSED						150, 152-199, 275-299
			W0109	9010	20		34-46-13	150, 152-199, 275-299
			W0109	9013	20		34-46-13	150, 152-199, 275-299
			W0109	9014	20		34-46-13	150, 152-199, 275-299
			W0109	910Z			34-46-13	150, 152-199, 275-299
			W0109	913Z			34-46-13	150, 152-199, 275-299
			W0109	914Z			34-46-13	150, 152-199, 275-299
D09131		P001-01/ /		RECEPT (D09131P)				150, 152-199, 275-299
	1	UNUSED						150, 152-199, 275-299
	2	UNUSED						150, 152-199, 275-299
	3	UNUSED						150, 152-199, 275-299
	4	UNUSED						150, 152-199, 275-299
	5	UNUSED						150, 152-199, 275-299
	6	UNUSED						150, 152-199, 275-299
	7	UNUSED						150, 152-199, 275-299
	8	UNUSED						150, 152-199, 275-299
	9	UNUSED						150, 152-199, 275-299
	10	UNUSED						150, 152-199, 275-299
	11		W9090	915	20		34-46-13	150, 152-199, 275-299
	12		W9090	902	22		34-46-13	150, 152-199, 275-299
	13		W9090	916	22		33-16-13	150, 152-199, 275-299
	14		W9090	904	22		34-46-13	150, 152-199, 275-299

HOOKUP LIST
D280T132

91-21-51
Section D09100
Page 29
Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D09131		P001-01/ /		RECEPT (D09131P) (continued)				150, 152-199, 275-299
	15		W9090	917	22		33-16-13	150, 152-199, 275-299
	16		W9090	903	22		34-46-13	150, 152-199, 275-299
	17		W9090	918	20		34-46-13	150, 152-199, 275-299
	18		W9090	901	22		34-46-13	150, 152-199, 275-299
	19	UNUSED						150, 152-199, 275-299
	20	UNUSED						150, 152-199, 275-299
	21	UNUSED						150, 152-199, 275-299
	22		W0017	913	20		33-13-11	150, 152-199, 275-299
	23		W0017	914	20		33-13-11	150, 152-199, 275-299
	24	UNUSED						150, 152-199, 275-299

HOOKUP LIST
D280T132

91-21-51
Section D09100
Page 30 End
Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D09299J		AE0209/ /		RECEPT (MS24264R14B4SN)				150, 153, 157, 165-199
	1		W9158	006	12		25-25-23	150, 153, 157, 165-199
	2		W9158	005	12		25-25-23	150, 153, 157, 165-199
	3		W9158	004	12		25-25-23	150, 153, 157, 165-199
	4	UNUSED						150, 153, 157, 165-199
D09299P		AE0209/ /		PLUG (MS24266R14B4PN)				150, 153, 157, 165-199
	1		W9159	001	12		25-25-23	150, 153, 157, 165-199
	2		W9159	002	12		25-25-23	150, 153, 157, 165-199
	3		W9159	003	12		25-25-23	150, 153, 157, 165-199
	4	UNUSED						150, 153, 157, 165-199

HOOKUP LIST

D280T132

91-21-51

Section D09200

Page 1 End

Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D09310		447/245/L80		PLUG (225395-7)				150, 152-199
	1		W0047	10CX			23-32-21	150, 152-199
	2	UNUSED						150, 152-199
	3	UNUSED						150, 152-199
	4	UNUSED						150, 152-199
	5	UNUSED						150, 152-199
	6	UNUSED						150, 152-199
	7	UNUSED						150, 152-199
	8	UNUSED						150, 152-199
	9	UNUSED						150, 152-199
	10	UNUSED						150, 152-199
	11	UNUSED						150, 152-199
	12	UNUSED						150, 152-199
	13	UNUSED						150, 152-199
	14	UNUSED						150, 152-199
	15	UNUSED						150, 152-199
	16	UNUSED						150, 152-199
	17	UNUSED						150, 152-199
	18	UNUSED						150, 152-199
	19	UNUSED						150, 152-199
	20	UNUSED						150, 152-199
	21	UNUSED						150, 152-199
	22	UNUSED						150, 152-199
	23	UNUSED						150, 152-199
	24	UNUSED						150, 152-199
	25	UNUSED						150, 152-199
	26	UNUSED						150, 152-199
	27	UNUSED						150, 152-199
	28	UNUSED						150, 152-199
	29	UNUSED						150, 152-199
	30	UNUSED						150, 152-199
	31	UNUSED						150, 152-199
	32	UNUSED						150, 152-199
	33	UNUSED						150, 152-199
	34	UNUSED						150, 152-199
	35	UNUSED						150, 152-199
	36	UNUSED						150, 152-199
	37	UNUSED						150, 152-199
	38	UNUSED						150, 152-199
	39	UNUSED						150, 152-199
	40	UNUSED						150, 152-199

HOOKUP LIST

D280T132

91-21-51

Section D09300

Page 1

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D09310		447/245/L80		PLUG (225395-7) (continued)				150, 152-199
	41	UNUSED						150, 152-199
	42	UNUSED						150, 152-199
	43	UNUSED						150, 152-199
	44	UNUSED						150, 152-199
	45	UNUSED						150, 152-199
	46	UNUSED						150, 152-199
	47	UNUSED						150, 152-199
	48	UNUSED						150, 152-199
	49	UNUSED						150, 152-199
	50	UNUSED						150, 152-199
	51	UNUSED						150, 152-199
	52	UNUSED						150, 152-199
	53	UNUSED						150, 152-199
	54	UNUSED						150, 152-199
	= C27	UNUSED						150, 152-199
	PERG	1A	W0047	10CO			23-32-21	150, 152-199
D09311		447/245/L80		PLUG (MS24266R16B24SN)				150, 152-199
	1		W0047	908	20		23-32-21	150, 152-199
	2		W0047	910	20		23-32-21	150, 152-199
	3		W0047	907	20		23-32-21	150, 152-199
	4		W0047	911	20		23-32-21	150, 152-199
	5		W0047	912	20		23-32-21	150, 152-199
	6	UNUSED						150, 152-199
	7	UNUSED						150, 152-199
	8		W0047	905R	20		23-32-21	150, 152-156, 162-199
	8		W0047	905R	22		23-32-21	157
	9		W0047	905B	20		23-32-21	150, 152-156, 162-199
	9		W0047	905B	22		23-32-21	157
	10		W0047	904R	20		23-32-21	150, 152-156, 162-199
	10		W0047	904R	22		23-32-21	157
	11		W0047	904B	20		23-32-21	150, 152-156, 162-199
	11		W0047	904B	22		23-32-21	157
	12		W0047	FRD			23-32-21	150, 152-199
	13	UNUSED						150, 152-199
	14		W0047	909Z			23-32-21	150, 152-199
	15		W0047	909R	20		23-32-21	150, 152-156, 162-199
	15		W0047	909R	22		23-32-21	157
	16		W0047	909B	20		23-32-21	150, 152-156, 162-199
	16		W0047	909B	22		23-32-21	157

HOOKUP LIST

D280T132

91-21-51

Section D09300

Page 2

Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D09311		447/245/L80		PLUG (MS24266R16B24SN) (continued)				150, 152-199
	17	UNUSED						150, 152-199
	18	UNUSED						150, 152-199
	19		W0047	913	20		23-32-21	150, 152-199
	20	UNUSED						150, 152-199
	21	UNUSED						150, 152-199
	22	UNUSED						150, 152-199
	23		W0047	916	20		23-32-21	150, 152-199
	24		W0047	916	20		23-32-21	150, 152-199
	25	UNUSED						150, 152-199
	26	UNUSED						150, 152-199
	27	UNUSED						150, 152-199
	28	UNUSED						150, 152-199
	29	UNUSED						150, 152-199
	30	UNUSED						150, 152-199
	31	UNUSED						150, 152-199
	32	UNUSED						150, 152-199
	33	UNUSED						150, 152-199
	34	UNUSED						150, 152-199
	35	UNUSED						150, 152-199
	36	UNUSED						150, 152-199
	37	UNUSED						150, 152-199
	38	UNUSED						150, 152-199
	39	UNUSED						150, 152-199
	40	UNUSED						150, 152-199
	41	UNUSED						150, 152-199
	42	UNUSED						150, 152-199
	43	UNUSED						150, 152-199
	44	UNUSED						150, 152-199
	45	UNUSED						150, 152-199
	46	UNUSED						150, 152-199
	47	UNUSED						150, 152-199
	48	UNUSED						150, 152-199
	49	UNUSED						150, 152-199
	50	UNUSED						150, 152-199
	51	UNUSED						150, 152-199
	52	UNUSED						150, 152-199
	53	UNUSED						150, 152-199
	54	UNUSED						150, 152-199
	= C27	UNUSED						150, 152-199
	CAP	Y	W0047	914	20		23-32-21	150, 152-199

HOOKUP LIST

D280T132

91-21-51

Section D09300

Page 3

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D09311		447/245/L80		PLUG (MS24266R16B24SN) (continued)				150, 152-199
	CAP	Y	W0047	915	20		23-32-21	150, 152-199
	DED		W0047	908Z			23-32-21	150, 152-199
	DED		W0047	915Z			23-32-21	150, 152-199
			W0047	904Z			23-32-21	150, 152-199
			W0047	905Z			23-32-21	150, 152-199
			W0047	FRD			23-32-21	150, 152-199
D09312		447/245/L80		PLUG (MS24266B24SN)				150, 152-199
	1		W0047	919	20		23-32-21	150, 152-199
	2	UNUSED						150, 152-199
	3	UNUSED						150, 152-199
	4	UNUSED						150, 152-199
	5	UNUSED						150, 152-199
	6	UNUSED						150, 152-199
	7	UNUSED						150, 152-199
	8	UNUSED						150, 152-199
	9	UNUSED						150, 152-199
	10	UNUSED						150, 152-199
	11	UNUSED						150, 152-199
	12		W0047	917	20		23-32-21	150, 152-199
	13		W0047	918	20		23-32-21	150, 152-199
	14		W0047	919	20		23-32-21	150, 152-199
	15		W0047	920R	22		23-32-21	150, 152-199
	15		W0047	922	20		23-32-21	150, 152-199
	16		W0047	920B	22		23-32-21	150, 152-199
	16		W0047	921	20		23-32-21	150, 152-199
	17		W0047	922	20		23-32-21	150, 152-199
	18		W0047	921	20		23-32-21	150, 152-199
	19		W0047	920Z			23-32-21	150, 152-199
	20	UNUSED						150, 152-199
	21	UNUSED						150, 152-199
	22	UNUSED						150, 152-199
	23	UNUSED						150, 152-199
	24	UNUSED						150, 152-199
	25	UNUSED						150, 152-199
	26	UNUSED						150, 152-199
	27	UNUSED						150, 152-199
	28	UNUSED						150, 152-199
	29	UNUSED						150, 152-199
	30	UNUSED						150, 152-199

HOOKUP LIST

D280T132

91-21-51

Section D09300

Page 4

Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D09312		447/245/L80		PLUG (MS24266B24SN) (continued)				150, 152-199
	31	UNUSED						150, 152-199
	32	UNUSED						150, 152-199
	33	UNUSED						150, 152-199
	34	UNUSED						150, 152-199
	35	UNUSED						150, 152-199
	36	UNUSED						150, 152-199
	37	UNUSED						150, 152-199
	38	UNUSED						150, 152-199
	39	UNUSED						150, 152-199
	40	UNUSED						150, 152-199
	41	UNUSED						150, 152-199
	42	UNUSED						150, 152-199
	43	UNUSED						150, 152-199
	44	UNUSED						150, 152-199
	45	UNUSED						150, 152-199
	46	UNUSED						150, 152-199
	47	UNUSED						150, 152-199
	48	UNUSED						150, 152-199
	49	UNUSED						150, 152-199
	50	UNUSED						150, 152-199
	51	UNUSED						150, 152-199
	52	UNUSED						150, 152-199
	53	UNUSED						150, 152-199
	54	UNUSED						150, 152-199
	=C27	UNUSED						150, 152-199
D09313		447/245/L80		PLUG (MS24266R18B8SN)				150, 152-199
	1		W0047	11CX			23-32-21	150, 152-199
	2	UNUSED						150, 152-199
	3	UNUSED						150, 152-199
	4	UNUSED						150, 152-199
	5	UNUSED						150, 152-199
	6	UNUSED						150, 152-199
	7	UNUSED						150, 152-199
	8	UNUSED						150, 152-199
	9	UNUSED						150, 152-199
	10	UNUSED						150, 152-199
	11	UNUSED						150, 152-199
	12	UNUSED						150, 152-199
	13	UNUSED						150, 152-199

HOOKUP LIST

D280T132

91-21-51

Section D09300

Page 5

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D09313		447/245/L80		PLUG (MS24266R18B8SN) (continued)				150, 152-199
	14	UNUSED						150, 152-199
	15	UNUSED						150, 152-199
	16	UNUSED						150, 152-199
	17	UNUSED						150, 152-199
	18	UNUSED						150, 152-199
	19	UNUSED						150, 152-199
	20	UNUSED						150, 152-199
	21	UNUSED						150, 152-199
	22	UNUSED						150, 152-199
	23	UNUSED						150, 152-199
	24	UNUSED						150, 152-199
	25	UNUSED						150, 152-199
	26	UNUSED						150, 152-199
	27	UNUSED						150, 152-199
	28	UNUSED						150, 152-199
	29	UNUSED						150, 152-199
	30	UNUSED						150, 152-199
	31	UNUSED						150, 152-199
	32	UNUSED						150, 152-199
	33	UNUSED						150, 152-199
	34	UNUSED						150, 152-199
	35	UNUSED						150, 152-199
	36	UNUSED						150, 152-199
	37	UNUSED						150, 152-199
	38	UNUSED						150, 152-199
	39	UNUSED						150, 152-199
	40	UNUSED						150, 152-199
	= A1	UNUSED						150, 152-199
	= A2	UNUSED						150, 152-199
	= A3	UNUSED						150, 152-199
	= A4	UNUSED						150, 152-199
	= A5	UNUSED						150, 152-199
	= A6	UNUSED						150, 152-199
	= A7	UNUSED						150, 152-199
	= A8	UNUSED						150, 152-199
	= A9	UNUSED						150, 152-199
	= C1		W0047	11CO			23-32-21	150, 152-199
	= C2	UNUSED						150, 152-199
	= C3	UNUSED						150, 152-199
	= C4	UNUSED						150, 152-199

HOOKUP LIST
D280T132

91-21-51
Section D09300
Page 6
Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D09313		447/245/L80		PLUG (MS24266R18B8SN) (continued)				150, 152-199
	= C5	UNUSED						150, 152-199
	= C6	UNUSED						150, 152-199
	= C7	UNUSED						150, 152-199
	= C8	UNUSED						150, 152-199
	= C9	UNUSED						150, 152-199
	= A10	UNUSED						150, 152-199
	= C10	UNUSED						150, 152-199
D09314		SHELF/E01/05		PLUG				150, 152-199
	1		W0119	911R	22		23-32-21	150, 152-199
	2		W0119	911B	22		23-32-21	150, 152-199
	3		W0119	912R	22		23-32-21	150, 152-199
	4		W0119	912B	22		23-32-21	150, 152-199
	5		W0119	904	22		23-32-21	150, 152-199
	6		W0119	914	22		23-32-21	150, 152-199
	7		W0119	915	22		23-32-21	150, 152-199
	14		W0119	901R	22		23-32-21	150, 152-199
	15		W0119	901B	22		23-32-21	150, 152-199
	20		W0119	903	22		23-32-21	150, 152-199
	21		W0119	917	22		23-32-21	150, 152-199
	22		W0119	918	22		23-32-21	150, 152-199
	DED		W0119	901Z			23-32-21	150, 152-199
	DED		W0119	911Z			23-32-21	150, 152-199
			W0119	912Z			23-32-21	150, 152-199
			W0119	919	20		23-32-21	150, 152-199

HOOKUP LIST

D280T132

91-21-51

Section D09300

Page 7 End

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D10012		P037-00/ /		RELAY SOCKET-				ALL
	A1		W0192	562	22		27-81-11	ALL
	A2		W0192	175	22		27-81-11	ALL
	A3	UNUSED						ALL
	B1	UNUSED						ALL
	B2	UNUSED						ALL
	B3	UNUSED						ALL
	X1		W0192	199	22		27-81-11	ALL
	X2		W0192	174	22		27-81-11	ALL
D10014		P037-00/ /		RELAY SOCKET-				ALL
	A1		W0192	579	20		27-81-21	ALL
	A2		W0192	506	20		27-81-21	ALL
	A3	UNUSED						ALL
	B1	UNUSED						ALL
	B2	UNUSED						ALL
	B3	UNUSED						ALL
	X1		W0192	655	22		27-81-21	ALL
	X2		W0192	656	22		27-81-21	ALL
D10016		P033-00/ /		RELAY SOCKET-				ALL
	A1		W0142	058	20		27-51-11	ALL
	A2		W0142	885	20		27-51-11	ALL
	A3	UNUSED						ALL
	B1	UNUSED						ALL
	B2	UNUSED						ALL
	B3	UNUSED						ALL
	X1		W0142	886	22		27-51-11	ALL
	X2		W0142	884	22		27-51-11	ALL
D10020		1509/285/L014		RCPT-				050-099
	1		W0724	055	20		35-21-12	050-099
	2		W0724	056	20		35-21-12	050-099
D10032		P003-01/ /		PLUG-				ALL
	1		W0031	678	20		27-51-11	ALL
	2		W0031	679	24		27-51-11	ALL
	3		W0031	680	24		27-51-11	ALL
	4		W0031	681	24		27-51-11	ALL
	5		W0031	682	24		27-51-11	ALL
	6		W0031	683	24		27-51-11	ALL

HOOKUP LIST
D280T132

91-21-51
Section D10000
Page 1
Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D10032		P003-01/ /		PLUG- (continued)				ALL
	7		W0031	684	24		27-51-11	ALL
	8		W0031	685	24		27-51-11	ALL
	9		W0031	686	24		27-51-11	ALL
	10		W0031	687	20		27-51-11	ALL
	11	UNUSED						ALL
	12		W0031	688	24		27-51-11	ALL
	13		W0031	689	24		27-51-11	ALL
	14		W0031	690	24		27-51-11	ALL
	15		W0031	691	24		27-51-11	ALL
	16		W0031	692	24		27-51-11	ALL
	17		W0031	693	24		27-51-11	ALL
	18		W0031	694	24		27-51-11	ALL
	19		W0031	695	20		27-51-11	ALL
	20	UNUSED						ALL
	21		W0031	696	24		27-51-11	ALL
	22		W0031	697	24		27-51-11	ALL
	23		W0031	698	24		27-51-11	ALL
	24	UNUSED						ALL
D10034		0790/280/L005		RCPT-				050-099
D10034		0768/280/L005		RCPT-				150-199, 275-299
	1		W1282	161	20		35-21-14	050-099
	1		W1282	065	20		35-21-14	150-199
	1		W1282	003	20		35-21-14	275-278
	1		W1282	571	20		35-21-14	280-299
	2		W1282	162	20		35-21-14	050-099
	2		W1282	066	20		35-21-14	150-199
	2		W1282	004	20		35-21-14	275-278
	2		W1282	572	20		35-21-14	280-299
D10036		0785/278/0000		RCPT-				150-199
D10036		AP0703/ /		RCPT-				280-299
	1		W1282	006	20		35-21-14	150-199
	1		W1282	581	20		35-21-14	280-299
	2		W1282	007	20		35-21-14	150-199
	2		W1282	582	20		35-21-14	280-299
D10038		AP0802E/ /		RCPT-				050-099
D10038		0816/280/L005		RCPT-				150-199
	1		W1282	171	20		35-21-14	050-099

HOOKUP LIST

D280T132

91-21-51

Section D10000

Page 2

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D10038		AP0802E / /		RCPT- (continued)				050-099
D10038		0816/280/L005		RCPT- (continued)				150-199
	1		W1282	009	20		35-21-14	150-199
	2		W1282	172	20		35-21-14	050-099
	2		W1282	010	20		35-21-14	150-199
D10040		0893/280/L005		RCPT-				050-099, 275-299
D10040		893/280/L5		RCPT-				150-199
	1		W1166	101	20		35-21-14	050-099
	1		W1282	017	20		35-21-14	150-199, 275-278
	1		W1282	641	20		35-21-14	280-299
	2		W1166	102	20		35-21-14	050-099
	2		W1282	018	20		35-21-14	150-199, 275-278
	2		W1282	642	20		35-21-14	280-299
D10042		0948/280/L005		RCPT-				050-099, 275-299
D10042		0951/280/L005		RCPT-				150-199
	1		W1166	121	20		35-21-14	050-099
	1		W1282	023	20		35-21-14	150-199, 275-278
	1		W1282	661	20		35-21-14	280-299
	2		W1166	122	20		35-21-14	050-099
	2		W1282	024	20		35-21-14	150-199, 275-278
	2		W1282	662	20		35-21-14	280-299
D10044		0974/280/L005		RCPT-				050-099, 275-299
	1		W1166	131	20		35-21-14	050-099
	1		W1282	026	20		35-21-14	275-278
	1		W1282	671	20		35-21-14	280-299
	2		W1166	132	20		35-21-14	050-099
	2		W1282	027	20		35-21-14	275-278
	2		W1282	672	20		35-21-14	280-299
D10046		1001/280/L005		RCPT-				050-099, 275-299
	1		W1166	141	20		35-21-14	050-099
	1		W1282	028	20		35-21-14	275-278
	1		W1282	681	20		35-21-14	280-299
	2		W1166	142	20		35-21-14	050-099
	2		W1282	029	20		35-21-14	275-278
	2		W1282	682	20		35-21-14	280-299

HOOKUP LIST
D280T132

91-21-51
Section D10000
Page 3
Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D10050		1391/295/R056		PLUG				050-099, 162-199
D10050		1428/295/R056		PLUG				150-157
	1	UNUSED						050-099, 150-199
	2	UNUSED						050-099, 150-199
	3	UNUSED						050-099, 150-199
	4	UNUSED						050-099, 150-199
	5		W0816	655	22		33-21-34	050-099, 150-199
	6	UNUSED						050-099, 150-199
	7		W0816	656	20		33-21-34	050-099, 150-199
	8		W0816	657	20		33-21-34	050-099, 150-199
	9		W0816	581	22		33-21-34	050-099
	9		W0816	135	22		33-21-34	150-199
	10		W0816	582	22		33-21-34	050-099
	10		W0816	136	22		33-21-34	150-199
	11		W0816	579	22		33-21-34	050-099
	11		W0816	577	22		33-21-34	150-199
	12		W0816	580	22		33-21-34	050-099
	12		W0816	578	22		33-21-34	150-199
	DED		W0816	655Z			33-21-34	166
	DED		W0816	656Z			33-21-34	166
D10062		P050-00/ /		RCPT-				ALL
	1		W1114	073	24		30-31-11	ALL
	2		W1114	050	22		28-22-12	ALL
	3	UNUSED						ALL
	4		W1114	066	22		73-21-18	ALL
	5		W1114	092	24		73-21-11	ALL
	6		W1114	106	24		73-21-18	ALL
	7	UNUSED						ALL
	8		W1114	062	24		73-21-18	ALL
	9		W1114	213R	24		77-12-12	ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12		W1114	093	24		73-21-11	ALL
	13		W1114	213B	24		77-12-12	ALL
	14		W1114	131	24		73-21-18	ALL
	15		W1114	105	22		73-21-18	ALL
	16		W1114	002	22		21-51-11	ALL
	17		W1114	038	22		36-11-52	ALL
	18		W1114	084	24		80-11-21	ALL
	19	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D10000

Page 4

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D10062		P050-00/ /		RCPT- (continued)				ALL
	20		W1114	214B	24		77-12-12	ALL
	21		W1114	214R	24		77-12-12	ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25		W1114	004	24		21-51-11	ALL
	26		W1114	003	24		21-51-11	ALL
	27		W1114	088	24		24-51-52	ALL
	28		W1114	068	22		73-21-18	ALL
	29	UNUSED						ALL
	30		W1114	047	24		29-21-31	ALL
	31		W1114	086	22		73-21-18	ALL
	32		W1114	076	24		30-34-21	ALL
	33	UNUSED						ALL
	34		W1114	087	24		24-51-52	ALL
	35	UNUSED						ALL
	36		W1114	072	22		30-31-11	ALL
	37		W1114	051	24		28-22-12	ALL
	38	UNUSED						ALL
	39		W1114	110	22		80-11-21	ALL
	40		W1114	085	24		80-11-21	ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	44		W1114	PD1			73-21-18	ALL
	45	UNUSED						ALL
	46		W1114	130	22		73-21-18	ALL
	47	UNUSED						ALL
	48		W1114	109	22		80-11-21	ALL
	49		W1114	011	22		21-58-11	ALL
	50		W1114	078	22		30-31-21	ALL
	51	UNUSED						ALL
	52		W1114	PD1			73-21-18	ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
	56		W1114	012	24		21-58-11	ALL
	57		W1114	079	24		30-31-21	ALL
	58	UNUSED						ALL
	59		W1114	046	24		29-21-31	ALL

HOOKUP LIST

D280T132

91-21-51

Section D10000

Page 5

Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D10062		P050-00/ /		RCPT- (continued)				ALL
	60	UNUSED						ALL
	61		W1114	055	22		36-11-52	ALL
	62		W1114	077	22		30-34-21	ALL
	63		W1114	065	24		73-21-18	050-099, 155-199, 277-299
	63		W1114	065A	24		73-21-18	150-154, 275-276
	64	UNUSED						ALL
	65		W1114	067	24		73-21-18	ALL
	66	UNUSED						ALL
	DED		W1114	062Z			73-21-18	ALL
	DED		W1114	072Z			30-31-11	ALL
	DED		W1114	073Z			30-31-11	ALL
	DED		W1114	213Z			77-12-12	ALL
	DED		W1114	214Z			77-12-12	ALL
			W1114	092F	20		73-21-11	ALL
			W1114	092Z			73-21-11	ALL
			W1114	093F	20		73-21-11	ALL
			W1114	093Z			73-21-11	ALL
D10064		P050-00/ /		RCPT-				ALL
	1		W1114	074	24		30-31-11	ALL
	2		W1114	053	22		28-22-12	ALL
	3	UNUSED						ALL
	4		W1114	064	22		73-21-18	ALL
	5		W1114	094	24		73-21-11	ALL
	6		W1114	101	24		73-21-18	ALL
	7	UNUSED						ALL
	8		W1114	063	24		73-21-18	ALL
	9		W1114	211R	24		77-12-12	ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12		W1114	095	24		73-21-11	ALL
	13		W1114	211B	24		77-12-12	ALL
	14		W1114	132	24		73-21-18	ALL
	15		W1114	102	22		73-21-18	ALL
	16		W1114	007	22		21-51-21	ALL
	17		W1114	018	22		36-11-51	ALL
	18		W1114	070	24		80-11-11	ALL
	19	UNUSED						ALL
	20		W1114	212B	24		77-12-12	ALL
	21		W1114	212R	24		77-12-12	ALL

HOOKUP LIST

D280T132

91-21-51

Section D10000

Page 6

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D10064		P050-00/ /		RCPT- (continued)				ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25		W1114	006	24		21-51-21	ALL
	26		W1114	005	24		21-51-21	ALL
	27		W1114	089	24		24-51-52	ALL
	28		W1114	069	22		73-21-18	ALL
	29	UNUSED						ALL
	30		W1114	048	24		29-21-31	ALL
	31		W1114	059	22		73-21-18	ALL
	32		W1114	082	24		30-34-11	ALL
	33	UNUSED						ALL
	34		W1114	090	24		24-51-52	ALL
	35	UNUSED						ALL
	36		W1114	075	22		30-31-11	ALL
	37		W1114	052	24		28-22-12	ALL
	38	UNUSED						ALL
	39		W1114	108	22		80-11-11	ALL
	40		W1114	071	24		80-11-11	ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	44		W1114	PE1			73-21-18	ALL
	45	UNUSED						ALL
	46		W1114	133	22		73-21-18	ALL
	47	UNUSED						ALL
	48		W1114	107	22		80-11-11	ALL
	49		W1114	016	24		21-58-11	ALL
	50		W1114	081	22		30-31-21	ALL
	51	UNUSED						ALL
	52		W1114	PE1			73-21-18	ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
	56		W1114	012	24		21-58-11	ALL
	57		W1114	080	24		30-31-21	ALL
	58	UNUSED						ALL
	59		W1114	047	24		29-21-31	ALL
	60	UNUSED						ALL
	61		W1114	028	22		36-11-51	ALL

HOOKUP LIST
D280T132

91-21-51
Section D10000
Page 7
Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D10064		P050-00/ /		RCPT- (continued)				ALL
	62		W1114	083	22		30-34-11	ALL
	63		W1114	057	24		73-21-18	ALL
	64	UNUSED						ALL
	65		W1114	058	24		73-21-18	ALL
	66	UNUSED						ALL
	DED		W1114	063Z			73-21-18	ALL
	DED		W1114	070Z			80-11-11	ALL
	DED		W1114	071Z			80-11-11	ALL
	DED		W1114	074Z			30-31-11	ALL
	DED		W1114	075Z			30-31-11	ALL
	DED		W1114	082Z			30-34-11	ALL
	DED		W1114	083Z			30-34-11	ALL
	DED		W1114	211Z			77-12-12	ALL
	DED		W1114	212Z			77-12-12	ALL
			W1114	094F	20		73-21-11	ALL
			W1114	094Z			73-21-11	ALL
			W1114	095F	20		73-21-11	ALL
			W1114	095Z			73-21-11	ALL
D10068		P036-00/ /		RELAY SOCKET-P36				ALL
	1		W0184	765	24		28-22-12	ALL
	2		W0184	764	20		28-22-12	ALL
	3		W0184	761	22		28-22-12	ALL
	4	UNUSED						ALL
	5		W0184	763	24		28-22-12	ALL
	6		W0184	766	20		28-22-12	ALL
	7		W0184	762	22		28-22-12	ALL
	8	UNUSED						ALL
	DED		W0184	765Z			28-22-12	ALL
D10074		P037-00/ /		RELAY SOCKET-P37				ALL
	1		W0192	04A	20		21-58-11	ALL
	2		W0192	04B	24		21-58-11	ALL
	3	UNUSED						ALL
	4		W0192	02V	24		21-58-11	ALL
	5		W0192	03Z	20		21-58-11	ALL
	6		W0192	03T	24		21-58-11	ALL
	7		W0192	03Y	20		21-58-11	ALL
	8		W0192	545	24		21-58-16	ALL
	9	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D10000

Page 8

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D10074		P037-00/ /		RELAY SOCKET-P37 (continued)				ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12		W0192	02U	24		21-58-11	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
D10078		P037-00/ /		RELAY SOCKET-P37				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W0192	04G	24		21-58-14	ALL
	5		W0192	04D	20		21-58-14	ALL
	6		W0192	04E	24		21-58-14	ALL
	7		W0192	02T	20		21-26-11	ALL
	8		W0192	02R	24		21-26-11	ALL
	9		W0192	02Q	24		21-26-11	ALL
	10	UNUSED						ALL
	11		W0192	02S	20		21-26-11	ALL
	12		W0192	04F	24		21-58-14	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	DED		W0192	02RZ			21-26-11	150-154, 275
	DED		W0192	02TZ			21-26-11	150-154, 275
	DED		W0192	04GZ			21-58-14	150-154, 275
D10088		P037-00/ /		RELAY SOCKET-P37				ALL
	1		W0192	69D	24		78-36-21	ALL
	2		W0192	06L	24		78-36-21	ALL
	3		W0192	06S	20		78-36-21	ALL
	4		W0192	06K	24		78-36-21	ALL
	5	UNUSED						ALL
	6		W0192	06Q	24		78-36-21	ALL
	7		W0192	06R	24		78-36-21	ALL
	8		W0192	69H	24		78-36-21	ALL
D10090		P037-00/ /		RELAY SOCKET-P37				ALL
	1		W0192	06Q	24		78-36-21	ALL
	2		W0192	06V	24		78-36-21	ALL
	3		W0192	06Y	20		78-36-21	ALL
	4		W0192	06L	24		78-36-21	ALL

HOOKUP LIST

D280T132

91-21-51

Section D10000

Page 9

Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D10090		P037-00/ /		RELAY SOCKET-P37 (continued)				ALL
	5	UNUSED						ALL
	6		W0192	69G	24		78-36-21	ALL
	7		W0192	06X	24		78-36-21	ALL
	8	UNUSED						ALL
D10092		P054-00/ /		RCPT-				ALL
	1		W1082	152R	22		26-11-11	ALL
	2		W1082	052R	22		26-11-11	ALL
	3		W1082	157R	22		26-11-11	ALL
	4	UNUSED						ALL
	5		W1082	702R	22		26-11-11	ALL
	6	UNUSED						ALL
	7		W1082	089R	22		26-11-11	ALL
	8		W1082	081R	22		26-11-11	ALL
	9		W1082	158R	22		26-11-11	ALL
	10		W1082	110R	22		26-11-11	ALL
	11		W1082	082R	22		26-11-11	ALL
	12	UNUSED						ALL
	13		W1082	087R	22		26-11-11	ALL
	14		W1082	086R	22		26-11-11	ALL
	15		W1082	056R	22		26-11-11	ALL
	16		W1082	084R	22		26-11-11	ALL
	17		W1082	090R	22		26-11-11	ALL
	18		W1082	184R	22		26-11-12	ALL
	19		W1082	066R	22		26-11-12	ALL
	20		W1082	186R	22		26-11-12	ALL
	21		W1082	188R	22		26-11-12	ALL
	22		W1082	115R	22		26-11-12	ALL
	23		W1082	114R	22		26-11-12	ALL
	24		W1082	708R	22		26-11-12	ALL
	25		W1082	190R	22		26-11-12	ALL
	26	UNUSED						ALL
	27		W1082	167R	22		26-11-12	ALL
	28		W1082	067R	22		26-11-12	ALL
	29		W1082	168R	22		26-11-12	ALL
	30		W1082	165R	22		26-11-12	ALL
	31	UNUSED						ALL
	32		W1082	185R	22		26-11-12	ALL
	33		W1082	162R	22		26-11-12	ALL
	34		W1082	062R	22		26-11-12	ALL

HOOKUP LIST

D280T132

91-21-51

Section D10000

Page 10

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D10092		P054-00/ /		RCPT- (continued)				ALL
	35		W1082	PB3			99-99-99	ALL
	36		W1082	722R	22		26-11-11	ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39		W1082	058R	22		26-11-11	ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42		W1082	087R	22		26-11-11	ALL
	43	UNUSED						ALL
	44		W1082	155R	22		26-11-11	ALL
	45		W1082	057R	22		26-11-11	ALL
	46		W1082	088R	22		26-11-11	ALL
	47		W1082	105R	22		26-11-11	ALL
	48		W1082	156R	22		26-11-11	ALL
	49		W1082	083R	22		26-11-11	ALL
	50		W1082	085R	22		26-11-11	ALL
	51		W1082	183R	22		26-11-12	ALL
	52		W1082	166R	22		26-11-12	ALL
	53		W1082	187R	22		26-11-12	ALL
	54		W1082	065R	22		26-11-12	ALL
	55		W1082	055R	22		26-11-11	ALL
	56	UNUSED						ALL
	57	UNUSED						ALL
	58	UNUSED						ALL
	59	UNUSED						ALL
	60		W1082	187R	22		26-11-12	ALL
	61	UNUSED						ALL
	62		W1082	723R	22		26-11-12	ALL
	63		W1082	703R	22		26-11-12	ALL
	64	UNUSED						ALL
	65		W1082	068R	22		26-11-12	ALL
	66		W1082	PB3			99-99-99	ALL
D10094		P054-00/ /		RCPT-				ALL
	1		W1082	652R	22		26-11-21	ALL
	2		W1082	552R	22		26-11-21	ALL
	3		W1082	657R	22		26-11-21	ALL
	4	UNUSED						ALL
	5		W1082	704R	22		26-11-21	ALL
	6	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D10000
Page 11
Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D10094		P054-00/ /		RCPT- (continued)				ALL
	7		W1082	589R	22		26-11-21	ALL
	8		W1082	581R	22		26-11-21	ALL
	9		W1082	658R	22		26-11-21	ALL
	10		W1082	610R	22		26-11-21	ALL
	11		W1082	582R	22		26-11-21	ALL
	12	UNUSED						ALL
	13		W1082	587R	22		26-11-21	ALL
	14		W1082	586R	22		26-11-21	ALL
	15		W1082	556R	22		26-11-21	ALL
	16		W1082	584R	22		26-11-21	ALL
	17		W1082	590R	22		26-11-21	ALL
	18		W1082	684R	22		26-11-22	ALL
	19		W1082	566R	22		26-11-22	ALL
	20		W1082	686R	22		26-11-22	ALL
	21		W1082	688R	22		26-11-22	ALL
	22		W1082	615R	22		26-11-22	ALL
	23		W1082	614R	22		26-11-22	ALL
	24		W1082	728R	22		26-11-22	ALL
	25		W1082	690R	22		26-11-22	ALL
	26	UNUSED						ALL
	27		W1082	667R	22		26-11-22	ALL
	28		W1082	567R	22		26-11-22	ALL
	29		W1082	668R	22		26-11-22	ALL
	30		W1082	665R	22		26-11-22	ALL
	31	UNUSED						ALL
	32		W1082	685R	22		26-11-22	ALL
	33		W1082	662R	22		26-11-22	ALL
	34		W1082	562R	22		26-11-22	ALL
	35		W1082	PB4			99-99-99	ALL
	36		W1082	724R	22		26-11-21	ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39		W1082	558R	22		26-11-21	ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42		W1082	587R	22		26-11-21	ALL
	43	UNUSED						ALL
	44		W1082	655R	22		26-11-21	ALL
	45		W1082	557R	22		26-11-21	ALL
	46		W1082	588R	22		26-11-21	ALL

HOOKUP LIST

D280T132

91-21-51

Section D10000

Page 12

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D10094		P054-00/ /		RCPT- (continued)				ALL
	47		W1082	605R	22		26-11-21	ALL
	48		W1082	656R	22		26-11-21	ALL
	49		W1082	583R	22		26-11-21	ALL
	50		W1082	585R	22		26-11-21	ALL
	51		W1082	683R	22		26-11-22	ALL
	52		W1082	666R	22		26-11-22	ALL
	53		W1082	687R	22		26-11-22	ALL
	54		W1082	565R	22		26-11-22	ALL
	55		W1082	555R	22		26-11-21	ALL
	56	UNUSED						ALL
	57	UNUSED						ALL
	58	UNUSED						ALL
	59	UNUSED						ALL
	60		W1082	687R	22		26-11-22	ALL
	61	UNUSED						ALL
	62		W1082	725R	22		26-11-22	ALL
	63		W1082	705R	22		26-11-22	ALL
	64	UNUSED						ALL
	65		W1082	568R	22		26-11-22	ALL
	66		W1082	PB4			99-99-99	ALL
D10096		P054-00/ /		RCPT-				ALL
	1		W1082	172R	22		26-15-11	ALL
	2		W1082	672R	22		26-15-11	ALL
	3		W1082	177R	22		26-15-11	ALL
	4	UNUSED						ALL
	5		W1082	706R	22		26-15-11	ALL
	6	UNUSED						ALL
	7		W1082	699R	22		26-15-11	ALL
	8		W1082	691R	22		26-15-11	ALL
	9		W1082	178R	22		26-15-11	ALL
	10		W1082	130R	22		26-15-11	ALL
	11		W1082	692R	22		26-15-11	ALL
	12	UNUSED						ALL
	13		W1082	697R	22		26-15-11	ALL
	14		W1082	696R	22		26-15-11	ALL
	15		W1082	676R	22		26-15-11	ALL
	16		W1082	694R	22		26-15-11	ALL
	17		W1082	700R	22		26-15-11	ALL
	18	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D10000

Page 13

Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D10096		P054-00/ /		RCPT- (continued)				ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35		W1082	PB5			99-99-99	ALL
	36		W1082	726R	22		26-15-11	ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39		W1082	678R	22		26-15-11	ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42		W1082	697R	22		26-15-11	ALL
	43	UNUSED						ALL
	44		W1082	175R	22		26-15-11	ALL
	45		W1082	677R	22		26-15-11	ALL
	46		W1082	698R	22		26-15-11	ALL
	47		W1082	125R	22		26-15-11	ALL
	48		W1082	176R	22		26-15-11	ALL
	49		W1082	693R	22		26-15-11	ALL
	50		W1082	695R	22		26-15-11	ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55		W1082	675R	22		26-15-11	ALL
	56	UNUSED						ALL
	57	UNUSED						ALL
	58	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D10000

Page 14

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D10096		P054-00/ /		RCPT- (continued)				ALL
	59	UNUSED						ALL
	60	UNUSED						ALL
	61	UNUSED						ALL
	62	UNUSED						ALL
	63	UNUSED						ALL
	64	UNUSED						ALL
	65	UNUSED						ALL
	66		W1082	PB5			99-99-99	ALL
D10098		P054-00/ /		RCPT-				ALL
	1		W1082	071R	24		26-16-11	ALL
	2		W1082	571R	24		26-16-11	ALL
	3		W1082	636R	24		26-16-11	ALL
	4		W1082	070R	24		26-16-11	ALL
	5		W1082	713R	24		26-16-11	ALL
	6	UNUSED						ALL
	7		W1082	069R	24		26-16-11	ALL
	8		W1082	574R	24		26-16-11	ALL
	9	UNUSED						ALL
	10		W1082	643R	24		26-16-11	ALL
	11		W1082	072R	22		26-16-11	ALL
	12	UNUSED						ALL
	13		W1082	097R	24		26-16-11	ALL
	14		W1082	096R	24		26-16-11	ALL
	15		W1082	079R	24		26-16-11	ALL
	16		W1082	094R	24		26-16-11	ALL
	17		W1082	100R	24		26-16-11	ALL
	18		W1082	594R	24		26-16-11	ALL
	19		W1082	579R	24		26-16-11	ALL
	20		W1082	596R	24		26-16-11	ALL
	21		W1082	598R	24		26-16-11	ALL
	22		W1082	075R	24		26-16-11	ALL
	23		W1082	572R	22		26-16-11	ALL
	24		W1082	575R	24		26-16-11	ALL
	25		W1082	600R	24		26-16-11	ALL
	26	UNUSED						ALL
	27		W1082	638R	24		26-16-11	ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30		W1082	637R	24		26-16-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D10000

Page 15

Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D10098		P054-00/ /		RCPT- (continued)				ALL
	31	UNUSED						ALL
	32		W1082	595R	24		26-16-11	ALL
	33		W1082	073R	24		26-16-11	ALL
	34		W1082	573R	24		26-16-11	ALL
	35		W1082	PB6			99-99-99	ALL
	36		W1082	733R	24		26-16-11	ALL
	37	UNUSED						ALL
	38		W1082	576R	24		26-16-11	ALL
	39		W1082	136R	24		26-16-11	ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	44		W1082	635R	24		26-16-11	ALL
	45	UNUSED						ALL
	46		W1082	098R	24		26-16-11	ALL
	47		W1082	074R	24		26-16-11	ALL
	48		W1082	080R	24		26-16-11	ALL
	49		W1082	093R	24		26-16-11	ALL
	50		W1082	095R	24		26-16-11	ALL
	51		W1082	593R	24		26-16-11	ALL
	52		W1082	580R	24		26-16-11	ALL
	53		W1082	597R	24		26-16-11	ALL
	54		W1082	137R	24		26-16-11	ALL
	55		W1082	135R	24		26-16-11	ALL
	56	UNUSED						ALL
	57		W1082	076R	24		26-16-11	ALL
	58		W1082	570R	24		26-16-11	ALL
	59	UNUSED						ALL
	60	UNUSED						ALL
	61	UNUSED						ALL
	62		W1082	734R	24		26-16-11	ALL
	63		W1082	714R	24		26-16-11	ALL
	64	UNUSED						ALL
	65		W1082	138R	24		26-16-11	ALL
	66		W1082	PB6			99-99-99	ALL

HOOKUP LIST

D280T132

91-21-51

Section D10000

Page 16 End

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D10100		P008-00/ /		PLUG-				ALL
	1		W0614	054R	22		26-11-12	ALL
	2		W0614	199R	20		26-21-11	ALL
	3		W0614	551	22		33-16-18	ALL
	4		W0614	552	22		33-16-18	ALL
	5	UNUSED						ALL
D10102		P008-00/ /		PLUG-				ALL
	1		W0606	054R	22		26-11-22	ALL
	2		W0606	199R	20		26-21-11	ALL
	3		W0606	551	22		33-16-18	ALL
	4		W0606	552	22		33-16-18	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D10104		P008-00/ /		PLUG-				ALL
	1		W0614	014	20		33-13-18	050-099, 150-155, 162-165, 275-276
	1		W0614	201R	20		33-13-18	156-157, 166-199, 277-299
	2		W0614	015	20		33-13-18	050-099, 150-155, 162-165, 275-276
	2		W0614	201B	20		33-13-18	156-157, 166-199, 277-299
	3		W0614	174	22		33-16-18	ALL
	4		W0614	175	22		33-16-18	ALL
	5		W0614	063R	22		26-11-11	ALL
	6		W0614	009R	20		26-11-11	ALL
	7		W0614	050R	22		26-11-11	ALL
	8		W0614	045R	22		26-11-11	ALL
	9		W0614	055R	22		26-11-12	ALL
	10		W0614	065R	22		26-15-11	ALL
	11		W0614	072R	24		26-16-11	ALL
	12		W0614	153	22		49-61-11	ALL
	13		W0614	154	22		49-61-11	ALL
	14		W0614	070R	22		26-15-11	ALL
	15		W0614	625R	22		26-17-11	050-099, 150-154, 275-299
	15		W0614	625R	20		26-17-11	155-199
	16		W0614	626R	22		26-17-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D10100

Page 1

Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D10104		P008-00/ /		PLUG- (continued)				ALL
	17		W0614	147R	22		26-17-11	ALL
	18		W0614	628R	20		26-17-11	ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D10106		P008-00/ /		PLUG-				ALL
	1	UNUSED						ALL
	2		W0606	012R	20		26-11-11	ALL
	3	UNUSED						ALL
	4		W0606	055R	22		26-11-22	ALL
	5		W0606	045R	22		26-11-21	ALL
	6		W0606	050R	22		26-11-21	ALL
	7		W0606	072R	24		26-16-11	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D10108		P037-00/ /		PLUG-				ALL
	1		W0198	528	20		27-51-61	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W0198	527	24		27-51-61	ALL
	5		W0198	529	22		27-51-61	ALL
	6		W0198	530	20		27-51-61	ALL
	7	UNUSED						ALL
D10110		P061-00/ /		PLUG-P61				ALL
	1		W0062	821	22		27-13-11	ALL
	2	UNUSED						ALL
	3		W0062	823	22		33-16-26	ALL
	4		W0062	824	22		33-16-26	ALL
	5		W0062	825	20		27-13-11	ALL
	6		W0062	826	20		27-13-11	ALL
	7		W0062	827	20		27-13-11	ALL

HOOKUP LIST
D280T132

91-21-51
Section D10100
Page 2
Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D10110		P061-00/ /		PLUG-P61 (continued)				ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10		W0062	830	24		24-11-11	ALL
	11		W0062	811	22		27-23-11	ALL
	12		W0062	832	20		24-11-11	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15		W0062	815	20		27-23-11	ALL
	16		W0062	816	20		27-23-11	ALL
	17		W0062	817	20		27-23-11	ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21		W0062	64A	24		24-22-11	ALL
	22		W0062	670	24		24-22-11	ALL
	23		W0062	64B	24		24-22-11	ALL
	24	UNUSED						ALL
D10112		P061-00/ /		PLUG-P61				ALL
	1		W0062	802	22		27-13-11	ALL
	2	UNUSED						ALL
	3		W0062	803	22		33-16-26	ALL
	4		W0062	804	22		33-16-26	ALL
	5		W0062	805	20		27-13-11	ALL
	6		W0062	806	20		27-13-11	ALL
	7		W0062	807	20		27-13-11	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11		W0062	831	22		27-23-11	ALL
	12	UNUSED						ALL
	13		W0062	813	22		33-16-26	ALL
	14		W0062	814	22		33-16-26	ALL
	15		W0062	835	20		27-23-11	ALL
	16		W0062	836	20		27-23-11	ALL
	17		W0062	837	20		27-23-11	ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21		W0062	64D	24		24-22-41	ALL

HOOKUP LIST
D280T132

91-21-51
Section D10100
Page 3
Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D10112		P061-00/ /		PLUG-P61 (continued)				ALL
	22		W0062	822	24		24-22-41	ALL
	23		W0062	64C	24		24-22-41	ALL
	24	UNUSED						ALL
	DED		W0062	802Z			27-13-11	ALL
	DED		W0062	803Z			33-16-26	ALL
	DED		W0062	805Z			27-13-11	ALL
	DED		W0062	806Z			27-13-11	ALL
	DED		W0062	807Z			27-13-11	ALL
	DED		W0062	813Z			33-16-26	ALL
	DED		W0062	814Z			33-16-26	ALL
	DED		W0062	831Z			27-23-11	ALL
	DED		W0062	835Z			27-23-11	ALL
	DED		W0062	836Z			27-23-11	ALL
	DED		W0062	837Z			27-23-11	ALL
D10114		P061-00/ /		PLUG-				ALL
	1		W0066	801	22		27-13-11	ALL
	2	UNUSED						ALL
	3		W0066	803	22		33-16-26	ALL
	4		W0066	804	22		33-16-26	ALL
	5		W0066	805	20		27-13-11	ALL
	6		W0066	806	20		27-13-11	ALL
	7		W0066	807	20		27-13-11	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11		W0066	811	22		27-23-11	ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15		W0066	815	20		27-23-11	ALL
	16		W0066	816	20		27-23-11	ALL
	17		W0066	817	20		27-23-11	ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21		W0066	821	24		24-22-21	ALL
	22		W0066	673	24		24-22-21	ALL
	23		W0066	823	24		24-22-21	ALL
	24	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D10100

Page 4

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D10122		P001-03/ /		PLUG-				ALL
	1	FM	W0011	664	16		33-13-11	ALL
	2	FM	W0011	665	16		33-13-11	ALL
	3		W0011	736	24		73-21-14	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15		W0011	509R	24		73-21-14	ALL
	16		W0011	509B	24		73-21-14	ALL
	17	UNUSED						ALL
	18		W0011	738	24		73-21-14	ALL
	19	UNUSED						ALL
	20		W0011	FRI			73-21-14	050-099
	20		W0011	FRA			73-21-14	150-199, 275-299
	21		W0011	737	20		73-21-14	ALL
	22	UNUSED						ALL
	23		W0011	510R	24		73-21-14	ALL
	24		W0011	510B	24		73-21-14	ALL
	DED		W0011	736Z			73-21-14	ALL
	REF		W0011	509Z			73-21-14	150-199, 275-299
	REF		W0011	510Z			73-21-14	150-199, 275-299
	REF		W0011	FRA			73-21-14	150-199, 275-299
			W0011	509Z			73-21-14	050-099
			W0011	510Z			73-21-14	050-099
			W0011	FRI			73-21-14	050-099
D10124		P001-03/ /		PLUG-				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D10100
Page 5
Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D10124		P001-03/ /		PLUG- (continued)				ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9		W0031	671	20		73-21-14	ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15		W0031	509R	24		73-21-14	ALL
	16		W0031	509B	24		73-21-14	ALL
	17	UNUSED						ALL
	18		W0031	672	24		73-21-14	ALL
	19	UNUSED						ALL
	20		W0031	FRI			73-21-14	050-099
	20		W0031	FRA			73-21-14	150-199, 275-299
	21	UNUSED						ALL
	22	UNUSED						ALL
	23		W0031	510R	24		73-21-14	ALL
	24		W0031	510B	24		73-21-14	ALL
	REF		W0031	509Z			73-21-14	150-199, 275-299
	REF		W0031	510Z			73-21-14	150-199, 275-299
	REF		W0031	FRA			73-21-14	150-199, 275-299
			W0031	509Z			73-21-14	050-099
			W0031	510Z			73-21-14	050-099
			W0031	FRI			73-21-14	050-099
D10126		P033-00/ /		RELAY SOCKET-P36				ALL
	A1		W0142	04C	24		21-44-11	ALL
	A2		W0142	04A	24		21-44-11	ALL
	A3		W0142	04D	24		21-44-11	ALL
	B1	UNUSED						ALL
	B2		W0142	03L	24		21-26-21	ALL
	B3		W0142	02Z	24		21-26-21	ALL
	C1		W0142	03S	22		21-44-21	ALL
	C2		W0142	03M	24		21-44-21	ALL
	C3		W0142	03R	24		21-44-21	ALL
	D1	UNUSED						ALL
	D2		W0142	04F	24		21-44-21	ALL
	D3		W0142	04E	24		21-44-21	ALL
	X1		W0142	03Z	24		21-44-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D10100

Page 6

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D10126		P033-00/ /		RELAY SOCKET-P36 (continued)				ALL
	X2		W0142	04B	20		21-44-11	ALL
D10128		P033-00/ /		RELAY SOCKET-				ALL
	1		W0144	01F	24		21-51-13	ALL
	2		W0144	01C	24		21-51-13	ALL
	3		W0144	205R	22		21-51-12	ALL
	4		W0144	01D	24		21-51-13	ALL
	5		W0144	206R	22		21-51-12	ALL
	6		W0144	01B	24		21-51-13	ALL
	7		W0144	206B	22		21-51-12	ALL
	8		W0144	01E	24		21-51-13	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12		W0144	01A	24		21-51-13	ALL
	13	UNUSED						ALL
	14		W0144	205B	22		21-51-12	ALL
	DED		W0144	01AZ			21-51-13	ALL
	DED		W0144	01BZ			21-51-13	ALL
	DED		W0144	01CZ			21-51-13	ALL
	DED		W0144	01DZ			21-51-13	ALL
	DED		W0144	01EZ			21-51-13	ALL
	DED		W0144	01FZ			21-51-13	ALL
D10130		P033-00/ /		RELAY SOCKET-P33				ALL
	1		W0142	202R	24		21-51-21	ALL
	2		W0142	201R	24		21-51-21	ALL
	3	UNUSED						ALL
	4		W0142	201B	24		21-51-21	ALL
	5		W0142	202B	24		21-51-21	ALL
	6		W0142	05R	24		21-53-21	ALL
	7		W0142	05N	24		21-51-21	ALL
	8		W0142	05M	24		21-51-21	ALL
	9		W0142	05Q	20		21-53-21	ALL
	10	UNUSED						ALL
	11		W0142	05P	24		21-53-21	ALL
	12		W0142	05S	24		21-53-21	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D10100

Page 7

Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D10132		P033-00/ /		RELAY SOCKET-				ALL
	1		W0144	01V	24		21-51-23	ALL
	2		W0144	01S	24		21-51-23	ALL
	3		W0144	203R	22		21-51-22	ALL
	4		W0144	01T	24		21-51-23	ALL
	5		W0144	204R	22		21-51-22	ALL
	6		W0144	01R	24		21-51-23	ALL
	7		W0144	204B	22		21-51-22	ALL
	8		W0144	01U	24		21-51-23	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12		W0144	01W	24		21-51-23	ALL
	13	UNUSED						ALL
	14		W0144	203B	22		21-51-22	ALL
	DED		W0144	203Z			21-51-22	ALL
	DED		W0144	204Z			21-51-22	ALL
D10134		0859/125/L018		PLUG-				ALL
	1		W0938	201B	20		21-51-13	ALL
	2		W0938	201R	20		21-51-13	ALL
D10136		0879/124/L034		PLUG-				ALL
	1		W0938	202B	20		21-51-13	ALL
	2		W0938	202R	20		21-51-13	ALL
D10138		0879/125/R059		PLUG-				ALL
	1		W0612	201B	20		21-51-23	ALL
	2		W0612	201R	20		21-51-23	ALL
D10140		0879/124/R044		PLUG-				ALL
	1		W0612	202B	20		21-51-23	ALL
	2		W0612	202R	20		21-51-23	ALL
D10142		P036-00/ /		RELAY SOCKET-				ALL
	1		W0176	234R	24		21-51-11	ALL
	2		W0176	215R	24		21-51-11	ALL
	3	UNUSED						ALL
	4		W0176	215B	24		21-51-11	ALL
	5		W0176	234B	24		21-51-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D10100

Page 8

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D10142		P036-00/ /		RELAY SOCKET- (continued)				ALL
	6		W0176	01R	24		21-53-11	ALL
	7		W0176	01M	24		21-51-11	ALL
	8		W0176	01L	24		21-51-11	ALL
	9		W0176	01N	20		21-53-11	ALL
	10	UNUSED						ALL
	11		W0176	01P	24		21-53-11	ALL
	12		W0176	01Q	24		21-53-11	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
D10144		0820/130/L090		PLUG-				050-099, 150-199
D10144		0783/130/L038		PLUG-				275-299
	1		W0508	205R	20		36-21-11	ALL
	2		W0508	205B	20		36-21-11	ALL
	3		W0508	036	20		36-21-11	ALL
	4	DK	W0508	037	18		36-21-11	ALL
	5	DK	W0508	038	18		36-21-11	ALL
D10146		0790/130/R090		PLUG-				ALL
	1		W0952	205R	20		36-21-11	ALL
	2		W0952	205B	20		36-21-11	ALL
	3		W0952	033	20		36-21-11	ALL
	4	DK	W0952	034	18		36-21-11	ALL
	5	DK	W0952	035	18		36-21-11	ALL
D10148		P037-00/ /		RELAY SOCKET-P37				ALL
	1		W0192	04S	24		21-61-21	ALL
	2		W0192	04R	20		21-61-21	ALL
	3		W0192	08V	24		21-61-21	ALL
	4		W0192	04T	22		21-61-21	ALL
	5	UNUSED						ALL
	6		W0192	04Q	20		21-61-21	ALL
	7		W0192	04U	24		21-61-21	ALL
	8	UNUSED						ALL
D10150		P037-00/ /		RELAY SOCKET-P37				ALL
	1		W0192	04V	22		21-61-21	ALL
	2		W0192	04S	24		21-61-21	ALL
	3		W0192	03N	24		21-61-21	ALL
	4	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D10100

Page 9

Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D10150		P037-00/ /		RELAY SOCKET-P37 (continued)				ALL
	5		W0192	04W	24		21-61-21	ALL
	6		W0192	05A	20		21-61-21	ALL
	7		W0192	03M	24		21-61-21	ALL
	8	UNUSED						ALL
D10152A		//		PLUG-PART OF D10152				ALL
	A01	UNUSED						ALL
	A02	UNUSED						ALL
	A03	UNUSED						ALL
	A04	UNUSED						ALL
	A05	UNUSED						ALL
	A06	UNUSED						ALL
	A07	UNUSED						ALL
	A08	UNUSED						ALL
	A09		W2052	203B	22		21-51-13	ALL
	A10		W2052	204B	22		21-51-13	ALL
	A11	UNUSED						ALL
	A12		W2052	006	24		21-51-13	ALL
	A13	UNUSED						ALL
	A14	UNUSED						ALL
	A15		W2052	007	24		21-51-13	ALL
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04	UNUSED						ALL
	B05	UNUSED						ALL
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09		W2052	203R	22		21-51-13	ALL
	B10		W2052	204R	22		21-51-13	ALL
	B11	UNUSED						ALL
	B12		W2052	005	24		21-51-13	ALL
	B13	UNUSED						ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	C01	UNUSED						ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D10100

Page 10

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D10152A		//		PLUG-PART OF D10152 (continued)				ALL
	C05	UNUSED						ALL
	C06	UNUSED						ALL
	C07	UNUSED						ALL
	C08	UNUSED						ALL
	C09	UNUSED						ALL
	C10	UNUSED						ALL
	C11	UNUSED						ALL
	C12	UNUSED						ALL
	C13	UNUSED						ALL
	C14	UNUSED						ALL
	C15		W2052	008	22		21-51-13	ALL
	D01	UNUSED						ALL
	D02	UNUSED						ALL
	D03	UNUSED						ALL
	D04	UNUSED						ALL
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	D08	UNUSED						ALL
	D09	UNUSED						ALL
	D10	UNUSED						ALL
	D11	UNUSED						ALL
	D12	UNUSED						ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15	UNUSED						ALL
D10152B		//		PLUG-PART OF D10152				ALL
	A01	UNUSED						ALL
	A02	UNUSED						ALL
	A03	UNUSED						ALL
	A04	UNUSED						ALL
	A05	UNUSED						ALL
	A06	UNUSED						ALL
	A07	UNUSED						ALL
	A08	UNUSED						ALL
	A09		W2052	201B	22		21-51-23	ALL
	A10		W2052	202B	22		21-51-23	ALL
	A11	UNUSED						ALL
	A12		W2052	002	24		21-51-23	ALL

HOOKUP LIST
D280T132

91-21-51
Section D10100
Page 11
Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D10152B		//		PLUG-PART OF D10152 (continued)				ALL
	A13	UNUSED						ALL
	A14	UNUSED						ALL
	A15		W2052	003	24		21-51-23	ALL
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04	UNUSED						ALL
	B05	UNUSED						ALL
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09		W2052	201R	22		21-51-23	ALL
	B10		W2052	202R	22		21-51-23	ALL
	B11	UNUSED						ALL
	B12		W2052	001	24		21-51-23	ALL
	B13	UNUSED						ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	C01	UNUSED						ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05	UNUSED						ALL
	C06	UNUSED						ALL
	C07	UNUSED						ALL
	C08	UNUSED						ALL
	C09	UNUSED						ALL
	C10	UNUSED						ALL
	C11	UNUSED						ALL
	C12	UNUSED						ALL
	C13	UNUSED						ALL
	C14	UNUSED						ALL
	C15		W2052	004	22		21-51-23	ALL
	D01	UNUSED						ALL
	D02	UNUSED						ALL
	D03	UNUSED						ALL
	D04	UNUSED						ALL
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D10100

Page 12

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D10152B		//		PLUG-PART OF D10152 (continued)				ALL
	D08	UNUSED						ALL
	D09	UNUSED						ALL
	D10	UNUSED						ALL
	D11	UNUSED						ALL
	D12	UNUSED						ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15	UNUSED						ALL
D10152C		//		PLUG-PART OF D10152				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W2052	009	20		21-51-13	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	= C1	UNUSED						ALL
	= C5	UNUSED						ALL
D10154		P037-00/ /		RELAY SOCKET-				ALL
	1		W0192	05E	24		21-61-31	ALL
	2		W0192	05D	20		21-61-31	ALL
	3		W0192	877	24		21-61-31	ALL
	4		W0192	05F	22		21-61-31	ALL
	5	UNUSED						ALL
	6		W0192	05C	20		21-61-31	ALL
	7		W0192	05G	24		21-61-31	ALL
	8	UNUSED						ALL
D10156		P037-00/ /		RELAY SOCKET-				ALL
	1		W0192	05H	22		21-61-31	ALL
	2		W0192	05E	24		21-61-31	ALL
	3		W0192	03Q	24		21-61-31	ALL
	4	UNUSED						ALL
	5		W0192	05J	24		21-61-31	ALL
	6		W0192	05L	20		21-61-31	ALL
	7		W0192	03P	24		21-61-31	ALL
	8	UNUSED						ALL
D10158		P037-00/ /		RELAY SOCKET-P37				ALL
	A1		W0192	05S	20		36-11-62	ALL

HOOKUP LIST
D280T132

91-21-51
Section D10100
Page 13
Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D10158		P037-00/ /		RELAY SOCKET-P37 (continued)				ALL
	A2		W0192	65P	24		36-11-62	ALL
	A3	UNUSED						ALL
	B1		W0192	05X	22		74-31-21	ALL
	B1		W0192	599	22		74-31-21	ALL
	B2		W0192	05Y	22		74-31-21	ALL
	B3	UNUSED						ALL
	C1		W0192	285	22		30-21-11	050-099, 150-199
	C1		W0192	08Q	22		30-21-11	275-299
	C2		W0192	08N	22		30-21-11	ALL
	C3	UNUSED						ALL
	D1		W0192	05V	22		74-31-21	ALL
	D1		W0192	597	22		74-31-21	ALL
	D2		W0192	05W	22		74-31-21	ALL
	D3	UNUSED						ALL
	G1	UNUSED						ALL
	G2		W0192	PA1			99-99-99	ALL
	G3		W0192	PA1			99-99-99	ALL
	X1		W0192	08M	22		30-21-11	ALL
	X2		W0192	08P	20		30-21-11	ALL
	CAP	Y	W0192	63M	24		36-11-62	050-099, 150-156, 162-166, 275-276
	DED		W0192	05XZ			74-31-21	ALL
	DED		W0192	05YZ			74-31-21	ALL
	DED		W0192	599Z			74-31-21	ALL
D10160		P036-00/ /		RELAY SOCKET-				ALL
	A1		W0176	02C	20		36-11-61	ALL
	A2		W0176	92Z	24		36-11-61	ALL
	A3	UNUSED						ALL
	B1		W0176	05A	22		74-31-11	ALL
	B1		W0176	718	22		74-31-11	ALL
	B2		W0176	04Z	22		74-31-11	ALL
	B3	UNUSED						ALL
	C1		W0176	882	22		30-21-11	050-099, 150-199
	C1		W0176	272	22		30-21-11	275-299
	C2		W0176	874	22		30-21-11	ALL
	C3	UNUSED						ALL
	D1		W0176	162	22		74-31-11	ALL
	D1		W0176	875	22		74-31-11	ALL
	D2		W0176	876	22		74-31-11	ALL
	D3	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D10100

Page 14

Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D10160		P036-00/ /		RELAY SOCKET- (continued)				ALL
	G1	UNUSED						ALL
	G2		W0176	PA1			99-99-99	ALL
	G3		W0176	PA1			99-99-99	ALL
	X1		W0176	881	22		30-21-11	ALL
	X2		W0176	04M	20		30-21-11	ALL
	CAP	Y	W0176	58E	24		36-11-61	050-099, 150-156, 162-166, 275-276
	DED		W0176	04ZZ			74-31-11	ALL
	DED		W0176	05AZ			74-31-11	ALL
	DED		W0176	718Z			74-31-11	ALL
D10162		P033-00/ /		RELAY SOCKET-P33				ALL
	1	UNUSED						ALL
	2		W0142	02E	22		78-36-21	ALL
	3		W0142	02G	24		78-36-21	ALL
	4		W0142	02K	22		78-36-21	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W0142	11W	24		78-36-21	ALL
	8	UNUSED						ALL
D10164		P036-00/ /		RELAY SOCKET-				ALL
	1		W0176	02W	24		78-36-11	ALL
	2		W0176	83N	22		78-36-11	ALL
	3		W0176	02S	20		78-36-11	ALL
	4		W0176	02N	24		78-36-11	ALL
	5	UNUSED						ALL
	6		W0176	65J	24		78-36-11	ALL
	7		W0176	02R	24		78-36-11	ALL
	8	UNUSED						ALL
D10166		P036-00/ /		RELAY SOCKET-				ALL
	1		W0176	02V	24		78-36-11	ALL
	2		W0176	02N	24		78-36-11	ALL
	3		W0176	02Y	20		78-36-11	ALL
	4		W0176	02T	24		78-36-11	ALL
	5	UNUSED						ALL
	6		W0176	02W	24		78-36-11	ALL
	7		W0176	02X	24		78-36-11	ALL
	8		W0176	02U	24		78-36-11	ALL

HOOKUP LIST
D280T132

91-21-51
Section D10100
Page 15
Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D10168		P033-00/ /		RELAY SOCKET-				ALL
	1	UNUSED						ALL
	2		W0144	753	22		78-36-11	ALL
	3		W0144	665	24		78-36-11	ALL
	4		W0144	754	22		78-36-11	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W0144	664	24		78-36-11	ALL
	8	UNUSED						ALL
D10174		832/260/R 12		RCPT-				050-099
D10174		918/260/L 20		RCPT-				150-199
D10174		801/260/L18		RCPT-				275-299
	1	DK	W1086	001	18		33-22-31	ALL
	2	DK	W1086	002	18		33-22-31	ALL
	3	DK	W1086	003	18		33-22-31	ALL
	4	DK	W1086	004	18		33-22-31	ALL
	5	UNUSED						ALL
D10176		1540/260/L 54		RCPT-				050-099
D10176		P059-00/ /		RCPT-P59				150-199, 275-299
	1	DK	W1240	124	18		33-22-31	050-099, 150-199
	1	DK	W1240	015	18		33-22-31	275-278
	1	DK	W1240	073	18		33-22-31	280-299
	2	DK	W1240	016	18		33-22-31	050-099, 150-199
	2	DK	W1240	006	18		33-22-31	275-299
	3		W1240	125	20		33-22-31	050-099
	3	DK	W1240	125	20		33-22-31	150-199
	3	DK	W1240	004	18		33-22-31	275-299
	4	DK	W1240	072	18		33-22-31	050-099, 150-199
	4	UNUSED						275-278
	4	DK	W1240	072	18		SPARE	280-299
	5	UNUSED						ALL
D10180		P006-00/ /		PLUG-P6				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W0028	074	24		24-32-11	ALL
	5		W0028	069	20		24-32-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D10100

Page 16

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D10180		P006-00/ /		PLUG-P6 (continued)				ALL
	6		W0028	070	24		24-32-11	ALL
	7		W0028	068	20		24-32-11	ALL
	8		W0028	072	24		24-32-11	050-099, 275-299
	8		W0028	149	24		24-32-11	150-199
	9	UNUSED						ALL
	10	UNUSED						ALL
	11		W0028	017	24		24-32-11	ALL
	12	UNUSED						ALL
D10182		SHELF/E03/		PLUG-E3				ALL
	1	UNUSED						ALL
	2		W0256	021	20		24-34-11	ALL
	3	UNUSED						ALL
	4		W0256	019	24		24-34-11	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W0256	004	24		24-34-11	ALL
	8	UNUSED						ALL
	9		W0256	020	20		24-34-11	ALL
	10	UNUSED						ALL
	11		W0256	003	24		24-34-11	ALL
	12	UNUSED						ALL
D10184		P033-00/ /		RELAY SOCKET				ALL
	A1	UNUSED						ALL
	A2		W0142	02L	24		32-09-13	ALL
	A3		W0142	06M	24		32-09-13	ALL
	B1	UNUSED						ALL
	B2		W0142	895	24		30-31-11	ALL
	B3		W0142	898	24		30-31-11	ALL
	C1	UNUSED						ALL
	C2		W0142	654	24		30-31-13	ALL
	C3		W0142	655	24		30-31-13	ALL
	D1		W0142	50D	22		30-34-11	ALL
	D2		W0142	50L	22		30-34-11	ALL
	D3	UNUSED						ALL
	X1		W0142	899	24		30-31-11	ALL
	X2		W0142	897	24		30-31-11	ALL
	DED		W0142	50DZ			30-34-11	ALL
	DED		W0142	50LZ			30-34-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D10100

Page 17

Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D10184		P033-00/ /		RELAY SOCKET (continued)				ALL
	DED		W0142	897Z			30-31-11	ALL
	DED		W0142	899Z			30-31-11	ALL
D10186		P033-00/ /		RELAY SOCKET-				ALL
	A1		W0144	696	22		30-31-11	ALL
	A2		W0144	711	20		30-31-11	ALL
	A3	UNUSED						ALL
	B1		W0144	115	22		30-31-13	ALL
	B2		W0144	114	20		30-31-13	ALL
	B3	UNUSED						ALL
	C1		W0144	522	22		30-32-11	ALL
	C2		W0144	521	22		30-32-11	ALL
	C3	UNUSED						ALL
	D1		W0144	550	22		30-33-11	ALL
	D2		W0144	559	22		30-33-11	ALL
	D3		W0144	563	22		30-33-11	ALL
	X1		W0144	697	24		30-31-11	ALL
	X2		W0144	708	24		30-31-11	ALL
	DED		W0144	550Z			30-33-11	ALL
	DED		W0144	559Z			30-33-11	ALL
	DED		W0144	563Z			30-33-11	ALL
D10188		P033-00/ /		RELAY SOCKET-				ALL
	A1	UNUSED						ALL
	A2		W0144	758	24		32-09-13	ALL
	A3		W0144	757	24		32-09-13	ALL
	B1	UNUSED						ALL
	B2		W0144	727	24		30-31-21	ALL
	B3		W0144	733	24		30-31-21	ALL
	C1	UNUSED						ALL
	C2		W0144	130	24		30-31-23	ALL
	C3		W0144	131	24		30-31-23	ALL
	D1	UNUSED						ALL
	D2	UNUSED						ALL
	D3	UNUSED						ALL
	X1		W0144	736	24		30-31-21	ALL
	X2		W0144	731	24		30-31-21	ALL
	DED		W0144	731Z			30-31-21	ALL
	DED		W0144	736Z			30-31-21	ALL

HOOKUP LIST

D280T132

91-21-51

Section D10100

Page 18

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D10190		P033-00/ /		RELAY SOCKET				ALL
	A1		W0142	628	22		30-31-21	ALL
	A2		W0142	630	20		30-31-21	ALL
	A3	UNUSED						ALL
	B1		W0142	670	22		30-31-23	ALL
	B2		W0142	799	20		30-31-23	ALL
	B3	UNUSED						ALL
	C1		W0142	845	22		30-32-21	ALL
	C2		W0142	668	22		30-32-21	ALL
	C3	UNUSED						ALL
	D1	UNUSED						ALL
	D2	UNUSED						ALL
	D3	UNUSED						ALL
	X1		W0142	629	24		30-31-21	ALL
	X2		W0142	631	24		30-31-21	ALL
D10192		0212/195/R080		PLUG-				ALL
	1		W0590	051	24		21-33-21	ALL
	2		W0590	052	24		21-33-21	ALL
	3		W0590	053	24		21-33-21	ALL
	4		W0590	054	24		21-33-21	ALL
	5		W0590	061	20		21-33-21	ALL
D10194		P036-00/ /		RELAY SOCKET-P36				ALL
	A1	UNUSED						ALL
	A2		W0184	782	24		32-42-11	ALL
	A3		W0184	791	20		32-42-11	ALL
	B1	UNUSED						ALL
	B2		W0184	783	22		32-42-11	ALL
	B3		W0184	792	22		32-42-11	ALL
	X1		W0184	793	24		32-42-11	ALL
	X2		W0184	794	24		32-42-11	ALL
D10196		P036-00/ /		RELAY SOCKET-P36				ALL
	A1	UNUSED						ALL
	A2		W0184	795	20		32-42-11	ALL
	A3		W0184	785	22		32-42-11	ALL
	B1	UNUSED						ALL
	B2		W0184	825	20		32-42-11	ALL
	B3		W0184	826	22		32-42-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D10100

Page 19

Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D10196		P036-00/ /		RELAY SOCKET-P36 (continued)				ALL
	X1		W0184	797	24		32-42-11	ALL
	X2		W0184	796	24		32-42-11	ALL
D10198		P036-00/ /		RELAY SOCKET-P36				ALL
	A1	UNUSED						ALL
	A2		W0184	798	20		32-42-11	ALL
	A3		W0184	788	22		32-42-11	ALL
	B1	UNUSED						ALL
	B2		W0184	826	22		32-42-11	ALL
	B3		W0184	827	22		32-42-11	ALL
	X1		W0184	801	24		32-42-11	ALL
	X2		W0184	799	24		32-42-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D10100

Page 20 End

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D10200		P036-00/ /		RELAY SOCKET-P36				ALL
	A1	UNUSED						ALL
	A2		W0184	802	20		32-42-11	ALL
	A3		W0184	789	22		32-42-11	ALL
	B1	UNUSED						ALL
	B2		W0184	827	22		32-42-11	ALL
	B3		W0184	828	22		32-42-11	ALL
	X1		W0184	804	24		32-42-11	ALL
	X2		W0184	803	24		32-42-11	ALL
D10202		P036-00/ /		RELAY SOCKET-P36				ALL
	A1	UNUSED						ALL
	A2		W0184	805	20		32-42-11	ALL
	A3		W0184	790	22		32-42-11	ALL
	B1	UNUSED						ALL
	B2		W0184	828	22		32-42-11	ALL
	B3		W0184	829	22		32-42-11	ALL
	X1		W0184	807	24		32-42-11	ALL
	X2		W0184	806	24		32-42-11	ALL
D10204		P008-00/ /		PLUG-				ALL
	1		W0632	307Y	24		33-13-18	ALL
	2	DK	W0632	102	18		33-13-18	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W0632	307B	24		33-13-18	ALL
	6		W0632	307R	24		33-13-18	ALL
	7		W0632	107	20		33-13-18	ALL
	8	UNUSED						ALL
	9	DK	W0632	104	18		33-13-18	ALL
	10	UNUSED						ALL
	11	FM	W0632	106	16		33-13-18	ALL
	12		W0632	105	22		33-13-18	ALL
D10210		P037-00/ /		RELAY SOCKET-				ALL
	A1		W0198	058R	22		26-15-12	ALL
	A2		W0198	536R	22		26-15-12	ALL
	A3	UNUSED						ALL
	B1	UNUSED						ALL
	B2	UNUSED						ALL
	B3	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D10200
Page 1
Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D10210		P037-00/ /		RELAY SOCKET- (continued)				ALL
	X1		W0198	535R	22		26-15-12	ALL
	X2		W0198	534R	22		26-15-12	ALL
D10216		P005-00/ /		PLUG-P5				ALL
	1		W0070	681	20		33-13-16	ALL
	2		W0070	682	20		33-13-16	ALL
	3		W0070	683	22		33-16-17	ALL
	4		W0070	684	22		33-16-17	ALL
	5		W0070	685	24		24-33-11	ALL
	6		W0070	686	24		24-33-11	ALL
	7		W0070	687	24		24-33-11	ALL
	8		W0070	688	20		49-61-11	ALL
	9	UNUSED						ALL
	10		W0070	690	24		24-33-11	ALL
	11		W0070	691	20		24-33-11	ALL
	12		W0070	692	20		24-33-11	ALL
	13		W0070	693	24		24-33-11	ALL
	14	UNUSED						ALL
	15		W0070	695	22		49-61-11	ALL
	16	UNUSED						ALL
	17		W0070	697	24		24-31-11	ALL
	18	UNUSED						ALL
	19		W0070	699	20		24-33-11	ALL
	20	DK	W0070	700	18		24-33-11	ALL
	21		W0070	701	24		24-33-11	ALL
	22		W0070	702	20		24-33-11	ALL
	23		W0070	703	24		24-33-11	ALL
	24	UNUSED						ALL
	25		W0070	705	24		24-33-11	ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29		W0070	709	20		24-31-41	ALL
	30	UNUSED						ALL
	31		W0070	711	24		24-31-41	ALL
	32		W0070	712	20		24-33-11	ALL
	33	UNUSED						ALL
	34		W0070	714	24		24-33-11	ALL
	35	UNUSED						ALL
	36	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D10200

Page 2

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D10216		P005-00/ /		PLUG-P5 (continued)				ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	DED		W0070	688Z			49-61-11	ALL
	DED		W0070	695Z			49-61-11	ALL
D10220		P005-00/ /		PLUG-P5				ALL
	1	DK	W0066	841	18		33-13-16	050-099, 150-199
	1		W0066	881	22		30-11-11	275-299
	2	DK	W0066	842	18		33-13-16	050-099, 150-199
	2		W0066	882	22		30-11-11	275-299
	3		W0066	826	22		33-16-17	050-099, 150-199
	3	UNUSED						275-299
	4		W0066	827	22		33-16-17	050-099, 150-199
	4		W0066	886	22		30-11-11	275-299
	5		W0066	56C	22		30-11-11	050-099, 150-199
	5		W0066	854	20		73-21-16	275-299
	6		W0066	852	22		30-11-11	050-099, 150-199
	6		W0066	853	24		73-21-16	275-299
	7		W0066	853	24		73-21-16	050-099
	7		W0066	79F	20		73-21-16	150-199
	7	UNUSED						275-299
	8		W0066	881	22		30-11-11	050-099, 150-199
	8	UNUSED						275-299
	9		W0066	79L	22		30-11-11	050-099, 150-199
	9		W0066	889	24		21-51-11	275-299
	10		W0066	886	22		30-11-11	050-099, 150-199
	10		W0066	884	22		30-11-11	275-299
	11		W0066	79N	22		30-11-11	050-099, 150-199
	11		W0066	891	20		21-51-11	275-299
	12		W0066	79M	22		30-11-11	050-099, 150-199
	12	UNUSED						275-299
	13		W0066	79R	22		30-11-11	050-099, 150-199
	14		W0066	79G	20		30-11-11	050-099, 150-199
	15		W0066	882	22		30-11-11	050-099, 150-199
	16	UNUSED						050-099, 150-199
	17		W0066	79H	20		30-81-11	050-099, 150-199
	18		W0066	79J	20		30-81-11	050-099, 150-199

HOOKUP LIST
D280T132

91-21-51
Section D10200
Page 3
Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D10220		P005-00/ /		PLUG-P5 (continued)				ALL
	19		W0066	79T	22		30-11-11	050-099, 150-199
	20		W0066	79P	22		30-11-11	050-099, 150-199
	21	UNUSED						050-099, 150-199
	22	UNUSED						050-099, 150-199
	23	UNUSED						050-099, 150-199
	24	UNUSED						050-099, 150-199
	DED		W0066	889Z			21-51-11	275-299
D10222		P061-00/ /		PLUG-P61				ALL
	1		W0062	414R	22		26-18-22	ALL
	2		W0062	772	22		22-21-21	ALL
	3		W0062	773	20		28-43-11	ALL
	4	UNUSED						ALL
	5		W0062	775R	20		26-18-11	ALL
	6		W0062	776R	22		26-18-11	ALL
	7		W0062	777R	22		26-18-11	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10		W0062	780	24		30-41-11	ALL
	11		W0062	781	24		30-31-11	ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14		W0062	784	24		21-58-11	ALL
	15		W0062	785	24		21-58-11	ALL
	16		W0062	786R	22		26-18-31	ALL
	17		W0062	787R	22		26-18-31	ALL
	18		W0062	788R	22		26-18-21	ALL
	19		W0062	789R	22		26-18-11	ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22		W0062	792	22		30-11-11	ALL
	23		W0062	793	22		30-11-11	ALL
	24		W0062	771	22		24-25-11	ALL
	25		W0062	779	22		24-25-11	ALL
	26		W0062	774	20		24-31-11	ALL
	27		W0062	778	24		24-31-11	ALL
	28	UNUSED						ALL
	29		W0062	799R	22		26-18-31	ALL
	30		W0062	800R	22		26-18-21	ALL
	31		W0062	801R	22		26-18-21	ALL

HOOKUP LIST

D280T132

91-21-51

Section D10200

Page 4

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D10222		P061-00/ /		PLUG-P61 (continued)				ALL
	DED		W0062	771Z			24-25-11	ALL
	DED		W0062	772Z			22-21-21	ALL
	DED		W0062	779Z			24-25-11	ALL
	DED		W0062	784Z			21-58-11	ALL
	DED		W0062	785Z			21-58-11	ALL
	DED		W0062	792Z			30-11-11	ALL
	DED		W0062	793Z			30-11-11	ALL
D10224		P061-00/ /		PLUG-				ALL
	1		W0066	413R	22		26-18-12	ALL
	2		W0066	772	20		28-43-11	ALL
	3		W0066	773	20		28-43-11	ALL
	4		W0066	415R	22		26-18-22	ALL
	5		W0066	775	24		28-43-11	ALL
	6		W0066	411R	22		26-18-22	ALL
	7		W0066	777	24		34-46-12	ALL
	8		W0066	778	24		27-32-21	ALL
	9		W0066	779	24		27-32-11	ALL
	10		W0066	780	24		30-41-12	ALL
	11		W0066	781	24		30-31-21	ALL
	12		W0066	782	22		22-21-11	ALL
	13		W0066	783	24		31-51-42	ALL
	14		W0066	784	24		31-51-41	ALL
	15		W0066	209R	24		28-41-11	ALL
	16		W0066	209B	24		28-41-11	ALL
	17		W0066	407R	22		26-18-12	ALL
	18		W0066	788	22		34-12-12	ALL
	19		W0066	789	24		34-12-22	ALL
	20		W0066	412R	22		26-18-12	ALL
	21		W0066	771	22		24-25-11	ALL
	22		W0066	774	22		24-25-11	ALL
	23		W0066	776	22		24-25-11	ALL
	24		W0066	785	22		24-25-11	ALL
	CAP	Y	W0066	798	22		34-33-31	ALL
	CAP	Y	W0066	799	22		34-33-21	ALL
	CAP	Y	W0066	800	22		34-33-11	ALL
	DED		W0066	782Z			22-21-11	ALL
D10228		0240/200/L040		PLUG-				ALL
	1		W1306	009	16		32-35-11	ALL

HOOKUP LIST
D280T132

91-21-51
Section D10200
Page 5
Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D10228		0240/200/L040		PLUG- (continued)				ALL
	2	UNUSED						ALL
	3		W1306	008	16		32-35-11	ALL
	4	UNUSED						ALL
	5		W1306	011	16		32-35-11	ALL
	6	UNUSED						ALL
	7		W1306	010	16		32-35-11	ALL
D10230		P033-00/ /		RELAY SOCKET-				ALL
	A1		W0144	640	22		30-34-11	ALL
	A2		W0144	638	22		30-34-11	ALL
	A3	UNUSED						ALL
	B1	UNUSED						ALL
	B2	UNUSED						ALL
	B3	UNUSED						ALL
	X1		W0144	713	24		30-34-11	ALL
	X2		W0144	747	24		30-34-11	ALL
D10232		P033-00/ /		RELAY SOCKET				ALL
	A1		W0142	851	22		30-34-21	ALL
	A2		W0142	832	22		30-34-21	ALL
	A3	UNUSED						ALL
	B1	UNUSED						ALL
	B2	UNUSED						ALL
	B3	UNUSED						ALL
	X1		W0142	646	24		30-34-21	ALL
	X2		W0142	579	24		30-34-21	ALL
D10262		P006-00/ /		RELAY SOCKET-P6-5				ALL
	A1		W0158	079	20		36-11-51	ALL
	A2		W0158	078	22		36-11-51	ALL
	A3	UNUSED						ALL
	B1		W0158	043	20		80-11-11	ALL
	B2		W0158	039	20		80-11-11	ALL
	B3	UNUSED						ALL
	C1		W0158	035	24		80-11-11	ALL
	C2		W0158	037	24		80-11-11	ALL
	C3		W0158	033	24		80-11-11	ALL
	D1		W0158	032	24		80-11-11	ALL
	D2		W0158	029	24		80-11-11	ALL
	D3		W0158	031	24		80-11-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D10200

Page 6

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D10262		P006-00/ /		RELAY SOCKET-P6-5 (continued)				ALL
	X1		W0158	040	24		80-11-11	ALL
	X2		W0158	041	24		80-11-11	ALL
D10264		P006-00/ /		RELAY SOCKET-P6-5				ALL
	A1		W0156	137	20		36-11-52	ALL
	A2		W0156	136	22		36-11-52	ALL
	A3	UNUSED						ALL
	B1		W0156	105	20		80-11-21	ALL
	B2		W0156	101	20		80-11-21	ALL
	B3	UNUSED						ALL
	C1		W0156	097	24		80-11-21	ALL
	C2		W0156	099	24		80-11-21	ALL
	C3		W0156	095	24		80-11-21	ALL
	D1		W0156	094	24		80-11-21	ALL
	D2		W0156	091	24		80-11-21	ALL
	D3		W0156	093	24		80-11-21	ALL
	X1		W0156	102	24		80-11-21	ALL
	X2		W0156	103	24		80-11-21	ALL
D10266		P006-00/ /		RELAY SOCKET-P6-5				ALL
	A1		W0158	077	24		24-51-71	ALL
	A2		W0158	076	24		24-51-71	ALL
	A3	UNUSED						ALL
	B1		W0158	048	24		80-11-11	ALL
	B2		W0158	054	24		80-11-11	ALL
	B3	UNUSED						ALL
	C1		W0158	083	24		80-11-11	ALL
	C2		W0158	084	24		80-11-11	ALL
	C3	UNUSED						ALL
	D1		W0158	047	24		80-11-11	ALL
	D2		W0158	053	24		80-11-11	ALL
	D3	UNUSED						ALL
	X1		W0158	050	24		80-11-11	ALL
	X2		W0158	055	20		80-11-11	ALL
D10268		P006-00/ /		RELAY SOCKET-P6-5				ALL
	A1		W0156	135	24		24-51-71	ALL
	A2		W0156	134	24		24-51-71	ALL
	A3	UNUSED						ALL
	B1		W0156	109	24		80-11-21	ALL

HOOKUP LIST
D280T132

91-21-51
Section D10200
Page 7
Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D10268		P006-00/ /		RELAY SOCKET-P6-5 (continued)				ALL
	B2		W0156	112	24		80-11-21	ALL
	B3	UNUSED						ALL
	C1		W0156	148	24		80-11-21	ALL
	C2		W0156	149	24		80-11-21	ALL
	C3	UNUSED						ALL
	D1		W0156	108	24		80-11-21	ALL
	D2		W0156	115	24		80-11-21	ALL
	D3	UNUSED						ALL
	X1		W0156	113	24		80-11-21	ALL
	X2		W0156	114	20		80-11-21	ALL
D10270		P006-00/ /		RELAY SOCKET-P6-5				ALL
	A1		W0156	034	24		33-16-11	ALL
	A2		W0156	033	24		33-16-11	ALL
	A3	UNUSED						ALL
	B1		W0156	071	22		33-16-21	ALL
	B2		W0156	072	22		33-16-21	ALL
	B3	UNUSED						ALL
	X1		W0156	035	24		33-16-11	ALL
	X2		W0156	036	22		33-16-11	ALL
D10272		P006-00/ /		RELAY SOCKET-P6-5				ALL
	A1		W0148	017	22		33-16-12	ALL
	A2		W0148	016	22		33-16-12	ALL
	A3		W0148	015	22		33-16-12	ALL
	B1		W0148	038	22		33-16-12	ALL
	B2		W0148	037	22		33-16-12	ALL
	B3		W0148	036	22		33-16-12	ALL
	X1		W0148	003	24		33-16-11	ALL
	X2		W0148	004	24		33-16-11	ALL
	DED		W0148	036Z			33-16-12	ALL
D10274		P006-00/ /		RELAY SOCKET-P6-5				ALL
	A1		W0148	007	24		33-16-11	ALL
	A2		W0148	009	20		33-16-11	ALL
	A3	UNUSED						ALL
	B1		W0148	004	24		33-16-11	ALL
	B2		W0148	008	24		33-16-11	ALL
	B3	UNUSED						ALL
	X1		W0148	010	24		33-16-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D10200

Page 8

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D10274		P006-00/ /		RELAY SOCKET-P6-5 (continued)				ALL
	X2		W0148	011	24		33-16-11	ALL
D10276		P006-00/ /		RELAY SOCKET-P6-5				ALL
	A1		W0148	048	22		33-16-21	ALL
	A2		W0148	045	20		33-16-21	ALL
	A3	UNUSED						ALL
	B1	UNUSED						ALL
	B2	UNUSED						ALL
	B3	UNUSED						ALL
	X1		W0148	047	22		33-16-21	ALL
	X2		W0148	046	22		33-16-21	ALL
D10278		P006-00/ /		RELAY SOCKET-P6-5				ALL
	A1		W0152	006	24		33-16-11	ALL
	A2		W0152	005	20		33-16-11	ALL
	A3	UNUSED						ALL
	B1	UNUSED						ALL
	B2	UNUSED						ALL
	B3	UNUSED						ALL
	X1		W0152	007	24		33-16-11	ALL
	X2		W0152	008	24		33-16-11	ALL
D10280		P006-00/ /		RELAY SOCKET-P6-5				ALL
	A1		W0152	031	22		33-16-21	ALL
	A2		W0152	030	20		33-16-21	ALL
	A3	UNUSED						ALL
	B1	UNUSED						ALL
	B2	UNUSED						ALL
	B3	UNUSED						ALL
	X1		W0152	033	22		33-16-21	ALL
	X2		W0152	032	22		33-16-21	ALL
D10282		P006-00/ /		RELAY SOCKET-P6-5				ALL
	A1		W0156	038	24		33-16-11	ALL
	A2		W0156	040	20		33-16-11	ALL
	A3	UNUSED						ALL
	B1		W0156	039	24		33-16-11	ALL
	B2		W0156	167	24		33-16-11	ALL
	B3	UNUSED						ALL
	X1		W0156	042	24		33-16-11	ALL

HOOKUP LIST
D280T132

91-21-51
Section D10200
Page 9
Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D10282		P006-00/ /		RELAY SOCKET-P6-5 (continued)				ALL
	X2		W0156	043	24		33-16-11	ALL
D10284		P006-00/ /		RELAY SOCKET-P6-5				ALL
	A1		W0156	076	22		33-16-21	ALL
	A2		W0156	075	20		33-16-21	ALL
	A3	UNUSED						ALL
	B1	UNUSED						ALL
	B2	UNUSED						ALL
	B3	UNUSED						ALL
	X1		W0156	074	22		33-16-21	ALL
	X2		W0156	073	22		33-16-21	ALL
D10286		P006-00/ /		RELAY SOCKET-P6-5				ALL
	A1		W0148	029	22		33-16-12	ALL
	A2		W0148	033	20		33-16-12	ALL
	A3	UNUSED						ALL
	B1		W0148	013	22		33-16-12	ALL
	B2		W0148	034	20		33-16-12	ALL
	B3	UNUSED						ALL
	C1		W0148	032	22		33-16-12	ALL
	C2		W0148	035	20		33-16-12	ALL
	C3	UNUSED						ALL
	D1		W0148	041	22		33-16-17	ALL
	D2		W0148	042	22		33-16-17	ALL
	D3	UNUSED						ALL
	X1		W0148	005	24		33-16-11	ALL
	X2		W0148	006	24		33-16-11	ALL
D10288		P006-00/ /		RELAY SOCKET-P6-5				ALL
	A1		W0152	017	22		33-16-12	ALL
	A2		W0152	021	20		33-16-12	ALL
	A3	UNUSED						ALL
	B1		W0152	045	22		33-16-12	ALL
	B2		W0152	022	20		33-16-12	ALL
	B3	UNUSED						ALL
	C1		W0152	020	22		33-16-12	ALL
	C2		W0152	023	20		33-16-12	ALL
	C3	UNUSED						ALL
	D1		W0152	026	22		33-16-17	ALL
	D2		W0152	027	22		33-16-17	ALL

HOOKUP LIST

D280T132

91-21-51

Section D10200

Page 10

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D10288		P006-00/ /		RELAY SOCKET-P6-5 (continued)				ALL
	D3	UNUSED						ALL
	X1		W0152	003	24		33-16-11	ALL
	X2		W0152	004	24		33-16-11	ALL
D10290		P006-00/ /		RELAY SOCKET-P6-5				ALL
	A1		W0156	053	22		33-16-12	ALL
	A2		W0156	060	20		33-16-12	ALL
	A3	UNUSED						ALL
	B1		W0156	056	22		33-16-12	ALL
	B2		W0156	061	20		33-16-12	ALL
	B3	UNUSED						ALL
	C1		W0156	059	22		33-16-12	ALL
	C2		W0156	062	20		33-16-12	ALL
	C3	UNUSED						ALL
	D1		W0156	065	22		33-16-17	ALL
	D2		W0156	066	22		33-16-17	ALL
	D3	UNUSED						ALL
	X1		W0156	029	24		33-16-11	ALL
	X2		W0156	030	24		33-16-11	ALL
	DED		W0156	065Z			33-16-17	ALL
	DED		W0156	066Z			33-16-17	ALL
D10292		P006-00/ /		RELAY SOCKET-P6-5				ALL
	A1		W0148	052	22		33-16-22	ALL
	A2		W0148	055	20		33-16-22	ALL
	A3	UNUSED						ALL
	B1		W0148	053	22		33-16-22	ALL
	B2		W0148	056	20		33-16-22	ALL
	B3	UNUSED						ALL
	C1		W0148	054	22		33-16-22	ALL
	C2		W0148	057	20		33-16-22	ALL
	C3	UNUSED						ALL
	D1	UNUSED						ALL
	D2	UNUSED						ALL
	D3	UNUSED						ALL
	X1		W0148	043	22		33-16-21	ALL
	X2		W0148	044	22		33-16-21	ALL
D10294		P006-00/ /		RELAY SOCKET-P6-5				ALL
	A1		W0152	037	22		33-16-22	ALL

HOOKUP LIST
D280T132

91-21-51
Section D10200
Page 11
Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D10294		P006-00/ /		RELAY SOCKET-P6-5 (continued)				ALL
	A2		W0152	040	20		33-16-22	ALL
	A3	UNUSED						ALL
	B1		W0152	038	22		33-16-22	ALL
	B2		W0152	041	20		33-16-22	ALL
	B3	UNUSED						ALL
	C1	UNUSED						ALL
	C2	UNUSED						ALL
	C3	UNUSED						ALL
	D1	UNUSED						ALL
	D2	UNUSED						ALL
	D3	UNUSED						ALL
	X1		W0152	028	22		33-16-21	ALL
	X2		W0152	029	22		33-16-21	ALL
D10296		P006-00/ /		RELAY SOCKET-P6-5				ALL
	A1		W0156	087	22		33-16-22	ALL
	A2		W0156	089	20		33-16-22	ALL
	A3	UNUSED						ALL
	B1		W0156	086	22		33-16-22	ALL
	B2		W0156	088	20		33-16-22	ALL
	B3	UNUSED						ALL
	C1		W0156	082	22		33-16-22	ALL
	C2		W0156	085	22		33-16-22	ALL
	C3		W0156	084	22		33-16-22	ALL
	D1	UNUSED						ALL
	D2	UNUSED						ALL
	D3	UNUSED						ALL
	X1		W0156	067	22		33-16-21	ALL
	X2		W0156	068	22		33-16-21	ALL
D10298		P006-00/ /		RELAY SOCKET-P6-5				ALL
	A1		W0156	079	22		33-16-22	ALL
	A2		W0156	084	22		33-16-22	ALL
	A3	UNUSED						ALL
	B1	UNUSED						ALL
	B2	UNUSED						ALL
	B3	UNUSED						ALL
	X1		W0156	069	22		33-16-22	ALL
	X2		W0156	070	20		33-16-22	ALL

HOOKUP LIST

D280T132

91-21-51

Section D10200

Page 12 End

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D10300		P006-00/ /		RELAY SOCKET-P6-5				ALL
	A1		W0156	002	24		33-11-11	ALL
	A2		W0156	006	24		33-11-11	ALL
	A3		W0156	164	24		33-11-11	ALL
	B1		W0156	301B	24		33-11-11	ALL
	B2		W0156	301R	24		33-11-11	ALL
	B3		W0156	301Y	24		33-11-11	ALL
	X1		W0156	001	24		33-11-11	ALL
	X2		W0156	009	20		33-11-11	ALL
			W0156	163	20		33-11-11	ALL
			W0156	301Z			33-11-11	ALL
D10302		P006-00/ /		RELAY SOCKET-P6-5				ALL
	A1		W0158	003	24		33-11-11	ALL
	A2		W0158	005	24		33-11-11	ALL
	A3		W0158	116	24		33-11-11	ALL
	B1		W0158	301B	24		33-11-11	ALL
	B2		W0158	301R	24		33-11-11	ALL
	B3		W0158	301Y	24		33-11-11	ALL
	X1		W0158	002	24		33-11-11	ALL
	X2		W0158	008	20		33-11-11	ALL
			W0158	115	20		33-11-11	ALL
			W0158	301Z			33-11-11	ALL
D10306		P006-00/ /		RELAY SOCKET-P6-5				ALL
	A1		W0156	007	24		33-11-11	ALL
	A2		W0156	150	24		33-11-11	ALL
	A3	UNUSED						ALL
	B1		W0156	201B	24		33-11-11	ALL
	B2		W0156	201R	24		33-11-11	ALL
	B3	UNUSED						ALL
	C1	UNUSED						ALL
	C2	UNUSED						ALL
	C3	UNUSED						ALL
	D1	UNUSED						ALL
	D2	UNUSED						ALL
	D3	UNUSED						ALL
	G1		W0156	PA2			99-99-99	ALL
	G2	UNUSED						ALL
	G3		W0156	PA2			99-99-99	ALL
	X1		W0156	025	24		33-11-15	ALL

HOOKUP LIST
D280T132

91-21-51
Section D10300
Page 1
Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D10306		P006-00/ /		RELAY SOCKET-P6-5 (continued)				ALL
	X2		W0156	026	20		33-11-15	ALL
			W0156	162	20		33-11-11	ALL
			W0156	201Z			33-11-11	ALL
D10308		P006-00/ /		RELAY SOCKET-P6-5				ALL
	A1		W0158	006	24		33-11-11	ALL
	A2		W0158	110	24		33-11-11	ALL
	A3	UNUSED						ALL
	B1		W0158	201B	24		33-11-11	ALL
	B2		W0158	201R	24		33-11-11	ALL
	B3	UNUSED						ALL
	C1	UNUSED						ALL
	C2	UNUSED						ALL
	C3	UNUSED						ALL
	D1	UNUSED						ALL
	D2	UNUSED						ALL
	D3	UNUSED						ALL
	G1		W0158	PA1			99-99-99	ALL
	G2	UNUSED						ALL
	G3		W0158	PA1			99-99-99	ALL
	X1		W0158	009	24		33-11-15	ALL
	X2		W0158	010	20		33-11-15	ALL
			W0158	114	20		33-11-11	ALL
			W0158	201Z			33-11-11	ALL
D10310		P006-00/ /		RELAY SOCKET-P6-5				ALL
	A1		W0156	017	20		33-11-14	ALL
	A2		W0156	021	16		33-11-14	ALL
	A3		W0156	018	16		33-11-14	ALL
	B1	UNUSED						ALL
	B2	UNUSED						ALL
	B3	UNUSED						ALL
	C1	UNUSED						ALL
	C2	UNUSED						ALL
	C3	UNUSED						ALL
	D1	UNUSED						ALL
	D2		W0156	037	22		33-16-11	ALL
	D3		W0156	036	22		33-16-11	ALL
	G1		W0156	PA3			99-99-99	ALL
	G2	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D10300

Page 2

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D10310		P006-00/ /		RELAY SOCKET-P6-5 (continued)				ALL
	G3		W0156	PA3			99-99-99	ALL
	X1		W0156	023	24		33-11-15	ALL
	X2		W0156	024	20		33-11-15	ALL
D10314		P036-00/ /		RELAY SOCKET-P36				ALL
	1	UNUSED						ALL
	2		W0180	113	24		24-51-71	ALL
	3		W0180	117	20		24-51-71	ALL
	4	UNUSED						ALL
	5		W0180	119	24		24-51-71	ALL
	6		W0180	114	24		24-51-71	ALL
	7		W0180	116	24		24-51-71	ALL
	8		W0180	118	24		24-51-71	ALL
D10316		P036-00/ /		RELAY SOCKET-P36				ALL
	1		W0180	125	24		24-51-71	ALL
	2		W0180	120	24		24-51-71	ALL
	3		W0180	123	24		24-51-71	ALL
	4	UNUSED						ALL
	5		W0180	124	24		24-51-71	ALL
	6		W0180	121	20		24-51-71	ALL
	7		W0180	114	24		24-51-71	ALL
	8	UNUSED						ALL
D10318		P036-00/ /		RELAY SOCKET-				ALL
	A1	UNUSED						ALL
	A2	UNUSED						050-099, 150-199, 275-278
	A2		W0180	137	18		SPARE	280-299
	A3	UNUSED						050-099, 150-199, 275-278
	A3		W0180	138	18		SPARE	280-299
	B1	UNUSED						ALL
	B2		W0180	104	18		25-31-21	ALL
	B3		W0180	105	18		25-31-21	ALL
	C1	UNUSED						ALL
	C2	UNUSED						050-099, 150-199, 275-276
	C2		W0180	107	18		25-31-31	277-299
	C3	UNUSED						050-099, 150-199, 275-276
	C3		W0180	106	18		25-31-31	277-299
	D1	UNUSED						ALL
	D2		W0180	103	20		25-31-11	050-099, 150-199, 275-278

HOOKUP LIST

D280T132

91-21-51

Section D10300

Page 3

Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D10318		P036-00/ /		RELAY SOCKET- (continued)				ALL
	D2		W0180	103	18		25-31-11	280-299
	D3		W0180	102	20		25-31-11	050-099, 150-199, 275-278
	D3		W0180	102	18		25-31-11	280-299
	X1		W0180	120	24		24-51-71	ALL
	X2		W0180	127	24		24-51-71	ALL
	DED		W0180	104Z			25-31-21	ALL
	DED		W0180	105Z			25-31-21	ALL
	DED		W0180	106Z			25-31-31	277-299
	DED		W0180	107Z			25-31-31	277-299
D10320		P019-00/ /		RELAY SOCKET-P19				050-099
D10320		P019-00/ /		RELAY SOCKET-				150-199, 275-299
	1	UNUSED						ALL
	2		W1060	539	20		52-51-11	ALL
	3		W1060	538	22		52-51-11	ALL
	4		W1060	542	22		52-51-11	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W1060	540	22		52-51-11	ALL
	8	UNUSED						ALL
D10336		SHELF/E01/02		PLUG-				ALL
	1	UNUSED						ALL
	2		W1092	071	20		32-61-14	ALL
	3		W1092	518	24		32-61-14	ALL
	4		W1092	073	24		32-61-14	ALL
	5	UNUSED						ALL
	6		W1092	141	24		32-61-14	ALL
	7		W1092	162	24		32-61-14	ALL
	8		W1092	010	24		32-61-14	ALL
D10338		SHELF/E01/02		PLUG-				ALL
	1	UNUSED						ALL
	2		W1092	072	20		32-61-14	ALL
	3		W1092	514	24		32-61-14	ALL
	4		W1092	074	24		32-61-14	ALL
	5	UNUSED						ALL
	6		W1092	181	24		32-61-14	ALL
	7		W1092	515	24		32-61-14	ALL
	8		W1092	013	24		32-61-14	ALL

HOOKUP LIST

D280T132

91-21-51

Section D10300

Page 4

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D10342		P036-00/ /		RELAY SOCKET-				ALL
	1		W0176	04J	20		32-09-11	ALL
	2		W0176	09G	24		32-09-11	ALL
	3	UNUSED						ALL
	4		W0176	202R	24		21-31-11	ALL
	5		W0176	202B	24		21-31-11	ALL
	6		W0176	05J	24		32-09-11	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9		W0176	246B	24		28-41-11	ALL
	10	UNUSED						ALL
	11		W0176	246R	24		28-41-11	ALL
	12		W0176	05H	24		32-09-11	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
D10344		P037-00/ /		RELAY SOCKET-				ALL
	A1		W0192	03C	24		75-23-11	ALL
	A2		W0192	03B	24		75-23-11	ALL
	A3		W0192	03A	24		75-23-11	ALL
	B1	UNUSED						ALL
	B2	UNUSED						ALL
	B3	UNUSED						ALL
	X1		W0192	03D	24		75-23-11	ALL
	X2		W0192	03E	24		75-23-11	ALL
D10346		P036-00/ /		RELAY SOCKET-				ALL
	A1		W0176	03C	24		75-23-11	ALL
	A2		W0176	03B	24		75-23-11	ALL
	A3		W0176	03A	24		75-23-11	ALL
	B1	UNUSED						ALL
	B2	UNUSED						ALL
	B3	UNUSED						ALL
	X1		W0176	03D	24		75-23-11	ALL
	X2		W0176	03E	24		75-23-11	ALL
D10392		P037-00/ /		RELAY SOCKET-P37				ALL
	A1	UNUSED						ALL
	A2		W0192	11K	24		29-11-12	ALL
	A3		W0192	11D	24		29-11-12	ALL
	B1	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D10300
Page 5
Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D10392		P037-00/ /		RELAY SOCKET-P37 (continued)				ALL
	B2		W0192	09X	24		29-11-31	ALL
	B3		W0192	11N	24		29-11-31	ALL
	X1		W0192	11C	24		80-11-11	ALL
	X2		W0192	11A	20		80-11-11	ALL
	DED		W0192	09XZ			29-11-31	ALL
	DED		W0192	11CZ			80-11-11	ALL
	DED		W0192	11NZ			29-11-31	ALL
D10394		P037-00/ /		RELAY SOCKET-P37				ALL
	A1	UNUSED						ALL
	A2		W0192	11D	24		29-11-12	ALL
	A3		W0192	11J	24		29-11-12	ALL
	B1	UNUSED						ALL
	B2		W0192	11N	24		29-11-31	ALL
	B3		W0192	09W	24		29-11-31	ALL
	X1		W0192	09U	24		80-11-21	ALL
	X2		W0192	11F	20		80-11-21	ALL
	DED		W0192	09UZ			80-11-21	ALL
	DED		W0192	09WZ			29-11-31	ALL
	DED		W0192	11NZ			29-11-31	ALL
D10396		P061-00/ /		PLUG-P61				ALL
	1	DK	W0066	82A	18		33-13-21	ALL
	2	DK	W0066	82B	18		33-13-21	ALL
	3	UNUSED						ALL
	4		W0066	82D	24		33-14-11	ALL
	5		W0066	82E	24		33-14-11	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10		W0066	308R	24		33-13-21	ALL
	11		W0066	308B	24		33-13-21	ALL
	12		W0066	308Y	24		33-13-21	ALL
D10398		P061-00/ /		PLUG-P61				ALL
	1		W0066	308Y	24		33-13-21	ALL
	2	DK	W0066	82A	18		33-13-21	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D10300

Page 6

Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D10398		P061-00/ /		PLUG-P61 (continued)				ALL
	5		W0066	308B	24		33-13-21	ALL
	6		W0066	308R	24		33-13-21	ALL
	7		W0066	10G	20		33-13-21	ALL
	8	DK	W0066	10H	18		33-13-21	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	FM	W0066	10L	16		33-13-21	ALL
	12		W0066	10M	22		33-13-21	ALL



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D10400		0153/220/L008		RELAY SOCKET-				ALL
	A1		W0051	119	18		33-13-17	ALL
	A2		W0051	086	18		33-13-17	ALL
	A3	UNUSED						ALL
	B1	UNUSED						ALL
	B2	UNUSED						ALL
	B3	UNUSED						ALL
	C1		W0051	120	18		33-13-17	ALL
	C2		W0051	089	18		33-13-17	ALL
	C3	UNUSED						ALL
	D1		W0051	115	24		33-13-17	ALL
	D2		W0051	082	24		33-13-17	ALL
	D3		W0051	116	24		33-13-17	ALL
	G1		W0051	PA2			99-99-99	ALL
	G2	UNUSED						ALL
	G3		W0051	PA2			99-99-99	ALL
	X1		W0051	114	24		33-13-17	ALL
	X2		W0051	122	20		33-13-17	ALL
D10402		P005-00/ /		RELAY SOCKET-				ALL
	A1		W0062	12V	16		33-13-16	ALL
	A2		W0062	12B	16		33-13-16	ALL
	A3	UNUSED						ALL
	B1		W0062	12S	22		33-13-16	ALL
	B2		W0062	12M	22		33-13-16	ALL
	B3	UNUSED						ALL
	X1		W0062	12P	24		33-13-16	ALL
	X2		W0062	12R	20		33-13-16	ALL
D10404		P005-00/ /		RELAY SOCKET-P5				ALL
	A1		W0062	315R	24		33-13-16	ALL
	A2		W0062	310R	24		33-13-16	ALL
	A3		W0062	234R	24		33-13-16	ALL
	B1		W0062	315Y	24		33-13-16	ALL
	B2		W0062	310Y	24		33-13-16	ALL
	B3		W0062	234B	24		33-13-16	ALL
	C1		W0062	315B	24		33-13-16	ALL
	C2		W0062	310B	24		33-13-16	ALL
	C3		W0062	12Z	24		33-13-16	ALL
	D1	UNUSED						ALL
	D2	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D10400

Page 1

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D10404		P005-00/ /		RELAY SOCKET-P5 (continued)				ALL
	D3	UNUSED						ALL
	X1		W0062	12X	24		33-13-16	ALL
	X2		W0062	12Y	20		33-13-16	ALL
D10406		P006-00/ /		RELAY SOCKET-P6				ALL
	A1	UNUSED						ALL
	A2		W0028	158	24		24-34-11	ALL
	A3		W0028	167	24		24-34-11	ALL
	B1	UNUSED						ALL
	B2	UNUSED						ALL
	B3	UNUSED						ALL
	X1		W0028	159	24		24-34-11	ALL
	X2		W0028	160	24		24-34-11	ALL
D10408		P006-00/ /		RELAY SOCKET-P6				ALL
	A1		W0028	165	20		24-34-11	ALL
	A2		W0028	166	24		24-34-11	ALL
	A3	UNUSED						ALL
	B1		W0028	164	24		24-34-11	ALL
	B2		W0028	143	24		24-34-11	ALL
	B3		W0028	163	24		24-34-11	ALL
	X1		W0028	167	24		24-34-11	ALL
	X2		W0028	168	24		24-34-11	ALL
D10410		P006-00/ /		RELAY SOCKET-P6				ALL
	A1		W0028	170	20		24-34-11	ALL
	A2		W0028	171	24		24-34-11	ALL
	A3	UNUSED						ALL
	B1		W0028	169	20		24-34-11	ALL
	B2		W0028	164	24		24-34-11	ALL
	B3	UNUSED						ALL
	X1		W0028	162	24		24-34-11	ALL
	X2		W0028	172	24		24-34-11	ALL
D10414		P033-00/ /		RELAY SOCKET-				ALL
	1	UNUSED						ALL
	2		W0144	780	24		29-11-22	ALL
	3		W0144	782	24		29-11-22	ALL
	4	UNUSED						ALL
	5		W0144	786	24		29-11-22	ALL

HOOKUP LIST
D280T132

91-21-51
Section D10400
Page 2
Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D10414		P033-00/ /		RELAY SOCKET- (continued)				ALL
	6	UNUSED						ALL
	7		W0144	781	24		29-11-22	ALL
	8	UNUSED						ALL
D10416		P036-00/ /		RELAY SOCKET-				ALL
	A1		W0184	077	24		21-58-16	ALL
	A2		W0184	080	24		21-58-16	ALL
	A3	UNUSED						ALL
	B1	UNUSED						ALL
	B2	UNUSED						ALL
	B3	UNUSED						ALL
	X1		W0184	083	24		21-58-16	ALL
	X2		W0184	084	24		21-58-16	ALL
D10418		P036-00/ /		RELAY SOCKET-				ALL
	A1		W0184	072	22		21-58-16	ALL
	A2		W0184	067	22		21-58-16	ALL
	A3	UNUSED						ALL
	B1		W0184	074	24		21-58-16	ALL
	B2		W0184	068	24		21-58-16	ALL
	B3	UNUSED						ALL
	C1	UNUSED						ALL
	C2	UNUSED						ALL
	C3	UNUSED						ALL
	D1	UNUSED						ALL
	D2	UNUSED						ALL
	D3	UNUSED						ALL
	X1		W0184	077	24		21-58-16	ALL
	X2		W0184	069	20		21-58-16	ALL
D10420		P036-00/ /		RELAY SOCKET-				ALL
	1		W0184	846	24		21-58-16	ALL
	2		W0184	776	22		21-58-16	ALL
	3		W0184	579	24		21-58-16	ALL
	4		W0184	755	22		21-58-16	ALL
	5	UNUSED						ALL
	6		W0184	845	24		21-58-16	ALL
	7		W0184	590	24		21-58-16	ALL
	8	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D10400

Page 3

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D10422		P036-00/ /		RELAY SOCKET-				ALL
	A1		W0184	063	22		21-58-16	ALL
	A2		W0184	062	22		21-58-16	ALL
	A3	UNUSED						ALL
	B1	UNUSED						ALL
	B2		W0184	846	24		21-58-16	ALL
	B3		W0184	847	20		21-58-16	ALL
	C1	UNUSED						ALL
	C2	UNUSED						ALL
	C3	UNUSED						ALL
	D1	UNUSED						ALL
	D2	UNUSED						ALL
	D3	UNUSED						ALL
	X1		W0184	064	24		21-58-16	ALL
	X2		W0184	065	24		21-58-16	ALL
D10424		0325/188/0000		PLUG-				050-099
D10424		0322/185/0000		PLUG-				150-199, 275-299
	1		W0984	013	20		21-58-16	ALL
	2		W0984	012	22		21-58-16	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
D10430		P001-00/ /		RELAY SOCKET-P01				ALL
	A1		W0051	312R	24		33-13-11	ALL
	A2		W0051	305R	24		33-13-11	ALL
	A3		W0051	222R	24		33-13-11	ALL
	B1		W0051	312Y	24		33-13-11	ALL
	B2		W0051	305Y	24		33-13-11	ALL
	B3		W0051	222B	24		33-13-11	ALL
	C1		W0051	312B	24		33-13-11	ALL
	C2		W0051	305B	24		33-13-11	ALL
	C3		W0051	019	24		33-13-11	ALL
	D1		W0051	087	18		33-13-17	ALL
	D2		W0051	117	18		33-13-17	ALL
	D3	UNUSED						ALL
	X1		W0051	124	24		33-13-11	ALL
	X2		W0051	125	20		33-13-11	ALL

HOOKUP LIST
D280T132

91-21-51
Section D10400
Page 4
Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D10432		P006-00/ /		RELAY SOCKET-P6-5				ALL
	A1		W0156	157	20		33-11-13	ALL
	A2		W0156	156	20		33-11-13	ALL
	A3		W0156	155	20		33-11-13	ALL
	B1	UNUSED						ALL
	B2	UNUSED						ALL
	B3	UNUSED						ALL
	C1	UNUSED						ALL
	C2	UNUSED						ALL
	C3	UNUSED						ALL
	D1	UNUSED						ALL
	D2	UNUSED						ALL
	D3	UNUSED						ALL
	G1		W0156	PA4			99-99-99	ALL
	G2	UNUSED						ALL
	G3		W0156	PA4			99-99-99	ALL
	X1		W0156	158	24		33-11-13	ALL
	X2		W0156	159	20		33-11-13	ALL
D10434		0212/195/R065		PLUG-				ALL
	1		W0590	032	24		29-21-31	ALL
	2		W0590	028	20		29-21-31	ALL
	3		W0590	031	24		29-21-31	ALL
	4		W0590	004	24		29-21-31	ALL
	5	UNUSED						ALL
D10436		P036-00/ /		RELAY SOCKET-				ALL
	A1		W0184	702	18		29-11-32	ALL
	A2		W0184	839	18		29-11-32	ALL
	A3	UNUSED						ALL
	B1		W0184	640	20		29-11-32	ALL
	B2		W0184	645	24		29-11-32	ALL
	B3	UNUSED						ALL
	X1		W0184	840	24		29-11-32	ALL
	X2		W0184	638	24		29-11-32	ALL
D10454		P037-00/ /		RELAY SOCKET-P37				ALL
	A1	UNUSED						ALL
	A2		W0192	13A	20		27-51-61	ALL
	A3		W0192	12X	24		27-51-61	ALL

HOOKUP LIST

D280T132

91-21-51

Section D10400

Page 5

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D10454		P037-00/ /		RELAY SOCKET-P37 (continued)				ALL
	B1	UNUSED						ALL
	B2	UNUSED						ALL
	B3	UNUSED						ALL
	X1		W0192	12Y	24		27-51-61	ALL
	X2		W0192	12Z	24		27-51-61	ALL
D10456		P036-00/ /		RELAY SOCKET-				ALL
	A1		W0176	07H	20		27-32-31	ALL
	A2		W0176	07C	20		27-32-31	ALL
	A3	UNUSED						ALL
	B1	UNUSED						ALL
	B2	UNUSED						ALL
	B3	UNUSED						ALL
	X1		W0176	07B	20		27-32-31	ALL
	X2		W0176	07J	20		27-32-31	ALL
D10458		P036-00/ /		RELAY SOCKET-				ALL
	A1		W0176	07F	16		27-32-31	ALL
	A2		W0176	07D	16		27-32-31	ALL
	A3		W0176	07E	16		27-32-31	ALL
	B1	UNUSED						ALL
	B2	UNUSED						ALL
	B3	UNUSED						ALL
	X1		W0176	07H	20		27-32-31	ALL
	X2		W0176	07G	20		27-32-31	ALL
D10460		P033-00/ /		RELAY SOCKET-				ALL
	A1		W0142	03X	24		21-44-21	ALL
	A2		W0142	03T	22		21-44-21	ALL
	A3	UNUSED						ALL
	B1		W0142	03U	22		21-44-21	ALL
	B2		W0142	03R	24		21-44-21	ALL
	B3		W0142	03N	22		21-44-21	ALL
	C1		W0142	04F	24		21-44-21	ALL
	C2		W0142	04G	24		21-44-21	ALL
	C3	UNUSED						ALL
	D1	UNUSED						ALL
	D2	UNUSED						ALL
	D3	UNUSED						ALL
	X1		W0142	03Y	24		21-44-21	ALL

HOOKUP LIST

D280T132

91-21-51

Section D10400

Page 6

Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D10460		P033-00/ /		RELAY SOCKET- (continued)				ALL
	X2		W0142	03W	24		21-44-21	ALL
D10462		P036-00/ /		RELAY SOCKET-				ALL
	A1	UNUSED						ALL
	A2		W0184	842	24		21-58-16	ALL
	A3		W0184	832	24		21-58-16	ALL
	B1	UNUSED						ALL
	B2		W0184	843	24		21-58-16	ALL
	B3		W0184	833	24		21-58-16	ALL
	C1	UNUSED						ALL
	C2		W0184	066	22		21-58-16	ALL
	C3		W0184	434	22		21-58-16	ALL
	D1	UNUSED						ALL
	D2		W0184	852	24		21-58-16	ALL
	D3		W0184	831	24		21-58-16	ALL
	X1		W0184	851	24		21-58-16	ALL
	X2		W0184	850	24		21-58-16	ALL
D10468		P019-00/ /		RELAY SOCKET-P19				ALL
	A1		W1060	185	22		52-11-12	ALL
	A2		W1060	184	22		52-11-12	ALL
	A3	UNUSED						ALL
	B1		W1060	188	22		52-11-12	ALL
	B2		W1060	187	22		52-11-12	ALL
	B3	UNUSED						ALL
	X1		W1060	189	22		52-11-12	ALL
	X2		W1060	190	22		52-11-12	ALL
D10478		P037-00/ /		RELAY SOCKET-				ALL
	A1		W0192	618	24		36-11-41	ALL
	A2		W0192	621	24		36-11-41	ALL
	A3	UNUSED						ALL
	B1	UNUSED						ALL
	B2		W0192	85M	22		78-36-21	ALL
	B3		W0192	85L	22		78-36-21	ALL
	C1	UNUSED						ALL
	C2	UNUSED						ALL
	C3	UNUSED						ALL
	D1	UNUSED						ALL
	D2	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D10400

Page 7

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D10478		P037-00/ /		RELAY SOCKET- (continued)				ALL
	D3	UNUSED						ALL
	X1		W0192	833	24		32-09-12	ALL
	X2		W0192	813	24		32-09-12	ALL
D10492		0883/280/L005		RCPT-				050-099
D10492		883/280/L 5		RECPT				275-299
	1		W1280	220R	22		23-31-16	050-099
	1		W1280	209R	22		23-31-16	275-278
	1		W1280	230R	22		23-31-16	280-299
	2		W1280	220B	22		23-31-16	050-099
	2		W1280	209B	22		23-31-16	275-278
	2		W1280	230B	22		23-31-16	280-299
	3		W1280	193	22		33-24-13	050-099
	3		W1280	063	20		33-24-13	275-278
	3		W1280	613	20		33-24-13	280-299
	4		W1280	194	22		33-24-13	050-099
	4		W1280	064	20		33-24-13	275-278
	4		W1280	614	20		33-24-13	280-299
	5		W1280	195	20		33-24-13	050-099
	5		W1280	065	20		33-24-13	275-278
	5		W1280	615	20		33-24-13	280-299
	6		W1280	270R	22		23-31-16	050-099
	7		W1280	270B	22		23-31-16	050-099
	8	UNUSED						050-099
	9	UNUSED						050-099
	10	UNUSED						050-099
	11	UNUSED						050-099
	12	UNUSED						050-099
D10494		P033-00/ /		RELAY SOCKET-				ALL
	A1	UNUSED						ALL
	A2		W0144	787	24		21-44-21	ALL
	A3		W0144	788	20		21-44-21	ALL
	B1	UNUSED						ALL
	B2	UNUSED						ALL
	B3	UNUSED						ALL
	X1		W0144	789	24		21-44-21	ALL
	X2		W0144	790	24		21-44-21	ALL

HOOKUP LIST
D280T132

91-21-51
Section D10400
Page 8
Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D10498		P036-00/ /		RELAY SOCKET-				275
	1	UNUSED						275
	2	UNUSED						275
	3	UNUSED						275
	4	UNUSED						275
	5	UNUSED						275
	6	UNUSED						275
	7	UNUSED						275
	8	UNUSED						275

HOOKUP LIST
D280T132

91-21-51
Section D10400
Page 9 End
Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D10500		0880/257/L085		PLUG-				050-099
D10500		0915/270/L084		PLUG-				150-199, 275-299
	1		W0786	091	20		27-61-18	ALL
	2		W0786	092	20		27-61-18	ALL
	3	FM	W0786	107	16		25-65-11	ALL
	4		W0786	094	22		25-65-11	ALL
	5	UNUSED						050-099
	5		W0786	136	22		25-65-11	150-199, 275-299
	6	UNUSED						050-099
	6		W0786	147	22		25-65-11	150-199, 275-299
	7	UNUSED						050-099
	7		W0786	148	22		25-65-11	150-199, 275-299
	8		W0786	095	22		25-65-11	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13		W0786	096	22		25-65-11	ALL
	14	UNUSED						050-099
	14		W0786	133	22		25-65-11	150-199, 275-299
	15		W0786	111	20		25-65-11	050-099
	15	DK	W0786	111	18		25-65-11	150-199, 275-299
	16		W0786	112	22		25-65-11	ALL
	17	UNUSED						050-099
	17		W0786	145	22		25-65-11	150-199, 275-299
	18		W0786	113	22		25-65-11	ALL
	19	UNUSED						050-099
	19		W0786	138	22		25-65-11	150-199, 275-299
	20		W0786	114	22		25-65-11	ALL
	21		W0786	115	20		25-65-11	ALL
	22	FM	W0786	116	16		25-65-11	ALL
	23	FM	W0786	117	16		25-65-11	ALL
	24		W0786	118	20		25-65-11	ALL
D10502		0880/257/R085		PLUG-				050-099
D10502		0918/257/R085		PLUG-				150-199, 275-299
	1		W0786	105	20		27-61-18	ALL
	2		W0786	106	20		27-61-18	ALL
	3	FM	W0786	093	16		25-65-12	ALL
	4		W0786	108	22		25-65-12	ALL
	5	UNUSED						050-099

HOOKUP LIST

D280T132



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D10502		0880/257/R085		PLUG- (continued)				050-099
D10502		0918/257/R085		PLUG- (continued)				150-199, 275-299
	5		W0786	164	22		25-65-12	150-199, 275-299
	6	UNUSED						050-099
	6		W0786	167	22		25-65-12	150-199, 275-299
	7	UNUSED						050-099
	7		W0786	168	22		25-65-12	150-199, 275-299
	8		W0786	109	22		25-65-12	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13		W0786	110	22		25-65-12	ALL
	14	UNUSED						050-099
	14		W0786	163	22		25-65-12	150-199, 275-299
	15		W0786	097	20		25-65-12	050-099
	15	DK	W0786	097	18		25-65-12	150-199, 275-299
	16		W0786	098	22		25-65-12	ALL
	17	UNUSED						050-099
	17		W0786	166	22		25-65-12	150-199, 275-299
	18		W0786	099	22		25-65-12	ALL
	19	UNUSED						050-099
	19		W0786	165	22		25-65-12	150-199, 275-299
	20		W0786	100	22		25-65-12	ALL
	21		W0786	101	20		25-65-12	ALL
	22	FM	W0786	102	16		25-65-12	ALL
	23	FM	W0786	103	16		25-65-12	ALL
	24		W0786	104	20		25-65-12	ALL
D10508		P006-00/ /		RELAY SOCKET-P6-5				ALL
	A1		W0148	062	24		33-16-11	ALL
	A2		W0148	060	24		33-16-11	ALL
	A3	UNUSED						ALL
	B1	UNUSED						ALL
	B2	UNUSED						ALL
	B3	UNUSED						ALL
	X1		W0148	061	24		33-16-11	ALL
	X2		W0148	063	24		33-16-11	ALL
D10510		P006-00/ /		RELAY SOCKET-P6-5				ALL
	A1		W0156	165	24		33-16-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D10500

Page 2

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D10510		P006-00/ /		RELAY SOCKET-P6-5 (continued)				ALL
	A2		W0156	168	20		33-16-11	ALL
	A3	UNUSED						ALL
	B1		W0156	167	24		33-16-11	ALL
	B2		W0156	169	20		33-16-11	ALL
	B3	UNUSED						ALL
	X1		W0156	166	24		33-16-11	ALL
	X2		W0156	032	24		33-16-11	ALL
D10512		SHELF/E01/02		RLY SKT				ALL
	1	UNUSED						ALL
	2		W1092	746	24		32-61-14	ALL
	3		W1092	707	24		32-61-14	ALL
	4	UNUSED						ALL
	5		W1092	532	24		32-61-14	ALL
	6	UNUSED						ALL
	7		W1092	066	24		32-61-14	ALL
	8	UNUSED						ALL
	DED		W1092	707Z			32-61-14	ALL
D10514		SHELF/E01/02		RLY SKT				ALL
	1	UNUSED						ALL
	2		W1092	747	24		32-61-14	ALL
	3		W1092	710	24		32-61-14	ALL
	4	UNUSED						ALL
	5		W1092	533	24		32-61-14	ALL
	6	UNUSED						ALL
	7		W1092	738	24		32-61-14	ALL
	8	UNUSED						ALL
	DED		W1092	710Z			32-61-14	ALL
	DED		W1092	738Z			32-61-14	ALL
D10520		P037-00/ /		RELAY SOCKET-				050-099
D10520		P037-00/ /		RELAY SOCKET				150-154, 275-276
	A1	UNUSED						050-099, 150-154, 275-276
	A2	UNUSED						050-099
	A2		W1118	518	20		21-58-16	150-152, 275-276
	A2		W1118	518	20		25-33-11	153-154
	A3	UNUSED						050-099
	A3		W1118	530	20		25-33-11	150-154, 275-276
	B1	UNUSED						050-099, 150-154, 275-276

HOOKUP LIST
D280T132

91-21-51
Section D10500
Page 3
Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D10520		P037-00/ /		RELAY SOCKET- (continued)				050-099
D10520		P037-00/ /		RELAY SOCKET (continued)				150-154, 275-276
	B2		W1118	561	20		25-33-11	050-099
	B2		W1118	559	20		25-31-12	150-152
	B2		W1118	559	20		25-33-11	153-154
	B2	UNUSED						275-276
	B3		W1118	511	20		25-33-11	050-099
	B3		W1118	557	20		25-31-12	150-152
	B3		W1118	557	20		25-33-11	153-154
	B3	UNUSED						275-276
	C1	UNUSED						050-099
	C1		W1118	522	20		21-58-16	150-152, 275-276
	C1		W1118	522	20		25-33-12	153-154
	C2	UNUSED						050-099
	C2		W1118	521	22		21-58-16	150-152, 275-276
	C2		W1118	521	22		25-33-11	153-154
	C3	UNUSED						050-099, 150-154, 275-276
	D1	UNUSED						050-099, 150-154, 275-276
	D2		W1118	562	20		25-33-11	050-099
	D2		W1118	560	20		25-31-12	150-154
	D2	UNUSED						275-276
	D3		W1118	563	20		25-33-11	050-099
	D3		W1118	558	20		25-31-12	150-154
	D3	UNUSED						275-276
	X1		W1118	517	20		25-33-11	050-099, 153-154
	X1		W1118	517	20		21-58-16	150-152, 275-276
	X2		W1118	520	22		25-33-11	050-099, 153-154
	X2		W1118	520	22		21-58-16	150-152, 275-276
D10526		P033-00/ /		RELAY SOCKET-				ALL
	1		W0144	794	24		36-11-41	ALL
	2		W0144	793	24		36-11-41	ALL
	3	UNUSED						ALL
	4		W0144	741	22		36-11-51	ALL
	5		W0144	740	24		36-11-51	ALL
	6		W0144	795	22		36-11-51	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D10500

Page 4

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D10526		P033-00/ /		RELAY SOCKET- (continued)				ALL
	12		W0144	796	22		36-11-51	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
D10528		P037-00/ /		RELAY SOCKET-P37				ALL
	1		W0192	13T	24		36-11-41	ALL
	2		W0192	13M	24		36-11-41	ALL
	3	UNUSED						ALL
	4		W0192	0AA	22		36-11-52	ALL
	5		W0192	0AB	24		36-11-52	ALL
	6		W0192	13U	22		36-11-52	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12		W0192	13V	22		36-11-52	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
D10548		1495/280/L032		RCPT-				150-199
	1		W0724	058	20		35-21-12	150-199
	2		W0724	049	20		35-21-12	150-199
D10550		P036-00/ /		RELAY SOCKET-				275-299
	1		W0184	08B	22		73-21-19	275-299
	2	UNUSED						275-299
	3	UNUSED						275-299
	4	UNUSED						275-299
	5	UNUSED						275-299
	6		W0184	08D	22		73-21-19	275-299
	7	UNUSED						275-299
	8	UNUSED						275-299
	9	UNUSED						275-299
	10	UNUSED						275-299
	11	UNUSED						275-299
	12		W0184	08C	20		73-21-19	275-299
	13		W0184	08A	22		73-21-19	275-299
	14	UNUSED						275-299

HOOKUP LIST
D280T132

91-21-51
Section D10500
Page 5
Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D10552		P037-00/ /		RELAY SOCKET-				275-299
	1		W0192	07C	22		73-21-19	275-299
	2	UNUSED						275-299
	3	UNUSED						275-299
	4	UNUSED						275-299
	5	UNUSED						275-299
	6		W0192	06G	22		73-21-19	275-299
	7	UNUSED						275-299
	8	UNUSED						275-299
	9	UNUSED						275-299
	10	UNUSED						275-299
	11	UNUSED						275-299
	12		W0192	06F	20		73-21-19	275-299
	13		W0192	06J	22		73-21-19	275-299
	14	UNUSED						275-299
D10568		781/278/0		PLUG				050-099
D10568		654+76/280/0000		PLUG-				150-199
D10568		852/280/0000		PLUG-				275-299
	1		W0814	611	20		33-26-11	050-099
	1		W0814	862	22		33-26-11	150-199
	1		W0814	641	20		33-26-11	275-299
	2		W0814	642	16		38-13-11	050-099, 275-299
	2		W0814	702	16		38-13-11	150-199
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W0814	205B	22		23-31-14	050-099, 150-199
	5		W0814	204B	22		23-31-14	275-299
	6		W0814	616	18		33-26-11	050-099
	6		W0814	887	18		33-26-11	150-199
	6		W0814	646	18		33-26-11	275-299
	7		W0814	823	22		33-25-11	050-099, 150-199
	7		W0814	647	22		33-25-11	275-299
	8		W0814	648	16		38-13-11	050-099, 275-299
	8		W0814	701	16		38-13-11	150-199
	9		W0814	821	22		33-25-11	050-099, 150-199
	9		W0814	649	22		33-25-11	275-299
	10		W0814	620	20		33-26-21	050-099, 150-199
	10		W0814	645	20		33-26-21	275-299
	11	UNUSED						ALL
	12		W0814	652	20		33-24-11	050-099, 275-299

HOOKUP LIST

D280T132

91-21-51

Section D10500

Page 6

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D10568		781/278/0		PLUG (continued)				050-099
D10568		654+76/280/0000		PLUG- (continued)				150-199
D10568		852/280/0000		PLUG- (continued)				275-299
	12		W0814	577	20		33-24-11	150-199
	13		W0814	623	20		33-26-21	050-099, 150-199
	13		W0814	176	20		33-26-21	275-299
	14		W0814	784	20		33-26-21	050-099
	14	UNUSED						150-199
	14		W0814	644	20		33-26-21	275-299
	15		W0814	625	22		33-26-11	050-099
	15		W0814	860	22		33-26-11	150-199
	15		W0814	655	22		33-26-11	275-299
	16		W0814	205R	22		23-31-14	050-099, 150-199
	16		W0814	204R	22		23-31-14	275-299
	17		W0814	627	20		33-26-11	050-099
	17		W0814	888	20		33-26-11	150-199
	17		W0814	657	20		33-26-11	275-299
	18		W0814	683	20		38-32-13	050-099, 150-156, 162-165
	18		W0814	683	20		38-32-16	157, 166-199
	18		W0814	658	20		38-32-13	275-276
	18		W0814	658	20		38-32-16	277-299
	19		W0814	686	20		38-32-13	050-099, 150-156, 162-165
	19		W0814	686	20		38-32-16	157, 166-199
	19		W0814	659	20		38-32-13	275-276
	19		W0814	659	20		38-32-16	277-299
	20	DK	W0814	684	18		38-32-13	050-099
	20		W0814	684	20		38-32-13	150-156, 162-165
	20		W0814	684	20		38-32-16	157, 166-199
	20	DK	W0814	660	18		38-32-13	275-276
	20	DK	W0814	660	18		38-32-16	277-299
	21		W0814	685	22		38-32-13	050-099
	21		W0814	685	20		38-32-13	150-156, 162-165
	21		W0814	685	20		38-32-16	157, 166-199
	21		W0814	661	22		38-32-13	275-276
	21		W0814	661	22		38-32-16	277-299
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25		W0814	822	22		33-25-11	050-099, 150-199
	25		W0814	665	22		33-25-11	275-299
	26		W0814	820	20		33-25-11	050-099, 150-199

HOOKUP LIST
D280T132

91-21-51
Section D10500
Page 7
Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D10568		781/278/0		PLUG (continued)				050-099
D10568		654+76/280/0000		PLUG- (continued)				150-199
D10568		852/280/0000		PLUG- (continued)				275-299
	26		W0814	666	20		33-25-11	275-299
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						050-099, 150-199
	29		W0814	703	20		25-42-11	275-299
	30		W0814	760	20		33-24-11	050-099, 275-299
	30	UNUSED						150-199
	31	UNUSED						ALL
	32		W0814	761	20		33-24-11	050-099, 275-299
	32	UNUSED						150-199
D10570		1056/278/R060		PLUG				050-099
D10570		984/278/R060		PLUG				150-199
	1		W0814	641	20		33-26-11	050-099
	1		W0792	674	20		33-26-11	150-199
	2		W0814	612	16		38-13-11	050-099
	2		W0792	802	16		38-13-11	150-199
	3	UNUSED						050-099, 150-199
	4	UNUSED						050-099, 150-199
	5		W0814	210B	22		23-31-14	050-099
	5		W0792	207B	22		23-31-14	150-199
	6		W0814	646	18		33-26-11	050-099
	6		W0792	672	22		33-26-11	150-199
	7		W0814	189	22		33-25-11	050-099
	7		W0792	066	22		33-25-11	150-199
	8		W0814	618	16		38-13-11	050-099
	8		W0792	801	16		38-13-11	150-199
	9		W0814	190	22		33-25-11	050-099
	9		W0792	067	22		33-25-11	150-199
	10		W0814	884	20		33-26-21	050-099
	10		W0792	189	20		33-26-21	150-199
	11	UNUSED						050-099, 150-199
	12		W0814	782	20		33-24-11	050-099
	12		W0792	578	20		33-24-11	150-199
	13		W0814	899	20		33-26-21	050-099
	13		W0792	190	20		33-26-21	150-199
	14	UNUSED						050-099, 150-199
	15		W0814	655	22		33-26-11	050-099

HOOKUP LIST

D280T132

91-21-51

Section D10500

Page 8

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D10570		1056/278/R060		PLUG (continued)				050-099
D10570		984/278/R060		PLUG (continued)				150-199
	15		W0792	673	22		33-26-11	150-199
	16		W0814	210R	22		23-31-14	050-099
	16		W0792	207R	22		23-31-14	150-199
	17		W0814	657	20		33-26-11	050-099
	17		W0792	671	22		33-26-11	150-199
	18		W0814	667	20		38-32-13	050-099
	18		W0792	667	20		38-32-13	150-156, 162-165
	18		W0792	667	20		38-32-16	157, 166-199
	19		W0814	668	20		38-32-13	050-099
	19		W0792	668	20		38-32-13	150-156, 162-165
	19		W0792	668	20		38-32-16	157, 166-199
	20	DK	W0814	185	18		38-32-13	050-099
	20		W0792	669	20		38-32-13	150-156, 162-165
	20		W0792	669	20		38-32-16	157, 166-199
	21		W0814	666	22		38-32-13	050-099
	21		W0792	666	20		38-32-13	150-156, 162-165
	21		W0792	666	20		38-32-16	157, 166-199
	22	UNUSED						050-099, 150-199
	23	UNUSED						050-099, 150-199
	24	UNUSED						050-099, 150-199
	25		W0814	191	22		33-25-11	050-099
	25		W0792	068	22		33-25-11	150-199
	26		W0814	192	20		33-25-11	050-099
	26		W0792	069	20		33-25-11	150-199
	27	UNUSED						050-099, 150-199
	28	UNUSED						050-099, 150-199
	29	UNUSED						050-099, 150-199
	30	UNUSED						050-099, 150-199
	31	UNUSED						050-099, 150-199
	32	UNUSED						050-099, 150-199
D10572		P049-00/ /		RELAY SOCKET-				ALL
	A1	UNUSED						ALL
	A2		W0030	038	24		21-44-11	ALL
	A3		W0030	094	20		21-44-11	ALL
	B1	UNUSED						ALL
	B2	UNUSED						ALL
	B3	UNUSED						ALL
	X1		W0030	092	24		21-44-11	ALL

HOOKUP LIST

D280T132



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D10572		P049-00/ /		RELAY SOCKET- (continued)				ALL
	X2		W0030	093	24		21-44-11	ALL
D10582 D10582		P37/ / P37/ /		RELAY SOCKET-P37 RLY SKT				050-099 162-199, 275-299
	1	UNUSED						050-099, 162-199, 275-299
	2	UNUSED						050-099, 162-199, 275-299
	3	UNUSED						050-099, 162-199, 275-299
	4		W0192	619	24		36-11-41	050-099, 162-199, 275-299
	5		W0192	13F	20		36-11-41	050-099, 162-199, 275-299
	6		W0192	50G	22		49-61-11	050-099, 162-199, 275-299
	7		W0192	50L	20		49-61-11	050-099, 162-199, 275-299
	8		W0192	59W	24		24-27-41	050-099, 162-199, 275-299
	9	UNUSED						050-099, 162-199, 275-299
	10		W0192	50M	24		49-72-11	050-099, 162-199, 275-299
	11		W0192	50K	20		49-61-11	050-099, 162-199, 275-299
	12		W0192	50F	22		49-61-11	050-099, 162-199, 275-299
	13	UNUSED						050-099, 162-199, 275-299
	14	UNUSED						050-099, 162-199, 275-299
D10586		L0394/14/FS		RCPT-STRUT				ALL
	=1		W0356	459R	18		26-18-11	ALL
D10590		R0394/14/FS		RCPT-				ALL
	=1		W0376	459R	18		26-18-21	ALL
D10592		P035-00/ /		RELAY SOCKET-				ALL
	1	UNUSED						ALL
	2		W1066	40B	22		25-53-15	ALL
	3		W1066	40C	22		25-53-15	ALL
	4	UNUSED						ALL
	5		W1066	40E	22		25-53-15	ALL
	6	UNUSED						ALL
	7		W1066	40G	22		25-53-15	ALL
	8	UNUSED						ALL
D10594		P035-00/ /		RELAY SOCKET-				ALL
	1	UNUSED						ALL
	2		W1066	41B	22		25-53-15	ALL
	3		W1066	41C	22		25-53-15	ALL
	4	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D10500
Page 10
Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D10594		P035-00/ /		RELAY SOCKET- (continued)				ALL
	5		W1066	41E	22		25-53-15	ALL
	6	UNUSED						ALL
	7		W1066	41G	22		25-53-15	ALL
	8	UNUSED						ALL
D10596		P035-00/ /		RELAY SOCKET-				ALL
	1	UNUSED						ALL
	2		W1066	42B	22		25-53-15	ALL
	3		W1066	42C	22		25-53-15	ALL
	4	UNUSED						ALL
	5		W1066	42E	22		25-53-15	ALL
	6	UNUSED						ALL
	7		W1066	42G	22		25-53-15	ALL
	8	UNUSED						ALL
D10598		P035-00/ /		RELAY SOCKET-				ALL
	1	UNUSED						ALL
	2		W1066	43B	22		25-53-15	ALL
	3		W1066	43C	22		25-53-15	ALL
	4	UNUSED						ALL
	5		W1066	43E	22		25-53-15	ALL
	6	UNUSED						ALL
	7		W1066	43G	22		25-53-15	ALL
	8	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D10500
Page 11 End
Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D10600		P035-00/ /		RELAY SOCKET-				ALL
	A1		W1066	38A	22		25-53-15	ALL
	A2		W1066	38B	22		25-53-15	ALL
	A3	UNUSED						ALL
	B1	UNUSED						ALL
	B2	UNUSED						ALL
	B3	UNUSED						ALL
	X1		W1066	38D	22		25-53-15	ALL
	X2		W1066	38E	22		25-53-15	ALL
D10602		P035-00/ /		RELAY SOCKET-				ALL
	1	UNUSED						ALL
	2		W1066	44B	22		25-53-16	ALL
	3		W1066	44C	22		25-53-16	ALL
	4	UNUSED						ALL
	5		W1066	44E	22		25-53-16	ALL
	6	UNUSED						ALL
	7		W1066	44G	22		25-53-16	ALL
	8	UNUSED						ALL
D10604		P035-00/ /		RELAY SOCKET-				ALL
	1	UNUSED						ALL
	2		W1066	45B	22		25-53-16	ALL
	3		W1066	45C	22		25-53-16	ALL
	4	UNUSED						ALL
	5		W1066	45E	22		25-53-16	ALL
	6	UNUSED						ALL
	7		W1066	45G	22		25-53-16	ALL
	8	UNUSED						ALL
D10606		P035-00/ /		RELAY SOCKET-				ALL
	1	UNUSED						ALL
	2		W1066	46B	22		25-53-16	ALL
	3		W1066	46C	22		25-53-16	ALL
	4	UNUSED						ALL
	5		W1066	46E	22		25-53-16	ALL
	6	UNUSED						ALL
	7		W1066	46G	22		25-53-16	ALL
	8	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D10600

Page 1

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D10608		P035-00/ /		RELAY SOCKET-				ALL
	A1		W1066	39A	22		25-53-16	ALL
	A2		W1066	39B	22		25-53-16	ALL
	A3	UNUSED						ALL
	B1	UNUSED						ALL
	B2	UNUSED						ALL
	B3	UNUSED						ALL
	X1		W1066	39D	22		25-53-16	ALL
	X2		W1066	39E	22		25-53-16	ALL
D10610		P035-00/ /		RELAY SOCKET-				ALL
	1	UNUSED						ALL
	2		W1066	47B	22		25-53-17	ALL
	3		W1066	47C	22		25-53-17	ALL
	4	UNUSED						ALL
	5		W1066	47E	22		25-53-17	ALL
	6	UNUSED						ALL
	7		W1066	37M	22		25-53-17	050-099
	7		W1066	47G	22		25-53-17	150-199, 275-299
	8	UNUSED						ALL
D10612		P035-00/ /		RELAY SOCKET-				050-099
D10612		P035-00/ /		REALAY SOCKET-				150-199, 275-299
	1	UNUSED						ALL
	2		W1066	48B	22		25-53-17	ALL
	3		W1066	48C	22		25-53-17	ALL
	4	UNUSED						ALL
	5		W1066	48E	22		25-53-17	ALL
	6	UNUSED						ALL
	7		W1066	37N	22		25-53-17	050-099
	7		W1066	48G	22		25-53-17	150-199, 275-299
	8	UNUSED						ALL
D10614		P035-00/ /		RELAY SOCKET-				ALL
	1	UNUSED						ALL
	2		W1066	49B	22		25-53-17	ALL
	3		W1066	49C	22		25-53-17	ALL
	4	UNUSED						ALL
	5		W1066	49E	22		25-53-17	ALL
	6	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D10600
Page 2
Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D10614		P035-00/ /		RELAY SOCKET- (continued)				ALL
	7		W1066	49G	22		25-53-17	ALL
	8	UNUSED						ALL
D10616		P035-00/ /		RELAY SOCKET-				ALL
	1	UNUSED						ALL
	2		W1066	50B	22		25-53-17	ALL
	3		W1066	50C	22		25-53-17	ALL
	4	UNUSED						ALL
	5		W1066	50E	22		25-53-17	ALL
	6	UNUSED						ALL
	7		W1066	50G	22		25-53-17	ALL
	8	UNUSED						ALL
D10620		P039-00/ /		RELAY SOCKET-				ALL
	1	UNUSED						ALL
	2		W1068	40B	22		25-53-25	ALL
	3		W1068	40C	22		25-53-25	ALL
	4	UNUSED						ALL
	5		W1068	40E	22		25-53-25	ALL
	6	UNUSED						ALL
	7		W1068	40G	22		25-53-25	ALL
	8	UNUSED						ALL
D10622		P039-00/ /		RELAY SOCKET-				ALL
	1	UNUSED						ALL
	2		W1068	41B	22		25-53-25	ALL
	3		W1068	41C	22		25-53-25	ALL
	4	UNUSED						ALL
	5		W1068	41E	22		25-53-25	ALL
	6	UNUSED						ALL
	7		W1068	41G	22		25-53-25	ALL
	8	UNUSED						ALL
D10624		P039-00/ /		RELAY SOCKET-				ALL
	1	UNUSED						ALL
	2		W1068	42B	22		25-53-25	ALL
	3		W1068	42C	22		25-53-25	ALL
	4	UNUSED						ALL
	5		W1068	42E	22		25-53-25	ALL
	6	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D10600
Page 3
Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D10624		P039-00/ /		RELAY SOCKET- (continued)				ALL
	7		W1068	42G	22		25-53-25	ALL
	8	UNUSED						ALL
D10626		P039-00/ /		RELAY SOCKET-				ALL
	1	UNUSED						ALL
	2		W1068	43B	22		25-53-25	ALL
	3		W1068	43C	22		25-53-25	ALL
	4	UNUSED						ALL
	5		W1068	43E	22		25-53-25	ALL
	6	UNUSED						ALL
	7		W1068	43G	22		25-53-25	ALL
	8	UNUSED						ALL
D10628		P039-00/ /		RELAY SOCKET-				ALL
	A1		W1068	38A	22		25-53-25	ALL
	A2		W1068	38B	22		25-53-25	ALL
	A3	UNUSED						ALL
	B1	UNUSED						ALL
	B2	UNUSED						ALL
	B3	UNUSED						ALL
	X1		W1068	38D	22		25-53-25	ALL
	X2		W1068	38E	22		25-53-25	ALL
D10630		P039-00/ /		RELAY SOCKET-				ALL
	1	UNUSED						ALL
	2		W1068	44B	22		25-53-26	ALL
	3		W1068	44C	22		25-53-26	ALL
	4	UNUSED						ALL
	5		W1068	44E	22		25-53-26	ALL
	6	UNUSED						ALL
	7		W1068	44G	22		25-53-26	ALL
	8	UNUSED						ALL
D10632		P039-00/ /		RELAY SOCKET-				ALL
	1	UNUSED						ALL
	2		W1068	45B	22		25-53-26	ALL
	3		W1068	45C	22		25-53-26	ALL
	4	UNUSED						ALL
	5		W1068	45E	22		25-53-26	ALL
	6	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D10600
Page 4
Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D10632		P039-00/ /		RELAY SOCKET- (continued)				ALL
	7		W1068	45G	22		25-53-26	ALL
	8	UNUSED						ALL
D10634		P039-00/ /		RELAY SOCKET-				ALL
	1	UNUSED						ALL
	2		W1068	46B	22		25-53-26	ALL
	3		W1068	46C	22		25-53-26	ALL
	4	UNUSED						ALL
	5		W1068	46E	22		25-53-26	ALL
	6	UNUSED						ALL
	7		W1068	46G	22		25-53-26	ALL
	8	UNUSED						ALL
D10636		P039-00/ /		RELAY SOCKET-				ALL
	A1		W1068	39A	22		25-53-26	ALL
	A2		W1068	39B	22		25-53-26	ALL
	A3	UNUSED						ALL
	B1	UNUSED						ALL
	B2	UNUSED						ALL
	B3	UNUSED						ALL
	X1		W1068	39D	22		25-53-26	ALL
	X2		W1068	39E	22		25-53-26	ALL
D10638		P039-00/ /		RELAY SOCKET-				050-099, 150-199
	1	UNUSED						050-099, 150-199
	2		W1068	47B	22		25-53-27	050-099, 150-199
	3		W1068	47C	22		25-53-27	050-099, 150-199
	4	UNUSED						050-099, 150-199
	5		W1068	47E	22		25-53-27	050-099, 150-199
	6	UNUSED						050-099, 150-199
	7		W1068	47G	22		25-53-27	050-099, 150-199
	8	UNUSED						050-099, 150-199
D10640		P039-00/ /		RELAY SOCKET-				050-099, 150-199
	1	UNUSED						050-099, 150-199
	2		W1068	48B	22		25-53-27	050-099, 150-199
	3		W1068	48C	22		25-53-27	050-099, 150-199
	4	UNUSED						050-099, 150-199
	5		W1068	48E	22		25-53-27	050-099, 150-199
	6	UNUSED						050-099, 150-199

HOOKUP LIST
D280T132

91-21-51
Section D10600
Page 5
Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D10640		P039-00/ /		RELAY SOCKET- (continued)				050-099, 150-199
	7		W1068	48G	22		25-53-27	050-099, 150-199
	8	UNUSED						050-099, 150-199
D10642		P039-00/ /		RELAY SOCKET-				050-099, 150-199
	1	UNUSED						050-099, 150-199
	2		W1068	49B	22		25-53-27	050-099, 150-199
	3		W1068	49C	22		25-53-27	050-099, 150-199
	4	UNUSED						050-099, 150-199
	5		W1068	49E	22		25-53-27	050-099, 150-199
	6	UNUSED						050-099, 150-199
	7		W1068	49G	22		25-53-27	050-099, 150-199
	8	UNUSED						050-099, 150-199
D10646		0883/280/L005		RCPT-				275-278
	1		W1282	020	20		35-21-14	275-278
	2		W1282	021	20		35-21-14	275-278
D10656 D10656		0674/168/R068 654+86/171/R066		PLUG-PRESSURE SW. PLUG-PRESSURE SW.				050-099 150-199, 275-299
	1	UNUSED						ALL
	2		W0614	702R	20		26-23-11	ALL
	3		W0614	701R	20		26-23-11	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
D10658		P006-00/ /		RELAY SOCKET-P6				ALL
	A1		W0150	025	16		33-13-18	ALL
	A2		W0150	024	16		33-13-18	ALL
	A3		W0150	023	16		33-13-18	ALL
	B1	UNUSED						ALL
	B2	UNUSED						ALL
	B3	UNUSED						ALL
	X1		W0150	026	24		33-13-18	ALL
	X2		W0150	027	20		33-13-18	ALL
	DED		W0150	023Z			33-13-18	ALL
D10664		P037-00/ /		PLUG-P37				150-199, 275-299
	A1		W0198	586R	20		26-23-12	150-199, 275-299
	A2		W0198	574R	20		26-23-12	150-199, 275-299
	A3	UNUSED						150-199, 275-299

HOOKUP LIST
D280T132

91-21-51
Section D10600
Page 6
Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D10664		P037-00/ /		PLUG-P37 (continued)				150-199, 275-299
	B1	UNUSED						150-154
	B1		W0198	619R	20		26-23-12	155-199, 275-299
	B2	UNUSED						150-154
	B2		W0198	592R	20		26-23-12	155-199, 275-299
	B3	UNUSED						150-154
	B3		W0198	620R	20		26-23-12	155-199, 275-299
	C1		W0198	588R	20		26-23-12	150-199, 275-299
	C2		W0198	575R	20		26-23-12	150-199, 275-299
	C3		W0198	587R	20		26-23-12	150-199, 275-299
	D1		W0198	589R	20		26-23-12	150-199, 275-299
	D2		W0198	576R	20		26-23-12	150-199, 275-299
	D3	UNUSED						150-199, 275-299
	X1		W0198	577R	20		26-23-12	150-199, 275-299
	X2		W0198	578R	20		26-23-12	150-199, 275-299
D10666		P037-00/ /		PLUG-P37				150-199, 275-299
	A1	UNUSED						150-154
	A1		W0198	621R	20		26-23-12	155-199, 275-299
	A2	UNUSED						150-154
	A2		W0198	593R	20		26-23-12	155-199, 275-299
	A3	UNUSED						150-154
	A3		W0198	618R	20		26-23-12	155-199, 275-299
	B1		W0198	590R	20		26-23-12	150-199, 275-299
	B2		W0198	581R	20		26-23-12	150-199, 275-299
	B3	UNUSED						150-199, 275-299
	C1		W0198	591R	20		26-23-12	150-199, 275-299
	C2		W0198	582R	20		26-23-12	150-199, 275-299
	C3		W0198	589R	20		26-23-12	150-199, 275-299
	D1		W0198	587R	20		26-23-12	150-199, 275-299
	D2		W0198	583R	20		26-23-12	150-199, 275-299
	D3	UNUSED						150-199, 275-299
	X1		W0198	584R	20		26-23-12	150-199, 275-299
	X2		W0198	585R	20		26-23-12	150-199, 275-299
D10668		P037-00/ /		PLUG-P37				150-199, 275-299
	A1		W0198	600R	20		26-23-12	150-199, 275-299
	A2		W0198	594R	20		26-23-12	150-199, 275-299
	A3	UNUSED						150-199, 275-299
	B1		W0198	601R	20		26-23-12	150-199, 275-299
	B2		W0198	595R	20		26-23-12	150-199, 275-299

HOOKUP LIST

D280T132

91-21-51

Section D10600

Page 7

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D10668		P037-00/ /		PLUG-P37 (continued)				150-199, 275-299
	B3	UNUSED						150-199, 275-299
	X1		W0198	596R	20		26-23-12	150-199, 275-299
	X2		W0198	597R	20		26-23-12	150-199, 275-299
	Y1	UNUSED						150-199, 275-299
	Y2	UNUSED						150-199, 275-299
D10676		0821/284/R008		PLUG				275-299
	1	UNUSED						275-299
	2	UNUSED						275-299
	3	UNUSED						275-299
	4	UNUSED						275-299
	5		W0110	068	22		33-22-42	275-299
	6	UNUSED						275-299
	7		W0110	066	22		33-22-42	275-299
	8		W0110	027	22		33-22-42	275-299
	9		W0110	C-C			33-22-42	275-299
	10		W0110	C-D			33-22-42	275-299
	11		W0110	C-B			33-22-42	275-299
	12		W0110	C-A			33-22-42	275-299
D10680		684/147/R 69		PLUG-FWD SQUIB				050-099
D10680		0654+30/151/R069		PLUG-FWD SQUIB				155-199, 275-299
	1		W0644	002R	20		26-23-12	050-099
	1		W0650	002R	20		26-23-12	155-199, 275-299
	2		W0644	005R	20		26-23-12	050-099
	2		W0650	005R	20		26-23-12	155-199, 275-299
	3		W0644	008R	20		26-23-12	050-099
	3		W0650	008R	20		26-23-12	155-199, 275-299
D10682		689/147/R 69		PLUG-AFT SQUIB				050-099
D10682		0654+36/151/R069		PLUG-AFT SQUIB				155-199, 275-299
	1		W0644	003R	20		26-23-12	050-099
	1		W0650	003R	20		26-23-12	155-199, 275-299
	2		W0644	006R	20		26-23-12	050-099
	2		W0650	006R	20		26-23-12	155-199, 275-299
	3		W0644	009R	20		26-23-12	050-099
	3		W0650	009R	20		26-23-12	155-199, 275-299
	4	UNUSED						050-099, 155-199, 275-299
	5	UNUSED						050-099, 155-199, 275-299

HOOKUP LIST
D280T132

91-21-51
Section D10600
Page 8
Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D10684		694/152/R 70		PLUG-PRESS SW				050-099
D10684		0654+31/165/R074		PLUG-PRESS SW				155-199, 275-299
	1		W0644	007R	20		26-23-12	050-099
	1		W0650	007R	20		26-23-12	155-199, 275-299
	2		W0644	001R	20		26-23-12	050-099
	2		W0650	001R	20		26-23-12	155-199, 275-299
	3		W0644	004R	20		26-23-12	050-099
	3		W0650	004R	20		26-23-12	155-199, 275-299
	4	UNUSED						050-099, 155-199, 275-299
	5	UNUSED						050-099, 155-199, 275-299
D10686		P37/ /		RELAY SOCKET-P37				ALL
	A1	UNUSED						ALL
	A2		W0192	15M	20		21-61-41	ALL
	A3		W0192	15N	22		21-61-41	ALL
	B1		W0192	15K	24		21-61-41	ALL
	B2		W0192	15L	20		21-61-41	ALL
	B3	UNUSED						ALL
	X1		W0192	15C	24		21-61-41	ALL
	X2		W0192	16H	24		21-61-41	ALL
D10688		P37/ /		RELAY SOCKET-P37				ALL
	A1		W0192	15H	24		21-61-41	ALL
	A2		W0192	15K	24		21-61-41	ALL
	A3	UNUSED						ALL
	B1		W0192	15I	22		21-61-41	ALL
	B2		W0192	15J	20		21-61-41	ALL
	B3	UNUSED						ALL
	X1		W0192	15E	24		21-61-41	ALL
	X2		W0192	15F	24		21-61-41	ALL
D10690		P37/ /		RELAY SOCKET-P37				ALL
	A1	UNUSED						ALL
	A2	UNUSED						ALL
	A3	UNUSED						ALL
	B1	UNUSED						ALL
	B2		W0192	16A	24		21-61-41	ALL
	B3		W0192	270B	24		21-61-41	ALL
	C1		W0192	15Y	24		21-61-41	ALL
	C2		W0192	15V	24		21-61-41	ALL

HOOKUP LIST

D280T132

91-21-51

Section D10600

Page 9

Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D10690		P37 / I		RELAY SOCKET-P37 (continued)				ALL
	C3		W0192	270R	24		21-61-41	ALL
	D1	UNUSED						ALL
	D2		W0192	15X	24		21-61-41	ALL
	D3		W0192	15W	24		21-61-41	ALL
	X1		W0192	15S	24		21-61-41	ALL
	X2		W0192	15R	24		21-61-41	ALL



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D10702		0823/123/L015		PLUG				ALL
	1		W0508	042	20		21-61-41	ALL
	2		W0508	057	20		21-61-41	ALL
	3		W0508	045	20		21-61-41	ALL
	4		W0508	312B	20		21-61-41	ALL
	5		W0508	312R	20		21-61-41	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10		W0508	043	20		21-61-41	ALL
	11		W0508	058	20		21-61-41	ALL
	12		W0508	312Y	20		21-61-41	ALL
	13		W0508	046	20		21-61-41	ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
D10704		0823/123/L015		PLUG				ALL
	1		W0508	313Y	20		21-64-11	ALL
	2		W0508	313B	20		21-64-11	ALL
	3		W0508	313R	20		21-64-11	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D10706		P005-00/ /		PLUG-P5				ALL
	1		W0066	315B	24		21-61-41	ALL
	2		W0066	315R	24		21-61-41	ALL
	3		W0066	315Y	24		21-61-41	ALL
	4		W0066	339B	24		21-61-71	ALL
	5		W0066	339R	24		21-61-71	ALL
	6		W0066	339Y	24		21-61-71	ALL
	7		W0066	09M	20		21-61-41	ALL
	8	UNUSED						ALL
	9		W0066	09K	24		21-61-41	ALL

HOOKUP LIST
D280T132

91-21-51
Section D10700
Page 1
Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D10706		P005-00/ /		PLUG-P5 (continued)				ALL
	10		W0066	09J	20		21-61-41	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D10708		0770/305/R012		PLUG-				ALL
	1		W1234	204B	24		21-61-41	ALL
	2		W1234	204R	24		21-61-41	ALL
D10710		MULTI/283/0000		PLUG-				050-099, 275-278
D10710		1030/283/0000		PLUG-				150-199
D10710		MULTI/293/0000		PLUG-				280-299
	1		W1234	205B	24		21-61-41	ALL
	2		W1234	205R	24		21-61-41	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
D10712		0770/305/R012		PLUG-				ALL
	1		W1234	803	22		21-61-41	ALL
	2		W1234	032	20		21-61-41	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
D10714		0770/305/R012		PLUG-				ALL
	A		W1234	207B	20		21-65-11	ALL
	B		W1234	028	20		21-65-11	ALL
D10716		MULTI/283/000		PLUG-				050-099, 275-278
D10716		1030/283/000		PLUG-				150-199
D10716		MULTI/293/000		PLUG-				280-299
	A		W1234	206B	20		21-65-11	ALL
	B		W1234	030	20		21-65-11	ALL
D10718		0284/204/L053		PLUG-				ALL
	1	FM	W0832	001	16		33-51-11	ALL
	2		W0832	002	20		33-51-11	ALL
	3		W0832	003	22		33-51-11	ALL
	4		W0832	004	22		33-51-11	ALL

HOOKUP LIST
D280T132

91-21-51
Section D10700
Page 2
Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D10718		0284/204/L053		PLUG- (continued)				ALL
	5		W0832	005	22		33-51-11	ALL
	6		W0832	005	22		33-51-11	ALL
	7		W0832	007	20		33-51-11	ALL
	8		W0832	008	22		33-51-11	ALL
	9	FM	W0832	009	16		33-51-14	ALL
	10	DK	W0832	010	18		33-51-14	050-099, 150-199
	10	FM	W0832	010	16		33-51-14	275-299
	11		W0832	011	20		33-51-12	050-099
	11	UNUSED						150-199, 275-299
	12		W0832	012	20		33-51-12	050-099
	12	UNUSED						150-199, 275-299
	13		W0832	015	20		33-51-13	050-099
	13	UNUSED						150-199, 275-299
	14		W0832	037	22		33-51-13	050-099
	14	UNUSED						150-199, 275-299
	15		W0832	035	20		33-51-13	050-099
	15	UNUSED						150-199, 275-299
	16		W0832	032	20		33-51-12	050-099
	16	UNUSED						150-199, 275-299
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20		W0832	020	22		33-51-14	ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24		W0832	020	22		33-51-14	ALL
D10720		0873/202/R096		PLUG-				ALL
	1		W0834	001	20		33-51-11	ALL
	2		W0834	002	20		33-51-11	ALL
	3		W0834	003	22		33-51-11	ALL
	4		W0834	004	22		33-51-11	ALL
	5		W0834	005	22		33-51-11	ALL
	6		W0834	005	22		33-51-11	ALL
	7		W0834	007	20		33-51-11	ALL
	8		W0834	008	22		33-51-11	ALL
	9	DK	W0834	009	18		33-51-14	050-099, 150-199
	9	FM	W0834	009	16		33-51-14	275-299
	10	DK	W0834	010	18		33-51-14	ALL

HOOKUP LIST

D280T132

91-21-51

Section D10700

Page 3

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D10720		0873/202/R096		PLUG- (continued)				ALL
	11		W0834	011	20		33-51-12	050-099
	11	DK	W0834	011	18		33-51-14	150-199, 275-299
	12		W0834	012	20		33-51-12	050-099
	12	DK	W0834	012	18		33-51-14	150-199
	12	FM	W0834	012	16		33-51-14	275-299
	13		W0834	037	20		33-51-12	050-099
	13	UNUSED						150-199
	13		W0834	037	20		33-51-16	275-299
	14	UNUSED						050-099, 150-199
	14		W0834	006	20		33-51-14	275-299
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20		W0834	020	22		33-51-14	ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24		W0834	020	22		33-51-14	ALL
D10722		1540/204/R054		PLUG-				ALL
	1	FM	W0836	001	16		33-51-11	ALL
	2		W0836	002	20		33-51-11	ALL
	3		W0836	003	22		33-51-11	050-099, 275-299
	3		W0836	019	22		33-51-11	150-199
	4		W0836	004	22		33-51-11	ALL
	5		W0836	005	22		33-51-11	ALL
	6		W0836	005	22		33-51-11	ALL
	7		W0836	007	20		33-51-11	ALL
	8		W0836	008	22		33-51-11	ALL
	9	DK	W0836	009	18		33-51-14	050-099, 150-199
	9	FM	W0836	009	16		33-51-14	275-299
	10	DK	W0836	010	18		33-51-14	ALL
	11		W0836	038	20		33-51-12	050-099
	11	FM	W0836	911	16		33-51-14	150, 152-199
	11	UNUSED						151, 275-299
	12		W0836	040	20		33-51-12	050-099
	12	UNUSED						150-199, 275-299
	13		W0836	042	20		33-51-13	050-099

HOOKUP LIST

D280T132

91-21-51

Section D10700

Page 4

Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D10722		1540/204/R054		PLUG- (continued)				ALL
	13	UNUSED						150-199
	13	DK	W0836	011	18		33-51-16	275-299
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20		W0836	020	22		33-51-14	ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24		W0836	020	22		33-51-14	ALL
D10724		P037-00/ /		RELAY SOCKET-P37				ALL
	A1		W0192	02S	20		21-26-11	ALL
	A2		W0192	14T	20		21-26-11	ALL
	A3	UNUSED						ALL
	B1		W0192	14Y	24		21-26-11	ALL
	B2		W0192	14V	24		21-26-11	ALL
	B3	UNUSED						ALL
	X1		W0192	14Q	18		21-26-11	050-099, 150-155, 162-165, 275-276
	X1		W0192	14Q	24		21-26-11	156-157, 166-199, 277-299
	X2		W0192	14R	18		21-26-11	050-099, 150-155, 162-165, 275-276
	X2		W0192	14R	20		21-26-11	156-157, 166-199, 277-299
D10732		P061-00/ /		PLUG-P61				ALL
	1	UNUSED						ALL
	2		W0062	888	22		29-21-32	ALL
	3		W0062	873	22		33-16-26	ALL
	4		W0062	874	22		33-16-26	ALL
	5		W0062	04E	22		29-21-32	ALL
	6		W0062	876	22		29-21-32	ALL
	7		W0062	877	22		29-21-32	ALL
	8		W0062	878	20		29-21-32	ALL
	9		W0062	879	22		29-21-32	ALL
	10		W0062	880	22		29-21-32	ALL
	11		W0062	881	22		29-21-32	ALL
	12		W0062	04C	22		29-21-32	ALL
	13		W0062	882	20		29-21-32	ALL

HOOKUP LIST

D280T132

91-21-51

Section D10700

Page 5

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D10732		P061-00/ /		PLUG-P61 (continued)				ALL
	14		W0062	53T	22		29-21-32	ALL
	15		W0062	885	22		29-21-32	ALL
	16		W0062	70B	20		29-11-14	ALL
	17		W0062	70C	20		29-11-14	ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D10734 D10734		P019-00/ / P019-00/ /		RELAY SOCKET-P19 RELAY SOCKET-				050-099 150-199, 275-299
	1		W1060	603	20		25-65-12	ALL
	2		W1060	584	22		25-65-12	ALL
	3		W1060	605	22		25-65-12	ALL
	4	UNUSED						ALL
	5		W1060	602	22		25-65-12	ALL
	6		W1060	604	22		25-65-12	ALL
	7		W1060	596	22		25-65-11	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10		W1060	585	22		25-65-11	ALL
	11		W1060	597	20		25-65-11	ALL
	12		W1060	606	22		25-65-12	ALL
	13	UNUSED						ALL
	14		W1060	598	22		25-65-11	ALL
D10736 D10736		P019-00/ / P019-00/ /		RELAY SOCKET-P19 RELAY SOCKET-				050-099 150-199, 275-299
	1		W1060	607	20		25-65-12	ALL
	2		W1060	586	22		25-65-12	ALL
	3		W1060	510	22		25-65-12	ALL
	4	UNUSED						ALL
	5		W1060	605	22		25-65-12	ALL
	6		W1060	601	22		25-65-12	ALL
	7		W1060	598	22		25-65-11	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D10700

Page 6

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D10736		P019-00/ /		RELAY SOCKET-P19 (continued)				050-099
D10736		P019-00/ /		RELAY SOCKET- (continued)				150-199, 275-299
	10		W1060	587	22		25-65-11	ALL
	11		W1060	599	20		25-65-11	ALL
	12		W1060	608	22		25-65-12	ALL
	13	UNUSED						ALL
	14		W1060	511	22		25-65-11	ALL
D10738		P036-00/ /		RELAY SOCKET-				ALL
	A1		W0176	09L	22		21-45-21	050-099, 150-156, 162-166, 275-276
	A1		W0176	09L	20		21-45-21	157, 167-199, 277-299
	A2		W0176	09P	22		21-45-21	050-099, 150-156, 162-166, 275-276
	A2		W0176	09P	20		21-45-21	157, 167-199, 277-299
	A3	UNUSED						ALL
	B1		W0176	09M	22		21-45-21	050-099, 150-156, 162-166, 275-276
	B1		W0176	09M	20		21-45-21	157, 167-199, 277-299
	B2		W0176	09Q	22		21-45-21	050-099, 150-156, 162-166, 275-276
	B2		W0176	09Q	20		21-45-21	157, 167-199, 277-299
	B3	UNUSED						ALL
	X1		W0176	09K	24		21-45-21	ALL
	X2		W0176	09N	24		21-45-21	ALL
D10740		0362/288/L041		PLUG-				ALL
	1		W1216	029	22		21-45-21	050-099, 150-156, 162-166, 275-276
	1		W1216	029	20		21-45-21	157, 167-199, 277-299
	2		W1216	026	22		21-45-21	050-099, 150-156, 162-166, 275-276
	2		W1216	026	20		21-45-21	157, 167-199, 277-299
	3		W1216	031	20		21-45-21	ALL
	4	UNUSED						050-099, 150-156, 162-166, 275-276
	4		W1216	033	20		21-45-21	157, 167-199, 277-299
	5	UNUSED						ALL
D10742		0362/288/R041		PLUG-				050-099, 150-199
	1		W1216	027	22		21-45-21	050-099, 150-156, 162-166
	1		W1216	027	20		21-45-21	157, 167-199
	2		W1216	025	22		21-45-21	050-099, 150-156, 162-166
	2		W1216	025	20		21-45-21	157, 167-199
	3		W1216	030	20		21-45-21	050-099, 150-199
	4	UNUSED						050-099, 150-156, 162-166
	4		W1216	032	20		21-45-21	157, 167-199
	5	UNUSED						050-099, 150-199

HOOKUP LIST

D280T132

91-21-51

Section D10700

Page 7

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D10744		P006-00/ /		PLUG-				ALL
	1		W0048	080	24		24-51-42	ALL
	2		W0048	066	20		24-51-43	ALL
	3		W0048	069	24		24-51-43	ALL
	4		W0048	065	20		24-51-43	ALL
	5		W0048	081	24		24-51-42	ALL
	6		W0048	077	20		24-51-43	ALL
	7		W0048	079	20		24-51-43	ALL
	8		W0048	068	20		24-51-43	ALL
	9		W0048	064	20		24-51-43	ALL
	10		W0048	071	24		24-51-43	ALL
	11	UNUSED						ALL
	12		W0048	067	20		24-51-43	ALL
	13		W0048	063	20		24-51-43	ALL
	14		W0048	074	24		24-51-43	ALL
	15		W0048	075	20		24-51-43	ALL
	16		W0048	078	20		24-51-43	ALL
	17		W0048	076	20		24-51-43	ALL
	18		W0048	070	20		24-51-43	ALL
	19		W0048	072	20		24-51-43	ALL
D10766		P019-00/ /		RELAY SOCKET-				050-099, 280-299
D10766		P019-00/ /		RELAY SOCKET				150-199, 275-278
	A1	UNUSED						050-099
	A1		W1104	525	20		33-21-31	150-199, 275-299
	A2	UNUSED						050-099
	A2		W1104	586	20		33-21-31	150-165, 167-199, 275-299
	A2		W1104	851	20		33-21-31	166
	A3	UNUSED						ALL
	B1		W1104	575	18		33-21-31	050-099
	B1		W1104	575	16		33-21-31	150-199, 275-299
	B2		W1104	627	18		33-21-31	050-099
	B2		W1104	627	16		33-21-31	150-199, 275-299
	B3	UNUSED						ALL
	C1		W1104	717	20		33-21-31	050-099, 150-154, 157-165, 167-199
	C1		W1104	803	20		33-21-31	155-156, 166
	C1		W1104	603	20		33-21-31	275-299
	C2		W1104	587	20		33-21-31	ALL
	C3	UNUSED						ALL
	D1		W1104	604	20		33-21-31	050-099, 150-154, 157-165, 167-199, 275-299

HOOKUP LIST

D280T132

91-21-51

Section D10700

Page 8

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D10766		P019-00/ /		RELAY SOCKET- (continued)				050-099, 280-299
D10766		P019-00/ /		RELAY SOCKET (continued)				150-199, 275-278
	D1		W1104	805	20		33-21-31	155-156, 166
	D2		W1104	605	20		33-21-31	ALL
	D3	UNUSED						ALL
	X1		W1104	576	24		33-21-31	ALL
	X2		W1104	724	24		33-21-31	050-099, 150-199
	X2		W1104	588	24		33-21-31	275-299
D10786		P065-00/ /		RELAY SOCKET-P65				ALL
	A1	UNUSED						ALL
	A2		W2058	010	22		24-25-11	ALL
	A3		W2058	013	22		24-25-11	ALL
	B1		W2058	012	22		24-25-11	ALL
	B2		W2058	009	22		24-25-11	ALL
	B3	UNUSED						ALL
	X1		W2058	011	22		24-25-11	ALL
	X2		W2058	086	20		24-25-11	ALL
D10788		P065-00/ /		RELAY SOCKET-P65				ALL
	A1	UNUSED						ALL
	A2		W2058	010	22		24-25-11	ALL
	A3		W2058	005	22		24-25-11	ALL
	B1		W2058	003	22		24-25-11	ALL
	B2		W2058	009	22		24-25-11	ALL
	B3	UNUSED						ALL
	X1		W2058	004	22		24-25-11	ALL
	X2		W2058	006	20		24-25-11	ALL
D10790		P065-00/ /		RELAY SOCKET-P65				ALL
	A1		W2058	023	22		24-25-12	ALL
	A2		W2058	019	22		24-25-12	ALL
	A3	UNUSED						ALL
	B1		W2058	022	22		24-25-11	ALL
	B2		W2058	002	22		24-25-11	ALL
	B3		W2058	051	22		24-25-11	ALL
	X1		W2058	020	22		24-25-11	ALL
	X2		W2058	014	22		24-25-11	ALL
	Y1		W2058	018	22		24-25-11	ALL
	Y2		W2058	017	22		24-25-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D10700

Page 9

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D10792		P065-00/ /		RELAY SOCKET-P65				ALL
	A1		W2058	088	22		29-11-32	ALL
	A2		W2058	089	20		29-11-32	ALL
	A3	UNUSED						ALL
	B1	UNUSED						ALL
	B2	UNUSED						ALL
	B3	UNUSED						ALL
	X1		W2058	048	22		24-25-11	ALL
	X2		W2058	049	20		24-25-11	ALL
D10794		P019-00/ /		RELAY SOCKET-P19				050-099
D10794		P019-00/ /		RELAY SOCKET-				150-199, 275-299
	A1		W1060	781	22		33-21-21	050-099, 150-199
	A1		W1060	622	22		33-21-21	275-299
	A2		W1060	007	22		33-21-21	ALL
	A3	UNUSED						ALL
	B1		W1060	774	22		33-22-41	050-099, 150-199
	B1		W1060	629	22		33-22-41	275-299
	B2		W1060	700	22		33-22-41	050-099
	B2		W1060	051	22		33-22-41	150-199
	B2		W1060	628	22		33-22-41	275-299
	B3		W1060	043	22		33-22-41	ALL
	C1		W1060	631	22		33-22-41	ALL
	C2		W1060	054	22		33-22-41	ALL
	C3	UNUSED						ALL
	D1		W1060	679	22		33-21-21	050-099, 150-199, 280-299
	D1	UNUSED						275-278
	D2		W1060	680	22		33-21-21	050-099, 150-157, 280-299
	D2		W1060	020	22		33-21-21	162-199
	D2	UNUSED						275-278
	D3	UNUSED						ALL
	X1		W1060	005	22		33-21-21	050-099, 150-199
	X1		W1060	624	22		33-21-21	275-299
	X2		W1060	625	22		33-21-21	ALL
D10796		P025-00/ /		RELAY SOCKET				050-099
D10796		P025-00/ /		RELAY SOCKET-				150-199, 275-299
	A1	UNUSED						050-099, 150-199
	A1		W1064	503	22		33-22-42	275-299
	A2	UNUSED						050-099, 150-199

HOOKUP LIST
D280T132

91-21-51
Section D10700
Page 10
Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D10796		P025-00/ /		RELAY SOCKET (continued)				050-099
D10796		P025-00/ /		RELAY SOCKET- (continued)				150-199, 275-299
	A2		W1064	086	22		33-22-42	275-299
	A3	UNUSED						050-099, 150-199
	A3		W1064	504	22		33-22-42	275-299
	B1	UNUSED						050-099, 150-199
	B1		W1064	505	22		33-22-42	275-299
	B2		W1064	091	22		33-22-42	050-099, 150-199
	B2		W1064	506	22		33-22-42	275-299
	B3		W1064	506	22		33-22-42	050-099, 150-199
	B3		W1064	507	22		33-22-42	275-299
	C1		W1064	505	22		33-22-42	050-099, 150-199
	C1	UNUSED						275-299
	C2		W1064	088	22		33-22-42	050-099, 150-199
	C2	UNUSED						275-299
	C3	UNUSED						ALL
	D1		W1064	502	22		33-21-21	ALL
	D2		W1064	501	22		33-21-21	ALL
	D3	UNUSED						ALL
	X1		W1064	550	22		33-22-42	050-099, 150-199
	X1		W1064	510	22		33-22-42	275-299
	X2		W1064	511	22		33-22-42	ALL
D10798		P019-00/ /		RELAY SOCKET-				ALL
	A1		W1110	087	20		33-51-11	ALL
	A2		W1110	088	20		33-51-11	ALL
	A3		W1110	089	20		33-51-11	ALL
	B1		W1110	090	20		33-51-11	ALL
	B2		W1110	091	20		33-51-11	ALL
	B3		W1110	092	20		33-51-11	ALL
	C1		W1110	081	22		33-21-21	ALL
	C2		W1110	082	20		33-21-21	ALL
	C3	UNUSED						ALL
	D1		W1110	083	22		33-22-42	ALL
	D2		W1110	084	20		33-22-42	ALL
	D3	UNUSED						ALL
	X1		W1110	085	22		33-51-11	ALL
	X2		W1110	086	22		33-51-11	ALL
	DED		W1110	087Z			33-51-11	ALL
	DED		W1110	088Z			33-51-11	ALL
	DED		W1110	089Z			33-51-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D10700

Page 11

Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D10798		P019-00/ /		RELAY SOCKET- (continued)				ALL
	DED		W1110	090Z			33-51-11	ALL
	DED		W1110	091Z			33-51-11	ALL
	DED		W1110	092Z			33-51-11	ALL



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D10832		P065-00/ /		RELAY SOCKET-P65				ALL
	1	UNUSED						ALL
	2		W2058	046	22		24-25-11	ALL
	3		W2058	054	22		24-25-11	ALL
	4		W2058	047	22		24-25-11	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W2058	042	22		24-25-11	ALL
	8	UNUSED						ALL
D10834		1010/152/L010		RCPT				ALL
	1		W1328	002	20		24-25-11	ALL
	2		W1328	001	20		24-25-11	ALL
	3		W1328	003	20		24-25-11	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8		W1328	012	20		24-25-13	ALL
	9		W1328	010	20		24-25-13	ALL
	10	UNUSED						ALL
D10836		P065-00/ /		RELAY SOCKET-P65				ALL
	1		W2058	302R	20		24-25-12	ALL
	2		W2058	302B	20		24-25-12	ALL
	3		W2058	302Y	20		24-25-12	ALL
	4		W2058	201B	20		24-25-12	ALL
	5		W2058	201R	20		24-25-12	ALL
	6		W2058	062	20		24-25-12	ALL
	7		W2058	063	20		24-25-12	ALL
	8		W2058	064	20		24-25-12	ALL
	9		W2058	046	22		24-25-11	ALL
	10		W2058	047	22		24-25-11	ALL
	11		W2058	301Y	20		24-25-12	ALL
	12		W2058	FRA			24-25-12	ALL
	13		W2058	066	20		24-25-12	ALL
	14		W2058	023	22		24-25-12	ALL
	15		W2058	301B	20		24-25-12	ALL
	16		W2058	301R	20		24-25-12	ALL
	17		W2058	065	20		24-25-12	ALL
	18	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D10800

Page 1

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D10836		P065-00/ /		RELAY SOCKET-P65 (continued)				ALL
	19	UNUSED						ALL
	20		W2058	111	20		24-25-12	ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
			W2058	201	20		24-25-12	ALL
			W2058	201Z			24-25-12	ALL
			W2058	FRA			24-25-12	ALL
D10840		0970/150/L010		RCPT				ALL
	1		W1328	302R	20		24-25-12	ALL
	2		W1328	302B	20		24-25-12	ALL
	3		W1328	302Y	20		24-25-12	ALL
	4		W1328	201B	20		24-25-12	ALL
	5		W1328	201R	20		24-25-12	ALL
	6		W1328	005	20		24-25-12	ALL
	7	DL	W1328	201Z			24-25-12	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16		W1328	007	12		24-25-12	ALL
	17	UNUSED						ALL
	18		W1328	006	12		24-25-12	ALL
	19	UNUSED						ALL
	20		W1328	008	12		24-25-12	ALL
	21	UNUSED						ALL
	22		W1328	009	12		24-25-12	ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
D10842		970/150/L10		RCPT-				ALL
	1		W1330	001	12		24-25-12	ALL
	2		W1330	002	12		24-25-12	ALL

HOOKUP LIST
D280T132

91-21-51
Section D10800
Page 2
Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D10842		970/150/L10		RCPT- (continued)				ALL
	3		W1330	003	12		24-25-12	ALL
	4		W1330	004	12		24-25-12	ALL
D10844		0983/151/L008		PLUG-				ALL
	1		W1328	301B	20		24-25-12	ALL
	2		W1328	301R	20		24-25-12	ALL
	3		W1328	301Y	20		24-25-12	ALL
	4		W1328	004	20		24-25-12	ALL
	5	UNUSED						ALL
D10860		P005-00/ /		RELAY SOCKET-				ALL
	A1		W0062	10P	22		33-13-16	ALL
	A2		W0062	10M	22		33-13-16	ALL
	A3	UNUSED						ALL
	B1		W0062	10S	22		33-13-16	ALL
	B2		W0062	10T	22		33-13-16	ALL
	B3	UNUSED						ALL
	X1		W0062	10N	24		33-13-16	ALL
	X2		W0062	10R	20		33-13-16	ALL
D10862		P037-00/ /		PLUG-P37				050-099
	A1		W0198	610R	20		26-23-12	050-099
	A2		W0198	617R	20		26-23-12	050-099
	A3		W0198	616R	20		26-23-12	050-099
	B1		W0198	609R	20		26-23-12	050-099
	B2		W0198	615R	20		26-23-12	050-099
	B3		W0198	614R	20		26-23-12	050-099
	X1		W0198	611R	20		26-23-12	050-099
	X2		W0198	613R	20		26-23-12	050-099
D10864		0659/189/R067		PLUG-PRESS SW.				050-099
D10864		654+59/166/R081		PLUG-PRESS SW.				150-199, 275-299
	1	UNUSED						ALL
	2		W0606	722R	20		26-23-12	050-099, 150-199, 280-299
	2		W0606	722R	20		26-23-11	275-278
	3		W0606	721R	20		26-23-12	050-099, 150-199, 280-299
	3		W0606	721R	20		26-23-11	275-278
	4	UNUSED						ALL
	5	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D10800

Page 3

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D10866		0675/186/R080		PLUG-PRESS SW.				050-099
D10866		654+81/165/R080		PLUG-PRESS SW.				150-199, 275-299
	1	UNUSED						ALL
	2		W0606	724R	20		26-23-12	050-099, 150-199, 280-299
	2		W0606	724R	20		26-23-11	275-278
	3		W0606	723R	20		26-23-12	050-099, 155-199, 280-299
	3		W0606	723R	20		26-23-11	150-154, 275-278
	4	UNUSED						ALL
	5	UNUSED						ALL
D10872		SHELF/E01/02		RLY SKT-				ALL
	1	UNUSED						ALL
	2		W1092	744	24		32-61-14	ALL
	3		W1092	715	24		32-61-14	ALL
	4	UNUSED						ALL
	5		W1092	741	24		32-61-14	ALL
	6	UNUSED						ALL
	7		W1092	745	24		32-61-14	ALL
	8	UNUSED						ALL
	DED		W1092	715Z			32-61-14	ALL
	DED		W1092	741Z			32-61-14	ALL
	DED		W1092	744Z			32-61-14	ALL
	DED		W1092	745Z			32-61-14	ALL
D10874		SHELF/E01/02		RLY SKT-				ALL
	1	UNUSED						ALL
	2		W1092	742	24		32-61-14	ALL
	3		W1092	716	24		32-61-14	ALL
	4	UNUSED						ALL
	5		W1092	740	24		32-61-14	ALL
	6	UNUSED						ALL
	7		W1092	743	24		32-61-14	ALL
	8	UNUSED						ALL
	DED		W1092	716Z			32-61-14	ALL
	DED		W1092	740Z			32-61-14	ALL
	DED		W1092	742Z			32-61-14	ALL
	DED		W1092	743Z			32-61-14	ALL

HOOKUP LIST
D280T132

91-21-51
Section D10800
Page 4
Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D10876		P011/ /		RELAY SOCKET				050-099
D10876		P011/00/		RELAY SOCKET				150-199, 275-299
	A1		W0042	059	24		78-34-21	ALL
	A2		W0042	751	24		78-34-21	ALL
	A3		W0042	752	24		78-34-21	ALL
	B1		W0042	146	24		30-21-11	ALL
	B2		W0042	748	24		30-21-11	ALL
	B3		W0042	747	24		30-21-11	ALL
	C1		W0042	116	24		36-11-21	ALL
	C2		W0042	746	24		36-11-21	ALL
	C3		W0042	745	24		36-11-21	ALL
	D1	UNUSED						ALL
	D2	UNUSED						ALL
	D3	UNUSED						ALL
	X1		W0042	754	24		78-34-21	ALL
	X2		W0042	753	20		78-34-21	ALL
D10878		P011/00/		RELAY SOCKET				ALL
	A1		W0042	112	24		78-36-21	ALL
	A2		W0042	114	24		78-36-21	ALL
	A3		W0042	757	24		78-36-21	ALL
	B1		W0042	022	24		73-21-17	ALL
	B2		W0042	750	24		73-21-17	ALL
	B3		W0042	749	24		73-21-17	ALL
	C1	UNUSED						ALL
	C2	UNUSED						ALL
	C3	UNUSED						ALL
	D1		W0042	029	24		32-09-12	ALL
	D2		W0042	603	24		32-09-12	ALL
	D3		W0042	602	24		32-09-12	ALL
	X1		W0042	755	24		78-34-21	ALL
	X2		W0042	756	20		78-34-21	ALL
D10888		1510/170/L062		PLUG				275-276
	1		W0578	091	20		21-44-21	275-276
	2		W0578	090	20		21-44-21	275-276
	3		W0578	089	24		21-44-21	275-276
	4	UNUSED						275-276
	5	UNUSED						275-276

HOOKUP LIST

D280T132

91-21-51

Section D10800

Page 5

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D10890		P036-00/ /		RELAY SOCKET-				ALL
	A1	UNUSED						ALL
	A2		W0176	502	24		21-58-16	ALL
	A3		W0176	562	24		21-58-16	ALL
	B1	UNUSED						050-099
	B1		W0176	19E	24		21-58-16	150-199, 275-299
	B2	UNUSED						050-099
	B2		W0176	19F	20		21-58-16	150-199, 275-299
	B3	UNUSED						ALL
	X1		W0176	501	24		21-58-16	ALL
	X2		W0176	520	24		21-58-16	ALL
D10892		P037-00/ /		RELAY SOCKET-				ALL
	A1	UNUSED						ALL
	A2		W0192	148	24		21-58-16	ALL
	A3		W0192	588	24		21-58-16	ALL
	B1	UNUSED						050-099
	B1		W0192	19E	24		21-58-16	150-199, 275-299
	B2	UNUSED						050-099
	B2		W0192	19W	20		21-58-16	150-199, 275-299
	B3	UNUSED						ALL
	X1		W0192	501	24		21-58-16	ALL
	X2		W0192	63Q	24		21-58-16	050-099, 153-199, 277-299
	X2		W0192	516	24		21-58-16	150-152, 275-276
D10898		P019-00/ /		RELAY SOCKET-P19				ALL
	A1		W1060	618	20		33-26-21	ALL
	A2		W1060	617	20		33-26-21	050-099, 150-199, 275-278
	A2		W1060	617	22		33-26-21	280-299
	A3	UNUSED						ALL
	B1	UNUSED						ALL
	B2	UNUSED						ALL
	B3	UNUSED						ALL
	X1		W1060	620	20		33-26-21	050-099, 150-199
	X1		W1060	620	22		33-26-21	275-299
	X2		W1060	619	20		33-26-21	ALL

HOOKUP LIST
D280T132

91-21-51
Section D10800
Page 6 End
Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D10908		0367/278/L058		PLUG-				275-299
	1		W0814	611	20		33-26-11	275-299
	2		W0814	612	16		38-13-11	275-299
	3	UNUSED						275-278
	3		W0814	778	20		35-21-12	280-299
	4	UNUSED						275-278
	4		W0814	779	20		35-21-12	280-299
	5		W0814	211B	22		23-31-14	275-299
	6		W0814	616	18		33-26-11	275-299
	7		W0814	617	22		33-25-11	275-299
	8		W0814	618	16		38-13-11	275-299
	9		W0814	619	22		33-25-11	275-299
	10		W0814	620	20		33-26-21	275-299
	11	UNUSED						275-299
	12		W0814	622	20		33-24-11	275-299
	13		W0814	623	20		33-26-21	275-299
	14	UNUSED						275-278
	14		W0814	18A	20		33-26-21	280-299
	15		W0814	625	22		33-26-11	275-299
	16		W0814	211R	22		23-31-14	275-299
	17		W0814	627	20		33-26-11	275-299
	18		W0814	628	20		38-32-13	275-276
	18		W0814	628	20		38-32-16	277-299
	19		W0814	629	20		38-32-13	275-276
	19		W0814	629	20		38-32-16	277-299
	20	DK	W0814	630	18		38-32-13	275-276
	20	DK	W0814	630	18		38-32-16	277-299
	21		W0814	631	22		38-32-13	275-276
	21		W0814	631	22		38-32-16	277-299
	22	UNUSED						275-299
	23	UNUSED						275-278
	23		W0814	775	20		33-22-31	280-299
	24	UNUSED						275-278
	24		W0814	773	20		33-22-31	280-299
	25		W0814	635	22		33-25-11	275-299
	26		W0814	636	20		33-25-11	275-299
	27	UNUSED						275-299
	28	UNUSED						275-299
	29		W0814	704	20		25-42-11	275-299
	30		W0814	762	20		33-24-11	275-299
	31	UNUSED						275-278

HOOKUP LIST

D280T132

91-21-51

Section D10900

Page 1

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D10908		0367/278/L058		PLUG- (continued)				275-299
	31		W0814	774	20		33-22-31	280-299
	32		W0814	763	20		33-24-11	275-299
D10922		0440/280/L056		PLUG-				162-165, 167-199
D10922		0440/295/L056		PLUG-				166
	1	UNUSED						162-199
	2	UNUSED						162-199
	3	UNUSED						162-199
	4	UNUSED						162-199
	5		W0812	13A	20		33-21-32	162-199
	6	UNUSED						162-199
	7		W0812	22A	20		33-21-32	162-199
	8		W0812	21A	20		33-21-32	162-199
	9		W0812	16A	22		33-21-32	162-199
	10		W0812	17A	22		33-21-32	162-199
	11		W0812	14A	22		33-21-32	162-199
	12		W0812	15A	22		33-21-32	162-199
	DED		W0812	13AZ			33-21-32	166
	DED		W0812	22AZ			33-21-32	166
D10924		0264/283/R055		PLUG-F1 GALLEY				275-278
D10924		0260/280/R055		PLUG-F1 GALLEY				280-299
	1		W0222	136	20		25-31-11	275-299
	2	UNUSED						275-299
	3	UNUSED						275-278
	3		W0222	138	20		25-31-11	280-299
	4	UNUSED						275-299
	5	UNUSED						275-299
D10926		0260/290/R60		PLUG-F1				050-099
D10926		0260/279/R060		PLUG-F1				150-199
D10926		0362/279/R054		PLUG-F3 GALLEY				275-278
D10926		0362/280/R054		PLUG-F3 GALLEY				280-299
	1		W0222	604	20		33-24-14	050-099, 150-199
	1		W0222	136	20		25-31-11	275-299
	2		W0222	605	20		33-24-14	050-099, 150-199
	2	UNUSED						275-299
	3		W0222	603	20		33-24-14	050-099, 150-199
	3		W0222	139	20		25-31-11	275-278
	3		W0222	138	20		25-31-11	280-299

HOOKUP LIST

D280T132

91-21-51

Section D10900

Page 2

Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D10926		0260/290/R60		PLUG-F1 (continued)				050-099
D10926		0260/279/R060		PLUG-F1 (continued)				150-199
D10926		0362/279/R054		PLUG-F3 GALLEY (continued)				275-278
D10926		0362/280/R054		PLUG-F3 GALLEY (continued)				280-299
	4	UNUSED						ALL
	5	UNUSED						050-099, 162-199, 275-299
	5	DK	W0222	167	18		33-51-12	150-157
	6	UNUSED						050-099, 162-199
	6	DK	W0222	168	18		33-51-12	150-157
	7	UNUSED						050-099, 150-199
	8	UNUSED						050-099, 150-199
	9		W0222	139	20		25-31-11	050-099, 150-199
	10		W0222	136	20		25-31-11	050-099, 150-199
	11	DK	W0222	177	18		30-71-25	050-099, 150-199
	12	DK	W0222	180	18		30-71-25	050-099, 150-199
D10930		0260/290/R060		RCPT-F1				050-099, 150-199
D10930		261/281/R55		RCPT-F1				277-278
D10930		260/280/R055		RCPT-F1 GALLEY				280-299
	1		W0222	093	20		25-31-11	277-299
	2		W0222	094	20		25-31-11	277-299
	3		W0222	095	20		25-31-11	277-299
	4	UNUSED						277-299
	5	UNUSED						277-299
	6	UNUSED						277-299
	7	UNUSED						277-299
	8	UNUSED						277-299
	9	UNUSED						277-299
	10	UNUSED						277-299
	11	UNUSED						277-299
	12	UNUSED						277-299
	A		W0222	093	10		25-31-11	050-099, 150-199
	B		W0222	094	10		25-31-11	050-099, 150-199
	C		W0222	095	10		25-31-11	050-099, 150-199
	D		W0222	096	10		25-31-11	050-099, 150-199
D10932		0355/283/R055		PLUG-F4				050-099
D10932		0360/279/R62		PLUG-F4				150-199
D10932		360/243/0		PLUG-F4 GALLEY				277-299
	1		W0222	093	20		25-31-11	277-299
	2		W0222	094	20		25-31-11	277-299

HOOKUP LIST

D280T132

91-21-51

Section D10900

Page 3

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D10932		0355/283/R055		PLUG-F4 (continued)				050-099
D10932		0360/279/R62		PLUG-F4 (continued)				150-199
D10932		360/243/0		PLUG-F4 GALLEY (continued)				277-299
	3		W0222	095	20		25-31-11	277-299
	4		W0222	096	20		25-31-11	277-299
	5	UNUSED						277-278
	5		W0222	628	20		33-24-13	280-299
	6	UNUSED						277-278
	6		W0222	629	20		33-24-13	280-299
	7	UNUSED						277-278
	7		W0222	627	20		33-24-13	280-299
	8	UNUSED						277-299
	9	UNUSED						277-299
	10	UNUSED						277-299
	11	UNUSED						277-299
	12	UNUSED						277-299
	A		W0222	093	10		25-31-11	050-099, 150-199
	B		W0222	094	10		25-31-11	050-099, 150-199
	C		W0222	095	10		25-31-11	050-099, 150-199
	D	UNUSED						050-099, 150-199
D10940		435/275/L 60		PLUG				050-099
D10940		435/275/L060		PLUG				150-199
	1		W1224	154	20		33-22-32	050-099, 150-199
	2		W1224	155	20		33-22-32	050-099, 150-199
	3	UNUSED						050-099, 150-199
	4	UNUSED						050-099, 150-199
	5	UNUSED						050-099, 150-199
D10950		P036-00/ /		RELAY SOCKET-				ALL
	A1	UNUSED						ALL
	A2	UNUSED						ALL
	A3	UNUSED						ALL
	B1	UNUSED						ALL
	B2	UNUSED						050-099, 150-156, 162-166, 275-276
	B2		W0176	51D	24		SPARE	157, 167-199, 277-299
	B3	UNUSED						ALL
	C1	UNUSED						ALL
	C2	UNUSED						ALL
	C3	UNUSED						ALL
	D1		W0176	58G	20		78-34-21	ALL

HOOKUP LIST
D280T132

91-21-51
Section D10900
Page 4
Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D10950		P036-00/ /		RELAY SOCKET- (continued)				ALL
	D2		W0176	58K	20		78-34-21	ALL
	D3		W0176	22X	20		78-34-21	ALL
	X1		W0176	135	24		32-09-11	ALL
	X2		W0176	134	24		32-09-11	ALL
	DED		W0176	134Z			32-09-11	ALL
	DED		W0176	135Z			32-09-11	ALL
	DED		W0176	58GZ			78-34-21	ALL
	DED		W0176	58KZ			78-34-21	ALL
D10958		P011-00- / /		RELAY SOCKET				ALL
	A1		W0042	021	18		78-34-21	ALL
	A2		W0042	772	18		78-34-21	ALL
	A3		W0042	110	18		78-34-21	ALL
	B1		W0042	522	22		78-36-21	ALL
	B2		W0042	523	22		78-36-21	ALL
	B3		W0042	521	22		78-36-21	ALL
	C1	UNUSED						ALL
	C2		W0042	771	18		78-34-21	050-099, 150-156, 162-199, 277-299
	C2		W0042	771	18		SPARE	157, 275-276
	C3	UNUSED						ALL
	D1	UNUSED						ALL
	D2	UNUSED						ALL
	D3	UNUSED						ALL
	X1		W0042	777	22		78-34-21	ALL
	X2		W0042	778	20		78-34-21	ALL
D10964		NL184/072/		PLUG-ENG				ALL
	1		W3538	301B	18		24-21-11	ALL
	2		W3538	301R	18		24-21-11	ALL
	3		W3538	301Y	18		24-21-11	ALL
	4		W3538	203B	18		24-11-11	ALL
	5		W3538	203R	18		24-11-11	ALL
	6		W3538	204B	18		24-11-11	ALL
	7		W3538	204R	18		24-11-11	ALL
	8	UNUSED						ALL
	9		W3538	003	18		24-11-11	ALL
	10		W3538	005	18		24-11-11	ALL
	11		W3538	004	18		24-11-11	ALL
	12		W3538	006	18		24-11-11	ALL
	13	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D10900

Page 5

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D10964		NL184/072/		PLUG-ENG (continued)				ALL
	14	UNUSED						ALL
D10966		NL189/082/		PLUG-ENG				ALL
	1		W3538	201B	18		24-11-11	ALL
	2		W3538	201R	18		24-11-11	ALL
	3		W3538	401G	18		24-21-11	ALL
	4		W3538	001	18		24-11-11	ALL
	5	UNUSED						ALL
	6		W3538	002	18		24-11-11	ALL
	7		W3538	015	18		24-11-11	ALL
	8		W3538	016	18		24-11-11	ALL
	9		W3538	202B	18		24-21-11	ALL
	10		W3538	202R	18		24-21-11	ALL
	11	UNUSED						ALL
	12		W3538	401B	18		24-21-11	ALL
	13		W3538	401R	18		24-21-11	ALL
	14		W3538	401Y	18		24-21-11	ALL
	DED		W3538	201Z			24-11-11	ALL
	DED		W3538	202Z			24-21-11	ALL
D10970		NL192/072/		PLUG-				ALL
	1		W3506	008	18		80-11-11	ALL
	2		W3506	009	18		80-11-11	ALL
	3		W3506	006	18		80-11-11	ALL
	4		W3506	010	18		80-11-11	ALL
	5		W3506	011	18		80-11-11	ALL
	6		W3506	007	18		80-11-11	ALL
	7		W3506	012	18		80-11-11	ALL
D10974		NL153/082/		PLUG-ENGINE				ALL
	1	UNUSED						ALL
	2		W3510	024	18		79-35-11	ALL
	3		W3510	026	18		79-35-11	ALL
	4		W3510	025	18		79-35-11	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
D10976		NR154/090/		PLUG-				ALL
	A		W3508	022	18		74-31-21	ALL

HOOKUP LIST
D280T132

91-21-51
Section D10900
Page 6
Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D10976		NR154/090/		PLUG- (continued)				ALL
	B		W3508	021	18		74-31-21	ALL
D10978		NL156/088/		PLUG-ENGINE				ALL
	A		W3510	023	18		74-31-11	ALL
	B		W3510	022	18		74-31-11	ALL
D10980		NR178/099/		PLUG-				ALL
	1		W3508	018	18		29-11-11	ALL
	2		W3508	019	18		29-11-11	ALL
	3		W3508	017	18		29-11-11	ALL
D10982		NR156/114/		PLUG-				ALL
	1	DK	W3508	033	18		79-32-11	ALL
	2	DK	W3508	031	18		79-32-11	ALL
	3	DK	W3508	032	18		79-32-11	ALL
	4	DK	W3508	030	18		79-32-11	ALL
	5	UNUSED						ALL
D10984		NL158/097/		PLUG-ENGINE				ALL
	1		W3510	001	18		36-11-61	ALL
	2		W3510	009	18		36-11-61	ALL
	3		W3510	002	18		36-11-61	ALL
	4		W3510	010	18		36-11-61	ALL
	5		W3510	006	18		36-11-61	ALL
	6		W3510	011	18		36-11-61	ALL
	7		W3510	003	18		36-11-61	ALL
	8		W3510	004	18		36-11-61	ALL
	9		W3510	005	18		36-11-61	ALL
	10		W3510	007	18		36-11-61	ALL
	11		W3510	012	18		36-11-61	ALL
	12		W3510	008	18		36-11-61	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
D10988		NL164/072/		PLUG-				ALL
	1		W3510	027	18		79-33-11	ALL
	2		W3510	028	18		79-33-11	ALL
	3	UNUSED						ALL
	4		W3510	029	18		79-33-11	ALL
	5	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D10900

Page 7

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D10988		NL164/072/		PLUG- (continued)				ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
D10992		NL169/095/		PLUG-ENG				ALL
	1		W3510	019	18		79-31-11	ALL
	2		W3510	020	18		79-31-11	ALL
	3		W3510	021	18		79-31-11	ALL
	4		W3510	041	18		79-31-11	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
D10994		NR105/132/		PLUG-ENG				ALL
	1		W3504	01TR	20		77-31-11	050-099, 155-199, 277-299
	1		W3504	218R	20		77-31-11	150-154, 275-276
	2		W3504	01TW	20		77-31-11	050-099, 155-199, 277-299
	2		W3504	218W	20		77-31-11	150-154, 275-276
	= CC	K	W3504	01TO			77-31-11	050-099, 155-199, 277-299
	DED		W3504	01TI			77-31-11	050-099, 155-199, 277-299
	DED		W3504	218Z			77-31-11	150-154, 275-276
D10996		NR151/072/		PLUG-				ALL
	A		W3508	005	18		73-34-11	ALL
	B		W3508	004	18		73-34-11	ALL
	C		W3508	003	18		73-34-11	ALL
D10998		NL160/050/		PLUG				ALL
	1	DK	W3510	030	18		73-33-11	ALL
	2	DK	W3510	031	18		73-33-11	ALL
	3	DK	W3510	032	18		73-33-11	ALL
	4	DK	W3510	033	18		73-33-11	ALL
	5	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D10900
Page 8 End
Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D11000		NL156/018/		PLUG-ENGINE				ALL
	1		W3510	302R	20		73-31-11	ALL
	2		W3510	302B	20		73-31-11	ALL
	3		W3510	302Y	20		73-31-11	ALL
	4		W3510	034	20		73-31-11	ALL
	5	UNUSED						ALL
	DED		W3510	034Z			73-31-11	ALL
	DED		W3510	302Z			73-31-11	ALL
D11046		NL154/081/		PLUG-ENG				ALL
	A		W3538	011	20		24-11-11	ALL
	B		W3538	012	20		24-11-11	ALL
	C	UNUSED						ALL
	D	UNUSED						ALL
	E		W3538	010	20		24-11-11	ALL
	F		W3538	009	20		24-11-11	ALL
	G		W3538	008	20		24-11-11	ALL
	H		W3538	017	20		24-11-11	ALL
	J		W3538	014	20		24-11-11	ALL
	K	UNUSED						ALL
	DED		W3538	008Z			24-11-11	ALL
	DED		W3538	009Z			24-11-11	ALL
	DED		W3538	010Z			24-11-11	ALL
	DED		W3538	011Z			24-11-11	ALL
	DED		W3538	012Z			24-11-11	ALL
	DED		W3538	014Z			24-11-11	ALL
	DED		W3538	017Z			24-11-11	ALL
D11078		P036-00/ /		RELAY SOCKET-				150-199, 275-299
	A1	UNUSED						150-199, 275-299
	A2	UNUSED						150-199, 275-299
	A3	UNUSED						150-199, 275-299
	B1		W0184	183	18		32-71-11	150-199, 275-299
	B2		W0184	184	18		32-71-11	150-199, 275-299
	B3		W0184	185	18		32-71-11	150-199, 275-299
	X1		W0184	186	24		32-71-11	150-199, 275-299
	X2		W0184	187	24		32-71-11	150-199, 275-299
D11080		1699/190/L050		PLUG- VALVE TAIL SKID				150-199, 275-299
	1		W0512	007	18		32-71-11	150-199, 275-299
	2		W0512	008	18		32-71-11	150-199, 275-299

HOOKUP LIST

D280T132

91-21-51

Section D11000

Page 1

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D11080		1699/190/L050		PLUG- VALVE TAIL SKID (continued)				150-199, 275-299
	3		W0512	006	18		32-71-11	150-199, 275-299
	4	UNUSED						150-199, 275-299
	5	UNUSED						150-199, 275-299
	6	UNUSED						150-199, 275-299
	7	UNUSED						150-199, 275-299
D11082		P025-00/ /		RLY SOCKET-				050-099
D11082		P025-00/ /		RELAY SOCKET-				150-199, 275-299
	A1		W1108	630	20		33-21-12	050-099, 150-199
	A1		W1108	004	20		33-21-12	275-299
	A2		W1108	600	20		33-21-12	050-099, 150-199
	A2		W1108	009	20		33-21-12	275-299
	A3	UNUSED						ALL
	B1		W1108	137	20		33-21-12	ALL
	B2		W1108	138	20		33-21-12	ALL
	B3	UNUSED						ALL
	X1		W1108	140	24		33-21-12	ALL
	X2		W1108	139	24		33-21-12	ALL
D11084		P025-00/ /		RLY SOCKET-				050-099
D11084		P025-00/ /		RELAY SOCKET-				150-199, 275-299
	A1		W1108	631	20		33-21-12	050-099, 150-199
	A1		W1108	029	20		33-21-12	275-299
	A2		W1108	627	20		33-21-12	050-099, 150-199
	A2		W1108	021	20		33-21-12	275-299
	A3	UNUSED						ALL
	B1		W1108	090	20		33-21-12	ALL
	B2		W1108	089	20		33-21-12	ALL
	B3	UNUSED						ALL
	X1		W1108	093	24		33-21-12	ALL
	X2		W1108	083	24		33-21-12	ALL
D11092		0654+77/122/L029		RCPT-				150-199, 275-299
	1		W0704	559	20		25-53-14	150-199, 275-299
	2		W0704	558	20		25-53-14	150-199, 275-299
	3		W0704	596	20		25-53-14	150-199, 275-299
	4		W0704	346B	20		25-53-12	150-199, 275-299
	5	DK	W0704	570	18		25-53-12	150-199, 275-299
	6		W0704	594	20		25-53-14	150-199, 275-299
	7		W0704	346R	20		25-53-12	150-199, 275-299

HOOKUP LIST

D280T132

91-21-51

Section D11000

Page 2

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D11092		0654+77/122/L029		RCPT- (continued)				150-199, 275-299
	8		W0704	573	20		25-53-12	150-199, 275-299
	9		W0704	574	20		25-53-12	150-199, 275-299
	10		W0704	346Y	20		25-53-12	150-199, 275-299
	11	UNUSED						150-199, 275-299
	12	UNUSED						150-199, 275-299
D11094		654+77/122/R029		RCPT-				150-199, 275-299
	1		W0704	161	20		25-53-14	150-199, 275-299
	2		W0704	162	20		25-53-14	150-199, 275-299
	3		W0704	563	20		25-53-14	150-199, 275-299
	4		W0704	344B	20		25-53-12	150-199, 275-299
	5	DK	W0704	580	18		25-53-12	150-199, 275-299
	6		W0704	560	20		25-53-14	150-199, 275-299
	7		W0704	344R	20		25-53-12	150-199, 275-299
	8		W0704	587	20		25-53-12	150-199, 275-299
	9		W0704	588	20		25-53-12	150-199, 275-299
	10		W0704	344Y	20		25-53-12	150-199, 275-299
	11	UNUSED						150-199, 275-299
	12	UNUSED						150-199, 275-299
D11096		0530/122/L029		RCPT-				150-199, 275-299
	1		W0704	602	20		25-53-14	150-199, 275-299
	2		W0704	604	20		25-53-14	150-199, 275-299
	3		W0704	603	20		25-53-14	150-199, 275-299
	4		W0704	342B	20		25-53-12	150-199, 275-299
	5	DK	W0704	055	18		25-53-12	150-199, 275-299
	6		W0704	601	20		25-53-14	150-199, 275-299
	7		W0704	342R	20		25-53-12	150-199, 275-299
	8		W0704	058	20		25-53-12	150-199, 275-299
	9		W0704	059	20		25-53-12	150-199, 275-299
	10		W0704	342Y	20		25-53-12	150-199, 275-299
	11	UNUSED						150-199, 275-299
	12	UNUSED						150-199, 275-299
D11098		654+33/122/R029		RCPT-				150-199, 275-299
	1		W0704	598	20		25-53-14	150-199, 275-299
	2		W0704	599	20		25-53-14	150-199, 275-299
	3		W0704	600	20		25-53-14	150-199, 275-299
	4		W0704	327B	20		25-53-12	150-199, 275-299
	5	DK	W0704	175	18		25-53-12	150-199, 275-299

HOOKUP LIST

D280T132

91-21-51

Section D11000

Page 3

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D11098		654+33/122/R029		RCPT- (continued)				150-199, 275-299
	6		W0704	597	20		25-53-14	150-199, 275-299
	7		W0704	327R	20		25-53-12	150-199, 275-299
	8		W0704	178	20		25-53-12	150-199, 275-299
	9		W0704	179	20		25-53-12	150-199, 275-299
	10		W0704	327Y	20		25-53-12	150-199, 275-299
	11	UNUSED						150-199, 275-299
	12	UNUSED						150-199, 275-299

HOOKUP LIST

D280T132

91-21-51

Section D11000

Page 4 End

Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D11100		1322/122/L029		RCPT-				150-199, 275-299
	1		W0710	071	20		25-53-24	150-199, 275-299
	2		W0710	072	20		25-53-24	150-199, 275-299
	3		W0710	073	20		25-53-24	150-199, 275-299
	4		W0710	327B	20		25-53-22	150-199, 275-299
	5	DK	W0710	195	18		25-53-22	150-199, 275-299
	6		W0710	076	20		25-53-24	150-199, 275-299
	7		W0710	327R	20		25-53-22	150-199, 275-299
	8		W0710	198	20		25-53-22	150-199, 275-299
	9		W0710	199	20		25-53-22	150-199, 275-299
	10		W0710	327Y	20		25-53-22	150-199, 275-299
	11	UNUSED						150-199, 275-299
	12	UNUSED						150-199, 275-299
D11102		1322/122/R029		RCPT-				150-199, 275-299
	1		W0710	171	20		25-53-24	150-199, 275-299
	2		W0710	172	20		25-53-24	150-199, 275-299
	3		W0710	173	20		25-53-24	150-199, 275-299
	4		W0710	308B	20		25-53-22	150-199, 275-299
	5	DK	W0710	035	18		25-53-22	150-199, 275-299
	6		W0710	176	20		25-53-24	150-199, 275-299
	7		W0710	308R	20		25-53-22	150-199, 275-299
	8		W0710	038	20		25-53-22	150-199, 275-299
	9		W0710	039	20		25-53-22	150-199, 275-299
	10		W0710	308Y	20		25-53-22	150-199, 275-299
	11	UNUSED						150-199, 275-299
	12	UNUSED						150-199, 275-299
D11104		1308/122/R008		RCPT-				150-199, 275-299
	1		W0710	661	20		25-53-24	150-199, 275-299
	2		W0710	662	20		25-53-24	150-199, 275-299
	3		W0710	663	20		25-53-24	150-199, 275-299
	4		W0710	314B	20		25-53-22	150-199, 275-299
	5	DK	W0710	175	18		25-53-22	150-199, 275-299
	6		W0710	666	20		25-53-24	150-199, 275-299
	7		W0710	314R	20		25-53-22	150-199, 275-299
	8		W0710	178	20		25-53-22	150-199, 275-299
	9		W0710	179	20		25-53-22	150-199, 275-299
	10		W0710	314Y	20		25-53-22	150-199, 275-299
	11	UNUSED						150-199, 275-299
	12	UNUSED						150-199, 275-299

HOOKUP LIST

D280T132

91-21-51

Section D11100

Page 1

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D11106		1350/122/L029		RCPT				150-199, 275-299
	1		W0710	081	20		25-53-24	150-199, 275-299
	2		W0710	082	20		25-53-24	150-199, 275-299
	3		W0710	083	20		25-53-24	150-199, 275-299
	4		W0710	320B	20		25-53-22	150-199, 275-299
	5	DK	W0710	114	18		25-53-22	150-199, 275-299
	6		W0710	086	20		25-53-24	150-199, 275-299
	7		W0710	320R	20		25-53-22	150-199, 275-299
	8		W0710	120	20		25-53-22	150-199, 275-299
	9		W0710	124	20		25-53-22	150-199, 275-299
	10		W0710	320Y	20		25-53-22	150-199, 275-299
	11	UNUSED						150-199, 275-299
	12	UNUSED						150-199, 275-299
D11108		1350/122/R029		RCPT-				150-199, 275-299
	1		W0710	181	20		25-53-24	150-199, 275-299
	2		W0710	182	20		25-53-24	150-199, 275-299
	3		W0710	183	20		25-53-24	150-199, 275-299
	4		W0710	313B	20		25-53-22	150-199, 275-299
	5	DK	W0710	105	18		25-53-22	150-199, 275-299
	6		W0710	186	20		25-53-24	150-199, 275-299
	7		W0710	313R	20		25-53-22	150-199, 275-299
	8		W0710	106	20		25-53-22	150-199, 275-299
	9		W0710	107	20		25-53-22	150-199, 275-299
	10		W0710	313Y	20		25-53-22	150-199, 275-299
	11	UNUSED						150-199, 275-299
	12	UNUSED						150-199, 275-299
D11110		1384/122/L029		RCPT-				150-199, 275-299
	1		W0710	091	20		25-53-24	150-199, 275-299
	2		W0710	092	20		25-53-24	150-199, 275-299
	3		W0710	093	20		25-53-24	150-199, 275-299
	4		W0710	328B	20		25-53-22	150-199, 275-299
	5	DK	W0710	185	18		25-53-22	150-199, 275-299
	6		W0710	096	20		25-53-24	150-199, 275-299
	7		W0710	328R	20		25-53-22	150-199, 275-299
	8		W0710	188	20		25-53-22	150-199, 275-299
	9		W0710	189	20		25-53-22	150-199, 275-299
	10		W0710	328Y	20		25-53-22	150-199, 275-299
	11	UNUSED						150-199, 275-299
	12	UNUSED						150-199, 275-299

HOOKUP LIST
D280T132

91-21-51
Section D11100
Page 2
Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D11112		1384/122/R029		RCPT-				150-199, 275-299
	1		W0710	191	20		25-53-24	150-199, 275-299
	2		W0710	192	20		25-53-24	150-199, 275-299
	3		W0710	193	20		25-53-24	150-199, 275-299
	4		W0710	318B	20		25-53-22	150-199, 275-299
	5	DK	W0710	085	18		25-53-22	150-199, 275-299
	6		W0710	196	20		25-53-24	150-199, 275-299
	7		W0710	318R	20		25-53-22	150-199, 275-299
	8		W0710	088	20		25-53-22	150-199, 275-299
	9		W0710	089	20		25-53-22	150-199, 275-299
	10		W0710	318Y	20		25-53-22	150-199, 275-299
	11	UNUSED						150-199, 275-299
	12	UNUSED						150-199, 275-299
D11114		NR119/132/		PLUG-ENG				ALL
	A		W3502	301R	20		73-21-13	ALL
	B		W3502	301Y	20		73-21-13	ALL
	C		W3502	203R	20		73-21-13	ALL
	D		W3502	401B	20		73-21-14	ALL
	E	UNUSED						ALL
	F		W3502	040	20		73-21-11	ALL
	G		W3502	401G	20		73-21-14	ALL
	H		W3502	213R	20		73-21-17	ALL
	J		W3502	114	20		73-21-19	ALL
	K	UNUSED						ALL
	L	UNUSED						ALL
	M	UNUSED						ALL
	N	UNUSED						ALL
	P		W3502	204B	20		73-21-14	ALL
	R		W3502	204R	20		73-21-14	ALL
	S		W3502	225B	20		73-21-11	ALL
	T		W3502	200R	20		73-21-14	ALL
	U		W3502	212R	20		73-21-14	ALL
	V		W3502	205R	20		73-21-14	ALL
	W	UNUSED						ALL
	X		W3502	301B	20		73-21-13	ALL
	Y		W3502	203B	20		73-21-13	ALL
	Z	UNUSED						ALL
	= CC	G3	W3502	033Z			73-21-14	ALL
	= CC	G3	W3502	040Z			73-21-11	ALL
	= CC	G3	W3502	101Z			73-21-14	ALL

HOOKUP LIST

D280T132

91-21-51

Section D11100

Page 3

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D11114		NR119/132/		PLUG-ENG (continued)				ALL
	= CC	G3	W3502	114Z			73-21-19	ALL
	= CC	G3	W3502	200Z			73-21-14	ALL
	= CC	G3	W3502	203Z			73-21-13	ALL
	= CC	G3	W3502	204Z			73-21-14	ALL
	= CC	G3	W3502	205Z			73-21-14	ALL
	= CC	G3	W3502	212Z			73-21-14	ALL
	= CC	G3	W3502	213Z			73-21-17	ALL
	= CC	G3	W3502	222Z			73-21-12	ALL
	= CC	G3	W3502	225Z			73-21-11	ALL
	= CC	G3	W3502	301Z			73-21-13	ALL
	= CC	G3	W3502	401Z			73-21-14	ALL
	A-	UNUSED						ALL
	B-	UNUSED						ALL
	C-		W3502	222B	20		73-21-17	ALL
	D-	UNUSED						ALL
	E-	UNUSED						ALL
	F-	UNUSED						ALL
	G-		W3502	401Y	20		73-21-14	ALL
	H-		W3502	200B	20		73-21-14	ALL
	I-		W3502	212B	20		73-21-14	ALL
	J-		W3502	205B	20		73-21-14	ALL
	K-		W3502	222R	20		73-21-12	ALL
	M-		W3502	033	20		73-21-14	ALL
	N-	UNUSED						ALL
	P-		W3502	225R	20		73-21-11	ALL
	Q-		W3502	101	20		73-21-14	ALL
	R-		W3502	401R	20		73-21-14	ALL
	S-		W3502	213B	20		73-21-17	ALL
	T-	UNUSED						ALL
D11116		NR156/112/		PLUG(ENG)				ALL
	1		W3508	007	18		36-11-61	ALL
	2		W3508	008	18		36-11-61	ALL
	3		W3508	009	18		36-11-61	ALL
	4		W3508	006	18		36-11-61	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D11100
Page 4
Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D11118		0654+114/280/L005		RCPT-				275-299
	1		W2066	002	20		35-21-14	275
	1		W2066	101	20		35-21-14	276-299
	2		W2066	003	20		35-21-14	275
	2		W2066	102	20		35-21-14	276-299
D11120		666/280/L005		RCPT-				275-299
	1		W2066	005	20		35-21-14	275
	1		W2066	111	20		35-21-14	276-299
	2		W2066	006	20		35-21-14	275
	2		W2066	112	20		35-21-14	276-299
D11122		0697/280/L005		RCPT-				150-199
D11122		694/280/L005		RCPT-				275-299
	1		W1282	020	20		35-21-14	150-199
	1		W2066	008	20		35-21-14	275
	1		W2066	121	20		35-21-14	276-299
	2		W1282	021	20		35-21-14	150-199
	2		W2066	009	20		35-21-14	275
	2		W2066	122	20		35-21-14	276-299
D11124		0716/280/L005		RCPT-				150-199
D11124		716/280/L005		RCPT-				275-299
	1		W1282	067	20		35-21-14	150-199
	1		W2066	011	20		35-21-14	275
	1		W2066	131	20		35-21-14	276-299
	2		W1282	068	20		35-21-14	150-199
	2		W2066	012	20		35-21-14	275
	2		W2066	132	20		35-21-14	276-299
D11126		0748/280/L005		RCPT-				150-199
D11126		744/280/L005		RCPT-				275-299
	1		W1282	026	20		35-21-14	150-199
	1		W2066	014	20		35-21-14	275
	1		W2066	141	20		35-21-14	276-299
	2		W1282	027	20		35-21-14	150-199
	2		W2066	015	20		35-21-14	275
	2		W2066	142	20		35-21-14	276-299

HOOKUP LIST

D280T132

91-21-51

Section D11100

Page 5

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D11128		1197+092/280/L005		RCPT-				150-199, 275-299
	1		W2068	002	20		35-21-14	150-199, 275
	1		W2068	101	20		35-21-14	276-299
	2		W2068	003	20		35-21-14	150-199, 275
	2		W2068	102	20		35-21-14	276-299
D11130		1197+116/280/L005		RCPT-				150-199, 275-299
	1		W2068	005	20		35-21-14	150-199, 275
	1		W2068	111	20		35-21-14	276-299
	2		W2068	006	20		35-21-14	150-199, 275
	2		W2068	112	20		35-21-14	276-299
D11132		1212/280/L005		RCPT-				150-199, 275-299
	1		W2068	008	20		35-21-14	150-199, 275
	1		W2068	121	20		35-21-14	276-299
	2		W2068	009	20		35-21-14	150-199, 275
	2		W2068	122	20		35-21-14	276-299
D11134		1238/280/L005		RCPT-				150-199, 275-299
	1		W2068	011	20		35-21-14	150-199, 275
	1		W2068	131	20		35-21-14	276-299
	2		W2068	012	20		35-21-14	150-199, 275
	2		W2068	132	20		35-21-14	276-299
D11136		1265/280/L005		RCPT-				150-199, 275-299
	1		W2068	014	20		35-21-14	150-199, 275
	1		W2068	141	20		35-21-14	276-299
	2		W2068	015	20		35-21-14	150-199, 275
	2		W2068	142	20		35-21-14	276-299
D11146		P035-00/ /		PLUG				150-199, 275-299
	1	UNUSED						150-199, 275-299
	2		W1066	34S	22		25-53-14	150-199, 275-299
	3		W1066	33P	22		25-53-13	150-199, 275-299
	4	UNUSED						150-199, 275-299
	5		W1066	34X	22		25-53-14	150-199, 275-299
	6	UNUSED						150-199, 275-299
	7		W1066	34T	22		25-53-14	150-199, 275-299
	8	UNUSED						150-199, 275-299

HOOKUP LIST

D280T132

91-21-51

Section D11100

Page 6

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D11148		P035-00/ /		PLUG				150-199, 275-299
	1	UNUSED						150-199, 275-299
	2		W1066	34W	22		25-53-14	150-199, 275-299
	3		W1066	33R	22		25-53-13	150-199, 275-299
	4	UNUSED						150-199, 275-299
	5		W1066	35R	22		25-53-14	150-199, 275-299
	6	UNUSED						150-199, 275-299
	7		W1066	35A	22		25-53-14	150-199, 275-299
	8	UNUSED						150-199, 275-299
D11150		P035-00/ /		PLUG				150-199, 275-299
	1		W1066	514	22		25-53-14	150-199, 275-299
	2		W1066	34F	22		25-53-14	150-199, 275-299
	3		W1066	34B	22		25-53-14	150-199, 275-299
	4	UNUSED						150-199, 275-299
	5		W1066	515	22		25-53-14	150-199, 275-299
	6		W1066	34G	22		25-53-14	150-199, 275-299
	7		W1066	34H	22		25-53-14	150-199, 275-299
	8	UNUSED						150-199, 275-299
D11158		L324/P25/FS		PLUG				ALL
	1		W0406	115	20		36-11-61	ALL
	2		W0406	032	20		36-11-61	ALL
	3	DK	W0406	116	18		36-11-61	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
D11160		0654+043/295/L056		PLUG-				150-199, 275-278
D11160		0654+044/290/L056		PLUG-				280-299
	1	UNUSED						150-199, 275-299
	2		W0812	632	20		33-21-11	150-199, 275-299
	3		W0812	633	20		33-21-11	150-199, 275-299
	4	UNUSED						150-199, 275-299
	5		W0812	636	20		33-21-11	150-199, 275-299
	6	UNUSED						150-199, 275-299
	7		W0812	634	20		33-21-11	150-199, 275-299
	8		W0812	635	20		33-21-11	150-199, 275-299
	9		W0812	639	20		33-21-11	150-199, 275-299
	10		W0812	640	20		33-21-11	150-199, 275-299
	11		W0812	637	20		33-21-11	150-199, 275-299

HOOKUP LIST

D280T132

91-21-51

Section D11100

Page 7

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D11160		0654+043/295/L056		PLUG- (continued)				150-199, 275-278
D11160		0654+044/290/L056		PLUG- (continued)				280-299
	12		W0812	638	20		33-21-11	150-199, 275-299
D11162		0654+050/290/L019		PLUG-				150-199, 275-278
	1	UNUSED						150-199, 275-278
	2		W0822	182	20		33-21-11	150-199, 275-278
	3		W0822	181	20		33-21-11	150-199, 275-278
	4	UNUSED						150-199, 275-278
	5		W0822	038	20		33-21-11	150-199, 275-278
	6	UNUSED						150-199, 275-278
	7		W0822	183	20		33-21-11	150-199, 275-278
	8		W0822	184	20		33-21-11	150-199, 275-278
	9		W0822	187	20		33-21-11	150-199, 275-278
	10		W0822	188	20		33-21-11	150-199, 275-278
	11		W0822	186	20		33-21-11	150-199, 275-278
	12		W0822	185	20		33-21-11	150-199, 275-278
D11164		0654+117/295/L056		PLUG-				150-199, 275-278
D11164		0654+120/289/L056		PLUG-				280-299
	1	UNUSED						150-199, 275-299
	2		W0812	643	20		33-21-11	150-199, 275-299
	3		W0812	644	20		33-21-11	150-199, 275-299
	4	UNUSED						150-199, 275-299
	5		W0812	648	20		33-21-11	150-199, 275-299
	6	UNUSED						150-199, 275-299
	7		W0812	769	20		33-21-11	150-199, 275-299
	8		W0812	770	20		33-21-11	150-199, 275-299
	9		W0812	645	20		33-21-11	150-199, 275-299
	10		W0812	646	20		33-21-11	150-199, 275-299
	11		W0812	767	20		33-21-11	150-199, 275-299
	12		W0812	768	20		33-21-11	150-199, 275-299
D11166		700/290/L019		PLUG-				150-199
D11166		0654+091/290/L019		PLUG-				275-278
D11166		0654+091/295/L020		PLUG-				280-299
	1	UNUSED						150-199, 275-299
	2		W0822	189	20		33-21-11	150-199, 275-278
	2		W3014	014	20		33-21-11	280-299
	3		W0822	190	20		33-21-11	150-199, 275-278
	3		W3014	015	20		33-21-11	280-299

HOOKUP LIST

D280T132

91-21-51

Section D11100

Page 8

Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D11166		700/290/L019		PLUG- (continued)				150-199
D11166		0654+091/290/L019		PLUG- (continued)				275-278
D11166		0654+091/295/L020		PLUG- (continued)				280-299
	4	UNUSED						150-199, 275-299
	5		W0822	162	20		33-21-11	150-199, 275-278
	5		W3014	016	20		33-21-11	280-299
	6	UNUSED						150-199, 275-299
	7		W0822	191	20		33-21-11	150-199, 275-278
	7		W3014	017	20		33-21-11	280-299
	8		W0822	194	20		33-21-11	150-199, 275-278
	8		W3014	039	20		33-21-11	280-299
	9		W0822	196	20		33-21-11	150-199, 275-278
	9		W3014	019	20		33-21-11	280-299
	10		W0822	195	20		33-21-11	150-199, 275-278
	10		W3014	020	20		33-21-11	280-299
	11		W0822	192	20		33-21-11	150-199, 275-278
	11		W3014	021	20		33-21-11	280-299
	12		W0822	193	20		33-21-11	150-199, 275-278
	12		W3014	022	20		33-21-11	280-299
D11168		0660/295/L056		PLUG-				150-199
D11168		0745/289/L056		PLUG-				280-299
	1	UNUSED						150-199, 280-299
	2		W0812	651	20		33-21-11	150-199, 280-299
	3		W0812	650	20		33-21-11	150-199, 280-299
	4	UNUSED						150-199, 280-299
	5		W0812	649	20		33-21-11	150-199, 280-299
	6	UNUSED						150-199, 280-299
	7		W0812	775	20		33-21-11	150-199, 280-299
	8		W0812	776	20		33-21-11	150-199, 280-299
	9		W0812	652	20		33-21-11	150-199, 280-299
	10		W0812	653	20		33-21-11	150-199, 280-299
	11		W0812	773	20		33-21-11	150-199, 280-299
	12		W0812	774	20		33-21-11	150-199, 280-299
D11170		700/290/L019		PLUG-				150-199
	1	UNUSED						150-199
	2		W0822	501	20		33-21-11	150-199
	3		W0822	502	20		33-21-11	150-199
	4	UNUSED						150-199
	5		W0822	163	20		33-21-11	150-199

HOOKUP LIST

D280T132

91-21-51

Section D11100

Page 9

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D11170		700/290/L019		PLUG- (continued)				150-199
	6	UNUSED						150-199
	7		W0822	508	20		33-21-11	150-199
	8		W0822	505	20		33-21-11	150-199
	9		W0822	506	20		33-21-11	150-199
	10		W0822	507	20		33-21-11	150-199
	11		W0822	504	20		33-21-11	150-199
	12		W0822	503	20		33-21-11	150-199
D11172		0654+056/290/L056		PLUG-				150-165, 167-199, 275-278
D11172		0654+056/295/L056		PLUG-				166
D11172		0654+062/290/L056		PLUG-				280-299
	1	UNUSED						150-199, 275-299
	2		W0812	789	22		33-21-32	150-199, 275-299
	3		W0812	790	22		33-21-32	150-199, 275-299
	4	UNUSED						150-199, 275-299
	5		W0812	786	20		33-21-32	150-199, 275-299
	6	UNUSED						150-199, 275-299
	7		W0812	787	20		33-21-32	150-199, 275-299
	8		W0812	788	20		33-21-32	150-199, 275-299
	9		W0812	793	22		33-21-32	150-199, 275-299
	10		W0812	794	22		33-21-32	150-199, 275-299
	11		W0812	791	22		33-21-32	150-199, 275-299
	12		W0812	792	22		33-21-32	150-199, 275-299
	DED		W0812	786Z			33-21-32	155-156, 166
	DED		W0812	787Z			33-21-32	155-156, 166
D11174		0654+088/250/L080		PLUG-				150-199, 275-278
D11174		0654+071/266/L081		PLUG-				280-299
	1		W0812	789	22		33-21-32	150-199, 275-299
	2		W0812	790	22		33-21-32	150-199, 275-299
	3		W0812	795	22		33-21-32	150-199, 275-299
	4		W0812	796	22		33-21-32	150-199, 275-299
	5		W0812	797	20		33-21-32	150-199, 275-299
D11176		0654+088/250/R080		PLUG-				150-199, 275-278
D11176		0654+103/266/R081		PLUG-				280-299
	1		W0812	793	22		33-21-32	150-199, 275-299
	2		W0812	794	22		33-21-32	150-199, 275-299
	3		W0812	798	22		33-21-32	150-199, 275-299
	4		W0812	799	22		33-21-32	150-199, 275-299

HOOKUP LIST

D280T132

91-21-51

Section D11100

Page 10

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D11176		0654+088/250/R080		PLUG- (continued)				150-199, 275-278
D11176		0654+103/266/R081		PLUG- (continued)				280-299
	5		W0812	800	20		33-21-32	150-199, 275-299
D11178		0894/266/L081		PLUG-				150-199, 275-278
D11178		0900/266/L081		PLUG-				280-299
	1		W0812	801	22		33-21-34	150-199, 275-299
	2		W0812	802	22		33-21-34	150-199, 275-299
	3		W0812	805	22		33-21-34	150-199, 275-299
	4		W0812	804	22		33-21-34	150-199, 275-299
	5		W0812	803	20		33-21-34	150-199, 275-299
D11180		P039-00/ /		PLUG				150-199, 275-299
	1	UNUSED						150-199, 275-299
	2		W1068	35R	22		25-53-24	150-199, 275-299
	3		W1068	33D	22		25-53-23	150-199, 275-299
	4	UNUSED						150-199, 275-299
	5		W1068	35T	22		25-53-24	150-199, 275-299
	6	UNUSED						150-199, 275-299
	7		W1068	35D	22		25-53-24	150-199, 275-299
	8	UNUSED						150-199, 275-299
D11182		P039-00/ /		PLUG				150-199, 275-299
	1	UNUSED						150-199, 275-299
	2		W1068	34W	22		25-53-24	150-199, 275-299
	3		W1068	763	22		25-53-23	150-199, 275-299
	4	UNUSED						150-199, 275-299
	5		W1068	34Y	22		25-53-24	150-199, 275-299
	6	UNUSED						150-199, 275-299
	7		W1068	34X	22		25-53-24	150-199, 275-299
	8	UNUSED						150-199, 275-299
D11184		P039-00/ /		PLUG				150-199, 275-299
	1	UNUSED						150-199, 275-299
	2		W1068	766	22		25-53-24	150-199, 275-299
	3		W1068	34K	22		25-53-23	150-199, 275-299
	4	UNUSED						150-199, 275-299
	5		W1068	767	22		25-53-24	150-199, 275-299
	6		W1068	36H	22		25-53-24	150-199, 275-299
	7		W1068	768	22		25-53-24	150-199, 275-299
	8		W1068	36J	22		25-53-24	150-199, 275-299

HOOKUP LIST

D280T132

91-21-51

Section D11100

Page 11

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D11186		P039-00/ /		PLUG				150-199, 275-299
	1	UNUSED						150-199, 275-299
	2		W1068	760	22		25-53-24	150-199, 275-299
	3		W1068	34J	22		25-53-23	150-199, 275-299
	4	UNUSED						150-199, 275-299
	5		W1068	761	22		25-53-24	150-199, 275-299
	6		W1068	36J	22		25-53-24	150-199, 275-299
	7		W1068	762	22		25-53-24	150-199, 275-299
	8		W1068	34F	22		25-53-24	150-199, 275-299
D11188		P039-00/ /		PLUG				150-199, 275-299
	1	UNUSED						150-199, 275-299
	2		W1068	786	22		25-53-24	150-199, 275-299
	3		W1068	34H	22		25-53-23	150-199, 275-299
	4	UNUSED						150-199, 275-299
	5		W1068	787	22		25-53-24	150-199, 275-299
	6	UNUSED						150-199, 275-299
	7		W1068	788	22		25-53-24	150-199, 275-299
	8	UNUSED						150-199, 275-299
D11190		P039-00/ /		PLUG				150-199, 275-299
	1		W1068	36D	22		25-53-24	150-199, 275-299
	2		W1068	35P	22		25-53-24	150-199, 275-299
	3		W1068	33P	22		25-53-23	150-199, 275-299
	4	UNUSED						150-199, 275-299
	5		W1068	36E	22		25-53-24	150-199, 275-299
	6		W1068	35N	22		25-53-24	150-199, 275-299
	7		W1068	33N	22		25-53-23	150-199, 275-299
	8	UNUSED						150-199, 275-299
D11192		P039-00/ /		PLUG				150-199, 275-299
	1		W1068	36F	22		25-53-24	150-199, 275-299
	2		W1068	35X	22		25-53-24	150-199, 275-299
	3		W1068	33M	22		25-53-23	150-199, 275-299
	4	UNUSED						150-199, 275-299
	5		W1068	36G	22		25-53-24	150-199, 275-299
	6		W1068	35W	22		25-53-24	150-199, 275-299
	7		W1068	33L	22		25-53-23	150-199, 275-299
	8	UNUSED						150-199, 275-299

HOOKUP LIST
D280T132

91-21-51
Section D11100
Page 12
Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D11194		P039-00/ /		PLUG				150-199, 275-299
	1		W1068	36B	22		25-53-24	150-199, 275-299
	2		W1068	35J	22		25-53-24	150-199, 275-299
	3		W1068	699	22		25-53-23	150-199, 275-299
	4	UNUSED						150-199, 275-299
	5		W1068	36C	22		25-53-24	150-199, 275-299
	6		W1068	35H	22		25-53-24	150-199, 275-299
	7		W1068	34E	22		25-53-23	150-199, 275-299
	8	UNUSED						150-199, 275-299
D11196		P039-00/ /		PLUG				150-199, 275-299
	1		W1068	35Y	22		25-53-24	150-199, 275-299
	2		W1068	35B	22		25-53-24	150-199, 275-299
	3		W1068	709	22		25-53-23	150-199, 275-299
	4	UNUSED						150-199, 275-299
	5		W1068	36A	22		25-53-24	150-199, 275-299
	6		W1068	35A	22		25-53-24	150-199, 275-299
	7		W1068	34B	22		25-53-23	150-199, 275-299
	8	UNUSED						150-199, 275-299
D11198		P039-00/ /		PLUG				150-199, 275-299
	A1		W1068	681	22		25-53-24	150-199, 275-299
	A2		W1068	680	22		25-53-24	150-199, 275-299
	A3	UNUSED						150-199, 275-299
	B1		W1068	683	22		25-53-24	150-199, 275-299
	B2		W1068	682	22		25-53-24	150-199, 275-299
	B3	UNUSED						150-199, 275-299
	C1	UNUSED						150-199, 275-299
	C2		W1068	184	22		25-53-24	150-199, 275-299
	C3		W1068	685	22		25-53-24	150-199, 275-299
	D1	UNUSED						150-199, 275-299
	D2		W1068	190	22		25-53-26	150-199, 275-299
	D3		W1068	191	22		25-53-26	150-199, 275-299
	X1		W1068	513	22		25-53-23	150-199, 275-299
	X2		W1068	689	22		25-53-23	150-199, 275-299

HOOKUP LIST

D280T132



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D11200		P039-00/ /		PLUG				150-199, 275-299
	1		W1068	661	22		25-53-24	150-199, 275-299
	2		W1068	662	22		25-53-24	150-199, 275-299
	3		W1068	669	22		25-53-23	150-199, 275-299
	4	UNUSED						150-199, 275-299
	5		W1068	663	22		25-53-24	150-199, 275-299
	6		W1068	660	22		25-53-24	150-199, 275-299
	7		W1068	668	22		25-53-23	150-199, 275-299
	8	UNUSED						150-199, 275-299
D11202		P039-00/ /		PLUG				150-199, 275-299
	1		W1068	671	22		25-53-24	150-199, 275-299
	2		W1068	672	22		25-53-24	150-199, 275-299
	3		W1068	679	22		25-53-23	150-199, 275-299
	4	UNUSED						150-199, 275-299
	5		W1068	673	22		25-53-24	150-199, 275-299
	6		W1068	670	22		25-53-24	150-199, 275-299
	7		W1068	678	22		25-53-23	150-199, 275-299
	8	UNUSED						150-199, 275-299
D11204		P039-00/ /		PLUG				150-199, 275-299
	1		W1068	691	22		25-53-24	150-199, 275-299
	2		W1068	692	22		25-53-24	150-199, 275-299
	3		W1068	34G	22		25-53-23	150-199, 275-299
	4	UNUSED						150-199, 275-299
	5		W1068	693	22		25-53-24	150-199, 275-299
	6		W1068	690	22		25-53-24	150-199, 275-299
	7		W1068	698	22		25-53-23	150-199, 275-299
	8	UNUSED						150-199, 275-299
D11206		P039-00/ /		PLUG				150-199, 275-299
	1		W1068	701	22		25-53-24	150-199, 275-299
	2		W1068	702	22		25-53-24	150-199, 275-299
	3		W1068	34D	22		25-53-23	150-199, 275-299
	4	UNUSED						150-199, 275-299
	5		W1068	703	22		25-53-24	150-199, 275-299
	6		W1068	700	22		25-53-24	150-199, 275-299
	7		W1068	708	22		25-53-23	150-199, 275-299
	8	UNUSED						150-199, 275-299

HOOKUP LIST
D280T132

91-21-51
Section D11200
Page 1
Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D11208		P039-00/ /		PLUG				150-199, 275-299
	1		W1068	514	22		25-53-24	150-199, 275-299
	2		W1068	792	22		25-53-24	150-199, 275-299
	3		W1068	574	22		25-53-24	150-199, 275-299
	4	UNUSED						150-199, 275-299
	5		W1068	583	22		25-53-24	150-199, 275-299
	6		W1068	573	22		25-53-24	150-199, 275-299
	7		W1068	587	22		25-53-24	150-199, 275-299
	8	UNUSED						150-199, 275-299
D11212		1197+021/290/L056		PLUG-				150-199, 275-299
	1	UNUSED						150-199, 275-299
	2		W0816	662	20		33-21-14	150-199, 275-299
	3		W0816	663	20		33-21-14	150-199, 275-299
	4	UNUSED						150-199, 275-299
	5		W0816	036	20		33-21-14	150-199, 275-299
	6	UNUSED						150-199, 275-299
	7		W0816	668	20		33-21-14	150-199, 275-299
	8		W0816	669	20		33-21-14	150-199, 275-299
	9		W0816	664	20		33-21-14	150-199, 275-299
	10		W0816	665	20		33-21-14	150-199, 275-299
	11		W0816	667	20		33-21-14	150-199, 275-299
	12		W0816	666	20		33-21-14	150-199, 275-299
D11214		1197+027/290/L020		PLUG-				150-199, 275-299
	1	UNUSED						150-199, 275-299
	2		W0824	081	20		33-21-14	150-199, 275-299
	3		W0824	082	20		33-21-14	150-199, 275-299
	4	UNUSED						150-199, 275-299
	5		W0824	099	20		33-21-14	150-199, 275-299
	6	UNUSED						150-199, 275-299
	7		W0824	087	20		33-21-14	150-199, 275-299
	8		W0824	088	20		33-21-14	150-199, 275-299
	9		W0824	083	20		33-21-14	150-199, 275-299
	10		W0824	084	20		33-21-14	150-199, 275-299
	11		W0824	086	20		33-21-14	150-199, 275-299
	12		W0824	085	20		33-21-14	150-199, 275-299
D11216		1197+110/290/L056		PLUG-				150-199, 275-299
	1	UNUSED						150-199, 275-299

HOOKUP LIST

D280T132

91-21-51

Section D11200

Page 2

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D11216		1197+110/290/L056		PLUG- (continued)				150-199, 275-299
	2		W0816	672	20		33-21-14	150-199, 275-299
	3		W0816	673	20		33-21-14	150-199, 275-299
	4	UNUSED						150-199, 275-299
	5		W0816	037	20		33-21-14	150-199, 275-299
	6	UNUSED						150-199, 275-299
	7		W0816	678	20		33-21-14	150-199, 275-299
	8		W0816	679	20		33-21-14	150-199, 275-299
	9		W0816	674	20		33-21-14	150-199, 275-299
	10		W0816	675	20		33-21-14	150-199, 275-299
	11		W0816	677	20		33-21-14	150-199, 275-299
	12		W0816	676	20		33-21-14	150-199, 275-299
D11218		1197+115/290/L020		PLUG-				150-199
D11218		1197+072/290/L020		PLUG-				275-299
	1	UNUSED						150-199, 275-299
	2		W0824	093	20		33-21-14	150-199, 275-299
	3		W0824	092	20		33-21-14	150-199, 275-299
	4	UNUSED						150-199, 275-299
	5		W0824	089	20		33-21-14	150-199, 275-299
	6	UNUSED						150-199, 275-299
	7		W0824	094	20		33-21-14	150-199, 275-299
	8		W0824	097	20		33-21-14	150-199, 275-299
	9		W0824	091	20		33-21-14	150-199, 275-299
	10		W0824	090	20		33-21-14	150-199, 275-299
	11		W0824	096	20		33-21-14	150-199, 275-299
	12		W0824	095	20		33-21-14	150-199, 275-299
D11220		0654+056/288/R056		PLUG-				150-165, 167-199, 275-278
D11220		0654+056/295/R056		PLUG-				166
D11220		0654+059/289/R056		PLUG-				280-299
	1	UNUSED						150-199, 275-299
	2		W0814	593	22		33-21-33	150-199, 275-299
	3		W0814	594	22		33-21-33	150-199, 275-299
	4	UNUSED						150-199, 275-299
	5		W0814	520	20		33-21-33	150-199, 275-299
	6	UNUSED						150-199, 275-299
	7		W0814	591	20		33-21-33	150-199, 275-299
	8		W0814	592	20		33-21-33	150-199, 275-299
	9		W0814	600	22		33-21-33	150-199, 275-299
	10		W0814	601	22		33-21-33	150-199, 275-299

HOOKUP LIST
D280T132

91-21-51
Section D11200
Page 3
Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D11220		0654+056/288/R056		PLUG- (continued)				150-165, 167-199, 275-278
D11220		0654+056/295/R056		PLUG- (continued)				166
D11220		0654+059/289/R056		PLUG- (continued)				280-299
	11		W0814	603	22		33-21-33	150-199, 275-299
	12		W0814	604	22		33-21-33	150-199, 275-299
	DED		W0814	520Z			33-21-33	155-156, 166
	DED		W0814	591Z			33-21-33	155-156, 166
D11222		0667/288/R056		PLUG-				275-278
D11222		0680/291/R056		PLUG-				280-299
	1	UNUSED						275-299
	2		W0814	549	22		33-21-33	275-299
	3		W0814	550	22		33-21-33	275-299
	4	UNUSED						275-299
	5	FM	W0814	546	16		33-21-33	275-299
	6	UNUSED						275-299
	7	FM	W0814	547	16		33-21-33	275-299
	8	FM	W0814	548	16		33-21-33	275-299
	9		W0814	556	22		33-21-33	275-299
	10		W0814	557	22		33-21-33	275-299
	11		W0814	559	22		33-21-33	275-299
	12		W0814	560	22		33-21-33	275-299
D11224		0654+043/266/L081		PLUG-				150-199, 275-278
D11224		0654+027/266/L081		PLUG-				280-299
	1		W0814	593	22		33-21-33	150-199, 275-299
	2		W0814	594	22		33-21-33	150-199, 275-299
	3		W0814	595	22		33-21-33	150-199, 275-299
	4		W0814	596	22		33-21-33	150-199, 275-299
	5		W0814	597	20		33-21-33	150-199, 275-299
D11226		0654+043/266/R081		PLUG-				150-199, 275-278
D11226		0654+059/266/R081		PLUG-				280-299
	1		W0814	600	22		33-21-33	150-199, 275-299
	2		W0814	601	22		33-21-33	150-199, 275-299
	3		W0814	598	22		33-21-33	150-199, 275-299
	4		W0814	599	22		33-21-33	150-199, 275-299
	5		W0814	602	20		33-21-33	150-199, 275-299

HOOKUP LIST

D280T132

91-21-51

Section D11200

Page 4

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D11228		0666/266/L081		PLUG-				275-278
D11228		0658/266/L082		PLUG-				280-299
	1		W0814	549	22		33-21-33	275-299
	2		W0814	550	22		33-21-33	275-299
	3		W0814	551	22		33-21-33	275-299
	4		W0814	552	22		33-21-33	275-299
	5		W0814	553	20		33-21-33	275-299
D11230		0666/266/R081		PLUG-				275-278
D11230		0670/266/R082		PLUG-				280-299
	1		W0814	556	22		33-21-33	275-299
	2		W0814	557	22		33-21-33	275-299
	3		W0814	554	22		33-21-33	275-299
	4		W0814	555	22		33-21-33	275-299
	5		W0814	558	20		33-21-33	275-299
D11232		1197+034/290/L056		PLUG-				150-165, 167-199, 275-299
D11232		1197+034/295/L056		PLUG-				166
	1	UNUSED						150-199, 275-299
	2		W0816	688	22		33-21-34	150-199, 275-299
	3		W0816	689	22		33-21-34	150-199, 275-299
	4	UNUSED						150-199, 275-299
	5		W0816	631	20		33-21-34	150-199, 275-299
	6	UNUSED						150-199, 275-299
	7		W0816	687	20		33-21-34	150-199, 275-299
	8		W0816	686	20		33-21-34	150-199, 275-299
	9		W0816	695	22		33-21-34	150-199, 275-299
	10		W0816	696	22		33-21-34	150-199, 275-299
	11		W0816	698	22		33-21-34	150-199, 275-299
	12		W0816	699	22		33-21-34	150-199, 275-299
	DED		W0816	631Z			33-21-34	155-156, 166
	DED		W0816	687Z			33-21-34	155-156, 166
D11234		1197+123/290/L056		PLUG-				150-165, 167-199, 275-299
D11234		1197+123/295/L056		PLUG-				166
	1	UNUSED						150-199, 275-299
	2		W0816	702	22		33-21-34	150-199, 275-299
	3		W0816	703	22		33-21-34	150-199, 275-299
	4	UNUSED						150-199, 275-299
	5		W0816	584	20		33-21-34	150-199, 275-299

HOOKUP LIST

D280T132

91-21-51

Section D11200

Page 5

Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D11234		1197+123/290/L056		PLUG- (continued)				150-165, 167-199, 275-299
D11234		1197+123/295/L056		PLUG- (continued)				166
	6	UNUSED						150-199, 275-299
	7		W0816	701	20		33-21-34	150-199, 275-299
	8		W0816	700	20		33-21-34	150-199, 275-299
	9		W0816	129	22		33-21-34	150-199, 275-299
	10		W0816	130	22		33-21-34	150-199, 275-299
	11		W0816	707	22		33-21-34	150-199, 275-299
	12		W0816	708	22		33-21-34	150-199, 275-299
	DED		W0816	584Z			33-21-34	155-156, 166
	DED		W0816	701Z			33-21-34	155-156, 166
D11236		1197+022/266/L081		PLUG-				150-199, 275-299
	1		W0816	688	22		33-21-34	150-199, 275-299
	2		W0816	689	22		33-21-34	150-199, 275-299
	3		W0816	690	22		33-21-34	150-199, 275-299
	4		W0816	691	22		33-21-34	150-199, 275-299
	5		W0816	692	20		33-21-34	150-199, 275-299
D11238		1197+066/266/L081		PLUG-				150-199, 275-299
	1		W0816	695	22		33-21-34	150-199, 275-299
	2		W0816	696	22		33-21-34	150-199, 275-299
	3		W0816	693	22		33-21-34	150-199, 275-299
	4		W0816	694	22		33-21-34	150-199, 275-299
	5		W0816	697	20		33-21-34	150-199, 275-299
D11240		1197+110/266/L081		PLUG-				150-199, 275-299
	1		W0816	702	22		33-21-34	150-199, 275-299
	2		W0816	703	22		33-21-34	150-199, 275-299
	3		W0816	704	22		33-21-34	150-199, 275-299
	4		W0816	705	22		33-21-34	150-199, 275-299
	5		W0816	706	20		33-21-34	150-199, 275-299
D11242		0894/266/R081		PLUG-				150-199, 275-299
	1		W0814	606	22		33-21-35	150-199, 275-299
	2		W0814	607	22		33-21-35	150-199, 275-299
	3		W0814	609	22		33-21-35	150-199, 275-299
	4		W0814	608	22		33-21-35	150-199, 275-299
	5		W0814	605	20		33-21-35	150-199, 275-299

HOOKUP LIST

D280T132

91-21-51

Section D11200

Page 6

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D11244		1197+022/266/R081		PLUG-				150-199, 275-299
	1		W0818	130	22		33-21-35	150-199, 275-299
	2		W0818	131	22		33-21-35	150-199, 275-299
	3		W0818	132	22		33-21-35	150-199, 275-299
	4		W0818	133	22		33-21-35	150-199, 275-299
	5		W0818	134	20		33-21-35	150-199, 275-299
D11246		1197+066/266/R081		PLUG-				150-199, 275-299
	1		W0818	540	22		33-21-35	150-199, 275-299
	2		W0818	541	22		33-21-35	150-199, 275-299
	3		W0818	538	22		33-21-35	150-199, 275-299
	4		W0818	539	22		33-21-35	150-199, 275-299
	5		W0818	542	20		33-21-35	150-199, 275-299
D11248		1197+110/266/R081		PLUG-				150-199, 275-299
	1		W0818	543	22		33-21-35	150-199, 275-299
	2		W0818	544	22		33-21-35	150-199, 275-299
	3		W0818	545	22		33-21-35	150-199, 275-299
	4		W0818	546	22		33-21-35	150-199, 275-299
	5		W0818	547	20		33-21-35	150-199, 275-299
D11250		1197+034/288/R056		PLUG-				150-165, 167-199, 275-299
D11250		1197+034/295/R056		PLUG-				166
	1	UNUSED						150-199, 275-299
	2		W0818	130	22		33-21-35	150-199, 275-299
	3		W0818	131	22		33-21-35	150-199, 275-299
	4	UNUSED						150-199, 275-299
	5		W0818	072	20		33-21-35	150-199, 275-299
	6	UNUSED						150-199, 275-299
	7		W0818	074	20		33-21-35	150-199, 275-299
	8		W0818	073	20		33-21-35	150-199, 275-299
	9		W0818	540	22		33-21-35	150-199, 275-299
	10		W0818	541	22		33-21-35	150-199, 275-299
	11		W0818	105	22		33-21-35	150-199, 275-299
	12		W0818	106	22		33-21-35	150-199, 275-299
	DED		W0818	072Z			33-21-35	155-156, 166
	DED		W0818	074Z			33-21-35	155-156, 166

HOOKUP LIST
D280T132

91-21-51
Section D11200
Page 7
Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D11252		1197+122/288/R056		PLUG-				150-165, 167-199, 275-299
D11252		1197+122/295/R056		PLUG-				166
	1	UNUSED						150-199, 275-299
	2		W0818	543	22		33-21-35	150-199, 275-299
	3		W0818	544	22		33-21-35	150-199, 275-299
	4	UNUSED						150-199, 275-299
	5		W0818	071	20		33-21-35	150-199, 275-299
	6	UNUSED						150-199, 275-299
	7		W0818	108	20		33-21-35	150-199, 275-299
	8		W0818	107	20		33-21-35	150-199, 275-299
	9		W0818	026	22		33-21-35	150-199, 275-299
	10		W0818	027	22		33-21-35	150-199, 275-299
	11		W0818	115	22		33-21-35	150-199, 275-299
	12		W0818	116	22		33-21-35	150-199, 275-299
	DED		W0818	071Z			33-21-35	155-156, 166
	DED		W0818	108Z			33-21-35	155-156, 166
D11254		0771/270/L073		RCPT-				150-199, 275-278
D11254		0772/270/L073		RCPT-				280-299
	1		W0724	081	20		35-21-12	150-199, 275-299
	2		W0724	082	20		35-21-12	150-199, 275-299
D11256		1197+022/270/L073		RCPT-				150-199, 275-299
	1		W0724	064	20		35-21-12	150-199, 275-299
	2		W0724	065	20		35-21-12	150-199, 275-299
D11258		1197+050/270/L073		RCPT-				150-199, 275-299
	1		W0724	066	20		35-21-12	150-199, 275-299
	2		W0724	067	20		35-21-12	150-199, 275-299
D11260		1197+080/270/L073		RCPT-				150-199, 275-299
	1		W0724	068	20		35-21-12	150-199, 275-299
	2		W0724	069	20		35-21-12	150-199, 275-299
D11262		1197+110/270/L073		RCPT-				150-199, 275-299
	1		W0724	070	20		35-21-12	150-199, 275-299
	2		W0724	071	20		35-21-12	150-199, 275-299

HOOKUP LIST

D280T132

91-21-51

Section D11200

Page 8

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D11264		0771/270/R073		RCPT-				150-199, 275-278
D11264		0772/270/R073		RCPT-				280-299
	1		W0728	081	20		35-21-13	150-199, 275-299
	2		W0728	082	20		35-21-13	150-199, 275-299
D11266		0654+014/270/R073		RCPT-				150-199, 275-278
D11266		630/270/R073		RCPT-				280-299
	1		W0722	078	20		35-21-13	150-199, 275-299
	2		W0722	079	20		35-21-13	150-199, 275-299
D11268		0654+044/270/R073		RCPT-				150-199, 275-278
D11268		630/270/R073		RCPT-				280-299
	1		W0722	080	20		35-21-13	150-199, 275-299
	2		W0722	081	20		35-21-13	150-199, 275-299
D11270		0654+087/270/R073		RCPT-				150-199
D11270		0654+071/270/R073		RCPT-				275-299
	1		W0722	082	20		35-21-13	150-199, 275-299
	2		W0722	083	20		35-21-13	150-199, 275-299
D11272		0654+099/270/R073		RCPT-				275-299
	1		W0722	084	20		35-21-13	275-299
	2		W0722	085	20		35-21-13	275-299
D11274		1197+022/270/R073		RCPT-				150-199, 275-299
	1		W0728	061	20		35-21-13	150-199, 275-299
	2		W0728	062	20		35-21-13	150-199, 275-299
D11276		1197+050/270/R073		RCPT-				150-199, 275-299
	1		W0728	063	20		35-21-13	150-199, 275-299
	2		W0728	064	20		35-21-13	150-199, 275-299
D11278		1197+080/270/R073		RCPT-				150-199, 275-299
	1		W0728	065	20		35-21-13	150-199, 275-299
	2		W0728	066	20		35-21-13	150-199, 275-299
D11280		1197+110/270/R073		RCPT-				150-199, 275-299
	1		W0728	067	20		35-21-13	150-199, 275-299
	2		W0728	068	20		35-21-13	150-199, 275-299

HOOKUP LIST

D280T132

91-21-51

Section D11200

Page 9 End

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D11318		0654+014/270/L075		RCPT-				150-199, 275-278
D11318		0654+016/270/L073		RCPT-				280-299
	1		W0718	078	20		35-21-12	150-199, 275-299
	2		W0718	079	20		35-21-12	150-199, 275-299
D11320		0654+044/270/L075		RCPT-				150-199, 275-278
D11320		0654+045/270/L073		RCPT-				280-299
	1		W0718	080	20		35-21-12	150-199, 275-299
	2		W0718	081	20		35-21-12	150-199, 275-299
D11322		0654+087/270/L075		RCPT-				150-199
D11322		0654+071/270/L075		RCPT-				275-278
D11322		0654+074/270/L073		RCPT-				280-299
	1		W0718	082	20		35-21-12	150-199, 275-299
	2		W0718	083	20		35-21-12	150-199, 275-299
D11324		0654+099/270/L075		RCPT-				275-278
D11324		0654+104/270/L073		RCPT-				280-299
	1		W0718	084	20		35-21-12	275-299
	2		W0718	085	20		35-21-12	275-299
D11352		AW0319/ /		PLUG-STRUT				ALL
	1		W0356	046	18		36-22-11	ALL
	2		W0356	047	18		36-22-11	ALL
D11354		N 151/157/		PLUG L. STRUT				050-099, 150-199, 275-278
	1	UNUSED						050-099, 150-199, 275-278
	2		W0352	116	18		78-34-11	050-099, 150-199, 275-278
	3		W0352	014	18		78-34-11	050-099, 150-199, 275-278
	4		W0352	013	18		78-34-11	050-099, 150-199, 275-278
	5	UNUSED						050-099, 150-199, 275-278
	6	UNUSED						050-099, 150-199, 275-278
	7	UNUSED						050-099, 150-199, 275-278
	CAP	Y	W0352	001	18		SPARE	050-099, 150-166, 275-277
			W0352	115	18		78-34-11	050-099, 150-199, 275-278
			W0352	116Z			78-34-11	050-099, 150-199, 275-278
D11394		P037-00/ /		RELAY SOCKET				153-199
	A1	UNUSED						153-199
	A2		W1118	557	20		25-33-11	153-154

HOOKUP LIST

D280T132

91-21-51

Section D11300

Page 1

Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D11394		P037-00/ /		RELAY SOCKET (continued)				153-199
	A2	UNUSED						155-199
	A3		W1118	103	20		25-33-11	153-154
	A3	UNUSED						155-199
	B1		W1118	104	20		25-33-11	153-154
	B1	UNUSED						155-199
	B2		W1118	105	22		25-33-11	153-154
	B2		W1118	561	20		25-33-11	155-199
	B3	UNUSED						153-154
	B3		W1118	511	20		25-33-11	155-199
	X1		W1118	106	20		25-33-11	153-199
	X2		W1118	107	22		25-33-11	153-199

HOOKUP LIST

D280T132

91-21-51

Section D11300

Page 2 End

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D11402		MULTI/288/038		PLUG-				162-199
	1	UNUSED						162-199
	2		W0124	A-A			33-27-11	162-199
	3		W0124	A-B			33-27-11	162-199
	4	UNUSED						162-199
	5		W0124	005	22		33-27-11	162-199
	6	UNUSED						162-199
	7		W0124	007	22		33-27-11	162-199
	8		W0124	008	22		33-27-11	162-199
	9		W0124	009	22		33-27-11	162-199
	10		W0124	010	22		33-27-11	162-199
	11		W0124	011	22		33-27-11	162-199
	12		W0124	012	22		33-27-11	162-199
D11420		NR070/145/		PLUG-				ALL
	1		W3544	301Y	20		73-21-12	ALL
	2		W3544	301R	20		73-21-12	ALL
	3		W3544	301B	20		73-21-12	ALL
	= CC	G7	W3544	301Z			73-21-12	ALL
D11434		NR070/145/		PLUG-				ALL
	1	UNUSED						ALL
	2		W3542	101	16		30-34-11	ALL
	3		W3542	102	16		30-34-11	ALL
	4	UNUSED						ALL
	5		W3542	301R	20		73-21-12	ALL
	6		W3542	301B	20		73-21-12	ALL
	7		W3542	301Y	20		73-21-12	ALL
	= CC	G7	W3542	101Z			30-34-11	ALL
	= CC	G7	W3542	102Z			30-34-11	ALL
	= CC	G7	W3542	301Z			73-21-12	ALL
D11436		MULTI/ /		PLUG				ALL
	1		W0376	046	18		36-22-11	ALL
	2		W0376	047	18		36-22-11	ALL
D11438		N 151/157/		PLUG R. STRUT				050-099, 150-166, 275-299
	1	UNUSED						050-099, 150-166, 275-299
	2		W0374	116	18		78-34-21	050-099, 150-166, 275-299
	3		W0374	014	18		78-34-21	050-099, 150-166, 275-299
	4		W0374	013	18		78-34-21	050-099, 150-166, 275-299

HOOKUP LIST

D280T132

91-21-51

Section D11400

Page 1

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D11438		N 151/157/		PLUG R. STRUT (continued)				050-099, 150-166, 275-299
	5	UNUSED						050-099, 150-166, 275-299
	6	UNUSED						050-099, 150-166, 275-299
	7	UNUSED						050-099, 150-166, 275-299
	CAP	Y	W0374	001	18		78-34-21	050-099, 150-155, 163-165, 275-276
	CAP	Y	W0374	001	18		SPARE	156-162, 166, 277
			W0374	115	18		78-34-21	050-099, 150-166, 275-299
			W0374	116Z			78-34-21	050-099, 150-166, 275-299
D11440		NR120/148/11		PLUG-EEC.OVERHEAT TEMP SW				ALL
	1		W0356	159	18		30-21-11	ALL
	2	UNUSED						ALL
	3		W0356	157	20		30-21-11	ALL
	= CC	L	W0356	157Z			30-21-11	ALL
D11442		NR120/148/11		PLUG EEC.OVERHEAT TEMP SW				ALL
	1		W0376	159	18		30-21-11	ALL
	2	UNUSED						ALL
	3		W0376	157	20		30-21-11	ALL
	= CC	L	W0376	157Z			30-21-11	ALL
D11444		P036-00/ /		RELAY SOCKET-				ALL
	1	UNUSED						ALL
	2		W0184	726	22		27-09-13	ALL
	3		W0184	160	20		27-09-13	ALL
	4		W0184	149	22		27-09-13	ALL
	5		W0184	181	20		27-09-13	ALL
	6		W0184	727	22		27-09-13	ALL
	7		W0184	161	22		27-09-13	ALL
	8		W0184	165	22		27-09-13	ALL

HOOKUP LIST
D280T132

91-21-51
Section D11400
Page 2 End
Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D11522		P037-00/ /		RELAY SOCKET-P37				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W0192	61D	20		24-11-21	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W0192	61C	24		24-11-21	ALL
	7		W0192	61B	24		24-11-21	ALL
	8		W0192	61A	24		24-11-21	ALL
D11536		NL184/072/		PLUG-ENG				ALL
	A		W3538	017	20		24-11-11	ALL
	B		W3538	007	20		24-11-11	ALL
	C		W3538	013	20		24-11-11	ALL
	DED		W3538	007Z			24-11-11	ALL
	DED		W3538	013Z			24-11-11	ALL
	DED		W3538	017Z			24-11-11	ALL
D11538		P036-00/ /		RELAY SOCKET-				050-099
D11538		P036-00/ /		RELAY SOCKET				150-199, 275-299
	1		W0184	11A	24		21-58-12	ALL
	2		W0184	883	24		21-58-12	ALL
	3		W0184	886	24		21-58-12	ALL
	4		W0184	884	24		21-58-12	ALL
	5		W0184	882	24		21-58-12	ALL
	6		W0184	11B	24		21-58-12	ALL
	7		W0184	885	24		21-58-12	ALL
	8		W0184	11C	24		21-58-12	ALL
D11540		P036-00/ /		RELAY SOCKET-				050-099
D11540		P036-00/ /		RELAY SOCKET				150-199, 275-299
	1	UNUSED						ALL
	2		W0184	888	24		21-58-12	ALL
	3		W0184	891	24		21-58-12	ALL
	4		W0184	889	24		21-58-12	ALL
	5		W0184	887	24		21-58-12	ALL
	6	UNUSED						ALL
	7		W0184	890	24		21-58-12	ALL
	8	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D11500

Page 1

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D11542		P036-00/ /		RELAY SOCKET-				050-099
D11542		P036-00/ /		RELAY SOCKET				150-199, 275-299
	1	UNUSED						ALL
	2		W0184	892	24		21-58-12	ALL
	3		W0184	895	24		21-58-12	ALL
	4		W0184	893	24		21-58-12	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W0184	894	24		21-58-12	ALL
	8	UNUSED						ALL
D11544		P036-00/ /		RELAY SOCKET-				050-099
D11544		P036-00/ /		RELAY SOCKET				150-199, 275-299
	1	UNUSED						ALL
	2		W0184	773	24		21-58-11	ALL
	3		W0184	897	24		21-58-12	ALL
	4		W0184	849	24		21-58-11	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W0184	896	24		21-58-12	ALL
	8	UNUSED						ALL
D11546		P036-00/ /		RELAY SOCKET-				050-099
D11546		P036-00/ /		RELAY SOCKET				150-199, 275-299
	1		W0184	75A	24		21-58-12	ALL
	2		W0184	899	20		21-58-12	ALL
	3		W0184	75D	24		21-58-12	ALL
	4	UNUSED						ALL
	5		W0184	898	24		21-58-12	ALL
	6		W0184	75B	20		21-58-12	ALL
	7		W0184	75C	24		21-58-12	ALL
	8	UNUSED						ALL
D11548		P036-00/ /		RELAY SOCKET-				050-099
D11548		P036-00/ /		RELAY SOCKET				150-199, 275-299
	1	UNUSED						ALL
	2		W0184	75F	20		21-58-12	ALL
	3		W0184	75H	24		21-58-12	ALL
	4	UNUSED						ALL
	5		W0184	75E	24		21-58-12	ALL

HOOKUP LIST
D280T132

91-21-51
Section D11500
Page 2
Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D11548		P036-00/ /		RELAY SOCKET- (continued)				050-099
D11548		P036-00/ /		RELAY SOCKET (continued)				150-199, 275-299
	6	UNUSED						ALL
	7		W0184	75G	24		21-58-12	ALL
	8	UNUSED						ALL
D11550		P036-00/ /		RELAY SOCKET-				050-099
D11550		P036-00/ /		RELAY SOCKET				150-199, 275-299
	1		W0184	11D	24		21-58-12	ALL
	2		W0184	75K	24		21-58-12	ALL
	3		W0184	75N	24		21-58-12	ALL
	4		W0184	75L	24		21-58-12	ALL
	5		W0184	75J	24		21-58-12	ALL
	6		W0184	11C	24		21-58-12	ALL
	7		W0184	75M	24		21-58-12	ALL
	8		W0184	11E	24		21-58-12	ALL
D11553		P51/ /		PLUG-				ALL
	1		W0045	100	20		31-51-12	ALL
	2		W0045	820	24		27-32-12	ALL
	3		W0045	819	24		27-32-12	ALL
	4		W0045	818	24		27-32-12	ALL
	5		W0045	824	24		27-32-12	ALL
	6		W0045	817	24		27-32-12	ALL
	7		W0045	821	24		27-32-12	ALL
	8		W0045	822	24		27-32-12	ALL
	9		W0045	823	24		27-32-12	ALL
	10	UNUSED						ALL
	11		W0045	032	20		31-51-11	ALL
	12		W0045	829	24		27-32-22	ALL
	13		W0045	828	24		27-32-22	ALL
	14		W0045	827	24		27-32-22	ALL
	15		W0045	833	24		27-32-22	ALL
	16		W0045	826	24		27-32-22	ALL
	17		W0045	830	24		27-32-22	ALL
	18		W0045	831	24		27-32-22	ALL
	19		W0045	832	24		27-32-22	ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D11500

Page 3

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D11553		P51/ /		PLUG- (continued)				ALL
	24		W0045	825	24		27-32-12	ALL
	25		W0045	099	24		31-51-12	ALL
	26		W0045	142	24		31-51-12	ALL
	27		W0045	143	24		31-51-12	ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34		W0045	834	24		27-32-22	ALL
	35		W0045	030	24		31-51-11	ALL
	36		W0045	034	24		31-51-11	ALL
	37		W0045	033	24		31-51-11	ALL
D11578		579/122/R036		RCPT-				150-199, 275-299
	1		W0704	550	20		25-53-14	150-199, 275-299
	2		W0704	549	20		25-53-14	150-199, 275-299
	3		W0704	565	20		25-53-14	150-199, 275-299
	4		W0704	351B	20		25-53-12	150-199, 275-299
	5	DK	W0704	626	18		25-53-12	150-199, 275-299
	6		W0704	616	20		25-53-14	150-199, 275-299
	7		W0704	351R	20		25-53-12	150-199, 275-299
	8		W0704	627	20		25-53-12	150-199, 275-299
	9		W0704	628	20		25-53-12	150-199, 275-299
	10		W0704	351Y	20		25-53-12	150-199, 275-299
	11	UNUSED						150-199, 275-299
	12	UNUSED						150-199, 275-299
D11580		0706/122/R029		RCPT-				150-199, 275-299
	1		W0704	611	20		25-53-14	150-199, 275-299
	2		W0704	612	20		25-53-14	150-199, 275-299
	3		W0704	613	20		25-53-14	150-199, 275-299
	4		W0704	328B	20		25-53-12	150-199, 275-299
	5	DK	W0704	185	18		25-53-12	150-199, 275-299
	6		W0704	610	20		25-53-14	150-199, 275-299
	7		W0704	328R	20		25-53-12	150-199, 275-299
	8		W0704	188	20		25-53-12	150-199, 275-299
	9		W0704	189	20		25-53-12	150-199, 275-299
	10		W0704	328Y	20		25-53-12	150-199, 275-299

HOOKUP LIST
D280T132

91-21-51
Section D11500
Page 4
Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D11580		0706/122/R029		RCPT- (continued)				150-199, 275-299
	11	UNUSED						150-199, 275-299
	12	UNUSED						150-199, 275-299
D11598		0442/122/L029		RCPT-				150-199, 275-299
	1		W0704	632	20		25-53-14	150-199, 275-299
	2		W0704	633	20		25-53-14	150-199, 275-299
	3		W0704	634	20		25-53-14	150-199, 275-299
	4		W0704	312B	20		25-53-12	150-199, 275-299
	5	DK	W0704	025	18		25-53-12	150-199, 275-299
	6		W0704	635	20		25-53-14	150-199, 275-299
	7		W0704	312R	20		25-53-12	150-199, 275-299
	8		W0704	028	20		25-53-12	150-199, 275-299
	9		W0704	029	20		25-53-12	150-199, 275-299
	10		W0704	312Y	20		25-53-12	150-199, 275-299
	11	UNUSED						150-199, 275-299
	12	UNUSED						150-199, 275-299

HOOKUP LIST

D280T132

91-21-51

Section D11500

Page 5 End

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D11616		P035-00/ /		PLUG-				150-199, 275-299
	1		W1066	691	22		25-53-14	150-199, 275-299
	2		W1066	692	22		25-53-14	150-199, 275-299
	3		W1066	699	22		25-53-13	150-199, 275-299
	4	UNUSED						150-199, 275-299
	5		W1066	693	22		25-53-14	150-199, 275-299
	6		W1066	690	22		25-53-14	150-199, 275-299
	7		W1066	698	22		25-53-13	150-199, 275-299
	8	UNUSED						150-199, 275-299
D11620		P035-00/ /		RELAY SOCKET				050-099
D11620		P035-00/ /		RCPT-				150-199, 275-299
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W1066	03R	22		25-53-16	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W1066	37H	22		25-53-16	ALL
	7		W1066	03Q	22		25-53-16	ALL
	8		W1066	45G	22		25-53-16	ALL
D11624		P035-00/ /		RELAY SOCKET				050-099
D11624		P035-00/ /		RCPT-				150-199, 275-299
	1		W1066	792	22		25-53-14	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W1066	04M	22		25-53-16	050-099
	6		W1066	04M	22		25-53-14	150-199, 275-299
	7		W1066	02J	22		25-53-16	050-099
	7		W1066	02G	22		25-53-14	150-199, 275-299
	8		W1066	04N	22		25-53-16	050-099
	8		W1066	04N	22		25-53-14	150-199, 275-299
	9	UNUSED						ALL
	10		W1066	03B	22		25-53-16	050-099
	10		W1066	03B	22		25-53-14	150-199, 275-299
	11		W1066	02K	22		25-53-16	050-099
	11		W1066	02K	22		25-53-14	150-199, 275-299
	12		W1066	02G	22		25-53-16	050-099
	12		W1066	02J	22		25-53-14	150-199, 275-299

HOOKUP LIST
D280T132

91-21-51
Section D11600
Page 1
Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D11624		P035-00/ /		RELAY SOCKET (continued)				050-099
D11624		P035-00/ /		RCPT- (continued)				150-199, 275-299
	13		W1066	793	22		25-53-14	ALL
	14	UNUSED						ALL
D11626		P035-00/ /		RELAY SOCKET				050-099
D11626		P035-00/ /		RCPT-				150-199, 275-299
	1		W1066	04P	22		25-53-16	ALL
	2		W1066	04J	22		25-53-16	ALL
	3		W1066	03V	22		25-53-16	ALL
	4		W1066	03S	22		25-53-16	ALL
	5	UNUSED						ALL
	6		W1066	04G	22		25-53-16	ALL
	7		W1066	03U	22		25-53-16	ALL
	8	UNUSED						ALL
D11628		P035-00/ /		RELAY SOCKET				050-099
D11628		P035-00/ /		RCPT-				150-199, 275-299
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W1066	03X	22		25-53-16	ALL
	7		W1066	04B	22		25-53-16	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10		W1066	04K	22		25-53-16	ALL
	11		W1066	04A	22		25-53-16	ALL
	12		W1066	03W	22		25-53-16	ALL
	13	UNUSED						ALL
	14		W1066	04H	22		25-53-16	ALL
D11629		P036-00/ /		RELAY SOCKER-P36				ALL
	1	UNUSED						ALL
	2		W0176	85J	24		28-42-12	ALL
	3		W0176	85U	24		28-42-12	ALL
	4	UNUSED						ALL
	5		W0176	83Y	24		28-42-12	ALL
	6	UNUSED						ALL
	7		W0176	85W	24		28-22-12	ALL

HOOKUP LIST

D280T132

91-21-51

Section D11600

Page 2

Feb 06/2009



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D11629		P036-00/ /		RELAY SOCKER-P36 (continued)				ALL
	8	UNUSED						ALL
D11630		P03500/ /		RCPT				050-099
D11630		P03500/ /		RCPT-				150-199, 275-299
	1	UNUSED						050-099
	1		W1066	01V	22		25-53-14	150-199, 275-299
	2		W1066	01X	22		25-53-14	ALL
	3		W1066	198	22		25-53-14	050-099
	3	UNUSED						150-199, 275-299
	4		W1066	196	22		25-53-14	ALL
	5		W1066	197	22		25-53-14	ALL
	6	UNUSED						050-099
	6		W1066	01H	22		25-53-13	150-199, 275-299
	7		W1066	199	22		25-53-14	ALL
	8	UNUSED						050-099
	8		W1066	04L	22		25-53-14	150-199, 275-299
	9		W1066	02N	22		25-53-14	150-199, 275-299
	10		W1066	02P	22		25-53-14	150-199, 275-299
	11		W1066	02W	22		25-53-14	150-199, 275-299
	12		W1066	01J	22		25-53-13	150-199, 275-299
	13	UNUSED						150-199, 275-299
	14	UNUSED						150-199, 275-299
D11631		P036-00/ /		RELAY SOCKET-P36				ALL
	1	UNUSED						ALL
	2		W0176	85V	24		28-42-12	ALL
	3		W0176	83Y	24		28-42-12	ALL
	4		W0176	83U	24		28-22-12	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W0176	83V	24		28-22-12	ALL
	8	UNUSED						ALL
D11632		P03500/ /		RCPT				050-099
D11632		P03500/ /		RCPT-				150-199, 275-299
	1	UNUSED						ALL
	2		W1066	02Q	22		25-53-14	ALL
	3		W1066	01F	22		25-53-14	050-099
	3		W1066	01F	22		25-53-13	150-199, 275-299
	4		W1066	792	22		25-53-14	ALL

HOOKUP LIST
D280T132

91-21-51
Section D11600
Page 3
Feb 06/2009



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D11632		P03500/ /		RCPT (continued)				050-099
D11632		P03500/ /		RCPT- (continued)				150-199, 275-299
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W1066	895	22		25-53-14	ALL
	8	UNUSED						ALL
D11638		654+33/122/L029		RCPT-				150-199, 275-299
	1		W0704	554	20		25-53-14	150-199, 275-299
	2		W0704	555	20		25-53-14	150-199, 275-299
	3		W0704	567	20		25-53-14	150-199, 275-299
	4		W0704	352B	20		25-53-12	150-199, 275-299
	5	DK	W0704	629	18		25-53-12	150-199, 275-299
	6		W0704	553	20		25-53-14	150-199, 275-299
	7		W0704	352R	20		25-53-12	150-199, 275-299
	8		W0704	630	20		25-53-12	150-199, 275-299
	9		W0704	631	20		25-53-12	150-199, 275-299
	10		W0704	352Y	20		25-53-12	150-199, 275-299
	11	UNUSED						150-199, 275-299
	12	UNUSED						150-199, 275-299
D11640		0639/122/L029		RCPT-				150-199, 275-299
	1		W0704	581	20		25-53-14	150-199, 275-299
	2		W0704	582	20		25-53-14	150-199, 275-299
	3		W0704	568	20		25-53-14	150-199, 275-299
	4		W0704	318B	20		25-53-12	150-199, 275-299
	5	DK	W0704	085	18		25-53-12	150-199, 275-299
	6		W0704	557	20		25-53-14	150-199, 275-299
	7		W0704	318R	20		25-53-12	150-199, 275-299
	8		W0704	088	20		25-53-12	150-199, 275-299
	9		W0704	089	20		25-53-12	150-199, 275-299
	10		W0704	318Y	20		25-53-12	150-199, 275-299
	11	UNUSED						150-199, 275-299
	12	UNUSED						150-199, 275-299
D11654		P036-00/ /		RELAY SOCKET				050-099
D11654		P036-00/ /		RLY SKT				150-199
D11654		P036-00/ /		RELAY SOCKET				275-299
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W0176	57E	20		24-11-11	ALL

HOOKUP LIST
D280T132

91-21-51
Section D11600
Page 4
Feb 06/2009



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D11654		P036-00/ /		RELAY SOCKET (continued)				050-099
D11654		P036-00/ /		RLY SKT (continued)				150-199
D11654		P036-00/ /		RELAY SOCKET (continued)				275-299
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W0176	341	24		24-11-11	050, 150-199
	6		W0176	57C	24		24-11-11	051-099, 275-299
	7		W0176	57D	24		24-11-11	ALL
	8		W0176	57A	24		24-11-11	ALL
D11660		P039-00/ /		RELAY SOCKET				050-099
D11660		P039-00/ /		RCPT-				150-199, 275-299
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W1068	838	22		25-53-26	ALL
	7		W1068	839	22		25-53-26	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10		W1068	754	22		25-53-26	ALL
	11		W1068	840	22		25-53-26	ALL
	12		W1068	837	22		25-53-26	ALL
	13	UNUSED						ALL
	14		W1068	800	22		25-53-26	ALL
D11662		P039-00/ /		RELAY SOCKET				050-099
D11662		P039-00/ /		RCPT-				150-199, 275-299
	1		W1068	826	22		25-53-26	ALL
	2		W1068	755	22		25-53-26	ALL
	3		W1068	834	22		25-53-26	ALL
	4		W1068	806	22		25-53-26	ALL
	5	UNUSED						ALL
	6		W1068	836	22		25-53-26	ALL
	7		W1068	833	22		25-53-26	ALL
	8	UNUSED						ALL
D11664		P039-00/ /		RELAY SOCKET				050-099
D11664		P039-00/ /		RCPT-				150-199, 275-299
	1		W1068	827	22		25-53-26	ALL

HOOKUP LIST
D280T132

91-21-51
Section D11600
Page 5
Feb 06/2009



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D11664		P039-00/ /		RELAY SOCKET (continued)				050-099
D11664		P039-00/ /		RCPT- (continued)				150-199, 275-299
	2		W1068	179	22		25-53-26	050-099
	2		W1068	193	22		25-53-26	150-199, 275-299
	3		W1068	191	22		25-53-26	ALL
	4	UNUSED						ALL
	5		W1068	196	22		25-53-26	ALL
	6		W1068	194	22		25-53-26	ALL
	7		W1068	192	22		25-53-26	ALL
	8	UNUSED						ALL
D11666		P035-00/ /		PLUG				150-199, 275-299
	1		W1066	35L	22		25-53-14	150-199, 275-299
	2		W1066	35D	22		25-53-14	150-199, 275-299
	3		W1066	33L	22		25-53-13	150-199, 275-299
	4	UNUSED						150-199, 275-299
	5		W1066	35T	22		25-53-14	150-199, 275-299
	6		W1066	35C	22		25-53-14	150-199, 275-299
	7		W1066	33K	22		25-53-13	150-199, 275-299
	8	UNUSED						150-199, 275-299
D11668		P039-00/ /		RELAY SOCKET				050-099
D11668		P039-00/ /		RCPT-				150-199, 275-299
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W1068	189	22		25-53-26	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W1068	37H	22		25-53-26	ALL
	7		W1068	843	22		25-53-26	050-099
	7		W1068	188	22		25-53-26	150-199, 275-299
	8		W1068	45G	22		25-53-26	050-099
	8		W1068	182	22		25-53-26	150-199, 275-299
D11678		P035-00/ /		PLUG				150-199, 275-299
	1		W1066	701	22		25-53-14	150-199, 275-299
	2		W1066	702	22		25-53-14	150-199, 275-299
	3		W1066	709	22		25-53-13	150-199, 275-299
	4	UNUSED						150-199, 275-299
	5		W1066	703	22		25-53-14	150-199, 275-299
	6		W1066	700	22		25-53-14	150-199, 275-299

HOOKUP LIST

D280T132

91-21-51

Section D11600

Page 6

Feb 06/2009



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D11678		P035-00/ /		PLUG (continued)				150-199, 275-299
	7		W1066	708	22		25-53-13	150-199, 275-299
	8	UNUSED						150-199, 275-299
D11680		P035-00/ /		PLUG				150-199, 275-299
	1		W1066	35J	22		25-53-14	150-199, 275-299
	2		W1066	35B	22		25-53-14	150-199, 275-299
	3		W1066	33J	22		25-53-13	150-199, 275-299
	4	UNUSED						150-199, 275-299
	5		W1066	35K	22		25-53-14	150-199, 275-299
	6		W1066	35F	22		25-53-14	150-199, 275-299
	7		W1066	33H	22		25-53-13	150-199, 275-299
	8	UNUSED						150-199, 275-299
D11682		P035-00/ /		PLUG				150-199, 275-299
	1		W1066	35G	22		25-53-14	150-199, 275-299
	2		W1066	34P	22		25-53-14	150-199, 275-299
	3		W1066	33G	22		25-53-13	150-199, 275-299
	4	UNUSED						150-199, 275-299
	5		W1066	35H	22		25-53-14	150-199, 275-299
	6		W1066	34N	22		25-53-14	150-199, 275-299
	7		W1066	33F	22		25-53-13	150-199, 275-299
	8	UNUSED						150-199, 275-299
D11684		P035-00/ /		PLUG				150-199, 275-299
	1		W1066	35P	22		25-53-14	150-199, 275-299
	2		W1066	35E	22		25-53-14	150-199, 275-299
	3		W1066	33N	22		25-53-13	150-199, 275-299
	4	UNUSED						150-199, 275-299
	5		W1066	35N	22		25-53-14	150-199, 275-299
	6		W1066	34R	22		25-53-14	150-199, 275-299
	7		W1066	33M	22		25-53-13	150-199, 275-299
	8	UNUSED						150-199, 275-299
D11686		NR119/132/		PLUG-				ALL
	A		W3504	301R	20		73-21-13	ALL
	B		W3504	301Y	20		73-21-13	ALL
	C		W3504	203R	20		73-21-13	ALL
	D		W3504	401B	20		73-21-14	ALL
	E		W3504	201B	20		77-12-11	ALL
	F		W3504	040	20		73-21-11	ALL

HOOKUP LIST
D280T132

91-21-51
Section D11600
Page 7
Feb 06/2009



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D11686		NR119/132/		PLUG- (continued)				ALL
	G		W3504	401G	20		73-21-14	ALL
	H		W3504	213R	20		73-21-17	ALL
	J		W3504	114	20		73-21-19	ALL
	K	UNUSED						ALL
	L	UNUSED						ALL
	M	UNUSED						ALL
	N	UNUSED						ALL
	P		W3504	207B	20		73-21-14	ALL
	R		W3504	207R	20		73-21-14	ALL
	S		W3504	206B	20		73-21-11	ALL
	T		W3504	208R	20		73-21-14	ALL
	U		W3504	212R	20		73-21-14	ALL
	V		W3504	205R	20		73-21-14	ALL
	W	UNUSED						ALL
	X		W3504	301B	20		73-21-13	ALL
	Y		W3504	203B	20		73-21-13	ALL
	Z	UNUSED						ALL
	=CC	G3	W3504	028Z			73-21-14	ALL
	=CC	G3	W3504	040Z			73-21-11	ALL
	=CC	G3	W3504	101Z			73-21-14	ALL
	=CC	G3	W3504	114Z			73-21-19	ALL
	=CC	G3	W3504	201Z			77-12-11	ALL
	=CC	G3	W3504	203Z			73-21-13	ALL
	=CC	G3	W3504	205Z			73-21-14	ALL
	=CC	G3	W3504	206Z			73-21-11	ALL
	=CC	G3	W3504	207Z			73-21-14	ALL
	=CC	G3	W3504	208Z			73-21-14	ALL
	=CC	G3	W3504	211Z			73-21-12	ALL
	=CC	G3	W3504	212Z			73-21-14	ALL
	=CC	G3	W3504	213Z			73-21-17	ALL
	=CC	G3	W3504	301Z			73-21-13	ALL
	=CC	G3	W3504	401Z			73-21-14	ALL
	A-		W3504	201R	20		77-12-11	ALL
	B-	UNUSED						ALL
	C-		W3504	211B	20		73-21-17	ALL
	D-	UNUSED						ALL
	E-	UNUSED						ALL
	F-	UNUSED						ALL
	G-		W3504	401Y	20		73-21-14	ALL
	H-		W3504	208B	20		73-21-14	ALL

HOOKUP LIST

D280T132

91-21-51

Section D11600

Page 8

Feb 06/2009



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D11686		NR119/132/		PLUG- (continued)				ALL
	I-		W3504	212B	20		73-21-14	ALL
	J-		W3504	205B	20		73-21-14	ALL
	K-		W3504	211R	20		73-21-12	ALL
	M-		W3504	028	20		73-21-14	ALL
	N-	UNUSED						ALL
	P-		W3504	206R	20		73-21-11	ALL
	Q-		W3504	101	20		73-21-14	ALL
	R-		W3504	401R	20		73-21-14	ALL
	S-		W3504	213B	20		73-21-17	ALL
	T-	UNUSED						ALL
D11688		0401/203/R092		RCPT-				275-299
	=1		W1222	105	20		33-51-16	275-299
D11690		0401/203/R092		PLUG-				275-299
	=1		W1222	106	20		33-51-16	275-299
D11692		0877/202/R096		RCPT-				275-299
	=1		W0834	037	20		33-51-16	275-299
D11694		0877/202/R096		PLUG-				275-299
	=1		W0834	017	20		33-51-16	275-299
D11696		1010/202/R092		RCPT-				275-299
	=1		W1222	118	20		33-51-16	275-299
D11698		1010/202/R092		PLUG-				275-299
	=1		W1222	109	20		33-51-16	275-299

HOOKUP LIST

D280T132

91-21-51

Section D11600

Page 9 End

Feb 06/2009



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D11700		1406/202/R092		RCPT-				275-299
	= 1		W0836	012	20		33-51-16	275-299
D11702		1406/202/R092		PLUG-				275-299
	= 1		W0836	013	20		33-51-16	275-299
D11704		P035-00/ /		PLUG				150-199, 275-299
	1	UNUSED						150-199, 275-299
	2		W1066	766	22		25-53-14	150-199, 275-299
	3		W1066	763	22		25-53-13	150-199, 275-299
	4	UNUSED						150-199, 275-299
	5		W1066	761	22		25-53-14	150-199, 275-299
	6		W1066	34J	22		25-53-14	150-199, 275-299
	7		W1066	762	22		25-53-14	150-199, 275-299
	8		W1066	664	22		25-53-14	150-199, 275-299
D11706		0445/203/L092		RCPT-				275-299
	= 1		W0784	119	20		33-51-17	275-299
D11708		0445/203/L092		PLUG-				275-299
	= 1		W0784	120	20		33-51-17	275-299
D11710		0988/203/L092		RCPT-				275-299
	= 1		W0790	119	20		33-51-17	275-299
D11712		0988/203/L092		PLUG-				275-299
	= 1		W0790	120	20		33-51-17	275-299
D11714		1362/203/L092		RCPT-				275-299
	= 1		W0788	119	20		33-51-17	275-299
D11716		1362/203/L092		PLUG-				275-299
	= 1		W0788	120	20		33-51-17	275-299
D11718		0290/205/L085		RCPT-				275-299
	= 1		W0832	021	20		33-51-14	275-299
D11720		0290/205/L085		PLUG-				275-299
	= 1		W0832	022	20		33-51-14	275-299

HOOKUP LIST

D280T132

91-21-51

Section D11700

Page 1

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D11722		0290/205/R085		RCPT-				275-299
	= 1		W0832	023	20		33-51-14	275-299
D11724		0290/205/R085		PLUG-				275-299
	= 1		W0832	024	20		33-51-14	275-299
D11726		0857/211/L085		RCPT-				275-299
	= 1		W0834	021	20		33-51-14	275-299
D11728		0857/211/L085		PLUG-				275-299
	= 1		W0834	022	20		33-51-14	275-299
D11730		0857/211/R085		RCPT-				275-299
	= 1		W0834	023	20		33-51-14	275-299
D11732		0857/211/R085		PLUG-				275-299
	= 1		W0834	024	20		33-51-14	275-299
D11734		0901/211/L085		RCPT-				275-299
	= 1		W0834	031	20		33-51-14	275-299
D11736		0901/211/L085		PLUG-				275-299
	= 1		W0834	032	20		33-51-14	275-299
D11738		0901/211/R085		RCPT-				275-299
	= 1		W0834	033	20		33-51-14	275-299
D11740		0901/211/R085		PLUG-				275-299
	= 1		W0834	034	20		33-51-14	275-299
D11742		1537/205/L085		RCPT-				275-299
	= 1		W0836	021	20		33-51-14	275-299
D11744		1537/205/L085		PLUG-				275-299
	= 1		W0836	022	20		33-51-14	275-299
D11746		1537/205/R085		RCPT-				275-299
	= 1		W0836	023	20		33-51-14	275-299

HOOKUP LIST

D280T132

91-21-51

Section D11700

Page 2

Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D11748		1537/205/R085		PLUG-				275-299
	= 1		W0836	024	20		33-51-14	275-299
D11750		P036-00/ /		PLUG-P036				ALL
	A1		W0176	11K	24		73-21-11	ALL
	A2		W0176	11L	24		73-21-11	ALL
	A3	UNUSED						ALL
	B1		W0176	18P	22		73-21-11	ALL
	B2		W0176	18T	20		73-21-11	ALL
	B3	UNUSED						ALL
	X1		W0176	11M	24		73-21-11	ALL
	X2		W0176	11N	22		73-21-11	ALL
	Y1		W0176	11G	24		73-21-11	ALL
	Y2		W0176	11H	22		73-21-11	ALL
	DED		W0176	18PZ			73-21-11	ALL
			W0176	11J	20		73-21-11	ALL
			W0176	11KZ			73-21-11	ALL
			W0176	11LZ			73-21-11	ALL
D11752		P036-00/ /		PLUG-P36				ALL
	A1		W0176	11C	24		73-21-11	ALL
	A2		W0176	11D	24		73-21-11	ALL
	A3	UNUSED						ALL
	B1		W0176	04V	22		76-11-11	050-099, 155-199, 275-299
	B1		W0176	04V	20		76-11-11	150-154
	B2		W0176	74K	20		76-11-11	ALL
	B3	UNUSED						ALL
	X1		W0176	11E	24		73-21-11	ALL
	X2		W0176	11F	22		73-21-11	ALL
	Y1		W0176	91L	24		76-11-11	050-099
	Y1		W0176	91L	22		76-11-11	150-199, 275-299
	Y2		W0176	11A	22		73-21-11	ALL
			W0176	11B	20		73-21-11	ALL
			W0176	11CZ			73-21-11	ALL
			W0176	11DZ			73-21-11	ALL
D11754		P037-00/ /		PLUG-P37				ALL
	A1		W0192	18J	24		73-21-11	ALL
	A2		W0192	18L	24		73-21-11	ALL
	A3	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D11700

Page 3

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D11754		P037-00/ /		PLUG-P37 (continued)				ALL
	B1		W0192	67R	22		73-21-11	ALL
	B2		W0192	67T	20		73-21-11	ALL
	B3	UNUSED						ALL
	X1		W0192	18M	24		73-21-11	ALL
	X2		W0192	18N	22		73-21-11	ALL
	Y1		W0192	18G	24		73-21-11	ALL
	Y2		W0192	18H	22		73-21-11	ALL
	DED		W0192	67RZ			73-21-11	ALL
			W0192	18JZ			73-21-11	ALL
			W0192	18K	20		73-21-11	ALL
			W0192	18LZ			73-21-11	ALL
D11756		P037-00/ /		PLUG-P37				ALL
	A1		W0192	18C	24		73-21-11	ALL
	A2		W0192	18D	24		73-21-11	ALL
	A3	UNUSED						ALL
	B1		W0192	70P	20		76-11-11	ALL
	B2		W0192	70N	20		76-11-11	ALL
	B3	UNUSED						ALL
	X1		W0192	18E	24		73-21-11	ALL
	X2		W0192	18F	22		73-21-11	ALL
	Y1		W0192	91L	24		76-11-11	050-099
	Y1		W0192	91L	22		76-11-11	150-199, 275-299
	Y2		W0192	18A	22		73-21-11	ALL
			W0192	18B	20		73-21-11	ALL
			W0192	18CZ			73-21-11	ALL
			W0192	18DZ			73-21-11	ALL
D11758		P033-00/ /		RELAY SOCKET				ALL
	1		W0142	18C	24		73-21-14	ALL
	2		W0142	18G	24		73-21-14	ALL
	3		W0142	18A	20		22-32-13	ALL
	4	UNUSED						ALL
	5		W0142	18D	24		73-21-14	ALL
	6		W0142	18F	24		73-21-14	ALL
	7		W0142	18B	24		22-32-13	ALL
	8	UNUSED						ALL
			W0142	18CZ			73-21-14	ALL
			W0142	18DZ			73-21-14	ALL
			W0142	18FZ			73-21-14	ALL

HOOKUP LIST
D280T132

91-21-51
Section D11700
Page 4
Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D11758		P033-00/ /		RELAY SOCKET (continued)				ALL
			W0142	18GZ			73-21-14	ALL
			W0142	18J	24		73-21-14	ALL
			W0142	19A	24		73-21-14	ALL
			W0142	19B	24		73-21-14	ALL
D11760		1406/200/R092		PLUG-				275-299
	1	UNUSED						275-299
	2	UNUSED						275-299
	3		W0836	201B	20		33-51-16	275-299
	4		W0836	016	20		33-51-16	275-299
	5	UNUSED						275-299
	6	UNUSED						275-299
	7		W0836	017	20		33-51-16	275-299
	8	UNUSED						275-299
	9		W0836	201R	20		33-51-16	275-299
	10		W0836	018	20		33-51-16	275-299
	11	UNUSED						275-299
	12	UNUSED						275-299
D11786A		E01/03/		PLUG-PART OF D11786				ALL
	A01	UNUSED						ALL
	A02	UNUSED						ALL
	A03	UNUSED						ALL
	A04	UNUSED						ALL
	A05	UNUSED						ALL
	A06	UNUSED						ALL
	A07	UNUSED						ALL
	A08	UNUSED						ALL
	A09	UNUSED						ALL
	A10		W0105	635	24		73-21-17	ALL
	A11		W0105	636	24		73-21-17	ALL
	A12	UNUSED						ALL
	A13	UNUSED						ALL
	A14	UNUSED						ALL
	A15	UNUSED						ALL
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04	UNUSED						ALL
	B05	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D11700

Page 5

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D11786A		E01/03/		PLUG-PART OF D11786 (continued)				ALL
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09		W0105	613	24		77-35-11	ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13	UNUSED						ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	C01	UNUSED						ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05	UNUSED						ALL
	C06	UNUSED						ALL
	C07	UNUSED						ALL
	C08	UNUSED						ALL
	C09	UNUSED						ALL
	C10	UNUSED						ALL
	C11		W0105	296R	24		73-21-14	ALL
	C12		W0105	296B	24		73-21-14	ALL
	C13	UNUSED						ALL
	C14	UNUSED						ALL
	C15	UNUSED						ALL
	D01		W0105	537R	24		77-35-11	ALL
	D02		W0105	537B	24		77-35-11	ALL
	D03	UNUSED						ALL
	D04	UNUSED						ALL
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	D08	UNUSED						ALL
	D09	UNUSED						ALL
	D10	UNUSED						ALL
	D11	UNUSED						ALL
	D12	UNUSED						ALL
	D13		W0105	614	24		77-35-11	ALL
	D14		W0105	615	22		77-35-11	ALL
	D15	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D11700

Page 6

Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D11786A		E01/03/		PLUG-PART OF D11786 (continued)				ALL
	DED		W0105	537Z			77-35-11	ALL
			W0105	296	20		73-21-14	ALL
			W0105	296Z			73-21-14	ALL
			W0105	635Z			73-21-17	ALL
			W0105	636Z			73-21-17	ALL
			W0105	637	20		73-21-17	ALL
D11786B		E01/03/		PLUG-PART OF D11786				ALL
	A01	UNUSED						ALL
	A02	UNUSED						ALL
	A03	UNUSED						ALL
	A04	UNUSED						ALL
	A05	UNUSED						ALL
	A06	UNUSED						ALL
	A07	UNUSED						ALL
	A08	UNUSED						ALL
	A09	UNUSED						ALL
	A10	UNUSED						ALL
	A11	UNUSED						ALL
	A12	UNUSED						ALL
	A13	UNUSED						ALL
	A14		W0105	693R	24		31-31-14	ALL
	A15		W0105	693B	24		31-31-14	ALL
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04	UNUSED						ALL
	B05	UNUSED						ALL
	B06	UNUSED						ALL
	B07		W0105	551R	24		73-21-14	ALL
	B08		W0105	551B	24		73-21-14	ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13	UNUSED						ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	C01	UNUSED						ALL
	C02	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D11700

Page 7

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D11786B		E01/03/		PLUG-PART OF D11786 (continued)				ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05	UNUSED						ALL
	C06	UNUSED						ALL
	C07	UNUSED						ALL
	C08	UNUSED						ALL
	C09	UNUSED						ALL
	C10	UNUSED						ALL
	C11	UNUSED						ALL
	C12	UNUSED						ALL
	C13	UNUSED						ALL
	C14	UNUSED						ALL
	C15	UNUSED						ALL
	D01		W0105	540R	24		77-35-11	ALL
	D02		W0105	540B	24		77-35-11	ALL
	D03	UNUSED						ALL
	D04	UNUSED						ALL
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	D08	UNUSED						ALL
	D09	UNUSED						ALL
	D10	UNUSED						ALL
	D11	UNUSED						ALL
	D12		W0105	604	24		31-31-14	ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15	UNUSED						ALL
	DED		W0105	540Z			77-35-11	ALL
			W0105	551	20		73-21-14	ALL
			W0105	551Z			73-21-14	ALL
			W0105	693	20		31-31-14	ALL
			W0105	693Z			31-31-14	ALL
D11786C		E01/03/		PLUG-PART OF D11786				ALL
	1	UNUSED						ALL
	2		W0105	605	24		77-35-11	ALL
	3		W0105	609	22		77-35-11	ALL
	4		W0105	608	22		77-35-11	ALL
	5	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D11700
Page 8
Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D11786C		E01/03/		PLUG-PART OF D11786 (continued)				ALL
	= C1	UNUSED						ALL
	= C5	UNUSED						ALL
D11788A		//		PLUG-PART OF D11788				ALL
	A01	UNUSED						ALL
	A02	UNUSED						ALL
	A03	UNUSED						ALL
	A04	UNUSED						ALL
	A05	UNUSED						ALL
	A06	UNUSED						ALL
	A07	UNUSED						ALL
	A08	UNUSED						ALL
	A09	UNUSED						ALL
	A10		W0016	502	24		73-21-17	ALL
	A11		W0016	501	24		73-21-17	ALL
	A12	UNUSED						ALL
	A13	UNUSED						ALL
	A14	UNUSED						ALL
	A15	UNUSED						ALL
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04	UNUSED						ALL
	B05	UNUSED						ALL
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09		W0016	190	24		77-35-11	ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13	UNUSED						ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	C01	UNUSED						ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05	UNUSED						ALL
	C06	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D11700

Page 9

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D11788A		//		PLUG-PART OF D11788 (continued)				ALL
	C07	UNUSED						ALL
	C08	UNUSED						ALL
	C09	UNUSED						ALL
	C10	UNUSED						ALL
	C11		W0016	232R	24		73-21-14	ALL
	C12		W0016	232B	24		73-21-14	ALL
	C13	UNUSED						ALL
	C14	UNUSED						ALL
	C15	UNUSED						ALL
	D01		W0016	229R	24		77-35-11	ALL
	D02		W0016	229B	24		77-35-11	ALL
	D03	UNUSED						ALL
	D04	UNUSED						ALL
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	D08	UNUSED						ALL
	D09	UNUSED						ALL
	D10	UNUSED						ALL
	D11	UNUSED						ALL
	D12	UNUSED						ALL
	D13		W0016	191	24		77-35-11	ALL
	D14		W0016	192	24		77-35-11	ALL
	D15	UNUSED						ALL
	DED		W0016	229Z			77-35-11	ALL
			W0016	232	20		73-21-14	ALL
			W0016	232Z			73-21-14	ALL
			W0016	501Z			73-21-17	ALL
			W0016	502Z			73-21-17	ALL
			W0016	503	20		73-21-17	ALL
D11788B		//		PART B OF D11788				ALL
	A01	UNUSED						ALL
	A02	UNUSED						ALL
	A03	UNUSED						ALL
	A04	UNUSED						ALL
	A05	UNUSED						ALL
	A06	UNUSED						ALL
	A07	UNUSED						ALL
	A08	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D11700
Page 10
Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D11788B		//		PART B OF D11788 (continued)				ALL
	A09	UNUSED						ALL
	A10	UNUSED						ALL
	A11	UNUSED						ALL
	A12	UNUSED						ALL
	A13	UNUSED						ALL
	A14		W0016	226R	24		31-31-14	ALL
	A15		W0016	226B	24		31-31-14	ALL
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04	UNUSED						ALL
	B05	UNUSED						ALL
	B06	UNUSED						ALL
	B07		W0016	227R	24		73-21-14	ALL
	B08		W0016	227B	24		73-21-14	ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13	UNUSED						ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	C01	UNUSED						ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05	UNUSED						ALL
	C06	UNUSED						ALL
	C07	UNUSED						ALL
	C08	UNUSED						ALL
	C09	UNUSED						ALL
	C10	UNUSED						ALL
	C11	UNUSED						ALL
	C12	UNUSED						ALL
	C13	UNUSED						ALL
	C14	UNUSED						ALL
	C15	UNUSED						ALL
	D01		W0016	231R	24		77-35-11	ALL
	D02		W0016	231B	24		77-35-11	ALL
	D03	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D11700

Page 11

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D11788B		//		PART B OF D11788 (continued)				ALL
	D04	UNUSED						ALL
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	D08	UNUSED						ALL
	D09	UNUSED						ALL
	D10	UNUSED						ALL
	D11	UNUSED						ALL
	D12		W0016	181	24		31-31-14	ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15	UNUSED						ALL
	DED		W0016	231Z			77-35-11	ALL
			W0016	226	20		31-31-14	ALL
			W0016	226Z			31-31-14	ALL
			W0016	227	20		73-21-14	ALL
			W0016	227Z			73-21-14	ALL
D11788C		//		PART C OF D11788				ALL
	1	UNUSED						ALL
	2		W0016	187	24		77-35-11	ALL
	3		W0016	189	24		77-35-11	ALL
	4		W0016	188	24		77-35-11	ALL
	5	UNUSED						ALL
	=C1	UNUSED						ALL
	=C5	UNUSED						ALL
D11792		P036-00/ /		RELAY SOCKET-				050-099
D11792		P036-00/ /		RLY SKT				150-199, 275-299
	1		W0176	59R	24		24-11-11	ALL
	2	UNUSED						ALL
	3		W0176	59M	20		24-11-11	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W0176	59N	24		24-11-11	ALL
	7		W0176	59P	24		24-11-11	ALL
	8		W0176	59L	24		24-11-11	ALL
D11796		P037-00/ /		RELAY SOCKET-P37				ALL
	1		W0192	21M	24		24-11-21	ALL

HOOKUP LIST
D280T132

91-21-51
Section D11700
Page 12
Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D11796		P037-00/ /		RELAY SOCKET-P37 (continued)				ALL
	2		W0192	21P	24		24-11-21	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W0192	21N	24		24-11-21	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12		W0192	21L	20		24-11-21	050-099, 275-299
	12		W0192	21L	24		24-11-21	150-199
	13		W0192	21K	24		24-11-21	ALL
	14	UNUSED						ALL
D11798		P036-00/ /		RELAY SOCKET				ALL
	1		W0176	19S	20		73-21-11	ALL
	2		W0176	18S	20		73-21-11	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W0176	08P	24		32-09-11	ALL
	7		W0176	73J	24		21-45-22	ALL
	8		W0176	72R	20		21-45-22	ALL
	9	UNUSED						ALL
	10		W0176	47A	22		21-66-11	050-099, 162-199
	10	UNUSED						150-157, 275-299
	11		W0176	48A	22		21-66-11	050-099, 162-199
	11	UNUSED						150-157, 275-299
	12		W0176	08R	24		32-09-11	ALL
	13		W0176	18T	20		73-21-11	ALL
	14	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D11700

Page 13 End

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D11800		P061-00/ /		PLUG-P61				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W0062	288	20		73-21-11	ALL
	4		W0062	291	20		73-21-11	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D11802		P061-00/ /		PLUG-P61				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W0066	188	20		73-21-11	ALL
	4		W0066	191	20		73-21-11	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D11808		P036-00/ /		SKT-P36				ALL
	1	UNUSED						ALL
	2		W0176	51H	24		21-58-12	ALL
	3		W0176	51G	24		21-58-12	ALL
	4		W0176	51J	20		21-58-12	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W0176	51F	24		21-58-12	ALL
	8	UNUSED						ALL
	DED		W0176	51FZ			21-58-12	155-199
	DED		W0176	51GZ			21-58-12	155-199

HOOKUP LIST
D280T132

91-21-51
Section D11800
Page 1
Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D11810		SHELF E0/1/01		SOCKET-RELAY				050-099
D11810		SHELF/E01/01		SOCKET-RELAY				150-199, 275-299
	A1		W0101	605Y	22		27-41-11	050-099
	A1		W0101	604Y	22		27-41-11	150-199, 275-299
	A2		W0101	601Y	22		27-41-11	ALL
	A3		W0101	604Y	22		27-41-11	050-099
	A3		W0101	605Y	22		27-41-11	150-199, 275-299
	B1	UNUSED						ALL
	B2	UNUSED						ALL
	B3	UNUSED						ALL
	X1		W0101	603	22		27-41-11	ALL
	X2		W0101	602	22		27-41-11	ALL
D11812		SHELF/E02/01		SOCKET-RELAY				ALL
	A1		W0141	606Y	22		27-41-21	ALL
	A2		W0141	603Y	22		27-41-21	ALL
	A3		W0141	607Y	22		27-41-21	ALL
	B1	UNUSED						ALL
	B2	UNUSED						ALL
	B3	UNUSED						ALL
	X1		W0141	605	22		27-41-21	ALL
	X2		W0141	604	22		27-41-21	ALL
D11814		P033-00/-/		RELAY SOCKET-P33				050-099
D11814		P033-00/ /		RELAY SOCKET-P33				150-199, 275-299
	A1		W0144	104	20		30-71-21	050-099, 155-199
	A1		W0144	104	22		30-71-21	150-154, 275-299
	A2		W0144	102	20		30-71-21	050-099, 155-199
	A2		W0144	102	22		30-71-21	150-154, 275-299
	A3	UNUSED						ALL
	B1		W0144	107	20		30-71-21	050-099
	B1	UNUSED						150-199, 275-299
	B2		W0144	106	20		30-71-21	050-099
	B2	UNUSED						150-199, 275-299
	B3	UNUSED						ALL
	X1		W0144	103	20		30-71-21	050-099, 155-199
	X1		W0144	103	22		30-71-21	150-154, 275-299
	X2		W0144	105	20		30-71-21	050-099, 155-199
	X2		W0144	105	22		30-71-21	150-154, 275-299

HOOKUP LIST

D280T132

91-21-51

Section D11800

Page 2

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D11822		1270/280/0		PLUG				150-199
	1		W1579	007	20		23-32-11	150-199
	2		W1579	004	20		23-32-13	150-199
	3		W1579	005	20		23-32-13	150-199
	4		W1579	008	20		23-32-11	150-199
	5		W1579	006	20		23-32-13	150-199
	6		W1579	001	24		23-32-13	150-199
	7		W1579	002	24		23-32-13	150-199
	8		W1579	003	24		23-32-13	150-199
	9	UNUSED						150-199
	10	UNUSED						150-199
	11	UNUSED						150-199
	12	UNUSED						150-199
D11824		1270/280/0		PLUG-COAXIAL				150-199
	= A1		W1579	01CX			23-32-13	150-199
	= C1		W1579	01CO			23-32-13	150-199
D11826		P036-00/-/		SKT-P36				050-099
D11826		P036-00/ /		SKT-P36				150-199, 275-299
	A1	UNUSED						ALL
	A2		W0176	272	22		30-21-11	ALL
	A3		W0176	874	22		30-21-11	050-099, 150-199
	A3		W0176	882	22		30-21-11	275-299
	B1		W0176	276	22		30-21-11	ALL
	B2		W0176	278	20		30-21-11	ALL
	B3	UNUSED						ALL
	X1		W0176	274	22		30-21-11	ALL
	X2		W0176	275	22		30-21-11	ALL
D11828		P037-00/ /		SKT-P37				ALL
	A1	UNUSED						ALL
	A2		W0192	08Q	22		30-21-11	ALL
	A3		W0192	08N	22		30-21-11	050-099, 150-199
	A3		W0192	285	22		30-21-11	275-299
	B1		W0192	286	22		30-21-11	ALL
	B2		W0192	287	20		30-21-11	ALL
	B3	UNUSED						ALL
	X1		W0192	288	22		30-21-11	ALL
	X2		W0192	290	22		30-21-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D11800

Page 3

Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D11830		154/192/L 03		PLUG-T/R LEVER INTERLOCK-L				050-099, 150-199
D11830		154/192/L003		PLUG-T/R LEVER INTERLOCK-L				275-299
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W0756	070	20		78-36-11	ALL
	4		W0756	072	22		78-36-11	ALL
	5	UNUSED						ALL
	6		W0756	062	22		78-36-11	ALL
	7	UNUSED						ALL
	8		W0756	011	22		78-36-11	ALL
	9	UNUSED						ALL
	10		W0756	061	20		78-36-11	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D11832		154/192/R03		PLUG-T/R LEVER INTERLOCK-R				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W0782	043	20		78-36-21	ALL
	4		W0782	052	22		78-36-21	ALL
	5	UNUSED						ALL
	6		W0782	032	22		78-36-21	ALL
	7	UNUSED						ALL
	8		W0782	027	22		78-36-21	ALL
	9	UNUSED						ALL
	10		W0782	030	20		78-36-21	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D11840		1507/280/L004		PLUG-A4 AFT GALLEY				275-278
D11840		1504/280/L002		PLUG-A4 AFT GALLEY				280-299
	1	UNUSED						275-299
	2	UNUSED						275-299
	3	UNUSED						275-299
	4		W0216	001	20		25-31-21	275-299
	5		W0216	009	20		25-31-21	275-299
	6		W0216	010	20		25-31-21	275-299
	7		W0216	011	20		25-31-21	275-299
	8		W0216	056	20		25-31-21	275-299
	9		W0216	015	20		25-31-21	275-299
	10		W0216	016	20		25-31-21	275-299

HOOKUP LIST

D280T132

91-21-51

Section D11800

Page 4

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D11840		1507/280/L004		PLUG-A4 AFT GALLEY (continued)				275-278
D11840		1504/280/L002		PLUG-A4 AFT GALLEY (continued)				280-299
	11		W0216	057	20		25-31-21	275-299
	12	UNUSED						275-299
	13		W0216	058	20		25-31-21	275-299
	14		W0216	059	20		25-31-21	275-299
	15		W0216	060	20		25-31-21	275-299
	16		W0216	061	20		25-31-21	275-299
	17		W0216	062	20		25-31-21	275-299
	18		W0216	063	20		25-31-21	275-299
	19		W0216	064	20		25-31-21	275-299
	20		W0216	065	20		25-31-21	275-299
	21	UNUSED						275-299
	22		W0216	066	20		25-31-21	275-299
	23		W0216	067	20		25-31-21	275-299
	24		W0216	068	20		25-31-21	275-299
	25		W0216	069	20		25-31-21	275-299
	26		W0216	070	20		25-31-21	275-299
	27		W0216	071	20		25-31-21	275-299
	28		W0216	072	20		25-31-21	275-299
	29		W0216	073	20		25-31-21	275-299
	30	UNUSED						275-299
	31		W0216	074	20		25-31-21	275-299
	32		W0216	075	20		25-31-21	275-299
	33		W0216	076	20		25-31-21	275-299
	34		W0216	077	20		25-31-21	275-299
	35		W0216	078	20		25-31-21	275-299
	36		W0216	079	20		25-31-21	275-299
	37		W0216	080	20		25-31-21	275-299
	38		W0216	081	20		25-31-21	275-299
	39	UNUSED						275-299
	40	UNUSED						275-299
	41	UNUSED						275-299
D11850		P035-00/ /		RELAY SOCKET				050-099
D11850		P035-00/ /		RCPT-				150-199, 275-299
	1	UNUSED						ALL
	2		W1066	03M	22		25-53-16	ALL
	3		W1066	03E	22		25-53-16	ALL
	4		W1066	03G	22		25-53-16	ALL
	5	UNUSED						ALL

HOOKUP LIST

D280T132



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D11850		P035-00/ /		RELAY SOCKET (continued)				050-099
D11850		P035-00/ /		RCPT- (continued)				150-199, 275-299
	6	UNUSED						ALL
	7		W1066	03L	22		25-53-16	ALL
	8	UNUSED						ALL
D11852		P039-00/ /		RELAY SOCKET				050-099
D11852		P039-00/ /		RCPT-				150-199, 275-299
	1	UNUSED						ALL
	2		W1068	707	22		25-53-26	ALL
	3		W1068	729	22		25-53-26	ALL
	4		W1068	181	22		25-53-26	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W1068	728	22		25-53-26	ALL
	8	UNUSED						ALL
D11872		370/280/0000		PLUG-				050-099
D11872		0370/280/0000		PLUG-				150-199
	1		W1230	062	20		33-22-31	050-099, 150-199
	2		W1230	007	20		33-22-31	050-099, 150-199
	3		W1230	008	20		33-22-31	050-099, 150-199
	4		W1230	121	20		33-22-31	050-099, 153-199
	4	UNUSED						150-152
	5		W1230	122	20		33-22-31	050-099, 153-199
	5	UNUSED						150-152
D11882		P036-00/ /		RELAY SOCKET				050-099, 275-276
D11882		P036-00/ /		RLY SKT				150-156, 162-166
	1		W0176	71D	22		36-11-51	050-099, 150-156, 162-166, 275-276
	2	UNUSED						050-099, 150-156, 162-166, 275-276
	3		W0176	71C	22		36-11-51	050-099, 150-156, 162-166, 275-276
	4	UNUSED						050-099, 150-156, 162-166, 275-276
	5	UNUSED						050-099, 150-156, 162-166, 275-276
	6		W0176	71B	22		36-11-51	050-099, 150-156, 162-166, 275-276
	7	UNUSED						050-099, 150-156, 162-166, 275-276
	8	UNUSED						050-099, 150-156, 162-166, 275-276
D11884		P036-00/ /		RELAY SOCKET				050-099, 275-276
D11884		P036-00/ /		RLY SKT				150-156, 162-166
	1		W0176	71J	22		36-11-51	050-099, 150-156, 162-166, 275-276

HOOKUP LIST

D280T132

91-21-51

Section D11800

Page 6

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D11884		P036-00/ /		RELAY SOCKET (continued)				050-099, 275-276
D11884		P036-00/ /		RLY SKT (continued)				150-156, 162-166
	2	UNUSED						050-099, 150-156, 162-166, 275-276
	3		W0176	71G	22		36-11-51	050-099, 150-156, 162-166, 275-276
	4	UNUSED						050-099, 150-156, 162-166, 275-276
	5	UNUSED						050-099, 150-156, 162-166, 275-276
	6		W0176	71F	22		36-11-51	050-099, 150-156, 162-166, 275-276
	7	UNUSED						050-099, 150-156, 162-166, 275-276
	8	UNUSED						050-099, 150-156, 162-166, 275-276
D11886		P036-00/ /		RELAY SOCKET				050-099, 150-156, 162-166, 275-276
	1		W0176	71R	22		36-11-61	050-099, 150-156, 162-166, 275-276
	2	UNUSED						050-099, 150-156, 162-166, 275-276
	3		W0176	71P	22		36-11-61	050-099, 150-156, 162-166, 275-276
	4	UNUSED						050-099, 150-156, 162-166, 275-276
	5	UNUSED						050-099, 150-156, 162-166, 275-276
	6		W0176	71N	22		36-11-61	050-099, 150-156, 162-166, 275-276
	7	UNUSED						050-099, 150-156, 162-166, 275-276
	8	UNUSED						050-099, 150-156, 162-166, 275-276
D11888		P036-00/ /		RELAY SOCKET				050-099, 150-156, 162-166, 275-276
	1		W0176	72C	22		36-11-61	050-099, 150-156, 162-166, 275-276
	2	UNUSED						050-099, 150-156, 162-166, 275-276
	3		W0176	71X	22		36-11-61	050-099, 150-156, 162-166, 275-276
	4	UNUSED						050-099, 150-156, 162-166, 275-276
	5	UNUSED						050-099, 150-156, 162-166, 275-276
	6		W0176	71W	22		36-11-61	050-099, 150-156, 162-166, 275-276
	7	UNUSED						050-099, 150-156, 162-166, 275-276
	8	UNUSED						050-099, 150-156, 162-166, 275-276
D11890		P036-00/ /		RELAY SOCKET				050-099, 150-156, 162-166, 275-276
	1		W0176	72E	22		36-11-61	050-099, 150-156, 162-166, 275-276
	2	UNUSED						050-099, 150-156, 162-166, 275-276
	3		W0176	72A	22		36-11-61	050-099, 150-156, 162-166, 275-276
	4	UNUSED						050-099, 150-156, 162-166, 275-276
	5	UNUSED						050-099, 150-156, 162-166, 275-276
	6		W0176	72B	22		36-11-61	050-099, 150-156, 162-166, 275-276
	7	UNUSED						050-099, 150-156, 162-166, 275-276
	8	UNUSED						050-099, 150-156, 162-166, 275-276

HOOKUP LIST
D280T132

91-21-51
Section D11800
Page 7
Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D11892		P036-00/ /		RELAY SOCKET				050-099, 150-156, 162-166, 275-276
	1		W0176	72D	22		36-11-61	050-099, 150-156, 162-166, 275-276
	2	UNUSED						050-099, 150-156, 162-166, 275-276
	3		W0176	72F	22		36-11-61	050-099, 150-156, 162-166, 275-276
	4	UNUSED						050-099, 150-156, 162-166, 275-276
	5	UNUSED						050-099, 150-156, 162-166, 275-276
	6		W0176	71Y	22		36-11-61	050-099, 150-156, 162-166, 275-276
	7	UNUSED						050-099, 150-156, 162-166, 275-276
	8	UNUSED						050-099, 150-156, 162-166, 275-276
D11894		P037-00/ /		RELAY SOCKET				050-099, 150-155, 162-165
D11894		P036-00/ /		RELAY SOCKET				156, 166, 275-276
	1		W0192	71H	22		36-11-52	050-099, 150-156, 162-166, 275-276
	2	UNUSED						050-099, 150-156, 162-166, 275-276
	3		W0192	71B	22		36-11-52	050-099, 150-156, 162-166, 275-276
	4	UNUSED						050-099, 150-156, 162-166, 275-276
	5	UNUSED						050-099, 150-156, 162-166, 275-276
	6		W0192	71C	22		36-11-52	050-099, 150-156, 162-166, 275-276
	7	UNUSED						050-099, 150-156, 162-166, 275-276
	8	UNUSED						050-099, 150-156, 162-166, 275-276
D11896		P037-00/ /		RELAY SOCKET				050-099, 150-155, 162-165
D11896		P036-00/ /		RELAY SOCKET				156, 166, 275-276
	1		W0192	71F	22		36-11-52	050-099, 150-156, 162-166, 275-276
	2	UNUSED						050-099, 150-156, 162-166, 275-276
	3		W0192	71D	22		36-11-52	050-099, 150-156, 162-166, 275-276
	4	UNUSED						050-099, 150-156, 162-166, 275-276
	5	UNUSED						050-099, 150-156, 162-166, 275-276
	6		W0192	71E	22		36-11-52	050-099, 150-156, 162-166, 275-276
	7	UNUSED						050-099, 150-156, 162-166, 275-276
	8	UNUSED						050-099, 150-156, 162-166, 275-276
D11898		P037-00/ /		RELAY SOCKET				050-099, 150-155, 162-165
D11898		P036-00/ /		RELAY SOCKET				156, 166, 275-276
	1		W0192	71T	22		36-11-62	050-099, 150-156, 162-166, 275-276
	2	UNUSED						050-099, 150-156, 162-166, 275-276
	3		W0192	71P	22		36-11-62	050-099, 150-156, 162-166, 275-276
	4	UNUSED						050-099, 150-156, 162-166, 275-276
	5	UNUSED						050-099, 150-156, 162-166, 275-276
	6		W0192	71N	22		36-11-62	050-099, 150-156, 162-166, 275-276

HOOKUP LIST

D280T132

91-21-51

Section D11800

Page 8

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D11898		P037-00/ /		RELAY SOCKET (continued)				050-099, 150-155, 162-165
D11898		P036-00/ /		RELAY SOCKET (continued)				156, 166, 275-276
	7	UNUSED						050-099, 150-156, 162-166, 275-276
	8	UNUSED						050-099, 150-156, 162-166, 275-276

HOOKUP LIST

D280T132

91-21-51

Section D11800
Page 9 End
Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D11900		P037-00/ /		RELAY SOCKET				050-099, 150-155, 162-165
D11900		P036-00/ /		RELAY SOCKET				156, 166, 275-276
	1		W0192	71R	22		36-11-62	050-099, 150-156, 162-166, 275-276
	2	UNUSED						050-099, 150-156, 162-166, 275-276
	3		W0192	71M	22		36-11-62	050-099, 150-156, 162-166, 275-276
	4	UNUSED						050-099, 150-156, 162-166, 275-276
	5	UNUSED						050-099, 150-156, 162-166, 275-276
	6		W0192	71L	22		36-11-62	050-099, 150-156, 162-166, 275-276
	7		W0192	048	22		36-11-62	050-099, 150-156, 162-166, 275-276
	8	UNUSED						050-099, 150-156, 162-166, 275-276
D11902		P037-00/ /		RELAY SOCKET				050-099, 150-155, 162-165
D11902		P036-00/ /		RELAY SOCKET				156, 166, 275-276
	1		W0192	72E	22		36-11-62	050-099, 150-156, 162-166, 275-276
	2	UNUSED						050-099, 150-156, 162-166, 275-276
	3		W0192	71Y	22		36-11-62	050-099, 150-156, 162-166, 275-276
	4	UNUSED						050-099, 150-156, 162-166, 275-276
	5	UNUSED						050-099, 150-156, 162-166, 275-276
	6		W0192	72A	22		36-11-62	050-099, 150-156, 162-166, 275-276
	7	UNUSED						050-099, 150-156, 162-166, 275-276
	8	UNUSED						050-099, 150-156, 162-166, 275-276
D11904		P037-00/ /		RELAY SOCKET				050-099, 150-155, 162-165
D11904		P036-00/ /		RELAY SOCKET				156, 166, 275-276
	1		W0192	72D	22		36-11-62	050-099, 150-156, 162-166, 275-276
	2	UNUSED						050-099, 150-156, 162-166, 275-276
	3		W0192	72C	22		36-11-62	050-099, 150-156, 162-166, 275-276
	4	UNUSED						050-099, 150-156, 162-166, 275-276
	5	UNUSED						050-099, 150-156, 162-166, 275-276
	6		W0192	72B	22		36-11-62	050-099, 150-156, 162-166, 275-276
	7	UNUSED						050-099, 150-156, 162-166, 275-276
	8	UNUSED						050-099, 150-156, 162-166, 275-276
D11922		P019-00/ /		RLY SOCKET				050-099
D11922		P019-00/ /		RELAY SOCKET-				150-199, 280-299
	A1	UNUSED						050-099, 150-199
	A1		W1060	708	22		33-21-21	280-299
	A2	UNUSED						050-099, 150-199
	A2		W1060	682	22		33-21-21	280-299
	A3	UNUSED						050-099, 150-199, 280-299
	B1		W1060	708	22		33-21-21	050-099, 150-199

HOOKUP LIST

D280T132

91-21-51

Section D11900

Page 1

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D11922		P019-00/ /		RLY SOCKET (continued)				050-099
D11922		P019-00/ /		RELAY SOCKET- (continued)				150-199, 280-299
	B1	UNUSED						280-299
	B2		W1060	682	22		33-21-21	050-099, 150-157
	B2		W1060	008	22		33-21-21	162-199
	B2	UNUSED						280-299
	B3	UNUSED						050-099, 150-199, 280-299
	X1		W1060	706	22		33-21-21	050-099, 150-199
	X1		W1060	706	24		33-21-21	280-299
	X2		W1060	707	20		33-21-21	050-099, 280-299
	X2		W1060	707	22		33-21-21	150-199
D11930		P036-00/ /		RELAY SOCKET				050-099, 150-199, 277-299
	A1		W0182	151	18		38-32-14	050-099, 150-199, 277-299
	A2		W0182	153	18		38-32-14	050-099, 150-199, 277-299
	A3		W0182	150	18		38-32-14	050-099, 150-154
	A3	UNUSED						155-199, 277-299
	B1	UNUSED						050-099, 150-199, 277-299
	B2	UNUSED						050-099, 150-199, 277-299
	B3	UNUSED						050-099, 150-199, 277-299
	X1		W0182	155	20		38-32-14	050-099, 150-199, 277-299
	X2		W0182	152	20		38-32-14	050-099, 150-199, 277-299
D11932		P049-00/ /		RELAY SOCKET - P49				050-099, 150-155, 157-165, 277
	A1		W0030	135	18		38-32-14	050-099, 150-155, 157-165, 277
	A2		W0030	136	18		38-32-14	050-099, 150-155, 157-165, 277
	A3		W0030	137	18		38-32-14	050-099, 150-154
	A3	UNUSED						155, 157-165, 277
	B1	UNUSED						050-099, 150-155, 157-165, 277
	B2	UNUSED						050-099, 150-155, 157-165, 277
	B3	UNUSED						050-099, 150-155, 157-165, 277
	X1		W0030	133	20		38-32-14	050-099, 150-155, 157-165, 277
	X2		W0030	134	20		38-32-14	050-099, 150-155, 157-165, 277
	CAP	Y	W0030	133	20		38-32-14	167-199, 278-299
	CAP	Y	W0030	134	20		38-32-14	167-199, 278-299
	CAP	Y	W0030	135	18		38-32-14	167-199, 278-299
	CAP	Y	W0030	136	18		38-32-14	167-199, 278-299
D11962		P033-00/ /		RELAY SOCKET				ALL
	1		W0142	71F	20		29-11-14	ALL
	2		W0142	71E	20		29-11-14	ALL

HOOKUP LIST
D280T132

91-21-51
Section D11900
Page 2
Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D11962		P033-00/ /		RELAY SOCKET (continued)				ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W0142	71H	20		29-11-14	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12		W0142	71G	20		29-11-14	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	DED		W0142	71FZ			29-11-14	ALL
	DED		W0142	71HZ			29-11-14	ALL
D11964		P033-00/ /		RELAY SOCKET				ALL
	1		W0142	71B	20		29-11-14	ALL
	2		W0142	71A	20		29-11-14	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W0142	71C	20		29-11-14	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12		W0142	71D	20		29-11-14	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	DED		W0142	71BZ			29-11-14	ALL
	DED		W0142	71CZ			29-11-14	ALL
D11966		1549/185/L040		PLUG-				050-099, 150-199, 277-299
	1		W1358	041	20		38-32-14	050-099, 150-199, 277-299
	2		W1358	042	20		38-32-14	050-099, 150-199, 277-299
	3	UNUSED						050-099, 150-199, 277-299
	4	DK	W1358	044	18		38-32-14	050-099, 150-154
	4	UNUSED						155-199, 277-299
	5	DK	W1358	045	18		38-32-14	050-099, 150-199, 277-299

HOOKUP LIST
D280T132

91-21-51
Section D11900
Page 3
Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D11968		1570/185/L40		PLUG				050-099, 150-199, 277-299
	1		W1354	041	20		38-32-14	050-099, 150-199, 277-299
	2		W1354	042	20		38-32-14	050-099, 150-199, 277-299
	3	UNUSED						050-099, 150-199, 277-299
	4	DK	W1354	044	18		38-32-14	050-099, 150-154
	4	UNUSED						155-199, 277-299
	5	DK	W1354	045	18		38-32-14	050-099, 150-199, 277-299

HOOKUP LIST

D280T132

91-21-51

Section D11900

Page 4 End

Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D12002		P033-00/ /		RELAY SOCKET				ALL
	A1	UNUSED						ALL
	A2		W0142	607	22		30-11-11	ALL
	A3		W0142	608	22		30-11-11	ALL
	B1	UNUSED						ALL
	B2	UNUSED						ALL
	B3	UNUSED						ALL
	X1		W0142	700	22		30-11-11	ALL
	X2		W0142	890	22		30-11-11	ALL
D12004		P033-00/ /		RELAY SOCKET				ALL
	A1	UNUSED						ALL
	A2		W0142	800	22		30-11-11	ALL
	A3		W0142	814	22		30-11-11	ALL
	B1	UNUSED						ALL
	B2	UNUSED						ALL
	B3	UNUSED						ALL
	X1		W0142	095	22		30-11-11	ALL
	X2		W0142	891	22		30-11-11	ALL
D12020		1451/270/L073		RCPT-				050-099, 150-199
	1		W0806	232R	22		23-31-15	050-099
	1		W0806	643R	22		23-31-15	150-199
	2		W0806	232B	22		23-31-15	050-099
	2		W0806	643B	22		23-31-15	150-199
	3		W0806	522	22		33-24-12	050-099
	3		W0806	522	20		33-24-12	150-199
	4		W0806	523	22		33-24-12	050-099
	4		W0806	523	20		33-24-12	150-199
	5		W0806	524	20		33-24-12	050-099, 150-199
	6		W0806	272R	22		23-31-15	050-099
	6		W0806	271R	22		23-31-15	150-199
	7		W0806	272B	22		23-31-15	050-099
	7		W0806	271B	22		23-31-15	150-199
	8	UNUSED						050-099, 150-199
	9	UNUSED						050-099, 150-199
	10	UNUSED						050-099, 150-199
	11	UNUSED						050-099, 150-199
	12	UNUSED						050-099, 150-199

HOOKUP LIST

D280T132

91-21-51

Section D12000

Page 1

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D12022		1451/270/R073		RCPT-				050-099, 150-199
	1		W0810	232R	22		23-31-17	050-099
	1		W0810	643R	22		23-31-17	150-199
	2		W0810	232B	22		23-31-17	050-099
	2		W0810	643B	22		23-31-17	150-199
	3		W0810	556	22		33-24-14	050-099
	3		W0810	555	20		33-24-14	150-199
	4		W0810	555	22		33-24-14	050-099
	4		W0810	556	20		33-24-14	150-199
	5		W0810	557	20		33-24-14	050-099, 150-199
	6		W0810	272R	22		23-31-17	050-099
	6		W0810	270R	22		23-31-17	150-199
	7		W0810	272B	22		23-31-17	050-099
	7		W0810	270B	22		23-31-17	150-199
	8	UNUSED						050-099, 150-199
	9	UNUSED						050-099, 150-199
	10	UNUSED						050-099, 150-199
	11	UNUSED						050-099, 150-199
	12	UNUSED						050-099, 150-199
D12024		1510/285/L014		RCPT-				050-099
D12024		1451/270/L073		RCPT-				150-199
	1		W0724	109	20		35-21-12	050-099, 150-199
	2		W0724	110	20		35-21-12	050-099, 150-199
D12026		1473/285/R050		RCPT-				050-099
D12026		1451/270/R073		RCPT-				150-199
	1		W0728	110	20		35-21-13	050-099
	1		W0728	109	20		35-21-13	150-199
	2		W0728	109	20		35-21-13	050-099
	2		W0728	110	20		35-21-13	150-199
D12034		447/250/L 55		PLUG				050-099, 150-199
	1	UNUSED						050-099
	1		W0057	006	24		33-21-31	150-199
	2	UNUSED						050-099
	2		W0057	023	24		33-21-11	150-199
	3		W0057	045	22		33-22-41	050-099, 150-199
	4		W0057	043	22		33-22-41	050-099, 150-199
	5	UNUSED						050-099

HOOKUP LIST

D280T132

91-21-51

Section D12000

Page 2

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D12034		447/250/L 55		PLUG (continued)				050-099, 150-199
	5		W0057	002	22		33-21-21	150-199
	6	UNUSED						050-099
	6		W0057	024	20		33-21-11	150-199
	7	UNUSED						050-099
	7		W0057	001	22		33-21-21	150-199
	8	UNUSED						050-099
	8		W0057	022	24		33-21-11	150-199
	9		W0057	046	22		33-22-41	050-099, 150-199
	10	UNUSED						050-099
	10		W0057	021	20		33-21-11	150-199
	11		W0057	044	22		33-22-41	050-099, 150-199
	12	UNUSED						050-099
	12		W0057	008	24		33-21-31	150-199
	13	UNUSED						050-099
	13		W0057	033	24		33-21-12	150-199
	14	UNUSED						050-099
	14		W0057	009	24		33-21-31	150-199
	15	UNUSED						050-099
	15		W0057	003	22		33-21-21	150-199
	16	UNUSED						050-099
	16		W0057	034	24		33-21-12	150-199
	17	UNUSED						050-099
	17		W0057	035	24		33-21-12	150-199
	18	UNUSED						050-099
	18		W0057	005	22		33-21-21	150-199
	19	UNUSED						050-099
	19		W0057	004	20		33-21-21	150-199
	20	UNUSED						050-099
	20		W0057	025	24		33-21-11	150-199
	21	UNUSED						050-099
	21		W0057	027	24		33-21-11	150-199
	22	UNUSED						050-099
	22		W0057	028	24		33-21-11	150-199
	23	UNUSED						050-099
	23		W0057	026	24		33-21-11	150-199
	24	UNUSED						050-099
	24		W0057	029	24		33-21-12	150-199
	25	UNUSED						050-099
	25		W0057	030	24		33-21-12	150-199
	26	UNUSED						050-099

HOOKUP LIST

D280T132

91-21-51

Section D12000

Page 3

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D12034		447/250/L 55		PLUG (continued)				050-099, 150-199
	26		W0057	031	24		33-21-12	150-199
	27	UNUSED						050-099
	27		W0057	032	24		33-21-12	150-199
	28	UNUSED						050-099
	28		W0057	036	24		33-21-12	150-199
	29	UNUSED						050-099, 150-199
	30	UNUSED						050-099
	30		W0057	067	20		33-26-21	150-157, 167-199
	30		W0057	067	20		23-31-13	162-166
	31	UNUSED						050-099
	31		W0057	068	20		33-26-21	150-157, 167-199
	31		W0057	068	20		23-31-13	162-166
	32	UNUSED						050-099
	32		W0057	069	20		33-26-21	150-157, 167-199
	32		W0057	069	20		23-31-13	162-166
	33	UNUSED						050-099
	33		W0057	070	20		33-26-21	150-157, 167-199
	33		W0057	070	20		23-31-13	162-166
	34		W0057	040	22		33-22-42	050-099, 150-199
	35		W0057	039	22		33-22-42	050-099, 150-199
	36	UNUSED						050-099, 150, 153-199
	36		W0057	012	20		33-21-31	151-152
	37	UNUSED						050-099
	37		W0057	016	20		33-22-32	150-199
	38	UNUSED						050-099
	38		W0057	017	20		33-22-32	150-199
	39	UNUSED						050-099
	39		W0057	011	20		33-21-31	150-199
	40	UNUSED						050-099
	40		W0057	072	20		33-26-21	150-157, 167-199
	40		W0057	900	20		33-26-21	151-152
	40		W0057	072	20		23-31-13	162-166
	41		W0057	042	22		23-42-11	050-099, 150-199
	42	UNUSED						050-099, 150-199
	43	UNUSED						050-099, 150-199
	44	UNUSED						050-099, 150-199
	45	UNUSED						050-099, 150-199
	46	UNUSED						050-099, 150-199
	47	UNUSED						050-099, 150-199
	48	UNUSED						050-099, 150-199

HOOKUP LIST

D280T132

91-21-51

Section D12000

Page 4

Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D12034		447/250/L 55		PLUG (continued)				050-099, 150-199
	49	UNUSED						050-099, 150-199
	50	UNUSED						050-099, 150-199
	51	UNUSED						050-099, 150-199
	52	UNUSED						050-099, 150-199
	53	UNUSED						050-099, 150-199
	54	UNUSED						050-099, 150-199
	55	UNUSED						050-099, 150-199
	CAP	Y	W0057	012	20		33-21-31	150, 153-154
	CAP	Y	W0057	901	20		33-22-32	150, 153-199
	CAP	Y	W0057	012	24		33-21-31	155-199
D12052		0827/118/L015		PLUG-				ALL
	1		W0508	315Y	20		21-64-11	ALL
	2		W0508	315B	20		21-64-11	ALL
	3		W0508	315R	20		21-64-11	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D12054		0827/129/L015		PLUG-				ALL
	1		W0508	316Y	20		21-64-11	ALL
	2		W0508	316B	20		21-64-11	ALL
	3		W0508	316R	20		21-64-11	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D12000

Page 5

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D12072		349/201/L007		PLUG				150-199
	A		W0784	669	20		33-51-17	150-199
	B		W0784	668	20		33-51-17	150-199
	C		W0784	680	20		33-51-17	150-199
	D		W0784	679	20		33-51-17	150-199
	E	UNUSED						150-199
	F	UNUSED						150-199
	G	UNUSED						150-199
	H	UNUSED						150-199
	J	UNUSED						150-199
	K	UNUSED						150-199
	L	UNUSED						150-199
	M	UNUSED						150-199
D12074		349/201/L029		PLUG				050-099, 150-199
	A		W0784	671	20		33-51-17	050-099, 150-199
	B		W0784	670	20		33-51-17	050-099, 150-199
	C		W0784	685	20		33-51-17	050-099, 150-199
	D		W0784	684	20		33-51-17	050-099, 150-199
	E	UNUSED						050-099, 150-199
	F	UNUSED						050-099, 150-199
	G	UNUSED						050-099, 150-199
	H	UNUSED						050-099, 150-199
	J	UNUSED						050-099, 150-199
	K	UNUSED						050-099, 150-199
	L	UNUSED						050-099, 150-199
	M	UNUSED						050-099, 150-199
D12076		1487/201/L65		PLUG				050-099, 150-199
	A		W0788	660	20		33-51-17	050-099, 150-199
	B		W0788	659	20		33-51-17	050-099, 150-199
	C		W0788	664	20		33-51-17	050-099
	C		W0788	667	20		33-51-17	150-199
	D		W0788	663	20		33-51-17	050-099
	D		W0788	668	20		33-51-17	150-199
	E	UNUSED						050-099, 150-199
	F	UNUSED						050-099, 150-199
	G	UNUSED						050-099, 150-199
	H	UNUSED						050-099, 150-199
	J	UNUSED						050-099, 150-199

HOOKUP LIST

D280T132

91-21-51

Section D12000

Page 6

Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D12076		1487/201/L65		PLUG (continued)				050-099, 150-199
	K	UNUSED						050-099, 150-199
	L	UNUSED						050-099, 150-199
	M	UNUSED						050-099, 150-199
D12078		1484/201/L28		PLUG				150-199
	A		W0788	662	20		33-51-17	150-199
	B		W0788	661	20		33-51-17	150-199
	C		W0788	665	20		33-51-17	150-199
	D		W0788	666	20		33-51-17	150-199
	E	UNUSED						150-199
	F	UNUSED						150-199
	G	UNUSED						150-199
	H	UNUSED						150-199
	J	UNUSED						150-199
	K	UNUSED						150-199
	L	UNUSED						150-199
	M	UNUSED						150-199
D12080		1487/201/R057		PLUG				050-099
D12080		1487/201/R 57		PLUG				150-199
	A		W0790	675	20		33-51-16	050-099, 150-199
	B		W0790	676	20		33-51-16	050-099, 150-199
	C		W0790	661	20		33-51-16	050-099, 150-199
	D		W0790	662	20		33-51-16	050-099, 150-199
	E	UNUSED						050-099, 150-199
	F	UNUSED						050-099, 150-199
	G	UNUSED						050-099, 150-199
	H	UNUSED						050-099, 150-199
	J	UNUSED						050-099, 150-199
	K	UNUSED						050-099, 150-199
	L	UNUSED						050-099, 150-199
	M	UNUSED						050-099, 150-199
D12082		1521/201/R019		PLUG				050-099
D12082		1484/201/R 28		PLUG				150-199
	A		W0790	678	20		33-51-16	050-099, 150-199
	B		W0790	677	20		33-51-16	050-099, 150-199
	C		W0790	658	20		33-51-16	050-099, 150-199
	D		W0790	659	20		33-51-16	050-099, 150-199
	E	UNUSED						050-099, 150-199

HOOKUP LIST

D280T132

91-21-51

Section D12000

Page 7

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D12082		1521/201/R019		PLUG (continued)				050-099
D12082		1484/201/R 28		PLUG (continued)				150-199
	F	UNUSED						050-099, 150-199
	G	UNUSED						050-099, 150-199
	H	UNUSED						050-099, 150-199
	J	UNUSED						050-099, 150-199
	K	UNUSED						050-099, 150-199
	L	UNUSED						050-099, 150-199
	M	UNUSED						050-099, 150-199
D12084		P025-00/ /		RELAY SOCKET-				275-299
	A1	UNUSED						275-299
	A2	UNUSED						275-299
	A3	UNUSED						275-299
	B1		W1064	703	22		33-22-42	275-299
	B2		W1064	701	22		33-22-42	275-299
	B3		W1064	704	22		33-22-42	275-299
	X1		W1064	700	22		33-22-42	275-299
	X2		W1064	702	22		33-22-42	275-299
D12086J		654+120/283/0000		RECPT				150-199
	=1		W0784	075	22		33-22-21	150-199
D12086P		654+120/283/0000		PLUG				151-152, 162-199
	=1		W2010	001	22		33-22-21	151-152
	=1		W2010	901	22		33-22-21	162-199
D12088J		654+120/283/0000		RECPT				151-152, 162-199
	=1		W2010	003	22		33-22-21	151-152
	=1		W2010	902	22		33-22-21	162-199
D12088P		654+120/283/0000		PLUG				150-199
	=1		W0784	801	20		33-22-21	150-199
D12090		1480/270/L 55		RCPT				050-099
D12090		1480/270/L55		RECPT				150-199
	=1		W1240	072	18		33-22-31	050-099, 150-199

HOOKUP LIST
D280T132

91-21-51
Section D12000
Page 8
Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D12092		1480/270/L 55		PLUG				050-099
D12092		1480/270/L55		RECPT				150-199
	= 1		W1240	076	18		33-22-31	050-099, 150-199
D12098		1561/282/L062		PLUG-A2 GALLEY				275-278
D12098		1557/280/L050		PLUG-A2 GALLEY				280-299
	1	UNUSED						275-299
	2	UNUSED						275-299
	3	UNUSED						275-299
	4		W0216	001	20		25-31-21	275-299
	5		W0216	009	20		25-31-21	275-299
	6		W0216	010	20		25-31-21	275-299
	7		W0216	011	20		25-31-21	275-299
	8		W0216	056	20		25-31-21	275-299
	9	UNUSED						275-299
	10	UNUSED						275-299
	11	UNUSED						275-299
	12	UNUSED						275-299
	13		W0216	058	20		25-31-21	275-299
	14		W0216	059	20		25-31-21	275-299
	15		W0216	060	20		25-31-21	275-299
	16		W0216	061	20		25-31-21	275-299
	17		W0216	062	20		25-31-21	275-299
	18	UNUSED						275-299
	19	UNUSED						275-299
	20	UNUSED						275-299
	21	UNUSED						275-299
	22		W0216	066	20		25-31-21	275-299
	23		W0216	067	20		25-31-21	275-299
	24		W0216	068	20		25-31-21	275-299
	25		W0216	069	20		25-31-21	275-299
	26		W0216	070	20		25-31-21	275-299
	27	UNUSED						275-299
	28	UNUSED						275-299
	29	UNUSED						275-299
	30	UNUSED						275-299
	31		W0216	074	20		25-31-21	275-299
	32		W0216	075	20		25-31-21	275-299
	33		W0216	076	20		25-31-21	275-299
	34		W0216	077	20		25-31-21	275-299
	35		W0216	078	20		25-31-21	275-299

HOOKUP LIST

D280T132

91-21-51

Section D12000

Page 9

Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D12098		1561/282/L062		PLUG-A2 GALLEY (continued)				275-278
D12098		1557/280/L050		PLUG-A2 GALLEY (continued)				280-299
	36	UNUSED						275-299
	37	UNUSED						275-299
	38	UNUSED						275-299
	39	UNUSED						275-299
	40	UNUSED						275-299
	41	UNUSED						275-299

HOOKUP LIST

D280T132

91-21-51

Section D12000
Page 10 End
Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D12100		1561/281/L062		PLUG-A2 GALLEY				275-278
D12100		1555/280/L050		PLUG-A2 GALLEY				280-299
	1	UNUSED						275-299
	2	UNUSED						275-299
	3		W0226	019	16		25-31-21	275-299
	4		W0226	026	16		25-31-21	275-299
	5		W0226	027	16		25-31-21	275-299
	6		W0226	028	16		25-31-21	275-299
	7		W0226	029	16		25-31-21	275-299
	8		W0226	030	16		25-31-21	275-299
	9		W0226	031	16		25-31-21	275-299
	10		W0226	032	16		25-31-21	275-299
	11		W0226	033	16		25-31-21	275-299
	12		W0226	034	16		25-31-21	275-299
	13		W0226	035	16		25-31-21	275-299
	14		W0226	036	16		25-31-21	275-299
D12102		P036-00/ /		RELAY SOCKET				ALL
	A1	UNUSED						ALL
	A2		W0176	62T	24		21-43-11	ALL
	A3		W0176	62U	24		21-43-11	ALL
	B1	UNUSED						ALL
	B2	UNUSED						ALL
	B3	UNUSED						ALL
	X1		W0176	62R	24		21-43-11	ALL
	X2		W0176	62S	24		21-43-11	ALL
D12108		1526/280/L006		PLUG-				275-299
	1	UNUSED						275-299
	2		W0100	028	22		33-27-11	275-299
	3		W0100	029	22		33-27-11	275-299
	4	UNUSED						275-299
	5		W0100	027	22		33-27-11	275-299
	6	UNUSED						275-299
	7		W0100	030	22		33-27-11	275-299
	8		W0100	001	22		33-27-11	275-299
	9		W0100	013	22		33-27-11	275-299
	10		W0100	012	22		33-27-11	275-299
	11		W0100	004	22		33-27-11	275-299
	12		W0100	005	22		33-27-11	275-299

HOOKUP LIST

D280T132

91-21-51

Section D12100

Page 1

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D12110		1526/280/R006		PLUG-				275-299
	1	UNUSED						275-299
	2		W0100	H-A			33-27-11	275-299
	3		W0100	H-B			33-27-11	275-299
	4	UNUSED						275-299
	5		W0100	031	22		33-27-11	275-299
	6	UNUSED						275-299
	7		W0100	032	22		33-27-11	275-299
	8		W0100	009	22		33-27-11	275-299
	9		W0100	G-B			33-27-11	275-299
	10		W0100	G-A			33-27-11	275-299
	11		W0100	016	22		33-27-11	275-299
	12		W0100	017	22		33-27-11	275-299
D12122		P036-00/ /		RELAY SOCKET				050-099, 150-199
	1		W0176	81J	22		30-21-11	050-099, 150-199
	2		W0176	822	22		30-21-11	050-099, 150-199
	3	UNUSED						050-099, 150-199
	4		W0176	81L	24		73-21-16	050-099, 150-199
	5		W0176	81R	20		73-21-16	050-099, 150-199
	6		W0176	81E	22		30-21-11	050-099, 150-199
	7		W0176	81P	22		73-21-19	050-099, 150-199
	8	UNUSED						050-099, 150-199
	9		W0176	80U	22		30-21-11	050-099, 150-199
	10		W0176	80V	22		30-21-11	050-099, 150-199
	11		W0176	81M	22		30-21-11	050-099, 150-199
	12		W0176	81K	20		30-21-11	050-099, 150-199
	13		W0176	20U	22		30-21-11	050-099, 150-199
	14		W0176	684	22		73-21-19	050-099, 150-199
D12124		P037-00/ /		RELAY SOCKET				050-099, 150-199
	1		W0192	82A	22		30-21-11	050-099, 150-199
	2		W0192	840	22		30-21-11	050-099, 150-199
	3	UNUSED						050-099, 150-199
	4		W0192	82H	24		73-21-16	050-099, 150-199
	5		W0192	82J	20		73-21-16	050-099, 150-199
	6		W0192	06G	22		30-21-11	050-099, 150-199
	7		W0192	07C	22		73-21-19	050-099, 150-199
	8	UNUSED						050-099, 150-199
	9		W0192	81L	22		30-21-11	050-099, 150-199

HOOKUP LIST
D280T132

91-21-51
Section D12100
Page 2
Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D12124		P037-00/ /		RELAY SOCKET (continued)				050-099, 150-199
	10		W0192	81N	22		30-21-11	050-099, 150-199
	11		W0192	82D	22		30-21-11	050-099, 150-199
	12		W0192	06F	20		30-21-11	050-099, 150-199
	13		W0192	83H	22		30-21-11	050-099, 150-199
	14		W0192	06J	22		73-21-19	050-099, 150-199
D12126		P036-00/ /		RELAY SOCKET				050-099, 150-199
	1		W0176	81F	22		30-21-11	050-099, 150-199
	2		W0176	80R	22		30-21-11	050-099, 150-199
	3		W0176	80W	22		30-21-11	050-099, 150-199
	4		W0176	80J	22		30-21-11	050-099, 150-199
	5		W0176	80K	22		30-21-11	050-099, 150-199
	6		W0176	80H	22		30-21-11	050-099, 150-199
	7		W0176	80N	22		30-21-11	050-099, 150-199
	8	UNUSED						050-099, 150-199
D12128		P037-00/ /		RELAY SOCKET				050-099, 150-199
	1		W0192	82F	22		30-21-11	050-099, 150-199
	2		W0192	81G	22		30-21-11	050-099, 150-199
	3		W0192	81P	22		30-21-11	050-099, 150-199
	4		W0192	80W	22		30-21-11	050-099, 150-199
	5		W0192	80X	22		30-21-11	050-099, 150-199
	6		W0192	80V	22		30-21-11	050-099, 150-199
	7		W0192	81F	22		30-21-11	050-099, 150-199
	8	UNUSED						050-099, 150-199
D12130		P036-00/ /		RELAY SOCKET				050-099, 150-199
	1	UNUSED						050-099, 150-199
	2	UNUSED						050-099, 150-199
	3		W0176	81J	22		30-21-11	050-099, 150-199
	4	UNUSED						050-099, 150-199
	5	UNUSED						050-099, 150-199
	6		W0176	20T	22		30-21-11	050-099, 150-199
	7		W0176	81M	22		30-21-11	050-099, 150-199
	8		W0176	81G	20		30-21-11	050-099, 150-199
D12132		P037-00/PNL/		RLY SKT				050-099, 150-199
	1	UNUSED						050-099, 150-199
	2	UNUSED						050-099, 150-199
	3		W0192	82A	22		30-21-11	050-099, 150-199

HOOKUP LIST
D280T132



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D12132		P037-00/PNL/		RLY SKT (continued)				050-099, 150-199
	4	UNUSED						050-099, 150-199
	5	UNUSED						050-099, 150-199
	6		W0192	83J	22		30-21-11	050-099, 150-199
	7		W0192	82D	22		30-21-11	050-099, 150-199
	8		W0192	81Y	20		30-21-11	050-099, 150-199
D12134		P036-00/PNL/		RLY SKT				050-099, 150-199
	1		W0176	80X	22		30-21-11	050-099, 150-199
	2		W0176	81A	20		30-21-11	050-099, 150-199
	3		W0176	81D	24		30-21-11	050-099, 150-199
	4	UNUSED						050-099, 150-199
	5		W0176	81C	24		30-21-11	050-099, 150-199
	6		W0176	80Y	20		30-21-11	050-099, 150-199
	7		W0176	80T	22		30-21-11	050-099, 150-199
	8	UNUSED						050-099, 150-199
D12136		P037-00/PNL/		RLY SKT				050-099, 150-199
	1		W0192	81X	22		30-21-11	050-099
	1		W0192	81X	24		30-21-11	150-199
	2		W0192	81T	20		30-21-11	050-099, 150-199
	3		W0192	81W	22		30-21-11	050-099
	3		W0192	81W	24		30-21-11	150-199
	4	UNUSED						050-099, 150-199
	5		W0192	81R	22		30-21-11	050-099, 150-199
	6		W0192	81U	20		30-21-11	050-099, 150-199
	7		W0192	81K	22		30-21-11	050-099, 150-199
	8	UNUSED						050-099, 150-199
D12138		208.5/167/L063		PLUG				050-099
D12138		208/167/L063		PLUG				150-199
	1		W0756	703	20		30-81-11	050-099, 150-199
	2		W0756	704	20		30-81-11	050-099, 150-199
	3		W0756	705	20		30-81-11	050-099, 150-199
	4		W0756	706	20		30-81-11	050-099, 150-199
	5		W0756	707	20		30-81-11	050-099, 150-199
	6		W0756	708	20		30-81-11	050-099, 150-199
	7		W0756	709	20		30-81-11	050-099, 150-199
	8		W0756	710	20		30-81-11	050-099, 150-199
	9	UNUSED						050-099, 150-199
	10	UNUSED						050-099, 150-199

HOOKUP LIST
D280T132

91-21-51
Section D12100
Page 4
Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D12138		208.5/167/L063		PLUG (continued)				050-099
D12138		208/167/L063		PLUG (continued)				150-199
	11	UNUSED						050-099, 150-199
	12		W0756	711	20		30-81-11	050-099, 150-199
D12140		208/167/R 63		PLUG				050-099, 150-199
	1		W0902	01L	20		30-81-11	050-099, 150-199
	2		W0902	01M	20		30-81-11	050-099, 150-199
	3		W0902	01N	20		30-81-11	050-099, 150-199
	4		W0902	01P	20		30-81-11	050-099, 150-199
	5		W0902	01R	20		30-81-11	050-099, 150-199
	6		W0902	01S	20		30-81-11	050-099, 150-199
	7		W0902	01T	20		30-81-11	050-099, 150-199
	8		W0902	01U	20		30-81-11	050-099, 150-199
	9	UNUSED						050-099, 150-199
	10	UNUSED						050-099, 150-199
	11	UNUSED						050-099, 150-199
	12		W0902	01V	20		30-81-11	050-099, 150-199
D12142		P033-00/ /		RELAY SOCKET				050-099, 150-199
	1		W0142	41M	22		30-81-11	050-099, 150-199
	2		W0142	41C	22		30-81-11	050-099, 150-199
	3		W0142	41E	22		30-81-11	050-099, 150-199
	4	UNUSED						050-099, 150-199
	5		W0142	41N	22		30-81-11	050-099, 150-199
	6		W0142	41B	22		30-81-11	050-099, 150-199
	7		W0142	41D	22		30-81-11	050-099, 150-199
	8	UNUSED						050-099, 150-199
D12144		P033-00/ /		RELAY SOCKET				050-099, 150-199
	1		W0144	20T	22		30-81-11	050-099, 150-199
	2		W0144	20H	22		30-81-11	050-099, 150-199
	3		W0144	20K	22		30-81-11	050-099, 150-199
	4	UNUSED						050-099, 150-199
	5		W0144	20U	22		30-81-11	050-099, 150-199
	6		W0144	20G	22		30-81-11	050-099, 150-199
	7		W0144	20J	22		30-81-11	050-099, 150-199
	8	UNUSED						050-099, 150-199
D12146		P033-00/ /		RELAY SOCKET				050-099, 150-199
	1		W0142	41P	22		30-81-11	050-099, 150-199

HOOKUP LIST

D280T132

91-21-51

Section D12100

Page 5

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D12146		P033-00/ /		RELAY SOCKET (continued)				050-099, 150-199
	2		W0142	41G	22		30-81-11	050-099, 150-199
	3		W0142	41J	22		30-81-11	050-099, 150-199
	4	UNUSED						050-099, 150-199
	5		W0142	41R	22		30-81-11	050-099, 150-199
	6		W0142	41F	22		30-81-11	050-099, 150-199
	7		W0142	41H	22		30-81-11	050-099, 150-199
	8	UNUSED						050-099, 150-199
D12148		P033-00/ /		RELAY SOCKET				050-099, 150-199
	1	UNUSED						050-099, 150-199
	2		W0144	20P	22		30-81-11	050-099, 150-199
	3		W0144	20S	22		30-81-11	050-099, 150-199
	4	UNUSED						050-099, 150-199
	5		W0144	20F	22		30-81-11	050-099, 150-199
	6		W0144	20M	22		30-81-11	050-099, 150-199
	7		W0144	20R	22		30-81-11	050-099, 150-199
	8		W0144	20E	22		30-81-11	050-099, 150-199
D12150		P033-00/ /		RELAY SOCKET				050-099, 150-199
	1	UNUSED						050-099, 150-199
	2		W0142	41S	22		30-81-11	050-099, 150-199
	3		W0142	41U	22		30-81-11	050-099, 150-199
	4		W0142	41K	22		30-81-11	050-099, 150-199
	5		W0142	41L	22		30-81-11	050-099, 150-199
	6	UNUSED						050-099, 150-199
	7		W0142	41T	22		30-81-11	050-099, 150-199
	8	UNUSED						050-099, 150-199
D12152		P033-00/ /		RELAY SOCKET				050-099, 150-199
	1	UNUSED						050-099, 150-199
	2		W0142	42M	22		30-11-11	050-099, 150-199
	3		W0142	42L	22		30-11-11	050-099, 150-199
	4		W0142	42P	22		30-11-11	050-099, 150-199
	5	UNUSED						050-099, 150-199
	6	UNUSED						050-099, 150-199
	7		W0142	42K	22		30-11-11	050-099, 150-199
	8	UNUSED						050-099, 150-199
D12154		P033-00/ /		RELAY SOCKET				050-099, 150-199
	1		W0142	42C	22		30-11-11	050-099, 150-199

HOOKUP LIST
D280T132

91-21-51
Section D12100
Page 6
Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D12154		P033-00/ /		RELAY SOCKET (continued)				050-099, 150-199
	2		W0142	42E	20		30-11-11	050-099, 150-199
	3		W0142	42F	22		30-11-11	050-099, 150-199
	4	UNUSED						050-099, 150-199
	5		W0142	42J	22		30-11-11	050-099, 150-199
	6		W0142	42D	22		30-11-11	050-099, 150-199
	7		W0142	42G	22		30-11-11	050-099, 150-199
	8		W0142	42B	22		30-11-11	050-099, 150-199
D12156		P036-00/ /		RELAY SOCKET				050-099, 155-199, 276-299
D12156		P089-00/ /		RELAY SOCKET				150-154, 275
	A1		W0176	53A	22		28-42-13	050-099, 155-199, 276-299
	A1		W0892	012	22		28-31-22	150-154, 275
	A2		W0176	53B	22		28-42-13	050-099, 155-199, 276-299
	A2		W0892	013	22		28-31-22	150-154, 275
	A3	UNUSED						ALL
	B1		W0176	53C	22		28-42-12	050-099, 155-199, 276-299
	B1		W0892	014	22		28-31-22	150-154, 275
	B2		W0176	53D	22		28-42-12	050-099, 155-199, 276-299
	B2		W0892	015	22		28-31-22	150-154, 275
	B3	UNUSED						ALL
	C1		W0176	53E	24		28-22-12	050-099, 155-199, 276-299
	C1		W0892	016	22		28-31-22	150-154, 275
	C2		W0176	53F	24		28-22-12	050-099, 155-199, 276-299
	C2		W0892	017	22		28-31-22	150-154, 275
	C3	UNUSED						ALL
	D1		W0176	53G	24		28-22-12	050-099, 155-199, 276-299
	D1		W0892	018	22		28-31-22	150-154, 275
	D2		W0176	53H	20		28-22-12	050-099, 155-199, 276-299
	D2		W0892	019	20		28-31-22	150-154, 275
	D3	UNUSED						ALL
	X1		W0176	74M	22		28-31-21	050-099, 155-199, 276-299
	X1		W0892	011	22		28-31-22	150-154, 275
	X2		W0176	74N	20		28-31-21	050-099, 155-199, 276-299
	X2		W0892	010	20		28-31-22	150-154, 275
	DED		W0176	53AZ			28-42-13	050-099, 155-199, 276-299
	DED		W0176	53BZ			28-42-13	050-099, 155-199, 276-299
	DED		W0176	53CZ			28-42-12	050-099, 155-199, 276-299
	DED		W0176	53DZ			28-42-12	050-099, 155-199, 276-299
	DED		W0892	012Z			28-31-22	150-154, 275
	DED		W0892	013Z			28-31-22	150-154, 275

HOOKUP LIST

D280T132

91-21-51

Section D12100

Page 7

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D12156		P036-00/ /		RELAY SOCKET (continued)				050-099, 155-199, 276-299
D12156		P089-00/ /		RELAY SOCKET (continued)				150-154, 275
	DED		W0892	014Z			28-31-22	150-154, 275
	DED		W0892	015Z			28-31-22	150-154, 275
D12158		P037-00/ /		RELAY SOCKET-				050-099, 155-199, 276-299
D12158		P089-00/ /		RELAY SOCKET				150-154, 275
	A1		W0192	63A	22		28-42-13	050-099, 155-199, 276-299
	A1		W0894	012	22		28-31-22	150-154, 275
	A2		W0192	63B	22		28-42-13	050-099, 155-199, 276-299
	A2		W0894	013	22		28-31-22	150-154, 275
	A3	UNUSED						ALL
	B1		W0192	63C	22		28-42-12	050-099, 155-199, 276-299
	B1		W0894	014	22		28-31-22	150-154, 275
	B2		W0192	63D	22		28-42-12	050-099, 155-199, 276-299
	B2		W0894	015	22		28-31-22	150-154, 275
	B3	UNUSED						ALL
	C1		W0192	63E	24		28-22-12	050-099, 155-199, 276-299
	C1		W0894	016	22		28-31-22	150-154, 275
	C2		W0192	63F	24		28-22-12	050-099, 155-199, 276-299
	C2		W0894	017	22		28-31-22	150-154, 275
	C3	UNUSED						ALL
	D1		W0192	63G	24		28-22-12	050-099, 155-199, 276-299
	D1		W0894	018	22		28-31-22	150-154, 275
	D2		W0192	63J	20		28-22-12	050-099, 155-199, 276-299
	D2		W0894	019	20		28-31-22	150-154, 275
	D3	UNUSED						ALL
	X1		W0192	63K	22		28-31-21	050-099, 155-199, 276-299
	X1		W0894	011	22		28-31-22	150-154, 275
	X2		W0192	63L	20		28-31-21	050-099, 155-199, 276-299
	X2		W0894	010	20		28-31-22	150-154, 275
	DED		W0192	63AZ			28-42-13	050-099, 155-199, 276-299
	DED		W0192	63BZ			28-42-13	050-099, 155-199, 276-299
	DED		W0192	63CZ			28-42-12	050-099, 155-199, 276-299
	DED		W0192	63DZ			28-42-12	050-099, 155-199, 276-299
	DED		W0894	012Z			28-31-22	150-154, 275
	DED		W0894	013Z			28-31-22	150-154, 275
	DED		W0894	014Z			28-31-22	150-154, 275
	DED		W0894	015Z			28-31-22	150-154, 275

HOOKUP LIST

D280T132

91-21-51

Section D12100

Page 8

Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D12160		P036-00/ /		RELAY SOCKET				050-099, 155-199, 276-299
D12160		P089-00/ /		RELAY SOCKET				150-154, 275
	A1	UNUSED						ALL
	A2		W0176	75H	22		28-31-11	050-099, 155-199, 276-299
	A2		W0892	025	22		28-31-22	150-154, 275
	A3		W0176	75J	20		28-31-11	050-099, 155-199, 276-299
	A3		W0892	022	20		28-31-22	150-154, 275
	B1	UNUSED						ALL
	B2	UNUSED						ALL
	B3	UNUSED						ALL
	C1		W0176	75K	22		28-31-11	050-099, 155-199, 276-299
	C1		W0892	026	22		28-31-22	150-154, 275
	C2	UNUSED						ALL
	C3	UNUSED						ALL
	D1	UNUSED						ALL
	D2	UNUSED						ALL
	D3	UNUSED						ALL
	X1		W0176	75L	22		28-31-11	050-099, 155-199, 276-299
	X1		W0892	024	22		28-31-22	150-154, 275
	X2		W0176	75M	20		28-31-11	050-099, 155-199, 276-299
	X2		W0892	023	20		28-31-22	150-154, 275
	DED		W0176	75HZ			28-31-11	050-099, 155-199, 276-299
	DED		W0176	75JZ			28-31-11	050-099, 155-199, 276-299
	DED		W0892	022Z			28-31-22	150-154, 275
	DED		W0892	025Z			28-31-22	150-154, 275
D12162		P037-00/ /		RELAY SOCKET-				050-099, 155-199, 276-299
D12162		P089-00/ /		RELAY SOCKET				150-154, 275
	A1	UNUSED						ALL
	A2		W0192	67A	22		28-31-11	050-099, 155-199, 276-299
	A2		W0894	025	22		28-31-22	150-154, 275
	A3		W0192	67B	20		28-31-11	050-099, 155-199, 276-299
	A3		W0894	022	20		28-31-22	150-154, 275
	B1	UNUSED						ALL
	B2	UNUSED						ALL
	B3	UNUSED						ALL
	C1		W0192	67C	22		28-31-11	050-099, 155-199, 276-299
	C1		W0894	026	22		28-31-22	150-154, 275
	C2	UNUSED						ALL
	C3	UNUSED						ALL
	D1	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D12100

Page 9

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D12162		P037-00/ /		RELAY SOCKET- (continued)				050-099, 155-199, 276-299
D12162		P089-00/ /		RELAY SOCKET (continued)				150-154, 275
	D2	UNUSED						ALL
	D3	UNUSED						ALL
	X1		W0192	67D	22		28-31-11	050-099, 155-199, 276-299
	X1		W0894	024	22		28-31-22	150-154, 275
	X2		W0192	67E	20		28-31-11	050-099, 155-199, 276-299
	X2		W0894	023	20		28-31-22	150-154, 275
	DED		W0192	67AZ			28-31-11	050-099, 155-199, 276-299
	DED		W0192	67BZ			28-31-11	050-099, 155-199, 276-299
	DED		W0894	022Z			28-31-22	150-154, 275
	DED		W0894	025Z			28-31-22	150-154, 275
D12164		P036-00/ /		RELAY SOCKET				050-099, 155-199, 276-299
D12164		P089-00/ /		RELAY SOCKET				150-154, 275
	1	UNUSED						ALL
	2		W0176	75A	20		28-31-12	050-099, 155-199, 276-299
	2		W0892	034	20		28-31-22	150-154, 275
	3		W0176	75B	22		28-31-12	050-099, 155-199, 276-299
	3		W0892	033	22		28-31-22	150-154, 275
	4		W0176	75C	22		28-31-12	050-099, 155-199, 276-299
	4		W0892	035	22		28-31-22	150-154, 275
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W0176	75D	20		28-31-12	050-099, 155-199, 276-299
	7		W0892	032	20		28-31-22	150-154, 275
	8	UNUSED						ALL
	DED		W0176	75AZ			28-31-12	050-099, 155-199, 276-299
	DED		W0176	75CZ			28-31-12	050-099, 155-199, 276-299
	DED		W0892	034Z			28-31-22	150-154, 275
	DED		W0892	035Z			28-31-22	150-154, 275
D12166		P037-00/ /		RELAY SOCKET-				050-099, 155-199, 276-299
D12166		P089-00/ /		RELAY SOCKET				150-154, 275
	1	UNUSED						ALL
	2		W0192	66D	20		28-31-12	050-099, 155-199, 276-299
	2		W0894	034	20		28-31-22	150-154, 275
	3		W0192	66E	22		28-31-12	050-099, 155-199, 276-299
	3		W0894	033	22		28-31-22	150-154, 275
	4		W0192	66G	22		28-31-12	050-099, 155-199, 276-299
	4		W0894	035	22		28-31-22	150-154, 275

HOOKUP LIST

D280T132

91-21-51

Section D12100

Page 10

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D12166		P037-00/ /		RELAY SOCKET- (continued)				050-099, 155-199, 276-299
D12166		P089-00/ /		RELAY SOCKET (continued)				150-154, 275
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W0192	66H	20		28-31-12	050-099, 155-199, 276-299
	7		W0894	032	20		28-31-22	150-154, 275
	8	UNUSED						ALL
	DED		W0192	66DZ			28-31-12	050-099, 155-199, 276-299
	DED		W0192	66GZ			28-31-12	050-099, 155-199, 276-299
	DED		W0894	034Z			28-31-22	150-154, 275
	DED		W0894	035Z			28-31-22	150-154, 275
D12172		P005-00/ /		PLUG-P5				050-099, 155-199, 276-299
	1		W0062	526	20		33-13-16	050-099, 155-199, 276-299
	2		W0062	528	20		33-13-16	050-099, 155-199, 276-299
	3		W0062	535	22		33-16-17	050-099, 155-199, 276-299
	4		W0062	536	22		33-16-17	050-099, 155-199, 276-299
	5		W0062	715	22		28-31-12	050-099, 155-199, 276-299
	6		W0062	734	22		28-42-13	050-099, 155-199, 276-299
	7	UNUSED						050-099, 155-199, 276-299
	8	UNUSED						050-099, 155-199, 276-299
	9		W0062	708	22		28-31-12	050-099, 155-199, 277-299
	9	UNUSED						276
	10	UNUSED						050-099, 155-199, 276-299
	11	UNUSED						050-099, 155-199, 276-299
	12		W0062	636	22		28-31-11	050-099, 155-199, 276-299
	DED		W0062	636Z			28-31-11	050-099, 155-199, 276-299
	DED		W0062	715Z			28-31-12	050-099, 155-199, 276-299
	DED		W0062	734Z			28-42-13	050-099, 155-199, 276-299
	DED		W0062	708Z			28-31-12	050-099, 155-199, 277-299
D12174		P005-00/ /		PLUG-P5				050-099, 150-199, 276-299
	1		W0062	747	20		28-31-12	050-099, 155-199, 277-299
	1	UNUSED						150-154, 276
	2		W0062	707	20		28-31-11	050-099, 155-199, 276-299
	2	UNUSED						150-154
	3		W0062	740	20		28-31-11	050-099, 155-199, 276-299
	3	UNUSED						150-154
	4		W0062	742	20		28-31-11	050-099, 155-199, 276-299
	4	UNUSED						150-154
	5	UNUSED						050-099, 150-199, 276-299

HOOKUP LIST

D280T132

91-21-51

Section D12100

Page 11

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D12174		P005-00/ /		PLUG-P5 (continued)				050-099, 150-199, 276-299
	6		W0062	720	22		28-31-21	050-099, 155-199, 276-299
	6	UNUSED						150-154
	7		W0062	644	24		34-61-14	050-099, 150-199, 276-299
	8		W0062	696	20		34-61-14	050-099, 150-199, 276-299
	9		W0062	746	20		28-31-12	050-099, 155-199, 277-299
	9	UNUSED						150-154, 276
	10		W0062	743	20		28-31-12	050-099, 155-199, 276-299
	10	UNUSED						150-154
	11		W0062	744	20		28-31-12	050-099, 155-199, 276-299
	11	UNUSED						150-154
	12		W0062	745	20		28-31-12	050-099, 155-199, 276-299
	12	UNUSED						150-154
	DED		W0062	746Z			28-31-12	050-099, 155-199, 277-299
	DED		W0062	747Z			28-31-12	050-099, 155-199, 277-299
D12176		P005-00/ /		PLUG-P5				050-099, 155-199, 276-299
	1		W0066	509	20		33-13-16	050-099, 155-199, 276-299
	2		W0066	510	20		33-13-16	050-099, 155-199, 276-299
	3		W0066	525	22		33-16-17	050-099, 155-199, 276-299
	4		W0066	526	22		33-16-17	050-099, 155-199, 276-299
	5		W0066	715	22		28-31-12	050-099, 155-199, 276-299
	6		W0066	734	22		28-42-13	050-099, 155-199, 276-299
	7	UNUSED						050-099, 155-199, 276-299
	8	UNUSED						050-099, 155-199, 276-299
	9		W0066	708	22		28-31-12	050-099, 155-199, 277-299
	9	UNUSED						276
	10	UNUSED						050-099, 155-199, 276-299
	11	UNUSED						050-099, 155-199, 276-299
	12		W0066	636	22		28-31-11	050-099, 155-199, 276-299
	DED		W0066	636Z			28-31-11	050-099, 155-199, 276-299
	DED		W0066	715Z			28-31-12	050-099, 155-199, 276-299
	DED		W0066	734Z			28-42-13	050-099, 155-199, 276-299
	DED		W0066	708Z			28-31-12	050-099, 155-199, 277-299
D12178		P005-00/ /		PLUG-P5				050-099, 155-199, 276-299
	1		W0066	749	20		28-31-12	050-099, 155-199, 277-299
	1	UNUSED						276
	2		W0066	707	20		28-31-11	050-099, 155-199, 276-299
	3		W0066	740	20		28-31-11	050-099, 155-199, 276-299
	4		W0066	742	20		28-31-11	050-099, 155-199, 276-299

HOOKUP LIST

D280T132

91-21-51

Section D12100

Page 12

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D12178		P005-00/ /		PLUG-P5 (continued)				050-099, 155-199, 276-299
	5	UNUSED						050-099, 155-199, 276-299
	6		W0066	720	22		28-31-21	050-099, 155-199, 276-299
	7		W0066	607	24		34-61-24	050-099, 155-199, 276-299
	8		W0066	609	20		34-61-24	050-099, 155-199, 276-299
	9		W0066	741	20		28-31-12	050-099, 155-199, 277-299
	9	UNUSED						276
	10		W0066	743	20		28-31-12	050-099, 155-199, 276-299
	11		W0066	744	20		28-31-12	050-099, 155-199, 276-299
	12		W0066	745	20		28-31-12	050-099, 155-199, 276-299
	DED		W0066	741Z			28-31-12	050-099, 155-199, 277-299
	DED		W0066	749Z			28-31-12	050-099, 155-199, 277-299
D12180		L0250/12/RS		PLUG-				050-099, 155-199, 276-299
	1	UNUSED						050-099, 155-199, 276-299
	2		W0450	302R	20		28-31-11	050-099, 155-199, 276-299
	3		W0450	302Y	20		28-31-11	050-099, 155-199, 276-299
	4		W0450	026	18		28-31-11	050-099, 155-199, 276-299
	5		W0450	302B	20		28-31-11	050-099, 155-199, 276-299
	6	UNUSED						050-099, 155-199, 276-299
	7		W0450	027	18		28-31-11	050-099, 155-199, 276-299
D12182		R0250/12/RS		PLUG-				050-099, 155-199, 276-299
	1	UNUSED						050-099, 155-199, 276-299
	2		W0452	302R	20		28-31-11	050-099, 155-199, 276-299
	3		W0452	302Y	20		28-31-11	050-099, 155-199, 276-299
	4		W0452	027	18		28-31-11	050-099, 155-199, 276-299
	5		W0452	302B	20		28-31-11	050-099, 155-199, 276-299
	6	UNUSED						050-099, 155-199, 276-299
	7		W0452	028	18		28-31-11	050-099, 155-199, 276-299
D12184		L0901/12/RS		PLUG-				050-099, 155-199, 276-299
	1	UNUSED						050-099, 155-199, 276-299
	2		W0450	300R	20		28-31-12	050-099, 155-199, 276-299
	3		W0450	300Y	20		28-31-12	050-099, 155-199, 276-299
	4		W0450	028	18		28-31-12	050-099, 155-199, 276-299
	5		W0450	300B	20		28-31-12	050-099, 155-199, 276-299
	6	UNUSED						050-099, 155-199, 276-299
	7		W0450	029	18		28-31-12	050-099, 155-199, 276-299

HOOKUP LIST

D280T132

91-21-51

Section D12100

Page 13

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D12186		R0901/12/RS		PLUG-				050-099, 155-199, 276-299
	1	UNUSED						050-099, 155-199, 276-299
	2		W0452	300R	20		28-31-12	050-099, 155-199, 276-299
	3		W0452	300Y	20		28-31-12	050-099, 155-199, 276-299
	4		W0452	029	18		28-31-12	050-099, 155-199, 276-299
	5		W0452	300B	20		28-31-12	050-099, 155-199, 276-299
	6	UNUSED						050-099, 155-199, 276-299
	7		W0452	030	18		28-31-12	050-099, 155-199, 276-299
D12188		L0224/14/MS		PLUG-				155-157, 165-199, 277-299
	1	UNUSED						155-157, 165-199, 277-299
	2		W0444	300Y	14		28-31-21	155-157, 165-199, 277-299
	3		W0444	006	14		28-31-21	155-157, 165-199, 277-299
	4		W0444	300R	14		28-31-21	155-157, 165-199, 277-299
	5	UNUSED						155-157, 165-199, 277-299
	6		W0444	300B	14		28-31-21	155-157, 165-199, 277-299
	7	UNUSED						155-157, 165-199, 277-299
	8	UNUSED						155-157, 165-199, 277-299
D12190		R0224/14/MS		PLUG-				155-157, 165-199, 277-299
	1	UNUSED						155-157, 165-199, 277-299
	2		W0478	300Y	14		28-31-21	155-157, 165-199, 277-299
	3		W0478	006	14		28-31-21	155-157, 165-199, 277-299
	4		W0478	300R	14		28-31-21	155-157, 165-199, 277-299
	5	UNUSED						155-157, 165-199, 277-299
	6		W0478	300B	14		28-31-21	155-157, 165-199, 277-299
	7	UNUSED						155-157, 165-199, 277-299
	8	UNUSED						155-157, 165-199, 277-299
D12192		L0257/14/RS		PLUG-				155-157, 165-199, 277-299
	1	UNUSED						155-157, 165-199, 277-299
	2	DK	W0450	030	18		28-42-13	155-157, 165-199, 277-299
	3		W0450	100	20		28-42-13	155-157, 165-199, 277-299
	4	DK	W0450	031	18		28-42-13	155-157, 165-199, 277-299
	5	UNUSED						155-157, 165-199, 277-299
D12194		R0257/14/RS		PLUG-				155-157, 165-199, 277-299
	1	UNUSED						155-157, 165-199, 277-299
	2	DK	W0452	031	18		28-42-13	155-157, 165-199, 277-299
	3		W0452	100	20		28-42-13	155-157, 165-199, 277-299

HOOKUP LIST
D280T132

91-21-51
Section D12100
Page 14
Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D12194		R0257/14/RS		PLUG- (continued)				155-157, 165-199, 277-299
	4	DK	W0452	032	18		28-42-13	155-157, 165-199, 277-299
	5	UNUSED						155-157, 165-199, 277-299

HOOKUP LIST
D280T132

91-21-51
Section D12100
Page 15 End
Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D12206		P061-00/ /		PLUG-P5				050-099
D12206		P005-00/ /		PLUG-P5				150-199
	1	UNUSED						050-099, 150-199
	2	UNUSED						050-099, 150-199
	3	UNUSED						050-099, 150-199
	4	UNUSED						050-099, 150-199
	5		W0062	79C	20		30-81-11	050-099, 150-199
	6		W0062	79D	20		30-81-11	050-099, 150-199
	7		W0062	79E	20		30-81-11	050-099, 150-199
	8	UNUSED						050-099, 151-152, 154-156, 162-164
	8		W9160	110	20		25-25-23	150, 153, 157, 165-199
	9	UNUSED						050-099, 151-152, 154-156, 162-164
	9		W9160	109	20		25-25-23	150, 153, 157, 165-199
	10	UNUSED						050-099, 151-152, 154-156, 162-164
	10		W9160	104	20		25-25-23	150, 153, 157, 165-199
	11	UNUSED						050-099, 151-152, 154-156, 162-164
	11		W9160	103	20		25-25-23	150, 153, 157, 165-199
	12	UNUSED						050-099, 151-152, 154-156, 162-164
	12		W9160	105	20		25-25-23	150, 153, 157, 165-199
	DED		W9160	103Z			25-25-23	150, 153, 157, 165-199
	DED		W9160	104Z			25-25-23	150, 153, 157, 165-199
	DED		W9160	105Z			25-25-23	150, 153, 157, 165-199
	DED		W9160	109Z			25-25-23	150, 153, 157, 165-199
	DED		W9160	110Z			25-25-23	150, 153, 157, 165-199
D12208		P037-00/PNL/		RLY SKT				050-099, 151-199, 275-299
	A1		W0192	22VB	22		21-61-81	050-099, 151-199, 275-299
	A2		W0192	22VR	22		21-61-81	050-099, 151-199, 275-299
	A3	UNUSED						050-099, 151-199, 275-299
	B1		W0192	22WB	22		21-61-81	050-099, 151-199, 275-299
	B2		W0192	22WR	22		21-61-81	050-099, 151-199, 275-299
	B3	UNUSED						050-099, 151-199, 275-299
	C1	UNUSED						050-099, 151-199, 275-299
	C2	UNUSED						050-099, 151-199, 275-299
	C3	UNUSED						050-099, 151-199, 275-299
	D1	UNUSED						050-099, 151-199, 275-299
	D2	UNUSED						050-099, 151-199, 275-299
	D3	UNUSED						050-099, 151-199, 275-299
	X1		W0192	80D	24		21-61-81	050-099, 151-199, 275-299
	X2		W0192	80E	24		21-61-81	050-099, 151-199, 275-299

HOOKUP LIST
D280T132

91-21-51
Section D12200
Page 1
Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D12210		1550/281/L062		PLUG-A2 GALLEY				275-278
D12210		1553/280/L050		PLUG-A2 GALLEY				280-299
	1	UNUSED						275-299
	2	UNUSED						275-299
	3		W0226	037	16		25-31-21	275-299
	4		W0226	038	16		25-31-21	275-299
	5		W0226	039	16		25-31-21	275-299
	6		W0226	040	16		25-31-21	275-299
	7		W0226	041	16		25-31-21	275-299
	8		W0226	042	16		25-31-21	275-299
	9		W0226	043	16		25-31-21	275-299
	10		W0226	044	16		25-31-21	275-299
	11		W0226	045	16		25-31-21	275-299
	12		W0226	046	16		25-31-21	275-299
	13		W0226	047	16		25-31-21	275-299
	14		W0226	048	16		25-31-21	275-299
D12212		1507/280/L004		PLUG-A4 AFT GALLEY				275-278
D12212		1504/280/L006		PLUG-A4 AFT GALLEY				280-299
	1	UNUSED						275-299
	2	UNUSED						275-299
	3		W0226	037	16		25-31-21	275-299
	4		W0226	038	16		25-31-21	275-299
	5		W0226	039	16		25-31-21	275-299
	6		W0226	040	16		25-31-21	275-299
	7		W0226	041	16		25-31-21	275-299
	8		W0226	042	16		25-31-21	275-299
	9		W0226	043	16		25-31-21	275-299
	10		W0226	044	16		25-31-21	275-299
	11		W0226	045	16		25-31-21	275-299
	12		W0226	046	16		25-31-21	275-299
	13		W0226	047	16		25-31-21	275-299
	14		W0226	048	16		25-31-21	275-299
D12214		1567/195/BL 0		PLUG				156-157, 166-199, 277-299
D12214		1567/195/00		PLUG				275-276
	1		W0966	073	20		38-32-11	156-157, 166-199, 275-299
	2		W0966	074	20		38-32-11	156-157, 166-199, 275-299
	3	UNUSED						156-157, 166-199, 275-299
	4		W0966	075	22		38-32-11	156-157, 166-199, 275-299

HOOKUP LIST

D280T132

91-21-51

Section D12200

Page 2

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D12214		1567/195/BL 0		PLUG (continued)				156-157, 166-199, 277-299
D12214		1567/195/00		PLUG (continued)				275-276
	5		W0966	076	22		38-32-11	156-157, 166-199, 275-299
D12216		1572/195/BL 0		PLUG				156-157, 166-199, 277-299
D12216		1572/195/00		PLUG				275-276
	1		W0966	083	20		38-32-11	156-157, 166-199, 275-299
	2		W0966	084	20		38-32-11	156-157, 166-199, 275-299
	3	UNUSED						156-157, 166-199, 275-299
	4		W0966	080	22		38-32-11	156-157, 166-199, 275-299
	5		W0966	081	22		38-32-11	156-157, 166-199, 275-299
	DED		W0966	080Z			38-32-11	156-157, 166-199, 275-299
D12218		P025-00/ /		RLY SOCKET-				050-099
D12218		P025-00/ /		RELAY SOCKET				162-199
	A1		W1108	659	20		33-21-31	050-099, 162-199
	A2		W1108	656	20		33-21-31	050-099
	A2		W1108	531	20		33-21-31	162-199
	A3	UNUSED						050-099, 162-199
	B1	UNUSED						050-099, 162-199
	B2	UNUSED						050-099, 162-199
	B3	UNUSED						050-099, 162-199
	X1		W1108	657	24		33-21-31	050-099, 162-199
	X2		W1108	658	24		33-21-31	050-099, 162-199
D12220		P025-00/ /		RLY SOCKET-				050-099
D12220		P025-00/ /		RELAY SOCKET				162-199
	A1		W1108	664	20		33-21-31	050-099, 162-199
	A2		W1108	661	20		33-21-31	050-099
	A2		W1108	532	20		33-21-31	162-199
	A3	UNUSED						050-099, 162-199
	B1	UNUSED						050-099, 162-199
	B2	UNUSED						050-099, 162-199
	B3	UNUSED						050-099, 162-199
	X1		W1108	662	24		33-21-31	050-099, 162-199
	X2		W1108	663	24		33-21-31	050-099, 162-199
D12222		274/242/R 15		RCPT				050-099, 162-199
	1		W3004	004	20		35-21-14	050-099, 162-199
	2		W3004	005	20		35-21-14	050-099, 162-199

HOOKUP LIST
D280T132

91-21-51
Section D12200
Page 3
Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D12224		274/278/R 15		RCPT				050-099, 162-199
	1		W3000	008	20		35-21-14	050-099, 162-199
	2		W3000	009	20		35-21-14	050-099, 162-199
D12226		0252/274/R 10		PLUG				050-099, 162-199
	1		W3000	301Y	24		23-34-15	050-099, 162-199
	2	FM	W3000	201R	16		23-34-15	050-099, 162-199
	3	FM	W3000	201B	16		23-34-15	050-099, 162-199
	4		W3000	301B	24		23-34-15	050-099, 162-199
	5		W3000	301R	24		23-34-15	050-099, 162-199
D12228		249/225/L 13		PLUG				050-099, 162-199
	A		W3006	201R	20		23-34-15	050-099, 162-199
	B		W3006	201B	20		23-34-15	050-099, 162-199
	C		W3006	302Y	24		23-34-15	050-099, 162-199
	D		W3006	302R	24		23-34-15	050-099, 162-199
	E		W3006	302B	24		23-34-15	050-099, 162-199
	F		W3006	01CX			23-34-15	050-099, 162-199
	= CF		W3006	01CO			23-34-15	050-099, 162-199
D12230		249/225/L 12		PLUG				050-099, 162-199
	A	UNUSED						050-099, 162-199
	B		W3006	013	20		23-34-15	050-099, 162-199
	C	UNUSED						050-099, 162-199
	D		W3006	012	24		23-34-15	050-099, 162-199
	E		W3006	012	24		23-34-15	050-099, 162-199
	F		W3006	A-B			23-34-15	050-099, 162-199
	= CF		W3006	A-A			23-34-15	050-099, 162-199
D12232		0252/274/R 10		PLUG				050-099, 162-199
	1	UNUSED						050-099, 162-199
	2	UNUSED						050-099, 162-199
	3		W3000	011	20		23-34-15	050-099, 162-199
	4		W3000	013	20		23-34-15	050-099, 162-199
	5	UNUSED						050-099, 162-199
	6	UNUSED						050-099, 162-199
	7		W3000	010	20		23-34-15	050-099, 162-199
	8	UNUSED						050-099, 162-199
	9	UNUSED						050-099, 162-199

HOOKUP LIST
D280T132



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D12234		0250/274/L 10		RELAY SOCKET				050-099, 162-199
	A1		W3006	017	22		23-42-11	050-099, 162-199
	A2		W3006	018	20		23-42-11	050-099, 162-199
	A3	UNUSED						050-099, 162-199
	B1	UNUSED						050-099, 162-199
	B2	UNUSED						050-099, 162-199
	B3	UNUSED						050-099, 162-199
	C1		W3006	020	22		23-42-11	050-099, 162-199
	C2	UNUSED						050-099, 162-199
	C3	UNUSED						050-099, 162-199
	D1	UNUSED						050-099, 162-199
	D2	UNUSED						050-099, 162-199
	D3	UNUSED						050-099, 162-199
	X1		W3006	019	22		23-42-11	050-099, 162-199
	X2		W3006	028	20		23-42-11	050-099, 162-199
D12236		0250/276/L 10		RELAY SOCKET				050-099, 162-199
	A1		W3006	016	22		23-42-11	050-099, 162-199
	A2		W3006	026	22		23-42-11	050-099, 162-199
	A3	UNUSED						050-099, 162-199
	B1	UNUSED						050-099, 162-199
	B2	UNUSED						050-099, 162-199
	B3	UNUSED						050-099, 162-199
	C1		W3006	023	20		23-42-11	050-099, 162-199
	C2	UNUSED						050-099, 162-199
	C3	UNUSED						050-099, 162-199
	D1	UNUSED						050-099, 162-199
	D2	UNUSED						050-099, 162-199
	D3	UNUSED						050-099, 162-199
	X1		W3006	025	22		23-42-11	050-099, 162-199
	X2		W3006	027	20		23-42-11	050-099, 162-199
D12240		P037-00/PNL/ P089-00/ /		RLY SKT RELAY SOCKET				050-099, 155-199, 276-299 150-154, 275
D12240	1		W0192	80H	24		21-26-21	050-099, 155-199, 276-299
	1		W0894	041	22		28-31-22	150-154, 275
	2	UNUSED						ALL
	3		W0192	80K	24		21-26-21	050-099, 155-199, 276-299
	3		W0894	045	22		28-31-22	150-154, 275
	4	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D12200
Page 5
Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D12240		P037-00/PNL/		RLY SKT (continued)				050-099, 155-199, 276-299
D12240		P089-00/ /		RELAY SOCKET (continued)				150-154, 275
	5		W0192	80L	24		21-26-21	050-099, 155-199, 276-299
	5		W0894	044	22		28-31-22	150-154, 275
	6		W0192	80M	24		21-26-11	050-099, 155-199, 276-299
	6		W0894	039	22		28-31-22	150-154, 275
	7		W0192	80R	24		21-26-11	050-099, 155-199, 276-299
	7		W0894	046	22		28-31-22	150-154, 275
	8	UNUSED						ALL
	9		W0192	02R	24		21-26-11	050-099, 155-199, 276-299
	9		W0894	043	22		28-31-22	150-154, 275
	10	UNUSED						ALL
	11		W0192	80T	24		21-26-11	050-099, 155-199, 276-299
	11		W0894	042	22		28-31-22	150-154, 275
	12		W0192	80N	24		21-26-11	050-099, 155-199, 276-299
	12		W0894	038	22		28-31-22	150-154, 275
	13		W0192	667	20		21-26-21	050-099, 155-199, 276-299
	13		W0894	040	20		28-31-22	150-154, 275
	14		W0192	02Q	24		21-26-11	050-099, 155-199, 276-299
	14		W0894	047	22		28-31-22	150-154, 275
D12242		P037-00/PNL/		RLY SKT				050-099, 155-199, 276-299
D12242		P089-00/ /		RELAY SOCKET				150-154, 275
	1	UNUSED						ALL
	2		W0192	04G	24		21-58-14	050-099, 155-199, 276-299
	2		W0894	053	22		28-31-22	150-154, 275
	3		W0192	72M	24		21-58-14	050-099, 155-199, 276-299
	3		W0894	051	22		28-31-22	150-154, 275
	4		W0192	72N	24		21-58-14	050-099, 155-199, 276-299
	4		W0894	054	22		28-31-22	150-154, 275
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W0192	72L	24		21-58-14	050-099, 155-199, 276-299
	7		W0894	052	22		28-31-22	150-154, 275
	8	UNUSED						ALL
D12244		P036-00/PNL/		RLY SKT				050-099, 155-199, 276-299
D12244		P089-00/ /		RELAY SOCKET				150-154, 275
	1		W0176	72J	24		21-58-16	050-099, 155-199, 276-299
	1		W0892	041	22		28-31-22	150-154, 275
	2		W0176	74R	20		21-58-16	050-099, 155-199, 276-299

HOOKUP LIST

D280T132

91-21-51

Section D12200

Page 6

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D12244		P036-00/PNL/		RLY SKT (continued)				050-099, 155-199, 276-299
D12244		P089-00/ /		RELAY SOCKET (continued)				150-154, 275
	2		W0892	040	20		28-31-22	150-154, 275
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W0176	75S	24		21-58-12	050-099, 155-199, 276-299
	6		W0892	039	22		28-31-22	150-154, 275
	7	UNUSED						ALL
	8	UNUSED						ALL
	9		W0176	75R	24		21-58-12	050-099, 155-199, 276-299
	9		W0892	043	22		28-31-22	150-154, 275
	10	UNUSED						ALL
	11		W0176	631	24		21-58-12	050-099, 155-199, 276-299
	11		W0892	042	22		28-31-22	150-154, 275
	12		W0176	75U	24		21-58-12	050-099, 155-199, 276-299
	12		W0892	038	22		28-31-22	150-154, 275
	13	UNUSED						ALL
	14	UNUSED						ALL
D12246		P036-00/ /		SKT				050-099
D12246		P036-00/ /		RLY SKT				150-199, 275-299
	1	UNUSED						ALL
	2		W0176	19T	20		73-21-11	ALL
	3		W0176	63M	24		73-21-18	ALL
	4	UNUSED						ALL
	5		W0176	18H	22		73-21-11	ALL
	6	UNUSED						ALL
	7		W0176	63L	24		73-21-18	ALL
	8	UNUSED						ALL
	DED		W0176	18HZ			73-21-11	ALL
D12248		P037-00/ /		RELAY SOCKET-				050-099
D12248		P037-0-0/ /		RLY-SKT				150-199, 275-299
	1	UNUSED						ALL
	2		W0192	68E	20		73-21-11	ALL
	3		W0192	83E	24		73-21-18	ALL
	4	UNUSED						ALL
	5		W0192	67K	22		73-21-11	ALL
	6	UNUSED						ALL
	7		W0192	83D	24		73-21-18	ALL

HOOKUP LIST

D280T132

91-21-51

Section D12200

Page 7

Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D12248		P037-00/ /		RELAY SOCKET- (continued)				050-099
D12248		P037-0-0/ /		RLY-SKT (continued)				150-199, 275-299
	8 DED	UNUSED	W0192	67KZ			73-21-11	ALL ALL
D12250		P036-00/ /		SKT				050-099
D12250		P036-00/ /		RLY SKT				150-199, 275-299
	A1		W0176	18L	20		73-21-11	ALL
	A2		W0176	18N	20		73-21-11	ALL
	A3	UNUSED						ALL
	B1	UNUSED						ALL
	B2	UNUSED						ALL
	B3	UNUSED						ALL
	X1		W0176	18K	22		73-21-11	ALL
	X2		W0176	18H	22		73-21-11	ALL
	Y1		W0176	18M	22		73-21-11	ALL
	Y2		W0176	18P	22		73-21-11	ALL
	DED		W0176	18HZ			73-21-11	ALL
	DED		W0176	18KZ			73-21-11	ALL
	DED		W0176	18MZ			73-21-11	ALL
	DED		W0176	18PZ			73-21-11	ALL
D12252		P037-00/ /		RELAY SOCKET-				050-099
D12252		P037-0-0/ /		RLY-SKT				150-154
D12252		P037-00/ /		RLY-SKT				155-199, 275-299
	A1		W0192	67M	20		73-21-11	ALL
	A2		W0192	67P	20		73-21-11	ALL
	A3	UNUSED						ALL
	B1	UNUSED						ALL
	B2	UNUSED						ALL
	B3	UNUSED						ALL
	X1		W0192	67L	22		73-21-11	ALL
	X2		W0192	67K	22		73-21-11	ALL
	Y1		W0192	67N	22		73-21-11	ALL
	Y2		W0192	67R	22		73-21-11	ALL
	DED		W0192	67KZ			73-21-11	ALL
	DED		W0192	67LZ			73-21-11	ALL
	DED		W0192	67NZ			73-21-11	ALL
	DED		W0192	67RZ			73-21-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D12200

Page 8

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D12254		0375/201/R044		PLUG				050-099
	A		W1222	708	20		33-51-16	050-099
	B		W1222	709	20		33-51-16	050-099
	C		W1222	710	20		33-51-16	050-099
	D		W1222	711	20		33-51-16	050-099
	E	UNUSED						050-099
	F	UNUSED						050-099
	G	UNUSED						050-099
	H	UNUSED						050-099
	J	UNUSED						050-099
	K	UNUSED						050-099
	L	UNUSED						050-099
	M	UNUSED						050-099
D12256		1521/201/L019		PLUG				050-099
	A		W0790	667	20		33-51-16	050-099
	B		W0790	668	20		33-51-16	050-099
	C		W0790	669	20		33-51-16	050-099
	D		W0790	670	20		33-51-16	050-099
	E	UNUSED						050-099
	F	UNUSED						050-099
	G	UNUSED						050-099
	H	UNUSED						050-099
	J	UNUSED						050-099
	K	UNUSED						050-099
	L	UNUSED						050-099
	M	UNUSED						050-099
D12258		437/275/R055		SOCKET-				050-099, 162-199
	1		W2008	005	20		26-13-12	050-099, 162-199
	2		W2008	006	20		26-13-12	050-099, 162-199
	3		W2008	009	22		21-66-21	050-099, 162-199
	4	UNUSED						050-099, 162-199
	5	UNUSED						050-099, 162-199
	6	UNUSED						050-099, 162-199
	7		W2008	003	20		26-13-12	050-099, 162-199
	8		W2008	008	20		26-13-12	050-099, 162-199
	9	UNUSED						050-099, 162-199
	10	UNUSED						050-099, 162-199
	11	UNUSED						050-099, 162-199

HOOKUP LIST
D280T132

91-21-51
Section D12200
Page 9
Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D12258		437/275/R055		SOCKET- (continued)				050-099, 162-199
	12		W2008	010	22		21-66-21	050-099, 162-199
	13	UNUSED						050-099, 162-199
	14	UNUSED						050-099, 162-199
	15		W2008	004	20		26-13-12	050-099, 162-199
D12278		P036-00/ /		RELAY SOCKET-				050-099
	1		W0176	24P	24		21-51-11	050-099
	2		W0176	234R	24		21-51-11	050-099
	3		W0176	24R	24		21-51-11	050-099
	4		W0176	24SR	24		21-51-11	050-099
	5		W0176	24N	24		21-51-11	050-099
	6		W0176	234B	24		21-51-11	050-099
	7		W0176	24A	24		21-51-11	050-099
	8		W0176	24SB	24		21-51-11	050-099

HOOKUP LIST

D280T132

91-21-51

Section D12200

Page 10 End

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D12354		MULTI/275/55		SOCKET-				050-099, 150, 152-199
	1		W2040	005	20		26-13-12	050-099, 150, 152-199
	2		W2040	006	20		26-13-12	050-099, 150, 152-199
	3		W2040	009	22		21-66-31	050-099, 150, 152-199
	4	UNUSED						050-099, 150, 152-199
	5	UNUSED						050-099, 150, 152-199
	6	UNUSED						050-099, 150, 152-199
	7		W2040	003	20		26-13-12	050-099, 150, 152-199
	8		W2040	008	20		26-13-12	050-099, 150, 152-199
	9	UNUSED						050-099, 150, 152-199
	10	UNUSED						050-099, 150, 152-199
	11	UNUSED						050-099, 150, 152-199
	12		W2040	010	22		21-66-31	050-099, 150, 152-199
	13	UNUSED						050-099, 150, 152-199
	14	UNUSED						050-099, 150, 152-199
	15		W2040	004	20		26-13-12	050-099, 150, 152-199
D12372		0736/289/L056		PLUG-				280-299
	1	UNUSED						280-299
	2		W0812	03B	20		33-21-11	280-299
	3		W0812	03C	20		33-21-11	280-299
	4	UNUSED						280-299
	5		W0812	03G	20		33-21-11	280-299
	6	UNUSED						280-299
	7		W0812	02Y	20		33-21-11	280-299
	8		W0812	02Z	20		33-21-11	280-299
	9		W0812	03D	20		33-21-11	280-299
	10		W0812	03F	20		33-21-11	280-299
	11		W0812	02W	20		33-21-11	280-299
	12		W0812	02X	20		33-21-11	280-299
D12378		0660/291/L056		PLUG-				280-299
	1	UNUSED						280-299
	2	UNUSED						280-299
	3	UNUSED						280-299
	4	UNUSED						280-299
	5	FM	W0812	01S	16		33-21-32	280-299
	6	UNUSED						280-299
	7	FM	W0812	02R	16		33-21-32	280-299
	8	FM	W0812	01T	16		33-21-32	280-299
	9		W0812	01Y	22		33-21-32	280-299

HOOKUP LIST
D280T132

91-21-51
Section D12300
Page 1
Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D12378		0660/291/L056		PLUG- (continued)				280-299
	10		W0812	02T	22		33-21-32	280-299
	11		W0812	01W	22		33-21-32	280-299
	12		W0812	01X	22		33-21-32	280-299
D12380		0654+49/266/L081		PLUG-				280-299
	1		W0812	01Y	22		33-21-32	280-299
	2		W0812	02T	22		33-21-32	280-299
	3		W0812	01W	22		33-21-32	280-299
	4		W0812	01X	22		33-21-32	280-299
	5		W0812	02S	20		33-21-32	280-299
	6	UNUSED						280-299
	7	UNUSED						280-299
	8	UNUSED						280-299
	9	UNUSED						280-299
	10	UNUSED						280-299
	11	UNUSED						280-299
	12	UNUSED						280-299
D12382		P036-00/ /		RELAY SOCKET-				275-276
	A1		W0182	173	18		38-32-11	275-276
	A2		W0182	174	18		38-32-11	275-276
	A3		W0182	172	18		38-32-11	275-276
	B1		W0182	169	18		38-32-11	275-276
	B2		W0182	171	18		38-32-11	275-276
	B3		W0182	118	18		38-32-11	275-276
	X1		W0182	168	18		38-32-11	275-276
	X2		W0182	170	20		38-32-11	275-276
D12392		P049-00/ /		RELAY SOCKET - P49				156-157, 166-199, 277-299
D12392		P049-00/ /		RELAY SOCKET-P49				275-276
	A1		W0030	146	20		38-32-15	156-157, 166-199, 277-299
	A1		W0030	135	18		38-32-14	275-276
	A2		W0030	145	20		38-32-15	156-157, 166-199, 277-299
	A2		W0030	136	18		38-32-14	275-276
	A3	UNUSED						156-157, 166-199, 275-299
	B1	UNUSED						156-157, 166-199, 275-299
	B2	UNUSED						156-157, 166-199, 275-299
	B3	UNUSED						156-157, 166-199, 275-299
	X1		W0030	148	22		38-32-15	156-157, 166-199, 277-299
	X1		W0030	133	20		38-32-14	275-276

HOOKUP LIST

D280T132

91-21-51

Section D12300

Page 2

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D12392		P049-00/ /		RELAY SOCKET - P49 (continued)				156-157, 166-199, 277-299
D12392		P049-00/ /		RELAY SOCKET-P49 (continued)				275-276
	X2		W0030	154	20		38-32-15	156-157, 166-199, 277-299
	X2		W0030	134	20		38-32-14	275-276
D12394		P049-00/ /		RELAY SOCKET - P49				156-157, 166-199, 277-299
D12394		P036-00/ /		RELAY SOCKET				275-276
	A1		W0030	150	20		38-32-15	156-157, 166-199, 277-299
	A1		W0182	151	18		38-32-14	275-276
	A2		W0030	149	20		38-32-15	156-157, 166-199, 277-299
	A2		W0182	153	18		38-32-14	275-276
	A3	UNUSED						156-157, 166-199, 275-299
	B1	UNUSED						156-157, 166-199, 275-299
	B2	UNUSED						156-157, 166-199, 275-299
	B3	UNUSED						156-157, 166-199, 275-299
	X1		W0030	152	22		38-32-15	156-157, 166-199, 277-299
	X1		W0182	155	20		38-32-14	275-276
	X2		W0030	151	20		38-32-15	156-157, 166-199, 277-299
	X2		W0182	152	20		38-32-14	275-276
	DED		W0030	149Z			38-32-15	156-157, 166-199, 277-299
	DED		W0030	150Z			38-32-15	156-157, 166-199, 277-299
	DED		W0030	151Z			38-32-15	156-157, 166-199, 277-299
	DED		W0030	152Z			38-32-15	156-157, 166-199, 277-299

HOOKUP LIST

D280T132

91-21-51

Section D12300

Page 3 End

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D13021		P037-00/ /		PLUG-P37				ALL
	A1	UNUSED						ALL
	A2		W0192	20E	20		29-11-14	ALL
	A3		W0192	20D	20		29-11-14	ALL
	B1	UNUSED						050-099
	B1		W0192	847R	20		26-23-12	150-199, 275-299
	B2	UNUSED						050-099
	B2		W0192	845R	20		26-23-12	150-199, 275-299
	B3	UNUSED						ALL
	C1	UNUSED						050-099
	C1		W0192	846R	20		26-23-12	150-199, 275-299
	C2	UNUSED						050-099
	C2		W0192	844R	20		26-23-12	150-199, 275-299
	C3	UNUSED						ALL
	D1	UNUSED						ALL
	D2	UNUSED						ALL
	D3	UNUSED						ALL
	X1		W0192	838	24		32-09-12	ALL
	X2		W0192	839	24		32-09-12	ALL
D13022		R324/P25/FS		PLUG				ALL
	1		W0408	116	20		36-11-62	ALL
	2		W0408	042	20		36-11-62	ALL
	3	DK	W0408	117	18		36-11-62	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
D13040		P036-00/ /		RELAY SOCKET				050-099
D13040		P036-00/ /		RLY SKT				150-199, 275-299
	A1		W0176	806	20		78-36-11	ALL
	A2		W0176	834	22		78-36-11	ALL
	A3		W0176	837	22		78-36-11	ALL
	B1		W0176	808	22		78-36-11	ALL
	B2		W0176	835	22		78-36-11	ALL
	B3		W0176	807	20		78-36-11	ALL
	X1		W0176	810	22		78-36-11	ALL
	X2		W0176	817	22		78-36-11	ALL
D13042		P037-00/ /		RELAY SOCKET				050-099
D13042		P037-00/ /		RLY SKT				150-199, 275-299
	A1		W0192	848	20		78-36-21	ALL

HOOKUP LIST

D280T132

91-21-51

Section D13000

Page 1

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D13042		P037-00/ /		RELAY SOCKET (continued)				050-099
D13042		P037-00/ /		RLY SKT (continued)				150-199, 275-299
	A2		W0192	845	22		78-36-21	ALL
	A3		W0192	847	22		78-36-21	ALL
	B1		W0192	850	22		78-36-21	ALL
	B2		W0192	846	22		78-36-21	ALL
	B3		W0192	858	20		78-36-21	ALL
	X1		W0192	851	22		78-36-21	ALL
	X2		W0192	852	22		78-36-21	ALL
D13048		P035-00/ /		RELAY SOCKET				150-199, 275-299
	1		W1066	711	22		25-53-14	150-199, 275-299
	2		W1066	712	22		25-53-14	150-199, 275-299
	3		W1066	719	22		25-53-13	150-199, 275-299
	4	UNUSED						150-199, 275-299
	5		W1066	713	22		25-53-14	150-199, 275-299
	6		W1066	710	22		25-53-14	150-199, 275-299
	7		W1066	718	22		25-53-13	150-199, 275-299
	8	UNUSED						150-199, 275-299
D13050		P035-00/ /		RELAY SOCKET				150-199, 275-299
	1		W1066	721	22		25-53-14	150-199, 275-299
	2		W1066	722	22		25-53-14	150-199, 275-299
	3		W1066	729	22		25-53-13	150-199, 275-299
	4	UNUSED						150-199, 275-299
	5		W1066	723	22		25-53-14	150-199, 275-299
	6		W1066	34M	22		25-53-14	150-199, 275-299
	7		W1066	728	22		25-53-13	150-199, 275-299
	8	UNUSED						150-199, 275-299

HOOKUP LIST
D280T132

91-21-51
Section D13000
Page 2 End
Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D13184		P033-00/ /		RELAY SOCKET				ALL
	A1		W0144	70K	20		29-11-14	ALL
	A2		W0144	70J	20		29-11-14	ALL
	A3		W0144	70M	20		29-11-14	ALL
	B1	UNUSED						ALL
	B2	UNUSED						ALL
	B3	UNUSED						ALL
	C1	UNUSED						ALL
	C2	UNUSED						ALL
	C3	UNUSED						ALL
	D1	UNUSED						ALL
	D2	UNUSED						ALL
	D3	UNUSED						ALL
	X1		W0144	70I	20		29-11-14	ALL
	X2		W0144	70G	20		29-11-14	ALL
D13186		P033-00/ /		RELAY SOCKET				ALL
	A1		W0144	70P	20		29-11-14	ALL
	A2		W0144	70R	20		29-11-14	ALL
	A3		W0144	70N	20		29-11-14	ALL
	B1	UNUSED						ALL
	B2	UNUSED						ALL
	B3	UNUSED						ALL
	C1		W0144	70T	20		29-11-14	ALL
	C2	UNUSED						ALL
	C3	UNUSED						ALL
	D1	UNUSED						ALL
	D2	UNUSED						ALL
	D3	UNUSED						ALL
	X1		W0144	70S	20		29-11-14	ALL
	X2		W0144	70U	20		29-11-14	ALL
D13188		P033-00/ /		RELAY SOCKET				ALL
	1		W0142	70G	20		29-11-14	ALL
	2		W0142	70B	20		29-11-14	ALL
	3		W0142	70D	20		29-11-14	ALL
	4	UNUSED						ALL
	5		W0142	70T	20		29-11-14	ALL
	6		W0142	70F	20		29-11-14	ALL
	7		W0142	70C	20		29-11-14	ALL
	8	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D13100

Page 1

Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D13188		P033-00/ /		RELAY SOCKET (continued)				ALL
	DED		W0142	70CZ			29-11-14	ALL
	DED		W0142	70DZ			29-11-14	ALL
	DED		W0142	70GZ			29-11-14	ALL
	DED		W0142	70TZ			29-11-14	ALL

HOOKUP LIST

D280T132

91-21-51

Section D13100
Page 2 End
Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D13206		0511/201/L092		RECPT				050-099
D13206		0489/203/L092		RECPT				150-199
	A		W0784	617	20		33-51-14	050-099, 150-199
	B		W0784	611	20		33-51-14	050-099, 150-199
	C		W0784	610	20		33-51-14	050-099, 150-199
	D		W0784	614	20		33-51-14	050-099, 150-199
	E		W0784	613	20		33-51-14	050-099, 150-199
	F		W0784	612	20		33-51-14	050-099, 150-199
	G	UNUSED						050-099, 150-199
	H	UNUSED						050-099, 150-199
	J	UNUSED						050-099, 150-199
	K		W0784	616	22		33-51-14	050-099, 150-199
	L		W0784	615	22		33-51-14	050-099, 150-199
	M	UNUSED						050-099, 150-199
D13208		0922/201/L092		RECPT				050-099
D13208		1032/201/L092		RECPT				150-199
	A		W0790	608	20		33-51-14	050-099, 150-199
	B		W0790	602	20		33-51-14	050-099, 150-199
	C		W0790	601	20		33-51-14	050-099, 150-199
	D		W0790	605	20		33-51-14	050-099, 150-199
	E		W0790	604	20		33-51-14	050-099, 150-199
	F		W0790	603	20		33-51-14	050-099, 150-199
	G	UNUSED						050-099, 150-199
	H	UNUSED						050-099, 150-199
	J	UNUSED						050-099, 150-199
	K		W0790	607	22		33-51-14	050-099, 150-199
	L		W0790	606	22		33-51-14	050-099, 150-199
	M	UNUSED						050-099, 150-199
D13210		1362/201/L092		RECPT				050-099, 150-199
	A		W0788	625	20		33-51-14	050-099, 150-199
	B		W0788	619	20		33-51-14	050-099, 150-199
	C		W0788	618	20		33-51-14	050-099, 150-199
	D		W0788	622	20		33-51-14	050-099, 150-199
	E		W0788	621	20		33-51-14	050-099, 150-199
	F		W0788	620	20		33-51-14	050-099, 150-199
	G	UNUSED						050-099, 150-199
	H	UNUSED						050-099, 150-199
	J	UNUSED						050-099, 150-199
	K		W0788	624	22		33-51-14	050-099, 150-199

HOOKUP LIST

D280T132

91-21-51

Section D13200

Page 1

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D13210		1362/201/L092		RECPT (continued)				050-099, 150-199
	L		W0788	623	22		33-51-14	050-099, 150-199
	M	UNUSED						050-099, 150-199
D13212		0901/211/L085		PLUG-				150-199
	A		W0790	610	20		33-51-14	150-199
	B		W0790	611	20		33-51-14	150-199
	C		W0790	612	20		33-51-14	150-199
	D		W0790	613	20		33-51-14	150-199
	E	UNUSED						150-199
	F	UNUSED						150-199
	G	UNUSED						150-199
	H	UNUSED						150-199
	J	UNUSED						150-199
	K	UNUSED						150-199
	L	UNUSED						150-199
	M	UNUSED						150-199
D13214		0901/211/R085		PLUG-				150-199
	A		W0790	618	20		33-51-14	150-199
	B		W0790	619	20		33-51-14	150-199
	C		W0790	620	20		33-51-14	150-199
	D		W0790	621	20		33-51-14	150-199
	E	UNUSED						150-199
	F	UNUSED						150-199
	G	UNUSED						150-199
	H	UNUSED						150-199
	J	UNUSED						150-199
	K	UNUSED						150-199
	L	UNUSED						150-199
	M	UNUSED						150-199
D13216		0290/205/L085		PLUG				050-099, 150-199
	A		W1222	197	20		33-51-14	050-099, 150-199
	B		W1222	196	20		33-51-14	050-099, 150-199
	C		W1222	195	20		33-51-14	050-099, 150-199
	D		W1222	194	20		33-51-14	050-099, 150-199
	E	UNUSED						050-099, 150-199
	F	UNUSED						050-099, 150-199
	G	UNUSED						050-099, 150-199
	H	UNUSED						050-099, 150-199

HOOKUP LIST

D280T132

91-21-51

Section D13200

Page 2

Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D13216		0290/205/L085		PLUG (continued)				050-099, 150-199
	J	UNUSED						050-099, 150-199
	K	UNUSED						050-099, 150-199
	L	UNUSED						050-099, 150-199
	M	UNUSED						050-099, 150-199
D13218		0290/205/R085		PLUG				050-099, 150-199
	A		W1222	516	20		33-51-14	050-099, 150-199
	B		W1222	515	20		33-51-14	050-099, 150-199
	C		W1222	199	20		33-51-14	050-099, 150-199
	D		W1222	198	20		33-51-14	050-099, 150-199
	E	UNUSED						050-099, 150-199
	F	UNUSED						050-099, 150-199
	G	UNUSED						050-099, 150-199
	H	UNUSED						050-099, 150-199
	J	UNUSED						050-099, 150-199
	K	UNUSED						050-099, 150-199
	L	UNUSED						050-099, 150-199
	M	UNUSED						050-099, 150-199
D13220		0857/211/L085		PLUG-				050-099, 150-199
	A		W0790	614	20		33-51-14	050-099, 150-199
	B		W0790	615	20		33-51-14	050-099, 150-199
	C		W0790	616	20		33-51-14	050-099, 150-199
	D		W0790	617	20		33-51-14	050-099, 150-199
	E	UNUSED						050-099, 150-199
	F	UNUSED						050-099, 150-199
	G	UNUSED						050-099, 150-199
	H	UNUSED						050-099, 150-199
	J	UNUSED						050-099, 150-199
	K	UNUSED						050-099, 150-199
	L	UNUSED						050-099, 150-199
	M	UNUSED						050-099, 150-199
D13222		0857/211/R085		PLUG-				050-099, 150-199
	A		W1222	704	20		33-51-14	050-099
	A		W0790	622	20		33-51-14	150-199
	B		W1222	705	20		33-51-14	050-099
	B		W0790	623	20		33-51-14	150-199
	C		W1222	706	20		33-51-14	050-099
	C		W0790	624	20		33-51-14	150-199

HOOKUP LIST

D280T132

91-21-51

Section D13200

Page 3

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D13222		0857/211/R085		PLUG- (continued)				050-099, 150-199
	D		W1222	707	20		33-51-14	050-099
	D		W0790	625	20		33-51-14	150-199
	E	UNUSED						050-099, 150-199
	F	UNUSED						050-099, 150-199
	G	UNUSED						050-099, 150-199
	H	UNUSED						050-099, 150-199
	J	UNUSED						050-099, 150-199
	K	UNUSED						050-099, 150-199
	L	UNUSED						050-099, 150-199
	M	UNUSED						050-099, 150-199
D13224		1537/203/L085		PLUG-				050-099, 150-199
	A		W0788	626	20		33-51-14	050-099, 150-199
	B		W0788	627	20		33-51-14	050-099, 150-199
	C		W0788	628	20		33-51-14	050-099, 150-199
	D		W0788	629	20		33-51-14	050-099, 150-199
	E	UNUSED						050-099, 150-199
	F	UNUSED						050-099, 150-199
	G	UNUSED						050-099, 150-199
	H	UNUSED						050-099, 150-199
	J	UNUSED						050-099, 150-199
	K	UNUSED						050-099, 150-199
	L	UNUSED						050-099, 150-199
	M	UNUSED						050-099, 150-199
D13226		1537/203/L085		PLUG				050-099
D13226		1537/203/R085		PLUG-				150-199
	A		W0790	666	20		33-51-14	050-099
	A		W0788	630	20		33-51-14	150-199
	B		W0790	665	20		33-51-14	050-099
	B		W0788	631	20		33-51-14	150-199
	C		W0790	664	20		33-51-14	050-099
	C		W0788	632	20		33-51-14	150-199
	D		W0790	663	20		33-51-14	050-099
	D		W0788	633	20		33-51-14	150-199
	E	UNUSED						050-099, 150-199
	F	UNUSED						050-099, 150-199
	G	UNUSED						050-099, 150-199
	H	UNUSED						050-099, 150-199
	J	UNUSED						050-099, 150-199

HOOKUP LIST

D280T132

91-21-51

Section D13200

Page 4

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D13226		1537/203/L085		PLUG (continued)				050-099
D13226		1537/203/R085		PLUG- (continued)				150-199
	K	UNUSED						050-099, 150-199
	L	UNUSED						050-099, 150-199
	M	UNUSED						050-099, 150-199
D13228		0349/201/R092		PLUG				050-099
D13228		0533/201/R092		PLUG				150-199
	A		W1222	652	20		33-51-16	050-099, 150-199
	B		W1222	651	20		33-51-16	050-099, 150-199
	C		W1222	679	20		33-51-16	050-099, 150-199
	D		W1222	678	20		33-51-16	050-099, 150-199
	E	UNUSED						050-099, 150-199
	F	UNUSED						050-099, 150-199
	G	UNUSED						050-099, 150-199
	H	UNUSED						050-099, 150-199
	J	UNUSED						050-099, 150-199
	K	UNUSED						050-099, 150-199
	L	UNUSED						050-099, 150-199
	M	UNUSED						050-099, 150-199
D13230		1010/202/R092		PLUG				050-099, 150-199
	A		W1222	618	20		33-51-16	050-099, 150-199
	B		W1222	619	20		33-51-16	050-099, 150-199
	C		W1222	620	20		33-51-16	050-099, 150-199
	D		W1222	621	20		33-51-16	050-099, 150-199
	E	UNUSED						050-099, 150-199
	F	UNUSED						050-099, 150-199
	G	UNUSED						050-099, 150-199
	H	UNUSED						050-099, 150-199
	J	UNUSED						050-099, 150-199
	K	UNUSED						050-099, 150-199
	L	UNUSED						050-099, 150-199
	M	UNUSED						050-099, 150-199
D13232		0643/201/R092		PLUG				050-099, 150-199
	A		W1222	703	20		33-51-16	050-099
	A		W1222	601	20		33-51-16	150-199
	B		W1222	702	20		33-51-16	050-099
	B		W1222	602	20		33-51-16	150-199
	C		W1222	701	20		33-51-16	050-099

HOOKUP LIST

D280T132

91-21-51

Section D13200

Page 5

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D13232		0643/201/R092		PLUG (continued)				050-099, 150-199
	C		W1222	603	20		33-51-16	150-199
	D		W1222	700	20		33-51-16	050-099
	D		W1222	604	20		33-51-16	150-199
	E	UNUSED						050-099, 150-199
	F	UNUSED						050-099, 150-199
	G	UNUSED						050-099, 150-199
	H	UNUSED						050-099, 150-199
	J	UNUSED						050-099, 150-199
	K	UNUSED						050-099, 150-199
	L	UNUSED						050-099, 150-199
	M	UNUSED						050-099, 150-199
D13234		1208/201/R092		PLUG				150-199
	A		W0836	600	20		33-51-16	150-199
	B		W0836	601	20		33-51-16	150-199
	C		W0836	602	20		33-51-16	150-199
	D		W0836	603	20		33-51-16	150-199
	E	UNUSED						150-199
	F	UNUSED						150-199
	G	UNUSED						150-199
	H	UNUSED						150-199
	J	UNUSED						150-199
	K	UNUSED						150-199
	L	UNUSED						150-199
	M	UNUSED						150-199
D13236		1384/200/R092		PLUG-				050-099, 150-199
	A		W0790	656	20		33-51-16	050-099, 150-199
	B		W0790	655	20		33-51-16	050-099, 150-199
	C		W0790	660	20		33-51-16	050-099, 150-199
	D		W0790	657	20		33-51-16	050-099, 150-199
	E	UNUSED						050-099, 150-199
	F	UNUSED						050-099, 150-199
	G	UNUSED						050-099, 150-199
	H	UNUSED						050-099, 150-199
	J	UNUSED						050-099, 150-199
	K	UNUSED						050-099, 150-199
	L	UNUSED						050-099, 150-199
	M	UNUSED						050-099, 150-199

HOOKUP LIST

D280T132

91-21-51

Section D13200

Page 6

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D13238		0533/201/R092		RECPT				050-099, 150-199
	A		W1222	617	20		33-51-16	050-099, 150-199
	B		W1222	611	20		33-51-16	050-099, 150-199
	C		W1222	610	20		33-51-16	050-099, 150-199
	D		W1222	614	20		33-51-16	050-099, 150-199
	E		W1222	613	20		33-51-16	050-099, 150-199
	F		W1222	612	20		33-51-16	050-099, 150-199
	G	UNUSED						050-099, 150-199
	H	UNUSED						050-099, 150-199
	J	UNUSED						050-099, 150-199
	K		W1222	616	22		33-51-16	050-099, 150-199
	L		W1222	615	22		33-51-16	050-099, 150-199
	M	UNUSED						050-099, 150-199
D13240		1010/203/R092		RECPT				050-099, 150-199
	A		W1222	625	22		33-51-16	050-099, 150-199
	B		W1222	619	20		33-51-16	050-099, 150-199
	C		W1222	618	20		33-51-16	050-099, 150-199
	D		W1222	622	20		33-51-16	050-099, 150-199
	E		W1222	621	20		33-51-16	050-099, 150-199
	F		W1222	620	20		33-51-16	050-099, 150-199
	G	UNUSED						050-099, 150-199
	H	UNUSED						050-099, 150-199
	J	UNUSED						050-099, 150-199
	K		W1222	624	22		33-51-16	050-099, 150-199
	L		W1222	623	22		33-51-16	050-099, 150-199
	M	UNUSED						050-099, 150-199
D13242		0687/201/R092		RECPT				050-099
D13242		0643/201/R092		RECPT				150-199
	A		W1222	608	22		33-51-16	050-099, 150-199
	B		W1222	602	20		33-51-16	050-099, 150-199
	C		W1222	601	20		33-51-16	050-099, 150-199
	D		W1222	605	20		33-51-16	050-099, 150-199
	E		W1222	604	20		33-51-16	050-099, 150-199
	F		W1222	603	20		33-51-16	050-099, 150-199
	G	UNUSED						050-099, 150-199
	H	UNUSED						050-099, 150-199
	J	UNUSED						050-099, 150-199
	K		W1222	607	22		33-51-16	050-099, 150-199

HOOKUP LIST

D280T132

91-21-51

Section D13200

Page 7

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D13242		0687/201/R092		RECPT (continued)				050-099
D13242		0643/201/R092		RECPT (continued)				150-199
	L		W1222	606	22		33-51-16	050-099, 150-199
	M	UNUSED						050-099, 150-199
D13244		1384/201/R092		RECPT				050-099, 150-199
	A		W0790	637	20		33-51-16	050-099, 150-199
	B		W0790	631	20		33-51-16	050-099, 150-199
	C		W0790	630	20		33-51-16	050-099, 150-199
	D		W0790	634	20		33-51-16	050-099, 150-199
	E		W0790	633	20		33-51-16	050-099, 150-199
	F		W0790	632	20		33-51-16	050-099, 150-199
	G	UNUSED						050-099, 150-199
	H	UNUSED						050-099, 150-199
	J	UNUSED						050-099, 150-199
	K		W0790	636	22		33-51-16	050-099, 150-199
	L		W0790	635	22		33-51-16	050-099, 150-199
	M	UNUSED						050-099, 150-199
D13246		1208/201/R092		RECPT				150-199
	A		W0836	607	20		33-51-16	150-199
	B		W0836	601	20		33-51-16	150-199
	C		W0836	600	20		33-51-16	150-199
	D		W0836	604	20		33-51-16	150-199
	E		W0836	603	20		33-51-16	150-199
	F		W0836	602	20		33-51-16	150-199
	G	UNUSED						150-199
	H	UNUSED						150-199
	J	UNUSED						150-199
	K		W0836	606	22		33-51-16	150-199
	L		W0836	605	22		33-51-16	150-199
	M	UNUSED						150-199
D13254		0731/201/L092		PLUG-				050-099
D13254		654+058/201/L092		PLUG-				150-199
	A		W0784	608	20		33-51-17	050-099, 150-199
	B		W0784	602	20		33-51-17	050-099, 150-199
	C		W0784	601	20		33-51-17	050-099, 150-199
	D		W0784	605	20		33-51-17	050-099, 150-199
	E		W0784	604	20		33-51-17	050-099, 150-199
	F		W0784	603	20		33-51-17	050-099, 150-199

HOOKUP LIST
D280T132

91-21-51
Section D13200
Page 8
Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D13254		0731/201/L092		PLUG- (continued)				050-099
D13254		654+058/201/L092		PLUG- (continued)				150-199
	G	UNUSED						050-099, 150-199
	H	UNUSED						050-099, 150-199
	J	UNUSED						050-099, 150-199
	K		W0784	607	20		33-51-17	050-099
	K		W0784	607	22		33-51-17	150-199
	L		W0784	606	20		33-51-17	050-099
	L		W0784	606	22		33-51-17	150-199
	M	UNUSED						050-099, 150-199
D13256		1197+33/201/L092		PLUG-				150-199
	A		W0788	608	20		33-51-17	150-199
	B		W0788	602	20		33-51-17	150-199
	C		W0788	601	20		33-51-17	150-199
	D		W0788	605	20		33-51-17	150-199
	E		W0788	604	20		33-51-17	150-199
	F		W0788	603	20		33-51-17	150-199
	G	UNUSED						150-199
	H	UNUSED						150-199
	J	UNUSED						150-199
	K		W0788	607	22		33-51-17	150-199
	L		W0788	606	22		33-51-17	150-199
	M	UNUSED						150-199
D13258		0511/203/L092		PLUG-				050-099
D13258		0489/203/L092		PLUG-				150-199
	A		W0784	626	20		33-51-17	050-099, 150-199
	B		W0784	627	20		33-51-17	050-099, 150-199
	C		W0784	628	20		33-51-17	050-099, 150-199
	D		W0784	629	20		33-51-17	050-099, 150-199
	E	UNUSED						050-099, 150-199
	F	UNUSED						050-099, 150-199
	G	UNUSED						050-099, 150-199
	H	UNUSED						050-099, 150-199
	J	UNUSED						050-099, 150-199
	K	UNUSED						050-099, 150-199
	L	UNUSED						050-099, 150-199
	M	UNUSED						050-099, 150-199

HOOKUP LIST

D280T132

91-21-51

Section D13200

Page 9

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D13260		0922/203/L092		PLUG-				050-099
D13260		1032/203/L092		PLUG-				150-199
	A		W0790	638	20		33-51-17	050-099, 150-199
	B		W0790	639	20		33-51-17	050-099, 150-199
	C		W0790	640	20		33-51-17	050-099, 150-199
	D		W0790	641	20		33-51-17	050-099, 150-199
	E	UNUSED						050-099, 150-199
	F	UNUSED						050-099, 150-199
	G	UNUSED						050-099, 150-199
	H	UNUSED						050-099, 150-199
	J	UNUSED						050-099, 150-199
	K	UNUSED						050-099, 150-199
	L	UNUSED						050-099, 150-199
	M	UNUSED						050-099, 150-199
D13262		1362/200/L092		PLUG-				050-099, 150-199
	A		W0788	610	20		33-51-17	050-099, 150-199
	B		W0788	611	20		33-51-17	050-099, 150-199
	C		W0788	612	20		33-51-17	050-099, 150-199
	D		W0788	613	20		33-51-17	050-099, 150-199
	E	UNUSED						050-099, 150-199
	F	UNUSED						050-099, 150-199
	G	UNUSED						050-099, 150-199
	H	UNUSED						050-099, 150-199
	J	UNUSED						050-099, 150-199
	K	UNUSED						050-099, 150-199
	L	UNUSED						050-099, 150-199
	M	UNUSED						050-099, 150-199
D13264		0731/201/L092		PLUG-				050-099
D13264		654+58/201/L092		PLUG-				150-199
	A		W0784	601	20		33-51-17	050-099, 150-199
	B		W0784	602	20		33-51-17	050-099, 150-199
	C		W0784	603	20		33-51-17	050-099, 150-199
	D		W0784	604	20		33-51-17	050-099, 150-199
	E	UNUSED						050-099, 150-199
	F	UNUSED						050-099, 150-199
	G	UNUSED						050-099, 150-199
	H	UNUSED						050-099, 150-199
	J	UNUSED						050-099, 150-199

HOOKUP LIST

D280T132

91-21-51

Section D13200

Page 10

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D13264		0731/201/L092		PLUG- (continued)				050-099
D13264		654+58/201/L092		PLUG- (continued)				150-199
	K	UNUSED						050-099, 150-199
	L	UNUSED						050-099, 150-199
	M	UNUSED						050-099, 150-199
D13266		1197+033/201/L092		PLUG-				150-199
	A		W0788	601	20		33-51-17	150-199
	B		W0788	602	20		33-51-17	150-199
	C		W0788	603	20		33-51-17	150-199
	D		W0788	604	20		33-51-17	150-199
	E	UNUSED						150-199
	F	UNUSED						150-199
	G	UNUSED						150-199
	H	UNUSED						150-199
	J	UNUSED						150-199
	K	UNUSED						150-199
	L	UNUSED						150-199
	M	UNUSED						150-199
D13272		0870/280/L005		RCPT-				150-199
	1		W1280	208R	22		23-31-16	150-199
	2		W1280	208B	22		23-31-16	150-199
	3		W1280	057	20		33-24-13	150-199
	4		W1280	058	20		33-24-13	150-199
	5		W1280	059	20		33-24-13	150-199
	6		W1280	255R	22		23-31-16	150-199
	7		W1280	255B	22		23-31-16	150-199
	8	UNUSED						150-199
	9	UNUSED						150-199
	10	UNUSED						150-199
	11	UNUSED						150-199
	12	UNUSED						150-199
D13278		0893/280/L005		RCPT-				150-199
D13278		893/280/L 5		RECPT				275-278
	1		W1280	210R	22		23-31-16	150-199, 275-278
	2		W1280	210B	22		23-31-16	150-199, 275-278
	3		W1280	060	20		33-24-13	150-199, 275-278
	4		W1280	061	20		33-24-13	150-199, 275-278
	5		W1280	062	20		33-24-13	150-199, 275-278

HOOKUP LIST

D280T132

91-21-51

Section D13200

Page 11

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D13278		0893/280/L005		RCPT- (continued)				150-199
D13278		893/280/L 5		RECPT (continued)				275-278
	6		W1280	256R	22		23-31-16	150-199
	7		W1280	256B	22		23-31-16	150-199
	8	UNUSED						150-199
	9	UNUSED						150-199
	10	UNUSED						150-199
	11	UNUSED						150-199
	12	UNUSED						150-199

HOOKUP LIST

D280T132

91-21-51

Section D13200
Page 12 End
Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D13356		P019-00/ /		RELAY SOCKET-				050-099, 150-199
	A1		W1104	718	24		33-21-11	050-099, 150-199
	A2		W1104	732	20		33-21-11	050-099, 150-199
	A3		W1104	647	24		33-21-11	050-099, 150-199
	B1		W1104	719	24		33-21-11	050-099, 150-199
	B2		W1104	004	24		33-21-11	050-099, 150-199
	B3		W1104	648	24		33-21-11	050-099, 150-199
	C1		W1104	737	22		33-22-41	050-099, 150-199
	C2		W1104	738	22		33-22-41	050-099, 150-199
	C3		W1104	735	22		33-22-41	050-099, 150-199
	D1		W1104	721	24		33-21-11	050-099, 150-199
	D2		W1104	730	20		33-21-11	050-099, 150-199
	D3		W1104	720	24		33-21-11	050-099, 150-199
	X1		W1104	731	24		33-21-11	050-099, 150-199
	X2		W1104	010	24		33-21-11	050-099
	X2		W1104	010	20		33-21-11	150-199
	Y1		W1104	729	24		33-21-11	050-099, 150-199
	Y2		W1104	650	24		33-21-11	050-099, 150-199
D13358		P019-00/ /		RLY SOCKET				050-099
D13358		P019-00/ /		SOCKET-				150-199
	A1		W1060	746	24		33-21-31	050-099, 162-199
	A1		W1060	746	20		33-21-31	150-157
	A2		W1060	029	24		33-21-31	050-099, 150-199
	A3		W1060	747	24		33-21-31	050-099, 162-199
	A3		W1060	747	20		33-21-31	150-157
	B1		W1060	768	22		33-22-41	050-099, 150-199
	B2		W1060	765	22		33-22-41	050-099, 150-199
	B3		W1060	764	22		33-22-41	050-099, 150-199
	C1		W1060	757	22		33-21-21	050-099, 150-199
	C2		W1060	758	22		33-21-21	050-099, 150-199
	C3		W1060	011	22		33-21-21	050-099, 150-199
	D1		W1060	767	22		33-22-41	050-099, 150-199
	D2		W1060	766	22		33-22-41	050-099, 150-199
	D3		W1060	763	22		33-22-41	050-099, 150-199
	X1		W1060	743	24		33-21-31	050-099, 150-154, 162-165
	X1		W1060	528	24		33-21-31	155-157, 166-199
	X2		W1060	745	24		33-21-31	050-099, 150-199
	Y1		W1060	742	24		33-21-31	050-099, 150-154, 162-165
	Y1		W1060	502	24		33-21-31	155-157, 166-199
	Y2		W1060	790	24		33-21-31	050-099, 150-199

HOOKUP LIST

D280T132

91-21-51

Section D13300

Page 1

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D13360		P019-00/ /		RLY SOCKET				050-099
D13360		P019-00/ /		SOCKET-				150-199
	A1		W1060	749	24		33-21-31	050-099, 162-199
	A1		W1060	749	20		33-21-31	150-157
	A2		W1060	739	24		33-21-31	050-099
	A2		W1060	739	20		33-21-31	150-199
	A3		W1060	748	24		33-21-31	050-099, 162-199
	A3		W1060	748	20		33-21-31	150-157
	B1	UNUSED						050-099, 150-199
	B2	UNUSED						050-099, 150-199
	B3	UNUSED						050-099, 150-199
	C1		W1060	756	22		33-21-21	050-099, 150-199
	C2		W1060	706	22		33-21-21	050-099, 150-199
	C3		W1060	754	22		33-21-21	050-099, 150-199
	D1	UNUSED						050-099, 150-199
	D2	UNUSED						050-099, 150-199
	D3	UNUSED						050-099, 150-199
	X1		W1060	804	24		33-21-31	050-099, 155-199
	X1		W1060	804	20		33-21-31	150-154
	X2		W1060	030	24		33-21-31	050-099, 150-199
	Y1		W1060	773	24		33-21-31	050-099, 150-199
	Y2		W1060	761	24		33-21-31	050-099, 150-154, 162-165
	Y2		W1060	732	24		33-21-31	155-157, 166-199
D13362		P019-00/ /		RLY SOCKET				050-099
D13362		P019-00/ /		SOCKET-				150-199
	A1		W1060	759	24		33-21-31	050-099, 162-199
	A1		W1060	759	20		33-21-31	150-157
	A2		W1060	740	24		33-21-31	050-099
	A2		W1060	740	20		33-21-31	150-157
	A2		W1060	851	24		33-21-31	162-199
	A3		W1060	750	24		33-21-31	050-099, 162-199
	A3		W1060	750	20		33-21-31	150-157
	B1	UNUSED						050-099, 150-199
	B2	UNUSED						050-099, 150-199
	B3	UNUSED						050-099, 150-199
	C1	UNUSED						050-099, 150-199
	C2	UNUSED						050-099, 150-199
	C3	UNUSED						050-099, 150-199
	D1	UNUSED						050-099, 150-199
	D2	UNUSED						050-099, 150-199

HOOKUP LIST

D280T132

91-21-51

Section D13300

Page 2

Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D13362		P019-00/ /		RLY SOCKET (continued)				050-099
D13362		P019-00/ /		SOCKET- (continued)				150-199
	D3	UNUSED						050-099, 150-199
	X1		W1060	731	24		33-21-31	050-099, 150-199
	X2		W1060	751	24		33-21-31	050-099, 150-199
	Y1		W1060	744	24		33-21-31	050-099, 150-154, 162-165
	Y1		W1060	031	24		33-21-31	155-157, 166-199
	Y2		W1060	760	24		33-21-31	050-099, 150-199
D13364		P025-00/ /		RLY SOCKET-				050-099
D13364		P025-00/ /		SOCKET-				150-199
	A1		W1108	197	24		33-21-12	050-099, 150-199
	A2		W1108	083	24		33-21-12	050-099, 150-199
	A3		W1108	196	24		33-21-12	050-099, 150-199
	B1		W1108	199	24		33-21-12	050-099, 150-199
	B2		W1108	139	24		33-21-12	050-099, 150-199
	B3		W1108	198	24		33-21-12	050-099, 150-199
	C1	UNUSED						050-099, 150-199
	C2	UNUSED						050-099, 150-199
	C3	UNUSED						050-099, 150-199
	D1		W1108	152	24		33-21-12	050-099, 150-199
	D2		W1108	154	20		33-21-12	050-099, 150-199
	D3		W1108	151	24		33-21-12	050-099, 150-199
	X1		W1108	626	24		33-21-12	050-099, 150-199
	X2		W1108	153	24		33-21-12	050-099, 150-199
	Y1		W1108	624	24		33-21-12	050-099, 150-199
	Y2		W1108	195	24		33-21-12	050-099
	Y2		W1108	086	24		33-21-12	150-199
D13366A		SHELF/E01/4		PLUG-PART OF D13366				050-099, 150-199
D13366A		SHELF-E2/06/		PLUG-PART OF D13366				275-299
	A01		W0127	628	24		32-45-11	050-099, 150-199
	A01		W0183	068	24		32-45-11	275-299
	A02		W0127	269R	24		32-45-13	050-099, 150-199
	A02		W0183	237R	24		32-45-13	275-299
	A03		W0127	270R	24		32-45-13	050-099, 150-199
	A03		W0183	238R	24		32-45-13	275-299
	A04		W0127	563R	24		32-45-14	050-099, 150-199
	A04		W0183	241R	24		32-45-14	275-299
	A05		W0127	564R	24		32-45-14	050-099, 150-199
	A05		W0183	242R	24		32-45-14	275-299

HOOKUP LIST

D280T132

91-21-51

Section D13300

Page 3

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D13366A		SHELF/E01/4		PLUG-PART OF D13366 (continued)				050-099, 150-199
D13366A		SHELF-E2/06/		PLUG-PART OF D13366 (continued)				275-299
	A06		W0127	297R	24		32-45-13	050-099, 150-199
	A06		W0183	239R	24		32-45-13	275-299
	A07		W0127	298R	24		32-45-13	050-099, 150-199
	A07		W0183	240R	24		32-45-13	275-299
	A08		W0127	565R	24		32-45-14	050-099, 150-199
	A08		W0183	243R	24		32-45-14	275-299
	A09		W0127	566R	24		32-45-14	050-099, 150-199
	A09		W0183	244R	24		32-45-14	275-299
	A10	UNUSED						ALL
	A11	UNUSED						ALL
	A12	UNUSED						ALL
	A13	UNUSED						ALL
	A14	UNUSED						ALL
	A15	UNUSED						ALL
	B01		W0127	630	22		32-45-11	050-099, 150-199
	B01		W0183	070	22		32-45-11	275-299
	B02		W0127	269B	24		32-45-13	050-099, 150-199
	B02		W0183	237B	24		32-45-13	275-299
	B03		W0127	270B	24		32-45-13	050-099, 150-199
	B03		W0183	238B	24		32-45-13	275-299
	B04		W0127	563B	24		32-45-14	050-099, 150-199
	B04		W0183	241B	24		32-45-14	275-299
	B05		W0127	564B	24		32-45-14	050-099, 150-199
	B05		W0183	242B	24		32-45-14	275-299
	B06		W0127	297B	24		32-45-13	050-099, 150-199
	B06		W0183	239B	24		32-45-13	275-299
	B07		W0127	298B	24		32-45-13	050-099, 150-199
	B07		W0183	240B	24		32-45-13	275-299
	B08		W0127	565B	24		32-45-14	050-099, 150-199
	B08		W0183	243B	24		32-45-14	275-299
	B09		W0127	566B	24		32-45-14	050-099, 150-199
	B09		W0183	244B	24		32-45-14	275-299
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13	UNUSED						ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	C01	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D13300

Page 4

Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D13366A		SHELF/E01/4		PLUG-PART OF D13366 (continued)				050-099, 150-199
D13366A		SHELF-E2/06/		PLUG-PART OF D13366 (continued)				275-299
	C02		W0127	269Z			32-45-13	050-099, 150-199
	C02		W0183	237Z			32-45-13	275-299
	C03		W0127	270Z			32-45-13	050-099, 150-199
	C03		W0183	238Z			32-45-13	275-299
	C04		W0127	563Z			32-45-14	050-099, 150-199
	C04		W0183	241Z			32-45-14	275-299
	C05		W0127	564Z			32-45-14	050-099, 150-199
	C05		W0183	242Z			32-45-14	275-299
	C06		W0127	297Z			32-45-13	050-099, 150-199
	C06		W0183	239Z			32-45-13	275-299
	C07		W0127	298Z			32-45-13	050-099, 150-199
	C07		W0183	240Z			32-45-13	275-299
	C08		W0127	565Z			32-45-14	050-099, 150-199
	C08		W0183	243Z			32-45-14	275-299
	C09		W0127	566Z			32-45-14	050-099, 150-199
	C09		W0183	244Z			32-45-14	275-299
	C10	UNUSED						ALL
	C11	UNUSED						ALL
	C12	UNUSED						ALL
	C13	UNUSED						ALL
	C14	UNUSED						ALL
	C15	UNUSED						ALL
	D01		W0127	631	22		32-45-11	050-099, 150-199
	D01		W0183	071	22		32-45-11	275-299
	D02	UNUSED						ALL
	D03		W0127	680	22		32-45-11	050-099, 155-199
	D03	UNUSED						150-154
	D03		W0183	075	22		32-45-11	275-299
	D04	UNUSED						ALL
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	D08	UNUSED						ALL
	D09	UNUSED						ALL
	D10	UNUSED						ALL
	D11	UNUSED						ALL
	D12	UNUSED						ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D13300

Page 5

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D13366A		SHELF/E01/4		PLUG-PART OF D13366 (continued)				050-099, 150-199
D13366A		SHELF-E2/06/		PLUG-PART OF D13366 (continued)				275-299
	D15	UNUSED						ALL
D13366B		SHELF/E01/4		PLUG-PART OF D13366				050-099, 150-199
D13366B		SHELF-E2/06/		PLUG-PART OF D13366				275-299
	A01	UNUSED						ALL
	A02	UNUSED						ALL
	A03		W0127	268R	24		32-45-12	050-099, 150-199
	A03		W0183	236R	24		32-45-12	275-299
	A04		W0127	267R	24		32-45-12	050-099, 150-199
	A04		W0183	235R	24		32-45-12	275-299
	A05		W0127	266R	24		32-45-11	050-099, 150-199
	A05		W0183	234R	24		32-45-11	275-299
	A06	UNUSED						ALL
	A07	UNUSED						ALL
	A08	UNUSED						ALL
	A09	UNUSED						ALL
	A10	UNUSED						ALL
	A11	UNUSED						ALL
	A12	UNUSED						ALL
	A13		W0127	629	24		32-45-11	050-099, 150-199
	A13		W0183	069	24		32-45-11	275-299
	A14	UNUSED						ALL
	A15	UNUSED						ALL
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03		W0127	268B	24		32-45-12	050-099, 150-199
	B03		W0183	236B	24		32-45-12	275-299
	B04		W0127	267B	24		32-45-12	050-099, 150-199
	B04		W0183	235B	24		32-45-12	275-299
	B05		W0127	266B	24		32-45-11	050-099, 150-199
	B05		W0183	234B	24		32-45-11	275-299
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D13300

Page 6

Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D13366B		SHELF/E01/4		PLUG-PART OF D13366 (continued)				050-099, 150-199
D13366B		SHELF-E2/06/		PLUG-PART OF D13366 (continued)				275-299
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	C01	UNUSED						ALL
	C02	UNUSED						ALL
	C03		W0127	268Z			32-45-12	050-099, 150-199
	C03		W0183	236Z			32-45-12	275-299
	C04		W0127	267Z			32-45-12	050-099, 150-199
	C04		W0183	235Z			32-45-12	275-299
	C05	UNUSED						ALL
	C06	UNUSED						ALL
	C07	UNUSED						ALL
	C08	UNUSED						ALL
	C09	UNUSED						ALL
	C10	UNUSED						ALL
	C11	UNUSED						ALL
	C12	UNUSED						ALL
	C13	UNUSED						ALL
	C14	UNUSED						ALL
	C15	UNUSED						ALL
	D01	UNUSED						ALL
	D02	UNUSED						ALL
	D03	UNUSED						ALL
	D04	UNUSED						ALL
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	D08	UNUSED						ALL
	D09	UNUSED						ALL
	D10	UNUSED						ALL
	D11	UNUSED						ALL
	D12	UNUSED						ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15	UNUSED						ALL
	REF		W0127	266	20		32-45-11	050-099, 150-199
	REF		W0127	266Z			32-45-11	050-099, 150-199
	REF		W0183	234	20		32-45-11	275-299
	REF		W0183	234Z			32-45-11	275-299

HOOKUP LIST

D280T132

91-21-51

Section D13300

Page 7

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D13366C		SHELF-E2/06/		PLUG-PART OF D13366				275-299
	1	UNUSED						275-299
	2	UNUSED						275-299
	3	UNUSED						275-299
	4	UNUSED						275-299
	5	UNUSED						275-299
	= C1	UNUSED						275-299
	= C5	UNUSED						275-299
D13368 D13368		P025-00/ / P025-00/ /		RLY SOCKET- SOCKET-				050-099 150-199
	A1		W1108	189	24		33-21-12	050-099, 150-199
	A2		W1108	628	24		33-21-12	050-099, 150-199
	A3		W1108	188	24		33-21-12	050-099, 150-199
	B1		W1108	015	24		33-21-12	050-099, 150-199
	B2		W1108	629	24		33-21-12	050-099, 150-199
	B3		W1108	190	24		33-21-12	050-099, 150-199
	C1		W1108	185	24		33-21-21	050-099, 150-199
	C2		W1108	187	24		33-21-21	050-099, 150-199
	C3		W1108	184	22		33-21-21	050-099, 150-199
	D1		W1108	193	24		33-21-12	050-099, 150-199
	D2		W1108	194	20		33-21-12	050-099, 150-199
	D3		W1108	192	24		33-21-12	050-099, 150-199
	X1		W1108	623	24		33-21-12	050-099, 150-199
	X2		W1108	023	24		33-21-12	050-099, 150-199
	Y1		W1108	622	24		33-21-12	050-099, 150-199
	Y2		W1108	071	24		33-21-12	050-099, 150-199
D13370 D13370		P019-00/ / P019-00/ /		RELAY SOCKET- SOCKET-				050-099 150-199
	A1	UNUSED						050-099, 150-199
	A2		W1104	610	20		33-21-31	050-099, 150-199
	A3		W1104	726	20		33-21-31	050-099, 150-199
	B1	UNUSED						050-099, 150-199
	B2	UNUSED						050-099, 150-199
	B3	UNUSED						050-099, 150-199
	X1		W1104	599	24		33-21-31	050-099, 150-199
	X2		W1104	500	24		33-21-31	050-099, 150-199

HOOKUP LIST

D280T132

91-21-51

Section D13300

Page 8

Mar 09/2006



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D13372		P019-00/ /		RELAY SOCKET-				050-099
D13372		P019-00/ /		SOCKET-				150-199
	A1		W1104	074	20		33-21-31	050-099, 162-199
	A1	UNUSED						150-157
	A2		W1104	609	20		33-21-31	050-099, 150-199
	A3	UNUSED						050-099, 162-199
	A3		W1104	722	20		33-21-31	150-157
	B1		W1104	722	18		33-21-31	050-099
	B1	UNUSED						150-157
	B1		W1104	722	16		33-21-31	162-165, 167-199
	B1		W1104	121	16		33-21-31	166
	B2		W1104	801	18		33-21-31	050-099
	B2	UNUSED						150-157
	B2		W1104	801	16		33-21-31	162-199
	B3	UNUSED						050-099, 150-199
	X1		W1104	664	24		33-21-31	050-099, 150-199
	X2		W1104	725	24		33-21-31	050-099, 150-199
D13374		R NOSE/WHL/10		PLUG				050-099, 155-199, 275-299
	1		W1294	208R	20		32-45-12	050-099, 155-156, 163-199, 275-299
	1	UNUSED						157-162
	2		W1294	208B	20		32-45-12	050-099, 155-156, 163-199, 275-299
	2	UNUSED						157-162
	3		W1294	208Z			32-45-12	050-099, 155-156, 163-199, 275-299
	3	UNUSED						157-162
	4	UNUSED						050-099, 155-199, 275-299
	5	UNUSED						050-099, 155-199, 275-299
D13376		L NOSE/WHL/09		PLUG				050-099, 155-199, 275-299
	1		W1294	207R	20		32-45-12	050-099, 155-156, 163-199, 275-299
	1	UNUSED						157-162
	2		W1294	207B	20		32-45-12	050-099, 155-156, 163-199, 275-299
	2	UNUSED						157-162
	3		W1294	207Z			32-45-12	050-099, 155-156, 163-199, 275-299
	3	UNUSED						157-162
	4	UNUSED						050-099, 155-199, 275-299
	5	UNUSED						050-099, 155-199, 275-299
D13378		R GEAR/WHL/08		PLUG				050-099, 155-199, 275-299
	1		W0688	208R	20		32-45-14	050-099, 155-156, 163-199, 275-299

HOOKUP LIST

D280T132

91-21-51

Section D13300

Page 9

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D13378		R GEAR/WHL/08		PLUG (continued)				050-099, 155-199, 275-299
	1	UNUSED						157-162
	2		W0688	208B	20		32-45-14	050-099, 155-156, 163-199, 275-299
	2	UNUSED						157-162
	3	DK	W0688	208Z			32-45-14	050-099, 155-156, 163-199, 275-299
	3	UNUSED						157-162
	4	UNUSED						050-099, 155-199, 275-299
	5	UNUSED						050-099, 155-199, 275-299
	CAP	Y	W0688	208B	20		32-45-14	157-162
	CAP	Y	W0688	208R	20		32-45-14	157-162
	DED		W0688	208Z			32-45-14	157-162
D13380		R GEAR/WHL/07		PLUG				050-099, 155-199, 275-299
	1		W0688	207R	20		32-45-14	050-099, 155-156, 163-199, 275-299
	1	UNUSED						157-162
	2		W0688	207B	20		32-45-14	050-099, 155-156, 163-199, 275-299
	2	UNUSED						157-162
	3	DK	W0688	207Z			32-45-14	050-099, 155-156, 163-199, 275-299
	3	UNUSED						157-162
	4	UNUSED						050-099, 155-199, 275-299
	5	UNUSED						050-099, 155-199, 275-299
	CAP	Y	W0688	207B	20		32-45-14	157-162
	CAP	Y	W0688	207R	20		32-45-14	157-162
	DED		W0688	207Z			32-45-14	157-162
D13382		L GEAR/WHL/06		PLUG				050-099, 155-199, 275-299
	1		W0668	208R	20		32-45-13	050-099, 155-156, 163-199, 275-299
	1	UNUSED						157-162
	2		W0668	208B	20		32-45-13	050-099, 155-156, 163-199, 275-299
	2	UNUSED						157-162
	3		W0668	208Z			32-45-13	050-099, 155-156, 163-199, 275-299
	3	UNUSED						157-162
	4	UNUSED						050-099, 155-199, 275-299
	5	UNUSED						050-099, 155-199, 275-299
	CAP	Y	W0668	208B	20		32-45-13	157-162
	CAP	Y	W0668	208R	20		32-45-13	157-162
	DED		W0668	208Z			32-45-13	157-162
D13384		L GEAR/WHL/05		PLUG				050-099, 155-199, 275-299
	1		W0668	207R	20		32-45-13	050-099, 155-156, 163-199, 275-299
	1	UNUSED						157-162

HOOKUP LIST

D280T132

91-21-51

Section D13300

Page 10

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D13384		L GEAR/WHL/05		PLUG (continued)				050-099, 155-199, 275-299
	2		W0668	207B	20		32-45-13	050-099, 155-156, 163-199, 275-299
	2	UNUSED						157-162
	3		W0668	207Z			32-45-13	050-099, 155-156, 163-199, 275-299
	3	UNUSED						157-162
	4	UNUSED						050-099, 155-199, 275-299
	5	UNUSED						050-099, 155-199, 275-299
	CAP	Y	W0668	207B	20		32-45-13	157-162
	CAP	Y	W0668	207R	20		32-45-13	157-162
	DED		W0668	207Z			32-45-13	157-162
D13386		R GEAR/WHL/04		PLUG				050-099, 155-199, 275-299
	1		W0686	208R	20		32-45-14	050-099, 155-156, 163-199, 275-299
	1	UNUSED						157-162
	2		W0686	208B	20		32-45-14	050-099, 155-156, 163-199, 275-299
	2	UNUSED						157-162
	3		W0686	208Z			32-45-14	050-099, 155-156, 163-199, 275-299
	3	UNUSED						157-162
	4	UNUSED						050-099, 155-199, 275-299
	5	UNUSED						050-099, 155-199, 275-299
	CAP	Y	W0686	208B	20		32-45-14	157-162
	CAP	Y	W0686	208R	20		32-45-14	157-162
	DED		W0686	208Z			32-45-14	157-162
D13388		R GEAR/WHL/03		PLUG				050-099, 155-199, 275-299
	1		W0686	207R	20		32-45-14	050-099, 155-156, 163-199, 275-299
	1	UNUSED						157-162
	2		W0686	207B	20		32-45-14	050-099, 155-156, 163-199, 275-299
	2	UNUSED						157-162
	3		W0686	207Z			32-45-14	050-099, 155-156, 163-199, 275-299
	3	UNUSED						157-162
	4	UNUSED						050-099, 155-199, 275-299
	5	UNUSED						050-099, 155-199, 275-299
	CAP	Y	W0686	207B	20		32-45-14	157-162
	CAP	Y	W0686	207R	20		32-45-14	157-162
	DED		W0686	207Z			32-45-14	157-162
D13390		L GEAR/WHL/02		PLUG				050-099, 155-199, 275-299
	1		W0676	208R	20		32-45-13	050-099, 155-156, 163-199, 275-299
	1	UNUSED						157-162
	2		W0676	208B	20		32-45-13	050-099, 155-156, 163-199, 275-299

HOOKUP LIST

D280T132

91-21-51

Section D13300

Page 11

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D13390		L GEAR/WHL/02		PLUG (continued)				050-099, 155-199, 275-299
	2	UNUSED						157-162
	3		W0676	208Z			32-45-13	050-099, 155-156, 163-199, 275-299
	3	UNUSED						157-162
	4	UNUSED						050-099, 155-199, 275-299
	5	UNUSED						050-099, 155-199, 275-299
	CAP	Y	W0676	208B	20		32-45-13	157-162
	CAP	Y	W0676	208R	20		32-45-13	157-162
	DED		W0676	208Z			32-45-13	157-162
D13392		L GEAR/WHL/01		PLUG				050-099, 155-199, 275-299
	1		W0676	207R	20		32-45-13	050-099, 155-156, 163-199, 275-299
	1	UNUSED						157-162
	2		W0676	207B	20		32-45-13	050-099, 155-156, 163-199, 275-299
	2	UNUSED						157-162
	3		W0676	207Z			32-45-13	050-099, 155-156, 163-199, 275-299
	3	UNUSED						157-162
	4	UNUSED						050-099, 155-199, 275-299
	5	UNUSED						050-099, 155-199, 275-299
	CAP	Y	W0676	207B	20		32-45-13	157-162
	CAP	Y	W0676	207R	20		32-45-13	157-162
	DED		W0676	207Z			32-45-13	157-162
D13394		P025-00/ /		RLY SOCKET				050-099
D13394		P025-00/ /		RELAY SOCKET-				150-199
	A1		W1064	621	22		33-22-42	050-099, 150-199
	A2		W1064	082	22		33-22-42	050-099, 150-199
	A3		W1064	620	22		33-22-42	050-099, 150-199
	B1		W1064	623	22		33-22-42	050-099, 150-199
	B2		W1064	624	22		33-22-42	050-099, 150-199
	B3		W1064	622	22		33-22-42	050-099, 150-199
	C1	UNUSED						050-099, 150-199
	C2	UNUSED						050-099, 150-199
	C3	UNUSED						050-099, 150-199
	D1	UNUSED						050-099, 150-199
	D2	UNUSED						050-099, 150-199
	D3	UNUSED						050-099, 150-199
	X1		W1064	611	22		33-22-42	050-099, 150-199
	X2		W1064	625	22		33-22-42	050-099, 150-199
	Y1		W1064	610	22		33-22-42	050-099, 150-199
	Y2		W1064	083	22		33-22-42	050-099, 150-199

HOOKUP LIST
D280T132

91-21-51
Section D13300
Page 12
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D13396		P036-00/PNL/		RLY SKT				050-099, 275-276
D13396		P036-00/ /		RLY SKT				150-156, 162-166
D13396		P036-00/ /		RELAY SOCKET				157, 167-199, 277-299
	1		W0176	274B	24		21-61-51	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W0176	17M	20		21-28-11	ALL
	5		W0176	17S	24		21-28-11	ALL
	6		W0176	19M	24		32-09-11	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12		W0176	19L	24		32-09-11	ALL
	13		W0176	274R	24		21-61-51	ALL
	14	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D13300

Page 13 End

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D13400		P036-00/ /		RELAY SOCKET-P36				050-099
D13400		P036-00/ /		RLY SKT				150-199, 275-299
	A1		W0176	14W	20		21-61-51	ALL
	A2		W0176	297B	24		21-61-51	ALL
	A3		W0176	294B	24		21-61-51	ALL
	B1		W0176	14X	20		21-61-51	ALL
	B2		W0176	297R	24		21-61-51	ALL
	B3		W0176	294R	24		21-61-51	ALL
	X1		W0176	14J	24		21-61-51	ALL
	X2		W0176	14V	24		21-61-51	ALL
D13402		P036-00/ /		RLY SKT				ALL
	A1	UNUSED						ALL
	A2	UNUSED						ALL
	A3	UNUSED						ALL
	B1	UNUSED						ALL
	B2		W0176	16X	24		21-61-61	ALL
	B3		W0176	16UB	24		21-61-61	ALL
	C1		W0176	16W	24		21-61-61	ALL
	C2		W0176	16V	24		21-61-61	ALL
	C3		W0176	16UR	24		21-61-61	ALL
	D1	UNUSED						ALL
	D2	UNUSED						ALL
	D3	UNUSED						ALL
	X1		W0176	16P	24		21-61-61	ALL
	X2		W0176	16N	24		21-61-61	ALL
D13404		P036-00/ /		RLY SKT				ALL
	A1		W0176	16L	24		21-61-61	ALL
	A2		W0176	16J	20		21-61-61	ALL
	A3		W0176	16M	24		21-61-61	ALL
	B1		W0176	16S	24		21-61-61	ALL
	B2		W0176	16T	24		21-61-61	ALL
	B3	UNUSED						ALL
	X1		W0176	16H	24		21-61-61	ALL
	X2		W0176	17G	24		21-61-61	ALL
D13406		P036-00/ /		RLY SKT				ALL
	1		W0176	17E	24		21-61-61	ALL
	2		W0176	16L	24		21-61-61	ALL
	3		W0176	17B	24		21-61-61	ALL

HOOKUP LIST

D280T132

91-21-51

Section D13400

Page 1

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D13406		P036-00/ /		RLY SKT (continued)				ALL
	4	UNUSED						ALL
	5		W0176	17D	24		21-61-61	ALL
	6		W0176	17F	20		21-61-61	ALL
	7		W0176	17A	24		21-61-61	ALL
	8	UNUSED						ALL
D13408		P036-00/PNL/		RLY SKT				050-099
D13408		P036-00/ /		RLY SKT				150-199, 275-299
	A1	UNUSED						ALL
	A2	UNUSED						ALL
	A3	UNUSED						ALL
	B1	UNUSED						ALL
	B2		W0176	16B	24		21-61-71	ALL
	B3		W0176	200B	24		21-61-71	ALL
	C1		W0176	15Y	24		21-61-71	ALL
	C2		W0176	16A	24		21-61-71	050-099, 275-299
	C2		W0176	16A	22		21-61-71	150-199
	C3		W0176	200R	24		21-61-71	ALL
	D1	UNUSED						ALL
	D2	UNUSED						ALL
	D3	UNUSED						ALL
	X1		W0176	183	24		21-61-71	ALL
	X2		W0176	13W	24		21-61-71	ALL
D13410		P036-00/PNL/		RLY SKT				050-099
D13410		P036-00/ /		RLY SKT				150-199, 275-299
	A1		W0176	11Y	24		21-61-71	ALL
	A2		W0176	11S	20		21-61-71	ALL
	A3		W0176	11X	24		21-61-71	ALL
	B1		W0176	15W	24		21-61-71	ALL
	B2		W0176	15V	24		21-61-71	ALL
	B3	UNUSED						ALL
	X1		W0176	11R	24		21-61-71	ALL
	X2		W0176	12W	24		21-61-71	ALL
D13412		P036-00/PNL/		RLY SKT				050-099
D13412		P036-00/ /		RLY SKT				150-199, 275-299
	1		W0176	12Y	24		21-61-71	ALL
	2		W0176	11Y	24		21-61-71	ALL
	3		W0176	15R	24		21-61-71	ALL

HOOKUP LIST

D280T132

91-21-51

Section D13400

Page 2

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D13412		P036-00/PNL/		RLY SKT (continued)				050-099
D13412		P036-00/ /		RLY SKT (continued)				150-199, 275-299
	4	UNUSED						ALL
	5		W0176	13X	24		21-61-71	ALL
	6		W0176	15N	20		21-61-71	ALL
	7		W0176	15P	24		21-61-71	ALL
	8	UNUSED						ALL
D13414		1056/278/L050		PLUG-				050-099
D13414		967/ /L050		PLUG-				150-199
	1		W0792	052	20		33-26-11	050-099
	1		W0814	898	20		33-26-11	150-199
	2		W0792	005	16		38-13-11	050-099
	2		W0814	901	16		38-13-11	150-199
	3	UNUSED						050-099, 150-199
	4	UNUSED						050-099, 150-199
	5		W0792	207B	22		23-31-14	050-099
	5		W0814	210B	22		23-31-14	150-199
	6		W0792	011	18		33-26-11	050-099
	6		W0814	897	18		33-26-11	150-199
	7		W0792	066	22		33-25-11	050-099
	7		W0814	189	22		33-25-11	150-199
	8		W0792	057	16		38-13-11	050-099
	8		W0814	900	16		38-13-11	150-199
	9		W0792	067	22		33-25-11	050-099
	9		W0814	190	22		33-25-11	150-199
	10		W0792	189	20		33-26-21	050-099
	10		W0814	884	20		33-26-21	150-199
	11	UNUSED						050-099, 150-199
	12		W0792	112	20		33-24-11	050-099
	12		W0814	800	20		33-24-11	150-199
	13		W0792	190	20		33-26-21	050-099
	13		W0814	809	20		33-26-21	150-199
	14	UNUSED						050-099, 150-199
	15		W0792	055	22		33-26-11	050-099
	15		W0814	895	22		33-26-11	150-199
	16		W0792	207R	22		23-31-14	050-099
	16		W0814	210R	22		23-31-14	150-199
	17		W0792	117	20		33-26-11	050-099
	17		W0814	896	20		33-26-11	150-199
	18		W0792	891	20		38-32-12	050-099

HOOKUP LIST

D280T132

91-21-51

Section D13400

Page 3

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D13414		1056/278/L050		PLUG- (continued)				050-099
D13414		967/ /L050		PLUG- (continued)				150-199
	18		W0814	891	22		38-32-12	150-154
	18		W0814	891	20		38-32-12	155-156, 162-165
	18		W0814	891	20		38-32-16	157, 166-199
	19		W0792	892	20		38-32-12	050-099
	19		W0814	892	22		38-32-12	150-154
	19		W0814	892	20		38-32-12	155-156, 162-165
	19		W0814	892	20		38-32-16	157, 166-199
	20		W0792	893	20		38-32-12	050-099
	20	DK	W0814	893	18		38-32-12	150-156, 162-165
	20	DK	W0814	893	18		38-32-16	157, 166-199
	21		W0792	894	22		38-32-12	050-099
	21		W0814	894	22		38-32-12	150-155, 162-165
	21		W0814	894	22		38-32-16	156-157, 166-199
	22	UNUSED						050-099, 150-199
	23	UNUSED						050-099, 150-199
	24	UNUSED						050-099, 150-199
	25		W0792	068	22		33-25-11	050-099
	25		W0814	191	22		33-25-11	150-199
	26		W0792	069	20		33-25-11	050-099
	26		W0814	192	20		33-25-11	150-199
	27	UNUSED						050-099, 150-199
	28	UNUSED						050-099, 150-199
	29	UNUSED						050-099, 150-199
	30	UNUSED						050-099, 150-199
	31	UNUSED						050-099, 150-199
	32	UNUSED						050-099, 150-199
D13416		0846/278/R028		PLUG				150-199
	1		W0792	018	20		33-26-11	150-199
	2		W0792	151	16		38-13-11	150-199
	3	UNUSED						150-199
	4	UNUSED						150-199
	5		W0792	206B	22		23-31-14	150-199
	6		W0792	177	20		33-26-11	150-199
	7		W0792	107	22		33-25-11	150-199
	8		W0792	150	16		38-13-11	150-199
	9		W0792	109	22		33-25-11	150-199
	10		W0792	003	20		33-26-21	150-199
	11	UNUSED						150-199

HOOKUP LIST

D280T132

91-21-51

Section D13400

Page 4

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D13416		0846/278/R028		PLUG (continued)				150-199
	12		W0792	112	20		33-24-11	150-199
	13		W0792	007	20		33-26-21	150-199
	14		W0792	008	20		33-26-21	150-199
	15		W0792	178	20		33-26-11	150-199
	16		W0792	206R	22		23-31-14	150-199
	17		W0792	181	22		33-26-11	150-199
	18		W0792	142	20		38-32-12	150-156, 162-165
	18		W0792	142	20		38-32-16	157, 166-199
	19		W0792	143	20		38-32-12	150-156, 162-165
	19		W0792	143	20		38-32-16	157, 166-199
	20		W0792	144	20		38-32-12	150-156, 162-165
	20		W0792	144	20		38-32-16	157, 166-199
	21		W0792	145	20		38-32-12	150-156, 162-165
	21		W0792	145	20		38-32-16	157, 166-199
	22	UNUSED						150-199
	23	UNUSED						150-199
	24	UNUSED						150-199
	25		W0792	125	22		33-25-11	150-199
	26		W0792	126	20		33-25-11	150-199
	27	UNUSED						150-199
	28	UNUSED						150-199
	29	UNUSED						150-199
	30		W0792	136	20		33-24-11	150-199
	31	UNUSED						150-199
	32		W0792	137	20		33-24-11	150-199
D13418		P036-00/ /		SOCKET RELAY				ALL
	1	UNUSED						ALL
	2		W0176	15A	20		21-58-11	ALL
	3		W0176	15B	24		21-58-11	ALL
	4	UNUSED						ALL
	5		W0176	15C	24		21-58-11	ALL
	6	UNUSED						ALL
	7		W0176	15D	24		21-58-11	ALL
	8	UNUSED						ALL
D13422 D13422		P037-00/PNL/ P037-00/ /		RLY SKT RLY SKT				050-099 150-199, 275-299
	A1		W1118	11G	22		21-26-31	ALL
	A2		W1118	11A	22		21-26-31	ALL

HOOKUP LIST
D280T132

91-21-51
Section D13400
Page 5
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D13422		P037-00/PNL/		RLY SKT (continued)				050-099
D13422		P037-00/ /		RLY SKT (continued)				150-199, 275-299
	A3	UNUSED						ALL
	B1		W1118	11H	22		21-26-31	ALL
	B2		W1118	11B	22		21-26-31	ALL
	B3	UNUSED						ALL
	C1		W1118	11J	22		21-26-31	ALL
	C2		W1118	11C	22		21-26-31	ALL
	C3	UNUSED						ALL
	D1	UNUSED						ALL
	D2	UNUSED						ALL
	D3	UNUSED						ALL
	X1		W1118	11X	24		21-26-31	ALL
	X2		W1118	11K	24		21-26-31	ALL
D13424		P037-00/PNL/		RLY SKT				050-099
D13424		P037-00/ /		RLY SKT				150-199, 275-299
	A1		W1118	11L	22		21-26-31	ALL
	A2		W1118	11D	22		21-26-31	ALL
	A3	UNUSED						ALL
	B1		W1118	11M	22		21-26-31	ALL
	B2		W1118	11E	22		21-26-31	ALL
	B3	UNUSED						ALL
	C1		W1118	11N	22		21-26-31	ALL
	C2		W1118	11F	22		21-26-31	ALL
	C3	UNUSED						ALL
	D1	UNUSED						ALL
	D2	UNUSED						ALL
	D3	UNUSED						ALL
	X1		W1118	11V	24		21-26-31	ALL
	X2		W1118	11P	24		21-26-31	ALL
D13426		P037-00/PNL/		RLY SKT				050-099
D13426		P037-00/ /		RLY SKT				150-199, 275-299
	A1		W1118	12U	22		21-28-11	ALL
	A2		W1118	12L	22		21-28-11	ALL
	A3		W1118	12V	22		21-28-11	ALL
	B1	UNUSED						ALL
	B2	UNUSED						ALL
	B3	UNUSED						ALL
	X1		W1118	12Y	24		21-28-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D13400

Page 6

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D13426		P037-00/PNL/		RLY SKT (continued)				050-099
D13426		P037-00/ /		RLY SKT (continued)				150-199, 275-299
	X2		W1118	12T	24		21-28-11	ALL
D13428		P037-00/PNL/		RLY SKT				050-099
D13428		P037-00/ /		RLY SKT				150-199, 275-299
	A1		W1118	12R	22		21-28-11	ALL
	A2		W1118	70A	22		21-28-11	ALL
	A3		W1118	12S	22		21-28-11	ALL
	B1	UNUSED						ALL
	B2	UNUSED						ALL
	B3	UNUSED						ALL
	X1		W1118	12K	24		21-28-11	ALL
	X2		W1118	13A	24		21-28-11	ALL
	DED		W1118	12RZ			21-28-11	050-099
	DED		W1118	12SZ			21-28-11	050-099
	DED		W1118	70AZ			21-28-11	050-099
D13430		P037-00/PNL/		RLY SKT				050-099
D13430		P037-00/ /		RLY SKT				150-199, 275-299
	A1		W1118	12N	22		21-28-11	ALL
	A2		W1118	12M	22		21-28-11	ALL
	A3		W1118	12P	22		21-28-11	ALL
	B1	UNUSED						ALL
	B2	UNUSED						ALL
	B3	UNUSED						ALL
	X1		W1118	13C	24		21-28-11	ALL
	X2		W1118	12W	24		21-28-11	ALL
D13432		P036-00/PNL/		RLY SKT				050-099
D13432		P036-00/ /		RLY SKT				150-199, 275-299
	A1		W0176	17R	22		21-28-11	ALL
	A2		W0176	01H	22		21-28-11	ALL
	A3		W0176	17N	22		21-28-11	ALL
	B1	UNUSED						ALL
	B2	UNUSED						ALL
	B3	UNUSED						ALL
	X1		W0176	17T	24		21-28-11	ALL
	X2		W0176	17S	24		21-28-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D13400

Page 7

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D13438		P037-00/PNL/		RLY SKT				050-099
D13438		P037-00/ /		RLY SKT				150-199, 275-299
	A1	UNUSED						ALL
	A2	UNUSED						ALL
	A3	UNUSED						ALL
	B1		W0192	20G	24		21-61-81	ALL
	B2		W0192	20F	24		21-61-81	ALL
	B3	UNUSED						ALL
	X1		W0192	80G	24		21-61-81	050-099, 151-199, 275-299
	X1		W0192	72H	24		21-61-81	150
	X2		W0192	20S	24		21-61-81	ALL
D13440		P037-00/PNL/		RLY SKT				050-099
D13440		P037-00/ /		RLY SKT				150-199, 275-299
	A1		W0192	20HB	24		21-61-81	ALL
	A2		W0192	20L	24		21-61-81	ALL
	A3	UNUSED						ALL
	B1		W0192	20HR	24		21-61-81	ALL
	B2		W0192	70K	24		21-61-81	ALL
	B3	UNUSED						ALL
	C1	UNUSED						ALL
	C2	UNUSED						ALL
	C3	UNUSED						ALL
	D1	UNUSED						ALL
	D2		W0192	70M	24		21-61-81	ALL
	D3		W0192	20J	24		21-61-81	ALL
	X1		W0192	72J	24		21-61-81	ALL
	X2		W0192	18V	24		21-61-81	ALL
D13442J		AP0307/ /		RECP				050-099, 150-199
	1		W1224	145	22		33-21-21	050-099, 150-199
	2		W1224	146	22		33-21-21	050-099, 150-199
	3		W1224	147	22		33-21-21	050-099, 150-199
	4		W1224	148	20		33-21-21	050-099, 150-199
	5		W1224	149	22		33-21-21	050-099, 150-199
	6		W1224	167	24		33-21-31	050-099, 150-199
	7		W1224	130	24		33-21-12	050-099
	7		W1224	130	20		33-21-12	150-199
	8		W1224	169	24		33-21-31	050-099, 150-199
	9		W1224	171	24		33-21-31	050-099, 150-199

HOOKUP LIST

D280T132

91-21-51

Section D13400

Page 8

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D13442J		AP0307/ /		RECP (continued)				050-099, 150-199
	10	UNUSED						050-099, 150-199
	11		W1224	173	20		33-21-31	050-099, 150-199
	12		W1224	170	24		33-21-31	050-099, 162-199
	12		W1224	170	20		33-21-31	150-157
	13		W1224	151	20		33-22-32	050-099, 150-199
	14		W1224	152	20		33-22-32	050-099, 150-199
	15		W1224	153	20		33-22-32	050-099, 150-199
	16		W1224	043	22		33-24-12	050-099, 150-199
	17		W1224	162	20		33-24-12	050-099, 150-199
	18		W1224	042	22		33-24-12	050-099, 150-199
	19	UNUSED						050-099, 150-199
	20	UNUSED						050-099, 150-199
	21	UNUSED						050-099, 150-199
	22	UNUSED						050-099, 150-199
	23	UNUSED						050-099, 150-199
	24	UNUSED						050-099, 150-199
	25	UNUSED						050-099, 150-199
	26	UNUSED						050-099, 150-199
	27	UNUSED						050-099, 150-199
	28	UNUSED						050-099, 150-199
	29	UNUSED						050-099, 150-199
	30	UNUSED						050-099, 150-199
	31	UNUSED						050-099, 150-199
	32	UNUSED						050-099, 150-199
	33	UNUSED						050-099, 150-199
	34	UNUSED						050-099, 150-199
	35	UNUSED						050-099, 150-199
	36	UNUSED						050-099, 150-199
	37	UNUSED						050-099, 150-199
	38	UNUSED						050-099, 150-199
	39	UNUSED						050-099, 150-199
	40	UNUSED						050-099, 150-199
	41	UNUSED						050-099, 150-199
	42	UNUSED						050-099, 150-199
	43	UNUSED						050-099, 150-199
	44	UNUSED						050-099, 150-199
	45	UNUSED						050-099, 150-199
	46	UNUSED						050-099, 150-199
	47	UNUSED						050-099, 150-199
	48	UNUSED						050-099, 150-199

HOOKUP LIST

D280T132

91-21-51

Section D13400

Page 9

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D13442J		AP0307/ /		RECP (continued)				050-099, 150-199
	49	UNUSED						050-099, 150-199
	50	UNUSED						050-099, 150-199
	51	UNUSED						050-099, 150-199
	52	UNUSED						050-099, 150-199
	53	UNUSED						050-099, 150-199
	54	UNUSED						050-099, 150-199
	55	UNUSED						050-099, 150-199
D13442P		380/315/L8		PLUG				050-099, 150-199
	1		W1449	001	22		33-21-21	050-099, 150-199
	2		W1449	002	22		33-21-21	050-099, 150-199
	3		W1449	003	22		33-21-21	050-099, 150-199
	4		W1449	004	20		33-21-21	050-099, 150-199
	5		W1449	005	22		33-21-21	050-099, 150-199
	6		W1449	006	24		33-21-31	050-099, 150-199
	7		W1449	054	24		33-21-12	050-099, 150-199
	8		W1449	008	24		33-21-31	050-099, 150-199
	9		W1449	009	24		33-21-31	050-099, 150-199
	10	UNUSED						050-099, 150-199
	11		W1449	011	20		33-21-31	050-099, 150-199
	12		W1449	012	24		33-21-31	050-099, 155-199
	12		W1449	012	20		33-21-31	150-154
	13		W1449	013	22		33-22-32	050-099, 150-199
	14		W1449	014	20		33-22-32	050-099, 150-199
	15		W1449	015	20		33-22-32	050-099, 150-199
	16		W1449	016	22		33-24-12	050-099, 150-199
	17		W1449	017	20		33-24-12	050-099, 150-199
	18		W1449	018	22		33-24-12	050-099, 150-199
	19	UNUSED						050-099, 150-199
	20	UNUSED						050-099, 150-199
	21	UNUSED						050-099, 150-199
	22	UNUSED						050-099, 150-199
	23	UNUSED						050-099, 150-199
	24	UNUSED						050-099, 150-199
	25	UNUSED						050-099, 150-199
	26	UNUSED						050-099, 150-199
	27	UNUSED						050-099, 150-199
	28	UNUSED						050-099, 150-199
	29	UNUSED						050-099, 150-199
	30	UNUSED						050-099, 150-199

HOOKUP LIST

D280T132

91-21-51

Section D13400

Page 10

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D13442P		380/315/L8		PLUG (continued)				050-099, 150-199
	31	UNUSED						050-099, 150-199
	32	UNUSED						050-099, 150-199
	33	UNUSED						050-099, 150-199
	34	UNUSED						050-099, 150-199
	35	UNUSED						050-099, 150-199
	36	UNUSED						050-099, 150-199
	37	UNUSED						050-099, 150-199
	38	UNUSED						050-099, 150-199
	39	UNUSED						050-099, 150-199
	40	UNUSED						050-099, 150-199
	41	UNUSED						050-099, 150-199
	42	UNUSED						050-099, 150-199
	43	UNUSED						050-099, 150-199
	44	UNUSED						050-099, 150-199
	45	UNUSED						050-099, 150-199
	46	UNUSED						050-099, 150-199
	47	UNUSED						050-099, 150-199
	48	UNUSED						050-099, 150-199
	49	UNUSED						050-099, 150-199
	50	UNUSED						050-099, 150-199
	51	UNUSED						050-099, 150-199
	52	UNUSED						050-099, 150-199
	53	UNUSED						050-099, 150-199
	54	UNUSED						050-099, 150-199
	55	UNUSED						050-099, 150-199
D13444J		AP0305/ /		RECP				050-099
D13444J		AP0405/ /		RECP				150-199
	1	UNUSED						050-099
	1	UNUSED	W0057	001	22		33-21-21	150-199
	2	UNUSED						050-099
	2	UNUSED	W0057	002	22		33-21-21	150-199
	3	UNUSED						050-099
	3	UNUSED	W0057	003	22		33-21-21	150-199
	4	UNUSED						050-099
	4	UNUSED	W0057	004	20		33-21-21	150-199
	5	UNUSED						050-099
	5	UNUSED	W0057	005	22		33-21-21	150-199
	6	UNUSED						050-099
	6	UNUSED	W0057	006	24		33-21-31	150-199

HOOKUP LIST

D280T132

91-21-51

Section D13400

Page 11

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D13444J		AP0305/ /		RECP (continued)				050-099
D13444J		AP0405/ /		RECP (continued)				150-199
	7	UNUSED						050-099
	7		W0057	072	20		33-26-21	150-157, 167-199
	7		W0057	072	20		23-31-13	162-166
	8	UNUSED						050-099
	8		W0057	008	24		33-21-31	150-199
	9	UNUSED						050-099
	9		W0057	009	24		33-21-31	150-199
	10	UNUSED						050-099, 150-199
	11	UNUSED						050-099
	11		W0057	011	20		33-21-31	150-199
	12	UNUSED						050-099
	12		W0057	012	20		33-21-31	150-154
	12		W0057	012	24		33-21-31	155-199
	13	UNUSED						050-099
	13		W0057	013	22		33-22-32	150-199
	14	UNUSED						050-099
	14		W0057	014	20		33-22-32	150-199
	15	UNUSED						050-099
	15		W0057	015	20		33-22-32	150-199
	16		W0057	018	22		33-24-12	050-099, 150-199
	17		W0057	019	20		33-24-12	050-099, 150-199
	18		W0057	020	22		33-24-12	050-099, 150-199
	19	UNUSED						050-099, 150-199
	20	UNUSED						050-099, 150-199
	21	UNUSED						050-099
	21		W0057	021	20		33-21-11	150-199
	22	UNUSED						050-099
	22		W0057	022	24		33-21-11	150-199
	23	UNUSED						050-099
	23		W0057	023	24		33-21-11	150-199
	24	UNUSED						050-099
	24		W0057	024	20		33-21-11	150-199
	25	UNUSED						050-099
	25		W0057	025	24		33-21-11	150-199
	26	UNUSED						050-099
	26		W0057	026	24		33-21-11	150-199
	27	UNUSED						050-099
	27		W0057	027	24		33-21-11	150-199
	28	UNUSED						050-099

HOOKUP LIST

D280T132

91-21-51

Section D13400

Page 12

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D13444J		AP0305/ /		RECP (continued)				050-099
D13444J		AP0405/ /		RECP (continued)				150-199
	28		W0057	028	24		33-21-11	150-199
	29	UNUSED						050-099
	29		W0057	029	24		33-21-12	150-199
	30	UNUSED						050-099
	30		W0057	030	24		33-21-12	150-199
	31	UNUSED						050-099
	31		W0057	031	24		33-21-12	150-199
	32	UNUSED						050-099
	32		W0057	032	24		33-21-12	150-199
	33	UNUSED						050-099
	33		W0057	033	24		33-21-12	150-199
	34	UNUSED						050-099
	34		W0057	034	24		33-21-12	150-199
	35	UNUSED						050-099
	35		W0057	035	24		33-21-12	150-199
	36	UNUSED						050-099
	36		W0057	036	24		33-21-12	150-199
	37	UNUSED						050-099, 150-199
	38	UNUSED						050-099, 150-199
	39		W0057	039	22		33-22-42	050-099, 150-199
	40		W0057	040	22		33-22-42	050-099, 150-199
	41	UNUSED						050-099, 150-199
	42		W0057	042	22		23-42-11	050-099, 150-199
	43		W0057	043	22		33-22-41	050-099, 150-199
	44		W0057	044	22		33-22-41	050-099, 150-199
	45		W0057	045	22		33-22-41	050-099, 150-199
	46		W0057	046	22		33-22-41	050-099, 150-199
	47	UNUSED						050-099
	47		W0057	067	20		33-26-21	150-157, 167-199
	47		W0057	067	20		23-31-13	162-166
	48	UNUSED						050-099
	48		W0057	068	20		33-26-21	150-157, 167-199
	48		W0057	068	20		23-31-13	162-166
	49	UNUSED						050-099
	49		W0057	069	20		33-26-21	150-157, 167-199
	49		W0057	069	20		23-31-13	162-166
	50	UNUSED						050-099
	50		W0057	070	20		33-26-21	150-157, 167-199
	50		W0057	070	20		23-31-13	162-166

HOOKUP LIST
D280T132

91-21-51
Section D13400
Page 13
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D13444J		AP0305/ /		RECP (continued)				050-099
D13444J		AP0405/ /		RECP (continued)				150-199
	51	UNUSED						050-099, 150, 153-199
	51		W0057	900	20		33-26-21	151-152
	52	UNUSED						050-099, 150-199
	53	UNUSED						050-099, 150-199
	54	UNUSED						050-099, 150-199
	55	UNUSED						050-099, 150-199
D13444P		458/265/L70		PLUG				050-099, 150-199
	1		W1449	001	22		33-21-21	050-099, 150-199
	2		W1449	002	22		33-21-21	050-099, 150-199
	3		W1449	003	22		33-21-21	050-099, 150-199
	4		W1449	004	20		33-21-21	050-099, 150-199
	5		W1449	005	22		33-21-21	050-099, 150-199
	6		W1449	006	24		33-21-31	050-099, 150-199
	7	UNUSED						050-099
	7		W1449	180	20		33-26-21	150-157, 167-199
	7		W1449	180	20		23-31-13	162-166
	8		W1449	008	24		33-21-31	050-099, 150-199
	9		W1449	009	24		33-21-31	050-099, 150-199
	10	UNUSED						050-099, 151-152, 154-156, 162-164
	10		W9160	106	20		25-25-23	150, 153, 157, 165-199
	11		W1449	011	20		33-21-31	050-099, 150-199
	12		W1449	012	24		33-21-31	050-099, 155-199
	12		W1449	012	20		33-21-31	150-154
	13		W1449	013	22		33-22-32	050-099, 150-199
	14		W1449	014	20		33-22-32	050-099, 150-199
	15		W1449	015	20		33-22-32	050-099, 150-199
	16		W1449	016	22		33-24-12	050-099, 150-199
	17		W1449	017	20		33-24-12	050-099, 150-199
	18		W1449	018	22		33-24-12	050-099, 150-199
	19	UNUSED						050-099, 151-152, 154-156, 162-164
	19		W9160	109	20		25-25-23	150, 153, 157, 165-199
	20	UNUSED						050-099, 151-152, 154-156, 162-164
	20		W9160	107	20		25-25-23	150, 153, 157, 165-199
	21		W1449	021	20		33-21-11	050-099, 150-199
	22		W1449	022	24		33-21-11	050-099, 150-199
	23		W1449	023	24		33-21-11	050-099, 150-199
	24		W1449	024	20		33-21-11	050-099, 150-199
	25		W1449	025	24		33-21-11	050-099, 150-199

HOOKUP LIST

D280T132

91-21-51

Section D13400

Page 14

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D13444P		458/265/L70		PLUG (continued)				050-099, 150-199
	26		W1449	026	24		33-21-11	050-099, 150-199
	27		W1449	027	20		33-21-11	050-099, 150-199
	28		W1449	028	24		33-21-11	050-099
	28		W1449	028	20		33-21-11	150-199
	29		W1449	029	24		33-21-12	050-099, 150-199
	30		W1449	030	20		33-21-12	050-099, 150-199
	31		W1449	031	24		33-21-12	050-099, 150-199
	32		W1449	032	24		33-21-12	050-099
	32		W1449	032	20		33-21-12	150-199
	33		W1449	033	24		33-21-12	050-099, 150-199
	34		W1449	034	24		33-21-12	050-099, 150-199
	35		W1449	035	24		33-21-12	050-099, 150-199
	36		W1449	036	24		33-21-12	050-099, 150-199
	37	UNUSED						050-099, 151-152, 154-156, 162-164
	37		W9160	108	20		25-25-23	150, 153, 157, 165-199
	38	UNUSED						050-099, 151-152, 154-156, 162-164
	38		W9160	110	20		25-25-23	150, 153, 157, 165-199
	39		W1449	039	22		33-22-42	050-099, 150-199
	40		W1449	040	22		33-22-42	050-099, 150-199
	41	UNUSED						050-099, 150-199
	42		W1449	042	22		23-42-11	050-099, 150-199
	43		W1449	043	22		33-22-41	050-099, 150-199
	44		W1449	044	22		33-22-41	050-099, 150-199
	45		W1449	045	22		33-22-41	050-099, 150-199
	46		W1449	046	22		33-22-41	050-099, 150-199
	47		W1449	067	20		33-26-21	050-099, 150-157, 167-199
	47		W1449	067	20		23-31-13	162-166
	48		W1449	068	20		33-26-21	050-099, 150-157, 167-199
	48		W1449	068	20		23-31-13	162-166
	49		W1449	069	20		33-26-21	050-099, 150-157, 167-199
	49		W1449	069	20		23-31-13	162-166
	50		W1449	070	20		33-26-21	050-099, 150-157, 167-199
	50		W1449	070	20		23-31-13	162-166
	51	UNUSED						050-099, 154-156, 162-164
	51		W9160	FRB			25-25-23	150, 153, 157, 165-199
	51		W9000	900	20		33-26-21	151-152
	52	UNUSED						050-099, 150-199
	53	UNUSED						050-099, 150-199
	54	UNUSED						050-099, 150-199
	55	UNUSED						050-099, 150-199

HOOKUP LIST

D280T132

91-21-51

Section D13400

Page 15

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D13444P		458/265/L70		PLUG (continued)				050-099, 150-199
			W9160	106Z			25-25-23	150, 153, 157, 165-199
			W9160	107Z			25-25-23	150, 153, 157, 165-199
			W9160	108Z			25-25-23	150, 153, 157, 165-199
			W9160	109Z			25-25-23	150, 153, 157, 165-199
			W9160	110Z			25-25-23	150, 153, 157, 165-199
			W9160	FRB			25-25-23	150, 153, 157, 165-199
D13446		360/280/L60		PLUG FWD CABIN GALLEY				050-099, 150-199
	1		W0428	001	20		33-22-31	050-099, 150-199
	2		W0428	002	20		33-22-31	050-099, 150-199
	3	UNUSED						050-099, 150-199
	4		W0428	004	24		25-31-12	050-099, 150-199
	5		W0428	005	24		25-31-12	050-099, 150-199
	6		W0428	006	24		25-31-12	050-099, 150-199
	7		W0428	007	24		25-31-12	050-099, 150-199
	8	UNUSED						050-099, 150-199
	9		W0428	009	20		25-31-12	050-099, 150-199
	10	FM	W0428	010	16		25-31-12	050-099, 150-199
	11	DK	W0428	015	18		30-71-25	050-099, 150-199
	12	DK	W0428	016	18		30-71-25	050-099, 150-199
	13		W0428	013	20		35-21-12	050-099, 150-199
	14		W0428	014	20		35-21-12	050-099, 150-199
	15	UNUSED						050-099, 150-199
D13448		360/280/L 60		PLUG				050-099, 150-199
	A		W0410	004	08		25-31-12	050-099, 150-199
	B		W0410	005	08		25-31-12	050-099, 150-199
	C		W0410	006	08		25-31-12	050-099, 150-199
	D		W0410	007	08		25-31-12	050-099, 150-199
D13450		P032-00/ /		RECP-P32				050-099, 150-199
	1		W0024	171	24		25-31-12	050-099, 150-199
	2		W0024	172	24		25-31-12	050-099, 150-199
	3		W0024	174	24		25-31-12	050-099, 150-199
	4		W0024	175	24		25-31-12	050-099, 150-199
	5	UNUSED						050-099, 150-199
	6	UNUSED						050-099, 150-199
	7	UNUSED						050-099, 150-199
	8		W0024	156	20		25-31-12	050-099, 150-199
	9		W0024	165	22		25-31-12	050-099, 150-199

HOOKUP LIST

D280T132

91-21-51

Section D13400

Page 16

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D13450		P032-00/ /		RECP-P32 (continued)				050-099, 150-199
	10		W0024	167	20		25-31-12	050-099, 150-199
	11		W0024	166	22		25-31-12	050-099, 150-199
	12		W0024	166	22		25-31-12	050-099, 150-199
	13	UNUSED						050-099, 150-199
	14	UNUSED						050-099, 150-199
	15		W0024	168	20		25-31-12	050-099, 150-199
	16		W0024	170	22		25-31-12	050-099, 150-199
	17		W0024	170	22		25-31-12	050-099, 150-199
	18	UNUSED						050-099, 150-199
	19	UNUSED						050-099, 150-199
	20	UNUSED						050-099, 150-199
	21	UNUSED						050-099, 150-199
	22	UNUSED						050-099, 150-199
	23	UNUSED						050-099, 150-199
	24	UNUSED						050-099, 150-199
D13452		1385/210/L90		PLUG				050-099
D13452		1413/210/L90		PLUG				150-157
D13452		1379/210/L90		PLUG				162-199
D13452		1410/210/L90		PLUG				275-299
	A		W1220	303B	16		25-29-12	ALL
	B		W1220	303Y	16		25-29-12	ALL
	C		W1220	303R	16		25-29-12	ALL
	D		W1220	005	16		25-29-12	ALL
	DED		W1220	303Z			25-29-12	ALL
D13454		509/210/L90		PLUG				050-099
D13454		484/210/L90		PLUG				150-199
D13454		395/210/L90		PLUG				275-299
	A		W1220	302B	16		25-29-12	ALL
	B		W1220	302Y	16		25-29-12	ALL
	C		W1220	302R	16		25-29-12	ALL
	D		W1220	004	16		25-29-12	ALL
	DED		W1220	302Z			25-29-12	ALL
D13456		628/160/R 80		PLUG				ALL
	A	UNUSED						ALL
	B		W1220	301Y	16		25-29-12	ALL
	C		W1220	301Z			25-29-12	ALL
	D		W1220	301B	16		25-29-12	ALL

HOOKUP LIST

D280T132

91-21-51

Section D13400

Page 17

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D13456		628/160/R 80		PLUG (continued)				ALL
	E		W1220	301R	16		25-29-12	ALL
	F	UNUSED						ALL
D13458		628/160/R 80		PLUG				ALL
	A		W1220	002	08		25-29-12	ALL
	B		W1220	001	16		25-29-12	ALL
	C		W1220	003	08		25-29-12	ALL
D13460A		//		PLUG PART OF D13460				ALL
	A01		W0109	305B	24		21-61-81	ALL
	A02		W0109	305R	24		21-61-81	ALL
	A03		W0109	305Y	24		21-61-81	ALL
	A04		W0109	230B	24		21-61-81	ALL
	A05		W0109	230R	24		21-61-81	ALL
	A06		W0109	229B	24		21-61-81	ALL
	A07		W0109	229R	24		21-61-81	ALL
	A08	UNUSED						ALL
	A09	UNUSED						ALL
	A10		W0109	306B	24		21-61-81	ALL
	A11		W0109	306R	24		21-61-81	ALL
	A12		W0109	306Y	24		21-61-81	ALL
	A13	UNUSED						ALL
	A14	UNUSED						ALL
	A15	UNUSED						ALL
	B01		W0109	301B	24		21-61-61	ALL
	B02		W0109	301R	24		21-61-61	ALL
	B03		W0109	301Y	24		21-61-61	ALL
	B04		W0109	222B	24		21-61-61	ALL
	B05		W0109	222R	24		21-61-61	ALL
	B06		W0109	224B	24		21-61-61	ALL
	B07		W0109	224R	24		21-61-61	ALL
	B08	UNUSED						ALL
	B09	UNUSED						ALL
	B10		W0109	302B	24		21-61-61	ALL
	B11		W0109	302R	24		21-61-61	ALL
	B12		W0109	302Y	24		21-61-61	ALL
	B13	UNUSED						ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	C01		W0109	303B	24		21-61-71	ALL

HOOKUP LIST

D280T132

91-21-51

Section D13400

Page 18

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D13460A		//		PLUG PART OF D13460 (continued)				ALL
	C02		W0109	303R	24		21-61-71	ALL
	C03		W0109	303Y	24		21-61-71	ALL
	C04		W0109	225B	24		21-61-71	ALL
	C05		W0109	225R	24		21-61-71	ALL
	C06		W0109	226B	24		21-61-71	ALL
	C07		W0109	226R	24		21-61-71	ALL
	C08	UNUSED						ALL
	C09	UNUSED						ALL
	C10		W0109	304B	24		21-61-71	ALL
	C11		W0109	304R	24		21-61-71	ALL
	C12		W0109	304Y	24		21-61-71	ALL
	C13	UNUSED						ALL
	C14	UNUSED						ALL
	C15		W0109	170	22		21-61-51	ALL
	D01	UNUSED						ALL
	D02	UNUSED						ALL
	D03	UNUSED						ALL
	D04	UNUSED						ALL
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07		W0109	213B	24		21-61-51	ALL
	D08	UNUSED						ALL
	D09	UNUSED						ALL
	D10		W0109	150	24		21-61-81	ALL
	D11		W0109	213R	24		21-61-51	ALL
	D12		W0109	164	24		21-61-81	ALL
	D13	UNUSED						ALL
	D14		W0109	163	22		21-61-81	ALL
	D15	UNUSED						ALL
D13460B		//		PLUG PART OF D13460				ALL
	A01		W0109	216B	24		21-61-51	ALL
	A02		W0109	216R	24		21-61-51	ALL
	A03		W0109	217B	24		21-61-51	ALL
	A04		W0109	217R	24		21-61-51	ALL
	A05		W0109	159	24		21-61-81	ALL
	A06	UNUSED						ALL
	A07	UNUSED						ALL
	A08	UNUSED						ALL
	A09		W0109	152	24		21-61-81	ALL

HOOKUP LIST
D280T132

91-21-51
Section D13400
Page 19
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D13460B		//		PLUG PART OF D13460 (continued)				ALL
	A10	UNUSED						ALL
	A11		W0109	161	24		21-61-81	ALL
	A12		W0109	160	24		21-61-81	ALL
	A13		W0109	232B	24		21-61-81	ALL
	A14	UNUSED						ALL
	A15		W0109	232R	24		21-61-81	ALL
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04	UNUSED						ALL
	B05	UNUSED						ALL
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09		W0109	034	24		21-61-61	ALL
	B10	UNUSED						ALL
	B11		W0109	033	24		21-61-61	ALL
	B12		W0109	032	24		21-61-61	ALL
	B13		W0109	221B	24		21-61-61	ALL
	B14	UNUSED						ALL
	B15		W0109	221R	24		21-61-61	ALL
	C01	UNUSED						ALL
	C02	UNUSED						ALL
	C03		W0109	030	24		21-61-51	ALL
	C04	UNUSED						ALL
	C05	UNUSED						ALL
	C06	UNUSED						ALL
	C07		W0109	218B	24		21-61-51	ALL
	C08		W0109	218R	24		21-61-51	ALL
	C09		W0109	035	24		21-61-71	ALL
	C10	UNUSED						ALL
	C11		W0109	037	24		21-61-71	ALL
	C12		W0109	036	24		21-61-71	ALL
	C13		W0109	227B	24		21-61-71	ALL
	C14	UNUSED						ALL
	C15		W0109	227R	24		21-61-71	ALL
	D01	UNUSED						ALL
	D02	UNUSED						ALL
	D03		W0109	219B	24		21-61-51	ALL
	D04		W0109	219R	24		21-61-51	ALL

HOOKUP LIST

D280T132

91-21-51

Section D13400

Page 20

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D13460B		//		PLUG PART OF D13460 (continued)				ALL
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07		W0109	220B	24		21-61-51	ALL
	D08		W0109	220R	24		21-61-51	ALL
	D09	UNUSED						ALL
	D10	UNUSED						ALL
	D11	UNUSED						ALL
	D12	UNUSED						ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15	UNUSED						ALL
D13460C		//		PLUG PART OF D13460				ALL
	1	UNUSED						ALL
	2		W0109	028	24		21-61-51	050-099
	2		W0109	027	18		21-61-51	150-199, 275-299
	3		W0109	169	20		21-61-51	ALL
	4		W0109	026	20		21-61-51	ALL
	5	UNUSED						ALL
	= C1	UNUSED						ALL
	= C5	UNUSED						ALL
	DED		W0109	028Z			21-61-51	050-099
D13462		MULTI/283/000		PLUG				ALL
	1		W1216	207B	24		21-61-61	ALL
	2		W1216	207R	24		21-61-61	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
D13464		MULTI/305/0		PLUG				050-099
D13464		MULTI/305/0000		PLUG-				150-199, 275-299
	1		W0790	215B	24		21-61-71	ALL
	2		W0790	215R	24		21-61-71	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D13400
Page 21
Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D13466		568/305/L010		PLUG				050-099
D13466		0568/305/L010		PLUG				150-199, 275-278
D13466		0568/305/L009		PLUG				280-299
	1		W0798	206B	24		21-61-61	ALL
	2		W0798	206R	24		21-61-61	ALL
D13468		770/307/L 3		PLUG				050-099
D13468		0770/307/L003		PLUG				150-155, 162-165, 275-276
D13468		765/301/L003		PLUG				156-157, 166-199, 277-278
D13468		767/300/L003		PLUG				280-299
	1		W1236	205B	24		21-61-71	ALL
	2		W1236	205R	24		21-61-71	ALL
D13470		568/305/L 10		PLUG				050-099
D13470		0568/305/L010		PLUG				150-199, 275-278
D13470		0568/305/L012		PLUG				280-299
	1		W1234	801	24		21-61-61	050-099, 275-299
	1		W1234	801	22		21-61-61	150-199
	2		W1234	802	20		21-61-61	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
D13472		770/307/L 3		PLUG				050-099
D13472		0770/307/L003		PLUG				150-155, 162-165, 275-276
D13472		767/301/L004		PLUG				156-157, 166-199, 277-278
D13472		765/298/L002		PLUG				280-299
	1		W1234	805	24		21-61-71	050-099, 275-299
	1		W1234	805	22		21-61-71	150-199
	2		W1234	804	20		21-61-71	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
D13474		0568/305/L010		PLUG				050-099, 150-199, 275-278
D13474		0568/305/L009		PLUG				280-299
	A		W0798	208B	20		21-65-11	ALL
	B		W0798	007	20		21-65-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D13400

Page 22

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D13476		0770/307/L003		PLUG				050-099
D13476		764/294/L15		PLUG				150-155, 162-165, 275-276
D13476		767/301/L003		PLUG				156-157, 166-199, 277-278
D13476		767/300/L003		PLUG				280-299
	A		W1236	203B	20		21-65-11	ALL
	B		W1236	152	20		21-65-11	ALL
D13478		0320/280/L060		PLUG-				050-099
D13478		0287/280/L090		PLUG-				150-199
	1		W0820	080	20		26-13-12	050-099, 162-199
	1	UNUSED						150-157
	2	UNUSED						050-099, 150-199
	3	UNUSED						050-099, 150-199
	4	UNUSED						050-099, 150-199
	5		W0820	073	20		26-13-12	050-099, 162-199
	5	UNUSED						150-157
	6	UNUSED						050-099, 150-199
	7		W0820	107	20		26-13-11	050-099, 150-199
	8		W0820	109	20		26-13-11	050-099, 150-199
	9		W0820	106	20		26-13-11	050-099, 150-199
	10		W0820	100	20		26-13-11	050-099, 150-157
	10	DK	W0820	100	18		26-13-11	162-199
	11		W0820	102	20		26-13-11	050-099, 150-199
	12		W0820	103	20		26-13-11	050-099, 150-199
	13		W0820	076	20		26-13-12	050-099, 162-199
	13	UNUSED						150-157
	14	UNUSED						050-099, 150-199
	15	UNUSED						050-099, 150-199
	16	UNUSED						050-099, 150-199
	17	UNUSED						050-099, 150-199
	18	UNUSED						050-099, 150-199
	19		W0820	045	20		25-42-11	050-099, 150-199
	20		W0820	101	20		26-13-11	050-099, 150-199
	21		W0820	108	20		26-13-11	050-099, 150-199
	22		W0820	105	20		26-13-11	050-099, 150-199
	23		W0820	104	20		26-13-11	050-099, 150-199
	24	UNUSED						050-099, 150-199

HOOKUP LIST
D280T132

91-21-51
Section D13400
Page 23
Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D13480		839/278/L060		PLUG-				050-099
D13480		654+121/ /		PLUG				150-199
	1		W0792	153	20		26-13-11	050-099, 150-199
	2		W0792	154	20		26-13-11	050-099, 150-199
	3		W0792	155	20		26-13-11	050-099, 150-199
	4		W0792	156	20		26-13-11	050-099, 150-199
	5	UNUSED						050-099, 150-199
	6	UNUSED						050-099, 150-199
	7	UNUSED						050-099, 150-199
	8	UNUSED						050-099, 150-199
	9	UNUSED						050-099, 150-199
	10		W0792	147	20		25-42-11	050-099, 150-199
	11		W0792	195	20		33-26-21	050-099, 150-199
	12		W0792	194	20		33-26-21	050-099, 150-199
D13482		781/278/BL00		PLUG				050-099
D13482		654+76/ /BL00		PLUG				150-199
	1		W0814	848	20		26-13-11	050-099, 150-199
	2		W0814	852	20		26-13-11	050-099, 150-199
	3		W0814	853	20		26-13-11	050-099, 150-199
	4		W0814	854	20		26-13-11	050-099, 150-199
	5	UNUSED						050-099, 150-199
	6	UNUSED						050-099, 150-199
	7	UNUSED						050-099, 150-199
	8	UNUSED						050-099, 150-199
	9	UNUSED						050-099, 150-199
	10		W0814	704	20		25-42-11	050-099, 150-199
	11	UNUSED						050-099, 150-199
	12	UNUSED						050-099, 150-199
D13484		839/278/R060		PLUG				050-099
D13484		654+121/280/R050		PLUG				150-199
D13484		654+26/280/R064		PLUG-				280-299
	1		W0814	847	20		26-13-11	050-099, 150-199
	1		W0814	01C	20		SPARE	280-299
	2		W0814	804	20		26-13-11	050-099, 150-199
	2		W0814	01D	20		SPARE	280-299
	3		W0814	803	20		26-13-11	050-099, 150-199
	3		W0814	01E	20		SPARE	280-299
	4		W0814	802	20		26-13-11	050-099, 150-199

HOOKUP LIST

D280T132

91-21-51

Section D13400

Page 24

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D13484		839/278/R060		PLUG (continued)				050-099
D13484		654+121/280/R050		PLUG (continued)				150-199
D13484		654+26/280/R064		PLUG- (continued)				280-299
	4		W0814	01F	20		SPARE	280-299
	5	UNUSED						050-099, 150-199
	5		W0814	01G	20		SPARE	280-299
	6	UNUSED						050-099, 150-199
	6		W0814	01H	20		SPARE	280-299
	7	UNUSED						050-099, 150-199
	7		W0814	01J	20		SPARE	280-299
	8	UNUSED						050-099, 150-199
	8		W0814	01K	20		SPARE	280-299
	9	UNUSED						050-099, 150-199, 280-299
	10		W0814	703	20		25-42-11	050-099, 150-199
	10	UNUSED						280-299
	11		W0814	810	20		33-26-21	050-099, 150-199
	11	UNUSED						280-299
	12		W0814	811	20		33-26-21	050-099, 150-199
	12	UNUSED						280-299
D13486		1056/278/L060		PLUG-				050-099
D13486		967/280/L050		PLUG				150-199
	1		W0792	160	20		26-13-11	050-099
	1		W0814	836	20		26-13-11	150-199
	2		W0792	163	20		26-13-11	050-099
	2		W0814	837	20		26-13-11	150-199
	3		W0792	162	20		26-13-11	050-099
	3		W0814	838	20		26-13-11	150-199
	4		W0792	161	20		26-13-11	050-099
	4		W0814	839	20		26-13-11	150-199
	5	UNUSED						050-099, 150-199
	6	UNUSED						050-099, 150-199
	7	UNUSED						050-099, 150-199
	8	UNUSED						050-099, 150-199
	9	UNUSED						050-099, 150-199
	10		W0792	138	20		25-42-11	050-099
	10		W0814	669	20		25-42-11	150-199
	11		W0792	187	20		33-26-21	050-099
	11		W0814	883	20		33-26-21	150-199
	12		W0792	188	20		33-26-21	050-099
	12		W0814	881	20		33-26-21	150-199

HOOKUP LIST

D280T132

91-21-51

Section D13400

Page 25

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D13488		970/ /		PLUG				150-199
	1		W0792	159	20		26-13-11	150-199
	2		W0792	164	20		26-13-11	150-199
	3		W0792	165	20		26-13-11	150-199
	4		W0792	166	20		26-13-11	150-199
	5	UNUSED						150-199
	6	UNUSED						150-199
	7	UNUSED						150-199
	8	UNUSED						150-199
	9	UNUSED						150-199
	10		W0792	149	20		25-42-11	150-199
	11	UNUSED						150-199
	12	UNUSED						150-199
D13490		1056/278/R060		PLUG				050-099
D13490		967/280/R050		PLUG				150-199
	1		W0814	836	20		26-13-11	050-099
	1		W0792	160	20		26-13-11	150-199
	2		W0814	837	20		26-13-11	050-099
	2		W0792	163	20		26-13-11	150-199
	3		W0814	838	20		26-13-11	050-099
	3		W0792	162	20		26-13-11	150-199
	4		W0814	839	20		26-13-11	050-099
	4		W0792	161	20		26-13-11	150-199
	5	UNUSED						050-099, 150-199
	6	UNUSED						050-099, 150-199
	7	UNUSED						050-099, 150-199
	8	UNUSED						050-099, 150-199
	9	UNUSED						050-099, 150-199
	10		W0814	669	20		25-42-11	050-099
	10		W0792	148	20		25-42-11	150-199
	11		W0814	883	20		33-26-21	050-099
	11		W0792	187	20		33-26-21	150-199
	12		W0814	590	20		33-26-21	050-099
	12		W0792	188	20		33-26-21	150-199
D13492		1463/280/L060		PLUG-				150-157
	1		W0828	143	20		26-13-11	150-157
	2		W0828	147	20		26-13-11	150-157
	3		W0828	149	20		26-13-11	150-157
	4		W0828	151	20		26-13-11	150-157

HOOKUP LIST

D280T132

91-21-51

Section D13400

Page 26

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D13492		1463/280/L060		PLUG- (continued)				150-157
	5	UNUSED						150-157
	6	UNUSED						150-157
	7	UNUSED						150-157
	8	UNUSED						150-157
	9	UNUSED						150-157
	10		W0828	109	20		25-42-11	150-157
	11	UNUSED						150-157
	12	UNUSED						150-157
D13494		1463/280/R060		PLUG-				150-157
	1		W2040	006	20		26-13-12	150, 152-157
	1		W0828	144	20		26-13-11	150-157
	2		W2040	003	20		26-13-12	150, 152-157
	2		W0828	155	20		26-13-11	150-157
	3		W2040	004	20		26-13-12	150, 152-157
	3		W0828	154	20		26-13-11	150-157
	4		W2040	005	20		26-13-12	150, 152-157
	4		W0828	153	20		26-13-11	150-157
	5	UNUSED						150-157
	6	UNUSED						150-157
	7	UNUSED						150-157
	8		W2040	008	20		26-13-12	150, 152-157
	8	UNUSED						151
	9		W2040	009	22		21-66-31	150, 152-157
	9	UNUSED						151
	10		W0828	110	20		25-42-11	150-157
	11		W2040	010	22		21-66-31	150, 152-157
	11	UNUSED						151
	12	UNUSED						150-157
D13496		0843/280/L005		RCPT-				150-199
	1		W1280	216R	22		23-31-16	150-199
	2		W1280	216B	22		23-31-16	150-199
	3		W1280	077	20		33-24-13	150-199
	4		W1280	078	20		33-24-13	150-199
	5		W1280	079	20		33-24-13	150-199
	6		W1280	253R	22		23-31-16	150-199
	7		W1280	253B	22		23-31-16	150-199
	8	UNUSED						150-199
	9	UNUSED						150-199

HOOKUP LIST
D280T132

91-21-51
Section D13400
Page 27
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D13496		0843/280/L005		RCPT- (continued)				150-199
	10	UNUSED						150-199
	11	UNUSED						150-199
	12	UNUSED						150-199

HOOKUP LIST

D280T132

91-21-51

Section D13400

Page 28 End

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D13510		0426/201/R044		PLUG				150-199
	A		W1222	656	20		33-51-16	150-199
	B		W1222	655	20		33-51-16	150-199
	C		W1222	683	20		33-51-16	150-199
	D		W1222	682	20		33-51-16	150-199
	E	UNUSED						150-199
	F	UNUSED						150-199
	G	UNUSED						150-199
	H	UNUSED						150-199
	J	UNUSED						150-199
	K	UNUSED						150-199
	L	UNUSED						150-199
	M	UNUSED						150-199
D13512		0351/201/R044		PLUG				050-099
D13512		0375/201/R044		PLUG				150-199
	A		W1222	658	20		33-51-16	050-099, 150-199
	B		W1222	657	20		33-51-16	050-099, 150-199
	C		W1222	685	20		33-51-16	050-099, 150-199
	D		W1222	684	20		33-51-16	050-099, 150-199
	E	UNUSED						050-099, 150-199
	F	UNUSED						050-099, 150-199
	G	UNUSED						050-099, 150-199
	H	UNUSED						050-099, 150-199
	J	UNUSED						050-099, 150-199
	K	UNUSED						050-099, 150-199
	L	UNUSED						050-099, 150-199
	M	UNUSED						050-099, 150-199
D13514		0342/201/R057		PLUG				050-099
D13514		0351/201/R044		PLUG				150-199
	A		W1222	662	20		33-51-16	050-099, 150-199
	B		W1222	661	20		33-51-16	050-099, 150-199
	C		W1222	693	20		33-51-16	050-099, 150-199
	D		W1222	692	20		33-51-16	050-099, 150-199
	E	UNUSED						050-099, 150-199
	F	UNUSED						050-099, 150-199
	G	UNUSED						050-099, 150-199
	H	UNUSED						050-099, 150-199
	J	UNUSED						050-099, 150-199
	K	UNUSED						050-099, 150-199

HOOKUP LIST

D280T132

91-21-51

Section D13500

Page 1

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D13514		0342/201/R057		PLUG (continued)				050-099
D13514		0351/201/R044		PLUG (continued)				150-199
	L	UNUSED						050-099, 150-199
	M	UNUSED						050-099, 150-199
D13516		0349/201/R029		PLUG				050-099
D13516		0342/201/R050		PLUG				150-199
	A		W1222	664	20		33-51-16	050-099, 150-199
	B		W1222	663	20		33-51-16	050-099, 150-199
	C		W1222	691	20		33-51-16	050-099, 150-199
	D		W1222	690	20		33-51-16	050-099, 150-199
	E	UNUSED						050-099, 150-199
	F	UNUSED						050-099, 150-199
	G	UNUSED						050-099, 150-199
	H	UNUSED						050-099, 150-199
	J	UNUSED						050-099, 150-199
	K	UNUSED						050-099, 150-199
	L	UNUSED						050-099, 150-199
	M	UNUSED						050-099, 150-199
D13518		0349/201/R022		PLUG				050-099
D13518		0349/201/R029		PLUG				150-199
	A		W1222	666	20		33-51-16	050-099, 150-199
	B		W1222	665	20		33-51-16	050-099, 150-199
	C		W1222	689	20		33-51-16	050-099, 150-199
	D		W1222	688	20		33-51-16	050-099, 150-199
	E	UNUSED						050-099, 150-199
	F	UNUSED						050-099, 150-199
	G	UNUSED						050-099, 150-199
	H	UNUSED						050-099, 150-199
	J	UNUSED						050-099, 150-199
	K	UNUSED						050-099, 150-199
	L	UNUSED						050-099, 150-199
	M	UNUSED						050-099, 150-199
D13520		415/188/L-40		PLUG-				150-199
	A		W0784	659	20		33-51-17	150-199
	B		W0784	658	20		33-51-17	150-199
	C		W0784	675	20		33-51-17	150-199
	D		W0784	674	20		33-51-17	150-199
	E	UNUSED						150-199

HOOKUP LIST

D280T132

91-21-51

Section D13500

Page 2

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D13520		415/188/L-40		PLUG- (continued)				150-199
	F	UNUSED						150-199
	G	UNUSED						150-199
	H	UNUSED						150-199
	J	UNUSED						150-199
	K	UNUSED						150-199
	L	UNUSED						150-199
	M	UNUSED						150-199
D13522		0375/188/L044		PLUG-				050-099
D13522		360/188/L-20		PLUG-				150-199
	A		W0784	661	20		33-51-17	050-099, 150-199
	B		W0784	660	20		33-51-17	050-099, 150-199
	C		W0784	682	20		33-51-17	050-099, 150-199
	D		W0784	681	20		33-51-17	050-099, 150-199
	E	UNUSED						050-099, 150-199
	F	UNUSED						050-099, 150-199
	G	UNUSED						050-099, 150-199
	H	UNUSED						050-099, 150-199
	J	UNUSED						050-099, 150-199
	K	UNUSED						050-099, 150-199
	L	UNUSED						050-099, 150-199
	M	UNUSED						050-099, 150-199
D13524		0351/188/L010		PLUG-				050-099
D13524		344/188/L-10		PLUG-				150-199
	A		W0784	665	20		33-51-17	050-099, 150-199
	B		W0784	664	20		33-51-17	050-099, 150-199
	C		W0784	687	20		33-51-17	050-099, 150-199
	D		W0784	686	20		33-51-17	050-099, 150-199
	E	UNUSED						050-099, 150-199
	F	UNUSED						050-099, 150-199
	G	UNUSED						050-099, 150-199
	H	UNUSED						050-099, 150-199
	J	UNUSED						050-099, 150-199
	K	UNUSED						050-099, 150-199
	L	UNUSED						050-099, 150-199
	M	UNUSED						050-099, 150-199
D13526		342/188/L-57		PLUG-				050-099, 150-199
	A		W0784	667	20		33-51-17	050-099, 150-199

HOOKUP LIST
D280T132

91-21-51
Section D13500
Page 3
Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D13526		342/188/L-57		PLUG- (continued)				050-099, 150-199
	B		W0784	666	20		33-51-17	050-099, 150-199
	C		W0784	689	20		33-51-17	050-099, 150-199
	D		W0784	688	20		33-51-17	050-099, 150-199
	E	UNUSED						050-099, 150-199
	F	UNUSED						050-099, 150-199
	G	UNUSED						050-099, 150-199
	H	UNUSED						050-099, 150-199
	J	UNUSED						050-099, 150-199
	K	UNUSED						050-099, 150-199
	L	UNUSED						050-099, 150-199
	M	UNUSED						050-099, 150-199
D13528		450/240/L 55		PLUG				150-199
	A		W0057	016	20		33-22-32	150-199
	B		W0057	A-A			33-22-32	150-199
	C		W0057	A-B			33-22-32	150-199
	D		W0057	901	20		33-22-32	150, 153-199
	D	UNUSED						151-152
	E		W0057	013	22		33-22-32	150-199
	F		W0057	017	20		33-22-32	150-199
	G		W0057	014	20		33-22-32	150-199
	H		W0057	066	20		33-22-32	150-199
	J		W0057	A-C			33-22-32	150-199
	K		W0057	A-D			33-22-32	150-199
	L	UNUSED						150-199
	M	UNUSED						150-199
D13530		P033-00/ /		RLY SKT				ALL
	A1		W0144	11D	22		32-45-11	ALL
	A2		W0144	11C	22		32-45-11	ALL
	A3		W0144	11B	22		32-45-11	ALL
	B1	UNUSED						ALL
	B2	UNUSED						ALL
	B3	UNUSED						ALL
	X1		W0144	11E	22		32-45-11	ALL
	X2		W0144	11F	20		32-45-11	ALL
D13532		P037-00/PNL/		RLY SKT				050-099
D13532		P037-00/ /		RLY SKT				150-199, 275-299
	1		W0192	22S	22		32-45-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D13500

Page 4

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D13532		P037-00/PNL/		RLY SKT (continued)				050-099
D13532		P037-00/ /		RLY SKT (continued)				150-199, 275-299
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W0192	19Y	24		73-21-18	050-099, 150-199, 277-299
	6	UNUSED						275-276
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12		W0192	19X	24		73-21-18	ALL
	13		W0192	22R	22		32-45-11	ALL
	14	UNUSED						ALL
D13536		1028/270/L073		RCPT-				150-199
	1		W0724	105	20		35-21-12	150-199
	2		W0724	106	20		35-21-12	150-199
D13538		1055/270/L073		RCPT-				150-199
	1		W0724	107	20		35-21-12	150-199
	2		W0724	108	20		35-21-12	150-199
D13540		1028/270/R073		RCPT-				150-199
	1		W0728	105	20		35-21-13	150-199
	2		W0728	106	20		35-21-13	150-199
D13542		1055/270/R073		RCPT-				150-199
	1		W0728	107	20		35-21-13	150-199
	2		W0728	108	20		35-21-13	150-199
D13548		AP0901/ /		RCPT-				150-199
	1		W1282	057	20		35-21-14	150-199
	2		W1282	058	20		35-21-14	150-199
D13550		1001/280/L005		RCPT-				150-199
	1		W1282	059	20		35-21-14	150-199
	2		W1282	060	20		35-21-14	150-199

HOOKUP LIST
D280T132

91-21-51
Section D13500
Page 5
Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D13552		1559/282/L062		RCPT				050-099
D13552		1559/282/L062		RECT				150-199
	1		W0828	212	20		26-13-12	050-099
	1		W0828	514	20		26-13-12	150, 152-199
	1	UNUSED						151
	2	UNUSED						050-099, 150-199
	3	UNUSED						050-099, 150-199
	4	UNUSED						050-099, 150-199
	5		W0828	144	20		26-13-12	050-099, 162-199
	5		W0828	144	20		26-13-11	150-157
	6	UNUSED						050-099, 150-199
	7		W0828	142	20		26-13-11	050-099, 150-199
	8		W0828	146	20		26-13-11	050-099, 150-199
	9		W0828	141	20		26-13-11	050-099, 150-199
	10	DL	W0828	133	18		26-13-11	050-099, 150-199
	11		W0828	137	20		26-13-11	050-099, 150-199
	12		W0828	143	20		26-13-12	050-099, 162-199
	12		W0828	143	20		26-13-11	150-157
	13	UNUSED						050-099, 150-199
	14	UNUSED						050-099, 150-199
	15	UNUSED						050-099, 150-199
	16	UNUSED						050-099, 150-199
	17	UNUSED						050-099, 150-199
	18	UNUSED						050-099, 150-199
	19	UNUSED						050-099, 150-199
	20		W0828	134	20		26-13-11	050-099, 150-199
	21		W0828	145	20		26-13-11	050-099, 150-199
	22		W0828	140	20		26-13-11	050-099, 150-199
	23		W0828	139	20		26-13-11	050-099, 150-199
	24	UNUSED						050-099
	24		W0828	138	20		26-13-11	150-199
D13553		382/284/R 38		PLUG-				050-099, 150-199
	1	UNUSED						050-099, 150-199
	2	UNUSED						050-099, 150-199
	3	UNUSED						050-099, 150-199
	4	UNUSED						050-099, 150-199
	5		W0123	034	20		33-27-11	050-099, 150-199
	6	UNUSED						050-099, 150-199
	7		W0123	033	20		33-27-11	050-099, 150-199
	8		W0123	032	20		33-27-11	050-099, 150-199

HOOKUP LIST

D280T132

91-21-51

Section D13500

Page 6

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D13553		382/284/R 38		PLUG- (continued)				050-099, 150-199
	9		W0123	031	20		33-27-11	050-099, 150-199
	10		W0123	030	20		33-27-11	050-099, 150-199
	11		W0123	040	20		33-27-11	050-099, 150-199
	12		W0123	039	20		33-27-11	050-099, 150-199
	DED		W0123	033Z			33-27-11	155-156, 166
	DED		W0123	034Z			33-27-11	155-156, 166
D13554		382/284/R 42		PLUG-				050-099, 150-199
	1	UNUSED						050-099, 150-199
	2	UNUSED						050-099, 150-199
	3	UNUSED						050-099, 150-199
	4	UNUSED						050-099, 150-199
	5		W0123	041	20		33-27-11	050-099, 150-199
	6	UNUSED						050-099, 150-199
	7		W0123	049	20		33-27-11	050-099, 150-199
	8		W0123	044	20		33-27-11	050-099, 150-199
	9		W0123	042	20		33-27-11	050-099, 150-199
	10		W0123	043	20		33-27-11	050-099, 150-199
	11		W0123	048	20		33-27-11	050-099, 150-199
	12		W0123	047	20		33-27-11	050-099, 150-199
	DED		W0123	041Z			33-27-11	155-156, 166
	DED		W0123	049Z			33-27-11	155-156, 166
D13555		382/284/L042		PLUG-				050-099, 150-199
	1	UNUSED						050-099, 150-199
	2	UNUSED						050-099, 150-199
	3	UNUSED						050-099, 150-199
	4	UNUSED						050-099, 150-199
	5		W0157	028	20		33-27-11	050-099, 150-199
	6	UNUSED						050-099, 150-199
	7		W0157	030	20		33-27-11	050-099, 150-199
	8		W0157	033	20		33-27-11	050-099, 150-199
	9		W0157	035	20		33-27-11	050-099, 150-199
	10		W0157	034	20		33-27-11	050-099, 150-199
	11		W0157	032	20		33-27-11	050-099, 150-199
	12		W0157	031	20		33-27-11	050-099, 150-199
	DED		W0157	028Z			33-27-11	155-156, 166
	DED		W0157	030Z			33-27-11	155-156, 166

HOOKUP LIST
D280T132

91-21-51
Section D13500
Page 7
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D13556		382/284/L038		PLUG-				050-099, 150-199
	1	UNUSED						050-099, 150-199
	2	UNUSED						050-099, 150-199
	3	UNUSED						050-099, 150-199
	4	UNUSED						050-099, 150-199
	5		W0157	029	20		33-27-11	050-099, 150-199
	6	UNUSED						050-099, 150-199
	7		W0157	044	20		33-27-11	050-099, 150-199
	8		W0157	052	20		33-27-11	050-099, 150-199
	9		W0157	050	20		33-27-11	050-099, 150-199
	10		W0157	051	20		33-27-11	050-099, 150-199
	11		W0157	046	20		33-27-11	050-099, 150-199
	12		W0157	045	20		33-27-11	050-099, 150-199
	DED		W0157	029Z			33-27-11	155-156, 166
	DED		W0157	044Z			33-27-11	155-156, 166
D13558		P025-00/ /		PLUG				050-099
D13558		P025-00/ /		PLUG-				150-199
	1		W1064	613	20		33-22-42	050-099, 150-199
	2	UNUSED						050-099, 150-199
	3		W1064	139	22		33-22-42	050-099, 150-199
	4	UNUSED						050-099, 150-199
	5		W1064	094	22		33-22-42	050-099, 150-199
	6		W1064	614	20		33-22-42	050-099, 150-199
	7	UNUSED						050-099, 150-199
D13560A		//		PLUG PART OF D13560				ALL
	A01	UNUSED						ALL
	A02	UNUSED						ALL
	A03	UNUSED						ALL
	A04	UNUSED						ALL
	A05	UNUSED						ALL
	A06	UNUSED						ALL
	A07	UNUSED						ALL
	A08	UNUSED						ALL
	A09	UNUSED						ALL
	A10	UNUSED						ALL
	A11	UNUSED						ALL
	A12	UNUSED						ALL
	A13	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D13500

Page 8

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D13560A		//		PLUG PART OF D13560 (continued)				ALL
	A14	UNUSED						ALL
	A15	UNUSED						ALL
	B01	UNUSED						ALL
	B02		W0109	057	24		21-28-11	ALL
	B03		W0109	041	24		21-26-31	ALL
	B04		W0109	132	24		21-51-11	ALL
	B05	UNUSED						ALL
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	B08		W0109	137	24		21-51-11	ALL
	B09		W0109	136	24		21-51-11	ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13	UNUSED						ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	C01	UNUSED						ALL
	C02		W0109	067	24		21-43-11	ALL
	C03		W0109	618	24		21-26-31	ALL
	C04	UNUSED						ALL
	C05	UNUSED						ALL
	C06	UNUSED						ALL
	C07	UNUSED						ALL
	C08		W0109	141	24		21-51-11	ALL
	C09		W0109	142	24		21-51-11	ALL
	C10	UNUSED						ALL
	C11	UNUSED						ALL
	C12	UNUSED						ALL
	C13	UNUSED						ALL
	C14	UNUSED						ALL
	C15	UNUSED						ALL
	D01	UNUSED						ALL
	D02		W0109	049	24		21-28-11	ALL
	D03		W0109	050	24		21-28-11	ALL
	D04	UNUSED						ALL
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	D08		W0109	131	24		21-51-11	ALL

HOOKUP LIST
D280T132

91-21-51
Section D13500
Page 9
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D13560A		//		PLUG PART OF D13560 (continued)				ALL
	D09		W0109	130	24		21-51-11	ALL
	D10	UNUSED						ALL
	D11	UNUSED						ALL
	D12	UNUSED						ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15	UNUSED						ALL
	E01	UNUSED						ALL
	E02		W0109	044	24		21-26-31	ALL
	E03		W0109	054	24		21-28-11	ALL
	E04		W0109	051	24		21-28-11	ALL
	E05	UNUSED						ALL
	E06	UNUSED						ALL
	E07	UNUSED						ALL
	E08		W0109	147	24		21-51-11	ALL
	E09		W0109	099	24		21-51-11	ALL
	E10	UNUSED						ALL
	E11	UNUSED						ALL
	E12	UNUSED						ALL
	E13	UNUSED						ALL
	E14	UNUSED						ALL
	E15	UNUSED						ALL
	F01	UNUSED						ALL
	F02		W0109	062	24		21-43-11	ALL
	F03		W0109	063	24		21-43-11	ALL
	F04		W0109	047	24		21-28-11	ALL
	F05		W0109	048	24		21-28-11	ALL
	F06	UNUSED						ALL
	F07	UNUSED						ALL
	F08		W0109	129	24		21-51-11	ALL
	F09		W0109	128	24		21-51-11	ALL
	F10	UNUSED						ALL
	F11	UNUSED						ALL
	F12	UNUSED						ALL
	F13	UNUSED						ALL
	F14	UNUSED						ALL
	F15	UNUSED						ALL
	G01	UNUSED						ALL
	G02		W0109	153	24		21-43-11	ALL
	G03		W0109	156	24		21-43-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D13500

Page 10

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D13560A		//		PLUG PART OF D13560 (continued)				ALL
	G04		W0109	066	24		21-43-11	ALL
	G05	UNUSED						ALL
	G06	UNUSED						ALL
	G07	UNUSED						ALL
	G08		W0109	138	24		21-51-11	ALL
	G09		W0109	146	24		21-51-11	ALL
	G10	UNUSED						ALL
	G11	UNUSED						ALL
	G12	UNUSED						ALL
	G13	UNUSED						ALL
	G14	UNUSED						ALL
	G15	UNUSED						ALL
	H01	UNUSED						ALL
	H02		W0109	045	24		21-26-31	ALL
	H03		W0109	043	24		21-26-31	ALL
	H04	UNUSED						ALL
	H05	UNUSED						ALL
	H06	UNUSED						ALL
	H07	UNUSED						ALL
	H08		W0109	145	24		21-51-11	ALL
	H09		W0109	166	24		21-51-11	ALL
	H10	UNUSED						ALL
	H11	UNUSED						ALL
	H12	UNUSED						ALL
	H13	UNUSED						ALL
	H14	UNUSED						ALL
	H15	UNUSED						ALL
	J01	UNUSED						ALL
	J02		W0109	144	24		21-51-11	ALL
	J03		W0109	143	24		21-51-11	ALL
	J04	UNUSED						ALL
	J05	UNUSED						ALL
	J06	UNUSED						ALL
	J07	UNUSED						ALL
	J08		W0109	165	24		21-25-11	ALL
	J09	UNUSED						ALL
	J10	UNUSED						ALL
	J11	UNUSED						ALL
	J12	UNUSED						ALL
	J13	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D13500

Page 11

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D13560A		//		PLUG PART OF D13560 (continued)				ALL
	J14	UNUSED						ALL
	J15	UNUSED						ALL
	K01	UNUSED						ALL
	K02	UNUSED						ALL
	K03	UNUSED						ALL
	K04	UNUSED						ALL
	K05	UNUSED						ALL
	K06	UNUSED						ALL
	K07	UNUSED						ALL
	K08	UNUSED						ALL
	K09	UNUSED						ALL
	K10	UNUSED						ALL
	K11	UNUSED						ALL
	K12	UNUSED						ALL
	K13	UNUSED						ALL
	K14	UNUSED						ALL
	K15	UNUSED						ALL
D13560B		//		PLUG PART OF D13560				ALL
	A01	UNUSED						ALL
	A02	UNUSED						ALL
	A03	UNUSED						ALL
	A04	UNUSED						ALL
	A05	UNUSED						ALL
	A06	UNUSED						ALL
	A07	UNUSED						ALL
	A08	UNUSED						ALL
	A09	UNUSED						ALL
	A10	UNUSED						ALL
	A11	UNUSED						ALL
	A12	UNUSED						ALL
	A13	UNUSED						ALL
	A14	UNUSED						ALL
	A15	UNUSED						ALL
	B01	UNUSED						ALL
	B02		W0109	150	24		21-61-81	ALL
	B03		W0109	116	24		21-51-11	ALL
	B04	UNUSED						ALL
	B05	UNUSED						ALL
	B06	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D13500

Page 12

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D13560B		//		PLUG PART OF D13560 (continued)				ALL
	B07	UNUSED						ALL
	B08		W0109	167	24		21-51-11	ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13		W0109	228R	24		21-28-11	ALL
	B14		W0109	228B	24		21-28-11	ALL
	B15	UNUSED						ALL
	C01	UNUSED						ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05	UNUSED						ALL
	C06	UNUSED						ALL
	C07	UNUSED						ALL
	C08		W0109	097	24		21-51-11	ALL
	C09	UNUSED						ALL
	C10	UNUSED						ALL
	C11	UNUSED						ALL
	C12	UNUSED						ALL
	C13	UNUSED						ALL
	C14	UNUSED						ALL
	C15	UNUSED						ALL
	D01	UNUSED						ALL
	D02		W0109	077	24		21-51-11	ALL
	D03		W0109	074	24		21-28-11	ALL
	D04	UNUSED						ALL
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	D08		W0109	090	24		21-51-11	ALL
	D09	UNUSED						ALL
	D10	UNUSED						ALL
	D11	UNUSED						ALL
	D12		W0109	120	24		21-51-11	ALL
	D13	UNUSED						ALL
	D14		W0109	121	24		21-51-11	ALL
	D15	UNUSED						ALL
	E01	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D13500

Page 13

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D13560B		//		PLUG PART OF D13560 (continued)				ALL
	E02	UNUSED						ALL
	E03	UNUSED						ALL
	E04	UNUSED						ALL
	E05	UNUSED						ALL
	E06	UNUSED						ALL
	E07	UNUSED						ALL
	E08		W0109	195	24		73-21-15	ALL
	E09	UNUSED						ALL
	E10	UNUSED						ALL
	E11	UNUSED						ALL
	E12	UNUSED						ALL
	E13	UNUSED						ALL
	E14	UNUSED						ALL
	E15	UNUSED						ALL
	F01	UNUSED						ALL
	F02		W0109	059	24		21-28-11	ALL
	F03	UNUSED						ALL
	F04		W0109	060	24		21-28-11	ALL
	F05		W0109	078	24		21-51-11	ALL
	F06	UNUSED						ALL
	F07	UNUSED						ALL
	F08		W0109	089	24		21-51-11	050, 150-154, 275-276 051-099, 155-199, 277-299
	F09	UNUSED						ALL
	F10	UNUSED						ALL
	F11	UNUSED						ALL
	F12		W0109	168	24		21-53-11	ALL
	F13	UNUSED						ALL
	F14		W0109	122	24		21-51-11	ALL
	F15	UNUSED						ALL
	G01	UNUSED						ALL
	G02	UNUSED						ALL
	G03		W0109	046	24		21-26-31	ALL
	G04	UNUSED						ALL
	G05		W0109	080	24		21-51-11	ALL
	G06	UNUSED						ALL
	G07	UNUSED						ALL
	G08		W0109	140	24		21-51-11	ALL
	G09	UNUSED						ALL
	G10	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D13500

Page 14

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D13560B		//		PLUG PART OF D13560 (continued)				ALL
	G11	UNUSED						ALL
	G12	UNUSED						ALL
	G13	UNUSED						ALL
	G14	UNUSED						ALL
	G15	UNUSED						ALL
	H01	UNUSED						ALL
	H02		W0109	069	24		21-43-11	ALL
	H03	UNUSED						ALL
	H04		W0109	058	24		21-28-11	ALL
	H05		W0109	081	24		21-51-11	ALL
	H06	UNUSED						ALL
	H07	UNUSED						ALL
	H08		W0109	098	24		21-51-11	ALL
	H09	UNUSED						ALL
	H10	UNUSED						ALL
	H11	UNUSED						ALL
	H12		W0109	113	22		21-51-11	ALL
	H13		W0109	114	22		21-51-11	ALL
	H14		W0109	115	22		21-51-11	ALL
	H15	UNUSED						ALL
	J01	UNUSED						ALL
	J02	UNUSED						ALL
	J03	UNUSED						ALL
	J04	UNUSED						ALL
	J05	UNUSED						ALL
	J06	UNUSED						ALL
	J07	UNUSED						ALL
	J08		W0109	139	24		21-51-11	ALL
	J09	UNUSED						ALL
	J10	UNUSED						ALL
	J11	UNUSED						ALL
	J12		W0109	124	22		21-51-11	ALL
	J13		W0109	125	22		21-51-11	ALL
	J14		W0109	126	22		21-51-11	ALL
	J15	UNUSED						ALL
	K01	UNUSED						ALL
	K02	UNUSED						ALL
	K03	UNUSED						ALL
	K04	UNUSED						ALL
	K05	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D13500
Page 15
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D13560B		//		PLUG PART OF D13560 (continued)				ALL
	K06	UNUSED						ALL
	K07	UNUSED						ALL
	K08	UNUSED						ALL
	K09	UNUSED						ALL
	K10	UNUSED						ALL
	K11	UNUSED						ALL
	K12	UNUSED						ALL
	K13	UNUSED						ALL
	K14	UNUSED						ALL
	K15	UNUSED						ALL
D13560C		//		PLUG PART OF D13560				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8		W0109	134	20		21-51-11	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	= C12	UNUSED						ALL
	= C13	UNUSED						ALL
D13562		752/145/L 62		PLUG				ALL
	1		W0942	533	22		21-28-11	ALL
	2		W0942	531	22		21-28-11	ALL
	3		W0942	532	20		21-28-11	ALL
	4	UNUSED						ALL
	5		W0942	534	20		21-28-11	ALL
	6		W0942	535	20		21-28-11	ALL
	7		W0942	528	24		21-28-11	ALL
	8		W0942	536	20		21-28-11	ALL
	9		W0942	527	24		21-28-11	ALL
	10	UNUSED						ALL
	11	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D13500

Page 16

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D13562		752/145/L 62		PLUG (continued)				ALL
	12	UNUSED						ALL
D13564		395/117/L 25		PLUG				ALL
	1		W0986	070	22		21-28-11	ALL
	2		W0986	068	22		21-28-11	ALL
	3		W0986	069	20		21-28-11	ALL
	4	UNUSED						ALL
	5		W0986	071	20		21-28-11	ALL
	6		W0986	072	20		21-28-11	ALL
	7		W0986	067	24		21-28-11	ALL
	8		W0986	073	20		21-28-11	ALL
	9		W0986	066	24		21-28-11	ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	DED		W0986	068Z			21-28-11	050-099
	DED		W0986	069Z			21-28-11	050-099
	DED		W0986	070Z			21-28-11	050-099
D13566		689/117/L 5		PLUG				050-099
D13566		654+28/117/L 5		RECP				150-199
D13566		654+28/117/L 5		PLUG				275-299
	1		W1258	194	22		21-28-11	ALL
	2		W1258	195	22		21-28-11	ALL
	3		W1258	196	20		21-28-11	ALL
	4	UNUSED						ALL
	5		W1258	197	20		21-28-11	ALL
	6		W1258	608	20		21-26-31	050-099, 150-199, 275-276
	6		W1258	608	20		21-28-11	277-299
	7		W1258	609	24		21-26-31	050-099, 150-199, 275-276
	7		W1258	609	24		21-28-11	277-299
	8		W1258	198	20		21-28-11	ALL
	9		W1258	199	24		21-28-11	ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D13500
Page 17
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D13568		689/117/0		PLUG				050-099
D13568		654+28/117/0		RECP				150-199
D13568		654+28/117/0		PLUG				275-299
	1		W1258	189	22		21-28-11	050-099, 150-199, 275-276
	1		W0942	591	22		21-28-11	277-299
	2		W1258	190	22		21-28-11	050-099, 150-199, 275-276
	2		W0942	592	22		21-28-11	277-299
	3		W1258	617	20		21-28-11	050-099, 150-199, 275-276
	3		W0942	593	20		21-28-11	277-299
	4	UNUSED						ALL
	5		W1258	191	20		21-28-11	050-099, 150-199, 275-276
	5		W0942	594	20		21-28-11	277-299
	6		W1258	609	24		21-26-31	050-099, 150-199, 275-276
	6		W0942	595	24		21-28-11	277-299
	7		W1258	607	24		21-26-31	050-099, 150-199, 275-276
	7		W0942	596	24		21-28-11	277-299
	8		W1258	192	24		21-28-11	050-099, 150-199, 275-276
	8		W0942	521	24		21-28-11	277-299
	9		W1258	193	20		21-28-11	050-099, 150-199, 275-276
	9		W0942	597	20		21-28-11	277-299
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	DED		W1258	189Z			21-28-11	050-099
	DED		W1258	190Z			21-28-11	050-099
	DED		W1258	617Z			21-28-11	050-099
D13570		786/123/L020		PLUG-				050-099
D13570		786/123/L 20		PLUG				150-199, 275-299
	1		W0508	075	20		21-61-81	ALL
	2		W0508	074	20		21-61-81	ALL
	3		W0508	076	20		21-61-81	ALL
	4		W0508	314B	20		21-61-81	ALL
	5		W0508	314R	20		21-61-81	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10		W0508	072	20		21-61-81	ALL
	11		W0508	073	20		21-61-81	ALL
	12		W0508	314Y	20		21-61-81	ALL

HOOKUP LIST

D280T132

91-21-51

Section D13500

Page 18

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D13570		786/123/L020		PLUG- (continued)				050-099
D13570		786/123/L 20		PLUG (continued)				150-199, 275-299
	13		W0508	071	20		21-61-81	ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
D13572		P005-00/ /		PLUG-P5				ALL
	1		W0062	316B	24		21-61-81	ALL
	2		W0062	316R	24		21-61-81	ALL
	3		W0062	316Y	24		21-61-81	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W0062	151	20		21-61-81	ALL
	8		W0062	122	24		21-26-31	ALL
	9		W0062	150	24		21-61-81	ALL
	10		W0062	124	24		21-28-11	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D13574		693/188/L 84		PLUG				ALL
	1	UNUSED						ALL
	2		W0942	515	22		21-26-31	ALL
	3		W0942	516	22		21-26-31	ALL
	4		W0942	517	22		21-26-31	ALL
	5		W0942	518	24		21-26-31	ALL
	6		W0942	520	24		21-26-31	ALL
	7		W0942	519	20		21-26-31	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D13500

Page 19

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D13574		693/188/L 84		PLUG (continued)				ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	DED		W0942	515Z			21-26-31	050-099, 155-199, 276-299
	DED		W0942	516Z			21-26-31	050-099, 155-199, 276-299
	DED		W0942	517Z			21-26-31	050-099, 155-199, 276-299
D13576		689/117/R 5		PLUG				050-099
D13576		654+28/117/R 5		PLUG				150-199, 275-299
	1		W1258	613	22		21-26-31	ALL
	2		W1258	611	22		21-26-31	ALL
	3		W1258	612	22		21-26-31	ALL
	4	UNUSED						ALL
	5		W1258	614	24		21-26-31	ALL
	6		W1258	615	24		21-26-31	ALL
	7		W1258	616	20		21-26-31	ALL
D13578		P036-00/PNL/		RLY SKT				050-099
D13578		P036-00/ /		RLY SKT				150-199, 275-299
	1		W0176	19K	22		32-45-11	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W0176	19H	24		73-21-18	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12		W0176	19G	24		73-21-18	ALL
	13		W0176	19J	22		32-45-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D13500

Page 20

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D13578		P036-00/PNL/		RLY SKT (continued)				050-099
D13578		P036-00/ /		RLY SKT (continued)				150-199, 275-299
	14	UNUSED						ALL
D13580		829/120/L 15		PLUG				ALL
	1		W0508	062	20		21-61-61	ALL
	2		W0508	060	20		21-61-61	ALL
	3		W0508	059	20		21-61-61	ALL
	4		W0508	307B	20		21-61-61	ALL
	5		W0508	307R	20		21-61-61	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10		W0508	063	20		21-61-61	ALL
	11		W0508	061	20		21-61-61	ALL
	12		W0508	307Y	20		21-61-61	ALL
	13		W0508	064	20		21-61-61	ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
D13582		829/120/L 15		PLUG				ALL
	1		W0508	070	20		21-61-71	ALL
	2		W0508	069	20		21-61-71	ALL
	3		W0508	068	20		21-61-71	ALL
	4		W0508	308B	20		21-61-71	ALL
	5		W0508	308R	20		21-61-71	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10		W0508	066	20		21-61-71	ALL
	11		W0508	067	20		21-61-71	ALL
	12		W0508	308Y	20		21-61-71	ALL
	13		W0508	065	20		21-61-71	ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
D13584		P005-00/ /		PLUG-P5 (SB 21-0083)				050-099, 150-154, 162-165, 275-276
D13584		P005-00/ /		PLUG-P5				155-157, 166-199, 277-299
	1		W0066	175	20		33-13-16	ALL

HOOKUP LIST

D280T132

91-21-51

Section D13500

Page 21

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D13584		P005-00/ /		PLUG-P5 (SB 21-0083) (continued)				050-099, 150-154, 162-165, 275-276
D13584		P005-00/ /		PLUG-P5 (continued)				155-157, 166-199, 277-299
	2		W0066	176	20		33-13-16	ALL
	3		W0066	182	22		33-16-17	ALL
	4		W0066	183	22		33-16-17	ALL
	5		W0066	90D	24		21-61-81	ALL
	6		W0066	90C	20		21-61-81	ALL
	7		W0066	90B	22		21-61-81	ALL
	8		W0066	90A	24		21-61-81	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D13586		590/127/L60		PLUG				ALL
	1		W0986	204B	24		21-61-81	ALL
	2		W0986	204R	24		21-61-81	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
D13592		731/163/L075		PLUG				ALL
	1		W0942	237B	24		21-61-81	ALL
	2		W0942	237R	24		21-61-81	ALL
D13594		590/127/L60		PLUG				ALL
	1		W0986	074	24		21-43-11	ALL
	2		W0986	075	20		21-43-11	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
D13596		734/163/L 75		PLUG				ALL
	1		W0942	545	24		21-43-11	ALL
	2		W0942	546	20		21-43-11	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D13500

Page 22 End

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D13602		590/127/L60		PLUG				ALL
	A		W0986	205R	20		21-43-12	ALL
	B		W0986	076	20		21-43-12	ALL
D13608		0654+069/280/L005		RCPT-				150-199
	1		W1282	063	20		35-21-14	150-199
	2		W1282	064	20		35-21-14	150-199
D13626 D13626 D13626		P037-00/ / P037-0-0/ / P037-00/ /		RELAY SOCKET- RLY-SKT RLY-SKT				050-099 150-154 155-199, 275-299
	A1		W0192	67Y	16		73-21-11	ALL
	A2		W0192	68A	16		73-21-11	ALL
	A3	UNUSED						ALL
	B1	UNUSED						ALL
	B2	UNUSED						ALL
	B3	UNUSED						ALL
	X1		W0192	67X	20		73-21-11	ALL
	X2		W0192	67W	20		73-21-11	ALL
			W0192	67YZ			73-21-11	ALL
			W0192	68B	20		73-21-11	ALL
D13628 D13628		P036-00/ / P036-00/ /		SKT RLY SKT				050-099 150-199, 275-299
	A1		W0176	18X	16		73-21-11	ALL
	A2		W0176	18Y	16		73-21-11	ALL
	A3	UNUSED						ALL
	B1	UNUSED						ALL
	B2	UNUSED						ALL
	B3	UNUSED						ALL
	X1		W0176	18V	20		73-21-11	ALL
	X2		W0176	18U	20		73-21-11	ALL
			W0176	18XZ			73-21-11	ALL
			W0176	19P	20		73-21-11	ALL
D13634		0654+118/270/L075		RCPT-				150-199
	1		W0718	030	20		35-21-12	150-199
	2		W0718	031	20		35-21-12	150-199
D13648		676/289/R068		RCPT-				150-199
	1		W0722	031	20		35-21-13	150-199

HOOKUP LIST
D280T132

91-21-51
Section D13600
Page 1
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D13648		676/289/R068		RCPT- (continued)				150-199
	2		W0722	032	20		35-21-13	150-199

HOOKUP LIST
D280T132

91-21-51
Section D13600
Page 2 End
Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D13702		347/260/L055		PLUG-				275-299
	1	DK	W1198	004	18		33-22-31	275-299
	2	DK	W1198	005	18		33-22-31	275-299
	3	DK	W1198	003	18		33-22-31	275-299
	4	UNUSED						275-299
	5	UNUSED						275-299

HOOKUP LIST

D280T132

91-21-51

Section D13700

Page 1 End

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D13804		P036-00/PNL/		RLY SKT				ALL
	A1		W0176	73P	22		21-45-22	ALL
	A2		W0176	72P	22		21-45-22	ALL
	A3	UNUSED						ALL
	B1	UNUSED						ALL
	B2	UNUSED						ALL
	B3	UNUSED						ALL
	X1		W0176	73H	24		21-45-22	ALL
	X2		W0176	73J	24		21-45-22	ALL
D13806		P037-00/PNL/		RLY SKT				ALL
	A1	UNUSED						ALL
	A2		W1118	539	22		21-26-31	ALL
	A3		W1118	547	22		21-26-31	ALL
	B1	UNUSED						ALL
	B2		W1118	065	24		21-43-11	ALL
	B3		W1118	546	24		21-43-11	ALL
	C1	UNUSED						ALL
	C2	UNUSED						ALL
	C3	UNUSED						ALL
	D1	UNUSED						ALL
	D2	UNUSED						ALL
	D3	UNUSED						ALL
	X1		W1118	538	22		21-26-31	ALL
	X2		W1118	500	24		21-26-31	ALL
D13824		P036-00/ /		RLY-FUEL POSITION,LEFT				ALL
	A1	UNUSED						ALL
	A2		W0184	01V	18		24-11-11	ALL
	A3		W0184	01U	18		24-11-11	ALL
	B1	UNUSED						ALL
	B2	UNUSED						ALL
	B3	UNUSED						ALL
	C1	UNUSED						ALL
	C2	UNUSED						ALL
	C3	UNUSED						ALL
	D1	UNUSED						ALL
	D2	UNUSED						ALL
	D3	UNUSED						ALL
	X1		W0184	01P	24		76-11-11	ALL
	X2		W0184	01R	20		76-11-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D13800

Page 1

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D13824		P036-00/ /		RLY-FUEL POSITION,LEFT (continued)				ALL
	DED		W0184	01PZ			76-11-11	ALL
	DED		W0184	01RZ			76-11-11	ALL
	DED		W0184	01UZ			24-11-11	ALL
	DED		W0184	01VZ			24-11-11	ALL
D13826		P037-00/ /		RLY-FUEL POSITION,RIGHT				050-099, 150-154, 275-276
D13826		P037-00/ /		RLY-FUEL POSITION, RIGHT				155-199, 277-299
	A1	UNUSED						ALL
	A2		W0198	625	18		24-11-21	ALL
	A3		W0198	626	18		24-11-21	ALL
	B1	UNUSED						ALL
	B2	UNUSED						ALL
	B3	UNUSED						ALL
	C1	UNUSED						ALL
	C2	UNUSED						ALL
	C3	UNUSED						ALL
	D1	UNUSED						ALL
	D2	UNUSED						ALL
	D3	UNUSED						ALL
	X1		W0198	604	24		76-11-11	ALL
	X2		W0198	603	20		76-11-11	ALL
	DED		W0198	603Z			76-11-11	ALL
	DED		W0198	604Z			76-11-11	ALL
	DED		W0198	625Z			24-11-21	ALL
	DED		W0198	626Z			24-11-21	ALL
D13832		410/288/R040		RECP-				162-199
	1		W1228	521	22		33-27-11	162-199
	2		W1228	522	22		33-27-11	162-199
	3		W1228	523	22		33-27-11	162-199
	4		W1228	524	22		33-27-11	162-199
	5		W1228	525	22		33-27-11	162-199
	6	UNUSED						162-199
	7		W1228	527	20		33-27-11	162-199
	8		W1228	528	20		33-27-11	162-199
	9		W1228	529	22		33-27-11	162-199
	10		W1228	530	22		33-27-11	162-199
	11		W1228	531	22		33-27-11	162-199
	12		W1228	532	22		33-27-11	162-199

HOOKUP LIST

D280T132

91-21-51

Section D13800

Page 2

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D13834		410/288/L040		RECP-				162-199
	1		W1228	529	22		33-27-11	162-199
	2		W1228	530	22		33-27-11	162-199
	3		W1228	531	22		33-27-11	162-199
	4		W1228	532	22		33-27-11	162-199
	5		W1228	535	22		33-27-11	162-199
	6	UNUSED						162-199
	7		W1228	537	20		33-27-11	162-199
	8		W1228	538	20		33-27-11	162-199
	9		W1228	521	22		33-27-11	162-199
	10		W1228	522	22		33-27-11	162-199
	11		W1228	523	22		33-27-11	162-199
	12		W1228	524	22		33-27-11	162-199
D13836		447/278/0000		PLUG				162-199
	1		W1230	123	20		33-27-11	162-199
	2		W1230	124	20		33-27-11	162-199
D13840 D13840		P36/ / P036-00/ /		RELAY SOCKET-P36 RELAY SOCKET-P36				050-099 162-199
	A1		W0176	84A	22		21-66-11	050-099, 162-199
	A2		W0176	39A	22		21-66-11	050-099, 162-199
	A3		W0176	85A	22		21-66-11	050-099, 162-199
	B1	UNUSED						050-099, 162-199
	B2	UNUSED						050-099, 162-199
	B3	UNUSED						050-099, 162-199
	X1		W0176	44A	22		21-66-11	050-099, 162-199
	X2		W0176	43A	22		21-66-11	050-099, 162-199
D13842 D13842		P36/ / P036-00/ /		RELAY SOCKET-P36 RELAY SOCKET-P36				050-099 162-199
	A1		W0176	86A	22		21-66-11	050-099, 162-199
	A2		W0176	83A	22		21-66-11	050-099, 162-199
	A3		W0176	87A	22		21-66-11	050-099, 162-199
	B1	UNUSED						050-099, 162-199
	B2	UNUSED						050-099, 162-199
	B3	UNUSED						050-099, 162-199
	X1		W0176	79A	22		21-66-11	050-099, 162-199
	X2		W0176	82A	22		21-66-11	050-099, 162-199

HOOKUP LIST

D280T132

91-21-51

Section D13800

Page 3

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D13844		P36/ /		RELAY SOCKET-P36				050-099, 162-199
	A1		W0176	96A	20		21-66-11	050-099, 162-199
	A2		W0176	82A	22		21-66-11	050-099, 162-199
	A3		W0176	97A	22		21-66-11	050-099, 162-199
	B1		W0176	98A	20		21-66-11	050-099, 162-199
	B2		W0176	43A	22		21-66-11	050-099, 162-199
	B3		W0176	21B	22		21-66-11	050-099, 162-199
	C1		W0176	94A	22		21-66-11	050-099, 162-199
	C2	UNUSED						050-099, 162-199
	C3	UNUSED						050-099, 162-199
	D1	UNUSED						050-099, 162-199
	D2	UNUSED						050-099, 162-199
	D3	UNUSED						050-099, 162-199
	X1		W0176	88A	22		21-66-11	050-099, 162-199
	X2		W0176	90A	20		21-66-11	050-099, 162-199
D13846		P36/ /		RELAY SOCKET-P36				050-099
D13846		P036-00/ /		RELAY SOCKET-P36				162-199
	A1		W0176	36A	20		21-66-11	050-099, 162-199
	A2		W0176	32A	20		21-66-11	050-099, 162-199
	A3	UNUSED						050-099, 162-199
	B1		W0176	37A	20		21-66-11	050-099, 162-199
	B2		W0176	33A	20		21-66-11	050-099, 162-199
	B3	UNUSED						050-099, 162-199
	C1		W0176	38A	20		21-66-11	050-099, 162-199
	C2		W0176	34A	20		21-66-11	050-099, 162-199
	C3	UNUSED						050-099, 162-199
	D1	UNUSED						050-099, 162-199
	D2	UNUSED						050-099, 162-199
	D3	UNUSED						050-099, 162-199
	X1		W0176	31A	22		21-66-11	050-099, 162-199
	X2		W0176	35A	20		21-66-11	050-099, 162-199
D13848		P36/ /		RELAY SOCKET-P36				050-099, 162-199
	A1	UNUSED						050-099, 162-199
	A2		W0176	48A	22		21-66-11	050-099, 162-199
	A3		W0176	49A	22		21-66-11	050-099, 162-199
	B1	UNUSED						050-099, 162-199
	B2	UNUSED						050-099, 162-199
	B3	UNUSED						050-099, 162-199

HOOKUP LIST

D280T132

91-21-51

Section D13800

Page 4

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D13848		P36/ /		RELAY SOCKET-P36 (continued)				050-099, 162-199
	X1		W0176	30A	22		21-66-11	050-099, 162-199
	X2		W0176	65A	22		21-66-11	050-099, 162-199
D13850		P037-00/ /		RELAY SOCKET				050-099, 162-199
	A1		W0192	74F	20		21-66-21	050-099, 162-199
	A2		W0192	75B	20		21-66-21	050-099, 162-199
	A3	UNUSED						050-099, 162-199
	B1		W0192	74G	20		21-66-21	050-099, 162-199
	B2		W0192	75C	20		21-66-21	050-099, 162-199
	B3	UNUSED						050-099, 162-199
	C1	UNUSED						050-099, 162-199
	C2	UNUSED						050-099, 162-199
	C3	UNUSED						050-099, 162-199
	D1	UNUSED						050-099, 162-199
	D2	UNUSED						050-099, 162-199
	D3	UNUSED						050-099, 162-199
	X1		W0192	75A	22		21-66-21	050-099, 162-199
	X2		W0192	74H	22		21-66-21	050-099, 162-199
D13852		P36/ /		RELAY SOCKET-P36				050-099, 150, 152-199
	A1		W0176	37E	20		21-66-31	050-099, 150, 152-199
	A2		W0176	46E	20		21-66-31	050-099, 150, 152-199
	A3	UNUSED						050-099, 150, 152-199
	B1		W0176	38E	20		21-66-31	050-099, 150, 152-199
	B2		W0176	47E	20		21-66-31	050-099, 150, 152-199
	B3	UNUSED						050-099, 150, 152-199
	C1	UNUSED						050-099, 150, 152-199
	C2	UNUSED						050-099, 150, 152-199
	C3	UNUSED						050-099, 150, 152-199
	D1	UNUSED						050-099, 150, 152-199
	D2	UNUSED						050-099, 150, 152-199
	D3	UNUSED						050-099, 150, 152-199
	X1		W0176	45E	22		21-66-31	050-099, 150, 152-199
	X2		W0176	36E	22		21-66-31	050-099, 150, 152-199
D13854		P037-00/ /		RELAY SOCKET				050-099, 150, 152-199
	A1		W0192	75J	20		21-66-41	050-099, 150, 152-199
	A2		W0192	76H	20		21-66-41	050-099, 150, 152-199
	A3	UNUSED						050-099, 150, 152-199
	B1		W0192	75L	20		21-66-41	050-099, 150, 152-199

HOOKUP LIST

D280T132

91-21-51

Section D13800

Page 5

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D13854		P037-00/ /		RELAY SOCKET (continued)				050-099, 150, 152-199
	B2		W0192	76I	20		21-66-41	050-099, 150, 152-199
	B3	UNUSED						050-099, 150, 152-199
	C1	UNUSED						050-099, 150, 152-199
	C2	UNUSED						050-099, 150, 152-199
	C3	UNUSED						050-099, 150, 152-199
	D1	UNUSED						050-099, 150, 152-199
	D2	UNUSED						050-099, 150, 152-199
	D3	UNUSED						050-099, 150, 152-199
	X1		W0192	76G	22		21-66-41	050-099, 150, 152-199
	X2		W0192	75I	22		21-66-41	050-099, 150, 152-199
D13856		638/173/L079		PLUG-				050-099, 162-199
	1		W1232	121	22		21-66-11	050-099, 162-199
	2		W1232	119	22		21-66-11	050-099, 162-199
	3		W1232	120	20		21-66-11	050-099, 162-199
	4		W1232	124	22		21-66-11	050-099, 162-199
	5		W1232	122	20		21-66-11	050-099, 162-199
	6		W1232	118	22		21-66-11	050-099, 162-199
	7		W1232	117	20		21-66-11	050-099, 162-199
D13860		612/173/L079		PLUG-				050-099, 162-199
	1		W1232	301R	22		21-66-11	050-099, 162-199
	2		W1232	301Y	22		21-66-11	050-099, 162-199
	3		W1232	301B	22		21-66-11	050-099, 162-199
	4		W1232	112	20		21-66-11	050-099, 162-199
	5	UNUSED						050-099, 162-199
D13868		310/279/L012		PLUG				050-099
D13868		384/299/L012		PLUG				162-199
	1		W1230	206B	22		21-66-11	050-099, 162-199
	2	UNUSED						050-099, 162-199
	3		W1230	206R	22		21-66-11	050-099, 162-199
D13870		434/299/L013		PLUG-				050-099, 162-199
	1	UNUSED						050-099, 162-199
	2	DK	W1232	202R	18		21-66-11	050-099, 162-199
	3		W1232	102	20		21-66-11	050-099, 162-199
	4	DK	W1232	202B	18		21-66-11	050-099, 162-199
	5	UNUSED						050-099, 162-199
	DED		W1232	202Z			21-66-11	050-099, 162-199

HOOKUP LIST

D280T132

91-21-51

Section D13800

Page 6

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D13872		526/303/L023		PLUG-				050-099, 162-199
	1		W1232	107	22		21-66-11	050-099, 162-199
	2		W1232	105	22		21-66-11	050-099, 162-199
	3		W1232	128	20		21-66-11	050-099, 162-199
	4		W1232	103	20		21-66-11	050-099, 162-199
	5		W1232	110	22		21-66-11	050-099, 162-199
	6		W1232	109	22		21-66-11	050-099, 162-199
	7		W1232	104	20		21-66-11	050-099, 162-199
D13874		393/294/L015		PLUG-				050-099, 162-199
	1	UNUSED						050-099, 162-199
	2	UNUSED						050-099, 162-199
	3	UNUSED						050-099, 162-199
	4	UNUSED						050-099, 162-199
	5	DK	W1232	202B	18		21-66-11	050-099, 162-199
	6	UNUSED						050-099, 162-199
	7		W1232	108	20		21-66-11	050-099, 162-199
	8		W1232	106	20		21-66-11	050-099, 162-199
	9	DK	W1232	300R	18		21-66-11	050-099, 162-199
	10	DK	W1232	300Y	18		21-66-11	050-099, 162-199
	11	DK	W1232	300B	18		21-66-11	050-099, 162-199
	12	DK	W1232	202R	18		21-66-11	050-099, 162-199
	13		W1232	107	22		21-66-11	050-099, 162-199
	14		W1232	105	22		21-66-11	050-099, 162-199
			W1232	202	20		21-66-11	050-099, 162-199
			W1232	202Z			21-66-11	050-099, 162-199
D13876		393/294/L015		PLUG-				050-099, 162-199
	1	UNUSED						050-099, 162-199
	2	UNUSED						050-099, 162-199
	3	UNUSED						050-099, 162-199
	4	UNUSED						050-099, 162-199
	5	UNUSED						050-099, 162-199
	6	UNUSED						050-099, 162-199
	7	UNUSED						050-099, 162-199
	8	UNUSED						050-099, 162-199
	9	UNUSED						050-099, 162-199
	10	UNUSED						050-099, 162-199
	11	UNUSED						050-099, 162-199
	12	UNUSED						050-099, 162-199
	13	UNUSED						050-099, 162-199

HOOKUP LIST

D280T132

91-21-51

Section D13800

Page 7

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D13876		393/294/L015		PLUG- (continued)				050-099, 162-199
	14	UNUSED						050-099, 162-199
	15	UNUSED						050-099, 162-199
	16	UNUSED						050-099, 162-199
	17	UNUSED						050-099, 162-199
	18	UNUSED						050-099, 162-199
	19	UNUSED						050-099, 162-199
	20	UNUSED						050-099, 162-199
	21		W1232	203R	22		21-66-11	050-099, 162-199
	22		W1232	203B	22		21-66-11	050-099, 162-199
	23		W1232	111	20		21-66-11	050-099, 162-199
	24		W1232	109	22		21-66-11	050-099, 162-199
	25		W1232	110	22		21-66-11	050-099, 162-199
	26	UNUSED						050-099, 162-199
	27	UNUSED						050-099, 162-199
	28	UNUSED						050-099, 162-199
	29	UNUSED						050-099, 162-199
	30	UNUSED						050-099, 162-199
	31	UNUSED						050-099, 162-199
	32	UNUSED						050-099, 162-199
	33	UNUSED						050-099, 162-199
	34	UNUSED						050-099, 162-199
	35	UNUSED						050-099, 162-199
	36	UNUSED						050-099, 162-199
	37	UNUSED						050-099, 162-199
	38	UNUSED						050-099, 162-199
	39	UNUSED						050-099, 162-199
	40	UNUSED						050-099, 162-199
	41	UNUSED						050-099, 162-199
	42	UNUSED						050-099, 162-199
	43	UNUSED						050-099, 162-199
	44	UNUSED						050-099, 162-199
	45	UNUSED						050-099, 162-199
	46	UNUSED						050-099, 162-199
	47	UNUSED						050-099, 162-199
	48	UNUSED						050-099, 162-199
	49	UNUSED						050-099, 162-199
	50	UNUSED						050-099, 162-199
	51	UNUSED						050-099, 162-199
	52	UNUSED						050-099, 162-199
	53	UNUSED						050-099, 162-199

HOOKUP LIST
D280T132

91-21-51
Section D13800
Page 8
Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D13876		393/294/L015		PLUG- (continued)				050-099, 162-199
	54	UNUSED						050-099, 162-199
	55	UNUSED						050-099, 162-199
			W1232	203	20		21-66-11	050-099, 162-199
			W1232	203Z			21-66-11	050-099, 162-199
D13878		392/296/L018		PLUG				050-099
D13878		393/294/L015		PLUG				162-199
	1		W1230	205B	22		21-66-11	050-099, 162-199
	2		W1230	205R	22		21-66-11	050-099, 162-199
	3		W1230	206B	22		21-66-11	050-099, 162-199
	4		W1230	206R	22		21-66-11	050-099, 162-199
	5		W1230	207B	22		21-66-11	050-099, 162-199
	6		W1230	207R	22		21-66-11	050-099, 162-199
	7	UNUSED						050-099, 162-199
	8		W1230	301B	22		21-66-11	050-099, 162-199
	9		W1230	301R	22		21-66-11	050-099, 162-199
	10		W1230	301Y	22		21-66-11	050-099, 162-199
	11	UNUSED						050-099, 162-199
	12	UNUSED						050-099, 162-199
	13		W1230	507	20		21-66-11	050-099, 162-199
	14	UNUSED						050-099, 162-199
	15	UNUSED						050-099, 162-199
	16	UNUSED						050-099, 162-199
	17	UNUSED						050-099, 162-199
	18		W1230	502	22		21-66-11	050-099, 162-199
	19	UNUSED						050-099, 162-199
	20		W1230	516	22		21-66-11	050-099, 162-199
	21		W1230	517	22		21-66-11	050-099, 162-199
	22		W1230	520	22		21-66-11	050-099, 162-199
	23		W1230	514	22		21-66-11	050-099, 162-199
	24		W1230	515	22		21-66-11	050-099, 162-199
	25		W1230	519	22		21-66-11	050-099, 162-199
	26	UNUSED						050-099, 162-199
	27		W1230	513	22		21-66-11	050-099, 162-199
	28		W1230	512	22		21-66-11	050-099, 162-199
	29		W1230	511	22		21-66-11	050-099, 162-199
	30	UNUSED						050-099, 162-199
	31		W1230	504	22		21-66-11	050-099, 162-199
	32		W1230	508	22		21-66-11	050-099, 162-199
	33		W1230	509	22		21-66-11	050-099, 162-199

HOOKUP LIST

D280T132

91-21-51

Section D13800

Page 9

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D13878		392/296/L018		PLUG (continued)				050-099
D13878		393/294/L015		PLUG (continued)				162-199
	34	UNUSED						050-099, 162-199
	35	UNUSED						050-099, 162-199
	36	UNUSED						050-099, 162-199
	37	UNUSED						050-099, 162-199
	38		W1230	510	22		21-66-11	050-099, 162-199
	39		W1230	524	22		21-66-11	050-099, 162-199
	40		W1230	503	22		21-66-11	050-099, 162-199
	41	UNUSED						050-099, 162-199
	42	UNUSED						050-099, 162-199
	43	UNUSED						050-099, 162-199
	44	UNUSED						050-099, 162-199
	45		W1230	521	22		21-66-11	050-099, 162-199
	46	UNUSED						050-099, 162-199
	47	UNUSED						050-099, 162-199
	48	UNUSED						050-099, 162-199
	49	UNUSED						050-099, 162-199
	50		W1230	521	22		21-66-11	050-099, 162-199
	51	UNUSED						050-099, 162-199
	52	UNUSED						050-099, 162-199
	53	UNUSED						050-099, 162-199
	54	UNUSED						050-099, 162-199
	55	UNUSED						050-099, 162-199
	56	UNUSED						050-099, 162-199
	57	UNUSED						050-099, 162-199
	58	UNUSED						050-099, 162-199
	59	UNUSED						050-099, 162-199
	60		W1230	506	20		21-66-11	050-099, 162-199
	61	UNUSED						050-099, 162-199
	DED		W1230	502Z			21-66-11	050-099, 162-199
	DED		W1230	504Z			21-66-11	050-099, 162-199
	DED		W1230	508Z			21-66-11	050-099, 162-199
	DED		W1230	509Z			21-66-11	050-099, 162-199
	DED		W1230	510Z			21-66-11	050-099, 162-199
	DED		W1230	516Z			21-66-11	050-099, 162-199
	DED		W1230	517Z			21-66-11	050-099, 162-199
	DED		W1230	519Z			21-66-11	050-099, 162-199
	DED		W1230	520Z			21-66-11	050-099, 162-199

HOOKUP LIST

D280T132

91-21-51

Section D13800

Page 10

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D13880		441/275/R055		PLUG-				050-099
D13880		441/267/R063		PLUG-				162-199
	1		W1236	206B	22		21-66-21	050-099, 162-199
	2		W1236	206R	22		21-66-21	050-099, 162-199
	3	UNUSED						050-099, 162-199
	4	UNUSED						050-099, 162-199
	5	UNUSED						050-099, 162-199
D13882		444/291/R032		PLUG-				050-099, 162-199
	1		W1236	200B	22		21-66-21	050-099, 162-199
	2	UNUSED						050-099, 162-199
	3		W1236	200R	22		21-66-21	050-099, 162-199
D13884		455/291/R12		HTR SKT				050-099, 162-199
	1	DK	W0770	302Y	18		21-66-21	050-099, 162-199
	2	DK	W0770	302B	18		21-66-21	050-099, 162-199
	3		W0770	106	20		21-66-21	050-099, 162-199
	4	DK	W0770	302R	18		21-66-21	050-099, 162-199
	5	UNUSED						050-099, 162-199
	DED		W0770	302Z			21-66-21	050-099, 162-199
D13886		441/267/R063		PLUG-				050-099, 162-199
	A		W1236	300B	22		21-66-21	050-099, 162-199
	B		W1236	300R	22		21-66-21	050-099, 162-199
	C		W1236	300Y	22		21-66-21	050-099, 162-199
	D	UNUSED						050-099, 162-199
	E	UNUSED						050-099, 162-199
	F	UNUSED						050-099, 162-199
D13888		481/289/R12		RELAY SOCKET				050-099
D13888		481/298/R12		RELAY SOCKET				162-199
	1		W0770	104	20		21-66-21	050-099, 162-199
	2		W0770	105	20		21-66-21	050-099, 162-199
	3		W0770	115	20		21-66-21	050-099, 162-199
	4		W0770	103	20		21-66-21	050-099, 162-199
	5	UNUSED						050-099, 162-199
D13890		1438/293/L026		PLUG-				050-099, 150, 152-199
	1		W1232	200B	22		21-66-31	050-099, 150, 152-199
	2	UNUSED						050-099, 150, 152-199

HOOKUP LIST

D280T132

91-21-51

Section D13800

Page 11

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D13890		1438/293/L026		PLUG- (continued)				050-099, 150, 152-199
	3		W1232	200R	22		21-66-31	050-099, 150, 152-199
D13892		1419/267/L063		PLUG-				050-099
D13892		1419/254/L063		PLUG-				150, 152-199
	1		W1232	201B	22		21-66-31	050-099, 150, 152-199
	2		W1232	201R	22		21-66-31	050-099, 150, 152-199
	3	UNUSED						050-099, 150, 152-199
	4	UNUSED						050-099, 150, 152-199
	5	UNUSED						050-099, 150, 152-199
D13894		1428/300/L012		PLUG-				050-099, 150, 152-199
	1	DK	W1232	304B	18		21-66-31	050-099, 150, 152-199
	2	DK	W1232	304Y	18		21-66-31	050-099, 150, 152-199
	3		W1232	145	20		21-66-31	050-099, 150, 152-199
	4	DK	W1232	304R	18		21-66-31	050-099, 150, 152-199
	5	UNUSED						050-099, 150, 152-199
	DED		W1232	304Z			21-66-31	050-099, 150, 152-199
D13896		1389/298/L012		PLUG-				050-099, 150, 152-199
	1		W1232	147	20		21-66-31	050-099, 150, 152-199
	2		W1232	148	20		21-66-31	050-099, 150, 152-199
	3		W1232	149	20		21-66-31	050-099, 150, 152-199
	4		W1232	146	20		21-66-31	050-099, 150, 152-199
	5	UNUSED						050-099, 150, 152-199
D13898		1419/267/L063		PLUG-				050-099, 150, 152-199
	A		W1232	303B	22		21-66-31	050-099, 150, 152-199
	B		W1232	303R	22		21-66-31	050-099, 150, 152-199
	C		W1232	303Y	22		21-66-31	050-099, 150, 152-199
	D	UNUSED						050-099, 150, 152-199
	E	UNUSED						050-099, 150, 152-199
	F	UNUSED						050-099, 150, 152-199

HOOKUP LIST

D280T132

91-21-51

Section D13800
Page 12 End
Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D13900		1438/293/R26		TEMP SENSR CONN				050-099
D13900		1438/300/R26		TEMP SENSR CONN				150, 152-199
	1		W0770	202B	22		21-66-41	050-099, 150, 152-199
	2	UNUSED						050-099, 150, 152-199
	3		W0770	202R	22		21-66-41	050-099, 150, 152-199
D13902		1419/290/R63		TEMP SENSR CONN				050-099
D13902		1419/290/R63		TEMP SENSR CONN				150, 152-199
	1		W0770	203B	22		21-66-41	050-099, 150, 152-199
	2		W0770	203R	22		21-66-41	050-099, 150, 152-199
	3	UNUSED						050-099, 150, 152-199
	4	UNUSED						050-099, 150, 152-199
	5	UNUSED						050-099, 150, 152-199
D13904		1428/300/R12		HTR SKT				050-099, 150, 152-199
	1	DK	W0770	300Y	18		21-66-41	050-099, 150, 152-199
	2	DK	W0770	300B	18		21-66-41	050-099, 150, 152-199
	3		W0770	128	20		21-66-41	050-099, 150, 152-199
	4	DK	W0770	300R	18		21-66-41	050-099, 150, 152-199
	5	UNUSED						050-099, 150, 152-199
	DED		W0770	300Z			21-66-41	050-099, 150, 152-199
D13906		1398/298/R12		CREW REST SUPP FAN CONN				050-099, 150, 152-199
	1		W0770	108	20		21-66-41	050-099, 150, 152-199
	2		W0770	109	20		21-66-41	050-099, 150, 152-199
	3		W0770	110	20		21-66-41	050-099, 150, 152-199
	4		W0770	107	20		21-66-41	050-099, 150, 152-199
	5	UNUSED						050-099, 150, 152-199
D13908		1419/267/R63		TEMP SEL CONN				050-099, 150, 152-199
	A		W0770	305B	22		21-66-41	050-099, 150, 152-199
	B		W0770	305R	22		21-66-41	050-099, 150, 152-199
	C		W0770	305Y	22		21-66-41	050-099, 150, 152-199
	D	UNUSED						050-099, 150, 152-199
	E	UNUSED						050-099, 150, 152-199
	F	UNUSED						050-099, 150, 152-199
D13910		1428/294/R18		TEMP CONT CONN				050-099, 150, 152-199
	1	UNUSED						050-099, 150, 152-199
	2	UNUSED						050-099, 150, 152-199
	3	UNUSED						050-099, 150, 152-199

HOOKUP LIST

D280T132

91-21-51

Section D13900

Page 1

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D13910		1428/294/R18		TEMP CONT CONN (continued)				050-099, 150, 152-199
	4	DK	W0770	300B	18		21-66-41	050-099, 150, 152-199
	5	DK	W0770	300R	18		21-66-41	050-099, 150, 152-199
	6	DK	W0770	300Y	18		21-66-41	050-099, 150, 152-199
	7		W0770	121	20		21-66-41	050-099, 150, 152-199
	8		W0770	120	20		21-66-41	050-099, 150, 152-199
	9	DK	W0770	304R	18		21-66-41	050-099, 150, 152-199
	10	DK	W0770	304Y	18		21-66-41	050-099, 150, 152-199
	11	DK	W0770	304B	18		21-66-41	050-099, 150, 152-199
	12	UNUSED						050-099, 150, 152-199
	13	UNUSED						050-099, 150, 152-199
	14	UNUSED						050-099, 150, 152-199
			W0770	300	20		21-66-41	050-099, 150, 152-199
			W0770	300Z			21-66-41	050-099, 150, 152-199
D13912		1428/294/R18		TEMP CONT CONN				050-099, 150, 152-199
	1	UNUSED						050-099, 150, 152-199
	2	UNUSED						050-099, 150, 152-199
	3	UNUSED						050-099, 150, 152-199
	4	UNUSED						050-099, 150, 152-199
	5	UNUSED						050-099, 150, 152-199
	6	UNUSED						050-099, 150, 152-199
	7	UNUSED						050-099, 150, 152-199
	8	UNUSED						050-099, 150, 152-199
	9	UNUSED						050-099, 150, 152-199
	10	UNUSED						050-099, 150, 152-199
	11	UNUSED						050-099, 150, 152-199
	12	UNUSED						050-099, 150, 152-199
	13	UNUSED						050-099, 150, 152-199
	14	UNUSED						050-099, 150, 152-199
	15	UNUSED						050-099, 150, 152-199
	16	UNUSED						050-099, 150, 152-199
	17	UNUSED						050-099, 150, 152-199
	18	UNUSED						050-099, 150, 152-199
	19	UNUSED						050-099, 150, 152-199
	20	UNUSED						050-099, 150, 152-199
	21		W0770	201R	22		21-66-41	050-099, 150, 152-199
	22		W0770	201B	22		21-66-41	050-099, 150, 152-199
	23		W0770	127	20		21-66-41	050-099, 150, 152-199
	24	UNUSED						050-099, 150, 152-199
	25	UNUSED						050-099, 150, 152-199

HOOKUP LIST
D280T132

91-21-51
Section D13900
Page 2
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D13912		1428/294/R18		TEMP CONT CONN (continued)				050-099, 150, 152-199
	26	UNUSED						050-099, 150, 152-199
	27	UNUSED						050-099, 150, 152-199
	28	UNUSED						050-099, 150, 152-199
	29	UNUSED						050-099, 150, 152-199
	30	UNUSED						050-099, 150, 152-199
	31	UNUSED						050-099, 150, 152-199
	32	UNUSED						050-099, 150, 152-199
	33	UNUSED						050-099, 150, 152-199
	34	UNUSED						050-099, 150, 152-199
	35	UNUSED						050-099, 150, 152-199
	36	UNUSED						050-099, 150, 152-199
	37	UNUSED						050-099, 150, 152-199
	38	UNUSED						050-099, 150, 152-199
	39	UNUSED						050-099, 150, 152-199
	40	UNUSED						050-099, 150, 152-199
	41	UNUSED						050-099, 150, 152-199
	42	UNUSED						050-099, 150, 152-199
	43	UNUSED						050-099, 150, 152-199
	44	UNUSED						050-099, 150, 152-199
	45	UNUSED						050-099, 150, 152-199
	46	UNUSED						050-099, 150, 152-199
	47	UNUSED						050-099, 150, 152-199
	48	UNUSED						050-099, 150, 152-199
	49	UNUSED						050-099, 150, 152-199
	50	UNUSED						050-099, 150, 152-199
	51	UNUSED						050-099, 150, 152-199
	52	UNUSED						050-099, 150, 152-199
	53	UNUSED						050-099, 150, 152-199
	54	UNUSED						050-099, 150, 152-199
	55	UNUSED						050-099, 150, 152-199
			W0770	201	20		21-66-41	050-099, 150, 152-199
			W0770	201Z			21-66-41	050-099, 150, 152-199
D13914		1428/294/R18		TEMP CONT CONN				050-099, 150, 152-199
	1	UNUSED						050-099, 150, 152-199
	2	UNUSED						050-099, 150, 152-199
	3		W0770	202B	22		21-66-41	050-099, 150, 152-199
	4		W0770	202R	22		21-66-41	050-099, 150, 152-199
	5		W0770	203B	22		21-66-41	050-099, 150, 152-199
	6		W0770	203R	22		21-66-41	050-099, 150, 152-199

HOOKUP LIST
D280T132

91-21-51
Section D13900
Page 3
Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D13914		1428/294/R18		TEMP CONT CONN (continued)				050-099, 150, 152-199
	7	UNUSED						050-099, 150, 152-199
	8		W0770	305B	22		21-66-41	050-099, 150, 152-199
	9		W0770	305R	22		21-66-41	050-099, 150, 152-199
	10		W0770	305Y	22		21-66-41	050-099, 150, 152-199
	11	UNUSED						050-099, 150, 152-199
	12	UNUSED						050-099, 150, 152-199
	13		W0770	124	20		21-66-41	050-099, 150, 152-199
	14	UNUSED						050-099, 150, 152-199
	15		W0770	125	22		21-66-41	050-099, 150, 152-199
	16		W0770	125	22		21-66-41	050-099, 150, 152-199
	17	UNUSED						050-099, 150, 152-199
	18		W0770	123	22		21-66-41	050-099, 150, 152-199
	19	UNUSED						050-099, 150, 152-199
	20	UNUSED						050-099, 150, 152-199
	21	UNUSED						050-099, 150, 152-199
	22	UNUSED						050-099, 150, 152-199
	23	UNUSED						050-099, 150, 152-199
	24	UNUSED						050-099, 150, 152-199
	25	UNUSED						050-099, 150, 152-199
	26	UNUSED						050-099, 150, 152-199
	27	UNUSED						050-099, 150, 152-199
	28	UNUSED						050-099, 150, 152-199
	29		W0770	113	22		21-66-41	050-099, 150, 152-199
	30	UNUSED						050-099, 150, 152-199
	31		W0770	122	22		21-66-41	050-099, 150, 152-199
	32		W0770	111	22		21-66-41	050-099, 150, 152-199
	33		W0770	112	22		21-66-41	050-099, 150, 152-199
	34	UNUSED						050-099, 150, 152-199
	35	UNUSED						050-099, 150, 152-199
	36	UNUSED						050-099, 150, 152-199
	37	UNUSED						050-099, 150, 152-199
	38	UNUSED						050-099, 150, 152-199
	39	UNUSED						050-099, 150, 152-199
	40	UNUSED						050-099, 150, 152-199
	41	UNUSED						050-099, 150, 152-199
	42	UNUSED						050-099, 150, 152-199
	43		W0770	114	22		21-66-41	050-099, 150, 152-199
	44	UNUSED						050-099, 150, 152-199
	45	UNUSED						050-099, 150, 152-199
	46	UNUSED						050-099, 150, 152-199

HOOKUP LIST
D280T132

91-21-51
Section D13900
Page 4
Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D13914		1428/294/R18		TEMP CONT CONN (continued)				050-099, 150, 152-199
	47	UNUSED						050-099, 150, 152-199
	48	UNUSED	W0770	114	22		21-66-41	050-099, 150, 152-199
	49	UNUSED						050-099, 150, 152-199
	50	UNUSED						050-099, 150, 152-199
	51	UNUSED						050-099, 150, 152-199
	52	UNUSED						050-099, 150, 152-199
	53	UNUSED						050-099, 150, 152-199
	54	UNUSED						050-099, 150, 152-199
	55	UNUSED						050-099, 150, 152-199
	56	UNUSED						050-099, 150, 152-199
	57	UNUSED						050-099, 150, 152-199
	58	UNUSED						050-099, 150, 152-199
	59	UNUSED						050-099, 150, 152-199
	60	UNUSED	W0770	126	20		21-66-41	050-099, 150, 152-199
	61	UNUSED						050-099, 150, 152-199
D13916		433/294/R15		RLY SKT				050-099, 162-199
	1	UNUSED						050-099, 162-199
	2	UNUSED						050-099, 162-199
	3	UNUSED						050-099, 162-199
	4	DK	W0770	302B	18		21-66-21	050-099, 162-199
	5	DK	W0770	302R	18		21-66-21	050-099, 162-199
	6	DK	W0770	302Y	18		21-66-21	050-099, 162-199
	7	DK	W0770	102	18		21-66-21	050-099, 162-199
	8	DK	W0770	101	18		21-66-21	050-099, 162-199
	9	DK	W0770	301R	18		21-66-21	050-099, 162-199
	10	DK	W0770	301Y	18		21-66-21	050-099, 162-199
	11	DK	W0770	301B	18		21-66-21	050-099, 162-199
	12	UNUSED						050-099, 162-199
	13	UNUSED						050-099, 162-199
	14	UNUSED						050-099, 162-199
			W0770	302	18		21-66-21	050-099, 162-199
			W0770	302Z			21-66-21	050-099, 162-199
D13918		433/294/R015		PLUG-				050-099, 162-199
	1	UNUSED						050-099, 162-199
	2	UNUSED						050-099, 162-199
	3	UNUSED						050-099, 162-199
	4	UNUSED						050-099, 162-199
	5	UNUSED						050-099, 162-199

HOOKUP LIST

D280T132

91-21-51

Section D13900

Page 5

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D13918		433/294/R015		PLUG- (continued)				050-099, 162-199
	6	UNUSED						050-099, 162-199
	7	UNUSED						050-099, 162-199
	8	UNUSED						050-099, 162-199
	9	UNUSED						050-099, 162-199
	10	UNUSED						050-099, 162-199
	11	UNUSED						050-099, 162-199
	12	UNUSED						050-099, 162-199
	13	UNUSED						050-099, 162-199
	14	UNUSED						050-099, 162-199
	15	UNUSED						050-099, 162-199
	16	UNUSED						050-099, 162-199
	17	UNUSED						050-099, 162-199
	18	UNUSED						050-099, 162-199
	19	UNUSED						050-099, 162-199
	20	UNUSED						050-099, 162-199
	21		W1236	207R	22		21-66-21	050-099, 162-199
	22		W1236	207B	22		21-66-21	050-099, 162-199
	23		W1236	191	20		21-66-21	050-099, 162-199
	24	UNUSED						050-099, 162-199
	25	UNUSED						050-099, 162-199
	26	UNUSED						050-099, 162-199
	27	UNUSED						050-099, 162-199
	28	UNUSED						050-099, 162-199
	29	UNUSED						050-099, 162-199
	30	UNUSED						050-099, 162-199
	31	UNUSED						050-099, 162-199
	32	UNUSED						050-099, 162-199
	33	UNUSED						050-099, 162-199
	34	UNUSED						050-099, 162-199
	35	UNUSED						050-099, 162-199
	36	UNUSED						050-099, 162-199
	37	UNUSED						050-099, 162-199
	38	UNUSED						050-099, 162-199
	39	UNUSED						050-099, 162-199
	40	UNUSED						050-099, 162-199
	41	UNUSED						050-099, 162-199
	42	UNUSED						050-099, 162-199
	43	UNUSED						050-099, 162-199
	44	UNUSED						050-099, 162-199
	45	UNUSED						050-099, 162-199

HOOKUP LIST
D280T132

91-21-51
Section D13900
Page 6
Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D13918		433/294/R015		PLUG- (continued)				050-099, 162-199
	46	UNUSED						050-099, 162-199
	47	UNUSED						050-099, 162-199
	48	UNUSED						050-099, 162-199
	49	UNUSED						050-099, 162-199
	50	UNUSED						050-099, 162-199
	51	UNUSED						050-099, 162-199
	52	UNUSED						050-099, 162-199
	53	UNUSED						050-099, 162-199
	54	UNUSED						050-099, 162-199
	55	UNUSED						050-099, 162-199
			W1236	207	20		21-66-21	050-099, 162-199
			W1236	207Z			21-66-21	050-099, 162-199
D13920		433/294/R015		PLUG-				050-099, 162-199
	1	UNUSED						050-099, 162-199
	2	UNUSED						050-099, 162-199
	3		W1236	200B	22		21-66-21	050-099, 162-199
	4		W1236	200R	22		21-66-21	050-099, 162-199
	5		W1236	206B	22		21-66-21	050-099, 162-199
	6		W1236	206R	22		21-66-21	050-099, 162-199
	7	UNUSED						050-099, 162-199
	8		W1236	300B	22		21-66-21	050-099, 162-199
	9		W1236	300R	22		21-66-21	050-099, 162-199
	10		W1236	300Y	22		21-66-21	050-099, 162-199
	11	UNUSED						050-099, 162-199
	12	UNUSED						050-099, 162-199
	13		W1236	189	20		21-66-21	050-099, 162-199
	14	UNUSED						050-099, 162-199
	15		W1236	188	22		21-66-21	050-099, 162-199
	16		W1236	188	22		21-66-21	050-099, 162-199
	17	UNUSED						050-099, 162-199
	18		W1236	185	22		21-66-21	050-099, 162-199
	19	UNUSED						050-099, 162-199
	20	UNUSED						050-099, 162-199
	21	UNUSED						050-099, 162-199
	22	UNUSED						050-099, 162-199
	23	UNUSED						050-099, 162-199
	24	UNUSED						050-099, 162-199
	25	UNUSED						050-099, 162-199
	26	UNUSED						050-099, 162-199

HOOKUP LIST

D280T132

91-21-51

Section D13900

Page 7

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D13920		433/294/R015		PLUG- (continued)				050-099, 162-199
	27	UNUSED						050-099, 162-199
	28	UNUSED						050-099, 162-199
	29		W1236	194	22		21-66-21	050-099, 162-199
	30	UNUSED						050-099, 162-199
	31		W1236	184	22		21-66-21	050-099, 162-199
	32		W1236	195	22		21-66-21	050-099, 162-199
	33		W1236	197	22		21-66-21	050-099, 162-199
	34	UNUSED						050-099, 162-199
	35	UNUSED						050-099, 162-199
	36	UNUSED						050-099, 162-199
	37	UNUSED						050-099, 162-199
	38	UNUSED						050-099, 162-199
	39	UNUSED						050-099, 162-199
	40	UNUSED						050-099, 162-199
	41	UNUSED						050-099, 162-199
	42	UNUSED						050-099, 162-199
	43		W1236	502	22		21-66-21	050-099, 162-199
	44	UNUSED						050-099, 162-199
	45	UNUSED						050-099, 162-199
	46	UNUSED						050-099, 162-199
	47	UNUSED						050-099, 162-199
	48		W1236	502	22		21-66-21	050-099, 162-199
	49	UNUSED						050-099, 162-199
	50	UNUSED						050-099, 162-199
	51	UNUSED						050-099, 162-199
	52	UNUSED						050-099, 162-199
	53	UNUSED						050-099, 162-199
	54	UNUSED						050-099, 162-199
	55	UNUSED						050-099, 162-199
	56	UNUSED						050-099, 162-199
	57	UNUSED						050-099, 162-199
	58	UNUSED						050-099, 162-199
	59	UNUSED						050-099, 162-199
	60		W1236	190	20		21-66-21	050-099, 162-199
	61	UNUSED						050-099, 162-199
D13922		1445/294/L015		PLUG-				050-099, 150, 152-199
	1	UNUSED						050-099, 150, 152-199
	2	UNUSED						050-099, 150, 152-199
	3	UNUSED						050-099, 150, 152-199

HOOKUP LIST
D280T132

91-21-51
Section D13900
Page 8
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D13922		1445/294/L015		PLUG- (continued)				050-099, 150, 152-199
	4	DK	W1232	304Y	18		21-66-31	050-099, 150, 152-199
	5	DK	W1232	304R	18		21-66-31	050-099, 150, 152-199
	6	DK	W1232	304B	18		21-66-31	050-099, 150, 152-199
	7		W1232	138	20		21-66-31	050-099, 150, 152-199
	8		W1232	137	20		21-66-31	050-099, 150, 152-199
	9	DK	W1232	302R	18		21-66-31	050-099, 150, 152-199
	10	DK	W1232	302Y	18		21-66-31	050-099, 150, 152-199
	11	DK	W1232	302B	18		21-66-31	050-099, 150, 152-199
	12	UNUSED						050-099, 150, 152-199
	13	UNUSED						050-099, 150, 152-199
	14	UNUSED						050-099, 150, 152-199
			W1232	304	18		21-66-31	050-099, 150, 152-199
			W1232	304Z			21-66-31	050-099, 150, 152-199
D13924		1445/294/L015		PLUG-				050-099, 150, 152-199
	1	UNUSED						050-099, 150, 152-199
	2	UNUSED						050-099, 150, 152-199
	3	UNUSED						050-099, 150, 152-199
	4	UNUSED						050-099, 150, 152-199
	5	UNUSED						050-099, 150, 152-199
	6	UNUSED						050-099, 150, 152-199
	7	UNUSED						050-099, 150, 152-199
	8	UNUSED						050-099, 150, 152-199
	9	UNUSED						050-099, 150, 152-199
	10	UNUSED						050-099, 150, 152-199
	11	UNUSED						050-099, 150, 152-199
	12	UNUSED						050-099, 150, 152-199
	13	UNUSED						050-099, 150, 152-199
	14	UNUSED						050-099, 150, 152-199
	15	UNUSED						050-099, 150, 152-199
	16	UNUSED						050-099, 150, 152-199
	17	UNUSED						050-099, 150, 152-199
	18	UNUSED						050-099, 150, 152-199
	19	UNUSED						050-099, 150, 152-199
	20	UNUSED						050-099, 150, 152-199
	21		W1232	204R	22		21-66-31	050-099, 150, 152-199
	22		W1232	204B	22		21-66-31	050-099, 150, 152-199
	23		W1232	144	20		21-66-31	050-099, 150, 152-199
	24	UNUSED						050-099, 150, 152-199
	25	UNUSED						050-099, 150, 152-199

HOOKUP LIST

D280T132

91-21-51

Section D13900

Page 9

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D13924		1445/294/L015		PLUG- (continued)				050-099, 150, 152-199
	26	UNUSED						050-099, 150, 152-199
	27	UNUSED						050-099, 150, 152-199
	28	UNUSED						050-099, 150, 152-199
	29	UNUSED						050-099, 150, 152-199
	30	UNUSED						050-099, 150, 152-199
	31	UNUSED						050-099, 150, 152-199
	32	UNUSED						050-099, 150, 152-199
	33	UNUSED						050-099, 150, 152-199
	34	UNUSED						050-099, 150, 152-199
	35	UNUSED						050-099, 150, 152-199
	36	UNUSED						050-099, 150, 152-199
	37	UNUSED						050-099, 150, 152-199
	38	UNUSED						050-099, 150, 152-199
	39	UNUSED						050-099, 150, 152-199
	40	UNUSED						050-099, 150, 152-199
	41	UNUSED						050-099, 150, 152-199
	42	UNUSED						050-099, 150, 152-199
	43	UNUSED						050-099, 150, 152-199
	44	UNUSED						050-099, 150, 152-199
	45	UNUSED						050-099, 150, 152-199
	46	UNUSED						050-099, 150, 152-199
	47	UNUSED						050-099, 150, 152-199
	48	UNUSED						050-099, 150, 152-199
	49	UNUSED						050-099, 150, 152-199
	50	UNUSED						050-099, 150, 152-199
	51	UNUSED						050-099, 150, 152-199
	52	UNUSED						050-099, 150, 152-199
	53	UNUSED						050-099, 150, 152-199
	54	UNUSED						050-099, 150, 152-199
	55	UNUSED						050-099, 150, 152-199
			W1232	204	20		21-66-31	050-099, 150, 152-199
			W1232	204Z			21-66-31	050-099, 150, 152-199
D13926		1445/294/L015		PLUG-				050-099, 150, 152-199
	1	UNUSED						050-099, 150, 152-199
	2	UNUSED						050-099, 150, 152-199
	3		W1232	200B	22		21-66-31	050-099, 150, 152-199
	4		W1232	200R	22		21-66-31	050-099, 150, 152-199
	5		W1232	201B	22		21-66-31	050-099, 150, 152-199
	6		W1232	201R	22		21-66-31	050-099, 150, 152-199

HOOKUP LIST
D280T132

91-21-51
Section D13900
Page 10
Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D13926		1445/294/L015		PLUG- (continued)				050-099, 150, 152-199
	7	UNUSED						050-099, 150, 152-199
	8		W1232	303B	22		21-66-31	050-099, 150, 152-199
	9		W1232	303R	22		21-66-31	050-099, 150, 152-199
	10		W1232	303Y	22		21-66-31	050-099, 150, 152-199
	11	UNUSED						050-099, 150, 152-199
	12	UNUSED						050-099, 150, 152-199
	13		W1232	141	20		21-66-31	050-099, 150, 152-199
	14	UNUSED						050-099, 150, 152-199
	15		W1232	142	22		21-66-31	050-099, 150, 152-199
	16		W1232	142	22		21-66-31	050-099, 150, 152-199
	17	UNUSED						050-099, 150, 152-199
	18		W1232	140	22		21-66-31	050-099, 150, 152-199
	19	UNUSED						050-099, 150, 152-199
	20	UNUSED						050-099, 150, 152-199
	21	UNUSED						050-099, 150, 152-199
	22	UNUSED						050-099, 150, 152-199
	23	UNUSED						050-099, 150, 152-199
	24	UNUSED						050-099, 150, 152-199
	25	UNUSED						050-099, 150, 152-199
	26	UNUSED						050-099, 150, 152-199
	27	UNUSED						050-099, 150, 152-199
	28	UNUSED						050-099, 150, 152-199
	29		W1232	150	22		21-66-31	050-099, 150, 152-199
	30	UNUSED						050-099, 150, 152-199
	31		W1232	139	22		21-66-31	050-099, 150, 152-199
	32		W1232	152	22		21-66-31	050-099, 150, 152-199
	33		W1232	153	22		21-66-31	050-099, 150, 152-199
	34	UNUSED						050-099, 150, 152-199
	35	UNUSED						050-099, 150, 152-199
	36	UNUSED						050-099, 150, 152-199
	37	UNUSED						050-099, 150, 152-199
	38	UNUSED						050-099, 150, 152-199
	39	UNUSED						050-099, 150, 152-199
	40	UNUSED						050-099, 150, 152-199
	41	UNUSED						050-099, 150, 152-199
	42	UNUSED						050-099, 150, 152-199
	43		W1232	151	22		21-66-31	050-099, 150, 152-199
	44	UNUSED						050-099, 150, 152-199
	45	UNUSED						050-099, 150, 152-199
	46	UNUSED						050-099, 150, 152-199

HOOKUP LIST

D280T132

91-21-51

Section D13900

Page 11

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D13926		1445/294/L015		PLUG- (continued)				050-099, 150, 152-199
	47	UNUSED						050-099, 150, 152-199
	48	UNUSED	W1232	151	22		21-66-31	050-099, 150, 152-199
	49	UNUSED						050-099, 150, 152-199
	50	UNUSED						050-099, 150, 152-199
	51	UNUSED						050-099, 150, 152-199
	52	UNUSED						050-099, 150, 152-199
	53	UNUSED						050-099, 150, 152-199
	54	UNUSED						050-099, 150, 152-199
	55	UNUSED						050-099, 150, 152-199
	56	UNUSED						050-099, 150, 152-199
	57	UNUSED						050-099, 150, 152-199
	58	UNUSED						050-099, 150, 152-199
	59	UNUSED						050-099, 150, 152-199
	60	UNUSED	W1232	143	20		21-66-31	050-099, 150, 152-199
	61	UNUSED						050-099, 150, 152-199
D13928		0445/280/R043		RCPT-				164-199
	= 1		W1236	505	20		26-13-12	164-199
D13930		1446/280/R043		PLUG-				164-199
	= 1		W0828	507	20		26-13-12	164-199
D13932		1446/280/L043		PLUG-				164-199
	= 1		W0828	510	20		26-13-12	164-199
D13934		P006-00/ /		RELAY SOCKET-P6				ALL
	A1		W0028	605	24		24-51-31	ALL
	A2		W0028	604	24		24-51-31	ALL
	A3	UNUSED						ALL
	B1		W0028	100	18		24-51-31	ALL
	B2		W0028	603	18		24-51-31	ALL
	B3	UNUSED						ALL
	X1		W0028	606	18		24-51-31	ALL
	X2		W0028	607	18		24-51-31	ALL
D13936		P006-00/ /		RELAY SOCKET-P6				ALL
	A1		W0028	610	24		24-51-31	ALL
	A2		W0028	611	24		24-51-31	ALL
	A3	UNUSED						ALL
	B1	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D13900
Page 12
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D13936		P006-00/ /		RELAY SOCKET-P6 (continued)				ALL
	B2	UNUSED						ALL
	B3	UNUSED						ALL
	X1		W0028	609	22		24-51-31	ALL
	X2		W0028	613	20		24-51-31	ALL
D13940		P037-00/ /		RELAY SOCKET				277-299
	A1	UNUSED						277-299
	A2	UNUSED						277-299
	A3	UNUSED						277-299
	B1	UNUSED						277-299
	B2		W1118	561	20		25-33-11	277-299
	B3		W1118	511	20		25-33-11	277-299
	C1	UNUSED						277-299
	C2	UNUSED						277-299
	C3	UNUSED						277-299
	D1	UNUSED						277-299
	D2	UNUSED						277-278
	D2		W1118	562	20		SPARE	280-299
	D3	UNUSED						277-278
	D3		W1118	563	20		SPARE	280-299
	X1		W1118	106	20		25-33-11	277-299
	X2		W1118	107	22		25-33-11	277-299
D13942		L324/P25/FS		PLUG				ALL
	1		W0406	245R	20		36-11-61	ALL
	2		W0406	245B	20		36-11-61	ALL
	3		W0406	117	20		36-11-61	ALL
	4	UNUSED						ALL
	5	DK	W0406	118	18		36-11-61	ALL
	= CC	L	W0406	245Z			36-11-61	ALL
D13944		R324/P25/FS		PLUG				ALL
	1		W0408	223R	20		36-11-62	ALL
	2		W0408	223B	20		36-11-62	ALL
	3		W0408	118	20		36-11-62	ALL
	4	UNUSED						ALL
	5	DK	W0408	119	18		36-11-62	ALL
	= CC	L	W0408	223Z			36-11-62	ALL

HOOKUP LIST

D280T132

91-21-51

Section D13900

Page 13

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D13950		445/280/R043		PLUG-				164-199
	= 1		W1236	504	20		26-13-12	164-199
D13952		1446/280/R043		RCPT-				164-199
	= 1		W0828	508	20		26-13-12	164-199
D13954		1446/280/L043		RCPT-				164-199
	= 1		W0828	511	20		26-13-12	164-199
D13964		276/278/R001		SOCKET-				050-099, 162-199
	1		W3008	001	20		26-13-12	050-099, 162-199
	2		W3008	002	20		26-13-12	050-099, 162-199
	3		W3008	003	20		21-66-11	050-099, 162-199
	4	UNUSED						050-099, 162-199
	5	UNUSED						050-099, 162-199
	6	UNUSED						050-099, 162-199
	7		W3008	004	20		26-13-12	050-099, 162-199
	8		W3008	005	20		26-13-12	050-099, 162-199
	9	UNUSED						050-099, 162-199
	10	UNUSED						050-099, 162-199
	11		W3008	015	20		21-66-11	050-099, 162-199
	12	UNUSED						050-099, 162-199
	13	UNUSED						050-099, 162-199
	14	UNUSED						050-099, 162-199
	15		W3008	006	20		26-13-12	050-099, 162-199
D13966		336/280/0000		RCPT				164-199
	= 1		W1230	127	20		26-13-12	164-199
D13968		336/280/0000		PLUG				164-199
	= 1		W1230	128	20		26-13-12	164-199

HOOKUP LIST
D280T132

91-21-51
Section D13900
Page 14 End
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D15802J		NR194/150/		RECP-ENGINE(PW4000)				050-099, 155-199, 277-299
D15802J		NR194/150/		RECP-ENGINE				150-154, 275-276
	1		W3504	206R	20		73-21-11	ALL
	2		W3504	206B	20		73-21-11	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	= CC	G7	W3504	206Z			73-21-11	ALL
D15802P		NR190/110/		PLUG-ENGINE				050-099, 155-199, 277-299
D15802P		NR194/110/		PLUG-ENGINE				150-154, 275-276
	1		W3502	227R	20		73-21-11	ALL
	2		W3502	227B	20		73-21-11	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	= CC	G7	W3502	227Z			73-21-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D15800

Page 1 End

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D17072J		P089-00/ /		RECP.				150-154, 275
	1		W0892	017	22		28-31-22	150-154, 275
	2		W0892	009	22		28-31-22	150-154, 275
	3		W0892	018	22		28-31-22	150-154, 275
	4		W0892	016	22		28-31-22	150-154, 275
	5		W0892	014	22		28-31-22	150-154, 275
	6		W0892	024	22		28-31-22	150-154, 275
	7		W0892	030	20		28-31-22	150-154, 275
	8		W0892	029	20		28-31-22	150-154, 275
	9		W0892	025	22		28-31-22	150-154, 275
	10		W0892	036	22		28-31-22	150-154, 275
	11		W0892	043	22		28-31-22	150-154, 275
	12		W0892	042	22		28-31-22	150-154, 275
	13		W0892	041	22		28-31-22	150-154, 275
	14		W0892	039	22		28-31-22	150-154, 275
	15	UNUSED						150-154, 275
	16	UNUSED						150-154, 275
	17	UNUSED						150-154, 275
	18	UNUSED						150-154, 275
	19	UNUSED						150-154, 275
	20	UNUSED						150-154, 275
	21	UNUSED						150-154, 275
	22	UNUSED						150-154, 275
	23	UNUSED						150-154, 275
	24	UNUSED						150-154, 275
	DED		W0892	014Z			28-31-22	150-154, 275
	DED		W0892	025Z			28-31-22	150-154, 275
	DED		W0892	036Z			28-31-22	150-154, 275
D17074J		P089-00/ /		RECP.				150-154, 275
	1		W0892	015	22		28-31-22	150-154, 275
	2		W0892	020	22		28-31-22	150-154, 275
	3		W0892	028	20		28-31-22	150-154, 275
	4		W0892	027	20		28-31-22	150-154, 275
	5		W0892	031	22		28-31-22	150-154, 275
	6	UNUSED						150-154, 275
	7	UNUSED						150-154, 275
	8	UNUSED						150-154, 275
	9	UNUSED						150-154, 275
	10	UNUSED						150-154, 275
	11	UNUSED						150-154, 275

HOOKUP LIST

D280T132

91-21-51

Section D17000

Page 1

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D17074J		P089-00/ /		RECP. (continued)				150-154, 275
	12	UNUSED						150-154, 275
	DED		W0892	015Z			28-31-22	150-154, 275
	DED		W0892	020Z			28-31-22	150-154, 275
	DED		W0892	031Z			28-31-22	150-154, 275
D17076J		P089-00/ /		RECP.				150-154, 275
	1		W0894	017	22		28-31-22	150-154, 275
	2		W0894	009	22		28-31-22	150-154, 275
	3		W0894	015	22		28-31-22	150-154, 275
	4		W0894	018	22		28-31-22	150-154, 275
	5		W0894	016	22		28-31-22	150-154, 275
	6		W0894	014	22		28-31-22	150-154, 275
	7		W0894	013	22		28-31-22	150-154, 275
	8		W0894	021	22		28-31-22	150-154, 275
	9		W0894	024	22		28-31-22	150-154, 275
	10		W0894	030	20		28-31-22	150-154, 275
	11		W0894	029	20		28-31-22	150-154, 275
	12		W0894	028	20		28-31-22	150-154, 275
	13		W0894	027	20		28-31-22	150-154, 275
	14		W0894	031	22		28-31-22	150-154, 275
	15		W0894	025	22		28-31-22	150-154, 275
	16		W0894	036	22		28-31-22	150-154, 275
	17		W0894	043	22		28-31-22	150-154, 275
	18		W0894	042	22		28-31-22	150-154, 275
	19		W0894	047	22		28-31-22	150-154, 275
	20		W0894	046	22		28-31-22	150-154, 275
	21		W0894	045	22		28-31-22	150-154, 275
	22		W0894	044	22		28-31-22	150-154, 275
	23		W0894	041	22		28-31-22	150-154, 275
	24		W0894	039	22		28-31-22	150-154, 275
	25		W0894	054	22		28-31-22	150-154, 275
	26		W0894	053	22		28-31-22	150-154, 275
	27		W0894	052	22		28-31-22	150-154, 275
	28	UNUSED						150-154, 275
	29	UNUSED						150-154, 275
	30	UNUSED						150-154, 275
	31	UNUSED						150-154, 275
	DED		W0894	013Z			28-31-22	150-154, 275
	DED		W0894	014Z			28-31-22	150-154, 275
	DED		W0894	015Z			28-31-22	150-154, 275

HOOKUP LIST

D280T132

91-21-51

Section D17000

Page 2

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D17076J		P089-00/ /		RECP. (continued)				150-154, 275
	DED		W0894	021Z			28-31-22	150-154, 275
	DED		W0894	025Z			28-31-22	150-154, 275
	DED		W0894	031Z			28-31-22	150-154, 275
	DED		W0894	036Z			28-31-22	150-154, 275
D17078J		P089-00/ /		RECP.				150-154, 275
	1		W0894	012	22		28-31-22	150-154, 275
	2		W0894	033	22		28-31-22	150-154, 275
	3		W0894	026	22		28-31-22	150-154, 275
	4		W0894	030	20		28-31-22	150-154, 275
	5		W0894	029	20		28-31-22	150-154, 275
	6		W0894	028	20		28-31-22	150-154, 275
	7		W0894	027	20		28-31-22	150-154, 275
	8	UNUSED						150-154, 275
	9	UNUSED						150-154, 275
	10	UNUSED						150-154, 275
	11	UNUSED						150-154, 275
	12	UNUSED						150-154, 275
	DED		W0894	012Z			28-31-22	150-154, 275
D17080J		P089-00/ /		RECP.				150-154, 275
	1		W0892	012	22		28-31-22	150-154, 275
	2		W0892	030	20		28-31-22	150-154, 275
	3		W0892	029	20		28-31-22	150-154, 275
	4		W0892	028	20		28-31-22	150-154, 275
	5		W0892	027	20		28-31-22	150-154, 275
	6		W0892	026	22		28-31-22	150-154, 275
	7		W0892	033	22		28-31-22	150-154, 275
	8	UNUSED						150-154, 275
	9	UNUSED						150-154, 275
	10	UNUSED						150-154, 275
	11	UNUSED						150-154, 275
	12	UNUSED						150-154, 275
	DED		W0892	012Z			28-31-22	150-154, 275

HOOKUP LIST
D280T132

91-21-51
Section D17000
Page 3 End
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D20032		0741/285/L056		PLUG-				280-299
	1	UNUSED						280-299
	2		W0812	04B	20		33-21-13	280-299
	3		W0812	04C	20		33-21-13	280-299
	4	UNUSED						280-299
	5		W0812	04I	20		33-21-13	280-299
	6	UNUSED						280-299
	7		W0812	04H	20		33-21-13	280-299
	8		W0812	04J	20		33-21-13	280-299
	9		W0812	04F	20		33-21-13	280-299
	10		W0812	04G	20		33-21-13	280-299
	11		W0812	04E	20		33-21-13	280-299
	12		W0812	04D	20		33-21-13	280-299
D20058		954/166/L 29		PLUG-				ALL
	1	UNUSED						ALL
	2		W0460	102	18		28-22-31	ALL
	3		W0460	103	18		28-22-31	ALL
	4		W0460	101	18		28-22-31	ALL
	5		W0460	100	18		28-22-31	ALL
	6	UNUSED						ALL
	7		W0460	104	18		28-22-31	ALL
	DED		W0460	100Z			28-22-31	ALL
	DED		W0460	101Z			28-22-31	ALL
	DED		W0460	102Z			28-22-31	ALL
	DED		W0460	103Z			28-22-31	ALL
	DED		W0460	104Z			28-22-31	ALL
D20090		P036-00/ /		RELAY SOCKET-				ALL
	A1		W0176	65J	24		78-36-11	ALL
	A2		W0176	65R	24		78-36-11	ALL
	A3		W0176	65H	20		78-36-11	ALL
	B1	UNUSED						ALL
	B2	UNUSED						ALL
	B3	UNUSED						ALL
	C1	UNUSED						ALL
	C2	UNUSED						ALL
	C3	UNUSED						ALL
	D1	UNUSED						ALL
	D2	UNUSED						ALL
	D3	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D20000

Page 1

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D20090		P036-00/ /		RELAY SOCKET- (continued)				ALL
	X1		W0176	51P	24		32-09-11	ALL
	X2		W0176	51Q	24		32-09-11	ALL
	DED		W0176	51QZ			32-09-11	050-099, 150-156, 162-199, 275-299
	DED		W0176	51PZ			32-09-11	ALL
D20092		P036-00/ /		RELAY SOCKET-				ALL
	A1		W0176	22R	20		78-34-21	ALL
	A2		W0176	22T	20		78-34-21	ALL
	A3	UNUSED						ALL
	B1		W0176	83M	20		78-36-11	ALL
	B2		W0176	82M	22		78-36-11	ALL
	B3	UNUSED						ALL
	C1		W0176	83P	20		78-36-11	ALL
	C2		W0176	82P	22		78-36-11	ALL
	C3		W0176	83N	22		78-36-11	ALL
	D1	UNUSED						ALL
	D2		W0176	82K	22		78-36-11	ALL
	D3		W0176	82J	22		78-36-11	ALL
	X1		W0176	51U	24		32-09-11	ALL
	X2		W0176	51R	24		32-09-11	ALL
	DED		W0176	51RZ			32-09-11	050-099, 150-156, 162-199, 275-299
	DED		W0176	22RZ			78-34-21	ALL
	DED		W0176	22TZ			78-34-21	ALL
	DED		W0176	51UZ			32-09-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D20000

Page 2 End

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D20100		P037-00/ /		RELAY SOCKET-				ALL
	A1		W0192	69A	20		78-34-11	ALL
	A2		W0192	69B	20		78-34-11	ALL
	A3	UNUSED						ALL
	B1		W0192	85G	20		78-36-21	ALL
	B2		W0192	85P	22		78-36-21	ALL
	B3		W0192	06V	24		78-36-21	ALL
	C1	UNUSED						ALL
	C2	UNUSED						ALL
	C3	UNUSED						ALL
	D1		W0192	85F	20		78-36-21	ALL
	D2		W0192	85N	22		78-36-21	ALL
	D3	UNUSED						ALL
	X1		W0192	68W	24		32-09-12	ALL
	X2		W0192	68X	24		32-09-12	ALL
	DED		W0192	69AZ			78-34-11	ALL
	DED		W0192	69BZ			78-34-11	ALL
D20102		P036-00/ /		RELAY SOCKET-				ALL
	A1		W0176	22C	20		78-34-11	ALL
	A2		W0176	67H	20		78-34-11	ALL
	A3	UNUSED						ALL
	B1		W0176	67J	24		78-34-11	ALL
	B2		W0176	693	22		78-34-11	ALL
	B3		W0176	814	22		78-34-11	ALL
	C1	UNUSED						ALL
	C2		W0176	67K	20		78-34-11	ALL
	C3		W0176	22D	20		78-34-11	ALL
	D1	UNUSED						ALL
	D2	UNUSED						ALL
	D3	UNUSED						ALL
	X1		W0176	67G	22		78-34-11	ALL
	X2		W0176	67D	20		78-34-11	ALL
	DED		W0176	22CZ			78-34-11	ALL
	DED		W0176	22DZ			78-34-11	ALL
	DED		W0176	67GZ			78-34-11	ALL
	DED		W0176	67HZ			78-34-11	ALL
	DED		W0176	67KZ			78-34-11	ALL
D20104		P037-00/ /		RELAY SOCKET-				ALL
	A1		W0192	24V	20		78-34-21	ALL

HOOKUP LIST

D280T132

91-21-51

Section D20100

Page 1

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D20104		P037-00/ /		RELAY SOCKET- (continued)				ALL
	A2		W0192	24R	20		78-34-21	ALL
	A3	UNUSED						ALL
	B1		W0192	24T	24		78-34-21	050-099
	B1		W0192	24T	22		78-34-21	150-199, 275-299
	B2		W0192	011	22		78-34-21	ALL
	B3		W0192	547	22		78-34-21	ALL
	C1	UNUSED						ALL
	C2		W0192	78E	20		78-34-21	ALL
	C3		W0192	78H	20		78-34-21	ALL
	D1	UNUSED						ALL
	D2	UNUSED						ALL
	D3	UNUSED						ALL
	X1		W0192	24Q	22		78-34-21	ALL
	X2		W0192	24P	20		78-34-21	ALL
	DED		W0192	24QZ			78-34-21	ALL
	DED		W0192	24RZ			78-34-21	ALL
	DED		W0192	24VZ			78-34-21	ALL
	DED		W0192	78EZ			78-34-21	ALL
	DED		W0192	78HZ			78-34-21	ALL
D20110		P033/ /		RELAY SOCKET-				ALL
	1		W0140	180	24		78-36-11	ALL
	2		W0140	181	24		78-36-11	ALL
	3		W0140	179	24		78-36-11	ALL
	4	UNUSED						ALL
	5		W0140	177	24		78-36-11	ALL
	6		W0140	182	24		78-36-11	ALL
	7		W0140	183	24		78-36-11	ALL
	8		W0140	178	24		78-36-11	ALL
	DED		W0140	177Z			78-36-11	ALL
	DED		W0140	178Z			78-36-11	ALL
	DED		W0140	179Z			78-36-11	ALL
	DED		W0140	180Z			78-36-11	ALL
	DED		W0140	181Z			78-36-11	ALL
	DED		W0140	182Z			78-36-11	ALL
	DED		W0140	183Z			78-36-11	ALL
D20112		P033/ /		RELAY SOCKET-				ALL
	1		W0136	080	24		78-36-21	ALL
	2		W0136	075	24		78-36-21	ALL

HOOKUP LIST
D280T132

91-21-51
Section D20100
Page 2
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D20112		P033/ /		RELAY SOCKET- (continued)				ALL
	3		W0136	079	24		78-36-21	ALL
	4	UNUSED						ALL
	5		W0136	076	24		78-36-21	ALL
	6		W0136	078	24		78-36-21	ALL
	7		W0136	081	24		78-36-21	ALL
	8		W0136	077	24		78-36-21	ALL
D20118		NL284/134/		PLUG				ALL
	1		W0390	100	18		78-34-11	ALL
	2		W0390	103	18		78-34-11	ALL
	3		W0390	102	18		78-34-11	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	DED		W0390	102Z			78-34-11	ALL
	DED		W0390	103Z			78-34-11	ALL
D20120		NR 284/134/		PLUG				050-099, 150-156, 162-166, 275-276
D20120		NR284/134/		PLUG				157, 167-199, 277-299
	1		W0394	100	18		78-34-21	ALL
	2		W0394	103	18		78-34-21	ALL
	3		W0394	102	18		78-34-21	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	DED		W0394	102Z			78-34-21	ALL
	DED		W0394	103Z			78-34-21	ALL
D20122		NL284/134/		PLUG				ALL
	1		W0390	081	18		78-36-11	ALL
	2		W0390	082	18		78-36-11	ALL
	3		W0390	083	18		78-36-11	ALL
D20126		NR284/134/		PLUG				ALL
	1		W0394	081	18		78-36-21	ALL
	2		W0394	082	18		78-36-21	ALL
	3		W0394	083	18		78-36-21	ALL

HOOKUP LIST

D280T132

91-21-51

Section D20100

Page 3

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D20160		AE0108/ /		RCPT-SWITCH PACK				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W0756	FRT			78-34-11	ALL
	5	DK	W0756	682	18		78-34-11	ALL
	6	UNUSED						ALL
	7		W0756	FRQ			78-34-11	ALL
	8	DK	W0756	681	18		78-34-11	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
			W0756	680	20		78-34-11	ALL
			W0756	681Z			78-34-11	ALL
			W0756	682Z			78-34-11	ALL
			W0756	FRQ			78-34-11	ALL
			W0756	FRT			78-34-11	ALL
D20162		AE0108/ /		RCPT-SWITCH PACK				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W0768	FRR			78-34-21	ALL
	5	DK	W0768	610	18		78-34-21	ALL
	6	UNUSED						ALL
	7		W0768	FRU			78-34-21	ALL
	8	DK	W0768	611	18		78-34-21	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
			W0768	610Z			78-34-21	ALL
			W0768	611Z			78-34-21	ALL
			W0768	612	20		78-34-21	ALL
			W0768	FRR			78-34-21	ALL
			W0768	FRU			78-34-21	ALL
D20164A		E1-4/ /		PLUG PART A OF D20164				ALL
	A01		W0107	091	22		78-36-11	ALL

HOOKUP LIST
D280T132

91-21-51
Section D20100
Page 4
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D20164A		E1-4/ /		PLUG PART A OF D20164 (continued)				ALL
	A02	UNUSED						ALL
	A03	UNUSED						ALL
	A04	UNUSED						ALL
	A05		W0107	081	22		78-36-11	ALL
	A06	UNUSED						ALL
	A07	UNUSED						ALL
	A08	UNUSED						ALL
	A09		W0107	078	22		78-36-11	ALL
	A10	UNUSED						ALL
	A11	UNUSED						ALL
	A12	UNUSED						ALL
	A13		W0107	087	22		78-36-11	ALL
	A14	UNUSED						ALL
	A15	UNUSED						ALL
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04	UNUSED						ALL
	B05	UNUSED						ALL
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13	UNUSED						ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	C01	UNUSED						ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05	UNUSED						ALL
	C06	UNUSED						ALL
	C07	UNUSED						ALL
	C08	UNUSED						ALL
	C09	UNUSED						ALL
	C10	UNUSED						ALL
	C11	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D20100

Page 5

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D20164A		E1-4/ /		PLUG PART A OF D20164 (continued)				ALL
	C12	UNUSED						ALL
	C13	UNUSED						ALL
	C14	UNUSED						ALL
	C15	UNUSED						ALL
	D01	UNUSED						ALL
	D02	UNUSED						ALL
	D03	UNUSED						ALL
	D04	UNUSED						ALL
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	D08	UNUSED						ALL
	D09	UNUSED						ALL
	D10	UNUSED						ALL
	D11	UNUSED						ALL
	D12	UNUSED						ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15	UNUSED						ALL
	E01	UNUSED						ALL
	E02	UNUSED						ALL
	E03	UNUSED						ALL
	E04	UNUSED						ALL
	E05	UNUSED						ALL
	E06	UNUSED						ALL
	E07	UNUSED						ALL
	E08	UNUSED						ALL
	E09	UNUSED						ALL
	E10	UNUSED						ALL
	E11	UNUSED						ALL
	E12	UNUSED						ALL
	E13	UNUSED						ALL
	E14	UNUSED						ALL
	E15	UNUSED						ALL
	F01	UNUSED	W0107	085	22		78-36-11	ALL
	F02	UNUSED						ALL
	F03	UNUSED						ALL
	F04	UNUSED						ALL
	F05	UNUSED	W0107	089	22		78-36-11	ALL
	F06	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D20100
Page 6
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D20164A		E1-4/ /		PLUG PART A OF D20164 (continued)				ALL
	F07	UNUSED						ALL
	F08	UNUSED						ALL
	F09		W0107	088	22		78-36-11	ALL
	F10	UNUSED						ALL
	F11	UNUSED						ALL
	F12	UNUSED						ALL
	F13		W0107	082	22		78-36-11	ALL
	F14	UNUSED						ALL
	F15	UNUSED						ALL
	G01	UNUSED						ALL
	G02	UNUSED						ALL
	G03	UNUSED						ALL
	G04	UNUSED						ALL
	G05	UNUSED						ALL
	G06	UNUSED						ALL
	G07	UNUSED						ALL
	G08	UNUSED						ALL
	G09	UNUSED						ALL
	G10	UNUSED						ALL
	G11	UNUSED						ALL
	G12	UNUSED						ALL
	G13	UNUSED						ALL
	G14	UNUSED						ALL
	G15	UNUSED						ALL
	H01	UNUSED						ALL
	H02	UNUSED						ALL
	H03	UNUSED						ALL
	H04	UNUSED						ALL
	H05	UNUSED						ALL
	H06	UNUSED						ALL
	H07	UNUSED						ALL
	H08	UNUSED						ALL
	H09	UNUSED						ALL
	H10	UNUSED						ALL
	H11	UNUSED						ALL
	H12	UNUSED						ALL
	H13	UNUSED						ALL
	H14	UNUSED						ALL
	H15	UNUSED						ALL
	J01	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D20100

Page 7

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D20164A		E1-4/ /		PLUG PART A OF D20164 (continued)				ALL
	J02	UNUSED						ALL
	J03	UNUSED						ALL
	J04	UNUSED						ALL
	J05	UNUSED						ALL
	J06	UNUSED						ALL
	J07	UNUSED						ALL
	J08	UNUSED						ALL
	J09	UNUSED						ALL
	J10	UNUSED						ALL
	J11	UNUSED						ALL
	J12	UNUSED						ALL
	J13	UNUSED						ALL
	J14	UNUSED						ALL
	J15	UNUSED						ALL
	K01	UNUSED						ALL
	K02	UNUSED						ALL
	K03	UNUSED	W0107	080	22		78-36-11	ALL
	K04	UNUSED						ALL
	K05	UNUSED						ALL
	K06	UNUSED						ALL
	K07	UNUSED	W0107	084	22		78-36-11	ALL
	K08	UNUSED						ALL
	K09	UNUSED						ALL
	K10	UNUSED						ALL
	K11	UNUSED	W0107	083	22		78-36-11	ALL
	K12	UNUSED						ALL
	K13	UNUSED						ALL
	K14	UNUSED						ALL
	K15	UNUSED	W0107	090	22		78-36-11	ALL
D20164B		E1-4/ /		PLUG PART B OF D20164				ALL
	A01	UNUSED						ALL
	A02	UNUSED	W0117	074	22		78-36-21	ALL
	A03	UNUSED						ALL
	A04	UNUSED						ALL
	A05	UNUSED						ALL
	A06	UNUSED	W0117	072	22		78-36-21	ALL
	A07	UNUSED						ALL
	A08	UNUSED						ALL
	A09	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D20100
Page 8
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D20164B		E1-4/ /		PLUG PART B OF D20164 (continued)				ALL
	A10		W0117	070	22		78-36-21	ALL
	A11	UNUSED						ALL
	A12	UNUSED						ALL
	A13	UNUSED						ALL
	A14		W0117	079	22		78-36-21	ALL
	A15	UNUSED						ALL
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04	UNUSED						ALL
	B05	UNUSED						ALL
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13	UNUSED						ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	C01	UNUSED						ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05	UNUSED						ALL
	C06	UNUSED						ALL
	C07	UNUSED						ALL
	C08	UNUSED						ALL
	C09	UNUSED						ALL
	C10	UNUSED						ALL
	C11	UNUSED						ALL
	C12	UNUSED						ALL
	C13	UNUSED						ALL
	C14	UNUSED						ALL
	C15	UNUSED						ALL
	D01	UNUSED						ALL
	D02	UNUSED						ALL
	D03	UNUSED						ALL
	D04	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D20100

Page 9

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D20164B		E1-4/ /		PLUG PART B OF D20164 (continued)				ALL
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	D08	UNUSED						ALL
	D09	UNUSED						ALL
	D10	UNUSED						ALL
	D11	UNUSED						ALL
	D12	UNUSED						ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15	UNUSED						ALL
	E01	UNUSED						ALL
	E02	UNUSED						ALL
	E03	UNUSED						ALL
	E04	UNUSED						ALL
	E05	UNUSED						ALL
	E06	UNUSED						ALL
	E07	UNUSED						ALL
	E08	UNUSED						ALL
	E09	UNUSED						ALL
	E10	UNUSED						ALL
	E11	UNUSED						ALL
	E12	UNUSED						ALL
	E13	UNUSED						ALL
	E14	UNUSED						ALL
	E15	UNUSED						ALL
	F01	UNUSED						ALL
	F02	UNUSED	W0117	076	22		78-36-21	ALL
	F03	UNUSED						ALL
	F04	UNUSED						ALL
	F05	UNUSED						ALL
	F06	UNUSED	W0117	083	22		78-36-21	ALL
	F07	UNUSED						ALL
	F08	UNUSED						ALL
	F09	UNUSED						ALL
	F10	UNUSED	W0117	082	22		78-36-21	ALL
	F11	UNUSED						ALL
	F12	UNUSED						ALL
	F13	UNUSED						ALL
	F14	UNUSED	W0117	073	22		78-36-21	ALL

HOOKUP LIST
D280T132

91-21-51
Section D20100
Page 10
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D20164B		E1-4/ /		PLUG PART B OF D20164 (continued)				ALL
	F15	UNUSED						ALL
	G01	UNUSED						ALL
	G02	UNUSED						ALL
	G03	UNUSED						ALL
	G04	UNUSED						ALL
	G05	UNUSED						ALL
	G06	UNUSED						ALL
	G07	UNUSED						ALL
	G08	UNUSED						ALL
	G09	UNUSED						ALL
	G10	UNUSED						ALL
	G11	UNUSED						ALL
	G12	UNUSED						ALL
	G13	UNUSED						ALL
	G14	UNUSED						ALL
	G15	UNUSED						ALL
	H01	UNUSED						ALL
	H02	UNUSED						ALL
	H03	UNUSED						ALL
	H04	UNUSED						ALL
	H05	UNUSED						ALL
	H06	UNUSED						ALL
	H07	UNUSED						ALL
	H08	UNUSED						ALL
	H09	UNUSED						ALL
	H10	UNUSED						ALL
	H11	UNUSED						ALL
	H12	UNUSED						ALL
	H13	UNUSED						ALL
	H14	UNUSED						ALL
	H15	UNUSED						ALL
	J01	UNUSED						ALL
	J02	UNUSED						ALL
	J03	UNUSED						ALL
	J04	UNUSED						ALL
	J05	UNUSED						ALL
	J06	UNUSED						ALL
	J07	UNUSED						ALL
	J08	UNUSED						ALL
	J09	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D20100

Page 11

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D20164B		E1-4/ /		PLUG PART B OF D20164 (continued)				ALL
	J10	UNUSED						ALL
	J11	UNUSED						ALL
	J12	UNUSED						ALL
	J13	UNUSED						ALL
	J14	UNUSED						ALL
	J15	UNUSED						ALL
	K01	UNUSED						ALL
	K02	UNUSED						ALL
	K03	UNUSED						ALL
	K04	UNUSED	W0117	071	22		78-36-21	ALL
	K05	UNUSED						ALL
	K06	UNUSED						ALL
	K07	UNUSED						ALL
	K08	UNUSED	W0117	077	22		78-36-21	ALL
	K09	UNUSED						ALL
	K10	UNUSED						ALL
	K11	UNUSED						ALL
	K12	UNUSED	W0117	078	22		78-36-21	ALL
	K13	UNUSED						ALL
	K14	UNUSED						ALL
	K15	UNUSED						ALL
D20164C		E1-4/ /		PLUG PART C OF D20164				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	= C12	UNUSED						ALL
	= C13	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D20100

Page 12

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D20178		P033-00/ /		RELAY SOCKET-P33				ALL
	A1		W0136	016	20		78-34-21	ALL
	A2		W0136	024	20		78-34-21	ALL
	A3	UNUSED						ALL
	B1	UNUSED						ALL
	B2		W0136	015	20		78-34-21	ALL
	B3		W0136	066	20		78-34-21	ALL
	C1		W0136	018	20		78-34-21	ALL
	C2	UNUSED						ALL
	C3	UNUSED						ALL
	D1	UNUSED						ALL
	D2	UNUSED						ALL
	D3	UNUSED						ALL
	X1		W0136	019	20		78-34-21	ALL
	X2		W0136	020	20		78-34-21	ALL
	DED		W0136	015Z			78-34-21	ALL
	DED		W0136	019Z			78-34-21	ALL
	DED		W0136	024Z			78-34-21	ALL
			W0136	016Z			78-34-21	ALL
			W0136	066Z			78-34-21	ALL
			W0136	071	20		78-34-21	ALL
D20180		P033-00/ /		RELAY SOCKET-P33				ALL
	A1		W0140	003	20		78-34-11	ALL
	A2		W0140	001	20		78-34-11	ALL
	A3	UNUSED						ALL
	B1	UNUSED						ALL
	B2		W0140	018	20		78-34-11	ALL
	B3		W0140	143	20		78-34-11	ALL
	C1		W0140	004	20		78-34-11	ALL
	C2	UNUSED						ALL
	C3	UNUSED						ALL
	D1	UNUSED						ALL
	D2	UNUSED						ALL
	D3	UNUSED						ALL
	X1		W0140	005	20		78-34-11	ALL
	X2		W0140	006	20		78-34-11	ALL
	DED		W0140	001Z			78-34-11	ALL
	DED		W0140	005Z			78-34-11	ALL
	DED		W0140	018Z			78-34-11	ALL
			W0140	003Z			78-34-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D20100

Page 13

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D20180		P033-00/ /		RELAY SOCKET-P33 (continued)				ALL
			W0140	143Z			78-34-11	ALL
			W0140	173	20		78-34-11	ALL
D20186		P033-00/ /		RELAY SOCKET-P33				ALL
	A1		W0136	042	20		78-34-21	ALL
	A2		W0136	040	20		78-34-21	ALL
	A3		W0136	041	20		78-34-21	ALL
	B1	UNUSED						ALL
	B2		W0136	066	20		78-34-21	ALL
	B3		W0136	068	20		78-34-21	ALL
	X1		W0136	043	20		78-34-21	ALL
	X2		W0136	044	20		78-34-21	ALL
	DED		W0136	043Z			78-34-21	ALL
	DED		W0136	066Z			78-34-21	ALL
			W0136	040Z			78-34-21	ALL
			W0136	068Z			78-34-21	ALL
			W0136	074	20		78-34-21	ALL
			W0136	082	20		78-34-21	ALL
D20188		P033-00/ /		RELAY SOCKET-P33				ALL
	A1		W0140	011	22		78-34-11	ALL
	A2		W0140	013	22		78-34-11	ALL
	A3		W0140	012	20		78-34-11	ALL
	B1	UNUSED						ALL
	B2		W0140	143	20		78-34-11	ALL
	B3		W0140	166	20		78-34-11	ALL
	X1		W0140	015	20		78-34-11	ALL
	X2		W0140	016	20		78-34-11	ALL
	DED		W0140	015Z			78-34-11	ALL
	DED		W0140	143Z			78-34-11	ALL
			W0140	013Z			78-34-11	ALL
			W0140	166Z			78-34-11	ALL
			W0140	175	20		78-34-11	ALL
			W0140	184	20		78-34-11	ALL
D20190		P033-00/ /		RELAY SOCKET-P33				ALL
	A1		W0136	026	20		78-34-21	ALL
	A2		W0136	050	20		78-34-21	ALL
	A3		W0136	046	20		78-34-21	ALL
	B1		W0136	027	20		78-34-21	ALL

HOOKUP LIST

D280T132

91-21-51

Section D20100

Page 14

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D20190		P033-00/ /		RELAY SOCKET-P33 (continued)				ALL
	B2		W0136	052	20		78-34-21	ALL
	B3		W0136	047	20		78-34-21	ALL
	C1		W0136	016	20		78-34-21	ALL
	C2		W0136	070	20		78-34-21	ALL
	C3	UNUSED						ALL
	D1		W0136	068	20		78-34-21	ALL
	D2		W0136	063	20		78-34-21	ALL
	D3		W0136	067	20		78-34-21	ALL
	X1		W0136	045	20		78-34-21	ALL
	X2		W0136	048	20		78-34-21	ALL
	Y1		W0136	063	20		78-34-21	ALL
	Y2		W0136	064	20		78-34-21	ALL
	DED		W0136	016Z			78-34-21	ALL
	DED		W0136	026Z			78-34-21	ALL
	DED		W0136	027Z			78-34-21	ALL
	DED		W0136	045Z			78-34-21	ALL
	DED		W0136	050Z			78-34-21	ALL
	DED		W0136	052Z			78-34-21	ALL
	DED		W0136	068Z			78-34-21	ALL
	DED		W0136	070Z			78-34-21	ALL
D20192		P033-00/ /		RELAY SOCKET-P33				ALL
	A1		W0140	168	20		78-34-11	ALL
	A2		W0140	028	20		78-34-11	ALL
	A3		W0140	023	20		78-34-11	ALL
	B1		W0140	026	20		78-34-11	ALL
	B2		W0140	030	20		78-34-11	ALL
	B3		W0140	025	20		78-34-11	ALL
	C1		W0140	003	20		78-34-11	ALL
	C2		W0140	167	20		78-34-11	ALL
	C3	UNUSED						ALL
	D1		W0140	166	20		78-34-11	ALL
	D2		W0140	053	20		78-34-11	ALL
	D3		W0140	153	20		78-34-11	ALL
	X1		W0140	017	20		78-34-11	ALL
	X2		W0140	027	20		78-34-11	ALL
	Y1		W0140	053	20		78-34-11	ALL
	Y2		W0140	054	20		78-34-11	ALL
	DED		W0140	003Z			78-34-11	ALL
	DED		W0140	017Z			78-34-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D20100

Page 15

Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D20192		P033-00/ /		RELAY SOCKET-P33 (continued)				ALL
	DED		W0140	026Z			78-34-11	ALL
	DED		W0140	028Z			78-34-11	ALL
	DED		W0140	030Z			78-34-11	ALL
	DED		W0140	166Z			78-34-11	ALL
	DED		W0140	167Z			78-34-11	ALL
	DED		W0140	168Z			78-34-11	ALL
D20194		58/0/R012		PLUG-				ALL
	1		W3528	101	18		78-34-11	ALL
	2		W3528	102	18		78-34-11	ALL
	3		W3528	103	18		78-34-11	ALL
			W3528	101Z			78-34-11	ALL
			W3528	102Z			78-34-11	ALL
			W3528	104	18		78-34-11	ALL
D20196		-7/0/L006		PLUG-				ALL
	1		W3526	101	18		78-34-11	ALL
	2		W3526	102	18		78-34-11	ALL
	3		W3526	103	18		78-34-11	ALL
			W3526	101Z			78-34-11	ALL
			W3526	102Z			78-34-11	ALL
			W3526	104	18		78-34-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section D20100
Page 16 End
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D20542		P036-00/ /		RLY SKT				050-099, 150-199
	1		W0176	85P	22		73-21-19	050-099, 150-199
	2	UNUSED						050-099, 150-199
	3	UNUSED						050-099, 150-199
	4	UNUSED						050-099, 150-199
	5	UNUSED						050-099, 150-199
	6		W0176	85T	22		73-21-19	050-099, 150-199
	7	UNUSED						050-099, 150-199
	8	UNUSED						050-099, 150-199
	9	UNUSED						050-099, 150-199
	10	UNUSED						050-099, 150-199
	11	UNUSED						050-099, 150-199
	12		W0176	85R	20		73-21-19	050-099, 150-199
	13		W0176	81P	22		73-21-19	050-099, 150-199
	14	UNUSED						050-099, 150-199
D20544		P037-00/ /		RLY SKT				050-099, 150-199
	1		W0192	88X	22		73-21-19	050-099, 150-199
	2	UNUSED						050-099, 150-199
	3	UNUSED						050-099, 150-199
	4	UNUSED						050-099, 150-199
	5	UNUSED						050-099, 150-199
	6		W0192	89C	22		73-21-19	050-099, 150-199
	7	UNUSED						050-099, 150-199
	8	UNUSED						050-099, 150-199
	9	UNUSED						050-099, 150-199
	10	UNUSED						050-099, 150-199
	11	UNUSED						050-099, 150-199
	12		W0192	88Y	20		73-21-19	050-099, 150-199
	13		W0192	07C	22		73-21-19	050-099, 150-199
	14	UNUSED						050-099, 150-199



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D21190		P037-00/PNL/		RLY SKT				ALL
	A1	UNUSED						ALL
	A2		W0192	5A4	24		27-89-11	ALL
	A3		W0192	5A9	20		27-89-11	ALL
	B1	UNUSED						ALL
	B2		W0192	5A5	24		27-89-11	ALL
	B3		W0192	5B1	20		27-89-11	ALL
	C1	UNUSED						ALL
	C2		W0192	5A6	24		27-89-11	ALL
	C3		W0192	5B2	20		27-89-11	ALL
	D1	UNUSED						ALL
	D2	UNUSED						ALL
	D3	UNUSED						ALL
	X1		W0192	5A1	24		27-89-11	ALL
	X2		W0192	5A8	24		27-89-11	ALL
D21192		P037-00/ /		RELAY SOCKET-				275-299
	A1		W0192	348R	18		21-45-21	275-299
	A2		W0192	347R	18		21-45-21	275-299
	A3	UNUSED						275-299
	B1		W0192	348Y	18		21-45-21	275-299
	B2		W0192	347Y	18		21-45-21	275-299
	B3	UNUSED						275-299
	C1		W0192	348B	18		21-45-21	275-299
	C2		W0192	347B	18		21-45-21	275-299
	C3	UNUSED						275-299
	D1	UNUSED						275-299
	D2	UNUSED						275-299
	D3	UNUSED						275-299
	X1		W0192	32E	24		21-45-21	275-299
	X2		W0192	32F	24		21-45-21	275-299
D21198		0362/288/R041		PLUG-				275-299
	1	UNUSED						275-299
	2		W1228	501	20		21-45-21	275-299
	3	DK	W1228	304R	18		21-45-21	275-299
	4	DK	W1228	304Y	18		21-45-21	275-299
	5	DK	W1228	304B	18		21-45-21	275-299
	6		W1228	185	20		21-45-21	275-299
	7		W1228	192	20		21-45-21	275-299
	8		W1228	188	20		21-45-21	275-299

HOOKUP LIST
D280T132

91-21-51
Section D21100
Page 1
Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D21198		0362/288/R041		PLUG- (continued)				275-299
	9		W1228	189	20		21-45-21	275-299
	10		W1228	305B	20		21-45-21	275-299
	11		W1228	305Y	20		21-45-21	275-299
	12		W1228	305R	20		21-45-21	275-299

HOOKUP LIST
D280T132

91-21-51
Section D21100
Page 2 End
Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D21200		0350/225/R095		PLUG-				275-299
	1		W1228	190	20		21-45-21	275-299
	2		W1228	193	20		21-45-21	275-299
	3		W1228	192	20		21-45-21	275-299
	4	UNUSED						275-299
	5	UNUSED						275-299
	6		W1228	188	20		21-45-21	275-299
	7		W1228	191	20		21-45-21	275-299
	8		W1228	305B	20		21-45-21	275-299
	9		W1228	189	20		21-45-21	275-299
	10		W1228	187	20		21-45-21	275-299
	11	UNUSED						275-299
	12		W1228	185	20		21-45-21	275-299
	13	UNUSED						275-299
	14		W1228	305Y	20		21-45-21	275-299
	15		W1228	305R	20		21-45-21	275-299
D21232		P036-00/ /		RELAY SOCKET-				156-157, 166-199, 277-299
	A1		W0182	128	22		38-32-11	156-157, 166-199, 277-299
	A2		W0182	126	20		38-32-11	156-157, 166-199, 277-299
	A3		W0182	70B	22		38-32-11	156-157, 166-199, 277-299
	B1	UNUSED						156-157, 166-199, 277-299
	B2	UNUSED						156-157, 166-199, 277-299
	B3	UNUSED						156-157, 166-199, 277-299
	X1		W0182	70C	22		38-32-11	156-157, 166-199, 277-299
	X2		W0182	70H	20		38-32-11	156-157, 166-199, 277-299
D21234		P036-00/ /		RELAY SOCKET-				156-157, 166-199, 277-299
	A1	UNUSED						156-157, 166-199, 277-299
	A2	UNUSED						156-157, 166-199, 277-299
	A3	UNUSED						156-157, 166-199, 277-299
	B1		W0182	127	18		38-32-11	156-157, 166-199, 277-299
	B2		W0182	125	18		38-32-11	156-157, 166-199, 277-299
	B3		W0182	70F	18		38-32-11	156-157, 166-199, 277-299
	X1		W0182	129	20		38-32-11	156, 166
	X1		W0182	129	22		38-32-11	157, 167-199, 277-299
	X2		W0182	130	20		38-32-11	156-157, 166-199, 277-299

HOOKUP LIST

D280T132

91-21-51

Section D21200

Page 1 End

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D23138		P033-00/ /		RELAY SOCKET-				ALL
	A1	UNUSED						ALL
	A2		W0144	06P	22		27-62-11	ALL
	A3		W0144	06Q	22		27-62-11	ALL
	B1	UNUSED						ALL
	B2	UNUSED						ALL
	B3	UNUSED						ALL
	C1	UNUSED						ALL
	C2		W0144	224	24		32-09-13	ALL
	C3		W0144	076	24		32-09-13	ALL
	D1	UNUSED						ALL
	D2	UNUSED						ALL
	D3	UNUSED						ALL
	X1		W0142	26R	22		27-62-11	ALL
	X2		W0142	26T	22		27-62-11	ALL
D23140		WHEEL/07/R GR		PLUG-				050-099, 151, 155-199, 275-299
D23140		WHEEL/07/R GR		PLUG				150, 152-154
	A		W0688	301B	20		27-62-11	ALL
	B		W0688	301Y	20		27-62-11	ALL
	C		W0688	301R	20		27-62-11	ALL

HOOKUP LIST
D280T132

91-21-51
Section D23100
Page 1 End
Mar 14/2007



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D30003		0240/242/L017		PLUG				050-099, 150-163, 166-199, 275-299
	=1		W2214	A-D			52-51-11	050-099, 150-163, 166-199, 275-299
D30009		0240/242/L017		RCPT				050-099, 150-163, 166-199, 275-299
	=1		W2214	A-G			52-51-11	050-099, 150-163, 166-199, 275-299
D30011		0240/242/L017		RCPT				050-099, 150-163, 166-199, 275-299
	=1		W2214	A-H			52-51-11	050-099, 150-163, 166-199, 275-299
D30013		0240/242/L017		PLUG				050-099, 150-163, 166-199, 275-299
	=1		W2214	013	20		52-51-11	050-099, 150-163, 166-199, 275-299

HOOKUP LIST

D280T132

91-21-51

Section D30000

Page 1 End

Mar 14/2007



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D31184		P037-00/ /		RELAY SOCKET-P37				ALL
	1	UNUSED						ALL
	2		W0192	79V	24		28-42-12	ALL
	3		W0192	79G	24		28-42-12	ALL
	4	UNUSED						ALL
	5		W0192	79Q	24		28-42-12	ALL
	6	UNUSED						ALL
	7		W0192	79X	24		28-22-12	ALL
	8	UNUSED						ALL
D31186		P037-00/ /		RELAY SOCKET-P37				ALL
	1	UNUSED						ALL
	2		W0192	79B	24		28-42-12	ALL
	3		W0192	79Q	24		28-42-12	ALL
	4		W0192	79H	24		28-22-12	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W0192	79J	24		28-22-12	ALL
	8	UNUSED						ALL



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D72026		1467/304/L037		PLUG-				ALL
	1	DK	W1232	305R	18		21-45-24	ALL
	2	DK	W1232	305B	18		21-45-24	ALL
	3	DK	W1232	504	18		21-45-24	ALL
	4	DK	W1232	305Y	18		21-45-24	ALL
	5	UNUSED						ALL
	DED		W1232	305Z			21-45-24	ALL
	DED		W1232	306Z			21-45-24	150-199, 275-277
D72028		1464/304/R037		PLUG-				ALL
	1	DK	W1232	306R	18		21-45-24	ALL
	2	DK	W1232	306B	18		21-45-24	ALL
	3	DK	W1232	509	18		21-45-24	ALL
	4	DK	W1232	306Y	18		21-45-24	ALL
	5	UNUSED						ALL
	DED		W1232	306Z			21-45-24	050-099, 278-299
D72030		1467/306/L029		PLUG-				ALL
	1		W1232	510	20		21-45-24	ALL
	2		W1232	511	20		21-45-24	ALL
	3		W1232	512	20		21-45-24	ALL
	4		W1232	513	20		21-45-24	ALL
	5	UNUSED						ALL
D72032		1464/306/L029		PLUG-				050-099, 150-199, 275-277
D72032		1464/306/R029		PLUG-				278-299
	1		W1232	514	20		21-45-24	ALL
	2		W1232	515	20		21-45-24	ALL
	3		W1232	516	20		21-45-24	ALL
	4		W1232	517	20		21-45-24	ALL
	5	UNUSED						ALL
D72034		P087-00/ /		RELAY SOCKET				278-299
	A1	UNUSED						278-299
	A2	UNUSED						278-299
	A3	UNUSED						278-299
	B1	UNUSED						278-299
	B2	UNUSED						278-299
	B3	UNUSED						278-299
	C1		W2112	202R	18		21-45-24	278-299
	C2		W2112	201R	18		21-45-24	278-299

HOOKUP LIST

D280T132

91-21-51

Section D72000

Page 1

Feb 06/2009



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D72034		P087-00/ /		RELAY SOCKET (continued)				278-299
	C3	UNUSED						278-299
	D1		W2112	202B	18		21-45-24	278-299
	D2		W2112	201B	18		21-45-24	278-299
	D3	UNUSED						278-299
	X1		W2112	016	24		21-45-24	278-299
	X2		W2112	017	24		21-45-24	278-299
	REF		W2112	013	20		21-45-24	278-299
	REF		W2112	201Z			21-45-24	278-299
	REF		W2112	202Z			21-45-24	278-299
D72042		P025-00/ /		RELAY SOCKET-				280-299
	A1	UNUSED						280-299
	A2	UNUSED						280-299
	A3	UNUSED						280-299
	B1		W1064	652	22		33-22-42	280-299
	B2		W1064	653	22		33-22-42	280-299
	B3		W1064	654	22		33-22-42	280-299
	X1		W1064	655	22		33-22-42	280-299
	X2		W1064	656	22		33-22-42	280-299
D72046		654+104/281/L019		PLUG-				280-299
	1		W0814	01C	20		SPARE	280-299
	2		W0814	01D	20		SPARE	280-299
	3		W0814	01E	20		SPARE	280-299
	4		W0814	01F	20		SPARE	280-299
	5		W0814	01G	20		SPARE	280-299
	6		W0814	01H	20		SPARE	280-299
	7	UNUSED						280-299
	8	UNUSED						280-299
	9	UNUSED						280-299
	10	UNUSED						280-299
	11	UNUSED						280-299
	12	UNUSED						280-299
D72048		654+28/280/R064		PLUG-				280-299
	1		W0814	01L	20		SPARE	280-299
	2		W0814	01M	20		SPARE	280-299
	3	UNUSED						280-299
	4	UNUSED						280-299
	5	UNUSED						280-299

HOOKUP LIST

D280T132

91-21-51

Section D72000

Page 2

Feb 06/2009



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D72056		0654+050/295/L020		PLUG-				280-299
	1	UNUSED						280-299
	2		W3014	001	20		33-21-11	280-299
	3		W3014	002	20		33-21-11	280-299
	4	UNUSED						280-299
	5		W3014	003	20		33-21-11	280-299
	6	UNUSED						280-299
	7		W3014	004	20		33-21-11	280-299
	8		W3014	036	20		33-21-11	280-299
	9		W3014	006	20		33-21-11	280-299
	10		W3014	007	20		33-21-11	280-299
	11		W3014	008	20		33-21-11	280-299
	12		W3014	009	20		33-21-11	280-299
D72058		0734/295/L020		PLUG-				280-299
	1	UNUSED						280-299
	2		W3016	001	20		33-21-11	280-299
	3		W3016	002	20		33-21-11	280-299
	4	UNUSED						280-299
	5		W3016	003	20		33-21-11	280-299
	6	UNUSED						280-299
	7		W3016	004	20		33-21-11	280-299
	8		W3016	016	20		33-21-11	280-299
	9		W3016	006	20		33-21-11	280-299
	10		W3016	007	20		33-21-11	280-299
	11		W3016	008	20		33-21-11	280-299
	12		W3016	009	20		33-21-11	280-299
D72060		1043/193/R029		PLUG-				157, 167-199, 275-299
	1		W0778	012	20		27-81-31	157, 167-199, 275-299
	2		W0778	013	20		27-81-31	157, 167-199, 275-299
	3		W0778	011	20		27-81-31	157, 167-199, 275-299

HOOKUP LIST
D280T132

91-21-51
Section D72000
Page 3 End
Feb 06/2009



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D90001		NR119/132/		PLUG-PW4000 VENDOR# W1P6 (M/W M7198-J6)				ALL
	A	UNUSED						ALL
	B	UNUSED						ALL
	C	UNUSED						ALL
	D	UNUSED						ALL
	E	UNUSED						ALL
	F	UNUSED						ALL
	G	UNUSED						ALL
	H	UNUSED						ALL
	J	UNUSED						ALL
	K	UNUSED						ALL
	L	UNUSED						ALL
	M	UNUSED						ALL
	N	UNUSED						ALL
	P	UNUSED						ALL
	R	UNUSED						ALL
	S	UNUSED						ALL
	T	UNUSED						ALL
	U	UNUSED						ALL
	V	UNUSED						ALL
	W	UNUSED						ALL
	X	UNUSED						ALL
	Y	UNUSED						ALL
	Z	UNUSED						ALL
	A-	UNUSED						ALL
	B-	UNUSED						ALL
	C-	UNUSED						ALL
	D-	UNUSED						ALL
	E-	UNUSED						ALL
	F-	UNUSED						ALL
	G-	UNUSED						ALL
	H-	UNUSED						ALL
	I-	UNUSED						ALL
	J-	UNUSED						ALL
	K-	UNUSED						ALL
	M-	UNUSED						ALL
	N-	UNUSED						ALL
	P-	UNUSED						ALL
	Q-	UNUSED						ALL
	R-	UNUSED						ALL
	S-	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D90000

Page 1

Feb 06/2009



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D90001		NR119/132/		PLUG-PW4000 VENDOR# W1P6 (M/W M7198-J6) (continued)				ALL
	T-	UNUSED						ALL
D90002		NR119/132/		PLUG-PW4000 VENDOR# W1P7 (M/W M7198-J7)				ALL
	A	UNUSED						ALL
	B	UNUSED						ALL
	C	UNUSED						ALL
	D	UNUSED						ALL
	E	UNUSED						ALL
	F	UNUSED						ALL
	G	UNUSED						ALL
	H	UNUSED						ALL
	J	UNUSED						ALL
	K	UNUSED						ALL
	L	UNUSED						ALL
	M	UNUSED						ALL
	N	UNUSED						ALL
	P	UNUSED						ALL
	R	UNUSED						ALL
	S	UNUSED						ALL
	T	UNUSED						ALL
	U	UNUSED						ALL
	V	UNUSED						ALL
	W	UNUSED						ALL
	X	UNUSED						ALL
	Y	UNUSED						ALL
	Z	UNUSED						ALL
	A-	UNUSED						ALL
	B-	UNUSED						ALL
	C-	UNUSED						ALL
	D-	UNUSED						ALL
	E-	UNUSED						ALL
	F-	UNUSED						ALL
	G-	UNUSED						ALL
	H-	UNUSED						ALL
	I-	UNUSED						ALL
	J-	UNUSED						ALL
	K-	UNUSED						ALL
	M-	UNUSED						ALL
	N-	UNUSED						ALL
	P-	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D90000
Page 2
Feb 06/2009



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D90002		NR119/132/		PLUG-PW4000 VENDOR# W1P7 (M/W M7198-J7) (continued)				ALL
	Q-	UNUSED						ALL
	R-	UNUSED						ALL
	S-	UNUSED						ALL
	T-	UNUSED						ALL
D90004		//		PLUG-PW4000 VENDOR# W2P2 (M/W M7198-J2)				ALL
	A	UNUSED						ALL
	B	UNUSED						ALL
	C	UNUSED						ALL
	D	UNUSED						ALL
	E	UNUSED						ALL
	F	UNUSED						ALL
	G	UNUSED						ALL
	H	UNUSED						ALL
	J	UNUSED						ALL
	K	UNUSED						ALL
	L	UNUSED						ALL
	M	UNUSED						ALL
	N	UNUSED						ALL
	P	UNUSED						ALL
	R	UNUSED						ALL
	S	UNUSED						ALL
	T	UNUSED						ALL
	U	UNUSED						ALL
	V	UNUSED						ALL
	W	UNUSED						ALL
	X	UNUSED						ALL
	Y	UNUSED						ALL
	Z	UNUSED						ALL
	A-	UNUSED						ALL
	B-	UNUSED						ALL
	C-	UNUSED						ALL
	D-	UNUSED						ALL
	E-	UNUSED						ALL
	F-	UNUSED						ALL
	G-	UNUSED						ALL
	H-	UNUSED						ALL
	I-	UNUSED						ALL
	J-	UNUSED						ALL
	K-	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D90000

Page 3

Feb 06/2009



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D90004		//		PLUG-PW4000 VENDOR# W2P2 (M/W M7198-J2) (continued)				ALL
	M-	UNUSED						ALL
	N-	UNUSED						ALL
	P-	UNUSED						ALL
	Q-	UNUSED						ALL
	R-	UNUSED						ALL
	S-	UNUSED						ALL
	T-	UNUSED						ALL
D90005		NR119/132/		PLUG-PW4000 VENDOR# W2P3 (M/W M7198-J3)				ALL
	A	UNUSED						ALL
	B	UNUSED						ALL
	C	UNUSED						ALL
	D	UNUSED						ALL
	E	UNUSED						ALL
	F	UNUSED						ALL
	G	UNUSED						ALL
	H	UNUSED						ALL
	J	UNUSED						ALL
	K	UNUSED						ALL
	L	UNUSED						ALL
	M	UNUSED						ALL
	N	UNUSED						ALL
	P	UNUSED						ALL
	R	UNUSED						ALL
	S	UNUSED						ALL
	T	UNUSED						ALL
	U	UNUSED						ALL
	V	UNUSED						ALL
	W	UNUSED						ALL
	X	UNUSED						ALL
	Y	UNUSED						ALL
	Z	UNUSED						ALL
	A-	UNUSED						ALL
	B-	UNUSED						ALL
	C-	UNUSED						ALL
	D-	UNUSED						ALL
	E-	UNUSED						ALL
	F-	UNUSED						ALL
	G-	UNUSED						ALL
	H-	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D90000

Page 4

Feb 06/2009



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D90005		NR119/132/		PLUG-PW4000 VENDOR# W2P3 (M/W M7198-J3) (continued)				ALL
	I-	UNUSED						ALL
	J-	UNUSED						ALL
	K-	UNUSED						ALL
	M-	UNUSED						ALL
	N-	UNUSED						ALL
	P-	UNUSED						ALL
	Q-	UNUSED						ALL
	R-	UNUSED						ALL
	S-	UNUSED						ALL
	T-	UNUSED						ALL
D90011		NR190/110/		PLUG-PW4000 VENDOR# W1P10 (M/W V355)				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
D90012		//		PLUG-PW4000 VENDOR# W1P11 (M/W V355)				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
D90013		N134/112/L024		PLUG-PW4000 VENDOR# W1P12 (M/W V354)				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
D90018		N150/090/L018		PLUG-PW4000 VENDOR# W5P5 (M/W V358)				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D90000

Page 5

Feb 06/2009



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D90026		N134/122/R013		PLUG-PW4000 VENDOR# W4P4 (M/W V356)				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
D90027		N134/122/R013		PLUG-PW4000 VENDOR# W5P11 (M/W V356)				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
D90030		N130/076/		PLUG-PW4000 VENDOR# W4P19 (M/W T688)				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
D90032		N130/076/		PLUG-PW4000 VENDOR# W4P23 (M/W T688)				ALL
	A	UNUSED						ALL
	B	UNUSED						ALL
	C	UNUSED						ALL
D90038		NR190/110/		PLUG-PW4000 VENDOR (M/W M6848 J4)				ALL
	A	UNUSED						ALL
	B	UNUSED						ALL
	C	UNUSED						ALL
	D	UNUSED						ALL
	E	UNUSED						ALL
	F	UNUSED						ALL
	G	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D90000

Page 6

Feb 06/2009



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D90038		NR190/110/		PLUG-PW4000 VENDOR (M/W M6848 J4) (continued)				ALL
	H	UNUSED						ALL
	J	UNUSED						ALL
	K	UNUSED						ALL
	L	UNUSED						ALL
	M	UNUSED						ALL
	N	UNUSED						ALL
	P	UNUSED						ALL
	R	UNUSED						ALL
	S	UNUSED						ALL
	T	UNUSED						ALL
	U	UNUSED						ALL
	V	UNUSED						ALL
	W	UNUSED						ALL
	X	UNUSED						ALL
	Y	UNUSED						ALL
	Z	UNUSED						ALL
	A-	UNUSED						ALL
	B-	UNUSED						ALL
	C-	UNUSED						ALL
	D-	UNUSED						ALL
	E-	UNUSED						ALL
	F-	UNUSED						ALL
	G-	UNUSED						ALL
	H-	UNUSED						ALL
	I-	UNUSED						ALL
	J-	UNUSED						ALL
	K-	UNUSED						ALL
	M-	UNUSED						ALL
	N-	UNUSED						ALL
	P-	UNUSED						ALL
	Q-	UNUSED						ALL
	R-	UNUSED						ALL
	S-	UNUSED						ALL
	T-	UNUSED						ALL
D90040		NL126/100/		PLUG-PW4000 VENDOR (M/W D8338J)				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D90000

Page 7

Feb 06/2009



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D90040		NL126/100/		PLUG-PW4000 VENDOR (M/W D8338J) (continued)				ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
D90041		NL126/100/		PLUG-PW4000 VENDOR (M/W D83432J)				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
D90042		NL126/100/		PLUG-PW4000 VENDOR (M/W D8340J)				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
D90043		NL126/100/		PLUG-PW4000 VENDOR (M/W D8344J)				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
D90051J		//		RCPT-PW4000 VENDOR# W2J9 (M/W W1P9)				ALL
	A	UNUSED						ALL
	B	UNUSED						ALL
	C	UNUSED						ALL
	D	UNUSED						ALL
	E	UNUSED						ALL
	F	UNUSED						ALL
	G	UNUSED						ALL
	H	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D90000
Page 8
Feb 06/2009



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D90051J		//		RCPT-PW4000 VENDOR# W2J9 (M/W W1P9) (continued)				ALL
	J	UNUSED						ALL
	K	UNUSED						ALL
	L	UNUSED						ALL
	M	UNUSED						ALL
	N	UNUSED						ALL
	P	UNUSED						ALL
	R	UNUSED						ALL
	S	UNUSED						ALL
	T	UNUSED						ALL
	U	UNUSED						ALL
	V	UNUSED						ALL
	W	UNUSED						ALL
	X	UNUSED						ALL
	Y	UNUSED						ALL
	Z	UNUSED						ALL
	A-	UNUSED						ALL
	B-	UNUSED						ALL
	C-	UNUSED						ALL
	D-	UNUSED						ALL
	E-	UNUSED						ALL
	F-	UNUSED						ALL
	G-	UNUSED						ALL
	H-	UNUSED						ALL
	I-	UNUSED						ALL
	J-	UNUSED						ALL
	K-	UNUSED						ALL
	M-	UNUSED						ALL
	N-	UNUSED						ALL
	P-	UNUSED						ALL
	Q-	UNUSED						ALL
	R-	UNUSED						ALL
	S-	UNUSED						ALL
	T-	UNUSED						ALL
D90052P		NR095/150/		PLUG-PW4000 VENDOR# W1P13 (M/W D8328J)				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL

HOOKUP LIST

D280T132

91-21-51

Section D90000

Page 9

Feb 06/2009



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D90057P		NR095/150/		PLUG-PW4000 VENDOR# W2P13 (M/W D8332J)				ALL
D90057P		NR095/150/		PLUG-PW4000 VENDOR# W2-13 (M/W D8332J)				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
D90061J		//		RCPT-PW4000 VENDOR# W5J12 (M/W W6P12)				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
D90061P		//		PLUG-PW4000 VENDOR# W6P12 (M/W W5J12)				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL

HOOKUP LIST
D280T132

91-21-51
Section D90000
Page 10 End
Feb 06/2009



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D96101J		AC1102/ /		RCPT-E9-1				150, 153-199
	1	UNUSED						150, 153-199
	2	UNUSED						150, 153-199
	3	UNUSED						150, 153-199
	4	UNUSED						150, 153-199
	5	UNUSED						150, 153-199
	6	UNUSED						150, 153-199
	7	UNUSED						150, 153-199
	8	UNUSED						150, 153-199
	9	UNUSED						150, 153-199
	10	UNUSED						150, 153-199
	11	UNUSED						150, 153-199
	12	UNUSED						150, 153-199
	13		W9013	925	22		23-25-13	150, 153-199
	14		W9013	926	22		23-25-13	150, 153-199
	15		W9013	927	22		23-25-13	150, 153-199
	16		W9013	928	22		23-25-13	150, 153-199
	17		W9013	929	22		23-25-13	150, 153-199
	18		W9013	930	22		23-25-13	150, 153-199
	19		W9013	931	22		23-25-13	150, 153-199
	20		W9013	932	22		23-25-13	150, 153-199
	21		W9013	933	22		23-25-13	150, 153-199
	22		W9013	934R	22		23-25-13	150, 153-199
	23		W9013	934B	22		23-25-13	150, 153-199
	24		W9013	936R	22		23-25-13	150, 153-199
	25		W9013	936B	22		23-25-13	150, 153-199
	26		W9013	938	20		23-25-13	150, 153-199
	27		W9013	939	20		23-25-13	150, 153-199
	28		W9013	940	20		23-25-13	150, 153-199
	29		W9013	FRW			23-25-13	150, 153-199
	30	UNUSED						150, 153-199
	31	UNUSED						150, 153-199
	32	UNUSED						150, 153-199
	33	UNUSED						150, 153-199
	34	UNUSED						150, 153-199
	35	UNUSED						150, 153-199
	36	UNUSED						150, 153-199
	37	UNUSED						150, 153-199
	38	UNUSED						150, 153-199
	39	UNUSED						150, 153-199
	40	UNUSED						150, 153-199

HOOKUP LIST

D280T132

91-21-51

Section D96100

Page 1

Mar 07/2008



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D96101J		AC1102/ /		RCPT-E9-1 (continued)				150, 153-199
	41	UNUSED						150, 153-199
	42	UNUSED						150, 153-199
	43	UNUSED						150, 153-199
	44	UNUSED						150, 153-199
	45	UNUSED						150, 153-199
	46	UNUSED						150, 153-199
	47	UNUSED						150, 153-199
	48	UNUSED						150, 153-199
	49	UNUSED						150, 153-199
	50	UNUSED						150, 153-199
	51	UNUSED						150, 153-199
	52	UNUSED						150, 153-199
	53	UNUSED						150, 153-199
	54	UNUSED						150, 153-199
	= C27	UNUSED						150, 153-199
	REF		W9013	934Z			23-25-13	150, 153-199
	REF		W9013	936Z			23-25-13	150, 153-199
	REF		W9013	FRW			23-25-13	150, 153-199
D96101P		AC1102/ /		PLUG-E9-1				150, 153-199
	1		W9026	910	22		23-25-13	150, 153-155, 162-165
	1		W0091	910	22		23-25-13	156-157, 166-199
	2		W9026	911	22		23-25-13	150, 153-155, 162-165
	2		W0091	911	22		23-25-13	156-157, 166-199
	3		W9026	912	22		23-25-13	150, 153-155, 162-165
	3		W0091	912	22		23-25-13	156-157, 166-199
	4		W9026	913	22		23-25-13	150, 153-155, 162-165
	4		W0091	913	22		23-25-13	156-157, 166-199
	5		W9026	914	22		23-25-13	150, 153-155, 162-165
	5		W0091	914	22		23-25-13	156-157, 166-199
	6		W9026	915	22		23-25-13	150, 153-155, 162-165
	6		W0091	915	22		23-25-13	156-157, 166-199
	7		W9026	916	22		23-25-13	150, 153-155, 162-165
	7		W0091	916	22		23-25-13	156-157, 166-199
	8		W9026	917	22		23-25-13	150, 153-155, 162-165
	8		W0091	917	22		23-25-13	156-157, 166-199
	9		W9026	918	22		23-25-13	150, 153-155, 162-165
	9		W0091	918	22		23-25-13	156-157, 166-199
	10		W9026	919	22		23-25-13	150, 153-155, 162-165
	10		W0091	919	22		23-25-13	156-157, 166-199

HOOKUP LIST
D280T132

91-21-51
Section D96100
Page 2
Mar 07/2008



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D96101P		AC1102/ /		PLUG-E9-1 (continued)				150, 153-199
	11		W9026	920	20		23-25-13	150, 153-155, 162-165
	11		W0091	920	20		23-25-13	156-157, 166-199
	12		W9026	921	20		23-25-13	150, 153-155, 162-165
	12		W0091	921	20		23-25-13	156-157, 166-199
	13		W9026	925	22		23-25-13	150, 153-155, 162-165
	13		W0091	925	22		23-25-13	156-157, 166-199
	14		W9026	926	22		23-25-13	150, 153-155, 162-165
	14		W0091	926	22		23-25-13	156-157, 166-199
	15		W9026	927	22		23-25-13	150, 153-155, 162-165
	15		W0091	927	22		23-25-13	156-157, 166-199
	16		W9026	928	22		23-25-13	150, 153-155, 162-165
	16		W0091	928	22		23-25-13	156-157, 166-199
	17		W9026	929	22		23-25-13	150, 153-155, 162-165
	17		W0091	929	22		23-25-13	156-157, 166-199
	18		W9026	930	22		23-25-13	150, 153-155, 162-165
	18		W0091	930	22		23-25-13	156-157, 166-199
	19		W9026	931	22		23-25-13	150, 153-155, 162-165
	19		W0091	931	22		23-25-13	156-157, 166-199
	20		W9026	932	22		23-25-13	150, 153-155, 162-165
	20		W0091	932	22		23-25-13	156-157, 166-199
	21		W9026	933	22		23-25-13	150, 153-155, 162-165
	21		W0091	933	22		23-25-13	156-157, 166-199
	22		W9026	934R	22		23-25-13	150, 153-155, 162-165
	22		W0091	934R	22		23-25-13	156-157, 166-199
	23		W9026	934B	22		23-25-13	150, 153-155, 162-165
	23		W0091	934B	22		23-25-13	156-157, 166-199
	24		W9026	936R	22		23-25-13	150, 153-155, 162-165
	24		W0091	936R	22		23-25-13	156-157, 166-199
	25		W9026	936B	22		23-25-13	150, 153-155, 162-165
	25		W0091	936B	22		23-25-13	156-157, 166-199
	26		W9026	938	20		23-25-13	150, 153-155, 162-165
	26		W0091	938	20		23-25-13	156-157, 166-199
	27		W9026	939	20		23-25-13	150, 153-155, 162-165
	27		W0091	939	20		23-25-13	156-157, 166-199
	28		W9026	940	20		23-25-13	150, 153-155, 162-165
	28		W0091	940	20		23-25-13	156-157, 166-199
	29		W9026	FRD			23-25-13	150, 153-155, 162-165
	29		W0091	FRB			23-25-13	156-157, 166-199
	30	UNUSED						150, 153-199
	31	UNUSED						150, 153-199

HOOKUP LIST

D280T132

91-21-51

Section D96100

Page 3

Mar 07/2008



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D96101P		AC1102/ /		PLUG-E9-1 (continued)				150, 153-199
	32	UNUSED						150, 153-199
	33	UNUSED						150, 153-199
	34	UNUSED						150, 153-199
	35	UNUSED						150, 153-199
	36	UNUSED						150, 153-199
	37	UNUSED						150, 153-199
	38	UNUSED						150, 153-199
	39	UNUSED						150, 153-199
	40	UNUSED						150, 153-199
	41	UNUSED						150, 153-199
	42	UNUSED						150, 153-199
	43	UNUSED						150, 153-199
	44	UNUSED						150, 153-199
	45	UNUSED						150, 153-199
	46	UNUSED						150, 153-199
	47	UNUSED						150, 153-199
	48	UNUSED						150, 153-199
	49	UNUSED						150, 153-199
	50	UNUSED						150, 153-199
	51	UNUSED						150, 153-199
	52	UNUSED						150, 153-199
	53	UNUSED						150, 153-199
	54	UNUSED						150, 153-199
	= C27	UNUSED						150, 153-199
			W9026	934Z			23-25-13	150, 153-155, 162-165
			W9026	936Z			23-25-13	150, 153-155, 162-165
			W9026	FRD			23-25-13	150, 153-155, 162-165
			W0091	934Z			23-25-13	156-157, 166-199
			W0091	936Z			23-25-13	156-157, 166-199
			W0091	FRB			23-25-13	156-157, 166-199
D96102P		AF0204/ /		PLUG				150, 153-199
	= A1	UNUSED						150, 153-199
	= C1	UNUSED						150, 153-199
	A		W9013	932	22		23-25-13	150, 153-199
	B	UNUSED						150, 153-199
	C		W9013	931	22		23-25-13	150, 153-199
	D	UNUSED						150, 153-199
	E		W9013	930	22		23-25-13	150, 153-199
	F	UNUSED						150, 153-199

HOOKUP LIST

D280T132

91-21-51
 Section D96100
 Page 4
 Mar 07/2008



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D96102P		AF0204/ /		PLUG (continued)				150, 153-199
	G		W9013	928	22		23-25-13	150, 153-199
	H		W9013	929	22		23-25-13	150, 153-199
	I	UNUSED						150, 153-199
	J		W9013	926	22		23-25-13	150, 153-199
	K		W9013	927	22		23-25-13	150, 153-199
	L		W9013	933	22		23-25-13	150, 153-199
	M		W9013	925	22		23-25-13	150, 153-199
	N	UNUSED						150, 153-199
	O	UNUSED						150, 153-199
	P	UNUSED						150, 153-199
	Q	UNUSED						150, 153-199
	R	UNUSED						150, 153-199
	S	UNUSED						150, 153-199
	T		W9013	936B	22		23-25-13	150, 153-199
	U		W9013	936R	22		23-25-13	150, 153-199
	V		W9013	934B	22		23-25-13	150, 153-199
	W		W9013	934R	22		23-25-13	150, 153-199
	X		W9013	FRX			23-25-13	150, 153-199
	Y	UNUSED						150, 153-199
	Z	UNUSED						150, 153-199
	REF		W9013	934Z			23-25-13	150, 153-199
	REF		W9013	936Z			23-25-13	150, 153-199
	REF		W9013	FRX			23-25-13	150, 153-199
	A-		W9013	939	20		23-25-13	150, 153-199
	B-		W9013	940	20		23-25-13	150, 153-199
	C-		W9013	938	20		23-25-13	150, 153-199
	D-	UNUSED						150, 153-199
	E-	UNUSED						150, 153-199
	F-	UNUSED						150, 153-199
	G-	UNUSED						150, 153-199
	H-	UNUSED						150, 153-199
	I-	UNUSED						150, 153-199
	J-	UNUSED						150, 153-199
	K-	UNUSED						150, 153-199
	L-	UNUSED						150, 153-199
	M-	UNUSED						150, 153-199
	N-	UNUSED						150, 153-199
	O-	UNUSED						150, 153-199
	P-	UNUSED						150, 153-199
	Q-	UNUSED						150, 153-199

HOOKUP LIST

D280T132

91-21-51

Section D96100

Page 5

Mar 07/2008



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D96102P		AF0204/ /		PLUG (continued)				150, 153-199
	R-	UNUSED						150, 153-199
	S-	UNUSED						150, 153-199
	T-	UNUSED						150, 153-199
	U-	UNUSED						150, 153-199
	V-	UNUSED						150, 153-199
	W-	UNUSED						150, 153-199
	X-	UNUSED						150, 153-199
	Y-	UNUSED						150, 153-199
	Z-	UNUSED						150, 153-199

HOOKUP LIST

D280T132

91-21-51

Section D96100

Page 6 End

Mar 07/2008



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
E090-90		412R/ /		EQUIPMENT RACK (MTO230596)				150, 152-199
	=G	E	W9040	900	10		23-19-11	150, 152-199
	=G	E	W9077	963	22		23-19-11	150, 152-199
	=G	E	W9077	967	22		23-19-11	150, 152-199
	=G	E	W9077	971	22		23-19-11	150, 152-199
	=G	E	W9077	975	22		23-19-11	150, 152-199
	=G	E	W9077	979	22		23-19-11	150, 152-199
	=G	E	W9077	990	16		23-19-11	150, 152-199

HOOKUP LIST
D280T132

91-21-51
Section E090
Page 1 End
Mar 07/2008



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
G00019		NL187/076/		GENERATOR-INTEGRATED DRIVE				ALL
	T1	R	W0204	001	*1		24-21-11	ALL
	T1	R	W0208	001	*1		24-21-21	ALL
	T2	R	W0204	002	*1		24-21-11	ALL
	T2	R	W0208	002	*1		24-21-21	ALL
	T3	R	W0204	003	*1		24-21-11	ALL
	T3	R	W0208	003	*1		24-21-21	ALL
	N	R	W0204	004	04		24-21-11	ALL
	N	R	W0208	004	04		24-21-21	ALL

HOOKUP LIST

D280T132

91-21-51
Section G00000
Page 1 End
Mar 07/2008



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
GD00073		0148/228/R037		GD-S P3				ALL
	DED		W0051	074Z			33-13-13	ALL
GD00085		SHELF/E08/00		GD-S E8 SHELF-L EICAS COMPUTER				ALL
	REF		W2000	CK20	24		99-99-99	050-099, 150-154, 275-276
GD00089		SHELF/E08/01		GD-S E8 SHELF-L EICAS COMPUTER				050-099, 150-154, 162-164, 275-276
	REF	#	W2002	CL16	24		SPARE	050-099, 150-154, 162-164, 275-276
GD00102		0202/280/L008		GD-S PLT OVHD PNL				ALL
	DED		W0062	624Z			28-42-31	ALL
GD00110		0198/278/L008		GD-S PLT OVHD PNL				ALL
	DED		W0070	688Z			49-61-11	ALL
GD00151		SHELF/E08/02		GD-S E8 SHELF-R EICAS COMPUTER				050-099, 150-154, 162-164, 275-276
	REF	#	W2002	CN16	24		SPARE	150-154, 162-164, 275-276
GD00155		SHELF/E08/00		GD-S E8 SHELF-R EICAS COMPUTER				ALL
	REF		W2000	BM20	24		99-99-99	050-099, 150-154, 275-276
	REF		W2000	FN20	24		99-99-99	050-099, 150-154, 275-276
	REF		W2000	HM20	24		99-99-99	050-099, 150-154, 275-276
GD00173		1555/282/L062		GD-S M201 L/2				ALL
	DED		W0216	037Z			33-24-14	277-299
GD00263		0198/278/L008		GD-S PLT OVHD PNL L ELEX				ALL
	DED		W0062	747Z			28-31-12	050-099, 155-199, 277-299
	DED		W0066	749Z			28-31-12	050-099, 155-199, 277-299
GD00432		1031/197/L045		GD-S				ALL
	DED		W1274	101Z			28-22-31	ALL
GD00434		0246/310/L016		GD-S FLT DECK REL L/2				ALL
	CAP	Y	W0632	002	20		SPARE	152, 154, 156, 162, 166-199
GD00685		0852/292/L068		GD-S				150-199, 275-299
	DED		W0812	024Z			33-21-32	155-156, 166
	DED		W0812	073Z			33-21-34	155-156, 166

HOOKUP LIST

D280T132

91-21-51

Section GD0000

Page 1

Mar 07/2008



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
GD00852		0999/197/R045		GD-S RESERVE HYD SOURCE SEL & IND				ALL
	DED		W0588	002Z			29-11-31	ALL
GD00938		0455/290/R063		GD-S				ALL
	DED		W0814	085Z			33-21-33	155-156, 166

HOOKUP LIST

D280T132

91-21-51

Section GD0000

Page 2 End

Mar 07/2008



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
GD01006		0631/292/R064		GD-S				ALL
	DED		W0814	114Z			33-21-33	155-156, 166
GD01010		0631/293/L064		GD-S				ALL
	DED		W0812	027Z			33-21-32	155-156, 166
GD01022		0456/293/L064		GD-S				ALL
	DED		W0812	081Z			33-21-32	155-156, 166
	DED		W0812	22AZ			33-21-32	166
GD01032		1284/290/R065		GD-S				050-099
GD01032		1286/290/R065		GD-S				150-199, 275-299
	DED		W0818	038Z			33-21-35	155-156, 166
GD01042		1283/291/L056		GD-S				ALL
	DED		W0816	141Z			33-21-34	155-156, 166
GD01046		1438/292/L063		GD-S				150-199, 275-299
	DED		W0816	133Z			33-21-34	155-156
GD01114		0358/294/R062		GD-S FWD DIRECT CEILING LTS				ALL
	DED		W1228	606Z			33-27-11	155-156, 166
	DED		W1228	609Z			33-27-11	155-156, 166
GD01236		0287/300/R060		GD-S				ALL
	DED		W1228	091Z			33-27-11	155-156, 166
	DED		W1228	099Z			33-27-11	155-156, 166
GD01338		1540/143/R015		GD-S AFT EQPT COOLING EXH FAN NO.2				ALL
	DED		W1354	005Z			21-26-11	ALL
GD01528		1373/290/R070		GD-S SIDEWALL LTS BALLAST				ALL
	DED		W0818	051Z			33-21-35	155-156, 166
	DED		W0816	656Z			33-21-34	166
GD01580		1373/290/L065		GD-S LEFT AFT SIDEWALL LTS				050-099
GD01580		1373/291/L065		GD-S LEFT AFT SIDEWALL LTS				150-199, 275-299
	DED		W0816	154Z			33-21-34	155-156, 166
	DED		W0816	133Z			33-21-34	166

HOOKUP LIST

D280T132

91-21-51

Section GD0100

Page 1

Mar 07/2008



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
GD01588		0544/294/L065		GD-S LEFT AFT SIDEWALL LTS				ALL
	DED		W0812	086Z			33-21-32	155-156, 166
GD01592		0543/290/R068		GD-S LEFT AFT SIDEWALL LTS				050-099
GD01592		0543/292/R064		GD-S LEFT AFT SIDEWALL LTS				150-199, 275-299
	DED		W0814	077Z			33-21-33	155-156, 166
	DED		W0814	090Z			33-21-33	155-156, 166

HOOKUP LIST

D280T132

91-21-51

Section GD0100

Page 2 End

Mar 07/2008



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
GD02466		0214/200/R040		GD-S AISLE STAND FWD LIGHTS				ALL
	DED		W0617	004Z			34-57-21	ALL

HOOKUP LIST
D280T132

91-21-51
Section GD0200
Page 1 End
Mar 07/2008



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
GD03096		0146/232/R033		GD-S				ALL
	DED		W0011	783Z			33-13-13	ALL
GD03932		0358/294/L062		GD-S				ALL
	DED		W1228	043Z			33-22-11	155-156, 166
	DED		W0714	050Z			33-24-12	277-278
GD03980		0411/145/L080		GD-S EQUIPMENT COOLING VALVES				ALL
	DED		W0986	056Z			21-58-12	ALL
	DED		W0572	073Z			21-58-12	155-199

HOOKUP LIST

D280T132

91-21-51

Section GD0300

Page 1 End

Mar 07/2008



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
GD04050		1015/191/L038		GD-S				ALL
	DED		W0460	104Z			28-22-31	ALL
GD04194		0358/294/L062		GD-S				ALL
	DED		W1228	608Z			33-27-11	155-156, 166
	DED		W1228	612Z			33-27-11	155-156, 166
GD04208		0999/220/L095		GD-S				ALL
	DED		W0816	107Z			33-21-34	155-156, 166
GD04396		0703/123/L055		GD-S				050-099
	DED		W1258	617Z			21-28-11	050-099
GD04426		P061-00/ /		GD-S P61 PNL				ALL
	DED		W0062	793Z			30-11-11	050-099, 150-199
GD04472		0178/209/R002		GD-S				ALL
	REF	#	W0711	215	20		34-61-16	ALL
	REF	#	W0711	216	20		34-61-26	ALL
GD04500		P006-02/ /		GD-S				ALL
	DED		W0028	153Z			25-29-11	ALL
	DED		W0028	154Z			25-29-11	ALL
GD04628		0903/293/L070		GD-S				150-199, 275-299
	DED		W0812	044Z			33-21-34	155-156, 166
GD04818		0742/292/L063		GD-S				150-199, 275-299
	DED		W0812	110Z			33-21-32	155-156, 166
GD04868		0654+65/291/L065		GD-S				150-199, 275-299
	DED		W0812	787Z			33-21-32	155-156, 166
GD04882		1153/292/L063		GD-S				150-199, 275-299
	DED		W0816	111Z			33-21-34	155-156, 166
GD04888		1043/292/R063		GD-S				150-199, 275-299
	DED		W0814	710Z			33-21-35	155-156, 166
	DED		W0818	004Z			33-21-35	155-156, 166

HOOKUP LIST

D280T132

91-21-51

Section GD0400

Page 1

Mar 07/2008



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
GD04894		1197+132/292/R063		GD-S				150-199, 275-299
	DED		W0818	108Z			33-21-35	155-156, 166
GD04916		0976/292/R065		GD-S				150-199, 275-299
	DED		W0814	048Z			33-21-35	155-156, 166
GD04922		1197+44/292/L063		GD-S				150-199, 275-299
	DED		W0816	687Z			33-21-34	155-156, 166
GD04928		1153/295/R65		GD-S				150-199, 275-299
	DED		W0818	008Z			33-21-35	155-156, 166
GD04938		1197+132/292/L063		GD-S				150-199, 275-299
	DED		W0816	701Z			33-21-34	155-156, 166
GD04944		1197+44/292/R063		GD-S				150-199, 275-299
	DED		W0818	074Z			33-21-35	155-156, 166
GD04960		0765/291/R066		GD-S				150-199, 275-299
	DED		W0814	112Z			33-21-33	155-156, 166
GD04968		0654+65/290/R066		GD-S				150-199, 275-299
	DED		W0814	591Z			33-21-33	155-156, 166

HOOKUP LIST

D280T132

91-21-51

Section GD0400

Page 2 End

Mar 07/2008



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
GD05304		0852/292/R070		GD-S				150-199
	DED		W0814	029Z			33-21-33	155-156, 166
GD05412		0525/160/L087		GD-S EQPT COOLING INBD VALVES				ALL
	DED		W0986	040Z			21-58-12	ALL
GD05684		0390/112/0000		GD-S MAIN E/E RACK COOLING DET				ALL
	DED		W0986	069Z			21-28-11	050-099
GD05720		0755/161/R076		GD-S RIGHT RECIRC FAN				ALL
	DED		W0580	030Z			21-43-11	050-099
GD05994		NR126/50/		GD-D				ALL
	DED		W3526	102Z			78-34-11	ALL
GD05996		NL126/047/11		GD-D				ALL
	DED		W3528	102Z			78-34-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section GD0500

Page 1 End

Mar 07/2008



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
GD06583		NR160/108/		GD-D C				ALL
	DED		W3538	008Z			24-11-11	ALL
	DED		W3538	009Z			24-11-11	ALL
	DED		W3538	011Z			24-11-11	ALL
GD06619		NR160/110/		GD-S				ALL
	DED		W3538	014Z			24-11-11	ALL
GD06627		NR218/131/		GD-S				ALL
	DED		W3510	034Z			73-31-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section GD0600

Page 1 End

Mar 07/2008



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
GDX0001								ALL
	CAP	Y	W0184	09B	20		SPARE	150-156, 162-166
	DED		W0014	035Z			27-51-61	ALL
	DED		W0014	037Z			27-51-61	ALL
	DED		W0082	106Z			21-52-41	ALL
	DED		W0084	102Z			21-61-51	ALL
	DED		W0142	847Z			30-32-21	ALL
	DED		W0192	02TZ			21-26-11	150-154, 275
	DED		W0892	022Z			28-31-22	150-154, 275
	DED		W0892	034Z			28-31-22	150-154, 275
	REF	#	W2002	CN16	24		SPARE	155-157, 165-199, 277-299
GDX0002								ALL
	DED		W0142	639Z			30-31-21	ALL
	DED		W0894	022Z			28-31-22	150-154, 275
	DED		W0894	034Z			28-31-22	150-154, 275
	DED		W0030	149Z			38-32-15	156-157, 166-199, 277-299
	REF	#	W2002	CL16	24		SPARE	155-157, 165-199, 277-299
GDX0003								ALL
	DED		W0142	651Z			30-31-23	ALL
	DED		W1114	072Z			30-31-11	ALL
	REF	#	W1103	604	22		34-22-16	050-099, 150-152, 155-156, 162-166
	REF	#	W1103	605	22		34-22-16	050-099, 150-152, 155-156, 162-166
GDX0004								ALL
	DED		W0142	10JZ			28-22-31	ALL
	DED		W0142	10NZ			28-22-31	ALL
	DED		W0142	10RZ			28-22-31	ALL
GDX0005								ALL
	DED		W0144	125Z			30-31-13	ALL
	DED		W1114	075Z			30-31-11	ALL
	DED		W1114	083Z			30-34-11	ALL
	REF	#	W1103	604	22		34-22-16	157, 167-199, 277-299
	REF	#	W1103	605	22		34-22-16	157, 167-199, 277-299
	REF	#	W1103	606	22		34-22-16	157, 167-199, 277-299
	REF	#	W1103	607	22		34-22-16	157, 167-199, 277-299
	REF	#	W1103	608	22		34-22-16	157, 167-199, 277-299

HOOKUP LIST

D280T132

91-21-51

Section GDX000

Page 1

Mar 07/2008



767-200/300 WIRING DIAGRAM MANUAL

Equip	Station / WL / BL		Description		GA	CO	Diagram	Effectivity
	Term	Type	Bundle	Wire No.				
GDX0006								050-099
	DED		W0192	66DZ			28-31-12	050-099
	DED		W0192	67BZ			28-31-11	050-099
GDX0007								ALL
	DED		W0144	543Z			30-32-11	ALL
	DED		W0144	567Z			30-33-11	ALL
	DED		W0144	652Z			28-22-31	ALL
	DED		W0144	657Z			28-22-31	ALL
	DED		W0144	659Z			28-22-31	ALL
	DED		W0144	704Z			30-31-11	ALL
	DED		W0176	75JZ			28-31-11	050-099, 155-199, 276-299
GDX0009								ALL
	DED		W0184	01RZ			76-11-11	ALL
GDX0011								ALL
	DED		W1092	008Z			27-88-11	ALL
	DED		W1092	173Z			78-36-11	ALL
	DED		W1092	562Z			78-34-11	ALL
GDX0012								050-099, 151, 155-199, 276-299
	CAP	Y	W0105	721	22		22-32-14	151, 166
	CAP	Y	W0105	772	22		22-32-14	167-199
	CAP	Y	W0105	723	22		22-32-14	167-199
	CAP	Y	W0105	776	22		22-32-14	167-199
	CAP	Y	W0105	778	22		22-32-14	167-199
	CAP	Y	W0105	781	22		22-32-14	167-199
	DED		W0176	75AZ			28-31-12	050-099, 155-199, 276-299
GDX0013								ALL
	CAP	Y	W0105	725	22		22-32-14	151, 166
	DED		W1092	566Z			32-09-11	ALL
	DED		W0192	66DZ			28-31-12	155-199, 276-299
	DED		W0192	67BZ			28-31-11	155-199, 276-299
GDX0014								ALL
	DED		W0198	603Z			76-11-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section GD000

Page 2 End

Mar 07/2008



Equip	Station / WL / BL			Description	GA	CO	Diagram	Effectivity
	Term	Type	Bundle					
K00101	P034-00/ /			RELAY-GND HANDLING				ALL
	A1	F3	W1008	001	06		24-51-61	ALL
	A2	F3	W1010	001	06		24-51-61	ALL
	A3	F3	W1004	001	06		24-51-61	ALL
	B1	F3	W1008	002	06		24-51-61	ALL
	B2	F3	W1010	002	06		24-51-61	ALL
	B3	F3	W1004	002	06		24-51-61	ALL
	C1	F3	W1008	003	06		24-51-61	ALL
	C2	F3	W1010	003	06		24-51-61	ALL
	C3	F3	W1004	003	06		24-51-61	ALL
	X1	C	W0026	047	24		24-51-61	ALL
	X2	C	W0026	031	20		24-51-61	ALL
	Y1	C	W0026	048	24		24-51-61	ALL
	Y2	C	W0026	032	24		24-51-61	ALL
K00102	P032-00/ /			RELAY-TRANSFER,GND SERVICE				ALL
	A1	F	W0230	010	08		24-51-52	ALL
	A2	F	W0206	016	08		24-51-52	ALL
	A3	F	W1020	001	08		24-51-52	ALL
	B1	F	W0230	011	08		24-51-52	ALL
	B2	F	W0206	017	08		24-51-52	ALL
	B3	F	W1020	002	08		24-51-52	ALL
	C1	F	W0230	012	08		24-51-52	ALL
	C2	F	W0206	018	08		24-51-52	ALL
	C3	F	W1020	003	08		24-51-52	ALL
	X1	C	W0024	048	24		24-51-51	ALL
	X2	C	W0024	047	20		24-51-51	ALL
	12	C	W0024	041	24		24-41-12	ALL
	13	C	W0024	042	24		24-41-12	ALL
K00103	P034-00/ /			RELAY-SELECT,GND SERVICE				ALL
	A1	F	W1004	004	08		24-51-52	ALL
	A2	F	W0230	010	08		24-51-52	ALL
	A3	F	W1008	004	08		24-51-52	ALL
	B1	F	W1004	005	08		24-51-52	ALL
	B2	F	W0230	011	08		24-51-52	ALL
	B3	F	W1008	005	08		24-51-52	ALL
	C1	F	W1004	006	08		24-51-52	ALL
	C2	F	W0230	012	08		24-51-52	ALL
	C3	F	W1008	006	08		24-51-52	ALL
	X1	C	W0026	021	24		24-51-51	ALL

HOOKUP LIST

D280T132

91-21-51

Section K00100

Page 1

Mar 07/2008



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
K00103		P034-00/ /		RELAY-SELECT,GND SERVICE (continued)				ALL
	X2	C	W0026	030	20		24-51-51	ALL
K00104		P006-01/ /		RELAY-MAIN BAT.				ALL
	A1	E	W1040	004	06		24-33-11	ALL
	A2	E	W0218	003	06		24-33-11	ALL
	A2	E	W1040	003	06		24-33-11	ALL
	B1	E2	W1040	002	08		24-33-11	ALL
	B1	E2	W1040	005	08		24-33-11	ALL
	B2	E2	W1040	006	08		24-33-11	ALL
	B2	E2	W1040	007	08		24-33-11	ALL
	X1	C	W0028	080	24		24-33-11	ALL
	X2	C	W0028	081	24		24-33-11	ALL
	11	C	W0028	078	18		24-51-31	ALL
	12	C	W0028	079	18		24-51-31	ALL
	12	C	W0028	096	18		24-51-31	ALL
	13	C	W0028	066	24		24-31-11	ALL
	14	C	W0028	067	20		24-31-11	ALL
K00106		P006-01/ /		RELAY-MAIN BAT. TFR				ALL
	A1	E	W1040	003	06		24-33-11	ALL
	A2	E	W1026	018	08		24-33-11	ALL
	B1	E2	W1040	007	08		24-33-11	ALL
	B1	E2	W1040	008	08		24-54-71	ALL
	B2	E	W1026	017	08		24-33-11	ALL
	X1	C	W0028	128	24		24-33-11	ALL
	X2	C	W0028	083	24		24-33-11	ALL
	11	C	W0028	173	24		24-33-11	ALL
	12	C	W0028	174	24		24-33-11	ALL
	13	C	W0028	081	24		24-33-11	ALL
	14	C	W0028	015	24		24-33-11	ALL
K00108		P006-02/ /		RELAY-TIE,DC				ALL
	A1	F7	W1030	004	06		24-32-11	ALL
	A2	F7	W1026	019	06		24-32-11	ALL
	X1	C	W0028	017	24		24-32-11	ALL
	X1	C	W0028	073	24		24-32-11	ALL
	X2	C	W0028	071	24		24-32-11	ALL
	11	C	W0028	144	24		24-34-11	ALL
	11	C	W0028	194	24		24-51-31	ALL
	12	C	W0028	108	20		24-51-31	ALL

HOOKUP LIST

D280T132

91-21-51

Section K00100

Page 2

Mar 07/2008



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
K00108		P006-02/ /		RELAY-TIE,DC (continued)				ALL
	13	C	W0028	137	24		24-51-31	ALL
K00114		P034-00/ /		CONTACTOR-EXTERNAL POWER				ALL
	A1	F5	W1006	001	06		24-51-61	ALL
	A1	F5	W1006	004	08		24-51-52	ALL
	A1	H	W0026	050	16		24-41-11	ALL
	A1	H	W0026	058	16		24-41-11	ALL
	A1	H	W0232	001	*1		24-41-11	ALL
	A2	H	W0230	007	04		24-21-51	ALL
	A2	H	W0230	013	04		24-21-51	ALL
	B1	F5	W1006	002	06		24-51-61	ALL
	B1	F5	W1006	005	08		24-51-52	ALL
	B1	H	W0026	057	16		24-41-11	ALL
	B1	H	W0232	002	*1		24-41-11	ALL
	B2	H	W0230	008	04		24-21-51	ALL
	B2	H	W0230	014	04		24-21-51	ALL
	C1	F5	W1006	003	06		24-51-61	ALL
	C1	F5	W1006	006	08		24-51-52	ALL
	C1	H	W0026	056	16		24-41-11	ALL
	C1	H	W0232	003	*1		24-41-11	ALL
	C2	H	W0026	049	18		24-21-51	ALL
	C2	H	W0230	009	04		24-21-51	ALL
	C2	H	W0230	015	04		24-21-51	ALL
K00117		P049-00/ /		RELAY-CONTACTOR-APU CRANK				ALL
	A1	R	W0246	007	*1		49-41-11	ALL
	A1	R	W0246	008	*1		49-41-11	ALL
	A1	R	W0246	010	*1		24-32-41	275-299
	A2	R	W1048	003	*1		24-31-41	ALL
	A2	R	W1048	006	*1		24-31-41	ALL
	X1	E	W1050	030	22		49-41-11	ALL
	X2	E	W1050	029	20		49-41-11	ALL
K00119		P031-00/ /		RELAY-UTIL BUS,LEFT				ALL
	A1	E	W1016	001	08		24-51-13	ALL
	A2	E	W0296	016	08		24-51-13	ALL
	A2	E	W2108	001	08		24-51-13	278-299
	B1	E	W1016	002	08		24-51-13	ALL
	B2	E	W0296	017	08		24-51-13	ALL
	B2	E	W2108	002	08		24-51-13	278-299

HOOKUP LIST

D280T132

91-21-51

Section K00100

Page 3

Mar 07/2008



767-200/300 WIRING DIAGRAM MANUAL

Equip	Station / WL / BL			Description		Diagram	Effectivity
	Term	Type	Bundle	Wire No.	GA		
K00119	P031-00/ /			RELAY-UTIL BUS,LEFT (continued)			ALL
	C1	E	W1016	003	08	24-51-13	ALL
	C2	E	W0296	018	08	24-51-13	ALL
	C2	E	W2108	003	08	24-51-13	278-299
	X1	C	W0022	010	24	24-51-13	ALL
	X2	C	W0022	011	24	24-51-13	ALL
	13	C	W0022	009	20	24-51-13	ALL
	14	C	W0022	012	24	24-51-13	ALL
K00120	P032-00/ /			RELAY-UTIL BUS,RIGHT			ALL
	A1	E	W1020	007	08	24-51-23	ALL
	A2	E	W0298	019	08	24-51-23	ALL
	B1	E	W1020	008	08	24-51-23	ALL
	B2	E	W0298	020	08	24-51-23	ALL
	C1	E	W1020	009	08	24-51-23	ALL
	C2	E	W0298	021	08	24-51-23	ALL
	X1	C	W0024	046	24	24-51-23	ALL
	X2	C	W0024	045	24	24-51-23	ALL
	13	C	W0024	043	20	24-51-23	ALL
	14	C	W0024	044	24	24-51-23	ALL
	14	C	W0024	138	24	24-51-52	ALL
K00161	P036-00/ /			RELAY-LANDING LIGHT DIMMING,L			ALL
	A1	E	W0176	093	18	33-42-11	050-099
	A1	E	W0176	093	16	33-42-11	150-199, 275-299
	A2	E	W0176	828	18	33-42-11	050-099
	A2	E	W0176	828	16	33-42-11	150-199, 275-299
	A3	E	W0176	094	20	33-42-11	050-099
	A3	E	W0176	094	16	33-42-11	150-199, 275-299
	X1	C	W0180	022	20	33-42-11	ALL
	X2	C	W0180	021	20	33-42-11	ALL
K00162	P037-00/ /			RELAY-LANDING LIGHT DIMMING,R			ALL
	A1	E	W0192	829	18	33-42-11	050-099
	A1	E	W0192	829	16	33-42-11	150-199, 275-299
	A2	E	W0192	827	18	33-42-11	050-099
	A2	E	W0192	827	16	33-42-11	150-199, 275-299
	A3	E	W0192	828	20	33-42-11	050-099
	A3	E	W0192	828	16	33-42-11	150-199, 275-299
	X1	C	W0192	830	20	33-42-11	ALL
	X2	C	W0192	831	20	33-42-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section K00100

Page 4

Mar 07/2008

Equip	Station / WL / BL		Description		GA	CO	Diagram	Effectivity
	Term	Type	Bundle	Wire No.				
K00172	P036-00/ /		RELAY-VACUUM BLOWER					ALL
	A1	E	W0182	200	12		38-32-11	ALL
	A2	E	W0182	120	12		38-32-11	ALL
	B1	E	W0182	201	12		38-32-11	ALL
	B2	E	W0182	121	12		38-32-11	ALL
	C1	E	W0182	202	12		38-32-11	ALL
	C2	E	W0182	122	12		38-32-11	ALL
	X1	C	W0182	152	20		38-32-14	050-099, 150-199, 277-299
	X1	C	W0182	123	22		38-32-11	050-099, 275-299
	X1	C	W0182	123	20		38-32-11	150-199
	X2	C	W0182	119	22		38-32-11	050-099, 275-299
	X2	C	W0182	119	20		38-32-11	150-199
K00173	P049-00/ /		RELAY-VACUUM BLOWER					ALL
	A1	E	W0030	006	12		38-32-11	ALL
	A2	E	W0030	021	12		38-32-11	ALL
	B1	E	W0030	007	12		38-32-11	ALL
	B2	E	W0030	022	12		38-32-11	ALL
	C1	E	W0030	008	12		38-32-11	ALL
	C2	E	W0030	023	12		38-32-11	ALL
	X1	C	W0030	024	22		38-32-11	ALL
	X1	C	W0030	134	20		38-32-14	050-099, 150-199, 277-299
	X2	C	W0030	009	22		38-32-11	ALL
K00187	P036-00/ /		RELAY-FUEL BOOST PUMP CONT,L AFT					ALL
	A1	D	W0182	141	16		28-22-11	ALL
	A2	D	W0176	897	16		28-22-11	ALL
	B1	D	W0182	142	16		28-22-11	ALL
	B2	D	W0176	898	16		28-22-11	ALL
	C1	D	W0182	143	16		28-22-11	ALL
	C2	D	W0176	899	16		28-22-11	ALL
	X1	C	W0176	721	18		28-22-11	ALL
	X2	C	W0176	722	20		28-22-11	ALL
K00188	P033-00/ /		RELAY-FUEL BOOST PUMP CONT,L FWD					ALL
	A1	D	W0142	09B	16		28-22-11	ALL
	A2	D	W0142	09E	16		28-22-11	ALL
	B1	D	W0142	09C	16		28-22-11	ALL
	B2	D	W0142	09F	16		28-22-11	ALL
	C1	D	W0142	09D	16		28-22-11	ALL
	C2	D	W0142	072	18		28-22-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section K00100

Page 5

Mar 07/2008



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
K00188		P033-00/ /		RELAY-FUEL BOOST PUMP CONT,L FWD (continued)				ALL
	C2	D	W0142	09G	16		28-22-11	ALL
	X1	C	W0142	809	24		28-22-11	ALL
	X2	C	W0142	078	20		28-22-11	ALL
K00189		P037-00/ /		RELAY-FUEL BOOST PUMP CONT,R AFT				ALL
	A1	D	W1118	180	16		28-22-11	ALL
	A2	D	W0192	12R	16		28-22-11	ALL
	B1	D	W1118	181	16		28-22-11	ALL
	B2	D	W0192	12S	16		28-22-11	ALL
	C1	D	W1118	182	16		28-22-11	ALL
	C2	D	W0192	12T	16		28-22-11	ALL
	X1	C	W0192	072	24		28-22-11	ALL
	X2	C	W0192	071	20		28-22-11	ALL
K00190		P036-00/ /		RELAY-FUEL BOOST PUMP CONT,R FWD				ALL
	A1	D	W0182	138	16		28-22-11	ALL
	A2	D	W0176	894	16		28-22-11	ALL
	B1	D	W0182	139	16		28-22-11	ALL
	B2	D	W0176	895	16		28-22-11	ALL
	C1	D	W0182	140	16		28-22-11	ALL
	C2	D	W0176	896	16		28-22-11	ALL
	X1	C	W0176	716	18		28-22-11	ALL
	X2	C	W0176	717	20		28-22-11	ALL

HOOKUP LIST

D280T132

91-21-51
Section K00100
Page 6 End
Mar 07/2008



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
K00221		P037-00/ /		RELAY-EXT,ALT OUTBD SLAT				ALL
	A1	C	W1118	005	18		27-81-21	ALL
	A2	C	W1118	006	18		27-81-21	ALL
	B1	C	W1118	003	18		27-81-21	ALL
	B2	C	W1118	007	18		27-81-21	ALL
	C1	C	W1118	004	18		27-81-21	ALL
	C2	C	W1118	008	18		27-81-21	ALL
	X1	C	W1118	002	22		27-81-21	ALL
	X2	C	W0192	556	22		27-81-21	ALL
K00222		P037-00/ /		RELAY-RTR,ALT OUTBD SLAT				ALL
	A1	C	W1118	009	18		27-81-21	ALL
	A2	C	W1118	010	18		27-81-21	ALL
	A3	C	W1118	006	18		27-81-21	ALL
	B1	C	W1118	013	18		27-81-21	ALL
	B2	C	W1118	011	18		27-81-21	ALL
	B3	C	W1118	007	18		27-81-21	ALL
	C1	C	W1118	014	18		27-81-21	ALL
	C2	C	W1118	012	18		27-81-21	ALL
	C3	C	W1118	008	18		27-81-21	ALL
	X1	C	W1118	015	22		27-81-21	ALL
	X2	C	W0192	555	22		27-81-21	ALL
K00223		P037-00/ /		RELAY-ARM,ALT OUTBD SLAT				ALL
	A1	C	W1118	010	18		27-81-21	ALL
	A2	C	W1118	021	18		27-81-21	ALL
	B1	C	W1118	011	18		27-81-21	ALL
	B2	C	W1118	022	18		27-81-21	ALL
	C1	C	W1118	012	18		27-81-21	ALL
	C2	C	W1118	023	18		27-81-21	ALL
	D1	C	W1118	179	22		27-81-21	ALL
	D2	C	W1118	169	20		27-81-21	ALL
	D3	C	W1118	515	22		27-81-21	ALL
	X1	C	W0192	554	22		27-81-21	ALL
	X2	C	W1118	020	20		27-81-21	ALL
K00234		1155/129/R075		RELAY-RAM AIR TURBINE RETRACT				ALL
	A1	R	W1208	003	08		29-21-31	ALL
	A1	R	W1208	010	08		29-21-31	ALL
	A2	R	W1208	005	08		29-21-31	ALL
	X1	N	W0658	002	20		29-21-31	ALL

HOOKUP LIST

D280T132

91-21-51

Section K00200

Page 1

Mar 07/2008



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
K00234		1155/129/R075		RELAY-RAM AIR TURBINE RETRACT (continued)				ALL
	X2	N	W0658	015	18		29-21-31	ALL
K00235		1155/129/R075		RELAY-RAM AIR TURBINE DEPLOY				ALL
	A1	R	W1208	003	08		29-21-31	ALL
	A1	R	W1208	004	08		29-21-31	ALL
	A2	R	W1208	006	08		29-21-31	ALL
	A2	R	W1208	007	08		29-21-31	ALL
	X1	N	W0658	003	20		29-21-31	ALL
	X2	N	W0658	008	18		29-21-31	ALL
K00236		1155/129/R075		RELAY-RAM AIR TURBINE OVERRIDE				ALL
	A1	R	W1208	004	08		29-21-31	ALL
	A2	R	W1208	007	08		29-21-31	ALL
	X1	N	W0658	005	20		29-21-31	ALL
	X2	N	W0658	030	18		29-21-31	ALL
K00245		P035-00/ /		RELAY-CARGO HDLG SYS PWR				ALL
	A1	E	W1066	170	08		25-53-11	050-099
	A1	E	W0666	007	08		25-53-11	ALL
	A1	E	W1066	007	08		25-53-11	150-199, 275-299
	A2	E	W1066	001	08		25-53-11	ALL
	B1	E	W0666	008	08		25-53-11	ALL
	B2	E	W1066	002	08		25-53-11	ALL
	C1	E	W0666	009	08		25-53-11	ALL
	C2	E	W1066	003	08		25-53-11	ALL
	X1	C	W1066	591	20		25-53-11	ALL
	X2	C	W1066	592	20		25-53-11	ALL
	11	C	W1066	589	20		25-53-11	ALL
	11	C	W1066	591	20		25-53-11	ALL
	12	C	W1066	590	20		25-53-11	ALL
K00278		P039-00/ /		RELAY-CAR. HDLG SYS PWR				ALL
	A1	E	W0666	017	08		25-53-21	ALL
	A1	E	W1068	007	08		25-53-21	ALL
	A2	E	W1068	001	08		25-53-21	ALL
	B1	E	W0666	018	08		25-53-21	ALL
	B2	E	W1068	002	08		25-53-21	ALL
	C1	E	W0666	019	08		25-53-21	ALL
	C2	E	W1068	003	08		25-53-21	ALL
	X1	C	W1068	591	20		25-53-21	ALL

HOOKUP LIST

D280T132

91-21-51

Section K00200

Page 2

Mar 07/2008



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
K00278		P039-00/ /		RELAY-CAR. HDLG SYS PWR (continued)				ALL
	X2	C	W1068	592	20		25-53-21	ALL
	11	C	W1068	589	20		25-53-21	ALL
	11	C	W1068	591	20		25-53-21	ALL
	12	C	W1068	590	20		25-53-21	ALL

HOOKUP LIST

D280T132

91-21-51

Section K00200

Page 3 End

Mar 07/2008



767-200/300 WIRING DIAGRAM MANUAL

Equip	Station / WL / BL		Bundle	Description		GA	CO	Diagram	Effectivity
	Term	Type		Wire No.					
K00329	P036-00/ /			RELAY-FUEL OVRD PUMP CONT,L					ALL
	A1	D	W0182	144	12		28-22-12	ALL	
	A2	D	W0176	06S	12		28-22-12	ALL	
	B1	D	W0182	145	12		28-22-12	ALL	
	B2	D	W0176	06T	12		28-22-12	ALL	
	C1	D	W0182	146	12		28-22-12	ALL	
	C2	D	W0176	06U	12		28-22-12	ALL	
	X1	C	W0176	75W	22		28-22-12	ALL	
	X2	C	W0176	697	20		28-22-12	ALL	
	DED		W0176	697Z			28-22-12	ALL	
K00330	P037-00/ /			RELAY-FUEL OVRD PUMP CONT,R					ALL
	A1	D	W1118	183	12		28-22-12	ALL	
	A2	D	W0192	12U	12		28-22-12	ALL	
	B1	D	W1118	184	12		28-22-12	ALL	
	B2	D	W0192	12V	12		28-22-12	ALL	
	C1	D	W1118	185	12		28-22-12	ALL	
	C2	D	W0192	12W	12		28-22-12	ALL	
	X1	C	W0192	78U	24		28-22-12	ALL	
	X2	C	W0198	520	24		28-22-12	050-099, 155-199, 276-299	
	X2	C	W0192	78T	24		28-22-12	150-154, 275	
K00343	P036-00/ /			RELAY-EQUIP COOLING SUPPLY FAN NO.1					ALL
	A1	E	W0176	773	12		21-58-14	ALL	
	A2	E	W0176	542	12		21-58-14	ALL	
	B1	E	W0176	774	12		21-58-14	ALL	
	B2	E	W0176	551	12		21-58-14	ALL	
	C1	E	W0176	775	12		21-58-14	ALL	
	C2	E	W0176	552	12		21-58-14	ALL	
	X1	C	W0176	504	24		21-58-14	ALL	
	X2	C	W0176	506	24		21-58-14	ALL	
K00345	P037-00/ /			RELAY-FWD EQUIP COOLING EXHAUST FAN					ALL
	A1	E	W0192	628	12		21-58-15	ALL	
	A2	E	W0192	065	12		21-58-15	ALL	
	B1	E	W0192	627	12		21-58-15	ALL	
	B2	E	W0192	066	12		21-58-15	ALL	
	C1	E	W0192	626	12		21-58-15	ALL	
	C2	E	W0192	067	12		21-58-15	ALL	
	X1	C	W0192	890	24		21-58-15	ALL	
	X2	C	W0192	504	24		21-58-15	ALL	

HOOKUP LIST

D280T132

91-21-51

Section K00300

Page 1

Feb 06/2009



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
K00346		P037-00/ /		RELAY-AFT EQUIP/LAV/GALLEY VENT FAN 1				ALL
	A1	E	W0192	14Q	18		21-26-11	050-099, 150-155, 162-165, 275-276
	A1	E	W0192	705	18		21-26-11	ALL
	A2	E	W1118	134	14		21-26-11	ALL
	B1	E	W0192	706	18		21-26-11	ALL
	B2	E	W1118	136	14		21-26-11	ALL
	C1	E	W0192	707	18		21-26-11	ALL
	C2	E	W1118	135	14		21-26-11	ALL
	X1	C	W0192	749	24		21-26-11	ALL
	X2	C	W0192	181	24		21-26-11	ALL
K00347		P036-00/ /		RELAY-AFT EQUIP/LAV/GALLEY VENT FAN 2				ALL
	A1	E	W0056	015	18		21-26-11	ALL
	A2	E	W0182	040	14		21-26-11	ALL
	B1	E	W0056	016	18		21-26-11	ALL
	B2	E	W0182	074	14		21-26-11	ALL
	C1	E	W0056	017	18		21-26-11	ALL
	C2	E	W0182	075	14		21-26-11	ALL
	X1	C	W0176	561	24		21-26-11	ALL
	X2	C	W0176	699	24		21-26-11	ALL
K00359		P033-00/ /		RELAY-EXT,ALTERNATE TE FLAPS				ALL
	A1	E	W0142	745	14		27-51-11	ALL
	A1	E	W0142	755	14		27-51-11	ALL
	A2	E	W0142	693	14		27-51-11	ALL
	A2	E	W0142	751	14		27-51-11	ALL
	B1	E	W0142	748	14		27-51-11	ALL
	B1	E	W0142	756	14		27-51-11	ALL
	B2	E	W0142	692	14		27-51-11	ALL
	B2	E	W0142	749	14		27-51-11	ALL
	C1	E	W0142	750	14		27-51-11	ALL
	C1	E	W0142	757	14		27-51-11	ALL
	C2	E	W0142	691	14		27-51-11	ALL
	C2	E	W0142	746	14		27-51-11	ALL
	X1	C	W0142	754	22		27-51-11	ALL
	X2	C	W0142	752	22		27-51-11	ALL
	13	C	W0142	753	22		27-51-11	ALL
	14	C	W0142	020	22		27-51-11	ALL
K00360		P033-00/ /		RELAY-RTR,ALTERNATE TE FLAPS				ALL
	A1	E	W0142	745	14		27-51-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section K00300

Page 2

Feb 06/2009



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
K00360		P033-00/ /		RELAY-RTR,ALTERNATE TE FLAPS (continued)				ALL
	A2	E	W0142	749	14		27-51-11	ALL
	B1	E	W0142	748	14		27-51-11	ALL
	B2	E	W0142	751	14		27-51-11	ALL
	C1	E	W0142	750	14		27-51-11	ALL
	C2	E	W0142	746	14		27-51-11	ALL
	X1	C	W0142	758	22		27-51-11	ALL
	X2	C	W0142	753	22		27-51-11	ALL
	13	C	W0142	752	22		27-51-11	ALL
	14	C	W0142	021	22		27-51-11	ALL
K00361		P033-00/ /		RELAY-ARM,ALTERNATE TE FLAPS				ALL
	A1	E	W0142	783	14		27-51-11	ALL
	A2	E	W0142	755	14		27-51-11	ALL
	B1	E	W0142	784	14		27-51-11	ALL
	B2	E	W0142	756	14		27-51-11	ALL
	C1	E	W0142	785	14		27-51-11	ALL
	C2	E	W0142	757	14		27-51-11	ALL
	X1	C	W0142	019	22		27-51-11	ALL
	X2	C	W0142	769	20		27-51-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section K00300

Page 3 End

Feb 06/2009



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
K00415		P036-00/ /		RELAY-RECIRC FAN,LEFT				ALL
	A1	E	W0182	071	12		21-25-11	ALL
	A2	E	W0056	018	12		21-25-11	ALL
	B1	E	W0182	072	12		21-25-11	ALL
	B2	E	W0056	019	12		21-25-11	ALL
	C1	E	W0182	037	12		21-25-11	ALL
	C2	E	W0056	020	12		21-25-11	ALL
	X1	C	W0176	529	24		21-25-11	ALL
	X2	C	W0176	525	24		21-25-11	ALL
K00416		P037-00/ /		RELAY-RECIRC FAN,RIGHT				ALL
	A1	E	W1118	054	12		21-25-21	ALL
	A2	E	W1118	097	12		21-25-21	ALL
	B1	E	W1118	055	12		21-25-21	ALL
	B2	E	W1118	098	12		21-25-21	ALL
	C1	E	W1118	056	12		21-25-21	ALL
	C2	E	W1118	099	12		21-25-21	ALL
	X1	C	W0192	724	24		21-25-21	ALL
	X2	C	W0192	153	24		21-25-21	ALL
K00435		P036-00/ /		RELAY-LIGHTS,NOSE GEAR LANDING				ALL
	A1	E	W0176	092	18		33-42-11	ALL
	A2	E	W0176	857	16		33-42-11	ALL
	B1	E	W0176	091	18		33-42-11	ALL
	B2	E	W0176	829	16		33-42-11	ALL
	X1	C	W0176	830	24		33-42-11	ALL
	X2	C	W0176	098	20		33-42-11	ALL
	X2	C	W0176	664	20		33-42-21	ALL
K00458		P033-00/ /		RLY-PSS PWR,FWD				ALL
	A1	C	W0142	010	16		23-34-11	ALL
	A2	C	W0142	008	16		23-34-11	ALL
	B1	C	W0142	014	12		23-34-17	ALL
	B2	C	W0052	082	12		23-34-17	ALL
	C1	C	W0142	011	16		23-34-11	ALL
	C2	C	W0142	009	16		23-34-11	ALL
	D1	C	W0142	015	10		23-34-19	ALL
	D2	C	W0052	081	10		23-34-19	ALL
	X1	C	W0142	065	22		23-34-11	ALL
	X1	C	W0142	21A	22		23-34-11	280-299
	X2	C	W0142	066	22		23-34-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section K00400

Page 1

Mar 07/2008



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
K00458		P033-00/ /		RLY-PSS PWR,FWD (continued)				ALL
	X2	C	W0142	22A	22		23-34-11	280-299
K00459		P033-00/ /		RELAY-PSS PWR,AFT				ALL
	A1	C	W0144	008	12		23-34-18	ALL
	A2	C	W0144	006	12		23-34-18	ALL
	B1	C	W0144	009	16		23-34-15	ALL
	B2	C	W0144	004	16		23-34-15	ALL
	C1	C	W0144	011	12		23-34-18	ALL
	C2	C	W0144	007	12		23-34-18	ALL
	D1	C	W0144	010	16		23-34-16	ALL
	D2	C	W0144	005	16		23-34-16	ALL
	X1	C	W0144	016	22		23-34-11	ALL
	X2	C	W0144	032	20		23-34-11	ALL
	X2	C	W0144	139	22		23-34-11	ALL



Equip	Station / WL / BL		Bundle	Description		GA	CO	Diagram	Effectivity
	Term	Type		Wire No.					
K00618	P049-00/ /			RELAY-TRU APU START					275-299
	A1	E	W0238	011	08		24-32-41	275-299	
	A1	E	W1050	069	08		24-32-41	275-299	
	A2	E	W1050	008	08		24-32-41	275-299	
	B1	E	W0238	012	08		24-32-41	275-299	
	B1	E	W1050	070	08		24-32-41	275-299	
	B2	E	W1050	007	08		24-32-41	275-299	
	C1	E	W0238	013	08		24-32-41	275-299	
	C1	E	W1050	071	08		24-32-41	275-299	
	C2	E	W1050	006	08		24-32-41	275-299	
	X1	C	W1050	060	20		24-32-41	275-299	
	X2	C	W1050	061	20		24-32-41	275-299	
	11	C	W1050	065	20		24-32-41	275-299	
	12	C	W1050	066	20		24-32-41	275-299	
K00622	P033-00/ /			RELAY-LOAD SHED					ALL
	A2	N	W0138	073	10		24-51-52	ALL	
	A3	N	W0138	082	10		24-51-52	ALL	
	B2	N	W0138	074	10		24-51-52	ALL	
	B3	N	W0138	084	10		24-51-52	ALL	
	C2	N	W0138	075	10		24-51-52	ALL	
	C3	N	W0138	078	10		24-51-52	ALL	
	X1	L	W0142	08G	24		24-51-52	ALL	
	X2	L	W0142	08H	24		24-51-52	ALL	

HOOKUP LIST

D280T132

91-21-51

Section K00600

Page 1 End

Mar 07/2008



767-200/300 WIRING DIAGRAM MANUAL

Equip	Station / WL / BL			Description		Diagram	Effectivity
	Term	Type	Bundle	Wire No.	GA		
K00861	P065-00/ /			RELAY-HYD GEN 28 VDC POWER			ALL
	A1	F	W1334	005	06	24-25-12	ALL
	A1	F7	W2058	084	06	24-25-13	ALL
	A2	F	W1338	016	06	24-31-11	ALL
	X1	C	W2058	060	22	24-25-12	ALL
	X1	C	W2058	114	22	24-25-12	ALL
	X2	C	W2058	016	20	24-25-12	ALL
	12	C	W2058	040	20	24-25-11	ALL
	13	C	W2058	054	22	24-25-11	ALL
K00862	P065-00/ /			RELAY-115 VAC INSTR TRANSFER BUS			ALL
	A1	E	W2058	069	12	24-25-12	ALL
	A1	E	W2058	078	12	24-25-12	ALL
	A2	E	W2058	103	12	24-51-42	ALL
	A3	E	W2058	107	16	24-51-42	ALL
	B1	E	W2058	068	12	24-25-12	ALL
	B1	E	W2058	077	12	24-25-12	ALL
	B2	E	W2058	104	12	24-51-42	ALL
	B3	E	W2058	106	16	24-51-42	ALL
	C1	E	W2058	067	12	24-25-12	ALL
	C1	E	W2058	076	12	24-25-12	ALL
	C2	E	W2058	102	12	24-51-42	ALL
	C3	E	W2058	105	16	24-51-42	ALL
	X1	C	W2058	015	22	24-25-12	ALL
	X1	C	W2058	055	22	24-25-12	ALL
	X2	C	W2058	056	20	24-25-12	ALL
	11	C	W2058	082	24	24-25-13	ALL
	12	C	W2058	053	22	24-25-11	ALL
K00863	P065-00/ /			RELAY-115 VAC L TRANSFER BUS			ALL
	A1	E	W2058	069	12	24-25-12	ALL
	A1	E	W2058	072	12	24-25-12	ALL
	A2	E	W2058	090	12	24-51-14	ALL
	A3	E	W2058	095	14	24-51-14	ALL
	B1	E	W2058	068	12	24-25-12	ALL
	B1	E	W2058	071	12	24-25-12	ALL
	B2	E	W2058	091	12	24-51-14	ALL
	B3	E	W2058	094	14	24-51-14	ALL
	C1	E	W2058	067	12	24-25-12	ALL
	C1	E	W2058	070	12	24-25-12	ALL
	C2	E	W2058	092	12	24-51-14	ALL

HOOKUP LIST

D280T132

91-21-51

Section K00800

Page 1

Mar 07/2008



Equip	Station / WL / BL		Bundle	Description		GA	CO	Diagram	Effectivity
	Term	Type		Wire No.					
K00863	P065-00/ /			RELAY-115 VAC L TRANSFER BUS (continued)				ALL	
	C3	E	W2058	093	14		24-51-14	ALL	
	X1	C	W2058	055	22		24-25-12	ALL	
	X1	C	W2058	058	22		24-25-12	ALL	
	X2	C	W2058	057	20		24-25-12	ALL	
	11	C	W2058	113	20		34-22-81	ALL	
	12	C	W2058	112	22		34-22-81	ALL	
K00864	P065-00/ /			RELAY-115V AC R TRANSFER BUS				ALL	
	A1	E	W2058	072	12		24-25-12	ALL	
	A2	E	W2058	096	12		24-51-24	ALL	
	A3	E	W2058	101	18		24-51-24	ALL	
	B1	E	W2058	071	12		24-25-12	ALL	
	B1	E	W2058	085	12		24-25-13	ALL	
	B2	E	W2058	097	12		24-51-24	ALL	
	B3	E	W2058	100	18		24-51-24	ALL	
	C1	E	W2058	070	12		24-25-12	ALL	
	C2	E	W2058	098	12		24-51-24	ALL	
	C3	E	W2058	099	18		24-51-24	ALL	
	X1	C	W2058	058	22		24-25-12	ALL	
	X1	C	W2058	060	22		24-25-12	ALL	
	X2	C	W2058	059	20		24-25-12	ALL	
	11	C	W2058	108	22		33-51-11	ALL	
	12	C	W2058	087	20		33-51-11	ALL	

HOOKUP LIST

D280T132

91-21-51

Section K00800

Page 2 End

Mar 07/2008



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
K02091		P036-00/ /		RELAY-L LOAD SHED				050-099, 155-199, 276-299
K02091		P089-00/ /		RELAY-L LOAD SHED (SB 28-0027)				150-154, 275-276
	A1	N	W0892	001	12		28-31-22	150-154, 275
	A1	N	W1044	094	10		24-51-12	155, 165
	A1	N	W1044	094	12		24-51-12	156-157, 166-199, 277-299
	A2	N	W1044	101	12		24-51-12	050-099
	A2	N	W1044	091	12		24-51-12	155-199, 276-299
	A3	N	W1044	103	12		24-51-12	050-099
	A3	N	W1044	046	12		24-51-12	155-199, 276-299
	B1	N	W0892	002	12		28-31-22	150-154, 275
	B1	N	W1044	095	10		24-51-12	155, 165
	B1	N	W1044	095	12		24-51-12	156-157, 166-199, 277-299
	B2	N	W1044	130	12		24-51-12	155-157, 165-199, 277-299
	C1	N	W0892	003	12		28-31-22	150-154, 275
	C1	N	W1044	096	08		24-51-12	155, 165
	C1	N	W1044	096	12		24-51-12	156-157, 166-199, 277-299
	C2	N	W1044	102	12		24-51-12	050-099
	C2	N	W1044	093	12		24-51-12	155-199, 276-299
	C3	N	W1044	104	12		24-51-12	050-099
	C3	N	W1044	097	12		24-51-12	155-199, 276-299
	X1	C	W0176	18D	20		24-51-72	050-099, 162-164, 276
	X1	C	W0892	005	20		28-31-22	150-154, 275
	X1	C	W0176	74X	22		28-31-21	155-157, 165-199, 277-299
	X2	C	W0176	18E	20		24-51-72	050-099, 155-199, 276-299
	X2	C	W0892	004	20		28-31-22	150-154, 275
	11	C	W0176	76D	20		21-58-12	050-099, 155-199, 276-299
	12	C	W0176	75U	24		21-58-12	050-099, 155-199, 276-299
	12	C	W0892	038	22		28-31-22	150-154, 275
	13	C	W0892	044	20		28-31-22	150-154, 275
K02092		P037-00/ /		RELAY-R LOAD SHED				050-099, 155-199, 276-299
	A1	N	W0894	001	12		28-31-22	150-154, 275
	A1	N	W1046	013	12		24-51-22	155-157, 165-199, 277-299
	A2	N	W1046	061	12		24-51-22	050-099, 155-199, 276-299
	A3	N	W1046	060	12		24-51-22	050-099, 155-199, 276-299
	B1	N	W0894	002	12		28-31-22	150-154, 275
	B1	N	W1046	017	14		24-51-22	155-157, 165-199, 277-299
	B2	N	W1046	062	12		24-51-22	050-099, 155-199, 276-299
	B3	N	W1046	015	12		24-51-22	050-099, 155-199
	B3	N	W1046	04A	12		24-51-22	276-299
	C1	N	W0894	003	12		28-31-22	150-154, 275

HOOKUP LIST

D280T132

91-21-51

Section K02000

Page 1

Mar 07/2008



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
K02092		P037-00/ /		RELAY-R LOAD SHED (continued)				050-099, 155-199, 276-299
	C1	N	W1046	019	14		24-51-22	155-157, 165-199, 277-299
	C2	N	W1046	063	12		24-51-22	050-099, 155-199, 276-299
	C3	N	W1046	049	12		24-51-22	050-099, 155-199, 276-299
	X1	C	W0192	64C	20		24-51-72	050-099, 162-164, 276
	X1	C	W0894	005	20		28-31-22	150-154, 275
	X1	C	W0192	64K	22		28-31-21	155-157, 165-199, 277-299
	X2	C	W0192	64D	20		24-51-72	050-099, 155-199, 276-299
	X2	C	W0894	004	20		28-31-22	150-154, 275
	11	C	W0192	80U	20		21-26-11	050-099, 155-199, 276-299
	12	C	W0192	70S	24		21-26-11	050-099, 155-199, 276-299
	12	C	W0894	049	22		28-31-22	150-154, 275
	13	C	W0894	048	20		28-31-22	150-154, 275
K02093		P036-00/ /		RELAY-JETTISON PUMP CONT, L				050-099, 162-164, 276
	A1	D	W0182	164	12		28-31-21	050-099, 162-164, 276
	A2	D	W0182	161	12		28-31-21	050-099, 162-164, 276
	B1	D	W0182	165	12		28-31-21	050-099, 162-164, 276
	B2	D	W0182	162	12		28-31-21	050-099, 162-164, 276
	C1	D	W0182	166	12		28-31-21	050-099, 162-164, 276
	C2	D	W0182	163	12		28-31-21	050-099, 162-164, 276
	X1	C	W0176	74T	22		28-31-21	050-099, 162-164, 276
	X2	C	W0176	74U	20		28-31-21	050-099, 162-164, 276
K02094		P037-00/ /		RELAY-JETTISON PUMP CONT, R				050-099, 162-164, 276
	A1	D	W1118	554	12		28-31-21	050-099, 162-164, 276
	A2	D	W1118	551	12		28-31-21	050-099, 162-164, 276
	B1	D	W1118	555	12		28-31-21	050-099, 162-164, 276
	B2	D	W1118	552	12		28-31-21	050-099, 162-164, 276
	C1	D	W1118	556	12		28-31-21	050-099, 162-164, 276
	C2	D	W1118	553	12		28-31-21	050-099, 162-164, 276
	X1	C	W0192	64G	22		28-31-21	050-099, 162-164, 276
	X2	C	W0192	64H	20		28-31-21	050-099, 162-164, 276

HOOKUP LIST

D280T132

91-21-51

Section K02000

Page 2 End

Mar 07/2008



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
K09035		P036-00/ /		RELAY-PAX TELEPHONE PWR (MTO 230595)				150
K09035		P036-00/ /		RELAY-PAX TELEPHONE PWR (MTO 230596)				152-199
	A1	D	W9042	901W	10		23-19-11	150, 152-199
	A2	D	W9043	901W	10		23-19-11	150, 152-199
	B1	D	W9042	901B	10		23-19-11	150, 152-199
	B2	D	W9043	901B	10		23-19-11	150, 152-199
	C1	D	W9042	901O	10		23-19-11	150, 152-199
	C2	D	W9043	901O	10		23-19-11	150, 152-199
	X1	D	W9043	902	20		23-19-11	150, 152-199
	X2	D	W9042	902	20		23-19-11	150, 152-199

HOOKUP LIST

D280T132

91-21-51

Section K09000

Page 1 End

Mar 07/2008



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
L00019		P001-03/ /		LT-AUTOPILOT CAUTION				ALL
	1	1A	W0013	153	22		33-16-13	ALL
	2	1A	W0013	055	24		22-14-11	ALL
	3	1A	W0013	132	22		33-16-13	ALL
	DED		W0013	055Z			22-14-11	ALL
	DED		W0013	132Z			33-16-13	ALL
	DED		W0013	153Z			33-16-13	ALL
L00024		0469/254/L064		LT-CLOSET				050-099
	=G	C	W1178	003	22		33-22-21	050-099
	=P	C	W1178	002	22		33-22-21	050-099
L00028		P007-00/ /		LT-CHART,CAPT				ALL
	=G	C	W1052	004	20		33-14-21	ALL
	WHT		W1052	C-A			33-14-21	ALL
L00029		P007-00/ /		LT-CHART,F/O				ALL
	=G	C	W1054	004	20		33-14-21	ALL
	WHT		W1054	C-A			33-14-21	ALL
L00030		0181/265/L019		LT-MAP,CAPT OVHD				ALL
	=G	C	W0638	104	20		33-14-11	ALL
	=P	C	W0638	103	24		33-14-11	ALL
L00031		0181/265/R019		LT-MAP,F/O OVHD				ALL
	=G	C	W0638	102	20		33-14-11	ALL
	=P	C	W0638	101	24		33-14-11	ALL
L00034		0170/227/L045		LT-FLT KIT,CAPT				ALL
	WHT		W0632	C-A			33-14-31	ALL
	SHLD		W0632	C-B			33-14-31	ALL
L00037		0165/223/R045		LT-FLT KIT,F/O				ALL
	WHT		W0632	D-A			33-14-31	ALL
	SHLD		W0632	D-B			33-14-31	ALL
L00038		0203/270/L026		LT-DOME,CAPT				ALL
	=G	C	W0634	032	16		33-11-14	ALL
	=P	C	W0634	016	16		33-11-14	ALL

HOOKUP LIST

D280T132

91-21-51

Section L00000

Page 1

Mar 07/2008



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
L00039		0203/270/R026		LT-DOME,F/O				ALL
	=G	C	W0634	033	16		33-11-14	ALL
	=P	C	W0634	018	16		33-11-14	ALL
L00047		0221/280/L026		LT-AFT FLT DECK DOME				ALL
	=G	C	W0638	014	16		33-11-14	ALL
	=P	C	W0638	013	16		33-11-14	ALL
L00054		0182/176/0000		LT-NOSE GEAR WHEEL WELL				ALL
	=G	N	W0926	011	18		33-31-11	ALL
	=P	L	W0926	010	18		33-31-11	ALL
L00055		0261/185/L014		LIGHT-NOSE GEAR WHEEL WELL				ALL
	=G	N	W0926	012	18		33-31-11	ALL
	=P	L	W0926	009	18		33-31-11	ALL
	=P	L	W0926	010	18		33-31-11	ALL
L00056		1005/185/L044		LT-L MAIN WHEEL WELL				ALL
	=G	N	W0930	001	16		33-31-11	ALL
	=G	N	W0930	006	16		33-31-11	ALL
	=P	L	W0930	002	16		33-31-11	ALL
	=P	L	W0930	005	16		33-31-11	ALL
L00057		1020/185/L044		LT-L MAIN WHEEL WELL				ALL
	=G	N	W0930	001	16		33-31-11	ALL
	=P	L	W0930	002	16		33-31-11	ALL
L00060		0643/207/R098		LIGHT-WING ILLUMINATION,R				050-099
L00060		0654+35/207/R098		LIGHT-WING ILLUMINATION,R				150-199, 275-299
	GND	E	W0786	057	14		33-41-11	ALL
	RTN	E	W0786	002	14		33-41-11	ALL
	115V	E	W0786	001	20		33-41-11	050-099
	115V	E	W0786	001	18		33-41-11	150-199, 275-299
L00061		0643/207/L098		LIGHT-WING ILLUMINATION,L				050-099
L00061		0654+35/207/L098		LIGHT-WING ILLUMINATION,L				150-199, 275-299
	GND	E	W0784	085	14		33-41-11	ALL
	RTN	E	W0784	002	14		33-41-11	ALL
	115V	E	W0784	001	20		33-41-11	050-099
	115V	E	W0784	001	18		33-41-11	150-199, 275-299

HOOKUP LIST

D280T132

91-21-51

Section L00000

Page 2

Mar 07/2008



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
L00062		FSS0672/12/FS		LIGHT-FUELING PANEL				ALL
	BLK		W0472	A-A			28-21-11	ALL
	WHT		W0472	A-B			28-21-11	ALL
L00063		P028-00/ /		LIGHT-FUELING VALVE,L OUTBD				ALL
	1	K	W1056	037	18		28-21-13	ALL
	1	K	W1056	041	18		28-21-13	ALL
	2	K	W1056	034	18		28-21-13	ALL
	3	K	W1056	038	18		28-21-13	ALL
	3	K	W1056	042	18		28-21-13	ALL
L00064		P028-00/ /		LIGHT-FUELING VALVE,L INBD				ALL
	1	K	W1056	037	18		28-21-13	ALL
	1	K	W1056	039	18		28-21-13	ALL
	2	K	W1056	035	18		28-21-13	ALL
	3	K	W1056	038	18		28-21-13	ALL
	3	K	W1056	040	18		28-21-13	ALL
L00065		P028-00/ /		LIGHT-FUELING VALVE,R INBD				ALL
	1	K	W1056	046	18		28-21-13	ALL
	1	K	W1056	047	18		28-21-13	ALL
	2	K	W1056	049	18		28-21-13	ALL
	3	K	W1056	045	18		28-21-13	ALL
	3	K	W1056	048	18		28-21-13	ALL
L00066		P028-00/ /		LIGHT-FUELING VALVE,R OUTBD				ALL
	1	K	W1056	047	18		28-21-13	ALL
	2	K	W1056	050	18		28-21-13	ALL
	3	K	W1056	048	18		28-21-13	ALL
	3	K	W1056	051	18		28-26-11	ALL
L00067		P028-00/ /		LIGHT-DEFUELING VALVE,LEFT				ALL
	1	K	W1056	001	18		28-26-11	ALL
	1	K	W1056	002	18		28-26-11	ALL
	2	K	W1056	010	18		28-26-11	ALL
	3	K	W1056	006	18		28-26-11	ALL
	3	K	W1056	051	18		28-26-11	ALL
L00068		P028-00/ /		LIGHT-DEFUELING VALVE,RIGHT				ALL
	1	K	W1056	007	18		28-26-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section L00000

Page 3

Mar 07/2008



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
L00068		P028-00/ /		LIGHT-DEFUELING VALVE,RIGHT (continued)				ALL
	1	K	W1056	008	18		28-26-11	ALL
	2	K	W1056	020	18		28-26-11	ALL
	3	K	W1056	006	18		28-26-11	ALL
L00072		0320/188/R029		LIGHT-ELEC/ELEX EQUIP CTR				ALL
	G		W0902	A-L			33-31-41	ALL
	P		W0902	A-K			33-31-41	ALL
L00073		0330/188/R044		LIGHT-ELEC/ELEX EQUIP CTR				ALL
	G		W0902	A-T			33-31-41	ALL
	P		W0902	A-J			33-31-41	ALL
L00074		0268/193/R040		LIGHT-ELEC/ELEX EQUIP CTR				ALL
	G		W0902	A-H			33-31-41	ALL
	P		W0902	A-F			33-31-41	ALL
L00075		0225/200/R045		LIGHT-ELEC/ELEX EQUIP CTR				ALL
	G		W0902	A-E			33-31-41	ALL
	P		W0902	A-G			33-31-41	ALL
L00076		0325/193/L023		LIGHT-ELEC/ELEX EQUIP CTR				ALL
	G		W0902	A-N			33-31-41	ALL
	P		W0902	A-M			33-31-41	ALL
L00077		0329/193/L050		LIGHT-ELEC/ELEX EQUIP CTR				ALL
	BLK		W0902	A-U			33-31-41	ALL
	WHT		W0902	A-V			33-31-41	ALL
L00078		0215/200/L048		LIGHT-ELEC/ELEX EQUIP CTR				ALL
	G		W0902	A-R			33-31-41	ALL
	P		W0902	A-P			33-31-41	ALL
L00079		0152/208/R012		LIGHT-ELEC/ELEX EQUIP CTR				ALL
	G		W0902	A-C			33-31-41	ALL
	P		W0902	A-A			33-31-41	ALL
L00080		0152/208/L012		LIGHT-ELEC/ELEX EQUIP CTR				ALL
	G		W0902	A-D			33-31-41	ALL
	P		W0902	A-B			33-31-41	ALL

HOOKUP LIST

D280T132

91-21-51

Section L00000

Page 4

Mar 07/2008



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
L00081		P034-00/ /		LIGHT-HOT BUS WARN,EXT PWR				ALL
	1	C	W0026	050	16		24-41-11	ALL
	2	C	W0026	063	16		24-41-11	ALL
L00082		P030-00/ /		LIGHT-AC CONNECTED				ALL
	1	C	W0248	019	24		24-41-12	ALL
	1	C	W0248	045	24		24-41-12	ALL
	2	C	W0248	046	20		24-41-12	ALL
L00083		P030-00/ /		LIGHT-PWR NOT IN USE				ALL
	1	C	W0248	045	24		24-41-12	ALL
	2	C	W0248	026	24		24-41-12	ALL

HOOKUP LIST
D280T132

91-21-51
Section L00000
Page 5 End
Mar 07/2008



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
L00111		0738/170/L113		LAMP-WING LANDING,L				ALL
	=G	M	W0602	083	12		33-42-11	ALL
	=P	M	W0602	082	12		33-42-11	ALL
L00112		0738/170/R113		LAMP-WING LANDING,R				ALL
	=G	M	W0656	078	12		33-42-11	ALL
	=P	M	W0656	077	12		33-42-11	ALL
L00113		0263/112/L009		LAMP-NOSE GEAR LANDING,L				ALL
	=G	M	W1304	004	10		33-42-11	ALL
	=P	M	W1304	003	10		33-42-11	ALL
L00114		0263/112/R009		LAMP-NOSE GEAR LANDING,R				ALL
	=G	M	W1304	002	10		33-42-11	ALL
	=P	M	W1304	001	10		33-42-11	ALL
L00115		0733/170/L106		LAMP-RWY TURNOFF,L				ALL
	=G	M	W0602	119	16		33-42-21	ALL
	=P	M	W0602	118	16		33-42-21	ALL
L00116		0733/170/R106		LAMP-RWY TURNOFF,R				ALL
	=G	M	W0656	063	16		33-42-21	ALL
	=P	M	W0656	062	16		33-42-21	ALL
L00117		1020/185/R044		LIGHT-R MAIN WHEEL WELL				ALL
	=G	N	W0932	004	16		33-31-11	ALL
	=P	G7	W0932	003	16		33-31-11	ALL
L00118		1005/185/R044		LIGHT-R MAIN WHEEL WELL				ALL
	=G	N	W0932	004	16		33-31-11	ALL
	=G	N	W0932	006	16		33-31-11	ALL
	=P	G7	W0932	003	16		33-31-11	ALL
	=P	G7	W0932	007	16		33-31-11	ALL
L00119		P001-03/ /		LIGHT-AUTOBRAKE				ALL
	1	1A	W0013	152	22		33-16-13	ALL
	2	1A	W0013	157	24		32-42-12	ALL
	3	1A	W0013	131	22		33-16-13	ALL
	DED		W0013	131Z			33-16-13	ALL
	DED		W0013	152Z			33-16-13	ALL

HOOKUP LIST

D280T132

91-21-51

Section L00100

Page 1

Mar 07/2008

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
L00119		P001-03/ /		LIGHT-AUTOBRAKE (continued)				ALL
	DED		W0013	157Z			32-42-12	ALL
L00122		P031-00/ /		LIGHT-HOT BUS WARN,AC TIE BUS				ALL
	1	C	W1016	019	18		24-21-51	ALL
	2	C	W1016	020	18		24-21-51	ALL
L00123		P032-00/ /		LIGHT-HOT BUS WARN,AC TIE BUS				ALL
	1	C	W1020	015	18		24-21-51	ALL
	2	C	W1020	016	18		24-21-51	ALL
L00124		P034-00/ /		LIGHT-HOT BUS WARN,AC TIE BUS				ALL
	1	C	W0026	049	18		24-21-51	ALL
	2	C	W0026	062	18		24-21-51	ALL
L00125		P032-00/ /		LIGHT-HOT BUS WARN,R 115V AC				ALL
	1	C	W1020	010	18		24-21-21	ALL
	2	C	W1020	011	18		24-21-21	ALL
L00126		P032-00/ /		LT-HOT BUS WARN,R GEN				ALL
	1	C	W1020	013	18		24-21-21	ALL
	2	C	W1020	014	18		24-21-21	ALL
L00127		P031-00/ /		LIGHT-HOT BUS WARN,L 115V AC				ALL
	1	C	W1016	016	18		24-21-11	ALL
	2	C	W1016	018	18		24-21-11	ALL
L00128		P031-00/ /		LT-HOT BUS WARN,L GEN				ALL
	1	C	W1016	012	18		24-21-11	ALL
	2	C	W1016	017	18		24-21-11	ALL
L00131		0858/115/L010		LIGHT-AIR COND COMPT				ALL
	BLK		W0938	A-C			33-31-21	ALL
	WHT		W0938	A-D			33-31-21	ALL
L00132		0885/130/L062		LIGHT-AIR COND COMPT				ALL
	BLK		W0938	A-A			33-31-21	ALL
	WHT		W0938	A-B			33-31-21	ALL

HOOKUP LIST

D280T132

91-21-51

Section L00100

Page 2

Mar 07/2008



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
L00133		0865/118/R062		LIGHT-AIR COND COMPT				ALL
	BLK		W0980	A-A			33-31-21	ALL
	WHT		W0980	A-B			33-31-21	ALL
L00134		0917/115/R010		LIGHT-AIR COND COMPT				ALL
	BLK		W0980	A-C			33-31-21	ALL
	WHT		W0980	A-D			33-31-21	ALL
L00135		P034-00/ /		LIGHT-HOT BUS WARN,APU GEN				ALL
	1	C	W0026	028	18		24-21-41	ALL
	2	C	W0026	061	18		24-21-41	ALL
L00136		P001-03/ /		LIGHT-ALTITUDE ALERT				ALL
	1	1A	W0013	150	22		33-16-13	ALL
	2	1A	W0013	066	24		34-16-11	ALL
	3	1A	W0013	129	22		33-16-13	ALL
	DED		W0013	129Z			33-16-13	ALL
	DED		W0013	150Z			33-16-13	ALL
L00137		0648/144/R073		LIGHT-FORWARD CARGO EXTERIOR				050-099
L00137		0639/146/R072		LIGHT-FORWARD CARGO EXTERIOR				150-199, 275-299
	28V	E	W0660	018	20		33-31-61	ALL
	GND	E	W0660	007	20		33-31-61	050-099
	GND	E	W0660	065	20		33-31-61	150-154, 275-276
	GND	E	W0660	077	20		33-31-61	155-199, 277-299
	RTN	E	W0660	065	20		33-31-61	050-099, 155-199, 277-299
	CGND	E	W0660	077	20		33-31-61	150-154, 275-276
L00138		1384/143/R075		LIGHT-AFT CARGO EXTERIOR				ALL
	28V	E	W0662	018	20		33-31-61	ALL
	GND	E	W0662	009	20		33-31-61	050-099, 155-199, 277-299
	GND	E	W0662	065	20		33-31-61	150-154, 275-276
	RTN	E	W0662	065	20		33-31-61	050-099, 155-199, 277-299
	CGND	E	W0662	009	20		33-31-61	150-154, 275-276
L00139		1384/143/L075		LIGHT-BULK CARGO EXTERIOR				050-099, 150-199
	RTN	E	W0662	072	20		33-31-61	050-099, 150-199
	115V	E	W0662	071	20		33-31-61	050-099, 150-199
	CGND	E	W0662	007	20		33-31-61	050-099, 150-199

HOOKUP LIST

D280T132

91-21-51

Section L00100

Page 3

Mar 07/2008



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
L00140		1491/149/L069		LIGHT-BULK CARGO EXTERIOR				050-099, 150-199
	RTN	E	W0662	074	20		33-31-61	050-099, 150-199
	115V	E	W0662	073	20		33-31-61	050-099, 150-199
	CGND	E	W0662	008	20		33-31-61	050-099, 150-199
L00145		P035-00/ /		LIGHT-BAY F OFF				050-099
	=G	\$	W1066	569	22		25-53-13	050-099
	=G	\$	W1066	813	22		25-53-13	050-099
	=P	\$	W1066	814	22		25-53-13	050-099
L00149		P035-00/ /		LIGHT-BAY A OFF				050-099
	=G	\$	W1066	566	22		25-53-13	050-099
	=G	\$	W1066	567	22		25-53-13	050-099
	=P	\$	W1066	546	22		25-53-13	050-099
L00157		P039-00/ /		LIGHT-IND,PDU BAY A-B OFF				050-099
	=G	\$	W1068	567	22		25-53-23	050-099
	=G	\$	W1068	568	22		25-53-23	050-099
	=P	\$	W1068	544	22		25-53-23	050-099
L00158		P039-00/ /		LIGHT-IND,PDU BAY A OFF				050-099
	=G	\$	W1068	566	22		25-53-23	050-099
	=G	\$	W1068	567	22		25-53-23	050-099
	=P	\$	W1068	546	22		25-53-23	050-099
L00159		P039-00/ /		LIGHT-BAY A-B ON				050-099
	=G	\$	W1068	568	22		25-53-23	050-099
	=P	\$	W1068	541	22		25-53-23	050-099
L00161		0424/194/R035		LIGHT-FWD A CARGO COMPT				ALL
	=G	C	W0660	034	18		33-37-11	050-099
	=G	C	W0660	034	16		33-37-11	150-199, 275-299
	=P	C	W0660	033	18		33-37-11	050-099
	=P	C	W0660	035	18		33-37-11	050-099
	=P	C	W0660	033	16		33-37-11	150-199, 275-299
	=P	C	W0660	035	16		33-37-11	150-199, 275-299
L00162		0422/194/L032		LIGHT-FWD A CARGO COMPT				ALL
	=G	C	W0660	036	18		33-37-11	050-099
	=G	C	W0660	036	16		33-37-11	150-199, 275-299

HOOKUP LIST

D280T132

91-21-51

Section L00100

Page 4

Mar 07/2008



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
L00162		0422/194/L032		LIGHT-FWD A CARGO COMPT (continued)				ALL
	=P	C	W0660	035	18		33-37-11	050-099
	=P	C	W0660	035	16		33-37-11	150-199, 275-299
L00163		0489/194/R031		LIGHT-FWD B CARGO COMPT				050-099, 275-299
L00163		0489/193/R029		LIGHT-FWD B CARGO COMPT				150-199
	=G	C	W0660	038	18		33-37-11	050-099
	=G	C	W0660	038	16		33-37-11	150-199, 275-299
	=P	C	W0660	037	18		33-37-11	050-099
	=P	C	W0660	039	18		33-37-11	050-099
	=P	C	W0660	037	16		33-37-11	150-199, 275-299
	=P	C	W0660	039	16		33-37-11	150-199, 275-299
L00164		0489/194/L030		LIGHT-FWD B CARGO COMPT				050-099
L00164		0489/193/L029		LIGHT-FWD B CARGO COMPT				150-199, 275-299
	=G	C	W0660	040	18		33-37-11	050-099
	=G	C	W0660	040	16		33-37-11	150-199, 275-299
	=P	C	W0660	039	18		33-37-11	050-099
	=P	C	W0660	039	16		33-37-11	150-199, 275-299
L00165		0577/194/R031		LIGHT-FWD B CARGO COMPT				050-099, 275-299
L00165		0577/193/R029		LIGHT-FWD B CARGO COMPT				150-199
	=G	C	W0660	042	18		33-37-11	050-099
	=G	C	W0660	042	16		33-37-11	150-199, 275-299
	=P	C	W0660	041	18		33-37-11	050-099
	=P	C	W0660	053	16		33-37-11	150-199, 275-299
L00166		0577/194/L031		LIGHT-FWD A CARGO COMPT				050-099
L00166		0577/193/L029		LIGHT-FWD A CARGO COMPT				150-199, 275-299
	=G	C	W0660	044	18		33-37-11	050-099
	=G	C	W0660	044	16		33-37-11	150-199, 275-299
	=P	C	W0660	043	18		33-37-11	050-099
	=P	C	W0660	051	18		33-37-11	050-099
	=P	C	W0660	043	16		33-37-11	150-199, 275-299
L00167		0643/193/R031		LIGHT-FWD B CARGO COMPT				050-099, 275-299
L00167		0643/192/R029		LIGHT-FWD B CARGO COMPT				150-199
	=G	C	W0660	046	18		33-37-11	050-099
	=G	C	W0660	046	16		33-37-11	150-199, 275-299
	=P	C	W0660	045	18		33-37-11	050-099
	=P	C	W0660	047	18		33-37-11	050-099

HOOKUP LIST

D280T132

91-21-51

Section L00100

Page 5

Mar 07/2008



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
L00167		0643/193/R031		LIGHT-FWD B CARGO COMPT (continued)				050-099, 275-299
L00167		0643/192/R029		LIGHT-FWD B CARGO COMPT (continued)				150-199
	=P	C	W0660	045	16		33-37-11	150-199, 275-299
	=P	C	W0660	047	16		33-37-11	150-199, 275-299
	=P	C	W0660	055	16		33-37-11	150-199, 275-299
L00168		0643/193/L031		LIGHT-FWD B CARGO COMPT				050-099
L00168		0643/192/L029		LIGHT-FWD B CARGO COMPT				150-199, 275-299
	=G	C	W0660	048	18		33-37-11	050-099
	=G	C	W0660	048	16		33-37-11	150-199, 275-299
	=P	C	W0660	047	18		33-37-11	050-099
	=P	C	W0660	047	16		33-37-11	150-199, 275-299
L00169		0709/193/R031		LIGHT-FWD A CARGO COMPT				050-099, 275-299
L00169		0709/192/R029		LIGHT-FWD A CARGO COMPT				150-199
	=G	C	W0660	050	18		33-37-11	050-099
	=G	C	W0660	050	16		33-37-11	150-199, 275-299
	=P	C	W0660	049	18		33-37-11	050-099
	=P	C	W0660	049	16		33-37-11	150-199, 275-299
	=P	C	W0660	059	16		33-37-11	150-199, 275-299
L00170		0709/193/L031		LIGHT-FWD A CARGO COMPT				050-099, 275-299
L00170		0709/192/L029		LIGHT-FWD A CARGO COMPT				150-199
	=G	C	W0660	052	18		33-37-11	050-099
	=G	C	W0660	052	16		33-37-11	150-199, 275-299
	=P	C	W0660	049	18		33-37-11	050-099
	=P	C	W0660	051	18		33-37-11	050-099
	=P	C	W0660	049	16		33-37-11	150-199, 275-299
L00172		D0527/141/R065		LIGHT-FWD CARGO DOOR				ALL
	=G	D	W0960	018	20		33-31-61	ALL
	=G	D	W0960	028	20		33-31-61	ALL
	=P	D	W0960	017	20		33-31-61	ALL
	=P	D	W0960	027	20		33-31-61	ALL
L00173		D0569/141/R065		LIGHT-FWD CARGO DOOR				ALL
	=G	D	W0960	028	20		33-31-61	ALL
	=P	D	W0960	027	20		33-31-61	ALL

HOOKUP LIST

D280T132

91-21-51

Section L00100

Page 6

Mar 07/2008



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
L00174		P028-00/ /		LIGHT-FUELING VALVE,L AUX TANK				ALL
	1	K	W1056	039	18		28-21-13	ALL
	1	K	W1056	052	18		28-21-13	ALL
	2	K	W1056	043	18		28-21-13	ALL
	3	K	W1056	036	18		28-21-13	ALL
	3	K	W1056	040	18		28-21-13	ALL
L00175		P028-00/ /		LIGHT-FUELING VALVE,R AUX TANK				ALL
	1	K	W1056	041	18		28-21-13	ALL
	1	K	W1056	046	18		28-21-13	ALL
	2	K	W1056	044	18		28-21-13	ALL
	3	K	W1056	042	18		28-21-13	ALL
	3	K	W1056	045	18		28-21-13	ALL
L00178		1680/255/R059		LIGHT-TAILCONE COMPT				ALL
	BLK		W0242	A-A			33-31-31	ALL
	WHT		W0242	A-B			33-31-31	ALL
L00179		1833/242/R034		LIGHT-TAILCONE COMPT				ALL
	BLK		W0242	A-C			33-31-31	ALL
	WHT		W0242	A-D			33-31-31	ALL
L00180		1834/219/R018		LIGHT-APU COMPT				ALL
	BLK		W0270	A-A			33-31-31	ALL
	WHT		W0270	A-B			33-31-31	ALL
L00181		1834/218/L017		LIGHT-APU COMPT				ALL
	BLK		W0270	A-C			33-31-31	ALL
	WHT		W0270	A-D			33-31-31	ALL
L00182		0344/280/L072		LIGHT-LEFT ENTRY,FWD				ALL
	=G	C	W1224	035	20		33-22-11	ALL
	=P	C	W1224	033	20		33-22-11	ALL
L00183		0344/280/R072		LIGHT-RIGHT ENTRY,FWD				ALL
	=G	C	W1230	020	20		33-22-11	ALL
	=P	C	W1230	021	20		33-22-11	ALL
L00184		0290/280/L052		LIGHT-LEFT ATTENDANT WORK,FWD				ALL
	=G	C	W1224	021	20		33-22-31	ALL

HOOKUP LIST

D280T132

91-21-51

Section L00100

Page 7

Mar 07/2008



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
L00184		0290/280/L052		LIGHT-LEFT ATTENDANT WORK,FWD (continued)				ALL
	=P	C	W1224	019	20		33-22-31	ALL
L00185		0318/280/R007		LIGHT-CENTER ATTENDANT WORK,FWD RIGHT				275-299
	=G	C	W1230	007	20		33-22-31	275-299
	=G	C	W1230	008	20		33-22-31	275-299
	=P	C	W1230	009	20		33-22-31	275-299
	=P	C	W1230	010	20		33-22-31	275-299
L00186		1532/280/L070		LIGHT-LEFT ENTRY,AFT				ALL
	=G	C	W1240	026	18		33-22-11	ALL
	=P	C	W1240	024	18		33-22-11	ALL
L00187		1537/280/R070		LIGHT-RIGHT ENTRY,AFT				ALL
	=G	C	W1240	028	18		33-22-11	ALL
	=P	C	W1240	032	18		33-22-11	ALL
L00188		1536/277/L066		LIGHT-LEFT ATTENDANT WORK,AFT				050-099
L00188		1521/280/L024		LIGHT-LEFT ATTENDANT WORK,AFT				150-199, 275-299
	=G	C	W1240	017	18		33-22-31	050-099, 150-199
	=G	C	W1240	018	18		33-22-31	275-299
	=P	C	W1240	016	18		33-22-31	050-099, 150-199
	=P	C	W1240	006	18		33-22-31	275-299
L00189		1537/277/R066		LIGHT-RIGHT ATTENDANT WORK,AFT				050-099
L00189		1521/280/R024		LIGHT-RIGHT ATTENDANT WORK,AFT				150-199, 275-299
	=G	C	W1240	018	18		33-22-31	050-099, 150-199
	=G	C	W1240	017	18		33-22-31	275-299
	=P	C	W1240	006	18		33-22-31	050-099, 150-199
	=P	C	W1240	016	18		33-22-31	275-299
L00190		0316/280/L007		LIGHT-CENTER ATTENDANT WORK,FWD LEFT				275-299
	=G	C	W1230	008	20		33-22-31	275-299
	=P	C	W1230	010	20		33-22-31	275-299
L00191		0325/280/L029		SOCKET-ENTRY CEILING				ALL
	=G	E	W1228	045	20		33-22-11	050-099
	=G	C	W1228	045	20		33-22-11	150-199, 275-299
	BLK		W1228	D-A			33-22-11	ALL
	BLK		W1228	D-B			33-22-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section L00100

Page 8

Mar 07/2008



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
L00191		0325/280/L029		SOCKET-ENTRY CEILING (continued)				ALL
	WHT		W1228	D-C			33-22-11	ALL
	WHT		W1228	D-D			33-22-11	ALL
L00192		0824/280/L018		LIGHT-CENTER ATTENDANT WORK,MID LEFT				050-099
L00192		0927/280/L010		LIGHT-CENTER ATTENDANT WORK,MID LEFT				150-199
L00192		0808/280/L010		LIGHT-CENTER ATTENDANT WORK,MID LEFT				275-299
	=G	C	W0110	005	18		33-22-31	050-099, 275-299
	=G	C	W0110	008	18		33-22-31	050-099, 275-299
	=G	C	W0122	043	18		33-22-31	150-199
	=G	C	W0122	044	18		33-22-31	150-199
	=P	C	W0110	006	18		33-22-31	050-099, 275-299
	=P	C	W0122	042	18		33-22-31	150-199
L00193		0824/280/R018		LIGHT-CENTER ATTENDANT WORK,MID RIGHT				050-099
L00193		0927/280/R010		LIGHT-CENTER ATTENDANT WORK,MID RIGHT				150-199
L00193		0808/280/R010		LIGHT-CENTER ATTENDANT WORK,MID RIGHT				275-299
	=G	C	W0110	008	18		33-22-31	050-099
	=G	C	W0122	044	18		33-22-31	150-199
	=G	C	W0110	005	18		33-22-31	275-299
	=P	C	W0110	007	18		33-22-31	050-099, 275-299
	=P	C	W0122	045	18		33-22-31	150-199
L00194		0356/280/L038		LIGHT-ATTENDANT CALL,FWD L				050-099, 150-199
L00194		0356/280/L044		LIGHT-ATTENDANT CALL,FWD L				275-276, 280-299
L00194		0356/280/L043		LIGHT-ATTENDANT CALL,FWD L				275-299
	3	C	W0665	030	20		23-42-11	050-099, 162-199
	3	C	W0104	054	20		23-42-11	151-157
	L1	C	W0665	005	22		23-42-11	050-099, 162-199
	L1	C	W0104	051	22		23-42-11	151-157
	=G	\$	W0104	054	20		23-42-11	150, 275-299
	=P	\$	W0104	051	22		23-42-11	150, 275-299
L00195		0356/280/R038		LT-ATTENDANT CALL,FWD R				050-099, 151-199
L00195		0356/280/R038		LIGHT-ATTENDANT CALL,FWD R				150
L00195		0356/280/R044		LT-ATTENDANT CALL,FWD R				275-276, 280-299
L00195		0356/280/R043		LIGHT-ATTENDANT CALL,FWD R				275-299
	3	C	W0665	031	20		23-42-11	050-099, 162-199
	3	C	W0102	054	20		23-42-11	151-157
	L1	C	W0665	004	22		23-42-11	050-099, 162-199
	L1	C	W0102	051	22		23-42-11	151-157

HOOKUP LIST

D280T132

91-21-51

Section L00100

Page 9

Mar 07/2008



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
L00195		0356/280/R038		LT-ATTENDANT CALL,FWD R (continued)				050-099, 151-199
L00195		0356/280/R038		LIGHT-ATTENDANT CALL,FWD R (continued)				150
L00195		0356/280/R044		LT-ATTENDANT CALL,FWD R (continued)				275-276, 280-299
L00195		0356/280/R043		LIGHT-ATTENDANT CALL,FWD R (continued)				275-299
	=G	\$	W0102	054	20		23-42-11	150, 275-299
	=P	\$	W0102	051	22		23-42-11	150, 275-299
L00196		851/280/L 38		LIGHT-ATTEND CALL MID L				050-099, 150-154, 156, 162-199
L00196		0851/280/L038		LIGHT-ATTENDANT CALL,MID L				155, 157
L00196		0888/280/L 38		LIGHT-ATTENDANT CALL				275-276
L00196		0888/275/L054		LIGHT-ATTENDANT CALL,MID L				275-278
L00196		0888/280/L 38		LIGHT-ATTEND CALL				277-299
	3	C	W0665	032	20		23-42-11	155, 157
	L1	C	W0665	008	22		23-42-11	155, 157
	=G	\$	W1113	004	20		23-42-11	050-099, 150-154, 156, 162-199, 277-299
	=G	\$	W0665	032	20		23-42-11	275-276
	=P	\$	W1113	001	22		23-42-11	050-099, 150-154, 156, 162-199, 277-299
	=P	\$	W0665	008	22		23-42-11	275-276
L00197		1505/280/L032		LIGHT-ATTENDANT CALL,AFT L				050-099, 150-199
L00197		1506/280/L033		LIGHT-ATTENDANT CALL,AFT L				275-276, 280-299
L00197		1471/280/L043		LIGHT-ATTENDANT CALL,AFT L				275-299
	=G	\$	W1123	054	20		23-42-11	050-099, 150-199
	=G	\$	W0106	054	20		23-42-11	275-299
	=P	\$	W1123	051	22		23-42-11	050-099, 150-199
	=P	\$	W0106	051	22		23-42-11	275-299
L00198		1505/280/R032		LIGHT-ATTENDANT CALL,AFT R				050-099, 150-199
L00198		1471/280/R043		LIGHT-ATTENDANT CALL,AFT R				275-299
	=G	\$	W1125	054	20		23-42-11	050-099, 150-199
	=G	\$	W0108	054	20		23-42-11	275-299
	=P	\$	W1125	051	22		23-42-11	050-099, 150-199
	=P	\$	W0108	051	22		23-42-11	275-299

HOOKUP LIST

D280T132

91-21-51

Section L00100

Page 10 End

Mar 07/2008



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
L00201		0284/280/R035		LIGHT-FWD GALLEY				ALL
	=G	E	W1228	100	20		33-27-11	ALL
	=G	E	W1228	105	20		33-27-11	ALL
	BLK		W1228	B-A			33-27-11	ALL
	BLK		W1228	B-B			33-27-11	ALL
	WHT		W1228	B-C			33-27-11	ALL
	WHT		W1228	B-D			33-27-11	ALL
L00202		0281/280/R035		LIGHT-FWD GALLEY				ALL
	=G	E	W1228	092	20		33-27-11	ALL
	=G	E	W1228	097	20		33-27-11	ALL
	BLK		W1228	A-A			33-27-11	ALL
	BLK		W1228	A-B			33-27-11	ALL
	WHT		W1228	A-C			33-27-11	ALL
	WHT		W1228	A-D			33-27-11	ALL
L00203		1578/280/L021		LIGHT-AFT GALLEY				ALL
	=G	E	W0816	018	20		33-27-11	ALL
	=G	E	W0816	026	20		33-27-11	ALL
	BLK		W0816	D-A			33-27-11	ALL
	BLK		W0816	D-B			33-27-11	ALL
	WHT		W0816	D-C			33-27-11	ALL
	WHT		W0816	D-D			33-27-11	ALL
L00204		1578/280/R021		LIGHT-AFT GALLEY				ALL
	=G	E	W0818	514	20		33-27-11	050-099, 275-299
	=G	E	W0818	533	20		33-27-11	050-099, 275-299
	BLK		W0816	B-A			33-27-11	ALL
	BLK		W0816	B-B			33-27-11	ALL
	WHT		W0816	B-C			33-27-11	ALL
	WHT		W0816	B-D			33-27-11	ALL
L00205		1574/280/L021		LIGHT-AFT GALLEY				ALL
	BLK		W0818	D-A			33-27-11	ALL
	BLK		W0818	D-B			33-27-11	ALL
	WHT		W0818	D-C			33-27-11	ALL
	WHT		W0818	D-D			33-27-11	ALL
L00206		1574/280/R021		LIGHT-AFT GALLEY				ALL
	=G	E	W0818	514	20		33-27-11	150-199
	=G	E	W0818	533	20		33-27-11	150-199

HOOKUP LIST
D280T132

91-21-51
Section L00200
Page 1
Mar 07/2008



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
L00206		1574/280/R021		LIGHT-AFT GALLEY (continued)				ALL
	BLK		W0818	A-A			33-27-11	ALL
	BLK		W0818	A-B			33-27-11	ALL
	WHT		W0818	A-C			33-27-11	ALL
	WHT		W0818	A-D			33-27-11	ALL
L00207		1556/280/L035		LIGHT-AFT GALLEY				ALL
	= G	E	W0816	005	22		33-27-11	ALL
	= G	E	W0816	013	20		33-27-11	ALL
	BLK		W0816	C-A			33-27-11	ALL
	BLK		W0816	C-B			33-27-11	ALL
	WHT		W0816	C-C			33-27-11	ALL
	WHT		W0816	C-D			33-27-11	ALL
L00208		1556/280/R035		LIGHT-AFT GALLEY				ALL
	= G	E	W0818	523	22		33-27-11	050-099, 275-299
	= G	E	W0818	535	20		33-27-11	050-099, 275-299
	BLK		W0816	A-A			33-27-11	ALL
	BLK		W0816	A-B			33-27-11	ALL
	WHT		W0816	A-C			33-27-11	ALL
	WHT		W0816	A-D			33-27-11	ALL
L00209		1556/280/L031		LIGHT-AFT GALLEY				ALL
	BLK		W0818	B-A			33-27-11	ALL
	BLK		W0818	B-B			33-27-11	ALL
	WHT		W0818	B-C			33-27-11	ALL
	WHT		W0818	B-D			33-27-11	ALL
L00210		1556/280/R031		LIGHT-AFT GALLEY				ALL
	= G	E	W0818	523	22		33-27-11	150-199
	= G	E	W0818	535	20		33-27-11	150-199
	BLK		W0818	C-A			33-27-11	ALL
	BLK		W0818	C-B			33-27-11	ALL
	WHT		W0818	C-C			33-27-11	ALL
	WHT		W0818	C-D			33-27-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section L00200

Page 2

Mar 07/2008



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
L00211		851/280/R 38		LIGHT-ATTEND CALL MID R				050-099, 150-154, 156, 162-199
L00211		0851/280/R038		LIGHT-ATTENDANT CALL,MID R				155, 157
L00211		0888/280/R 38		LIGHT-ATTENDANT CALL				275-276
L00211		0888/275/R054		LIGHT-ATTENDANT CALL,MID R				275-278
L00211		0888/280/R 38		LIGHT-ATTEND CALL				277-299
	3	C	W0665	033	20		23-42-11	155, 157
	L1	C	W0665	007	22		23-42-11	155, 157
	=G	\$	W1115	004	20		23-42-11	050-099, 150-154, 156, 162-199, 277-299
	=G	\$	W0665	033	20		23-42-11	275-276
	=P	\$	W1115	001	22		23-42-11	050-099, 150-154, 156, 162-199, 277-299
	=P	\$	W0665	007	22		23-42-11	275-276
L00213		0284/283/L030		SOCKET-FLIGHT DECK ENTRY				ALL
	=G	E	W1228	054	22		33-22-41	ALL
	=G	E	W1228	059	20		33-22-41	ALL
	BLK		W1228	C-A			33-22-41	ALL
	BLK		W1228	C-B			33-22-41	ALL
	WHT		W1228	C-C			33-22-41	ALL
	WHT		W1228	C-D			33-22-41	ALL
L00215		0334/280/0000		SOCKET-FWD DIRECT CEILING				050-099, 150-199, 275-278
L00215		0328/280/0000		SOCKET-FWD DIRECT CEILING				280-299
	=1	C	W0114	004	22		33-22-41	ALL
	=2	C	W0114	005	22		33-22-41	ALL
	=3	C	W0114	006	22		33-22-41	ALL
	=4	C	W0114	007	22		33-22-41	ALL
	=G	E	W0114	003	22		33-22-41	ALL
	=G	E	W0114	009	22		33-22-41	ALL
	=G	E	W0114	018	22		33-22-41	ALL
	=G	E	W0114	022	22		33-22-41	ALL
L00216		0340/280/0000		SOCKET-FWD DIRECT CEILING				ALL
	BLK		W0114	C-A			33-22-41	ALL
	BLK		W0114	C-B			33-22-41	ALL
	WHT		W0114	C-C			33-22-41	ALL
	WHT		W0114	C-D			33-22-41	ALL
L00217		0344/280/0000		SOCKET-FWD DIRECT CEILING				ALL
	BLK		W0114	B-A			33-22-41	ALL
	BLK		W0114	B-B			33-22-41	ALL

HOOKUP LIST

D280T132

91-21-51

Section L00200

Page 3

Mar 07/2008



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
L00217		0344/280/0000		SOCKET-FWD DIRECT CEILING (continued)				ALL
	WHT		W0114	B-C			33-22-41	ALL
	WHT		W0114	B-D			33-22-41	ALL
L00218		0331/280/0000		SOCKET-FWD DIRECT CEILING				ALL
	BLK		W0114	E-A			33-22-41	ALL
	BLK		W0114	E-B			33-22-41	ALL
	WHT		W0114	E-C			33-22-41	ALL
	WHT		W0114	E-D			33-22-41	ALL
L00219		1526/284/L008		SOCKET-AFT DIRECT CEILING				050-099
L00219		1502/284/L008		SOCKET-AFT DIRECT CEILING				150-199
	=1	C	W0100	013	22		33-22-42	050-099
	=2	C	W0100	012	22		33-22-42	050-099
	=3	C	W0100	007	22		33-22-42	050-099
	=4	C	W0100	006	22		33-22-42	050-099
	=G	E	W0100	001	22		33-22-42	050-099
	=G	E	W0100	008	22		33-22-42	050-099
	=G	E	W0100	009	22		33-22-42	050-099
	=G	C	W0818	505	20		33-22-42	150-199
	=P	C	W0818	195	20		SPARE	150-199
	=P	C	W0818	602	20		33-22-42	150-199
L00220		1527/284/R020		SOCKET-AFT DIRECT CEILING				050-099
L00220		1502/280/0000		SOCKET-AFT DIRECT CEILING				150-199
	=1	C	W0100	028	22		33-22-42	050-099
	=1	C	W0110	032	22		33-22-42	275-299
	=2	C	W0100	029	22		33-22-42	050-099
	=2	C	W0110	033	22		33-22-42	275-299
	=3	C	W0100	034	22		33-22-42	050-099
	=3	C	W0110	031	22		33-22-42	275-299
	=4	C	W0100	033	22		33-22-42	050-099
	=4	C	W0110	034	22		33-22-42	275-299
	=G	C	W0818	505	20		33-22-42	150-199
	=G	C	W0818	607	20		33-22-42	150-199
	=G	E	W0110	011	22		33-22-42	275-299
	=G	E	W0110	027	22		33-22-42	275-299
	=G	E	W0110	037	22		33-22-42	275-299
	=G	E	W0110	050	22		33-22-42	275-299
	=P	C	W0818	195	20		SPARE	150-199
	=P	C	W0818	601	20		33-22-42	150-199

HOOKUP LIST

D280T132

91-21-51

Section L00200

Page 4

Mar 07/2008



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
L00220		1527/284/R020		SOCKET-AFT DIRECT CEILING (continued)				050-099
L00220		1502/280/0000		SOCKET-AFT DIRECT CEILING (continued)				150-199
	= P	C	W0818	602	20		33-22-42	150-199
L00221		1500/284/000		SOCKET-AFT DIRECT CEILING				050-099
	BLK		W0100	G-A			33-22-42	050-099
	BLK		W0100	G-B			33-22-42	050-099
	BLK		W0110	D-A			33-22-42	275-299
	BLK		W0110	D-B			33-22-42	275-299
	WHT		W0100	G-C			33-22-42	050-099
	WHT		W0100	G-D			33-22-42	050-099
	WHT		W0110	D-C			33-22-42	275-299
	WHT		W0110	D-D			33-22-42	275-299
L00222		1494/284/000		SOCKET-AFT DIRECT CEILING				050-099
	BLK		W0100	H-A			33-22-42	050-099
	BLK		W0100	H-B			33-22-42	050-099
	BLK		W0110	C-A			33-22-42	275-299
	BLK		W0110	C-B			33-22-42	275-299
	WHT		W0100	H-C			33-22-42	050-099
	WHT		W0100	H-D			33-22-42	050-099
	WHT		W0110	C-C			33-22-42	275-299
	WHT		W0110	C-D			33-22-42	275-299
L00223		1455/284/L039		SOCKET-AFT DIRECT CEILING				275-299
	= 1	C	W0106	029	22		33-22-42	275-299
	= 2	C	W0106	030	22		33-22-42	275-299
	= 3	C	W0106	057	22		33-22-42	275-299
	= 4	C	W0106	056	22		33-22-42	275-299
	= G	E	W0106	022	22		33-22-42	275-299
	= G	E	W0106	025	22		33-22-42	275-299
	= G	E	W0106	044	22		33-22-42	275-299
L00224		1455/284/R039		SOCKET-AFT DIRECT CEILING				275-299
	= 1	C	W0108	024	22		33-22-42	275-299
	= 2	C	W0108	025	22		33-22-42	275-299
	= 3	C	W0108	026	22		33-22-42	275-299
	= 4	C	W0108	027	22		33-22-42	275-299
	= G	E	W0108	014	22		33-22-42	275-299
	= G	E	W0108	023	22		33-22-42	275-299

HOOKUP LIST

D280T132

91-21-51

Section L00200

Page 5

Mar 07/2008



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
L00225		1455/284/L043		SOCKET-AFT DIRECT CEILING				275-299
	BLK		W0106	L-A			33-22-42	275-299
	BLK		W0106	L-B			33-22-42	275-299
	WHT		W0106	L-C			33-22-42	275-299
	WHT		W0106	L-D			33-22-42	275-299
L00226		1455/284/R036		SOCKET-AFT DIRECT CEILING				275-299
	BLK		W0108	K-A			33-22-42	275-299
	BLK		W0108	K-B			33-22-42	275-299
	WHT		W0108	K-C			33-22-42	275-299
	WHT		W0108	K-D			33-22-42	275-299
L00227		1455/284/L037		SOCKET-AFT DIRECT CEILING				275-299
	BLK		W0106	N-A			33-22-42	275-299
	BLK		W0106	N-B			33-22-42	275-299
	WHT		W0106	N-C			33-22-42	275-299
	WHT		W0106	N-D			33-22-42	275-299
L00228		1455/284/R041		SOCKET-AFT DIRECT CEILING				275-299
	BLK		W0108	I-A			33-22-42	275-299
	BLK		W0108	I-B			33-22-42	275-299
	WHT		W0108	I-C			33-22-42	275-299
	WHT		W0108	I-D			33-22-42	275-299
L00230		0816/280/L010		SOCKET-AFT DIRECT CEILING				050-099
L00230		0654+107/280/L010		SOCKET-AFT DIRECT CEILING				150-199
	=G	C	W0110	103	22		33-22-41	050-099, 150-199
	=P	C	W0110	102	22		33-22-41	050-099, 150-199
L00231		0816/280/R010		SOCKET-AFT DIRECT CEILING				050-099
L00231		0654+107/280/R010		SOCKET-AFT DIRECT CEILING				150-199
	=G	C	W0110	100	20		33-22-41	050-099, 150-199
	=G	C	W0110	103	22		33-22-41	050-099, 150-199
	=P	C	W0110	101	20		33-22-41	050-099, 150-199
	=P	C	W0110	102	22		33-22-41	050-099, 150-199
L00232		0411/280/L025		ASSEMBLY-INDIRECT CEILING LTS,FWD				275-299
	=G	E	W0822	076	20		33-21-11	275-299
	BLK		W0822	K-A			33-21-11	275-299
	BLK		W0822	K-B			33-21-11	275-299

HOOKUP LIST

D280T132

91-21-51

Section L00200

Page 6

Mar 07/2008



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
L00232		0411/280/L025		ASSEMBLY-INDIRECT CEILING LTS,FWD (continued)				275-299
	WHT		W0822	K-C			33-21-11	275-299
	WHT		W0822	K-D			33-21-11	275-299
L00233		0411/284/R025		ASSEMBLY-INDIRECT CEILING LTS,FWD				275-299
	= G	E	W0132	018	20		33-21-11	275-299
	BLK		W0132	L-A			33-21-11	275-299
	BLK		W0132	L-B			33-21-11	275-299
	WHT		W0132	L-C			33-21-11	275-299
	WHT		W0132	L-D			33-21-11	275-299
L00234		0499/280/L025		ASSEMBLY-INDIRECT CEILING LTS,FWD				ALL
	BLK		W0822	M-A			33-21-11	ALL
	BLK		W0822	M-B			33-21-11	ALL
	RED		W0822	M-E			33-21-11	ALL
	WHT		W0822	M-C			33-21-11	ALL
	WHT		W0822	M-D			33-21-11	ALL
L00235		0499/280/R025		ASSEMBLY-INDIRECT CEILING LTS,FWD				ALL
	BLK		W0822	N-A			33-21-11	ALL
	BLK		W0822	N-B			33-21-11	ALL
	RED		W0822	N-E			33-21-11	ALL
	WHT		W0822	N-C			33-21-11	ALL
	WHT		W0822	N-D			33-21-11	ALL
L00236		0411/284/L050		SOCKET-INDIRECT CEILING LTS,FWD				275-299
	= G	E	W0812	161	20		33-21-11	275-299
	BLK		W0812	B-A			33-21-11	275-299
	BLK		W0812	B-B			33-21-11	275-299
	WHT		W0812	B-C			33-21-11	275-299
	WHT		W0812	B-D			33-21-11	275-299
L00237		0411/284/R050		SOCKET-INDIRECT CEILING LTS,FWD				275-299
	= G	E	W0812	162	20		33-21-11	275-299
	BLK		W0812	A-A			33-21-11	275-299
	BLK		W0812	A-B			33-21-11	275-299
	WHT		W0812	A-C			33-21-11	275-299
	WHT		W0812	A-D			33-21-11	275-299

HOOKUP LIST

D280T132

91-21-51
Section L00200
Page 7
Mar 07/2008



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
L00238		0544/284/L050		SOCKET-INDIRECT CEILING LTS,FWD				050-099
L00238		0499/284/L050		SOCKET-INDIRECT CEILING LTS,FWD				150-199, 275-299
	= G	E	W0812	175	20		33-21-11	ALL
	BLK		W0812	D-A			33-21-11	ALL
	BLK		W0812	D-B			33-21-11	ALL
	WHT		W0812	D-C			33-21-11	ALL
	WHT		W0812	D-D			33-21-11	ALL
L00239		0499/284/R050		SOCKET-INDIRECT CEILING LTS,FWD				ALL
	= G	E	W0812	176	20		33-21-11	ALL
	BLK		W0812	C-A			33-21-11	ALL
	BLK		W0812	C-B			33-21-11	ALL
	WHT		W0812	C-C			33-21-11	ALL
	WHT		W0812	C-D			33-21-11	ALL
L00240		0587/280/L025		ASSEMBLY-INDIRECT CEILING LTS,FWD				ALL
	BLK		W0822	F-A			33-21-11	ALL
	BLK		W0822	F-B			33-21-11	ALL
	RED		W0822	F-E			33-21-11	ALL
	WHT		W0822	F-C			33-21-11	ALL
	WHT		W0822	F-D			33-21-11	ALL
L00241		0675/280/L025		ASSEMBLY-INDIRECT CEILING LTS,FWD				050-099
L00241		0680/280/L025		ASSEMBLY-INDIRECT CEILING LTS,FWD				150-199
L00241		0719/280/L025		ASSEMBLY-INDIRECT CEILING LTS,FWD				275-299
	BLK		W0822	H-A			33-21-11	050-099
	BLK		W0822	H-B			33-21-11	050-099
	BLK		W0822	H-A			33-21-13	150-199, 275-278
	BLK		W0822	H-B			33-21-13	150-199, 275-278
	RED		W0822	H-E			33-21-11	050-099
	RED		W0822	H-E			33-21-13	150-199, 275-278
	WHT		W0822	H-C			33-21-11	050-099
	WHT		W0822	H-D			33-21-11	050-099
	WHT		W0822	H-C			33-21-13	150-199, 275-278
	WHT		W0822	H-D			33-21-13	150-199, 275-278
L00242		0587/280/R025		ASSEMBLY-INDIRECT CEILING LTS,FWD				ALL
	BLK		W0822	G-A			33-21-11	ALL
	BLK		W0822	G-B			33-21-11	ALL
	RED		W0822	G-E			33-21-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section L00200

Page 8

Mar 07/2008



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
L00242		0587/280/R025		ASSEMBLY-INDIRECT CEILING LTS,FWD (continued)				ALL
	WHT		W0822	G-C			33-21-11	ALL
	WHT		W0822	G-D			33-21-11	ALL
L00243		0675/280/R025		ASSEMBLY-INDIRECT CEILING LTS,FWD				050-099
L00243		0654+109/280/R025		ASSEMBLY-INDIRECT CEILING LTS,FWD				150-199
L00243		0719/280/R025		ASSEMBLY-INDIRECT CEILING LTS,FWD				275-299
	BLK		W0822	J-A			33-21-11	050-099
	BLK		W0822	J-B			33-21-11	050-099
	BLK		W0822	J-A			33-21-13	150-199, 275-278
	BLK		W0822	J-B			33-21-13	150-199, 275-278
	RED		W0822	J-E			33-21-11	050-099
	RED		W0822	J-E			33-21-13	150-199, 275-278
	WHT		W0822	J-C			33-21-11	050-099
	WHT		W0822	J-D			33-21-11	050-099
	WHT		W0822	J-C			33-21-13	150-199, 275-278
	WHT		W0822	J-D			33-21-13	150-199, 275-278
L00244		0631/284/L050		SOCKET-INDIRECT CEILING LTS,FWD				050-099
L00244		0587/284/L050		SOCKET-INDIRECT CEILING LTS,FWD				150-199, 275-299
	= G	E	W0812	188	20		33-21-11	ALL
	BLK		W0812	E-A			33-21-11	ALL
	BLK		W0812	E-B			33-21-11	ALL
	WHT		W0812	E-C			33-21-11	ALL
	WHT		W0812	E-D			33-21-11	ALL
L00245		0719/284/L050		SOCKET-INDIRECT CEILING LTS,FWD				050-099
L00245		0680/284/L050		SOCKET-INDIRECT CEILING LTS,FWD				150-199
L00245		0763/284/L050		SOCKET-INDIRECT CEILING LTS,FWD				275-278
	= G	E	W0812	502	20		33-21-11	050-099
	= G	E	W0812	502	20		33-21-13	150-199, 275-278
	BLK		W0812	G-A			33-21-11	050-099
	BLK		W0812	G-B			33-21-11	050-099
	BLK		W0812	G-A			33-21-13	150-199, 275-278
	BLK		W0812	G-B			33-21-13	150-199, 275-278
	WHT		W0812	G-C			33-21-11	050-099
	WHT		W0812	G-D			33-21-11	050-099
	WHT		W0812	G-C			33-21-13	150-199, 275-278
	WHT		W0812	G-D			33-21-13	150-199, 275-278

HOOKUP LIST

D280T132

91-21-51

Section L00200

Page 9

Mar 07/2008



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
L00246		0587/284/R050		SOCKET-INDIRECT CEILING LTS,FWD				ALL
	= G	E	W0812	189	20		33-21-11	ALL
	BLK		W0812	F-A			33-21-11	ALL
	BLK		W0812	F-B			33-21-11	ALL
	WHT		W0812	F-C			33-21-11	ALL
	WHT		W0812	F-D			33-21-11	ALL
L00247		0675/284/R050		SOCKET-INDIRECT CEILING LTS,FWD				050-099
L00247		0654+109/284/R050		SOCKET-INDIRECT CEILING LTS,FWD				150-199
L00247		0700/284/R050		SOCKET-INDIRECT CEILING LTS,FWD				275-278
	= G	E	W0812	503	20		33-21-11	050-099
	= G	E	W0812	503	20		33-21-13	150-199, 275-278
	BLK		W0812	S-A			33-21-11	050-099
	BLK		W0812	S-B			33-21-11	050-099
	BLK		W0812	S-A			33-21-13	150-199, 275-278
	BLK		W0812	S-B			33-21-13	150-199, 275-278
	WHT		W0812	S-C			33-21-11	050-099
	WHT		W0812	S-D			33-21-11	050-099
	WHT		W0812	S-C			33-21-13	150-199, 275-278
	WHT		W0812	S-D			33-21-13	150-199, 275-278
L00250		0763/284/L050		SOCKET-INDIRECT CEILING LTS,MID				050-099
L00250		1042/284/L050		SOCKET-INDIRECT CEILING LTS,MID				150-199
L00250		0807/284/L050		SOCKET-INDIRECT CEILING LTS,MID				275-299
	= G	E	W0812	679	20		33-21-13	ALL
	BLK		W0812	H-A			33-21-13	ALL
	BLK		W0812	H-B			33-21-13	ALL
	WHT		W0812	H-C			33-21-13	ALL
	WHT		W0812	H-D			33-21-13	ALL
L00251		0763/284/R050		SOCKET-INDIRECT CEILING LTS,MID				050-099
L00251		1042/284/R050		SOCKET-INDIRECT CEILING LTS,MID				150-199
L00251		0785/284/R050		SOCKET-INDIRECT CEILING LTS,MID				275-299
	= G	E	W0812	680	20		33-21-13	ALL
	BLK		W0812	J-A			33-21-13	ALL
	BLK		W0812	J-B			33-21-13	ALL
	WHT		W0812	J-C			33-21-13	ALL
	WHT		W0812	J-D			33-21-13	ALL

HOOKUP LIST

D280T132

91-21-51

Section L00200

Page 10

Mar 07/2008



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
L00252		0847/284/L050		SOCKET-INDIRECT CEILING LTS,MID				050-099
L00252		0892/284/L050		SOCKET-INDIRECT CEILING LTS,MID				150-199
L00252		0851/284/L050		SOCKET-INDIRECT CEILING LTS,MID				275-299
	= G	E	W0812	692	20		33-21-13	ALL
	BLK		W0812	K-A			33-21-13	ALL
	BLK		W0812	K-B			33-21-13	ALL
	WHT		W0812	K-C			33-21-13	ALL
	WHT		W0812	K-D			33-21-13	ALL
L00253		0847/284/R050		SOCKET-INDIRECT CEILING LTS,MID				050-099
L00253		0892/284/R050		SOCKET-INDIRECT CEILING LTS,MID				150-199
L00253		0848/284/R050		SOCKET-INDIRECT CEILING LTS,MID				275-299
	= G	E	W0812	693	20		33-21-13	ALL
	BLK		W0812	L-A			33-21-13	ALL
	BLK		W0812	L-B			33-21-13	ALL
	WHT		W0812	L-C			33-21-13	ALL
	WHT		W0812	L-D			33-21-13	ALL
L00254		0976/284/L050		SOCKET-INDIRECT CEILING LTS,MID				050-099
L00254		0807/284/L050		SOCKET-INDIRECT CEILING LTS,MID				150-199
L00254		0932/284/L050		SOCKET-INDIRECT CEILING LTS,MID				275-299
	= G	E	W0812	706	20		33-21-13	ALL
	BLK		W0812	M-A			33-21-13	ALL
	BLK		W0812	M-B			33-21-13	ALL
	WHT		W0812	M-C			33-21-13	ALL
	WHT		W0812	M-D			33-21-13	ALL
L00255		0976/284/R050		SOCKET-INDIRECT CEILING LTS,MID				050-099
L00255		0764/284/R050		SOCKET-INDIRECT CEILING LTS,MID				150-199
L00255		0932/284/R050		SOCKET-INDIRECT CEILING LTS,MID				275-299
	= G	E	W0812	707	20		33-21-13	ALL
	BLK		W0812	N-A			33-21-13	ALL
	BLK		W0812	N-B			33-21-13	ALL
	WHT		W0812	N-C			33-21-13	ALL
	WHT		W0812	N-D			33-21-13	ALL
L00256		1064/284/L050		SOCKET-INDIRECT CEILING LTS,AFT				050-099
L00256		0976/284/L050		SOCKET-INDIRECT CEILING LTS,AFT				150-199
L00256		1020/284/L050		SOCKET-INDIRECT CEILING LTS,AFT				275-299
	= G	E	W0816	594	20		33-21-14	ALL

HOOKUP LIST

D280T132

91-21-51

Section L00200

Page 11

Mar 07/2008



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
L00256		1064/284/L050		SOCKET-INDIRECT CEILING LTS,AFT (continued)				050-099
L00256		0976/284/L050		SOCKET-INDIRECT CEILING LTS,AFT (continued)				150-199
L00256		1020/284/L050		SOCKET-INDIRECT CEILING LTS,AFT (continued)				275-299
	BLK		W0816	E-A			33-21-14	ALL
	BLK		W0816	E-B			33-21-14	ALL
	WHT		W0816	E-C			33-21-14	ALL
	WHT		W0816	E-D			33-21-14	ALL
L00257		1064/284/R050		SOCKET-INDIRECT CEILING LTS,AFT				050-099
L00257		0932/284/R050		SOCKET-INDIRECT CEILING LTS,AFT				150-199
L00257		1020/284/R050		SOCKET-INDIRECT CEILING LTS,AFT				275-299
	= G	E	W0816	595	20		33-21-14	ALL
	BLK		W0816	F-A			33-21-14	ALL
	BLK		W0816	F-B			33-21-14	ALL
	WHT		W0816	F-C			33-21-14	ALL
	WHT		W0816	F-D			33-21-14	ALL
L00258		1152/284/L050		SOCKET-INDIRECT CEILING LTS,AFT				050-099
L00258		1108/284/L050		SOCKET-INDIRECT CEILING LTS,AFT				150-199, 275-299
	= G	E	W0816	609	20		33-21-14	ALL
	BLK		W0816	G-A			33-21-14	ALL
	BLK		W0816	G-B			33-21-14	ALL
	WHT		W0816	G-C			33-21-14	ALL
	WHT		W0816	G-D			33-21-14	ALL
L00259		1152/284/R050		SOCKET-INDIRECT CEILING LTS,AFT				050-099
L00259		1108/284/R050		SOCKET-INDIRECT CEILING LTS,AFT				150-199, 275-299
	= G	E	W0816	610	20		33-21-14	ALL
	BLK		W0816	H-A			33-21-14	ALL
	BLK		W0816	H-B			33-21-14	ALL
	WHT		W0816	H-C			33-21-14	ALL
	WHT		W0816	H-D			33-21-14	ALL
L00260		1240/284/L050		SOCKET-INDIRECT CEILING LTS,AFT				050-099, 150-199
L00260		1252/284/L050		SOCKET-INDIRECT CEILING LTS,AFT				275-299
	= G	E	W0816	622	20		33-21-14	ALL
	BLK		W0816	J-A			33-21-14	ALL
	BLK		W0816	J-B			33-21-14	ALL
	WHT		W0816	J-C			33-21-14	ALL
	WHT		W0816	J-D			33-21-14	ALL

HOOKUP LIST

D280T132

91-21-51

Section L00200

Page 12

Mar 07/2008



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
L00261		1240/284/R050		SOCKET-INDIRECT CEILING LTS,AFT				050-099, 150-199
L00261		1252/284/R050		SOCKET-INDIRECT CEILING LTS,AFT				275-299
	= G	E	W0816	623	20		33-21-14	ALL
	BLK		W0816	K-A			33-21-14	ALL
	BLK		W0816	K-B			33-21-14	ALL
	WHT		W0816	K-C			33-21-14	ALL
	WHT		W0816	K-D			33-21-14	ALL
L00262		0763/280/L025		ASSEMBLY-INDIRECT CEILING LTS,MID				050-099
L00262		1042/280/L025		ASSEMBLY-INDIRECT CEILING LTS,MID				150-199
L00262		0785/280/L025		ASSEMBLY-INDIRECT CEILING LTS,MID				275-299
	BLK		W0822	P-A			33-21-13	ALL
	BLK		W0822	P-B			33-21-13	ALL
	RED		W0822	P-E			33-21-13	ALL
	WHT		W0822	P-C			33-21-13	ALL
	WHT		W0822	P-D			33-21-13	ALL
L00263		0763/280/R025		ASSEMBLY-INDIRECT CEILING LTS,MID				050-099
L00263		1042/280/R025		ASSEMBLY-INDIRECT CEILING LTS,MID				150-199
L00263		0785/280/R025		ASSEMBLY-INDIRECT CEILING LTS,MID				275-299
	BLK		W0822	R-A			33-21-13	ALL
	BLK		W0822	R-B			33-21-13	ALL
	RED		W0822	R-E			33-21-13	ALL
	WHT		W0822	R-C			33-21-13	ALL
	WHT		W0822	R-D			33-21-13	ALL
L00264		0847/280/L025		ASSEMBLY-INDIRECT CEILING LTS,MID				050-099
L00264		0892/280/L025		ASSEMBLY-INDIRECT CEILING LTS,MID				150-199
L00264		0848/280/L025		ASSEMBLY-INDIRECT CEILING LTS,MID				275-299
	BLK		W0822	S-A			33-21-13	ALL
	BLK		W0822	S-B			33-21-13	ALL
	RED		W0822	S-E			33-21-13	ALL
	WHT		W0822	S-C			33-21-13	ALL
	WHT		W0822	S-D			33-21-13	ALL
L00265		0847/280/R025		ASSEMBLY-INDIRECT CEILING LTS,MID				050-099
L00265		0892/280/R025		ASSEMBLY-INDIRECT CEILING LTS,MID				150-199
L00265		0848/280/R025		ASSEMBLY-INDIRECT CEILING LTS,MID				275-299
	BLK		W0822	T-A			33-21-13	ALL
	BLK		W0822	T-B			33-21-13	ALL
	RED		W0822	T-E			33-21-13	ALL

HOOKUP LIST

D280T132

91-21-51

Section L00200

Page 13

Mar 07/2008



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
L00265		0847/280/R025		ASSEMBLY-INDIRECT CEILING LTS,MID (continued)				050-099
L00265		0892/280/R025		ASSEMBLY-INDIRECT CEILING LTS,MID (continued)				150-199
L00265		0848/280/R025		ASSEMBLY-INDIRECT CEILING LTS,MID (continued)				275-299
	WHT		W0822	T-C			33-21-13	ALL
	WHT		W0822	T-D			33-21-13	ALL
L00266		0976/280/L025		ASSEMBLY-INDIRECT CEILING LTS,MID				050-099
L00266		0807/280/L025		ASSEMBLY-INDIRECT CEILING LTS,MID				150-199
L00266		0932/280/L025		ASSEMBLY-INDIRECT CEILING LTS,MID				275-299
	BLK		W0822	U-A			33-21-13	ALL
	BLK		W0822	U-B			33-21-13	ALL
	RED		W0822	U-E			33-21-13	ALL
	WHT		W0822	U-C			33-21-13	ALL
	WHT		W0822	U-D			33-21-13	ALL
L00267		0976/280/R025		ASSEMBLY-INDIRECT CEILING LTS,MID				050-099
L00267		0807/280/R025		ASSEMBLY-INDIRECT CEILING LTS,MID				150-199
L00267		0932/280/R025		ASSEMBLY-INDIRECT CEILING LTS,MID				275-299
	BLK		W0822	V-A			33-21-13	ALL
	BLK		W0822	V-B			33-21-13	ALL
	RED		W0822	V-E			33-21-13	ALL
	WHT		W0822	V-C			33-21-13	ALL
	WHT		W0822	V-D			33-21-13	ALL
L00268		1064/284/L025		ASSEMBLY-INDIRECT CEILING LTS,AFT				050-099
L00268		0976/284/L025		ASSEMBLY-INDIRECT CEILING LTS,AFT				150-199
L00268		1020/284/L025		ASSEMBLY-INDIRECT CEILING LTS,AFT				275-299
	BLK		W0824	K-A			33-21-14	ALL
	BLK		W0824	K-B			33-21-14	ALL
	RED		W0824	K-E			33-21-14	ALL
	WHT		W0824	K-C			33-21-14	ALL
	WHT		W0824	K-D			33-21-14	ALL
L00269		1064/284/R025		ASSEMBLY-INDIRECT CEILING LTS,AFT				050-099
L00269		0976/284/R025		ASSEMBLY-INDIRECT CEILING LTS,AFT				150-199
L00269		1020/284/R025		ASSEMBLY-INDIRECT CEILING LTS,AFT				275-299
	BLK		W0824	J-A			33-21-14	ALL
	BLK		W0824	J-B			33-21-14	ALL
	RED		W0824	J-E			33-21-14	ALL
	WHT		W0824	J-C			33-21-14	ALL

HOOKUP LIST

D280T132

91-21-51

Section L00200

Page 14

Mar 07/2008



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
L00269		1064/284/R025		ASSEMBLY-INDIRECT CEILING LTS,AFT (continued)				050-099
L00269		0976/284/R025		ASSEMBLY-INDIRECT CEILING LTS,AFT (continued)				150-199
L00269		1020/284/R025		ASSEMBLY-INDIRECT CEILING LTS,AFT (continued)				275-299
	WHT		W0824	J-D			33-21-14	ALL
L00270		1152/284/L025		ASSEMBLY-INDIRECT CEILING LTS,AFT				050-099
L00270		1108/284/L025		ASSEMBLY-INDIRECT CEILING LTS,AFT				150-199, 275-299
	BLK		W0824	A-A			33-21-14	ALL
	BLK		W0824	A-B			33-21-14	ALL
	RED		W0824	A-E			33-21-14	ALL
	WHT		W0824	A-C			33-21-14	ALL
	WHT		W0824	A-D			33-21-14	ALL
L00271		1152/284/R025		ASSEMBLY-INDIRECT CEILING LTS,AFT				050-099
L00271		1108/284/R025		ASSEMBLY-INDIRECT CEILING LTS,AFT				150-199, 275-299
	BLK		W0824	B-A			33-21-14	ALL
	BLK		W0824	B-B			33-21-14	ALL
	RED		W0824	B-E			33-21-14	ALL
	WHT		W0824	B-C			33-21-14	ALL
	WHT		W0824	B-D			33-21-14	ALL
L00272		1240/284/L025		ASSEMBLY-INDIRECT CEILING LTS,AFT				050-099, 150-199
L00272		1284/284/L025		ASSEMBLY-INDIRECT CEILING LTS,AFT				275-299
	BLK		W0824	C-A			33-21-14	ALL
	BLK		W0824	C-B			33-21-14	ALL
	RED		W0824	C-E			33-21-14	ALL
	WHT		W0824	C-C			33-21-14	ALL
	WHT		W0824	C-D			33-21-14	ALL
L00273		1240/284/R025		ASSEMBLY-INDIRECT CEILING LTS,AFT				050-099, 150-199
L00273		1221/284/R025		ASSEMBLY-INDIRECT CEILING LTS,AFT				275-299
	BLK		W0824	D-A			33-21-14	ALL
	BLK		W0824	D-B			33-21-14	ALL
	RED		W0824	D-E			33-21-14	ALL
	WHT		W0824	D-C			33-21-14	ALL
	WHT		W0824	D-D			33-21-14	ALL
L00274		1328/284/L050		SOCKET-INDIRECT CEILING LTS,AFT				ALL
	=G	E	W0816	637	20		33-21-14	ALL
	BLK		W0816	L-A			33-21-14	ALL

HOOKUP LIST

D280T132

91-21-51

Section L00200

Page 15

Mar 07/2008



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
L00274		1328/284/L050		SOCKET-INDIRECT CEILING LTS,AFT (continued)				ALL
	BLK		W0816	L-B			33-21-14	ALL
	WHT		W0816	L-C			33-21-14	ALL
	WHT		W0816	L-D			33-21-14	ALL
L00275		1328/284/R050		SOCKET-INDIRECT CEILING LTS,AFT				ALL
	= G	E	W0816	638	20		33-21-14	ALL
	BLK		W0816	M-A			33-21-14	ALL
	BLK		W0816	M-B			33-21-14	ALL
	WHT		W0816	M-C			33-21-14	ALL
	WHT		W0816	M-D			33-21-14	ALL
L00276		1328/284/L025		ASSEMBLY-INDIRECT CEILING LTS,AFT				ALL
	BLK		W0824	E-A			33-21-14	ALL
	BLK		W0824	E-B			33-21-14	ALL
	RED		W0824	E-E			33-21-14	ALL
	WHT		W0824	E-C			33-21-14	ALL
	WHT		W0824	E-D			33-21-14	ALL
L00277		1328/284/R025		ASSEMBLY-INDIRECT CEILING LTS,AFT				ALL
	BLK		W0824	F-A			33-21-14	ALL
	BLK		W0824	F-B			33-21-14	ALL
	RED		W0824	F-E			33-21-14	ALL
	WHT		W0824	F-C			33-21-14	ALL
	WHT		W0824	F-D			33-21-14	ALL
L00278		1405/284/L050		SOCKET-INDIRECT CEILING LTS,AFT				ALL
	= G	E	W0816	650	20		33-21-14	ALL
	BLK		W0816	N-A			33-21-14	ALL
	BLK		W0816	N-B			33-21-14	ALL
	WHT		W0816	N-C			33-21-14	ALL
	WHT		W0816	N-D			33-21-14	ALL
L00279		1405/284/R050		SOCKET-INDIRECT CEILING LTS,AFT				ALL
	= G	E	W0816	651	20		33-21-14	ALL
	BLK		W0816	P-A			33-21-14	ALL
	BLK		W0816	P-B			33-21-14	ALL
	WHT		W0816	P-C			33-21-14	ALL
	WHT		W0816	P-D			33-21-14	ALL

HOOKUP LIST

D280T132

91-21-51

Section L00200

Page 16

Mar 07/2008



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
L00280		1405/284/L025		ASSEMBLY-INDIRECT CEILING LTS,AFT				ALL
	= G	E	W0824	050	20		33-21-14	275-299
	BLK		W0824	G-A			33-21-14	ALL
	BLK		W0824	G-B			33-21-14	ALL
	RED		W0824	G-E			33-21-14	050-099, 150-199
	WHT		W0824	G-C			33-21-14	ALL
	WHT		W0824	G-D			33-21-14	ALL
L00281		1405/284/R025		ASSEMBLY-INDIRECT CEILING LTS,AFT				ALL
	= G	E	W0824	051	20		33-21-14	275-299
	BLK		W0824	H-A			33-21-14	ALL
	BLK		W0824	H-B			33-21-14	ALL
	RED		W0824	H-E			33-21-14	050-099, 150-199
	WHT		W0824	H-C			33-21-14	ALL
	WHT		W0824	H-D			33-21-14	ALL
L00282		0910/284/L050		SOCKET-INDIRECT CEILING LTS,MID				050-099
	= G	E	W0812	719	20		33-21-13	050-099
	BLK		W0812	P-A			33-21-13	050-099
	BLK		W0812	P-B			33-21-13	050-099
	WHT		W0812	P-C			33-21-13	050-099
	WHT		W0812	P-D			33-21-13	050-099
L00283		0910/284/R050		SOCKET-INDIRECT CEILING LTS,MID				050-099
	= G	E	W0812	720	20		33-21-13	050-099
	BLK		W0812	R-A			33-21-13	050-099
	BLK		W0812	R-B			33-21-13	050-099
	WHT		W0812	R-C			33-21-13	050-099
	WHT		W0812	R-D			33-21-13	050-099
L00284		0910/280/L025		ASSEMBLY-INDIRECT CEILING LTS,MID				050-099
	BLK		W0822	W-A			33-21-13	050-099
	BLK		W0822	W-B			33-21-13	050-099
	RED		W0822	W-E			33-21-13	050-099
	WHT		W0822	W-C			33-21-13	050-099
	WHT		W0822	W-D			33-21-13	050-099
L00285		0910/280/R025		ASSEMBLY-INDIRECT CEILING LTS,MID				050-099
	BLK		W0822	X-A			33-21-13	050-099
	BLK		W0822	X-B			33-21-13	050-099

HOOKUP LIST

D280T132

91-21-51
Section L00200
Page 17
Mar 07/2008



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
L00285		0910/280/R025		ASSEMBLY-INDIRECT CEILING LTS,MID (continued)				050-099
	RED		W0822	X-E			33-21-13	050-099
	WHT		W0822	X-C			33-21-13	050-099
	WHT		W0822	X-D			33-21-13	050-099
L00287		0289/270/R075		LIGHT-EXIT/THRESHOLD SIGN				ALL
	1	C	W0832	010	18		33-51-14	050-099, 150-199
	1	C	W0832	010	16		33-51-14	275-299
	1	C	W0832	023	20		33-51-14	275-299
	2	C	W0832	027	16		33-51-14	ALL
L00288		0296/280/R070		LIGHT-DOOR				ALL
	1	C	W0832	011	20		33-51-12	050-099
	1	C	W1222	027	20		33-51-12	150-199, 275-299
	2	C	W0832	034	20		33-51-12	050-099
	2	C	W1222	032	20		33-51-12	150-199, 275-299
L00289		0334/280/R009		LIGHT-LWRD CEILING				050-099
L00289		0329/280/R008		LIGHT-LWRD CEILING				150-199, 275-299
	1	C	W0832	012	20		33-51-12	050-099
	1	C	W1222	031	18		33-51-12	150-157
	1	C	W1222	084	18		33-51-12	150-157
	1	C	W1222	026	18		33-51-12	162-199, 275-299
	2	C	W0832	018	18		33-51-12	050-099
	2	C	W1222	506	18		33-51-12	150-157
	2	C	W1222	033	18		33-51-12	150-199, 275-299
L00290		0357/280/R040		LIGHT-AISLE				ALL
	1	C	W0832	032	20		33-51-12	050-099
	1	C	W1222	025	22		33-51-12	150-157, 275-299
	1	C	W1222	025	18		33-51-12	162-199
	1	C	W1222	084	18		33-51-12	162-199
	2	C	W0832	033	20		33-51-12	050-099
	2	C	W1222	034	20		33-51-12	150-199, 275-299
L00291		0455/280/R038		LT-EXIT SIGN				050-099, 150-199
L00291		0373/280/R038		LT-EXIT SIGN				275-299
	1	C	W1222	024	18		33-51-12	ALL
	2	C	W1222	035	18		33-51-12	ALL

HOOKUP LIST

D280T132

91-21-51

Section L00200

Page 18

Mar 07/2008



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
L00292		0445/283/R040		LIGHT-AISLE				050-099, 150-199
L00292		0455/283/R040		LIGHT-AISLE				275-299
	1	C	W1222	117	20		33-51-12	050-099, 150-199
	1	C	W1222	110	22		33-51-12	275-299
	2	C	W1222	036	20		33-51-12	ALL
L00293		0543/283/R040		LIGHT-AISLE				ALL
	1	C	W1222	022	22		33-51-12	ALL
	2	C	W1222	037	20		33-51-12	ALL
L00294		0631/283/R040		LIGHT-AISLE				050-099, 150-199, 275-278
	1	C	W1222	021	20		33-51-12	050-099, 150-199, 275-278
	1	C	W0814	01P	20		33-51-12	280-299
	2	C	W1222	038	20		33-51-12	050-099, 150-199, 275-278
L00295		0719/283/R040		LIGHT-AISLE				050-099
	1	C	W1222	517	20		33-51-12	050-099
	2	C	W1222	069	20		33-51-12	050-099
L00296		0808/283/R040		LIGHT-AISLE				050-099
L00296		0763/283/R040		LIGHT-AISLE				150-199
L00296		0807/283/R040		LIGHT-AISLE				275-299
	1	C	W0834	012	20		33-51-12	050-099
	1	C	W1222	067	20		33-51-12	150-199, 275-299
	1	C	W1222	675	20		33-51-12	275-299
	2	C	W0834	074	20		33-51-12	050-099
	2	C	W1222	072	20		33-51-12	150-199, 275-299
	2	C	W1222	669	20		33-51-12	275-299
L00297		0872/260/R085		LIGHT-OVER WING HATCH,EXIT SIGN				ALL
	1	C	W0834	010	18		33-51-14	ALL
	2	C	W0834	027	18		33-51-14	ALL
L00298		0888/280/R038		LIGHT-EXIT SIGN				050-099
L00298		0932/280/R038		LIGHT-EXIT SIGN				150-154, 156, 162-199
L00298		0851/280/R038		LIGHT-EXIT SIGN				155, 157
L00298		0861/280/R040		LIGHT-EXIT SIGN (SB 33-0042)				275-276
L00298		0861/280/R040		LIGHT-EXIT SIGN				275-278
L00298		0866/280/R040		LIGHT-EXIT SIGN				280-299
	1	C	W0834	037	20		33-51-12	050-099

HOOKUP LIST

D280T132

91-21-51

Section L00200

Page 19

Mar 07/2008



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
L00298		0888/280/R038		LIGHT-EXIT SIGN (continued)				050-099
L00298		0932/280/R038		LIGHT-EXIT SIGN (continued)				150-154, 156, 162-199
L00298		0851/280/R038		LIGHT-EXIT SIGN (continued)				155, 157
L00298		0861/280/R040		LIGHT-EXIT SIGN (SB 33-0042) (continued)				275-276
L00298		0861/280/R040		LIGHT-EXIT SIGN (continued)				275-278
L00298		0866/280/R040		LIGHT-EXIT SIGN (continued)				280-299
	1	C	W1222	065	16		33-51-12	150-154, 156, 162-199, 275-299
	1	C	W1222	179	16		33-51-12	155, 157
	2	C	W0834	073	16		33-51-12	050-099
	2	C	W1222	074	16		33-51-12	150-154, 156, 162-199, 275-299
	2	C	W1222	180	16		33-51-12	155, 157
L00299		0354/280/R035		LIGHT-EXIT SIGN				050-099, 150-199
	1	C	W1222	023	18		33-51-12	050-099
	1	C	W1222	084	18		33-51-12	150-199
	2	C	W1222	084	18		33-51-12	050-099
	2	C	W1222	506	18		33-51-12	150-199

HOOKUP LIST

D280T132

91-21-51

Section L00200

Page 20 End

Mar 07/2008



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
L00300		0932/283/R040		LIGHT-AISLE				050-099
L00300		0851/283/R040		LIGHT-AISLE				150-199
	1	C	W1222	062	22		33-51-12	050-099
	1	C	W1222	118	20		33-51-12	150-199
	2	C	W1222	076	20		33-51-12	050-099, 150-199
L00301		1020/283/R040		LIGHT-AISLE				050-099
L00301		0932/283/R040		LIGHT-AISLE				150-199
L00301		0976/283/R040		LIGHT-AISLE				275-299
	1	C	W1222	061	20		33-51-12	050-099
	1	C	W1222	062	22		33-51-12	150-199, 275-299
	2	C	W1222	075	20		33-51-12	ALL
L00302		1108/283/R040		LIGHT-AISLE				050-099
L00302		1064/283/R040		LIGHT-AISLE				150-199, 275-299
	1	C	W1222	066	20		33-51-12	050-099
	1	C	W1222	061	20		33-51-12	150-199, 275-299
	2	C	W1222	077	20		33-51-12	ALL
L00303		1196/283/R040		LIGHT-AISLE				050-099
L00303		1152/283/R040		LIGHT-AISLE				150-199, 275-299
	1	C	W1222	511	20		33-51-12	050-099
	1	C	W1222	066	20		33-51-12	150-199, 275-299
	2	C	W1222	080	20		33-51-12	ALL
L00304		1284/283/R040		LIGHT-AISLE				ALL
	1	C	W0790	017	20		33-51-12	ALL
	2	C	W0790	018	20		33-51-12	ALL
L00305		1372/283/R040		LIGHT-AISLE				ALL
	1	C	W0790	016	22		33-51-12	ALL
	2	C	W0790	019	20		33-51-12	ALL
L00306		1439/280/R038		LIGHT-EXIT SIGN				050-099, 150-199
L00306		1443/280/R038		LIGHT-EXIT SIGN				275-299
	1	C	W0790	015	18		33-51-12	ALL
	2	C	W0790	020	20		33-51-12	050-099
	2	C	W0790	020	18		33-51-12	150-199, 275-299

HOOKUP LIST

D280T132

91-21-51

Section L00300

Page 1

Mar 07/2008



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
L00307		1458/280/R040		LIGHT-AISLE				050-099, 150-199
L00307		1471/280/R040		LIGHT-AISLE				275-299
	1	C	W0790	014	18		33-51-12	050-099
	1	C	W0790	116	20		33-51-12	150-199, 275-299
	2	C	W0790	021	20		33-51-12	ALL
L00308		1538/270/R075		LIGHT-EXIT/THRESHOLD SIGN				ALL
	1	C	W0836	010	18		33-51-14	ALL
	1	C	W0836	023	20		33-51-14	275-299
	2	C	W0836	028	18		33-51-14	ALL
L00309		1485/280/R075		LIGHT-DOOR				ALL
	1	C	W0790	012	22		33-51-12	ALL
	2	C	W0790	023	20		33-51-12	ALL
L00310		1522/280/R018		LIGHT-LWRD CEILING				050-099
L00310		1496/280/R025		LIGHT-LWRD CEILING				150-199
L00310		1522/280/R019		LIGHT-LWRD CEILING				275-299
	1	C	W0836	038	20		33-51-12	050-099
	1	C	W0790	027	20		33-51-12	150-199, 275-299
	2	C	W0836	039	20		33-51-12	050-099
	2	C	W0790	024	20		33-51-12	150-199, 275-299
L00311		1539/280/R053		LIGHT-EXIT SIGN/AFT GALLEY				050-099
L00311		1485/270/0000		LIGHT-EXIT SIGN/AFT GALLEY				150-199
L00311		1543/270/R054		LIGHT-EXIT SIGN/AFT GALLEY				275-299
	1	C	W0790	013	16		33-51-12	050-099
	1	C	W0790	011	16		33-51-12	150-199
	2	C	W0790	038	16		33-51-12	050-099, 150-199
L00312		0289/270/L075		LIGHT-EXIT/THRESHOLD SIGN				ALL
	1	C	W0832	009	16		33-51-14	ALL
	1	C	W0832	030	16		33-51-14	150-157
	1	C	W0832	021	20		33-51-14	275-299
	2	C	W0832	029	20		33-51-14	ALL
L00313		0296/280/L070		LIGHT-DOOR				ALL
	1	C	W0832	037	22		33-51-13	050-099
	1	C	W0784	084	22		33-51-13	150-199, 275-299
	2	C	W0832	019	20		33-51-13	050-099

HOOKUP LIST

D280T132

91-21-51

Section L00300

Page 2

Mar 07/2008



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
L00313		0296/280/L070		LIGHT-DOOR (continued)				ALL
	2	C	W0784	035	20		33-51-13	150-199, 275-299
L00314		0362/280/L040		LT-AISLE				ALL
	1	C	W0832	035	20		33-51-13	050-099
	1	C	W0784	030	22		33-51-13	150-157, 275-299
	1	C	W0784	030	20		33-51-13	162-199
	2	C	W0832	036	20		33-51-13	050-099
	2	C	W0784	036	20		33-51-13	150-199, 275-299
L00315		0455/280/L038		LIGHT-EXIT SIGN				050-099, 150-199
L00315		0373/280/L038		LIGHT-EXIT SIGN				275-299
	1	C	W0784	029	18		33-51-13	ALL
	1	C	W0784	149	20		33-51-13	162-199
	2	C	W0784	037	18		33-51-13	ALL
L00316		0445/284/L040		LIGHT-AISLE				050-099, 150-199
L00316		0455/284/L040		LIGHT-AISLE				275-299
	1	C	W0784	119	22		33-51-13	050-099, 150-157
	1	C	W0784	149	20		33-51-13	162-199
	1	C	W0784	028	22		33-51-13	275-299
	2	C	W0784	038	20		33-51-13	ALL
L00317		0543/283/L040		LIGHT-AISLE				ALL
	1	C	W0784	027	22		33-51-13	ALL
	2	C	W0784	039	20		33-51-13	ALL
L00318		0631/283/L040		LIGHT-AISLE				050-099, 150-199, 275-278
	1	C	W0784	026	20		33-51-13	050-099, 150-199, 275-278
	2	C	W0784	040	20		33-51-13	050-099, 150-199, 275-278
L00319		0719/283/L040		LIGHT-AISLE				050-099
	1	C	W0784	031	22		33-51-13	050-099
	2	C	W0784	041	20		33-51-13	050-099
L00320		0808/283/L040		LIGHT-AISLE				050-099
L00320		0763/283/L040		LIGHT-AISLE				150-199
L00320		0807/283/L040		LIGHT-AISLE				275-299
	1	C	W0790	056	20		33-51-13	050-099
	1	C	W0790	087	20		33-51-13	150-199

HOOKUP LIST

D280T132

91-21-51

Section L00300

Page 3

Mar 07/2008



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
L00320		0808/283/L040		LIGHT-AISLE (continued)				050-099
L00320		0763/283/L040		LIGHT-AISLE (continued)				150-199
L00320		0807/283/L040		LIGHT-AISLE (continued)				275-299
	1	C	W0790	056	18		33-51-13	275-299
	1	C	W0790	171	20		33-51-13	275-299
	2	C	W0790	055	20		33-51-13	ALL
	2	C	W0790	130	20		33-51-13	275-299
L00321		0863/280/R002		LIGHT-LWRD CEILING				050-099
L00321		0935/280/R020		LIGHT-LWRD CEILING				150-154, 156, 162-199
L00321		0877/280/R020		LIGHT-LWRD CEILING				155, 157
L00321		0870/280/0000		LIGHT-LWRD CEILING				275-278
L00321		0875/280/0000		LIGHT-LWRD CEILING				280-299
	1	C	W0834	014	20		33-51-12	050-099
	1	C	W0122	121	18		33-51-12	150-154, 156, 162-199
	1	C	W1222	183	18		33-51-12	155, 157, 275-299
	1	C	W1222	068	18		33-51-12	275-299
	2	C	W0834	041	18		33-51-12	050-099
	2	C	W0122	122	18		33-51-12	150-154, 156, 162-199
	2	C	W1222	184	18		33-51-12	155, 157, 275-299
	2	C	W1222	099	18		33-51-12	275-299
L00322		0872/260/L085		LIGHT-OVER WING HATCH,EXIT SIGN				ALL
	1	C	W0834	009	18		33-51-14	050-099, 150-199
	1	C	W0834	009	16		33-51-14	275-299
	1	C	W0834	021	20		33-51-14	275-299
	2	C	W0834	026	18		33-51-14	ALL
L00323		0888/280/L038		LIGHT-EXIT SIGN				050-099
L00323		0932/280/L038		LIGHT-EXIT SIGN				150-154, 156, 162-199
L00323		0851/280/L038		LIGHT-EXIT SIGN				155, 157
L00323		0861/280/L040		LIGHT-EXIT SIGN (SB 33-0042)				275-276
L00323		0861/280/L040		LIGHT-EXIT SIGN				275-278
L00323		0866/280/L038		LIGHT-EXIT SIGN				280-299
	1	C	W0790	048	18		33-51-13	050-099, 150-154, 156, 162-199, 275-299
	1	C	W0790	164	16		33-51-13	155, 157
	2	C	W0790	053	18		33-51-13	050-099, 150-154, 156, 162-199, 275-299
	2	C	W0790	165	16		33-51-13	155, 157

HOOKUP LIST

D280T132

91-21-51

Section L00300

Page 4

Mar 07/2008



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
L00324		0354/280/L035		LIGHT-EXIT SIGN				050-099, 150-199
	1	C	W0784	028	18		33-51-13	050-099
	1	C	W0832	030	16		33-51-14	150-157
	1	C	W0784	119	18		33-51-13	162-199
	2	C	W0784	142	20		33-51-13	050-099, 162-199
	2	C	W0832	031	16		33-51-14	150-157
L00325		0932/283/L040		LIGHT-AISLE				050-099
L00325		0851/283/L040		LIGHT-AISLE				150-199
	1	C	W0790	043	20		33-51-13	050-099
	1	C	W0790	119	18		33-51-13	150-199
	2	C	W0790	052	20		33-51-13	050-099, 150-199
L00326		1020/283/L040		LIGHT-AISLE				050-099
L00326		0932/283/L040		LIGHT-AISLE				150-199
L00326		0976/283/L040		LIGHT-AISLE				275-299
	1	C	W0790	037	18		33-51-13	050-099
	1	C	W0790	043	20		33-51-13	150-199, 275-299
	2	C	W0790	051	20		33-51-13	ALL
L00327		1108/283/L040		LIGHT-AISLE				050-099
L00327		1064/283/L040		LIGHT-AISLE				150-199, 275-299
	1	C	W0790	119	18		33-51-13	050-099
	1	C	W0790	049	20		33-51-13	150-199, 275-299
	2	C	W0790	050	18		33-51-13	050-099
	2	C	W0790	050	20		33-51-13	150-199, 275-299
L00328		1196/283/L040		LIGHT-AISLE				050-099
L00328		1152/283/L040		LIGHT-AISLE				150-199, 275-299
	1	C	W0790	036	18		33-51-13	050-099
	1	C	W0790	061	18		33-51-13	150-199, 275-299
	2	C	W0790	062	18		33-51-13	ALL
L00329		1284/283/L040		LIGHT-AISLE				ALL
	1	C	W0788	014	22		33-51-13	ALL
	2	C	W0788	017	20		33-51-13	ALL
L00330		1372/283/L040		LIGHT-AISLE				ALL
	1	C	W0788	013	20		33-51-13	050-099
	1	C	W0788	048	22		33-51-13	150-199, 275-299

HOOKUP LIST

D280T132

91-21-51

Section L00300

Page 5

Mar 07/2008



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
L00330		1372/283/L040		LIGHT-AISLE (continued)				ALL
	2	C	W0788	018	20		33-51-13	ALL
L00331		1439/280/L038		LIGHT-EXIT SIGN				050-099, 150-199
L00331		1443/280/L038		LIGHT-EXIT SIGN				275-299
	1	C	W0788	012	18		33-51-13	ALL
	2	C	W0788	019	20		33-51-13	050-099
	2	C	W0788	019	18		33-51-13	150-199, 275-299
L00332		1459/280/L040		LIGHT-AISLE				050-099, 150-199
L00332		1469/280/L044		LIGHT-AISLE				275-299
	1	C	W0788	010	18		33-51-13	050-099
	1	C	W0788	011	22		33-51-13	150-199, 275-299
	2	C	W0788	020	20		33-51-13	ALL
L00333		1538/270/L075		LIGHT-EXIT/THRESHOLD SIGN				ALL
	1	C	W0836	009	18		33-51-14	050-099, 150-199
	1	C	W0836	009	16		33-51-14	275-299
	1	C	W0836	021	20		33-51-14	275-299
	2	C	W0836	026	18		33-51-14	ALL
L00334		1485/280/L075		LIGHT-DOOR				ALL
	1	C	W0788	009	20		33-51-13	ALL
	2	C	W0788	022	20		33-51-13	ALL
L00335		1539/280/L053		LIGHT-EXIT SIGN				050-099
L00335		1543/270/L054		LIGHT-EXIT SIGN				275-299
	1	C	W0788	600	18		33-51-13	050-099
	2	C	W0788	669	18		33-51-13	050-099
L00388		0357/262/L090		LIGHT-LEFT SLIDE GRD ILLUM,FWD DOOR				ALL
	GND		W0788	D-A			33-51-21	ALL
	PWR		W0788	D-B			33-51-21	ALL
L00389		0922/211/L098		LIGHT-FWD OVERWING EGRESS				050-099
L00389		0894/211/L098		LIGHT-FWD OVERWING EGRESS				150-199, 275-299
	1	D	W0788	063	14		33-51-21	ALL
	2	D	W0788	064	14		33-51-21	ALL

HOOKUP LIST

D280T132

91-21-51

Section L00300

Page 6

Mar 07/2008



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
L00390		1098/212/R096		LIGHT-AFT OVERWING EGRESS				ALL
	1	D	W0786	066	14		33-51-21	ALL
	2	D	W0786	067	14		33-51-21	ALL
L00391		1230/180/R093		LIGHT-RIGHT SLIDE GRD ILLUM,WING				050-099
L00391		1197+33/180/R093		LIGHT-RIGHT SLIDE GRD ILLUM,WING				150-199, 275-299
	1	D	W0786	084	12		33-51-21	ALL
	2	D	W0786	085	12		33-51-21	ALL
L00392		1568/260/R085		LIGHT-RIGHT SLIDE GRD ILLUM,AFT DOOR				ALL
	GND		W0786	C-A			33-51-21	ALL
	PWR		W0786	C-B			33-51-21	ALL
L00393		0357/262/R090		LIGHT-RIGHT SLIDE GRD ILLUM,FWD DOOR				ALL
	GND		W0786	B-A			33-51-21	ALL
	PWR		W0786	B-B			33-51-21	ALL
L00394		0922/211/R098		LIGHT-FWD OVERWING EGRESS				050-099
L00394		0894/211/R098		LIGHT-FWD OVERWING EGRESS				150-199, 275-299
	1	D	W0786	040	14		33-51-21	ALL
	2	D	W0786	039	14		33-51-21	ALL
L00395		1098/211/L098		LIGHT-AFT OVERWING EGRESS				ALL
	1	D	W0788	076	14		33-51-21	ALL
	2	D	W0788	075	14		33-51-21	ALL
L00396		1230/180/L093		LIGHT-LEFT SLIDE GRD ILLUM,WING				050-099
L00396		1197+33/180/L093		LIGHT-LEFT SLIDE GRD ILLUM,WING				150-199, 275-299
	1	D	W0784	108	14		33-51-21	ALL
	2	D	W0784	109	14		33-51-21	ALL
L00397		1568/260/L085		LIGHT-LEFT SLIDE GRD ILLUM,AFT DOOR				ALL
	GND		W0784	C-A			33-51-21	ALL
	PWR		W0784	C-B			33-51-21	ALL
L00399		0455/280/R040		SIGN-LAVATORY OCCUPIED				050-099, 150-199
L00399		0389/280/R040		SIGN-LAVATORY OCCUPIED				275-299
	G	C	W0820	005	20		33-26-21	050-099, 150-199
	G	C	W0132	008	22		33-26-21	275-299
	P	C	W0820	026	20		33-26-21	050-099

HOOKUP LIST

D280T132

91-21-51

Section L00300

Page 7

Mar 07/2008



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
L00399		0455/280/R040		SIGN-LAVATORY OCCUPIED (continued)				050-099, 150-199
L00399		0389/280/R040		SIGN-LAVATORY OCCUPIED (continued)				275-299
	P	C	W0820	026	22		33-26-21	150-199
	P	C	W0132	011	22		33-26-21	275-299
	S	C	W0820	025	20		33-26-21	050-099
	S	C	W0820	025	22		33-26-21	150-199
	S	C	W0132	012	22		33-26-21	275-299

HOOKUP LIST

D280T132

91-21-51

Section L00300

Page 8 End

Mar 07/2008



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
L00401		0745/280/0000		SIGN-LAVATORY OCCUPIED				050-099
L00401		0654+38/280/0000		SIGN-LAVATORY OCCUPIED				150-199
L00401		0779/280/0000		SIGN-LAVATORY OCCUPIED				275-299
	G	C	W0792	038	20		33-26-21	ALL
	P	C	W0792	036	20		33-26-21	050-099, 275-278
	P	C	W0792	198	20		33-26-21	150-199
	P	C	W0792	645	20		33-26-21	150-199
	P	C	W0792	035	20		33-26-21	150-199, 275-299
	S	C	W0792	037	20		33-26-21	ALL
	S	C	W0792	644	20		33-26-21	150-199
	S	C	W0792	043	20		33-26-21	280-299
L00402		1075/280/R040		SIGN-LAVATORY OCCUPIED				050-099
L00402		0986/280/R040		SIGN-LAVATORY OCCUPIED				150-199
L00402		0892/280/R040		SIGN-LAVATORY OCCUPIED				275-278
L00402		0888/280/R040		SIGN-LAVATORY OCCUPIED				280-299
	G	C	W0792	042	20		33-26-21	275-299
	P	C	W0792	071	20		33-26-21	275-299
	S	C	W0792	098	20		33-26-21	275-299
L00403		1500/280/0000		SIGN-LAVATORY OCCUPIED				050-099
L00403		1473/280/0000		SIGN-LAVATORY OCCUPIED				150-199
L00403		1438/280/R036		SIGN-LAVATORY OCCUPIED				275-299
	G	C	W0814	874	20		33-26-21	050-099
	G	C	W0814	879	20		33-26-21	150-199
	G	C	W0828	010	20		33-26-21	275-299
	P	C	W0814	880	20		33-26-21	050-099, 150-199
	P	C	W0828	053	20		33-26-21	275-299
	S	C	W0814	881	20		33-26-21	050-099, 150-199
	S	C	W0814	882	20		33-26-21	150-199
	S	C	W0828	051	20		33-26-21	275-299
L00405		MULTI / /		LIGHT-PASSENGER SIGN				ALL
	NS	C	W1266	001	20		33-24-13	050-099, 150-199
	NS	C	W1278	001	22		33-24-14	ALL
	NS	C	W1266	001	20		33-24-11	275-299
	FSB	C	W1266	002	20		33-24-13	050-099, 150-199
	FSB	C	W1278	002	22		33-24-14	ALL
	FSB	C	W1266	002	20		MULTI	275-299
	GND	C	W1266	003	20		33-24-13	050-099, 150-199
	GND	C	W1278	003	22		33-24-14	ALL

HOOKUP LIST

D280T132

91-21-51

Section L00400

Page 1

Mar 07/2008

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
L00405		MULTI /		LIGHT-PASSENGER SIGN (continued)				ALL
	GND	C	W1266	003	20		MULTI	275-299
L00406		816/280/L0		LIGHT-ATTENDANT CALL, MID L				050-099
L00406		935/280/0000		LIGHT-ATTENDANT CALL, MID CTR				150-199
L00406		0833/280/0000		LIGHT-ATTENDANT CALL,MID CTR				275-299
	=G	\$	W0110	076	20		23-42-11	050-099
	=G	\$	W0122	010	20		23-42-11	150-199
	=G	\$	W0110	010	20		23-42-11	275-299
	=P	\$	W0110	075	22		23-42-11	050-099
	=P	\$	W0122	009	22		23-42-11	150-199
	=P	\$	W0110	009	22		23-42-11	275-299
L00407		0816/280/L001		LIGHT-LAV CALL,MID CTR L				050-099
L00407		945/280/L001		LIGHT-LAV CALL, MID CTR L				150-199
L00407		0835/280/L001		LIGHT-LAV CALL,MID CTR L				275-299
	=P	\$	W0110	013	22		33-25-11	050-099, 275-299
	=P	\$	W0122	129	22		33-25-11	150-199
L00408		0816/280/R001		LIGHT-LAV CALL,MID CTR R				050-099
L00408		945/280/R001		LIGHT-LAV CALL, MID CTR R				150-199
L00408		0835/280/R001		LIGHT-LAV CALL,MID CTR R				275-299
	=P	\$	W0110	014	22		33-25-11	050-099, 275-299
	=P	\$	W0122	014	22		33-25-11	150-199
L00409		816/280/L 2		LIGHT-MASTER CALL, MID CTR L				050-099
L00409		918/280/L014		LIGHT-MASTER CALL, MID CTR L				150-199
L00409		0835/280/L002		LIGHT-MASTER CALL,MID CTR L				275-278
L00409		0833/280/L002		LIGHT-MASTER CALL,MID CTR L				280-299
	=P	\$	W0110	104	22		23-34-13	050-099
	=P	\$	W0122	123	22		23-34-13	150-199
	=P	\$	W0110	012	22		23-34-13	275-299
L00410		816/280/R 2		LIGHT-MASTER MID CTR R				050-099
L00410		918/280/L010		LIGHT-MASTER CALL, MID CTR R				150-199
L00410		0835/280/R002		LIGHT-MASTER CALL,MID CTR R				275-278
L00410		0833/280/R002		LIGHT-MASTER CALL,MID CTR R				280-299
	=P	\$	W0110	077	22		23-34-13	050-099
	=P	\$	W0122	124	22		23-34-13	150-199
	=P	\$	W0110	069	22		23-34-13	275-299

HOOKUP LIST

D280T132

91-21-51

Section L00400

Page 2

Mar 07/2008



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
L00411		0840/261/L020		LT-CLOSET				050-099
L00411		0654+120/262/L021		LT-CLOSET				151-152
	=G	C	W1192	004	22		33-22-21	050-099
	=G	C	W2010	003	22		33-22-21	151-152
	=G	C	W2010	004	22		33-22-21	151-152
	=P	C	W1192	002	22		33-22-21	050-099
	=P	C	W2010	002	22		33-22-21	151-152
L00412		0217/255/L057		LIGHT-UTILITY,SECOND OBSERVER				ALL
	WHT		W0632	B-A			33-14-31	ALL
	SHLD		W0632	B-B			33-14-31	ALL
L00414		0356/280/L035		LIGHT-FWD ATTENDANT SIGN				275-299
	NS	C	W1224	042	20		33-24-12	275-299
	FSB	C	W1224	043	20		33-24-12	275-299
	GND	C	W1224	049	20		33-24-12	275-299
L00415		1471/280/L036		LIGHT-AFT ATTENDANT SIGN				050-099, 150-157, 275-299
L00415		1490/280/L012		LIGHT-AFT ATTENDANT SIGN				162-199
	NS	C	W1240	077	22		33-24-12	050-099
	NS	C	W0810	529	20		33-24-12	150-199, 275-299
	FSB	C	W1240	078	22		33-24-12	050-099
	FSB	C	W0810	528	20		33-24-12	150-199, 275-299
	GND	C	W1240	079	20		33-24-12	050-099
	GND	C	W0810	530	20		33-24-12	150-199, 275-299
L00416		1471/280/R036		LIGHT-AFT ATTENDANT SIGN				050-099, 150-157, 275-299
L00416		1490/280/R012		LIGHT-AFT ATTENDANT SIGN				162-199
	NS	C	W1240	080	22		33-24-14	050-099
	NS	C	W0810	526	20		33-24-14	150-199, 275-299
	FSB	C	W1240	081	22		33-24-14	050-099
	FSB	C	W0810	525	20		33-24-14	150-199, 275-299
	GND	C	W1240	082	20		33-24-14	050-099
	GND	C	W0810	527	20		33-24-14	150-199, 275-299
L00419		0935/280/L010		SOCKET-AFT DIRECT CEILING				150-199
	=G	C	W0122	049	22		33-22-42	150-199
	=P	C	W0122	048	22		33-22-42	150-199

HOOKUP LIST

D280T132

91-21-51

Section L00400

Page 3

Mar 07/2008



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
L00420		0935/280/R010		LIGHT-AFT DIRECT CEILING				150-199
	=G	C	W0122	046	20		33-22-42	150-199
	=G	C	W0122	049	22		33-22-42	150-199
	=P	C	W0122	047	20		33-22-42	150-199
	=P	C	W0122	048	22		33-22-42	150-199
L00422		1522/280/L025		LIGHT-LWRD CEILING				050-099
L00422		1496/280/L025		LIGHT-LWRD CEILING				150-199
L00422		1522/280/L019		LIGHT-LWRD CEILING				275-299
	1	C	W0836	042	20		33-51-13	050-099
	1	C	W0788	010	18		33-51-13	150-199, 275-299
	2	C	W0836	043	18		33-51-13	050-099
	2	C	W0788	046	18		33-51-13	150-199, 275-299
L00425		0455/280/L040		SIGN-LAVATORY OCCUPIED				050-099, 150-199
L00425		0389/280/L040		SIGN-LAVATORY OCCUPIED				275-299
	G	C	W0820	035	20		33-26-21	050-099, 150-199
	G	C	W0820	027	20		SPARE	150-199
	G	C	W0820	027	20		33-26-21	275-299
	P	C	W0820	003	20		33-26-21	050-099
	P	C	W0820	004	20		33-26-21	050-099
	P	C	W0820	026	20		33-26-21	050-099
	P	C	W0820	003	22		33-26-21	150-199
	P	C	W0820	004	22		33-26-21	150-199, 275-299
	P	C	W0820	026	22		33-26-21	150-199, 275-299
	S	C	W0820	025	20		33-26-21	050-099
	S	C	W0820	066	20		33-26-21	050-099, 150-199
	S	C	W0820	025	22		33-26-21	150-199, 275-299
	S	C	W0820	001	20		33-26-21	275-278
	S	C	W0820	037	20		33-26-21	275-299
L00426		1075/280/L040		SIGN-LAVATORY OCCUPIED				050-099
L00426		0986/280/L040		SIGN-LAVATORY OCCUPIED				150-199
L00426		0892/280/L040		SIGN-LAVATORY OCCUPIED				275-278
L00426		0888/280/L040		SIGN-LAVATORY OCCUPIED				280-299
	G	C	W0792	072	20		33-26-21	275-299
	P	C	W0792	036	20		33-26-21	275-299
	P	C	W0792	071	20		33-26-21	275-299
	S	C	W0792	034	20		33-26-21	275-299
	S	C	W0792	037	20		33-26-21	275-299

HOOKUP LIST

D280T132

91-21-51

Section L00400

Page 4

Mar 07/2008



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
L00426		1075/280/L040		SIGN-LAVATORY OCCUPIED (continued)				050-099
L00426		0986/280/L040		SIGN-LAVATORY OCCUPIED (continued)				150-199
L00426		0892/280/L040		SIGN-LAVATORY OCCUPIED (continued)				275-278
L00426		0888/280/L040		SIGN-LAVATORY OCCUPIED (continued)				280-299
	S	C	W0792	098	20		33-26-21	275-299
L00432		SL194/12/FS		LIGHT-LOGO,INBD,L				ALL
	13V	N	W1288	002	10		33-45-11	ALL
	GND	N	W1288	004	10		33-45-11	ALL
	RTN	N	W1288	003	10		33-45-11	ALL
	110V	N	W1288	001	16		33-45-11	ALL
L00433		SL218/12/FS		LIGHT-LOGO,OUTBD,L				ALL
	13V	N	W1288	002	10		33-45-11	ALL
	GND	N	W1288	005	10		33-45-11	ALL
	RTN	N	W1288	006	10		33-45-11	ALL
L00434		SR194/12/FS		LIGHT-LOGO,INBD,R				ALL
	13V	N	W1290	002	10		33-45-11	ALL
	GND	N	W1290	004	10		33-45-11	ALL
	RTN	N	W1290	003	10		33-45-11	ALL
	110V	N	W1290	001	16		33-45-11	ALL
L00435		SR218/12/FS		LIGHT-LOGO,OUTBD,R				ALL
	13V	N	W1290	002	10		33-45-11	ALL
	GND	N	W1290	005	10		33-45-11	ALL
	RTN	N	W1290	006	10		33-45-11	ALL
L00436		P035-00/ /		LT-PALLET MODE				ALL
	=G	\$	W1066	782	22		25-53-13	050-099
	=G	\$	W1066	01C	22		25-53-13	150-199, 275-299
	=P	\$	W1066	780	22		25-53-13	050-099
	=P	\$	W1066	01A	22		25-53-13	150-199, 275-299
L00437		P035-00/ /		LIGHT-BAY E/F OFF				050-099
	=G	\$	W1066	569	22		25-53-13	050-099
	=G	\$	W1066	570	22		25-53-13	050-099
	=P	\$	W1066	561	22		25-53-13	050-099

HOOKUP LIST

D280T132

91-21-51
Section L00400
Page 5
Mar 07/2008



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
L00438		P035-00/ /		LIGHT-BAY E/F ON				050-099
	=G	\$	W1066	570	22		25-53-13	050-099
	=P	\$	W1066	563	22		25-53-13	050-099
L00455		0455/283/L040		SOCKET-NIGHT LIGHT				275-299
	=G	C	W1234	017	20		33-21-21	275-299
	=P	C	W1234	005	22		33-21-21	275-299
L00456		0455/280/R040		SOCKET-NIGHT LIGHT				275-299
	=G	C	W0132	002	22		33-21-21	275-299
	=P	C	W0132	001	22		33-21-21	275-299
L00457		0629/283/L040		SOCKET-NIGHT LIGHT				ALL
	=G	C	W1236	041	20		33-21-21	ALL
	=P	C	W1236	044	22		33-21-21	ALL
L00458		0629/283/R040		SOCKET-NIGHT LIGHT				ALL
	=G	C	W1236	023	20		33-21-21	ALL
	=P	C	W1236	147	22		33-21-21	050-099
	=P	C	W1236	017	22		33-21-21	ALL
	=P	C	W1236	044	22		33-21-21	ALL
L00459		0807/280/R040		SOCKET-NIGHT LIGHT				050-099, 275-299
L00459		0851/280/R040		SOCKET-NIGHT LIGHT				150-199
	=G	C	W1236	148	20		33-21-21	050-099, 150-199
	=G	C	W1236	019	20		33-21-21	275-299
	=P	C	W1236	147	22		33-21-21	050-099, 150-199
	=P	C	W1236	015	22		33-21-21	275-299
L00460		0807/280/L040		SOCKET-NIGHT LIGHT				050-099, 275-299
L00460		0851/180/L040		SOCKET-NIGHT LIGHT				150-199
	=G	C	W1234	013	20		33-21-21	050-099, 275-299
	=G	C	W1234	041	20		33-21-21	150-199
	=P	C	W1234	009	22		33-21-21	050-099, 275-299
	=P	C	W1234	040	22		33-21-21	150-199
L00461		0932/280/R040		SOCKET-NIGHT LIGHT				050-099
L00461		1020/280/R040		SOCKET-NIGHT LIGHT				150-199
L00461		0976/280/R040		SOCKET-NIGHT LIGHT				275-299
	=G	C	W1236	021	20		33-21-21	ALL

HOOKUP LIST

D280T132

91-21-51

Section L00400

Page 6

Mar 07/2008



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
L00461		0932/280/R040		SOCKET-NIGHT LIGHT (continued)				050-099
L00461		1020/280/R040		SOCKET-NIGHT LIGHT (continued)				150-199
L00461		0976/280/R040		SOCKET-NIGHT LIGHT (continued)				275-299
	=P	C	W1236	013	22		33-21-21	050-099
	=P	C	W1236	025	22		33-21-21	ALL
L00462		0932/280/L040		SOCKET-NIGHT LIGHT				050-099
L00462		1020/280/L040		SOCKET-NIGHT LIGHT				150-199
L00462		0976/280/L040		SOCKET-NIGHT LIGHT				275-299
	=G	C	W1236	164	20		33-21-21	050-099
	=G	C	W1234	015	20		33-21-21	150-199, 275-299
	=P	C	W1236	025	22		33-21-21	050-099
	=P	C	W1234	019	22		33-21-21	150-199
	=P	C	W1234	004	20		33-21-21	275-299
	=P	C	W1234	019	20		33-21-21	275-299
L00463		1108/280/R040		SOCKET-NIGHT LIGHT				050-099
L00463		1152/280/R040		SOCKET-NIGHT LIGHT				150-199, 275-299
	=G	C	W1240	003	20		33-21-21	ALL
	=P	C	W1240	008	22		33-21-21	ALL
	=P	C	W1240	012	22		33-21-21	ALL
L00464		1108/280/L040		SOCKET-NIGHT LIGHT				050-099
L00464		1152/280/L040		SOCKET-NIGHT LIGHT				150-199, 275-299
	=G	C	W0788	053	20		33-21-21	ALL
	=P	C	W0788	050	22		33-21-21	ALL
	=P	C	W0788	051	22		33-21-21	ALL
L00465		1284/280/R040		SOCKET-NIGHT LIGHT				050-099
L00465		1372/280/R040		SOCKET-NIGHT LIGHT				150-199, 275-299
	=G	C	W1240	005	20		33-21-21	ALL
	=P	C	W1240	008	22		33-21-21	050-099
	=P	C	W1240	014	22		33-21-21	150-199, 275-299
L00466		1284/280/L040		SOCKET-NIGHT LIGHT				050-099
L00466		1372/280/L040		SOCKET-NIGHT LIGHT				150-199, 275-299
	=G	C	W0788	054	20		33-21-21	ALL
	=P	C	W0788	051	22		33-21-21	050-099
	=P	C	W0788	041	22		33-21-21	150-199, 275-299

HOOKUP LIST

D280T132

91-21-51

Section L00400

Page 7

Mar 07/2008

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
L00474		P001-03/ /		LIGHT-L OIL PRESSURE				ALL
	1	1A	W0013	024	22		33-16-13	ALL
	2	1A	W0013	162	22		79-33-11	ALL
	3	1A	W0013	079	22		33-16-13	ALL
	DED		W0013	024Z			33-16-13	ALL
	DED		W0013	079Z			33-16-13	ALL
L00475		P001-03/ /		LIGHT-R OIL PRESSURE				ALL
	1	1A	W0013	083	22		33-16-13	ALL
	2	1A	W0013	161	22		79-33-11	ALL
	3	1A	W0013	080	22		33-16-13	ALL
	DED		W0013	080Z			33-16-13	ALL
	DED		W0013	083Z			33-16-13	ALL
	DED		W0013	161Z			79-33-11	ALL
L00481		P001-01/ /		LIGHTPLATE-INSTR SOURCE SEL SW,CAPT				ALL
	=P	B	W0017	047	20		33-13-11	ALL
L00482		P007-00/ /		LIGHTPLATE-LTG CONT PNL,CAPT				ALL
	=G	G	W1052	022	20		33-13-17	ALL
	=P	B	W1052	021	20		33-13-17	ALL
L00483		P007-00/ /		LIGHTPLATE-LTG CONT PNL,F/O				ALL
	=G	G	W1054	022	20		33-13-17	ALL
	=P	B	W1054	021	20		33-13-17	ALL
L00489		P003-03/ /		LIGHTPLATE-INSTR SOURCE SEL SW,F/O				ALL
	=P	B	W0033	057	20		33-13-13	ALL
L00491		P003-01/ /		LIGHTPLATE-GEAR LEVER				ALL
	=P	B	W0035	021	18		33-13-13	ALL
L00494		P001-03/ /		LIGHTPLATE-AUTO BRAKES				ALL
	=P	B	W0013	076	20		33-13-11	ALL
L00496		P010-00/ /		LIGHTPLATE-STAB TRIM CUT-OFF CONTROL				ALL
	BLK		W5150	G-A			33-13-18	ALL
	WHT		W5150	G-B			33-13-18	ALL

HOOKUP LIST

D280T132

91-21-51

Section L00400

Page 8

Mar 07/2008



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
L00499		P011-03/ /		LIGHTPLATE-ROW 1L				ALL
	= P	B	W0034	002	20		33-13-19	ALL

HOOKUP LIST

D280T132

91-21-51

Section L00400
Page 9 End
Mar 07/2008



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
L00500		P011-03/ /		LIGHTPLATE-ROW 2L				ALL
	=P	B	W0034	002	20		33-13-19	ALL
	=P	B	W0034	003	20		33-13-19	ALL
L00501		P011-03/ /		LIGHTPLATE-ROW 3L				ALL
	=P	B	W0034	003	20		33-13-19	ALL
	=P	B	W0034	004	20		33-13-19	ALL
L00502		P011-03/ /		LIGHTPLATE-ROW 4L				ALL
	=P	B	W0034	004	20		33-13-19	ALL
	=P	B	W0034	005	20		33-13-19	ALL
L00503		P011-03/ /		LIGHTPLATE-ROW 5L				ALL
	=P	B	W0034	005	20		33-13-19	ALL
	=P	B	W0044	049	20		33-13-19	ALL
L00504		P011-03/ /		LIGHTPLATE-ROW 6L				ALL
	=P	B	W0034	007	20		33-13-19	ALL
L00505		P011-03/ /		LIGHTPLATE-ROW 7L				ALL
	=P	B	W0034	007	20		33-13-19	ALL
	=P	B	W0044	048	20		33-13-19	ALL
L00506		P011-02/ /		LIGHTPLATE-ROW 8L				ALL
	=P	B	W0034	009	20		33-13-19	ALL
	=P	B	W0044	051	20		33-13-19	ALL
L00507		P011-02/ /		LIGHTPLATE-ROW 9L				ALL
	=P	B	W0034	009	20		33-13-19	ALL
	=P	B	W0034	010	20		33-13-19	ALL
L00508		P011-02/ /		LIGHTPLATE-ROW 10L				ALL
	=P	B	W0034	010	20		33-13-19	ALL
	=P	B	W0034	011	20		33-13-19	ALL
L00509		P011-02/ /		LIGHTPLATE-ROW 11L				ALL
	=P	B	W0034	011	20		33-13-19	ALL
	=P	B	W0034	012	20		33-13-19	ALL

HOOKUP LIST

D280T132

91-21-51

Section L00500

Page 1

Mar 07/2008



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
L00510		P011-02/ /		LIGHTPLATE-ROW 12L				ALL
	=P	B	W0034	012	20		33-13-19	ALL
L00511		P011-02/ /		LIGHTPLATE-ROW 13L				ALL
	=P	B	W0034	014	20		33-13-19	ALL
L00512		P011-02/ /		LIGHTPLATE-ROW 14L				ALL
	=P	B	W0034	014	20		33-13-19	ALL
	=P	B	W0044	050	20		33-13-19	ALL
L00513		P011-01/ /		LIGHTPLATE-ROW 15L				ALL
	=P	B	W0034	016	20		33-13-19	ALL
	=P	B	W0044	053	20		33-13-19	ALL
L00514		P011-01/ /		LIGHTPLATE-ROW 16L				ALL
	=P	B	W0034	016	20		33-13-19	ALL
	=P	B	W0034	017	20		33-13-19	ALL
L00515		P011-01/ /		LIGHTPLATE-ROW 17L				ALL
	=P	B	W0034	017	20		33-13-19	ALL
	=P	B	W0034	018	20		33-13-19	ALL
L00516		P011-01/ /		LIGHTPLATE-ROW 18L				ALL
	=P	B	W0034	018	20		33-13-19	ALL
	=P	B	W0034	019	20		33-13-19	ALL
L00517		P011-01/ /		LIGHTPLATE-ROW 19L				ALL
	=P	B	W0034	019	20		33-13-19	ALL
L00518		P011-01/ /		LIGHTPLATE-ROW 20L				ALL
	=P	B	W0034	021	20		33-13-19	ALL
L00519		P011-01/ /		LIGHTPLATE-ROW 21L				ALL
	=P	B	W0034	021	20		33-13-19	ALL
	=P	B	W0044	052	20		33-13-19	ALL
L00520		P011-06/ /		LIGHTPLATE-ROW 1R				ALL
	=P	B	W0034	023	20		33-13-19	ALL

HOOKUP LIST

D280T132

91-21-51

Section L00500

Page 2

Mar 07/2008



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
L00521		P011-06/ /		LIGHTPLATE-ROW 2R				ALL
	=P	B	W0034	023	20		33-13-19	ALL
	=P	B	W0034	024	20		33-13-19	ALL
L00522		P011-06/ /		LIGHTPLATE-ROW 3R				ALL
	=P	B	W0034	024	20		33-13-19	ALL
	=P	B	W0034	025	20		33-13-19	ALL
L00523		P011-06/ /		LIGHTPLATE-ROW 4R				ALL
	=P	B	W0034	025	20		33-13-19	ALL
	=P	B	W0034	026	20		33-13-19	ALL
L00524		P011-06/ /		LIGHTPLATE-ROW 5R				ALL
	=P	B	W0034	026	20		33-13-19	ALL
	=P	B	W0044	055	20		33-13-19	ALL
L00525		P011-06/ /		LIGHTPLATE-ROW 6R				ALL
	=P	B	W0034	028	20		33-13-19	ALL
L00526		P011-06/ /		LIGHTPLATE-ROW 7R				ALL
	=P	B	W0034	028	20		33-13-19	ALL
	=P	B	W0044	054	20		33-13-19	ALL
L00527		P011-05/ /		LIGHTPLATE-ROW 8R				ALL
	=P	B	W0034	030	20		33-13-19	ALL
	=P	B	W0044	057	20		33-13-19	ALL
L00528		P011-05/ /		LIGHTPLATE-ROW 9R				ALL
	=P	B	W0034	030	20		33-13-19	ALL
	=P	B	W0034	031	20		33-13-19	ALL
L00529		P011-05/ /		LIGHTPLATE-ROW 10R				ALL
	=P	B	W0034	031	20		33-13-19	ALL
	=P	B	W0034	032	20		33-13-19	ALL
L00530		P011-05/ /		LIGHTPLATE-ROW 11R				ALL
	=P	B	W0034	032	20		33-13-19	ALL
	=P	B	W0034	033	20		33-13-19	ALL

HOOKUP LIST

D280T132

91-21-51

Section L00500

Page 3

Mar 07/2008



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
L00531		P011-05/ /		LIGHTPLATE-ROW 12R				ALL
	= P	B	W0034	033	20		33-13-19	ALL
L00532		P011-05/ /		LIGHTPLATE-ROW 13R				ALL
	= P	B	W0034	035	20		33-13-19	ALL
L00533		P011-05/ /		LIGHTPLATE-ROW 14R				ALL
	= P	B	W0034	035	20		33-13-19	ALL
	= P	B	W0044	056	20		33-13-19	ALL
L00534		P011-04/ /		LIGHTPLATE-ROW 15R				ALL
	= P	B	W0034	037	20		33-13-19	ALL
	= P	B	W0044	059	20		33-13-19	ALL
L00535		P011-04/ /		LIGHTPLATE-ROW 16R				ALL
	= P	B	W0034	037	20		33-13-19	ALL
	= P	B	W0034	038	20		33-13-19	ALL
L00536		P011-04/ /		LIGHTPLATE-ROW 17R				ALL
	= P	B	W0034	038	20		33-13-19	ALL
	= P	B	W0034	039	20		33-13-19	ALL
L00537		P011-04/ /		LIGHTPLATE-ROW 18R				ALL
	= P	B	W0034	039	20		33-13-19	ALL
	= P	B	W0034	040	20		33-13-19	ALL
L00538		P011-04/ /		LIGHTPLATE-ROW 19R				ALL
	= P	B	W0034	040	20		33-13-19	ALL
L00539		P011-04/ /		LIGHTPLATE-ROW 20R				ALL
	= P	B	W0034	042	20		33-13-19	ALL
L00540		P011-04/ /		LIGHTPLATE-ROW 21R				ALL
	= P	B	W0034	042	20		33-13-19	ALL
	= P	B	W0044	058	20		33-13-19	ALL
L00541		P040-00/ /		LIGHT-APU FIRE				ALL
	CTR	N	W1132	A-C			26-15-12	ALL
	GND	L	W1132	004R	18		26-15-12	ALL

HOOKUP LIST

D280T132

91-21-51

Section L00500

Page 4

Mar 07/2008



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
L00542		P040-00/ /		LIGHT-FIRE BOTTLES ARMED (SB 26-0066)				050-099, 150-155, 162-165, 275-276
L00542		P040-00/ /		LIGHT-FIRE BOTTLES ARMED				156-157, 166-199, 277-299
	1	\$	W1132	010R	18		26-22-21	ALL
	2	\$	W1132	018R	18		26-22-21	ALL
	3	\$	W1132	008R	18		26-22-21	ALL
L00543		P040-00/ /		LIGHT-NO.1 BOTTLE DISCH (SB 26-0066)				050-099, 150-155, 162-165, 275-276
L00543		P040-00/ /		LIGHT-NO.1 BOTTLE DISCHARGED				156-157, 166-199, 277-299
	1	\$	W1132	006R	18		26-22-21	ALL
	2	\$	W1132	007R	18		26-22-21	ALL
	3	\$	W1132	009R	18		26-22-21	ALL
L00544		P040-00/ /		LIGHT-NO.2 BOTTLE DISCH (SB 26-0066)				275-276
L00544		P040-00/ /		LIGHT-NO.2 BOTTLE DISCHARGED				277-299
	1	\$	W1132	016R	18		26-22-21	275-299
	2	\$	W1132	017R	18		26-22-21	275-299
	3	\$	W1132	015R	18		26-22-21	275-299
L00545		D0190/135/R055		LIGHT-AFT CARGO DOOR				ALL
	=G	D	W0962	028	20		33-31-61	ALL
	=P	D	W0962	027	20		33-31-61	ALL
L00546		D0204/145/R070		SILL LIGHT-AFT CARGO DOOR				ALL
	=G	D	W0962	021	20		33-37-21	050-099
	=G	D	W0962	021	18		33-37-21	150-199, 275-299
	=P	D	W0962	020	20		33-37-21	050-099
	=P	D	W0962	020	18		33-37-21	150-199, 275-299
L00547		D0216/135/R055		LIGHT-AFT CARGO DOOR				ALL
	=G	D	W0962	018	20		33-31-61	ALL
	=G	D	W0962	028	20		33-31-61	ALL
	=P	D	W0962	017	20		33-31-61	ALL
	=P	D	W0962	027	20		33-31-61	ALL
L00548		1164/194/R033		LIGHT-AFT A CARGO COMPT				ALL
	=G	C	W0662	034	18		33-37-21	050-099
	=G	C	W0662	034	16		33-37-21	150-199, 275-299
	=P	C	W0662	033	18		33-37-21	050-099
	=P	C	W0662	035	18		33-37-21	050-099
	=P	C	W0662	033	16		33-37-21	150-199, 275-299

HOOKUP LIST

D280T132

91-21-51

Section L00500

Page 5

Mar 07/2008



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
L00548		1164/194/R033		LIGHT-AFT A CARGO COMPT (continued)				ALL
	=P	C	W0662	035	16		33-37-21	150-199, 275-299
L00549		1164/194/L033		LIGHT-AFT A CARGO COMPT				ALL
	=G	C	W0662	036	18		33-37-21	050-099
	=G	C	W0662	036	16		33-37-21	150-199, 275-299
	=P	C	W0662	035	18		33-37-21	050-099
	=P	C	W0662	035	16		33-37-21	150-199, 275-299
L00550		1230/194/R033		LIGHT-AFT B CARGO COMPT				ALL
	=G	C	W0662	038	18		33-37-21	050-099
	=G	C	W0662	038	16		33-37-21	150-199, 275-299
	=P	C	W0662	023	18		33-37-21	050-099
	=P	C	W0662	039	18		33-37-21	050-099
	=P	C	W0662	023	16		33-37-21	150-199, 275-299
	=P	C	W0662	039	16		33-37-21	150-199, 275-299
L00551		1230/194/L033		LIGHT-AFT B CARGO COMPT				ALL
	=G	C	W0662	040	18		33-37-21	050-099
	=G	C	W0662	040	16		33-37-21	150-199, 275-299
	=P	C	W0662	039	18		33-37-21	050-099
	=P	C	W0662	061	18		33-37-21	050-099
	=P	C	W0662	039	16		33-37-21	150-199, 275-299
	=P	C	W0662	061	16		33-37-21	150-199, 275-299
L00552		1296/194/R033		LIGHT-AFT A CARGO COMPT				ALL
	=G	C	W0662	042	18		33-37-21	050-099
	=G	C	W0662	042	16		33-37-21	150-199, 275-299
	=P	C	W0662	041	18		33-37-21	050-099
	=P	C	W0662	043	18		33-37-21	050-099
	=P	C	W0662	041	16		33-37-21	150-199, 275-299
	=P	C	W0662	043	16		33-37-21	150-199, 275-299
L00553		1296/194/L033		LIGHT-AFT A CARGO COMPT				ALL
	=G	C	W0662	044	18		33-37-21	050-099
	=G	C	W0662	044	16		33-37-21	150-199, 275-299
	=P	C	W0662	043	18		33-37-21	050-099
	=P	C	W0662	043	16		33-37-21	150-199, 275-299

HOOKUP LIST

D280T132

91-21-51
Section L00500
Page 6
Mar 07/2008



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
L00554		1362/194/R033		LIGHT-AFT B CARGO COMPT				ALL
	=G	C	W0662	046	18		33-37-21	050-099
	=G	C	W0662	046	16		33-37-21	150-199, 275-299
	=P	C	W0662	045	18		33-37-21	050-099
	=P	C	W0662	045	16		33-37-21	150-199, 275-299
L00555		1362/194/L033		LIGHT-AFT B CARGO COMPT				ALL
	=G	C	W0662	048	18		33-37-21	050-099
	=G	C	W0662	048	16		33-37-21	150-199, 275-299
	=P	C	W0662	045	18		33-37-21	050-099
	=P	C	W0662	047	18		33-37-21	050-099
	=P	C	W0662	045	16		33-37-21	150-199, 275-299
	=P	C	W0662	047	16		33-37-21	150-199, 275-299
L00556		1430/194/R033		LIGHT-AFT A CARGO COMPT				ALL
	=G	C	W0662	050	18		33-37-21	050-099
	=G	C	W0662	050	16		33-37-21	150-199, 275-299
	=P	C	W0662	049	18		33-37-21	050-099
	=P	C	W0662	049	16		33-37-21	150-199, 275-299
L00557		1409/170/L082		LIGHT-AFT A CARGO COMPT SILL				ALL
	=G	C	W0662	054	18		33-37-21	050-099
	=G	C	W0662	054	16		33-37-21	150-199, 275-299
	=P	C	W0662	053	18		33-37-21	050-099
	=P	C	W0662	053	16		33-37-21	150-199, 275-299
L00558		1491/194/R033		LIGHT-AFT B CARGO COMPT				ALL
	=G	C	W0662	058	18		33-37-21	050-099
	=G	C	W0662	058	16		33-37-21	150-199, 275-299
	=P	C	W0662	057	18		33-37-21	050-099
	=P	C	W0662	057	16		33-37-21	150-199, 275-299
L00560		1491/194/L033		LIGHT-AFT B CARGO COMPT				ALL
	=G	C	W0662	060	18		33-37-21	050-099
	=G	C	W0662	060	16		33-37-21	150-199, 275-299
	=P	C	W0662	057	18		33-37-21	050-099
	=P	C	W0662	059	18		33-37-21	050-099
	=P	C	W0662	057	16		33-37-21	150-199, 275-299
	=P	C	W0662	059	16		33-37-21	150-199, 275-299

HOOKUP LIST

D280T132

91-21-51

Section L00500

Page 7

Mar 07/2008



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
L00561		P007-00/ /		LIGHT ASSY-GLARESHIELD FLDT,L				ALL
	BLK		W1052	B-B			33-11-13	ALL
	WHT		W1052	B-A			33-11-13	ALL
L00562		P007-00/ /		LIGHT ASSY-GLARESHIELD FLDT,R				ALL
	BLK		W1054	B-B			33-11-13	ALL
	WHT		W1054	B-A			33-11-13	ALL
L00564		0356/280/R038		LIGHT-LAV CALL,FWD R				050-099, 151-199
L00564		0356/280/R044		LIGHT-LAV CALL,FWD R				150, 275-299
	L2	C	W0665	019	22		33-25-11	050-099, 162-199
	L2	C	W0102	053	22		33-25-11	151-157
	=P	\$	W0102	053	22		33-25-11	150, 275-299
L00565		0356/280/L038		LIGHT-LAV CALL,FWD L				ALL
	L2	C	W0665	018	22		33-25-11	050-099, 162-199
	L2	C	W0104	053	22		33-25-11	151-157
	=P	\$	W0104	053	22		33-25-11	150, 275-299
L00568		1505/280/R032		LIGHT-LAV CALL,AFT R				050-099, 150-199
L00568		1473/280/R044		LIGHT-LAV CALL,AFT R				275-299
	=P	\$	W1125	053	22		33-25-11	050-099, 150-199
	=P	\$	W0108	053	22		33-25-11	275-299
L00569		1505/280/L033		LIGHT-LAV CALL,AFT L				050-099, 150-199
L00569		1471/280/L044		LIGHT-LAV CALL,AFT L				275-299
	=P	\$	W1123	053	22		33-25-11	050-099, 150-199
	=P	\$	W0106	053	22		33-25-11	275-299
L00571		P036-00/ /		LIGHT-HOT BUS WARN,115V AC L				ALL
	1	L	W1044	034	14		24-51-12	ALL
	2	L	W1044	035	14		24-51-12	ALL
L00572		P036-00/ /		LIGHT-HOT BUS WARN,UTIL L				ALL
	1	L	W1044	036	14		24-51-13	ALL
	2	L	W1044	037	14		24-51-13	ALL
L00573		P037-00/ /		LIGHT-HOT BUS WARN,115V AC R				ALL
	1	L	W1046	030	14		24-51-22	ALL
	2	L	W1046	031	14		24-51-22	ALL

HOOKUP LIST

D280T132

91-21-51

Section L00500

Page 8

Mar 07/2008



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
L00574		P037-00/ /		LIGHT-HOT BUS WARN,UTIL BUS R				ALL
	1	L	W1046	032	14		24-51-23	ALL
	2	L	W1046	033	14		24-51-23	ALL
L00575		P033-00/ /		LIGHT-HOT BUS WRN,115V GND SVCE				ALL
	1	L	W0138	101	14		24-51-52	ALL
	2	L	W0138	102	14		24-51-52	ALL
L00576		P010-00/ /		LIGHTPLATE-FLAP SETTING				ALL
	BLK		W5150	F-A			33-13-18	ALL
	WHT		W5150	F-B			33-13-18	ALL
L00577		P010-00/ /		LIGHTPLATE-SPEED BRAKE				ALL
	BLK		W5150	K-A			33-13-18	ALL
	WHT		W5150	K-B			33-13-18	ALL
L00579		0356/280/L038		LIGHT-MASTER CALL,FWD L				050-099, 150-199
L00579		0356/280/L045		LIGHT-MASTER CALL,FWD L				275-299
	L3	C	W0665	171	24		23-34-13	050-099
	L3	C	W0104	052	22		23-34-13	151-157
	L3	C	W0665	130	24		23-34-13	162-199
	=P	\$	W0104	052	22		23-34-13	150, 275-299
L00580		0356/280/R038		LIGHT-MASTER CALL,FWD R				050-099, 150-199
L00580		0356/280/R045		LIGHT-MASTER CALL,FWD R				275-299
	L3	C	W0665	010	24		23-34-13	050-099
	L3	C	W0102	052	22		23-34-13	151-157
	L3	C	W0665	010	22		23-34-13	162-199
	=P	\$	W0102	052	22		23-34-13	150, 275-299
L00581		851/280/L 38		LIGHT-MASTER CALL AFT B/C L				050-099, 150-154, 156, 162-199
L00581		0851/280/L038		LIGHT-MASTER CALL,MID L				155, 157
	L3	C	W0665	132	24		23-34-13	155
	L3	C	W0665	171	24		23-34-13	157
	=P	\$	W1113	002	22		23-34-13	050-099, 150-154, 156, 162-199
L00582		851/280/R 38		LIGHT-MASTER CALL AFT B/C R				050-099, 150-154, 156, 162-199
L00582		0851/280/R038		LIGHT-MASTER CALL,MID R				155, 157
	L3	C	W0665	172	24		23-34-13	155, 157
	=P	\$	W1115	002	22		23-34-13	050-099, 150-154, 156, 162-199

HOOKUP LIST

D280T132

91-21-51

Section L00500

Page 9

Mar 07/2008



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
L00583		1505/280/L034		LIGHT-MASTER CALL,AFT L				050-099, 150-199
L00583		1471/280/L043		LIGHT-MASTER CALL,AFT L				275-299
	= P	\$	W1123	052	22		23-34-13	050-099, 150-199
	= P	\$	W0106	052	22		23-34-13	275-299
L00584		1505/280/R034		LIGHT-MASTER CALL,AFT R				050-099, 150-199
L00584		1471/280/R043		LIGHT-MASTER CALL,AFT R				275-299
	= P	\$	W1125	052	22		23-34-13	050-099, 150-199
	= P	\$	W0108	052	22		23-34-13	275-299
L00585		P001-03/ /		LIGHT ASSY-INNER MKR BEACON,CAPT				ALL
	1	1A	W0013	006	22		33-16-13	ALL
	2	1A	W0013	003	22		34-32-11	ALL
	3	1A	W0013	007	22		33-16-13	ALL
	DED		W0013	006Z			33-16-13	ALL
L00586		P001-03/ /		LIGHT ASSY-MIDDLE MKR BEACON,CAPT				ALL
	1	1A	W0013	008	22		33-16-13	ALL
	2	1A	W0013	002	22		34-32-11	ALL
	3	1A	W0013	009	22		33-16-13	ALL
	DED		W0013	008Z			33-16-13	ALL
L00587		P001-03/ /		LIGHT ASSY-OUTER MKR BEACON,CAPT				ALL
	1	1A	W0013	010	22		33-16-13	ALL
	2	1A	W0013	001	22		34-32-11	ALL
	3	1A	W0013	011	22		33-16-13	ALL
	DED		W0013	010Z			33-16-13	ALL
L00588		P003-03/ /		LIGHT ASSY-INNER MKR BEACON,F/O				ALL
	1	1A	W0033	023	22		33-16-15	ALL
	2	1A	W0033	015	22		34-32-11	ALL
	3	1A	W0033	024	22		33-16-15	ALL
	DED		W0033	023Z			33-16-15	ALL
	DED		W0033	024Z			33-16-15	ALL
L00589		P003-03/ /		LIGHT ASSY-MIDDLE MKR BEACON,F/O				ALL
	1	1A	W0033	025	22		33-16-15	ALL
	2	1A	W0033	014	22		34-32-11	ALL
	3	1A	W0033	026	22		33-16-15	ALL
	DED		W0033	025Z			33-16-15	ALL

HOOKUP LIST

D280T132

91-21-51

Section L00500

Page 10

Mar 07/2008



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
L00589		P003-03/ /		LIGHT ASSY-MIDDLE MKR BEACON,F/O (continued)				ALL
	DED		W0033	026Z			33-16-15	ALL
L00590		P003-03/ /		LIGHT ASSY-OUTER MKR BEACON,F/O				ALL
	1	1A	W0033	027	22		33-16-15	ALL
	2	1A	W0033	013	22		34-32-11	ALL
	3	1A	W0033	028	22		33-16-15	ALL
	DED		W0033	027Z			33-16-15	ALL
	DED		W0033	028Z			33-16-15	ALL
L00591		P001-03/ /		LIGHT-A/T DISENGAGE				ALL
	1	1A	W0013	145	22		33-16-13	ALL
	2	1A	W0013	058	22		22-34-11	ALL
	3	1A	W0013	099	22		33-16-13	ALL
	DED		W0013	099Z			33-16-13	ALL
	DED		W0013	145Z			33-16-13	ALL
L00592		P010-00/ /		LIGHT-PARK BRAKE				ALL
	1	1A	W5150	389	22		33-16-18	ALL
	2	1A	W5150	387	22		32-44-11	ALL
	3	1A	W5150	388	22		33-16-18	ALL
L00593		0282/280/L039		SOCKET-NIGHT LIGHT				ALL
	=G	C	W0130	003	22		33-22-41	ALL
	=G	C	W0130	004	22		33-22-41	ALL
	=P	C	W0130	001	22		33-22-41	ALL
	=P	C	W0130	002	22		33-22-41	ALL
L00594		0282/280/L020		SOCKET-NIGHT LIGHT				ALL
	=G	C	W0130	003	22		33-22-41	ALL
	=P	C	W0130	002	22		33-22-41	ALL
L00595		P024-00/ /		LIGHT-CONT PNL DSPL,FWD CAR. EXTERIOR				ALL
	=1		W0700	A-A			25-53-11	ALL
	=2		W0700	A-B			25-53-11	ALL
L00596		P027-00/ /		LIGHT-CONT PNL DSPL,AFT CAR. EXTERIOR				ALL
	=1		W0706	A-A			25-53-21	ALL
	=2		W0706	A-B			25-53-21	ALL

HOOKUP LIST

D280T132

91-21-51

Section L00500

Page 11

Mar 07/2008



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
L00597		P043-00/ /		LIGHT-CARGO DR OPEN,FWD				ALL
	1	B	W1134	031	22		52-34-12	ALL
	1	B	W1134	032	22		52-34-12	ALL
	2	B	W1134	007	22		52-34-12	ALL
	3	B	W1134	025	22		52-34-12	ALL
L00598		P044-00/ /		LIGHT-CARGO DR OPEN,AFT				ALL
	1	B	W1136	031	22		52-35-12	ALL
	1	B	W1136	032	22		52-35-12	ALL
	2	B	W1136	007	22		52-35-12	ALL
	3	B	W1136	025	22		52-35-12	ALL
L00599		P043-00/ /		LIGHT-CARGO DR CLOSED,FWD				ALL
	1	B	W1134	032	22		52-34-12	ALL
	2	B	W1134	008	22		52-34-12	ALL
	3	B	W1134	023	20		52-34-12	ALL
	3	B	W1134	025	22		52-34-12	ALL

HOOKUP LIST

D280T132

91-21-51

Section L00500
Page 12 End
Mar 07/2008



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
L00600		P044-00/ /		LIGHT-CARGO DR CLOSED,AFT				ALL
	1	B	W1136	032	22		52-35-12	ALL
	2	B	W1136	008	22		52-35-12	ALL
	3	B	W1136	023	20		52-35-12	ALL
	3	B	W1136	025	22		52-35-12	ALL
L00603		P001-03/ /		ANNUNCIATOR LIGHT INDICATOR-FMC				ALL
	1	1A	W0013	147	22		33-16-13	ALL
	2	1A	W0013	062	22		34-61-15	ALL
	3	1A	W0013	126	22		33-16-13	ALL
	DED		W0013	126Z			33-16-13	ALL
	DED		W0013	147Z			33-16-13	ALL
L00604		P010-00/ /		LIGHTPLATE-FUEL CONTROL				ALL
	BLK		W5150	H-A			33-13-18	ALL
	WHT		W5150	H-B			33-13-18	ALL
L00605		P001-03/ /		LIGHT-BRAKE SOURCE PRESS.				ALL
	1	1A	W0013	025	22		33-16-13	ALL
	2	1A	W0013	030	22		32-41-11	ALL
	3	1A	W0013	026	22		33-16-13	ALL
	DED		W0013	025Z			33-16-13	ALL
	DED		W0013	026Z			33-16-13	ALL
	DED		W0013	030Z			32-41-11	ALL
L00607		0840/260/R021		LT-CLOSET				050-099
L00607		0654+120/258/R021		LT-CLOSET				151-152
	=G	C	W1192	003	22		33-22-21	050-099
	=G	C	W1192	004	22		33-22-21	050-099
	=G	C	W2010	004	22		33-22-21	151-152
	=P	C	W1192	008	22		33-22-21	050-099
	=P	C	W2010	005	22		33-22-21	151-152
L00609		P001-03/ /		LIGHT PLATE-RESERVE BRAKE & STRG C-SYS				ALL
	=P	B	W0013	033	20		33-13-11	ALL
L00611		0334/280/L009		LIGHT-LWD CEILING				050-099, 150-199
L00611		0325/280/L009		LIGHT-LWD CEILING				275-299
	1	C	W0832	015	20		33-51-13	050-099
	1	C	W0784	081	22		33-51-13	150-199, 275-299

HOOKUP LIST

D280T132

91-21-51

Section L00600

Page 1

Mar 07/2008



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
L00611		0334/280/L009		LIGHT-LWD CEILING (continued)				050-099, 150-199
L00611		0325/280/L009		LIGHT-LWD CEILING (continued)				275-299
	2	C	W0832	016	20		33-51-13	050-099
	2	C	W0784	082	20		33-51-13	150-199, 275-299
L00614		1564/280/L007		LIGHT-AFT ATTENDANT SIGN				275-299
	NS	C	W0810	532	20		33-24-13	275-299
	FSB	C	W0810	531	20		33-24-13	275-299
	GND	C	W0810	533	20		33-24-13	275-299
L00617		D0516/195/R110		LIGHT-SILL-BAY C				ALL
	=G	D	W0960	021	20		33-37-11	050-099
	=G	D	W0960	023	20		33-37-11	050-099
	=G	D	W0960	021	18		33-37-11	150-199, 275-299
	=G	D	W0960	023	18		33-37-11	150-199, 275-299
	=P	D	W0960	020	20		33-37-11	050-099
	=P	D	W0960	022	20		33-37-11	050-099
	=P	D	W0960	020	18		33-37-11	150-199, 275-299
	=P	D	W0960	022	18		33-37-11	150-199, 275-299
L00618		D0580/195/R110		LIGHT-SILL-BAY D				ALL
	=G	D	W0960	023	20		33-37-11	050-099
	=G	D	W0960	023	18		33-37-11	150-199, 275-299
	=P	D	W0960	022	20		33-37-11	050-099
	=P	D	W0960	022	18		33-37-11	150-199, 275-299
L00619		P035-00/ /		LIGHT-BAY A ON				050-099
	=G	\$	W1066	567	22		25-53-13	050-099
	=G	\$	W1066	813	22		25-53-13	050-099
	=P	\$	W1066	541	22		25-53-13	050-099
L00621		0263/105/L009		LIGHT-TAXI,L				ALL
	=G	M	W1304	008	16		33-42-21	ALL
	=P	M	W1304	007	16		33-42-21	ALL
L00622		0263/105/R009		LIGHT-TAXI,R				ALL
	=G	M	W1304	006	16		33-42-21	ALL
	=P	M	W1304	005	16		33-42-21	ALL

HOOKUP LIST

D280T132

91-21-51

Section L00600

Page 2

Mar 07/2008



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
I L00636		1553/280/R007		LIGHT-LAV CALL,AFT CTR R				050-099
I L00636		1548/280/L007		LIGHT-LAV CALL,AFT CTR R				050-099
	= P	\$	W0120	033	22		33-25-11	050-099
L00637		1548/280/L 6		LT-AFT CTR MSTR CALL				050-099
	= P		W0120	034	22		23-34-13	050-099
L00638		1548/280/0		LIGHT-ATTENDANT CALL,AFT CTR				050-099
	= G		W0120	038	20		23-42-11	050-099
	= P		W0120	035	22		23-42-11	050-099
L00642		0988/211/L098		LIGHT-OVERWING EGRESS				ALL
	1	D	W0788	078	14		33-51-21	ALL
	2	D	W0788	079	14		33-51-21	ALL
L00643		0988/211/R098		LIGHT-OVERWING EGRESS				ALL
	1	D	W0786	064	14		33-51-21	ALL
	2	D	W0786	065	14		33-51-21	ALL
L00644		1384/180/R098		LIGHT-WING RIGHT SLIDE GRD ILLUM				050-099
L00644		1235/180/R098		LIGHT-WING RIGHT SLIDE GRD ILLUM				150-199, 275-299
	1	D	W0786	081	20		33-51-21	ALL
	2	D	W0786	082	20		33-51-21	ALL
L00645		1362/180/L094		LIGHT-WING LEFT SLIDE GRD ILLUM				050-099
L00645		1230/180/L094		LIGHT-WING LEFT SLIDE GRD ILLUM				150-199, 275-299
	1	D	W0784	106	20		33-51-21	ALL
	2	D	W0784	107	20		33-51-21	ALL
L00647		0348/275/L052		LIGHT-LEFT ATTENDANT WORK,FWD AUX				ALL
	= G		W1198	A-B			33-22-31	275-299
	= P		W1198	A-A			33-22-31	275-299
L00648		0343/270/0000		LIGHT-FWD ATTENDANT SIGN				275-278
L00648		0349/277/0000		LIGHT-FWD ATTENDANT SIGN				280-299
	1	C	W1224	124	20		33-24-13	277-278
	2	C	W1224	125	20		33-24-13	277-278
	3	C	W1224	123	20		33-24-13	277-278
	NS	C	W1224	124	20		33-24-13	275
	FSB	C	W1224	123	20		33-24-13	275

HOOKUP LIST

D280T132

91-21-51

Section L00600

Page 3

Aug 05/2009



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
L00648		0343/270/0000		LIGHT-FWD ATTENDANT SIGN (continued)				275-278
L00648		0349/277/0000		LIGHT-FWD ATTENDANT SIGN (continued)				280-299
	GND	C	W1224	125	20		33-24-13	275
L00652		P003-01/ /		LIGHT-LEFT GEAR				ALL
	1	1A	W0035	047	22		33-16-15	ALL
	2	1A	W0035	074	24		32-61-14	ALL
	3	1A	W0035	054	22		33-16-15	ALL
	4	1A	W0035	129	22		33-16-15	ALL
	5	1A	W0035	008	24		32-61-14	ALL
	6	1A	W0035	130	22		33-16-15	ALL
	DED		W0035	008Z			32-61-14	ALL
	DED		W0035	047Z			33-16-15	ALL
	DED		W0035	054Z			33-16-15	ALL
	DED		W0035	129Z			33-16-15	ALL
	DED		W0035	130Z			33-16-15	ALL
L00653		P003-01/ /		LIGHT-RIGHT GEAR				ALL
	1	1A	W0035	048	22		33-16-15	ALL
	2	1A	W0035	075	24		32-61-14	ALL
	3	1A	W0035	055	22		33-16-15	ALL
	4	1A	W0035	131	22		33-16-15	ALL
	5	1A	W0035	009	24		32-61-14	ALL
	6	1A	W0035	132	22		33-16-15	ALL
	DED		W0035	009Z			32-61-14	ALL
	DED		W0035	048Z			33-16-15	ALL
	DED		W0035	055Z			33-16-15	ALL
	DED		W0035	131Z			33-16-15	ALL
	DED		W0035	132Z			33-16-15	ALL
L00654		P003-01/ /		LIGHT-NOSE GEAR				ALL
	1	1A	W0035	046	22		33-16-15	ALL
	2	1A	W0035	073	24		32-61-14	ALL
	3	1A	W0035	053	22		33-16-15	ALL
	4	1A	W0035	128	22		33-16-15	ALL
	5	1A	W0035	007	24		32-61-14	ALL
	6	1A	W0035	127	22		33-16-15	ALL
	DED		W0035	007Z			32-61-14	ALL
	DED		W0035	046Z			33-16-15	ALL
	DED		W0035	053Z			33-16-15	ALL
	DED		W0035	127Z			33-16-15	ALL

HOOKUP LIST

D280T132

91-21-51

Section L00600

Page 4

Mar 07/2008



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
L00654		P003-01/ /		LIGHT-NOSE GEAR (continued)				ALL
	DED		W0035	128Z			33-16-15	ALL
L00655		0863/280/L002		LIGHT-LWR CEILING				050-099
L00655		0935/280/L020		LIGHT-LWR CEILING				150-154, 156, 162-199
L00655		0877/280/L020		LIGHT-LWR CEILING				155, 157
L00655		0870/280/0000		LIGHT-LWR CEILING				275-278
L00655		0875/280/0000		LIGHT-LWR CEILING				280-299
	1	C	W0834	057	20		33-51-12	050-099
	1	C	W0122	131	20		33-51-13	150-154, 156, 162-199
	1	C	W0790	184	18		33-51-13	155, 157
	1	C	W1222	183	18		33-51-12	275-299
	2	C	W0834	043	20		33-51-12	050-099
	2	C	W0122	132	20		33-51-13	150-154, 156, 162-199
	2	C	W0790	190	18		33-51-13	155, 157
	2	C	W1222	184	18		33-51-12	275-299
L00657		P003-01/ /		LIGHT-GEAR				ALL
	1	1A	W0035	045	22		33-16-15	ALL
	2	1A	W0035	137	24		32-61-14	ALL
	3	1A	W0035	052	22		33-16-15	ALL
	4	1A	W0035	126	22		33-16-15	ALL
	5	1A	W0035	138	24		32-61-14	ALL
	6	1A	W0035	093	22		33-16-15	ALL
	DED		W0035	045Z			33-16-15	ALL
	DED		W0035	052Z			33-16-15	ALL
	DED		W0035	093Z			33-16-15	ALL
	DED		W0035	126Z			33-16-15	ALL
L00658		P003-01/ /		LIGHT-DOORS				ALL
	1	1A	W0035	049	22		33-16-15	ALL
	2	1A	W0035	139	24		32-61-14	ALL
	3	1A	W0035	056	22		33-16-15	ALL
	4	1A	W0035	133	22		33-16-15	ALL
	5	1A	W0035	140	24		32-61-14	ALL
	6	1A	W0035	134	22		33-16-15	ALL
	DED		W0035	049Z			33-16-15	ALL
	DED		W0035	056Z			33-16-15	ALL
	DED		W0035	133Z			33-16-15	ALL
	DED		W0035	134Z			33-16-15	ALL

HOOKUP LIST

D280T132

91-21-51

Section L00600

Page 5

Mar 07/2008



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
L00660		P003-01/ /		LIGHT-TRAILING EDGE				ALL
	1	1A	W0035	030	22		33-16-15	ALL
	2	1A	W0035	066	22		27-58-31	ALL
	3	1A	W0035	033	22		33-16-15	ALL
	DED		W0035	030Z			33-16-15	ALL
	DED		W0035	033Z			33-16-15	ALL
L00661		P003-01/ /		LIGHT-LEADING EDGE CONFIGURATION				ALL
	1	1A	W0035	032	22		33-16-15	ALL
	2	1A	W0035	091	22		27-88-11	ALL
	3	1A	W0035	035	22		33-16-15	ALL
	DED		W0035	032Z			33-16-15	ALL
	DED		W0035	035Z			33-16-15	ALL
L00662		P001-03/ /		LIGHT PLATE-CAUTION CANCEL RCL,CTR PNL				ALL
	= P	B	W0013	077	20		33-13-11	ALL
L00663		P003-01/ /		LIGHT-BRAKE TEMP				ALL
	1	1A	W0035	041	22		33-16-15	ALL
	2	1A	W0035	072	22		32-46-11	ALL
	3	1A	W0035	038	22		33-16-15	ALL
L00670		0356/280/R035		LIGHT-FWD ATTENDANT SIGN				275-299
	NS	C	W1224	016	20		33-24-14	275-299
	FSB	C	W1224	015	20		33-24-14	275-299
	GND	C	W1224	017	20		33-24-14	275-299
L00672		0263/193/L044		LIGHT-ELEC/ELEX EQUIP CTR				ALL
	G		W0902	B-B			33-31-41	ALL
	P		W0902	B-A			33-31-41	ALL
L00673		P061-00/ /		FLDT-PWR DISTR PNL,FWD				ALL
	= G	C	W0070	12C	18		33-11-16	ALL
	WHT		W0070	A-A			33-11-16	ALL
L00674		P061-00/ /		FLDT-PWR DISTR PNL,AFT				ALL
	= G	C	W0070	12D	18		33-11-16	ALL
	WHT		W0070	B-A			33-11-16	ALL

HOOKUP LIST

D280T132

91-21-51

Section L00600

Page 6

Mar 07/2008

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
L00680		P003-01/ /		LIGHT-WHEEL WELL FIRE				ALL
	1	1A	W0035	036	22		33-16-15	ALL
	2	1A	W0035	092R	22		26-17-11	ALL
	3	1A	W0035	037	22		33-16-15	ALL
	DED		W0035	036Z			33-16-15	ALL
	DED		W0035	037Z			33-16-15	ALL
L00685		0807/275/L035		LIGHT-MASTER CALL,MID-FWD L (SB 33-0042)				275
L00685		0888/275/L035		LIGHT-MASTER CALL,MID-FWD L				275-276
L00685		0807/275/L035		LIGHT-MASTER CALL,MID-FWD L				277-278
L00685		0888/280/L 38		LIGHT-MASTER CALL				280-299
	L3	C	W0665	145	24		23-34-13	275-278
	=P	\$	W1113	002	22		23-34-13	280-299
L00686		0807/275/R035		LIGHT-MASTER CALL,MID-FWD R (SB 33-0042)				275-276
L00686		0807/275/R035		LIGHT-MASTER CALL,MID-FWD R				275-278
L00686		0888/280/R 38		LIGHT-MASTER CALL				280-299
	L3	C	W0665	146	24		23-34-13	275-278
	=P	\$	W1115	002	22		23-34-13	280-299
L00687		0888/280/L 38		LIGHT-ATTENDENT CALL				275-276
L00687		0888/275/L054		LIGHT-MASTER CALL,MID-AFT L				275-278
L00687		0888/280/L 38		LIGHT-MASTER CALL				277-278
L00687		0807/279/L035		LIGHT-MASTER CALL,MID-AFT L				280-299
	L3	C	W0665	145	24		23-34-13	280-299
	=P	\$	W0665	015	24		23-34-13	275-276
	=P	\$	W1113	002	22		23-34-13	277-278
L00688		0888/280/R 38		LIGHT-ATTENDENT CALL				275-276
L00688		0888/275/R054		LIGHT-MASTER CALL,MID-AFT R				275-278
L00688		0888/280/R 38		LIGHT-MASTER CALL				277-278
L00688		0807/279/R035		LIGHT-MASTER CALL,MID-AFT R				280-299
	L3	C	W0665	146	24		23-34-13	280-299
	=P	\$	W0665	012	24		23-34-13	275-276
	=P	\$	W1115	002	22		23-34-13	277-278
L00689		631/280/R 38		LIGHT-LAV CALL,MID-FWD R				050-099, 150-199
L00689		0631/280/R038		LIGHT-LAV CALL,MID-FWD R				050-099, 150-199
	=P	\$	W1109	003	22		33-25-11	050-099, 150-199

HOOKUP LIST

D280T132

91-21-51

Section L00600

Page 7

Sep 04/2008



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
L00690		631/280/L 38		LIGHT-LAV CALL, MID-FWD L				050-099, 150-199
L00690		0631/280/L038		LIGHT-LAV CALL,MID-FWD L				050-099, 150-199
	=P	\$	W1111	003	22		33-25-11	050-099, 150-199
L00698		P003-01/ /		LIGHTPLATE-MAG/TRUE				ALL
	=P	B	W0035	107	20		33-13-13	ALL
L00699		0916/260/R085		LIGHT-OVER WING HATCH,EXIT SIGN				150-199, 275-299
	1	C	W0834	011	18		33-51-14	150-199, 275-299
	2	C	W0834	028	18		33-51-14	150-199, 275-299

HOOKUP LIST

D280T132

91-21-51

Section L00600

Page 8 End

Feb 06/2009

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
L00700		0916/260/L085		LIGHT-OVER WING HATCH,EXIT SIGN				150-199, 275-299
	1	C	W0834	012	18		33-51-14	150-199
	1	C	W0834	012	16		33-51-14	275-299
	1	C	W0834	031	20		33-51-14	275-299
	2	C	W0834	030	18		33-51-14	150-199, 275-299
L00707		0198/271/0000		FLDT-AISLE STAND				ALL
	A		W0044	A-A			33-11-13	ALL
	B		W0044	A-B			33-11-13	ALL
L00716		P001-03/ /		LIGHT-SPEED BRAKES				ALL
	1	1A	W0013	151	22		33-16-13	ALL
	2	1B	W0013	177	24		31-51-43	ALL
	3	1A	W0013	130	22		33-16-13	ALL
	DED		W0013	151Z			33-16-13	ALL
L00729		0654+90/254/R066		LIGHT-CLOSET				162-199
	=G	C	W1284	003	22		33-22-21	162-199
	=P	C	W1284	002	22		33-22-21	162-199
L00731		631/280/L 38		LIGHT-MASTER CALL FWD B/C L				050-099, 150-199
	=P	\$	W1111	002	22		23-34-13	050-099, 150-199
L00732		631/280/R 38		LIGHT-MASTER CALL,FWD B/C R				050-099, 150-199
	=P	\$	W1109	002	22		23-34-13	050-099, 150-199
L00737		0241/281/L003		LIGHT-CLOSET				150-154
L00737		0246/258/R008		LIGHT-CLOSET				155-157
L00737		0366/274/L066		LIGHT-CLOSET				275-278
	=G	C	W1154	001	22		33-22-21	150-157, 275-299
	=G	C	W1154	014	22		33-22-21	155-157, 275-299
	=P	C	W1154	012	22		33-22-21	150-154
	=P	C	W1154	013	22		33-22-21	155-157, 275-299
L00738		0263/276/L012		LIGHT-CLOSET				155-157
L00738		0383/274/L066		LIGHT-CLOSET				275-278
	=G	C	W1154	014	22		33-22-21	155-157, 275-299
	=P	C	W1154	012	22		33-22-21	155-157, 275-299
	=P	C	W1154	013	22		33-22-21	155-157, 275-299

HOOKUP LIST

D280T132

91-21-51

Section L00700

Page 1

Mar 07/2008



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
L00739		D0505/141/R065		LIGHT-FWD CARGO DOOR				ALL
	=G	D	W0960	010	20		33-31-61	ALL
	=G	D	W0960	026	20		33-31-61	ALL
	=P	D	W0960	009	20		33-31-61	ALL
	=P	D	W0960	025	20		33-31-61	ALL
L00740		D0595/141/R065		LIGHT-FWD CARGO DOOR				ALL
	=G	D	W0960	026	20		33-31-61	ALL
	=P	D	W0960	025	20		33-31-61	ALL
L00741		P061-00/ /		LIGHT-F/OBS MAP				ALL
	=G	C	W0066	82N	20		33-14-11	ALL
	=P	C	W0066	82D	24		33-14-11	ALL
L00745		0292/280/R038		LIGHT-ATTENDANT CALL,FWD CTR R				050-099, 150-199
	=G	\$	W0102	004	20		23-42-11	050-099, 150-199
	=P	\$	W0102	001	22		23-42-11	050-099, 150-199
L00747		0292/280/R038		LIGHT-LAV CALL,FWD CTR R				050-099, 150-199
	=P	\$	W0102	003	22		33-25-11	050-099, 150-199
L00755		0239/276/L016		LIGHT-FWD LAV OCCUPIED				050-099, 150-199
L00755		0239/276/L016		LIGHT-FWD LAV OCCUPIED SB RRB41024-2				275-299
	1	B	W0632	021	22		33-16-26	ALL
	2	B	W1224	068	20		33-26-21	050-099, 150-199
	2	B	W1224	068	22		33-26-21	275-299
	3	B	W0632	022	22		33-16-26	ALL
L00756		0654+64/284/L050		SOCKET-INDIRECT CEILING LTS, FWD				150-199, 275-278
	=G	E	W0812	758	20		33-21-11	150-199, 275-278
	BLK		W0812	B-J			33-21-11	150-199, 275-278
	BLK		W0812	B-K			33-21-11	150-199, 275-278
	WHT		W0812	B-L			33-21-11	150-199, 275-278
	WHT		W0812	B-M			33-21-11	150-199, 275-278
L00757		0654+21/284/R050		SOCKET-INDIRECT CEILING LTS, FWD				150-199, 275-278
	=G	E	W0812	647	20		33-21-11	150-199, 275-278
	BLK		W0812	A-R			33-21-11	150-199, 275-278
	BLK		W0812	A-S			33-21-11	150-199, 275-278
	WHT		W0812	A-T			33-21-11	150-199, 275-278

HOOKUP LIST

D280T132

91-21-51

Section L00700

Page 2

Mar 07/2008

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
L00757		0654+21/284/R050		SOCKET-INDIRECT CEILING LTS, FWD (continued)				150-199, 275-278
	WHT		W0812	A-U			33-21-11	150-199, 275-278
L00758		0654+64/284/L025		ASSEMBLY-INDIRECT CEILING LTS, FWD				150-199, 275-299
	BLK		W0822	A-U			33-21-11	150-199, 275-278
	BLK		W0822	A-V			33-21-11	150-199, 275-278
	RED		W0822	A-Y			33-21-11	150-199, 275-278
	WHT		W0822	A-W			33-21-11	150-199, 275-278
	WHT		W0822	A-X			33-21-11	150-199, 275-278
L00759		0654+21/284/R025		ASSEMBLY-INDIRECT CEILING LTS, FWD				150-199, 275-299
	BLK		W0822	A-N			33-21-11	150-199, 275-278
	BLK		W0822	A-P			33-21-11	150-199, 275-278
	RED		W0822	A-T			33-21-11	150-199, 275-278
	WHT		W0822	A-R			33-21-11	150-199, 275-278
	WHT		W0822	A-S			33-21-11	150-199, 275-278
L00760		0705/284/L050		SOCKET-INDIRECT CEILING LTS, FWD				150-199, 280-299
L00760		0654+84/284/L050		SOCKET-INDIRECT CEILING LTS, FWD				275-278
	= G	E	W0812	642	20		33-21-11	275-278
	BLK		W0812	A-E			33-21-11	150-199, 275-278
	BLK		W0812	A-F			33-21-11	150-199, 275-278
	WHT		W0812	A-G			33-21-11	150-199, 275-278
	WHT		W0812	A-H			33-21-11	150-199, 275-278
L00761		0705/284/R050		SOCKET-INDIRECT CEILING LTS, FWD				150-199, 280-299
L00761		0654+84/284/R050		SOCKET-INDIRECT CEILING LTS, FWD				275-278
	= G	E	W0812	724	20		33-21-11	150-199, 275-278
	BLK		W0812	A-K			33-21-11	150-199, 275-278
	BLK		W0812	A-L			33-21-11	150-199, 275-278
	WHT		W0812	A-M			33-21-11	150-199, 275-278
	WHT		W0812	A-N			33-21-11	150-199, 275-278
L00762		0705/284/L025		SOCKET-INDIRECT CEILING LTS, FWD				150-199, 280-299
L00762		0654+84/284/L025		SOCKET-INDIRECT CEILING LTS, FWD				275-278
	= G	E	W0822	512	20		33-21-11	278
	BLK		W0822	B-E			33-21-11	150-199, 275-278
	BLK		W0822	B-F			33-21-11	150-199, 275-278
	RED		W0822	K-E			33-21-11	275-277
	WHT		W0822	B-G			33-21-11	150-199, 275-278
	WHT		W0822	B-H			33-21-11	150-199, 275-278

HOOKUP LIST

D280T132

91-21-51

Section L00700

Page 3

Mar 07/2008



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
L00763		0705/284/R025		SOCKET-INDIRECT CEILING LTS, FWD				150-199, 280-299
L00763		0654+84/284/R025		SOCKET-INDIRECT CEILING LTS, FWD				275-278
	= G	E	W0822	094	20		33-21-11	150-199, 278
	BLK		W0822	A-J			33-21-11	150-199, 275-278
	BLK		W0822	A-K			33-21-11	150-199, 275-278
	RED		W0822	A-I			33-21-11	275-277
	WHT		W0822	A-L			33-21-11	150-199, 275-278
	WHT		W0822	A-M			33-21-11	150-199, 275-278
L00764		0744/284/L050		SOCKET-INDIRECT CEILING LTS, FWD				150-199, 280-299
	= G	E	W0812	642	20		33-21-11	150-199
	BLK		W0812	B-E			33-21-11	150-199
	BLK		W0812	B-F			33-21-11	150-199
	WHT		W0812	B-G			33-21-11	150-199
	WHT		W0812	B-H			33-21-11	150-199
L00765		0744/284/R050		SOCKET-INDIRECT CEILING LTS, FWD				150-199, 280-299
	BLK		W0812	A-W			33-21-11	150-199
	BLK		W0812	A-X			33-21-11	150-199
	WHT		W0812	A-Y			33-21-11	150-199
	WHT		W0812	A-Z			33-21-11	150-199
L00766		0744/284/L025		SOCKET-INDIRECT CEILING LTS, FWD				150-199, 280-299
	= G	E	W0822	512	20		33-21-11	150-199
	BLK		W0822	B-J			33-21-11	150-199
	BLK		W0822	B-K			33-21-11	150-199
	WHT		W0822	B-L			33-21-11	150-199
	WHT		W0822	B-M			33-21-11	150-199
L00767		0744/284/R025		SOCKET-INDIRECT CEILING LTS, FWD				150-199, 280-299
	BLK		W0822	A-E			33-21-11	150-199
	BLK		W0822	A-F			33-21-11	150-199
	WHT		W0822	A-G			33-21-11	150-199
	WHT		W0822	A-H			33-21-11	150-199
L00768		1196/284/L050		SOCKET-INDIRECT CEILING LTS, AFT				150-199, 275-299
	= G	E	W0816	083	20		33-21-14	150-199, 275-299
	BLK		W0816	A-J			33-21-14	150-199, 275-299
	BLK		W0816	A-K			33-21-14	150-199, 275-299
	WHT		W0816	A-L			33-21-14	150-199, 275-299
	WHT		W0816	A-M			33-21-14	150-199, 275-299

HOOKUP LIST

D280T132

91-21-51

Section L00700

Page 4

Mar 07/2008

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
L00769		1196/284/R050		SOCKET-INDIRECT CEILING LTS, AFT				150-199, 275-299
	= G	E	W0816	059	20		33-21-14	150-199, 275-299
	BLK		W0816	A-E			33-21-14	150-199, 275-299
	BLK		W0816	A-F			33-21-14	150-199, 275-299
	WHT		W0816	A-G			33-21-14	150-199, 275-299
	WHT		W0816	A-H			33-21-14	150-199, 275-299
L00770		1196/284/L025		ASSEMBLY-INDIRECT CEILING LTS, AFT				150-199, 275-299
	BLK		W0824	A-L			33-21-14	150-199, 275-299
	BLK		W0824	A-M			33-21-14	150-199, 275-299
	RED		W0824	A-R			33-21-14	150-199, 275-299
	WHT		W0824	A-N			33-21-14	150-199, 275-299
	WHT		W0824	A-P			33-21-14	150-199, 275-299
L00771		1196/284/R025		ASSEMBLY-INDIRECT CEILING LTS, AFT				150-199, 275-299
	BLK		W0824	A-F			33-21-14	150-199, 275-299
	BLK		W0824	A-G			33-21-14	150-199, 275-299
	RED		W0824	A-K			33-21-14	150-199, 275-299
	WHT		W0824	A-H			33-21-14	150-199, 275-299
	WHT		W0824	A-J			33-21-14	150-199, 275-299
L00772		1197+88/284/L050		SOCKET-INDIRECT CEILING LTS, AFT				150-199, 275-299
	= G	E	W0816	629	20		33-21-14	150-199, 275-299
	BLK		W0816	A-P			33-21-14	150-199, 275-299
	BLK		W0816	A-R			33-21-14	150-199, 275-299
	WHT		W0816	A-S			33-21-14	150-199, 275-299
	WHT		W0816	A-T			33-21-14	150-199, 275-299
L00773		1197+88/284/R050		SOCKET-INDIRECT CEILING LTS, AFT				150-199, 275-299
	= G	E	W0816	070	20		33-21-14	150-199, 275-299
	BLK		W0816	A-U			33-21-14	150-199, 275-299
	BLK		W0816	A-V			33-21-14	150-199, 275-299
	WHT		W0816	A-W			33-21-14	150-199, 275-299
	WHT		W0816	A-X			33-21-14	150-199, 275-299
L00774		1197+88/284/L025		ASSEMBLY-INDIRECT CEILING LTS, AFT				150-199, 275-299
	BLK		W0824	B-F			33-21-14	150-199, 275-299
	BLK		W0824	B-G			33-21-14	150-199, 275-299
	RED		W0824	B-K			33-21-14	150-199, 275-299
	WHT		W0824	B-H			33-21-14	150-199, 275-299
	WHT		W0824	B-J			33-21-14	150-199, 275-299

HOOKUP LIST

D280T132

91-21-51

Section L00700

Page 5

Mar 07/2008



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
L00775		1197+88/284/R025		ASSEMBLY-INDIRECT CEILING LTS, AFT				150-199, 275-299
	BLK		W0824	A-S			33-21-14	150-199, 275-299
	BLK		W0824	A-T			33-21-14	150-199, 275-299
	RED		W0824	A-W			33-21-14	150-199, 275-299
	WHT		W0824	A-U			33-21-14	150-199, 275-299
	WHT		W0824	A-V			33-21-14	150-199, 275-299
L00776		0654+66/283/R040		LIGHT-AISLE EMERGENCY				150-199, 275-278
	1	C	W1222	023	18		33-51-12	150-199
	1	C	W1222	028	18		33-51-12	275-278
	2	C	W1222	097	18		33-51-12	150-199, 275-278
L00777		0686/283/R040		LIGHT-AISLE EMERGENCY				150-199, 280-299
L00777		0675/283/R040		LIGHT-AISLE EMERGENCY				275-278
	1	C	W1222	082	18		33-51-12	150-199, 275-299
	2	C	W1222	098	18		33-51-12	150-199, 275-299
L00778		1197+43/283/R040		LIGHT-AISLE EMERGENCY				150-199, 275-299
	1	C	W0790	070	22		33-51-12	150-199, 275-299
	2	C	W0790	071	20		33-51-12	150-199, 275-299
L00779		1197+132/283/R040		LIGHT-AISLE EMERGENCY				150-199, 275-299
	1	C	W0790	013	18		33-51-12	150-199, 275-299
	2	C	W0790	059	18		33-51-12	150-199, 275-299
L00780		0654+66/283/L040		LIGHT-AISLE EMERGENCY				150-199, 275-278
	1	C	W0784	025	20		33-51-13	150-199, 275-278
	2	C	W0784	041	20		33-51-13	150-199, 275-278
L00781		0686/283/L040		LIGHT-AISLE EMERGENCY				150-199, 280-299
L00781		0675/283/L040		LIGHT-AISLE EMERGENCY				275-278
	1	C	W0790	042	18		33-51-13	150-199, 275-299
	2	C	W0790	064	18		33-51-13	150-199, 275-299
L00782		1197+43/283/L040		LIGHT-AISLE EMERGENCY				150-199, 275-299
	1	C	W0790	036	18		33-51-13	150-199, 275-299
	2	C	W0790	068	18		33-51-13	150-199, 275-299
L00783		1197+132/283/L040		LIGHT-AISLE EMERGENCY				150-199, 275-299
	1	C	W0788	015	22		33-51-13	150-199, 275-299

HOOKUP LIST

D280T132

91-21-51

Section L00700

Page 6

Mar 07/2008



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
L00783		1197+132/283/L040		LIGHT-AISLE EMERGENCY (continued)				150-199, 275-299
	2	C	W0788	016	20		33-51-13	150-199, 275-299

HOOKUP LIST
D280T132

91-21-51
Section L00700
Page 7 End
Mar 07/2008



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
L00804		P003-01/ /		LIGHT-TAIL SKID				150-199, 275-299
	1	1A	W0035	043	22		33-16-15	150-199, 275-299
	2	1A	W0035	162	24		32-71-11	150-199, 275-299
	3	1A	W0035	057	22		33-16-15	150-199, 275-299
L00807		0527/278/0000		SIGN-LAVATORY OCCUPIED				280-299
	G	C	W0814	525	20		33-26-21	280-299
	P	C	W0814	524	20		33-26-21	280-299
	S	C	W0814	523	20		33-26-21	280-299
L00808		0683/283/R044		SOCKET-NIGHT LIGHT				150-199
L00808		0675/280/R040		SOCKET-NIGHT LIGHT				275-278
	=G	C	W1236	064	20		33-21-21	150-199, 275-278
	=P	C	W1236	147	22		33-21-21	150-199
	=P	C	W1236	013	22		33-21-21	150-199, 275-278
L00809		654+109/283/L044		SOCKET-NIGHT LIGHT				150-199
L00809		0675/280/L040		SOCKET-NIGHT LIGHT				275-278
	=G	C	W1234	034	20		33-21-21	150-199, 275-278
	=P	C	W1234	040	22		33-21-21	150-199
	=P	C	W1234	036	22		33-21-21	150-199, 275-278
L00810		1197+132/280/R040		SOCKET-NIGHT LIGHT				150-199, 275-299
	=G	C	W1240	037	20		33-21-21	150-199, 275-299
	=P	C	W1240	008	22		33-21-21	150-199, 275-299
	=P	C	W1240	014	22		33-21-21	150-199, 275-299
L00811		1197+132/280/L040		SOCKET-NIGHT LIGHT				150-199, 275-299
	=G	C	W0788	042	20		33-21-21	150-199, 275-299
	=P	C	W0788	041	22		33-21-21	150-199, 275-299
	=P	C	W0788	051	22		33-21-21	150-199, 275-299
L00812		P035-00/ /		LIGHT-BAY B ON				150-199, 275-299
	=G	\$	W1066	010	22		25-53-13	150-199, 275-299
	=P	\$	W1066	545	22		25-53-13	150-199, 275-299
L00813		P035-00/ /		LIGHT-BAY C ON				150-199, 275-299
	=G	\$	W1066	546	22		25-53-13	150-199, 275-299
	=P	\$	W1066	568	22		25-53-13	150-199, 275-299

HOOKUP LIST
D280T132

91-21-51
Section L00800
Page 1
Mar 07/2008



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
L00814		P035-00/ /		LIGHT-BAY D ON				150-199, 275-299
	=G	\$	W1066	566	22		25-53-13	150-199, 275-299
	=P	\$	W1066	32G	22		25-53-13	150-199, 275-299
	=P	\$	W1066	549	22		25-53-13	150-199, 275-299
	=P	\$	W1066	567	22		25-53-13	150-199, 275-299
L00815		P035-00/ /		LIGHT-BAY E ON				150-199, 275-299
	=G	\$	W1066	32H	22		25-53-13	150-199, 275-299
	=P	\$	W1066	32F	22		25-53-13	150-199, 275-299
	=P	\$	W1066	33A	22		25-53-13	150-199, 275-299
L00816		P035-00/ /		LIGHT-BAY F ON				150-199, 275-299
	=G	\$	W1066	32M	22		25-53-13	150-199, 275-299
	=P	\$	W1066	32F	22		25-53-13	150-199, 275-299
	=P	\$	W1066	32G	22		25-53-13	150-199, 275-299
L00817		P035-00/ /		LIGHT-BAY G ON				150-199, 275-299
	=G	\$	W1066	32W	22		25-53-13	150-199, 275-299
	=P	\$	W1066	32P	22		25-53-13	150-199, 275-299
	=P	\$	W1066	33A	22		25-53-13	150-199, 275-299
L00818		P035-00/ /		LIGHT-BAY H ON				150-199, 275-299
	=G	\$	W1066	32R	22		25-53-13	150-199, 275-299
	=P	\$	W1066	32P	22		25-53-13	150-199, 275-299
L00819		P039-00/ /		LIGHT-BAY A ON				150-199, 275-299
	=G	\$	W1068	32D	22		25-53-23	150-199, 275-299
	=P	\$	W1068	150	22		25-53-23	150-199, 275-299
	=P	\$	W1068	32F	22		25-53-23	150-199, 275-299
L00820		P039-00/ /		LIGHT-BAY B ON				150-199, 275-299
	=G	\$	W1068	32K	22		25-53-23	150-199, 275-299
	=P	\$	W1068	150	22		25-53-23	150-199, 275-299
	=P	\$	W1068	32M	22		25-53-23	150-199, 275-299
L00821		P039-00/ /		LIGHT-BAY C ON				150-199, 275-299
	=G	\$	W1068	32R	22		25-53-23	150-199, 275-299
	=P	\$	W1068	32M	22		25-53-23	150-199, 275-299
	=P	\$	W1068	32W	22		25-53-23	150-199, 275-299

HOOKUP LIST

D280T132

91-21-51

Section L00800

Page 2

Mar 07/2008



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
L00822		P039-00/ /		LIGHT-BAY D ON				150-199, 275-299
	=G	\$	W1068	33A	22		25-53-23	150-199, 275-299
	=P	\$	W1068	32W	22		25-53-23	150-199, 275-299
	=P	\$	W1068	33B	22		25-53-23	150-199, 275-299
L00823		P039-00/ /		LIGHT-BAY E ON				150-199, 275-299
	=G	\$	W1068	34A	22		25-53-23	150-199, 275-299
	=P	\$	W1068	33B	22		25-53-23	150-199, 275-299
	=P	\$	W1068	33X	22		25-53-23	150-199, 275-299
L00824		P039-00/ /		LIGHT-BAY F ON				150-199, 275-299
	=G	\$	W1068	34P	22		25-53-23	150-199, 275-299
	=P	\$	W1068	33Y	22		25-53-23	150-199, 275-299
L00825		P039-00/ /		LIGHT-BAY G ON				150-199, 275-299
	=G	\$	W1068	34L	22		25-53-23	150-199, 275-299
	=P	\$	W1068	33X	22		25-53-23	150-199, 275-299
	=P	\$	W1068	33Y	22		25-53-23	150-199, 275-299
L00826		P035-00/ /		LIGHT-BAY A ON				150-199, 275-299
	=G	\$	W1066	009	22		25-53-13	150-199, 275-299
	=G	\$	W1066	544	22		25-53-13	150-199, 275-299
	=P	\$	W1066	545	22		25-53-13	150-199, 275-299
	=P	\$	W1066	549	22		25-53-13	150-199, 275-299
L00827		0654+77/192/R029		LIGHT-FWD B CARGO COMPT				150-199, 275-299
	=G	C	W0660	057	16		33-37-11	150-199, 275-299
	=P	C	W0660	055	16		33-37-11	150-199, 275-299
L00828		0654+77/192/L029		LIGHT-FWD A CARGO COMPT				150-199, 275-299
	=G	C	W0660	058	16		33-37-11	150-199, 275-299
	=P	C	W0660	056	16		33-37-11	150-199, 275-299
L00829		1197+33/194/L033		LIGHT-AFT A CARGO COMPT				150-199
	=G	C	W0662	079	16		33-37-21	150-199, 275-299
	=P	C	W0662	078	16		33-37-21	150-199, 275-299
L00830		1197+33/194/R033		LIGHT-AFT A CARGO COMPT				150-199
	=G	C	W0662	080	16		33-37-21	150-199, 275-299
	=P	C	W0662	077	16		33-37-21	150-199, 275-299

HOOKUP LIST

D280T132

91-21-51
Section L00800
Page 3
Mar 07/2008



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
L00830		1197+33/194/R033		LIGHT-AFT A CARGO COMPT (continued)				150-199
	=P	C	W0662	078	16		33-37-21	150-199, 275-299
L00831		1197+99/194/L033		LIGHT-AFT B CARGO COMPT				150-199, 275-299
	=G	C	W0662	084	16		33-37-21	150-199, 275-299
	=P	C	W0662	082	16		33-37-21	150-199, 275-299
	=P	C	W0662	083	16		33-37-21	150-199, 275-299
L00832		1197+99/194/R033		LIGHT-AFT B CARGO COMPT				150-199, 275-299
	=G	C	W0662	081	16		33-37-21	150-199, 275-299
	=P	C	W0662	083	16		33-37-21	150-199, 275-299
L00839		0425/ /		SOCKET-MID DIRECT CLG LT STA 794 & 902				162-199
	=G	E	W0124	008	22		33-27-11	162-199
	=G	E	W0124	018	22		33-27-11	162-199
	BLK		W0124	A-A			33-27-11	162-199
	BLK		W0124	A-B			33-27-11	162-199
	WHT		W0124	A-C			33-27-11	162-199
	WHT		W0124	A-D			33-27-11	162-199
L00840		0425/ /		SOCKET-MID DIRECT CLG LT STA 794 & 902				162-199
	BLK		W0124	B-A			33-27-11	162-199
	BLK		W0124	B-B			33-27-11	162-199
	WHT		W0124	B-C			33-27-11	162-199
	WHT		W0124	B-D			33-27-11	162-199
L00864		0292/280/R038		LIGHT-MASTER CALL,FWD R				050-099
L00864		0292/280/R038		LIGHT-MASTER CALL,FWD				150-199
	=P	\$	W0102	002	22		23-34-13	050-099, 150-199
L00890		P001-03/ /		LIGHT-WINDSHEAR				ALL
	1	1A	W0013	146	22		33-16-13	ALL
	2	1A	W0013	101	22		34-46-11	ALL
	3	1A	W0013	125	22		33-16-13	ALL
	DED		W0013	146Z			33-16-13	ALL

HOOKUP LIST

D280T132

91-21-51

Section L00800

Page 4 End

Mar 07/2008



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
L00984		1517/200/R012		LIGHT-E.L. CROSSAISLE EMER, AFT RT.				050-099
L00984		1484/200/R020		LIGHT-E.L. CROSSAISLE EMER, AFT RT.				150-199
L00984		1542/200/R017		LIGHT-E.L. CROSSAISLE EMER, AFT RT.				275-299
	=1		W0836	A-A			33-51-16	275-299
	=2		W0836	A-B			33-51-16	275-299
L00986		1517/200/L012		LIGHT-E.L. CROSSAISLE EMER, AFT LEFT				050-099
L00986		1484/200/L020		LIGHT-E.L. CROSSAISLE EMER, AFT LEFT				150-199
L00986		1542/200/L017		LIGHT-E.L. CROSSAISLE EMER, AFT LEFT				275-299
	=1		W0836	A-E			33-51-16	275-299
	=2		W0836	A-F			33-51-16	275-299

HOOKUP LIST

D280T132

91-21-51

Section L00900

Page 1 End

Mar 07/2008



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
L01027		1438/280/L036		SIGN-LAVATORY OCCUPIED				275-299
	G	C	W0828	050	20		33-26-21	275-299
	P	C	W0828	009	20		33-26-21	275-299
	P	C	W0828	053	20		33-26-21	275-299
	S	C	W0828	007	20		33-26-21	275-299
	S	C	W0828	051	20		33-26-21	275-299
L01049		0807/277/L038		LIGHT-EXIT SIGN				050-099, 275-278
L01049		0807/277/L041		LIGHT-EXIT SIGN				280-299
	1	C	W0790	044	16		33-51-13	050-099
	1	C	W0790	171	20		33-51-13	275-299
	2	C	W0790	128	16		33-51-13	050-099
	2	C	W0790	130	20		33-51-13	275-299
L01050		0807/277/R038		LIGHT-EXIT SIGN				050-099
L01050		0807/283/R038		LIGHT-EXIT SIGN				275-278
L01050		0807/283/R041		LIGHT-EXIT SIGN				280-299
	1	C	W1222	068	16		33-51-12	050-099
	1	C	W1222	675	20		33-51-12	275-299
	2	C	W1222	171	16		33-51-12	050-099
	2	C	W1222	669	20		33-51-12	275-299
L01052		0872/281/L038		LIGHT-ATT CALL,MID L (SB 33-0042)				275-276
L01052		0807/280/L035		LIGHT-ATT CALL,MID L				277-299
	3	C	W0665	071	20		23-42-11	275-278
	3	C	W0665	197	20		23-42-11	280-299
	L1	C	W0665	070	22		23-42-11	275-278
	L1	C	W0665	196	22		23-42-11	280-299
L01055		0807/281/R038		LIGHT-ATT CALL,MID R (SB 33-0042)				275-276
L01055		0807/280/R035		LIGHT-ATT CALL,MID R				277-299
	3	C	W0665	068	20		23-42-11	275-278
	3	C	W0665	195	20		23-42-11	280-299
	L1	C	W0665	069	22		23-42-11	275-278
	L1	C	W0665	194	22		23-42-11	280-299
L01059		0432/280/R036		SOCKET-FWD DIRECT CEILING				150-157
	=G	C	W1224	812	22		33-22-41	150-157
	=P	C	W1224	811	22		33-22-41	150-157

HOOKUP LIST

D280T132

91-21-51

Section L01000

Page 1

Mar 07/2008



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
L01060		0432/280/L036		SOCKET-FWD DIRECT CEILING				050-099, 150-157
	=G	C	W1224	809	20		33-22-41	050-099, 150-157
	=G	C	W1224	812	22		33-22-41	150-157
	=P	C	W1224	810	20		33-22-41	050-099, 150-157
	=P	C	W1224	811	22		33-22-41	150-157
L01061		1502/284/0000		SOCKET-AFT DIRECT CEILING				150-199
	=G	C	W0818	536	20		33-22-42	150-199
	=P	C	W0818	186	20		33-22-42	150-199
L01069		0395/280/0000		LIGHT-FWD ATTENDANT SIGN				050-099, 150-199
	1	C	W1230	601	20		33-24-13	050-099, 150-199
	2	C	W1230	603	20		33-24-13	050-099, 150-199
	3	C	W1230	602	20		33-24-13	050-099, 150-199
L01074		0935/280/L020		LIGHT-EMER CROSSAISLE				157
	1	C	W0122	131	20		33-51-13	157
	2	C	W0122	132	20		33-51-13	157
L01075		0935/280/R020		LIGHT-EMER CROSSAISLE				157
	1	C	W0122	121	18		33-51-12	157
	2	C	W0122	122	18		33-51-12	157
L01087		851/280/L 38		LIGHT-LAV CALL, MID L				050-099, 150-154, 156, 162-199
	=P	\$	W1113	003	22		33-25-11	150-154, 156, 162-199
L01088		851/280/R 38		LIGHT-LAV CALL MID R				050-099, 150-154, 156, 162-199
	=P	\$	W1115	003	22		33-25-11	150-154, 156, 162-199

HOOKUP LIST

D280T132

91-21-51

Section L01000

Page 2 End

Mar 07/2008



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
L01105		1008/280/0000		SIGN-LAVATORY OCCUPIED				050-099
L01105		0900/280/0000		SIGN-LAVATORY OCCUPIED				150-199
	G	C	W0792	192	20		33-26-21	050-099, 150-199
	P	C	W0792	198	20		33-26-21	050-099, 150-199
	S	C	W0792	191	20		33-26-21	050-099, 150-199
L01106		0382/280/L042		LIGHT-FWD GALLEY				050-099, 150-199
	=G	E	W0157	036	20		33-27-11	050-099, 150-199
	=G	E	W0157	058	20		33-27-11	050-099, 150-199
	BLK		W0157	A-B			33-27-11	050-099, 150-199
	BLK		W0157	A-C			33-27-11	050-099, 150-199
	WHT		W0157	A-D			33-27-11	050-099, 150-199
	WHT		W0157	A-E			33-27-11	050-099, 150-199
L01107		0382/280/L038		LIGHT-FWD GALLEY				050-099, 150-199
	BLK		W0157	A-I			33-27-11	050-099, 150-199
	BLK		W0157	A-J			33-27-11	050-099, 150-199
	WHT		W0157	A-G			33-27-11	050-099, 150-199
	WHT		W0157	A-H			33-27-11	050-099, 150-199
L01108		0382/280/R042		LIGHT-FWD GALLEY				050-099, 150-199
	=G	E	W0123	035	20		33-27-11	050-099, 150-199
	=G	E	W0123	054	20		33-27-11	050-099, 150-199
	BLK		W0123	A-A			33-27-11	050-099, 150-199
	BLK		W0123	A-B			33-27-11	050-099, 150-199
	WHT		W0123	A-C			33-27-11	050-099, 150-199
	WHT		W0123	A-D			33-27-11	050-099, 150-199
L01109		0382/280/R038		LIGHT-FWD GALLEY				050-099, 150-199
	BLK		W0123	A-I			33-27-11	050-099, 150-199
	BLK		W0123	A-J			33-27-11	050-099, 150-199
	WHT		W0123	A-G			33-27-11	050-099, 150-199
	WHT		W0123	A-H			33-27-11	050-099, 150-199
L01110		P003-00/ /		LIGHT-ANNUNCIATOR, BLANK				050-099
	1	1A	W0035	501	22		33-16-15	050-099
	3	1A	W0035	502	22		33-16-15	050-099
L01115		631/280/L 38		LIGHT-ATTEND CALL FWD AFT L				050-099, 150-199
	=G	\$	W1111	004	20		23-42-11	050-099, 150-199

HOOKUP LIST

D280T132

91-21-51

Section L01100

Page 1

Mar 07/2008



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
L01115		631/280/L 38		LIGHT-ATTEND CALL FWD AFT L (continued)				050-099, 150-199
	=P	\$	W1111	001	22		23-42-11	050-099, 150-199
L01116		631/280/R 38		LIGHT-ATTEND CALL FWD AFT R				050-099, 150-199
	=G	\$	W1109	004	20		23-42-11	050-099, 150-199
	=P	\$	W1109	001	22		23-42-11	050-099, 150-199
L01118		1196/280/L 38		LIGHT-ATTEND CALL AFT FWD L				050-099
L01118		1197+44/280/L 38		LIGHT-ATTEND CALL AFT FWD L				150-199
	=G	\$	W1117	004	20		23-42-11	050-099, 150-199
	=P	\$	W1117	001	22		23-42-11	050-099, 150-199
L01119		1196/280/R 38		LIGHT-ATTEND CALL AFT FWD R				050-099
L01119		1197+44/280/R 38		LIGHT-ATTEND CALL AFT FWD R				150-199
	=G	\$	W1141	004	20		23-42-11	050-099, 150-199
	=P	\$	W1141	001	22		23-42-11	050-099, 150-199
L01132		0336/280/0000		LT-EXIT SIGN				150-157
	1	C	W0784	028	18		33-51-13	150-157
	2	C	W0784	146	20		33-51-13	150-157
L01133		1196/280/L 38		LIGHT-MASTER CALL MID T/C L				050-099
L01133		1197+44/280/L 38		LIGHT-MASTER CALL MID T/C L				150-199
	=P	\$	W1117	002	22		23-34-13	050-099, 150-199
L01134		1196/280/R 38		LIGHT-MASTER CALL MID T/C R				050-099
L01134		1197+44/280/R 38		LIGHT-MASTER CALL MID T/C R				150-199
	=P	\$	W1141	002	22		23-34-13	050-099, 150-199
L01135		1448/280/L040		LT-SOCKET AFT DIRECT CEILING				050-099, 150-199
	=G	C	W0818	605	20		33-22-42	050-099, 150-199
	=P	C	W0818	604	20		33-22-42	050-099, 150-199
L01136		1448/280/R040		LT-SOCKET AFT DIRECT CEILING				050-099, 150-199
	=G	C	W0818	605	20		33-22-42	050-099, 150-199
	=G	C	W0818	606	20		33-22-42	050-099, 150-199
	=P	C	W0818	603	20		33-22-42	050-099, 150-199
	=P	C	W0818	604	20		33-22-42	050-099, 150-199

HOOKUP LIST

D280T132

91-21-51

Section L01100

Page 2

Mar 07/2008



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
L01137		0447/242/L060		LT-PURSER SIGN				050-099, 150-199
	NS	C	W0057	020	22		33-24-12	050-099, 150-199
	FSB	C	W0057	018	22		33-24-12	050-099, 150-199
	GND	C	W0057	019	20		33-24-12	050-099, 150-199
L01138		1549/280/R014		LT-GALLEY WORK,AFT				150-199
	=G	C	W0818	800	18		33-27-11	150-199
	=P	C	W0818	801	18		33-27-11	150-199
	=P	C	W0818	802	18		33-27-11	150-199
L01139		1549/280/R006		LT-GALLEY WORK,AFT				150-199
	=G	C	W0816	800	18		33-27-11	150-199
	=P	C	W0816	801	18		33-27-11	150-199
	=P	C	W0816	802	18		33-27-11	150-199
L01140		1549/280/L014		LT-GALLEY WORK,AFT				150-199
	=G	C	W0818	803	18		33-27-11	150-199
	=P	C	W0818	802	18		33-27-11	150-199
L01141		1549/280/L006		LT-GALLEY WORK,AFT				150-199
	=G	C	W0816	803	18		33-27-11	150-199
	=P	C	W0816	802	18		33-27-11	150-199
L01144		0447/240/L055		LT-PURSER WORK				150-199
	=G	E	W0057	071	20		33-22-32	150-199
	BLK		W0057	A-C			33-22-32	150-199
	BLK		W0057	A-D			33-22-32	150-199
	WHT		W0057	A-A			33-22-32	150-199
	WHT		W0057	A-B			33-22-32	150-199
L01160		1196/280/R 38		LIGHT-LAV CALL, MID-AFT R				050-099, 150-199
L01160		0888/280/R038		LT-LAV CALL,MID-AFT R (SB 33-0042)				275-276
L01160		0888/280/R 38		LIGHT-ATTENDENT CALL				275-276
L01160		0860/275/R038		LT-LAV CALL,MID-AFT R				275-278
L01160		0888/280/R 38		LIGHT-LAV CALL				277-299
	=P	\$	W1141	003	22		33-25-11	050-099, 150-199
	=P	\$	W0665	021	22		33-25-11	275-276
	=P	\$	W1115	003	22		33-25-11	277-299

HOOKUP LIST

D280T132

91-21-51

Section L01100

Page 3

Mar 07/2008



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
L01161		1196/280/L038		LIGHT-LAV CALL, MID-AFT L				050-099
L01161		1197+44/280/L 38		LIGHT-LAV CALL, MID-AFT L				150-199
L01161		0888/280/L 38		LIGHT-ATTENDENT CALL				275-276
L01161		0888/280/L038		LT-LAV CALL,MID-AFT L (SB 33-0042)				275-276
L01161		0860/275/L038		LT-LAV CALL,MID-AFT L				275-278
L01161		0888/280/L 38		LIGHT-LAV CALL				277-299
	=P	\$	W1117	003	22		33-25-11	050-099, 150-199
	=P	\$	W0665	020	22		33-25-11	275-276
	=P	\$	W1113	003	22		33-25-11	277-299
L01165		P010-00/ /		LIGHTPLATE-ALTERNATE STAB TRIM				050-099, 155-199, 275-299
	=G	G	W5150	027	20		33-13-18	050-099, 155, 162-165, 275-276
	=G	G	W5150	231B	20		33-13-18	156-157, 166-199, 277-299
	=P	B	W5150	026	20		33-13-18	050-099, 155, 162-165, 275-276
	=P	B	W5150	231R	20		33-13-18	156-157, 166-199, 277-299
L01175		0348/260/L055		LT-ATTENDANT SIGN				275-278
	1	C	W1198	008	20		33-24-12	277-278
	2	C	W1198	009	20		33-24-12	277-278
	3	C	W1198	007	20		33-24-12	277-278
	NS	C	W1198	008	20		33-24-12	275-276, 280-299
	FSB	C	W1198	007	20		33-24-12	275-276, 280-299
	GND	C	W1198	009	20		33-24-12	275-276, 280-299
L01176		1524/280/L008		LT-SOCKET DIRECT CEILING				275-299
	=1	C	W0100	013	22		33-27-11	275-299
	=2	C	W0100	012	22		33-27-11	275-299
	=3	C	W0100	007	22		33-27-11	275-299
	=4	C	W0100	006	22		33-27-11	275-299
	=G	E	W0100	001	22		33-27-11	275-299
	=G	E	W0100	008	22		33-27-11	275-299
	=G	E	W0100	009	22		33-27-11	275-299
L01177		1524/280/R008		LT-SOCKET DIRECT CEILING				275-299
	=1	C	W0100	028	22		33-27-11	275-299
	=2	C	W0100	029	22		33-27-11	275-299
	=3	C	W0100	034	22		33-27-11	275-299
	=4	C	W0100	033	22		33-27-11	275-299

HOOKUP LIST

D280T132

91-21-51

Section L01100

Page 4

Aug 05/2009



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
L01178		1526/280/0000		LT-SOCKET DIRECT CEILING				275-299
	BLK		W0100	G-A			33-27-11	275-299
	BLK		W0100	G-B			33-27-11	275-299
	WHT		W0100	G-C			33-27-11	275-299
	WHT		W0100	G-D			33-27-11	275-299
L01179		1522/280/0000		LT-SOCKET DIRECT CEILING				275-299
	BLK		W0100	H-A			33-27-11	275-299
	BLK		W0100	H-B			33-27-11	275-299
	WHT		W0100	H-C			33-27-11	275-299
	WHT		W0100	H-D			33-27-11	275-299
L01180		0460/210/R090		LT-NIGHT				050-099, 162-199
	=G	C	W1236	163	20		33-21-21	050-099, 162-199
	=P	C	W1236	162	22		33-21-21	050-099, 162-199
L01181		1442/210/R090		LT-NIGHT				050-099, 162-199
	=G	C	W1240	094	20		33-21-21	050-099, 162-199
	=P	C	W1240	093	22		33-21-21	050-099, 162-199
L01182		1442/210/L090		LT-NIGHT				050-099, 162-199
	=G	C	W0788	141	20		33-21-21	050-099, 162-199
	=P	C	W0788	140	22		33-21-21	050-099, 162-199
L01183		0252/272/R015		LT-CREW REST UPPER BUNK RDG				050-099
	=G	C	W3000	012	20		23-34-15	050-099, 162-199
	=P	C	W3000	011	20		23-34-15	050-099, 162-199
L01184		0252/242/R015		LT-CREW REST LOWER BUNK RDG				050-099
	=G	C	W3004	006	20		23-34-15	050-099, 162-199
	=P	C	W3004	007	20		23-34-15	050-099, 162-199
L01187		0258/232/L012		LT-STEP, FLT DK CREW REST				050-099, 162-199
	=G	C	W3006	010	22		33-22-33	050-099, 162-199
	=G	C	W3006	011	22		33-22-33	050-099, 162-199
	=P	C	W3006	007	22		33-22-33	050-099, 162-199
	=P	C	W3006	008	22		33-22-33	050-099, 162-199
L01188		0258/274/L012		LT-GENERAL ILLUM, FLT DK CREW REST				050-099, 162-199
	=G	C	W3006	010	22		33-22-33	050-099, 162-199

HOOKUP LIST

D280T132

91-21-51

Section L01100

Page 5

Mar 07/2008



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL		Description		GA	CO	Diagram	Effectivity
		Type	Bundle	Wire No.					
L01188		0258/274/L012		LT-GENERAL ILLUM, FLT DK CREW REST (continued)					050-099, 162-199
	=P	C	W3006	009		22		33-22-33	050-099, 162-199
L01189		0261/241/R015		LT-FWD ATTEND SIGN CREW REST AREA					050-099, 162-199
	1	C	W3004	001		22		33-24-13	050-099, 162-199
	2	C	W3004	003		20		33-24-13	050-099, 162-199
	3	C	W3004	002		22		33-24-13	050-099, 162-199
L01190		0261/262/R019		LT-FWD ATTEND SIGN CREW REST AREA					050-099, 162-199
	NS	C	W3002	001		22		33-24-13	050-099, 162-199
	NS	C	W3002	004		22		33-24-13	050-099, 162-199
	FSB	C	W3002	002		22		33-24-13	050-099, 162-199
	FSB	C	W3002	005		22		33-24-13	050-099, 162-199
	GND	C	W3002	003		20		33-24-13	050-099, 162-199
	GND	C	W3002	006		20		33-24-13	050-099, 162-199
L01191		0255/235/L009		SIGN-LAV OCC CREW REST AREA					050-099, 162-199
	A	Z1	W3006	002		20		33-26-21	050-099, 162-166
	B	Z1	W3006	004		20		33-26-21	050-099, 162-166
	A+	Z1	W3006	002		20		33-26-21	167-199
	A+	Z1	W3006	046		20		33-26-21	167-199
	A-	Z1	W3006	004		20		33-26-21	167-199
	A-	Z1	W3006	047		20		33-26-21	167-199
	B+	Z1	W3006	046		20		33-26-21	167-199
	B-	Z1	W3006	047		20		33-26-21	167-199
L01192		0255/263/L009		SIGN-LAV OCC CREW REST AREA					050-099, 162-199
	A	Z1	W3006	001		20		33-26-21	050-099, 162-166
	B	Z1	W3006	003		20		33-26-21	050-099, 162-166
	A+	Z1	W3006	001		20		33-26-21	167-199
	A+	Z1	W3006	044		20		33-26-21	167-199
	A-	Z1	W3006	003		20		33-26-21	167-199
	A-	Z1	W3006	045		20		33-26-21	167-199
	B+	Z1	W3006	044		20		33-26-21	167-199
	B-	Z1	W3006	045		20		33-26-21	167-199
L01193		0258/223/L012		LT-CREW REST AREA EMERGENCY					050-099, 162-199
	1	C	W3006	005		20		33-51-13	050-099, 162-199
	2	C	W3006	006		20		33-51-13	050-099, 162-199

HOOKUP LIST

D280T132

91-21-51

Section L01100

Page 6

Mar 07/2008



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
L01195		0932/280/L038		LT-LAV CALL, MID-AFT FWD L				050-099
	=P	\$	W1113	003	22		33-25-11	050-099
L01196		0880/280/R001		LT-LAV CALL, MID AFT FWD R				050-099
	=P	\$	W1115	003	22		33-25-11	050-099
L01197		0422/280/R038		LT-GALLEY WORK FWD				050-099
	=G	C	W1228	123	18		33-27-11	050-099
	=P	C	W1228	122	18		33-27-11	050-099
L01198		0422/280/R042		LT-GALLEY WORK FWD				050-099
	=G	C	W1228	121	18		33-27-11	050-099
	=P	C	W1228	106	18		33-27-11	050-099
L01199		1565/280/0000		LT-EXIT SIGN				050-099
	1	C	W0836	040	20		33-51-12	050-099
	2		W0836	041	16		33-51-12	050-099

HOOKUP LIST

D280T132

91-21-51

Section L01100

Page 7 End

Mar 07/2008



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
L01204		1572/144/0000		LT-FWD TANK SENSOR FOUL (SB 38-0031)				050
L01204		1572/144/0000		LT-FWD TANK SENSOR FOUL				051-099, 155-199, 277-299
L01204		1572/144/0000		LT-FWD TANK SENSOR FOUL (SB 38-0026)				150-154
L01204		1572/144/0000		LT-FWD TANK SENSOR FOUL (SB 38-0035)				275-276
	BLK		W0966	A-H			38-32-11	050-099, 150-155, 162-165
	BLK		W0966	A-H			38-32-15	156-157, 166-199, 277-299
	BLK		W0966	A-H			38-32-14	275-276
	RED		W0966	A-F			38-32-11	050-099, 150-155, 162-165
	RED		W0966	A-F			38-32-15	156-157, 166-199, 277-299
	RED		W0966	A-F			38-32-14	275-276
	WHT		W0966	A-G			38-32-11	050-099, 150-155, 162-165
	WHT		W0966	A-G			38-32-15	156-157, 166-199, 277-299
	WHT		W0966	A-G			38-32-14	275-276
L01205		1572/144/0000		LT-AFT TANK SENSOR FOUL (SB 38-0031)				050
L01205		1572/144/0000		LT-AFT TANK SENSOR FOUL				051-099, 155-199, 277-299
L01205		1572/144/0000		LT-AFT TANK SENSOR FOUL (SB 38-0026)				150-154
L01205		1572/144/0000		LT-AFT TANK SENSOR FOUL (SB 38-0035)				275-276
	BLK		W1354	A-H			38-32-11	050-099, 150-155, 162-165
	BLK		W1354	A-H			38-32-15	156-157, 166-199, 277-299
	BLK		W1354	A-H			38-32-14	275-276
	RED		W1354	A-F			38-32-11	050-099, 150-155, 162-165
	RED		W1354	A-F			38-32-15	156-157, 166-199, 277-299
	RED		W1354	A-F			38-32-14	275-276
	WHT		W1354	A-G			38-32-11	050-099, 150-155, 162-165
	WHT		W1354	A-G			38-32-15	156-157, 166-199, 277-299
	WHT		W1354	A-G			38-32-14	275-276
L01229		0851/280/L038		LIGHT-LAV CALL,MID CTR L				155, 157
L01229		0807/280/L038		LIGHT-LAV CALL,MID CTR L (SB 33-0042)				275-276
L01229		0807/280/L038		LIGHT-LAV CALL,MID CTR L				277-299
	L2	C	W0665	199	22		33-25-11	155, 157
	L2	C	W0665	511	22		33-25-11	275-299
L01230		0851/280/R038		LIGHT-LAV CALL,MID CTR R				155, 157
L01230		0807/280/R038		LIGHT-LAV CALL,MID CTR R (SB 33-0042)				275-276
L01230		0807/280/R038		LIGHT-LAV CALL,MID CTR R				277-299
	L2	C	W0665	191	22		33-25-11	155, 157
	L2	C	W0665	512	22		33-25-11	275-299

HOOKUP LIST

D280T132

91-21-51

Section L01200

Page 1

Mar 07/2008



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
L01261		P087-00/ /		LIGHT-HOT BUS WARN,115V GND SVCE				278-299
	1	C	W2110	007	14		24-51-13	278-299
	2	C	W2110	008	14		24-51-13	278-299

HOOKUP LIST
D280T132

91-21-51
Section L01200
Page 2 End
Mar 07/2008



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
L09001		0448/260/L065		LIGHT-CLOSET (MTO330342B)				150, 153-199
	=G	C	W9003	011	22		33-22-21	150, 153-199
	=P	C	W9003	012	22		33-22-21	150, 153-199
L09002		0435/260/R065		LIGHT-CLOSET (MTO330342B)				150, 153-157
	=G	C	W9004	013	22		33-22-21	150, 153-157
	=P	C	W9004	014	22		33-22-21	150, 153-157
L09003		0450/260/R065		LIGHT-CLOSET (MTO330342B)				150, 153-157
	=G	C	W9004	015	22		33-22-21	150, 153-157
	=P	C	W9004	017	22		33-22-21	150, 153-157
L09004		0654+120/260/R015		LIGHT-CLOSET (MTO330348)				162-199
	=G	C	W2010	904	22		33-22-21	162-199
	=P	C	W2010	905	22		33-22-21	162-199
L09005		0654+120/260/L015		LIGHT-CLOSET (MTO330348)				162-199
	=G	C	W2010	907	22		33-22-21	162-199
	=G	C	W2010	910	22		33-22-21	162-199
	=P	C	W2010	908	22		33-22-21	162-199
L09006		0654+120/260/L015		LIGHT-CLOSET (MTO330348)				162-199
	=G	C	W2010	910	22		33-22-21	162-199
	=P	C	W2010	911	22		33-22-21	162-199
L09007		1510/270/0		EXIT SIGN LIGHT (PR 00113)				150, 152-199
	1	C	W0836	911	16		33-51-14	150, 152-199
	2	C	W0836	901	16		33-51-14	150, 152-199

HOOKUP LIST

D280T132

91-21-51
Section L09000
Page 1 End
Mar 07/2008



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
M00207		SHELF/E06/01		CHARGER-APU BATTERY				ALL
	+	H	W1048	005	08		24-31-41	ALL
	-	G	W1048	009	08		24-31-41	ALL
M00217		SHELF/E03/02		STATIC INVERTER (SB 24-0160)				ALL
M00217		SHELF/E03/02		STATIC INVERTER				275-299
	+	G	W0218	003	06		24-33-11	ALL
	-	F	W0218	004	06		24-33-11	ALL
M00218		SHELF/E03/03		CHARGER-MAIN BATTERY				ALL
	+	H	W0218	005	04		24-31-11	ALL
	-	G	W0218	002	04		24-31-11	ALL
M00224		0305/126/R005		SHUNT-MAIN BATTERY				ALL
	A	F	W0258	002	*1		24-31-11	ALL
	B	F	W0258	003	*1		24-31-11	ALL
	C	D	W0256	201B	24		24-34-11	ALL
	D	D	W0256	201R	24		24-34-11	ALL
M00225		P032-00/ /		ELCU-FWD GALLEY POWER				275-299
	A1	H	W1018	007	04		24-21-21	275-299
	A1	H	W1018	013	04		24-21-21	275-299
	A2	H	W0220	005	04		25-31-11	275-299
	B1	H	W1018	008	04		24-21-21	275-299
	B1	H	W1018	014	04		24-21-21	275-299
	B2	H	W0220	006	04		25-31-11	275-299
	C1	H	W1018	009	04		24-21-21	275-299
	C1	H	W1018	015	04		24-21-21	275-299
	C2	H	W0220	007	04		25-31-11	275-299
M00226		P032-00/ /		ELCU-R AFT GALLEY POWER				275-299
	A1	H	W1014	010	04		24-21-11	275-299
	A1	H	W1014	019	04		24-21-11	275-299
	A2	H6	W0308	001	06		25-31-31	275-299
	B1	H	W1014	011	04		24-21-11	275-299
	B1	H	W1014	020	04		24-21-11	275-299
	B2	H6	W0308	002	06		25-31-31	275-299
	C1	H	W1014	012	04		24-21-11	275-299
	C1	H	W1014	021	04		24-21-11	275-299
	C2	H6	W0308	003	06		25-31-31	275-299

HOOKUP LIST

D280T132

91-21-51

Section M00200

Page 1

Jun 06/2008



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
M00227		P031-00/ /		ELCU-L AFT GALLEY POWER				275-299
	A1	H	W1014	007	04		24-21-11	275-299
	A1	H	W1014	022	04		24-21-11	275-299
	A2	H4	W0226	009	04		25-31-21	275-299
	B1	H	W1014	008	04		24-21-11	275-299
	B1	H	W1014	023	04		24-21-11	275-299
	B2	H4	W0226	010	04		25-31-21	275-299
	C1	H	W1014	009	04		24-21-11	275-299
	C1	H	W1014	024	04		24-21-11	275-299
	C2	H4	W0226	011	04		25-31-21	275-299
M00228		P049-00/ /		SHUNT-CHGR,APU BAT.				ALL
	=A	F	W1048	009	08		24-31-41	ALL
	=B	F	W1048	004	08		24-31-41	ALL
	=C	D	W1050	047	24		24-34-11	ALL
	=D	D	W1050	046	24		24-34-11	ALL
M00281		1840/200/0000		GENERATOR-AUX POWER UNIT				ALL
	T1	RA	W0236	004	*1		24-21-41	ALL
	T2	RA	W0236	005	*1		24-21-41	ALL
	T3	RA	W0236	006	*1		24-21-41	ALL
	N	RB	W0236	007	04		24-21-41	ALL
M00299		P033-00/ /		MODULE-ELEC HYD PUMP R ON TIME DELAY				ALL
	A	C	W0142	07F	24		29-11-22	ALL
	A	C	W0142	07G	24		29-11-22	ALL
	B	C	W0142	08Q	24		29-11-22	ALL
	DED		W0142	07FZ			29-11-22	ALL
	DED		W0142	07GZ			29-11-22	ALL
	DED		W0142	08QZ			29-11-22	ALL

HOOKUP LIST

D280T132

91-21-51

Section M00200

Page 2 End

Mar 07/2008

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
M00300		P033-00/ /		MODULE-ELEC HYD PUMP R OFF TIME DELAY				ALL
	A	C	W0142	07K	24		29-11-22	ALL
	B	C	W0142	07L	24		29-11-22	ALL
	DED		W0142	07KZ			29-11-22	ALL
	DED		W0142	07LZ			29-11-22	ALL
M00301		P037-00/ /		MODULE-ELEC HYD PUMP L ON TIME DELAY				ALL
	A	C	W0192	718	24		29-11-12	ALL
	A	C	W0192	796	22		29-11-12	ALL
	B	C	W0192	125	24		29-11-12	ALL
	DED		W0192	125Z			29-11-12	ALL
M00302		P037-00/ /		MODULE-ELEC HYD PUMP L OFF TIME DELAY				ALL
	A	C	W0192	722	24		29-11-12	ALL
	B	C	W0192	109	24		29-11-12	ALL
M00303		P031-00/ /		MODULE-ELEC HYD PUMP C1 ON TIME DELAY				ALL
	A	C	W0022	106	22		29-11-31	ALL
	A	C	W0022	148	22		29-11-31	ALL
	B	C	W0022	068	22		29-11-31	ALL
	B	C	W0022	143	24		31-31-26	ALL
	G	C	W0022	140	20		29-11-31	ALL
M00304		P032-00/ /		MODULE-ELEC HYD PUMP C2 ON TIME DELAY				ALL
	A	C	W0024	121	24		29-11-31	ALL
	A	C	W0024	122	24		29-11-31	ALL
	B	C	W0024	058	24		29-11-31	ALL
	B	C	W0024	179	24		31-31-26	ALL
	G	C	W0024	131	20		29-11-31	ALL
M00305		P036-00/ /		MODULE-AIR HYD PUMP ON TIME DELAY				ALL
	A	C	W0184	643	24		29-11-32	ALL
	B	C	W0184	645	24		29-11-32	ALL
	B	C	W0184	704	24		29-11-32	ALL

HOOKUP LIST

D280T132

91-21-51

Section M00300

Page 1 End

Mar 07/2008



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
M00497		P036-00/ /		MODULE-AIR HYD PUMP OFF TIME DELAY				ALL
	A	C	W0184	517	22		29-11-32	ALL
	A	C	W0184	641	24		29-11-32	ALL
	B	C	W0184	703	24		29-11-32	ALL
M00499		P037-00/ /		MODULE-ELEC HYD PUMP L ON TIME DELAY				ALL
	A	C	W0192	09T	24		29-11-12	ALL
	B	C	W0192	702	24		29-11-12	ALL
	G	C	W0192	14P	20		29-11-12	ALL

HOOKUP LIST

D280T132

91-21-51

Section M00400

Page 1 End

Mar 07/2008



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
M00500		P033-00/ /		MODULE-ELEC HYD PUMP R ON TIME DELAY				ALL
	A	C	W0142	07N	24		29-11-22	ALL
	A	C	W0142	07P	24		29-11-22	ALL
	B	C	W0142	07Q	24		29-11-22	ALL
	G	C	W0142	07S	20		29-11-22	ALL
	DED		W0142	07NZ			29-11-22	ALL
	DED		W0142	07PZ			29-11-22	ALL
	DED		W0142	07QZ			29-11-22	ALL
M00540		P006-01/ /		MODULE-TIME DELAY,CTR BUS				ALL
	A	C	W0028	105	18		24-51-31	ALL
	B	C	W0028	608	18		24-51-31	ALL

HOOKUP LIST

D280T132

91-21-51

Section M00500

Page 1 End

Mar 07/2008



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
M00603		P010-00/ /		XMTR-FLAP LEVER POSITION NO.2				ALL
	BKW		W5150	C-B			27-51-31	ALL
	BLU		W5150	C-E			27-51-31	ALL
	GRN		W5150	C-F			27-51-31	ALL
	ORG		W5150	C-C			27-51-31	ALL
	RWH		W5150	C-A			27-51-31	ALL
	YEL		W5150	C-D			27-51-31	ALL
M00604		P010-00/ /		XMTR-FLAP LEVER POSITION NO.1				ALL
	BKW		W5150	D-B			27-58-31	ALL
	BLU		W5150	D-E			27-58-31	ALL
	GRN		W5150	D-F			27-58-31	ALL
	ORG		W5150	D-C			27-58-31	ALL
	RWH		W5150	D-A			27-58-31	ALL
	YEL		W5150	D-D			27-58-31	ALL
M00605		P033-00/ /		XMTR-REF SIGNAL,SLATS RETRACTED				ALL
	1		W0144	A-A			27-58-11	ALL
	2		W0144	A-B			27-58-11	ALL
	3		W0144	A-C			27-58-11	ALL
	4		W0144	A-D			27-58-11	ALL
M00606		P033-00/ /		XMTR-REF SIGNAL,SLATS INTMD				ALL
	1		W0144	A-E			27-58-11	ALL
	2		W0144	A-F			27-58-11	ALL
	3		W0144	A-G			27-58-11	ALL
	4		W0144	A-H			27-58-11	ALL
M00635		0240/242/L017		UNIT-DR LOCK,FLT DECK				050-099, 150-154, 156, 162-199
M00635		0260/242/L017		UNIT-DR LOCK,FLT DECK				275
	CAP	Y	W0632	001	22		SPARE	152, 154, 156, 162, 166-199
	CAP	Y	W0632	002	20		SPARE	152, 154, 156, 162, 166-199

HOOKUP LIST

D280T132

91-21-51

Section M00600

Page 1 End

Mar 07/2008



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
M00744		0240/270/L032		MTG PLATE-EXIT LT				ALL
	2	C	W0634	057	22		33-51-11	ALL
	3	C	W0634	058	22		33-51-11	ALL
	4	C	W0634	059	22		33-51-11	ALL
	5	C	W0634	060	20		33-51-11	ALL
M00778		0300/277/L070		SOLENOID-DOOR UPLATCH				ALL
	= G		W1224	A-B			52-11-12	ALL
	= P		W1224	A-A			52-11-12	ALL
M00779		P001-03/ /		MODULE-WARNING DISPLAY,DISCRETE(SEE YEJ)				ALL
	A1	1A	W0013	133	22		33-16-13	ALL
	A2	1A	W0013	158R	22		26-11-11	ALL
	A3	1A	W0013	087	22		33-16-13	ALL
	A4	1A	W0013	134	22		33-16-13	ALL
	A5	1A	W0013	159R	22		26-11-11	ALL
	A6	1A	W0013	088	22		33-16-13	ALL
	B1	1A	W0013	135	22		33-16-13	ALL
	B2	1A	W0013	063	24		31-51-42	ALL
	B3	1A	W0013	089	22		33-16-13	ALL
	B4	1A	W0013	136	22		33-16-13	ALL
	B5	1A	W0013	064	24		31-51-42	ALL
	B6	1A	W0013	090	22		33-16-13	ALL
	C1	1A	W0013	137	22		33-16-13	ALL
	C2	1A	W0013	067	22		34-46-11	ALL
	C3	1A	W0013	091	22		33-16-13	ALL
	C4	1A	W0013	138	22		33-16-13	ALL
	C5	1A	W0013	068	22		34-46-11	ALL
	C6	1A	W0013	092	22		33-16-13	ALL
	D1	1A	W0013	139	22		33-16-13	ALL
	D2	1A	W0013	057	24		22-14-11	ALL
	D3	1A	W0013	093	22		33-16-13	ALL
	D4	1A	W0013	140	22		33-16-13	ALL
	D5	1A	W0013	056	24		22-14-11	ALL
	D6	1A	W0013	094	22		33-16-13	ALL
	E1	1A	W0013	141	22		33-16-13	ALL
	E2	1A	W0013	154	22		21-33-11	ALL
	E3	1A	W0013	095	22		33-16-13	ALL
	E4	1A	W0013	142	22		33-16-13	ALL
	E5	1A	W0013	155	22		21-33-11	ALL
	E6	1A	W0013	096	22		33-16-13	ALL

HOOKUP LIST

D280T132

91-21-51

Section M00700

Page 1

Mar 07/2008



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
M00779		P001-03/ /		MODULE-WARNING DISPLAY,DISCRETE(SEE YEJ) (continued)				ALL
	F1	1A	W0013	143	22		33-16-13	ALL
	F2	1A	W0013	075	24		34-12-22	ALL
	F3	1A	W0013	097	22		33-16-13	ALL
	F4	1A	W0013	144	22		33-16-13	ALL
	F5	1A	W0013	059	24		34-12-12	ALL
	F6	1A	W0013	098	22		33-16-13	ALL
	DED		W0013	056Z			22-14-11	ALL
	DED		W0013	057Z			22-14-11	ALL
	DED		W0013	075Z			34-12-22	ALL
	DED		W0013	087Z			33-16-13	ALL
	DED		W0013	088Z			33-16-13	ALL
	DED		W0013	089Z			33-16-13	ALL
	DED		W0013	090Z			33-16-13	ALL
	DED		W0013	091Z			33-16-13	ALL
	DED		W0013	093Z			33-16-13	ALL
	DED		W0013	094Z			33-16-13	ALL
	DED		W0013	095Z			33-16-13	ALL
	DED		W0013	097Z			33-16-13	ALL
	DED		W0013	098Z			33-16-13	ALL
	DED		W0013	133Z			33-16-13	ALL
	DED		W0013	134Z			33-16-13	ALL
	DED		W0013	135Z			33-16-13	ALL
	DED		W0013	136Z			33-16-13	ALL
	DED		W0013	137Z			33-16-13	ALL
	DED		W0013	138Z			33-16-13	ALL
	DED		W0013	139Z			33-16-13	ALL
	DED		W0013	140Z			33-16-13	ALL
	DED		W0013	141Z			33-16-13	ALL
	DED		W0013	142Z			33-16-13	ALL
	DED		W0013	143Z			33-16-13	ALL
	DED		W0013	144Z			33-16-13	ALL

HOOKUP LIST

D280T132

91-21-51

Section M00700

Page 2 End

Mar 07/2008



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
M00893		APU / /		MOTOR-APU STARTER				ALL
	+	R	W0244	001	*1		49-41-11	ALL
	+	R	W0244	002	*1		49-41-11	ALL
	-	Q	W0244	003	*1		49-41-11	ALL
	-	Q	W0244	004	*1		49-41-11	ALL
M00895		P032-00/ /		ELCU-ELEC HYD PUMP L				ALL
	A1	H	W1018	013	04		24-21-21	ALL
	A1	H	W1018	016	04		24-21-21	ALL
	A2	H6	W0290	008	06		29-11-12	ALL
	B1	H	W1018	014	04		24-21-21	ALL
	B1	H	W1018	017	04		24-21-21	ALL
	B2	H6	W0290	009	06		29-11-12	ALL
	C1	H	W1018	015	04		24-21-21	ALL
	C1	H	W1018	018	04		24-21-21	ALL
	C2	H6	W0290	010	06		29-11-12	ALL
M00896		P031-00/ /		ELCU-ELEC HYD PUMP R				ALL
	A1	H	W1014	010	04		24-21-11	050-099, 150-199
	A1	H	W1014	013	04		24-21-11	ALL
	A1	H	W1014	019	04		24-21-11	275-299
	A2	H6	W0288	008	06		29-11-22	ALL
	B1	H	W1014	011	04		24-21-11	050-099, 150-199
	B1	H	W1014	014	04		24-21-11	ALL
	B1	H	W1014	020	04		24-21-11	275-299
	B2	H6	W0288	009	06		29-11-22	ALL
	C1	H	W1014	012	04		24-21-11	050-099, 150-199
	C1	H	W1014	015	04		24-21-11	ALL
	C1	H	W1014	021	04		24-21-11	275-299
	C2	H6	W0288	010	06		29-11-22	ALL
M00897		P031-00/ /		ELCU-ELEC HYD PUMP C1				ALL
	A1	H	W1014	007	04		24-21-11	ALL
	A1	H	W1014	010	04		24-21-11	ALL
	A2	H6	W0202	011	06		29-11-31	ALL
	B1	H	W1014	008	04		24-21-11	ALL
	B1	H	W1014	011	04		24-21-11	ALL
	B2	H6	W0202	012	06		29-11-31	ALL
	C1	H	W1014	009	04		24-21-11	ALL
	C1	H	W1014	012	04		24-21-11	ALL
	C2	H6	W0202	013	06		29-11-31	ALL

HOOKUP LIST

D280T132

91-21-51

Section M00800

Page 1

Mar 07/2008



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
M00898		P032-00/ /		ELCU-ELEC HYD PUMP C2				ALL
	A1	H	W1018	019	04		24-21-21	050-099, 150-199
	A1	H	W1018	016	04		24-21-21	ALL
	A1	H	W1018	031	04		24-21-21	275-299
	A2	H6	W0206	011	06		29-11-31	ALL
	B1	H	W1018	020	04		24-21-21	050-099, 150-199
	B1	H	W1018	017	04		24-21-21	ALL
	B1	H	W1018	032	04		24-21-21	275-299
	B2	H6	W0206	012	06		29-11-31	ALL
	C1	H	W1018	021	04		24-21-21	050-099, 150-199
	C1	H	W1018	018	04		24-21-21	ALL
	C1	H	W1018	033	04		24-21-21	275-299
	C2	H6	W0206	013	06		29-11-31	ALL

HOOKUP LIST

D280T132

91-21-51

Section M00800

Page 2 End

Mar 07/2008



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
M00919		P036-00/ /		MODULE-AIR HYD PUMP PRESS. LT TIME DELAY				ALL
	A	C	W0184	650	22		29-11-32	ALL
	A	C	W0184	658	22		29-11-32	ALL
	B	C	W0184	676	22		29-11-32	ALL
M00920		P033-00/ /		MODULE-HYD SYS R PRESS. LT TIME DELAY				ALL
	A	C	W0142	09H	22		29-11-22	ALL
	B	C	W0142	07H	22		29-11-22	ALL
	DED		W0142	07HZ			29-11-22	ALL
	DED		W0142	09HZ			29-11-22	ALL
M00921		P037-00/ /		MODULE-HYD SYS L PRESS. LT TIME DELAY				ALL
	A	C	W0192	793	22		29-11-12	ALL
	B	C	W0192	889	22		29-11-12	ALL
M00922		P036-00/ /		MODULE-HYD SYS CTR PRESS LT TIME DELAY				ALL
	A	C	W0184	647	22		29-11-32	ALL
	B	C	W0184	819	22		29-11-32	ALL
M00924		P033-00/ /		MODULE-ELEC HYD PUMP R PRESS.LT TIME DLY				ALL
	A	C	W0142	07U	22		29-11-22	ALL
	B	C	W0142	07V	22		29-11-22	ALL
	DED		W0142	07UZ			29-11-22	ALL
	DED		W0142	07VZ			29-11-22	ALL
M00925		P037-00/ /		MODULE-ELEC HYD PUMP L PRESS.LT TIME DLY				ALL
	A	C	W0192	105	22		29-11-12	ALL
	B	C	W0192	832	22		29-11-12	ALL
M00963		P033-00/ /		TIME DELAY-AUTO. SPEED BRAKE WRN				ALL
	A	C	W0142	07W	22		27-62-11	ALL
	B	C	W0142	07X	22		27-62-11	ALL
	DED		W0142	07WZ			27-62-11	ALL
	DED		W0142	07XZ			27-62-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section M00900

Page 1 End

Mar 07/2008



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
M01084		P033-00/ /		MODULE-LOAD SHED TIME DELAY				ALL
	A	C	W0142	888	24		24-51-52	ALL
	B	C	W0142	07Y	24		24-51-52	ALL
	DED		W0142	07YZ			24-51-52	ALL

HOOKUP LIST

D280T132

91-21-51

Section M01000

Page 1 End

Mar 07/2008



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
M01102		P051-00/ /		MODULE-400HZ EMI FILTER				ALL
	DED		W0045	608Z			31-51-11	ALL
	GND	D	W0045	FRC			31-51-11	ALL
			W0045	606Z			31-51-11	ALL
			W0045	FRC			31-51-11	ALL
	LINE	D	W0045	606	24		31-51-11	ALL
	LOAD	D	W0045	608	24		31-51-11	ALL
M01103		P051-00/ /		MODULE-400HZ EMI FILTER				ALL
	DED		W0045	605Z			31-51-12	ALL
	GND	D	W0045	FRA			31-51-12	ALL
			W0045	603Z			31-51-12	ALL
			W0045	FRA			31-51-12	ALL
	LINE	D	W0045	603	24		31-51-12	ALL
	LOAD	D	W0045	605	24		31-51-12	ALL
M01144		1760/264/L042		LC FILTER				ALL
	A		W0514	A-B			27-38-11	ALL
	B		W0502	A-B			27-38-11	ALL
M01145		1760/264/L042		LC FILTER				ALL
	A		W0514	A-A			27-38-11	ALL
	B		W0502	A-A			27-38-11	ALL
M01146		1760/264/L042		LC FILTER				ALL
	A		W0514	A-D			27-38-11	ALL
	B		W0502	A-D			27-38-11	ALL
M01147		1760/264/L042		LC FILTER				ALL
	A		W0514	A-C			27-38-11	ALL
	B		W0502	A-C			27-38-11	ALL
M01148		1008/183/R040		LC FILTER				ALL
	A		W0464	A-A			27-18-11	ALL
	B		W0752	A-A			27-18-11	050-099, 150-154, 162-165, 275-276
	B		W0738	A-A			27-18-11	155-157, 166-199, 277-299
M01149		1008/183/R040		LC FILTER				ALL
	A		W0464	A-B			27-18-11	ALL
	B		W0752	A-B			27-18-11	050-099, 150-154, 162-165, 275-276

HOOKUP LIST

D280T132

91-21-51

Section M01100

Page 1

Mar 07/2008



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
M01149		1008/183/R040		LC FILTER (continued)				ALL
	B		W0738	A-B			27-18-11	155-157, 166-199, 277-299
M01150		1008/183/L040		LC FILTER				ALL
	A		W0446	A-C			27-18-11	ALL
	B		W0756	A-A			27-18-11	050-099, 150-154, 162-165, 275-276
	B		W0942	A-A			27-18-11	155-157, 166-199, 277-299
M01151		1008/183/L040		LC FILTER				ALL
	A		W0446	A-D			27-18-11	ALL
	B		W0756	A-B			27-18-11	050-099, 150-154, 162-165, 275-276
	B		W0942	A-B			27-18-11	155-157, 166-199, 277-299
M01152		P019-00/ /		TIME DELAY-DOOR DOWN				ALL
	A	C	W1060	176	22		52-11-12	ALL
	B	C	W1060	177	22		52-11-12	ALL
M01161		P036-00/ /		TIME DELAY-AIR/GROUND RELAY SYSTEM				ALL
	A	C	W0176	08A	24		32-09-11	ALL
	B	C	W0176	797	24		32-09-11	ALL
	DED		W0176	08AZ			32-09-11	ALL
	DED		W0176	797Z			32-09-11	ALL
M01162		P036-00/ /		TIME DELAY-AIR/GROUND RELAY SYSTEM				ALL
	A	C	W0176	08B	24		32-09-11	ALL
	B	C	W0176	531	24		32-09-11	ALL
M01163		P037-00/ /		TIME DELAY-AIR/GROUND RELAY SYSTEM				ALL
	A	C	W0192	15A	24		32-09-12	ALL
	B	C	W0192	592	24		32-09-12	ALL
M01164		P037-00/ /		TIME DELAY-AIR/GROUND RELAY SYSTEM				ALL
	A	C	W0192	15B	24		32-09-12	ALL
	B	C	W0192	110	24		32-09-12	ALL

HOOKUP LIST

D280T132

91-21-51

Section M01100

Page 2 End

Mar 07/2008



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
M01228		P065-00/ /		MODULE-TIME DELAY				ALL
	A	C	W2058	012	22		24-25-11	ALL
	B	C	W2058	018	22		24-25-11	ALL
M01230		P065-00/ /		MODULE-TIME DELAY				ALL
	A	C	W2058	013	22		24-25-11	ALL
	B	C	W2058	020	22		24-25-11	ALL

HOOKUP LIST
D280T132

91-21-51
Section M01200
Page 1 End
Mar 07/2008



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
M01597		1550/304/L037		TRANSMITTER, EMERGENCY LOCATOR				050-099, 150-199
	ON	C	W0647	008	22		23-24-11	050-099, 150-199
	ARM	C	W0647	009	22		23-24-11	050-099, 150-199

HOOKUP LIST

D280T132

91-21-51

Section M01500

Page 1 End

Mar 07/2008



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
M01617		P032-00/ /		ELCU-FWD GALLEY POWER A				050-099, 150-199
	A1	H	W1018	010	04		24-21-21	050-099, 150-199
	A1	H	W1018	013	04		24-21-21	050-099, 150-199
	A2	H4	W0220	001	04		25-31-11	050-099, 150-199
	B1	H	W1018	011	04		24-21-21	050-099, 150-199
	B1	H	W1018	014	04		24-21-21	050-099, 150-199
	B2	H4	W0220	002	04		25-31-11	050-099, 150-199
	C1	H	W1018	012	04		24-21-21	050-099, 150-199
	C1	H	W1018	015	04		24-21-21	050-099, 150-199
	C2	H4	W0220	003	04		25-31-11	050-099, 150-199
M01618		P032-00/ /		ELCU-FWD GALLEY POWER B				050-099, 150-199
	A1	H	W1018	007	04		24-21-21	050-099, 150-199
	A1	H	W1018	010	04		24-21-21	050-099, 150-199
	A2	H6	W0410	001	06		25-31-12	050-099, 150-199
	B1	H	W1018	008	04		24-21-21	050-099, 150-199
	B1	H	W1018	011	04		24-21-21	050-099, 150-199
	B2	H6	W0410	002	06		25-31-12	050-099, 150-199
	C1	H	W1018	009	04		24-21-21	050-099, 150-199
	C1	H	W1018	012	04		24-21-21	050-099, 150-199
	C2	H6	W0410	003	06		25-31-12	050-099, 150-199
M01636		P031-00/ /		ELCU-AFT GALLEY POWER				050-099, 150-199
	A1	H	W1014	007	04		24-21-11	050-099, 150-199
	A1	H	W1014	022	04		24-21-11	050-099, 150-199
	A2	H2	W0226	009	02		25-31-21	050-099, 150-199
	B1	H	W1014	008	04		24-21-11	050-099, 150-199
	B1	H	W1014	023	04		24-21-11	050-099, 150-199
	B2	H2	W0226	010	02		25-31-21	050-099, 150-199
	C1	H	W1014	009	04		24-21-11	050-099, 150-199
	C1	H	W1014	024	04		24-21-11	050-099, 150-199
	C2	H2	W0226	011	02		25-31-21	050-099, 150-199

HOOKUP LIST

D280T132

91-21-51

Section M01600

Page 1 End

Mar 07/2008



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
M01990		P033-00/ /		TD-L T/R SSL UNLATCH (SB 78-0062)				ALL
	A	C	W0140	054	20		78-34-11	ALL
	B	C	W0140	055	20		78-34-11	ALL
M01991		P033-00/ /		TD-R T/R SSL UNLATCH (SB 78-0062)				ALL
	A	C	W0136	064	20		78-34-21	ALL
	B	C	W0136	065	20		78-34-21	ALL

HOOKUP LIST

D280T132

91-21-51

Section M01900

Page 1 End

Mar 07/2008



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
M02187		0355/166/R013		FSEU LC FILTER (SB 27-0131)				ALL
	A	D	W0098	108	22		27-51-61	ALL
	B	D	W0098	060	22		27-51-61	ALL
	DED		W0098	060Z			27-51-61	ALL
	DED		W0098	108Z			27-51-61	ALL
M02188		0355/155/R013		FSEU LC FILTER (SB 27-0131)				ALL
	A	D	W0014	021	24		27-51-61	ALL
	B	D	W0014	630	24		27-51-61	ALL
M02189		0355/155/R013		FSEU LC FILTER (SB 27-0131)				ALL
	A	D	W0016	515	24		27-51-61	ALL
	B	D	W0016	004	24		27-51-61	ALL

HOOKUP LIST

D280T132

91-21-51

Section M02100

Page 1 End

Mar 07/2008



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
M09001		0270 / /		MASTER CONTROL UNIT (EAD89-0704-00)				150, 153, 157, 165-199
M09001		0458/235/L069		8.6 INCH LCD VIDEO MONITOR (MTO 230524)				154-156
	= G	\$	W9159	006	12		25-25-23	150, 153, 157, 165-199

HOOKUP LIST

D280T132

91-21-51

Section M09000

Page 1 End

Mar 07/2008



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
M10334		P006-05/ /		MODULE-L START FAIL DELAY				ALL
	A	C	W0158	117	24		80-11-11	ALL
	B	C	W0158	028	24		80-11-11	ALL
	B	C	W0158	029	24		80-11-11	ALL
M10335		P006-05/ /		MODULE-R START FAIL DELAY				ALL
	A	C	W0156	171	24		80-11-21	ALL
	B	C	W0156	090	24		80-11-21	ALL
	B	C	W0156	091	24		80-11-21	ALL

HOOKUP LIST

D280T132

91-21-51

Section M10300

Page 1 End

Mar 07/2008



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
M10439		P033-00/ /		MDL-R T/R ISLN VLV DLY (SB 78-0062)				ALL
M10439		P033-00/ /		MODULE-R T/R ISLN VALVE DELAY				157, 167-199, 277-299
	A	C	W0142	02E	22		78-36-21	ALL
	B	C	W0142	02D	20		78-36-21	ALL
M10440		P036-00/ /		MDL-L T/R ISLN VLV DLY (SB 78-0062)				ALL
M10440		P036-00/ /		MODULE-L T/R ISLN VALVE DELAY				157, 167-199, 277-299
	A	C	W0176	03R	22		78-36-11	ALL
	B	C	W0176	02Z	20		78-36-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section M10400

Page 1 End

Mar 07/2008



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
M12093		0238/273/L015		CHIME MODULE (SB 25-0325)				050-099, 155-199, 276-299
M12093		0238/273/L015		CHIME MODULE (SB 25-0332)				150-154, 275
	1		W2214	A-M			52-51-11	050-099, 150-163, 166-199, 275-299
	2		W2214	A-N			52-51-11	050-099, 150-163, 166-199, 275-299
	7		W2214	A-G			52-51-11	050-099, 150-163, 166-199, 275-299
	8		W2214	A-F			52-51-11	050-099, 150-163, 166-199, 275-299
	9		W2214	A-P			52-51-11	050-099, 150-163, 166-199, 275-299
	10		W2214	A-J			52-51-11	050-099, 150-163, 166-199, 275-299
	15		W2214	A-H			52-51-11	050-099, 150-163, 166-199, 275-299
	19		W2214	A-L			52-51-11	050-099, 150-163, 166-199, 275-299
	21		W2214	A-K			52-51-11	050-099, 150-163, 166-199, 275-299
	23		W2214	A-Q			52-51-11	050-099, 150-163, 166-199, 275-299
M12096		0224/275/R025		PRESSURE SENSOR (SB 25-0325)				050-099, 155-199, 276-299
M12096		0224/275/R025		PRESSURE SENSOR (SB 25-0332)				150-154, 275
	2		W2214	A-A			52-51-11	050-099, 150-163, 166-199, 275-299
	4		W2214	A-E			52-51-11	050-099, 150-163, 166-199, 275-299
	5		W2214	A-B			52-51-11	050-099, 150-163, 166-199, 275-299
	6		W2214	A-D			52-51-11	050-099, 150-163, 166-199, 275-299
	8		W2214	A-C			52-51-11	050-099, 150-163, 166-199, 275-299

HOOKUP LIST

D280T132

91-21-51

Section M12000

Page 1 End

Mar 07/2008



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
N00108		1373/116/0000		INDICATOR-WATER QUANTITY				ALL
	1	B	W0966	204R	24		38-14-11	ALL
	2	B	W0966	204B	24		38-14-11	ALL
	3	B	W0966	019	20		38-14-11	ALL
N00109		P061-00/ /		IND-APU HOURMETER				ALL
	+	D	W0060	032	24		49-72-11	ALL
	-	D	W0060	025	24		49-72-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section N00100
Page 1 End
Mar 07/2008



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
NL0118								ALL
	REF		W3530	01TB	20		78-36-11	ALL
	REF		W3530	01TI			78-36-11	ALL
	REF		W3530	01TR	20		78-36-11	ALL
	REF		W3532	011	18		78-36-11	ALL
	REF		W3532	02TB	20		78-36-11	ALL
	REF		W3532	02TI			78-36-11	ALL
	REF		W3532	02TO			78-36-11	ALL
	REF		W3532	02TR	20		78-36-11	ALL
NL0124								ALL
	REF		W3530	02TB	20		78-36-11	ALL
	REF		W3530	02TI			78-36-11	ALL
	REF		W3530	02TR	20		78-36-11	ALL
	REF		W3532	010	18		78-36-11	ALL
	REF		W3532	01TB	20		78-36-11	ALL
	REF		W3532	01TI			78-36-11	ALL
	REF		W3532	01TO			78-36-11	ALL
	REF		W3532	01TR	20		78-36-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section NL0100

Page 1 End

Mar 07/2008



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
QD0001		CAPT/COL/ GS	W0443	QUICK DISCONNECT WOR	22		27-41-11	ALL
QD0002		CAPT/COL/ GS	W0443	QUICK DISCONNECT WVI	22		27-41-11	ALL
QD0003		CAPT/COL/ GS	W0443	QUICK DISCONNECT WBK	22		27-41-11	ALL
QD0004		CAPT/COL/ GS	W0443	QUICK DISCONNECT WBO	22		27-41-11	ALL
QD0005		CAPT/COL/ GS	W0443	QUICK DISCONNECT WRD	22		27-41-11	ALL
QD0006		CAPT/COL/ GS	W0443	QUICK DISCONNECT WBV	22		23-51-11	ALL
QD0007		CAPT/COL/ GS	W0443	QUICK DISCONNECT WGY	22		23-51-11	ALL
QD0008		CAPT/COL/ GS	W0443	QUICK DISCONNECT WBB	22		23-51-11	ALL
QD0009		CAPT/COL/ GS	W0443	QUICK DISCONNECT WBR	22		23-51-11	ALL
QD0010		CAPT/COL/ GS	W0443	QUICK DISCONNECT WBN	22		22-11-22	ALL
QD0011		CAPT/COL/ GS	W0443	QUICK DISCONNECT WYL	22		22-11-12	ALL
QD0012		CAPT/COL/ GS	W0443	QUICK DISCONNECT WGR	22		22-11-12	ALL
QD0013		CAPT/COL/ GS	W0443	QUICK DISCONNECT WBL	22		22-11-22	ALL

HOOKUP LIST

D280T132

91-21-51

Section QD0000

Page 1

Mar 07/2008



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
QD0014		CAPT/COL/ GS	W0443	QUICK DISCONNECT WKY	22		22-11-32	ALL ALL
QD0015		CAPT/COL/ GS	W0443	QUICK DISCONNECT WHT	22		22-11-12	ALL ALL
QD0016		CAPT/COL/ GS	W0443	QUICK DISCONNECT WBU	22		22-11-12	ALL ALL
QD0017		CAPT/COL/ GS	W0443	QUICK DISCONNECT WBG	22		22-11-32	ALL ALL
QD0018		F/O/COL/ GS	W0445	QUICK DISCONNECT WOR	22		27-41-21	ALL ALL
QD0019		F/O/COL/ GS	W0445	QUICK DISCONNECT WVI	22		27-41-21	ALL ALL
QD0020		F/O/COL/ GS	W0445	QUICK DISCONNECT WBK	22		27-41-21	ALL ALL
QD0021		F/O/COL/ GS	W0445	QUICK DISCONNECT WBO	22		27-41-21	ALL ALL
QD0022		F/O/COL/ GS	W0445	QUICK DISCONNECT WRD	22		27-41-21	ALL ALL
QD0023		F/O/COL/ GS	W0445	QUICK DISCONNECT WBV	22		23-51-21	ALL ALL
QD0024		F/O/COL/ GS	W0445	QUICK DISCONNECT WGY	22		23-51-21	ALL ALL
QD0025		F/O/COL/ GS	W0445	QUICK DISCONNECT WBB	22		23-51-21	ALL ALL
QD0026		F/O/COL/ GS	W0445	QUICK DISCONNECT WBR	22		23-51-21	ALL ALL

HOOKUP LIST

D280T132

91-21-51

Section QD0000

Page 2

Mar 07/2008



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
QD0027		F/O/COL/ GS	W0445	QUICK DISCONNECT WBN	22		22-11-22	ALL ALL
QD0028		F/O/COL/ GS	W0445	QUICK DISCONNECT WYL	22		22-11-12	ALL
QD0029		F/O/COL/ GS	W0445	QUICK DISCONNECT WGR	22		22-11-12	ALL
QD0030		F/O/COL/ GS	W0445	QUICK DISCONNECT WBL	22		22-11-22	ALL
QD0031		F/O/COL/ GS	W0445	QUICK DISCONNECT WKY	22		22-11-32	ALL
QD0032		F/O/COL/ GS	W0445	QUICK DISCONNECT WHT	22		22-11-12	ALL
QD0033		F/O/COL/ GS	W0445	QUICK DISCONNECT WBU	22		22-11-12	ALL
QD0034		F/O/COL/ GS	W0445	QUICK DISCONNECT WBG	22		22-11-32	ALL

HOOKUP LIST

D280T132

91-21-51

Section QD0000

Page 3 End

Mar 07/2008



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
QD6776J		P010-00/ /		RCPT-				050-099
QD6776J		P010-00/ /		REPT-				155-199, 275-299
	= 1		W5150	026	20		33-13-18	050-099, 155, 162-165, 275-276
	= 1		W5150	231R	20		33-13-18	156-157, 166-199, 277-299
QD6776P		P010-00/ /		PLUG-				050-099, 155-199, 275-299
	= 1		W5150	024	20		33-13-18	050-099, 155, 162-165, 275-276
	= 1		W5150	230R	20		33-13-18	156-157, 166-199, 277-299
QD6780J		P010-00/ /		RCPT-				050-099
QD6780J		P010-00/ /		REPT-				155-199, 275-299
	= 1		W5150	025	20		33-13-18	050-099, 155, 162-165, 275-276
	= 1		W5150	230B	20		33-13-18	156-157, 166-199, 277-299
QD6780P		P010-00/ /		PLUG-				050-099, 155-199, 275-299
	= 1		W5150	027	20		33-13-18	050-099, 155, 162-165, 275-276
	= 1		W5150	231B	20		33-13-18	156-157, 166-199, 277-299

HOOKUP LIST

D280T132

91-21-51

Section QD6700

Page 1 End

Mar 07/2008



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
R00001		P011-00/ /		DIODE				ALL
	= A	\$	W0040	193	24		24-51-31	ALL
	= C		W0044	713	24		24-51-31	ALL
R00002		P011-00/ /		DIODE				ALL
	= A	\$	W0042	168	24		24-51-31	ALL
	= C		W0044	713	24		24-51-31	ALL
	= C		W0044	714	24		24-51-31	ALL
R00003		0198/275/R012		DIODE				ALL
	= A	\$	W0044	196	24		24-51-31	ALL
	= C		W0044	714	24		24-51-31	ALL
	= C		W0044	734	24		24-51-31	ALL
R00011		P049-00/ /		DIODE-APU CONTROL,MAIN				ALL
	A	\$	W1050	045	16		49-61-11	ALL
	C	E	W1050	041	16		49-61-11	ALL
R00012		P049-00/ /		DIODE-APU CONTROL,BAT.				ALL
	A	\$	W1050	036	16		49-61-11	ALL
	C	E	W1050	042	16		49-61-11	ALL
R00024		SHELF/E01/01		RESISTOR-AILERON LOCKOUT ACTUATOR				ALL
	= A	\$	W0121	197	16		27-11-12	ALL
	= B	\$	W0121	196	16		27-11-12	ALL
R00025		SHELF/E02/01		RESISTOR-AILERON LOCKOUT ACTUATOR				ALL
	= A	\$	W0151	197	16		27-11-22	ALL
	= B	\$	W0151	196	16		27-11-22	ALL
R00035		P035-00/ /		DIODE-ISOLATION				ALL
	A	2	W1066	817	24		52-34-12	050-099
	C	2	W1066	527	24		52-34-12	050-099
R00037		P039-00/ /		DIODE-ISOLATION				ALL
	A	2	W1068	807	24		52-35-12	050-099
	C	2	W1068	527	24		52-35-12	050-099
R00058		P011-00/ /		DIODE-DUAL PWR,INTPH				ALL
	= A	\$	W0042	196	22		23-51-21	ALL

HOOKUP LIST

D280T132

91-21-51
Section R00000
Page 1
Mar 07/2008



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
R00058		P011-00/ /		DIODE-DUAL PWR,INTPH (continued)				ALL
	= C		W0042	197	22		23-51-21	ALL
R00059		P011-00/ /		DIODE-DUAL PWR,INTPH				ALL
	= A	\$	W0042	193	22		23-51-11	ALL
	= C		W0042	194	22		23-51-11	ALL
R00060		P011-00/ /		DIODE-DUAL PWR,INTPH				ALL
	= A	\$	W0044	727	22		23-51-21	ALL
	= C		W0044	728	22		23-51-21	ALL
R00061		P011-00/ /		DIODE-DUAL PWR,INTPH				ALL
	= A	\$	W0044	725	22		23-51-11	ALL
	= C		W0044	726	22		23-51-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section R00000

Page 2 End

Mar 07/2008



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL		Description	GA	CO	Diagram	Effectivity
		Type	Bundle					
R00503		P007-00/ /		DIMMER-LIGHT,CAPT CHART				ALL
	1	C	W1052	003	24		33-14-21	ALL
	2	C	W1052	C-A			33-14-21	ALL
R00504		P007-00/ /		DIMMER-LIGHT,F/O CHART				ALL
	1	C	W1054	003	24		33-14-21	ALL
	2	C	W1054	C-A			33-14-21	ALL
R00505		P007-00/ /		RHEOSTAT-MAP LIGHT,CAPT				ALL
	1	C	W1052	001	24		33-14-11	ALL
	2	C	W1052	002	24		33-14-11	ALL
R00506		P007-00/ /		RHEOSTAT-MAP LIGHT,F/O				ALL
	1	C	W1054	001	24		33-14-11	ALL
	2	C	W1054	002	24		33-14-11	ALL
R00507		P007-00/ /		POTENTIOMETER-PNL FLDT CONT,CAPT & CTR				ALL
	2	A	W1052	206B	24		33-11-11	ALL
	3	A	W1052	206R	24		33-11-11	ALL
	=A	\$	W1052	024	22		33-11-11	ALL
	=B	\$	W1052	025	22		33-11-11	ALL
			W1052	016	20		33-11-11	ALL
			W1052	206Z			33-11-11	ALL
R00508		P007-00/ /		POTENTIOMETER-INSTR PNL FLDT CONTROL,F/O				ALL
	2	A	W1054	206B	24		33-11-11	ALL
	3	A	W1054	206R	24		33-11-11	ALL
	=A	\$	W1054	024	22		33-11-11	ALL
	=B	\$	W1054	025	22		33-11-11	ALL
	REF		W1054	016	20		33-11-11	ALL
	REF		W1054	206Z			33-11-11	ALL
R00511		P007-00/ /		POTENTIOMETER-CAPT INSTR & PNL LT CONT				ALL
	1	A	W1052	302Y	24		33-13-11	ALL
	2	A	W1052	302B	24		33-13-11	ALL
	3	A	W1052	302R	24		33-13-11	ALL
R00512		P007-00/ /		POTENTIOMETER-F/O INSTR & PNL LT CONT				ALL
	1	A	W1054	302Y	24		33-13-13	ALL
	2	A	W1054	302B	24		33-13-13	ALL

HOOKUP LIST

D280T132

91-21-51

Section R00500

Page 1

Mar 07/2008

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
R00512		P007-00/ /		POTENTIOMETER-F/O INSTR & PNL LT CONT (continued)				ALL
	3	A	W1054	302R	24		33-13-13	ALL
R00556		P006-00/ /		RESISTOR-AISLE STAND STBY -30 OHMS,20W				ALL
	=A	\$	W0156	160	20		33-11-13	ALL
	=B	\$	W0156	155	20		33-11-13	ALL

HOOKUP LIST

D280T132

91-21-51

Section R00500

Page 2 End

Mar 07/2008



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
R00658		MISC/ /		RESISTOR				050-099, 162-199
	1		W3006	A-A			23-34-15	050-099, 162-199
	2		W3006	A-B			23-34-15	050-099, 162-199
R00660		P036-00/ /		RESISTOR-TORQUE MOTOR LOAD				050-099
	=1	\$	W0176	24N	24		21-51-11	050-099
	=2	\$	W0176	24P	24		21-51-11	050-099

HOOKUP LIST

D280T132

91-21-51

Section R00600

Page 1 End

Mar 07/2008



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
S00001		P001-01/ /		SW-F/D INSTR SOURCE SELECT,LEFT				ALL
	A	1A	W0017	007	20		34-22-17	ALL
	B	1A	W0017	005	24		34-22-17	ALL
	D	1A	W0017	006	24		34-22-17	ALL
	F	1A	W0017	042	24		22-41-13	ALL
	G	1A	W0017	039	24		22-41-13	ALL
	H	1A	W0017	040	24		22-41-13	ALL
	J	1A	W0017	041	24		22-41-13	ALL
S00002		P001-01/ /		SW-FMC INSTR SOURCE SELECT,LEFT				ALL
	AA	1A	W0017	064	20		34-61-16	050, 150-154
	AA	1A	W0017	011	24		34-22-17	051-099, 155-199, 277-299
	AA	1A	W0017	081	20		34-61-16	275-276
	AB	1A	W0017	066	20		34-61-16	050, 150-154
	AB	1A	W0017	010	20		34-22-17	051-099, 155-199, 277-299
	AB	1A	W0017	082	20		34-61-16	275-276
	AC	1A	W0017	083	20		34-61-16	275-276
	AD	1A	W0017	067	20		34-61-16	050, 150-154
	AD	1A	W0017	046	20		34-22-17	051-099, 155-199, 277-299
	AE	1A	W0017	076	20		34-61-16	051-099, 155-199, 275-299
	AF	1A	W0017	069	20		34-61-16	050, 150-154
	AF	1A	W0017	075	20		34-61-16	051-099, 155-199, 275-299
	AG	1A	W0017	068	20		34-61-16	050, 150-154
	AH	1A	W0017	072	20		34-61-16	051-099, 155-199, 275-299
	AJ	1A	W0017	074	20		34-61-16	051-099, 155-199, 275-299
	AK	1A	W0017	073	20		34-61-16	051-099, 155-199, 275-299
	BA	1A	W0017	011	24		34-22-17	050, 150-154, 275-276
	BA	1A	W0017	081	20		34-61-16	051-099, 155-199, 277-299
	BB	1A	W0017	010	20		34-22-17	050, 150-154, 275-276
	BB	1A	W0017	082	20		34-61-16	051-099, 155-199, 277-299
	BC	1A	W0017	083	20		34-61-16	051-099, 155-199, 277-299
	BD	1A	W0017	046	20		34-22-17	050, 150-154, 275-276
	BE	1A	W0017	078	20		34-61-16	051-099, 155-199, 275-299
	BF	1A	W0017	071	20		34-61-16	050, 150-154
	BF	1A	W0017	079	20		34-61-16	051-099, 155-199, 275-299
	BG	1A	W0017	080	20		34-61-16	051-099, 155-199, 275-299
	BH	1A	W0017	077	20		34-61-16	051-099, 155-199, 275-299
	BJ	1A	W0017	070	20		34-61-16	ALL
S00003		P001-01/ /		SW-EFI INSTR SOURCE SELECT,LEFT				ALL
	1	1A	W0017	012	24		34-22-38	ALL

HOOKUP LIST

D280T132

91-21-51

Section S00000

Page 1

Mar 07/2008



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
S00003		P001-01/ /		SW-EFI INSTR SOURCE SELECT,LEFT (continued)				ALL
	2	1A	W0017	029	22		34-22-38	ALL
	3	1A	W0017	013	24		34-22-38	ALL
	5	1A	W0017	008	22		34-22-17	ALL
	6	1A	W0017	009	20		34-22-17	ALL
	7	1A	W0017	014	24		34-22-37	ALL
	8	1A	W0017	059	24		34-22-17	ALL
	9	1A	W0017	015	20		34-22-37	ALL
	11	1A	W0017	044	20		34-22-16	ALL
	12	1A	W0017	043	22		34-22-16	ALL
	13	1A	W0017	050	20		33-13-11	ALL
	15	1A	W0017	055	20		33-13-11	ALL
S00004		P001-01/ /		SW-IRS INSTR SOURCE SELECT,LEFT				ALL
	2	1A	W0017	001	24		34-22-82	ALL
	3	1A	W0017	002	20		34-22-82	ALL
	5	1A	W0017	004	20		34-22-17	ALL
	6	1A	W0017	003	24		34-22-17	ALL
	8	1A	W0017	017	20		34-22-91	ALL
	9	1A	W0017	016	24		34-22-91	ALL
	11	1A	W0017	057	24		32-42-11	ALL
	12	1A	W0017	058	24		32-42-11	ALL
	13	1A	W0017	051	20		33-13-11	ALL
	15	1A	W0017	056	20		33-13-11	ALL
S00009		P003-03/ /		SW-F/D INSTR SOURCE SELECT,RIGHT				ALL
	A	1A	W0033	007	20		34-22-27	ALL
	B	1A	W0033	005	24		34-22-27	ALL
	D	1A	W0033	006	24		34-22-27	ALL
	F	1A	W0033	053	24		22-41-13	ALL
	G	1A	W0033	050	24		22-41-13	ALL
	H	1A	W0033	051	24		22-41-13	ALL
	J	1A	W0033	052	24		22-41-13	ALL
S00010		P003-03/ /		SW-FMC INSTR SOURCE SELECT,RIGHT				ALL
	AA	1A	W0033	056	24		34-61-26	050, 150-154
	AA	1A	W0033	009	24		34-22-27	051-099, 155-199, 277-299
	AA	1A	W0033	108	20		34-61-26	275-276
	AB	1A	W0033	070	24		34-61-26	050, 150-154
	AC	1A	W0033	008	20		34-22-27	051-099, 155-199, 277-299
	AC	1A	W0033	109	20		34-61-26	275-276

HOOKUP LIST

D280T132

91-21-51

Section S00000

Page 2

Mar 07/2008



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
S00010		P003-03/ /		SW-FMC INSTR SOURCE SELECT,RIGHT (continued)				ALL
	AD	1A	W0033	075	24		34-61-26	050, 150-154
	AD	1A	W0033	110	20		34-61-26	275-276
	AE	1A	W0033	104	24		34-61-26	051-099, 155-199, 275-299
	AF	1A	W0033	076	24		34-61-26	050, 150-154
	AG	1A	W0033	099	24		34-61-26	051-099, 155-199, 275-299
	AH	1A	W0033	094	24		34-61-26	051-099, 155-199, 275-299
	AJ	1A	W0033	077	24		34-61-26	050, 150-154
	AJ	1A	W0033	096	24		34-61-26	051-099, 155-199, 275-299
	AK	1A	W0033	095	24		34-61-26	051-099, 155-199, 275-299
	BA	1A	W0033	009	24		34-22-27	050, 150-154, 275-276
	BA	1A	W0033	108	20		34-61-26	051-099, 155-199, 277-299
	BC	1A	W0033	008	20		34-22-27	050, 150-154, 275-276
	BC	1A	W0033	109	20		34-61-26	051-099, 155-199, 277-299
	BD	1A	W0033	110	20		34-61-26	051-099, 155-199, 277-299
	BE	1A	W0033	105	20		34-61-26	051-099, 155-199, 275-299
	BF	1A	W0033	079	24		34-61-26	050, 150-154
	BF	1A	W0033	106	20		34-61-26	051-099, 155-199, 275-299
	BG	1A	W0033	078	24		34-61-26	050, 150-154
	BG	1A	W0033	107	20		34-61-26	051-099, 155-199, 275-299
	BH	1A	W0033	097	24		34-61-26	051-099, 155-199, 275-299
	BK	1A	W0033	098	24		34-61-26	051-099, 155-199, 275-299
S00011		P003-03/ /		SW-EFI INSTR SOURCE SELECT,RIGHT				ALL
	2	1A	W0033	072	22		34-22-27	ALL
	3	1A	W0033	071	20		34-22-27	ALL
	5	1A	W0033	011	22		34-22-38	ALL
	6	1A	W0033	010	20		34-22-38	ALL
	7	1A	W0033	018	24		34-22-37	ALL
	9	1A	W0033	019	24		34-22-37	ALL
	11	1A	W0033	055	20		34-22-26	ALL
	12	1A	W0033	054	22		34-22-26	ALL
	13	1A	W0033	060	20		33-13-13	ALL
	15	1A	W0033	065	20		33-13-13	ALL
S00012		P003-03/ /		SW-IRS INSTR SOURCE SELECT,RIGHT				ALL
	1	1A	W0033	012	24		34-21-31	ALL
	2	1A	W0033	001	24		34-22-92	ALL
	3	1A	W0033	002	20		34-22-92	ALL
	5	1A	W0033	004	20		34-22-27	ALL
	6	1A	W0033	003	24		34-22-27	ALL

HOOKUP LIST

D280T132

91-21-51

Section S00000

Page 3

Mar 07/2008



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
S00012		P003-03/ /		SW-IRS INSTR SOURCE SELECT,RIGHT (continued)				ALL
	8	1A	W0033	067	24		32-42-11	ALL
	9	1A	W0033	068	24		32-42-11	ALL
	11	1A	W0033	016	20		34-22-81	ALL
	12	1A	W0033	017	24		34-22-81	ALL
	13	1A	W0033	061	20		33-13-13	ALL
	15	1A	W0033	066	20		33-13-13	ALL
S00016		P001-03/ /		SW-LIGHT GND PROX-G/S INHIBIT				ALL
	2	1A	W0013	073	24		34-46-11	ALL
	3	1A	W0013	074	22		34-46-11	ALL
	13	1A	W0013	148	22		33-16-13	ALL
	14	1A	W0013	127	22		33-16-13	ALL
	15	1A	W0013	071	22		34-46-11	ALL
	16	1A	W0013	070	22		34-46-11	ALL
	17	1A	W0013	128	22		33-16-13	ALL
	18	1A	W0013	149	22		33-16-13	ALL
	DED		W0013	148Z			33-16-13	ALL
	DED		W0013	149Z			33-16-13	ALL
S00042		0469/252/L049		SW-LIGHT,CLOSET				050-099
	=1	I	W1178	001	22		33-22-21	050-099
	=2	I	W1178	002	22		33-22-21	050-099

HOOKUP LIST

D280T132

91-21-51

Section S00000

Page 4 End

Mar 07/2008



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
S00150		0542/130/R053		PROX SNSR-CARGO DR UNLATCHED,FWD				ALL
	BLU		W0960	C-A			52-34-13	ALL
	RED		W0960	C-B			52-34-13	ALL
S00151		0479/190/R088		PROX SNSR-CARGO DR OPEN,FWD				ALL
S00151		0479/190/R087		PROX SNSR-CARGO DR OPEN,FWD				ALL
	BLU		W0916	Z-A			52-34-13	ALL
	RED		W0916	Z-B			52-34-13	ALL
I S00152		0480/140/R068		PROX SNSR-CARGO DR LATCH RANGE,FWD				ALL
I S00152		D0480/140/R068		PROX SNSR-CARGO DR LATCH RANGE,FWD				ALL
	BLU		W0960	E-A			52-34-13	ALL
	RED		W0960	E-B			52-34-13	ALL
S00153		0456/130/R060		PROX SNSR-CARGO DR HANDLE UNLOCKED,FWD				ALL
	BLU		W0916	A-D			52-34-13	ALL
	RED		W0916	A-C			52-34-13	ALL
S00154		0545/134/R060		PROX SNSR-CARGO DR LATCHED,FWD				ALL
S00154		D0545/134/R060		PROX SNSR-CARGO DR LATCHED,FWD				ALL
	BLU		W0960	B-A			52-34-13	ALL
	RED		W0960	B-B			52-34-13	ALL
S00157		1303/152/R076		PROX SNSR-CARGO DR LIFT RANGE,AFT				ALL
	BLU		W0962	C-A			52-35-13	ALL
	RED		W0962	C-B			52-35-13	ALL
S00158		1325/198/R094		PROX SNSR-CARGO DR OPEN,AFT				ALL
	BLU		W0916	B-C			52-35-13	ALL
	RED		W0916	B-D			52-35-13	ALL
S00159		1344/140/R068		PROX SNSR-CARGO DR DOWN NO.1,AFT				050-099
	BLU		W0962	E-A			52-35-13	050-099
	RED		W0962	E-B			52-35-13	050-099
S00160		1271/140/R068		PROX SNSR-CARGO DR DOWN NO.2,AFT				ALL
	BLU		W0962	D-A			52-35-13	ALL
	RED		W0962	D-B			52-35-13	ALL

HOOKUP LIST

D280T132

91-21-51

Section S00100

Page 1

Aug 05/2009



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
S00161		1303/155/R078		PROX SNSR-CAR. DR CLOSED,AFT				ALL
	BLU		W0962	B-A			52-35-13	ALL
	RED		W0962	B-B			52-35-13	ALL
S00184		0284/280/L060		PROX SNSR-ENTRY DR HANDLE UP,FWD				ALL
	BLU		W1226	A-B			52-11-13	ALL
	RED		W1226	A-A			52-11-13	ALL
S00185		0317/305/R006		PROX SNSR-ENTRY DOOR UP,FWD				ALL
	BLU		W1226	B-B			52-11-13	ALL
	RED		W1226	B-A			52-11-13	ALL
S00186		0315/280/L070		PROX SNSR-ENTRY DOOR DOWN,FWD				ALL
	BLU		W1226	C-B			52-11-13	ALL
	RED		W1226	C-A			52-11-13	ALL
S00187		0292/275/L070		PROX SNSR-UPLATCH RELEASE,FWD				ALL
	BLU		W1226	D-B			52-11-13	ALL
	RED		W1226	D-A			52-11-13	ALL
S00192		0872/260/L090		PROX SNSR-L WG DOOR CLOSED				ALL
	BLU		W0784	A-B			52-71-12	ALL
	RED		W0784	A-A			52-71-12	ALL
S00193		0872/260/R090		PROX SNSR-R WG DOOR CLOSED				ALL
	BLU		W0786	A-B			52-71-12	ALL
	RED		W0786	A-A			52-71-12	ALL
S00194		0316/276/L080		PROX SNSR-L FWD ENTRY DOOR CLOSED				ALL
	BLU		W1226	E-B			52-71-11	ALL
	RED		W1226	E-A			52-71-11	ALL
S00195		0312/276/L080		PROX SNSR-L FWD ENTRY DOOR LOCKED				ALL
	BLU		W1226	F-B			52-71-11	ALL
	RED		W1226	F-A			52-71-11	ALL
S00196		0322/275/R080		PROX SNSR-R FWD ENTRY DOOR CLOSED				ALL
	BLU		W0780	A-B			52-71-11	ALL
	RED		W0780	A-A			52-71-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section S00100

Page 2

Mar 07/2008



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
S00197		0320/275/R080		PROX SNSR-R FWD ENTRY DOOR LOCKED				ALL
	BLU		W0780	B-B			52-71-11	ALL
	RED		W0780	B-A			52-71-11	ALL
S00198		1146/171/L093		PROX SNSR-L WG SLIDE DR LOCKED				ALL
	BLU		W0916	B-B			52-71-12	ALL
	RED		W0916	B-A			52-71-12	ALL
S00199		1146/171/R093		PROX SNSR-R WG SLIDE DR LOCKED				ALL
	BLU		W0916	X-B			52-71-12	ALL
	RED		W0916	X-A			52-71-12	ALL

HOOKUP LIST

D280T132

91-21-51

Section S00100

Page 3 End

Mar 07/2008



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
S00200		0150/160/R013		PROX SNSR-FWD ACCESS. HATCH CLOSED				ALL
	BLU		W0902	A-X			52-71-14	ALL
	RED		W0902	A-W			52-71-14	ALL
S00201		0302/135/R020		PROX SNSR-ELEC ACCESS. HATCH CLOSED				ALL
	BLU		W0902	A-Z			52-71-14	ALL
	RED		W0902	A-Y			52-71-14	ALL
S00202		0287/244/L080		PROX SNSR-L FWD GIRT BAR ACTVTD				ALL
	BLU		W1226	G-B			52-71-11	ALL
	RED		W1226	G-A			52-71-11	ALL
S00203		0287/240/R080		PROX SNSR-R FWD GIRT BAR ACTVTD				ALL
	BLU		W0780	C-B			52-71-11	ALL
	RED		W0780	C-A			52-71-11	ALL
S00204		1505/274/L080		PROX SNSR-L AFT ENTRY DOOR CLOSED				ALL
	BLU		W0788	A-B			52-71-11	ALL
	RED		W0788	A-A			52-71-11	ALL
S00205		1505/274/L080		PROX SNSR-L AFT ENTRY DOOR LOCKED				ALL
	BLU		W0788	B-B			52-71-11	ALL
	RED		W0788	B-A			52-71-11	ALL
S00206		1515/274/R080		PROX SNSR-R AFT ENTRY DOOR CLOSED				ALL
	BLU		W0790	A-B			52-71-11	ALL
	RED		W0790	A-A			52-71-11	ALL
S00207		1515/274/R080		PROX SNSR-R AFT ENTRY DOOR LOCKED				ALL
	BLU		W0790	B-B			52-71-11	ALL
	RED		W0790	B-A			52-71-11	ALL
S00208		1275/152/R074		PROX SNSR-AFT CARGO DOOR LOCKED				ALL
	BLU		W0962	A-B			52-71-13	ALL
	RED		W0962	A-A			52-71-13	ALL
S00209		1324/196/R085		PROX SNSR-AFT CARGO DOOR CLOSED				ALL
	BLU		W0916	A-K			52-71-13	ALL
	RED		W0916	A-J			52-71-13	ALL

HOOKUP LIST

D280T132

91-21-51

Section S00200

Page 1

Mar 07/2008



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
S00211		1460/140/L060		PROX SNSR-BULK CARGO DOOR LATCHED				ALL
	BLU		W0916	A-P			52-71-13	ALL
	RED		W0916	A-N			52-71-13	ALL
S00212		1540/250/L090		PROX SNSR-L AFT GIRT BAR ACTVTD				ALL
	BLU		W0788	C-B			52-71-11	ALL
	RED		W0788	C-A			52-71-11	ALL
S00213		1540/250/R090		PROX SNSR-R AFT GIRT BAR ACTVTD				ALL
	BLU		W0790	C-B			52-71-11	ALL
	RED		W0790	C-A			52-71-11	ALL
S00214		0597/125/R052		PROX SNSR-FWD CARGO DOOR LOCKED				ALL
S00214		D0597/125/R052		PROX SNSR-FWD CARGO DOOR LOCKED				ALL
	BLU		W0960	F-B			52-71-13	ALL
	RED		W0960	F-A			52-71-13	ALL
I S00215		D0550/120/R047		PROX SNSR-FWD CARGO DOOR CLOSED				ALL
I S00215		0550/120/R047		PROX SNSR-FWD CARGO DOOR CLOSED				ALL
	BLU		W0960	D-A			52-71-13	ALL
	RED		W0960	D-B			52-71-13	ALL
S00216		0928/260/L090		PROX SNSR-L AFT WING DOOR CLOSED				150-199, 275-299
	BLU		W0784	B-B			52-71-12	150-199, 275-299
	RED		W0784	B-A			52-71-12	150-199, 275-299
S00217		0928/260/R090		PROX SNSR-R AFT WING DOOR CLOSED				150-199, 275-299
	BLU		W0786	D-B			52-71-12	150-199, 275-299
	RED		W0786	D-A			52-71-12	150-199, 275-299
S00218		1114/172/L094		PROX SNSR-L WG SLIDE DR LATCHED/CLOSED				050-099, 153-199, 275-299
S00218		1113/172/L098		PROX SNSR-L WG SLIDE DR LATCHED/CLOSED				150-152
	BLU		W0916	A-M			52-71-12	ALL
	RED		W0916	A-L			52-71-12	ALL
S00219		1114/172/R094		PROX SNSR-R WG SLIDE DR LATCHED/CLOSED				050-099, 153-199, 275-299
S00219		1113/172/R098		PROX SNSR-R WG SLIDE DR LATCHED/CLOSED				150-152
	BLU		W0916	A-F			52-71-12	ALL
	RED		W0916	A-E			52-71-12	ALL

HOOKUP LIST

D280T132

91-21-51

Section S00200

Page 2

Aug 05/2009



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
S00245		1046/050/L183		PROX SNSR-LEFT GEAR TILTED,SYS NO.1				ALL
	BLU		W0676	A-B			32-09-11	ALL
	RED		W0676	A-A			32-09-11	ALL
S00246		1046/050/R183		PROX SNSR-RIGHT GEAR TILTED,SYS NO.1				ALL
	BLU		W0686	A-B			32-09-11	ALL
	RED		W0686	A-A			32-09-11	ALL
S00247		1706/167/L001		SW-TAIL SKID EXTENDED				150-199, 275-299
	BLU		W0910	A-B			32-71-11	150-199, 275-299
	RED		W0910	A-A			32-71-11	150-199, 275-299
S00248		1702/168/L001		SW-TAIL SKID RETRACTED				150-199, 275-299
	BLU		W0910	A-D			32-71-11	150-199, 275-299
	RED		W0910	A-C			32-71-11	150-199, 275-299
S00267		1046/050/L183		PROX SNSR-LEFT GEAR TILTED,SYS NO.2				ALL
	BLU		W0668	A-B			32-09-12	ALL
	RED		W0668	A-A			32-09-12	ALL
S00268		1046/050/R183		PROX SNSR-RIGHT GEAR TILTED,SYS NO.2				ALL
	BLU		W0688	A-B			32-09-12	ALL
	RED		W0688	A-A			32-09-12	ALL
S00276		L1083/14/FS		SW-PROX,OUTBD,L OUTBD SLAT NO.1				ALL
	BLU		W0430	A-A			27-88-12	ALL
	RED		W0430	A-B			27-88-12	ALL
S00277		L0934/14/FS		SW-PROX,OUTBD,L OUTBD SLAT NO.2				ALL
	BLU		W0430	B-A			27-88-12	ALL
	RED		W0430	B-B			27-88-12	ALL
S00278		L0779/14/FS		SW-PROX,OUTBD,L OUTBD SLAT NO.3				ALL
	BLU		W0430	A-U			27-88-12	ALL
	RED		W0430	A-V			27-88-12	ALL
S00279		L0629/14/FS		SW-PROX,OUTBD,L OUTBD SLAT NO.4				ALL
	BLU		W0430	A-N			27-88-12	ALL
	RED		W0430	A-P			27-88-12	ALL

HOOKUP LIST

D280T132

91-21-51

Section S00200

Page 3

Mar 07/2008



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
S00280		L0480/14/FS		SW-PROX,OUTBD,L OUTBD SLAT NO.5				ALL
	BLU		W0430	A-G			27-88-12	ALL
	RED		W0430	A-H			27-88-12	ALL
S00281		L0188/14/FS		SW-PROX,INBD,L INBD SLAT NO.6				ALL
	BLU		W0406	A-A			SPARE	ALL
	RED		W0406	A-B			27-88-12	ALL
S00282		L1025/14/FS		SW-PROX,INBD,L OUTBD SLAT NO.1				ALL
	BLU		W0430	A-C			27-88-12	ALL
	RED		W0430	A-D			27-88-12	ALL
S00283		L0880/14/FS		SW-PROX,INBD,L OUTBD SLAT NO.2				ALL
	BLU		W0430	B-C			27-88-12	ALL
	RED		W0430	B-D			27-88-12	ALL
S00284		L0733/14/FS		SW-PROX,INBD,L OUTBD SLAT NO.3				ALL
	BLU		W0430	A-W			27-88-12	ALL
	RED		W0430	A-X			27-88-12	ALL
S00285		L0581/14/FS		SW-PROX,INBD,L OUTBD SLAT NO.4				ALL
	BLU		W0430	A-Q			27-88-12	ALL
	RED		W0430	A-R			27-88-12	ALL
S00286		L0437/14/FS		SW-PROX,INBD,L OUTBD SLAT NO.5				ALL
	BLU		W0430	A-J			27-88-12	ALL
	RED		W0430	A-K			27-88-12	ALL
S00287		L0314/14/FS		SW-PROX,OUTBD,L INBD SLAT NO.6				ALL
	BLU		W0406	A-C			27-88-12	ALL
	RED		W0406	A-D			27-88-12	ALL
S00294		R1083/14/FS		SW-PROX,OUTBD,R OUTBD SLAT NO.12				ALL
	BLU		W0480	B-A			27-88-22	ALL
	RED		W0480	B-B			27-88-22	ALL
S00295		R0934/14/FS		SW-PROX,OUTBD,R OUTBD SLAT NO.11				ALL
	BLU		W0480	A-U			27-88-22	ALL
	RED		W0480	A-V			27-88-22	ALL

HOOKUP LIST

D280T132

91-21-51

Section S00200

Page 4

Mar 07/2008



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
S00296		R0779/14/FS		SW-PROX,OUTBD,R OUTBD SLAT NO.10				ALL
	BLU		W0480	A-N			27-88-22	ALL
	RED		W0480	A-P			27-88-22	ALL
S00297		R0629/14/FS		SW-PROX,OUTBD,R OUTBD SLAT NO.9				ALL
	BLU		W0480	A-G			27-88-22	ALL
	RED		W0480	A-H			27-88-22	ALL
S00298		R0480/14/FS		SW-PROX,OUTBD,R OUTBD SLAT NO.8				ALL
	BLU		W0480	A-A			27-88-22	ALL
	RED		W0480	A-B			27-88-22	ALL
S00299		R0188/14/FS		SW-PROX,INBD,R INBD SLAT NO.7				ALL
	BLU		W0442	A-A			27-88-12	050-099, 150-199, 275-278
	BLU		W0442	A-A			27-88-22	280-299
	RED		W0442	A-B			27-88-22	ALL

HOOKUP LIST

D280T132

91-21-51

Section S00200

Page 5 End

Mar 07/2008



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
S00300		R1025/14/FS		SW-PROX,INBD,R OUTBD SLAT NO.12				ALL
	BLU		W0480	B-C			27-88-22	ALL
	RED		W0480	B-D			27-88-22	ALL
S00301		R0880/14/FS		SW-PROX,INBD,R OUTBD SLAT NO.11				ALL
	BLU		W0480	A-W			27-88-22	ALL
	RED		W0480	A-X			27-88-22	ALL
S00302		R0733/14/FS		SW-PROX,INBD,R OUTBD SLAT NO.10				ALL
	BLU		W0480	A-Q			27-88-22	ALL
	RED		W0480	A-R			27-88-22	ALL
S00303		R0581/14/FS		SW-PROX,INBD,R OUTBD SLAT NO.9				ALL
	BLU		W0480	A-J			27-88-22	ALL
	RED		W0480	A-K			27-88-22	ALL
S00304		R0437/14/FS		SW-PROX,INBD,R OUTBD SLAT NO.8				ALL
	BLU		W0480	A-C			27-88-22	ALL
	RED		W0480	A-D			27-88-22	ALL
S00305		R0314/14/FS		SW-PROX,OUTBD,R INBD SLAT NO.7				ALL
	BLU		W0442	A-C			27-88-22	ALL
	RED		W0442	A-D			27-88-22	ALL
S00312		P010-00/ /		SW-LEADING EDGE SLAT				ALL
	C	\$	W5150	370	22		22-32-13	ALL
	NC	\$	W5150	369	22		22-32-13	ALL
	NO	\$	W5150	371	22		22-32-13	ALL
S00319		0953/115/R035		SW-R MN WW LT				ALL
	1	L	W1116	002	18		33-31-11	ALL
	2	L	W1116	001	18		33-31-11	ALL
	3	L	W1116	003	18		33-31-11	ALL
S00320		P007-00/ /		SW-CLOCK,CAPT				ALL
	1C	Z2	W1052	301B	24		31-25-11	ALL
	1NC	Z2	W1052	301R	24		31-25-11	ALL
	1NO	Z2	W1052	301Y	24		31-25-11	ALL
	DED		W1052	301Z			31-25-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section S00300

Page 1

Mar 07/2008



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
S00321		P007-00/ /		SW-CLOCK,F/O				ALL
	1C	Z2	W1054	301B	24		31-25-11	ALL
	1NC	Z2	W1054	301R	24		31-25-11	ALL
	1NO	Z2	W1054	301Y	24		31-25-11	ALL
	DED		W1054	301Z			31-25-11	ALL
S00324		P040-00/ /		SW-NOSE GEAR WHEEL WELL LT				ALL
	1	L	W1130	007	18		33-31-11	ALL
	2	L	W1130	006	18		33-31-11	ALL
S00333		1550/247/R077		SW-COMPRESSOR INTERLOCK				050-099
S00333		1546/247/R068		SW-COMPRESSOR INTERLOCK				150-199
	C		W1356	M-B			38-15-11	050-099, 150-199
	NC		W1356	M-A			38-15-11	050-099, 150-199
	NO		W1356	M-C			SPARE	150-199
	CAP	Y	W1356	M-C			SPARE	150-199
S00334		0173/195/L034		SW-COLUMN FWD,LEFT				ALL
	NO	E	W1281	A-C			27-41-11	050-099
	NO	E	W0465	A-C			27-41-11	150-166
	NO		W0465	A-C			27-41-11	167-199
	NO		W1281	A-C			27-41-11	275-299
	COM	E	W1281	A-A			27-41-11	050-099
	COM	E	W0465	A-A			27-41-11	150-166
	COM		W0465	A-A			27-41-11	167-199
	COM		W1281	A-A			27-41-11	275-299
S00335		0173/195/L034		SW-COLUMN AFT(ELEV TE UP),LEFT				ALL
	NO	E	W1281	B-C			27-41-11	050-099
	NO	E	W0465	B-C			27-41-11	150-166
	NO		W0465	B-C			27-41-11	167-199
	NO		W1281	B-C			27-41-11	275-299
	COM	E	W1281	B-A			27-41-11	050-099
	COM	E	W0465	B-A			27-41-11	150-166
	COM		W0465	B-A			27-41-11	167-199
	COM		W1281	B-A			27-41-11	275-299
S00336		0173/195/L034		SW-COLUMN AFT(ELEV TE UP),LEFT				050-099
	NO		W1281	C-C			27-41-11	050-099
	COM	E	W1281	C-A			27-41-11	050-099

HOOKUP LIST

D280T132

91-21-51

Section S00300

Page 2

Mar 07/2008



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
S00337		0173/195/R037		SW-COLUMN FWD,RIGHT				ALL
	NO	E	W0469	A-C			27-41-21	050-099, 150-166
	NO		W0469	A-C			27-41-21	167-199, 275-299
	COM	E	W0469	A-A			27-41-21	050-099, 150-166
	COM		W0469	A-A			27-41-21	167-199, 275-299
S00338		0173/195/R037		SW-COLUMN AFT(ELEV TE UP),RIGHT				ALL
	NO	E	W0469	B-C			27-41-21	050-099, 150-166
	NO		W0469	B-C			27-41-21	167-199, 275-299
	COM	E	W0469	B-A			27-41-21	050-099, 150-166
	COM		W0469	B-A			27-41-21	167-199, 275-299
S00339		0173/195/R037		SW-COLUMN AFT(ELEV TE UP),RIGHT				050-099
	NO		W0469	C-C			27-41-21	050-099
	COM	E	W0469	C-A			27-41-21	050-099
S00345		P028-00/ /		SW-FUELING POWER SELECT				ALL
	2	L	W1056	063	18		28-21-11	ALL
	3	L	W1056	062	18		28-21-11	ALL
S00346		FSS0672/12/FS		SW-FUELING PWR CONT				ALL
	BLU		W0472	A-D			28-21-11	ALL
	RED		W0472	A-C			28-21-11	ALL
S00347		P028-00/ /		SW-OVERFILL RESET				ALL
	1	J	W1056	064	18		28-21-12	ALL
	2	J	W1056	065	18		28-21-12	ALL
S00348		P028-00/ /		SW-FUELING VALVE CONTROL,L TANK				ALL
	2	L	W1056	054	18		28-21-11	ALL
	3	L	W1056	053	18		28-21-11	ALL
S00349		P028-00/ /		SW-FUELING VALVE CONTROL,R TANK				ALL
	2	L	W1056	056	18		28-21-11	ALL
	2	L	W1056	058	18		28-21-11	ALL
	3	L	W1056	057	18		28-21-11	ALL
S00350		P028-00/ /		SW-DEFUELING VALVE CONTROL,LEFT				ALL
	2	L	W1056	002	18		28-26-11	ALL
	2	L	W1056	008	18		28-26-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section S00300

Page 3

Mar 07/2008



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
S00350		P028-00/ /		SW-DEFUELING VALVE CONTROL,LEFT (continued)				ALL
	3	L	W1056	011	18		28-26-11	ALL
S00351		P028-00/ /		SW-DEFUELING VALVE CONTROL,RIGHT				ALL
	2	L	W1056	007	18		28-26-11	ALL
	3	L	W1056	021	18		28-26-11	ALL
S00352		1572/140/L005		SW-SERVICE PANEL DOOR				ALL
	BLU		W1354	A-A			38-32-11	ALL
	RED		W1354	A-B			38-32-11	ALL
S00353		1572/140/L005		SW-SERVICE PANEL DOOR				ALL
	BLU		W0966	B-B			38-32-11	ALL
	RED		W0966	B-A			38-32-11	ALL
S00354		0353/160/R040		SW-CAR. DR E/E BAY LT				ALL
	1	C	W0902	005	16		33-31-41	ALL
	2	C	W0902	004	16		33-31-41	ALL
	3	C	W0902	010	16		33-31-41	ALL
S00355		0303/126/R009		SW-GND E/E BAY LT				ALL
	1	C	W0902	003	16		33-31-41	ALL
	2	C	W0902	007	16		33-31-41	ALL
	3	C	W0902	005	16		33-31-41	ALL
	3	C	W0902	006	16		33-31-41	ALL
	4	C	W0902	006	16		33-31-41	ALL
	5	C	W0902	008	16		33-31-41	ALL
	6	C	W0902	003	16		33-31-41	ALL
	6	C	W0902	010	16		33-31-41	ALL
S00356		0308/199/L055		SW-IN FLT E/E BAY LT				ALL
	1	C	W0902	007	16		33-31-41	ALL
	2	C	W0902	009	16		33-31-41	ALL
	3	C	W0902	008	16		33-31-41	ALL
S00357		0145/168/0000		SW-FWD E/E BAY LT				ALL
	2	C	W0902	001	18		33-31-41	ALL
	3	C	W0902	002	18		33-31-41	ALL

HOOKUP LIST

D280T132

91-21-51

Section S00300

Page 4

Mar 07/2008



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
S00361		0863/115/L010		SW-LEFT AIR COND COMPT LIGHTS				ALL
	2	L	W0938	030	18		33-31-21	ALL
	3	L	W0938	031	18		33-31-21	ALL
S00362		0863/118/R062		SW-RIGHT AIR COND COMPT LIGHTS				ALL
	2	C	W0980	006	18		33-31-21	ALL
	3	C	W0980	007	18		33-31-21	ALL
S00365		1155/129/R075		SW-RAT. DOWN LIMIT				ALL
	1		W0658	A-A			29-21-31	ALL
	2		W0658	A-C			29-21-31	ALL
	3		W0658	A-B			29-21-31	ALL
	4		W0658	A-F			29-21-31	ALL
	5		W0658	A-E			29-21-31	ALL
	6		W0658	A-D			29-21-31	ALL
	CAP	Y	W0658	A-B			29-21-31	ALL
	CAP	Y	W0658	A-D			29-21-31	ALL
	CAP	Y	W0658	A-E			29-21-31	ALL
	CAP	Y	W0658	A-F			29-21-31	ALL
S00366		1045/133/R005		SW-RAM AIR TURBINE RETRACT SELECT				ALL
	1	C	W0680	002	18		29-21-31	ALL
	2	C	W0680	005	18		29-21-31	ALL
S00369		1155/129/R075		SW-RAT. UP LIMIT				ALL
	1		W0658	B-A			29-21-31	ALL
	2		W0658	B-C			29-21-31	ALL
	3		W0658	B-B			29-21-31	ALL
	4		W0658	B-F			29-21-31	ALL
	5		W0658	B-E			29-21-31	ALL
	6		W0658	B-D			29-21-31	ALL
	CAP	Y	W0658	B-B			29-21-31	ALL
	CAP	Y	W0658	B-D			29-21-31	ALL
	CAP	Y	W0658	B-E			29-21-31	ALL
	CAP	Y	W0658	B-F			29-21-31	ALL
S00371		P010-00/ /		SWITCH-ARMING,AUTO SPEED BRAKE				ALL
	ACM		W5150	A-B			27-62-11	ALL
	ANC		W5150	A-A			27-62-11	ALL
	ANO		W5150	A-C			27-62-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section S00300

Page 5

Mar 07/2008



767-200/300 WIRING DIAGRAM MANUAL

Equip	Station / WL / BL		Bundle	Description		GA	CO	Diagram	Effectivity
	Term	Type		Wire No.					
S00371		P010-00/ /		SWITCH-ARMING,AUTO SPEED BRAKE (continued)					ALL
	BCM		W5150	A-E			27-62-11	ALL	
	BNC		W5150	A-D			27-62-11	ALL	
	BNO		W5150	A-F			27-62-11	ALL	
S00374		P010-00/ /		SW-ENG THRUST REV					ALL
	C		W5150	B-B			27-62-11	ALL	
	NC		W5150	B-A			27-62-11	ALL	
	NO		W5150	B-C			27-62-11	ALL	
S00379		1410/175/L 84		SW-BULK CARGO EXTERIOR LIGHTS					050-099, 150-199
	2	C	W0662	021	20		33-31-61	050-099, 150-199	
	3	C	W0662	071	20		33-31-61	050-099, 150-199	
	3	C	W0662	073	20		33-31-61	050-099, 150-199	
S00383		P035-00/ /		SW-PDU,FWD DRIVE BAYS					050-099
	1	C	W1066	541	22		25-53-13	050-099	
	2	C	W1066	542	22		25-53-11	050-099	
	2	C	W1066	562	22		25-53-11	050-099	
	3	C	W1066	546	22		25-53-13	050-099	
	4	C	W1066	548	22		25-53-13	050-099	
	5	C	W1066	543	22		25-53-13	050-099	
	5	C	W1066	739	22		25-53-13	050-099	
S00384		P035-00/ /		SW-PDU,AFT DRIVE BAYS					050-099
	1	C	W1066	563	22		25-53-13	050-099	
	2	C	W1066	562	22		25-53-11	050-099	
	2	C	W1066	899	22		25-53-11	050-099	
	3	C	W1066	144	22		25-53-13	050-099	
	4	C	W1066	561	22		25-53-13	050-099	
	5	C	W1066	144	22		25-53-13	050-099	
	6	C	W1066	814	22		25-53-13	050-099	
	7	C	W1066	145	22		25-53-13	050-099	
	8	C	W1066	009	22		25-53-13	050-099	
	8	C	W1066	564	22		25-53-13	050-099	
	9	C	W1066	582	22		25-53-13	050-099	
	9	C	W1066	816	22		25-53-13	050-099	
	9	C	W1066	891	22		25-53-13	050-099	
	10	C	W1066	816	22		25-53-13	050-099	
	11	C	W1066	010	22		25-53-13	050-099	
	11	C	W1066	145	22		25-53-13	050-099	

HOOKUP LIST

D280T132

91-21-51

Section S00300

Page 6

Mar 07/2008



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
S00384		P035-00/ /		SW-PDU,AFT DRIVE BAYS (continued)				050-099
	11	C	W1066	146	22		25-53-13	050-099
S00387		P035-00/ /		SW-FWD LATL GUIDES				050-099
	1	C	W1066	577	22		25-53-15	050-099
	2	C	W1066	575	22		25-53-15	050-099
	3	C	W1066	883	22		25-53-15	050-099
S00388		P035-00/ /		SW-AFT LATL GUIDES				050-099
	1	C	W1066	587	22		25-53-15	050-099
	2	C	W1066	585	22		25-53-15	050-099
	3	C	W1066	884	22		25-53-15	050-099
S00392		P039-00/ /		SW-PDU,FWD DRIVE BAYS				050-099
	1	C	W1068	541	22		25-53-23	050-099
	2	C	W1068	542	22		25-53-21	050-099
	3	C	W1068	543	22		25-53-23	050-099
	4	C	W1068	544	22		25-53-23	050-099
	5	C	W1068	543	22		25-53-23	050-099
	6	C	W1068	546	22		25-53-23	050-099
	7	C	W1068	547	22		25-53-23	050-099
	8	C	W1068	010	22		25-53-23	050-099
	8	C	W1068	548	22		25-53-23	050-099
	9	C	W1068	545	22		25-53-23	050-099
	9	C	W1068	549	22		25-53-23	050-099
	10	C	W1068	009	22		25-53-23	050-099
	10	C	W1068	540	22		25-53-23	050-099
	10	C	W1068	547	22		25-53-23	050-099
	11	C	W1068	549	22		25-53-23	050-099
S00394		P039-00/ /		SW-AFT LATL GUIDES				050-099
	1	C	W1068	587	22		25-53-25	050-099
	2	C	W1068	585	22		25-53-25	050-099
	3	C	W1068	884	22		25-53-25	050-099
S00395		P039-00/ /		SW-FWD LATL GUIDES				050-099
	1	C	W1068	577	22		25-53-25	050-099
	2	C	W1068	575	22		25-53-25	050-099
	3	C	W1068	883	22		25-53-25	050-099

HOOKUP LIST

D280T132

91-21-51

Section S00300

Page 7 End

Mar 07/2008



767-200/300 WIRING DIAGRAM MANUAL

Equip	Station / WL / BL		Bundle	Description		GA	CO	Diagram	Effectivity
	Term	Type		Wire No.					
S00402		P035-00/ /		SW-FWD CAR. COMPT LTS,INT SW				ALL	
	1	C	W1066	042	20		33-37-11	050-099	
	1	C	W1066	042	18		33-37-11	150-199, 275-299	
	2	C	W1066	046	18		33-37-11	ALL	
	3	C	W1066	043	18		33-37-11	ALL	
S00403		0355/188/R064		SW-FWD CAR. COMPT LTS,E/E ACCESS DOOR				ALL	
	1		W0616	A-A			33-37-11	ALL	
	2		W0616	A-B			33-37-11	ALL	
	3		W0616	A-C			33-37-11	ALL	
	4		W0616	A-D			33-37-11	ALL	
	CAP	Y	W0616	A-C			33-37-11	ALL	
	CAP	Y	W0616	A-D			33-37-11	ALL	
S00410		0280/230/L085		SW-ENTRY DOOR CONTROL,FWD				ALL	
	1	C	W1224	028	22		52-11-12	ALL	
	2	C	W1224	027	22		52-11-12	ALL	
	3	C	W1224	013	22		52-11-12	ALL	
	4	C	W1224	012	22		52-11-12	ALL	
	5	C	W1224	029	22		52-11-12	ALL	
	6	C	W1224	027	22		52-11-12	ALL	
	6	C	W1224	030	22		52-11-12	ALL	
S00411		P035-00/ /		SW-CAR. DR CONT,FWD				ALL	
	7	C	W1066	820	24		52-34-12	ALL	
	8	C	W1066	818	24		52-34-12	050-099	
	8	C	W1066	814	24		52-34-12	150-199, 275-299	
	9	C	W1066	819	24		52-34-12	ALL	
	10	C	W1066	821	24		52-34-12	ALL	
	11	C	W1066	820	24		52-34-12	ALL	
	12	C	W1066	801	24		52-34-12	ALL	
S00413		P039-00/ /		SW-CAR. DR CONT,AFT				ALL	
	7	C	W1068	820	24		52-35-12	ALL	
	8	C	W1068	818	24		52-35-12	ALL	
	9	C	W1068	819	24		52-35-12	ALL	
	10	C	W1068	821	24		52-35-12	ALL	
	11	C	W1068	820	24		52-35-12	ALL	
	12	C	W1068	801	24		52-35-12	ALL	

HOOKUP LIST

D280T132

91-21-51

Section S00400

Page 1

Mar 07/2008



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
S00414		P039-00/ /		SW-CAR. DR CONT ARMING,AFT				ALL
	1	C	W1068	816	24		52-35-12	ALL
	1	C	W1068	817	24		52-35-12	ALL
	2	C	W1068	814	24		52-35-12	ALL
	2	C	W1068	815	24		52-35-12	ALL
	5	C	W1068	815	24		52-35-12	ALL
	6	C	W1068	817	24		52-35-12	ALL
	6	C	W1068	818	24		52-35-12	ALL
S00416		P028-00/ /		SW-OVERFILL SYS TEST				ALL
	1	J	W1056	066	18		28-21-12	ALL
	2	J	W1056	067	18		28-21-12	ALL
S00417		P028-00/ /		SW-FUELING VALVE CONT,AUX TANK				ALL
	2	L	W1056	054	18		28-21-11	ALL
	2	L	W1056	056	18		28-21-11	ALL
	3	L	W1056	055	18		28-21-11	ALL
S00418		P028-00/ /		SW-LOAD SET,L TANK				ALL
	1	J	W1056	028	18		28-21-11	ALL
	2	J	W1056	029	18		28-21-11	ALL
S00419		P028-00/ /		SW-LOAD SET,R TANK				ALL
	1	J	W1056	033	18		28-21-11	ALL
	2	J	W1056	032	18		28-21-11	ALL
S00420		P028-00/ /		SW-LOAD SET,AUX TANK				ALL
	1	J	W1056	031	18		28-21-11	ALL
	2	J	W1056	030	18		28-21-11	ALL
S00421		P028-00/ /		SW-TEST,FUELING SHUTOFF SYSTEM				ALL
	1	J	W1056	072	18		28-21-11	ALL
	2	J	W1056	060	18		28-21-11	ALL
S00426		P040-00/ /		SW-FLIGHT DECK CALL				ALL
	1	J	W1130	002	18		23-43-11	ALL
	2	J	W1130	001	18		23-43-11	ALL
S00427		1680/185/R048		SW-TAILCONE COMPT LT				ALL
	2	L	W0242	026	18		33-31-31	ALL

HOOKUP LIST

D280T132

91-21-51

Section S00400

Page 2

Mar 07/2008



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
S00427		1680/185/R048		SW-TAILCONE COMPT LT (continued)				ALL
	3	L	W0242	027	18		33-31-31	ALL
S00428		1834/217/R017		SW-APU COMPT LTS				ALL
	2	L	W0270	001	18		33-31-31	ALL
	3	L	W0270	002	18		33-31-31	ALL
	3	L	W0270	003	18		33-31-31	ALL
S00429		P039-00/ /		SW-AFT CAR. COMPT LTS,INT				ALL
	1	C	W1068	042	20		33-37-21	050-099
	1	C	W1068	044	20		33-37-21	050-099
	1	C	W1068	042	18		33-37-21	150-199, 275-299
	1	C	W1068	044	18		33-37-21	150-199, 275-299
	2	C	W1068	046	20		33-37-21	050-099
	2	C	W1068	046	18		33-37-21	150-199, 275-299
	3	C	W1068	043	20		33-37-21	050-099
	3	C	W1068	045	20		33-37-21	050-099
	3	C	W1068	043	18		33-37-21	150-199, 275-299
	3	C	W1068	045	18		33-37-21	150-199, 275-299
	4	C	W1068	045	20		33-37-21	050-099
	4	C	W1068	045	18		33-37-21	150-199, 275-299
	5	C	W1068	047	20		33-37-21	050-099
	5	C	W1068	047	18		33-37-21	150-199, 275-299
	6	C	W1068	044	20		33-37-21	050-099
	6	C	W1068	044	18		33-37-21	150-199, 275-299
S00430		1410/175/L083		SW-BULK COMPT LTS				ALL
	1	C	W0662	025	20		33-37-21	050-099
	1	C	W0662	025	16		33-37-21	150-199, 275-299
	2	C	W0662	027	18		33-37-21	050-099
	2	C	W0662	027	16		33-37-21	150-199, 275-299
	3	C	W0662	026	20		33-37-21	050-099
	3	C	W0662	026	16		33-37-21	150-199, 275-299
S00435		P019-00/ /		SW-NIGHT LTS FLEXIBILITY STA 631				275-299
	1	C	W1060	018	22		33-21-21	275-278
	1	C	W1060	026	22		33-21-21	275-299
	1	C	W1060	01T	22		33-21-21	280-299
	2	C	W1060	012	22		33-21-21	275-299
	3	C	W1060	020	22		33-21-21	275-299
	3	C	W1060	621	22		33-21-21	275-299

HOOKUP LIST

D280T132

91-21-51

Section S00400

Page 3

Mar 07/2008



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
S00435		P019-00/ /		SW-NIGHT LTS FLEXIBILITY STA 631 (continued)				275-299
	3	C	W1060	622	22		33-21-21	275-299
S00443		1812/202/R012		SW-TAILCONE COMPT LT				ALL
	2	L	W0242	028	18		33-31-31	ALL
	3	L	W0242	029	18		33-31-31	ALL
S00457		P028-00/ /		SW-TEST,FUEL INDICATOR				ALL
	1	J	W1056	073	18		28-41-11	ALL
	2	J	W1056	088	18		28-21-11	ALL
S00459		0151/188/L025		SW-PARK BRAKE				ALL
	1C	B	W0264	016	18		32-44-11	ALL
	2C	B	W1287	009	20		31-51-41	ALL
	1NC	B	W0264	008	18		32-44-11	ALL
	2NC	B	W1287	008	24		31-51-41	ALL
	1NO	B	W0264	009	18		32-44-11	ALL
S00460		0240/276/L017		SW-FLIGHT DECK DOOR				ALL
	BLU		W1224	B-B			33-22-41	ALL
	RED		W1224	B-A			33-22-41	ALL
S00466		P040-00/ /		SW-EMER LIGHTS TEST				ALL
	1	L	W1130	004	18		33-51-21	ALL
	2	L	W1130	005	18		33-51-21	ALL
	3	L	W1130	003	18		33-51-21	ALL
S00468		0955/115/L035		SW-MN WW LT,L				ALL
	1	L	W0930	008	20		33-31-11	ALL
	2	L	W0930	010	20		33-31-11	ALL
	3	L	W0930	007	20		33-31-11	ALL
S00482		P001-01/ /		SW-ADC INSTR SOURCE SELECT,CAPT				ALL
	2	1A	W0017	037	22		34-13-11	ALL
	3	1A	W0017	032	20		34-12-61	ALL
	5	1A	W0017	036	22		34-12-61	ALL
	6	1A	W0017	030	20		34-12-61	ALL
	8	1A	W0017	025	22		34-12-61	ALL
	9	1A	W0017	031	22		34-12-61	ALL
	10	1A	W0017	105	22		34-12-61	ALL

HOOKUP LIST

D280T132

91-21-51

Section S00400

Page 4

Mar 07/2008



767-200/300 WIRING DIAGRAM MANUAL

Equip	Station / WL / BL		Description		GA	CO	Diagram	Effectivity
	Term	Type	Bundle	Wire No.				
S00482	P001-01/ /		SW-ADC INSTR SOURCE SELECT,CAPT (continued)					ALL
	11	1A	W0017	106	22		34-12-61	ALL
	12	1A	W0017	104	22		34-12-61	ALL
	13	1A	W0017	048	20		33-13-11	ALL
	15	1A	W0017	053	20		33-13-11	ALL
S00483	P003-03/ /		SW-ADC INSTR SOURCE SELECT,F/O					ALL
	1	1A	W0033	102	24		34-22-27	ALL
	2	1A	W0033	044	20		34-13-21	ALL
	3	1A	W0033	046	20		34-12-62	ALL
	5	1A	W0033	069	22		34-12-62	ALL
	6	1A	W0033	047	22		34-12-62	ALL
	10	1A	W0033	127	22		34-12-62	ALL
	11	1A	W0033	128	22		34-12-62	ALL
	12	1A	W0033	126	22		34-12-62	ALL
	13	1A	W0033	058	20		33-13-13	ALL
	15	1A	W0033	063	20		33-13-13	ALL
S00484	P040-00/ /		SW-APU FIRE SHUTDOWN					ALL
	1		W1132	A-D			49-61-11	ALL
	2		W1132	A-L			SPARE	ALL
	3		W1132	A-E			49-61-11	ALL
	4		W1132	A-M			SPARE	ALL
	5		W1132	A-N			SPARE	ALL
	6		W1132	A-O			SPARE	ALL
	CAP	Y	W1132	A-L			SPARE	ALL
	CAP	Y	W1132	A-M			SPARE	ALL
	CAP	Y	W1132	A-N			SPARE	ALL
	CAP	Y	W1132	A-O			SPARE	ALL
S00485	P040-00/ /		SW-APU BOTTLE DISCHARGE					ALL
	1		W1132	A-A			26-22-21	ALL
	2		W1132	A-H			SPARE	ALL
	3		W1132	A-B			26-22-21	ALL
	4		W1132	A-I			SPARE	ALL
	5		W1132	A-J			SPARE	ALL
	6		W1132	A-K			SPARE	ALL
	CAP	Y	W1132	A-H			SPARE	ALL
	CAP	Y	W1132	A-I			SPARE	ALL
	CAP	Y	W1132	A-J			SPARE	ALL
	CAP	Y	W1132	A-K			SPARE	ALL

HOOKUP LIST

D280T132

91-21-51

Section S00400

Page 5

Mar 07/2008



Equip	Station / WL / BL		Description		GA	CO	Diagram	Effectivity
	Term	Type	Bundle	Wire No.				
S00486		P040-00/ /		SW-APU BOTTLE DISCHARGE				275-299
	1		W1132	A-F			26-22-21	275-299
	2		W1132	A-P			SPARE	275-299
	3		W1132	A-G			26-22-21	275-299
	4		W1132	A-Q			SPARE	275-299
	5		W1132	A-R			SPARE	275-299
	6		W1132	A-S			SPARE	275-299
	CAP	Y	W1132	A-P			SPARE	275-299
	CAP	Y	W1132	A-Q			SPARE	275-299
	CAP	Y	W1132	A-R			SPARE	275-299
	CAP	Y	W1132	A-S			SPARE	275-299
S00493		P010-00/ /		SW-SPOILER HANDLE POSITION				ALL
	A-B		W5150	L-A			32-42-12	ALL
	A-K		W5150	L-B			32-42-12	ALL
	A-R		W5150	L-C			32-42-12	ALL
	B-B		W5150	L-D			31-51-41	ALL
	B-K		W5150	L-E			31-51-41	ALL
	B-R		W5150	L-F			29-11-32	ALL

HOOKUP LIST

D280T132

91-21-51

Section S00400

Page 6 End

Mar 07/2008



767-200/300 WIRING DIAGRAM MANUAL

Equip	Station / WL / BL		Description		GA	CO	Diagram	Effectivity
	Term	Type	Bundle	Wire No.				
S00501		1155/129/R075		SW-RAT. OVERRIDE LIMIT				ALL
	1		W0658	C-A			29-21-31	ALL
	2		W0658	C-C			29-21-31	ALL
	3		W0658	C-B			29-21-31	ALL
	4		W0658	C-F			29-21-31	ALL
	5		W0658	C-D			29-21-31	ALL
	6		W0658	C-E			29-21-31	ALL
	CAP	Y	W0658	C-B			29-21-31	ALL
	CAP	Y	W0658	C-D			29-21-31	ALL
	CAP	Y	W0658	C-E			29-21-31	ALL
	CAP	Y	W0658	C-F			29-21-31	ALL
S00506		1750/283/R032		SW-APU INLET DOOR OPEN				ALL
	= A		W0242	A-E			49-15-11	ALL
	= B		W0242	A-F			49-15-11	ALL
S00507		P007-00/ /		LIGHTED SW-MSTR WRN AND CAUT,CAPT				ALL
	2	1A	W1052	005	20		31-51-21	ALL
	3	1A	W1052	006	24		31-51-21	ALL
	5	1A	W1052	028	24		31-41-16	ALL
	6	1A	W1052	027	24		31-41-16	ALL
	13	1A	W1052	013	22		33-16-16	ALL
	14	1A	W1052	014	22		33-16-16	ALL
	15	1A	W1052	012	24		31-51-21	ALL
	16	1A	W1052	029	24		31-41-16	ALL
	17	1A	W1052	010	22		33-16-16	ALL
	18	1A	W1052	009	22		33-16-16	ALL
	DED		W1052	013Z			33-16-16	ALL
	DED		W1052	014Z			33-16-16	ALL
S00508		P007-00/ /		LIGHTED SW-MSTR WRN AND CAUT,F/O				ALL
	2	1A	W1054	005	20		31-51-21	ALL
	3	1A	W1054	006	24		31-51-21	ALL
	5	1A	W1054	028	24		31-41-16	ALL
	6	1A	W1054	027	24		31-41-16	ALL
	13	1A	W1054	013	22		33-16-16	ALL
	14	1A	W1054	014	22		33-16-16	ALL
	15	1A	W1054	012	24		31-51-21	ALL
	16	1A	W1054	029	24		31-41-16	ALL
	17	1A	W1054	010	22		33-16-16	ALL
	18	1A	W1054	009	22		33-16-16	ALL

HOOKUP LIST

D280T132

91-21-51

Section S00500

Page 1

Mar 07/2008



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
S00508		P007-00/ /		LIGHTED SW-MSTR WRN AND CAUT,F/O (continued)				ALL
	DED		W1054	013Z			33-16-16	ALL
	DED		W1054	014Z			33-16-16	ALL
S00510		P044-00/ /		SW-CARGO DR CONT ARM,AFT				ALL
	8	C	W1136	030	22		52-35-12	ALL
	8	C	W1136	031	22		52-35-12	ALL
	9	C	W1136	029	22		52-35-12	ALL
	10	C	W1136	005	22		52-35-12	ALL
	10	C	W1136	029	22		52-35-12	ALL
	11	C	W1136	004	22		52-35-12	ALL
	11	C	W1136	030	22		52-35-12	ALL
S00511		P043-00/ /		SW-CARGO DR CONT,FWD				ALL
	8	C	W1134	021	22		52-34-12	ALL
	9	C	W1134	003	22		52-34-12	ALL
	10	C	W1134	002	22		52-34-12	ALL
	11	C	W1134	001	22		52-34-12	ALL
	11	C	W1134	021	22		52-34-12	ALL
S00512		P044-00/ /		SW-CARGO DR CONT,AFT				ALL
	8	C	W1136	021	22		52-35-12	ALL
	9	C	W1136	003	22		52-35-12	ALL
	10	C	W1136	002	22		52-35-12	ALL
	11	C	W1136	001	22		52-35-12	ALL
	11	C	W1136	021	22		52-35-12	ALL
S00513		P043-00/ /		SW-FWD CAR. COMPT LTS,EXT				ALL
	1	C	W1134	014	20		33-37-11	050-099
	1	C	W1134	014	18		33-37-11	150-199, 275-299
	2	C	W1134	013	18		33-37-11	ALL
	3	C	W1134	015	18		33-37-11	ALL
S00514		P044-00/ /		SW-AFT CAR. COMPT LTS,EXT				ALL
	1	C	W1136	014	20		33-37-21	050-099
	1	C	W1136	014	16		33-37-21	150-199, 275-299
	2	C	W1136	013	18		33-37-21	050-099
	2	C	W1136	013	16		33-37-21	150-199, 275-299
	3	C	W1136	015	20		33-37-21	050-099
	3	C	W1136	015	16		33-37-21	150-199, 275-299

HOOKUP LIST

D280T132

91-21-51

Section S00500

Page 2

Mar 07/2008



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
S00515		P043-00/ /		SW-CARGO EXT AREA LTS,FWD (LARGE DOOR)				ALL
	2	C	W1134	012	20		33-31-61	ALL
	3	C	W1134	011	20		33-31-61	ALL
S00516		P044-00/ /		SW-CARGO EXT AREA LIGHTS,AFT				ALL
	1	C	W1136	011	20		33-31-61	ALL
	2	C	W1136	012	20		33-31-61	ALL
S00521		P010-00/ /		SW-LEADING EDGE SLAT,LEFT				ALL
	C	\$	W5150	364	20		22-12-11	ALL
	NC	\$	W5150	365	22		22-12-11	ALL
S00522		P010-00/ /		SW-LEADING EDGE SLAT,RIGHT				ALL
	C	\$	W5150	376	20		22-12-21	ALL
	NC	\$	W5150	377	22		22-12-21	ALL
S00523		P010-00/ /		SW-LEADING EDGE SLAT,CENTER				ALL
	C	\$	W5150	382	20		22-12-31	ALL
	NC	\$	W5150	383	22		22-12-31	ALL
S00526		0840/262/L023		SW-LIGHT,CLOSET				050-099
S00526		0654+120/262/L023		SW-LIGHT,CLOSET				151-152
	=1	C	W1192	001	22		33-22-21	050-099
	=1	C	W1192	007	22		33-22-21	050-099
	=1	C	W2010	001	22		33-22-21	151-152
	=1	C	W2010	006	22		33-22-21	151-152
	=2	C	W1192	002	22		33-22-21	050-099
	=2	C	W2010	002	22		33-22-21	151-152
S00528		0868/262/L089		SW-OFF WING ESCAPE SYS DISABLE,L				050-099
	1	C	W0072	004	18		25-65-11	050-099
	2	C	W0072	01B	20		25-65-11	050-099
	4	C	W0072	007	18		25-65-11	050-099
	5	C	W0072	003	20		25-65-11	050-099
S00529		0868/262/R089		SW-OFF WING ESCAPE SYS DISABLE,R				050-099
	1	C	W0076	004	18		25-65-12	050-099
	2	C	W0076	01B	20		25-65-12	050-099
	4	C	W0076	007	18		25-65-12	050-099
	5	C	W0076	003	20		25-65-12	050-099

HOOKUP LIST

D280T132

91-21-51

Section S00500

Page 3

Mar 07/2008



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
S00530		0869/258/L089		SW-OFF WING ESCAPE SYS AUTO ARM,L				050-099
	1	C	W0072	002	22		25-65-11	050-099
	2	C	W0072	01A	22		25-65-11	050-099
	2	C	W0072	01B	20		25-65-11	050-099
	3	C	W0072	01C	20		25-65-11	050-099
	3	C	W0072	01D	20		25-65-11	050-099
	5	C	W0072	001	22		25-65-11	050-099
	6	C	W0072	01A	22		25-65-11	050-099
S00531		0869/258/R089		SW-OFF WING ESCAPE SYS AUTO ARM,R				050-099
	1	C	W0076	002	22		25-65-12	050-099
	2	C	W0076	01A	22		25-65-12	050-099
	2	C	W0076	01B	20		25-65-12	050-099
	3	C	W0076	01C	20		25-65-12	050-099
	3	C	W0076	01D	20		25-65-12	050-099
	5	C	W0076	001	22		25-65-12	050-099
	6	C	W0076	01A	22		25-65-12	050-099
S00532		0868/258/L089		SW-OFF WING ESCAPE SYS AUTO FIRE,L				050-099
	1	C	W0072	005	22		25-65-11	050-099
	2	C	W0072	006	20		25-65-11	050-099
	3	C	W0072	01D	20		25-65-11	050-099
	5	C	W0072	008	20		25-65-11	050-099
	6	C	W0072	01C	20		25-65-11	050-099
S00533		0868/258/R089		SW-OFF WING ESCAPE SYS AUTO FIRE,R				050-099
	1	C	W0076	005	22		25-65-12	050-099
	2	C	W0076	006	20		25-65-12	050-099
	3	C	W0076	01D	20		25-65-12	050-099
	5	C	W0076	008	20		25-65-12	050-099
	6	C	W0076	01C	20		25-65-12	050-099
S00538		P010-00/ /		SW-STABILIZER TRIM				150-154
	C		W5150	E-A			27-41-11	150-154
	NO		W5150	E-B			27-41-11	150-154
S00540		0840/262/R023		SW-LIGHT,CLOSET				050-099
S00540		0654+120/262/R023		SW-LIGHT,CLOSET				151-152
	=1	C	W1192	007	22		33-22-21	050-099
	=1	C	W2010	006	22		33-22-21	151-152
	=2	C	W1192	008	22		33-22-21	050-099

HOOKUP LIST

D280T132

91-21-51

Section S00500

Page 4

Mar 07/2008



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
S00540		0840/262/R023		SW-LIGHT,CLOSET (continued)				050-099
S00540		0654+120/262/R023		SW-LIGHT,CLOSET (continued)				151-152
	=2	C	W2010	005	22		33-22-21	151-152
S00547		P001-03/ /		SW-RESERVE BRAKES & STEERING SELECT				ALL
	2	1A	W0013	012	22		29-21-32	ALL
	3	1A	W0013	018	22		29-21-32	ALL
	5	1A	W0013	020	22		29-21-32	ALL
	6	1A	W0013	019	22		29-21-32	ALL
	8	1A	W0013	040	20		29-21-32	ALL
	9	1A	W0013	017	22		29-21-32	ALL
	13	1A	W0013	031	20		33-13-11	ALL
	15	1A	W0013	032	20		33-13-11	ALL
	16	1A	W0013	016	22		29-21-32	ALL
	17	1A	W0013	028	22		33-16-13	ALL
	18	1A	W0013	027	22		33-16-13	ALL
	DED		W0013	027Z			33-16-13	ALL
	DED		W0013	028Z			33-16-13	ALL
S00553		1550/190/R066		SW-COMPRESSOR INTERLOCK				ALL
	C		W1356	K-B			38-15-11	ALL
	NC		W1356	K-A			38-15-11	ALL
	NO		W1356	K-C			SPARE	ALL
	CAP	Y	W1356	K-C			SPARE	ALL
S00563		P035-00/ /		SW-PALLET HDLG				ALL
	1	C	W1066	646	22		25-53-17	ALL
	2	C	W1066	705	22		25-53-17	ALL
	4	C	W1066	676	22		25-53-13	050-099
	4	C	W1066	01G	22		25-53-13	150-199, 275-299
	5	C	W1066	899	22		25-53-11	050-099
	5	C	W1066	255	22		25-53-11	150-199, 275-299
	6	C	W1066	37S	22		25-53-17	ALL
	7	C	W1066	810	22		25-53-13	050-099
	7	C	W1066	689	22		25-53-13	150-199, 275-299
	8	C	W1066	809	22		25-53-13	050-099
	8	C	W1066	01S	22		25-53-13	150-199, 275-299
	8	C	W1066	566	22		25-53-13	150-199, 275-299
	9	C	W1066	808	22		25-53-13	050-099
	9	C	W1066	891	22		25-53-13	050-099
	9	C	W1066	04Q	22		25-53-13	150-199, 275-299

HOOKUP LIST

D280T132

91-21-51

Section S00500

Page 5

Mar 07/2008



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
S00563		P035-00/ /		SW-PALLET HDLG (continued)				ALL
	10	C	W1066	645	22		25-53-17	ALL
	11	C	W1066	880	22		25-53-17	ALL
S00572		P036-00/ /		SW-AIR HYD PUMP TEST/RESET				ALL
	1	C	W0184	742	22		29-11-32	ALL
	1	C	W0184	747	22		29-11-32	ALL
	2	C	W0184	743	22		29-11-32	ALL
	2	C	W0184	746	22		29-11-32	ALL
	5	C	W0184	744	22		29-11-32	ALL
	6	C	W0184	745	22		29-11-32	ALL
S00575		0172/220/L005		SW-STABILIZER TRIM				150-154
	NO		W5150	V-A			31-31-15	150-154
	COM		W5150	V-B			31-31-15	150-154
S00591		0328/146/L048		SW-ALTERNATE VMO/MMO SELECT				275-299
	2	C	W1615	031	20		34-12-22	275-299
	3	C	W1615	032	20		34-12-22	275-299
	5	C	W1605	021	20		34-12-12	275-299
	6	C	W1605	022	20		34-12-12	275-299
	7	C	W1605	012	24		34-16-11	275-299
	8	C	W1605	013	24		34-16-11	275-299

HOOKUP LIST

D280T132

91-21-51

Section S00500

Page 6 End

Mar 07/2008



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
S00601		P003-01/ /		SW-TE FLAP ARM,ALT				ALL
	1	1A	W0035	060	20		27-51-11	ALL
	2	1A	W0035	063	20		27-51-11	ALL
	3	1A	W0035	058	20		27-51-11	ALL
	5	1A	W0035	059	20		27-51-11	ALL
	6	1A	W0035	061	20		27-51-11	ALL
	8	1A	W0035	064	20		27-51-11	ALL
	9	1A	W0035	065	24		27-51-11	ALL
	10	1A	W0035	109	22		31-31-26	ALL
	12	1A	W0035	108	22		31-31-26	ALL
	13	1A	W0035	019	20		33-13-13	ALL
	15	1A	W0035	020	20		33-13-13	ALL
	DED		W0035	058Z			27-51-11	ALL
	DED		W0035	059Z			27-51-11	ALL
	DED		W0035	060Z			27-51-11	ALL
	DED		W0035	061Z			27-51-11	ALL
	DED		W0035	063Z			27-51-11	ALL
S00602		P003-01/ /		SW-LE SLAT ARM,ALT				ALL
	1	1A	W0035	084	22		27-81-11	ALL
	2	1A	W0035	082	20		27-81-11	ALL
	3	1A	W0035	079	20		27-81-11	ALL
	5	1A	W0035	089	20		27-81-21	ALL
	6	1A	W0035	087	20		27-81-21	ALL
	7	1A	W0035	090	20		27-81-21	ALL
	8	1A	W0035	086	20		27-81-21	ALL
	9	1A	W0035	085	20		27-81-21	ALL
	11	1A	W0035	080	20		27-81-11	ALL
	12	1A	W0035	081	20		27-81-11	ALL
	13	1A	W0035	022	20		33-13-13	ALL
	15	1A	W0035	023	20		33-13-13	ALL
	DED		W0035	079Z			27-81-11	ALL
	DED		W0035	080Z			27-81-11	ALL
	DED		W0035	081Z			27-81-11	ALL
	DED		W0035	082Z			27-81-11	ALL
	DED		W0035	084Z			27-81-11	ALL
	DED		W0035	085Z			27-81-21	ALL
	DED		W0035	086Z			27-81-21	ALL
	DED		W0035	087Z			27-81-21	ALL
	DED		W0035	089Z			27-81-21	ALL
	DED		W0035	090Z			27-81-21	ALL

HOOKUP LIST

D280T132

91-21-51

Section S00600

Page 1

Mar 07/2008



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
S00603		P003-01/ /		SW-LIGHT GPWS FLAP OVRD				ALL
	7	1A	W0035	110	22		31-31-26	ALL
	8	1A	W0035	005	24		34-46-12	ALL
	9	1A	W0035	006	20		34-46-12	ALL
	13	1A	W0035	026	20		33-13-13	ALL
	15	1A	W0035	027	20		33-13-13	ALL
S00604		P003-01/ /		SW-GND PROX/CONFIG GEAR OVRD				ALL
	2	1A	W0035	001	24		31-51-31	ALL
	3	1A	W0035	002	20		31-51-31	ALL
	8	1A	W0035	003	24		34-46-12	ALL
	9	1A	W0035	004	20		34-46-12	ALL
	13	1A	W0035	028	20		33-13-13	ALL
	15	1A	W0035	029	20		33-13-13	ALL
S00605		P003-01/ /		SW-LDG GR ALTN EXTENSION SELECT				ALL
	1	C	W0035	097	18		32-35-11	ALL
	2	C	W0035	071	18		32-35-11	ALL
	3	C	W0035	070	18		32-35-11	ALL
	4	C	W0035	068	18		32-35-11	ALL
	5	C	W0035	067	18		32-35-11	ALL
	DED		W0035	070Z			32-35-11	ALL
	DED		W0035	071Z			32-35-11	ALL
	DED		W0035	097Z			32-35-11	ALL
S00606		0240/200/L040		SW-LDG GR ALTN RETR LIMIT				ALL
	NC	C	W1306	008	16		32-35-11	ALL
	COM	C	W1306	001	18		32-35-11	ALL
S00607		0240/200/L040		SW-LDG GR ALTN EXT LIMIT				ALL
	NC	C	W1306	011	16		32-35-11	ALL
	COM	C	W1306	003	12		32-35-11	ALL
S00612		0267/158/L060		SW-EICAS MAINT ENABLE BYPASS				ALL
	1	C	W2006	008	24		31-41-13	ALL
	2	C	W2006	009	24		31-41-13	ALL
	3	C	W2006	020	20		31-41-13	ALL
S00616		P003-01/ /		SW-HDG REF				ALL
	1C	Z2	W0035	102	20		34-22-36	ALL

HOOKUP LIST

D280T132

91-21-51

Section S00600

Page 2

Mar 07/2008



767-200/300 WIRING DIAGRAM MANUAL

Equip	Station / WL / BL		Description		GA	CO	Diagram	Effectivity
	Term	Type	Bundle	Wire No.				
S00616		P003-01/ /		SW-HDG REF (continued)				ALL
	3C	Z2	W0035	106	20		34-22-36	ALL
	4C	Z2	W0035	104	20		34-22-36	ALL
	1NC	Z2	W0035	101	22		34-22-36	ALL
	3NO	Z2	W0035	105	22		34-22-36	ALL
	4NO	Z2	W0035	103	22		34-22-36	ALL
	DED		W0035	103Z			34-22-36	ALL
	DED		W0035	104Z			34-22-36	ALL
	DED		W0035	105Z			34-22-36	ALL
	DED		W0035	106Z			34-22-36	ALL
S00617		0913/262/R088		SW-OFF-WING ESCAPE SYS DISABLE,R AFT				150-199, 275-299
	1	C	W0078	004	18		25-65-12	150-199, 275-299
	2	C	W0078	014	18		25-65-12	150-199, 275-299
	4	C	W0078	007	18		25-65-12	150-199, 275-299
	5	C	W0078	016	18		25-65-12	150-199, 275-299
S00618		0913/262/L088		SW-OFF-WING ESCAPE SYS DISABLE,L AFT				150-199, 275-299
	1	C	W0074	004	18		25-65-11	150-199, 275-299
	2	C	W0074	014	18		25-65-11	150-199, 275-299
	4	C	W0074	007	18		25-65-11	150-199, 275-299
	5	C	W0074	016	18		25-65-11	150-199, 275-299
S00619		0868/262/R088		SW-OFF-WING ESCAPE SYS DISABLE,R FWD				150-199, 275-299
	1	C	W0076	004	18		25-65-12	150-199, 275-299
	2	C	W0076	01B	20		25-65-12	150-199, 275-299
	4	C	W0076	007	18		25-65-12	150-199, 275-299
	5	C	W0076	003	20		25-65-12	150-199, 275-299
S00620		0868/262/L088		SW-OFF-WING ESCAPE SYS DISABLE,L FWD				150-199, 275-299
	1	C	W0072	004	18		25-65-11	150-199, 275-299
	2	C	W0072	01B	20		25-65-11	150-199, 275-299
	4	C	W0072	007	18		25-65-11	150-199, 275-299
	5	C	W0072	003	20		25-65-11	150-199, 275-299
S00621		0913/258/R089		SW-OFF-WING ESCAPE SYS AUTO ARM,R AFT				150-199, 275-299
	1	C	W0078	002	22		25-65-12	150-199, 275-299
	2	C	W0078	010	18		25-65-12	150-199, 275-299
	2	C	W0078	01A	22		25-65-12	150-199, 275-299
	3	C	W0078	01D	20		25-65-12	150-199, 275-299
	4	C	W0078	012	22		25-65-12	150-199, 275-299

HOOKUP LIST

D280T132

91-21-51

Section S00600

Page 3

Mar 07/2008

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
S00621		0913/258/R089		SW-OFF-WING ESCAPE SYS AUTO ARM,R AFT (continued)				150-199, 275-299
	5	C	W0078	001	22		25-65-12	150-199, 275-299
	5	C	W0078	009	20		25-65-12	150-199, 275-299
	6	C	W0078	01A	22		25-65-12	150-199, 275-299
S00622		0913/258/L089		SW-OFF-WING ESCAPE SYS AUTO ARM,L AFT				150-199, 275-299
	1	C	W0074	002	22		25-65-11	150-199, 275-299
	2	C	W0074	010	18		25-65-11	150-199, 275-299
	2	C	W0074	01A	22		25-65-11	150-199, 275-299
	3	C	W0074	01D	20		25-65-11	150-199, 275-299
	4	C	W0074	012	22		25-65-11	150-199, 275-299
	5	C	W0074	001	22		25-65-11	150-199, 275-299
	5	C	W0074	009	20		25-65-11	150-199, 275-299
	6	C	W0074	01A	22		25-65-11	150-199, 275-299
S00623		0869/258/R089		SW-OFF-WING ESCAPE SYS AUTO ARM,R FWD				150-199, 275-299
	1	C	W0076	002	22		25-65-12	150-199, 275-299
	2	C	W0076	01A	20		25-65-12	150-199, 275-299
	2	C	W0076	01B	20		25-65-12	150-199, 275-299
	3	C	W0076	01D	20		25-65-12	150-199, 275-299
	5	C	W0076	001	22		25-65-12	150-199, 275-299
	6	C	W0076	010	18		25-65-12	150-199, 275-299
	6	C	W0076	01A	20		25-65-12	150-199, 275-299
S00624		0869/258/L089		SW-OFF-WING ESCAPE SYS AUTO ARM,L FWD				150-199, 275-299
	1	C	W0072	002	22		25-65-11	150-199, 275-299
	2	C	W0072	01A	20		25-65-11	150-199, 275-299
	2	C	W0072	01B	20		25-65-11	150-199, 275-299
	3	C	W0072	01D	20		25-65-11	150-199, 275-299
	5	C	W0072	001	22		25-65-11	150-199, 275-299
	6	C	W0072	010	18		25-65-11	150-199, 275-299
	6	C	W0072	01A	20		25-65-11	150-199, 275-299
S00625		0912/258/R089		SW-OFF-WING ESCAPE SYS AUTO FIRE,R AFT				150-199, 275-299
	2	C	W0078	006	20		25-65-12	150-199, 275-299
	2	C	W0078	024	18		25-65-12	150-199, 275-299
	3	C	W0078	01C	20		25-65-12	150-199, 275-299
	3	C	W0078	01D	20		25-65-12	150-199, 275-299
	4	C	W0078	005	22		25-65-12	150-199, 275-299
	5	C	W0078	008	20		25-65-12	150-199, 275-299
	5	C	W0078	020	18		25-65-12	150-199, 275-299

HOOKUP LIST

D280T132

91-21-51

Section S00600

Page 4

Mar 07/2008



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
S00625		0912/258/R089		SW-OFF-WING ESCAPE SYS AUTO FIRE,R AFT (continued)				150-199, 275-299
	6	C	W0078	01C	20		25-65-12	150-199, 275-299
S00626		0912/258/L089		SW-OFF-WING ESCAPE SYS AUTO FIRE,L AFT				150-199, 275-299
	2	C	W0074	006	20		25-65-11	150-199, 275-299
	2	C	W0074	024	18		25-65-11	150-199, 275-299
	3	C	W0074	01C	20		25-65-11	150-199, 275-299
	3	C	W0074	01D	20		25-65-11	150-199, 275-299
	4	C	W0074	005	22		25-65-11	150-199, 275-299
	5	C	W0074	008	20		25-65-11	150-199, 275-299
	5	C	W0074	020	18		25-65-11	150-199, 275-299
	6	C	W0074	01C	20		25-65-11	150-199, 275-299
S00627		0868/258/R089		SW-OFF-WING ESCAPE SYS AUTO FIRE,R FWD				150-199, 275-299
	1	C	W0076	005	22		25-65-12	150-199, 275-299
	2	C	W0076	006	20		25-65-12	150-199, 275-299
	3	C	W0076	01C	20		25-65-12	150-199, 275-299
	3	C	W0076	01D	20		25-65-12	150-199, 275-299
	5	C	W0076	008	20		25-65-12	150-199, 275-299
	6	C	W0076	01C	20		25-65-12	150-199, 275-299
S00628		0869/258/L089		SW-OFF-WING ESCAPE SYS AUTO FIRE,L FWD				150-199, 275-299
	1	C	W0072	005	22		25-65-11	150-199, 275-299
	2	C	W0072	006	20		25-65-11	150-199, 275-299
	3	C	W0072	01C	20		25-65-11	150-199, 275-299
	3	C	W0072	01D	20		25-65-11	150-199, 275-299
	5	C	W0072	008	20		25-65-11	150-199, 275-299
	6	C	W0072	01C	20		25-65-11	150-199, 275-299
S00629		0879/258/R090		SW-OFF-WING ESCAPE SYS BACKUP ARM,R FWD				150-199, 275-299
	1	C	W0786	165	22		25-65-12	150-199, 275-299
	2	C	W0786	150	20		25-65-12	150-199, 275-299
	2	C	W0786	154	20		25-65-12	150-199, 275-299
	3	C	W0786	158	20		25-65-12	150-199, 275-299
	5	C	W0786	156	22		25-65-12	150-199, 275-299
	5	C	W0786	157	20		25-65-12	150-199, 275-299
	6	C	W0786	097	18		25-65-12	150-199, 275-299
	6	C	W0786	154	20		25-65-12	150-199, 275-299
S00630		0879/258/L090		SW-OFF-WING ESCAPE SYS BACKUP ARM,L FWD				150-199, 275-299
	1	C	W0786	138	22		25-65-11	150-199, 275-299

HOOKUP LIST

D280T132

91-21-51

Section S00600

Page 5

Mar 07/2008



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
S00630		0879/258/L090		SW-OFF-WING ESCAPE SYS BACKUP ARM,L FWD (continued)				150-199, 275-299
	2	C	W0786	131	20		25-65-11	150-199, 275-299
	2	C	W0786	132	20		25-65-11	150-199, 275-299
	3	C	W0786	139	20		25-65-11	150-199, 275-299
	5	C	W0786	135	22		25-65-11	150-199, 275-299
	5	C	W0786	137	20		25-65-11	150-199, 275-299
	6	C	W0786	111	18		25-65-11	150-199, 275-299
	6	C	W0786	132	20		25-65-11	150-199, 275-299
S00631		0879/258/R089		SW-OFF-WING ESCAPE SYS BACKUP FIRE,R FWD				150-199, 275-299
	1	C	W0786	167	22		25-65-12	150-199, 275-299
	2	C	W0786	158	20		25-65-12	150-199, 275-299
	2	C	W0786	170	20		25-65-12	150-199, 275-299
	3	C	W0786	159	20		25-65-12	150-199, 275-299
	3	C	W0786	161	18		25-65-12	150-199, 275-299
	4	C	W0786	168	22		25-65-12	150-199, 275-299
	5	C	W0786	170	20		25-65-12	150-199, 275-299
	6	C	W0786	160	20		25-65-12	150-199, 275-299
	6	C	W0786	162	18		25-65-12	150-199, 275-299
S00632		0879/258/L089		SW-OFF-WING ESCAPE SYS BACKUP FIRE,L FWD				150-199, 275-299
	1	C	W0786	147	22		25-65-11	150-199, 275-299
	2	C	W0786	139	20		25-65-11	150-199, 275-299
	2	C	W0786	141	20		25-65-11	150-199, 275-299
	3	C	W0786	142	20		25-65-11	150-199, 275-299
	3	C	W0786	144	18		25-65-11	150-199, 275-299
	4	C	W0786	148	22		25-65-11	150-199, 275-299
	5	C	W0786	141	20		25-65-11	150-199, 275-299
	6	C	W0786	143	20		25-65-11	150-199, 275-299
	6	C	W0786	146	18		25-65-11	150-199, 275-299
S00644		0654+90/252/R053		SW-LIGHT,CLOSET				162-199
	=1	C	W1284	001	22		33-22-21	162-199
	=2	C	W1284	002	22		33-22-21	162-199
S00646		0265/258/L014		SWITCH-CLOSET LIGHT				150-154
S00646		0251/263/L009		SWITCH-CLOSET LIGHT				155-157
S00646		0366/257/L050		SWITCH-CLOSET LIGHT				275-278
	=1	C	W1154	011	22		33-22-21	150-157, 275-299
	=2	C	W1154	012	22		33-22-21	150-157, 275-299

HOOKUP LIST

D280T132



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
S00668		0140/179/L025		SW-BRAKE PEDAL POSITION,L				ALL
	ANO	\$	W0606	A-C			31-31-22	050-099
	NC	\$	W0606	A-B			31-31-22	150-199, 275-299
	NO	\$	W0606	A-C			31-31-22	150-199, 275-299
	ANC	\$	W0606	A-B			31-31-22	050-099
	COM	\$	W0606	A-A			31-31-22	150-199, 275-299
	ACOM	\$	W0606	A-A			31-31-22	050-099
S00669		0140/179/R025		SW-BRAKE PEDAL POSITION,R				ALL
	NC	\$	W0606	A-F			31-31-22	150-199, 275-299
	NO	\$	W0606	A-E			31-31-22	150-199, 275-299
	ANC	\$	W0606	A-F			31-31-22	050-099
	ANO	\$	W0606	A-E			31-31-22	050-099
	COM	\$	W0606	A-D			31-31-22	150-199, 275-299
	ACOM	\$	W0606	A-D			31-31-22	050-099
S00674		1510/170/L062		SWITCH-FLAPPER VALVE RESET				275-276
	2	C	W0578	089	24		21-44-21	275-276
	CAP	Y	W0578	092	24		SPARE	051-099, 150-154
	CAP	Y	W0578	093	24		SPARE	051-099, 150-154
	CAP	Y	W0578	092	24		21-44-21	275-276
	CAP	Y	W0578	093	24		21-44-21	275-276
S00675		P035-00/ /		SW-BAY A OFF				150-199, 275-299
	1	B	W1066	32E	22		25-53-13	150-199, 275-299
	2	B	W1066	544	22		25-53-13	150-199, 275-299
	4	B	W1066	547	22		25-53-13	150-199, 275-299
	5	B	W1066	32C	22		25-53-13	150-199, 275-299
	5	B	W1066	546	22		25-53-13	150-199, 275-299
S00677		P035-00/ /		SW-BAY F OFF				150-199, 275-299
	1	B	W1066	32H	22		25-53-13	150-199, 275-299
	1	B	W1066	565	22		25-53-13	150-199, 275-299
	2	B	W1066	32M	22		25-53-13	150-199, 275-299
	2	B	W1066	32N	22		25-53-13	150-199, 275-299
	2	B	W1066	33C	22		25-53-13	150-199, 275-299
	4	B	W1066	04S	22		25-53-13	150-199, 275-299
	4	B	W1066	32J	22		25-53-13	150-199, 275-299
	4	B	W1066	32L	22		25-53-13	150-199, 275-299
	5	B	W1066	32K	22		25-53-13	150-199, 275-299

HOOKUP LIST

D280T132

91-21-51

Section S00600

Page 7

Mar 07/2008



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
S00678		P035-00/ /		SW-BAY G OFF				150-199, 275-299
	1	B	W1066	33C	22		25-53-13	150-199, 275-299
	2	B	W1066	32W	22		25-53-13	150-199, 275-299
	2	B	W1066	33B	22		25-53-13	150-199, 275-299
	2	B	W1066	33E	22		25-53-13	150-199, 275-299
	4	B	W1066	32L	22		25-53-13	150-199, 275-299
	4	B	W1066	32T	22		25-53-13	150-199, 275-299
	5	B	W1066	177	22		25-53-13	150-199, 275-299
	5	B	W1066	32K	22		25-53-13	150-199, 275-299
	5	B	W1066	32X	22		25-53-13	150-199, 275-299
S00679		P035-00/ /		SW-BAY H OFF				150-199, 275-299
	1	B	W1066	33B	22		25-53-13	150-199, 275-299
	2	B	W1066	32R	22		25-53-13	150-199, 275-299
	2	B	W1066	35W	22		25-53-13	150-199, 275-299
	4	B	W1066	32T	22		25-53-13	150-199, 275-299
	5	B	W1066	32X	22		25-53-13	150-199, 275-299
S00680		P039-00/ /		SW-BAY A OFF				150-199, 275-299
	1	B	W1068	32J	22		25-53-23	150-199, 275-299
	2	B	W1068	32D	22		25-53-23	150-199, 275-299
	2	B	W1068	33E	22		25-53-23	150-199, 275-299
	4	B	W1068	32C	22		25-53-23	150-199, 275-299
	4	B	W1068	32G	22		25-53-23	150-199, 275-299
	5	B	W1068	32H	22		25-53-23	150-199, 275-299
	5	B	W1068	33C	22		25-53-23	150-199, 275-299
S00681		P039-00/ /		SW-BAY B OFF				150-199, 275-299
	1	B	W1068	32P	22		25-53-23	150-199, 275-299
	2	B	W1068	32J	22		25-53-23	150-199, 275-299
	2	B	W1068	32K	22		25-53-23	150-199, 275-299
	2	B	W1068	33G	22		25-53-23	150-199, 275-299
	4	B	W1068	32G	22		25-53-23	150-199, 275-299
	5	B	W1068	32H	22		25-53-23	150-199, 275-299
	5	B	W1068	32L	22		25-53-23	150-199, 275-299
S00682		P039-00/ /		SW-BAY C OFF				150-199, 275-299
	1	B	W1068	32Y	22		25-53-23	150-199, 275-299
	2	B	W1068	32P	22		25-53-23	150-199, 275-299
	2	B	W1068	32R	22		25-53-23	150-199, 275-299
	2	B	W1068	33J	22		25-53-23	150-199, 275-299

HOOKUP LIST

D280T132

91-21-51

Section S00600

Page 8

Mar 07/2008



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
S00682		P039-00/ /		SW-BAY C OFF (continued)				150-199, 275-299
	4	B	W1068	32X	22		25-53-23	150-199, 275-299
	4	B	W1068	33W	22		25-53-23	150-199, 275-299
	5	B	W1068	32L	22		25-53-23	150-199, 275-299
	5	B	W1068	32T	22		25-53-23	150-199, 275-299
S00683		P039-00/ /		SW-BAY D OFF				150-199, 275-299
	1	B	W1068	32E	22		25-53-23	150-199, 275-299
	2	B	W1068	32Y	22		25-53-23	150-199, 275-299
	2	B	W1068	33A	22		25-53-23	150-199, 275-299
	2	B	W1068	40A	22		25-53-23	150-199, 275-299
	4	B	W1068	32X	22		25-53-23	150-199, 275-299
	5	B	W1068	32T	22		25-53-23	150-199, 275-299
S00698		P035-00/ /		SW-BAY E OFF				150-199, 275-299
	1	B	W1066	04R	22		25-53-13	150-199, 275-299
	2	B	W1066	01P	22		25-53-13	150-199, 275-299
	2	B	W1066	565	22		25-53-13	150-199, 275-299
	4	B	W1066	04S	22		25-53-13	150-199, 275-299
	5	B	W1066	01N	22		25-53-13	150-199, 275-299

HOOKUP LIST

D280T132

91-21-51

Section S00600

Page 9 End

Mar 07/2008



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
S00789		0437/275/R055		SW-SIDEWALL WASHLIGHT				151-152, 157
	=G	C	W1224	174	20		33-21-31	151-152
	=P	C	W1224	104	20		33-21-31	151-152

HOOKUP LIST
D280T132

91-21-51
Section S00700
Page 1 End
Mar 07/2008



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
S00800		P019-00/ /		SW-NIGHT LTS FLEX STA 807				275-299
	1	C	W1060	780	22		33-21-21	275-299
	2	C	W1060	014	22		33-21-21	275-299
	2	C	W1060	199	22		33-21-21	275-299
	3	C	W1060	779	22		33-21-21	275-299
S00809		0258/262/L012		SW-GENERAL ILLUM LT, FLT DK CREW REST				050-099, 162-199
	C	Z1	W3006	008	22		33-22-33	050-099, 162-199
	NO	Z1	W3006	009	22		33-22-33	050-099, 162-199
S00818		MULTI/270/0055		SW-SIDEWALL WASHLIGHT, CCRA				050-099, 162-199
	=1	C	W2008	001	24		33-21-31	050-099, 162-199
	=2	C	W2008	002	24		33-21-31	050-099, 162-199
S00828		1440/270/L&R		SW-SIDEWALL WASHLIGHT, CCRA				050-099, 150, 152-199
	=1	C	W2040	001	24		33-21-31	050-099, 150, 152-199
	=2	C	W2040	002	24		33-21-31	050-099, 150, 152-199
S00836		0173/195/R037		SW-COLUMN FWD,RIGHT (SB 27-0102)				050-099, 150-166
S00836		0173/195/R037		SW-COLUMN FWD,RIGHT				167-199, 278-299
	NO	E	W0469	D-C			27-41-11	050-099, 150-166
	NO		W0469	D-C			27-41-11	167-199, 278-299
	COM	E	W0469	D-A			27-41-11	050-099, 150-166
	COM		W0469	D-A			27-41-11	167-199, 278-299
S00837		0173/195/R037		SW-COLUMN AFT(ELEV TE UP),R (SB 27-0102)				050-099, 150-166
S00837		0173/195/R037		SW-COLUMN AFT(ELEV TE UP),RIGHT				167-199, 278-299
	NO	E	W0469	E-C			27-41-11	050-099, 150-166
	NO		W0469	E-C			27-41-11	167-199, 278-299
	COM	E	W0469	E-A			27-41-11	050-099, 150-166
	COM		W0469	E-A			27-41-11	167-199, 278-299
S00838		0173/195/L034		SW-COLUMN FWD,LEFT (SB 27-0102)				050-099, 150-166
S00838		0173/195/L034		SW-COLUMN FWD,LEFT				167-199, 278-299
	NO	E	W1281	D-C			27-41-21	050-099
	NO	E	W0465	D-C			27-41-21	150-166
	NO		W0465	D-C			27-41-21	167-199
	NO		W1281	D-C			27-41-21	278-299
	COM	E	W1281	D-A			27-41-21	050-099
	COM	E	W0465	D-A			27-41-21	150-166

HOOKUP LIST

D280T132

91-21-51

Section S00800

Page 1

Mar 07/2008



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
S00838		0173/195/L034		SW-COLUMN FWD,LEFT (SB 27-0102) (continued)				050-099, 150-166
S00838		0173/195/L034		SW-COLUMN FWD,LEFT (continued)				167-199, 278-299
	COM		W0465	D-A			27-41-21	167-199
	COM		W1281	D-A			27-41-21	278-299
S00839		0173/195/L034		SW-COLUMN AFT(ELEV TE UP),L (SB 27-0102)				050-099, 150-166
S00839		0173/195/L034		SW-COLUMN AFT(ELEV TE UP),LEFT				167-199, 278-299
	NO	E	W1281	E-C			27-41-21	050-099
	NO	E	W0465	E-C			27-41-21	150-166
	NO		W0465	E-C			27-41-21	167-199
	NO		W1281	E-C			27-41-21	278-299
	COM	E	W1281	E-A			27-41-21	050-099
	COM	E	W0465	E-A			27-41-21	150-166
	COM		W0465	E-A			27-41-21	167-199
	COM		W1281	E-A			27-41-21	278-299
S00845		P019-00/ /		SW-NIGHT LTS FLEX				280-299
	1	C	W1060	679	22		33-21-21	280-299
	1	C	W1060	708	22		33-21-21	280-299
	2	C	W1060	01T	22		33-21-21	280-299
	3	C	W1060	018	22		33-21-21	280-299

HOOKUP LIST

D280T132

91-21-51

Section S00800

Page 2 End

Mar 07/2008



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
S00940		0350/225/R095		SW-R.FWD DR HEAT SELECTOR (SB 21-0139)				275-299
	= GND	D	W1228	194	18		21-45-21	275-299

HOOKUP LIST

D280T132

91-21-51

Section S00900
Page 1 End
Mar 07/2008



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
S01604		NL132/087/		SW-THRUST REV,LH AUTO. RESTOW				ALL
	BLU		W3528	A-A			78-34-11	ALL
	RED		W3528	A-B			78-34-11	ALL
S01605		NR132/087/		SW-THRUST REV,LH AUTO. RESTOW				ALL
	BLU		W3526	A-A			78-34-11	ALL
	RED		W3526	A-B			78-34-11	ALL
S01631		P019-00/ /		SW-INDIRECT CEIL LTS FLEX STA 587				275-299
	1	C	W1104	015	20		33-21-11	275-299
	1	C	W1104	021	20		33-21-11	275-299
	2	C	W1104	616	20		33-21-11	275-299
	3	C	W1104	006	20		33-21-11	275-299
	3	C	W1104	022	20		33-21-11	275-299
	4	C	W1104	036	20		33-21-11	275-299
	4	C	W1104	041	20		33-21-11	275-299
	5	C	W1104	614	20		33-21-11	275-299
	6	C	W1104	007	20		33-21-11	275-299
	6	C	W1104	043	20		33-21-11	275-299
S01632		P019-00/ /		SW-INDIRECT CEIL LTS FLEX STA 654+21				275-299
	1	C	W1104	021	20		33-21-11	275-299
	1	C	W1104	621	20		33-21-11	275-299
	2	C	W1104	155	20		33-21-11	275-299
	3	C	W1104	01H	20		33-21-11	275-299
	3	C	W1104	022	20		33-21-11	275-299
	3	C	W1104	025	20		33-21-11	275-299
	4	C	W1104	041	20		33-21-11	275-299
	5	C	W1104	152	20		33-21-11	275-299
	6	C	W1104	042	20		33-21-11	275-299
	6	C	W1104	043	20		33-21-11	275-299
S01633		P019-00/ /		SW-INDIRECT CEIL LTS FLEX STA 654+109				275-299
	1	C	W1104	621	20		33-21-11	275-299
	2	C	W1104	628	20		33-21-11	275-299
	3	C	W1104	01H	20		33-21-11	275-299
	4	C	W1104	128	20		33-21-11	275-299
	5	C	W1104	567	20		33-21-11	275-299
	6	C	W1104	045	20		33-21-11	275-299
	6	C	W1104	122	20		33-21-11	275-299

HOOKUP LIST

D280T132

91-21-51

Section S01600

Page 1

Mar 07/2008



767-200/300 WIRING DIAGRAM MANUAL

Equip	Station / WL / BL		Description		GA	CO	Diagram	Effectivity
	Term	Type	Bundle	Wire No.				
S01634	P019-00/ /		SW-INDIRECT CEIL LTS FLEX STA 719					275-299
	1	C	W1104	016	24		33-21-11	275-299
	1	C	W1104	030	24		33-21-11	275-299
	1	C	W1060	535	24		33-21-11	280-299
	2	C	W1104	164	24		33-21-11	275-299
	3	C	W1060	002	24		33-21-11	275-299
	3	C	W1104	004	24		33-21-11	275-299
	4	C	W1104	035	24		33-21-11	275-299
	4	C	W1104	050	24		33-21-11	275-299
	4	C	W1060	669	24		33-21-11	280-299
	5	C	W1104	635	24		33-21-11	275-299
	6	C	W1060	522	24		33-21-11	275-299
	6	C	W1104	010	24		33-21-11	275-299
S01635	P019-00/ /		SW-SIDEWALL LTS FLEX STA 587					275-299
	1	C	W1104	074	20		33-21-31	275-299
	1	C	W1104	092	20		33-21-31	275-299
	2	C	W1104	073	20		33-21-31	275-299
	3	C	W1104	065	20		33-21-31	275-299
	3	C	W1104	069	20		33-21-31	275-299
	4	C	W1104	091	20		33-21-31	275-299
	4	C	W1104	103	20		33-21-31	275-299
	5	C	W1104	085	20		33-21-31	275-299
	6	C	W1104	066	20		33-21-31	275-299
	6	C	W1104	084	20		33-21-31	275-299
	6	C	W1104	087	20		33-21-31	275-299
	6	C	W1104	158	20		33-21-31	275-299
S01636	P019-00/ /		SW-SIDEWALL LTS FLEX STA 654+21					275-299
	1	C	W1104	080	20		33-21-31	275-299
	1	C	W1104	093	20		33-21-31	275-299
	2	C	W1104	162	20		33-21-31	275-299
	3	C	W1104	068	20		33-21-31	275-299
	3	C	W1104	076	20		33-21-31	275-299
	4	C	W1104	103	20		33-21-31	275-299
	5	C	W1104	086	20		33-21-31	275-299
	6	C	W1104	069	20		33-21-31	275-299
S01637	P019-00/ /		SW-SIDEWALL LTS FLEX STA 654+109					275-299
	1	C	W1104	575	16		33-21-31	275-278

HOOKUP LIST

D280T132

91-21-51

Section S01600

Page 2

Mar 07/2008



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
S01637		P019-00/ /		SW-SIDEWALL LTS FLEX STA 654+109 (continued)				275-299
	1	C	W1104	090	16		33-21-31	280-299
	2	C	W1104	089	16		33-21-31	275-299
	2	C	W1104	705	16		33-21-31	280-299
	3	C	W1104	067	16		33-21-31	275-299
	3	C	W1104	071	16		33-21-31	275-299
	4	C	W1104	077	20		33-21-31	275-299
	4	C	W1104	080	20		33-21-31	275-299
	5	C	W1104	072	20		33-21-31	275-299
	6	C	W1104	076	20		33-21-31	275-299
	6	C	W1104	642	20		33-21-31	275-299
S01638		P019-00/ /		SW-SIDEWALL LTS FLEX STA 719				275-299
	1	C	W1104	077	20		33-21-31	275-299
	2	C	W1104	157	20		33-21-31	275-299
	2	C	W1104	160	20		33-21-31	275-299
	3	C	W1104	644	20		33-21-31	275-299
	4	C	W1104	074	20		33-21-31	275-299
	5	C	W1104	079	20		33-21-31	275-299
	6	C	W1104	642	20		33-21-31	275-299
	6	C	W1104	644	20		33-21-31	275-299
S01639		P019-00/ /		SW-NIGHT LTS FLEX STA 675				275-299
	1	C	W1060	026	22		33-21-21	275-299
	1	C	W1060	780	22		33-21-21	275-299
	2	C	W1060	017	22		33-21-21	275-299
	2	C	W1060	701	22		33-21-21	275-299
	3	C	W1060	008	22		33-21-21	275-299
	3	C	W1060	019	22		33-21-21	275-299
	3	C	W1060	020	22		33-21-21	275-299
	3	C	W1060	779	22		33-21-21	275-299
S01640		P019-00/ /		SW-DIR CEIL LTS FLEX				275-299
	1	C	W1060	01B	20		33-22-42	275-299
	2	C	W1060	01A	20		33-22-42	275-299
	2	C	W1060	503	20		33-22-42	275-299
	3	C	W1060	01C	20		33-22-42	275-299

HOOKUP LIST

D280T132

91-21-51

Section S01600

Page 3 End

Mar 07/2008



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
S09001		TBD/ /		SW-F/A CONTROL PNL C MTO 230540				050-099
S09001		0450/240/L055		SWITCH-CLOSET LIGHT(MTO330342B&MTO33048)				150, 153-199
	1	E	W9006	004	24		23-31-12	050-099
	2	E	W9006	005	24		23-31-12	050-099
	=1	C	W9003	010	22		33-22-21	150, 153-199
	=2	C	W9003	012	22		33-22-21	150, 153-199
	CV		W9006	301R	24		23-31-12	050-099
	CCV		W9006	301B	24		23-31-12	050-099
	CCV		W9006	301Y	24		23-31-12	050-099
S09002		0435/260/R060		SWITCH-COATROOM LIGHT (MTO330342B)				150, 153-157
	=1	C	W9004	012	22		33-22-21	150, 153-157
	=2	C	W9004	014	22		33-22-21	150, 153-157
S09003		0450/260/R060		SWITCH-COATROOM LIGHT (MTO330342B)				150, 153-157
	=1	C	W9004	016	22		33-22-21	150, 153-157
	=2	C	W9004	017	22		33-22-21	150, 153-157
S09004		0654+120/240/R020		SWITCH-COATROOM LIGHT (MTO330348)				162-199
	=1	C	W2010	903	22		33-22-21	162-199
	=2	C	W2010	905	22		33-22-21	162-199
S09005		0654+120/240/L020		SWITCH-COATROOM LIGHT (MTO330348)				162-199
	=1	C	W2010	906	22		33-22-21	162-199
	=1	C	W2010	909	22		33-22-21	162-199
	=2	C	W2010	908	22		33-22-21	162-199
S09006		0654+120/240/L020		SWITCH-COATROOM LIGHT (MTO330348)				162-199
	=1	C	W2010	909	22		33-22-21	162-199
	=2	C	W2010	911	22		33-22-21	162-199
S09011		P61/ /		SW-OFF PASSENGER TELEPHONE (MTO-230695)				150
S09011		P61/ /		SW-OFF PASSENGER TELEPHONE (MTO-230596)				152-199
	2	E	W9069	900	24		23-19-11	150, 152-199
	3	E	W9069	901	24		23-19-11	150, 152-199

HOOKUP LIST

D280T132

91-21-51

Section S09000
Page 1 End
Mar 07/2008



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
S10170		P001-03/ /		SW-EICAS DISPLAY,CANCEL				ALL
	1C	Z2	W0013	050	22		31-41-12	ALL
	1NO	Z2	W0013	052	22		31-41-12	ALL

HOOKUP LIST

D280T132

91-21-51

Section S10100

Page 1 End

Mar 07/2008



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
S10230		P001-03/ /		SW-EICAS DISPLAY,RECALL				ALL
	2C	Z2	W0013	054	22		31-41-12	ALL
	2NO	Z2	W0013	053	22		31-41-12	ALL

HOOKUP LIST

D280T132

91-21-51

Section S10200

Page 1 End

Mar 07/2008



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
SM00001								ALL
	DED		W0033	024Z			33-16-15	ALL
	DED		W0033	026Z			33-16-15	ALL
	DED		W0033	028Z			33-16-15	ALL
	DED		W0033	029Z			33-16-15	ALL
	DED		W0149	005Z			23-31-11	ALL
	DED		W0818	002Z			33-21-35	155-156, 166
	DED		W0818	006Z			33-21-35	155-156, 166
	DED		W0818	007Z			33-21-35	155-156, 166
	DED		W0818	036Z			33-21-35	155-156, 166
	DED		W0818	049Z			33-21-35	155-156, 166
	REF	VH	W0382	208Z			73-21-14	050-099
	REF	VH	W0382	304Z			73-21-14	050-099
	REF		W0047	001Z			23-32-11	050-099, 150-199
	REF		W0047	011Z			23-32-11	050-099, 150-199
	REF		W0047	021Z			23-32-11	050-099, 150-199
	REF		W0047	038Z			23-32-11	050-099, 150-199
	REF		W0047	513Z			23-32-11	050-099, 150-199
	REF		W0047	538Z			23-32-11	050-099, 150-199
	REF		W1220	301Z			25-29-12	ALL
	REF		W1220	302Z			25-29-12	ALL
	REF		W1220	303Z			25-29-12	ALL
	REF	V	W3502	206Z			73-21-11	ALL
	REF	V	W3502	225Z			73-21-11	ALL
	REF	V	W3502	227Z			73-21-11	ALL
	REF	V	W0382	209Z			73-21-14	150-152, 154-199, 275-299
	REF	V	W0382	208Z			73-21-14	150-199, 275-299
SM00002								ALL
	DED		W0018	302Z			24-21-41	ALL
	DED		W0033	023Z			33-16-15	ALL
	DED		W0033	025Z			33-16-15	ALL
	DED		W0033	027Z			33-16-15	ALL
	DED		W0033	030Z			33-16-15	ALL
	DED		W0262	138Z			28-22-21	155, 163-164, 275-299
	DED		W0816	105Z			33-21-34	155-156, 166
	DED		W0816	110Z			33-21-34	155-156, 166
	DED		W0816	139Z			33-21-34	155-156, 166
	DED		W0816	152Z			33-21-34	155-156, 166

HOOKUP LIST

D280T132

91-21-51

Section SM0000

Page 1

Mar 07/2008



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
SM00003								ALL
	DED		W0016	305Z			24-21-21	ALL
	DED		W0624	204Z			30-41-12	ALL
	REF		W0045	201Z			31-51-33	ALL
	REF		W0045	221Z			31-51-33	ALL
	REF		W0045	223Z			34-16-11	ALL
	REF		W0045	230Z			31-51-33	ALL
SM00004								ALL
	DED		W0018	044Z			24-22-41	ALL
SM00005								ALL
	DED		W0624	205Z			30-41-12	ALL
	REF	VH	W0392	242Z			73-21-14	050-099
	REF	VH	W0392	306Z			73-21-14	050-099
	REF		W0645	181Z			23-34-14	050-099, 150-199
	REF		W0645	054Z			23-34-14	ALL
	REF		W0645	063Z			23-34-14	ALL
	REF	V	W0392	243Z			73-21-14	150-152, 154-199, 275-299
	REF	V	W0392	242Z			73-21-14	150-199, 275-299
	REF		W0645	129Z			23-34-14	275-299
SM00006								ALL
	DED		W0018	062Z			24-41-11	ALL
	DED		W1228	098Z			33-27-11	155-156, 166
	DED		W1228	120Z			33-27-11	155-156, 166
	DED		W1228	600Z			33-27-11	155-156, 166
	DED		W1228	601Z			33-27-11	155-156, 166
	REF		W0645	180Z			23-34-14	050-099, 150-199
	REF		W0045	205Z			31-51-21	ALL
	REF		W0045	207Z			31-51-21	ALL
	REF		W0045	209Z			31-51-33	ALL
	REF		W0045	212Z			31-51-42	ALL
	REF		W0645	061Z			23-34-14	ALL
	REF		W0645	064Z			23-34-14	ALL
	REF		W0645	128Z			23-34-14	275-299
SM00007								ALL
	DED		W0035	030Z			33-16-15	ALL
	DED		W0035	031Z			33-16-15	ALL

HOOKUP LIST

D280T132

91-21-51

Section SM0000

Page 2

Mar 07/2008



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
SM00007				(continued)				ALL
	DED		W0035	032Z			33-16-15	ALL
	DED		W0035	126Z			33-16-15	ALL
	DED		W0035	128Z			33-16-15	ALL
	DED		W1228	090Z			33-27-11	155-156, 166
	DED		W1228	119Z			33-27-11	155-156, 166
	DED		W1228	603Z			33-27-11	155-156, 166
	DED		W1228	604Z			33-27-11	155-156, 166
	REF		W0011	205Z			34-22-91	ALL
	REF		W0011	211Z			34-22-81	ALL
	REF		W0011	212Z			34-22-81	ALL
SM00008								ALL
	DED		W0035	033Z			33-16-15	ALL
	DED		W0035	034Z			33-16-15	ALL
	DED		W0035	035Z			33-16-15	ALL
	DED		W0035	093Z			33-16-15	ALL
	DED		W0035	127Z			33-16-15	ALL
	REF	VH	W0396	010Z			73-21-14	050-099
	REF	VH	W0396	230Z			73-21-14	050-099
	REF	VL	W1343	201Z			23-41-11	ALL
	REF	VL	W1343	202Z			23-41-11	ALL
	REF	VL	W1343	204Z			23-41-11	ALL
	REF	VL	W1343	205Z			23-41-11	ALL
SM00009								ALL
	DED		W0622	205Z			30-41-11	ALL
	DED		W0624	206Z			30-41-12	ALL
	REF		W3530	006Z			75-23-11	ALL
	REF		W3530	011Z			75-23-11	ALL
	REF		W3530	017Z			75-23-11	ALL
SM00010								155-156, 166
	DED		W0818	001Z			33-21-35	155-156, 166
	DED		W0818	071Z			33-21-35	155-156, 166
	DED		W0818	072Z			33-21-35	155-156, 166
SM00011								ALL
	DED		W0035	045Z			33-16-15	ALL
	DED		W0035	046Z			33-16-15	ALL
	DED		W0035	047Z			33-16-15	ALL

HOOKUP LIST

D280T132

91-21-51

Section SM0000

Page 3

Mar 07/2008



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
SM00011				(continued)				ALL
	DED		W0035	048Z			33-16-15	ALL
	DED		W0035	049Z			33-16-15	ALL
	DED		W0622	206Z			30-41-11	ALL
	DED		W0624	209Z			30-41-12	ALL
SM00012								ALL
	DED		W0035	037Z			33-16-15	ALL
	DED		W0035	052Z			33-16-15	ALL
	DED		W0035	053Z			33-16-15	ALL
	DED		W0035	054Z			33-16-15	ALL
	DED		W0035	055Z			33-16-15	ALL
	DED		W0035	056Z			33-16-15	ALL
	REF	VH	W0372	022Z			73-21-14	050-099
	REF	VH	W0372	230Z			73-21-14	050-099
	REF		W1417	15Z	20		23-32-31	275-276
	REF		W1417	214Z			23-32-31	275-276
SM00013								ALL
	REF	VL	W1343	207Z			23-41-11	ALL
	REF	VL	W1343	208Z			23-41-11	ALL
	REF	VL	W1343	209Z			23-41-11	ALL
	REF		W1417	154	20		23-32-41	275-276
	REF		W1417	215Z			23-32-41	275-276
SM00014								ALL
	DED		W0013	079Z			33-16-13	ALL
	DED		W0013	080Z			33-16-13	ALL
	DED		W0013	082Z			33-16-13	ALL
	DED		W0013	109Z			33-16-13	ALL
	REF		W1417	156	20		23-32-51	275-276
	REF		W1417	216Z			23-32-51	275-276
SM00015								ALL
	DED		W0035	061Z			27-51-11	ALL
	DED		W0035	062Z			27-51-11	ALL
	DED		W0035	063Z			27-51-11	ALL
	DED		W0622	201Z			30-41-11	ALL
	DED		W0624	202Z			30-41-12	ALL
	REF		W0045	028Z			31-51-11	ALL
	REF		W0045	029Z			31-51-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section SM0000

Page 4

Mar 07/2008



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
SM00015				(continued)				ALL
	REF		W1417	158	20		23-32-61	275-276
	REF		W1417	217Z			23-32-61	275-276
SM00016								ALL
	REF		W0045	096Z			31-51-12	ALL
	REF		W0045	097Z			31-51-12	ALL
SM00017								ALL
	DED		W0035	081Z			27-81-11	ALL
	DED		W0035	082Z			27-81-11	ALL
	DED		W0035	083Z			27-81-11	ALL
	DED		W0622	202Z			30-41-11	ALL
	DED		W0624	203Z			30-41-12	ALL
	REF		W0011	206Z			34-22-91	ALL
	REF		W0011	220Z			34-22-81	ALL
	REF		W0011	221Z			34-22-81	ALL
	REF		W1417	151	20		23-32-31	275-299
	REF		W1417	214Z			23-32-31	275-299
SM00018								ALL
	DED		W0035	086Z			27-81-21	ALL
	DED		W0035	087Z			27-81-21	ALL
	DED		W0035	088Z			27-81-21	ALL
	REF		W0045	012Z			31-51-11	ALL
	REF		W0045	866Z			31-51-11	ALL
	REF		W0045	877Z			31-51-11	ALL
SM00019								ALL
	DED		W0035	129Z			33-16-15	ALL
	DED		W0035	131Z			33-16-15	ALL
	DED		W0035	133Z			33-16-15	ALL
	DED		W0035	135Z			33-16-15	ALL
	REF		W0031	225Z			34-13-21	ALL
	REF		W0031	227Z			34-13-21	ALL
	REF		W0031	228Z			34-13-21	ALL
	REF		W1417	153	20		23-32-41	275-299
	REF		W1417	215Z			23-32-41	275-299
SM00020								ALL
	DED		W0035	130Z			33-16-15	ALL

HOOKUP LIST

D280T132

91-21-51

Section SM0000

Page 5

Mar 07/2008



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
SM00020				(continued)				ALL
	DED		W0035	132Z			33-16-15	ALL
	DED		W0035	134Z			33-16-15	ALL
	DED		W0035	136Z			33-16-15	ALL
SM00021								275-299
	REF		W1417	155	20		23-32-51	275-299
	REF		W1417	216Z			23-32-51	275-299
SM00023								275-299
	REF		W1417	157	20		23-32-61	275-299
	REF		W1417	217Z			23-32-61	275-299
SM00024								ALL
	REF		W0645	133Z			23-34-14	050-099, 150-199
	REF		W0645	182Z			23-34-14	050-099, 150-199
	REF		W0645	188Z			23-34-14	050-099, 150-199
	REF		W0011	232Z			34-13-11	ALL
	REF		W0011	233Z			34-13-11	ALL
	REF		W0011	234Z			34-13-11	ALL
SM00025								050-099, 150-199
	REF		W0645	132Z			23-34-14	050-099, 150-199
	REF		W0645	183Z			23-34-14	050-099, 150-199
	REF		W0645	187Z			23-34-14	050-099, 150-199
SM00027								150-157, 275
	REF		W0768	028Z			73-21-11	150-157
	REF		W0768	235Z			73-21-11	150-157
	REF	V	W0768	028Z			73-21-11	275
	REF	V	W0768	235Z			73-21-11	275
SM00028								ALL
	REF		W0045	225Z			31-51-11	ALL
	REF		W0045	301	20		31-51-11	ALL
	REF		W0045	301Z			31-51-11	ALL
	REF		W0045	302Z			31-51-11	ALL
	REF		W0045	303Z			31-51-11	ALL
	REF		W0045	304Z			31-51-11	ALL

HOOKUP LIST
D280T132

91-21-51
Section SM0000
Page 6
Mar 07/2008



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
SM00030								ALL
	REF		W0045	226Z			31-51-12	ALL
	REF		W0045	305	20		31-51-12	ALL
	REF		W0045	305Z			31-51-12	ALL
	REF		W0045	306Z			31-51-12	ALL
	REF		W0045	307Z			31-51-12	ALL
	REF		W0045	308Z			31-51-12	ALL
SM00031								155-156, 166
	DED		W0816	500Z			33-21-34	155-156, 166
	DED		W0816	584Z			33-21-34	155-156, 166
	DED		W0816	631Z			33-21-34	155-156, 166
SM00032								ALL
	REF		W0011	207Z			34-22-91	ALL
	REF		W0011	217Z			34-22-81	ALL
	REF		W0011	222Z			34-22-81	ALL
SM00035								ALL
	DED		W0045	755Z			31-51-31	ALL
	DED		W0045	764Z			31-51-32	ALL
SM00039								ALL
	REF		W0768	217Z			77-31-11	ALL
	REF		W0768	239Z			77-12-12	ALL
	REF		W0768	243Z			77-12-12	ALL
SM00047								ALL
	REF		W0045	013Z			31-51-11	ALL
	REF		W0045	867Z			31-51-11	ALL
	REF		W0045	878Z			31-51-11	ALL
SM00049								ALL
	REF		W0045	014Z			31-51-11	ALL
	REF		W0045	874Z			31-51-11	ALL
	REF		W0045	879Z			31-51-11	ALL
SM00053								ALL
	DED		W0045	766Z			31-51-32	ALL
	DED		W0045	797Z			31-51-21	ALL

HOOKUP LIST

D280T132

91-21-51

Section SM0000

Page 7

Mar 07/2008



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
SM00053				(continued)				ALL
	DED		W0045	798Z			31-51-21	ALL
	DED		W0812	084Z			33-21-32	166
	DED		W0812	12AZ			33-21-32	166
	DED		W0812	13AZ			33-21-32	166
SM00054								ALL
	REF		W0045	089Z			31-51-12	ALL
	REF		W0045	868Z			31-51-12	ALL
	REF		W0045	880Z			31-51-12	ALL
SM00055								ALL
	REF		W0045	090Z			31-51-12	ALL
	REF		W0045	873Z			31-51-12	ALL
	REF		W0045	881Z			31-51-12	ALL
SM00056								ALL
	REF		W0045	091Z			31-51-12	ALL
	REF		W0045	875Z			31-51-12	ALL
	REF		W0045	882Z			31-51-12	ALL

HOOKUP LIST

D280T132

91-21-51

Section SM0000

Page 8 End

Mar 07/2008



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
SP00001		0220/194/L050		SP- WX SW TO CONT PNL				ALL
	DED	9	W1417	901Z			23-32-21	150, 152-199
SP00002		TBD/ /		SP- (TO-230718)				150, 152-199
		S	W1417	902Z			23-32-21	150, 152-199
		S	W1417	903	20		23-32-21	150, 152-199
SP00004		SHELF/E01/04		SP- (TO-230718)				157
			W0117	907Z			23-32-21	157
			W0117	910Z			23-32-21	157
			W0117	918Z			23-32-21	157
SP00006		SHELF/E01/05		SP- (TO-230718)				157
	DED		W0119	902Z			23-32-21	157
SP00108		L1083/12/LE		SP-				ALL
	DED		W0430	09TI			27-88-12	ALL
SP00112		L1025/12/LE		SP-				ALL
	DED		W0430	10TI			27-88-12	ALL
SP00120		L0479/12/LE		SP-				ALL
	DED		W0430	01TI			27-88-12	ALL
SP00124		L0438/12/FS		SP-				ALL
	DED		W0430	02TI			27-88-12	ALL
SP00132		L0629/12/LE		SP-				ALL
	DED		W0430	03TI			27-88-12	ALL
SP00136		L0581/12/LE		SP-				ALL
	DED		W0430	04TI			27-88-12	ALL
SP00144		L0779/12/LE		SP-				ALL
	DED		W0430	05TI			27-88-12	ALL
SP00148		L0733/12/LE		SP-				ALL
	DED		W0430	06TI			27-88-12	ALL

HOOKUP LIST

D280T132

91-21-51

Section SP0000

Page 1

Mar 07/2008



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
SP00156		L0934/12/LE		SP-				ALL
	DED		W0430	07TI			27-88-12	ALL
SP00160		L0880/12/LE		SP-				ALL
	DED		W0430	08TI			27-88-12	ALL
SP00180		R0478/12/LE		SP-				ALL
	DED		W0480	01TI			27-88-22	ALL
SP00184		R0437/12/LE		SP-				ALL
	DED		W0480	02TI			27-88-22	ALL
SP00192		R0628/12/LE		SP-				ALL
	DED		W0480	03TI			27-88-22	ALL
SP00196		R0580/12/LE		SP-				ALL
	DED		W0480	04TI			27-88-22	ALL
SP00204		R0778/12/LE		SP-				ALL
	DED		W0480	05TI			27-88-22	ALL
SP00208		R0732/12/LE		SP-				ALL
	DED		W0480	06TI			27-88-22	ALL
SP00216		R0933/12/LE		SP-				ALL
	DED		W0480	07TI			27-88-22	ALL
SP00220		R0879/12/LE		SP-				ALL
	DED		W0480	08TI			27-88-22	ALL
SP00228		R1082/12/LE		SP-				ALL
	DED		W0480	09TI			27-88-22	ALL
SP00232		R1024/12/LE		SP-				ALL
	DED		W0480	10TI			27-88-22	ALL
SP00268		1540/190/R030		SP-				ALL
	DED		W0966	058Z			38-32-11	050-099, 155, 162-165
	DED		W0580	059Z			38-32-15	156-157, 166-199, 277-299
	DED		W0966	058Z			38-32-15	156-157, 166-199, 277-299

HOOKUP LIST

D280T132

91-21-51

Section SP0000

Page 2

Mar 07/2008



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
SP00268		1540/190/R030		SP- (continued)				ALL
	DED		W0966	058Z			38-32-14	275-276
SP00271		0238/198/R035		SP- P9 FMC MASTER DIM AND TEST,R				ALL
	DED		W0638	156Z			33-16-12	ALL
SP00337		0230/285/L050		SP- FIRST OBSERVER AUD SEL PNL				ALL
	REF		W0631	015Z			23-51-41	ALL
	REF		W0849	004Z			23-51-41	ALL
SP00371		0220/194/L050		SP-				ALL
	DED		W0617	010Z			34-57-21	ALL
SP00427		0360/195/L020		SP-				050-099, 155-199, 275-299
	DED		W1285	003Z			27-41-31	050-099, 155-199, 275-299
SP00550		1540/190/R030		SP-				ALL
	DED		W0966	057Z			38-32-11	050-099, 155-199, 275-299
	DED		W0580	053Z			38-32-15	156-157, 166-199, 277-299
	DED		W0966	501Z			38-32-14	275-276
SP00742		NL132/087/		SP- LH AUTO RESTOW REV SW				ALL
	DED		W3528	01TI			78-34-11	ALL
SP00746		NL122/092/		SP- RH AUTO RESTOW REV SW				ALL
	DED		W3526	01TI			78-34-11	ALL
SP00752		1562/310/L010		SP- RUDDER TRIM CONT				ALL
	DED		W0500	012Z			27-21-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section SP0000

Page 3 End

Mar 07/2008



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
SP01468		P011-05/ /		SP- P11				ALL
	DED		W0042	051Z			74-31-21	ALL
	DED		W0042	700Z			74-31-21	ALL
	DED		W0044	175Z			74-31-21	ALL
SP01470		P011-05/ /		SP- P11				ALL
	DED		W0040	711Z			74-31-21	ALL
	DED		W0040	712Z			74-31-21	ALL
	DED		W0042	092Z			74-31-21	ALL
SP01472		P011-05/ /		SP- P11				ALL
	DED		W0042	039Z			74-31-11	ALL
SP01748		0250/300/L005		SP-				ALL
	DED		W0606	019Z			28-22-21	050-099, 150-154, 156-162, 165-199
	DED		W1262	001Z			28-22-21	ALL
	DED		W0606	793Z			28-22-21	155, 163-164, 275-299
SP01750		0250/300/L005		SP-				ALL
	DED		W0614	019Z			28-22-21	050-099, 150-154, 156-162, 165-199
	DED		W1264	001Z			28-22-21	ALL
	DED		W0614	691Z			28-22-21	155, 163-164, 275-299

HOOKUP LIST

D280T132

91-21-51

Section SP0100

Page 1 End

Mar 07/2008



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
SP02294		0238/198/R035		SP- APU/CARGO FIRE CONTROL				ALL
	DED		W0606	564Z			28-25-21	ALL
SP02746		1390/120/R020		SP- B241 HTR TAPE				ALL
	CAP	Y	W1366	005	20		30-71-23	050-099, 155-199
	CAP	Y	W1366	005	22		30-71-23	150-154, 275-299

HOOKUP LIST

D280T132

91-21-51

Section SP0200

Page 1 End

Mar 07/2008



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
SP03076		N 145/160/		SP- EEC				ALL
	REF	V	W0372	040Z			73-21-11	ALL
	REF	V	W0372	041Z			73-21-11	ALL
	REF	V	W0396	111Z			73-21-11	ALL
SP03078		N 145/160/		SP-				ALL
	REF	V	W0372	210Z			73-21-14	ALL
	REF	V	W0372	220Z			73-21-14	ALL
	REF	V	W0396	210Z			73-21-14	ALL
SP03080		N 145/160/		SP- EEC				ALL
	REF	V	W0372	006Z			73-21-11	ALL
	REF	V	W0372	014Z			73-21-11	ALL
	REF	V	W0396	014Z			73-21-11	ALL
SP03086		N 145/160/		SP-				ALL
	REF	V	W0372	203Z			73-21-14	ALL
	REF	V	W0396	203Z			73-21-14	ALL
	REF	V	W0396	208Z			73-21-14	ALL
SP03092		N 145/160/		SP- EEC				ALL
	REF	V	W0372	108Z			73-21-19	ALL
	REF	V	W0372	109Z			73-21-19	ALL
	REF	V	W0396	107Z			73-21-19	ALL
SP03096		N 145/160/		SP- EEC				ALL
	REF	V	W0372	003Z			73-21-11	ALL
	REF	V	W0372	010Z			73-21-11	ALL
	REF	V	W0396	003Z			73-21-11	ALL
SP03100		N 145/160/		SP- EEC				ALL
	REF	V	W0382	040Z			73-21-11	ALL
	REF	V	W0382	041Z			73-21-11	ALL
	REF	V	W0392	111Z			73-21-11	ALL
SP03102		N 145/160/		SP-				ALL
	REF	V	W0382	210Z			73-21-14	ALL
	REF	V	W0392	210Z			73-21-14	ALL

HOOKUP LIST

D280T132

91-21-51
Section SP0300
Page 1
Mar 07/2008



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
SP03104		N 145/160/		SP- EEC				ALL
	REF	V	W0382	006Z			73-21-11	ALL
	REF	V	W0382	014Z			73-21-11	ALL
	REF	V	W0392	014Z			73-21-11	ALL
SP03106		N 145/160/		SP-				ALL
	REF	V	W0382	220Z			73-21-14	ALL
SP03110		N 145/160/		SP-				ALL
	REF	V	W0382	203Z			73-21-14	ALL
	REF	V	W0392	203Z			73-21-14	ALL
	REF	V	W0392	208Z			73-21-14	ALL
SP03116		N 145/160/		SP- EEC				ALL
	REF	V	W0382	108Z			73-21-19	ALL
	REF	V	W0382	109Z			73-21-19	ALL
	REF	V	W0392	107Z			73-21-19	ALL
SP03120		N 145/160/		SP- EEC				ALL
	REF	V	W0382	003Z			73-21-11	ALL
	REF	V	W0382	010Z			73-21-11	ALL
	REF	V	W0392	003Z			73-21-11	ALL
SP03124		N 213/163/		SP-				ALL
	REF	V	W0372	107Z			73-21-14	ALL
	REF	V	W0396	103Z			73-21-14	ALL
	REF	V	W0396	109Z			73-21-14	ALL
SP03196		N 145/160/		SP- EEC				ALL
	REF	V	W0372	226Z			73-21-14	ALL
	REF	V	W0396	222Z			73-21-14	ALL
	REF	V	W0396	223Z			73-21-14	ALL
SP03204		N 145/160/		SP- EEC				ALL
	REF	V	W0382	226Z			73-21-14	ALL
	REF	V	W0392	222Z			73-21-14	ALL
	REF	V	W0392	223Z			73-21-14	ALL
SP03258		N 145/160/		SP- EEC				ALL
	REF	V	W0382	107Z			73-21-14	ALL

HOOKUP LIST

D280T132

91-21-51

Section SP0300

Page 2

Mar 07/2008



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
SP03258		N 145/160/		SP- EEC (continued)				ALL
	REF	V	W0382	110Z			SPARE	ALL
	REF	V	W0392	103Z			73-21-14	ALL
	REF	V	W0392	109Z			73-21-14	ALL
SP03260		0270/160/		SP-				050-099, 275-299
	DED		W1078	529Z			26-18-22	050-099, 275-299
SP03340		N145/160/		SP-				ALL
	REF	V	W0356	163Z			78-36-11	ALL
	REF	V	W0372	123Z			78-36-11	ALL
	REF	V	W0396	132Z			78-36-11	ALL
SP03342		N145/160/		SP-				ALL
	REF	V	W0376	168Z			78-36-21	ALL
	REF	V	W0382	123Z			78-36-21	ALL
	REF	V	W0392	132Z			78-36-21	ALL
SP03476		N 145/160/		SP- EEC				ALL
	REF	V	W0382	130Z			73-21-17	ALL
	REF	V	W0382	131Z			73-21-17	ALL
	REF	V	W0392	100Z			73-21-17	ALL
SP03478		N 145/160/		SP- EEC				ALL
	REF	V	W0372	111Z			73-21-17	ALL
	REF	V	W0372	112Z			73-21-17	ALL
	REF	V	W0396	100Z			73-21-17	ALL
SP03490		0800/280/L080		SP-				275-299
	DED		W0216	035Z			33-24-14	277-299
SP03492		0800/280/L080		SP-				275-299
	DED		W0216	036Z			33-24-14	277-299
SP03678		P037-00/ /		SP- TS493				150-199, 275-276
	CAP	Y	W1118	A-A			21-26-31	150-199, 275-276
SP03690								ALL
	REF		W0446	303Z			31-31-25	ALL
	REF		W0446	FRD			31-31-25	ALL

HOOKUP LIST

D280T132

91-21-51

Section SP0300

Page 3

Mar 07/2008



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
SP03986		1540/190/R030		SP- LAV VACUUM WASTE				156-157, 166-199, 275-299
	DED		W0966	082Z			38-32-11	156-157, 166-199, 275-299

HOOKUP LIST
D280T132

91-21-51
Section SP0300
Page 4 End
Mar 07/2008



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
SP04056		0335/192/R055		SP- W0768				ALL
	REF	V	W0764	091Z			73-21-11	ALL
	REF	V	W0768	030Z			73-21-11	050-099, 155-199, 275-299
SP04064		P036-00/ /		SP- TS524				050-099, 162-199
	CAP	Y	W0176	A-S			21-66-11	050-099, 162-199
SP04080		P036-00/ /		SP- TS526				050-099, 150, 152-199
	CAP	Y	W0176	B-M			21-66-31	050-099
	CAP	Y	W0176	B-N			21-66-31	150, 152-199

HOOKUP LIST

D280T132

91-21-51

Section SP0400

Page 1 End

Mar 07/2008



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
SP05398		1450/190/R070		SP- VACUUM WASTE SYSTEM				275-276
	DED		W0966	501Z			38-32-14	275-276
SP05436		1540/190/R030		SP-				150-199, 275-299
	DED		W0580	060Z			38-32-15	156-157, 166-199, 277-299

HOOKUP LIST

D280T132

91-21-51

Section SP0500

Page 1 End

Mar 07/2008



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
SP09571		N 145/160/		SP-				ALL
	REF	V	W0352	101Z			78-36-11	050-099, 150-199, 275-278
	REF	V	W0372	101Z			78-36-11	ALL
SP09573		N 145/160/		SP-				ALL
	REF	V	W0352	103Z			78-36-11	050-099, 150-199, 275-278
	REF	V	W0372	102Z			78-36-11	ALL
SP09575		N 145/160/		SP-				ALL
	REF	V	W0352	215Z			78-36-11	050-099, 150-199, 275-278
	REF	V	W0352	216Z			78-36-11	050-099, 150-199, 275-278
	REF	V	W0372	218Z			78-36-11	ALL
SP09579		N 145/160/		SP-				ALL
	REF	V	W0356	149Z			78-36-11	ALL
	REF	V	W0396	101Z			78-36-11	ALL
SP09581		N 145/160/		SP-				ALL
	REF	V	W0356	151Z			78-36-11	ALL
	REF	V	W0396	102Z			78-36-11	ALL
SP09583		N145/160/		SP-				ALL
	REF	V	W0356	215Z			78-36-11	ALL
	REF	V	W0356	216Z			78-36-11	ALL
	REF	V	W0396	224Z			78-36-11	ALL
SP09587		N 145/160/		SP-				ALL
	REF	V	W0374	101Z			78-36-21	050-099, 150-166, 275-299
	REF	V	W0382	101Z			78-36-21	ALL
SP09589		N 145/160/		SP-				ALL
	REF	V	W0374	103Z			78-36-21	050-099, 150-166, 275-299
	REF	V	W0382	102Z			78-36-21	ALL
SP09591		N 145/160/		SP-				ALL
	REF	V	W0374	215Z			78-36-21	050-099, 150-166, 275-299
	REF	V	W0374	216Z			78-36-21	050-099, 150-166, 275-299
	REF	V	W0382	218Z			78-36-21	ALL

HOOKUP LIST

D280T132

91-21-51

Section SP0900

Page 1

Mar 07/2008



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
SP09595		N 145/160/		SP-				ALL
	REF	V	W0376	149Z			78-36-21	ALL
	REF	V	W0392	101Z			78-36-21	ALL
SP09597		N 145/160/		SP-				ALL
	REF	V	W0376	151Z			78-36-21	ALL
	REF	V	W0392	102Z			78-36-21	ALL
SP09599		N 145/160/		SP-				ALL
	REF	V	W0376	215Z			78-36-21	ALL
	REF	V	W0376	216Z			78-36-21	ALL
	REF	V	W0392	224Z			78-36-21	ALL
SP09728		0236/201/R054		SP- (SB 28-0066)				155, 163-164, 275-299
	DED		W0262	138Z			28-22-21	155, 163-164, 275-299
	DED		W0606	019Z			28-22-21	155, 163-164, 275-299
	DED		W0606	793Z			28-22-21	155, 163-164, 275-299
SP09730		0236/201/R054		SP- (SB 28-0066)				155, 163-164, 275-299
	DED		W0614	019Z			28-22-21	155, 163-164, 275-299
	DED		W0614	691Z			28-22-21	155, 163-164, 275-299

HOOKUP LIST

D280T132

91-21-51

Section SP0900

Page 2 End

Mar 07/2008



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
ST0631L								280-299
	REF	*	W0784	026	20		33-51-13	280-299
	REF	*	W0784	040	20		33-51-13	280-299
ST0631R								280-299
	REF	*	W1222	021	20		33-51-12	280-299
	REF	*	W1222	038	20		33-51-12	280-299
ST0654L								280-299
	REF	*	W0784	025	20		33-51-13	280-299
	REF	*	W0784	041	20		33-51-13	280-299
ST0675L								280-299
	CAP	Y	W0812	643	20		33-21-11	280-299
	CAP	Y	W0812	644	20		33-21-11	280-299
	CAP	Y	W0812	765	20		33-21-11	280-299
	CAP	Y	W0812	766	20		33-21-11	280-299
ST0675R								280-299
	CAP	Y	W0812	02N	20		33-21-11	280-299
	CAP	Y	W0812	02P	20		33-21-11	280-299
	CAP	Y	W0812	645	20		33-21-11	280-299
	CAP	Y	W0812	646	20		33-21-11	280-299
	CAP	Y	W3014	015	20		33-21-11	280-299

HOOKUP LIST

D280T132

91-21-51

Section ST0600

Page 1 End

Mar 07/2008



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
ST0932L								155, 157
	REF	*	W0790	048	18		33-51-13	155, 157
	REF	*	W0790	053	18		33-51-13	155, 157
	REF	*	W0790	164	16		33-51-13	155, 157
ST0932R								155, 157
	REF	*	W1222	065	16		33-51-12	155, 157
	REF	*	W1222	074	16		33-51-12	155, 157
	REF	*	W1222	179	16		33-51-12	155, 157
ST0935L								155
	REF	*	W0122	131	20		33-51-13	155
	REF	*	W0122	132	20		33-51-13	155
ST0935R								155
	REF	*	W0122	121	18		33-51-12	155
	REF	*	W0122	122	18		33-51-12	155

HOOKUP LIST
D280T132

91-21-51
Section ST0900
Page 1 End
Mar 07/2008



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
ST654R								280-299
	REF	*	W1222	028	18		33-51-12	280-299
	REF	*	W1222	097	18		33-51-12	280-299

HOOKUP LIST
D280T132

91-21-51
Section ST6500
Page 1 End
Mar 07/2008



767-200/300 WIRING DIAGRAM MANUAL

Equip	Station / WL / BL		Bundle	Description		GA	CO	Diagram	Effectivity
	Term	Type		Wire No.					
STA00255									275-278
	CAP	Y	W0047	290B	20		23-22-12		275-278
	CAP	Y	W0047	290R	20		23-22-12		275-278
	CAP	Y	W0047	291B	24		23-22-12		275-278
	CAP	Y	W0047	291R	24		23-22-12		275-278
	CAP	Y	W0047	292B	24		23-22-12		275-278
	CAP	Y	W0047	292R	24		23-22-12		275-278
	DED		W0047	291Z			23-22-12		275-278
	DED		W0047	292Z			23-22-12		275-278
STA00467									150-199
	CAP	Y	W0047	290B	20		23-22-12		150-199
	CAP	Y	W0047	290R	20		23-22-12		150-199
	CAP	Y	W0047	291B	24		23-22-12		150-199
	CAP	Y	W0047	291R	24		23-22-12		150-199
	CAP	Y	W0047	292B	24		23-22-12		150-199
	CAP	Y	W0047	292R	24		23-22-12		150-199
	DED		W0047	291Z			23-22-12		150-199
	DED		W0047	292Z			23-22-12		150-199
STA0167									050-099, 150-156, 162-166, 275-276
	CAP	Y	W0779	222B	24		34-45-14		050-099, 150-154, 275-276
	CAP	Y	W0779	222R	24		34-45-14		050-099, 150-156, 162-166, 275-276
	CAP	Y	W0779	222B	24		SPARE		155-156, 162-166
	REF		W0779	222Z			34-45-14		050-099, 150-154, 275-276
	REF		W0779	222	20		34-45-14		050-099, 150-156, 162-166, 275-276
	REF		W0779	222Z			SPARE		155-156, 162-166
STA0330									150, 152-199
	CAP	Y	W0117	552	20		23-32-21		150, 152-199
STA0341									276, 280-299
		*	W1224	123	20		33-24-13		276, 280-299
		*	W1224	124	20		33-24-13		276, 280-299
		*	W1224	125	20		33-24-13		276, 280-299
STA0362									275-299
	CAP	Y	W1216	025	22		21-45-21		275-276
	CAP	Y	W1216	027	22		21-45-21		275-276
	CAP	Y	W1216	030	20		21-45-21		275-299
	CAP	Y	W1216	025	20		21-45-21		277-299

HOOKUP LIST

D280T132

91-21-51

Section STA000

Page 1

Mar 07/2008



767-200/300 WIRING DIAGRAM MANUAL

Equip	Station / WL / BL		Bundle	Description		GA	CO	Diagram	Effectivity
	Term	Type		Wire No.					
STA0362				(continued)					275-299
	CAP	Y	W1216	027		20		21-45-21	277-299
	CAP	Y	W1216	032		20		21-45-21	277-299
STA0437									150, 153-157
	CAP	Y	W1224	104		20		33-21-31	150, 153-157
	CAP	Y	W1224	174		20		33-21-31	150, 153-157
STA0631L									280-299
	CAP	*	W0814	01N		20		SPARE	280-299
STA0654L									280-299
	CAP	Y	W0812	02F		20		33-21-13	280-299
	CAP	Y	W0812	03W		20		33-21-13	280-299
	CAP	Y	W0812	03X		20		33-21-13	280-299
	CAP	Y	W0812	632		20		33-21-11	280-299
	CAP	Y	W0812	633		20		33-21-11	280-299
	CAP	Y	W0812	758		20		33-21-11	280-299
	CAP	Y	W0812	762		20		33-21-11	280-299
	CAP	Y	W0812	763		20		33-21-11	280-299
	CAP	Y	W0814	01N		20		SPARE	280-299
	CAP	Y	W0814	522		22		33-22-21	280-299
STA0654R									280-299
	CAP	Y	W0812	02D		20		33-21-13	280-299
	CAP	Y	W0812	03J		20		33-21-13	280-299
	CAP	Y	W0812	03K		20		33-21-13	280-299
	CAP	Y	W0812	03M		20		33-21-13	280-299
	CAP	Y	W0812	03N		20		33-21-13	280-299
	CAP	Y	W0812	639		20		33-21-11	280-299
	CAP	Y	W0812	640		20		33-21-11	280-299
	CAP	Y	W0812	647		20		33-21-11	280-299
STA0675L									280-299
	CAP	Y	W3014	006		20		33-21-11	280-299
	CAP	Y	W3014	007		20		33-21-11	280-299
	CAP	Y	W3014	010		20		33-21-11	280-299
	CAP	Y	W3014	012		20		33-21-11	280-299
	CAP	Y	W3014	019		20		33-21-11	280-299
	CAP	Y	W3014	020		20		33-21-11	280-299
	CAP	Y	W3014	023		20		33-21-11	280-299

HOOKUP LIST

D280T132

91-21-51

Section STA000

Page 2

Mar 07/2008



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
STA0675L				(continued)				280-299
	CAP	Y	W3014	026	20		33-21-11	280-299
	CAP	Y	W3014	037	20		33-21-11	280-299
	CAP	Y	W3014	041	20		33-21-11	280-299
	REF	*	W1234	034	20		33-21-21	280-299
	REF	*	W1234	036	22		33-21-21	280-299
STA0675R								280-299
	CAP	Y	W3014	001	20		33-21-11	280-299
	CAP	Y	W3014	002	20		33-21-11	280-299
	CAP	Y	W3014	011	20		33-21-11	280-299
	CAP	Y	W3014	013	20		33-21-11	280-299
	CAP	Y	W3014	014	20		33-21-11	280-299
	CAP	Y	W3014	024	20		33-21-11	280-299
	CAP	Y	W3014	025	20		33-21-11	280-299
	CAP	Y	W3014	038	20		33-21-11	280-299
	CAP	Y	W3014	040	20		33-21-11	280-299
	REF	*	W1236	013	22		33-21-21	280-299
	REF	*	W1236	064	20		33-21-21	280-299
STA0680L								280-299
	CAP	Y	W3016	006	20		33-21-11	280-299
	CAP	Y	W3016	007	20		33-21-11	280-299
	CAP	Y	W3016	010	20		33-21-11	280-299
	CAP	Y	W3016	011	20		33-21-11	280-299
	CAP	Y	W3016	014	20		33-21-11	280-299
STA0680R								280-299
	CAP	Y	W3016	001	20		33-21-11	280-299
	CAP	Y	W3016	002	20		33-21-11	280-299
	CAP	Y	W3016	012	20		33-21-11	280-299
	CAP	Y	W3016	013	20		33-21-11	280-299
	CAP	Y	W3016	015	20		33-21-11	280-299
STA0707L								280-299
	CAP	Y	W0812	02U	20		33-21-11	280-299
	CAP	Y	W0812	02V	20		33-21-11	280-299
	CAP	Y	W0812	03B	20		33-21-11	280-299
	CAP	Y	W0812	03C	20		33-21-11	280-299

HOOKUP LIST

D280T132



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
STA0707R								280-299
	CAP	Y	W0812	03D	20		33-21-11	280-299
	CAP	Y	W0812	03F	20		33-21-11	280-299
	CAP	Y	W0812	724	20		33-21-11	280-299
STA0719L								280-299
	CAP	Y	W0812	02G	20		33-21-13	280-299
	CAP	Y	W0812	03R	20		33-21-13	280-299
	CAP	Y	W0812	03S	20		33-21-13	280-299
	CAP	Y	W0812	03T	20		33-21-13	280-299
	CAP	Y	W0812	03Y	20		33-21-13	280-299
STA0719R								280-299
	CAP	Y	W0812	02E	20		33-21-13	280-299
	CAP	Y	W0812	03H	20		33-21-13	280-299
	CAP	Y	W0812	03I	20		33-21-13	280-299
	CAP	Y	W0812	03L	20		33-21-13	280-299
	CAP	Y	W0812	03P	20		33-21-13	280-299
STA0743L								280-299
	CAP	Y	W0812	642	20		33-21-11	280-299
	CAP	Y	W0812	650	20		33-21-11	280-299
	CAP	Y	W0812	651	20		33-21-11	280-299
	CAP	Y	W0812	760	20		33-21-11	280-299
	CAP	Y	W0812	761	20		33-21-11	280-299
STA0743R								280-299
	CAP	Y	W0812	652	20		33-21-11	280-299
	CAP	Y	W0812	653	20		33-21-11	280-299
STA0798L								280-299
	CAP	Y	W1236	039	22		SPARE	280-299
	REF	Y	W1236	037	22		SPARE	280-299

HOOKUP LIST

D280T132

91-21-51
Section STA000
Page 4 End
Mar 07/2008



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
STA1094								277-299
	REF	=	W0811	202	20		23-25-17	277-299
	REF	=	W0811	203	20		23-25-17	277-299
	REF	=	W0811	204	20		23-25-17	277-299
	REF	=	W0811	006	20		23-25-17	277-299
	REF	=	W0811	007	20		23-25-17	277-299
STA1109								277-299
	REF	=	W0813	202	20		23-25-17	277-299
	REF	=	W0813	203	20		23-25-17	277-299
	REF	=	W0813	204	20		23-25-17	277-299
	REF	=	W0813	010	20		23-25-17	277-299
	REF	=	W0813	011	20		23-25-17	277-299
STA1362								156, 166
	CAP	Y	W0030	133	20		38-32-14	156, 166
	CAP	Y	W0030	134	20		38-32-14	156, 166
	CAP	Y	W0030	135	18		38-32-14	156, 166
	CAP	Y	W0030	136	18		38-32-14	156, 166

HOOKUP LIST

D280T132

91-21-51

Section STA100

Page 1 End

Mar 07/2008



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
T00101		SHELF/E03/02		TRU-LEFT				ALL
	+	H	W0266	001	02		24-32-11	ALL
	-	G5	W0266	002	02		24-32-11	ALL
T00102		SHELF/E03/02		TRU-RIGHT				ALL
	+	H	W0268	001	02		24-32-11	ALL
	-	G5	W0268	002	02		24-32-11	ALL
T00103		P034-00/ /		XFMR RECT UNIT-GND PWR				ALL
	A	C	W1012	001	22		24-54-61	ALL
	B	C	W1012	002	22		24-54-61	ALL
	C	C	W1012	003	22		24-54-61	ALL
	N	C	W1012	015	20		24-54-61	ALL
	+	D	W1012	005	10		24-54-61	ALL
	-	D	W1012	004	10		24-54-61	ALL
T00123		P006-03/ /		XFMR-28V AC BUS,LEFT				ALL
	HV	E	W1026	011	16		24-53-11	ALL
	LV	E	W1026	010	10		24-53-11	ALL
	DED		W1026	011Z			24-53-11	ALL
	GND	E	W1026	012	16		24-53-11	ALL
	GND	E	W1026	078	16		24-53-11	ALL
T00124		P006-04/ /		XFMR-28V AC BUS,RIGHT				ALL
	HV	E	W1030	012	16		24-53-21	ALL
	LV	E	W1030	011	10		24-53-21	ALL
	GND	E	W1030	013	16		24-53-21	ALL
	GND	E	W1030	051	16		24-53-21	ALL
T00126		P033-00/ /		XFMR-28V AC BUS,GND SERVICE				ALL
	HV	N	W0138	046	12		24-53-51	ALL
	LV	N	W0138	049	10		24-53-51	ALL
	GND	N	W0138	048	10		24-53-51	ALL
T00129		0763/148/L073		XFMR-WING LANDING LIGHT,L				ALL
	HV1	E	W0602	080	20		33-42-11	050-099
	HV1	E	W0602	080	16		33-42-11	150-199, 275-299
	HV3	E	W0602	079	18		33-42-11	050-099
	HV3	E	W0602	079	16		33-42-11	150-199, 275-299
	LV	E	W0602	082	12		33-42-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section T00100

Page 1

Mar 07/2008



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
T00129		0763/148/L073		XFMR-WING LANDING LIGHT,L (continued)				ALL
	GND	E	W0602	081	12		33-42-11	ALL
T00130		0763/150/R075		XFMR-WING LANDING LIGHT,R				050-099
T00130		0763/148/R073		XFMR-WING LANDING LIGHT,R				150-199, 275-299
	HV1	E	W0656	075	20		33-42-11	050-099
	HV1	E	W0656	075	16		33-42-11	150-199, 275-299
	HV3	E	W0656	074	18		33-42-11	050-099
	HV3	E	W0656	074	16		33-42-11	150-199, 275-299
	LV	E	W0656	077	12		33-42-11	ALL
	GND	E	W0656	076	12		33-42-11	ALL
T00139		P036-00/ /		XFMR-AIR DATA COMPUTER,LEFT				ALL
	HV	D	W0184	771	22		34-12-11	ALL
	LV	D	W0184	769	22		34-12-11	ALL
	GND	D	W0184	770	22		34-12-11	ALL
T00140		P037-00/ /		XFMR-AIR DATA COMPUTER,RIGHT				ALL
	HV	D	W0192	106	22		34-12-21	ALL
	LV	D	W0192	107	22		34-12-21	ALL
	GND	D	W0192	108	22		34-12-21	ALL
T00141		0980/192/R055		XFMR-WHEEL WELL LIGHT				ALL
	HV2	E	W0628	023	20		33-31-11	ALL
	LV	E	W0628	025	16		33-31-11	ALL
	LV	E	W0628	026	16		33-31-11	ALL
	GND	E	W0628	024	16		33-31-11	ALL
T00143		P023-00/ /		XFMR-NOSE GEAR LDG LT,L				ALL
	BLK		W1194	B-A			33-42-11	ALL
	BRN		W1194	B-F			33-42-11	ALL
	CAP	Y	W1194	B-C			33-42-11	ALL
	CAP	Y	W1194	B-E			33-42-11	ALL
	GRA		W1194	B-B			33-42-11	ALL
	GRO		W1194	B-D			33-42-11	ALL
	GRR		W1194	B-E			33-42-11	ALL
	GRY		W1194	B-C			33-42-11	ALL
T00144		P023-00/ /		XFMR-NOSE GEAR LDG LT,R				ALL
	BLK		W1194	A-A			33-42-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section T00100

Page 2

Mar 07/2008



767-200/300 WIRING DIAGRAM MANUAL

Equip	Station / WL / BL		Description		GA	CO	Diagram	Effectivity
	Term	Type	Bundle	Wire No.				
T00144	P023-00/ /		XFMR-NOSE GEAR LDG LT,R (continued)					ALL
	BRN		W1194	A-F			33-42-11	ALL
	CAP	Y	W1194	A-C			33-42-11	ALL
	CAP	Y	W1194	A-E			33-42-11	ALL
	GRA		W1194	A-B			33-42-11	ALL
	GRO		W1194	A-D			33-42-11	ALL
	GRR		W1194	A-E			33-42-11	ALL
	GRY		W1194	A-C			33-42-11	ALL
T00148	P035-00/ /		XFMR-FWD CAR. COMPT LTS					ALL
	HV1	E	W1066	049	18		33-37-11	050-099
	HV1	E	W1066	050	18		33-37-11	050-099
	HV1	E	W1066	065	18		33-37-11	050-099
	HV1	E	W1066	049	16		33-37-11	150-199, 275-299
	HV1	E	W1066	050	16		33-37-11	150-199, 275-299
	HV1	E	W1066	065	16		33-37-11	150-199, 275-299
	LV	E	W1066	052	12		33-37-11	ALL
	GND	E	W1066	051	12		33-37-11	ALL
T00151	P039-00/ /		XFMR-AFT CARGO EXT LTS					ALL
	HV1	E	W1068	058	20		33-31-61	ALL
	LV	E	W1068	060	16		33-31-61	ALL
	GND	E	W1068	059	16		33-31-61	ALL
T00152	P039-00/ /		XFMR-AFT CARGO COMPT LTS					ALL
	HV1	E	W1068	050	18		33-37-21	050-099
	HV1	E	W1068	067	18		33-37-21	050-099
	HV1	E	W1068	050	16		33-37-21	150-199, 275-299
	HV1	E	W1068	067	16		33-37-21	150-199, 275-299
	LV	E	W1068	052	12		33-37-21	ALL
	GND	E	W1068	051	12		33-37-21	ALL
T00180	P019-00/ /		XFMR-INDIRECT CEILING LTS,FWD					ALL
	HV2	E	W1104	596	20		33-21-11	050-099, 275-299
	HV2	E	W1104	619	20		33-21-11	150-199, 275-299
	HV2	E	W1104	618	20		33-21-11	275-299
	HV3	E	W1104	001	20		33-21-11	ALL
	LV	E	W1104	051	16		33-21-11	ALL
	GND	E	W1104	052	16		33-21-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section T00100

Page 3

Mar 07/2008



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
T00181		P025-00/ /		XFMR-OUTBD INDIRECT CEILING LTS,AFT				ALL
	HV2	E	W1108	600	20		33-21-12	050-099, 150-199
	HV2	E	W1108	009	20		33-21-12	150-199, 275-299
	HV2	E	W1108	648	20		33-21-12	275-299
	HV3	E	W1108	005	20		33-21-12	ALL
	HV3	E	W1108	138	20		33-21-12	ALL
	LV	E	W1108	002	16		33-21-12	ALL
	GND	E	W1108	031	16		33-21-12	ALL
T00182		P025-00/ /		XFMR-INBD INDIRECT CEILING LTS,AFT				ALL
	HV2	E	W1108	627	20		33-21-12	050-099, 150-199
	HV2	E	W1108	021	20		33-21-12	150-199, 275-299
	HV2	E	W1108	650	20		33-21-12	275-299
	HV3	E	W1108	013	20		33-21-12	ALL
	HV3	E	W1108	089	20		33-21-12	ALL
	LV	E	W1108	001	16		33-21-12	ALL
	GND	E	W1108	014	16		33-21-12	ALL
T00183		P019-00/ /		XFMR-SIDEWALL LTS				ALL
	HV2	E	W1104	057	20		33-21-31	ALL
	HV2	E	W1104	146	20		33-21-31	ALL
	HV2	E	W1104	603	20		33-21-31	150-199
	LV	E	W1104	055	18		33-21-31	050-099
	LV	E	W1104	094	18		33-21-31	050-099
	LV	E	W1104	801	18		33-21-31	050-099
	LV	E	W1104	055	16		33-21-31	150-199, 275-299
	LV	E	W1104	094	16		33-21-31	150-199, 280-299
	LV	E	W1104	801	16		33-21-31	162-199
	LV	E	W1104	627	16		33-21-31	275-278
	LV	E	W1104	061	16		33-21-31	275-299
	GND	E	W1104	058	18		33-21-31	050-099
	GND	E	W1104	058	16		33-21-31	150-199, 275-299
T00184		P019-00/ /		XFMR-SIDEWALL LTS				ALL
	HV2	E	W1104	098	20		33-21-31	ALL
	LV	E	W1104	056	18		33-21-31	050-099
	LV	E	W1104	627	18		33-21-31	050-099
	LV	E	W1104	056	16		33-21-31	150-199, 275-299
	LV	E	W1104	627	16		33-21-31	150-199, 280-299
	LV	E	W1104	094	16		33-21-31	275-278

HOOKUP LIST

D280T132

91-21-51

Section T00100

Page 4

Mar 07/2008



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
T00184		P019-00/ /		XFMR-SIDEWALL LTS (continued)				ALL
	GND	E	W1104	099	18		33-21-31	050-099
	GND	E	W1104	099	16		33-21-31	150-199, 275-299
T00186		P035-00/ /		XFMR-FWD CARGO EXT LTS (LARGE)				ALL
	HV1	E	W1066	058	20		33-31-61	ALL
	LV	E	W1066	060	16		33-31-61	ALL
	GND	E	W1066	059	16		33-31-61	ALL
T00187		P023-00/ /		XFMR-TAXI LIGHT,L				ALL
	BLK		W1194	D-A			33-42-21	ALL
	BRN		W1194	D-F			33-42-21	ALL
	CAP	Y	W1194	D-C			33-42-21	ALL
	CAP	Y	W1194	D-E			33-42-21	ALL
	GRA		W1194	D-B			33-42-21	ALL
	GRO		W1194	D-D			33-42-21	ALL
	GRR		W1194	D-E			33-42-21	ALL
	GRY		W1194	D-C			33-42-21	ALL
T00188		P023-00/ /		XFMR-TAXI LIGHT,R				ALL
	BLK		W1194	C-A			33-42-21	ALL
	BRN		W1194	C-F			33-42-21	ALL
	CAP	Y	W1194	C-C			33-42-21	ALL
	CAP	Y	W1194	C-E			33-42-21	ALL
	GRA		W1194	C-B			33-42-21	ALL
	GRO		W1194	C-D			33-42-21	ALL
	GRR		W1194	C-E			33-42-21	ALL
	GRY		W1194	C-C			33-42-21	ALL
T00189		SHELF/E06/02		XFMR RECT-APU START				275-299
	+	R	W0246	010	*1		24-32-41	275-299
	-	R	W0246	009	*1		24-32-41	275-299
T00193		P006-03/ /		XFMR-28V AC XFR BUS,LEFT				ALL
	HV2	E	W1026	064	20		24-51-14	ALL
	LV	E	W1026	065	18		24-51-14	ALL
	GND	E	W1026	066	16		24-51-14	ALL
T00194		P006-04/ /		XFMR-28V AC XFR BUS,RIGHT				ALL
	HV2	E	W0048	085	22		24-51-24	ALL

HOOKUP LIST

D280T132

91-21-51

Section T00100

Page 5

Mar 07/2008



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
T00194		P006-04/ /		XFMR-28V AC XFR BUS,RIGHT (continued)				ALL
	LV	E	W0048	087	18		24-51-24	ALL
	GND	E	W0048	086	16		24-51-24	ALL

HOOKUP LIST
D280T132

91-21-51
Section T00100
Page 6 End
Mar 07/2008



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
TB0016F		P006-03/ /		MDL-TERMINAL BLOCK,P6				ALL
	DED		W0028	095Z			24-51-31	ALL
	DED		W0028	151Z			25-29-11	ALL
	DED		W0028	152Z			25-29-11	ALL
TB0016Y		P006-03/ /		MDL-TERMINAL BLOCK,P6				ALL
	DED		W0028	097Z			24-51-31	ALL
	DED		W0046	036Z			24-51-31	ALL
TB0018F		P006-05/ /		MDL-TERMINAL BLOCK,P6				ALL
	DED		W0150	023Z			33-13-18	ALL
TB0018X		P006-05/ /		MDL-TERMINAL BLOCK,P6				ALL
	DED		W0152	046Z			80-11-11	ALL
	DED		W0152	047Z			80-11-21	ALL
TB0018Y		P006-00/ /		MDL-TERMINAL BLOCK,P6				ALL
	DED		W0150	009Z			33-16-12	ALL
	DED		W0150	010Z			33-16-12	ALL
	DED		W0150	011Z			33-16-12	ALL
	DED		W0150	012Z			33-16-12	ALL
	DED		W0154	009Z			33-16-12	ALL
	DED		W0154	010Z			33-16-12	ALL
	DED		W0154	011Z			33-16-12	ALL
	DED		W0154	018Z			33-16-12	ALL
	DED		W0158	017Z			33-16-12	ALL
	DED		W0158	018Z			33-16-12	ALL
	DED		W0158	021Z			33-16-12	ALL
	DED		W0158	105Z			33-16-12	ALL
	DED		W0154	012Z			33-16-12	150-154, 275-278
	DED		W0154	013Z			33-16-12	150-154, 275-278
	DED		W0154	014Z			33-16-12	150-154, 275-278
TB0022Y		P006-05/ /		MDL-TERMINAL BLOCK,P6				ALL
	DED		W0150	020Z			24-51-71	ALL
	DED		W0150	021Z			24-51-71	ALL
TB0031F		0212/195/L045		MDL-TERMINAL BLOCK,P8				ALL
	DED		W0756	143Z			27-21-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section TB0000

Page 1

Mar 07/2008



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
TB0031G		0212/195/L045		MDL-TERMINAL BLOCK,P8				ALL
	DED		W0638	158Z			33-16-12	150-154, 275-278
TB0031H		0212/195/L045		MDL-TERMINAL BLOCK,P8				ALL
	DED		W0632	157Z			33-16-12	ALL
	DED		W0634	172Z			33-16-12	ALL
	DED		W0634	177Z			33-16-12	ALL
TB0064F		0200/275/R010		MDL-TERMINAL BLOCK,P5				050-099, 156-157, 166-199, 277-299
	DED		W0675	018Z			23-25-14	156-157, 166-199, 277-278
	DED		W0675	019Z			23-25-14	156-157, 166-199, 277-278
	DED		W0675	020Z			23-25-14	156-157, 166-199, 277-278
TB0064X		P005-00/ /		MDL-TERMINAL BLOCK,P5				ALL
	DED		W0062	12TZ			33-13-16	ALL
	DED		W0070	695Z			49-61-11	ALL
TB0066X		0202/280/R008		MDL-TERMINAL BLOCK,P5				ALL
	DED		W0062	05NZ			27-61-12	ALL
	DED		W0062	56VZ			30-43-11	ALL
	DED		W0066	782Z			22-21-11	ALL
	DED		W0066	69DZ			73-21-11	150-157, 275-276
	DED		W0070	68LZ			73-21-11	150-157, 275-276
TB0066Y		0202/280/R008		MDL-TERMINAL BLOCK,P5				ALL
	DED		W0062	05CZ			33-16-17	ALL
	DED		W0066	01CZ			33-16-17	ALL
	DED		W0066	133Z			33-16-17	ALL
	DED		W0066	503Z			33-16-17	ALL
	DED		W0066	60BZ			33-16-12	ALL
	DED		W0066	60DZ			33-16-12	ALL
	DED		W0066	60MZ			33-16-22	ALL
	DED		W0066	60NZ			33-16-22	ALL
	DED		W0863	009Z			33-16-17	ALL
	DED		W0062	724Z			28-42-12	050-099, 155-199, 276-299
	DED		W0066	724Z			28-42-12	050-099, 155-199, 276-299
	DED		W0723	010Z			33-16-17	150-154, 275-299
	DED		W0723	019Z			33-16-17	150-154, 275-299

HOOKUP LIST

D280T132

91-21-51

Section TB0000

Page 2

Mar 07/2008



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
TB0066Z		0202/280/R008		MDL-TERMINAL BLOCK,P5				ALL
	DED		W0062	05DZ			33-16-17	ALL
	DED		W0863	006Z			21-58-11	ALL
	DED		W0863	010Z			33-16-17	ALL
TB0068G		P005-00/ /		MDL-TERMINAL BLOCK,P5				ALL
	DED		W0062	043Z			33-16-17	ALL
	DED		W0066	03CZ			33-16-17	ALL
	DED		W0070	06CZ			33-16-22	ALL
TB0068X		P005-00/ /		MDL-TERMINAL BLOCK,P5				ALL
	DED		W0062	057Z			21-31-11	ALL
TB0068Y		P005-00/ /		MDL-TERMINAL BLOCK,P5				ALL
	DED		W0062	066Z			33-16-17	ALL
	DED		W0062	133Z			33-16-17	ALL
	DED		W0062	653Z			33-16-17	ALL
	DED		W0066	066Z			33-16-17	ALL
	DED		W0066	681Z			33-16-17	ALL
	DED		W0066	843Z			33-16-17	ALL
	DED		W0070	05RZ			33-16-12	ALL
	DED		W0070	05SZ			33-16-12	ALL
	DED		W0070	05XZ			33-16-17	ALL
	DED		W0070	06AZ			33-16-22	ALL
	DED		W0070	863Z			33-16-17	ALL
	DED		W0863	037Z			33-16-17	ALL
	DED		W0723	010Z			33-16-17	050-099, 155-199
	DED		W0723	019Z			33-16-17	050-099, 155-199
	DED		W0725	010Z			33-16-17	150-154, 275-299
	DED		W0725	019Z			33-16-17	150-154, 275-299
	DED		W0062	843Z			33-16-17	275-299
	DED		W0070	133Z			33-16-17	275-299
TB0068Z		P005-00/ /		MDL-TERMINAL BLOCK,P5				ALL
	DED		W0060	003Z			33-16-17	ALL
	DED		W0060	004Z			33-16-17	ALL
	DED		W0062	044Z			33-16-17	ALL
	DED		W0062	134Z			33-16-17	ALL
	DED		W0062	654Z			33-16-17	ALL
	DED		W0066	653Z			33-16-17	ALL

HOOKUP LIST

D280T132

91-21-51

Section TB0000

Page 3

Mar 07/2008



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
TB0068Z		P005-00/ /		MDL-TERMINAL BLOCK,P5 (continued)				ALL
	DED		W0066	654Z			33-16-17	ALL
	DED		W0863	036Z			33-16-17	ALL
TB0070X		P005-00/ /		MDL-TERMINAL BLOCK,P5				ALL
	DED		W0062	772Z			22-21-21	ALL
	DED		W0066	56VZ			30-43-11	ALL
	DED		W1307	100Z			34-61-14	050-099, 150-199, 276-299
	DED		W0062	69DZ			73-21-11	150-157, 275-276
	DED		W0070	67HZ			73-21-11	150-157, 275-276
TB0070Y		P005-00/ /		MDL-TERMINAL BLOCK,P5				ALL
	DED		W0062	843Z			33-16-17	050-099, 150-199
	DED		W0070	133Z			33-16-17	050-099, 150-199
	DED		W0062	016Z			29-11-31	ALL
	DED		W0062	60AZ			33-16-12	ALL
	DED		W0062	60CZ			33-16-12	ALL
	DED		W0062	633Z			33-16-17	ALL
	DED		W0062	703Z			33-16-17	ALL
	DED		W0062	886Z			29-11-31	ALL
	DED		W0062	723Z			28-42-12	050-099, 155-199, 276-299
	DED		W0066	723Z			28-42-12	050-099, 155-199, 276-299
	DED		W0062	746Z			28-31-12	050-099, 155-199, 277-299
	DED		W0062	748Z			28-31-12	050-099, 155-199, 277-299
	DED		W0066	741Z			28-31-12	050-099, 155-199, 277-299
TB0070Z		P005-00/ /		MDL-TERMINAL BLOCK,P5				ALL
	DED		W0066	05CZ			33-16-17	ALL
	DED		W0066	05DZ			33-16-17	ALL
TB0074Z		P036-00/ /		MDL-TERMINAL BLOCK,P36				ALL
	DED		W0176	51QZ			32-09-11	050-099, 150-156, 162-199, 275-299
	DED		W0176	51RZ			32-09-11	050-099, 150-156, 162-199, 275-299
	DED		W0176	015Z			32-09-11	ALL
	DED		W0176	133Z			32-09-11	ALL
	DED		W0176	134Z			32-09-11	ALL
	DED		W0176	549Z			32-09-11	ALL
TB0076Y		P036-00/ /		MDL-TERMINAL BLOCK,P36				ALL
	DED		W0176	037Z			32-09-11	ALL
	DED		W0176	08AZ			32-09-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section TB0000

Page 4

Mar 07/2008



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
TB0076Y		P036-00/ /		MDL-TERMINAL BLOCK,P36 (continued)				ALL
	DED		W0176	675Z			32-09-11	ALL
TB0076Z		P036-00/ /		MDL-TERMINAL BLOCK,P36				ALL
			W0176	100Z			78-34-11	ALL
			W0176	22P	20		78-34-11	ALL
			W0176	67KZ			78-34-11	ALL
TB0078Z		P036-00/ /		MDL-TERMINAL BLOCK,P36				ALL
	DED		W0176	849Z			29-11-32	ALL
TB0080X		P036-00/ /		MDL-TERMINAL BLOCK,P36				ALL
			W0176	22RZ			78-34-21	ALL
			W0176	22TZ			78-34-21	ALL
			W0176	GRK			78-34-21	ALL
			W0180	160Z			78-34-21	ALL
			W0180	161Z			78-34-21	ALL
			W0180	GRK			78-34-21	ALL
TB0080Y		P036-00/ /		MDL-TERMINAL BLOCK,P36				ALL
	DED		W0176	51FZ			21-58-12	155-199
TB0080Z		P036-00/ /		MDL-TERMINAL BLOCK,P36				ALL
	DED		W0184	01PZ			76-11-11	155-199, 277-299
TB0084Z		P037-00/ /		MDL-TERMINAL BLOCK,P37				ALL
			W0192	013Z			78-34-21	ALL
			W0192	07AZ			78-34-21	ALL
			W0192	24RZ			78-34-21	ALL
			W0192	78EZ			78-34-21	ALL
			W0192	78F	20		78-34-21	ALL
			W0192	78K	20		78-34-21	ALL
TB0090G		P033-00/ /		MDL-TERMINAL BLOCK-P33 (SB 27A0160)				ALL
	DED		W0142	185Z			27-62-11	ALL
	DED		W0142	865Z			27-62-11	ALL
TB0090Y		P033-00/ /		MDL-TERMINAL BLOCK-P33				ALL
	DED		W0142	10FZ			28-22-31	ALL
	DED		W0142	10KZ			28-22-31	ALL

HOOKUP LIST

D280T132

91-21-51

Section TB0000

Page 5

Mar 07/2008



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
TB0090Y		P033-00/ /		MDL-TERMINAL BLOCK-P33 (continued)				ALL
	DED		W0142	10PZ			28-22-31	ALL
TB0092Y		P033-00/ /		MDL-TERMINAL BLOCK-P33				ALL
	DED		W0144	651Z			28-22-31	ALL
	DED		W0144	653Z			28-22-31	ALL
	DED		W0144	654Z			28-22-31	ALL
TB0096D		P061-00/ /		DIODE BLOCK (R136-R143,R167)				ALL
	DED		W0062	708Z			28-31-12	050-099, 155-199, 277-299
	DED		W0070	744Z			28-31-12	050-099, 155-199, 277-299
TB0096X		P061-00/ /		MDL-TERMINAL BLOCK,P61				ALL
	DED		W0060	110Z			24-41-11	ALL
	DED		W0060	111Z			24-41-11	ALL
	DED		W0070	032Z			49-72-11	ALL
	DED		W0070	033Z			49-72-11	ALL
	DED		W0070	07CZ			49-61-11	ALL
TB0096Y		P061-00/ /		MDL-TERMINAL BLOCK,P61				ALL
	DED		W0070	07BZ			49-61-11	ALL
TB0098X		P061-00/ /		MDL-TERMINAL BLOCK,P61				ALL
	CAP	Y	W0062	50R	24		SPARE	051-099, 150-154
	CAP	Y	W0070	01L	24		SPARE	051-099, 150-154
	DED		W0062	101Z			78-34-11	ALL
	DED		W0062	62HZ			74-31-11	ALL
	DED		W0070	08VZ			78-34-11	ALL
	DED		W0070	101Z			31-31-26	ALL
	DED		W0070	63GZ			78-34-11	ALL
	REF		W0065	226	20		23-22-15	050-099, 275-299
	REF		W0065	226Z			23-22-15	050-099, 275-299
	REF		W0062	239	20		23-22-15	150-199, 275-299
	REF		W0062	239Z			23-22-15	150-199, 275-299
			W0062	239	20		23-22-15	050-099
			W0062	239Z			23-22-15	050-099
			W0065	226	20		23-22-15	150-199
			W0065	226Z			23-22-15	150-199

HOOKUP LIST

D280T132

91-21-51

Section TB0000

Page 6

Mar 07/2008



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
TB0098Y		P061-00/ /		MDL-TERMINAL BLOCK,P61				ALL
	DED		W0062	144Z			21-58-11	ALL
	DED		W0062	59YZ			33-16-12	ALL
	DED		W0062	59ZZ			33-16-12	ALL
	DED		W0062	60BZ			33-16-12	ALL
	DED		W0062	60MZ			33-16-22	ALL
	DED		W0062	62FZ			74-31-11	ALL
	DED		W0062	62GZ			74-31-11	ALL
	DED		W0062	803Z			33-16-26	ALL
	DED		W0065	301Z			31-31-19	ALL
	DED		W0070	024Z			29-33-11	ALL
	DED		W0070	03PZ			29-11-11	ALL
	DED		W0070	03RZ			29-11-11	ALL
	DED		W0070	08UJ			78-34-11	ALL
	DED		W0070	123Z			78-34-11	ALL
	DED		W0070	126Z			78-34-11	ALL
	DED		W0070	127Z			78-34-11	ALL
	DED		W0070	63NZ			78-34-11	ALL
TB0098Z		P061-00/ /		MDL-TERMINAL BLOCK,P61				ALL
	DED		W0062	60RZ			33-16-22	ALL
	DED		W0065	023Z			33-16-26	ALL
	DED		W0065	024Z			33-16-26	ALL

HOOKUP LIST

D280T132

91-21-51
Section TB0000
Page 7 End
Mar 07/2008



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
TB0100X		P061-00/ /		MDL-TERMINAL BLOCK,P61				ALL
	DED		W0066	889Z			21-51-11	275-299
TB0100Y		P061-00/ /		MDL-TERMINAL BLOCK,P61				ALL
	CAP	Y	W0062	571	22		SPARE	ALL
	CAP	Y	W0062	62E	22		SPARE	ALL
	DED		W0062	006Z			29-32-11	ALL
	DED		W0062	015Z			29-32-11	ALL
	DED		W0062	017Z			29-11-31	ALL
	DED		W0062	53VZ			27-13-11	ALL
	DED		W0062	53WZ			27-13-11	ALL
	DED		W0062	55TZ			29-32-11	ALL
	DED		W0062	55UZ			29-32-11	ALL
	DED		W0062	55VZ			29-32-11	ALL
	DED		W0062	55WZ			29-32-11	ALL
	DED		W0062	802Z			27-13-11	ALL
	DED		W0062	887Z			29-11-31	ALL
	DED		W0062	636Z			28-31-11	050-099, 155-199, 276-299
	DED		W0062	688Z			28-31-11	050-099, 155-199, 276-299
	DED		W0062	695Z			28-31-11	050-099, 155-199, 276-299
TB0100Z		P061-00/ /		MDL-TERMINAL BLOCK,P61				ALL
	DED		W0062	142Z			21-33-11	ALL
	DED		W0066	50MZ			21-33-11	ALL
TB0101G		SHELF/E01/01		MDL-TERMINAL BLOCK,E1-1				ALL
	DED		W0101	70MZ			29-11-14	050-099, 150-199, 275-278
	DED		W1101	033Z			27-11-12	ALL
	DED		W1101	034Z			27-11-12	ALL
	DED		W1101	035Z			27-11-12	ALL
	DED		W0101	018Z			27-41-31	050-099, 155-199, 275-299
	DED		W0121	163Z			27-41-31	050-099, 155-199, 275-299
			W0101	218Z			22-21-11	ALL
			W0101	220Z			27-11-12	ALL
			W0101	222Z			27-11-12	ALL
			W0111	217Z			22-21-11	ALL
			W0111	221Z			27-11-12	ALL
			W0111	222Z			27-11-12	ALL
			W0121	212Z			22-21-11	ALL
			W0121	214Z			22-21-11	ALL
			W0121	215Z			22-21-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section TB0100

Page 1

Mar 07/2008



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
TB0101G		SHELF/E01/01		MDL-TERMINAL BLOCK,E1-1 (continued)				ALL
			W0121	216Z			22-22-11	ALL
			W0121	217Z			22-22-11	ALL
			W0121	218Z			22-22-11	ALL
TB0101H		SHELF/E01/01		MDL-TERMINAL BLOCK,E1-1				ALL
	DED		W0101	150Z			27-41-11	ALL
	DED		W0101	151Z			27-41-11	ALL
	DED		W0101	152Z			27-41-11	ALL
	DED		W0101	166Z			27-41-11	ALL
	DED		W0111	015Z			27-61-14	ALL
	DED		W0111	030Z			27-61-15	ALL
	DED		W0111	047Z			27-61-16	ALL
	DED		W0111	071Z			27-09-11	ALL
	DED		W0111	072Z			27-09-11	ALL
	DED		W0111	073Z			27-09-11	ALL
	DED		W0111	131Z			22-21-11	ALL
	DED		W1101	008Z			22-21-11	ALL
	DED		W1101	016Z			27-09-11	ALL
	DED		W1101	018Z			27-09-11	ALL
	DED		W1101	019Z			27-09-11	ALL
	DED		W1101	109Z			27-61-14	ALL
	DED		W1101	111Z			27-61-15	ALL
	DED		W1101	113Z			27-61-16	ALL
TB0101Z								280-299
	DED		W0101	70MZ			29-11-14	280-299
TB0102X		P061-00/ /		MDL-TERMINAL BLOCK,P61				ALL
	DED		W0062	210Z			36-21-11	ALL
	DED		W0062	53SZ			29-11-31	ALL
	DED		W0062	779Z			24-25-11	ALL
	DED		W0062	784Z			21-58-11	ALL
	DED		W0062	785Z			21-58-11	ALL
	DED		W0062	792Z			30-11-11	ALL
	DED		W0066	017Z			29-11-31	ALL
	DED		W0066	787Z			24-25-11	ALL
TB0102Y		P061-00/ /		MDL-TERMINAL BLOCK,P61				ALL
	CAP	Y	W0066	571	22		SPARE	ALL
	CAP	Y	W0066	62E	22		SPARE	ALL

HOOKUP LIST

D280T132

91-21-51

Section TB0100

Page 2

Mar 07/2008



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
TB0102Y		P061-00/ /		MDL-TERMINAL BLOCK,P61 (continued)				ALL
	DED		W0066	006Z			29-32-11	ALL
	DED		W0066	015Z			29-32-11	ALL
	DED		W0066	55TZ			29-32-11	ALL
	DED		W0066	55UZ			29-32-11	ALL
	DED		W0066	55VZ			29-32-11	ALL
	DED		W0066	55WZ			29-32-11	ALL
	DED		W0066	55XZ			29-33-11	ALL
	DED		W0066	55YZ			29-33-11	ALL
TB0102Z		P061-00/ /		MDL-TERMINAL BLOCK,P61				ALL
	DED		W0062	793Z			30-11-11	275-299
TB0104X		P061-00/ /		MDL-TERMINAL BLOCK,P61				ALL
	DED		W0066	177Z			21-28-11	050-099
	DED		W0070	120Z			21-28-11	050-099
	DED		W0062	500Z			28-22-31	ALL
	DED		W0062	538Z			28-22-31	ALL
	DED		W0062	539Z			28-22-31	ALL
	DED		W0062	543Z			28-22-31	ALL
	DED		W0062	63VZ			78-34-21	ALL
	DED		W0066	521Z			28-22-31	ALL
	DED		W0066	528Z			28-22-31	ALL
	DED		W0066	530Z			28-22-31	ALL
	DED		W0066	535Z			28-22-31	ALL
	DED		W0066	536Z			28-22-31	ALL
	DED		W0066	537Z			28-22-31	ALL
	DED		W0066	538Z			28-22-31	ALL
	DED		W0066	62HZ			74-31-21	ALL
	DED		W0070	09VZ			78-34-21	ALL
	DED		W0070	102Z			31-31-26	ALL
	DED		W0070	138Z			74-31-21	ALL
	DED		W0070	139Z			74-31-21	ALL
	DED		W0066	541Z			78-34-21	ALL
	DED		W0066	64F	20		78-34-21	ALL
	DED		W0066	GRE			78-34-21	ALL
TB0104Y		P061-00/ /		MDL-TERMINAL BLOCK,P61				ALL
	DED		W0062	540Z			28-22-31	ALL
	DED		W0062	544Z			28-22-31	ALL
	DED		W0066	59YZ			33-16-12	ALL

HOOKUP LIST

D280T132

91-21-51

Section TB0100

Page 3

Mar 07/2008



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
TB0104Y		P061-00/ /		MDL-TERMINAL BLOCK,P61 (continued)				ALL
	DED		W0066	59ZZ			33-16-12	ALL
	DED		W0066	60CZ			33-16-12	ALL
	DED		W0066	62FZ			74-31-21	ALL
	DED		W0066	62GZ			74-31-21	ALL
	DED		W0070	03TZ			29-11-21	ALL
	DED		W0070	03UZ			29-11-21	ALL
	DED		W0070	09UZ			78-34-21	ALL
	DED		W0070	136Z			74-31-21	ALL
	DED		W0070	137Z			74-31-21	ALL
	DED		W0070	510Z			28-22-31	ALL
TB0105F		SHELF/E01/03		MDL-TERMINAL BLOCK,E1-3				ALL
	DED		W0105	065Z			22-15-12	ALL
	DED		W0105	163Z			22-15-12	ALL
	DED		W0105	663Z			22-32-12	ALL
	REF		W0115	212	20		34-45-14	050-099, 150-156, 162-166
	REF		W0115	212Z			34-45-14	050-099, 150-156, 162-166
	REF		W0105	592	20		34-45-14	050-099, 150-156, 162-166, 275-276
	REF		W0105	592Z			34-45-14	050-099, 150-156, 162-166, 275-276
TB0105G		SHELF/E01/03		MDL-TERMINAL BLOCK,E1-3				ALL
	CAP	Y	W0105	137	22		34-45-14	157, 167-199, 277-299
	CAP	Y	W0105	138	22		34-45-14	157, 167-199, 277-299
	CAP	Y	W0105	140	22		34-45-14	157, 167-199, 277-299
	CAP	Y	W0115	037	22		34-45-14	157, 167-199, 277-299
	DED		W0105	656Z			22-32-11	ALL
	DED		W0105	677Z			22-33-11	ALL
	DED		W0105	679Z			22-33-11	ALL
	DED		W0105	802Z			34-12-11	ALL
	DED		W0125	003Z			34-12-11	ALL
	DED		W0125	105Z			34-12-11	ALL
	DED		W0125	709Z			22-31-12	ALL
	REF		W0105	546	20		34-45-14	050-099, 150-156, 162-166, 275-276
	REF		W0105	546Z			34-45-14	050-099, 150-156, 162-166, 275-276
	REF		W0105	583	20		34-45-14	050-099, 150-156, 162-166, 275-276
	REF		W0105	583Z			34-45-14	050-099, 150-156, 162-166, 275-276
	REF		W0105	585	20		34-45-14	050-099, 150-156, 162-166, 275-276
	REF		W0105	585Z			34-45-14	050-099, 150-156, 162-166, 275-276
	REF		W0105	588	20		34-45-14	050-099, 150-156, 162-166, 275-276
	REF		W0105	588Z			34-45-14	050-099, 150-156, 162-166, 275-276

HOOKUP LIST

D280T132

91-21-51

Section TB0100

Page 4

Mar 07/2008



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
TB0105G		SHELF/E01/03		MDL-TERMINAL BLOCK,E1-3 (continued)				ALL
	REF		W0105	568	20		34-45-14	ALL
	REF		W0105	568Z			34-45-14	ALL
TB0105H		SHELF/E01/03		MDL-TERMINAL BLOCK,E1-3				ALL
	CAP	Y	W0105	723	22		22-32-14	050-099
	DED		W0105	001Z			22-11-12	ALL
	DED		W0105	002Z			22-11-12	ALL
	DED		W0105	005Z			22-11-12	ALL
	DED		W0105	008Z			22-11-12	ALL
	DED		W0105	023Z			22-11-12	ALL
	DED		W0105	502Z			34-12-11	ALL
	DED		W0105	503Z			34-12-11	ALL
	DED		W0105	504Z			34-12-11	ALL
	DED		W0105	507Z			34-12-11	ALL
	DED		W0105	520Z			34-12-61	ALL
	DED		W0105	525Z			34-12-61	ALL
	DED		W0105	659Z			22-32-11	ALL
	DED		W0125	106Z			34-12-11	ALL
	DED		W0125	107Z			34-12-11	ALL
	DED		W0125	205Z			34-12-11	ALL
	DED		W0125	206Z			34-12-11	ALL
TB0105Y		SHELF/E01/03		MDL-TERMINAL BLOCK,E1-3				ALL
	CAP	Y	W0105	573B	24		31-31-20	050-099
	CAP	Y	W0105	573R	24		31-31-20	050-099
	REF		W0105	546	20		34-45-14	157, 167-199, 277-299
	REF		W0105	546Z			34-45-14	157, 167-199, 277-299
	REF		W0105	583	20		34-45-14	157, 167-199, 277-299
	REF		W0105	583Z			34-45-14	157, 167-199, 277-299
	REF		W0105	585	20		34-45-14	157, 167-199, 277-299
	REF		W0105	585Z			34-45-14	157, 167-199, 277-299
	REF		W0105	588	20		34-45-14	157, 167-199, 277-299
	REF		W0105	588Z			34-45-14	157, 167-199, 277-299
	REF		W0105	590	20		34-45-14	157, 167-199, 277-299
	REF		W0105	590Z			34-45-14	157, 167-199, 277-299
	REF		W0105	599	20		34-45-14	157, 167-199, 277-299
	REF		W0105	599Z			34-45-14	157, 167-199, 277-299
	REF		W0115	211	20		34-45-14	157, 167-199, 277-299
	REF		W0115	211Z			34-45-14	157, 167-199, 277-299

HOOKUP LIST

D280T132

91-21-51

Section TB0100

Page 5

Mar 07/2008



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
TB0105Z		SHELF/E01/03		MDL-TERMINAL BLOCK,E1-3				ALL
	CAP	Y	W0105	890	24		31-31-19	050-099
TB0106X		P061-00/ /		MDL-TERMINAL BLOCK,P61				ALL
	DED		W0062	143Z			21-58-16	ALL
	DED		W0062	64FZ			80-11-11	ALL
	DED		W0062	64GZ			80-11-11	ALL
	DED		W0070	10BZ			80-11-11	ALL
	DED		W0070	10CZ			80-11-11	ALL
TB0106Y		P061-00/ /		MDL-TERMINAL BLOCK,P61				ALL
	CAP	Y	W0062	50S	24		SPARE	051-099, 150-154
	CAP	Y	W0070	01X	24		SPARE	051-099, 150-154
	DED		W0062	53GZ			24-51-31	ALL
	DED		W0062	53HZ			24-51-31	ALL
	DED		W0062	771Z			24-25-11	ALL
	DED		W0066	53GZ			24-51-31	ALL
	DED		W0066	53HZ			24-51-31	ALL
	DED		W0066	53JZ			24-51-31	ALL
	DED		W0066	786Z			24-25-11	ALL
	DED		W0070	10FZ			80-11-11	ALL
	DED		W0070	10VZ			80-11-11	ALL
TB0106Z		P061-00/ /		MDL-TERMINAL BLOCK,P61				ALL
	DED		W0062	813Z			33-16-26	ALL
	DED		W0062	814Z			33-16-26	ALL
TB0119F		SHELF/E01/05		MDL-TERMINAL BLOCK,E1-5				ALL
TB0119F		SHELF/E01/05		TERMINAL BLOCK (MTO-340961)				150, 152-199, 275-299
	DED		W0119	064Z			22-14-21	ALL
	DED		W0119	077Z			22-15-12	ALL
	DED		W0119	093Z			22-41-11	ALL
	DED		W0119	094Z			22-15-12	ALL
	DED		W1119	012Z			34-22-26	ALL
	DED		W1119	074Z			34-22-26	ALL
TB0119G		SHELF/E01/05		MDL-TERMINAL BLOCK,E1-5				ALL
	DED		W0109	123Z			21-51-11	ALL
	DED		W0109	621Z			21-51-11	ALL
	DED		W0119	902Z			23-32-21	150, 152-156, 162-199

HOOKUP LIST

D280T132

91-21-51

Section TB0100

Page 6

Mar 07/2008



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
TB0119G		SHELF/E01/05		MDL-TERMINAL BLOCK,E1-5 (continued)				ALL
	DED		W0109	028Z			21-61-51	150-199, 275-299
TB0119H		SHELF/E01/05		MDL-TERMINAL BLOCK,E1-5				ALL
	DED		W0119	001Z			22-11-22	ALL
	DED		W0119	002Z			22-11-22	ALL
	DED		W0119	005Z			22-11-22	ALL
	DED		W0119	008Z			22-11-22	ALL
	DED		W0119	014Z			22-11-22	ALL
	DED		W0109	915Z			34-46-13	150, 152-199, 275-299
TB0119Y		SHELF/E01/05		MDL-TERMINAL BLOCK,E1-5				ALL
TB0119Y		SHELF/E01/05		TERMINAL BLOCK (MTO-340961)				150, 152-199, 275-299
	CAP	Y	W0109	084	24		21-51-11	050, 150-154, 275-276
	DED		W0109	621Z			21-51-11	ALL
	DED		W0109	901Z			34-46-13	150, 152-199, 275-299
	DED		W0109	902Z			34-46-13	150, 152-199, 275-299
	DED		W0109	903Z			34-46-13	150, 152-199, 275-299
	DED		W0109	908Z			34-46-13	150, 152-199, 275-299
	DED		W0109	909Z			34-46-13	150, 152-199, 275-299
	DED		W0109	910Z			34-46-13	150, 152-199, 275-299
	DED		W0109	916Z			34-46-13	150, 152-199, 275-299
	DED		W0109	917Z			34-22-29	150, 152-199, 275-299
TB0127F		SHELF/E01/04		MDL-TERMINAL BLOCK,E1-4				ALL
	DED		W0107	016Z			34-22-36	ALL
	DED		W0127	084Z			22-15-12	ALL
	DED		W0127	090Z			22-15-12	ALL
	DED		W1127	016Z			34-22-36	ALL
	DED		W1127	024Z			34-22-37	ALL
	DED		W1127	027Z			34-22-37	ALL
	DED		W1127	028Z			34-22-37	ALL
	DED		W1127	029Z			34-22-37	ALL
	DED		W1127	030Z			34-22-37	ALL
	DED		W1127	031Z			34-22-37	ALL
	DED		W1127	032Z			34-22-37	ALL
TB0127G		SHELF/E01/04		MDL-TERMINAL BLOCK,E1-4				ALL
	DED		W1127	033Z			34-31-31	ALL
			W0117	907Z			23-32-21	150, 152-156, 162-199
			W0117	910Z			23-32-21	150, 152-156, 162-199

HOOKUP LIST

D280T132

91-21-51

Section TB0100

Page 7

Sep 04/2008



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
TB0127G		SHELF/E01/04		MDL-TERMINAL BLOCK,E1-4 (continued)				ALL
			W0117	918Z			23-32-21	150, 152-156, 162-199
TB0127H		SHELF/E01/04		MDL-TERMINAL BLOCK,E1-4				ALL
	DED		W0127	001Z			22-11-32	ALL
	DED		W0127	002Z			22-11-32	ALL
	DED		W0127	003Z			22-11-32	ALL
	DED		W0127	005Z			22-11-32	ALL
	DED		W0127	008Z			22-11-32	ALL
	DED		W0127	009Z			22-11-32	ALL
	DED		W0127	011Z			22-11-32	ALL
	DED		W0127	050Z			22-14-21	ALL
	DED		W0127	054Z			22-14-11	ALL
TB0127Y		SHELF/E01/04		MDL-TERMINAL BLOCK,E1-4				ALL
	DED		W1127	019Z			34-22-38	ALL
	DED		W1127	025Z			34-22-37	ALL
	DED		W1127	026Z			34-22-37	ALL
TB0127Z		SHELF/E01/04		MDL-TERMINAL BLOCK,E1-4				ALL
	DED		W0127	249Z			31-31-20	ALL
TB0130D		SHELF/E01/02		DIODE BLOCK (R120-R125,R205,R332-R334)				ALL
	DED		W1092	792Z			32-61-14	050-099, 150-152, 155-199, 275-299
	DED		W1100	125Z			32-61-14	050-099, 150-156, 162-166, 275-276
	DED		W1092	028Z			78-34-11	ALL
	DED		W1092	029Z			78-34-11	ALL
	DED		W1092	059Z			32-61-14	ALL
	DED		W1092	563Z			78-34-11	ALL
	DED		W1092	564Z			78-34-11	ALL
	DED		W1092	708Z			32-61-14	ALL
	DED		W1092	711Z			32-61-14	ALL
	DED		W1092	737Z			29-11-32	ALL
	DED		W1092	738Z			32-61-14	ALL
	DED		W1092	742Z			32-61-14	ALL
	DED		W1092	743Z			32-61-14	ALL
	DED		W1092	744Z			32-61-14	ALL
	DED		W1092	745Z			32-61-14	ALL
TB0130F		SHELF/E01/02		MDL-TERMINAL BLOCK,E1-2				ALL
	DED		W1092	052Z			78-36-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section TB0100

Page 8

Sep 04/2008



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
TB0130F		SHELF/E01/02		MDL-TERMINAL BLOCK,E1-2 (continued)				ALL
	DED		W1092	087Z			33-24-11	ALL
	DED		W1092	102Z			24-11-11	ALL
	DED		W1092	153Z			32-42-11	ALL
	DED		W1092	172Z			78-36-11	ALL
	DED		W1092	174Z			78-36-11	ALL
	DED		W1092	180Z			32-09-12	ALL
	DED		W1092	182Z			32-09-12	ALL
	DED		W1092	183Z			32-09-12	ALL
	DED		W1092	184Z			32-09-12	ALL
	DED		W1092	590Z			32-09-12	ALL
	DED		W1100	122Z			78-36-11	ALL
	DED		W1100	501Z			78-36-11	ALL
	DED		W1100	502Z			78-36-11	ALL
	DED		W1103	063Z			22-41-11	ALL
TB0130G		SHELF/E01/02		MDL-TERMINAL BLOCK,E1-2				ALL
	DED		W1092	792Z			32-61-14	050-099, 150-152, 155-199, 275-299
	DED		W1090	004Z			24-11-11	ALL
	DED		W1092	002Z			27-88-11	ALL
	DED		W1092	054Z			29-11-32	ALL
	DED		W1092	063Z			32-61-14	ALL
	DED		W1092	568Z			32-09-11	ALL
	DED		W1092	707Z			32-61-14	ALL
	DED		W1092	710Z			32-61-14	ALL
	DED		W1092	722Z			32-09-11	ALL
	DED		W1092	739Z			32-61-14	ALL
	DED		W1100	125Z			32-61-14	157, 167-199, 277-299
TB0130H		SHELF/E01/02		MDL-TERMINAL BLOCK,E1-2				ALL
	DED		W1092	715Z			32-61-14	ALL
	DED		W1092	716Z			32-61-14	ALL
	REF		W1103	297	20		34-46-12	280-299
	REF		W1103	297Z			34-46-12	280-299
TB0130Y		SHELF/E01/02		MDL-TERMINAL BLOCK, E1-2				ALL
	REF		W1103	500	20		34-45-14	050-099, 150-152, 155-156, 162-166, 275-276
	REF		W1103	500Z			34-45-14	050-099, 150-152, 155-156, 162-166, 275-276
	REF		W1103	298	20		34-45-14	050-099, 150-152, 155-199, 275-299

HOOKUP LIST

D280T132

91-21-51

Section TB0100

Page 9

Sep 04/2008



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
TB0130Y		SHELF/E01/02		MDL-TERMINAL BLOCK, E1-2 (continued)				ALL
	REF		W1103	298Z			34-45-14	050-099, 150-152, 155-199, 275-299
	REF		W1103	522	20		34-45-14	050-099, 150-152, 155-199, 275-299
	REF		W1103	522Z			34-45-14	050-099, 150-152, 155-199, 275-299
			W1103	298Z			34-45-14	153-154
			W1103	500Z			34-45-14	153-154
			W1103	FRB			34-45-14	153-154
TB0133F		SHELF/E02/02		MDL-TERMINAL BLOCK,E2-2				ALL
	DED		W0133	010Z			34-61-13	ALL
	DED		W0133	027Z			34-61-13	ALL
TB0133G		SHELF/E02/02		MDL-TERMINAL BLOCK,E2-2				ALL
	DED		W0133	057Z			34-53-13	ALL
	DED		W0133	076Z			34-53-11	ALL
	DED		W0133	775Z			34-61-11	150-154
TB0133H		SHELF/E02/02		MDL-TERMINAL BLOCK,E2-2				ALL
	REF		W0143	213	20		34-22-29	050-099, 150-151, 155-199
	REF		W0143	213Z			34-22-29	050-099, 150-151, 155-199
	REF		W0133	750	20		34-45-14	050-099, 155-199, 275-299
	REF		W0133	750Z			34-45-14	050-099, 155-199, 275-299
	REF		W0143	214	20		34-33-21	050-099, 155-199, 277-299
	REF		W0143	214Z			34-33-21	050-099, 155-199, 277-299
	REF		W0143	243	20		31-41-33	050-099, 155-199, 277-299
	REF		W0143	243Z			31-41-33	050-099, 155-199, 277-299
TB0133X		SHELF/E02/02		MDL-TERMINAL BLOCK,E2-2				ALL
	REF		W0133	271	20		31-35-11	050-099, 155-199, 275-299
	REF		W0133	271Z			31-35-11	050-099, 155-199, 275-299
	REF		W0143	221	20		31-35-11	050-099, 155-199, 275-299
	REF		W0143	221Z			31-35-11	050-099, 155-199, 275-299
TB0133Y		SHELF/E02/02		MDL-TERMINAL BLOCK,E2-2				ALL
	DED		W0133	676Z			34-61-16	050-099, 150-156, 162-166, 275-276, 280-299
	DED		W0133	598Z			34-61-14	150-154, 277-299
TB0133Z		SHELF/E02/02		MDL-TERMINAL BLOCK,E2-2				ALL
	DED		W0133	845Z			34-61-15	157, 167-199

HOOKUP LIST

D280T132

91-21-51

Section TB0100

Page 10

Sep 04/2008



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
TB0133Z		SHELF/E02/02		MDL-TERMINAL BLOCK,E2-2 (continued)				ALL
	DED		W0133	676Z			34-61-16	157, 167-199, 277-278
	REF		W0133	669	20		34-61-16	050-099, 155-199, 275-299
	REF		W0133	669Z			34-61-16	050-099, 155-199, 275-299
TB0139F		SHELF/E02/05		MDL-TERMINAL BLOCK,E2-5				ALL
	DED		W0139	774Z			23-34-11	ALL
	DED		W0149	039Z			23-34-11	ALL
TB0139G		SHELF/E02/05		MDL-TERMINAL BLOCK,E2-5				ALL
	CAP	Y	W0149	273R	22		23-22-12	050-099, 150-199, 275-278
	DED		W0149	199Z			23-31-13	050-099, 150-199
	DED		W0149	526Z			23-31-13	050-099, 150-199
	DED		W0149	527Z			23-31-13	050-099, 150-199
	DED		W0149	529Z			23-31-13	050-099, 150-199
	DED		W0139	097Z			23-34-11	ALL
	DED		W0139	775Z			23-34-11	ALL
	DED		W0149	038Z			23-34-11	ALL
	DED		W0149	040Z			23-34-11	ALL
	DED		W0139	901Z			23-22-11	150, 152-199
	DED		W0139	902Z			23-22-12	150, 152-199
	DED		W0139	058Z			23-22-11	150, 152-199, 277-299
	DED		W0149	057Z			23-42-12	150-157, 275-299
	DED		W0149	087Z			23-42-11	150-157, 275-299
	DED		W0149	104Z			23-42-11	150-157, 275-299
	DED		W0139	689Z			23-22-12	275-299
	DED		W0149	003Z			23-31-11	275-299
	DED		W0149	004Z			23-31-11	275-299
	DED		W0149	005Z			23-31-11	275-299
	DED		W0149	141Z			23-31-12	275-299
	DED		W0139	553Z			23-22-11	277-299
TB0139H		SHELF/E02/05		MDL-TERMINAL BLOCK,E2-5				ALL
	DED		W0139	650Z			23-42-11	050-099
	DED		W0149	087Z			23-42-11	050-099
	DED		W0149	104Z			23-42-11	050-099
	DED		W0149	622Z			23-42-11	050-099
	DED		W0149	623Z			23-42-11	050-099
	DED		W0149	003Z			23-31-11	050-099, 150-199
	DED		W0149	004Z			23-31-11	050-099, 150-199
	DED		W0149	005Z			23-31-11	050-099, 150-199

HOOKUP LIST

D280T132

91-21-51

Section TB0100

Page 11

Sep 04/2008



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
TB0139H		SHELF/E02/05		MDL-TERMINAL BLOCK,E2-5 (continued)				ALL
	DED		W0149	197Z			23-31-11	050-099, 150-199
	DED		W0149	199Z			23-31-13	050-099, 150-199
	DED		W0149	522Z			23-31-11	050-099, 150-199
	DED		W0149	560Z			23-31-14	050-099, 150-199
TB0139Z		SHELF/E02/05		MDL-TERMINAL BLOCK,E2-5				ALL
	CAP	Y	W0149	558	20		23-31-14	050-099
	DED		W0149	555Z			23-31-14	050-099, 150-199
	DED		W0149	556Z			23-31-14	050-099, 150-199
	DED		W0149	557Z			23-31-14	050-099, 150-199
	DED		W0149	558Z			23-31-14	050-099, 150-199
	DED		W0149	559Z			23-31-14	050-099, 150-199
	DED		W0149	560Z			23-31-14	050-099, 150-199
	DED		W0139	650Z			23-42-11	162-199
	DED		W0149	057Z			23-42-12	162-199
	DED		W0149	087Z			23-42-11	162-199
	DED		W0149	104Z			23-42-11	162-199
	DED		W0149	622Z			23-42-11	162-199
	DED		W0149	623Z			23-42-11	162-199
TB0141G		SHELF/E02/01		MDL-TERMINAL BLOCK,E2-1				ALL
	DED		W1131	025Z			27-11-22	ALL
	DED		W1131	026Z			27-11-22	ALL
	DED		W1131	027Z			27-11-22	ALL
			W0131	205Z			22-21-21	ALL
			W0131	206Z			27-11-22	ALL
			W0131	207Z			27-11-22	ALL
			W0141	205Z			22-21-21	ALL
			W0141	206Z			27-11-22	ALL
			W0141	207Z			27-11-22	ALL
TB0141Z		SHELF/E02/01		MDL-TERMINAL BLOCK,E2-1				150-199
TB0141Z		SHELF/E02/01		MDL-TERMINAL BLOCK,E2-1 (SB 22-0062)				275-299
			W0141	284Z			22-21-31	150-199, 275-299
			W0141	285Z			22-21-31	150-199, 275-299
			W0141	286Z			22-21-31	150-199, 275-299
TB0145F		SHELF/E02/03		MDL-TERMINAL BLOCK,E2-3				ALL
	REF		W0155	301	20		31-31-25	050-099, 150-199, 275-276
	REF		W0155	301Z			31-31-25	050-099, 150-199, 275-276

HOOKUP LIST

D280T132

91-21-51

Section TB0100

Page 12

Sep 04/2008



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
TB0145G		SHELF/E02/03		MDL-TERMINAL BLOCK,E2-3				ALL
	DED		W0145	048Z			34-53-21	150-154
TB0145R		SHELF/E02/03		RESISTOR BLOCK				ALL
	DED		W0135	082Z			31-31-17	ALL
	DED		W0135	083Z			31-31-17	ALL
	DED		W0135	302Z			31-31-19	ALL
	DED		W0135	305Z			31-31-19	ALL
TB0145X		SHELF/E02/03		MDL-TERMINAL BLOCK,E2-3				ALL
	DED		W0135	005Z			31-31-11	ALL
	DED		W0135	079Z			31-31-17	ALL
	DED		W0135	080Z			31-31-17	ALL
	DED		W0135	081Z			31-31-17	ALL
	DED		W0135	192Z			31-31-14	ALL
	DED		W0145	011Z			34-61-23	ALL
	DED		W0145	012Z			34-61-23	ALL
	DED		W0145	827Z			34-12-12	ALL
	REF		W0135	857Z			34-45-12	050-099, 150-152, 155-199, 277-299
	REF		W0135	203	20		34-61-23	050-099, 150-199, 275-276
	REF		W0135	203Z			34-61-23	050-099, 150-199, 275-276
	REF		W0135	204	20		34-61-23	050-099, 150-199, 275-276
	REF		W0135	204Z			34-61-23	050-099, 150-199, 275-276
	REF		W0135	205	20		34-61-23	050-099, 150-199, 275-276
	REF		W0135	205Z			34-61-23	050-099, 150-199, 275-276
	REF		W0135	206	20		34-61-23	050-099, 150-199, 275-276
	REF		W0135	206Z			34-61-23	050-099, 150-199, 275-276
	REF		W0135	208	20		34-61-11	050-099, 150-199, 275-276
	REF		W0135	208Z			34-61-11	050-099, 150-199, 275-276
	REF		W0135	209	20		34-61-11	050-099, 150-199, 275-276
	REF		W0135	209Z			34-61-11	050-099, 150-199, 275-276
	REF		W0145	201	20		34-61-11	050-099, 150-199, 275-276
	REF		W0145	201Z			34-61-11	050-099, 150-199, 275-276
	REF		W0145	206	20		34-61-11	050-099, 150-199, 275-276
	REF		W0145	206Z			34-61-11	050-099, 150-199, 275-276
	REF		W0145	213	20		34-61-23	050-099, 150-199, 275-276
	REF		W0145	213Z			34-61-23	050-099, 150-199, 275-276
	REF		W0145	214	20		34-61-23	050-099, 150-199, 275-276
	REF		W0145	214Z			34-61-23	050-099, 150-199, 275-276
	REF		W0145	215	20		34-61-23	050-099, 150-199, 275-276
	REF		W0145	215Z			34-61-23	050-099, 150-199, 275-276

HOOKUP LIST

D280T132

91-21-51

Section TB0100

Page 13

Sep 04/2008



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
TB0145X		SHELF/E02/03		MDL-TERMINAL BLOCK,E2-3 (continued)				ALL
	REF		W0145	217	20		34-61-23	050-099, 150-199, 275-276
	REF		W0145	217Z			34-61-23	050-099, 150-199, 275-276
	REF		W0145	568	20		31-41-35	050-099, 150-199, 275-276
	REF		W0145	568Z			31-41-35	050-099, 150-199, 275-276
	REF		W0145	570	20		28-41-11	050-099, 150-199, 275-276
	REF		W0145	570Z			28-41-11	050-099, 150-199, 275-276
	REF		W0155	211	20		31-41-35	050-099, 150-199, 275-276
	REF		W0155	211Z			31-41-35	050-099, 150-199, 275-276
	REF		W0155	212	20		28-41-11	050-099, 150-199, 275-276
	REF		W0155	212Z			28-41-11	050-099, 150-199, 275-276
	REF		W0135	833Z			34-45-12	050-099, 150-199, 277-299
	REF		W0135	FR3			34-45-12	050-099, 150-199, 277-299
	REF		W0135	FRL			34-45-12	050-099, 150-199, 277-299
	REF		W0135	FRV			34-45-12	050-099, 150-199, 277-299
	REF		W0135	FRX			34-45-12	050-099, 150-199, 277-299
	REF		W0135	226	20		31-31-14	050-099, 152-199, 275-299
	REF		W0135	226Z			31-31-14	050-099, 152-199, 275-299
	REF		W0145	529	20		31-31-14	050-099, 152-199, 275-299
	REF		W0145	529Z			31-31-14	050-099, 152-199, 275-299
	REF		W0135	299Z			34-45-12	153-154
TB0145Y		SHELF/E02/03		MDL-TERMINAL BLOCK,E2-3				ALL
	DED		W0135	097Z			31-31-11	ALL
	DED		W0145	107Z			31-31-11	ALL
	DED		W0145	299Z			34-61-21	ALL
	DED		W0145	586Z			34-12-22	ALL
	DED		W0145	801Z			34-12-21	ALL
	DED		W0145	830Z			34-12-21	ALL
	DED		W0145	834Z			34-12-21	ALL
	DED		W0145	048Z			34-53-21	050-099, 155-199, 275-299
	DED		W0135	855Z			34-61-24	050-099, 155-199, 276-299
	DED		W0145	223Z			34-61-24	157, 167-199
	DED		W0145	726Z			34-61-25	157, 167-199
	REF		W0145	571	20		27-11-12	050-099
	REF		W0145	571Z			27-11-12	050-099
	REF		W0145	281	20		34-55-21	050-099, 150-156, 162-166
	REF		W0145	281Z			34-55-21	050-099, 150-156, 162-166
	REF		W0145	284	20		34-22-29	050-099, 150-156, 162-166
	REF		W0145	284Z			34-22-29	050-099, 150-156, 162-166
	REF		W0145	554	20		31-35-12	050-099, 150-156, 162-166, 280-299

HOOKUP LIST

D280T132

91-21-51

Section TB0100

Page 14

Sep 04/2008



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
TB0145Y		SHELF/E02/03		MDL-TERMINAL BLOCK,E2-3 (continued)				ALL
	REF		W0145	554Z			31-35-12	050-099, 150-156, 162-166, 280-299
	REF		W0145	241	20		22-32-11	050-099, 150-199, 275-276
	REF		W0145	241Z			22-32-11	050-099, 150-199, 275-276
	REF		W0145	505	20		34-12-22	050-099, 150-199, 275-276
	REF		W0145	505Z			34-12-22	050-099, 150-199, 275-276
	REF		W0145	515	20		34-12-22	050-099, 150-199, 275-276
	REF		W0145	515Z			34-12-22	050-099, 150-199, 275-276
	REF		W0145	587	20		34-61-26	050-099, 150-199, 275-276
	REF		W0145	587Z			34-61-26	050-099, 150-199, 275-276
	REF		W0145	588	20		34-61-26	050-099, 150-199, 275-276
	REF		W0145	588Z			34-61-26	050-099, 150-199, 275-276
	REF		W0135	840	20		34-61-11	050-099, 151-152, 154, 156-157, 275-276
	REF		W0135	840Z			34-61-11	050-099, 151-152, 154, 156-157, 275-276
	REF		W0135	275	20		31-31-13	050-099, 152-199, 275-276
	REF		W0135	275Z			31-31-13	050-099, 152-199, 275-276
	REF		W0135	580	20		31-35-12	050-099, 152-199, 275-276
	REF		W0135	580Z			31-35-12	050-099, 152-199, 275-276
	REF		W0135	793	20		31-31-13	050-099, 152-199, 275-276
	REF		W0135	793Z			31-31-13	050-099, 152-199, 275-276
	REF		W0135	230	20		31-31-12	050-099, 152-199, 275-299
	REF		W0135	230Z			31-31-12	050-099, 152-199, 275-299
	REF		W0135	579	20		31-35-12	050-099, 152-199, 275-299
	REF		W0135	579Z			31-35-12	050-099, 152-199, 275-299
	REF		W0135	599	20		34-61-16	050-099, 152-199, 275-299
	REF		W0135	599Z			34-61-16	050-099, 152-199, 275-299
	REF		W0135	792	20		34-61-24	050-099, 152-199, 275-299
	REF		W0135	792Z			34-61-24	050-099, 152-199, 275-299
	REF		W0145	288	20		34-61-24	050-099, 152-199, 275-299
	REF		W0145	288Z			34-61-24	050-099, 152-199, 275-299
	REF		W0145	516	20		31-31-12	050-099, 152-199, 275-299
	REF		W0145	516Z			31-31-12	050-099, 152-199, 275-299
	REF		W0145	704	20		34-45-14	050-099, 153-156, 162-166
	REF		W0145	704Z			34-45-14	050-099, 153-156, 162-166
	REF		W0135	525	20		31-31-20	150-156, 162-166, 280-299
	REF		W0135	525Z			31-31-20	150-156, 162-166, 280-299
	REF		W0145	271	20		34-61-24	157, 167-199
	REF		W0145	271Z			34-61-24	157, 167-199
	REF		W0145	716	20		34-61-27	157, 167-199
	REF		W0145	716Z			34-61-27	157, 167-199
	REF		W0135	600	20		34-61-14	157, 167-199, 275-276

HOOKUP LIST

D280T132

91-21-51

Section TB0100

Page 15

Sep 04/2008



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
TB0145Y		SHELF/E02/03		MDL-TERMINAL BLOCK,E2-3 (continued)				ALL
	REF		W0135	600Z			34-61-14	157, 167-199, 275-276
	REF		W0135	276	20		34-61-14	157, 167-199, 275-299
	REF		W0135	276Z			34-61-14	157, 167-199, 275-299
	REF		W0135	598	20		34-61-16	157, 167-199, 275-299
	REF		W0135	598Z			34-61-16	157, 167-199, 275-299
	REF		W0135	681	20		34-61-14	157, 167-199, 275-299
	REF		W0135	681Z			34-61-14	157, 167-199, 275-299
	REF		W0145	641	20		34-61-24	157, 167-199, 275-299
	REF		W0145	641Z			34-61-24	157, 167-199, 275-299
	REF		W0145	709	20		34-61-25	157, 167-199, 275-299
	REF		W0145	709Z			34-61-25	157, 167-199, 275-299
	REF		W0145	223	20		34-61-24	275-276
	REF		W0145	223Z			34-61-24	275-276
	REF		W0145	224	20		34-61-24	275-276
	REF		W0145	224Z			34-61-24	275-276
	REF		W0145	525	20		34-21-21	275-276
	REF		W0145	525Z			34-21-21	275-276
TB0145Z		SHELF/E02/03		MDL-TERMINAL BLOCK,E2-3				ALL
	DED		W0145	105Z			31-31-12	ALL
	DED		W0145	106Z			31-31-11	ALL
	DED		W0145	117Z			31-31-11	ALL
	DED		W0145	158Z			31-31-12	ALL
	DED		W0145	514Z			34-12-22	ALL
	DED		W0145	831Z			34-12-21	ALL
	DED		W0145	832Z			34-12-21	ALL
	REF		W0145	525	20		34-21-21	050-099, 150-199
	REF		W0145	525Z			34-21-21	050-099, 150-199
	REF		W0135	597	20		34-61-16	050-099, 150-199, 275-276
	REF		W0135	597Z			34-61-16	050-099, 150-199, 275-276
	REF		W0145	221	20		34-61-22	050-099, 150-199, 275-276
	REF		W0145	221Z			34-61-22	050-099, 150-199, 275-276
	REF		W0145	295	20		34-61-25	050-099, 150-199, 275-276
	REF		W0145	295Z			34-61-25	050-099, 150-199, 275-276
	REF		W0145	513	20		34-12-22	050-099, 150-199, 275-276
	REF		W0145	513Z			34-12-22	050-099, 150-199, 275-276
	REF		W0145	540	20		34-61-25	050-099, 150-199, 275-276
	REF		W0145	540Z			34-61-25	050-099, 150-199, 275-276
	REF		W0145	572	20		34-13-21	050-099, 150-199, 275-276
	REF		W0145	572Z			34-13-21	050-099, 150-199, 275-276

HOOKUP LIST

D280T132

91-21-51

Section TB0100

Page 16

Sep 04/2008



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
TB0145Z		SHELF/E02/03		MDL-TERMINAL BLOCK,E2-3 (continued)				ALL
	REF		W0145	544	20		31-41-33	050-099, 152-199, 275-276
	REF		W0145	544Z			31-41-33	050-099, 152-199, 275-276
	REF		W0145	573	20		34-21-31	050-099, 152-199, 275-276
	REF		W0145	573Z			34-21-31	050-099, 152-199, 275-276
	REF		W0145	598	20		23-25-13	150, 153-199
	REF		W0145	598Z			23-25-13	150, 153-199
	REF		W0145	571	20		27-11-12	150-199, 275-276
	REF		W0145	571Z			27-11-12	150-199, 275-276
	REF		W0135	525	20		31-31-20	157, 167-199, 275-278
	REF		W0135	525Z			31-31-20	157, 167-199, 275-278
	REF		W0145	554	20		31-35-12	157, 167-199, 275-278
	REF		W0145	554Z			31-35-12	157, 167-199, 275-278
	REF		W0145	281	20		34-55-21	157, 167-199, 275-299
	REF		W0145	281Z			34-55-21	157, 167-199, 275-299
	REF		W0145	284	20		34-22-29	157, 167-199, 275-299
	REF		W0145	284Z			34-22-29	157, 167-199, 275-299
	REF		W0145	715	20		34-61-27	157, 167-199, 275-299
	REF		W0145	715Z			34-61-27	157, 167-199, 275-299
	REF		W0145	704	20		34-45-14	275-276
	REF		W0145	704Z			34-45-14	275-276
	REF		W0145	716	20		34-61-27	275-299
	REF		W0145	716Z			34-61-27	275-299
	REF		W0145	264	20		34-51-21	277-299
	REF		W0145	264Z			34-51-21	277-299
	REF		W0145	291	20		34-55-21	277-299
	REF		W0145	291Z			34-55-21	277-299
	REF		W0145	296	20		34-61-25	277-299
	REF		W0145	296Z			34-61-25	277-299
TB0146F		P019-00/ /		MDL-TERMINAL BLOCK,P19				ALL
	DED		W1104	829Z			33-21-31	166
TB0146X		P019-00/ /		MDL-TERMINAL BLOCK,P19				ALL
	DED		W1104	777Z			33-21-31	155-156
	DED		W1104	823Z			33-21-31	155-156, 166
	DED		W1104	824Z			33-21-31	155-156, 166
	DED		W1104	825Z			33-21-31	155-156, 166
	DED		W1104	826Z			33-21-31	155-156, 166
	DED		W1104	827Z			33-21-31	155-156, 166
	DED		W1104	828Z			33-21-31	155-156, 166

HOOKUP LIST

D280T132

91-21-51

Section TB0100

Page 17

Sep 04/2008



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
TB0146X		P019-00/ /		MDL-TERMINAL BLOCK,P19 (continued)				ALL
	DED		W1104	822Z			33-21-31	166
TB0146Z		P019-00/ /		MDL-TERMINAL BLOCK,P19				ALL
	DED		W1110	091Z			33-51-11	ALL
	DED		W1104	127Z			33-27-11	155-156, 166
	DED		W1104	130Z			33-27-11	155-156, 166
	DED		W1110	078Z			33-24-11	277-278
	DED		W1058	022Z			33-24-11	277-299
TB0158F		P050-00/ /		MDL-TERMINAL BLOCK,P50				ALL
	DED		W1080	089Z			21-58-11	ALL
TB0158G		P050-00/ /		MDL-TERMINAL BLOCK,P50				ALL
	DED		W1078	184Z			34-61-13	050-099, 150-199, 275-276
	DED		W1078	185Z			34-61-13	ALL
	DED		W1078	186Z			34-61-13	ALL
	DED		W1078	187Z			34-61-13	ALL
	DED		W1078	188Z			34-61-13	ALL
TB0158Y		P050-00/ /		MDL-TERMINAL BLOCK,P50				ALL
	DED		W1114	043Z			31-51-41	050-099
	DED		W1078	184Z			34-61-13	277-299
TB0160F		P019-00/ /		MDL-TERMINAL BLOCK,P19				ALL
	DED		W1104	802Z			33-21-31	155-156
TB0160H		P019-00/ /		MDL-TERMINAL BLOCK,P19				ALL
	DED		W1110	088Z			33-51-11	ALL
TB0161H		SHELF/E01/06		MDL-TERMINAL BLOCK,E1-6				ALL
	DED		W0161	223Z			34-21-11	ALL
	DED		W0171	222Z			34-21-21	ALL
	DED		W0181	221Z			34-21-31	ALL
TB0162X		P025-00/ /		MDL-TERMINAL BLOCK,P25				ALL
	DED		W1064	108Z			33-27-11	050-099
	DED		W1064	112Z			33-27-11	050-099

HOOKUP LIST

D280T132

91-21-51
Section TB0100
Page 18
Sep 04/2008



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
TB0162Y		P025-00/ /		MDL-TERMINAL BLOCK,P25				ALL
	DED		W1064	107Z			33-27-11	050-099
	DED		W1064	115Z			33-27-11	050-099
TB0163F								150, 153-199
	REF		W0163	052	20		23-25-14	150, 153-199
	REF		W0163	052Z			23-25-14	150, 153-199
	REF		W0163	952	20		23-25-14	150, 153-199
	REF		W0163	952Z			23-25-14	150, 153-199
	REF		W0173	054	20		23-25-14	150, 153-199
	REF		W0173	054Z			23-25-14	150, 153-199
	REF		W0173	954	20		23-25-14	150, 153-199
	REF		W0173	954Z			23-25-14	150, 153-199
TB0163G		SHELF/E02/06		MDL-TERMINAL BLOCK,E2-6				ALL
	DED		W0163	010Z			23-11-11	ALL
	DED		W0163	011Z			23-11-11	ALL
	DED		W0163	016Z			23-11-11	ALL
	DED		W0173	010Z			23-11-21	ALL
	DED		W0173	011Z			23-11-21	ALL
	DED		W0173	016Z			23-11-21	ALL
TB0164F		SHELF/E03/01		MDL-TERMINAL BLOCK,E3-1				ALL
	DED		W0084	035Z			21-61-51	ALL
TB0165G		SHELF/E05/01		MDL-TERMINAL BLOCK				ALL
	REF		W0165	229	20		34-22-28	ALL
	REF		W0165	229Z			34-22-28	ALL
	REF		W0165	230	20		34-22-81	ALL
	REF		W0165	230Z			34-22-81	ALL
	REF		W0165	231	20		34-22-81	ALL
	REF		W0165	231Z			34-22-81	ALL
	REF		W0175	229	20		34-22-18	ALL
	REF		W0175	229Z			34-22-18	ALL
	REF		W0175	230	20		34-22-91	ALL
	REF		W0175	230Z			34-22-91	ALL
	REF		W0175	231	20		34-22-91	ALL
	REF		W0175	231Z			34-22-91	ALL

HOOKUP LIST

D280T132

91-21-51

Section TB0100

Page 19

Sep 04/2008



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
TB0165Y		SHELF/E05/01		MDL-TERMINAL BLOCK,E5-1				ALL
	REF		W0165	209	20		31-35-13	ALL
	REF		W0165	209Z			31-35-13	ALL
	REF		W0165	210	20		34-57-11	ALL
	REF		W0165	210Z			34-57-11	ALL
	REF		W0165	221	20		34-57-11	ALL
	REF		W0165	221Z			34-57-11	ALL
	REF		W0175	209	20		31-35-13	ALL
	REF		W0175	209Z			31-35-13	ALL
	REF		W0175	210	20		34-57-21	ALL
	REF		W0175	210Z			34-57-21	ALL
	REF		W0175	221	20		34-57-21	ALL
	REF		W0175	221Z			34-57-21	ALL
TB0166F		SHELF/E03/01		MDL-TERMINAL BLOCK,E3-1				ALL
	DED		W0082	219Z			21-52-41	ALL
	DED		W0082	220Z			21-52-41	ALL
	DED		W0082	224Z			21-52-41	ALL
	DED		W0082	401Z			21-52-41	ALL
TB0168F		SHELF/E03/01		MDL-TERMINAL BLOCK,E3-1				ALL
	DED		W0082	102Z			36-23-11	ALL
	DED		W0084	069Z			36-23-11	ALL
TB0174G		P019-00/ /		MDL-TERMINAL BLOCK,P19				ALL
	DED		W1104	014Z			33-21-31	155-156, 166
	DED		W1104	526Z			33-21-31	155-156, 166
	DED		W1104	551Z			33-21-31	155-156, 166
	DED		W1104	505Z			33-21-31	166
TB0174X		P019-00/ /		MDL-TERMINAL BLOCK,P19				ALL
	DED		W1110	089Z			33-51-11	ALL
	DED		W1110	092Z			33-51-11	ALL
	DED		W1060	034Z			33-22-11	155-156, 166
	DED		W1104	117Z			33-22-11	155-156, 166
TB0174Y		P019-00/ /		MDL-TERMINAL BLOCK-P19				ALL
	DED		W1104	082Z			33-21-31	155-156, 166
	DED		W1104	086Z			33-21-31	155-156, 166
	DED		W1104	087Z			33-21-31	155-156, 166

HOOKUP LIST

D280T132



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
TB0174Y		P019-00/ /		MDL-TERMINAL BLOCK-P19 (continued)				ALL
	DED		W1104	103Z			33-21-31	155-156, 166
	DED		W1104	123Z			33-21-31	155-156, 166
	DED		W1104	124Z			33-21-31	155-156, 166
	DED		W1104	608Z			33-21-31	166
TB0174Z		P019-00/ /		MDL-TERMINAL BLOCK,P19				ALL
	DED		W1104	074Z			33-21-31	155-156
	DED		W1060	036Z			33-22-11	155-156, 166
	DED		W1104	077Z			33-21-31	155-156, 166
	DED		W1104	080Z			33-21-31	155-156, 166
	DED		W1104	089Z			33-21-31	155-156, 166
	DED		W1104	586Z			33-21-31	166
	DED		W1110	077Z			33-24-11	277-278
	DED		W1058	500Z			33-24-11	277-299
TB0176F		SHELF/E02/04		MDL-TERMINAL BLOCK,E2-4				ALL
	DED		W0014	019Z			27-51-61	ALL
	DED		W0014	044Z			27-51-61	ALL
	DED		W0014	198Z			29-11-31	ALL
	DED		W0014	199Z			29-11-31	ALL
	DED		W0014	251Z			21-31-21	ALL
	DED		W0014	501Z			29-11-31	ALL
	DED		W0014	502Z			24-51-13	ALL
	DED		W0016	088Z			29-33-11	ALL
	DED		W0016	090Z			29-33-11	ALL
	DED		W0016	125Z			24-22-11	ALL
	DED		W0016	130Z			29-11-31	ALL
	DED		W0016	131Z			29-11-31	ALL
	DED		W0016	133Z			29-11-31	ALL
	DED		W0016	134Z			24-51-23	ALL
	DED		W0016	225Z			21-31-21	ALL
	DED		W0018	064Z			24-51-13	ALL
	DED		W0018	066Z			24-51-23	ALL
	DED		W0098	071Z			24-11-21	ALL
	DED		W0098	096Z			27-51-61	ALL
	DED		W0098	108Z			27-51-61	ALL
	DED		W0098	169Z			24-22-22	ALL
	DED		W0098	167Z			25-31-11	275-276

HOOKUP LIST

D280T132

91-21-51

Section TB0100

Page 21

Sep 04/2008



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
TB0176G		SHELF/E02/04		MDL-TERMINAL BLOCK				ALL
	DED		W0016	027Z			24-11-21	ALL
	DED		W0016	029Z			24-11-21	ALL
	DED		W0016	087Z			29-33-11	ALL
	DED		W0098	072Z			24-11-21	ALL
TB0182D		P050-00/ /		DIODE BLOCK (R187-R192,R209-R210)				ALL
	CAP	Y	W1114	134	22		28-31-12	155-157, 165-199, 277-299
TB0182X		P050-00/ /		MDL-TERMINAL BLOCK,P50				ALL
	DED		W1080	158Z			73-21-17	ALL
TB0182Y		P050-00/ /		MDL-TERMINAL BLOCK,P50				ALL
	DED		W1080	512Z			34-61-23	ALL
	DED		W1080	513Z			34-61-23	ALL
	DED		W1080	514Z			34-61-23	ALL
	DED		W1080	515Z			34-61-23	ALL
	DED		W1080	516Z			34-61-23	ALL
	REF		W1078	211Z			77-12-12	050-099, 162-199, 277-299
	REF		W1078	250Z			77-12-12	050-099, 162-199, 277-299
	REF		W1078	FRH			77-12-12	050-099, 162-199, 277-299
	REF		W1080	211Z			77-12-12	050-099, 162-199, 277-299
	REF		W1080	218Z			77-12-12	050-099, 162-199, 277-299
	REF		W1080	FRG			77-12-12	050-099, 162-199, 277-299
	REF		W1114	211Z			77-12-12	050-099, 162-199, 277-299
	REF		W1114	212Z			77-12-12	050-099, 162-199, 277-299
	REF		W1114	213Z			77-12-12	050-099, 162-199, 277-299
	REF		W1114	214Z			77-12-12	050-099, 162-199, 277-299
	REF		W1114	FRM			77-12-12	050-099, 162-199, 277-299
	REF		W1114	FRN			77-12-12	050-099, 162-199, 277-299
TB0186D		P033-00/ /		DIODE BLOCK (R161,162,166,172,173,552)				ALL
	DED		W0142	07HZ			29-11-22	ALL
	DED		W0142	07JZ			27-09-13	ALL
	DED		W0142	07LZ			29-11-22	ALL
	DED		W0142	07MZ			27-09-13	ALL
	DED		W0142	07PZ			29-11-22	ALL
	DED		W0142	08RZ			29-11-22	ALL
	DED		W0142	08SZ			29-11-22	ALL

HOOKUP LIST

D280T132

91-21-51

Section TB0100

Page 22

Sep 04/2008



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
TB0186X		P033-00/ /		MDL-TERMINAL BLOCK-P33				ALL
	DED		W0142	09HZ			29-11-22	ALL
	DED		W0142	643Z			30-31-21	ALL
	DED		W0142	671Z			30-31-13	ALL
	DED		W0142	672Z			30-31-13	ALL
	DED		W0142	899Z			30-31-11	ALL
	DED		W0144	123Z			30-31-13	ALL
	DED		W0144	710Z			30-31-11	ALL
	DED		W0144	730Z			30-31-21	ALL
	DED		W0144	731Z			30-31-21	ALL
	DED		W0144	732Z			30-31-21	ALL
	DED		W0144	736Z			30-31-21	ALL
TB0186Y		P033-00/ /		MDL-TERMINAL BLOCK-P33				ALL
	DED		W0142	05BZ			27-62-11	ALL
	DED		W0142	07WZ			27-62-11	ALL
	DED		W0142	07XZ			27-62-11	ALL
	DED		W0142	50DZ			30-34-11	ALL
	DED		W0142	50LZ			30-34-11	ALL
	DED		W0142	70DZ			29-11-14	ALL
	DED		W0144	04LZ			29-11-22	ALL
	DED		W0144	121Z			30-31-13	ALL
	DED		W0144	5ACZ			30-34-11	ALL
	DED		W0144	5ADZ			30-34-11	ALL
	DED		W0146	062Z			28-42-12	050-099, 155-199, 276-299
	DED		W0146	16AZ			28-42-12	150-154, 275
TB0188X		P033-00/ /		MDL-TERMINAL BLOCK-P33				ALL
	DED		W0144	609Z			30-34-11	050-099
	DED		W0142	02MZ			30-31-11	ALL
	DED		W0142	07FZ			29-11-22	ALL
	DED		W0142	07GZ			29-11-22	ALL
	DED		W0142	07JZ			27-09-13	ALL
	DED		W0142	07KZ			29-11-22	ALL
	DED		W0142	07MZ			27-09-13	ALL
	DED		W0142	07QZ			29-11-22	ALL
	DED		W0142	07UZ			29-11-22	ALL
	DED		W0142	07VZ			29-11-22	ALL
	DED		W0142	07YZ			24-51-52	ALL
	DED		W0142	08RZ			29-11-22	ALL

HOOKUP LIST

D280T132

91-21-51

Section TB0100

Page 23

Feb 06/2009



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
TB0188X		P033-00/ /		MDL-TERMINAL BLOCK-P33 (continued)				ALL
	DED		W0142	08SZ			29-11-22	ALL
	DED		W0142	70GZ			29-11-14	ALL
	DED		W0142	70TZ			29-11-14	ALL
	DED		W0144	01DZ			21-51-13	ALL
	DED		W0144	01EZ			21-51-13	ALL
	DED		W0144	01FZ			21-51-13	ALL
TB0188Y		P033-00/ /		MDL-TERMINAL BLOCK-P33				ALL
	DED		W0142	07NZ			29-11-22	ALL
	DED		W0142	636Z			30-31-21	ALL
	DED		W0142	648Z			30-31-23	ALL
	DED		W0144	555Z			30-33-11	ALL
	DED		W0144	563Z			30-33-11	ALL
	DED		W0144	703Z			30-31-11	ALL
TB0190D		P037-00/ /		DIODE BLOCK (R246)				ALL
	DED		W0192	11MZ			29-11-12	ALL
	DED		W0192	125Z			29-11-12	ALL
	DED		W0192	126Z			29-11-12	ALL
TB0190F		P037-00/ /		MDL-TERMINAL BLOCK,P37				ALL
	DED		W1118	047Z			27-81-11	ALL
TB0190X		P037-00/ /		MDL-TERMINAL BLOCK,P37				ALL
	DED		W0192	551Z			29-21-31	ALL
	DED		W0192	552Z			29-21-31	ALL
	DED		W0198	035Z			29-21-31	ALL
	DED		W0198	040Z			29-21-31	ALL
	DED		W0192	02RZ			21-26-11	150-154, 275
TB0190Y		P037-00/ /		MDL-TERMINAL BLOCK,P37				ALL
	DED		W0192	550Z			29-21-31	ALL
	DED		W0198	032Z			29-21-31	ALL
TB0192X		P037-00/ /		MDL-TERMINAL BLOCK,P37				ALL
	DED		W0192	05XZ			74-31-21	ALL
	DED		W0192	607Z			74-31-21	ALL
	DED		W0198	191Z			74-31-21	ALL
	DED		W0198	193Z			74-31-21	ALL

HOOKUP LIST

D280T132

91-21-51

Section TB0100

Page 24

Feb 06/2009



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
TB0192X		P037-00/ /		MDL-TERMINAL BLOCK,P37 (continued)				ALL
	DED		W0198	599Z			25-33-11	050-099, 155-199, 277-299
TB0196D		P033-00/ /		DIODE BLOCK (R23,R27,R44,R45,R68,R77)				ALL
	DED		W0144	05GZ			32-41-11	ALL
TB0196F		P033-00/ /		MDL-TERMINAL BLOCK,P33				ALL
	DED		W0142	71CZ			29-11-14	ALL
	DED		W0142	71HZ			29-11-14	ALL
	DED		W0144	71HZ			29-11-14	ALL
TB0196X		P033-00/ /		MDL-TERMINAL BLOCK-P33				ALL
	DED		W0142	02NZ			30-31-11	ALL
	DED		W0142	657Z			30-31-23	ALL
	DED		W0142	806Z			27-62-11	ALL
	DED		W0142	860Z			30-33-11	ALL
	DED		W0142	861Z			30-33-11	ALL
	DED		W0144	01AZ			21-51-13	ALL
	DED		W0144	01BZ			21-51-13	ALL
	DED		W0144	01CZ			21-51-13	ALL
	DED		W0144	128Z			30-31-23	ALL
	DED		W0144	129Z			30-31-23	ALL
	DED		W0144	203Z			21-51-22	ALL
	DED		W0144	204Z			21-51-22	ALL
	DED		W0144	559Z			30-33-11	ALL
TB0196Y		P033-00/ /		MDL-TERMINAL BLOCK-P33				ALL
	DED		W0142	02RZ			30-32-11	ALL
	DED		W0142	02SZ			30-32-11	ALL
	DED		W0142	70CZ			29-11-14	ALL
	DED		W0142	805Z			27-62-11	ALL
	DED		W0142	850Z			30-32-21	ALL

HOOKUP LIST

D280T132

91-21-51

Section TB0100

Page 25 End

Feb 06/2009



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
TB0200D		P033-00/ /		DIODE BLOCK (R244)				ALL
	DED		W0142	08QZ			29-11-22	ALL
TB0200X		P033-00/ /		MDL-TERMINAL BLOCK-P33				ALL
	DED		W0142	897Z			30-31-11	ALL
TB0200Y		P033-00/ /		MDL-TERMINAL BLOCK-P33				ALL
	DED		W0142	71BZ			29-11-14	ALL
	DED		W0142	71FZ			29-11-14	ALL
	DED		W0144	538Z			30-32-11	ALL
TB0203F		0164/140/R020		MDL-TERMINAL BLOCK				ALL
			W0803	207Z			34-43-21	ALL
			W0803	208Z			34-43-21	ALL
			W0803	209Z			34-43-21	ALL
			W0803	FRA			34-43-21	ALL
			W0803	FRB			34-43-21	ALL
			W0803	FRC			34-43-21	ALL
			W0803	210Z			34-43-21	050-099, 151
			W0803	FRD			34-43-21	050-099, 151
TB0205G		SHELF/E01/02		MDL-TERMINAL BLOCK,E1-2				ALL
	REF		W1100	215Z			34-43-21	ALL
	REF		W1100	218Z			34-43-11	ALL
	REF		W1100	FRE			34-43-11	ALL
	REF		W1100	FRI			34-43-21	ALL
TB0209R		SHELF/E01/04		RESISTOR BLOCK (R525,R526,R529,R530)				050-099, 150-199
TB0209R		SHELF/E01/04		RESISTOR BLOCK (R525,R526)				275-299
			W0107	259Z			34-43-21	ALL
			W0107	FRB			34-43-21	ALL
			W0117	258Z			34-43-21	ALL
			W0117	FRB			34-43-21	ALL
TB0210X		P037-00/ /		MDL-TERMINAL BLOCK,P37				ALL
	DED		W0188	049Z			28-42-13	050-099, 155-199, 276-299
	DED		W0198	549Z			28-42-13	050-099, 155-199, 276-299
TB0211G		SHELF/E01/05		MDL-TERMINAL BLOCK,E1-5				ALL
	DED		W0109	911Z			34-46-13	150, 152-199, 275-299

HOOKUP LIST

D280T132

91-21-51

Section TB0200

Page 1

Mar 07/2008



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
TB0211G		SHELF/E01/05		MDL-TERMINAL BLOCK,E1-5 (continued)				ALL
	DED		W0109	913Z			34-46-13	150, 152-199, 275-299
	REF		W0109	235Z			34-43-21	ALL
	REF		W0109	FRA			34-43-21	ALL
	REF		W0109	238Z			34-43-11	050-099, 151
	REF		W0109	FRB			34-43-11	050-099, 151
TB0212Y		P037-00/ /		MDL-TERMINAL BLOCK,P37				ALL
	CAP	Y	W0192	66W	22		28-31-12	155-157, 165-199, 277-299
	DED		W0192	03SZ			21-58-11	ALL
	DED		W0192	126Z			29-11-12	ALL
	DED		W0192	511Z			21-58-11	ALL
	DED		W0192	546Z			29-11-12	ALL
	DED		W0188	043Z			28-31-12	051-099, 155-199, 277-299
	DED		W0192	66WZ			28-31-12	051-099, 155-199, 277-299
	DED		W0192	66XZ			28-31-12	051-099, 155-199, 277-299
	DED		W0198	02AZ			28-22-12	150-199
TB0212Z		P037-00/ /		MDL-TERMINAL BLOCK,P37				ALL
	DED		W0188	074Z			28-42-12	ALL
	DED		W0198	604Z			76-11-11	ALL
	DED		W0192	63CZ			28-42-12	050-099, 155-199, 276-299
TB0216F		P036-00/ /		MDL-TERMINAL BLOCK,P36				ALL
	DED		W0176	794Z			28-41-12	ALL
TB0216X		P036-00/ /		MDL-TERMINAL BLOCK,P36				ALL
	DED		W0180	122Z			27-32-31	ALL
TB0216Y		P036-00/ /		MDL-TERMINAL BLOCK,P36				050-099, 150-199
TB0216Y		P036-00/ /		MDL-TERMINAL BLOCK,P36 (SB 21-0139)				275-299
I	DED		W0176	697Z			28-22-12	ALL
I	DED		W0176	847Z			29-11-32	ALL
I	DED		W0184	765Z			28-22-12	ALL
TB0216Z		P036-00/ /		MDL-TERMINAL BLOCK,P36				ALL
	DED		W0184	01PZ			76-11-11	050-099, 150-154, 275-276
	DED		W0176	014Z			32-09-11	ALL
	DED		W0176	016Z			32-09-11	ALL
	DED		W0176	122Z			32-09-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section TB0200

Page 2

Aug 05/2009



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
TB0216Z		P036-00/ /		MDL-TERMINAL BLOCK,P36 (continued)				ALL
	DED		W0176	135Z			32-09-11	ALL
	DED		W0176	51WZ			32-09-11	ALL
	DED		W0176	528Z			32-09-11	ALL
	DED		W0176	674Z			32-09-11	ALL
	DED		W0184	034Z			32-09-11	ALL
TB0218X		P036-00/ /		MDL-TERMINAL BLOCK,P36				ALL
	DED		W0184	02KZ			28-22-12	150-199
TB0218Y		P036-00/ /		MDL-TERMINAL BLOCK,P36				ALL
	DED		W0176	51PZ			32-09-11	ALL
	DED		W0176	51UZ			32-09-11	ALL
	DED		W0176	51WZ			32-09-11	ALL
	DED		W0184	058Z			21-58-14	ALL
	DED		W0184	768Z			28-22-12	ALL
	DED		W0176	53BZ			28-42-13	050-099, 155-199, 276-299
	DED		W0176	53CZ			28-42-12	050-099, 155-199, 276-299
	DED		W0176	53KZ			28-42-13	050-099, 155-199, 276-299
	DED		W0184	10DZ			28-42-12	050-099, 155-199, 276-299
	DED		W0184	10EZ			28-42-13	050-099, 155-199, 276-299
	DED		W0184	16AZ			28-42-12	150-154, 275
TB0219		P010-00/ /		TB-TRACK,P10				ALL
	CAP	Y	W5150	L-C			32-42-12	ALL
TB0220F		P036-00/ /		MDL-TERMINAL BLOCK,P36				ALL
	DED		W0176	759Z			28-41-12	ALL
TB0220X		P036-00/ /		MDL-TERMINAL BLOCK,P36				ALL
	DED		W0176	058Z			21-58-14	ALL
	DED		W0176	563Z			29-11-12	ALL
	DED		W0176	752Z			27-09-12	ALL
	DED		W0180	017Z			27-09-12	ALL
	DED		W0180	154Z			29-11-12	ALL
	DED		W0184	058Z			21-58-14	ALL
TB0220Y		P036-00/ /		MDL-TERMINAL BLOCK,P36				ALL
			W0176	03TZ			78-34-11	ALL
			W0176	22WZ			78-34-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section TB0200

Page 3

Aug 05/2009



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
TB0222X		P036-00/ /		MDL-TERMINAL BLOCK,P36				ALL
	CAP	Y	W0176	017	24		SPARE	051-099, 150-154
	CAP	Y	W0176	018	24		SPARE	051-099, 150-154
	CAP	Y	W0182	034	24		SPARE	051-099, 150-154
	CAP	Y	W0182	035	24		SPARE	051-099, 150-154
	DED		W0176	05AZ			74-31-11	ALL
	DED		W0176	719Z			74-31-11	ALL
	DED		W0184	720Z			74-31-11	ALL
	DED		W0184	722Z			74-31-11	ALL
TB0237X		SHELF/E08/00		MDL-TERMINAL BLOCK,E8 SHELF				ALL
			W2004	201Z			31-41-31	050-099, 150-199
			W2004	205Z			31-41-32	050-099, 150-199
			W2006	201Z			31-41-33	050-099, 150-199
			W2006	205Z			31-41-34	050-099, 150-199
TB0237Z		SHELF/E08/00		MDL-TERMINAL BLOCK,E8 SHELF				ALL
	CAP	Y	W2002	CL17	24		SPARE	ALL
	CAP	Y	W2002	CL18	24		SPARE	ALL
	CAP	Y	W2002	CN17	24		SPARE	ALL
	CAP	Y	W2002	CN18	24		SPARE	ALL
			W2004	201Z			31-41-31	275-299
			W2004	205Z			31-41-32	275-299
			W2006	201Z			31-41-33	275-299
			W2006	205Z			31-41-34	275-299
TB0239Z		SHELF/E08/00		MDL-TERMINAL BLOCK,E8 SHELF				ALL
	DED		W1035	060Z			31-41-17	ALL
	REF	%	W1035	106	24		SPARE	050-099
	REF	%	W1037	085	24		SPARE	050-099
	REF	%	W1035	104	24		SPARE	ALL
	REF	%	W1035	105	24		SPARE	ALL
	REF	%	W1037	083	24		SPARE	ALL
	REF	%	W1037	084	24		SPARE	ALL
TB0241X		P001-00/ /		MDL-TERMINAL BLOCK,P1				ALL
	DED		W0011	007Z			34-22-81	ALL
TB0241Y		P001-00/ /		MDL-TERMINAL BLOCK,P1				ALL
	DED		W0011	800Z			31-31-20	050-099
	DED		W0011	066Z			34-22-81	ALL

HOOKUP LIST

D280T132

91-21-51

Section TB0200

Page 4

Feb 06/2009



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
TB0241Y		P001-00/ /		MDL-TERMINAL BLOCK,P1 (continued)				ALL
	DED		W0011	610Z			34-22-81	ALL
	REF		W0011	248Z			34-13-11	275-299
	REF		W0011	249Z			34-13-11	275-299
	REF		W0011	FRW			34-13-11	275-299
			W0011	248Z			34-13-11	050-099, 150-199
			W0011	249Z			34-13-11	050-099, 150-199
			W0011	FRW			34-13-11	050-099, 150-199
			W0011	215Z			34-22-81	ALL
			W0011	216Z			34-22-81	ALL
			W0011	241Z			34-22-91	ALL
			W0011	FRM			34-22-91	ALL
TB0243X		P003-00/ /		MDL-TERMINAL BLOCK,P3				ALL
	DED		W0011	01JZ			34-12-61	ALL
	DED		W0011	611Z			34-22-91	ALL
TB0243Y		P003-00/ /		MDL-TERMINAL BLOCK,P3				ALL
	DED		W0011	087Z			33-16-13	ALL
	DED		W0011	709Z			33-16-15	ALL
	DED		W0011	718Z			33-16-13	ALL
	DED		W0011	791Z			33-16-12	ALL
	DED		W0031	085Z			33-16-15	ALL
	DED		W0031	613Z			33-16-12	ALL
	DED		W0031	790Z			33-16-16	ALL
	DED		W0031	791Z			33-16-16	ALL
	DED		W0051	107Z			33-16-12	ALL
	DED		W0051	108Z			33-16-15	ALL
	REF		W0031	229Z			22-14-21	ALL
	REF		W0031	230Z			22-14-21	ALL
	REF		W0031	231Z			22-14-21	ALL
	REF		W0031	241Z			34-13-21	ALL
	REF		W0031	242Z			34-13-21	ALL
	REF		W0031	FRP			34-13-21	ALL
			W0011	218Z			34-22-81	ALL
			W0011	219Z			34-22-81	ALL
			W0011	253Z			34-22-81	ALL
			W0011	265Z			34-22-91	ALL
			W0011	267Z			34-22-91	ALL
			W0011	269Z			34-22-91	ALL
			W0011	FRO			34-22-91	ALL

HOOKUP LIST

D280T132

91-21-51

Section TB0200

Page 5

Feb 06/2009



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
TB0243Y		P003-00/ /		MDL-TERMINAL BLOCK,P3 (continued)				ALL
			W0011	FRR			34-22-91	ALL
			W0011	FRS			34-22-91	ALL
TB0245Y		P001-00/ /		MDL-TERMINAL BLOCK,P1				ALL
	DED		W0011	095Z			33-16-16	ALL
TB0245Z		P001-00/ /		MDL-TERMINAL BLOCK,P1				ALL
	DED		W0011	096Z			33-16-16	ALL
	DED		W0011	708Z			33-16-15	ALL
	REF		W0011	228Z			22-14-11	ALL
	REF		W0011	229Z			22-14-11	ALL
	REF		W0011	230Z			22-14-11	ALL
	REF		W0011	800Z			31-31-20	150-199, 275-299
TB0247X		0158/212/R033		MDL-TERMINAL BLOCK,P3				ALL
	DED		W0011	736Z			73-21-14	ALL
	DED		W0051	072Z			33-13-13	ALL
	DED		W0051	078Z			33-13-13	ALL
TB0247Y		P003-00/ /		MDL-TERMINAL BLOCK,P3				ALL
	DED		W0011	782Z			33-13-13	ALL
	DED		W0051	075Z			33-13-13	ALL
TB0247Z		P003-00/ /		MDL-TERMINAL BLOCK,P3				ALL
	DED		W0011	792Z			33-16-12	ALL
	DED		W0011	795Z			33-16-16	ALL
	DED		W0031	086Z			33-16-15	ALL
TB0248X		P050-00/ /		MDL-TERMINAL BLOCK,P50				ALL
	DED		W1114	082Z			30-34-11	ALL
	DED		W1114	043Z			31-51-41	150-199, 275-299
TB0248Y		P050-00/ /		MDL-TERMINAL BLOCK,P50				ALL
	DED		W1114	073Z			30-31-11	ALL
	DED		W1114	074Z			30-31-11	ALL
			W1078	109Z			73-21-17	275-276
			W1078	544Z			73-21-17	275-276
			W1078	FRY			73-21-17	275-276
			W1080	159Z			73-21-17	275-276

HOOKUP LIST

D280T132

91-21-51

Section TB0200

Page 6

Feb 06/2009



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
TB0248Y		P050-00/ /		MDL-TERMINAL BLOCK,P50 (continued)				ALL
			W1080	544Z			73-21-17	275-276
			W1080	FRK			73-21-17	275-276
TB0254Y		P037-00/ /		MDL-TERMINAL BLOCK,P37				ALL
	DED		W0198	622Z			25-33-11	050-099
TB0257H		SHELF/E09/01		MDL-TERMINAL BLOCK,E9-1 (MTO 230591)				150, 153-155, 162-165
TB0257H		SHELF/E09/01		MDL-TERMINAL BLOCK,E9-1				150, 153-199, 277-299
	CAP	Y	W0091	069	20		23-25-16	167-199
TB0266X		P033-00/ /		MDL-TERMINAL BLOCK				ALL
			W0142	11XZ			78-34-11	ALL
			W0142	11YZ			78-34-11	ALL
			W0142	FRA			78-34-11	ALL
			W0144	825Z			78-34-11	ALL
			W0144	826Z			78-34-11	ALL
			W0144	FRB			78-34-11	ALL
TB0268X		P033-00/ /		MDL-TERMINAL BLOCK,P33				ALL
	DED		W0142	10SZ			28-22-31	ALL
	DED		W0142	10TZ			28-22-31	ALL
	DED		W0144	651Z			28-22-31	ALL
	DED		W0144	658Z			28-22-31	ALL
TB0268Y		P033-00/ /		MDL-TERMINAL BLOCK				ALL
	DED		W0142	10LZ			28-22-31	ALL
	DED		W0142	10MZ			28-22-31	ALL
	DED		W0144	647Z			28-22-31	ALL
	DED		W0144	648Z			28-22-31	ALL
	DED		W0144	655Z			28-22-31	ALL
	DED		W0144	656Z			28-22-31	ALL
TB0272D		P036-00/ /		DIODE BLOCK				ALL
	CAP	Y	W0176	93F	24		SPARE	150-154
	CAP	Y	W0176	93P	24		36-11-61	150-154
	CAP	Y	W0176	93F	24		36-11-61	275
	CAP	Y	W0176	93P	24		SPARE	275

HOOKUP LIST

D280T132

91-21-51

Section TB0200

Page 7

Feb 06/2009



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
TB0272F		P036-00/ /		MDL-TERMINAL BLOCK				ALL
	DED		W0180	104Z			25-31-21	ALL
	DED		W0180	105Z			25-31-21	ALL
	DED		W0180	106Z			25-31-31	277-299
	DED		W0180	107Z			25-31-31	277-299
TB0272G		P036-00/ /		MDL-TERMINAL BLOCK				ALL
	DED		W0176	767Z			28-41-21	ALL
	DED		W0176	795Z			28-41-12	ALL
	DED		W0176	826Z			28-41-12	ALL
	DED		W0176	827Z			28-41-12	ALL
TB0272X		P036-00/ /		MDL-TERMINAL BLOCK				ALL
	DED		W0176	05FZ			28-25-11	ALL
	DED		W0176	05GZ			28-25-11	ALL
	DED		W0176	818Z			78-36-11	ALL
TB0272Y		P036-00/ /		MDL-TERMINAL BLOCK				ALL
	CAP	Y	W0184	218B	24		77-12-11	150-155, 275-276
	CAP	Y	W0184	218R	24		77-12-11	150-155, 275-276
	CAP	Y	W0184	218B	24		77-12-11	156-157
	CAP	Y	W0184	218R	24		77-12-11	156-157
	DED		W0184	218Z			77-12-11	150-157, 275-276
TB0274D		P037-00/ /		DIODE BLOCK (R314)				ALL
	CAP	Y	W0192	66A	24		SPARE	050-099, 155-156, 162-166
	DED		W0188	126Z			29-11-12	ALL
TB0274X		P037-00/ /		MDL-TERMINAL BLOCK				ALL
	DED		W0192	857Z			78-36-21	ALL
	DED		W0192	04GZ			21-58-14	150-154, 275
TB0274Y		P037-00/ /		MDL-TERMINAL BLOCK				ALL
	CAP	Y	W0192	51C	24		78-36-21	050-099, 150-156, 162-166, 275-276
	CAP	Y	W0192	51F	24		78-36-21	050-099, 150-156, 162-166, 275-276
	CAP	Y	W0192	51B	24		78-36-21	050-099, 151, 162-166, 275-276
	CAP	Y	W0192	51C	24		SPARE	157, 167-199, 277-299
	CAP	Y	W0192	51F	24		SPARE	157, 167-199, 277-299
	CAP	Y	W0192	51B	24		SPARE	167-199, 277-299
	DED		W0192	78BZ			78-34-21	ALL

HOOKUP LIST

D280T132

91-21-51

Section TB0200

Page 8

Feb 06/2009



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
TB0274Y		P037-00/ /		MDL-TERMINAL BLOCK (continued)				ALL
	DED		W0198	634Z			78-34-21	ALL
TB0288D		SHELF/E01/02		DIODE BLOCK-(R179 THRU R184)				ALL
	DED		W1092	039Z			32-61-14	ALL
	DED		W1092	041Z			32-61-14	ALL
	DED		W1092	042Z			32-61-14	ALL
	DED		W1092	043Z			32-61-14	ALL
	DED		W1092	721Z			32-61-14	ALL

HOOKUP LIST

D280T132

91-21-51

Section TB0200

Page 9 End

Feb 06/2009



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
TB0302D		P036-00/ /		DIODE BLOCK (R441)				050-099, 155-199, 276-299
	DED		W0176	75CZ			28-31-12	050-099, 155-199, 276-299
	DED		W0176	75EZ			28-31-12	050-099, 155-199, 276-299
	DED		W0184	10BZ			28-31-12	050-099, 155-199, 276-299
	DED		W0176	76QZ			28-31-12	050-099, 155-199, 277-299
TB0302X		P036-00/ /		MDL-TERMINAL BLOCK				ALL
	DED		W0176	04UZ			32-41-11	ALL
TB0302Y		P036-00/ /		MDL-TERMINAL BLOCK				ALL
	DED		W0176	03YZ			27-23-11	ALL
	DED		W0176	653Z			27-23-11	ALL
	DED		W0176	768Z			28-42-11	ALL
	DED		W0176	83BZ			78-34-11	ALL
	DED		W0176	883Z			28-42-11	ALL
	DED		W0176	884Z			28-42-11	ALL
	DED		W0184	02HZ			78-34-11	ALL
TB0304D								050-099, 155-199, 276-299
	DED		W0192	66GZ			28-31-12	050-099, 155-199, 276-299
	DED		W0192	66JZ			28-31-12	050-099, 155-199, 276-299
	DED		W0198	516Z			28-31-12	050-099, 155-199, 276-299
	DED		W0192	66XZ			28-31-12	050-099, 155-199, 277-299
	DED		W0188	043Z			28-31-12	276
TB0304H		P037-00/ /		MDL-TERMINAL BLOCK,P36				ALL
	DED		W0192	67LZ			73-21-11	ALL
	DED		W0192	67NZ			73-21-11	ALL
TB0304X		P037-00/ /		MDL-TERMINAL BLOCK				ALL
	DED		W0188	122Z			29-11-22	ALL
	DED		W0192	01NZ			29-11-22	ALL
	DED		W1118	203Z			21-51-21	ALL
TB0304Y		P037-00/ /		MDL-TERMINAL BLOCK				ALL
	CAP	Y	W0192	278R	24		77-12-11	050-099
	CAP	Y	W0192	278B	24		77-12-11	ALL
	CAP	Y	W0192	278R	24		77-12-11	150-199, 275-299
	CAP	Y	W0188	11F	24		21-28-11	151-154
	DED		W0192	278Z			77-12-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section TB0300

Page 1

Feb 06/2009



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
TB0304Y		P037-00/ /		MDL-TERMINAL BLOCK (continued)				ALL
	DED		W0192	63BZ			28-42-13	050-099, 155-199, 276-299
	DED		W0192	63WZ			28-42-13	050-099, 155-199, 276-299
	DED		W0192	63YZ			28-42-13	050-099, 155-199, 276-299
	DED		W0192	67AZ			28-31-11	050-099, 155-199, 276-299
	DED		W0192	67FZ			28-31-11	050-099, 155-199, 276-299
	DED		W0192	67GZ			28-31-11	050-099, 155-199, 276-299
TB0314X		P037-00/ /		MDL-TERMINAL BLOCK				ALL
	DED		W0192	70CZ			21-28-11	050-099
	DED		W1118	11YZ			21-28-11	050-099
	DED		W1118	13DZ			21-28-11	050-099
	DED		W1118	70AZ			21-28-11	050-099
TB0314Z		P037-00/ /		MDL-TERMINAL BLOCK,P37				ALL
	CAP	Y	W1118	11X	24		21-26-31	ALL
TB0318H		P036-00/ /		MDL-TERMINAL BLOCK				ALL
	DED		W0176	18KZ			73-21-11	ALL
	DED		W0176	18MZ			73-21-11	ALL
TB0318X		P036-00/ /		MDL-TERMINAL BLOCK				ALL
			W0176	41FZ			21-66-41	050-099, 150, 152-199
			W0176	43EZ			21-66-31	050-099, 150, 152-199
			W0176	43F	20		21-66-41	050-099, 150, 152-199
			W0176	64E	20		21-66-31	050-099, 150, 152-199
			W0176	28E	20		21-66-21	050-099, 162-199
			W0176	39FZ			21-66-11	050-099, 162-199
			W0176	40FZ			21-66-21	050-099, 162-199
			W0176	42F	20		21-66-11	050-099, 162-199
TB0318Y		P036-00/ /		MDL-TERMINAL BLOCK				ALL
	CAP	Y	W0184	218B	24		77-12-11	050-099, 162-165
	CAP	Y	W0184	218R	24		77-12-11	050-099, 166-199, 277-299
	CAP	Y	W0184	218R	24		77-12-11	162-165
	CAP	Y	W0184	218B	24		77-12-11	166-199, 277-299
	DED		W0184	218Z			77-12-11	050-099, 162-199, 277-299
TB0318Z		P036-00/ /		MDL-TERMINAL BLOCK				ALL
			W0176	22WZ			78-34-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section TB0300

Page 2

Feb 06/2009



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
TB0318Z		P036-00/ /		MDL-TERMINAL BLOCK (continued)				ALL
			W0176	67HZ			78-34-11	ALL
			W0176	84J	20		78-34-11	ALL
TB0320		P037-00/ /		TB-TRACK,P37				ALL
	DED		W0198	622Z			SPARE	280-299
TB0320Y		P037-00/ /		MDL-TERMINAL BLOCK				ALL
	DED		W0188	043Z			28-31-12	050
	DED		W0192	66WZ			28-31-12	050
	DED		W0192	66XZ			28-31-12	050
TB0322F		0331/173/L048		MDL-TERMINAL BLOCK,E1 FWD L OUTBD STAN				150-199, 275-299
			W0622	201Z			30-41-11	ALL
			W0622	202Z			30-41-11	ALL
			W0622	203Z			30-41-11	ALL
			W0622	204Z			30-41-11	ALL
			W0622	205Z			30-41-11	ALL
			W0622	206Z			30-41-11	ALL
			W0622	212Z			30-41-11	ALL
			W0622	213Z			30-41-11	ALL
			W0622	214Z			30-41-11	ALL
TB0324F		0331/173/R044		MDL-TERMINAL BLOCK,E2 FWD R OUTBD STAN				150-199, 275-299
			W0624	202Z			30-41-12	ALL
			W0624	203Z			30-41-12	ALL
			W0624	204Z			30-41-12	ALL
			W0624	205Z			30-41-12	ALL
			W0624	206Z			30-41-12	ALL
			W0624	209Z			30-41-12	ALL
			W0624	215Z			30-41-12	ALL
			W0624	216Z			30-41-12	ALL
			W0624	217Z			30-41-12	ALL

HOOKUP LIST

D280T132

91-21-51

Section TB0300

Page 3 End

Feb 06/2009



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
TB0450D		P089-00/ /		DIODE BLOCK (R441)				150-154, 275-276
	DED		W0892	031Z			28-31-22	150-154, 275
	DED		W0892	035Z			28-31-22	150-154, 275
	DED		W0892	036Z			28-31-22	150-154, 275
	DED		W0892	037Z			28-31-22	150-154, 275
TB0450G		P089-00/ /		MDL-TERMINAL BLOCK,P089 (SB 28-0027)				150-154, 275-276
	DED		W0892	013Z			28-31-22	150-154, 275
	DED		W0892	020Z			28-31-22	150-154, 275
	DED		W0894	021Z			28-31-22	150-154, 275
TB0452D		P089-00/ /		DIODE BLOCK (R442,R470,R471)(SB 28-0027)				150-154, 275-276
	DED		W0892	037Z			28-31-22	150-154, 275
	DED		W0894	031Z			28-31-22	150-154, 275
	DED		W0894	035Z			28-31-22	150-154, 275
	DED		W0894	036Z			28-31-22	150-154, 275
TB0458D		P033-00/ /		DIODE BLOCK (R700,R702,R704)				ALL
	DED		W0140	179Z			78-36-11	ALL
	DED		W0140	181Z			78-36-11	ALL
	DED		W0144	729Z			78-36-11	ALL
	DED		W0144	742Z			78-36-11	ALL
TB0458X		P033-00/ /		MDL-TERMINAL BLOCK-P33				ALL
	DED		W0140	177Z			78-36-11	ALL
	DED		W0140	178Z			78-36-11	ALL
	DED		W0140	180Z			78-36-11	ALL
	DED		W0140	182Z			78-36-11	ALL
	DED		W0144	725Z			78-36-11	ALL
	DED		W0144	734Z			78-36-11	ALL
	DED		W0144	735Z			78-36-11	ALL
	DED		W0144	744Z			78-36-11	ALL
TB0458Y		P033-00/ /		MDL-TERMINAL BLOCK-P33				ALL
	DED		W0140	001Z			78-34-11	ALL
	DED		W0140	005Z			78-34-11	ALL
	DED		W0140	018Z			78-34-11	ALL
	DED		W0146	065Z			78-34-11	ALL
			W0140	028Z			78-34-11	ALL
			W0140	030Z			78-34-11	ALL
			W0140	034	20		78-34-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section TB0400

Page 1

Feb 06/2009



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
TB0458Y		P033-00/ /		MDL-TERMINAL BLOCK-P33 (continued)				ALL
			W0144	838Z			78-34-11	ALL
			W0144	839Z			78-34-11	ALL
			W0144	840	20		78-34-11	ALL
TB0458Z		P033-00/ /		MDL-TERMINAL BLOCK-P33				ALL
	DED		W0140	183Z			78-36-11	ALL
			W0140	015Z			78-34-11	ALL
			W0140	017Z			78-34-11	ALL
			W0140	026Z			78-34-11	ALL
			W0140	167Z			78-34-11	ALL
			W0140	168Z			78-34-11	ALL
			W0140	176	20		78-34-11	ALL
			W0144	879Z			78-34-11	ALL
			W0144	882	20		78-34-11	ALL
TB0460Y		P033-00/ /		MDL-TERMINAL BLOCK-P33				ALL
	DED		W0136	015Z			78-34-21	ALL
	DED		W0136	019Z			78-34-21	ALL
	DED		W0136	024Z			78-34-21	ALL
	DED		W0146	064Z			78-34-21	ALL
			W0136	050Z			78-34-21	ALL
			W0136	051	20		78-34-21	ALL
			W0136	052Z			78-34-21	ALL
			W0142	12HZ			78-34-21	ALL
			W0142	12JZ			78-34-21	ALL
			W0142	12K	20		78-34-21	ALL
TB0460Z		P033-00/ /		MDL-TERMINAL BLOCK-P33				ALL
			W0136	026Z			78-34-21	ALL
			W0136	027Z			78-34-21	ALL
			W0136	043Z			78-34-21	ALL
			W0136	045Z			78-34-21	ALL
			W0136	070Z			78-34-21	ALL
			W0136	073	20		78-34-21	ALL
			W0142	12GZ			78-34-21	ALL
			W0142	13Q	20		78-34-21	ALL

HOOKUP LIST

D280T132

91-21-51

Section TB0400

Page 2 End

Feb 06/2009



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
TB5022		0218/286/R015		TS-GEN PWR BUS R P11				ALL
	DED		W0038	032Z			24-51-31	ALL
	DED		W0038	034Z			24-51-31	ALL

HOOKUP LIST

D280T132

91-21-51

Section TB5000

Page 1 End

Feb 06/2009



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
TB5126		R0990/12/RS		TS-FUEL OVERFILL SHUTOFF CONTROL				ALL
	DED		W1302	001Z			28-21-12	ALL
TB5128		L0990/12/RS		TS-FUEL OVERFILL SHUTOFF CONTROL				ALL
	DED		W1300	001Z			28-21-12	ALL

HOOKUP LIST

D280T132

91-21-51

Section TB5100

Page 1 End

Feb 06/2009



Equip	Station / WL / BL	Description	GA	CO	Diagram	Effectivity
Term	Type	Bundle	Wire No.			
TS0035	P010-00/ /	XDCR 1-LIN VAR DISPL,SPD BK				ALL
	BLK	W5150	M-B		27-61-15	ALL
	BLK	W5150	N-B		27-61-17	ALL
	BLU	W5150	M-E		27-61-15	ALL
	BLU	W5150	N-E		27-61-17	ALL
	ORG	W5150	M-D		27-61-15	ALL
	ORG	W5150	N-D		27-61-17	ALL
	PUR	W5150	M-F		27-61-15	ALL
	PUR	W5150	N-F		27-61-17	ALL
	RED	W5150	M-A		27-61-15	ALL
	RED	W5150	N-A		27-61-17	ALL
	YEL	W5150	M-C		27-61-15	ALL
	YEL	W5150	N-C		27-61-17	ALL
TS0036	0171/209/0000	XDCR 2-LIN VAR DISPL,SPD BK				ALL
	BLK	W5150	P-B		27-61-14	ALL
	BLK	W5150	R-B		27-61-13	ALL
	BLU	W5150	P-E		27-61-14	ALL
	BLU	W5150	R-E		27-61-13	ALL
	ORG	W5150	P-D		27-61-14	ALL
	ORG	W5150	R-D		27-61-13	ALL
	PUR	W5150	P-F		27-61-14	ALL
	PUR	W5150	R-F		27-61-13	ALL
	RED	W5150	P-A		27-61-14	ALL
	RED	W5150	R-A		27-61-13	ALL
	YEL	W5150	P-C		27-61-14	ALL
	YEL	W5150	R-C		27-61-13	ALL
TS0037	0171/209/0000	XDCR 3-LIN VAR DISPL,SPD BK				ALL
	BLK	W5150	S-B		27-61-16	ALL
	BLK	W5150	T-B		27-61-18	ALL
	BLU	W5150	S-E		27-61-16	ALL
	BLU	W5150	T-E		27-61-18	ALL
	ORG	W5150	S-D		27-61-16	ALL
	ORG	W5150	T-D		27-61-18	ALL
	PUR	W5150	S-F		27-61-16	ALL
	PUR	W5150	T-F		27-61-18	ALL
	RED	W5150	S-A		27-61-16	ALL
	RED	W5150	T-A		27-61-18	ALL
	YEL	W5150	S-C		27-61-16	ALL
	YEL	W5150	T-C		27-61-18	ALL

HOOKUP LIST

D280T132

91-21-51

Section TS0000

Page 1 End

Feb 06/2009



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
TS0102		P036-00/ /		SNSR-CURRENT, FORWARD RACK SUPPLY FAN 1				ALL
	1		W0176	A-C			21-58-14	ALL
	2		W0176	A-D			21-58-14	ALL
TS0168		WS 335/ /		SNSR-FUEL TANK, LEFT				ALL
	RED		W0446	A-A			28-43-11	ALL
	RED		W0446	A-B			28-43-11	ALL
	WHT		W0446	A-E			31-31-25	ALL
	WHT		W0446	A-F			31-31-25	ALL
TS0187		P007-00/ /		SNSR-EFIS REMOTE LIGHT, LEFT				ALL
	BLK		W1052	A-E			34-22-15	ALL
	BLU		W1052	A-B			34-22-15	ALL
	ORG		W1052	A-C			34-22-15	ALL
	RED		W1052	A-A			34-22-15	ALL
	YEL		W1052	A-D			34-22-15	ALL
TS0188		P007-00/ /		SNSR-EFIS REMOTE LIGHT, RIGHT				ALL
	BLK		W1054	A-E			34-22-25	ALL
	BLU		W1054	A-B			34-22-25	ALL
	ORG		W1054	A-C			34-22-25	ALL
	RED		W1054	A-A			34-22-25	ALL
	YEL		W1054	A-D			34-22-25	ALL
TS0192		P036-00/ /		SNSR-CURRENT, RECIRC FAN, LEFT				ALL
	1		W0176	A-G			21-25-11	ALL
	2		W0176	A-K			21-25-11	ALL
	3		W0176	A-H			21-25-11	ALL
	4		W0176	A-B			21-25-11	ALL
	5		W0176	A-A			21-25-11	ALL
TS0193		P037-00/ /		SNSR-CURRENT, RECIRC FAN, RIGHT				ALL
	1		W0192	A-J			21-25-21	ALL
	2		W0192	A-L			21-25-21	ALL
	3		W0192	A-K			21-25-21	ALL
	4		W0192	A-B			21-25-21	ALL
	5		W0192	A-A			23-25-21	050-099
	5		W0192	A-A			21-25-21	150-199, 275-299

HOOKUP LIST

D280T132

91-21-51

Section TS0100

Page 1

Feb 06/2009



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
TS0195		0990/012/L080		SNSR-FUEL LEVEL,LEFT SURGE TANK				ALL
	GRN		W1300	A-B			28-21-12	ALL
	WHT		W1300	A-C			28-21-12	ALL
	YEL		W1300	A-A			28-21-12	ALL
TS0196		R/ /RS		SNSR-FUEL LEVEL,RIGHT SURGE TANK				ALL
	GRN		W1302	A-B			28-21-12	ALL
	WHT		W1302	A-C			28-21-12	ALL
	YEL		W1302	A-A			28-21-12	ALL

HOOKUP LIST

D280T132

91-21-51

Section TS0100

Page 2 End

Feb 06/2009



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
TS0230		P037-00/ /		SNSR-CURRENT,FWD RACK EXHAUST FAN				ALL
	1		W0192	A-E			21-58-15	ALL
	2		W0192	A-F			21-58-15	ALL
TS0236		NL201/154/		SW, THERMAL				ALL
	=1	D1	W0356	400R	18		26-18-12	ALL
	=1	D1	W0356	453R	18		26-18-12	ALL
	=2	D1	W0356	454R	18		26-18-12	ALL
TS0237		NR213/154/		SW, THERMAL				ALL
	=1	D1	W0356	451R	18		26-18-12	ALL
	=1	D1	W0356	453R	18		26-18-12	ALL
	=2	D1	W0356	455R	18		26-18-12	ALL
TS0238		NL201/154/		SW, THERMAL				ALL
	=1	D1	W0376	400R	18		26-18-22	ALL
	=1	D1	W0376	453R	18		26-18-22	ALL
	=2	D1	W0376	454R	18		26-18-22	ALL
TS0239		NR213/154/		SW, THERMAL				ALL
	=1	D1	W0376	451R	18		26-18-22	ALL
	=1	D1	W0376	453R	18		26-18-22	ALL
	=2	D1	W0376	455R	18		26-18-22	ALL
TS0245		P037-00/ /		SNSR-CURRENT,AFT EXHAUST FAN 1				ALL
	1		W0192	A-G			21-26-11	ALL
	2		W0192	A-H			21-26-11	ALL
TS0246		P036-00/ /		SNSR-CURRENT,AFT EXHAUST FAN 2				ALL
	1		W0176	A-E			21-26-11	ALL
	2		W0176	A-F			21-26-11	ALL
TS0281		P001-03/ /		SENSOR-AUTOBRIGHT				ALL
	A1	1A	W0013	163	24		33-16-11	ALL
	A2	1A	W0013	165	24		33-16-11	ALL
	A3	1A	W0013	164	24		33-16-11	ALL
	B1	1A	W0013	167	24		33-16-11	ALL
	B2	1A	W0013	169	24		33-16-11	ALL
	B3	1A	W0013	168	24		33-16-11	ALL
	G	B	W0013	166	24		33-16-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section TS0200

Page 1

Feb 06/2009



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
TS0281		P001-03/ /		SENSOR-AUTOBRIGHT (continued)				ALL
	DED		W0013	163Z			33-16-11	ALL
	DED		W0013	164Z			33-16-11	ALL
	DED		W0013	165Z			33-16-11	ALL
TS0289		P036-00/ /		SNSR-CURRENT,GASPER FAN				050-099, 150-199
	1		W0176	A-M			21-24-11	050-099, 150-199
	2		W0176	A-N			21-24-11	050-099, 150-199
	3		W0176	A-P			21-24-11	050-099, 150-199
	4		W0176	A-Q			21-24-11	050-099, 150-199
	5		W0176	A-R			21-24-11	050-099, 150-199
	CAP	Y	W0176	A-R			21-24-11	050-099, 150-199

HOOKUP LIST

D280T132

91-21-51

Section TS0200

Page 2 End

Feb 06/2009



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
TS0493		P037-00/ /		SNSR-CURRENT,FWD CARGO VENT FAN				ALL
	1		W1118	A-A			21-26-31	ALL
	2		W1118	A-C			21-26-31	ALL
	CAP	Y	W1118	A-A			21-26-31	050-099, 277-299
TS0494		P037-00/ /		SNSR-CURRENT,CGO GND EXH FAN				ALL
	1		W1118	A-E			21-26-31	ALL
	2		W1118	A-F			21-26-31	ALL

HOOKUP LIST

D280T132

91-21-51

Section TS0400

Page 1 End

Feb 06/2009



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
TS0523		0547/150/L080		TEMP SENSOR-SKIN TEMP				050-099, 162-199
	1		W1230	A-B			21-66-11	050-099, 162-199
	2		W1230	B-A			21-66-11	050-099, 162-199
TS0524		P036-00/ /		CURRENT SENSOR-FLT DK CREW REST FAN				050-099, 162-199
	1		W0176	A-I			21-66-11	050-099, 162-199
	2		W0176	A-O			21-66-11	050-099, 162-199
	3		W0176	A-S			21-66-11	050-099, 162-199
	4		W0176	A-T			21-66-11	050-099, 162-199
	5		W0176	A-U			21-66-11	050-099, 162-199
TS0525		P037-00/ /		CURRENT SENSOR-FWD CABIN CREW REST FAN				050-099, 162-199
	1		W0192	A-I			21-66-21	050-099, 162-199
	2		W0192	A-O			21-66-21	050-099, 162-199
	3		W0192	A-R			21-66-21	050-099, 162-199
	4		W0192	A-P			21-66-21	050-099, 162-199
	5		W0192	A-Q			21-66-21	050-099, 162-199
	CAP	Y	W0192	A-R			21-66-21	050-099, 162-199
TS0526		P036-00/ /		CURRENT SENSOR-AFT LH CABIN CREW REST				050-099, 162-199
TS0526		P036-00/ /		CURRENT SENOR-AFT LH CABIN CREW REST				150, 152-157
	1		W0176	B-I			21-66-31	050-099, 150, 152-199
	2		W0176	B-H			21-66-31	050-099, 150, 152-199
	3		W0176	B-N			21-66-31	050-099, 150, 152-199
	4		W0176	B-L			21-66-31	050-099, 150, 152-199
	5		W0176	B-M			21-66-31	050-099, 150, 152-199
TS0527		P037-00/ /		CURRENT SENSOR-AFT RH CBN CREW REST FAN				050-099, 150, 152-199
	1		W0192	A-S			21-66-41	050-099, 150, 152-199
	2		W0192	A-T			21-66-41	050-099, 150, 152-199
	3		W0192	A-W			21-66-41	050-099, 150, 152-199
	4		W0192	A-U			21-66-41	050-099, 150, 152-199
	5		W0192	A-V			21-66-41	050-099, 150, 152-199
	CAP	Y	W0192	A-W			21-66-41	050-099, 150, 152-199

HOOKUP LIST

D280T132

91-21-51

Section TS0500

Page 1 End

Feb 06/2009



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
TS0681		ENG/ /		ENG UPR AFT FIRE DET				ALL
	A/1	G3	W3506	452R	16		26-11-11	ALL
	A/1	GW	W3512	451R	16		26-11-11	ALL
	B/2	G3	W3512	452R	16		26-11-11	ALL
	B/2	GW	W3520	452R	16		26-11-11	ALL
TS0682		ENG/ /		DET-FIRE,ENG LWR AFT				ALL
	A/1	G3	W3514	451R	16		26-11-11	ALL
	A/1	GW	W3512	451R	16		26-11-11	ALL
	B/2	G3	W3512	452R	16		26-11-11	ALL
	B/2	GW	W3514	452R	16		26-11-11	ALL
TS0683		ENG/ /		DET-FIRE,ENG LWR FWD				050-099, 162-199, 277-299
	A/1	G3	W3516	452R	16		26-11-11	ALL
	A/1	GW	W3514	451R	16		26-11-11	ALL
	B/2	G3	W3514	452R	16		26-11-11	ALL
	B/2	GW	W3522	452R	16		26-11-11	ALL
TS0684		ENG/ /		DET-OVHT,ENG,UPPER FWD				ALL
	A/1	G3	W3516	451R	16		26-11-12	ALL
	A/1	GW	W3506	451R	16		26-11-12	ALL
	B/2	G3	W3520	451R	16		26-11-12	ALL
	B/2	GW	W3522	451R	16		26-11-12	ALL

HOOKUP LIST

D280T132

91-21-51

Section TS0600

Page 1 End

Feb 06/2009



767-200/300 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
V00029		L0345/159/MS		VALVE-NO.1 ANTISKID				ALL
	GND	N	W0446	062	18		32-42-11	ALL
V00030		L0345/159/MS		VALVE-NO.2 ANTISKID				ALL
	GND	N	W0450	023	18		32-42-11	ALL
V00031		L0345/159/MS		VALVE-NO.5 ANTISKID				ALL
	GND	N	W0446	063	18		32-42-11	ALL
V00032		L0345/159/MS		VALVE-NO.6 ANTISKID				ALL
	GND	N	W0450	024	18		32-42-11	ALL
V00033		R0345/159/MS		VALVE-NO.3 ANTISKID				ALL
	GND	N	W0448	045	18		32-42-11	ALL
V00034		R0345/159/MS		VALVE-NO.4 ANTISKID				ALL
	GND	N	W0452	024	18		32-42-11	ALL
V00035		R0345/159/MS		VALVE-NO.7 ANTISKID				ALL
	GND	N	W0448	046	18		32-42-11	ALL
V00036		R0345/159/MS		VALVE-NO.8 ANTISKID				ALL
	GND	N	W0452	025	18		32-42-11	ALL
V00037		L0345/159/RS		VALVE-NO.(1+2) ANTISKID ALTERNATE				ALL
	GND	N	W0446	064	18		32-42-11	ALL
V00038		L0345/159/RS		VALVE-NO.(5+6) ANTISKID ALTERNATE				ALL
	GND	N	W0450	025	18		32-42-11	ALL
V00039		R0345/159/RS		VALVE-NO.(3+4) ANTISKID ALTERNATE				ALL
	GND	N	W0448	047	18		32-42-11	ALL
V00040		R0345/159/RS		VALVE-NO.(7+8) ANTISKID ALTERNATE				ALL
	GND	N	W0452	026	18		32-42-11	ALL

HOOKUP LIST

D280T132

91-21-51

Section V00000

Page 1 End

Feb 06/2009



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
I V00347		NL167/116/M021		VALVE-HP SHUTOFF				ALL
I V00347		NL167/116/M021		VALVE-HP SHUTOFF (SB 36-0053)				ALL
	1	GW	W3510	017	18		36-11-61	ALL
	1	GW	W3510	045	18		36-11-61	ALL
	2	GW	W3510	016	18		36-11-61	ALL
	3	GW	W3510	018	18		36-11-61	ALL
	3	GW	W3510	044	18		36-11-61	ALL
V00348		NL185/124/L012		VALVE-FAN AIR CONTROL				ALL
	1	GW	W3540	001	18		36-23-11	ALL
	2	GW	W3540	002	18		36-23-11	ALL
	3	GW	W3540	003	18		36-23-11	ALL
I V00352		NL167/116/018		VALVE-PRESSURE REGULATING (SB 36-0053)				ALL
I V00352		NL167/116/018		VALVE-PRESSURE REGULATING				ALL
	1	GW	W3508	034	18		36-11-61	ALL
	1	GW	W3508	040	18		36-11-61	ALL
	2	GW	W3508	035	18		36-11-61	ALL
	3	GW	W3508	036	18		36-11-61	ALL
	3	GW	W3508	037	18		36-11-61	ALL

HOOKUP LIST

D280T132

91-21-51

Section V00300

Page 1 End

Aug 05/2009