

91-21-13

MASTER BUNDLE LIST



91-21-13
MASTER BUNDLE LIST

Section	Page	Date	Section	Page	Date	Section	Page	Date
EFFECTIVE PAGES			W0100	1	Feb 06/2009	W0170 cont.		
	1 thru 5	Aug 05/2009		2	Mar 07/2008		5	Feb 06/2009
	6	BLANK		3	Mar 09/2006	W0180	1	Jun 28/2006
W0010	1	Mar 09/2006		4	Mar 09/2006	R	2	Aug 05/2009
	2	Mar 09/2006		5	Mar 09/2006		3	Mar 09/2006
	3	Jun 06/2008	R W0110	1	Aug 05/2009		4	Mar 09/2006
	4	Mar 09/2006		2	Jun 28/2006	W0190	1	Mar 09/2006
W0020	1	Mar 09/2006		1	Jun 28/2006		2	Mar 09/2006
	2	Mar 09/2006	R	2	Aug 05/2009		3	Mar 09/2006
	3	Mar 09/2006		1	Jun 28/2006		4	Feb 06/2009
R W0030	1	Aug 05/2009		2	Jun 28/2006		5	Feb 06/2009
	2	Jun 28/2006		3	Mar 09/2006	W0200	1	Mar 09/2006
W0040	1	Jun 06/2008	R	4	Aug 05/2009		2	Mar 09/2006
	2	Mar 07/2008		1	Mar 09/2006	W0210	1	Aug 15/2007
R	3	Aug 05/2009	W0140	2	Mar 09/2006	R W0220	1	Aug 05/2009
	4	Mar 09/2006		3	Mar 09/2006		2	Aug 15/2007
W0050	1	Mar 09/2006		4	Mar 09/2006	W0230	1	Aug 15/2007
	2	Mar 09/2006		5	Mar 09/2006	W0240	1	Aug 15/2007
W0060	1	Mar 09/2006		6	Mar 09/2006	R	2	Aug 05/2009
	2	Feb 06/2009		7	Jun 28/2006	R W0250	1	Aug 05/2009
	3	Jun 28/2006		8	Mar 09/2006		2	Feb 06/2009
	4	Mar 09/2006	W0150	1	Mar 09/2006	W0260	1	Sep 04/2008
R	5	Aug 05/2009		2	Mar 09/2006		2	Jan 21/2005
W0070	1	Mar 09/2006	W0160	1	Mar 09/2006	W0270	1	Mar 09/2006
	2	Mar 09/2006	W0170	1	Mar 09/2006		2	Mar 09/2006
W0080	1	Mar 09/2006		2	Mar 09/2006	W0280	1	Jun 06/2008
W0090	1	Mar 09/2006		3	Mar 09/2006	R W0290	1	Aug 05/2009
	2	Mar 09/2006		4	Mar 09/2006	R W0300	1	Aug 05/2009

A = Added, R = Revised, D = Deleted, O = Overflow

MASTER BUNDLE LIST

D280T132

EFFECTIVE PAGES

Page 1
Aug 05/2009



91-21-13
MASTER BUNDLE LIST

Section	Page	Date	Section	Page	Date	Section	Page	Date
W0310	1	Aug 15/2007	W0500	1	Aug 15/2007	R W0660	1	Aug 05/2009
R W0320	1	Aug 05/2009		2	Jun 06/2008		2	Aug 15/2007
R W0330	1	Aug 05/2009		3	Mar 09/2006	W0670	1	Aug 15/2007
W0340	1	Feb 06/2009	W0510	1	Mar 09/2006		2	Aug 15/2007
W0350	1	Aug 15/2007		2	Mar 09/2006	W0680	1	Aug 15/2007
W0360	1	Mar 09/2006	W0520	1	Aug 15/2007		2	Aug 15/2007
R W0370	1	Aug 05/2009	W0530	1	Mar 09/2006	W0690	1	Mar 09/2006
	2	Aug 15/2007	R W0540	1	Aug 05/2009	R W0700	1	Aug 05/2009
W0380	1	Aug 15/2007	R W0570	1	Aug 05/2009	R	2	Aug 05/2009
W0390	1	Mar 09/2006		2	Feb 06/2009	R	3	Aug 05/2009
	2	Mar 09/2006	R W0580	1	Aug 05/2009	R W0710	1	Aug 05/2009
W0400	1	Mar 09/2006		2	Feb 06/2009	R	2	Aug 05/2009
	2	Jun 28/2006		3	Mar 09/2006	R	3	Aug 05/2009
W0410	1	Feb 06/2009	W0590	1	Aug 15/2007	R W0720	1	Aug 05/2009
	2	Mar 09/2006		2	Mar 09/2006	R	2	Aug 05/2009
W0420	1	Mar 09/2006	W0600	1	Jun 28/2006	R	3	Aug 05/2009
W0430	1	Jun 28/2006	R	2	Aug 05/2009	R	4	Aug 05/2009
W0440	1	Mar 09/2006	R W0610	1	Aug 05/2009	W0730	1	Aug 15/2007
	2	Mar 09/2006		2	Aug 15/2007		2	Aug 15/2007
W0450	1	Mar 09/2006	W0620	1	Jun 28/2006	R W0740	1	Aug 05/2009
	2	Mar 09/2006		2	Mar 09/2006	W0750	1	Aug 15/2007
W0460	1	Mar 09/2006		3	Mar 09/2006		2	Aug 15/2007
	2	Mar 09/2006	R W0630	1	Aug 05/2009	R W0760	1	Aug 05/2009
W0470	1	Mar 09/2006		2	Mar 09/2006		2	Mar 09/2006
	2	Mar 09/2006	R W0640	1	Aug 05/2009	W0770	1	Mar 09/2006
W0480	1	Jun 28/2006	R	2	Aug 05/2009		2	Feb 06/2009
	2	Mar 09/2006	R W0650	1	Aug 05/2009	R W0780	1	Aug 05/2009
W0490	1	Aug 15/2007		2	Mar 09/2006	R	2	Aug 05/2009

A = Added, R = Revised, D = Deleted, O = Overflow

MASTER BUNDLE LIST

D280T132

EFFECTIVE PAGES

Page 2
Aug 05/2009



91-21-13
MASTER BUNDLE LIST

Section	Page	Date	Section	Page	Date	Section	Page	Date
W0780 cont.			R W0930	1	Aug 05/2009	W1100 cont.		
R W0790	3	Feb 06/2009	R W0940	1	Aug 05/2009		2	Mar 09/2006
	1	Aug 05/2009	W0950	1	Sep 04/2008		3	Mar 09/2006
	2	Feb 06/2009	R W0960	1	Aug 05/2009	R W1110	1	Aug 05/2009
R W0800	1	Aug 05/2009	W0970	1	Mar 09/2006	R	2	Aug 05/2009
R	2	Aug 05/2009	R W0980	1	Aug 05/2009		3	Mar 09/2006
R	3	Aug 05/2009	W0990	1	Mar 09/2006	W1120	1	Mar 09/2006
R	4	Aug 05/2009	W1000	1	Jun 06/2008	R W1130	1	Aug 05/2009
R W0810	1	Aug 05/2009	W1010	1	Mar 09/2006	R W1140	1	Aug 05/2009
R	2	Aug 05/2009	W1020	1	Mar 09/2006	R	2	Aug 05/2009
R	3	Aug 05/2009	W1030	1	Mar 09/2006	R W1150	1	Aug 05/2009
R	4	Aug 05/2009	W1040	1	Mar 09/2006	R W1160	1	Aug 05/2009
R	5	Aug 05/2009	W1050	1	Jun 28/2006		2	Jun 28/2006
R	6	Aug 05/2009		2	Jun 28/2006	W1170	1	Feb 06/2009
	7	Mar 09/2006	W1060	1	Mar 09/2006		2	Mar 09/2006
R W0820	1	Aug 05/2009		2	Mar 09/2006	W1180	1	Mar 09/2006
	2	Jun 28/2006		3	Mar 09/2006	W1190	1	Mar 09/2006
R W0830	1	Aug 05/2009		4	Jan 21/2005	W1200	1	Mar 09/2006
	2	Mar 09/2006		5	Mar 09/2006	W1210	1	Mar 09/2006
W0840	1	Jun 06/2008		6	Jan 21/2005		2	Mar 09/2006
W0850	1	Aug 15/2007		7	Mar 09/2006	R W1220	1	Aug 05/2009
W0860	1	Mar 09/2006	W1070	1	Mar 09/2006	R	2	Aug 05/2009
W0870	1	Aug 15/2007	W1080	1	Mar 09/2006	R W1230	1	Aug 05/2009
W0880	1	Aug 15/2007	R	2	Aug 05/2009	R	2	Aug 05/2009
W0890	1	Mar 09/2006	R	3	Aug 05/2009	R	3	Aug 05/2009
W0900	1	Mar 09/2006	W1090	1	Mar 09/2006	R W1240	1	Aug 05/2009
W0910	1	Mar 09/2006		2	Mar 09/2006	W1250	1	Aug 15/2007
W0920	1	Jun 28/2006	W1100	1	Mar 09/2006	R	2	Aug 05/2009

A = Added, R = Revised, D = Deleted, O = Overflow

MASTER BUNDLE LIST

D280T132

EFFECTIVE PAGES

Page 3
Aug 05/2009



91-21-13
MASTER BUNDLE LIST

Section	Page	Date	Section	Page	Date	Section	Page	Date
W1260	1	Aug 15/2007	W1500	1	Mar 09/2006	R W1890	1	Aug 05/2009
W1270	1	Aug 15/2007	W1510	1	Mar 09/2006	R W1900	1	Aug 05/2009
R W1280	1	Aug 05/2009	W1520	1	Jun 28/2006	W1910	1	Mar 09/2006
R	2	Aug 05/2009	W1530	1	Mar 09/2006	W1920	1	Aug 15/2007
	3	Jun 28/2006	W1540	1	Mar 09/2006	W1930	1	Mar 09/2006
W1290	1	Mar 09/2006	W1560	1	Mar 09/2006	W2000	1	Mar 09/2006
	2	Mar 09/2006	R W1570	1	Aug 05/2009		2	Mar 09/2006
W1300	1	Mar 09/2006	W1580	1	Mar 09/2006	W2010	1	Jan 21/2005
W1310	1	Mar 09/2006	W1590	1	Mar 09/2006	W2020	1	Sep 04/2008
W1320	1	Mar 09/2006	W1600	1	Mar 09/2006	W2040	1	Sep 04/2008
W1330	1	Mar 09/2006	W1610	1	Mar 09/2006	W2050	1	Mar 09/2006
W1340	1	Aug 15/2007	W1630	1	Mar 09/2006	R W2060	1	Aug 05/2009
R W1350	1	Aug 05/2009	W1640	1	Mar 09/2006		2	Jun 28/2006
W1360	1	Aug 15/2007	W1660	1	Jan 21/2005	W2110	1	Mar 09/2006
W1370	1	Jun 06/2008	W1700	1	Mar 09/2006	W2210	1	Jan 21/2005
W1380	1	Mar 07/2008	W1710	1	Mar 09/2006	W3000	1	Jun 06/2008
W1390	1	Jan 21/2005	W1720	1	Aug 15/2007	R W3010	1	Aug 05/2009
W1400	1	Mar 09/2006	W1730	1	Mar 09/2006	R W3500	1	Aug 05/2009
R W1410	1	Aug 05/2009	W1760	1	Mar 09/2006	W3510	1	Jun 28/2006
	2	Aug 15/2007	W1770	1	Jun 28/2006	W3520	1	Jun 28/2006
W1420	1	Jan 21/2005	W1790	1	Jan 21/2005	W3530	1	Jun 28/2006
W1430	1	Mar 09/2006	W1800	1	Feb 06/2009	W3540	1	Jun 28/2006
W1440	1	Aug 15/2007	R W1810	1	Aug 05/2009	W5150	1	Jun 28/2006
	2	Mar 09/2006	R W1820	1	Aug 05/2009	R W9000	1	Aug 05/2009
W1460	1	Jan 21/2005	W1830	1	Jan 21/2005		2	Jun 28/2006
W1470	1	Jan 21/2005	W1840	1	Jan 21/2005	W9010	1	Jun 28/2006
W1480	1	Aug 15/2007	W1850	1	Jan 21/2005	R W9020	1	Aug 05/2009
W1490	1	Mar 09/2006	W1860	1	Jan 21/2005		2	Jun 28/2006

A = Added, R = Revised, D = Deleted, O = Overflow

MASTER BUNDLE LIST

D280T132

EFFECTIVE PAGES

Page 4
Aug 05/2009

91-21-13
MASTER BUNDLE LIST

Section	Page	Date	Section	Page	Date	Section	Page	Date
W9030	1	Jun 28/2006						
W9040	1	Jun 28/2006						
W9050	1	Jun 28/2006						
W9060	1	Jun 28/2006						
W9070	1	Jun 28/2006						
	2	Jun 28/2006						
W9090	1	Jun 28/2006						
W9110	1	Jun 28/2006						
W9120	1	Jun 06/2008						
	2	Jun 28/2006						
W9150	1	Feb 06/2009						
W9160	1	Feb 06/2009						

A = Added, R = Revised, D = Deleted, O = Overflow

MASTER BUNDLE LIST

D280T132

EFFECTIVE PAGES

Page 5
Aug 05/2009



767-200/300 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0011	L2	P1, P3 AND P55 INSTRUMENT PANEL				
D04283P			P001-01/ /	D04283J	W0017	ALL
D05043P			P003-03/ /	D05043J	W0033	ALL
D04285P		AF0113	POS 01	D04285J	W0013	ALL
D05305P		AF0116	POS 01	D05305J	W0035	ALL
D05014J		AF0117	POS 02	D05014P	W1052	050-099, 150-154, 162-164, 275-276
D05014J		AF0117	POS 03	D05014P	W1052	155-157, 165-199, 277-299
D05018J		AF0118	POS 05	D05018P	W1054	050-099, 150-154, 162-164, 275-276
D05018J		AF0118	POS 06	D05018P	W1054	155-157, 165-199, 277-299
D04171P		AF0119	POS 01	D04171J	W0397	ALL
D04167P		AF0119	POS 02	D04167J	W0397	ALL
D05255P		AF0119	POS 03	D05255J	W1311	ALL
D04173P		AF0119	POS 04	D04173J	W0399	ALL
D04163P		AF0119	POS 05	D04163J	W0209	ALL
D05115P		AF0119	POS 07	D05115J	W1711	ALL
D05809P		AF0119	POS 09	D05809J	W0731	ALL
D04147P		AF0119	POS 11	D04147J	W0391	ALL
D04501P		AF0119	POS 13	D04501J	W0461	ALL
D05415P		AF0119	POS 17	D05415J	W0487	ALL
D05419P		AF0119	POS 20	D05419J	W0459	ALL
D05551P		AF0119	POS 21	D05551J	W0419	ALL
D05111P		AF0119	POS 25	D05111J	W1435	ALL
D04560P		AF0120	POS 01	D04560J	W0632	ALL
D05395P		AF0120	POS 02	D05395J	W0632	ALL
D06184P		AF0120	POS 03	D06184J	W0744	ALL
D06186P		AF0120	POS 07	D06186J	W0746	ALL
D00475		M00090	P055-00/ /			ALL
D00479		M00090	P055-00/ /			ALL
D00157		M00091	P007-00/ /			ALL
D00869		M00091	P007-00/ /			ALL
D01669		M10258	P003-01/ /			ALL
D00101		N00001				ALL
D00103		N00002	P001-03/ /			ALL
D00645		N00003	P001-01/ /			ALL
D00111		N00008	P001-03/ /			ALL
D00113		N00009	P001-03/ /			ALL
D00240		N00015	P003-01/ /			ALL

MASTER BUNDLE LIST

D280T132

91-21-13

Section W0010

Page 1

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0011	L2	P1, P3 AND P55 INSTRUMENT PANEL (continued)				
D00647		N00043	P003-01/ /			ALL
D00633		N00070	P001-03/ /			ALL
D01363		N00070	P001-03/ /			ALL
D10122		N10016	P001-03/ /			ALL
D00299		TS0161	0143/228/			ALL
W0013	L2	P1-3 CAPT INSTR PNL-R				
D04285J		AF0113	POS 01	D04285P	W0011	ALL
D04580P		AF0113	POS 03	D04580J		ALL
D04586P		AF0113	POS 04	D04586J		ALL
D04513J		AF0113	POS 05	D04513P	W0051	ALL
D05107J		AF0113	POS 06	D05107P	W0031	ALL
W0014	L*	SHELF E2-4 INTEGRATION BUNDLE				
D01836A			//			ALL
D01836B			//			ALL
D02222A			//			ALL
D02222B			//			ALL
D02704A			//			ALL
D02704B			//			ALL
D02708A			//			ALL
D02708B			//			ALL
D02708C			//			ALL
D02712A			//			ALL
D05202P		AE0306	POS 15	D05202J	W1726	ALL
D04862P		AE0306	POS 17	D04862J	W0510	ALL
D08024P		AE0306	POS 18	D08024J	W0752	ALL
D05294P		AE0306	POS 19	D05294J	W0602	ALL
D08034P		AE0306	POS 20	D08034J	W0756	ALL
D05734P		AE0306	POS 21	D05734J	W1246	ALL
D05364P		AE0306	POS 23	D05364J	W0602	ALL
D05626P		AE0306	POS 48	D05626J	W0756	ALL
D05288P		AE0306	POS 49	D05288J	W0588	ALL
D04110P		AE0306	POS 50	D04110J	W0214	ALL
D04960P		AE0306	POS 51	D04960J	W0654	ALL
D05212P		AE0306	POS 55	D05212J	W0588	ALL
D04331P		AE0307	POS 59	D04331J	W1527	ALL
D05705P		AE0316	POS 04	D05705J	W0135	ALL
D02222		M00115	SHELF/E02/04			ALL

MASTER BUNDLE LIST

D280T132

91-21-13

Section W0010

Page 2

Mar 09/2006



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0014	L*	SHELF E2-4 INTEGRATION BUNDLE (continued)				
D02712		M00119	SHELF/E02/04			ALL
D02704		M00122	SHELF/E02/04			ALL
D02708		M00132	SHELF/E02/04			ALL
D01836		M00545	SHELF/E02/04			ALL
W0016	R*	SHELF E2-4 INTEGRATION BUNDLE				
D00256A			//			ALL
D00256B			//			ALL
D00256C			//			ALL
D11788A			//			ALL
D11788B			//			ALL
D11788C			//			ALL
D05715P		AE0316	POS 11	D05715J	W0145	ALL
D06140P		AE0320	POS 15	D06140J	W0768	ALL
D04916P		AE0320	POS 17	D04916J	W0656	ALL
D05622P		AE0320	POS 18	D05622J	W0768	ALL
D05292P		AE0320	POS 19	D05292J	W0628	ALL
D04034P		AE0320	POS 20	D04034J	W0222	ALL
D04078P		AE0320	POS 21	D04078J	W0222	ALL
D04036P		AE0320	POS 22	D04036J	W0222	ALL
D08614P		AE0320	POS 23	D08614J	W0656	ALL
D04768P		AE0320	POS 45	D04768J	W0624	ALL
D05204P		AE0320	POS 47	D05204J	W0506	ALL
D00256		M00146	SHELF/E02/04			ALL
D11788		M01414	SHELF/E02/04			ALL
W0017	L2	P1-1 CAPT INSTR PNL-L				
D04283J			P001-01//	D04283P	W0011	ALL
D04287J			P001-01//	D04287P	W0031	ALL
W0018	A*	SHELF E2-4 INTEGRATION BUNDLE				
D00264A			//			ALL
D00264B			//			ALL
D00264C			//			ALL
D00278A			//			ALL
D00278B			//			ALL
D00278C			//			ALL
D05206P		AE0307	POS 13	D05206J	W1722	ALL
D04048P		AE0307	POS 60	D04048J	W0240	ALL

MASTER BUNDLE LIST

D280T132

91-21-13

Section W0010

Page 3

Jun 06/2008



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity	
W0018	A*	SHELF E2-4 INTEGRATION BUNDLE (continued)					
D04114P		AE0307	POS 87	D04114J	W0240	ALL	
D04074P		AE0322	POS 38	D04074J	W0248	ALL	
D04072P		AE0322	POS 41	D04072J	W0248	ALL	
D00278		M00116	SHELF/E02/04			ALL	
D00264		M00143	SHELF/E02/04			ALL	



767-200/300 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0020	A2	E6-A2-APU CONTROL				
D00408A			//			ALL
D00408B			//			ALL
D00408C			//			ALL
D06396P			P049-00/ /	D06396J	W1050	ALL
D04082P		AC1402	POS 01	D04082J	W0242	ALL
D04040P		AC1402	POS 02	D04040J	W0242	ALL
D04046P		AC1402	POS 03	D04046J	W0248	ALL
D05054P		AC1402	POS 06	D05054J	W0606	ALL
D04044P		AC1402	POS 12	D04044J	W0248	ALL
D06424P		AC1402	POS 16	D06424J	W0242	ALL
D00408		M00206	SHELF/E06/01			ALL
W0022	L2	P31-L2-L.GEN PWR DISTRIBUTION CONTROL				
D04054J		AE0311	POS 01	D04054P	W0214	ALL
D04080J		AE0311	POS 02	D04080P	W0214	ALL
D04068J		AE0311	POS 03	D04068P	W0216	ALL
D04052J		AE0311	POS 04	D04052P	W0240	ALL
D06380J		AE0311	POS 05	D06380P	W0304	275-299
D00252		C00901	P031-00/ /			ALL
D00254		C00902	P031-00/ /			ALL
D00422		K00526	P031-00/ /			ALL
D00392		M00226	P032-00/ /			275-299
D00390		M00227	P031-00/ /			275-299
D03448		M00896	P031-00/ /			ALL
D03450		M00897	P031-00/ /			ALL
D00390		M01636	P031-00/ /			050-099, 150-199
D00312		T00105	P031-00/ /			ALL
D00282		T00112	P031-00/ /			ALL
D00280		T00127	P031-00/ /			ALL
W0024	R2	P32-R2-R GEN PWR DISTRIBUTION CONTROL				
D08686J		AE0312	POS 01	D08686P	W0428	050-099, 150-199
D04038J		AE0312	POS 02	D04038P	W0248	ALL
D04062J		AE0312	POS 03	D04062P	W0222	ALL
D04012J		AE0312	POS 04	D04012P	W0222	ALL
D00260		C00903	P032-00/ /			ALL
D00262		C00904	P032-00/ /			ALL
D00416		K00527	P032-00/ /			ALL
D00378		M00225	P032-00/ /			050-099, 275-299

MASTER BUNDLE LIST

D280T132

91-21-13

Section W0020

Page 1

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0024	R2	P32-R2-R GEN PWR DISTRIBUTION CONTROL (continued)				
D03452		M00895	P032-00/ /			ALL
D03454		M00898	P032-00/ /			ALL
D00378		M01617	P032-00/ /			150-199
D13450		M01618	P032-00/ /			050-099, 150-199
D00306		T00107	P032-00/ /			ALL
D00286		T00113	P032-00/ /			ALL
D00284		T00128	P032-00/ /			ALL
W0026	A2	P34-A2-APU PWR DISTRIBUTION CONTROL				
D04112J		AE0204	POS 02	D04112P	W0240	ALL
D04026J		AE0204	POS 03	D04026P	W0240	ALL
D04028J		AE0204	POS 08	D04028P	W0248	ALL
D05340J		AE0204	POS 11	D05340P	W1722	ALL
D00268		C00905	P034-00/ /			ALL
D00274		K00114	P034-00/ /			ALL
D00314		T00111	P034-00/ /			ALL
D00288		T00115	P034-00/ /			ALL
D00290		T00116	P034-00/ /			ALL
D00376		T00122	P034-00/ /			ALL
W0028	S2	P6-S2-MN PWR DISTR PNL				
D04122J		AE0222	POS 15	D04122P	W0254	ALL
D04118J		AE0222	POS 16	D04118P	W0252	ALL
D05828J		AF0232	POS 11	D05828P	W0070	ALL
D04126J		AF0232	POS 12	D04126P	W0256	ALL
D04006J		AF0232	POS 13	D04006P	W0070	ALL
D04010J		AF0232	POS 16	D04010P	W0070	ALL
D04008J		AF0232	POS 19	D04008P	W0070	ALL
D00328		K00107	P006-01/ /			ALL
D00438		K00110	P006-01/ /			ALL
D00440		K00113	P006-01/ /			ALL
D00356		K00122	P006-01/ /			ALL
D00344		K00123	P006-01/ /			ALL
D00348		K00137	P006-01/ /			ALL
D00434		K00138	P006-01/ /			ALL
D10406		K00694	P006-01/ /			ALL
D10408		K00695	P006-01/ /			ALL
D10410		K00696	P006-01/ /			ALL
D13936		K02127	P006-00/ /			ALL

MASTER BUNDLE LIST

D280T132

91-21-13

Section W0020

Page 2

Mar 09/2006



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0028	S2	P6-S2-MN PWR DISTR PNL (continued)				
D13934		K02128	P006-00/ /			ALL
D10180		M10213	P006-01/ /			ALL



767-200/300 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0030	R1	P49-R1-APU AUX PANEL				
D06394J			P049-00/ /	D06394P	W1038	ALL
D05706P		AC1402	POS 05	D05706J	W0580	ALL
D05904P		AC1402	POS 07	D05904J	W0588	ALL
D05672P		AC1402	POS 08	D05672J	W0580	ALL
D05824P		AC1402	POS 09	D05824J	W0580	ALL
D04130P		AC1402	POS 10	D04130J	W0238	ALL
D05874P		AC1402	POS 11	D05874J	W1256	ALL
D00712		K00006	P049-00/ /			ALL
D03648		K00023	P049-00/ /			ALL
D03650		K00024	P049-00/ /			ALL
D03652		K00025	P049-00/ /			ALL
D00402		K00116	P049-00/ /			ALL
D00692		K00174	P049-00/ /			ALL
D00694		K00229	P049-00/ /			ALL
D10572		K00765	P049-00/ /			ALL
D11932		K01145	P049-00/ /			050-099, 150-155, 157-165, 277
D12394		K02144	P049-00/ /			156-157, 166-199, 277-299
D12392		K02145	P049-00/ /			156-157, 166-199, 277-299
D12392		K2145				275-276
W0031	R2	P1, P3 AND P55 INSTRUMENT PANEL				
D04287P				D04287J	W0017	ALL
D05045P				D05045J	W0033	ALL
D05107P		AF0113	POS 06	D05107J	W0013	ALL
D05309P		AF0116	POS 03	D05309J	W0035	ALL
D05016J		AF0117	POS 05	D05016P	W1052	050-099, 150-154, 162-164, 275-276
D05016J		AF0117	POS 06	D05016P	W1052	155-157, 165-199, 277-299
D05020J		AF0118	POS 02	D05020P	W1054	050-099, 150-154, 162-164, 275-276
D05020J		AF0118	POS 03	D05020P	W1054	155-157, 165-199, 277-299
D05813P		AF0119	POS 14	D05813J	W0733	ALL
D05113P		AF0119	POS 15	D05113J	W1437	ALL
D05117P		AF0119	POS 19	D05117J	W1711	ALL

MASTER BUNDLE LIST

D280T132

91-21-13

Section W0030

Page 1

Aug 05/2009



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0031	R2	P1, P3 AND P55 INSTRUMENT PANEL (continued)				
D05555P		AF0120	POS 08	D05555J	W0529	ALL
D05417P		AF0120	POS 13	D05417J	W0489	ALL
D06180P		AF0120	POS 14	D06180J	W0766	ALL
D04263P		AF0120	POS 15	D04263J	W0211	ALL
D04321P		AF0120	POS 16	D04321J	W0449	ALL
D05393P		AF0120	POS 17	D05393J	W0638	ALL
D04391P		AF0120	POS 18	D04391J	W0417	ALL
D04965P		AF0120	POS 19	D04965J	W0855	ALL
D05423P		AF0120	POS 20	D05423J	W0463	ALL
D06178P		AF0120	POS 21	D06178J	W0764	ALL
D06182P		AF0120	POS 22	D06182J	W0766	ALL
D05399P		AF0120	POS 24	D05399J	W0638	ALL
D04893P		AF0120	POS 25	D04893J	W0527	ALL
D00477		M00090	P055-00/ /			ALL
D00159		M00092	P007-00/ /			ALL
D00871		M00092	P007-00/ /			ALL
D00232		M00937	/ /			ALL
D00238		N00010	P003-01/ /			ALL
D00711		N00041				ALL
D00719		N00042	P003-03/ /			ALL
D00715		N00048	P003-03/ /			ALL
D00717		N00049	P003-03/ /			ALL
D00635		N00071	P003-01/ /			ALL
D01365		N00071	P003-01/ /			ALL
D10124		N10016	P001-03/ /			ALL
D00224		S00024	P001-03/ /			ALL
D10032		S00598	P003-01/ /			ALL
W0033	R2	P3-3 F/O INSTR PNL-R				
D05043J			P003-03/ /	D05043P	W0011	ALL
D05045J			P003-03/ /	D05045P	W0031	ALL
W0035	L2	P3-1 F/O INSTR PNL-L				
D05305J		AF0116	POS 01	D05305P	W0011	ALL
D04515J		AF0116	POS 02	D04515P	W0051	ALL
D05309J		AF0116	POS 03	D05309P	W0031	ALL

MASTER BUNDLE LIST

D280T132

91-21-13

Section W0030

Page 2 End

Jun 28/2006



767-200/300 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0040	L2	P11-L2-LOAD DISTRIBUTION				
D04273J		AF0201	POS 02	D04273P	W0219	ALL
D04165J		AF0201	POS 03	D04165P	W0209	ALL
D05000J		AF0203	POS 01	D05000P	W0062	ALL
D04271J		AF0203	POS 05	D04271P	W0201	ALL
D07960P		AF0204	POS 10	D07960J	W0062	ALL
D07962P		AF0204	POS 11	D07962J	W0062	ALL
D07964P		AF0204	POS 12	D07964J	W0062	ALL
D07966P		AF0204	POS 13	D07966J	W0062	ALL
D07968P		AF0204	POS 14	D07968J	W0062	ALL
D07970P		AF0204	POS 15	D07970J	W0062	ALL
D02158		K00158	P011-00/ /			ALL
D00716		K00607	P011-00/ /			ALL
W0041	N2	MID CABIN PARTITION ATTENDANT HANDSET				
D04669P		AP0703	POS 01	D04669J	W0639	275-299
D04669P		AP0802E	POS 01	D04669J	W0639	050-099
D04669P		AP0901	POS 01	D04669J	W0639	150-199
D00851		B00061	MULTI/ /			ALL
W0042	R2	P11-R2-LOAD DISTRIBUTION				
D04193J		AF0201	POS 08	D04193P	W0211	ALL
D05006J		AF0203	POS 03	D05006P	W0066	ALL
D04187J		AF0203	POS 04	D04187P	W0205	ALL
D05187J		AF0203	POS 06	D05187P	W0223	ALL
D07972P		AF0204	POS 04	D07972J	W0066	ALL
D07974P		AF0204	POS 05	D07974J	W0066	ALL
D07976P		AF0204	POS 06	D07976J	W0066	ALL
D07978P		AF0204	POS 07	D07978J	W0066	ALL
D07986P		AF0204	POS 08	D07986J	W0066	ALL
D07988P		AF0204	POS 09	D07988J	W0066	ALL
D02156		K00159	P011-00/ /			ALL
D00800		K00608	P011-00/ /			ALL
D10876		K00853	P011-00/ /			ALL
D10878		K00854	P011-00/ /			ALL
D10958		K00898	P011-00/ /			050-099
D10958		K00898 28V				150-199, 275-299
W0044	S2	P11-S2-LOAD DISTRIBUTION				
D04189J		AF0201	POS 04	D04189P	W0207	ALL

MASTER BUNDLE LIST

D280T132

91-21-13

Section W0040

Page 1

Jun 06/2008



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0044	S2	P11-S2-LOAD DISTRIBUTION (continued)				
D04185J		AF0201	POS 05	D04185P	W0203	ALL
D05708J		AF0201	POS 06	D05708P	W0712	ALL
D05010J		AF0201	POS 07	D05010P	W0070	ALL
D05012J		AF0203	POS 02	D05012P	W0070	ALL
D07980P		AF0204	POS 01	D07980J	W0070	ALL
D07982P		AF0204	POS 02	D07982J	W0070	ALL
D07984P		AF0204	POS 03	D07984J	W0070	ALL
D01520		M00803	P011-00/ /			ALL
D01592		M00804	P011-00/ /			ALL
D01600		M00805	0216/291/R009			ALL
D01790		M01062	0216/290/R015			ALL
W0045	N2	P51-WARNING ELECTRONICS UNIT				
D04509J		AE0208	POS 01	D04509P	W1271	ALL
D04511J		AE0208	POS 02	D04511P	W1287	ALL
D04597J		AE0208	POS 03	D04597P	W0459	ALL
D04303J		AE0208	POS 04	D04303P	W0449	ALL
D04507J		AE0208	POS 05	D04507P	W1311	ALL
D04347J		AE0208	POS 06	D04347P	W0451	ALL
D04349J		AE0208	POS 07	D04349P	W0453	ALL
D04301J		AE0208	POS 08	D04301P	W0409	ALL
D01503		K00598	P051-00/ /			ALL
D01505		K00599	P051-00/ /			ALL
D00823		M00615	P051-00/ /			ALL
D00811		M00616	P051-00/ /			ALL
D00821		M00617	P051-00/ /			ALL
D00815		M00618	P051-00/ /			ALL
D00817		M00619	P051-00/ /			ALL
D00819		M00620	P051-00/ /			ALL
D00813		M00621	P051-00/ /			ALL
D01381		M00938	P051-00/ /			ALL
D01433		M00983	P051-00/ /			ALL
D01487		M00999	P051-00/ /			ALL
D01489		M01000	P051-00/ /			ALL
D11553		M01411 WEU				ALL
D02261		M10727	P051-00/ /			ALL
W0046	L2	P6-L2-LOAD DISTRIBUTION				
D05848J		AF0232	POS 06	D05848P	W0062	ALL

MASTER BUNDLE LIST

D280T132

91-21-13

Section W0040

Page 2

Mar 07/2008



767-200/300 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0046	L2	P6-L2-LOAD DISTRIBUTION (continued)				
D05918J		AF0232	POS 07	D05918P	W0062	ALL
D05934J		AF0232	POS 08	D05934P	W0062	ALL
D00310		T00106	P006-03/ /			ALL
W0047	R2	VIDEO SYSTEM-VTR/TUNER				
D01205		AP0002	POS 01			050-099, 150-199
D01207		AP0002	POS 02			050-099, 150-199
D01209		AP0002	POS 3			050-099, 150-199
D06069P		AP0202	POS 01	D06069J	W0645	275
D06099P		AP0202	POS 02	D06099J	W1417	275
D06666P		AP0202	POS 03	D06666J	W1407	275
D06668P		AP0202	POS 04	D06668J	W1417	275
D05597P		AP0202	POS 05	D05597J	W1419	275
D06069P		AP0205	POS 02	D06069J	W0645	276-278
D06666P		AP0205	POS 03	D06666J	W1407	276-299
D05597P		AP0205	POS 04	D05597J	W1419	276-299
D06099P		AP0205	POS 06	D06099J	W1417	276-299
D06668P		AP0205	POS 07	D06668J	W1417	276-299
D06047J		AP0305	POS 05	D06047P	W1447	050-099
D06045J		AP0305	POS 06	D06045P	W1447	050-099
D06043J		AP0405	POS 02	D06043P	W1447	150-199
D06047J		AP0405	POS 05	D06047P	W1447	150-199
D06045J		AP0405	POS 06	D06045P	W1447	150-199
D09091J		AP0405	POS 07	D09091P	W1447	150, 152-199
D06049J		AP0405	POS 08	D06049P	W1447	151-152
D01927		M00815	0447/245/L080			275-299
D01929		M00815	0447/245/L080			275-299
D01931		M00815	0447/245/L080			275-299
D01933		M00815	0447/245/L080			275-299
D01651		M01059	0255/255/L010			ALL
D01653		M01059	0255/255/L010			ALL
D01673		M01108	0255/262/L010			ALL
D01675		M01108	0255/262/L010			ALL
D01697		M01113	0447/245/L080			050-099, 150-199
D02239		M01613	0441/220/L090			151-152, 280-299
D02241		M01613	0441/220/L090			050-099, 150-199, 280-299
D02243		M01614	0245/267/L012			ALL
D02517		M01708	PURSER/STA/			150-199

MASTER BUNDLE LIST

D280T132

91-21-13

Section W0040

Page 3

Aug 05/2009



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0047	R2	VIDEO SYSTEM-VTR/TUNER (continued)				
D09310		M09050	VCC/ /2			150, 152-199
D09311		M09050	VCC/ /2			150, 152-199
D09312		M09050	VCC/ /2			150, 152-199
D09313		M09050	VCC/ /2			150, 152-199
D02273		P079 PNL				050-099, 150-199
W0048	R2	P6-R2-LOAD DISTRIBUTION				
D06450J		AE0222	POS 09	D06450P	W1342	ALL
D06430J		AE0222	POS 12	D06430P	W0280	050-099
D05846J		AF0232	POS 01	D05846P	W0066	ALL
D05920J		AF0232	POS 02	D05920P	W0066	ALL
D06192J		AF0232	POS 03	D06192P	W0066	ALL
D06446J		AF0232	POS 30	D06446P	W1342	ALL
D06430J		AF0232	POS 31	D06430P	W0280	150-199, 275-299
D10744		M01217	P006-03/ /			ALL
D00304		T00108	P006-04/ /			ALL



767-200/300 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0051	S2	H1 AND P3 INSTR PNL				
D06366J			0150/250/0000	D06366P	W0636	ALL
D06368P			0150/250/0000	D06368J	W0636	ALL
D04513P		AF0113	POS 05	D04513J	W0013	ALL
D04515P		AF0116	POS 02	D04515J	W0035	ALL
D04982J		AF0117	POS 01	D04982P	W1052	050-099, 150-154, 162-164, 275-276
D04982J		AF0117	POS 02	D04982P	W1052	155-157, 165-199, 277-299
D04984J		AF0118	POS 01	D04984P	W1054	050-099, 150-154, 162-164, 275-276
D04984J		AF0118	POS 02	D04984P	W1054	155-157, 165-199, 277-299
D05453P		AF0119	POS 10	D05453J	W0523	ALL
D04267P		AF0119	POS 12	D04267J	W0207	ALL
D06348P		AF0119	POS 16	D06348J	W0584	ALL
D04556P		AF0120	POS 05	D04556J	W0634	ALL
D05347P		AF0120	POS 06	D05347J	W0634	ALL
D06350P		AF0120	POS 12	D06350J	W0586	ALL
D00212		K00396	0151/212/L005			ALL
D10430		K00726	0145/215/L005			ALL
D10400		K00756	0156/217/L003			ALL
D02678		M00505	0152/217/L007			ALL
D02426		M00506	0152/217/R007			ALL
D02688		M00788	0146/217/L007			ALL
D03722		M00789	0150/210/R032			ALL
D00210		M00790	0148/213/L007			ALL
D03732		M00793	0158/212/0000			ALL
D03768		M00843	0148/217/L008			ALL
D00216		N00020	P001-03/ /			ALL
D00218		N00022	P001-03/ /			ALL
D00220		N00023	P001-03/ /			ALL
W0052	R1	P33-R1-LOAD DISTRIBUTION				
D05098J		AE0203	POS 13	D05098P	W1228	ALL
D04134J		AE0203	POS 16	D04134P	W0238	ALL
W0054	N1	P34-N1-LOAD DISTRIBUTION				
D04926J		AE0204	POS 05	D04926P	W0616	ALL
D04860J		AE0204	POS 06	D04860P	W0590	ALL

MASTER BUNDLE LIST

D280T132

91-21-13

Section W0050

Page 1

Mar 09/2006



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0054	N1	P34-N1-LOAD DISTRIBUTION (continued)				
D08018J		AE0204	POS 07	D08018P	W0768	ALL
D08016J		AE0204	POS 10	D08016P	W0756	ALL
D05682J		AE0204	POS 12	D05682P	W0572	ALL
D05346J		AE0204	POS 13	D05346P	W1204	ALL
W0057	R2	PURSER STATION				
D13444J		AP0305	POS 01	D13444P	W1449	050-099
D13444J		AP0405	POS 01	D13444P	W1449	150-199
D13528		M01637	0450/240/L055			150-199
D12034		P078 (YIE)				050-099, 150-199



767-200/300 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0060	A2	P5 & P61-A2-PILOT OVHD & RIGHT SIDE PNL				
D04796J		AF0204	POS 67	D04796P	W0240	ALL
D01394		M00001	P005-00/ /			ALL
D01370		M10063	P005-00/ /			ALL
W0062	L2	P5 & P61-L2-PILOT OVHD & RIGHT SIDE PNL				
D04968P		AF0111	POS 02	D04968J	W0608	ALL
D04966P		AF0111	POS 03	D04966J	W0584	ALL
D05000P		AF0203	POS 01	D05000J	W0040	ALL
D07960J		AF0204	POS 10	D07960P	W0040	ALL
D07962J		AF0204	POS 11	D07962P	W0040	ALL
D07964J		AF0204	POS 12	D07964P	W0040	ALL
D07966J		AF0204	POS 13	D07966P	W0040	ALL
D07968J		AF0204	POS 14	D07968P	W0040	ALL
D07970J		AF0204	POS 15	D07970P	W0040	ALL
D05400J		AF0204	POS 16	D05400P	W1700	ALL
D04720J		AF0204	POS 17	D04720P	W0744	ALL
D04955J		AF0204	POS 18	D04955P	W0849	ALL
D05311J		AF0204	POS 19	D05311P	W1711	ALL
D04644J		AF0204	POS 20	D04644P	W0510	ALL
D04726J		AF0204	POS 21	D04726P	W0510	ALL
D05652J		AF0204	POS 22	D05652P	W0510	ALL
D05402J		AF0204	POS 24	D05402P	W1706	ALL
D05726J		AF0204	POS 25	D05726P	W0572	ALL
D05910J		AF0204	POS 26	D05910P	W0572	ALL
D04708J		AF0204	POS 27	D04708P	W0572	ALL
D05282J		AF0204	POS 28	D05282P	W0632	ALL
D04990J		AF0204	POS 29	D04990P	W0632	ALL
D04730J		AF0204	POS 31	D04730P	W0746	ALL
D04732J		AF0204	POS 32	D04732P	W0746	ALL
D05186J		AF0204	POS 33	D05186P	W0654	ALL
D04714J		AF0204	POS 34	D04714P	W0756	ALL
D04710J		AF0204	POS 35	D04710P	W0756	ALL
D05180J		AF0204	POS 36	D05180P	W1216	ALL
D05064J		AF0204	POS 38	D05064P	W0622	ALL
D05732J		AF0204	POS 39	D05732P	W1246	ALL
D04718J		AF0204	POS 41	D04718P	W0752	ALL
D04778J		AF0204	POS 42	D04778P	W0214	ALL
D04776J		AF0204	POS 43	D04776P	W0214	ALL
D05848P		AF0232	POS 06	D05848J	W0046	ALL

MASTER BUNDLE LIST

D280T132

91-21-13
Section W0060
Page 1
Mar 09/2006



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0062	L2	P5 & P61-L2-PILOT OVHD & RIGHT SIDE PNL (continued)				
D05918P		AF0232	POS 07	D05918J	W0046	ALL
D05934P		AF0232	POS 08	D05934J	W0046	ALL
D06152P		AF0232	POS 20	D06152J	W0148	ALL
D06154P		AF0232	POS 23	D06154J	W0150	ALL
D10404		K00727	P005-00/ /			ALL
D10402		K00755	P005-00/ /			ALL
D10860		K00869	0194/273/R031			ALL
D01312		M00010	P005-00/ /			ALL
D03904		M00010	P005-00/ /			ALL
D01324		M00013	P005-00/ /			ALL
D01302		M00014	P005-00/ /			ALL
D01316		M00015	P005-00/ /			ALL
D01328		M00017	P005-00/ /			ALL
D01431		M00030				050-099
D01431		M00033	P061-00/ /			150-199, 275-299
D00848		M00049	P005-00/ /			ALL
D00856		M00056	P005-00/ /			ALL
D00551		M00098	P061-00/ /			ALL
D00557		M00133	P061-00/ /			ALL
D00898		M00791	P005-00/ /			ALL
D00896		M00792	0183/275/R011			ALL
D00548		M00800	P005-00/ /			ALL
D00550		M00801	P005-00/ /			ALL
D00558		M00802	0198/277/R027			ALL
D01377		M00936	P061-00/ /			ALL
D10110		M01087	P061-00/ /			ALL
D10112		M01087	P061-00/ /			ALL
D10732		M01216	P061-00/ /			ALL
D11800		M01390	P061-00/ /			ALL
D12206		M01753	P061-00/ /			050-099, 150-199
D00832		M10023	P005-00/ /			ALL
D03896		M10054	P005-00/ /			ALL
D01330		M10055	P005-00/ /			ALL
D00874		M10057	P005-00/ /			ALL
D01382		M10063	P005-00/ /			ALL
D01358		M10078	P005-00/ /			ALL
D00419		M10372	P061-00/ /			ALL
D01678		M10394	P005-00/ /			ALL
D00876		M10395	P005-00/ /			ALL
D00888		M10397	P005-00/ /			ALL

MASTER BUNDLE LIST

D280T132

91-21-13

Section W0060

Page 2

Feb 06/2009



767-200/300 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0062	L2	P5 & P61-L2-PILOT OVHD & RIGHT SIDE PNL (continued)				
D10222		M10398	P061-00/ /			ALL
D02083		M10761	P005-00/ /			ALL
D13572		M1619				150-154, 162-165, 275-276
D12172		M1733				050-099, 155-199, 276-299
D12174		M1733				050-099, 150-199, 276-299
D03892		N00122	P005-00/ /			ALL
D13572		R0634				050-099, 155-157, 166-199, 277-299
W0065	N2	FLIGHT RECORDER CONTROL PANEL-P61				
D06225J		AF0204	POS 92	D06225P	W0691	ALL
D04707J		AF0204	POS 93	D04707P	W0691	ALL
D02583		AIRBORNE				050-099
D00493		M00033	P061-00/ /			ALL
D01445		M00968	P061-00/ /			ALL
D02577		M01737	P061-00/ /			ALL
D02579		M01737	P061-00/ /			ALL
D02581		M01737	P061-00/ /			ALL
D02583		M1736				150-199, 275-299
W0066	R2	P5 & P61-R2-PILOT OVHD & RIGHT SIDE PNL				
D04970P		AF0112	POS 01	D04970J	W0586	ALL
D04972P		AF0112	POS 02	D04972J	W0610	ALL
D05006P		AF0203	POS 03	D05006J	W0042	ALL
D07972J		AF0204	POS 04	D07972P	W0042	ALL
D07974J		AF0204	POS 05	D07974P	W0042	ALL
D07976J		AF0204	POS 06	D07976P	W0042	ALL
D07978J		AF0204	POS 07	D07978P	W0042	ALL
D07986J		AF0204	POS 08	D07986P	W0042	ALL
D07988J		AF0204	POS 09	D07988P	W0042	ALL
D04994J		AF0204	POS 45	D04994P	W0638	ALL
D04870J		AF0204	POS 46	D04870P	W1204	ALL
D05906J		AF0204	POS 47	D05906P	W0902	ALL
D06258J		AF0204	POS 48	D06258P	W0768	ALL
D04758J		AF0204	POS 49	D04758P	W0768	ALL
D05416J		AF0204	POS 50	D05416P	W0768	ALL

MASTER BUNDLE LIST

D280T132

91-21-13

Section W0060

Page 3

Jun 28/2006



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0066	R2	P5 & P61-R2-PILOT OVHD & RIGHT SIDE PNL (continued)				
D04738J		AF0204	POS 52	D04738P	W0766	ALL
D04286J		AF0204	POS 54	D04286P	W0620	ALL
D05124J		AF0204	POS 55	D05124P	W1222	ALL
D05656J		AF0204	POS 56	D05656P	W0902	ALL
D04794J		AF0204	POS 57	D04794P	W0222	ALL
D04766J		AF0204	POS 59	D04766P	W0506	ALL
D05764J		AF0204	POS 60	D05764P	W0506	ALL
D05928J		AF0204	POS 61	D05928P	W0506	ALL
D04650J		AF0204	POS 62	D04650P	W0506	ALL
D05724J		AF0204	POS 63	D05724P	W0506	ALL
D04760J		AF0204	POS 64	D04760P	W0766	ALL
D04754J		AF0204	POS 68	D04754P	W0764	ALL
D05406J		AF0204	POS 69	D05406P	W1710	ALL
D05062J		AF0204	POS 70	D05062P	W0624	ALL
D05356J		AF0204	POS 71	D05356P	W0624	ALL
D06442J		AF0204	POS 79	D06442P	W1338	ALL
D05846P		AF0232	POS 01	D05846J	W0048	ALL
D05920P		AF0232	POS 02	D05920J	W0048	ALL
D06192P		AF0232	POS 03	D06192J	W0048	ALL
D06156P		AF0232	POS 21	D06156J	W0152	ALL
D06158P		AF0232	POS 24	D06158J	W0154	ALL
D01360		M00010	P005-00/ /			ALL
D03902		M00010	P005-00/ /			ALL
D01342		M00014	P005-00/ /			ALL
D01348		M00015	P005-00/ /			ALL
D01366		M00017	P005-00/ /			ALL
D03842		M00029	P005-00/ /			ALL
D01164		M00032	P061-00/ /			ALL
D00850		M00049	P005-00/ /			ALL
D00854		M00052	P005-00/ /			ALL
D00858		M00056	P005-00/ /			ALL
D03846		M00912	P061-00/ /			ALL
D10114		M01087	P061-00/ /			ALL
D10396		M01129	P061-00/ /			ALL
D10398		M01130	P061-00/ /			ALL
D11802		M01390	P061-00/ /			ALL
D00884		M10023	P005-00/ /			ALL
D01374		M10055	P005-00/ /			ALL
D00842		M10056	P005-00/ /			ALL
D01310		M10063	P005-00/ /			ALL

MASTER BUNDLE LIST

D280T132

91-21-13

Section W0060

Page 4

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0066	R2	P5 & P61-R2-PILOT OVHD & RIGHT SIDE PNL (continued)				
D02888		M10394		P005-00/ /		ALL
D00878		M10395		P005-00/ /		ALL
D00890		M10397		P005-00/ /		ALL
D10220		M10397		P005-00/ /		ALL
D10224		M10398		P061-00/ /		ALL
D02085		M10761		P005-00/ /		ALL
D13584		M1619				ALL
D12176		M1733				050-099, 155-199, 276-299
D12178		M1733				050-099, 155-199, 276-299
D00490		R00515		P005-00/ /		ALL
D00492		R00516		P005-00/ /		ALL
D01068		R00517		P005-00/ /		ALL
D10706		R00571		P005-00/ /		ALL
W0069	N2	PRE-RECORDED ANNCT. PNL- FWD CLOSET- JUMPER BUNDLE				
D06103P				D06103J	W0645	275-299
D02567		M01523	0348/269/L060			275-299

MASTER BUNDLE LIST

D280T132

91-21-13

Section W0060

Page 5 End

Aug 05/2009



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0070	S2	P5-P61-S2-PILOT OVHD & RIGHT SIDE PNL				
D05010P		AF0201	POS 07	D05010J	W0044	ALL
D05012P		AF0203	POS 02	D05012J	W0044	ALL
D07980J		AF0204	POS 01	D07980P	W0044	ALL
D07982J		AF0204	POS 02	D07982P	W0044	ALL
D07984J		AF0204	POS 03	D07984P	W0044	ALL
D04772J		AF0204	POS 74	D04772P	W0600	ALL
D08054J		AF0204	POS 75	D08054P	W0984	ALL
D05410J		AF0204	POS 76	D05410P	W1716	ALL
D08104J		AF0204	POS 77	D08104P	W1248	ALL
D04952J		AF0204	POS 78	D04952P	W0606	ALL
D04938J		AF0204	POS 81	D04938P	W0596	ALL
D04541J		AF0204	POS 82	D04541P	W0455	ALL
D05042J		AF0204	POS 83	D05042P	W0614	ALL
D04940J		AF0204	POS 84	D04940P	W0598	ALL
D04854J		AF0204	POS 85	D04854P	W0590	ALL
D04986J		AF0204	POS 87	D04986P	W0634	ALL
D05792J		AF0204	POS 88	D05792P	W0634	ALL
D05784J		AF0204	POS 89	D05784P	W0634	ALL
D04756J		AF0204	POS 90	D04756P	W0262	ALL
D04852J		AF0204	POS 91	D04852P	W0606	ALL
D05854J		AF0204	POS 94	D05854P	W0264	ALL
D04774J		AF0204	POS 95	D04774P	W0264	ALL
D05828P		AF0232	POS 11	D05828J	W0028	ALL
D04006P		AF0232	POS 13	D04006J	W0028	ALL
D04010P		AF0232	POS 16	D04010J	W0028	ALL
D04008P		AF0232	POS 19	D04008J	W0028	ALL
D06160P		AF0232	POS 22	D06160J	W0156	ALL
D06162P		AF0232	POS 26	D06162J	W0158	ALL
D01406		M00010	P005-00/ /			ALL
D01408		M00013	P005-00/ /			ALL
D01776		M00019	P005-00/ /			ALL
D01778		M00019	P005-00/ /			ALL
D01928		M00032	P061-00/ /			ALL
D01930		M00032	P061-00/ /			ALL
D00838		M00043	P005-00/ /			ALL
D00868		M00043	P005-00/ /			ALL
D00852		M00049	P005-00/ /			ALL
D00886		M00049	P005-00/ /			ALL
D00636		M00061	P005-00/ /			ALL
D03898		M10054	P005-00/ /			ALL

MASTER BUNDLE LIST

D280T132

91-21-13

Section W0070

Page 1

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0070	S2	P5-P61-S2-PILOT OVHD & RIGHT SIDE PNL (continued)				
D03900		M10054	P005-00/ /			ALL
D01384		M10055	P005-00/ /			ALL
D00840		M10056	P005-00/ /			ALL
D00860		M10057	P005-00/ /			ALL
D10216		M10062	P005-00/ /			ALL
D01346		M10063	P005-00/ /			ALL
D02890		M10394	P005-00/ /			ALL
D04774		POS 95				051-099
W0072	N2	P70 FWD LEFT OFF-WING ESCAPE SYSTEM SWITCH PNL				
D06402J			0865/260/L089	D06402P	W0786	ALL
W0074	N2	P72 AFT LEFT OFF-WING ESCAPE SYSTEM SWITCH PNL				
D06404J			0909/260/L089	D06404P	W0786	150-199, 275-299
W0076	N2	P71 FWD RIGHT OFF-WING ESCAPE SYSTEM SWITCH PNL				
D06406J			0865/260/R089	D06406P	W0786	ALL
W0078	N2	P73 AFT RIGHT OFF-WING ESCAPE SYSTEM SWITCH PNL				
D06408J			0909/260/R089	D06408P	W0786	150-199, 275-299

MASTER BUNDLE LIST

D280T132

91-21-13

Section W0070

Page 2 End

Mar 09/2006



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0082	L*	SHELF E3-1 LEFT				
D00958A			//			ALL
D00958B			//			ALL
D00958C			//			ALL
D01174A			//			ALL
D01174B			//			ALL
D01174C			//			ALL
D08092P		AE0220	POS 06	D08092J	W0572	ALL
D05686P		AE0220	POS 08	D05686J	W0942	ALL
D05782P		AE0220	POS 09	D05782J	W0572	ALL
D04500P		AE0220	POS 11	D04500J	W0942	ALL
D04502P		AE0220	POS 12	D04502J	W0510	ALL
D08040P		AE0220	POS 13	D08040J	W0622	ALL
D00958		M00126	SHELF/E03/01			ALL
D01174		M00916	SHELF/E03/01			ALL
W0084	R*	SHELF E3-1 RIGHT				
D00770A			//			ALL
D00770B			//			ALL
D00770C			//			ALL
D02378A			//			ALL
D02378B			//			ALL
D02378C			//			ALL
D03050A			//			ALL
D03050B			//			ALL
D03050C			//			ALL
D08052P		AE0220	POS 01	D08052J	W0624	ALL
D05738P		AE0220	POS 02	D05738J	W1226	ALL
D05802P		AE0220	POS 03	D05802J	W0506	ALL
D04504P		AE0220	POS 04	D04504J	W0506	ALL
D08050P		AE0220	POS 05	D08050J	W0738	ALL
D03050		M00127	SHELF/E03/01			ALL
D02378		M00129	SHELF/E03/01			ALL
D00770		M00195	SHELF/E03/01			ALL

MASTER BUNDLE LIST

D280T132

91-21-13

Section W0080

Page 1 End

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0091	L*	SATCOM ,E9-1 SHELF,LEFT				
D02647A			SHELF/E09/-01			156-157, 166-199, 277-299
D02647B			SHELF/E09/-01			156-157, 166-199, 277-299
D02647C			SHELF/E09/-01			156-157, 166-199, 277-299
D02649A			SHELF/E09/-01			156-157, 166-199, 277-299
D02649B			SHELF/E09/-01			156-157, 166-199, 277-299
D02649C			SHELF/E09/-01			156-157, 166-199, 277-299
D02719A			SHELF/E09/01			167-199
D02719B			SHELF/E09/01			167-199
D02719C			SHELF/E09/01			167-199
D96101P		AC1102		D96101J	W9013	156-157, 166-199
D06253J		AC1102	POS 01	D06253P		167-199
D06173P		AC1102	POS 04	D06173J	W0813	156-157, 166-199, 277-299
D06161P		AC1102	POS 05	D06161J	W0815	167-199, 277-299
D06171P		AC1102	POS 07	D06171J	W0811	156-157, 166-199, 277-299
D06165P		AC1102	POS 08	D06165J	W0809	156-157, 166-199, 277-299
D06149P		AC1102	POS 09	D06149J	W0819	156-157, 166-199, 277-299
D02647		M1780				156-157, 166-199, 277-299
D02649		M1781				156-157, 166-199, 277-299
D02719		M1797				167-199
D02701		M1835				156-157, 166-199, 277-299
W0095	R*	SATCOM SYSTEM ,E9-1 SHELF,R				
D06155P		AC1102	POS 06	D06155J	W0817	156-157, 166-199, 277-299

MASTER BUNDLE LIST

D280T132

91-21-13

Section W0090

Page 1

Mar 09/2006



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0098	S*	SHELF E2-4 INTEGRATION BUNDLE				
D02706A			//			ALL
D02706B			//			ALL
D02706C			//			ALL
D04448P		AE0306	POS 47	D04448J	W0942	ALL
D04466P		AE0306	POS 53	D04466J	W0942	ALL
D05842P		AE0307	POS 08	D05842J	W0596	ALL
D04320P		AE0307	POS 09	D04320J	W0596	ALL
D05196P		AE0307	POS 35	D05196J	W0596	ALL
D04944P		AE0307	POS 36	D04944J	W0598	ALL
D04804P		AE0320	POS 48	D04804J	W0738	ALL
D04638P		AE0320	POS 49	D04638J	W0738	ALL
D05878P		AE0320	POS 51	D05878J	W0738	ALL
D05676P		AE0322	POS 39	D05676J	W0262	ALL
D02706		M00121	SHELF/E02/04			ALL

MASTER BUNDLE LIST

D280T132

91-21-13

Section W0090

Page 2 End

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0100	R1	AFT CABIN LWR CEILING CENTER (D)				
D06038P			1518/283/R011	D06038J	W0818	050-099, 275-299
D02866		M00661	1526/280/L006			050-099
D02868		M00662	1526/284/R006			050-099
D12108		M01734	1526/280/L006			275-299
D12110		M01735	1526/280/R006			275-299
W0101	L*	E1-1 SHELF				
D00665A			//			ALL
D00665B			//			ALL
D00665C			//			ALL
D00825A			//			ALL
D00825B			//			ALL
D00825C			//			ALL
D00827A			//			ALL
D00827B			//			ALL
D00827C			//			ALL
D00829A			//			ALL
D00829B			//			ALL
D00829C			//			ALL
D01251A			//			ALL
D01251B			//			ALL
D01251C			//			ALL
D01253A			//			ALL
D01253B			//			ALL
D01253C			//			ALL
D01259A			//			ALL
D01259B			//			ALL
D01259C			//			ALL
D01263A			//			ALL
D01263B			//			ALL
D01263C			//			ALL
D05495J		AE0303	POS 01	D05495P	W0201	ALL
D04353J		AE0303	POS 05	D04353P	W1501	ALL
D05131J		AE0303	POS 07	D05131P	W1281	ALL
D05411J		AE0303	POS 08	D05411P	W1255	ALL
D05413J		AE0303	POS 09	D05413P	W1601	ALL
D11810		K1070				ALL
D01259		M00522	SHELF/E01/01			ALL
D00665		M00524	SHELF/E01/01			ALL

MASTER BUNDLE LIST

D280T132

91-21-13

Section W0100

Page 1

Feb 06/2009



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0101	L*	E1-1 SHELF (continued)				
D01263		M00528	SHELF/E01/01			ALL
D00825		M00530	SHELF/E01/01			ALL
D00827		M00531	SHELF/E01/01			ALL
D00829		M00532	SHELF/E01/01			ALL
D01251		M00536	SHELF/E01/01			ALL
D01253		M00537	SHELF/E01/01			ALL
W0102	N2	FWD CABIN RIGHT				
D05329P			0354/284/R040	D05329J	W0665	150-157, 275-299
D04397P		AP0301B		D04397J	W0665	050-099
D04397P		AP0301B	POS 01	D04397J	W0665	150-199
W0104	N2	FWD CABIN LEFT				
D05327P			0354/284/L040	D05327J	W0665	150-157, 275-299
W0105	L*	E1-3 SHELF, LEFT SIDE				
D00423A			//			ALL
D00423B			//			ALL
D00423C			//			ALL
D00427A			//			ALL
D00427B			//			ALL
D00427C			//			ALL
D00429A			//			ALL
D00429B			//			ALL
D00429C			//			ALL
D00433A			//			ALL
D00433B			//			ALL
D00433C			//			ALL
D02463A			//			ALL
D02463B			//			ALL
D02463C			//			ALL
D02463D			//			ALL
D02463E			//			ALL
D02463F			//			ALL
D11786A			E01/03/			ALL
D11786B			E01/03/			ALL
D11786C			E01/03/			ALL
D04351P		AE0305	POS 11	D04351J	W1501	ALL
D04379P		AE0305	POS 12	D04379J	W0491	ALL

MASTER BUNDLE LIST

D280T132

91-21-13

Section W0100

Page 2

Mar 07/2008



767-200/300 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0105	L*	E1-3 SHELF, LEFT SIDE (continued)				
D04941P		AE0305	POS 13	D04941J	W1505	ALL
D04207P		AE0305	POS 14	D04207J	W0201	ALL
D04457P		AE0305	POS 16	D04457J	W0471	ALL
D04417P		AE0305	POS 17	D04417J	W0511	ALL
D05259P		AE0305	POS 18	D05259J	W1311	ALL
D05827P		AE0305	POS 19	D05827J	W1633	050-099, 150-152, 155-199, 277-299
D05827P		AE0305	POS 19	D05827J		275-276
D04855P		AE0305	POS 20	D04855J	W1605	ALL
D06143P		AE0305	POS 22	D06143J	W1605	050-099, 150-152, 155-199, 275-299
D04323P		AE0305	POS 45	D04323J	W0451	ALL
D04781P		AE0305	POS 46	D04781J	W1633	ALL
D04383P		AE0305	POS 48	D04383J	W0495	ALL
D04831P		AE0305	POS 50	D04831J	W1561	ALL
D06141P		AE0305	POS 51	D06141J	W0471	050-099, 150-199, 277-299
D06141P		AE0305	POS 51	D06141J		275-276
D05383P		AE0307	POS 85	D05383J	W1271	ALL
D05603P		AE0313	POS 03	D05603J	W1103	ALL
D05653P		AE0313	POS 04	D05653J	W1103	ALL
D05605J		AE0315	POS 07	D05605P	W0107	ALL
D05655J		AE0315	POS 14	D05655P	W0107	ALL
D04895P		AE0317	POS 47	D04895J	W0413	ALL
D04591P		AE0319	POS 31	D04591J	W0459	ALL
D04367P		AE0319	POS 32	D04367J	W0697	ALL
D04337P		AE0319	POS 35	D04337J	W0465	050-099, 150-199
D05391P		AE0319	POS 36	D05391J	W1601	ALL
D03691P		AE0319	POS 39	D03691J	W1603	ALL
D04169P		AE0319	POS 40	D04169J	W0397	ALL
D05247P		AE0319	POS 46	D05247J	W1701	ALL
D04309P		AE0319	POS 47	D04309J	W0431	ALL
D04365P		AE0319	POS 48	D04365J	W0481	ALL
D00423		M00100	SHELF/E01/03			ALL
D00433		M00139	SHELF/E01/03			ALL
D00429		M00156	SHELF/E01/03			ALL
D00427		M00183	SHELF/E01/03			ALL
D11786		M01413	SHELF/E01/03			ALL
D02463		M01705	SHELF/E01/03			ALL

MASTER BUNDLE LIST

D280T132

91-21-13

Section W0100

Page 3

Mar 09/2006



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0106	R1	AFT CABIN LEFT FWD (G)				
D05335P		AP1401	POS 01	D05335J	W0665	275-299
D06042P		AP1401	POS 02	D06042J	W0818	275-299
D02860		M00663	1461/280/L040			275-299
D02862		M00664	1455/280/L034			275-299
W0107	L*	E1-4 L,SHELF				
D04205P		AE0305	POS 21	D04205J	W0201	ALL
D07160P		AE0305	POS 49	D07160J	W0471	ALL
D05585P		AE0305	POS 52	D05585J	W1603	ALL
D05605P		AE0315	POS 07	D05605J	W0105	ALL
D05655P		AE0315	POS 14	D05655J	W0105	ALL
D04901P		AE0319	POS 56	D04901J	W0397	ALL
D05607J		AE0321	POS 06	D05607P	W0109	ALL
D20164		M01987	SHELF/E01/05			ALL
D20164A		M01987	SHELF/E01/05			ALL
D20164B		M01987	SHELF/E01/05			ALL
D20164C		M01987	SHELF/E01/05			ALL
W0108	R1	AFT CABIN RIGHT FWD (H)				
D05337P		AP1402	POS 01	D05337J	W0665	275-299
D06052P		AP1402	POS 02	D06052J	W0818	275-299
D02864		M00665	1455/280/R040			275-299
W0109	L*	E1-5 SHELF L				
D00435A			//			ALL
D00435B			//			ALL
D00435C			//			ALL
D05257P		AE0305	POS 23	D05257J	W1311	ALL
D06732P		AE0305	POS 24	D06732J	W0510	ALL
D06752P		AE0305	POS 25	D06752J	W0510	ALL
D04203P		AE0305	POS 26	D04203J	W0201	ALL
D05817P		AE0305	POS 27	D05817J	W0471	ALL
D06754P		AE0305	POS 28	D06754J	W0942	ALL
D04517P		AE0305	POS 53	D04517J	W0511	ALL
D06734P		AE0305	POS 54	D06734J	W0942	ALL
D05573P		AE0305	POS 55	D05573J	W1533	ALL
D04525P		AE0305	POS 56	D04525J	W1503	ALL
D05525P		AE0305	POS 57	D05525J	W0451	ALL
D04853P		AE0305	POS 58	D04853J	W1605	ALL

MASTER BUNDLE LIST

D280T132

91-21-13

Section W0100

Page 4

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0109	L*	E1-5 SHELF L (continued)				
D09123P		AE0319		D09123J	W9090	150, 152-199, 275-299
D04829P		AE0319	POS 73	D04829J	W0779	ALL
D05523P		AE0319	POS 79	D05523J	W0397	ALL
D05607P		AE0321	POS 06	D05607J	W0107	ALL
D05609J		AE0323	POS 02	D05609P	W0161	ALL
D09127		K09036	SHELF/E01/05			150, 152-199, 275-299
D09128		K09037	SHELF/E01/05			150, 152-199, 275-299
D09129		K09038	SHELF/E01/05			150, 152-199, 275-299
D09130		K09039	SHELF/E01/05			150, 152-199, 275-299
D00435		M00147	SHELF/E01/05			ALL
D13460		M01609	SHELF/E01/05			ALL
D13460A		M01609	SHELF/E01/05			ALL
D13460B		M01609	SHELF/E01/05			ALL
D13460C		M01609	SHELF/E01/05			ALL
D13560		M01610	SHELF/E01/05			ALL
D13560A		M01610	SHELF/E01/05			ALL
D13560B		M01610	SHELF/E01/05			ALL
D13560C		M01610	SHELF/E01/05			ALL

MASTER BUNDLE LIST

D280T132

91-21-13

Section W0100

Page 5 End

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0110	R2	AFT MID CABIN MOD (I)				
I D06148P				D06148J	W1224	150-199
I D06148P		AP0703	POS 02	D06148J	W0822	275-299
D05331P		AP0703	POS 03	D05331J	W0665	275-299
D06028P		AP0703	POS 06	D06028J	W1236	275-299
D05331P		AP0802E	POS 02	D05331J	W0665	050-099
D06148P		AP0802E	POS 03	D06148J	W1224	050-099
D06028P		AP0802E	POS 06	D06028J	W1236	050-099
D01768		M01191	0821/280/L004			275-299
D10676		M01192	0821/280/R008			275-299
D01770		M01193	0821/280/L008			275-299
W0111	R*	E1-1 SHELF				
D05133J		AE0303	POS 06	D05133P	W1283	ALL
D04981J		AE0303	POS 11	D04981P	W0741	150-199, 275-299
D05403J		AE0303	POS 12	D05403P	W1251	ALL
D05549J		AE0303	POS 14	D05549P	W1511	ALL
D05493J		AE0303	POS 18	D05493P	W0207	ALL
W0114	R2	FWD CABIN MID (L)				
D06062P			0330/283/L010	D06062J	W1224	ALL
D01762		M00658	0335/283/R006			ALL
I D01764		M00659	0334/280/L006			ALL
I D01766		M00660	0335/283/0000			ALL
W0115	R*	E1-3 SHELF, RIGHT SIDE				
D05613P		AE0313	POS 09	D05613J	W1100	ALL
D05615J		AE0315	POS 13	D05615P	W0117	ALL
D04859P		AE0317	POS 12	D04859J	W1515	ALL
D04879P		AE0317	POS 43	D04879J	W0527	ALL
D05821P		AE0317	POS 44	D05821J	W0475	ALL
D04683P		AE0317	POS 46	D04683J	W1615	ALL
W0117	R*	E1-4 R TO SHELF				
D01935			SHELF/E01/04			050-099, 151, 275-299
D05615P		AE0315	POS 13	D05615J	W0115	ALL
D07162P		AE0317	POS 15	D07162J	W0656	ALL
D05529P		AE0317	POS 17	D05529J	W1513	ALL
D04571P		AE0317	POS 24	D04571J	W1417	ALL
D05617J		AE0321	POS 02	D05617P	W0119	ALL

MASTER BUNDLE LIST

D280T132

91-21-13

Section W0110

Page 1

Aug 05/2009



767-200/300 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0117	R*	E1-4 R TO SHELF (continued)				
D05647J		AE0321	POS 4	D05647P	W1119	ALL
D01935		M01457	SHELF/E01/04			150, 152-199
D01935A		M01457	SHELF/E01/04			ALL
D01935B		M01457	SHELF/E01/04			ALL
D01935C		M01457	SHELF/E01/04			150, 152-199
D02257		T00232	SHELF/E01/04			ALL
D02259		T00232	SHELF/E01/04			ALL
W0119	R*	E1-5 SHELF R				
D00377A			//			ALL
D00377B			//			ALL
D00377C			//			ALL
D00381A			//			ALL
D00381B			//			ALL
D00381C			//			ALL
D05680P		AE0307	POS 44	D05680J	W0598	ALL
D04247P		AE0317	POS 18	D04247J	W0205	ALL
D04325P		AE0317	POS 19	D04325J	W0453	ALL
D04393P		AE0317	POS 20	D04393J	W0417	ALL
D04595P		AE0317	POS 21	D04595J	W0463	ALL
D04857P		AE0317	POS 22	D04857J	W1515	ALL
D04793P		AE0317	POS 23	D04793J	W0475	ALL
D04873P		AE0317	POS 25	D04873J	W1513	ALL
D04883P		AE0317	POS 50	D04883J	W0413	ALL
D04447P		AE0317	POS 51	D04447J	W1645	ALL
D04385P		AE0317	POS 52	D04385J	W0503	ALL
D05505P		AE0317	POS 53	D05505J	W1649	ALL
D04805P		AE0317	POS 54	D04805J	W1619	ALL
D04455P		AE0317	POS 55	D04455J	W0527	ALL
D04361P		AE0317	POS 56	D04361J	W1541	ALL
D04529P		AE0317	POS 57	D04529J	W1729	ALL
D04849P		AE0319	POS 67	D04849J	W0803	ALL
D04369P		AE0319	POS 70	D04369J	W0485	ALL
D04345P		AE0319	POS 78	D04345J	W0469	ALL
D05617P		AE0321	POS 02	D05617J	W0117	ALL
D05619J		AE0323	POS 01	D05619P	W0171	ALL
D00381		M00141	SHELF/E01/05			ALL
D00377		M00158	SHELF/E01/05			ALL
D09314		M09051				150, 152-199

MASTER BUNDLE LIST

D280T132

91-21-13

Section W0110

Page 2 End

Jun 28/2006



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0120	R1	AFT CABIN GALLEY SPEAKER HINGED PANEL (P)				
D05353P				D04395J	W0665	050-099
W0121	C*	E1-1 SHELF				
D05135J		AE0303	POS 04	D05135P	W1285	ALL
D05405J		AE0303	POS 10	D05405P	W1253	ALL
D04357J		AE0303	POS 13	D04357P	W1521	ALL
D05323J		AE0303	POS 17	D05323P	W0585	ALL
D06756P		AE0305	POS 34	D06756J	W0602	050-099, 150-199
W0122	R2	AFT MID CABIN MOD				
D06652P		AP0901	POS 03	D06652J	W0790	150-199
D06650P		AP0901	POS 04	D06650J	W1222	150-199
D06482P		AP0901	POS 05	D06482J	W0665	150-199
D06028P		AP0901	POS 06	D06028J	W1236	150-199
W0123	R2	FWD CABIN MID (R)				
D06738P				D06738J	W1228	050-099, 150-199
D13553		M01600	0382/284/R042			050-099, 150-199
D13554		M01601	0382/284/R038			050-099, 150-199
W0124	R2	MID-CABIN LOWERED CEILING				
D00192		D13832,				162-199
D11402		M01325	0425/ /			162-199
W0125	C*	E1-3 SHELF, CENTER				
D05635J		AE0315	POS 11	D05635P	W0127	ALL
D05625J		AE0315	POS 16	D05625P	W0127	ALL
D04239P		AE0319	POS 42	D04239J	W0207	ALL
W0127	C*	E1-4 C,SHELF				
D00417A			//			ALL
D00417B			//			ALL
D00417C			//			ALL
D00421A			//			ALL
D00421B			//			ALL
D00421C			//			ALL
D01371A			//			ALL
D01371B			//			ALL

MASTER BUNDLE LIST

D280T132

91-21-13

Section W0120

Page 1

Jun 28/2006



767-200/300 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0127	C*	E1-4 C,SHELF (continued)				
D01371C			//			ALL
D13366A			SHELF/E01/4			050-099, 150-199
D13366B			SHELF/E01/4			050-099, 150-199
D04705P		AE0307	POS 11	D04705J	W0407	ALL
D04405P		AE0307	POS 15	D04405J	W1725	ALL
D04305P		AE0307	POS 39	D04305J	W0409	ALL
D04355P		AE0307	POS 42	D04355J	W1521	050-099, 150-199
D04355P		AE0307	POS 43	D04355J	W1521	275-299
D05557P		AE0307	POS 62	D05557J	W0529	ALL
D04225P		AE0307	POS 63	D04225J	W0223	ALL
D04421P		AE0307	POS 67	D04421J	W0513	ALL
D04333P		AE0307	POS 89	D04333J	W1527	ALL
D04543P		AE0307	POS 90	D04543J	W0455	ALL
D04881P		AE0307	POS 91	D04881J	W0411	ALL
D04381P		AE0307	POS 93	D04381J	W0501	ALL
D04913P		AE0307	POS 95	D04913J	W1523	ALL
D05635P		AE0315	POS 11	D05635J	W0125	ALL
D05625P		AE0315	POS 16	D05625J	W0125	ALL
D04241P		AE0319	POS 49	D04241J	W0207	ALL
D05553P		AE0319	POS 50	D05553J	W0419	ALL
D04175P		AE0319	POS 52	D04175J	W0399	ALL
D04815P		AE0319	POS 53	D04815J	W1705	ALL
D05455P		AE0319	POS 54	D05455J	W0523	ALL
D04593P		AE0319	POS 55	D04593J	W0461	ALL
D04409P		AE0319	POS 57	D04409J	W0483	ALL
D05627J		AE0321	POS 05	D05627P	W0129	ALL
D05637J		AE0321	POS 11	D05637P	W0129	ALL
D00421		M00140	SHELF/E01/04			ALL
D00417		M00157	SHELF/E01/04			ALL
D01371		M00917	SHELF/E01/04			ALL
D13366		M01602	SHELF/E02/06			050-099, 150-199
W0129	C*	E1-5 SHELF C				
D05627P		AE0321	POS 05	D05627J	W0127	ALL
D05637P		AE0321	POS 11	D05637J	W0127	ALL
D05629J		AE0323	POS 13	D05629P	W0181	ALL

MASTER BUNDLE LIST

D280T132

91-21-13

Section W0120

Page 2 End

Aug 05/2009



767-200/300 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0130	N2	LH FWD CABIN NIGHT ILLUMINATION LIGHTS				
D06272J			0285/282/L040	D06272P	W1224	ALL
D06274P			0285/282/L040	D06274J	W1224	ALL
W0131	L*	E2-1 SHELF				
D04945J		AE0308	POS 01	D04945P	W0219	ALL
D04983J		AE0308	POS 02	D04983P	W0743	150-199, 275-299
D05547J		AE0308	POS 03	D05547P	W1601	ALL
D05137J		AE0308	POS 10	D05137P	W1291	ALL
D05483J		AE0308	POS 13	D05483P	W1261	ALL
W0132	R2	FWD RIGHT SIDE SCULPTURED CEILING PANEL				
D06100P			0364/284/R032	D06100J	W0820	275-299
D06098J			0365/284/R025	D06098P	W0822	275-299
D06096P			0455/284/R040	D06096J	W1236	275-299
D06102J			0455/284/R040	D06102P	W1236	275-299
W0133	L*	E2-2 L,SHELF				
D00323A			//			ALL
D00323B			//			ALL
D00323C			//			ALL
D00329A			//			ALL
D00329B			//			ALL
D00329C			//			ALL
D00331A			//			ALL
D00331B			//			ALL
D00331C			//			ALL
D00333A			//			ALL
D00333B			//			ALL
D00333C			//			ALL
D01735A			//			ALL
D01735B			//			050-099
D01735C			//			ALL
D01769A			//			ALL
D01769B			//			ALL
D01769C			//			ALL
D04695P		AE0306	POS 03	D04695J	W0685	ALL
D04229P		AE0306	POS 04	D04229J	W1633	ALL
D04721P		AE0306	POS 05	D04721J	W1533	ALL
D04151P		AE0306	POS 06	D04151J	W0391	050-099, 275-299

MASTER BUNDLE LIST

D280T132

91-21-13

Section W0130

Page 1

Jun 28/2006



767-200/300 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0133	L*	E2-2 L,SHELF (continued)				
D04868P		AE0306	POS 07	D04868J	W0510	ALL
D04735P		AE0306	POS 08	D04735J	W1633	ALL
D04445P		AE0306	POS 09	D04445J	W1311	ALL
D04217P		AE0306	POS 11	D04217J	W0219	ALL
D04681P		AE0306	POS 33	D04681J	W1633	ALL
D05201P		AE0306	POS 34	D05201J	W1503	ALL
D06151P		AE0306	POS 36	D06151J	W0819	150, 153-199, 277-299
D04791P		AE0306	POS 37	D04791J	W0471	ALL
D05203P		AE0306	POS 38	D05203J	W0451	ALL
D04429P		AE0306	POS 39	D04429J	W0517	ALL
D04373P		AE0306	POS 40	D04373J	W0487	ALL
D04717P		AE0306	POS 41	D04717J	W1561	ALL
D04151P		AE0306	POS 6	D04151J	W0391	150-199
D04233P		AE0307	POS 54	D04233J	W0203	ALL
D05703J		AE0314	POS 07	D05703P	W0135	ALL
D05753J		AE0314	POS 09	D05753P	W0135	ALL
D05733J		AE0314	POS 10	D05733P	W0135	ALL
D06199J		AE0314	POS 17	D06199P	W0135	157, 167-199, 275-299
D02817		K01303	SHELF/E02/02			157, 167-199, 275-299
D02275		K02065	SHELF/E02/02			ALL
D02279		K02067	SHELF/E02/02			ALL
D00331		M00112	SHELF/E02/02			ALL
D00333		M00123	SHELF/E02/02			ALL
D00323		M00134	SHELF/E02/02			ALL
D00329		M00186	SHELF/E02/02			ALL
D01423		M00977	SHELF/E02/02			ALL
D01735		M01134	SHELF/E02/02			ALL
D01769		M1200				ALL
W0135	L*	E2-3 L SHELF				
D00327A			//			ALL
D00327B			//			ALL
D00327C			//			ALL
D00327D			//			ALL
D00327E			//			ALL
D00327F			//			ALL
D05227P		AE0306	POS 12	D05227J	W1701	ALL
D04215P		AE0306	POS 13	D04215J	W0219	ALL
D05207P		AE0306	POS 14	D05207J	W1605	ALL

MASTER BUNDLE LIST

D280T132

91-21-13

Section W0130

Page 2

Jun 28/2006



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0135	L*	E2-3 L SHELF (continued)				
D04765P		AE0306	POS 16	D04765J	W0711	ALL
D05427P		AE0306	POS 43	D05427J	W0517	ALL
D05229P		AE0306	POS 44	D05229J	W1603	ALL
D04711P		AE0306	POS 46	D04711J	W0471	ALL
D04731P		AE0307	POS 04	D04731J	W0695	ALL
D04729P		AE0307	POS 06	D04729J	W0693	ALL
D05225P		AE0307	POS 10	D05225J	W1307	ALL
D04741P		AE0307	POS 33	D04741J	W0713	ALL
D05703P		AE0314	POS 07	D05703J	W0133	ALL
D05753P		AE0314	POS 09	D05753J	W0133	ALL
D05733P		AE0314	POS 10	D05733J	W0133	ALL
D06199P		AE0314	POS 17	D06199J	W0133	157, 167-199, 275-299
D05705J		AE0316	POS 04	D05705P	W0014	ALL
D06223P		AE0322	POS 12	D06223J	W0691	ALL
D04943P		AE0322	POS 28	D04943J	W1505	ALL
D04725P		AE0322	POS 31	D04725J	W0691	ALL
D06594P		AE0322	POS 37	D06594J	W0606	ALL
D00327		M00138	SHELF/E02/03			ALL
D01421		M00976	SHELF/E02/03			ALL
W0136	R2	P33-THRUST REVERSER MODIF. ASSY-R2				
D20112		K02161	P033-00/ /			ALL
D20178		K02181	P033-00/ /			ALL
D20186		K02185	P033-00/ /			ALL
D20190		K02187	P033-00/ /			ALL
W0138	R1	P33-R1-POWER DISTRIBUTION				
D04330J		AE0203	POS 21	D04330P	W0206	ALL
D06476J		AE0207	POS 08	D06476P	W1342	ALL
W0139	L*	E2-5 SHELF,L				
D00439A			//			ALL
D00439B			//			ALL
D00439C			//			ALL
D00441A			//			ALL
D00441B			//			ALL
D00441C			//			ALL
D00443A			//			ALL
D00443B			//			ALL

MASTER BUNDLE LIST

D280T132

91-21-13

Section W0130

Page 3

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0139	L*	E2-5 SHELF,L (continued)				
D00443C			//			ALL
D00445A			//			ALL
D00445B			//			ALL
D00445C			//			ALL
D02889			E002-05/ /			275-278
D00447A			SHELF/E02/-05			050-099, 151, 275-299
D00447B			SHELF/E02/-05			050-099, 151, 275-299
D00447C			SHELF/E02/-05			050-099, 151, 275-299
D05029P		AE0306	POS 25	D05029J	W0689	ALL
D04633P		AE0306	POS 26	D04633J	W0649	ALL
D04213P		AE0306	POS 27	D04213J	W0219	ALL
D04737P		AE0306	POS 56	D04737J	W1633	ALL
D04931P		AE0306	POS 57	D04931J	W0847	ALL
D04953P		AE0307	POS 22	D04953J	W0849	ALL
D04927P		AE0307	POS 24	D04927J	W0843	ALL
D05109P		AE0307	POS 45	D05109J	W0721	ALL
D04813P		AE0320	POS 24	D04813J	W1649	ALL
D04957P		AE0322	POS 43	D04957J	W0851	277-278
D04603P		AE0322	POS 47	D04603J	W0657	ALL
D04607P		AE0322	POS 48	D04607J	W0659	ALL
D04599P		AE0322	POS 50	D04599J	W0627	ALL
D04601P		AE0322	POS 51	D04601J	W0655	ALL
D05001P		AE0322	POS 53	D05001J	W0863	ALL
D04929P		AE0322	POS 55	D04929J	W0845	ALL
D05709J		AE0324	POS 12	D05709P	W0163	ALL
D01429		AE0324	POS 13			ALL
D01427		AE0324	POS 17			ALL
D02889		K10323	SHELF/E02/05			277-299
D00447		M00172	SHELF/E02/			050-099, 151, 275-299
D00447A		M00172	SHELF/E02/			150, 152-199
D00447B		M00172	SHELF/E02/			150, 152-199
D00447C		M00172	SHELF/E02/			150, 152-199
D00447D		M00172	SHELF/E02/			150, 152-166
D00441		M00180	SHELF/E02/05			ALL
D00439		M00188	SHELF/E02/05			ALL
D00443		M00189	SHELF/E02/05			ALL
D00445		M00190	SHELF/E02/05			ALL

MASTER BUNDLE LIST

D280T132

91-21-13

Section W0130

Page 4 End

Aug 05/2009



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0140	L2	P33-THRUST REVERSER MODIF. ASSY-L2				
D20110		K02160	P033-00/ /			ALL
D20180		K02182	P033-00/ /			ALL
D20188		K02186	P033-00/ /			ALL
D20192		K02188	P033-00/ /			ALL
W0141	R*	E2-1 SHELF				
D00667A			//			ALL
D00667B			//			ALL
D00667C			//			ALL
D00831A			//			ALL
D00831B			//			ALL
D00831C			//			ALL
D00833A			//			ALL
D00833B			//			ALL
D00833C			//			ALL
D00835A			//			ALL
D00835B			//			ALL
D00835C			//			ALL
D01255A			//			ALL
D01255B			//			ALL
D01255C			//			ALL
D01257A			//			ALL
D01257B			//			ALL
D01257C			//			ALL
D01261A			//			ALL
D01261B			//			ALL
D01261C			//			ALL
D01265A			//			ALL
D01265B			//			ALL
D01265C			//			ALL
D05139J		AE0308	POS 09	D05139P	W1293	ALL
D05487J		AE0308	POS 11	D05487P	W1265	ALL
D04363J		AE0308	POS 14	D04363P	W1541	ALL
D05489J		AE0308	POS 15	D05489P	W1511	ALL
D04843J		AE0308	POS 16	D04843P	W1309	ALL
D04257J		AE0308	POS 18	D04257P	W0205	ALL
D11812		K1071				ALL
D01261		M00523	SHELF/E02/01			ALL
D00667		M00525	SHELF/E02/01			ALL

MASTER BUNDLE LIST

D280T132

91-21-13

Section W0140

Page 1

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0141	R*	E2-1 SHELF (continued)				
D01265		M00529	SHELF/E02/01			ALL
D00831		M00533	SHELF/E02/01			ALL
D00833		M00534	SHELF/E02/01			ALL
D00835		M00535	SHELF/E02/01			ALL
D01255		M00538	SHELF/E02/01			ALL
D01257		M00539	SHELF/E02/01			ALL
W0142	R2	P33-R2-MISC ELECTRICAL PANEL				
D05648J		AE0203	POS 01	D05648P	W0902	ALL
D04803J		AE0203	POS 02	D04803P	W0475	ALL
D05172J		AE0203	POS 03	D05172P	W1230	ALL
D05650J		AE0203	POS 04	D05650P	W0628	ALL
D05195J		AE0203	POS 05	D05195P	W0853	ALL
D06252J		AE0203	POS 06	D06252P	W1204	ALL
D05668J		AE0203	POS 07	D05668P	W0768	ALL
D05800J		AE0203	POS 08	D05800P	W0620	ALL
D05908J		AE0203	POS 09	D05908P	W0902	ALL
D05820J		AE0203	POS 10	D05820P	W1256	ALL
D05960J		AE0203	POS 11	D05960P	W0272	ALL
D05840J		AE0203	POS 12	D05840P	W0656	ALL
D05946J		AE0203	POS 14	D05946P	W1258	ALL
D04928J		AE0203	POS 15	D04928P	W0616	ALL
D05744J		AE0203	POS 17	D05744P	W0624	ALL
D04128J		AE0203	POS 18	D04128P	W0256	ALL
D05860J		AE0203	POS 19	D05860P	W0272	ALL
D05322J		AE0203	POS 20	D05322P	W0206	ALL
D05334J		AE0203	POS 22	D05334P	W1730	ALL
D05690J		AE0207	POS 09	D05690P	W1258	ALL
D05890J		AE0207	POS 10	D05890P	W1274	ALL
D03674		K00049	P033-00/ /			ALL
D03676		K00050	P033-00/ /			ALL
D00342		K00115	P033-00/ /			ALL
D03938		K00310	P033-00/ /			ALL
D03910		K00312	P033-00/ /			ALL
D00792		K00319	P033-00/ /			ALL
D03908		K00350	P033-00/ /			ALL
D03964		K00372	P033-00/ /			ALL
D03966		K00373	P033-00/ /			ALL
D03968		K00374	P033-00/ /			ALL

MASTER BUNDLE LIST

D280T132

91-21-13

Section W0140

Page 2

Mar 09/2006



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0142	R2	P33-R2-MISC ELECTRICAL PANEL (continued)				
D03972		K00376	P033-00/ /			ALL
D00468		K00401	P033-00/ /			ALL
D03946		K00403	P033-00/ /			ALL
D00914		K00414	P033-00/ /			ALL
D00930		K00513	P033-00/ /			ALL
D00546		K00514	P033-00/ /			ALL
D00628		K00517	P033-00/ /			ALL
D00630		K00518	P033-00/ /			ALL
D00660		K00520	P033-00/ /			ALL
D00624		K00522	P033-00/ /			ALL
D01396		K00528	P033-00/ /			ALL
D10016		K00623	P033-00/ /			ALL
D10126		K00634	P033-00/ /			ALL
D10184		K00643	P033-00/ /			ALL
D10190		K00646	P033-00/ /			ALL
D10232		K00670	P033-00/ /			ALL
D10460		K00729	P033-00/ /			ALL
D11758		K01040	P033-00/ /			ALL
D13188		K01150	P033-00/ /			ALL
D11962		K01153	P033-00/ /			ALL
D11964		K01154	P033-00/ /			ALL
D12002		K01155	P033-00/ /			ALL
D12004		K01156	P033-00/ /			ALL
D02985		K02151	P033-00/ /			ALL
D10130		K10316	P033-00/ /			ALL
D10162		K10359	P033-00/ /			ALL
D02845		K1305				280-299
D12142		K2110				050-099, 150-199
D12146		K2112				050-099, 150-199
D12150		K2114				050-099, 150-199
D12152		K2115				050-099, 150-199
D12154		K2116				050-099, 150-199
W0143	R*	E2-2 R,SHELF				
D05713J		AE0314	POS 05	D05713P	W0145	ALL
D05763J		AE0314	POS 14	D05763P	W0145	ALL
D06261J		AE0314	POS 4	D06261P		150-166
D06261J		AE0314	POS 4	D06261P	W0145	167-199, 275-299
D05575P		AE0320	POS 03	D05575J	W0515	ALL

MASTER BUNDLE LIST

D280T132

91-21-13

Section W0140

Page 3

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0143	R*	E2-2 R,SHELF (continued)				
D05861P		AE0320	POS 05	D05861J	W1515	ALL
D06119P		AE0322	POS 05	D06119J	W0807	ALL
D05425P		AE0322	POS 23	D05425J	W0519	ALL
W0144	L2	P33-L2-MISC ELECTRICAL PANEL				
D05798J		AE0207	POS 01	D05798P	W0572	ALL
D05332J		AE0207	POS 02	D05332P	W1704	ALL
D05191J		AE0207	POS 03	D05191P	W0689	ALL
D05193J		AE0207	POS 04	D05193P	W0689	ALL
D05662J		AE0207	POS 05	D05662P	W0752	ALL
D05664J		AE0207	POS 06	D05664P	W0756	ALL
D04801J		AE0207	POS 07	D04801P	W0471	ALL
D03654		K00051	P033-00/ /			ALL
D03656		K00052	P033-00/ /			ALL
D03658		K00053	P033-00/ /			ALL
D03660		K00054	P033-00/ /			ALL
D03662		K00055	P033-00/ /			ALL
D03664		K00056	P033-00/ /			ALL
D02418		K00087	P033-00/ /			ALL
D02420		K00088	P033-00/ /			ALL
D00600		K00126	P033-00/ /			ALL
D00602		K00127	P033-00/ /			ALL
D00604		K00128	P033-00/ /			ALL
D02272		K00216	P033-00/ /			ALL
D01806		K00217	P033-00/ /			ALL
D01804		K00218	P033-00/ /			ALL
D03980		K00220	P033-00/ /			ALL
D03948		K00241	P033-00/ /			ALL
D03952		K00243	P033-00/ /			ALL
D02088		K00352	P033-00/ /			ALL
D03906		K00353	P033-00/ /			ALL
D03916		K00400	P033-00/ /			ALL
D03924		K00402	P033-00/ /			ALL
D03942		K00411	P033-00/ /			ALL
D01347		K00460	P033-00/ /			ALL
D01722		K00494	P033-00/ /			ALL
D00542		K00515	P033-00/ /			ALL
D03510		K00516	P033-00/ /			ALL
D01526		K00550	P033-00/ /			ALL

MASTER BUNDLE LIST

D280T132

91-21-13

Section W0140

Page 4

Mar 09/2006



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0144	L2	P33-L2-MISC ELECTRICAL PANEL (continued)				
D01268		K00552	P033-00/ /			ALL
D10186		K00644	P033-00/ /			ALL
D10188		K00645	P033-00/ /			ALL
D10230		K00648	P033-00/ /			ALL
D10414		K00717	P033-00/ /			ALL
D10494		K00762	P033-00/ /			ALL
D10526		K00777	P033-00/ /			ALL
D01881		K00928	P033-00/ /			150-199, 275-299
D13184		K01148	P033-00/ /			ALL
D13186		K01149	P033-00/ /			ALL
D13530		K01225	P033-00/ /			ALL
D02987		K02152	P033-00/ /			ALL
D01881		K0928				050-099
D10128		K10317	P033-00/ /			ALL
D10132		K10318	P033-00/ /			ALL
D10168		K10358	P033-00/ /			ALL
D23138		K10446	P033-00/ /			ALL
D11814		K1069				ALL
D12144		K2111				050-099, 150-199
D12148		K2113				050-099, 150-199
W0145	R*	E2-3 R,SHELF				
D00351A			//			ALL
D00351B			//			ALL
D00351C			//			ALL
D00353A			//			ALL
D00353B			//			ALL
D00353C			//			ALL
D00357A			//			ALL
D00357B			//			ALL
D00357C			//			ALL
D00359A			//			ALL
D00359B			//			ALL
D00359C			//			ALL
D00361A			//			ALL
D00361B			//			ALL
D00361C			//			ALL
D05713P		AE0314	POS 05	D05713J	W0143	ALL
D05763P		AE0314	POS 14	D05763J	W0143	ALL

MASTER BUNDLE LIST

D280T132

91-21-13

Section W0140

Page 5

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0145	R*	E2-3 R,SHELF (continued)				
D06261P		AE0314	POS 4	D06261J	W0143	167-199, 275-299
D01425		AE0316	POS 06			ALL
D05715J		AE0316	POS 11	D05715P	W0016	ALL
D05439P		AE0320	POS 06	D05439J	W0473	ALL
D04667P		AE0320	POS 08	D04667J	W0473	ALL
D05065P		AE0320	POS 10	D05065J	W1703	ALL
D05407P		AE0320	POS 11	D05407J	W1511	ALL
D04767P		AE0320	POS 12	D04767J	W1615	ALL
D04449P		AE0320	POS 13	D04449J	W1645	ALL
D04821P		AE0320	POS 14	D04821J	W1619	ALL
D04811P		AE0320	POS 16	D04811J	W1649	ALL
D04679P		AE0320	POS 37	D04679J	W0453	ALL
D04377P		AE0320	POS 38	D04377J	W0489	ALL
D04899P		AE0320	POS 40	D04899J	W0527	ALL
D04339P		AE0320	POS 41	D04339J	W1513	ALL
D04819P		AE0320	POS 42	D04819J	W0453	ALL
D04253P		AE0320	POS 43	D04253J	W0205	ALL
D06157P		AE0322	POS 19	D06157J	W0817	150, 153-199, 277-299
D03693P		AE0322	POS 24	D03693J	W1615	ALL
D04317P		AE0322	POS 29	D04317J	W0441	ALL
D04505P		AE0322	POS 30	D04505J	W0855	ALL
D04697P		AE0322	POS 32	D04697J	W0687	ALL
D04433P		AE0322	POS 33	D04433J	W0519	ALL
D02819		K01304	SHELF/E02/03			157, 167-199, 275-299
D02277		K02066	SHELF/E02/03			ALL
D02281		K02068	SHELF/E02/03			ALL
D02283		K02069	SHELF/E02/03			ALL
D00351		M00101	SHELF/E02/03			ALL
D00359		M00113	SHELF/E02/03			ALL
D00361		M00124	SHELF/E02/03			ALL
D00353		M00135	SHELF/E02/03			ALL
D00357		M00187	SHELF/E02/03			ALL
W0146	S2	P33-S2-MISC ELECTRICAL PANEL				
D04042J		AE0203	POS 23	D04042P	W0264	ALL
W0148	L2	P6-5-L2-MN PWR DISTR PNL				
D06164J		AE0222	POS 05	D06164P	W0632	ALL
D06152J		AF0232	POS 20	D06152P	W0062	ALL

MASTER BUNDLE LIST

D280T132

91-21-13

Section W0140

Page 6

Mar 09/2006



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0148	L2	P6-5-L2-MN PWR DISTR PNL (continued)				
D10272		K00702	P006-05/ /			ALL
D10274		K00703	P006-05/ /			ALL
D10276		K00704	P006-05/ /			ALL
D10286		K00709	P006-05/ /			ALL
D10292		K00712	P006-05/ /			ALL
D10508		K00771	P006-05/ /			ALL
W0149	R*	E2-5 SHELF,RIGHT				
D00455A			//			ALL
D00455B			//			ALL
D00455C			//			ALL
D00459A			//			ALL
D00459B			//			ALL
D00459C			//			ALL
D04581P		AE0306	POS 59	D04581J	W0623	ALL
D04613P		AE0307	POS 102	D04613J	W1343	ALL
D04227P		AE0307	POS 18	D04227J	W0203	ALL
D04625P		AE0307	POS 20	D04625J	W0645	ALL
D04615P		AE0307	POS 46	D04615J	W0639	ALL
D04647P		AE0307	POS 48	D04647J	W0665	ALL
D05303P		AE0307	POS 49	D05303J	W0857	ALL
D05421P		AE0307	POS 71	D05421J	W0645	ALL
D04629P		AE0307	POS 72	D04629J	W0647	ALL
D05593P		AE0320	POS 25	D05593J	W1407	ALL
D05678P		AE0320	POS 53	D05678J	W1226	ALL
D04251P		AE0320	POS 55	D04251J	W0205	ALL
D04963P		AE0320	POS 57	D04963J	W0853	ALL
D05852P		AE0322	POS 59	D05852J	W0926	ALL
D05719J		AE0324	POS 10	D05719P	W0173	ALL
D01671		K00671	SHELF/E02/05			275-299
D02555		K01258	SHELF/E02/05			275-299
D02557		K01259	SHELF/E02/05			275-299
D02645		K01262	SHELF/E02/05			050-099
D00459		M00108	SHELF/E02/05			ALL
D00451		M00170	SHELF/E02/05			ALL
D00449		M00171	SHELF/E02/05			ALL
D00481		M00171	SHELF/E02/05			ALL
D00455		M00177	SHELF/E02/05			ALL
D02267		M01633	SHELF/E02/05			050-099, 150-199

MASTER BUNDLE LIST

D280T132

91-21-13

Section W0140

Page 7

Jun 28/2006



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0149	R*	E2-5 SHELF,RIGHT (continued)				
D02269		M01634	SHELF/E02/05			050-099, 150-199
D02271		M01635	SHELF/E02/05			050-099, 150-199



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0150	L2	P6-5-L2-MN PWR DISTR PNL				
D06166J		AE0222	POS 06	D06166P	W0632	ALL
D06154J		AF0232	POS 23	D06154P	W0062	ALL
D10658		K00794	P006-05/ /			ALL
W0151	C*	E2-1 SHELF				
D05293J		AE0308	POS 04	D05293P	W0585	ALL
D05141J		AE0308	POS 08	D05141P	W1295	ALL
D05485J		AE0308	POS 12	D05485P	W1263	ALL
W0152	R2	P6-5-R2-MN PWR DISTR PNL				
D06156J		AF0232	POS 21	D06156P	W0066	ALL
D06172J		AF0232	POS 25	D06172P	W0638	ALL
D10278		K00705	P006-05/ /			ALL
D10280		K00706	P006-05/ /			ALL
D10288		K00710	P006-05/ /			ALL
D10294		K00713	P006-05/ /			ALL
W0153	C*	E2-2 C,SHELF				
D05151P		AE0307	POS 30	D05151J	W1581	ALL
D05723J		AE0314	POS 08	D05723P	W0155	ALL
W0154	R2	P6-5-R2-MN PWR DISTR PNL				
D06158J		AF0232	POS 24	D06158P	W0066	ALL
D06174J		AF0232	POS 27	D06174P	W0638	ALL
W0155	C*	E2-3 C,SHELF				
D04343P		AE0307	POS 34	D04343J	W1527	ALL
D05723P		AE0314	POS 08	D05723J	W0153	ALL
W0156	S2	P6-5-S2-MN PWR DISTR PNL				
D06168J		AE0222	POS 04	D06168P	W0634	ALL
D06160J		AF0232	POS 22	D06160P	W0070	ALL
D10264		K00666	P006-05/ /			ALL
D10270		K00701	P006-05/ /			ALL
D10282		K00707	P006-05/ /			ALL
D10284		K00708	P006-05/ /			ALL
D10290		K00711	P006-05/ /			ALL
D10296		K00714	P006-05/ /			ALL

MASTER BUNDLE LIST

D280T132

91-21-13

Section W0150

Page 1

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0156	S2	P6-5-S2-MN PWR DISTR PNL (continued)				
D10298		K00715	P006-05/ /			ALL
D10432		K00728	P006-05/ /			ALL
D10300		K00743	P006-05/ /			ALL
D10306		K00747	P006-05/ /			ALL
D10310		K00749	P006-05/ /			ALL
D10510		K00772	P006-05/ /006			ALL
D10268		K10250	P006-05/ /			ALL
W0157	R2	FWD CABIN MID (L)				
D06740P				D06740J	W1228	050-099, 150-199
D13555		M1598				050-099, 150-199
D13556		M1599				050-099, 150-199
W0158	S2	P6-5-S2-MN PWR DISTR PNL				
D06170J		AE0222	POS 03	D06170P	W0634	ALL
D06162J		AF0232	POS 26	D06162P	W0070	ALL
D10262		K00665	P006-05/ /			ALL
D10302		K00744	P006-05/ /			ALL
D10308		K00748	P006-05/ /			ALL
D10266		K10247	P006-05/ /			ALL

MASTER BUNDLE LIST

D280T132

91-21-13

Section W0150

Page 2 End

Mar 09/2006



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0161	L2	E1-6 L,SHELF				
D00367A			//			ALL
D00367B			//			ALL
D00367C			//			ALL
D04201P		AE0305	POS 29	D04201J	W0201	ALL
D04719P		AE0305	POS 30	D04719J	W1561	ALL
D05371P		AE0305	POS 59	D05371J	W1501	ALL
D04699P		AE0319	POS 86	D04699J	W0751	ALL
D04753P		AE0319	POS 90	D04753J	W0264	ALL
D05609P		AE0323	POS 02	D05609J	W0109	ALL
D00367		M00159	SHELF/E01/06			ALL
W0163	L*	E2-6 SHELF, L HF XCVR				
D00641A			//			ALL
D00641B			//			ALL
D00641C			//			ALL
D06153P		AE0306	POS 28	D06153J	W0819	150, 153-199, 277-299
D04211P		AE0306	POS 29	D04211J	W0219	ALL
D04653P		AE0306	POS 31	D04653J	W0683	ALL
D04787P		AE0306	POS 61	D04787J	W0633	ALL
D05709P		AE0324	POS 12	D05709J	W0139	ALL
D00641		M00152	SHELF/E02/06			ALL
D02697		M1803				150, 153-199, 277-299
W0165	L*	E5-1 L,SHELF				
D00401A			//			ALL
D00401B			//			ALL
D00401C			//			ALL
D00463A			//			ALL
D00463B			//			ALL
D00463C			//			ALL
D04223P		AC0604	POS 01	D04223J	W0219	ALL
D04415P		AC0604	POS 02	D04415J	W0511	ALL
D04575P		AC0604	POS 03	D04575J	W0615	ALL
D04579P		AC0604	POS 04	D04579J	W0623	ALL
D04153P		AC0604	POS 06	D04153J	W0391	ALL
D04109P		AC0604	POS 14	D04109J	W0345	ALL
D00401		M00202	SHELF/E05/01			ALL
D00463		M00215	SHELF/E05/01			ALL

MASTER BUNDLE LIST

D280T132

91-21-13

Section W0160

Page 1 End

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0171	R*	E1-6 R,SHELF				
D00371A			//			ALL
D00371B			//			ALL
D00371C			//			ALL
D04245P		AE0317	POS 27	D04245J	W0205	ALL
D05373P		AE0317	POS 59	D05373J	W1541	ALL
D04769P		AE0317	POS 60	D04769J	W1615	ALL
D05397P		AE0317	POS 61	D05397J	W1511	ALL
D04761P		AE0319	POS 91	D04761J	W0725	ALL
D05619P		AE0323	POS 01	D05619J	W0119	ALL
D00371		M00161	SHELF/E01/06			ALL
W0173	R*	E2-6 SHELF,R HF XCVR				
D00643A			//			ALL
D00643B			//			ALL
D00643C			//			ALL
D04789P		AE0320	POS 27	D04789J	W0635	ALL
D04255P		AE0320	POS 59	D04255J	W0211	ALL
D06159P		AE0320	POS 60	D06159J	W0817	150, 153-199, 277-299
D04657P		AE0322	POS 60	D04657J	W0675	ALL
D05719P		AE0324	POS 10	D05719J	W0149	ALL
D00643		M00153	SHELF/E02/06			ALL
D02699		M1805				150, 153-199, 277-299
W0175	R*	E5-1 R,SHELF				
D00403A			//			ALL
D00403B			//			ALL
D00403C			//			ALL
D01419B			//			ALL
D01419C			//			ALL
D04577P		AC0604	POS 07	D04577J	W0617	ALL
D04967P		AC0604	POS 10	D04967J	W0855	ALL
D04259P		AC0604	POS 11	D04259J	W0211	ALL
D04423P		AC0604	POS 12	D04423J	W0515	ALL
D04113P		AC0604	POS 13	D04113J	W0349	ALL
D00403		M00203	SHELF/E05/01			ALL
D01419		M00216	SHELF/E05/01			ALL
W0176	L2	P36-L2-INTEGRATION				
D05576J		AE0209	POS 11	D05576P	W0924	ALL

MASTER BUNDLE LIST

D280T132

91-21-13

Section W0170

Page 1

Mar 09/2006



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0176	L2	P36-L2-INTEGRATION (continued)				
D05714J		AE0209	POS 12	D05714P	W0924	ALL
D04802J		AE0209	POS 16	D04802P	W0510	ALL
D04672J		AE0209	POS 17	D04672P	W0510	ALL
D04338J		AE0209	POS 21	D04338P	W0608	ALL
D05431J		AE0209	POS 22	D05431P	W0471	ALL
D05433J		AE0209	POS 23	D05433P	W0471	ALL
D05312J		AE0209	POS 26	D05312P	W0750	ALL
D04906J		AE0209	POS 27	D04906P	W0942	ALL
D05315J		AE0209	POS 28	D05315P	W1501	ALL
D05308J		AE0209	POS 29	D05308P	W0744	ALL
D05497J		AE0209	POS 30	D05497P	W0471	ALL
D05310J		AE0209	POS 31	D05310P	W0748	ALL
D05060J		AE0209	POS 32	D05060P	W0654	ALL
D04904J		AE0209	POS 33	D04904P	W0942	ALL
D05360J		AE0209	POS 35	D05360P	W1702	ALL
D05832J		AE0209	POS 36	D05832P	W0756	ALL
D05300J		AE0209	POS 37	D05300P	W0756	ALL
D05306J		AE0209	POS 39	D05306P	W0746	ALL
D06582J		AE0209	POS 41	D06582P	W0758	ALL
D05780J		AE0209	POS 43	D05780P	W0602	ALL
D04709J		AE0209	POS 45	D04709P	W0689	ALL
D04932J		AE0209	POS 46	D04932P	W0602	ALL
D06934J		AE0209	POS 48	D06934P	W1232	ALL
D05894J		AE0223	POS 03	D05894P	W0752	ALL
D05658J		AE0223	POS 06	D05658P	W0572	ALL
D04662J		AE0223	POS 07	D04662P	W0572	ALL
D05930J		AE0223	POS 08	D05930P	W0572	ALL
D06286J		AE0223	POS 11	D06286P	W0572	ALL
D03474		K00010	P036-00/ /			ALL
D03476		K00016	P036-00/ /			ALL
D03478		K00021	P036-00/ /			ALL
D03480		K00022	P036-00/ /			ALL
D03492		K00026	P036-00/ /			ALL
D00578		K00043	P036-00/ /			ALL
D00598		K00124	P036-00/ /			ALL
D03532		K00135	P036-00/ /			ALL
D03610		K00140	P036-00/ /			ALL
D03612		K00141	P036-00/ /			ALL
D03614		K00142	P036-00/ /			ALL
D03554		K00143	P036-00/ /			ALL

MASTER BUNDLE LIST

D280T132

91-21-13

Section W0170

Page 2

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0176	L2	P36-L2-INTEGRATION (continued)				
D01736		K00144	P036-00/ /			ALL
D01612		K00145	P036-00/ /			ALL
D02886		K00146	P036-00/ /			ALL
D03512		K00147	P036-00/ /			ALL
D03514		K00148	P036-00/ /			ALL
D03516		K00149	P036-00/ /			ALL
D03528		K00165	P036-00/ /			ALL
D02910		K00167	P036-00/ /			ALL
D02914		K00170	P036-00/ /			ALL
D03534		K00177	P036-00/ /			ALL
D03536		K00178	P036-00/ /			ALL
D02912		K00199	P036-00/ /			ALL
D02284		K00227	P036-00/ /			ALL
D03586		K00340	P036-00/ /			ALL
D02268		K00351	P036-00/ /			ALL
D00340		K00356	P036-00/ /			ALL
D03622		K00434	P036-00/ /			ALL
D01172		K00511	P036-00/ /			ALL
D01388		K00529	P036-00/ /			ALL
D01948		K00551	P036-00/ /			ALL
D10160		K00650	P036-00/ /			ALL
D10346		K00676	P036-00/ /			ALL
D10342		K00716	P036-00/ /			ALL
D01723		K00757	P036-00/ /			ALL
D10456		K00759	P036-00/ /			ALL
D10458		K00760	P036-00/ /			ALL
D01793		K00834	P036-00/ /			ALL
D10738		K00840	P036-00/ /			ALL
D10890		K00886	P036-00/ /			ALL
D10950		K00895	P036-00/ /			ALL
D11654		K01031	P036-00/ /			ALL
D11792		K01033	P036-00/ /			ALL
D11750		K01036	P036-00/ /			150-199, 275-299
D11750		K01036 RLY				050-099
D11752		K01037	P036-00/ /			150-199, 275-299
D11752		K01037 RLY				050-099
D11798		K01043	P036-00/ /			ALL
D11808		K01068	P036-00/ /			ALL
D11826		K01077	P036-00/ /			150-199, 275-299

MASTER BUNDLE LIST

D280T132

91-21-13

Section W0170

Page 3

Mar 09/2006



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0176	L2	P36-L2-INTEGRATION (continued)				
D11882		K01115	P036-00/ /			050-099, 150-156, 162-166, 275-276
D11884		K01116	P036-00/ /			050-099, 150-156, 162-166, 275-276
D11886		K01117				050-099, 150-156, 162-166, 275-276
D11888		K01118				050-099, 150-156, 162-166, 275-276
D11890		K01119				050-099, 150-156, 162-166, 275-276
D11892		K01120				050-099, 150-156, 162-166, 275-276
D01983		K01128	P036-00/ /			050-099, 150-156, 162-166, 275-276
D01989		K01131	P036-00/ /			050-099, 150-156, 162-166, 275-276
D01991		K01132				050-099, 150-156, 162-166, 275-276
D13418		K01206	P036-00/ /			ALL
D13432		K01215	P036-00/ /			ALL
D13396		K01219	P036-00/ /			150-199, 275-299
D13578		K01226	P036-00/ /			ALL
D13628		K01250	P036-00/ /			ALL
D13804		K01255	P036-00/ /			ALL
D13840		K01263	P036-00/ /			050-099, 162-199
D13842		K01264	P036-00/ /			050-099, 162-199
D13844		K01266	P036-00/ /			050-099, 162-199
D13846		K01267	P036-00/ /			050-099, 162-199
D13848		K01268	P036-00/ /			050-099, 162-199
D13852		K01270	P036-00/ /			050-099, 150, 152-199
D12244		K01272	P036-00/ /			050-099, 155-199, 276-299
D12246		K01274	P036-00/ /			ALL
D12250		K01276	P036-00/ /			ALL
D12278		K01284	P036-00/ /			050-099
D13400		K02058	P036-00/ /			ALL
D13402		K02059	P036-00/ /			ALL
D13404		K02060	P036-00/ /			ALL
D13406		K02061	P036-00/ /			ALL
D13408		K02062	P036-00/ /			ALL

MASTER BUNDLE LIST

D280T132

91-21-13

Section W0170

Page 4

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0176	L2	P36-L2-INTEGRATION (continued)				
D13410		K02063	P036-00/ /			ALL
D13412		K02064	P036-00/ /			ALL
D12102		K02085	P036-00/ /			150-199, 275-299
D12156		K02089	P036-00/ /			050-099, 155-199, 276-299
D12164		K02095	P036-00/ /			050-099, 155-199, 276-299
D12160		K02097	P036-00/ /			050-099, 155-199, 276-299
D12122		K02103	P036-00/ /			150-199
D12126		K02105	P036-00/ /			050-099, 150-199
D12130		K02107	P036-00/ /			050-099, 150-199
D12134		K02109	P036-00/ /			050-099, 150-199
D20090		K02154	P036-00/ /			ALL
D20092		K02155	P036-00/ /			ALL
D20102		K02164	P036-00/ /			ALL
D20542		K02232	P036-00/ /			050-099, 150-199
D10164		K10234	P036-00/ /			ALL
D10166		K10236	P036-00/ /			ALL
D10142		K10315	P036-00/ /			ALL
D11629		K10691	P036-00/ /			ALL
D11631		K10693	P036-00/ /			ALL
D11826		K1077				050-099
D13396		K1219				050-099
D13040		K2044				ALL
D12102		K2085				050-099
D12122		K2103				050-099

MASTER BUNDLE LIST

D280T132

91-21-13

Section W0170

Page 5 End

Feb 06/2009



767-200/300 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0180	R2	P36-R2-INTEGRATION				
D05126J		AE0223	POS 01	D05126P	W1224	ALL
D05192J		AE0223	POS 02	D05192P	W0624	ALL
D05348J		AE0223	POS 04	D05348P	W1204	ALL
D04716J		AE0223	POS 05	D04716P	W0738	ALL
D10314		K10109	P036-00/ /			ALL
D10318		K10136	P036-00/ /			ALL
D10316		K10391	P036-00/ /			ALL
W0181	C*	E1-6 L,SHELF				
D00369A			//			ALL
D00369B			//			ALL
D00369C			//			ALL
D04969P		AE0307	POS 103	D04969J	W1523	ALL
D04773P		AE0307	POS 104	D04773J	W0596	ALL
D04293P		AE0307	POS 25	D04293J	W0223	ALL
D05153P		AE0307	POS 26	D05153J	W1581	ALL
D04757P		AE0319	POS 93	D04757J	W0723	ALL
D05629P		AE0323	POS 13	D05629J	W0129	ALL
D00369		M00160	SHELF/E01/06			ALL
W0182	L1	P36-L1-INTEGRATION				
D04918J		AE0209	POS 01	D04918P	W0578	ALL
D04920J		AE0209	POS 06	D04920P	W0578	ALL
D05952J		AE0209	POS 07	D05952P	W0578	ALL
D05100J		AE0209	POS 18	D05100P	W1232	ALL
D05456J		AE0209	POS 19	D05456P	W0622	ALL
D05892J		AE0209	POS 24	D05892P	W0202	ALL
D04288J		AE0209	POS 25	D04288P	W0622	ALL
D03504		K00057	P036-00/ /			ALL
D03506		K00058	P036-00/ /			ALL
D03482		K00059	P036-00/ /			ALL
D03484		K00060	P036-00/ /			ALL
D03486		K00061	P036-00/ /			ALL
D03488		K00062	P036-00/ /			ALL
D03490		K00063	P036-00/ /			ALL
D03546		K00064	P036-00/ /			ALL
D03566		K00228	P036-00/ /			ALL
D03568		K00230	P036-00/ /			ALL
D00582		K00497	P036-00/ /			ALL

MASTER BUNDLE LIST

D280T132

91-21-13

Section W0180

Page 1

Jun 28/2006



767-200/300 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0182	L1	P36-L1-INTEGRATION (continued)				
D01356		K00546	P036-00/ /			050-099, 150-155, 162-165, 275-276
D11930		K01146	P036-00/ /			050-099, 150-199, 277-299
D12382		K01324	P036-00/ /			275-276
D12394		K02144	P049-00/ /			275-276
D21234		K02310	P036-00/ /			156-157, 166-199, 277-299
D21232		K02311	P036-00/ /			156-157, 166-199, 277-299
W0183	N2	E2-6 SHELF				
D13366C			SHELF-E2/06/			275-299
D13366A			SHELF/E01/4			275-299
D13366B			SHELF/E01/4			275-299
D06802P		AE0306	POS 32	D06802J	W0572	275-299
D06806P		AE0306	POS 62	D06806J	W0602	275-299
D06804P		AE0307	POS 100	D06804J	W1287	275-299
D06808P		AE0307	POS 78	D06808J	W0628	275-299
D13366		M01602	SHELF/E02/06			275-299
W0184	S2	P36-S2-INTEGRATION				
D05313J		AE0209	POS 02	D05313P	W1521	ALL
D04942J		AE0209	POS 03	D04942P	W0596	ALL
D05654J		AE0209	POS 04	D05654P	W0984	ALL
D05165J		AE0209	POS 08	D05165P	W1307	ALL
D04856J		AE0209	POS 09	D04856P	W0590	ALL
D04743J		AE0209	POS 10	D04743P	W0407	ALL
D08026J		AE0209	POS 13	D08026P	W0264	ALL
D05366J		AE0209	POS 14	D05366P	W1718	ALL
D04992J		AE0209	POS 15	D04992P	W0596	ALL
D06310J		AE0209	POS 20	D06310P	W0264	ALL
D06470J		AE0209	POS 47	D06470P	W1338	ALL
D03500		K00045	P036-00/ /			ALL
D03502		K00046	P036-00/ /			ALL
D03524		K00153	P036-00/ /			ALL
D03526		K00163	P036-00/ /			ALL
D03530		K00168	P036-00/ /			ALL
D03538		K00179	P036-00/ /			ALL

MASTER BUNDLE LIST

D280T132

91-21-13

Section W0180

Page 2

Aug 05/2009



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0184	S2	P36-S2-INTEGRATION (continued)				
D03548		K00180	P036-00/ /			ALL
D01090		K00181	P036-00/ /			ALL
D03540		K00183	P036-00/ /			ALL
D03542		K00184	P036-00/ /			ALL
D03544		K00185	P036-00/ /			ALL
D03562		K00186	P036-00/ /			ALL
D03578		K00336	P036-00/ /			ALL
D03594		K00357	P036-00/ /			ALL
D03596		K00369	P036-00/ /			ALL
D03620		K00419	P036-00/ /			ALL
D03626		K00443	P036-00/ /			ALL
D02920		K00449	P036-00/ /			ALL
D02922		K00450	P036-00/ /			ALL
D02926		K00452	P036-00/ /			ALL
D02928		K00453	P036-00/ /			ALL
D02132		K00525	P036-00/ /			050-099, 150-199
D02252		K00603	P036-00/ /			ALL
D10068		K00633	P036-00/ /			ALL
D10436		K00684	P036-00/ /			ALL
D10416		K00697	P036-00/ /			ALL
D10418		K00698	P036-00/ /			ALL
D10420		K00699	P036-00/ /			ALL
D10422		K00700	P036-00/ /			ALL
D10462		K00761	P036-00/ /			ALL
D10498		K00769				275
D10550		K00785	P036-00/ /			275-299
D11078		K00904	P036-00/ /			150-199, 275-299
D11444		K00950	P036-00/ /			ALL
D11538		K01005	P036-00/ /			ALL
D11540		K01006	P036-00/ /			ALL
D11542		K01007	P036-00/ /			ALL
D11544		K01008	P036-00/ /			ALL
D11546		K01009	P036-00/ /			ALL
D11548		K01010	P036-00/ /			ALL
D11550		K01011	P036-00/ /			ALL
D13824		K01293	P036-00/ /			ALL
D10198		K10229	P036-00/ /			ALL
D10196		K10230	P036-00/ /			ALL
D10200		K10231	P036-00/ /			ALL
D10202		K10232	P036-00/ /			ALL

MASTER BUNDLE LIST

D280T132

91-21-13

Section W0180

Page 3

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0184	S2	P36-S2-INTEGRATION (continued)				
D10194		K10233	P036-00/ /			ALL
D00928		T00153	P036-00/ /			ALL
W0185	C*	E5-1 C,SHELF				
D00405A			//			ALL
D00405B			//			ALL
D00405C			//			ALL
D04419P		AC0604	POS 08	D04419J	W0513	ALL
D05189P		AC0604	POS 09	D05189J	W0223	ALL
D00405		M00204	SHELF/E05/01			ALL
W0188	L2	P37-L2-INTEGRATION				
D05330J		AE0218	POS 41	D05330P	W0752	ALL
D05506J		AE0218	POS 42	D05506P	W0572	ALL
D05372J		AE0218	POS 46	D05372P	W1704	ALL
D04934J		AE0218	POS 47	D04934P	W0588	ALL

MASTER BUNDLE LIST

D280T132

91-21-13

Section W0180

Page 4 End

Mar 09/2006



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0192	R2	P37-R2-INTEGRATION				
D05612J		AE0218	POS 04	D05612P	W0506	ALL
D04340J		AE0218	POS 05	D04340P	W0610	ALL
D04646J		AE0218	POS 08	D04646P	W0506	ALL
D06076J		AE0218	POS 09	D06076P	W0506	ALL
D05602J		AE0218	POS 10	D05602P	W0506	ALL
D05768J		AE0218	POS 14	D05768P	W0506	ALL
D05326J		AE0218	POS 15	D05326P	W0766	ALL
D04004J		AE0218	POS 16	D04004P	W0738	ALL
D05266J		AE0218	POS 17	D05266P	W0738	ALL
D04962J		AE0218	POS 18	D04962P	W0628	ALL
D05561J		AE0218	POS 19	D05561P	W1417	ALL
D05435J		AE0218	POS 20	D05435P	W0473	ALL
D05499J		AE0218	POS 21	D05499P	W0473	ALL
D05437J		AE0218	POS 22	D05437P	W0475	ALL
D08680J		AE0218	POS 23	D08680P	W0942	ALL
D04346J		AE0218	POS 24	D04346P	W0656	ALL
D05592J		AE0218	POS 25	D05592P	W0926	ALL
D04284J		AE0218	POS 26	D04284P	W0620	ALL
D05068J		AE0218	POS 28	D05068P	W0656	ALL
D05317J		AE0218	POS 29	D05317P	W1541	ALL
D06584J		AE0218	POS 30	D06584P	W0782	ALL
D05688J		AE0218	POS 31	D05688P	W1256	ALL
D05290J		AE0218	POS 32	D05290P	W0902	ALL
D05316J		AE0218	POS 34	D05316P	W0768	ALL
D06260J		AE0218	POS 35	D06260P	W0768	ALL
D05328J		AE0218	POS 36	D05328P	W0764	ALL
D05352J		AE0218	POS 38	D05352P	W1204	ALL
D05318J		AE0218	POS 43	D05318P	W0770	ALL
D05319J		AE0224	POS 02	D05319P	W1521	ALL
D05660J		AE0224	POS 03	D05660P	W1228	ALL
D05374J		AE0224	POS 04	D05374P	W1712	ALL
D05541J		AE0224	POS 05	D05541P	W0853	ALL
D06288J		AE0224	POS 06	D06288P	W0506	ALL
D01644		K00015	P037-00/ /			ALL
D03666		K00018	P037-00/ /			ALL
D03668		K00019	P037-00/ /			ALL
D03670		K00027	P037-00/ /			ALL
D00614		K00130	P037-00/ /			ALL
D00616		K00131	P037-00/ /			ALL
D00618		K00134	P037-00/ /			ALL

MASTER BUNDLE LIST

D280T132

91-21-13

Section W0190

Page 1

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0192	R2	P37-R2-INTEGRATION (continued)				
D03704		K00166	P037-00/ /			ALL
D03684		K00200	P037-00/ /			ALL
D03686		K00201	P037-00/ /			ALL
D03688		K00202	P037-00/ /			ALL
D00640		K00203	P037-00/ /			ALL
D03728		K00204	P037-00/ /			ALL
D03730		K00205	P037-00/ /			ALL
D03690		K00206	P037-00/ /			ALL
D03692		K00207	P037-00/ /			ALL
D03712		K00209	P037-00/ /			ALL
D03694		K00210	P037-00/ /			ALL
D03696		K00211	P037-00/ /			ALL
D03714		K00213	P037-00/ /			ALL
D03700		K00214	P037-00/ /			ALL
D02270		K00215	P037-00/ /			ALL
D02904		K00219	P037-00/ /			ALL
D03678		K00238	P037-00/ /			ALL
D03716		K00239	P037-00/ /			ALL
D03754		K00240	P037-00/ /			ALL
D03698		K00293	P037-00/ /			ALL
D01926		K00348	P037-00/ /			ALL
D02918		K00349	P037-00/ /			ALL
D03788		K00368	P037-00/ /			ALL
D03748		K00398	P037-00/ /			050-099, 150-199
D03752		K00433	P037-00/ /			ALL
D01724		K00495	P037-00/ /			ALL
D01726		K00496	P037-00/ /			ALL
D00666		K00510	P037-00/ /			ALL
D03174		K00586	P037-00/ /			050-099
D03174		K00586 LOG				150-199, 275-299
D03176		K00587	P037-00/ /			050-099
D03176		K00587 LOG				150-199, 275-299
D01006		K00614	P037-00/ /			ALL
D10012		K00624	P037-00/ /			ALL
D10014		K00625	P037-00/ /			ALL
D10074		K00626	P037-00/ /			ALL
D10078		K00629	P037-00/ /			ALL
D10158		K00649	P037-00/ /			ALL
D10344		K00677	P037-00/ /			ALL
D10392		K00680	P037-00/ /			ALL

MASTER BUNDLE LIST

D280T132

91-21-13

Section W0190

Page 2

Mar 09/2006



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0192	R2	P37-R2-INTEGRATION (continued)				
D10394		K00681	P037-00/ /			ALL
D10478		K00721	P037-00/ /			ALL
D10454		K00730	P037-00/ /			ALL
D01725		K00758	P037-00/ /			ALL
D10528		K00778	P037-00/ /			ALL
D10552		K00786	P037-00/ /			275-299
D10582		K00793	P037-00/ /			050-099, 162-199, 275-299
D10686		K00831	P037-00/ /			ALL
D10688		K00832	P037-00/ /			ALL
D10690		K00833	P037-00/ /			ALL
D10724		K00835	P037-00/ /			ALL
D10892		K00887	P037-00/ /			ALL
D11522		K00971	P037-00/ /			ALL
D11796		K01032	P037-00/ /			050-099, 275-299
D11796		K01032 REL				150-199
D11896		K0112 RELY				150-155, 162-165
D11894		K01121				050-099, 156, 166, 275-276
D11894		K01121 REL				150-155, 162-165
D11896		K01122				050-099, 156, 166, 275-276
D11898		K01123				050-099, 150-156, 162-166, 275-276
D11900		K01124	P037-00/ /			050-099, 150-156, 162-166, 275-276
D11902		K01125				050-099, 156, 166, 275-276
D11902		K01125 RLY				150-155, 162-165
D11904		K01126				050-099, 156, 166, 275-276
D11904		K01126 RLY				150-155, 162-165
D01993		K01133	P037-00/ /			050-099, 150-156, 162-166, 275-276
D01999		K01136	P037-00/ /			050-099, 150-156, 162-166, 275-276
D02001		K01137	P037-00/ /			050-099, 150-156, 162-166, 275-276
D13438		K01221	P037-00/ /			ALL
D13440		K01222	P037-00/ /			ALL

MASTER BUNDLE LIST

D280T132

91-21-13

Section W0190

Page 3

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0192	R2	P37-R2-INTEGRATION (continued)				
D13532		K01227	P037-00/ /			150-199, 275-299
D13626		K01249	P037-00/ /			ALL
D12242		K01273	P037-00/ /			050-099, 155-199, 276-299
D12248		K01275	P037-00/ /			ALL
D13532		K01275	P037-00/ /			050-099
D12252		K01277	P037-00/ /			ALL
D12158		K02090	P037-00/ /			050-099, 155-199, 276-299
D12166		K02096	P037-00/ /			050-099, 155-199, 276-299
D12162		K02098	P037-00/ /			050-099, 155-199, 276-299
D12124		K02104	P037-00/ /			050-099, 150-199
D12128		K02106	P037-00/ /			050-099, 150-199
D12132		K02108	P037-00/ /			050-099, 150-199
D12136		K02120	P037-00/ /			050-099, 150-199
D12208		K02123	P037-00/ /			050-099, 151-199, 275-299
D12240		K02126	P037-00/ /			050-099, 155-199, 276-299
D20100		K02157	P037-00/ /			ALL
D20104		K02165	P037-00/ /			ALL
D20544		K02233	P037-00/ /			050-099, 150-199
D21190		K02307	P037-00/ /			ALL
D10090		K10235	P037-00/ /			ALL
D10088		K10237	P037-00/ /			ALL
D10148		K10312	P037-00/ /			ALL
D10154		K10313	P037-00/ /			ALL
D10150		K10363	P037-00/ /			ALL
D10156		K10364	P037-00/ /			ALL
D11754		K1038 RLY-				ALL
D11756		K1039 RLY-				ALL
D13021		K1064				ALL
D31184		K10690	P037-00/ /			ALL
D31186		K10692	P037-00/ /			ALL
D11828		K1078				155-199
D11828		K1078-RELA				050-099
D11828		K1078-RLY,				150-154, 275-299
D13850		K1269				050-099, 162-199

MASTER BUNDLE LIST

D280T132

91-21-13

Section W0190

Page 4

Feb 06/2009



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0192	R2	P37-R2-INTEGRATION (continued)				
D13854		K1271				050-099, 150, 152-199
D13042		K2045				050-099
D13042		K2045 T/R				150-199, 275-299
D21192		K2289				275-299
W0198	S2	P37-S2-RIGHT MISC ELEC EQUIP PNL INTEG				
D04958J		AE0218	POS 01	D04958P	W0658	ALL
D05822J		AE0218	POS 02	D05822P	W0262	ALL
D04948J		AE0218	POS 06	D04948P	W0606	ALL
D05188J		AE0218	POS 07	D05188P	W0598	ALL
D05037J		AE0218	POS 11	D05037P	W1247	ALL
D05270J		AE0218	POS 12	D05270P	W0614	ALL
D04056J		AE0218	POS 13	D04056P	W0248	ALL
D05052J		AE0224	POS 07	D05052P	W0590	ALL
D05378J		AE0224	POS 09	D05378P	W1722	ALL
D05376J		AE0224	POS 10	D05376P	W1718	ALL
D04745J		AE0224	POS 11	D04745P	W0407	ALL
D03702		K00164	P037-00/ /			ALL
D02414		K00169	P037-00/ /			ALL
D03708		K00175	P037-00/ /			ALL
D03726		K00191	P037-00/ /			ALL
D03772		K00192	P037-00/ /			ALL
D03750		K00421	P037-00/ /			ALL
D03744		K00442	P037-00/ /			ALL
D00428		K00505	P037-00/ /			ALL
D00430		K00512	P037-00/ /			ALL
D10210		K00631	P037-00/ /			ALL
D01178		K00693	P037-00/ /			ALL
D10664		K00822	P037-00/ /			150-199, 275-299
D10666		K00823	P037-00/ /			150-199, 275-299
D10668		K00826	P037-00/ /			150-199, 275-299
D10862		K00881	P037-00/ /			050-099
D13826		K01294	P037-00/ /			ALL
D10108		T00191	P037-00/ /			ALL

MASTER BUNDLE LIST

D280T132

91-21-13

Section W0190

Page 5 End

Feb 06/2009



767-200/300 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0201	L1	POWER DISTRIBUTION LEFT, P11 TO E1				
D05495P		AE0303	POS 01	D05495J	W0101	ALL
D04281J		AE0305	POS 05	D04281P	W1103	ALL
D04207J		AE0305	POS 14	D04207P	W0105	ALL
D04205J		AE0305	POS 21	D04205P	W0107	ALL
D04203J		AE0305	POS 26	D04203P	W0109	ALL
D04201J		AE0305	POS 29	D04201P	W0161	ALL
D04271P		AF0203	POS 05	D04271J	W0040	ALL
W0202	L1	P31 TO NO.1 ELEC HYD PUMP L1-115 VAC POWER DISTRIBUTION				
D05892P		AE0209	POS 24	D05892J	W0182	ALL
D05512J		AL1002	POS 15	D05512P	W0476	ALL
D00482		M00232	0997/145/R004			ALL
W0203	S1	POWER DISTRIBUTION, P11 TO E2 & FLIGHT DECK				
D04227J		AE0307	POS 18	D04227P	W0149	ALL
D04233J		AE0307	POS 54	D04233P	W0133	ALL
D04185P		AF0201	POS 05	D04185J	W0044	ALL
W0205	R1	POWER DISTRIBUTION RIGHT, P11 TO E1 & E2				
D04257P		AE0308	POS 18	D04257J	W0141	ALL
D04247J		AE0317	POS 18	D04247P	W0119	ALL
D04245J		AE0317	POS 27	D04245P	W0171	ALL
D04253J		AE0320	POS 43	D04253P	W0145	ALL
D04251J		AE0320	POS 55	D04251P	W0149	ALL
D04187P		AF0203	POS 04	D04187J	W0042	ALL
W0206	R1	P32 TO ELEC HYD PUMP 2-R1-115 VAC POWER DISTRIBUTION				
D04422J		AC0702	POS 22	D04422P	W0474	ALL
D05322P		AE0203	POS 20	D05322J	W0142	ALL
D04330P		AE0203	POS 21	D04330J	W0138	ALL
D04412P		AE0224	POS 01	D04412J	W1118	ALL
D05420J		AL1008	POS 07	D05420P	W0776	ALL
D00484		M00233	1041/145/R004			ALL
W0207	S1	POWER DISTRIBUTION, P11 TO E1 & P1				
D05325P		AE0303	POS 02	D05325J	W1101	ALL
D05493P		AE0303	POS 18	D05493J	W0111	ALL
D04239J		AE0319	POS 42	D04239P	W0125	ALL

MASTER BUNDLE LIST

D280T132

91-21-13

Section W0200

Page 1

Mar 09/2006



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0207	S1	POWER DISTRIBUTION, P11 TO E1 & P1 (continued)				
D04241J		AE0319	POS 49	D04241P	W0127	ALL
D04267J		AF0119	POS 12	D04267P	W0051	ALL
D04189P		AF0201	POS 04	D04189J	W0044	ALL
W0209	L1	POWER DISTRIBUTION LEFT, P11 TO P1				
D04163J		AF0119	POS 05	D04163P	W0011	ALL
D04165P		AF0201	POS 03	D04165J	W0040	ALL



767-200/300 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0211	R1	POWER DISTRIBUTION RIGHT, P11 TO E1, E2, E5 & P3 CATIA DESIGNED				
D04259J		AC0604	POS 11	D04259P	W0175	ALL
D04255J		AE0320	POS 59	D04255P	W0173	ALL
D04263J		AF0120	POS 15	D04263P	W0031	ALL
D04193P		AF0201	POS 08	D04193J	W0042	ALL
W0214	L2	P4 TO L WING FS/BODY-L2-LEFT IDG CONT				
D04550J		AC0701	POS 29	D04550P	W0412	ALL
D04398J		AC0701	POS 30	D04398P	W0412	ALL
D06232P		AE0219	POS 24	D06232J	W2000	ALL
D04110J		AE0306	POS 50	D04110P	W0014	ALL
D04054P		AE0311	POS 01	D04054J	W0022	ALL
D04080P		AE0311	POS 02	D04080J	W0022	ALL
D04060J		AE0319	POS 18	D04060P	W1092	ALL
D04058J		AE0319	POS 20	D04058P	W1092	ALL
D04778P		AF0204	POS 42	D04778J	W0062	ALL
D04776P		AF0204	POS 43	D04776J	W0062	ALL
W0216	L2	P31 TO A2-L2-L DISC. AFT GALLEY CONTROL				
D04068P		AE0311	POS 03	D04068J	W0022	ALL
D00592		M01178	1560/BFE/			275-299
D12098		M01178	1560/BFE/			275-299
D00592		M01178 A2				050-099
D11840		M01181	1500/BFE/			275-299
D00592		M1178 A2				150-199
W0219	L1	POWER DISTRIBUTION LEFT, P11 TO E2 & E5 CATIA DESIGNED				
D04223J		AC0604	POS 01	D04223P	W0165	ALL
D04219J		AC0608	POS 01	D04219P		ALL
D04217J		AE0306	POS 11	D04217P	W0133	ALL
D04215J		AE0306	POS 13	D04215P	W0135	ALL
D04213J		AE0306	POS 27	D04213P	W0139	ALL
D04211J		AE0306	POS 29	D04211P	W0163	ALL
D04945P		AE0308	POS 01	D04945J	W0131	ALL
D04273P		AF0201	POS 02	D04273J	W0040	ALL

MASTER BUNDLE LIST

D280T132

91-21-13

Section W0210

Page 1 End

Aug 15/2007



767-200/300 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0220	R1	P32 TO F1-R1-FWD GALLEY POWER FEEDER				
D00904		M01177	0280/BFE/			280-299
D00904		M01184				050-099, 150-199
D00904		M1177				275-278
W0222	R2	P4 TO R W/B DISCONNECT-R2-R IDG CONTROL				
D10930			0260/290/R060			280-299
D04400J			AC0702/ /	D04400P	W0414	155-157, 164-199, 277-299
D04630J			AC0702/ /	D04630P	W0414	155-157, 164-199, 277-299
D04400J		AC0702	POS 29	D04400P	W0414	050-099, 150-154, 162-163, 275-276
D04630J		AC0702	POS 30	D04630P	W0414	050-099, 150-154, 162-163, 275-276
D06234P		AE0219	POS 34	D06234J	W2000	ALL
D04062P		AE0312	POS 03	D04062J	W0024	ALL
D04012P		AE0312	POS 04	D04012J	W0024	ALL
D04034J		AE0320	POS 20	D04034P	W0016	ALL
D04078J		AE0320	POS 21	D04078P	W0016	ALL
D04036J		AE0320	POS 22	D04036P	W0016	ALL
D04794P		AF0204	POS 57	D04794J	W0066	ALL
D10932		M01923	0360/ /L050			277-299
D00906		M1177				275-299
D10924		M1177				275-299
D10926		M1177				050-099, 150-199
D10930		M1177				050-099, 150-199, 277-278
D00906		M1182				050-099, 150-199
D10926		M1182				275-299
D10932		M1182				050-099, 150-199
W0223	C1	PWR DIST C,P11 TO SHELVES				
D05189J		AC0604	POS 09	D05189P	W0185	ALL
D04293J		AE0307	POS 25	D04293P	W0181	ALL
D04225J		AE0307	POS 63	D04225P	W0127	ALL
D05187P		AF0203	POS 06	D05187J	W0042	ALL
W0226	L1	P31 TO A2-L1-L AFT GALLEY POWER FEEDER CATIA DESIGNED				
D00590		M01178	1560/BFE/			275-299

MASTER BUNDLE LIST

D280T132

91-21-13

Section W0220

Page 1

Aug 05/2009



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity	
W0226	L1	P31 TO A2-L1-L AFT GALLEY POWER FEEDER CATIA DESIGNED (continued)					
D12100		M01178	1560/BFE/			275-299	
D12210		M01178	1560/BFE/			275-299	
D00590		M01178 A2				150-199	
D02178		M01181	1500/BFE/			275-299	
D12212		M01181	1500/BFE/			275-299	
D00590		M1178 A2				050-099	



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity	
W0238	R1	P33-TO-E6-R1-GND SVCE PWR -CATIA DESIGNED					
D04130J		AC1402	POS 10	D04130P	W0030	ALL	
D04134P		AE0203	POS 16	D04134J	W0052	ALL	

MASTER BUNDLE LIST

D280T132

91-21-13

Section W0230

Page 1 End

Aug 15/2007



767-200/300 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0240	A2	P61 TO P34-A2-APU/EXT PWR CONTROL				
D04112P		AE0204	POS 02	D04112J	W0026	ALL
D04026P		AE0204	POS 03	D04026J	W0026	ALL
D04048J		AE0307	POS 60	D04048P	W0018	ALL
D04114J		AE0307	POS 87	D04114P	W0018	ALL
D04052P		AE0311	POS 04	D04052J	W0022	ALL
D04796P		AF0204	POS 67	D04796J	W0060	ALL
W0241	N1	HF-L COAX,SHELF TO TAIL DISC				
D04001J		AE0322	POS 61	D04001P	W1079	ALL
D04003P		AP1501	POS 18	D04003J	W0243	ALL
W0242	A2	E6 TO APU FWD-A2-APU CONTROL				
D04082J		AC1402	POS 01	D04082P	W0020	ALL
D04040J		AC1402	POS 02	D04040P	W0020	ALL
D06424J		AC1402	POS 16	D06424P	W0020	ALL
D04030J		AV1801	POS 02	D04030P		ALL
D04024J		AV1801	POS 05	D04024P		ALL
D04018J		AV1801	POS 06	D04018P	W0270	ALL
D00502		M00406	1738/290/R035			ALL
D02662		T00149	1831/242/R038			ALL
D00560		V00047	1820/220/L024			ALL
W0243	N1	HF-L COAX,THRU PRESS. SEAL TO COUPLER DISC				
D04839J			F 282/ /LE	D04839P	W0377	ALL
D04003J		AP1501	POS 18	D04003P	W0241	ALL
W0244	A1	APU COMPARTMENT-A1-APU STARTER POWER FEEDER				
D04138P		AV1801	POS 01	D04138J	W0246	ALL
W0245	N1	HF-R COAX,SHELF TO TAIL DISC CATIA DESIGNED				
D04005J		AE0322	POS 62	D04005P	W1081	ALL
D04007J		AP1501	POS 07	D04007P	W0247	ALL
W0246	A1	E6-1 TO APU FIREWALL-A1-APU STARTER POWER FEEDER				
D04138J		AV1801	POS 01	D04138P	W0244	ALL
W0247	N1	HF-R COAX,THRU PRESS. SEAL TO COUPLER DISC				
D04841J			F 271/ /LE	D04841P	W0379	ALL

MASTER BUNDLE LIST

D280T132

91-21-13

Section W0240

Page 1

Aug 15/2007



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0247	N1	HF-R COAX,THRU PRESS. SEAL TO COUPLER DISC (continued)				
D04007P		AP1501	POS 07	D04007J	W0245	ALL
I W0248	A2	P34 TO E6-A2-APU CONTROL CATIA DESIGNED				
D04046J		AC1402	POS 03	D04046P	W0020	ALL
D04044J		AC1402	POS 12	D04044P	W0020	ALL
D04028P		AE0204	POS 08	D04028J	W0026	ALL
D04056P		AE0218	POS 13	D04056J	W0198	ALL
D04038P		AE0312	POS 02	D04038J	W0024	ALL
D04074J		AE0322	POS 38	D04074P	W0018	ALL
D04072J		AE0322	POS 41	D04072P	W0018	ALL
W0249	N1	VHF-L COAX,SHELF TO ANT. DISC				
I D04011J			0667/319/0000	D04011P	W0251	ALL
D04009J		AE0322	POS 58	D04009P	W1073	ALL



767-200/300 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0250	S2*	APU COMPARTMENT-S2-FIRE DET LOOP B				
D08505			1832/215/R020			ALL
D04022P		AV1801	POS 03	D04022J	W1298	ALL
D00506		TS0051	APU/ /			ALL
D00514		TS0051	APU/ /			ALL
D00508		TS0052	APU/ /			ALL
D00516		TS0052	APU/ /			ALL
W0251	N1	VHF-L COAX,ANT. CATIA DESIGNED				
D04011P			0654+33/319/0000	D04011J	W0249	ALL
D00005		M00245	0667/319/0000			ALL
W0252	L1	P6 TO E3-2-L1-LEFT TRU POWER				
D04116P		AE0222	POS 14	D04116J	W1026	ALL
D04118P		AE0222	POS 16	D04118J	W0028	ALL
D00358		T00101	SHELF/E03/02			ALL
W0253	N1	VHF-R COAX,SHELF TO ANT.				
D04013J		AE0322	POS 57	D04013P	W1075	ALL
D00007		M00246	0513/106/0000			ALL
W0254	R1	P6 TO E3-2-R1-RIGHT TRU POWER				
D04120P		AE0222	POS 07	D04120J	W1030	ALL
D04122P		AE0222	POS 15	D04122J	W0028	ALL
D00360		T00102	SHELF/E03/02			ALL
W0256	S1	P6 TO E3-S1-MAIN BAT & STATIC INVERTER				
D04128P		AE0203	POS 18	D04128J	W0142	ALL
D04126P		AF0232	POS 12	D04126J	W0028	ALL
D04124P		AF0232	POS 18	D04124J	W1040	ALL
D00362		M00217	SHELF/E03/02			ALL
D00320		M00218	SHELF/E03/03			ALL
D00364		M00223	0287/120/R010			ALL
D10182		M10212	298/121/0			ALL
W0257	N1	VHF-C COAX,SHELF TO ANT.DISC				
D04019J			1197+98/131/L067	D04019P	W0259	ALL
D04017J		AE0322	POS 52	D04017P	W1077	ALL

MASTER BUNDLE LIST

D280T132

91-21-13

Section W0250

Page 1

Aug 05/2009



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0259	N1	VHF-C COAX,ANT				
D04019P			1317/131/L067	D04019J	W0257	ALL
D00009		M00247	1340/102/0000			ALL



767-200/300 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0260	S2*	APU COMPARTMENT-S2-FIRE DET LOOP A				
D04020P		AV1801	POS 07	D04020J	W1296	ALL
D00512		TS0051	APU/ /			ALL
D00518		TS0051	APU/ /			ALL
D00510		TS0052	APU/ /			ALL
D00520		TS0052	APU/ /			ALL
W0261	L2	ILS-L COAX,ANT.TO FWD PRESS BLKHD,LOC				
D00011		M00248	0132/179/0000			ALL
D04043P		W0263		D04043J	W0263	ALL
W0262	S2*	P61 TO R WBD-S2A-ENG INSTR				
D04632J		AC0702	POS 27	D04632P	W0404	ALL
D08114P		AE0104	POS 03	D08114J	W5150	ALL
D05822P		AE0218	POS 02	D05822J	W0198	ALL
D05676J		AE0322	POS 39	D05676P	W0098	ALL
D04756P		AF0204	POS 90	D04756J	W0070	ALL
W0263	L2	ILS-L COAX,E1-3 TO FWD PRESS BLKHD,LOC				
D04043J		W0261		D04043P	W0261	ALL
D04045P		W1051		D04045J	W1051	ALL
W0264	S2*	P61 TO L W/W-S2B-FLT CONT/ENG INSTR				
D04634J		AC0701	POS 31	D04634P	W0402	ALL
D08118P		AE0102	POS 03	D08118J	W5150	ALL
D08028P		AE0202	POS 15	D08028J	W1114	ALL
D04042P		AE0203	POS 23	D04042J	W0146	ALL
D08026P		AE0209	POS 13	D08026J	W0184	ALL
D06310P		AE0209	POS 20	D06310J	W0184	ALL
D06312J		AE0319	POS 06	D06312P	W0986	ALL
D05646J		AE0319	POS 11	D05646P	W1090	ALL
D04753J		AE0319	POS 90	D04753P	W0161	ALL
D05854P		AF0204	POS 94	D05854J	W0070	ALL
D04774P		AF0204	POS 95	D04774J	W0070	ALL
D04612J		AL1001	POS 15	D04612P	W0458	ALL
D01546		M00476	1090/131/L080			ALL
W0265	L2	ILS-L COAX,ANT.,G/S L TO FWD PRESS BLKHD				
D00017		M00250	0132/167/0000			ALL

MASTER BUNDLE LIST

D280T132

91-21-13

Section W0260

Page 1

Sep 04/2008



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0265	L2	ILS-L COAX,ANT.,G/S L TO FWD PRESS BLKHD (continued)				
D04039P		W0267		D04039J	W0267	ALL
W0267	L2	COAX,L ILS G/S,E1-3 TO FWD PRESS BLKHD				
D04039J		W0265		D04039P	W0265	ALL
D04047P		W1053		D04047J	W1053	ALL
W0269	R2	ILS-R COAX,ANT.TO FWD PRESS BLKHD,LOC				
D00013		M00249	0132/214/0000			ALL
D04055P		W0279		D04055J	W0279	ALL



767-200/300 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0270	A2	APU COMPARTMENT-A2-APU SNSR CONTROL				
D04018P		AV1801	POS 06	D04018J	W0242	ALL
D00316		M00281	1840/200/0000			ALL
W0271	C2	COAX,C ILS LOC,E1-4 TO FWD PRESS BLKHD				
D04063J		W0277		D04063P	W0277	ALL
D04059P		W1055		D04059J	W1055	ALL
W0272	R1	P6 TO P37-R1-FLT CONT				
D05960P		AE0203	POS 11	D05960J	W0142	ALL
D05860P		AE0203	POS 19	D05860J	W0142	ALL
D05962P		AE0218	POS 39	D05962J		150-154
D05962P		AE0218	POS 39	D05962J	W1118	275
D05862P		AE0218	POS 40	D05862J	W1118	ALL
D05858P		AE0222	POS 08	D05858J	W1030	ALL
D05868P		AE0222	POS 10	D05868J	W1030	ALL
W0273	R2	ILS-R COAX,ANT.,G/S R TO FWD PRESS BLKHD				
D00021		M00251	0132/171/0000			ALL
D04053P		W0283		D04053J	W0283	ALL
W0274	R1	P37 TO L WING FS-R1				
D04420J		AC0701	POS 16	D04420P	W0466	ALL
D08064P		AE0218	POS 33	D08064J	W1118	ALL
W0275	C2	COAX,C ILS G/S,E1-4 TO FWD PRESS BLKHD				
D04061J		W0281		D04061P	W0281	ALL
D04057P		W1057		D04057J	W1057	ALL
W0276	L1	P11 TO P6-L1-L GEN PWR DISTRIBUTION				
D08128P		AE0222	POS 13	D08128J	W1026	ALL
D04086P		AF0232	POS 09	D04086J	W1026	ALL
D04088P		AF0232	POS 10	D04088J	W1026	ALL
W0277	C2	ILS-C COAX,ANT.TO FWD PRESS BLKHD,LOC				
D00015		M00249	0132/214/0000			ALL
D04063P		W0271		D04063J	W0271	ALL

MASTER BUNDLE LIST

D280T132

91-21-13

Section W0270

Page 1

Mar 09/2006



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0278	S1	P6 TO P11-S1-STBY PWR DISTRIBUTION				
D04094P		AF0232	POS 14	D04094J	W1040	ALL
D04096P		AF0232	POS 17	D04096J	W1040	ALL
W0279	R2	COAX,R ILS LOC,E1-5 TO FWD PRESS BLKHD				
D04055J		W0269		D04055P	W0269	ALL
D04049P		W1059		D04049J	W1059	ALL

MASTER BUNDLE LIST

D280T132

91-21-13
Section W0270
Page 2 End
Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0280	R1	P6 TO P11-R1-R GEN PWR DISTRIBUTION				
D06430P		AE0222	POS 12	D06430J	W0048	050-099
D04090P		AF0232	POS 04	D04090J	W1030	ALL
D04092P		AF0232	POS 05	D04092J	W1030	ALL
D06430P		AF0232	POS 31	D06430J	W0048	150-199, 275-299
W0281	C2	ILS-C COAX,ANT.TO FWD PRESS BLKHD,G/S				
D00019		M00251	0132/171/0000			ALL
D04061P		W0275		D04061J	W0275	ALL
W0282	R1	F1 TO FWD CHILLER-R1-CHILLER POWER				
D02654			0256/175/R050			275-299
D02660		M01177	0280/BFE/			ALL
D02654		M01253	0270/BFE/			050-099, 150-199
W0283	R2	COAX,R ILS G/S,E1-5 TO FWD PRESS BLKHD				
D04053J		W0273		D04053P	W0273	ALL
D04051P		W1061		D04051J	W1061	ALL
W0284	L1	A2 TO L AFT CHILLER-L1-CHILLER POWER				
D02650			1560/190/R030			275-299
D02656		M01178	1560/BFE/			275-299
D02656		M01178 A2				050-099, 150-199
D02650		M01248	1560/BFE/			050-099, 150-199
W0285	L2	LRRR-L COAX,ANT.,XMTR & RCVR				
D00023		M00252	0577/108/L014			ALL
D00025		M00253	0621/108/L014			ALL
W0286	R1	A3 TO R AFT CHILLER-R1-CHILLER POWER				
D02652			1540/190/R050			275-299
D02658		M01179	1560/BFE/			275-299
D02658		M01179 A3				050-099, 150-199
D02652		M01247	1569/BFE/			050-099, 150-199
W0288	L1	P31 TO R ELEC HYD PUMP L1-115 VAC POWER DISTRIBUTION -CATIA DESIGNED				
D00486		M00234	NR290/147/			ALL

MASTER BUNDLE LIST

D280T132

91-21-13

Section W0280

Page 1 End

Jun 06/2008



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0290	R1	P32 TO ELEC HYD PUMP L-R1-115 VAC POWER DISTRIBUTION				
D00480		M00231	NL274/147/			ALL
W0293	R2	LRRR-R COAX,ANT.,XMTR & RCVR				
D00027		M00254	0577/107/R007			ALL
D00029		M00255	0621/108/R014			ALL

MASTER BUNDLE LIST

D280T132

91-21-13
Section W0290
Page 1 End
Aug 05/2009



767-200/300 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0301	C2	LRRR-C COAX,ANT.,XMTR & RCVR				
D00031		M00256	0577/107/0000			ALL
D00033		M00257	0621/107/0000			ALL
W0304	L2	P31 TO A3-L2-R AFT GALLEY CONTROL				
D06380P		AE0311	POS 05	D06380J	W0022	275-299
D00596		M01179	1560/BFE/			275-299
D00596		M01179 A3				050-099, 150-199
W0308	L1	P31 TO A3-L1-R AFT GALLEY POWER FEEDER CATIA DESIGNED				
D00594		M01179	1560/BFE/			ALL
W0309	L2	MKR BCN,SHELF TO ANT. DISC				
I D04071J			0698/106/0000	D04071P	W0375	ALL
D04069J		AE0322	POS 17	D04069P	W1083	ALL

MASTER BUNDLE LIST

D280T132

91-21-13
Section W0300
Page 1 End
Aug 05/2009



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0311	L2*	VOR-L COAX,SHELF TO ANT. DISC CATIA DESIGNED				
D04073J		AE0322	POS 09	D04073P	W1085	ALL
D04075P		AP1501	POS 06	D04075J	W0313	ALL
W0313	L2	VOR-L COAX,THRU PRESS. SEAL,ANT.				
D00035			FSS 430/633/FS			ALL
D04075J		AP1501	POS 06	D04075P	W0311	ALL
W0315	R2*	VOR-R COAX,SHELF TO ANT. DISC CATIA DESIGNED				
D04077J		AE0322	POS 25	D04077P	W1087	ALL
D04079P		AP1501	POS 19	D04079J	W0317	ALL
W0317	R2*	VOR-R COAX,THRU PRESS. SEAL,ANT.				
D00037			FSS 430/630/FS			ALL
D04079J		AP1501	POS 19	D04079P	W0315	ALL

MASTER BUNDLE LIST

D280T132

91-21-13

Section W0310

Page 1 End

Aug 15/2007



767-200/300 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0323	R2	ATC-R COAX,SHELF TO ANT. DISC,BOTTOM				
D04087J			0454/112/R007	D04087P	W0325	ALL
D02199		S10564	0331/132/R043			ALL
W0325	R2	ATC-R COAX,ANT.,BOTTOM				
D04087P			0454/112/R007	D04087J	W0323	ALL
D00041		M00259	0448/108/0000			ALL

MASTER BUNDLE LIST

D280T132

91-21-13
Section W0320
Page 1 End
Aug 05/2009



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0333	R2	ATC-R COAX,SHELF TO TOP ANT.DISC.				
D04099J D02191		S10563	0331/132/R043	D04099P	W0335	ALL ALL
W0335	R2	ATC-R COAX, TOP ANT. TO DISC. CATIA DESIGNED				
D04099P D00045		M00261	0448/ /	D04099J	W0333	ALL ALL
W0337	L2	DME-L COAX,SHELF TO ANT. DISC				
D04103J D04101J		AE0322	0570/110/0000 POS 14	D04103P D04101P	W0339 W1067	ALL ALL
W0339	L2	DME-L COAX,ANT.				
D04103P D00047		M00263	0570/110/0000 0555/108/0000	D04103J	W0337	ALL ALL



767-200/300 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0341	R2	DME-R COAX,SHELF TO ANT. DISC				
D04107J			654+21/107/0000	D04107P	W0343	ALL
D04105J		AE0322	POS 36	D04105P	W1071	ALL
W0343	R2	DME-R COAX,ANT.				
D04107P			0654+22/107/0000	D04107J	W0341	ALL
D00049		M00264	0665/125/0000			ALL
W0345	L2	ADF-L,SHELF TO ANT. DISC CATIA DESIGNED				
D04109J		AC0604	POS 14	D04109P	W0165	ALL
D00051		M00265	1122/305/0000			ALL
W0349	R2	ADF-R ANTENNA CATIA DESIGNED				
D04113J		AC0604	POS 13	D04113P	W0175	ALL
D01415		M00266	1165/305/0000			ALL

MASTER BUNDLE LIST

D280T132

91-21-13

Section W0340

Page 1 End

Feb 06/2009



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0352	L2A	L. STRUT-L2A-ENG INSTR,ASSY OF				
D04216J		AW0305	POS 05	D04216P	W3538	050-099, 150-199, 275-278
D04232J		AW0305	POS 06	D04232P	W3508	050-099, 150-199, 275-278
D04182J		AW0310	POS 03	D04182P	W3526	050-099, 150-199, 275-278
D07170J		AW0310	POS 6	D07170P	W3526	050-099, 150-199, 275-278
D04180J		AW0311	POS 01	D04180P	W3528	050-099, 150-199, 275-278
D07172J		AW0311	POS 3	D07172P	W3528	050-099, 150-199, 275-278
D04202P		AW0319	POS 07	D04202J	W0416	050-099, 150-199, 275-278
D04342P		AW0319	POS 08	D04342J	W0412	050-099, 150-199, 275-278
D11354		V00342	NL/ /			050-099, 150-199, 275-278
W0356	L2B	L. STRUT-L2B-ENG INSTR				
D04208J		AW0305	POS 03	D04208P	W3510	ALL
D04156J		AW0306	POS 01	D04156P	W3540	ALL
D04194J		AW0310	POS 04	D04194P	W3532	ALL
D04192J		AW0311	POS 02	D04192P	W3530	ALL
D04206P		AW0319	POS 01	D04206J	W0406	ALL
D04212P		AW0319	POS 02	D04212J	W0406	ALL
D04214P		AW0319	POS 03	D04214J	W0406	ALL
D03072		S00494	STRUT/ /			ALL
D00758		S00524	STRUT/ /			ALL
D11352		S00687				ALL
D11440		S01606	NR120/148/11			ALL
D00030		TS0100	N 205/149/L004			ALL
D10586		TS0207	NL283/157/0			ALL
D01840		TS0350	NL215/145/0000			ALL
D00022		V00042	0210/151/L010			ALL
D02670		V00115	STRUT/ /			ALL

MASTER BUNDLE LIST

D280T132

91-21-13

Section W0350

Page 1 End

Aug 15/2007



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0360	S*	L STRUT-S2B-FIRE DETECTION				
D04154J		AW0305	POS 01	D04154P	W3520	ALL
D04228J		AW0305	POS 02	D04228P	W3522	ALL
D04218P		AW0319	POS 10	D04218J	W0424	ALL



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0372	L2	. STRUT-L2-EEC,ASSY OF				
D04224J		AW0310	POS 01	D04224P	W3502	ALL
D04234P		AW0319	POS 09	D04234J	W0420	ALL
W0374	R2	R STRUT-R2A-ENG INSTR,ASSY OF				
D04266J		AW0305	POS 05	D04266P		050-099, 150-166, 275-299
D04240J		AW0305	POS 06	D04240P		050-099, 150-166, 275-299
D04162J		AW0310	POS 03	D04162P		050-099, 150-166, 275-299
D07190J		AW0310	POS 6	D07190P		050-099, 150-166, 275-299
D04160J		AW0311	POS 01	D04160P		050-099, 150-166, 275-299
D07192J		AW0311	POS 3	D07192P		050-099, 150-166, 275-299
D04344P		AW0320	POS 08	D04344J	W0414	050-099, 150-166, 275-299
D04242P		AW0320	POS 09	D04242J	W0418	050-099, 150-166, 275-299
D11438		V00343	NL/ /			050-099, 150-166, 275-299
W0375	L2	MKR BCN COAX,ANT.				
D04071P			0654+44/106/0000	D04071J	W0309	ALL
D00083		M00243	0654+37/107/0000			ALL
W0376	R2B	R. STRUT-R2B-ENG INSTR				
D04258J		AW0305	POS 03	D04258P		ALL
D04150J		AW0306	POS 01	D04150P		ALL
D04164J		AW0310	POS 04	D04164P		ALL
D04166J		AW0311	POS 02	D04166P		ALL
D04248P		AW0320	POS 01	D04248J	W0408	ALL
D04252P		AW0320	POS 02	D04252J	W0408	ALL
D04254P		AW0320	POS 03	D04254J	W0408	ALL
D03250		S00495	STRUT/ /			ALL
D00742		S00525	STRUT/ /			ALL
D11436		S00688				ALL
D11442		S01616	NR120/148/11			ALL

MASTER BUNDLE LIST

D280T132

91-21-13

Section W0370

Page 1

Aug 05/2009



767-200/300 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0376	R2B	R. STRUT-R2B-ENG INSTR (continued)				
D00068		TS0101	N 205/149/R004			ALL
D10590		TS0214	NR283/157/0			ALL
D01842		TS0351	NR215/145/0000			ALL
D00064		V00043	N 210/151/R010			ALL
D02760		V00117	STRUT/ /			ALL
W0377	N1	HF-L COAX,COUPLER,ANT.				
D04839P			F 282/ /LE	D04839J	W0243	ALL
D00001		M00241	F 0281/ /FS			ALL
W0378	S*	R STRUT-S2B-FIRE DETECTION				
D04148J		AW0305	POS 01	D04148P		ALL
D04256J		AW0305	POS 02	D04256P		ALL
D04264P		AW0320	POS 10	D04264J	W0426	ALL
W0379	N1	HF-R COAX,COUPLER,ANT.				
D04841P			F 276/ /LE	D04841J	W0247	ALL
D00003		M00242	F 0270/ /FS			ALL

MASTER BUNDLE LIST

D280T132

91-21-13

Section W0370

Page 2 End

Aug 15/2007



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0380	N2	L. STRUT-ENGINE AIDS/AUTOSTART				
D06420J		AW0309	POS 01	D06420P		ALL
D06292P		AW0319	POS 05	D06292J	W0406	ALL
W0382	R2	R. STRUT-R2-EEC				
D04246J		AW0310	POS 01	D04246P		ALL
D04244P		AW0320	POS 07	D04244J	W0422	ALL
W0384	N2	R. STRUT-ENGINE AIDS/AUTOSTART				
D06422J		AW0309	POS 01	D06422P		ALL
D06296P		AW0320	POS 05	D06296J	W0408	ALL
W0386	S2	L STRUT-S2A-FIRE DETECTION/ENG INSTR				
D04200J		AW0305	POS 04	D04200P	W3516	ALL
D04230J		AW0307	POS 02	D04230P	W3506	ALL
D04204P		AW0319	POS 06	D04204J	W0402	ALL
W0388	S2	R STRUT-S2A-FIRE DETECTION/ENG INSTR				
D04236J		AW0305	POS 04	D04236P		ALL
D04220J		AW0307	POS 02	D04220P		ALL
D04238P		AW0320	POS 06	D04238J	W0404	ALL

MASTER BUNDLE LIST

D280T132

91-21-13

Section W0380

Page 1 End

Aug 15/2007



767-200/300 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0390	L*	L SAILBOAT-L2-HYDRAULICS				
D04404J		AW0321	POS 01	D04404P	W0424	ALL
D04474J		AW0321	POS 02	D04474P	W0406	ALL
D00038		M00338	NL250/142/			ALL
D00498		M00344	NL253/141/			ALL
D00054		S00026	NL265/149/			ALL
D00036		S00316	NL266/152/			ALL
D02134		S00330	NL269/148/			ALL
D20122		S00858	STRUT/ /			ALL
D00494		V00006	NL243/142/			ALL
D02118		V00106	NL271/146/			ALL
D20118		V00167	STRUT/ /			ALL
W0391	L2	RDMI-L,SHELVES TO CAPT INSTR PNL				
D04153J		AC0604	POS 06	D04153P	W0165	ALL
D04151J		AE0306	POS 06	D04151P	W0133	ALL
D04147J		AF0119	POS 11	D04147P	W0011	ALL
W0392	R2	R. STRUT-R2-EEC-N1 ANALOG				
D08334J		AW0310	POS 02	D08334P		ALL
D06382P		AW0320	POS 04	D06382J	W0518	ALL
W0394	R*	R SAILBOAT-R2-HYDRAULICS				
D04406J		AW0322	POS 01	D04406P	W0426	ALL
D04170J		AW0322	POS 02	D04170P	W0408	ALL
D00060		M00340	NR250/142/			ALL
D00500		M00346	NR253/141/			ALL
D00074		S00031	NR265/149/			ALL
D00048		S00315	NR266/152/			ALL
D02138		S00331	NR273/148/			ALL
D20126		S00860	STRUT/ /			ALL
D00496		V00007	NR243/142/			ALL
D02120		V00107	NR270/149/			ALL
D20120		V00168	STRUT/ /			ALL
W0396	L2	L. STRUT-L2-EEC-N1 ANALOG				
D08320J		AW0310	POS 02	D08320P	W3504	ALL
D06384P		AW0319	POS 04	D06384J	W0516	ALL

MASTER BUNDLE LIST

D280T132

91-21-13
 Section W0390
 Page 1
 Mar 09/2006



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0397	L2	AFDS WARN & ANN L,P1 TO SHELF				
D05581J		AE0319	POS 28	D05581P	W1103	ALL
D04169J		AE0319	POS 40	D04169P	W0105	ALL
D04901J		AE0319	POS 56	D04901P	W0107	ALL
D05523J		AE0319	POS 79	D05523P	W0109	ALL
D04171J		AF0119	POS 01	D04171P	W0011	ALL
D04167J		AF0119	POS 02	D04167P	W0011	ALL
W0398	R*	L SAILBOAT-R2-HYDRAULICS				
D04280J		AW0321	POS 03	D04280P	W0440	ALL
D00916		M00231	NL274/147/			ALL
D00052		S00025	NL310/149/			ALL
D00056		S00027	NL265/149/			ALL
W0399	C2	AFDS WARN & ANN C,P1 TO SHELF				
D04175J		AE0319	POS 52	D04175P	W0127	ALL
D04173J		AF0119	POS 04	D04173P	W0011	ALL

MASTER BUNDLE LIST

D280T132

91-21-13

Section W0390

Page 2 End

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0400	L*	R SAILBOAT-L2-HYDRAULICS				
D04168J		AW0322	POS 03	D04168P	W0442	ALL
D00922		M00234	NR290/147/			ALL
D00072		S00030	NR311/155/			ALL
D00076		S00032	NR265/149/			ALL
W0401	N2	LEFT FRONT SPAR SLAT #1 SWITCH				
D07546P				D07546J	W0430	050-099, 151
D03695		S2313				050-099, 151
W0402	S2	R WING INBD FS-S2A-FUEL/FIRE DET/ENG INSTR				
D04540P		AC0701	POS 25	D04540J	W0596	ALL
D04634P		AC0701	POS 31	D04634J	W0264	ALL
D04542P		AC0701	POS 32	D04542J	W0596	ALL
D04204J		AW0319	POS 06	D04204P	W0386	ALL
D04442P		AW0403	POS 03	D04442J	W0472	ALL
D04444P		AW0403	POS 04	D04444J	W0472	ALL
W0403	N2	RIGHT FRONT SPAR SLAT #12 SWITCH				
D07550P				D07550J	W0480	050-099, 151
D03697		S2314				050-099, 151
W0404	S2	R WING INBD FS-S2A-FIRE DET/ENG INSTR				
D05518P		AC0702	POS 16	D05518J	W0598	ALL
D04632P		AC0702	POS 27	D04632J	W0262	ALL
D04238J		AW0320	POS 06	D04238P	W0388	ALL
W0406	L2	L WING INBD FS-L2A-HYDRAULICS/ENGINE INSTRUMENTS/FLIGHT CONTROLS				
D04484P		AC0701	POS 17	D04484J	W0602	ALL
D04482P		AC0701	POS 18	D04482J	W0746	ALL
D04486P		AC0701	POS 21	D04486J	W0756	ALL
D04206J		AW0319	POS 01	D04206P	W0356	ALL
D04212J		AW0319	POS 02	D04212P	W0356	ALL
D04214J		AW0319	POS 03	D04214P	W0356	ALL
D06292J		AW0319	POS 05	D06292P	W0380	ALL
D04474P		AW0321	POS 02	D04474J	W0390	ALL
D04434P		AW0403	POS 01	D04434J	W0430	ALL
D11158		J1				ALL
D13942		J1				ALL

MASTER BUNDLE LIST

D280T132

91-21-13
 Section W0400
 Page 1
 Mar 09/2006



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0407	S2	ADC SWITCHING S,SHELF TO P36 & P37				
D04743P		AE0209	POS 10	D04743J	W0184	ALL
D04745P		AE0224	POS 11	D04745J	W0198	ALL
D04705J		AE0307	POS 11	D04705P	W0127	ALL
W0408	R2	R WING INBD FS-R2A-HYDRAULICS/ENGINE INSTRUMENTS/FLIGHT CONTROLS				
D07040P		AC0702	POS 15	D07040J	W0656	ALL
D05528P		AC0702	POS 25	D05528J	W0656	ALL
D04616P		AC0702	POS 26	D04616J	W0766	ALL
D04248J		AW0320	POS 01	D04248P	W0376	ALL
D04252J		AW0320	POS 02	D04252P	W0376	ALL
D04254J		AW0320	POS 03	D04254P	W0376	ALL
D06296J		AW0320	POS 05	D06296P	W0384	ALL
D04170P		AW0322	POS 02	D04170J	W0394	ALL
D13022		J1				050-099, 150-155, 162-165, 275-276
D13944		J1				050-099, 150-155, 163-165, 275-276
D13022		J1-				156-157, 166-199, 277-299
D13944		J1-				156-162, 166-199, 277-299
W0409	S2	P51 TO E1-SHELF-S2				
D04301P		AE0208	POS 08	D04301J	W0045	ALL
D04305J		AE0307	POS 39	D04305P	W0127	ALL

MASTER BUNDLE LIST

D280T132

91-21-13

Section W0400

Page 2 End

Jun 28/2006



767-200/300 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0410	R1	P32 TO F4- L FWD GALLEY POWER FEEDER				
D13448		M1630(YIF)				050-099, 150-199
W0411	S2	PACS STAB. & FLAP POS MODULE C,P50 TO SHELF				
D04885P		AE0202	POS 14	D04885J	W1114	ALL
D04881J		AE0307	POS 91	D04881P	W0127	ALL
W0412	L2	L WING-L2-IDG CONTROL				
D06586P		AC0701	POS 05	D06586J	W0756	ALL
D04550P		AC0701	POS 29	D04550J	W0214	ALL
D04398P		AC0701	POS 30	D04398J	W0214	ALL
D04342J		AW0319	POS 08	D04342P	W0352	050-099, 150-199, 275-278
D04342J		AW0319	POS 08	D04342P		280-299
W0413	R2	PACS STAB. & FLAP POS MODULE R,P50 TO SHELF				
D04887P		AE0202	POS 17	D04887J	W1080	ALL
D04895J		AE0317	POS 47	D04895P	W0105	ALL
D04883J		AE0317	POS 50	D04883P	W0119	ALL
W0414	R2	R WING-R2-IDG CONTROL				
D06588P		AC0702	POS 09	D06588J	W0768	ALL
D04400P		AC0702	POS 29	D04400J	W0222	050-099, 150-154, 162-163, 275-276
D04400P		AC0702	POS 29	D04400J	W0222	155-157, 164-199, 277-299
D04630P		AC0702	POS 30	D04630J	W0222	050-099, 150-154, 162-163, 275-276
D04630P		AC0702	POS 30	D04630J	W0222	155-157, 164-199, 277-299
D04344J		AW0320	POS 08	D04344P	W0374	050-099, 150-166, 275-299
D04344J		AW0320	POS 08	D04344P		167-199
W0416	L2	L WING INBD FS-L2B-ENG INSTR A				
D04524P		AC0701	POS 26	D04524J	W0744	ALL
D04202J		AW0319	POS 07	D04202P	W0352	050-099, 150-199, 275-278
D04202J		AW0319	POS 07	D04202P		280-299

MASTER BUNDLE LIST

D280T132

91-21-13

Section W0410

Page 1

Feb 06/2009



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0417	R2	WARNING & ANN,EFIS,P3 TO SHELF				
D04393J		AE0317	POS 20	D04393P	W0119	ALL
D04391J		AF0120	POS 18	D04391P	W0031	ALL
W0418	R2	R WING-R2B-ENG INSTR/ANTI-ICE/SLATS/HYDRAULICS				
D04622P		AC0702	POS 17	D04622J	W0764	ALL
D05712P		AC0702	POS 19	D05712J	W0768	ALL
D05598P		AC0702	POS 21	D05598J	W0656	ALL
D04242J		AW0320	POS 09	D04242P	W0374	050-099, 150-166, 275-299
D04242J		AW0320	POS 09	D04242P		167-199
D04380P		AW0404	POS 02	D04380J	W0470	ALL
D02294		M00549	0775/173/R109			ALL
D01516		V00056	//			ALL
D01596		V00057	R0377/14/LE			ALL
W0419	S2	AFDS WRN AND ANN L,P1 TO SHELF				
D05553J		AE0319	POS 50	D05553P	W0127	ALL
D05551J		AF0119	POS 21	D05551P	W0011	ALL



767-200/300 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0420	L2	L WING-L2A-EEC				
D08306P			L0163/ /FS	D08306J	W1300	ALL
D06116P		AC0701	POS 12	D06116J	W0598	ALL
D04528P		AC0701	POS 22	D04528J	W0756	ALL
D04234J		AW0319	POS 09	D04234P	W0372	ALL
W0422	R2	R. WING-R2A-EEC				
D08308P			R0163/ /FS	D08308J	W1302	ALL
D04624P		AC0702	POS 18	D04624J	W0768	ALL
D06114P		AC0702	POS 23	D06114J	W0598	ALL
D04244J		AW0320	POS 07	D04244P	W0382	ALL
W0424	S2	L WING FS-S2B-FIRE DETECTION				
D04546P		AC0701	POS 27	D04546J	W0614	ALL
D04218J		AW0319	POS 10	D04218P	W0360	ALL
D04404P		AW0321	POS 01	D04404J	W0390	ALL
W0426	S2	R WING-S2B-FIRE DETECTION				
D05522P		AC0702	POS 05	D05522J	W0606	ALL
D04264J		AW0320	POS 10	D04264P	W0378	ALL
D04406P		AW0322	POS 01	D04406J	W0394	ALL
W0428	R2	P32 TO F4 L FWD GALLEY CONTROL				
D08686P		AE0312	POS 01	D08686J	W0024	050-099, 150-199
D13446		M1630(YIF)				050-099, 150-199

MASTER BUNDLE LIST

D280T132

91-21-13

Section W0420

Page 1 End

Mar 09/2006



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0430	L*	L WING OUTBD FS-L2-FLIGHT CONTROLS				
D07546J				D07546P	W0401	050-099, 151
D07546J				D07546P		150, 152-199, 275-299
D04434J		AW0403	POS 01	D04434P	W0406	ALL
W0431	L2	UPPER LEFT AOA SENSOR TO SHELF-L				
D04309J		AE0319	POS 47	D04309P	W0105	ALL
D00117		TS0012	0192/202/L063			ALL
D00121		TS0012	0192/202/L063			ALL
W0436	L2	L WING INBD FS-L2-TURNOFF & LANDING LTS				
D04532P		AC0701	POS 28	D04532J	W0756	ALL
D02298		M00544	0776/152/L110			ALL



767-200/300 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0440	R2	L WING-R2-HYDRAULICS/LIGHTING				
D04536P		AC0701	POS 20	D04536J	W0628	ALL
D04280P		AW0321	POS 03	D04280J	W0398	ALL
D04438P		AW0403	POS 02	D04438J	W0468	ALL
D02296		M00548	0776/152/L110			ALL
D01514		V00051	/ /			050-099, 150-166, 275-277
D01514		V00051.				167-199, 278-299
D01594		V00052	L0377/14/LE			ALL
W0441	R2	UPPER RIGHT AOA SENSOR TO SHELF-R				
D04317J		AE0322	POS 29	D04317P	W0145	ALL
D00123		TS0013	0192/202/R063			ALL
D00127		TS0013	0192/202/R063			ALL
W0442	L2	R WING INBD FS-L2-FLIGHT CONTROLS & HYDRAULICS				
D05530P		AC0702	POS 20	D05530J	W0588	ALL
D04626P		AC0702	POS 24	D04626J	W0752	ALL
D04628P		AC0702	POS 28	D04628J	W0754	ALL
D04168P		AW0322	POS 03	D04168J	W0400	ALL
D04378P		AW0404	POS 01	D04378J	W0480	ALL
D01528		M00483	0775/173/L110			ALL
W0444	L*	L WING REAR SPAR-L1-BST PUMP				
D04408P		AL1003	POS 01	D04408J	W0578	ALL
D05558P		AL1003	POS 02	D05558J	W0578	ALL
D01542		M00333	L0274/12/MS			ALL
D02802		M00636	L/ /WING			ALL
D12188		M01730	L0224/014/MS			155-157, 165-199, 277-299
W0446	L*	L WING REAR SPAR-L2A-FUEL/FLT CONT				
D04590P		AL1001	POS 01	D04590J	W0756	ALL
D04610P		AL1001	POS 02	D04610J	W0756	ALL
D04594P		AL1001	POS 03	D04594J	W0942	ALL
D05702P		AL1001	POS 11	D05702J	W1251	ALL
D04414P		AL1001	POS 12	D04414J	W0942	ALL
D05562P		AL1001	POS 13	D05562J	W0942	ALL
D01586		M00470	L0529/ /RS			ALL
D01638		M00471	L1085/ /RS			ALL

MASTER BUNDLE LIST

D280T132

91-21-13

Section W0440

Page 1

Mar 09/2006



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0446	L*	L WING REAR SPAR-L2A-FUEL/FLT CONT (continued)				
D01630		M00473	L0803/ /TE			ALL
D01578		M00475	L0401/ /TE			ALL
D02292		M00488	L0959/147/RS			ALL
D01534		M00596	L WING/ /			ALL
D01552		M00722	L/ /RS			ALL
D01582		M00726	L/ /			ALL
D02264		S00452	L0348/009/RS			ALL
D02028		V00029	L0345/159/MS			ALL
D02032		V00031	L0345/159/MS			ALL
D02044		V00037	L0345/159/RS			ALL
D01574		V00100	L0435/146/RS			ALL
W0448	R*	RIGHT WING REAR SPAR-R2A-FUEL/FLT CONT				
D04268P		AL1002	POS 01	D04268J	W0738	ALL
D05514P		AL1002	POS 02	D05514J	W0768	ALL
D05880P		AL1002	POS 03	D05880J	W0738	ALL
D06080P		AL1002	POS 10	D06080J	W0738	ALL
D04418P		AL1002	POS 11	D04418J	W0738	ALL
D04538P		AL1002	POS 12	D04538J	W0738	ALL
D01536		M00597	R WING/ /			ALL
D02820		M00720	WING/ /R			ALL
D01560		M00723	R/ /RS			ALL
D02814		M00725	R/ /RS			ALL
D01584		M00727	R/ /			ALL
D02818		M00729	R/ /			ALL
D02036		V00033	R0345/159/MS			ALL
D02040		V00035	R0345/159/MS			ALL
D02048		V00039	R0345/159/RS			ALL
D02286		V00098	R0435/146/RS			ALL
W0449	R2	P3 TO WARNING ELECTRONICS UNIT AND AURAL WARN SPEAKER				
D04303P		AE0208	POS 04	D04303J	W0045	ALL
D04321J		AF0120	POS 16	D04321P	W0031	ALL
D00699		B00057	FLTDK/ /OVHD			ALL

MASTER BUNDLE LIST

D280T132

91-21-13

Section W0440

Page 2 End

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0450	L*	L WING REAR SPAR-L2B-ANTI SKID/FUEL				
D04598P		AL1003	POS 03	D04598J	W0602	ALL
D08374P		AL1003	POS 07	D08374J	W0602	050-099, 155-199, 276-299
D00034		M00341	L0436/002/RS			ALL
D01124		M00955	L0352/ /RS			ALL
D01530		S00070	L0294/14/RS			ALL
D12192		S00805	L0257/14/RS			155-157, 165-199, 277-299
D02030		V00030	L0345/159/MS			ALL
D02034		V00032	L0345/159/MS			ALL
D02046		V00038	L0345/159/RS			ALL
D12184		V00157	L0901/12/RS			050-099, 155-199, 276-299
D12180		V00159	L0250/12/RS			050-099, 155-199, 276-299
W0451	L2	CAUTION & WARNING L.,PANEL TO SHELVES				
D05209P		AE0202	POS 13	D05209J	W1078	ALL
D04347P		AE0208	POS 06	D04347J	W0045	ALL
D04323J		AE0305	POS 45	D04323P	W0105	ALL
D05525J		AE0305	POS 57	D05525P	W0109	ALL
D05203J		AE0306	POS 38	D05203P	W0133	ALL
W0452	R*	R WING REAR SPAR -R2B- ANTI-SKID/FUEL				
D04278P		AL1002	POS 05	D04278J	W0656	ALL
D08376P		AL1002	POS 14	D08376J	W0656	050-099, 155-199, 276-299
D00058		M00343	R0436/002/RS			ALL
D01166		M00956	R0352/ /RS			ALL
D01532		S00072	R0297/14/RS			ALL
D12194		S00806	R0257/14/RS			155-157, 165-199, 277-299
D02038		V00034	R0345/159/MS			ALL
D02042		V00036	R0345/159/MS			ALL
D02050		V00040	R0345/159/RS			ALL
D12186		V00158	R0901/12/RS			050-099, 155-199, 276-299
D12182		V00160	R0250/14/RS			050-099, 155-199, 276-299

MASTER BUNDLE LIST

D280T132

91-21-13

Section W0450

Page 1

Mar 09/2006



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0453	R2	CAUTION & WARNING R.,PANEL TO SHELVES				
D04809P		AE0202	POS 16	D04809J	W1080	ALL
D04349P		AE0208	POS 07	D04349J	W0045	ALL
D04325J		AE0317	POS 19	D04325P	W0119	ALL
D04679J		AE0320	POS 37	D04679P	W0145	ALL
D04819J		AE0320	POS 42	D04819P	W0145	ALL
W0454	S*	L WING REAR SPAR-S2A-FUEL				
D04602P		AL1001	POS 07	D04602J	W0596	ALL
D06078P		AL1001	POS 16	D06078J	W0596	ALL
D05884P		AL1001	POS 17	D05884J	W0596	ALL
D02812		M00724	L/ /RS			ALL
D02816		M00728	L/ /			ALL
D01566		S00074	L/ /RS			ALL
D01614		V00021	L/ /RS			ALL
D01554		V00025	L/ /RS			ALL
D01544		V00389	0954/156/L029			ALL
W0455	S2	FMC & PACS,P61 TO E1				
D04543J		AE0307	POS 90	D04543P	W0127	ALL
D04541P		AF0204	POS 82	D04541J	W0070	ALL
W0456	S*	R WING REAR SPAR -S2A- FUEL				
D05520P		AL1002	POS 07	D05520J	W0598	ALL
D01636		M00479	R0981/12/RS			ALL
D01616		V00022	R/ /RS			ALL
D01620		V00023	R/ /RS			ALL
D01572		V00026	R/ /RS			ALL
D01256		V00109	R WING/ /RS			ALL
W0458	S*	L WING REAR SPAR-S2B-FUEL/FLT CONT				
D04612P		AL1001	POS 15	D04612J	W0264	ALL
D01254		V00108	L WING/ /RS			ALL
W0459	L2	AFCS MODE CONT L,SHELF AND PNLS TO CONT PNL				
D04597P		AE0208	POS 03	D04597J	W0045	ALL
D04591J		AE0319	POS 31	D04591P	W0105	ALL
D05419J		AF0119	POS 20	D05419P	W0011	ALL
D00697		B00056	FLTDK/ /OVHD			ALL

MASTER BUNDLE LIST

D280T132

91-21-13

Section W0450

Page 2 End

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0460	R*	L WING REAR SPAR-R1-BST PUMP				
D04600P		AL1003	POS 18	D04600J	W1274	ALL
D01550		M00332	L0280/12/MS			ALL
D01538		S00071	L0297/14/RS			ALL
D02806		S00423	L WING/ /RS			ALL
D20058		V00388	0954/166/L029			ALL
W0461	C2	AFCS MODE CONT C,SHELF TO CONT PNL				
D04593J		AE0319	POS 55	D04593P	W0127	ALL
D04501J		AF0119	POS 13	D04501P	W0011	ALL
W0462	S2	R WING REAR SPAR-S2B-FUEL				
D04652P		AL1006	POS 03	D04652J	W0606	ALL
D01921		TS0451	1043/183/R077			ALL
D02800		V00122	R/ /RS			ALL
W0463	R2	AFCS MODE CONT R,SHELF AND PNL TO CONT PNL				
D04595J		AE0317	POS 21	D04595P	W0119	ALL
D05423J		AF0120	POS 20	D05423P	W0031	ALL
W0464	L*	R WING REAR SPAR-L2-FLT CONT/FUEL				
D04416P		AL1002	POS 09	D04416J	W0752	ALL
D06978P		AL1002	POS 16	D06978J	W0738	155-157, 166-199, 277-299
D04272P		AL1002	POS 17	D04272J	W0752	ALL
D01588		M00486	R0529/ /RS			ALL
D01640		M00487	R1085/ /RS			ALL
D01632		M00489	R0803/ /TE			ALL
D02822		S00073	R0294/14/RS			ALL
D02808		S00424	R WING/ /RS			ALL
D02266		S00453	R0348/009/RS			ALL
W0465	L2	FCC L,SHELF TO XDCR'S				
D00135		AE0105	POS 01			050-099, 150-199
D00133		AE0106	POS 02			050-099, 150-199
D00137		AE0217	POS 01			050-099, 150-199
D04337J		AE0319	POS 35	D04337P	W0105	050-099, 150-199

MASTER BUNDLE LIST

D280T132

91-21-13
Section W0460
Page 1
Mar 09/2006



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0466	R1	L WING INBD FS-R1-FLT CONT				
D04420P		AC0701	POS 16	D04420J	W0274	ALL
D01522		M00469	0776/152/L110			ALL
W0468	R*	L WING OUTBD FS-R2-LIGHTING				
D04438J		AW0403	POS 02	D04438P	W0440	ALL
D04430J		AW0901	POS 01	D04430P	W0486	ALL
D04432J		AW0901	POS 02	D04432P	W0488	ALL
D02752		M00588	L1128/14/TIP			ALL
D02384		S00398	L0440/14/LE			155, 275-299
D02388		S00400	L0440/14/LE			ALL
D02074		T00131	L1128/12/TIP			ALL
W0469	R2	FCC R,SHELF TO XDCCR'S				
D04345J		AE0319	POS 78	D04345P	W0119	ALL
D01399		M00952	0140/ /			ALL



767-200/300 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0470	R*	R WING OUTBD FS-R2-LIGHTING				
D04380J		AW0404	POS 02	D04380P	W0418	ALL
D04426J		AW0902	POS 01	D04426P	W0490	ALL
D04428J		AW0902	POS 02	D04428P	W0492	ALL
D03466		M00589	R1128/14/TIP			ALL
D02382		S00399	R0440/14/LE			275-299
D02386		S00401	R0440/14/LE			ALL
D02070		T00132	R1128/12/TIP			ALL
W0471	L2	MISC ELEC EQUIPMENT L, P36 TO P33 & SHELVES				
D04801P		AE0207	POS 07	D04801J	W0144	ALL
D05431P		AE0209	POS 05	D05431J	W0176	150-154, 162-164
D05431P		AE0209	POS 22	D05431J	W0176	050-099, 155-157, 165-199, 275-299
D05433P		AE0209	POS 23	D05433J	W0176	ALL
D05497P		AE0209	POS 30	D05497J	W0176	ALL
D04457J		AE0305	POS 16	D04457P	W0105	ALL
D05817J		AE0305	POS 27	D05817P	W0109	ALL
D07160J		AE0305	POS 49	D07160P	W0107	ALL
D06141J		AE0305	POS 51	D06141P	W0105	050-099, 150-199, 277-299
D04791J		AE0306	POS 37	D04791P	W0133	ALL
D04711J		AE0306	POS 46	D04711P	W0135	ALL
W0472	S*	L WING OUTBD FS-S2-FUELING PNL				
D04442J		AW0403	POS 03	D04442P	W0402	ALL
D04444J		AW0403	POS 04	D04444P	W0402	ALL
D04744P		AW0601	POS 01	D04744J	W1056	ALL
D04746P		AW0601	POS 02	D04746J	W1056	ALL
D08549		P00028				ALL
W0473	R2	P37 TO E2-3 SHELF				
D05435P		AE0218	POS 20	D05435J	W0192	ALL
D05499P		AE0218	POS 21	D05499J	W0192	ALL
D05439J		AE0320	POS 06	D05439P	W0145	ALL
D04667J		AE0320	POS 08	D04667P	W0145	ALL
W0474	R1	R WING FRONT SPAR-R1-FLT CONT				
D04422P		AC0702	POS 22	D04422J	W0206	ALL
D01524		M00494	0775/173/R109			ALL

MASTER BUNDLE LIST

D280T132

91-21-13

Section W0470

Page 1

Mar 09/2006



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0475	R2	P37 TO P33,E1-3 AND E1-5 SHELF				
D04803P		AE0203	POS 02	D04803J	W0142	ALL
D05437P		AE0218	POS 22	D05437J	W0192	ALL
D04793J		AE0317	POS 23	D04793P	W0119	ALL
D05821J		AE0317	POS 44	D05821P	W0115	ALL
W0476	L1	R WING REAR SPAR-L1-FUEL BOOST PMP				
D05512P		AL1002	POS 15	D05512J	W0202	ALL
D03986		M00334	R0280/12/MS			ALL
W0478	R1	R WING REAR SPAR-R1-FUEL BOOST PMP				
D05508P		AL1004	POS 04	D05508J	W0580	ALL
D04410P		AL1004	POS 14	D04410J	W0580	ALL
D01540		M00335	R0274/12/MS			ALL
D02804		M00637	R/ /WING			ALL
D12190		M01731	R0224/014/MS			155-157, 165-199, 277-299

MASTER BUNDLE LIST

D280T132

91-21-13

Section W0470

Page 2 End

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0480	L*	R WING OUTBD FS-L2-FLIGHT CONTROLS				
D07550J				D07550P	W0403	050-099, 151
D07550J				D07550P		150, 152-199, 275-299
D04378J		AW0404	POS 01	D04378P	W0442	ALL
W0481	L2	ILS-L,SHELF TO CONT PNL				
D04551P		AE0102	POS 01	D04551J	W5150	ALL
D04365J		AE0319	POS 48	D04365P	W0105	ALL
D00155		M00087	P008-00/ /			ALL
D00203		M00229	UNDER/P10/			ALL
D02236		N00068	P010-00/ /			ALL
W0482	S*	L WING REAR SPAR-S2C-FUEL				
D05698P		AL1005	POS 08	D05698J	W0590	ALL
D01570		M00336	L/ /			ALL
D02798		V00121	L/ /RS			ALL
W0483	C2	ILS-C,SHELF TO CONT PANEL				
D04553P		AE0104	POS 02	D04553J	W5150	ALL
D04409J		AE0319	POS 57	D04409P	W0127	ALL
D00603		M00087	P008-00/ /			ALL
W0484	S*	L WING REAR SPAR-S2D-FUEL				
D05700P		AL1005	POS 03	D05700J	W0614	ALL
D01634		M00462	L0981/12/RS			ALL
D01923		TS0452	1041/188/L084			ALL
D01618		V00020	L/ /RS			ALL
D01564		V00096	L/ /RS			ALL
W0485	R2	ILS-R,SHELF TO CONT PNL				
D04555P		AE0104	POS 01	D04555J	W5150	ALL
D04369J		AE0319	POS 70	D04369P	W0119	ALL
D00601		M00087	P008-00/ /			ALL
D02238		N00069	P010-00/ /			ALL
W0486	R2	L WING TIP-R2-ANTI COLLISION LTS				
D04430P		AW0901	POS 01	D04430J	W0468	ALL
D02078		L00107	L1122/12/TIP			ALL

MASTER BUNDLE LIST

D280T132

91-21-13

Section W0480

Page 1

Jun 28/2006



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0487	L2	VOR/DME L,SHELF TO CONT PNL				
D04373J		AE0306	POS 40	D04373P	W0133	ALL
D05415J		AF0119	POS 17	D05415P	W0011	ALL
W0488	R2	L WING TIP-R2-ANTI COLLISION LTS				
D04432P		AW0901	POS 02	D04432J	W0468	ALL
D02082		L00105	L1154/12/TIP			ALL
W0489	R2	VOR/DME R,SHELF TO CONT PNL				
D04377J		AE0320	POS 38	D04377P	W0145	ALL
D05417J		AF0120	POS 13	D05417P	W0031	ALL



767-200/300 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0490	R2	R WING TIP-R2-ANTI COLLISION LTS				
D04426P		AW0902	POS 01	D04426J	W0470	ALL
D02080		L00108	R1122/12/TIP			ALL
W0491	L*	PITCH SERVO ACTR,RO SERVO ACTR & STAB POS XMTR L CATIA DESIGNED				
D04379J		AE0305	POS 12	D04379P	W0105	ALL
D04519P		AP1501	POS 04	D04519J	W0593	ALL
D04475P		AP1501	POS 05	D04475J	W0591	ALL
D04531P		AP1501	POS 16	D04531J	W0575	ALL
W0492	R2	R WING TIP-R2-ANTI COLLISION LTS				
D04428P		AW0902	POS 02	D04428J	W0470	ALL
D02084		L00106	R1154/12/TIP			ALL
W0495	L2	CCA & FLAP POS XMTR,L				
D04383J		AE0305	POS 48	D04383P	W0105	ALL
D04807J		AL1001	POS 06	D04807P	W0507	ALL

MASTER BUNDLE LIST

D280T132

91-21-13

Section W0490

Page 1 End

Aug 15/2007



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0500	L2	V FIN-L2-FLT CONT				
D05436J		AP1501	POS 01	D05436P	W0748	ALL
D01894		M00515	F 080/ /RS			ALL
D01892		M00516	/ /			ALL
W0501	C2	PITCH SERVO ACTR,RO SERVO ACTR & STAB POS XMTR C				
D04381J		AE0307	POS 93	D04381P	W0127	ALL
D04481P		AP1501		D04481J	W0611	150-199
D04523P		AP1501	POS 17	D04523J	W0597	ALL
D04481P		AP1501	POS 29	D04481J	W0611	050-099, 275-299
W0502	L2	L HORIZ STAB-L2B-FLT CONT				
D05438J		AP1501	POS 13	D05438P	W0750	ALL
D00432		M00950	1725/244/L047			ALL
D01888		V00101	1696/247/L055			ALL
W0503	R*	PITCH SERVO ACTR, RO SERVO ACTR & STAB POS XMTR R CATIA DESIGNED				
D04385J		AE0317	POS 52	D04385P	W0119	ALL
D04473P		AP1501		D04473J	W0603	150-199
D04527P		AP1501	POS 08	D04527J	W0599	ALL
D04473P		AP1501	POS 09	D04473J	W0603	050-099, 275-299
D04533P		AP1501	POS 20	D04533J	W0581	ALL
W0504	R2	R HORIZ STAB-R2-FLT CONT				
D05440J		AP1501	POS 10	D05440P	W0770	ALL
D01866		V00102	1657/234/R068			ALL
W0506	R2	AIR COND RIGHT PACK & ANTISKID				
D05552P		AE0202	POS 04	D05552J	W1080	ALL
D05644P		AE0202	POS 10	D05644J	W1080	ALL
D05766P		AE0202	POS 11	D05766J	W1080	ALL
D05612P		AE0218	POS 04	D05612J	W0192	ALL
D04646P		AE0218	POS 08	D04646J	W0192	ALL
D06076P		AE0218	POS 09	D06076J	W0192	ALL
D05602P		AE0218	POS 10	D05602J	W0192	ALL
D05768P		AE0218	POS 14	D05768J	W0192	ALL
D05802J		AE0220	POS 03	D05802P	W0084	ALL
D04504J		AE0220	POS 04	D04504P	W0084	ALL
D06288P		AE0224	POS 06	D06288J	W0192	ALL

MASTER BUNDLE LIST

D280T132

91-21-13

Section W0500

Page 1

Aug 15/2007



767-200/300 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0506	R2	AIR COND RIGHT PACK & ANTISKID (continued)				
D04656J		AE0317	POS 34	D04656P	W1084	ALL
D04658J		AE0317	POS 38	D04658P	W1100	ALL
D05204J		AE0320	POS 47	D05204P	W0016	ALL
D04766P		AF0204	POS 59	D04766J	W0066	ALL
D05764P		AF0204	POS 60	D05764J	W0066	ALL
D05928P		AF0204	POS 61	D05928J	W0066	ALL
D04650P		AF0204	POS 62	D04650J	W0066	ALL
D05724P		AF0204	POS 63	D05724J	W0066	ALL
D00544		B00012	0370/185/R070			ALL
D02366		S00431	0331/182/R045			ALL
D03064		TS0164	0386/187/R073			ALL
W0507	L2	CCA L,L WW DISC TO CCA L				
D04807P		AL1001	POS 06	D04807J	W0495	ALL
D00185		M00274	L0250/12/RS			ALL
W0508	L2	AIR COND LEFT PACK				
D05048P		AC0701	POS 07	D05048J	W0942	ALL
D05988P		AC0701	POS 09	D05988J	W0942	ALL
D10144		M01088	0783/130/L038			ALL
D00670		S00048	0805/122/L027			ALL
D02792		S00397	0790/123/L020			ALL
D01576		S00555	0879/124/L034			ALL
D00680		TS0039	0805/124/L030			ALL
D00688		TS0041	0879/124/L034			ALL
D02824		TS0198	0859/125/L018			ALL
D00696		TS0285	0845/123/L047			ALL
D01338		TS0290	0883/119/L039			ALL
D01344		TS0292	0882/129/L039			ALL
D01352		TS0294	0878/119/L037			ALL
D02144		TS0431	0882/119/L047			ALL
D02152		TS0433	0871/124/L056			ALL
D00698		V00001	0823/113/L015			ALL
D03988		V00001	0823/113/L015			ALL
D00710		V00002	0827/129/L015			ALL
D03990		V00002	0827/129/L015			ALL
D00700		V00003	0827/118/L015			ALL
D03992		V00003	0827/118/L015			ALL
D00678		V00018	0875/118/L045			ALL

MASTER BUNDLE LIST

D280T132

91-21-13
 Section W0500
 Page 2
 Jun 06/2008



Bundle	Sep	Description	Location	MW Connector	MW Bundle	Effectivity
Equip		Matewith				
W0508	L2	AIR COND LEFT PACK (continued)				
D01590		V00131	0867/123/L034			ALL
D10702		V00145	0823/123/L015			ALL
D10704		V00145	0823/123/L015			ALL
D12052		V00152	0829/120/L015			ALL
D13580		V00152	0829/120/L015			ALL
D12054		V00153	0829/120/L015			ALL
D13582		V00153	0829/120/L015			ALL
D13570		V00385	0786/120/L020			ALL



767-200/300 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0510	L2	LANDING GEAR POSITION INDICATION & AIR COND LEFT PACK				
D04978P		AE0202	POS 12	D04978J	W1078	ALL
D04802P		AE0209	POS 16	D04802J	W0176	ALL
D04672P		AE0209	POS 17	D04672J	W0176	ALL
D04502J		AE0220	POS 12	D04502P	W0082	ALL
D04002P		AE0226	POS 05	D04002J	W1082	ALL
D04676J		AE0305	POS 04	D04676P	W1092	ALL
D06732J		AE0305	POS 24	D06732P	W0109	ALL
D06752J		AE0305	POS 25	D06752P	W0109	ALL
D04674J		AE0305	POS 35	D04674P	W1084	ALL
D04868J		AE0306	POS 07	D04868P	W0133	ALL
D04862J		AE0306	POS 17	D04862P	W0014	ALL
D04644P		AF0204	POS 20	D04644J	W0062	ALL
D04726P		AF0204	POS 21	D04726J	W0062	ALL
D05652P		AF0204	POS 22	D05652J	W0062	ALL
W0511	L2	RADIO ALTM L,SHELF TO SHELF				
D04415J		AC0604	POS 02	D04415P	W0165	ALL
D04517J		AE0305		D04517P	W0109	150-199
D04417J		AE0305	POS 17	D04417P	W0105	ALL
D04517J		AE0305	POS 53	D04517P	W0109	050-099, 275-299
W0512	L2	TAIL SEC -L2A- FLT CONT				
D05942J		AP1501	POS 02	D05942P	W0748	ALL
D01890		V00103	1657/234/L068			ALL
D11080		V00124	1699/190/50			150-199, 275-299
W0513	C2	RADIO ALTM C,SHELF TO SHELF				
D04419J		AC0604	POS 08	D04419P	W0185	ALL
D04421J		AE0307	POS 67	D04421P	W0127	ALL
W0514	L2	L & R INBD ELEV POS XMTR STAB				
D01858		M00517	SL066/014/RS			ALL
D01860		M00518	SR069/014/RS			ALL
W0515	R2	RADIO ALTM R,SHELF TO SHELF				
D04423J		AC0604	POS 12	D04423P	W0175	ALL
D04545J		AE0317	POS 07	D04545P	W1100	ALL
D05575J		AE0320	POS 03	D05575P	W0143	ALL

MASTER BUNDLE LIST

D280T132

91-21-13

Section W0510

Page 1

Mar 09/2006



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0516	L2	L WING INBD FS-L2B - EEC				
D06578P		AC0701	POS 14	D06578J	W0758	ALL
D06384J		AW0319	POS 04	D06384P	W0396	ALL
W0517	L2	FMC L,SHELVES TO CONT DISPLAY UNIT				
D04429J		AE0306	POS 39	D04429P	W0133	ALL
D05427J		AE0306	POS 43	D05427P	W0135	ALL
D00465		M00076	P009-00/ /			ALL
D02287		M00076	P009-00/ /			ALL
W0518	R2	R WING INBD FS-R2B- EEC				
D06580P		AC0702	POS 14	D06580J	W0782	ALL
D06382J		AW0320	POS 04	D06382P	W0392	ALL
W0519	R2	FMC R,SHELVES TO CONT DISPLAY UNIT				
D05425J		AE0322	POS 23	D05425P	W0143	ALL
D04433J		AE0322	POS 33	D04433P	W0145	ALL
D00467		M00077	P009-00/ /			ALL
D02289		M00077	P009-00/ /			ALL

MASTER BUNDLE LIST

D280T132

91-21-13

Section W0510

Page 2 End

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0521	SA	RT. STAB TRIM - BRKT. AC1402 TO CONTROL STAND P10 CATIA DESIGNED				
D06025P		AC1402	POS 20	D06025J	W0589	050-099, 155-199, 275-299
D06023P		AC1402	POS 21	D06023J	W0581	050-099, 155-199, 275-299
D02265J		D02265P OF		D02265P		050-099, 155-199, 275-299
W0523	C2	PLT C INSTR PNL TO SHELF				
D05455J		AE0319	POS 54	D05455P	W0127	ALL
D05453J		AF0119	POS 10	D05453P	W0051	ALL
W0525	S2D	LT. STAB TRIM - BRKT. AC1402 TO CONTROL STAND P10				
D06029P		AC1402	POS 15	D06029J	W0575	050-099, 155-199, 275-299
D06027P		AC1402	POS 19	D06027J	W0587	050-099, 155-199, 275-299
D02263J		D02263P OF		D02263P		050-099, 155-199, 275-299
W0527	R2	CAUTION & WRN SYS,FWD PNL TO SHELVES				
D04879J		AE0317	POS 43	D04879P	W0115	ALL
D04455J		AE0317	POS 55	D04455P	W0119	ALL
D04899J		AE0320	POS 40	D04899P	W0145	ALL
D04893J		AF0120	POS 25	D04893P	W0031	ALL
W0529	S2	AFDS WRN AND ANN R,P3 TO SHELF				
D05557J		AE0307	POS 62	D05557P	W0127	ALL
D05555J		AF0120	POS 08	D05555P	W0031	ALL

MASTER BUNDLE LIST

D280T132

91-21-13

Section W0520

Page 1 End

Aug 15/2007



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0533	N2	3 AXIS ACCELERATION XDCR-MAIN W/W AREA				
D04727P D00321		AL1003 TS0028	POS 17 0976/166/0000	D04727J	W0693	ALL ALL
W0539	S2	YAW DAMPER L, TAIL DISC TO PCA				
D04783J D00175		AP1501 M00521	POS 03 1726/182/L010	D04783P	W0619	ALL ALL

MASTER BUNDLE LIST

D280T132

91-21-13

Section W0530

Page 1 End

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0546	S2*	ENGINE FIRE EXTINGUISHING BOTTLE 1				
D06886J				D06886P	W0614	050-099, 155-199, 275-299
D01424		B00017	0659/169/R073			050-099, 155-199, 275-299
D01428		B00017	0659/169/R073			050-099, 155-199, 275-299
D01430		B00017	0659/169/R073			050-099, 155-199, 275-299
W0548	S2*	ENGINE FIRE EXTINGUISHING BOTTLE 2				
D06888J				D06888P	W0606	050-099, 155-199, 275-299
D01426		B00018	0671/169/R073			050-099, 155-199, 275-299
D01432		B00018	0671/169/R073			050-099, 155-199, 275-299
D01434		B00018	0671/169/R073			050-099, 155-199, 275-299

MASTER BUNDLE LIST

D280T132

91-21-13

Section W0540

Page 1 End

Aug 05/2009



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0571	N2	SERVICE INTERPHONE-JACK SCREW SERVICE				
D08503			1678/183/R047			ALL
W0572	L2	AIR COND RIGHT PACK ELEC HYD PUMP CONTROL & INDICATION				
D08068P		AE0202	POS 02	D08068J	W1078	ALL
D05682P		AE0204	POS 12	D05682J	W0054	ALL
D05798P		AE0207	POS 01	D05798J	W0144	ALL
D05506P		AE0218	POS 42	D05506J	W0188	ALL
D08092J		AE0220	POS 06	D08092P	W0082	ALL
D05782J		AE0220	POS 09	D05782P	W0082	ALL
D06264J		AE0220	POS 10	D06264P	W2052	ALL
D05658P		AE0223	POS 06	D05658J	W0176	ALL
D04662P		AE0223	POS 07	D04662J	W0176	ALL
D05930P		AE0223	POS 08	D05930J	W0176	ALL
D06286P		AE0223	POS 11	D06286J	W0176	ALL
D06802J		AE0306	POS 32	D06802P	W0183	275-299
D05726P		AF0204	POS 25	D05726J	W0062	ALL
D05910P		AF0204	POS 26	D05910J	W0062	ALL
D04708P		AF0204	POS 27	D04708J	W0062	ALL
D03074		S00456	0410/167/L089			ALL
W0575	L*	STAB. POS XMTR & STAB. TRIM CONT L				
D06029J		AC1402	POS 15	D06029P	W0525	050-099, 155-199, 275-299
D04531J		AP1501	POS 16	D04531P	W0491	ALL
D00223		M00211	1726/280/L007			150-154
D00229		M00211	1726/280/L007			150-154
D00225		M00519	1726/182/L026			ALL
D02209		M01607	1726/280/L007			050-099, 155-199, 275-299
D02211		M01607	1726/280/L007			050-099, 155-199, 275-299
W0578	L1	AIR COND,RECIRC FANS,CARGO HT & EQUIP COOLING CATIA DESIGNED				
D08044J		AC0701	POS 04	D08044P	W0938	ALL
D04620J		AC0702	POS 12	D04620P	W0980	ALL
D05950J		AC1201	POS 02	D05950P	W0934	ALL
D06314P		AC1501	POS 02	D06314J	W1354	ALL
D04918P		AE0209	POS 01	D04918J	W0182	ALL
D04920P		AE0209	POS 06	D04920J	W0182	ALL

MASTER BUNDLE LIST

D280T132

91-21-13

Section W0570

Page 1

Aug 05/2009



767-200/300 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity	
W0578	L1	AIR COND,RECIRC FANS,CARGO HT & EQUIP COOLING CATIA DESIGNED (continued)					
D05952P		AE0209	POS 07	D05952J	W0182	ALL	
D04408J		AL1003	POS 01	D04408P	W0444	ALL	
D05558J		AL1003	POS 02	D05558P	W0444	ALL	
D00448		B00013	0762/131/L044			ALL	
D02768		S00364	0633/118/L002			ALL	
D00646		V00013	1364/172/L075			ALL	
D00576		V00127	1365/172/L075			ALL	
D10888		V00148	1510/170/L062			275-276	
W0579	L*	RUDDER RATIO AND YAW DAMPER CONT-L					
D04559J		AP1501	POS 25	D04559P	W1251	ALL	
D00245		M00510	F 108/ /RS			ALL	
D00231		M00626	F089/ /RS			ALL	
D00803		TS0194	F 089/ /RS			ALL	

MASTER BUNDLE LIST

D280T132

91-21-13
Section W0570
Page 2 End
Feb 06/2009



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0580	R1	AIR COND RIGHT PACK & EQUIP COOLING				
D08048J		AC0702	POS 02	D08048P	W0612	ALL
D04636J		AC0702	POS 06	D04636P	W0982	ALL
D05948J		AC1201	POS 01	D05948P	W0934	ALL
D05706J		AC1402	POS 05	D05706P	W0030	ALL
D05672J		AC1402	POS 08	D05672P	W0030	ALL
D05824J		AC1402	POS 09	D05824P	W0030	ALL
D06306P		AC1402	POS 13	D06306J	W1358	ALL
D05760P		AE0218	POS 45	D05760J	W1118	ALL
D04924P		AE0218	POS 48	D04924J	W1118	ALL
D04922P		AE0218	POS 49	D04922J	W1118	ALL
D05508J		AL1004	POS 04	D05508P	W0478	ALL
D04410J		AL1004	POS 14	D04410P	W0478	ALL
D00454		B00014	0752/131/R044			ALL
D02766		S00363	0634/123/R003			ALL
D00706		V00014	1364/180/L075			ALL
D02762		V00088	0940/128/R014			ALL
D00606		V00128	1355/172/L075			ALL
W0581	R*	STAB.POS XMTR & STAB.TRIM CONT R				
D06023J		AC1402	POS 21	D06023P	W0521	050-099, 155-199, 275-299
D04533J		AP1501	POS 20	D04533P	W0503	ALL
D00237		M00212	1726/280/R007			150-154
D00247		M00212	1726/280/R007			150-154
D00239		M00520	1726/182/R002			ALL
D02217		M01608	1726/280/R007			050-099, 155-199, 275-299
D02219		M01608	1726/280/R007			050-099, 155-199, 275-299
W0583	R*	RUDDER RATIO AND YAW DAMPER CONT-R				
D04567J		AP1501	POS 12	D04567P	W1261	ALL
D00233		M00509	F 108/ /RS			ALL
D00243		M00626	F089/ /RS			ALL
D00805		TS0194	F 089/ /RS			ALL
W0584	L2	PLT AUX HTR,L WINDSHIELD WIPER & RAIN REPELLANT.				
D04966J		AF0111	POS 03	D04966P	W0062	ALL
D04704J		AF0119	POS 08	D04704P	W0974	ALL

MASTER BUNDLE LIST

D280T132

91-21-13

Section W0580

Page 1

Aug 05/2009



767-200/300 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0584	L2	PLT AUX HTR,L WINDSHIELD WIPER & RAIN REPELLANT. (continued)				
D06348J		AF0119	POS 16	D06348P	W0051	ALL
D02960		B00030	0135/181/L013			ALL
D02962		B00031	0213/195/L063			ALL
D03780		M00901	P013-00/ /			ALL
W0585	C2	E1-1 TO E2-1 SHELF				
D05323P		AE0303	POS 17	D05323J	W0121	ALL
D05293P		AE0308	POS 04	D05293J	W0151	ALL
W0586	R2	CO-PLT AUX HTR,R WINDSHIELD WIPER & RAIN REPELLANT				
D04970J		AF0112	POS 01	D04970P	W0066	ALL
D06350J		AF0120	POS 12	D06350P	W0051	ALL
D04706J		AF0120	POS 23	D04706P	W0976	ALL
D02964		B00032	0135/177/R013			ALL
D02966		B00033	0176/190/R048			ALL
D03762		M00902	P014-00/ /			ALL
D03058		V00090	0195/170/R033			ALL
W0587	L*	STAB TRIM CONTROL-LEFT				
D06027J		AC1402	POS 19	D06027P	W0525	050-099, 155-199, 275-299
D04477J		AP1501	POS 26	D04477P	W1251	ALL
D00227		M00211	1726/280/L007			150-154
D00341		M00211	1726/280/L007			150-154
D02207		M01607	1726/280/L007			050-099, 155-199, 275-299
D02213		M01607	1726/280/L007			050-099, 155-199, 275-299
W0588	L2	LDG GR SENSORS,HYD SYS R QTY & TEMP,REMOTE HYD QTY SEL & SW				
D08066J		AC0702	POS 04	D08066P	W0612	ALL
D05530J		AC0702	POS 20	D05530P	W0442	ALL
D05904J		AC1402	POS 07	D05904P	W0030	ALL
D04934P		AE0218	POS 47	D04934J	W0188	ALL
D04936J		AE0305	POS 33	D04936P	W1084	ALL
D05544J		AE0305	POS 39	D05544P	W1092	ALL
D05288J		AE0306	POS 49	D05288P	W0014	ALL
D05212J		AE0306	POS 55	D05212P	W0014	ALL
D04300J		AL1002	POS 08	D04300P	W0928	ALL

MASTER BUNDLE LIST

D280T132

91-21-13

Section W0580

Page 2

Feb 06/2009



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0588	L2	LDG GR SENSORS, HYD SYS R QTY & TEMP, REMOTE HYD QTY SEL & SW (continued)				
D05516J		AL1004	POS 17	D05516P	W0920	ALL
D05358J		AL1004	POS 19	D05358P	W1210	ALL
D02220		N00029	1127/121/R056			ALL
D02218		S00341	1127/120/R060			ALL
W0589	R*	STAB TRIM CONTROL-RIGHT				
D06025J		AC1402	POS 20	D06025P	W0521	050-099, 155-199, 275-299
D04479J		AP1501	POS 24	D04479P	W1261	ALL
D00241		M00212	1726/280/R007			150-154
D00345		M00212	1726/280/R007			150-154
D02215		M01608	1726/280/R007			050-099, 155-199, 275-299
D02221		M01608	1726/280/R007			050-099, 155-199, 275-299



767-200/300 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0590	S2	AIR HYD PUMP CONTROL & INDICATION				
D04860P		AE0204	POS 06	D04860J	W0054	ALL
D04856P		AE0209	POS 09	D04856J	W0184	ALL
D05052P		AE0224	POS 07	D05052J	W0198	ALL
D04854P		AF0204	POS 85	D04854J	W0070	ALL
D05698J		AL1005	POS 08	D05698P	W0482	ALL
D10434		S00614	0212/201/R065			ALL
D10192		TS5072	0212/195/R080			ALL
W0591	L2	PITCH SERVO ACTR				
D04475J		AP1501	POS 05	D04475P	W0491	ALL
D00181		M00271	1795/230/L030			ALL
D01721		M01139	1815/268/L020			ALL
D02089		V00150	1702/288/L030			ALL
W0593	L2	RO SERVO ACTR L				
D04519J		AP1501	POS 04	D04519P	W0491	ALL
D00179		M00277	F046/ /RS			ALL
W0596	S2*	FUELING CONTROL & DEFUELING VALVES CATIA DESIGNED				
D04540J		AC0701	POS 25	D04540P	W0402	ALL
D04542J		AC0701	POS 32	D04542P	W0402	ALL
D08036P		AE0202	POS 03	D08036J	W1114	ALL
D04942P		AE0209	POS 03	D04942J	W0184	ALL
D04992P		AE0209	POS 15	D04992J	W0184	ALL
D07992P		AE0226	POS 02	D07992J	W1082	ALL
D05842J		AE0307	POS 08	D05842P	W0098	ALL
D04320J		AE0307	POS 09	D04320P	W0098	ALL
D04773J		AE0307	POS 104	D04773P	W0181	ALL
D05196J		AE0307	POS 35	D05196P	W0098	ALL
D05210J		AE0307	POS 79	D05210P	W1084	ALL
D04938P		AF0204	POS 81	D04938J	W0070	ALL
D04602J		AL1001	POS 07	D04602P	W0454	ALL
D06078J		AL1001	POS 16	D06078P	W0454	ALL
D05884J		AL1001	POS 17	D05884P	W0454	ALL
D06012J		AL1006	POS 06	D06012P	W1286	ALL
D04988J		AL1007	POS 07	D04988P	W1212	ALL
D00488		M00235	1161/137/L083			ALL
D01130		M00957	1153/173/L095			ALL
D00352		V00129	1180/146/L078			ALL

MASTER BUNDLE LIST

D280T132

91-21-13

Section W0590

Page 1

Aug 15/2007



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0597	C2	RO SERVO ACTR C				
D04523J		AP1501	POS 17	D04523P	W0501	ALL
D00187		M00278	F046/ /RS			ALL
W0598	S2*	OVER HEAT & FIRE DETECTION & FUEL QUANTITY INDICATION				
D06116J		AC0701	POS 12	D06116P	W0420	ALL
D05518J		AC0702	POS 16	D05518P	W0404	ALL
D06114J		AC0702	POS 23	D06114P	W0422	ALL
D08038P		AE0202	POS 09	D08038J	W1114	ALL
D05188P		AE0218	POS 07	D05188J	W0198	ALL
D07996P		AE0226	POS 06	D07996J	W1082	ALL
D04944J		AE0307	POS 36	D04944P	W0098	ALL
D05680J		AE0307	POS 44	D05680P	W0119	ALL
D04940P		AF0204	POS 84	D04940J	W0070	ALL
D05520J		AL1002	POS 07	D05520P	W0456	ALL
W0599	R2	RO SERVO ACTR R				
D04527J		AP1501	POS 08	D04527P	W0503	ALL
D00195		M00279	F046/ /RS			ALL
D02087		V00149	1725/275/R040			ALL

MASTER BUNDLE LIST

D280T132

91-21-13

Section W0590

Page 2 End

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0600	S2	ANTISKID AND OXYGEN PRESSURE INDICATION				
D04874J		AE0307	POS 53	D04874P	W1084	ALL
D04772P		AF0204	POS 74	D04772J	W0070	ALL
D00752		TS0120	0251/170/R060			ALL
W0602	L2	LANDING GEAR POSITION INDICATION & ANTISKID				
D05058J		AC0701	POS 06	D05058P	W0944	ALL
D04484J		AC0701	POS 17	D04484P	W0406	ALL
D05780P		AE0209	POS 43	D05780J	W0176	ALL
D04932P		AE0209	POS 46	D04932J	W0176	ALL
D04930J		AE0305	POS 03	D04930P	W1084	ALL
D05554J		AE0305	POS 06	D05554P	W1092	ALL
D06756J		AE0305	POS 34	D06756P	W0121	050-099, 150-199
D05294J		AE0306	POS 19	D05294P	W0014	ALL
D05364J		AE0306	POS 23	D05364P	W0014	ALL
D06806J		AE0306	POS 62	D06806P	W0183	275-299
D04302J		AL1001	POS 04	D04302P	W0840	ALL
D04598J		AL1003	POS 03	D04598P	W0450	ALL
D05044J		AL1003	POS 04	D05044P	W0626	ALL
D06340J		AL1003	POS 05	D06340P	W0840	ALL
D08374J		AL1003	POS 07	D08374P	W0450	050-099, 155-199, 276-299
D08268J		AL1003	POS 14	D08268P	W0690	ALL
D05556J		AL1003	POS 15	D05556P	W0922	ALL
D02112		T00137	0763/150/L075			ALL
W0603	R2	PITCH SERVO ACTR				
D04473J		AP1501	POS 09	D04473P	W0503	ALL
D00197		M00273	1785/230/R030			ALL
W0606	S2*	FIRE DET & LOWER LOBE CARGO SMOKE DET. CATIA DESIGNED				
D06882P				D06882J	W0642	050-099
D06884P				D06884J	W0644	050-099
D06888P				D06888J	W0548	050-099, 155-199, 275-299
D06888P				D06888J		150-154
D06896P				D06896J		150-154
D06896P				D06896J	W0648	155-199, 275-299
D06898P				D06898J	W0650	155-199, 275-299
D06944P				D06944J	W0664	ALL

MASTER BUNDLE LIST

D280T132

91-21-13

Section W0600

Page 1

Jun 28/2006



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0606	S2*	FIRE DET & LOWER LOBE CARGO SMOKE DET. CATIA DESIGNED (continued)				
D06946P				D06946J	W0672	ALL
D06948P				D06948J	W0692	ALL
D06950P				D06950J	W0694	ALL
D05214P		AC0506	POS 09	D05214J	W1066	ALL
D05522J		AC0702	POS 05	D05522P	W0426	ALL
D05054J		AC1402	POS 06	D05054P	W0020	ALL
D06110P		AC1402	POS 17	D06110J	W1296	ALL
D04948P		AE0218	POS 06	D04948J	W0198	ALL
D07994P		AE0226	POS 01	D07994J	W1082	ALL
D06594J		AE0322	POS 37	D06594P	W0135	ALL
D04952P		AF0204	POS 78	D04952J	W0070	ALL
D04852P		AF0204	POS 91	D04852J	W0070	ALL
D04950J		AL0202	POS 03	D04950P	W0678	ALL
D04652J		AL1006	POS 03	D04652P	W0462	ALL
D03792		K00420	0280/177/R027			ALL
D01136		M00716	0350/165/L066			ALL
D01140		M00718	1405/150/L070			ALL
D10102		M10443	P008-00/ /			ALL
D00866		M10444	P008-00/ /			ALL
D10106		M10445	P008-00/ /			ALL
D00862		S00038	P008-00/ /			ALL
D00846		S00039	P008-00/ /			ALL
D01444		S00454	0351/173/L070			ALL
D01446		S00455	1406/158/L070			ALL
I D10864		S00661	0654+59/165/R079			ALL
I D10866		S00662	0675/186/R080			ALL
D01512		TS0227	1198/279/L068			ALL
D01510		TS0228	/ /			ALL
W0608	L2	WDO HTRS,PROBE HTRS				
D04338P		AE0209	POS 21	D04338J	W0176	ALL
D04968J		AF0111	POS 02	D04968P	W0062	ALL

MASTER BUNDLE LIST

D280T132



767-200/300 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0610	R2	WING & ENGINE/NOSE COWL THERMAL ANTI-ICE				
D04340P		AE0218	POS 05	D04340J	W0192	ALL
D04972J		AF0112	POS 02	D04972P	W0066	ALL
W0611	C2	PITCH SERVO ACTR				
D04481J		AP1501	POS 29	D04481P	W0501	ALL
D00189		M00272	1790/230/R012			ALL
W0612	N2	AIR COND RIGHT PACK TEMP CONTROL				
D08048P		AC0702	POS 02	D08048J	W0580	ALL
D05056P		AC0702	POS 03	D05056J	W0738	ALL
D08066P		AC0702	POS 04	D08066J	W0588	ALL
D00728		M00321	0935/115/R043			ALL
D00718		M00323	0836/121/R032			ALL
D01460		TS0219	/ /			ALL
D10138		TS5134	0879/125/R059			ALL
D10140		TS5135	0879/124/R044			ALL
D00722		V00019	0875/118/R032			ALL
D01282		V00045	0946/127/R048			ALL
W0614	S2*	FIRE DET-APU LOOP 1 & L WW,BULK & AFT CAR.				
D06880P				D06880J	W0640	050-099
D06886P				D06886J	W0546	050-099, 155-199, 275-299
D06886P				D06886J		150-154
D06894P				D06894J		150-154
D06894P				D06894J	W0646	155-199, 275-299
D04546J		AC0701	POS 27	D04546P	W0424	ALL
D06112P		AC1402	POS 18	D06112J	W1298	ALL
D05270P		AE0218	POS 12	D05270J	W0198	ALL
D07990P		AE0226	POS 04	D07990J	W1082	ALL
D05042P		AF0204	POS 83	D05042J	W0070	ALL
D05700J		AL1005	POS 03	D05700P	W0484	ALL
D01456		M00324	0349/179/L070			ALL
D01458		M00326	1405/163/L070			ALL
D10100		M10443	P008-00/ /			ALL
D00864		M10444	P008-00/ /			ALL
D10104		M10445	P008-00/ /			ALL
D00836		S00037	P008-00/ /			ALL
D10656		S00633	0674/168/R068			ALL

MASTER BUNDLE LIST

D280T132

91-21-13

Section W0610

Page 1

Aug 05/2009



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0615	L2	ADF-L,SHELF TO CONT PNL CATIA DESIGNED				
D04575J		AC0604	POS 03	D04575P	W0165	ALL
D01629		M01046	P008-00/ /			ALL
W0616	R1	FWD AND AFT CARGO HANDLING,DOORS,LIGHTS & SERVICE OUTLETS				
D05614P		AC0506	POS 04	D05614J	W1066	ALL
D05616P		AC1304	POS 04	D05616J	W1068	ALL
D04928P		AE0203	POS 15	D04928J	W0142	ALL
D04926P		AE0204	POS 05	D04926J	W0054	ALL
D05618J		AE0317	POS 05	D05618P	W1092	ALL
W0617	R2	ADF-R,SHELF TO CONT PANEL				
D04577J		AC0604	POS 07	D04577P	W0175	ALL
D01631		M01046	P008-00/ /			ALL
W0619	S2	YAW DAMPER L,SHELF TO DISC BKT AP1103				
D04565J		AE0319	POS 16	D04565P	W1090	ALL
D04783P		AP1501	POS 03	D04783J	W0539	ALL

MASTER BUNDLE LIST

D280T132

91-21-13

Section W0610

Page 2 End

Aug 15/2007



767-200/300 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0620	R2	R EDHP SOV,HYD IND				
D05800P		AE0203	POS 08	D05800J	W0142	ALL
D04284P		AE0218	POS 26	D04284J	W0192	ALL
D04286P		AF0204	POS 54	D04286J	W0066	ALL
D04286		POS 54				051-099
W0622	L1	WSHLD HTR,				
D05870J				D05870P	W1156	ALL
D05456P		AE0209	POS 19	D05456J	W0182	ALL
D04288P		AE0209	POS 25	D04288J	W0182	ALL
D08040J		AE0220	POS 13	D08040P	W0082	ALL
D04292J		AE0305	POS 36	D04292P	W1098	ALL
D05344J		AE0305	POS 37	D05344P	W1098	ALL
D05064P		AF0204	POS 38	D05064J	W0062	ALL
D01010		B00026	0201/212/			ALL
D01656		B00035	0154/268/L020			ALL
D01658		B00035	0154/268/L020			ALL
D01660		B00035	0154/268/L020			ALL
D01898		B00035	0154/268/L020			ALL
D01900		B00035	0154/268/L020			ALL
D00892		B00040	//			ALL
D01662		B00040	//			ALL
D01908		B00040	//			ALL
D01910		B00040	//			ALL
D00910		M00154	0187/223/L021			ALL
W0623	L2	AUD-ADF L SHELF TO SHELF				
D04579J		AC0604	POS 04	D04579P	W0165	ALL
D04581J		AE0306	POS 59	D04581P	W0149	ALL
W0624	R1	WSHLD HTR,				
D05872P			0196/264/L043	D05872J	W1158	ALL
D05744P		AE0203	POS 17	D05744J	W0142	ALL
D04296P		AE0218	POS 44	D04296J	W1118	ALL
D08052J		AE0220	POS 01	D08052P	W0084	ALL
D05192P		AE0223	POS 02	D05192J	W0180	ALL
D05932J		AE0320	POS 33	D05932P	W1120	ALL
D04294J		AE0320	POS 34	D04294P	W1120	ALL
D04768J		AE0320	POS 45	D04768P	W0016	ALL
D05062P		AF0204	POS 70	D05062J	W0066	ALL

MASTER BUNDLE LIST

D280T132

91-21-13

Section W0620

Page 1

Jun 28/2006



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0624	R1	WSHLD HTR, (continued)				
D05356P		AF0204	POS 71	D05356J	W0066	ALL
D00574		B00028	0201/212/			ALL
D01012		B00029	0201/182/			ALL
D00872		B00037	//			ALL
D01672		B00037	//			ALL
D01922		B00037	//			ALL
D01924		B00037	//			ALL
D01666		B00038	0154/ /			ALL
D01668		B00038	0154/ /			ALL
D01670		B00038	0154/ /			ALL
D01912		B00038	0154/ /			ALL
D01914		B00038	0154/ /			ALL
D00912		M00155	0187/223/R021			ALL
W0626	L2	L WW FIRE DET & BODY DUCT LEAK DET				
D05044P		AL1003	POS 04	D05044J	W0602	ALL
D00942		TS0202	//			ALL
D00944		TS0203	//			ALL
D01506		TS0220	//			ALL
W0627	N2	VOICE RDR, SHELF TO CONTROL PANEL				
D04599J		AE0322	POS 50	D04599P	W0139	ALL
D00731		M00050	P005-00/ /			ALL
W0628	R2	LANDING GEAR POSITION INDICATION-LEFT GEAR & ANTISKID				
D08046J		AC0701	POS 08	D08046P	W0938	ALL
D04536J		AC0701	POS 20	D04536P	W0440	ALL
D05650P		AE0203	POS 04	D05650J	W0142	ALL
D04962P		AE0218	POS 18	D04962J	W0192	ALL
D06808J		AE0307	POS 78	D06808P	W0183	275-299
D05350J		AE0317	POS 01	D05350P	W1084	ALL
D05566J		AE0317	POS 06	D05566P	W1100	ALL
D05292J		AE0320	POS 19	D05292P	W0016	ALL
D04318J		AL1001	POS 09	D04318P	W0690	ALL
D05190J		AL1002	POS 04	D05190P	W0864	ALL
D04654J		AL1003	POS 10	D04654P	W0930	ALL
D05608J		AL1004	POS 03	D05608P	W0932	ALL
D06342J		AL1004	POS 08	D06342P	W0864	ALL
D08272J		AL1004	POS 16	D08272P	W0928	ALL

MASTER BUNDLE LIST

D280T132

91-21-13

Section W0620

Page 2

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity	
W0628	R2	LANDING GEAR POSITION INDICATION-LEFT GEAR & ANTISKID (continued)					
D05586J		AL1005	POS 10	D05586P	W1214	ALL	
D05418J		AL1008	POS 04	D05418P	W0774	ALL	
W0629	N2	CAPT AUD SELECT PNL TO P15,CONTROL COLUMN,INTPH SPKR AND MIC					
D00861			0172/207/L032			ALL	
D00261		B00001	0159/234/L036			ALL	
D00257		M00070	P008-00/ /			ALL	
D01353		M00889	P015-00/ /			ALL	
D01373		M00933	0164/220/L033			ALL	

MASTER BUNDLE LIST

D280T132

91-21-13

Section W0620

Page 3 End

Mar 09/2006



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0631	N2	F/O AUD SELECT PNL TO P16,CONTROL COLUMN,INTPH SPKR AND MIC				
D00863			0172/207/R032			ALL
D00263		B00002	0159/234/0036			ALL
D00259		M00071	P008-00/ /			ALL
D01355		M00890	P016-00/ /			ALL
D01359		M00892	P063-00/ /			ALL
D01375		M00934	0164/220/R033			ALL
W0632	L2	FWD FLDK INSTR PNL,UTIL LTS,WARN & CAUTION LTS				
D06164P		AE0222	POS 05	D06164J	W0148	ALL
D06166P		AE0222	POS 06	D06166J	W0150	ALL
D04560J		AF0120	POS 01	D04560P	W0011	ALL
D05395J		AF0120	POS 02	D05395P	W0011	ALL
D05282P		AF0204	POS 28	D05282J	W0062	ALL
D04990P		AF0204	POS 29	D04990J	W0062	ALL
D03734		M00794	0188/206/L046			ALL
D03736		M00795	P008-00/ /			ALL
D03756		M00796	0188/206/L042			ALL
D10204		M01107	P008-00/ /			ALL
D02772		P029-00				ALL
D02774		P029-00				ALL
D03828		TS0175	0253/185/L070			ALL
D03830		TS0176	0195/271/L024			ALL
W0633	L2	HF L,SHELF TO DISC BKT AP1103				
D04787J		AE0306	POS 61	D04787P	W0163	ALL
D04825P		AP1501	POS 28	D04825J	W0777	ALL
W0634	S2	FWD FLDK INSTR PNL LTS,WARN & CAUTION LTS				
D06198P				D06198J	W1306	ALL
D06170P		AE0222	POS 03	D06170J	W0158	ALL
D06168P		AE0222	POS 04	D06168J	W0156	ALL
D04556J		AF0120	POS 05	D04556P	W0051	ALL
D05347J		AF0120	POS 06	D05347P	W0051	ALL
D04986P		AF0204	POS 87	D04986J	W0070	ALL
D05792P		AF0204	POS 88	D05792J	W0070	ALL
D05784P		AF0204	POS 89	D05784J	W0070	ALL
D02780		P029-00				ALL
D02782		P029-00				ALL

MASTER BUNDLE LIST

D280T132

91-21-13

Section W0630

Page 1

Aug 05/2009



767-200/300 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0635	R2	HF R,SHELF TO TAIL DISC				
D04789J		AE0320	POS 27	D04789P	W0173	ALL
D04827P		AP1501	POS 21	D04827J	W0775	ALL
W0636	N2	FLT INST PNL,STBY MAGN COMPASS-PNL LT				
D06366P			0157/250/0000	D06366J	W0051	ALL
D06368J			0157/250/0000	D06368P	W0051	ALL
D00642		N00099	0167/257/0000			ALL
W0638	R2	FWD FLDK INSTR R PNL LTS,WARN & CAUTION LTS				
D05393J		AF0120	POS 17	D05393P	W0031	ALL
D05399J		AF0120	POS 24	D05399P	W0031	ALL
D04994P		AF0204	POS 45	D04994J	W0066	ALL
D06172P		AF0232	POS 25	D06172J	W0152	ALL
D06174P		AF0232	POS 27	D06174J	W0154	ALL
D02776		P029-00				ALL
D02778		P029-00				ALL
D03838		S00021	0271/185/L070			ALL
D02608		TS0184	0264/185/L070			ALL
W0639	N2	E2-5 TO MID ATTENDANTS CEILING DISC.				
D04615J		AE0307	POS 46	D04615P	W0149	ALL
D04669J		AP0703	POS 01	D04669P	W0041	275-299
D04669J		AP0802E	POS 01	D04669P	W0041	050-099
D04669J		AP0901	POS 01	D04669P	W0041	150-199

MASTER BUNDLE LIST

D280T132

91-21-13

Section W0630

Page 2 End

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0640	S2*	CARGO COMPARTMENT FIRE EXTINGUISHING BOTTLE 1				
D06880J				D06880P	W0614	050-099
D01440		B00019	0666/174/R076			050-099
D01442		B00019	0666/174/R076			050-099
D01448		B00019	0666/174/R076			050-099
W0642	S2*	CARGO COMPARTMENT FIRE EXTINGUISHING BOTTLE 2				
D06882J				D06882P	W0606	050-099
I D01450		B00020	0654+55/167/R073			050-099
I D01452		B00020	0654+55/167/R073			050-099
I D01454		B00020	0654+55/167/R073			050-099
W0644	S2*	CARGO COMPARTMENT FIRE EXTINGUISHING BOTTLE 2A				
D06884J				D06884P	W0606	050-099
I D10680		B00231	0654+33/163/R076			050-099
I D10682		B00231	0654+33/163/R076			050-099
I D10684		B00231	0654+33/163/R076			050-099
W0645	N2	E2-5 TO P21 FWD LEFT ATTENDANTS PANEL				
D06103J				D06103P	W0069	275-299
D06730			0360/280/L 60			050-099, 150-199
D00857			0360/280/R 60			050-099, 150-199
D04493J		AC0608	POS 06	D04493P		050-099, 150-154, 162-164
D04625J		AE0307	POS 20	D04625P	W0149	ALL
D05421J		AE0307	POS 71	D05421P	W0149	ALL
D06069J		AP0202	POS 01	D06069P	W0047	275
D06069J		AP0205	POS 02	D06069P	W0047	276-278
D00857		AP0301B	POS 01			275-299
D06031J		AP0307	POS 05	D06031P	W1447	050-099, 150-199
D00859		B00061	MULTI/ /			ALL
D00533		M00642	0305/195/R025			ALL
D01863		M01306	0650/150/R066			ALL
D01869		M01307	0627/160/R070			ALL
D01879		M01308	0298/147/R021			ALL
D00509		M01319	0310/195/R035			ALL
D00523		M01320	0320/195/R035			ALL
D00545		M01321	0315/195/R025			ALL
D02519		M01710	0298/147/R021			050-099, 150-199
D00837		P021-00	0284/261/L053			ALL

MASTER BUNDLE LIST

D280T132

91-21-13

Section W0640

Page 1

Aug 05/2009



767-200/300 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0646	S2	CARGO COMPARTMENT FIRE EXTINGUISHING BOTTLE 1				
D06894J				D06894P	W0614	155-199, 275-299
D01440		B00019	0666/174/R076			155-199, 275-299
D01442		B00019	0666/174/R076			155-199, 275-299
D01448		B00019	0666/174/R076			155-199, 275-299
W0647	N2	E2-5 TO AFT ATTENDANTS HANDSETS				
D04629J		AE0307	POS 72	D04629P	W0149	ALL
D00853		B00061	MULTI/ /			ALL
D00855		B00061	MULTI/ /			ALL
W0648	S2*	CARGO COMPARTMENT FIRE EXTINGUISHING BOTTLE 2				
D06896J				D06896P	W0606	155-199, 275-299
I D01450		B00020	0654+55/167/R073			155-199, 275-299
I D01452		B00020	0654+55/167/R073			155-199, 275-299
I D01454		B00020	0654+55/167/R073			155-199, 275-299
W0649	N2	E2-5 SHELF TO VOICE RECORDER CATIA DESIGNED				
D04633J		AE0306	POS 26	D04633P	W0139	ALL
D00273		M00201	SHELF/E07/00			ALL

MASTER BUNDLE LIST

D280T132

91-21-13

Section W0640

Page 2 End

Aug 05/2009



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0650	S2*	CARGO COMPARTMENT FIRE EXTINGUISHING BOTTLE 2A				
D06898J				D06898P	W0606	155-199, 275-299
D10680		B00231	0654+33/163/R076			155-199, 275-299
D10682		B00231	0654+33/163/R076			155-199, 275-299
D10684		B00231	0654+33/163/R076			155-199, 275-299
W0654	L2	AIR COND FEEDER				
D04698J		AC0701	POS 02	D04698P	W0978	ALL
D05060P		AE0209	POS 32	D05060J	W0176	ALL
D04912J		AE0305	POS 09	D04912P	W1092	ALL
D04960J		AE0306	POS 51	D04960P	W0014	ALL
D05186P		AF0204	POS 33	D05186J	W0062	ALL
W0655	N2	CONTRAHELICAL CABLE-CAPT AUDIO SELECT PANEL				
D04601J		AE0322	POS 51	D04601P	W0139	ALL
D00253		M00070	P008-00/ /			ALL
W0656	R2*	FUELING, HYDRAULICS, POTABLE WATER FEEDER				
D07040J		AC0702	POS 15	D07040P	W0408	ALL
D05598J		AC0702	POS 21	D05598P	W0418	ALL
D05528J		AC0702	POS 25	D05528P	W0408	ALL
D05840P		AE0203	POS 12	D05840J	W0142	ALL
D04346P		AE0218	POS 24	D04346J	W0192	ALL
D05068P		AE0218	POS 28	D05068J	W0192	ALL
D07162J		AE0317	POS 15	D07162P	W0117	ALL
D05066J		AE0317	POS 33	D05066P	W1084	ALL
D04916J		AE0320	POS 17	D04916P	W0016	ALL
D08614J		AE0320	POS 23	D08614P	W0016	ALL
D04278J		AL1002	POS 05	D04278P	W0452	ALL
D08376J		AL1002	POS 14	D08376P	W0452	050-099, 155-199, 276-299
D04954J		AL1004	POS 01	D04954P	W0964	ALL
D04770J		AL1006	POS 10	D04770P	W1206	ALL
D06280J		AL1008	POS 06	D06280P	W1308	ALL
D02114		T00138	0762/150/R074			ALL
W0657	N2	CONTRAHELICAL CABLE-FIRST OFFICER AUDIO SELECT PANEL				
D04603J		AE0322	POS 47	D04603P	W0139	ALL
D00255		M00071	P008-00/ /			ALL

MASTER BUNDLE LIST

D280T132

91-21-13

Section W0650

Page 1

Aug 05/2009



767-200/300 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0658	S2	RAT. CONT & INDICATION HYD SYS C				
D04958P		AE0218	POS 01	D04958J	W0198	ALL
D04316J		AL1008	POS 03	D04316P	W0680	ALL
D02354		M00614	1155/129/R075			ALL
D01128		M00958	1153/173/R095			ALL
W0659	N2	CONTRAHELICAL CABLE-FIRST OBSERVER AUDIO SELECT PANEL				
D04607J		AE0322	POS 48	D04607P	W0139	ALL
D00549		M00098	P061-00/ /			ALL

MASTER BUNDLE LIST

D280T132

91-21-13

Section W0650

Page 2 End

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0660	R1	FWD CARGO DOOR AND LIGHTS CATIA DESIGNED				
D04306J			0480/190/R080	D04306P	W0958	ALL
D04304P		AC0506	POS 08	D04304J	W1066	ALL
W0662	R1	AFT CARGO DOOR AND LIGHTS				
D04314P				D04314J	W0962	ALL
D04312P		AC1304	POS 08	D04312J	W1068	ALL
D01998		M00631	1300/200/R089			ALL
W0664	S2*	FWD CARGO COMPARTMENT SMOKE DET 2				
D06944J				D06944P	W0606	ALL
D01462		M00325	0352/179/L070			ALL
W0665	S2	E2-5 TO FWD,MID,AND AFT ATTENDANTS SPEAKER AND CHIMES				
D05353J				D05353P	W0120	050-099
D06055J				D06055P	W1115	277-299
D06057J				D06057P	W1113	277-299
D05327J			0354/284/L040	D05327P	W0104	150-157, 275-299
D05329J			0354/284/R040	D05329P	W0102	150-157, 275-299
D06057J			0888/295/L014	D06057P	W1113	050-099, 150-154, 156, 162-199
D06055J			0888/295/R014	D06055P	W1115	050-099, 150-154, 156, 162-199
D06061J			1197+52/295/R014	D06061P	W1141	050-099, 150-199
D06059J			1197/295/L014	D06059P	W1117	050-099, 150-199
D04121J			1510/283/L030	D04121P	W1123	050-099, 150-199
D04123J			1510/283/R030	D04123P	W1125	050-099, 150-199
D06053J			639/295/L016	D06053P	W1111	050-099, 150-199
D06051J			639/295/R016	D06051P	W1109	050-099, 150-199
D04647J		AE0307	POS 48	D04647P	W0149	ALL
D04397J		AP0301B		D04397P	W0102	050-099
D04397J		AP0301B	POS 01	D04397P	W0102	150-199
D06033J		AP0307	POS 01	D06033P	W1449	050-099, 150-199
D07090P		AP0604	POS 02	D07090J		280-299
D05331J		AP0703	POS 03	D05331P	W0110	275-299
D05331J		AP0802E	POS 02	D05331P	W0110	050-099
D06482J		AP0901	POS 05	D06482P	W0122	150-199
D05335J		AP1401	POS 01	D05335P	W0106	275-299
D05337J		AP1402	POS 01	D05337P	W0108	275-299
D07092J		AP1404	POS 03	D07092P		280-299

MASTER BUNDLE LIST

D280T132

91-21-13

Section W0660

Page 1

Aug 05/2009



767-200/300 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0668	N2	MAIN LANDING GEAR (LOWER) LEFT - BRAKE TEMP , TPIS				
D05022P			J00003/LWR/L GR	D05022J	W0674	ALL
D13382		M1624				050-099, 155-199, 275-299
D13384		M1625				050-099, 155-199, 275-299
D02016		TS0084	WHEEL/05/			ALL
D02018		TS0085	WHEEL/06/			ALL
D01714		TS0093	WHEEL/05/L GR			ALL
D01718		TS0094	WHEEL/06/L GR			ALL
W0669	L2	E2-3 TO LW BODY DISC (AIDS-LEFT ENGINE)				
D06300J		AC0701	POS 10	D06300P		150-199, 275-299
D05517J		AE0306	POS 42	D05517P		150-199, 275-299

MASTER BUNDLE LIST

D280T132

91-21-13

Section W0660

Page 2 End

Aug 15/2007



767-200/300 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0670	N2	MAIN LANDING GEAR (UPPER) LEFT - BRAKE TEMP				
D01746J				D01746P		ALL
D01748J				D01748P		ALL
D05026J			J00001/UPR/L GR	D05026P	W0840	ALL
D05028J			J00003/LWR/L GR	D05028P	W0676	ALL
W0671	R2	E2-3 TO RW BODY DISC (AIDS-RIGHT ENGINE)				
D06298J		AC0702	POS 10	D06298P		150-199, 275-299
D05519J		AE0320	POS 44	D05519P		150-199, 275-299
W0672	S2*	AFT CARGO COMPARTMENT SMOKE DET 2				
D06946J				D06946P	W0606	ALL
D01464		M00327	1409/163/L070			ALL
W0674	N2	MAIN LANDING GEAR (UPPER) LEFT - BRAKE TEMP				
D01750J				D01750P		ALL
D01752J				D01752P		ALL
D05024J			J00001/UPR/L GR	D05024P	W0690	ALL
D05022J			J00003/LWR/L GR	D05022P	W0668	ALL
W0675	R2	HF R,SHELF TO CONTROL PANEL				
D04657J		AE0322	POS 60	D04657P	W0173	ALL
D00737		M00083	P005-00/ /			ALL
D02695		M1798				156-157, 166-199, 277-299
W0676	N2	MAIN LANDING GEAR (LOWER) LEFT - BRAKE TEMP , TPIS				
D05028P			J00003/LWR/L GR	D05028J	W0670	ALL
D13390		M1628				050-099, 155-199, 275-299
D13392		M1629				050-099, 155-199, 275-299
D02012		TS0082	WHEEL/01/			ALL
D02014		TS0083	WHEEL/02/			ALL
D01706		TS0091	WHEEL/01/L GR			ALL
D01710		TS0092	WHEEL/02/L GR			ALL

MASTER BUNDLE LIST

D280T132

91-21-13

Section W0670

Page 1

Aug 15/2007



767-200/300 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0678	S2	NOSE LANDING GEAR - (APU,LDNG LTS,PROX SNSR),P23/T-LINK/TPIS/TAXI LT				
D06106P			278/72/0	D06106J	W1294	050-099, 155-199, 275-299
D01754J			NOSE/ /GEAR	D01754P		ALL
D01756J			NOSE/ /GEAR	D01756P		ALL
D05936J		AL0201	POS 01	D05936P	W1132	050-099, 155-199, 275-299
D05936P		AL0201	POS 01	D05936J	W1132	150-154
D05938J		AL0201	POS 02	D05938P	W1130	050-099, 155-199, 275-299
D05938P		AL0201	POS 02	D05938J	W1130	150-154
D05850P		AL0202	POS 02	D05850J	W0926	ALL
D04950P		AL0202	POS 03	D04950J	W0606	ALL
D05040P		AL0202	POS 04	D05040J	W0924	ALL

MASTER BUNDLE LIST

D280T132

91-21-13

Section W0670

Page 2 End

Aug 15/2007



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0680	S2	R WW ADP HYD PRESS. & CONT PRESS. SW,RAT. PRESS. SW & TACH				
D04316P		AL1008	POS 03	D04316J	W0658	ALL
D02356		N00072	1045/130/R005			ALL
D00478		S00035	1002/150/R006			ALL
D02358		S00367	1055/138/R045			ALL
W0682	N2	MAIN LANDING GEAR (UPPER) RIGHT - BRAKE TEMP,TPIS				
D02208J				D02208P		ALL
D02210J				D02210P		ALL
D05030J			J00002/UPR/R GR	D05030P	W0864	ALL
D05032J			J00004/LWR/R GR	D05032P	W0688	ALL
W0683	L2	HF L,SHELF TO CONTROL PANEL				
D04653J		AE0306	POS 31	D04653P	W0163	ALL
D00733		M00082	P005-00/ /			ALL
W0684	N2	MAIN LANDING GEAR (UPPER) RIGHT - BRAKE TEMP				
D02204J				D02204P		ALL
D02206J				D02206P		ALL
D05034J			J00002/UPR/R GR	D05034P	W0928	ALL
D05036J			J00004/LWR/R GR	D05036P	W0686	ALL
W0685	L2	ATC-L TRANSPONDER,SHELF TO CONT PNL				
D04695J		AE0306	POS 03	D04695P	W0133	ALL
D00303		M00081	P008-00/ /			ALL
W0686	N2	MAIN LANDING GEAR (LOWER) RIGHT - BRAKE TEMP				
D05036P			J00004/LWR/R GR	D05036J	W0684	ALL
D13386		M1626				050-099, 155-199, 275-299
D13388		M1627				050-099, 155-199, 275-299
D02020		TS0086	WHEEL/03/			ALL
D02022		TS0087	WHEEL/04/			ALL
D01708		TS0095	WHEEL/03/R GR			ALL
D01712		TS0096	WHEEL/04/R GR			ALL
W0687	R2	ATC-R TRANSPONDER,SHELF TO CONT PNL				
D04697J		AE0322	POS 32	D04697P	W0145	ALL

MASTER BUNDLE LIST

D280T132

91-21-13

Section W0680

Page 1

Aug 15/2007



767-200/300 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0687	R2	ATC-R TRANSPONDER,SHELF TO CONT PNL (continued)				
D00305		M00081	P008-00/ /			ALL
W0688	N2	MAIN LANDING GEAR (LOWER) RIGHT- BRAKE TEMP,TPIS				
D05032P D13378		M1622	J00004/LWR/R GR	D05032J	W0682	ALL 050-099, 155-199, 275-299
D13380		M1623				050-099, 155-199, 275-299
D23140		S10598	1046.5/53/183			ALL
D02024		TS0088	WHEEL/07/			ALL
D02026		TS0089	WHEEL/08/			ALL
D01716		TS0097	WHEEL/07/R GR			ALL
D01720		TS0098	WHEEL/08/R GR			ALL
W0689	L2	E2-5 TO P36 & P33				
D05191P		AE0207	POS 03	D05191J	W0144	ALL
D05193P		AE0207	POS 04	D05193J	W0144	ALL
D04709P		AE0209	POS 45	D04709J	W0176	ALL
D05029J		AE0306	POS 25	D05029P	W0139	ALL

MASTER BUNDLE LIST

D280T132

91-21-13

Section W0680

Page 2 End

Aug 15/2007



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0690	N2	LEFT MAIN GEAR UPPER J-BOX-SYS 2				
D05024P			J00001/UPR/L GR	D05024J	W0674	ALL
D04318P		AL1001	POS 09	D04318J	W0628	ALL
D08268P		AL1003	POS 14	D08268J	W0602	ALL
W0691	N2	E2-3 TO P61 RIGHT SIDE PNL				
D06223J		AE0322	POS 12	D06223P	W0135	ALL
D04725J		AE0322	POS 31	D04725P	W0135	ALL
D06225P		AF0204	POS 92	D06225J	W0065	ALL
D04707P		AF0204	POS 93	D04707J	W0065	ALL
W0692	S2*	FWD CARGO COMPARTMENTSMOKE DET AIR FLOW BLOWER 2				
D06948J				D06948P	W0606	ALL
D01138		M00717	0353/164/L066			ALL
W0693	N2	E2-3 TO LEFT MAIN W/W AREA				
D04729J		AE0307	POS 06	D04729P	W0135	ALL
D04727J		AL1003	POS 17	D04727P	W0533	ALL
W0694	S2*	AFT CARGO COMPARTMENT SMOKE DET AIR FLOW BLOWER 2				
D06950J				D06950P	W0606	ALL
D01142		M00719	1409/150/L070			ALL
W0695	N2	E2-3 TO POSITION XDCR				
D04731J		AE0307	POS 04	D04731P	W0135	ALL
D01685		TS0353	0178/202/L016			ALL
D01687		TS0354	0213/203/L017			ALL
D01689		TS0355	0191/192/L028			ALL
D01635		TS0356	0324/197/L043			ALL
W0697	L2	TMC,STAB. & FLAP POS MODULE,P50 TO SHELF				
D05277P		AE0202	POS 06	D05277J	W1078	ALL
D04367J		AE0319	POS 32	D04367P	W0105	ALL

MASTER BUNDLE LIST

D280T132

91-21-13

Section W0690

Page 1 End

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0700	N2	FWD CARGO LOADING CONTROL (P24)				
D05216P		AC0506	POS 06	D05216J	W1066	ALL
D00820		M00844	P024-00/ /			ALL
D00818		S00326	P024-00/ /			ALL
W0702	N2	FWD CARGO GUIDE ACTUATORS AND DOOR STOPS				
D05218P		AC0506	POS 02	D05218J	W1066	ALL
D01966		M01024	0485/124/R025			ALL
D01964		M01025	0480/127/R004			ALL
D01962		M01026	0485/124/L027			ALL
D01972		M01027	0550/124/R019			ALL
D01970		M01028	0541/122/R002			ALL
D01968		M01029	0541/120/L034			ALL
D01974		M01030	0504/124/0000			ALL
D01976		M01031	0530/124/0000			ALL
D01978		M01032	0504/124/R014			ALL
D01980		M01033	0530/124/R014			ALL
D02314		M01034	0505/120/R048			ALL
D02316		M01035				ALL
D00638		M01036	0569/122/R044			ALL
D00690		M01037				ALL
W0704	N2	FWD CARGO POWER DRIVE UNITS (PDU)				
D05222P		AC0506	POS 01	D05222J	W1066	ALL
D05224P		AC0506	POS 03	D05224J	W1066	ALL
D05220P		AC0506	POS 05	D05220J	W1066	ALL
D01212		M00347	0398/124/L029			ALL
D01214		M00348	0398/124/R029			ALL
D01222		M01004	0474/124/R029			ALL
D01220		M01005	0474/124/L029			150-199, 275-299
D01260		M01005	0474/124/L029			050-099
D01230		M01006	0502/124/R029			150-199, 275-299
D01248		M01006	0502/124/R029			050-099
D01228		M01007	0502/124/L029			150-199, 275-299
D01246		M01007	0502/124/L029			050-099
D01230		M01008	0517/124/R036			050-099
D01234		M01008	0517/124/R036			150-199, 275-299
D01220		M01009	0517/124/R009			050-099
D01226		M01009	0517/124/R009			150-199, 275-299
D01246		M01010	0517/124/L020			150-199, 275-299

MASTER BUNDLE LIST

D280T132

91-21-13

Section W0700

Page 1

Aug 05/2009



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0704	N2	FWD CARGO POWER DRIVE UNITS (PDU) (continued)				
D01274		M01010	0517/124/L020			050-099
D01244		M01011	0530/124/R029			050-099
D01248		M01011	0530/124/R029			150-199, 275-299
D01224		M01012	0530/124/L029			050-099
D11096		M01012	0530/124/L029			150-199, 275-299
D01240		M01013	0558/124/R029			050-099
D01252		M01013	0558/124/R029			150-199, 275-299
D01238		M01014	0558/124/L029			050-099
D01250		M01014	0558/124/L029			150-199, 275-299
D01236		M01015	0579/124/R036			050-099
D01224		M01016	0579/124/R009			150-199, 275-299
D01228		M01016	0579/124/R009			050-099
D01232		M01017	0579/124/L020			ALL
D01234		M01018	0596/124/R029			050-099
D01240		M01018	0596/124/R029			150-199, 275-299
D01238		M01019	0596/124/L029			150-199, 275-299
D01280		M01019	0596/124/L029			050-099
D01226		M01020	0641/124/R029			050-099
D01236		M01020	0641/124/R029			150-199, 275-299
D01242		M01021	0641/124/L029			050-099
D11640		M01021	0641/124/L029			150-199, 275-299
D01252		M01022	0683/124/R029			050-099
D01250		M01023	0683/124/L029			050-099
D01218		M01039	0442/124/R029			ALL
D01216		M01040	0442/124/L029			050-099
D11598		M01040	0442/124/L029			150-199, 275-299
D11098		M01361	0654+033/124/R029			150-199, 275-299
D11638		M01362	0654+33/124/L029			150-199, 275-299
D11094		M01363 FWD				150-199, 275-299
D11092		M01364	0654+77/124/L029			150-199, 275-299
D01244		M01365	0661/124/R029			150-199, 275-299
D01242		M01366	0661/124/L029			150-199, 275-299
D11580		M01367	0706/124/R029			150-199, 275-299
D01216		M01368	0706/124/L029			150-199, 275-299
D11578		M1015				150-199, 275-299
W0706	N2	AFT CARGO LOADING CONTROL (P27)				
D05250P		AC1304	POS 06	D05250J	W1068	ALL
D00824		M00845	P027-00/ /			ALL

MASTER BUNDLE LIST

D280T132

91-21-13

Section W0700

Page 2

Aug 05/2009



767-200/300 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0706	N2	AFT CARGO LOADING CONTROL (P27) (continued)				
D00822		S00327	P027-00/ /618			ALL
W0708	N2	AFT CARGO GUIDE ACTUATORS AND DOOR STOPS				
D05252P		AC1304	POS 02	D05252J	W1068	ALL
D02318		M00390	1277/124/L032			ALL
D02322		M00391	1277/124/R032			ALL
D02330		M00392	1292/122/L009			ALL
D02334		M00393	1292/122/R004			ALL
D02324		M00394	1339/124/L032			ALL
D02328		M00395	1339/124/R032			ALL
D02326		M00555	1339/124/0000			ALL
D02336		M00556	1324/122/R004			ALL
D02332		M00557	1324/122/L009			ALL
D02320		M00558	1277/124/0000			ALL
D02338		M00568	1292/120/R048			050-099, 150-199
D02340		M00569	1324/120/R048			050-099, 150-199

MASTER BUNDLE LIST

D280T132

91-21-13

Section W0700

Page 3 End

Aug 05/2009



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0710	N2	AFT CARGO POWER DRIVE UNITS (PDU)				
D05256P		AC1304	POS 01	D05256J	W1068	ALL
D05258P		AC1304	POS 03	D05258J	W1068	ALL
D05254P		AC1304	POS 05	D05254J	W1068	ALL
D01468		M00373	1142/124/L029			ALL
D01470		M00374	1142/124/R029			ALL
D01472		M00375	1187/124/L029			ALL
D01474		M00376	1187/124/R029			ALL
D01476		M00377	1197+33/124/L029			ALL
D01478		M00378	1197+33/124/R029			ALL
D01480		M00379	1197+77/124/L029			ALL
D01482		M00380	1197+77/124/R029			ALL
D01484		M00381	1294/124/L029			ALL
D01486		M00382	1197+121/124/R029			ALL
D01488		M00383	1308/124/L021			ALL
D01492		M00384	1230/124/R029			ALL
D01494		M00385	1266/124/L029			ALL
D01496		M00386	1322/124/R029			ALL
D01498		M00387	1350/124/L029			ALL
D01500		M00388	1294/124/R029			ALL
D01502		M00389	1308/124/L020			ALL
D01504		M00559	1308/124/R037			ALL
D01490		M00560	1308/124/R009			050-099
D11100		M01295 AFT				150-199, 275-299
D11102		M01296 AFT				150-199, 275-299
D11104		M01297 AFT				150-199, 275-299
D11106		M01298 AFT				150-199, 275-299
D11108		M01299 AFT				150-199, 275-299
D11110		M01300 AFT				150-199, 275-299
D11112		M01301 AFT				150-199, 275-299
W0711	L2	P8 TO E2-3 SHELF (AIDS)				
D04765J		AE0306	POS 16	D04765P	W0135	ALL
D02301		M01631	P008-00/ /			ALL
W0712	S2	OXYGEN DEPLOYMENT FEEDER				
D05708P		AF0201	POS 06	D05708J	W0044	ALL
D05710P		AP0401	POS 03	D05710J	W1110	ALL
D00964		S00119	P019-00/TOP/			ALL

MASTER BUNDLE LIST

D280T132

91-21-13

Section W0710

Page 1

Aug 05/2009



767-200/300 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0713	N2	E2-3 TO DIGITAL FLIGHT DATA RECORDER CATIA DESIGNED				
D00307A			//			ALL
D04741J		AE0307	POS 33	D04741P	W0135	ALL
D00307		M00200	SHELF/E07/00			ALL
W0714	N2	LEFT AND CENTER AND RIGHT FWD OXYGEN DEPLOYMENT				
D06136J				D06136P	W1198	280-299
D06136J			0358/284/L054	D06136P	W1198	275-278
D00938			345/280/L048			280-299
D05448P		AP0401	POS 07	D05448J	W1110	ALL
D00934		M00628	0291/280/L033			ALL
D00936		M00907	0291/280/L033			ALL
D00206		M00908	0324/280/0000			275-299
W0718	N2	LEFT MID OXYGEN LATCHES				
D06644J				D06644P	W0724	277-299
D00940			0397/270/L075			275-299
D00146			0427/270/L075			ALL
D01044			0444/270/L075			ALL
D01134			0463/270/L075			ALL
D00148			0493/270/L075			ALL
D00150			0522/270/L075			ALL
D00152			0551/270/L075			ALL
D00154			0581/270/L075			ALL
D01144			0611/270/L073			ALL
D01146			0639/270/L075			ALL
D11318			0654+016/270/L073			150-199, 275-299
D11320			0654+044/270/L075			150-199, 275-299
D11322			0654+087/270/L075			150-199, 275-299
D11324			0654+104/270/L073			275-299
D01148			0669/270/L075			050-099, 275-299
D01150			0700/270/L075			050-099, 150-199
D01152			0737/270/L075			050-099, 150-199
D01154			0742/270/L073			050-099
D06644J			0763/269/L074	D06644P	W0724	150-199, 275-276
D01180			0875/270/L075			050-099
D01182			0896/270/L073			050-099
D01184			0926/270/L075			050-099
D01188			0983/270/L073			050-099
D01190			1013/270/L073			050-099

MASTER BUNDLE LIST

D280T132

91-21-13

Section W0710

Page 2

Aug 05/2009



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0718	N2	LEFT MID OXYGEN LATCHES (continued)				
D01156			801/270/L073			050-099
D01186			969/270/L073			050-099
D05740P		AP0403	POS 03	D05740J	W1110	ALL
D13634		M00903	0654+118/280/L060			150-199
D01160		M0903				050-099



767-200/300 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0720	N2	CENTER MID OXYGEN LATCHES CATIA DESIGNED				
D05990P				D05990J	W1160	150-199, 275-299
D06000P				D06000J	W1168	150-199, 275-299
D05990P			0373/280/0000	D05990J	W1160	050-099
D05750P		AP0403	POS 20	D05750J	W1110	ALL
D05752P		AP1005	POS 16	D05752J	W1112	050-099
W0721	S2	E1-2 TO E2-5 SHELF				
D05109J		AE0307	POS 45	D05109P	W0139	ALL
D04751J		AE0307	POS 81	D04751P	W1090	ALL
W0722	N2	RIGHT MID OXYGEN LATCHES				
D06646J				D06646P	W0728	277-299
D00952			0375/270/R073			275-299
D01046			0463/270/R073			ALL
D01048			0493/270/R073			ALL
D01050			0522/270/R073			ALL
D01052			0551/270/R073			ALL
D01054			0581/270/R073			ALL
D01056			0610/270/R073			ALL
D01058			0639/270/R073			ALL
D11266			0654+014/270/R073			150-199, 275-299
D11268			0654+044/270/R073			150-199, 275-299
D11270			0654+087/270/R073			150-199, 275-299
D11272			0654+099/270/R073			275-299
D01060			0656/270/R073			050-099, 275-299
D06646J			0675/269/R074	D06646P	W0728	150-199, 275-276
D01062			0698/270/R073			050-099, 150-199
D01004			0737/270/R073			050-099, 150-199
D01094			0757/270/R073			050-099
D01096			0798/270/R073			050-099
D01102			0875/270/R073			050-099
D01104			0896/270/R073			050-099
D01106			0926/270/R073			050-099
D01108			0940/270/R073			050-099
D01110			0983/270/R073			050-099
D01112			1013/270/R073			050-099
D01002			429/270/R073			150-157, 275-299
D02276			449/270/R073			ALL
D05746P		AP0403	POS 14	D05746J	W1110	ALL

MASTER BUNDLE LIST

D280T132

91-21-13

Section W0720

Page 1

Aug 05/2009



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0722	N2	RIGHT MID OXYGEN LATCHES (continued)				
D13648		M00904	0848/280/R060			150-199
D01100		M0904				050-099
W0723	C2	IRS-C,SHELF TO SEL PNL				
D04757J		AE0319	POS 93	D04757P	W0181	ALL
D00743		M00059	P005-00/ /			ALL
W0724	N2	LEFT AFT OXYGEN LATCHES				
D06644P				D06644J	W0718	277-299
█ D06644P			0675/269/L074	D06644J	W0718	150-199, 275-276
█ D01150			0700/270/L075			275-299
█ D01152			0737/270/L075			275-299
█ D01154			0742/270/L073			275-299
D11254			0771/270/L073			150-199, 275-299
█ D01160			0845/270/L073			275-276
D01180			0875/270/L075			150-199, 275-299
█ D01182			0896/270/L073			150-199, 275-299
█ D01184			0926/270/L075			150-199, 275-299
█ D01188			0983/270/L073			275-299
█ D01190			1013/270/L073			150-199, 275-299
D13536			1028/270/L073			150-199
D01114			1043/270/L073			275-299
D13538			1055/270/L073			150-199
D01116			1071/270/L073			150-199, 275-299
D01118			1097/270/L073			ALL
D01120			1131/270/L073			ALL
D01018			1159/270/L073			ALL
D01020			1189/270/L073			ALL
D11256			1197+022/270/L073			150-199, 275-299
D11258			1197+050/270/L073			150-199, 275-299
D11260			1197+080/270/L073			150-199, 275-299
D11262			1197+110/270/L073			150-199, 275-299
D01022			1204/270/L073			ALL
D01024			1234/270/L073			ALL
D01026			1263/270/L073			ALL
D01028			1292/270/L073			ALL
D01030			1322/270/L073			ALL
D01032			1351/270/L073			ALL
D01034			1380/270/L073			ALL

MASTER BUNDLE LIST

D280T132

91-21-13

Section W0720

Page 2

Aug 05/2009



767-200/300 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0724	N2	LEFT AFT OXYGEN LATCHES (continued)				
D01036			1410/270/L073			ALL
D01038			1428/270/L073			ALL
D12024			1451/270/L073			150-199
D01156			801/270/L073			150-199, 275-299
D01158			830/270/L073			150-199
D01186			969/270/L073			275-299
D03834		(PROV)				150-199
D05736P		AP1003	POS 01	D05736J	W1112	050-099
D01160		M00903	0654+118/280/L060			277-299
D03834		M00905	1472/280/L060			275-299
D01040		M00910	1527/280/L050			150-199, 275-299
D10548		M00988	1495/280/L032			150-199
D01116		M01591	0958/280/L060			050-099
D01186		M01591	0958/280/L060			150-199
D03834		M0905				050-099
D10020		M0910				050-099
D12024		M0988				050-099
W0725	R2	IRS-R,SHELF TO SEL PNL				
D04761J		AE0319	POS 91	D04761P	W0171	ALL
D00741		M00059	P005-00/ /			ALL
W0726	N2	CENTER AFT OXYGEN LATCHES				
D06000P			1025/280/L005	D06000J	W1168	050-099
D05730P		AP1003	POS 06	D05730J	W1112	050-099
W0728	N2	R OXYGEN MASK DEPLOYMENT				
D06646P				D06646J	W0722	277-299
D06646P			0675/269/R074	D06646J	W0722	150-199, 275-276
D01062			0698/270/R073			275-299
D01004			0737/270/R073			275-299
D01094			0757/270/R073			275-299
D11264			0771/270/R073			150-199, 275-299
D01096			0798/270/R073			150-199, 275-299
D01100			0840/270/R073			275-276
D01102			0875/270/R073			150-199, 275-299
D01104			0896/270/R073			150-199, 275-299
D01106			0926/270/R073			150-199, 275-299
D01108			0940/270/R073			275-299

MASTER BUNDLE LIST

D280T132

91-21-13

Section W0720

Page 3

Aug 05/2009



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0728	N2	R OXYGEN MASK DEPLOYMENT (continued)				
D01110			0983/270/R073			275-299
D01112			1013/270/R073			150-199, 275-299
D13540			1028/270/R073			150-199
D03016			1043/270/R073			275-299
D13542			1055/270/R073			150-199
D03018			1071/270/R073			150-199, 275-299
D03020			1101/270/R073			ALL
D03022			1116/270/R073			ALL
D03024			1146/270/R073			ALL
D03026			1189/270/R073			ALL
D11274			1197+022/270/R073			150-199, 275-299
D11276			1197+050/270/R073			150-199, 275-299
D11278			1197+080/270/R073			150-199, 275-299
D11280			1197+110/270/R073			150-199, 275-299
D03028			1204/270/R073			ALL
D03030			1234/270/R073			ALL
D03032			1263/270/R073			ALL
D03034			1292/270/R073			ALL
D03036			1322/270/R073			ALL
D03038			1351/270/R073			ALL
D03040			1380/270/R073			ALL
D03042			1410/270/R073			ALL
D03044			1428/270/R073			ALL
D12026			1451/270/R073			150-199
D01098			830/270/R073			150-199
D05728P		AP1003	POS 11	D05728J	W1112	050-099
D01100		M00904	0848/280/R060			277-299
D03812		M00906				150-199, 275-299
D03814		M00911	1516/280/L032			ALL
D01108		M01590	0958/280/R060			150-199
D03018		M01590	0958/280/R060			050-099
D12026		M0906				050-099

MASTER BUNDLE LIST

D280T132

91-21-13

Section W0720

Page 4 End

Aug 05/2009



767-200/300 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0731	L2	CAPT EADI AND EHSI TO P10 & SHELF				
D05101J		AE0319	POS 22	D05101P	W1103	ALL
D05097J		AE0319	POS 24	D05097P	W1103	ALL
D05079J		AE0319	POS 59	D05079P	W1127	ALL
D04867J		AF0117	POS 03	D04867P	W1052	050-099, 150-154, 162-164, 275-276
D04867J		AF0117	POS 04	D04867P	W1052	155-157, 165-199, 277-299
D05809J		AF0119	POS 09	D05809P	W0011	ALL
D00469		M00094	P010-00/ /			ALL
D00107		N00004	P001-02/ /			ALL
D00109		N00005	P001-02/ /			ALL
W0733	R2	F/O EADI AND EHSI TO P10 & SHELF				
D05081J		AE0319	POS 71	D05081P	W1119	ALL
D05389J		AE0319	POS 72	D05389P	W1127	ALL
D05085J		AE0319	POS 75	D05085P	W1119	ALL
D04869J		AF0118	POS 03	D04869P	W1054	050-099, 150-154, 162-164, 275-276
D04869J		AF0118	POS 04	D04869P	W1054	155-157, 165-199, 277-299
D05813J		AF0119	POS 14	D05813P	W0031	ALL
D00471		M00093	P010-00/ /			ALL
D00807		N00044	P003-02/ /			ALL
D00809		N00045	P003-02/ /			ALL
W0738	R2	RIGHT AIR COND PACK,ISOL VLV CATIA DESIGNED				
D05056J		AC0702	POS 03	D05056P	W0612	ALL
D05136J		AC0702	POS 07	D05136P	W0952	ALL
D04004P		AE0218	POS 16	D04004J	W0192	ALL
D05266P		AE0218	POS 17	D05266J	W0192	ALL
D06236P		AE0219	POS 35	D06236J	W2000	ALL
D08050J		AE0220	POS 05	D08050P	W0084	ALL
D06968P		AE0221	POS 09	D06968J	W1039	155-157, 166-199, 277-299
D04716P		AE0223	POS 05	D04716J	W0180	ALL
D05230J		AE0317	POS 02	D05230P	W1084	ALL
D04804J		AE0320	POS 48	D04804P	W0098	ALL
D04638J		AE0320	POS 49	D04638P	W0098	ALL
D05878J		AE0320	POS 51	D05878P	W0098	ALL

MASTER BUNDLE LIST

D280T132

91-21-13

Section W0730

Page 1

Aug 15/2007



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0738	R2	RIGHT AIR COND PACK,ISOL VLV CATIA DESIGNED (continued)				
D04268J		AL1002	POS 01	D04268P	W0448	ALL
D05880J		AL1002	POS 03	D05880P	W0448	ALL
D06080J		AL1002	POS 10	D06080P	W0448	ALL
D04418J		AL1002	POS 11	D04418P	W0448	ALL
D04538J		AL1002	POS 12	D04538P	W0448	ALL
D06978J		AL1002	POS 16	D06978P	W0464	155-157, 166-199, 277-299
D03066		TS0104	0374/170/L083			ALL
D03068		TS0163	0190/178/R041			ALL
D02826		TS0201	0768/126/R015			ALL

MASTER BUNDLE LIST

D280T132

91-21-13

Section W0730

Page 2 End

Aug 15/2007



767-200/300 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0741	L2*	YAW DAMPER, SHELF TO AC1305				
D04981P		AE0303	POS 11	D04981J	W0111	150-199, 275-299
D01937		M01458	1518/195/L072			150-199, 275-299
W0743	R2*	YAW DAMPER, SHELF TO ACCELEROMETER, R CATIA DESIGNED				
D04983P		AE0308	POS 02	D04983J	W0131	150-199, 275-299
D01939		M01459	1518/195/R072			150-199, 275-299
I W0744	L2	P61 TO L WING FS - L2A- FLT CONT & ENG INSTR				
D08608			0243/211/R043			ALL
D04524J		AC0701	POS 26	D04524P	W0416	ALL
D05308P		AE0209	POS 29	D05308J	W0176	ALL
D06240P		AE0219	POS 09	D06240J	W2000	ALL
D06254P		AE0221	POS 04	D06254J	W2004	ALL
D08020J		AE0319	POS 30	D08020P	W1092	ALL
D06184J		AF0120	POS 03	D06184P	W0011	ALL
D04720P		AF0204	POS 17	D04720J	W0062	ALL
W0746	L2	P61 TO L WING FS -L2A- FLT CONT & ENG INSTR				
D04482J		AC0701	POS 18	D04482P	W0406	ALL
D05306P		AE0209	POS 39	D05306J	W0176	ALL
D08022J		AE0319	POS 19	D08022P	W1092	ALL
D06186J		AF0120	POS 07	D06186P	W0011	ALL
D04730P		AF0204	POS 31	D04730J	W0062	ALL
D04732P		AF0204	POS 32	D04732J	W0062	ALL
W0748	L2	P36 TO TAIL-L2A-FLT CONT				
D05310P		AE0209	POS 31	D05310J	W0176	ALL
D05436P		AP1501	POS 01	D05436J	W0500	ALL
D05942P		AP1501	POS 02	D05942J	W0512	ALL

MASTER BUNDLE LIST

D280T132

91-21-13

Section W0740

Page 1 End

Aug 05/2009



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0750	L2	P36 TO TAIL-L2B-FLT CONT				
D05312P		AE0209	POS 26	D05312J	W0176	ALL
D05438P		AP1501	POS 13	D05438J	W0502	ALL
W0751	L2	IRS-L,SHELF TO SEL PNL				
D04699J		AE0319	POS 86	D04699P	W0161	ALL
D00739		M00059	P005-00/ /			ALL
W0752	L2	P61 TO R WING RS -L2- FLT CONT -CATIA DESIGNED				
D04626J		AC0702	POS 24	D04626P	W0442	ALL
D05662P		AE0207	POS 05	D05662J	W0144	ALL
D05330P		AE0218	POS 41	D05330J	W0188	ALL
D05894P		AE0223	POS 03	D05894J	W0176	ALL
D08024J		AE0306	POS 18	D08024P	W0014	ALL
D04718P		AF0204	POS 41	D04718J	W0062	ALL
D04416J		AL1002	POS 09	D04416P	W0464	ALL
D04272J		AL1002	POS 17	D04272P	W0464	ALL
D05414J		AL1008	POS 01	D05414P	W0778	ALL
W0754	L2	E1 TO R WING BODY-L2-FLT CONT				
D04628J		AC0702	POS 28	D04628P	W0442	ALL
D05434J		AE0305	POS 44	D05434P	W1092	ALL
W0756	L2	P61 TO L WING RS - L2A - FLT CONT & ENG INSTR				
D06586J		AC0701	POS 05	D06586P	W0412	ALL
D04486J		AC0701	POS 21	D04486P	W0406	ALL
D04528J		AC0701	POS 22	D04528P	W0420	ALL
D04532J		AC0701	POS 28	D04532P	W0436	ALL
D08120P		AE0102	POS 04	D08120J	W5150	ALL
D01364		AE0108	POS 01			ALL
D20160		AE0108	POS 03			ALL
D08030P		AE0202	POS 07	D08030J	W1078	ALL
D08016P		AE0204	POS 10	D08016J	W0054	ALL
D05664P		AE0207	POS 06	D05664J	W0144	ALL
D05832P		AE0209	POS 36	D05832J	W0176	ALL
D05300P		AE0209	POS 37	D05300J	W0176	ALL
D05368J		AE0305	POS 08	D05368P	W1092	ALL
D05370J		AE0305	POS 40	D05370P	W1092	ALL
D08034J		AE0306	POS 20	D08034P	W0014	ALL
D05626J		AE0306	POS 48	D05626P	W0014	ALL

MASTER BUNDLE LIST

D280T132

91-21-13

Section W0750

Page 1

Aug 15/2007



767-200/300 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0756	L2	P61 TO L WING RS - L2A - FLT CONT & ENG INSTR (continued)				
D04714P		AF0204	POS 34	D04714J	W0062	ALL
D04710P		AF0204	POS 35	D04710J	W0062	ALL
D04590J		AL1001	POS 01	D04590P	W0446	ALL
D04610J		AL1001	POS 02	D04610P	W0446	ALL
D04402J		AL1007	POS 01	D04402P	W0772	ALL
D00568		B00027	0201/182/R065			ALL
D01830		M00074	P008-00/ /			ALL
D12138		M01739	0208.5/167/L063			050-099, 150-199
D11830		M1440				ALL
D01832		N00083	P008-00/ /			ALL
D05964J		TS0171	0144/196/L003	D05964P		ALL
W0758	L2	L WING RS - L2B - EEC CH. B				
D06578J		AC0701	POS 14	D06578P	W0516	ALL
D06582P		AE0209	POS 41	D06582J	W0176	ALL
D04734J		TS0171 L		D04734P		ALL

MASTER BUNDLE LIST

D280T132

91-21-13

Section W0750

Page 2 End

Aug 15/2007



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0764	R2	P61 TO R WING FRONT SPAR-R2A-ENG INSTR/FLT CONT				
I D08610			0243/211/R043			ALL
D04622J		AC0702	POS 17	D04622P	W0418	ALL
D05328P		AE0218	POS 36	D05328J	W0192	ALL
D06238P		AE0219	POS 36	D06238J	W2000	ALL
D06256P		AE0221	POS 05	D06256J	W2006	ALL
D05428J		AE0317	POS 03	D05428P	W1100	ALL
D06178J		AF0120	POS 21	D06178P	W0031	ALL
D04754P		AF0204	POS 68	D04754J	W0066	ALL
W0766	R2	P61 TO R WING FRONT SPAR-R2A-FLT CONT AND ENG INSTR				
D04616J		AC0702	POS 26	D04616P	W0408	ALL
D05326P		AE0218	POS 15	D05326J	W0192	ALL
D05430J		AE0317	POS 36	D05430P	W1100	ALL
D06180J		AF0120	POS 14	D06180P	W0031	ALL
D06182J		AF0120	POS 22	D06182P	W0031	ALL
D04738P		AF0204	POS 52	D04738J	W0066	ALL
D04760P		AF0204	POS 64	D04760J	W0066	ALL
W0768	R2	P61 TO R WING RS - R2 - FLT CONT & ENG INSTR				
D06588J		AC0702	POS 09	D06588P	W0414	ALL
D04624J		AC0702	POS 18	D04624P	W0422	ALL
D05712J		AC0702	POS 19	D05712P	W0418	ALL
D08116P		AE0102	POS 02	D08116J	W5150	ALL
D01404		AE0108	POS 02			ALL
D20162		AE0108	POS 04			ALL
D08032P		AE0202	POS 05	D08032J	W1080	ALL
D05668P		AE0203	POS 07	D05668J	W0142	ALL
D08018P		AE0204	POS 07	D08018J	W0054	ALL
D05316P		AE0218	POS 34	D05316J	W0192	ALL
D06260P		AE0218	POS 35	D06260J	W0192	ALL
D05638J		AE0317	POS 39	D05638P	W1100	ALL
D06278J		AE0317	POS 41	D06278P	W1100	ALL
D06140J		AE0320	POS 15	D06140P	W0016	ALL
D05622J		AE0320	POS 18	D05622P	W0016	ALL
D06258P		AF0204	POS 48	D06258J	W0066	ALL
D04758P		AF0204	POS 49	D04758J	W0066	ALL
D05416P		AF0204	POS 50	D05416J	W0066	ALL
D05514J		AL1002	POS 02	D05514P	W0448	ALL
D01548		M00492	1090/131/R080			ALL

MASTER BUNDLE LIST

D280T132

91-21-13

Section W0760

Page 1

Aug 05/2009



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0768	R2	P61 TO R WING RS - R2 - FLT CONT & ENG INSTR (continued)				
D05966J		TS0170	0144/196/R003	D05966P		ALL



767-200/300 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0770	R2	P37 TO TAIL-R2-FLT CONT				
D05318P		AE0218	POS 43	D05318J	W0192	ALL
D05440P		AP1501	POS 10	D05440J	W0504	ALL
D13884		B00428	0455/298/R012			050-099, 162-199
D13904		B00430	1408/300/R012			050-099, 150, 152-199
D13906		B00431	1398/298/R012			050-099, 150, 152-199
D13888		B00432	0481/298/R012			050-099, 162-199
D13908		M01767	1419/267/R063			050-099, 150, 152-199
D13916		M01770	0435/294/R016			050-099, 162-199
D13910		M01772	1428/294/R018			050-099, 150, 152-199
D13912		M01772	1428/294/R018			050-099, 150, 152-199
D13914		M01772	1428/294/R018			050-099, 150, 152-199
D13900		TS0519	1438/293/R038			050-099, 150, 152-199
D13902		TS0520	1419/267/R063			050-099, 150, 152-199
W0772	L2	L WHEEL WELL-L2-FLT CONT				
D04402P		AL1007	POS 01	D04402J	W0756	ALL
D02300		V00099	1065/162/L010			ALL
W0774	R2	R WHEEL WELL-R2-FLT CONT				
D05418P		AL1008	POS 04	D05418J	W0628	ALL
D02310		V00105	/ /			ALL
W0775	R2	HF R,TAIL DISC TO COUPLER				
D04827J		AP1501	POS 21	D04827P	W0635	ALL
D00087		M00242	F 0270/ /FS			ALL
W0776	R1	R WHEEL WELL-R1-FLT CONT				
D05420P		AL1008	POS 07	D05420J	W0206	ALL
D02312		M00547	WHEEL/ /WELL			ALL
W0777	L2	HF L,TAIL DISC TO COUPLER				
D04825J		AP1501	POS 28	D04825P	W0633	ALL
D00085		M00241	F 0281/ /FS			ALL
W0778	L2	R WHEEL WELL-L2-FLT CONT				
D05414P		AL1008	POS 01	D05414J	W0752	ALL
D02306		M00576	1067/175/R007			ALL
D72060		S00846	1043/193/R029			157, 167-199, 275-299

MASTER BUNDLE LIST

D280T132

91-21-13

Section W0770

Page 1

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0778	L2	R WHEEL WELL-L2-FLT CONT (continued)				
D02304		V00104	1067/170/R035			ALL
W0779	L2	WEATHER RADAR L				
D04917J				D04917P	W0781	ALL
D00391A			//			ALL
D00391B			//			ALL
D00391C			//			ALL
D04889J		AE0319	POS 25	D04889P	W1103	ALL
D04829J		AE0319	POS 73	D04829P	W0109	ALL
D00395		M00075	P008-00/ /			ALL
D00391		M00213	0140/150/L005			ALL
D00483		S00036	0140/170/0000			ALL

MASTER BUNDLE LIST

D280T132

91-21-13

Section W0770

Page 2 End

Feb 06/2009



767-200/300 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0780	S2	DOOR POSITION-ENTRY DOOR				
D05102J		AE0307	POS 29	D05102P	W1092	ALL
W0781	L2	WX RADAR,ANTENNA TO PRESS. SEAL				
D04917P				D04917J	W0779	ALL
D00491		M00269	//			ALL
W0782	R2	R WING RS - R2B - EEC CH. B				
D06580J		AC0702	POS 14	D06580P	W0518	ALL
D06584P		AE0218	POS 30	D06584J	W0192	ALL
D11832		M1441				ALL
D04736J		TS170		D04736P		ALL
W0783	R2	CROSSAISLE LIGHTS JUMPER BUNDLE				
D02589			MULTI//			050-099, 150-199
W0784	R2	WING ILLUM LTS,EMER LTS-P19 TO AP1103 CATIA DESIGNED				
D06320J				D06320P	W0784	ALL
D06320P				D06320J	W0784	ALL
D06322J				D06322P	W0784	ALL
D06322P				D06322J	W0784	ALL
D12072				D02589		150-199
D12074				D02589		050-099, 150-199
D12086J				D12086P		150, 153-157
D12086J				D12086P	W2010	151-152, 162-199
D12088P				D12088J		150, 153-157
D12088P				D12088J	W2010	151-152, 162-199
D13520				D02589		150-199
D13522				D02589		050-099, 150-199
D13524				D02589		050-099, 150-199
D13526				D02589		050-099, 150-199
D08124J			0840/280/0000	D08124P	W1192	050-099
D08126P			0840/280/0000	D08126J	W1192	050-099
D05076P		AP0403	POS 08	D05076J	W1060	ALL
D05078P		AP1005	POS 06	D05078J	W1064	ALL
D13264		L00897	0654+58/200/L			050-099, 150-199
D11706		L00908	0445/200/L			275-299
D11708		L00908	0445/200/L			275-299
D13258		L00908	0445/200/L			050-099
D13258		L0908				150-199

MASTER BUNDLE LIST

D280T132

91-21-13

Section W0780

Page 1

Aug 05/2009



767-200/300 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0784	R2	WING ILLUM LTS,EMER LTS-P19 TO AP1103 CATIA DESIGNED (continued)				
D01084		M00735	0445/203/L092			ALL
D01648		M00738	1340/203/L092			ALL
D13206		M1557				050-099, 150-199
D13254		M1558				050-099, 150-199
W0785	R2	EXIT. IDENTIFIERS JUMPER BUNDLE				
D02569			MULTI/ /			050-099, 150-199
D02571			MULTI/ /			050-099, 150-199
D02573			MULTI/ /			050-099, 150-199
W0786	R2	R MID EMER LTG CATIA DESIGNED				
D06316J				D06316P	W0786	ALL
D06316P				D06316J	W0786	ALL
D06318J				D06318P	W0786	ALL
D06318P				D06318J	W0786	ALL
D06324J				D06324P	W0786	ALL
D06324P				D06324J	W0786	ALL
D06326J				D06326P	W0786	ALL
D06326P				D06326J	W0786	ALL
D05082P		AP0403	POS 02	D05082J	W1060	ALL
D05080P		AP1005	POS 09	D05080J	W1064	ALL
D01122		M00731	0555/203/R092			ALL
D02610		M00733	1428/203/R092			ALL
D01086		M00961	0900/208/L090			ALL
D01082		M00962	1032/208/R090			ALL
D10500		M01135	0877/257/L089			ALL
D10502		M01136	0877/257/R089			ALL
D06402P		PANEL-P70		D06402J	W0072	ALL
D06406P		PANEL-P71		D06406J	W0076	ALL
D06404P		PANEL-P72		D06404J	W0074	150-199, 275-299
D06408P		PANEL-P73		D06408J	W0078	150-199, 275-299
W0788	R2	L AFT EMER LTG				
D06328J				D06328P	W0788	ALL
D06328P				D06328J	W0788	ALL
D06330J				D06330P	W0788	ALL
D06330P				D06330J	W0788	ALL
D12076				D02589		050-099, 150-199
D12078				D02589		150-199

MASTER BUNDLE LIST

D280T132

91-21-13

Section W0780

Page 2

Aug 05/2009



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0788	R2	L AFT EMER LTG (continued)				
D13224				D02569		050-099, 150-199
D13226				D02569		150-199
D06612P			1510/282/L070	D06612J	W0850	ALL
D05084P		AP1003	POS 04	D05084J	W1064	ALL
D13266		L00898	1197+33/200/L			150-199
D11714		L00910	1362/200/L			275-299
D11716		L00910	1362/200/L			275-299
D13262		L00910	1362/200/L			050-099, 150-199
D01080		M00736	0511/203/L092			ALL
D01652		M00739	1362/203/L092			ALL
D13256		M01560	1197+33/201/L092			150-199
D13210		M01561	1362/201/L092			050-099, 150-199

MASTER BUNDLE LIST

D280T132

91-21-13

Section W0780

Page 3 End

Feb 06/2009



767-200/300 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0790	R2	R AFT EMER LTG				
D12080				D02589		050-099, 150-199
D12082				D02589		050-099, 150-199
D12256				D02589		050-099
D13212				D02569		150-199
D13214				D02569		150-199
D13220				D02569		050-099, 150-199
D13222				D02569		150-199
D13226				D02569		050-099
D06614P			1510/282/R070	D06614J	W0852	ALL
D06652J		AP0901	POS 03	D06652P	W0122	150-199
D05086P		AP1003	POS 10	D05086J	W1064	ALL
D13236		L00904	1384/200/R			050-099, 150-199
D11710		L00909	0988/200/L			275-299
D11712		L00909	0988/200/L			275-299
D13260		L00909	0988/200/L			050-099, 150-199
D00170		M00734	1384/203/R092			ALL
D01088		M00737	0922/203/L092			ALL
D13244		M1556				050-099, 150-199
D13208		M1559				050-099, 150-199
D02828		TS0180	1270-335/283/0000			ALL
D03996		TS0183	1285-335/283/0000			ALL
D13464		TS0470	0790-850/283/0000			ALL
W0792	L1	RETRACTABLE OVERHEAD CLOSETS-LEFT MID LAVS				
D04326P		AP0403	POS 06	D04326J	W1102	ALL
D05070P		AP1005	POS 02	D05070J	W1106	ALL
D00810		M01156	0833/ /L060			275-299
D00810		M01584	0839/200/L050			050-099, 150-199
D13480		M01584	0839/200/L050			050-099, 150-199
D13414		M01587	0967/200/L050			050-099
D13486		M01587	0967/200/L050			050-099
D13416		M01588	0970/200/0000			150-199
D13488		M01588	0970/200/0000			150-199
D10570		M01589	0967/200/R050			150-199
D13490		M01589	0967/200/R050			150-199
W0794	L1	RIGHT RETRACTABLE OVERHEAD CLOSETS AND/OR GASPER FAN				
D05072P		AP0403	POS 11	D05072J	W1102	050-099, 150-199
D01386		B00128	0686/305/L030			050-099, 150-199

MASTER BUNDLE LIST

D280T132

91-21-13

Section W0790

Page 1

Aug 05/2009



Bundle	Sep	Description	Location	MW Connector	MW Bundle	Effectivity
Equip		Matewith				
W0798	L2	ANTI-COLLISION LT,FWD CABIN ZONE TEMP SENSOR CATIA DESIGNED				
D08080P		AP0403	POS 01	D08080J	W1058	ALL
D02664		M00570	0565/294/L026			ALL
D03984		TS0177	0654+08/303/L013			ALL
D02796		TS0178	0570-640/283/0000			ALL
D03998		TS0182	0580-640/283/0000			ALL
D13466		TS0468	0568/304/L010			ALL
D13474		TS0471	0568/304/L010			ALL

MASTER BUNDLE LIST

D280T132

91-21-13

Section W0790

Page 2 End

Feb 06/2009



767-200/300 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0800	R2	SPEAKERS AND PASS SIGNS,FWD LEFT				
D06514J				D06514P	W0806	277-299
D03200			0397/270/L073			275-299
D03206			0427/270/L073			ALL
D03208			0449/270/L073			ALL
D03210			0463/270/073			ALL
D03212			0493/270/L073			ALL
D03214			0522/270/L073			ALL
D03216			0551/270/L073			ALL
D03218			0581/270/L073			ALL
D03220			0610/270/L073			ALL
D03222			0639/270/L073			ALL
D08138			0654+014/270/L073			150-199, 275-299
D08140			0654+044/270/L073			150-199, 275-299
D08142			0654+087/270/L073			150-199, 275-299
D08144			0654+099/270/L073			275-299
D03224			0669/270/L073			050-099, 275-299
D06514J			0675/269/L074	D06514P	W0806	150-199, 275-276
D03226			0700/270/L073			050-099, 150-199
D03228			0737/270/L073			050-099, 150-199
D03230			0757/270/L073			050-099
D03232			0798/270/L073			050-099
D03238			0889/270/L073			050-099
D03240			0919/270/L073			050-099
D03242			0923/270/L073			050-099
D03244			0955/270/L073			050-099
D03246			1007/270/L073			050-099
D03248			1028/270/L073			050-099
D05182P		AP0403	POS 12	D05182J	W1060	ALL
D05184P		AP1005	POS 10	D05184J	W1064	050-099
W0802	R2	SPEAKERS AND PASS. SIGNS MID CENTER CATIA DESIGNED				
D05968P				D05968J	W1138	150-199, 280-299
D05968P			0373/280/0000	D05968J	W1138	050-099, 275-278
D05162P		AP0403	POS 17	D05162J	W1060	ALL
W0803	R2	WEATHER RADAR R				
D04919J				D04919P	W0805	ALL
D00393A			//			ALL
D00393B			//			ALL

MASTER BUNDLE LIST

D280T132

91-21-13

Section W0800

Page 1

Aug 05/2009



767-200/300 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0803	R2	WEATHER RADAR R (continued)				
D00393C			//			ALL
D05365J		AE0319	POS 14	D05365P	W1100	ALL
D04849J		AE0319	POS 67	D04849P	W0119	ALL
D00495		M00075	P008-00//			ALL
D00393		M00214	0140/150/L005			ALL
W0804	R2	SPEAKERS AND PASS. SIGNS,MID RIGHT				
D06516J				D06516P	W0810	150-199, 277-299
D03202			0397/270/R073			275-299
D03304			0427/270/R073			150-157, 275-299
D03306			0449/270/R070			ALL
D03308			0463/270/R070			ALL
D03310			0493/270/R070			ALL
D03312			0522/270/R070			ALL
D03314			0551/270/R073			ALL
D03316			0581/270/R070			ALL
D03318			0610/270/R070			ALL
D08158			0630/270/R074			150-199, 275-299
D03320			0639/270/R070			ALL
D08156			0654+014/270/R070			150-199, 275-299
D08160			0654+071/270/R070			150-199, 275-299
D08162			0654+099/270/R070			275-299
D03322			0665/270/R074			050-099, 275-299
D06516J			0675/269/R074	D06516P	W0810	275-276
D03324			0682/270/R070			050-099, 150-199
D03328			0741/270/R073			050-099
D03330			0797/270/R070			050-099
D03336			0859/270/R073			050-099
D03338			0893/270/R073			050-099
D03340			0919/270/R073			050-099
D03342			0955/270/R073			050-099
D03346			0999/270/R073			050-099
D03344			1007/270/R073			050-099
D03326			737/270/R070			050-099, 150-199
D05166P		AP0403	POS 13	D05166J	W1060	ALL
D05168P		AP1005	POS 13	D05168J	W1064	050-099
W0805	R2	WX RADAR TO PRESS. BLKHD				
D04919P				D04919J	W0803	ALL

MASTER BUNDLE LIST

D280T132

91-21-13

Section W0800

Page 2

Aug 05/2009



767-200/300 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0805	R2	WX RADAR T0 PRESS. BLKHD (continued)				
D00489		M00269	//			ALL
W0806	R2	SPEAKERS AND PASS SIGNS,AFT LEFT				
D06514P				D06514J	W0800	277-299
D03226			0700/270/L073			275-299
D03228			0737/270/L073			275-299
D03230			0757/270/L073			275-299
D06514P			0763/269/L074	D06514J	W0800	150-199, 275-276
D08146			0771/270/L073			150-199, 275-299
D03232			0798/270/L073			150-199, 275-299
D03234			0831/270/L073			150-199
D03236			0859/270/L073			150-199
D03238			0889/270/L073			150-199, 275-299
D03240			0919/270/L073			150-199, 275-299
D03242			0923/270/L073			275-299
D03244			0955/270/L073			275-299
D03246			1007/270/L073			150-199, 275-299
D03248			1028/270/L073			150-199, 275-299
D03348			1055/270/L073			150-199, 275-299
D03350			1071/270/L073			150-199, 275-299
D03352			1101/270/L073			ALL
D03354			1116/270/L073			ALL
D03356			1159/270/L073			ALL
D03358			1189/270/L073			ALL
D08148			1197+022/270/L073			150-199, 275-299
D08150			1197+050/270/L073			150-199, 275-299
D08152			1197+080/270/L073			150-199, 275-299
D08154			1197+110/270/L073			150-199, 275-299
D03360			1204/270/L073			ALL
D03362			1234/270/L073			ALL
D03364			1263/270/L073			ALL
D03366			1292/270/L073			ALL
D03368			1322/270/L073			ALL
D03370			1351/270/L073			ALL
D03372			1380/270/L073			ALL
D03374			1406/270/L073			ALL
D03376			1428/270/L073			ALL
D12020			1451/270/L073			050-099, 150-199
D05104P		AP1003	POS 08	D05104J	W1064	050-099

MASTER BUNDLE LIST

D280T132

91-21-13

Section W0800

Page 3

Aug 05/2009



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0807	N2	E2-2 TO ATC RF SWITCH				
D06119J		AE0322	POS 05	D06119P	W0143	ALL
D02187		S10563	0331/132/R043			ALL
D02195		S10564	0331/132/R043			ALL
W0809	L2	SATCOM SYSTEM TOP-MOUNTED HGA SUBSYSTEM				
D06165J		AC1102	POS 08	D06165P	W0091	156-157, 166-199, 277-299
D06167P		AP1001	POS 02	D06167J	W1003	156-157, 166-199, 277-299
D02771		M1788				156-157, 166-199, 277-299
D06169J		M1792		D06169P		156-157, 166, 277-299
D06169J		STA1040		D06169P		167-199

MASTER BUNDLE LIST

D280T132

91-21-13

Section W0800

Page 4 End

Aug 05/2009



767-200/300 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0810	R2	SPEAKERS AND PASS. SIGNS,AFT RIGHT				
		D06516P		D06516J	W0804	150-199, 277-299
I		D06516P	0675/269/R074	D06516J	W0804	275-276
I		D03324	0682/270/R070			275-299
I		D03328	0741/270/R073			275-299
I		D03330	0797/270/R070			150-199, 275-299
I		D03336	0859/270/R073			150-199, 275-299
		D03338	0893/270/R073			150-199, 275-299
		D03340	0919/270/R073			150-199, 275-299
		D03342	0955/270/R073			275-299
I		D03346	0999/270/R073			150-199, 275-299
I		D03344	1007/270/R073			150-199, 275-299
		D03412	1055/270/R073			150-199, 275-299
		D03414	1071/270/R073			150-199, 275-299
I		D03416	1101/270/R073			ALL
I		D03418	1131/270/R073			ALL
		D03420	1159/270/R073			ALL
I		D03422	1189/270/R073			ALL
		D08166	1197+022/270/R073			150-199, 275-299
		D08168	1197+050/270/R073			150-199, 275-299
		D08170	1197+080/270/R073			150-199, 275-299
		D08172	1197+110/270/R073			150-199, 275-299
		D03424	1204/270/R073			ALL
		D03426	1234/270/R073			ALL
I		D03428	1273/270/R073			ALL
		D03430	1292/270/R073			ALL
		D03432	1322/270/R073			ALL
		D03434	1351/270/R073			ALL
		D03436	1380/270/R073			ALL
I		D03438	1410/270/R073			ALL
I		D03440	1428/270/R073			ALL
		D12022	1451/270/R073			050-099, 150-199
I		D03326	737/270/R070			275-299
I		D08164	771/270/R070			150-199, 275-299
		D03332	831/270/R070			150-199
		D05108P	AP1003 POS 15	D05108J	W1064	050-099
W0811	L2	SATCOM SYSTEM,SIDE-MOUNTED HGA SUBSYSTEM-PORT				
		D06171J	AC1102 POS 07	D06171P	W0091	156-157, 166-199, 277-299

MASTER BUNDLE LIST

D280T132

91-21-13

Section W0810

Page 1

Aug 05/2009



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0811	L2	SATCOM SYSTEM,SIDE-MOUNTED HGA SUBSYSTEM-PORT (continued)				
D02677		M1787				156-157, 166-199, 277-299
D02709		M1789				156-157, 166-199, 277-299
D02693		M1795				156-157, 166-199, 277-299
W0812	R1	CEILING LTS,FWD & MID INDIRECT & DIRECT				
D08688J		AP0307	POS 06	D08688P	W1449	050-099, 150-199
D05808P		AP0403	POS 09	D05808J	W1104	ALL
D05110P		AP0403	POS 15	D05110J	W1104	ALL
D06736P		AP1005	POS 07	D06736J	W1108	050-099, 150-199
D05112P		AP1005	POS 08	D05112J	W1108	ALL
D03100		L00339	0431/266/L080			ALL
D03182		L00341	0431/266/R080			275-299
D03102		L00342	0479/266/L080			162-199
D03104		L00343	0519/266/L080			ALL
D03186		L00345	0519/266/R080			ALL
D03108		L00347	0607/266/L080			ALL
D03190		L00349	0607/266/R080			ALL
D03112		L00351	0695/266/L080			ALL
D03194		L00353	0695/266/R080			ALL
D03084		L00356	0785/266/L080			ALL
D03116		L00357	0785/266/R080			ALL
D03088		L00360	0912/266/L080			ALL
D03090		L00362	0952/266/L080			050-099, 275-299
D03092		L00364	1000/266/L080			050-099, 275-299
D03124		L00365	1000/266/R080			050-099
D03096		L00384	0871/266/L080			ALL
D03128		L00385	0871/266/R080			ALL
D12380		L00786	0654+43/266/L080			280-299
D11174		L00788	0654+87/266/L080			150-199, 275-299
D11176		L00789	0654+87/266/R080			150-199, 275-299
D11178		L00792	0894/266/L080			150-199, 275-299
D02690		M00671	0433/295/L056			275-299
D02692		M00672	0526/290/L056			ALL
D02694		M00677	0609/295/L056			ALL
D02696		M00678	0654+84/295/L056			ALL
D20032		M00678	0654+84/295/L056			280-299

MASTER BUNDLE LIST

D280T132

91-21-13

Section W0810

Page 2

Aug 05/2009



767-200/300 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0812	R1	CEILING LTS,FWD & MID INDIRECT & DIRECT (continued)				
D02698		M00692	0785/295/L056			ALL
D02700		M00693	0872/295/L056			ALL
D02734		M00694	0952/290/L056			ALL
D00426		M00708	0917/295/L056			050-099
D02946		M00745	0446/280/L056			ALL
D02164		M00748	0534/290/L056			ALL
D02168		M00750	0622/288/L056			ALL
D02170		M00752	0710/288/L056			ALL
D02940		M00753	0842/288/L056			ALL
D02942		M00755	0879/288/L056			ALL
D02944		M00757	1012/288/R056			050-099, 275-299
D02002		M00769	0908/288/L056			ALL
D10922		M01255	0440/295/L056			162-199
D11160		M01257	0654+84/295/L056			150-199, 275-299
D11164		M01259	0654+117/295/L056			150-199, 275-299
D12372		M01259	0654+117/295/L056			280-299
D11168		M01261	0754/295/L056			150-199, 280-299
D11172		M01272	0654+100/290/L056			150-199, 275-299
D12378		M01901	0664/295/L056			280-299
W0813	L2	SATCOM SYSTEM SIDE-MOUNTED HGA SUBSYSTEM-STRBD				
D06173J		AC1102	POS 04	D06173P	W0091	156-157, 166-199, 277-299
D02717		M1790				156-157, 166-199, 277-299
D02689		M1796				156-157, 166-199, 277-299
W0814	R1	MID GALLEY & SIDEWALL WASH LTS				
D10908				D06237		280-299
D05114P		AP0403	POS 04	D05114J	W1104	ALL
D05116P		AP1005	POS 04	D05116J	W1108	ALL
D03098		L00338	0391/266/L080			275-299
D03180		L00340	0391/266/R080			275-299
D03182		L00341	0431/266/R080			050-099, 150-199
D03102		L00342	0479/266/L080			050-099, 150-157, 275-299
D03184		L00344	0490/266/R081			ALL
D03106		L00346	0555/266/L081			ALL

MASTER BUNDLE LIST

D280T132

91-21-13

Section W0810

Page 3

Aug 05/2009



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0814	R1	MID GALLEY & SIDEWALL WASH LTS (continued)				
D03188		L00348	0565/266/R080			ALL
D03110		L00350	0655/266/L080			ALL
D03192		L00352	0655/266/R080			ALL
D03082		L00354	0743/266/L080			ALL
D03114		L00355	0743/266/R080			ALL
D03086		L00358	0827/266/L080			150-199
D03118		L00359	0827/266/R080			150-199
D03120		L00361	0912/266/R080			ALL
D03122		L00363	0952/266/R080			050-099, 275-299
D03092		L00364	1000/266/L080			150-199
D03124		L00365	1000/266/R080			150-199, 275-299
D11224		L00786	0654+43/266/L080			150-199, 275-299
D11226		L00787	0654+43/266/R080			150-199, 275-299
D11228		L00790	0666/266/L080			275-299
D11230		L00791	0666/266/R080			275-299
D11242		L00793	0894/266/R080			150-199, 275-299
█ D02110		M00746	0433/280/R056			ALL
D02948		M00747	0446/280/R056			ALL
D02950		M00749	0534/280/R056			ALL
D01982		M00751	0622/288/R056			ALL
D02008		M00754	0842/288/R056			150-199
█ D02010		M00756	0961/288/R056			ALL
D02944		M00757	1012/288/R056			150-199
D00926		M00758	0967/288/R056			275-299
█ D02938		M00767	0747/280/R056			ALL
D00812		M01157	0833/ /R060			275-299
D10908		M01242				275-278
D11220		M01271	0654+57/280/R056			150-199, 275-299
D11222		M01273	0677/280/R056			275-299
D72046		M01410				280-299
█ D10568		M01585	0781/200/0000			050-099
D00812		M01586	0839/200/R050			050-099, 150-199
D13484		M01586	0839/200/R050			150-199
D13414		M01587	0967/200/L050			150-199
D13486		M01587	0967/200/L050			150-199
D10570		M01589	0967/200/R050			050-099
D13490		M01589	0967/200/R050			050-099
D13484		M01812				280-299
D72048		M01925				280-299
D10568		M1312				275-299

MASTER BUNDLE LIST

D280T132

91-21-13

Section W0810

Page 4

Aug 05/2009



767-200/300 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0814	R1	MID GALLEY & SIDEWALL WASH LTS (continued)				
D10568		M1585				150-199
D13482		M1585				050-099, 150-199
D13484		M1586				050-099
W0815	L2	SATCOM E9 TO E11,M1791				
D06161J		AC1102	POS 05	D06161P		156-157, 166
D06161J		AC1102	POS 05	D06161P	W0091	167-199, 277-299
D06163P		AP1101	POS 02	D06163J	W1011	156-157, 166-199, 277-299
D02685		M1791				156-157, 166-199, 277-299
W0816	R1	AFT CEILING AND SIDEWALL WASH LTS				
D05118P		AP1003	POS 07	D05118J	W1108	ALL
D03094		L00366	1040/266/L080			150-199, 275-299
D03150		L00368	1088/266/L080			ALL
D03130		L00369	1088/266/R080			050-099
D03152		L00370	1128/266/L080			150-199, 275-299
D03154		L00372	1176/266/L080			ALL
D03156		L00374	1216/266/L080			ALL
D03160		L00376	1262/266/L080			ALL
D03162		L00378	1304/266/L080			ALL
D03164		L00380	1352/266/L080			ALL
D03166		L00382	1392/266/L080			ALL
D03158		L00386	1427/266/L080			ALL
D03138		L00387	1438/266/R080			ALL
D11236		L00794	1197+22/266/L080			150-199, 275-299
D11238		L00796	1197+66/266/L080			150-199, 275-299
D11240		L00798	1197+110/266/L080			150-199, 275-299
D02878		M00652	1576/284/L014			ALL
D02882		M00654	1567/284/R032			ALL
D00258		M00695	0996/295/L056			ALL
D00270		M00696	1127/295/L056			ALL
D00276		M00697	1270/295/L056			ALL
D00296		M00704	1350/295/L056			ALL
D00318		M00706	1422/295/L056			ALL
D01988		M00759	1055/288/L056			ALL
D02004		M00761	1187/288/L056			ALL
D01984		M00763	1275/288/L056			ALL

MASTER BUNDLE LIST

D280T132

91-21-13

Section W0810

Page 5

Aug 05/2009



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0816	R1	AFT CEILING AND SIDEWALL WASH LTS (continued)				
D01986		M00765	1363/288/L056			ALL
D02006		M00771	1429/288/L056			ALL
D10050		M01085	1428/288/R056			050-099, 150-199
D11212		M01263	1197+21/295/L056			150-199, 275-299
D11216		M01265	1197+106/295/L056			150-199, 275-299
D11232		M01275	1197+34/280/L056			150-199, 275-299
D11234		M01277	1197+123/290/L056			150-199, 275-299
W0817	R2	SATCOM SYSTEM CONTROL INTERFACES-E9 TO E2-3,E2-6				
D06155J		AC1102	POS 06	D06155P	W9026	150, 153-155, 162-165
D06155J		AC1102	POS 06	D06155P	W0095	156-157, 166-199, 277-299
D06159J		AE0320	POS 60	D06159P	W0173	150, 153-199, 277-299
D06157J		AE0322	POS 19	D06157P	W0145	150, 153-199, 277-299
W0818	R1	AFT SIDEWALL WASH LTS,GALLEY LTS,DIRECT CLG LTS				
D07082J			1417/314/R032	D07082P		280-299
D06038J			1518/283/R011	D06038P	W0100	050-099, 275-299
D05120P		AP1003	POS 02	D05120J	W1108	ALL
D06042J		AP1401	POS 02	D06042P	W0106	275-299
D06052J		AP1402	POS 02	D06052P	W0108	275-299
D03126		L00367	1040/266/R080			150-199, 275-299
D03130		L00369	1088/266/R080			150-199, 275-299
D03152		L00370	1128/266/L080			050-099
D03132		L00371	1128/266/R080			ALL
D03134		L00373	1176/266/R080			ALL
D03136		L00375	1216/266/R080			ALL
D03140		L00377	1264/266/R080			ALL
D03142		L00379	1304/266/R080			ALL
D03144		L00381	1352/266/R080			ALL
D03146		L00383	1392/266/R080			ALL
D11244		L00795	1197+22/266/R080			150-199, 275-299
D11246		L00797	1197+66/266/R080			150-199, 275-299
D11248		L00799	1197+110/266/R080			150-199, 275-299
D02880		M00653	1576/284/R014			ALL
D02884		M00655	1567/284/L032			ALL
D02094		M00760	1055/288/R056			ALL
D02096		M00762	1143/288/R056			ALL
D02098		M00764	1275/288/R056			ALL

MASTER BUNDLE LIST

D280T132

91-21-13

Section W0810

Page 6

Aug 05/2009



767-200/300 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0818	R1	AFT SIDEWALL WASH LTS,GALLEY LTS,DIRECT CLG LTS (continued)				
D02100		M00766	1363/288/R056			ALL
D11250		M01274	1197+34/280/R056			150-199, 275-299
D11252		M01276	1197+123/280/R056			150-199, 275-299
W0819	L2	RATCOM SYSTEM POWER & LGA SUBSYSTEM,E9,E2-3,E2-6				
D06149J		AC1102	POS 09	D06149P	W9026	150, 153-155, 162-165
D06149J		AC1102	POS 09	D06149P	W0091	156-157, 166-199, 277-299
D06153J		AE0306	POS 28	D06153P	W0163	150, 153-199, 277-299
D06151J		AE0306	POS 36	D06151P	W0133	150, 153-199, 277-299

MASTER BUNDLE LIST

D280T132

91-21-13

Section W0810

Page 7 End

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0820	L2	L FWD LAV				
D06100J			0383/284/R040	D06100P	W0132	275-299
D05160P		AP0401	POS 08	D05160J	W1058	ALL
D00808		M00289	0262/ /L055			ALL
D13478		M00289	0262/ /L055			050-099, 150-199
W0822	R1	CENTER MID DIRECT,INDIRECT,GALLEY LIGHTING				
D07096J				D07100P		280-299
D06098P			0365/284/R025	D06098J	W0132	275-299
D05912P		AP0403	POS 05	D05912J	W1104	ALL
D06148J		AP0703	POS 02	D06148P	W0110	275-299
D05914P		AP1005	POS 03	D05914J	W1108	ALL
D02736		M00669	0481/295/L020			275-299
D02740		M00670	0489/295/L020			ALL
D02748		M00673	0615/295/L020			ALL
D02750		M00674	0654+99/295/L020			050-099, 150-199, 275-278
D02758		M00698	0708/295/L020			ALL
D02978		M00699	0861/295/L020			ALL
D00754		M00700	0835/295/L020			ALL
D00424		M00709	0922/295/L019			050-099
D11162		M01258	0654+50/295/L020			150-199, 275-278
D11166		M01260	0654+91/295/L020			150-199, 275-278
D11170		M01262	0747/295/L020			150-199
W0824	R1	CENTER AFT DIRECT,INDIRECT,GALLEY LIGHTING				
D05916P		AP1003	POS 14	D05916J	W1108	ALL
D00756		M00701	1004/295/L020			ALL
D00370		M00702	1136/295/L020			ALL
D00420		M00703	1266/295/L020			ALL
D00380		M00705	1274/295/L020			ALL
D00388		M00707	1400/295/L020			ALL
D11214		M01264	1197+27/295/L020			150-199, 275-299
D11218		M01266	1197+115/295/L020			150-199, 275-299
W0828	R1	R AFT LAV & DR WRN,MISC PWR				
D05096P		AP1003	POS 12	D05096J	W1108	ALL
D06742P		AP1003	POS 13	D06742J	W1108	050-099, 150-199
D13930		L01212	1446/280/R043			164-199
D13952		L01212	1446/280/R043			164-199

MASTER BUNDLE LIST

D280T132

91-21-13

Section W0820

Page 1

Aug 05/2009



767-200/300 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0828	R1	R AFT LAV & DR WRN,MISC PWR (continued)				
D13932		L01213	1446/280/L043			164-199
D13954		L01213	1446/280/L043			164-199
D13552		M01178	1560/BFE/			050-099
D00814		M01186	1463/ /L060			ALL
D13492		M01186	1463/ /L060			150-157
D00816		M01188	1463/ /R060			050-099, 150-199
D13494		M01188	1463/ /R060			150-157
D13552		M1178				150-199
D06904P		MULTI		D06976J		050-099, 162-199
D06906P		MULTI		D06976J		050-099, 150, 152-199

MASTER BUNDLE LIST

D280T132

91-21-13

Section W0820

Page 2 End

Jun 28/2006



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0832	R2	EMERGENCY LIGHTS				
D06410P		AP0401	POS 06	D06410J	W1060	ALL
D11722		L00972	0291/205/R093			275-299
D11724		L00972	0291/205/R093			275-299
D11718		L00976	0290/205/L085			275-299
D11720		L00976	0290/205/L085			275-299
D10718		M1208				ALL
W0834	R2	EMERGENCY LIGHTS CATIA DESIGNED				
D06858J				D06858P	W1284	162-199
D06860P				D06860J	W1284	162-199
D06412P		AP0403	POS 10	D06412J	W1060	ALL
D11692		L00902	1010/200/R			275-299
D11694		L00902	1010/200/R			275-299
D11730		L00973	0857/211/R085			275-299
D11732		L00973	0857/211/R085			275-299
D11738		L00974	0901/211/R085			275-299
D11740		L00974	0901/211/R085			275-299
D11726		L00977	0857/211/L085			275-299
D11728		L00977	0857/211/L085			275-299
D11734		L00978	0901/211/L085			275-299
D11736		L00978	0901/211/L085			275-299
D10720		M01209	0877/202/R096			ALL
W0836	R2	EMERGENCY LIGHTS				
D06834J				D06834P	W0836	275-299
D06836P				D06836J	W0836	275-299
D06842J				D06842P	W0836	275-299
D06844J				D06844P	W0836	275-299
D06844P				D06844J	W0836	275-299
D06842P			1542/195/L009	D06842J	W0836	275-299
D06834P			1542/195/R009	D06834J	W0836	275-299
D06836J			1542/195/R009	D06836P	W0836	275-299
D06414P		AP1003	POS 09	D06414J	W1064	ALL
D13234		L00903	1208/200/R			150-199
D11700		L00904	1384/200/R			275-299
D11702		L00904	1384/200/R			275-299
D11746		L00975	1537/205/L085			275-299
D11748		L00975	1537/205/L085			275-299
D11742		L00979	1537/205/L085			275-299

MASTER BUNDLE LIST

D280T132

91-21-13

Section W0830

Page 1

Aug 05/2009



767-200/300 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0836	R2	EMERGENCY LIGHTS (continued)				
D11744		L00979	1537/205/L085			275-299
D10722		M01210	1540/204/R054			ALL
D11760		M01393	1406/200/R092			275-299
D13246		M1555				150-199
W0838	L2	RESERVE HYD SOURCE SELECT & INDICATION				
D05510P		AL1004	POS 18	D05510J	W1246	ALL
D00554		M00342	0990/171/R002			ALL
D02212		V00110	0990/165/R003			ALL
D02214		V00111	1010/154/R006			ALL

MASTER BUNDLE LIST

D280T132

91-21-13
Section W0830
Page 2 End
Mar 09/2006



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0840	N2	LEFT MAIN GEAR UPPER J-BOX-SYS 1				
D05026P			J00001/UPR/L GR	D05026J	W0670	ALL
D04302P		AL1001	POS 04	D04302J	W0602	ALL
D06340P		AL1003	POS 05	D06340J	W0602	ALL
W0842	N2	FWD L DOOR VIEWPORT HEATER.				
D06604J			0320/282/L070	D06604P	W1230	ALL
W0843	S2	VHF-L, SHELF TO CONTROL PANEL				
D04927J		AE0307	POS 24	D04927P	W0139	ALL
D00849		B00061	MULTI/ /			ALL
D00407		M00078	P008-00/ /			ALL
W0844	N2	FWD R DOOR VIEWPORT HEATER.				
D06606J			0320/282/R070	D06606P	W1222	ALL
W0845	R2	VHF-R, SHELF TO CONTROL PANEL				
D04929J		AE0322	POS 55	D04929P	W0139	ALL
D00409		M00079	P008-00/ /			ALL
W0847	L2	VHF-C, SHELF TO CONTROL PANEL				
D04931J		AE0306	POS 57	D04931P	W0139	ALL
D00411		M00080	P008-00/ /			ALL
W0849	N2	E2-5 SHELF TO F/E PNL				
D04953J		AE0307	POS 22	D04953P	W0139	ALL
D04955P		AF0204	POS 18	D04955J	W0062	ALL

MASTER BUNDLE LIST

D280T132

91-21-13

Section W0840

Page 1 End

Jun 06/2008



767-200/300 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0850	N2	AFT L DOOR VIEWPORT HEATER.				
D06612J				D06612P	W0788	ALL
W0851		ACARS,DFAU,FLIGHT MANAGEMENT COMPUTER INTERFACE				
D04957J		AE0322	POS 43	D04957P	W0139	277-278
D02891		M1953				275-299
D09090		M9048				150, 152-199
W0852	N2	AFT R DOOR VIEWPORT HEATER.				
D06614J				D06614P	W0790	ALL
W0853	R2	E2-5 TO P37 & P33				
D05195P		AE0203	POS 05	D05195J	W0142	ALL
D05541P		AE0224	POS 05	D05541J	W0192	ALL
D04963J		AE0320	POS 57	D04963P	W0149	ALL
W0855	R2	ADC-R AND FMC-R,SHELF TO F/O INSTR PNL CATIA DESIGNED				
D04967J		AC0604	POS 10	D04967P	W0175	ALL
D04505J		AE0322	POS 30	D04505P	W0145	ALL
D04965J		AF0120	POS 19	D04965P	W0031	ALL
W0857	N2	COAX CABLE-E2-5 TO FWD ZONE MULTIPLEXER				
D05303J		AE0307	POS 49	D05303P	W0149	ALL
D00531		M00642	0305/195/R025			ALL

MASTER BUNDLE LIST

D280T132

91-21-13

Section W0850

Page 1 End

Aug 15/2007



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0863	N2	E2-5 TO M51 PILOTS CALL PANEL				
D05001J		AE0322	POS 53	D05001P	W0139	ALL
D00735		M00051	P005-00/ /			ALL
D01655		M01111	P005-00/ /			ALL
W0864	N2	RIGHT MAIN GEAR UPPER J-BOX-SYS 2				
D05030P			J00002/UPR/R GR	D05030J	W0682	ALL
D05190P		AL1002	POS 04	D05190J	W0628	ALL
D06342P		AL1004	POS 08	D06342J	W0628	ALL

MASTER BUNDLE LIST

D280T132

91-21-13

Section W0860

Page 1 End

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0873	N2	RIGHT-FWD ZONE SEAT ELECTRONICS BOX TO NO.1 COLUMN TIMER DECODER				
D06107J		AP0307	POS 10	D06107P	W1449	050-099, 162-199
D00525		M00642	0305/195/R025			ALL
D02575		M00642	0305/195/R025			050-099, 162-199
D00499		M01319	0310/195/R035			ALL
D00605		SEB				ALL
W0875	N2	CENTER-FWD ZONE SEAT ELECTRONICS BOX TO NO.1 COLUMN TIMER DECODER				
D00527		M00642	0305/195/R025			ALL
D00503		M01319	0310/195/R035			ALL
D00607		SEB				ALL
W0877	N2	LEFT-FWD ZONE SEAT ELECTRONICS BOX TO NO.1 COLUMN TIMER DECODER				
D00507		M00297				050-099
D00529		M00642	0305/195/R025			ALL
D00507		M01319	0310/195/R035			150-199, 275-299
D00609		SEB				ALL
W0879	N2	RIGHT-AFT ZONE SEAT ELECTRONICS BOX TO NO.2 COLUMN TIMER DECODER				
D00539		M00643				050-099
D00513		M01320	0320/195/R035			ALL
D00539		M01321	0315/195/R025			150-199, 275-299
D00617		SEB				ALL

MASTER BUNDLE LIST

D280T132

91-21-13

Section W0870

Page 1 End

Aug 15/2007



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0881	N2	CTR-AFT ZN SEB TO NO.2 COLUMN TIMER DECODER CATIA DESIGNED				
D00517		M01320	0320/195/R035			ALL
D00541		M01321	0315/195/R025			ALL
D00619		SEB				ALL
W0883	N2	LEFT-AFT ZONE SEAT ELECTRONICS BOX TO NO.2 COLUMN TIMER DECODER				
D00521		M00298				050-099
D00543		M00643				050-099
D00521		M01320	0320/195/R035			150-199, 275-299
D00543		M01321	0315/195/R025			150-199, 275-299
D00621		SEB				ALL



767-200/300 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0892	L2	P89-L2-INTEGRATION				
D17072J				D17072P		150-154, 275
D17074J				D17074P		150-154, 275
D17080J				D17080P		150-154, 275
D12244		K01272	P036-00/ /			150-154, 275
D12156		K02089	P036-00/ /			150-154, 275
D12164		K02095	P036-00/ /			150-154, 275
D12160		K02097	P036-00/ /			150-154, 275
W0894	R2	P89-R2-INTEGRATION				
D17076J				D17076P		150-154, 275
D17078J				D17078P		150-154, 275
D12242		K01273	P037-00/ /			150-154, 275
D12158		K02090	P037-00/ /			150-154, 275
D12166		K02096	P037-00/ /			150-154, 275
D12162		K02098	P037-00/ /			150-154, 275
D12240		K02126	P037-00/ /			150-154, 275
W0899	R*	ELEC SPOILER CONT PCA 1,W/W DISC TO WING DISC				
D05233J		AL0901	POS 01	D05233P	W1261	ALL
D05459J		D05459J,61		D05459P	W1349	ALL

MASTER BUNDLE LIST

D280T132

91-21-13

Section W0890

Page 1 End

Mar 09/2006



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0902	R2	FWD & MAIN EQPT CTR LTG,FWD DR WRN & CONT				
D05648P		AE0203	POS 01	D05648J	W0142	ALL
D05908P		AE0203	POS 09	D05908J	W0142	ALL
D05290P		AE0218	POS 32	D05290J	W0192	ALL
D05496J		AE0317	POS 37	D05496P	W1092	ALL
D05906P		AF0204	POS 47	D05906J	W0066	ALL
D05656P		AF0204	POS 56	D05656J	W0066	ALL
D12140		M01740	0208.5/167/R063			050-099, 150-199
W0908	N2	TAIL-SKID CONTROL WIRE INDICATION				
D08202J		AE0307	POS 28	D08202P	W1092	150-199, 275-299
D08204P		AP1501	POS 33	D08204J	W0910	150-199, 275-299

MASTER BUNDLE LIST

D280T132

91-21-13

Section W0900

Page 1 End

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0910	N2	TAIL-SKID CONTROL INDICATION SWITCHS				
D08204J		AP1501	POS 33	D08204P	W0908	150-199, 275-299
W0916	N2	WRN & CONT-CAR. DRS,OFF WG ESCAPE DRS,AFT ENTRY DRS				
D08070P		AC0506	POS 07	D08070J	W1066	ALL
D08072P		AC1304	POS 07	D08072J	W1068	ALL
D05498J		AE0317	POS 08	D05498P	W1092	ALL

MASTER BUNDLE LIST

D280T132

91-21-13
Section W0910
Page 1 End
Mar 09/2006



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0920	L2	R LDG GEAR DOOR SWS,SYS 2				
D05516P		AL1004	POS 17	D05516J	W0588	ALL
D01934J		AL1010	POS 02	D01934P		ALL
W0922	L2	L LDG GEAR DOOR SWS,SYS 1				
D05556P		AL1003	POS 15	D05556J	W0602	ALL
D01946J		AL1009	POS 01	D01946P		ALL
D00418		V00046	0966/152/L026			ALL
W0924	L2	NOSE GEAR SWS,SYS 1				
D01956J				D01956P		ALL
D01958J				D01958P		ALL
D01960J				D01960P		ALL
D02226J				D02226P		ALL
D05576P		AE0209	POS 11	D05576J	W0176	ALL
D05714P		AE0209	POS 12	D05714J	W0176	ALL
D05040J		AL0202	POS 04	D05040P	W0678	ALL
W0926	R2	NOSE GEAR SWS,SYS 2				
D01950J				D01950P		ALL
D01954J				D01954P		ALL
D02224J				D02224P		ALL
D05592P		AE0218	POS 25	D05592J	W0192	ALL
D05852J		AE0322	POS 59	D05852P	W0149	ALL
D01952J		AL0202	POS 01	D01952P		ALL
D05850J		AL0202	POS 02	D05850P	W0678	ALL
W0928	N2	RIGHT MAIN GEAR UPPER J-BOX-SYS 1				
D05034P			J00002/UPR/R GR	D05034J	W0684	ALL
D04300P		AL1002	POS 08	D04300J	W0588	ALL
D08272P		AL1004	POS 16	D08272J	W0628	ALL

MASTER BUNDLE LIST

D280T132

91-21-13

Section W0920

Page 1 End

Jun 28/2006



767-200/300 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0930	R2	L WW LTS & LDG GEAR DOOR SWS				
D04654P		AL1003	POS 10	D04654J	W0628	ALL
D01938J		AL1009	POS 02	D01938P		ALL
W0932	R2	R WW LTS & LDG GEAR DR SWS				
D05810P			P056-00/ /	D05810J	W1116	ALL
D05608P		AL1004	POS 03	D05608J	W0628	ALL
D05409P		AL1004	POS 12	D05409J	W1343	ALL
D01942J		AL1010	POS 01	D01942P		ALL
W0934	N2	AFT CARGO TEMP CONTROL SWITCH				
D05948P		AC1201	POS 01	D05948J	W0580	ALL
D05950P		AC1201	POS 02	D05950J	W0578	ALL
D00708		S00064	1251/123/L005			ALL
D00648		S00075	1251/123/L005			ALL
W0938	N2	L TURB BYP VALVE, RAM ATR INLET, EXIT ACTR, & M00571 IN WHEEL WELL				
D08042P		AC0701	POS 03	D08042J	W0942	ALL
D08044P		AC0701	POS 04	D08044J	W0578	ALL
D08046P		AC0701	POS 08	D08046J	W0628	ALL
D00682		M00320	0935/115/L035			ALL
D00674		M00322	0836/121/L060			ALL
D02666		M00571	0950/129/R024			ALL
D03062		T00146	0843/114/L010			ALL
D01800		TS0212	/ /			ALL
D10134		TS5132	0859/125/L018			ALL
D10136		TS5133	0879/124/L034			ALL
D00702		V00004	0869/120/L013			ALL
D00676		V00018	0875/118/L045			ALL
D01162		V00044	0946/127/L048			ALL

MASTER BUNDLE LIST

D280T132

91-21-13

Section W0930

Page 1 End

Aug 05/2009



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0942	L2	L AIR COND CONTROL,ANTISKID				
D08042J		AC0701	POS 03	D08042P	W0938	ALL
D05048J		AC0701	POS 07	D05048P	W0508	ALL
D05988J		AC0701	POS 09	D05988P	W0508	ALL
D08112P		AE0202	POS 01	D08112J	W1078	ALL
D04906P		AE0209	POS 27	D04906J	W0176	ALL
D04904P		AE0209	POS 33	D04904J	W0176	ALL
D08680P		AE0218	POS 23	D08680J	W0192	ALL
D06658P		AE0218	POS 37	D06658J	W1118	ALL
D06242P		AE0219	POS 25	D06242J	W2000	ALL
D06246P		AE0219	POS 26	D06246J	W2000	ALL
D05686J		AE0220	POS 08	D05686P	W0082	ALL
D04500J		AE0220	POS 11	D04500P	W0082	ALL
D06970P		AE0221	POS 10	D06970J	W1039	155-157, 166-199, 277-299
D04908J		AE0305	POS 01	D04908P	W1084	ALL
D08004J		AE0305	POS 02	D08004P	W0986	ALL
D06754J		AE0305	POS 28	D06754P	W0109	ALL
D06734J		AE0305	POS 54	D06734P	W0109	ALL
D04448J		AE0306	POS 47	D04448P	W0098	ALL
D04466J		AE0306	POS 53	D04466P	W0098	ALL
D06074J		AE0319	POS 03	D06074P	W0986	ALL
D04594J		AL1001	POS 03	D04594P	W0446	ALL
D04414J		AL1001	POS 12	D04414P	W0446	ALL
D05562J		AL1001	POS 13	D05562P	W0446	ALL
D13574		B0377				ALL
D13596		S00793	0734/155/L072			ALL
D13592		TS0495	0722/156/L073			ALL
D13562		V00381	0754/145/L062			ALL
D13568		V00384	0689/117/0000			277-299
W0944	L2	AIR COND PACK NO.1 CONTROL				
D05058P		AC0701	POS 06	D05058J	W0602	ALL
D00746		V00016	0852/123/L047			ALL
D00748		V00016	0852/123/L047			ALL
D01598		V00016	0852/123/L047			ALL
D02770		V00016	0852/123/L047			ALL

MASTER BUNDLE LIST

D280T132

91-21-13

Section W0940

Page 1 End

Aug 05/2009



767-200/300 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0952	R2	AIR COND PACK NO.2 VALVE,ISOLATION VALVE				
D05136P		AC0702	POS 07	D05136J	W0738	ALL
D10146		M01089	0795/134/R062			ALL
D00668		S00049	0859/125/R059			ALL
D01562		S00556	0879/124/R044			ALL
D00726		TS0040	0807/124/R023			ALL
D00736		TS0042	0879/124/R044			ALL
D02830		TS0199	0859/125/R059			ALL
D00734		TS0286	0889/123/R064			ALL
D01296		TS0291	0883/119/R038			ALL
D01326		TS0293	0882/129/R038			ALL
D01336		TS0295	0878/119/R040			ALL
D02142		TS0430	0882/119/R030			ALL
D02154		TS0432	0870/130/R055			ALL
D00724		V00019	0875/118/R032			ALL
D01568		V00132	0867/123/R044			ALL
W0958	N2	FORWARD CARGO DOOR (HINGE)-LTS,SENSORS,DOOR CONTROL				
D04306P			0479/191/R081	D04306J	W0660	ALL
D06266P			0515/181/R087	D06266J	W0960	ALL

MASTER BUNDLE LIST

D280T132

91-21-13
Section W0950
Page 1 End
Sep 04/2008



767-200/300 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0960	R2	FWD CARGO DOOR-LTS,SENSORS,DOOR CONTROL				
D06266J			0515/181/R087	D06266P	W0958	ALL
D01994			D0504/183/R084			050-099
D01994		M00629 FWD				150-199, 275-299
D01996		M00630	0548/130/R058			ALL
W0962	R1	AFT CARGO DOOR-LTS,SENSORS,DOOR CONTROL				
D04314J				D04314P	W0662	ALL
D02000		M00632	1310/170/R080			ALL
W0964	R2	AUTOBRAKE,BRAKE PRESS,ACHP PRESS SW #2				
D04954P		AL1004	POS 01	D04954J	W0656	ALL
D02196		M00239	0965/175/L003			ALL
D02198		M00239	0965/175/L003			ALL
D02200		M00239	0965/175/L003			ALL
D02202		M00239	0965/175/L003			ALL
D00476		S00034	1026/155/R007			ALL
D01992		TS0090	1060/125/R003			ALL
D00946		TS0204	//			ALL
D00948		TS0205	//			ALL
W0966	R2	POTABLE WTR & LAV VACUUM WASTE SYSTEM				
D00612		M00964	1568/162/L029			ALL
D01176		P022-00	1540/250/R060			ALL
D03446		TS0167	1570/186/R031			ALL
D12214		V00386	1567/195/0000			156-157, 166-199, 275-299
D12216		V00387	1572/195/0000			156-157, 166-199, 275-299
W0968	L2	HYD SYS C QTY AND TEMP XMTR				
D04946P		AL1004	POS 10	D04946J	W1246	ALL
D00556		M00339	1009/174/R017			ALL
D00552		M00345	1012/173/R013			ALL

MASTER BUNDLE LIST

D280T132

91-21-13

Section W0960

Page 1 End

Aug 05/2009



767-200/300 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0974	L2	RAIN REPELLENT,WINDSHIELD WIPERS-L				
D04704P		AF0119	POS 08	D04704J	W0584	ALL
D00562		M00237	0137/230/0006			ALL
D00564		V00027	//			ALL
W0976	R2	RAIN REPELLENT,WINDSHIELD WIPERS-R				
D04706P		AF0120	POS 23	D04706J	W0586	ALL
D00570		M00238	0137/230/0006			ALL
D00572		V00028	//			ALL
W0978	L2	OUTFLOW VALVE L				
D04698P		AC0701	POS 02	D04698J	W0654	ALL
D00566		S00500	1512/173/R067			ALL
D01850		TS0297	1512/170/R067			050-099, 150-199
D00704		V00015	1550/148/L049			ALL

MASTER BUNDLE LIST

D280T132

91-21-13

Section W0970

Page 1 End

Mar 09/2006



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0980	L1	CARGO HT-FWD FLOW CONTROL VALVE				
D04620P		AC0702	POS 12	D04620J	W0578	ALL
W0982	R1	CARGO HT-FWD SHUTOFF VALVE				
D04636P		AC0702	POS 06	D04636J	W0580	ALL
D01272		V00017	0896/123/R064			ALL
D01276		V00017	0896/123/R064			ALL
D01278		V00017	0896/123/R064			ALL
D01602		V00017	0896/123/R064			ALL
D02764		V00089	0935/128/R014			ALL
W0984	S2	P4 TO L WING/BODY DISC-CABIN PRESS SYS				
D08060J		AC0701	POS 01	D08060P	W0998	ALL
D05654P		AE0209	POS 04	D05654J	W0184	ALL
D08054P		AF0204	POS 75	D08054J	W0070	ALL
D10424		S00613	0325/188/L002			ALL
D03060		V00140	0395/174/L083			ALL
W0986	L2	L AIR COND CONTROL				
D08004P		AE0305	POS 02	D08004J	W0942	ALL
D06074P		AE0319	POS 03	D06074J	W0942	ALL
D06312P		AE0319	POS 06	D06312J	W0264	ALL
D00446		B00010	0402/179/L078			ALL
D00644		S00041	0384/187/L085			ALL
D13594		S00794	0660/175/L070			ALL
D02794		TS0200	0768/126/L015			ALL
D13586		TS0496	0620/175/L070			ALL
D13602		TS0497	0620/175/L070			ALL
D00652		V00010	0428/117/L013			ALL
D00654		V00012	0473/116/R004			ALL
D03076		V00091	0567/187/L075			ALL
D13564		V00382	0395/117/L025			ALL

MASTER BUNDLE LIST

D280T132

91-21-13

Section W0980

Page 1 End

Aug 05/2009



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0998	S2	OUTFLOW VALVE-CABIN PRESSURE SYSTEM				
D08060P		AC0701	POS 01	D08060J	W0984	ALL
D00744		V00015	1550/148/L049			ALL



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W1003	L2	SATCOM SYSTEM , E10 SHELF				
D02651B			//			156-157, 166-199, 277-299
D02651C			//			156-157, 166-199, 277-299
D02651A			SHELF/E10/			156-157, 166-199, 277-299
D06167J		AP1001	POS 02	D06167P	W0809	156-157, 166-199, 277-299
D02651		M1782				156-157, 166-199, 277-299

MASTER BUNDLE LIST

D280T132

91-21-13

Section W1000

Page 1 End

Jun 06/2008



767-200/300 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W1011	L2	SATCOM SYSTEM , E11,SHELF				
D02653A			//			156-157, 166-199, 277-299
D02653B			//			156-157, 166-199, 277-299
D02653C			//			156-157, 166-199, 277-299
D06163J		AP1101	POS 02	D06163P	W0815	156-157, 166-199, 277-299
D02653		M1783				156-157, 166-199, 277-299
W1013	N2	COAX-SATCOM,LGA TO LNA/DIP				
D02679		M1791				167-199
D02995		M1804				167-199

MASTER BUNDLE LIST

D280T132

91-21-13

Section W1010

Page 1 End

Mar 09/2006



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W1026	L1	P6-L1-L GEN PWR DISTRIBUTION				
D08128J		AE0222	POS 13	D08128P	W0276	ALL
D04116J		AE0222	POS 14	D04116P	W0252	ALL
D04086J		AF0232	POS 09	D04086P	W0276	ALL
D04088J		AF0232	POS 10	D04088P	W0276	ALL
D06448J		AF0232	POS 28	D06448P	W1340	ALL
D06444J		AF0232	POS 29	D06444P	W1340	ALL
D00894		M01079	P006-04/ /			ALL

MASTER BUNDLE LIST

D280T132

91-21-13

Section W1020

Page 1 End

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W1030	R1	P6-R1-R GEN PWR DISTRIBUTION				
D04120J		AE0222	POS 07	D04120P	W0254	ALL
D05858J		AE0222	POS 08	D05858P	W0272	ALL
D05868J		AE0222	POS 10	D05868P	W0272	ALL
D04090J		AF0232	POS 04	D04090P	W0280	ALL
D04092J		AF0232	POS 05	D04092P	W0280	ALL
W1035	L*	E8 SHELF-EICAS UPPER DU SWITCHING MODULE				
D05055J		AE0221	POS 01	D05055P	W1435	ALL
D00875		M10417	SHELF/E08/00			ALL
W1037	R*	E8 SHELF-EICAS LOWER DU SWITCHING MODULE				
D05057J		AE0221	POS 03	D05057P	W1437	ALL
D00877		M10418	SHELF/E08/00			ALL
W1038	R1	E6-R1-APU CONTROL				
D06394P			P049-00/ /	D06394J	W0030	ALL
D00298		M00207	SHELF/E06/01			ALL
D00302		M00208	SHELF/E06/01			ALL
W1039	L*	E8 SHELF-EICAS F/E DU SWITCHING MODULE				
D06980J		AE0221	POS 07	D06980P	W1702	155-157, 166-199, 277-299
D06966J		AE0221	POS 08	D06966P		155-157, 166-199, 277-299
D06968J		AE0221	POS 09	D06968P	W0738	155-157, 166-199, 277-299
D06970J		AE0221	POS 10	D06970P	W0942	155-157, 166-199, 277-299

MASTER BUNDLE LIST

D280T132

91-21-13

Section W1030

Page 1 End

Mar 09/2006



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W1040	S1	P6-S1-STANDBY PWR DISTRIBUTION				
D04094J		AF0232	POS 14	D04094P	W0278	ALL
D04096J		AF0232	POS 17	D04096P	W0278	ALL
D04124J		AF0232	POS 18	D04124P	W0256	ALL
D00324		K00105	P006-01/ /			ALL
D03252		K00109	P006-01/ /			ALL
W1043	L2	COAX-SATCOM,M1782 HPA TO AP1101 (LNA OR HPR)				
D06183J			AP1001/ /	D06183P	W9119	156-157, 166-199
D06183J		AP1001	POS 03	D06183P	W1927	277-299
W1045	L2	COAX-SATCOM,M1783 HPA TO AP1101 (LNA/DIP)				
D06181J		AP1101	POS 03	D06181P	W1935	156-157, 166-199, 277-299
W1047	L2	COAX-SATCOM,M1783 HPA TO AP1101 (SPLITTER)				
D06179J		AP1101	POS 01	D06179P		156-157, 166-199
D06179J		AP1101	POS 01	D06179P	W1913	277-299



767-200/300 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W1050	A1	P49-A1-APU BATT BUS DISTRIBUTION				
D06396J			P049-00/ /	D06396P	W0020	ALL
D00326		K00176	P049-00/ /			ALL
D01834		K00197	P049-00/ /			ALL
D01264		K00547	P049-00/ /			ALL
D01074		K00615	P049-00/ /			275-299
D01008		K00616	P049-00/ /			275-299
D00998		K00617	P049-00/ /			275-299
D01000		K00619	P049-00/ /			275-299
D01076		T00189	SHELF/E06/02			275-299
W1051	L2	E1-3 SHELF,L ILS LOC COAX				
D04045J		W0263		D04045P	W0263	ALL
W1052	L2	P7 INTEG PNL LEFT SIDE				
D04982P		AF0117	POS 01	D04982J	W0051	050-099, 150-154, 162-164, 275-276
D04982P		AF0117	POS 02	D04982J	W0051	155-157, 165-199, 277-299
D05014P		AF0117	POS 02	D05014J	W0011	050-099, 150-154, 162-164, 275-276
D04867P		AF0117	POS 03	D04867J	W0731	050-099, 150-154, 162-164, 275-276
D05014P		AF0117	POS 03	D05014J	W0011	155-157, 165-199, 277-299
D04867P		AF0117	POS 04	D04867J	W0731	155-157, 165-199, 277-299
D05016P		AF0117	POS 05	D05016J	W0031	050-099, 150-154, 162-164, 275-276
D05016P		AF0117	POS 06	D05016J	W0031	155-157, 165-199, 277-299
D00584		L00049	P007-00/ /			ALL
D00586		L00050	P007-00/ /			ALL
W1053	L2	E1-3 SHELF,L ILS G/S COAX				
D04047J		W0267		D04047P	W0267	ALL
W1054	R2	P7 INTEG PNL RIGHT SIDE				
D04984P		AF0118	POS 01	D04984J	W0051	050-099, 150-154, 162-164, 275-276

MASTER BUNDLE LIST

D280T132

91-21-13

Section W1050

Page 1

Jun 28/2006



767-200/300 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W1054	R2	P7 INTEG PNL RIGHT SIDE (continued)				
D04984P		AF0118	POS 02	D04984J	W0051	155-157, 165-199, 277-299
D05020P		AF0118	POS 02	D05020J	W0031	050-099, 150-154, 162-164, 275-276
D04869P		AF0118	POS 03	D04869J	W0733	050-099, 150-154, 162-164, 275-276
D05020P		AF0118	POS 03	D05020J	W0031	155-157, 165-199, 277-299
D04869P		AF0118	POS 04	D04869J	W0733	155-157, 165-199, 277-299
D05018P		AF0118	POS 05	D05018J	W0011	050-099, 150-154, 162-164, 275-276
D05018P		AF0118	POS 06	D05018J	W0011	155-157, 165-199, 277-299
D00588		L00051	P007-00/ /			ALL
W1055	C2	E1-4 SHELF,C ILS LOC COAX				
D04059J		W0271		D04059P	W0271	ALL
W1056	S2	FUELING PANEL P28				
D04744J		AW0601	POS 01	D04744P	W0472	ALL
D04746J		AW0601	POS 02	D04746P	W0472	ALL
D03056		M00638	P028-00/ /			ALL
D01622		N00092	P028-00/ /			ALL
D01624		N00093	P028-00/ /			ALL
D01626		N00094	P028-00/ /			ALL
W1057	C2	E1-4 SHELF,C ILS G/S COAX				
D04057J		W0275		D04057P	W0275	ALL
W1058	L2	P19 INTEGRATION				
D05178J		AP0401	POS 04	D05178P	W1216	ALL
D05160J		AP0401	POS 08	D05160P	W0820	ALL
D08080J		AP0403	POS 01	D08080P	W0798	ALL
W1059	R2	E1-5 SHELF,R ILS LOC COAX				
D04049J		W0279		D04049P	W0279	ALL

MASTER BUNDLE LIST

D280T132

91-21-13

Section W1050

Page 2 End

Jun 28/2006



767-200/300 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W1060	R2	P19 INTEGRATION				
D05088J		AP0401	POS 01	D05088P	W1222	ALL
D05170J		AP0401	POS 05	D05170P	W1230	ALL
D06410J		AP0401	POS 06	D06410P	W0832	ALL
D05090J		AP0401	POS 09	D05090P	W1226	ALL
D04290J		AP0401	POS 10	D04290P	W1224	ALL
D05082J		AP0403	POS 02	D05082P	W0786	ALL
D05138J		AP0403	POS 07	D05138P	W1234	ALL
D05076J		AP0403	POS 08	D05076P	W0784	ALL
D06412J		AP0403	POS 10	D06412P	W0834	ALL
D05182J		AP0403	POS 12	D05182P	W0800	ALL
D05166J		AP0403	POS 13	D05166P	W0804	ALL
D05162J		AP0403	POS 17	D05162P	W0802	ALL
D05148J		AP0403	POS 19	D05148P	W1236	ALL
D00108		K00069	P019-00/ /			ALL
D03558		K00358	P019-00/ /			ALL
D03572		K00370	P019-00/ /			ALL
D03574		K00371	P019-00/ /			ALL
D03602		K00380	P019-00/ /			ALL
D03556		K00381	P019-00/ /			ALL
D03560		K00383	P019-00/ /			ALL
D02254		K00384	P019-00/ /			ALL
D02256		K00385	P019-00/ /			ALL
D03604		K00417	P019-00/ /			ALL
D03606		K00418	P019-00/ /			ALL
D01758		K00524	P019-00/ /			ALL
D10320		K00642	P019-00/ /			ALL
D10468		K00767	P019-00/ /			ALL
D10734		K00838	P019-00/ /			ALL
D10736		K00839	P019-00/ /			ALL
D10794		K00866	P019-00/ /			ALL
D10898		K00889	P019-00/ /			ALL
D11922		K01140	P019-00/ /			050-099, 150-199, 280-299
D13358		K01201	P019-00/ /			050-099, 150-199
D13360		K01202	P019-00/ /			050-099, 150-199
D13362		K01203	P019-00/ /			050-099, 150-199
W1061	R2	E1-5 SHELF,R ILS G/S COAX				
D04051J		W0283		D04051P	W0283	ALL

MASTER BUNDLE LIST

D280T132

91-21-13

Section W1060

Page 1

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W1063	L2	E2-2 SHELF,L ATC TOP ANT COAX				
D04093P		AE0322	POS 18	D04093J	W1905	ALL
W1064	R2	P25 INTEGRATION				
D05084J		AP1003	POS 04	D05084P	W0788	ALL
D05154J		AP1003	POS 05	D05154P	W1240	ALL
D05104J		AP1003	POS 08	D05104P	W0806	050-099
D06414J		AP1003	POS 09	D06414P	W0836	ALL
D05086J		AP1003	POS 10	D05086P	W0790	ALL
D05108J		AP1003	POS 15	D05108P	W0810	050-099
D05150J		AP1005	POS 05	D05150P	W1236	ALL
D05078J		AP1005	POS 06	D05078P	W0784	ALL
D05080J		AP1005	POS 09	D05080P	W0786	ALL
D05184J		AP1005	POS 10	D05184P	W0800	050-099
D05168J		AP1005	POS 13	D05168P	W0804	050-099
D05144J		AP1005	POS 14	D05144P	W1234	ALL
D02896		K00082	P025-00/ /			ALL
D00090		K00083	P025-00/ /			ALL
D00082		K00315	P025-00/ /			ALL
D00084		K00316	P025-00/ /			ALL
D00086		K00317	P025-00/ /			275-299
D03608		K00382	P025-00/ /			ALL
D10796		K00867	P025-00/ /			ALL
D13394		K01218	P025-00/ /			050-099, 150-199
D72042		K01321	P025-00/ /			280-299
D12084		K1257				275-299
D03640		T00150	P025-00/ /			ALL
D03642		T00177	P025-00/ /			ALL
D13558		T00233	P025-00/ /			050-099, 150-199
W1065	L2	E2-2 SHELF,L ATC BOTTOM ANT COAX				
D04081P		AE0322	POS 13	D04081J	W1907	ALL
W1066	R2	FWD CARGO LOADING ACCESSORY PANEL P35				
D08547			P035-00/ /			ALL
D05222J		AC0506	POS 01	D05222P	W0704	ALL
D05218J		AC0506	POS 02	D05218P	W0702	ALL
D05224J		AC0506	POS 03	D05224P	W0704	ALL
D05614J		AC0506	POS 04	D05614P	W0616	ALL
D05220J		AC0506	POS 05	D05220P	W0704	ALL

MASTER BUNDLE LIST

D280T132

91-21-13

Section W1060

Page 2

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W1066	R2	FWD CARGO LOADING ACCESSORY PANEL P35 (continued)				
D05216J		AC0506	POS 06	D05216P	W0700	ALL
D08070J		AC0506	POS 07	D08070P	W0916	ALL
D04304J		AC0506	POS 08	D04304P	W0660	ALL
D05214J		AC0506	POS 09	D05214P	W0606	ALL
D05886J		AC0506	POS 10	D05886P	W1134	ALL
D02528		K00030	P035-00/ /			ALL
D02504		K00031	P035-00/ /			ALL
D02502		K00032	P035-00/ /			ALL
D02508		K00033	P035-00/ /			ALL
D02506		K00034	P035-00/ /			ALL
D02468		K00076	P035-00/ /			050-099
D02470		K00077	P035-00/ /			050-099
D02448		K00246	P035-00/ /			ALL
D02446		K00247	P035-00/ /			ALL
D02442		K00256	P035-00/ /			050-099
D02440		K00257	P035-00/ /			050-099
D02444		K00262	P035-00/ /			ALL
D02460		K00264	P035-00/ /			ALL
D02456		K00265	P035-00/ /			ALL
D02458		K00266	P035-00/ /			ALL
D02454		K00267	P035-00/ /			ALL
D02472		K00268	P035-00/ /			ALL
D02476		K00270	P035-00/ /			ALL
D02488		K00274	P035-00/ /			150-199, 275-299
D02490		K00275	P035-00/ /			ALL
D02492		K00277				ALL
D02520		K00331	P035-00/ /			ALL
D02522		K00332	P035-00/ /			ALL
D02524		K00333	P035-00/ /			ALL
D02526		K00334	P035-00/ /			ALL
D01608		K00488	P035-00/ /			ALL
D01390		K00489	P035-00/ /			ALL
D02466		K00506	P035-00/ /			ALL
D01684		K00542	P035-00/ /			ALL
D01686		K00543	P035-00/ /			ALL
D02632		K00553	P035-00/ /			ALL
D02450		K00576	P035-00/ /			ALL
D02452		K00577	P035-00/ /			ALL
D02430		K00578	P035-00/ /			ALL
D02432		K00579	P035-00/ /			ALL

MASTER BUNDLE LIST

D280T132

91-21-13

Section W1060

Page 3

Mar 09/2006



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W1066	R2	FWD CARGO LOADING ACCESSORY PANEL P35 (continued)				
D01288		K00580	P035-00/ /			ALL
D02434		K00581	P035-00/ /			ALL
D02436		K00582	P035-00/ /			ALL
D02438		K00583	P035-00/ /			ALL
D02494		K00584	P035-00/ /			050-099
D02496		K00585	P035-00/ /			050-099
D02478		K00589	P035-00/ /			ALL
D01518		K00590	P035-00/ /			ALL
D02484		K00591	P035-00/ /			ALL
D02488		K00592	P035-00/ /			050-099
D11704		K00592	P035-00/ /			150-199, 275-299
D01314		K00593	P035-00/ /			050-099
D02462		K00595	P035-00/ /			ALL
D02464		K00596	P035-00/ /			ALL
D01284		K00600	P035-00/ /			ALL
D10592		K00795	P035-00/ /			ALL
D10594		K00796	P035-00/ /			ALL
D10596		K00797	P035-00/ /			ALL
D10598		K00798	P035-00/ /			ALL
D10600		K00799	P035-00/ /			ALL
D10602		K00800	P035-00/ /			ALL
D10604		K00801	P035-00/ /			ALL
D10606		K00802	P035-00/ /			ALL
D10608		K00803	P035-00/ /			ALL
D10610		K00812	P035-00/ /			ALL
D10612		K00813	P035-00/ /			ALL
D10614		K00814	P035-00/ /			ALL
D10616		K00821	P035-00/ /			ALL
D11146		K00923 BAY				150-199, 275-299
D11148		K00924 BAY				150-199, 275-299
D11150		K00925	P035-00/ /			150-199, 275-299
D11620		K00979	P035-00/ /			ALL
D11630		K00980	P035-00/ /			ALL
D11626		K00981	P035-00/ /			ALL
D11624		K00982	P035-00/ /			ALL
D11628		K00983	P035-00/ /			ALL
D11616		K00991	P035-00/ /			150-199, 275-299
D11678		K00992	P035-00/ /			150-199, 275-299
D11680		K00993	P035-00/ /			150-199, 275-299
D11682		K00994	P035-00/ /			150-199, 275-299

MASTER BUNDLE LIST

D280T132

91-21-13

Section W1060

Page 4

Jan 21/2005



767-200/300 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W1066	R2	FWD CARGO LOADING ACCESSORY PANEL P35 (continued)				
D11684		K00995	P035-00/ /			150-199, 275-299
D11666		K00996	P035-00/ /			150-199, 275-299
D11632		K01000	P035-00/ /			ALL
D11850		K01082	P035-00/ /			ALL
D13048		K01112 PDU				150-199, 275-299
D13050		K01113 PDU				150-199, 275-299
W1067	L2	E2-2 SHELF,L DME COAX				
D04101P		AE0322	POS 14	D04101J	W0337	ALL
W1068	R2	AFT CARGO LOADING ACCESSORY PANEL P39				
D08555			P039-00/ /			ALL
D05256J		AC1304	POS 01	D05256P	W0710	ALL
D05252J		AC1304	POS 02	D05252P	W0708	ALL
D05258J		AC1304	POS 03	D05258P	W0710	ALL
D05616J		AC1304	POS 04	D05616P	W0616	ALL
D05254J		AC1304	POS 05	D05254P	W0710	ALL
D05250J		AC1304	POS 06	D05250P	W0706	ALL
D08072J		AC1304	POS 07	D08072P	W0916	ALL
D04312J		AC1304	POS 08	D04312P	W0662	ALL
D05888J		AC1304	POS 10	D05888P	W1136	ALL
D02514		K00036	P039-00/ /			ALL
D02512		K00037	P039-00/ /			ALL
D02518		K00038	P039-00/ /			ALL
D02516		K00039	P039-00/ /			ALL
D02510		K00040	P039-00/ /			ALL
D02578		K00041	P039-00/ /			ALL
D02568		K00073	P039-00/ /			050-099
D02570		K00074	P039-00/ /			050-099
D02548		K00279	P039-00/ /			ALL
D02546		K00280	P039-00/ /			ALL
D02552		K00281	P039-00/ /			ALL
D02550		K00282	P039-00/ /			ALL
D02532		K00283	P039-00/ /			ALL
D02530		K00284	P039-00/ /			ALL
D02536		K00285	P039-00/ /			050-099
D02534		K00286	P039-00/ /			050-099
D02542		K00287	P039-00/ /			050-099
D02540		K00288	P039-00/ /			050-099

MASTER BUNDLE LIST

D280T132

91-21-13

Section W1060

Page 5

Mar 09/2006



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W1068	R2	AFT CARGO LOADING ACCESSORY PANEL P39 (continued)				
D02538		K00289	P039-00/ /			050-099
D02544		K00292	P039-00/ /			ALL
D02560		K00294	P039-00/ /			ALL
D02556		K00295	P039-00/ /			ALL
D02558		K00296	P039-00/ /			ALL
D02554		K00297	P039-00/ /			ALL
D02572		K00298	P039-00/ /			ALL
D02580		K00300	P039-00/ /			ALL
D02582		K00301	P039-00/ /			050-099
D02584		K00302	P039-00/ /			050-099
D02588		K00303	P039-00/ /			ALL
D02576		K00304	P039-00/ /			ALL
D02628		K00422	P039-00/ /			ALL
D02630		K00423	P039-00/ /			ALL
D02562		K00490	P039-00/ /			050-099, 150-199
D02564		K00491	P039-00/ /			050-099, 150-199
D02566		K00507	P039-00/ /			ALL
D01784		K00544	P039-00/ /			ALL
D01786		K00545	P039-00/ /			ALL
D10630		K00804	P039-00/ /			ALL
D10632		K00805	P039-00/ /			ALL
D10634		K00806	P039-00/ /			ALL
D10636		K00807	P039-00/ /			ALL
D10638		K00808	P039-00/ /			050-099, 150-199
D10640		K00809	P039-00/ /			050-099, 150-199
D10642		K00810	P039-00/ /			050-099, 150-199
D10620		K00816	P039-00/ /			ALL
D10622		K00817	P039-00/ /			ALL
D10624		K00818	P039-00/ /			ALL
D10626		K00819	P039-00/ /			ALL
D10628		K00820	P039-00/ /			ALL
D11180		K00905 BAY				150-199, 275-299
D11182		K00906 BAY				150-199, 275-299
D11184		K00907 PDU				150-199, 275-299
D11186		K00908 BAY				150-199, 275-299
D11188		K00909 PDU				150-199, 275-299
D11190		K00910 PDU				150-199, 275-299
D11192		K00911 PDU				150-199, 275-299
D11194		K00912 PDU				150-199, 275-299
D11196		K00913 PDU				150-199, 275-299

MASTER BUNDLE LIST

D280T132

91-21-13

Section W1060

Page 6

Jan 21/2005



767-200/300 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W1068	R2	AFT CARGO LOADING ACCESSORY PANEL P39 (continued)				
D11198		K00914 PDU				150-199, 275-299
D11200		K00915	P039-00/ /			150-199, 275-299
D11202		K00916 PDU				150-199, 275-299
D11204		K00917 PDU				150-199, 275-299
D11206		K00918 PDU				150-199, 275-299
D11208		K00926 PDU				150-199, 275-299
D11668		K00998	P039-00/ /			ALL
D11662		K00999	P039-00/ /			ALL
D11660		K01001	P039-00/ /			ALL
D11664		K01004	P039-00/ /			ALL
D11852		K01083	P039-00/ /			ALL
W1069	R2	E2-3 SHELF,R ATC BOTTOM ANT COAX				
D04085P		AE0322	POS 35	D04085J	W1909	ALL

MASTER BUNDLE LIST

D280T132

91-21-13

Section W1060

Page 7 End

Mar 09/2006



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W1071	R2	E2-3 SHELF,R DME COAX				
D04105P		AE0322	POS 36	D04105J	W0341	ALL
W1073	N1	E2-5 SHELF,L VHF COAX				
D04009P		AE0322	POS 58	D04009J	W0249	ALL
W1075	N1	E2-5 SHELF,R VHF COAX				
D04013P		AE0322	POS 57	D04013J	W0253	ALL
W1077	N1	E2-5 SHELF,C VHF COAX				
D04017P		AE0322	POS 52	D04017J	W0257	ALL
W1078	L2	ELECTRICAL SYSTEMS CARD FILE P50				
D08112J		AE0202	POS 01	D08112P	W0942	ALL
D08068J		AE0202	POS 02	D08068P	W0572	ALL
D05277J		AE0202	POS 06	D05277P	W0697	ALL
D08030J		AE0202	POS 07	D08030P	W0756	ALL
D04978J		AE0202	POS 12	D04978P	W0510	ALL
D05209J		AE0202	POS 13	D05209P	W0451	ALL
D02160		M00590	P050-00/ /			ALL
D02672		M00838	P050-00/ /			ALL
D01886		M00859	P050-00/ /			ALL
D03742		M00861	P050-00/ /			ALL
D03738		M10404	P050-00/ /			ALL
W1079	N1	E2-6 SHELF,HF-L COAX				
D04001P		AE0322	POS 61	D04001J	W0241	ALL

MASTER BUNDLE LIST

D280T132

91-21-13

Section W1070

Page 1 End

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W1080	R2	ELECTRICAL SYSTEMS CARD FILE P50				
D05552J		AE0202	POS 04	D05552P	W0506	ALL
D08032J		AE0202	POS 05	D08032P	W0768	ALL
D05644J		AE0202	POS 10	D05644P	W0506	ALL
D05766J		AE0202	POS 11	D05766P	W0506	ALL
D04809J		AE0202	POS 16	D04809P	W0453	ALL
D04887J		AE0202	POS 17	D04887P	W0413	ALL
D02162		M00591	P050-00/ /			ALL
D02676		M00840	P050-00/ /			ALL
D01876		M00860	P050-00/ /			ALL
D01874		M00862	P050-00/ /			ALL
D01868		M00864	P050-00/ /			ALL
D01872		M00867	P050-00/ /			ALL
D02176		M00990	P050-00/ /			ALL
D01870		M10403	P050-00/ /			ALL
W1081	N1	E2-6 SHELF,HF-R COAX				
D04005P		AE0322	POS 62	D04005J	W0245	ALL
W1082	S2	FIRE DETECTION CARD FILE P54				
D07994J		AE0226	POS 01	D07994P	W0606	ALL
D07992J		AE0226	POS 02	D07992P	W0596	ALL
D05546J		AE0226	POS 03	D05546P	W1718	ALL
D07990J		AE0226	POS 04	D07990P	W0614	ALL
D04002J		AE0226	POS 05	D04002P	W0510	ALL
D07996J		AE0226	POS 06	D07996P	W0598	ALL
D05540J		AE0226	POS 07	D05540P	W1704	ALL
D05548J		AE0226	POS 08	D05548P	W1720	ALL
D02832		M00681	P054-00/ /			ALL
D02838		M00682	P054-00/ /			ALL
D02846		M00683	P054-00/ /			ALL
D02852		M00684	P054-00/ /			ALL
D02836		M00685	P054-00/ /			ALL
D02850		M00686	P054-00/ /			ALL
D02834		M00687	P054-00/ /			ALL
D02840		M00688	P054-00/ /			ALL
D02848		M00689	P054-00/ /			ALL
D02854		M00690	P054-00/ /			ALL
D02842		M00691	P054-00/ /			ALL
D10092		M10224	P054-00/ /			ALL

MASTER BUNDLE LIST

D280T132

91-21-13

Section W1080

Page 1

Mar 09/2006



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W1082	S2	FIRE DETECTION CARD FILE P54 (continued)				
D10094		M10274	P054-00/ /			ALL
D10096		M10400	P054-00/ /			ALL
D10098		M10427	P054-00/ /			ALL
W1083	L2	E2-2 SHELF,MKR BCN COAX				
D04069P		AE0322	POS 17	D04069J	W0309	ALL
W1084	S*	SHELF E1-1 INTEGRATION				
D02372A			//			ALL
D02372B			//			ALL
D04908P		AE0305	POS 01	D04908J	W0942	ALL
D04930P		AE0305	POS 03	D04930J	W0602	ALL
D04936P		AE0305	POS 33	D04936J	W0588	ALL
D04674P		AE0305	POS 35	D04674J	W0510	ALL
D04874P		AE0307	POS 53	D04874J	W0600	ALL
D05210P		AE0307	POS 79	D05210J	W0596	ALL
D05350P		AE0317	POS 01	D05350J	W0628	ALL
D05230P		AE0317	POS 02	D05230J	W0738	ALL
D05066P		AE0317	POS 33	D05066J	W0656	ALL
D04656P		AE0317	POS 34	D04656J	W0506	ALL
D02372		M00102	SHELF/E01/01			ALL
W1085	L2	E2-2 SHELF,L VOR COAX				
D04073P		AE0322	POS 09	D04073J	W0311	ALL
W1086	N2	MID CABIN PARTITION				
D06188P		AP0703	POS 07	D06188J	W1236	275-299
D06188P		AP0802E	POS 07	D06188J	W1236	050-099
D06188P		AP0901	POS 07	D06188J	W1236	150-199
D10174		P058-00	0918/260/L020			ALL
W1087	R2	E2-3 SHELF,R VOR COAX				
D04077P		AE0322	POS 25	D04077J	W0315	ALL
W1088	S2	EMERGENCY EVACUATION MID CABIN PARTITION				
D06026P			AP0901/ /	D06026J	W1252	150-199
D06026P		AP0703	POS 04	D06026J	W1252	275-299
D06026P		AP0802E	POS 05	D06026J	W1252	050-099

MASTER BUNDLE LIST

D280T132

91-21-13

Section W1080

Page 2

Aug 05/2009



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W1088	S2	EMERGENCY EVACUATION MID CABIN PARTITION (continued)				
D02972		M00883	0801/253/L010			ALL
W1089	L2	ATC L (COAX) TO B125,E2-2 SHELF				
D01331		B00125	SHELF/E02/02			ALL



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W1090	S*	E1-2 INTEGRATION				
D04751P		AE0307	POS 81	D04751J	W0721	ALL
D05646P		AE0319	POS 11	D05646J	W0264	ALL
D04565P		AE0319	POS 16	D04565J	W0619	ALL
W1091	L2	DME L (COAX) TO B125,E2-2 SHELF				
D01333		B00125	SHELF/E02/02			ALL
W1092	L*	E1-2 INTEGRATION				
D00248A			//			ALL
D00248B			//			ALL
D00248C			//			ALL
D00462A			//			ALL
D02166A			//			ALL
D02166B			//			ALL
D02166C			//			ALL
D02166D			//			ALL
D02166E			//			ALL
D02166F			//			ALL
D04676P		AE0305	POS 04	D04676J	W0510	ALL
D05554P		AE0305	POS 06	D05554J	W0602	ALL
D05167P		AE0305	POS 07	D05167J	W1251	ALL
D05368P		AE0305	POS 08	D05368J	W0756	ALL
D04912P		AE0305	POS 09	D04912J	W0654	ALL
D05544P		AE0305	POS 39	D05544J	W0588	ALL
D05370P		AE0305	POS 40	D05370J	W0756	ALL
D05434P		AE0305	POS 44	D05434J	W0754	ALL
D08202P		AE0307	POS 28	D08202J	W0908	150-199, 275-299
D05102P		AE0307	POS 29	D05102J	W0780	ALL
D05281P		AE0307	POS 56	D05281J	W1287	ALL
D05618P		AE0317	POS 05	D05618J	W0616	ALL
D05498P		AE0317	POS 08	D05498J	W0916	ALL
D05496P		AE0317	POS 37	D05496J	W0902	ALL
D05130P		AE0317	POS 40	D05130J	W1226	ALL
D05122P		AE0319	POS 10	D05122J	W1724	ALL
D04060P		AE0319	POS 18	D04060J	W0214	ALL
D08022P		AE0319	POS 19	D08022J	W0746	ALL
D04058P		AE0319	POS 20	D04058J	W0214	ALL
D08020P		AE0319	POS 30	D08020J	W0744	ALL
D10336		K00651	SHELF/E01/02			ALL

MASTER BUNDLE LIST

D280T132

91-21-13

Section W1090

Page 1

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W1092	L*	E1-2 INTEGRATION (continued)				
D10338		K00652	SHELF/E01/02			ALL
D10512		K00718	SHELF/E01/02			ALL
D10514		K00719	SHELF/E01/02			ALL
D10874		K00874	SHELF/E01/02			ALL
D10872		K00875	SHELF/E01/02			ALL
D00462		M00118	SHELF/E01/02			ALL
D00248		M00144	SHELF/E01/02			ALL
D02166		M00162	SHELF/E01/02			ALL
W1093	R2	ATC R (COAX) TO B124,E2-3 SHELF				
D01335		B00297	SHELF/E02/03			050-099, 150-199, 277-299
D01335		D01337T				275-276
W1095	R2	DME R (COAX) TO B124,E2-3 SHELF				
D01337		D01337T				ALL
W1096	C*	E1-2 INTEGRATION				
D04915P		AE0307	POS 55	D04915J	W1523	ALL
W1098	L*	E1-2 INTEGRATION				
D02916A			//			ALL
D02916B			//			ALL
D04292P		AE0305	POS 36	D04292J	W0622	ALL
D05344P		AE0305	POS 37	D05344J	W0622	ALL
D02916		M00191	SHELF/E01/02			ALL
W1099	R2	E2-3 SHELF,R ATC TOP ANT COAX				
D04097P		AE0322	POS 27	D04097J	W1903	ALL

MASTER BUNDLE LIST

D280T132

91-21-13

Section W1090

Page 2 End

Mar 09/2006



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W1100	R*	E1-2 INTEGRATION				
D05613J		AE0313	POS 09	D05613P	W0115	ALL
D05428P		AE0317	POS 03	D05428J	W0764	ALL
D05566P		AE0317	POS 06	D05566J	W0628	ALL
D04545P		AE0317	POS 07	D04545J	W0515	ALL
D04875P		AE0317	POS 10	D04875J	W1513	ALL
D05430P		AE0317	POS 36	D05430J	W0766	ALL
D04658P		AE0317	POS 38	D04658J	W0506	ALL
D05638P		AE0317	POS 39	D05638J	W0768	ALL
D06278P		AE0317	POS 41	D06278J	W0768	ALL
D05140P		AE0319	POS 12	D05140J	W1728	ALL
D05365P		AE0319	POS 14	D05365J	W0803	ALL
W1101	S*	E1-1 SHELF				
D05325J		AE0303	POS 02	D05325P	W0207	ALL
D05307J		AE0303	POS 15	D05307P	W1307	ALL
D05997J		AE0303	POS 16	D05997P	W1247	ALL
W1102	L1	P19 INTEGRATION				
D04282J		AP0401	POS 12	D04282P	W1232	ALL
D04326J		AP0403	POS 06	D04326P	W0792	ALL
D05072J		AP0403	POS 11	D05072P	W0794	050-099, 150-199
W1103	L*	E1-2 SHELF EF1S SG,L				
D00425A			//			ALL
D00425B			//			ALL
D00425C			//			ALL
D00425D			//			ALL
D00425E			//			ALL
D00425F			//			ALL
D00745A			//			ALL
D00745B			//			ALL
D00745C			//			ALL
D04281P		AE0305	POS 05	D04281J	W0201	ALL
D05205P		AE0305	POS 38	D05205J	W1503	ALL
D04923P		AE0305	POS 42	D04923J	W1603	ALL
D05223P		AE0305	POS 43	D05223J	W1603	ALL
D05603J		AE0313	POS 03	D05603P	W0105	ALL
D05653J		AE0313	POS 04	D05653P	W0105	ALL
D05101P		AE0319	POS 22	D05101J	W0731	ALL

MASTER BUNDLE LIST

D280T132

91-21-13

Section W1100

Page 1

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W1103	L*	E1-2 SHELF EF1S SG,L (continued)				
D05097P		AE0319	POS 24	D05097J	W0731	ALL
D04889P		AE0319	POS 25	D04889J	W0779	ALL
D04371P		AE0319	POS 26	D04371J	W1599	ALL
D05581P		AE0319	POS 28	D05581J	W0397	ALL
D05867P		AE0319	POS 29	D05867J	W1499	ALL
D00425		M00148	SHELF/E01/02			ALL
D00745		M00168	SHELF/E01/02			ALL
W1104	R1	P19 INTEGRATION				
D05134J		AP0401	POS 02	D05134P	W1228	ALL
D05114J		AP0403	POS 04	D05114P	W0814	ALL
D05912J		AP0403	POS 05	D05912P	W0822	ALL
D05808J		AP0403	POS 09	D05808P	W0812	ALL
D05110J		AP0403	POS 15	D05110P	W0812	ALL
D02892		K00079	P019-00/ /			ALL
D02894		K00081	P019-00/ /			ALL
D00092		K00321	P019-00/ /			ALL
D00094		K00322	P019-00/ /			ALL
D00096		K00323	P019-00/ /			275-299
D00100		K00325	P019-00/ /			275-299
D00104		K00364	P019-00/ /			ALL
D00106		K00365	P019-00/ /			ALL
D10766		K00846	P019-00/ /			ALL
D13356		K01200	P019-00/ /			050-099, 150-199
D13370		K01208	P019-00/ /			050-099, 150-199
D13372		K01209	P019-00/ /			050-099, 150-199
W1106	L1	P25 INTEGRATION				
D05954J		AP1003	POS 03	D05954P		150-154
D05954J		AP1003	POS 03	D05954P	W1276	275-299
D05070J		AP1005	POS 02	D05070P	W0792	ALL
W1108	R1	P25 INTEGRATION				
D05120J		AP1003	POS 02	D05120P	W0818	ALL
D05118J		AP1003	POS 07	D05118P	W0816	ALL
D05096J		AP1003	POS 12	D05096P	W0828	ALL
D06742J		AP1003	POS 13	D06742P	W0828	050-099, 150-199
D05916J		AP1003	POS 14	D05916P	W0824	ALL
D05914J		AP1005	POS 03	D05914P	W0822	ALL

MASTER BUNDLE LIST

D280T132

91-21-13

Section W1100

Page 2

Mar 09/2006



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W1108	R1	P25 INTEGRATION (continued)				
D05116J		AP1005	POS 04	D05116P	W0814	ALL
D06736J		AP1005	POS 07	D06736P	W0812	050-099, 150-199
D05112J		AP1005	POS 08	D05112P	W0812	ALL
D00130		K00327	P025-00/ /			ALL
D00132		K00328	P025-00/ /			ALL
D11082		K00902	P025-00/ /			ALL
D11084		K00903	P025-00/ /			ALL
D13364		K01204	P025-00/ /			050-099, 150-199
D13368		K01205	P025-00/ /			050-099, 150-199
D12218		K01260	P025-00/ /			050-099, 162-199
D12220		K01261	P025-00/ /			050-099, 162-199
W1109	N2	ATTENDANT CALL LIGHT-RIGHT				
D06051P			0639/295/R 16	D06051J	W0665	050-099, 150-199



767-200/300 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W1110	S2	P19 INTEGRATION				
D05710J		AP0401	POS 03	D05710P	W0712	ALL
D05448J		AP0401	POS 07	D05448P	W0714	ALL
D08094J		AP0401	POS 11	D08094P	W1248	ALL
D05740J		AP0403	POS 03	D05740P	W0718	ALL
D05746J		AP0403	POS 14	D05746P	W0722	ALL
D08098J		AP0403	POS 18	D08098P	W1252	ALL
D05750J		AP0403	POS 20	D05750P	W0720	ALL
D00138		K00004	P019-00/ /			ALL
D00136		K00007	P019-00/ /			ALL
D00144		K00008	P019-00/ /			ALL
D00142		K00042	P019-00/ /			ALL
D00140		K00455	P019-00/ /			ALL
D00134		K00466	P019-00/ /			ALL
D10798		K00868	P019-00/ /			ALL
W1111	N2	ATTENDANT CALL LIGHT-LEFT				
D06053P			0639/295/L 16	D06053J	W0665	050-099, 150-199
W1112	S2	P25 INTEGRATION				
D05736J		AP1003	POS 01	D05736P	W0724	050-099
D05730J		AP1003	POS 06	D05730P	W0726	050-099
D05728J		AP1003	POS 11	D05728P	W0728	050-099
D08102J		AP1003	POS 16	D08102P	W1254	ALL
D08100J		AP1005	POS 12	D08100P	W1252	ALL
D05752J		AP1005	POS 16	D05752P	W0720	050-099
W1113	N2	ATTENDANT CALL LIGHT-LEFT				
D06057P				D06057J	W0665	277-299
D06057P			0888/295/L 14	D06057J	W0665	050-099, 150-154, 156, 162-199
W1114	S2	ELECTRICAL SYSTEMS CARD FILE P50				
D08036J		AE0202	POS 03	D08036P	W0596	ALL
D08038J		AE0202	POS 09	D08038P	W0598	ALL
D04885J		AE0202	POS 14	D04885P	W0411	ALL
D08028J		AE0202	POS 15	D08028P	W0264	ALL
D01882		M00586	P050-00/ /			ALL
D02674		M00839	P050-00/ /			ALL
D02246		M01057	P050-00/ /			ALL

MASTER BUNDLE LIST

D280T132

91-21-13

Section W1110

Page 1

Aug 05/2009



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W1114	S2	ELECTRICAL SYSTEMS CARD FILE P50 (continued)				
D10062		M01092	P050-00/ /			ALL
D10064		M01093	P050-00/ /			ALL
D08028		POS 15				051-099
W1115	N2	ATTENDANT CALL LIGHT-RIGHT				
D06055P				D06055J	W0665	277-299
D06055P			0860/295/R 14	D06055J	W0665	050-099, 150-154, 156, 162-199
W1116	R2	R WW SERVICE PNL-P56				
D08553			0953/115/R035			ALL
D05810J			P056-00/ /	D05810P	W0932	ALL
W1117	N2	ATTENDANT CALL LIGHT-LEFT				
D06059P			1197+52/295/L 14	D06059J	W0665	050-099, 150-199
W1118	R1	P37-R1A-INTEGRATION				
D08064J		AE0218	POS 33	D08064P	W0274	ALL
D06658J		AE0218	POS 37	D06658P	W0942	ALL
D05962J		AE0218	POS 39	D05962P	W0272	275
D05862J		AE0218	POS 40	D05862P	W0272	ALL
D04296J		AE0218	POS 44	D04296P	W0624	ALL
D05760J		AE0218	POS 45	D05760P	W0580	ALL
D04924J		AE0218	POS 48	D04924P	W0580	ALL
D04922J		AE0218	POS 49	D04922P	W0580	ALL
D04412J		AE0224	POS 01	D04412P	W0206	ALL
D05692J		AE0224	POS 08	D05692P	W1258	ALL
D02278		K00224	P037-00/ /			ALL
D02280		K00225	P037-00/ /			ALL
D02282		K00226	P037-00/ /			ALL
D03680		K00231	P037-00/ /			ALL
D00976		K00504	P037-00/ /			ALL
D10520		K00774	P037-00/ /			050-099, 150-154, 275-276
D13422		K01210	P037-00/ /			ALL
D13424		K01211	P037-00/ /			ALL
D13426		K01212	P037-00/ /			ALL
D13428		K01213	P037-00/ /			ALL
D13430		K01214	P037-00/ /			ALL

MASTER BUNDLE LIST

D280T132

91-21-13

Section W1110

Page 2

Aug 05/2009



767-200/300 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W1118	R1	P37-R1A-INTEGRATION (continued)				
D11394		K01285	P037-00/ /			153-199
D13940		K01285	P037-00/ /			277-299
D13806		K02119	P037-00/ /			ALL
W1119	N2	E1-5 SHELF EF1S SG,R				
D00373A			//			ALL
D00373B			//			ALL
D00373C			//			ALL
D00373D			//			ALL
D00373E			//			ALL
D00373F			//			ALL
D05081P		AE0319	POS 71	D05081J	W0733	ALL
D05085P		AE0319	POS 75	D05085J	W0733	ALL
D05677P		AE0321	POS 03	D05677J	W1127	ALL
D05647P		AE0321	POS 4	D05647J	W0117	ALL
D00373		M00150	SHELF/E01/05			ALL

MASTER BUNDLE LIST

D280T132

91-21-13
Section W1110
Page 3 End
Mar 09/2006



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W1120	R*	E2-1 WINDOW HEAT RIGHT FWD & LEFT SIDE				
D02898A			//			ALL
D02898B			//			ALL
D05932P		AE0320	POS 33	D05932J	W0624	ALL
D04294P		AE0320	POS 34	D04294J	W0624	ALL
D02898		M00192	SHELF/E02/01			ALL
W1123	N2	AFT CABIN LOWERED CEILING LEFT DOOR AREA				
D04121P			1510/283/L030	D04121J	W0665	050-099, 150-199
W1125	N2	AFT CABIN LOWERED CEILING RIGHT DOOR AREA				
D04123P			1510/283/R030	D04123J	W0665	050-099, 150-199
W1127	N2	E1-4 SHELF EF1S SG,C				
D00413A			//			ALL
D00413B			//			ALL
D00413C			//			ALL
D00413D			//			ALL
D00413E			//			ALL
D00413F			//			ALL
D04387P		AE0319	POS 58	D04387J	W1599	ALL
D05079P		AE0319	POS 59	D05079J	W0731	ALL
D05389P		AE0319	POS 72	D05389J	W0733	ALL
D05677J		AE0321	POS 03	D05677P	W1119	ALL
D02285		K02070	SHELF/E01/04			ALL
D00413		M00149	SHELF/E01/04			ALL

MASTER BUNDLE LIST

D280T132

91-21-13

Section W1120

Page 1 End

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W1130	R2	P40 APU REMOTE CONTROL PNL				
D08543			P040-00/ /			ALL
D08545			P040-00/ /			ALL
D05938J		AL0201	POS 02	D05938P	W0678	150-154
D05938P		AL0201	POS 02	D05938J	W0678	050-099, 155-199, 275-299
W1131	S*	E2-1 SHELF				
D05035J		AE0308	POS 05	D05035P	W1247	ALL
W1132	S2	P40 APU REMOTE CONTROL PANEL				
D05936J		AL0201	POS 01	D05936P	W0678	150-154
D05936P		AL0201	POS 01	D05936J	W0678	050-099, 155-199, 275-299
W1134	R2	FWD CARGO COMPT LIGHTS AND DOOR CONTROL (P43 PNL)				
D05886P		AC0506	POS 10	D05886J	W1066	ALL
W1136	R2	AFT CARGO COMPT LIGHTS AND DOOR CONTROL(P44 PNL)				
D05888P		AC1304	POS 10	D05888J	W1068	ALL
W1138	R2	CENTER PSU MOD				
D05968J				D05968P	W0802	050-099, 150-199, 276-299
D05970P				D05970J	W1140	050-099, 150-199, 276-299
I D02424			0372/280/L005			ALL
I D05968J			0373/280/L005	D05968P	W0802	275
D03260			0396/280/L005			ALL
D03262			0427/280/L005			ALL
D03264			0453/280/L005			ALL
D03266			0480/280/L005			ALL
D05970P			0504/280/L005	D05970J	W1140	275

MASTER BUNDLE LIST

D280T132

91-21-13

Section W1130

Page 1 End

Aug 05/2009



767-200/300 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W1140	R2	CENTER PSU MOD				
D05970J				D05970P	W1138	050-099, 150-199, 276-299
D05972P				D05972J	W1280	050-099, 150-199
D05972P				D05972J	W1142	276-299
D03268			0504/280/L005			ALL
D05970J			0504/280/L005	D05970P	W1138	275
D03270			0528/280/L005			ALL
D03272			0559/280/L005			ALL
D03274			0585/280/L005			ALL
D03276			0612/280/L005			ALL
D05972P			0636/280/L005	D05972J	W1142	275
W1141	N2	ATTENDANT CALL LIGHT-RIGHT				
D06061P			1197+52/295/R 14	D06061J	W0665	050-099, 150-199
W1142	R2	CENTER PSU MOD				
D05972J				D05972J	W1140	276
D05972J				D05972P	W1140	277-299
D05974P				D05974J	W2062	276-299
D03278			0636/280/L005			275-299
D05972J			0636/280/L005	D05972P	W1140	275
D02052			0654+063/280/L005			275-299
D02054			0654+090/280/L005			275-299
D05974P			0654+114/280/L005	D05974J	W2062	275
D03280			654+06/280/L005			275-299
D03282			654+37/280/L005			275-299
W1144	R2	CENTER PSU MOD				
D05976J				D05976P	W1280	050-099
D05978P				D05978J	W1146	050-099
D03288			0915/280/L005			050-099
D03290			0946/280/L005			050-099
D03292			0972/280/L005			050-099
D03294			1009/280/L005			050-099
D03286			893/280/L 5			050-099
W1146	R2	CENTER PSU MOD				
D05978J				D05978P	W1144	050-099
D05978J				D05978P	W1280	276-299

MASTER BUNDLE LIST

D280T132

91-21-13

Section W1140

Page 1

Aug 05/2009



767-200/300 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W1146	R2	CENTER PSU MOD (continued)				
D05980P				D05980J	W1148	050-099, 276-299
D03296			1025/280/L005			ALL
D05978J			1025/280/L005	D05978P	W1280	150-199, 275
D03298			1049/280/L005			ALL
D03300			1080/280/L005			ALL
D03302			1106/280/L005			ALL
D03378			1133/280/L005			ALL
D05980P			1157/280/L005	D05980J	W1148	150-199, 275
W1148	R2	CENTER PSU MOD				
D05980J				D05980P	W1146	050-099, 276-299
D05982P				D05982J	W1150	050-099
D08186P				D08186J	W2064	276-299
D03380			1157/280/L005			ALL
D05980J			1157/280/L005	D05980P	W1146	150-199, 275
D03382			1181/280/L005			ALL
D03384			1197+015/280/L005			ALL
D03386			1197+041/280/L005			ALL
D08186P			1197+092/280/L005	D08186J	W2064	150-199, 275
D03388			1265/280/L005			ALL

MASTER BUNDLE LIST

D280T132

91-21-13

Section W1140

Page 2 End

Aug 05/2009



767-200/300 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W1150	R2	CENTER PSU MOD				
D05982J				D05982P	W1148	050-099
D05982J				D05982P	W2064	276-299
D05984P				D05984J	W1152	050-099, 276-299
D03390			1289/280/L005			ALL
D05982J			1289/280/L005	D05982P	W2064	150-199, 275
D03392			1313/280/L005			ALL
D03394			1344/280/L005			ALL
D03396			1370/280/L005			ALL
D03398			1397/280/L005			ALL
D05984P			1421/280/L005	D05984J	W1152	150-199, 275
W1152	R2	CENTER PSU MOD				
D05984J				D05984P	W1150	050-099, 277-299
D03400			1421/280/L005			ALL
D05984J			1421/280/L005	D05984P	W1150	150-199, 275-276
D03402			1449/280/L005			ALL
D03404			1465/280/L005			050-099, 275-299
W1154	N2	FLIGHT DECK CLOSET LIGHTS				
D06386J				D06386P	W1230	155-157, 275-299
D06388P				D06388J	W1230	155-157, 275-299
D06388P			0256/310/R006	D06388J	W1230	150-154
D06386J			0266/310/L017	D06386P	W1230	150-154
W1156	L1	WINDOW HEAT,RIGHT WINDOW #2				
D05870P				D05870J	W0622	ALL
D01902		B00039	//			ALL
D01904		B00039	//			ALL
D01906		B00039	//			ALL
W1158	R1	WINDOW HEAT,LEFT WINDOW #2				
D05872J			0196/264/L043	D05872P	W0624	ALL
D01916		B00036	//			ALL
D01918		B00036	//			ALL
D01920		B00036	//			ALL

MASTER BUNDLE LIST

D280T132

91-21-13

Section W1150

Page 1 End

Aug 05/2009



767-200/300 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W1160	N2	CENTER,MID OXYGEN LATCHES STA 373-STA 488 CATIA DESIGNED				
D05990J				D05990P	W0720	050-099, 276-299
D05992P				D05992J	W1162	050-099, 276-299
D05990J			0373/280/L005	D05990P	W0720	150-199, 275
D05992P			0504/280/L005	D05992J	W1162	150-199, 275
D00202		M00064	MULTI/ /			ALL
D01192		M00064	MULTI/ /			ALL
D01194		M00064	MULTI/ /			ALL
D01196		M00064	MULTI/ /			ALL
D01198		M00064	MULTI/ /			ALL
W1162	N2	CENTER MID OXYGEN LATCHES STA 504-STA 620				
D05992J				D05992J	W1160	050-099
D05992J				D05992P	W1160	276-299
D05994P				D05994J	W1282	050-099
D05994P				D05994J	W1164	276-299
D05992J			0504/280/L005	D05992P	W1160	150-199, 275
D05994P			0636/280/L005	D05994J	W1282	150-199
D05994P			0636/280/L005	D05994J	W1164	275
D01200		M00064	MULTI/ /			ALL
D01202		M00064	MULTI/ /			ALL
D01204		M00064	MULTI/ /			ALL
D01206		M00064	MULTI/ /			ALL
D01208		M00064	MULTI/ /			ALL
W1164	N2	CENTER MID OXYGEN LATCHES STA 636-STA 654+098				
D05994J				D05994P	W1162	276-299
D05996P				D05996J	W2066	276-299
D05994J			0636/280/L005	D05994P	W1162	275
D00978			0654+006/280/L005			275
D00980			0654+040/280/L005			275
D05996P			0654+114/280/L005	D05996J	W2066	275
D01856			0743/280/L005			275
D01210			636/280/L005			275
D01854			716/280/L005			275
D00978		M00064	MULTI/ /			276-299
D00980		M00064	MULTI/ /			276-299
D01210		M00064	MULTI/ /			276-299
D01854		M00064	MULTI/ /			276-299
D01856		M00064	MULTI/ /			276-299

MASTER BUNDLE LIST

D280T132

91-21-13

Section W1160

Page 1

Aug 05/2009



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W1166	N2	CENTER MID OXYGEN LATCHES STA 922-STA 1009				
D05998J				D05998P	W1282	050-099
D00986		M00064	MULTI/ /			050-099
D10040		M00064	MULTI/ /			050-099
D10042		M00064	MULTI/ /			050-099
D10044		M00064	MULTI/ /			050-099
D10046		M00064	MULTI/ /			050-099
W1168	N2	CENTER AFT OXYGEN LATCHES STA 1025-STA 1141				
D06000J				D06000P	W0726	050-099
D06000J				D06000P	W0720	276-299
D06002P				D06002J	W1170	050-099, 276-299
D06000J			1025/280/L005	D06000P	W0720	150-199, 275
D06002P			1157/280/L005	D06002J	W1170	150-199, 275
D01042		M00064	MULTI/ /			ALL
D02984		M00064	MULTI/ /			ALL
D02986		M00064	MULTI/ /			ALL
D02988		M00064	MULTI/ /			ALL
D02990		M00064	MULTI/ /			ALL

MASTER BUNDLE LIST

D280T132

91-21-13

Section W1160

Page 2 End

Jun 28/2006



767-200/300 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W1170	N2	CENTER AFT OXYGEN LATCHES STA 1157-STA 1273				
D06002J				D06002P	W1168	050-099, 276-299
D06004P				D06004P	W1172	050-099
D08200P				D08200J	W2068	276-299
D06002J			1157/280/L005	D06002P	W1168	150-199, 275
D08200P			1197+092/280/L005	D08200J	W2068	150-199, 275
D02992		M00064	MULTI/ /			ALL
D02994		M00064	MULTI/ /			ALL
D02996		M00064	MULTI/ /			ALL
D02998		M00064	MULTI/ /			ALL
D03000		M00064	MULTI/ /			ALL
W1171	N2	TCAS COAX-E1-3 SHELF				
D06087P		AE0325	POS 02	D06087J	W1171	050-099, 150-199, 277-299
W1172	N2	CENTER AFT OXYGEN LATCHES STA-1289-STA-1421				
D06004J				D06004P	W1170	050-099
D06004J				D06004P	W2068	276-299
D06006P				D06006J	W1174	050-099, 276-299
D06004J			1289/280/L005	D06004P	W2068	150-199, 275
D06006P			1421/280/L005	D06006J	W1174	150-199, 275
D03002		M00064	MULTI/ /			ALL
D03004		M00064	MULTI/ /			ALL
D03006		M00064	MULTI/ /			ALL
D03008		M00064	MULTI/ /			ALL
D03010		M00064	MULTI/ /			ALL
W1174	N2	CENTER AFT OXYGEN LATCHES STA 1421-STA 1479				
D06006J				D06006P	W1172	050-099, 276-299
D06006J			1421/280/L005	D06006P	W1172	150-199, 275
D03014			1450/280/L005			280-299
D03012		M00064	MULTI/ /			ALL
D03014		M00064	MULTI/ /			050-099, 150-199, 275-278
D03832		M00064	MULTI/ /			050-099, 275-299
W1175	N2	TCAS COAX-E1-3 SHELF				
D06089P		AE0325	POS 01	D06089J	W1175	050-099, 150-199, 277-299

MASTER BUNDLE LIST

D280T132

91-21-13

Section W1170

Page 1

Feb 06/2009



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W1177 D06091P	N2	TCAS COAX-E1-3 SHELF AE0325	POS 04	D06091J	W1777	050-099, 150-199, 277-299
W1178 D05720P D05722J	R2	L FWD COAT CLOSET LTG	0470/270/L070 0470/270/L070	D05720J D05722P	W1230 W1230	050-099 050-099
W1179 D06093P	N2	TCAS COAX-E1-3 SHELF AE0325	POS 03	D06093J	W1779	050-099, 150-199, 277-299



767-200/300 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W1181	N2	TCAS COAX-E1-3 SHELF				
D06095P		AE0325	POS 07	D06095J	W1769	050-099, 150-199, 277-299
D06137P		AE0325	POS 08	D06137J	W1769	050-099, 150-199, 277-299
D06133P		AE0325	POS 09	D06133J	W1769	050-099, 150-199, 277-299
D06135P		AE0325	POS 10	D06135J	W1769	050-099, 150-199, 277-299

MASTER BUNDLE LIST

D280T132

91-21-13

Section W1180

Page 1 End

Mar 09/2006



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W1192	R2	FWD COMPARTMENT CTR COAT CLOSET				
D08124P				D08124J	W0784	050-099
D08126J				D08126P	W0784	050-099
W1195	L2	COAX-SATCOM M1781 RF UNIT TO AC1102 (SPLITTER)				
D06175P		AC1102	POS 02	D06175J	W9123	150, 153-199
D06175P		AC1102	POS 02	D06175J	W1915	277-299
W1197	L2	COAX-SATCOM,M1781 RF UNIT TO AC1102 (COMBINER)				
D06177P		AC1102	POS 03	D06177J	W9121	150, 153-199
D06177P		AC1102	POS 03	D06177J	W1919	277-299
W1198	N2	LEFT FWD OXYGEN LATCHES STA 346				
D06136P				D06136J	W0714	275-299
D01880		M01045	0348/284/L057			275-299
D13702		M1655				275-299
W1199	L2	COAX-SATCOM,M1782 HPA TO AP1001 (SPLITTER)				
D06187J		AP1001	POS 01	D06187P	W9123	156-157, 166-199
D06187J		AP1001	POS 01	D06187P	W1917	277-299

MASTER BUNDLE LIST

D280T132

91-21-13

Section W1190

Page 1 End

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W1201	L*	DLEC SPOILER CONT PCA 2,W/W DISC TO WING DISC				
D05215J D05461J		AL0901 D05459J,61	POS 02	D05215P D05459P	W1255	ALL ALL
W1203	L*	ELEC SPOILER CONT PCA 3,W/W DISC TO WING DISC				
D05213J D05463J		AL1005 D05459J,61	POS 01	D05213P D05459P	W1253	ALL ALL
W1204	R2	PANEL AREA FEEDER				
D06252P D05346P D05352P D06262J D05348P D04870P		AE0203 AE0204 AE0218 AE0220 AE0223 AF0204	POS 06 POS 13 POS 38 POS 07 POS 04 POS 46	D06252J D05346J D05352J D06262P D05348J D04870J	W0142 W0054 W0192 W2052 W0180 W0066	ALL ALL ALL ALL ALL ALL
W1205	L*	ELEC SPOILER CONT PCA 4,W/W DISC TO WING DISC				
D05211J D05465J		AL1001 D05459J,61	POS 14	D05211P D05459P	W1251	ALL ALL
W1206	R2	AUTOBRAKE METERED PRESS SW				
D04770P D02192 D02291		AL1006 S00083 TS0473	POS 10 1045/187/R078 1037/188/R084	D04770J	W0656	ALL ALL ALL
W1207	R*	ELEC SPOILER CONT PCA 5,W/W DISC TO WING DISC				
D05235J D05467J		AL1005 D05459J,61	POS 05	D05235P D05459P	W1263	ALL ALL
W1208	S1	RAM AIR TURBINE MOTOR SUPPLY				
D02352		M00613	1155/129/R075			ALL
W1209	R*	ELEC SPOILER CONT-PCA 6,W.W DISC TO WING DISC				
D05237J D05469J		AL0901 D05459J,61	POS 03	D05237P D05459P	W1265	ALL ALL

MASTER BUNDLE LIST

D280T132

91-21-13

Section W1200

Page 1 End

Mar 09/2006



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W1210	L2	ELEC PUMP 1 PRESS SW				
D05358P		AL1004	POS 19	D05358J	W0588	ALL
D00918		M00232	0997/145/R004			ALL
D00474		S00033	0982/155/R007			ALL
W1211	R*	ELEC SPOILER CONT PCA 7,W/W DISC TO WING DISC				
D05239J		AL0902	POS 03	D05239P	W1265	ALL
D05471J		D05459J,61		D05459P		ALL
W1212	S2	PARKING BRAKE VALVE				
D04988P		AL1007	POS 07	D04988J	W0596	ALL
D00464		S00028	1056/181/L006			ALL
D00466		S00029	1053/180/L006			ALL
D02216		S00317	1049/183/L007			ALL
D02228		S00415	1032/184/L003			ALL
W1213	R*	ELEC SPOILER CONT PCA 8,W/W DISC TO WING DISC				
D05241J		AL1006	POS 05	D05241P	W1263	ALL
D05473J		D05459J,61		D05459P		ALL
W1214	R2	LEFT METERED PRESS SW				
D05586P		AL1005	POS 10	D05586J	W0628	ALL
D02190		S00082	1045/187/L078			ALL
D02293		TS474				ALL
W1215	L*	ELEC SPOILER CONT-PCA 9,W/W DISC TO WING DISC				
D05221J		AL1002	POS 18	D05221P	W1251	ALL
D05475J		D05459J,61		D05459P		ALL
W1216	L2	P61 TO P19 FEEDER				
D05180P		AF0204	POS 36	D05180J	W0062	ALL
D05178P		AP0401	POS 04	D05178J	W1058	ALL
D10740		B00238	0362/288/L041			ALL
D10742		B00239	0362/288/R041			050-099, 150-199
D13462		TS0469	0350-390/283/0000			ALL
W1217	L*	ELEC SPOILER CONT PCA 10,W/W DISC TO WING DISC				
D05219J		AL1006	POS 01	D05219P	W1253	ALL
D05477J		D05459J,61		D05459P		ALL

MASTER BUNDLE LIST

D280T132

91-21-13

Section W1210

Page 1

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W1219	L*	ELEC SPOILER CONT PCA 11,W/W DISC TO WING DISC				
D05217J		AL0902	POS 02	D05217P	W1255	ALL
D05479J		D05459J,61		D05459P		ALL

MASTER BUNDLE LIST

D280T132

91-21-13

Section W1210

Page 2 End

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W1220	R	MEDICAL OUTLETS				
D13454		M1603				ALL
D13452		M1604				ALL
D13456		M1605				ALL
D13458		M1606				ALL
W1221	R*	ELEC SPOILER CONT PCA 12,W/W DISC TO WING DISC				
D05243J		AL0902	POS 01	D05243P	W1261	ALL
D05481J		D05459J,61		D05459P		ALL
W1222	R2	RIGHT FORWARD EMER LIGHT				
D12254				D02589		050-099
D13216				D02569		050-099, 150-199
D13218				D02569		050-099, 150-199
D13222				D02569		050-099
D13510				D02589		150-199
D13512				D02589		050-099, 150-199
D13514				D02589		050-099, 150-199
D13516				D02589		050-099, 150-199
D13518				D02589		050-099, 150-199
D06606P			0320/282/R070	D06606J	W0844	ALL
D05124P		AF0204	POS 55	D05124J	W0066	ALL
D05088P		AP0401	POS 01	D05088J	W1060	ALL
D06650J		AP0901	POS 04	D06650P	W0122	150-199
D13232		L00896	0643/200/R			050-099, 150-199
D11688		L00901	0401/200/R			275-299
D11690		L00901	0401/200/R			275-299
D13228		L00901	0401/200/R			050-099, 150-199
D13230		L00902	1010/200/R			050-099, 150-199
D11696		L00903	1208/200/R			275-299
D11698		L00903	1208/200/R			275-299
D02746		M00730	0401/203/R092			ALL
D01126		M00732	1010/203/R092			ALL
D13238		M1552				050-099, 150-199
D13242		M1553				050-099, 150-199
D13240		M1554				050-099, 150-199
W1224	R2	FORWARD ENTRY DOOR CONTROL,L FWD ATTEND. PNL				
D06272P			0285/282/L040	D06272J	W0130	ALL
D06274J			0285/282/L040	D06274P	W0130	ALL

MASTER BUNDLE LIST

D280T132

91-21-13

Section W1220

Page 1

Aug 05/2009



767-200/300 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W1224	R2	FORWARD ENTRY DOOR CONTROL,L FWD ATTEND. PNL (continued)				
D06062J			0330/283/L010	D06062P	W0114	ALL
D05126P		AE0223	POS 01	D05126J	W0180	ALL
D13442J		AP0307	POS 08	D13442P	W1449	050-099, 150-199
D04290P		AP0401	POS 10	D04290J	W1060	ALL
D06148J		AP0703	POS 02	D06148P	W0110	150-199
D06148J		AP0802E	POS 03	D06148P	W0110	050-099
D01466		M00627	0298/293/L021			ALL
D10940		M01289	0435/277/L060			050-099, 150-199
D01646		P021-00	0284/261/L053			ALL
W1226	R2	E1 TO P19 DC FEEDER & DOOR SENSORS				
D05738J		AE0220	POS 02	D05738P	W0084	ALL
D05130J		AE0317	POS 40	D05130P	W1092	ALL
D05678J		AE0320	POS 53	D05678P	W0149	ALL
D05090P		AP0401	POS 09	D05090J	W1060	ALL
W1228	R1	P33,P37 TO P19 FEEDER				
D06738J				D06738P	W0123	050-099, 150-199
D06740J				D06740P	W0157	050-099, 150-199
D05098P		AE0203	POS 13	D05098J	W0052	ALL
D05660P		AE0224	POS 03	D05660J	W0192	ALL
D05134P		AP0401	POS 02	D05134J	W1104	ALL
D21198		B00239	0362/288/R041			275-299
D13832		D13832,		D00192		162-199
D13834		D13832,		D00192		162-199
D02932		M00639	0329/286/L005			ALL
D02874		M00650	0284/284/R028			ALL
D02876		M00651	0281/284/R028			ALL
D01760		M00656	0284/283/L048			ALL
D21200		S00940	0350/225/R095			275-299

MASTER BUNDLE LIST

D280T132

91-21-13

Section W1220

Page 2 End

Aug 05/2009



767-200/300 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W1230	R2	AC FEEDER CLOSET LT,ATT WORK LTS				
D06386P				D06386J	W1154	155-157, 275-299
D06388J				D06388P	W1154	155-157, 275-299
D06936P				D06936J	W1232	050-099, 162-199
D06604P			0320/282/L070	D06604J	W0842	ALL
D05720J			0470/270/L070	D05720P	W1178	050-099
D05722P			0470/270/L070	D05722J	W1178	050-099
D06386P			364/282/L050	D06386J	W1154	150-154
D06388J			364/282/L050	D06388P	W1154	150-154
D05172P		AE0203	POS 03	D05172J	W0142	ALL
D08706J		AP0307	POS 02	D08706P	W1449	050-099, 162-199
D05170P		AP0401	POS 05	D05170J	W1060	ALL
D13836		G4B				162-199
D13966		L01211	0336/280/0000			164-199
D13968		L01211	0336/280/0000			164-199
D11872		M01460	0370/276/0000			050-099, 150-199
D13878		M1769				050-099, 162-199
D00168		S00467	P019-00/TOP/			ALL
D13868		TS0516	0384/299/L012			050-099, 162-199
W1232	L1	P36 TO P19 AC FEEDER				
D06936J				D06936P	W1230	050-099, 162-199
D09002			1356/300/L010			275-299
D09001			931/300/R031			275-299
D09000			E002-06/ /			275-299
D05100P		AE0209	POS 18	D05100J	W0182	ALL
D06934P		AE0209	POS 48	D06934J	W0176	ALL
D07126P		AE0227	POS 01	D07126J		050-099, 150-199, 275-277
D07126P		AE0227	POS 01	D07126J	W2112	278-299
D04282P		AP0401	POS 12	D04282J	W1102	ALL
D13860		B00426	0612/173/L079			050-099, 162-199
D13870		B00427	0434/299/L013			050-099, 162-199
D13894		B00429	1428/300/L012			050-099, 150, 152-199
D13896		B00433	1398/298/L012			050-099, 150, 152-199
D72030		B00467	1467/306/L029			ALL
D72032		B00468	1467/306/R029			ALL
D72026		B00469	1467/304/L037			ALL
D72028		B00470	1467/304/R037			ALL
D13898		M01766	1419/267/L063			050-099, 150, 152-199

MASTER BUNDLE LIST

D280T132

91-21-13

Section W1230

Page 1

Aug 05/2009



767-200/300 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W1232	L1	P36 TO P19 AC FEEDER (continued)				
D13922		M01771	1428/294/L018			050-099, 150, 152-199
D13924		M01771	1428/294/L018			050-099, 150, 152-199
D13926		M01771	1428/294/L018			050-099, 150, 152-199
D13874		M1769				050-099, 162-199
D13876		M1769				050-099, 162-199
D13890		TS0517	1438/293/L026			050-099, 150, 152-199
D13892		TS0518	1419/267/L063			050-099, 150, 152-199
D13856		V00162	0638/173/L079			050-099, 162-199
D13872		V00163	0526/303/L023			050-099, 162-199
W1234	R2	LEFT MID ATT WORK & NIGHT LTS				
D05138P		AP0403	POS 07	D05138J	W1060	ALL
D05144P		AP1005	POS 14	D05144J	W1064	ALL
D03824		S00022	0654+08/303/L013			ALL
D10712		S00635	0709/305/R012			ALL
D13470		S00791	0568/304/L010			ALL
D13472		S00792	0767/301/L004			ALL
■ D02604		TS0185	0654+08/303/L013			ALL
D10708		TS0372	0770/305/R012			ALL
■ D10710		TS0373	1030/283/0000			ALL
■ D10716		TS0375	1030/090/0000			ALL
D10714		TS0376	0770/305/R012			ALL
W1236	R2	RIGHT MID ATTEND WORK LTS AND NIGHT LTS				
D06900P				D06900J	W2008	050-099, 162-199
■ D06096J			0455/284/R040	D06096P	W0132	275-299
D06102P			0456/284/R040	D06102J	W0132	275-299
D05148P		AP0403	POS 19	D05148J	W1060	ALL
D06028J		AP0703	POS 06	D06028P	W0110	275-299
D06188J		AP0703	POS 07	D06188P	W1086	275-299
D06028J		AP0802E	POS 06	D06028P	W0110	050-099
D06188J		AP0802E	POS 07	D06188P	W1086	050-099
D06028J		AP0901	POS 06	D06028P	W0122	150-199
D06188J		AP0901	POS 07	D06188P	W1086	150-199
D05150P		AP1005	POS 05	D05150J	W1064	ALL
D13928		L01210	0445/280/R043			164-199
D13950		L01210	0445/280/R043			164-199
D13886		M01768	0441/267/R063			050-099, 162-199
D13918		M01770	0435/294/R016			050-099, 162-199

MASTER BUNDLE LIST

D280T132

91-21-13

Section W1230

Page 2

Aug 05/2009



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W1236	R2	RIGHT MID ATTEND WORK LTS AND NIGHT LTS (continued)				
D13920		M01770	0435/294/R016			050-099, 162-199
D03826		S00023	0709/305/L017			ALL
D03982		TS0179	0709/305/L017			ALL
D03994		TS0186	0709/302/L018			ALL
D13476		TS0472	0770/307/L003			ALL
D13468		TS0476	0767/300/L003			ALL
D13882		TS0521	0444/291/R032			050-099, 162-199
D13880		TS0522	0441/267/R063			050-099, 162-199

MASTER BUNDLE LIST

D280T132

91-21-13

Section W1230

Page 3 End

Aug 05/2009



767-200/300 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W1240	R2	RIGHT AFT ATTEND WORK LTS NT LTS				
D07084J			1417/314/R032	D07084P		280-299
D07086J			1417/314/R032	D07086P		280-299
D05154P		AP1003	POS 05	D05154J	W1064	ALL
D12090		L01062	1480/270/L055			050-099, 150-199
D12092		L01062	1480/270/L055			050-099, 150-199
D01650		P022-00	1540/250/R060			ALL
D10176		P059-00	1540/260/L054			ALL
W1246	L2	HYDRAULICS SYSTEM,W/W				
D06244P		AE0219	POS 27	D06244J	W2000	ALL
D05734J		AE0306	POS 21	D05734P	W0014	ALL
D05732P		AF0204	POS 39	D05732J	W0062	ALL
D04946J		AL1004	POS 10	D04946P	W0968	ALL
D05510J		AL1004	POS 18	D05510P	W0838	ALL
W1247	S2	E1-1 & E2-1 SHELF TO P37				
D05037P		AE0218	POS 11	D05037J	W0198	ALL
D05997P		AE0303	POS 16	D05997J	W1101	ALL
D05035P		AE0308	POS 05	D05035J	W1131	ALL
W1248	S2	EMERGENCY EVACUATION SIGNAL SYSTEM CONTROL				
D08104P		AF0204	POS 77	D08104J	W0070	ALL
D08094P		AP0401	POS 11	D08094J	W1110	ALL
D02968		M00881	0291/225/R095			ALL
D02970		M00882	0284/253/L053			ALL

MASTER BUNDLE LIST

D280T132

91-21-13

Section W1240

Page 1 End

Aug 05/2009



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W1251	L*	ELEC SPOILER CONT L2B,SHELF TO W/W DISC				
D05403P		AE0303	POS 12	D05403J	W0111	ALL
D05167J		AE0305	POS 07	D05167P	W1092	ALL
D05702J		AL1001	POS 11	D05702P	W0446	ALL
D05211P		AL1001	POS 14	D05211J	W1205	ALL
D05221P		AL1002	POS 18	D05221J	W1215	ALL
D04559P		AP1501	POS 25	D04559J	W0579	ALL
D04477P		AP1501	POS 26	D04477J	W0587	ALL
W1252	S2	EMERGENCY EVACUATION SIGNAL SYSTEM CONTROL,MID CATIA DESIGNED				
D08098P		AP0403	POS 18	D08098J	W1110	ALL
D06026J		AP0703	POS 04	D06026P	W1088	275-299
D06026J		AP0802E	POS 05	D06026P	W1088	050-099
D06026J		AP0901	POS 02	D06026P	W1088	150-199
D08100P		AP1005	POS 12	D08100J	W1112	ALL
W1253	L*	ELEC SPOILER CONT L2C,SHELF TO W/W DISC CATIA DESIGNED				
D05405P		AE0303	POS 10	D05405J	W0121	ALL
D05213P		AL1005	POS 01	D05213J	W1203	ALL
D05219P		AL1006	POS 01	D05219J	W1217	ALL
W1254	S2	EMERGENCY EVACUATION SIGNAL CONTROL				
D08102P		AP1003	POS 16	D08102J	W1112	ALL
D02976		M00884	1542/253/L054			ALL
D02974		M00885	1540/253/R054			ALL
W1255	L*	ELECT SPOILER CONT L2A,SHELF TO W/W DISC				
D05411P		AE0303	POS 08	D05411J	W0101	ALL
D05215P		AL0901	POS 02	D05215J	W1201	ALL
D05217P		AL0902	POS 02	D05217J	W1219	ALL
W1256	R2	WATER SUPPLY LINE & DRAIN LINE HEATERS				
D06810J				D06810P	W1398	ALL
D06812J				D06812P	W1498	150-199, 275-299
D06814J				D06814P	W1400	ALL
D06816J				D06816P	W1500	150-199, 275-299
D06302P			1384/127/L050	D06302J	W1366	ALL
D05874J		AC1402	POS 11	D05874P	W0030	ALL
D06304P		AC1402	POS 14	D06304J	W1356	ALL

MASTER BUNDLE LIST

D280T132

91-21-13

Section W1250

Page 1

Aug 15/2007



767-200/300 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W1256	R2	WATER SUPPLY LINE & DRAIN LINE HEATERS (continued)				
D05820P		AE0203	POS 10	D05820J	W0142	ALL
D05688P		AE0218	POS 31	D05688J	W0192	ALL
W1258	R1	WATER SUPPLY LINE & DRAIN LINE HEATERS CATIA DESIGNED				
D06308P		AC1501	POS 01	D06308J	W1358	ALL
D05946P		AE0203	POS 14	D05946J	W0142	ALL
D05690P		AE0207	POS 09	D05690J	W0142	ALL
D05692P		AE0224	POS 08	D05692J	W1118	ALL
D13576		B00378	0654+28/117/R005			ALL
D13566		V00383	0654+28/117/L005			ALL
D13568		V00384	0689/117/0000			050-099, 150-199, 275-276

MASTER BUNDLE LIST

D280T132

91-21-13

Section W1250
Page 2 End
Aug 05/2009



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W1261	R*	ELEC SPOILER CONT R2A,SHELF TO W/W DISC CATIA DESIGNED				
D05483P		AE0308	POS 13	D05483J	W0131	ALL
D05233P		AL0901	POS 01	D05233J	W0899	ALL
D05243P		AL0902	POS 01	D05243J	W1221	ALL
D04567P		AP1501	POS 12	D04567J	W0583	ALL
D04479P		AP1501	POS 24	D04479J	W0589	ALL
W1263	R*	ELEC SPOILER CONT R2C,SHELF TO W/W DISC				
D05485P		AE0308	POS 12	D05485J	W0151	ALL
D05235P		AL1005	POS 05	D05235J	W1207	ALL
D05241P		AL1006	POS 05	D05241J	W1213	ALL
W1265	R*	ELEC SPOILER CONT R2B,SHELF TO W/W DISC CATIA DESIGNED				
D05487P		AE0308	POS 11	D05487J	W0141	ALL
D05237P		AL0901	POS 03	D05237J	W1209	ALL
D05239P		AL0902	POS 03	D05239J	W1211	ALL
W1266	R2	PASS. SIGNS JPR BUNDLE (2 FT .5 INCH LONG)				
D00156			MULTI/ /			ALL
W1268	N2	PASS. SPEAKER JPR BUNDLE-SYS 1 (27", 4K TAP, CONN. SIZE 12-12)				
D00158			MULTI/ /			ALL

MASTER BUNDLE LIST

D280T132

91-21-13

Section W1260

Page 1 End

Aug 15/2007



767-200/300 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W1270	N2	SPEAKER JPR BUNDLE-SYS 2 (27", 4K TAP, CONN. SIZE 12-12)				
D01862			MULTI/ /			050-099, 150-199
W1271	N2	CAUTION & WARNING,SHELF TO FWD PNL'S				
D04509P		AE0208	POS 01	D04509J	W0045	ALL
D05383J		AE0307	POS 85	D05383P	W0105	ALL
W1272	N2	PASS. SPEAKER JPR BUNDLE SYS 1 (50", 4K TAP, CONN. SIZE 12-12)				
D00160			0401/280/L005			050-099, 162-199, 280-299
W1274	R1	FUEL PRESSURE IND,FUEL PUMPS				
D05890P		AE0207	POS 10	D05890J	W0142	ALL
D04600J		AL1003	POS 18	D04600P	W0460	ALL
W1276	L1	RIGHT AFT LAV				
D05954P		AP1003	POS 03	D05954J	W1106	275-299
D00816		M01188	1463/ /R060			275-299
W1278	R2	PASS. SIGNS JPR BUNDLE (2 FT 10.5 INCH LONG)				
D00162				D03336		ALL

MASTER BUNDLE LIST

D280T132

91-21-13

Section W1270

Page 1 End

Aug 15/2007



767-200/300 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W1280	R2	CENTER PSU				
D05972J				D05972P	W1140	050-099, 150-199
D05976P				D05976J	W1144	050-099
D05978P				D05978J	W1146	280-299
D08184J				D08184P	W2062	280-299
D03278			0636/280/L005			050-099, 150-199
D02052			0654+063/280/L005			050-099
D02054			0654+090/280/L005			050-099
D08182			0744/280/L005			150-199
D02056			0768/280/L005			150-199, 275-299
D08184J			0768/280/L005	D08184P	W2062	275-278
D02058			0790/280/L005			150-199
D13496			0843/280/L005			150-199
D13272			0870/280/L005			150-199
D10492			0883/280/L005			050-099
D03288			0915/280/L005			275-299
D03290			0946/280/L005			275-299
D03292			0972/280/L005			275-299
D03294			1009/280/L005			150-199, 275-299
D05978P			1025/280/L005	D05978J	W1146	150-199, 275-278
D03280			654+06/280/L005			050-099, 150-199
D03282			654+37/280/L005			050-099, 150-199
D08178			694/280/L005			150-199
D08180			716/280/L005			150-199
D03286			893/280/L 5			150-199
D13278			893/280/L 5			150-199
D03286		SPEAKER OR				280-299
D10492		SPEAKER OR				275-299
D13278		SPEAKER OR				275-278
W1281	L*	ELEC SPOILER CONT L2A,SHELF TO CAPT WHL XDCR AND P10				
D04131J		AE0107	POS 03	D04131P	W5150	ALL
D05131P		AE0303	POS 07	D05131J	W0101	ALL
D00589		TS5081	0219/202/L021			ALL
W1282	N2	CENTER MID OXYGEN LATCHES STA 729-STA 893				
D05994J				D05994P	W1162	050-099
D05998P				D05998J	W1166	050-099
D08198J				D08198P	W2066	280-299
D05994J			0636/280/L005	D05994P	W1162	150-199

MASTER BUNDLE LIST

D280T132

91-21-13

Section W1280

Page 1

Aug 05/2009



767-200/300 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W1282	N2	CENTER MID OXYGEN LATCHES STA 729-STA 893 (continued)				
D00978			0654+006/280/L005			150-199
D00980			0654+040/280/L005			150-199
D11122			0697/280/L005			150-199
D01856			0743/280/L005			050-099
D08198J			0768/280/L005	D08198P	W2066	275-278
D10034			0768/280/L005			150-199, 275-299
D10036			0785/278/0000			150-199
D10038			0816/280/L005			150-199
D00982			0845/280/L002			150-199
D00984			0870/280/L005			050-099, 150-199, 280-299
D10646			0883/280/L005			275-278
D00986			0917/280/L005			275-299
D10042			0948/280/L005			275-299
D10044			0974/280/L005			275-299
D10046			1001/280/L005			275-299
D01210			636/280/L005			150-199
D11124			716/280/L005			150-199
D11126			744/280/L005			150-199
D10040			893/280/L5			150-199, 275-299
D00984		AP0703	POS 08			275-278
D10036		AP0703	POS 08			280-299
D10038		AP0802E	POS 08			050-099
D13548		AP0901	POS 8			150-199
D00978		M00064	MULTI/ /			050-099
D00980		M00064	MULTI/ /			050-099
D01210		M00064	MULTI/ /			050-099
D01854		M00064	MULTI/ /			050-099
D13550		M0064				150-199
D10034		M01170	0654+85/280/L005			050-099
D13608		M01170	0654+85/280/L005			150-199
D00982		M01171	0961/280/R005			275-299
D10042		M01171	0961/280/R005			150-199
W1283	L*	ELEC SPOILER CONT L2B,SHELF TO CAPT WHL XDCR AND P10				
D04133J		AE0107	POS 02	D04133P	W5150	ALL
D05133P		AE0303	POS 06	D05133J	W0111	ALL
D00591		TS5081	0219/202/L021			ALL

MASTER BUNDLE LIST

D280T132

91-21-13

Section W1280

Page 2

Aug 05/2009



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W1284	N2	CLOSET LIGHTS				
D06858P				D06858J	W0834	162-199
D06860J				D06860P	W0834	162-199
W1285	L*	ELEC SPOILER CONT L2C,SHELF TO CAPT WHL XDCR AND P10				
D04135J		AE0107	POS 01	D04135P	W5150	ALL
D05135P		AE0303	POS 04	D05135J	W0121	ALL
D00593		TS5081	0219/202/L021			ALL
W1286	S2	PARKING BRAKE VALVE R. WHEEL WELL				
D06012P		AL1006	POS 06	D06012J	W0596	ALL
D02194		V00041	1028/182/R092			ALL
W1287	N2	CONFIGURATION WARNING,P10,P51,TO SHELF				
D04511P		AE0208	POS 02	D04511J	W0045	ALL
D06804J		AE0307	POS 100	D06804P	W0183	275-299
D05281J		AE0307	POS 56	D05281P	W1092	ALL

MASTER BUNDLE LIST

D280T132

91-21-13

Section W1280

Page 3 End

Jun 28/2006



767-200/300 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W1291	R*	ELEC SPOILER CONT R2A,SHELF TO F/O WHL XDCR AND P10				
D04137J		AE0107	POS 06	D04137P	W5150	ALL
D05137P		AE0308	POS 10	D05137J	W0131	ALL
D00595		TS5082	0219/202/R021			ALL
W1293	R*	ELEC SPOILER CONT R2B,SHELF TO F/O WHL XDCR AND P10				
D04139J		AE0107	POS 05	D04139P	W5150	ALL
D05139P		AE0308	POS 09	D05139J	W0141	ALL
D00597		TS5082	0219/202/R021			ALL
W1294	S2	NOSE GR TORQUE LINK,TAXI LT				
D06106J			0278/072/0000	D06106P	W0678	050-099, 155-199, 275-299
D13374		M1620 J1				050-099, 155-199, 275-299
D13376		M1621 J1				050-099, 155-199, 275-299
W1295	R*	ELEC SPOILER CONT R2C,SHELF TO F/O WHL XDCR AND P10				
D04141J		AE0107	POS 04	D04141P	W5150	ALL
D05141P		AE0308	POS 08	D05141J	W0151	ALL
D00599		TS5082	0219/202/R021			ALL
W1296	S2*	FIRE DET-APU LOOP 1				
D06110J		AC1402	POS 17	D06110P	W0606	ALL
D04020J		AV1801	POS 07	D04020P	W0260	ALL
D01436		B00025	1821/200/R040			ALL
D01438		B00025	1821/200/R040			ALL
D02064		B00138	//			275-299
D02066		B00138	//			275-299
D03598		S00343	1629/171/R047			ALL
D01508		TS0226	//			ALL
W1297	S2	CONT COLUMN SHAKER M240				
D00695		M00240	CONT/COL/LKG			ALL
W1298	S2*	FIRE DET-APU LOOP 2				
D01270			1629/171/R047			ALL
D06112J		AC1402	POS 18	D06112P	W0614	ALL

MASTER BUNDLE LIST

D280T132

91-21-13

Section W1290

Page 1

Mar 09/2006



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W1298	S2*	FIRE DET-APU LOOP 2 (continued)				
D04022J		AV1801	POS 03	D04022P	W0250	ALL

MASTER BUNDLE LIST

D280T132

91-21-13

Section W1290

Page 2 End

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W1300	N2	LEFT SURGE TANK SPILL DETECTION				
D08306J			L0163/ /FS	D08306P	W0420	ALL
W1302	N2	RIGHT SURGE TANK SPILL DETECTION				
D08308J			R0163/ /FS	D08308P	W0422	ALL
W1306	S2	LDG GR ALTERNATE EXT RLY & SW				
D06198J			0240/200/L040	D06198P	W0634	ALL
D10228		M01104	0240/200/L040			ALL
W1307	S2	YAW DAMPER NO.1,P5 TO SHELF				
D05165P		AE0209	POS 08	D05165J	W0184	ALL
D05051P		AE0219	POS 30	D05051J	W2002	ALL
D05307P		AE0303	POS 15	D05307J	W1101	ALL
D05225J		AE0307	POS 10	D05225P	W0135	ALL
D00723		M10250	P005-00/ /			ALL
W1308	R2	ELEC HYD PUMP				
D06280P		AL1008	POS 06	D06280J	W0656	ALL
D00920		M00233	1041/145/R004			ALL
W1309	R2	YAW DAMPER NO.2,P5 TO SHELF				
D04843P		AE0308	POS 16	D04843J	W0141	ALL
D00725		M10250	P005-00/ /			ALL

MASTER BUNDLE LIST

D280T132

91-21-13
 Section W1300
 Page 1 End
 Mar 09/2006



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity	
W1311	L2	TMC,ALT ALERT & GWPS FWD PNL'S TO SHELVES & P51					
D04507P		AE0208	POS 05	D04507J	W0045	ALL	
D05259J		AE0305	POS 18	D05259P	W0105	ALL	
D05257J		AE0305	POS 23	D05257P	W0109	ALL	
D04445J		AE0306	POS 09	D04445P	W0133	ALL	
D05255J		AF0119	POS 03	D05255P	W0011	ALL	

MASTER BUNDLE LIST

D280T132

91-21-13

Section W1310

Page 1 End

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity	
W1328	H2	HYD MTR DR GEN DC PWR & CONTROL STD OPT 24-21					
D06464P		AL1003	POS 11	D06464J	W1332	ALL	
D06466P		AL1003	POS 12	D06466J	W1334	ALL	
D10840		M01225	//			ALL	
D10844		M01225	//			ALL	
D10834		V00147	//			ALL	

MASTER BUNDLE LIST

D280T132

91-21-13
Section W1320
Page 1 End
Mar 09/2006



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W1330	H2	HYD MTR DR GEN AC PWR STD OPT 24-21				
D06468P		AL1003	POS 13	D06468J	W1336	ALL
D10842		M01225	//			ALL
W1332	H2	HYD MOTOR DRIVEN GEN SYS CONTROL STD OPT 24-21				
D06460P		AE0225	POS 07	D06460J	W2058	ALL
D06464J		AL1003	POS 11	D06464P	W1328	ALL
W1334	H2	HYD MOTOR DRIVEN GEN DC PWR STD OPT 24-21				
D06466J		AL1003	POS 12	D06466P	W1328	ALL
W1336	H2	HYD MOTOR DRIVEN GEN AC PWR STD OPT 24-21				
D06462P		AE0225	POS 03	D06462J	W2058	ALL
D06468J		AL1003	POS 13	D06468P	W1330	ALL
W1338	S2	HYD MTR DR GEN DC PWR & CONROL STD OPT 24-21				
D06470P		AE0209	POS 47	D06470J	W0184	ALL
D06452P		AE0225	POS 04	D06452J	W2058	ALL
D06442P		AF0204	POS 79	D06442J	W0066	ALL

MASTER BUNDLE LIST

D280T132

91-21-13

Section W1330

Page 1 End

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity	
W1340	L2	LEFT & INSTR BUS/HYD MTR DR GEN TRANSFER BUS AC PWR STD OPT 24-21					
D06456P		AE0225	POS 01	D06456J	W2058	ALL	
D06454P		AE0225	POS 06	D06454J	W2058	ALL	
D06448P		AF0232	POS 28	D06448J	W1026	ALL	
D06444P		AF0232	POS 29	D06444J	W1026	ALL	
W1342	R2	RIGHT BUS/HYD MTR DR GEN TRANSFER BUS AC PWR STD OPT 24-21					
D06476P		AE0207	POS 08	D06476J	W0138	ALL	
D06450P		AE0222	POS 09	D06450J	W0048	ALL	
D06458P		AE0225	POS 08	D06458J	W2058	ALL	
D06474P		AE0225	POS 09	D06474J	W2058	ALL	
D06446P		AF0232	POS 30	D06446J	W0048	ALL	
W1343	N2	SERVICE INTERPHONE CATIA DESIGNED					
D08541			0147/169/L008			ALL	
D08539			0287/171/R004			ALL	
D04613J		AE0307	POS 102	D04613P	W0149	ALL	
D05409J		AL1004	POS 12	D05409P	W0932	ALL	
W1349	N2	ELEC SPOILER CONT					
D00161			MULTI/ /			ALL	
D05459P		D05459J,61		D05459J	W0899	ALL	

MASTER BUNDLE LIST

D280T132

91-21-13

Section W1340

Page 1 End

Aug 15/2007



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W1354	L1	WIRING FROM STA 1535 PRODUCTION BRK TO LOWER SEC 46 EQUIPMENT				
D06314J		AC1501	POS 02	D06314P	W0578	ALL
D00456		B00016	1551/153/R035			ALL
D01266		M00598	1570/185/L040			ALL
D01262		M00965	1576/166/L030			ALL
D03196		V00015	1550/148/L049			ALL
D11968		V00380	1570/185/L040			050-099, 150-199, 277-299
W1356	R2	AFT WATER SUPPLY LINE & DRAIN LINE HEATERS				
D06304J		AC1402	POS 14	D06304P	W1256	ALL
D01290		S00332	1560/196/R042			ALL
D00504		S00498	1514/173/R067			ALL
D00524		S00499	1514/170/R067			ALL
W1358	R1	AFT WATER SUPPLY LINE & DRAIN LINE HEATERS				
D06306J		AC1402	POS 13	D06306P	W0580	ALL
D06308J		AC1501	POS 01	D06308P	W1258	ALL
D00450		B00015	1551/149/R013			ALL
D00608		B00123	1450/195/R035			ALL
D01294		M00142	1546/195/R057			ALL
D03818		M00599	1551/193/L035			ALL
D03148		V00015	1550/148/L049			ALL
D11966		V00379	1549/185/L040			050-099, 150-199, 277-299

MASTER BUNDLE LIST

D280T132

91-21-13

Section W1350

Page 1 End

Aug 05/2009



767-200/300 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W1366	R2	WATER FILL CONNECTION & SUPPLY LINE HEATERS				
D06302J			1384/127/L050	D06302P	W1256	ALL
W1369	N2	DIGITAL AIDS RECORDER-E2-2 TO E5 CATIA DESIGNED				
D04865J		AC0608	POS 02	D04865P		275-299
D04771J		AE0322	POS 21	D04771P		275-299

MASTER BUNDLE LIST

D280T132

91-21-13
Section W1360
Page 1 End
Aug 15/2007



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W1377	N2	COAX CABLE-FWD AND AFT ZONE MULTIPLEXER				
D00535		M00642	0305/195/R025			ALL
D00547		M00643				050-099
D00547		M01321	0315/195/R025			150-199, 275-299
W1379	L2	RIGHT-FWD ZONE PSUD TO COLUMN TIMER DECODERS				
D06105J		AP0307	POS 09	D06105P	W1449	050-099, 162-199
D00497		M01319	0310/195/R035			ALL
D00511		M01320	0320/195/R035			ALL
D05159J		PSUD		D05159P		275-299
D05197J		PSUD		D05197P		ALL
D05275J		PSUD		D05275P		280-299
D05429J		PSUD		D05429P		050-099, 150-199, 275-278

MASTER BUNDLE LIST

D280T132

91-21-13

Section W1370

Page 1 End

Jun 06/2008



767-200/300 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W1381 R2 CENTER-FWD ZONE PSUD TO COLUMN TIMER DECODERS						
D00501		M01319	0310/195/R035			ALL
D00515		M01320	0320/195/R035			ALL
D05161J		PSUD		D05161P		050-099, 150-199, 275-278
D05199J		PSUD		D05199P		ALL
D05253J		PSUD		D05253P		280-299
D05527J		PSUD		D05527P		275-299
W1383 L2 LEFT-FWD ZONE PSUD TO COLUMN TIMER DECODERS						
D00505		M00297				050-099
D00519		M00298				050-099
D00505		M01319	0310/195/R035			150-199, 275-299
D00519		M01320	0320/195/R035			150-199, 275-299
D05155J		PSUD		D05155P		ALL
D05157J		PSUD		D05157P		050-099, 150-199, 275-278
D05251J		PSUD		D05251P		280-299
D05501J		PSUD		D05501P		275-299
W1387 R2 CENTER-AFT ZONE PSUD POWER INPUT CATIA DESIGNED						
D01867		M01306	0650/150/R066			ALL
D05181J		PSUD		D05181P		ALL
D05185J		PSUD		D05185P		ALL
D05491J		PSUD		D05491P		050-099, 150-199, 275-278

MASTER BUNDLE LIST

D280T132

91-21-13

Section W1380

Page 1 End

Mar 07/2008



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W1398 D06810P	N2	LEFT ESCAPE HATCH HEATER BLANKET STATION 871		D06810J	W1256	ALL



767-200/300 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W1400	N2	RIGHT ESCAPE HATCH HEATER BLANKET STATION 871				
D06814P				D06814J	W1256	ALL
W1407	N2	VIDEO SYSTEM-FROM E2-5 TO VIDEO CONTROL CENTER				
D05593J		AE0320	POS 25	D05593P	W0149	ALL
D06666J		AP0202	POS 03	D06666P	W0047	275
D06666J		AP0205	POS 03	D06666P	W0047	276-299
D06035J		AP0307	POS 04	D06035P	W1447	050-099, 150-199

MASTER BUNDLE LIST

D280T132

91-21-13
Section W1400
Page 1 End
Mar 09/2006



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W1413	N2	VIDEO SYSTEM-COAX CABLE ANTENNA COUPLER				
D05801J		AP1501	POS 15	D05801P	W1419	ALL
D01219		M00820	F 295/569/FS			ALL
W1415	R2	VIDEO SYSTEM-ANTENNA COUPLER				
D05599J		AP1501	POS 22	D05599P	W1417	ALL
D01221		M00820	F 295/569/FS			ALL
W1417	N2	P37 TO PROJ/MONITORS/VDU & VIDEO CONTROL CENTER CATIA DESIGNED				
D09019J				D09019P	W1417	050-099
D09019P				D09019J	W1417	050-099
D06165J			1197+132/180/R80	D06165P	W9026	152
D05561P		AE0218	POS 19	D05561J	W0192	ALL
D04571J		AE0317	POS 24	D04571P	W0117	ALL
D06099J		AP0202	POS 02	D06099P	W0047	275
D06668J		AP0202	POS 04	D06668P	W0047	275
D06099J		AP0205	POS 06	D06099P	W0047	276-299
D06668J		AP0205	POS 07	D06668P	W0047	276-299
D06039J		AP0307	POS 03	D06039P	W1447	050-099, 150-199
D06037J		AP0307	POS 07	D06037P	W1447	050-099, 150-199
D05599P		AP1501	POS 22	D05599J	W1415	ALL
D01231		M00819	1125/280/0000			050-099
D01233		M00819	1125/280/0000			050-099
D02031		M01526	0621/308/R035			050-099, 150-199
D02033		M01526	0621/308/R035			050-099, 150-199
D02043		M01527	1186/308/R035			150-199
D02045		M01527	1186/308/R035			150-199
D02245		M01615	0730/308/R036			150-199
D02247		M01615	0730/308/R036			150-199
D02323		M01658	0401/308/R038			275-299
D02351		M01667	0401/308/R038			280-299
D02361		M01670	0731/308/R038			275-299
D02391		M01679	1032/308/R038			275-299
D02413		M01685	1032/308/R038			280-299
D02433		M01691	1362/308/R038			275-299
D02231		M09009	GALLEY 3/ /			050-099
D02233		M09009	GALLEY 3/ /			050-099
D02351		M1667				275-278
D02413		M1685				275-278

MASTER BUNDLE LIST

D280T132

91-21-13

Section W1410

Page 1

Aug 05/2009



767-200/300 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity	
W1419	N2	VIDEO SYSTEM-COAX CABLE ANTENNA CATIA DESIGNED					
D05597J		AP0202	POS 05	D05597P	W0047	275	
D05597J		AP0205	POS 04	D05597P	W0047	276-299	
D06041J		AP0307	POS 11	D06041P	W1447	050-099, 150-199	
D05801P		AP1501	POS 15	D05801J	W1413	ALL	

MASTER BUNDLE LIST

D280T132

91-21-13

Section W1410

Page 2 End

Aug 15/2007



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W1423	N2	CTR ZN SEB TO AFT COLUMN TIMER DECODER CATIA DESIGNED				
D01865		M01306	0650/150/R066			ALL
D01875		M01307	0627/160/R070			ALL
D00631		SEB				ALL
W1427	N2	COAX CABLE-LEFT ANTENNA VIDEO LO BAND				
D01243		M00820	F 295/569/FS			ALL
D01245		M00970	F 334/ /FSS			ALL
W1429	N2	COAX CABLE-LEFT ANTENNA VIDEO HI BAND				
D01235		M00820	F 295/569/FS			ALL
D01237		M00847	F 403/ /FSS			ALL

MASTER BUNDLE LIST

D280T132

91-21-13

Section W1420

Page 1 End

Jan 21/2005



767-200/300 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W1431	N2	COAX CABLE-RIGHT ANTENNA VIDEO LO BAND				
D01247		M00820	F 295/569/FS			ALL
D01249		M00969	F 334/ /FSS			ALL
W1433	N2	COAX CABLE-RIGHT ANTENNA VIDEO HI BAND				
D01239		M00820	F 295/569/FS			ALL
D01241		M00846	F 403/ /FSS			ALL
W1435	L2	P2 TO E8 SHELF-EICAS UPPER DISPLAY UNIT				
D05055P		AE0221	POS 01	D05055J	W1035	ALL
D05111J		AF0119	POS 25	D05111P	W0011	ALL
D00205		N10013	P002-00/ /			ALL
W1437	R2	P2 TO E8 SHELF-EICAS LOWER DISPLAY UNIT				
D05057P		AE0221	POS 03	D05057J	W1037	ALL
D05113J		AF0119	POS 15	D05113P	W0031	ALL
D00207		N10014	P002-00/ /			ALL

MASTER BUNDLE LIST

D280T132

91-21-13

Section W1430

Page 1 End

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W1443 N2 LEFT-AFT ZONE PSUD & SEAT ELEX BOX TO AFT COLUMN TIMER DECODER						
D01857		M01306	0650/150/R066			ALL
D01859		M01306	0650/150/R066			ALL
D01877		M01307	0627/160/R070			ALL
D05531J		PSUD		D05531P		ALL
D05533J		PSUD		D05533P		ALL
D01885		SEB				ALL
W1445 N2 RIGHT AFT ZN PSUD & SEB TO AFT CTD CATIA DESIGNED						
D01861		M01306	0650/150/R066			ALL
D01873		M01307	0627/160/R070			ALL
D01855		M1306				ALL
D05449J		PSUD		D05449P		ALL
D05451J		PSUD		D05451P		ALL
D01883		SEB				ALL
W1447 R2 PURSER STATION/VIDEO CONTROL/CREW REST JUMPER BUNDLE						
D06111J		AP0205	POS 03	D06111P	W3006	050-099, 162-199
D06043P		AP0305	POS 02	D06043J		050-099
D06047P		AP0305	POS 05	D06047J	W0047	050-099
D06045P		AP0305	POS 06	D06045J	W0047	050-099
D06049P		AP0305	POS 08	D06049J		050-099
D06039P		AP0307	POS 03	D06039J	W1417	050-099, 150-199
D06035P		AP0307	POS 04	D06035J	W1407	050-099, 150-199
D06031P		AP0307	POS 05	D06031J	W0645	050-099, 150-199
D06037P		AP0307	POS 07	D06037J	W1417	050-099, 150-199
D06041P		AP0307	POS 11	D06041J	W1419	050-099, 150-199
D06043P		AP0405	POS 02	D06043J	W0047	150-199
D06047P		AP0405	POS 05	D06047J	W0047	150-199
D06045P		AP0405	POS 06	D06045J	W0047	150-199
D09091P		AP0405	POS 07	D09091J	W0047	150, 152-199
D06049P		AP0405	POS 08	D06049J		150, 153-199
D06049P		AP0405	POS 08	D06049J	W0047	151-152
W1449 N2 PURSER STATION/VIDEO CONTROL/CREW REST JUMPER BUNDLE						
D06125J		AP0205	POS 02	D06125P	W3000	050-099, 162-199
D06123J		AP0205	POS 06	D06123P	W3008	050-099, 162-199
D06109J		AP0205	POS 07	D06109P	W3006	050-099, 162-199
D13444P		AP0305	POS 01	D13444J	W0057	050-099
D06033P		AP0307	POS 01	D06033J	W0665	050-099, 150-199

MASTER BUNDLE LIST

D280T132

91-21-13

Section W1440

Page 1

Aug 15/2007



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity	
W1449	N2	PURSER STATION/VIDEO CONTROL/CREW REST JUMPER BUNDLE (continued)					
D08706P		AP0307	POS 02	D08706J	W1230	050-099, 162-199	
D08688P		AP0307	POS 06	D08688J	W0812	050-099, 150-199	
D13442P		AP0307	POS 08	D13442J	W1224	050-099, 150-199	
D06105P		AP0307	POS 09	D06105J	W1379	050-099, 162-199	
D06107P		AP0307	POS 10	D06107J	W0873	050-099, 162-199	
D13444P		AP0405	POS 01	D13444J	W0057	150-199	



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W1463	N2	PSUD LOOP-TO-LOOP 48 INCHES				
D01569			MULTI/ /			050-099, 162-199, 275-276
D01571			MULTI/ /			050-099, 162-199, 275-276
W1465	N2	PSUD LOOP-TO-LOOP 53 INCHES				
D01573			MULTI/ /			ALL
D01575			MULTI/ /			ALL
W1467	N2	PSUD LOOP-TO-LOOP 60 INCHES				
D01577			MULTI/ /			ALL
D01579			MULTI/ /			ALL
W1469	N2	PSUD LOOP-TO-LOOP 138 INCHES				
D01581			MULTI/ /			050-099, 162-199, 275-299
D01583			MULTI/ /			050-099, 162-199, 275-299

MASTER BUNDLE LIST

D280T132

91-21-13

Section W1460

Page 1 End

Jan 21/2005



767-200/300 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W1471	N2	PSUD LOOP-TO-LOOP 200 INCHES				
D01585			MULTI/ /			ALL
D01587			MULTI/ /			ALL
W1473	N2	PSUD LOOP-TO-LOOP 290 INCHES				
D01589			MULTI/ /			150-199
D01591			MULTI/ /			150-199
W1477	N2	PSUD LOOP-TO-LOOP 84 INCHES				
D01597			MULTI/ /			050-099, 150-199, 277-299
D01599			MULTI/ /			050-099, 150-199, 277-299
W1479	N2	COAX CABLE-MID TO AFT ZONE MULTIPLEXER				
D01871		M01307	0627/160/R070			ALL
D01887		M01321	0315/195/R025			ALL

MASTER BUNDLE LIST

D280T132

91-21-13

Section W1470

Page 1 End

Jan 21/2005



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W1485	N2	JUMPER - SEB TO SEB - RIGHT OUTBOARD CATIA DESIGN				
D05287		SEB				280-299
D05289		SEB				280-299
W1487	N2	JUMPER - SEB TO SEB - CENTER CATIA DESIGN				
D05295		SEB				150-199, 280-299
D05297		SEB				150-199, 280-299
W1489	N2	JUMPER - SEB TO SEB - LEFT OUTBOARD CATIA DESIGN				
D05355		SEB				280-299
D05359		SEB				280-299

MASTER BUNDLE LIST

D280T132

91-21-13

Section W1480

Page 1 End

Aug 15/2007



767-200/300 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W1498	N2	LEFT ESCAPE HATCH HEATER BLANKET STATION 915				
D06812P				D06812J	W1256	150-199, 275-299
W1499	L2	E1-2 SHELF TO P6 PNL-MCDP SHORTING PLUG				
D01447 D05867J		AE0319	P006-05 / POS 29	D05867P	W1103	ALL ALL

MASTER BUNDLE LIST

D280T132

91-21-13

Section W1490

Page 1 End

Mar 09/2006



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W1500	N2	RIGHT ESCAPE HATCH HEATER BLANKET STATION 915				
D06816P				D06816J	W1256	150-199, 275-299
W1501	L2	INTERSHELF L TO P36				
D05315P		AE0209	POS 28	D05315J	W0176	ALL
D04353P		AE0303	POS 05	D04353J	W0101	ALL
D04351J		AE0305	POS 11	D04351P	W0105	ALL
D05371J		AE0305	POS 59	D05371P	W0161	ALL
W1503	L2	INTERSHELF,L,E1-2 TO SHELVES				
D05205J		AE0305	POS 38	D05205P	W1103	ALL
D04525J		AE0305	POS 56	D04525P	W0109	ALL
D05201J		AE0306	POS 34	D05201P	W0133	ALL
W1505	L2	INTERSHELF L E1-3,E1-5				
D04941J		AE0305	POS 13	D04941P	W0105	ALL
D04943J		AE0322	POS 28	D04943P	W0135	ALL

MASTER BUNDLE LIST

D280T132

91-21-13

Section W1500

Page 1 End

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W1511	R2	INTERSHELF R,E1-1 TO E2-1				
D05549P		AE0303	POS 14	D05549J	W0111	ALL
D05489P		AE0308	POS 15	D05489J	W0141	ALL
D05397J		AE0317	POS 61	D05397P	W0171	ALL
D05407J		AE0320	POS 11	D05407P	W0145	ALL
W1513	R2	INTERSHELF R,E1-2 TO SHELVES				
D04875J		AE0317	POS 10	D04875P	W1100	ALL
D05529J		AE0317	POS 17	D05529P	W0117	ALL
D04873J		AE0317	POS 25	D04873P	W0119	ALL
D04339J		AE0320	POS 41	D04339P	W0145	ALL
W1515	R2	INTERSHELF R, E1-5 TO SHELVES				
D04859J		AE0317	POS 12	D04859P	W0115	ALL
D04857J		AE0317	POS 22	D04857P	W0119	ALL
D05861J		AE0320	POS 05	D05861P	W0143	ALL

MASTER BUNDLE LIST

D280T132

91-21-13
Section W1510
Page 1 End
Mar 09/2006



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W1521	C2	INTERSHELF C TO P36 & P37				
D05313P		AE0209	POS 02	D05313J	W0184	ALL
D05319P		AE0224	POS 02	D05319J	W0192	ALL
D04357P		AE0303	POS 13	D04357J	W0121	ALL
D04355J		AE0307	POS 42	D04355P	W0127	050-099, 150-199
D04355J		AE0307	POS 43	D04355P	W0127	275-299
W1523	C2	INTERSHELF C E1-2,E1-4,E1-6,E8 DELTA				
D04969J		AE0307	POS 103	D04969P	W0181	ALL
D04915J		AE0307	POS 55	D04915P	W1096	ALL
D04913J		AE0307	POS 95	D04913P	W0127	ALL
W1527	C2	INTERSHELF E1-4 TO E2-4				
D04343J		AE0307	POS 34	D04343P	W0155	ALL
D04331J		AE0307	POS 59	D04331P	W0014	ALL
D04333J		AE0307	POS 89	D04333P	W0127	ALL

MASTER BUNDLE LIST

D280T132

91-21-13

Section W1520

Page 1 End

Jun 28/2006



767-200/300 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity	
W1533	L2	INTERSHELF L E2-2 TO SHELVES					
D05573J		AE0305	POS 55	D05573P	W0109	ALL	
D04721J		AE0306	POS 05	D04721P	W0133	ALL	

MASTER BUNDLE LIST

D280T132

91-21-13
Section W1530
Page 1 End
Mar 09/2006



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W1541	R2	INTERSHELF R2A TO P37				
D05317P		AE0218	POS 29	D05317J	W0192	ALL
D04363P		AE0308	POS 14	D04363J	W0141	ALL
D04361J		AE0317	POS 56	D04361P	W0119	ALL
D05373J		AE0317	POS 59	D05373P	W0171	ALL

MASTER BUNDLE LIST

D280T132

91-21-13

Section W1540

Page 1 End

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity	
W1561	L2	INTERSHELF,L,E1-6 TO SHELVES					
D04719J		AE0305	POS 30	D04719P	W0161	ALL	
D04831J		AE0305	POS 50	D04831P	W0105	ALL	
D04717J		AE0306	POS 41	D04717P	W0133	ALL	

MASTER BUNDLE LIST

D280T132

91-21-13

Section W1560

Page 1 End

Mar 09/2006



Bundle	Sep	Description	Location	MW Connector	MW Bundle	Effectivity
Equip		Matewith				
W1577	N2	VIDEO SIGNAL SPLITTER TO PROJECTOR/VIDEO MONITOR				
I D01231		M00819	1125/280/0000			150-199
I D01233		M00819	1125/280/0000			150-199
D02047		M01527	1186/308/R035			150-199
D02051		M01527	1186/308/R035			150-199
W1579	R2	VIDEO SIGNAL SPLITTER TO PROJECTOR/VIDEO MONITOR				
D11822		M01432	1270/280/0000			150-199
D11824		M01432	1270/280/0000			150-199
D02049		M01527	1186/308/R035			150-199
D02053		M01527	1186/308/R035			150-199

MASTER BUNDLE LIST

D280T132

91-21-13

Section W1570

Page 1 End

Aug 05/2009



767-200/300 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W1581	C2	INTERSHELF C E1-6 TO SHELF				
D05153J		AE0307	POS 26	D05153P	W0181	ALL
D05151J		AE0307	POS 30	D05151P	W0153	ALL
W1589	R2	VIDEO SIGNAL SPLITTER TO PROJECTOR/VIDEO MONITOR				
D02037		M01526	0621/308/R035			150-199
D02041		M01526	0621/308/R035			150-199
D02227		M01563	0605/ /			150-199
D02229		M01563	0605/ /			150-199

MASTER BUNDLE LIST

D280T132

91-21-13

Section W1580

Page 1 End

Mar 09/2006



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W1591	R2	VIDEO SIGNAL SPLITTER TO PROJECTOR/VIDEO MONITOR				
D02035		M01526	0621/308/R035			050-099, 150-199
D02039		M01526	0621/308/R035			050-099, 150-199
D02223		M01562	0442/ /			150-199
D02225		M01562	0442/ /			150-199
D02223		M09008	GALLEY 3/ /			050-099
D02225		M09008	GALLEY 3/ /			050-099
W1597	R2	VIDEO SIGNAL SPLITTER TO PROJECTOR/VIDEO MONITOR				
D06191J				D06191P		050-099
D02773		M01526	0621/308/R035			050-099
D02775		M01526	0621/308/R035			050-099
W1599	N2	EFIS INTERSHELF N,E1-2 TO E1-4				
D04371J		AE0319	POS 26	D04371P	W1103	ALL
D04387J		AE0319	POS 58	D04387P	W1127	ALL

MASTER BUNDLE LIST

D280T132

91-21-13

Section W1590

Page 1 End

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W1601	L2	INTERSHELF E1-1 TO E2-1 SHELF				
D05413P		AE0303	POS 09	D05413J	W0101	ALL
D05547P		AE0308	POS 03	D05547J	W0131	ALL
D05391J		AE0319	POS 36	D05391P	W0105	ALL
W1603	L2	INTERSHELF L,E1-2,E1-4,E2-3				
D04923J		AE0305	POS 42	D04923P	W1103	ALL
D05223J		AE0305	POS 43	D05223P	W1103	ALL
D05585J		AE0305	POS 52	D05585P	W0107	ALL
D05229J		AE0306	POS 44	D05229P	W0135	ALL
D03691J		AE0319	POS 39	D03691P	W0105	ALL
D03129		K02230				ALL
W1605	L2	INTERSHELF L E1-3,E1-5,E2-3 DELTA				
D04855J		AE0305	POS 20	D04855P	W0105	ALL
D06143J		AE0305	POS 22	D06143P	W0105	050-099, 150-152, 155-199, 275-299
D04853J		AE0305	POS 58	D04853P	W0109	ALL
D05207J		AE0306	POS 14	D05207P	W0135	ALL

MASTER BUNDLE LIST

D280T132

91-21-13

Section W1600
Page 1 End
Mar 09/2006



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W1615	R2	INTERSHELF R E1-3,E1-6,E2-3 DELTA				
D04683J		AE0317	POS 46	D04683P	W0115	ALL
D04769J		AE0317	POS 60	D04769P	W0171	ALL
D04767J		AE0320	POS 12	D04767P	W0145	ALL
D03693J		AE0322	POS 24	D03693P	W0145	ALL
D03131		K02231				ALL
W1619	R2	INTERSHELF E1-5,E2-3				
D04805J		AE0317	POS 54	D04805P	W0119	ALL
D04821J		AE0320	POS 14	D04821P	W0145	ALL

MASTER BUNDLE LIST

D280T132

91-21-13

Section W1610

Page 1 End

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W1633	L2	INTERSHELF L,E1-3,E2-2,E2-5				
D05827J		AE0305	POS 19	D05827P	W0105	050-099, 150-152, 155-199, 277-299
D04781J		AE0305	POS 46	D04781P	W0105	ALL
D04229J		AE0306	POS 04	D04229P	W0133	ALL
D04735J		AE0306	POS 08	D04735P	W0133	ALL
D04681J		AE0306	POS 33	D04681P	W0133	ALL
D04737J		AE0306	POS 56	D04737P	W0139	ALL

MASTER BUNDLE LIST

D280T132

91-21-13

Section W1630

Page 1 End

Mar 09/2006



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W1645	R2	INTERSHELF,R-AIDS				
D04447J		AE0317	POS 51	D04447P	W0119	ALL
D04449J		AE0320	POS 13	D04449P	W0145	ALL
W1649	R2	INTERSHELF E1-5,E2-3,E2-5				
D05505J		AE0317	POS 53	D05505P	W0119	ALL
D04811J		AE0320	POS 16	D04811P	W0145	ALL
D04813J		AE0320	POS 24	D04813P	W0139	ALL

MASTER BUNDLE LIST

D280T132

91-21-13

Section W1640

Page 1 End

Mar 09/2006



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W1661	R2	VIDEO SIGNAL SPLITTER TO PROJECTOR/VIDEO MONITOR				
D02231		M01611	0650/280/0000			150-199
D02233		M01611	0650/280/0000			150-199
D02249		M01615	0730/308/R036			150-199
D02251		M01615	0730/308/R036			150-199
W1663	R2	VIDEO SIGNAL SPLITTER TO PROJECTOR/VIDEO MONITOR				
D02235		M01612	0815/280/0000			150-199
D02237		M01612	0815/280/0000			150-199
D02253		M01615	0730/308/R036			150-199
D02255		M01615	0730/308/R036			150-199



767-200/300 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W1700	L2	EICAS-E8 TO P61 (LA)				
D06200P		AE0219	POS 03	D06200J	W2002	ALL
D05400P		AF0204	POS 16	D05400J	W0062	ALL
W1701	L2	E8 TO E2-3 SHELF				
D05009P		AE0219	POS 04	D05009J	W2002	ALL
D05011P		AE0219	POS 05	D05011J	W2002	ALL
D05227J		AE0306	POS 12	D05227P	W0135	ALL
D05247J		AE0319	POS 46	D05247P	W0105	ALL
W1702	L2	EICAS-E8 TO P36				
D05360P		AE0209	POS 35	D05360J	W0176	ALL
D06202P		AE0219	POS 06	D06202J	W2000	ALL
D06208P		AE0219	POS 07	D06208J	W2000	ALL
D06980P		AE0221	POS 07	D06980J	W1039	155-157, 166-199, 277-299
W1703	R2	E8 TO E2-3 SHELF				
D05063P		AE0219	POS 33	D05063J	W2000	ALL
D05065J		AE0320	POS 10	D05065P	W0145	ALL
W1704	L2	EICAS-E8 TO P54,P37,P33				
D05332P		AE0207	POS 02	D05332J	W0144	ALL
D05372P		AE0218	POS 46	D05372J	W0188	ALL
D06204P		AE0219	POS 21	D06204J	W2002	ALL
D05540P		AE0226	POS 07	D05540J	W1082	ALL
W1705	C2	E8 RACK TO E1-4 SHELF				
D05061P		AE0219	POS 32	D05061J	W2002	ALL
D04815J		AE0319	POS 53	D04815P	W0127	ALL
W1706	L2	EICAS-E8 TO P61				
D06206P		AE0219	POS 08	D06206J	W2000	ALL
D05402P		AF0204	POS 24	D05402J	W0062	ALL
W1709	L2	TCAS COAX-FROM E1-3 SHELF TO E2-3(B297)				
D02539		B00297	SHELF/E02/03			050-099, 150-199, 277-299

MASTER BUNDLE LIST

D280T132

91-21-13

Section W1700

Page 1 End

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W1710	R2	EICAS-E8 TO P61 (LB)				
D06210P		AE0219	POS 14	D06210J	W2002	ALL
D05406P		AF0204	POS 69	D05406J	W0066	ALL
W1711	N2	EICAS DISPLAY SELECT PNL(P9) TO P61 AND P1 PNL				
D05115J		AF0119	POS 07	D05115P	W0011	ALL
D05117J		AF0119	POS 19	D05117P	W0031	ALL
D05311P		AF0204	POS 19	D05311J	W0062	ALL
D00209		M10195	P009-00/ /			ALL
W1712	R2	EICAS-E8 TO P37,E2				
D06212P		AE0219	POS 17	D06212J	W2000	ALL
D06214P		AE0219	POS 18	D06214J	W2000	ALL
D05374P		AE0224	POS 04	D05374J	W0192	ALL
W1716	S2	EICAS-E8 TO P4				
D06216P		AE0219	POS 31	D06216J	W2002	ALL
D05410P		AF0204	POS 76	D05410J	W0070	ALL
W1718	S2	EICAS-E8 TO P36,P37,P54				
D05366P		AE0209	POS 14	D05366J	W0184	ALL
D06218P		AE0219	POS 12	D06218J	W2002	ALL
D05376P		AE0224	POS 10	D05376J	W0198	ALL
D05546P		AE0226	POS 03	D05546J	W1082	ALL

MASTER BUNDLE LIST

D280T132

91-21-13
Section W1710
Page 1 End
Mar 09/2006



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W1720	S2	EICAS-E8 TO P54				
D06220P		AE0219	POS 13	D06220J	W2002	ALL
D05548P		AE0226	POS 08	D05548J	W1082	ALL
W1722	A2	EICAS-E8 TO E2-4,P34,P37				
D05340P		AE0204	POS 11	D05340J	W0026	ALL
D06222P		AE0219	POS 20	D06222J	W2002	ALL
D05378P		AE0224	POS 09	D05378J	W0198	ALL
D05206J		AE0307	POS 13	D05206P	W0018	ALL
W1724	L2	*PCAS-E8 TO E1				
D06224P		AE0219	POS 22	D06224J	W2002	ALL
D05122J		AE0319	POS 10	D05122P	W1092	ALL
W1725	C2	CCA-C, E1-4 SHELF TO R WW DISC CATIA DESIGNED				
D04405J		AE0307	POS 15	D04405P	W0127	ALL
D04675J		AL1002	POS 13	D04675P	W1727	ALL
W1726	L2	EICAS-E8 TO E2-4				
D06226P		AE0219	POS 23	D06226J	W2002	ALL
D05202J		AE0306	POS 15	D05202P	W0014	ALL
W1727	C2	CCA-C, R WW DISC TO CCA-C				
D04675P		AL1002	POS 13	D04675J	W1725	ALL
D00193		M00275	R0233/12/RS			ALL
W1728	R2	EICAS-E8 TO E1-2				
D06228P		AE0219	POS 15	D06228J	W2000	ALL
D05140J		AE0319	POS 12	D05140P	W1100	ALL
W1729	R2	CCA-R, E1-5 SHELF TO L WW DISC				
D04529J		AE0317	POS 57	D04529P	W0119	ALL
D04677J		AL1003	POS 08	D04677P	W1731	ALL

MASTER BUNDLE LIST

D280T132

91-21-13

Section W1720

Page 1 End

Aug 15/2007



767-200/300 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W1730	R2	EICAS-E8 TO P33				
D05334P		AE0203	POS 22	D05334J	W0142	ALL
D06230P		AE0219	POS 16	D06230J	W2000	ALL
W1731	R2	CCA-R, L WW DISC TO CCA-R				
D04677P		AL1003	POS 08	D04677J	W1729	ALL
D00201		M00276	L0250/14/RS			ALL

MASTER BUNDLE LIST

D280T132

91-21-13
Section W1730
Page 1 End
Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W1769	N2	TCAS COAX-SHELF TO BOTTOM ANT.DISC.				
D06095J		AE0325	POS 07	D06095P	W1181	050-099, 150-199, 277-299
D06137J		AE0325	POS 08	D06137P	W1181	050-099, 150-199, 277-299
D06133J		AE0325	POS 09	D06133P	W1181	050-099, 150-199, 277-299
D06135J		AE0325	POS 10	D06135P	W1181	050-099, 150-199, 277-299
D06097J		AE0326	POS 01	D06097P	W1901	050-099, 150-199, 277-299
D06127J		AE0326	POS 02	D06127P	W1901	050-099, 150-199, 277-299
D06129J		AE0326	POS 03	D06129P	W1901	050-099, 150-199, 277-299
D06131J		AE0326	POS 04	D06131P	W1901	050-099, 150-199, 277-299

MASTER BUNDLE LIST

D280T132

91-21-13

Section W1760

Page 1 End

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W1771	N2	TCAS COAX-SHELF TO ANT.DISC.				
D06079J				D06079P	W1791	050-099, 150-199, 277-299
D06087J		AE0325	POS 02	D06087P	W1171	050-099, 150-199, 277-299
W1773	N2	COAX-TCAS SUPPRESSION				
D02541		B00297	SHELF/E02/03			ALL
D02543		D01337 T	//			ALL
W1775	N2	TCAS COAX-SHELF TO ANT.DISC.				
D06081J				D06081P	W1795	050-099
D06081J			368/315/0	D06081P	W1795	150-199, 277-299
D06089J		AE0325	POS 01	D06089P	W1175	050-099, 150-199, 277-299
W1777	N2	TCAS COAX-SHELF TO ANT.DISC.				
D06083J			373/315/0	D06083P	W1797	050-099, 150-199, 277-299
D06091J		AE0325	POS 04	D06091P	W1177	050-099, 150-199, 277-299
W1779	N2	TCAS COAX-SHELF TO ANT.DISC.				
D06085J			373/315/0	D06085P	W1799	050-099, 150-199, 277-299
D06093J		AE0325	POS 03	D06093P	W1179	050-099, 150-199, 277-299

MASTER BUNDLE LIST

D280T132

91-21-13

Section W1770

Page 1 End

Jun 28/2006



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W1791	N2	COAX-TCAS ANT.TO DISC.				
D06079P				D06079J	W1771	050-099, 150-199, 277-299
D02465		M01706	0380/315/0000			050-099, 150-199, 277-299
W1795	N2	COAX-TCAS ANT.TO DISC.				
D06081P				D06081J	W1775	050-099, 150-199, 277-299
D02529		M01706	0380/315/0000			050-099, 150-199, 277-299
W1797	N2	COAX-TCAS ANT.TO DISC.				
D06083P			368/315/0	D06083J	W1777	050-099, 150-199, 277-299
D02531		M01706	0380/315/0000			050-099, 150-199, 277-299
W1799	N2	COAX-TCAS ANT.TO DISC.				
D06085P			368/315/0	D06085J	W1779	050-099, 150-199, 277-299
D02533		M01706	0380/315/0000			050-099, 150-199, 277-299

MASTER BUNDLE LIST

D280T132

91-21-13

Section W1790

Page 1 End

Jan 21/2005



767-200/300 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W1801	N2	VIDEO SIGNAL SPLITTER TO PROJECTOR/VIDEO MONITOR				
D02317		M1658				275-299
D02325		M1659				275-299
D02483		M1659				275-299
W1803	R2	VIDEO SIGNAL SPLITTER TO PROJECTOR/VIDEO MONITOR				
D02319		M01658	0401/308/R038			277-278
D02327		M01660	0410/295/R038			277-278
D02485		M01660	0410/295/R038			277-278
D02319		M1658				275-276, 280-299
D02327		M1660				275-276, 280-299
D02485		M1660				275-276, 280-299
W1805	N2	VIDEO SPLITTER/VDU TO PROJECTOR/VIDEO MONITOR CATIA DESIGNED				
D02329		M01661	0401/308/R038			280-299
D02337		M01662	0565/295/L038			280-299
D02329		M1661				275-278
D02337		M1662				275-278
D02487		M1662				275-278
W1807	N2	VIDEO SPLITTER/VDU TO PROJECTOR/VIDEO MONITOR CATIA DESIGNED				
D02331		M01661	0401/308/R038			280-299
D02491		M01663	0539/260/R070			280-299
D02331		M1661				275-278
D02489		M1663				275-278
D02491		M1663				275-278
W1809	N2	VIDEO SIGNAL SPLITTER TO PROJECTOR/VIDEO MONITOR				
D02103		M01665	0362/260/L070			280-299
D02339		M1664				275-299
D02103		M1665				275-278

MASTER BUNDLE LIST

D280T132

91-21-13

Section W1800

Page 1 End

Feb 06/2009



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W1811	R2	VIDEO SIGNAL SPLITTER TO PROJECTOR/VIDEO MONITOR				
D02341		M1664				275-299
D02107		M1666				275-299
W1813	N2	VIDEO SIGNAL SPLITTER TO PROJECTOR/VIDEO MONITOR				
D02347		M01667	0401/308/R038			280-299
D02165		M01668	0350/260/0000			280-299
D02347		M1667				275-278
D02165		M1668				275-278
D02177		M1668				275-278
W1815	N2	VIDEO SIGNAL SPLITTER TO PROJECTOR/VIDEO MONITOR				
D02349		M01667	0401/308/R038			280-299
D02163		M01669				277-299
D02349		M1667				275-278
D02163		M1669				275-276
W1817	N2	VIDEO SIGNAL SPLITTER TO PROJECTOR/VIDEO MONITOR				
D02355		M01670	0731/308/R038			280-299
D02363		M01671	0695/295/L038			280-299
D02493		M01671	0695/295/L038			280-299
D02355		M1670				275-278
D02363		M1671				275-278
D02493		M1671				275-278
W1819	N2	VIDEO DIST UNIT #5 TO PROJECTOR/MONITOR -10				
D02357		M01670	0731/308/R038			280-299
D02365		M01672	0695/295/R038			280-299
D02495		M01672	0695/295/R038			280-299
D02357		M1670				275-278
D02365		M1672				275-278
D02495		M1672				275-278

MASTER BUNDLE LIST

D280T132

91-21-13

Section W1810

Page 1 End

Aug 05/2009



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W1821	N2	VIDEO DIST UNIT #6 TO PROJECTOR/MONITOR -11 CATIA DESIGNED				
D02367		M01673	0731/308/R038			280-299
D02375		M01674	0858/260/L070			280-299
D02367		M1673				275-278
D02375		M1674				275-278
W1823	N2	VIDEO SPLITTER/VDU TO PROJECTOR/VIDEO MONITOR CATIA DESIGNED				
D02369		M01673	0731/308/R038			280-299
D02513		M01675	0858/260/R070			280-299
D02369		M1673				275-278
D02513		M1675				275-278
W1825	N2	VIDEO SIGNAL SPLITTER TO PROJECTOR/VIDEO MONITOR				
D02377		M01676	0731/308/R038			280-299
D02169		M01677	0563/280/L038			280-299
D02181		M01677	0563/280/L038			280-299
D02377		M1676				275-278
D02169		M1677				275-278



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W1833	N2	VIDEO SIGNAL SPLITTER TO PROJECTOR/VIDEO MONITOR				
D02385		M1679				275-299
D02393		M1680				275-299
D02395		M1680				275-299
W1835	N2	VIDEO SIGNAL SPLITTER TO PROJECTOR/VIDEO MONITOR				
D02387		M1679				275-299
D02397		M1681				275-299
D02399		M1681				275-299
W1837	N2	VIDEO SIGNAL SPLITTER TO PROJECTOR/VIDEO MONITOR				
D02401		M1682				275-299
D02073		M1683				275-299
D02077		M1683				275-299
W1839	N2	VIDEO SIGNAL SPLITTER TO PROJECTOR/VIDEO MONITOR				
D02403		M1682				275-299
D02071		M1684				275-299
D02075		M1684				275-299

MASTER BUNDLE LIST

D280T132

91-21-13

Section W1830

Page 1 End

Jan 21/2005



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W1841	N2	VIDEO SIGNAL SPLITTER TO PROJECTOR/VIDEO MONITOR				
D02409		M1685				275-299
D02417		M1686				275-299
D02497		M1686				275-299
W1843	N2	VIDEO SIGNAL SPLITTER TO PROJECTOR/VIDEO MONITOR				
D02411		M1685				275-299
D02499		M1687				275-299
D02501		M1687				275-299
W1845	N2	VIDEO SPLITTER/VDU TO PROJECTOR/VIDEO MONITOR				
D02419		M01688	1032/308/R038			280-299
D01943		M01689	0858/260/L070			280-299
W1849	N2	VIDEO SIGNAL SPLITTER TO PROJECTOR/VIDEO MONITOR				
D02427		M1691				275-299
D02435		M1692				275-299
D02437		M1692				275-299

MASTER BUNDLE LIST

D280T132

91-21-13
Section W1840
Page 1 End
Jan 21/2005



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W1851	N2	VIDEO SIGNAL SPLITTER TO PROJECTOR/VIDEO MONITOR				
D02429		M1691				275-299
D02439		M1693				275-299
D02441		M1693				275-299
W1853	R2	VIDEO SIGNAL SPLITTER TO PROJECTOR/VIDEO MONITOR				
D02443		M1694				275-299
D02173		M1695				275-299
D02185		M1695				275-299
W1855	R2	VIDEO SIGNAL SPLITTER TO PROJECTOR/VIDEO MONITOR				
D02445		M1694				275-299
D02171		M1696				275-299
D02183		M1696				275-299
W1857	N2	VIDEO SPLITTER/VDU TO PROJECTOR/VIDEO MONTIOR CATIA DESIGNED				
D02619		M01711	0731/308/R038			280-299
D02631		M01775				280-299
W1859	N2	VIDEO SPLITTER/VDU TO PROJECTOR/VIDEO MONITOR CATIA DESIGNED				
D02621		M01711	0731/308/R038			280-299
D02633		M01776	0866/260/0000			280-299

MASTER BUNDLE LIST

D280T132

91-21-13

Section W1850

Page 1 End

Jan 21/2005



767-200/300 WIRING DIAGRAM MANUAL

Bundle	Sep	Description				
Equip		Matewith	Location	MW Connector	MW Bundle	Effectivity
W1865	N2	VIDEO SPLITTER/VDU TO PROJECTOR/VIDEO MONITOR CATIA DESIGNED				
D02379		M01676	0731/308/R038			280-299
D02167		M01908	0563/280/R038			280-299
D02179		M01908	0563/280/R038			280-299

MASTER BUNDLE LIST

D280T132

91-21-13

Section W1860

Page 1 End

Jan 21/2005



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W1895	N2	VIDEO SIGNAL SPLITTER TO PROJECTOR/VIDEO MONITOR				
D02421		M01688	1032/308/R038			280-299
D01941		M01690	0858/260/R070			280-299
W1897	N2	VIDEO SPLITTER/VDU TO PROJECTOR/VIDEO MONITOR				
D02915		M01667	0401/308/R038			280-299
I D02913		M01668	0350/260/0000			280-299
I D02917		M01668	0350/260/0000			280-299

MASTER BUNDLE LIST

D280T132

91-21-13

Section W1890

Page 1 End

Aug 05/2009



767-200/300 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W1901	N2	TCAS COAX-BOTTOM ANT. TO ANT. DISC.				
D06097P		AE0326	POS 01	D06097J	W1769	050-099, 150-199, 277-299
D06127P		AE0326	POS 02	D06127J	W1769	050-099, 150-199, 277-299
D06129P		AE0326	POS 03	D06129J	W1769	050-099, 150-199, 277-299
D06131P		AE0326	POS 04	D06131J	W1769	050-099, 150-199, 277-299
D02467		M1707				050-099, 150-199, 277-299
D02613		M1707				050-099, 150-199, 277-299
D02615		M1707				050-099, 150-199, 277-299
D02617		M1707				050-099, 150-199, 277-299
W1903	R2	E2-3 TO ATC RF SWITCH				
D04097J D02193		AE0322 S10563	POS 27 0331/132/R043	D04097P	W1099	ALL ALL
W1905	L2	E2-2 TO ATC RF SWITCH				
D04093J D02189		AE0322 S10563	POS 18 0331/132/R043	D04093P	W1063	ALL ALL
W1907	L2	E2-2 TO ATC RF SWITCH				
D04081J D02197		AE0322 S10564	POS 13 0331/132/R043	D04081P	W1065	ALL ALL
W1909	R2	E2-3 TO ATC RF SWITCH				
D04085J D01441		AE0322 S10564	POS 35 0331/132/R043	D04085P	W1069	ALL ALL

MASTER BUNDLE LIST

D280T132

91-21-13

Section W1900
Page 1 End
Aug 05/2009



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W1911	N2	COAX-SATCOM,M1791 LNA/DIP TO M1785 COMBINER				
D02661		M01786	1125/294/L016			156-157, 166-199, 277-299
D02681		M01791	1197+32/310/L010			156-157, 166-199, 277-299
W1913	L2	COAX-SATCOM,M1784 SPLITTER TO E11 SHELF				
D06179P D02655		AP1101 M01784	POS 01 1125/294/L016	D06179J	W1047	277-299 277-299
W1915	L2	COAX-SATCOM,M1784 SPLITTER TO E9				
D06175J D02659		AC1102 M01784	POS 02 1125/294/L016	D06175P	W1195	277-299 277-299
W1917	N2	COAX-SATCOM,M1784 SPLITTER TO E10 SHELF				
D06187P D02657		AP1001 M01784	POS 01 1125/294/L016	D06187J	W1199	277-299 277-299
W1919	L2*	COAX-SATCOM,M1786 COMBINER TO E9 SHELF				
D06177J D02665		AC1102 M01786	POS 03 1125/294/L016	D06177P	W1197	277-299 277-299

MASTER BUNDLE LIST

D280T132

91-21-13

Section W1910

Page 1 End

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W1921	N2	COAX-SATCOM,M1786 COMBINER TO M1790 LNA/DIP,RIGHT				
D02667		M01786	1125/294/L016			277-299
D02713		M01790	1100/285/R060			277-299
W1923	N2	COAX-SATCOM,M1786 COMBINER TO M1789 LNA/DIP,LEFT				
D02669		M01786	1125/294/L016			277-299
D02705		M01789	1100/285/L060			277-299
W1925	N2	COAX-SATCOM,M1785 COMBINER TO TOP HGA LNA/DIP				
D02663		M01786	1125/294/L016			277-299
D02767		M01788	1030/310/L015			277-299
W1927	L2	COAX-SATCOM,M1788 LNA/DIP TO HGA, TOP TO E10 SHELF				
D06183P		AP1001	POS 03	D06183J	W1043	277-299
D02769		M01788	1030/310/L015			156-157, 166-199, 277-299
W1929	N2	COAX-SATCOM, M1787 HIGH PWR RLY TO M1789, LNA/DIP, L				
D02673		M01787	1070/300/L016			277-299
D02707		M01789	1100/285/L060			277-299

MASTER BUNDLE LIST

D280T132

91-21-13

Section W1920

Page 1 End

Aug 15/2007



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W1931	N2	COAX-SATCOM,M1790 LNA/DIP,R TO M1787,HIGH PWR RLY				
D02675		M01787	1070/300/L016			277-299
D02715		M01790	1100/285/R060			277-299
W1933	N2	COAX-SATCOM,M1787 HIGH PWR RLY TO E10 SHELF				
D06185P		AP1001	POS 03	D06185J		277-299
D02671		M01787	1070/300/L016			277-299
W1935	L2	COAX-SATCOM,M1791 LNA/DIP,LGA, TOP TO E11 SHELF				
D06181P		AP1101	POS 03	D06181J	W1045	156-157, 166-199, 277-299
D02683		M01791	1197+32/310/L010			156-157, 166-199, 277-299

MASTER BUNDLE LIST

D280T132

91-21-13

Section W1930

Page 1 End

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W2000	N2	E8 SHELF-FLAT CABLE ASSY 1				
D00881A			//			ALL
D00881B			//			ALL
D00881C			//			ALL
D00881D			//			ALL
D00881E			//			ALL
D00881F			//			ALL
D00883A			//			ALL
D00883B			//			ALL
D00883C			//			ALL
D00883D			//			ALL
D00883E			//			ALL
D00883F			//			ALL
D06202J		AE0219	POS 06	D06202P	W1702	ALL
D06208J		AE0219	POS 07	D06208P	W1702	ALL
D06206J		AE0219	POS 08	D06206P	W1706	ALL
D06240J		AE0219	POS 09	D06240P	W0744	ALL
D06228J		AE0219	POS 15	D06228P	W1728	ALL
D06230J		AE0219	POS 16	D06230P	W1730	ALL
D06212J		AE0219	POS 17	D06212P	W1712	ALL
D06214J		AE0219	POS 18	D06214P	W1712	ALL
D06232J		AE0219	POS 24	D06232P	W0214	ALL
D06242J		AE0219	POS 25	D06242P	W0942	ALL
D06246J		AE0219	POS 26	D06246P	W0942	ALL
D06244J		AE0219	POS 27	D06244P	W1246	ALL
D05063J		AE0219	POS 33	D05063P	W1703	ALL
D06234J		AE0219	POS 34	D06234P	W0222	ALL
D06236J		AE0219	POS 35	D06236P	W0738	ALL
D06238J		AE0219	POS 36	D06238P	W0764	ALL
D00881		M10181	SHELF/E08/01			ALL
D00883		M10182	SHELF/E08/02			ALL
W2002	N2	E8 SHELF-FLAT CABLE ASSY 2				
D06200J		AE0219	POS 03	D06200P	W1700	ALL
D05009J		AE0219	POS 04	D05009P	W1701	ALL
D05011J		AE0219	POS 05	D05011P	W1701	ALL
D06218J		AE0219	POS 12	D06218P	W1718	ALL
D06220J		AE0219	POS 13	D06220P	W1720	ALL
D06210J		AE0219	POS 14	D06210P	W1710	ALL
D06222J		AE0219	POS 20	D06222P	W1722	ALL

MASTER BUNDLE LIST

D280T132

91-21-13

Section W2000

Page 1

Mar 09/2006



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W2002	N2	E8 SHELF-FLAT CABLE ASSY 2 (continued)				
D06204J		AE0219	POS 21	D06204P	W1704	ALL
D06224J		AE0219	POS 22	D06224P	W1724	ALL
D06226J		AE0219	POS 23	D06226P	W1726	ALL
D05051J		AE0219	POS 30	D05051P	W1307	ALL
D06216J		AE0219	POS 31	D06216P	W1716	ALL
D05061J		AE0219	POS 32	D05061P	W1705	ALL
W2004	L*	E8 SHELF-POWER, GROUNDS L				
D06254J		AE0221	POS 04	D06254P	W0744	ALL
W2006	R*	E8 SHELF-POWER, GROUNDS R				
D06256J		AE0221	POS 05	D06256P	W0764	ALL
W2008	R2	CREW REST CONTROL MODULE - FWD-JUMPER				
D06900J				D06900P	W1236	050-099, 162-199
D12258		M01834	0437/275/R055			050-099, 162-199



767-200/300 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W2010	R2	AFT CLOSET				
D12086P				D12086J	W0784	151-152, 162-199
D12088J				D12088P	W0784	151-152, 162-199

MASTER BUNDLE LIST

D280T132

91-21-13

Section W2010

Page 1 End

Jan 21/2005



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W2024 D06902J	R2	CREW REST CONTROL MODULE - JUMPER PLUG. MULTI		D06902P		050-099, 162-199
W2029 D06237	N1	AFT DIVIDER-LAV OCC SIGN-SHORTING PLUG		D10908		280-299



767-200/300 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W2040	R2	CREW REST CONTROL MODULE - AFT-JUMPER				
D12354		M01889	1450/280/L055			050-099, 150, 152-199
D06976J		MULTI		D06976P		050-099, 150, 152-199

MASTER BUNDLE LIST

D280T132

91-21-13

Section W2040

Page 1 End

Sep 04/2008



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W2052	N2	SHELF E3-2				
D10152A			//			ALL
D10152B			//			ALL
D10152C			//			ALL
D06262P		AE0220	POS 07	D06262J	W1204	ALL
D06264P		AE0220	POS 10	D06264J	W0572	ALL
D10152		M10389	SHELF/E03/02			ALL
W2058	H2	HYD GEN SYS-H2-P65 INTERNAL				
D06456J		AE0225	POS 01	D06456P	W1340	ALL
D06462J		AE0225	POS 03	D06462P	W1336	ALL
D06452J		AE0225	POS 04	D06452P	W1338	ALL
D06454J		AE0225	POS 06	D06454P	W1340	ALL
D06460J		AE0225	POS 07	D06460P	W1332	ALL
D06458J		AE0225	POS 08	D06458P	W1342	ALL
D06474J		AE0225	POS 09	D06474P	W1342	ALL
D10786		K00858	P065-00/ /			ALL
D10788		K00859	P065-00/ /			ALL
D10790		K00860	P065-00/ /			ALL
D10792		K00865	P065-00/ /			ALL
D10832		K00873	P065-00/ /			ALL
D10836		M01226	P065-00/ /			ALL

MASTER BUNDLE LIST

D280T132

91-21-13

Section W2050

Page 1 End

Mar 09/2006



767-200/300 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W2062	R2	CENTER PSU MOD				
D05974J				D05974P	W1142	276-299
D08184P				D08184J	W1280	276-299
D05974J			0654+114/280/L005	D05974P	W1142	275
D08174			0654+114/280/L005			275-299
D08182			0744/280/L005			275-299
D08176			666/280/L005			275-299
D08178			694/280/L005			275-299
D08180			716/280/L005			275-299
D08184P			768/280/L005	D08184J	W1280	275
W2064	R2	CENTER PSU MOD				
D05982P				D05982J	W1150	276-299
D08186J				D08186P	W1148	276-299
D08186J			1197+092/280/L005	D08186P	W1148	150-199, 275
D08188			1197+092/280/L005			150-199, 275-299
D08190			1197+116/280/L005			150-199, 275-299
D08192			1212/280/L005			150-199, 275-299
D08194			1238/280/L005			150-199, 275-299
D08196			1265/280/L005			150-199, 275-299
D05982P			1289/280/L005	D05982J	W1150	150-199, 275
W2066	N2	CENTER MID OXYGEN LATCHES STA 654+114-STA 748				
D05996J				D05996P	W1164	276-299
D08198P				D08198J	W1282	276-299
D05996J			0654+114/280/L005	D05996P	W1164	275
D11118			0654+114/280/L005			275
D11122			0697/280/L005			275
D11120			666/280/L005			275
D11124			716/280/L005			275
D11126			744/280/L005			275
D08198P			768/280/L005	D08198J	W1282	275
D11118		M00064	MULTI/ /			276-299
D11120		M00064	MULTI/ /			276-299
D11122		M00064	MULTI/ /			276-299
D11124		M00064	MULTI/ /			276-299
D11126		M00064	MULTI/ /			276-299
W2068	N2	CENTER AFT OXYGEN LATCHES STA 1197+092-STA 1273				
D06004P				D06004J	W1172	276-299

MASTER BUNDLE LIST

D280T132

91-21-13

Section W2060

Page 1

Aug 05/2009



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W2068	N2	CENTER AFT OXYGEN LATCHES STA 1197+092-STA 1273 (continued)				
D08200J				D08200P	W1170	276-299
D08200J			1197+092/280/L005	D08200P	W1170	150-199, 275
D06004P			1289/280/L005	D06004J	W1172	150-199, 275
D11128		M00064	MULTI/ /			150-199, 275-299
D11130		M00064	MULTI/ /			150-199, 275-299
D11132		M00064	MULTI/ /			150-199, 275-299
D11134		M00064	MULTI/ /			150-199, 275-299
D11136		M00064	MULTI/ /			150-199, 275-299



767-200/300 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W2112	L2	P87-L2-MISC ELECTRICAL PANEL				
D07126J		AE0227	POS 01	D07126P	W1232	278-299
D72034		K01316 MID				278-299

MASTER BUNDLE LIST

D280T132

91-21-13

Section W2110

Page 1 End

Mar 09/2006



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W2214	N2	FLIGHT DECK SECURITY DOOR				
D30003		M12095	0240/242/L017			050-099, 150-163, 166-199, 275-299
D30009		M12095	0240/242/L017			050-099, 150-163, 166-199, 275-299
D30011		M12095	0240/242/L017			050-099, 150-163, 166-199, 275-299
D30013		M12095	0240/242/L017			050-099, 150-163, 166-199, 275-299

MASTER BUNDLE LIST

D280T132

91-21-13

Section W2210

Page 1 End

Jan 21/2005



767-200/300 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W3000	R2	CREW REST UPPER BUNK CONSOLE.				
D06890J				D06890P	W3002	050-099, 162-199
D06125P		AP0205	POS 02	D06125J	W1449	050-099, 162-199
D12224		M01751	0274/278/R015			050-099, 162-199
D12226		M01755	0252/274/R015			050-099, 162-199
D12232		M01755	0252/274/R015			050-099, 162-199
W3002	R2	CREW REST RIGHT HAND PARTITION				
D06890P				D06890J	W3000	050-099, 162-199
D06892P				D06892J	W3004	050-099, 162-199
W3004	R2	CREW REST LOWER BUNK CONSOLE.				
D06892J				D06892P	W3002	050-099, 162-199
D12222		M01752	0274/242/R015			050-099, 162-199
W3006	R2	CREW REST AMENITY MODULE.				
D06111P		AP0205	POS 03	D06111J	W1447	050-099, 162-199
D06109P		AP0205	POS 07	D06109J	W1449	050-099, 162-199
D02611		B00061	MULTI/ /			050-099, 162-199
D12234		B00418	0250/275/L010			050-099, 162-199
D12236		B00419	0250/276/L010			050-099, 162-199
D12228		M01756	0251/275/L011			050-099, 162-199
D12230		M01756	0251/275/L011			050-099, 162-199
D02607		M1764				050-099, 162-199
W3008	R2	CREW REST TOP MODULE.				
D06123P		AP0205	POS 06	D06123J	W1449	050-099, 162-199
D13964		M01848	0265/280/L016			050-099, 162-199
D02603		TS0515	0279/279/L012			050-099, 162-199
D02605		V00161	0266/284/L012			050-099, 162-199

MASTER BUNDLE LIST

D280T132

91-21-13

Section W3000

Page 1 End

Jun 06/2008



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W3014	R1	CTR MID MOD IND CLG.LTS ALTERNATE (STA 630-654+108) CATIA DESIGNED				
D07098J				D07098P	W3016	280-299
D07100P				D07096J		280-299
D72056		M01258	0654+50/295/L020			280-299
D11166		M01260	0654+91/295/L020			280-299
W3016	R1	CTR MID MOD IND CLG.LTS ALTERNATE (STA 654+109-763) CATIA DESIGNED				
D07098P				D07098J	W3014	280-299
D72058		M00674	0654+99/295/L020			280-299

MASTER BUNDLE LIST

D280T132

91-21-13

Section W3010

Page 1 End

Aug 05/2009



767-200/300 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W3502	S2A	ENGINE-EEC/SCU/AUTOSTART				
D15802P				D15802J	W3504	ALL
D08346P			NR100/150/	D08346J		150-154, 275-276
D04224P		AW0310	POS 01	D04224J	W0372	ALL
D11114		M07198	ENG/ /			ALL
D08346P		W1J14		D08346J		050-099, 155-199, 277-299
D08370P		W2J32		D08370J		ALL
W3504	S2B	ENGINE-EEC AND SCU				
D15802J				D15802P	W3502	ALL
D08316P			NR100/150/	D08316J	W3542	ALL
D08330P			NR100/150/	D08330J		150-154, 275-276
D11686			NR119/132/			150-154, 275-276
D08336P		AW0309	POS 01	D08336J		150-154, 275-276
D08336P		AW0309	POS 02	D08336J		050-099, 155-199, 277-299
D08320P		AW0310	POS 02	D08320J	W0396	ALL
D11686		M07198	ENG/ /			050-099, 155-199, 277-299
D10994		T00677	ENG/ /			ALL
D08330P		W2J14		D08330J		050-099, 155-199, 277-299
W3506	S2A	ENGINE-S2A-ENG INSTR & FIRE DET				
D04230P		AW0307	POS 02	D04230J	W0386	ALL
D08312		M03108	ENG/ /			051-099, 150-154, 156-199, 275-299
D08312		M07202	ENG/ /			050, 155
D10970		V00351	ENG/ /			ALL
W3508	S2B	ENGINE-ENG INSTR				
D04232P		AW0305	POS 06	D04232J	W0352	050-099, 150-199, 275-278
D04232P		AW0305	POS 06	D04232J		280-299
D10976		M07197	ENG/ /			ALL
D11116		M07200	0209/112/0000			ALL
D10996		S01585	ENG/ /			ALL
D10982		T00679	ENG/ /			ALL
D10980		V00349	/ENG/			ALL

MASTER BUNDLE LIST

D280T132

91-21-13

Section W3500

Page 1

Aug 05/2009



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W3510	S2A	ENGINE-ENG INSTR				
D04208P		AW0305	POS 03	D04208J	W0356	ALL
D10984		M00495	NL148/082/L017			ALL
D11000		M07192	ENG/ /			ALL
D10998		M07193	NR160/73/15			ALL
D10978		M07196	ENG/ /			ALL
D10974		S01583	ENG/ /			ALL
D10988		S01584	ENG/ /			ALL
D10992		T00675	ENG/ /			ALL
W3516	S2A	ENGINE-S2A-FIRE DETECTION				
D04200P		AW0305	POS 04	D04200J	W0386	ALL

MASTER BUNDLE LIST

D280T132

91-21-13

Section W3510

Page 1 End

Jun 28/2006



767-200/300 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W3520	S2B	ENGINE-S2B-FIRE DET				
D04154P		AW0305	POS 01	D04154J	W0360	ALL
W3522	S2B	ENGINE-S2B-FIRE DETECTION				
D04228P		AW0305	POS 02	D04228J	W0360	ALL
W3526	S2A	RH ENGINE COWL THRUST REVERSER				
D08340J			-63/0/R005	D08340P		ALL
D04182P		AW0310	POS 03	D04182J	W0352	050-099, 150-199, 275-278
D04182P		AW0310	POS 03	D04182J		280-299
D07170P		AW0310	POS 06	D07170J	W0352	050-099, 150-199, 275-278
D07170P		AW0310	POS 06	D07170J		280-299
D20196		V00171	//			ALL
W3528	S2A	LH ENGINE COWL THRUST REVERSER				
D08338J			15/0/R029	D08338P		ALL
D04180P		AW0311	POS 01	D04180J	W0352	050-099, 150-199, 275-278
D04180P		AW0311	POS 01	D04180J		280-299
D07172P		AW0311	POS 03	D07172J	W0352	050-099, 150-199, 275-278
D07172P		AW0311	POS 03	D07172J		280-299
D20194		V00170	//			ALL

MASTER BUNDLE LIST

D280T132

91-21-13

Section W3520

Page 1 End

Jun 28/2006



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W3530	S2B	LH ENGINE COWL THRUST REVERSER				
D04192P		AW0311	POS 02	D04192J	W0356	ALL
D08342J		T10033	ENG/ /	D08342P		ALL
D08314		V00353	ENG/ /			ALL
W3532	S2B	RH ENGINE COWL THRUST REVERSER				
D04194P		AW0310	POS 04	D04194J	W0356	ALL
D08344J		T10035	ENG/ /	D08344P		ALL
W3538	S2	ENGINE-IDG CONTROL				
D04216P		AW0305	POS 05	D04216J	W0352	050-099, 150-199, 275-278 280-299
D04216P		AW0305	POS 05	D04216J		ALL
D10964		G00019	NL187/076/			ALL
D10966		G00019	NL187/076/			ALL
D11536		S1611 OVER				ALL
D11046		V00350	ENG/ /			ALL

MASTER BUNDLE LIST

D280T132

91-21-13

Section W3530

Page 1 End

Jun 28/2006



767-200/300 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W3540	S2	ENGINE-PNEUMATICS				
D04156P		AW0306	POS 01	D04156J	W0356	ALL
W3542	N2	ENGINE-PT2/TT2				
D08316J			NR095/150/	D08316P	W3504	ALL
D08332J			NR095/150/	D08332P		ALL
D11434		T00687				050-099, 150-156, 162-166, 275-276
D11434		T00867	70.41/ /			157, 167-199, 277-299
W3544	N2	ENGINE-PT2/TT2				
D08328J			NR095/150/	D08328P		ALL
D11420		T00867	70.41/ /			ALL

MASTER BUNDLE LIST

D280T132

91-21-13

Section W3540

Page 1 End

Jun 28/2006



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W5150	N2	P10 QUADRANT STAND				
D04551J		AE0102	POS 01	D04551P	W0481	ALL
D08116J		AE0102	POS 02	D08116P	W0768	ALL
D08118J		AE0102	POS 03	D08118P	W0264	ALL
D08120J		AE0102	POS 04	D08120P	W0756	ALL
D04555J		AE0104	POS 01	D04555P	W0485	ALL
D04553J		AE0104	POS 02	D04553P	W0483	ALL
D08114J		AE0104	POS 03	D08114P	W0262	ALL
D04135P		AE0107	POS 01	D04135J	W1285	ALL
D04133P		AE0107	POS 02	D04133J	W1283	ALL
D04131P		AE0107	POS 03	D04131J	W1281	ALL
D04141P		AE0107	POS 04	D04141J	W1295	ALL
D04139P		AE0107	POS 05	D04139J	W1293	ALL
D04137P		AE0107	POS 06	D04137J	W1291	ALL
D01469		M00073	P010-00/ /			ALL
D01471		M00073	P010-00/ /			ALL
D01479		M00577	P010-00/ /			ALL
D01473		M00985	0171/223/			ALL
D01475		M00985	0171/223/			ALL
D01477		M00985	0171/223/			ALL

MASTER BUNDLE LIST

D280T132

91-21-13

Section W5150

Page 1 End

Jun 28/2006



767-200/300 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W9002	N2	CUSTOMER WBA - VIDEO PROJECTION DISTRIBUTION				
D09001P		AP0405		D09001J	W9003	150, 153-157
D09002P		AP0901		D09002J	W9004	150, 153-157
D09004		M01526	0621/308/R035			150, 153-157
D09006		M01526	0621/308/R035			150, 153-157
W9003	N2	CUSTOMER WBA - VIDEO PROJECTION DISTRIBUTION				
D09001J		AP0405		D09001P	W9002	150, 153-157
D09001J		AP0405		D09001P	W9005	162-199
D09007		M09001	0270/ /			150, 153-157
W9004	N2	CUSTOMER WBA - VIDEO PROJECTION DISTRIBUTION				
D09002J		AP0901		D09002P	W9002	150, 153-157
D09008		M09002	0270/ /			150, 153-157
D09010		M09002	0270/ /			150, 153-157
W9005	N2	CUSTOMER WBA - VIDEO PROJECTION DISTRIBUTION				
D09001P		AP0405		D09001J	W9003	162-199
D09015		M01526	0621/308/R035			162-199
D09016		M01526	0621/308/R035			162-199
D09017		PROVISIONS				162-199
D09018		PROVISIONS				162-199
W9006	N2	CUSTOMER WBA - P19 TO COATROOM STA 448				
D00837P			P21/ /	D00837J		050-099
D02535			P21/ /			050-099
W9007		IN SEAT POWER OUTLETS FORWARD CABIN, E002-06				
D09048		M9010				150, 153-199
W9008		IN SEAT POWER OUTLETS FORWARD CABIN, E002-06				
D09055P			AE0306/ /	D09055J	W9009	150, 153-199
D09000		M9010				150, 153-199
W9009		IN SEAT POWER OUTLETS FORWARD CABIN, E002-06				
D09047J			356/282/80	D09047P		150, 153-199
D09049J			467/ /	D09049P		150, 153-199
D09051J			467/ /	D09051P		150, 153-199
D09050J			654+29/ /	D09050P		150, 153-199

MASTER BUNDLE LIST

D280T132

91-21-13

Section W9000

Page 1

Aug 05/2009



Bundle	Sep	Description	Location	MW Connector	MW Bundle	Effectivity
Equip		Matewith				
W9009						
IN SEAT POWER OUTLETS FORWARD CABIN, E002-06 (continued)						
D09053J			705/ /	D09053P		150, 153-199
D09052J			709/ /	D09052P		150, 153-199
D09054J			709/ /	D09054P		150, 153-199
D09055J			AE0306/ /	D09055P	W9008	150, 153-199



767-200/300 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W9013	N	SATCOM - E9-1 TO P61 PNL (CUSTOMER)				
D96102P			AF0204/ /	D96102J		150, 153-199
D96101J		AC1102		D96101P	W9026	150, 153-155, 162-165
D96101J		AC1102		D96101P	W0091	156-157, 166-199
W9015	N1	SATCOM - E9-1 TO E2-2 SHELF (CUSTOMER)				
D06165J		AC1102		D06165P	W9026	150, 153-155, 162-165
W9019	L2	COAX-SATCOM, E9 TO E10				
D06167P		AP1001	POS 02	D06167J	W9020	150, 153-155, 162-165

MASTER BUNDLE LIST

D280T132

91-21-13

Section W9010

Page 1 End

Jun 28/2006



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W9020	L2	SATCOM SYSTEM , E10 SHELF				
D06167J		AP1001	POS 02	D06167P	W9019	150, 153-155, 162-165
W9021	L2	SATCOM SYSTEM,SIDE-MOUNTED HGA SUBSYSTEM-PORT				
D02693		M1795				150, 153-155, 162-165
W9022	N2	CUSTOMER WBA - VIDEO PROJECTION DISTRIBUTION				
D09024		M01615	0730/308/R036			162-199
D09026		M01615	0730/308/R036			162-199
D09020		M09002	0270/ /			162-199
D09028		M09002	0270/ /			162-199
D09027		M09003	MULTI/ /			162-199
W9023	L2	SATCOM SYSTEM,SIDE-MOUNTED HGA SUBSYSTEM-PORT				
D02677		M01787	1070/300/L016			150, 153-155, 162-165
W9024	L2	SATCOM SYSTEM SIDE-MOUNTED HGA SUBSYSTEM-STRBD				
D06173J		AC1102	POS 04	D06173P	W9026	150, 153-155, 162-165
D02689		M1796				150, 153-155, 162-165
W9025	N2	COAX-SATCOM, M1787 HIGHPWR RLY TO M1789, LNA/DIP, L				
D02717		M1790				150, 153-155, 162-165
W9026		SATCOM, E9-1 SHELF, LEFT				
D06165P			1197/180/R080	D06165J	W1417	152
D02647A			SHELF/E09/-01			150, 153-155, 162-165
D02647B			SHELF/E09/-01			150, 153-155, 162-165
D02647C			SHELF/E09/-01			150, 153-155, 162-165
D02649A			SHELF/E09/-01			150, 153-155, 162-165
D02649B			SHELF/E09/-01			150, 153-155, 162-165
D02649C			SHELF/E09/-01			150, 153-155, 162-165
D06165P		AC1102		D06165J	W9015	150, 153-155, 162-165
D96101P		AC1102		D96101J	W9013	150, 153-155, 162-165
D06173P		AC1102	POS 04	D06173J	W9024	150, 153-155, 162-165
D06155P		AC1102	POS 06	D06155J	W0817	150, 153-155, 162-165
D06171P		AC1102	POS 07	D06171J	W9031	150, 153-155, 162-165
D06149P		AC1102	POS 09	D06149J	W0819	150, 153-155, 162-165
D02647		M01780	SHELF/E09/01			152
D02647A		M01780	SHELF/E09/01			152

MASTER BUNDLE LIST

D280T132

91-21-13

Section W9020

Page 1

Aug 05/2009



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W9026		SATCOM, E9-1 SHELF, LEFT (continued)				
D02647		M1780				150, 153-155, 162-165
D02649		M1781				150, 153-155, 162-165
D02701		M1835				150, 153-155, 162-165



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W9030	N	SATCOM - E2-6 TO P5 PNL (CUSTOMER)				
D02695		M1798				150, 153-155, 162-165
W9031	L2	SATCOM SYSTEM,SIDE-MOUNTED HGA SUBSYSTEM-PORT				
D06171J		AC1102	POS 07	D06171P	W9026	150, 153-155, 162-165
D02709		M01789	1100/285/L060			150, 153-155, 162-165
W9034	N2	COAX-SATCOM, M1787 HIGH PWR RLY TO M1789, LNA/DIP, L				
D06173J			AC1102/ /	D06173P		152
D09065P			E090-90/ /	D09065J	W9077	150, 152-199

MASTER BUNDLE LIST

D280T132

91-21-13

Section W9030

Page 1 End

Jun 28/2006



767-200/300 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W9040	N2	AIR TO GROUND TELEPHONE - POWER DISTRIBUTION				
D09060P			E090-90/ /	D09060J	W9077	150, 152-199
D09061J			E090-90/ /	D09061P	W9077	150, 152-199
D09062A		M09021	0420/170/R064			150, 152-199
D09062B		M09021	0420/170/R064			150, 152-199
W9044	N2	AIR TO GROUND PUBLIC TELEPHONE - POWER				
D09062C		M09021	0420/170/R064			150, 152-199
W9047		AIR GROUND PUBLIC TELEPHONE - CONTROL & TEST/SERVICE				
D09064J			654+57R/ /	D09064P		150, 152-199
D09063P			E090-90/ /	D09063J	W9077	150, 152-199
D09110P			P061-00/ /	D09110J	W9069	150, 152-199
W9049		AIR TO GROUND PUBLIC TELEPHONE - CTU TO ZTB-B				
D09066P			E090-90/ /	D09066J	W9077	150, 152-199
D09068P		M09022	654+30/304/R051	D09068J		150, 152-199

MASTER BUNDLE LIST

D280T132

91-21-13

Section W9040

Page 1 End

Jun 28/2006



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W9050	N1	AIR GROUND PUBLIC TELEPHONE - CTU TO ZTB-C				
D09067P			E090-90/ /	D09067J	W9077	150, 152-199
D09069P		M09023	0687/304/R051	D09069J		150, 152-199
W9051		AIR TO GROUND PUBLIC TELEPHONE - ZTB-B TO STB LOOP 0				
D09073J		A09002		D09073P	W9059	150, 152-199
D09070P		M09022	654+30/304/R051	D09070J		150, 152-199
W9052	N1	AIR TO GROUND PUBLIC TELEPHONE - ZTB-B TO STB LOOP 1				
D09074J		A09003		D09074P	W9060	150, 152-199
D09071P		M09022	654+30/304/R051	D09071J		150, 152-199
W9053	N1	AIR TO GROUND PULBIC TELEPHONE - ZTB-B TO STB LOOP 2				
D09075J		A09004		D09075P	W9061	150, 152-199
D09072P		M09022	654+30/304/R051	D09072J		150, 152-199
W9054	N1	AIR TO GROUND PUBLIC TELEPHONE - ZTB-C TO STB LOOP 0				
D09079J		A09005		D09079P	W9074	150, 152-199
D09076P		M09023	0687/304/R051	D09076J		150, 152-199
W9055	N1	AIR TO GROUND PUBLIC TELEPHONE - ZTB-C TO STB LOOP 1				
D09080J		A09006		D09080P	W9075	150, 152-199
D09077P		M09022	654+30/304/R051	D09077J		150, 152-199
W9056	N1	AIR TO GROUND PUBLIC TELEPHONE - ZTB-C TO STB LOOP 2				
D09081J		A09007		D09081P	W9076	150, 152-199
D09078P		M09022	654+30/304/R051	D09078J		150, 152-199
W9057		AIR TO GROUND PUBLIC TELEPHONE - ZTB-B TO STB LOOP 3				
D09083P		M09022	654+30/304/R051	D09083J		150, 152-199
D09084P		M09024	0284/286/L072	D09084J		150, 152-199
W9058	N1	AIR TO GROUND PUBLIC TELEPHONE - ZTB TO STB LOOP 3				
D09085P		M09023	0687/304/R051	D09085J		150, 152-199
D09086P		M09025	0654+119/295/R015	D09086J		150, 152-199
W9059		AIR TO GROUND PUBLIC TELEPHONE - ZTB-B TO STB LOOP 0				
D09073P		A09002		D09073J	W9051	150, 152-199

MASTER BUNDLE LIST

D280T132

91-21-13

Section W9050

Page 1 End

Jun 28/2006



767-200/300 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W9060	N1	AIR TO GROUND PUBLIC TELEPHONE - ZTB-B TO STB LOOP 1				
D09074P		A09003		D09074J	W9052	150, 152-199
D09102P		M09030	MULTI/ /	D09102J		150, 152-199
W9061		AIR GROUND PUBLIC TELEPHONE - ZTB-B TO STB LOOP 2				
D09075P		A09004		D09075J	W9053	150, 152-199
W9062	N1	AIR TO GROUND PUBLIC TELEPHONE - STB TO STB				
D09101P		M09030	MULTI/ /	D09101J		150, 152-199
W9069		PASSENGER TELEPHONE RIGHT SIDE OBSERVERS PANEL - CTU ON/OFF				
D09110J			P061-00/ /	D09110P	W9047	150, 152-199

MASTER BUNDLE LIST

D280T132

91-21-13

Section W9060

Page 1 End

Jun 28/2006



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W9071	N1	HANDSET TO STB CONNECTION				
D09104J			MULTI/ /	D09104P	W9073	150, 152-199
D09103		M09030	MULTI/ /			150, 152-199
W9072		HANDSET TO STB CONNECTION				
D09108			TBD/ /			150, 152-199
D09109		M09024	0284/286/L072			150, 152-199
D09107		M09041	0284/273/L054			150, 152-199
W9073	N1	HANDSET TO STB CONNECTION				
D09104P			TBD/ /	D09104J	W9071	150, 152-199
D09106			TBD/ /			150, 152-199
D09105		M09047	MULTI/ /			150, 152-199
W9074	N1	AIR TO GROUND PUBLIC TELEPHONE - ZTB-C TO STB LOOP 0				
D09079P		A09005		D09079J	W9054	150, 152-199
W9075	N1	AIR TO GROUND PUBLIC TELEPHONE - ZTB-C TO STB LOOP 1				
D09080P		A09006		D09080J	W9055	150, 152-199
W9076	N1	AIR TO GROUND PUBLIC TELEPHONE - ZTB-C TO STB LOOP 2				
D09081P		A09007		D09081J	W9056	150, 152-199
W9077		AIR TO GRONUD PUBLIC TELEPHONE - E90-90 SHELF				
D09060J			E090-90/ /	D09060P	W9040	150, 152-199
D09061P			E090-90/ /	D09061J	W9040	150, 152-199
D09063J			E090-90/ /	D09063P	W9047	150, 152-199
D09065J			E090-90/ /	D09065P	W9034	150, 152-199
D09066J			E090-90/ /	D09066P	W9049	150, 152-199
D09067J			E090-90/ /	D09067P	W9050	150, 152-199
D09093J			E090-90/ /	D09093P		150, 152-199
D09094J			E090-90/ /	D09094P		150, 152-199
D09095J			E090-90/ /	D09095P		150, 152-199
D09096J			E090-90/ /	D09096P		150, 152-199
D09097J			E090-90/ /	D09097P		150, 152-199
D09098J			E090-90/ /	D09098P		150, 152-199
D09099J			E090-90/ /	D09099P		150, 152-199
D09100J			E090-90/ /	D09100P		150, 152-199
D09082A		M09020	412SHELF/E09/90			150, 152-199

MASTER BUNDLE LIST

D280T132

91-21-13

Section W9070

Page 1

Jun 28/2006



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W9077		AIR TO GRONUD PUBLIC TELEPHONE - E90-90 SHELF (continued)				
D09082B		M09020	412SHELF/E09/90			150, 152-199
D09082C		M09020	412SHELF/E09/90			150, 152-199



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W9090		F/O INSTRUMENT PANEL				
D09123J		AE0319		D09123P	W0109	150, 152-199, 275-299
D09131		M09053	0155/227/L030			150, 152-199, 275-299
D09124		M09054	0155/227/R015			150, 152-199, 275-299
W9091		GROUND PROXIMITY WARNING SYSTEM				
D09125P			AE0325/ /	D09125J	W9092	150, 152-199, 275-299
W9092		GROUND PROXIMITY WARNING SYSTEM				
D09125J			AE0325/ /	D09125P	W9091	150, 152-199, 275-299
D09126		M11248	0600/319/0000			150, 152-199, 275-299



767-200/300 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W9119	N2	COAX-SATCOM,M1787 HIGH PWR RLY TO E10 SHELF				
D06183P		AP1001	POS 03	D06183J	W9126	150, 153-155, 162-165
D06183P		AP1001	POS 03	D06183J	W1043	156-157, 166-199
D02671		M01787	1070/300/L016			150, 153-199

MASTER BUNDLE LIST

D280T132

91-21-13

Section W9110

Page 1 End

Jun 28/2006



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W9120	L2	COAX-SATCOM,M1782 HPA TO AP1001 (SPLITTER)				
D02651B			//			150, 153-155, 162-165
D02651C			//			150, 153-155, 162-165
D02651A			SHELF/E10/			150, 153-155, 162-165
D06187J		AP1001	POS 01	D06187P	W9123	150, 153-155, 162-165
D02651		M1782				150, 153-155, 162-165
W9121	L2	COAX-SATCOM,M1786 COMBINER TO E9 SHELF				
D06177J		AC1102	POS 03	D06177P	W1197	150, 153-199
D02665		M01786	1125/294/L016			150, 153-199
W9122	N2	COAX-SATCOM, M1787 HIGHPWR RLY TO M1789, LNA/DIP, L				
D02673		M01787	1070/300/L016			150, 153-199
D02707		M01789	1100/285/L060			150, 153-199
W9123	L2	COAX-SATCOM, E9 TO E10				
D06175J		AC1102	POS 02	D06175P	W1195	150, 153-199
D06187P		AP1001	POS 01	D06187J	W9120	150, 153-155, 162-165
D06187P		AP1001	POS 01	D06187J	W1199	156-157, 166-199
W9124	N2	COAX-SATCOM, M1787 HIGHPWR RLY TO M1789, LNA/DIP, L				
D02711		M01790	1100/285/R060			150, 153-199
D02687		M01796	1100/277/R075			150, 153-199
W9125	N2	COAX-SATCOM,M1790 LNA/DIP,R TO M1787,HIGH PWR RLY				
D02675		M01787	1070/300/L016			150, 153-199
D02715		M01790	1100/285/R060			150, 153-199
W9126	L2	COAX-SATCOM,M1782 HPA TO AP1101 (LNA OR HPR)				
D06183J			AP1001/ /	D06183P	W9119	150, 153-155, 162-165
W9127	N2	COAX-SATCOM,M1785 COMBINER TO M1790 LNA/DIP,RIGHT				
D02667		M01786	1125/294/L016			150, 153-199
D02713		M01790	1100/285/R060			150, 153-199
W9128	N2	COAX-SATCOM, M1787 HIGHPWR RLY TO M1789, LNA/DIP, L				
D02703		M01789	1100/285/L060			150, 153-199
D02691		M01795	1100/277/L075			150, 153-199

MASTER BUNDLE LIST

D280T132

91-21-13

Section W9120

Page 1

Jun 06/2008



767-200/300 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W9129	N2	COAX-SATCOM,M1785 COMBINER TO M1789 LNA/DIP,LEFT				
D02669		M01786	1125/294/L016			150, 153-199
D02705		M01789	1100/285/L060			150, 153-199

MASTER BUNDLE LIST

D280T132

91-21-13

Section W9120

Page 2 End

Jun 28/2006



Bundle	Sep	Description	Location	MW Connector	MW Bundle	Effectivity
		Matewith				
W9158		PED POWER OUTLETS - P36 LEFT MISC ELEC EQUIP PNL				
D09299J		AE0209		D09299P	W9159	150, 153, 157, 165-199
W9159		PED POWER OUTLETS - MASTER CONTROL UNIT 115V AC IN				
D09299P		AE0209		D09299J	W9158	150, 153, 157, 165-199
D01067E		M09001	0270/ /			150, 153, 157, 165-199

MASTER BUNDLE LIST

D280T132

91-21-13

Section W9150

Page 1 End

Feb 06/2009



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W9160 PED POWER OUTLETS - CONTROL						
D01067F		M09001	0270/ /			150, 153, 157, 165-199