

ENGLISH



Canon

PowerShot A570 IS

DIGITAL CAMERA

Canon



The Components Guide

Preparation

Shooting

Playback/Erasing

Menus and Settings

Printing

Downloading Images
to a Computer

Basic

 
Camera User Guide

Please Read This First

This guide explains how to prepare the camera and use its basic features.

Flowchart and Reference Guides


The following guides are available. Refer to them as necessary according to the flowchart below.

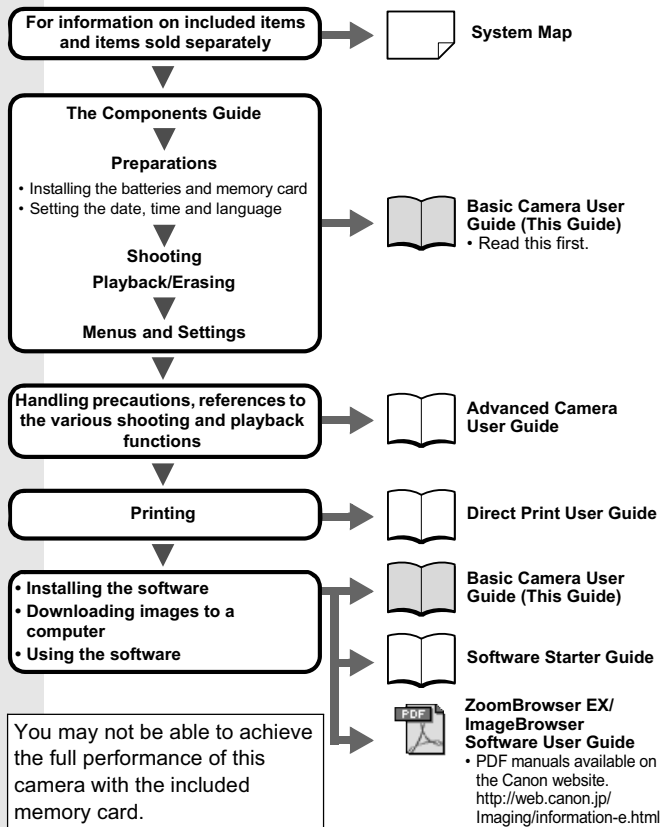

In this guide, the *Basic Camera User Guide* is called the *Basic Guide*, and the *Advanced Camera User Guide* is called the *Advanced Guide*.


The Components Guide

 ■ Front View

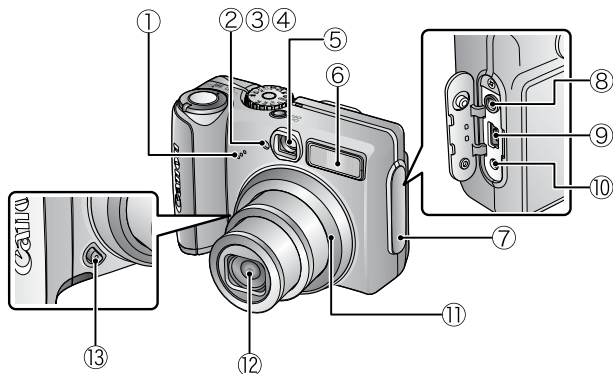

- ① Microphone (*Advanced Guide* p. 71)
- ② AF-assist Beam (*Advanced Guide* p. 21)
- ③ Red-Eye Reduction Lamp (*Advanced Guide* p. 28)
- ④ Self-Timer Lamp (p. 14)
- ⑤ Viewfinder Window (*Advanced Guide* p. 16)
- ⑥ Flash (p. 12)
- ⑦ Terminal Cover
- ⑧ A/V OUT (Audio/Video output) Terminal (*Advanced Guide* p. 75)
- ⑨ DIGITAL Terminal (p. 25)
- ⑩ DC IN (Power input) Terminal (*Advanced Guide* p. 102)
- ⑪ Ring (*Advanced Guide* p. 104)
- ⑫ Lens
- ⑬ Ring Release Button (*Advanced Guide* p. 104)

 ■ Back View

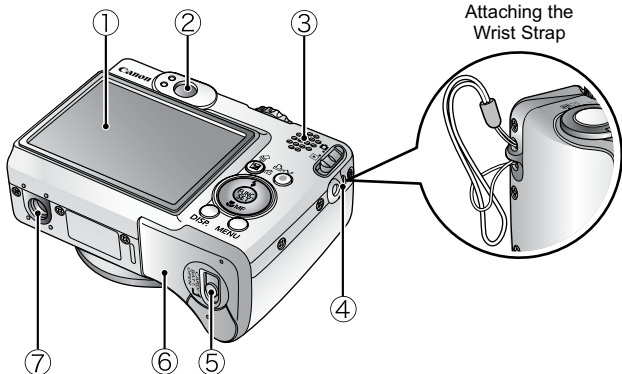

- ① LCD Monitor (*Advanced Guide* p. 12)
- ② Viewfinder (*Advanced Guide* p. 16)
- ③ Speaker
- ④ Wrist Strap Mount
- ⑤ Memory Card Slot / Battery Cover Lock (p. 5)
- ⑥ Memory Card Slot / Battery Cover (p. 5)
- ⑦ Tripod Socket

 


It is recommended to use the Wrist Strap to avoid dropping during camera use.



The LCD monitor may be covered with a thin plastic film for protection against scratches during shipment. If so, remove the film before using the camera.

■ Controls

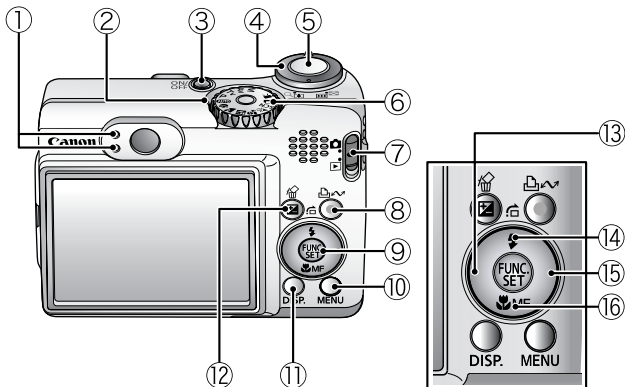

- ① Indicators (p. 4)
- ② Power Lamp
- ③ Power Button (p. 8)
- ④ Zoom Lever (p. 12, *Advanced Guide* p. 63)
Shooting: (Wide Angle)/ (Telephoto)
Playback: (Index)/ (Magnify)
- ⑤ Shutter Button (p. 8)
- ⑥ Shooting Mode Dial (pp. 8, 9)
- ⑦ Mode Switch (pp. 8, 16)
- ⑧ (Print/Share) Button (pp. 20, 29, *Advanced Guide* p. 57)
- ⑨ **FUNC./SET** (Function/Set) Button (*Advanced Guide* p. 18)
- ⑩ **MENU** Button (*Advanced Guide* p. 19)
- ⑪ **DISP.** (Display) Button (*Advanced Guide* p. 12)
- ⑫ (Exposure)/ (Single Image Erase) Button
(p. 17, *Advanced Guide* p. 49)
- ⑬ Button
- ⑭ (Flash)/ (Jump)/ Button (p. 12, *Advanced Guide* p. 65)
- ⑮ Button
- ⑯ (Macro)/ **MF** (Manual Focus)/ Button
(p. 13, *Advanced Guide* p. 46)

Indicators

The camera indicators will light or blink under the following conditions.



Never do the following while the indicator blinks green. These actions may corrupt image data.

- Shake or jolt the camera
- Shut off the power, or open the memory card slot/battery cover

- **Upper Indicator**

Green: Ready to shoot (camera beeps twice)

Blinking Green: Image recording/reading/erasing/transferring (when connected to a computer)

Orange: Ready to shoot (flash on)

Blinking Orange: Ready to shoot (camera shake warning), charging flash

- **Lower Indicator**

 
Yellow: Macro mode/Manual focus mode/AF lock mode

Blinking Yellow: Focusing difficulty (camera beeps once)

Preparations

1. Installing the batteries.


1. Slide the memory card slot/battery cover lock in the direction of the arrow and open the cover.
2. Insert the 2 supplied AA-size alkaline batteries, or separately sold AA-size NiMH batteries.

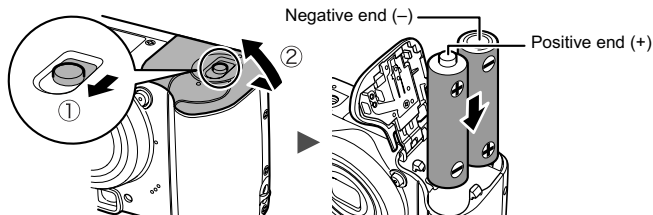

➔ See the *Advanced Guide: Battery Handling* (p. 96).

2. Inserting the Memory Card.

 1. Insert the memory card until it clicks into place.

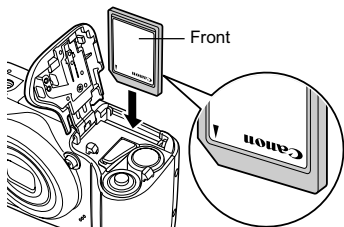

2. Close the memory card slot/battery cover.



Ensure that the memory card is correctly oriented before inserting it in the camera. It may damage the camera, or the camera may not recognize the card, if it is inserted incorrectly.

➔ See the *Advanced Guide: Handling the Memory Card* (p. 98).

➔ See the *Advanced Guide: Formatting Memory Cards* (p. 25).

■ To Remove the Memory Card

Push the memory card with your finger until the memory card clicks and then release it.

 


You can use SD memory cards, SDHC memory cards and MultiMediaCards with this camera.

These cards are collectively called memory cards in this guide.

First Time Settings

■ Setting the Date/Time

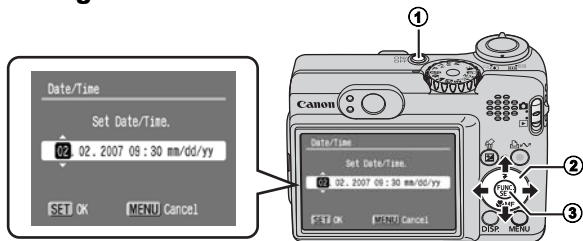

1. Press the power button (①).
2. Use the **←** or **→** button to select an item and the **↑** or **↓** button to change its value (②).
3. Confirm that the correct time is displayed and press the **FUNC./SET** button (③).

The date and time can also be set in the Set up menu (p. 19).



The date/time setting screen will appear when the camera power is turned on for the first time, or when the capacity of the lithium date/time battery is depleted.

➡ See the *Advanced Guide*: Replacing the Date Battery (p. 109).

■ Setting the Display Language

1. Set the mode switch to **▶** (playback).
2. Hold down the **FUNC./SET** button and press the **MENU** button.
3. Use the **↑**, **↓**, **←** or **→** button to select a language and press the **FUNC./SET** button.

The display language can also be set in the Set up menu (p. 19).

 
Shooting

1. Press the power button.

The start-up sound will play and the start-up image will display in the LCD monitor.

- Pressing the power button again turns the power off.
- Pressing the power button while pressing and holding the DISP. button will turn on the mute setting which will mute all sounds except for warning sounds.

Power button

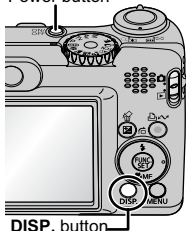

- ➔ See the *Advanced Guide: Using the LCD Monitor* (p. 12).
- ➔ See the *Advanced Guide: Power Saving Function* (p. 17).
- ➔ See the *Advanced Guide: Set up Menu* (p. 22).

2. Set the mode switch to (shooting)

(1).

3. Set the shooting mode dial to **AUTO**

 
(2).

4. Aim the camera at the subject.


5. Focus and shoot.

1. Press the shutter button halfway to focus.

When the camera focuses, the camera beeps twice and the indicator lights green (orange when using the flash). Also, the AF frame appears in green on the LCD monitor at the point where the camera is focused.

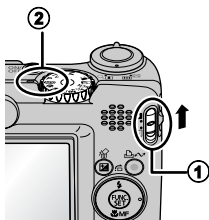


Indicators

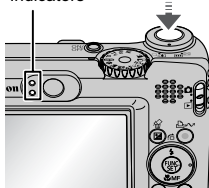 

2. Press the shutter button fully to shoot.

 The shutter sound will play and the image will record. The indicator will blink green while the image is recorded to the memory card.

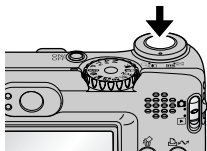

- ➔ See *Indicators* (p. 4).
- ➔ See the *Advanced Guide: Selecting an AF Frame* (p. 43).
- ➔ See the *Advanced Guide: Setting the Image Stabilizer Function* (p. 27).
- ➔ See the *Advanced Guide* for the various shooting methods available.

■ Reviewing an Image Right After Shooting

After a shot is taken, the image appears in the LCD monitor for approximately 2 seconds.

You can continue to display images regardless of the review duration setting with the following procedures.

- Keeping the shutter button pressed after a shot.
- Pressing the **FUNC./SET** or **DISP.** button while the image is displayed in the LCD monitor.

 
To stop displaying the image, press the shutter button halfway.

- ➔ See the *Advanced Guide: Review* (p. 21).
- ➔ See *Erasing* (p. 17).







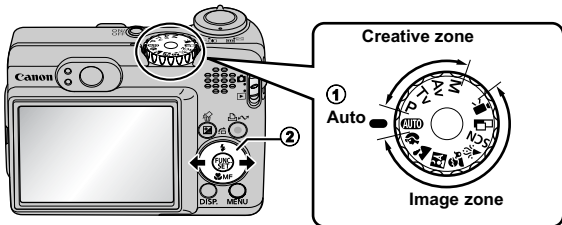






























































Selecting a Shooting Mode

1. Set the shooting mode dial to the desired mode (①).

In the **SCN**, **□** and **📷** modes, use the **←** or **→** button (②) to select a shooting mode.



■ Shooting Modes


| | | | | | | | | | | | | | | | |
|------------|---|--|---|--|--|---|--|---|--|---|--|--|---|--|--|
| Image zone | <table border="1"><tr><td data-bbox="205 104 578 1387"><p>Auto  The camera automatically selects settings.</p><p>When a shooting mode appropriate for the shooting conditions is selected, the camera automatically adjusts settings for optimal shooting.</p><p>Portrait  Blurs the background and makes a person stand out.</p></td><td data-bbox="578 104 951 1387"><p>Landscape  Optimized for shooting landscape scenes which contain both near and far subjects.</p></td></tr><tr><td data-bbox="205 356 578 560"><p>Night Snapshot  Allows you to take snapshots of people against twilight or night backgrounds by reducing the effects of camera shake even without using a tripod.</p></td><td data-bbox="578 356 951 560"><p>Kids&Pets  Allows you to capture subjects that move around, such as children and pets, without missing photo opportunities.</p></td></tr><tr><td colspan="2" data-bbox="205 567 951 691"><p>Indoor  Prevents camera shake and maintains the subject's true color when shooting under fluorescent or tungsten lighting.</p></td></tr><tr><td colspan="2" data-bbox="205 698 951 749"><p>SCN (Special Scene) You can shoot with the most appropriate settings for the scene.</p></td></tr><tr><td data-bbox="205 757 578 997"><p>Night Scene  Allows you to capture human subjects against the backdrop of an evening sky or night scene. The flash is directed at the person and the shutter speed is slow, so both the person and the background can be beautifully shot.</p></td><td data-bbox="578 757 951 997"><p>Foliage  Shoots trees and leaves - such as new growth, autumn leaves or blossoms - in vivid colors.</p></td></tr><tr><td data-bbox="205 1004 578 1186"><p>Snow  Shoots without a blue tinge and without making people appear dark against a snowy background.</p></td><td data-bbox="578 1004 951 1186"><p>Beach  Shoots without making people appear dark near water or sand where reflected sunlight is strong.</p></td></tr><tr><td data-bbox="205 1193 578 1387"><p>Fireworks  Captures fireworks in the sky sharply and at optimal exposure.</p></td><td data-bbox="578 1193 951 1387"><p>Aquarium  Selects the optimal ISO speed, white balance and color balance to capture fish and other items in an indoor aquarium.</p></td></tr></table> | <p>Auto  The camera automatically selects settings.</p> <p>When a shooting mode appropriate for the shooting conditions is selected, the camera automatically adjusts settings for optimal shooting.</p> <p>Portrait  Blurs the background and makes a person stand out.</p>  | <p>Landscape  Optimized for shooting landscape scenes which contain both near and far subjects.</p>  | <p>Night Snapshot  Allows you to take snapshots of people against twilight or night backgrounds by reducing the effects of camera shake even without using a tripod.</p>  | <p>Kids&Pets  Allows you to capture subjects that move around, such as children and pets, without missing photo opportunities.</p>  | <p>Indoor  Prevents camera shake and maintains the subject's true color when shooting under fluorescent or tungsten lighting.</p>  | | <p>SCN (Special Scene) You can shoot with the most appropriate settings for the scene.</p> | | <p>Night Scene  Allows you to capture human subjects against the backdrop of an evening sky or night scene. The flash is directed at the person and the shutter speed is slow, so both the person and the background can be beautifully shot.</p>  | <p>Foliage  Shoots trees and leaves - such as new growth, autumn leaves or blossoms - in vivid colors.</p>  | <p>Snow  Shoots without a blue tinge and without making people appear dark against a snowy background.</p>  | <p>Beach  Shoots without making people appear dark near water or sand where reflected sunlight is strong.</p>  | <p>Fireworks  Captures fireworks in the sky sharply and at optimal exposure.</p>  | <p>Aquarium  Selects the optimal ISO speed, white balance and color balance to capture fish and other items in an indoor aquarium.</p>  |
| | <p>Auto  The camera automatically selects settings.</p> <p>When a shooting mode appropriate for the shooting conditions is selected, the camera automatically adjusts settings for optimal shooting.</p> <p>Portrait  Blurs the background and makes a person stand out.</p>  | <p>Landscape  Optimized for shooting landscape scenes which contain both near and far subjects.</p>  | | | | | | | | | | | | | |
| | <p>Night Snapshot  Allows you to take snapshots of people against twilight or night backgrounds by reducing the effects of camera shake even without using a tripod.</p>  | <p>Kids&Pets  Allows you to capture subjects that move around, such as children and pets, without missing photo opportunities.</p>  | | | | | | | | | | | | | |
| | <p>Indoor  Prevents camera shake and maintains the subject's true color when shooting under fluorescent or tungsten lighting.</p>  | | | | | | | | | | | | | | |
| | <p>SCN (Special Scene) You can shoot with the most appropriate settings for the scene.</p> | | | | | | | | | | | | | | |
| | <p>Night Scene  Allows you to capture human subjects against the backdrop of an evening sky or night scene. The flash is directed at the person and the shutter speed is slow, so both the person and the background can be beautifully shot.</p>  | <p>Foliage  Shoots trees and leaves - such as new growth, autumn leaves or blossoms - in vivid colors.</p>  | | | | | | | | | | | | | |
| | <p>Snow  Shoots without a blue tinge and without making people appear dark against a snowy background.</p>  | <p>Beach  Shoots without making people appear dark near water or sand where reflected sunlight is strong.</p>  | | | | | | | | | | | | | |
| | <p>Fireworks  Captures fireworks in the sky sharply and at optimal exposure.</p>  | <p>Aquarium  Selects the optimal ISO speed, white balance and color balance to capture fish and other items in an indoor aquarium.</p>  | | | | | | | | | | | | | |


 **Underwater**

 Appropriate for shooting images with Waterproof Case WP-DC12 (sold separately). This mode uses an optimal white balance setting to reduce bluish tones and record images with a natural hue.

 **Stitch Assist**




Allows you to shoot overlapping images that can later be merged (stitched) to create one panoramic image on a computer.



 See the *Advanced Guide* (p. 38).

 **Movie**

Shoots a movie when you press the shutter button.

Apart from [ Standard] mode, you can also select from [ Fast Frame Rate] which is suitable for shooting sports or fast motion and [ Compact] which is convenient for email attachments.









 See the *Advanced Guide* (p. 35).

P, Tv, Av, M

You can freely select camera settings such as the exposure and aperture value to suit your shooting purposes.

 See the *Advanced Guide* (pp. 39 – 42).



- The shutter speed is slow in  or  mode. Always use a tripod to avoid camera shake.
- In , , ,  or  mode, the ISO speed may increase and cause noise in the image depending on the scene being shot.
- In  mode, shoot with the subject more than 1 m (3.3 ft.) away from the front of the lens.

 


- To shoot underwater, install the camera in Waterproof Case WP-DC12 (sold separately).
- We recommend you use Waterproof Case WP-DC12 for shooting at ski resorts or beaches.

Using the Zoom

1. Press the zoom lever toward  or .

The zoom can be adjusted from 35 mm – 140 mm (focal length) in 35mm film equivalent terms.

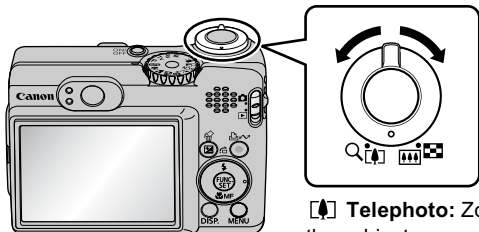


 **Telephoto:** Zooms in on the subject.


 **Wide Angle:** Zooms out from the subject.

 Using the Flash


 
1. Press the  button to switch between modes.

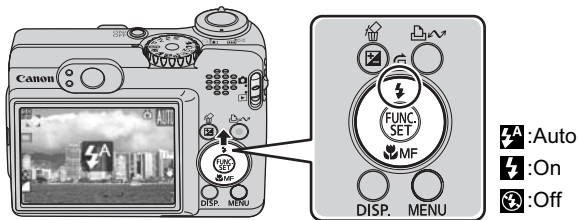


 : Auto
 : On
 : Off

 See the *Advanced Guide: Setting the Red-Eye Reduction Function* (p. 28).

 cannot be set in **AUTO** mode.

-  See the *Advanced Guide: Functions Available in Each Shooting Mode* (p. 128).
-  See *Selecting a Shooting Mode* (p. 9).



 
You are recommended to shoot with the camera attached to a tripod or other device if the camera shake warning icon  appears.





When the LCD monitor is on and flash recharging begins, the indicator blinks orange and the LCD monitor turns off. When recharging ends, the indicator turns off and the LCD monitor turns on. The time required for flash recharging will change depending on usage conditions and remaining battery power.

Shooting Close-ups (Macro)

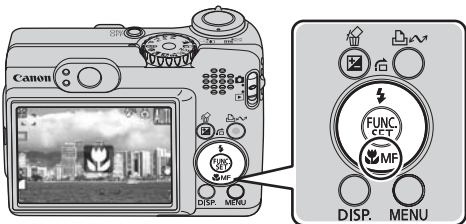1. Press the  button.



To cancel the macro mode, press the  button to turn off the  or **MF** display.



Macro

Use this mode to shoot close-ups of flowers or small items.

- Image Area at Minimum Focusing Distance from End of Lens to Subject
- Maximum wide angle setting: 60 x 45 mm (2.4 x 1.8 in.)
- Minimum focusing distance: 5 cm (2.0 in.)



- Use the LCD monitor to compose close-ups in macro mode since images composed with the viewfinder may be off-center.
- Check the range of the built-in flash when using it in macro mode (*Advanced Guide* p. 113).

This setting cannot be set in some shooting modes.

- ➔ See the *Advanced Guide: Functions Available in Each Shooting Mode* (p. 128).
- ➔ See *Selecting a Shooting Mode* (p. 9).

Using the Self-Timer

1. FUNC. Menu ► * (Drive Mode) ► / / .

► See *Menus and Settings* (p. 18).

* Default setting.

- When the shutter button is pressed fully, the self-timer lamp will blink. When setting the red-eye reduction function, the self-timer lamp will blink and then stay lit for the last 2 seconds.



To cancel the self-timer, follow step 1 and select .



10 sec. Self-Timer: Shoots 10 sec. after you press the shutter button.

- 2 sec. before the shutter releases, the self-timer sound and lamp will speed up.



2 sec. Self-Timer: Shoots 2 sec. after you press the shutter button.

- The self-timer sound beeps quickly when you press the shutter button and the shutter releases 2 sec. later.



Custom Timer: You can change the delay time (0–10*¹, 15, 20, 30 sec.) and number of shots (1–10*²) (p. 15).

- When [Delay] is set to 2 or more sec., the self-timer sound beeps quickly 2 sec. before the shutter releases. When [Shots] is set higher than 1, the self-timer sound only beeps before the first shot.

* 1 Default setting.

* 2 Default setting is 3 shots.

This setting cannot be set in some shooting modes.

► See the *Advanced Guide: Functions Available in Each Shooting Mode* (p. 128).

► See *Selecting a Shooting Mode* (p. 9).

■ Changing the Delay Time and Number of Shots (🕒)

1. FUNC. Menu ▶  (Drive Mode) ▶  (Custom Timer).

➔ See *Menus and Settings* (p. 18).



2. Press the MENU button.

3. Select [Delay] or [Shots] using the \uparrow or \downarrow button and change the settings using the \leftarrow or \rightarrow button and press the FUNC./SET button.



 
If the [Shots] option is set to 2 or more shots, the following occurs.

- The exposure and white balance are locked at the settings selected for the first shot.
- If the flash is used, the interval between shots lengthens because the flash must charge.
- The interval between shots may lengthen when the built-in memory of the camera fills.
- Shooting will automatically cease if the memory card becomes full.



Playback

1. Set the mode switch to (playback)(①).

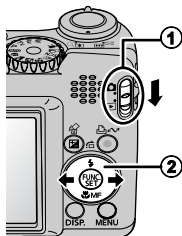
The last recorded image will display. If you have played back images between shooting sessions however, the last image viewed will display (Resume Playback) instead of the last recorded image. If the memory card has been switched, or the images on the memory card have been edited with a computer, the newest image on the memory card appears.



2. Use the or button to display the image you wish to view (②).

 
Use the  button to move to the previous image and the  button to move the next image.

Holding the button down advances the images more rapidly, but shows them less clearly.

 See the *Advanced Guide* for the various playback methods available.

Erasing

1. In the playback mode, use the **←** or **→** button to select an image to erase (①) and press the **🗑️** button (②).

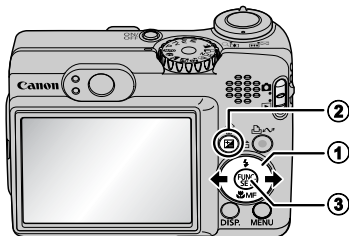

2. Confirm that [Erase] is selected and press the **FUNC./SET** button (③).
To exit instead of erasing, select [Cancel].



**Please note that erased images cannot be recovered.
Exercise adequate caution before erasing an image.**

 
➔ See the *Advanced Guide: Erasing All Images* (p. 76).

Menus and Settings

Settings for the shooting, playback or print modes or such camera settings as the date/time and sounds are set using the FUNC., Rec., Play, Print or Set up menu.

FUNC. Menu

This menu sets many of the common shooting functions.

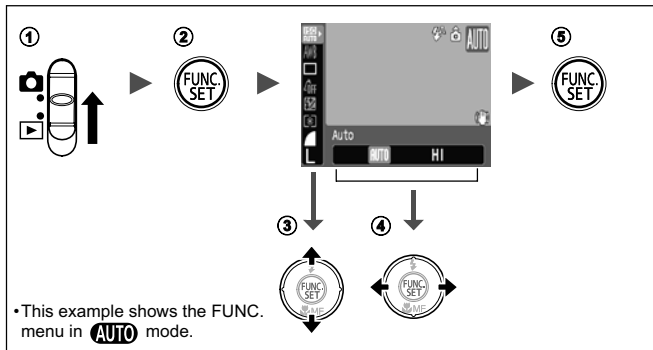


- ① Set the mode switch to (shooting).
- ② Press the FUNC./SET button.
- ③ Use the or button to select a menu item.
 - Some items may not be selectable in some shooting modes.
- ④ Use the or button to select an option for the menu item.
 - You can select further options with the **MENU** button for some options.
 - After selecting an option, you can press the shutter button to shoot immediately. After shooting, this menu will appear again, allowing you to adjust the settings easily.
- ⑤ Press the FUNC./SET button.

See the *Advanced Guide: Menu List* (p. 20).

Rec., Play, Print and Set up Menu

 
Convenient settings for shooting, playback or printing can be set with these menus.

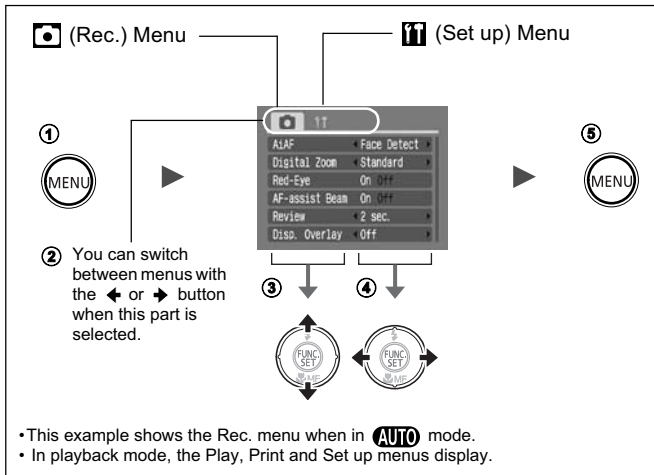

- ① **Press the MENU button.**
- ② **Use the ◀ or ▶ button to switch between menus.**
 - You can also use the zoom lever to switch between menus.
- ③ **Use the ▲ or ▼ button to select a menu item.**
 - Some items may not be selectable in some shooting modes.
- ④ **Use the ◀ or ▶ button to select an option.**
 - Menu items followed by an ellipsis (...) can only be set after pressing the **FUNC./SET** button to display the next menu. Press the **FUNC./SET** button again to confirm the setting.
- ⑤ **Press the MENU button.**

➡ See the *Advanced Guide: Menu List* (p. 20).

 
Printing

Connect the camera to a direct print compatible printer*1 with a cable and simply press the  button on the camera.

1. Connect the camera to a direct print compatible printer and turn on the printer's power.




Camera




Interface Cable

 Canon Brand Printers

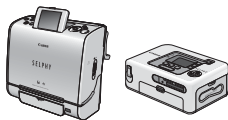


SELPHY Series
Compact Photo
Printers*2

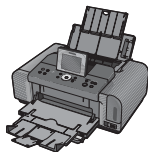 







PIXMA Series
Bubble Jet
Printers


*1 Since this camera uses a standard protocol (PictBridge), you can use it with other PictBridge-compliant printers in addition to Canon-brand printers.

 
*2 You can also use the CP-10/CP-100/CP-200/CP-300 card photo printers.

2. Turn on the power in playback mode and confirm that ,  or  is displayed in the upper left of the LCD monitor (1).

- The  button will light blue.
- The displayed icon will vary according to the printer model.
-   will display for movies.

3. Select an image to print using the  or  button (2) and press the  button (3).

The  button will blink blue and printing will start.

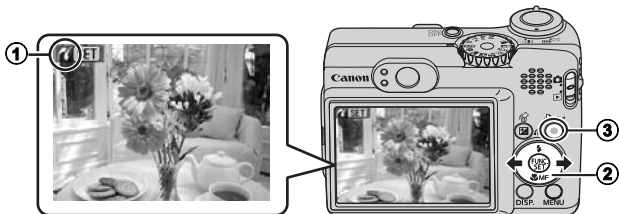


- ➔ See the *Advanced Guide: Setting the DPOF Print Settings* (p. 77).
- ➔ See the *Direct Print User Guide*.
- ➔ See the user guide for your printer.

Downloading Images to a Computer

The following methods can be used to download images recorded by the camera to a computer. Some methods, depending on the OS used, may not be available. Please read *System Requirements* (p. 23) in advance.

■ Camera to Computer Connection

| Supplied Software | | Install It | | Do Not Install It |
|--------------------|---------------|--------------------|------------------|--------------------|
| Downloading Method | | Computer Procedure | Camera Procedure | Computer Procedure |
| OS | Windows 2000 | ● | ● | — |
| | Windows XP | ● | ● | ● |
| | Windows Vista | ● | ● | ● |
| | Mac OS X | ● | ● | ● |

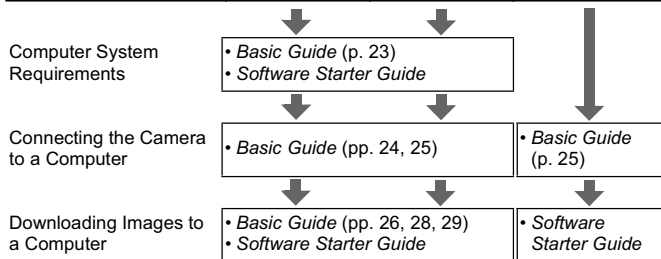 

■ Using a Memory Card Reader

A memory card reader can be used with all the operating systems listed above. See the *Software Starter Guide* for details.

System Requirements

Please install the software on a computer meeting the following minimum requirements.

■ Windows

| | |
|----------------------|--|
| OS | Windows 2000 Service Pack 4 Windows XP (including Service Pack 1 and Service Pack 2) Windows Vista |
| Computer Model | The above OS should be pre-installed on computers with built-in USB ports. |
| CPU | Windows 2000/Windows XP: Pentium 500 MHz or higher Windows Vista: Pentium 1.3 GHz or higher |
| RAM | Windows 2000/Windows XP: 256 MB or more Windows Vista: 512 MB or more |
| Interface | USB |
| Free Hard Disk Space | <ul style="list-style-type: none">• Canon Utilities<ul style="list-style-type: none">- ZoomBrowser EX 200 MB or more- PhotoStitch 40 MB or more• Canon Camera TWAIN Driver 25 MB or more |
| Display | 1,024 x 768 pixels/High Color (16 bit) or better |

■ Macintosh

| | |
|----------------------|--|
| OS | Mac OS X (v10.3 – v10.4) |
| Computer Model | The above OS should be pre-installed on computers with built-in USB ports. |
| CPU | PowerPC G3/G4/G5 or Intel processor |
| RAM | 256 MB or more |
| Interface | USB |
| Free Hard Disk Space | <ul style="list-style-type: none">• Canon Utilities<ul style="list-style-type: none">- ImageBrowser 200 MB or more- PhotoStitch 40 MB or more |
| Display | 1,024 x 768 pixels/32,000 Colors or better |

Preparing to Download Images

Ensure that you install the software first before connecting the camera to the computer.

■ Items to Prepare

- Camera and computer
- Canon Digital Camera Solution Disk supplied with the camera
- Interface cable supplied with the camera


1. Install the software.

Windows

1. Place the Canon Digital Camera Solution Disk in the computer's CD-ROM drive.
2. Click [Easy Installation].
Follow the onscreen instructions to proceed.
3. When the installation is complete, click either the [Finish] or [Restart] button that appears.
4. Remove the Canon Digital Camera Solution Disk from the CD-ROM drive when your normal desktop screen appears.



Macintosh

 
 
Double-click the [Canon Digital Camera Installer]  in the CDROM window. When the installer panel appears, click [Install]. Follow the onscreen instructions to proceed.



2. Connecting the camera to a computer.


1. Use the supplied interface cable to connect the computer's USB port to the camera's DIGITAL terminal.

Slip your fingernail under the right edge of the camera's terminal cover, lift it open and plug the interface cable in all the way.

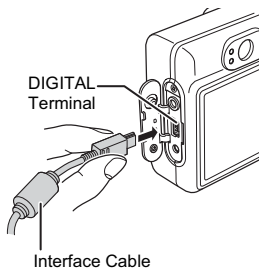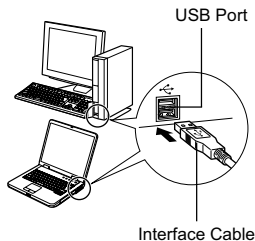

2. Set the camera's mode switch to  (playback) and turn on the power.

 The camera and computer will be able to communicate.

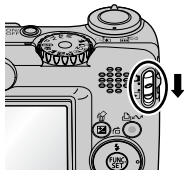


Always grasp the sides of the connector when disconnecting the interface cable from the camera's DIGITAL terminal.

Windows

If the Digital Signature Not Found window appears, click [Yes]. The USB driver will automatically finish installing onto the computer when you attach the camera and open a connection.

A window allowing you to set the preferences will appear when a connection is established between the camera and computer.

 - 1. Select [Canon CameraWindow] and click [OK] (first time only).**

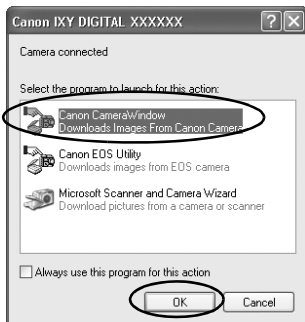

If the window above does not appear, click the [Start] menu and select [All Programs] or [Programs], followed by [Canon Utilities], [CameraWindow], [PowerShot - IXY - IXUS - DV 6] and [CameraWindow].

2. Download the images.

- Download the images using the camera or the computer.
- By default, the downloaded images are saved into the [Pictures] or the [My Pictures] folder.

 
Downloading Images Using the Camera (p. 29).

Downloading Images Using a Computer.
By default, all images that have yet to be downloaded will download.

You can set the type of image to download and the destination folder.



Thumbnails (small versions) of the downloaded images will display in the ZoomBrowser EX Main Window. By default, the downloaded images are saved into subfolders according to their shooting dates.

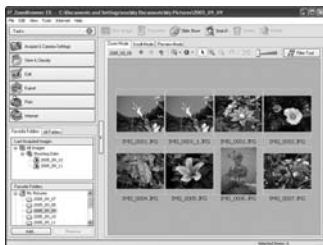

The following window will appear when you establish a connection between the camera and computer. If it fails to appear, click the [Canon CameraWindow] icon on the Dock (the bar which appears at the bottom of the desktop).

1. Download the images.

- Download the images using the camera or the computer.
- By default, the downloaded images are saved into the [Pictures] folder.

Downloading Images Using the Camera (p. 29).

Downloading Images Using a Computer. By default, all images that have yet to be downloaded will download.

You can set the type of image to download and the destination folder.








Thumbnails (small versions) of the downloaded images will display in the ImageBrowser Browser Window. By default, the downloaded images are saved into folders according to their shooting dates.




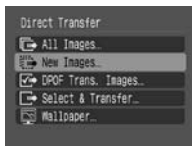 
Downloading Images Using the Camera (Direct Transfer)

Use this method to download images using camera operations. Install the supplied software and adjust the computer settings before using this method for the first time (p. 24).

| | | |
|--|------------------------------|--|
|  | All Images | Transfers and saves all images to the computer. |
|  | New Images | Transfers and saves to the computer only the images that have not been previously transferred. |
|  | DPOF Trans. Images | Transfers and saves to the computer only the images with DPOF Transfer settings (<i>Advanced Guide</i> p. 80). |
|  | Select & Transfer | Transfers and saves single images to the computer as you view and select them. |
|  | Wallpaper | Transfers and saves single images to the computer as you view and select them. The transferred images display as the background on the computer desktop. |


1. Confirm that the Direct Transfer menu is displayed on the camera's LCD monitor.

- The  button will light blue.
- Press the **MENU** button if the Direct Transfer menu fails to appear.



■ All Images/New Images/DPOF Trans. Images


2. Select , or and press the button.


- The images will download. The  button will blink blue while downloading is in progress. The display will return to the Direct Transfer menu when the download is complete.
- To cancel the download, press the **FUNC./SET** button.



■ Select & Transfer/Wallpaper

2. Select  or , and press the  button (or the FUNC./SET button).


3. Select images to download and press the  button (or the FUNC./SET button).

- The images will download. The  button will blink blue while downloading is in progress.
- Images can also be selected during index playback (*Advanced Guide* p. 64).
- Press the **MENU** button to return to the Direct Transfer menu.



Only JPEG images can be downloaded as wallpaper for a computer. On the Windows platform, the files are automatically created as BMP images.



The option selected with the  button is retained even when the camera's power is turned off. The previous setting will be in effect the next time the Direct Transfer menu is displayed. The image selection screen will appear directly when the [Select & Transfer] or the [Wallpaper] option was last selected.

Safety Precautions

Be sure to read, understand and follow the safety precautions below when using the camera, in order to prevent injury, burns or electrical shock to yourself and others.

Be sure to also read the safety precautions listed in the *Advanced Camera User Guide*.

Warnings

- Do not trigger the flash in close proximity to human or animal eyes.
- Store this equipment out of the reach of children and infants.
- Avoid dropping or subjecting the camera to severe impacts. Do not touch the flash portion of the camera if it has been damaged.
- Stop operating the equipment immediately if it emits smoke or noxious fumes.
- Do not handle the power cord if your hands are wet.
- Do not use batteries which are not specified for this camera.
- The compact power adapter output terminals have been designed exclusively for this equipment. Do not use them for other products.