

ENGLISH



Canon

PowerShot SD750 DIGITAL  
DIGITAL ELPH IXUS 75



Before Using the Camera

Shooting

Playback/Erasing

Print/Transfer Settings

Customizing the Camera

Troubleshooting

List of Messages

Appendix

# Advanced Camera User Guide

This guide explains camera features and procedures in detail.



Canon DIGITAL CAMERA  
PowerShot SD750 DIGITAL ELPH  
DIGITAL IXUS 75

Advanced Camera User Guide

Canon

# Main Features



## Shooting

- Automatically adjusts shooting settings to match particular conditions (Special Scene mode)
- Avoid the effects of camera shake or blurry subjects when shooting by using High ISO Auto and Auto ISO Shift
- Face Detect AF ideal for photographing images of people
- Automatically detects camera orientation with an Intelligent Orientation sensor
- Changes image colors to create special effects (Color Accent, Color Swap)

## Playback

- Organizes Images by Category
- Plays movies with sound
- Auto plays slideshows

## Editing

- Red-Eye Correction Function
- Adds effects to still images with the My Colors function
- Records sound memos for still images
- Records sound memos by themselves (Sound Recorder)

## Printing

- Makes printing easy with the Print/Share button
- Also supports non-Canon brand *PictBridge* compliant printers

## Uses of Recorded Images

- Effortlessly transfer them to a computer with the Print/Share button
- Freely customize the start-up image or start-up sound using the My Camera settings




# Conventions Used in this Guide

Icons appearing below titles indicate the modes in which the procedure can be used.

Mode Switch/  button

## Postcard Mode



- Unavailable shooting modes are shown grayed out.
-  and  are both indicated by .

**See *Functions Available in Each Shooting Mode*** (p. 160).

In this guide, the *Basic Camera User Guide* is referred to as the *Basic Guide*, and the *Advanced Camera User Guide* is referred to as the *Advanced Guide*.



This mark denotes issues that may affect the camera's operation.



This mark denotes additional topics that complement the basic operating procedures.



You can use SD memory cards, SDHC memory cards and MultiMediaCards with this camera. These cards are collectively called memory cards in this guide.






### **Use of genuine Canon accessories is recommended.**

This product is designed to achieve excellent performance when used with genuine Canon accessories. Canon shall not be liable for any damage to this product and/or accidents such as fire, etc., caused by the malfunction of non-genuine Canon accessories (e.g., a leakage and/or explosion of a battery pack). Please note that this warranty does not apply to repairs arising out of the malfunction of non-genuine Canon accessories, although you may request such repairs on a chargeable basis.

# Table of Contents

Items marked with a ☆ are lists or charts that summarize camera functions or procedures.

Conventions Used in this Guide . . . . .		1
Handling Precautions . . . . .		5
	Please Read . . . . .	5
	Safety Precautions . . . . .	6
	Preventing Malfunctions . . . . .	11
Before Using the Camera—Basic Operations . . . . .		12
	Using the LCD Monitor . . . . .	12
	LCD Monitor Brightness . . . . .	14
	Information Displayed on the LCD Monitor . . . . .	15
	Power Saving Function . . . . .	19
	Setting the World Clock . . . . .	20
☆	Menus and Settings . . . . .	22
☆	Menu List . . . . .	24
	Resetting Settings to Their Default Values . . . . .	28
	Formatting Memory Cards . . . . .	29
Shooting . . . . .		30
	Changing the Recording Pixels and Compression (Still Images) . . . . .	30
	Using the Digital Zoom/Digital Tele-Converter . . . . .	32
	Magnified Close-Up Shooting (Digital Macro) . . . . .	34
	Red-Eye Reduction Function . . . . .	35
	Setting the Slow Synchro Function . . . . .	35
	📷 Continuous Shooting . . . . .	36
	Postcard Mode . . . . .	37
	Embedding the Date in the Image Data . . . . .	37
	Setting the Display Overlay . . . . .	38
	🎬 Movie Shooting . . . . .	39
	Shooting Panoramic Images (Stitch Assist) . . . . .	44
	Switching between Focusing Modes . . . . .	46
	Shooting Hard-to-Focus Subjects (Focus Lock, AF Lock) . . . . .	48
	Locking the Exposure Setting (AE Lock) . . . . .	49
	Locking the Flash Exposure Setting (FE Lock) . . . . .	50

Switching between Metering Modes . . . . .	51
Adjusting the Exposure Compensation . . . . .	52
Setting the Shutter Speed (Long Shutter Mode) . . . . .	53
Adjusting the Tone (White Balance) . . . . .	55
Shooting in a My Colors Mode . . . . .	58
Changing Colors . . . . .	60
ISO Adjusting the ISO Speed . . . . .	65
 Changing the ISO Speed with One Touch (Auto ISO Shift) . . . . .	66
Registering Functions to the  Button . . . . .	67
Setting the Auto Rotate Function . . . . .	69
Checking for Focus Right After Shooting . . . . .	70
Creating an Image Destination (Folder) . . . . .	72
Resetting the File Number . . . . .	74
<b>Playback/Erasing . . . . .</b>	<b>76</b>
 Magnifying Images . . . . .	76
 Viewing Images in Sets of Nine (Index Playback) . . . . .	77
Organizing Images by Category (My Category) . . . . .	78
 Jumping to Images . . . . .	79
Viewing Movies . . . . .	80
Editing Movies . . . . .	82
Rotating Images in the Display . . . . .	83
Playback with Transition Effects . . . . .	84
Red-Eye Correction Function . . . . .	85
Adding Effects with the My Colors Function . . . . .	88
Attaching Sound Memos to Images . . . . .	90
Sound-Only Recording (Sound Recorder) . . . . .	91
Automated Playback (Slide Shows) . . . . .	93
Protecting Images . . . . .	98
Registering Functions to the Playback Button . . . . .	100
Erasing Images . . . . .	102
<b>Print Settings/Transfer Settings . . . . .</b>	<b>104</b>
Setting the DPOF Print Settings . . . . .	104
Setting the DPOF Transfer Settings . . . . .	108

Customizing the Camera (My Camera Settings) . . . . .	110
Changing My Camera Settings . . . . .	110
Registering My Camera Settings . . . . .	111
Troubleshooting . . . . .	113
Camera . . . . .	113
When the power is turned on . . . . .	113
LCD monitor . . . . .	114
Shooting . . . . .	115
Shooting Movies . . . . .	119
Playback . . . . .	120
Battery/Battery Charger . . . . .	121
TV monitor output . . . . .	121
Printing on Direct Print Compatible Printers . . . . .	122
List of Messages . . . . .	123
Appendix . . . . .	127
Battery Handling . . . . .	127
Handling the Memory Card . . . . .	129
Using an AC Adapter Kit (Sold Separately) . . . . .	131
Using an Externally Mounted Flash (Sold Separately) . . . . .	132
Camera Care and Maintenance . . . . .	134
Specifications . . . . .	135
INDEX . . . . .	145
☆ Functions Available in Each Shooting Mode . . . . .	160

# Handling Precautions

## Please Read

### Test Shots

Before you try to photograph important subjects, we highly recommend that you shoot several trial images to confirm that the camera is operating and being operated correctly.

Please note that Canon Inc., its subsidiaries and affiliates, and its distributors are not liable for any consequential damages arising from any malfunction of a camera or accessory, including memory cards, that results in the failure of an image to be recorded or to be recorded in a way that is machine readable.

### Warning Against Copyright Infringement

Please note that Canon digital cameras are intended for personal use and should never be used in a manner that infringes upon or contravenes international or domestic copyright laws and regulations. Please be advised that in certain cases the copying of images from performances, exhibitions, or commercial properties by means of a camera or other device may contravene copyright or other legal rights even if the image was shot for personal use.

### Warranty Limitations

This camera's warranty is only effective in the country of sale. If a problem arises while the camera is in use abroad, please convey it back to the country of sale before proceeding with a warranty claim to a Canon Customer Support Help Desk.

**For Canon Customer Support contacts, please see the customer support list supplied with your camera.**

## Camera Body Temperature

If your camera is used for prolonged periods, the camera body may become warm. Please be aware of this and take care when operating the camera for an extended period.

## About the LCD Monitor

The LCD monitor is produced with extremely high-precision manufacturing techniques. More than 99.99% of the pixels operate to specification. Less than 0.01% of the pixels may occasionally misfire or appear as red or black dots. This has no effect on the recorded image and does not constitute a malfunction.

## Video Format

Please set the camera's video signal format to the one used in your region before using it with a TV monitor (p. 101).

## Language Setting

Please see the *Basic Guide* (p. 9) to change the language setting.

# Safety Precautions

- Before using the camera, please ensure that you read the safety precautions described below and in the "Safety Precautions" section of the *Basic Camera User Guide*. Always ensure that the camera is operated correctly.
- The safety precautions noted on the following pages are intended to instruct you in the safe and correct operation of the camera and its accessories to prevent injuries or damage to yourself, other persons and equipment. Be sure you fully understand them before reading the rest of the manual.
- Equipment refers to the camera, battery charger or separately sold compact power adapter.
- Battery refers to the battery pack.



# Warnings

## Equipment

- **Do not aim the camera directly at the sun or strong light sources.**

- It may damage the photographic sensor (CCD).

- **Store this equipment out of the reach of children and infants.**

- Wrist strap: Placement of the strap around the child's neck could result in asphyxiation.

- Memory card: Dangerous if accidentally swallowed. If this occurs, contact a doctor immediately.

- **Do not attempt to disassemble or alter any part of the equipment that is not expressly described in this guide.**

- **To avoid the risk of high-voltage electrical shock, do not touch the flash portion of the camera if it has been damaged.**

- **Stop operating the equipment immediately if it emits smoke or noxious fumes.**

- **Do not allow the equipment to come into contact with, or become immersed in, water or other liquids. If the exterior comes into contact with liquids or salt air, wipe it dry with a soft, absorbent cloth.**

Continued use of the equipment may result in fire or electrical shock. Immediately turn the camera power off and remove the camera battery or unplug the battery charger or compact power adapter from the power outlet. Please consult your camera distributor or the closest Canon Customer Support Help Desk.

- **Do not use substances containing alcohol, benzine, thinners or other flammable substances to clean or maintain the equipment.**

- **Do not cut, damage, alter or place heavy items on the power cord.**

- **Use only recommended power accessories.**

- **Remove the power cord on a regular periodic basis and wipe away the dust and dirt that collects on the plug, the exterior of the power outlet and the surrounding area.**

- **Do not handle the power cord if your hands are wet.**

Continued use of the equipment may result in fire or electrical shock.

## Battery

- **Do not place the battery near a heat source or expose it to direct flame or heat.**
- **The battery should not be immersed in water or sea water.**
- **Do not attempt to disassemble, alter or apply heat to the battery.**
- **Avoid dropping or subjecting the battery to severe impacts that could damage the casing.**
- **Use only recommended battery and accessories.**

Use of battery not expressly recommended for this equipment may cause explosions or leaks, resulting in fire, injury and damage to the surroundings. In the event that a battery leaks and the eyes, mouth, skin or clothing contact these substances, immediately flush with water and seek medical assistance.

- **Disconnect the battery charger and compact power adapter from both the camera and the power outlet after recharging or when they are not in use to avoid fire and other hazards.**
- **Do not place anything, such as tablecloths, carpets, bedding or cushions, on top of the battery charger while it is charging.**

Leaving the units plugged in for a long period of time may cause them to overheat and distort, resulting in fire.

- **Use only the specified battery charger to charge the battery.**
- **The battery charger and compact power adapter are designed for exclusive use with your camera. Do not use it with other products or batteries.**

There is a risk of overheating and distortion which could result in fire or electrical shock.

- **Before you discard a battery, cover the terminals with tape or other insulators to prevent direct contact with other objects.**

Contact with the metallic components of other materials in waste containers may lead to fire or explosions.

## Others

- **Do not trigger the flash in close proximity to human or animal eyes. Exposure to the intense light produced by the flash may damage eyesight.**

In particular, remain at least one meter (39 inches) away from infants when using the flash.

- **Keep objects that are sensitive to magnetic fields (such as credit cards) away from the speaker of the camera.**

Such items may lose data or stop working.

## ⚠ Cautions

### Equipment

- **Be careful not to bang the camera or subject it to strong impacts or shocks that could lead to injury or damage the equipment when wearing or holding it by the strap.**

- **Do not store the equipment in humid or dusty areas.**
- **Do not allow metal objects (such as pins or keys) or dirt to contact the charger terminals or plug.**

Such conditions could lead to fire, electrical shock or other damage.

- **Avoid using, placing or storing the equipment in places subject to strong sunlight or high temperatures, such as the dashboard or trunk (boot) of a car.**
- **Do not use the equipment in a manner that exceeds the rated capacity of the electrical outlet or wiring accessories. Do not use if the power cord or plug are damaged, or if not fully plugged into the outlet.**
- **Do not use in locations with poor ventilation.**

The above-mentioned can cause leakage, overheating or explosion, resulting in fire, burns or other injuries. High temperatures may also cause deformation of the casing.

- **When not using the camera for extended periods of time, remove the battery from the camera or battery charger and store the equipment in a safe place.**

The battery can run down.

## **Equipment**

- **Do not connect compact power adapters or battery chargers to devices such as electrical transformers for foreign travel because it may lead to malfunctions, excessive heat generation, fire, electric shock or injury.**

## **Flash**

- **Do not operate the flash with dirt, dust or other items stuck to the surface of the flash.**
- **Be careful not to cover the flash with your fingers or clothing when shooting.**

The flash may be damaged and emit smoke or noise. The resulting heat build-up could damage the flash.

- **Do not touch the surface of the flash after taking several pictures in rapid succession.**

Doing so could result in burns.

# Preventing Malfunctions

## Avoid Strong Magnetic Fields

- **Never place the camera in close proximity to electric motors or other equipment generating strong electromagnetic fields.**

Exposure to strong magnetic fields may cause malfunctions or corrupt image data.

## Avoid Condensation Related Problems

- **When moving the equipment rapidly from a cold place to a hot place, you can avoid condensation by placing the equipment in an airtight, resealable plastic bag and letting it adjust to temperature changes slowly before removing it from the bag.**

Moving the equipment rapidly from a cold place to a hot place may cause condensation (water droplets) to form on its external and internal surfaces.

## If Condensation Forms Inside the Camera

- **Stop using the camera immediately.**


Continued use may damage the equipment. Remove the memory card and battery or compact power adapter from the camera and wait until the moisture evaporates completely before resuming use.

# Before Using the Camera—Basic Operations

## Using the LCD Monitor



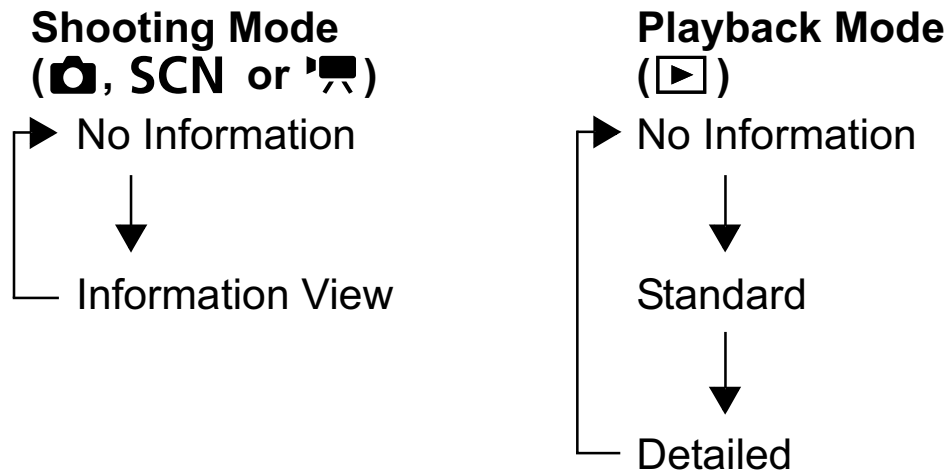


### 1 Press .

- The display mode changes as follows with each press.



- The shooting information displays for approximately 6 sec. when a setting is changed, regardless of the selected display mode.




- The LCD monitor is set to the Information View in the , , ,  or  mode.
- The LCD monitor will not switch to detailed display in magnified display (p. 76), or index playback mode (p. 77).

## Using the Clock

You can display the current date and time for a 5-second\* interval using the following two methods.

\* Default setting

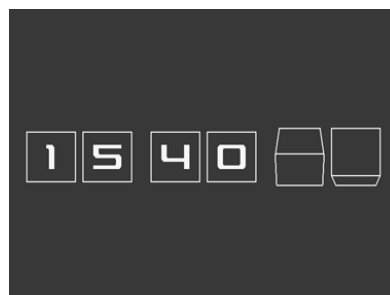

### Method 1

Hold the **FUNC./SET** button down while turning on the power.

### Method 2

In a shooting/playback mode, press the **FUNC./SET** button for more than one second.

If you hold the camera horizontally, it displays the time. If you hold it vertically, the time and date display.

However, if you hold the camera vertically and use method 1 to display the date and time, the time will be initially displayed in the same way as when the camera is held horizontally.

- You can change the display color by pressing the ◀ or ▶ button.
- The clock display will disappear when the display interval is over or when a button is operated for a subsequent operation.
- The clock's display interval can be changed in the **fT** (Set up) menu (p. 27).
- The clock cannot be displayed when images are magnified (p. 76) or it is in the index playback mode (p. 77).

# LCD Monitor Brightness

## LCD Monitor Brightness Settings

The brightness of the LCD monitor can be changed in the following two ways.

- **Changing Settings Using the Set up Menu (p. 26)**
- **Changing Settings Using the DISP. Button (Quick-bright LCD Function)**

You can set the LCD monitor to the brightest setting regardless of the option selected in the Set up menu by pressing the **DISP.** button for more than one second.\*

- To restore the previous brightness setting, press the **DISP.** button for more than one second again.
- The next time you turn on the camera, the LCD monitor will be at the brightness setting selected in the Set up menu.

\* You cannot change the brightness of the LCD monitor with this function if you have already set it to its highest setting in the Set up menu.

## Night Display

When shooting in dark conditions, the camera automatically brightens the LCD monitor to suit the brightness of the subject\*, making it easier to frame the subject.

\* Although noise may appear and the movement of the subject shown on the LCD monitor may appear somewhat jagged, there is no effect on the recorded image. The brightness of the image displayed in the monitor, and the brightness of the actual image recorded will be different.



# Information Displayed on the LCD Monitor

## Shooting Information (Shooting mode)

Digital Tele-converter/Zoom Magnification/Safety Zoom (p. 32)

[ ] Spot Frame  
 [ ] AF Frame (p. 46)

\*/ Shutter speed\*/ Aperture Setting\*

3:2 Guide (p. 38)

Grid Lines (p. 38)


- Stills: Recordable Shots
- Movies: Remaining Time/ Elapsed Time


	Macro/Infinity ( <i>Basic Guide</i> p. 16)
	ISO Speed (p. 65)
	Flash ( <i>Basic Guide</i> p. 15)
	Shooting Method (p. 36, <i>Basic</i> p. 17)
	Auto Rotate (p. 69)
	Rec. Movie Recording (p. 39)
	Low Battery (p. 127)
	AE Lock (p. 49)
	FE Lock (p. 50)
	AF Lock (p. 48)
	Time Zone (p. 20)
	Create Folder (p. 72)
	Metering Mode (p. 51)
	Compression (Still Images) (p. 30)
	Frame Rate (Movie) (p. 42)
	Shooting Interval (Movie)
	Recording Pixels (pp. 30, 42)
	Camera Shake Warning (p. 115)
	Exposure Shift Bar (Movie) (p. 41)

	Shooting Mode (pp. 34, 39, 44, 60, 62, <i>Basic Guide</i> pp. 12 – 14)
	Exposure Compensation (p. 52)
	Long Shutter Mode (p. 53)
	White Balance (p. 55)
	My Colors (p. 58)

\* Displays when the shutter button is pressed halfway. Since the camera automatically readjusts for the optimal settings when using the flash, settings displayed in shooting information may differ from the actual settings.




If the indicator blinks orange and the camera shake icon  displays, it indicates there is insufficient illumination and a slow shutter speed will be selected. Shoot using the following methods.

- Raise the ISO speed (p. 65).
- Set the Auto ISO Shift to [On] (p. 66).
- Select a setting other than  (flash off) (*Basic Guide* p. 15).
- Attach the camera to a tripod or other device.

## Playback Information (Playback Mode)

### Standard

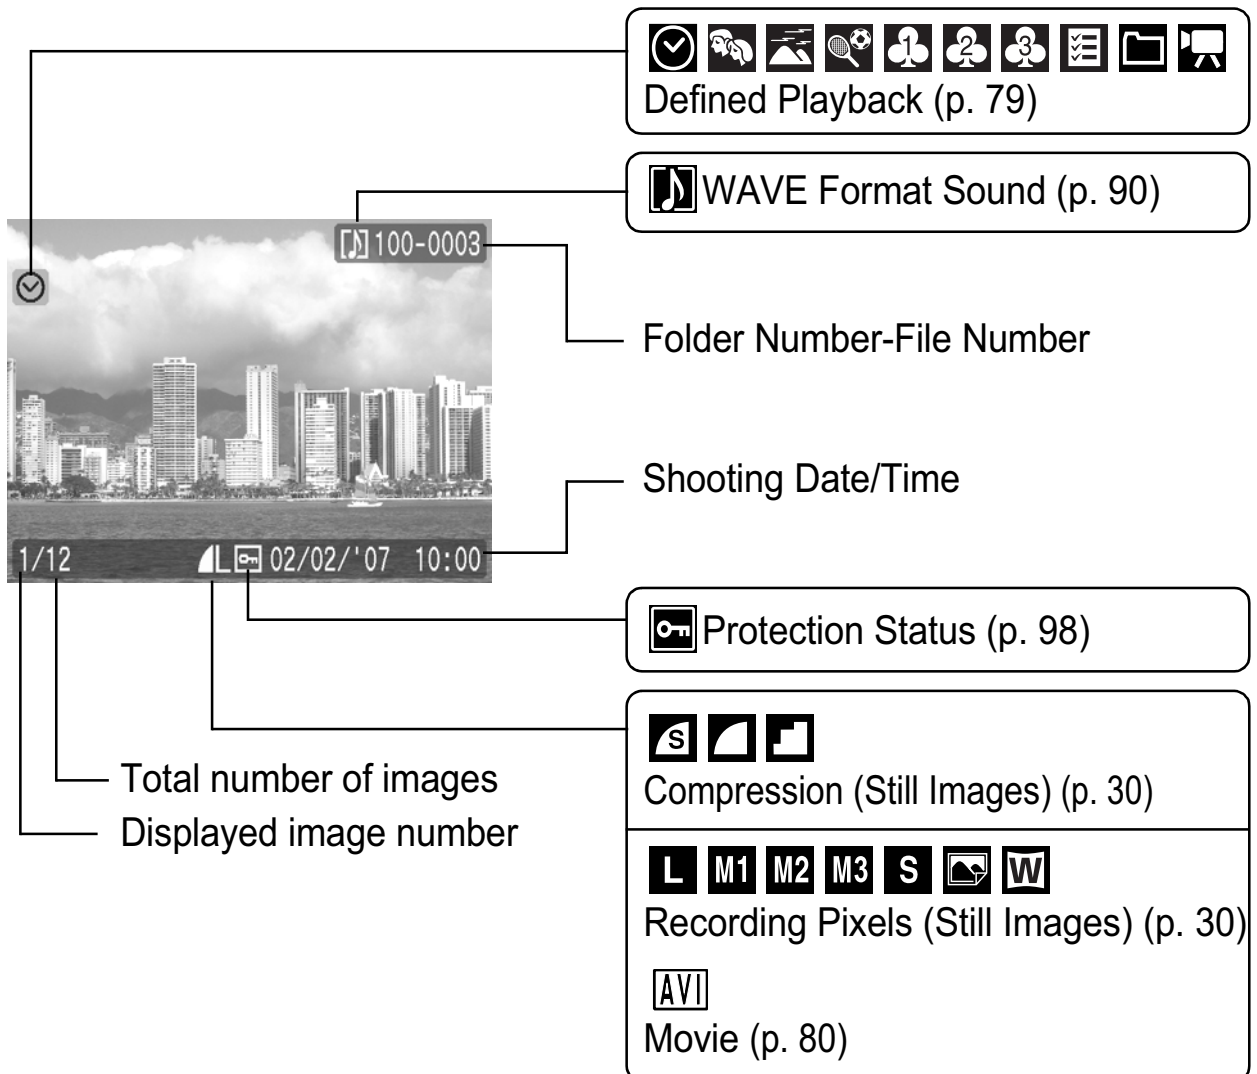

# Detailed

My Category (p. 78)

Exposure Compensation (p. 52)

Flash (*Basic Guide* p. 15)

Macro/Infinity (*Basic Guide* p. 16)

Shooting Mode (pp. 34, 39, 44, 60, 62, *Basic Guide* pp. 12 – 14)

Metering Mode (p. 51)

ISO Speed (p. 65)

Recording Pixels/Frame Rate (Movies) (p. 42)

Shutter speed  
Time Lapse (p. 39)

Aperture Setting

My Colors (Shooting) (p. 58),  
Color Accent /Color Swap (p. 60)

My Colors (Playback) (p. 88)

Image with Red-Eye Correction (p. 85)/My Colors effect (p. 88)

White Balance (p. 55)

File Size

Red-Eye Correction (Playback) (p. 85)

Recording Pixels (Still Images) (p. 30)  
Movie Length (Movies) (p. 39)

The following information may also be displayed with some images.

	A sound file in a format other than the WAVE format is attached or the file format is not recognized.
	JPEG image not conforming to Design rule for Camera File System Standards
	RAW image
	Unrecognized data type




Information for images shot on other cameras may not display correctly.

## Histogram Function


The histogram is a graph that allows you to check the brightness of the image. The greater the bias toward the left in the graph, the darker the image.

The greater the bias toward the right, the brighter the image. If the image is too dark, adjust the exposure compensation to a positive value. Similarly, adjust the exposure compensation to a negative value if the image is too bright (p. 52).


Sample Histograms

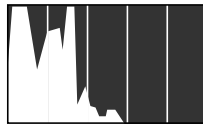

Dark Image

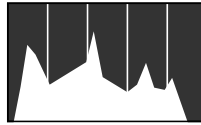

Balanced Image

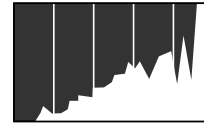

Bright Image

# Power Saving Function

This camera is equipped with a power saving function. The power will shut off in the following circumstances. Press the power button again to restore power.

<b>Shooting Mode</b>	Powers down approximately 3 minutes after the last control is accessed on the camera. The LCD monitor automatically turns off 1 minute* after the last control is accessed even if [Auto Power Down] is set to [Off]. Press any button other than the power button or change the camera orientation to turn the LCD monitor back on.
<b>Playback Mode Connected to a Printer</b>	Powers down approximately 5 minutes after the last control is accessed on the camera.

\* This time can be changed.



- The power saving function will not activate during a slide show or while the camera is connected to a computer.
- The power saving function settings can be changed (p. 26).

# Setting the World Clock

When traveling abroad, you can record images with local dates and times simply by switching the time zone setting if you pre-register the destination time zones. You can enjoy the convenience of not having to switch the Date/Time settings.

## Setting the Home/World Time Zones

**1**  **(Set up) Menu** ▶ **[Time Zone]** ▶ 

See *Menus and Settings* (p. 23).






**2**  **(Home)** ▶ 



**3** **Use the ← or → button to select a home time zone**

▶ 

- To set the daylight saving option, use the  or  button to display . The time will advance by 1 hour.

- You can also select an area with the touch control dial.



**4**  **(World)** ▶ 



## 5 Use the ← or → button to select a destination time zone ► .

- You can also select an area with the touch control dial. In addition, as in Step 3, you can set the daylight saving time.

Time Difference from the Home Time Zone



## 6 Use the ↑ or ↓ button to select [Home/World], and the ← or → button to select ► .


### Switching to the Destination Time Zone

#### 1 (Set up) Menu ► [Time Zone] ► .

See Menus and Settings (p. 23).



#### 2 Use the ← or → button to select ► .

- To change the destination time zone, use the **FUNC./SET** button.
- When you switch to the destination time zone,  will display on the monitor.



If you change the date and time when the World option is selected, the Home date and time will also change automatically.

# Menus and Settings


Menus are used to set the shooting, playback and print settings as well as such camera settings as the date/time and electronic beep. The following menus are available.

## ●FUNC. Menu

## ●Rec., Play, Print, Set up and My Camera Menus

## FUNC. Menu

This menu sets many of the common shooting functions.

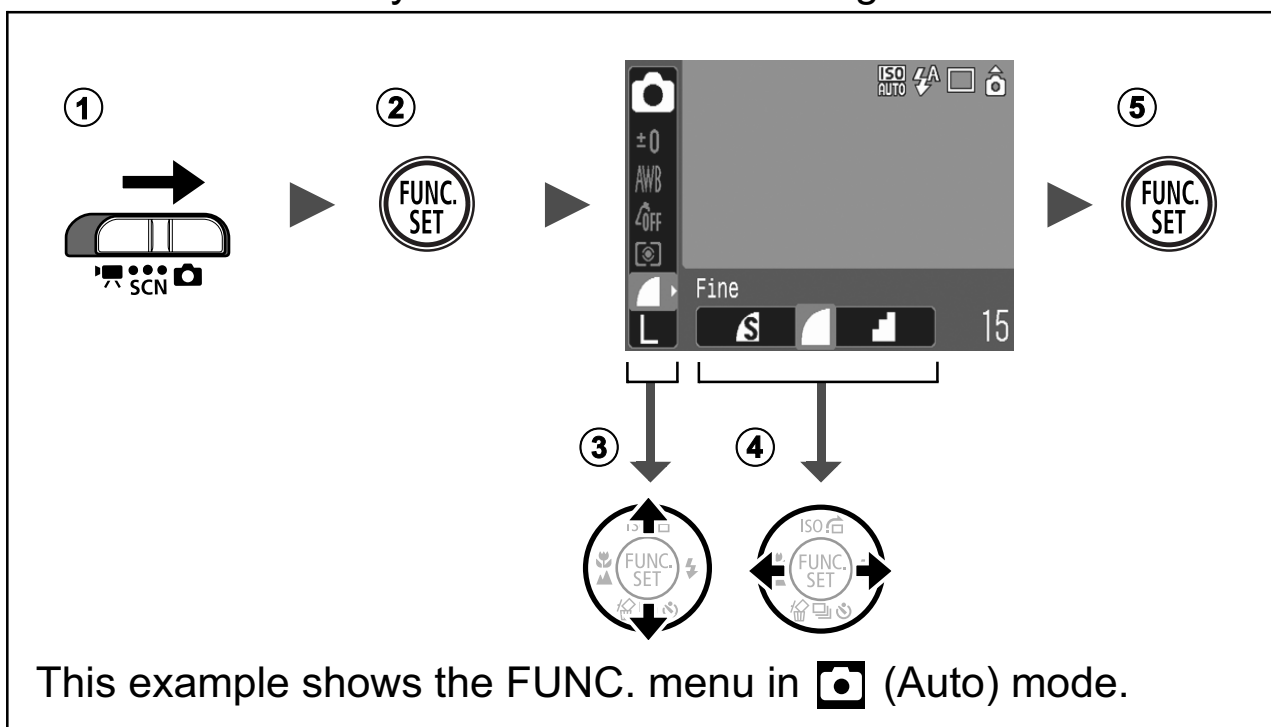

This example shows the FUNC. menu in (Auto) mode.

- ① Slide the mode switch to , SCN or .
- ② Press the FUNC./SET button.
- ③ Use the or button to select a menu item.
  - Some items may not be selectable in some shooting modes.
- ④ Use the or button to select an option for the menu item.
  - You can also use the touch control dial to make a selection.
  - You can select further options with the **MENU** button for some options.
  - After selecting an option, you can press the shutter button to shoot immediately. After shooting, this menu will appear again, allowing you to adjust the settings easily.
- ⑤ Press the FUNC./SET button.



# Rec., Play, Print, Set up and My Camera Menus

Convenient settings for shooting, playback or printing can be set with these menus.

① (Rec.) Menu      (Set up) Menu  
② (My Camera) Menu

① MENU →

② You can switch between menus with the ◀ or ▶ button when this part is selected.

③      ④

⑤ MENU

- This example shows the Rec. menu in (Auto) mode.
- In playback mode, the Play, Print, Set up and My Camera menus display.














- ① **Press the MENU button.**
- ② **Use the ◀ or ▶ button to switch between menus.**
  - You can also use the zoom lever to switch between menus.
- ③ **Use the ▲ or ▼ button to select menu items.**
  - You can also use the touch control dial to make a selection.
  - Some items may not be selectable in some shooting modes.
- ④ **Use the ◀ or ▶ button to select an option.**
  - Menu items followed by an ellipsis (...) can only be set after pressing the **FUNC./SET** button to display the next menu. Press the **FUNC./SET** button again to confirm the setting.
- ⑤ **Press the MENU button.**

# Menu List

See *Functions Available in Each Shooting Mode* (p. 160).

## FUNC. Menu








The icons shown below are the default settings.

Menu Item	Page	Menu Item	Page
 Shooting Mode	<i>Basic</i> p. 13	 Metering Mode	p. 51
 Special Scene Mode	<i>Basic</i> p. 13	 Compression (Still Image)	p. 30
 Movie Mode	p. 39	 Frame Rate (Movie)	p. 42
 Exposure Compensation	p. 52	 Shooting Interval (Movie)	p. 43
 Long Shutter Mode	p. 53	 Recording Pixels (Still Image)	p. 30
 White Balance	p. 55	 Recording Pixels (Movie)	p. 42
 My Colors	p. 58		

## Rec. Menu




\* Default setting

Menu Item	Options	Page/Topic
AiAF	Face Detect*/On/Off	p. 46
Digital Zoom		
	(Still) Standard*/Off/1.5x/1.9x	p. 32
	(Movie) On*/Off (Standard only)	
Slow Synchro	On/Off*	p. 35
Red-Eye	On*/Off	p. 35
Self-timer	Delay: 0–10*, 15, 20, 30 sec. Shots: 1–3* <sup>1</sup> –10	<i>Basic Guide</i> p. 17
Auto ISO Shift	On/Off*	p. 66
AF-assist Beam	On*/Off	p. 116
Review	Off/2*–10 seconds/Hold	<i>Basic Guide</i> p. 12
Save Original	On/Off*	p. 64
Auto Category	On*/Off	Sets whether or not images are automatically classified into categories during shooting.* <sup>2</sup>

Disp. Overlay		
(Still)	Off*/Grid Lines/3:2 Guide/ Both	p. 38
(Movie)	Off*/Grid Lines	
Date Stamp	Off*/Date/Date & Time	p. 37
Set  button	 */  /WB/  /T/  /  /  /	p. 67

\*1 Default setting is 3 shots.













\*2 They are classified according to the following categories.

**People:** , ,  or images with faces detected if [Face Detect] has been selected in [AiAF] mode.

**Scenery:** 

**Events:** , , , , , 

## Play Menu

	Menu Item	Page
	Slide Show	p. 93
	My Category	p. 78
	Erase	p. 102
	Protect	p. 98
	Red-Eye Correction	p. 85
	My Colors	p. 88
	Sound Memo	p. 90
	Sound Recorder	p. 91
	Rotate	p. 83
	Transfer Order	p. 108
	Set Play button	p. 100
	Transition	p. 84


## Print Menu

Menu Item	Page
Print	
Select Images & Qty.	
Select by Date	
Select by Category	p. 104
Select by Folder	
Select All Images	
Clear All Selections	
Print Settings	p. 107



# Set up Menu




\* Default setting

Menu Item	Options	Page/Topic
Mute	On/Off*	Set to [On] to silence all sounds except warning sounds. ( <i>Basic</i> p. 10)
Volume	Off/1/2*/3/4/5	Adjusts the volume of the start-up sound, operation sound, self-timer sound, shutter sound and playback sound. The volume cannot be adjusted if [Mute] is set to [On].
Start-up Vol.		Adjusts the volume of the start-up sound when the camera is turned on.
Operation Vol.		Adjusts the volume of the operation sound that plays when the touch control dial or any button other than the shutter button is operated.
Selftimer Vol.		Adjusts the volume of the self-timer sound played 2 sec. before the shutter is released.
Shutter Volume		Adjusts the volume of the sound played when the shutter releases. The shutter sound does not play when a movie is recording.
Playback Vol.		Adjusts the volume of playback movie sound, sound memos or the Sound Recorder.
Touch Icons	On*/Off	Sets whether or not the Touch Icons display in the LCD monitor when the touch control dial is touched. ( <i>Basic Guide</i> p. 4)
LCD Brightness	-7 to 0* to +7	Use the ◀ or ▶ button to adjust the brightness. You can check the brightness in the LCD monitor while you are adjusting the setting.
Power Saving		p. 19
Auto Power Down	On*/Off	Sets whether or not the camera automatically powers down after a set period of time elapses without the camera being operated.
Display Off	10 sec./20 sec./30 sec./1 min.*/2 min./3min.	Sets the length of time before the LCD monitor turns off when no camera operation is performed.

Time Zone	Home*/World	p. 20
Date/Time		<i>Basic Guide</i> p. 8
Clock Display	0–10* <sup>1</sup> sec./20 sec./30 sec./1 min./2 min./3 min.	p. 13
Format		You can also set it to perform a low level format (p. 29).
File Numbering	Continuous*/Auto Reset	p. 74
Create Folder		p. 72
Create New Folder	Check mark (On)/ No check mark (Off)	Creates a folder for the next shooting session.
Auto Create	Off*/Daily/ Monday–Sunday/ Monthly	You can also set the Auto Create time.
Auto Rotate	On*/Off	p. 69
Lens Retract	1 min.* <sup>1</sup> /0 sec.	Sets the timing of the lens retraction when you switch from the shooting to the playback mode.
Language		<i>Basic Guide</i> p. 9
Video System	NTSC/PAL	p. 101
Print Method	Auto*/ 	See below. <sup>*2</sup>
Reset All		p. 28

\*1 Default setting is 5 seconds.


\*2 You can change the printer connection method. There is usually no need to change the settings, but select  when you print an image recorded in the  (Widescreen) mode at the full page setting for wide paper using a Canon SELPHY CP730/CP720/CP710/CP510 Compact Photo Printer. Since this setting is saved even when the power is turned off, ensure that you return the setting to [Auto] to print other image sizes. (However, it cannot be changed while the printer is connected.)

Menu Item	Available Settings	Page
Theme	Selects a common theme for each My Camera settings item.	p. 110
Start-up Image	Sets the image displayed when the camera power is turned on.	
Start-up Sound	Sets the sound played when the camera power is turned on.	
Operation Sound	Sets the sound played when any button other than the shutter button is pressed.	
Selftimer Sound	Sets the sound played 2 seconds before the shutter releases in self-timer mode.	
Shutter Sound	Sets the sound played when the shutter button is pressed. There is no shutter sound for movies.	
My Camera Menu Contents	 (Off) / <b>1</b> * /  / 	

## Resetting Settings to Their Default Values


### 1 (Set up) Menu ► [Reset All].

See Menus and Settings (p. 23).

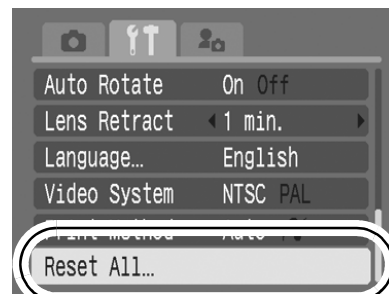

### 2 Select [OK] and press .




- Settings cannot be reset when the camera is connected to a computer or to a printer.
- The following cannot be reset.
  - Shooting mode
  - The [Time Zone], [Date/Time], [Language] and [Video System] options in the  (Set up) menu (p. 27)
  - White balance data recorded with the custom white balance function (p. 56)
  - Colors specified in the [Color Accent] (p. 60) or [Color Swap] (p. 62) modes.
  - Newly added My Camera settings (p. 111)

# Formatting Memory Cards

You should always format a new memory card or one from which you wish to erase all images and other data.




- Please note that formatting (initializing) a memory card erases all data, including protected images and other file types.
- When the  icon is displayed, sound data recorded with the sound recorder exists. Exercise adequate caution before formatting the memory card.

1




## (Set up) Menu ► [Format].

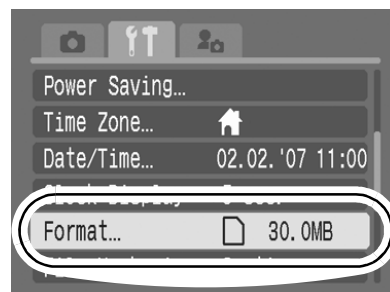
See *Menus and Settings* (p. 23).



2

## Select [OK] and press .

- To perform a low level format, use the  button to select [Low Level Format] and the  or  button to add a check mark.
- You can stop formatting a card when [Low Level Format] is selected by pressing the **FUNC./SET** button. You can still use a card without problem when formatting is halted, but its data will be erased.

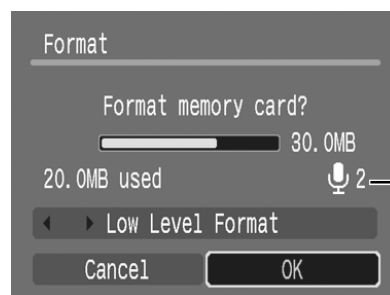

Displays when sound data recorded with the sound recorder is present (p. 91).



### ● Low Level Format

We recommend you select [Low Level Format] when you think that the recording/reading speed of a memory card has dropped. A low level format may require 2 to 3 minutes with some memory cards.

- Formatting cannot be performed in Stitch Assist mode.

# Shooting

Use the touch control dial to select shooting modes or FUNC. menu options. See the *Basic Guide*, p. 4.



## Changing the Recording Pixels and Compression (Still Images) SCN




### 1 FUNC. Menu \* (Compression)/ \* (Recording Pixels).







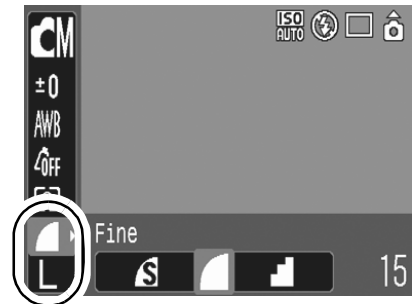


See *Menus and Settings* (p. 22).

\* Default setting.


- Use the  or  button to select compression/recording pixels settings and press the **FUNC./SET** button.



## Approximate Values for Recording Pixels





Recording Pixels			Purpose*
 (Large)	3072 x 2304 pixels	High   Low	Printing to about A3-size 297 x 420 mm (11.7 x 16.5 in.)
 (Medium 1)	2592 x 1944 pixels		Printing to about A4-size 210 x 297 mm (8.3 x 11.7 in.) Printing to about Letter-size 216 x 279 mm (8.5 x 11 in.)
 (Medium 2)	2048 x 1536 pixels		Printing to about A5-size 148 x 210 mm (6 x 8.3 in.)
 (Medium 3)	1600 x 1200 pixels		Print postcard-size prints 148 x 100 mm (6 x 4 in.) Print L-size prints 119 x 89 mm (4.7 x 3.5 in.)
 (Small)	640 x 480 pixels		Send images as e-mail attachments or shoot more images
 or  (Postcard)	1600 x 1200 pixels	When printing to postcards (p. 37).	



 <b>(Widescreen)</b>	3072 x 1728 pixels	Printing on wide size paper (you can check the composition at a 16:9 aspect ratio. Areas that will not be recorded appear on the LCD monitor as a black border.)
--	-----------------------	--

\* Paper sizes vary according to region.

## Approximate Values for Compression Settings

Compression		Purpose
 <b>Superfine</b>	High Quality	Shoot higher quality images
 <b>Fine</b>		Shoot normal quality images
 <b>Normal</b>	Normal	Shoot more images



- See *Image Data Sizes (Estimated)* (p. 142).
- See *Memory Cards and Estimated Capacities* (p. 140).





# Using the Digital Zoom/Digital Tele-Converter



You can shoot zoomed images using the combined digital and optical zooms. The focal lengths (35mm film equivalent) and characteristics are as follows.

Option	Focal Length	Characteristics
<b>Standard</b>	35 – 420 mm	You can shoot at a maximum zoom factor of approximately 12x using a combination of the optical and digital zoom features.
<b>Off</b>	35 – 105 mm	Shoots without using the digital zoom.
<b>1.5x</b>	52.5 – 157.5 mm	The digital zoom locks at the selected factor and the focal length shifts to the telephoto setting.
<b>1.9x</b>	66.5 – 199.5 mm	Compared with the [Standard] and [Off] options at a similar angle of view, this option uses a higher shutter speed to reduce the potential for camera shake.



- The digital zoom cannot be used in the  or  (Postcard mode) or the  (Widescreen) mode.
- [1.5x] or [1.9x] cannot be set in  mode.

1

 **(Rec.) Menu** ► **[Digital Zoom]** ► **[Standard]\*/[Off]/[1.5x]/[1.9x]**.

See *Menus and Settings* (p. 23).

\*Default setting.

● **Standard**

See *Using the Digital Zoom* (p. 33).



● **1.5x/1.9x**


See *Using the Digital Tele-Converter* (p. 33).



## Using the Digital Zoom

### 2 Press the zoom lever toward and shoot.

- The combined optical and digital zoom factor will appear on the LCD monitor.
- Based on the number of recording pixels set, the Safety Zoom feature calculates the maximum zoom factor beyond which image quality will begin to deteriorate. The digital zoom pauses at this zoom factor for a moment, and  appears on the LCD monitor (except in  mode).



If you press the zoom lever toward  again, you can zoom in even closer. In this case, the displayed zoom factor changes from white to blue.

- Pressing the zoom lever toward  reduces the zoom factor.



## Using the Digital Tele-Converter

### 2 Adjust the angle of view with the zoom lever and shoot.

-  and the zoom factor will display on the LCD monitor.
- The image may appear coarse depending upon the selected recording pixels (the  icon and the zoom factor appear in blue).



### About the Digital Tele-Converter

A digital tele-converter is a function that reproduces the effect of a tele-converter lens (supplemental lens that extends the zoom factor of a lens) when the digital zoom is used.

# Magnified Close-Up Shooting (Digital Macro)




You can shoot a subject 3 – 10 cm (1.2 – 3.9 in.) from the end of the lens at the maximum wide angle setting. With the digital zoom, the image area is 9 x 7 mm (0.35 x 0.28 in.) at maximum zoom (approximately 4.0x).


## 1 **FUNC. Menu** \* (Auto) (Digital Macro).


See *Menus and Settings* (p. 22).

\*Default setting.

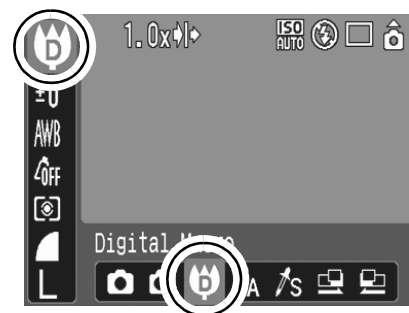

## 2 **Choose the angle of view with the zoom lever and shoot.**

- The zoom factor appears on the LCD monitor.
- Based on the number of recording pixels set, the Safety Zoom feature calculates the maximum zoom factor beyond which image quality will begin to deteriorate. The digital zoom pauses at this zoom factor for a moment, and  appears on the LCD monitor.

If you press the zoom lever toward  again, you can zoom in even closer. In this case, the displayed zoom factor changes from white to blue.

# Red-Eye Reduction Function




You can set whether or not the red-eye reduction\* lamp automatically fires with the flash.

\*This function reduces the effect of light reflecting back from the eyes and making them appear red.

## 1 (Rec.) Menu ► [Red-Eye] ► [On]\*/[Off].

See *Menus and Settings* (p. 23).

\*Default setting.

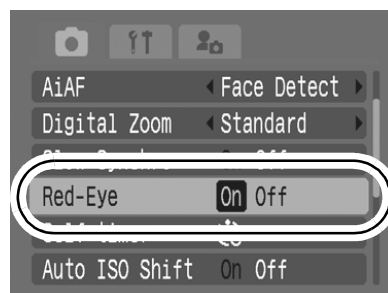

# Setting the Slow Synchro Function



You can shoot with the flash at slow shutter speeds. This is handy for shooting at night or under artificial lighting indoors.

## 1 (Rec.) Menu ► [Slow Synchro] ► [On]/[Off]\*.

See *Menus and Settings* (p. 23).

\*Default setting.



Please note that camera shake becomes a factor when [Slow Synchro] is set to [On]. If this occurs, you are recommended to fix the camera to a tripod to shoot in this mode.



In this mode, the camera shoots continuously while the shutter button is held down.

If you use the recommended memory card\*, you can shoot continuously at a set shooting interval until the memory card is full (smooth continuous shooting) (p. 140).

## \*Recommended Memory Card

Super high speed SDC-512MSH memory card (sold separately) newly formatted with low level formatting (p. 29).

- This reflects standard shooting criteria established by Canon. Actual results may vary according to the subject and shooting conditions.
- Even if continuous shooting suddenly stops, the memory card may not be full.

**1** Press the  button and use the **↑** or **↓** button to display .

**2** Shoot.

- The camera will continue to record successive images while the shutter button is fully pressed. Recording will cease when the shutter button is released.

## To Cancel Continuous Shooting

Select  in Step 1.



- The interval between shots lengthens when the built-in memory of the camera fills.
- If the flash is used, the interval between shots lengthens because the flash must charge.




You can shoot images with the optimal settings for postcards by composing them inside the print area (width-to-height ratio of approximately 3:2) shown in the LCD monitor.


## 1 FUNC. Menu ► L\* (Recording Pixels) ►

### (Postcard).

See *Menus and Settings* (p. 22).

\*Default setting.

- The recording pixels are set to **M3** (1600 x 1200) and the compression to  (Fine).
- The area that will not print displays in gray.

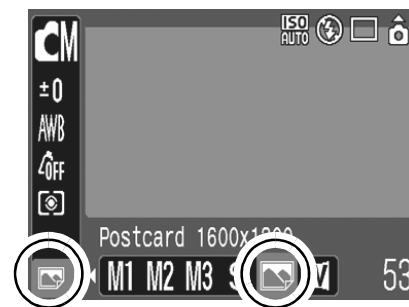

The digital zoom or the digital tele-converter cannot be used in this mode.



For printing instructions, refer to the *Direct Print User Guide*.

## Embedding the Date in the Image Data


You can embed the date in image data when  (Postcard) is selected.

### 1 (Rec.) Menu ► [Date Stamp] ► [Off]\* / [Date]/[Date & Time].


See *Menus and Settings* (p. 23).

\*Default setting.

#### ● LCD Monitor Display

 : [Off]

 : [Date]/[Date & Time]

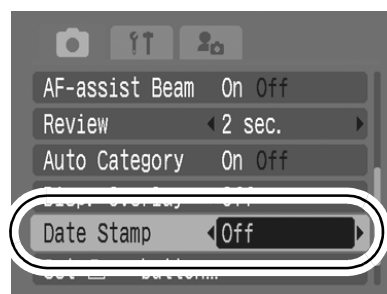

- Ensure that the camera's date/time is set beforehand (p. 27).
- The date stamp cannot be deleted from the image data once it has been embedded.

# Setting the Display Overlay



You can check a composition's horizontal and vertical alignment as well as a 3:2 aspect ratio print range on the LCD monitor by using a shooting guide while shooting.


<b>Grid Lines</b>	Displays grid lines dividing the monitor into 9 areas, allowing you to check the subject's horizontal and vertical alignment.
<b>3:2 Guide</b>	You can check what can be printed in a composition using a 3:2 aspect ratio*. The portion that will not print displays in gray.
<b>Both</b>	You can display both the grid lines and 3:2 guide at the same time.

\*Images are recorded at the same aspect ratio of 4:3 as shown in the normal viewing mode.

## 1 (Rec.) Menu ► [Disp. Overlay] ► [Off]\* / [Grid Lines]/[3:2 Guide]/[Both].

See *Menus and Settings* (p. 23).

\*Default setting.

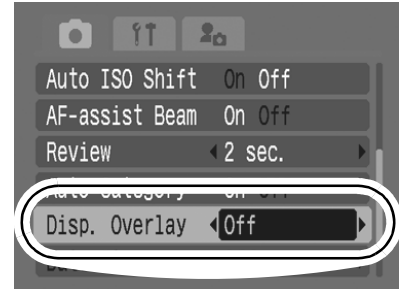

- The grid lines and 3:2 guide do not appear on recorded images.
- Only [Grid Lines] can be used when or is selected, or in mode.



# Movie Shooting



The following movie modes are available.

For information on the recording pixels and frame rate in each mode, refer to *Changing Recording Pixels and Frame Rates* (p. 42).

If the function is registered to the button, you can record a movie by simply pressing the button even if the mode switch is set to or **SCN** (p. 67).








	<b>Standard</b>
You can select the recording pixels and frame rate and record until the memory card is full (when a super high-speed memory card is used, such as the recommended SDC-512MSH). The digital zoom can be used while shooting in this mode. (p. 32)	
• Maximum Size: 4 GB*/movie	
	<b>Fast Frame Rate</b>
Use this mode to record fast moving subjects, such as in sports photography.	
• Maximum Clip Length: 1 minute	
	<b>Compact</b>
Since there are few recording pixels and also the data size is small, this mode is convenient for sending movies as e-mail attachments or when the memory card capacity is low.	
• Maximum Clip Length: 3 minutes	
	<b>Color Accent</b>
	<b>Color Swap</b>
You can have only the specified color remain and change all others into black and white, or change a specified color into a different color (pp. 60, 62). As with the Standard mode, you can also select the recording pixels and frame rate and record until the memory card is full (when a super high-speed memory card is used, such as the recommended SDC-512MSH).	
• Maximum Size: 4 GB*/movie	
	<b>Time Lapse</b>
Select a shooting interval (1 or 2 sec.) to have a single frame shot at that interval. When played back, two hours worth of recorded frames is compressed to 8 minutes (1-sec. interval) or 4 minutes (2-sec. interval). You can record events from a fixed perspective, such as the spectacle of a flower budding over time, or view changing elements in a short period. Sound cannot be recorded in this mode.	
• Maximum Clip Length: 2 hours	


- The recording time will vary according to the capacity of the memory card you use (p. 140).
- \* Recording will stop after one hour of continuous recording even if the recorded data volume has not reached 4 GB. Depending on the volume and data writing speed of the memory card, recording may stop before reaching 1 hour or before the recorded data volume has reached 4 GB.

## 1 FUNC. Menu ► \* (Standard).



See *Menus and Settings* (p. 22).

\*Default setting.

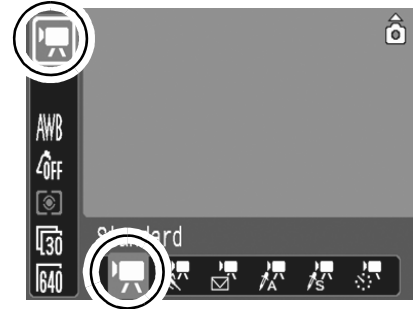- Use the ◀ or ▶ button to select a movie mode and press the **FUNC./SET** button.
- In ,  or  mode, you can change the recording pixels and frame rate (p. 42).
- See *Changing Colors* (p. 60) for the procedures for using  and .
- You can change the shooting interval (p. 43) with  selected.
- Since the period over which shooting occurs is long for the  mode, you are advised to use a fully charged battery or an AC adapter.



## 2 Shoot.

- Pressing the shutter button halfway automatically sets the exposure, focus and white balance settings.
- Pressing the shutter button fully starts recording video and sound simultaneously.
- During shooting the recording time and [●Rec] appear on the LCD monitor. The indicator will blink green in  mode.
- Pressing the shutter button fully again stops recording. Recording will stop automatically under the following circumstances.
  - When the maximum recording time elapses
  - When the built-in memory or memory card become full
- The elapsed time from the start of recording to the finish will display on the LCD monitor when playing back a  recording, but the actual playback time will be shorter than the displayed time.




- You are recommended to use a memory card that has been formatted in your camera to shoot movies (p. 29). The card supplied with the camera may be used without further formatting.
- Be careful of the following while recording.
  - Try not to touch the microphone (*Basic Guide* p. 1).
  - Do not press any buttons other than the shutter button. The sound that buttons make will be recorded in the movie.
  - The camera will automatically adjust the exposure and white balance to suit the shooting conditions during recording. Please note, however, that the sounds made by the camera automatically adjusting the exposure may also be recorded.
- The focus and optical zoom settings remain fixed for subsequent frames at the values selected for the first frame.
- Do not aim the camera toward the sun to shoot.






- Before recording, you can set the AE lock (p. 49) and exposure shift.
  1. Press the ISO button.

The exposure will lock (AE lock) and the exposure shift bar will appear in the LCD monitor.
  2. Use the ← or → button to adjust the exposure.

Press the ISO button again to release the setting. Also, the setting will be canceled if you press the **MENU** button or change the white balance, My Colors or shooting mode settings.
- In  mode, the selected power saving option (p. 26) determines if the LCD monitor turns off or not. You can turn the LCD monitor on by pressing any button other than the power button or shutter button.
- QuickTime is required to play back movies (Data type: AVI/ Compression method: Motion JPEG) on a computer (for Windows 2000 only).



# Changing Recording Pixels and Frame Rates


You can change the recording pixels and frame rate when the movie mode is set to  (Standard),  (Color Accent) or  (Color Swap).

## 1 FUNC. Menu \* (Frame Rate)/ \* (Recording Pixels).

See *Menus and Settings* (p. 22).





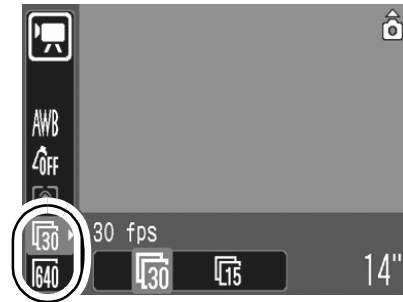









\*Default setting.

- Use the  or  button to select recording pixels/frame rate settings and press the **FUNC./SET** button.







## Recording Pixels and Frame Rates

Frame rates indicate the number of frames recorded or played back each second. The higher the frame rate, the smoother the appearance of motion.

	Recording Pixels	Frame Rate (frames/sec.)		
				
 <b>Standard</b>	 640 x 480 pixels	–	<input checked="" type="radio"/> * <sup>1</sup>	<input type="radio"/>
 <b>Color Accent</b>	 320 x 240 pixels	–	<input type="radio"/>	<input type="radio"/>
 <b>Color Swap</b>				
 <b>Fast Frame Rate</b> * <sup>2</sup>	 320 x 240 pixels	<input type="radio"/>	–	–
 <b>Compact</b> * <sup>2</sup>	 160 x 120 pixels	–	–	<input type="radio"/>
 <b>Time Lapse</b>	 640 x 480 pixels	–	–	<input type="radio"/> * <sup>3</sup>

\*1 Default setting

\*2 The recording pixels and frame rate are fixed.

\*3 Frame rate when the shooting interval is : 1 frame/sec.,  
: 0.5 frame/sec.  
Frame rate when playing back ( or ): 15 frames/sec.



- See *Image Data Sizes (Estimated)* (p. 142).
- See *Memory Cards and Estimated Capacities* (p. 140).


## Changing the Shooting Interval ( (Time Lapse))

### 1 FUNC. Menu ► **1"** \*/ **2"**.

See *Menus and Settings* (p. 22).

\*Default setting.

- Use the ◀ or ▶ button to select a shooting interval (1 sec./2 sec.) and press the **FUNC./SET** button.
- The recordable duration will display.

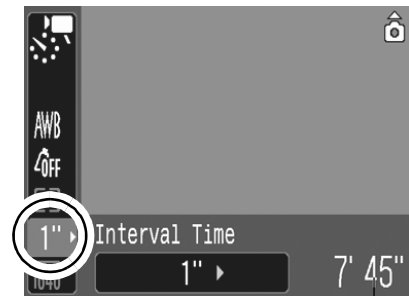

Recordable Duration

# Shooting Panoramic Images (Stitch Assist)



Stitch Assist can be used to shoot overlapping images that can later be merged (stitched) to create one panoramic image on a computer.



The overlapping seams of several adjacent images can be joined into a single panoramic image.






**1**

**FUNC. Menu**  **\*(Auto)**  /  **(Stitch Assist).**

See *Menus and Settings* (p. 22).

\*Default setting.

- You can select from the following two shooting directions.
  -  Left to right horizontally
  -  Right to left horizontally

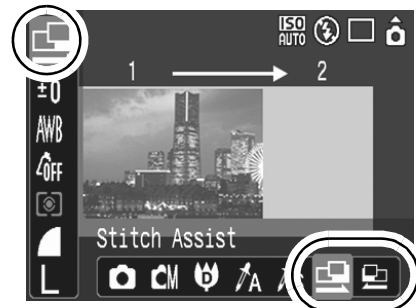

**2**

**Shoot the first image in the sequence.**

- The exposure and white balance are set and locked with the first image.



### **3 Compose the second image so that it overlaps a portion of the first and shoot.**

- You can retake a shot by pressing the ◀ or ▶ button and returning to the previously recorded image screen.
- Minor discrepancies in the overlapping portions can be corrected when the images are stitched together.

### **4 Repeat the procedure for additional images.**

- Press the **FUNC./SET** button after the last shot.
- A sequence may contain up to 26 images.



- You cannot display the images on a TV when shooting in Stitch Assist mode.
- The settings for the first image are applied to the second image onward.

 



Use PhotoStitch, a supplied software program, to merge the images on a computer.

# Switching between Focusing Modes




The autofocus frame (AF frame) indicates the area used to set the focus. Select from among the following three focusing methods.


	<p><b>Face Detect</b></p>	<p>You can have the camera automatically detect the position of a face and use this data to set the focus and exposure* while shooting. In addition, the camera will meter the subject so that the face is correctly illuminated when the flash fires. If a face is not detected, shooting will take place with [On].</p> <p>*Only in evaluative metering mode (p. 51).</p>
<p>(No frame)</p>	<p><b>On</b></p>	<p>The camera detects the subject and highlights the AF frames, from 9 available points, that it will use to determine the focus.</p>
	<p><b>Off</b></p>	<p>The camera focuses using the center AF frame. This is convenient for focusing on a specific part of a subject with greater certainty.</p>

**1**  **(Rec.) Menu ▶ [AiAF] ▶ [Face Detect]\*/[On]/[Off].**

See *Menus and Settings* (p. 23).

\*Default setting.

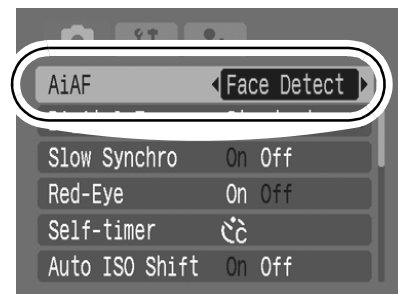

 [Face Detect] cannot be used when the LCD monitor is turned off.



- The AF frame appears as follows when the shutter button is pressed halfway.
  - Green: Shooting preparations complete
  - Yellow: Focusing difficulty (AiAF set to [Off])
  - No Display: Focusing difficulty (AiAF set to [On])



- The following occurs when [Face Detect] is selected.
  - The camera displays up to three frames where it has detected a face. At this point, the frame the camera judges to be the main subject appears in white while the others appear in gray. Pressing the shutter button halfway displays up to 9 green AF frames.
  - If no white frame displays and all the frames appear in gray, images will be shot using the [On] option rather than [Face Detect].
  - The camera may mistakenly identify non-human subjects as a face. If this occurs, switch to the [On] or [Off] option.
  - In certain cases, faces may not be detected.  
Examples:
    - Faces near the screen edges or faces that appear extremely small, large, dark or bright in relation to the overall image.
    - Faces turned to the side or at a diagonal, or faces with a portion hidden.

# Shooting Hard-to-Focus Subjects (Focus Lock, AF Lock)



It may be difficult to focus on the following types of subjects.

- Subjects with extremely low contrast to the surroundings
- Scenes with a mixture of near and far subjects.
- Subjects with extremely bright objects at the center of the composition
- Subjects that are moving quickly
- Subjects through glass: Try to shoot as close to the glass as possible to reduce the chances of light reflecting back off the glass.



## Shooting with the Focus Lock

The focus lock can be used in any shooting mode.

- 1 Aim the camera so that an object at the same focal distance as the main subject is centered in the AF frame.**
- 2 Press the shutter button halfway to set the focus.**
- 3 Keep the button pressed, re-aim the camera to compose the shot as desired and press the shutter button fully.**

## Shooting with the AF Lock


The AF lock can be used in the , , , ,  or  mode.

- 1 Aim the camera so that an object at the same focal distance as the main subject is centered in the AF frame.**
- 2 Press the shutter button halfway and press the  button.**
  - The  icon will display.
- 3 Re-aim the camera to compose the shot as desired and shoot.**

## To Release the AF Lock

Press the  button.




- When shooting with the focus lock or AF lock using the LCD monitor, setting [AiAF] to [Off] (p. 46) makes shooting easier since the camera focuses using the center AF frame only.
- The AF lock is convenient because you can let go of the shutter button to compose the image. Moreover, the AF lock is still effective after the picture is taken, allowing you to capture a second image with the same focus.
- In  mode the AF frame does not display.

## Locking the Exposure Setting (AE Lock)



You can set the exposure and focus separately. This is effective when the contrast is too strong between the subject and background or when a subject is backlit.



You must set the flash to .

The AE lock cannot be used when the flash is set to fire.

**1**

**Focus on the part of the subject on which you wish to lock the exposure setting.**

**2**

**Press the shutter button halfway and press the ISO button.**

- The  icon will display.


**3**

**Re-aim the camera to compose the shot as desired and press the shutter button fully.**

## To Release the AE Lock

Press the ISO button.






- In  mode, AE lock can also be set/canceled (p. 41).
- You can use the FE lock (p. 50) when using the flash.

# Locking the Flash Exposure Setting (FE Lock)



You can lock the flash exposure so that the exposure settings are correctly set regardless of the composition of your subject.

- 1 Press the  button and select  (flash on).**
- 2 Focus on the part of the subject on which you wish to lock the flash exposure setting.**
- 3 Press the shutter button halfway and press the ISO button.**
  - The flash will pre-fire and  will display.
- 4 Re-aim the camera to compose the shot as desired and press the shutter button fully.**

**To Release the FE Lock**

Press the ISO button.



# Switching between Metering Modes




## 1 FUNC. Menu \* (Evaluative).




See *Menus and Settings* (p. 22).

\*Default setting.

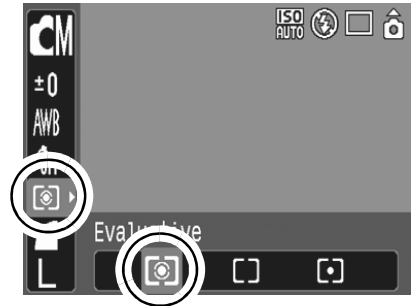- Use the  or  button to select the metering mode and press the **FUNC./SET** button.



## Metering Methods

	<b>Evaluative</b>	Appropriate for standard shooting conditions, including backlit scenes. The camera divides images into several zones for metering. It evaluates complex lighting conditions, such as the position of the subject, the brightness, the direct light, and the backlighting, and adjusts the settings to the correct exposure for the main subject.
	<b>Center Weighted Average</b>	Averages the light metered from the entire frame, but gives greater weight to the subject matter at the center.
	<b>Spot</b>	Meters the area within the spot AE point at the center of the LCD monitor. Use this setting when you want to set the exposure on the subject in the center of the monitor.



The metering method is fixed to [Evaluative] in the Long Shutter mode (p. 53).

# Adjusting the Exposure Compensation




Adjust the exposure compensation to a positive value to avoid making the subject too dark when it is backlit or shot against a bright background. Adjust the exposure compensation to a negative value to avoid making the subject too bright in night shots or when shot against a dark background.

## 1 FUNC. Menu ► \* (Exposure Compensation).

See *Menus and Settings* (p. 22).

\*Default setting.

- Use the ◀ or ▶ button to adjust the exposure compensation and press the **FUNC./SET** button.

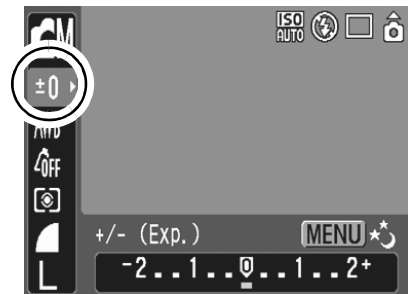

### To Cancel the Exposure Compensation

Restore the compensation value to [0].



In mode, the exposure shift can be set/canceled (p. 41).

# Setting the Shutter Speed (Long Shutter Mode)




You can set the shutter speed to a slow setting to make dark subjects appear brighter.

## 1 **FUNC. Menu** **±0\*** (**Exposure Compensation**)

See *Menus and Settings* (p. 22).

\*Default setting.

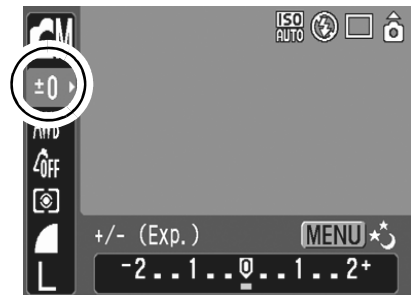


## 2 **Use the** **or** **button to select the shutter speed**

- The higher the value, the brighter the image and the lower the value, the darker the image.
- If you press the **MENU** button at this point, you will return to the Exposure Compensation setting screen.



- The setting cancels when the camera's power is turned off.
- The nature of CCD image sensors is such that noise in the recorded image increases at long shutter speeds. This camera, however, applies special processing to images shot at shutter speeds slower than 1.3 seconds to eliminate the noise, thereby producing high-quality images. A certain amount of processing time, however, may be required before the next image can be shot.



- Use the LCD monitor to confirm that the image was recorded at the desired brightness.
- Please note that camera shake becomes a factor at low shutter speeds. Shoot with the camera attached to a tripod.
- Use of the flash may result in an over-exposed image. If this occurs, shoot with the flash set to .
- The following are unavailable:
  - Exposure Compensation
  - Metering
  - AE Lock
  - FE Lock
  - ISO speed: Auto, High ISO Auto
  - Auto ISO Shift
  - Flash: Auto
  - Slow Synchro



# Adjusting the Tone (White Balance)





Normally, the **AWB** (Auto) white balance setting selects an optimal white balance. When the **AWB** setting cannot produce natural looking colors, change the white balance using a setting appropriate for the light source.

## 1 **FUNC. Menu** **AWB \* (Auto).**








See *Menus and Settings* (p. 22).

\*Default setting.



- Use the  or  button to select a white balance setting and press the **FUNC./SET** button.



## White Balance Settings

	<b>Auto</b>	Settings are automatically set by the camera
	<b>Day Light</b>	For recording outdoors on a bright day
	<b>Cloudy</b>	For recording under overcast, shady or twilight skies
	<b>Tungsten</b>	For recording under tungsten and bulb-type 3-wavelength fluorescent lighting
	<b>Fluorescent</b>	For recording under warm-white, cool-white or warm-white (3-wavelength) fluorescent lighting
	<b>Fluorescent H</b>	For recording under daylight fluorescent, or daylight fluorescent-type 3-wavelength fluorescent lighting
	<b>Custom</b>	For recording with the optimal white balance data retained in the camera from a white-colored object, such as white paper or cloth



This setting cannot be adjusted when the My Colors mode is set to  or .

## Using the Custom White Balance

You can set a custom white balance to obtain the optimal setting for the shooting conditions by having the camera evaluate an object, such as a piece of white paper or cloth, or a photo-quality gray card that you wish to establish as the standard white color.


In particular, take a custom white balance reading for the following situations that are difficult for the **AWB** (Auto) setting to detect correctly.

- Shooting close-ups
- Shooting subjects of monotone color (such as sky, sea or forest)
- Shooting with a peculiar source of light (such as a mercury-vapor lamp)

### 1 **FUNC. Menu** ► **AWB** \* (Auto) ► **☑** (Custom).

See *Menus and Settings* (p. 22).



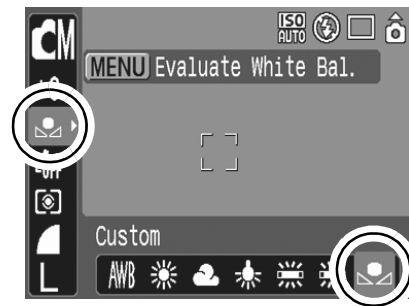


\* Default setting.



### 2 **Aim the camera at a piece of white paper or cloth and press** **(MENU)** .

- Ensure that the center frame is completely filled with the white paper or cloth. However, the center frame will not display when using the digital zoom.



- You are recommended to set the shooting mode to  and the exposure compensation setting to  $[\pm 0]$  before setting a custom white balance.  
The correct white balance may not be obtained when the exposure setting is incorrect (image appears completely black or white).
- Shoot with the same settings as when reading the white balance data. If the settings differ, the optimal white balance may not be set.  
In particular, the following should not be changed.
  - ISO Speed
  - Flash  
Setting the flash to on or off is recommended. If the flash fires when reading the white balance data with the flash set to  (Auto), make sure that you also use the flash when you shoot.
- Since the white balance data cannot be read in Stitch Assist mode, preset the white balance in another shooting mode beforehand.
- If you register the  (Custom White Balance) function with the  button (p. 67), obtain the white balance data each time you press the  button.

# Shooting in a My Colors Mode



You can change the look and feel of the pictures you take.

## My Colors Settings

	<b>My Colors Off</b>	Records normally with this setting.
	<b>Vivid</b>	Emphasizes the contrast and color saturation to record bold colors.
	<b>Neutral</b>	Tones down the contrast and color saturation to record neutral hues.
	<b>Sepia</b>	Records in sepia tones.
	<b>B/W</b>	Records in black and white.
	<b>Positive Film</b>	Use this option to make red, green or blue colors more intense like the Vivid Red, Vivid Green or Vivid Blue effects. It can produce intense natural-appearing colors like those obtained with positive film.
	<b>Lighter Skin Tone*</b>	Use this option to make skin tones lighter.
	<b>Darker Skin Tone*</b>	Use this option to make skin tones darker.
	<b>Vivid Blue</b>	Use this option to emphasize blue tints. It makes blue subjects, such as the sky or ocean, more vivid.
	<b>Vivid Green</b>	Use this option to emphasize green tints. It makes green subjects, such as mountains, new growth, flowers and lawns, more vivid.
	<b>Vivid Red</b>	Use this option to emphasize red tints. It makes red subjects, such as flowers or cars, more vivid.
	<b>Custom Color</b>	Use this option to adjust the contrast, sharpness or saturation settings or the color balance between red, green, blue and skin tones*. It can be used to make subtle adjustments, such as making blue colors more vivid or face colors brighter.

\* If the image contains colors that are the same as human skin, those colors will also be changed. You may not obtain the expected results depending on the skin color.

## 1 FUNC. Menu ► \* (My Colors Off).

See *Menus and Settings* (p. 22).

\*Default setting.


● Use the or button to select a My Colors mode.

● In

See *Setting the Camera to a Custom Color Mode* (p. 59).

● When not in

Press the **FUNC./SET** button to return to the shooting screen.

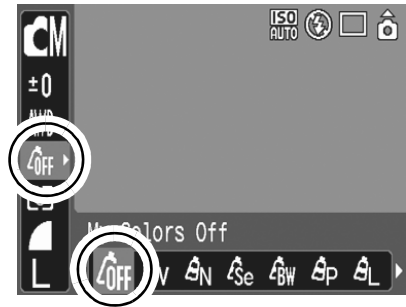

## 2 Shoot.

### Setting the Camera to a Custom Color Mode

This mode allows you to adjust the contrast, sharpness and saturation and the color balance for red, green, blue and skin tones.

#### 1 FUNC. Menu ► \* (My Colors Off) ► (Custom Color) ► .

See *Menus and Settings* (p. 22).

\*Default setting.



#### 2 Use the or button to select [Contrast], [Sharpness], [Saturation], [Red], [Green], [Blue] or [Skin Tone] and the or button to adjust the setting.

● The altered color will display.



Select a category

Adjust it

#### 3 .

● This completes the setting.

If you press the **MENU** button at this point, you will return to the screen where you can select a My Colors mode.

# Changing Colors



You can shoot images with the original colors transformed. This can be performed on movies as well as still images, allowing you to enjoy photographing with image or movie effects.

However, depending on the shooting conditions, the images may appear rough or you may not get the expected color. Before you try to photograph important subjects, we highly recommend that you shoot trial images and check the results.

If you set [Save Original] (p. 64) to [On] when shooting a still image, you can record the original image as well the transformed one.

	<b>Color Accent</b>	Use this option to have only the color specified in the LCD monitor remain and to transform all others to black and white.
	<b>Color Swap</b>	Use this option to transform a color specified in the LCD monitor into another. The specified color can only be swapped into one other color, and multiple colors cannot be chosen.



The ISO speed will rise depending on the shooting conditions, which may increase the "noise" in the image.


## Shooting in the Color Accent Mode

**1 Stills: FUNC. Menu ▶ [Camera] \* (Auto) ▶ [Color Accent].**


**Movies: FUNC. Menu ▶ [Movie] \* (Standard) ▶ [Color Accent].**

See *Menus and Settings* (p. 22).

\*Default setting.

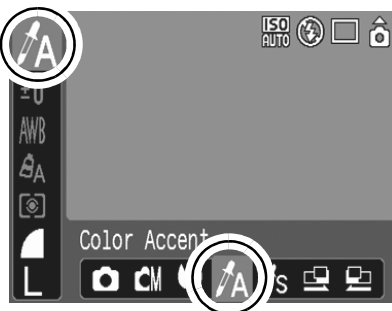

Stills

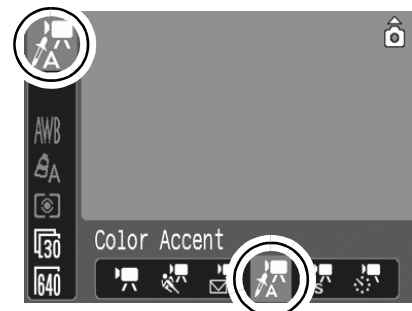

Movies

2



- The Color Accent mode will take effect.

3



- The camera will switch to color input mode and the display will alternate between the original image and the color accent image (using the previously set color).



4

**Aim the camera so that the color you wish to retain appears at the center of the LCD monitor and press the ← button.**

- Only one color can be specified.
- You can use the ▲ or ▼ button to specify the range of colors that are retained.
  - -5: Only takes the color that you want to retain
  - +5: Also takes colors close to the one that you want to retain



5

**Press  to complete the setting, then shoot.**




- The default color accent is green.
- You may not obtain the expected results if you use the flash.
- The specified color accent and color range is retained even if the camera's power is turned off.


# Shooting in the Color Swap Mode

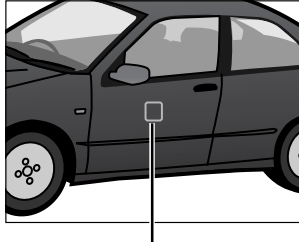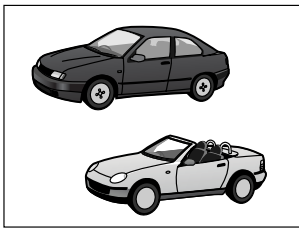

Original Color  
(Before Swapping)

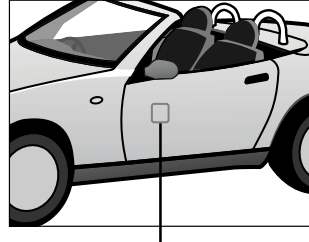

Desired Color  
(After Swapping)

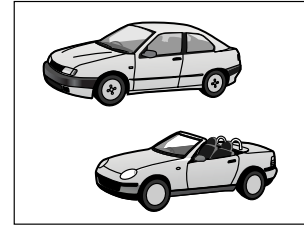


**1** **Stills: FUNC. Menu** ▶ **\*(Auto)** ▶ **(Color Swap).**


**Movies: FUNC. Menu** ▶ **\*(Standard)** ▶ **(Color Swap).**

See *Menus and Settings* (p. 22).

\*Default setting.

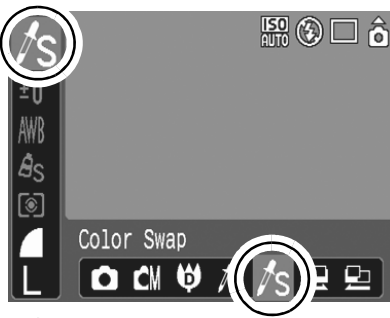

Stills

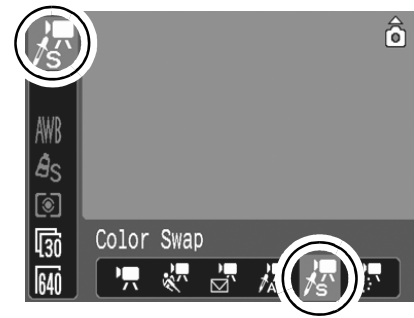


Movies

**2** .

- The Color Swap mode will take effect.

**3** .

- The camera will switch to color input mode and the display will alternate between the original image and the color swap image (using the previously set color).

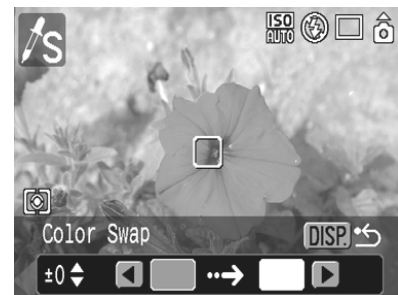



**4 Aim the camera so that the original color appears at the center of the LCD monitor and press the ← button.**

- Only one color can be specified.
- You can use the ↑ or ↓ button to specify the range of colors that are swapped.
  - -5: Only takes the color that you want to swap
  - +5: Also takes colors close to the one that you want to swap

**5 Aim the camera so that the desired color appears at the center of the LCD monitor and press the → button.**

- Only one color can be specified.

**6 Press  to complete the setting, then shoot.**



- The default setting for color swap mode changes green into white.
- You may not obtain the expected results if you use the flash.
- The colors specified in the color swap mode and the color range are retained even if the camera's power is turned off.

## Changing the Save Method for the Original Image


When shooting still images in the Color Accent or Color Swap mode, you can set whether or not to save the original image as well as the transformed one.

### 1 (Rec.) Menu ► [Save Original] ► [On]/[Off]\*.

See *Menus and Settings* (p. 23).

\*Default setting.

- If [On] is selected, the two images will be numbered consecutively with the altered image following the original.

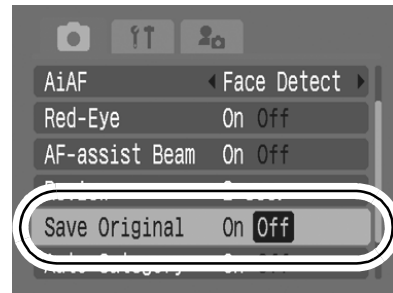

- **When [Save Original] is Set to [On]**
  - Only the transformed image displays in the LCD monitor while shooting in the Color Accent or Color Swap mode.
  - The transformed image is reviewed in the LCD monitor after shooting in the Color Accent or Color Swap mode. If you erase the image at this point, the original image is erased along with the transformed image. Exercise adequate caution before deleting a file.
  - Since two images are recorded with each shot, the number of shots remaining is approximately half the number displayed when this function is set to [Off].



Raise the ISO speed to use a fast shutter speed when you wish to reduce the effects of camera shake or avoid blurry subjects, or to turn the flash off when shooting in a dark area.

## 1 Press the ISO button and use the $\uparrow$ or $\downarrow$ button to switch settings.

- You can advance to the next option each time you press the button:  $\text{ISO AUTO}^*$  /  $\text{ISO HI}$  /  $\text{ISO 80}$  /  $\text{ISO 100}$  /  $\text{ISO 200}$  /  $\text{ISO 400}$  /  $\text{ISO 800}$  /  $\text{ISO 1600}$ .

\*Default setting.



- Selecting  $\text{ISO AUTO}$  (Auto) sets the optimal ISO speed according to the light level when shooting. Since the ISO speed setting will automatically be raised in dark places, the camera will select a faster shutter speed and reduce the chances of camera shake.
- Selecting  $\text{ISO HI}$  (High ISO Auto)\* sets the sensitivity to a higher value than the  $\text{ISO AUTO}$  setting. This sets the shutter speed faster, reducing the potential for camera shake or blurry subjects compared with the  $\text{ISO AUTO}$  setting.
  - \* Noise in the recorded image may be higher than for the  $\text{ISO AUTO}$  setting.
- When in  $\text{CAMERA}$  (Auto) shooting mode, only  $\text{ISO AUTO}$  or  $\text{ISO HI}$  can be selected.
- $\text{ISO AUTO}$  and  $\text{ISO HI}$  cannot be selected in Long Shutter mode (p. 53).













- The camera automatically applies noise reduction processing when you shoot at a high ISO speed.
- If  $\text{ISO AUTO}$  or  $\text{ISO HI}$  is selected, the ISO speed automatically selected by the camera displays when you press the shutter button halfway and in the image information during playback.




# Registering Functions to the Button



You can register a function that you often use with the  button. The following functions can be registered.


Menu Item	Page	Menu Item	Page
 Not Assigned* <sup>1</sup>	–	 Disp. Overlay	p. 38
 +/- (Exp.)	p. 52	 Rec. Movie	p. 39
 White Balance	p. 55	 Display Off	p. 26
 Custom White Balance	p. 56	 Play Sound Effect* <sup>2</sup>	p. 28
 Digital Tele-converter	p. 32		

\*1 Default setting.



\*2 Sets the sound registered to , found in the [Shutter Sound] section of the My Camera menu.


## 1 (Rec.) Menu ► [Set button].

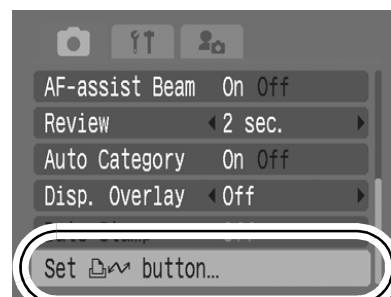See *Menus and Settings* (p. 23).



## 2 Use the , , or button to select a function to register and press .

-  icon appearing at the bottom right of an icon means that the function can be registered, but it is disabled in the current shooting mode even if you press the  button.

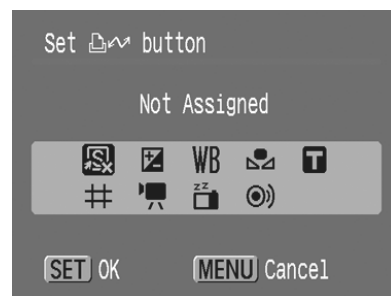












### To Cancel Registration of a Function

Select  in Step 2.

## Using the Button

### 1 Press the button.

- The setting value of the registered function switches each time the  button is pressed thereafter.
  - A configuration screen will appear for the  and **WB** functions.
  - With the  function registered, the white balance data is captured each time you press the  button. Since a guidance frame does not show in the LCD monitor in this case, please have the white target object or cloth centered in the LCD monitor before pressing the  button.
  - With the  function registered, the movie recording starts with the recording pixels and frame rate settings selected in the Standard mode when you press the  button even if the mode switch is set to  or **SCN**.
  - The  function is useful for directing your subject's attention to the camera right before taking a shot because it plays a sound when you press the  button.
- If a function that cannot be used in the currently selected shooting mode is selected, nothing will happen when you press the  button.

# Setting the Auto Rotate Function




Your camera is equipped with an Intelligent Orientation sensor that detects the orientation of an image shot with the camera held vertically and automatically rotates it to the correct orientation when viewing it in the LCD monitor.

## 1 (Set up) Menu ► [Auto Rotate] ► [On]\* / [Off].

See *Menus and Settings* (p. 23).

\*Default setting.

- When shooting and the Auto Rotate function is set to [On] and the LCD monitor is set to the detailed display mode, (normal), (right end is down) or (left end is down) will appear in the display.

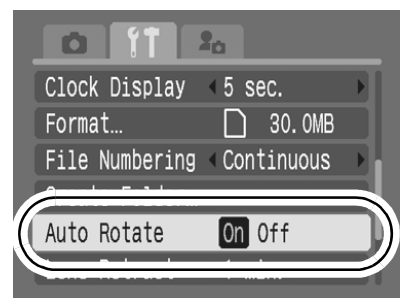

- This function may not operate correctly when the camera is pointed straight up or down. Check that the arrow is pointing in the right direction and if it is not, then set the Auto Rotate function to [Off].
- Even if the Auto Rotate function is set to [On], the orientation of images downloaded to a computer will depend upon the software used to download the images.



When the camera is held vertically to shoot, the Intelligent Orientation sensor judges the upper end to be "up" and the lower end to be "down". It then regulates the optimal white balance, exposure and focus for vertical photography. This function operates regardless of the on/off status of the Auto Rotate function.

# Checking for Focus Right After Shooting SCN



You can check whether the image is in focus right after it is recorded.

## 1 Shoot.

- The recorded image displays for about 2 seconds (or the interval set with the Review function p. 24).

## 2 Press (or ) while the image is displayed.

- The number of times the **DISP.** button is pressed depends upon the display settings for the LCD monitor (See below). Press the **DISP.** button repeatedly until the screen at the right appears.
- Displays as follows.
  - **Camera is focused:** the AF frames are displayed in the recorded image in white and the frame that is in focus has an orange frame within it.
  - **Camera is not focused:** an orange frame appears at the centre of the recorded image.
  - Contents of the orange frame can be confirmed at the bottom right, you can change the display magnification of the area within the orange frame with the zoom lever.
- You can switch between orange frames and change the display position (p. 71) using the **MENU** button or the **FUNC./SET** button.

Recorded Image




Orange frame contents

### To Cancel Checking the Focus

Press the shutter button halfway.



- You can delete an image by pressing the  button while the image is displayed, except in the display position change mode (See *Basic Guide*, p. 20).
- Pressing the **DISP.** button will change the display on the LCD monitor as follows.  
Focus Confirmation → Detailed → No Information



# Switching between AF Frames/ Changing the Display Position

1

Press .

- If you have an image with multiple AF frames in focus, you can change the display position between the orange frames each time you press the **MENU** button.



2

Press .

- The camera will switch to the display position change mode. Change the display position using the **←**, **→**, **↑** or **↓** button.
- Pressing the **MENU** button returns the orange frame to the prior position. If multiple AF frames are displayed, the position of the orange frame changes.
- Press the **FUNC./SET** button again to cancel the display position change mode.



# Creating an Image Destination (Folder)




You can create a new folder at any time and the recorded images will be automatically saved to that folder.

<b>Create New Folder</b>	Creates a new folder the next time you shoot images. To create an additional folder, insert another check mark.
<b>Auto Create</b>	You can also specify a date and time if you wish to create a new folder using a shooting time after the specified date and time.

## Creates a folder the next time you shoot.


### 1 (Set up) Menu ► [Create Folder].

See *Menus and Settings* (p. 23).

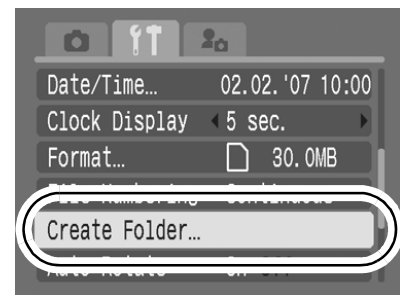

### 2 Use the ◀ or ▶ button to add a check mark beside [Create New Folder] ► .


- displays when shooting. The symbol will cease to display after the new folder is created..

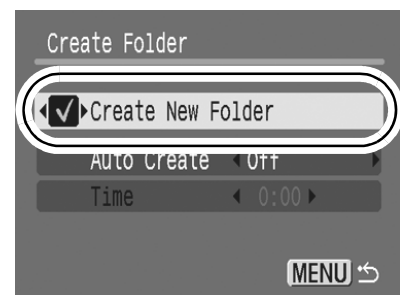


# Setting the Day or Time for Automatic Folder Creation


## 1 (Set up) Menu ► [Create Folder].

See *Menus and Settings* (p. 23).

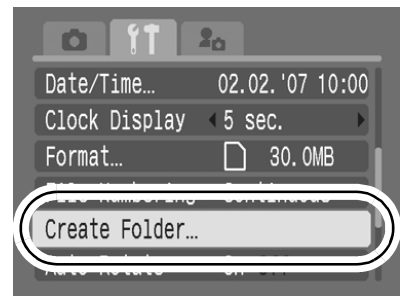

## 2 Select a day for the [Auto Create] option and a time in the [Time] option ► .

-  displays when the specified time arrives. The symbol will cease to display after the new folder is created.

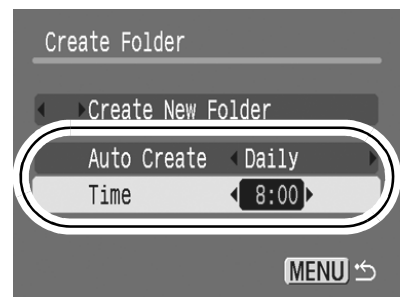

Up to 2000 images can be saved into one folder. A new folder will automatically be created when you record more than that number even if you are not creating new folders.

# Resetting the File Number




The images you shoot are automatically assigned file numbers. You can select how the file number is assigned.

1

**[] (Set up) Menu ▶ [File Numbering] ▶ [Continuous]\*/[Auto Reset].**

See *Menus and Settings* (p. 23).

\*Default setting.




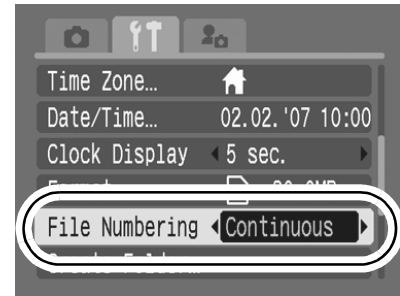


## File Number Reset Function

<b>Continuous</b>	<p>A number one higher than the last one recorded is assigned to the next image. This is convenient for managing all your images together on a computer because you avoid file name duplication when changing folders or memory cards.*</p> <p>*When a blank memory card is used. If a memory card with recorded data is used, the 7-digit number for the last recorded folder and image is compared with the last one on the card, and the larger of the two is utilized as the basis for new images.</p>
<b>Auto reset</b>	<p>The folder and image number are reset to the starting value (100-0001).* This is convenient for managing images on a folder-by-folder basis.</p> <p>*When a blank memory card is used. If a memory card with recorded data is used, the number following the 7-digit number for the last recorded folder and image on the card is utilized as the basis for new images.</p>

# File and Folder Numbers

Recorded images are assigned consecutive file numbers starting with 0001 and ranging up to 9999, while folders are assigned numbers starting with 100 and ranging up to 999. Up to 2,000 images can be saved into a single folder.

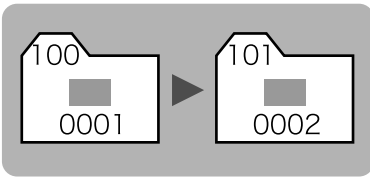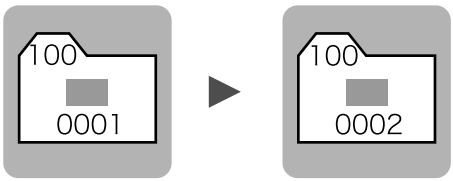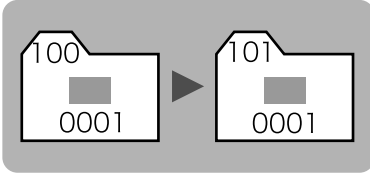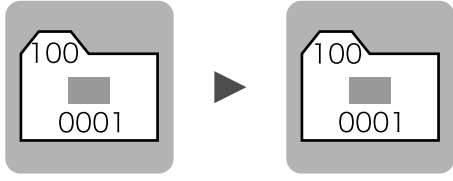	New Folder Created	Memory Card Exchanged for Another
<b>Continuous</b>	<p>Memory Card 1</p> 	<p>Memory Card 1 Memory Card 2</p> 
<b>Auto Reset</b>	<p>Memory Card 1</p> 	<p>Memory Card 1 Memory Card 2</p> 

- Images may be saved to a new folder when there is insufficient free space even if the total number of images in a folder is less than 2,000 because the following types of image are always saved together into the same folder.
  - Images from continuous shooting
  - Self-timer images (custom)
  - Stitch Assist mode images
  - Still images shot in Color Accent/Color Swap mode with the [Save Original] category set to [On]
- Images cannot be played back when the folder numbers are duplicated or image numbers are duplicated within folders.
- Please refer to the *Software Starter Guide* for information regarding folder structures or image types.


# Playback/Erasing

Use the touch control dial to select images and perform various operations. See the *Basic Guide*, p. 4.

## 🔍 Magnifying Images




### 1 Press the zoom lever toward 🔍.

- **SET**  will display and a magnified portion of the image will display.
- Images can be magnified up to a factor of approximately 10x.

 


Approximate Location of the Displayed Area

### 2 Use the ←, →, ↑ or ↓ button to move around the image.

- If you press the **FUNC./SET** button while in magnified display, the camera switches to image advance mode and **SET**  will display. You can use the ← or → button to advance to the next or previous image at the same level of magnification. Pressing the **FUNC./SET** button again cancels the image advance mode.
- You can change the magnification level with the zoom lever.

### To Cancel the Magnified Display





Press the zoom lever toward . (You can also cancel it immediately by pressing the **MENU** button.)



Movie frames and index playback images cannot be magnified.

# Viewing Images in Sets of Nine (Index Playback)

## 1 Press the zoom lever toward .

 
- Up to nine images can be viewed at once.
- Use the , ,  or  button to change the image selection.





Selected Image



Movie

## Switching between Sets of Nine Images

The jump bar will display if you press the zoom lever toward  while in index playback and you can switch the display between sets of nine images.

- Use the  or  button to move to the previous or next set of nine images.
- Hold the **FUNC./SET** button down and press the  or  button to jump to the first or last set.



Jump Bar

## To Return to Single Image Playback

Press the zoom lever toward .

 
# Organizing Images by Category (My Category)

You can organize images into prepared categories (People, Scenery, Events, Category 1-3, To Do). At the category level, you can perform the following.

- Image searches (p. 79)
- Slide Show (p. 93)
- Protect (p. 98)
- Erase (p. 102)
- Configure print settings (p. 104)

## 1 (Play) Menu .

See *Menus and Settings* (p. 23).

- In Playback mode, you can press the  button to display the screen in Step 2 directly.



## 2 Use the or button to select an image to classify and the or button to select a category and press the button.

- You can put the same image into more than one category.
- This also can be set in the index playback mode.
- You can cancel the classification by pressing the **FUNC./SET** button again.



When working with images (for example, compiling a slide show, erasing or printing), it is convenient to categorize images in the [To Do] category.



# Jumping to Images



When you have many images recorded onto a memory card, it is handy to use the six search keys below to jump over images to find the object of your search.

	<b>Shot Date</b>	Jumps to the first image of each shooting date.
	<b>My Category</b>	Jumps to the first image in each category.
	<b>Folder</b>	Jumps to the first image in each folder.
	<b>Movie</b>	Jumps to a movie.
	<b>By 10 images</b>	Jumps over 10 images at a time.
	<b>By 100 images</b>	Jumps over 100 images at a time.

## 1 In single image playback mode, press the button.

- The camera will switch to jump search mode.

## 2 Use the or button to select a search key.


- The screen sample will vary slightly according to the search key.
- You can show/hide image information using the **DISP.** button.







Image Information

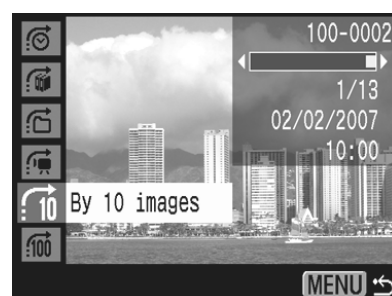


## 3 Display the Images.


- / : press the or button.
- Pressing the **MENU** button cancels the setting.




-    : use the  or  button to select date, category, folder or movie for playback and press the **FUNC./SET** button.

- The camera will switch to defined playback mode and display a blue frame. You can limit playback to the images corresponding to the search key.
- Press the  button to cancel defined playback mode.

Select the search key

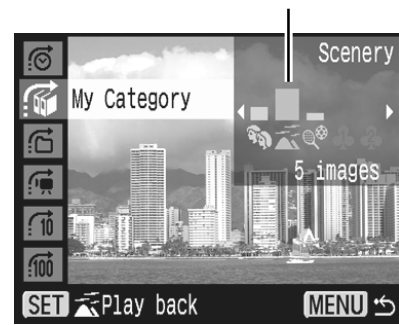

The defined playback mode will be canceled under the following circumstances.

- When classifying categories
- When newly saving images that have effects added using the My Colors function, images edited with the Red Eye Correction function, or movies that have been edited.
- When images are deleted using [Erase] from the  (Play) menu

## Viewing Movies



Movies cannot be played in the index playback mode.


1

**Display a movie and press**  .







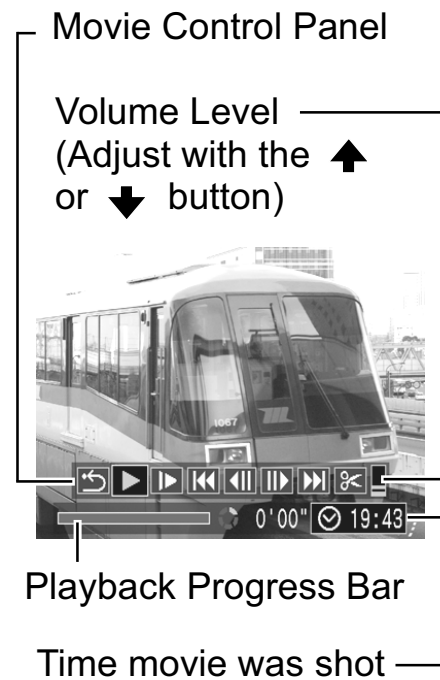




- Images with a   icon are movies.

## Select (Play) and press .

- The movie will pause if you press the **FUNC./SET** button during playback. It will resume when you press the button again.
- When playback ends, the movie stops at the last frame displayed. Press the **FUNC./SET** button to display the movie control panel.
- You can switch between showing/hiding the playback progress bar with the **DISP.** button while playing a movie.
- If playback was halted partway through in the prior viewing session, playback will resume from the last frame displayed.



## Operating the Movie Control Panel

	Ends playback and returns to single image playback
	Print (An icon will display when a printer is connected. See the <i>Direct Print User Guide</i> for details.)
	Play
	Slow Motion Playback (You can use the  button to slow down or the  button to speed up playback.)
	Displays the first frame
	Previous Frame (Rewinds if the <b>FUNC./SET</b> button is held down)
	Next Frame (Fast Forwards if the <b>FUNC./SET</b> button is held down)
	Displays the last frame
	Edit (Switches to movie editing mode) (p. 82)



- Use the television's controls to adjust the volume when playing a movie on a TV set (p. 101).
- The sound cannot be played in slow motion playback.



You can delete portions of recorded movies.



Protected movies and movies 1 second or less in duration (☒ of 15 sec.\* or 30 sec.\*\*\*) cannot be edited.

\* When the shooting interval is 1 sec.

\*\*When the shooting interval is 2 sec.

1

Select  (Edit) in the movie control panel and press .

- The movie editing panel and the movie editing bar will display.



Movie Editing Panel



Movie Editing Bar

2

Use the  or  button to select  (Cut Beginning) or  (Cut End) and the  or  button to specify the cut point(↓).

- To check a temporarily edited movie, select  (Play) and press the **FUNC./SET** button.
- Selecting  (Exit) cancels the edit and restores the movie control panel.

3

Select  (Save) and press .

4

Select **[New File]** or **[Overwrite]** and press .

- [New File] saves the edited movie under a new file name. The pre-edit data is left unchanged.

Note, if you press the **FUNC./SET** button while saving the movie, saving is canceled.

- [Overwrite] saves the edited movie with its original name. The pre-edit data is lost.
- When there is not enough space left on the memory card, only [Overwrite] can be selected.







Depending on the movie's file size, it may take some time to save an edited movie. If the battery runs out of charge partway through, edited movie clips cannot be saved. When editing movies, it is recommended to use a fully charged battery or the separately sold AC Adapter Kit ACK-DC10 (p. 131).

## Rotating Images in the Display


Images can be rotated clockwise 90° or 270° in the display.

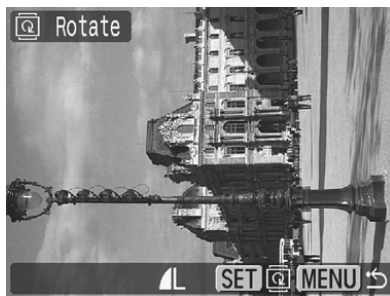

Original

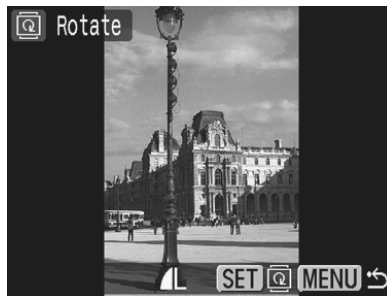


90°

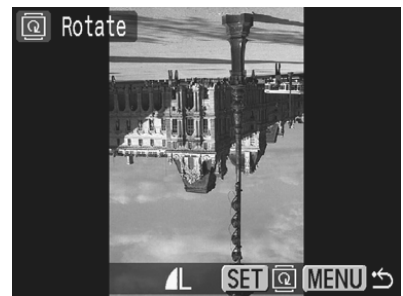

270°

### 1 (Play) Menu .

See *Menus and Settings* (p. 23).

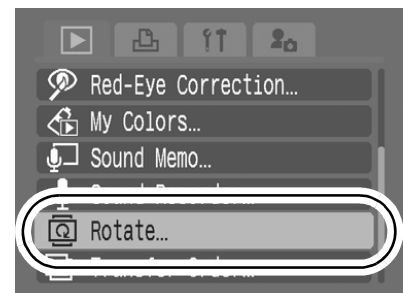

### 2 Use the **←** or **→** button to select an image to rotate and press to rotate it.






- Cycle through the 90°/270°/original orientations with each press of the **FUNC./SET** button.
- This also can be set in the index playback mode.



When images are downloaded to a computer, the orientation of images rotated by the camera will depend upon the software used to download the images.

# Playback with Transition Effects

You can select the transition effect displayed when switching between images.

	No transition effect.
	The displayed image darkens and the next image gradually brightens until it is displayed.
	Press the  button to have the previous image display from the left and the  button to have the next image display from the right.

1

 **(Play) Menu**    /  \* /  .

See *Menus and Settings* (p. 23).

\*Default setting.



# Red-Eye Correction Function



You can correct red eyes in recorded images. However, red eyes may not be automatically detected in some images or the results may not turn out as you intended.

## Examples:

- Faces near the screen edges or faces that appear extremely small, large, dark or bright in relation to the overall image.
- Faces turned to the side or at a diagonal, or faces with a portion hidden.

### 1 (Play) Menu

See Menus and Settings (p. 23).



### 2 Use the or button to select an image to correct and press

- A frame will display automatically at the position of the red eyes. If red eyes are not automatically detected, use the or button to select [Add Frame] and press the **FUNC./SET** button (p. 87).



### 3 Select [Start] and press




## 4 Select [New File] or [Overwrite] and press .

- **[New File]**: saves the image under a new file name. The original file remains as is. The newly saved image file is saved as the last image of the photographed images.
- **[Overwrite]**: saves the new image under the original file name. The original image is overwritten.
- If you selected the [New File] image, proceed to Step 5.




## 5 Press and select [Yes] or [No], then press .

- Selecting [Yes] displays the corrected image, while [No] returns you to the Play menu.

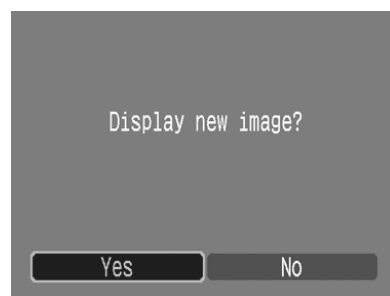

- Red-eye correction cannot be performed on movies.
- Overwriting cannot be performed on protected images.




- When there is not enough space left on the memory card, red-eye correction cannot be performed.
- Although you can apply red eye correction any number of times to an image, the image quality will gradually deteriorate with each application.
- Since the correction frame will not appear automatically on images that have already been corrected once with the  (Red-Eye Correction) function, use the [Add Frame] option to correct them.




# Adding Correction Frames


You can add up to a maximum of 35 correction frames.

**1** Use the **←** or **→** button to select **[Add Frame]** and press .

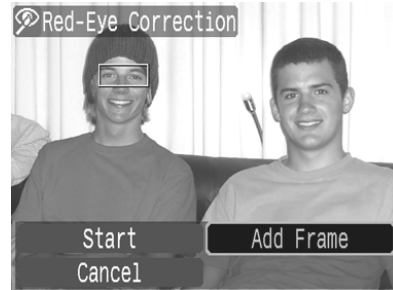





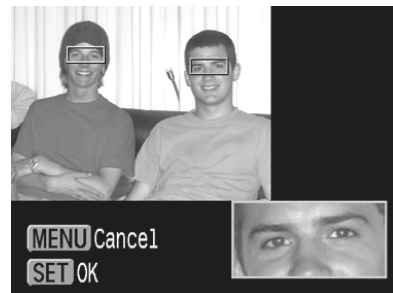





**2** Use the **↑**, **↓**, **←** or **→** button to adjust the frame position and press .

- You can change the size of the frame with the zoom lever.



# Adding Effects with the My Colors Function

You can add effects to recorded images (stills only) using the My Colors function. The following selection of My Colors effects is available. For details, see p. 58.

 Vivid	 Lighter Skin Tone
 Neutral	 Darker Skin Tone
 Sepia	 Vivid Blue
 B/W	 Vivid Green
 Positive Film	 Vivid Red

## 1 (Play) Menu .


See Menus and Settings (p. 23).



## 2 Use the or button to select an image and press



## 3 Use the or button to select the My Colors type and press .

- The displayed image will reflect the My Colors effect.
- You can press the zoom lever toward  to check the image at a higher magnification. While the image is zoomed, you can press the **FUNC./SET** button to switch between the image transformed with the My Colors effect and the original non-transformed image.



**4****Select [OK] and press .**

- The newly saved image transformed with the My Colors effect will be the last one in the list.
- To continue adding effects to other images, repeat the procedures from Step 2 onward.

**5****Press  and select [Yes] or [No], then press**

- Selecting [Yes] displays the image transformed with the My Colors effect, while [No] returns you to the Play menu.




- When there is not enough space left on the memory card, the My Colors effects cannot be added.
- Although My Colors effects can be added any number of times to an image, the image quality will gradually deteriorate with each application and the intended colors may not be achieved.
- Color in images taken using My Colors (p. 58) in shooting mode and images edited with the My Colors function in playback mode may differ slightly.

# Attaching Sound Memos to Images

In playback mode (including single image playback and index playback), you can attach sound memos (up to one minute) to an image. The sound data is saved in the WAVE format.

## 1 (Play) Menu .

See *Menus and Settings* (p. 23).

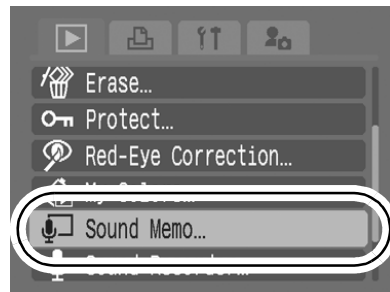



## 2 Use the or button to select an image to attach a sound memo to and press .

- The sound memo panel will display.





## 3 Select (Record) and press .

- The elapsed time and the remaining time display.
- Pressing the **FUNC./SET** button pauses the recording. Pressing it again resumes recording.
- Up to one minute of recordings can be added to any one image.



Sound Memo Panel  
 Elapsed Time/  
 Remaining Time  
 Volume \_\_\_\_\_  
 (Adjust with the  or  button)

## Sound Memo Panel

	Exit
	Record
	Pause
	Play

Erase



Select [Erase] in the confirmation screen and press the **FUNC./SET** button.



- You cannot attach sound memos to movies.
- Sound memos for protected images cannot be erased.

## Sound-Only Recording (Sound Recorder)

You can record a continuous sound memo for up to approximately 2 hours without taking a picture.

1

**(Play) Menu** .

See *Menus and Settings* (p. 23).




2

Select **(Record)** and press .

- The elapsed recording time displays.
- You can use the or button to change the sampling rate. The recording quality rises progressively as you select [11.025 kHz], [22.050 kHz] or [44.100 kHz]\*, but the recorded file sizes increase correspondingly.

\*Default setting.



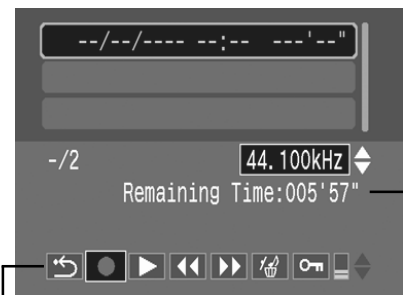






- Press the **FUNC./SET** button to stop the recording session. Pressing the button again starts a new recording session.



Sound Recorder Panel  
Remaining Time

## Sound Recorder Panel

Use the **←** or **→** button to select an option and press **FUNC./SET**.

	Exit
	Record
	Stop
	Play (Use the <b>↑</b> or <b>↓</b> button to select a sound memo and then press the <b>FUNC./SET</b> button.)
	Rewind (Holding down the <b>FUNC./SET</b> button fast rewinds. The sound memo cannot be heard while rewinding.)
	Fast Forward (Holding down the <b>FUNC./SET</b> button fast forwards. The sound memo cannot be heard while fast forwarding.)
	Erase Select [Erase] or [Erase all] in the confirmation screen and press the <b>FUNC./SET</b> button.
	Protect (Protects the sound memo so that it cannot be mistakenly erased. Use the <b>FUNC./SET</b> button to set/cancel protection.)
	Volume (You can use the <b>↑</b> or <b>↓</b> button to adjust the volume.)










- Sound Recorder Data Rates and Recording Durations (Estimated).
- Recording will automatically stop when the memory card is full.

# Automated Playback (Slide Shows)

Automated playback of memory card images.

Image settings for slide shows are based on the Digital Print Order Format (DPOF) standard.

	<b>All Images</b>	Plays all images on a memory card in order.
	<b>Date</b>	Plays images bearing a specified date in order.
	<b>My Category</b>	Plays the images in the selected category in order.
	<b>Folder</b>	Plays images in a specified folder in order.
	<b>Movies</b>	Plays movie files only, in order.
	<b>Stills</b>	Plays still images only, in order.
	<b>Custom 1-3</b>	Plays the images selected for each slide show, Custom 1, Custom 2 or Custom 3, in order (p. 96).

1



 






 **(Play) Menu**  .

See *Menus and Settings* (p. 23).



2

**Select** , , , , ,  **or**   .

- , , : select a date, category or folder to be played back (p. 95).
- , , : select the images to be played back (p. 96).
- If you want to add a transition effect to play back images, use the  button to select [Effect] and choose the type of effect with the  or  button (See the next page).



### 3





## Select [Start] and press .

- The following functions are available during slide shows.
  - Pausing/resuming the slide show: press the **FUNC./SET** button
  - Fast forwarding/rewinding the slide show: press the **←** or **→** button (continue to hold the button to switch between images more rapidly)
  - Stopping the slide show: press the **MENU** button.




## Transition Effects

You can select the transition effect used when one image is replaced by another.

	No transition effect.
	The new image gradually brightens as it moves upward from the bottom.
	The new image first appears in a cross shape and gradually expands to display the full image.
	Portions of the new image move horizontally, then the image expands to display the full image.



In single image playback mode, you can start a slide show from the current image displayed by holding the **FUNC./SET** button while you press the  button. Please note that if you do this while the last image shot is displayed, the slide show will start from the first image using the same date.





## Select a date/category/folder to play back

(//)

**1** Select ,  or  and press .

**2** Use the  or  button to select a date/category/folder to play back and press the  button.

- To cancel the selection: press the **FUNC./SET** button again.
- Multiple selections can be made for the date/category/folder.
- To check the images for each date/category/folder: use the  or  button.
- To cancel the setting: press the **MENU** button.



## Selecting Images for Playback (★1–★3)

Select only the images that you wish to play back and save them as a slide show (Custom 1, 2 or 3). Up to 998 images can be selected. They will be played back in their order of selection.

### 1 Select ★1, ★2 or ★3 and press .

- Only the ★1 icon will display at first. When you set ★1, the icon will change to ★1✓ and ★2 will display. ★2 and ★3 will change in the same way when they are set.

### 2 Use the ← or → button to move between images for playback and press to select or deselect them.

- You can also select images in the index playback mode.
- Pressing the **MENU** button completes the setting.

Check mark indicating selection

Number indicating the selection order



#### Selecting All Images

- 1 After selecting ★1–★3 in step 1, use the ↑ button to select [Mark all] and press the **FUNC./SET** button.
- 2 Use the ↑ button to select [Mark all], press the **FUNC./SET** button.
- 3 Use the → button to select [OK] and press the **FUNC./SET** button.

To deselect all images, select [Reset].

## Adjusting the Play Time and Repeat Settings

### ● Play Time

Sets the duration that each image displays. Choose between 3\*–10 seconds, 15 seconds and 30 seconds. Displaying time can vary slightly depending on the image.

\* Default setting.

### ● Repeat

Sets whether the slide show stops when all the slides have been displayed or continues until stopped.

**1** Select **[Set up]** and press .

**2** Select **[Play Time]** or **[Repeat]** and then the desired option.

● Pressing the **MENU** button cancels the setting.



# Protecting Images



You can protect important images and movies from accidental erasure.

<b>Select</b>	You can configure the protection settings for each image singly while viewing them.
<b>Select by Date</b>	You can protect the images from a specified date.
<b>Select by Category</b>	You can protect the images in a specified category.
<b>Select by Folder</b>	You can protect the images in a specified folder.
<b>All Images</b>	You can protect all the images on a memory card.


## 1 (Play) Menu .

See *Menus and Settings* (p. 23).





## 2 **Select a menu item and press** .

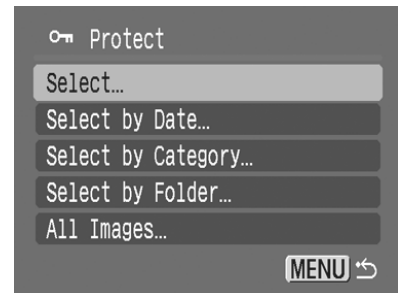- Proceed to Step 5 if you select [All Images].



### 3 Select the image, date, category or folder to protect and press .

#### ●[Select]



Use the  or  button to select an image and press the **FUNC./SET** button.



- Pressing the **FUNC./SET** button again cancels the setting.
- You can also protect images in the index playback mode.
- Press the **MENU** button to complete the setting.



Protection Icon

#### ●[Select by Date] [Select by Category] [Select by Folder]

Use the  or  button to select a date, category or folder and press the **FUNC./SET** button.

- Pressing the **FUNC./SET** button again cancels the setting.
- You can select multiple dates, categories or folders.
- Use the  or  button to confirm each date, category or folder image.




### 4 For the [Select by Date], [Select by Category] and [Select by Folder] options, press .




### 5 Select [Protect] and press .

- Selecting [Unlock] cancels protection of the selected image and returns to Step 2.
- Selecting [Stop] cancels selection of the protected image and returns to Step 2.



# Registering Functions to the Playback Button

You can register a function that you often use to the  button. The following functions can be registered.

Function	Reference Page
 <b>Standard*</b>	<i>Basic</i> p. 10
 <b>Slide Show</b>	p. 93
 <b>Sound Recorder</b>	p. 91

\*Default setting (It can be used to switch between power off/playback mode/shooting mode)

## 1 (Play) Menu (Set Play button).

See *Menus and Settings* (p. 23).



## 2 Use the or button to select a function you wish to register and press .




To cancel: select  in Step 2.

## Using the Button

See the *Basic Guide*, p. 10.

## 1 In playback mode, press the button.

- This will call up the registered function.
- When you press the  button in shooting mode, it switches the camera to playback mode. Then when it is pressed a second time, the registered function is called up.

# Viewing Images on a TV set




You can play back images on a television with the supplied AV cable.


## 1 Turn off the Camera and the TV.

## 2 Connect the AV cable to the camera's A/V OUT terminal.

- Use the toggle on the wrist strap or slip a fingernail under the edge of the camera's DIGITAL terminal cover, lift up and plug the interface cable in all the way.

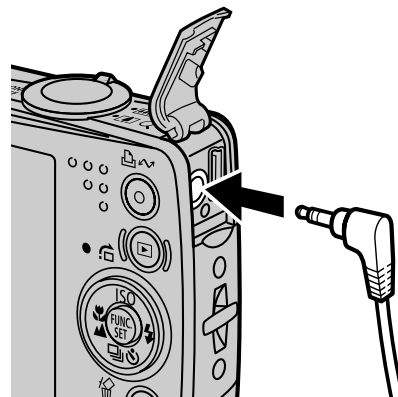

## 3 Plug the other ends of the AV cable to the VIDEO IN and AUDIO IN jacks on the TV.

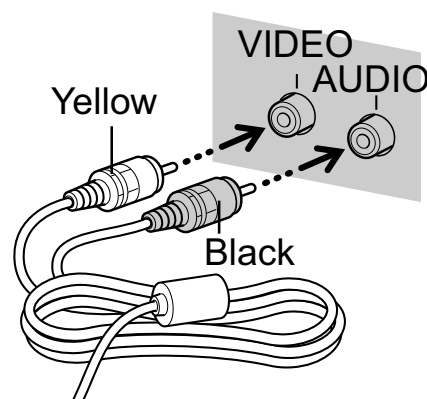

## 4 Turn on the TV and switch it to video mode.

## 5 Turn on the camera.



- The video output signal can be switched (NTSC or PAL) to accommodate different regional standards (p. 27). The default setting varies between regions.
  - NTSC: Japan, U.S.A., Canada, Taiwan and others
  - PAL: Europe, Asia (excluding Taiwan), Oceania and othersIf the video system is set incorrectly, the camera output may not display properly.
- You can also use the TV as the display in the shooting mode.

# Erasing Images



You can erase images from a memory card.

<b>Select</b>	Erase images after selecting them one at a time.
<b>Select by Date</b>	Erases images corresponding to the selected date.
<b>Select by Category</b>	Erases images in the selected category.
<b>Select by Folder</b>	Erases images in the selected folder.
<b>All Images</b>	Erases all images on a memory card.



- Note that erased images cannot be recovered. Exercise adequate caution before erasing an image.
- Protected images cannot be erased with this function.

1

**(Play) Menu**


See *Menus and Settings* (p. 23).



2

**Select a menu item and press**

- Proceed to Step 5 if you select [All Images].

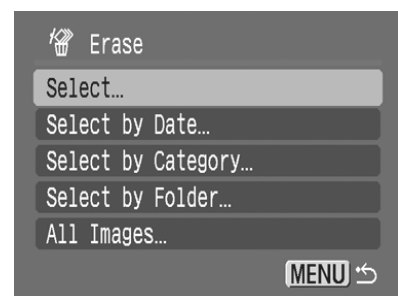





### 3 Select the image, date, category or folder



and press .



#### ●[Select]

Use the  or  button to select an image and press the **FUNC./SET** button.

- Pressing the **FUNC./SET** button again cancels the setting.
- You can also erase images in the index playback mode.

#### ●[Select by Date] [Select by Category] [Select by Folder]

Use the  or  button to select a date, category or folder and press the **FUNC./SET** button.

- Pressing the **FUNC./SET** button again cancels the setting.
- You can select multiple dates, categories or folders.
- Use the  or  button to confirm each date, category or folder image.




### 4 Press .

### 5 Select [OK] and press .

●Selecting [Stop] or [Cancel] cancels selection of the image you are about to erase and returns to Step 2.

●Pressing the **FUNC./SET** button while erasing is in progress cancels the procedure.

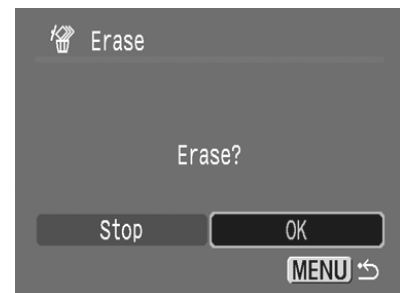

Please format the memory card when you want to erase not only image data but also all the data contained on the card (p. 29).

# Print Settings/Transfer Settings

Use the touch control dial to select images and perform various operations. See the *Basic Guide*, p. 4.

## Setting the DPOF Print Settings

You can select images on a memory card for printing and specify the number of print copies in advance using the camera. The settings used on the camera comply with the Digital Print Order Format (DPOF) standards. This is extremely convenient for printing on a direct print compatible printer, or for sending the images to a photo developing service that supports DPOF.




The  icon may display for a memory card with print settings set by a different DPOF-compliant camera. These settings will be overwritten by those set by your camera.

<b>Select Images &amp; Qty.</b>	Configures print settings for single images as you view them.
<b>Select by Date</b>	Configures print settings for images corresponding to the selected date.
<b>Select by Category</b>	Configures print settings for images in the selected category.
<b>Select by Folder</b>	Configures print settings for images in the selected folder.
<b>Select All Images</b>	Configures print settings for all images.
<b>Clear All Selections</b>	Removes all print settings from images.




Only one copy will be printed for each selected image. With the [Select Images & Qty.] option, you can only set the number of copies to print when the [Print Type] option is set to [Standard] or [Both].

**1**

**Press the  (playback) button  (Print) Menu .**

See *Menus and Settings* (p. 23).

- Proceed to Step 4 if you select [Select All Images].

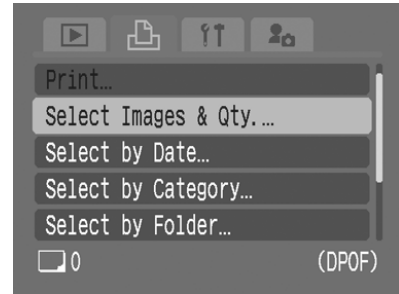



**2**

**Select the image, date, category or folder to print and press .**

● **[Select Images & Qty.]**


Selection methods differ for the Print Type settings (p. 107).



-  (Standard)/ (Both)

Use the  or  button to select an image, press the **FUNC./SET** button and use the  or  button to select the number of print copies (up to 99).

Number of Print Copies



-  (Index)

Use the  or  button to select an image and press the **FUNC./SET** button to select or deselect it.

Index Print Selection



- You can also select images in the index playback mode.
- Press the **MENU** button to complete the setting.

- **[Select by Date] [Select by Category] [Select by Folder]**  
Use the **▲** or **▼** button to select a date, category or folder and press the **FUNC./SET** button.




- Pressing the **FUNC./SET** button again cancels the setting.
- You can select multiple dates, categories or folders.
- Use the **◀** or **▶** button to confirm each date, category or folder image.

### 3 For the **[Select by Date]**, **[Select by Category]** and **[Select by Folder]** options, press





### 4 Select **[OK]** and press .

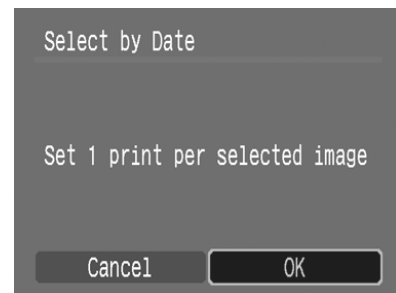- Selecting **[Cancel]** cancels print settings of the selected image and returns you to Step 1.



- The output of some printers or photo developing services may not reflect the specified print settings.
- Print settings cannot be set for movies.



- Images are printed in order according to the file number.
- A maximum of 998 images can be selected.
- If you are connected to a printer, the  button will light blue while you are selecting images. You can start printing at this point by pressing the  button, confirming that **[Print]** is selected and pressing the **FUNC./SET** button.

# Setting the Print Style


After setting the print style, select the image(s) to print. The following print settings can be selected.

\*Default setting

Print Type	<input checked="" type="checkbox"/> <b>Standard*</b>	Prints one image per page.
	<input type="checkbox"/> <b>Index</b>	Prints the selected images together at a reduced size in an index format.
	<input type="checkbox"/> <b>Both</b>	Prints the images in both the standard and index formats.
<input checked="" type="checkbox"/> <b>Date (On/Off*)</b>		Adds the date to the print.
<input type="checkbox"/> <b>File No. (On/Off*)</b>		Adds the file number to the print.
<b>Clear DPOF data (On*/Off)</b>		Clears all print settings after the images print.

## 1 Press the (playback) button (Print) Menu [Print Settings].


See *Menus and Settings* (p. 23).

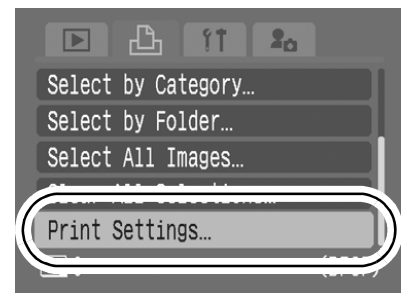

## 2 Select [Print Type], [Date], [File No.] or [Clear DPOF data] and then specify the settings.



- The Date and File No. settings change according to the Print Type as follows.
  - Index  
[Date] and [File No.] cannot be set to [On] at the same time.
  - Standard or Both  
[Date] and [File No.] can be set to [On] at the same time, however, the printable information may vary between printers.

- Images with date imprints created by  (Postcard Date Imprint Mode) (p. 37) will have the date imprinted regardless of the [Date] setting. Accordingly, the date may be printed twice if [Date] is set to [On].
- Dates print in the style specified in the [Date/Time] menu (p. 27).

## Setting the DPOF Transfer Settings

You can use the camera to specify settings for images before downloading to a computer. Refer to the *Software Starter Guide* for instructions on how to transfer images to your computer.

The settings used on the camera comply with the Digital Print Order Format (DPOF) standards.

**The  icon may display for a memory card with transfer settings set by a different DPOF-compliant camera. These settings will be overwritten by those set by your camera.**

### Single Images


#### 1 (Play) Menu .

See *Menus and Settings* (p. 23).



#### 2 Select [Order] and press .

- Selecting [Reset] cancels all transfer order settings.

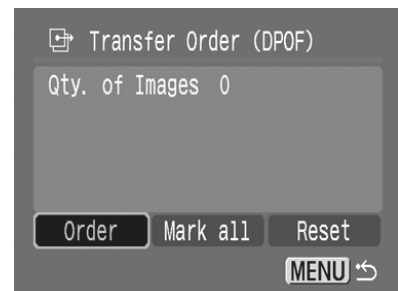

### 3 Use the **←** or **→** button to select an image to transfer and press .

- Pressing the **FUNC./SET** button again deselects the setting.
- You can also select images in the index playback mode.


Transfer Selection



## All the Images on a Memory Card


### 1 (Play) Menu .

See *Menus and Settings* (p. 23).

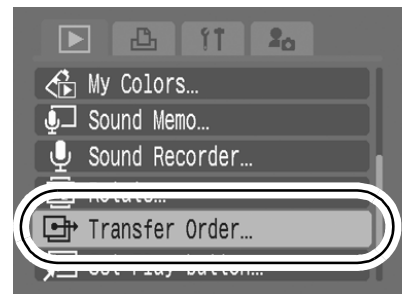

### 2 Select **[Mark all]** and press .

- Selecting **[Reset]** cancels all transfer order settings.

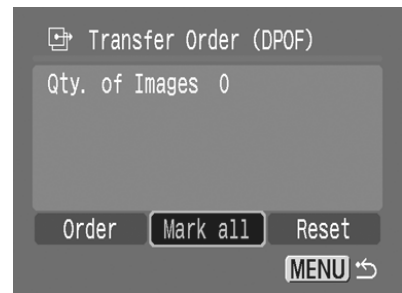

### 3 Select **[OK]** and press .



- Images are transferred in order according to the file number.
- A maximum of 998 images can be selected.

# Customizing the Camera (My Camera Settings)


Use the touch control dial to select images and perform various operations. See the *Basic Guide*, p. 4.

My Camera allows you to customize the start-up image and start-up, operation, self-timer and shutter sounds. You can change and register these settings, enabling you to customize the camera to suit your own tastes.

## Changing My Camera Settings

### 1 (My Camera) Menu ► Menu item.

See *Menus and Settings* (p. 23).

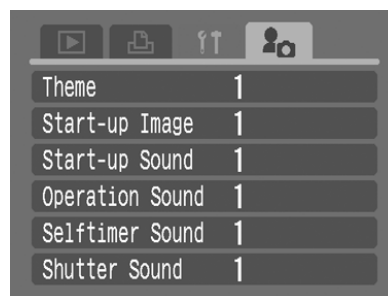



### 2 Select the contents you wish to set.

- Select [Theme] to set all to the same settings.





# Registering My Camera Settings

Images recorded onto the memory card and newly recorded sounds can be added as My Camera settings to the  and  menu items. You can also use the supplied software to upload your computer's images and sounds to the camera.



A computer is required to restore the My Camera settings to the defaults. Use the supplied software (ZoomBrowser EX/ImageBrowser) to restore the default settings to the camera.

## 1 Press the (playback) button (My Camera) Menu Menu item to register.

See *Menus and Settings* (p. 23).



## 2 Select or and press .





### 3 Select an image or record a sound.

#### ● Start-up Image



Use the ◀ or ▶ button to select the image you wish to register and press the **FUNC./SET** button.



#### ● Start-up, Operation, Self-timer and Shutter Sounds

Select  (Record) and press the **FUNC./SET** button. After recording, select  (Register) and press the **FUNC./SET** button.



- Recording will automatically stop when the recording time elapses.
- To play it, select  (Play).
- To exit instead of registering, press  (Exit).

### 4 Select [OK] and press .

- To cancel registering, select [Cancel].



- The following cannot be registered as My Camera settings.
  - Movies
  - Sounds recorded with the sound memo function (p. 90)
  - Sounds recorded with the Sound Recorder (p. 91)
- The prior setting is erased when a new My Camera setting is added.



See the supplied *Software Starter Guide* for more information on creating and adding to the My Camera data.

# Troubleshooting

## Camera

### Camera will not operate.

Power is not turned on.	● Press the power button ( <i>Basic Guide</i> p. 11).
Memory card slot/battery cover is open.	● Confirm that the memory card slot/battery cover is securely closed ( <i>Basic Guide</i> p. 7).
Battery charge insufficient to operate camera ("Change the battery pack" message displays).	● Insert a fully charged battery into the camera ( <i>Basic Guide</i> p. 7). ● Use the AC Adapter Kit ACK-DC10 (sold separately) (p. 131).
Poor contact between camera and battery terminals.	● Polish the terminals with a soft cotton swab before charging or using the battery (p. 127).

### Sounds come from the camera interior.

The camera's horizontal/vertical orientation was changed.	● The camera's orientation mechanism is operating. There is no malfunction.
---	---

## When the power is turned on

### "Card locked!" message appears.


The SD memory card's and SDHC memory card's write protect tab is set to "Write protect".	● When recording to, erasing from or formatting the memory card, slide the write protect tab upward (p. 129).
--	---

### The Date/Time menu appears.

The built-in rechargeable lithium battery charge is low.	● Recharge the built-in battery immediately ( <i>Basic Guide</i> p. 9).
--	---

# LCD monitor

## The LCD monitor will shut off during shooting.

If [Power Saving] is set to [Display Off], the power saving function will shut down the LCD monitor while shooting in  mode.

## Camera screen is black at start-up

Incompatible image has been selected as the start-up image in the My Camera settings.

- Change the start-up image in the My Camera settings (p. 110) or use the supplied software program ZoomBrowser EX or ImageBrowser to restore the default settings. See *ZoomBrowser EX/ ImageBrowser Software User Guide* (PDF).

## The display darkens.

The image in the LCD monitor will darken in strong sunlight or bright light.

- This is a normal occurrence in devices containing CCDs and does not constitute a malfunction. (This image will not be recorded when shooting still images, but it will be recorded when shooting movies.)

## Display flickers.

Display flickers when shot under fluorescent lighting.

- This is not a camera malfunction (flickering recorded in movies, but not in still images).

## A bar of light (red, purple) appears on the LCD monitor.


This may occur when shooting a bright subject, such as the sun or a light.

- This is a normal occurrence in devices containing CCDs and does not constitute a malfunction. This bar of light will not be recorded when shooting still images, but it will be recorded when shooting movies.



### appears.

A slow shutter speed has likely been selected because of insufficient lighting.

- Raise the ISO speed (p. 65).
- Set the Auto ISO Shift to [On] (p. 66).
- Set the flash to a setting other than  (Flash Off) (*Basic Guide* p. 15).
- Set the self-timer (*Basic Guide* p. 17) and secure the camera to something, such as a tripod.



### appears.

This displays when using a memory card that has print settings, transfer settings or slide show image selections set by other DPOF-compliant cameras.

- Take note that these settings will be overwritten by those set by your camera (pp. 93, 104).

### Noise displays./Subject's movements are irregular.

Camera automatically lightened the image displayed on the LCD monitor to make it easier to see when shooting in a dark area (p. 14).

- There is no effect on the recorded image.

## Shooting

### Camera will not record.

Flash is charging.

- The indicator will light orange when it is charged. You can then shoot (*Basic Guide* p. 5).

Memory card is full.

- Insert a new memory card (*Basic Guide* p. 7).
- If required, download the images to a computer and erase them from the memory card to make space.

Memory card is not formatted correctly.


- Format the memory card (p. 29).
- If reformatting does not work, the memory card logic circuits may be damaged. Consult the nearest Canon Customer Support Help Desk.

SD memory card or SDHC memory card is write protected.

- Slide the write protect tab of the memory card upward (p. 129).

### **Image is blurred or out of focus.**

The camera moves when the shutter button is pressed.

- Confirm the procedures in “ appears” (p. 115) .

AF-assist Beam is set to [Off].

- In dark places where it is difficult for the camera to focus, the AF-assist Beam will emit to assist focusing. As the AF-assist Beam will not function when turned off, set it [On] to activate it (p. 24). Take care not to obstruct the AF-assist Beam with your hand when used.

Subject is out of focal range.

- Shoot with the subject at the correct focusing distance (p. 135).

The subject is hard to focus on.

- Use the focus lock or AF lock to shoot (p. 48).

## Subject in recorded image is too dark.

Insufficient light for shooting.

- Set the flash to  (flash on) (*Basic Guide* p. 15).

The subject is underexposed because the surroundings are too bright.

- Set the exposure compensation to a positive (+) setting (p. 52).
- Use AE lock or use the spot metering function (pp. 49, 51).

Subject is too far away for flash to reach.

- Shoot within correct flash range of the subject when using the built-in flash (p. 136).
- Raise the ISO speed and then shoot (p. 65).

## Subject in recorded image is too bright, or image flashes white.

Subject is too close, making the flash too strong.

- Shoot within correct flash range of the subject when using the built-in flash (p. 136).

The subject is overexposed because the surroundings are too dark.

- Set the exposure compensation to a negative (-) setting (p. 52).
- Use AE lock or use the spot metering function (pp. 49, 51).

Too much light is shining directly into the camera, or is being reflected off the subject.









- Change the shooting angle.

Flash is set to on.

- Set the flash to  (flash off) (*Basic Guide* p. 15).

## Image contains noise.

ISO speed is too high.

- Higher ISO speeds and the  (High ISO Auto) setting may increase image noise. For higher image quality, select as low an ISO speed as possible (p. 65).
- In , , , , ,  and  modes, the ISO speed increases and noise can appear.

### **White dots appear on the image.**

Light from the flash has reflected off dust particles or insects in the air. This is particularly noticeable when shooting using the wide angle.

- This is a phenomenon that occurs with digital cameras and does not constitute a malfunction.

### **Eyes appear red.**

Light is reflected back from the eyes when the flash is used in dark areas.

- Set the [Red-Eye] function to [On] and shoot (p. 35). For this mode to be effective, the subject must be looking right at the red-eye reduction lamp. Try asking them to look directly at the lamp. Even better results can be obtained by increasing the lighting in indoor settings or approaching closer to the subject. The shutter will not activate for approximately 1 second after the red-eye reduction lamp fires in order to improve the effect.
- You can correct red eyes in images using the Red-Eye Correction function (p. 85).

### **Continuous shooting slows down.**

The memory card's performance has dropped.

- To enhance the continuous shooting performance, you are recommended to format (Low Level Format) the memory card in the camera after you save all its images to your computer (p. 29).

### **Recording images to memory card takes a long time.**

Memory card was formatted in another device.

- Use a memory card formatted in your camera (p. 29).



### **Lens will not retract.**

Memory card slot/battery cover was opened with power on.

- First close the memory card slot/battery cover and then turn the power on and then off again. (*Basic Guide* p. 7).

## **Shooting Movies**

### **The recording time may not display properly or shooting may stop unexpectedly.**

The following types of memory cards are used.

- Slow recording cards.
- Cards formatted on a different camera or a computer.
- Cards which have had images recorded and erased repeatedly.

- Although the recording time may not display properly during shooting, the movie will be recorded correctly on the memory card. Recording time will display properly if you format the memory card in this camera (excluding slow recording memory cards) (p. 29).

### **"!" displayed on the LCD monitor in red and shooting automatically stopped.**

There is insufficient free space in the camera's built-in memory.

- Try the following procedures.
  - Format the card with a low level format before shooting (p. 29).
  - Lower the recording pixels or frame rate (p. 42).
  - Use a high-speed memory card (SDC-512MSH, etc.).

### **Zoom does not operate.**

Zoom lever was pressed while shooting in movie mode.

- Operate the zoom before shooting in movie mode (*Basic Guide* p. 15). Note the digital zoom is available while shooting, but only in Standard movie mode (p. 32).

# Playback

## Cannot play back.

You attempted to play back images shot with another camera or images edited with a computer.

- Computer images that cannot be played back may play back if they are added to the camera using the supplied software program ZoomBrowser EX or ImageBrowser. See *ZoomBrowser EX/ImageBrowser Software User Guide* (PDF).

File name was changed with a computer or file location was changed.

- Set the file name or location on the file format/structure of the camera. (Refer to the *Software Starter Guide* for details).


## Movies cannot be edited.

Some movies shot with another camera cannot be edited.

## Movies do not play back correctly.

Movies recorded with high recording pixels and frame rates may momentarily stop playing if played on slow reading memory cards.

You may experience frame dropping and audio breakup when playing back a movie on a computer with insufficient system resources.

Movies recorded at the  Fast Frame Rate setting and with the video signal set to the PAL format, may play back with a frame rate lower than the recorded one when output to a TV or video. You can play every frame by using the slow motion playback.

- To check the images at the original frame rate, you are recommended to play the movie back on the camera's LCD monitor or on a computer.

## Reading images from memory card is slow.

Memory card was formatted in another device.

- Use a memory card formatted in your camera (p. 29).

## Battery/Battery Charger

### Battery consumed quickly.

Battery is not being used to its full capacity.

- See *Battery Handling Precautions* (p. 127).

Battery life exceeded if battery loses its charge quickly at normal temperature (23 °C/73 °F).

- Replace the battery with a new one (*Basic Guide* p. 7).

### Battery will not charge.

Battery life exceeded.

- Replace the battery with a new one (*Basic Guide* p. 7).

## TV monitor output

### Image is distorted or not showing on TV monitor.

Incorrect video system setting.

- Set the video system to the appropriate setting, NTSC or PAL, for your TV (p. 27).

Shooting in Stitch Assist mode.

- The output will not appear on a TV in Stitch Assist mode. Cancel the Stitch Assist mode (*Basic Guide* p. 13).

# Printing on Direct Print Compatible Printers

## Cannot print.


Camera and printer not properly connected.

- Attach the camera to the printer securely with the supplied cable.

Printer power is off.

- Turn on the printer.

Incorrect print connection.

- In the  (Set up) menu, select [Print Method] and select [Auto] (p. 27).

# List of Messages

The following messages may appear on the LCD monitor during shooting or playback. Please refer to the *Direct Print User Guide* for the messages that display during a printer connection.

## Busy...

- Image is being recorded to the memory card, or the playback mode is starting up.

## No memory card

- You turned on the camera without a memory card installed, or with a memory card installed in the wrong orientation (*Basic Guide*, p. 7).

## Card locked!

- The SD memory card or SDHC memory card is write-protected.

## Cannot record

- You attempted to shoot an image without a memory card installed in the camera or with a memory card incorrectly installed in the wrong orientation, or you attempted to attach a sound memo to a movie.

## Memory card error

- The memory card may be malfunctioning. Some malfunctioning memory cards may be fixed by formatting them in this camera. However, if this error message appears even when using the supplied memory card, contact your Canon Customer Support Help Desk as there may be a problem with the camera.

## Memory card full

- Memory card is full of images and no more can be recorded or saved. Or no more image settings, Sound Recorder files or sound memos can be recorded.

## **Naming error!**

- The file name could not be created because there is a file with the same name as the folder that the camera is attempting to create, or the highest possible file number has already been reached. In the Set up menu, set the File Numbering option to [Auto Reset]; alternatively, save all the images you wish to retain onto a computer, then reformat the memory card. Please note that formatting will erase all the existing images and other data.

## **Change the battery pack.**

- Battery charge is insufficient to operate the camera. Replace it at once with a charged one or recharge the battery. Also, see *Battery Handling Precautions* (p. 127).

## **No image.**

- No images recorded on memory card.

## **Image too large.**

- You attempted to play back an image larger than 4992 x 3328 pixels or with a large data size.

## **Incompatible JPEG**

- You attempted to play back an incompatible JPEG image (such as those edited on computers).

## **RAW**

- You attempted to play back a RAW image.

## **Unidentified Image**

- You attempted to play back a corrupted image, an incompatible image (proprietary format used by another manufacturer's camera, etc.), an image edited on a computer or a movie clip recorded by another camera.

## **Cannot magnify!**

- You attempted to magnify an image recorded in a different camera or data type, an image edited with a computer, or a movie.

### **Cannot rotate**

- You attempted to rotate an image recorded in a different camera or data type, or an image edited with a computer.

### **Incompatible WAVE**

- A sound memo cannot be added to this image since the data type of the existing sound memo is incorrect, or the sound memo cannot be played back.

### **Cannot register this image!**

- You attempted to register an image recorded in a different camera or a movie as a start-up image.

### **Cannot modify image**

- You attempted to apply a My Colors effect to a movie or an image recorded in a different camera. Or you attempted to correct red eyes on an image recorded in a different camera.

### **Cannot assign to category**

- You attempted to categorize an image recorded in a different camera.

### **Cannot Modify**

- Cannot apply red-eye correction as no red-eye is detected.

### **Cannot transfer!**

- When transferring images to your computer using the Direct Transfer menu, you attempted to select an image with corrupted data or an image taken with a different camera or data type. You may have also attempted to select a movie when [Wallpaper] was selected in the Direct Transfer menu.

### **Protected!**

- You attempted to erase or edit a protected image, movie or sound memo.

### **Too many marks.**

- Too many images have been marked with print settings, transfer settings or slide show settings. Cannot process any more.

### **Cannot complete!**

- Could not save a part of the print, transfer or slide show settings.

### **Unselectable image.**

- You attempted to set the print settings for a non-JPEG image.

### **Communication error**

- The computer was unable to download the image due to the large amount of images (approx. 1000) stored on the memory card.

### **Lens error, restart camera**

- Camera detected an error while moving the lens and cut the power automatically. This error message may appear if you press on the lens while it is moving or turn on the camera in a dusty or sandy environment. Turn on the camera again and shoot or playback images. Take the camera to a service center if this message appears frequently because there may be a problem with the lens.

### **Exx**

- (xx: number) Camera detected an error. Turn the power off and then back on, then shoot or play back. A problem exists if the error code reappears. Note the number and contact your Canon Customer Support Help Desk. If an error code displays directly after taking a picture, the shot may not have been recorded. Check image in playback mode.
-



## Battery Handling

### Battery Charge

The following icon and message will display.



Battery charge is low.  
Recharge it as soon as possible if it will be used for an extended period.

#### Change the battery pack

Battery charge is insufficient to operate the camera. Replace the battery immediately.

### Battery Handling Precautions


- **Keep the battery terminals clean at all times.**  
Dirty terminals may cause poor contact between the battery and camera. Polish the terminals with a soft cotton swab before charging or using the battery.
- **At low temperatures, battery performance may be reduced and the low battery icon (  ) may appear earlier than usual.**  
Under these conditions, revive the battery by warming it in a pocket immediately before use.
- **However, ensure that there are no metallic items in the pocket that could cause a short circuit, such as a key ring, etc.**  
The battery may be short circuiting.
- **Do not allow any metal objects such as key rings to touch the (⊕) and (⊖) terminals (Fig. A). To carry the battery or store it during periods of disuse, always replace the terminal cover (Fig. B).**  
These conditions can damage the battery.

Fig. A



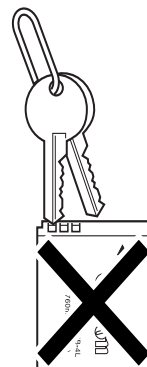


Fig. B

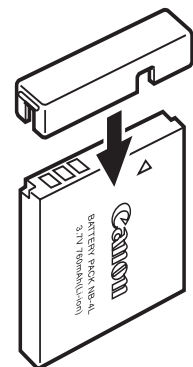


You may be able to check the charge state depending upon how the terminal cover is attached (Fig. C, D).

Fig. C

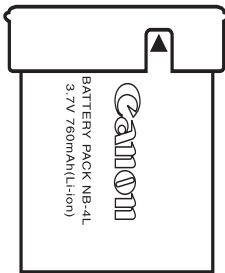

**Charged Battery**  
Attach it so the ▲  
is visible

Fig. D

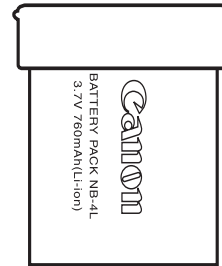

**Spent Battery**  
Attach it the  
opposite way to  
Fig. C.

- **You are recommended to use it in the camera until it is completely discharged and to store it in an indoor location with low relative humidity and between the temperatures of 0 – 30 °C (32 – 86 °F).**

Storing a fully charged battery for long periods of time (about one year) may shorten its life cycle or affect its performance. If you do not use the battery for long periods of time, charge it fully and discharge it fully in the camera about once a year before returning it to storage.


## Charging the Battery

- **Since this is a lithium-ion battery, you need not completely discharge it before recharging.**
- **It takes approximately 1 hour 30 minutes to fully charge the battery from a depleted state (based on Canon's testing standards).**
  - Charging it within a temperature range of 5 – 40 °C (41 – 104 °F) is recommended.
  - Charge times may vary according to the ambient temperature and the battery's charge state.
- **You are advised to charge the battery on the day of use, or one day before, to ensure a full charge.**

Even charged batteries continue to discharge naturally.
- **If the performance of the battery diminishes substantially even when it is fully charged, its life has been exceeded and it should be replaced.**

# Handling the Memory Card

## SD Memory Card and SDHC Memory Card Write Protect Tab

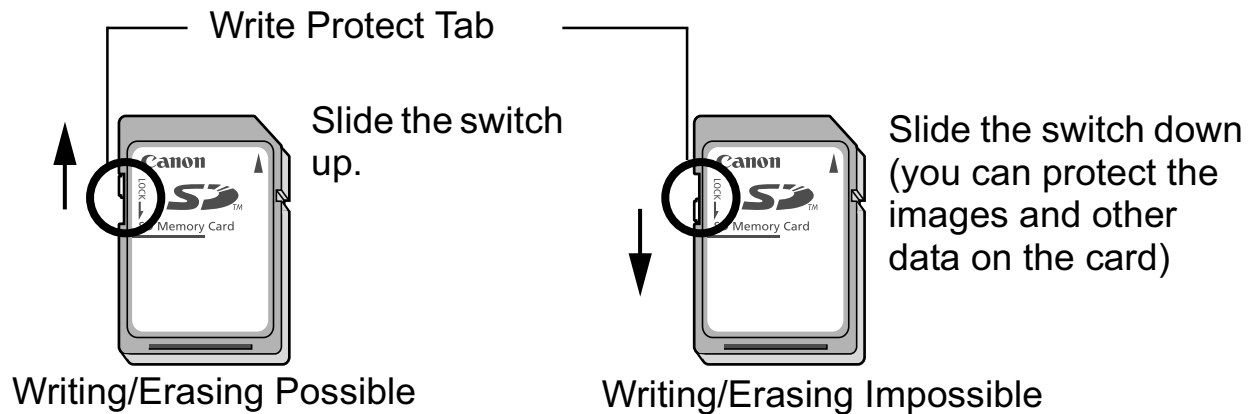

## Cautions When Handling

- Memory cards are high-precision electronic devices. Do not bend them, apply force to them, or subject them to shocks or vibration.
- Do not attempt to disassemble or alter the memory card.
- Do not allow dirt, water or foreign objects to contact the terminals on the back of the card. Do not touch the terminals with your hands or metal objects.
- Do not peel away the original label on the memory card or cover it with another label or sticker.
- When writing on the memory card, do not use a pencil or ball-point pen. Only use a soft point pen (e.g. felt-tip pen).
- Do not use or store memory cards in the following locations.
  - Locations subject to dust or sand
  - Locations subject to high humidity and high temperatures
- Since some or all of the data recorded on the memory card may be corrupted or erased by electrical noise, static electricity, or camera or card malfunction, making a backup copy of important data is recommended.

## Formatting


- **Please note that formatting (initializing) an memory card erases all data, including protected images.**
- **You are recommended to use memory cards that have been formatted in your camera.**
  - The card supplied with the camera may be used without further formatting.
  - When the camera is malfunctioning, a corrupted memory card might be the cause. Reformatting the memory card may solve the problem.
  - When a non-Canon brand memory card is malfunctioning, reformatting it may solve the problem.
  - Memory cards formatted in other cameras, computers, or peripheral devices may not operate correctly in this camera. When that happens, reformat the memory card with this camera.
- **If formatting in the camera does not work properly, turn the camera off and re-insert the memory card. Then turn the camera back on and format again.**
- **Data on a card is not completely erased even when the card is formatted or images are erased because these processes merely change the file management data. Please note this fact when transferring ownership or disposing of cards. Take care to destroy the card when disposing of it to prevent the leakage of personal data.**

# Using an AC Adapter Kit (Sold Separately)

It is best to power the camera with AC Adapter Kit ACK-DC10 (sold separately) when you are using it for long periods of time or connecting it to a computer.


**!** Turn the camera power off before connecting or disconnecting the AC adapter.

**1** Connect the power cord to the compact power adapter first and then plug the other end into the power outlet.

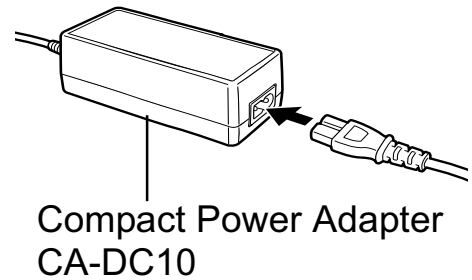


**2** Open the memory card slot/battery cover, push the battery lock in the direction of the arrow and insert the DC coupler until it locks.

- Slide the memory card slot/battery cover closed.

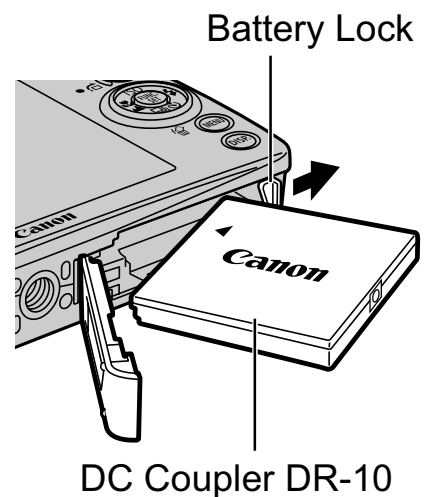

**3** Open the DC coupler terminal cover and attach the cord to the DC terminal.

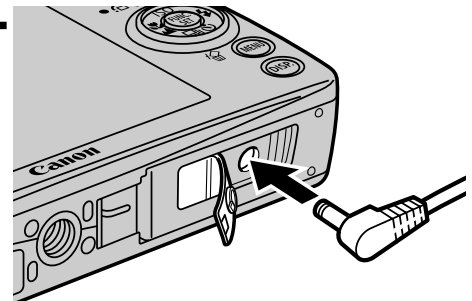


# Using an Externally Mounted Flash (Sold Separately)

## High-Power Flash HF-DC1

This flash is used to supplement the camera's built-in flash when the subject is too far away for proper illumination. Use the following procedures to affix the camera and High-Power Flash to the supporting bracket.

Please read the instructions accompanying the flash along with this explanation.

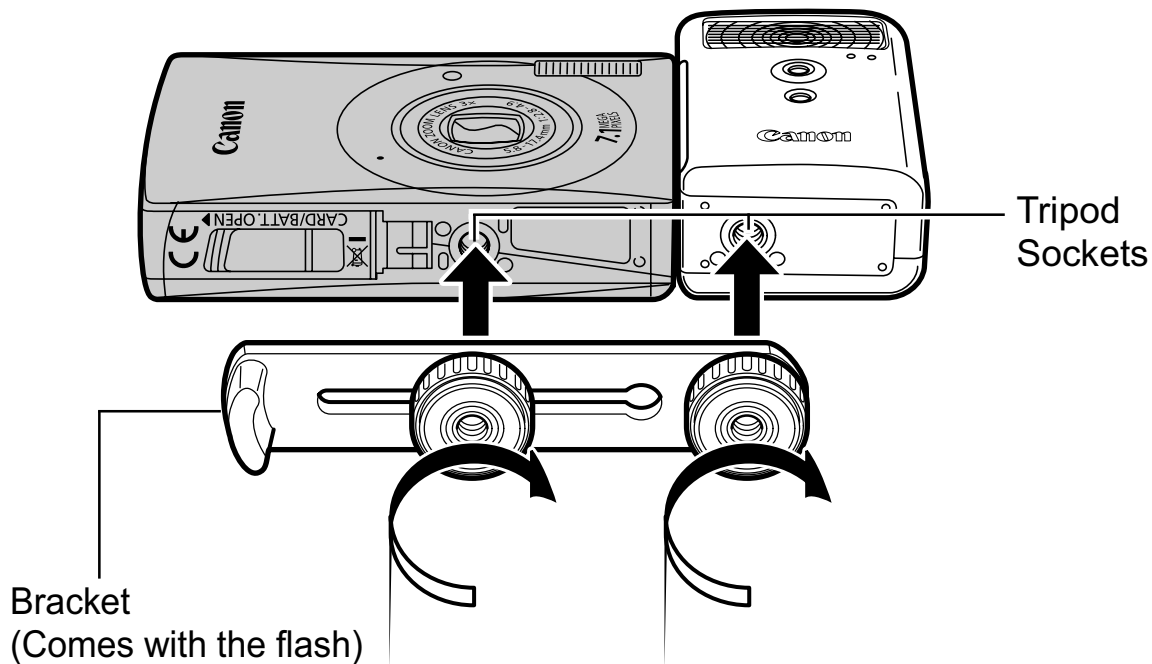

- The flash charge time will lengthen as the battery charge gets weaker. Always set the power/mode switch to [OFF] when you finish using the flash.
- Be careful not to touch the flash window or sensor windows with your fingers while the flash is in use.
- The flash may fire if another flash is being used in close proximity.
- The High-Power Flash may not fire outdoors in daylight or when there are no reflective items.
- For continuous shooting, although the flash fires for the first shot, it does not fire for subsequent shots.
- Fasten the attachment screws securely so that they do not loosen. Failure to do so may lead to the dropping of the camera and flash resulting in damage to both.



- Before attaching the bracket to the flash, check that the lithium battery (CR123A or DL123) is installed.
- To illuminate the subjects properly, install the flash so that it is up against the side of the camera and parallel with the camera's front panel.
- A tripod can be used even when the flash is attached.

## **Batteries**

### **●Charge becomes Severely Limited**

If the battery usage time has considerably diminished, wipe the battery terminals well with a dry cloth. The terminals may be dirty from fingerprints.

### **●Usage in Cold Temperatures**

Get a spare generic lithium battery (CR123A or DL123). You are recommended to place the spare battery in your pocket to warm it up before switching it for the battery in the flash.

### **●Non-Use over Extended Periods**

Leaving batteries in the High-Power Flash could allow the battery fluid to leak, damaging the product. Remove the batteries from the High-Power Flash and store them in a cool, dry place.

# Camera Care and Maintenance

**Never use thinners, benzine, detergents or water to clean the camera. These substances may distort or damage the equipment.**

## Camera Body

Gently wipe dirt off the camera body with a soft cloth or eyeglass lens wiper.

## Lens

First use a lens blower brush to remove dust and dirt, then remove any remaining dirt by wiping the lens lightly with a soft cloth.



Never use organic solvents on the camera body or lens. If dirt remains, contact the closest Canon Customer Support Help Desk as listed on the customer support list supplied with your camera.

## LCD Monitor

Use a lens blower brush to remove dust and dirt. If necessary, gently wipe with a soft cloth or an eyeglass lens wiper to remove stubborn dirt.



Never rub or press strongly on the LCD monitor. These actions may damage it or lead to other problems.



# Specifications

All data is based on Canon's standard testing methods. Subject to change without notice.

## PowerShot SD750 DIGITAL ELPH/DIGITAL IXUS 75

(W): Max. wide angle (T): Max. telephoto

<b>Camera Effective Pixels</b>	Approx. 7.1 million
<b>Image Sensor</b>	1/2.5-inch type CCD (Total number of pixels: Approx. 7.4 million)
<b>Lens</b>	5.8 (W) – 17.4 (T) mm (35mm film equivalent: 35 (W) – 105 (T) mm) f/2.8 (W) – f/4.9 (T)
<b>Digital Zoom</b>	Approx. 4.0x (Up to approx. 12x in combination with the optical zoom)
<b>LCD Monitor</b>	3.0-inch type, low-temperature polycrystalline silicon TFT color LCD, approx. 230,000 pixels (Picture coverage 100%)
<b>AF System</b>	TTL autofocus AiAF (Face Detect/9-point)/AF(1-point fixed to center)
<b>Focusing Range</b>	Normal: 30 cm (12 in.) – infinity Macro: 3 – 50 cm (W)/30 – 50 cm (T) (1.2 in. – 1.6 ft. (W)/12 in. – 1.6 ft. (T)) Infinity: 3 m (9.8 ft.) – infinity
<b>Shutter</b>	Mechanical shutter + electronic shutter
<b>Shutter Speeds</b>	15 – 1/1500 sec. The shutter speed varies according to the shooting mode. Slow shutter speeds of 1.3 sec. or slower operate with noise reduction.
<b>Metering System</b>	Evaluative*1, Center-weighted average or Spot*2 *1 When AiAF is set to [Face Detect], the brightness of the face is also evaluated *2 Fixed to center
<b>Exposure Compensation</b>	± 2 stops in 1/3-stop increments

<b>ISO Speed*<sup>1</sup></b>	Auto* <sup>2</sup> , High ISO Auto* <sup>2</sup> , ISO 80/100/200/400/800/1600 *1 Standard Output Sensitivity, Recommended Exposure Index. *2 Camera automatically sets the optimal speed.
<b>White Balance</b>	Auto, Day Light, Cloudy, Tungsten, Fluorescent, Fluorescent H or Custom
<b>Built-in Flash</b>	Auto*, On*, Off * Red-eye reduction, FE Lock and slow synchro available
<b>Flash Range</b>	Normal: 50 cm – 3.5 m (1.6 – 11 ft.) (W), 50 cm – 2.0 m (1.6 – 6.6 ft.) (T) Macro: 30 – 50 cm (1.0 – 1.6 ft.) (W/T) (When ISO speed is set to AUTO.)
<b>Shooting Modes (Still images)</b>	Auto, Manual <sup>1</sup> , Digital macro, Color Accent, Color Swap, Stitch assist <sup>2</sup> , Special Scene Mode <sup>3</sup> 1 Long shutter mode available 2 Selectable in Manual mode. 3 Portrait, Night Snapshot, Kids&Pets, Indoor, Foliage, Snow, Beach, Fireworks, Aquarium, Underwater
<b>(Movies)</b>	Standard, Fast Frame Rate, Compact, Color Accent, Color Swap, Time Lapse
<b>Continuous Shooting</b>	Approx. 1.7 shots/sec. (Large/Fine mode)
<b>Self-timer</b>	Activates shutter after an approx. 10-sec./approx. 2-sec. delay, Custom Timer
<b>Recording Media</b>	SD memory card/SDHC memory card/MultiMediaCard
<b>File Format</b>	Design rule for camera file system and DPOF compliant
<b>Data Type (Still images)</b>	Exif 2.2 (JPEG)*
<b>(Movies)</b>	AVI (Image data: Motion JPEG; Audio data: WAVE (Monaural)) Sound memos, Sound Recorder: WAVE (Monaural)
	* This digital camera supports Exif 2.2 (also called “Exif Print”). Exif Print is a standard for enhancing the communication between digital cameras and printers. By connecting to an Exif Print-compliant printer, the camera’s image data at the time of shooting is used and optimized, yielding extremely high quality prints.

<b>Compression</b>	Superfine, Fine, Normal
<b>Number of Recording Pixels (Still Images)</b>	Large: 3072 x 2304 pixels Medium 1: 2592 x 1944 pixels Medium 2: 2048 x 1536 pixels Medium 3: 1600 x 1200 pixels Small: 640 x 480 pixels Postcard: 1600 x 1200 pixels Widescreen: 3072 x 1728 pixels
<b>Number of Recording Pixels (Movies)</b>	Standard, Color Accent, Color Swap: 640 x 480 pixels (30 frames/sec., 15 frames/sec.) 320 x 240 pixels (30 frames/sec., 15 frames/sec.) Recording can continue until the memory card is full* (can record up to a maximum of 4 GB** at one time). Fast Frame Rate: (can record for 1 min.) 320 x 240 pixels (60 frames/sec.) Compact: (can record for 3 min.) 160 x 120 pixels (15 frames/sec.) Interval: (can record for 2 hours) 640 x 480 pixels (1 frame/sec., 0.5 frame/sec.) (15 frames/sec. during playback)
	* Using super high-speed memory cards (SDC-512MSH recommended). ** Even if the clip size has not reached 4 GB, recording will stop at the moment the clip length reaches 1 hour. Depending on the volume and data writing speed of the memory card, recording may stop before reaching 1 hour or before the recorded data volume has reached 4 GB.
<b>Sound Memo</b>	Bit Rate: 16 bits Sampling Rate Sound memo, movie (Compact): 11.025 kHz Movie (other than Compact): 44.100 kHz Sound Recorder: 11.025 kHz/ 22.050 kHz/ 44.100 kHz

<b>Playback Modes</b>	Single (histogram displayable), Index (9 thumbnail images), Magnified (approx. 10x (max.) in LCD monitor, advance or reverse through magnified images possible), My Category, Jump (Shot Date, My Category, Folder, Movie, By 10 images, By 100 images). In index playback mode, it displays 9 images at once, Slide show, Red-Eye Correction, My Colors, Sound memos (recording/playback up to 1 min.), Movie (edit/slow motion play back possible) or Sound Recorder (up to 2 hours sound-only recording/playback possible).
<b>Direct Print</b>	<i>PictBridge</i> compliant, and <i>Canon Direct Print</i> and <i>Bubble Jet Direct</i> compatible
<b>My Camera Settings</b>	Start-up image, start-up sound, operation sound, self-timer sound, and shutter sound.
<b>Interface</b>	USB 2.0 Hi-Speed (mini-B) Audio/Video output (NTSC or PAL selectable, monaural audio)
<b>Communication Settings</b>	MTP, PTP
<b>Power Source</b>	Battery Pack NB-4L (Rechargeable lithium-ion battery) AC Adapter Kit ACK-DC10
<b>Operating Temperatures</b>	0 – 40 °C (32 – 104 °F)
<b>Operating Humidity</b>	10 – 90%
<b>Dimensions (Excluding protrusions)</b>	91.6 x 56.8 x 19.6 mm (3.61 x 2.24 x 0.77 in.)
<b>Weight (camera body only)</b>	Approx. 130 g (4.59 oz.)

## Battery Capacity (Battery Pack NB-4L (Fully charged))

Number of Images Shot	
LCD Monitor ON (Based on the CIPA standard)	Playback Time
Approx. 210 images	Approx. 4 hours

- The actual figures will vary according to the shooting conditions and settings.
- Movie data is excluded.
- At low temperatures, the battery performance may diminish and the low battery icon may appear very rapidly. In these circumstances, the performance can be improved by warming the battery in a pocket before use.

### Test Conditions

Shooting: Normal temperature ( $23\text{ }^{\circ}\text{C} \pm 2\text{ }^{\circ}\text{C}/73\text{ }^{\circ}\text{F} \pm 3.6\text{ }^{\circ}\text{F}$ ), normal relative humidity ( $50\% \pm 20\%$ ), alternating wide angle end and telephoto end shots at 30 second intervals with the flash fired once every two shots and the camera power turned off after every tenth shot. Power is left off for a sufficient amount of time\*, then the power is turned back on and the testing procedure is repeated.

- A Canon-brand memory card is used.

\*Until the battery returns to normal temperature





















Playback: Normal temperature ( $23\text{ }^{\circ}\text{C} \pm 2\text{ }^{\circ}\text{C}/73\text{ }^{\circ}\text{F} \pm 3.6\text{ }^{\circ}\text{F}$ ), normal relative humidity ( $50\% \pm 20\%$ ), continuous playback at 3 seconds per image.




- See *Battery Handling Precautions* (p. 127).




















# Memory Cards and Estimated Capacities

: Card included with the camera

Recording Pixels	Compression	32MB	SDC-128M	SDC-512MSH
<b>L</b> (Large) 3072 x 2304 pixels		9	40	156
		15	64	251
		32	134	520
<b>M1</b> (Medium 1) 2592 x 1944 pixels		11	49	190
		20	87	339
		41	173	671
<b>M2</b> (Medium 2) 2048 x 1536 pixels		18	76	295
		32	136	529
		64	269	1041
<b>M3</b> (Medium 3) 1600 x 1200 pixels		29	121	471
		52	217	839
		99	411	1590
<b>S</b> (Small) 640 x 480 pixels		111	460	1777
		171	711	2747
		270	1118	4317
 (Postcard) 1600 x 1200 pixels		52	217	839
<b>W</b> (Widescreen) 3072 x 1728 pixels		12	53	207
		20	86	335
		42	177	686





-  Capable of smooth continuous shooting (p. 36) when card has been formatted with a low level format.
- This reflects standard shooting criteria established by Canon. Actual results may vary according to the subject and shooting conditions.

## Movie

	Recording Pixels	Frame Rate	32MB	SDC-128M	SDC-512MSH
 Standard	 (640 x 480 pixels)		14 sec.	1 min. 1 sec.	3 min. 57 sec.
			27 sec.	1 min. 56 sec.	7 min. 30 sec.
 Color Accent	 (320 x 240 pixels)		38 sec.	2 min. 42 sec.	10 min. 29 sec.
 Color Swap			1 min. 7 sec.	4 min. 39 sec.	17 min. 58 sec.
 Fast Frame Rate	 (320 x 240 pixels)		20 sec.	1 min. 27 sec.	5 min. 39 sec.
 Compact	 (160 x 120 pixels)		3 min. 9 sec.	13 min. 2 sec.	50 min. 21 sec.
 Time Lapse	 (640 x 480 pixels)	 *	7 min. 30 sec.	31 min. 45 sec.	2 hrs. 3 min. 30 sec.
		 **	15 min.	1 hr. 3 min. 30 sec.	4 hrs. 7 min.

\* 1 frame/sec. (shooting interval: 1 sec.)

\*\* 0.5 frame/sec (shooting interval: 2 sec.)





- Maximum movie clip length at : 1 min., : 3 min., : 2 hours. The figures indicate the maximum continuous recording time.
- As  plays back at 15 frames/sec., the recording time and the playback time will differ.













## Sound Recorder Data Rates and Recording Durations (Estimated)

: Card included with the camera

	Data Rates	32MB	SDC-128M	SDC-512MSH
11.025 kHz	22 KB/sec.	23 min. 4 sec.	1 hr. 36 min. 59 sec.	6 hrs. 14 min. 16 sec.
22.050 kHz	44 KB/sec.	11 min. 32 sec.	48 min. 30 sec.	3 hrs. 7 min. 8 sec.
44.100 kHz	88 KB/sec.	5 min. 46 sec.	24 min. 15 sec.	1hr. 33 min. 34 sec.

# Image Data Sizes (Estimated)

Recording Pixels	Compression		
			
<b>L</b> (3072 x 2304 pixels)	3045 KB	1897 KB	902 KB
<b>M1</b> (2592 x 1944 pixels)	2503 KB	1395 KB	695 KB
<b>M2</b> (2048 x 1536 pixels)	1602 KB	893 KB	445 KB
<b>M3</b> (1600 x 1200 pixels)	1002 KB	558 KB	278 KB
<b>S</b> (640 x 480 pixels)	249 KB	150 KB	84 KB
 (1600 x 1200 pixels)	–	558 KB	–
<b>W</b> (3072 x 1728 pixels)	2304 KB	1420 KB	678 KB

	Recording Pixels	Frame Rate	File size
 Standard	<b>640</b> (640 x 480 pixels)		1963 KB/sec.
			1003 KB/sec.
 Color Accent	<b>320</b> (320 x 240 pixels)		703 KB/sec.
 Color Swap			373 KB/sec.
 Fast Frame Rate	<b>320</b> (320 x 240 pixels)		1363 KB/sec.
 Compact	<b>160</b> (160 x 120 pixels)		131 KB/sec.
 Time Lapse	<b>640</b> (640 x 480 pixels)	<b>1"</b> *	64 KB/sec.
		<b>2"</b> **	32 KB/sec.

\* 1 frame/sec. (shooting interval: 1 sec.)

\*\* 0.5 frame/sec (shooting interval: 2 sec.)



## SD Memory Card

Interface	Compatible with SD memory card standards
Dimensions	32.0 x 24.0 x 2.1 mm (1.26 x 0.94 x 0.08 in.)
Weight	Approx. 2 g (0.07 oz.)

## MultiMediaCard

Interface	Compatible with MultiMediaCard standards
Dimensions	32.0 x 24.0 x 1.4 mm (1.26 x 0.94 x 0.06 in.)
Weight	Approx. 1.5 g (0.05 oz.)

## Battery Pack NB-4L

Type	Rechargeable lithium-ion battery
Nominal Voltage	3.7 V DC
Typical Capacity	760 mAh
Cycle Life	Approx. 300 times
Operating Temperatures	0 – 40 °C (32 – 104 °F)
Dimensions	35.4 x 40.3 x 5.9 mm (1.4 x 1.6 x 0.23 in.)
Weight	Approx. 17 g (0.6 oz.)

## Battery Charger CB-2LV/CB-2LVE

Rated Input	100 – 240 V AC (50/60 Hz) 0.1 A (100 V) – 0.06 A (240 V)
Rated Output	4.2 V DC, 0.65 A
Charging Time	Approx. 1 hour 30 minutes
Operating Temperatures	0 – 40 °C (32 – 104 °F)
Dimensions	53.0 x 86.0 x 19.5 mm (2.1 x 3.4 x 0.77 in.)
Weight	Approx. 60 g (2.1 oz.) (CB-2LV) Approx. 55 g (1.9 oz.) (CB-2LVE) (excluding power cord)

## Compact Power Adapter CA-DC10

(Included with the separately sold AC Adapter Kit ACK-DC10)

<b>Rated Input</b>	100 – 240 V AC (50/ 60 Hz)
<b>Rated Output</b>	4.3 V DC, 1.5 A
<b>Operating Temperatures</b>	0 – 40 °C (32 – 104 °F)
<b>Dimensions</b>	42.6 x 104.4 x 31.4 mm (1.68 x 4.11 x 1.24 in.)
<b>Weight (excluding power cord)</b>	Approx. 180 g (6.35 oz.)



### U.S.A. and Canada only:

The Lithium ion/polymer battery that powers the product is recyclable.

Please call 1-800-8-BATTERY for information on how to recycle this battery.

# INDEX

## Numerics

3:2 Guide ..... 38

## A

AC Adapter Kit ACK-DC10 .. 131  
Add Frame ..... 85  
AE Lock ..... 49  
AF Frame ..... 15, 46  
AF Lock ..... 48  
AF-assist Beam ..... 24  
AiAF ..... 46  
Auto ISO Shift ..... 66  
Auto Play (Slide Show) ..... 93  
Auto Rotate Function ..... 69

## B

Battery  
  Battery Capacity ..... 139  
  Charging ..... 128, *Basic 6*  
  Handling ..... 127  
  Installing ..... *Basic 7*

## C

Category ..... 78  
Clock Display ..... 13  
Compression ..... 30  
Continuous Shooting ..... 36  
Create Folder ..... 72  
Custom White Balance ..... 56

## D

Date Imprint Mode ..... 37  
Date/Time  
  Setting ..... *Basic 8*  
  Using the Clock ..... 13  
  World Clock ..... 20  
Digital Macro ..... 34  
Digital Tele-Converter ..... 32  
DIGITAL Terminal .... *Basic 2, 28*  
Digital Zoom ..... 32  
Direct Transfer ..... *Basic 31*  
Downloading Images to  
  a Computer ..... *Basic 25*  
DPOF Print Order  
  Print Style ..... 107

DPOF Transfer Order ..... 108

## E

Erasing  
  All Images ..... 102  
  Single Images ..... *Basic 3, 20*  
Exposure ..... 52  
Exposure Shift ..... 41

## F

FE Lock ..... 50  
File Number ..... 74  
Flash ..... *Basic 3, 15*  
Focus ..... 46  
Focus Lock ..... 48  
Frame Rate ..... 42  
FUNC. Menu ..... 22  
FUNC./SET button ..... *Basic 3*

## G

Grid Lines ..... 38

## H

HF-DC1 ..... 132  
Histogram ..... 18

## I

Image Data Sizes (Estimated)  
  ..... 142  
Index Playback ..... 77  
Infinity ..... *Basic 3, 16*  
Interface Cable ..... *Basic 23, 27*  
ISO Speed ..... 65

## J

JUMP (Image Search) ..... 79

## L

Language ..... *Basic 9*  
LCD Monitor  
  Night Display ..... 14  
  Playback Information ..... 16  
  Quick-bright LCD ..... 14  
  Shooting Information ..... 15  
  Using the LCD Monitor ..... 12  
Long Shutter Mode ..... 53

## M

- Macro ..... *Basic* 3, 16
- Magnifying ..... 76
- Memory Card
  - Estimated Capacities ..... 140
  - Formatting ..... 29, 130
  - Handling ..... 129
  - Inserting ..... *Basic* 7
- Menu
  - FUNC. Menu ..... 22, 24
  - Menu List ..... 24
  - Menus and Settings ..... 22
  - My Camera Menu ..... 28
  - Play Menu ..... 25
  - Print Menu ..... 25
  - Rec. Menu ..... 24
  - Set up Menu ..... 26
- MENU button ..... *Basic* 3
- Messages ..... 123
- Metering Modes ..... 51
- Mode Switch ..... *Basic* 3, 11, 12
- Movie
  - Editing ..... 82
  - Playback ..... 80
  - Shooting ..... 39
- Mute ..... 26, *Basic* 10
- My Camera Menu ..... 28
- My Camera Settings ..... 110
- My Category ..... 78
- My Colors (Playback) ..... 88
- My Colors (Shooting) ..... 58

## P

- Playback ..... *Basic* 19
- Playback Button .. 100, *Basic* 10
- Postcard Mode ..... 37
- Power Button ..... *Basic* 3, 11
- Power Saving ..... 19, 26
- Print/Share Button
  - ..... *Basic* 3, 23, 31
  - Registering ..... 67
- Printing ..... *Basic* 23
- Protect ..... 98

## R

- Recording Pixels ..... 30, 42
- Red-Eye ..... 35, *Basic* 1
  - Correcting ..... 85

- Reset All ..... 28
- Review ..... 24
- Rotate ..... 83

## S

- Self-Timer ..... *Basic* 17
- Set up Menu ..... 26
- Shooting Mode
  - Auto ..... *Basic* 13
  - Color Accent ..... 60, *Basic* 13
  - Color Swap ..... 62, *Basic* 13
  - Digital Macro ..... 34, *Basic* 13
  - Movie ..... 39, *Basic* 14
  - Selecting ..... *Basic* 12
  - Special Scene ..... *Basic* 13
    - Aquarium ..... *Basic* 14
    - Beach ..... *Basic* 14
    - Fireworks ..... *Basic* 14
    - Foliage ..... *Basic* 13
    - Indoor ..... *Basic* 13
    - Kids&Pets ..... *Basic* 13
    - Night Snapshot ..... *Basic* 13
    - Portrait ..... *Basic* 13
    - Snow ..... *Basic* 13
    - Underwater ..... *Basic* 14
  - Stitch Assist ..... 44, *Basic* 13
- Shutter Button ..... *Basic* 3
  - Fully ..... *Basic* 11
  - Halfway ..... *Basic* 11
- Shutter Speed ..... 53
- Slide Show ..... 93
  - Repeat Settings ..... 97
  - Selecting ..... 96
  - Transition Effects ..... 94
- Slow Synchro ..... 35
- Smooth Continuous Shooting 36
- Sound Memo ..... 90
- Sound Recorder ..... 91
- Sound Recorder Data Rates and Recording Durations (Estimated) ..... 141
- Spot AE Point Frame ..... 51
- Spot Frame ..... 15
- System Requirements .. *Basic* 26

## T

- Telephoto ..... *Basic* 15
- Time Lapse ..... 39

Time Zone .....	20, 27
Touch Control Dial .....	<i>Basic</i> 3, 4
Transition Effects	
Playback .....	84
Slide Show .....	94

## **V**

Video System .....	101
--------------------	-----

## **W**

White Balance .....	55
Wide Angle .....	<i>Basic</i> 15
Wrist Strap .....	<i>Basic</i> 1

## **Z**

Zoom .....	<i>Basic</i> 15
------------	-----------------

# MEMO

**MEMO**

# MEMO



**MEMO**

# MEMO

**MEMO**

# MEMO

**MEMO**

# MEMO

## **FCC Notice**

(Digital Camera, Model PC1227 systems)

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions;

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for Class B digital devices, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The cable with the ferrite core provided with the digital camera must be used with this equipment in order to comply with Class B limits in Subpart B of Part 15 of the FCC rules.

Do not make any changes or modifications to the equipment unless otherwise specified in the manual. If such changes or modifications should be made, you could be required to stop operation of the equipment.

Canon U.S.A., Inc.

One Canon Plaza, Lake Success, NY 11042, U.S.A.

Tel No. (516) 328-5600

## **Canadian Radio Interference Regulations**

This Class B digital apparatus complies with Canadian ICES-003.

## **Réglementation canadienne sur les interférences radio**

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

## **Battery Charger CB-2LV**

This product is not intended to be serviced. Should the product cease to function in its intended manner, it should be returned to the manufacturer or be discarded.

This power unit is intended to be correctly orientated in a vertical or floor mount position.

### **IMPORTANT SAFETY INSTRUCTIONS-SAVE THESE INSTRUCTIONS.**

#### **DANGER-TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, CAREFULLY FOLLOW THESE INSTRUCTIONS.**

For connection to a supply not in the U.S.A., use an attachment plug adapter of the proper configuration for the power outlet.

This battery charger is for exclusive use with Battery Pack NB-4L (0.76 Ah). There is a danger of explosion if other battery packs are used.

### **For CA, USA only**

Included lithium battery contains Perchlorate Material - special handling may apply.

See [www.dtsc.ca.gov/hazardouswaste/perchlorate/](http://www.dtsc.ca.gov/hazardouswaste/perchlorate/) for details.



## **Disclaimer**

- While every effort has been made to ensure that the information contained in this guide is accurate and complete, no liability can be accepted for any errors or omissions.
- Canon reserves the right to change the specifications of the hardware and software described herein at anytime without prior notice.
- No part of this guide may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language in any form, by any means, without the prior written permission of Canon.
- Canon makes no warranties for damages resulting from corrupted or lost data due to a mistaken operation or malfunction of the camera, the software, SD memory cards (SD cards), personal computers, peripheral devices, or use of non-Canon SD cards.

## **Trademark Acknowledgments**

- Windows, Windows Vista and the Windows Vista logo are trademarks of Microsoft Corporation, registered in the U.S. and other countries.
- Macintosh, the Mac logo, Quick Time and the QuickTime logo are trademarks of Apple Computer, Inc., registered in the U.S. and other countries.
- The SDHC logo is a trademark.

# Functions Available in Each Shooting Mode

Configure the settings to the shooting conditions and shoot.

Function								SCN				Page
Recording Pixels	Large	<b>L</b>	●	●	●	●	▲	●	—	p. 30		
	Medium 1	<b>M1</b>	○	○	○	○	△	○	—			
	Medium 2	<b>M2</b>	○	○	○	○	△	○	—			
	Medium 3	<b>M3</b>	○	○	○	○	△	○	—			
	Small	<b>S</b>	○	○	○	○	△	○	—			
	Postcard		○	○	—	○	—	○	—			
	Widescreen	<b>W</b>	○	○	—	○	—	○	—			
	Movie		—	—	—	—	—	—	○ <sup>(1)</sup>	p. 42		
Compression	Super Fine		○	○	○	○	△	○	—	p. 30		
	Fine		●	●	●	●	▲	●	—			
	Normal		○	○	○	○	△	○	—			
Frame Rate			—	—	—	—	—	—	○ <sup>(1)</sup>	p. 42		
Flash	Auto		●	○ <sup>(2)</sup>	—	○	—	○ <sup>(3)(4)</sup>	—	Basic p. 15		
	On		—	○	—	○	△	○ <sup>(5)</sup>	—			
	Off		○	●	○	●	▲	○ <sup>(3)</sup>	—			
Slow Synchro			—	○ <sup>(2)</sup>	—	—	△	— <sup>(6)</sup>	—	p. 35		
Red-Eye			○	○	—	○	△	○ <sup>(5)</sup>	—	p. 35		
Macro Mode				○	○	○ <sup>(10)</sup>	○	△	○ <sup>(7)</sup>	○	Basic p. 16	
Infinity Mode				—	○	—	○	△	○ <sup>(7)</sup>	○		
AF Lock			<b>AFL</b>	—	○	○	—	—	○ <sup>(8)</sup>	p. 48		
AE Lock			<b>AEL</b>	—	○ <sup>(2)</sup>	○	—	—	○ <sup>(8)</sup>	p. 49		
FE Lock			<b>FEL</b>	—	○ <sup>(2)</sup>	—	—	—	—	p. 50		
Shooting Method	Single Shot		●	●	●	●	●	●	●	—		
	Continuous		—	○	○	—	—	○	—	p. 36		
	10 sec. Self-Timer		○	○	○	○	○	○	○	Basic p. 17		
	2 sec. Self-Timer		○	○	○	○	○	○	○			
	Custom Timer		○	○	○	—	—	○	—			
Autofocus Modes			○	○	○	○	—	○ <sup>(5)</sup>	—	p. 46		
AF-assist Beam			○	○	○	○	△	○ <sup>(5)(9)</sup>	○	p. 24		
Digital Zoom			○	○	○ <sup>(10)</sup>	—	—	○	○ <sup>(10)</sup>	p. 32		
Digital Tele-Converter			○	○	—	—	—	○	—	p. 32		

Function							SCN			Page
Metering Method	Evaluative	○	●	●	○	○	○	○	○	p. 51
	Center Weighted Avg.	—	○ <sup>(2)</sup>	○	—	—	—	—	—	
	Spot	—	○ <sup>(2)</sup>	○	—	—	—	—	—	
Exposure Compensation		—	○ <sup>(2)</sup>	○	—	△	○	—	—	p. 52
Exposure Shift		—	—	—	—	—	—	○ <sup>(8)</sup>	—	p. 41
Long Shutter		—	○	—	—	—	—	—	—	p. 53
White Balance		— <sup>(12)</sup>	○	○	— <sup>(12)</sup>	△	— <sup>(12)</sup>	○ <sup>(8)</sup>	—	p. 55
My Colors		—	○	○	—	△	—	○ <sup>(8)</sup>	—	p. 58
Save Original		—	—	—	○	—	—	—	—	p. 64
ISO Speed		○ <sup>(13)</sup>	○ <sup>(14)</sup>	○	— <sup>(12)</sup>	— <sup>(12)</sup>	— <sup>(12)</sup>	— <sup>(12)</sup>	— <sup>(12)</sup>	p. 65
Auto ISO Shift <sup>(15)</sup>		○	○ <sup>(2)</sup>	○	—	—	—	—	—	p. 66
Auto Rotate		○	○	○	○	△	○	○	—	p. 69
Auto Category		○	○	○	○	△	○	○	—	p. 24
Disp. Overlay		○	○	○	○	—	○	○ <sup>(16)</sup>	—	p. 38
Set  button		○	○	○	○	△	○	○	—	p. 67

○ Setting available. (● Default setting)

△ Setting can only be selected for the first image. (▲ Default setting)

■ (Shaded Area): Setting is retained even when the camera power is shut off.

(1) For (Movie) recording pixels and frame rates, see p. 42.

(2) Cannot be selected in Long Shutter mode.

(3) Default flash settings are as follows.

- : Auto
- : Flash Off

(4) Cannot be set in the or mode.

(5) Cannot be set in the mode.

(6) In mode, this is set to [On]. (It cannot be configured to the [Off] setting.)

(7) The Macro/Infinity modes cannot be selected when the camera is in the or mode.

(8) Cannot be selected in the or mode.

(9) Can only be set when the flash setting is [On] in the mode.

(10) [Off] cannot be selected.

(11) Can only be set and used in the mode.

(12) Automatically set by the camera.

(13) Only or can be selected.

(14) and cannot be selected in Long Shutter mode.

(15) Cannot be used with , , or .

(16) Only [Grid Lines] can be used in the mode.