


Power Supply-B1 Installation Procedure

Install the Power Supply-B1 as instructed in this booklet.

1. Unpacking

Unpack the shipping box, and check its contents:

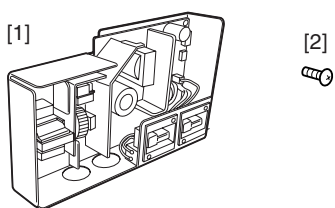


F1-1

- [1] Power supply 1 unit
[2] Screw (M4x6) 2 pc.


2. Installation

- 1) Remove the rear cover [1] of the host machine.

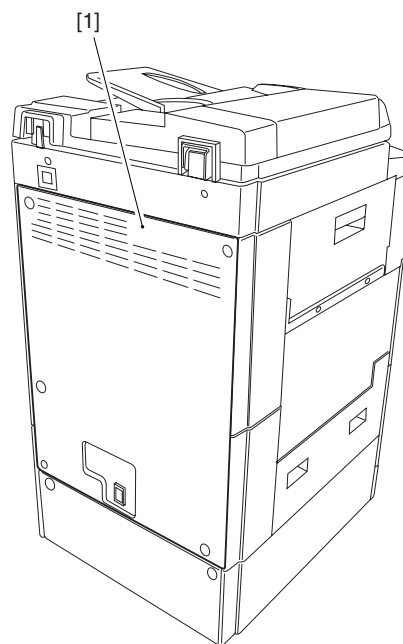


F2-1

- 2) Place the power supply [1] along the bend of the plate, and secure it in place with two screws [2].

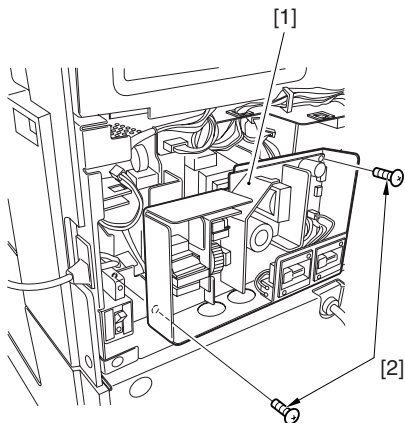


F2-2

- 3) Connect the connector [1] of the cord from the power supply to the connector of the host machine.

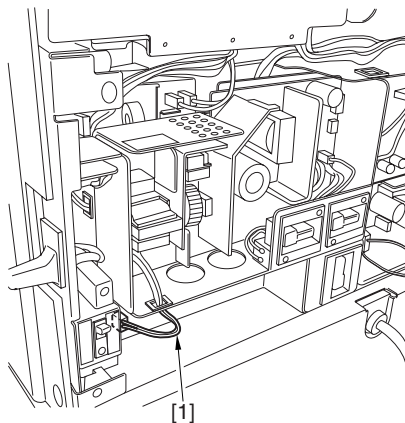


F2-3

- 4) Open the cord clamp [1] on the harness on the right top of the power supply, and lead the harness that connects to four connectors.

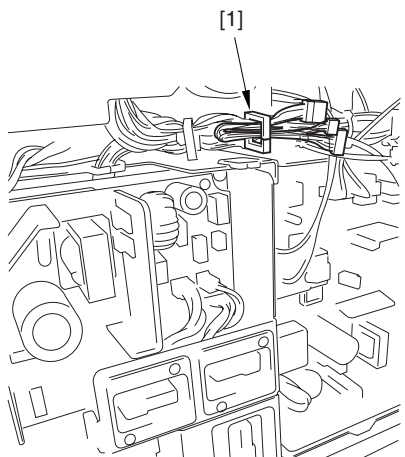


F2-4

- 5) Connect the four connectors [1] to the right top of the power supply.

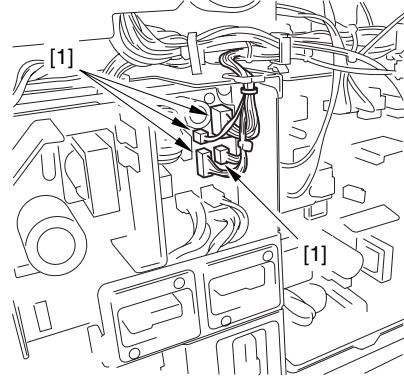


F2-5

- 6) Remove the face plate [1] found at the bottom of the rear cover of the host machine. (2 screws; one of the screws and the face plate will no longer be used)

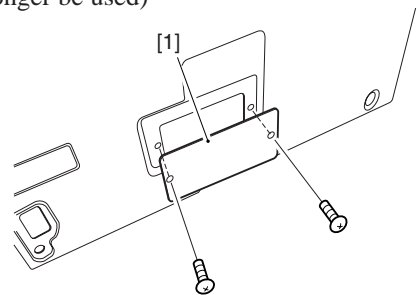

F2-6

- 7) Mount the rear cover of the host machine. Use one of the screws [1] removed in the previous step into the hole above the power supply connector.

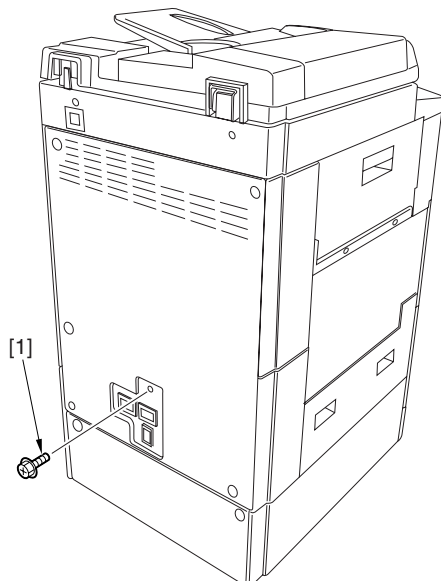

F2-7