

Service Manual

iR C6800 Series

iR C6800C

Canon

Apr 6 2004

Application

This manual has been issued by Canon Inc. for qualified persons to learn technical theory, installation, maintenance, and repair of products. This manual covers all localities where the products are sold. For this reason, there may be information in this manual that does not apply to your locality.

Corrections

This manual may contain technical inaccuracies or typographical errors due to improvements or changes in products. When changes occur in applicable products or in the contents of this manual, Canon will release technical information as the need arises. In the event of major changes in the contents of this manual over a long or short period, Canon will issue a new edition of this manual.

The following paragraph does not apply to any countries where such provisions are inconsistent with local law.

Trademarks

The product names and company names used in this manual are the registered trademarks of the individual companies.

Copyright

This manual is copyrighted with all rights reserved. Under the copyright laws, this manual may not be copied, reproduced or translated into another language, in whole or in part, without the written consent of Canon Inc.

COPYRIGHT © 2001 CANON INC.










Printed in Japan

Caution

Use of this manual should be strictly supervised to avoid disclosure of confidential information.


 
Symbols Used

This documentation uses the following symbols to indicate special information:

Symbol	Description
	Indicates an item of a non-specific nature, possibly classified as Note, Caution, or Warning.
	Indicates an item requiring care to avoid electric shocks.
	Indicates an item requiring care to avoid combustion (fire).
	Indicates an item prohibiting disassembly to avoid electric shocks or problems.
	Indicates an item requiring disconnection of the power plug from the electric outlet.
 Memo	Indicates an item intended to provide notes assisting the understanding of the topic in question.
 REF.	Indicates an item of reference assisting the understanding of the topic in question.
	Provides a description of a service mode.
	Provides a description of the nature of an error indication.

The following rules apply throughout this Service Manual:

1. Each chapter contains sections explaining the purpose of specific functions and the relationship between electrical and mechanical systems with reference to the timing of operation.

In the diagrams,  represents the path of mechanical drive; where a signal name accompanies the symbol, the arrow  indicates the direction of the electric signal.

The expression "turn on the power" means flipping on the power switch, closing the front door, and closing the delivery unit door, which results in supplying the machine with power.

2. In the digital circuits, '1' is used to indicate that the voltage level of a given signal is "High", while '0' is used to indicate "Low". (The voltage value, however, differs from circuit to circuit.) In addition, the asterisk (*) as in "DRMD*" indicates that the DRMD signal goes on when '0'.

In practically all cases, the internal mechanisms of a microprocessor cannot be checked in the field. Therefore, the operations of the microprocessors used in the machines are not discussed: they are explained in terms of from sensors to the input of the DC controller PCB and from the output of the DC controller PCB to the loads.

The descriptions in this Service Manual are subject to change without notice for product improvement or other purposes, and major changes will be communicated in the form of Service Information bulletins.

All service persons are expected to have a good understanding of the contents of this Service Manual and all relevant Service Information bulletins and be able to identify and isolate faults in the machine."

Contents

Chapter 1 Introduction

1.1 System Construction.....	1-1
1.1.1 System Configuration with Pickup/Delivery Accessories	1-1
1.1.2 System Configuration with Printing/Transmission Accessories	1-2
1.1.3 Functions of Printing/Transmitting Accessories	1-3
1.2 Product Specifications.....	1-4
1.2.1 Names of Parts	1-4
1.2.2 Using the Machine	1-8
1.2.3 User Mode Items.....	1-11
1.2.4 User Maintenance	1-18
1.2.5 Safety	1-22
1.2.6 Product Specifications	1-24
1.2.7 Function List	1-27

Chapter 2 Installation

2.1 Making Pre-Checks	2-1
2.1.1 Selecting the Site of Installation.....	2-1
2.1.2 Installation Environment	2-3
2.1.3 Checking the Contents.....	2-4
2.2 Unpacking and Installation.....	2-6
2.2.1 Before Starting the Work	2-6
2.2.2 Unpacking the Machine.....	2-6
2.2.3 Mounting the Pickup Assembly	2-9
2.2.4 Mounting the Scanner System.....	2-9
2.2.5 Locking the Primary Transfer Roller in Place.....	2-10
2.2.6 Before Mounting the Developing Assembly.....	2-10
2.2.7 Mounting the Color Developing Assemblies	2-14
2.2.8 Mounting the Black Developing Assembly	2-17
2.2.9 Mounting the Process Unit.....	2-19
2.2.10 Mounting the Fixing Assembly	2-23
2.2.11 Fitting the Black Toner Bottle.....	2-24
2.2.12 Checking the Environment Switch.....	2-25
2.2.13 Turning On the Main Power Switch.....	2-26
2.2.14 Setting Up the Paper Cassette	2-26
2.2.15 Changing the Deck Paper Size (right, left).....	2-27
2.2.16 Fitting the Color Toner Cartridge.....	2-28
2.2.17 Supplying Black Toner.....	2-29
2.2.18 Cleaning the Intermediate Transfer Belt	2-29
2.2.19 Supplying Color Toner.....	2-29
2.2.20 Setting Auto Gradation Correction.....	2-30
2.2.21 Checking the Image/Operation.....	2-30
2.2.22 Adjusting the Horizontal Registration.....	2-30
2.2.23 Adjusting the Leading Edge Registration	2-33
2.2.24 Securing the Machine in Place	2-33
2.2.25 If Not Connected to a Network	2-34

2.3	Checking the Connection to the Network.....	2-35
2.3.1	Overview.....	2-35
2.3.2	Using the PING Utility.....	2-35
2.3.3	Using a Remote Host Address.....	2-35
2.4	Troubleshooting the Network.....	2-36
2.4.1	Overview.....	2-36
2.4.2	Checking the Connection of the Network Cable.....	2-36
2.4.3	Using a Loopback Address.....	2-36
2.4.4	Using a Local Host Address.....	2-36
2.5	Relocating the Machine.....	2-37
2.5.1	Relocating the Machine.....	2-37
2.6	Installing the Card Reader-C1.....	2-38
2.6.1	Points to Note About Installation.....	2-38
2.6.2	Checking the Contents.....	2-38
2.6.3	Installation.....	2-39
2.6.4	Using the Card Reader in Combination with NetSpot Accountant (hereafter, NSA).....	2-41
2.7	Installing the NE Controller-A1.....	2-42
2.7.1	NE Controller-A1 Installation Procedure.....	2-42
2.8	Installing the Original Tray.....	2-51
2.8.1	Checking the Contents.....	2-51
2.8.2	Installation.....	2-51
2.9	Installing the Key Switch Unit-A1.....	2-53
2.9.1	Checking the Contents.....	2-53
2.9.2	Installation.....	2-53

Chapter 3 Basic Operation

3.1	Construction.....	3-1
3.1.1	Functional Construction.....	3-1
3.1.2	Arrangement of the Major PCBs.....	3-3
3.1.3	DC Controller.....	3-4
3.2	Basic Sequence.....	3-6
3.2.1	Basic Sequence of Operation at Power-On.....	3-6
3.2.2	Basic Sequence of Control During Printing (full-color).....	3-8
3.2.3	Basic Sequence of Operation During Printing (mono color).....	3-9

Chapter 4 Main Controller

4.1	Construction.....	4-1
4.1.1	Functional Construction.....	4-1
4.2	Construction of the Electrical Circuitry.....	4-3
4.2.1	Main Controller PCB (main).....	4-3
4.2.2	Main Controller PCB (sub).....	4-5
4.2.3	Expansion Bus PCB.....	4-6
4.2.4	SRAM PCB.....	4-6
4.2.5	HDD.....	4-7
4.3	Start-Up Sequence.....	4-9
4.3.1	Overview.....	4-9
4.3.2	Start-Up Sequence.....	4-10
4.4	Actions when HDD Error.....	4-12
4.4.1	E602 in Detail.....	4-12
4.4.2	E609 in Detail.....	4-16

4.5 Image Processing	4-17
4.5.1 Overview of the Flow of Image Data	4-17
4.5.2 Construction of the Image Processing Modules	4-18
4.5.3 Reader Input Image Processing	4-19
4.5.4 Compression/Decompression and Editing Blocks	4-20
4.5.5 Printer Output Image Processing	4-21
4.6 Flow of Image Data	4-22
4.6.1 Flow of Image Data (copier function)	4-22
4.6.2 Flow of Image Data (Box function)	4-23
4.6.3 Flow of Image Data (SEND function)	4-24
4.6.4 Flow of Image Data (fax transmission)	4-25
4.6.5 Image Data Flow for Fax Reception Functions	4-26
4.6.6 Flow of Image Data (PDL function)	4-27
4.7 Parts Replacement Procedure	4-28
4.7.1 Controller Box	4-28
4.7.2 Main Controller PCB (main)	4-31
4.7.3 Main Controller PCB (sub)	4-35
4.7.4 Expansion Bus PCB	4-36
4.7.5 SRAM PCB	4-38
4.7.6 UFR Board	4-40
4.7.7 Ethernet Board	4-41
4.7.8 HDD	4-43
4.7.9 Controller Fan	4-45

Chapter 5 Original Exposure System

5.1 Construction	5-1
5.1.1 Specifications, Control Mechanisms, and Functions	5-1
5.1.2 Major Components	5-2
5.1.3 Construction of the Control System	5-4
5.1.4 Reader Controller PCB	5-4
5.2 Basic Sequence	5-6
5.2.1 Basic Sequence of Operation at Power-On	5-6
5.2.2 Basic Sequence of Operation in Response to a Press on the Start Key	5-7
5.3 Various Control	5-9
5.3.1 Controlling the Scanner Drive System	5-9
5.3.2 Enlargement/Reduction	5-11
5.3.3 Controlling the Scanning Lamp	5-11
5.3.4 Detecting the Size of Originals	5-12
5.3.5 Dirt Sensor Control	5-16
5.3.6 Image Processing	5-20
5.4 Parts Replacement Procedure	5-23
5.4.1 Copyboard Glass	5-23
5.4.2 Exposure Lamp	5-23
5.4.3 Reader Controller PCB	5-27
5.4.4 Interface PCB	5-30
5.4.5 Inverter PCB	5-32
5.4.6 CCD Unit	5-33
5.4.7 Scanner Motor	5-35
5.4.8 ADF Open/Close Sensor	5-37
5.4.9 Scanner HP Sensor	5-39
5.4.10 Original Sensor	5-41
5.4.11 Cooling Fan	5-42
5.4.12 Scanner Drive Cable	5-43

Chapter 6 Laser Exposure

6.1 Construction.....	6-1
6.1.1 Specifications, Control Mechanisms, and Functions.....	6-1
6.1.2 Major Components	6-2
6.1.3 Construction of the Control System	6-3
6.2 Basic Sequence	6-4
6.2.1 Basic Sequence of Operation.....	6-4
6.3 Various Control	6-5
6.3.1 Controlling the Laser Activation Timing	6-5
6.3.2 Controlling the Intensity of Laser Light.....	6-8
6.3.3 Controlling the Laser Scanner Motor.....	6-9
6.3.4 Controlling the Laser Shutter	6-10
6.4 Parts Replacement Procedure	6-11
6.4.1 Laser Scanner Unit.....	6-11

Chapter 7 Image Formation

7.1 Construction.....	7-1
7.1.1 Specifications of the Image Formation System	7-1
7.1.2 Major Components	7-4
7.1.3 Charging System.....	7-5
7.2 Image Formation Process	7-7
7.2.1 Image Formation Process	7-7
7.3 Basic Sequence	7-9
7.3.1 At Time of Power-On	7-9
7.3.2 During Copying/Printing (normal speed)	7-10
7.3.3 During Copying/Printing (2/3 speed, 1/3 speed)	7-10
7.4 Image Stabilization Control.....	7-11
7.4.1 Overview of Image Stabilization Control.....	7-11
7.4.2 Timing of Image Stabilization Control.....	7-12
7.4.3 Potential Control.....	7-15
7.4.4 ATVC Control	7-19
7.4.5 ATR Control.....	7-21
7.4.6 ACR Control (Auto Carrier Refresh Control)	7-24
7.4.7 D-max Control.....	7-25
7.4.8 D-half Control.....	7-26
7.4.9 PASCAL control	7-29
7.5 Charging Mechanism.....	7-32
7.5.1 Controlling the Primary Charging Bias	7-32
7.5.2 Controlling the Primary Charging Assembly Cleaning Mechanism	7-33
7.5.3 Controlling the Pre-Transfer Charging Bias.....	7-34
7.5.4 Controlling the Pre-Transfer Charging Assembly Cleaning Mechanism.....	7-34
7.5.5 Pre-Exposure LED.....	7-36
7.6 Developing Rotary.....	7-37
7.6.1 Overview of the Developing Rotary	7-37
7.6.2 Controlling the Developing Rotary	7-38
7.7 Developing Unit.....	7-41
7.7.1 Construction of the Color Developing Assembly.....	7-41
7.7.2 Controlling the Color Developing Assembly Drive Mechanism	7-42
7.7.3 Controlling the Color Developing Bias	7-43
7.7.4 Color Toner Supply	7-44
7.7.5 Detecting the Level of Color Toner.....	7-45
7.7.6 Construction of the Black Developing Assembly	7-48

7.7.7 Controlling the Black Developing Assembly Drive Mechanism	7-49
7.7.8 Black Toner Supply	7-50
7.7.9 Controlling the Black Developing Bias	7-52
7.8 Transfer Device	7-53
7.8.1 Overview of the Transfer Assembly	7-53
7.8.2 Controlling the Transfer Bias	7-54
7.8.3 Overview of the Primary Transfer Assembly	7-56
7.8.4 Controlling the ITB Cleaner Shifting Mechanism	7-57
7.8.5 Checking the ITB Cleaner Position	7-58
7.8.6 Overview of the Secondary Transfer Assembly	7-59
7.8.7 Controlling the Movement of the Secondary Transfer Roller	7-60
7.8.8 Checking the Location of the Secondary Transfer Roller	7-61
7.8.9 Detecting the ITB Home Position	7-62
7.8.10 Separation	7-64
7.9 Photosensitive Drum Cleaning	7-65
7.9.1 Overview of the Drum Cleaning Unit	7-65
7.9.2 Controlling the Drum Cleaning Unit Drive Mechanism	7-66
7.10 Waste Toner Collection Mechanism	7-67
7.10.1 Collection of Waste Toner	7-67
7.10.2 Detecting the State of the Waste Toner Bottle (full)	7-68
7.11 Parts Replacement Procedure	7-71
7.11.1 Process Unit	7-71
7.11.2 Pre-exposure LED Array	7-78
7.11.3 Primary Charging Assembly	7-84
7.11.4 Primary Charging Assembly Cleaning Motor	7-86
7.11.5 Pre-transfer Charging Assembly	7-89
7.11.6 Pre-transfer Charging Assembly Cleaning Motor	7-90
7.11.7 Photosensitive Drum Cleaning Unit	7-90
7.11.8 Photosensitive Drum	7-96
7.11.9 Drum Motor	7-108
7.11.10 Drum Heater	7-111
7.11.11 Drum Heater PCB	7-123
7.11.12 Photosensitive Drum Cleaning Blade	7-136
7.11.13 Photosensitive Drum Cleaner Edge Scraper	7-143
7.11.14 Hopper Assembly	7-149
7.11.15 Hopper Supply Motor	7-151
7.11.16 Hopper String Motor	7-154
7.11.17 Color Developing Assembly	7-157
7.11.18 Black Developing Assembly	7-169
7.11.19 Black Developing Cylinder	7-177
7.11.20 Black Developing Clutch	7-186
7.11.21 Color Toner Supply Clutch	7-189
7.11.22 Color Developing Clutch	7-191
7.11.23 Cleaning Assembly Scoop-Up Sheet	7-195
7.11.24 Secondary Transfer Unit	7-202
7.11.25 ITB Cleaning Unit	7-203
7.11.26 ITB Cleaner End Scraper	7-209
7.11.27 Intermediate Transfer Unit	7-214
7.11.28 Intermediate Transfer Belt	7-219
7.11.29 ITB Home Position Sensor PCB	7-225
7.11.30 Secondary Transfer Roller Shift Motor	7-225
7.11.31 Primary Transfer Roller	7-226
7.11.32 Secondary Transfer Internal Roller	7-234
7.11.33 Secondary Transfer Roller	7-240

7.11.34 ITB Cleaning Blade.....	7-242
7.11.35 ITB Scoop-up Sheet	7-249
7.11.36 Intermediate Transfer Belt Static Eliminator	7-254
7.11.37 Secondary Transfer Static Eliminator	7-260
7.11.38 Potential Sensor Unit.....	7-261
7.11.39 ATR Sensor Unit.....	7-268
7.11.40 Patch Image Sensor	7-274
7.11.41 Idle Roller.....	7-280
7.11.42 Patch Image Reading Sensor Shutter Solenoid	7-287
7.11.43 Charging Wire	7-293

Chapter 8 Pickup/Feeding System

8.1 Construction.....	8-1
8.1.1 Specifications, Control Mechanisms, and Functions.....	8-1
8.1.2 Major Divisions of the Machine	8-2
8.1.3 Arrangement of Rollers	8-3
8.1.4 Diagram of the Paper Path.....	8-5
8.1.5 Arrangement of Sensors	8-6
8.1.6 Arrangement of Solenoids	8-8
8.1.7 Arrangement of Drive Mechanisms.....	8-9
8.2 Basic Sequence	8-10
8.2.1 Basic Sequence of Operation (in response to a press on the Start key).....	8-10
8.2.2 Interval Acceleration	8-12
8.2.3 Stopping the Paper Before Registration	8-16
8.3 Detecting Jams.....	8-17
8.3.1 Delivery Jams	8-17
8.3.2 Stationary Jams	8-19
8.3.3 Other Jams.....	8-21
8.4 Cassette.....	8-22
8.4.1 Overview.....	8-22
8.4.2 Identifying Paper Sizes	8-23
8.4.3 Setting the Universal Cassette	8-25
8.4.4 Checking the Level of Remaining Paper	8-26
8.5 Cassette Pick-Up Unit.....	8-28
8.5.1 Overview.....	8-28
8.5.2 Basic Sequence	8-29
8.5.3 Movement of the Lifter.....	8-30
8.6 Manual Feed Pickup Unit	8-31
8.6.1 Overview.....	8-31
8.6.2 Basic Sequence	8-32
8.6.3 Identifying the Size of Paper	8-32
8.6.4 Identifying the Last Sheet.....	8-33
8.7 Deck.....	8-34
8.7.1 Overview.....	8-34
8.7.2 Basic Sequence	8-35
8.7.3 Identifying the Size of Paper	8-36
8.7.4 Checking the Level of Remaining Paper	8-37
8.8 Registration Unit.....	8-38
8.8.1 Overview.....	8-38
8.9 Duplex Feeding Unit.....	8-39
8.9.1 Overview.....	8-39
8.9.2 Detecting the Horizontal Registration Position	8-43
8.9.3 A5, 5 Sheets in Circulation	8-45
8.9.4 A3, 3 Sheets in Circulation	8-47

8.10 Delivery	8-49
8.10.1 Overview	8-49
8.10.2 Face-Up Delivery	8-49
8.10.3 Face-Down Delivery	8-50
8.11 Parts Replacement Procedure	8-53
8.11.1 Cassette Pickup Unit	8-53
8.11.2 Cassette Pickup Motor	8-53
8.11.3 Cassette Lifter Motor	8-54
8.11.4 Left Deck Lifter Motor	8-55
8.11.5 Right Deck Lifter Motor	8-56
8.11.6 Left Deck Pickup Motor	8-58
8.11.7 Right Deck Pickup Motor	8-59
8.11.8 Vertical Path Motor.....	8-60
8.11.9 Right Deck Pull-Off Motor	8-61
8.11.10 Cassette Paper Level Sensor (A/B).....	8-62
8.11.11 Left Deck Paper Level Sensor	8-64
8.11.12 Right Deck Pickup Assembly	8-66
8.11.13 Left Deck Pickup Assembly	8-67
8.11.14 Right Deck Pickup/Feed/Separation Roller	8-68
8.11.15 Left Deck Pickup/Feed/Separation Roller	8-69
8.11.16 Cassette Pickup/Feed/Separation Roller	8-70
8.11.17 Manual Feed Unit	8-71
8.11.18 Manual Feed Roller.....	8-71
8.11.19 Manual Feed Separation Roller	8-72
8.11.20 Manual Feed Pre-Registration Motor	8-73
8.11.21 Horizontal Registration Assembly	8-77
8.11.22 Registration Motor	8-79
8.11.23 Horizontal Registration Motor	8-81
8.11.24 Duplex Reversal Motor.....	8-84
8.11.25 Duplex Left Motor	8-84
8.11.26 Duplex Middle Motor	8-86
8.11.27 Duplex Right Motor	8-87
8.11.28 Outside Delivery Motor	8-88

Chapter 9 Fixing System

9.1 Construction	9-1
9.1.1 Specifications, Control Mechanisms, and Functions	9-1
9.1.2 Major Components	9-2
9.1.3 Construction of the Control System	9-5
9.2 Basic Sequence.....	9-6
9.2.1 Sequence of Operation at Power-On	9-6
9.2.2 Basic Sequence of Operation (printing)	9-7
9.3 Various Control Mechanisms	9-9
9.3.1 Controlling the Speed of the Fixing Roller.....	9-9
9.3.2 Controlling the Fixing Roller Temperature	9-12
9.3.3 External Heat Roller Drive Control	9-17
9.4 Fixing Cleaning Web Mechanisms	9-19
9.4.1 Overview	9-19
9.4.2 Web Retaining Mechanism	9-20
9.5 Protective Functions	9-22
9.5.1 Detecting Overheating Using Thermistors.....	9-22
9.5.2 Cutting Off the Power Using Thermal Switches.....	9-22
9.5.3 Errors	9-22

9.6 Parts Replacement Procedure	9-24
9.6.1 Fixing Unit	9-24
9.6.2 Fixing Roller	9-25
9.6.3 Pressure Roller	9-29
9.6.4 External Heat Roller	9-32
9.6.5 Fixing Thermistor (Upper)	9-36
9.6.6 Fixing Thermistor (Lower).....	9-38
9.6.7 External Heat Thermistor	9-41
9.6.8 Fixing Thermal Switch.....	9-43
9.6.9 Fixing Locking Thermal Switch	9-45
9.6.10 Thermal Switch	9-48
9.6.11 Upper Fixing Heater.....	9-50
9.6.12 Lower Fixing Roller	9-52
9.6.13 Fixing Locking Heater	9-54
9.6.14 Fixing Web.....	9-57
9.6.15 Fixing Motor	9-60
9.6.16 External Heater Shift Motor.....	9-61
9.6.17 Upper Separation Claw	9-62
9.6.18 Lower Separation Claw	9-62

Chapter 10 Externals and Controls

10.1 Control Panel	10-1
10.1.1 Overview.....	10-1
10.1.2 LCD Processing.....	10-2
10.1.3 LCD Contrast Adjustment	10-2
10.1.4 Control Panel CPU	10-2
10.2 Counters.....	10-3
10.2.1 Overview.....	10-3
10.2.2 Increasing the Count	10-6
10.3 Fans.....	10-7
10.3.1 Overview.....	10-7
10.3.2 Sequence of Operations	10-9
10.4 Power Supply.....	10-10
10.4.1 Power Supply	10-10
10.4.2 Rated Output of DC Power Supply PCB	10-14
10.4.3 Protection Function	10-15
10.4.4 Backup Battery	10-17
10.5 Parts Replacement Procedure	10-18
10.5.1 Hopper Drive Unit.....	10-18
10.5.2 Power Cord Base.....	10-21
10.5.3 Control Panel.....	10-23
10.5.4 DC Controller PCB	10-25
10.5.5 Printer Power Supply PCB	10-26
10.5.6 Leakage Breaker.....	10-27
10.5.7 Fixing Relay	10-29
10.5.8 Relay PCB	10-29
10.5.9 DC Relay	10-30
10.5.10 HV1 PCB.....	10-30
10.5.11 HV2 PCB.....	10-33
10.5.12 HV3 PCB.....	10-34
10.5.13 Fixing/Feed Driver PCB.....	10-36
10.5.14 Pickup Driver PCB.....	10-37
10.5.15 Switch PCB	10-38

10.5.16 Primary Exhaust Fan	10-39
10.5.17 Fixing Heat Discharge Fan	10-42
10.5.18 Power Supply Cooling Fan	10-46
10.5.19 Delivery Cooling Fan 1	10-47
10.5.20 Delivery Cooling Fan 2	10-48
10.5.21 Ozone Filter	10-49
10.5.22 Toner Filter	10-50
10.5.23 Sub Toner Filter	10-51

Chapter 11 Maintenance and Inspection

11.1 Periodically Replaced Parts	11-1
11.1.1 Overview	11-1
11.1.2 Reader Unit	11-1
11.1.3 Printer Unit	11-2
11.2 Durables and Consumables	11-3
11.2.1 Overview	11-3
11.2.2 Reader Unit	11-3
11.2.3 Printer Unit	11-4
11.3 Scheduled Servicing Basic Procedure	11-5
11.3.1 Scheduled Servicing Basic Procedure	11-5
11.3.2 Scheduled Servicing (reader unit)	11-6
11.3.3 Scheduled Servicing (printer unit)	11-7
11.3.4 Shifting the Photosensitive Drum Phase	11-13
11.4 Cleaning	11-21
11.4.1 Cleaning the Secondary Transfer Rear Guide	11-21
11.4.2 Cleaning the Registration Roller, Registration Guide, and Transparency Sensor	11-22

Chapter 12 Standards and Adjustments

12.1 Image Adjustment Basic Procedure	12-1
12.1.1 Image Adjustment Basic Procedure 1	12-1
12.1.2 Image Adjustment Basic Procedure 2	12-3
12.1.3 Image Adjustment Basic Procedure 3	12-4
12.1.4 Image Adjustment Basic Procedure 4	12-5
12.1.5 Image Adjustment Basic Procedure 5	12-6
12.1.6 Image Adjustment Basic Procedure 6	12-7
12.1.7 Potential Control Conversion Table	12-8
12.2 Image Adjustments	12-16
12.2.1 Image Position	12-16
12.2.2 Checking the Image Position	12-16
12.2.3 Cassette	12-17
12.2.4 Manual Feed Tray	12-18
12.2.5 Front Deck	12-18
12.3 Scanning System	12-20
12.3.1 After Replacing the CCD Unit	12-20
12.3.2 After Replacing the Copyboard Glass	12-21
12.3.3 After Replacing the Reader Controller PCB or Initializing the RAM	12-21
12.4 Laser Exposure System	12-23
12.4.1 After Replacing the Laser Scanner	12-23
12.5 Image Formation System	12-23
12.5.1 After Replacing the Black Developing Unit	12-23
12.5.2 Points to Note When Mounting the Polarity Positioning Plate	12-23
12.5.3 Replacing the Color Developing Unit	12-24

12.5.4 Replacing the Starter of the Color Developing Unit	12-26
12.5.5 After Replacing the Primary Charging Assembly	12-29
12.5.6 After Replacing the Primary Charging Wire	12-29
12.5.7 After Replacing the Pre-Transfer Charging Wire.....	12-29
12.5.8 After Replacing the Pre-Transfer Charging Wire.....	12-29
12.5.9 After Replacing the Waste Toner Box.....	12-29
12.5.10 After Replacing the ITB Cleaning Blade.....	12-29
12.5.11 After Repacking the Photosensitive Drum Cleaning Blade	12-31
12.5.12 Replacing the Photosensitive Drum.....	12-32
12.5.13 Points to Note When Replacing the Drum Heater	12-33
12.5.14 Points to Note When Replacing the Drum Heater PCB	12-34
12.5.15 After Repacking the ITB	12-35
12.5.16 After Replacing the Primary Transfer Roller	12-35
12.6 Fixing System	12-37
12.6.1 Points to Note When Mounting the Fixing Assembly.....	12-37
12.6.2 After Replacing the Fixing Roller	12-37
12.6.3 After Replacing the Fixing Web.....	12-37
12.6.4 Position of the Fixing inlet Guide.....	12-38
12.6.5 Points to Note When Mounting the Pressure Roller.....	12-38
12.6.6 Adjusting the Nip Pressure of the Pressure Roller	12-38
12.6.7 Adjusting the Position of the Feeding Web Solenoid (SL2)	12-39
12.6.8 Points to Note About the Position of the Fixing Thermal Switch	12-39
12.6.9 Points to Note When Mounting the Shift Thermal Switch.....	12-39
12.6.10 Points to Note When Mounting the Outside Heating Roller Thermal Switch	12-40
12.6.11 Points to Note When Mounting the Fixing Upper Thermistor	12-40
12.6.12 Points to Note When Mounting the Fixing Lower Thermistor.....	12-40
12.6.13 Points to Note When Mounting the External Heat Thermistor	12-41
12.7 Electrical Components.....	12-41
12.7.1 When Replacing the Reader Controller PCB	12-41
12.7.2 After Replacing the DC Controller PCB	12-42
12.7.3 Points to Note When Mounting the DC Controller PCB/ DC Controller Box	12-43
12.7.4 After Replacing the Main Controller PCB (main).....	12-44
12.7.5 After Repacking the SRAM Board.....	12-44
12.7.6 After Replacing the HDD	12-44
12.7.7 When Replacing the HV2 PCB	12-45
12.7.8 When Replacing the ATR Sensor/Patch Image Read Sensor.....	12-46
12.8 Pickup/Feeding System	12-46
12.8.1 Adjusting the Horizontal Registration After Replacing the Pickup Cassette	12-46
12.8.2 Adjusting the Manual Feed Pickup Horizontal Registration	12-47
12.8.3 Adjusting the Front Deck Pickup Horizontal Registration.....	12-47
12.8.4 Registering the Paper Width Basic Value	12-49

Chapter 13 Correcting Faulty Images

13.1 Making Initial Checks.....	13-1
13.1.1 Checking the Site Environment	13-1
13.1.2 Checking the Paper	13-1
13.1.3 Checking the Placement of Paper	13-1
13.1.4 Checking the Durables.....	13-1
13.1.5 Checking the Periodically Replaced Parts	13-1
13.1.6 Checking the Units and Functional Blocks	13-1
13.1.7 Others.....	13-3
13.2 Test Print.....	13-4
13.2.1 Overview.....	13-4

13.2.2 Test Print TYPE	13-4
13.2.3 Selecting Test Print TYPE	13-4
13.2.4 16-Gradation (TYPE=4).....	13-5
13.2.5 Full Page Halftone (TYPE=5).....	13-6
13.2.6 Grid (TYPE=6).....	13-7
13.2.7 MCYBk Horizontal Stripes (TYPE=10).....	13-8
13.2.8 64-Gradation (TYPE=12).....	13-9
13.2.9 Full Color 16-Gradation (TYPE=14)	13-9
13.3 Troubleshooting.....	13-10
13.3.1 Symptoms	13-11
13.3.2 Image Faults	13-16
13.3.3 Faulty Feeding	13-63
13.3.4 Malfunction.....	13-65
13.3.5 Error Code.....	13-69
13.4 Outline of Electrical Components	13-77
13.4.1 Clutch/Solenoid.....	13-77
13.4.2 Motor.....	13-79
13.4.3 Fan.....	13-84
13.4.4 Sensor.....	13-87
13.4.5 Switch	13-95
13.4.6 Lamps, Heaters, and Others	13-97
13.4.7 PCBs	13-100
13.4.8 Variable Resistors (VR), Light-Emitting Diodes (LED), and Check Pins by PCB.....	13-103

Chapter 14 Self Diagnosis

14.1 Error Code Table.....	14-1
14.1.1 Error Code	14-1
14.2 Error Codes (SEND)	14-4
14.2.1 Self-Diagnostic Display	14-4
14.2.2 List of Error Codes without Messages	14-7
14.3 Error Code Details.....	14-14
14.3.1 Error Code Description	14-14
14.3.2 E000.....	14-14
14.3.3 E001.....	14-16
14.3.4 E002.....	14-16
14.3.5 E003.....	14-17
14.3.6 E004.....	14-18
14.3.7 E005.....	14-20
14.3.8 E006.....	14-20
14.3.9 E008.....	14-20
14.3.10 E009.....	14-21
14.3.11 E012.....	14-21
14.3.12 E013.....	14-21
14.3.13 E014.....	14-22
14.3.14 E020.....	14-22
14.3.15 E021.....	14-25
14.3.16 E023.....	14-25
14.3.17 E025.....	14-25
14.3.18 E032.....	14-26
14.3.19 E043.....	14-26
14.3.20 E051.....	14-26
14.3.21 E061.....	14-27
14.3.22 E070.....	14-27

14.3.23 E073	14-28
14.3.24 E077	14-28
14.3.25 E078	14-28
14.3.26 E079	14-28
14.3.27 E100	14-29
14.3.28 E110	14-29
14.3.29 E197	14-30
14.3.30 E202	14-30
14.3.31 E225	14-30
14.3.32 E227	14-31
14.3.33 E240	14-31
14.3.34 E248	14-31
14.3.35 E351	14-32
14.3.36 E400	14-32
14.3.37 E413	14-32
14.3.38 E490	14-33
14.3.39 E500	14-33
14.3.40 E503	14-33
14.3.41 E505	14-34
14.3.42 E514	14-34
14.3.43 E519	14-35
14.3.44 E530	14-35
14.3.45 E531	14-36
14.3.46 E532	14-36
14.3.47 E535	14-37
14.3.48 E537	14-37
14.3.49 E540	14-38
14.3.50 E542	14-38
14.3.51 E584	14-39
14.3.52 E590	14-39
14.3.53 E591	14-40
14.3.54 E592	14-40
14.3.55 E593	14-41
14.3.56 E5F0	14-41
14.3.57 E5F1	14-41
14.3.58 E5F2	14-42
14.3.59 E5F3	14-42
14.3.60 E5F4	14-42
14.3.61 E5F5	14-43
14.3.62 E5F6	14-43
14.3.63 E5F8	14-44
14.3.64 E5F9	14-44
14.3.65 E602	14-45
14.3.66 E602 in Detail	14-45
14.3.67 E604	14-49
14.3.68 E609	14-49
14.3.69 E674	14-49
14.3.70 E677	14-50
14.3.71 E710	14-50
14.3.72 E711	14-50
14.3.73 E713	14-51
14.3.74 E717	14-51
14.3.75 E719	14-51
14.3.76 E730	14-52

14.3.77 E731.....	14-53
14.3.78 E732.....	14-53
14.3.79 E733.....	14-54
14.3.80 E740.....	14-54
14.3.81 E743.....	14-54
14.3.82 E744.....	14-55
14.3.83 E745.....	14-55
14.3.84 E746.....	14-56
14.3.85 E747.....	14-56
14.3.86 E800.....	14-59
14.3.87 E804.....	14-59
14.3.88 E805.....	14-59
14.3.89 E820.....	14-60
14.3.90 E824.....	14-60
14.4 Jam Codes.....	14-61
14.4.1 Jam Code (printer unit).....	14-61
14.4.2 Jam Code (finisher-related)	14-63
14.4.3 Jam Code (ADF-related)	14-64
14.5 Alarm Codes.....	14-66
14.5.1 Alarm Code	14-66

Chapter 15 Service Mode

15.1 Outline.....	15-1
15.1.1 Construction of Service Mode.....	15-1
15.1.2 Starting Service Mode and Making Selections	15-2
15.1.3 Ending Service Mode	15-3
15.1.4 Back-Up.....	15-3
15.1.5 Initial Screen.....	15-4
15.1.6 2nd/3rd Item Screen	15-4
15.1.7 4th Item Screen.....	15-5
15.2 DISPLAY (Status Display Mode).....	15-6
15.2.1 COPIER	15-6
15.2.2 FEEDER	15-26
15.2.3 DISPLAY (Status Display Mode)Level2	15-28
15.3 I/O (I/O Display Mode).....	15-34
15.3.1 Overview	15-34
15.3.2 <DC-CON>	15-35
15.3.3 <R-CON>.....	15-42
15.3.4 <FEEDER>	15-45
15.3.5 <SORTER>	15-47
15.3.6 <MN-CON>	15-58
15.4 ADJUST (Adjustment Mode)	15-60
15.4.1 COPIER	15-60
15.4.2 FEEDER	15-90
15.4.3 SORTER	15-91
15.4.4 ADJUST (Adjustment Mode)Level2.....	15-91
15.5 FUNCTION (Operation/Inspection Mode).....	15-108
15.5.1 COPIER	15-108
15.5.2 FEEDER	15-139
15.5.3 FUNCTION (operation/inspection mode):Level 2	15-144
15.6 OPTION (Machine Settings Mode)	15-146
15.6.1 COPIER	15-146
15.6.2 FEEDER	15-174

15.6.3 SORTER.....	15-175
15.6.4 BOARD	15-176
15.6.5 OPTION (mechanical specifications setting mode):Level 2.....	15-176
15.7 TEST (Test Print Mode)	15-211
15.7.1 COPIER.....	15-211
15.8 COUNTER (Counter Mode).....	15-217
15.8.1 COPIER.....	15-217

Chapter 16 Upgrading

16.1 Outline	16-1
16.1.1 Outline of the Version Upgrade.....	16-1
16.1.2 Outline of the Service Support Tool.....	16-2
16.1.3 Network Interface of the Machine with the SST in Use.....	16-4
16.2 Making Preparations	16-8
16.2.1 Registering the System software	16-8
16.2.2 Making Connections	16-11
16.3 Formatting the HDD	16-17
16.3.1 Formatting All Partitions	16-17
16.3.2 Formatting Selected Partitions.....	16-18
16.3.3 Formatting the Procedure	16-20
16.4 Downloading System Software	16-27
16.4.1 Batch Downloading	16-27
16.4.2 Downloading the System Software	16-40
16.4.3 Downloading the RUI, and Language Module	16-48
16.4.4 Downloading the BOOT Software	16-56
16.4.5 Downloading the Dcon and Rcon Software	16-63
16.4.6 Downloading the G3 FAX Software.....	16-70
16.5 Uploading and Downloading Backup Data	16-77
16.5.1 Outline	16-77
16.5.2 Uploading Procedure	16-78
16.5.3 Downloading Procedure	16-84

Chapter 17 Service Tools

17.1 Special Tools	17-1
17.2 Solvents and Oils	17-3

Chapter 1 Introduction

Contents


1.1 System Construction.....	1-1
1.1.1 System Configuration with Pickup/Delivery Accessories	1-1
1.1.2 System Configuration with Printing/Transmission Accessories	1-2
1.1.3 Functions of Printing/Transmitting Accessories	1-3
1.2 Product Specifications.....	1-4
1.2.1 Names of Parts.....	1-4
1.2.1.1 External View	1-4
1.2.1.2 Cross Section.....	1-6
1.2.2 Using the Machine.....	1-8
1.2.2.1 Turning On the Power Switch	1-8
1.2.2.2 Points to Note About Turing Off the Main Power Switch	1-9
1.2.2.3 Control Panel.....	1-10
1.2.3 User Mode Items	1-11
1.2.3.1 Common Settings	1-11
1.2.3.2 Setting the Timers.....	1-13
1.2.3.3 Adjustment and Cleaning	1-13
1.2.3.4 Report	1-14
1.2.3.5 System Control Settings	1-15
1.2.3.6 Copier Settings	1-15
1.2.3.7 Common Transmission Settings.....	1-16
1.2.3.8 Box Settings.....	1-17
1.2.3.9 Printer Settings	1-17
1.2.3.10 Address Book Settings	1-18
1.2.4 User Maintenance.....	1-18
1.2.4.1 Cleaning.....	1-18
1.2.4.2 Inspection	1-20
1.2.5 Safety.....	1-22
1.2.5.1 Safety of the Laser Light	1-22
1.2.5.2 Regulations by the us Center for Devices and Radiological Health	1-22
1.2.5.3 Handling the Laser Unit	1-23
1.2.5.4 Safety of Toner	1-23
1.2.6 Product Specifications	1-24
1.2.6.1 Specifications	1-24
1.2.7 Function List.....	1-27
1.2.7.1 Print Speed.....	1-27
1.2.7.2 Paper Type.....	1-29
1.2.7.3 Accessories.....	1-30

1.1 System Construction

1.1.1 System Configuration with Pickup/Delivery Accessories

0002-5061

The machine may be configured as follows with pickup/delivery accessories

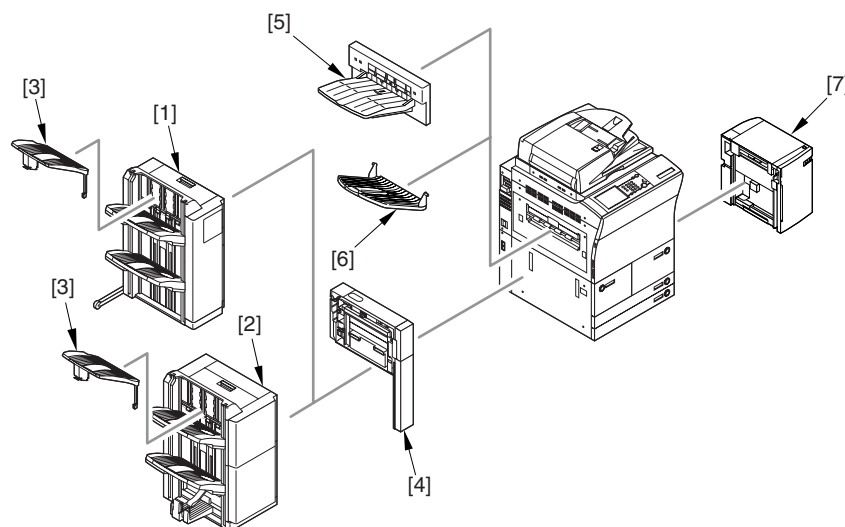

F-1-1


- [1] Finisher-R1
- [2] Saddle Finisher-R2
- [3] Additional Finisher Tray-A1
- [4] Puncher Unit-L1
- [5] Shift Tray-C1
- [6] Delivery Tray-K1
- [7] Side Paper Deck-U1

* If any of the accessories [1] through [3] is used, the accessories [5] and [6] cannot be used as part of the system.

1.1.2 System Configuration with Printing/Transmission Accessories

0002-7413

System Configuration with Printing/Transmission Accessories:

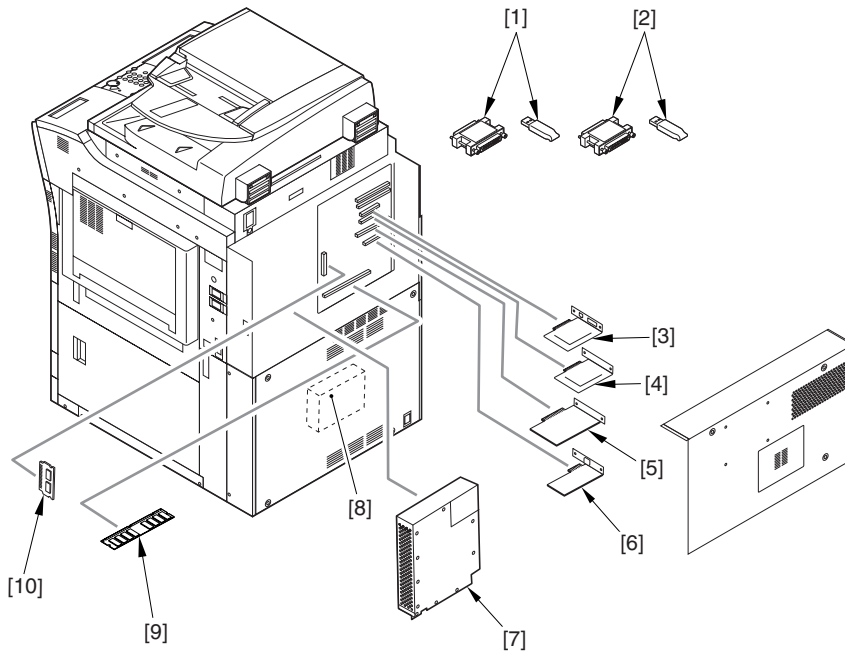

F-1-2

- [1] iR Security Kit
- [2] SEND Expansion Kit D1P/D1U (dongle for extended functions)
- [3] Image Conversion Board-A2
- [4] USB Interface Board-A3, or TokenRing Board (optional for 120V model)
- [5] UFR Board (standard for N model)
- [6] Ethernet Board (standard)
- [7] Super G3 Fax Board-P1 (optional for 100V model)
- [8] PS Print Sever Unit-D1
- [9] Color iR 256 MB Expansion RAM (optional for 100V)
- [10] PDL Expansion Kit (LIPS) C1 (for 100V model, LIPS model boot ROM)

1.1.3 Functions of Printing/Transmitting Accessories

0006-4753

The following is a table of functions expected of printing/transmitting accessories:

T-1-1

	UFR Printer/ Scanner Kit-C1	SEND Expansion Kit-DIP/DIU	Image Conversion Board-A2	USB Interface Board-A3	Super G3 Fax Board-P1
GDI-UFR printing	yes*	-	-	-	-
SEND function	-	yes	yes	-	-
Faxing	-	-	yes	-	yes
Local printing	yes*	-	-	yes	-

The following is a brief explanation of the functions expected of the accessories; for details, see the chapters that follow:

-UFR Printer/Scanner-C1

adds the GDI-UFR printing function and a scanning function in combination with ScanGear.

-SEND Function Expansion DIU-DIP/DIU

adds a transmission function; the setup work calls for a PC, requiring the selection of DIP (parallel port) or DIU (USB port) depending on the type of connection offered by the PC.

-Image Conversion Board-A2

needed when a transmission/fax function is added.

-USB Interface Board-A3

adds a printing function by connection to a PC in a local configuration (USB); requires a UFR board.

-Super G3 Fax Board-P1


adds the G3 fax function.

1.2 Product Specifications

1.2.1 Names of Parts


1.2.1.1 External View

0002-7878

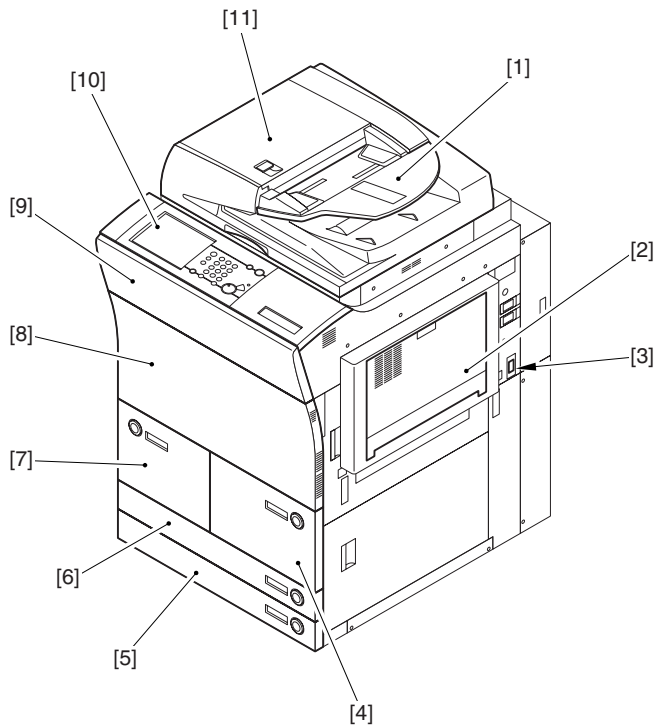

F-1-3


- [1] Original pickup tray
- [2] Manual feed tray
- [3] Main power switch
- [4] Right front paper deck
- [5] Cassette 4
- [6] Cassette 3
- [7] Left front paper deck
- [8] Front cover
- [9] Black toner supply cover
- [10] Control panel LCD (touch panel)
- [11] ADF

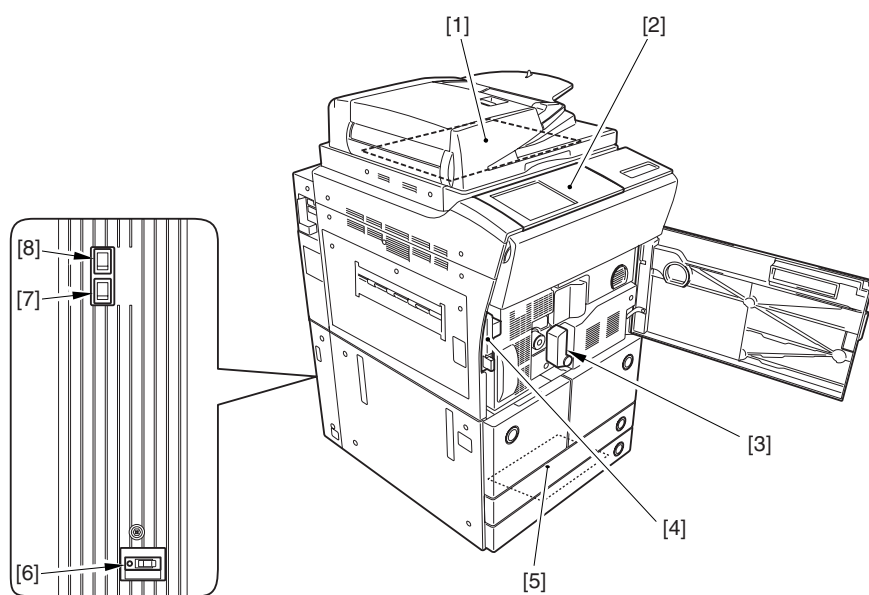

F-1-4

- [1] Copyboard glass
- [2] Control panel
- [3] Feeding assembly release lever
- [4] Door switch assembly
- [5] Service book case
- [6] Leakage breaker
- [7] Cassette heater switch
- [8] Environment switch

1.2.1.2 Cross Section

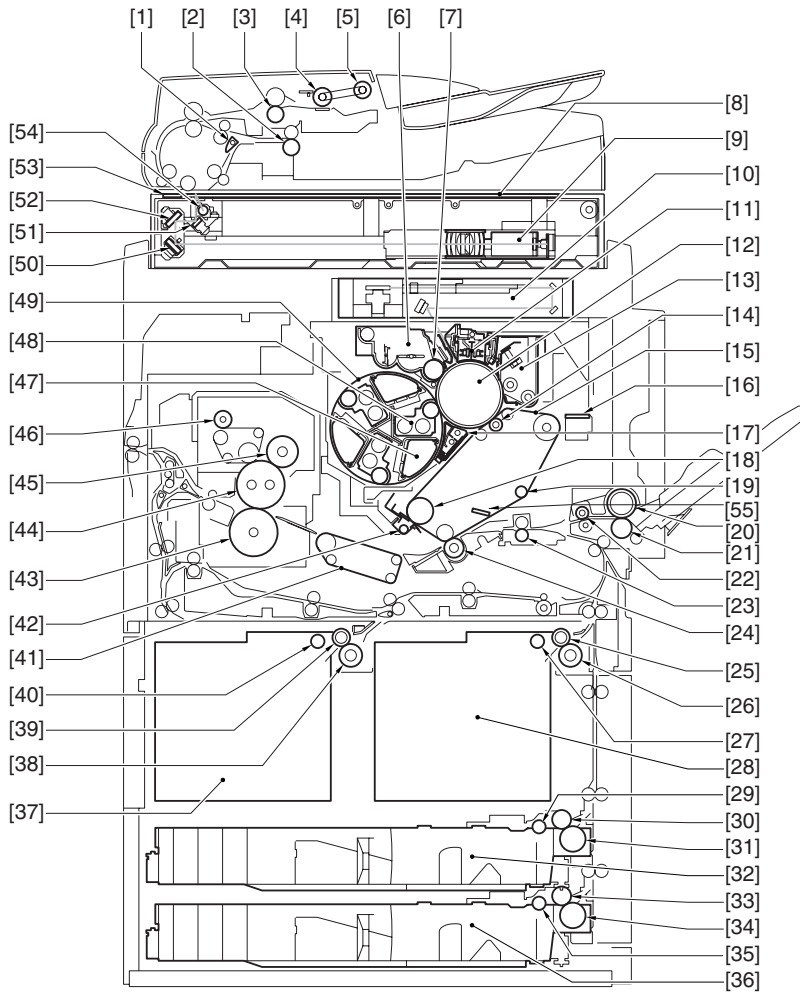

F-1-5

- [1] Delivery reversing flapper
- [2] Delivery reversing lower roller
- [3] No. 1 registration lower roller
- [4] Separation roller
- [5] Pickup roller
- [6] Black toner developing assembly
- [7] Black developing cylinder
- [8] Copyboard glass
- [9] CCD unit
- [10] Laser/scanner assembly
- [11] Primary charging assembly
- [12] Photosensitive drum
- [13] Drum cleaner assembly
- [14] Primary transfer roller
- [15] ITB (intermediate transfer belt)

- [16] Patch image read sensor
- [17] Pre-transfer charging assembly
- [18] ITB drive roller
- [19] Tension roller
- [20] Manual feed roller
- [21] Manual feed separation roller
- [22] Manual feed pull-off roller
- [23] Registration roller
- [24] Secondary transfer outside roller
- [25] Right deck feed roller
- [26] Right deck separation roller
- [27] Right deck pickup roller
- [28] Right deck
- [29] Cassette 3 pickup roller
- [30] Cassette 3 feed roller
- [31] Cassette 3 separation roller
- [32] Cassette 3
- [33] Cassette 4 feed roller
- [34] Cassette 4 separation roller
- [35] Cassette pickup roller
- [36] Cassette 4
- [37] Left deck
- [38] Left deck separation roller
- [39] Left deck feed roller
- [40] Left deck pickup roller
- [41] Feeding assembly
- [42] ITB cleaner assembly
- [43] Pressure roller
- [44] Fixing roller
- [45] External heating roller
- [46] Fixing web
- [47] Color toner cartridge
- [48] Color developing assembly
- [49] Developing rotary assembly
- [50] No. 3 mirror
- [51] No. 1 mirror
- [52] No. 2 mirror
- [53] ADF reading glass
- [54] Scanning lamp
- [55] ITB inside cleaner end scraper


1.2.2 Using the Machine

1.2.2.1 Turning On the Power Switch

0002-9498

The machine is equipped with 2 power switches: main power switch and control panel power switch.

Normally, the machine goes on when the main power switch is turned on (i.e., other than in power save mode, low power mode, sleep mode).

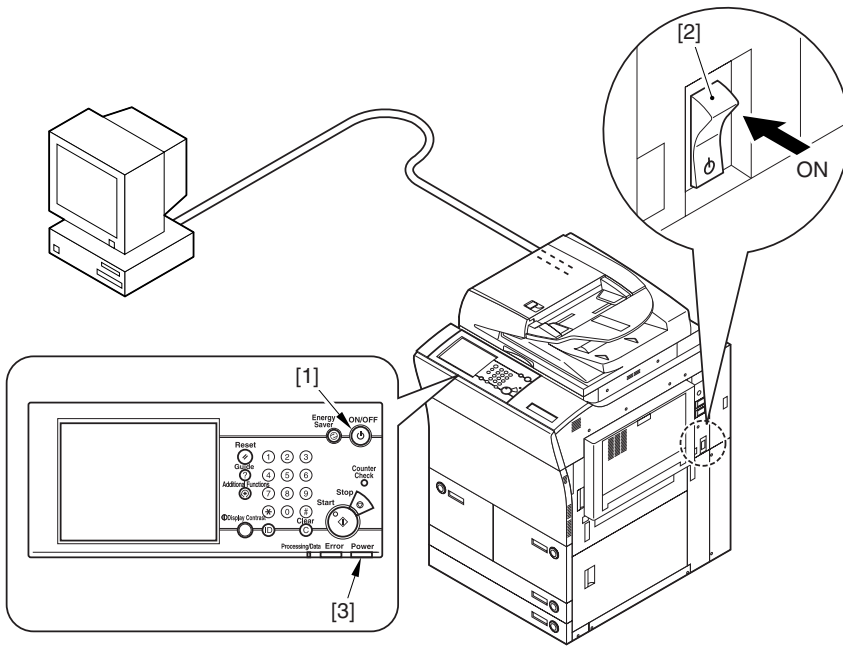

F-1-6


[1] Control panel power switch

[2] Main power switch

[3] Main power indicator lamp



Do not turn off the main power while the progress bar is indicated, during which access is made to the HDD. If deprived of power, the HDD can suffer a fault (E602).

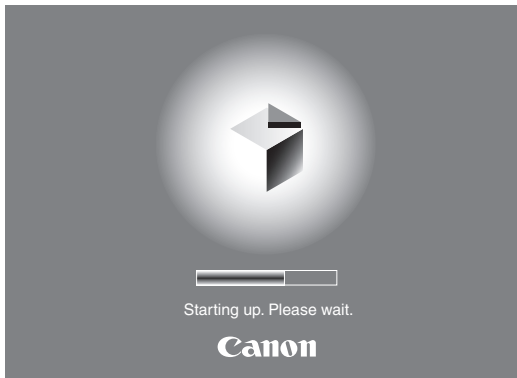


F-1-7

1.2.2.2 Points to Note About Turning Off the Main Power Switch

0002-9561


Be sure to turn off the control panel power switch [2] before turning off the main power switch [1].

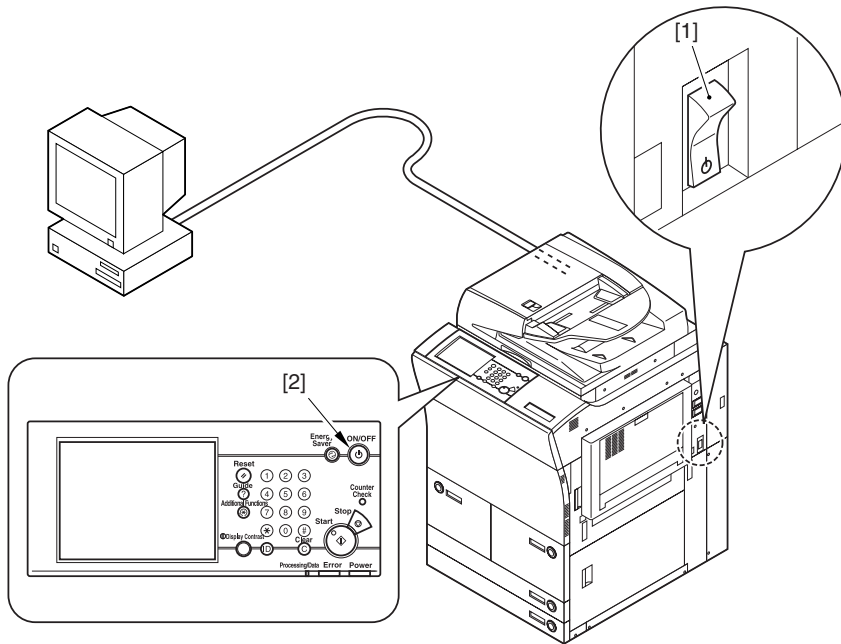

F-1-8

When Sending Data to the Printer or Using the Fax Unit

Be sure that the Execution/Memory lamp [2] on the control panel is off before operating the main power switch. (Turning off the main power while a job is under way can cause loss of the data being processed.)

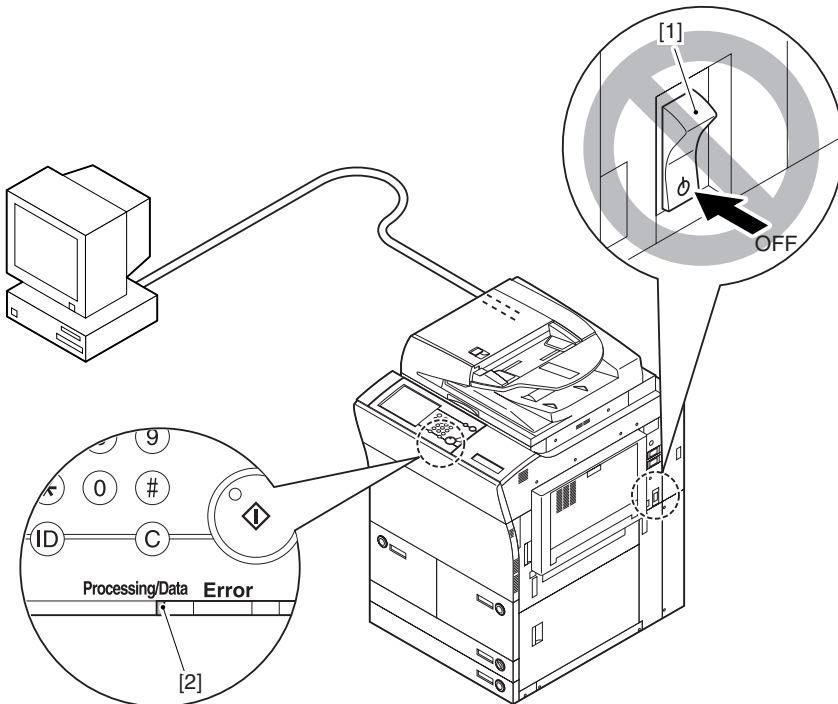


F-1-9



When Downloading Is Under Way


Do not turn off the control panel switch [2] or the main power switch [1]. (Turning off the main power switch while downloading is under way can disable the machine.)

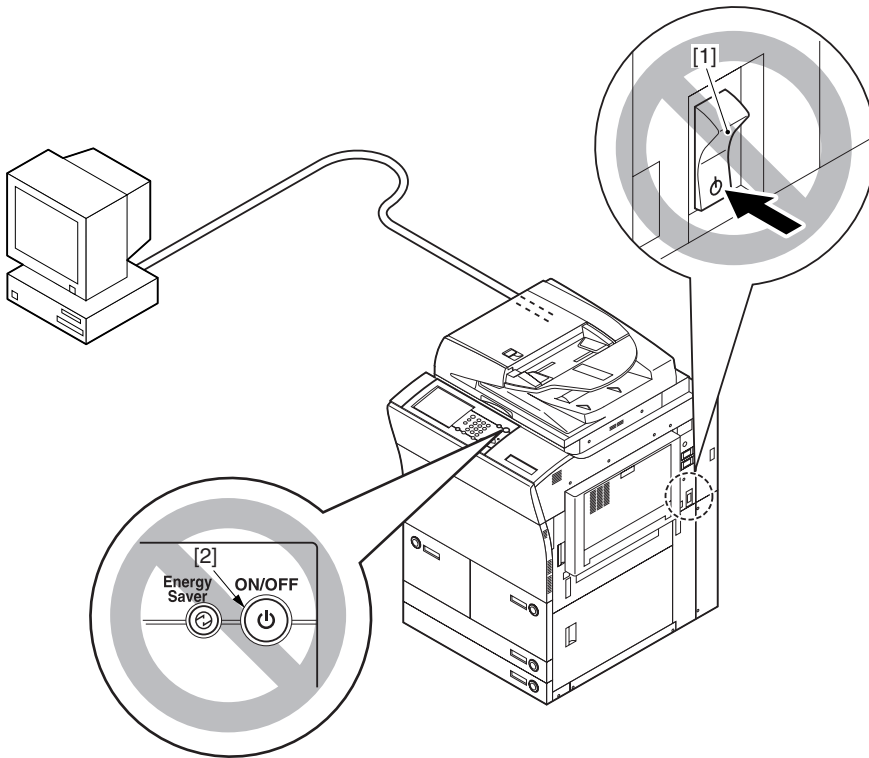

F-1-10

1.2.2.3 Control Panel

0002-9566

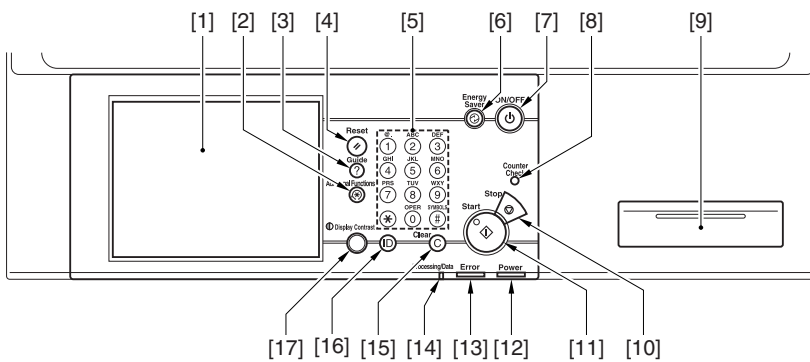

F-1-11

[1] Control panel LCD (touch panel)

[2] User mode key

[3] Guide key

[4] Reset key

- [5] Keypad
- [6] Power Save key
- [7] Control panel power switch
- [8] Counter key
- [9] Clip recess
- [10] Stop key
- [11] Start key
- [12] Main power indicator lamp
- [13] Error indicator lamp
- [14] Execute/Memory indicator lamp
- [15] Clear key
- [16] ID key
- [17] Screen contrast dial

1.2.3 User Mode Items

1.2.3.1 Common Settings

0002-9584

* Factory setting.

T-1-2

Item	Description
initial function	initial function: *copy, transmit/fax, box system initial screen: ON/*OFF priority on system device: *ON/OFF
function after auto-clear	*return, do not return
buzzer ON/OFF	input sound: *ON/OFF input invalid sound: ON/*OFF supply alert sound: ON/*OFF warning sound: *ON/OFF job end sound: *ON/OFF
paper level message	*ON/OFF
auto color (w/ BW selected)	priority on text/*on photo
inch input	inch input (on/*off; on if 230-V model)
cassette auto select ON/OFF	copier: *manual off, other on printer: *all on box: *manual off, other on

Item	Description
	reception/fax: *manual off, other on other: *manual off, other on
paper type registration	yes
change power save mode	*-10%, -25%, -50%, no return time
power consumption in sleep	*low, high
LTRR/STMT original distinction	manual, *on at LTRR, on at STMT
special tray setup (indicated only if w/ finisher)	yes
priority on output	copier: *1/2/3 printer: 1/*2/3 box: 1/2/*3 reception/fax: 1/2/*3 other: 1/2/*3
manual feed paper standard mode registration	on (paper size select, paper type select), *off
local print standard mode	paper select: *auto, cassette 1 thorough 5 print quantity: *1 to 2000 sorter (if w/ finisher): non-sort, *sort, rotation sort, group, rotation group sorter (w/ finisher): non-sort, sort, *shift sort, group, shift group, rotation group, staple double-sided print: on (left/right spread, top/ bottom spread), *off file delete after printing: ON/*OFF file merge: ON/*OFF
display language	ON/*OFF
screen color reversal	ON/*OFF
between-job shift (indicated if w/ finisher)	*ON/OFF
read area cleaning message	*ON/OFF
gamma level during remote scan (indicated if w/ UFR Printer & Scanner Kit-B1)	gamma1.0/gamma1.4/*gamma1.8/gamma2.2
function limit mode (indicated if w/ finisher)	ON/*OFF
common settings initialize	ON/*OFF

1.2.3.2 Setting the Timers

0002-9585

* Factory setting.

T-1-3

Mode	Description
date/time	enable time zone, *daylight saving
auto sleep time	10, 15, 20, 30, 40, 50, 1 hr, 90 min, 2, 3, 4 hr
auto clear time	0=no; 1... *2... 9 min (in 1-min increment)
weekly timer	00:00 to 23:59 (1-min increment) from Sunday to Saturday
low power mode shift time length	10, *15, 20, 30, 40, 50 min, 1 hr, 90 min, 2, 3, 4 hr

1.2.3.3 Adjustment and Cleaning

0002-9586

* Factory setting.

T-1-4

Item	Description
zoom fine adjustment	XY individually; -1.0 to +1.0% (in 0.1%-increments), *0%
center bind staple edging (if w/ saddle finisher)	start key
center bind position change (if w/ saddle finisher)	size: A3, 11X17/B4/A4R, LTRR
auto gradation correct	full correction (read test print x 3 times); quick correction (no test print)
density correct	copy, transmit; 9 steps each (set to 5 at time of shipment) copy/box, BW transmit, color transmit; 9 steps each (set to 5 at time of shipment)
roller cleaning (transfer roller)	start key
wire cleaning	start key
feeder cleaning	start key
toner replacement (if enabled in service mode)	yellow, magenta, cyan

1.2.3.4 Report

0002-9587

* Factory setting.

T-1-5

Item	Description
transmit (specifications)	transmission result report: *only if error, on, off transmitted original display: *on, off
communications control report timed	auto print every 100 communications: *on, off as specified: on, *off *00:00 to 2:59 send/receive separate: yes, *no
fax (specifications)	fax transmission results report: *only if error, on, off transmitted original display: *on, off
fax communications control report	auto print every 40 communications: *ON/OFF specified time: ON/*OFF time: *00:00 to 23:59 transmission/reception separate: (toggle) on, *off
fax reception results report	only if error, on, *off
fax box reception report	*ON/OFF
list print (transmit)	address list: address list 1 to 10, one-touch button list print: keys, *no
user data list (transmit)	yes, *no
user data list (fax)	yes, *no

1.2.3.5 System Control Settings

0002-9588

* Factory setting

T-1-6

Item	Description
system administrator info	yes using ID, address
group ID	ON/*OFF
communications control setup	yes using e-mail, fax, box
remote UI	*ON/OFF
address book limit	ID No., access NO.: ON/*OFF
device information setup	device name, location
transfer setup	reception method/condition: on, off; settings
bulletin delete	delete
auto on-line/offline shift	auto on-line shift: ON/*OFF auto off-line shift: ON/*OFF
LDAP server register	register, detail: edit, delete/list print
limit to function with control key Off	*limit some, limit all

1.2.3.6 Copier Settings

0002-9589

* Factory setting.

T-1-7

Item	Description
preference key 1	*no setting (magnification, sorter, page separation may be enabled)
preference key 2	*no setting (magnification, sorter, page separation may be enabled)
auto sort	*ON/OFF
copy wait time indication	ON/*OFF
auto vertical/horizontal rotation	*ON/OFF
standard mode change	register, initialize
copier settings initialize	yes, no

1.2.3.7 Common Transmission Settings

0002-9590

* Factory setting.

T-1-8

Item	Description
common transmission setup	source register (99 max.) user abbreviation (various settings) FTP transmission (ON/*OFF) error file clear (*ON/OFF) transfer error file (print always, save and print, *off) retry (*3 times; between 0 and 5) transmission function change (read: 150x150; file: TIFF/JPEG) routine task register (M1 through M9) PDF image level (data size, *average, priority on image) transmission screen (default, one-touch, *new) transmission source record (*attach, do not attach) color transmission gamma (y1.0, y1.4, y1.8, *y2.2) transmission function initialize (yes, no)
common reception functions setup	double-sided print (*on, off) cassette (all, *on, off) image reduce (*on, off) reception info (add, *do not add) 2-on-1 (ON/*OFF)
fax basic setup	user telephone No. (No. input) line type (*20 pps, 10 pps, touch tone) volume adjust (alarm sound, communication sound) volume adjust (alarm sound, communication sound)
fax transmission function setup	ECM (*ON/OFF) pause time length (*2 sec; between 1 and 15 sec) auto redial (*ON/OFF)
fax reception function setup	ECM (*ON/OFF)
fax reception function setup	reception mode (*auto reception, fax/tel switch-over, modem dial-in) ring (ON/*OFF) remote reception (ON/*OFF) auto reception switch-over (ON/*OFF)

1.2.3.8 Box Settings

0002-9591

T-1-9

Item	Description
box function setup	user box setup, register (99 max.) read-in setup (register, initialize) fax box setup, register (49 max.)

1.2.3.9 Printer Settings

0002-9592

* Factory setting.

T-1-10

Item	Description
setting	copy count (1 to 2000: *1) double-sided (double-sided, *single-sided) blank paper save (*yes, no) pickup (A4, plain; no switch-over) print adjust (super smooth, toner density, toner save) layout (lengthwise bind margin; margin 0; between -30 and + 30 m) layout (horizontal correction 0, vertical correction 0; between -50 and +50 mm) error skip (yes, *no) print delete time length (*1, 2, 3, 6, 12, 24 hr) time-out (*x sec; between 5 and 300) RIP (yes, *no) sorter (*no, rotation sort, rotation group) transparency interleaf (*no, blank paper interleaf, printed paper interleaf) printer operation mode (*auto, or one of 6) emulation (*no, or 1 or 4) auto switch-over (LIPS, ESC-P, 15577, HP-GL, all) color mode (*auto, full color, mono color) gradation (gradation; *standard, zoom 1, zoom 2) gradation (graphics: *yes, image, *yes) halftone (text: resolution, gradation, *error diffusion) halftone (graphics: *resolution, gradation, error diffusion)

Item	Description
	halftone (image: resolution, *gradation, error diffusion)
	printer initialize (yes, no)
	LIPS, emulation (12 items)
utility	printer initialize (yes, no)

1.2.3.10 Address Book Settings

0002-9593

T-1-11

Item	Description
address register	various times
address list name register	register
one-touch button register	various items

1.2.4 User Maintenance


1.2.4.1 Cleaning

0003-4228

The machine has some components that must be cleaned by the user on a periodical basis (about once a month); advise the user on how to clean such components:

1. Copyboard Cover


Wipe the copyboard cover [1] using a cloth moistened with water or solution of mild detergent (well wrung); then, dry wipe it with a soft cloth.

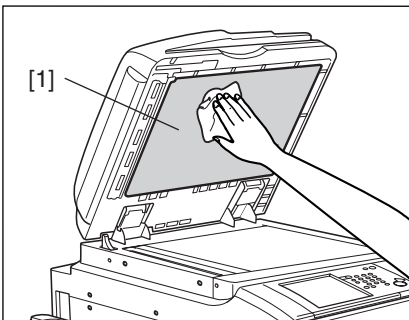

F-1-12

2. Platen Roller


Wipe the platen roller [1] using a cloth moistened with water or solution of mild detergent (well wrung); thereafter, dry wipe it with a soft cloth.

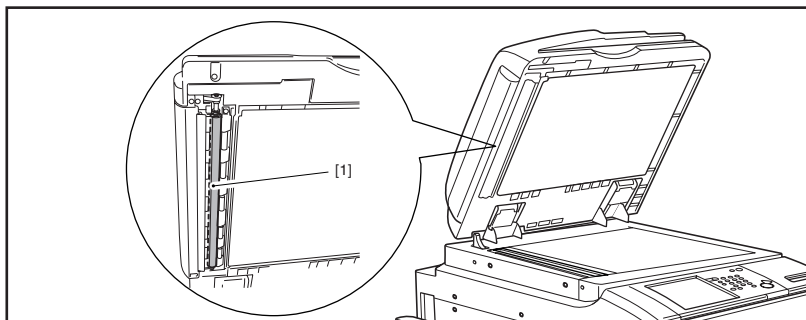

F-1-13

3. Copyboard Glass, ADF Reading Glass


Wipe the copyboard glass [1] and the DF reading glass [2] using a cloth moistened with water or solution of mild detergent (well wrung); thereafter, dry wipe them with a soft cloth.

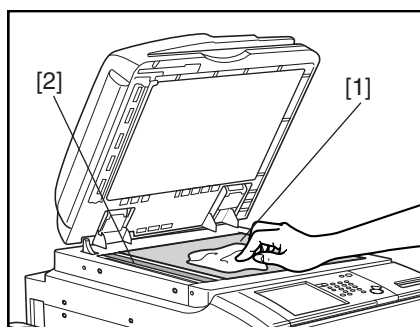

F-1-14

4. DF Glass Retainer, Edge Guide


Wipe the DF glass retainer [1] and the edge guide [2] using a cloth moistened with water or solution of mild detergent (well wrung); thereafter, dry wipe them with a soft cloth.

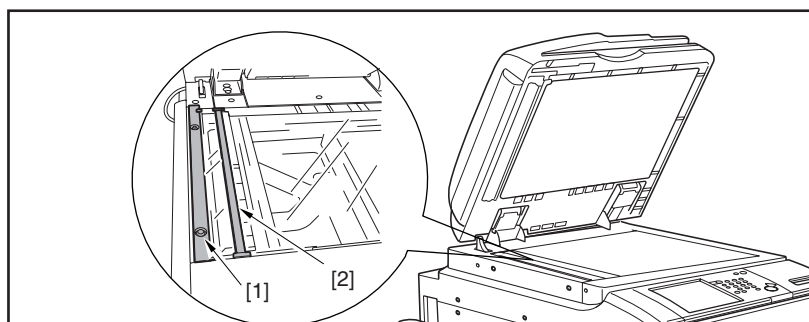

F-1-15

5. Vertical Size Plate

Wipe the vertical size plate [1] using a cloth moistened with water or solution of middle detergent (well wrung); thereafter, dry wipe it with a soft cloth.

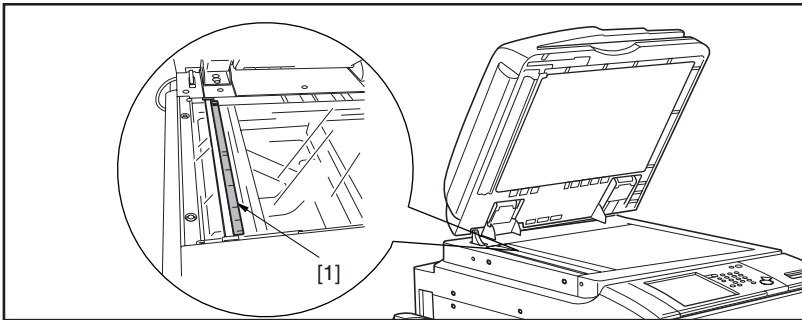

F-1-16


1.2.4.2 Inspection

0003-4230

The machine is equipped with a breaker to protect against over-current and leakage current, and it is important to check the operation of the leakage breaker to ensure a higher level of safety.


Advise the user to check the breaker as follows on a periodical basis (about once a month) and keep a record of the checks:

- 1) Turn on the main power switch
- 2) Push the test button [1] of the breaker using the tip of a ball-point pen or the like.

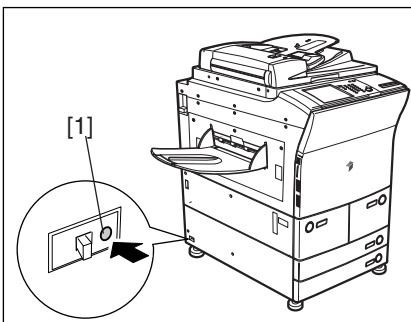

F-1-17


3) Check to see that the breaker switch [1] has shifted to the OFF side, thus cutting off the power.

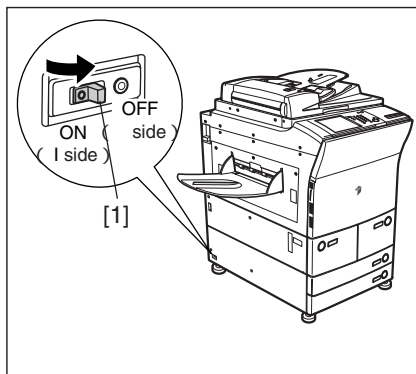

F-1-18

4) Turn off the main power switch.

5) Shift the breaker switch [1] back to the ON side.

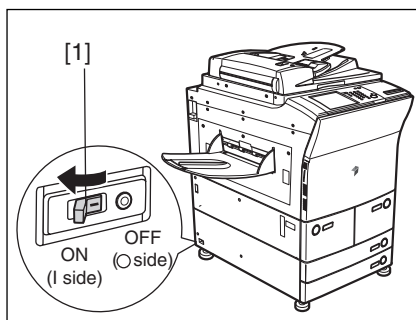

F-1-19

⚠ After the check, be sure that the breaker switch has shifted fully to the ON side. If it has stopped between the ON and the OFF sides, push it over to the OFF side and then back to the ON side.

6) Turn on the main power switch.

1.2.5 Safety

1.2.5.1 Safety of the Laser Light

0002-9596


Laser light can prove to be hazardous to the human body. The machine's laser unit is fully enclosed in a protective housing and external covers so that its light will not escape outside as long as the machine is used normally.

1.2.5.2 Regulations by the us Center for Devices and Radiological Health


0002-9598

The Center for Devices and Radiological Health of the US Food and Drug Administration put input force a set of regulations to govern laser products on August 2, 1976. These regulations apply to laser products that are manufactured on and after August 1, 1976, and the sale of laser products is prohibited inside the US without indicating compliance with the regulations.

The following label is used to indicate certification under CDRH regulations, and all laser products sold inside the US are required to bear the label.

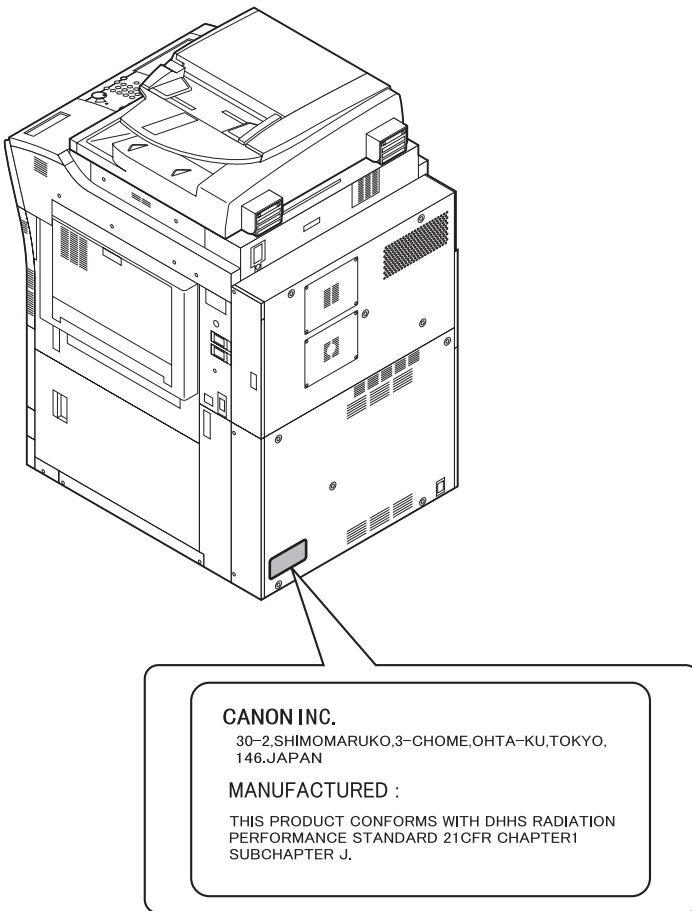

F-1-20

 The text on the label may differ from model to model.

1.2.5.3 Handling the Laser Unit


0002-9599

Points to Note When Servicing Areas Around the Laser Scanner System

-do not put an item with a high reflectance (e.g., screwdriver) into the laser path.

-remove watches and rings before starting the work (they tend to reflect the laser beam, possibly exposing the eye).

The light from the machine's laser unit is red. The covers of the machine that can reflect the laser beam are identified by a warning label (attached as shown). If you must remove any of these covers, be sure to work while paying full attention to the laser light. The machine's laser unit is not designed for servicing in the field.

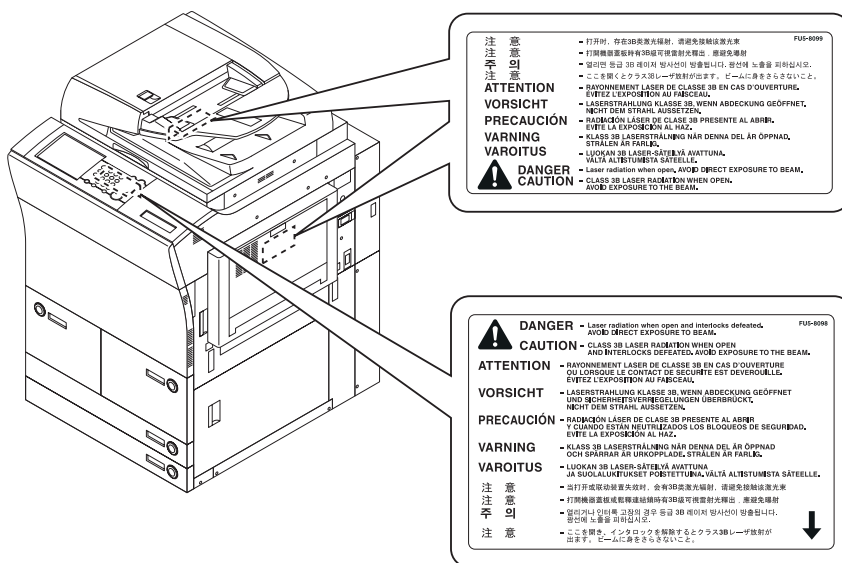

F-1-21

1.2.5.4 Safety of Toner

0002-9601

The machine's toner is a non-toxic material made of plastic, iron, and small amounts of dye.

⚠ Do not throw toner into fire. It may cause explosion.

Toner on Clothing or Skin

1. If your clothing or skin has come into contact with toner, wipe it off with tissue; then, wash it off with water.
2. Do not use warm water, which will cause the toner to jell and fuse permanently with the fibers of the cloth.
3. Do not bring toner into contact with plastic material. It tends to react easily.

1.2.6 Product Specifications

1.2.6.1 Specifications

0002-5126

Copyboard	fixed
Body	console
Light source type	xenon lamp
Lens type	fixed focus, lens array
Photosensitive medium	A-Si drum (1 pc.)
Image reading method	light-receiving element (RGB line CCD)
Reproduction method	by laser beam, indirect electro-photographic
Exposure method	by laser
Copy density adjustment function	auto or manual
Charging method	by corona
Development method	toner projection
Development method (color)	dry, 2-component, toner projection
Development method (mono)	dry, 1-component, toner projection
Attraction method	no
Transfer method	by intermediate transfer belt
Transfer method (primary transfer)	by charging roller
Transfer method (secondary transfer)	by charging roller
Separation method	by curvature separation + static eliminator
Pickup method	from cassette, manual feeder, paper deck
Cassette pickup method	separation retard
Paper deck pickup method	separation retard
Multifeeder pickup method	separation retard
Drum cleaning method	by blade + magenta roller
Transfer cleaning method	by blade
Fixing method	by roller + external heating roller
Delivery method	face-down, face-up
Contrast adjustment function	auto
Toner level detection function	yes (Bk: piezoelectric; CMY: optical)
Toner type	Bk: magnetic, negative toner; CMY: non-magnetic negative toner
Toner supply type	from toner cartridge (CMY: 240 g), from toner bottle (Bk: 2000 g)

Original type	sheet, book, 3-D object (2 kg max.)
Maximum original size	297 x 432 mm
Original size detection function	by fixed sensor in combination with CCD: in relation to opening/closing of copyboard cover
Reproduction ratio	100% (1:1), reduce (1:0.250, 1:0.500, 1:0.611, 1:0.707, 1:0.816, 1:0.865), enlarge (1:1.154, 1:1.224, 1:1.414, 1:2.000, 1:4.000), between (1:0.250 to 4.000) (25% and 400%, in 1%-increments)
Warm-up time	8 min 50 sec or less at power-on (at 20 deg C room temperature)
Print area	maximum image guarantee area: 305x466.5 mm; maximum print area: 314.5 x 466.5 mm (single-side) maximum print area: 310.0 x 466.5 mm (double-side)
Image margin (leading edge)	40 +1.5/-1.0 (2nd side: 4.0 +1.5/-1.0)
Image margin (trailing edge)	2.0+1.5/-1.5
Image margin (left/right)	2.5 +1.5/-1.5 (2nd side: 2.5 +2.5/-2.0)
Non-image width (leading edge)	4.0 +1.5/-1.0 (w/ ADF: 4.5 +1.8/-1.8)
Non-image width (trailing edge)	2.0 +1.5/-1.5 (w/ ADF: 2.0 +1.8/-1.8)
Non-image width (left/right)	2.5 +1.5/-1.5 (w/ ADF: 2.5 +2.5/-2.0)
Number of gradations	reader unit: 256; engine unit: 256
Reading resolution	600x600dpi
Printing resolution	1200 (equivalent) x 600 dpi (North American model only); 9600 (equivalent) x 600 dpi (non-North American models)
First print time	mono color: 53 sec (A4, plain paper; 64 to 105 g/m ²) full color: 12.2 sec (A4, plain paper; 64 to 105 g/m ²)
Print speed (A4)	mono color: 68 prints/min (A4; 64 to 209 g/m ²) full color: 15.5 prints/min (A4, plain paper; 64 to 105 g/m ²)
Cassette paper size	cassette 3/4: A5R, B5, B5R, A4, A4R, B4, A3, 279x432 mm (11x17), 305x457 mm (12x18), 330x483 mm (13x19), 320x450 mm (SRA3), LGL, LTR, LTRR, Executive (horizontal) STMTR
Paper deck paper size	front deck, side deck: B5, A4, LTR
Multifeeder paper size	100x148 mm (min.) to 330x483 mm (max.)
Cassette paper type	cassette 3/4: plain paper (:764 to 105 g/m ²), heavy paper (209 g/m ² max.), recycled paper (64 to 105 g/m ²), colored paper (80 g/m ²), index paper (80 g/m ²), transparency
Multifeeder tray paper type	plain paper (64 to 105 g/m ²), heavy paper (250 g/m ² max.), recycled paper (64 to 105 g/m ²), colored paper (80 g/m ²), postcard, transparency, tracing paper, label paper, postcard

Paper deck paper type	deck left/right: plain paper (64 to 105 g/m ²), heavy paper (209 g/m ² max.), recycled paper (80 g/m ²), colored paper (80 g/mm ²), label paper (80 g/m ²)
Duplex paper type	plain paper (64 to 105 g/m ²), recycled paper (80 g/m ²), color paper (80 gm/2), heavy paper (163 g/m ² max.), heavy paper (163 g/2 max.; 209 g/m ² for color print; 209 g/m ² for black-and-white print)
Cassette capacity	600 sheets (64g/m ²) 550 sheets (80g/m ²)
Multifeeder tray capacity	100 sheets(64, 80g/m ²)
Paper deck capacity	1700 sheets (64g/m ²) 1500 sheets (80g/m ²)
Duplex method	through path
Delivery tray stack	250 sheets (A4, plain paper, 80 g/m ²), 50 sheets (transparency)
Continuous reproduction	9999 prints max.
Memory	main controller: RAM512 MB (768 MB max.)
Hard disk	40GB
Low-power mode	default: 15 min (between 10 and 240 min)
Auto power off	default: 60 min (between 10 and 240 min)
Auto gradation correction	yes
Operating environment (temperature range)	15 to 30 deg C
Operating environment (humidity range)	25% to 80%
Operating environment (atmospheric pressure)	810.6 to 1013.3 hpa (0.8 to 1.0 atm)
Noise	standby: 55 dB or less; printing: 78 dB or less
Power supply rating	100V/120V/230V
Power consumption (maximum)	1500 W or less
Power consumption	standby: 450 Wh (reference only); continuous printing: 1300 Wh (reference only)
Ozone	0.035 ppm or less (max.; 0.02 ppm or less on average)
Dimensions	975 (W) x 1100 (L) x 1570 (H) mm
Weight	230 kg (approx.; excluding toner cartridge)

1.2.7 Function List

1.2.7.1 Print Speed

0002-5174

T-1-12

Paper type	Paper size	Cassette/deck (single-sided)		Manual feeder (single-sided)		Cassette/deck (double-sided)	
		Color	Mono	Color	Mono	Color	Mono
Plain paper mode (64 to 105 g/m ²)	A3	7.8	28	7.8	20	3.9	17
	11"×17" (279mm×432mm)	7.8	28	7.8	20	3.9	17
	12"×18" (305mm×458mm)	5.2	25	5.2	17	2.6	15
	13"×19" (330mm×482mm)	5.2	25	5.2	17	2.6	15
	B4, LGL	7.8	34	7.8	23	3.9	18
	A4R, LTRR, B5R	7.8	42	7.8	29	3.9	19
	A4, LTR, B5	15.5	68	7.8	35	7.8	34
	A5R	15.5	68	7.8	35	7.8	34
Heavy paper mode 1 (105 to 163 g/m ²)	A3	4.0	21	4.0	20	2.0	10
	11"×17" (279mm×432mm)	4.0	21	4.0	20	2.0	10
	12"×18" (305mm×458mm)	3.0	18	3.0	17	1.5	9
	13"×19" (330mm×482mm)	3.0	17	3.0	17	1.5	8
	B4, LGL	4.0	25	4.0	23	2.0	12
	A4R, LTRR, B5R	4.0	31	4.0	29	2.0	15
	A4, LTR, B5	8.4	41	4.0	35	4.2	20
	A5R	8.4	42	4.0	35	4.2	21

Paper type	Paper size	Cassette/deck (single-sided)		Manual feeder (single-sided)		Cassette/deck (double-sided)	
		Color	Mono	Color	Mono	Color	Mono
Heavy paper mode 2 (164 to 209 g/m ²)	A3	2.8	21	2.8	20	---	10
	11"×17" (279mm×432mm)	2.8	20	2.8	20	---	10
	12"×18" (305mm×458mm)	2.3	18	2.3	17	---	9
	13"×19" (330mm×482mm)	2.3	17	2.3	17	---	8
	B4, LGL	2.8	22	2.8	22	---	11
	A4R, LTRR, B5R	2.8	27	2.8	27	---	13
	A4, LTR, B5	6.2	40	2.8	35	---	20
	A5R	6.2	36	2.8	35	---	18
Heavy paper mode 3 (210 to 253 g/m ²)	A3	---	---	2.8	20	---	---
	11"×17" (279mm×432mm)	---	---	2.8	20	---	---
	12"×18" (305mm×458mm)	---	---	2.3	17	---	---
	13"×19" (330mm×482mm)	---	---	2.3	17	---	---
	B4, LGL	---	---	2.8	22	---	---
	A4R, LTRR, B5R	---	---	2.8	27	---	---
	A4, LTR, B5	---	---	2.8	35	---	---
	A5R	---	---	2.8	35	---	---
Transparency	A4, LTR	2.8	40	2.8	35	---	---
Postcard	2-pane postcard	---	---	2.8	35	---	---
	Gvn postcard	---	---	2.8	35	---	---
Tab sheet	A4, LTR	4.0 (Under 163g/m ²) 2.8 (164g/m ² to 203g/m ²)	42	---	---	---	---

(unit: prints/min)

1.2.7.2 Paper Type

0002-5154

T-1-13

Paper type		Paper size	Source of paper		
			Cassette	Deck (left/right)	Manual feeder
Plain paper (64 to 105g/m ²) Eco paper Recycled paper Heavy paper mode 1,2 (106 to 209g/m ²)		A3, B4, A4R, 279mm×432mm (11"×17"), LGL, LTRR	yes	no	yes
		A4, B5, LTR	yes	yes	yes
		B5R	yes	no	yes
		A5R	yes	no	yes
		305mm×457mm(12"×18"), 330mm×482mm(13"×19")	yes	no	yes
		Executive	yes	no	yes
		Executive-R	no	no	no
Heavy paper mode 3 (210 to 250g/2m)		A3, B4, A4R, 279mm×432mm(11"×17"), LGL, LTRR	no	no	yes
		305mm×457mm(12"×18"), 330mm×482mm(13"×19")	no	no	yes
Special paper	trans-parency	A4, LTR	yes	no	yes
	Postcard	gvn postcard, 2-pane postcard	no	no	yes
	label sheet	A4, A4R, LTR, LTRR	no	no	yes
	index paper	A4, LTR	yes	no	no
	tracing paper	A3, B4, A4R, A4, B5R, B5	no	no	yes

1.2.7.3 Accessories

0003-5843

The following accessories are offered for the machine:

1. Finisher-R1
2. Saddle Finisher-R2
3. Additional Finisher Tray-A1 (Japanese model only)
4. Puncher Unit-L1
5. Side paper Deck-U1
6. Shift Tray -C1
7. Image Conversion Board-A2
8. Super G3 Fax Board-P1
9. PDL Expansion Kt (LIPS)-C1 (Japanese model only)
10. Color Network Printer Expansion Kit-C1 (non-Japanese model only)
11. SEND Expansion Kit-D1P
12. SEND Expansion Kit-D1U (Japanese and European models only)
13. UFR & Scanner Kit-C1
14. Color Network Multi-PDL Printer Kit-C1 (non-Japanese model only)
15. Card Reader-C1
16. Card Reader Mounting Kit-C1
17. Delivery Tray-K1
18. Original Holder-K1
19. Stamp Unit-A1
20. Key Switch Unit-A2
21. Security Kit-A1P/A1U
22. 256-MB Expansion RAM-A2
23. USB Interface Board-A3
24. TokenRing Interface Adapter iN-TR2 (US model only)
25. Color imagePass-D1 (US model)
 Color Network Printer unit-D1 (Other model)

Chapter 2 Installation

Contents

2.1 Making Pre-Checks	2-1
2.1.1 Selecting the Site of Installation	2-1
2.1.2 Installation Environment	2-3
2.1.3 Checking the Contents	2-4
2.2 Unpacking and Installation	2-6
2.2.1 Before Starting the Work	2-6
2.2.2 Unpacking the Machine	2-6
2.2.3 Mounting the Pickup Assembly	2-9
2.2.4 Mounting the Scanner System	2-9
2.2.5 Locking the Primary Transfer Roller in Place	2-10
2.2.6 Before Mounting the Developing Assembly	2-10
2.2.7 Mounting the Color Developing Assemblies	2-14
2.2.8 Mounting the Black Developing Assembly	2-17
2.2.9 Mounting the Process Unit	2-19
2.2.10 Mounting the Fixing Assembly	2-23
2.2.11 Fitting the Black Toner Bottle	2-24
2.2.12 Checking the Environment Switch	2-25
2.2.13 Turning On the Main Power Switch	2-26
2.2.14 Setting Up the Paper Cassette	2-26
2.2.15 Changing the Deck Paper Size (right, left)	2-27
2.2.16 Fitting the Color Toner Cartridge	2-28
2.2.17 Supplying Black Toner	2-29
2.2.18 Cleaning the Intermediate Transfer Belt	2-29
2.2.19 Supplying Color Toner	2-29
2.2.20 Setting Auto Gradation Correction	2-30
2.2.21 Checking the Image/Operation	2-30
2.2.22 Adjusting the Horizontal Registration	2-30
2.2.23 Adjusting the Leading Edge Registration	2-33
2.2.24 Securing the Machine in Place	2-33
2.2.25 If Not Connected to a Network	2-34
2.3 Checking the Connection to the Network	2-35
2.3.1 Overview	2-35
2.3.2 Using the PING Utility	2-35
2.3.3 Using a Remote Host Address	2-35
2.4 Troubleshooting the Network	2-36
2.4.1 Overview	2-36
2.4.2 Checking the Connection of the Network Cable	2-36
2.4.3 Using a Loopback Address	2-36
2.4.4 Using a Local Host Address	2-36
2.5 Relocating the Machine	2-37
2.5.1 Relocating the Machine	2-37
2.6 Installing the Card Reader-C1	2-38
2.6.1 Points to Note About Installation	2-38
2.6.2 Checking the Contents	2-38
2.6.3 Installation	2-39
2.6.4 Using the Card Reader in Combination with NetSpot Accountant (hereafter, NSA)	2-41
2.7 Installing the NE Controller-A1	2-42
2.7.1 NE Controller-A1 Installation Procedure	2-42
2.8 Installing the Original Tray	2-51

2.8.1 Checking the Contents	2-51
2.8.2 Installation	2-51
2.9 Installing the Key Switch Unit-A1	2-53
2.9.1 Checking the Contents	2-53
2.9.2 Installation	2-53

2.1 Making Pre-Checks

2.1.1 Selecting the Site of Installation

0002-6395

Be sure that the site of installation satisfies the following requirements; if possible, visit the user's before delivery of the machine:

-There must be a properly grounded power outlet that is rated as indicated (+/-10%) and that may be used exclusively by the machine.

-The temperature of the site must be between 15 and 30 deg C and humidity, between 25% and 80%. The machine may not be installed near a water faucet, water boiler, humidifier, or refrigerator.


-The site must not be near a source of fire or in an area subject to dust or ammonium gas. If the area is exposed to the direct rays of the sun, the windows must be furnished with curtains.

-The site must be well ventilated. However, the machine must not be installed near the air vent of the room. The ozone generated by the machine while in operation is not of a level that can harm the health of the individuals around the machine. Nevertheless, some may find it to be unpleasant, and the room must be ventilated often.

-The machine must be placed on a level floor so that all its feet remain in contact with the floor and the machine will remain level.


-There must be enough space around the machine. The following diagram shows the minimum dimensions; whenever possible, be sure there will be more space than indicated:

-Copier [1]

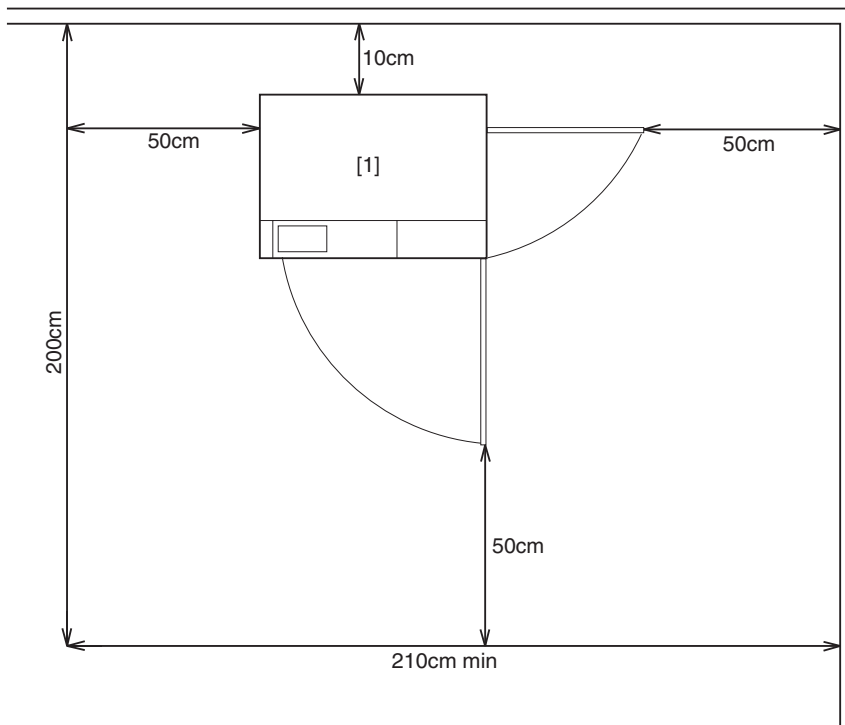

F-2-1


-Copier [1] + Punch Unit [2] + Finisher [3] + Side Deck [4]

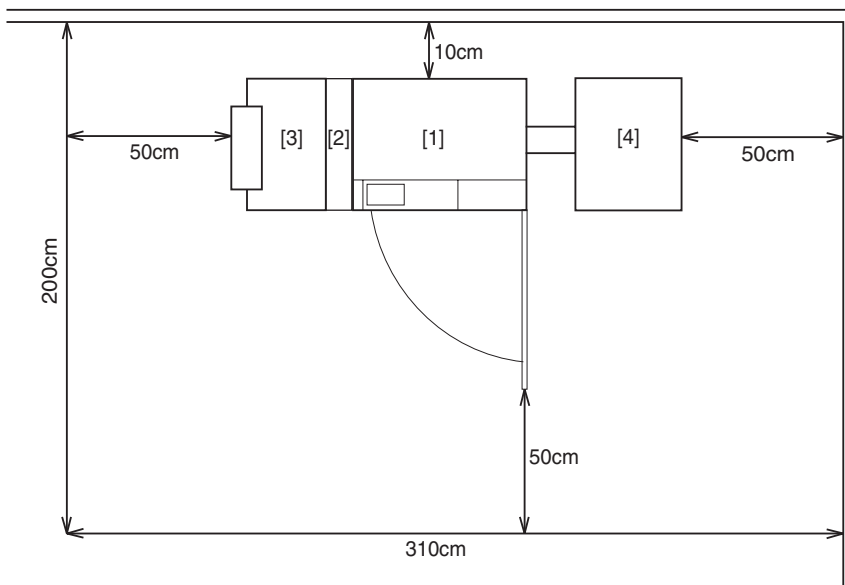

F-2-2

-The machine will be placed on the side of the slope plate having a pin hole [1]. Be sure that the space will be on this side (left side).

The side of the slope plate having a pin hole (left) is where the delivery side of the machine will be, with the front of the machine facing the side indicated by the arrow.

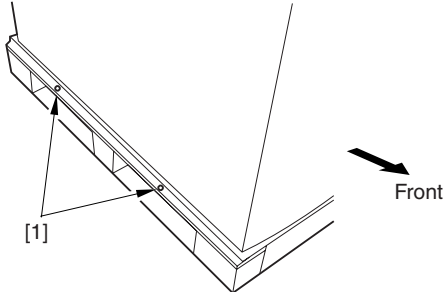


F-2-3

2.1.2 Installation Environment

0002-6399

Be sure that the environment of the site meets the following requirements:

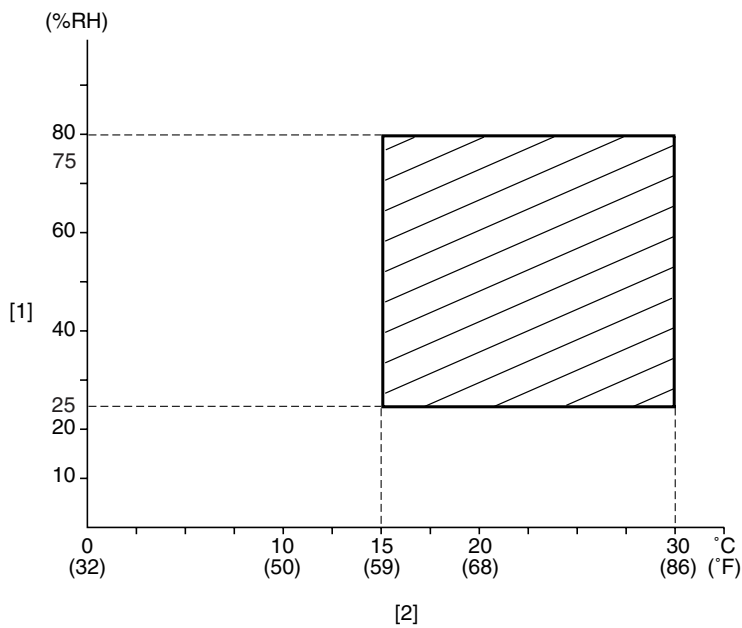

F-2-4


[1] Humidity

[2] Temperature

2.1.3 Checking the Contents

0002-6404

The following shows the contents of the shipping box found with the machine:

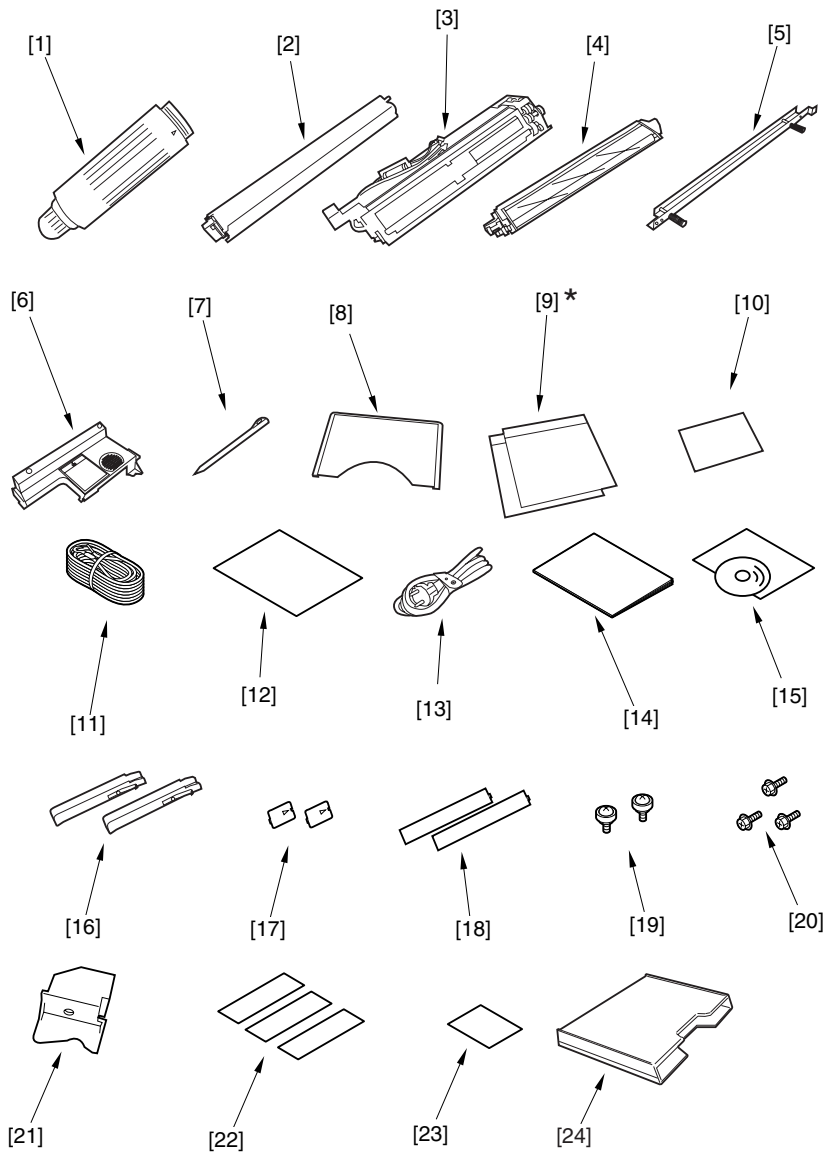

F-2-5

- [1] Black toner bottle (black; only for 100/230V AU model).....1 pc.
- [2] Color toner cartridge (cyan, magenta, yellow;
only for 100V/230V AU model).....1 pc. each
- [3] Black developing assembly (black).....1 pc.
- [4] Color developing assembly (cyan, magenta, yellow).....1 pc. each
- [5] Black developing assembly locking plate1 pc.
- [6] Process unit cover1 pc.
- [7] Touch pen1 pc.
- [8] Service book case1 pc.

-
-
- [9] Cassette size label*2 pc.
 - [10] ADF size label1 pc.
 - [11] Grounding cord (100-V model only)1 pc.
 - [12] QR sheet (100-V model only)1 pc.
 - [13] Power cord (230-V model only)1 pc.
 - [14] Service book1 pc.
 - [15] User's Manual1 pc.
 - [16] Grip2 pc.
 - [17] Pickup assembly face place2 pc.
 - [18] Delivery assembly face plate2 pc.
 - [19] Binding screw (M4x8)2 pc.
 - [20] RS tightening screw (M4x8)3 pc.
 - [21] Left deck locking plate1 pc.
 - [22] No Copy label (non-100-V model)3 pc.
 - [23] Glass Cleaning instructions label (non-100-V model)1 pc.
 - [24] Original holder (120V model only).....1 pc.

* Found inside the cassette 3 (upper cassette).

2.2 Unpacking and Installation

2.2.1 Before Starting the Work

0002-6409

Keep the following in mind when installing the machine:



1. When a machine is moved from a cold to warm location, condensation can occur in its pickup/feeding assembly, ultimately causing image faults. As necessary, leave the machine alone for at least 1 hour without unpacking, and start the work when it has fully become used to the room temperature.

(The term "condensation" refers to a symptom in which droplets of water occur on the surface of a metal object brought in from a cold to warm location as the result of rapidly cooling vapor around it.)

2. The machine weighs about 230 kg. Be sure to work in a group of 4 persons when lifting it.


3. Be sure to turn the 2 adjusters (front) found on the bottom of the machine clockwise to release them. These adjusters can slip off the machine when the machine is moved. Take care not to lose them.

2.2.2 Unpacking the Machine

0002-6411

1) Open the shipping box, and remove the plastic covers.


2) Fit the 2 included grips [2] into the grip slots [1] found on the pickup side of the machine.

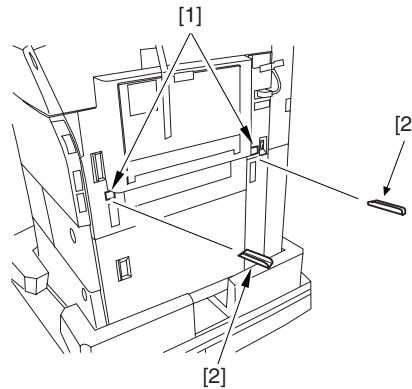

F-2-6

3) While holding the grips on the pickup side (front, rear), lift the machine slightly, and remove the pad [1] in the direction of the arrow.

(weight of the machine: about 230 kg)

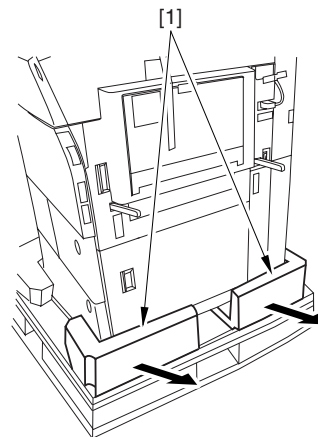


F-2-7

4) While holding the grips on the delivery side (front, rear), lift the machine slightly, and remove the pad [1] in the direction of the arrow.


At this time, do not lift the machine more than necessary. Otherwise, you can lose the balance.

(weight of the machine: about 230 kg)

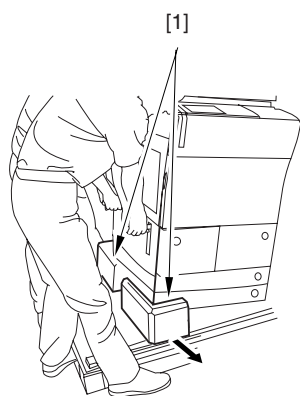

F-2-8


5) Move the machine in the direction of the arrow; then, take out the 2 slope plates [2] from the middle of the skid [1].

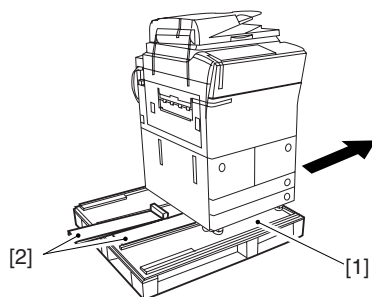

F-2-9

6) Detach the 2 pins taped to the back of the slope plate.


7) Turn over the slope plate [1], and set it as shown; then, match the skid and the slope plate by their pin holes, and fit the pin [2] (1 pc. each).

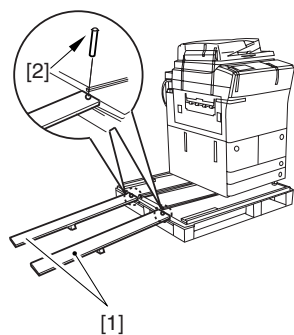

F-2-10



Check to make sure that the caster [1] has not rolled off the skid [2]. Also, be sure that it has not ridden over the edge [3] of the skid.

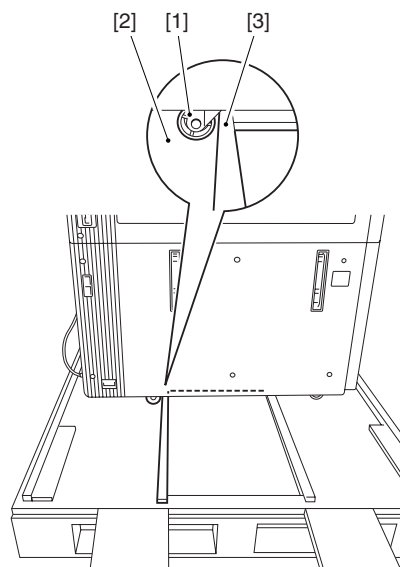


F-2-11

8) While holding the grips on the delivery side of the machine, move the machine along the slope plates and off the skid.


9) Remove the packing tape from the machine.

10) Remove the 2 grips from the pickup side.

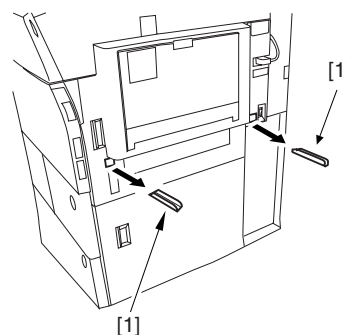


F-2-12

11) Fit the 2 included pickup assembly face plate [2] over the holes [1] from which you have removed the grips.

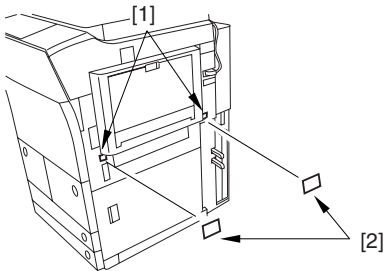


F-2-13

12) Remove the 2 screws [1], and rear right cover [2].

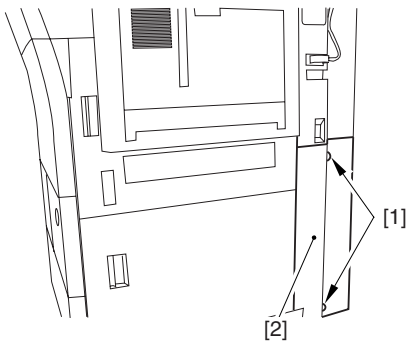


F-2-14

13) Fit the 2 grips [1] you removed in the foregoing step in the compartment [2] found at the rear right of the machine.

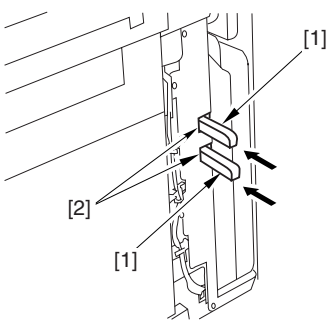


F-2-15

14) Fix the right cover (lower rear) [2] in place with 2 screws [1].

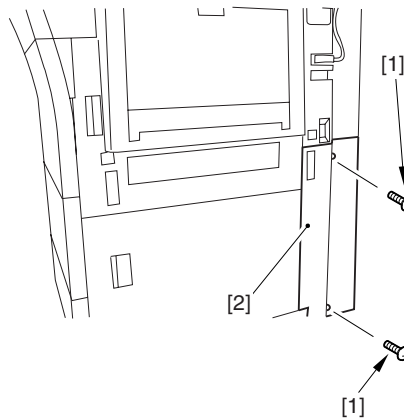


F-2-16

15) Shift down the 2 grips [1] on the delivery side as shown so that they are inside the machine.

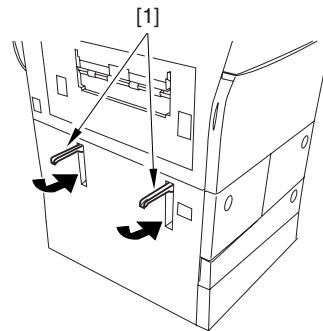

F-2-17

16) Fit the 2 included delivery assembly face plates over the holes [1] in which you have fitted the grips.

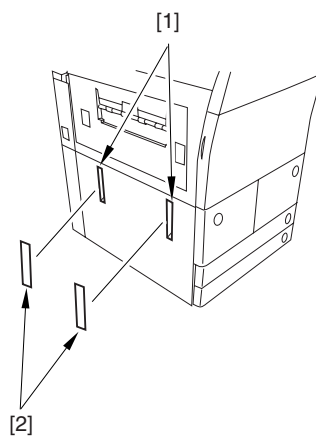


F-2-18

2.2.3 Mounting the Pickup

Assembly


0002-6414

- 1) Detach the 3 shipping tags [1] from the upper right cover and the lower right cover.

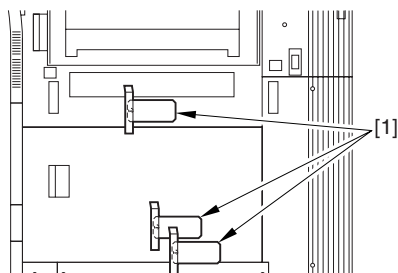

F-2-19

- 2) Open the upper right cover [1] and the lower right cover [2]; then, remove the 3 unlocking spacers [3] from the pickup slot of the right deck and the cassettes.

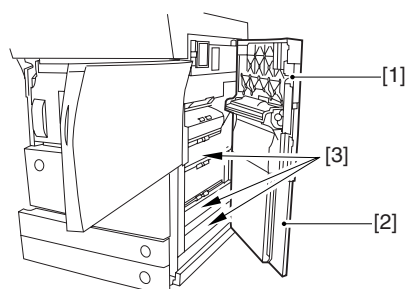


F-2-20

- 3) Close the upper right cover and the lower right cover.
- 4) Push the release button, and slide out the left deck.



The left deck is not supported by its locking plate, and the deck assembly may not slide out in response to a press on the release button. If so, slide out the deck assembly by hand.

- 5) Open the front cover.
- 6) Match the included left deck locking plate [1] against the 2 holes in the left deck rear side plate; then, secure it in place using a screw (RS tightening; M4x8) [2].

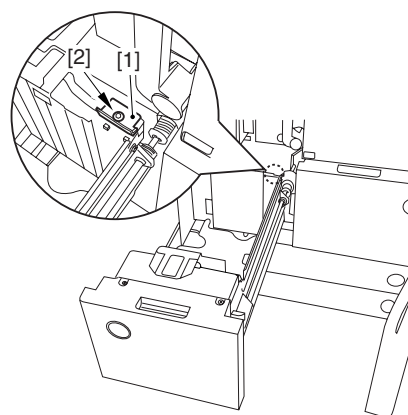

F-2-21



-When mounting the left deck locking plate, take care not to trap the left deck cable by the plate. (To facilitate the work, try lightly pushing down on the deck cable.)

-Pull lightly on the deck cable to see that the cable is not trapped.


- 7) Close the left deck.

2.2.4 Mounting the Scanner

System

0002-6566

- 1) Open the ADF, and remove the packing material.
- 2) Remove the screw [1] used to fix the scanner in place.

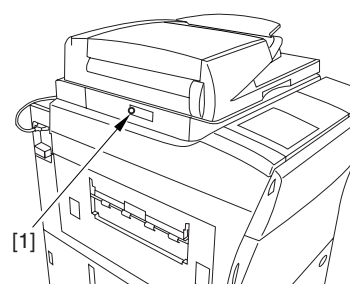


F-2-22

⚠ Advise the user to store away the screw used to fix the scanner system in place. It will be used when relocating the machine in the future.

2.2.5 Locking the Primary

Transfer Roller in Place 0002-6568

1) Lift the primary transfer roller locking lever [1] in the direction of the arrow to lock the roller in place; then, fix the primary transfer roller locking lever [1] in place using the included binding screw (M4x8) [2].

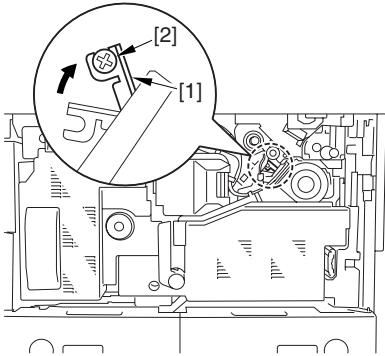


F-2-23

2.2.6 Before Mounting the


Developing Assembly 0002-6569

1) Pull the grip [1] toward the front to fully open the upper right cover [2].

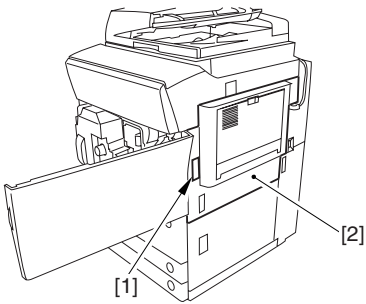


F-2-24

2) Remove the 2 screws [1], and detach the right cover (upper) [2].

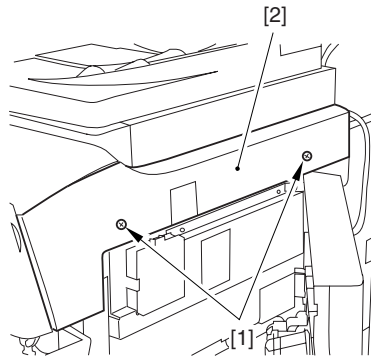


F-2-25

3) Push the release button [1] of the right deck, and slide out the right deck [2].

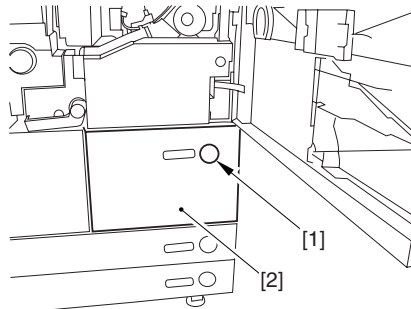


F-2-26

4) Remove the screw [1] found at the lower right; then, detach the front cover strap [2].

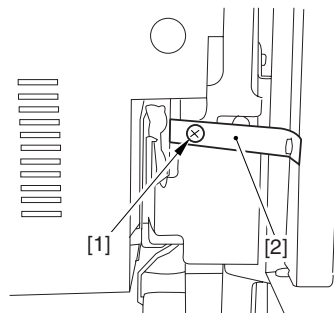

F-2-27


5) Remove the 2 screws [1] (binding) of the front cover; then, fully open the front cover [2].

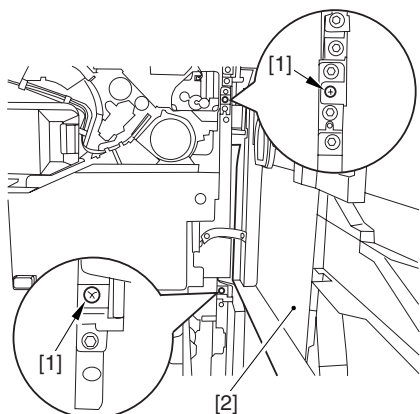

F-2-28


6) Close the right deck.

7) Open the black toner supply cover [1].

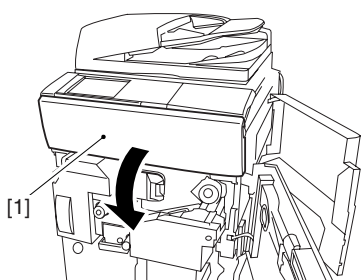


F-2-29

8) Remove the 3 screws [1].

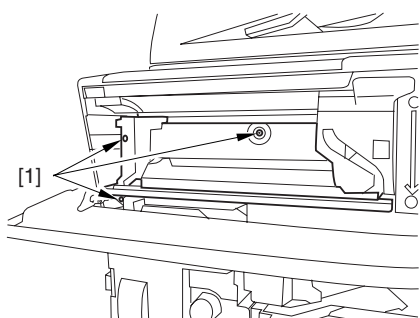


F-2-30

9) Close the black toner supply cover [1]; then, fully open the hopper assembly [2].

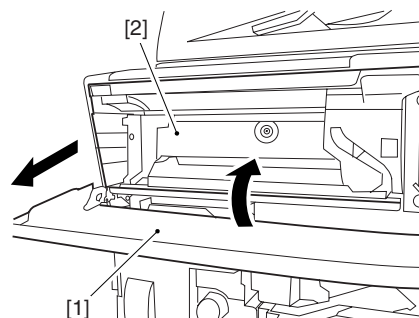


F-2-31

10) Disconnect the 4 connectors [1] found at the upper right.

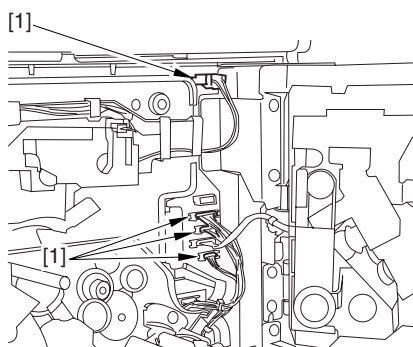


F-2-32

11) Disconnect the 4 connectors [1] found at the upper left.

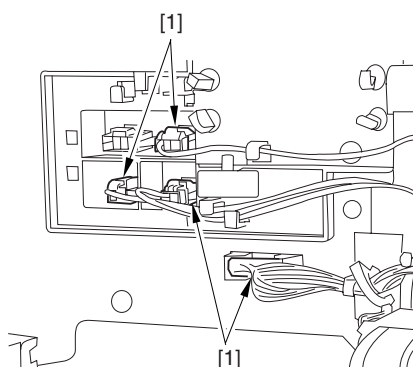


F-2-33

12) Free the connector cable [1] of the high-voltage side from the 2 wire saddles [2] to avoid trapping it. (Keep it on the cable hook [3] during the work.)

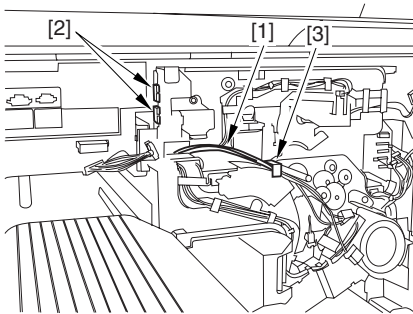

F-2-34


13) Take out the process unit cover [1] from the box; then, detach the drum stop tool [2] fitted to its back.

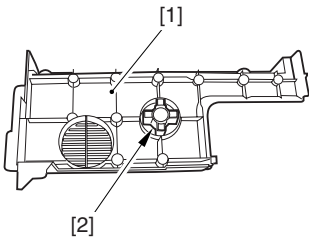

F-2-35


14) Hold the drum fixing member [1] in place using the drum stop tool [2]. Then, using a screwdriver, remove the drum fixing screw [3].

⚠ As shown in the figure, be sure to remove the screw on the protrusion [4] of the drum stop only after matching it against the notch [5] in the drum flange.

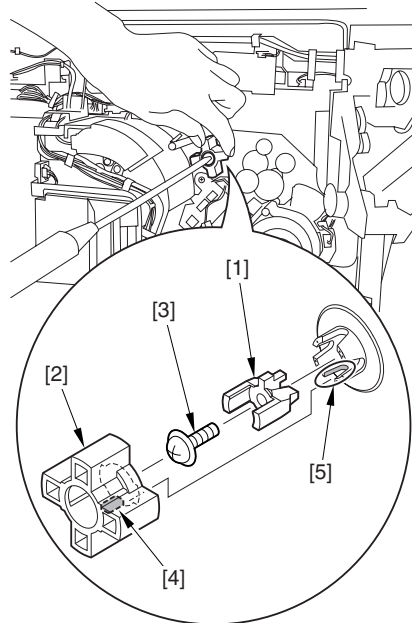


F-2-36

15) Remove the drum fixing member [1] using precision pliers.

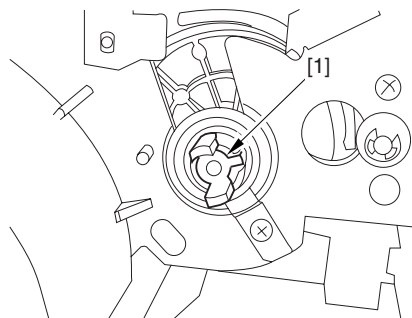


F-2-37

16) Remove the 3 binding screws (M4x8) [1].

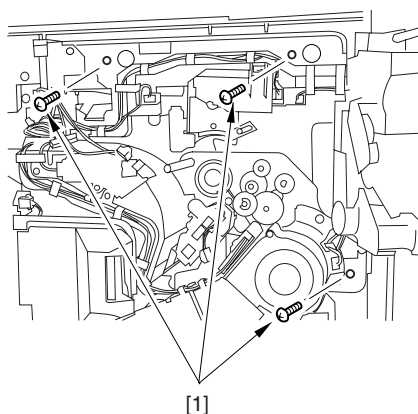


F-2-38

17) Shift down the fixing/feeding assembly releasing lever [1] in the direction of the arrow.

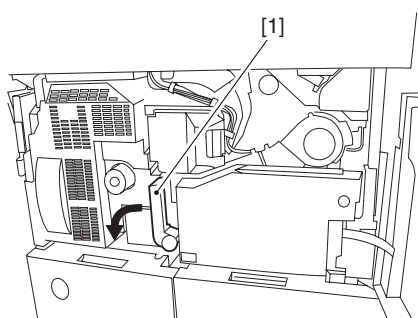


F-2-39

18) Slide out the fixing/feeding assembly [1] to the front.

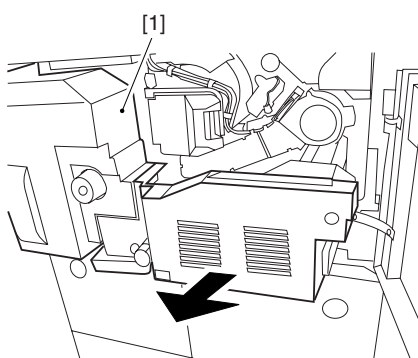


F-2-40

19) Push the 2 slide-out hook [1] found on both sides of the fixing/feeding assembly, and fully slide out the fixing/feeding assembly [2].

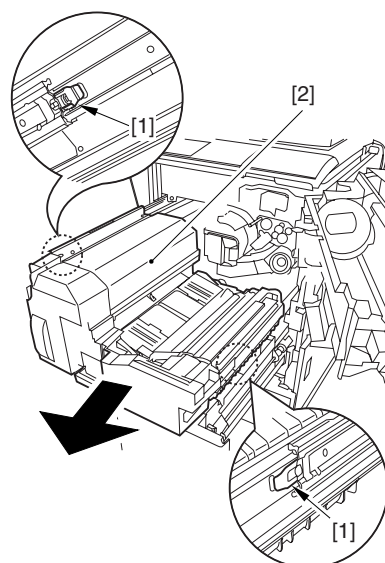

F-2-41

20) Lift both ends [1] of the process unit slightly; then, fully slide out the process unit [2] to the front.

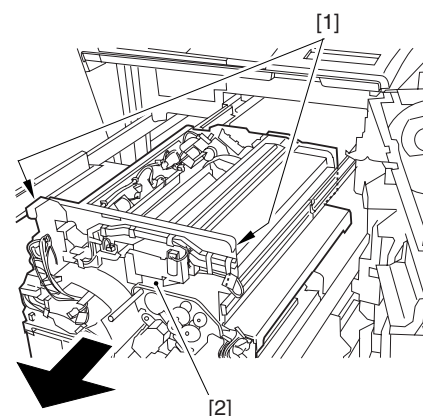

F-2-42



1. Be sure to take care not to deform the joint plate found at the left end when drawing out the process unit.
2. When drawing out the process unit, be careful not to lift the process unit more than necessary. The unit may slip off the rails, not permitting detachment.
3. When you have slid out the process unit, try placing paper between the photosensitive drum and the developing rotary to protect the drum from scratches and light.


2.2.7 Mounting the Color

Developing Assemblies 0002-6670

⚠ If you must touch a color developing assembly, be sure that your hands are free of foreign matter (especially of metal) before doing so. (Adhesion of foreign matter on the cylinder is likely to cause image faults.)

- 1) Take out the color developing assembly (yellow, magenta, cyan) from its package box.
- 2) Push the lever [1] of the developing rotary solenoid once by hand; then, turn the developing rotary [2] counterclockwise by hand.


⚠ If you turn the developing rotary clockwise with a color developing assembly fitted in place, the anti-stray sheet attached to the sleeve of the color developing assembly can come off by friction against the photosensitive drum. Be sure to turn the developing rotary always in counterclockwise direction.

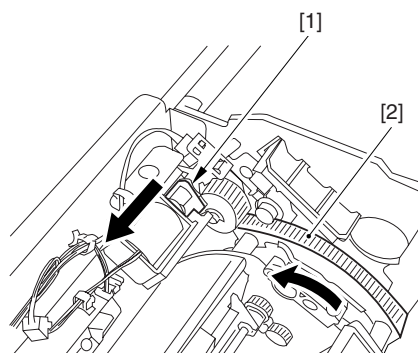

F-2-43


- 3) Turn the developing rotary so that its partition side [1] is vertical (i.e., position for mounting the developing assembly).

⚠ If you keep pushing the lever of the developing rotary solenoid, the developing rotary will not stop to permit mounting the developing assembly. When you have pushed the lever once, turn the developing rotary slightly and then let go of the lever.

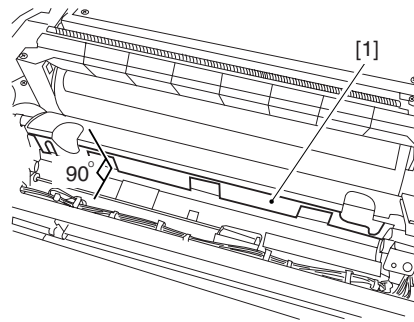

F-2-44


- 4) Peel off the protective sheet [1] from the toner supply mouth of the developing rotary.

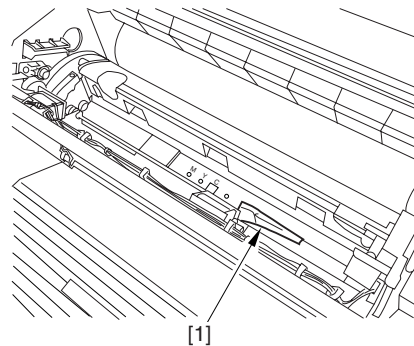

F-2-45

- 5) Remove the 2 screws [1], and open the 2 developing assembly arms [2] in the direction of the arrow.


⚠ Be sure to fix the developing fixing arm in place with a screw before turning the developing rotary.

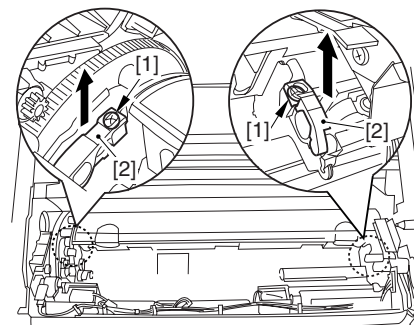

F-2-46

6) Have the appropriate color developing assembly on hand by checking the ID mark [1] attached to the developing rotary assembly.


The following shows the ID mark attached to the cyan color developing assembly.

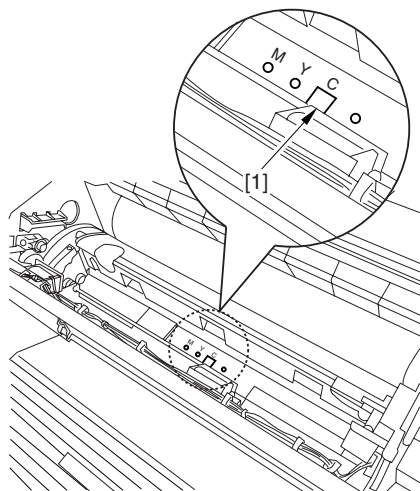

F-2-47

7) Place A3 paper on a smooth table, and place the appropriate color developing assembly.

8) With the developing cylinder of the color developing assembly facing upward, detach the tape [1]; then, pull out the protective sheet [2] while holding both its edges.

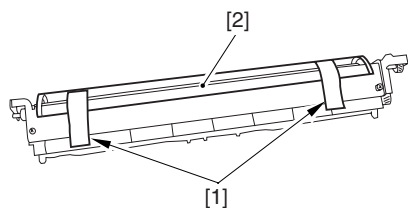


F-2-48




1. Do not touch the developing cylinder.
2. After finishing the foregoing step, be sure to change the orientation of the color developing assembly so that the sponge side faces upward.
- 9) Remove the tape [1], and detach the sponge.

⚠ Toner and starter can start to leak when the sponge has been detached. Do not keep the supply mouth facing down during the work.

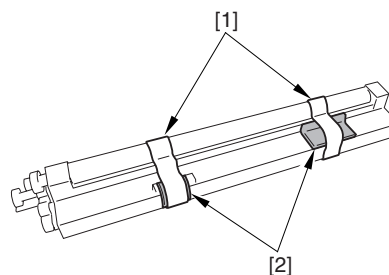

F-2-49

10) Check for scratches on the developing cylinder while turning the developing cylinder gear [1] 5 to 6 times in the direction of the arrow. The work also serves to even out the starter inside the unit.

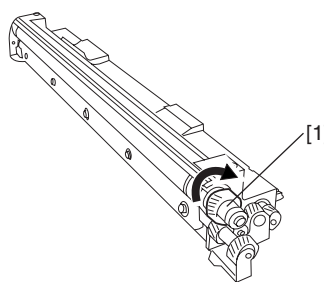


F-2-50

11) Make sure that the color developing assembly matches the ID mark; then, fit it in the developing rotary.


To do so, start with the front of the color developing assembly; while keeping its front fully against the front of the developing assembly, fit its rear in place.

⚠ Try holding the color developing assembly by both its ends to facilitate the work.

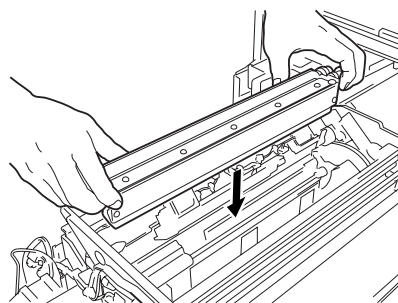

F-2-51

12) Close the 2 developing assembly fixing arms [1] in the direction of the arrows; then, fix them in place using 2 screws [2].

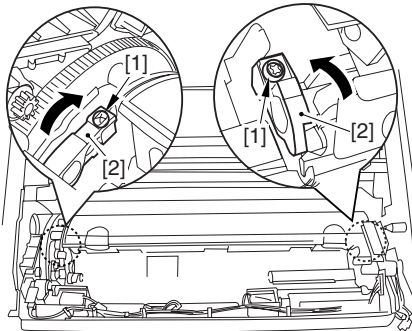


F-2-52


13) Repeat steps from 2) to 12) to fit all 3 color developing assemblies in the developing rotary.

14) If the developing cylinder [1] is found as in the figure marked NG, turn the developing rotary so that it is positioned as shown in the figure marked OK.

OK

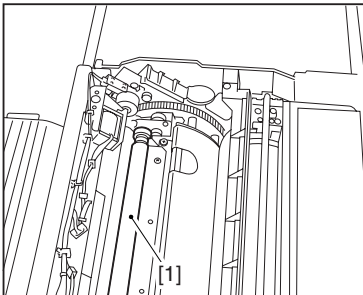


NG

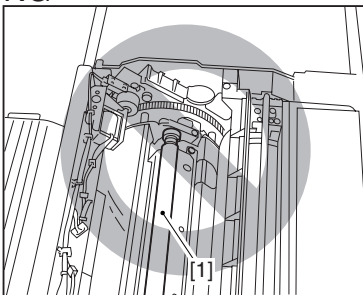


F-2-53

15) Loosen the screw [2] used to hold the torque limiter [1] of the developing rotary in place; then, slide it upward to release.

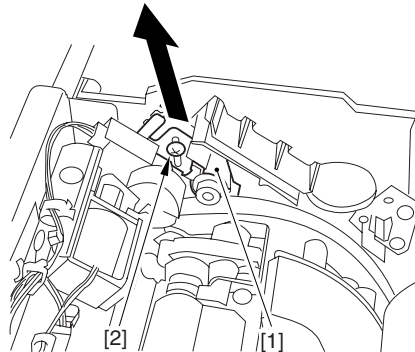

F-2-54

16) Fix the torque limiter in place using a screw [1].

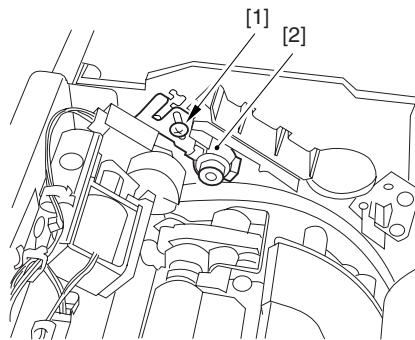

F-2-55


⚠ If you fail to release the torque limiter, you will not be able to mount the locking plate of the black developing assembly. Be sure not to leave out the work.

2.2.8 Mounting the Black

Developing Assembly 0002-6683

⚠If you must touch a black developing assembly, be sure that your hands are free of foreign matter (especially of metal) before doing so. (Adhesion of foreign matter on the cylinder is likely to cause image faults.)

1) Remove the 2 screws [1], and detach the joint plate [2].

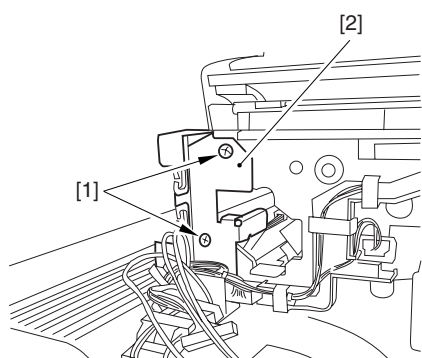

F-2-56


2) Hold the black developing assembly in lengthwise direction, and take it out of its package box.



-The machine's black developing assembly is equipped with a potential sensor. Do not touch the detection window [1] of the sensor.

-Do not subject the black developing assembly to impact to prevent damage to the potential sensor as by dropping it.


-Be sure to place paper before placing the black developing assembly on the floor or a table.

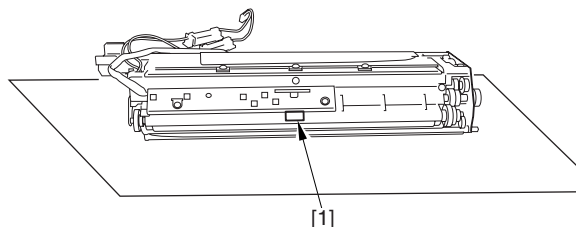

F-2-57

3) Turn the developing cylinder gear [1] by hand to check for scratches on the cylinder.


⚠ Do not touch the area [2] of the developing cylinder cover indicated in the diagram; otherwise, the blade can leave its trace on the cylinder.

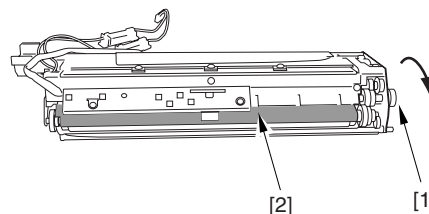

F-2-58

4) Turn the developing cylinder gear by hand to look for scratches on the cylinder.

5) Peel off the tape [2] used to keep the high-voltage cable [1] in place.

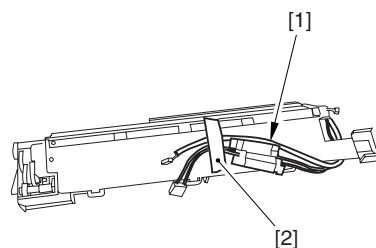


F-2-59

6) Hold the black developing assembly [1] by both its ends; while keeping it level, fit it in place while pushing it downward at an angle.


At this time, be sure that the boss [2] at the rear of the developing assembly matches the left guide [3] of the machine.

Be sure also that the rib [4] at the front of the developing assembly matches the right guide at the front of the machine.

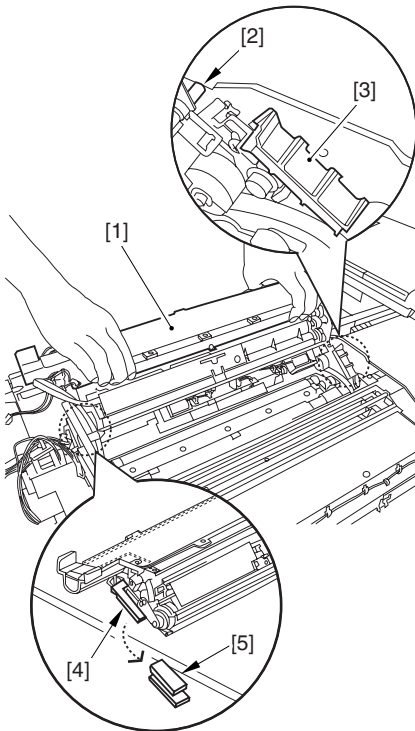


F-2-60

⚠ When fitting the black developing assembly in the machine, try keeping the high-voltage cable [1] on top of the assembly. Otherwise, the cable can get trapped when the assembly is put inside the machine.

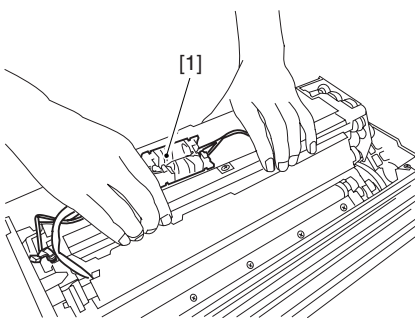


F-2-61

7) Route the cable [1] having the tube of the black developing assembly through the hole [2] indicated in the figure.

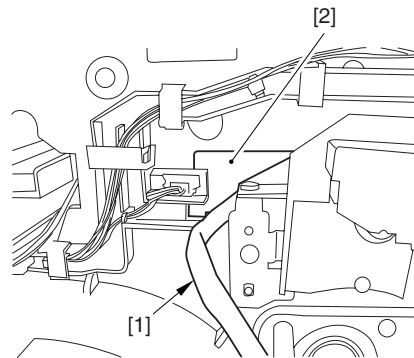


F-2-62

8) Route the high-voltage cable [1] of the black developing assembly along the side of the toner supply mouth [2].

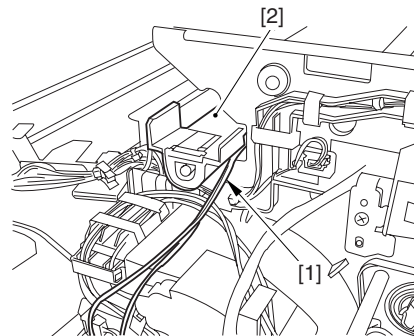


F-2-63

9) Connect the connector [1] found at the inside front.

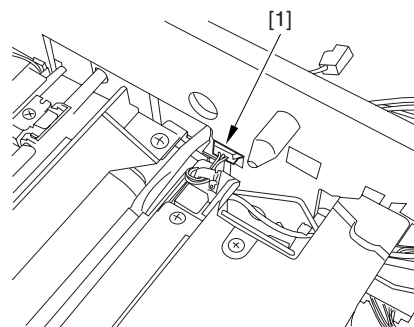

F-2-64


10) Fix the joint plate [1] in place using 2 binding screws [2].

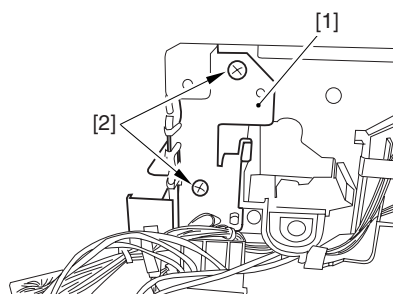

F-2-65


11) Remove the paper put between the photosensitive drum and the developing rotary.

12) Fit the protrusion [1] of the included black assembly locking plate into the positioning hole [2] found at the rear of the machine.

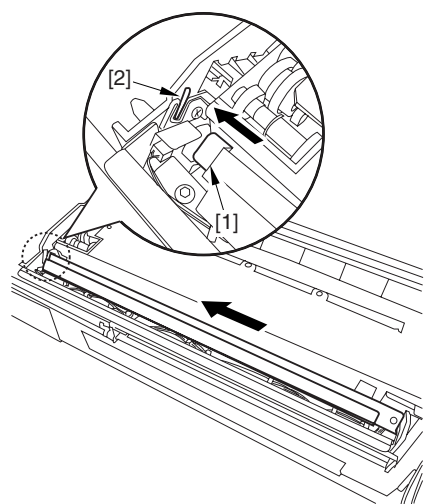

F-2-66

13) Fix the black developing assembly locking plate [1] in place using the included screw (binding; M4x8) [2].

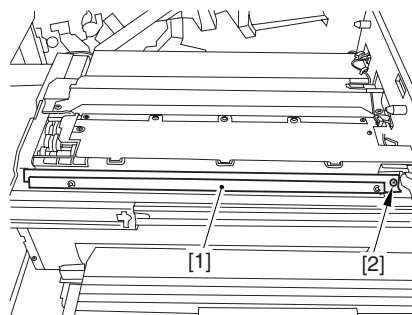

F-2-67

14) Close the process unit.



Take care not to trap the cable found at the right front of the machine by the process unit. Be sure to close the process unit while the front cover is fully open.



If you cannot fit the process unit all the way to the rear, go through the following:


Slide out the process unit, and turn the developing rotary drive gear found on the host side slightly; thereafter, be sure to close the process unit.

2.2.9 Mounting the Process Unit

Unit


0002-6689

1) Match the area [1] where the resistance of the high-voltage cable is found in the upper left of the front against the 4 pins [2] of the host machine; then, fix it in place using the 4 clamps [3].

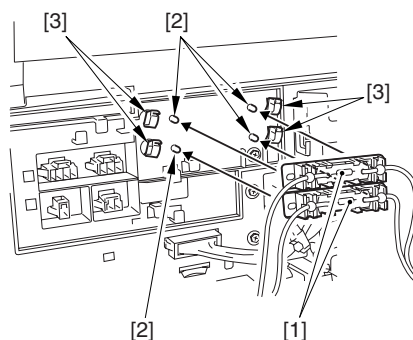


F-2-68

- 2) Fit the 2 cables [1] into the cable clamp [2].
- 3) Connect the 2 connectors [3], and fit the 2 cables [4] into the 3 cable guides [5].

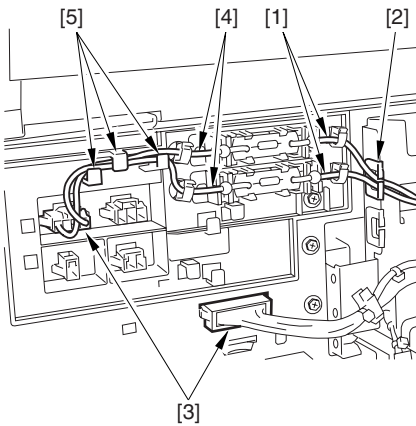


F-2-69

- 4) Connect the 3 connectors [1], and fit the cable into the 4 cable guides [2] and the 2 cable clamps [3].

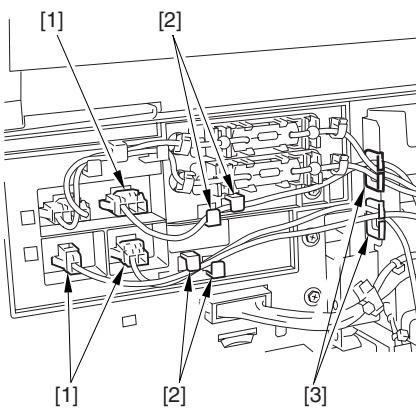


F-2-70

- 5) Connect the 4 connectors at the upper front right.

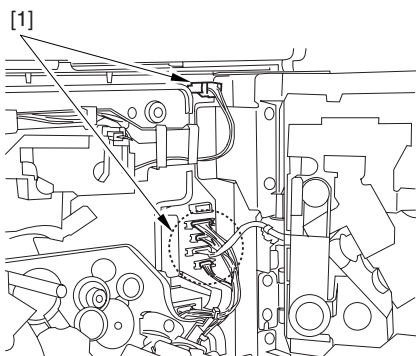


F-2-71

- 6) Fix the cable [1] of the black developing assembly in place using the harness guide [2].

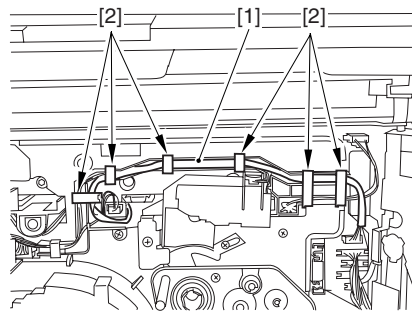


F-2-72

- 7) Connect the connector [1] coming from the black developing assembly.

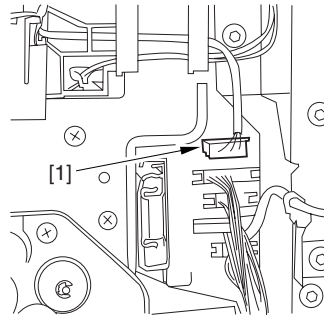

F-2-73

- 8) Secure the process unit [1] in place using 3 binding screws (M4x8).

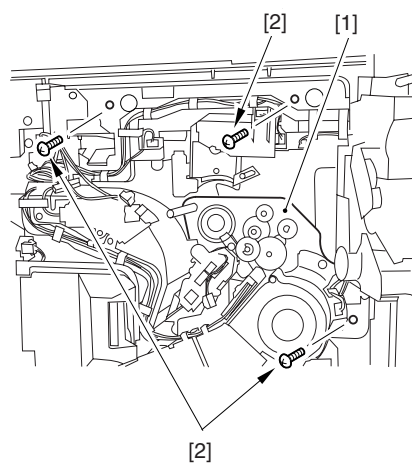


F-2-74

⚠ Be sure to use the binding screws. The use of RS tightening screws in the area of aluminum die-casting can damage the threads of the screws.

9) Fit the drum fixing member [2] to the drum flange [1]; then, hold it in place using the drum stop tool. Thereafter, tighten the drum fixing screw [4] using a screwdriver.

⚠ Be sure to fix the protrusion [5] of the drum stop tool in place with a screw while matching it against the notch [6] of the drum flange.

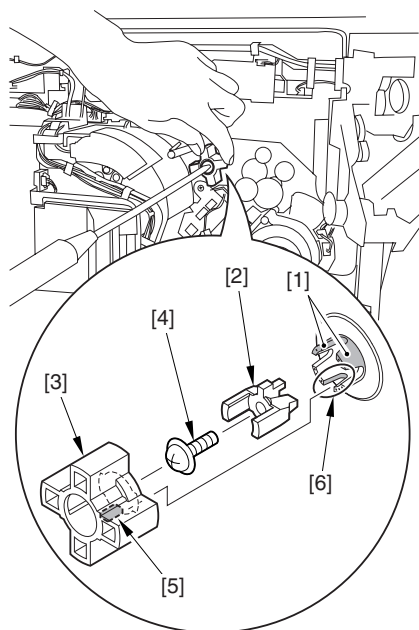


F-2-75




1. If the photosensitive drum is let to turn clockwise during the work, the scoop-up sheet can become soiled to cause stray toner. Be sure to hold the drum stop tool firmly in place when tightening the drum fixing screw.

2. Check to be sure that the protrusion of the drum fixing member is between the markings [1] "." and ".." of the drum flange.

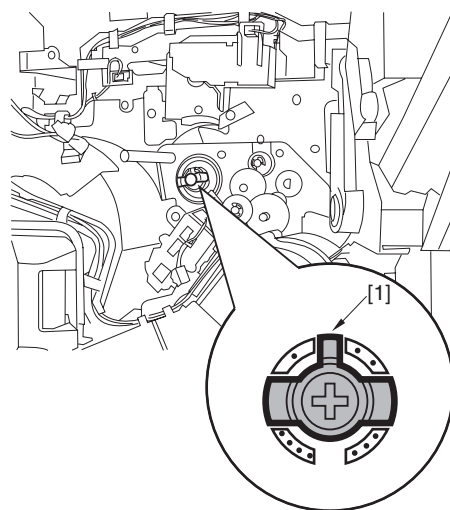

F-2-76

3. Be sure to attach the drum stop tool [2] to the back of the process unit cover [1] for possible future relocation of the machine.

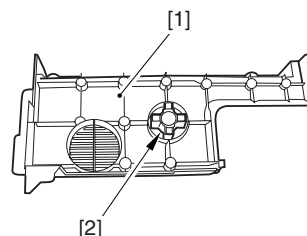


F-2-77

10) Close the fixing/feeding assembly.

11) Loosen the screw [1], and move the charging assembly fixing [2] in the upper right direction; then, fix it in place using a screw.


12) Disconnect the connector [3], and detach the primary charging assembly [4]. Check the primary charging wire and the shielding plate for soiling. If it is soiled with dirt or paper lint, clean it using alcohol.

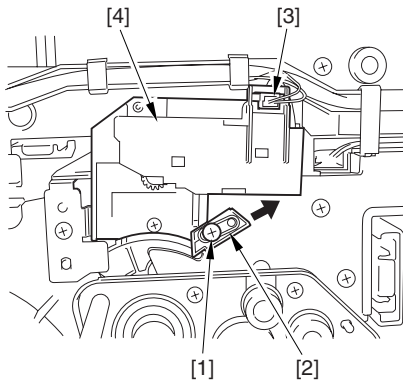

F-2-78

13) Disconnect the connector [1], and remove the screw [2].

14) Take out the pre-transfer charging assembly [3]. Check the pre-transfer charging wire and the shielding plate for soiling. If it is soiled with dirt or paper lint, clean it using alcohol.

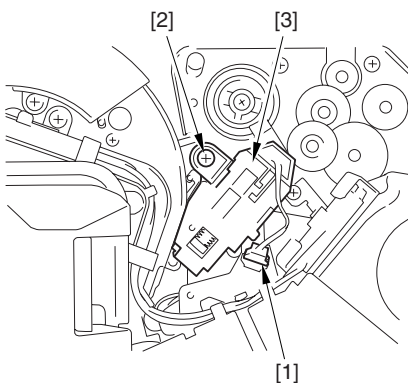


F-2-79

15) Mount the primary charging assembly and the pre-transfer charging assembly.

16) Close the hopper assembly.


17) Open the black toner supply cover [1].

18) Secure the hopper assembly [1] in place using 3 screws [2].

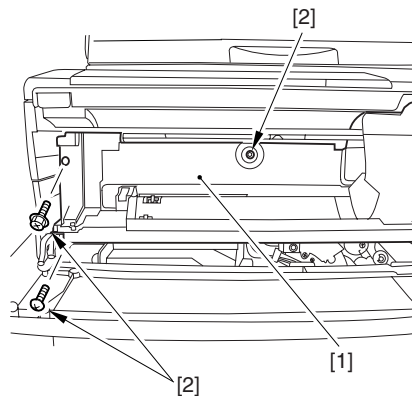

F-2-80

19) Close the black toner supply cover [1].

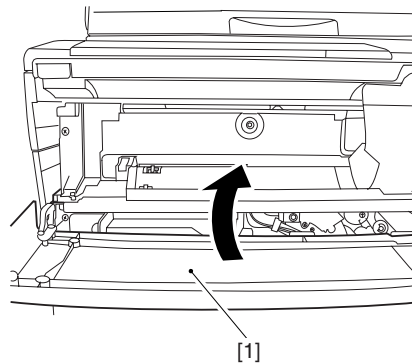


F-2-81

20) Slide out the right deck.


21) Fix the front cover hinge [1] in place using 2 binding screws [2].

22) Fix the front cover strap [3] in place using a screw [3].

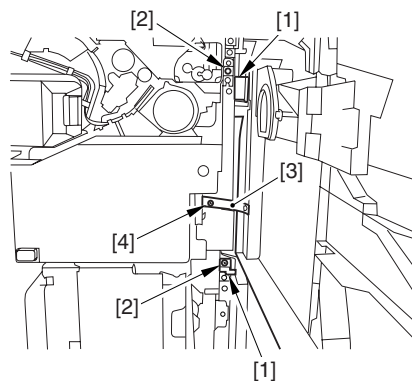


F-2-82

- 23) Close the right deck.
- 24) Slide out the fixing/feeding assembly.
- 25) Open the color toner supply cover [1].

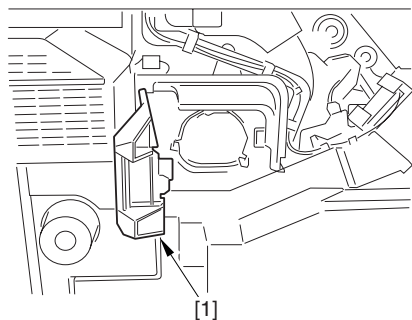


F-2-83

- 26) Fix the process unit cover [1] in place using the 2 RS tightening screws (M4x8) [2].
- 27) Close the color toner supply cover.

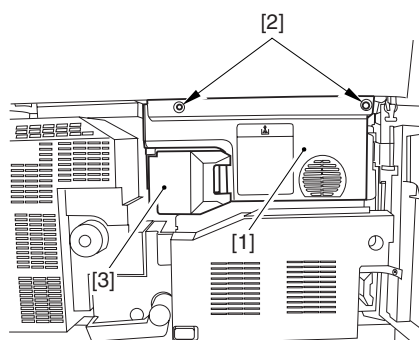

F-2-84

- 28) Fix the right cover (upper) [1] in place with 2 screws [2].

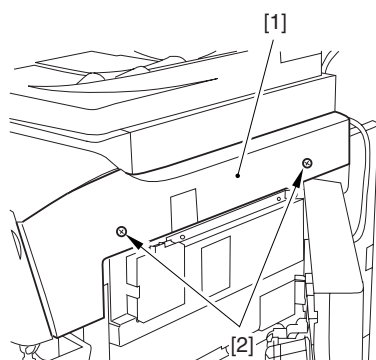

F-2-85


- 29) Close the right upper cover.

2.2.10 Mounting the Fixing

Assembly


0002-6697

- 1) Slide out the fixing/feeding assembly fully.
- 2) Open the reversal delivery cover [1].

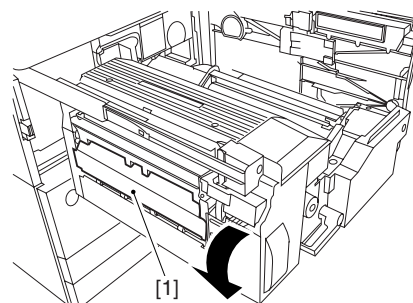


F-2-86

- 3) Open the middle cover [1].

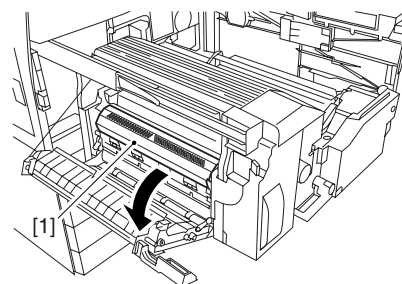


F-2-87

- 4) Peel off the tape [2] used to keep the tag [1] in place.

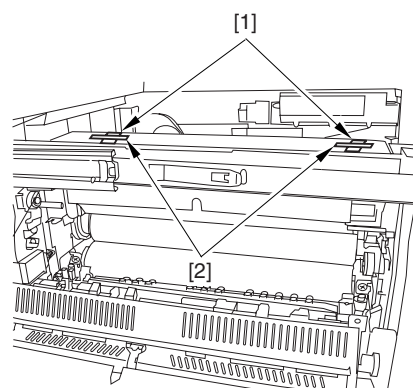

F-2-88


5) Remove the 2 fixing nip releasing screws [1].

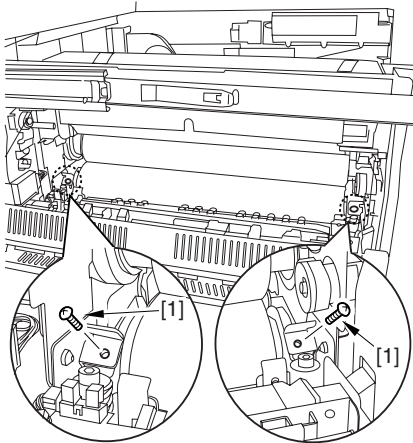

F-2-89


6) Check the fixing web for any slack; as necessary, perform steps 7) and 8).

7) Remove the 3 screws [1] and the fixing knob [2]; then, detach the fixing front cover [3].

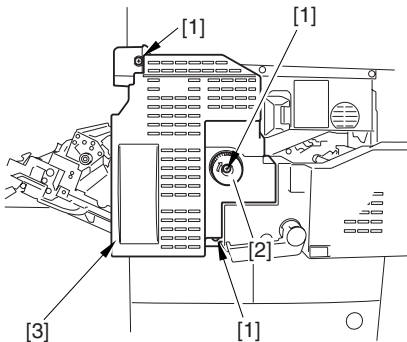

F-2-90

8) Turn the gear [1] counterclockwise (viewing the machine from the front) to remove the slack.

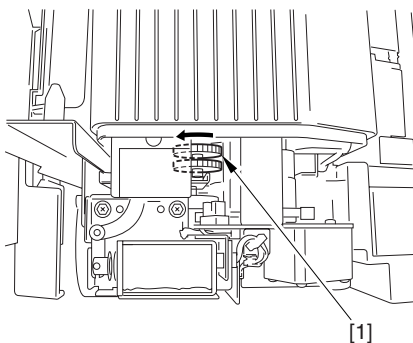

F-2-91

9) Mount back the fixing front cover and the fixing knob by reversing the work in step 7).

10) Close the middle cover.

11) Close the reversal delivery cover.

12) Close the fixing/feeding assembly.

13) Lock the releasing lever in place; then, close the front cover.


2.2.11 Fitting the Black

Toner Bottle

0002-6699


1) Take out the black toner bottle from its packaging box.

2) Open the black toner supply cover [1]; then, push down the lock lever [2].

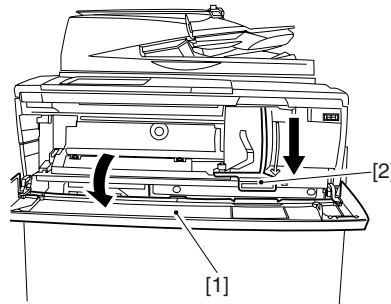


F-2-92

3) Hold the black toner bottle [1] as shown in the figure; then, turn the cap [2] in the direction of the arrow to detach from the bottle.

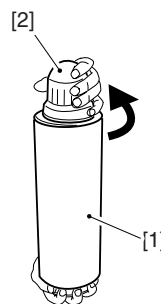


F-2-93

4) Hold the black toner bottle with its mouth [1] on the right side; then, fit it in the supply case [2] of the machine.

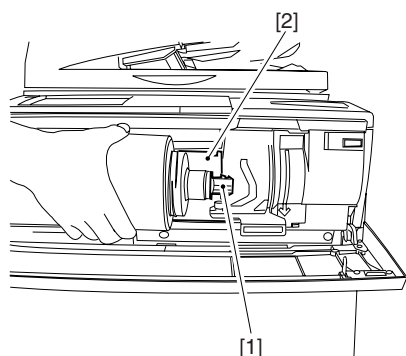

F-2-94

5) Shift the lock lever [1] upward to lock the black toner bottle [2] in place.

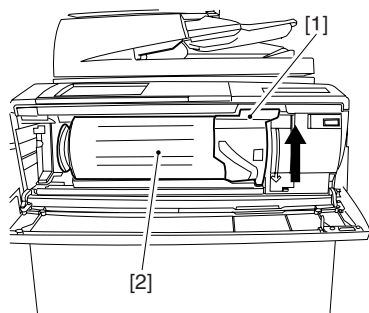


F-2-95

6) Close the black toner supply cover.

2.2.12 Checking the Environment Switch 0002-6701

1) Set the environment switch to suit the site of installation.

If the site is in a high humidity environment, turn on the environment switch [1] (so that the drum heater will go on regardless of the state of the main power switch [2]).

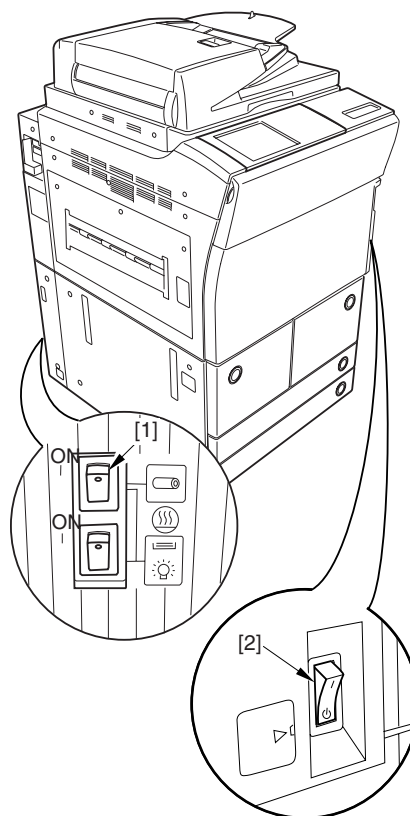

F-2-96

⚠ At time of shipment from the factory, the environment switch is off.

2.2.13 Turning On the Main Power Switch


0003-1015



1. Be sure to remove all packing material from the cassette before turning on the main power.
2. In the case of the 230-V model, take out the power cord from the shipping box; then, connect its one end to the machine and the other end to the power outlet.
3. The rotary starts to rotate when the main power is tuned on. Do not use the door switch actuator.

- 1) In the case of the 100V model, connect the grounding wire to ground the machine.
- 2) Connect the machine's power plug to the power outlet, and turn on the main power [1].
- 3) Execute the following in service mode to disable initial rotation:
COPIER>FUNCTION>INSTALL>AINR-OFF;
then, set it to '1'.

Be sure to execute the foregoing service mode item after turning on the power to disable initial rotation. If the power is turned off and then on, the machine will start initial rotation, possibly causing an error in its image stabilization mechanism.

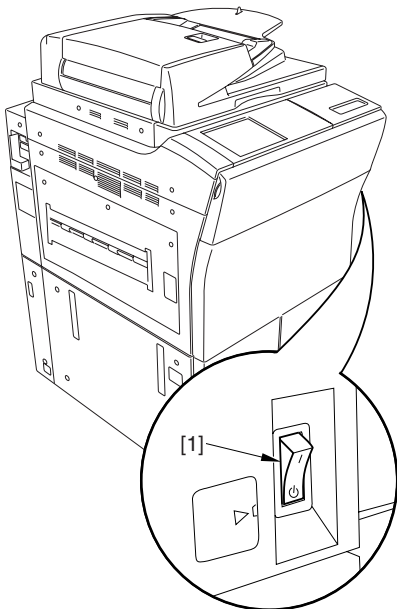


F-2-97

2.2.14 Setting Up the Paper Cassette


0002-6732

- 1) Press the cassette release button, and slide out the cassette to the front.
- 2) Check with the user to find out the type of paper to use; then, check to see if the size configuration switch [1] of the cassette is set to the desired paper type. If not, set the cassette to suit the type.
- 3) Turn the paper size dial [2] to suit the desired paper size.

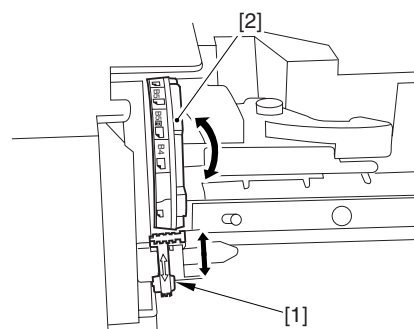


F-2-98

- 4) Pick the lever [1] of the side guide plate, and move the side guide plate to the desired size marking.
- 5) Remove the lever [2] of the rear end guide plate. Fit the rear end guide plate to match the desired size marking on the bottom plate of the cassette.

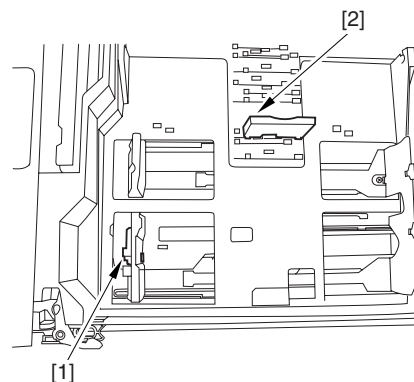


F-2-99

- 6) Attach the correct size label [1] to the front of the cassette.

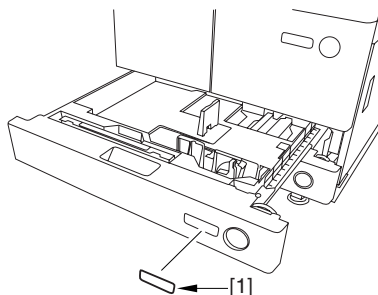


F-2-100

- 7) Deposit paper in the cassette; then, slide the cassette back into the machine.
- 8) As necessary, perform the same work for the other cassette.
- 9) Open the front cover; then, detach the color toner cartridge supply tab [1] from its back.

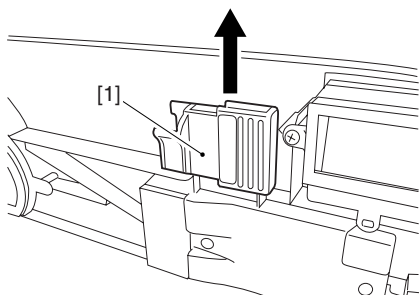

F-2-101

- 10) Peel the 2 color toner cartridge replacement supply tab labels from the 2 base sheets on which the cassette size label was found.
- 11) Attach the 2 color toner cartridge replacement supply tab labels [2] to the color toner cartridge replacement supply tab [1].

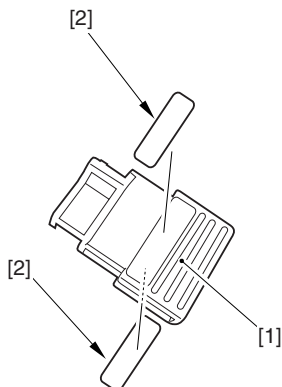


F-2-102

- 12) Fit the color toner cartridge replacement supply tab to the back of the front cover; then, close the front cover.

2.2.15 Changing the Deck

Paper Size (right, left) 0002-6733


- 1) Open the front cover.
- 2) Push the release button, and slide out the right deck.
- 3) Remove the screws [4] (3 pc. in total), and detach the rear end guide plate [1], left guide plate [2], and right guide plate [3]. Then, fix them in place to suit the needs of the user.

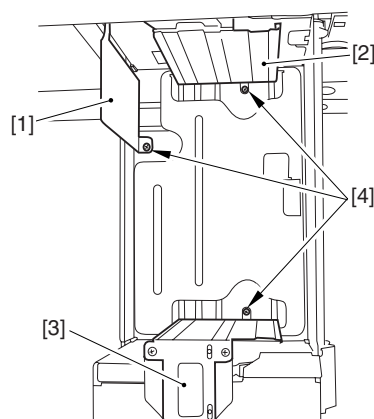

F-2-103

at time of shipment : A4 size (100/230V), LTR size (120V)

- 4) Deposit paper in the right deck; then, slide it back into the machine.
- 5) Attach the size sticker [1] of the new paper size to the front of the deck.

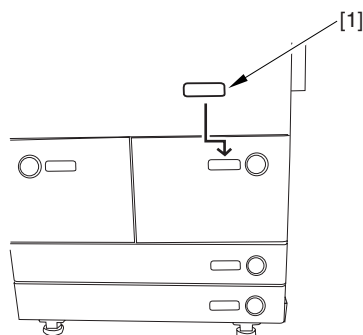

F-2-104


- 6) As necessary, perform the same work on the left deck.
- 7) After changing the size, execute the following in service mode to register the front deck paper size: for the right deck, COPIER>OPTION>CST>P-SZ-C1; for the left deck, COPIER>OPTION>CST>P-SZ-C2 (A4=0, B5=1, LTR=2).
- 8) Press the Reset key twice to end service mode.

2.2.16 Fitting the Color

Toner Cartridge


0002-6703

- 1) Take out the color toner cartridge (yellow, magenta, cyan) from its packaging box.
- 2) Hold the color toner cartridge (yellow, magenta, cyan) as shown with both hands, and turn it in the direction of the arrows 10 times to even out the toner inside it.

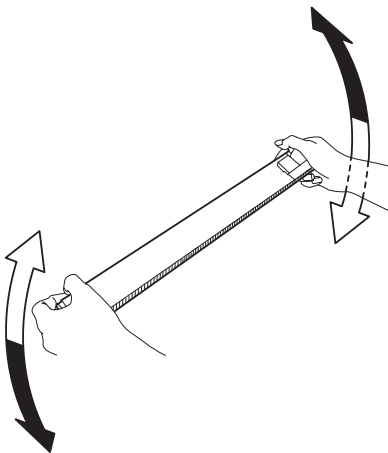


F-2-105

⚠ When turning the color toner cartridge, be sure not to touch the shutter assembly or turn the knob; otherwise, the toner can start to leak.

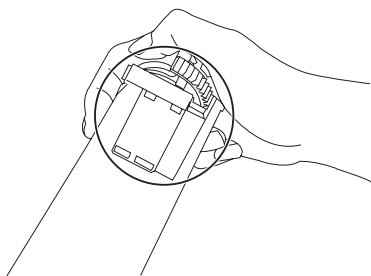


F-2-106

- 3) Check to see that the control panel indicates the message "Set the Toner Cartridge."
- 4) Open the front cover.
- 5) Open the color toner supply cover [1].

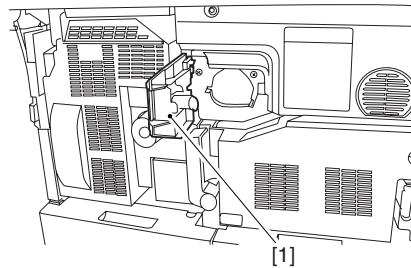


F-2-107

- 6) Fit the Y toner cartridge [2] through the color toner cartridge slot [1].

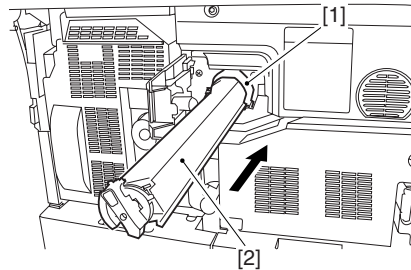

F-2-108

- 7) Turn the lock lever [1] clockwise to set the Y toner cartridge [2] in place.

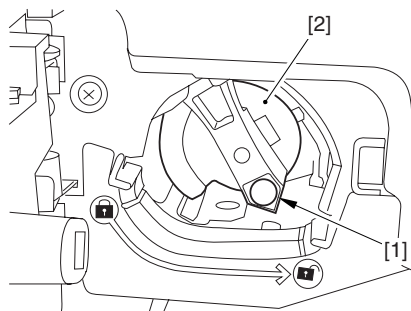

F-2-109

- 8) Close the color toner supply cover.
- 9) Close the front cover.
- 10) See that the control panel indicates the message "Set the Toner Cartridge."
- 11) Repeat steps 4) through 9) to set the C toner cartridge.

12) See that the control panel indicates the message "Set the Toner Cartridge."

13) Repeat steps 4) through 9 to set the M toner cartridge.


2.2.17 Supplying Black

Toner

0002-6727

1) Check to see that the warm-up period is over (i.e., Keep paper in the machine so that the control panel will indicate the message "Ready to Copy").

2) Execute the following service mode item to supply black toner: FUNCTION>INSTALL>TONER-S (10 min avr; 13 min max.).


 While this service mode item is under way, a countdown is made on the control panel; at the end, 'OK!' is indicated.

2.2.18 Cleaning the Intermediate

Transfer Belt

0002-6728

1) Execute the following service mode item to clean the ITB: FUNCTION>CLEANING>TBLT-CLN (about 20 seconds).

 The notation "OK!" appears on the screen to indicate the end of the service mode item.

2.2.19 Supplying Color

Toner

0002-6729

1) Execute the following service mode item to set up color toner settings:

FUNCTION>INSTALL>INSET-3

(about 14 minutes).



-Do not turn off the power switch while the machine is in operation.

-If the machine is turned off, the ITB may carry a deposit of toner, which can cause image faults. As necessary, execute

COPIER>FUNCTION>CLEANING>TBLT-CLN

and then INSET-3 to correct the problem.



While this service mode item is under way, a countdown is made on the control panel; at the end, "OK!" is indicated.

This mode uses ATVC control, possibly taking a while depending on the site environment. The count on the screen, for this reason, may loop between 890 and 820.

2) Execute the following service mode item to supply color toner: FUNCTION>INSTALL>SPLY-H-3 (about 45 seconds).



The notation "OK!" appears on the screen to indicate the end of the service mode item.



Do not turn off the power switch while the machine is in operation.

2.2.20 Setting Auto

Gradation Correction 0002-6731

- 1) Clean the reading glass surface of the machine's copyboard.
- 2) Press the User Mode key.
- 3) Make the following selections: adjust/cleaning> auto gradation correction>full correction>test print 1. In a while, the machine prints out Test Print 1.
- 4) Place the printout (Test Print 1) on the copyboard glass as indicated on the control panel.
- 5) Press [read start].
 - The machine will read the printout of Test Print 1.
 - When a message has appeared asking you to remove the printout, remove it from the copyboard glass.
- 6) Press [test print 2].

In a while, the machine prints out Test Print 2.
- 7) Place the printout of Test Print 2 on the copyboard glass as indicated on the control panel.
- 8) Press [read start].
 - The machine will read Test print 2.
 - When a message has appeared asking you to remove the printout, remove it from the copyboard glass.
- 9) Press [test print 3].

In a while, the machine prints out Test Print 3.
- 10) Place the printout of Test Print 3 on the copyboard as indicated on the control panel.
- 11) Press [read start].
 - The machine will read Test Print 3.
 - When a message has appeared asking you to remove the printout, remove it from the copyboard.
- 12) Press the Reset key to end User mode.

2.2.21 Checking the Image/

Operation 0002-6730

- 1) Place the Test Chart on the copyboard glass, and make copies using the cassettes and the deck as the source of paper; then, check the output images.
 - be sure there is no abnormal noise.
 - be sure that images produced at different magnifications are all correct.
 - be sure that as many copies as specified are made.
 - be sure that the images are all correct regardless of the source of paper used.

The output must satisfy the following standards:


 - horizontal registration (margin on image left edge): 2.5 +/-1.5 mm
 - leading edge (margin on image leading edge): 4 +1.5, -1.0 mm

If the output is not as indicated, see the instructions on how to adjust the horizontal registration and leading edge registration.

2.2.22 Adjusting the

Horizontal Registration 0002-6734

- Adjust the horizontal registration as follows according to the source of paper:
- Cassette 3
 - 1) Press the cassette release button, and slide out the cassette 3 to the front.
 - 2) Open the upper right cover and the lower right cover.
 - 3) Insert a screwdriver through the hole in the front right stay; then, loosen the screw [1] to adjust the position of the adjusting plate [2].

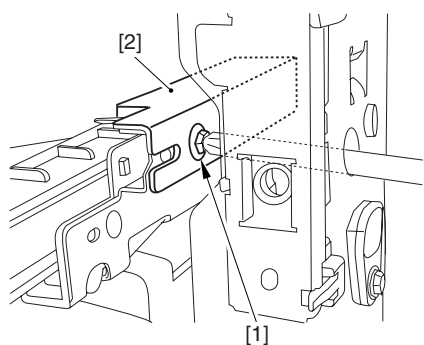


F-2-110

-move the adjusting plate toward the rear to increase the left margin.

-move the adjusting screw toward the front to decrease the left margin.

4) Check to see that the horizontal registration (left/right margin; L1) of the copy on paper from cassette 3 is 2.5 +/-1.5 mm.

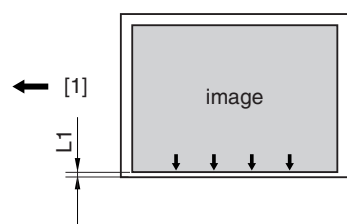

F-2-111

[1] Paper feed direction

5) Tighten the screw.

6) Close the upper right cover and the lower right cover.

7) Fit the cassette 3 back in.


-Cassette 4

1) Perform the steps given for the cassette 3 to adjust the horizontal registration for the cassettes 4.

-Left Deck


1) Press the release button, and slide out the left deck.

2) Remove the left face cover [1] using a flat-blade screwdriver.

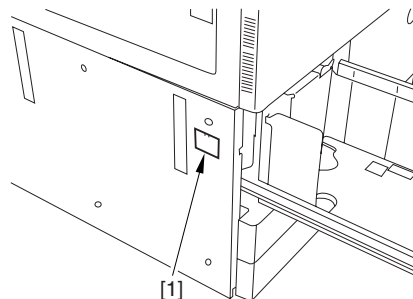


F-2-112

3) Loosen the 2 screws [1], and insert a screwdriver through the hole in the front left stay; then, turn the adjusting screw to adjust the horizontal registration.

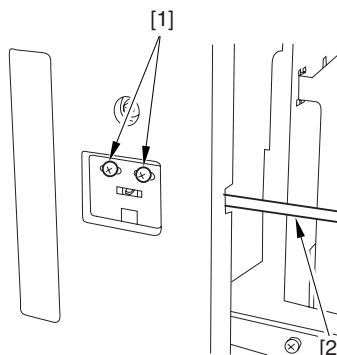

F-2-113


4) Make a copy using the left deck as the source of paper; then, check to see that the horizontal registration (left/right; L1) is 2.5 +/-1.5 mm.

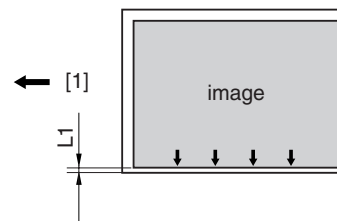

F-2-114

[1] Paper feed direction

5) If the output is not as indicated, make the following adjustments:

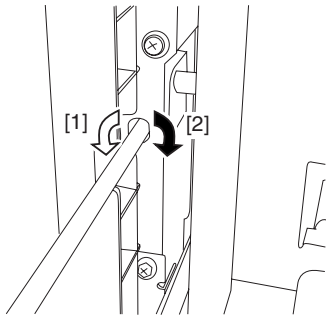

F-2-115

Turn the screwdriver counterclockwise so as to decrease the horizontal registration (left/right margin) [1].


Turn the screwdriver clockwise so as to increase the horizontal registration (left/right margin) [2].

A full turn of the screwdriver moves the horizontal registration (left/right margin) by 1.0 mm.

- 6) Tighten the 2 screws you loosened in step 3).
- 7) Attach the left face cover you removed in step 2) back on the machine.
- 8) Close the left deck.


-Right Deck

- 1) Press the release button, and slide out the right deck.
- 2) Open the upper right cover and the lower right cover.
- 3) Loosen the 2 screws [1], and insert a screwdriver [2] through the hole in the front right stay; then, turn the adjusting screw to adjust the horizontal registration.

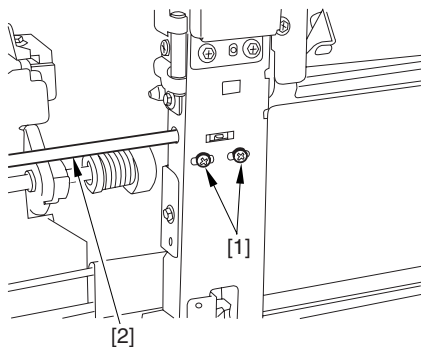

F-2-116


4) Check to make sure that the horizontal registration (left/right marking; L1) of the copy made on paper from the right deck is 2.5 +/-1.5 mm.

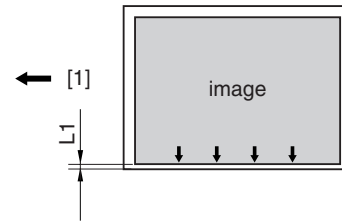

F-2-117

[1] Paper feed direction

5) If the output is not as indicated, make the following adjustments:

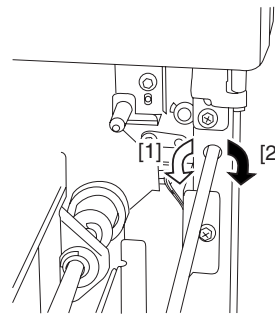

F-2-118

Turn the screwdriver counterclockwise so as to decrease the horizontal registration (left/right margin) [1].


Turn the screwdriver clockwise so as to increase the horizontal registration (left/right margin) [2].

A full turn of the screwdriver will move the horizontal registration (left/right margin) by 1.0 mm.

- 6) Tighten the 2 screws you loosened in step 3).
- 7) Close the right deck.


-Manual Feed Tray

- 1) Loosen the 2 screws [1], and move the slide guide [2] to adjust the horizontal registration.

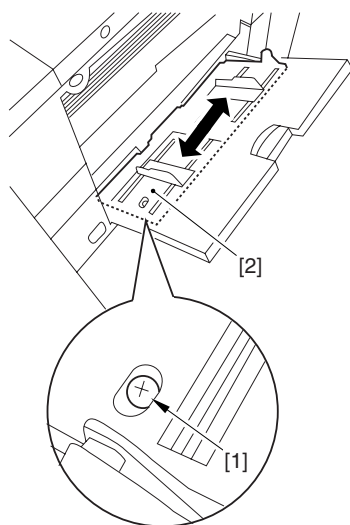

F-2-119

- 2) Check to see that the horizontal registration (left/right margin; L1) of the copy made on paper from the manual feed tray is 2.5 +/-1.5 mm.

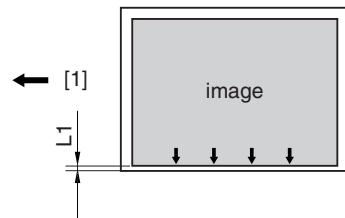

F-2-120

[1] Paper feed direction

- 3) Tighten the screws you loosened in step 1) to fix the slide guide in place.

2.2.23 Adjusting the Leading Edge Registration

0002-6735

Adjust the leading edge registration as follows according to the source of paper:


Check to be sure that the leading edge registration (leading edge margin; L1) of the copy made on paper from the cassettes and the deck is 4.0 +1.5/-1.0 mm.

If not, go through the following:

-Make the following selections in service mode:
COPIER>ADJUST>FEED-ADJ>REGIST.

-Then, change the setting to make adjustments.

(A change of '1' moves the leading edge registration by 0.1 mm. A higher setting will move the image toward the leading edge.)

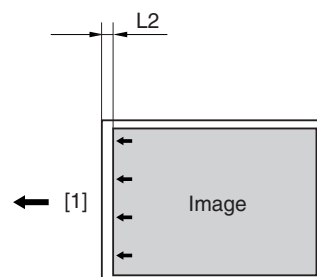

F-2-121

[1] Paper feed direction


2.2.24 Securing the Machine in Place

0002-6736

- 1) If the machine is already at its site of installation, secure it in place using the 2 adjusters.

- 2) Peel the double-sided tape from the back of the service book case [1]; then, attach the case by matching its right edge against the line marking [3] found on the right side of the bottom plate [2] of the machine.

⚠ Be sure to match the front edge of the service book case against the front edge of the base plate of the machine.

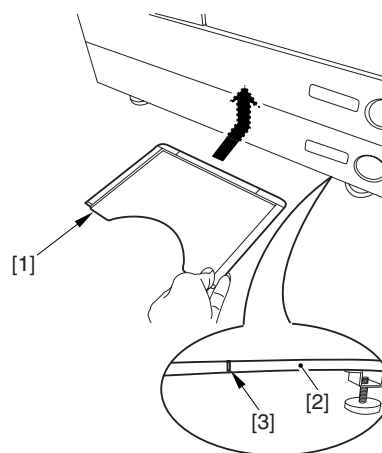


F-2-122

⚠ Areas to Avoid

- inside the machine (behind the front cover)
- louver
- grip slot


- 3) As appropriate, attach the 3 included labels ([1], [2], [3]) to the locations indicated in the figure:
- [1] Do Not Copy label (non-Japanese model)
 - [2] Cleaning Instructions label (non-Japans model)
 - [3] ADF size label

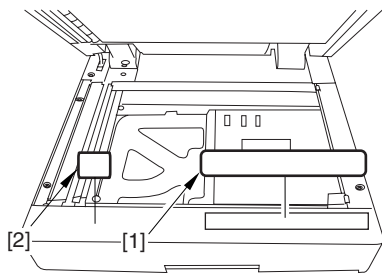

F-2-123


⚠ Attaching the ADF Size Label

Spread the ADF size guide plate [1] fully; then, match segment A of the plate and the A4/A3 marking of the label [2].

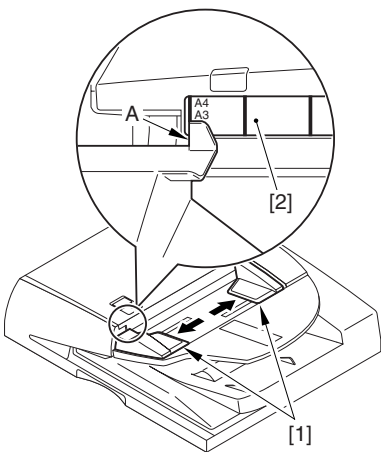

F-2-124

- 4) Fit the touch pen [1] in place on the control panel.

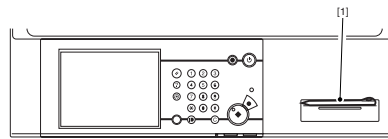

F-2-125

- 5) Clean up the area around the machine, and fill out the service book.
- 6) Make necessary settings in user mode (date, time) and service mode (COPIER>OPTION>USER).

⚠ When shipped from the factory, the 230-V model is set to English for its language of display. If needed, change the setting.

- 7) Execute the following service mode item, and store the output away in the service book case: COPIER>FUNCTION>MISC-P>P-PRINT.

⚠In the course of installing the machine, be sure to record the various adjustment values indicated by P-PRINT (printout) to the Service Label attached behind the front cover.

2.2.25 If Not Connected to

a Network

0005-3940

MEMO

Memo

If the machine is not connected to a network, its control panel will display the message "Check Connection to the Network." To disable the message, set the following service mode item to "0":

COPIER> OPTION> BODY> NWERR-SW (level 2)

2.3 Checking the Connection to the Network

2.3.1 Overview

0002-6738

Go through the steps herein only if the machine is connected to a network.

If the user's network is based on TCP/IP, use the PING utility to make sure that the Ethernet PCB has properly been installed and the network settings have correctly been made. If the user's network is based on IPX/SPX or AppleTalk, you need not make this check.




If the machine is equipped with a network board and yet not connected to a network, it will indicate an network-related error message. To disable the indication of such a message, use the following service mode item (set it to "0"): COPIER>OPTION>BODY>NWERR-SCREW.

2.3.2 Using the PING Utility

0002-6739

- 1) Make the following selections in service mode: COPIER>TEST>NETWORK>PING.
 - 2) Enter the IP address of the machine using the keypad on the control panel; then, press [OK].
 - 3) Press the Start key.
- The machine will indicate 'OK' if the result of the check is good and 'NG' if not good.

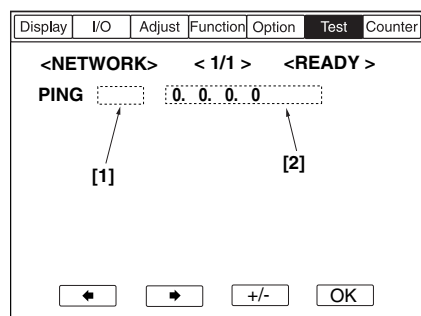

F-2-126

- [1] Result (OK/NG)
[2] IP address field

2.3.3 Using a Remote Host Address

0002-6747

You can also use a remote host address and run the PING utility to find out if the connection to the network is correct or not.

The term 'remote host address' refers to the IP address of a PC terminal connected to and operating on the TCP/IP network to which the machine is connected.

- 1) Inform the system administrator that you will be checking the network connection using the PING utility.
- 2) Ask the system administrator for the remote home address you can use.
- 3) Enter the remote home address to the appropriate PING field.
- 4) See if 'OK' has appeared to indicate that the connection to the network is correct.
- 5) If the machine indicates 'NG,' the connection is not correct; go through the following:

2.4 Troubleshooting the Network

2.4.1 Overview

0002-6749

Go through the steps herein only if the machine is connected to a network.

If the machine's connection to the network fails, suspect the following causes:

- a. The connection between the network and the Ethernet PCB is faulty.
- b. The machine's TCP/IP settings are incorrect.
- c. The Ethernet PCB is faulty, or is not mounted correctly.
- d. The network is faulty.

To identify the cause, go through the following:

2.4.2 Checking the Connection of the Network Cable

0002-6750

1) Check to see if the network cable is correctly connected to the Ethernet PCB.

-If yes, go to the next check.

-If no, correct it, and run a check using the remote host address once again.

2.4.3 Using a Loopback Address

0002-6751

A loopback address comes back before it reaches the network PCB; as such, you can find out whether the machine's TCP/IP settings are correct by executing PING using a loopback address.

1) Enter a loopback address (127.0.0.1) in the appropriate PING field.

-If the result of the check is not good, check the machine's TCP/IP settings once gain, and execute PING once again.

-If the result of the check is good, go to the following check.

2.4.4 Using a Local Host Address

0002-6752

A local host address is the machine's IP address, and it comes back after reaching the network PCB when you execute PING, enabling you to find out whether the network PCB is normal.

1) Enter the machine's IP address in the appropriate PING field.

If 'NG' is indicated, go through the following check/remedy, and execute PING once gain:

- a. The machine's IP address is not correct: check with the system administrator to find out if the machine's IP address is correct and valid.
- b. The connection of the network PCB is faulty: check the connectors used to connect the network PCB.
- c. The network PCB is faulty: replace the network PCB.

If 'OK' is indicated, suspect a fault in the user's network environment; contact the system administrator for appropriate correction.


2.5 Relocating the Machine

2.5.1 Relocating the Machine

0002-6757

If you need to relocate the machine after installation, be sure to go through the following:

- 1) Remove all paper from the left/right deck and the cassettes.
- 2) Turn off the main power switch, and disconnect the power plug. If the grounding wire is connected, remove it.
- 3) Fix the scanner in place using the scanner fixing screw stored away from the time of installation.
- 4) Take out the black toner bottle, all color developing assemblies, and all color toner cartridges, and put them in separate boxes.
- 5) Tape the toner supply mouths of the developing rotary in place as soon as developing assemblies have been removed. Also, be sure to fix the developing assembly fixing arm in place using a screw.

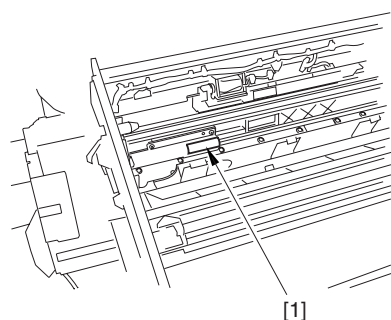

F-2-127

- 6) Tape the fixing/feeding assembly releasing lever in place to protect against vibration.
- 7) Secure the covers, decks, and cassettes in place using tape.
- 8) Place A3 copy paper on the copyboard glass, and tape the ADF in place.



1. If you must use a flight of stairs, keep the following in mind:
 2. The machine weighs about 230 kg; be sure to work in a group of 4 persons.
 3. Check to be sure that the 2 adjusters on the bottom plate of the machine are released; moreover, be sure not to lose them, as they tend to slip out because of the movement of the machine during relocation.
 4. If a side paper deck or a finisher (accessory) is installed, be sure to detach it before starting to move the machine.

2.6 Installing the Card Reader-C1

2.6.1 Points to Note About Installation

0002-6804


⚠ You need a Card Reader Mounting Kit-C1 for the installation.

2.6.2 Checking the Contents

0003-0860

<Card Reader-C1>


- [1] Card Reader-C11 pc.
- [2] RS tightening screw (M4x10) ..1 pc.
- [3] Toothed washer1 pc.

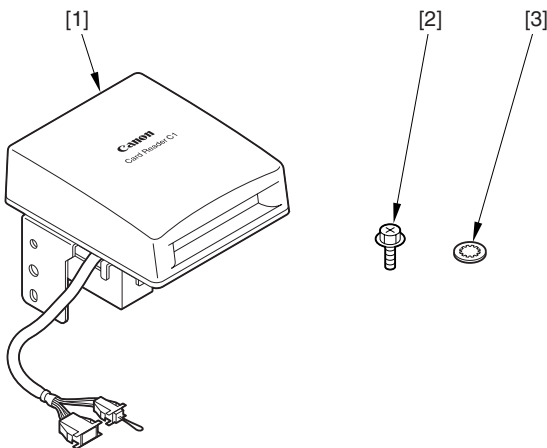

F-2-128

<Card Reader Mounting Kit-C1>

- [1] Card reader base1 pc.
- [2] RS tightening screw (M4x10) ..2 pc.

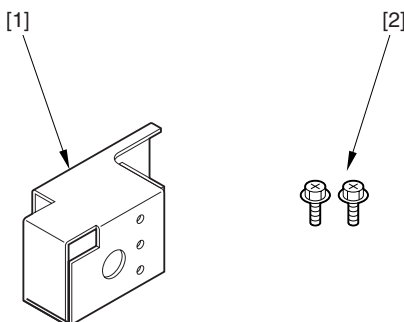

F-2-129

2.6.3 Installation

0002-6753


1) Make the following selections in the host machine's service mode: COPIER>FUNCTION>INSTALL>CARD; then, enter a number (1 to 2001).

-Use the lowest number of the cards that will be used by the user.

-As many as 300 cards, starting with the number you enter, will be registered.


2) Turn off the host machine's main power switch.

3) Remove the 2 screws [1], and detach the right cover (upper) [2].

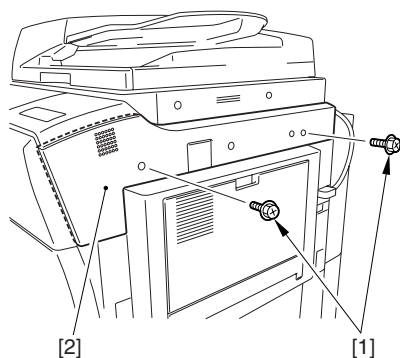


F-2-130

4) Mount the card reader base [1] using the 2 included screws [2].

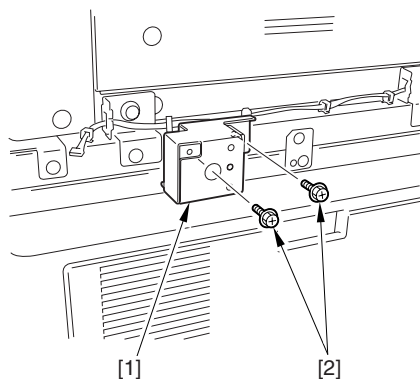


F-2-131

5) Route the harness [1] of the card reader through the hole [2] in the card reader base.

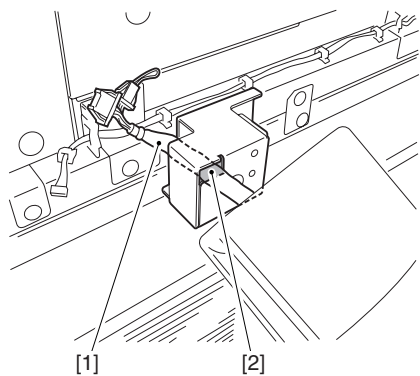


F-2-132

6) Mount the card reader [2] to the card reader base [3] using the included screw and toothed washer [1].

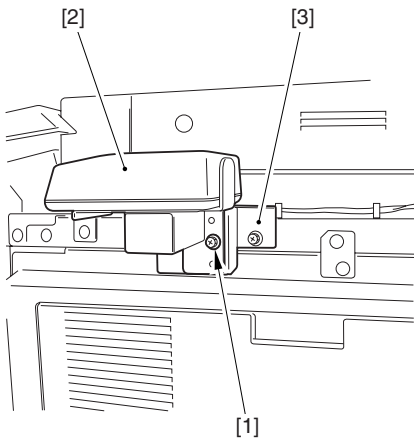


F-2-133

7) Route the card reader harness through the wire saddle, and connect the connector [1].

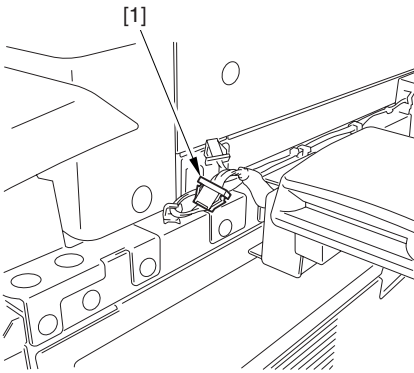

F-2-134

8) Cut the section [1] of the right cover (upper) indicated in the figure using nippers.

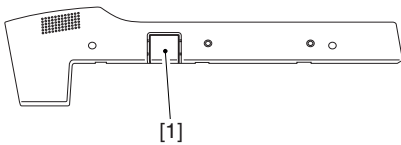

F-2-135

9) Mount the right cover (upper) you removed in step 3).

10) Turn on the main power switch, and check that a message has appeared asking for a control card.


11) Insert a control card, and check to see that the machine is ready to make copies.

2.6.4 Using the Card Reader in Combination with NetSpot Accountant

(hereafter, NSA)

0002-6799

- 1) Make the following selections in Additional Function: system control settings>group ID control>count control; then, check to see IDs 00000001 thorough 00001000 have been created (i.e., if you entered '1' as the first number in service mode): COPIER>FUNCTION>INSTALL>CARD).
 - 2) Make the following selections in Additional Function: system control settings>network settings>TCP/IP settings>IP address; then set up the following: IP address, gateway address, subnet mask.
-

 Take care. If you fail to register [system control group] and [system control ID No.], you will not be able to perform 'register card to device' as part of NSA setup work.

- 3) Under [system administrator info] of Additional Function, enter any number for [system control group] and [system control ID No.].
- 4) Turn off the control panel switch.
- 5) Turn off and then on the main power switch.

2.7 Installing the NE Controller-A1


2.7.1 NE Controller-A1 Installation Procedure

0003-6957

Keep the following in mind when installing the NE Controller-A1 to its host machine:


1. The work must be performed in strict compliance with the laws and regulations of the local authorities.
2. The host machine must have properly been installed.
3. The host machine's power plug must be disconnected.
4. The screws must be identified by type (length, diameter) and location.
5. The setup data for the controller must be saved to a PC at the service station.

1) Remove the 2 screws [2] of the top cover [1] of the controller, and detach the cover.

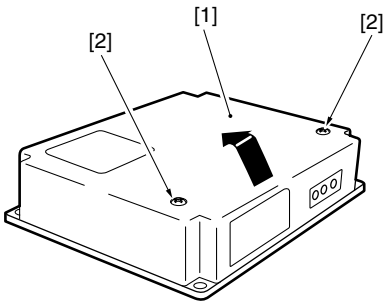


F-2-136

2) Connect the connector [1] of the power supply unit to the connector [2] of the controller.

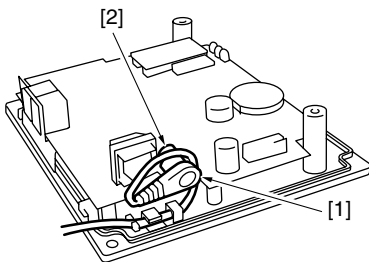


F-2-137

3) Remove the 4 screws [1], and detach the face plate [2] of the host machine's rear cover (upper).

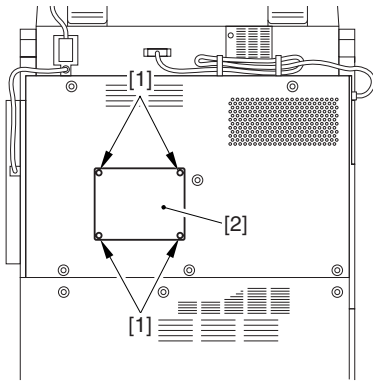


F-2-138

4) Connect the cable [1] of the controller to the host machine's connector [2].

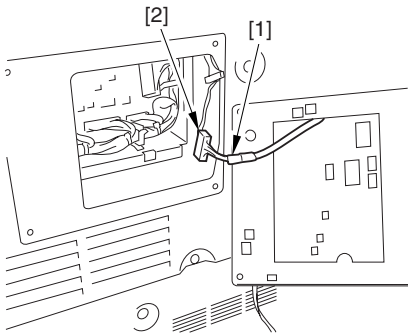


F-2-139

5) Mount the controller [1] to the host machine's rear cover (upper) using 4 screws [2]. (Use the screws that come with the controller.)

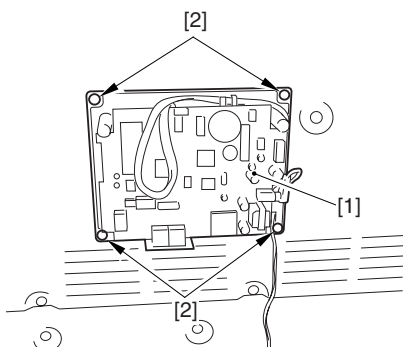


F-2-140

- 6) Take up the slack from the cable used between the controller and its host machine; bundle the extra length of the cable, and fix the bundle in place on the host machine using a harness band [1].

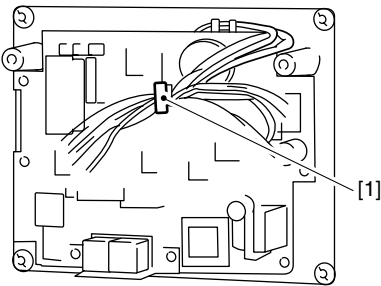


F-2-141

- 7) Shift bit 4 of the DIP switch (SW2-4) found on the PCB to the ON side (so that the communication between the controller and the host machine will be in IPC mode).

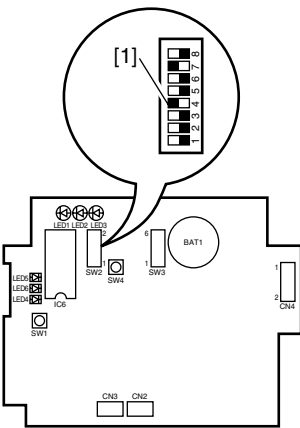

F-2-142

- 8) If IC6 [1] is found on the PCB, shift bit 7 of the DIP switch (SW2-7) [2] to the ON side; otherwise, shift the bit to the OFF side.

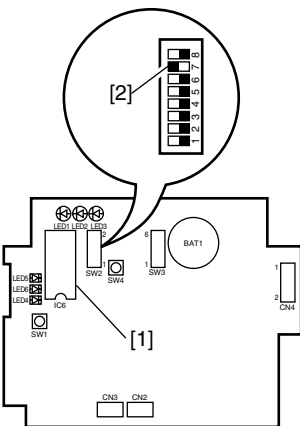


F-2-143



If IC6 [1] is not found, you need not mount one.

If you are mounting or replacing a ROM (IC6) [1] to upgrade the controller, be sure to shift bit 7 of the DIP switch (SW2-7) [2] to the ON side.

9) Set the bits of the DIP switch (SW3) [1] on the PCB as indicated.

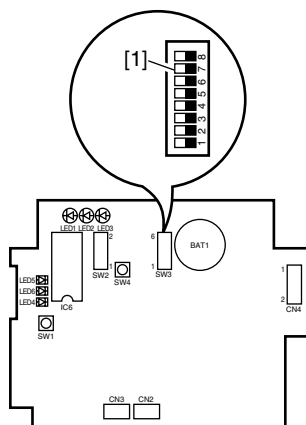


F-2-144

T-2-1

Notation	Setting	SW3-1	SW3-2	Description
		OFF	OFF	set the modem signal transmission level to -16 dBm.
		ON	OFF	set the modem signal transmission level to -14 dBm.
SW3-1	see right	OFF	ON	set the modem signal transmission level to -12 dBm.
SW3-2		ON	ON	set the modem signal transmission level to -10 dBm.
SW3-3	OFF	keep it to OFF at all tiems.		
SW3-4	ON	use it to set the line setting to touch tone.		
	OFF	use it to set the line setting to dial pulse.		
SW3-5	ON	use it to set the dial pulse speed to 20 PPS.		
	OFF	use it to set the dial pulse speed to 10 PPS.		
SW3-6	-	not used		

10) Connect the power plug to the power supply unit; then, check to see that LED1 [1] (green) on the PCB goes on.

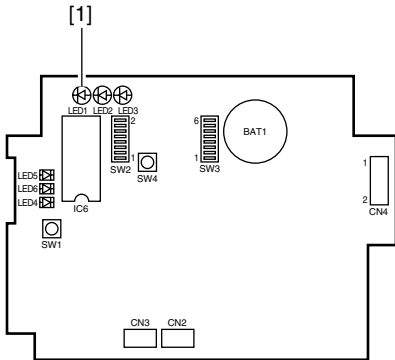

F-2-145


11) Initialize the RAM of the controller as follows:

Set the bits of the DIP switch (SW2) [1] on the PCB as shown in the table; then, press the push switch (SW4) [2].

A press on the push switch (SW4) [2] causes LED 3 [3] (red) to go on.

T-2-2

SW2 bits	Setting
SW2-1	OFF
SW2-2	OFF
SW2-3	ON
SW2-4	ON
SW2-5	OFF
SW2-6	OFF
SW2-7	See step 8).
SW2-8	OFF

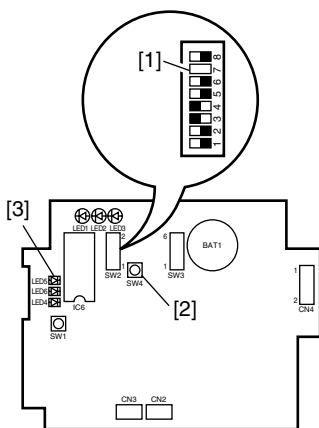


F-2-146

12) When LED5 [1] (red) has gone on, set the bits of the DIP switch (SW2) [2] on the PCB as indicated in the following table; then, press the push switch (SW4) [3]. A press on the push switch (SW4) [3] will cause LED5 [1] (red) to go off, indicating that the RAM has been initialized.


T-2-3

SW2 bits	Settings
SW2-1	OFF
SW2-2	OFF
SW2-3	OFF
SW2-4	ON
SW2-5	OFF
SW2-6	ON
SW2-7	See step 8).
SW2-8	OFF

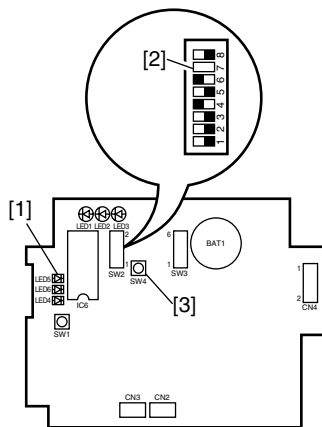

F-2-147

13) Shift bit 6 of the DIP switch (SW2-6) [1] on the PCB to the OFF position.

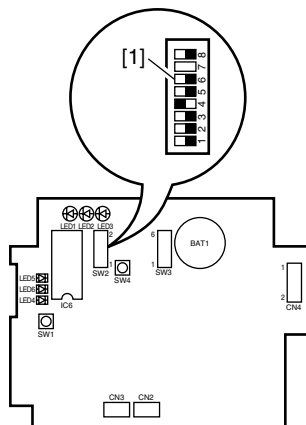


F-2-148

14) Connect the telephone line to the controller.


If the controller is to be used on its own, connect the modular jack cable to the connector (LINE) [1] of the control.

If the extension function of the controller is to be used, connect the existing telephone or fax to the connector (TEL) [2] of the controller while connecting the telephone line to the connector (LINE) [1] of the controller.

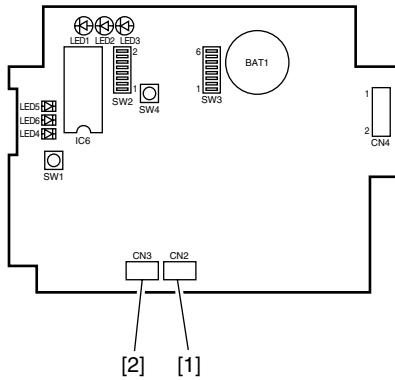

F-2-149

15) Call the service station, and ask for initial setup work for the controller. (When a call arrives, LED4 (red) [1] starts to flash.)

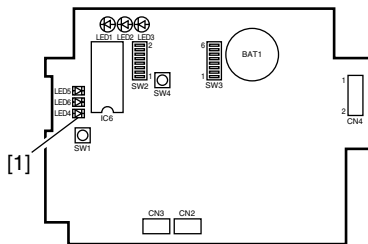

F-2-150

16) Call the service station, and check if the initial setup for the controller has ended. If the work has failed, go through steps 10) through 12) to initialize the RAM, and start the setup work once again.

⚠ Be sure to contact the service station to find out if the settings are correct.


17) Call the PC at the service station using the controller.

Press the push switch (SW4) [1] on the PCB.

A press on the push switch (SW4) [1] will cause LED6 (red) [2] to go on; at the end of the transmission, LED6 (red) [2] goes off. (It will flash if the transmission fails.)

A press on the push switch (SW4) [1] while LED6 [2] is flashing will initiate transmission once again.


A press on the push switch (SW1) [3] while LED6 [2] is flashing will cancel the transmission.

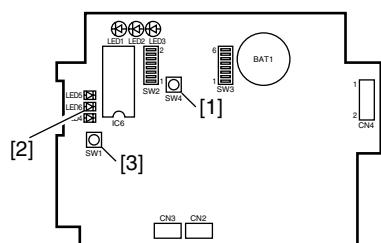

F-2-151


18) Check to see that the communication between the controller and its host machine is normal.

Connect the host machine's power plug, and turn on the power switch; then, check to see that LED2 (orange) [2] flashes.

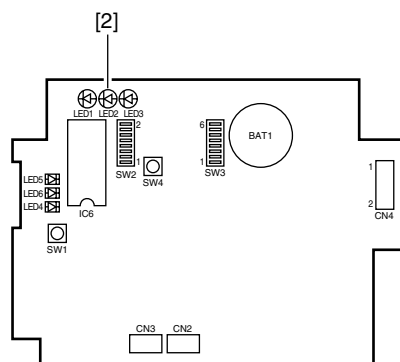


F-2-152

19) Press the Start key on the host machine; then, check that LED3 (pink) flashes each time delivery is made.

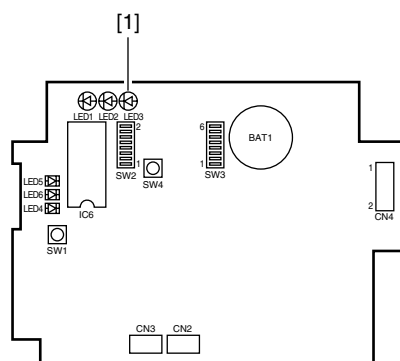

F-2-153

- 20) Attach the switch settings label [1] to the top cover of the controller, and record the new switch settings.
- 21) Fix the top cover [2] of the controller in place using 2 screws [3]. When doing so, check to be sure that the cable of the power supply unit is fixed in place to the cable guide inside the controller and is not trapped by the top cover [2].

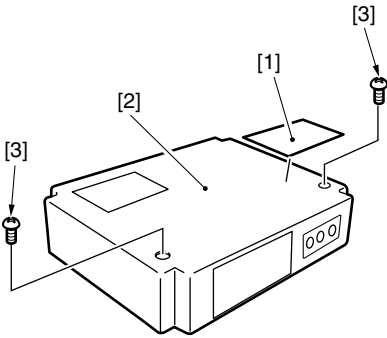


F-2-154

2.8 Installing the Original Tray

2.8.1 Checking the Contents

0002-6801

- [1] Original holder1 pc.
- [2] Stepped screw (M4) ...2 pc.

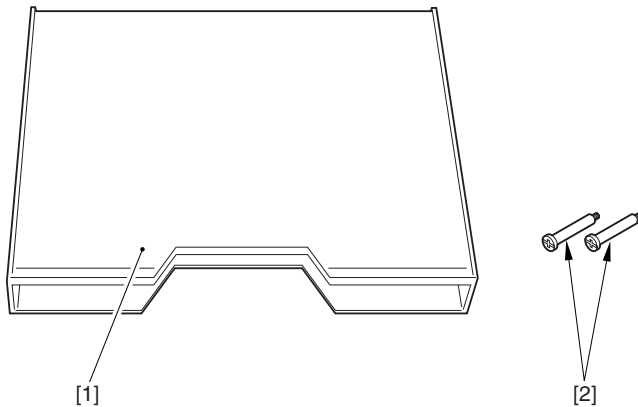


F-2-155

2.8.2 Installation


0002-6754

- 1) Fit the 2 stepped screws [2] in the right cover (upper) [1].

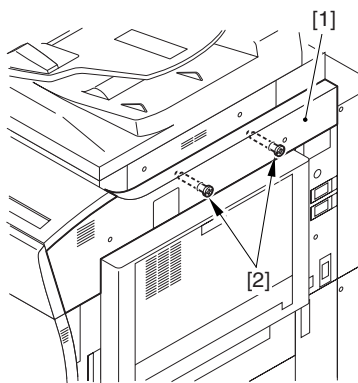

F-2-156

2) Hook the original holder [1] on the stepped screws you fitted in step 1).

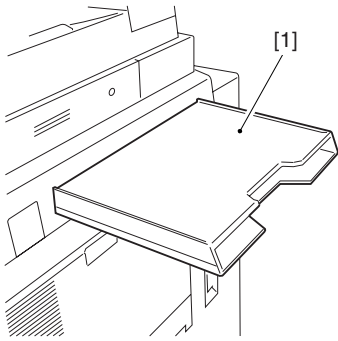

F-2-157


2.9 Installing the Key Switch Unit-A1

2.9.1 Checking the Contents

0003-1366

Key Switch Unit

- [1] Key switch unit1 pc.
- [2] Control key1 pc.
- [3] Binding screw (M4x6) ..1 pc.

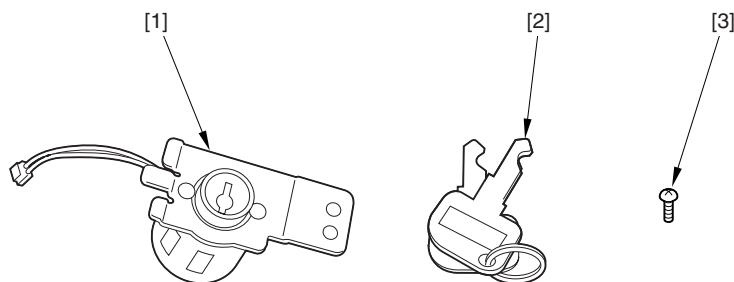


F-2-158

2.9.2 Installation


0002-6756

- 1) Turn off the control panel power switch.
- 2) Turn off the main power switch.
- 3) Disconnect the power plug.
- 4) Disconnect the reader communications cable [1].
- 5) Remove the 2 screws [2], and detach the right cover (upper rear) [3].

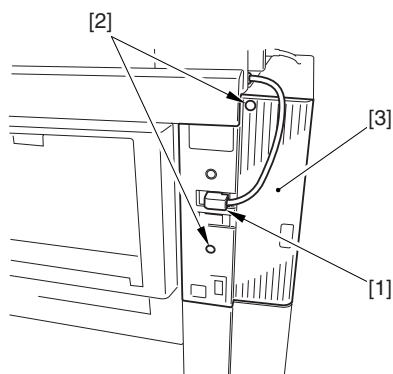


F-2-159

6) Cut off the section [1] of the right cover (upper rear) indicated in the figure.

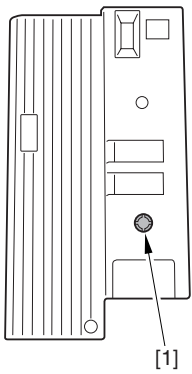


F-2-160

7) Remove the 2 screws [1], and detach the plate [2].

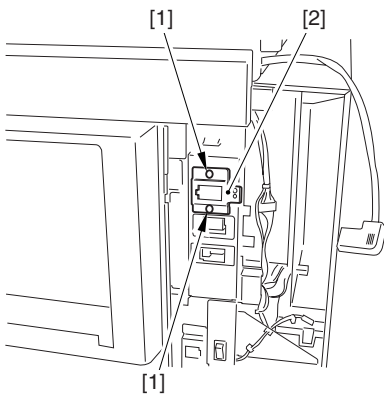


F-2-161

8) Fit the protrusion [1] of the key switch into the plate [2]; then, fix it in place using the included screw [3].

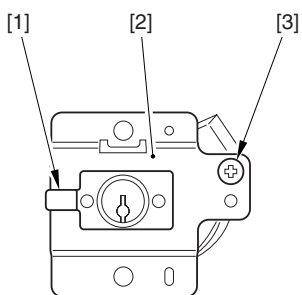


F-2-162

9) Route the harness [1] of the key switch through the wire saddle [2].

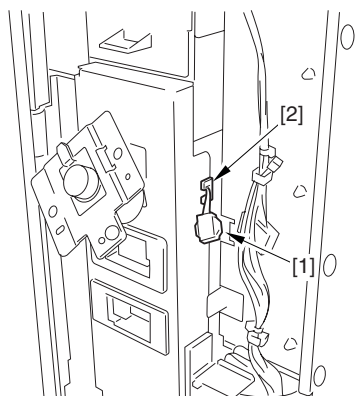


F-2-163

10) Connect the connector [1] of the key switch.

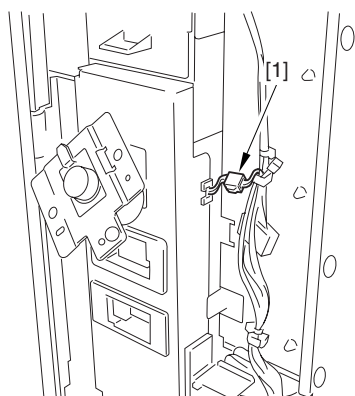

F-2-164

11) Fix the plate (key switch) [1] in place using the 2 screws [2] you removed in step 7).

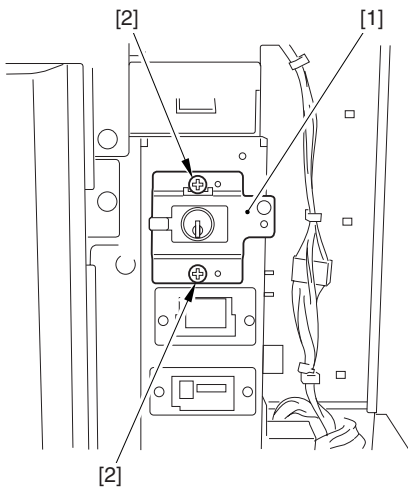

F-2-165

- 12) Mount the right cover (upper rear) you removed in step 5).
- 13) Connect the power plug, and turn on the main power switch.
- 14) Start service mode, and make the following selections: COPIER>FUNCTION>INSTALL>KEY: then, enter '1'.
- 15) Turn off and then on the main power switch.
- 16) Check to see that a message has appeared asking for the control key.
- 17) Insert the control key, and check to make sure that the machine is ready to make copies.

Chapter 3 Basic Operation

Contents

3.1 Construction	3-1
3.1.1 Functional Construction	3-1
3.1.2 Arrangement of the Major PCBs	3-3
3.1.3 DC Controller	3-4
3.2 Basic Sequence	3-6
3.2.1 Basic Sequence of Operation at Power-On	3-6
3.2.2 Basic Sequence of Control During Printing (full-color)	3-8
3.2.3 Basic Sequence of Operation During Printing (mono color)	3-9


3.1 Construction

3.1.1 Functional Construction

0002-9602

The machine is broadly divided into the following 3: reader unit, printer unit, and system unit.

Of these 3, the printer unit serves as the core of the machine, and consists of the following 5 functional blocks: laser exposure system, image formation system, pickup/feed system, fixing/delivery system, printer control system.

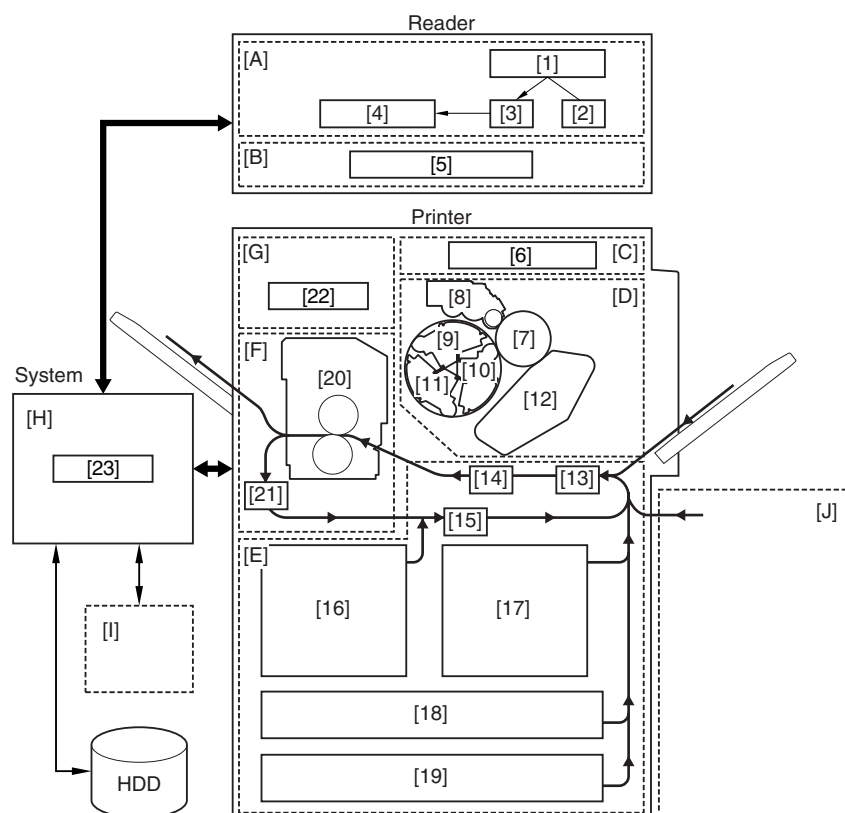

F-3-1

1.Reader Unit

[A]Original Exposure System

- [1] original
- [2] scanning lamp
- [3] optical system
- [4] CCD/analog processor PCB

[B]Reader Control System

- [5] reader controller PCB

2.Printer Unit

[C]Laser Exposure System

[6] laser/scanner unit

[D]Image Formation System

[7] photosensitive drum

[8] Bk developing assembly

[9] M developing assembly

[10]Y developing assembly

[11]C developing assembly

[12]intermediate transfer belt (ITB)

[E] Pickup/Feeding System

[13] pickup control assembly

[14] transfer assembly

[15] lower feeding assembly

[16] left deck

[17] right deck

[18] cassette 3

[19] cassette 4

[F] Fixing/Delivery System

[20] fixing assembly

[21] reversing assembly

[G] Printer Control System

[22] DC controller PCB

3.System Unit

[H] System Control Block

[23] Main controller PCB

Accessory


[I] optional board

[J] side paper deck

3.1.2 Arrangement of the Major PCBs

0002-9608

Arrangement of the Major PCBs

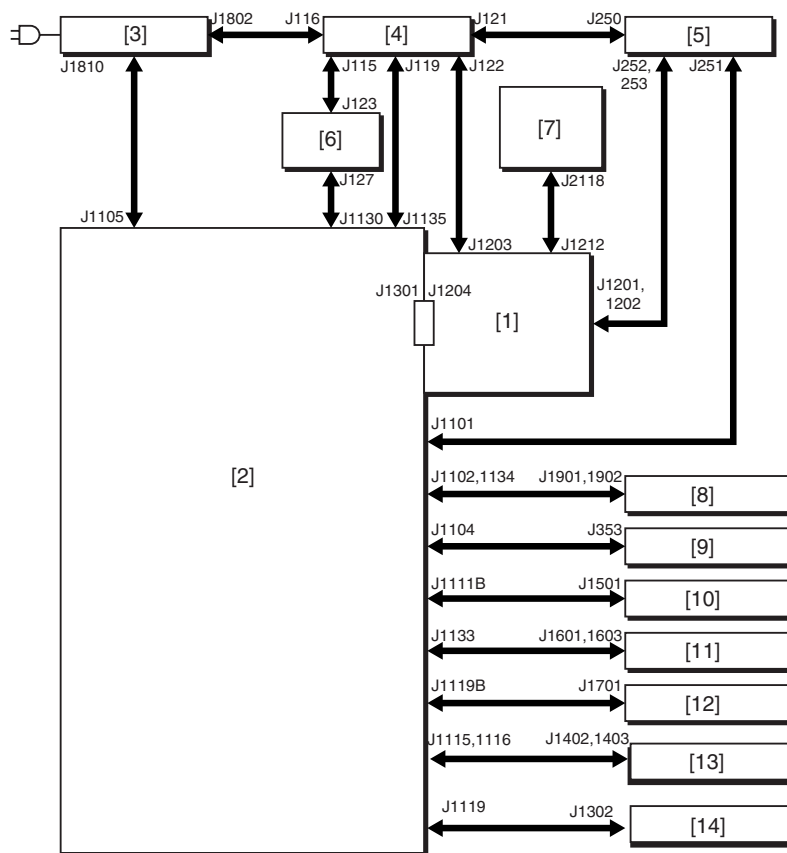

F-3-2


- [1] Main controller PCB
- [2] DC controller PCB
- [3] AC driver PCB
- [4] main DC power supply PCB
- [5] Sub DC power supply PCB 1
- [6] Sub DC power supply PCB 2
- [7] Control panel CPU PCB
- [8] Laser drive PCB
- [9] BD PCB
- [10] HVT1 PCB
- [11] HVT2 PCB
- [12] HVT3 PCB
- [13] Pickup driver PCB
- [14] Fixing/feeding driver PCB

⚠ The arrows in the figure indicate connections of PCB, not the direction of signals.

3.1.3 DC Controller

0002-9609

The following shows the functional construction of the DC controller PCB:

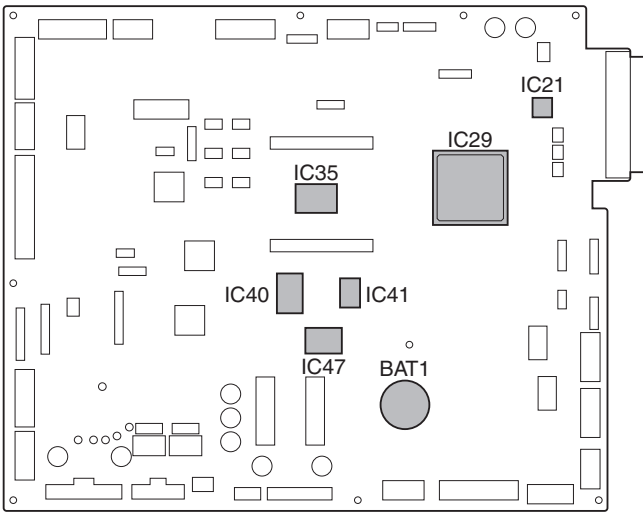

F-3-3

BAT1 (lithium battery)

- serves as the backup battery for RAM.

IC21 (PWM IC)

- converts image data from ASIC1 into data processed by pulse width modulation.

IC29 (ASIC1)

- controls the laser driver, high-voltage mechanisms, fixing control mechanisms, and motors.

IC35 (CPU)

- controls printing sequence, high-voltage mechanisms, finisher, interface with the controller, and various loads (sensor, clutch, solenoid).

IC40 (Flash ROM)


- stores firmware.

IC41 (ASIC2)

- controls communication between finisher and CPU.

IC47 (RAM)

- stores settings data (e.g., service mode).

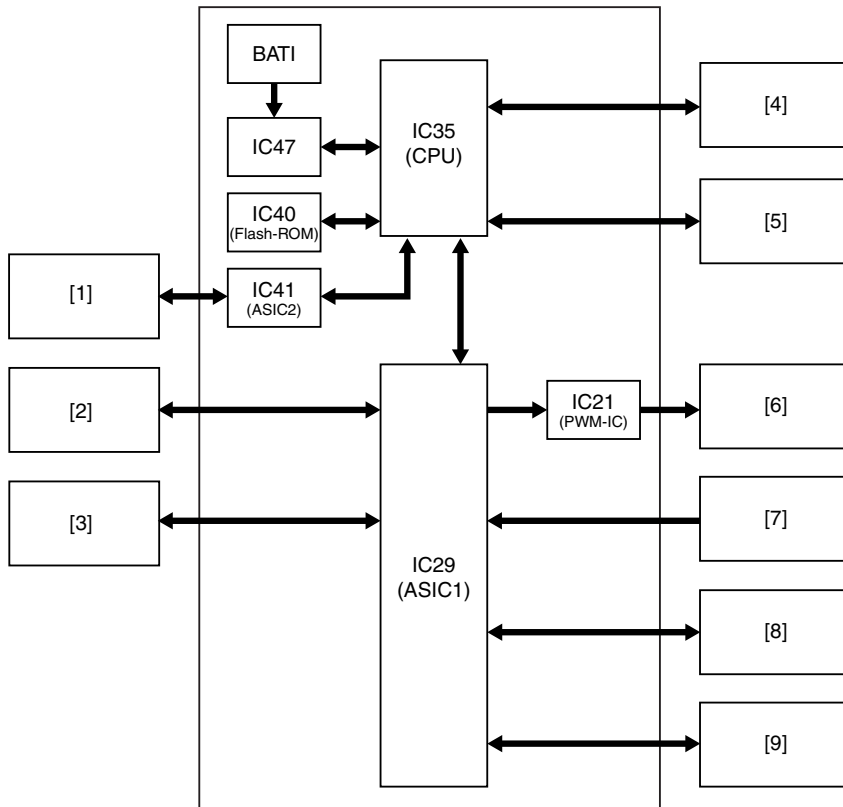

F-3-4

- [1] Finisher (accessory)
- [2] Side paper deck (accessory)
- [3] Motors
- [4] Main controller PCB
- [5] Loads (sensor, clutch, solenoid)
- [6] Laser drive PCB
- [7] BD PCB
- [8] HVT
- [9] Fixing assembly


3.2 Basic Sequence

3.2.1 Basic Sequence of Operation at Power-On

0005-0125

T-3-1

Period	Description
WMUP (warm-up)	with the drive system at rest, until the temperature of the external heating roller reaches 190 deg C.
SREADY (scanner ready)	from when shading correction ends until the Start key is pressed or the main power switch is turned off.
WMUPR (warm-up rotation)	with the drive system starting up, until the temperature of the fixing roller reaches 200 deg C, that of the pressure roller reaches 140 deg C, and that of the external heating roller reaches 225 deg C.
PSTBY (print standby)	the machine is ready to accept the copy/print request signal.

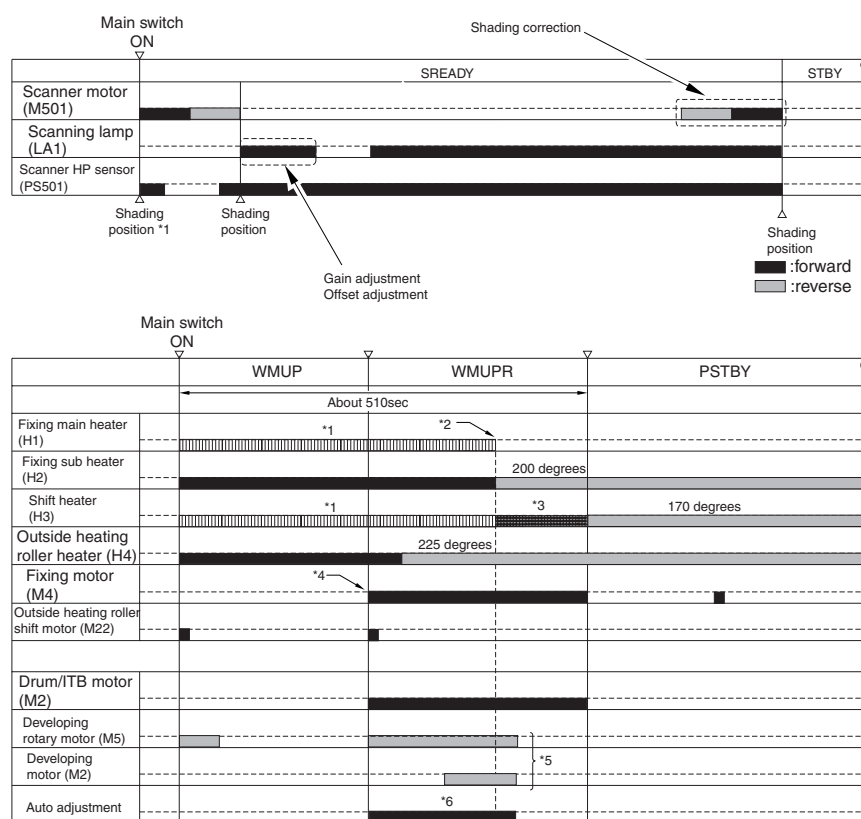

F-3-5

*1: the fixing main heater and the pressure heater go on alternately.

*2: if the temperature of the fixing roller is 200 deg C, that of the pressure roller is 140 deg C, and that of the external heating roller is 225 deg C, the alternate activation is ended.

*3: the pressure heater is subject to activation control.

*4: if the temperature of the external roller is 190 deg C or higher, the fixing motor starts up.

*5: the motor rotates and stops for auto adjustment.

*6: the image stabilization control mechanism is executed only if the surface temperature the fixing roller is lower than 100 deg C.

-potential control

-primary transfer ATVC

-secondary transfer ATVC

-D-max control

-D-half control (when the power is turned on with its color print counter reading 500 or higher).

3.2.2 Basic Sequence of Control During Printing (full-color)


0004-7828

A4, Full-color (1 print), Right deck

T-3-2

Period	Description
PSTBY (print standby)	the machine is ready to receive the coy/print request signal.
PINTR (initial rotation)	from when the machine has received the print request signal to when it discharges paper.
PRINT	from when all toner has been transferred to paper and the paper is delivered.
LSTR (last rotation)	from when the paper has been delivered to when all drive has been stopped.

reading: book, 1 A4 original
 printing: A4, plain paper, single-sided, full color, 1 print

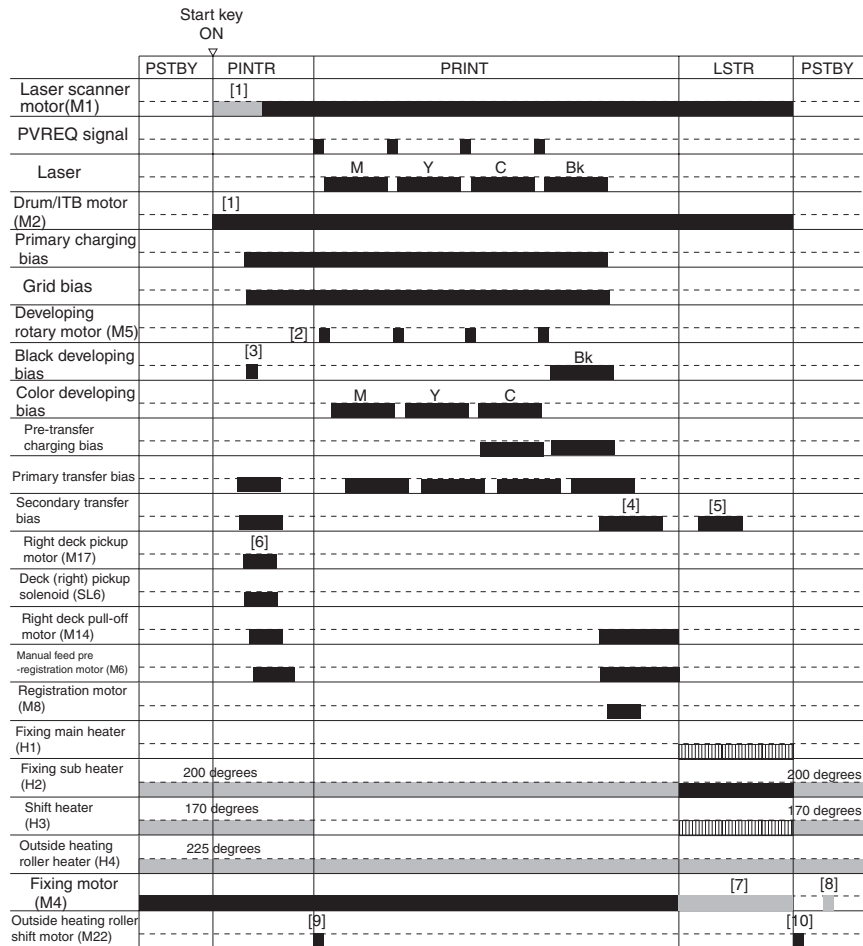

F-3-6

-
-
- [1] used to stabilize the rotation.
 - [2] developing rotary shifts to home position>point of M development>point of Y development>point of C development>home position
 - [3] preparation for black development
 - [4] transfer to paper
 - [5] cleaning of the secondary transfer outside roller
 - [6] pickup from the right deck
 - [7] maintenance operation of the fixing roller
 - [8] anti-deformation operation of the fixing roller (every 30 min after the stop of the fixing roller)
 - [9] external heating roller brought into contact with the fixing roller
 - [10] external heating roller moved away from the fixing roller

3.2.3 Basic Sequence of Operation During Printing (mono color)


0004-7834

A4, Mono color (1 print), Right deck

T-3-3

Period	Description
PSTBY (print standby)	The machine is ready to accept the copy/print request signal.
PINTR (initial rotation)	from when the machine has received the print request signal to when it generates the image signal.
PRINT	from when all toner has been transferred to paper and the paper is delivered.
LSTR (last rotation)	from when the paper has been delivered to when all drive has been stopped.

reading: book, 1 A4 original
 printing: A4, plain paper, single-sided, mono color, 1 print

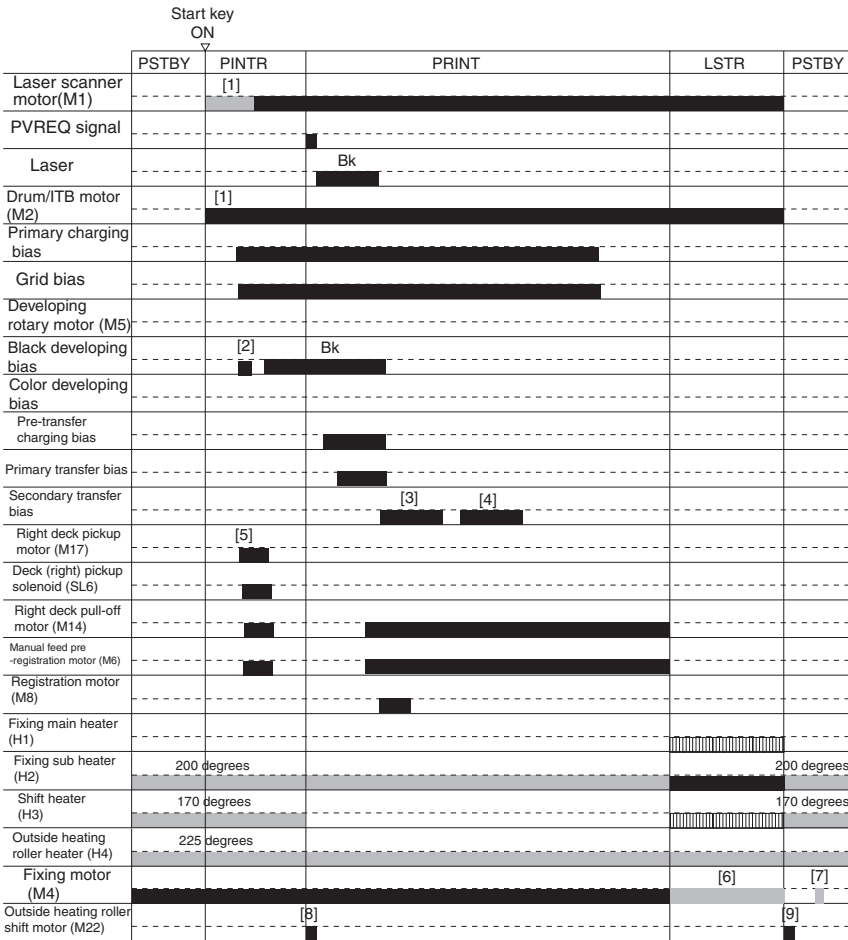

F-3-7

- [1] period used to stabilize rotation
- [2] preparation for development
- [3] transfer to paper
- [4] cleaning of the secondary transfer outside roller
- [5] pickup from the right deck
- [6] maintenance operation of the fixing roller
- [7] anti-deformation operation of the fixing roller

Chapter 4 Main Controller

Contents

4.1 Construction	4-1
4.1.1 Functional Construction	4-1
4.2 Construction of the Electrical Circuitry	4-3
4.2.1 Main Controller PCB (main)	4-3
4.2.2 Main Controller PCB (sub)	4-5
4.2.3 Expansion Bus PCB	4-6
4.2.4 SRAM PCB	4-6
4.2.5 HDD	4-7
4.3 Start-Up Sequence	4-9
4.3.1 Overview	4-9
4.3.2 Start-Up Sequence	4-10
4.4 Actions when HDD Error	4-12
4.4.1 E602 in Detail	4-12
4.4.2 E609 in Detail	4-16
4.5 Image Processing	4-17
4.5.1 Overview of the Flow of Image Data	4-17
4.5.2 Construction of the Image Processing Modules	4-18
4.5.3 Reader Input Image Processing	4-19
4.5.4 Compression/Decompression and Editing Blocks	4-20
4.5.5 Printer Output Image Processing	4-21
4.6 Flow of Image Data	4-22
4.6.1 Flow of Image Data (copier function)	4-22
4.6.2 Flow of Image Data (Box function)	4-23
4.6.3 Flow of Image Data (SEND function)	4-24
4.6.4 Flow of Image Data (fax transmission)	4-25
4.6.5 Image Data Flow for Fax Reception Functions	4-26
4.6.6 Flow of Image Data (PDL function)	4-27
4.7 Parts Replacement Procedure	4-28
4.7.1 Controller Box	4-28
4.7.1.1 Removing the Left Cover (upper)	4-28
4.7.1.2 Removing the Delivery Cover	4-28
4.7.1.3 Removing the Left Cover (middle)	4-28
4.7.1.4 Removing the Rear Cover (upper)	4-28
4.7.1.5 Removing the Controller Box Cover	4-29
4.7.1.6 Removing the Controller Box	4-29
4.7.2 Main Controller PCB (main)	4-31
4.7.2.1 Removing the Delivery Cover	4-31
4.7.2.2 Removing the Left Cover (middle)	4-31
4.7.2.3 Removing the Rear Cover (upper)	4-31
4.7.2.4 Removing the Controller Box Cover	4-32
4.7.2.5 Removing the Main Controller PCB (main)	4-32
4.7.2.6 After Replacing the Main Controller PCB (main)	4-34
4.7.3 Main Controller PCB (sub)	4-35
4.7.3.1 Removing the Delivery Cover	4-35
4.7.3.2 Removing the Left Cover (middle)	4-35
4.7.3.3 Removing the Rear Cover (upper)	4-35
4.7.3.4 Removing the Controller Box Cover	4-36
4.7.3.5 Removing the Main Controller PCB (sub)	4-36
4.7.4 Expansion Bus PCB	4-36

4.7.4.1 Removing the Rear Cover (upper).....	4-36
4.7.4.2 Removing the Delivery Cover	4-37
4.7.4.3 Removing the Left Cover (middle).....	4-37
4.7.4.4 Removing the Controller Box Cover	4-37
4.7.4.5 Removing the SRAM Board.....	4-38
4.7.4.6 Removing the Expansion Bus PCB	4-38
4.7.4.7 After Replacing the Expansion PCB	4-38
4.7.5 SRAM PCB	4-38
4.7.5.1 Removing the Rear Cover (upper).....	4-38
4.7.5.2 Removing the Controller Box Cover	4-39
4.7.5.3 Removing the SRAM Board.....	4-39
4.7.5.4 After Replacing the SRAM Board.....	4-39
4.7.6 UFR Board.....	4-40
4.7.6.1 Removing the Rear Cover (upper).....	4-40
4.7.6.2 Removing the Delivery Cover	4-40
4.7.6.3 Removing the Left Cover (middle).....	4-40
4.7.6.4 Removing the Controller Box Cover	4-41
4.7.6.5 Removing the UFR Board	4-41
4.7.7 Ethernet Board	4-41
4.7.7.1 Removing the Rear Cover (upper).....	4-41
4.7.7.2 Removing the Delivery Cover	4-42
4.7.7.3 Removing the Left Cover (middle).....	4-42
4.7.7.4 Removing the Controller Box Cover	4-42
4.7.7.5 Removing the Ethernet Board.....	4-42
4.7.8 HDD.....	4-43
4.7.8.1 Removing the Rear Cover (upper).....	4-43
4.7.8.2 Removing the Controller Box Cover	4-43
4.7.8.3 Removing the HDD	4-43
4.7.8.4 After Replacing the HDD	4-44
4.7.9 Controller Fan	4-45
4.7.9.1 Removing the Delivery Cover	4-45
4.7.9.2 Removing the Left Cover (middle).....	4-45
4.7.9.3 Removing the Controller Fan	4-45

4.1 Construction


4.1.1 Functional Construction

0003-2433

The machine's main controller block consists of the following components that serve specific functions:

T-4-1

Item	Description
Main controller PCB (main)	controls the system, memory, and printer output image processing.
Main controller PCB (sub)	processes reader input images.
Expansion bus PCB	controls the color LCD and card reader interface.
SRAM PCB	retains service mode settings and HDD control data using SRAM.
Image memory (SDRAM)	stores image data temporarily.
BOOTROM	stores the boot program.
HDD	stores the system software; retains Box/fax function image data.

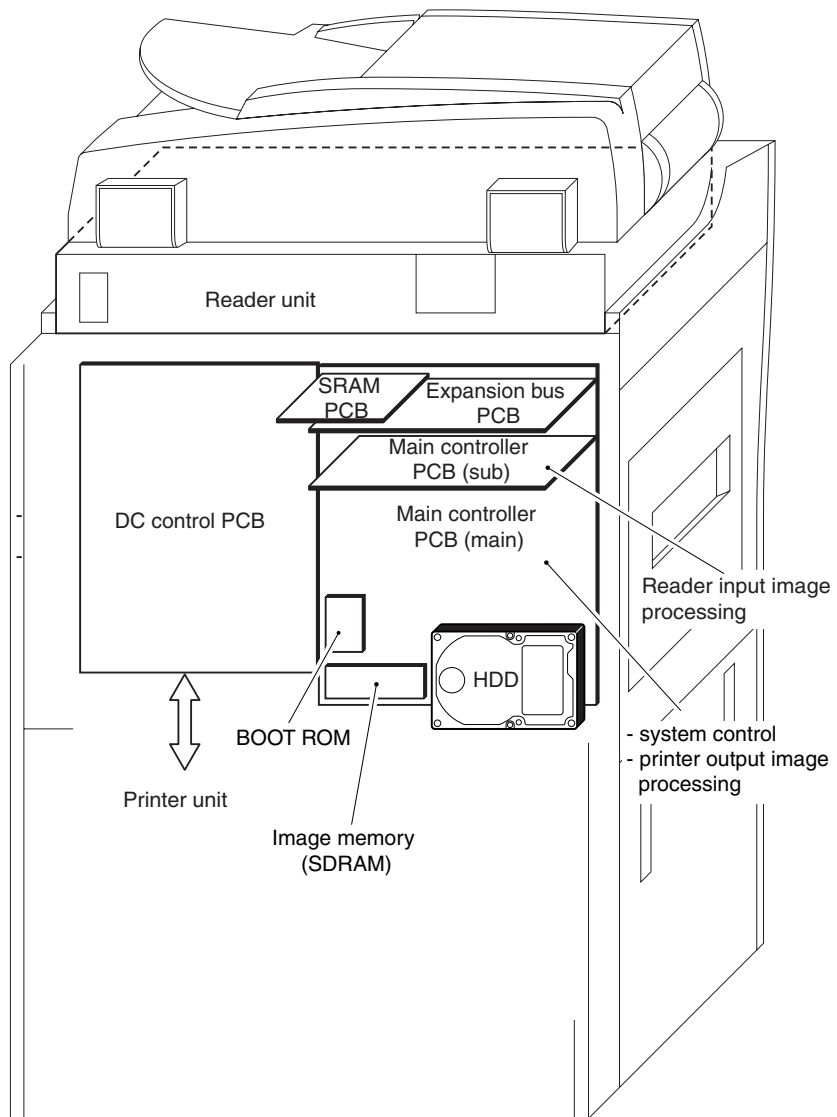


F-4-1

4.2 Construction of the Electrical Circuitry

4.2.1 Main Controller PCB (main)

0002-0606

The following shows the major control functions of the main controller PCB (main) grouped according to jack/IC:

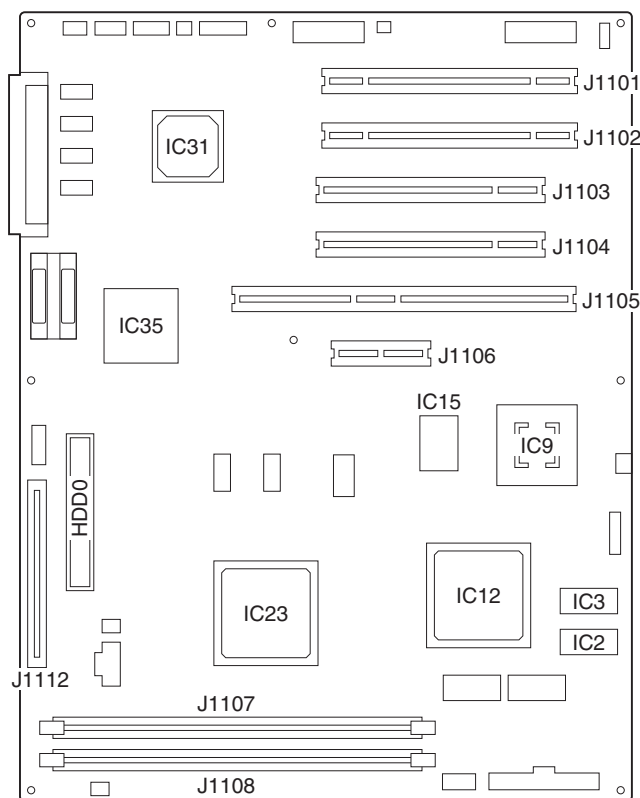

F-4-2

T-4-2

Jack No.	Description
J1101	expansion bus PCB slot
J1102	main controller PCB (sub) connection slot
J1103	image conversion board connection slot
J1104	USB interface board/TokenRing connection slot
J1105	UFR board/OPEN I/F board connection slot
J1106	Ethernet board connection slot
J1107	image memory (SDRAM, 512 MB; standard)
J1108	image memory (SDRAM, 256 MB; optional for 100-V model or standard for 120/230-V model)
J1112	boot ROM connection slot
HDD0	hard disk connection connector


T-4-3

IC No.	Description
IC9	controls the processing of images coming from IC12 for output to the printer.
IC12	controls image input/output functions, image rotation function, resolution conversion function, and binary processing function.
IC15	controls the conversion of 4-bit serial image data coming from IC9 into 8-bit parallel image data; keeps track of video count.
IC23	CPU: system control raster JPEG compression/decompression network controller PCI bus controller ROM/RAM controller serial communication controller
IC31	I/O processing of signals
IC35	HDD controller

4.2.2 Main Controller PCB (sub)

0002-0688

The following shows the major functions of the main controller PCB (sub) grouped according to jack/IC:

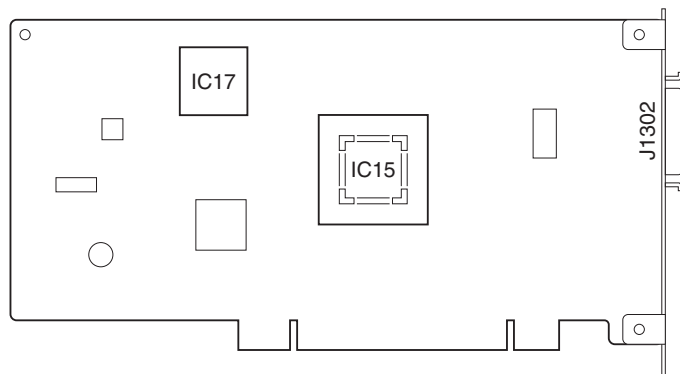

F-4-3

T-4-4

Jack No.	Description
J1302	connector for reader unit communication


T-4-5

IC No.	Description
IC15	controls image processing of input image data from the reader unit.
IC17	controls indication of images read by the scanner.

4.2.3 Expansion Bus PCB

0002-0689

The following shows the major functions of the expansion bus PCB grouped according to jack/IC:

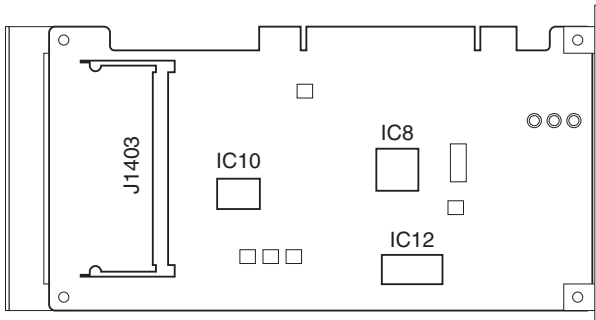

F-4-4

T-4-6

Jack No.	Description
J1403	connector for the SRAM PCB.


T-4-7

IC No.	Description
IC8	LCD controller
IC10	NE controller, coin vendor, interface ASIC for card reader connection
BAT	backup battery for SRAM

4.2.4 SRAM PCB

0002-0690

The following is a discussion of the major control functions of the SRAM indicated with reference to ICs:

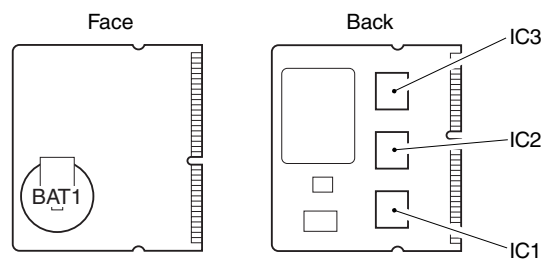

F-4-5

T-4-8

IC No.	Description
IC1,2,3 (SRAM)	retains control information on the image data stored on the HDD; retains service mode settings data and Additional Function settings data


4.2.5 HDD

0003-3826

As many as 9 partitions (units or blocks of division) are created on the HDD, and each partition is assigned a specific task.

T-4-9

Partition	Description
DOSDEV	stores general-use data.
FSTDEV	stores image data.
DOSDEV2	stores thumbnail display data for image data.
FSTPDEV	stores image data.
DOSDEV3	stores general-use files temporarily (e.g., PDL spool).
PDLDEV	stores PDL-related files (font, registration form, ICCProfile, PDL color correction information file).
DOSDEV4	stores user data (address book, transfer settings).
BOOTDEV	stores system software.
DOSDEV5	for future expansion.

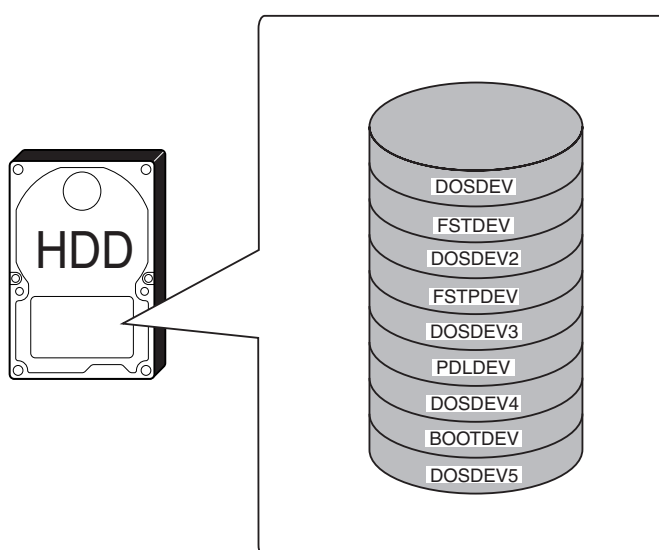


F-4-6

The following shows the construction of the machine's system software:

T-4-10

System software	Function	Location	Remarks
System	system module (overall control)	HDD (BOOTDEV)	
Language	language module (LCD indication control)	HDD (BOOTDEV)	
RUI	language module (remote UI control)	HDD (BOOTDEV)	
Boot	machine startup	BootROM	DIMM
G3FAX	G3 fax control	G3 fax board	DIMM
Dcon	DC controller control	DC control PCB	hardwired flash ROM
Rcon	reader controller control	reader controller PCB	hardwired flash ROM

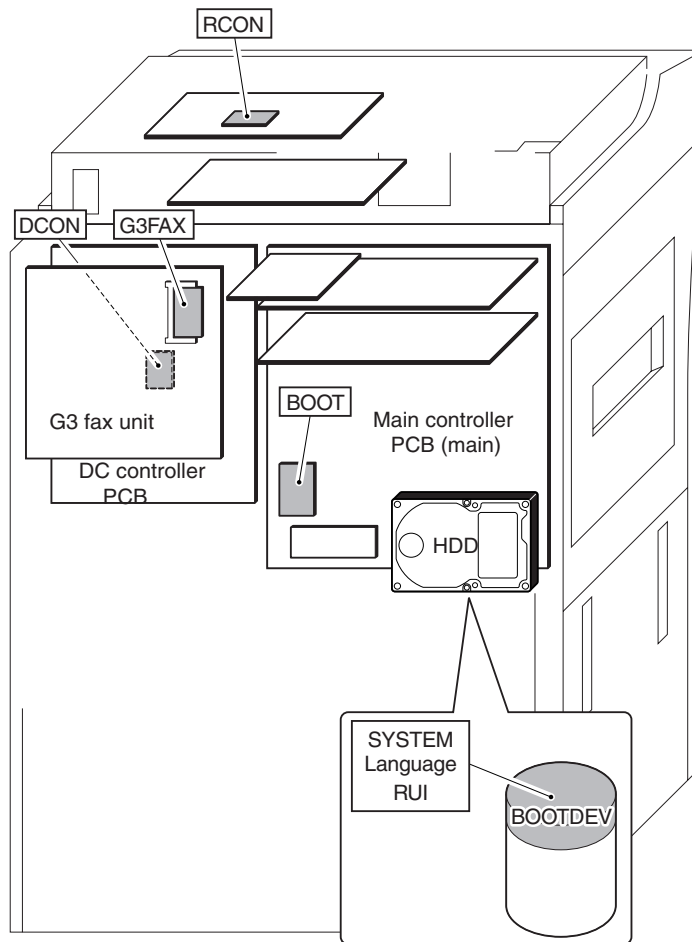

F-4-7

4.3 Start-Up Sequence


4.3.1 Overview

0000-7737

The system software used to control the operation of the machine is stored on the HDD.

When the machine is started up, the CPU on the main controller PCB reads the system software from the HDD into the image memory (SDRAM) of the main controller PCB for use as instructed by the boot program of the boot ROM.

The following screen remains on the control panel while the CPU is reading the system memory from the HDD into the image memory (SDRAM), with the bar indicating the progress of the startup sequence.

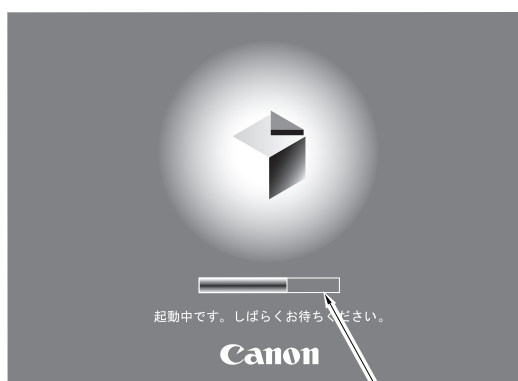

Progress bar

F-4-8

⚠ Never turn off the main power while the progress bar is indicated. The CPU is accessing the HDD, and turning off the power can cause a fault (E602) on the HDD.

4.3.2 Start-Up Sequence

0000-7741

<Boot ROM Area>

-Self-Diagnostic Program (interval 1)

When the main power switch is turned on, the CPU of the main controller PCB runs a self-diagnostic program, which checks the condition of the image memory (SDRAM) and the HDD. If a fault is found, the machine will indicate its presence by an error code.


-Boot Program (interval 2)

When the self-diagnostic program ends normally, the CPU on the main controller PCB executes the boot program to read the system software from the HDD, writing it to the system area of the image memory (SDRAM).

<Image Memory (SDRAM) Area> (interval 3)


The machine initializes its various parts using the system software written into memory by the boot program (i.e., I/F settings for the main controller).

When all ends normally, the machine becomes ready for a job (indicating the Operation screen on the control panel, and changing the Start LED key from red to green).

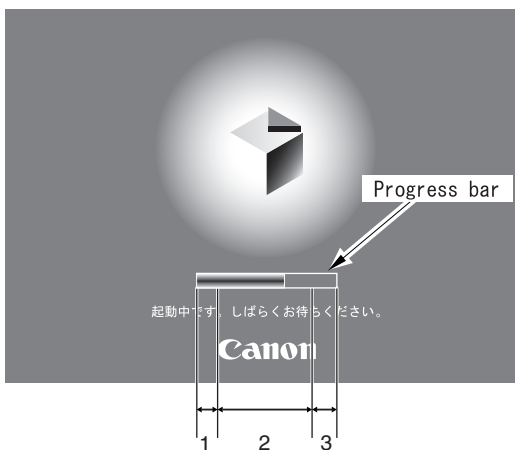

F-4-9


- Self diagnosis program being executed

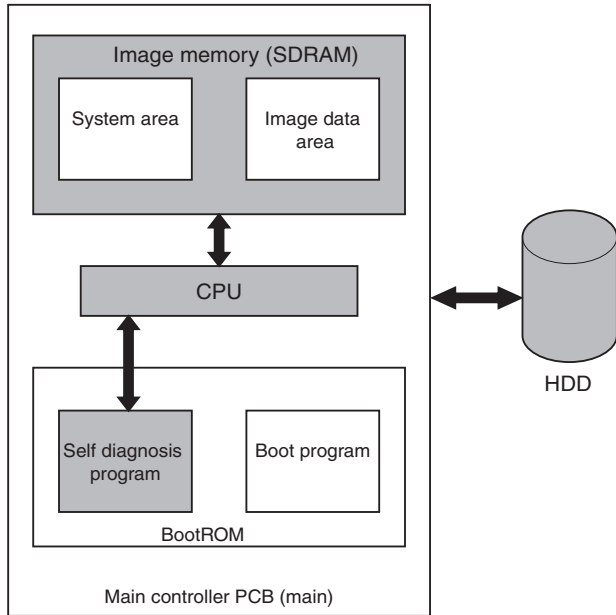

↔ : access to program at time of execution.

F-4-10

- Boot Program in Execution

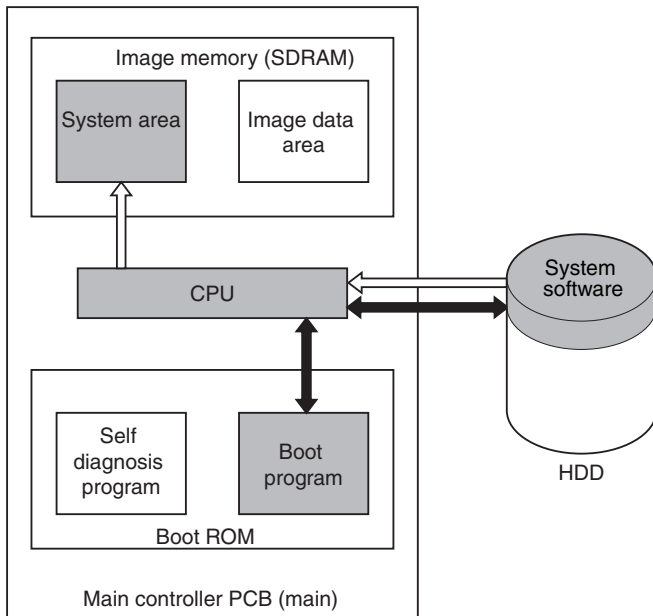

↔ : access to program at time of execution

⇐ : flow of system program

F-4-11

4.4 Actions when HDD Error




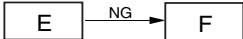
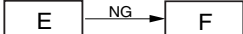
4.4.1 E602 in Detail

0002-3236









If the machine suffers a fault associated with E602-xyyy, it calls for different remedial actions as identified by the sub code.

⚠ If E602-xyyy is indicated, be sure always to turn off and then on the machine (so that it will run auto recovery sequence).

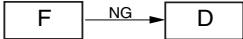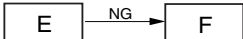T-4-11

xx	Partition	yy	Description
00	HDD as a whole	01	<p>The machine cannot recognize the HDD. The machine cannot find BOOTDEV at time of startup.</p> <p>Remedy: Turn off the main power, and check the connection of the 2 types of cables (power, IDE) connecting to the HDD; then, turn on the power. When doing so, check to see if the HDD rotates and if the power is supplied.</p>  <pre> graph LR F[F] -- NG --> D[D] </pre>
		02	<p>The machine cannot find the system software for the CPU of the main controller (main) in BOOT DEV.</p> <p>Remedy:</p>  <pre> graph LR E[E] -- NG --> F[F] </pre>
		03	<p>The machine detects a read error sector while it is reading data from BOOTDEV.</p> <p>Remedy:</p>  <pre> graph LR H[H] -- NG --> E[E] E -- NG --> F[F] </pre>
		06	<p>The machine cannot find the system software for the CPU of the main controller (sub) in BOOTDEV.</p> <p>Remedy:</p>  <pre> graph LR E[E] -- NG --> F[F] </pre>
		07	<p>The machine cannot find an appropriate ICCProfile in BOOTDEV/PDLDEV.</p> <p>Remedy:</p>  <pre> graph LR E[E] -- NG --> F[F] </pre>

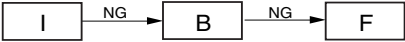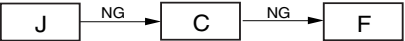T-4-12

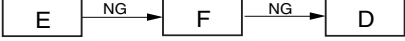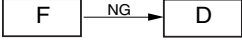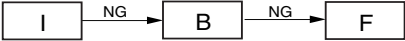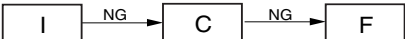xx	Partition	yy	Description
01	DOSDEV	01, 02	The machine has encountered a read error or a file system error while starting up.
02	FSTDEV		
03	DOSDEV2		
04	FSTPDEV		Remedy:
05	DOSDEV3		
06	PDLDEV		if xxyy is 0701, 0702.
07	DOSDEV4		Remedy:
08	BOOTDEV		Ask the user to use the RUI to collect address book data, transfer settings, and
09	DOSDEV5		user mode data. 
FF	not identified		if xxyy is 0801, 0802.
			Remedy:
			
			if xxyy is FF01, FF02.
			Remedy:
			
03			The machine has encountered an HDD contact fault or, operating system error.
			Remedy:
			Turn off the main power, and check the 2 types of cable (power, IDE) connecting to the HDD; then, turn on the main power.
			While doing so, check to see if the HDD rotates and if power is supplied.
			
11,21			The machine has encountered an HDD contact fault.
			Remedy: Turn off the main power, and check the 2 types of cable (power, IDE) connecting to the HDD; then, turn on the power.
			While doing so, check to see if the HDD rotates and if the power is supplied.
			
13,25			The machine has encountered a read error.
			Remedy:
			
			if xxyy is 0713, 0725.
			Remedy:
			

xx	Partition	yy	Description
			if xxyy is 0813, 0825.
			Remedy:
			<pre> graph LR I[I] -- NG --> E[E] E[E] -- NG --> F[F] </pre>
		10,12,14, 22,23,24	The machine has encountered a system error or a packet data error.
			Remedy:
			<pre> graph LR E[E] -- NG --> F[F] </pre>

A :

- 1) Make the following selections, and enter '1': COPIER>FUNCTION>SYSTEM>CHK-TYPE.
- 2) Make the following selections, and press the OK key to execute:
COPIER>FUNCTION>SYSTEM>HDCHECK*.
- 3) When done, turn off and then on the main power.

B :

- 1) Find the appropriate CHK-TYPE from the table 'HDD Format' ; then, make the following selections, and type:
COPIER>FUNCTION>SYSTEM>CHK-TYPE.
- 2) Make the following selections, and press the OK key to execute: COPIER>FUNCTION>SYSTEM>HDCLEAR.
- 3) When done, turn off and then on the main power.

C :

- 1)** Start up the machine in normal mode (i.e., turn on the main power while pressing the 1 and 7 keys ; then, make the following selections, and press the OK key: COPIER>FUNCTION>SYSTEM>DOWNLOAD).
- 2) Execute formatting of DOSDEV4 using the Service Support Tool.
- 3) When done, turn off and then on the main power.

D:

- 1) Replace the main controller (main) board.
- 2) Remove the image memory (SDRAM) and the boot ROM from the previous board, and mount them on the new board.

E:

- 1)** Start up the machine in safe mode (i.e., turn on the power while pressing the 2 and 8 keys).
- 2) Format the HDD (ALL) using the Service Support Tool, and download the system software (SYSTEM, LANG, RUI).
- 3) When done, turn off and then on the main power.

F:

- 1)** Replace the HDD, and start up the machine in safe mode (i.e., turn on the main power while pressing the 2 and 8 keys).
- 2) Format the HDD (ALL) using the Service Support Tool, and download the system software (SYSTEM, LANG, RUI).
- 3) When done, turn off and then on the main power.

G:

- 1) Make the following selections, and enter '1': COPIER>FUNCTION>SYSTEM>CHK-TYPE.
- 2) Make the following selections, and press the OK key to execute: COPIER>FUNCTION>SYSTEM>HD-CLEAR.
- 3) When done, turn off and then on the main power.

H:

- 1) Turn off the main power; then, turn on the main power while pressing the 1 and 9 keys (so that the machine will automatically start its remedial program*, turning the control panel solid black).
- 2) When done (i.e., when the control panel turns white), turn off and then on the main power.

 If the machine does not run its remedial program in response to the foregoing step, go to E.

I:

- 1) Find the appropriate CHK-TYPE in the table "HDD Format"; then, make the following selections and enter CHK-TYPE.
- 2) Make the selections, and press the OK key to execute: COPIER>FUNCTION>SYSTEM>HD-CHECK*.
- 3) When done, turn off and then on the main power.

J:

- 1) Make the following selections, and enter '4': COPIER>FUNCTION>SYSTEM>CHK-TYPE.
- 2) Make the following selections, and press the OK key to execute: COPIER>FUNCTION>SYSTEM>HD-CHECK (1 to 5 min).
- 3) When done, turn off and then on the main power.

* Takes about 30 to 50 min.

** As necessary, ask the user to use the RUI to collect address book data, transfer settings, and user mode settings.

T-4-13

HDD Format

Partition	CHK-TYPE	Typical data item deleted
DOSDEV	1	all relating to images (reservation, Box, fax);
FSTDEV	1	mode memory, routine task button
DOSDEV2	1	
FSTPDEV	1	
DOSDEV3	2	PDL spool
PDLDEV	3	PDL-related file (font, registration form, ICCProfile)
DOSDEV4	4	user data (address book, transfer settings),
BOOTDEV	4	system software
DOSDEV5	5	-
non specific	0	-

4.4.2 E609 in Detail

0005-9582

E609 is an HDD error associated with the HDD from Samsung.
See below for its cause and remedy.

T-4-14


Code	Detail	Possible Cause/Description	Remedy
E609		Samsung HDD-related error code	
	0000	at time of start-up, there is no increase in temperature to a specific level.	Replace the HDD.
	0001	at time of sleep recovery, the temperature does not reach a specific level.	Turn off and then on the main power supply. If resetting fails, replace the HDD.

4.5 Image Processing

4.5.1 Overview of the Flow of Image Data

0003-2506

The following shows the flow of image data when the foregoing functions are used:

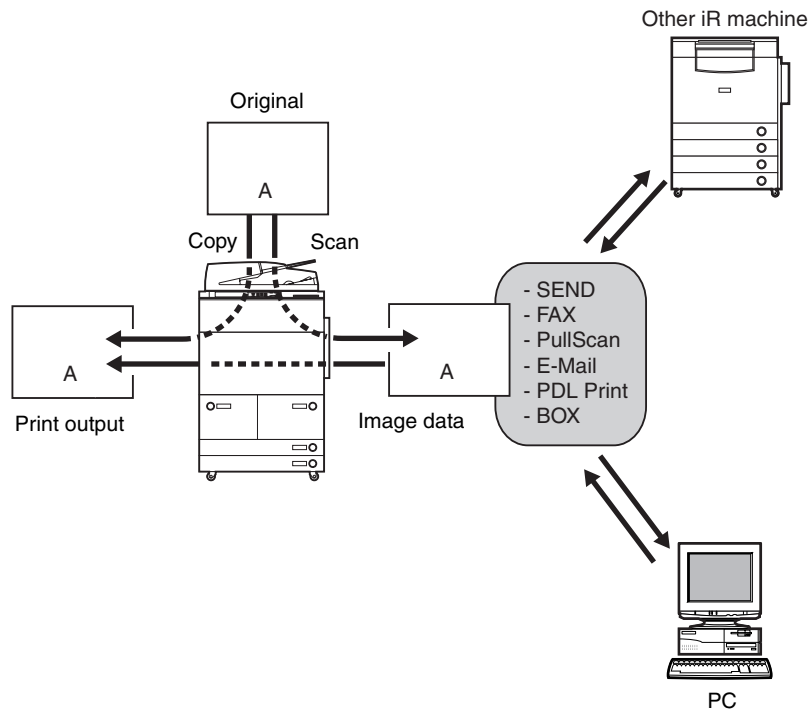


F-4-12

4.5.2 Construction of the Image Processing Modules

0003-2509

The machine's major image processing mechanisms are carried out by the main controller PCB(main). The following shows the construction of the modules associated with these mechanisms:

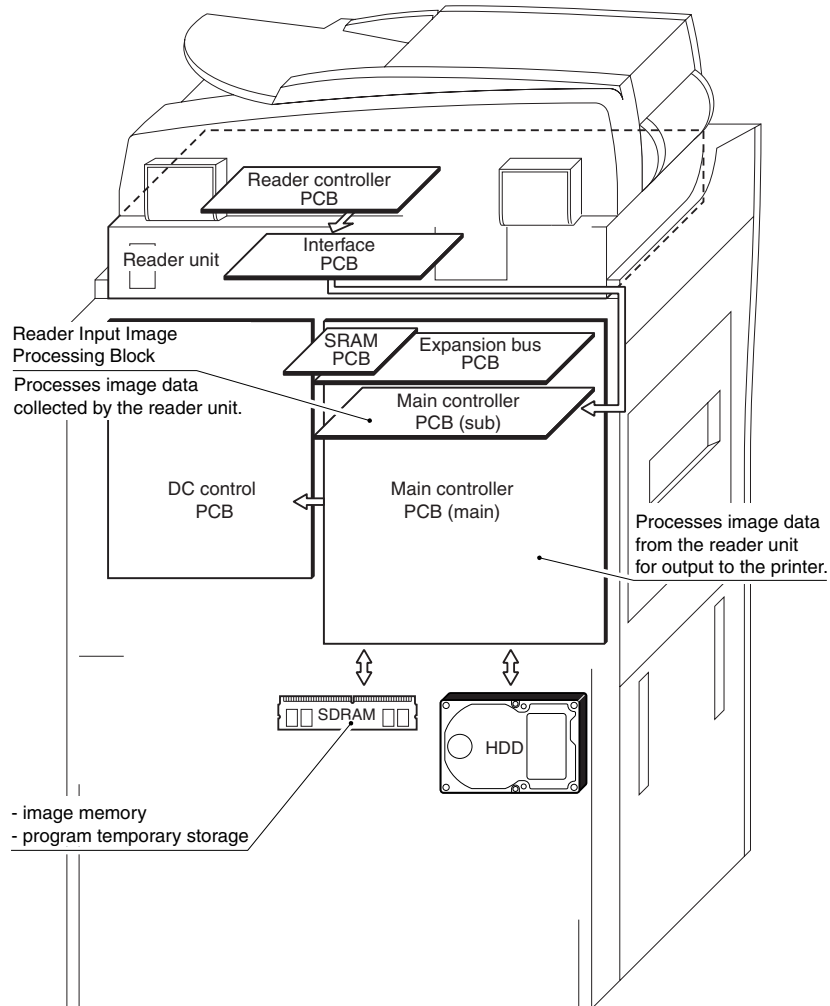


F-4-13

4.5.3 Reader Input Image Processing

0003-2928

The image data (RGB data) from the CCD unit is processed by the main controller PCB (sub).

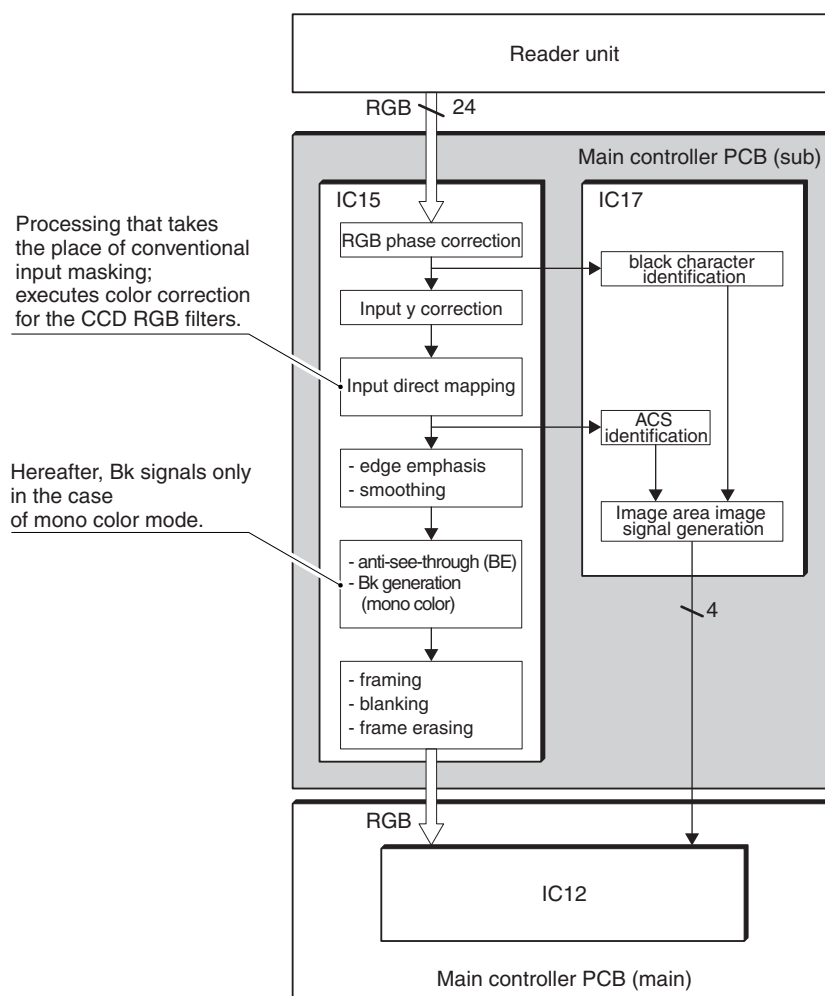


F-4-14

4.5.4 Compression/Decompression and Editing Blocks

0000-7753

IC12 is used to compress/decompress and edit various data.

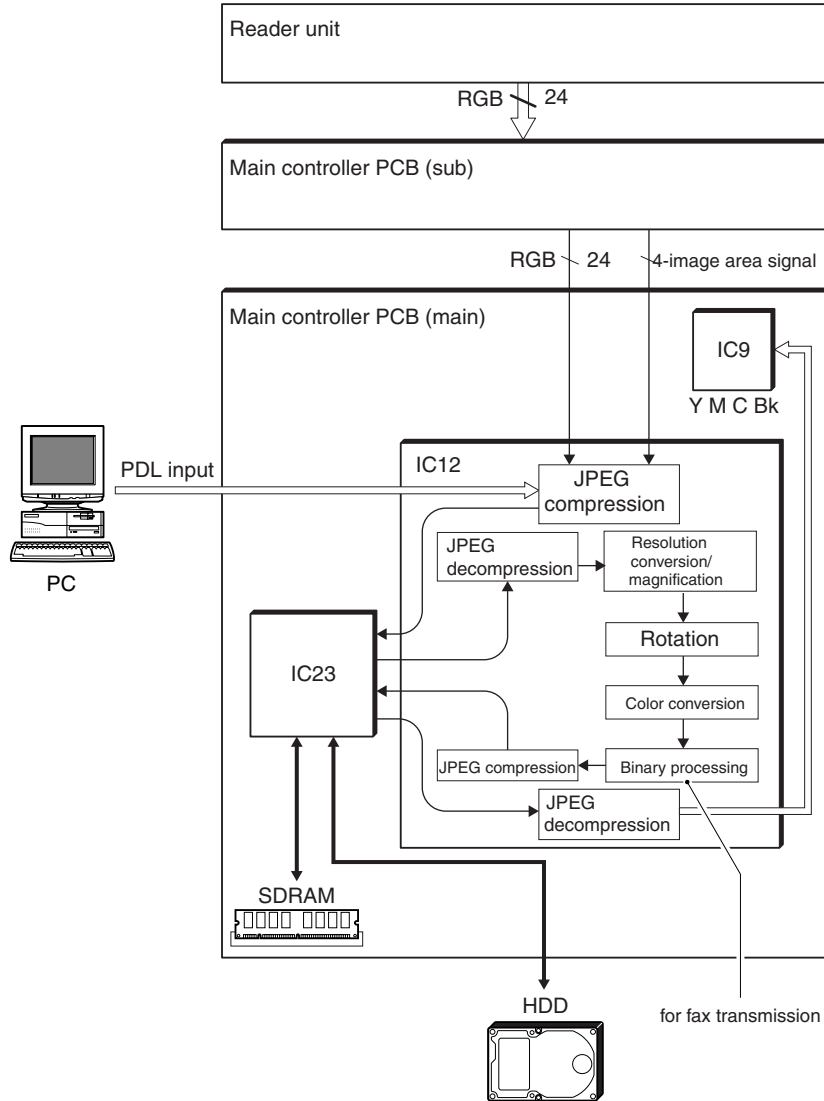


F-4-15

4.5.5 Printer Output Image Processing

0000-7754

Main controller PCB processes image data from the Reader unit for output to the printer.

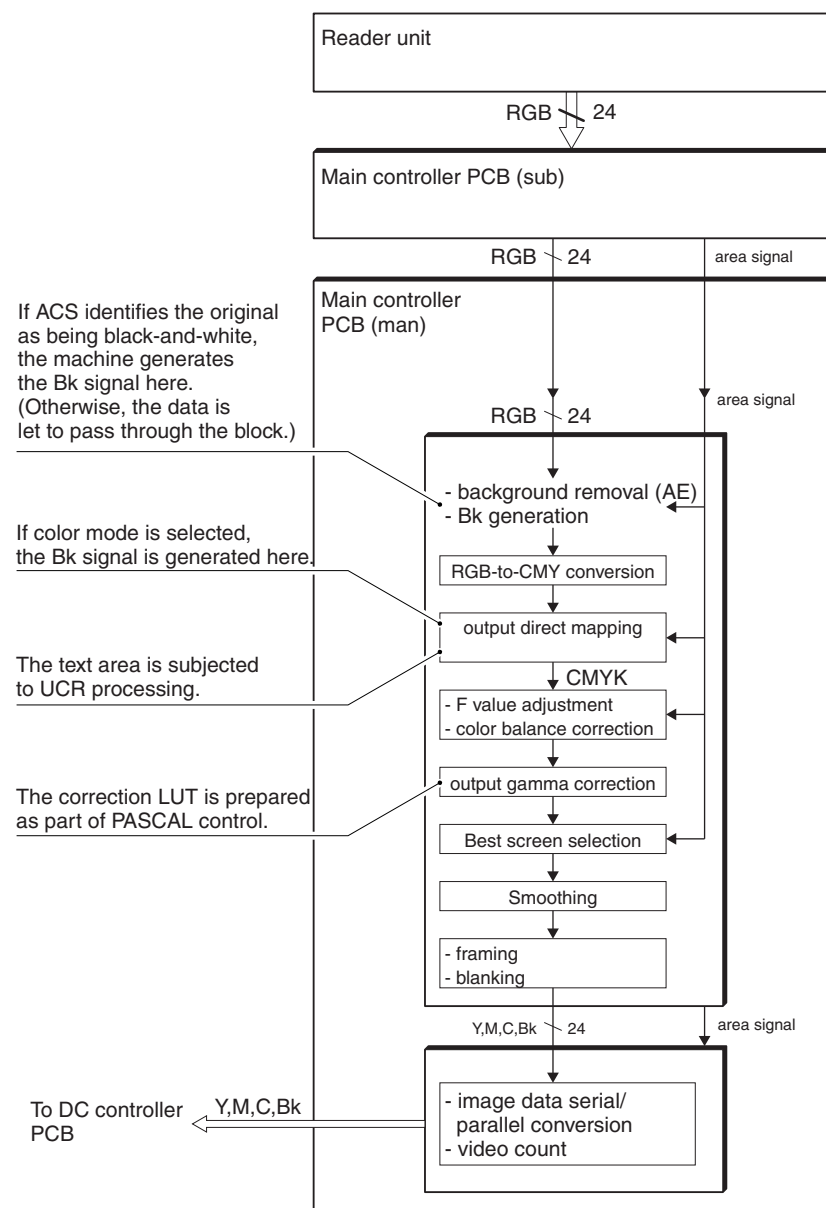


F-4-16

4.6 Flow of Image Data

4.6.1 Flow of Image Data (copier function)

0000-7755

The following shows the flow of image data when copier functions are used:

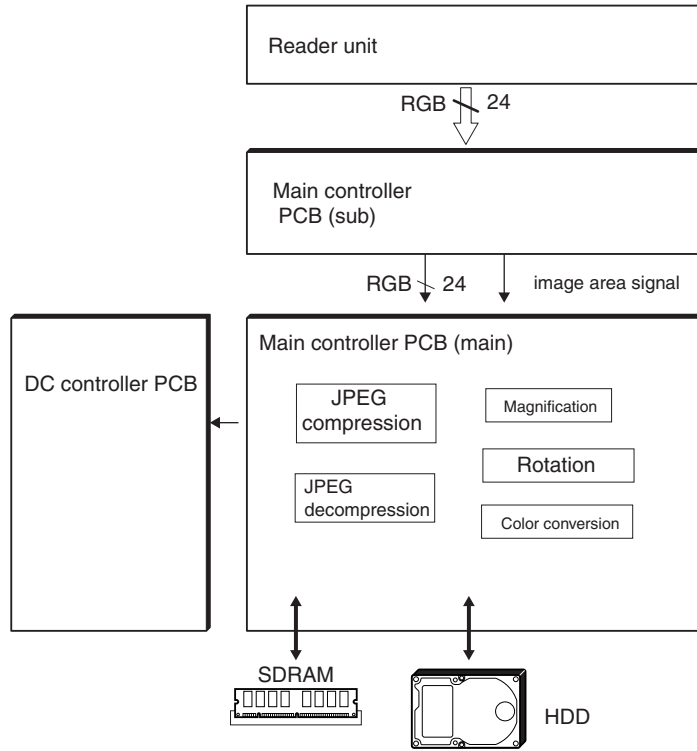


F-4-17

4.6.2 Flow of Image Data (Box function)

0000-7757

The following shows the flow of image data when Box functions are used.

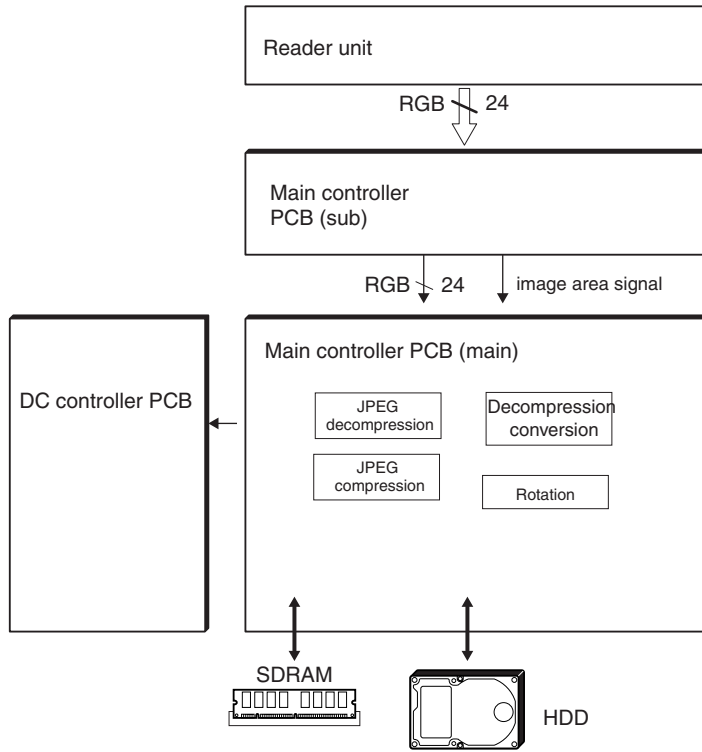


F-4-18

4.6.3 Flow of Image Data (SEND function)

0000-7760

The following shows the flow of image data when SEND functions are used.

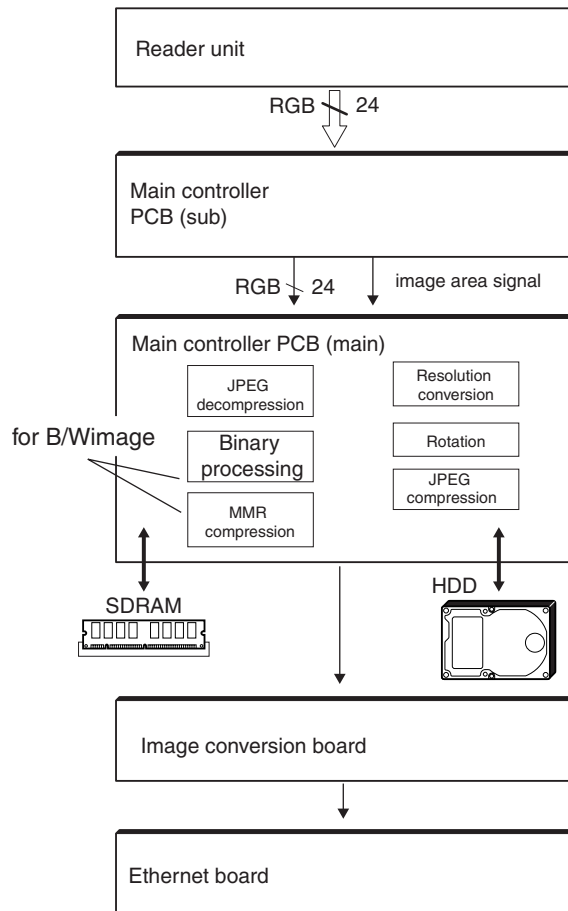


F-4-19

4.6.4 Flow of Image Data (fax transmission)

0000-7764

The following shows the flow of image data when fax transmission functions are used:

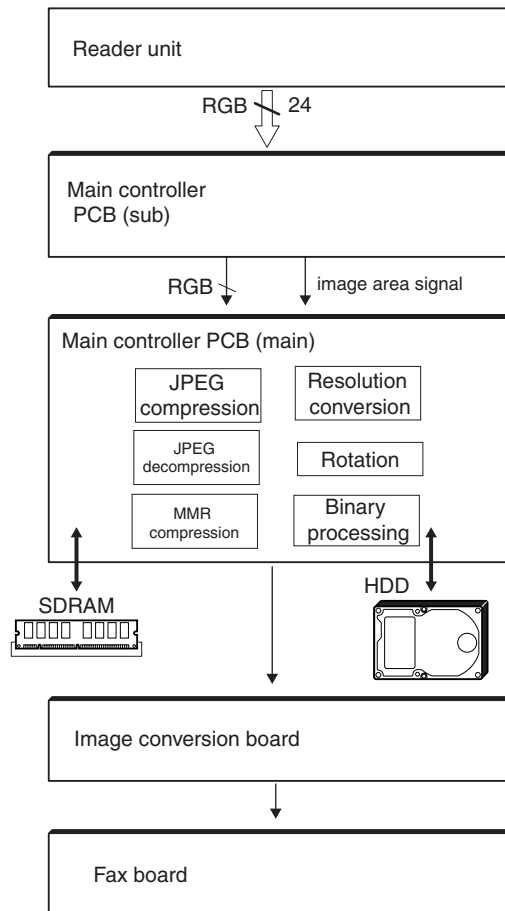


F-4-20

4.6.5 Image Data Flow for Fax Reception Functions

0000-7766

The following is the flow of image data used for fax reception functions.

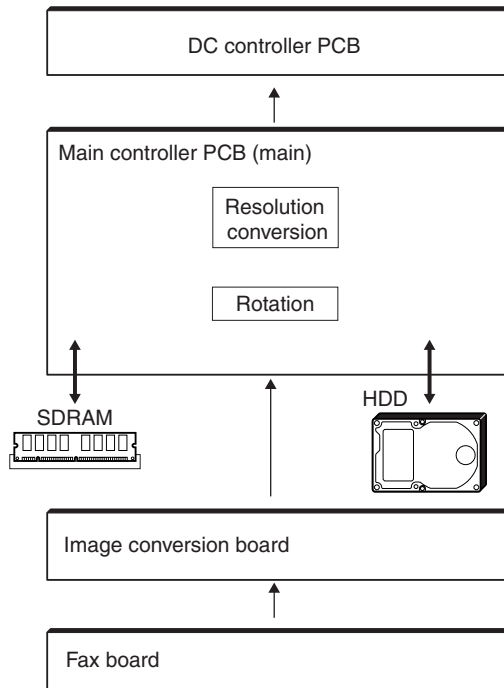


F-4-21

4.6.6 Flow of Image Data (PDL function)

0000-7770

The following shows the flow of image data when PDL functions are used:

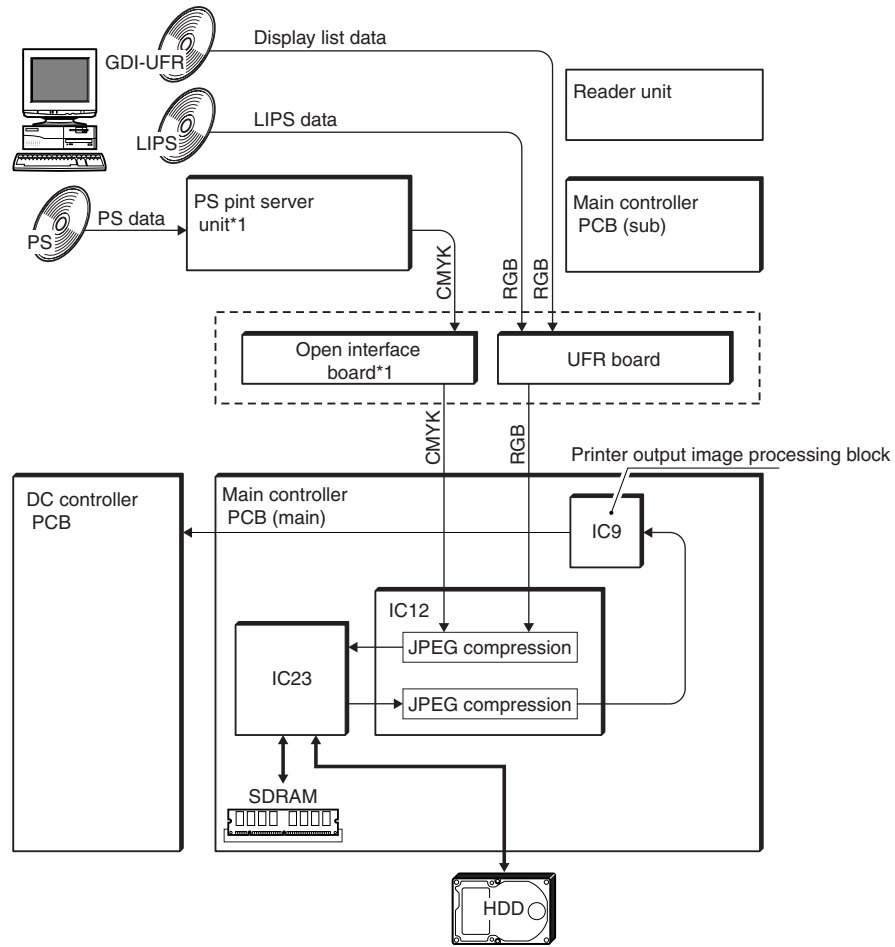

F-4-22

4.7 Parts Replacement Procedure


4.7.1 Controller Box

4.7.1.1 Removing the Left

Cover (upper)

0003-8275

- 1) Remove the 3 screws [1], and detach the left cover (upper) [2].

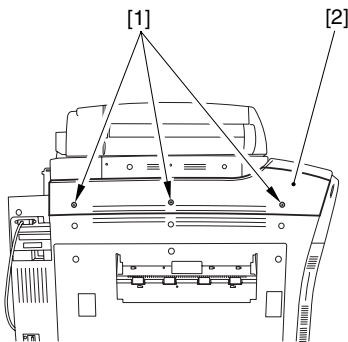


F-4-23

4.7.1.2 Removing the Delivery

Cover

0003-8279

- 1) Remove the 3 screws [1], and detach the delivery cover [2].

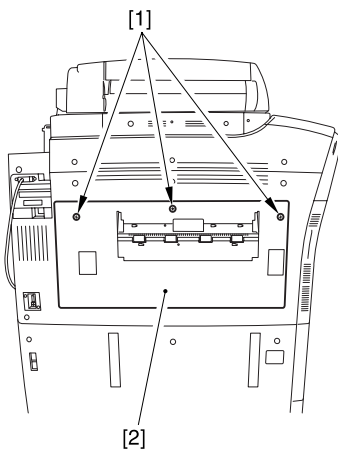


F-4-24

4.7.1.3 Removing the Left

Cover (middle)

0003-8289

- 1) Disconnect the connector [1].
- 2) Remove the 5 screws [2], and detach the left cover (middle) [3].

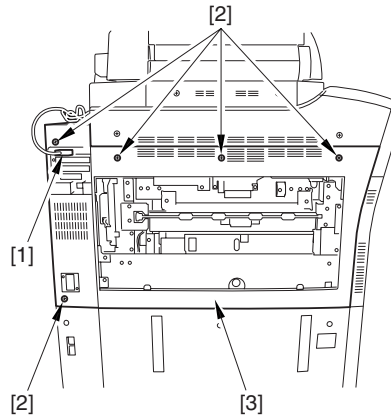


F-4-25

4.7.1.4 Removing the Rear

Cover (upper)


0003-8309

- 1) Free the cable [2] from the 2 cable clamps [1].
- 2) Remove the 2 screws [3].

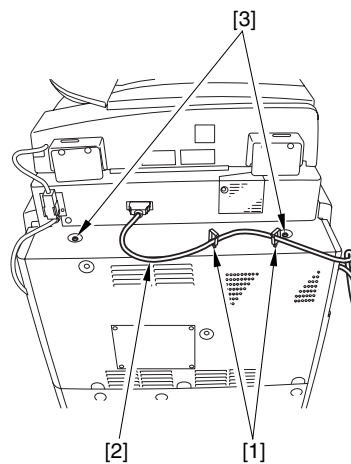

F-4-26

3) Remove the 5 screws [1], and detach the rear cover (upper) [2].

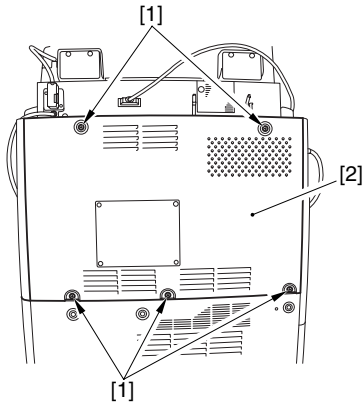


F-4-27


4.7.1.5 Removing the Controller Box Cover

0003-5527

1) Remove the 2 screws [1], and detach the controller box cover [2].

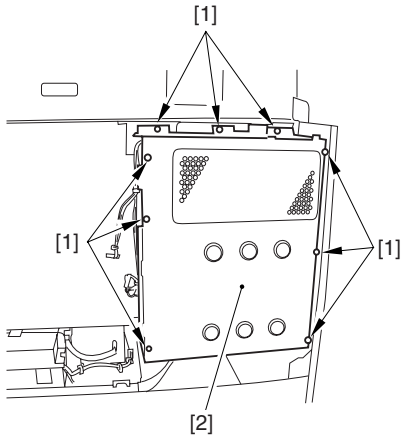

F-4-28

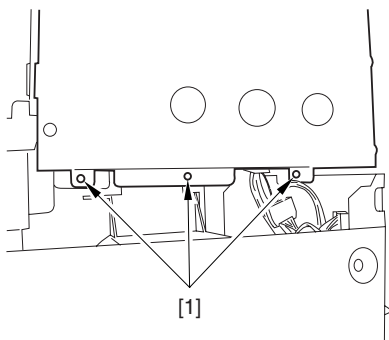


F-4-29


4.7.1.6 Removing the Controller Box

0002-9795

1) Disconnect the 9 connectors [1].

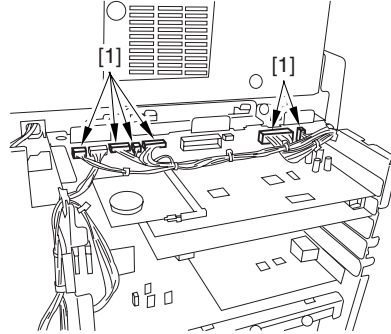


F-4-30

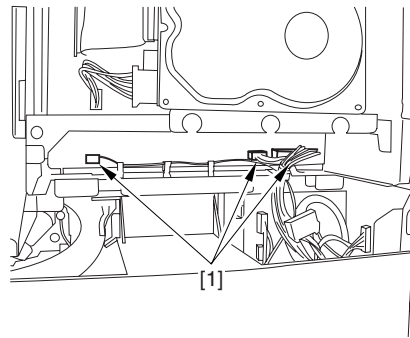


F-4-31

2) Free the harness from the 3 harness retainers [1].

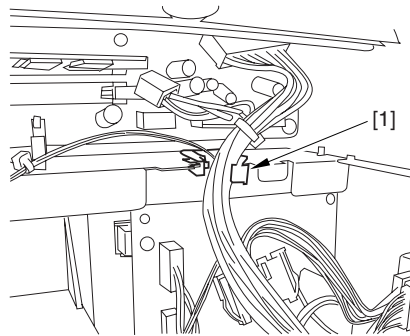


F-4-32

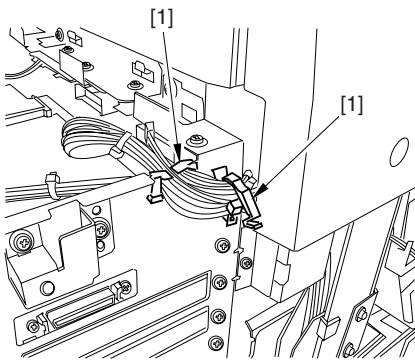


F-4-33


3) Remove the 9 screws [1] used to fix the main controller box in place.

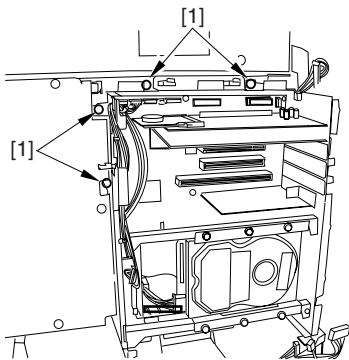

F-4-34

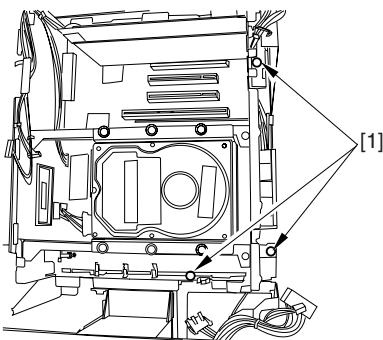


F-4-35

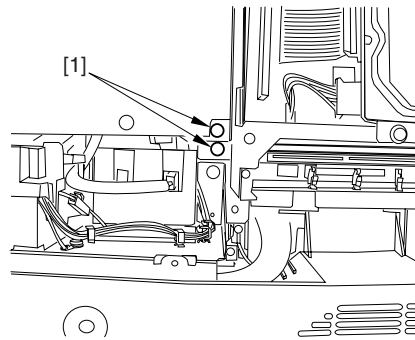


F-4-36

4) Slide the main controller box [1] toward the delivery side to detach.

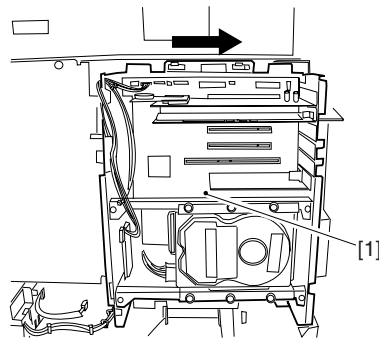

F-4-37

⚠ During removal/mounting, be sure to take care not to damage the connector [2] found at the joint to the DC controller PCB.

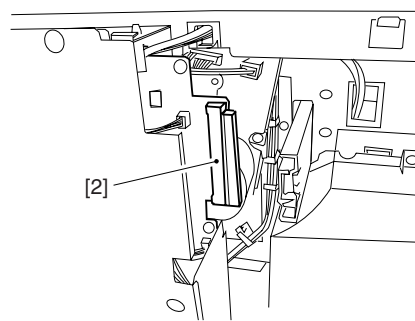


F-4-38

4.7.2 Main Controller PCB (main)

4.7.2.1 Removing the Delivery

Cover 0003-8280

- 1) Remove the 3 screws [1], and detach the delivery cover [2].

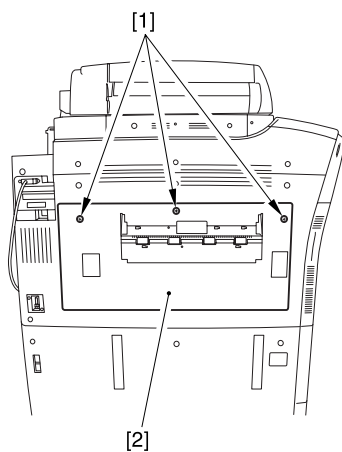


F-4-39

4.7.2.2 Removing the Left

Cover (middle) 0003-8290

- 1) Disconnect the connector [1].
- 2) Remove the 5 screws [2], and detach the left cover (middle) [3].

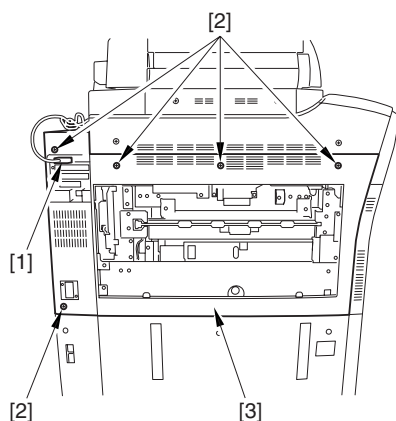


F-4-40

4.7.2.3 Removing the Rear Cover (upper)


0003-8310

- 1) Free the cable [2] from the 2 cable clamps [1].
- 2) Remove the 2 screws [3].

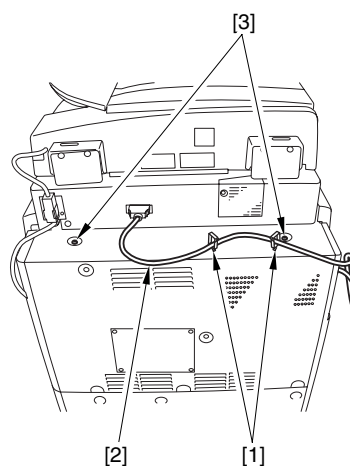

F-4-41


- 3) Remove the 5 screws [1], and detach the rear cover (upper) [2].

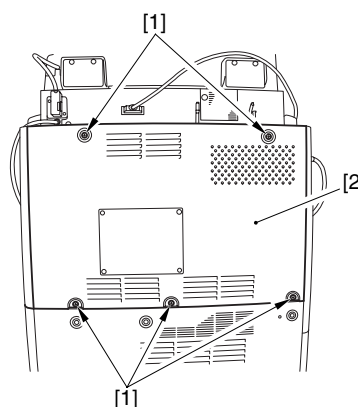


F-4-42

4.7.2.4 Removing the Controller Box Cover 0003-6135

1) Remove the 2 screws [1], and detach the controller box cover [2].

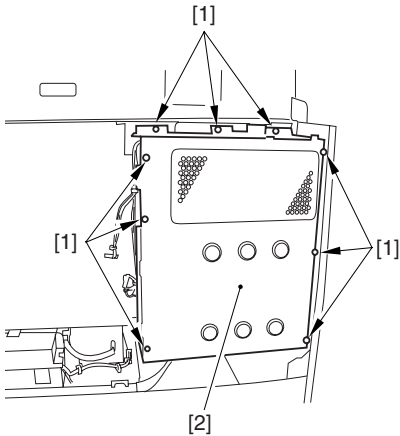


F-4-43

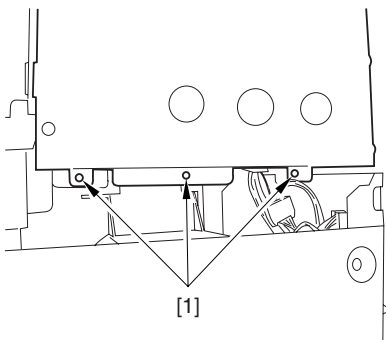

F-4-44


4.7.2.5 Removing the Main Controller PCB (main) 0003-6139

1) Disconnect the connector [1] of the controller fan.

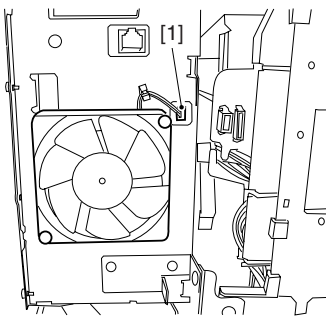

F-4-45


- 2) Remove the boot ROM [1] and the image memory (SDRAM) [2].
- 3) Disconnect the 2 connectors [3].

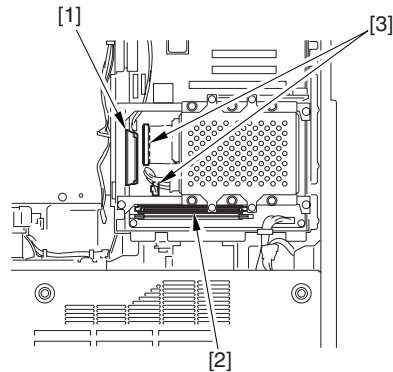

F-4-46


4) Remove the 2 screws each [1] [3] [5], and detach the following:

- expansion bus PCB [2].
- main controller PCB (sub) [4]
- Ethernet board [6]

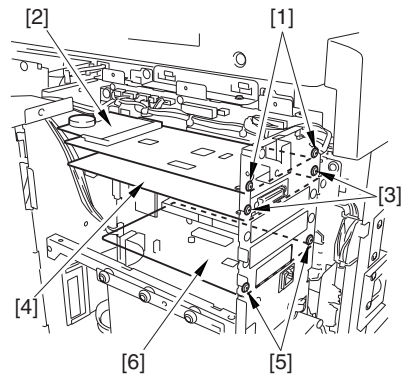


F-4-47

5) Disconnect the 9 connectors [1].

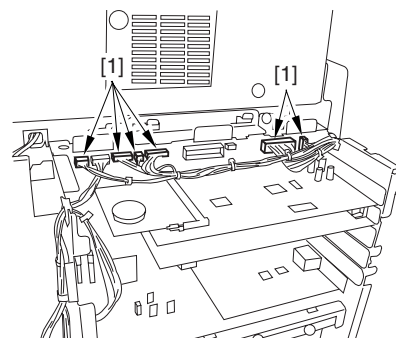


F-4-48

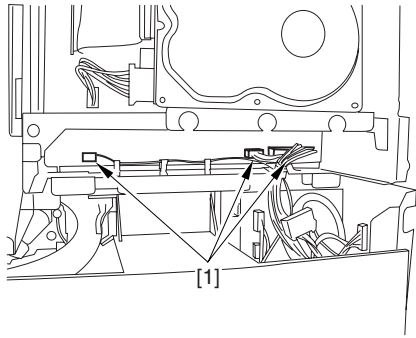


F-4-49

6) Free the harness from the 3 harness retainers [1].

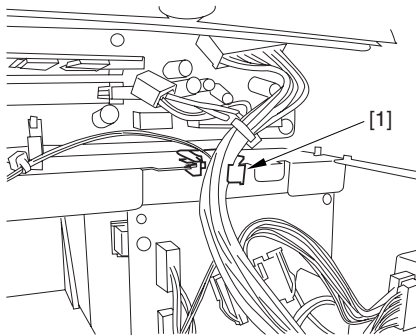


F-4-50

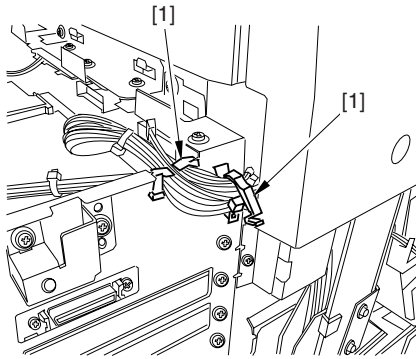


F-4-51


7) Remove the 9 screws [1] used to hold the main controller box in place.

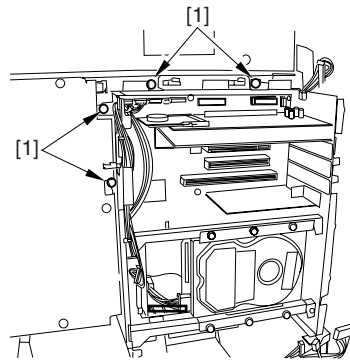

F-4-52

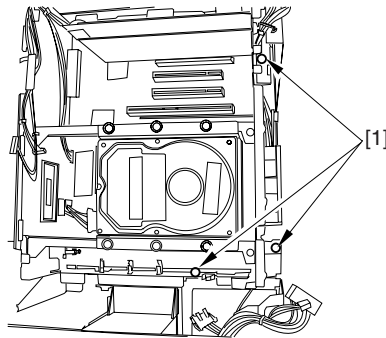


F-4-53

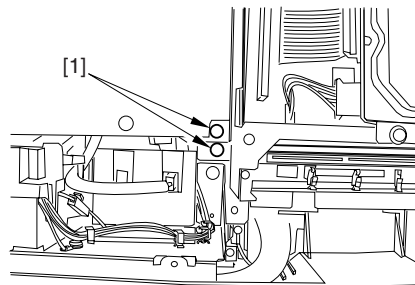


F-4-54

8) Slide the main controller box [1] toward the delivery side.

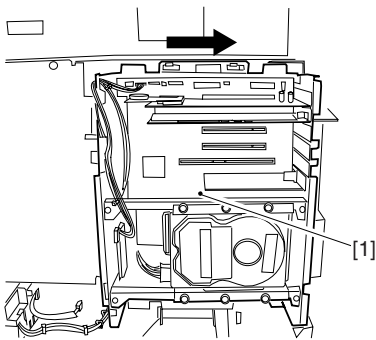


F-4-55

⚠ When sliding the DC controller box, be sure to take care so as not to damage the connector [2] in the joint to the DC controller PCB.

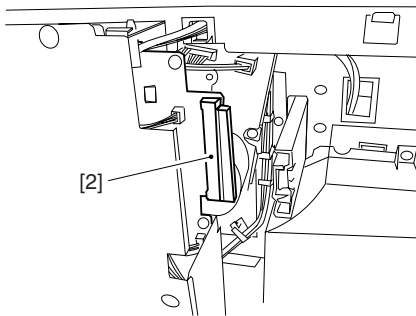


F-4-56

9) Remove the 8 screws [1], and detach the main controller PCB [2].

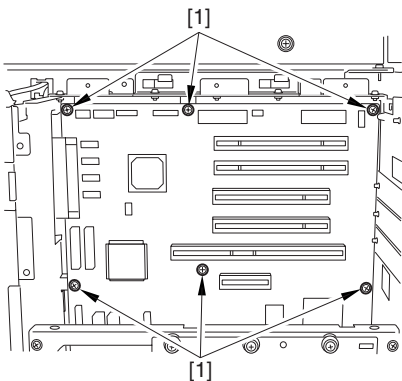

F-4-57

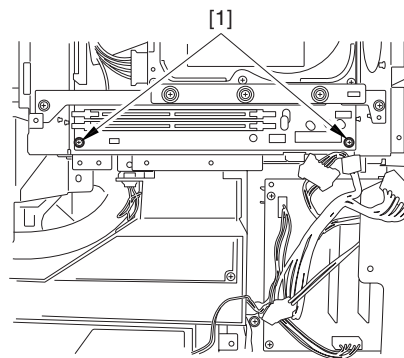


F-4-58

4.7.2.6 After Replacing the


Main Controller PCB (main) [0003-6168](#)

After mounting the main controller PCB (main), be sure to attach all PCBs you may have removed before replacement:

- [1] boot ROM
- [2] image memory (SDRAM)
- [3] expansion bus PCB
- [4] main controller PCB (sub)
- [5] Ethernet board

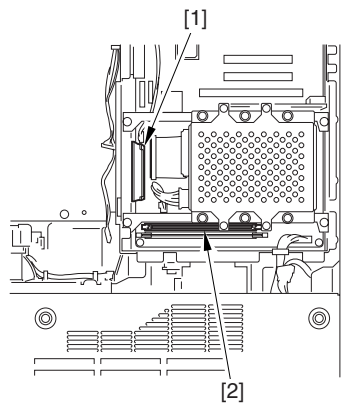

F-4-59

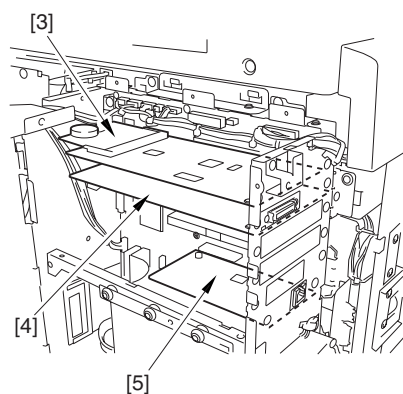


F-4-60

4.7.3 Main Controller PCB (sub)

4.7.3.1 Removing the Delivery

Cover 0003-8281

- 1) Remove the 3 screws [1], and detach the delivery cover [2].

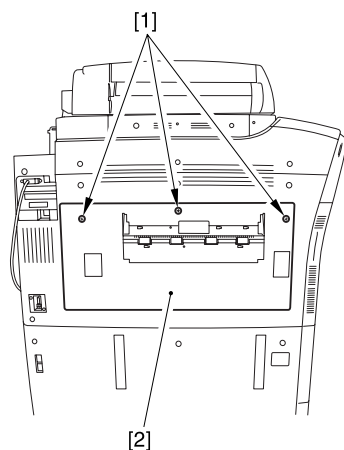


F-4-61

4.7.3.2 Removing the Left Cover (middle)

0003-8291

- 1) Disconnect the connector [1].
- 2) Remove the 5 screws [2], and detach the left cover (middle) [3].

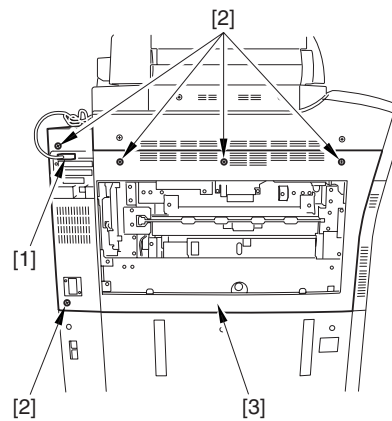


F-4-62

4.7.3.3 Removing the Rear Cover (upper)


0003-8311

- 1) Free the cable [2] from the 2 cable clamps [1].
- 2) Remove the 2 screws [3].

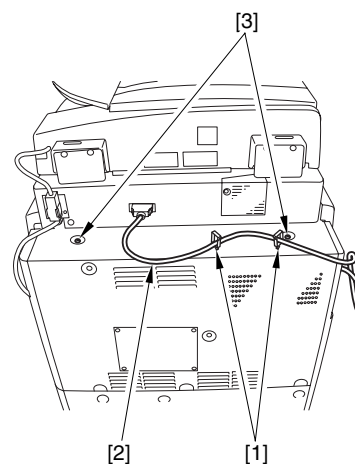

F-4-63


3) Remove the 5 screws [1], and detach the rear cover (upper) [2].

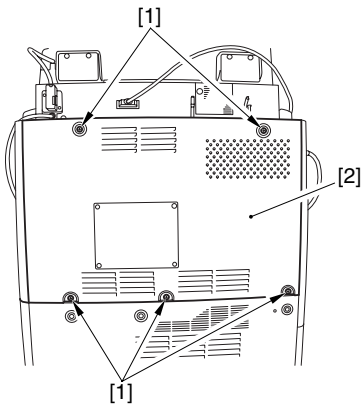


F-4-64

4.7.3.4 Removing the Controller Box Cover 0003-5530

1) Remove the 2 screws [1], and detach the controller box cover [2].

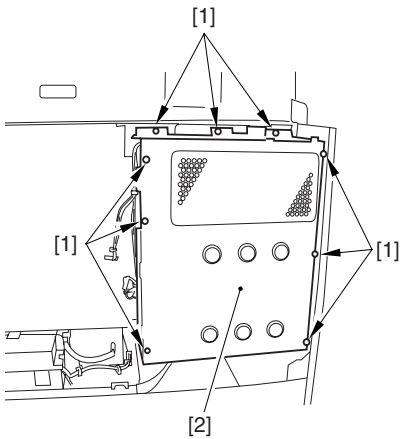


F-4-65

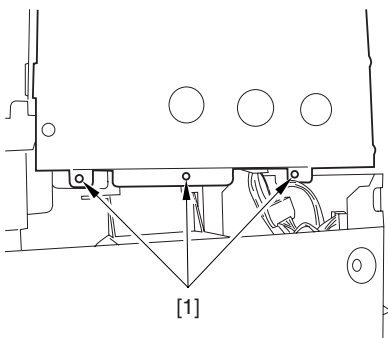

F-4-66

4.7.3.5 Removing the Main Controller PCB (sub) 0003-5504

1) Remove the 2 screws [1], and detach the main controller PCB (sub) [2].

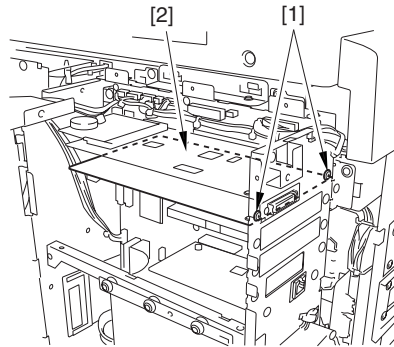


F-4-67

4.7.4 Expansion Bus PCB


4.7.4.1 Removing the Rear Cover (upper) 0003-8312

1) Free the cable [2] from the 2 cable clamps [1].
2) Remove the 2 screws [3].

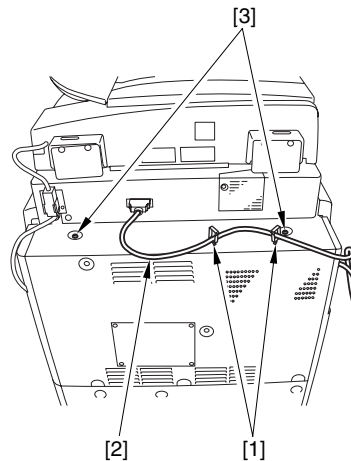

F-4-68

3) Remove the 5 screws [1], and detach the rear cover (upper) [2].

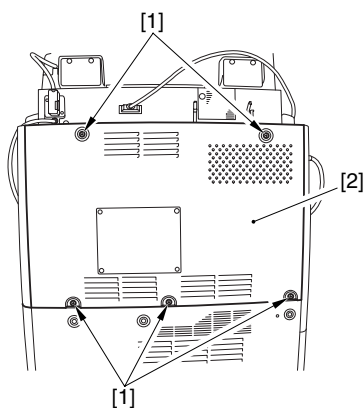


F-4-69

4.7.4.2 Removing the Delivery

Cover 0003-8283

1) Remove the 3 screws [1], and detach the delivery cover [2].

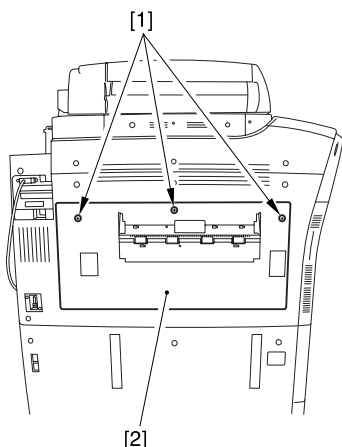


F-4-70

4.7.4.3 Removing the Left

Cover (middle) 0003-8292


1) Disconnect the connector [1].
2) Remove the 5 screws [2], and detach the left cover (middle) [3].

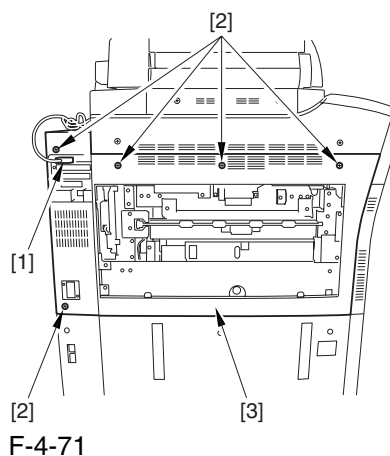


F-4-71

4.7.4.4 Removing the Controller Box Cover 0003-5531

1) Remove the 2 screws [1], and detach the controller box cover [2].

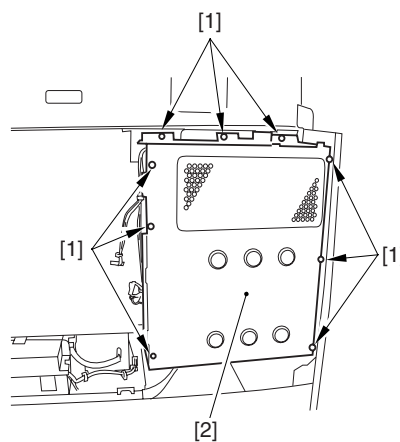

F-4-72

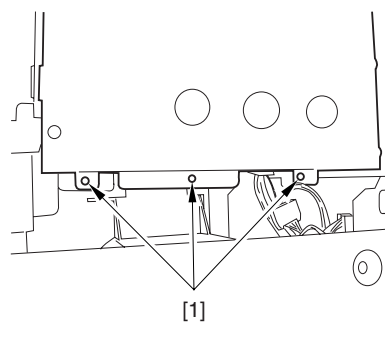


F-4-73

4.7.4.5 Removing the SRAM

Board

0003-5544

- 1) Release the 2 locks [1], and detach the SRAM board [2].

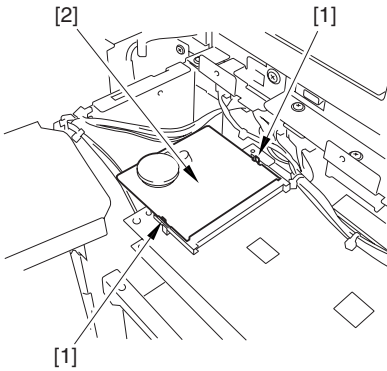


F-4-74

4.7.4.6 Removing the

Expansion Bus PCB

0003-5545

- 1) Remove the 2 screws [1], and detach the expansion bus PCB [2].

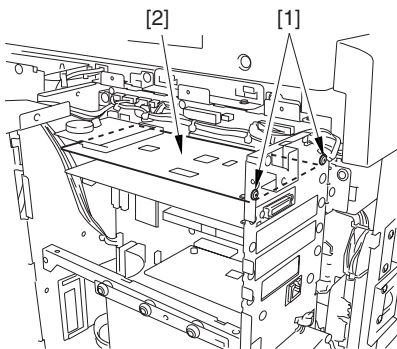


F-4-75

4.7.4.7 After Replacing the

Expansion PCB

0003-5557

- Mount the SRAM PCB [1] removed from the existing PCB to the newly mounted expansion bus PCB [2].

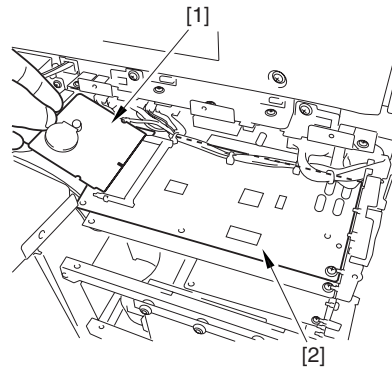

F-4-76


4.7.5 SRAM PCB

4.7.5.1 Removing the Rear

Cover (upper)


0003-8313

- 1) Free the cable [2] from the 2 cable clamps [1].
- 2) Remove the 2 screws [3].

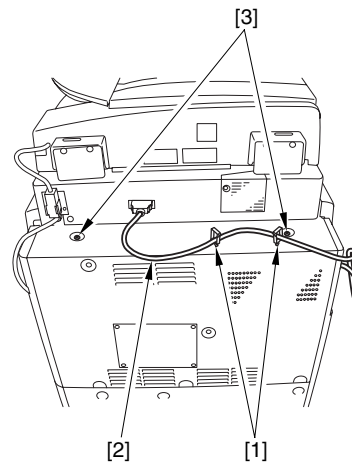

F-4-77


- 3) Remove the 5 screws [1], and detach the rear cover (upper) [2].

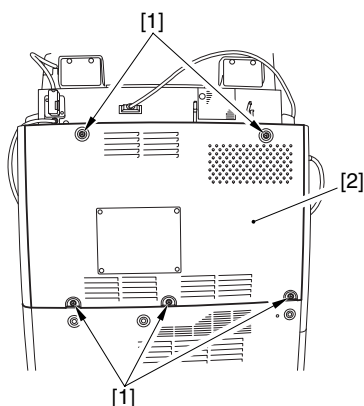


F-4-78

4.7.5.2 Removing the Controller Box Cover 0003-5537

- 1) Remove the 2 screws [1], and detach the controller box cover [2].

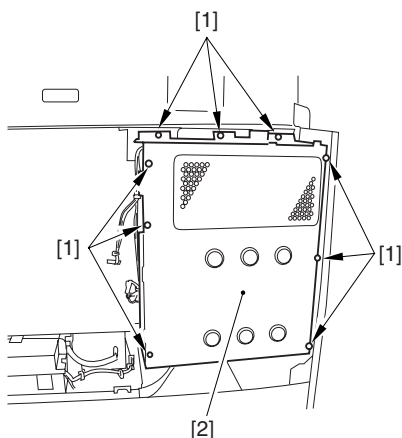


F-4-79

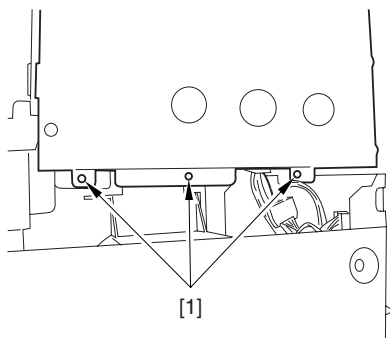

F-4-80

4.7.5.3 Removing the SRAM Board 0003-5538

- 1) Release the 2 locks [1], and detach the SRAM board [2].

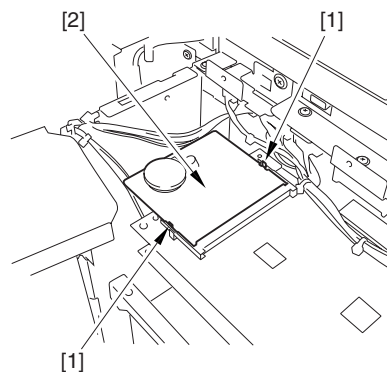

F-4-81

4.7.5.4 After Replacing the SRAM Board 0003-5543



-Inform the user that replacing the SRAM board will cause all image data in Box to be lost. Be sure to obtain the user's consent before starting the work.

-Be sure that the SRAM board you are using is a new one.

The machine will be likely to malfunction if you use a RAM that has been used in a different printer unit.

- 1) Replace the SRAM board, and turn on the main power. (The machine will execute automatic initialization.)
- 2) See that the machine indicates the message "Turn On the Power Switch on the Right Side" on its control panel. Turn off and then on the power.
- 3) Initialize the RAM.

COPIER>FUNCTION>CLEAR>MN-CON


Make the foregoing selections, and press the OK key.

4.7.6 UFR Board

4.7.6.1 Removing the Rear


Cover (upper) 0003-8314

- 1) Free the cable [2] from the 2 cable clamps [1].
- 2) Remove the 2 screws [3].

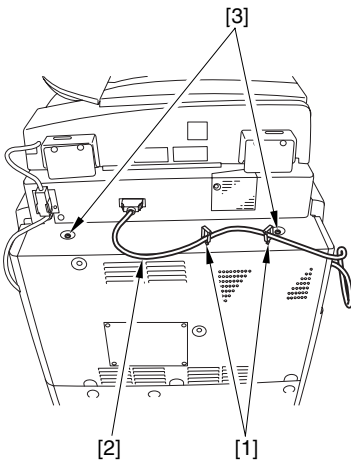

F-4-82

- 3) Remove the 5 screws [1], and detach the rear cover (upper) [2].

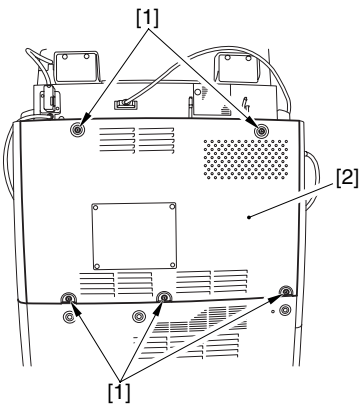


F-4-83

4.7.6.2 Removing the Delivery

Cover 0003-8284

- 1) Remove the 3 screws [1], and detach the delivery cover [2].

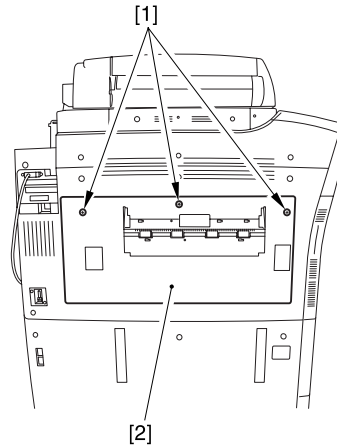


F-4-84

4.7.6.3 Removing the Left

Cover (middle) 0003-8293

- 1) Disconnect the connector [1].
- 2) Remove the 5 screws [2], and detach the left cover (middle) [3].

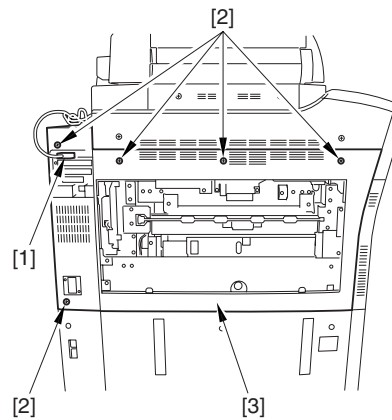


F-4-85


4.7.6.4 Removing the Controller Box Cover

0003-5554

- 1) Remove the 2 screws [1], and detach the controller box cover [2].

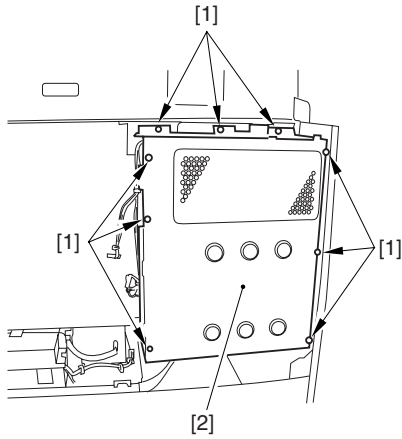

F-4-86

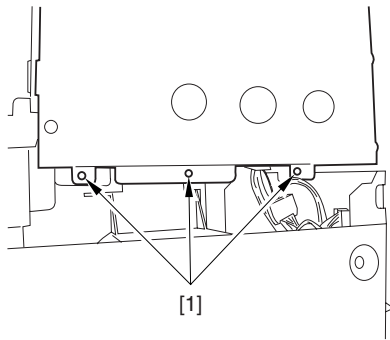


F-4-87

4.7.6.5 Removing the UFR Board

0003-5555

- 1) Remove the 2 screws [1], and detach the UFR board [2].

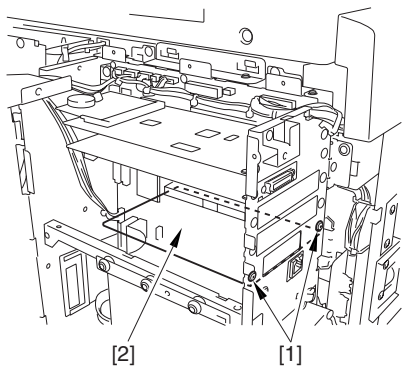


F-4-88

4.7.7 Ethernet Board

4.7.7.1 Removing the Rear Cover (upper)


0003-8315

- 1) Free the cable [2] from the 2 cable clamps [1].
- 2) Remove the 2 screws [3].

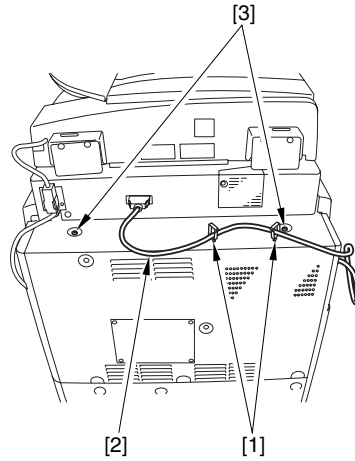

F-4-89

- 3) Remove the 6 screws [1], and detach the rear cover (upper) [2].

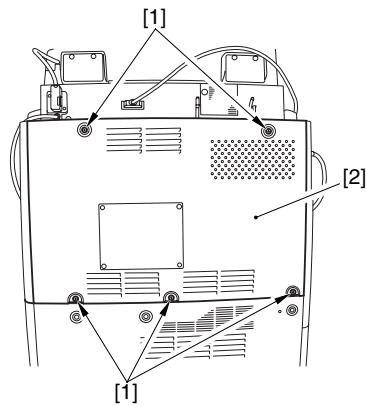


F-4-90

4.7.7.2 Removing the Delivery


Cover

0003-8285

- 1) Remove the 3 screws [1], and detach the delivery cover [2].

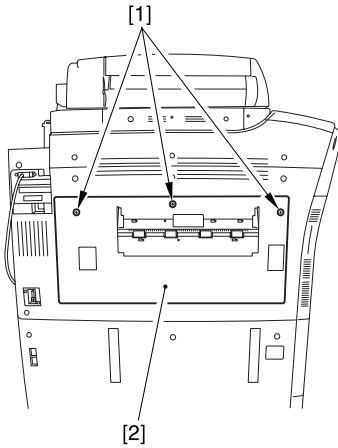

F-4-91

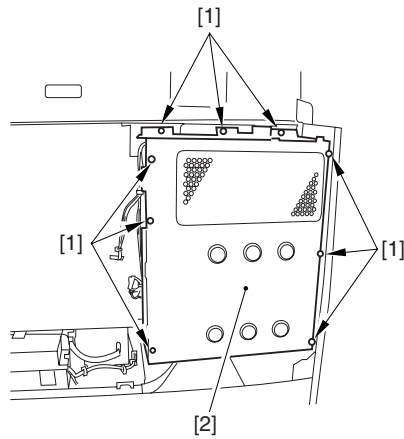


F-4-93

4.7.7.3 Removing the Left


Cover (middle)

0003-8294

- 1) Disconnect the connector [1].
- 2) Remove the 5 screws [2], and detach the left cover (middle) [3].

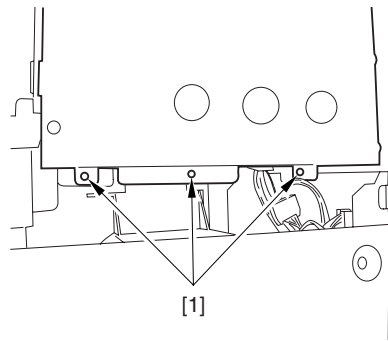

F-4-94

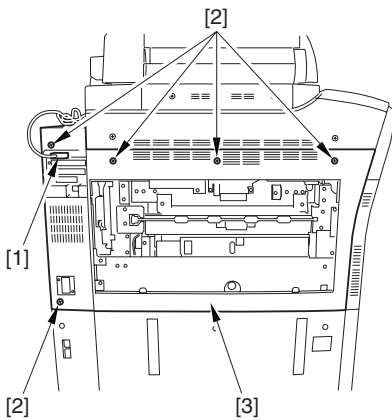

F-4-92

4.7.7.5 Removing the Ethernet

Board

0003-5550


- 1) Remove the 2 screws [1], and detach the Ethernet board [2].

4.7.7.4 Removing the

Controller Box Cover

0003-5549

- 1) Remove the 2 screws [1], and detach the controller box cover [2].

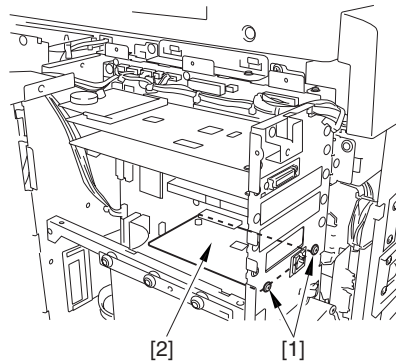

F-4-95


4.7.8 HDD

4.7.8.1 Removing the Rear

Cover (upper)


0003-8317

- 1) Free the cable [2] from the 2 cable clamps [1].
- 2) Remove the 2 screws [3].

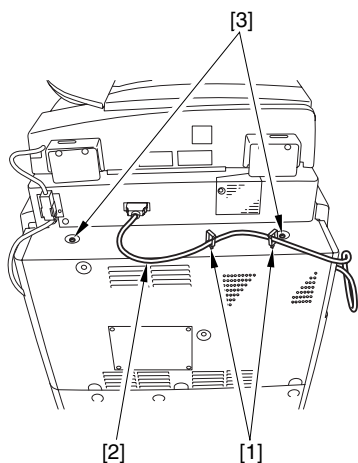

F-4-96

- 3) Remove the 5 screws [1], and detach the rear cover (upper) [2].

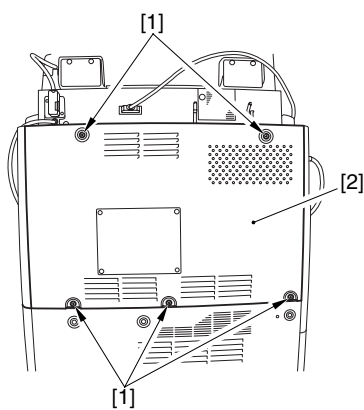


F-4-97


4.7.8.2 Removing the Controller Box Cover

0003-5852

- 1) Remove the 2 screws [1], and detach the controller box cover [2].

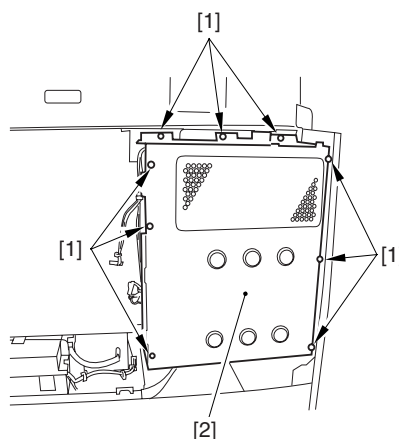

F-4-98

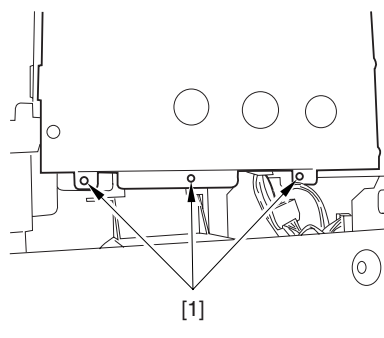


F-4-99

4.7.8.3 Removing the HDD


0003-5853

- 1) Disconnect the 2 connectors [1], and remove heater 6 screws [2]; then, detach the HDD box [3].

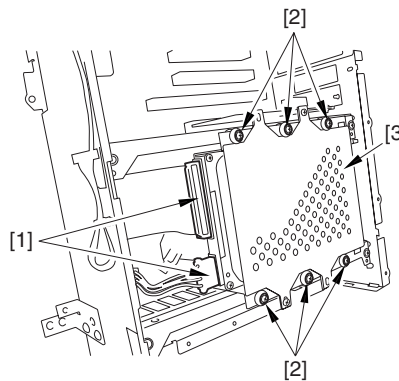


F-4-100

- 2) Remove the 6 screws [1], and detach the HD cover [2].

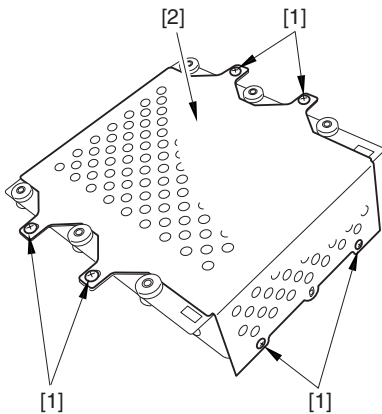

F-4-101

- 3) Remove the 4 screws [1], and detach the HDD [2].

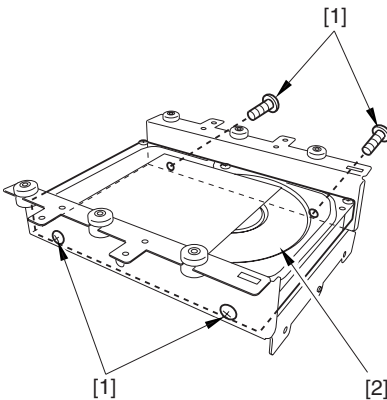

F-4-102

4.7.8.4 After Replacing the HDD

[0003-5556](tel:0003-5556)

A. If NetSpot Accountant (NSA) Is Not Used

- 1) Format the HDD.

Start up the machine in safe mode (i.e., turn on the main power while holding down the 2 and 8 keys). Using the SST's HD formatting function, execute formatting of all partitions. (For details, see the instructions on how to upgrade the machine.)

- 2) Download the system software.

Using the SST, download the system, language, and RUI files.

It may take about 5 min for the machine to start up

after a download session.

B. If a Card Reader and NetSpot Accountant (NSA) Are Used

A card ID used by the NSA exists on the HDD. If you have replaced the HDD, you must also download the card data used by the NSA once again; otherwise, you will not be able to make use of statistical management functions of the NSA.

You will first have to format the HDD and download the system software as for A above; thereafter, you need to perform additional steps:

- 1) Format the HDD.
- 2) Download the system software.
- 3) Make the following selections:
COPIER>FUNCTION>INSTALL>CARD
- 4) Enter a card number.
Enter the number of the first card of those to be used for group control, and press the OK key. (For instance, if the group will be using numbers between 1 through 1000, enter '1'.)
- 5) Turn off and then on the machine's main power.
- 6) Make a check.

Make the following selections in Additional Function: system control settings>group ID control>count control; then, check to make sure the following IDs are made ready: ID00000001 through ID00001000.

- 7) Set the appropriate addresses.

Make the following selections in Additional Function: system control settings>network settings>TCP/IP settings>IP address. Then, set the following addresses: IP address, gateway address, subnet mask.

- 8) Enter a number.

Make the following selections in Additional Function, and enter a number: system administrator information settings>system control group ID/system control ID No.

- 9) Turn off and then on the machine's main power.

⚠ Unless you set up the system control ID and the

system control ID No., you will not be able to register a card to the machine while using NSA.

10) Download the card ID.

Keep the machine in a standby state, and download the card ID through the NSA.

11) Check the count control.

Make the following selections in Additional Function to bring up the Count Control screen: system control settings>group ID control; then, check to see that only the ID data you have downloaded are indicated.

12) Check to see that the operation is normal.

Using a user card that has been registered to the NSA, make copies; then, check that the number of copies you have made are associated with the card you have used in the machine.


4.7.9 Controller Fan

4.7.9.1 Removing the Delivery

Cover

0003-8286

- 1) Remove the 3 screws [1], and detach the delivery cover [2].

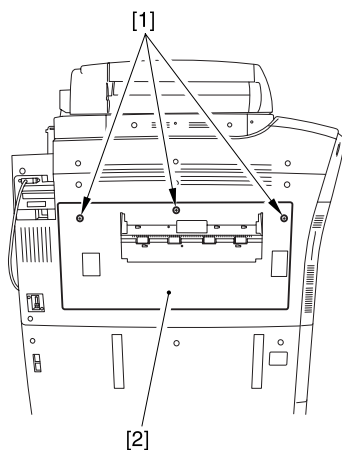


F-4-103

4.7.9.2 Removing the Left Cover (middle)

0003-8295

- 1) Disconnect the connector [1].
- 2) Remove the 5 screws [2], and detach the left cover (middle) [3].

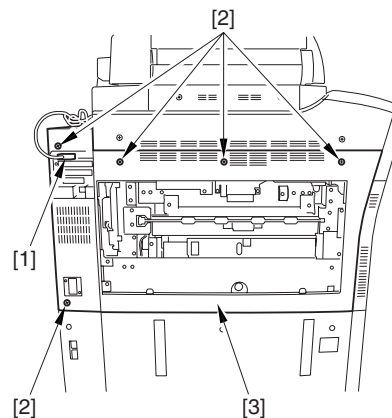


F-4-104

4.7.9.3 Removing the Controller Fan

0003-6143

- 1) Disconnect the connector [1], and open the cable guide [2].
- 2) Remove where 2 screws [3], and detach the controller fan [4].

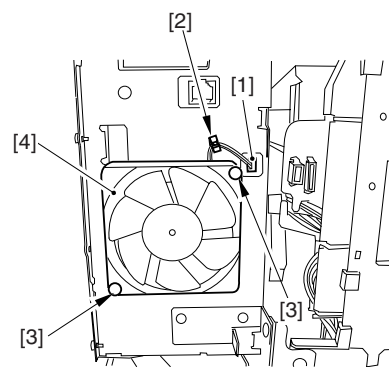

F-4-105

Chapter 5 Original Exposure System

Contents

5.1 Construction	5-1
5.1.1 Specifications, Control Mechanisms, and Functions	5-1
5.1.2 Major Components	5-2
5.1.3 Construction of the Control System	5-4
5.1.4 Reader Controller PCB	5-4
5.2 Basic Sequence	5-6
5.2.1 Basic Sequence of Operation at Power-On	5-6
5.2.2 Basic Sequence of Operation in Response to a Press on the Start Key	5-7
5.3 Various Control	5-9
5.3.1 Controlling the Scanner Drive System	5-9
5.3.1.1 Overview	5-9
5.3.1.2 Controlling the Scanner Motor	5-9
5.3.2 Enlargement/Reduction	5-11
5.3.2.1 Changing the Magnification in Main Scanning Direction	5-11
5.3.2.2 Changing the Magnification in Sub Scanning Direction	5-11
5.3.3 Controlling the Scanning Lamp	5-11
5.3.3.1 Overview	5-11
5.3.3.2 Scanning Lamp	5-12
5.3.3.3 Turning On and Off the Scanning Lamp	5-12
5.3.4 Detecting the Size of Originals	5-12
5.3.4.1 Identifying the Size of Originals	5-12
5.3.4.2 Points of Measurement Used for Original Size Identification	5-13
5.3.4.3 Overview of Operation	5-15
5.3.5 Dirt Sensor Control	5-16
5.3.5.1 Stream Reading Dust Detection Control	5-16
5.3.5.2 White Plate Dust Detection Control	5-18
5.3.6 Image Processing	5-20
5.3.6.1 Overview	5-20
5.3.6.2 CCD Drive	5-21
5.3.6.3 CCD Gain Correction, Offset Correction	5-21
5.3.6.4 CCD Output A/D Conversion	5-21
5.3.6.5 Outline of Shading Correction	5-21
5.3.6.6 Shading Adjustment	5-22
5.3.6.7 Shading Correction	5-22
5.4 Parts Replacement Procedure	5-23
5.4.1 Copyboard Glass	5-23
5.4.1.1 Removing Copyboard Glass	5-23
5.4.2 Exposure Lamp	5-23
5.4.2.1 Removing the Copyboard Glass	5-23
5.4.2.2 Removing the Right Cover (upper)	5-23
5.4.2.3 Removing the Reader Right Cover	5-24
5.4.2.4 Removing the Left Cover (upper)	5-24
5.4.2.5 Removing the Reader Left Cover	5-24
5.4.2.6 Removing the Reader Front Cover	5-24
5.4.2.7 Removing the Reader Rear Cover	5-25
5.4.2.8 Removing the CCD Unit Cover	5-26
5.4.2.9 Removing the Scanning Lamp	5-26
5.4.3 Reader Controller PCB	5-27
5.4.3.1 Removing the Copyboard Glass	5-27

5.4.3.2	Removing the CCD Unit Cover	5-27
5.4.3.3	Removing the Original Size Sensor Unit.....	5-28
5.4.3.4	Removing the Reader Controller PCB.....	5-28
5.4.3.5	After Replacing the Reader Controller	5-28
5.4.4	Interface PCB.....	5-30
5.4.4.1	Removing the Reader Rear Cover	5-30
5.4.4.2	Removing the Interface PCB	5-31
5.4.4.3	Points to Note When Mounting the Interface PCB.....	5-32
5.4.5	Inverter PCB	5-32
5.4.5.1	Removing the Copyboard Glass	5-32
5.4.5.2	Removing the CCD Unit Cover.....	5-32
5.4.5.3	Removing the Inverter PCB.....	5-33
5.4.5.4	After Replacing the Inverter PCB.....	5-33
5.4.6	CCD Unit	5-33
5.4.6.1	Removing the Copyboard Glass	5-33
5.4.6.2	Removing the CCD Unit Cover.....	5-33
5.4.6.3	Original Size Detection Unit.....	5-34
5.4.6.4	Removing the CCD Unit.....	5-34
5.4.6.5	After Replacing the CCD Unit.....	5-34
5.4.7	Scanner Motor	5-35
5.4.7.1	Removing the Reader Rear Cover	5-35
5.4.7.2	Removing the Scanner Motor.....	5-36
5.4.7.3	Mounting the Scanner Motor.....	5-37
5.4.8	ADF Open/Close Sensor.....	5-37
5.4.8.1	Removing the Reader Rear Cover	5-37
5.4.8.2	Removing the ADF Open/Closed Sensor	5-38
5.4.9	Scanner HP Sensor	5-39
5.4.9.1	Removing the Rear Cover.....	5-39
5.4.9.2	Removing the Mirror Base Home Position Sensor.....	5-40
5.4.10	Original Sensor	5-41
5.4.10.1	Removing the Copyboard Glass	5-41
5.4.10.2	Removing the CCD Unit Cover.....	5-41
5.4.10.3	Removing the Original Size Sensor Unit.....	5-41
5.4.10.4	Removing the Original Size Sensor.....	5-42
5.4.11	Cooling Fan	5-42
5.4.11.1	Removing the Reader Rear Cover	5-42
5.4.11.2	Removing the Cooling Fan.....	5-43
5.4.12	Scanner Drive Cable	5-43
5.4.12.1	Outline	5-43
5.4.12.2	Removing the Copyboard Glass	5-43
5.4.12.3	Removing the Right Cover (upper)	5-44
5.4.12.4	Removing the Right Cover	5-44
5.4.12.5	Removing the Left Cover (upper).....	5-44
5.4.12.6	Removing the Reader Left Cover	5-44
5.4.12.7	Removing the Reader Front Cover	5-45
5.4.12.8	Removing the ADF.....	5-45
5.4.12.9	Removing the Control Panel.....	5-46
5.4.12.10	Removing the Scanner Drive Cable.....	5-47
5.4.12.11	Fitting the Scanner Drive Cable.....	5-50
5.4.12.12	Adjusting the Position of the No. 1/No. 2 Mirror Base	5-51

5.1 Construction

5.1.1 Specifications, Control Mechanisms, and Functions

0002-5096

The following shows major specifications, control mechanisms, and functions of the machine's original exposure system:

T-5-1

Item	Description
Scanning lamp	xenon lamp (white)
scanning	book mode: by moving optical unit
	ADF mode: by moving original
Reading resolution	600 (main scanning) x 600 (sub scanning) dpi
Scanner position detection	scanner HP sensor (PS501)
scanner HP Lens	single-focus, fixed
Magnification	copyboard mode: 100%
	ADF mode: 100%
	main scanning direction: image processing by controller block
	sub scanning direction: image processing by controller block
Scanner drive control	No. 1/No. 2 mirror base: by pulse motor (M501)
Original scanning lamp	[1]activation control by inverter circuit
Activation control	[2]error detection control
Original size detection	[1]book mode
	sub scanning direction: by reflection type sensor
	main scanning direction: by CCD
	[2]w/ ADF in use
	main scanning direction: by slide guide in ADF
	sub scanning direction: by photo sensor in ADF


5.1.2 Major Components

0002-5118


The original exposure system consists of the following major components:

T-5-2


Item	Notation	Description
Scanning lamp	LA1	xenon lamp: 77.500 lx
Scanner motor	M501	2-phase pulse motor: pulse control
Reader Cooling fan	FM13	cools the reader assembly.
Scanner HP sensor	PS501	detects the home position of the scanner.
ADF open/closed sensor 1	PS502	detects the state (open/closed) of the ADF using the ADF open/closed sensor (5 deg).
ADF open/closed sensor 2	PS503	detects the size with the ADF at 25 deg or less.
Original size sensor (AB-configuration)	---	detects the size in sub scanning direction (AB-configuration)
Original size sensor (inch-configuration)	---	detects the size in sub scanning direction (inch-configuration).
Mirror	---	No. 1, No. 2, No. 3, mirror

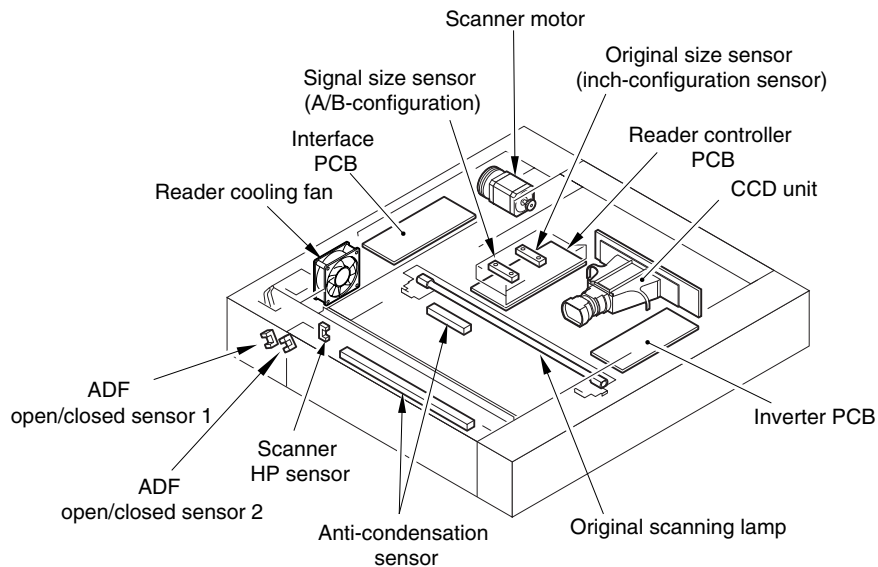

F-5-1

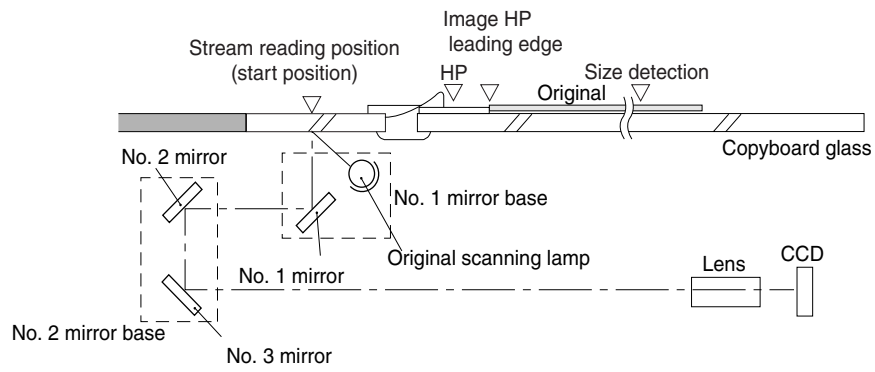

F-5-2

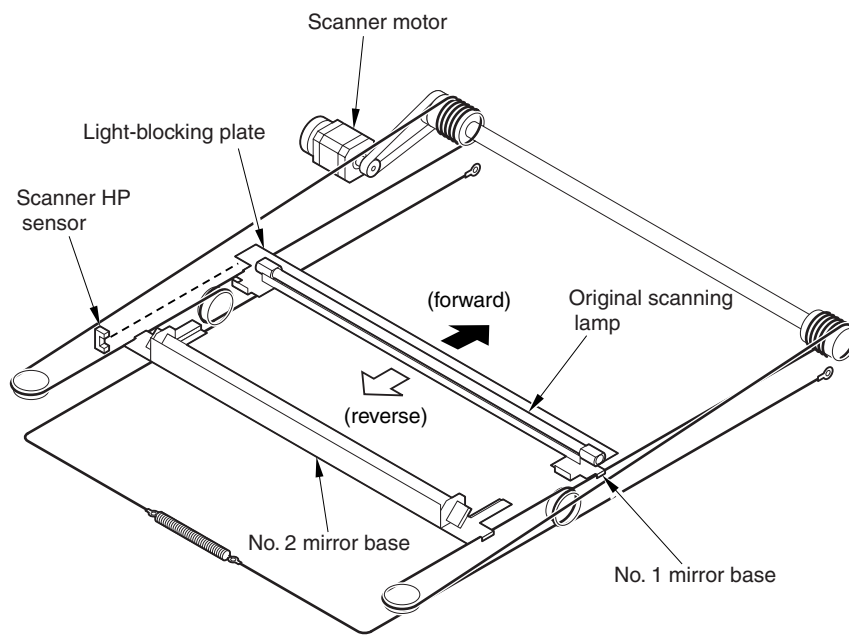


F-5-3

5.1.3 Construction of the Control System

0002-5128

The following shows the construction of the control system of the original exposure system:

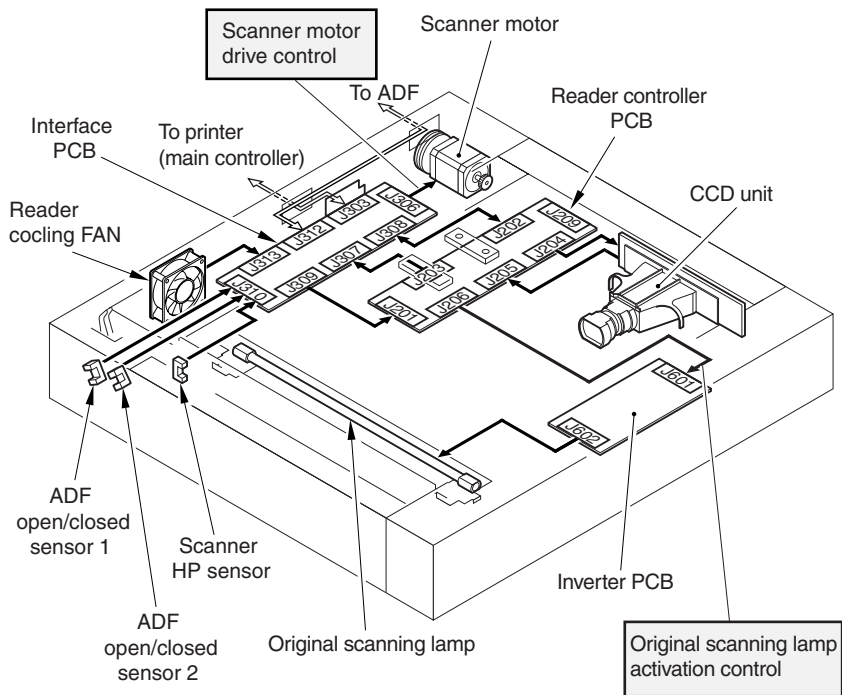


F-5-4

5.1.4 Reader Controller PCB

0002-5129

The following shows the functional construction of the reader controller PCB:

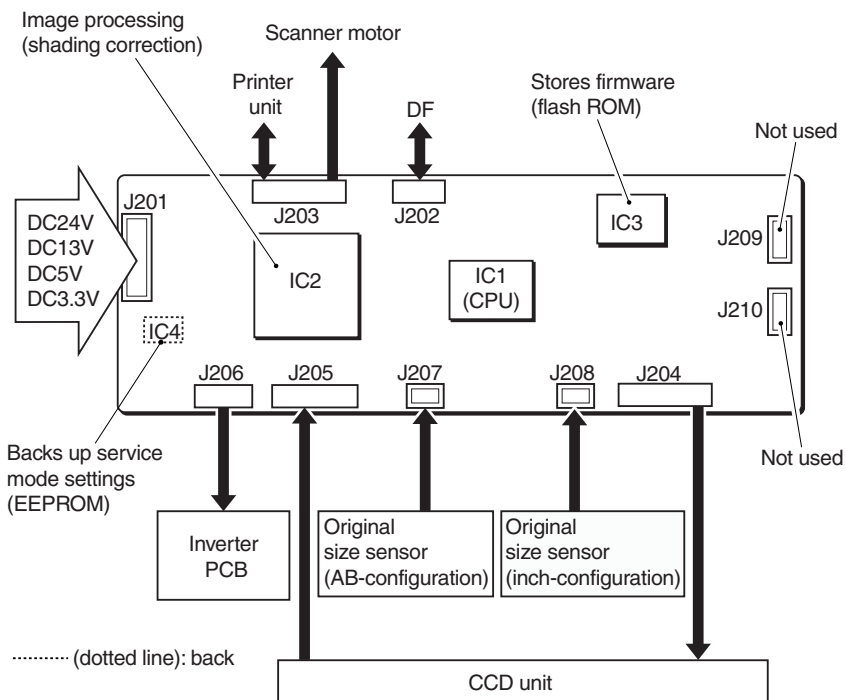

F-5-5

T-5-3

Jack No	Description
J201	used for the power from the machine (printer unit).
J202	used for the power from the machine (printer unit).
J203	used for communications with the printer unit (connection with the scanner motor). used for communications with the ADF (image signal input).
J204	used for connection with the CCD unit.
J205	used for communication with the CCD unit.
J206	used for connection with the inverter PCB.
J207	used for connection with the original size sensor (AB-configuration).
J208	used for connection with the original size sensor (inch-configuration).
J209	not used
J210	not used.

T-5-4


IC	Description
IC1	CPU (holds boot program)
IC2	ASCI (built-in RAM)
IC3	flash RAM (stores firmware)
IC4	EEPROM (backs up service mode settings)

5.2 Basic Sequence


5.2.1 Basic Sequence of Operation at Power-On

0002-5131

Basic Sequence of Operation at Power-On

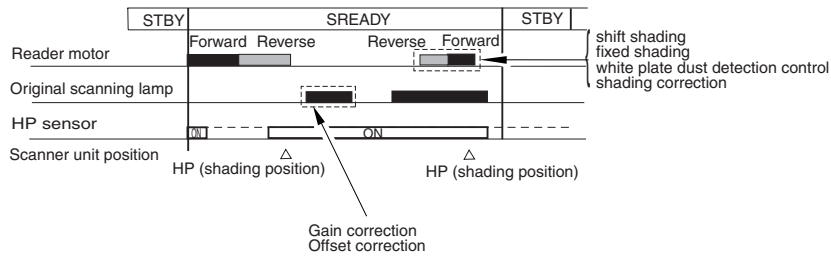

F-5-6

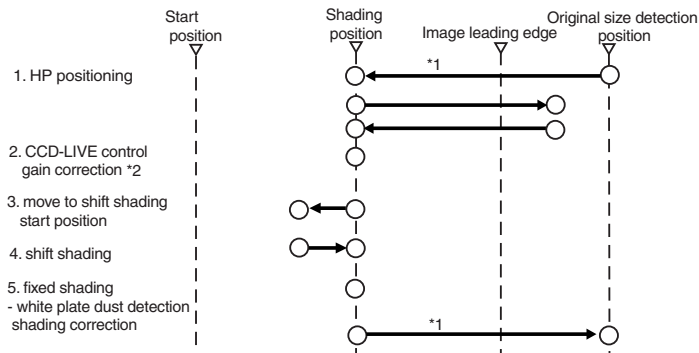

*1: shifts only if the copyboard (ADF) is open.


*2: controls by turning on/off the power of the CCD and the circuitry around it for power saving and for protection against overheating.

F-5-7

5.2.2 Basic Sequence of Operation in Response to a Press on the Start Key


0002-5136

Basic Sequence of Operation in Response to a Press on the Start Key (book mode; 1 original)

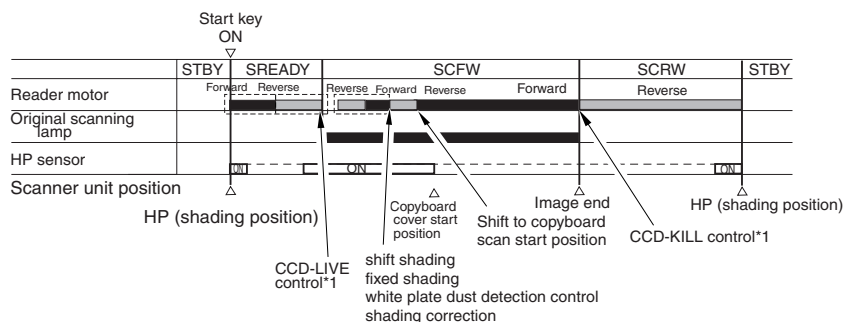

*1: controls by turning on/off the power of the CCD and the circuitry around it for power saving and for protection against overheating.

F-5-8

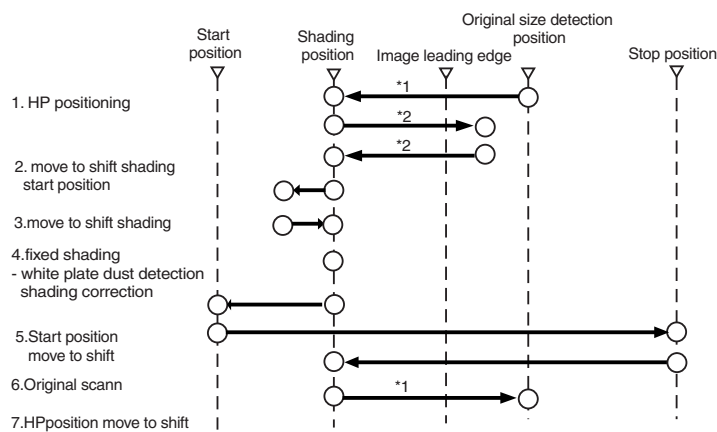


*1: shifts only if the copyboard cover (ADF) is open.

*2: executed only if 1 min or more (power off) has passed from the previous session.


F-5-9

Basic Sequence of Operation in Response to a Press on the Start Key (ADF mode; 1 original)

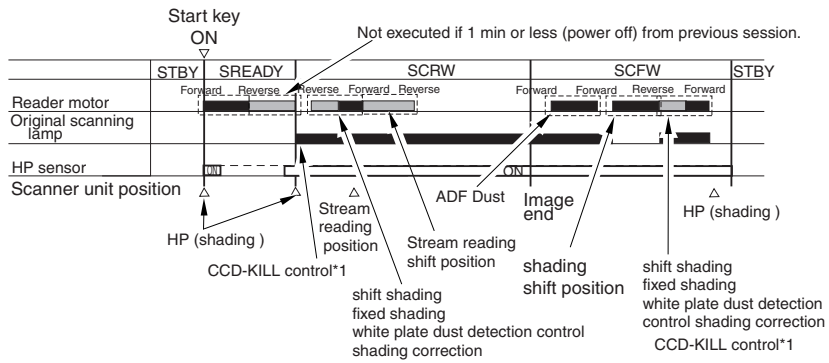

*1: controls by turning on/off the power of the CCD and the circuitry around it for power saving and for protection against overheating.

F-5-10

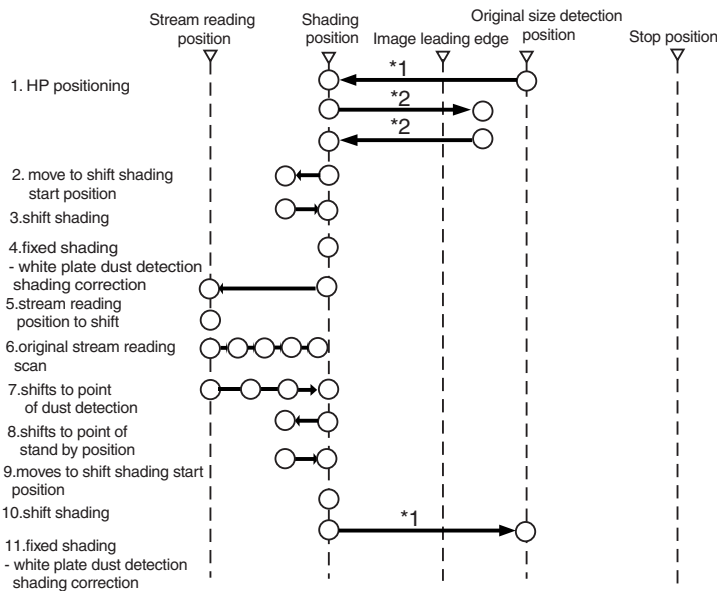

*1: shifts only if the copyboard cover (ADF) is open
 *2: executed only if 1 min (power ON) or more has passed from the previous session.

F-5-11


5.3 Various Control

5.3.1 Controlling the Scanner Drive System

5.3.1.1 Overview

0002-5137

The following shows the arrangement of the components associated with the drive of the scanner:

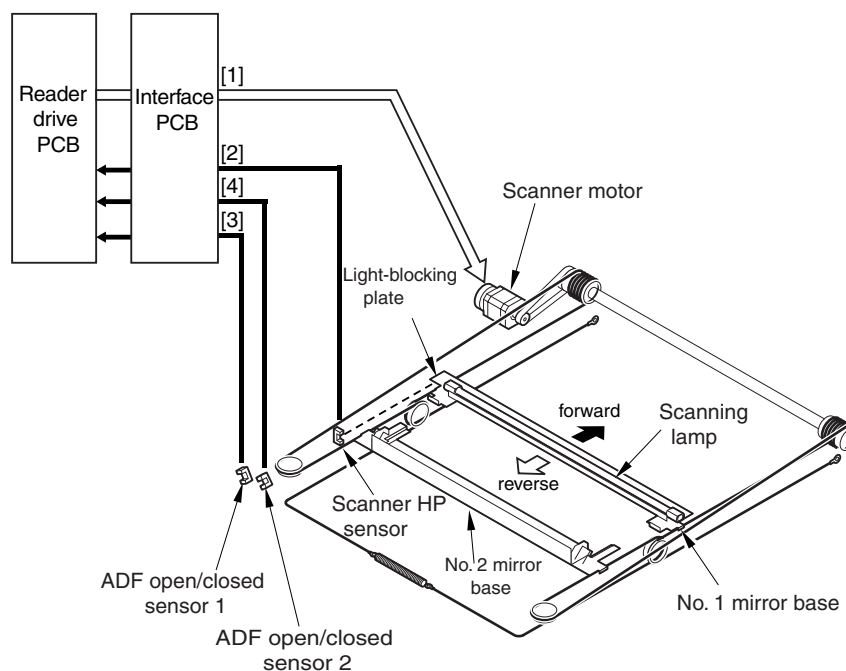

F-5-12

[1] Scanner Motor M501 Drive Signal

controls the activation/deactivation of the motor and the direction and speed of the motor.

[2] Scanner HP Sensor PS501 Detection Signal

used in reference to the detection of the No. 1 mirror base at its home position.

[3] ADF Open/Closed Sensor 1 PS502 Detection Signal

used in reference to the detection of the state (open/closed) of the ADF.

[4] ADF Open/Closed Sensor 2 PS503 Detection Signal


used in reference to the detection of the state (open/closed) of the ADF.

5.3.1.2 Controlling the Scanner Motor

0002-5138

The following shows the construction of the mechanisms used to control the scanner motor.

The motor driver on the interface PCB controls the rotation (activation/deactivation) of the scanner motor and its direction and speed of rotation according to the signals from the CPU.

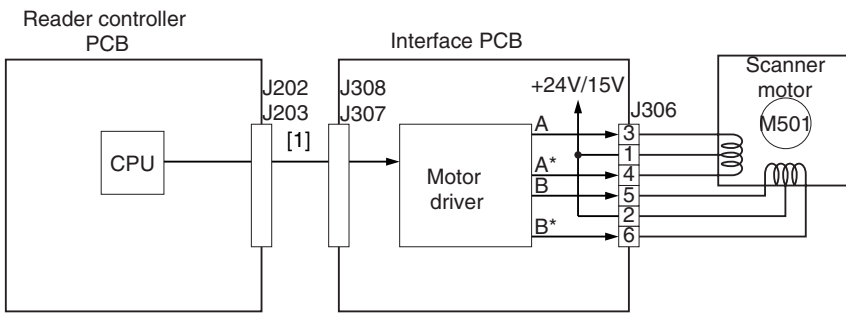

1 Scanner motor control signal


F-5-13

a. Moving the Scanner in Reverse After an Image Scan

After an image scan, the No. 1 mirror base is moved in reverse to shading position at 234 mm/sec regardless of the selected color mode.

b. Moving the Scanner Forward for an Image Scan

When making an image scan, the No. 1 mirror base unit is moved by controlling the motor as follows:

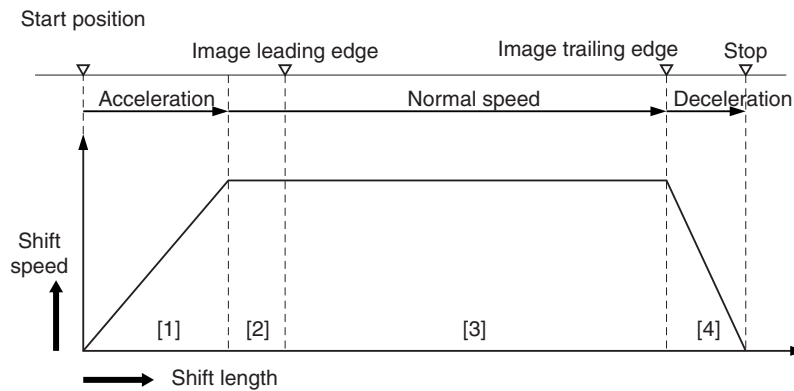

1. Acceleration Zone: accelerates to suit the selected mode
2. Approach Zone: moves for speed stabilization.
3. Image Read Zone: reads the image at a specific speed.
(if black-and-white/SEND mode, twice as fast as in full-color mode)
4. Deceleration Zone: past the image trailing edge, immediately decelerates and stops.

F-5-14

The machine uses the following scanning speeds to suit different modes;

T-5-5

Function	Mode	Scanning speed
Copier	black-and-white	234 mm/sec
	full-color	234 mm/sec
SEND	black-and-white	468 mm/sec
	full-color	234 mm/sec

5.3.2 Enlargement/Reduction

5.3.2.1 Changing the Magnification in Main Scanning Direction

0002-5139

For main scanning direction in both copyboard and ADF modes, the image is read at 100%, and the magnification is varied by the main controller block.

5.3.2.2 Changing the Magnification in Sub Scanning Direction

0002-5140

For sub scanning direction in both copyboard and ADF modes, the image is read at 100%, and the magnification is changed by the main controller block.

In SEND mode, the reading size is switched between 100% and 50% depending on the selected resolution.

5.3.3 Controlling the Scanning Lamp

5.3.3.1 Overview

0002-5141

The scanning lamp is controlled for the following, with associated control mechanisms operating as follows:

1)Turning On and Off the Scanning Lamp

The scanning lamp is turned on or off by the drive signal (XE-ON) generated by the CPU of the reader controller PCB. When the signal is generated, the inverter PCB generates high-frequency high voltage using the activation control circuit from the drive voltage (+24V) supplied by the reader controller PCB, thus turning on the scanning lamp.


2)Detection Error Activation

The machine detects a fault in the intensity of the lamp as an activation error caused by a fault in the intensity of the lamp at time of initial activation (shading correction).

MEMO:

E225


- the reader controller PCB is faulty
- the inverter PCB is faulty
- the scanning lamp (xenon tube) is faulty
- CCD is faulty
- flexible cable has poor contact

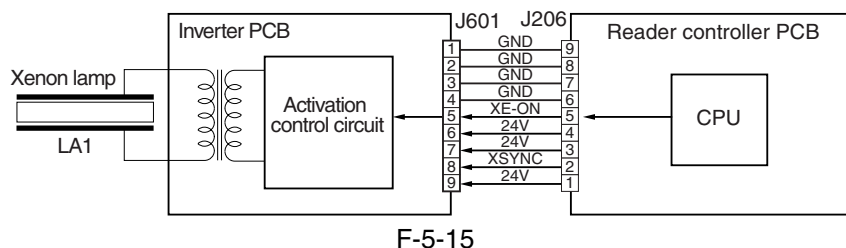

5.3.3.2 Scanning Lamp

0004-1095

The machine's scanning lamp is a xenon lamp, which uses xenon gas sealed inside. On the outside of the glass tube, 2 electrodes are arranged in parallel with the tube; the inside of the tube, on the other hand, is coated with fluorescent material. When a high-frequency high voltage is applied to the electrodes, the gas inside the tube starts to discharge, causing the fluorescent material to emit light.

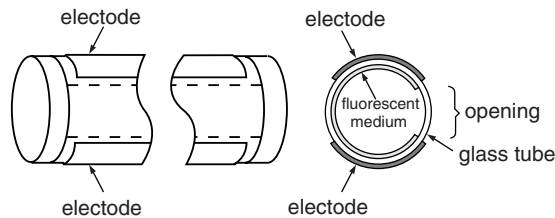

F-5-16

5.3.3.3 Turning On and Off the Scanning Lamp

0004-1096

The scanning lamp is turned on and off by the drive signal (LAMP_ON) generated by the CPU of the reader control PCB. When the signal is generated, the inverter PCB generates high-frequency high voltage in the activation control circuit using the drive voltage (+24 V) supplied by the reader controller PCB to turn on the xenon lamp.

5.3.4 Detecting the Size of Originals

5.3.4.1 Identifying the Size of Originals

0002-5146

The machine identifies the size of an original based on combinations of measurements taken of the light reflected by specific points (using a reflection type sensor and CCD). In consideration of possible displacement of the original when the ADF is closed, the machine uses a 2-point CCD check.

Main Scanning Direction: by CCD (AB-configuration; 8-point measurement; inch-configuration, 6-point measurement)

Sub Scanning Direction: reflection type photo sensor (AB-configuration: 1-point measurement; inch-configuration: 1-point measurement)

Specifically, the following takes place:

1.External Light Search (main scanning direction only)

While keeping the scanning lamp off, the machine measures the level of the CCD at specific points in main scanning direction.


2.Sensor Output Level Detection

The machine turns on the scanning lamp, and measures the sensor output at specific points. It then checks combinations of these measurement to find the size of the original.

5.3.4.2 Points of Measurement Used for Original Size Identification

0002-5150

For main scanning direction, the machine moves the No. 1 mirror base to the following points in relation to the location of the original to measure the levels of the CCD. For sub scanning direction, the machine checks the states of the sensors arranged as follows:

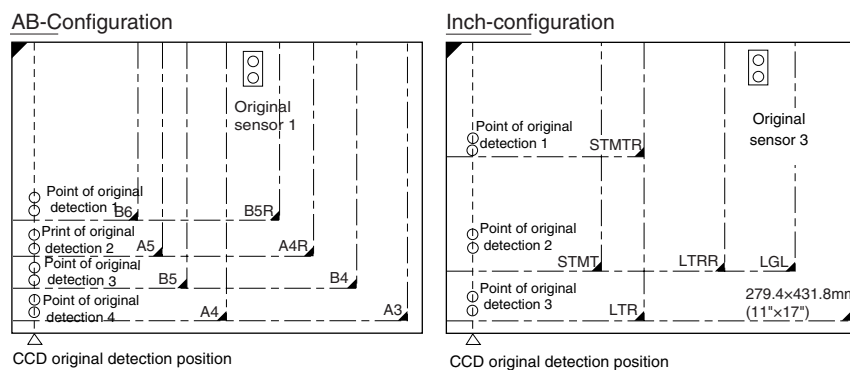


F-5-17

To raise the accuracy of original size identification (as when the original is displaced while the ADF is closed), the machine makes use of the following 2 types of mechanisms:

1. Presence/Absence of an Original at 2 Points (for each point of measurement)

For each point of measurement in main scanning direction, the machine checks the presence/absence of an original with reference to the CCD output at 2 points near the point of measurement.

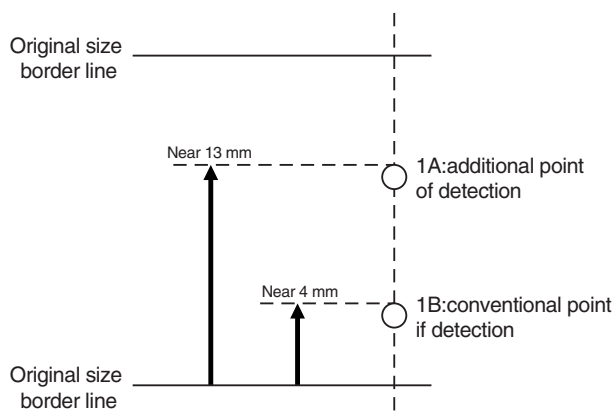

F-5-18

T-5-6

Result of measurement		Result of detection
A	B	
no	no	original absent
yes	no	original present
no	yes	original present
yes	yes	original present

Note:

1.Changes in the Signal (from ADF open to close)


change: no

other: yes

The machine uses OR combinations for identification.

2.Priority on the Front Sensors

When checking the measurements for main scanning direction, if the absence of an original is indicated at the rear while the presence of an original is indicated at the front, the machine will give priority to the indication at the front (i.e., presence of an original).

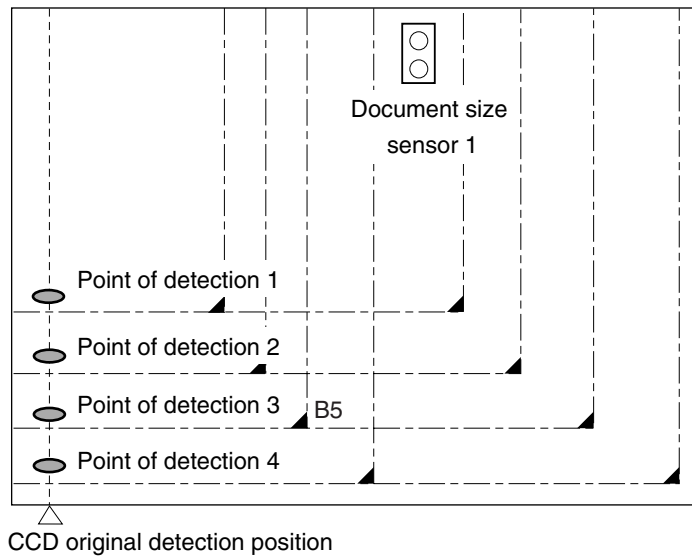

F-5-19

T-5-7

Point of detection	yes/no	Size identified
1	yes	yes
2	no	yes
3	yes	yes
4	no	no
Result		B5

Note:

Change in the Signal (ADF open to closed)

change: no

other: yes

5.3.4.3 Overview of Operation


0002-5153

1. Standby

No.1 mirror base: shading position

xenon lamp: off

original sensor: off

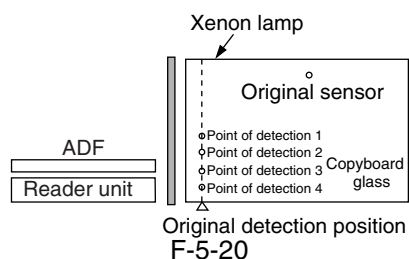


2. ADF Opened

No.1 mirror base: shifts to original detection position

xenon tube: off

original sensor: off

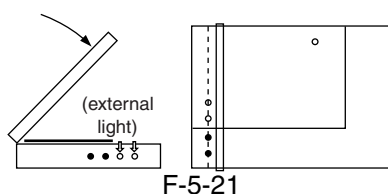



3. ADF Closed

-When the ADF is brought to 25 deg, the area covered by an original will be blocked from external light; therefore, the machine will assume the absence of an original at points that detect external light (external search).

The ADF open/closed sensor 2 identifies the condition as being "closed," and the machine starts original size identification.


At this position, B5, B4, A44, and A3 are excluded from the list of possible sizes.

-The machine executes an external light search: for main scanning direction, it turns on the xenon lamp to check its light (reflected) at 4 points using the CCD; for the sub scanning direction, the machine checks the state of the original sensor.

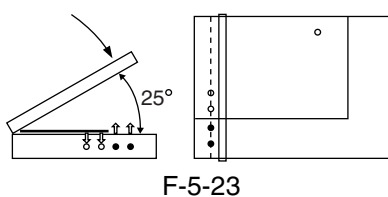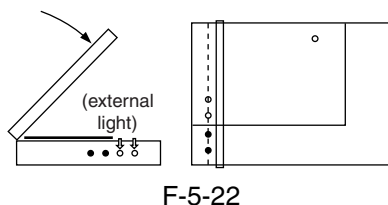

4. ADF Cover Fully Closed (5 deg or less).

The machine checks for a change in the output levels of the sensors for 2 sec after the ADF open/closed sensor has identified the ADF as being "closed"; the machine assumes the absence of an original at points without a change. The machine then identifies the size of the original based on the combination of changes at 5 points.

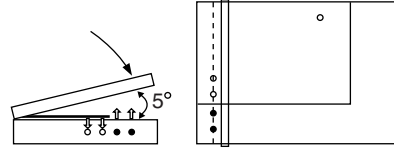


F-5-24

5. Standby (in wait for a press on the Start key)

No. 1 mirror base: at point of original detection

xenon lamp: off

original sensor: off

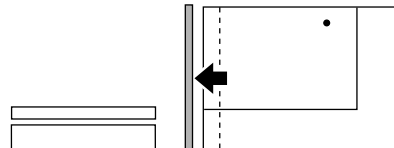

F-5-25

AB-configuration						Inch-configuration													
Original size	Point of CCD								Original sensor 1	Original size	Point of CCD								Original sensor 3
	1		2		3		4				1		2		3				
	A	B	A	B	A	B	A	B		A	B	A	B	A	B				
A3	○	○	○	○	○	○	○	○	○	11"x17"	○	○	○	○	○	○			
B4	○	○	○	○	○	○	●	○	○	LGL	○	○	○	○	●	○			
A4R	○	○	○	○	●	●	●	○	○	LTRR	○	○	○	○	●	●			
A4	○	○	○	○	○	○	○	○	○	LTR	○	○	○	○	○	○			
B5	○	○	○	○	○	○	○	○	○	STMTR	○	○	○	○	○	○			
B5R	○	○	○	○	○	○	○	○	○	STMT	○	○	○	○	○	○			
A5	○	○	○	○	○	○	○	○	○	absent	○	○	○	○	○	○			
B6	○	○	○	○	○	○	○	○	○		○	○	○	○	○	○			
absent	○	○	○	○	○	○	○	○	○		○	○	○	○	○	○			

○:unchanged ●:changed

F-5-26

5.3.5 Dirt Sensor Control

5.3.5.1 Stream Reading Dust Detection Control


0002-5159

The machine checks the stream reading glass and the ADF platen roller for the presence/absent of dust. It then changes the point of reading or executes image correction depending on the result of detection, thereby avoiding reproduction of dust particles in its output images. The machine executes the detection mechanism only when the ADF is used:

<Timing of Detection>

<1> at the end of a job

<2> between sheets (for every sheet read)

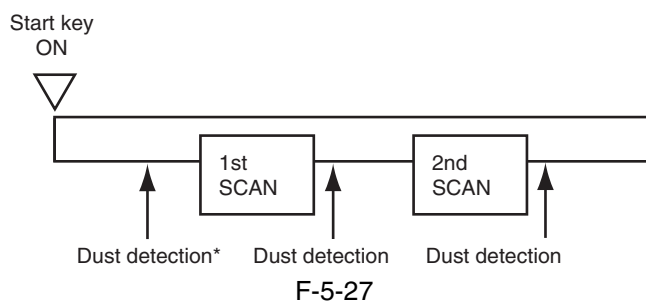


F-5-27

*Executed only if dust has been detected at all points, i.e., A, B, C, D, and E in the previous job. If so, the machine uses the point with least dust as the reading position and executes dust correction before starting reading operation.

<Particulars of Control>

-at the end of a job (makes a change to the point of stream reading dust reading position)

The machine checks the light reflected by the platen roller at the reading position to see if there is dust, moving to the next point if it finds dust (from A to B, C, D, and then to E; 5 points max.). It uses the first point that is free of dust as the reading point for the next job.

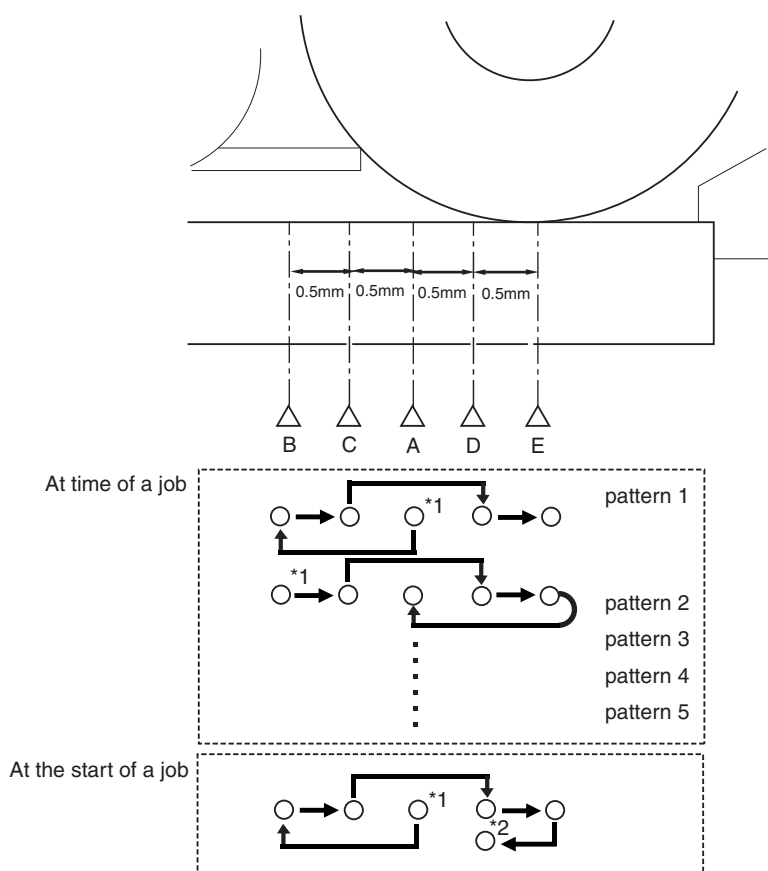

F-5-28

If it finds dust at all 5 points (A, B, C, D, E), then it will indicate an alarm when an original is placed in the ADF, prompting the user for cleaning. To reset, press [close].

When it starts a job, it will run the session once again and use a point with no dust or little dust as the reading position.

*1: reading position at the end of the previous job.

*2: point with no dust or little dust.

T-5-8

A	reading reference position (1.0 mm to the left from the center of the platen roller)
B	1.0 mm to the left from the reference position
C	0.5 mm to the left from the reference position
D	0.5 mm to the right from the reference position
E	1.0 mm to the right from the reference position (center of the platen roller)

-between sheets (dust correction)

The machine does not move the xenon lamp for dust detection.

If dust is detected between sheets, the machine executes dust correction by making correction on the pixels on both sides of the area where dust is found.

MEMO:

COPIER>OPTION>BODY>DFDST-L1 (level 1)

(adjustment of dust detection level between sheets)

COPIER>OPTION>BODY>DFDST-L2 (level 1)

(adjustment of dust detection at job end)

5.3.5.2 White Plate Dust Detection Control

0003-4293

1. Overview

The machine uses a fan to cool the inside of the reader unit to prevent overheating otherwise caused by the xenon lamp in stream reading mode. The fact, however, can cause stray dust inside the reader unit to collect on the white plate, showing up as lines in output images.

<Timing of Control>

1 Before a Job


-white plate dust detection

-white plate dust correction

2 After a Job

-white plate dust detection

-white plate dust correction

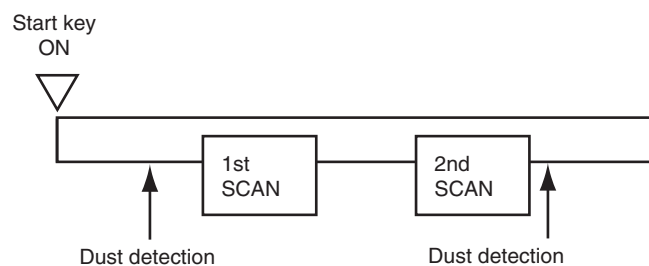

F-5-29

<Particulars of Control>


-White Plate Dust Detection

The machine compares the shading coefficient obtained from shift shading and the shading coefficient obtained from fixed shading to identify the presence/absence of dust and, if any, coordinates and width of the area.

-White Plate Dust Correction

If the machine detects dust as a result of white plate dust detection, it corrects the shading coefficient of the area using the shading coefficient of both sides so as to decrease the effects of the presence of dust. It executes shading correction using the coefficient it obtains after correction.

If the result of white plate dust detection indicates the presence of dust, the shading coefficient of the area in question will be corrected by the coefficients of its adjacent areas during shading correction with the aim of reducing the effects of the presence of dust. Thereafter, shading correction will be executed using the corrected coefficient.

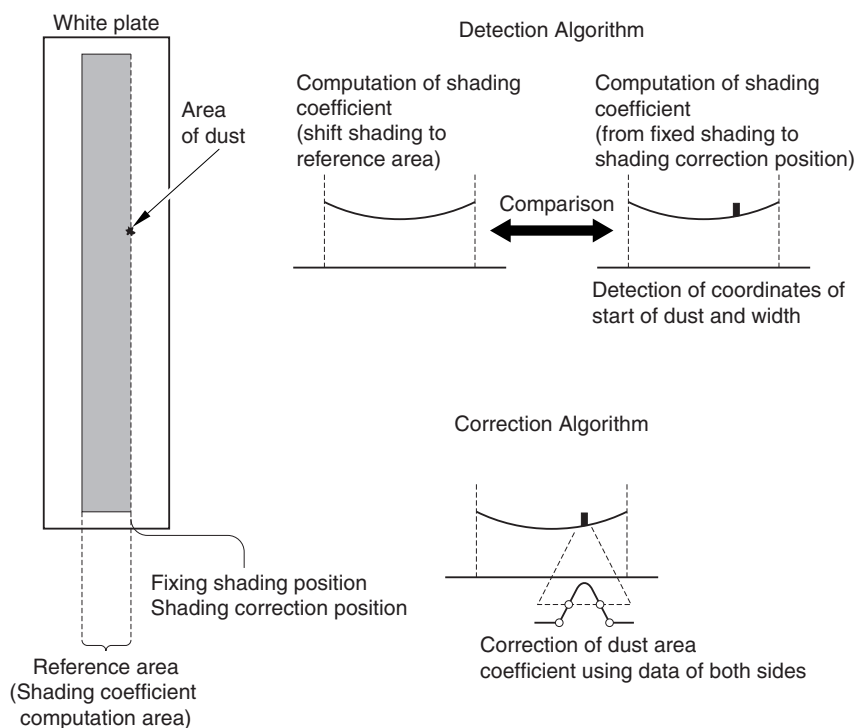

F-5-30


5.3.6 Image Processing

5.3.6.1 Overview

0002-5161

The following shows the major functions of the machine's image processing system:

1. CCD (image sensor)
 - number of lines: 3 (RGB, 1 line each)
 - number of pixels: 7350
 - size of pixel: 9.3 x 9.3 μ m
2. Shading Correction shading adjustment: in service mode
 - shading correction: executed for every copy

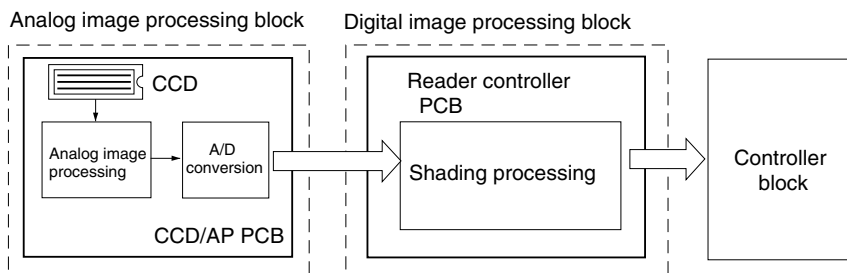

F-5-31


The following shows the functions of the PCBs associated with the image processing system:

CCD/AP PCB: CCD drive, analog image processing, A/D conversion

reader controller PCB: shading correction


The machine performs image processing for every RGB line using the reader controller PCB, and the major functions involved are as follows:

1. Analog Image processing
 - CCD drive
 - CCD output gain correction, offset correction
 - CCD output A/D conversion

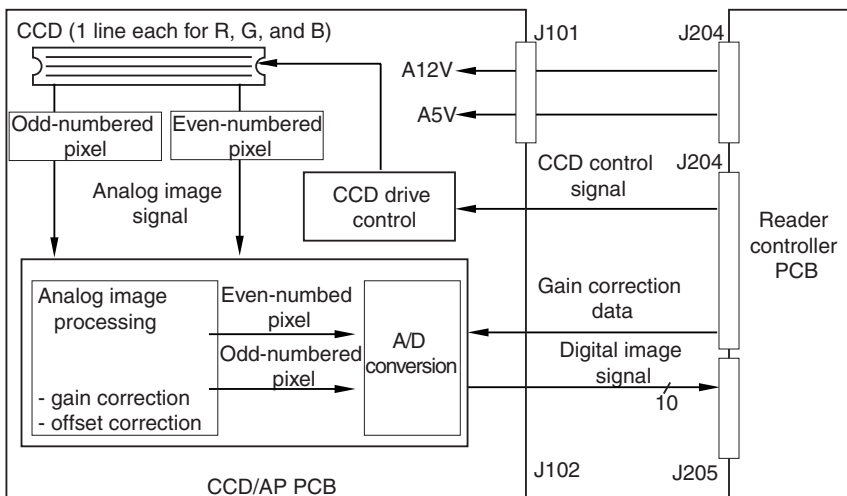

F-5-32


2. Digital Image Processing

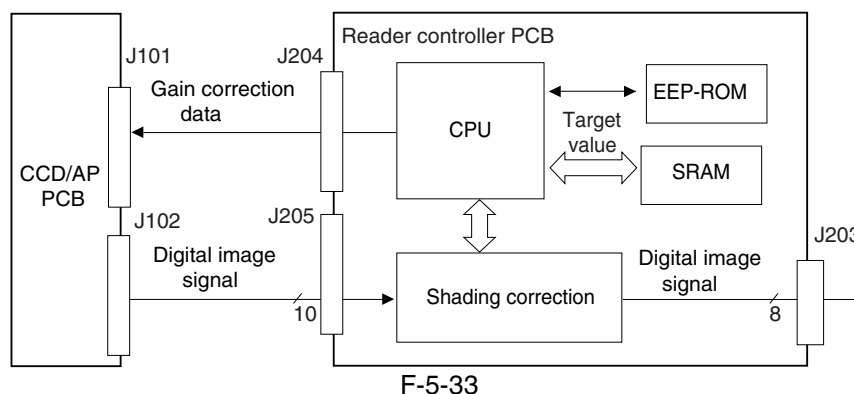

5.3.6.2 CCD Drive

0002-5168

The machine's CCD is a linear image sensor consisting of 3 lines (R, G, B, 1 line each), each line composed of 7350 photo cells. The signal that has been put through photo-conversion in the light-receiving segment is divided into 2 analog signals of 2 channels for output: even-numbered pixels (EVEN) and odd-numbered pixels (ODD).

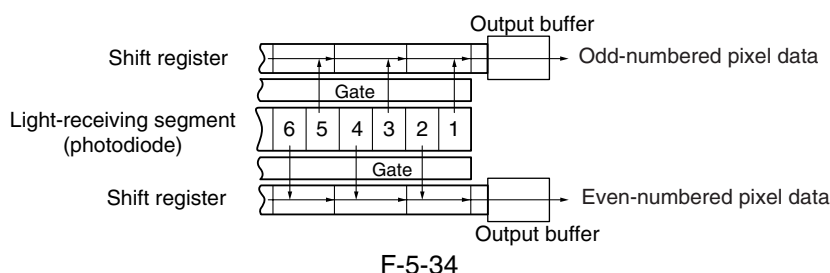

5.3.6.3 CCD Gain Correction, Offset Correction

0002-5170

The analog video signal from the CCD is processed so that the rate of amplification is even (gain correction); the output in the absence of incident light is also processed for a specific level (offset correction).

5.3.6.4 CCD Output A/D Conversion

0002-5171

The odd-numbered and even-numbered pixel analog video signals after the foregoing correction are then converted into 10-bit digital signals by the A/D converter according to their pixel voltage levels.

5.3.6.5 Outline of Shading Correction

0002-5172

The output of the CCD may not always be uniform because of the following reasons even when the density of the original in question is uniform:

1. variation in the sensitivity among individual pixels of the CCD.
2. difference in the level of transmission between the center and the edge of the lens.
3. difference in the intensity of light between the middle and the edges of the scanning lamp.
4. deterioration of the scanning lamp

The machine executes shading correction to even out the output of the CCD.

The machine executes either of the following 2 shading mechanisms: shading correction it carries out for every copy and shading adjustment for which the target value is set in service mode.

5.3.6.6 Shading Adjustment

0002-5186

The machine executes shading adjustment in response to a command made in service mode. The machine measures the density of blank white paper and that of the white plate to obtain density data; it then computes the data to produce the target value for use at time of shading correction.


5.3.6.7 Shading Correction

0002-5187

The machine executes shading correction each time it scans an original.

The machine directs the light from the scanning lamp against the standard white plate, and converts the reflected light into a digital signal by the analog image processing block on the CCD/AP PCB. The result (i.e., a digital signal representing the intensity of the reflected light) is sent to the shading correction circuit of the reader controller PCB as a shading coefficient. The shading correction circuit in turn compares the coefficient against the target value it holds, and offers the difference as the shading correction value.

The machine uses the shading correction value to correct the variation that may exist among the individual pixels of the CCD, thereby keeping the image density to a specific level at all times.

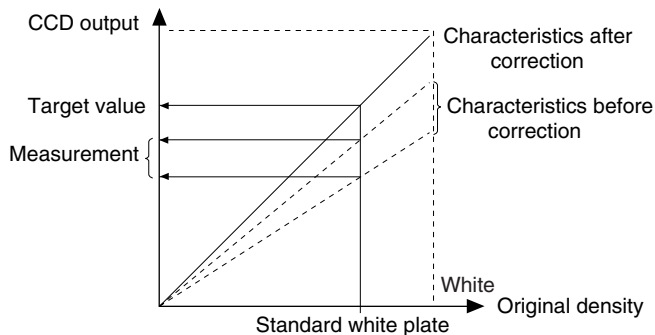

F-5-35

5.4 Parts Replacement Procedure


5.4.1 Copyboard Glass

5.4.1.1 Removing Copyboard

Glass

0003-3121

- 1) Open the ADF.
- 2) Remove the 2 screws [1], and detach the right glass retainer [2]; then, detach the copyboard glass [3].

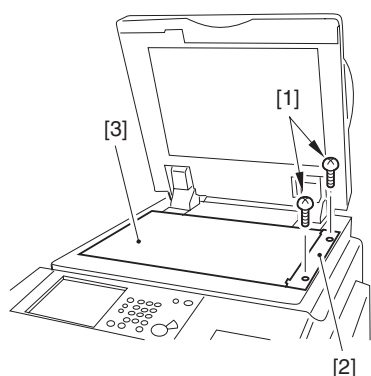

F-5-36

⚠ When detaching the copyboard glass, take care not to touch the white plate attached to its back. (Soiling can cause lines in the image). If soiled, clean it using lint-free paper moistened with alcohol.)


5.4.2 Exposure Lamp

5.4.2.1 Removing the

Copyboard Glass

0003-5445

- 1) Open the ADF.
- 2) Remove the 2 screws [1], and detach the right glass retainer [2]; then, detach the copyboard glass [3].

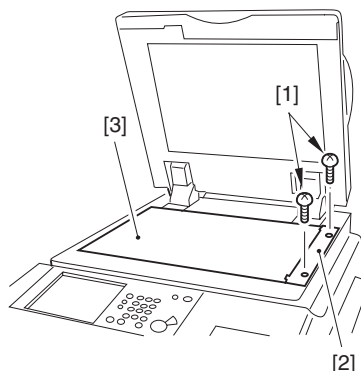

F-5-37


⚠ When detaching the copyboard glass, take care not to touch the white plate attached to its back. (Soiling can cause lines in the image). If soiled, clean it using lint-free paper moistened with alcohol.)

5.4.2.2 Removing the Right

Cover (upper)

0003-8246

- 1) Remove the 2 screws [1], and detach the right cover (upper) [2].

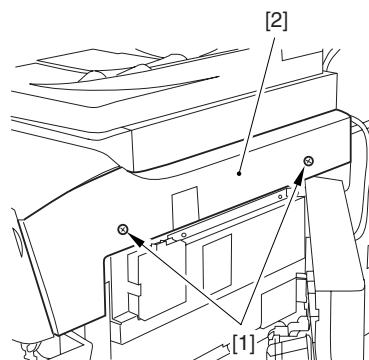


F-5-38

5.4.2.3 Removing the Reader

Right Cover

0003-8065

1) Remove the 2 screws [1], and detach the reader right cover [2].

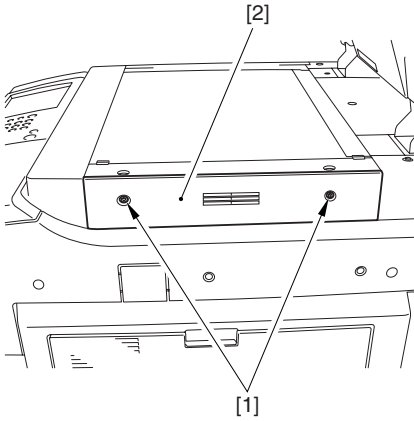


F-5-39

5.4.2.5 Removing the Reader

Left Cover

0003-8228

1) Remove the 2 screws [1], and detach the reader left cover [2].

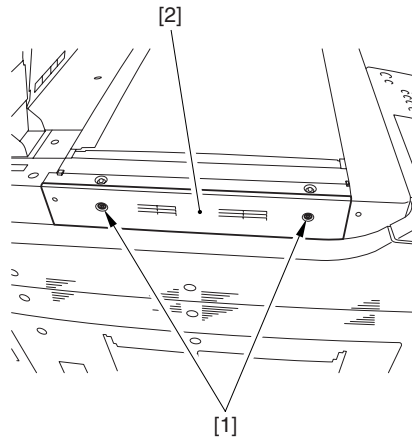


F-5-41

5.4.2.4 Removing the Left

Cover (upper)

0003-8274

1) Remove the 3 screws [1], and detach the left cover (upper) [2].

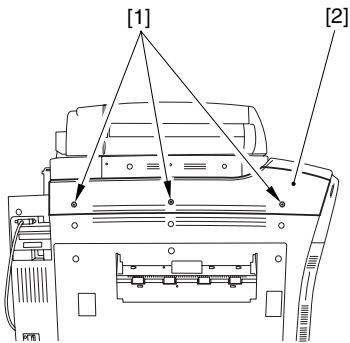


F-5-40

5.4.2.6 Removing the Reader


Front Cover

0003-8231

1) Remove the screw [2] (1 pc. each) from the left and right of the reader front cover [1].

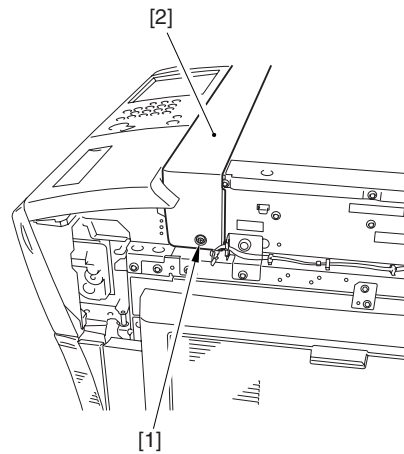


F-5-42

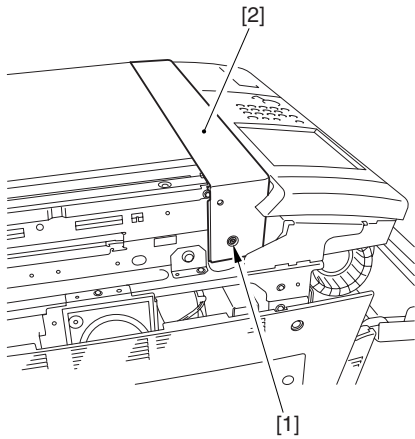

F-5-43

2) Detach the reader front cover [1] in upward direction [1].

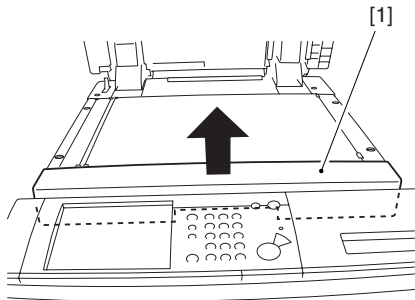


F-5-44

5.4.2.7 Removing the Reader Rear Cover


0003-8336

1) Disconnect the connector [1].

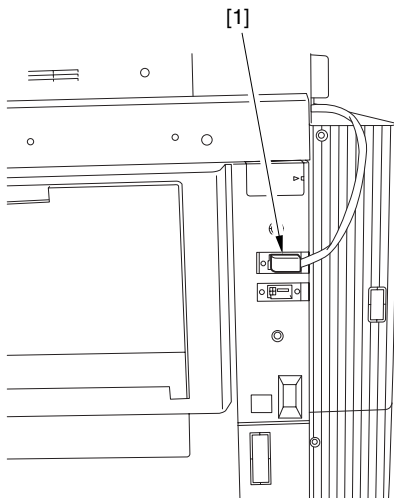


F-5-45

2) Disconnect the 2 connectors [1].
3) Remove the 2 screws [2].

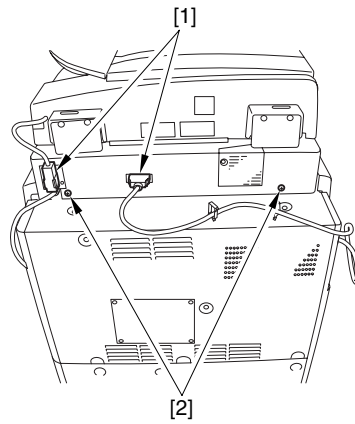


F-5-46

4) Bend up the edge of the rubber cover [1], and remove the screws (2 pc. each) [2]; then, detach the angle guide plate.

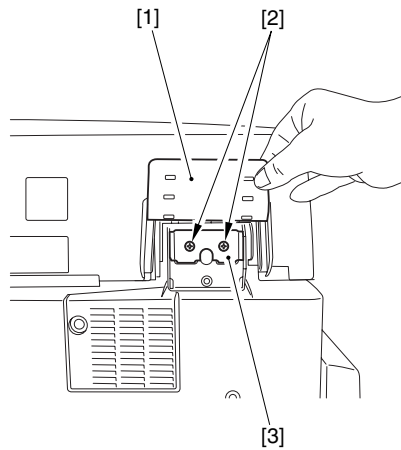


F-5-47

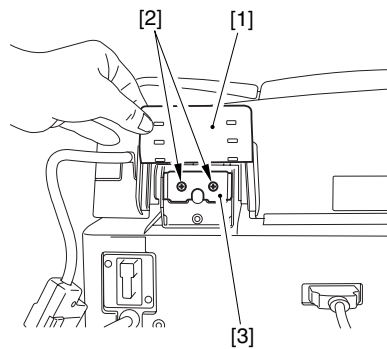

F-5-48

- 5) Open the ADF fully.
- 6) Remove the 3 screws [1], and slide the reader rear cover [2] toward the rear to detach.

⚠ Take care not to damage the ADF open/closed sensor arm [3].

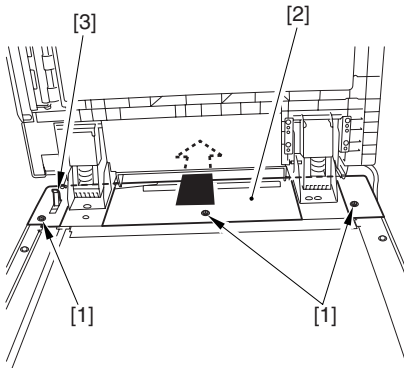


F-5-49

5.4.2.8 Removing the CCD


Unit Cover

0003-5455

- 1) Remove the 9 screws [1], and detach the CCD unit cover [2].

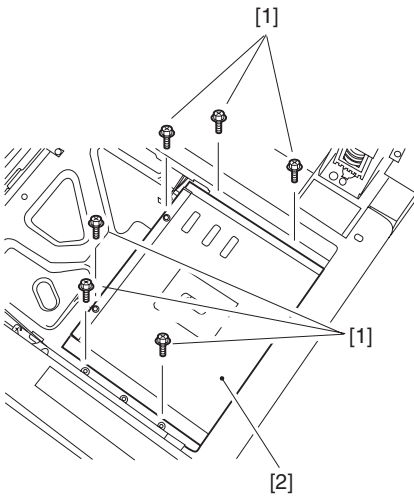

F-5-50

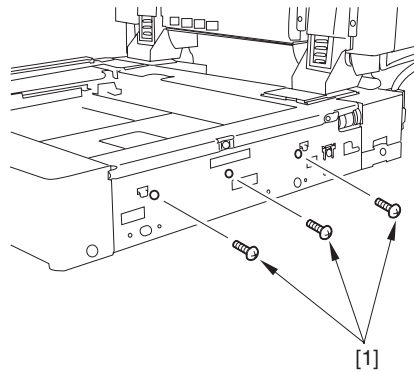


F-5-51

5.4.2.9 Removing the Scanning

Lamp

0003-3135


- 1) Disconnect the connector [1], and free the cable [2] from the cable guide [3].

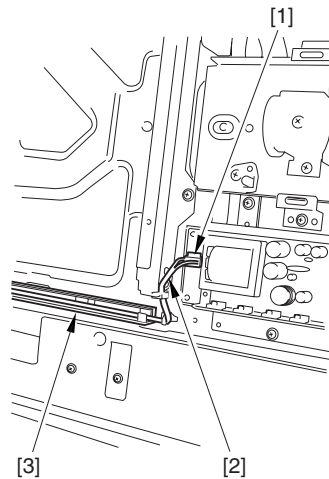

F-5-52


2) Slide the No. 1 mirror base [1] to the right to match it against the cut-off [2] of the frame.

⚠ When sliding the No. 1 mirror base, be sure to hold it by the cut-up tab [A] of the mirror stay.

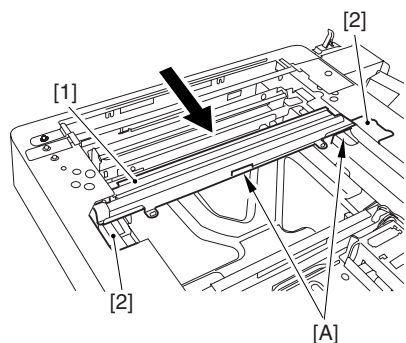

F-5-53

4) Remove the 2 screws [1], and detach the scanning lamp [2].

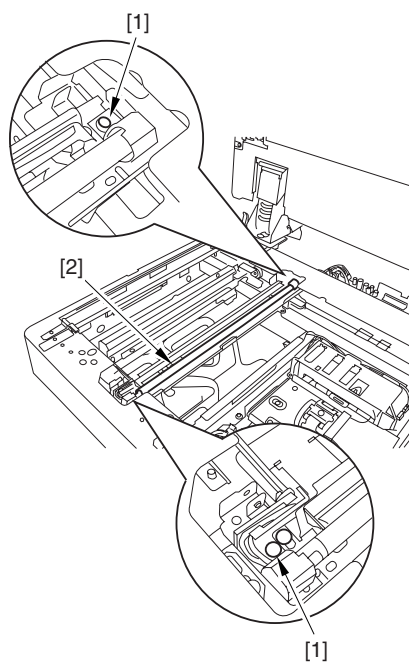


F-5-54

5.4.3 Reader Controller PCB

5.4.3.1 Removing the Copyboard Glass

0003-3123

- 1) Open the ADF.
- 2) Remove the 2 screws [1], and detach the right glass retainer [2]; then, detach the copyboard glass [3].

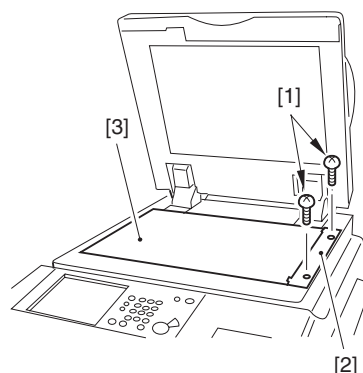

F-5-55


⚠ When detaching the copyboard glass, take care not to touch the white plate attached to its back. (Soiling can cause lines in the image). If soiled, clean it using lint-free paper moistened with alcohol.)

5.4.3.2 Removing the CCD


Unit Cover

0003-3145

- 1) Remove the 9 screws [1], and detach the CCD unit cover [2].

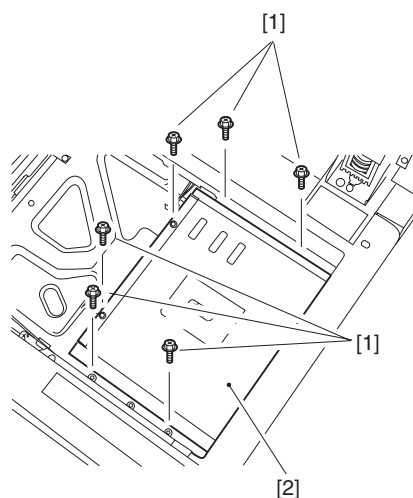

F-5-56

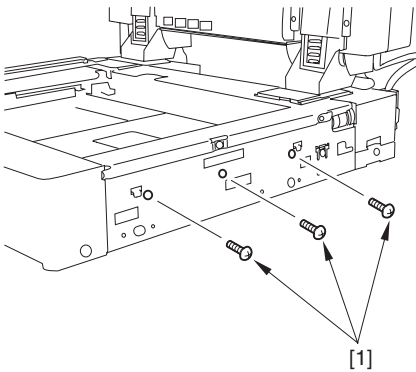


F-5-57

5.4.3.3 Removing the Original Size Sensor Unit


0003-5466

1) Remove the 3 screws [1], and slide the original size detection unit [2].

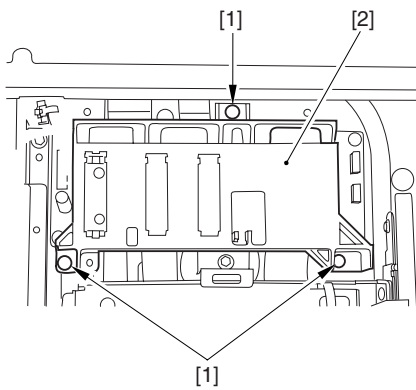

F-5-58

2) Disconnect the connector [1], and detach the original size sensor unit [2].

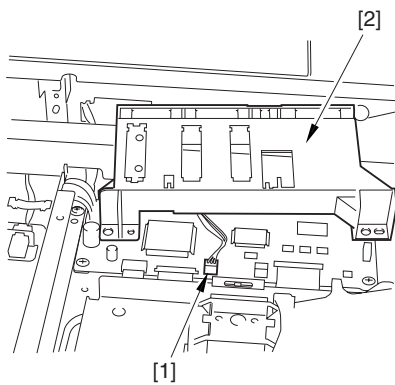


F-5-59

5.4.3.4 Removing the Reader

Controller PCB

0003-3122


1) Disconnect the 5 flat cables [1] and the connector [2] then, remove the 4 screws [3], and detach the reader controller PCB [4].

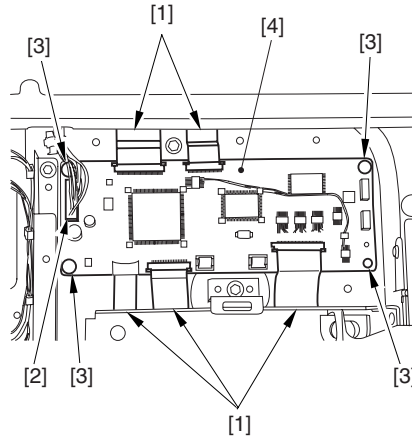

F-5-60

⚠ Disconnecting the Flat Cable

Slide the locking lever [1] in the direction of the arrow; then, disconnect the flat cable [2].

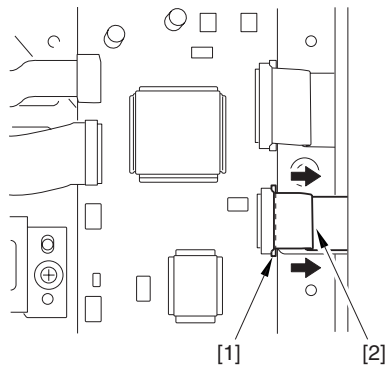

F-5-61

5.4.3.5 After Replacing the Reader Controller

0003-5467

⚠ Be sure to print out the settings using P-PRINT before replacing the reader controller.

<Initializing the RAM of the Reader Controller Without Replacing the PCB>

Using the SST, upload the backup data of the reader controller; after you have initialized the RAM, download the backup data, thereby eliminating the need for the following adjustment work.

1. Reader Unit-Related Adjustment


1) Using the SST, download the latest system software (R-CON).

2) Make the following selections in service mode, and press the OK key to initialize the RAM: COPIER>FUNCTION>CLER>R-CON. Then, turn off and then on the main power.

3) Enter the following settings in service mode:

a. standard white plate level data

COPIER>ADJUST>CCD-W-PLATE-X,Y,Z

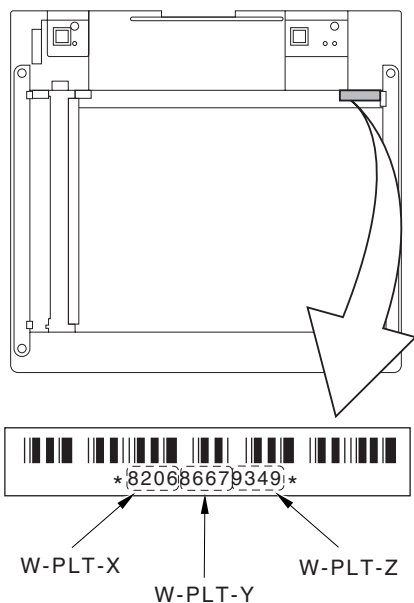

F-5-62

b. service mode label record (behind reader front cover)

b-1 image read start position adjustment (x direction; for fixed position reading)

COPIER>ADJUST>ADJ-XY>ADJ-X

b-2 image read start position adjustment (Y direction: for fixed reading)

COPIER>ADJUST>ADJ-XY>ADJ-Y

b-3 shading position adjustment (for fixed reading)

COPIER>ADJUST>ADJ-XY>ADJ-S

b-4 feeder mode main scanning position adjustment
COPIER>ADJUST>ADJ-XY>ADJ-Y-DF

b-5 ADF stream reading CCD read position adjustment

COPIER>ADJUST>ADJ-XY>STRD-POS

b-6 CCD unit RG/GB sub scanning direction color displacement correction

COPIER>ADJUST>CCD>CCDU-RG/GB

b-7 factory default CD unit RG/GB sub scanning color displacement correction

COPIER>ADJUST>CCD>FCCDU-RG/GB

b-8 auto gradation correction target value

COPIER>ADJUST>PASCAL>OFFSET-P-Y,M,C,K

2. ADF-Related Adjustment

▲ The machine retains ADF-related service data in the RAM of its reader controller, calling for adjustment of the ADF if you have initialized its RAM.

1) In service mode, enter the settings indicated on the P-PRINT printout you have previously obtained:

a. original stop position adjustment

FEEDER>ADJUST>DOCST

b. original feed speed (magnification) adjustment

FEEDER>ADJUST>LA-SPEED

2) Make the following adjustments using the following service mode items:

a. ADF sensor sensitivity adjustment

FEEDER>FUNCTION>SENS-IN

b. tray width adjustment

FEEDER>FUNCTION>TRY-A4

FEEDER>FUNCTION>TRY-A5R

FEEDER>FUNCTION>TRY-LTR


FEEDER>FUNCTION>TRY-LTRR

c. white level adjustment

COPIER>FUNCTION>CCD>DF-WLVL1

COPIER>FUNCTION>CCD>DF-WLVL2

When done, put the P-PRINT printout [1] in the service book case, disposing of the previous printout.

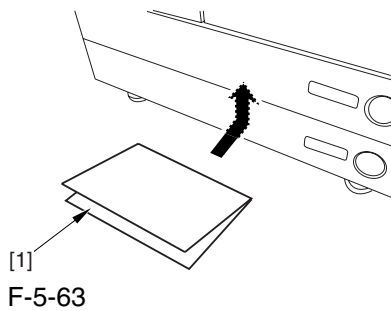

F-5-63


5.4.4 Interface PCB

5.4.4.1 Removing the Reader

Rear Cover

0003-8337


1) Disconnect the connector [1].

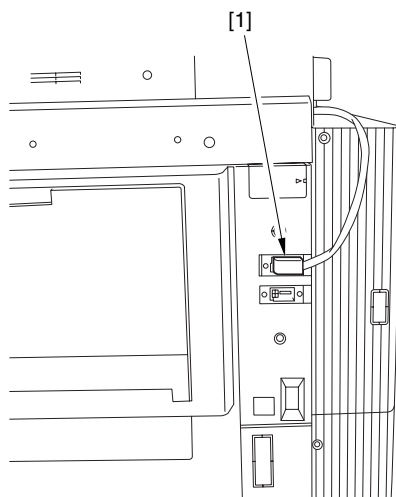

F-5-64


2) Disconnect the 2 connectors [1].

3) Remove the 2 screws [2].

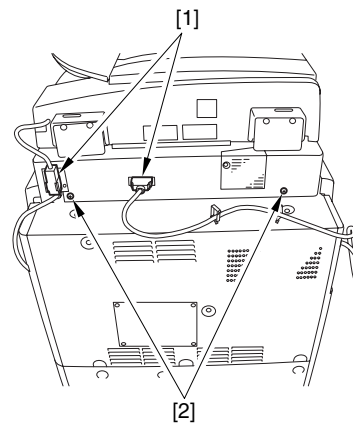


F-5-65

4) Bend up the edge of the rubber cover [1], and remove the screws (2 pc. each) [2]; then, detach the angle guide plate.

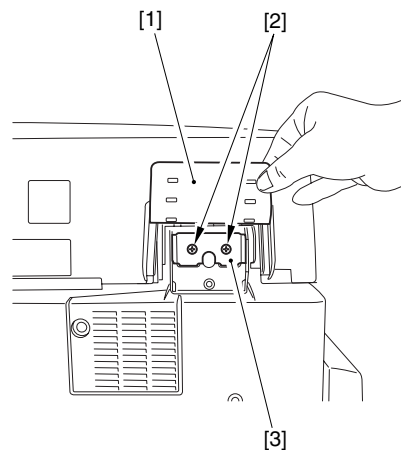

F-5-66

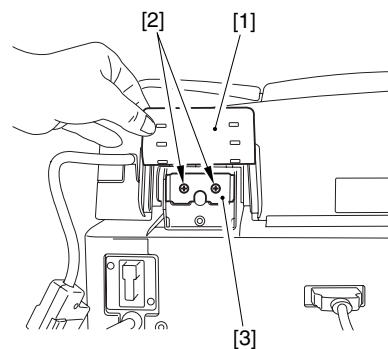


F-5-67

5) Open the ADF fully.

6) Remove the 3 screws [1], and slide the reader rear cover [2] toward the rear to detach.

⚠ Take care not to damage the ADF open/closed sensor arm [3].

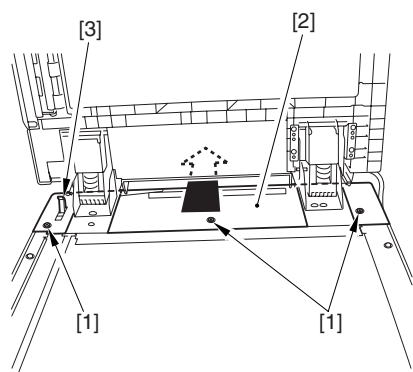


F-5-68

5.4.4.2 Removing the Interface

PCB


0003-3124

1) Remove the 4 RS tightening screws [1], and remove the 2 binding screws [2]; then, detach the interface PCB cover [3].

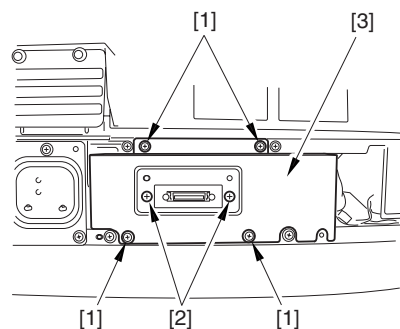

F-5-69


2) Disconnect the 7 connectors [1], detach the 2 flat cables [2], and remove the 5 screws [3]; then, detach the interface PCB unit [4].

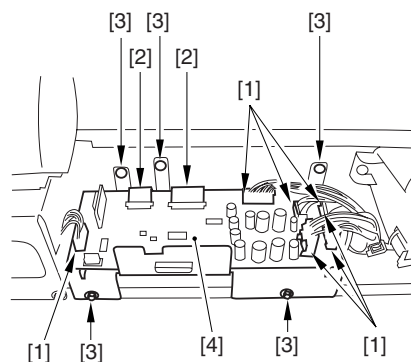

F-5-70


⚠ How to Disconnect the Flat Cable

Slide the locking lever [1] in the direction of the arrow, and disconnect the flat cable [2].

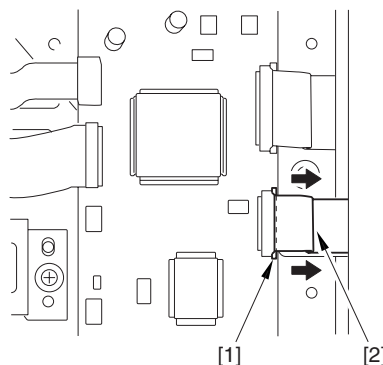

F-5-71


3) Remove the 9 screws [1], and detach the interface PCB [2].

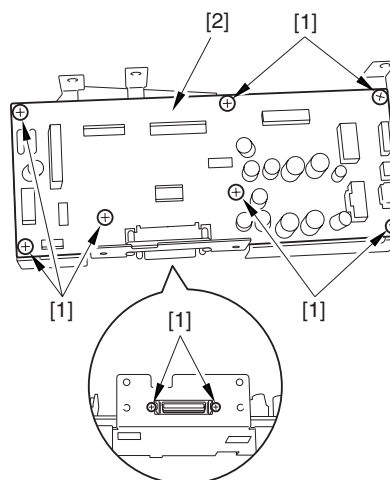

F-5-72

5.4.4.3 Points to Note When Mounting the Interface PCB 0004-7789

⚠ If the tie-wrap [1] of the scanner motor harness is closer to the motor than the wire guide [2], the harness will come into contact with the rotor and suffer damage. Be sure that the tie-wrap is closer to the interface PCB than the wire guide.

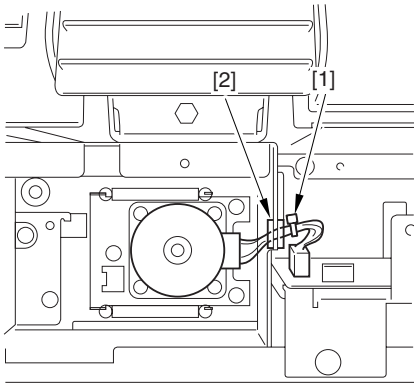


F-5-73

5.4.5 Inverter PCB

5.4.5.1 Removing the Copyboard Glass 0003-3126

- 1) Open the ADF.
- 2) Remove the 2 screws [1], and detach the right glass retainer [2]; then, detach the copyboard glass [3].

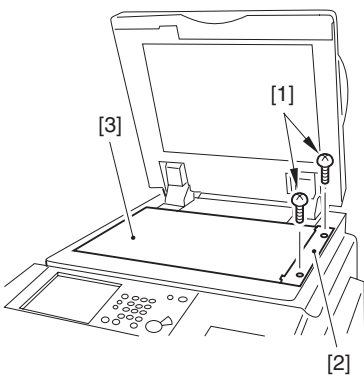


F-5-74


⚠ When detaching the copyboard glass, take care not to touch the white plate attached to its back. (Soiling can cause lines in the image). If soiled, clean it using lint-free paper moistened with alcohol.)

5.4.5.2 Removing the CCD Unit Cover 0003-3148

- 1) Remove the 9 screws [1], and detach the CCD unit cover [2].

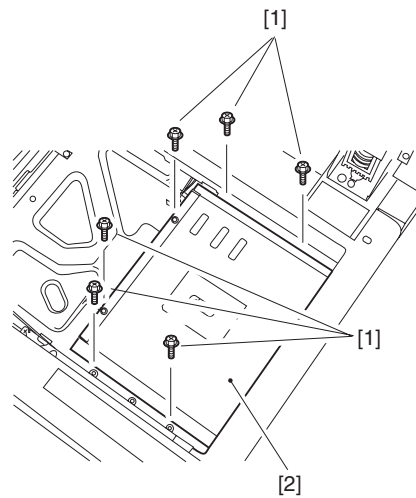

F-5-75

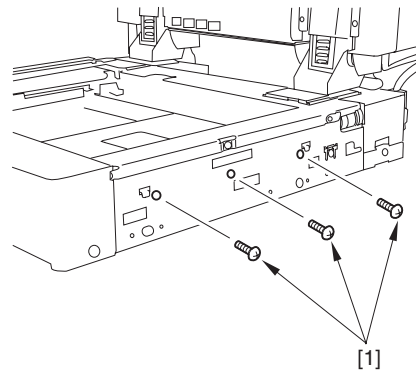


F-5-76

5.4.5.3 Removing the Inverter

PCB

0003-3125

1) Disconnect the connector [1] and the flat cable [2]; then, remove the 3 screws, free the 2 PCB supports [4], and detach the inverter PCB [5].

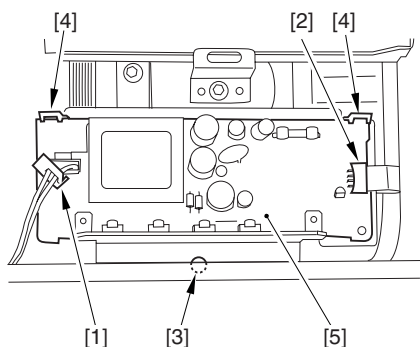

F-5-77

5.4.5.4 After Replacing the Inverter PCB

0003-5473

There is no special adjustment after replacing the inverter PCB.


5.4.6 CCD Unit

5.4.6.1 Removing the

Copyboard Glass

0003-3139

1) Open the ADF.
2) Remove the 2 screws [1], and detach the right glass retainer [2]; then, detach the copyboard glass [3].

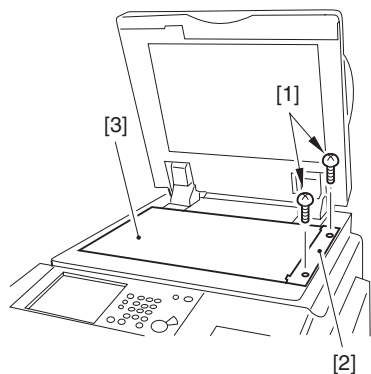

F-5-78


⚠ When detaching the copyboard glass, take care not to touch the white plate attached to its back. (Soiling can cause lines in the image). If soiled, clean it using lint-free paper moistened with alcohol.)

5.4.6.2 Removing the CCD


Unit Cover

0003-3144

1) Remove the 9 screws [1], and detach the CCD unit cover [2].

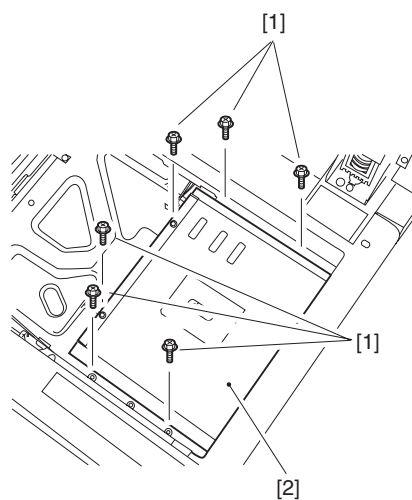

F-5-79

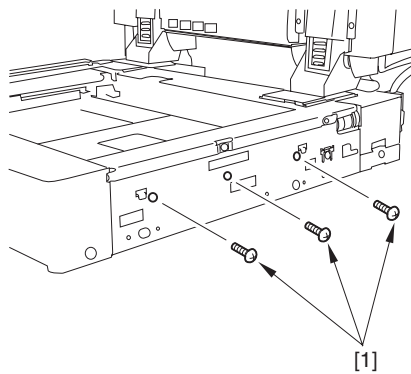


F-5-80

5.4.6.3 Original Size Detection

Unit


0003-5469

1) Remove the 3 screws [1], and slide the original size detection unit [2].

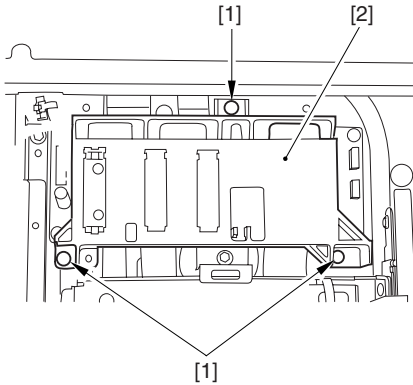

F-5-81

2) Disconnect the connector [1], and detach the original size sensor unit [2].

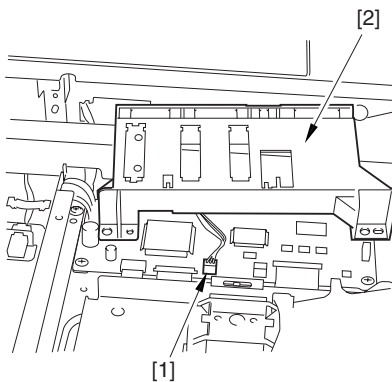


F-5-82

5.4.6.4 Removing the CCD

Unit


0003-3137

1) Remove the 3 screws [1], and detach the original size detection unit [2].

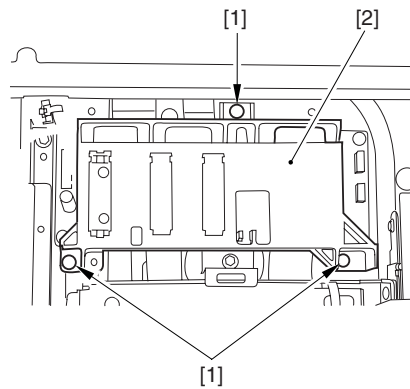

F-5-83

2) Disconnect the 2 flat cables [1] from the reader controller PCB; then, remove the 2 screws [2], detach the 2 leaf springs [3], and detach the CCD unit [4].

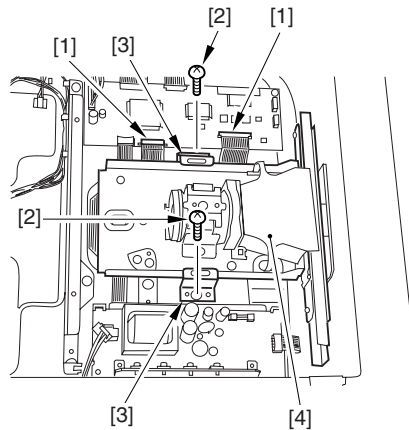

F-5-84

5.4.6.5 After Replacing the CCD Unit

0003-3143


If you have replaced the CCD unit, be sure to enter the settings indicated on the label attached to the CCD unit:

COPIER>ADJUST>CCD>CCDU-RG

(to enter the correction value for CCD-dependent RG color displacement in sub scanning direction)

COPIER>ADJUST>CCD>CCDU-GB

(to enter the correction value for CCD-dependent GB color displacement in sub scanning direction)

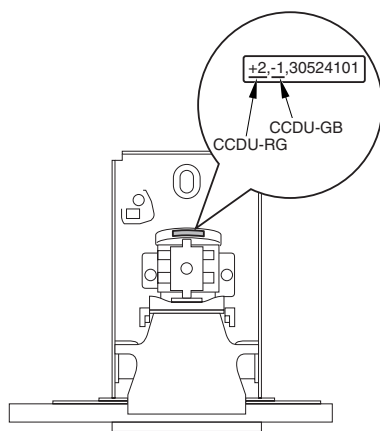

F-5-85

Moreover, be sure to update the settings indicated on the service label attached behind the reader unit front cover with the settings indicated on the label attached to the CCD unit.


5.4.7 Scanner Motor

5.4.7.1 Removing the Reader

Rear Cover

0003-8338


1) Disconnect the connector [1].

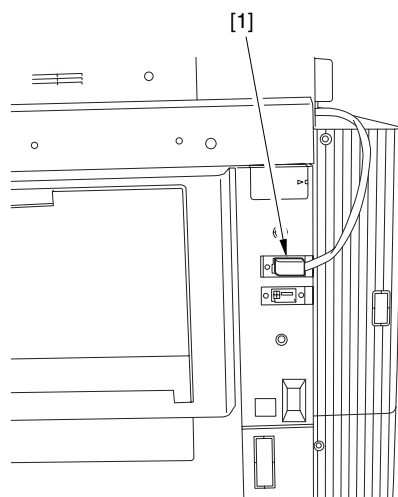

F-5-86


2) Disconnect the 2 connectors [1].

3) Remove the 2 screws [2].

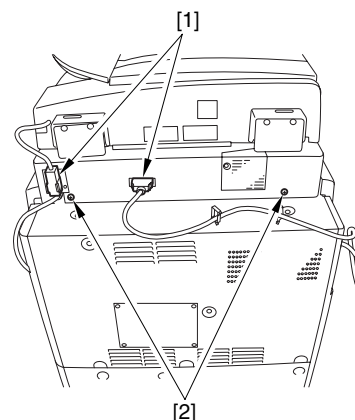


F-5-87

4) Bend up the edge of the rubber cover [1], and remove the screws (2 pc. each) [2]; then, detach the angle guide plate.

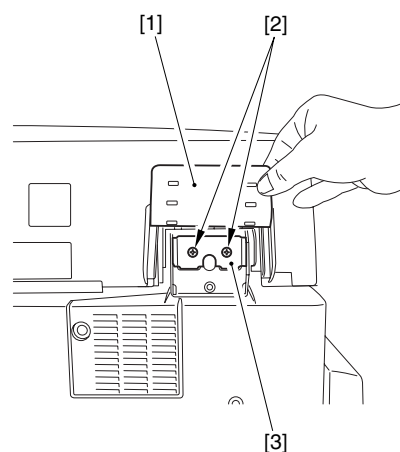


F-5-88

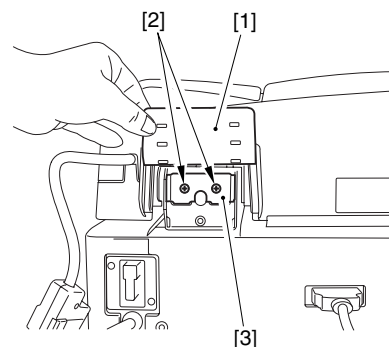

F-5-89

- 5) Open the ADF fully.
- 6) Remove the 3 screws [1], and slide the reader rear cover [2] toward the rear to detach.

⚠ Take care not to damage the ADF open/closed sensor arm [3].

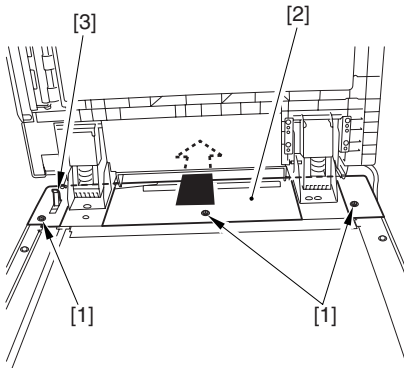


F-5-90

5.4.7.2 Removing the Scanner

Motor


0003-3130

- 1) Remove the 4 screws [1], and detach the cover [2].

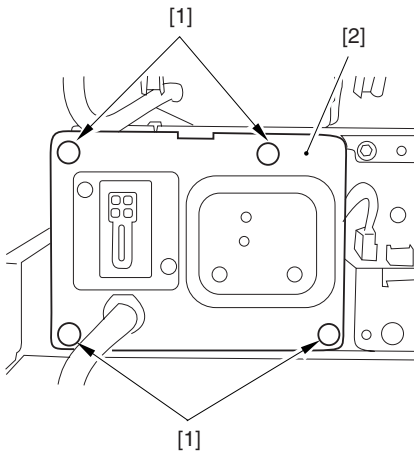


F-5-91

- 2) Detach the 2 harness retainers [2] from the back of the cover [1] to free the cover.

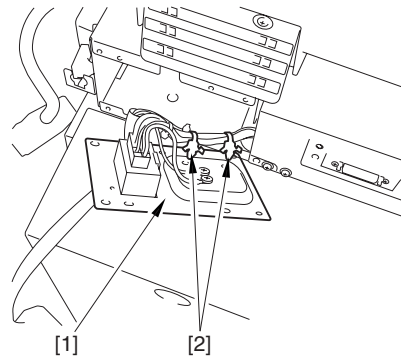


F-5-92

- 3) Remove the 3 screws [1], and detach the 2 springs [2]; then, shift the scanner motor [3] in the direction of the arrow to detach.

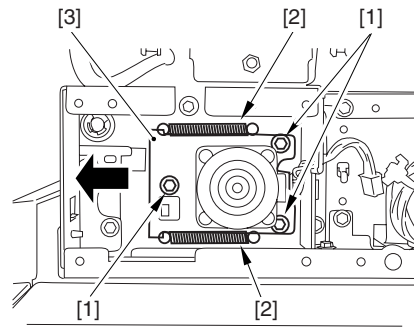

F-5-93

- 4) Disconnect the connector [1], and detach the scanner motor [2].

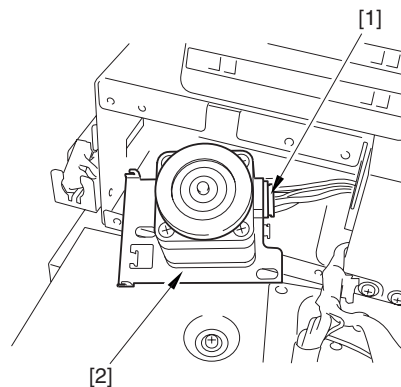


F-5-94


5.4.7.3 Mounting the Scanner

Motor 0003-3131

When mounting the scanner motor, be sure that the timing belt [3] is securely attached to the scanner pulley [1] and the motor shaft [2].

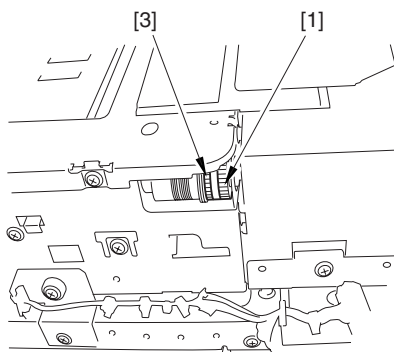


F-5-95

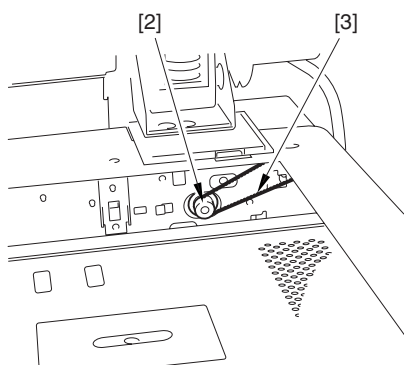

F-5-96

⚠ If the tie-wrap [1] of the scanner motor harness is closer to the motor side than the wire guide [2], the harness can come into contact with the rotor of the scanner motor and suffer damage. Be sure that the tie-wrap is closer to the interface PCB than the wire guide when mounting the scanner motor.

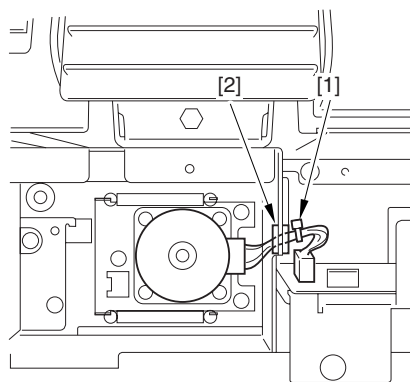


F-5-97

5.4.8 ADF Open/Close Sensor

5.4.8.1 Removing the Reader


Rear Cover 0004-5163

1) Disconnect the connector [1].

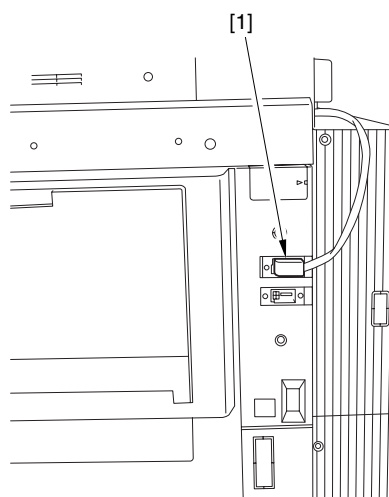


F-5-98

- 2) Disconnect the 2 connectors [1].
- 3) Remove the 2 screws [2].

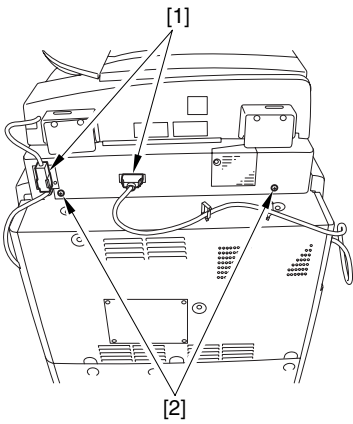


F-5-99

- 4) Bend up the edge of the rubber cover [1], and remove the screws (2 pc. each) [2]; then, detach the angle guide plate.

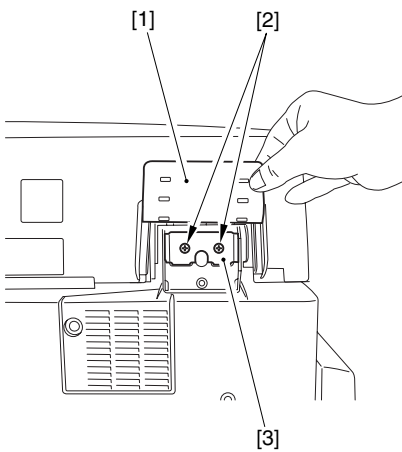


F-5-100

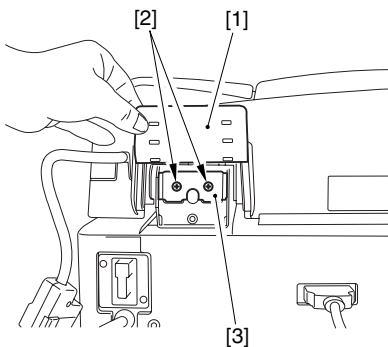

F-5-101

- 5) Open the ADF fully.
- 6) Remove the 3 screws [1], and slide the reader rear cover [2] toward the rear to detach.

⚠ Take care not to damage the ADF open/closed sensor arm [3].

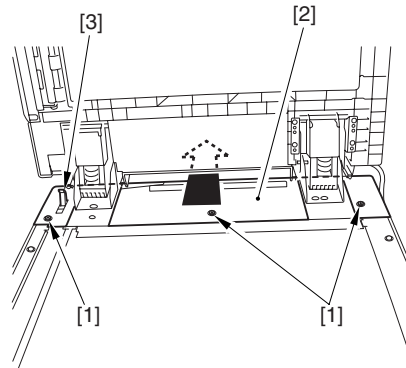


F-5-102

5.4.8.2 Removing the ADF Open/Closed Sensor


[0004-5164](#)

- 1) Disconnect the connector [1].

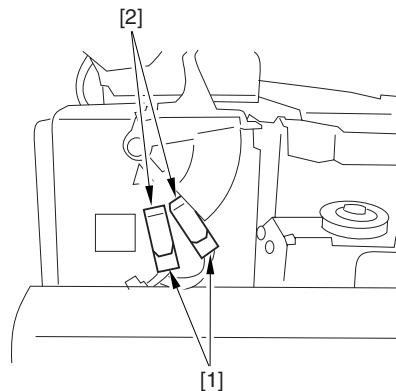


F-5-103

- 2) Remove the 4 screws [1], and detach the reinforcing plate [2].

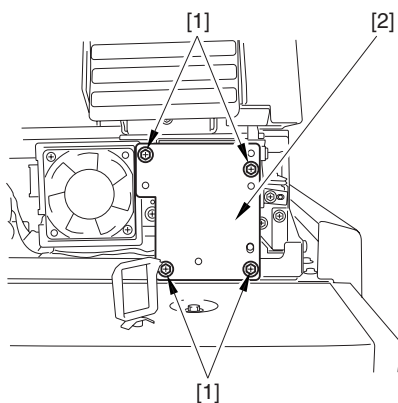

F-5-104

- 3) Free the hook [1], and detach the ADF open/closed sensor (1, 2).

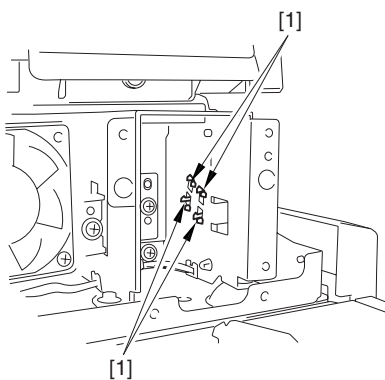


F-5-105

5.4.9 Scanner HP Sensor

5.4.9.1 Removing the Rear Cover


0004-4318

- 1) Disconnect the connector [1].

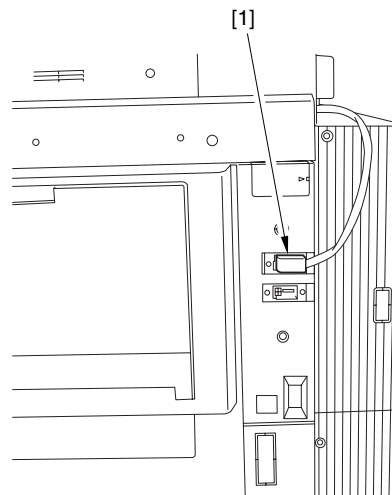


F-5-106

- 2) Disconnect the 2 connectors [1].
3) Remove the 2 screws [2].

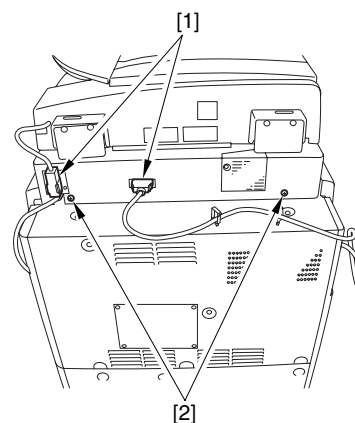


F-5-107

4) Bend up the edge of the rubber cover [1], and remove the screws (2 pc. each) [2]; then, detach the angle guide plate.

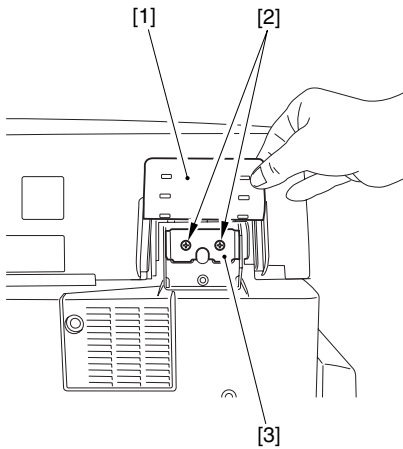

F-5-108

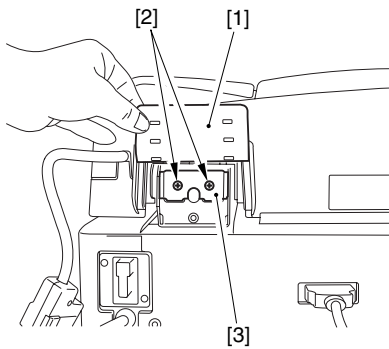


F-5-109

5) Open the ADF fully.

6) Remove the 3 screws [1], and slide the reader rear cover [2] toward the rear to detach.

⚠ Take care not to damage the ADF open/closed sensor arm [3].

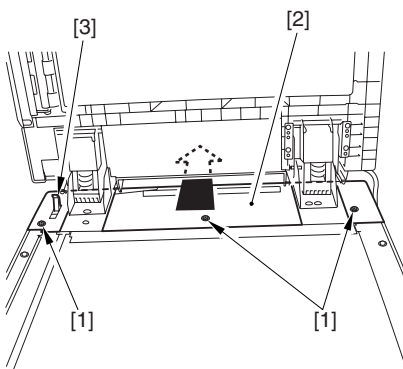


F-5-110

5.4.9.2 Removing the Mirror


Base Home Position Sensor 0003-3128

1) Remove the 4 screws [1], and detach the plate [2].

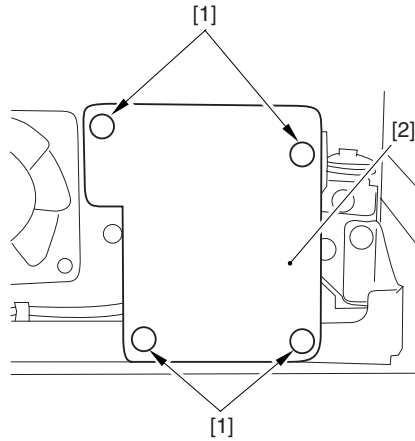


F-5-111

2) Remove the screw [1], and detach the sensor mounting plate [2].

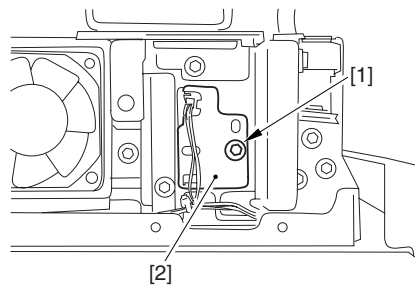

F-5-112

3) Disconnect the connector [1], and detach the home position sensor [1].

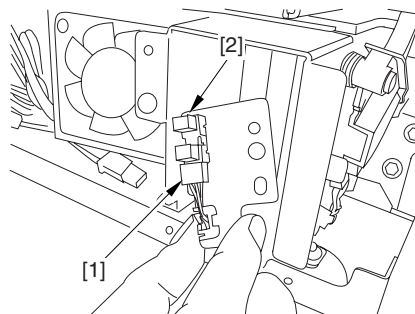


F-5-113

5.4.10 Original Sensor

5.4.10.1 Removing the Copyboard Glass

0003-3146

- 1) Open the ADF.
- 2) Remove the 2 screws [1], and detach the right glass retainer [2]; then, detach the copyboard glass [3].

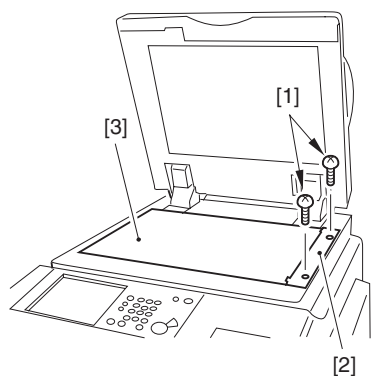


F-5-114

⚠ When detaching the copyboard glass, take care not to touch the white plate attached to its back. (Soiling can cause lines in the image). If soiled, clean it using lint-free paper moistened with alcohol.)


5.4.10.2 Removing the CCD Unit Cover

0003-3147

- 1) Remove the 9 screws [1], and detach the CCD unit cover [2].

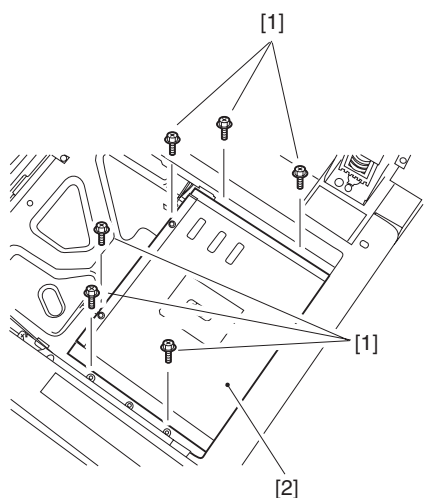

F-5-115

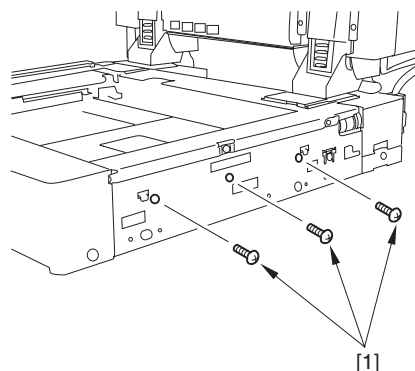


F-5-116

5.4.10.3 Removing the Original Size Sensor Unit


0003-3136

- 1) Remove the 3 screws [1], and slide the original size detection unit [2].

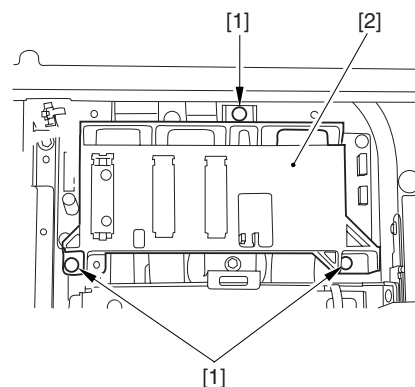

F-5-117

- 2) Disconnect the connector [1], and detach the original size sensor unit [2].

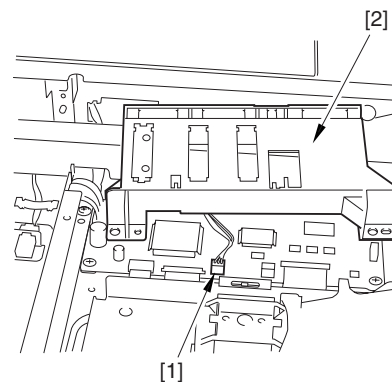


F-5-118

5.4.10.4 Removing the Original

Size Sensor

0003-5464

- 1) While freeing the claw at the edge, detach the original size sensor [1].

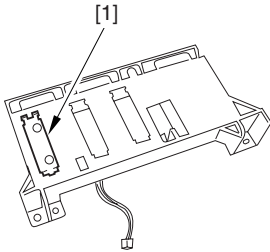

F-5-119


5.4.11 Cooling Fan

5.4.11.1 Removing the Reader

Rear Cover


0003-8340

- 1) Disconnect the connector [1].

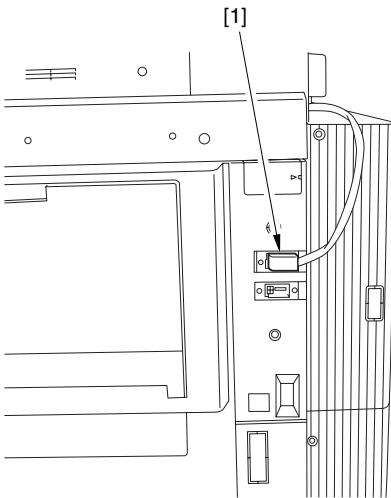


F-5-120

- 2) Disconnect the 2 connectors [1].
- 3) Remove the 2 screws [2].

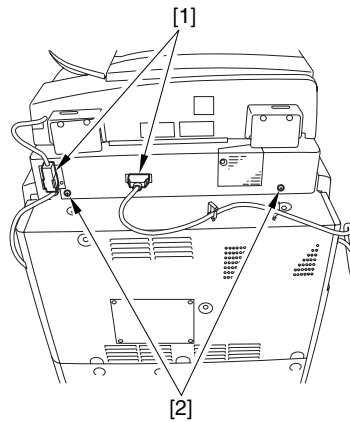


F-5-121

- 4) Bend up the edge of the rubber cover [1], and remove the screws (2 pc. each) [2]; then, detach the angle guide plate.

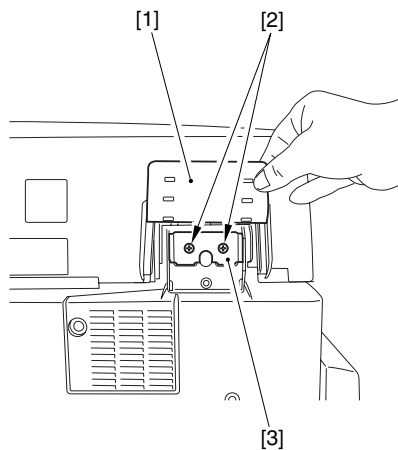


F-5-122

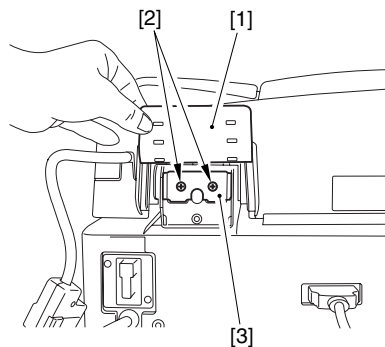

F-5-123

- 5) Open the ADF fully.
- 6) Remove the 3 screws [1], and slide the reader rear cover [2] toward the rear to detach.

⚠ Take care not to damage the ADF open/closed sensor arm [3].

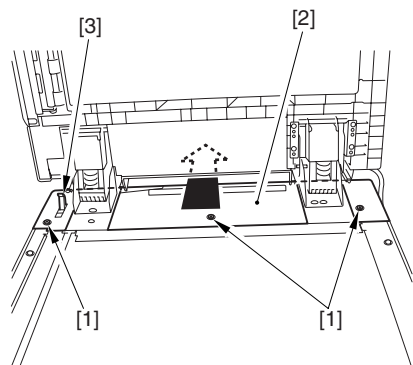


F-5-124

5.4.11.2 Removing the Cooling Fan

0003-3129

- 1) Disconnect the connector [1], and remove the 2 screws [2]; then, detach the cooling fan [3].

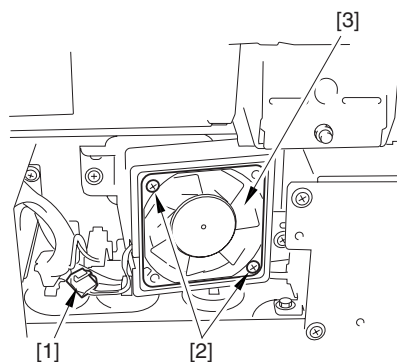

F-5-125

5.4.12 Scanner Drive Cable

5.4.12.1 Outline

0004-1353


Be sure to keep the following on hand when replacing the scanner drive cable:

-mirror positioning tool

5.4.12.2 Removing the Copyboard Glass

0004-1355

- 1) Open the ADF.
- 2) Remove the 2 screws [1], and detach the right glass retainer [2]; then, detach the copyboard glass [3].

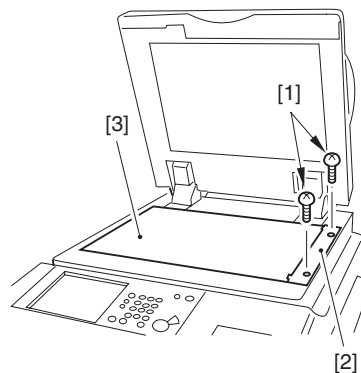

F-5-126


⚠ When detaching the copyboard glass, take care not to touch the white plate attached to its back. (Soiling can cause lines in the image). If soiled, clean it using lint-free paper moistened with alcohol.)

5.4.12.3 Removing the Right

Cover (upper)

0004-1356

1) Remove the 2 screws [1], and detach the right cover (upper) [2].

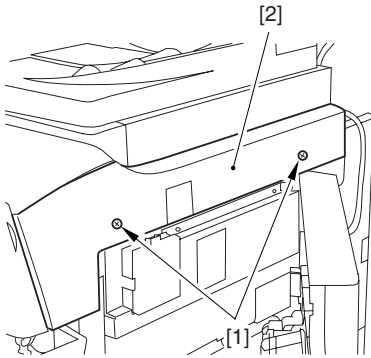


F-5-127

5.4.12.5 Removing the Left

Cover (upper)

0004-1359

1) Remove the 3 screws [1], and detach the left cover (upper) [2].

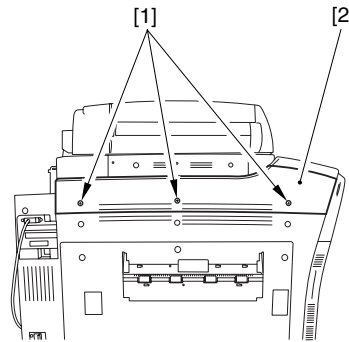


F-5-129

5.4.12.4 Removing the Right

Cover

0004-1357

1) Remove the 2 screws [1], and detach the reader right cover [2].

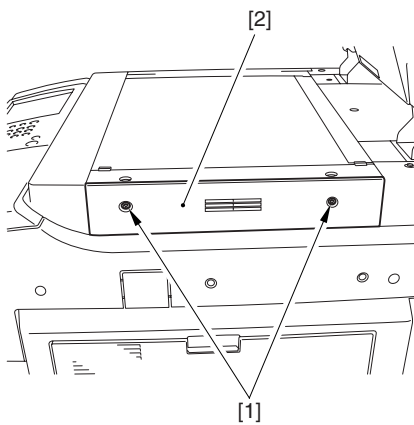


F-5-128

5.4.12.6 Removing the Reader

Left Cover

0004-1360

1) Remove the 2 screws [1], and detach the reader left cover [2].

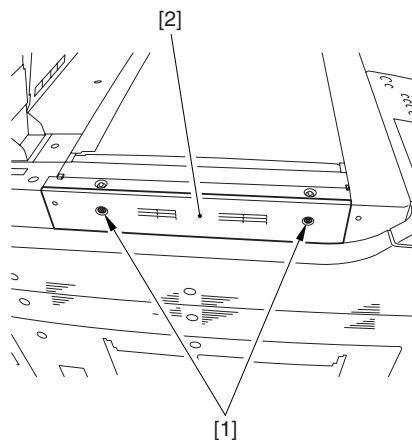


F-5-130

5.4.12.7 Removing the Reader


Front Cover

0004-1361

- 1) Remove the screw [2] (1 pc. each) from the left and right of the reader front cover [1].

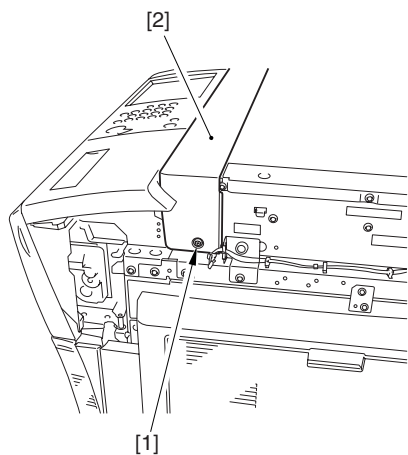


F-5-131

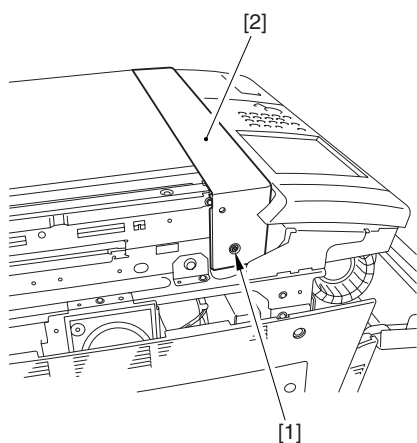

F-5-132

- 2) Detach the reader front cover [1] in upward direction [1].

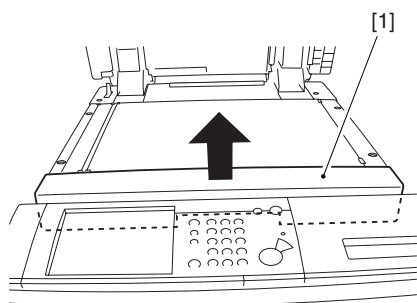


F-5-133

5.4.12.8 Removing the ADF


0004-1376

- 1) Disconnect the communications cable [1] of the ADF from the host machine.

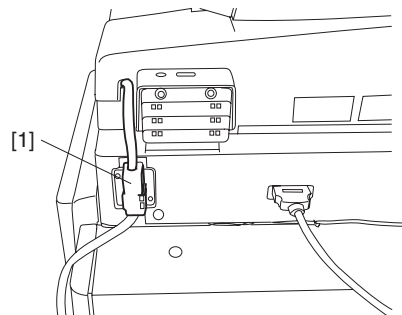


F-5-134

- 2) Bend up the edge of the rubber cover [1], and remove the 2 screws [2]; then, detach the angle guide plate [3].

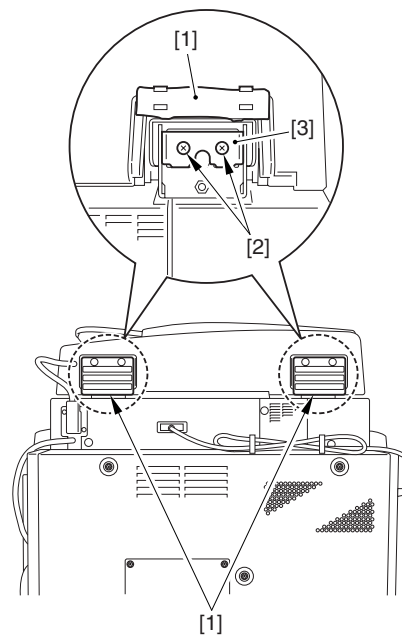


F-5-135

3) Remove the 3 knurled screws [1], and slide the machine toward the front, and lift it to detach.

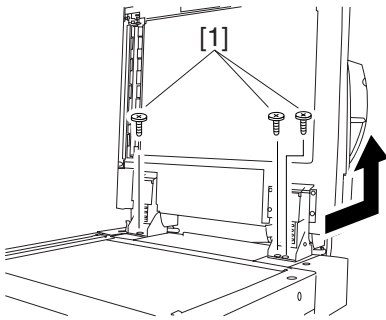

F-5-136

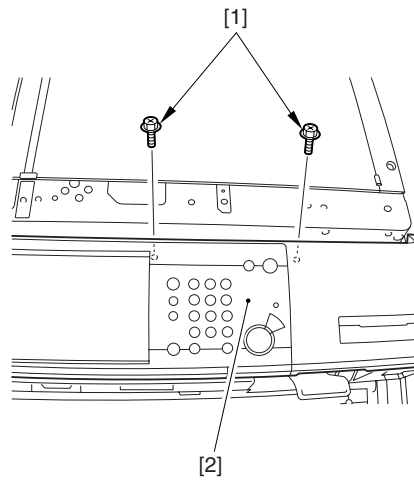


F-5-139

5.4.12.9 Removing the Control


Panel

0004-1423

1) Disconnect the connector [1].

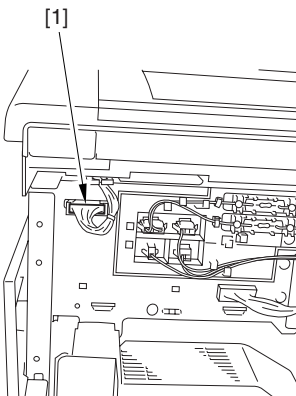


F-5-137

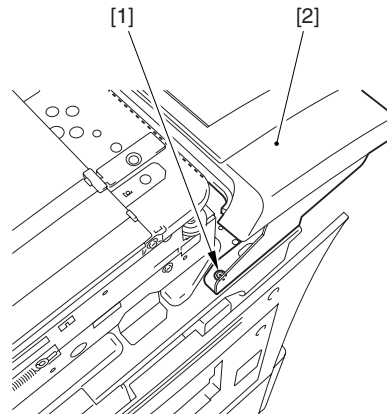

F-5-140

2) Remove the 5 screws [1], and detach the control panel [2] together with the cover.

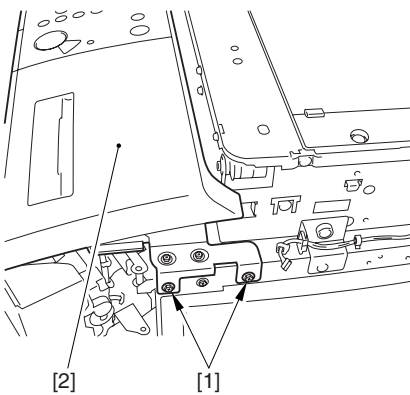

F-5-138

5.4.12.10 Removing the Scanner Drive Cable


0004-1362

1) Remove the 2 screws [1], and detach the reading glass retainer [2].

When removing the reading glass retainer, take care so that the leaf spring will not come off.

2) Remove the reading glass [3].

3) Remove the 2 screws [4], and detach the left glass retainer [5].

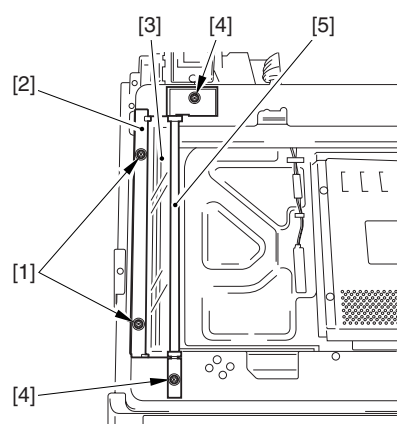


F-5-141

When fitting it, be sure to hold down both ends of the leaf spring [A] with your fingers. (Take care not to bend the leaf spring.)


Be sure to fit it while forcing the left glass retainer [B] against the reading glass [C].

Check to make sure that the side of the reading glass and the leaf spring [D] of the left glass retainer are in firm contact.

Otherwise, dust from the reading glass can start to collect, causing lines in images.

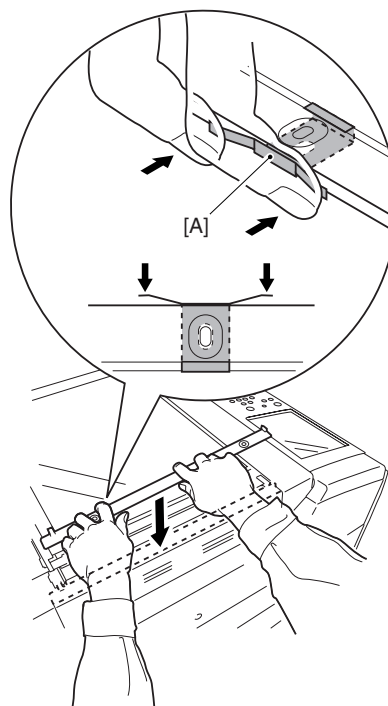


F-5-142

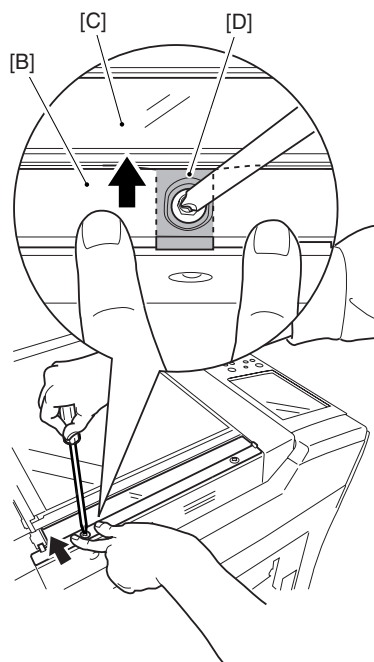


F-5-143

4) Remove the screw [1], and detach the ADF right screw cover [2].

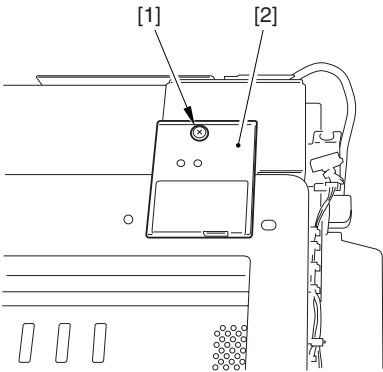


F-5-144

5) Remove the screw [1], and detach the ADF left screw cover [2].

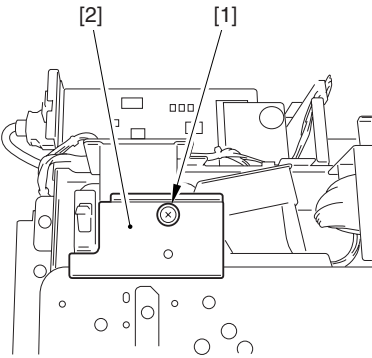


F-5-145

6) Remove the 6 screws [1], and detach the interface PCB cover.

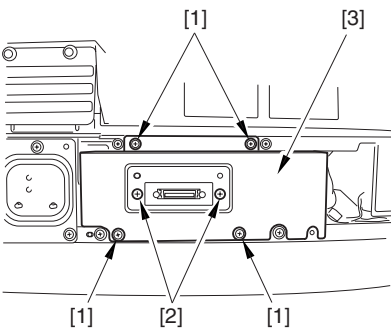


F-5-146

7) Disconnect the 9 connectors [1], and remove the 5 screws [2]; then, detach the interface PCB [3] together with its base.

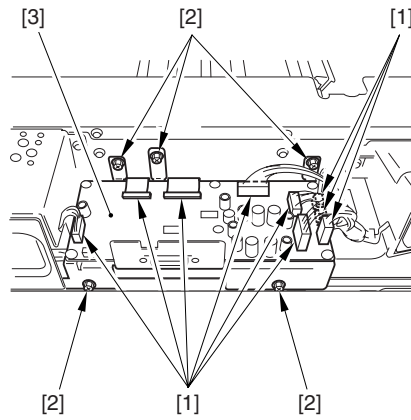

F-5-147


8) Disconnect the reader communications cable.

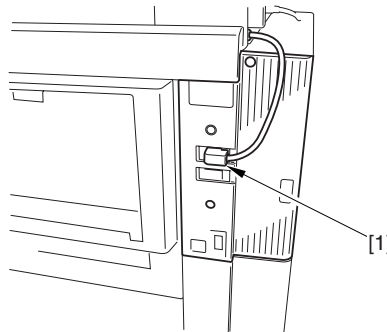

F-5-148


9) Disconnect the connector [1], and open the 3 wire saddles [2].

10) Remove the 4 screws [3], and detach the motor cover [4] together with the harness.

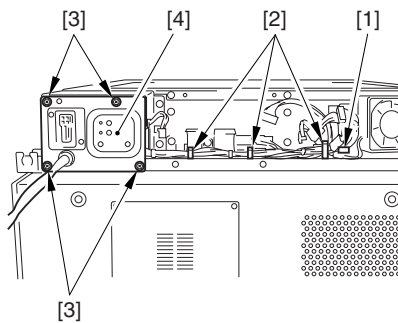


F-5-149

11) Free the harness from the wire saddle [1], and remove the 6 screws [2]; then, detach the motor frame [3].

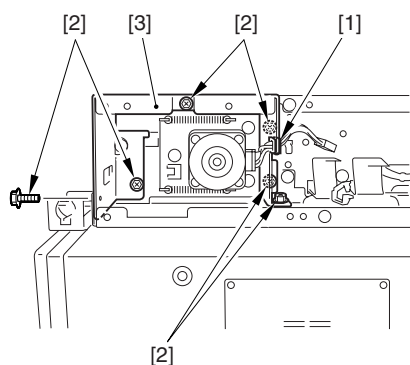


F-5-150

12) Remove the 4 screws [1], and detach the ADF open/closed sensor cover [2].

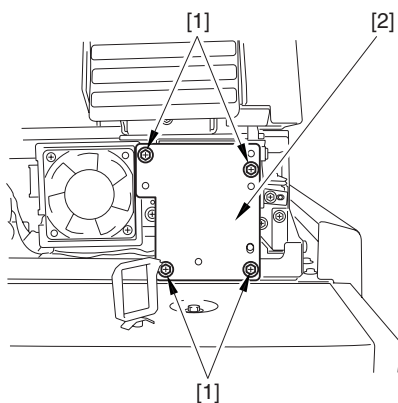


F-5-151

13) Disconnect the 2 connectors [1], and detach the snap-open band [2]; then, free the harness from the wire saddle [3].

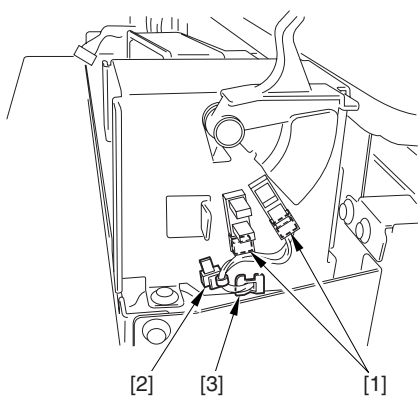


F-5-152

14) Free the harness from the wire saddle [1], and remove the 6 screws [2]; then, detach the ADF open/closed sensor base [3].

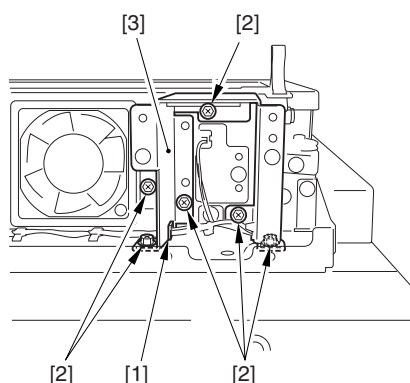


F-5-153

15) Remove the 24 screws [1], and detach the reader upper frame [2].

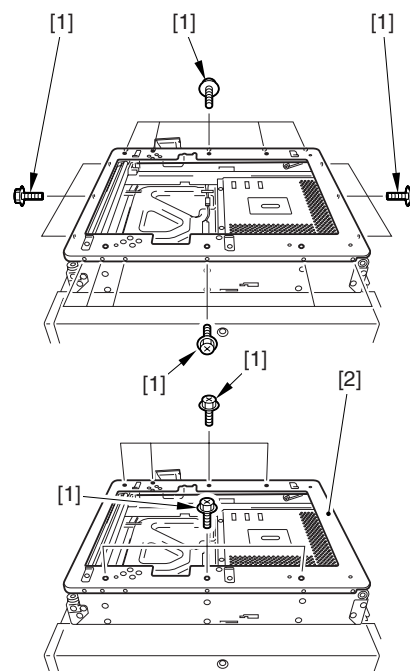

F-5-154

- 16) Remove the 2 cable fixing screws [2] of the No. 1 mirror base [1].
- 17) Remove the spring [3] used to hold the cable in place.
- 18) Free the 2 hooks of the cable from the right side of the reader frame.
- 19) Free the cable from the pulleys.

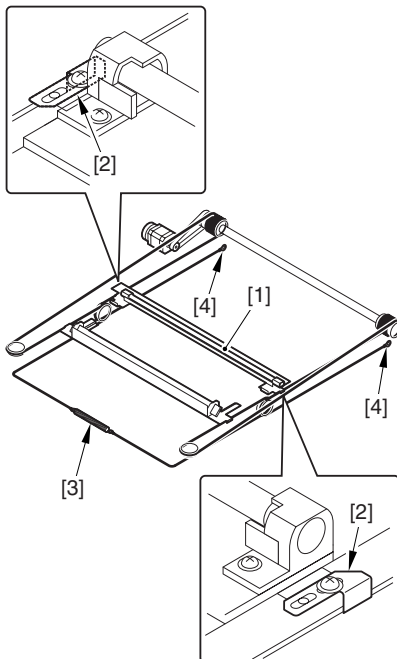


F-5-155

5.4.12.11 Fitting the Scanner


Drive Cable

0004-1432

- 1) Fit the ball of the cable in the hole of the drive pulley [1], and wind the cable (4 times inside, 5 times outside); then, fix it in place using tape or the like. At this time, be sure that the cable fixing [2] is on the inside.
- 2) Engage the cable on the pulleys; then, engage one end of the cable on the hook [3] of the left side and the other end on the hook of the right side.
- 3) Temporarily fix the cable fixing plate [2] in place to the No. 1 mirror base [5].
- 4) Mount the reader upper frame.

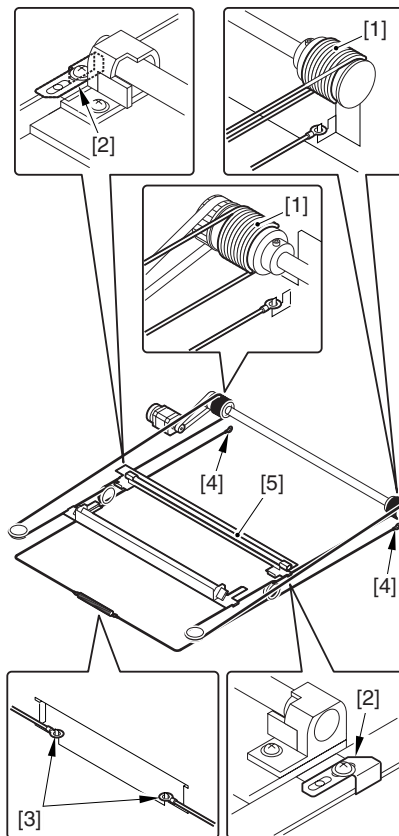


F-5-156

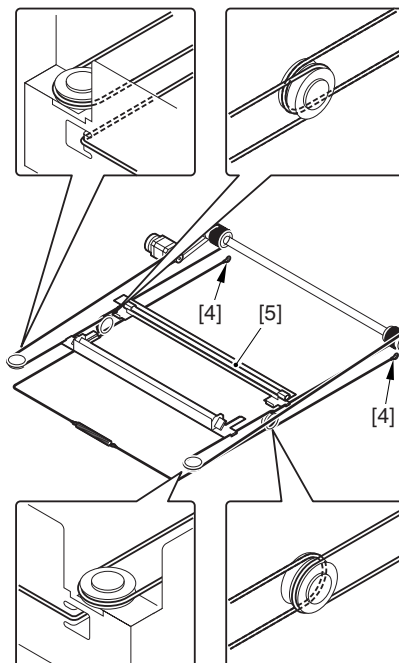

F-5-157


5.4.12.12 Adjusting the Position of the No. 1/No. 2 Mirror Base 0004-1439

1) Set the pins at the rear of the mirror positioning tool (FY9-3009-040) in such a way so that the tool may be used for the machine.

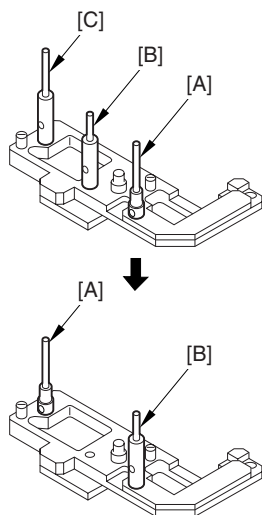


F-5-158

2) Set the pins at the front of the mirror positioning tool in such a way so that the tool may be used for the machine.

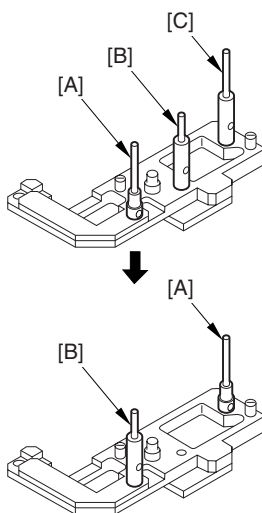


F-5-159

2) Fit the pins of the mirror positioning tool (front [2]; rear [3]) of the mirror positioning tool into the holes [1] of the No. 1 mirror base, No. 2 mirror base, and rail.

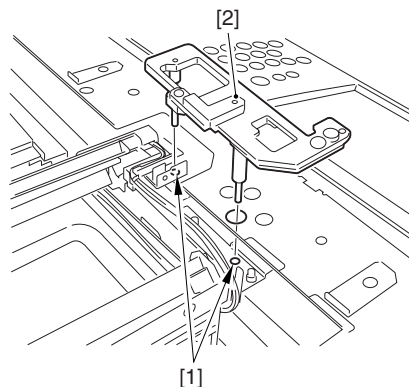

F-5-160

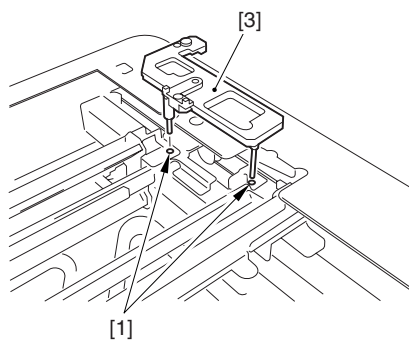

F-5-161

3) Fully secure the ends of the cable (you have temporarily fixed to the hooks of the reader frame previously).

5) Detach the mirror positioning tool (front, rear).

6) Put back the parts by reversing the steps used to detach them.

Chapter 6 Laser Exposure

Contents

6.1 Construction	6-1
6.1.1 Specifications, Control Mechanisms, and Functions	6-1
6.1.2 Major Components	6-2
6.1.3 Construction of the Control System	6-3
6.2 Basic Sequence	6-4
6.2.1 Basic Sequence of Operation	6-4
6.3 Various Control	6-5
6.3.1 Controlling the Laser Activation Timing	6-5
6.3.1.1 Turning On and Off the Laser Unit	6-5
6.3.1.2 Controlling the Synchronization in Main Scanning Direction	6-6
6.3.1.3 Controlling the Synchronization in Sub Scanning Direction	6-7
6.3.2 Controlling the Intensity of Laser Light	6-8
6.3.2.1 APC Control	6-8
6.3.2.2 PWM Control	6-8
6.3.3 Controlling the Laser Scanner Motor	6-9
6.3.3.1 Controlling the Laser Scanner Motor	6-9
6.3.4 Controlling the Laser Shutter	6-10
6.3.4.1 Controlling the Laser Shutter	6-10
6.4 Parts Replacement Procedure	6-11
6.4.1 Laser Scanner Unit	6-11
6.4.1.1 Removing the Left Cover (upper)	6-11
6.4.1.2 Removing the Delivery Cover	6-11
6.4.1.3 Removing the Left Cover (middle)	6-11
6.4.1.4 Removing the HV2 PCB	6-11
6.4.1.5 Removing the Laser Scanner Unit	6-12
6.4.1.6 Points to Note When Replacing the Laser Scanner Unit	6-13
6.4.1.7 Cleaning the Laser Scanner Unit	6-13

6.1 Construction

6.1.1 Specifications, Control Mechanisms, and Functions

0002-9823

T-6-1

Laser Light

Wave length	645 to 665 nm (visible light)
Output	35mW
Number of beams	1

T-6-2

Laser Scanner Motor

Type of motor	DC brushless
Revolution	32000 rpm (approx.)
Type of bearing	oil

T-6-3

Polygon Mirror


Number of facets	12 (29-mm dia.)
------------------	-----------------

T-6-4

Control Mechanism

Synchronization	main scanning direction
	sub scanning direction
Light intensity	APC
	PWM
Others	laser activation/deactivation*1 (exposes "light" areas)
	laser scanner motor
	laser shutter

*1: The machine directs its laser beam to shine on "light" areas (non-image areas), leaving "dark" areas (image areas) as they are.

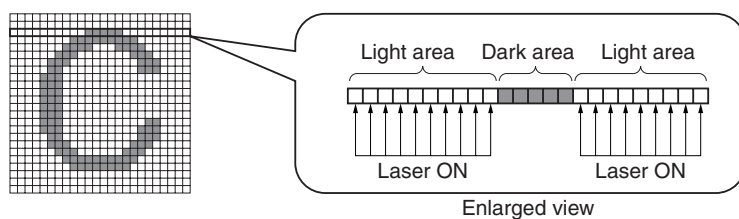


F-6-1

6.1.2 Major Components

0002-9832

T-6-5

Item	Description
[1] Laser unit	emits laser light.
[2] Polygon mirror	scans laser light in main scanning direction.
[3] BD mirror	reflects laser light, directing it to the BD PCB.
[4] BD PCB	generates the BD signal.
[5] Laser mirror 1	reflects laser light, directing it to the photosensitive drum.
[6] Laser mirror 2	reflects laser light, directing it to the photosensitive drum.
[7] Laser mirror 3	reflects laser light, directing it to the photosensitive drum.
[8] Routing mirror	reflects laser light, directing it to the photosensitive drum.

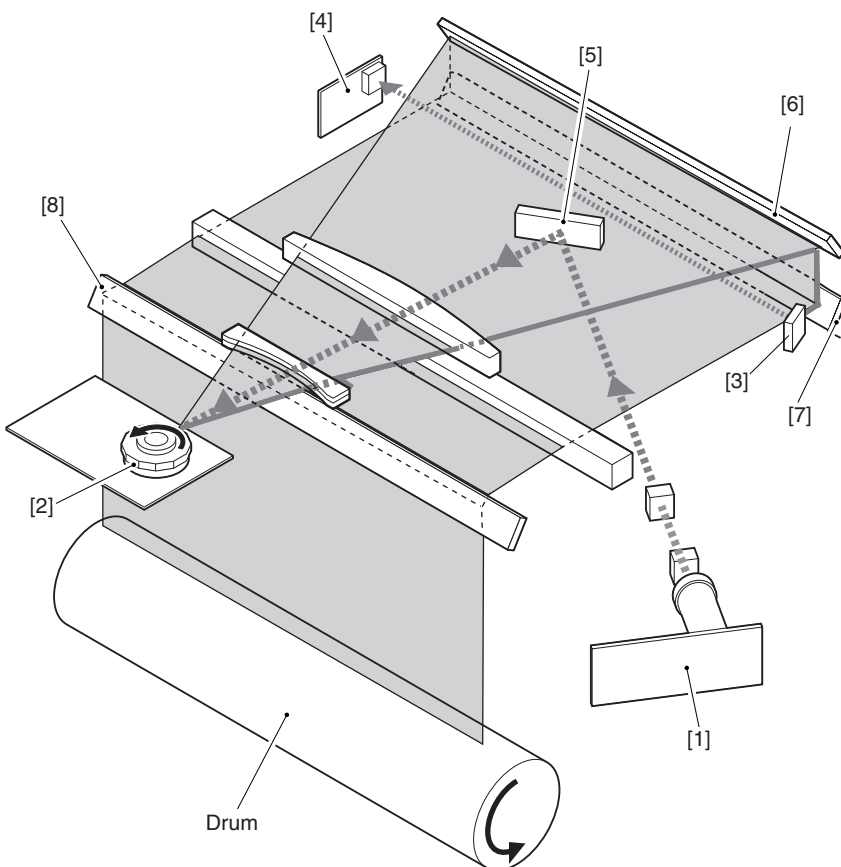


F-6-2

6.1.3 Construction of the Control System

0002-9842

The machine uses ASIC1 (IC29) on its DC controller PCB to control the laser exposure system. ASIC1 (IC29) uses the video signals coming from the main controller PCB to form a latent static image on the photosensitive drum through the following 6 control mechanisms:

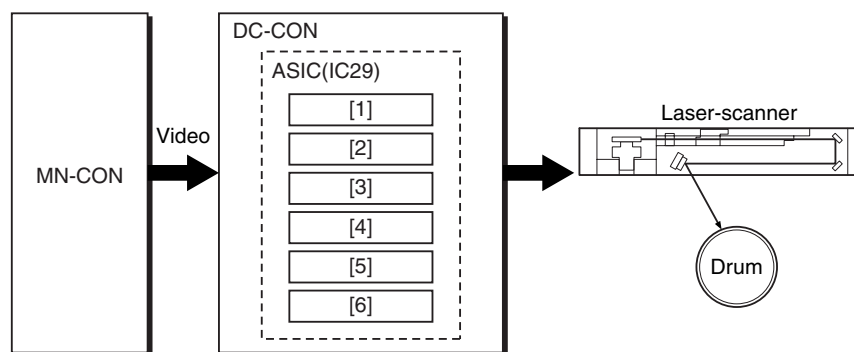

F-6-3

- 1 turns on/off the laser unit
- 2 controls the laser light in main scanning direction
- 3 performs APC control
- 4 performs PWM control
- 5 controls the laser scanner motor
- 6 controls the laser shutter

MN-CON: main controller PCB

DC-CON: DC controller PCB

6.2 Basic Sequence


6.2.1 Basic Sequence of Operation

0002-9844

The following shows the basic sequence of operation of the laser exposure system:

- 1) the Start key is pressed or the print request signal arrives from the main controller PCB.
- 2) the DC controller PCB executes a control mechanism so that the laser scanner
- 3) rotates at the target speed; at the same time, it forces the laser unit to go on for a check on faults.
- 4) the machine becomes ready for forming an image.
- 5) the DC controller PCB generates sub scanning sync signals (see Memo; PVREQ-Y, PVREQ-M, PVREQ-C, PVREQ-K) for individual colors, and sends them to the main controller PCB.
- 6) the main controller PCB generates video signals using the sub scanning sync signals, and sends them to the DC controller PCB.
- 7) in response, the DC controller PCB turns on the laser unit to suit the video signals.

Full Color, A4, Plain Paper, 1 Page

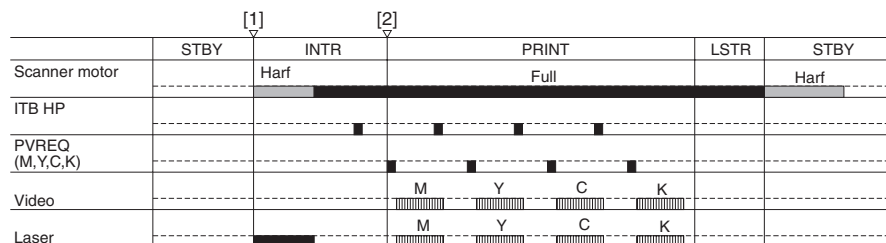

F-6-4

[1] press on the Start key (print request signal)

[2] ready for image formation

Memo:

The sub scanning direction sync signal (PVREQ) is used to match the leading edge of the toner image on the drum and the leading edge of the print paper.

The timing at which the PVREQ signal is generated differs depending on the selected color mode:

-Full Color Mode

In the case of full color mode, an image must be formed in 4 colors (Y, M, C, Bk). All images are first formed on the intermediate transfer belt (ITB), and they must be controlled so that their leading edges will match without color displacement.

When the machine becomes ready for image formation in full color mode, the ITB home position sensor generates the ITBHP signal to serve as a reference so that the machine may generate the PVREQ signal for each color.

-Mono Color Mode

In the case of mono color mode, there is no need for color matching. When the machine becomes ready for image formation, therefore, it generates the PVREQ signal at specific timing regardless of the ITB home position signal (ITBHP).

6.3 Various Control

6.3.1 Controlling the Laser Activation Timing


6.3.1.1 Turning On and Off the Laser Unit

0002-9846

The laser unit is turned on or off by the laser driver PCB in response to the laser control signal (CNT0/CNT1) coming from the DC controller PCB.

T-6-6

Laser control signal		State of operation	State of laser
CNT0	CNT1		
0	0	standby	OFF
0	1	printing	video signal input enabled
1	0	APC	ON
1	1	forced OFF	OFF

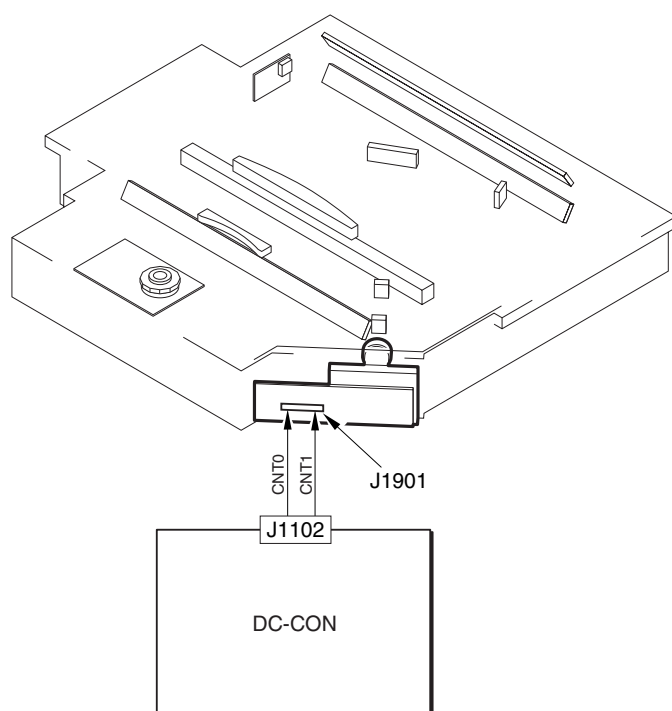

F-6-5

⚠ In standby mode, the intensity setting selected in APC is canceled.


6.3.1.2 Controlling the Synchronization in Main Scanning Direction

0002-9852

The machine controls the synchronization in main scanning direction to match the write start position in main scanning direction, and the control is executed by the BD sync control circuit found in ASIC1, which serves to generate the sync signal for main scanning direction used by the DC controller PCB based on the BD signal coming from the BD PCB.

The following shows how the circuit operates:

The VIDEO signal from the main controller PCB is sent to FIFO of ASIC1; at the same time, the BD sync control circuit generates the printer sync signal (WCK) based on the BD signal, and sends the result to PWMIC and FIFO. Thereafter, FIFO reads the image signals in sync with the printer sync signal, and sends them to PWMIC, which converts the image signals into a laser drive signal (LD) for output to the laser unit.

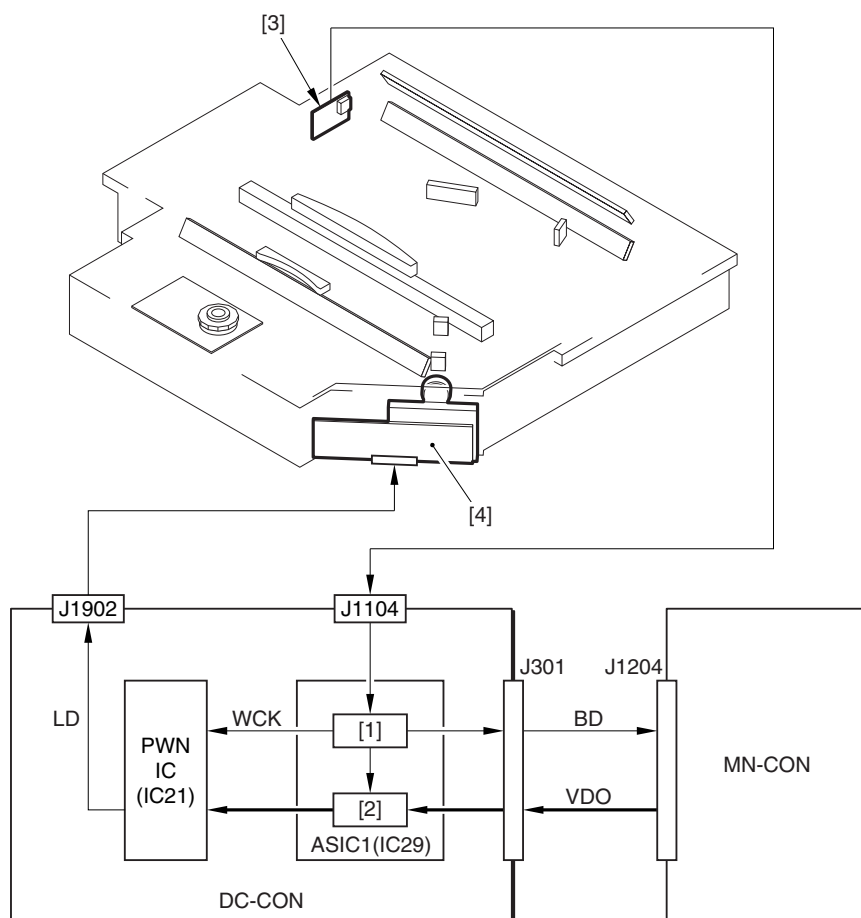

F-6-6

1. BD sync control circuit
2. FIFO
3. BD PCB
4. Laser unit

MN-CON: main controller PCB

DC-CON: DC controller PCB

6.3.1.3 Controlling the Synchronization in Sub Scanning Direction


0002-9854

The machine controls the synchronization in sub scanning direction to match the write start position of each image to be formed on the ITB in full color mode.

This control mechanism is executed by the sub scanning sync control circuit of ASIC1, which uses the ITB home position signal (ITBHP) generated by the ITB home position sensor to generate the synch signal (PVREQ) for sub scanning direction.

The following shows how the circuit operates:

The ITB home position signal (ITBHP) generated by the ITB home position sensor is detected by the sub scanning synch control circuit; at the same time, the circuit generates the PVREQ signal for each color and sends the result to the main controller PCB. In response, the main controller PCB sends video signals to the DC controller PCB, which will form an image starting at a specific point on the ITB.

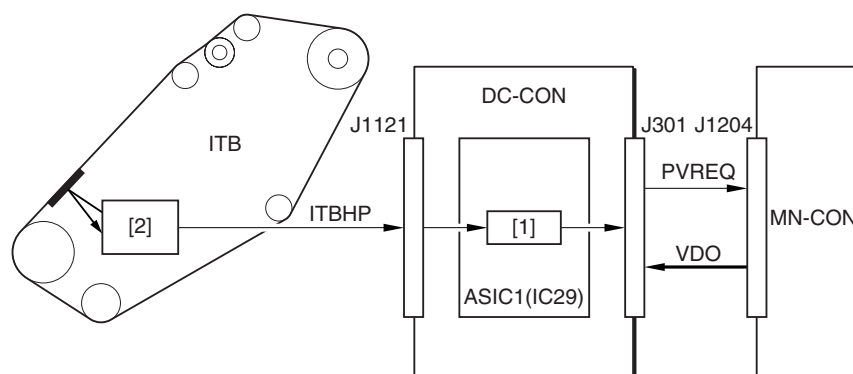

F-6-7

- 1) Sub scanning sync control circuit
 - 2) ITB home position sensor
- MN-CON: main controller PCB
DC-CON: DC controller PCB

Memo:

E100 (BD detention error)

- 0001 indicates that the BD signal is not detected a specific period of time after the scanner has started up.
- 0002 the BD signal is not detected while the scanner motor is rotating at a constant speed.


6.3.2 Controlling the Intensity of Laser Light

6.3.2.1 APC Control

0002-9878

The machine uses APC control to make sure that the intensity of laser light remains at a specific level by controlling the output of the laser diode of the laser driver.

For the control, the machine causes the DC controller to send the laser control signal (CNT0=1, CNT1=0) to the laser drive IC on the laser driver PCB. As a result, the laser drive IC is set to APC mode, thus forcing the laser diode (LD) to emit light. While the control is under way, the laser driver IC uses the photo diode (PD) to monitor the laser diode (LD), adjusting the output of the laser diode until a specific level of intensity is reached.

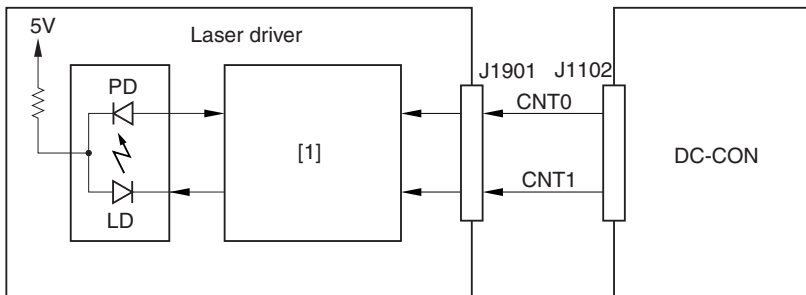

F-6-8

1) Laser driver IC1

DC-CON: DC controller

6.3.2.2 PWM Control


0002-9880

The machine uses PWM control to determine how long the laser unit must remain on to suit the image data coming from to the main controller PCB.

The length of time (see Memo) is determined by the DC controller PCB (16-step activation patterns for each pixel).

Memo:

The relationship between the length of laser activation and the density of the image is as follows. The machine exposes the light areas (non-image areas) and leaves the dark areas (image areas) as they are; further, the darker the image, the shorter the laser activation and, conversely, the lighter the image, the longer the laser activation.

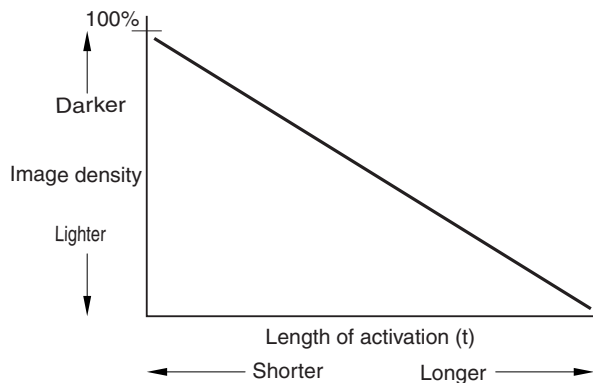

F-6-9

6.3.3 Controlling the Laser Scanner Motor


6.3.3.1 Controlling the Laser Scanner Motor

0002-9881

The machine controls the laser scanner motor so that the motor rotates at a specific speed using its motor speed control mechanism and reference signal generation mechanism found inside the DC controller PCB.

The motor speed control mechanism detects the speed detection signal (FG, BD), and compares it against the reference signal generated by the reference signal generation mechanism, thereby controlling the acceleration signal (ACC) and the deceleration signal (DECK) to make sure that the motor rotates at a specific speed.

The machine checks different references for speed detection to suit the state of the printer unit, ultimately reducing the length of time used to control the scanner motor speed. The FG signal is a detection signal used to roughly adjust the scanner motor speed, and it is used at power-on or during last rotation. The BD signal, on the other hand, is a detection signal used to finely adjust the motor speed, and it is used at time of printing.

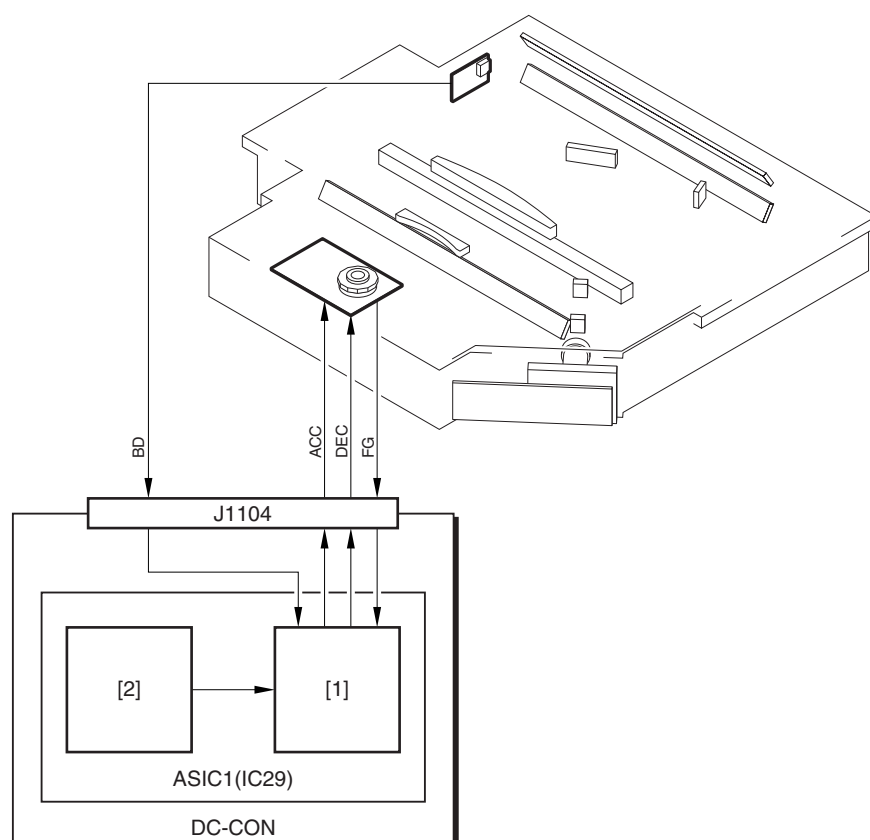

F-6-10

1. Motor speed control mechanisms
2. Reference signal generation mechanism

DC-CON: DC controller PCB

Memo:

E110 (scanner motor error)

-0001 the FG signal is not detected a specific period of time after the scanner motor starts up.

-0002 the FG signal is not detected while the scanner motor is rotating at a constant speed.



6.3.4 Controlling the Laser Shutter

6.3.4.1 Controlling the Laser Shutter

0002-9882

The machine is equipped with a mechanism to protect against exposure of its inside by laser light when the black toner assembly is opened. When the black toner hopper assembly is opened, the protrusion found on the hopper assembly releases the laser shutter, causing the laser shutter to close so that the laser path is closed.

If the DC controller PCB identifies the front cover, right cover, or black toner supply cover as being open, controller PCB forces the laser scanner motor and the laser unit to go off.

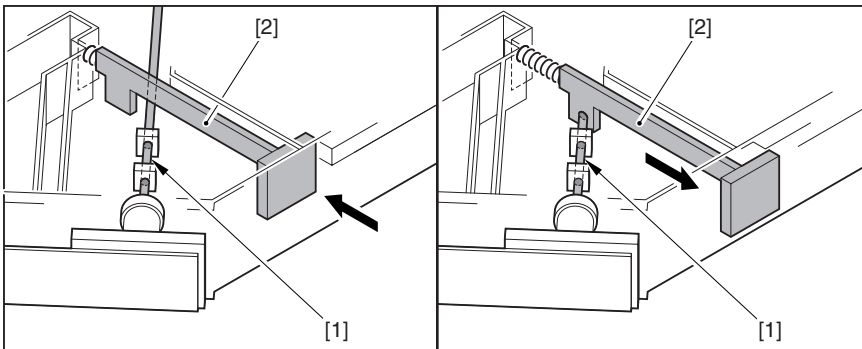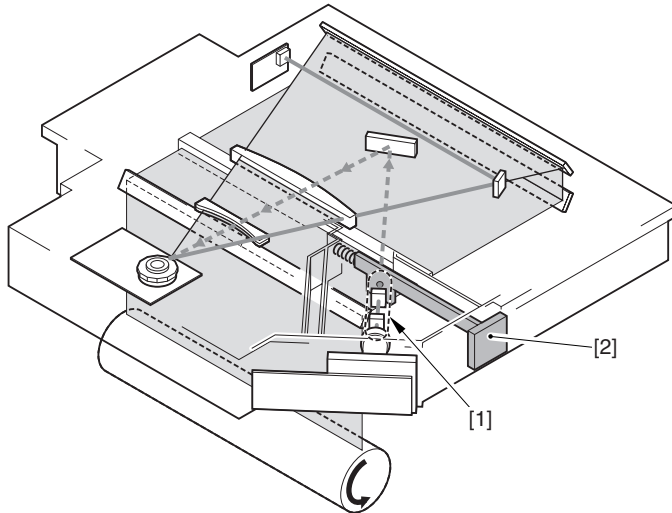

F-6-11

- 1) Laser light
- 2) Laser shutter

6.4 Parts Replacement Procedure


6.4.1 Laser Scanner Unit

6.4.1.1 Removing the Left

Cover (upper)

0003-8365

- 1) Remove the 3 screws [1], and detach the left cover (upper) [2].

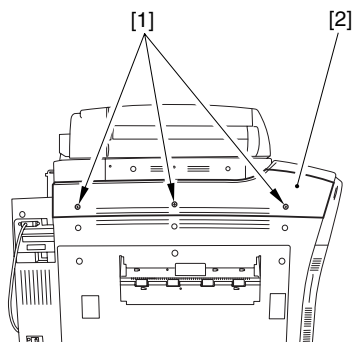


F-6-12

6.4.1.2 Removing the Delivery

Cover

0003-8366

- 1) Remove the 3 screws [1], and detach the delivery cover [2].

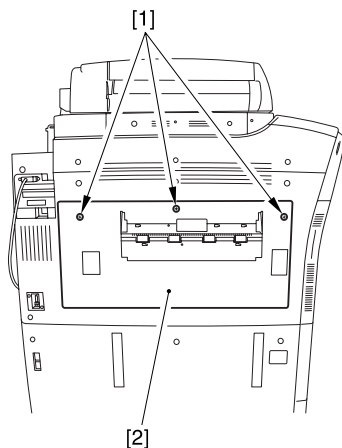


F-6-13

6.4.1.3 Removing the Left

Cover (middle)

0003-8367

- 1) Disconnect the connector [1].
- 2) Remove the 5 screws [2], and detach the left cover (middle) [3].

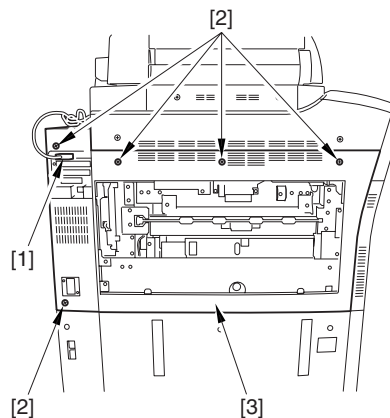


F-6-14

6.4.1.4 Removing the HV2

PCB


0003-8368

- 1) Disconnect the connector [1], and free the harness [2] from the cable guide [3].

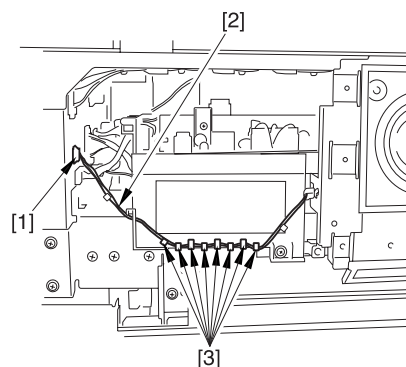


F-6-15

- 2) Remove the 3 screws [1], and detach the delivery cooling fan [2] together with its base.

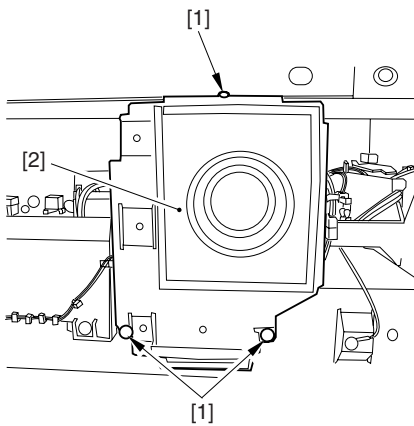

F-6-16

- 3) Disconnect the 5 connectors [1], and free the harness from the cable guide [3].
- 4) Remove the 2 screws [4], and detach the HV2 PCB [5].

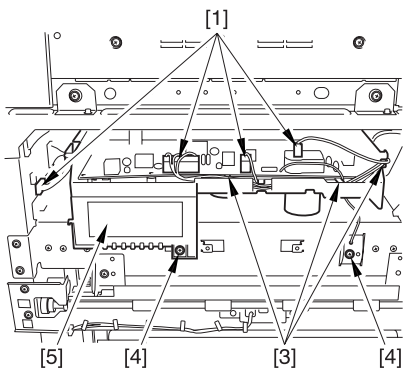


F-6-17

6.4.1.5 Removing the Laser Scanner Unit


0003-8369

- 1) Disconnect the connector [1], and open the wire guide [2].
- 2) Remove the 2 screws [3], and detach the 2 locking plates [4].

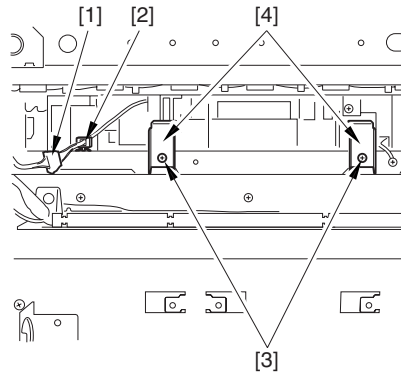


F-6-18

- 3) Remove the screw [1], and detach the grounding wire [2].
- 4) Open the wire guide [3], and free the harness [4].
- 5) Remove the 5 screws [5], and detach the laser driver cover [6].

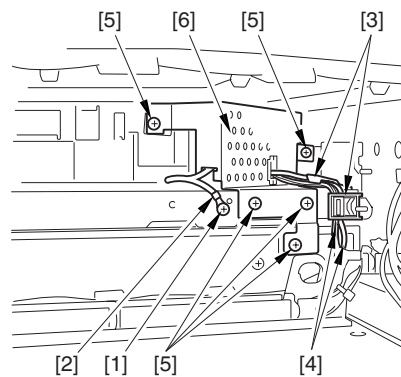

F-6-19

- 6) While lifting the area [A], slide out the laser scanner unit [1] slightly.
- 7) Disconnect the 2 connectors [2], and detach the laser scanner unit [1].

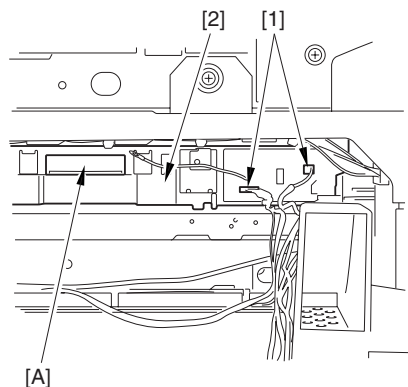


F-6-20

6.4.1.6 Points to Note When Replacing the Laser Scanner Unit


0003-8371

⚠ The laser scanner unit is equipped with a laser shutter [1].

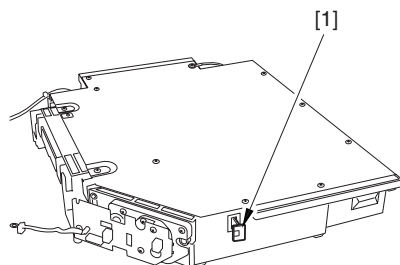

F-6-21

Moreover, the actuator [1] of the laser shutter is mounted to the hopper assembly.

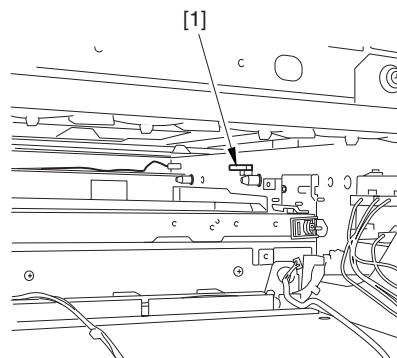

F-6-22

Be sure to keep the hopper assembly open when fitting the laser scanner unit into the machine so that the laser shutter will not interfere with the actuator.


After replacing the laser scanner unit, be sure to go through the following:

- 1) Make the following selections in service mode, and press the OK key: COPIER>FUNCTION>DPC>DPC.
- 2) Turn off and then on the main power switch.

6.4.1.7 Cleaning the Laser Scanner Unit


0005-3675

- 1) Remove the 2 screws [1], and detach the right cover (upper) [2].

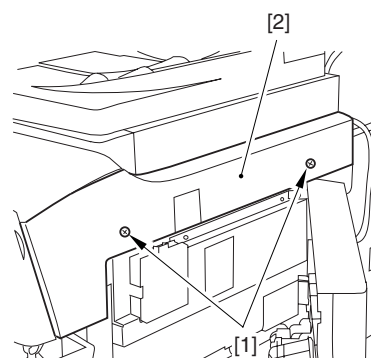

F-6-23


- 2) Open the front cover.
- 3) By pulling the grip [1] toward the front, fully open the manual feed cover [2].

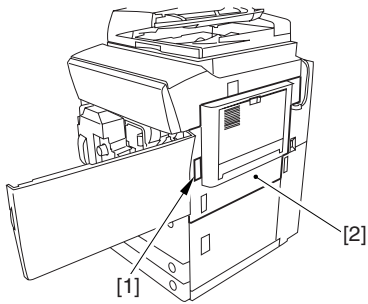

F-6-24




If the machine is equipped with a side paper deck, be sure to remove the 2 screws [1] and detach the latch plate (front) [2] to prevent damage to the surface of the front cover when the cover is released.

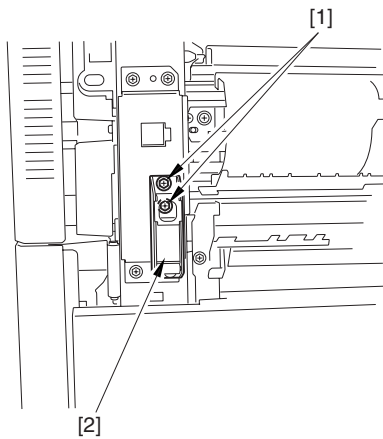


F-6-25

- 4) Slide out the fixing/feeding assembly.
- 5) Remove the 2 screws [1], and detach the process unit cover [2].

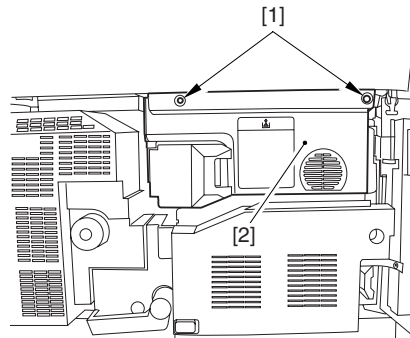


F-6-26

- 6) Push in the fixing/feeding assembly, and set the lever in position.
- 7) Press the release button [1] of the right deck, and slide out the right deck [2].

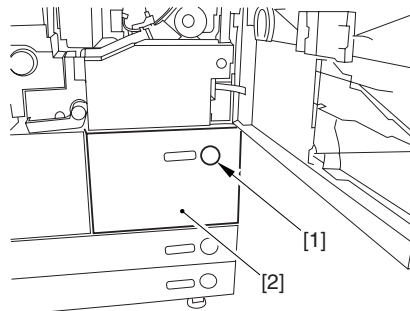


F-6-27

- 8) Remove the screw [1] from the lower right, and detach the front cover strap [2].

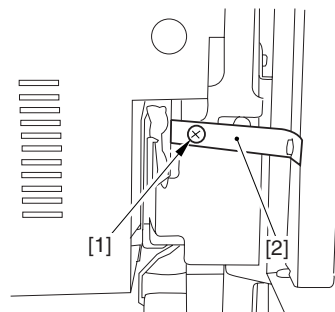

F-6-28


9) Remove the 2 screws [1] (binding) of the front cover hinge, and fully open the front cover [2].

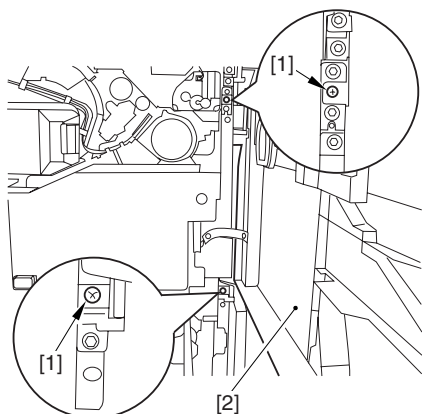

F-6-29


10) Close the right deck.

11) Open the black toner supply cover [1].

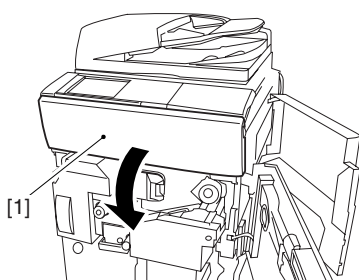


F-6-30

12) Shift down the lever [1], and detach the black toner bottle [2].

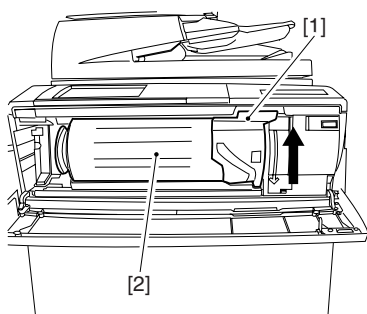


F-6-31

13) Remove the 3 screws [1].

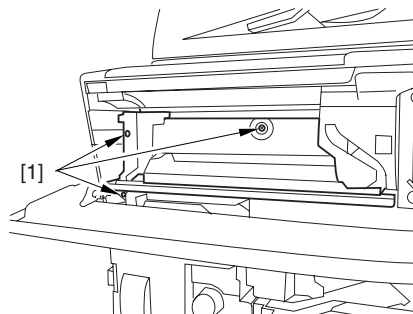


F-6-32

14) Close the black toner supply cover [1]; then, fully open the hopper assembly [2].

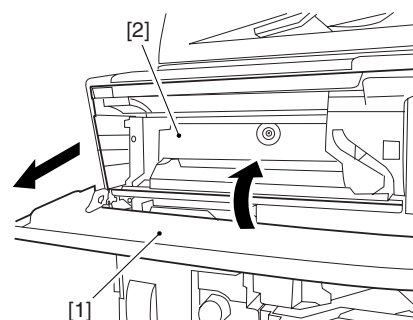


F-6-33

15) Slide out the grip [1] found on the edge of the dust-blocking glass to detach the glass for the machine.

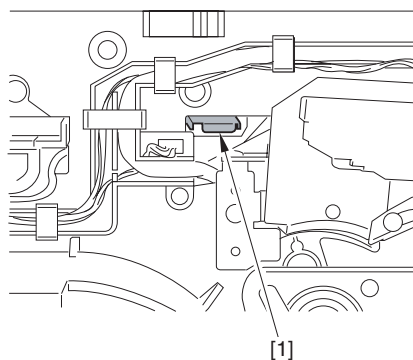


F-6-34

16) Disconnect the 5 connectors [1] from the upper right.

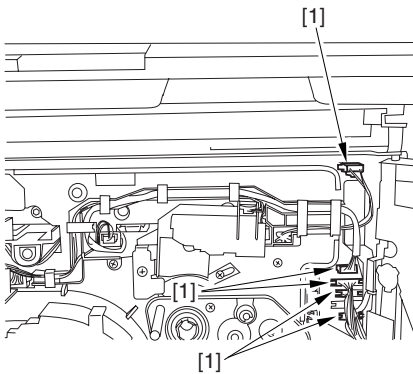


F-6-35

17) Disconnect the 5 connectors [1] from the upper left.

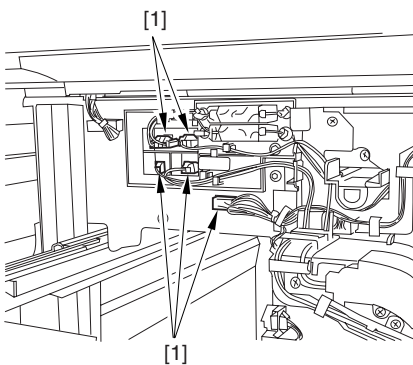


F-6-36

18) When you have freed the high-voltage connector cable [1] from the 2 wire saddles [2], be sure to keep it on the cable hook [3] to avoid trapping it during the work.

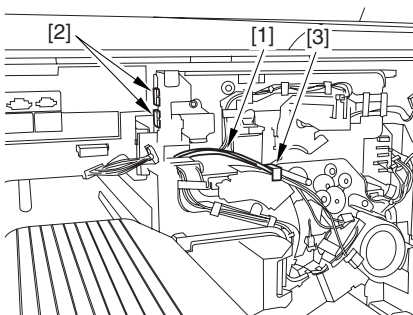

F-6-37

19) Take out the process unit cover [1] from the shipping box, and detach the drum stop tool [2] from the back of the cover.

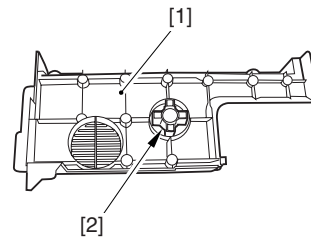


F-6-38

20) While forcing the drum stop tool [3] against the drum fixing member [2] of the drum shaft [1], remove the fixing screw [4].




Be sure to match the protrusion [5] of the drum fixing member and the protrusion [6] of the drum stop tool.

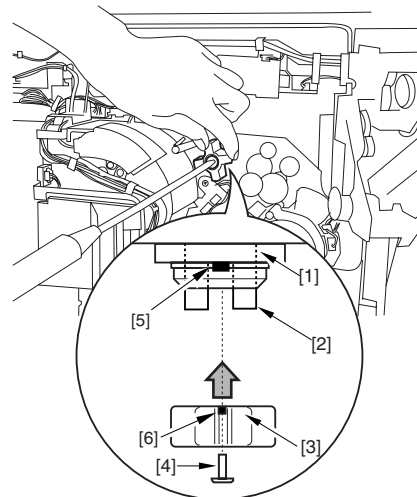


F-6-39

21) Using a pair of precision pliers, remove the drum fixing member [1].

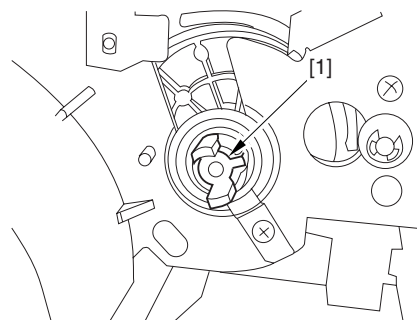


F-6-40

22) Remove the 3 binding screws (M4x8).

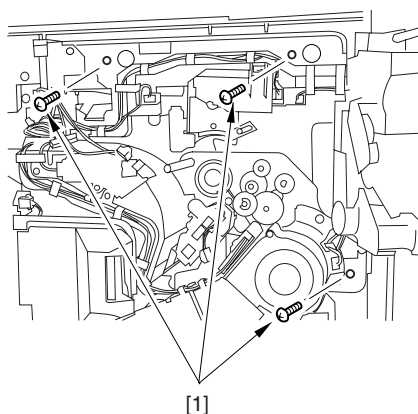


F-6-41

23) Shift down the fixing/feeding releasing lever [1] in the direction of the arrow.

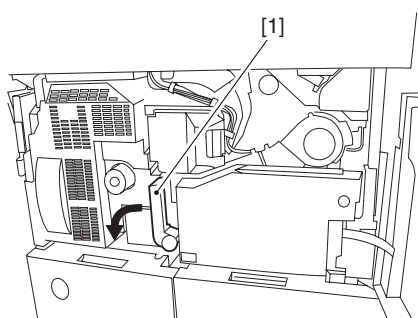


F-6-42

24) Slide out the fixing/feeding assembly [1].

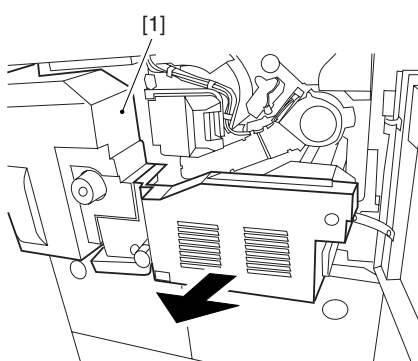


F-6-43

25) While pushing on the 2 hooks [1] found on both sides of the fixing/feeding assembly, fully slide out the fixing/feeding assembly [2].

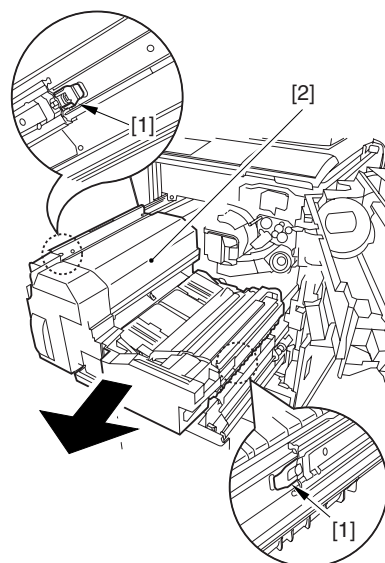


F-6-44

26) While lifting both ends [1] of the process unit slightly, fully slide out the process unit [2] to the front.

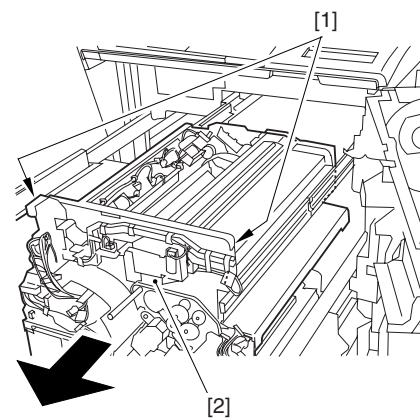

F-6-45


27) Remove the screw [1], and fully open the upper right cover [2].

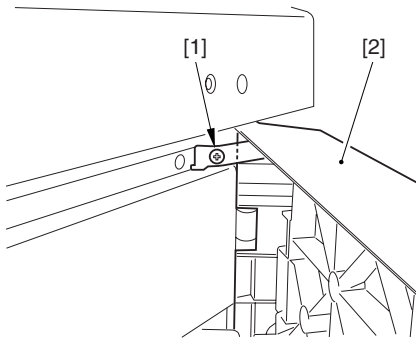

F-6-46

28) Remove the screw [1], and detach the filter retainer [2] and the filter [3].


29) Remove the screw [4], and detach the connector cover [5].

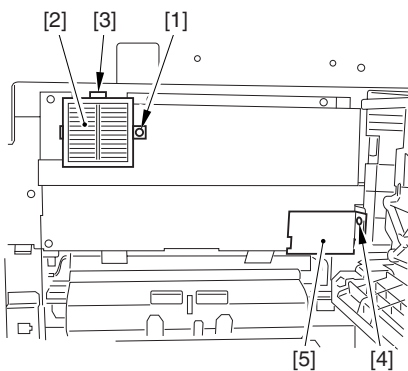

F-6-47


30) Remove the screw [1], and detach the grounding wire [2].

31) Remove the 5 screws [3], and detach the side plate [4].

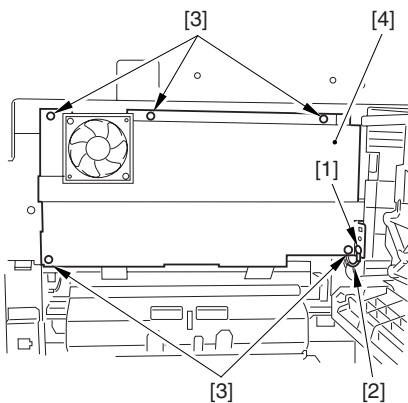

F-6-48


32) While holding the mirror cleaning tool [1] as shown, insert it into the slit [2].

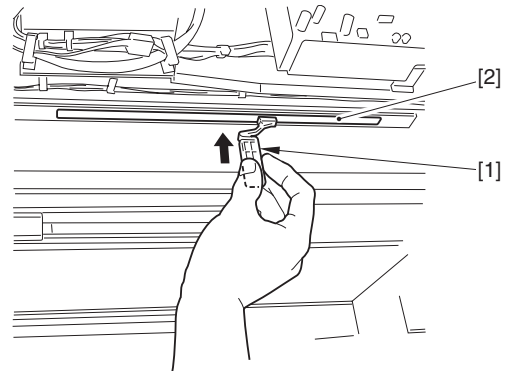

F-6-49

33) Turn the mirror cleaning tool [1] 90 deg clockwise as shown. (step 1)

34) Move the mirror cleaning tool [1] to the front and the rear as shown to clean the laser mirror [2]. (step 2)

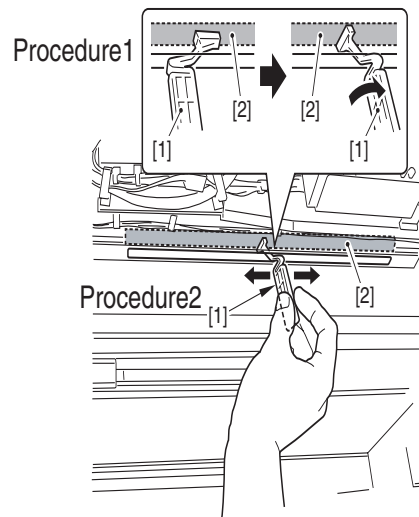

F-6-50

Chapter 7 Image Formation

Contents

7.1 Construction	7-1
7.1.1 Specifications of the Image Formation System.....	7-1
7.1.2 Major Components	7-4
7.1.3 Charging System	7-5
7.2 Image Formation Process	7-7
7.2.1 Image Formation Process	7-7
7.3 Basic Sequence.....	7-9
7.3.1 At Time of Power-On.....	7-9
7.3.2 During Copying/Printing (normal speed).....	7-10
7.3.3 During Copying/Printing (2/3 speed, 1/3 speed).....	7-10
7.4 Image Stabilization Control.....	7-11
7.4.1 Overview of Image Stabilization Control	7-11
7.4.2 Timing of Image Stabilization Control	7-12
7.4.3 Potential Control.....	7-15
7.4.4 ATVC Control.....	7-19
7.4.5 ATR Control.....	7-21
7.4.6 ACR Control (Auto Carrier Refresh Control).....	7-24
7.4.7 D-max Control.....	7-25
7.4.8 D-half Control	7-26
7.4.9 PASCAL control	7-29
7.5 Charging Mechanism.....	7-32
7.5.1 Controlling the Primary Charging Bias.....	7-32
7.5.2 Controlling the Primary Charging Assembly Cleaning Mechanism.....	7-33
7.5.3 Controlling the Pre-Transfer Charging Bias	7-34
7.5.4 Controlling the Pre-Transfer Charging Assembly Cleaning Mechanism	7-34
7.5.5 Pre-Exposure LED	7-36
7.6 Developing Rotary	7-37
7.6.1 Overview of the Developing Rotary	7-37
7.6.2 Controlling the Developing Rotary	7-38
7.7 Developing Unit	7-41
7.7.1 Construction of the Color Developing Assembly	7-41
7.7.2 Controlling the Color Developing Assembly Drive Mechanism	7-42
7.7.3 Controlling the Color Developing Bias.....	7-43
7.7.4 Color Toner Supply	7-44
7.7.5 Detecting the Level of Color Toner	7-45
7.7.6 Construction of the Black Developing Assembly	7-48
7.7.7 Controlling the Black Developing Assembly Drive Mechanism	7-49
7.7.8 Black Toner Supply.....	7-50
7.7.9 Controlling the Black Developing Bias.....	7-52
7.8 Transfer Device	7-53
7.8.1 Overview of the Transfer Assembly	7-53
7.8.2 Controlling the Transfer Bias.....	7-54
7.8.3 Overview of the Primary Transfer Assembly.....	7-56
7.8.4 Controlling the ITB Cleaner Shifting Mechanism	7-57
7.8.5 Checking the ITB Cleaner Position.....	7-58
7.8.6 Overview of the Secondary Transfer Assembly.....	7-59
7.8.7 Controlling the Movement of the Secondary Transfer Roller.....	7-60
7.8.8 Checking the Location of the Secondary Transfer Roller	7-61
7.8.9 Detecting the ITB Home Position	7-62
7.8.10 Separation.....	7-64

7.9 Photosensitive Drum Cleaning	7-65
7.9.1 Overview of the Drum Cleaning Unit	7-65
7.9.2 Controlling the Drum Cleaning Unit Drive Mechanism	7-66
7.10 Waste Toner Collection Mechanism	7-67
7.10.1 Collection of Waste Toner.....	7-67
7.10.2 Detecting the State of the Waste Toner Bottle (full)	7-68
7.11 Parts Replacement Procedure	7-71
7.11.1 Process Unit	7-71
7.11.1.1 Removing the Right Cover (upper)	7-71
7.11.1.2 Freeing the Front Cover.....	7-71
7.11.1.3 Releasing the Hopper Assembly.....	7-72
7.11.1.4 Removing the Pre-Transfer Charging Assembly.....	7-73
7.11.1.5 Removing the Transfer Cleaner Drive Assembly.....	7-73
7.11.1.6 Removing the Intermediate Transfer Unit.....	7-74
7.11.1.7 Cleaning the Surface of the Intermediate Transfer Unit.....	7-74
7.11.1.8 Removing the Process Unit.....	7-75
7.11.1.9 Points to Note When Mounting the Process Unit.....	7-78
7.11.2 Pre-exposure LED Array	7-78
7.11.2.1 Preventing Right Cover (upper).....	7-78
7.11.2.2 Freeing the Front Cover.....	7-78
7.11.2.3 Sliding Out the Process Unit.....	7-79
7.11.2.4 Releasing the Hopper Assembly.....	7-82
7.11.2.5 Removing the Primary Charging Assembly	7-83
7.11.2.6 Removing the Photosensitive Drum Cleaning Unit.....	7-83
7.11.2.7 Removing the Pre-Exposure LED Unit	7-84
7.11.3 Primary Charging Assembly.....	7-84
7.11.3.1 Removing the Right Cover (upper)	7-84
7.11.3.2 Freeing the Front Cover.....	7-84
7.11.3.3 Releasing the Hopper Assembly.....	7-85
7.11.3.4 Removing the Primary Charging Assembly	7-86
7.11.4 Primary Charging Assembly Cleaning Motor	7-86
7.11.4.1 Removing the Right Cover (upper)	7-86
7.11.4.2 Freeing the Front Cover.....	7-87
7.11.4.3 Releasing the Hopper Assembly.....	7-88
7.11.4.4 Removing the Primary Charging Assembly	7-89
7.11.4.5 Removing the Primary Charging Wire Cleaning Motor.....	7-89
7.11.5 Pre-transfer Charging Assembly.....	7-89
7.11.5.1 Removing the Pre-Transfer Charging Assembly.....	7-89
7.11.6 Pre-transfer Charging Assembly Cleaning Motor	7-90
7.11.6.1 Removing the Pre-Transfer Charging Assembly.....	7-90
7.11.6.2 Removing the Pre-Transfer Charging Wire Cleaning Motor	7-90
7.11.7 Photosensitive Drum Cleaning Unit	7-90
7.11.7.1 Removing the Right Cover (upper)	7-90
7.11.7.2 Freeing the Front Cover.....	7-91
7.11.7.3 Releasing the Hopper Assembly.....	7-92
7.11.7.4 Sliding Out the Process Unit.....	7-93
7.11.7.5 Removing the Primary Charging Assembly	7-95
7.11.7.6 Removing the Photosensitive Drum Cleaning Unit.....	7-95
7.11.7.7 Points to Note When Mounting the Photosensitive Drum Cleaning Unit	7-96
7.11.8 Photosensitive Drum.....	7-96
7.11.8.1 Removing the Right Color (upper)	7-96
7.11.8.2 Releasing the Front Cover	7-96
7.11.8.3 Releasing the Hopper Assembly.....	7-97
7.11.8.4 Removing the Pre-Transfer Charging Assembly.....	7-98

7.11.8.5 Removing the Transfer Charging Drive Assembly	7-98
7.11.8.6 Removing the Intermediate Transfer Unit.....	7-99
7.11.8.7 Cleaning the Surface of the Intermediate Transfer Unit	7-100
7.11.8.8 Sliding Out the Process Unit	7-101
7.11.8.9 Removing the Primary Charging Assembly	7-104
7.11.8.10 Removing the Photosensitive Drum Cleaning Unit	7-104
7.11.8.11 Removing the Black Developing Unit	7-105
7.11.8.12 Removing the Photosensitive Drum.....	7-106
7.11.8.13 Replacing the Photosensitive Drum	7-107
7.11.9 Drum Motor.....	7-108
7.11.9.1 Removing the Rear Cover (upper)	7-108
7.11.9.2 Removing the Rear Cover (lower)	7-108
7.11.9.3 Removing the Right Cover (upper rear).....	7-108
7.11.9.4 Sliding the DC Controller Box	7-109
7.11.9.5 Removing the DC Controller Box.....	7-109
7.11.9.6 Points to Note When Mounting the DC Controller Box	7-110
7.11.9.7 Removing the Drum Motor	7-110
7.11.10 Drum Heater	7-111
7.11.10.1 Removing the Right Cover (upper)	7-111
7.11.10.2 Releasing the Front Cover	7-111
7.11.10.3 Releasing the Hopper Assembly	7-112
7.11.10.4 Removing the Pre-Transfer Charging Assembly	7-113
7.11.10.5 Removing the Transfer Cleaner Drive Assembly	7-113
7.11.10.6 Removing the Intermediate Transfer Unit.....	7-114
7.11.10.7 Cleaning the Surface of the Intermediate Transfer Unit	7-114
7.11.10.8 Sliding Out the Process Unit	7-115
7.11.10.9 Removing the Primary Charging Assembly.....	7-118
7.11.10.10 Removing the Photosensitive Drum Cleaning Unit	7-118
7.11.10.11 Removing the Black Developing Unit	7-119
7.11.10.12 Removing the Photosensitive Drum.....	7-120
7.11.10.13 Points to Note When Mounting the Photosensitive Drum	7-121
7.11.10.14 Points to Note When Replacing the Drum Heater.....	7-121
7.11.10.15 Removing the Drum Heater.....	7-122
7.11.11 Drum Heater PCB	7-123
7.11.11.1 Removing the Right Cover (upper)	7-123
7.11.11.2 Releasing the Front Cover	7-123
7.11.11.3 Releasing the Hopper Assembly	7-124
7.11.11.4 Removing the Pre-Transfer Charging Assembly	7-125
7.11.11.5 Removing the Transfer Cleaner Drive Assembly	7-125
7.11.11.6 Removing the Intermediate Transfer Unit.....	7-126
7.11.11.7 Cleaning the Surface of the Intermediate Transfer Unit	7-126
7.11.11.8 Sliding Out the Process Unit	7-127
7.11.11.9 Removing the Primary Charging Assembly.....	7-130
7.11.11.10 Removing the Photosensitive Drum Cleaning Unit	7-130
7.11.11.11 Removing the Black Developing Unit	7-131
7.11.11.12 Removing the Photosensitive Drum.....	7-132
7.11.11.13 Points to Note When Mounting the Photosensitive Drum	7-133
7.11.11.14 Removing the Drum Heater.....	7-134
7.11.11.15 Removing the Drum Heater PCB.....	7-134
7.11.11.16 Points to Note When Replacing the Drum Heater PCB	7-135
7.11.12 Photosensitive Drum Cleaning Blade.....	7-136
7.11.12.1 Removing the Right Cover (upper)	7-136
7.11.12.2 Releasing the Front Cover	7-136
7.11.12.3 Releasing the Hopper Assembly	7-137

7.11.12.4 Sliding Out the Process Unit.....	7-138
7.11.12.5 Removing the Primary Charging Assembly	7-141
7.11.12.6 Removing the Photosensitive Drum Cleaning Unit.....	7-141
7.11.12.7 Removing the Photosensitive Drum Cleaning Blade	7-142
7.11.12.8 Points to Note When Replacing the Photosensitive Drum Cleaning Blade	7-142
7.11.13 Photosensitive Drum Cleaner Edge Scraper.....	7-143
7.11.13.1 Removing the Right Cover (upper)	7-143
7.11.13.2 Releasing the Front Cover	7-143
7.11.13.3 Releasing the Hopper Assembly.....	7-144
7.11.13.4 Sliding Out the Process Unit.....	7-145
7.11.13.5 Removing the Primary Charging Assembly	7-148
7.11.13.6 Removing the Photosensitive Drum Cleaning Unit.....	7-148
7.11.13.7 Removing the Photosensitive Drum Cleaner End Scraper	7-149
7.11.14 Hopper Assembly	7-149
7.11.14.1 Removing the Right Cover (upper)	7-149
7.11.14.2 Releasing the Front Cover	7-149
7.11.14.3 Releasing the Hopper Assembly.....	7-150
7.11.14.4 Removing the Hopper Assembly.....	7-151
7.11.15 Hopper Supply Motor	7-151
7.11.15.1 Removing the Right Cover (upper)	7-151
7.11.15.2 Releasing the Front Cover	7-152
7.11.15.3 Releasing the Hopper Assembly.....	7-153
7.11.15.4 Removing the hopper Assembly.....	7-153
7.11.15.5 Removing the Black Toner Supply Motor.....	7-154
7.11.16 Hopper Stringing Motor	7-154
7.11.16.1 Removing the Right Cover (upper)	7-154
7.11.16.2 Releasing the Front Cover	7-155
7.11.16.3 Releasing the Hopper Assembly.....	7-156
7.11.16.4 Removing the Hopper Assembly.....	7-156
7.11.16.5 Removing the Hopper Stirring Motor.....	7-157
7.11.17 Color Developing Assembly.....	7-157
7.11.17.1 Removing the Right Cover (upper)	7-157
7.11.17.2 Releasing the Front Cover	7-157
7.11.17.3 Releasing the Hopper Assembly.....	7-158
7.11.17.4 Sliding Out the Process Unit.....	7-159
7.11.17.5 Removing the Black Developing Unit.....	7-162
7.11.17.6 Removing the Color Developing Unit.....	7-163
7.11.17.7 When Replacing the Color Developing Unit.....	7-165
7.11.17.8 Replacing the Starter of the Color Developing Unit.....	7-167
7.11.18 Black Developing Assembly	7-169
7.11.18.1 Removing the Right Cover (upper)	7-169
7.11.18.2 Releasing the Front Cover	7-169
7.11.18.3 Releasing the Hopper Assembly.....	7-171
7.11.18.4 Sliding Out the Process Unit.....	7-171
7.11.18.5 Removing the Black Developing Unit.....	7-174
7.11.18.6 Points to Note About Replacing the Black Developing Unit	7-176
7.11.19 Black Developing Cylinder	7-177
7.11.19.1 Removing the Right Cover (upper)	7-177
7.11.19.2 Releasing the Front Cover	7-177
7.11.19.3 Releasing the Hopper Assembly.....	7-179
7.11.19.4 Sliding Out the Process Unit.....	7-179
7.11.19.5 Removing the Black Developing Unit.....	7-182
7.11.19.6 Removing the Black Developing Cylinder.....	7-184
7.11.19.7 Points to Note When Handling the Black Developing Cylinder	7-185
7.11.19.8 Points to Note When Mounting the Polarity Positioning Plate	7-185

7.11.20 Black Developing Clutch	7-186
7.11.20.1 Remove the Rear Cover (upper).....	7-186
7.11.20.2 Removing the Right Cover (upper rear).....	7-186
7.11.20.3 Sliding the DC Controller Box	7-186
7.11.20.4 Removing the DC Controller Box.....	7-187
7.11.20.5 Points to Note When Mounting the DC Controller Box	7-187
7.11.20.6 Removing the Black Developing Clutch.....	7-188
7.11.21 Color Toner Supply Clutch	7-189
7.11.21.1 Removing the Rear Cover (upper)	7-189
7.11.21.2 Removing the Right Cover (upper rear).....	7-189
7.11.21.3 Sliding the DC Controller Box	7-189
7.11.21.4 Removing the DC Controller Box.....	7-190
7.11.21.5 Points to Note When Mounting the DC Controller Box	7-190
7.11.21.6 Removing the Color Toner Supply Clutch.....	7-190
7.11.22 Color Developing Clutch.....	7-191
7.11.22.1 Removing the Rear Cover (upper)	7-191
7.11.22.2 Removing the Right Cover (upper rear).....	7-192
7.11.22.3 Sliding the DC Controller Box	7-192
7.11.22.4 Removing the DC Controller Box.....	7-193
7.11.22.5 Points to Note When Mounting the DC Controller Box	7-193
7.11.22.6 Removing the Color Developing Clutch	7-194
7.11.23 Cleaning Assembly Scoop-Up Sheet	7-195
7.11.23.1 Removing the Right Cover (upper).....	7-195
7.11.23.2 Releasing the Front Cover	7-195
7.11.23.3 Releasing the Hopper Assembly	7-196
7.11.23.4 Removing the Pre-Transfer Charging Assembly	7-197
7.11.23.5 Removing the Transfer Cleaning Drive Assembly	7-197
7.11.23.6 Removing the Intermediate Transfer Unit.....	7-198
7.11.23.7 Cleaning the Surface of the Intermediate Transfer Unit	7-198
7.11.23.8 Sliding Out the Process Unit	7-199
7.11.23.9 Removing the Photosensitive Drum Cleaning Scoop-Up Sheet	7-202
7.11.23.10 Mounting the Photosensitive Drum Cleaner Scoop-Up Sheet	7-202
7.11.24 Secondary Transfer Unit	7-202
7.11.24.1 Removing the Secondary Transfer Unit.....	7-202
7.11.25 ITB Cleaning Unit	7-203
7.11.25.1 Removing the Right Cover (upper).....	7-203
7.11.25.2 Releasing the Front Cover	7-204
7.11.25.3 Releasing the Hopper Assembly	7-205
7.11.25.4 Removing the Pre-Transfer Charging Assembly	7-205
7.11.25.5 Removing the Transfer Cleaning Drive Assembly	7-206
7.11.25.6 Removing the Intermediate Transfer Unit.....	7-206
7.11.25.7 Cleaning the Surface of the Intermediate Transfer Unit	7-207
7.11.25.8 Removing the ITB Cleaning Unit.....	7-208
7.11.26 ITB Cleaner End Scraper	7-209
7.11.26.1 Removing the Right Cover (upper).....	7-209
7.11.26.2 Releasing the Front Cover	7-209
7.11.26.3 Releasing the Hopper Assembly	7-210
7.11.26.4 Removing the Pre-Transfer Charging Assembly	7-211
7.11.26.5 Removing the Transfer Cleaning Drive Assembly	7-211
7.11.26.6 Removing the Intermediate Transfer Unit.....	7-212
7.11.26.7 Cleaning the Surface of the Intermediate Transfer Unit	7-212
7.11.26.8 Removing the ITB Cleaning Unit.....	7-213
7.11.26.9 Removing the ITB Cleaner End Scraper.....	7-214
7.11.26.10 Mounting the ITB Cleaner End Scraper	7-214

7.11.27 Intermediate Transfer Unit	7-214
7.11.27.1 Removing the Right Cover (upper)	7-214
7.11.27.2 Releasing the Front Cover	7-214
7.11.27.3 Releasing the Hopper Assembly	7-215
7.11.27.4 Removing the Pre-Transfer Charging Assembly	7-216
7.11.27.5 Removing the Transfer Cleaner Drive Assembly	7-216
7.11.27.6 Removing the Intermediate Transfer Unit	7-217
7.11.27.7 Cleaning the Surface of the Intermediate Transfer Unit	7-218
7.11.27.8 Points to Note When Replacing the Intermediate Transfer Unit	7-219
7.11.28 Intermediate Transfer Belt	7-219
7.11.28.1 Removing the Right Cover (upper)	7-219
7.11.28.2 Releasing the Front Cover	7-219
7.11.28.3 Releasing the Hopper Assembly	7-220
7.11.28.4 Removing the Pre-Transfer Charging Assembly	7-221
7.11.28.5 Removing the Transfer Cleaning Drive Assembly	7-221
7.11.28.6 Removing the Intermediate Transfer Unit	7-222
7.11.28.7 Removing the ITB Cleaning Unit	7-222
7.11.28.8 Removing the Patch Image Reading Unit	7-223
7.11.28.9 Removing the Idler Roller	7-223
7.11.28.10 Removing the ITB	7-224
7.11.28.11 Points to Note When Attaching the ITB	7-224
7.11.29 ITB Home Position Sensor PCB	7-225
7.11.29.1 Removing the ITB Home Position Sensor (right, left)	7-225
7.11.30 Secondary Transfer Roller Shift Motor	7-225
7.11.30.1 Secondary Transfer Roller Shift Motor	7-225
7.11.31 Primary Transfer Roller	7-226
7.11.31.1 Removing the Right Cover (upper)	7-226
7.11.31.2 Releasing the Front Cover	7-226
7.11.31.3 Releasing the Hopper Assembly	7-227
7.11.31.4 Removing the Pre-Transfer Charging Assembly	7-228
7.11.31.5 Removing the Transfer Cleaner Drive Assembly	7-228
7.11.31.6 Removing the Intermediate Transfer Unit	7-229
7.11.31.7 Cleaning the Surface of the Intermediate Transfer Unit	7-229
7.11.31.8 Removing the ITB Cleaning Unit	7-230
7.11.31.9 Removing the Patch Image Reading Unit	7-230
7.11.31.10 Removing the Idler Roller	7-231
7.11.31.11 Removing the ITB	7-232
7.11.31.12 Removing the Primary Transfer Roller	7-232
7.11.31.13 Points to Note When Replacing the Primary Transfer Roller	7-232
7.11.32 Secondary Transfer Internal Roller	7-234
7.11.32.1 Removing the Right Cover (upper)	7-234
7.11.32.2 Releasing the Front Cover	7-234
7.11.32.3 Releasing the Hopper Assembly	7-235
7.11.32.4 Removing the Pre-Transfer Charging Assembly	7-236
7.11.32.5 Removing the Transfer Cleaner Drive Assembly	7-236
7.11.32.6 Removing the Intermediate Transfer Unit	7-237
7.11.32.7 Cleaning the Surface of the Intermediate Transfer Unit	7-237
7.11.32.8 Removing the ITB Cleaning Unit	7-238
7.11.32.9 Removing the Patch Image Reading Unit	7-239
7.11.32.10 Removing the Idler Roller	7-239
7.11.32.11 Removing the ITB	7-240
7.11.32.12 Removing the Secondary Transfer Inside Roller	7-240
7.11.33 Secondary Transfer Roller	7-240
7.11.33.1 Removing the Secondary Transfer Unit	7-240

7.11.33.2 Removing the Secondary Transfer Static Eliminator Holder.....	7-241
7.11.33.3 Removing the Secondary Transfer Roller	7-242
7.11.34 ITB Cleaning Blade.....	7-242
7.11.34.1 Removing the Right Cover (upper)	7-242
7.11.34.2 Releasing the Front Cover	7-242
7.11.34.3 Releasing the Hopper Assembly	7-243
7.11.34.4 Removing the Pre-Transfer Charging Assembly	7-244
7.11.34.5 Removing the Transfer Cleaner Drive Assembly	7-244
7.11.34.6 Removing the Intermediate Transfer Unit.....	7-245
7.11.34.7 Cleaning the Surface of the Intermediate Transfer Unit	7-246
7.11.34.8 Removing the ITB Cleaning Unit.....	7-247
7.11.34.9 Remove the ITB Cleaning Blade.....	7-247
7.11.34.10 When Replacing the ITB Cleaning Blade	7-247
7.11.35 ITB Scoop-up Sheet	7-249
7.11.35.1 Removing the Right Cover (upper)	7-249
7.11.35.2 Releasing the Front Cover	7-249
7.11.35.3 Releasing the Hopper Assembly	7-250
7.11.35.4 Removing the Pre-Transfer Charging Assembly	7-251
7.11.35.5 Removing the Transfer Cleaner Drive Assembly	7-251
7.11.35.6 Removing the Intermediate Transfer Unit.....	7-252
7.11.35.7 Cleaning the Surface of the Intermediate Transfer Unit	7-252
7.11.35.8 Removing the ITB Cleaning Unit.....	7-253
7.11.35.9 Removing the ITB Scoop-Up Sheet.....	7-253
7.11.36 Intermediate Transfer Belt Static Eliminator	7-254
7.11.36.1 Removing the Right Cover (upper)	7-254
7.11.36.2 Releasing the Front Cover	7-254
7.11.36.3 Releasing the Hopper Assembly	7-255
7.11.36.4 Removing the Pre-Transfer Charging Assembly	7-256
7.11.36.5 Removing the Transfer Cleaner Drive Assembly	7-256
7.11.36.6 Removing the Intermediate Transfer Unit.....	7-257
7.11.36.7 Cleaning the Surface of the Intermediate Transfer Unit	7-257
7.11.36.8 Removing the ITB Cleaning Unit.....	7-258
7.11.36.9 Removing the Patch Image Reading Unit	7-258
7.11.36.10 Removing the Idler Roller	7-259
7.11.36.11 Removing the ITB	7-260
7.11.36.12 Removing the ITB Static Eliminator	7-260
7.11.37 Secondary Transfer Static Eliminator	7-260
7.11.37.1 Removing the Secondary Transfer Static Eliminator Holder.....	7-260
7.11.38 Pntial Sensor Unit.....	7-261
7.11.38.1 Outline.....	7-261
7.11.38.2 Removing the Potential Control PCB	7-261
7.11.38.3 Removing the Right Cover (upper)	7-261
7.11.38.4 Releasing the Front Cover	7-262
7.11.38.5 Releasing the Hopper Assembly	7-263
7.11.38.6 Sliding Out the Process Unit	7-263
7.11.38.7 Removing the Black Developing Unit	7-266
7.11.38.8 Removing the Potential Sensor	7-268
7.11.39 ATR Sensor Unit	7-268
7.11.39.1 Removing the Right Cover (upper)	7-268
7.11.39.2 Releasing the Front Cover	7-268
7.11.39.3 Releasing the Hopper Assembly	7-269
7.11.39.4 Sliding Out the Process Unit	7-270
7.11.39.5 Removing the Black Developing Unit	7-273
7.11.39.6 Removing the ATR Sensor Unit.....	7-274

7.11.40 Patch Image Sensor.....	7-274
7.11.40.1 Removing the Right Cover (upper)	7-274
7.11.40.2 Releasing the Front Cover	7-275
7.11.40.3 Releasing the Hopper Assembly.....	7-276
7.11.40.4 Removing the Pre-Transfer Charging Assembly.....	7-276
7.11.40.5 Removing the Transfer Cleaner Drive Assembly.....	7-277
7.11.40.6 Removing the Intermediate Transfer Unit.....	7-277
7.11.40.7 Cleaning the Surface of the Intermediate Transfer Unit.....	7-278
7.11.40.8 Removing the ITB Cleaning Unit.....	7-279
7.11.40.9 Removing the Patch Image Reading Unit.....	7-279
7.11.40.10 Removing the Patch Image Reading Sensor.....	7-280
7.11.41 Idle Roller.....	7-280
7.11.41.1 Removing the Right Cover (upper)	7-280
7.11.41.2 Releasing the Front Cover	7-280
7.11.41.3 Removing the Hopper Assembly.....	7-281
7.11.41.4 Removing the Pre-Transfer Charging Assembly.....	7-282
7.11.41.5 Removing Transfer Cleaner Drive Assembly.....	7-282
7.11.41.6 Remove the Intermediate Transfer Unit	7-283
7.11.41.7 Cleaning the Surface of the Intermediate Transfer Unit.....	7-284
7.11.41.8 Removing the ITB Cleaning Unit.....	7-285
7.11.41.9 Remove the Patch Image Reading Unit.....	7-285
7.11.41.10 Removing the Idler Roller	7-286
7.11.41.11 Remove the Idler Roller.....	7-286
7.11.42 Patch Image Reading Sensor Shutter Solenoid	7-287
7.11.42.1 Remove the Right Cover (upper).....	7-287
7.11.42.2 Releasing the Front Cover	7-287
7.11.42.3 Releasing the Hopper Assembly.....	7-288
7.11.42.4 Removing the Pre-Transfer Charging Assembly.....	7-289
7.11.42.5 Removing the Transfer Cleaner Drive Assembly.....	7-289
7.11.42.6 Removing the Intermediate Transfer Unit.....	7-290
7.11.42.7 Cleaning the Surface of the Intermediate Transfer Unit.....	7-290
7.11.42.8 Removing the ITB Cleaning Unit.....	7-291
7.11.42.9 Removing the Patch Image Reading Unit.....	7-292
7.11.42.10 Removing the Patch Image Reading Sensor Shutter Solenoid.....	7-292
7.11.43 Charging Wire	7-293
7.11.43.1 Outline	7-293
7.11.43.2 Removing the Wire Cleaner of the Primary Charging Assembly	7-293
7.11.43.3 Stringing the Charging Wires	7-293
7.11.43.4 Stringing the Grid	7-294
7.11.43.5 Adjusting the Primary Charging Wire.....	7-295

7.1 Construction

7.1.1 Specifications of the Image Formation System

0002-9938

T-7-1

Drum Unit

Photosensitive drum

Type of drum A-Si

Diameter of drum 84 mm

Cleaning mechanism by blade (in contact)

Speed of process 276 mm/sec

T-7-2

Primary Charging Assembly

Method of charging by corona

Method of cleaning wire auto cleaning

T-7-3

Pre-Exposure system

Method of exposure by LED array

T-7-4

Mono Color Developing Assembly

Diameter of developing cylinder 24.5 mm

Method of development dry, 1-component

Toner magnetic, negative

Toner level detection inside developing assembly yes

Mono Color Developing Assembly

T-7-5

Color Developing Assembly

Diameter of developing cylinder	20 mm
Method of development	dry, 2-component
Toner	non-magnetic, negative
Toner level detection inside developing assembly	no

T-7-6

Toner Cartridge

Toner level detection (mono color)	by piezoelectric oscillator sensor
Toner level detection (color)	by optical sensor
Toner amount*	Y: 210g (approx.) M: 210g (approx.) C: 210g (approx.) Bk: 2000g (Bk)

*If color, indicates the amount of developer (toner + carrier).

T-7-7

Intermediate Transfer Assembly

Component	intermediate transfer belt (ITB)
Source of drive	by drum/ITB motor
Cleaning mechanism	by blade (in contact)

T-7-8

Feed speed	Mode	Paper type
276 mm/sec	mono color	plain paper, transparency
	color	plain paper
184 mm/sec	color	heavy paper 1 (105 to 163 g)
92 mm/sec	color	heavy paper 2 (163 g or more), transparency

T-7-9

Pre-Transfer Charging Assembly

Method of charging	by corona
Method of cleaning	wire auto cleaning

T-7-10


Image Stabilization Control

Item	Description
Dmax control	determines best developing bias
ATR control	determines toner supply amount
ATVC control	determines best transfer bias level
Potential control	determines best primary grid bias level
Dhalf control	determines best gradation control (printer)
PASCAL control	determines best gradation table (printer + reader)

7.1.2 Major Components

0003-1029

The following shows the major components associated with the machine's image formation system:

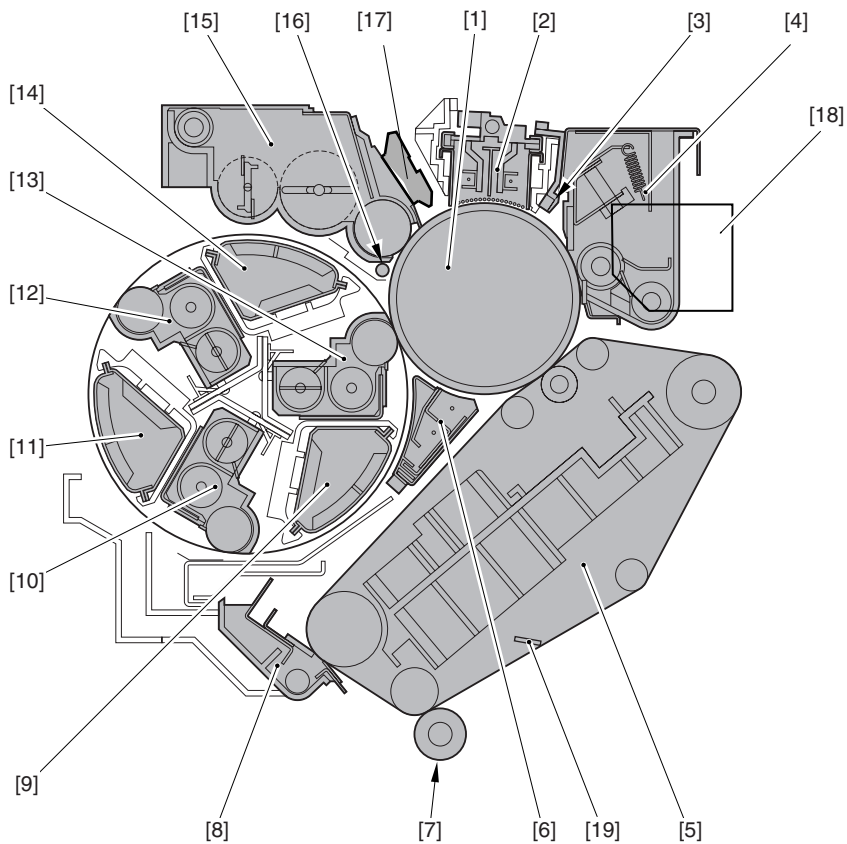

F-7-1

- 1 Photosensitive drum
- 2 Primary charging assembly
- 3 Pre-exposure LED
- 4 Drum cleaner assembly
- 5 ITB unit
- 6 Pre-transfer charging assembly
- 7 Secondary transfer outsider roller
- 8 ITB cleaner assembly
- 9 Color toner cartridge (Y)
- 10 Color developing assembly (Y)
- 11 Color toner cartridge (C)
- 12 Color developing assembly (C)
- 13 Color developing assembly (M)
- 14 Color toner cartridge (M)
- 15 Black developing assembly
- 16 Toner collection roller
- 17 Potential sensor
- 18 Black toner hopper
- 19 ITB inside cleaner end scraper

7.1.3 Charging System

0003-1030

Primary Charging Bias

method of charging: by corona

target of charging: primary charging wire

DC bias level: 6.5kV (1400yA)

Grid Bias

method of charging: by corona

target of charging: grid wire

DC bias level: 800V

Color Developing Bias

method of charging: by roller

target of charging: color developing cylinder

AC bias level: 1.8kV (Vp-p)

DC bias level: 300V

Black Developing Bias

method of charging: by roller

target of charging: black developing cylinder

AC bias level: 1.7kV (p-p)

DC bias level: 290V

Stray Toner Collection Roller Bias

method of charging: by roller

target of charging: toner collection roller

DC bias level: -1.0kV

Pre-Transfer Charging Bias

method of charging: by corona

target of charging: pre-transfer charging wire

AC bias level: 8.3kV (Vp-p)

DC bias level: -1.8kV (-300yA)

Primary Transfer Bias

method of charging: by corona

target of charging: primary transfer roller

DC bias level: 1.0kV

Primary Transfer Static Eliminator Bias

method of charging: charging

target of charging: primary transfer static eliminator


DC bias level: -4.0kV

Secondary Transfer Bias

method of charging: roller charging

target of charging: secondary transfer roller

DC bias level: 3.0kV (at time of cleaning, -3.0kV)

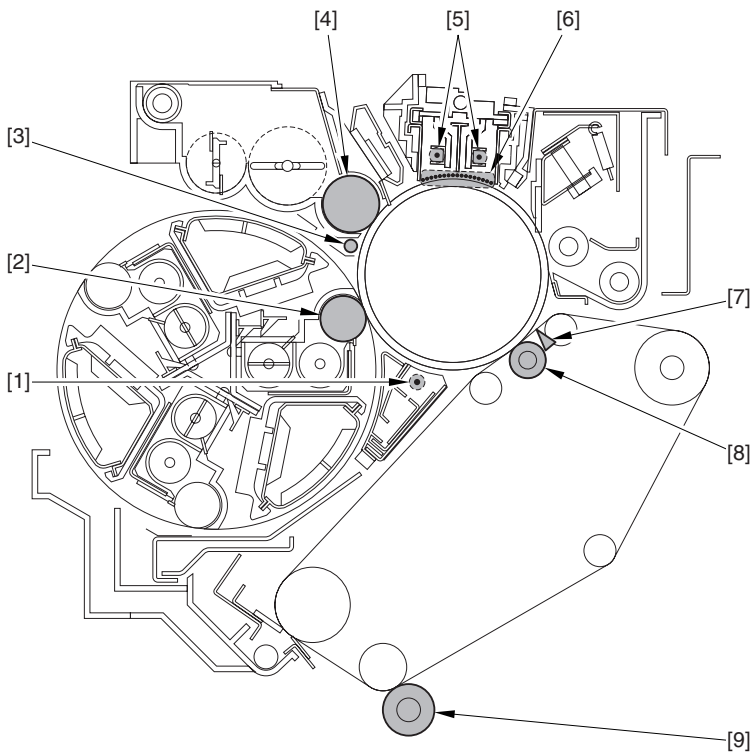

F-7-2

DC bias level: 3.0 kV
(cleaning is -3.0kV)

- 1 Pre-transfer charging wire
- 2 Color developing cylinder
- 3 Stray toner collection roller
- 4 Black developing cylinder
- 5 Primary charging wire
- 6 Grid wire
- 7 Primary transfer static eliminator
- 8 Primary transfer roller
- 9 Secondary transfer outside roller

7.2 Image Formation Process

7.2.1 Image Formation Process

0003-1031

1. Latent Static Image Formation Block

This block consists of 3 steps, at the end of which a latent static image is formed on the photosensitive drum.

Step 1 (pre-exposure) [1]

In preparation for primary charging, the pre-exposure LED shines light on the surface of the photosensitive drum to remove the residual charges from the surface, thus preventing uneven density.

Step 2 (primary charging) [2]

In preparation for laser exposure, the machine charges the surface of the photosensitive drum to an even, positive potential. The machine uses charging method in which charges are indirectly applied to the photosensitive drum by means of a charging wire.

Step 3 (laser exposure) [3]

When the surface of the photosensitive drum is scanned by a laser beam, the charges in the "light" areas become neutralized, turning the areas into a latent static image. (The machine uses a system of laser exposure in which it exposes non-imaging areas with laser light.)

2. Development Block

Step 4 (development) [4]

The machine deposits toner over the latent static image on the photosensitive drum, thus turning the latent image into a visible image. The machine's black toner is a magnetic 1-component developer while its color toner is non-magnetic 2-component developer; development of both makes is based on toner projection.

3. Transfer Block

In this block, the toner image on the surface of the photosensitive drum is moved to print paper by way of the ITB.

Step 5 (pre-transfer charging) [5]

In full color mode, toner is deposited for all 4 colors on the ITB, with a difference in toner potential if left unattended. A specific level of bias therefore is applied when black is developed for individual colors, thereby making sure that the toner layers on the ITB are of an identical potential, thus increasing the efficiency of primary transfer.

Step 6 (primary transfer) [6]

A positive charge is applied from the back of the ITB to transfer the toner from the surface of the photosensitive drum to the ITB. This process is repeated for all color (M, Y, C, Bk) in sequence.

Step 7 (secondary transfer) [7]

The toner on the ITB is moved to paper.

Step 8 (separation) [8]

Paper is separated from the ITB.

4. Fixing Block

Step 9 (fixing) [9]

The toner is permanently fused into the fibers of the paper by means of heat and pressure.

5. ITB Cleaning Block


Step 10 (ITB cleaning) [10]

The residual toner is removed from the ITB by way of cleaning the ITB.

6. Photosensitive Drum Cleaning Block

Step 11 (drum cleaning) [11]

The residual toner is removed from the photosensitive drum by way of cleaning the photosensitive drum.

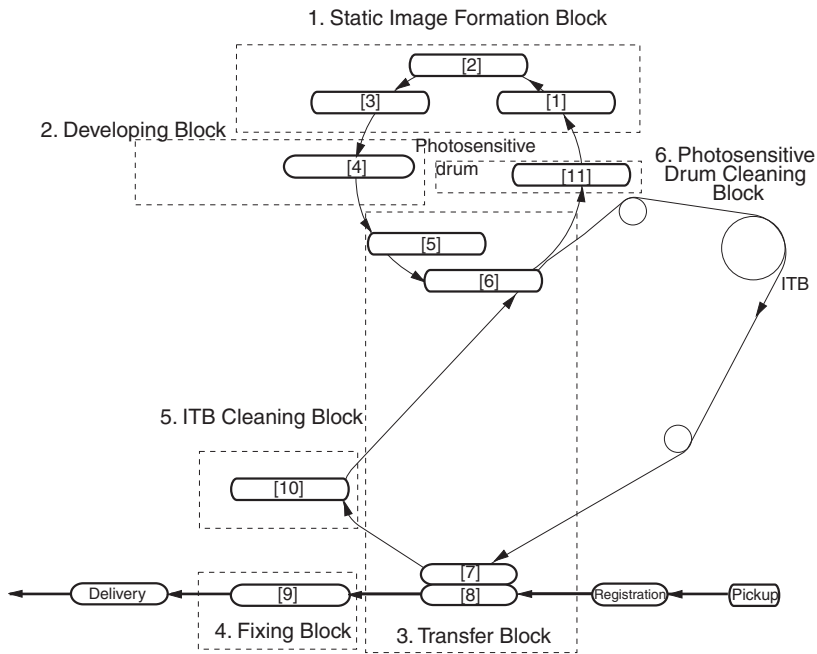

F-7-3

7.3 Basic Sequence

7.3.1 At Time of Power-On

0004-7867

The main power switch is pressed while the surface temperature of the fixing roller is lower than 100 deg C (i.e., the main power switch is pressed after the machine has been left alone for a long time, such as in the morning).


<Characteristics>

-Immediately before starting the sequence, the machine detects the home position of the developing rotary and removes static charges from the drum surface.

-It takes about 530 sec before the machine enters the standby state after its main power switch has been pressed.

-While warm-up rotation is taking place, the machine executes the following image stabilization control mechanisms: potential control, primary transfer ATVC control, secondary transfer ATVC control, D-max control, D-half control*1.

*1: when the power is tuned on with the color print counter reading 500 or higher.

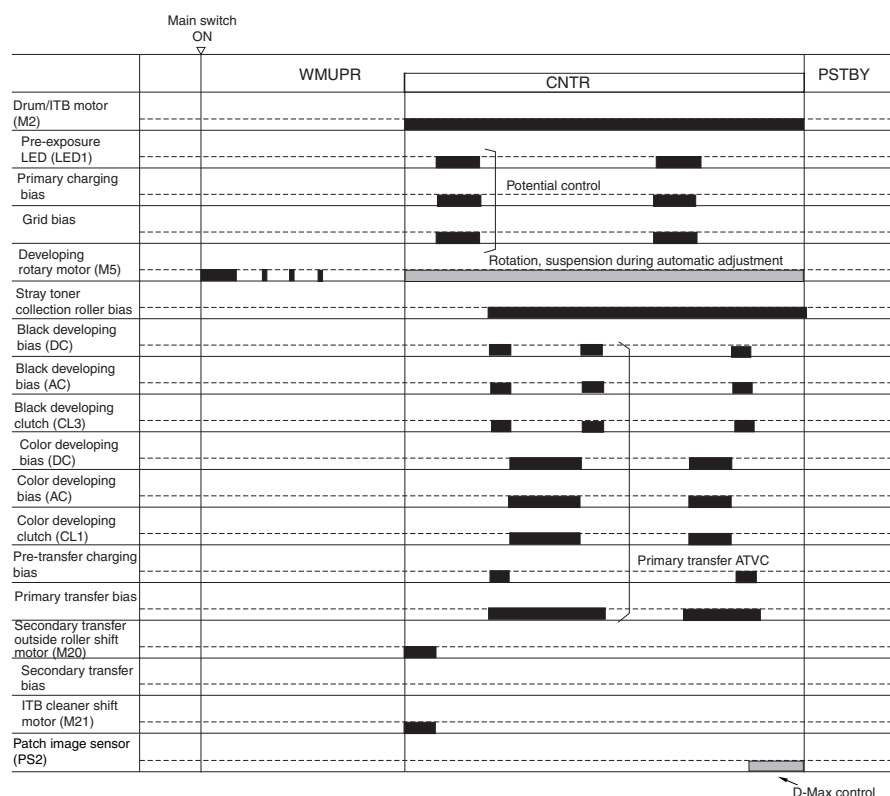

F-7-4

<if the main power switch is turned on with the surface temperature of the fixing roller is 100 deg C or higher>

-It takes about 2 min or less before the machine enters the standby state after its main power switch has been pressed (i.e., the surface temperature of the fixing roller reaches 200 deg C).

-In principle, image stabilization control is not executed.


7.3.2 During Copying/Printing (normal speed)

0005-5911

Full-color, Plain paper, A4, 1 Copy/Print

<Characteristics>

-While an image is being formed on the intermediate transfer belt, the machine keeps the ITB cleaning blade and the secondary outside roller away from the belt.

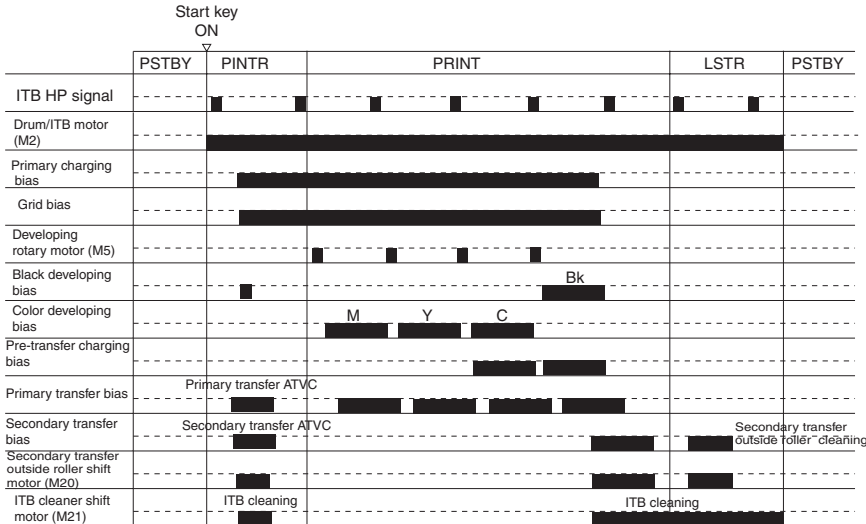

F-7-5



While making mono copies/prints, the machine keeps the ITB cleaning blade and the secondary toner outside roller in contact with the intermediate transfer belt at all times.

7.3.3 During Copying/Printing (2/3 speed, 1/3 speed)

0005-5913

Full-color, Heavy paper or OHP, A4, 1 Copy/Print

<Characteristics>

The machine uses 2/3 speed when it makes full-color prints or uses heavy paper (105 to 163 g). This sequence is basically the same as normal speed sequence, the difference being that the machine reduces the process speed after primary transfer to 2/3, thus increasing fixing on heavy paper.

The machine uses 1/3 speed when it makes full-color prints and uses heavy paper (163 g or more) or transparency. This sequence is also identical to normal speed sequence, the difference being that the machine reduces the process speed to 1/3 speed after primary transfer.




The machine uses 2/3 speed and 1/3 speed for full-color mode, not for mono color mode.

7.4 Image Stabilization Control

7.4.1 Overview of Image Stabilization Control

0003-2128

The machine is designed to execute the following control mechanisms to be sure of stable image production in the presence of changes in the site environment and deterioration of components associated with image formation over the product life.

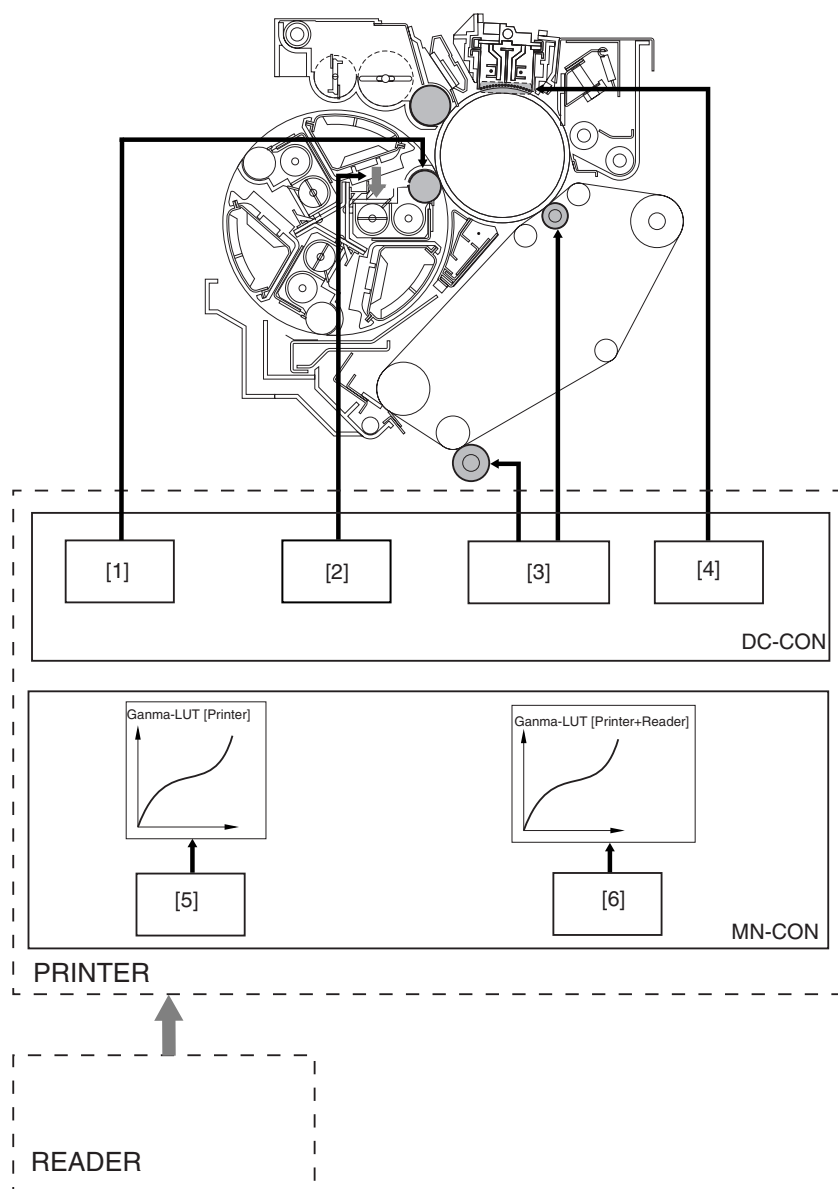

F-7-6

T-7-11

Item	Description
1 Dmax control	determines the best Color developing bias.
2 ATR control	determines toner supply amounts.
3 ATVC control	determines the best transfer bias level.
4 Potential control	determines the best transfer bias level.
5 Dhalf control	determines the best gradation table (printer).
6 PASCAL control	determines the best gradation table (printer + reader)

7.4.2 Timing of Image Stabilization Control

0003-2620


The machine uses different control mechanisms depending on the site environment; specifically, it executes the following as part of different sequences of operation:

-At Power-On / Toner container replacement

The control lasts about 120 sec*1.

*1: The machine executes this control mechanism when the temperature of the fixing upper roller is less than 100 deg C.

*2: The machine executes this control mechanism in response to a history of making 500 or more color prints (with the temperature of the fixing upper roller being less than 100 deg C).

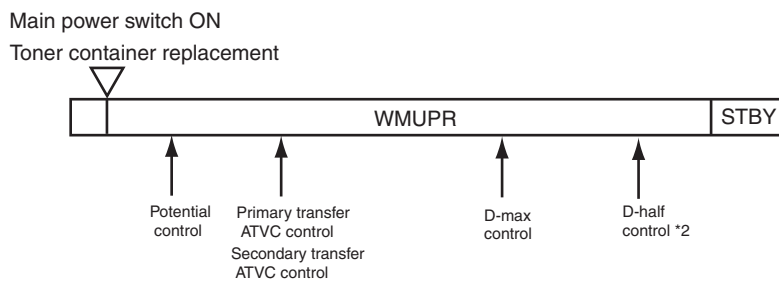


F-7-7

*1: The machine executes the image stabilization control mechanism at power-on or toner container replacement only when the surface temperature of the fixing roller is less than 100 deg C.

*2: The machine executes D-half control when the power is turned on with its color print counter reading 500 or higher (and the temperature of the fixing upper roller being 100 deg C or lower).

-In Response to a Press on the Start Key (mono color)


The control lasts about 6 sec.

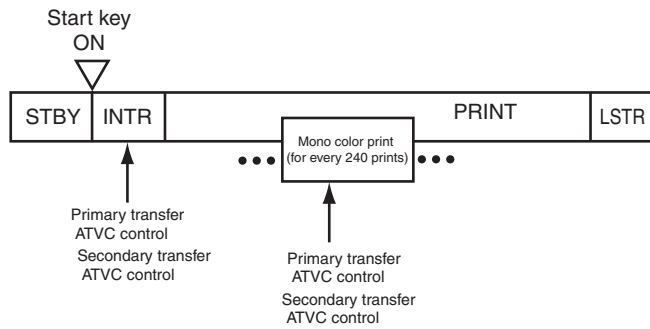

F-7-8

-In response to a Press on the start Key (full color)

The control lasts a maximum of about 80 sec.

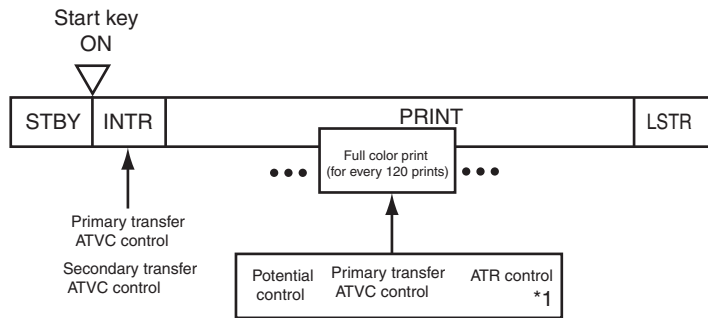


F-7-9

*1: The machine also executes this control mechanism in response to every incidence of an image ratio of 480% (as converted).

-During Last Rotation

The control lasts about 100 sec.

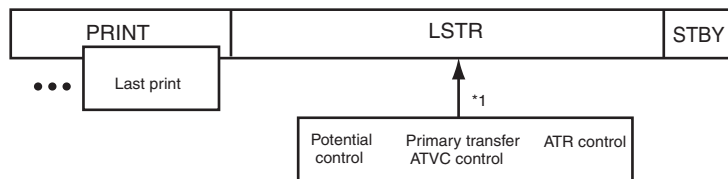


F-7-10

*1: The machine executes this control mechanism in response to every incidence of an image ratio of 200% or every 20 full-color prints.

-Jam recovery

The control lasts a maximum of about 100 sec.

Jam recovery

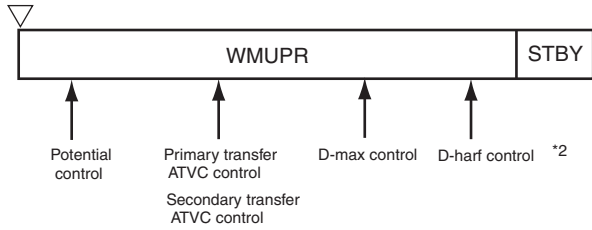

F-7-11


*1: The machine executes this control mechanism when the temperature of the fixing upper roller is less than 100 deg C.

*2: The machine executes this control mechanism in response to a history of making 500 or more color prints (with the temperature of the fixing upper roller being less than 100 deg C).

-Return from sleep state

The control lasts a maximum of about 100 sec.

Return from sleep state

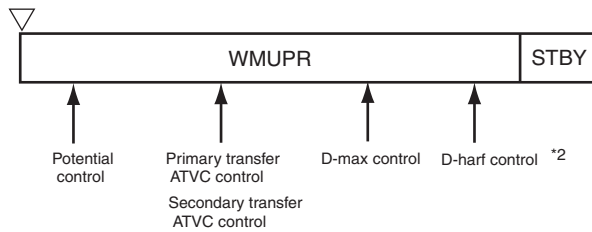

F-7-12

*1: The machine executes this control mechanism when the temperature of the fixing upper roller is less than 100 deg C.

*2: The machine executes this control mechanism in response to a history of making 500 or more color prints (with the temperature of the fixing upper roller being less than 100 deg C).

7.4.3 Potential Control

0003-7609


The machine is designed to execute potential control to be sure of stable printing in the presence of drops in the sensitivity of the photosensitive drum or changes in the environment.

<Conditions of Execution>

- when the power is turned on/when the toner cartridge is replaced (with the temperature of the fixing upper roller being less than 100 deg C)
- after jam recovery/after return from a sleep state (with the temperature of the fixing upper roller being less than 100 deg C)
- every 120 full-color prints made continuously (stops printing for execution)
- every 20 full-color prints or during last rotation in response to every incidence of an image ratio of 200% (as converted)
- during execution of PASCAL control
- in response to changes in the environment

<Items of Control>

1. Drum dark-area potential (VD) control
2. Drum light-area potential (VL) control

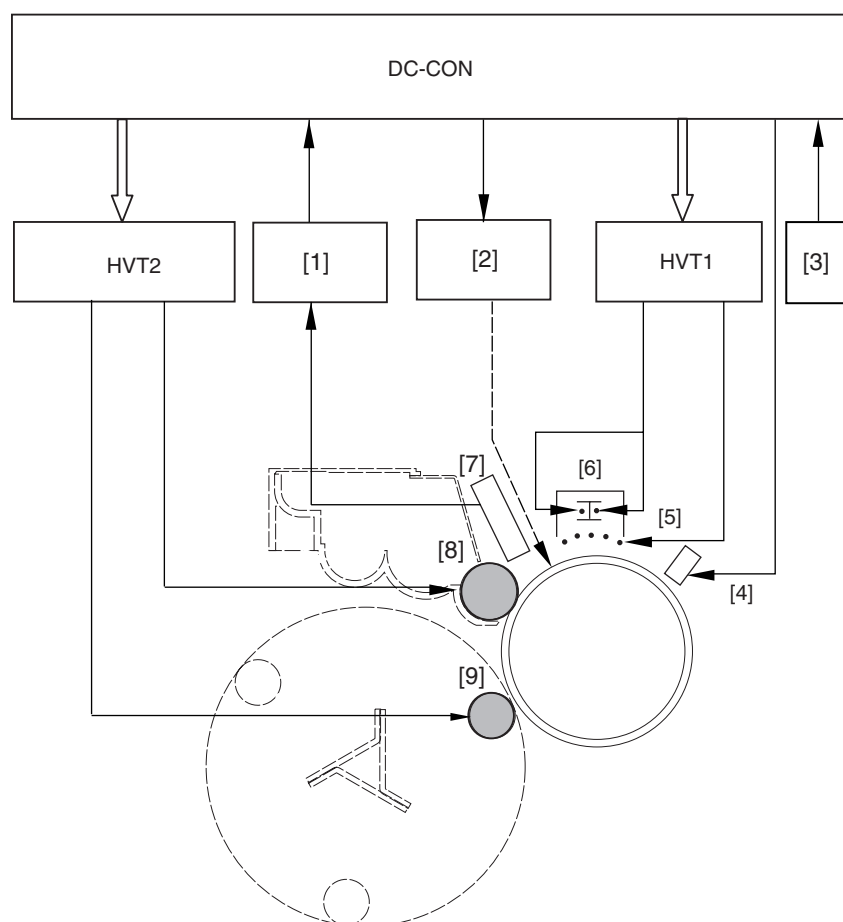

F-7-13

- 1 Potential control PCB
- 2 Laser driver PCB
- 3 Environment sensor
- 4 Pre-exposure LED
- 5 Grid wire
- 6 Primary charging wire
- 7 Potential sensor
- 8 Black developing cylinder
- 9 Color developing cylinder


<Particulars of Control>

1. Drum Dark Area Potential Control (VD)

The machine decides on a grid bias (V_g) with the aim of obtaining the best dark area potential (VD) at various points of development (black developing cylinder position, color cylinder position) for the photosensitive drum.

T-7-12

Order	Item	Description
1	Application of V_g	applies V_g (V_{g1} through V_{g3}) to the drum.
2	creation of the target V_d - V_g curve	measures the VD in response to the foregoing V_g (V_{g1} through V_{g3}) using the potential sensor to create a V_d - V_g curve.
3	determination of a target V_g	computes the target VD from the output of the environment sensor; then, decides on a target V_g from the target VD.

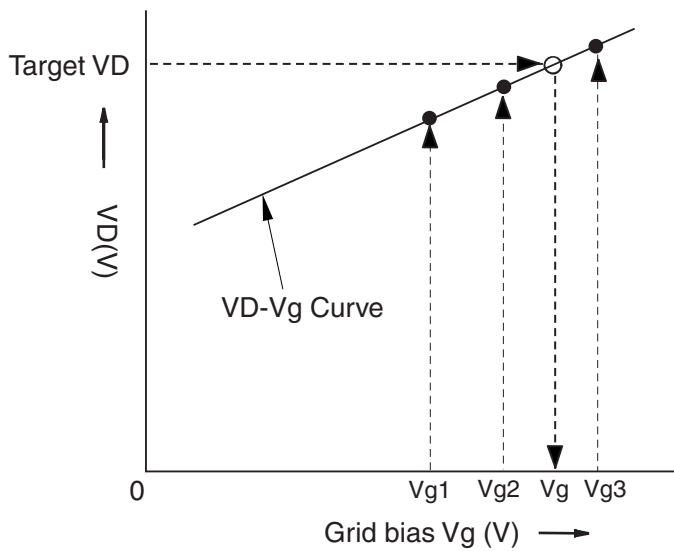


F-7-14

2. Drum Light Area Potential (VL) Control


The machine decides on a laser output level to obtain the best light area potential (VL) for various points of development (developing cylinder position, color cylinder position) for the photosensitive drum.

T-7-13

Order	Item	Description
1	activation of laser	shines laser light at a specific laser power level (LP1 through LP4) on the drum.
2	creation of a VL-LP curve (sensor position)	measures the VL against the aforementioned laser power level (LP1 through LP4) using the potential sensor, and creates a VL-LP curve for the sensor position.
3	creation of a VL-LP curve (points of black development/color development)	creates a VL-LP curve for points of black and color development based on the result of computation on the VL curve for the sensor position.
4	monitoring of the environment sensor	computes the target VL potential for individual colors based on the output of the environment sensor (target VL (Bk), target VL (color)).
5	determination of laser output	determines the laser output that enables the target VL potential for individual colors based on the target VL-LP curve.

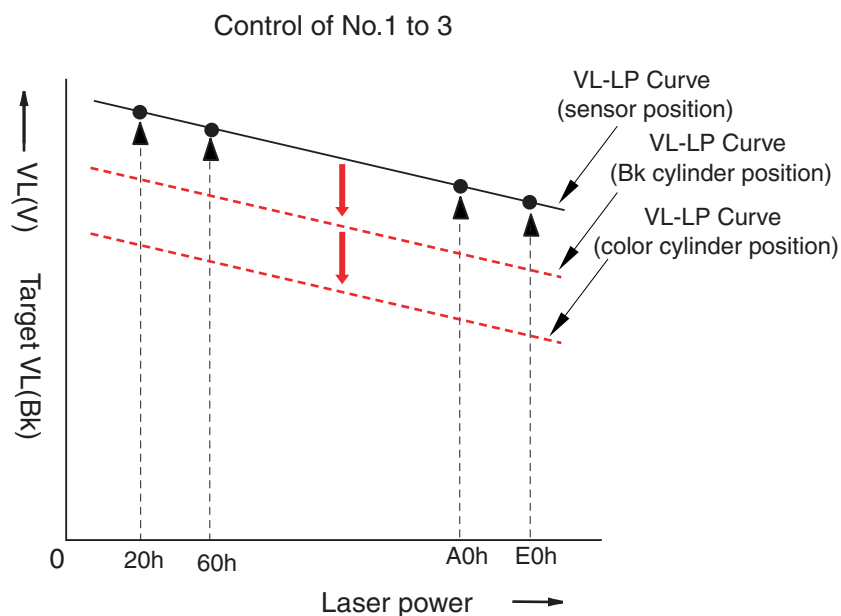

F-7-15

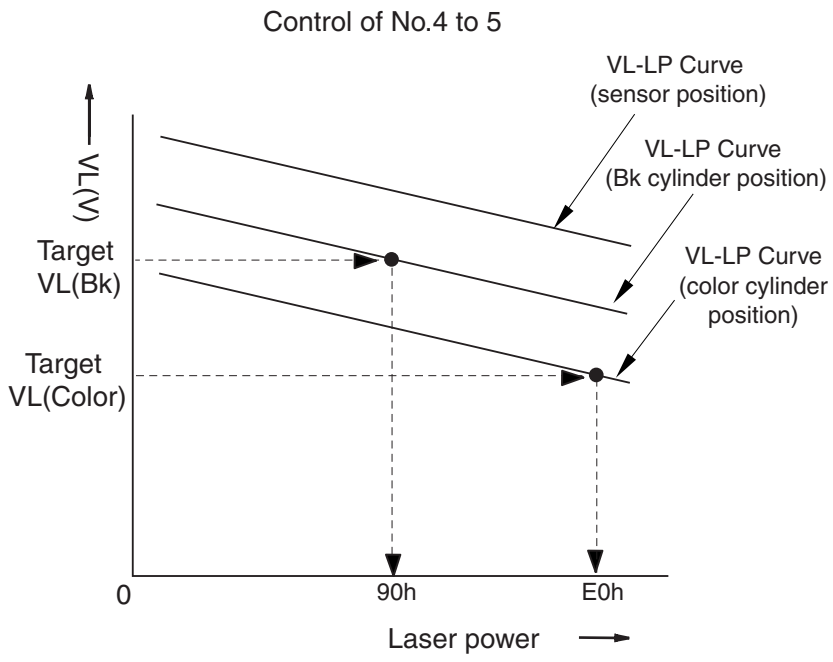


F-7-16

7.4.4 ATVC Control

0003-7610

The machine executes ATVC control to determine the best transfer voltage when transferring toner from the photosensitive drum to the ITB and from the ITB to paper. This control may be of 2 types: primary transfer ATVC and secondary transfer ATVC.

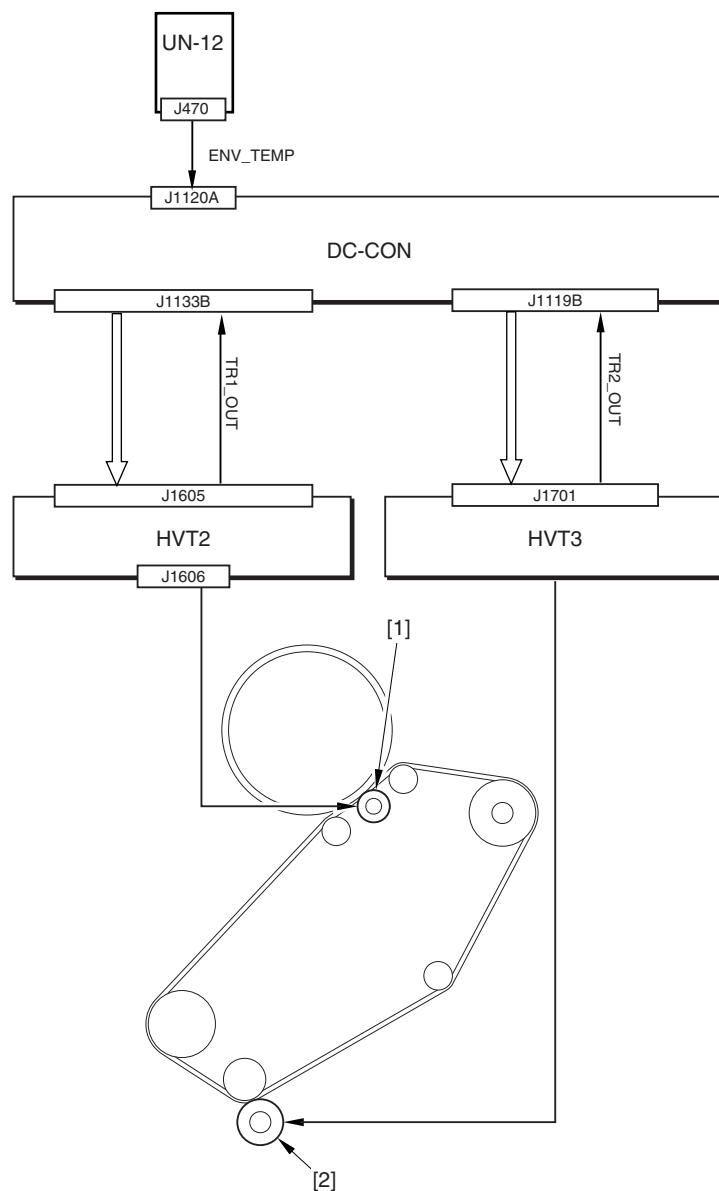

F-7-17

- 1 Primary transfer roller
- 2 Secondary transfer outside roller

DC-CON: DC controller

UN-12: environment sensor

1. Primary Transfer ATVC

In primary transfer ATVC, the machine determines the primary transfer voltage so the target transfer current may be obtained at time of transfer.

<Conditions of Execution>

- when the power is turned on/when the toner cartridge is replaced (with the temperature of the fixing upper roller being less than 100 deg C)
- after jam recovery/after return from a sleep state (with the temperature of the fixing upper roller being less than 100 deg C)
- during initial rotation in response to a press on the Start key
- every 120 full-color prints made continuously (stops printing for execution)
- every 240 mono-color prints image continuously (stops printing for execution)
- during last rotation in response to every incidence of an image ratio of 200% or 20 full-color prints made continuously
- during execution of PASCAL
- in response to changes in the environment

<Particulars of Control>

T-7-14

Order	Item	Description
1	application of the primary transfer bias	applies a specific level of bias to the primary transfer roller; then, detects the level of current by HVT2 to feed the data back to the DC controller.
2	monitoring the environment sensor	uses the DC controller to compute the correction value from the output of the environment sensor and the printing information (paper type, color mode).
3	determination of the primary transfer bias	uses the DC controller to determine the best transfer bias while taking into account the correction value.

2. Secondary Transfer ATVC

In secondary transfer ATVC, the machine determines the secondary transfer voltage so that the target transfer current may be obtained at time of transfer.

<Conditions of Execution>

- when the power is turned on/when the toner cartridge is replaced (with the temperature of the fixing upper roller being less than 100 deg C)
- after jam recovery/after return from a sleep state (with the temperature of the fixing upper roller being less than 100 deg C)
- during initial rotation in response to a press on the Start key
- every 120 full-color prints made continuously (stops printing for execution)
- every 240 mono-color prints image continuously (stops printing for execution)
- during execution of PASCAL
- in response to changes in the environment

<Particulars of Control>

T-7-15

Order	Item	Description
1	application of secondary transfer bias	applies a specific level of bias to the secondary transfer roller; then, uses HVT3 to detect the level of current and feeds the data back to the DC controller.
2	monitoring of the environment sensor	uses the DC controller to compute the correction value from the output of the environment sensor and the printing information (paper type, 1st-side/2nd-side).
3	determination of the secondary transfer bias	uses the DC controller to determine the best secondary transfer bias while taking the correction value into account.

7.4.5 ATR Control

0003-6782

The machine executes ATR control to compute the amount of toner to supply to the color developing assembly based on the amount of toner it has used.

<Particulars of Control>

-Computing the Amount of Toner to Supply

The machine determines the amount of toner to supply to individual color developing assemblies.

The following are particulars of individual operations:

<Particulars of Operation>

-Computing the Amount of Toner to Supply

The machine determines the amount of toner to be supplied to individual color developing assemblies. The machine uses 3 types of data to make these computations.

1. video count (executed for every color print)

The machine uses the video count data to predict the amount of toner likely to be consumed, and computes the amount of toner consumed.


2. result of detection by the patch image read sensor (in response to an image ratio of 480%, as converted or 60 color prints made continuously*1)

The machine uses the patch image read sensor to measure the toner image created on the ITB, and imposes correction on the amount of toner to be supplied so that the density will be identical to the target density.

3. result of detection by the ATR sensor (executed for every 10 color prints)

The machine uses the ATR sensor to measure the developer on the cylinder of each color developing assembly, and increases/decrease the toner supply target if the measurement is outside of the target density range.

*1: when this condition occurs, the machine stops the ongoing job and forms a patch on the intermediate transfer belt for detection by the patch image read sensor.

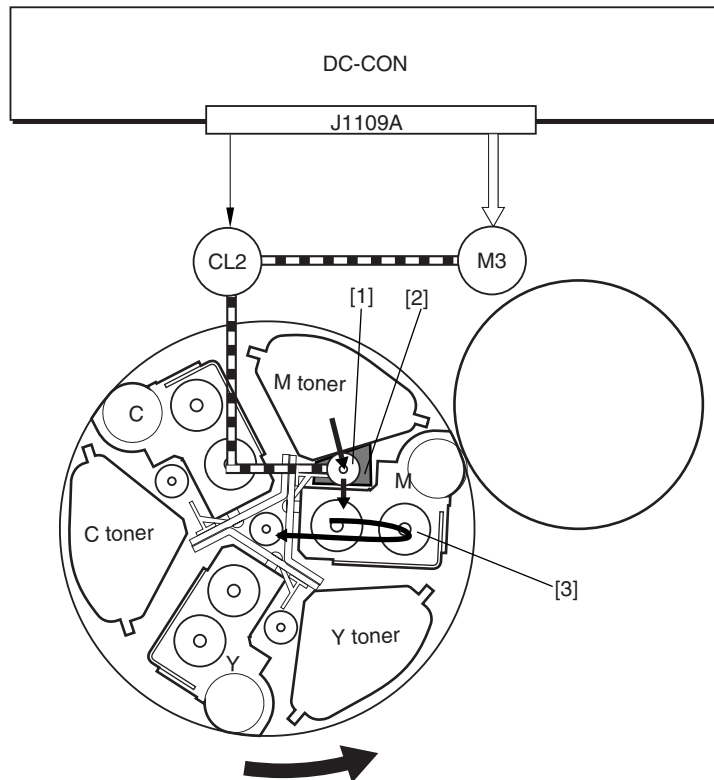

F-7-18

- 1 Video count
- 2 Result of detection by patch image read sensor
- 3 Result of detection by ATR sensor

PS4: ATR sensor

PS2: patch image read sensor

DC-CON: DC controller

MN-CON: main controller



E020-xx10:

the SGNL value for INIT control is lower than 62.

E020-xx11:

the REF value for INIT control at time of initial setup is lower than 62.

E020-xx12:

the SGNL value for INIT control at time of initial setup is 960 or higher.

E020-xx13:

the REF value for INIT control at time of initial setup is 960 or higher.

E020-xx81:

the P-SENS-P value at time of reading the background (drum surface) for patch detection is lower than 255.

E020-xx90:

the result of computation by patch reading for patch detection is lower than 16.

E020-xx91:

the result of computation by patch reading for patch detection is 1008 or higher.

E020-xx92:

the result of computation by patch reading for patch detection is lower than 42 for 3 times continuously.

E020-xx93:

the result of computation by patch reading for patch detection is 522 or higher for 3 times continuously.

E020-xxA0:

the SGNL value for ATR control is lower than 62.

E020-xxA1:

the REF value for ATR control is lower than 62.

E020-xxA2:

the SGNL value for ATR control is 960 or higher.

E020-xxA3:

the REF value for ATR control is 960 or higher.

E020-xxA8:

the upper limit (13%) of the T/D ratio detected for ATR control is exceeded 3 times continuously.

E020-xxA9:

the lower limit (3%) of the T/D ratio detected for ATR control is not reached 3 times continuously.

E020-xxC0:

the variation among the SGNL values for ATR is 100 or higher.

E020-xxC1:

the variation among the REF values for ATR is 100 or higher.

E020-xxC2:

the variation among the SGNL values for patch detection is 400 or higher.

E020-xxD0:

the average of the SGNL values for INIT control at time of initial setup is 200 or lower.

E020-xxD1:

the average of the REF value for INIT control at time of initial setup is 200 or lower.

E020-xxD2:

the average of the patch detection (SGNL) values for INIT control at time of initial setup is 200 or lower.

E020-xxD4:

the average of the SGNL value for INIT control at time of initial setup is 800 or higher.

E020-xxD5:

the average of the REF values for INTI control at time of initial setup is 562 or higher.

E020-xxDA:

the variation among the REF values for INTI control at time of initial setup is 100 or higher.

E020-xxDB:

the variation among the REF values for INTI control at time of setup is 10 or higher.

E020-xxDC:

the variation among the patch detection (SGNL) values for INTI control at time of initial setup is 800 or higher.

The suffix xx of any of the foregoing error codes indicates the color developing assembly in question:

xx=00: no distinction by color

01=Y

02=M


03=C

7.4.6 ACR Control (Auto Carrier Refresh Control)

0004-9234

The machine's ACR control is designed to prolong the life of the color developing assemblies by feeding the developing assemblies with a fresh supply of toner (mix of resin dye and magnetic iron) while discharging deteriorating carrier from the assemblies.

A new supply of toner is sent to a color developing assembly from its buffer assembly when the feedscrew inside the buffer assembly rotates (the DC controller turns on the development motor (M3) and the color toner supply clutch (CL2) when a shortage of toner is expected.) Once inside the developing assembly, the toner is moved forward by the feedscrew inside it; the deteriorating carrier in the assembly, on the other hand, is discharged outside the assembly, falling on its own weight for collection in the waste toner case.

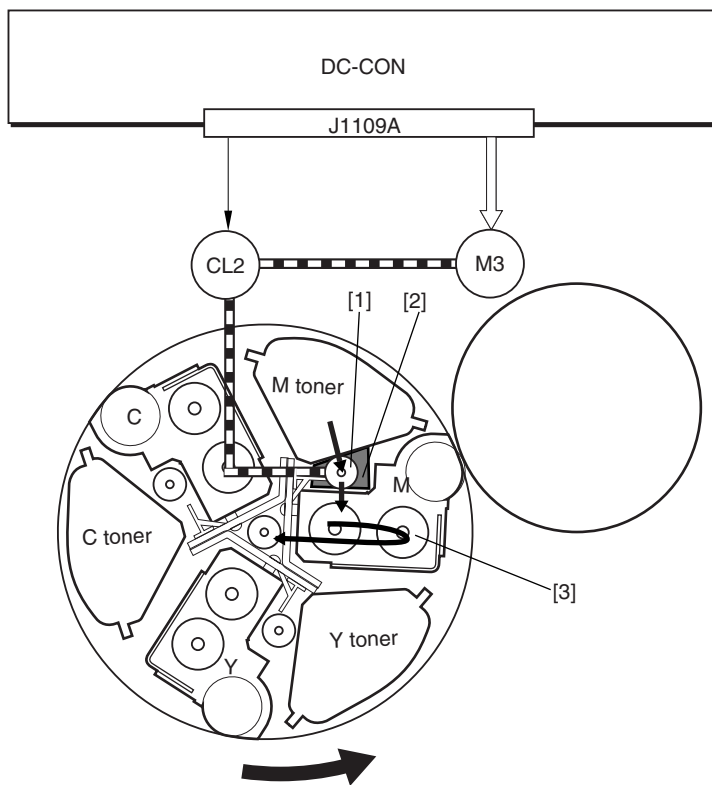

F-7-19

- 1 Toner feedscrew
- 2 Buffer assembly
- 3 Color developing assembly

M3: development motor

CL2: toner supply clutch

DC-CON: DC controller

7.4.7 D-max Control

0003-7060


The machine executes D-max (image density correction) control so as to limit fluctuations in the image density caused by changes in the environment or deterioration of the photosensitive drum or of toner.

The machine uses the DC controller of the printer unit for the control. When specific conditions exist, the DC controller creates a patch pattern of individual colors (Y, M, C) on the ITB; then, it uses the patch image sensor (PS2) to measure the density of the patches to determine a developing bias that will bring about a desirable density for each color.

The machine executes D-max control for the following conditions:

- when the power is turned on/when the toner cartridge is replaced (with the temperature of the fixing upper roller being less than 100 deg C)
- after jam recovery/after return from a sleep state (with the temperature of the fixing upper roller being less than 100 deg C)
- during last rotation every 200 full-color prints*1
- during execution of PASCAL
- in response to changes in the environment

1: Perform this condition until it becomes 4000-page printing in total. And after 4000 pages is not performed.

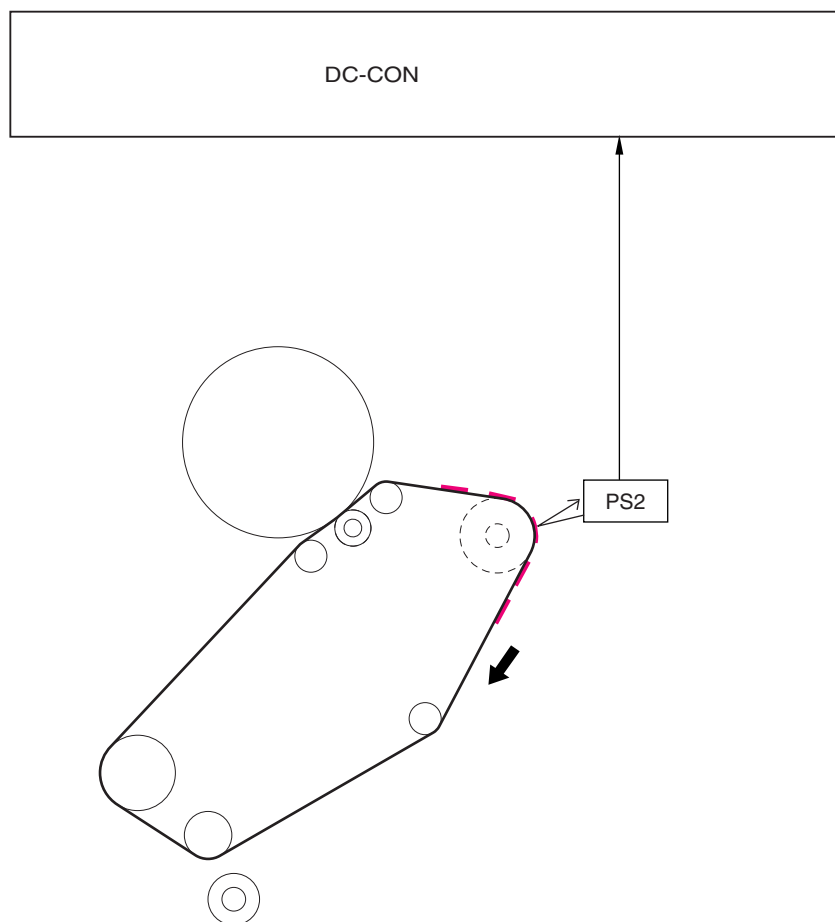


F-7-20

PS2: patch image sensor

DC-CON: DC controller

<Flow of Operations>

The following shows the flow of operations executed under this control:

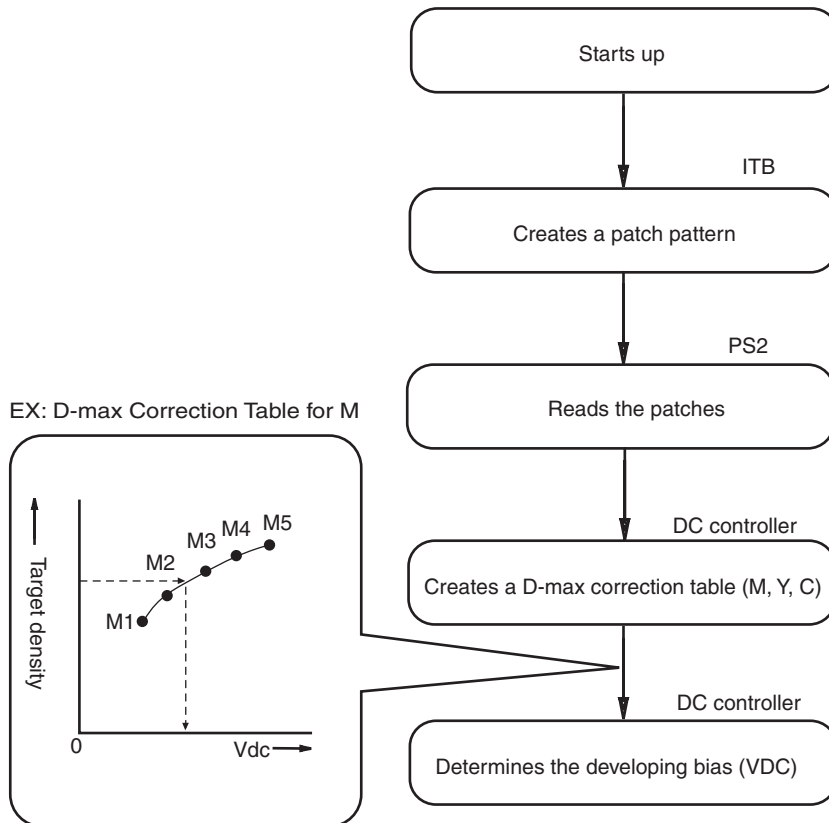

F-7-21

7.4.8 D-half Control

0003-7416

The machine executes D-half control (image gradation correction control) to bring about an ideal set of gradation characteristics.


When specific conditions exist, the main controller sends patch pattern data for individual colors (Y, M, C, Bk) to the DC controller, which in response forms patch patterns of individual colors (Y, M, C, Bk) on the ITB.

Thereafter, the DC controller measures the density of the patch pattern using the patch image read sensor (PS2), and sends the result to the main controller, where gradation correction is executed so that ideal halftone images may be obtained.

The machine executes D-half control for the following:

- when the power is turned on/when the toner cartridge is replaced*1
- after jam recovery/after return from a sleep state*1
- in response to changes in the environment
- during execution of PASCAL

*1: if there is a history of 500 or more full-color prints with the temperature of the fixing upper roller being less than 100 deg C.

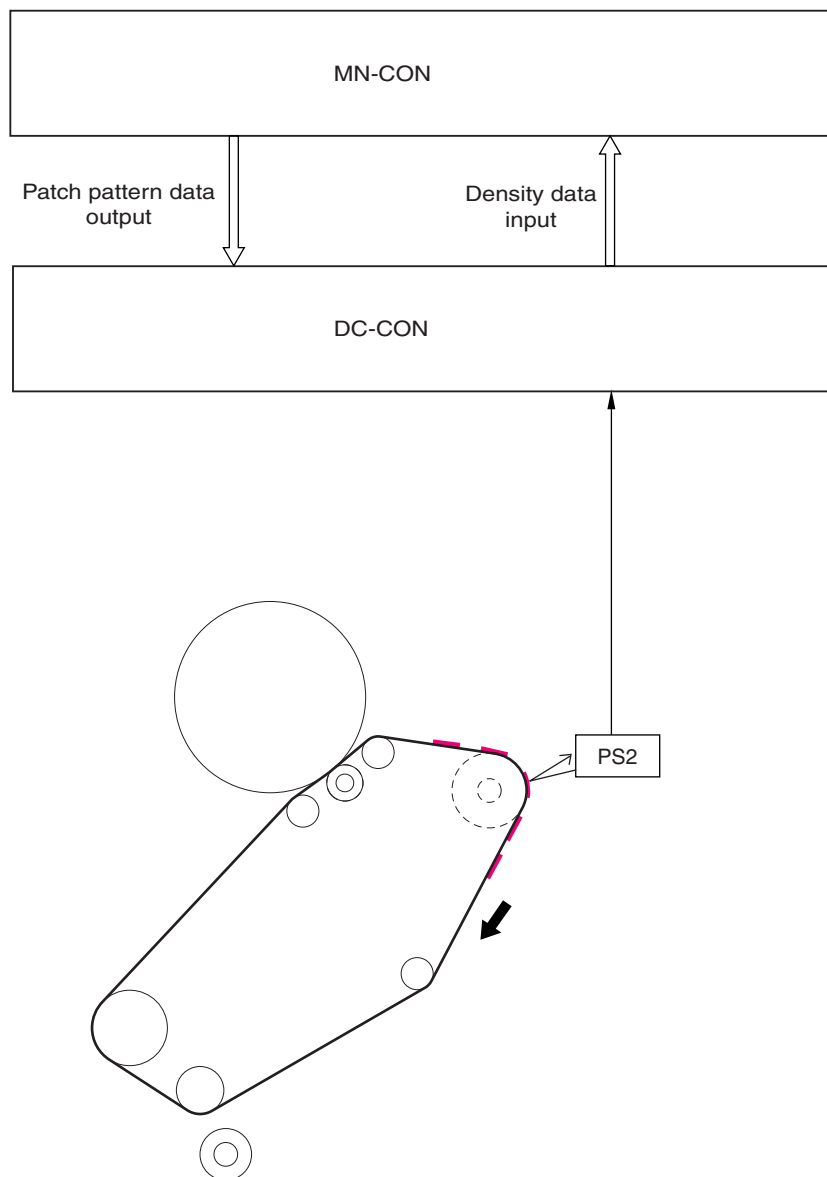

F-7-22


PS2: patch image read sensor

DC-CON: DC controller

MN-CON: main controller

<Flow of Operation>

The following shows the flow of operation that takes place during the control:

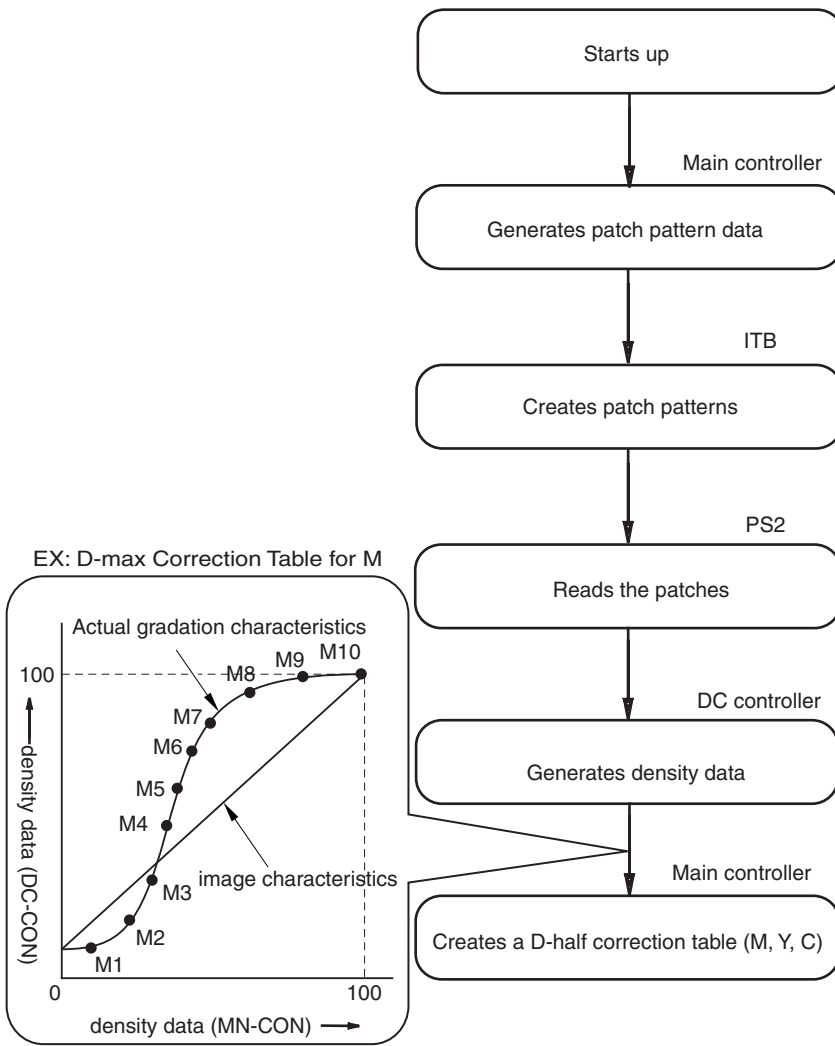

F-7-23

7.4.9 PASCAL control


0003-9817

The machine is designed to execute PASCAL control (image characteristics correction control) to enable the reproduction of ideal image characteristics, and the execution involves the reader unit mechanisms.

The machine uses the main controller of the printer unit for the control. The printer uses the data stored in the main controller to generate 3 types of test patterns *1; when the printouts of the test patterns are placed in the reader unit one after another, the machine reads them in sequence to enable the main controller to execute gradation correction that will lead to ideal image characteristics.

The machine executes PASCAL control for the following conditions:

-in response to a command by the ser

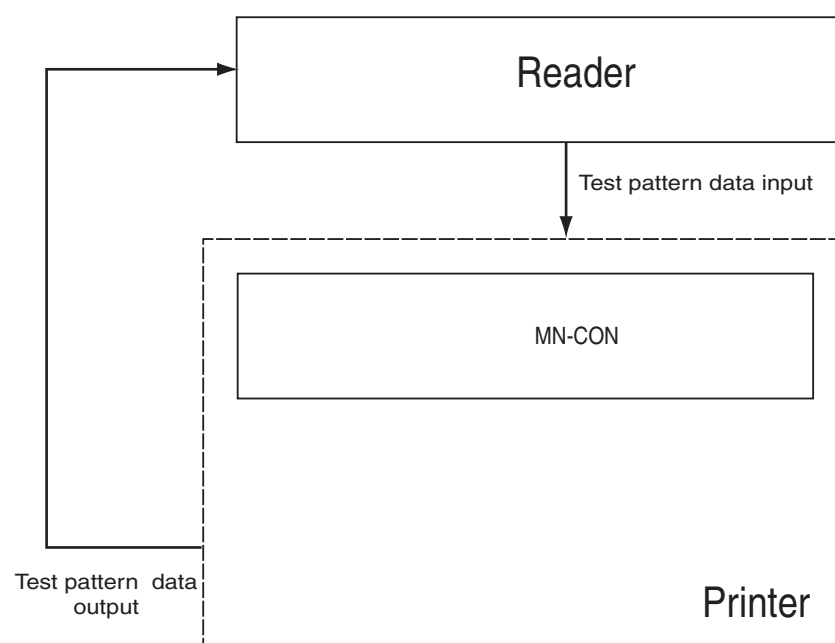


F-7-24


NM-CON: main controller

<Flow of Operation>

The following shows the flow of operation that takes place during the control:

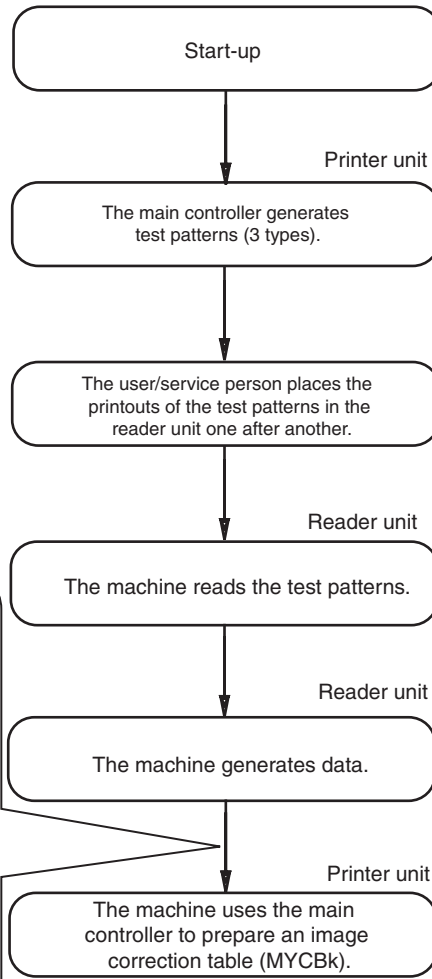

EX: Image Correction Table for M

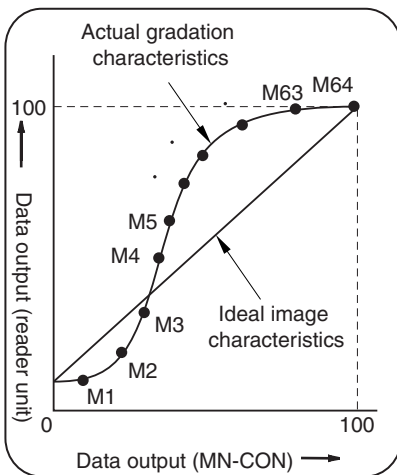

F-7-25

*1: Differences Among 3 Test Patterns

-Test Print 1

It shows 64 gradations expressed by means of error diffusion processing, which is not subject to moire and, therefore, used in text/photo/map, print photo, and text mode.

-Test Print 2

It shows 64 gradations expressed by means of screening with a low number of lines, which is suitable for the expression of gradation and, therefore, is used for print film photo mode and when priority is placed on PDL.

-Test Print 3

It shows 64 gradations expressed by means of screening with a high number of lines, which is suitable for the achievement of a high resolution and is, therefore, used when priority is placed on PDL resolution.



Test Print

F-7-26

7.5 Charging Mechanism


7.5.1 Controlling the Primary Charging Bias

0003-1034

The primary charging bias is used to charge the surface of the photosensitive drum to a positive potential by way of preparing it for image formation.

The primary charging bias may be either of 2 types of biases: primary charging DC bias, grid DC bias. The bias is generated by the high-voltage PCB 1 in response to a command from the DC controller, and is applied to the primary charging wire or the grid wire.

The level of the grid bias is determined based on the result of potential control.

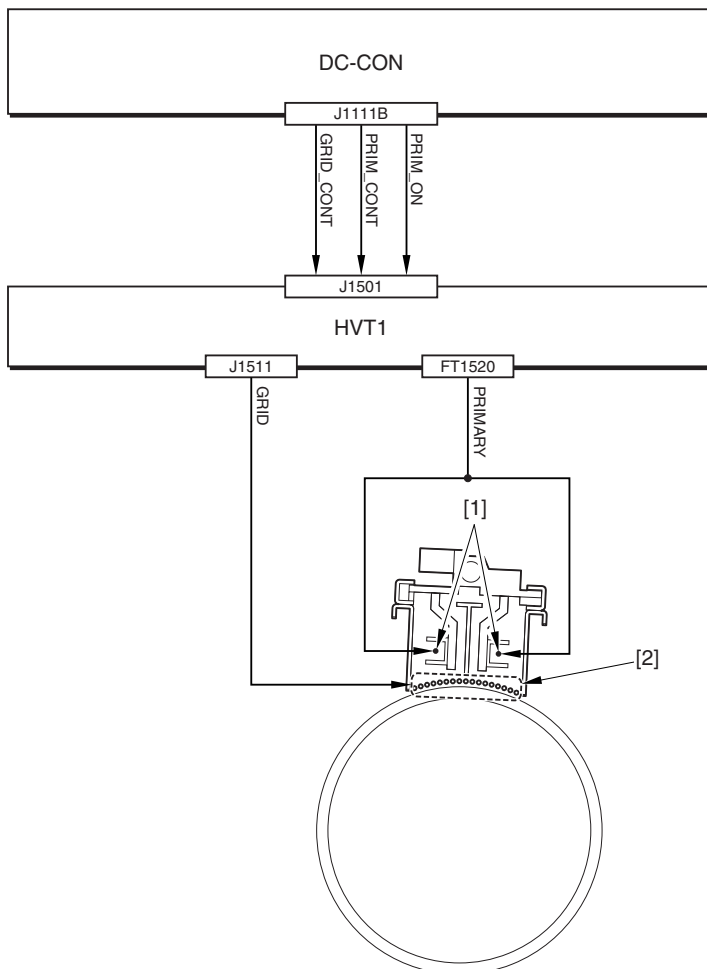

F-7-27

1 Grid charging wire

2 Grid wire

HVT1: high-voltage PCB 1

DC-CON: DC controller

7.5.2 Controlling the Primary Charging Assembly Cleaning Mechanism 0003-1035

The machine is equipped with a mechanism to clean the charging wire with the aim of preventing soiling of the wire inside the primary charging assembly.


The primary charging wire cleaner motor (M26) is rotated in normal and reverse directions to turn the cleaner screw, causing the wire cleaner to move to the front or the rear for cleaning of the charging wire.

The DC controller serves to drive the primary charging wire cleaner motor by generating 2 types of primary charging wire cleaner motor drive signals (PRIM_CLN_MTR0, PRIM_CLN_MTR1).

The relationship between the drive signals from the DC controller and the cleaning operation is as follows:

-when PRIM_CLN_MTR0 is '0', the wire cleaner moves to the rear.

-when PRIM_CLN_MTR0 is '1', the wire cleaner moves to the front.

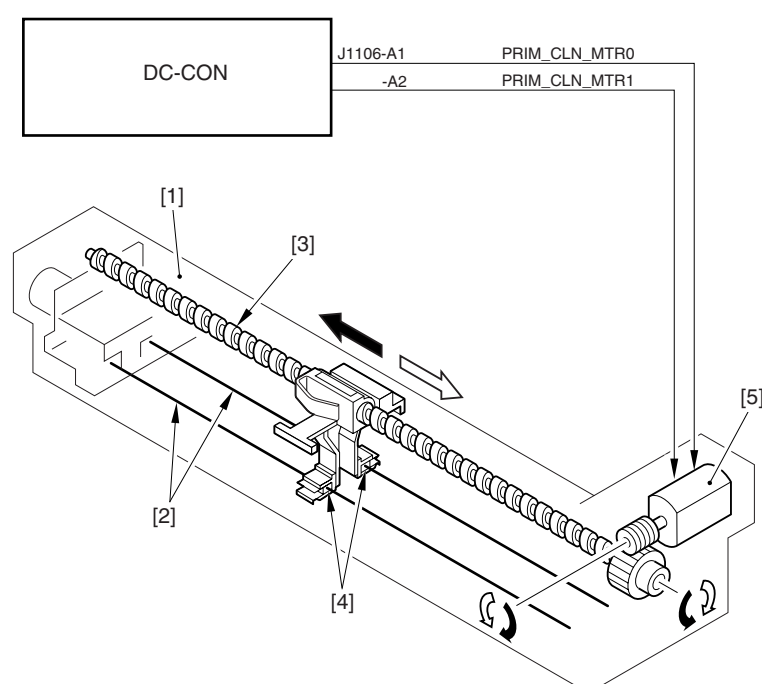

F-7-28

- 1 Primary charging assembly
- 2 Charging wire
- 3 Cleaner screw
- 4 Wire cleaner
- 5 Primary charging wire cleaner motor

DC-CON: DC controller

The cleaning operation starts in response to the following:

1. the temperature of the fixing roller is 10 deg C or less at time of power-on.
2. wire cleaning is executed in user mode.
3. as many as 2000 images have been processed (i.e., 2000 pages of mono color; 500 pages of full color)*1.

*1: the intervals at which cleaning takes place may be changed using the following service mode item:

-in a normal environment, COPIER>OPTION>BODY>W-CLN-P.


-in a high temperature/high humidity environment, COPIER>OPTION>BODY>W-CLN-PH.

7.5.3 Controlling the Pre-Transfer Charging Bias

0003-1038

The pre-transfer charging bias is used to even out the potential of the toner layers formed on the ITB, and it is applied to the toner on the photosensitive drum when black toner is developed.

The pre-transfer charging bias may be either of 2 types of biases: pre-transfer charging DC bias, pre-transfer charging AC bias. The bias is generated by the high-voltage PCB 1 in response to a command from the DC controller, and is applied to the pre-transfer charging wire.

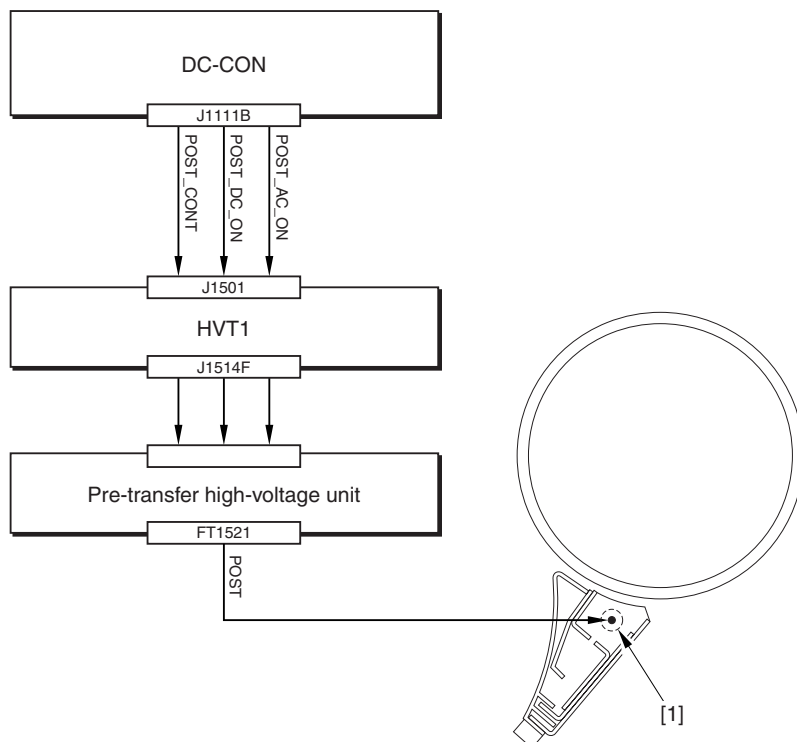

F-7-29

1 Pre-transfer charging wire

HVT1: high-voltage PCB 1

DC-CON: DC controller

7.5.4 Controlling the Pre-Transfer Charging Assembly Cleaning

Mechanism

0003-1040


The machine is equipped with a mechanism to clean the charging wire found inside the pre-transfer charging assembly, thus preventing soiling of the wire.

The pre-transfer charging wire cleaner motor (M27) rotates in normal and reverse directions to turn the cleaner screw; as a result, the wire cleaner moves to the front or the rear to clean the charging wire.

The DC controller controls the pre-transfer charging wire cleaner motor drive signal (POST_CLN_+MTR0, POST_CLN_MTR1) to drive the pre-transfer charging wire cleaner motor.

The relationship between the drive signal generated by the DC controller and the cleaning operation is as follows:

- when POST_CLN_MTR0 is '0', the wire cleaner moves to the rear.
- when POST_CLN_MTR0 is '1', the wire cleaner moves to the front.

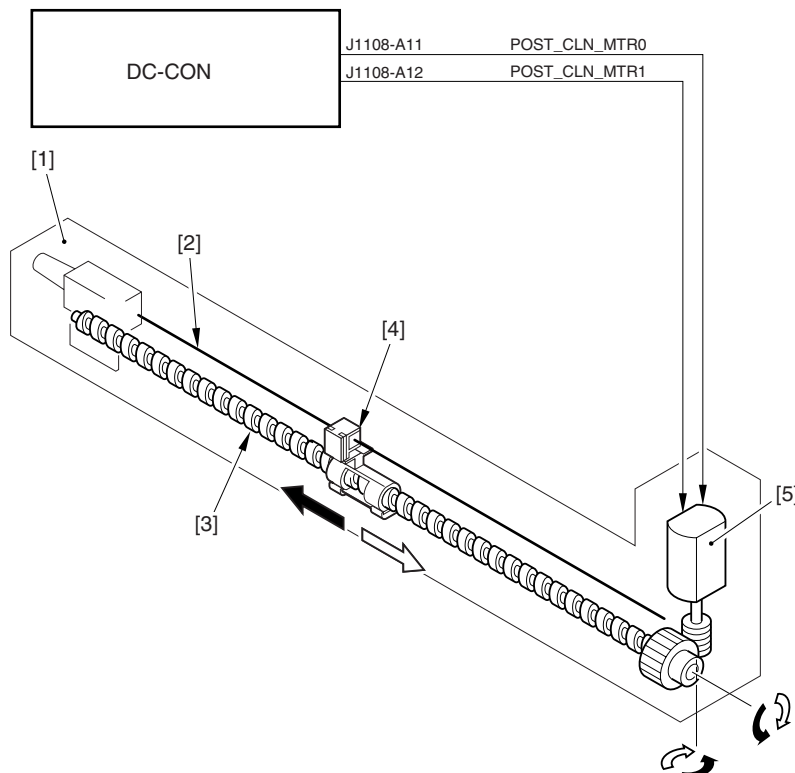

F-7-30

- 1 Pre-transfer charging assembly
- 2 Charging wire
- 3 Cleaner screw
- 4 Wire cleaner
- 5 Pre-transfer charging wire cleaner motor
- 6 rear
- 7 front

DC-CON: DC controller

The cleaning operation takes place in response to the following:

1. the temperature of the fixing roller is 100 deg C or less at power-on.
2. wire cleaning is executed in user mode.
3. as many as 2000 images have been made (copy count; if mono color, 2000 pages, if full color, 500 pages).*1

*1: the intervals at which cleaning takes place may be changed using the following service mode items:


- in a normal environment, COPIER>OPTION>BODY>W-CLN-P.
- in a high temperature/high humidity environment, COPIER>OPTION>BODY>W-CLN-PH.

7.5.5 Pre-Exposure LED

0003-1043

The machine uses a pre-exposure LED array to remove charges remaining on the photosensitive drum, thus preventing uneven density in prints. The pre-exposure LED array is arranged opposite the photosensitive drum, and the LEDs are turned on during printing to remove residual charges from the drum surface and forming stable images. The DC controller controls the pre-exposure LED array drive signal (EXP_LED) to turn on and off the LED array. The DC controller generates the following drive signal:

EXP_LED: if '0', the pre-exposure LED array goes on. if '1', the pre-exposure LED array goes off.

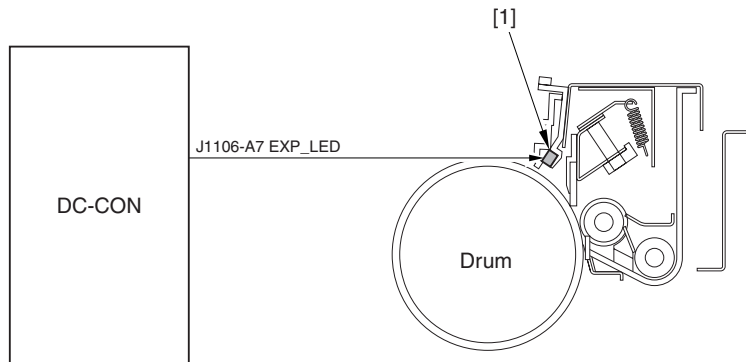

F-7-31

1 Pre-exposure LED array

7.6 Developing Rotary

7.6.1 Overview of the Developing Rotary

0003-1164


The developing rotary serves to position a color developing assembly to a specific point.

Housed inside the rotary are 3 types of color developing assemblies (M, Y, C) and color toner cartridges (M, Y, C). When printing occurs, the developing rotary motor (M5) rotates to turn the rotary counterclockwise so that one of the 3 color developing assemblies will come face to face with the photosensitive drum in sequence.

The rotary is locked in or out of place by the work of the developing rotary locking solenoid (SL10).

The rotary is equipped with 2 sensors (PS19, PS8), serving to detect the position of the rotary assembly and to turn on and off SL10.

The machine uses the DC controller to control these electrical loads: M5, SL10, PS19, PS8.

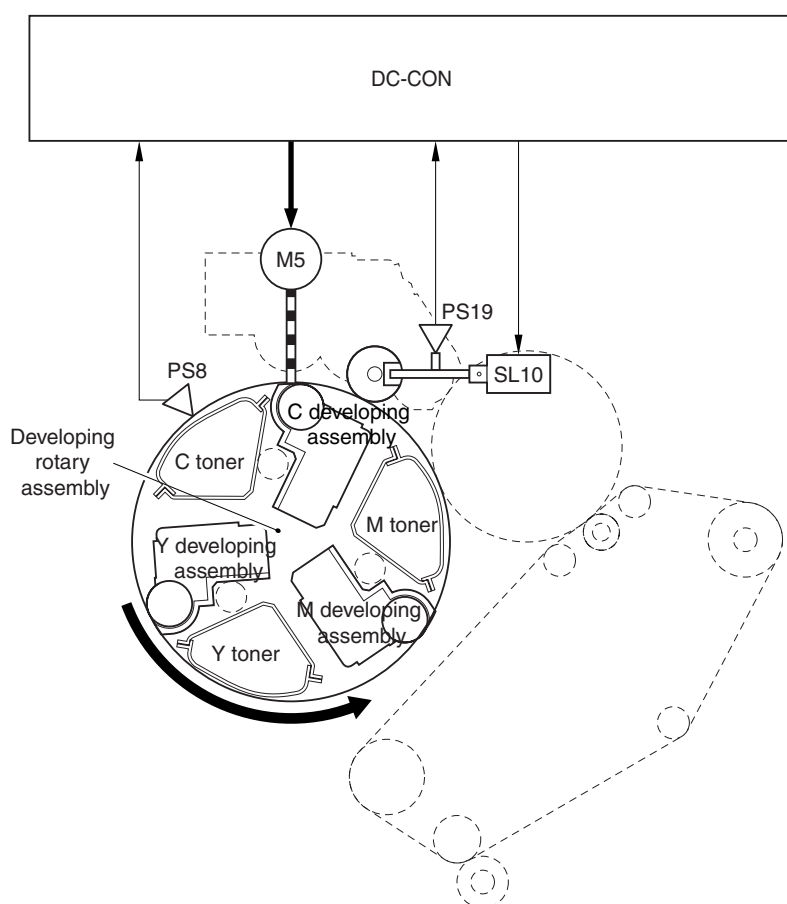

F-7-32

DC-CON: DC controller

M5: developing rotary motor

PS8: developing rotary solenoid sensor

PS19: developing rotary home position sensor

SL10: developing rotary fixing solenoid

7.6.2 Controlling the Developing Rotary

0003-1167


The machine positions the color developing assemblies (M, Y, C) and the color toner cartridges (M, Y, C) housed inside the developing rotary at a specific point at specific times. The DC controller uses the developing rotary home position sensor (PS19) to monitor the position of the rotary, turning on and off the developing rotary motor (M5) to move the rotary.

To rotate the rotary, the DC controller turns on the DC controller developing rotary locking solenoid so that the rotary is freed. On the other hand, to stop the rotary, the DC controller turns off the solenoid so that the rotary is locked in place. The DC controller monitors the state of PS19 to check on the position of the rotary. On the back of the rotary is the home position detecting flag, used to cause the DC controller to assume that the rotary is in home position when the flag moves past PS19.

The DC controller rotates the rotary with reference to the rotary home position, making sure that the rotary stops only at specific points.

There are as many as 6 points at which the rotary stops:

1. point of Y toner cartridge access (home position *1): 1 point
2. point of M, C toner cartridge access: 2 points
3. point of color toner development: 3 points

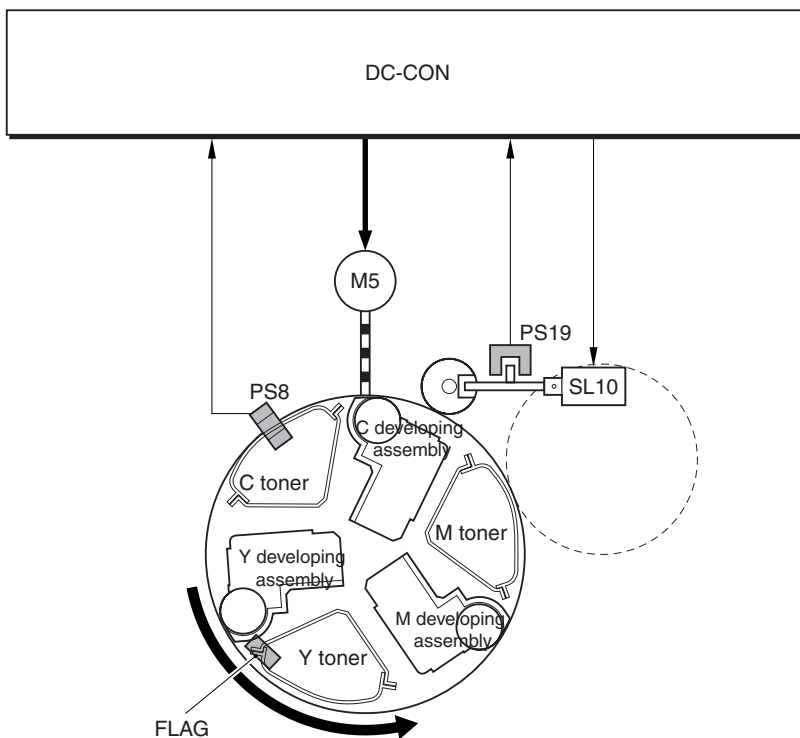

F-7-33

DC-CON: DC controller


M5: developing rotary motor

PS8: developing rotary solenoid sensor


PS19: developing rotary home position sensor

1: home position is also used for black development.

If a color developing cylinder was allowed to remain in contact with the sensitive drum at time of black development, the cylinder would disturb the black toner image. To prevent such disturbance, the machine moves the developing rotary to its home position so that a color developing cylinder will never be opposite the photosensitive drum. The following shows the position of Y toner cartridge access and point of M development.

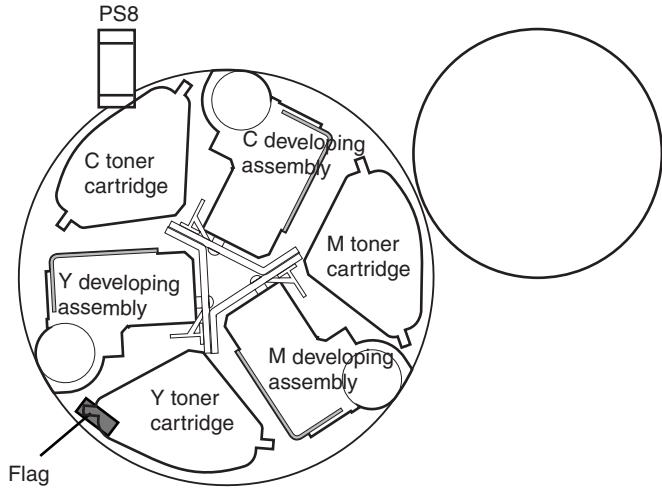

<Point of Y Toner Cartridge Access>

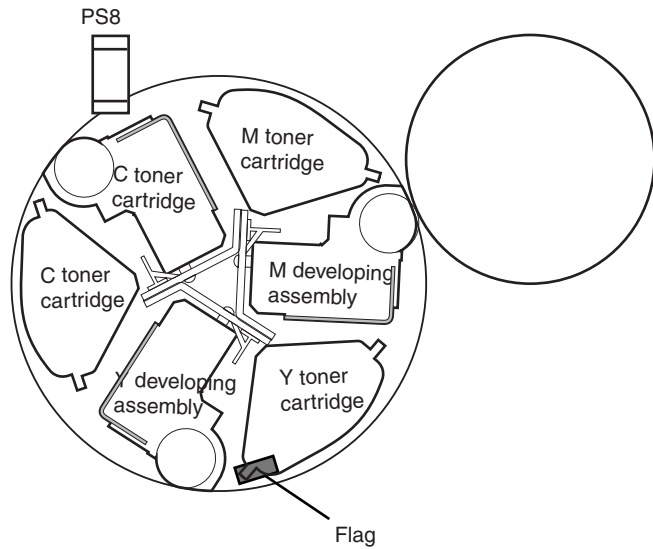


<Point of M Development>

F-7-34

The following shows the sequence of operation of the developing rotary when printing takes place:


-Timing of Operation (developing rotary; full color)

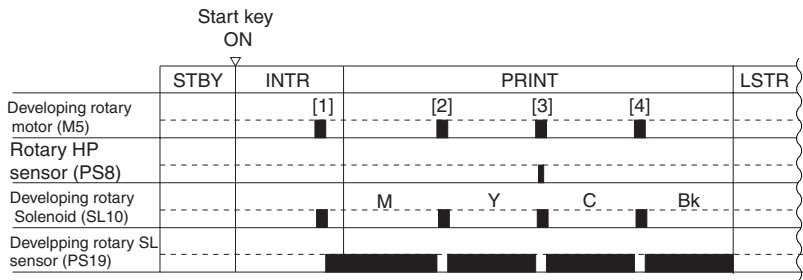

F-7-35

- 1 moves from the rotary home position to the point of M development.
- 2 moves from the point of M development to the point of Y development.
- 3 moves from the point of Y development to the point of C development.
- 4 moves from the point of C development to the rotary home position.

-Timing of Operation (developing rotary; mono color)

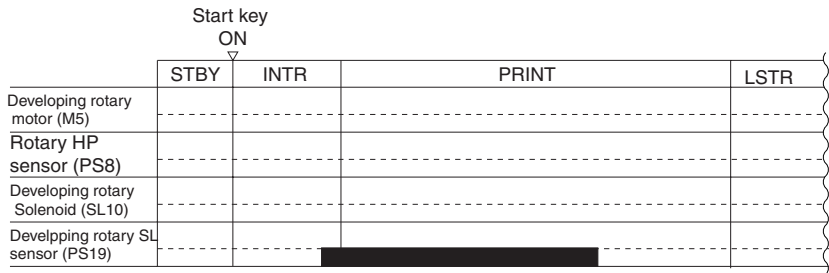

F-7-36



E021-0001 (developing rotary rotation error)

indicates that any of the following 2 conditions exists:

- 1. the home position flag cannot be detected.
- 2. an error occurred in the intervals at which the home position flag is detected while the developing rotary is rotating.

7.7 Developing Unit

7.7.1 Construction of the Color Developing Assembly

0003-1050


The machine uses 3 types of color developing assemblies (M, Y, C), all housed inside the developing rotary.

These color developing assemblies are of the same construction, the only difference being the color of toner (dye) supplied by individual toner cartridges.

The following shows the construction and the functions of the color developing assemblies:

T-7-16


Item	Description
1 Developing cylinder	holds toner (toner/carrier).
2 Blade	forms an even layer of toner on the developing cylinder.
3 Developer stirring screw	stirs the toner and supplies it to the developing cylinder.

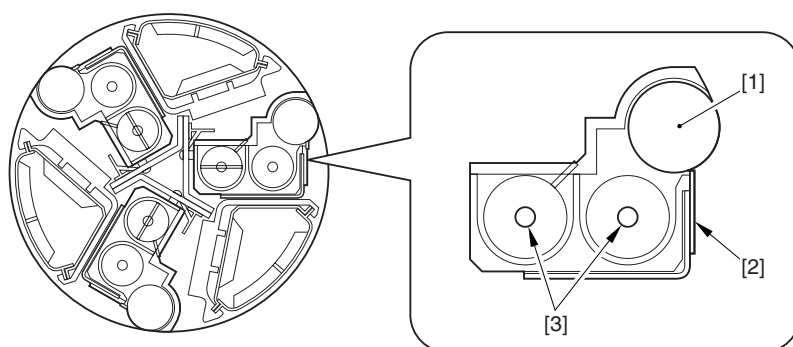

F-7-37

7.7.2 Controlling the Color Developing Assembly Drive Mechanism 0003-1110

The color developing assembly mainly consists of the developing cylinder, toner stirring screw A, and toner stirring screw B. These loads are driven when the color developing clutch (CL1) goes on, and are designed so that they go on only when development takes place.

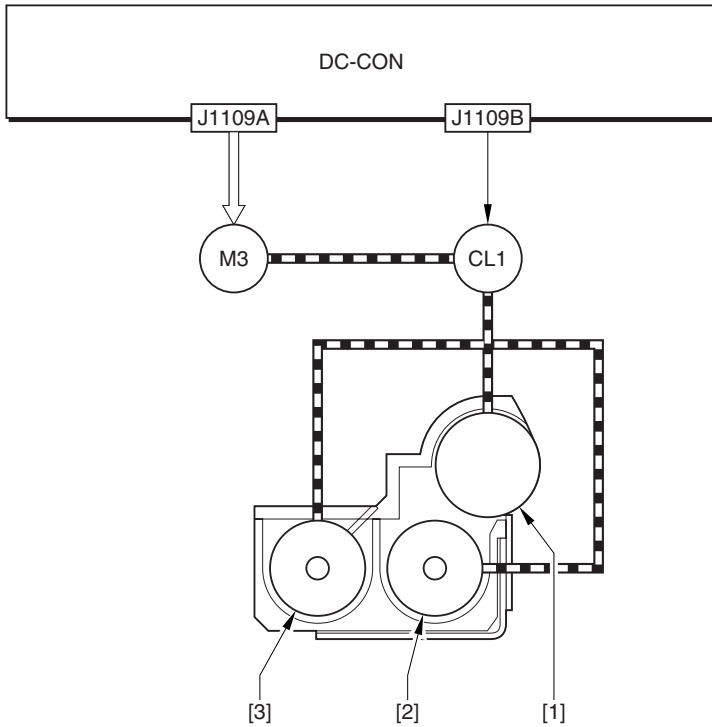

F-7-38

- 1 Developing cylinder
- 2 Toner stirring screw A
- 3 Toner stirring screw B


M3: development motor
 CL1: color developing clutch
 DC-CON: DC controller

7.7.3 Controlling the Color Developing Bias

0003-1113

The color developing bias is generated to enable depositing of color toner over the latent static image on the surface of the photosensitive drum.

The color developing bias may be either of 2 types of biases: color developing DC bias, color developing AC bias. These biases are generated by the high-voltage PCB 2 in response to a command from the DC controller, and are applied to the color developing cylinder at specific timing. The level of the bias is determined based on the result of potential control.

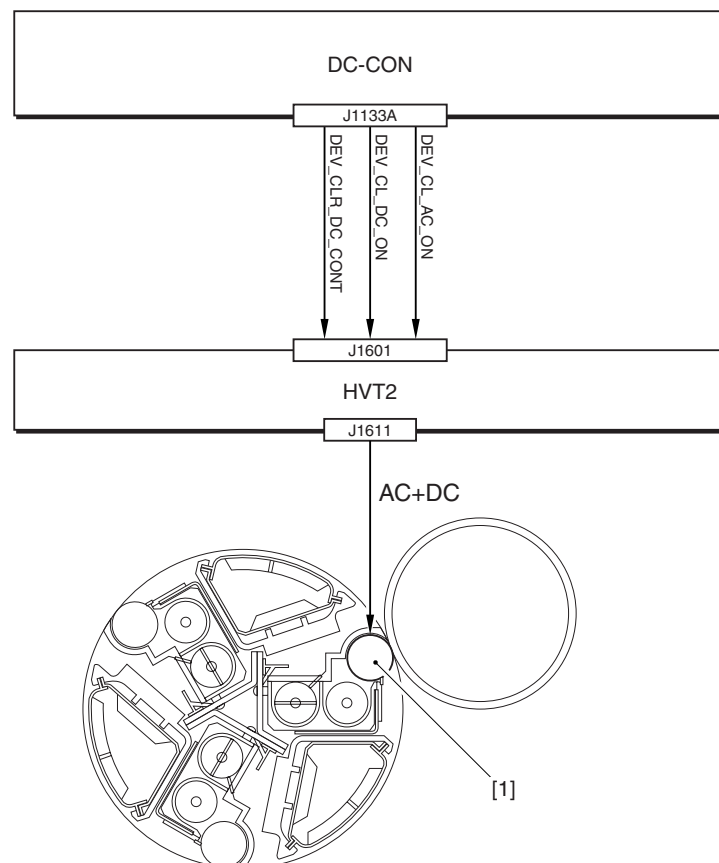

F-7-39

1 Color developing cylinder

DC-CON: DC controller


HVT2: high-voltage PCB 2

7.7.4 Color Toner Supply

0003-6236

The color toner is sent to the color toner developing assembly from the color toner cartridge by way of the buffer assembly. The supply path consists of 2 segments: the path in the buffer assembly and the path to the color developing assembly. In the former, toner inside the color toner cartridge is moved to the buffer assembly of the developing rotary. The work is done by rotating the developing rotary so that toner inside the color toner cartridge falls on its own into the buffer assembly. The latter, on the other hand, is done when the toner feedscrew found inside the buffer assembly rotates; the feedscrew is controlled by the DC controller, which turns on the development motor (M3) and the color toner supply clutch (CL2) according to the amounts of toner needed as indicated by the result of ATR control.

The toner feedscrew inside the buffer assembly is driven to rotate for a specific period of time to supply the color developing assembly with the exact amount of toner from the toner buffer assembly.

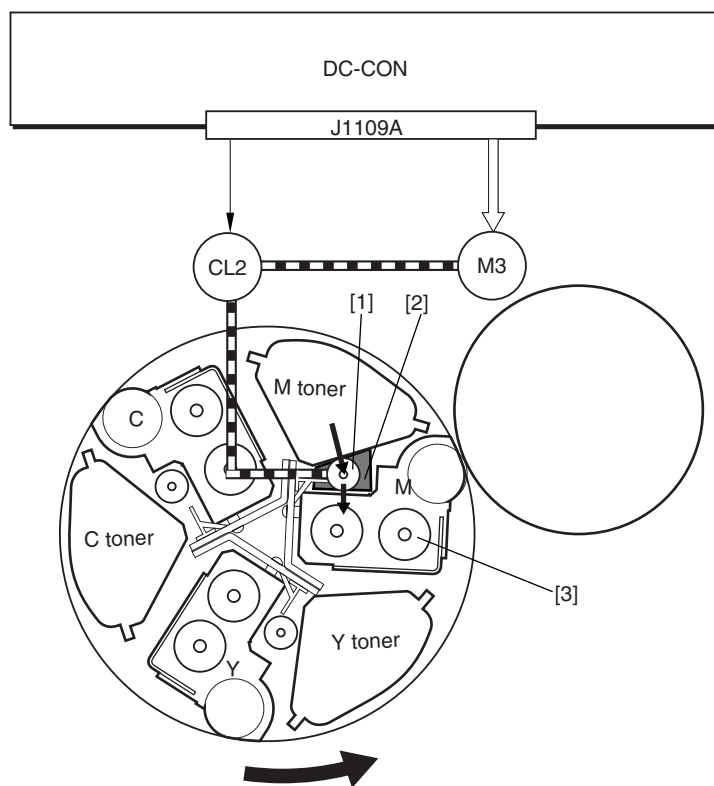

F-7-40

- 1 Color toner feedscrew
- 2 Buffer assembly
- 3 Color developing assembly

M3: development motor

CL2: color toner supply clutch

7.7.5 Detecting the Level of Color Toner

0003-1118

The machine is equipped with 2 types of detection mechanism to monitor the level of color toner:

1. based on the reading of the video counter
2. based on the state of the scanner sensor

Detection by the Reading of the Video Counter

The machine computes the amount of toner consumption for individual colors based on the video data coming from the main controller, and uses the result to find out the level of toner remaining inside the color developing assembly. The machine runs a check for every color print, and keeps the result of detection in the memory of the DC controller. The range of toner level is between 1% and 100% (in 1% increments).

Memo:

When the color toner starts to run out, the machine indicates the user message "Toner Running Short," with the level of toner falling to 10%. (at time of shipment)

The timing of indicating the message may be changed in service mode (between toner levels of 5% and 10%):
COPIER>OPTION>BODY>T-LW-LVL.



Detection by the Optical Sensor

The machine uses a penetration type sensor (color toner level sensor; PS25) to check the presence/absence of color toner; specifically, the DC controller monitors the state of PS25, which consists of a light-emitting segment (LED) and a light-receiving segment (PD).


When printing starts, the DC controller generates the LED drive signal (CL_TNR_SNS_ON) to turn on the LED. The light from the light-emitting segment moves through the light guide mounted to the cartridge to reach the inside of the toner cartridge. The light then moves through the toner cartridge and then along the light guide to reach the light-receiving segment, causing the color toner level detection signal (CL_TNR_REMAIN) to be sent to the DC controller.

The DC controller, in turn, detects the presence/absence of toner using the toner level detection signal occurring as the result of turning on the light-emitting segment of the sensor.

The following shows the timing of detection:

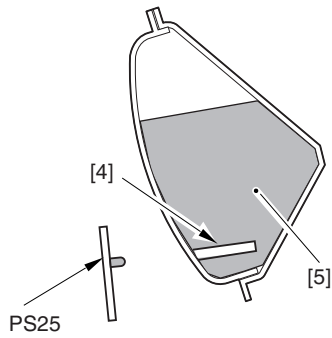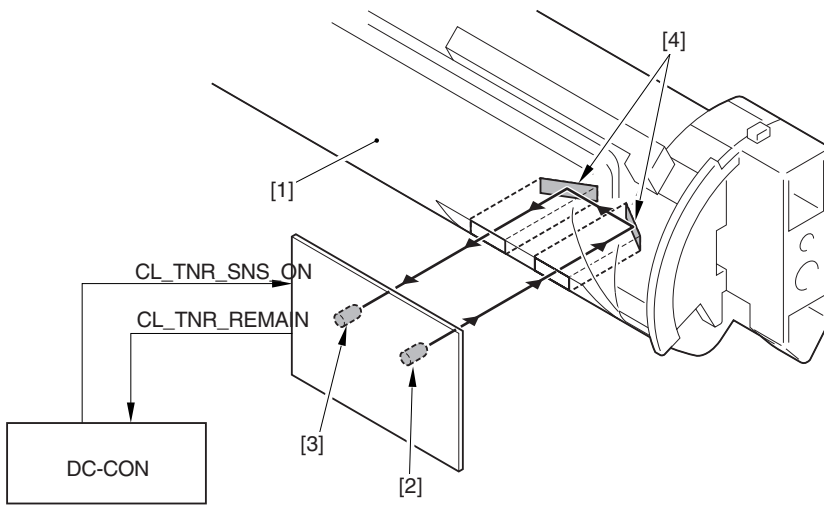

<Much Toner Left>

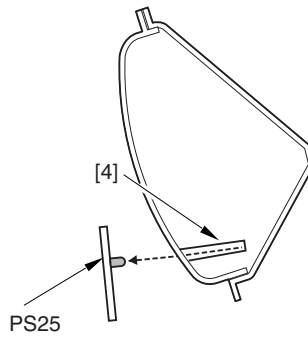

<Little Toner Left>


F-7-41

- 1 Toner cartridge
- 2 Light-emitting segment
- 3 Light-receiving segment
- 4 Light guide
- 5 Toner


PS25: color toner level sensor

DC-CON: DC controller

<Little Toner Left>

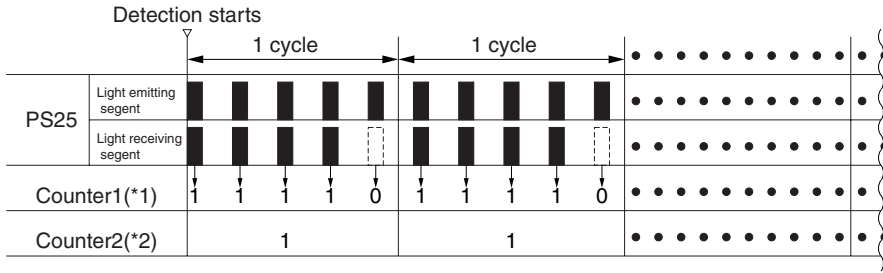

<Much Toner Left>

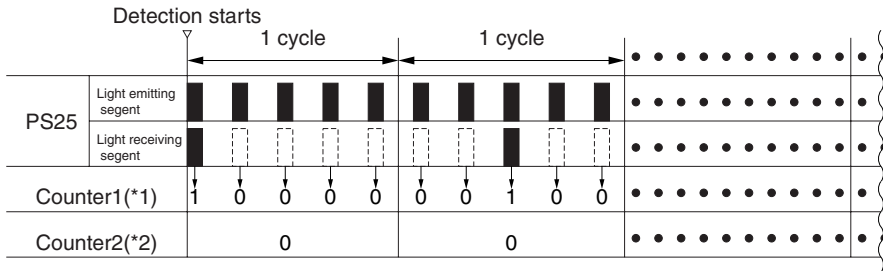

F-7-42

*1: if the light-receiving segment of PS25 receives light, '1'.

*2: if the state of counter 1 is '1' as many as 4 times during a single cycle (5 lighting operations), '1'.


Memo:

If color toner is absent, the user message "Add Toner" is indicated and the printing is stopped.

7.7.6 Construction of the Black Developing Assembly

0003-1147

The black developing assembly is found outside the developing rotary, and is held opposite the photosensitive drum at all times. The toner supplied to the black developing assembly is fed from the hopper assembly. The following shows the construction and the functions of the black developing assembly:

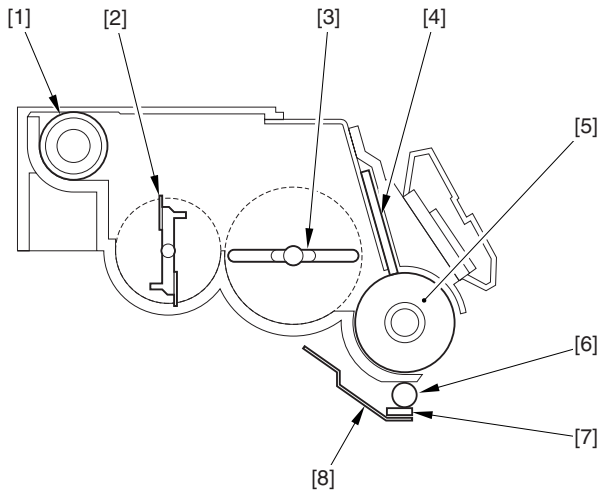

F-7-43


T-7-17

Item	Description
1 Toner feedscrew	moves toner supplied by the hopper assembly to the inside of the developing unit.
2 Toner stirring plate 1	supplies toner to the developing cylinder.
3 Toner stirring plate 2	supplies toner to the developing cylinder.
4 Blade	forms an even layer of toner on the developing cylinder.
5 Developing cylinder	retains toner
6 Toner collecting roller	attracts stray toner.
7 Scraper	scrapes off stray toner from the toner collecting roller.
8 Stray toner case.	collects stray toner in the toner case.

7.7.7 Controlling the Black Developing Assembly Drive Mechanism

0003-1152

The black developing assembly consists of 5 components in terms of drive loads, which are driven when the development motor (M3) and the black developing clutch (CL3) go on.

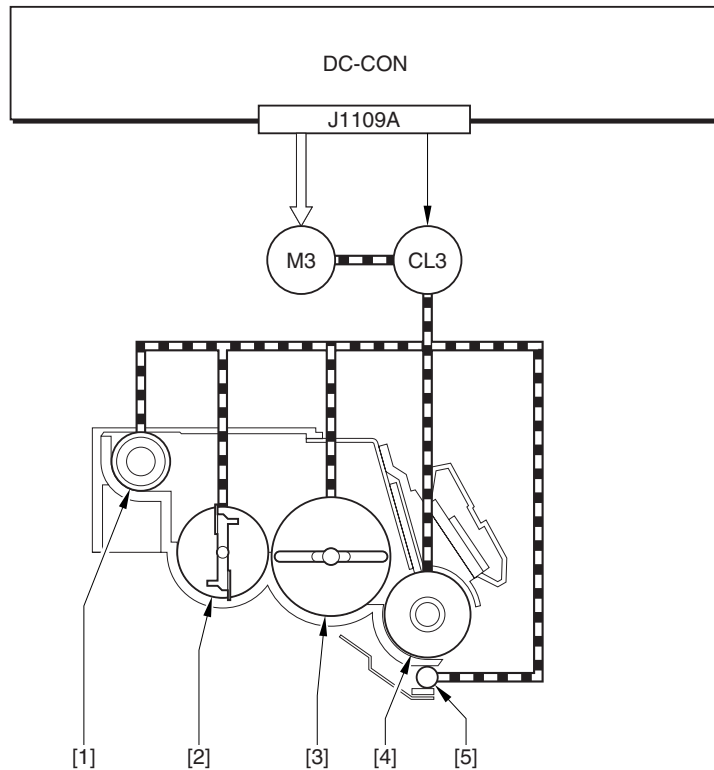

F-7-44

- 1 Toner feedscrew
- 2 Toner stirring plate 1
- 3 Toner stirring plate 2
- 4 Developing cylinder
- 5 Toner collecting roller

M3: development motor

CL3: black developing clutch

DC-CON: DC controller


7.7.8 Black Toner Supply

0003-1154

Black toner is supplied to the black toner developing assembly from the black toner cartridge by way of the hopper assembly, which plays the major role in the supply path.

As many as 2 motors are associated with the hopper assembly: black toner supply motor (M25) and hopper stirring motor (M23), serving to adjust the amount of toner sent to the black developing assembly.

The DC controller monitors the output of the black toner level sensor (TS1) and the toner level sensor (TS2) found inside the hopper, determining the amount of toner to supply to the hopper assembly or to the black toner developing assembly. When the toner starts to run out, the DC controller drives M25 or M23 to make up for the shortage; if the level of toner is high, it keeps M23 and M25 still.

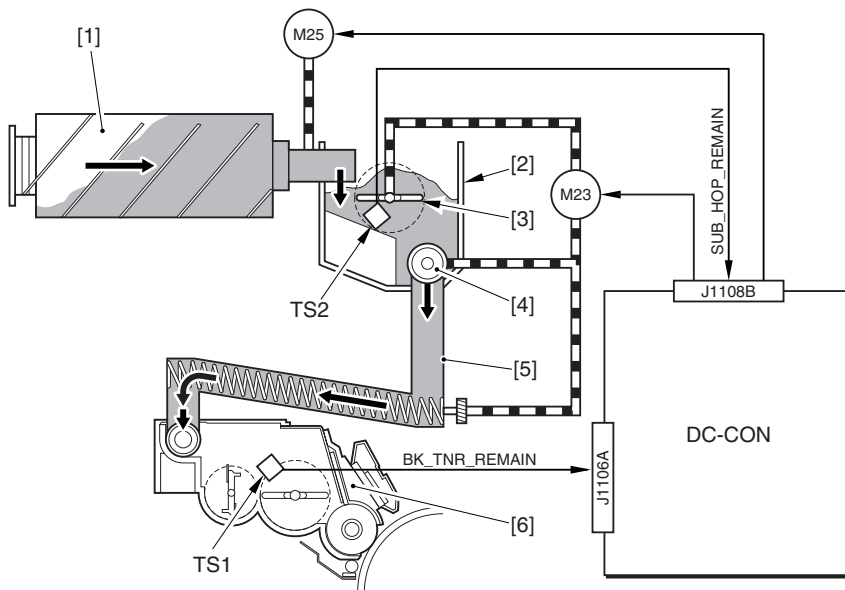

F-7-45

- 1 Black toner bottle
- 2 Hopper assembly
- 3 Toner stirring plate
- 4 Toner feedscrew
- 5 Toner feed pipe
- 6 Black developing assembly

M23: hopper stirring motor


M25: black toner supply motor

TS1: black toner level sensor


TS2: hopper inside toner level sensor

DC-CON: DC controller

The machine uses the following sequence of operation to make up for any shortage of toner.

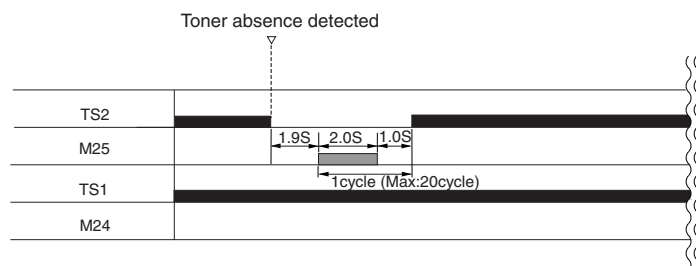-If Toner Inside the Hopper Assembly

F-7-46

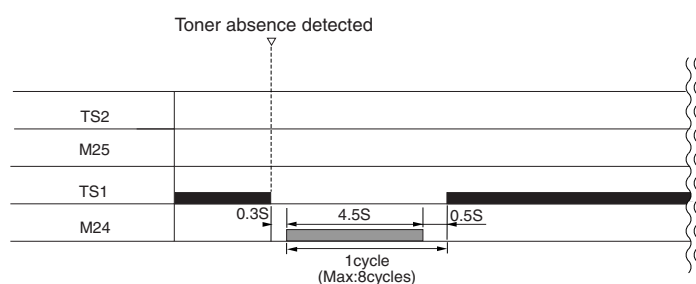-If Toner Runs Out in the Black Developing Assembly

F-7-47

**E020-00FF (hopper stirring motor error)**

indicates that ITS1=0 continues when the hopper stirring motor has been driven for 8 cycles (ON for 4.5 sec, OFF for 0.5 sec x 8 times) after the presence of toner inside the hopper (TS2=1) and the absence of toner (TS1=0) inside the black toner assembly have been detected.

Memo:

The following user messages are used in relation to black toner supply:

[Toner Running Short]

condition: TS1=0 exists 1 min after the black toner supply motor (M25) is started (no toner inside the hopper assembly).

state of printer: ready to print

[Add Toner]


condition: TS1 and TS2=0 exists 20 sec after the hopper stirring motor (M23) is driven. (no toner inside the black developing assembly).

state of printer: at rest

7.7.9 Controlling the Black Developing Bias

0003-1156

The black developing bias is used to enable depositing of black toner over the latent static image on the surface of the photosensitive drum, and there are 2 types of black developing biases: black developing DC bias and black developing AC bias. These biases are generated by the high-voltage PCB 2 in response to a command from the DC controller for application to the black developing cylinder.

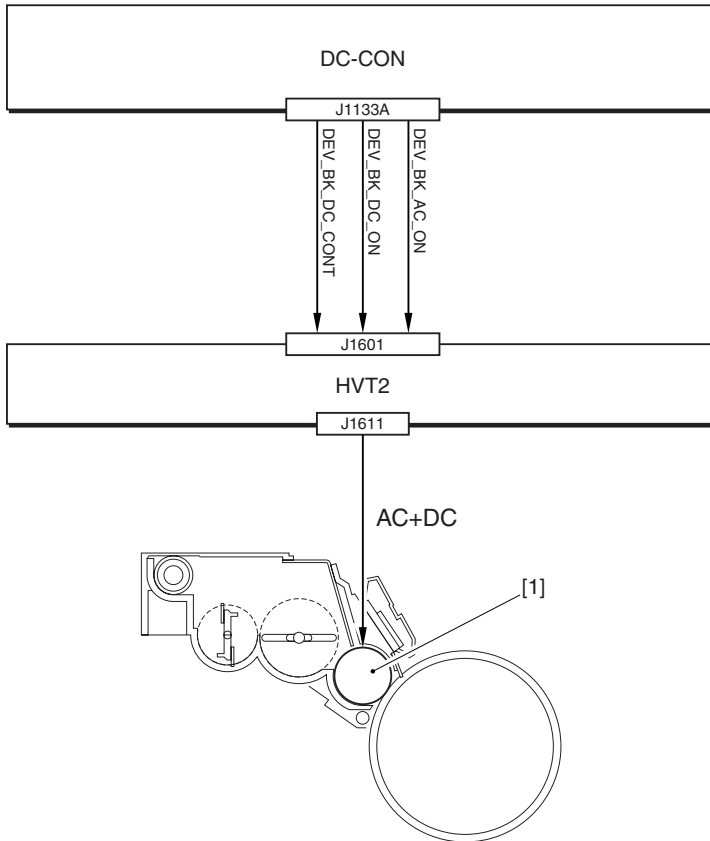

F-7-48

1 Black developing cylinder

DC-CON: DC controller

HVT2: high-voltage PCB 2


7.8 Transfer Device

7.8.1 Overview of the Transfer Assembly

0003-1171

The transfer assembly is divided into the primary transfer assembly and the secondary transfer assembly. The primary transfer assembly serves to transfer the toner image of the photosensitive drum to the ITB, while the secondary transfer assembly moves the image transferred to it onto paper.

The major components of the transfer assembly include the following: ITB cleaning screw, ITB cleaning blade, ITB drive roller, ITB, primary transfer static eliminator, primary transfer roller, tension roller, ITB inside cleaner end scraper, secondary transfer outside roller.

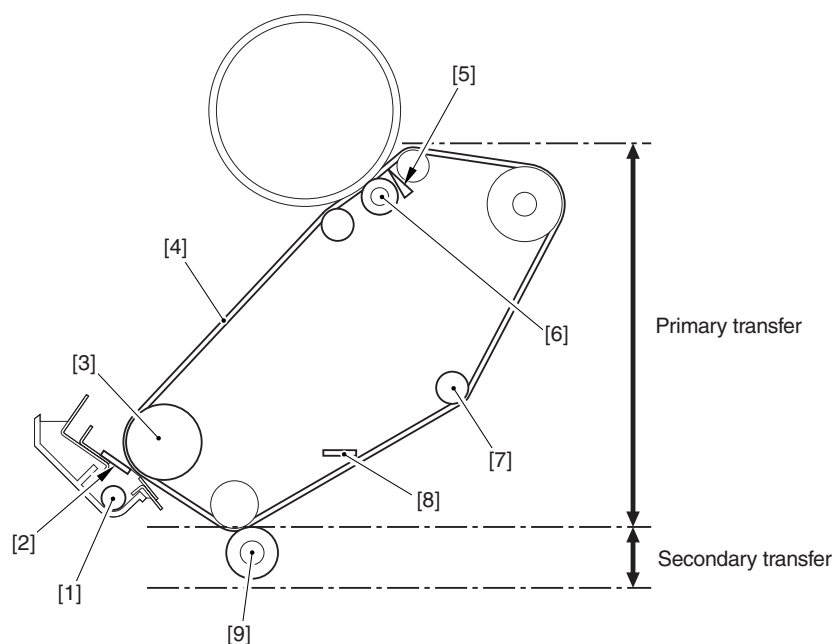

F-7-49


- 1 ITB cleaning screw
- 2 ITB cleaning blade
- 3 ITB drive roller
- 4 ITB
- 5 Primary transfer static eliminator
- 6 Primary transfer roller
- 7 Tension roller
- 8 ITB inside cleaner end scraper
- 9 Secondary transfer outside roller

7.8.2 Controlling the Transfer Bias

0003-1173

The transfer bias may be the primary transfer bias used in the primary transfer assembly or the secondary transfer bias used in the secondary transfer assembly.

There are 3 types of primary transfer biases (primary transfer DC bias, primary transfer DC reverse bias, primary transfer static eliminator bias), while there are 2 types of secondary transfer biases (secondary DC bias, secondary transfer DC reverse bias). These biases are generated by the high-voltage PCBs 2 and 3 according to the instructions of the DC controller, and are applied to their respective loads (primary transfer roller, primary transfer static eliminator, secondary transfer outside roller).

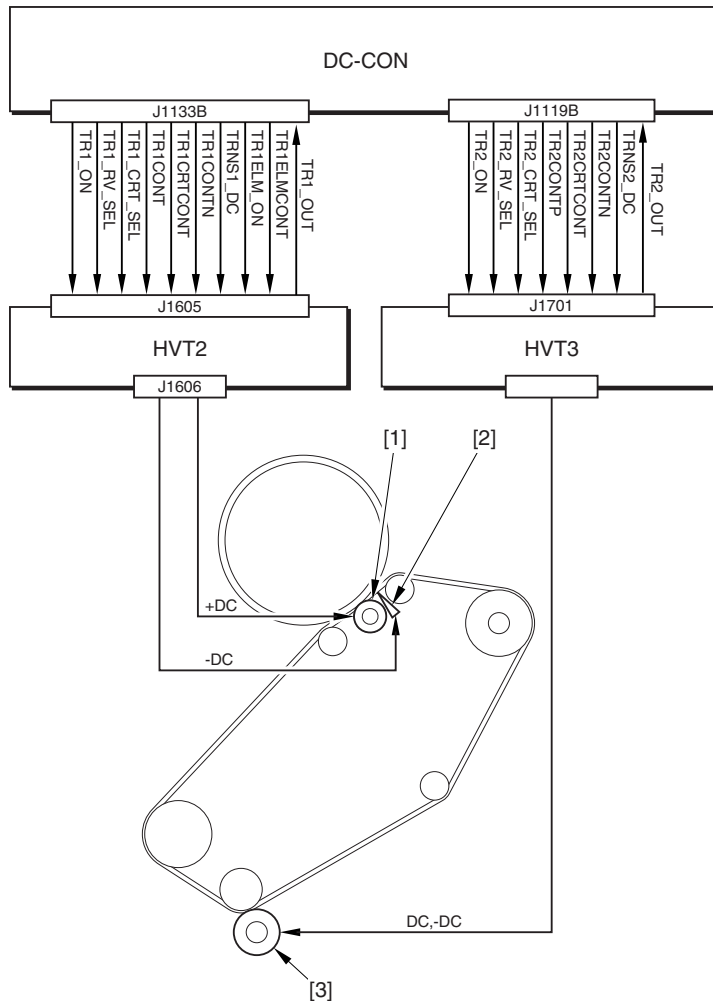

F-7-50

- 1 Primary transfer roller
- 2 Primary transfer static eliminator
- 3 Secondary transfer outside roller

HVT2: high-voltage PCB 2

HVT3: high-voltage PCB 3

DC-CON: DC controller

What follows below is an additional explanation of the individual biases used in the transfer assemblies:

1. Primary Transfer Bias (application bias: DC)

The primary transfer bias is used to transfer the toner image on the photosensitive drum to the ITB, and is applied to the primary transfer roller.

2. Primary Transfer Reverse Bias (application bias: -DC)

This bias is used to clean (remove) the patch pattern formed on the ITB for image stabilization control (Dmax, Dhalf, ATR).

In the course of image stabilization control, this bias is applied so that the patch pattern (toner) is returned from the ITB to the photosensitive drum for collection by the photosensitive drum cleaner.

3. Primary Transfer Static Eliminator Bias (application bias: -DC)

The primary transfer static eliminator is arranged to the side of the primary transfer roller, serving to prevent the toner image from flying astray as the result of discharge between the ITB and the primary transfer downstream roller.

4. Secondary Transfer Bias (application bias: DC, -DC)

The secondary transfer bias is used to transfer the toner image from the ITB to paper. There are 2 types of secondary transfer biases, and they are applied to the secondary transfer outside roller.


At time of printing, a DC bias is applied to the secondary transfer outside roller. The DC reverse bias is used to remove the residual toner from the secondary transfer roller; its application will cause the residual toner on the secondary transfer roller to be attracted to the ITB for collection to the waste toner bottle by the work of the ITB cleaner.

7.8.3 Overview of the Primary Transfer Assembly

0003-1177

The primary transfer assembly is driven by 2 motors, mainly serving to rotate major rollers and relocate the rollers. The drum/ITB motor (M2) is used to rotate the ITB drive roller and the ITB cleaning screw; the ITB cleaner shift motor (M21), on the other hand, is used to move the ITB cleaner to and from the ITB belt.

The rollers are moved when the DC controller operates the 2 motors; the DC controller, also checks the home position of the ITB cleaner for use when it moves the ITB cleaner to and from the ITB.

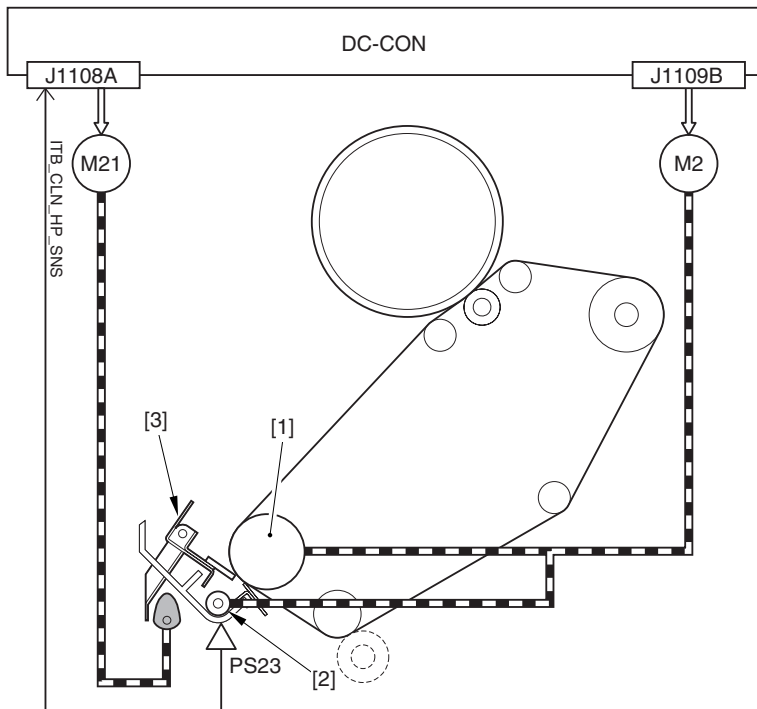

F-7-51

- 1 ITB drive roller
- 2 ITB cleaning screw
- 3 ITB cleaner

PS23: ITB cleaning home position sensor

M2: drum/ITB motor

M21: ITB cleaner shift motor


DC-CON: DC controller

7.8.4 Controlling the ITB Cleaner Shifting Mechanism

0003-1180

The machine moves the ITB cleaner to and from the ITB for removal of toner remaining on the ITB. To bring the cleaner into contact with the belt, the DC controller drives the ITB cleaner shift motor (M21) at the following timing of operation:

1. immediately after the start of secondary transfer, the DC controller generates the ITB cleaner shift motor drive signal so that M21 rotates clockwise for about 0.8 sec.
2. the shift cam rotates clockwise, raising the shift arm (thereby locking the ITB cleaner in place against the ITB).
3. when cleaning of the ITB is done, the DC controller generates the ITB center shift motor drive signal so that M21 rotates clockwise for about 0.8 sec.
4. the shift cam rotates clockwise so that the shift arm lowers (thereby causing the ITB cleaner to move away from the ITB).

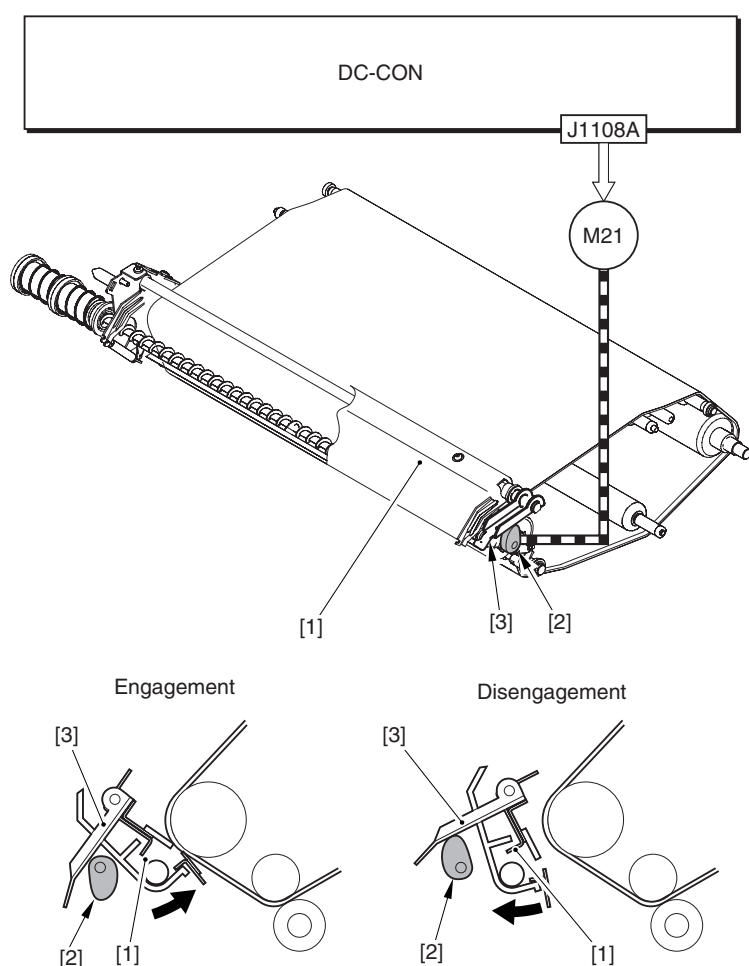

F-7-52

- 1 ITB cleaner
- 2 Shift cam
- 3 Shift arm

M21: ITB cleaner shift motor


DC-CON: DC controller

7.8.5 Checking the ITB Cleaner Position

0003-1182

The machine runs a home position search to locate the ITB cleaner. The DC controller checks the location with reference to the output of the ITB cleaner home position sensor (PS23).

When the power is turned on or the front cover is opened/closed, the DC controller checks to find out if the home position flag attached to the drive shaft of the ITB cleaner shift motor (M21) blocks M23.

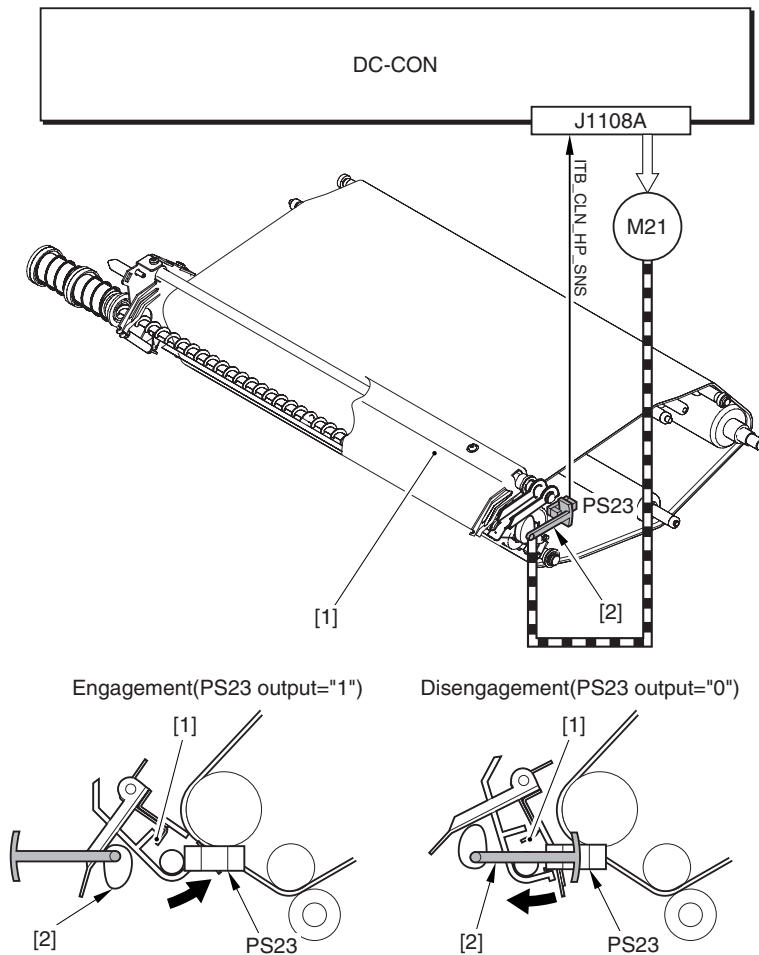

F-7-53

1 ITB cleaner

2 ITB cleaner home position flag

PS23: ITB cleaner home position sensor

M21: ITB cleaner shift motor

DC-CON: DC controller




E078-0001 (ITB cleaner shift motor error)

indicates that the ITB cleaner remains locked in position (PS23=1) 5 sec after the ITB cleaner shift motor (M21) is started.

7.8.6 Overview of the Secondary Transfer Assembly

0003-1183

The secondary transfer outside roller shift motor (M20) drives the secondary transfer outside roller to move it into contact with or away from the ITB inside the secondary transfer assembly. The DC controller controls the operation of M26 for the movement; it also runs a check on the secondary transfer outside roller for its location (i.e., to see if it is in contact with the belt).

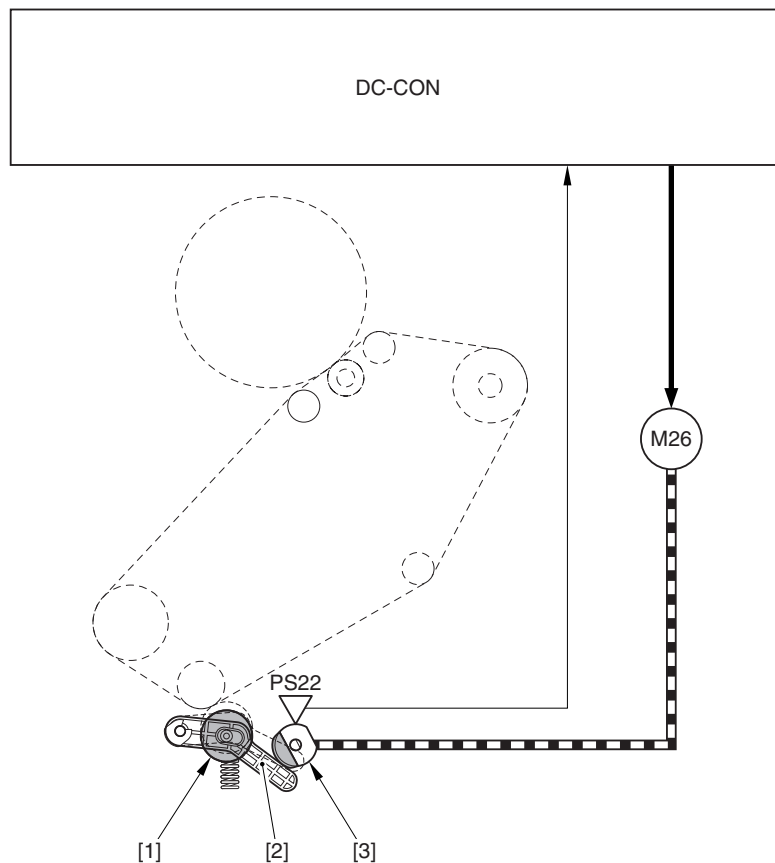

F-7-54

- 1 Secondary transfer outside roller
- 2 Shift arm
- 3 Shift cam

PS22: secondary transfer outside roller home position sensor

M20: secondary transfer outside roller shift motor


DC-CON: DC controller

7.8.7 Controlling the Movement of the Secondary Transfer Roller

0003-1184

The machine moves the secondary transfer outside roller into contact with or away from the ITB for transfer of toner images from the ITB to paper. The DC controller drives the secondary transfer outside roller shift motor (M20) to move the roller at the following timing of operation:

1. after primary transfer, the DC controller generates the secondary transfer roller shift motor drive signal so that M20 rotates clockwise for about 0.8 sec.
2. the shift cam rotates clockwise to move down the shift arm (thereby locking the secondary transfer outside roller in place against the ITB).
3. after secondary transfer, the DC controller generates the secondary transfer outside roller shift motor drive signal so that M20 rotates clockwise for about 0.8 sec.
4. the shift cam rotates clockwise so that the contact arm is moved up and the secondary transfer outside roller is moved away from the ITB.

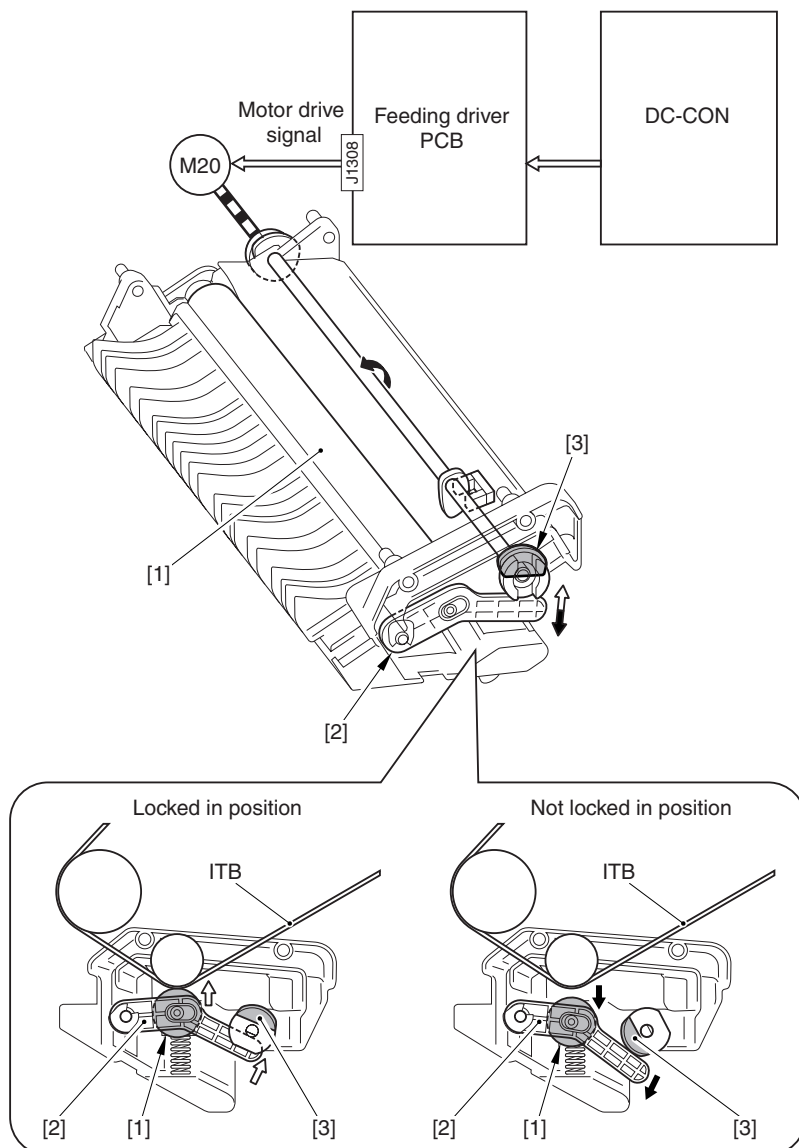

F-7-55

- 1 Secondary transfer outside roller
- 2 Shift arm
- 3 Shift cam

M20: secondary transfer outside roller shift motor


DC-CON: DC controller

7.8.8 Checking the Location of the Secondary Transfer Roller

0003-1244

The machine runs a home position search to check the location of the secondary transfer outside roller, i.e., the DC controller checks on the output of the secondary transfer outside roller home position sensor (PS22).

When the power is turned on or the front cover is opened/closed, the DC controller checks the location of the secondary transfer outside roller with reference to whether the home position flag attached to the drive shaft of M20 is blocking PS22.

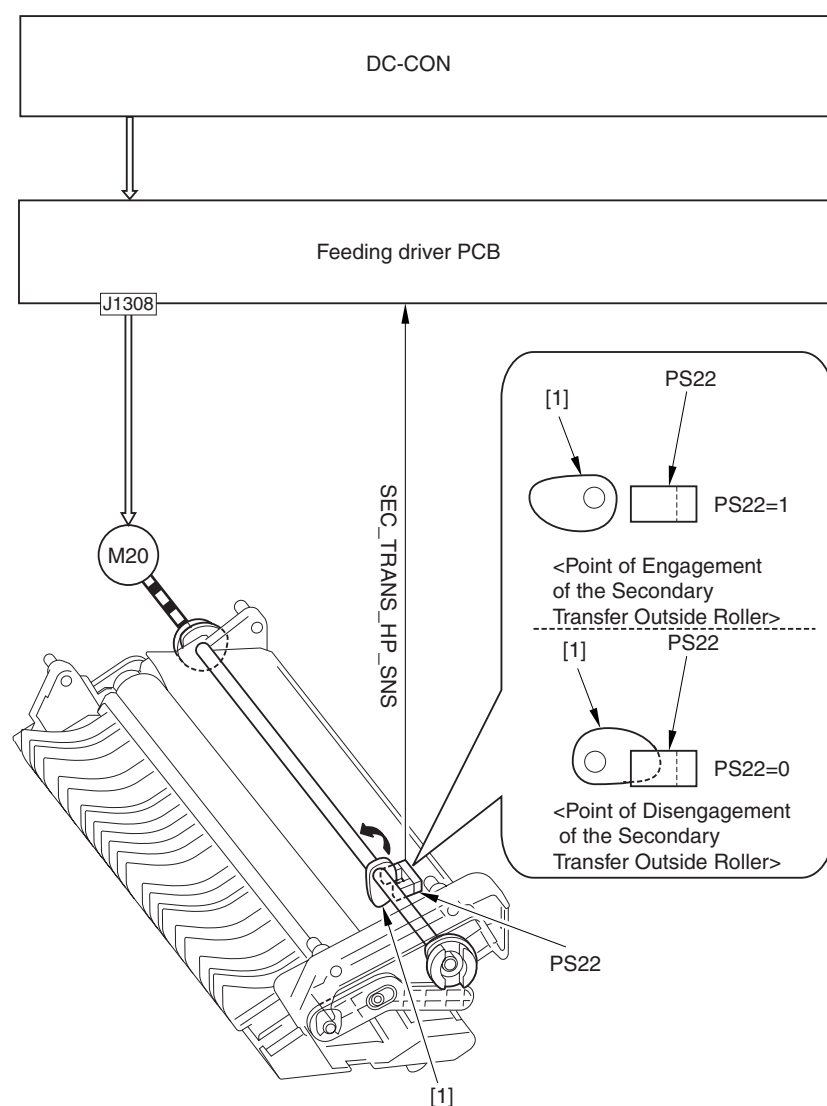

F-7-56

1 Secondary transfer outside roller home position flag

PS22: secondary transfer outside roller home position sensor

M20: secondary transfer outside roller shift motor

DC-CON: DC controller



E077-0001 (secondary transfer outside roller shift motor error)


indicates that the secondary transfer roller remains locked in place (PS22=1) 5 sec after the secondary transfer outside roller motor (M20) is started.

7.8.9 Detecting the ITB Home Position

0003-1248

The machine is programmed to check the ITB home position to make sure that the image write start position is correct. It uses the ITB home position sensor (PS1, PS30) to check the home position detection surfaces (2 reflecting surfaces) found at the edge of the ITB using the following sequence of operation:

1. when a print command arrives, the DC controller rotates the ITB; upon detection of a reflecting surface, PS1 and PS30 send their respective home position detection signal to the DC controller (1_TOP_SNS_A, 1_TOP_SNS_B).
2. in response, the DC controller assumes that the detection signal that first arrives represents the home position (1_TOP1A; see Memo); then, it increases its count each time the next reflecting surface is detected (I_TOP2A, I_TOP3A, I_TOP4A, and so on).
3. in the case of full color printing, the DC controller generates the sub scanning sync signal (PVREQ) as many as 4 times based on these signals, and sends them to the main controller. Thereafter, the DC controller receives video data of individual colors 4 times to form images of individual colors at specific points of the ITB.

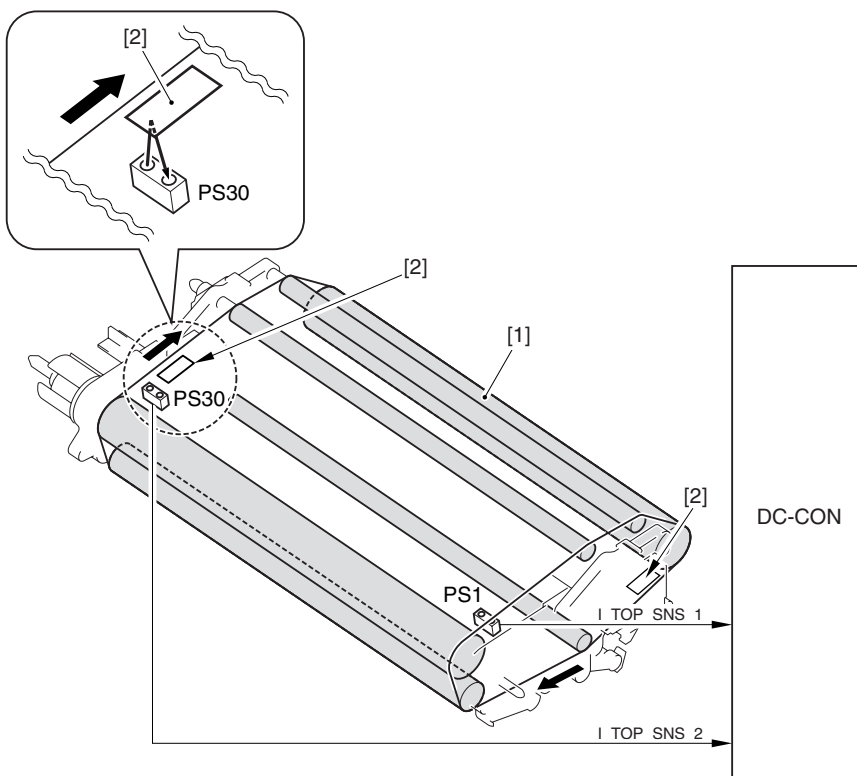

F-7-57

1 ITB

2 Reflecting surface

PS1: ITB home position sensor A

PS30: ITB home position sensor B

DC-CON: DC controller

Memo:


The side A home position detection signal (I_TOP1A) is the signal used when forming an image for a single page at a time.

The side B home position detection signal (I_TOP1B) is the signal used when forming images for 2 sides at a time. The DC controller uses the output of the sensor (PS1 or PS30) that detects the reflecting surface of the ITB first as indicating the home position for side A. It then assumes the point reached a specific period of time after side A home position to be side B home position.

The machine uses the following sequence of operation to form images in different printing modes:

-Full Color, 1 Print

The machine generates the PVREQ (request) signal for individual colors with reference to the ITB home position detection signal (I_TOP1A) of side A, used for the formation of an image.

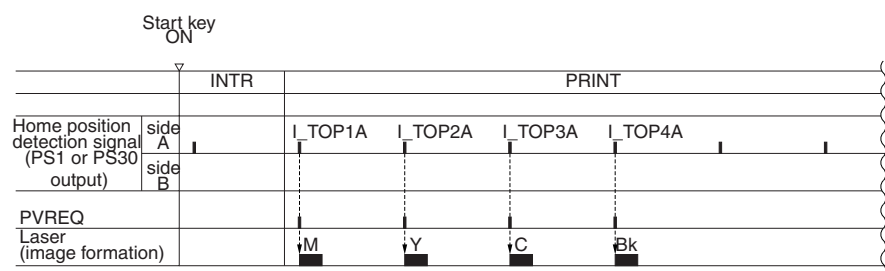


F-7-58

- Full Color, 2 Prints, Continuous (2-page placement; see Note)

The machine generates the PVREQ (request) signal for individual colors based on the ITB home position detection signal (I_TOP1B) of side B and the home position detection signal (I_TOP1A) of side A, used for the formation of an image.

For the 1st side, the image is formed in sequence with reference to I_TOP1A; for the 2nd side, on the other hand, the images are made in sequence based on I_TOP1B.

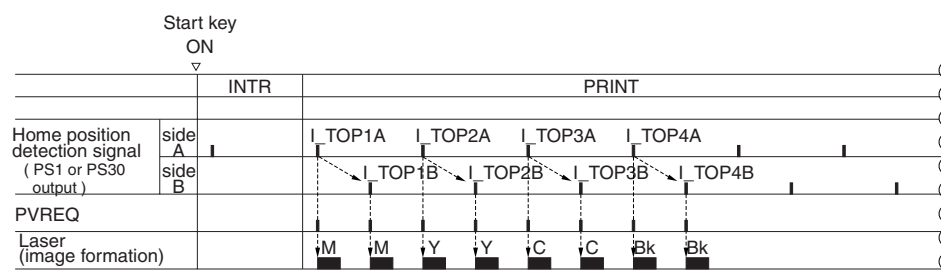

F-7-59




The term "2-paper placement" refers to printing in which images for 2 pages are formed on the ITB at the same time. It may be used for up to LTR size (sub scanning direction), limited by the interval between 2 home position detection signals.

-Mono Color, Continuous

In mono color printing, a single color is used so that the point of image formation on the ITB may vary; the DC controller, therefore, does not run an ITB home position search as it would in the case of color printing.

The machine determines the home position based on the reading of the timer of the DC controller, and generates the PVREQ (requires) signal, used for the formation of an image.

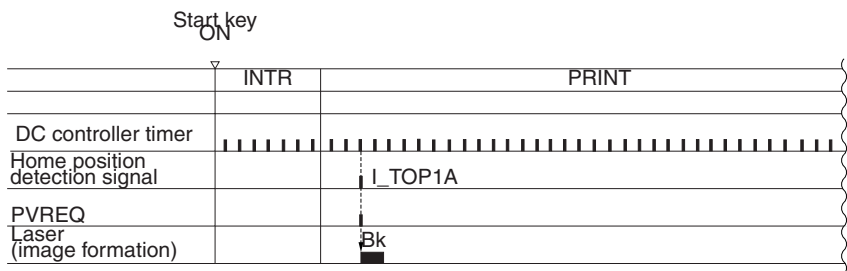


F-7-60

7.8.10 Separation

0003-1259

The machine uses the curvature separation method, in which the rigidity of paper is used for its separation from the ITB. To assist the separation, the machine uses the static eliminator to reduce the charge on the back of paper, thus weakening the static bonding between the paper and the ITB.

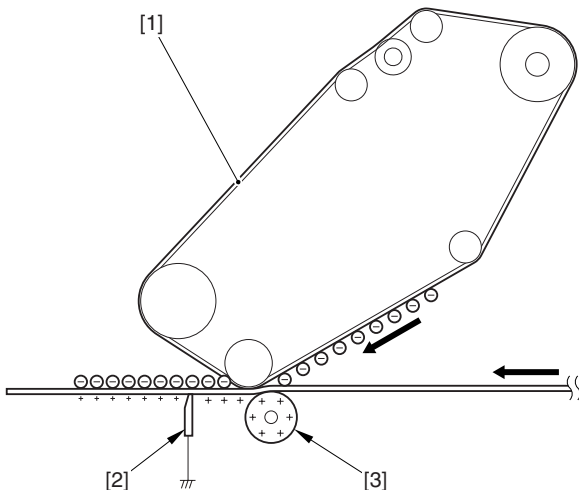

F-7-61

- 1 ITB
- 2 Separation static eliminator
- 3 Secondary transfer outside roller

7.9 Photosensitive Drum Cleaning


7.9.1 Overview of the Drum Cleaning Unit

0003-6411

The drum cleaning unit is found next to the photosensitive drum inside the process unit, and it is equipped with the function of collecting residual toner from the photosensitive drum. The unit consists of 4 components, serving to clean the photosensitive drum in preparation for the next print cycle.

The residual toner collected by the unit is moved forward by the waste toner feedscrew for collection in the waste toner case fitted to the back of the machine.

The following shows the arrangement of the major components:

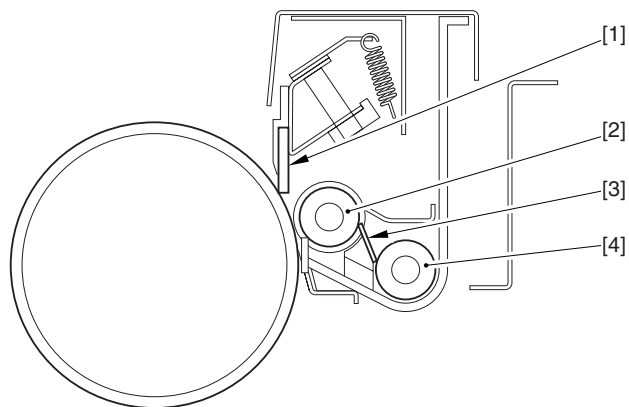


F-7-62

- 1 Cleaning blade
- 2 Magnet roller
- 3 Waste toner layer guide blade
- 4 Waste toner feedscrew

7.9.2 Controlling the Drum Cleaning Unit Drive Mechanism

0003-6412

The drum cleaning unit possesses 2 drive loads; they are controlled by the DC controller, and turned on when the ITB/drum motor (M2) goes on.

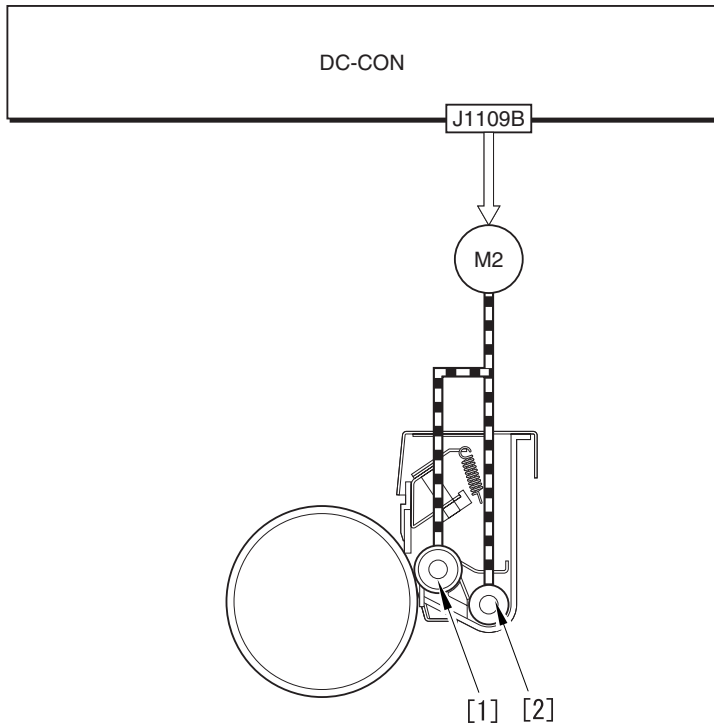

F-7-63

1 Magnet roller

2 Waste toner feedscrew

M2: ITB/drum motor

DC-CON: DC controller


7.10 Waste Toner Collection Mechanism

7.10.1 Collection of Waste Toner

0003-6401

The machine uses its waste toner bottle to collect waste toner from 3 imaging units (i.e., drum cleaning unit, color toner developing assembly, ITB cleaning unit). The mechanism of collection involves the DC controller, which drives the development motor (M3) to turn the screw inside the waste toner pipe.

The waste toner pipe is connected to the toner discharge outlet so that the rotation of M3 automatically moves the waste toner through the waste toner pipe to the waste toner bottle.

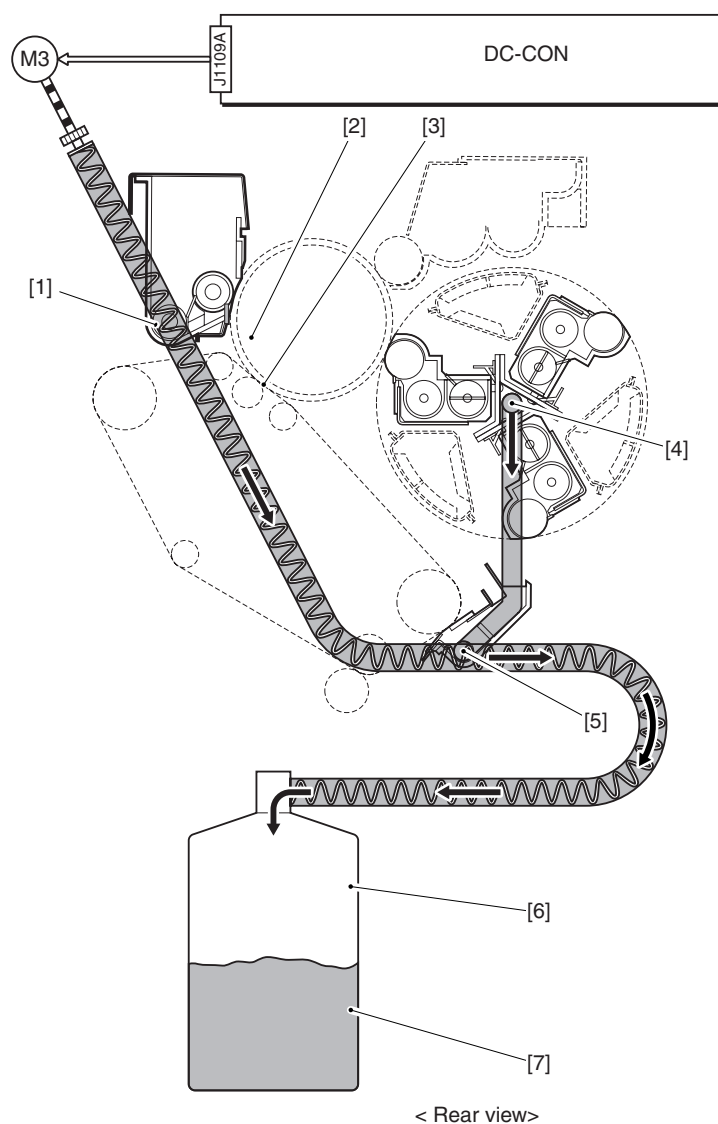

F-7-64

- [1] Drum cleaning unit discharge opening
- [2] Waste toner tube
- [3] Waste toner feedscrew

[4] Color developing unit discharge opening

[5] ITB cleaning unit discharge opening

[6] Waste toner bottle

[7] Waste toner

[8] Waste toner feedscrew gear

M3: developing motor

SW1: waste toner lock detecting switch

DC-CON: DC controller

7.10.2 Detecting the State of the Waste Toner Bottle (full)

0003-6402

The machine checks the state of the waste toner bottle to see if it is full and thus to prevent overflowing of waste toner. The waste toner bottle collects waste toner from 3 image formation units (drum cleaning unit, color toner developing assembly, and ITB cleaning unit).

The amount of waste toner is checked with reference to the soft counter reading kept by the DC controller, and the soft counter reading is based on computations of the following data:

1. paper size
2. color mode (full or mono)
3. image ratio


The DC controller monitors the soft counter at all times, and executes the following operation when the reading exceeds the following:

T-7-18

Counter reading	Detection	Printer operation
210000 or higher	waste toner full caution	continues to operate (indicating a user message)*1.
250000 or higher	waste toner full	stops (indicating a service error)*2

*1: the message will read "Waste Toner Bottle Full" on the control panel.

*2: for details, see Memo.

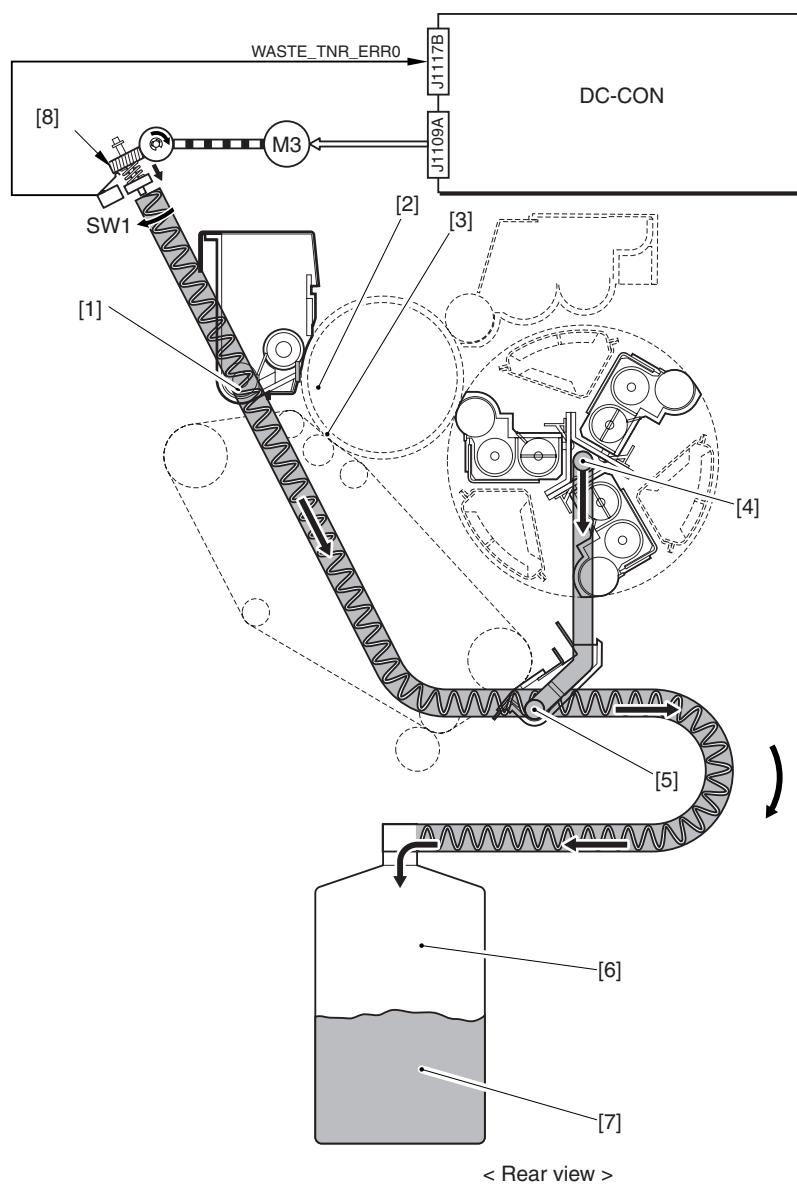

F-7-65

- [1] Drum cleaning unit discharge opening
 - [2] Waste toner tube
 - [3] Waste toner feedscrew
 - [4] Color developing unit discharge opening
 - [5] ITB cleaning unit discharge opening
 - [6] Waste toner bottle
 - [7] Waste toner
 - [8] Waste toner feedscrew gear
- M3: developing motor
 SW1: waste toner lock detecting switch
 DC-CON: DC controller

Memo :

E013-0001 (waste toner full error)

indicates that the soft counter reading is 250000 or higher.

E013-0002 (waste toner feedscrew error)

indicates that the output of the waste toner lock detecting switch (SW1) is "1" for 1 sec or more. (If the waste toner feedscrew fails to rotate when the developing motor (M3) is driven, the waste toner feedscrew is pushed in the direction of the arrow, thus turning on SW1.)



1. The reading of the waste toner may be checked or reset using the following service mode item:

COPIER>COUNTER>MISC>WASTE-TNR

2. The timing of messages (waste toner full pre-warning, waste toner full warning) may be changed using the following service mode item:

* to change the timing of indicating the waste toner full pre-warning, COPIER>ADJUST>MISC>WT-FL-LM (at time of shipment, set to 210000).

* to change the timing of indicating the waste toner full error, COPIER>ADJUST>MISC>WT-ER-LV (at time of shipment, set to 40000).

7.11 Parts Replacement Procedure


7.11.1 Process Unit

7.11.1.1 Removing the Right

Cover (upper)

0003-8201

- 1) Remove the 2 screws [1], and detach the right cover (upper) [2].

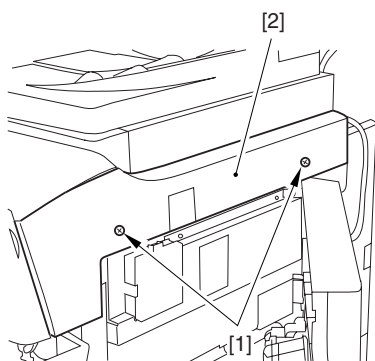


F-7-66

7.11.1.2 Freeing the Front

Cover


0003-8202

- 1) Open the front cover.
- 2) While pulling on the grip [1], fully open the manual feed cover [2] to the front.

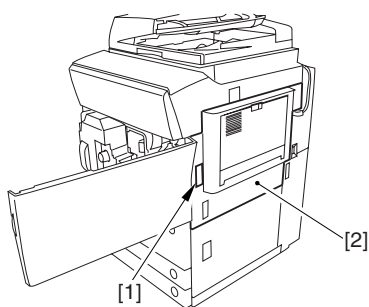


F-7-67

- ⚠** If a side paper deck exists, remove the 2 screws [1] and the latch plate (front)

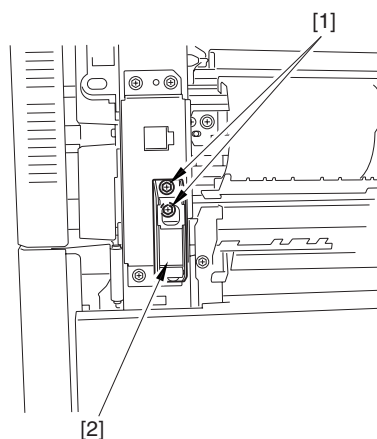


F-7-68

- 3) Slide out the fixing/feeding assembly
- 4) Remove the 2 screws [1], and detach the process unit cover [2].

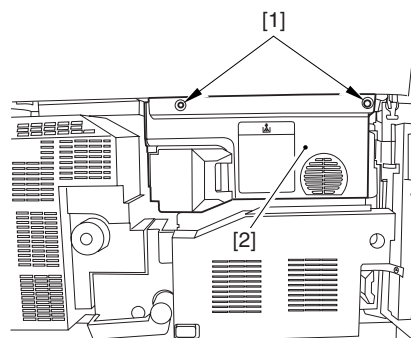


F-7-69

- 5) Push in the fixing/feeding assembly, and set the lever in place.
- 6) Push the release button [1] of the right deck, and slide out the right deck [2].

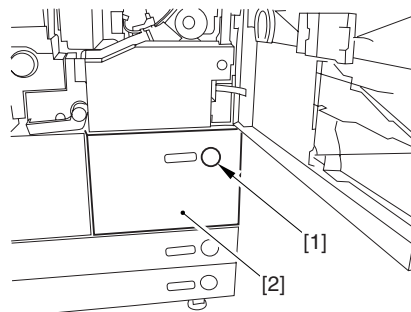


F-7-70

7) Remove the screw [1] from lower right, and detach the front cover strap [2].

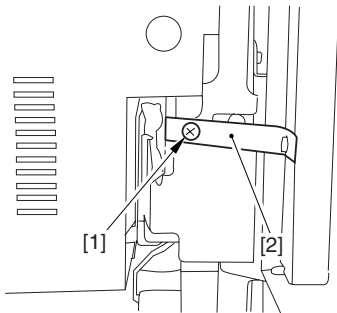


F-7-71

2) Shift down the lever [1], and detach the black toner bottle [2].

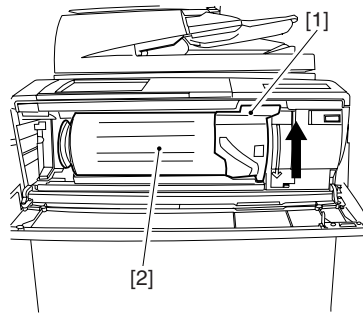


F-7-74

8) Remove the 2 screws [1] (binding) of the front cover hinge, and fully open the front cover [2].

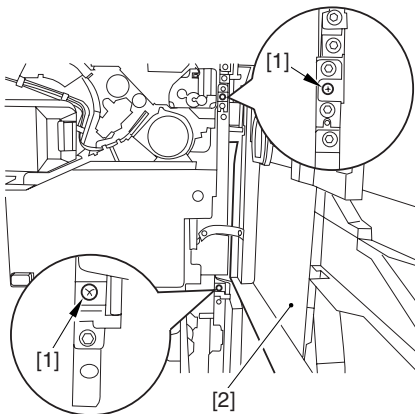

F-7-72

⚠ Once you have released the hopper assembly, toner can spill over the toner bottle supply mouth of the hopper assembly cover. Be sure to wipe off any such toner.

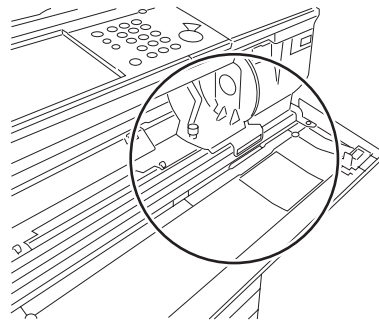


F-7-75

9) Close the right deck.

7.11.1.3 Releasing the Hopper Assembly


0003-8203

1) Open the black toner supply cover [1].

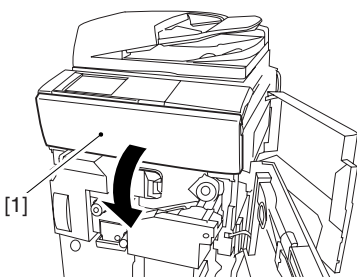


F-7-73

3) Remove the 3 screws [1].

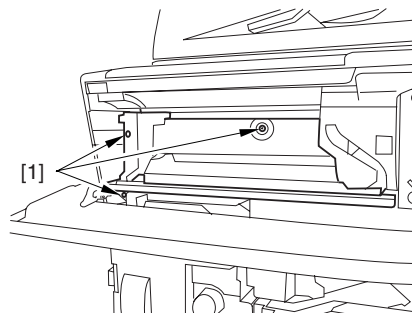

F-7-76


- 4) Close the black toner supply cover [1]; then, fully open the hopper assembly [2].

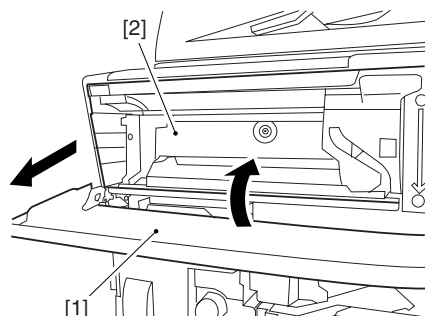

F-7-77

7.11.1.4 Removing the Pre-Transfer Charging Assembly [0005-7265](#)


- 1) Remove the screw [1], and disconnect the connector [1]; then, detach the pre-transfer charging assembly [3] from the machine.

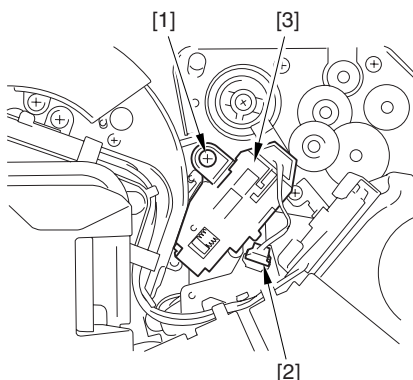

F-7-78


7.11.1.5 Removing the Transfer Cleaner Drive Assembly [0003-8214](#)

- 1) Open the color toner supply mouth cover [1].

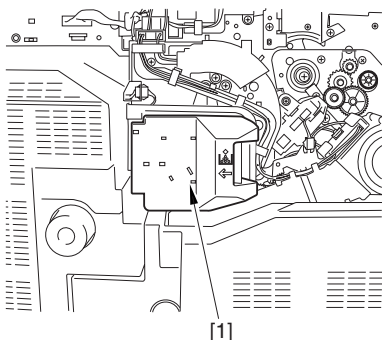


F-7-79

- 2) Disconnect the connector [1], and remove the screw [2]; then, detach the color toner supply cover [3].

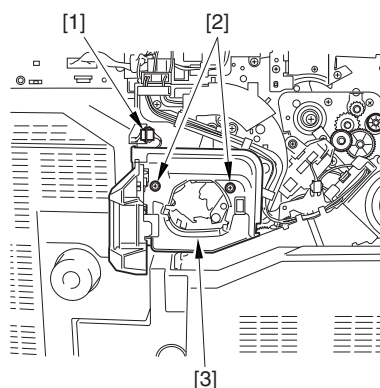


F-7-80

- 3) Slightly slide out the fixing/feeding assembly.
4) Disconnect the connector [1] to free it from the wire guide [2].

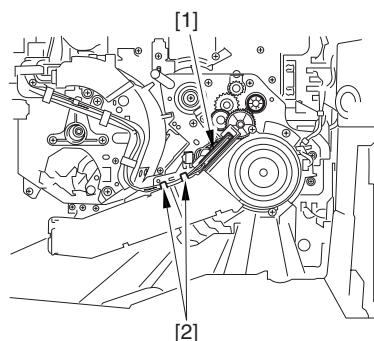


F-7-81

- 5) Remove the screw [1], and shift down the locking plate [2].

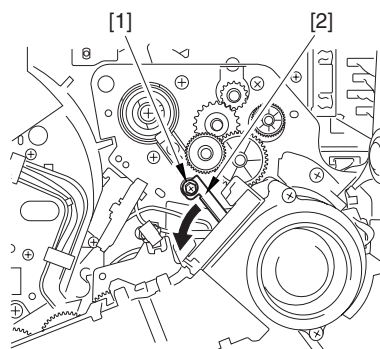

F-7-82

6) Disconnect the connector [1], and remove the 5 screws [2]; then, detach the transfer cleaner driver assembly [3].

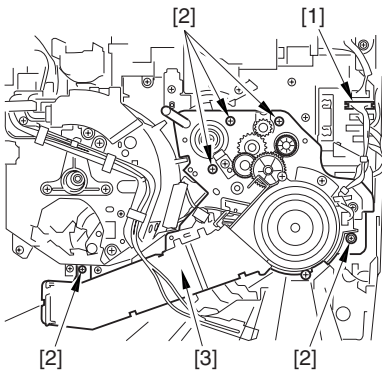


F-7-83

7.11.1.6 Removing the Intermediate Transfer Unit

0003-8215


1) Disconnect the 2 connectors [1].

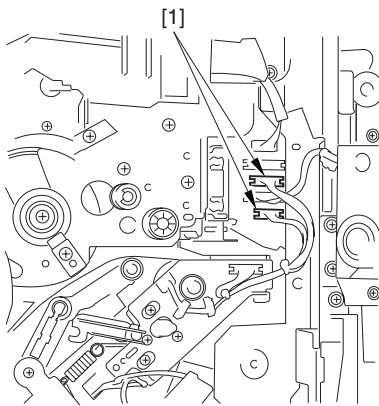

F-7-84

2) Fully slide out the fixing/feeding assembly.
3) Slide out the intermediate transfer assembly [1] to the front; when it stops, shift it slightly to the upper right and then slide it farther out to detach.

⚠ Do not touch the surface of the ITB. Also, be sure to slide the intermediate transfer assembly straight out so as to prevent damage to the surface of the ITB.

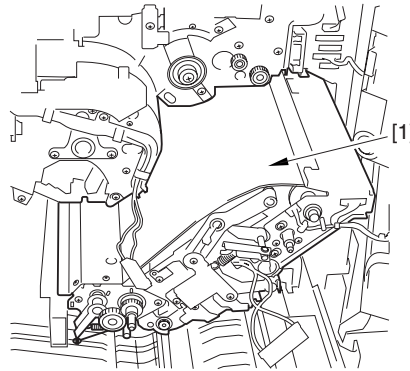


F-7-85

7.11.1.7 Cleaning the Surface of the Intermediate Transfer Unit


0006-0326

1) Place the ITB unit [1] on paper for protection.

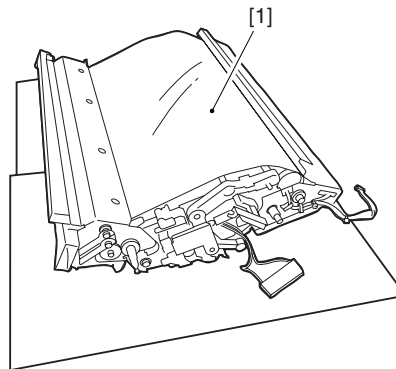


F-7-86

2) Turn the drive gear [1] by hand in the direction of the arrow to move the intermediate transfer belt [2] about 50 mm.

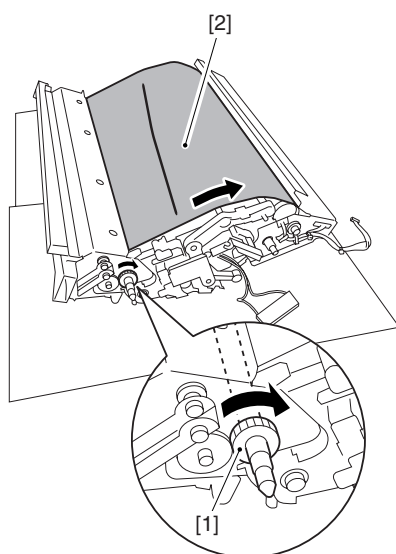


F-7-87

3) If there is any toner [3] on the surface of the intermediate transfer belt, dry wipe it with lint-free paper.

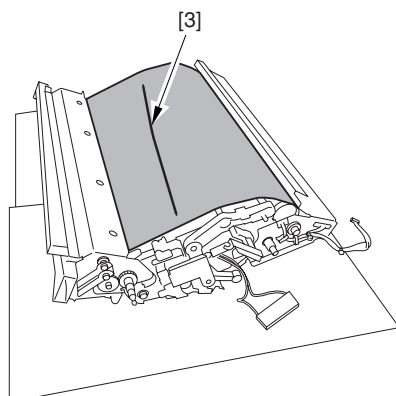

F-7-88

⚠ When you remove the transfer cleaner drive assembly, the ITB cleaning blade [1] is likely to come into contact with the intermediate transfer belt by the work of a spring, causing toner [2] to deposit on the belt surface in the form of lines. The toner can then be forced against the photosensitive drum by the primary transfer assembly, thus affecting the photosensitive drum cleaning blade [3].

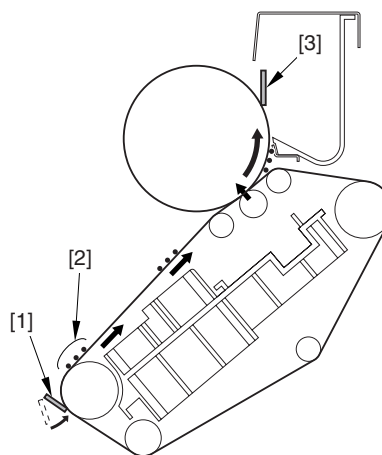


F-7-89

7.11.1.8 Removing the Process

Unit


0003-2410

1) Disconnect the 2 connectors [1] found at the upper right.

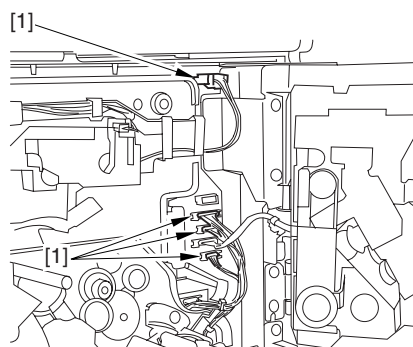


F-7-90

2) Disconnect the 5 connectors [1] found at the upper left.

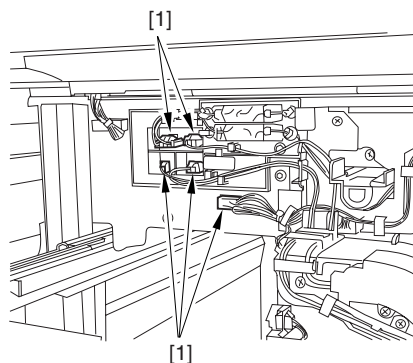


F-7-91

3) After freeing the cable from the 2 wire saddles [2], fix the high-voltage connector cable [1] in place using the cable hook [3] to avoid trapping it during the work.

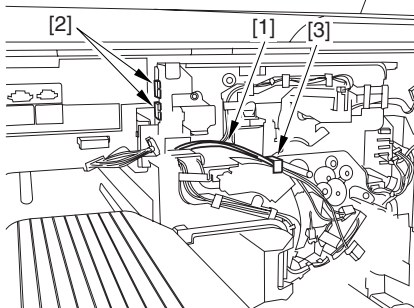

F-7-92

4) Take out the process unit cover [1] from the shipping box, and detach the drum stop tool [2] from its back.

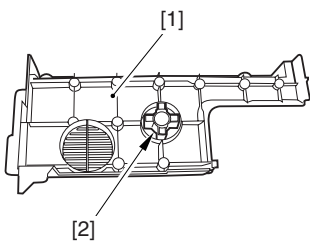


F-7-93

5) Hold the drum fixing member [1] in place using the drum stop tool [2]. Then, using a screwdriver, remove the drum fixing screw [3].



1: As shown in the figure, be sure to remove the screw on the protrusion [4] of the drum stop only after matching it against the notch [5] in the drum flange.

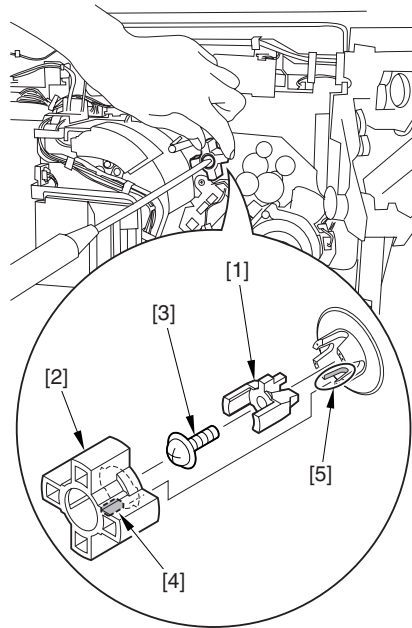


F-7-94

2: When drawing out the process unit, be sure to find out the position of the protrusion [1] of the drum fixing member in relation to the marking [2] on the drum flange.

In the example in the figure, the marking [2] on the drum flange is at "." on the left and at ".." on the right in relation to the protrusion [2] of the drum fixing member.


Moreover, when you close the process unit, it is important that the spatial relationship between the protrusion of the drum fixing member and the marking on the drum flange is as it was before you drew out the unit.

6) Using a pair of precision pliers, detach the drum fixing member [1].

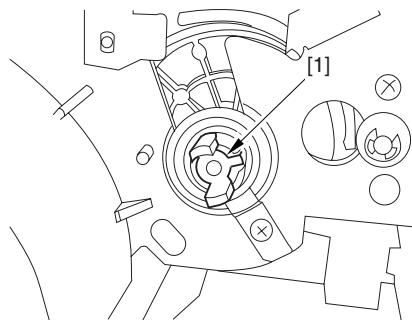


F-7-95

- 7) Remove the 2 binding screws [1].

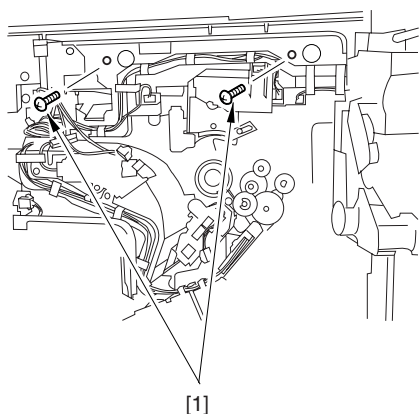


F-7-96

- 8) Shift down the fixing/feeding assembly releasing lever [1] in the direction of the arrow.

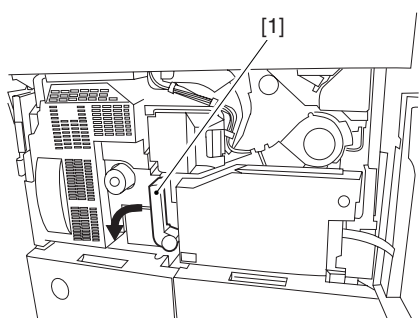


F-7-97

- 9) Slide out the fixing/feeding assembly [1] toward the front.

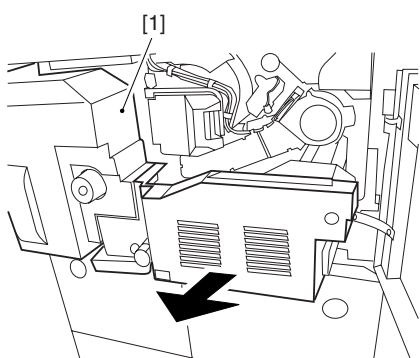


F-7-98

- 10) While pushing on the 2 drawer hooks [1] found on both sides of the fixing/feeding assembly, pull out the fixing/feeding assembly [2] fully.

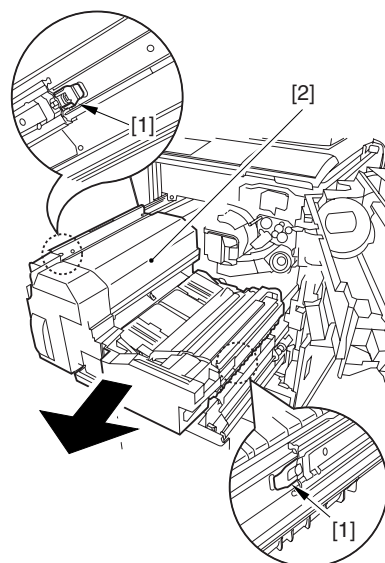


F-7-99

- 11) Lift both ends [1] of the process unit slightly, and fully pull out the process unit [2] toward the front.

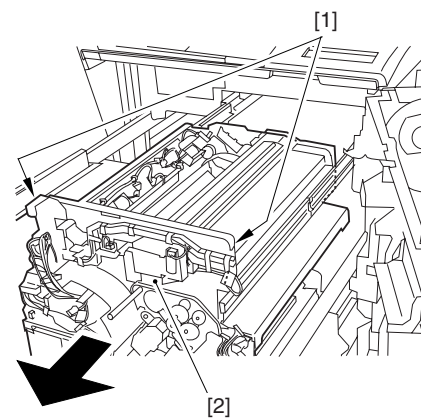

F-7-100

- 12) Lift the 2 locations [1] indicated in the diagram, and detach the process unit [2].

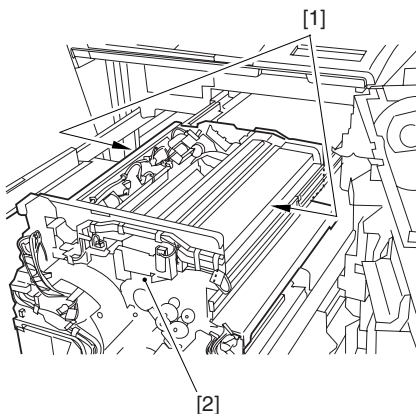

F-7-101

7.11.1.9 Points to Note When

Mounting the Process Unit [0002-6282](#)


When using the drum fixing screw, be sure always to use the drum stop tool. Otherwise, the photosensitive drum can rotate clockwise, causing the edge of the blade to bend over and, ultimately, leading to cleaning faults. Be sure also to hold the drum stop tool in place while removing the drum fixing screw. The drum stop tool is attached to the back of the process unit cover.

7.11.2 Pre-exposure LED Array

7.11.2.1 Preventing Right

Cover (upper) [0003-8247](#)

- 1) Remove the 2 screws [1], and detach the right cover (upper) [2].

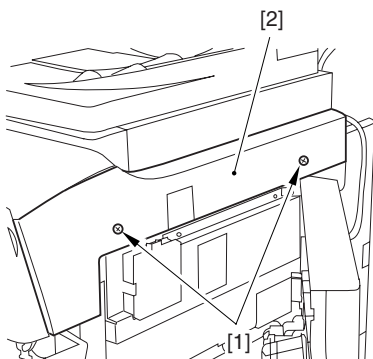


F-7-102

7.11.2.2 Freeing the Front

Cover


[0003-2510](#)

- 1) Open the front cover.
2) While pulling on the grip [1], fully open the manual feed cover [2] to the front.

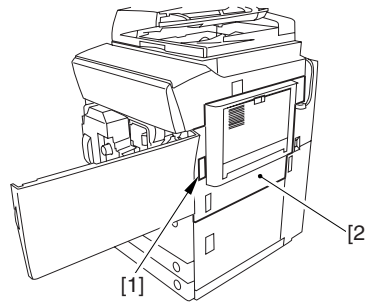


F-7-103

- ⚠** If a side paper deck exists, remove the 2 screws [1] and the latch plate (front)

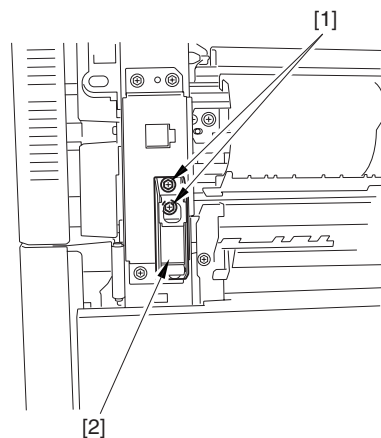


F-7-104

- 3) Slide out the fixing/feeding assembly
- 4) Remove the 2 screws [1], and detach the process unit cover [2].

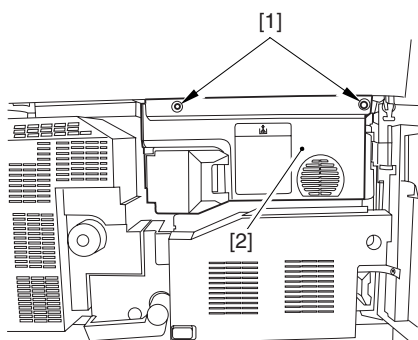


F-7-105

- 5) Push in the fixing/feeding assembly, and set the lever in place.
- 6) Push the release button [1] of the right deck, and slide out the right deck [2].

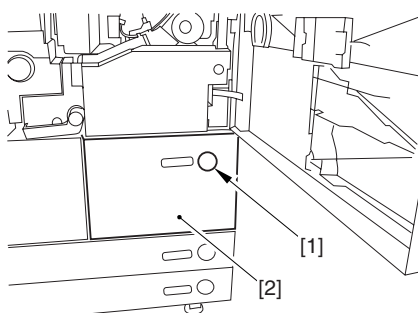


F-7-106

- 7) Remove the screw [1] from lower right, and detach the front cover strap [2].

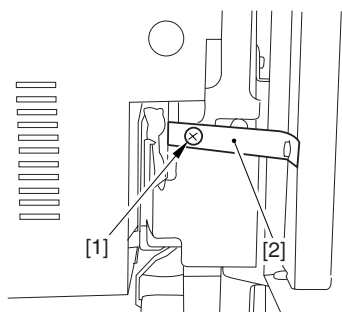

F-7-107

- 8) Remove the 2 screws [1] (binding) of the front cover hinge, and fully open the front cover [2].

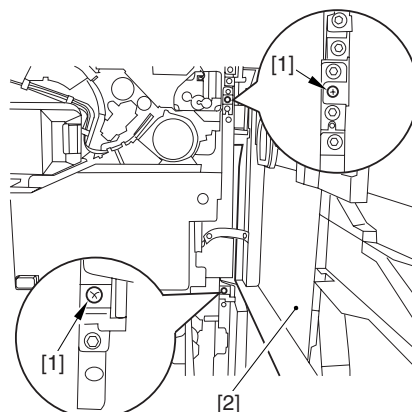


F-7-108

- 9) Close the right deck.

7.11.2.3 Sliding Out the Process Unit


0003-2508

- 1) Disconnect the 5 connectors [1] found at the upper right.

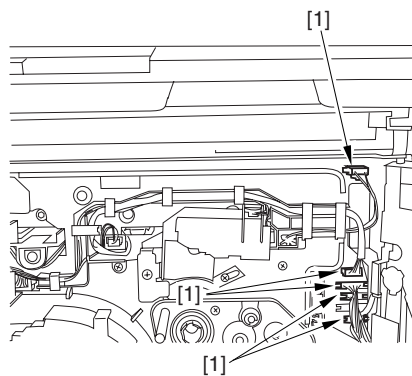


F-7-109

2) Disconnect the 5 connectors [1] found at the upper left.

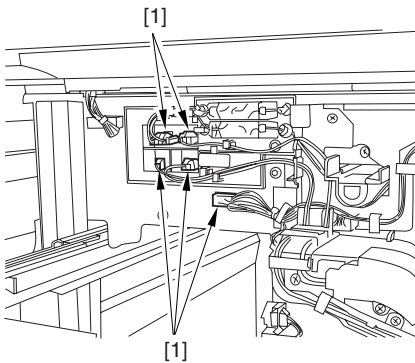


F-7-110

3) After freeing the high-voltage connector cable [1] from the 2 wire saddles [2], fix the cable in place using the cable hook [3].

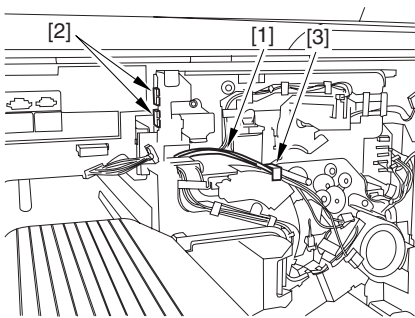

F-7-111

4) Take out the process unit cover [1] from the shipping box, and detach the drum stop tool [2] from the back of the cover.

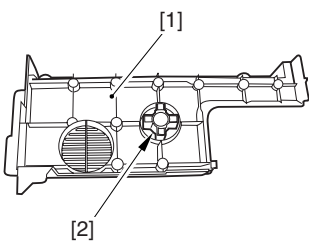


F-7-112

5) While forcing the drum stop tool [3] against the drum fixing member [2] of the drum shift [1], remove the fixing screw [4].



1: Be sure to match the protrusion [5] of the drum fixing member and the protrusion [6] of the drum stop tool.

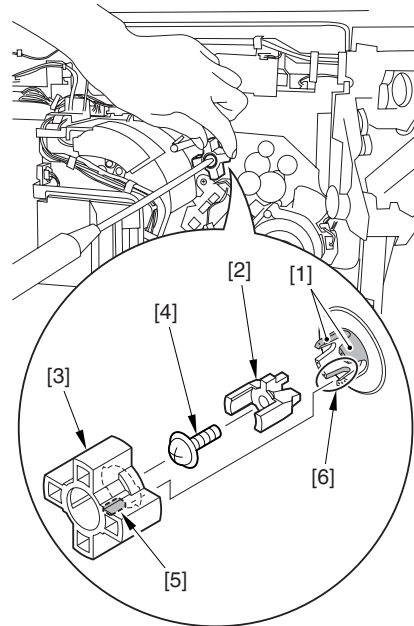


F-7-113

2: When drawing out the process unit, be sure to find out the position of the protrusion [1] of the drum fixing member in relation to the marking [2] on the drum flange.

In the example in the figure, the marking [2] on the drum flange is at "." on the left and at ".." on the right in relation to the protrusion [2] of the drum fixing member.


Moreover, when you close the process unit, it is important that the spatial relationship between the protrusion of the drum fixing member and the marking on the drum flange is as it was before you drew out the unit.

6) Using a pair of fine pliers, remove the drum fixing member [1].

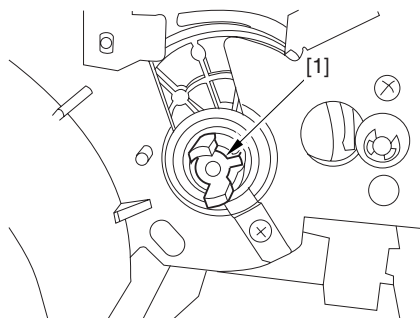


F-7-114

7) Remove the 3 binding screws (M4x8) [1].

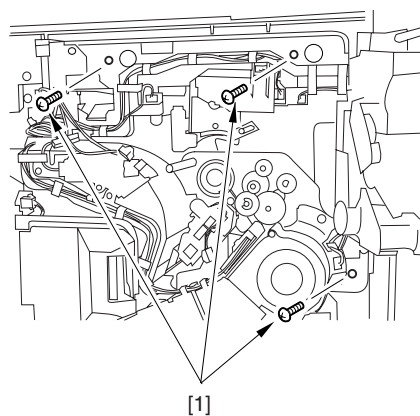


F-7-115

8) Shift down the fixing/feeding assembly releasing lever [1] in the direction of the arrow.

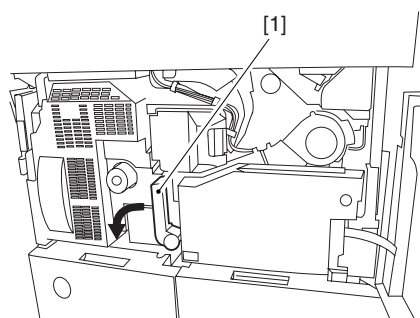


F-7-116

9) Slide out the fixing/feeding assembly [1] toward the front.

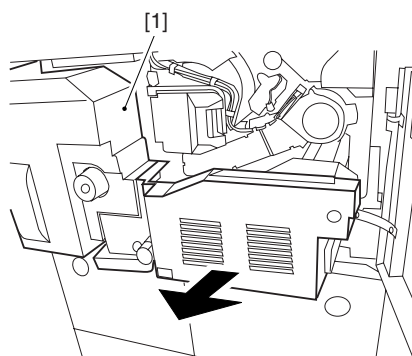


F-7-117

10) While pushing on the 2 hooks [1] found on both sides of the fixing/feeding assembly, fully slide out the fixing/feeding assembly [2].

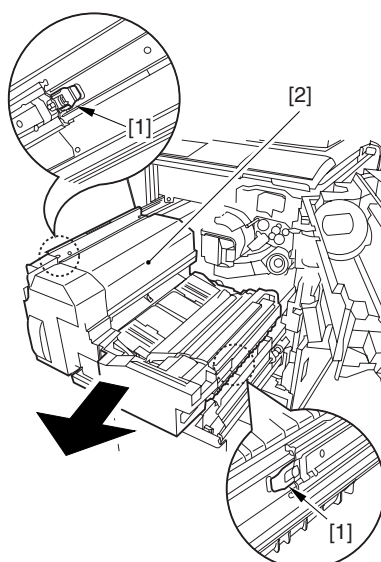

F-7-118


11) Slightly lift both ends [1] of the process unit, and fully slide out the process unit [2].

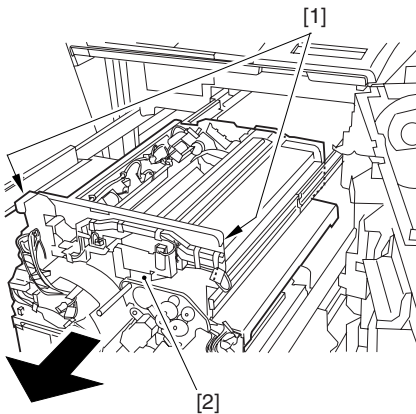


F-7-119

When you have slid out the process unit, check to see if any of the following parts is soiled with toner before fitting it back in; if soiled, dry wipe the part:

- entire surface of the deck top panel [1]
- front bend of the deck top panel [2]
- lower rear sheet (4 locations) of the fixing/feeding assembly [3].

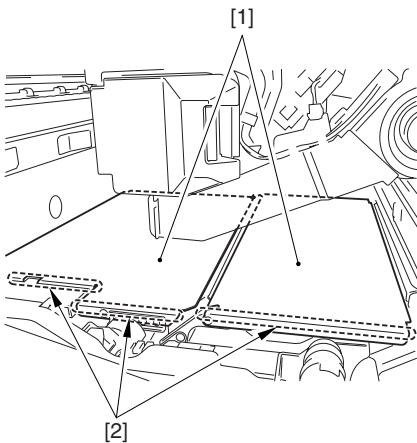

F-7-120

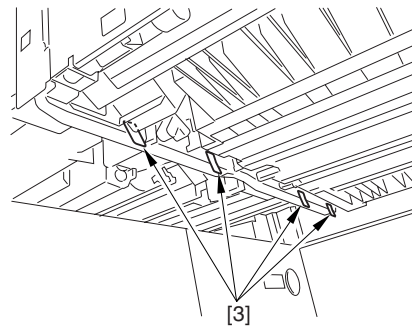


F-7-121

7.11.2.4 Releasing the Hopper Assembly


0003-2511

1) Open the black toner supply cover [1].

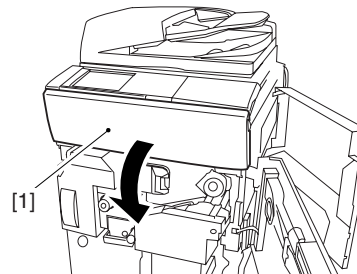


F-7-122

2) Shift down the lever [1], and detach the black toner bottle [2].

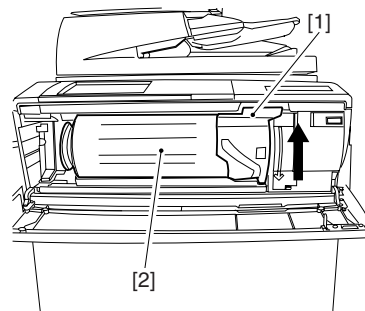


F-7-123

⚠ Once you have released the hopper assembly, toner can spill over the toner bottle supply mouth of the hopper assembly cover. Be sure to wipe off any such toner.

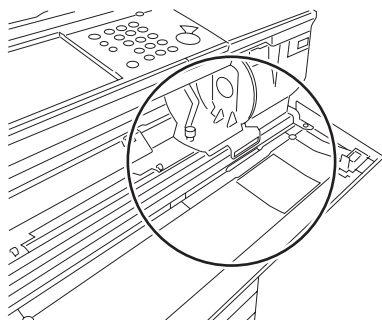


F-7-124

- 3) Remove the 3 screws [1].

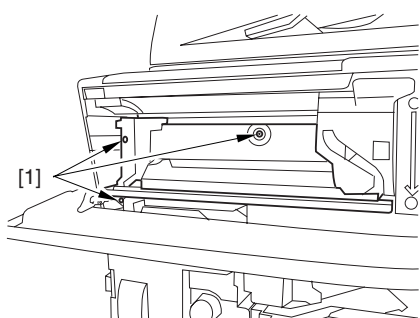

F-7-125

- 4) Close the black toner supply cover [1]; then, fully open the hopper assembly [2].

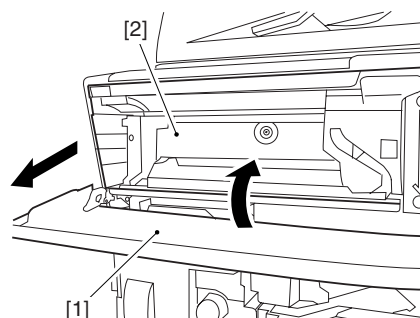


F-7-126

7.11.2.5 Removing the Primary Charging Assembly

0004-6651

- 1) Disconnect the connector [1].
- 2) Loosen the screw [2], and slide the primary charging assembly stopper [3] in the direction of the arrow; then, tighten the screw [2].
- 3) Detach the primary charging assembly [4] from the machine.

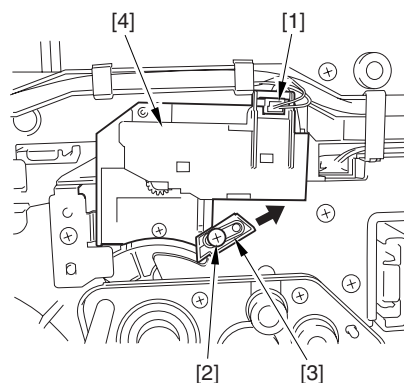


F-7-127

7.11.2.6 Removing the Photosensitive Drum Cleaning Unit


0003-2507

- 1) Open the 2 cable clamps [1], and lead the harness [2] through the opening [3] in the process unit.

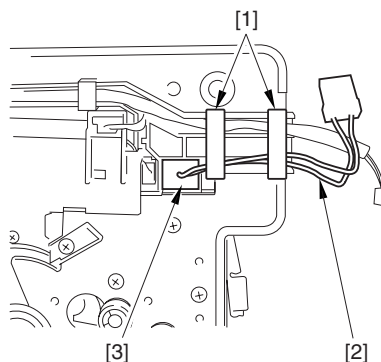


F-7-128

- 2) Open the 8 cable clamps [1], and move the harness [2] out of the way.

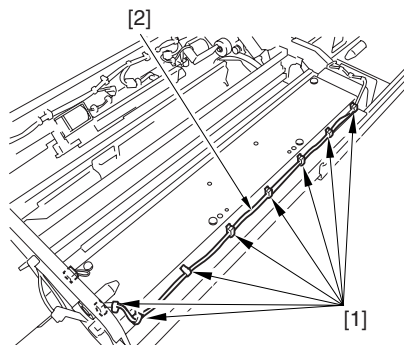


F-7-129

3) Disconnect the connector [1].

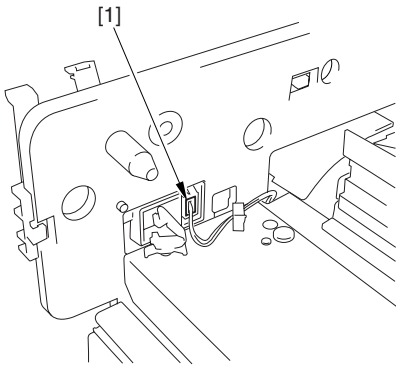

F-7-130


4) Remove the 4 screws [1], and detach the photosensitive drum cleaning unit [2].

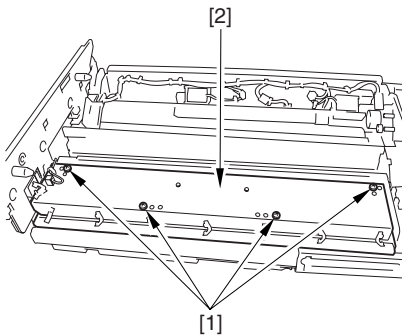

F-7-131

7.11.2.7 Removing the Pre-Exposure LED Unit 0002-6242

1) Remove the 3 screws [1], and detach the pre-exposure LED unit.

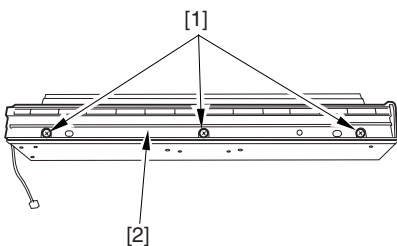


F-7-132

7.11.3 Primary Charging Assembly

7.11.3.1 Removing the Right Cover (upper) 0003-8248


1) Remove the 2 screws [1], and detach the right cover (upper) [2].

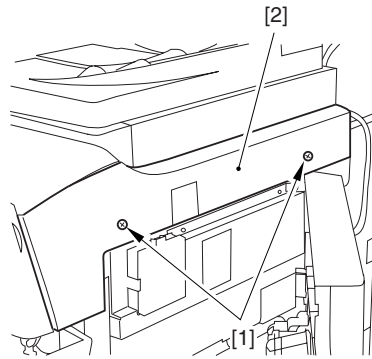

F-7-133


7.11.3.2 Freeing the Front Cover 0003-2476

1) Open the front cover.
2) While pulling on the grip [1], fully open the manual feed cover [2] to the front.

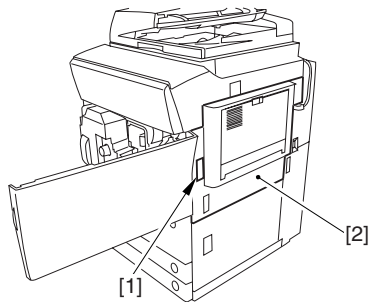


F-7-134

⚠ If a side paper deck exists, remove the 2 screws [1] and the latch plate (front)

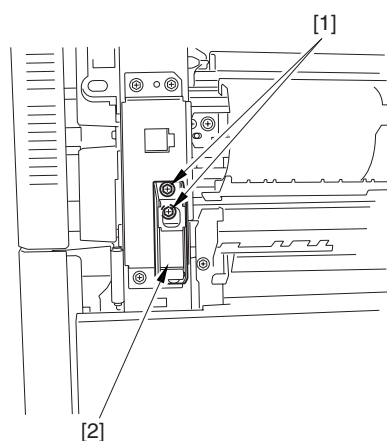


F-7-135

- 3) Slide out the fixing/feeding assembly
- 4) Remove the 2 screws [1], and detach the process unit cover [2].

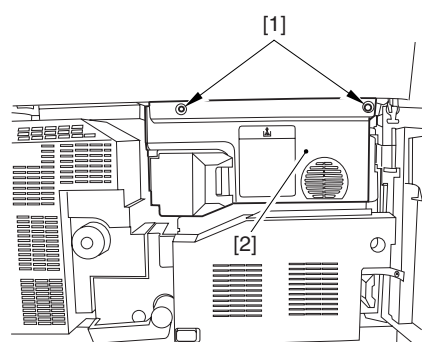


F-7-136

- 5) Push in the fixing/feeding assembly, and set the lever in place.
- 6) Push the release button [1] of the right deck, and slide out the right deck [2].

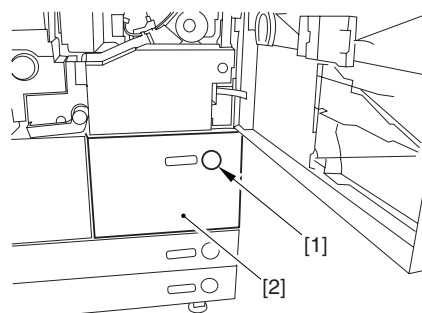


F-7-137

- 7) Remove the screw [1] from lower right, and detach the front cover strap [2].

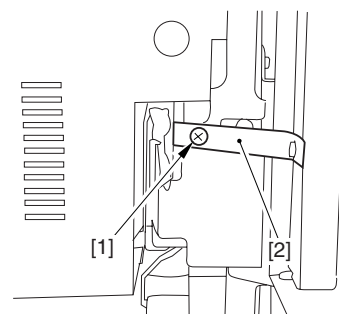

F-7-138

- 8) Remove the 2 screws [1] (binding) of the front cover hinge, and fully open the front cover [2].

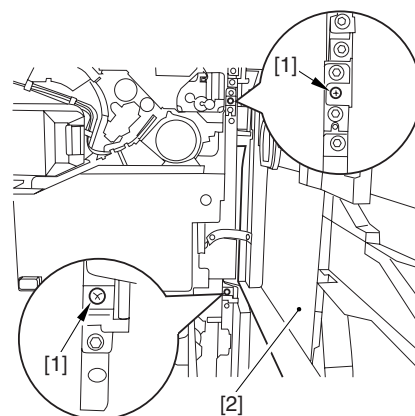


F-7-139

- 9) Close the right deck.

7.11.3.3 Releasing the Hopper Assembly


0003-2477

- 1) Open the black toner supply cover [1].

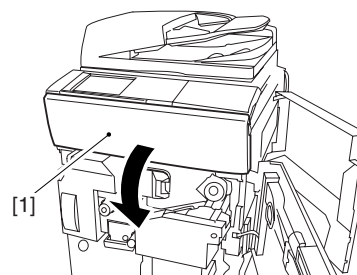


F-7-140

2) Shift down the lever [1], and detach the black toner bottle [2].

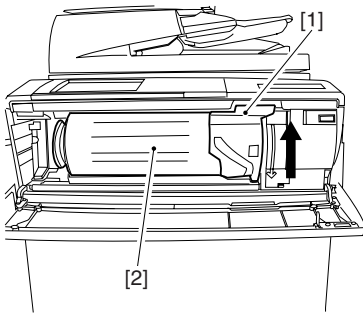


F-7-141

4) Close the black toner supply cover [1]; then, fully open the hopper assembly [2].

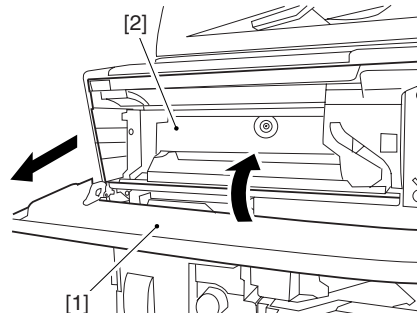


F-7-144

⚠Once you have released the hopper assembly, toner can spill over the toner bottle supply mouth of the hopper assembly cover. Be sure to wipe off any such toner.

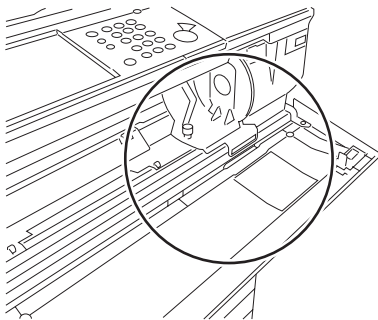

F-7-142


3) Remove the 3 screws [1].

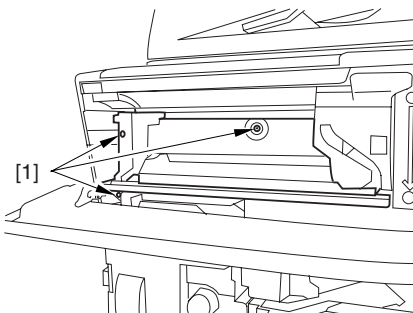

F-7-143

7.11.3.4 Removing the Primary Charging Assembly 0002-6213

- 1) Disconnect the connector [1].
- 2) Loosen the screw [2], and slide the primary charging assembly stopper [3] in the direction of the arrow; then, tighten the screw [2].
- 3) Detach the primary charging assembly [4] from the machine.

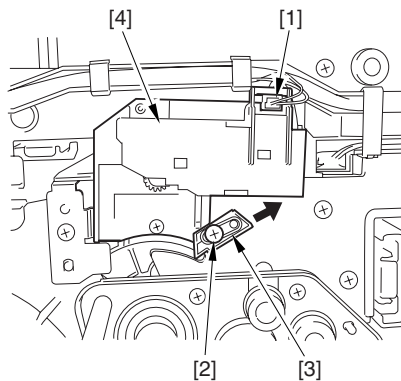


F-7-145

7.11.4 Primary Charging Assembly Cleaning Motor

7.11.4.1 Removing the Right Cover (upper) 0003-8250

- 1) Remove the 2 screws [1], and detach the right cover (upper) [2].

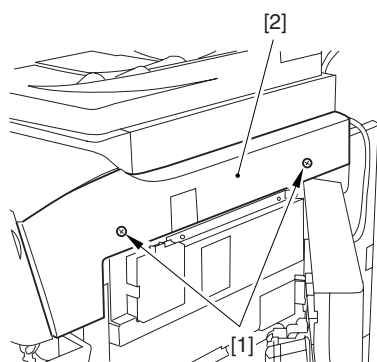


F-7-146

7.11.4.2 Freeing the Front Cover


0003-2479

- 1) Open the front cover.
- 2) While pulling on the grip [1], fully open the manual feed cover [2] to the front.

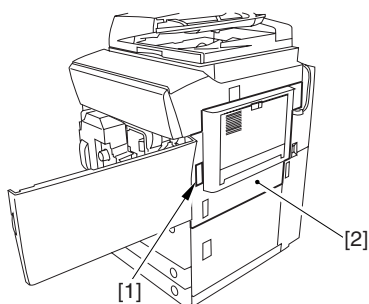


F-7-147

⚠ If a side paper deck exists, remove the 2 screws [1] and the latch plate (front)

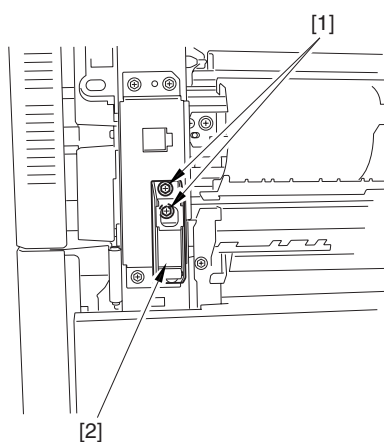


F-7-148

- 3) Slide out the fixing/feeding assembly
- 4) Remove the 2 screws [1], and detach the process unit cover [2].

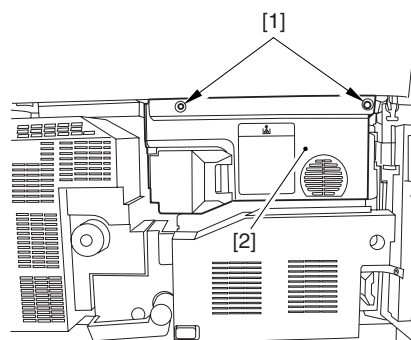


F-7-149

- 5) Push in the fixing/feeding assembly, and set the lever in place.
- 6) Push the release button [1] of the right deck, and slide out the right deck [2].

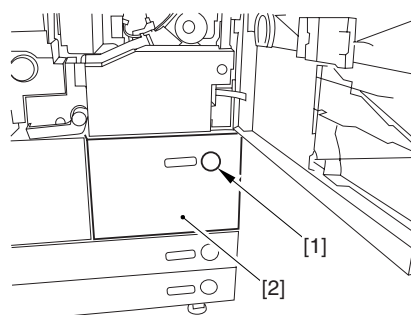


F-7-150

- 7) Remove the screw [1] from lower right, and detach the front cover strap [2].

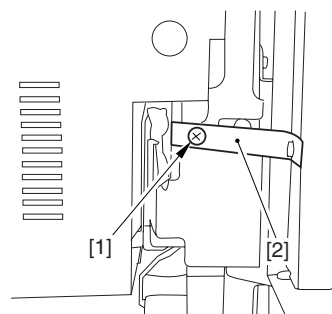

F-7-151

8) Remove the 2 screws [1] (binding) of the front cover hinge, and fully open the front cover [2].

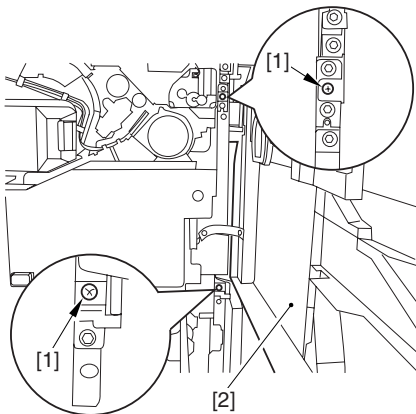


F-7-152

9) Close the right deck.

7.11.4.3 Releasing the Hopper Assembly


0003-2480

1) Open the black toner supply cover [1].

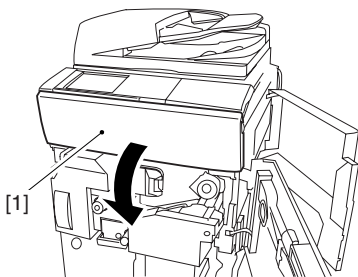


F-7-153

2) Shift down the lever [1], and detach the black toner bottle [2].

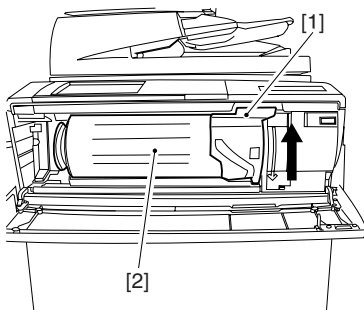


F-7-154

⚠ Once you have released the hopper assembly, toner can spill over the toner bottle supply mouth of the hopper assembly cover. Be sure to wipe off any such toner.

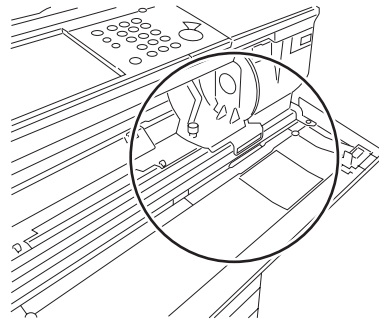


F-7-155

3) Remove the 3 screws [1].

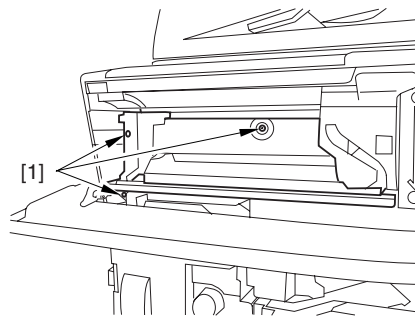

F-7-156

4) Close the black toner supply cover [1]; then, fully open the hopper assembly [2].

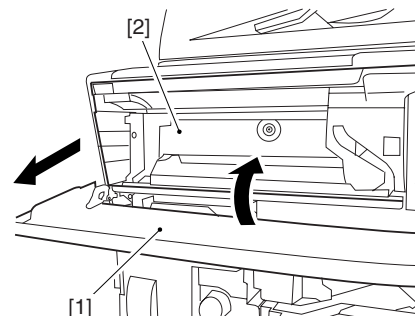


F-7-157

7.11.4.4 Removing the Primary

Charging Assembly

0003-2481

- 1) Disconnect the connector [1].
- 2) Loosen the screw [2], and slide the primary charging assembly stopper [3] in the direction of the arrow; then, tighten the screw [2].
- 3) Detach the primary charging assembly [4] from the machine.

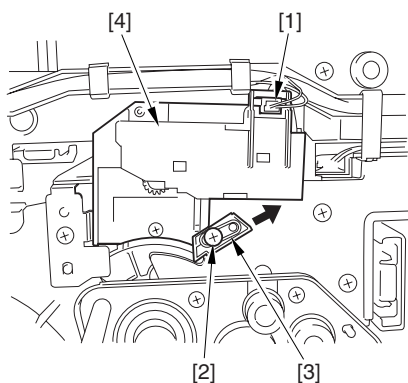


F-7-158

7.11.4.5 Removing the Primary Charging Wire Cleaning Motor


0002-6222

- 1) Free the 3 claws [3], and disconnect the connector [2]; then, detach the motor cover [3].

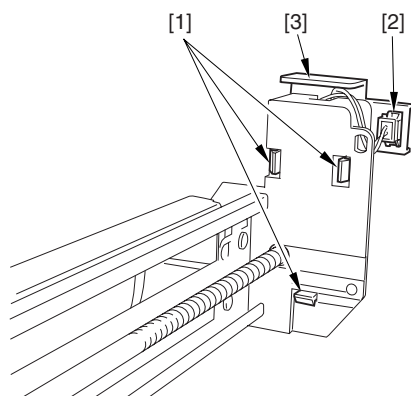

F-7-159

- 2) Turn over the motor cover, and disconnect the connector [1]; then, detach the primary charging wire cleaning motor [2].

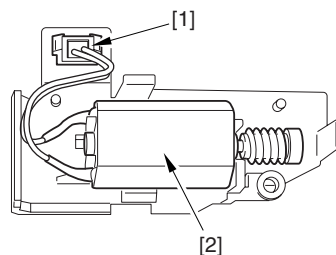


F-7-160

7.11.5 Pre-transfer Charging Assembly

7.11.5.1 Removing the Pre- Transfer Charging Assembly


0002-6224

- 1) Open the front cover,
- 2) Slide out the fixing/feeding assembly.
- 3) Remove the 2 screws [1], and detach the process unit cover [2].

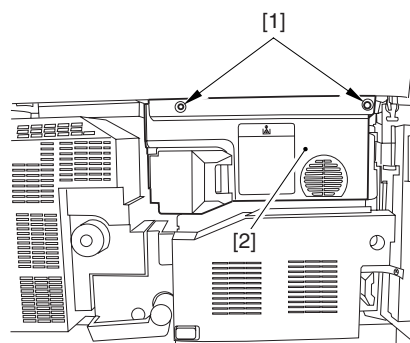

F-7-161

- 4) Remove the screw [1], and disconnect the connector [2]; then, detach the pre-transfer charging assembly [3] from the machine.

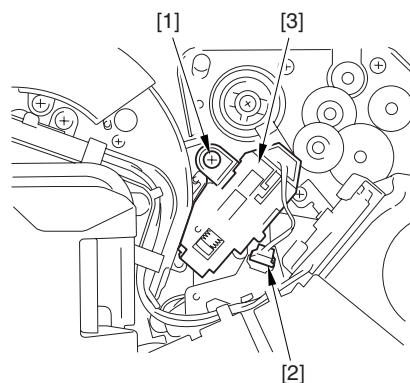


F-7-162

7.11.6 Pre-transfer Charging Assembly Cleaning Motor


7.11.6.1 Removing the Pre-Transfer Charging Assembly 0003-2482

- 1) Open the front cover,
- 2) Slide out the fixing/feeding assembly.
- 3) Remove the 2 screws [1], and detach the process unit cover [2].

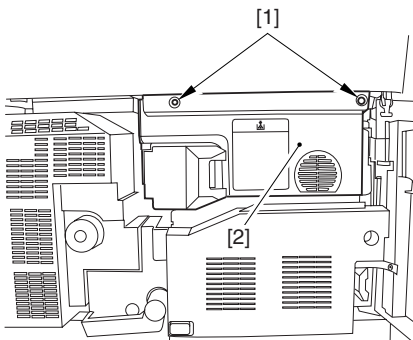

F-7-163


- 4) Remove the screw [1], and disconnect the connector [2]; then, detach the pre-transfer charging assembly [3] from the machine.

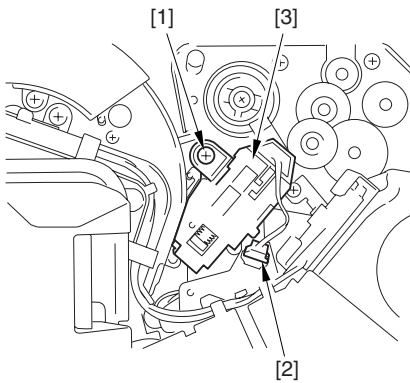

F-7-164


7.11.6.2 Removing the Pre-Transfer Charging Wire Cleaning Motor 0002-6226

- 1) Free the 3 claws [1], and detach the motor cover [2].

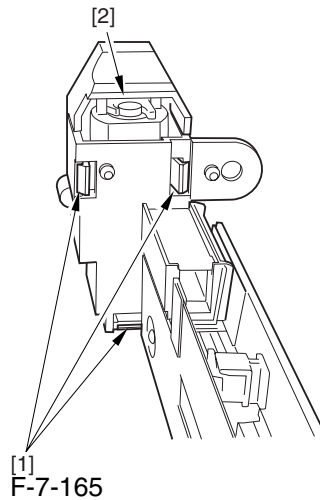

[1]
F-7-165

- 2) Turn over the motor cover, and detach the pre-transfer charging wire cleaning motor from the motor cover.

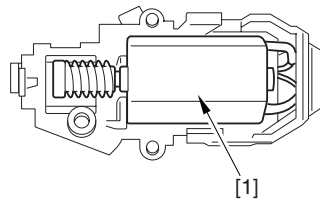


F-7-166

7.11.7 Photosensitive Drum Cleaning Unit

7.11.7.1 Removing the Right Cover (upper) 0003-8273

- 1) Remove the 2 screws [1], and detach the right cover (upper) [2].

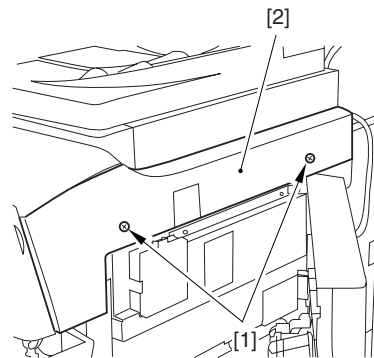


F-7-167

7.11.7.2 Freeing the Front

Cover


0003-2490

- 1) Open the front cover.
- 2) While pulling on the grip [1], fully open the manual feed cover [2] to the front.

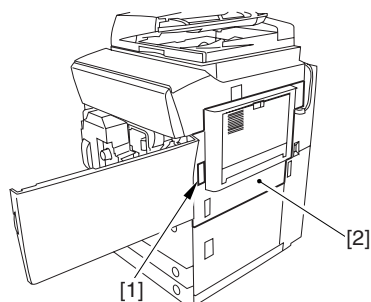


F-7-168

- ⚠** If a side paper deck exists, remove the 2 screws [1] and the latch plate (front)

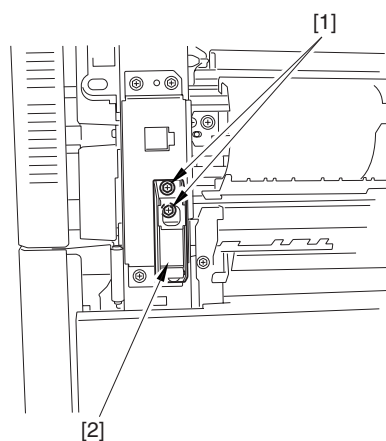


F-7-169

- 3) Slide out the fixing/feeding assembly
- 4) Remove the 2 screws [1], and detach the process unit cover [2].

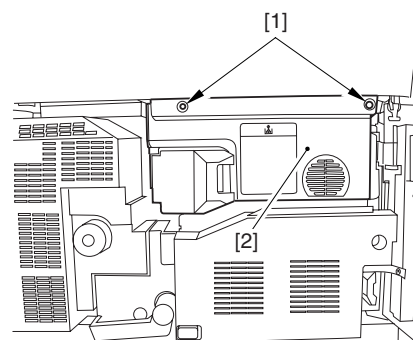


F-7-170

- 5) Push in the fixing/feeding assembly, and set the lever in place.
- 6) Push the release button [1] of the right deck, and slide out the right deck [2].

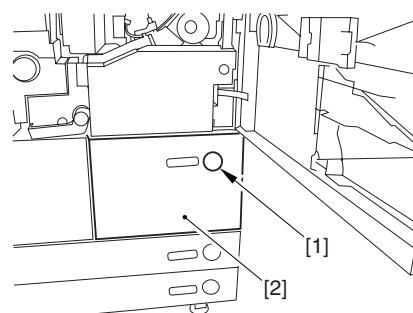


F-7-171

- 7) Remove the screw [1] from lower right, and detach the front cover strap [2].

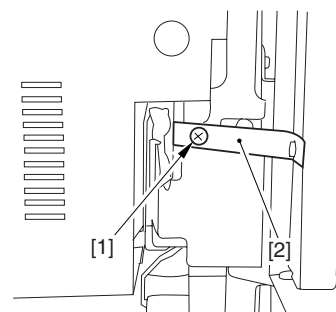

F-7-172

8) Remove the 2 screws [1] (binding) of the front cover hinge, and fully open the front cover [2].

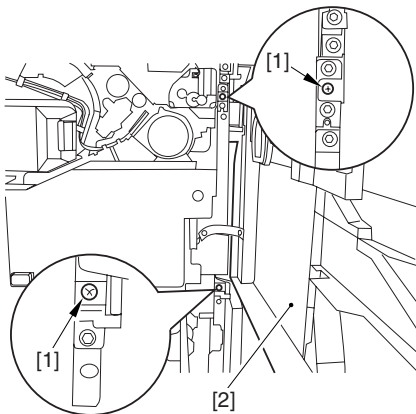


F-7-173

9) Close the right deck.

7.11.7.3 Releasing the Hopper Assembly


0003-2491

1) Open the black toner supply cover [1].

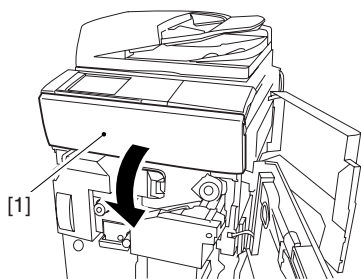


F-7-174

2) Shift down the lever [1], and detach the black toner bottle [2].

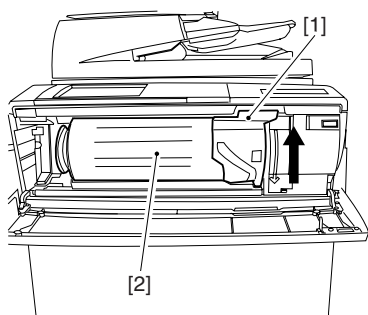


F-7-175

⚠ Once you have released the hopper assembly, toner can spill over the toner bottle supply mouth of the hopper assembly cover. Be sure to wipe off any such toner.

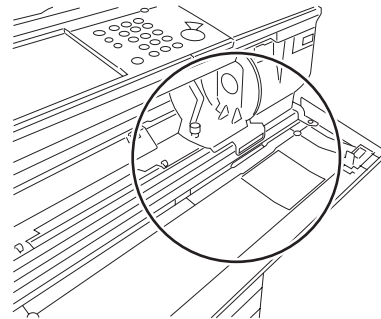


F-7-176

3) Remove the 3 screws [1].

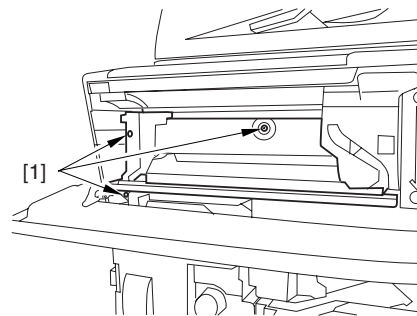

F-7-177

4) Close the black toner supply cover [1]; then, fully open the hopper assembly [2].

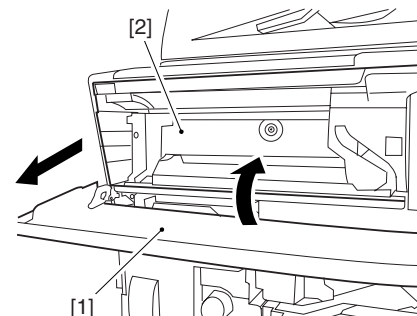


F-7-178

7.11.7.4 Sliding Out the Process Unit


0003-2493

1) Disconnect the 5 connectors [1] found at the upper right.

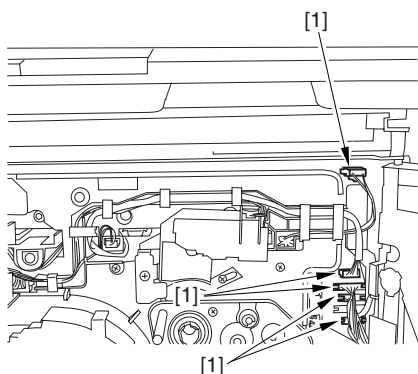


F-7-179

2) Disconnect the 5 connectors [1] found at the upper left.

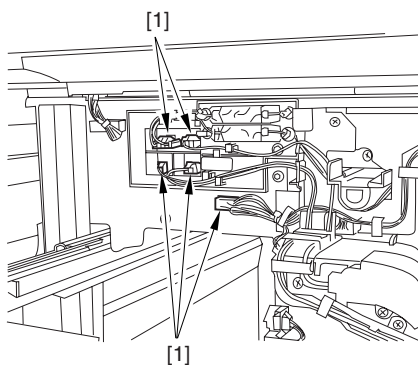


F-7-180

3) After freeing the high-voltage connector cable [1] from the 2 wire saddles [2], fix the cable in place using the cable hook [3].

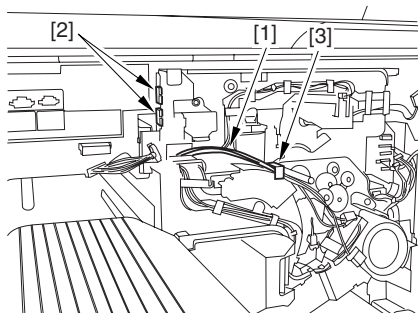

F-7-181

4) Take out the process unit cover [1] from the shipping box, and detach the drum stop tool [2] from the back of the cover.

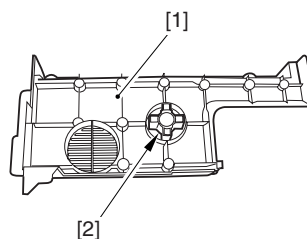


F-7-182

5) While forcing the drum stop tool [3] against the drum fixing member [2] of the drum shift [1], remove the fixing screw [4].



1: Be sure to match the protrusion [5] of the drum fixing member and the protrusion [6] of the drum stop tool.

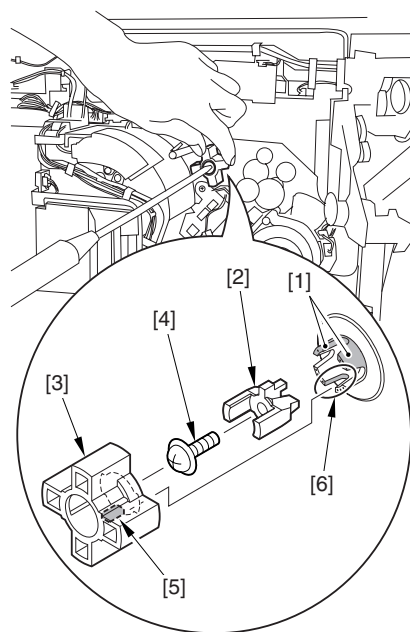


F-7-183

2: When drawing out the process unit, be sure to find out the position of the protrusion [1] of the drum fixing member in relation to the marking [2] on the drum flange.

In the example in the figure, the marking [2] on the drum flange is at "." on the left and at "." on the right in relation to the protrusion [2] of the drum fixing member.


Moreover, when you close the process unit, it is important that the spatial relationship between the protrusion of the drum fixing member and the marking on the drum flange is as it was before you drew out the unit.

6) Using a pair of fine pliers, remove the drum fixing member [1].

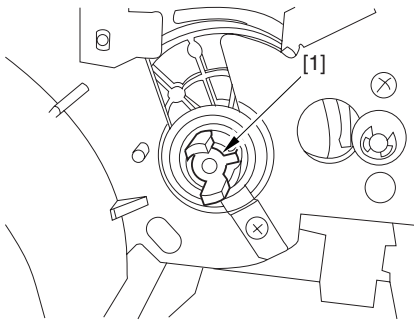


F-7-184

7) Remove the 3 binding screws (M4x8) [1].

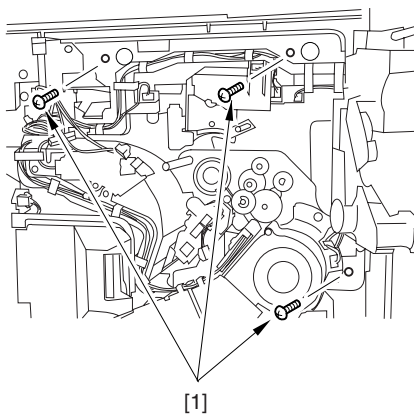


F-7-185

8) Shift down the fixing/feeding assembly releasing lever [1] in the direction of the arrow.

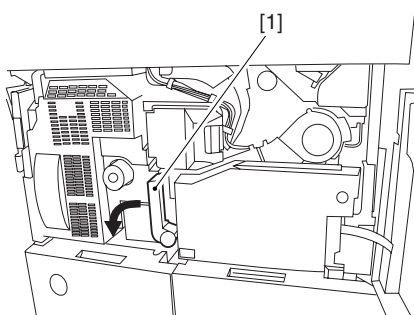


F-7-186

9) Slide out the fixing/feeding assembly [1] toward the front.

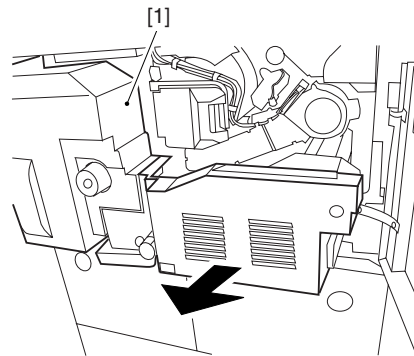


F-7-187

10) While pushing on the 2 hooks [1] found on both sides of the fixing/feeding assembly, fully slide out the fixing/feeding assembly [2].

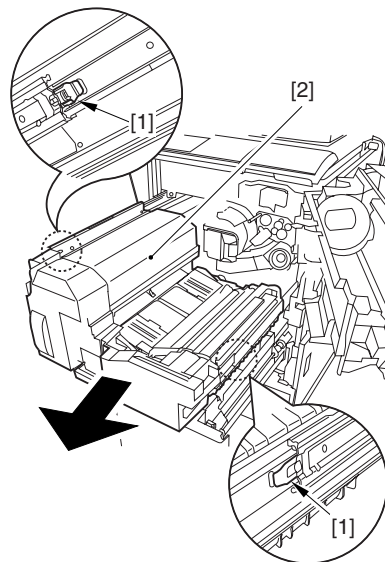

F-7-188


11) Slightly lift both ends [1] of the process unit, and fully slide out the process unit [2].

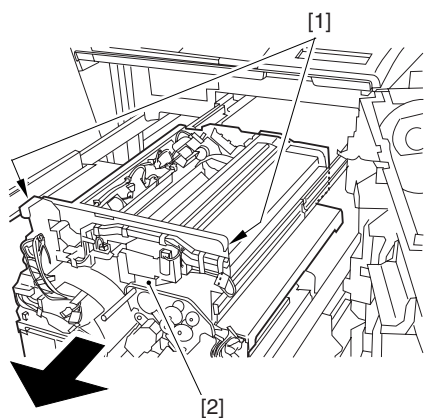


F-7-189

When you have slid out the process unit, check to see if any of the following parts is soiled with toner before fitting it back in; if soiled, dry wipe the part:

- entire surface of the deck top panel [1]
- front bend of the deck top panel [2]
- lower rear sheet (4 locations) of the fixing/feeding assembly [3].

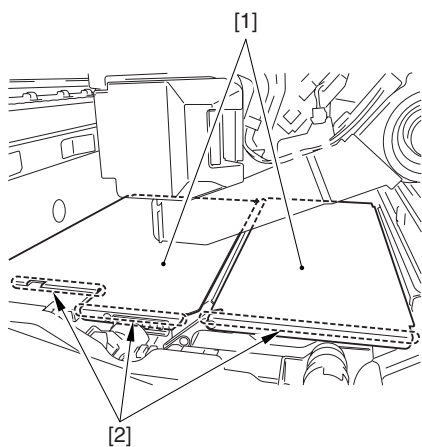

F-7-190

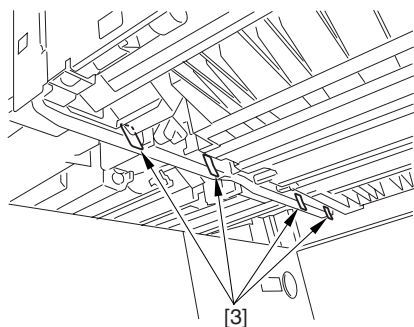


F-7-191

7.11.7.5 Removing the Primary Charging Assembly

0004-6627

- 1) Disconnect the connector [1].
- 2) Loosen the screw [2], and slide the primary charging assembly stopper [3] in the direction of the arrow; then, tighten the screw [2].
- 3) Detach the primary charging assembly [4] from the machine.

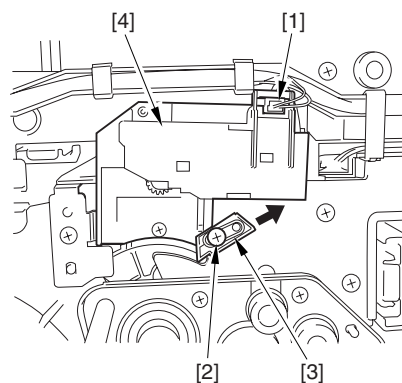


F-7-192

7.11.7.6 Removing the Photosensitive Drum Cleaning Unit


0003-2495

- 1) Open the 2 cable clamps [1], and lead the harness [2] through the opening [3] in the process unit.

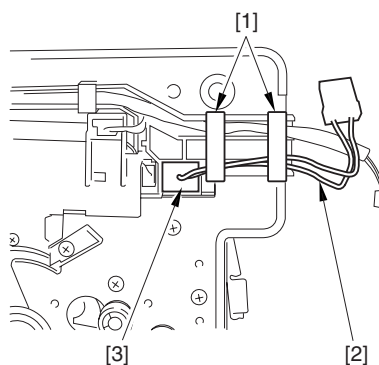


F-7-193

- 2) Open the 8 cable clamps [1], and move the harness [2] out of the way.

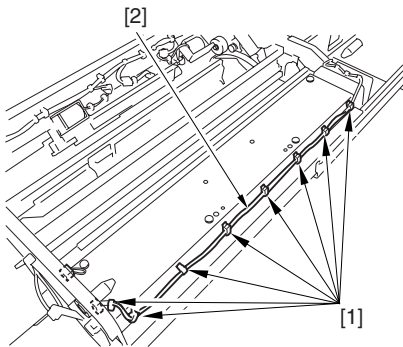


F-7-194

- 3) Disconnect the connector [1].

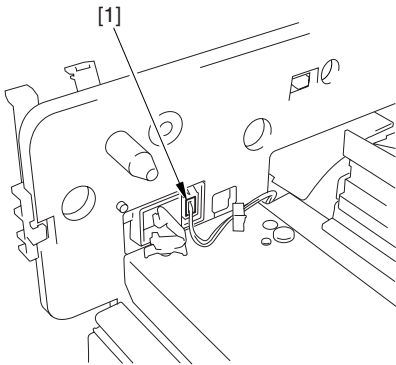

F-7-195

- 4) Remove the 4 screws [1], and detach the photosensitive drum cleaning unit [2].

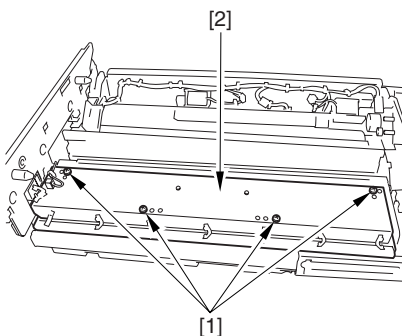

F-7-196


7.11.7.7 Points to Note When Mounting the Photosensitive Drum Cleaning Unit 0003-8364

⚠ When mounting the photosensitive drum cleaning unit, take care not to rotate it in reverse direction to prevent soiling by the scoop-up sheet. (The drum is designed to rotate counterclockwise.)

7.11.8 Photosensitive Drum

7.11.8.1 Removing the Right Color (upper) 0003-8251


- 1) Remove the 2 screws [1], and detach the right cover (upper) [2].

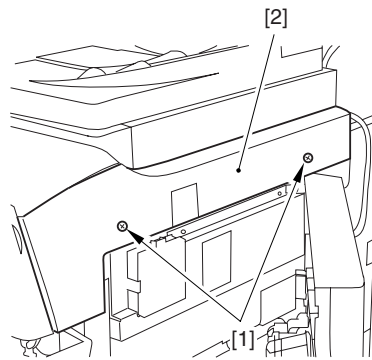

F-7-197


7.11.8.2 Releasing the Front Cover 0003-2487

- 1) Open the front cover.
- 2) While pulling on the grip [1], fully open the manual feed cover [2] to the front.

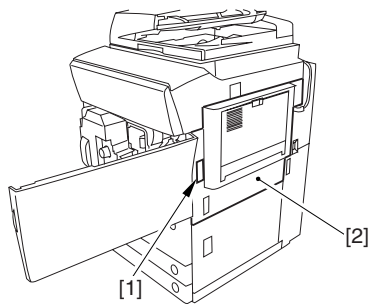


F-7-198

⚠ If a side paper deck exists, remove the 2 screws [1] and the latch plate (front)

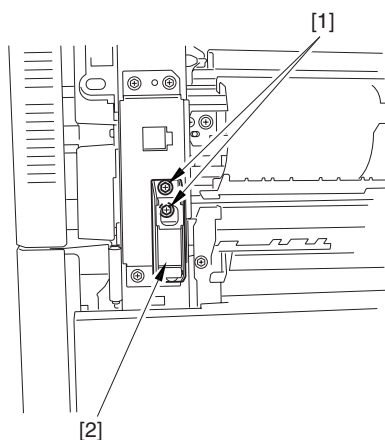


F-7-199

- 3) Slide out the fixing/feeding assembly
- 4) Remove the 2 screws [1], and detach the process unit cover [2].

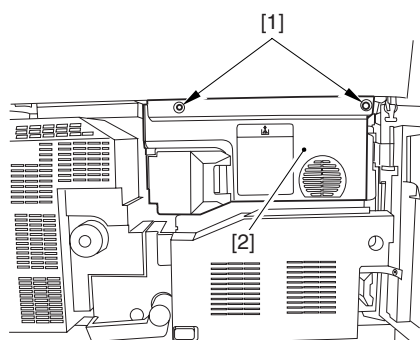


F-7-200

- 5) Push in the fixing/feeding assembly, and set the lever in place.
- 6) Push the release button [1] of the right deck, and slide out the right deck [2].

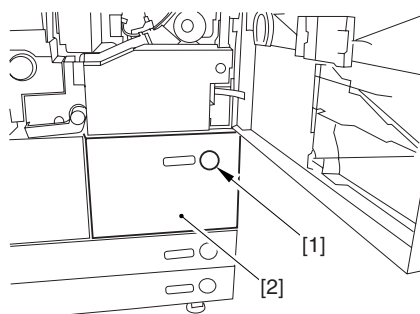


F-7-201

7) Remove the screw [1] from lower right, and detach the front cover strap [2].

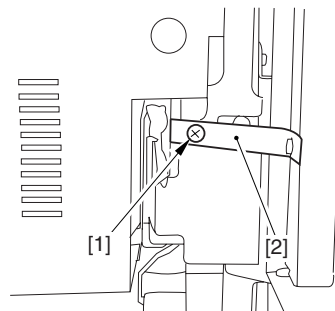

F-7-202

8) Remove the 2 screws [1] (binding) of the front cover hinge, and fully open the front cover [2].

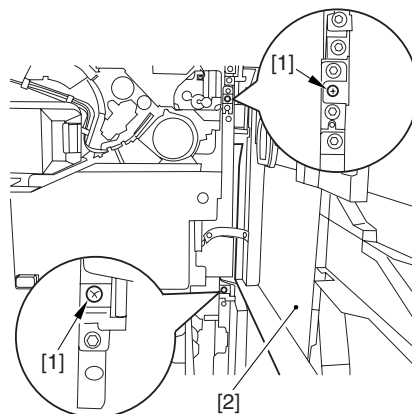


F-7-203

9) Close the right deck.

7.11.8.3 Releasing the Hopper Assembly


0003-2488

1) Open the black toner supply cover [1].

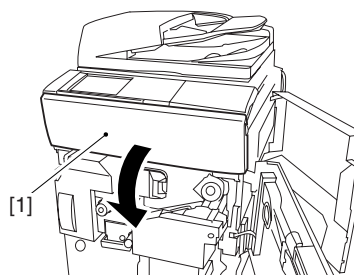


F-7-204

2) Shift down the lever [1], and detach the black toner bottle [2].

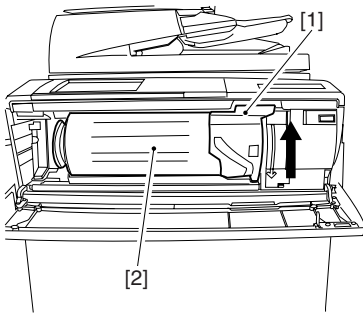


F-7-205

4) Close the black toner supply cover [1]; then, fully open the hopper assembly [2].

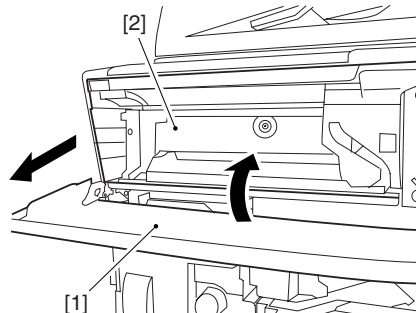


F-7-208

⚠Once you have released the hopper assembly, toner can spill over the toner bottle supply mouth of the hopper assembly cover. Be sure to wipe off any such toner.

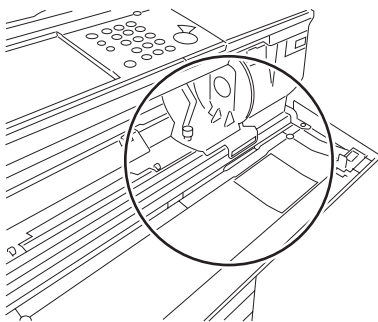

F-7-206


3) Remove the 3 screws [1].

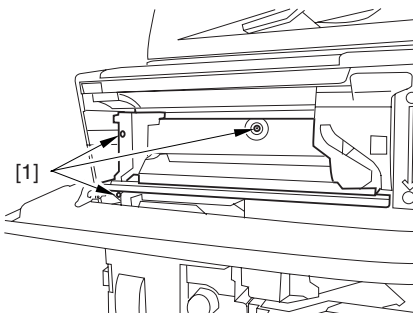

F-7-207

7.11.8.4 Removing the Pre-Transfer Charging Assembly 0003-2837


1) Remove the screw [1], and disconnect the connector [1]; then, detach the pre-transfer charging assembly [3] from the machine.

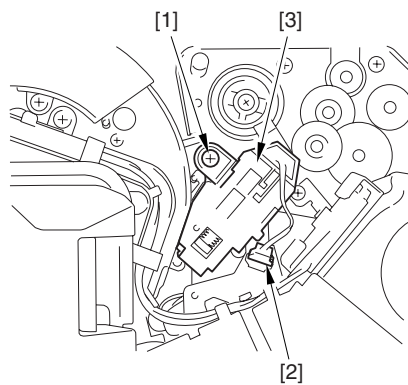

F-7-209


7.11.8.5 Removing the Transfer Charging Drive Assembly 0003-2457

1) Open the color toner supply mouth cover [1].

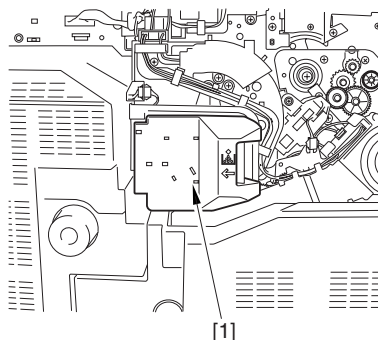


F-7-210

2) Disconnect the connector [1], and remove the screw [2]; then, detach the color toner supply cover [3].

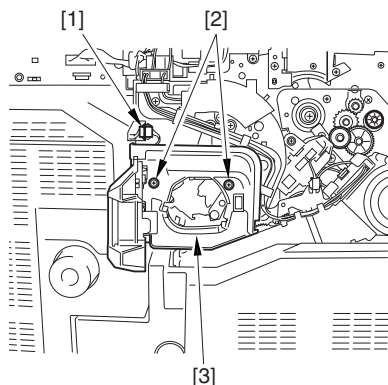


F-7-211

6) Disconnect the connector [1], and remove the 5 screws [2]; then, detach the transfer cleaner driver assembly [3].

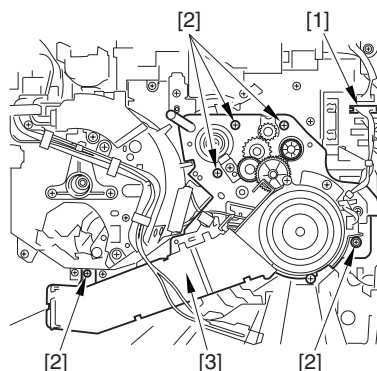

F-7-214


3) Slightly slide out the fixing/feeding assembly.
4) Disconnect the connector [1] to free it from the wire guide [2].

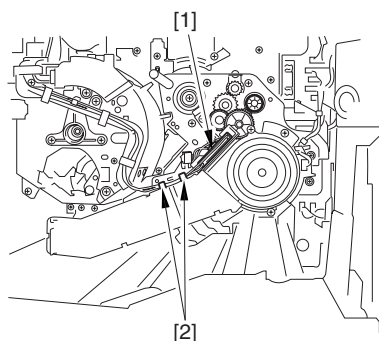

F-7-212


7.11.8.6 Removing the Intermediate Transfer Unit 0005-5592

1) Disconnect the 2 connectors [1].

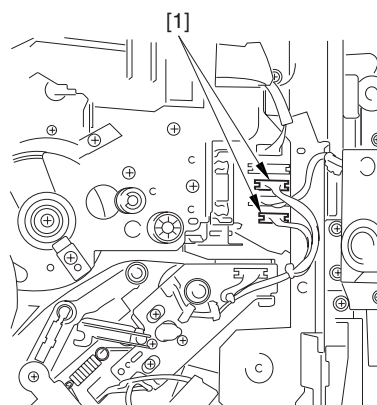

F-7-215


5) Remove the screw [1], and shift down the locking plate [2].

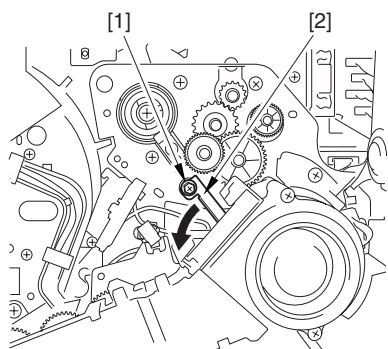

F-7-213

- 2) Fully slide out the fixing/feeding assembly.
- 3) Slide out the intermediate transfer assembly [1] to the front; when it stops, shift it slightly to the upper right and then slide it farther out to detach.

⚠ Do not touch the surface of the ITB. Also, be sure to slide the intermediate transfer assembly straight out so as to prevent damage to the surface of the ITB.

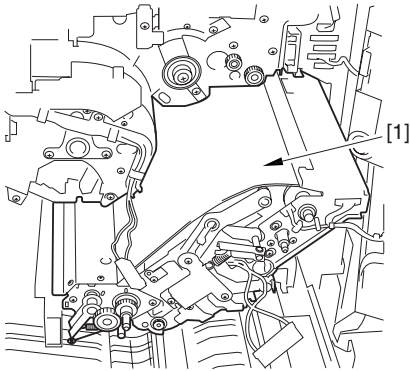


F-7-216

7.11.8.7 Cleaning the Surface of the Intermediate Transfer Unit


0006-0339

- 1) Place the ITB unit [1] on paper for protection.

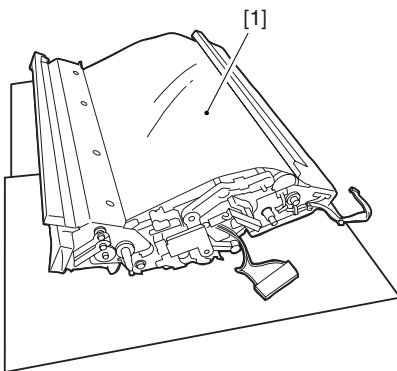


F-7-217

- 2) Turn the drive gear [1] by hand in the direction of the arrow to move the intermediate transfer belt [2] about 50 mm.

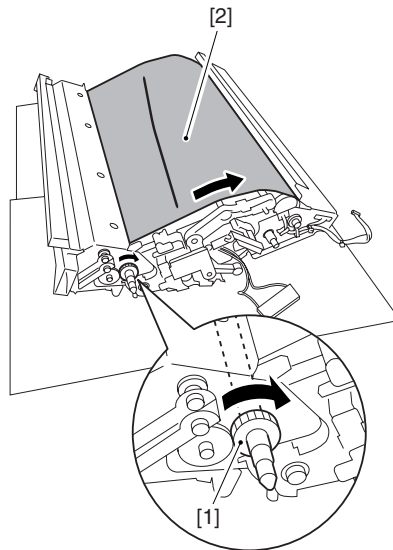


F-7-218

- 3) If there is any toner [3] on the surface of the intermediate transfer belt, dry wipe it with lint-free paper.

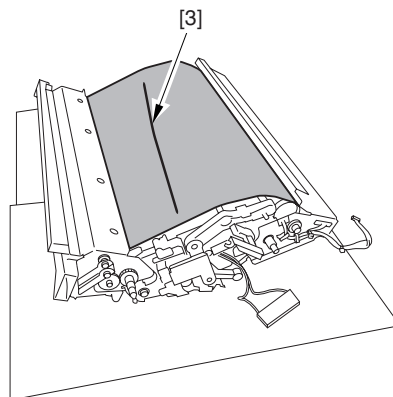

F-7-219

⚠ When you remove the transfer cleaner drive assembly, the ITB cleaning blade [1] is likely to come into contact with the intermediate transfer belt by the work of a spring, causing toner [2] to deposit on the belt surface in the form of lines. The toner can then be forced against the photosensitive drum by the primary transfer assembly, thus affecting the photosensitive drum cleaning blade [3].

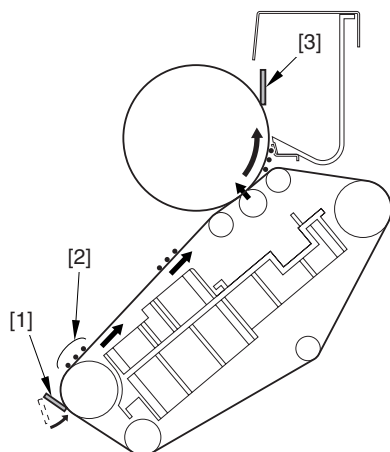


F-7-220

7.11.8.8 Sliding Out the Process Unit


0003-2460

1) Disconnect the 5 connectors [1] found at the upper right.

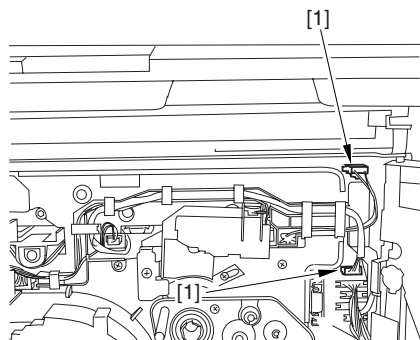


F-7-221

2) Disconnect the 5 connectors [1] found at the upper left.

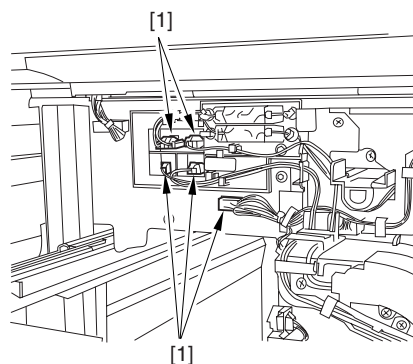


F-7-222

3) After freeing the high-voltage connector cable [1] from the 2 wire saddles [2], fix the cable in place using the cable hook [3].

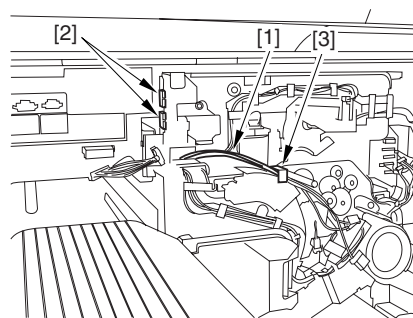

F-7-223

4) Take out the process unit cover [1] from the shipping box, and detach the drum stop tool [2] from the back of the cover.

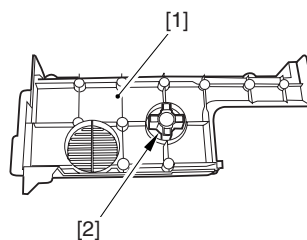


F-7-224

5) While forcing the drum stop tool [3] against the drum fixing member [2] of the drum shift [1], remove the fixing screw [4].



1: Be sure to match the protrusion [5] of the drum fixing member and the protrusion [6] of the drum stop tool.

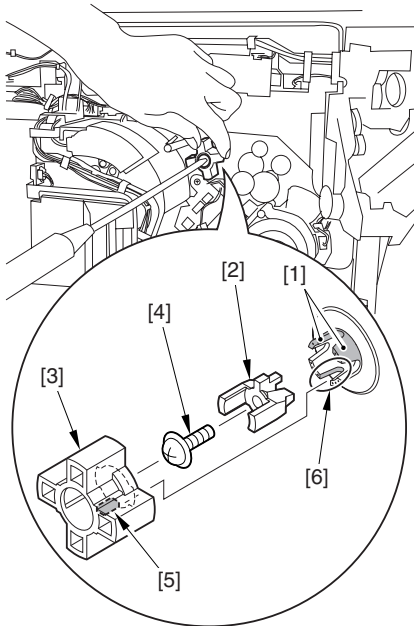


F-7-225

2: When drawing out the process unit, be sure to find out the position of the protrusion [1] of the drum fixing member in relation to the marking [2] on the drum flange.

In the example in the figure, the marking [2] on the drum flange is at "." on the left and at ".." on the right in relation to the protrusion [2] of the drum fixing member.


Moreover, when you close the process unit, it is important that the spatial relationship between the protrusion of the drum fixing member and the marking on the drum flange is as it was before you drew out the unit.

6) Using a pair of fine pliers, remove the drum fixing member [1].

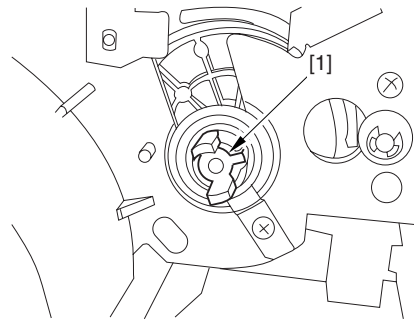


F-7-226

7) Remove the 3 binding screws (M4x8) [1].

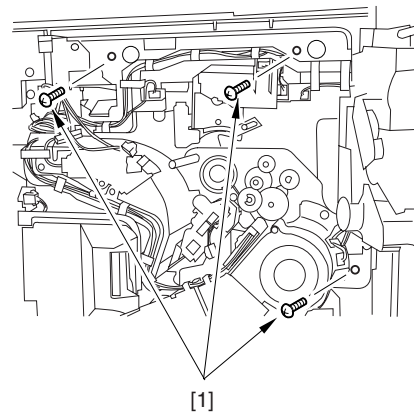


F-7-227

8) Shift down the fixing/feeding assembly releasing lever [1] in the direction of the arrow.

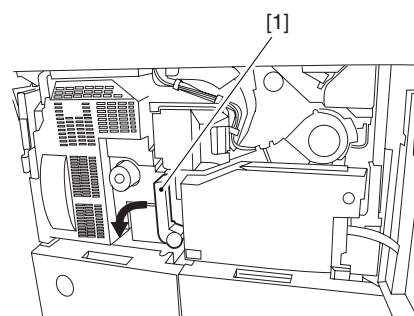


F-7-228

9) Slide out the fixing/feeding assembly [1] toward the front.

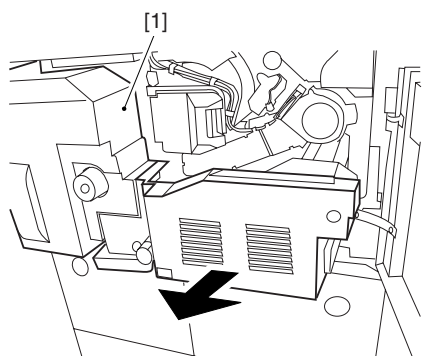


F-7-229

10) While pushing on the 2 hooks [1] found on both sides of the fixing/feeding assembly, fully slide out the fixing/feeding assembly [2].

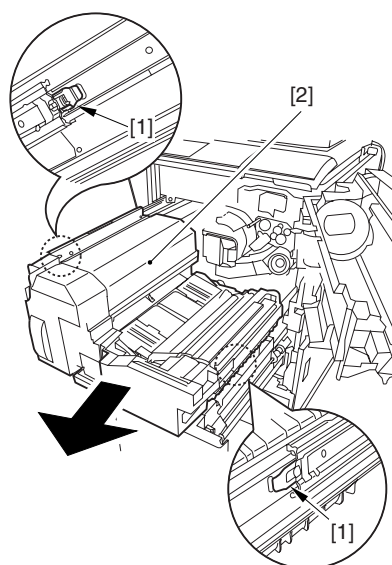

F-7-230


11) Slightly lift both ends [1] of the process unit, and fully slide out the process unit [2].

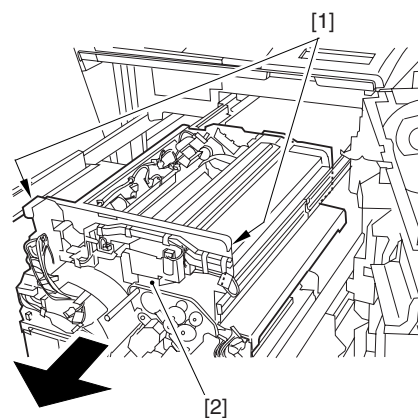


F-7-231

When you have slid out the process unit, check to see if any of the following parts is soiled with toner before fitting it back in; if soiled, dry wipe the part:

- entire surface of the deck top panel [1]
- front bend of the deck top panel [2]
- lower rear sheet (4 locations) of the fixing/feeding assembly [3].

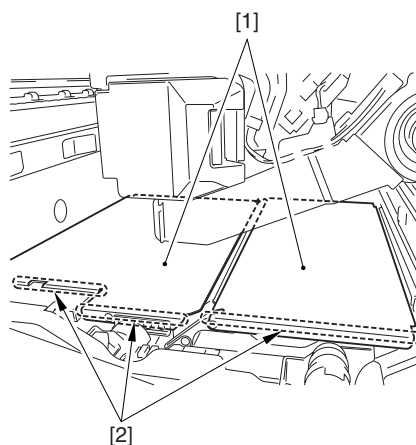

F-7-232

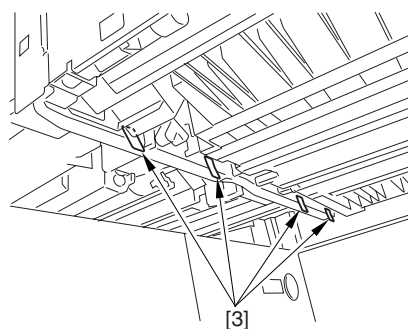


F-7-233

7.11.8.9 Removing the Primary Charging Assembly

0003-2835

- 1) Disconnect the connector [1].
- 2) Loosen the screw [2], and slide the primary charging assembly stopper [3] in the direction of the arrow; then, tighten the screw [2].
- 3) Detach the primary charging assembly [4] from the machine.

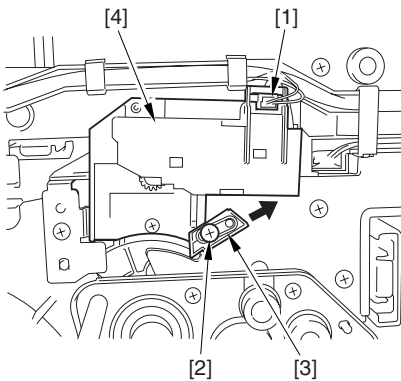


F-7-234

7.11.8.10 Removing the Photosensitive Drum Cleaning Unit


0003-2497

- 1) Open the 2 cable clamps [1], and lead the harness [2] through the opening [3] in the process unit.

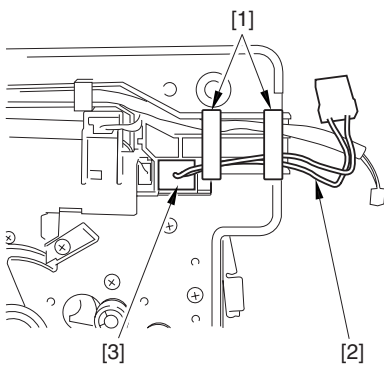


F-7-235

- 2) Open the 8 cable clamps [1], and move the harness [2] out of the way.

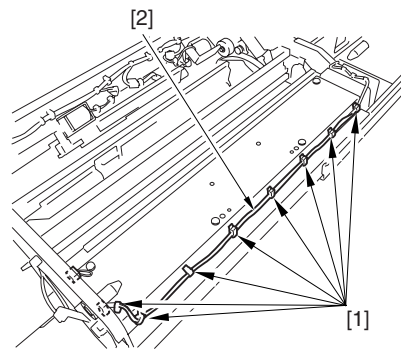


F-7-236

- 3) Disconnect the connector [1].

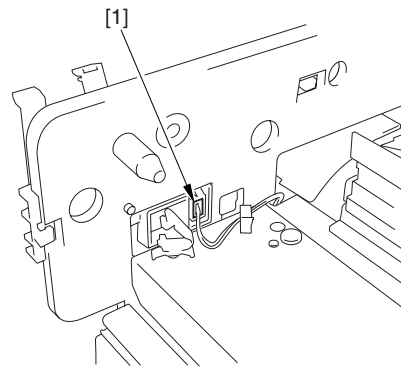

F-7-237

- 4) Remove the 4 screws [1], and detach the photosensitive drum cleaning unit [2].

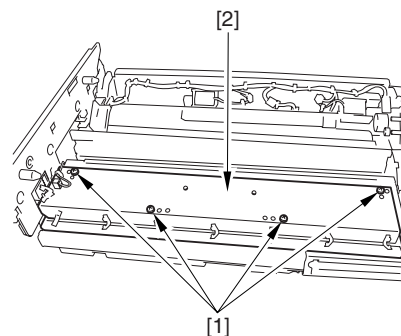

F-7-238

7.11.8.11 Removing the Black

Developing Unit


0003-2839

▲ Points to Note About the Work

1 The machine's developing unit is not equipped with a developing cylinder protection cover. Take full care, therefore, not to damage the developing cylinder when you have detached the developing unit.


The waste toner collecting inside the machine can move into the fixing/feeding assembly through the outlet; be sure to place paper under the process unit for the work.

2. The machine's black developing unit is equipped with a potential sensor. Do not touch the sensor window [1] indicated in the figure. Moreover, take care not to drop the black developing assembly or otherwise subject it to impact so as to avoid damage to the potential sensor.

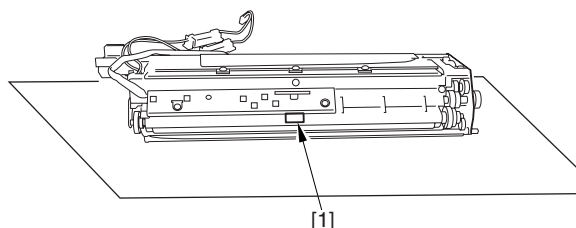


F-7-239

1) Open the harness guide used to fix the high-voltage cable [1] in place.

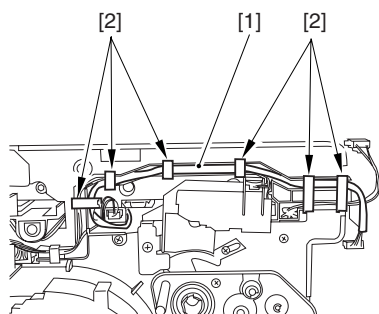


F-7-240

2) Remove the screw [2], and detach the black developing assembly locking plate [1].

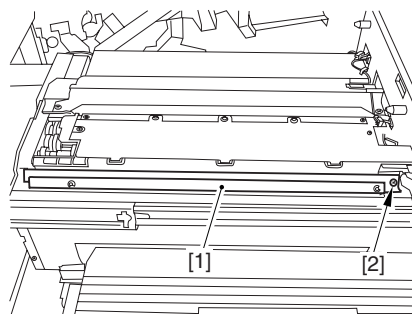


F-7-241

3) Remove the 2 screws [2], and detach the black developing assembly joint plate [1].

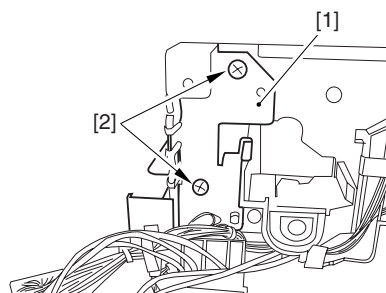


F-7-242

4) Disconnect the connector [1].

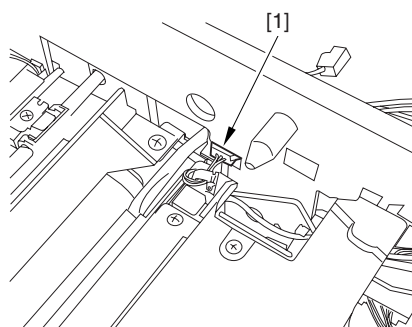

F-7-243


5) Push in the high-voltage cable [1] through the opening [2] indicated in the figure.

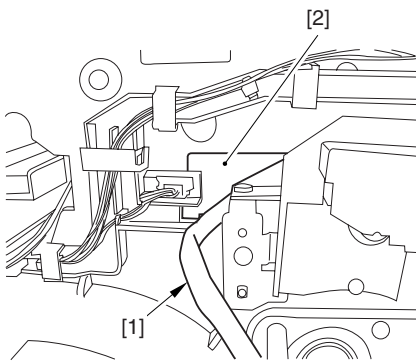

F-7-244

6) While holding the high-voltage cable [1] in place as shown, detach the black developing assembly [2] in upward direction.

⚠ When detaching the black developing assembly, be sure to work with the high-voltage cable kept at the top of the assembly so that its connector will not damage the surface of the photosensitive drum.

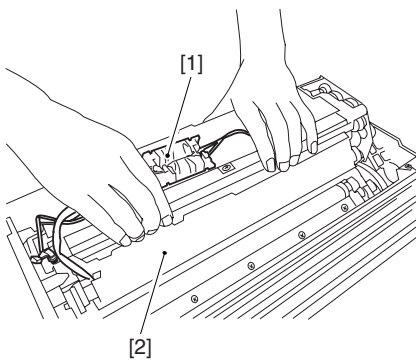


F-7-245

7.11.8.12 Removing the Photosensitive Drum

0003-2841


1) Remove the 2 screws [1], and detach the charging assembly rail [2].

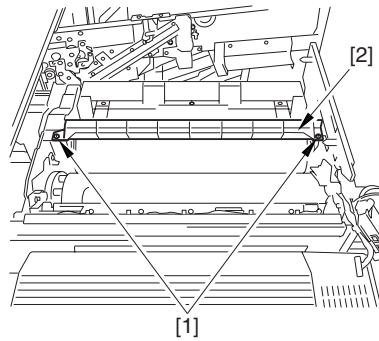

F-7-246


2) Remove the screw [1], and detach the charging assembly rail fixing plate [2].

3) Remove the screw [3], and detach the bearing stopper [4].

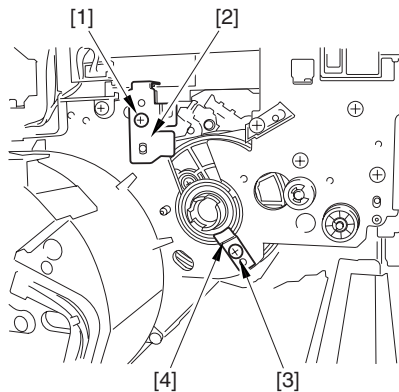


F-7-247

4) Pull the photosensitive drum [1] toward the front once, and then detach it.

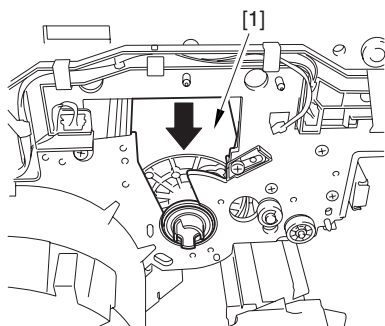

F-7-248

▲ At the front, hold the photosensitive drum shaft [1], and lift the drum; then, place it on the level area of the heat process unit front plate. Thereafter, hold the drum flange [2] from behind the front side plate.

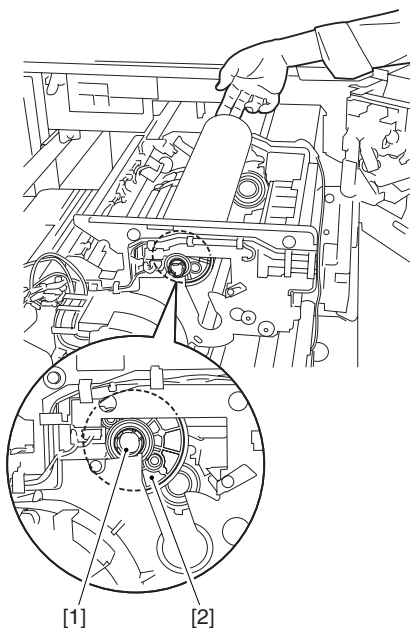

F-7-249

7.11.8.13 Replacing the Photosensitive Drum

0005-9072

If you have replaced the photosensitive drum, be sure to go through the following:

- 1) Remove the drum heater and the drum heater PCB; then, mount them to the new photosensitive drum.
- 2) Mount the photosensitive drum so that the lot number label [1] attached to its inner side is toward the front of the machine.



F-7-250

Memo:

There is a light difference in the inside diameter of the photosensitive drum between its front and its rear. (The front and rear drum flanges are designed in relation to the photosensitive drum.) If you mount the photosensitive drum in the wrong orientation, the gap between the developing cylinder and the photosensitive drum will be uneven, possibly causing uneven density.

- 3) Replace the starter (3 types) of the color developing unit.


7.11.9 Drum Motor

7.11.9.1 Removing the Rear

Cover (upper)


0004-1051

- 1) Free the cable [2] from the 2 cable clamps [1].
- 2) Remove the 2 screws [3].

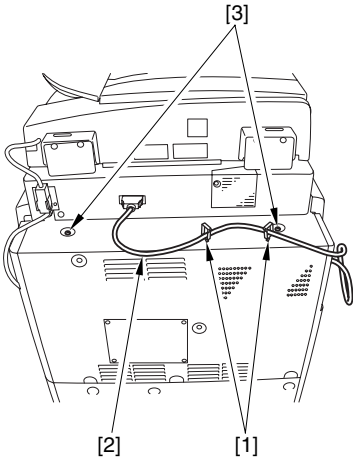

F-7-251

- 3) Remove the 5 screws [1], and detach the rear cover (upper) [2].

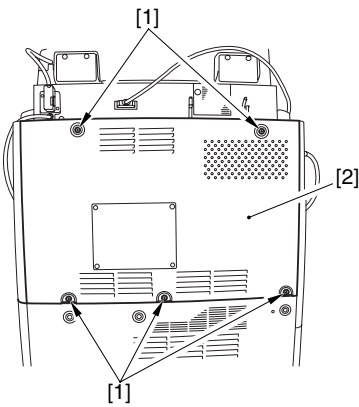


F-7-252

7.11.9.2 Removing the Rear

Cover (lower)

0004-1052

- 1) Remove the 7 screws [1], and detach the rear cover (lower) [2].

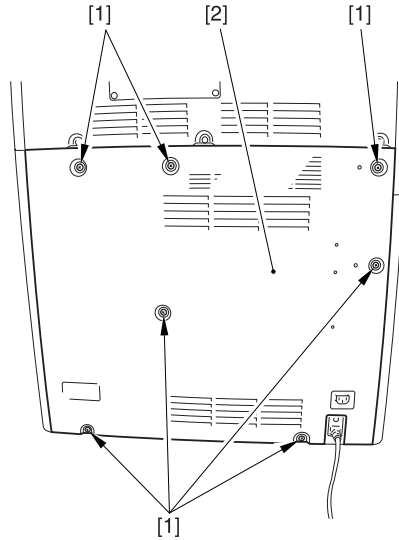


F-7-253

7.11.9.3 Removing the Right

Cover (upper rear)

0004-1053

- 1) Detach the reader communications cable [1].
- 2) Remove the 2 screws [2], and detach the right cover (upper rear) [3].

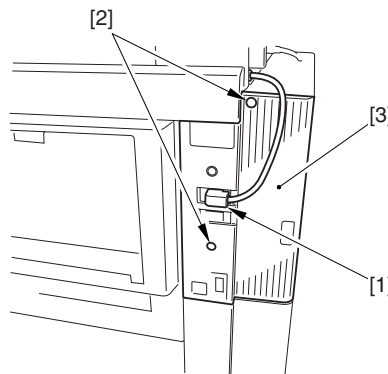


F-7-254

7.11.9.4 Sliding the DC

Controller Box


0004-1054

- 1) Remove the 9 screws [1], and detach the DC controller cover [2].

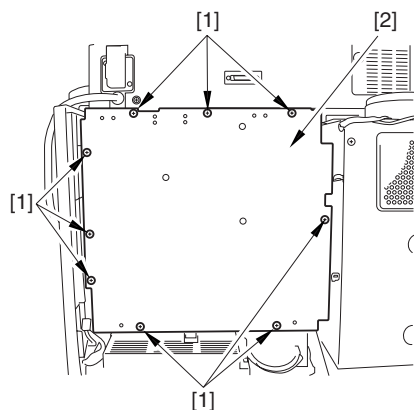

F-7-255

- 2) Remove the 6 screws [1], and slide the DC controller box [2] to the left.

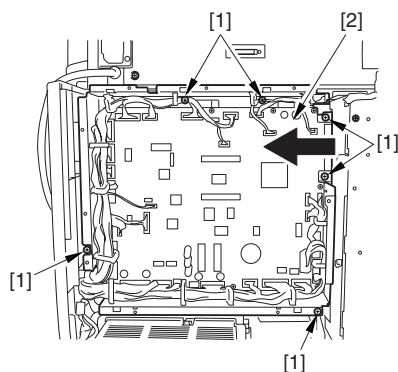


F-7-256

7.11.9.5 Removing the DC

Controller Box


0004-1055

- 1) Open the 3 cable guides [1], and free the harness [2].

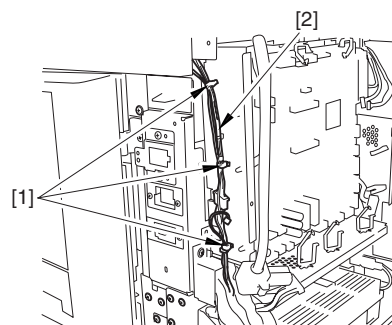


F-7-257

- 2) Disconnect the 33 connectors [1], and open that 13 cable guides [2]; then, free the harness [3].

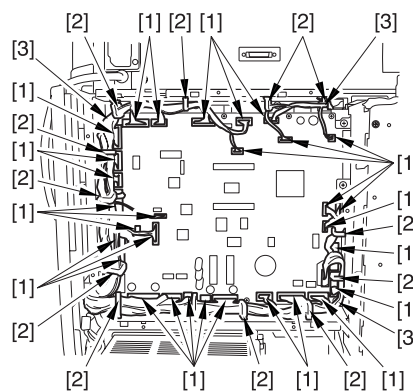

F-7-258

- 3) Lift the DC controller box [1] to detach.

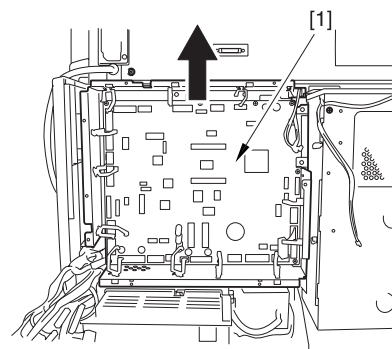


F-7-259

7.11.9.6 Points to Note When Mounting the DC Controller Box

Box 0005-7221

⚠ During assembly work, be sure to connect the harness to the DC controller PCB as follows:

- Connect the connector of the harness [1] first, and then the other harness [2].
- Fix the harnesses [1] [2] in place using the wire saddle [3] so that the harness [1] is on the left side of the harness [2].

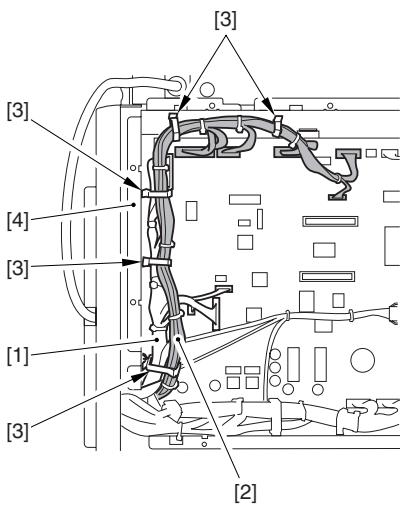

F-7-260


Supplementary Information:

If the harness [1] is away from the side plate [4] of the DC controller box, wrong detection (E070-0102) of the ITB home position tends to occur because of noise.

7.11.9.7 Removing the Drum Motor


0004-1056

- 1) Remove the 2 screws [1], and detach the fly wheel [2].

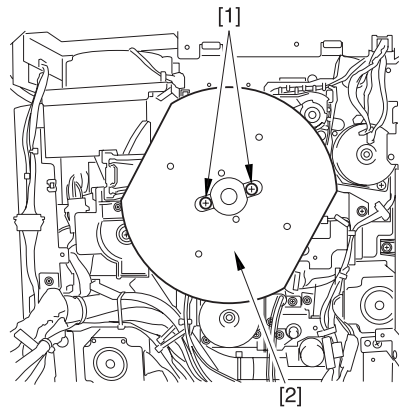

F-7-261

- 2) Disconnect the 2 connectors [1], and remove the 3 screws [2]; then, detach the drum motor [3].

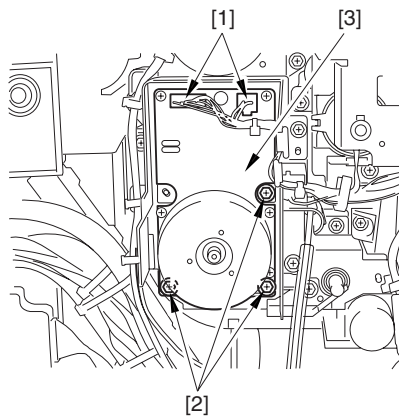

F-7-262


7.11.10 Drum Heater

7.11.10.1 Removing the Right

Cover (upper)

0004-4602

- 1) Remove the 2 screws [1], and detach the right cover (upper) [2].

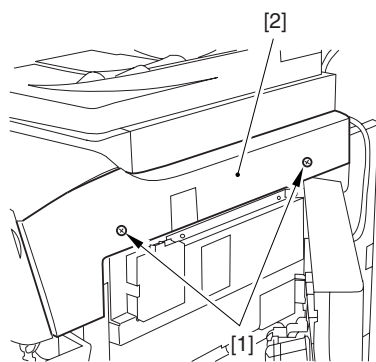


F-7-263

7.11.10.2 Releasing the Front

Cover


0004-4605

- 1) Open the front cover.
- 2) While pulling on the grip [1], fully open the manual feed cover [2] to the front.

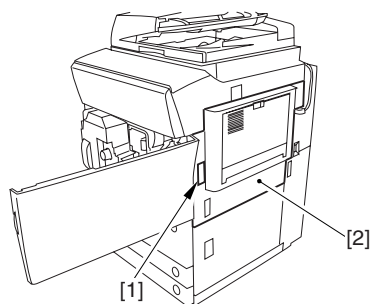


F-7-264

- ⚠ If a side paper deck exists, remove the 2 screws [1] and the latch plate (front)

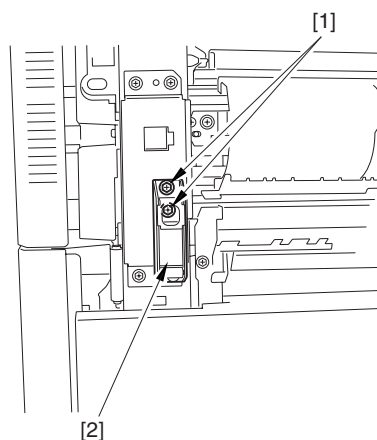


F-7-265

- 3) Slide out the fixing/feeding assembly
- 4) Remove the 2 screws [1], and detach the process unit cover [2].

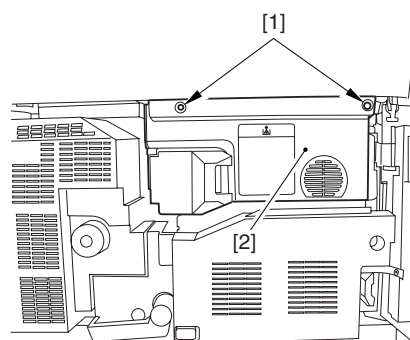


F-7-266

- 5) Push in the fixing/feeding assembly, and set the lever in place.
- 6) Push the release button [1] of the right deck, and slide out the right deck [2].

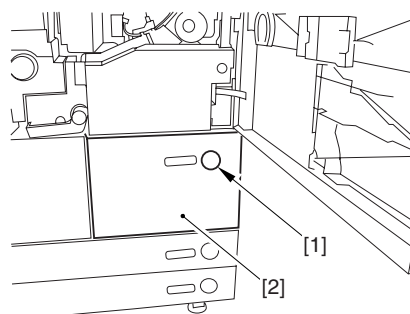


F-7-267

7) Remove the screw [1] from lower right, and detach the front cover strap [2].

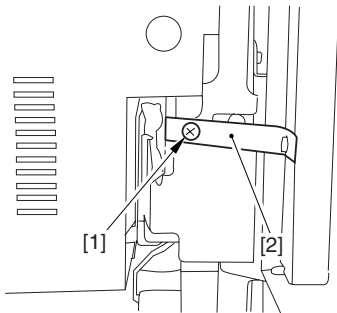


F-7-268

2) Shift down the lever [1], and detach the black toner bottle [2].

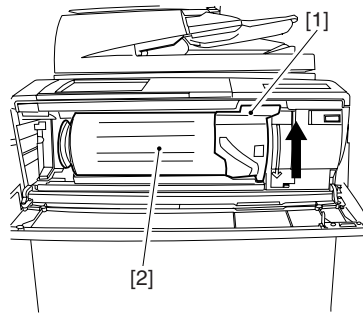


F-7-271

8) Remove the 2 screws [1] (binding) of the front cover hinge, and fully open the front cover [2].

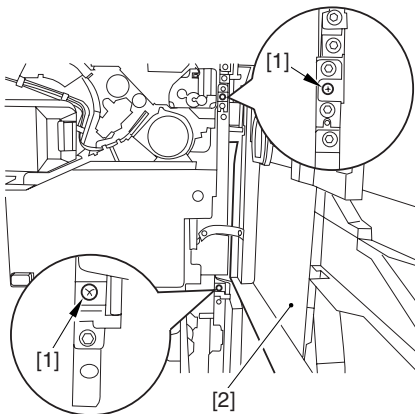

F-7-269

⚠ Once you have released the hopper assembly, toner can spill over the toner bottle supply mouth of the hopper assembly cover. Be sure to wipe off any such toner.

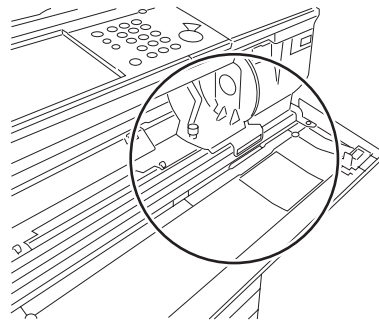


F-7-272

9) Close the right deck.

7.11.10.3 Releasing the Hopper Assembly


0004-4608

1) Open the black toner supply cover [1].

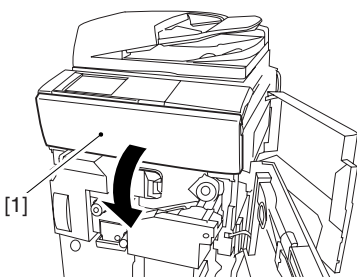


F-7-270

3) Remove the 3 screws [1].

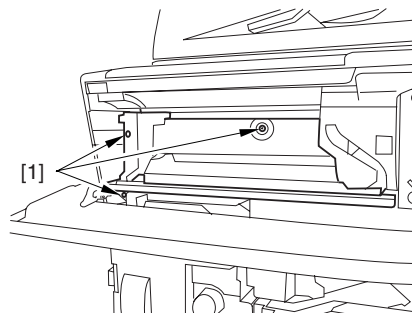

F-7-273


- 4) Close the black toner supply cover [1]; then, fully open the hopper assembly [2].

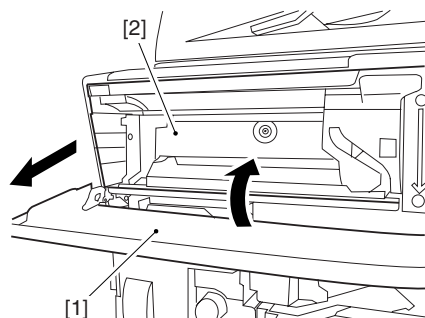

F-7-274

7.11.10.4 Removing the Pre-Transfer Charging Assembly 0005-7266


- 1) Remove the screw [1], and disconnect the connector [1]; then, detach the pre-transfer charging assembly [3] from the machine.

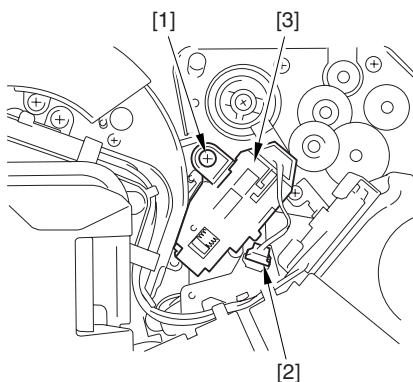

F-7-275


7.11.10.5 Removing the Transfer Cleaner Drive Assembly 0004-4623

- 1) Open the color toner supply mouth cover [1].

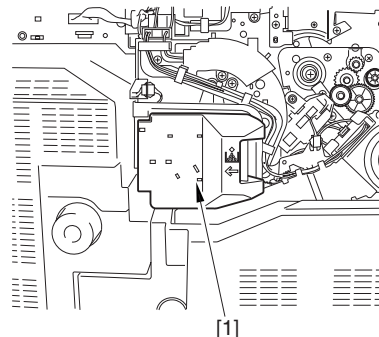


F-7-276

- 2) Disconnect the connector [1], and remove the screw [2]; then, detach the color toner supply cover [3].

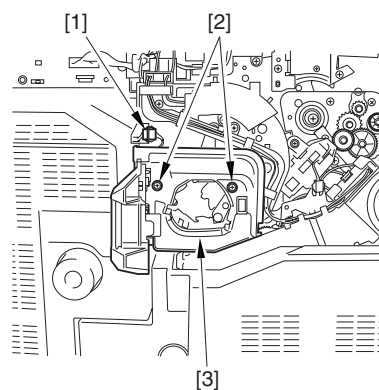


F-7-277

- 3) Slightly slide out the fixing/feeding assembly.
4) Disconnect the connector [1] to free it from the wire guide [2].

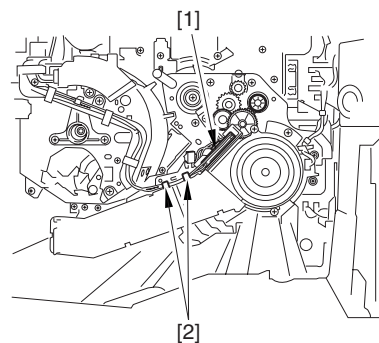


F-7-278

- Remove the screw [1], and shift down the locking plate [2].

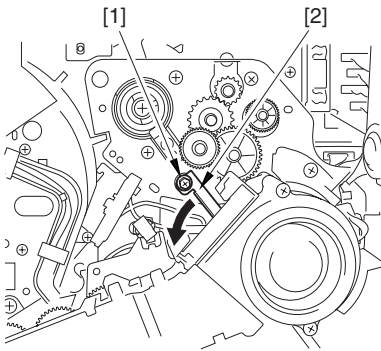

F-7-279

- Disconnect the connector [1], and remove the 5 screws [2]; then, detach the transfer cleaner driver assembly [3].

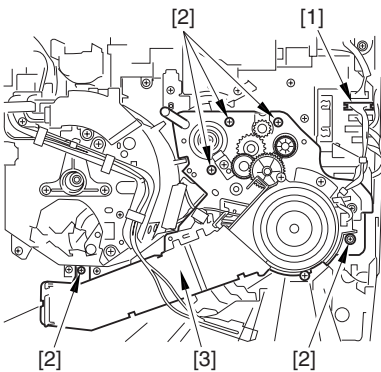


F-7-280

7.11.10.6 Removing the Intermediate Transfer Unit

0006-0064


- Disconnect the 2 connectors [1].

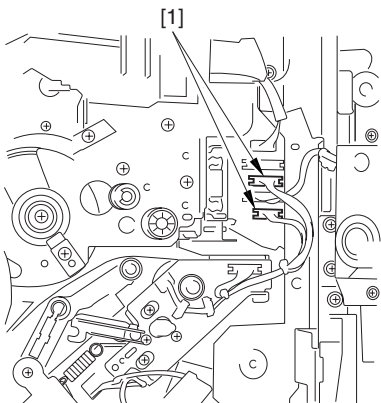

F-7-281

- Fully slide out the fixing/feeding assembly.
- Slide out the intermediate transfer assembly [1] to the front; when it stops, shift it slightly to the upper right and then slide it farther out to detach.

⚠ Do not touch the surface of the ITB. Also, be sure to slide the intermediate transfer assembly straight out so as to prevent damage to the surface of the ITB.

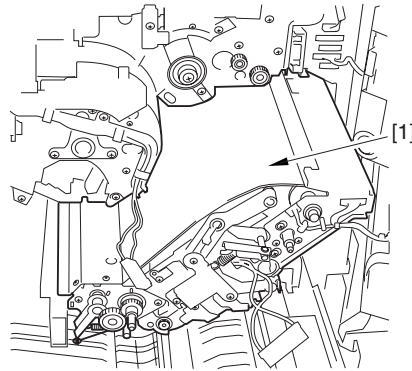


F-7-282

7.11.10.7 Cleaning the Surface of the Intermediate Transfer Unit


0006-0334

- Place the ITB unit [1] on paper for protection.

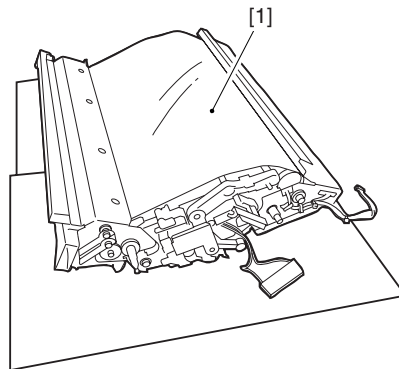


F-7-283

- Turn the drive gear [1] by hand in the direction of the arrow to move the intermediate transfer belt [2] about 50 mm.

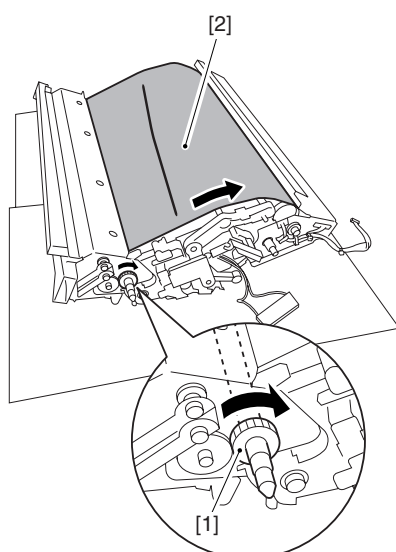


F-7-284

3) If there is any toner [3] on the surface of the intermediate transfer belt, dry wipe it with lint-free paper.

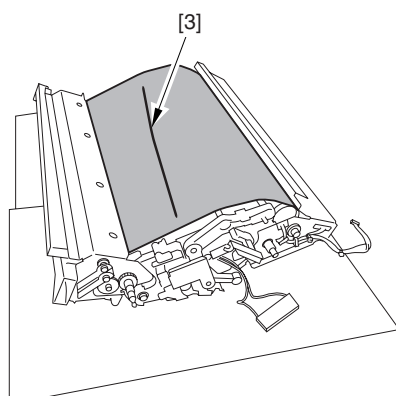

F-7-285

⚠ When you remove the transfer cleaner drive assembly, the ITB cleaning blade [1] is likely to come into contact with the intermediate transfer belt by the work of a spring, causing toner [2] to deposit on the belt surface in the form of lines. The toner can then be forced against the photosensitive drum by the primary transfer assembly, thus affecting the photosensitive drum cleaning blade [3].

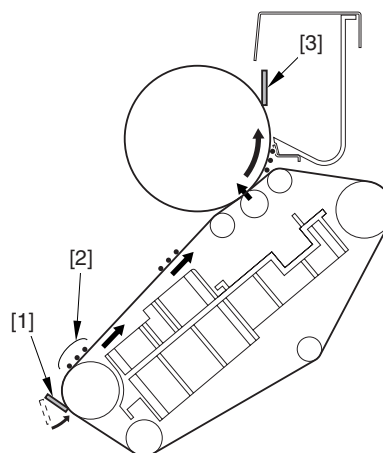


F-7-286

7.11.10.8 Sliding Out the Process Unit


0004-4628

1) Disconnect the 5 connectors [1] found at the upper right.

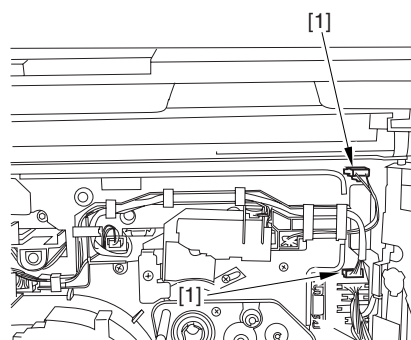


F-7-287

2) Disconnect the 5 connectors [1] found at the upper left.

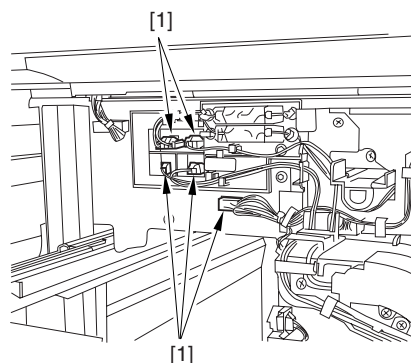


F-7-288

3) After freeing the high-voltage connector cable [1] from the 2 wire saddles [2], fix the cable in place using the cable hook [3].

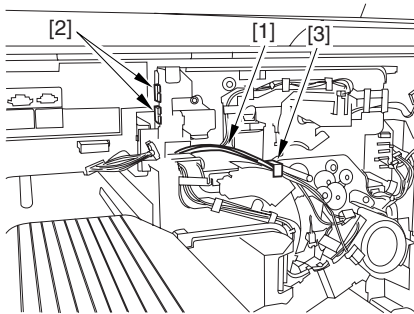

F-7-289

4) Take out the process unit cover [1] from the shipping box, and detach the drum stop tool [2] from the back of the cover.

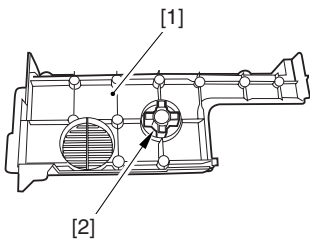


F-7-290

5) While forcing the drum stop tool [3] against the drum fixing member [2] of the drum shift [1], remove the fixing screw [4].



1: Be sure to match the protrusion [5] of the drum fixing member and the protrusion [6] of the drum stop tool.

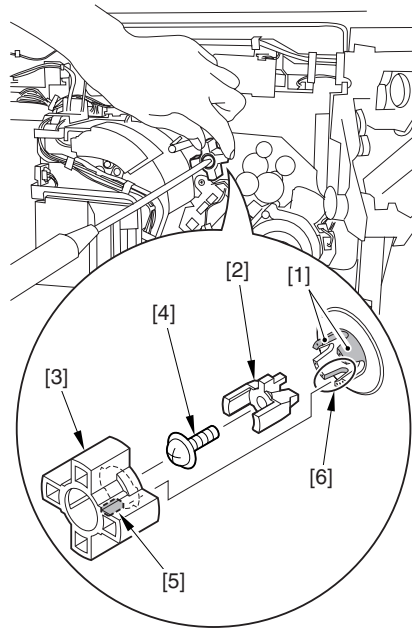


F-7-291

2: When drawing out the process unit, be sure to find out the position of the protrusion [1] of the drum fixing member in relation to the marking [2] on the drum flange.

In the example in the figure, the marking [2] on the drum flange is at "." on the left and at ".." on the right in relation to the protrusion [2] of the drum fixing member.


Moreover, when you close the process unit, it is important that the spatial relationship between the protrusion of the drum fixing member and the marking on the drum flange is as it was before you drew out the unit.

6) Using a pair of fine pliers, remove the drum fixing member [1].

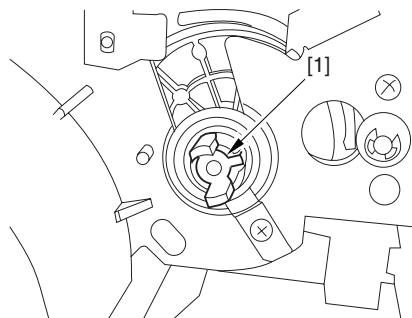


F-7-292

7) Remove the 3 binding screws (M4x8) [1].

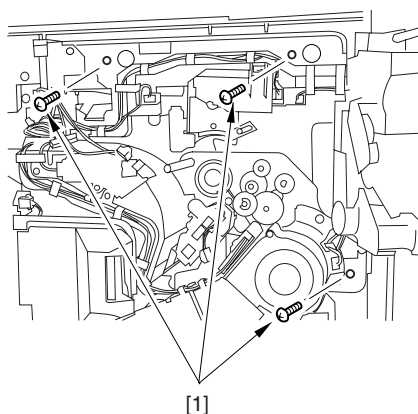


F-7-293

8) Shift down the fixing/feeding assembly releasing lever [1] in the direction of the arrow.

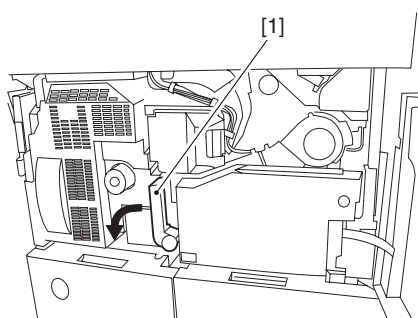


F-7-294

9) Slide out the fixing/feeding assembly [1] toward the front.

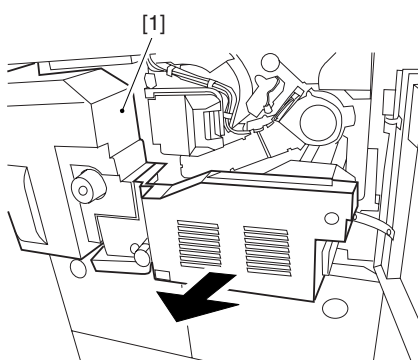


F-7-295

10) While pushing on the 2 hooks [1] found on both sides of the fixing/feeding assembly, fully slide out the fixing/feeding assembly [2].

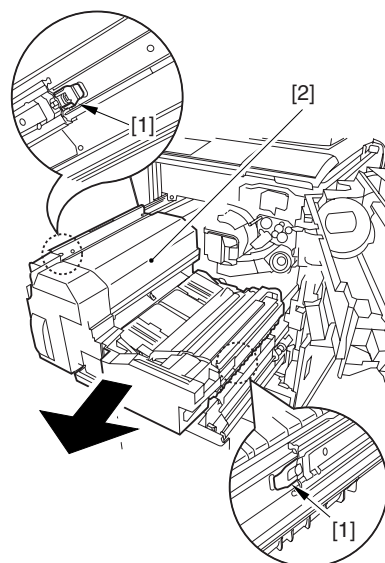

F-7-296


11) Slightly lift both ends [1] of the process unit, and fully slide out the process unit [2].

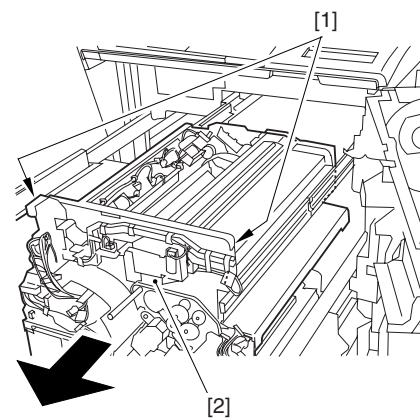


F-7-297

When you have slid out the process unit, check to see if any of the following parts is soiled with toner before fitting it back in; if soiled, dry wipe the part:

- entire surface of the deck top panel [1]
- front bend of the deck top panel [2]
- lower rear sheet (4 locations) of the fixing/feeding assembly [3].

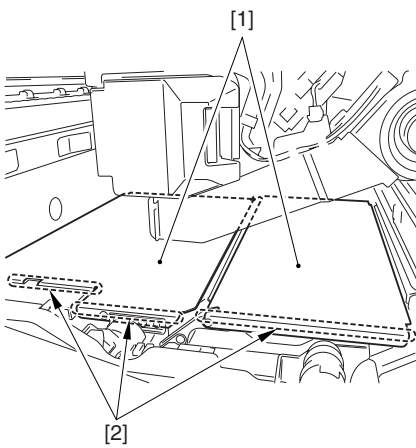


F-7-298

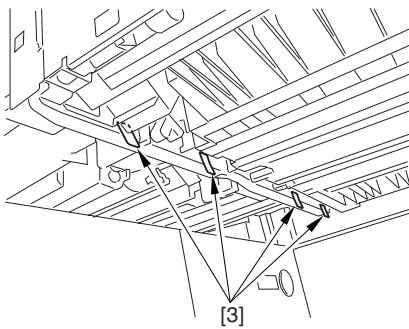

F-7-299

7.11.10.9 Removing the Primary Charging Assembly 0004-4638


- 1) Disconnect the connector [1].
- 2) Loosen the screw [2], and slide the primary charging assembly stopper [3] in the direction of the arrow; then, tighten the screw [2].
- 3) Detach the primary charging assembly [4] from the machine.

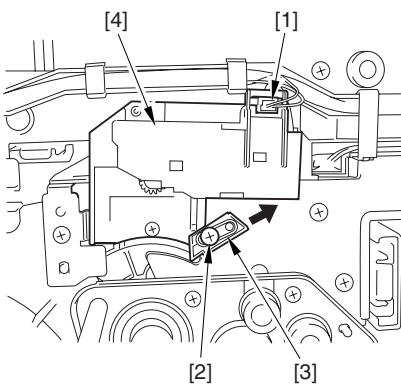

F-7-300


7.11.10.10 Removing the Photosensitive Drum Cleaning Unit 0004-4634

- 1) Open the 2 cable clamps [1], and lead the harness [2] through the opening [3] in the process unit.

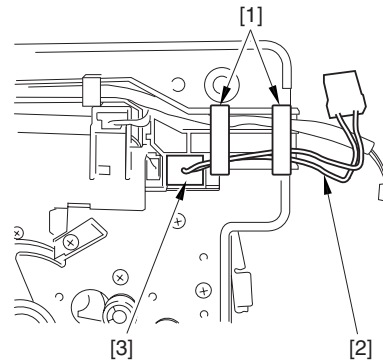


F-7-301

- 2) Open the 8 cable clamps [1], and move the harness [2] out of the way.

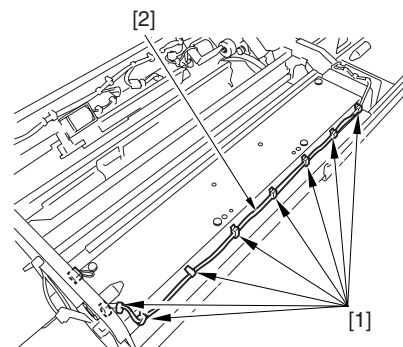


F-7-302

- 3) Disconnect the connector [1].

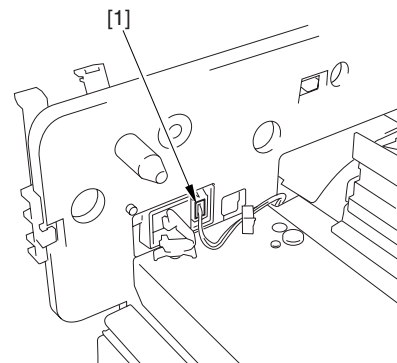

F-7-303

- 4) Remove the 4 screws [1], and detach the photosensitive drum cleaning unit [2].

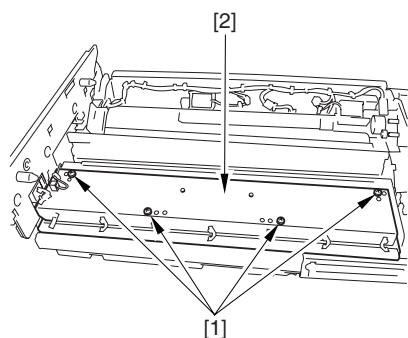

F-7-304

7.11.10.11 Removing the Black Developing Unit


0004-4648

⚠ Points to Note About the Work

1 The machine's developing unit is not equipped with a developing cylinder protection cover. Take full care, therefore, not to damage the developing cylinder when you have detached the developing unit.


The waste toner collecting inside the machine can move into the fixing/feeding assembly through the outlet; be sure to place paper under the process unit for the work.

2. The machine's black developing unit is equipped with a potential sensor. Do not touch the sensor window [1] indicated in the figure. Moreover, take care not to drop the black developing assembly or otherwise subject it to impact so as to avoid damage to the potential sensor.

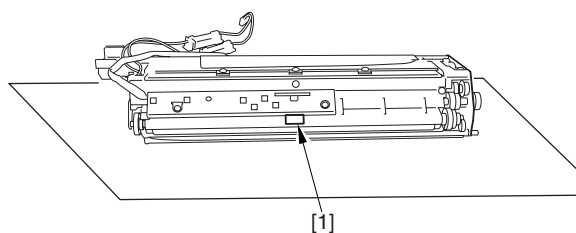


F-7-305

- 1) Open the harness guide used to fix the high-voltage cable [1] in place.

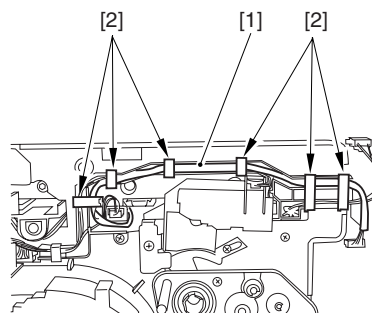


F-7-306

- 2) Remove the screw [2], and detach the black developing assembly locking plate [1].

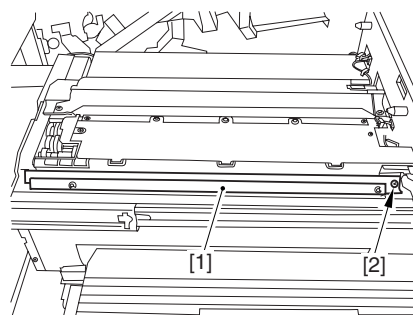


F-7-307

- 3) Remove the 2 screws [2], and detach the black developing assembly joint plate [1].

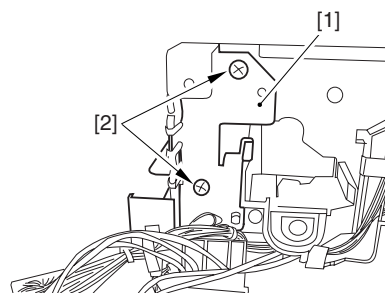


F-7-308

4) Disconnect the connector [1].

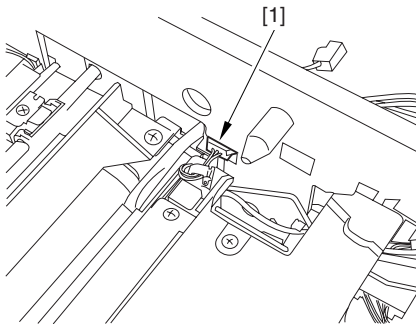

F-7-309


5) Push in the high-voltage cable [1] through the opening [2] indicated in the figure.

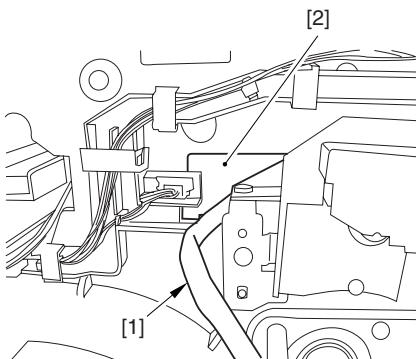

F-7-310

6) While holding the high-voltage cable [1] in place as shown, detach the black developing assembly [2] in upward direction.

⚠ When detaching the black developing assembly, be sure to work with the high-voltage cable kept at the top of the assembly so that its connector will not damage the surface of the photosensitive drum.

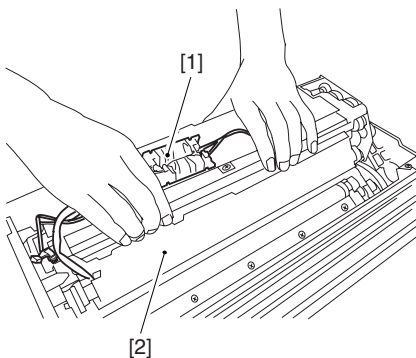


F-7-311

7.11.10.12 Removing the Photosensitive Drum

0004-4651


1) Remove the 2 screws [1], and detach the charging assembly rail [2].

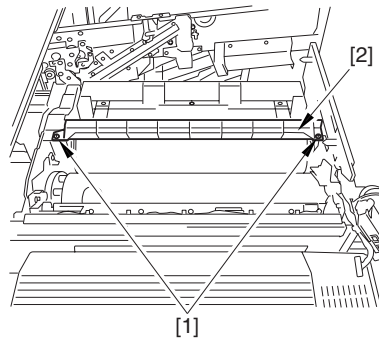

F-7-312


2) Remove the screw [1], and detach the charging assembly rail fixing plate [2].

3) Remove the screw [3], and detach the bearing stopper [4].

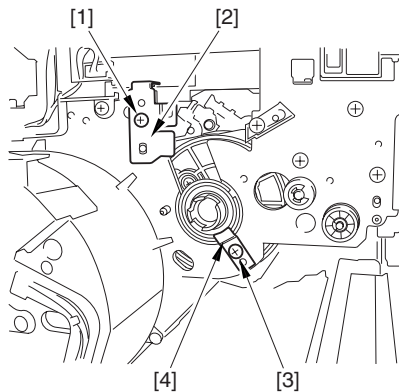


F-7-313

4) Pull the photosensitive drum [1] toward the front once, and then detach it.

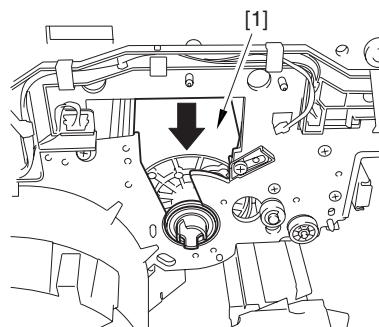

F-7-314

⚠ At the front, hold the photosensitive drum shaft [1], and lift the drum; then, place it on the level area of the heat process unit front plate. Thereafter, hold the drum flange [2] from behind the front side plate.

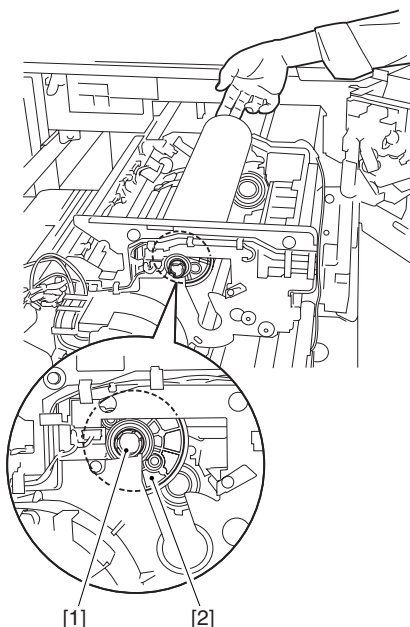

F-7-315

7.11.10.13 Points to Note When Mounting the Photosensitive Drum

0006-0363

Mount the photosensitive drum so that the lot number label [1] attached to its inner side is toward the front of the machine.



F-7-316

Memo:

There is a light difference in the inside diameter of the photosensitive drum between its front and its rear. (The front and rear drum flanges are designed in relation to the photosensitive drum.) If you mount the photosensitive drum in the wrong orientation, the gap between the developing cylinder and the photosensitive drum will be uneven, possibly causing uneven density.


7.11.10.14 Points to Note When Replacing the Drum Heater

0006-2080

Drum memory can occur if the phase of the drum is changed, as when replacing the drum heater.


Take full care not to change the phase of the drum during the work by making sure of the following:

1. When detaching the drum flange, check the location of the marking [2] on the drum flange in relation to the lot No. label [1] found on the inner side of the drum. (In the case of the figure, the left of the marking is at "." and the right is at "..." with the lot No. label facing upward.)
2. When attaching the drum flange, be sure to fix it in place with a screw where it was found in step 1.

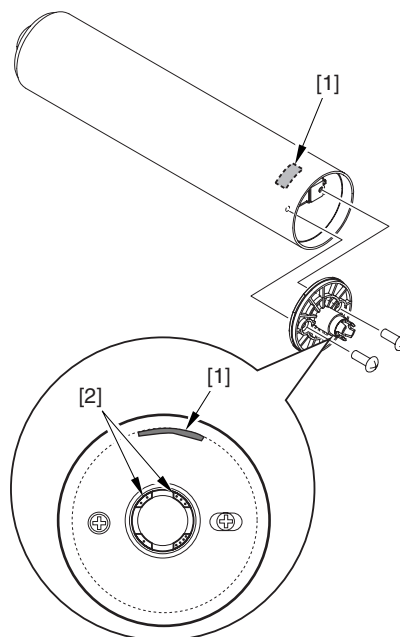


F-7-317

3. Check the drum phase label [1] attached behind the process unit cover.

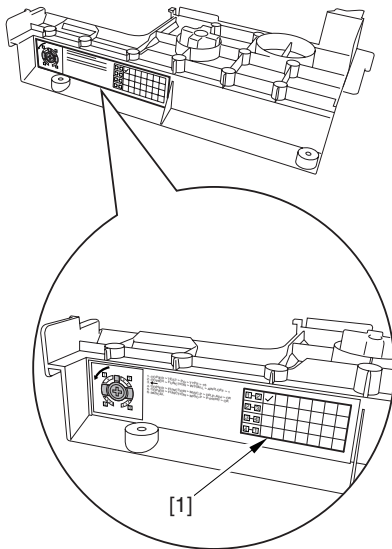


F-7-318

⚠ See the following sample. The cell with a check mark [1] indicates the present drum phase location. In this case, the marking [3] is located in relation to the protrusion [2] of the drum fixing member with its left at ".." and right at "...".

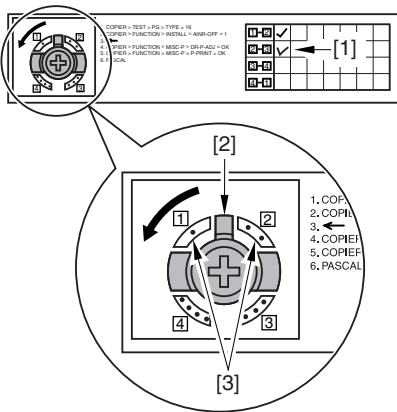

F-7-319

4. Be sure to fit the drum fixing member [1] to the drum flange [2] in correct relation to the phase location indicated on the drum phase label.

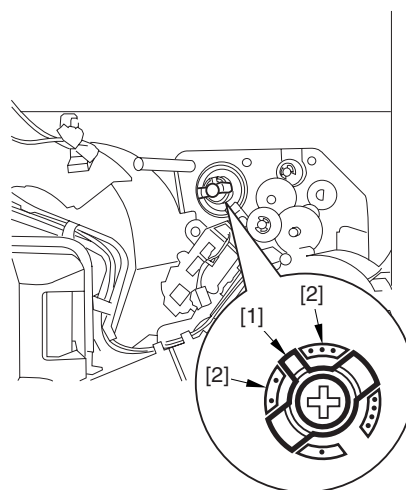


F-7-320

7.11.10.15 Removing the Drum Heater


0002-6234

1) Remove the 2 screws [1], and detach the flange found at the front [2].

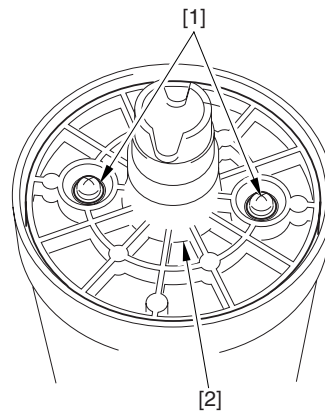


F-7-321

2) Disconnect the connector [1].

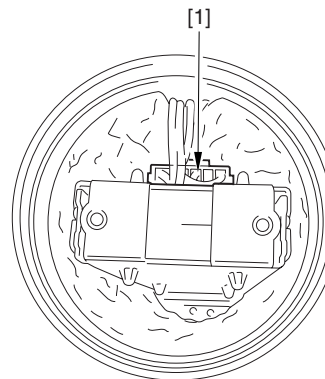

F-7-322

- 3) Lift the drum heater upright from the photosensitive drum; then, detach the drum heater.

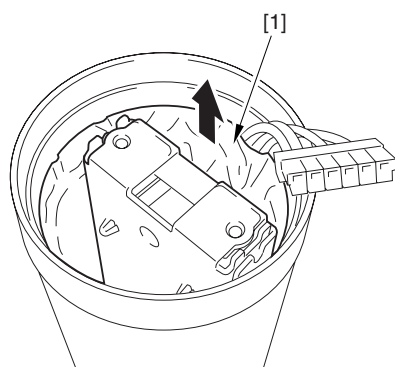


F-7-323

7.11.11 Drum Heater PCB

7.11.11.1 Removing the Right Cover (upper)

0004-4604

- 1) Remove the 2 screws [1], and detach the right cover (upper) [2].

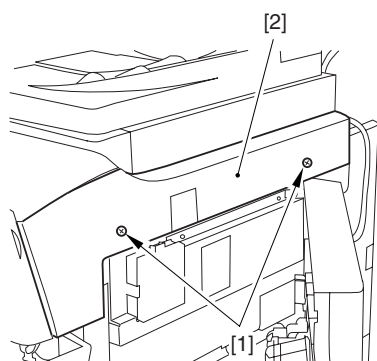


F-7-324

7.11.11.2 Releasing the Front Cover


0004-4606

- 1) Open the front cover.
- 2) While pulling on the grip [1], fully open the manual feed cover [2] to the front.

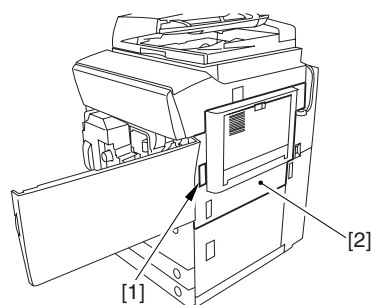


F-7-325

- ⚠ If a side paper deck exists, remove the 2 screws [1] and the latch plate (front)

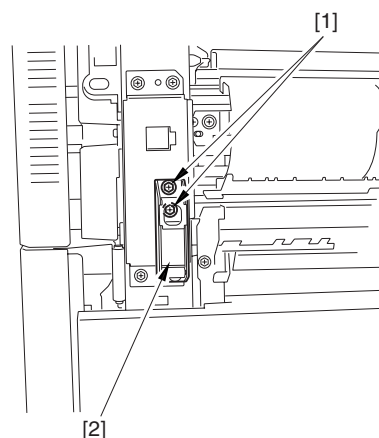

F-7-326


- 3) Slide out the fixing/feeding assembly
- 4) Remove the 2 screws [1], and detach the process unit cover [2].

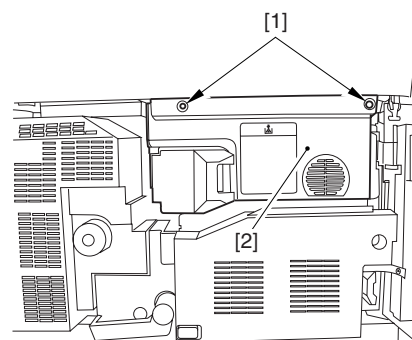

F-7-327


- 5) Push in the fixing/feeding assembly, and set the lever in place.

6) Push the release button [1] of the right deck, and slide out the right deck [2].

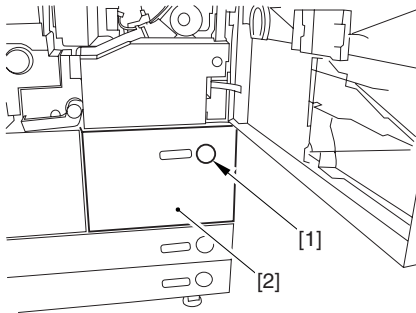


F-7-328

7) Remove the screw [1] from lower right, and detach the front cover strap [2].

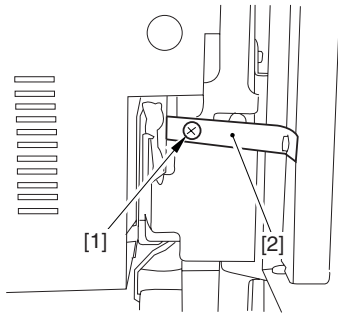

F-7-329

8) Remove the 2 screws [1] (binding) of the front cover hinge, and fully open the front cover [2].

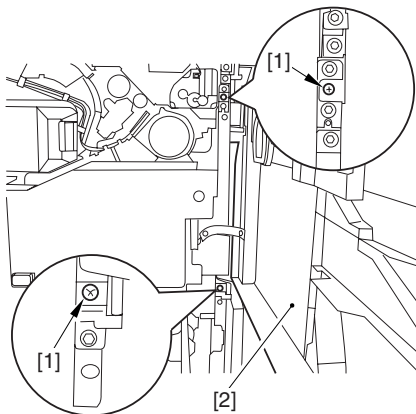


F-7-330

9) Close the right deck.

7.11.11.3 Releasing the Hopper Assembly


0004-4609

1) Open the black toner supply cover [1].

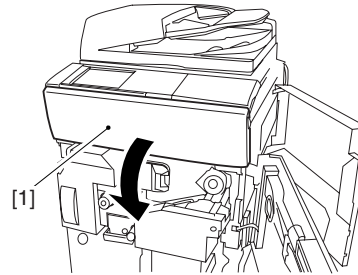


F-7-331

2) Shift down the lever [1], and detach the black toner bottle [2].

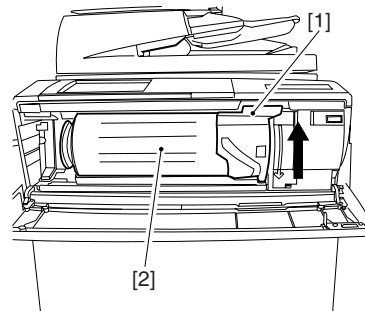


F-7-332

⚠ Once you have released the hopper assembly, toner can spill over the toner bottle supply mouth of the hopper assembly cover. Be sure to wipe off any such toner.

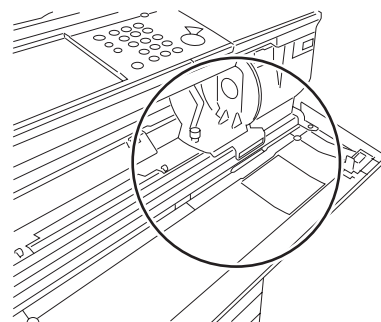


F-7-333

3) Remove the 3 screws [1].

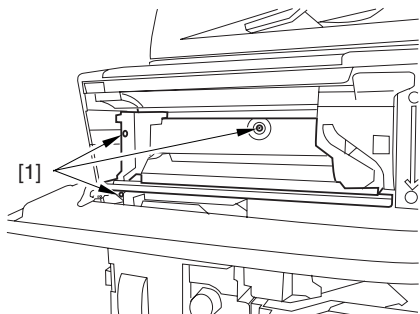

F-7-334


4) Close the black toner supply cover [1]; then, fully open the hopper assembly [2].

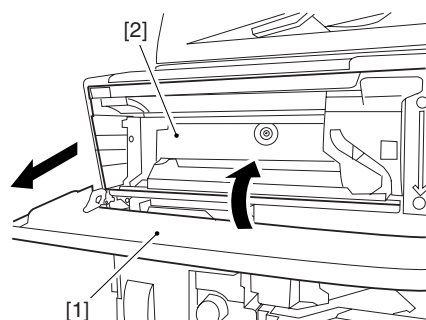

F-7-335

7.11.11.4 Removing the Pre-Transfer Charging Assembly [0005-7267](#)


1) Remove the screw [1], and disconnect the connector [1]; then, detach the pre-transfer charging assembly [3] from the machine.

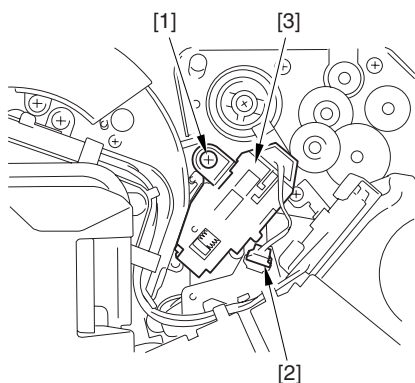

F-7-336


7.11.11.5 Removing the Transfer Cleaner Drive Assembly [0004-4624](#)

1) Open the color toner supply mouth cover [1].

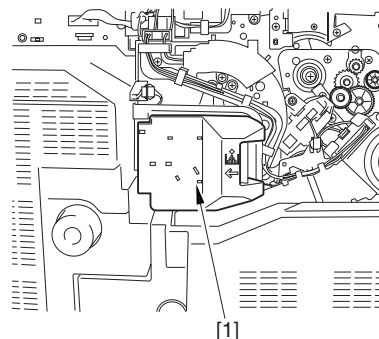

F-7-337


2) Disconnect the connector [1], and remove the screw [2]; then, detach the color toner supply cover [3].

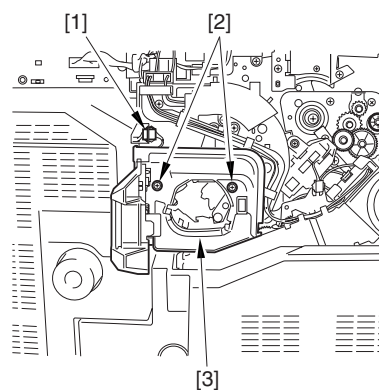

F-7-338


3) Slightly slide out the fixing/feeding assembly.

4) Disconnect the connector [1] to free it from the wire guide [2].

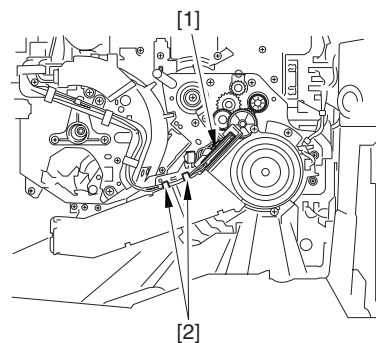


F-7-339

- 5) Remove the screw [1], and shift down the locking plate [2].

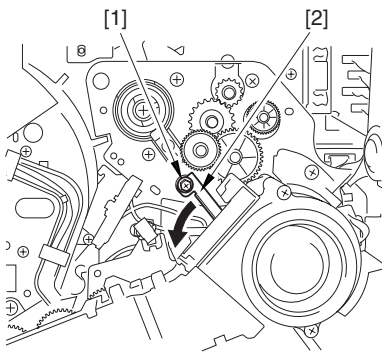

F-7-340

- 6) Disconnect the connector [1], and remove the 5 screws [2]; then, detach the transfer cleaner driver assembly [3].

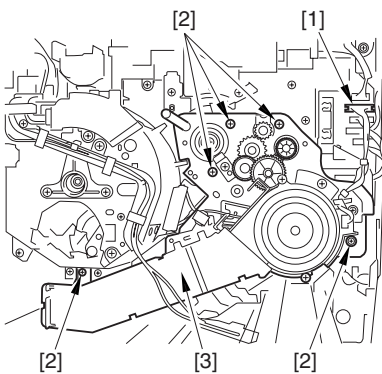


F-7-341

7.11.11.6 Removing the Intermediate Transfer Unit

0006-0065


- 1) Disconnect the 2 connectors [1].

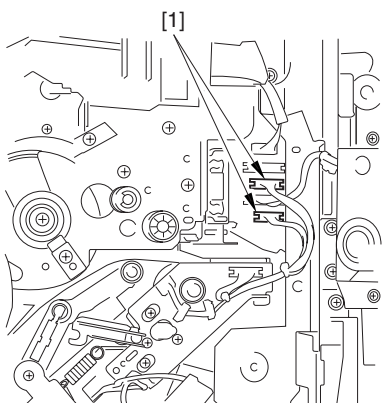

F-7-342

- 2) Fully slide out the fixing/feeding assembly.
- 3) Slide out the intermediate transfer assembly [1] to the front; when it stops, shift it slightly to the upper right and then slide it farther out to detach.

⚠ Do not touch the surface of the ITB. Also, be sure to slide the intermediate transfer assembly straight out so as to prevent damage to the surface of the ITB.

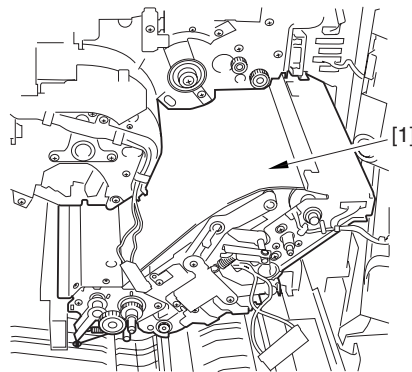


F-7-343

7.11.11.7 Cleaning the Surface of the Intermediate Transfer Unit


0006-0336

- 1) Place the ITB unit [1] on paper for protection.

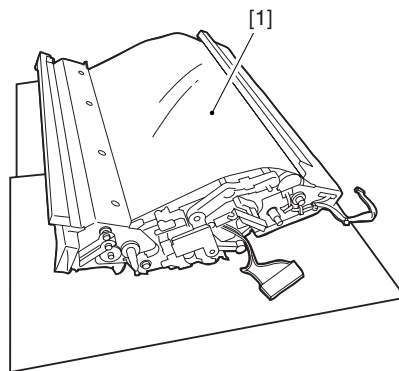


F-7-344

2) Turn the drive gear [1] by hand in the direction of the arrow to move the intermediate transfer belt [2] about 50 mm.

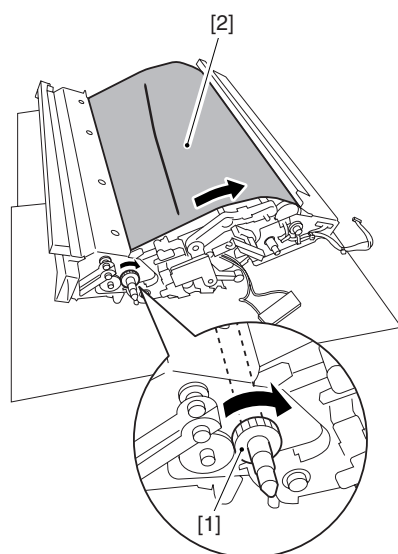


F-7-345

3) If there is any toner [3] on the surface of the intermediate transfer belt, dry wipe it with lint-free paper.

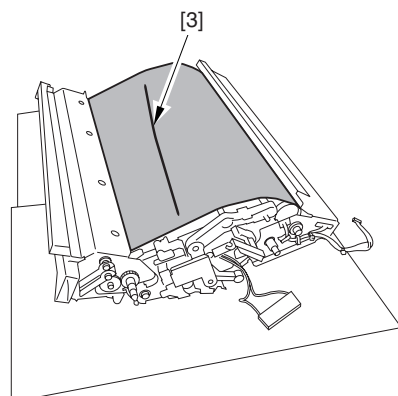

F-7-346

⚠ When you remove the transfer cleaner drive assembly, the ITB cleaning blade [1] is likely to come into contact with the intermediate transfer belt by the work of a spring, causing toner [2] to deposit on the belt surface in the form of lines. The toner can then be forced against the photosensitive drum by the primary transfer assembly, thus affecting the photosensitive drum cleaning blade [3].

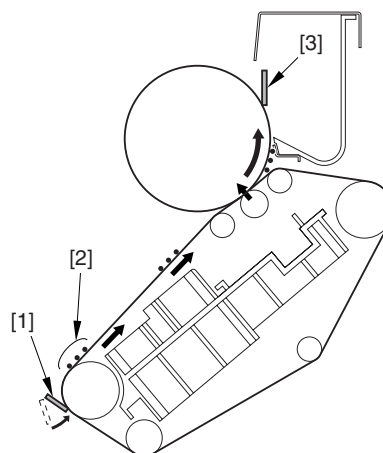


F-7-347

7.11.11.8 Sliding Out the Process Unit


0004-4631

1) Disconnect the 5 connectors [1] found at the upper right.

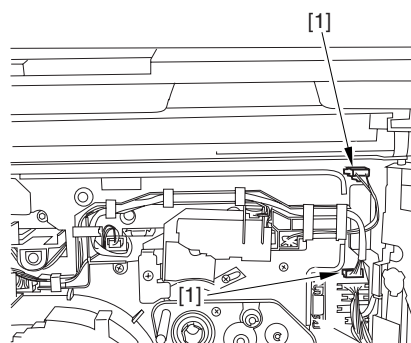


F-7-348

2) Disconnect the 5 connectors [1] found at the upper left.

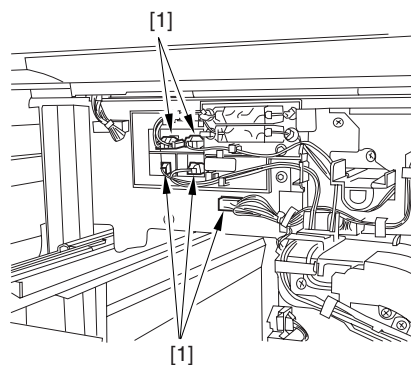


F-7-349

3) After freeing the high-voltage connector cable [1] from the 2 wire saddles [2], fix the cable in place using the cable hook [3].

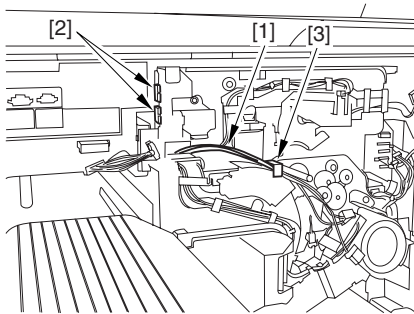

F-7-350

4) Take out the process unit cover [1] from the shipping box, and detach the drum stop tool [2] from the back of the cover.

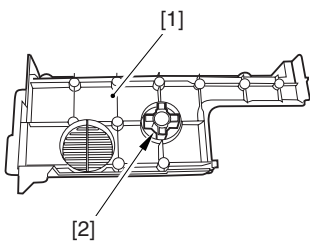


F-7-351

5) While forcing the drum stop tool [3] against the drum fixing member [2] of the drum shift [1], remove the fixing screw [4].



1: Be sure to match the protrusion [5] of the drum fixing member and the protrusion [6] of the drum stop tool.

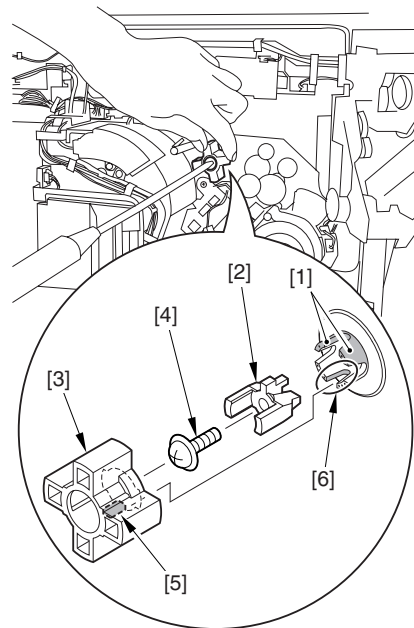


F-7-352

2: When drawing out the process unit, be sure to find out the position of the protrusion [1] of the drum fixing member in relation to the marking [2] on the drum flange.

In the example in the figure, the marking [2] on the drum flange is at "." on the left and at ".." on the right in relation to the protrusion [2] of the drum fixing member.


Moreover, when you close the process unit, it is important that the spatial relationship between the protrusion of the drum fixing member and the marking on the drum flange is as it was before you drew out the unit.

6) Using a pair of fine pliers, remove the drum fixing member [1].

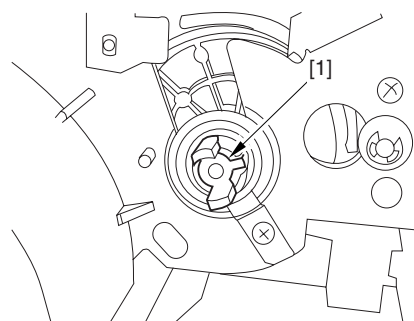


F-7-353

7) Remove the 3 binding screws (M4x8) [1].

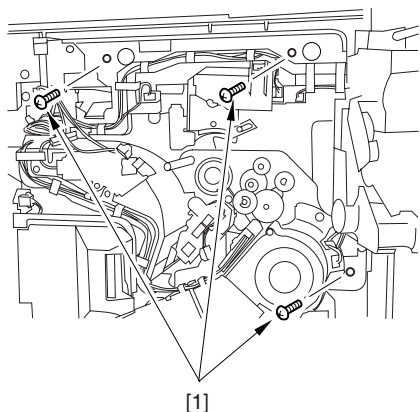


F-7-354

8) Shift down the fixing/feeding assembly releasing lever [1] in the direction of the arrow.

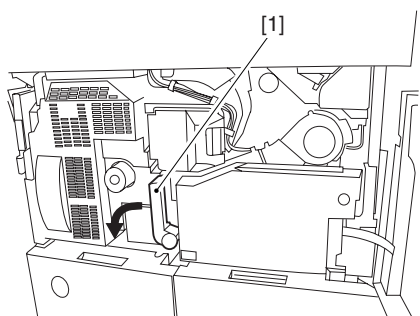


F-7-355

9) Slide out the fixing/feeding assembly [1] toward the front.

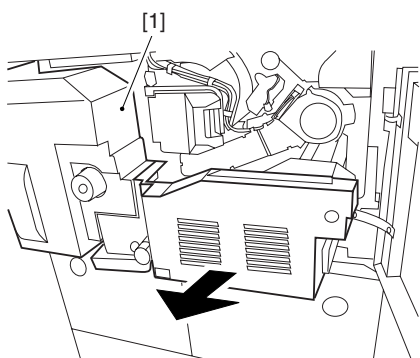


F-7-356

10) While pushing on the 2 hooks [1] found on both sides of the fixing/feeding assembly, fully slide out the fixing/feeding assembly [2].

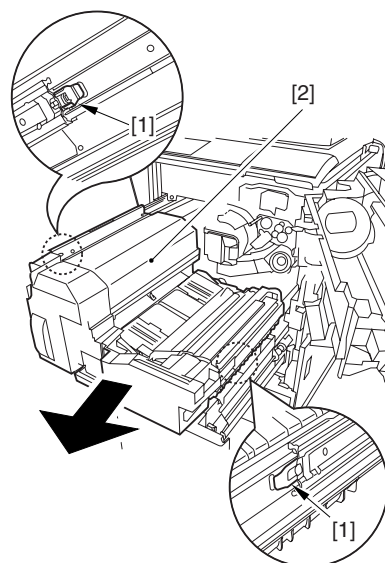

F-7-357


11) Slightly lift both ends [1] of the process unit, and fully slide out the process unit [2].

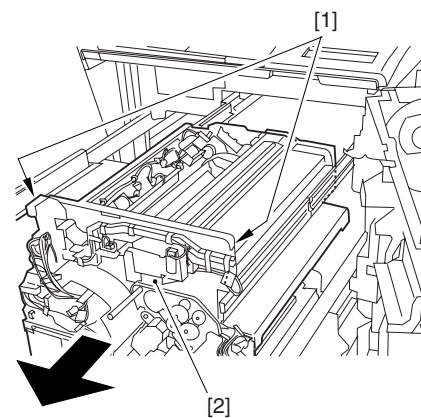


F-7-358

When you have slid out the process unit, check to see if any of the following parts is soiled with toner before fitting it back in; if soiled, dry wipe the part:

- entire surface of the deck top panel [1]
- front bend of the deck top panel [2]
- lower rear sheet (4 locations) of the fixing/feeding assembly [3].

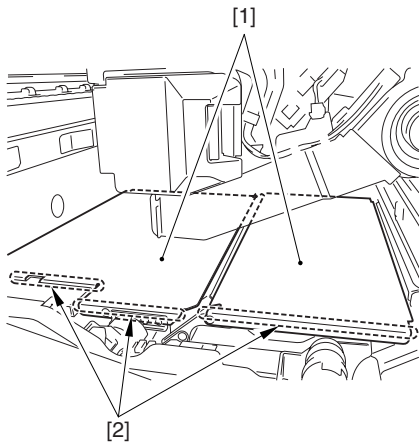

F-7-359

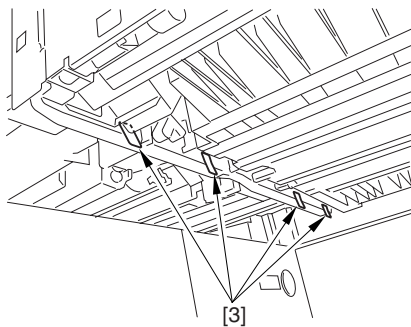


F-7-360

7.11.11.9 Removing the Primary Charging Assembly 0004-4639

- 1) Disconnect the connector [1].
- 2) Loosen the screw [2], and slide the primary charging assembly stopper [3] in the direction of the arrow; then, tighten the screw [2].


3) Detach the primary charging assembly [4] from the machine.

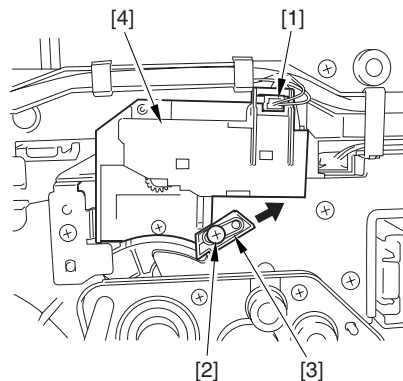

F-7-361


7.11.11.10 Removing the Photosensitive Drum Cleaning Unit 0004-4635

- 1) Open the 2 cable clamps [1], and lead the harness [2] through the opening [3] in the process unit.

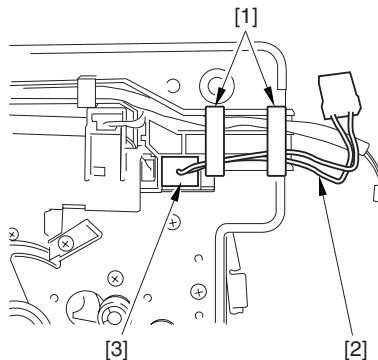


F-7-362

- 2) Open the 8 cable clamps [1], and move the harness [2] out of the way.

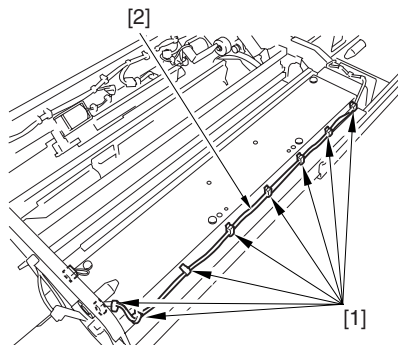


F-7-363

3) Disconnect the connector [1].

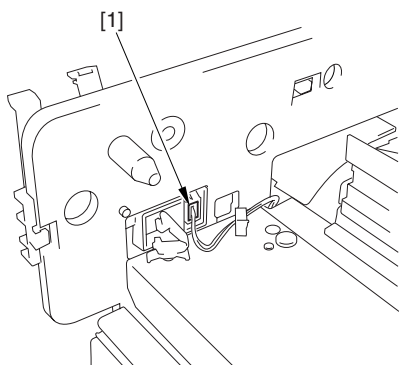

F-7-364

4) Remove the 4 screws [1], and detach the photosensitive drum cleaning unit [2].

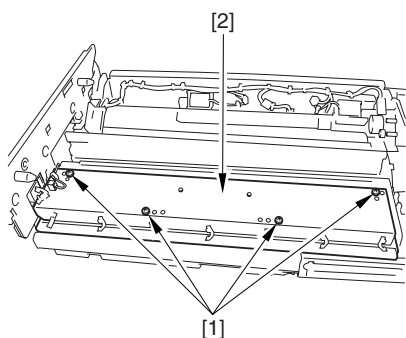

F-7-365

7.11.11.11 Removing the Black Developing Unit


[0004-4650](#)

⚠ Points to Note About the Work

1 The machine's developing unit is not equipped with a developing cylinder protection cover. Take full care, therefore, not to damage the developing cylinder when you have detached the developing unit.


The waste toner collecting inside the machine can move into the fixing/feeding assembly through the outlet; be sure to place paper under the process unit for the work.

2. The machine's black developing unit is equipped with a potential sensor. Do not touch the sensor window [1] indicated in the figure. Moreover, take care not to drop the black developing assembly or otherwise subject it to impact so as to avoid damage to the potential sensor.

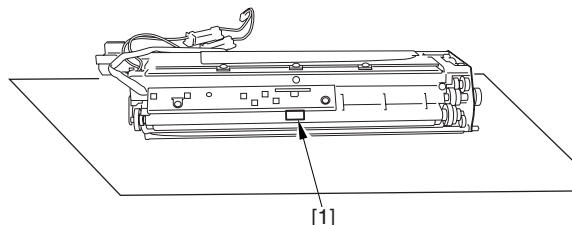


F-7-366

1) Open the harness guide used to fix the high-voltage cable [1] in place.

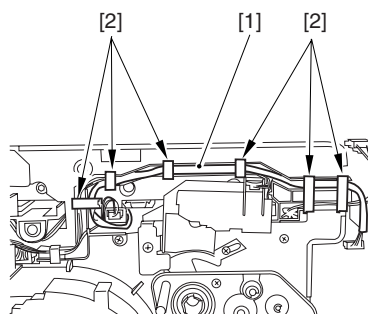


F-7-367

2) Remove the screw [2], and detach the black developing assembly locking plate [1].

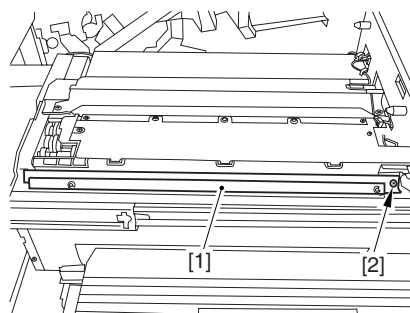


F-7-368

3) Remove the 2 screws [2], and detach the black developing assembly joint plate [1].

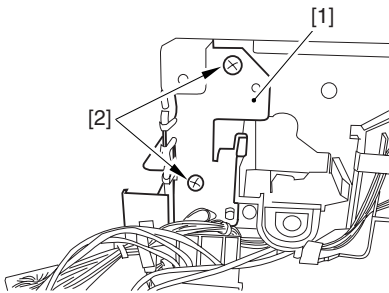


F-7-369

4) Disconnect the connector [1].

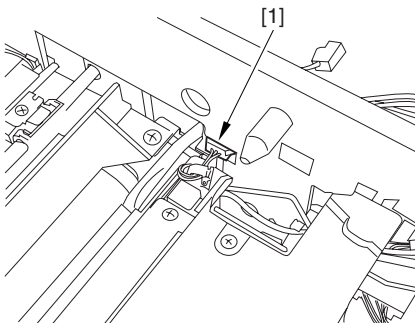

F-7-370


5) Push in the high-voltage cable [1] through the opening [2] indicated in the figure.

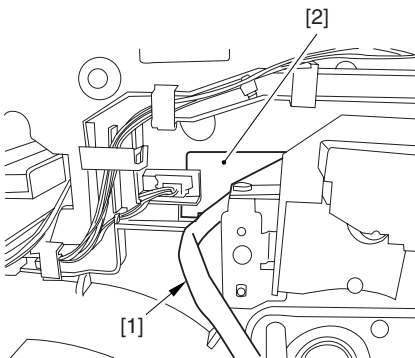

F-7-371

6) While holding the high-voltage cable [1] in place as shown, detach the black developing assembly [2] in upward direction.

⚠ When detaching the black developing assembly, be sure to work with the high-voltage cable kept at the top of the assembly so that its connector will not damage the surface of the photosensitive drum.

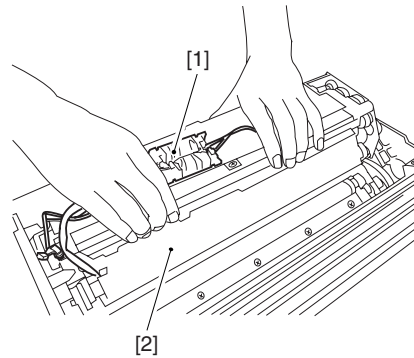


F-7-372

7.11.11.12 Removing the Photosensitive Drum


0004-4652

1) Remove the 2 screws [1], and detach the charging assembly rail [2].

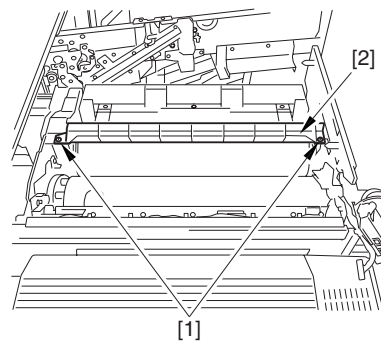


F-7-373

- 2) Remove the screw [1], and detach the charging assembly rail fixing plate [2].
- 3) Remove the screw [3], and detach the bearing stopper [4].

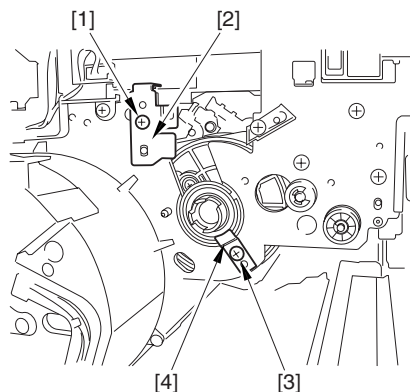


F-7-374

- 4) Pull the photosensitive drum [1] toward the front once, and then detach it.

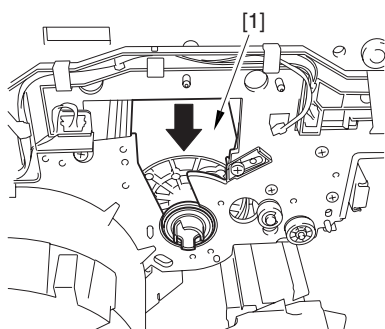

F-7-375

⚠ At the front, hold the photosensitive drum shaft [1], and lift the drum; then, place it on the level area of the heat process unit front plate. Thereafter, hold the drum flange [2] from behind the front side plate.

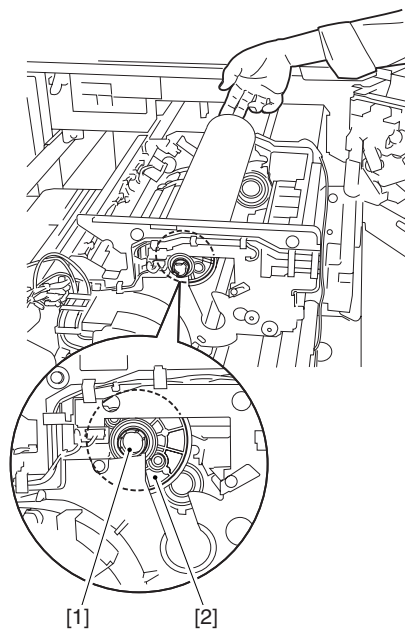

F-7-376

7.11.11.13 Points to Note When Mounting the Photosensitive Drum 0006-0364

Mount the photosensitive drum so that the lot number label [1] attached to its inner side is toward the front of the machine.



F-7-377


Memo:

There is a light difference in the inside diameter of the photosensitive drum between its front and its rear. (The front and rear drum flanges are designed in relation to the photosensitive drum.) If you mount the photosensitive drum in the wrong orientation, the gap between the developing cylinder and the photosensitive drum will be uneven, possibly causing uneven density.

7.11.11.14 Removing the Drum Heater


0004-4658

1) Remove the 2 screws [1], and detach the flange found at the front [2].

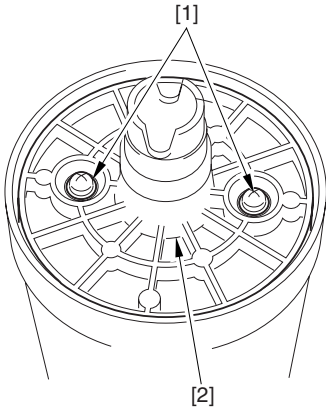


F-7-378

2) Disconnect the connector [1].

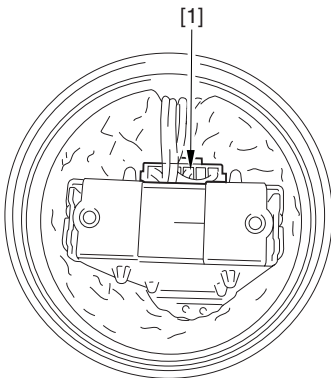

F-7-379

3) Lift the drum heater upright from the photosensitive drum; then, detach the drum heater.

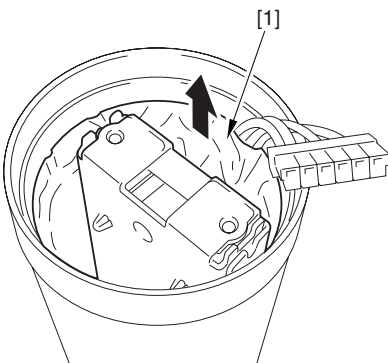


F-7-380

7.11.11.15 Removing the Drum Heater PCB


0002-6236

1) Remove the 2 screws [1], and detach the drum heater PCB together with the flange.

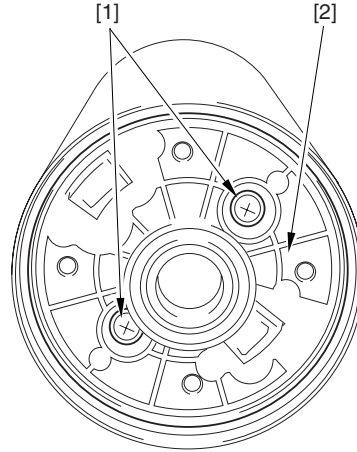


F-7-381

2) Disconnect the 2 connectors [1].

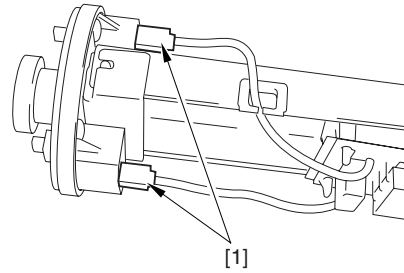

F-7-382

3) Remove the 4 edge saddles [1], and detach the drum heater PCB [2].

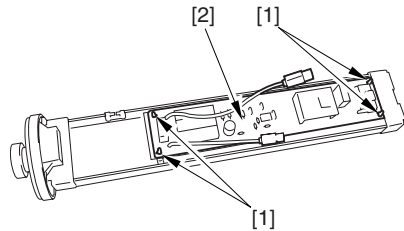

F-7-383

7.11.11.16 Points to Note


When Replacing the Drum

Heater PCB

0006-2081


Drum memory can occur if the phase of the drum is changed, as when replacing the drum heater PCB. Take full care not to change the phase of the drum during the work by making sure of the following:

1. When detaching the drum flange, check the location of the marking [2] on the drum flange in relation to the lot No. label [1] found on the inner side of the drum. (In the case of the figure, the left of the marking is at ".." and the right is at "... " with the lot No. label facing upward.)
2. When attaching the drum flange, be sure to fix it in place with a screw where it was found in step 1.

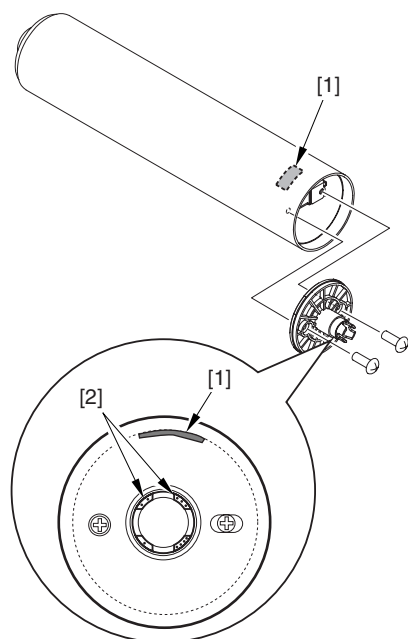


F-7-384

3. Check the drum phase label [1] attached behind the process unit cover.

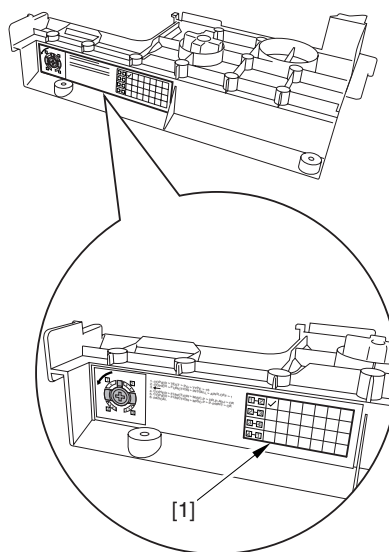


F-7-385

⚠ See the following sample. The cell with a check mark [1] indicates the present drum phase location. In this case, the marking [3] is located in relation to the protrusion [2] of the drum fixing member with its left at ".." and right at "...".

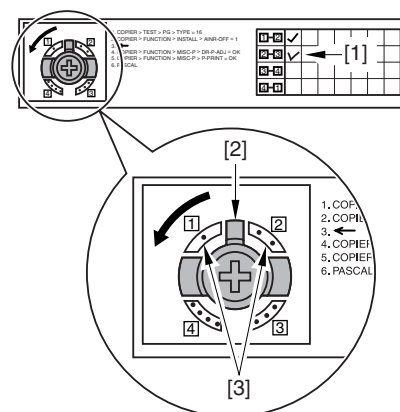

F-7-386

4. Be sure to fit the drum fixing member [1] to the drum flange [2] in correct relation to the phase location indicated on the drum phase label.

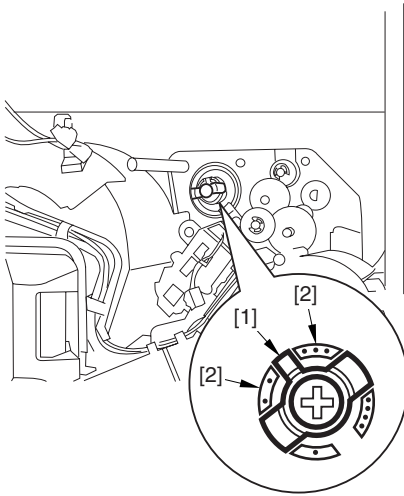


F-7-387

7.11.12 Photosensitive Drum Cleaning Blade

7.11.12.1 Removing the Right Cover (upper)

0003-8252

1) Remove the 2 screws [1], and detach the right cover (upper) [2].

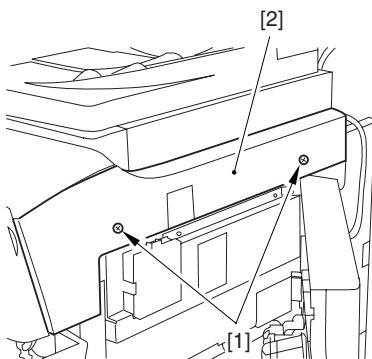


F-7-388

7.11.12.2 Releasing the Front Cover


0003-2500

1) Open the front cover.
2) While pulling on the grip [1], fully open the manual feed cover [2] to the front.

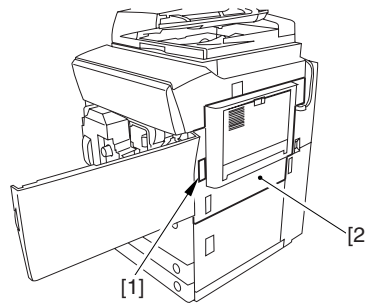


F-7-389

⚠ If a side paper deck exists, remove the 2 screws [1] and the latch plate (front)

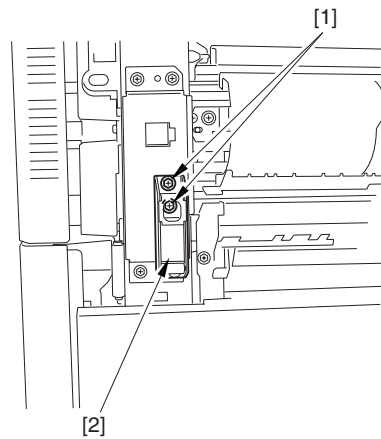

F-7-390


3) Slide out the fixing/feeding assembly
4) Remove the 2 screws [1], and detach the process unit cover [2].

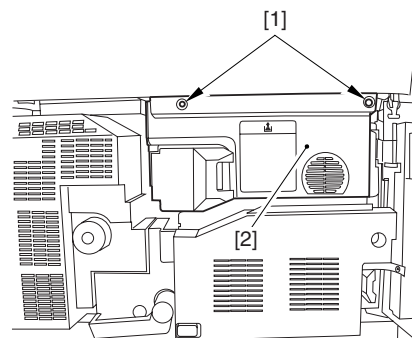

F-7-391


5) Push in the fixing/feeding assembly, and set the lever in place.

- 6) Push the release button [1] of the right deck, and slide out the right deck [2].

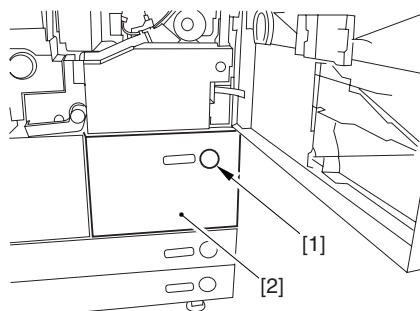


F-7-392

- 7) Remove the screw [1] from lower right, and detach the front cover strap [2].

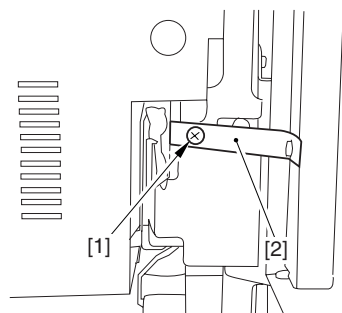

F-7-393

- 8) Remove the 2 screws [1] (binding) of the front cover hinge, and fully open the front cover [2].

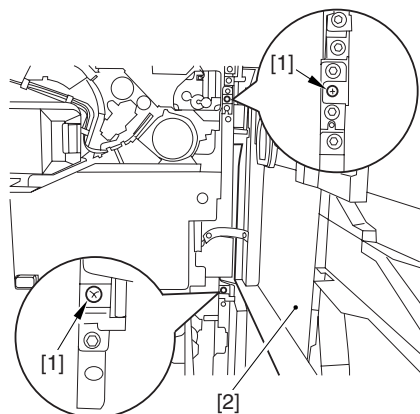


F-7-394

- 9) Close the right deck.

7.11.12.3 Releasing the Hopper Assembly


0003-2501

- 1) Open the black toner supply cover [1].

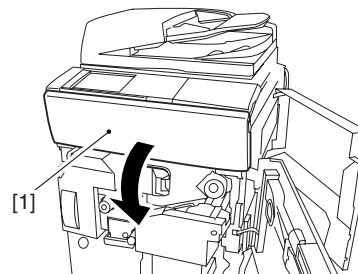


F-7-395

- 2) Shift down the lever [1], and detach the black toner bottle [2].

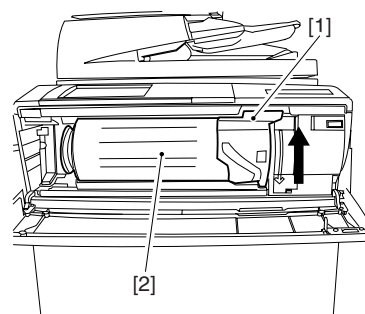


F-7-396

⚠ Once you have released the hopper assembly, toner can spill over the toner bottle supply mouth of the hopper assembly cover. Be sure to wipe off any such toner.

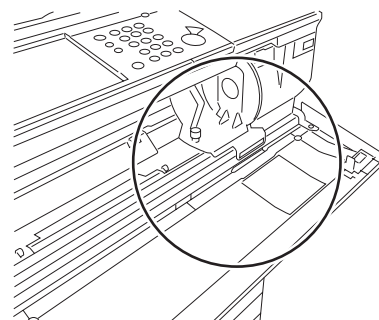


F-7-397

3) Remove the 3 screws [1].

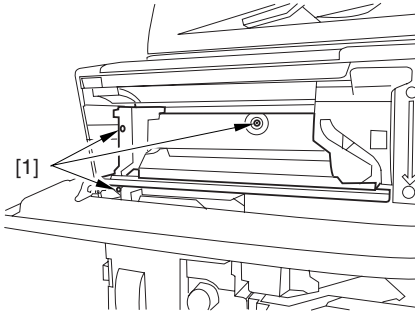

F-7-398

4) Close the black toner supply cover [1]; then, fully open the hopper assembly [2].

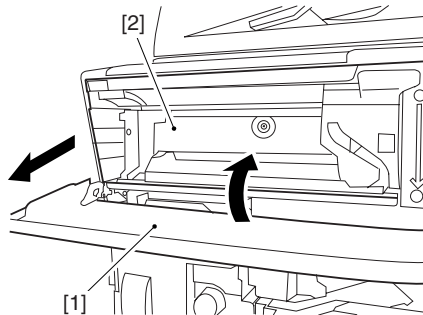


F-7-399

7.11.12.4 Sliding Out the Process Unit


0003-2503

1) Disconnect the 5 connectors [1] found at the upper right.

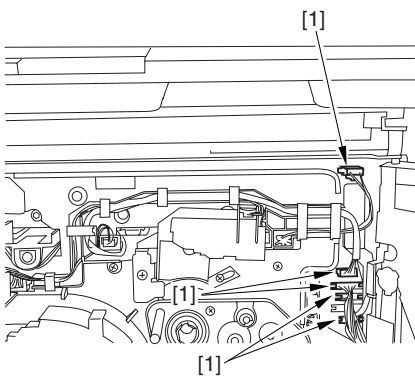


F-7-400

2) Disconnect the 5 connectors [1] found at the upper left.

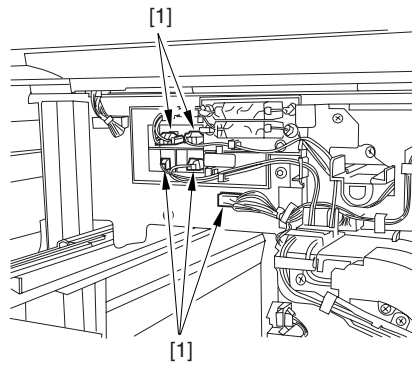


F-7-401

3) After freeing the high-voltage connector cable [1] from the 2 wire saddles [2], fix the cable in place using the cable hook [3].

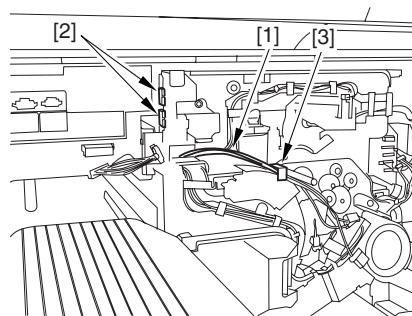

F-7-402

4) Take out the process unit cover [1] from the shipping box, and detach the drum stop tool [2] from the back of the cover.

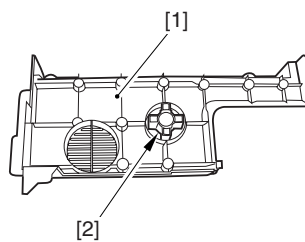


F-7-403

5) While forcing the drum stop tool [3] against the drum fixing member [2] of the drum shift [1], remove the fixing screw [4].



1: Be sure to match the protrusion [5] of the drum fixing member and the protrusion [6] of the drum stop tool.

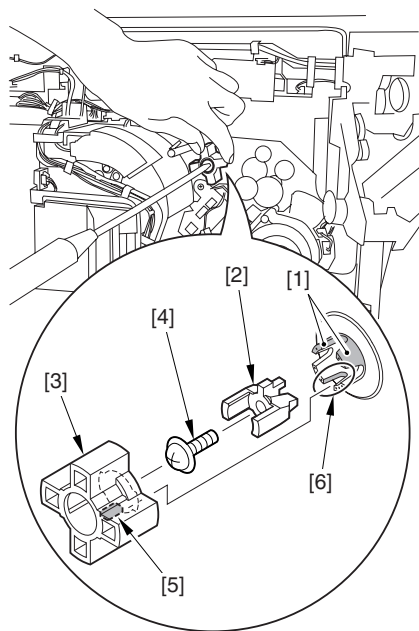


F-7-404

2: When drawing out the process unit, be sure to find out the position of the protrusion [1] of the drum fixing member in relation to the marking [2] on the drum flange.

In the example in the figure, the marking [2] on the drum flange is at "." on the left and at ".." on the right in relation to the protrusion [2] of the drum fixing member.


Moreover, when you close the process unit, it is important that the spatial relationship between the protrusion of the drum fixing member and the marking on the drum flange is as it was before you drew out the unit.

6) Using a pair of fine pliers, remove the drum fixing member [1].

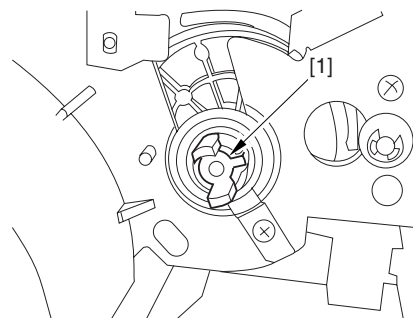


F-7-405

7) Remove the 3 binding screws (M4x8) [1].

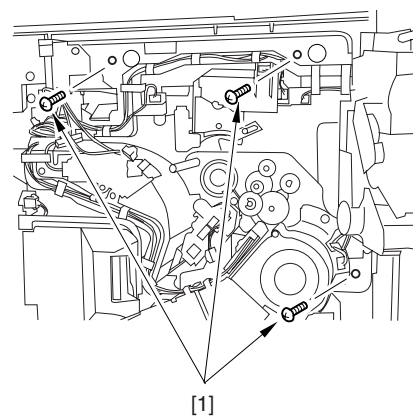


F-7-406

8) Shift down the fixing/feeding assembly releasing lever [1] in the direction of the arrow.

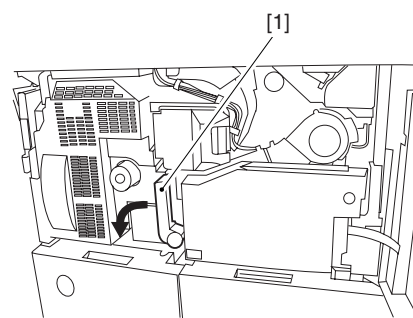


F-7-407

9) Slide out the fixing/feeding assembly [1] toward the front.

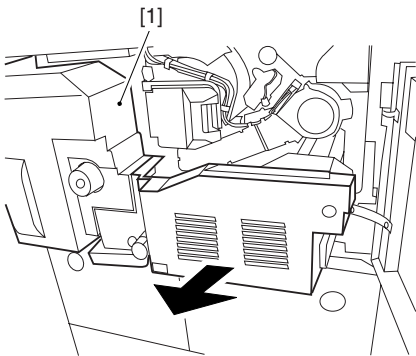


F-7-408

10) While pushing on the 2 hooks [1] found on both sides of the fixing/feeding assembly, fully slide out the fixing/feeding assembly [2].

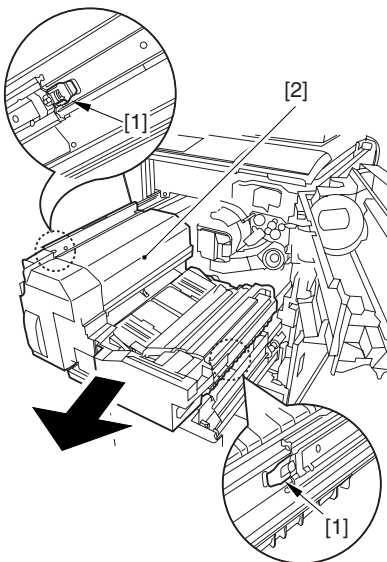

F-7-409


11) Slightly lift both ends [1] of the process unit, and fully slide out the process unit [2].

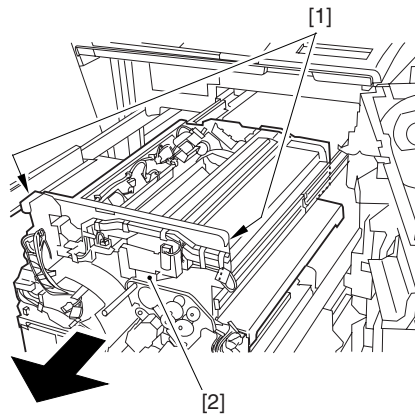


F-7-410

When you have slid out the process unit, check to see if any of the following parts is soiled with toner before fitting it back in; if soiled, dry wipe the part:

- entire surface of the deck top panel [1]
- front bend of the deck top panel [2]
- lower rear sheet (4 locations) of the fixing/feeding assembly [3].

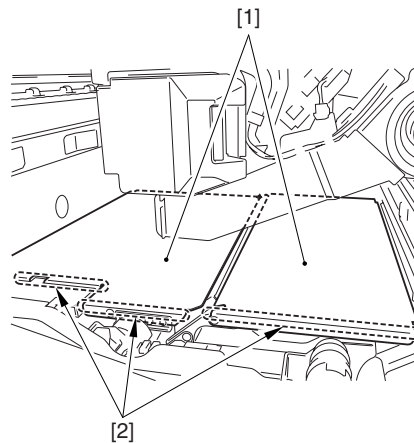

F-7-411

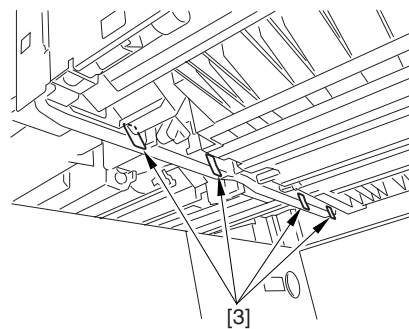


F-7-412

7.11.12.5 Removing the Primary

Charging Assembly

0004-6632

- 1) Disconnect the connector [1].
- 2) Loosen the screw [2], and slide the primary charging assembly stopper [3] in the direction of the arrow; then, tighten the screw [2].
- 3) Detach the primary charging assembly [4] from the machine.

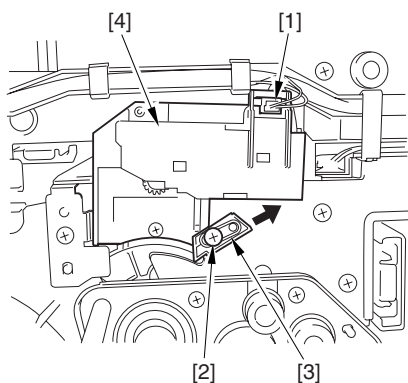


F-7-413

7.11.12.6 Removing the Photosensitive

Drum Cleaning Unit


0003-2499

- 1) Open the 2 cable clamps [1], and lead the harness [2] through the opening [3] in the process unit.

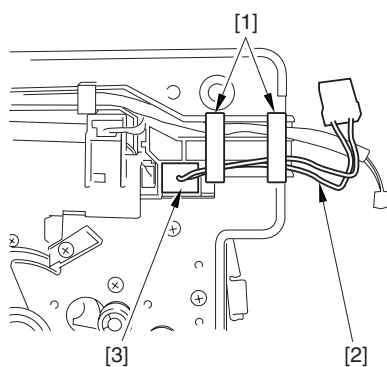


F-7-414

- 2) Open the 8 cable clamps [1], and move the harness [2] out of the way.

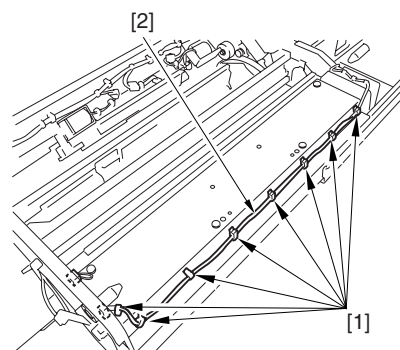


F-7-415

- 3) Disconnect the connector [1].

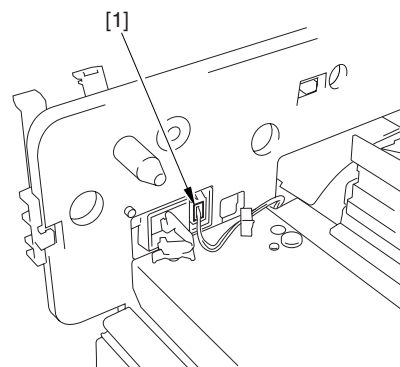

F-7-416

- 4) Remove the 4 screws [1], and detach the photosensitive drum cleaning unit [2].

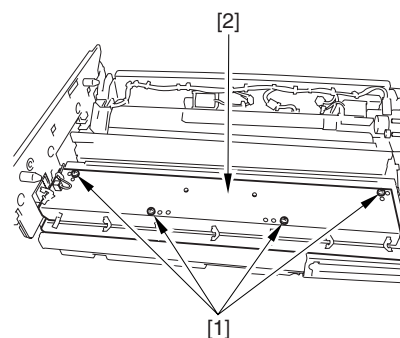


F-7-417

7.11.12.7 Removing the Photosensitive


Drum Cleaning Blade 0002-6256

1) Remove the E-ring [1], and detach the locking spring [2].

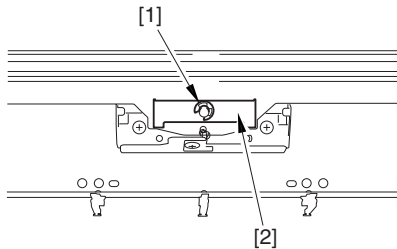

F-7-418

2) Remove the 5 screws [1], and detach the photosensitive drum cleaning blade.

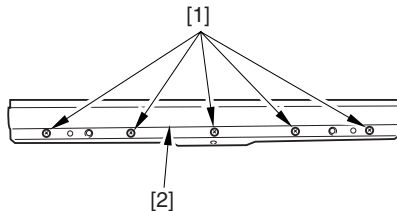

F-7-419


7.11.12.8 Points to Note When Replacing the Photosensitive Drum Cleaning Blade

Drum Cleaning Blade 0002-6258

Be sure of the following when mounting the photosensitive drum cleaning blade:


1. Do not turn over the cleaning blade. Replace it when one side has been used.
2. Clean the area [1] of the retainer plate coming into contact with the cleaning blade and the blade plate [2] using alcohol; then, dry wipe it to remove any toner.

⚠ The fine particle of toner under the blade edge can put the blade out of alignment, allowing toner on the photosensitive drum to remain on the drum in the form of residual toner.

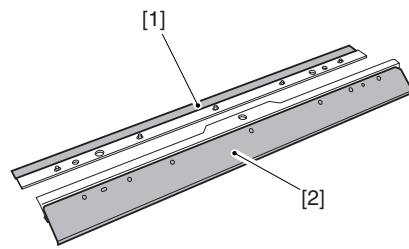


F-7-420

3. Be sure to mount the cleaning blade [1] so that the lot No. [2] faces the front and is upright.

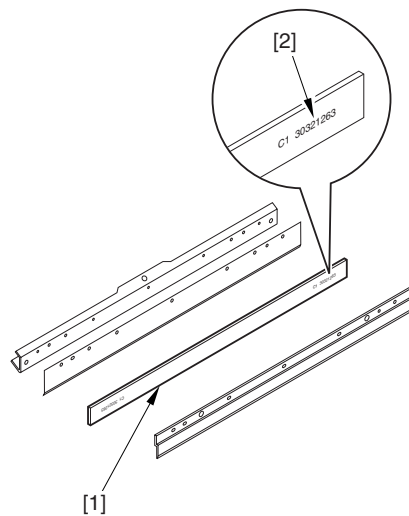


F-7-421

4. Be sure to force the cleaning blade [1] firmly against the retaining plate [2], and check to make sure that there is no gap in the area [3] indicated in the figure.

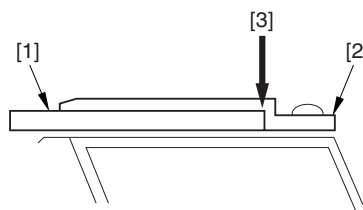


F-7-422

5. Be sure to tighten the screws [1] on the cleaning blade in the order indicated in the figure.

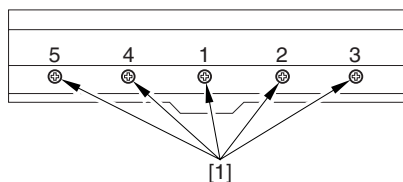

F-7-423

6. Apply blade lubricant (TKN-0480) along the edge (shaded; coming into contact with the photosensitive drum) of the cleaning blade.

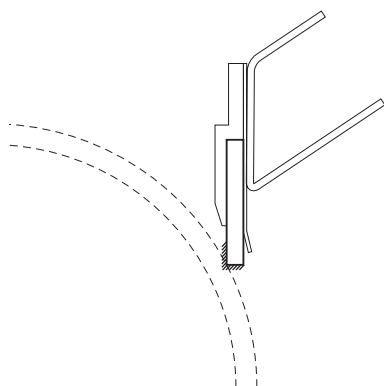

F-7-424

⚠ When you have replaced the photosensitive drum cleaning blade, be sure to execute the following service mode item.

Be sure that you execute service mode immediately after the control panel screen has appeared after turning on the main switch. :


COPIER>FUNCTION>MISC-P>ITR-ROT.

7.11.13 Photosensitive Drum Cleaner Edge Scraper

7.11.13.1 Removing the Right

Cover (upper) 0004-1090

1) Remove the 2 screws [1], and detach the right cover (upper) [2].

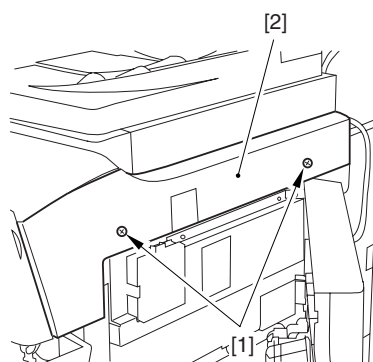


F-7-425

7.11.13.2 Releasing the Front

Cover


0004-1092

1) Open the front cover.
2) While pulling on the grip [1], fully open the manual feed cover [2] to the front.

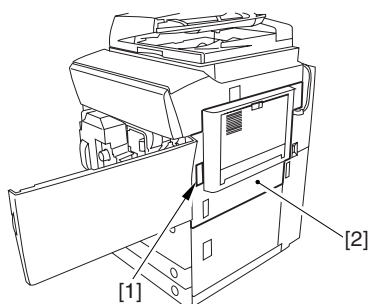


F-7-426

⚠ If a side paper deck exists, remove the 2 screws [1] and the latch plate (front)

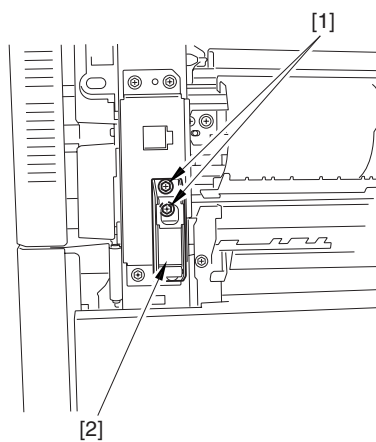


F-7-427

- 3) Slide out the fixing/feeding assembly
- 4) Remove the 2 screws [1], and detach the process unit cover [2].

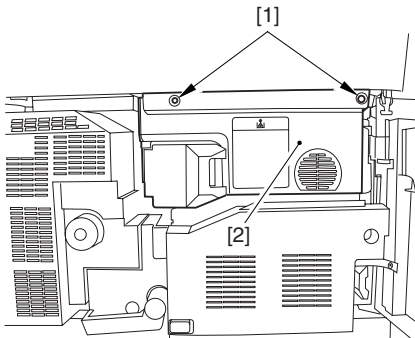


F-7-428

- 5) Push in the fixing/feeding assembly, and set the lever in place.
- 6) Push the release button [1] of the right deck, and slide out the right deck [2].

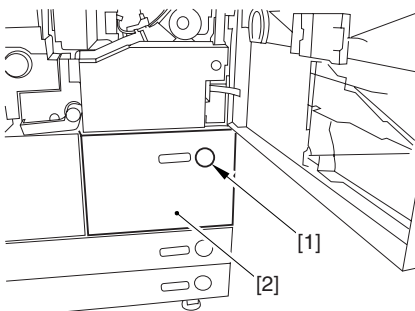


F-7-429

- 7) Remove the screw [1] from lower right, and detach the front cover strap [2].

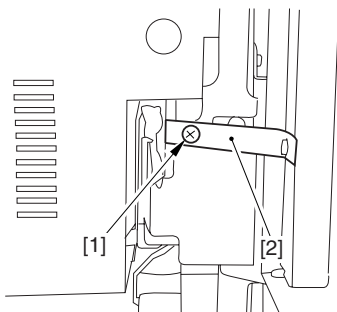

F-7-430

- 8) Remove the 2 screws [1] (binding) of the front cover hinge, and fully open the front cover [2].

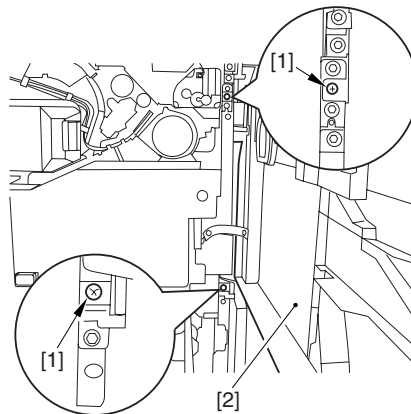


F-7-431

- 9) Close the right deck.

7.11.13.3 Releasing the Hopper Assembly


0004-1091

- 1) Open the black toner supply cover [1].

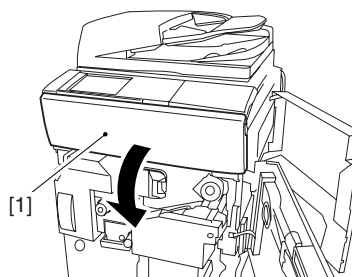


F-7-432

- 2) Shift down the lever [1], and detach the black toner bottle [2].

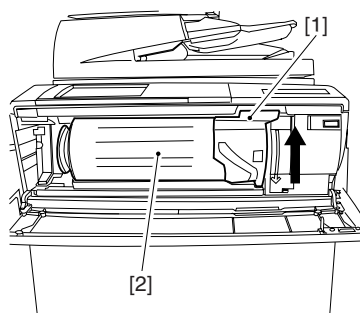


F-7-433

⚠ Once you have released the hopper assembly, toner can spill over the toner bottle supply mouth of the hopper assembly cover. Be sure to wipe off any such toner.

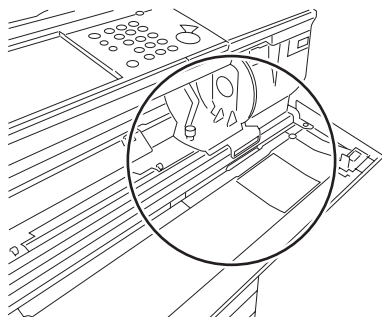


F-7-434

3) Remove the 3 screws [1].

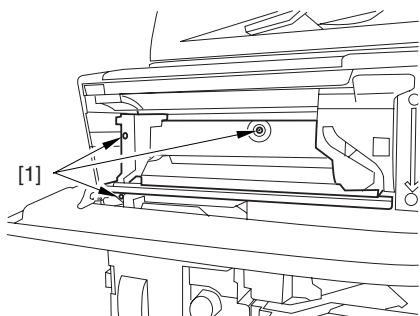

F-7-435

4) Close the black toner supply cover [1]; then, fully open the hopper assembly [2].

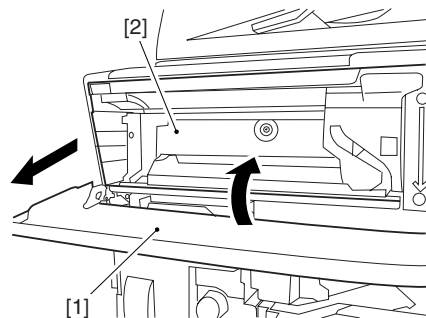


F-7-436

7.11.13.4 Sliding Out the Process Unit


0004-1093

1) Disconnect the 5 connectors [1] found at the upper right.

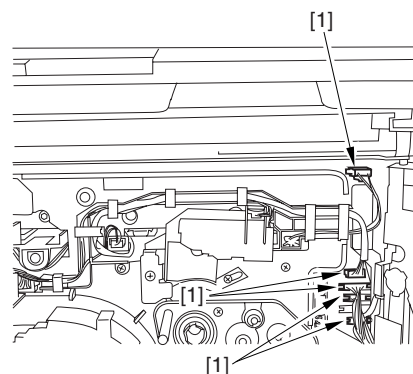


F-7-437

2) Disconnect the 5 connectors [1] found at the upper left.

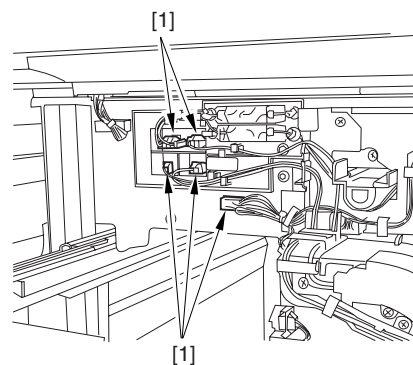


F-7-438

3) After freeing the high-voltage connector cable [1] from the 2 wire saddles [2], fix the cable in place using the cable hook [3].

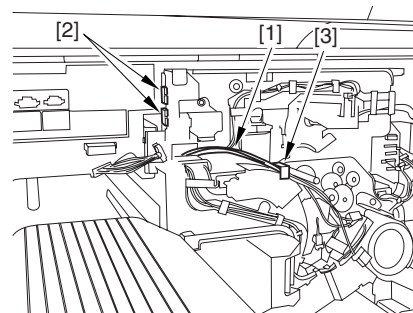

F-7-439

4) Take out the process unit cover [1] from the shipping box, and detach the drum stop tool [2] from the back of the cover.

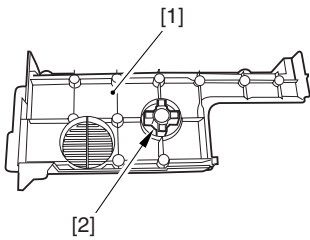


F-7-440

5) While forcing the drum stop tool [3] against the drum fixing member [2] of the drum shift [1], remove the fixing screw [4].



1: Be sure to match the protrusion [5] of the drum fixing member and the protrusion [6] of the drum stop tool.

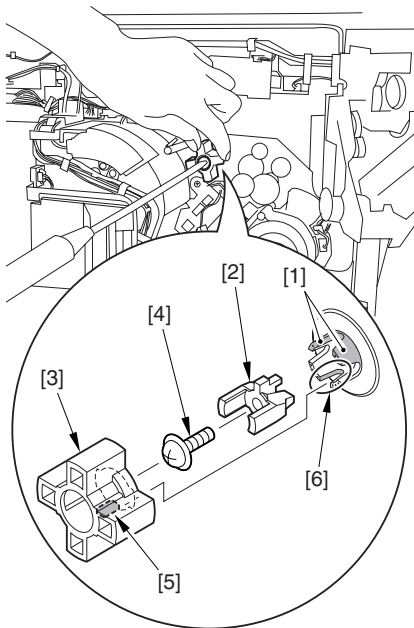


F-7-441

2: When drawing out the process unit, be sure to find out the position of the protrusion [1] of the drum fixing member in relation to the marking [2] on the drum flange.

In the example in the figure, the marking [2] on the drum flange is at "." on the left and at ".." on the right in relation to the protrusion [2] of the drum fixing member.


Moreover, when you close the process unit, it is important that the spatial relationship between the protrusion of the drum fixing member and the marking on the drum flange is as it was before you drew out the unit.

6) Using a pair of fine pliers, remove the drum fixing member [1].

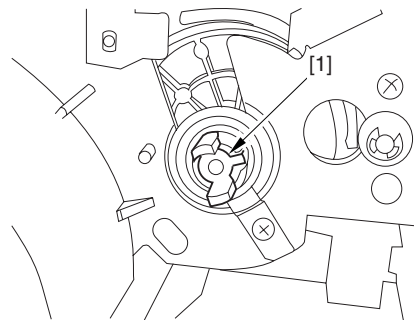


F-7-442

7) Remove the 3 binding screws (M4x8) [1].

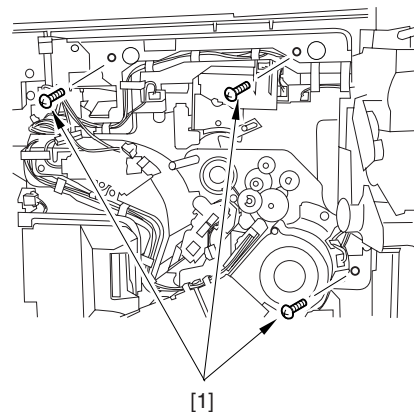


F-7-443

8) Shift down the fixing/feeding assembly releasing lever [1] in the direction of the arrow.

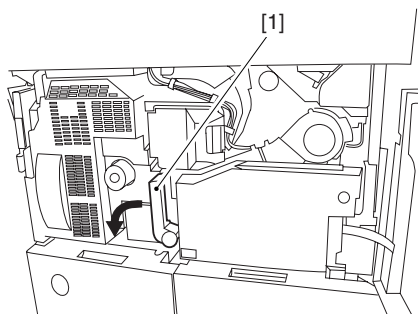


F-7-444

9) Slide out the fixing/feeding assembly [1] toward the front.

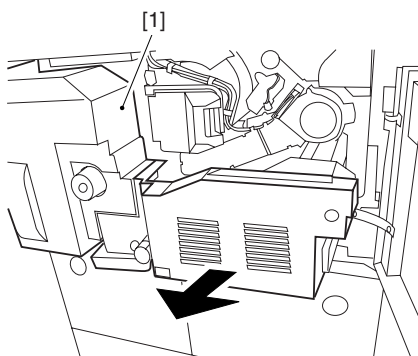


F-7-445

10) While pushing on the 2 hooks [1] found on both sides of the fixing/feeding assembly, fully slide out the fixing/feeding assembly [2].

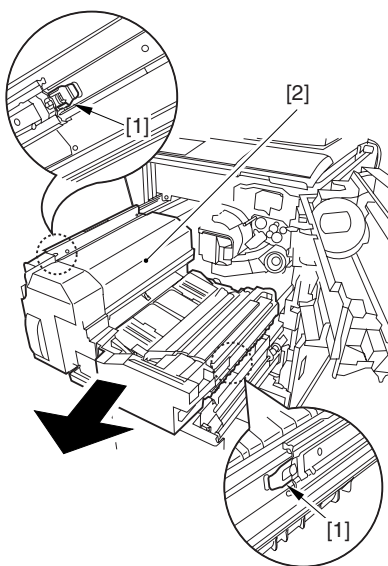

F-7-446


11) Slightly lift both ends [1] of the process unit, and fully slide out the process unit [2].

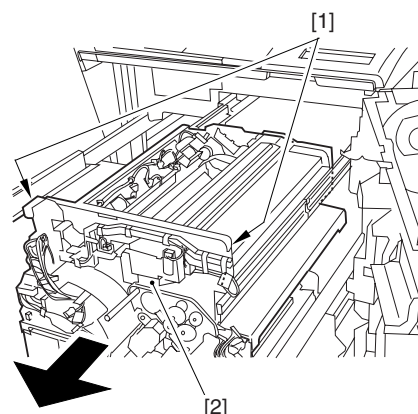


F-7-447

When you have slid out the process unit, check to see if any of the following parts is soiled with toner before fitting it back in; if soiled, dry wipe the part:

- entire surface of the deck top panel [1]
- front bend of the deck top panel [2]
- lower rear sheet (4 locations) of the fixing/feeding assembly [3].

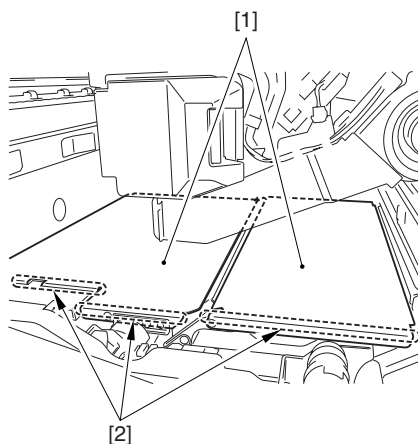


F-7-448

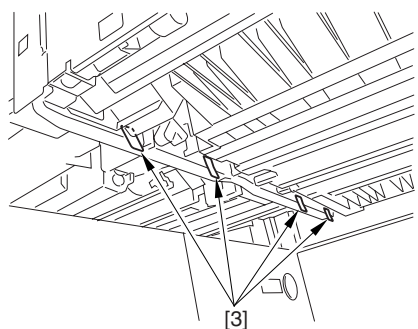

F-7-449

7.11.13.5 Removing the Primary Charging Assembly 0004-6633


- 1) Disconnect the connector [1].
- 2) Loosen the screw [2], and slide the primary charging assembly stopper [3] in the direction of the arrow; then, tighten the screw [2].
- 3) Detach the primary charging assembly [4] from the machine.

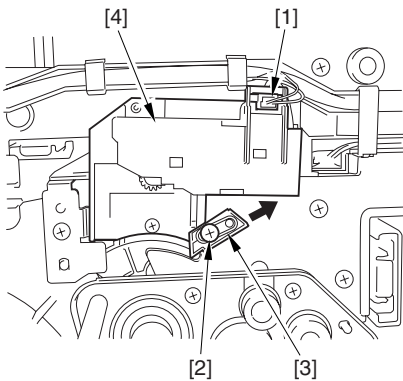

F-7-450


7.11.13.6 Removing the Photosensitive Drum Cleaning Unit 0004-1094

- 1) Open the 2 cable clamps [1], and lead the harness [2] through the opening [3] in the process unit.

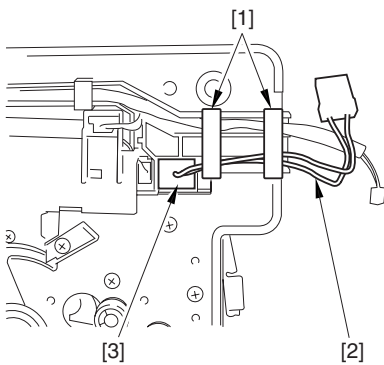


F-7-451

- 2) Open the 8 cable clamps [1], and move the harness [2] out of the way.

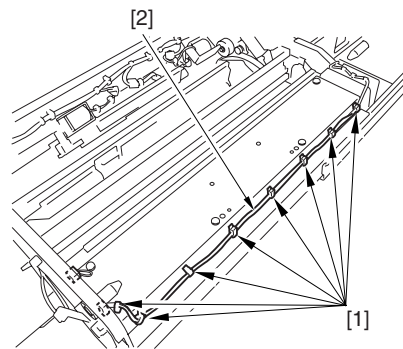


F-7-452

- 3) Disconnect the connector [1].

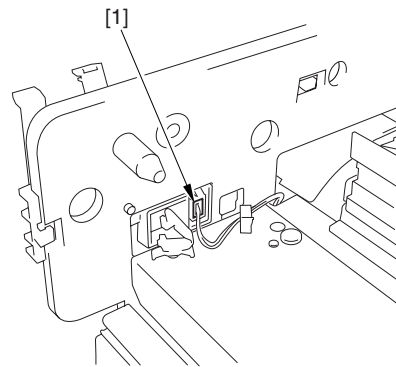

F-7-453

- 4) Remove the 4 screws [1], and detach the photosensitive drum cleaning unit [2].

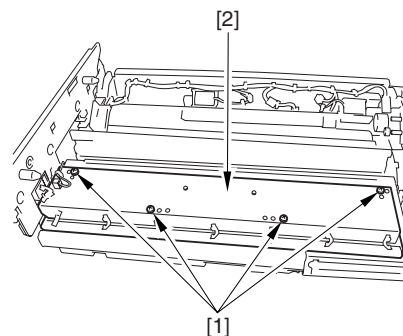


F-7-454

7.11.13.7 Removing the Photosensitive Drum Cleaner End Scraper

0004-1089

- 1) Detach the double-sided adhesive tape (2 strips) of the end scraper [2].

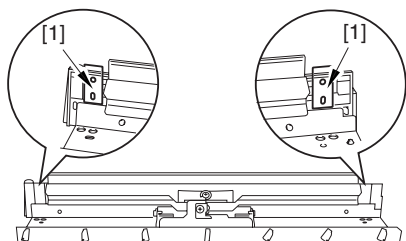

F-7-455


- ⚠ Points to Note When Mounting the End Scraper**
Be sure to clean the surface from which the double-sided tape has been removed with alcohol so that it is free of adhesive.

7.11.14 Hopper Assembly

7.11.14.1 Removing the Right Cover (upper)

0003-8253

- 1) Remove the 2 screws [1], and detach the right cover (upper) [2].

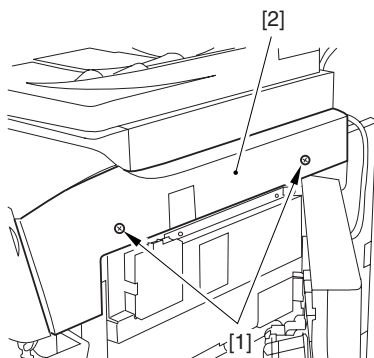


F-7-456

7.11.14.2 Releasing the Front Cover


0003-2466

- 1) Open the front cover.
- 2) While pulling on the grip [1], fully open the manual feed cover [2] to the front.

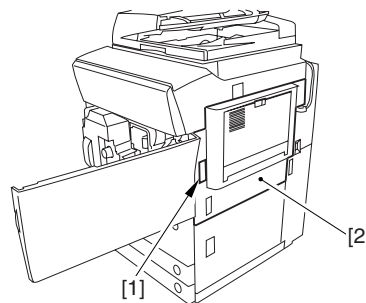


F-7-457

- ⚠ If a side paper deck exists, remove the 2 screws [1] and the latch plate (front)**

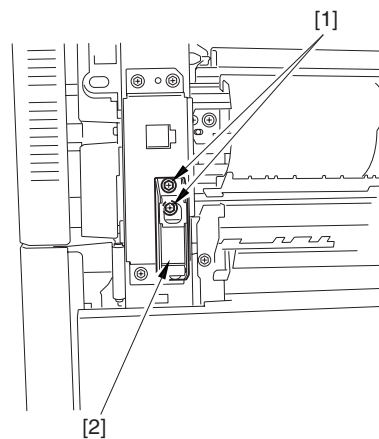


F-7-458

- 3) Slide out the fixing/feeding assembly
- 4) Remove the 2 screws [1], and detach the process unit cover [2].

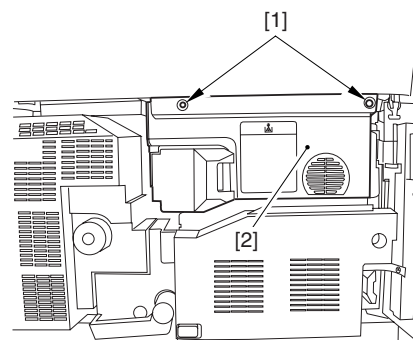


F-7-459

- 5) Push in the fixing/feeding assembly, and set the lever in place.
- 6) Push the release button [1] of the right deck, and slide out the right deck [2].

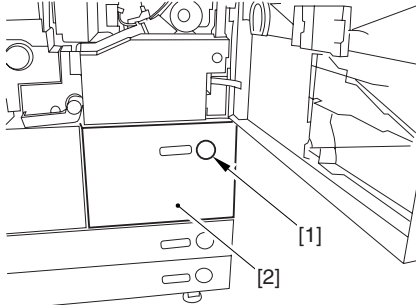


F-7-460

- 7) Remove the screw [1] from lower right, and detach the front cover strap [2].

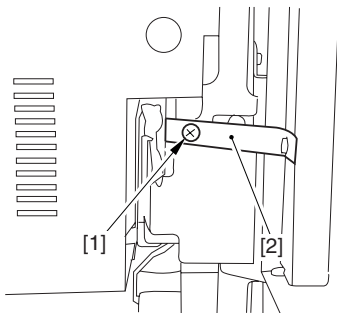

F-7-461

- 8) Remove the 2 screws [1] (binding) of the front cover hinge, and fully open the front cover [2].

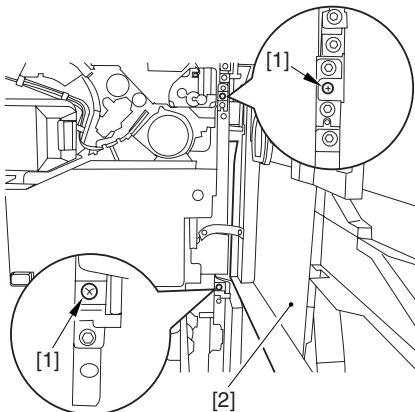


F-7-462

- 9) Close the right deck.

7.11.14.3 Releasing the Hopper Assembly


0003-0967

- 1) Open the black toner supply cover [1].

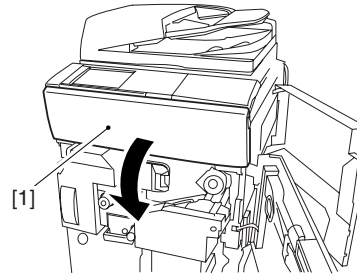


F-7-463

- 2) Shift down the lever [1], and detach the black toner bottle [2].

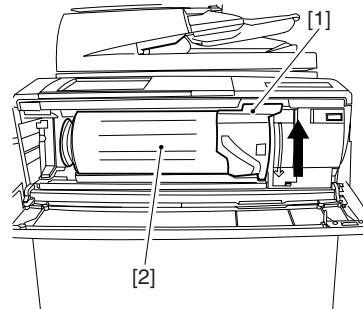


F-7-464

⚠ Once you have released the hopper assembly, toner can spill over the toner bottle supply mouth of the hopper assembly cover. Be sure to wipe off any such toner.

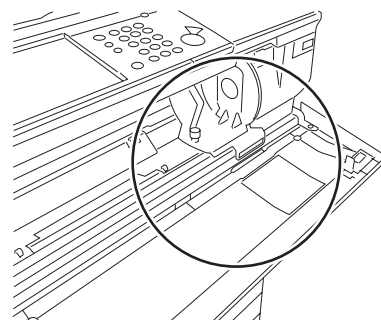

F-7-465


3) Remove the 3 screws [1].

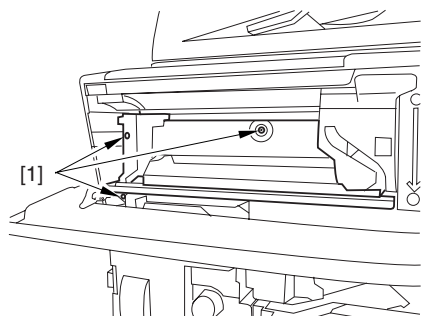

F-7-466


2) Close the hopper assembly.

3) Remove the E-ring [1].

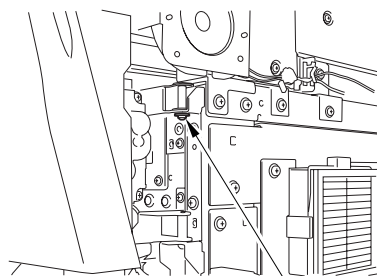

F-7-469

4) Close the black toner supply cover [1]; then, fully open the hopper assembly [2].

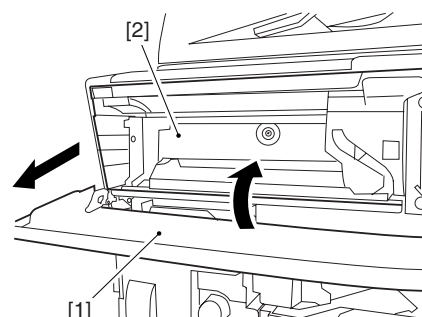

F-7-467

4) Open the hopper assembly, and lift it to detach.


7.11.15 Hopper Supply Motor

7.11.15.1 Removing the Right

Cover (upper)

0003-8254

1) Remove the 2 screws [1], and detach the right cover (upper) [2].

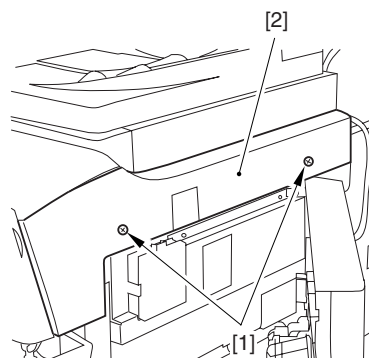


F-7-470

7.11.14.4 Removing the Hopper Assembly

0002-6266

1) Disconnect the connector [1], and pick and detach the wire saddle [2].

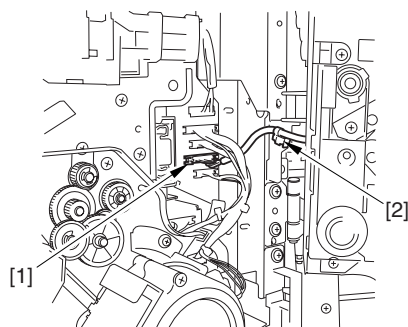


F-7-468

7.11.15.2 Releasing the Front Cover


0003-2470

- 1) Open the front cover.
- 2) While pulling on the grip [1], fully open the manual feed cover [2] to the front.

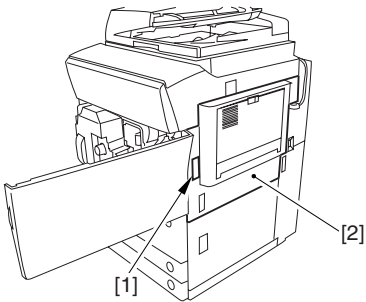


F-7-471

⚠ If a side paper deck exists, remove the 2 screws [1] and the latch plate (front)

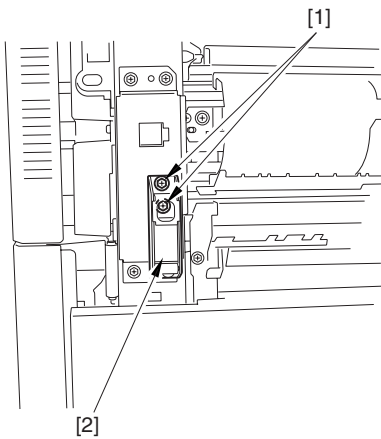


F-7-472

- 3) Slide out the fixing/feeding assembly
- 4) Remove the 2 screws [1], and detach the process unit cover [2].

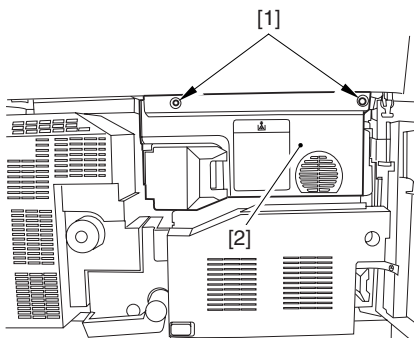


F-7-473

- 5) Push in the fixing/feeding assembly, and set the lever in place.
- 6) Push the release button [1] of the right deck, and slide out the right deck [2].

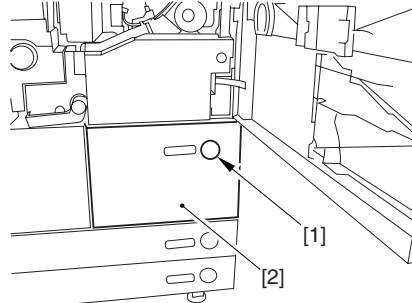


F-7-474

- 7) Remove the screw [1] from lower right, and detach the front cover strap [2].

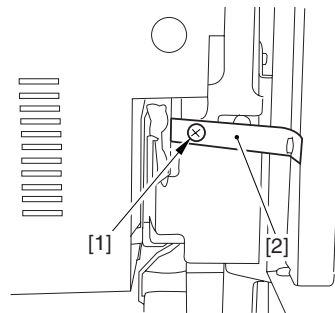

F-7-475

- 8) Remove the 2 screws [1] (binding) of the front cover hinge, and fully open the front cover [2].

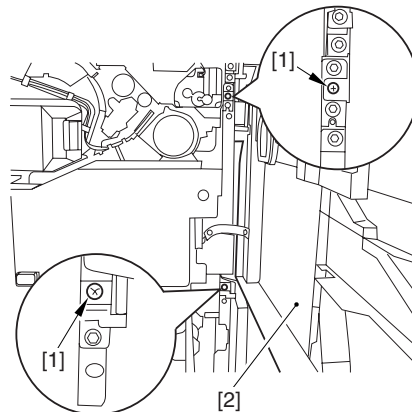

F-7-476


- 9) Close the right deck.

7.11.15.3 Releasing the Hopper

Assembly


0003-2471

- 1) Open the black toner supply cover [1].

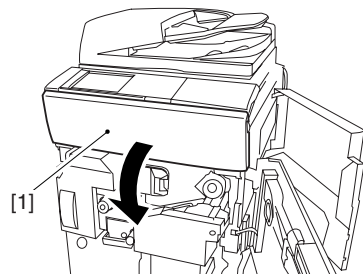


F-7-477

- 2) Shift down the lever [1], and detach the black toner bottle [2].

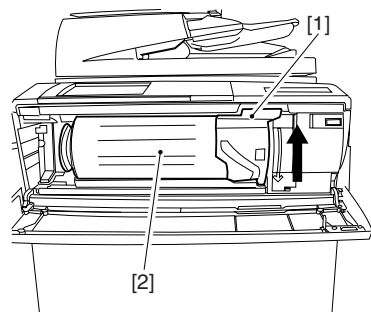


F-7-478

⚠ Once you have released the hopper assembly, toner can spill over the toner bottle supply mouth of the hopper assembly cover. Be sure to wipe off any such toner.

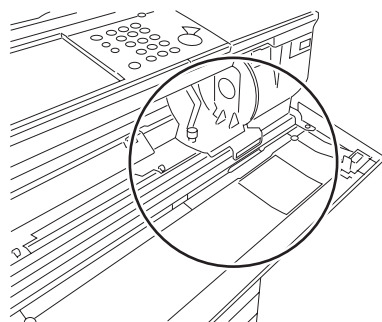


F-7-479

- 3) Remove the 3 screws [1].

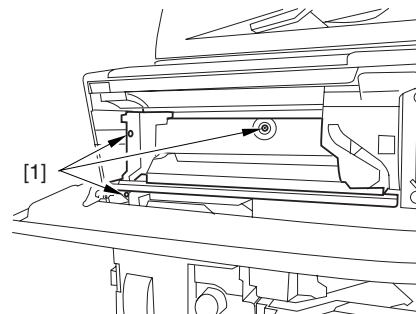

F-7-480

- 4) Close the black toner supply cover [1]; then, fully open the hopper assembly [2].

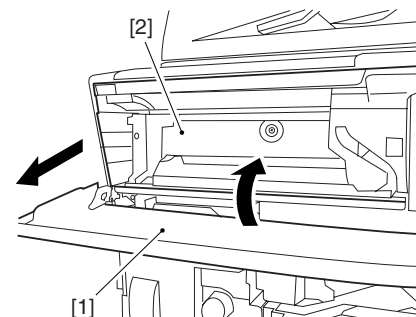


F-7-481

7.11.15.4 Removing the hopper

Assembly


0003-2472

- 1) Disconnect the connector [1], and pick and detach the wire saddle [2].

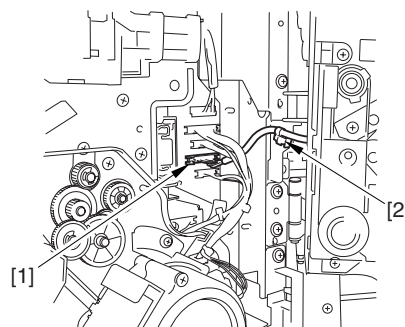

F-7-482

- 2) Close the hopper assembly.
- 3) Remove the E-ring [1].

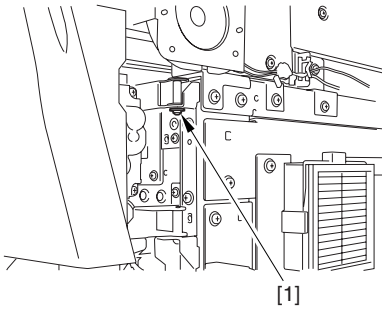

F-7-483


- 4) Open the hopper assembly, and lift it to detach.

7.11.15.5 Removing the Black

Toner Supply Motor


0002-6268

- 1) Open the black toner supply cover [1]; then, remove the 2 screws [2], and detach the hopper inside cover [3].

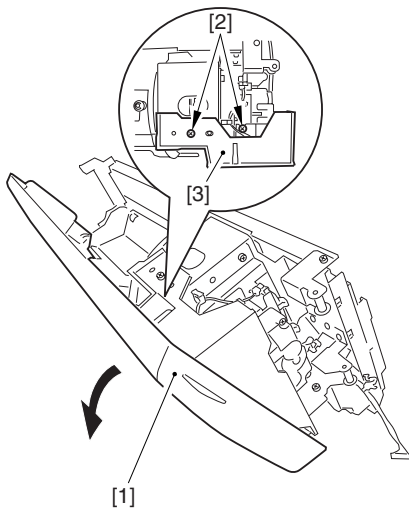

F-7-484

- 2) Remove the 3 screws [1], and disconnect the 2 connectors [1]; then, detach the black toner supply motor [3].

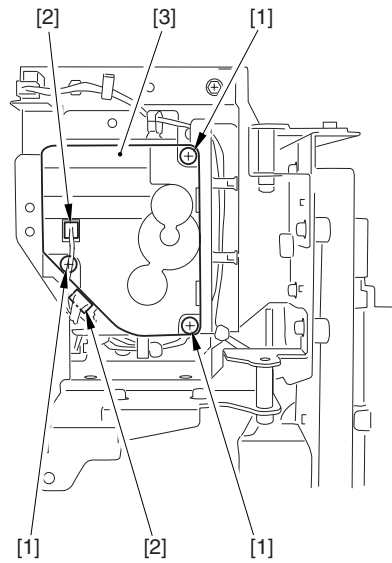

F-7-485


7.11.16 Hopper String Motor

7.11.16.1 Removing the Right

Cover (upper)

0003-8256

- 1) Remove the 2 screws [1], and detach the right cover (upper) [2].

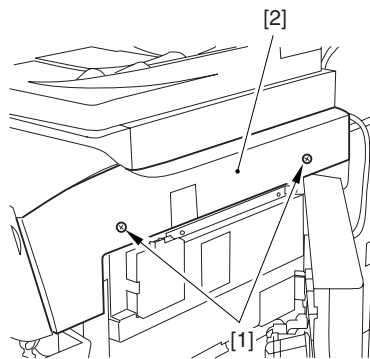


F-7-486

7.11.16.2 Releasing the Front

Cover


0003-2467

- 1) Open the front cover.
- 2) While pulling on the grip [1], fully open the manual feed cover [2] to the front.

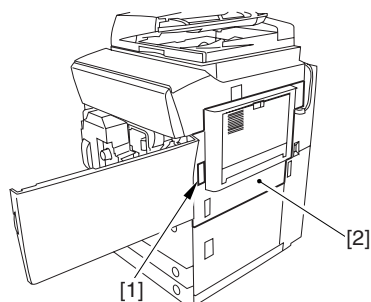


F-7-487

- ⚠** If a side paper deck exists, remove the 2 screws [1] and the latch plate (front)

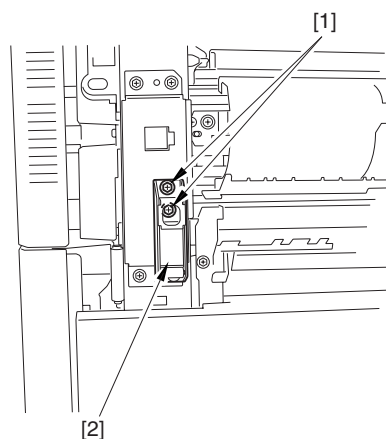


F-7-488

- 3) Slide out the fixing/feeding assembly
- 4) Remove the 2 screws [1], and detach the process unit cover [2].

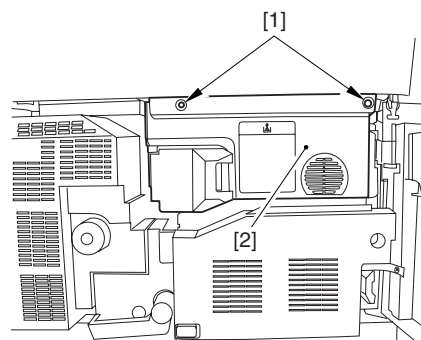


F-7-489

- 5) Push in the fixing/feeding assembly, and set the lever in place.
- 6) Push the release button [1] of the right deck, and slide out the right deck [2].

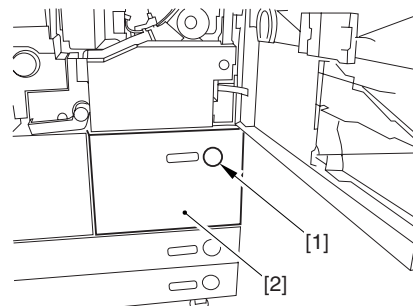


F-7-490

- 7) Remove the screw [1] from lower right, and detach the front cover strap [2].

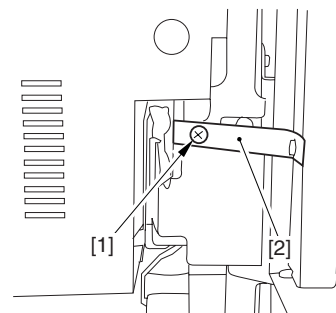

F-7-491

- 8) Remove the 2 screws [1] (binding) of the front cover hinge, and fully open the front cover [2].

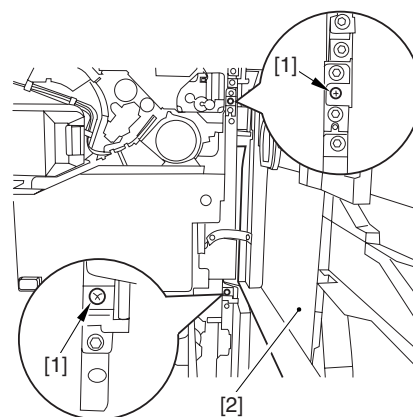

F-7-492


- 9) Close the right deck.

7.11.16.3 Releasing the Hopper

Assembly


0003-2468

1) Open the black toner supply cover [1].

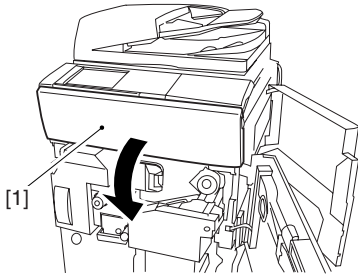


F-7-493

2) Shift down the lever [1], and detach the black toner bottle [2].

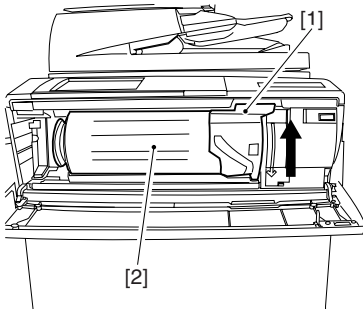


F-7-494

⚠ Once you have released the hopper assembly, toner can spill over the toner bottle supply mouth of the hopper assembly cover. Be sure to wipe off any such toner.

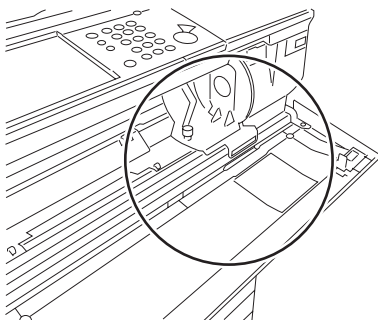


F-7-495

3) Remove the 3 screws [1].

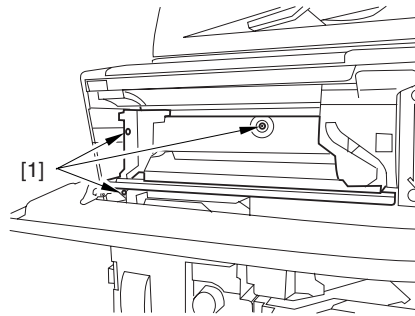

F-7-496

4) Close the black toner supply cover [1]; then, fully open the hopper assembly [2].

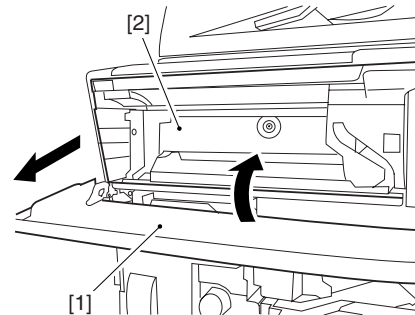


F-7-497

7.11.16.4 Removing the Hopper Assembly


0003-2469

1) Disconnect the connector [1], and pick and detach the wire saddle [2].

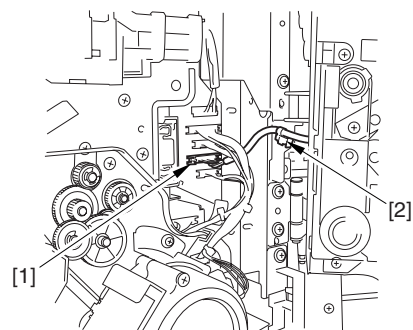

F-7-498

- 2) Close the hopper assembly.
- 3) Remove the E-ring [1].

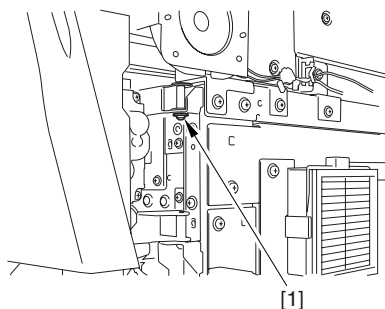


F-7-499

- 4) Open the hopper assembly, and lift it to detach.

7.11.16.5 Removing the Hopper Stirring Motor 0002-6269

- 1) Remove the 3 screws [1], and disconnect the connector [2]; then, detach the hopper stirring motor [3].

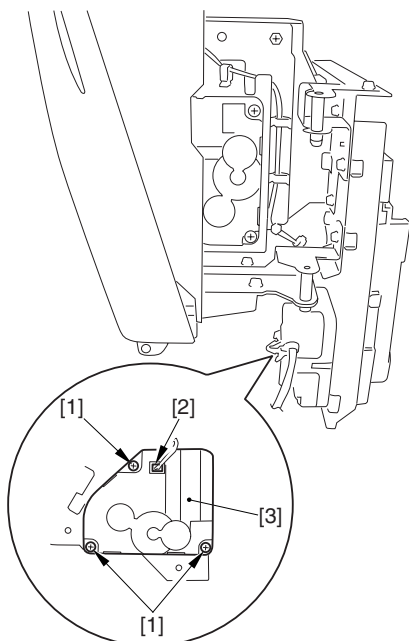

F-7-500


7.11.17 Color Developing Assembly

7.11.17.1 Removing the Right

Cover (upper)

0003-8257

- 1) Remove the 2 screws [1], and detach the right cover (upper) [2].

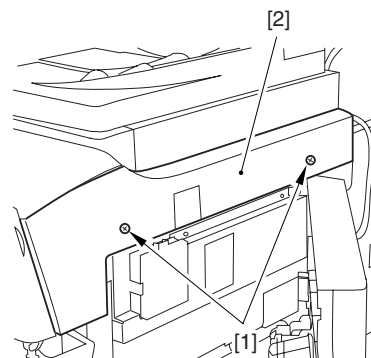


F-7-501

7.11.17.2 Releasing the Front

Cover


0003-2524

- 1) Open the front cover.
- 2) While pulling on the grip [1], fully open the manual feed cover [2] to the front.

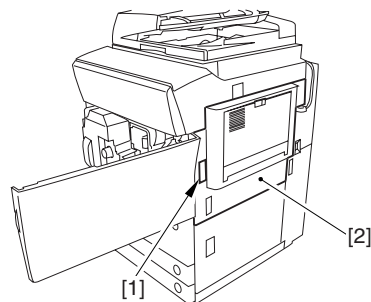


F-7-502

⚠ If a side paper deck exists, remove the 2 screws [1] and the latch plate (front)

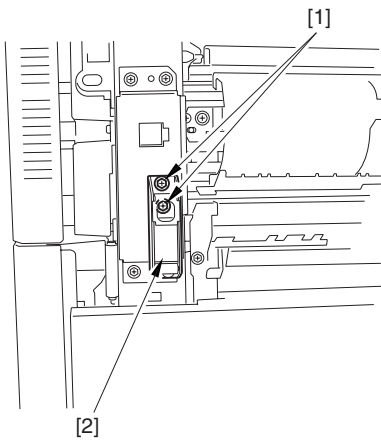


F-7-503

- 3) Slide out the fixing/feeding assembly
- 4) Remove the 2 screws [1], and detach the process unit cover [2].

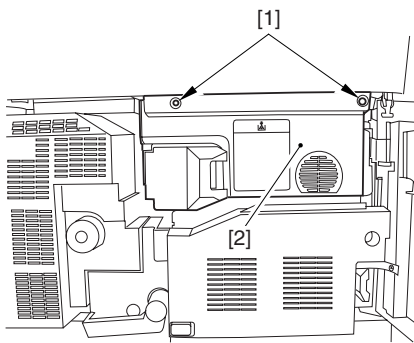


F-7-504

- 5) Push in the fixing/feeding assembly, and set the lever in place.
- 6) Push the release button [1] of the right deck, and slide out the right deck [2].

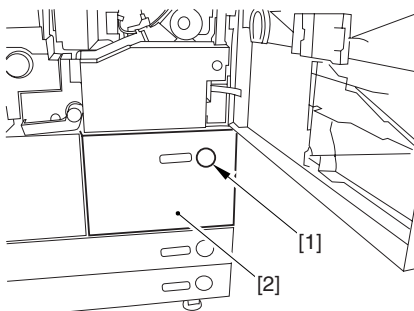


F-7-505

7) Remove the screw [1] from lower right, and detach the front cover strap [2].

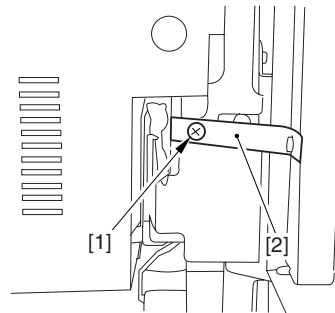

F-7-506

8) Remove the 2 screws [1] (binding) of the front cover hinge, and fully open the front cover [2].

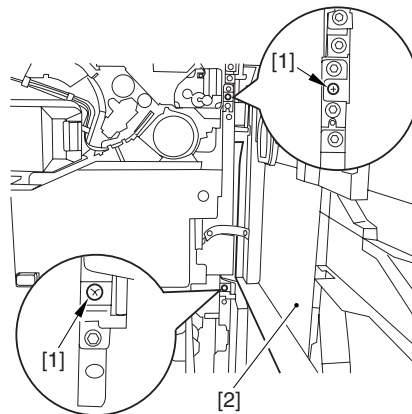


F-7-507

9) Close the right deck.

7.11.17.3 Releasing the Hopper Assembly


0003-2525

1) Open the black toner supply cover [1].

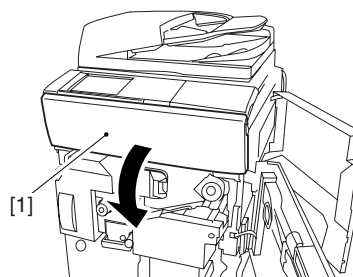


F-7-508

2) Shift down the lever [1], and detach the black toner bottle [2].

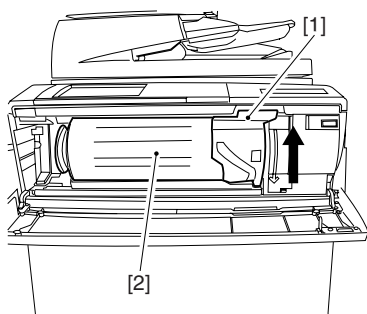


F-7-509

⚠ Once you have released the hopper assembly, toner can spill over the toner bottle supply mouth of the hopper assembly cover. Be sure to wipe off any such toner.

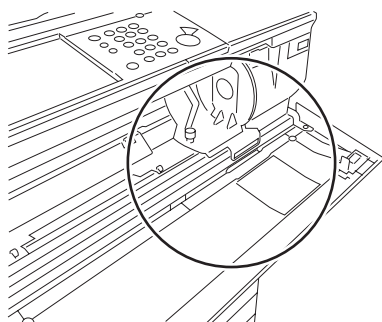


F-7-510

3) Remove the 3 screws [1].

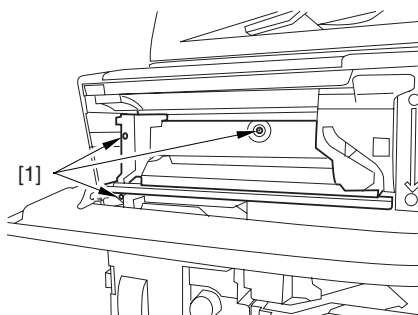

F-7-511

4) Close the black toner supply cover [1]; then, fully open the hopper assembly [2].

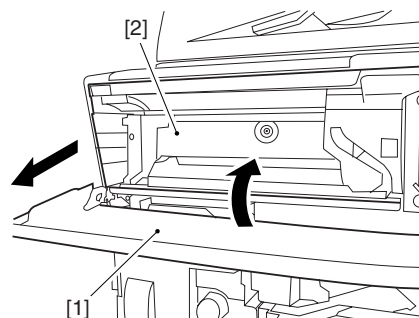


F-7-512

7.11.17.4 Sliding Out the Process Unit


0003-2526

1) Disconnect the 5 connectors [1] found at the upper right.

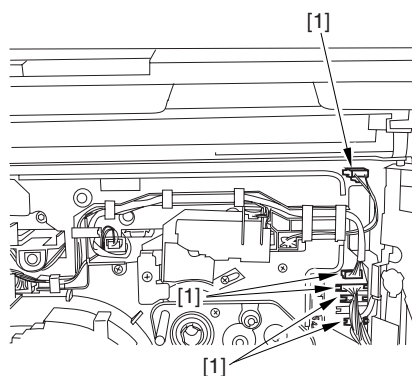


F-7-513

2) Disconnect the 5 connectors [1] found at the upper left.

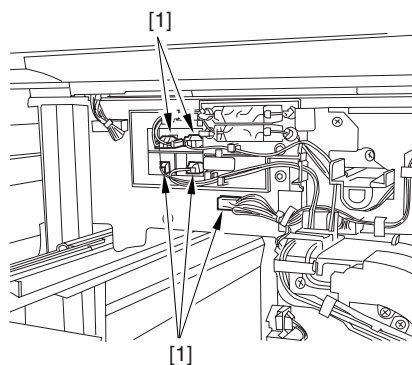


F-7-514

3) After freeing the high-voltage connector cable [1] from the 2 wire saddles [2], fix the cable in place using the cable hook [3].

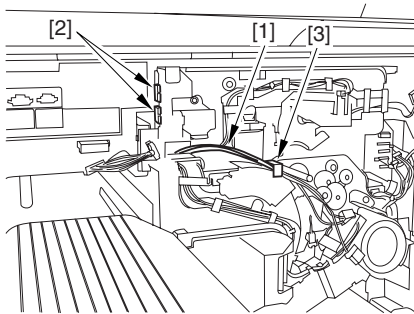

F-7-515

4) Take out the process unit cover [1] from the shipping box, and detach the drum stop tool [2] from the back of the cover.

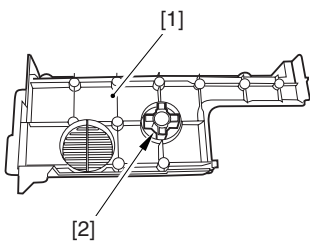


F-7-516

5) While forcing the drum stop tool [3] against the drum fixing member [2] of the drum shift [1], remove the fixing screw [4].



1: Be sure to match the protrusion [5] of the drum fixing member and the protrusion [6] of the drum stop tool.

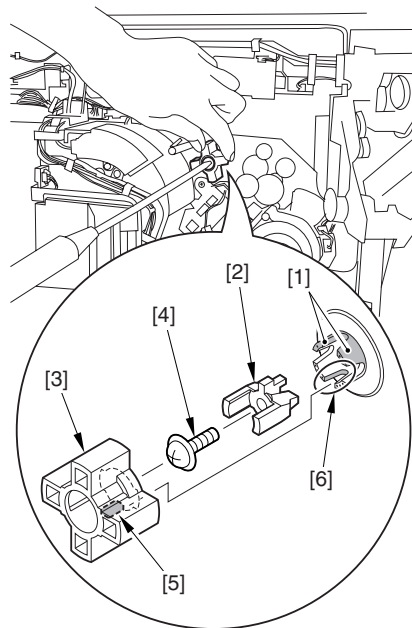


F-7-517

2: When drawing out the process unit, be sure to find out the position of the protrusion [1] of the drum fixing member in relation to the marking [2] on the drum flange.

In the example in the figure, the marking [2] on the drum flange is at "." on the left and at ".." on the right in relation to the protrusion [2] of the drum fixing member.


Moreover, when you close the process unit, it is important that the spatial relationship between the protrusion of the drum fixing member and the marking on the drum flange is as it was before you drew out the unit.

6) Using a pair of fine pliers, remove the drum fixing member [1].

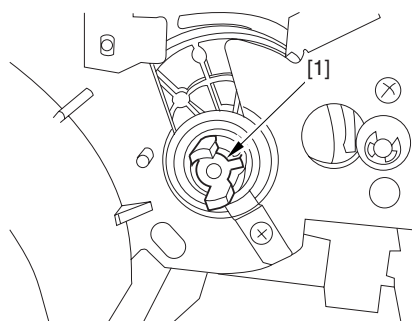


F-7-518

7) Remove the 3 binding screws (M4x8) [1].

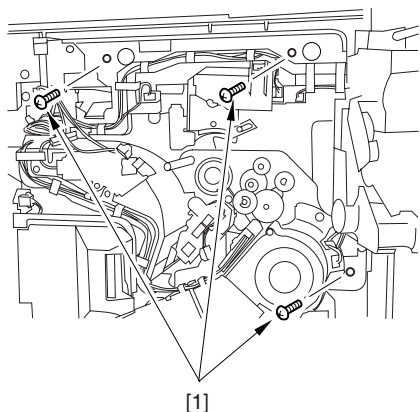


F-7-519

8) Shift down the fixing/feeding assembly releasing lever [1] in the direction of the arrow.

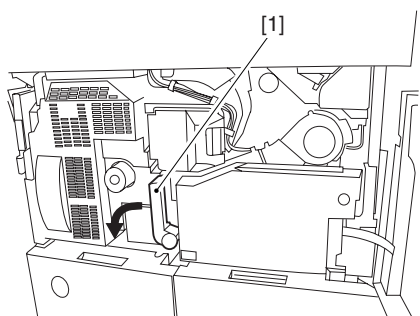


F-7-520

9) Slide out the fixing/feeding assembly [1] toward the front.

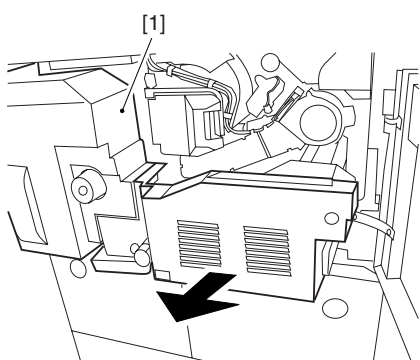


F-7-521

10) While pushing on the 2 hooks [1] found on both sides of the fixing/feeding assembly, fully slide out the fixing/feeding assembly [2].

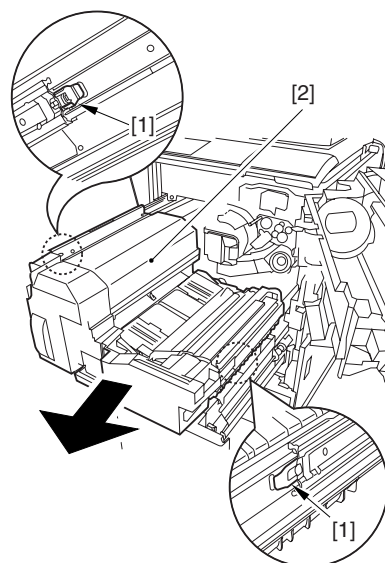

F-7-522


11) Slightly lift both ends [1] of the process unit, and fully slide out the process unit [2].

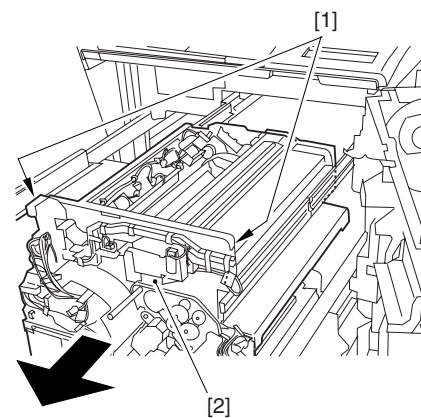


F-7-523

When you have slid out the process unit, check to see if any of the following parts is soiled with toner before fitting it back in; if soiled, dry wipe the part:

- entire surface of the deck top panel [1]
- front bend of the deck top panel [2]
- lower rear sheet (4 locations) of the fixing/feeding assembly [3].

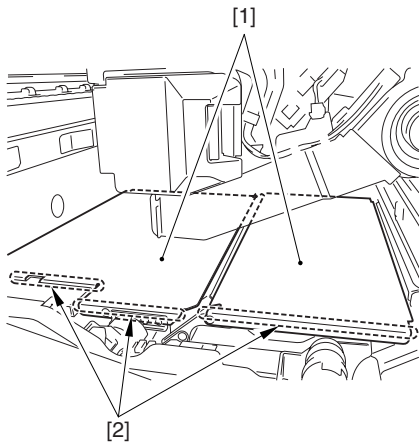

F-7-524

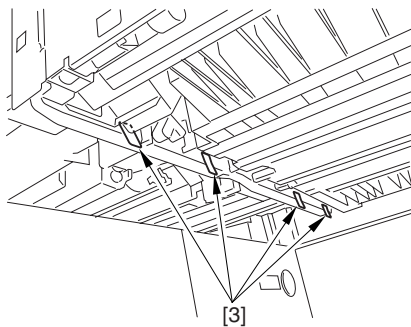

F-7-525

7.11.17.5 Removing the Black Developing Unit


0003-2522

⚠ Points to Note About the Work

1 The machine's developing unit is not equipped with a developing cylinder protection cover. Take full care, therefore, not to damage the developing cylinder when you have detached the developing unit.


The waste toner collecting inside the machine can move into the fixing/feeding assembly through the outlet; be sure to place paper under the process unit for the work.

2. The machine's black developing unit is equipped with a potential sensor. Do not touch the sensor window [1] indicated in the figure. Moreover, take care not to drop the black developing assembly or otherwise subject it to impact so as to avoid damage to the potential sensor.

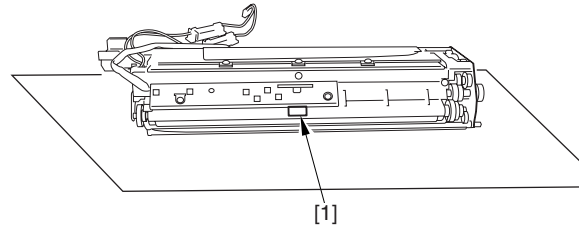


F-7-526

1) Open the harness guide used to fix the high-voltage cable [1] in place.

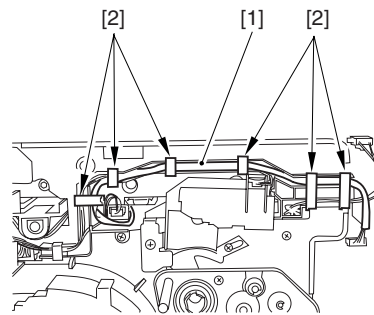


F-7-527

2) Remove the screw [2], and detach the black developing assembly locking plate [1].

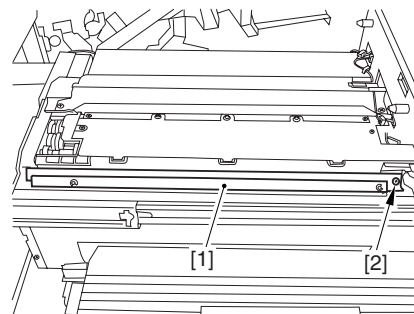


F-7-528

3) Remove the 2 screws [2], and detach the black developing assembly joint plate [1].

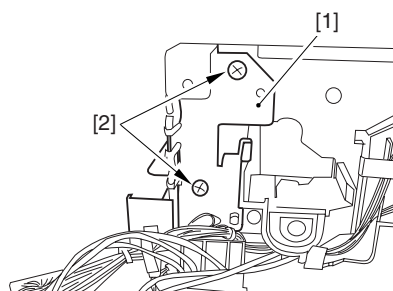


F-7-529

4) Disconnect the connector [1].

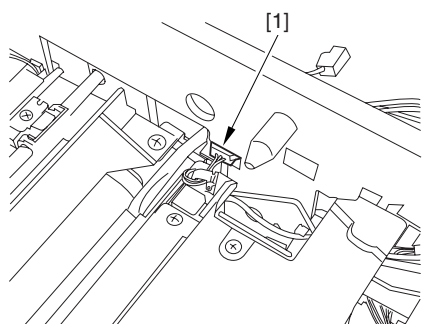

F-7-530

5) Push in the high-voltage cable [1] through the opening [2] indicated in the figure.

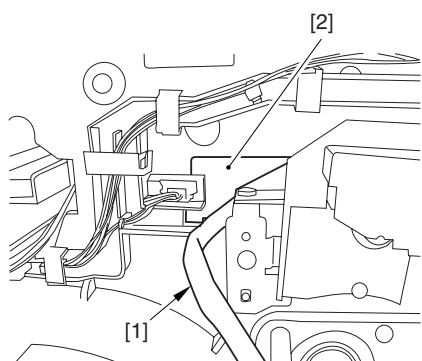


F-7-531

6) While holding the high-voltage cable [1] in place as shown, detach the black developing assembly [2] in upward direction.

⚠ When detaching the black developing assembly, be sure to work with the high-voltage cable kept at the

top of the assembly so that its connector will not damage the surface of the photosensitive drum.

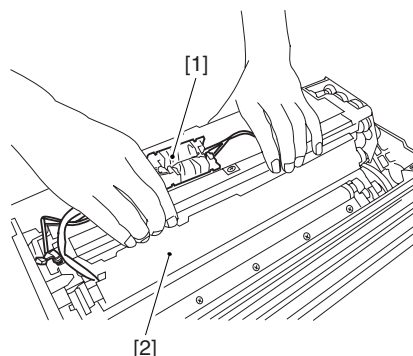


F-7-532

7.11.17.6 Removing the Color Developing Unit


0002-5816

1) Open the color toner supply cover [1].

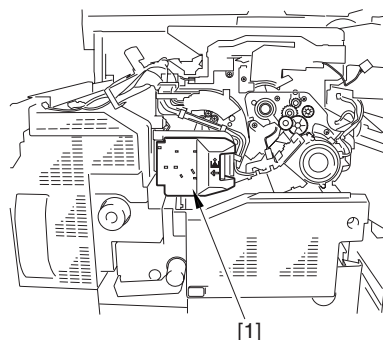

F-7-533


2) Loosen the screw [2] used to fix the torque limiter [1] of the developing rotary in place; then, slide the limiter downward.

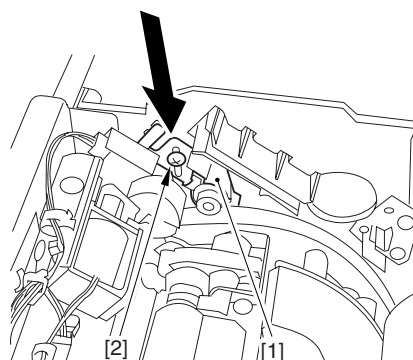

F-7-534

3) Fix the torque limiter [2] in place using a screw [1].


⚠ If you fail to fix the torque limiter in place, the rotary will lose balance when any of the color developing units is removed, possibly damaging the photosensitive drum or the color developing assembly.

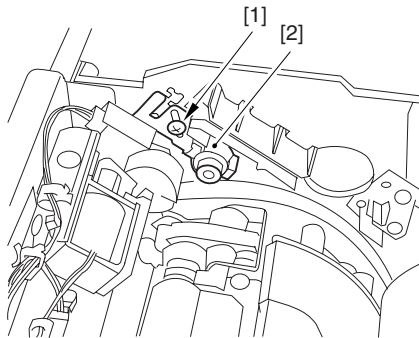

F-7-535


4) Push the lever [1] of the developing rotary solenoid once; then, rotate it counterclockwise by hand so that you have access to the color developing unit you are replacing.

⚠ If you rotate the developing rotary clockwise with a color developing assembly inside it, the anti-stray sheet attached to the sleeve of the color developing assembly can interfere with the photosensitive drum and become detached. Be sure always to rotate the developing rotary counterclockwise.

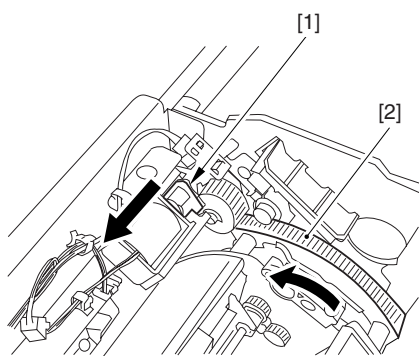


F-7-536

5) Rotate the developing rotary until the developing cylinder [1] of the color developing unit you are removing faces upward.

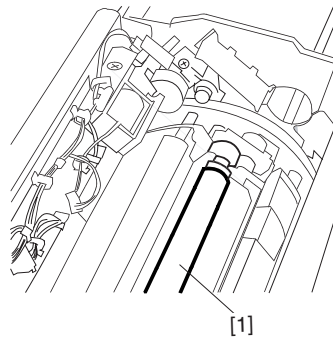

F-7-537


6) Remove the 2 screws [1], and open the developing assembly fixing arm [2].

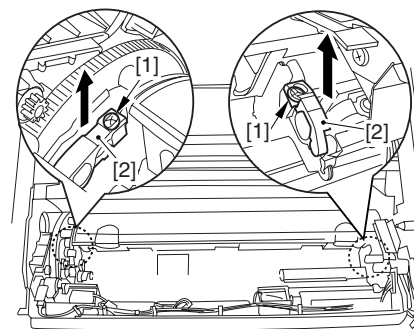

F-7-538


7) Hold the color developing assembly as shown in the figure; then, lift its rear to detach at an angle [2].

⚠ Once you have detached the color developing unit, be sure its supply mouth does NOT face down.

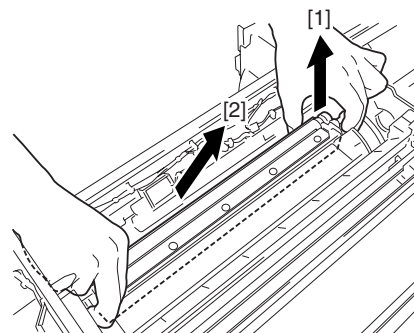

F-7-539

⚠ If you have to rotate the developing rotary farther, be sure to tape the toner supply mouth to prevent spilling the toner.

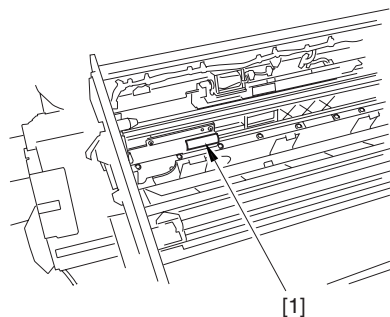


F-7-540

7.11.17.7 When Replacing the Color Developing Unit


0003-1347

- 1) Open the packing box, and take out the new color developing unit.
- 2) Remove the screw [1], and free the 4 hooks [2]; then, remove the developing assembly lid [3].

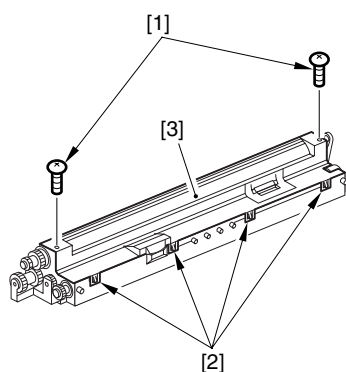


F-7-541

- 3) Even out the starter by shaking the container about 10 times.
- 4) Open the lid [2] of the starter bottle [1]; then, remove the middle lid [3], and close the lid.

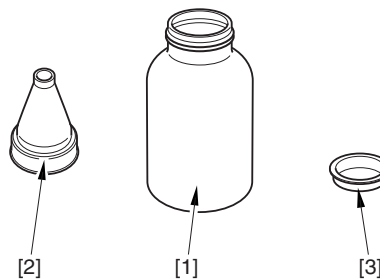


F-7-542

- 5) Supply half the starter so that it is even in the lengthwise direction around the stirring screw inside the color developing unit.

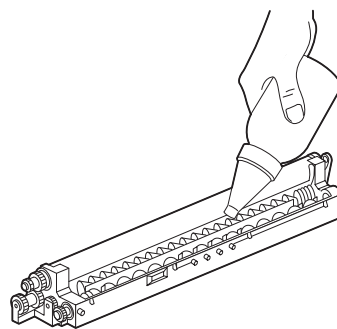


F-7-543

- 6) Turn the developing gear 5 to 6 times by hand in the direction indicated in the figure so that the starter will be even inside the unit.

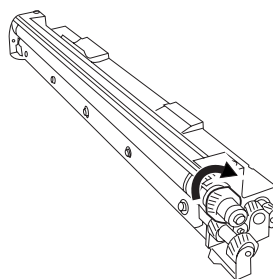


F-7-544

- 7) Supply the remaining half of the starter around the stirring screw inside the color developing unit.
- 8) Turn the developing gear 5 to 6 times once again so that the starter inside the unit is even.
- 9) Move the starter found on the inner side of the container wall off the wall.

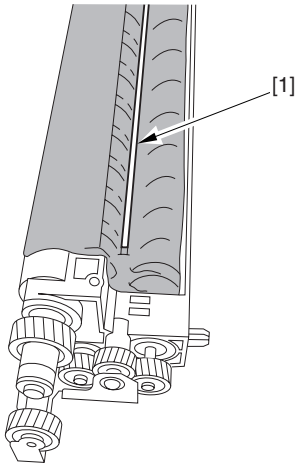


F-7-545

- 10) Fit the container lid you removed in step 2) back on in the direction indicated in the figure.

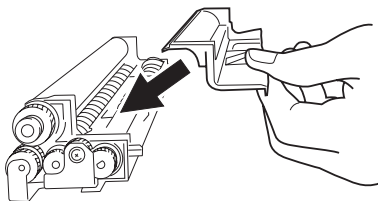


F-7-546

Thereafter, engage the 4 hooks [1]; then, fix the container lid [3] in place using the 2 screws [2] you removed in step 3).

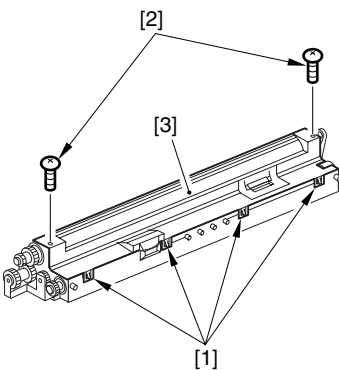

F-7-547


- ⚠** Force down the lid against the container so that the gap [1] indicated in the figure is small enough to prevent insertion of a transparency.

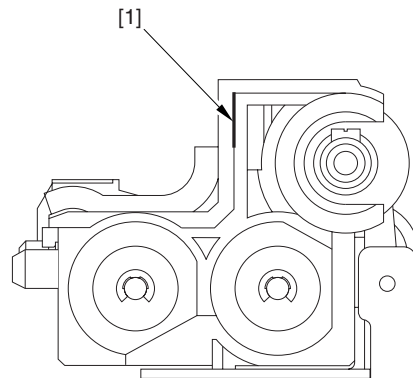

F-7-548

- ⚠** When tightening the screw, take full care so that no shavings caused by turning the screw into the lid of the developing assembly and the container will move into the container.

- 11) Cut off the appropriate tab [1]] to suit the color of the starter you have supplied. The tab A in the figure is an extra tab.

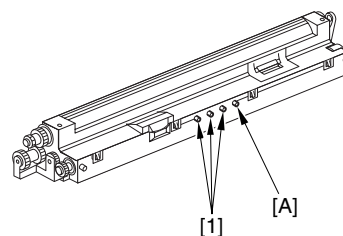

F-7-549

- 12) Fit the color developing unit by going through the steps used to detach it but in reverse.
- 13) Turn on the main power switch.
- 14) Make the following selections in service mode, and set '1', and press the OK key:
COPIER>FUNCTION>INSTALL>AINR-OFF.
- 15) Select one of the following service mode items to suit the color of the starter you have supplied; then, press the OK key.
-if for the Y developing assembly,
COPIER>FUNCTION>INSTALL>INISSET-Y
-if for the M developing assembly,

COPIER>FUNCTION>INSTALL>INISSET-M
 -if for the C developing assembly,
 COPIER>FUNCTION>INSTALL>INISSET-C
 -if for the CMY developing assemblies,
 COPIER>FUNCTION>INSTALL>INISSET-3

⚠A countdown is shown on the screen while this mode item is under way. At the end, the screen will show "OK!".


This mode uses ATVC control, possibly taking a while depending on the site environment. The count on the screen, for this reason, may loop between 690 and 620.

16) Execute the following service mode item: COPIER>FUNCTION>MISC-P>P-PRINT. Store away the generated printout in the service book case. (If there is a previous printout, dispose of it.)

17) End service mode, and start user mode; on the Auto Gradation Correction screen, follow the instructions to execute auto gradation correction (full).


7.11.17.8 Replacing the Starter of the Color Developing Unit 0005-8346

- 1) Remove the color developing unit.
- 2) Remove the screw [1], and free the 4 hooks [2]; then, detach the developing unit lid [3].

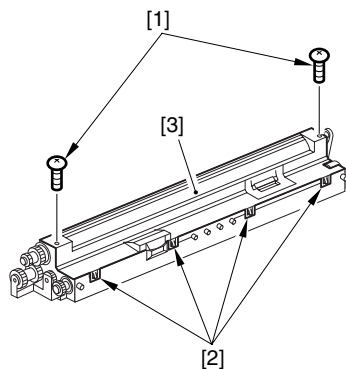


F-7-550

- 3) On A3 paper or in a vinyl bag, dispose of the contents of the unit by turning it over.

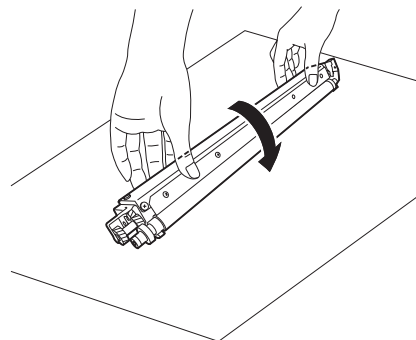


F-7-551

- 4) Turn back over the developing unit, and turn the developing gear in the direction in which the cylinder normally turns so that the agent will drop into the developing assembly.

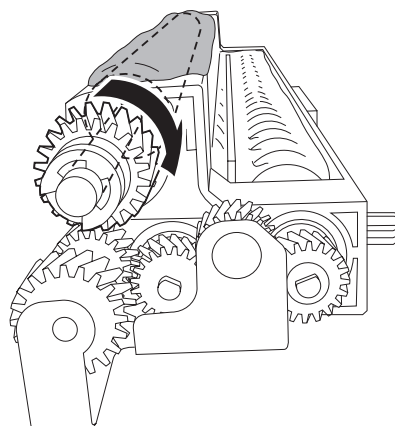


F-7-552

- 5) Dispose of the agent into a vinyl bag or on paper by turning over the developing unit.
- 6) Repeat steps 4) and 5) about 3 times (e.g., until no agent drops into the developing assembly).
- 7) Shake the container of the starter about 10 times.
- 8) Detach the funnel [2] of the starter bottle [1]; then, detach the middle lid [3], and put the funnel back on [2].

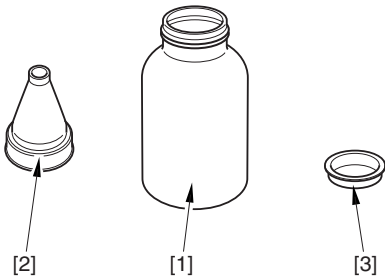


F-7-553

- 9) Pour the starter along the length of the stirring screw inside the color developing unit so that it is about half full.

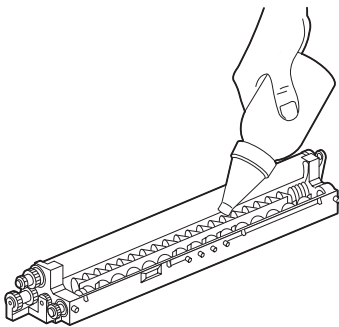


F-7-554

- 10) Turn the developing gear in its normal direction 5 to 6 by hand to even out the starter inside it.
- 11) Pour the rest of the starter around the string screw inside the color developing unit.
- 12) Turn the developing gear 5 to 6 times once again to even out the starter inside the unit.
- 13) Move the starter that may remain on the inner side of the unit wall [1] into the developing assembly.

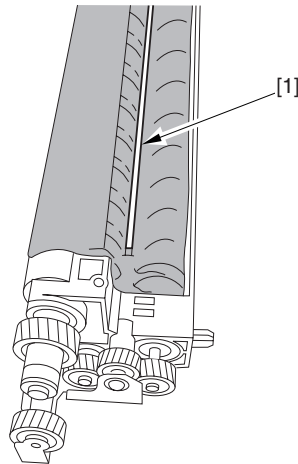


F-7-555

- 14) Attach the developing assembly lid you removed in step 2), making sure that the lid is oriented as shown.

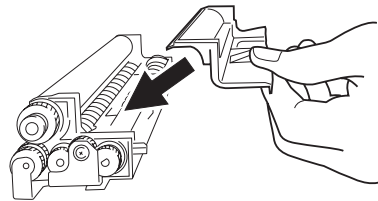


F-7-556

- Engage the 4 hooks [1], and attach the developing assembly lid [3] using the 2 screws [2] you removed in step 2).

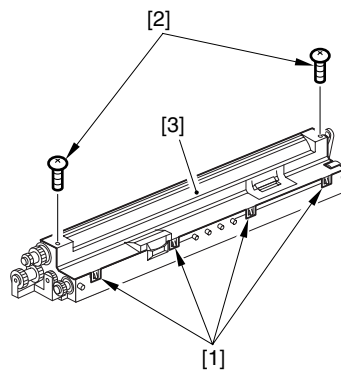

F-7-557

- ⚠** Be sure to force the lid against the developing container so that no transparency will enter the gap [1] shown in the figure.

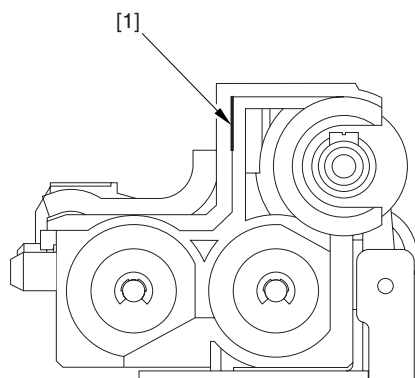

F-7-558

⚠ When tightening the screw, take care so that the shavings from the developing unit or its lid will not enter the unit.

15) Mount the color developing unit using the steps you used to remove it but in reverse.

16) Turn on the main power switch.

17) Make the following selections in service mode; then, enter '1', and press the OK key:

COPIER>FUNCTION>INSTALL>AINR-OFF.

18) Select the appropriate mode item from the following to suit the color of the starter you have used; then, press the OK key

-if Y developing assembly,

COPIER>FUNCTION>INSTALL>INISSET-Y.

-if M developing assembly,

COPIER>FUNCTION>INSTALL>INISSET-M.

-if C developing assembly,

COPIER>FUNCTION>INSTALL>INISSET-C.

⚠ A countdown is shown on the screen while this mode item is under way. At the end, the screen will show "OK!".

This mode uses ATVC control, possibly taking a while depending on the site environment. The count on the screen, for this reason, may loop between 690 and 620.

19) Execute the following in service mode:
COPIER>FUNCTION>MISC-P>P-PRINT. Then, put the generated printout in the service book case. If there is any previous printout, dispose of it.

20) End service mode, and select 'auto gradation correction' in sure mode; execute auto gradation correction (full correction) by going through the instructions on the screen.


7.11.18 Black Developing Assembly

7.11.18.1 Removing the Right

Cover (upper)

0003-8258

1) Remove the 2 screws [1], and detach the right cover (upper) [2].

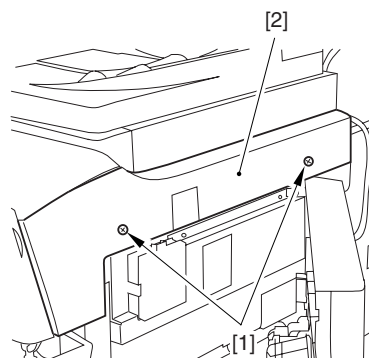


F-7-559

7.11.18.2 Releasing the Front

Cover


0003-2517

1) Open the front cover.
2) While pulling on the grip [1], fully open the manual feed cover [2] to the front.

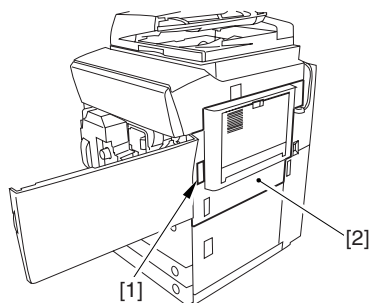


F-7-560

⚠ If a side paper deck exists, remove the 2 screws [1] and the latch plate (front)

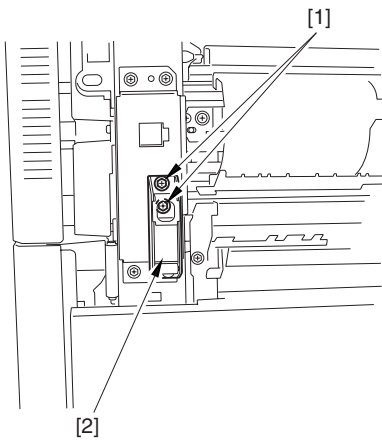


F-7-561

- 3) Slide out the fixing/feeding assembly
- 4) Remove the 2 screws [1], and detach the process unit cover [2].

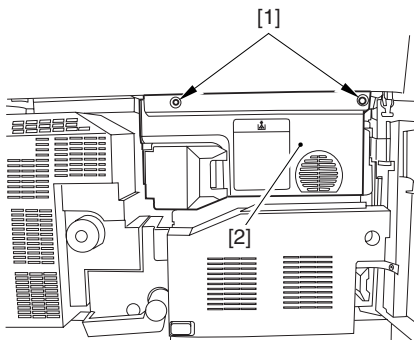


F-7-562

- 5) Push in the fixing/feeding assembly, and set the lever in place.
- 6) Push the release button [1] of the right deck, and slide out the right deck [2].

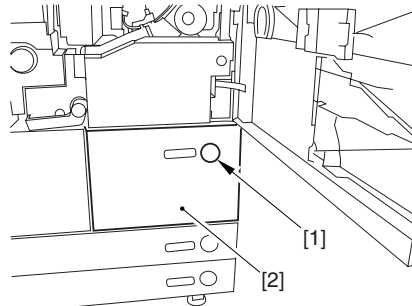


F-7-563

- 7) Remove the screw [1] from lower right, and detach the front cover strap [2].

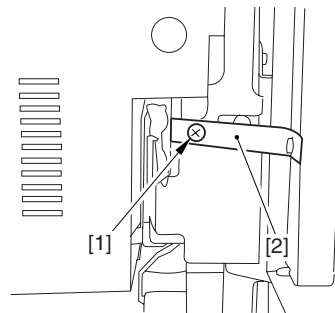

F-7-564

- 8) Remove the 2 screws [1] (binding) of the front cover hinge, and fully open the front cover [2].

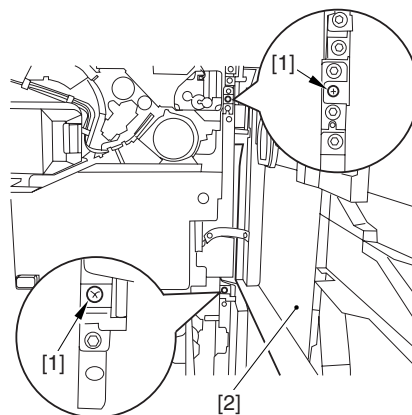

F-7-565


- 9) Close the right deck.

7.11.18.3 Releasing the Hopper

Assembly


0003-2518

- 1) Open the black toner supply cover [1].

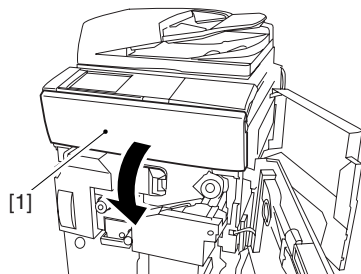


F-7-566

- 2) Shift down the lever [1], and detach the black toner bottle [2].

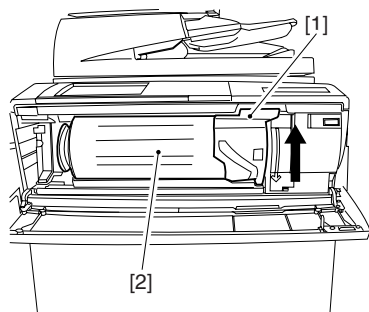


F-7-567

⚠ Once you have released the hopper assembly, toner can spill over the toner bottle supply mouth of the hopper assembly cover. Be sure to wipe off any such toner.

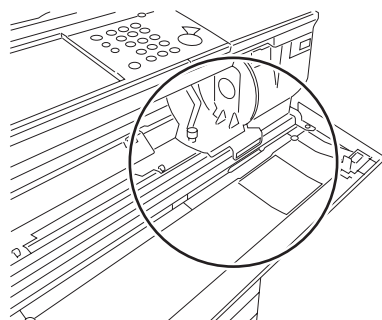


F-7-568

- 3) Remove the 3 screws [1].

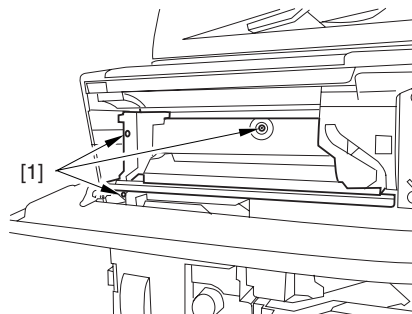

F-7-569

- 4) Close the black toner supply cover [1]; then, fully open the hopper assembly [2].

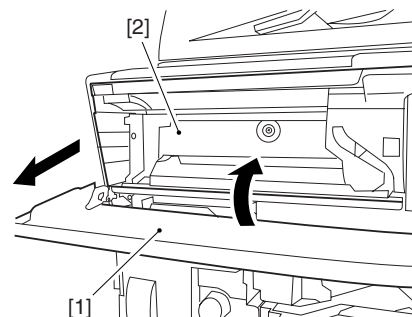


F-7-570

7.11.18.4 Sliding Out the Process Unit


0003-2519

- 1) Disconnect the 5 connectors [1] found at the upper right.

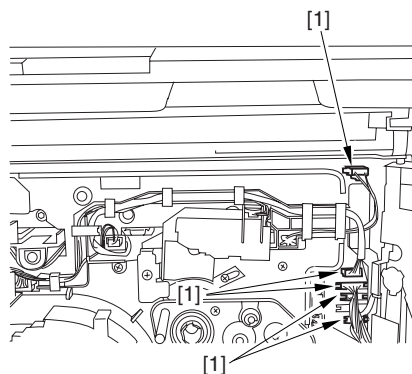


F-7-571

2) Disconnect the 5 connectors [1] found at the upper left.

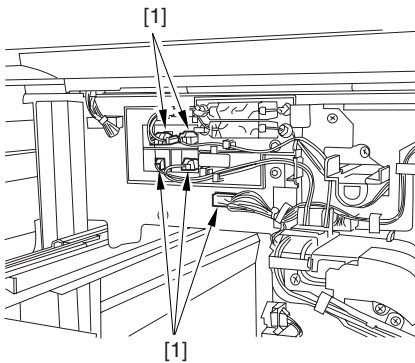


F-7-572

3) After freeing the high-voltage connector cable [1] from the 2 wire saddles [2], fix the cable in place using the cable hook [3].

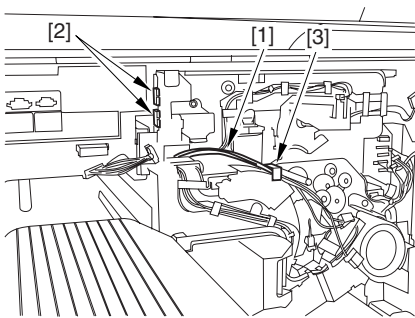

F-7-573

4) Take out the process unit cover [1] from the shipping box, and detach the drum stop tool [2] from the back of the cover.

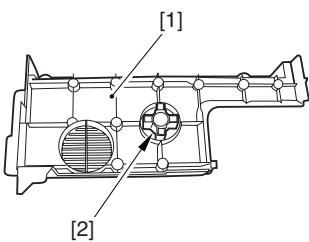


F-7-574

5) While forcing the drum stop tool [3] against the drum fixing member [2] of the drum shift [1], remove the fixing screw [4].



1: Be sure to match the protrusion [5] of the drum fixing member and the protrusion [6] of the drum stop tool.

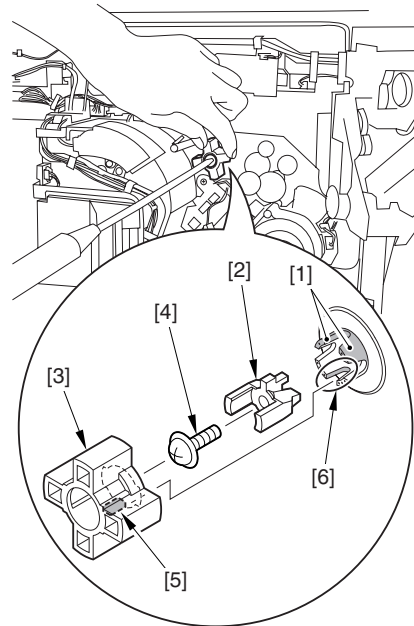


F-7-575

2: When drawing out the process unit, be sure to find out the position of the protrusion [1] of the drum fixing member in relation to the marking [2] on the drum flange.

In the example in the figure, the marking [2] on the drum flange is at "." on the left and at ".." on the right in relation to the protrusion [2] of the drum fixing member.


Moreover, when you close the process unit, it is important that the spatial relationship between the protrusion of the drum fixing member and the marking on the drum flange is as it was before you drew out the unit.

6) Using a pair of fine pliers, remove the drum fixing member [1].

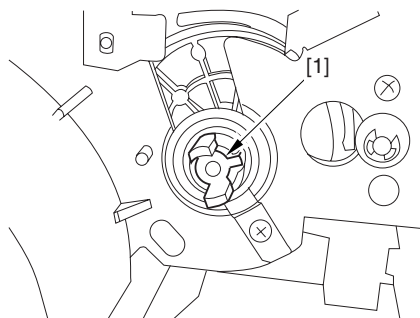


F-7-576

7) Remove the 3 binding screws (M4x8) [1].

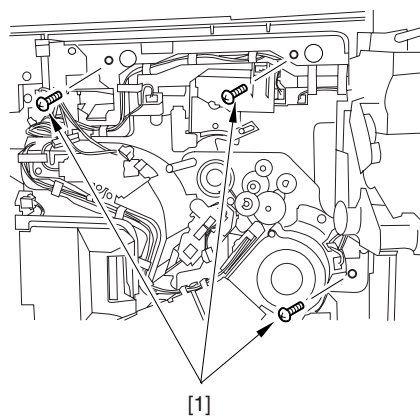


F-7-577

8) Shift down the fixing/feeding assembly releasing lever [1] in the direction of the arrow.

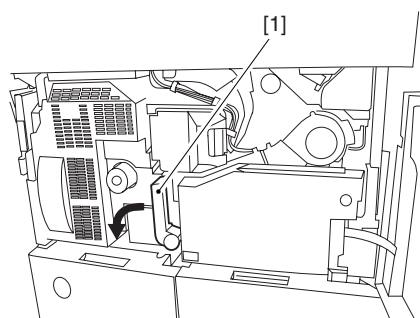


F-7-578

9) Slide out the fixing/feeding assembly [1] toward the front.

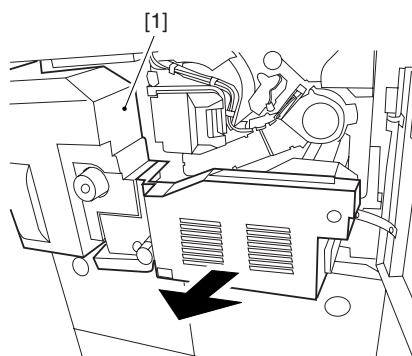


F-7-579

10) While pushing on the 2 hooks [1] found on both sides of the fixing/feeding assembly, fully slide out the fixing/feeding assembly [2].

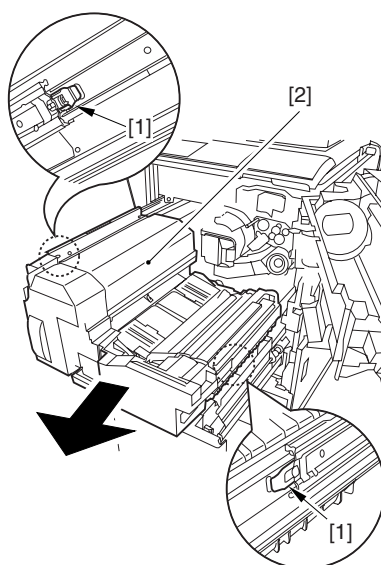

F-7-580


11) Slightly lift both ends [1] of the process unit, and fully slide out the process unit [2].

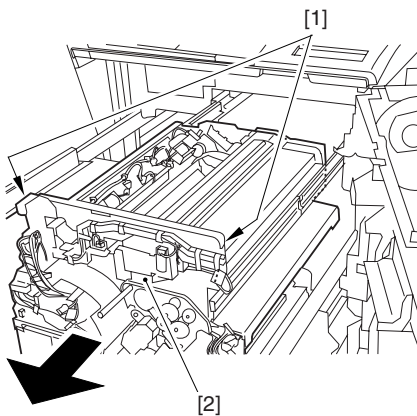


F-7-581

When you have slid out the process unit, check to see if any of the following parts is soiled with toner before fitting it back in; if soiled, dry wipe the part:

- entire surface of the deck top panel [1]
- front bend of the deck top panel [2]
- lower rear sheet (4 locations) of the fixing/feeding assembly [3].

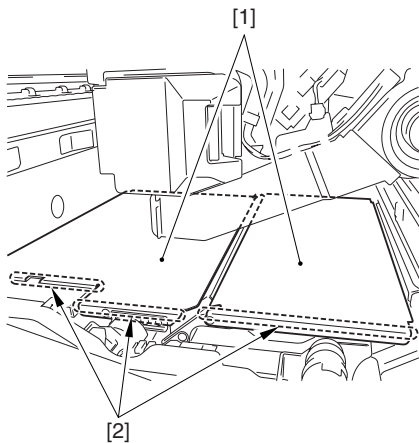

F-7-582

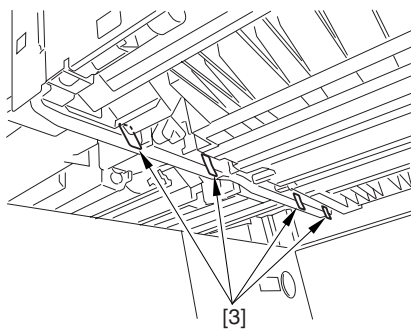

F-7-583

7.11.18.5 Removing the Black Developing Unit


0002-6286

⚠ Points to Note About the Work

1 The machine's developing unit is not equipped with a developing cylinder protection cover. Take full care, therefore, not to damage the developing cylinder when you have detached the developing unit.


The waste toner collecting inside the machine can move into the fixing/feeding assembly through the outlet; be sure to place paper under the process unit for the work.

2. The machine's black developing unit is equipped with a potential sensor. Do not touch the sensor window [1] indicated in the figure. Moreover, take care not to drop the black developing assembly or otherwise subject it to impact so as to avoid damage to the potential sensor.

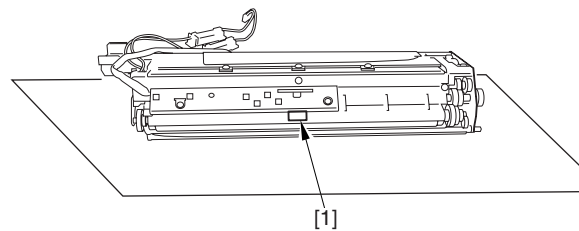


F-7-584

1) Open the harness guide used to fix the high-voltage cable [1] in place.

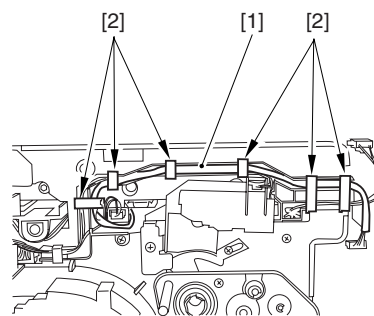


F-7-585

2) Remove the screw [2], and detach the black developing assembly locking plate [1].

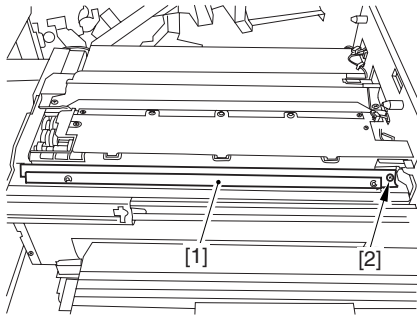


F-7-586

3) Remove the 2 screws [2], and detach the black developing assembly joint plate [1].

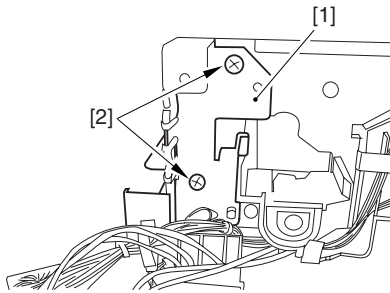


F-7-587

4) Disconnect the connector [1].

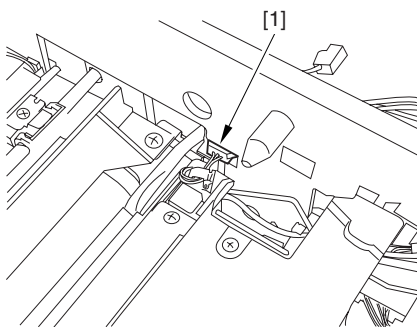

F-7-588


5) Push in the high-voltage cable [1] through the opening [2] indicated in the figure.

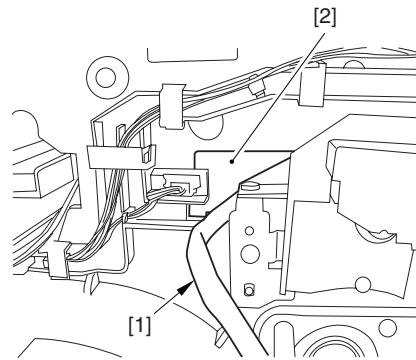

F-7-589

6) While holding the high-voltage cable [1] in place as shown, detach the black developing assembly [2] in upward direction.


⚠ When detaching the black developing assembly, be sure to work with the high-voltage cable kept at the top of the assembly so that its connector will not damage the surface of the photosensitive drum.

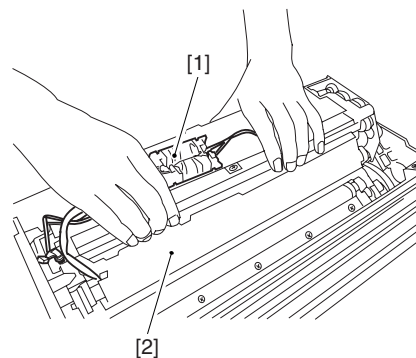

F-7-590

7.11.18.6 Points to Note About Replacing the Black Developing Unit 0003-0418


⚠ Do not touch the sensor window [1] shown in the figure during the work. Also, take care not to drop or otherwise subject the black developing unit to impact to avoid damage to the potential sensor

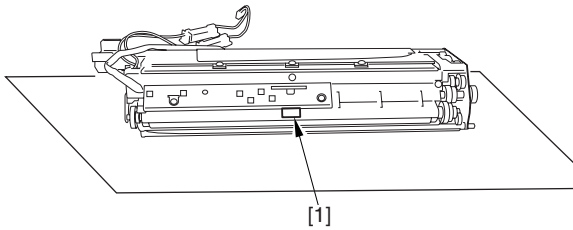

F-7-591

If you are replacing the black developing unit, you will have to remove the potential sensor from the old unit and mount it to the new one as follows:

1) Remove the 2 screws [1], and detach the potential sensor holder [2].

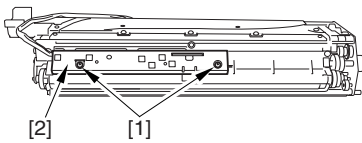


F-7-592


⚠ When setting the black developing unit in the machine, be sure of the following:

1. The developing rotary must be rotated counterclockwise so that the developing cylinder of the color developing assembly is kept facing the direction indicated in the figure.

OK

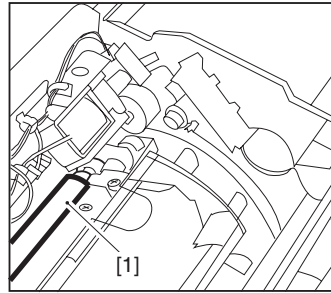


NG

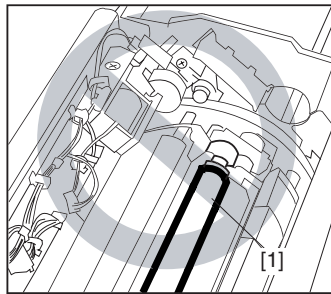


F-7-593

2. If you put the high-voltage cable of the black developing assembly inside the machine when setting the assembly, you can trap the cable; to avoid trapping, be user to keep the high-voltage cable [1] on top of the black developing assembly as shown in the figure.

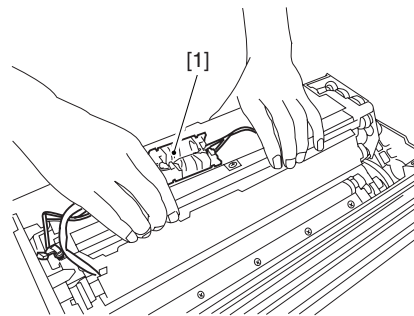

F-7-594

Hold the black developing assembly [1] by its ends as shown in the figure; then, while keeping it level, push it in at an angle to set. When doing so, be sure to match the boss [2] found at the rear of the developing assembly against the left guide [3] found at the rear of the machine. Be sure also to match the rib [4] found at the front of the developing assembly against the right guide [5] found at the front of the machine.

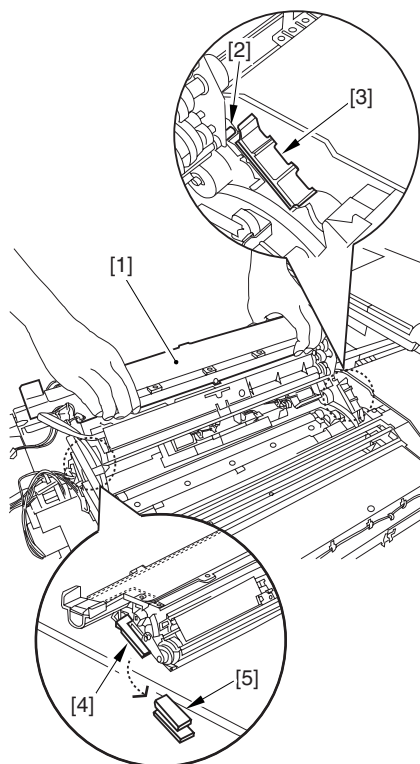

F-7-595


7.11.19 Black Developing Cylinder

7.11.19.1 Removing the Right

Cover (upper)

0003-6698

- 1) Remove the 2 screws [1], and detach the right cover (upper) [2].

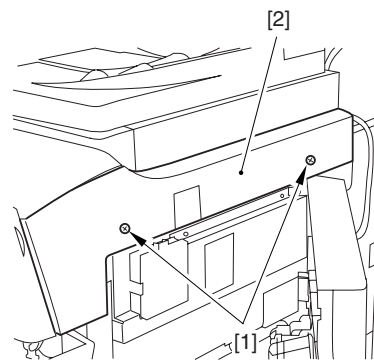


F-7-596

7.11.19.2 Releasing the Front

Cover


0003-6699

- 1) Open the front cover.
- 2) While pulling on the grip [1], fully open the manual feed cover [2] to the front.

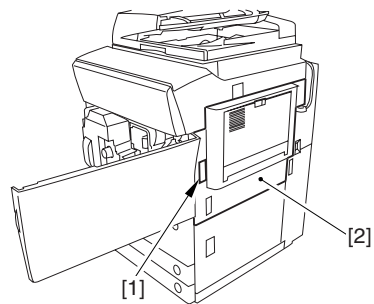


F-7-597

⚠ If a side paper deck exists, remove the 2 screws [1] and the latch plate (front)

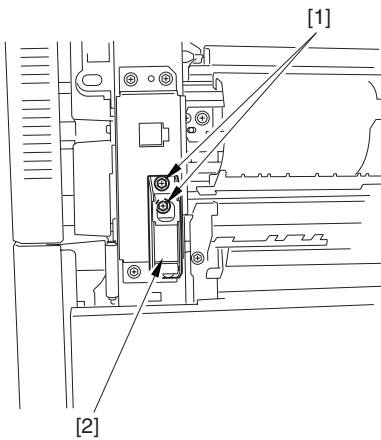


F-7-598

- 3) Slide out the fixing/feeding assembly
- 4) Remove the 2 screws [1], and detach the process unit cover [2].

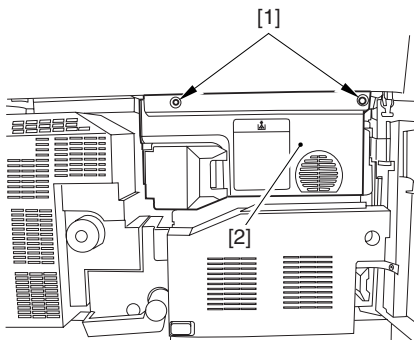


F-7-599

- 5) Push in the fixing/feeding assembly, and set the lever in place.
- 6) Push the release button [1] of the right deck, and slide out the right deck [2].

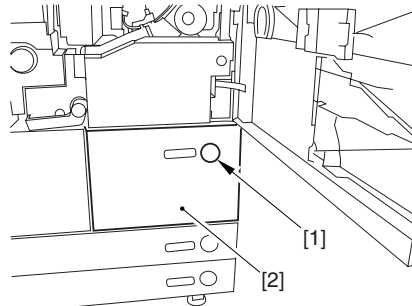


F-7-600

- 7) Remove the screw [1] from lower right, and detach the front cover strap [2].

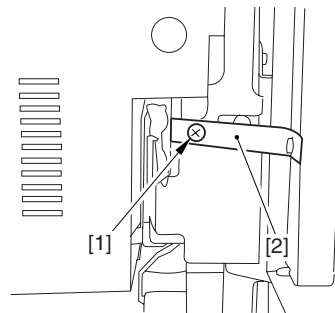

F-7-601

- 8) Remove the 2 screws [1] (binding) of the front cover hinge, and fully open the front cover [2].

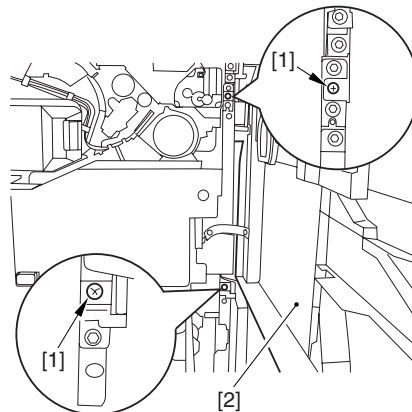

F-7-602


- 9) Close the right deck.

7.11.19.3 Releasing the Hopper

Assembly


0003-6700

- 1) Open the black toner supply cover [1].

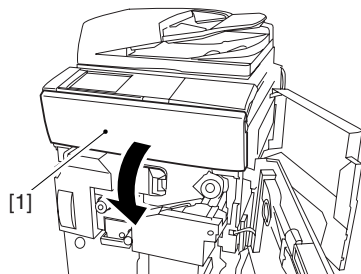


F-7-603

- 2) Shift down the lever [1], and detach the black toner bottle [2].

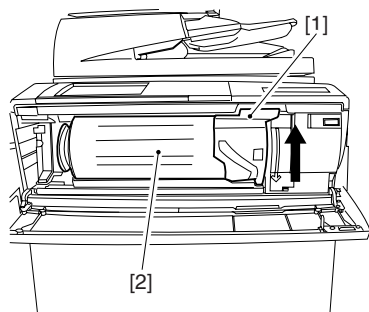


F-7-604

⚠ Once you have released the hopper assembly, toner can spill over the toner bottle supply mouth of the hopper assembly cover. Be sure to wipe off any such toner.

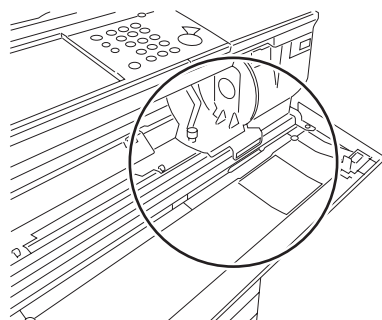


F-7-605

- 3) Remove the 3 screws [1].

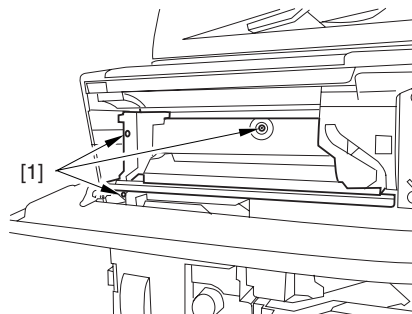

F-7-606

- 4) Close the black toner supply cover [1]; then, fully open the hopper assembly [2].

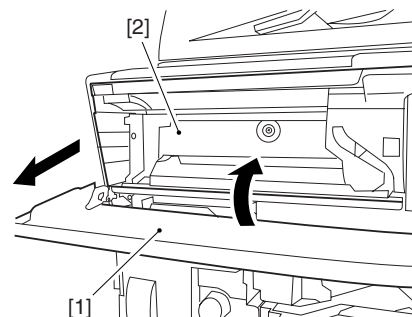


F-7-607

7.11.19.4 Sliding Out the Process Unit


0003-6704

- 1) Disconnect the 5 connectors [1] found at the upper right.

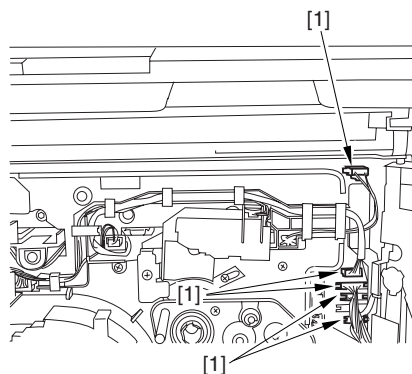


F-7-608

2) Disconnect the 5 connectors [1] found at the upper left.

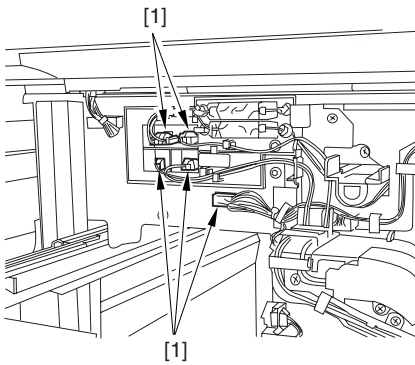


F-7-609

3) After freeing the high-voltage connector cable [1] from the 2 wire saddles [2], fix the cable in place using the cable hook [3].

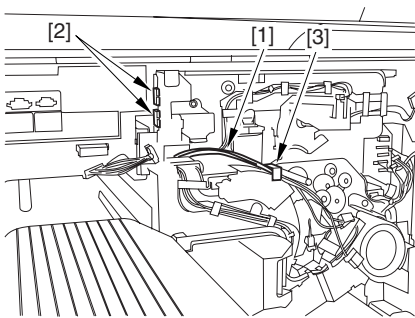

F-7-610

4) Take out the process unit cover [1] from the shipping box, and detach the drum stop tool [2] from the back of the cover.

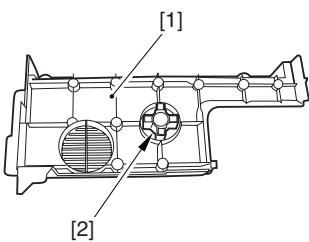


F-7-611

5) While forcing the drum stop tool [3] against the drum fixing member [2] of the drum shift [1], remove the fixing screw [4].



1: Be sure to match the protrusion [5] of the drum fixing member and the protrusion [6] of the drum stop tool.

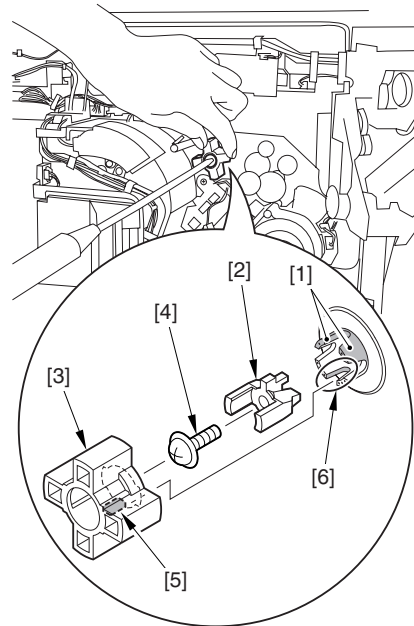


F-7-612

2: When drawing out the process unit, be sure to find out the position of the protrusion [1] of the drum fixing member in relation to the marking [2] on the drum flange.

In the example in the figure, the marking [2] on the drum flange is at "." on the left and at ".." on the right in relation to the protrusion [2] of the drum fixing member.


Moreover, when you close the process unit, it is important that the spatial relationship between the protrusion of the drum fixing member and the marking on the drum flange is as it was before you drew out the unit.

6) Using a pair of fine pliers, remove the drum fixing member [1].

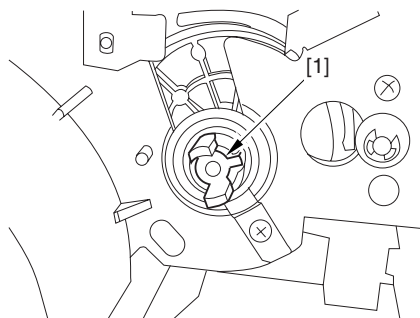


F-7-613

7) Remove the 3 binding screws (M4x8) [1].

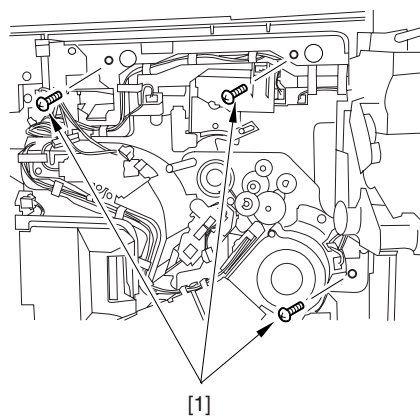


F-7-614

8) Shift down the fixing/feeding assembly releasing lever [1] in the direction of the arrow.

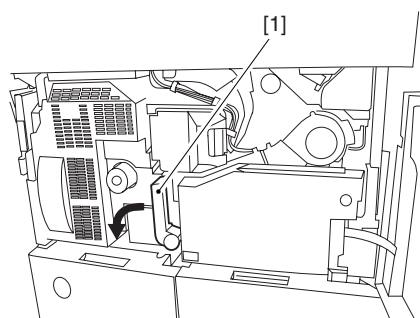


F-7-615

9) Slide out the fixing/feeding assembly [1] toward the front.

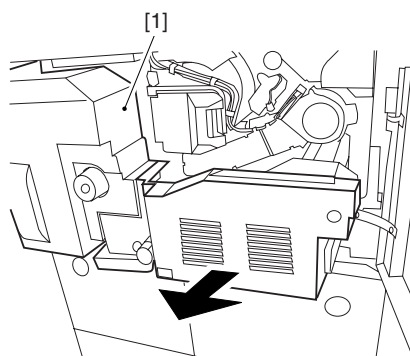


F-7-616

10) While pushing on the 2 hooks [1] found on both sides of the fixing/feeding assembly, fully slide out the fixing/feeding assembly [2].

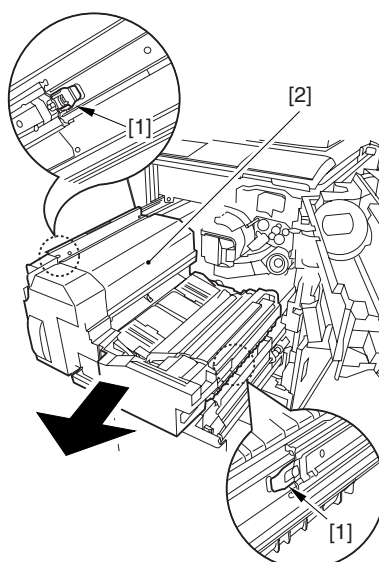

F-7-617


11) Slightly lift both ends [1] of the process unit, and fully slide out the process unit [2].

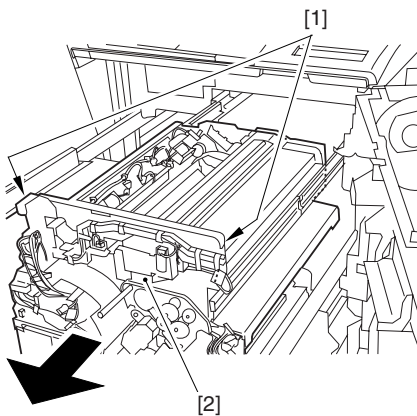


F-7-618

When you have slid out the process unit, check to see if any of the following parts is soiled with toner before fitting it back in; if soiled, dry wipe the part:

- entire surface of the deck top panel [1]
- front bend of the deck top panel [2]
- lower rear sheet (4 locations) of the fixing/feeding assembly [3].

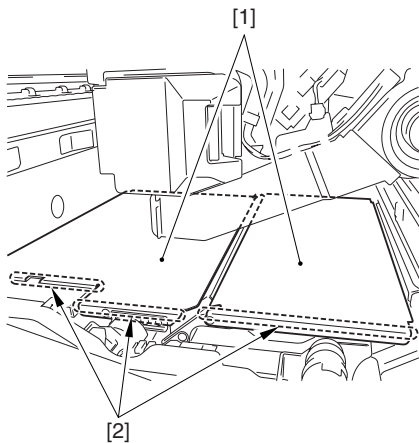

F-7-619

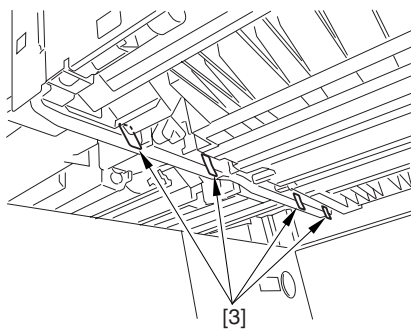

F-7-620

7.11.19.5 Removing the Black Developing Unit


0003-6706

⚠ Points to Note About the Work

1 The machine's developing unit is not equipped with a developing cylinder protection cover. Take full care, therefore, not to damage the developing cylinder when you have detached the developing unit.


The waste toner collecting inside the machine can move into the fixing/feeding assembly through the outlet; be sure to place paper under the process unit for the work.

2. The machine's black developing unit is equipped with a potential sensor. Do not touch the sensor window [1] indicated in the figure. Moreover, take care not to drop the black developing assembly or otherwise subject it to impact so as to avoid damage to the potential sensor.

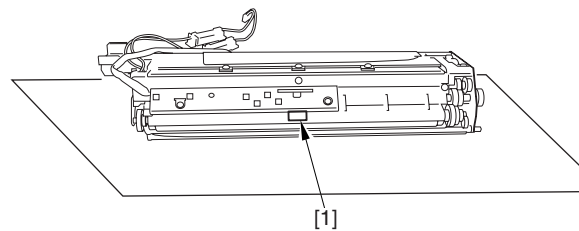


F-7-621

1) Open the harness guide used to fix the high-voltage cable [1] in place.

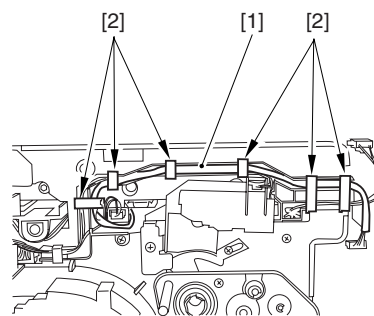


F-7-622

2) Remove the screw [2], and detach the black developing assembly locking plate [1].

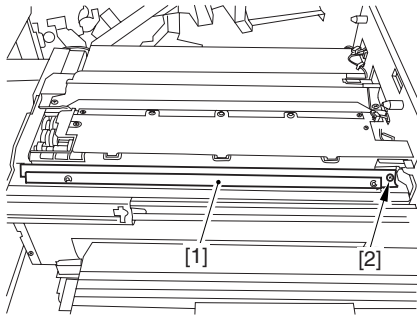


F-7-623

3) Remove the 2 screws [2], and detach the black developing assembly joint plate [1].

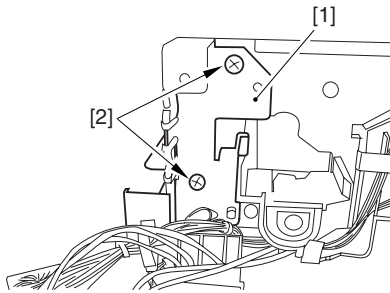


F-7-624

4) Disconnect the connector [1].

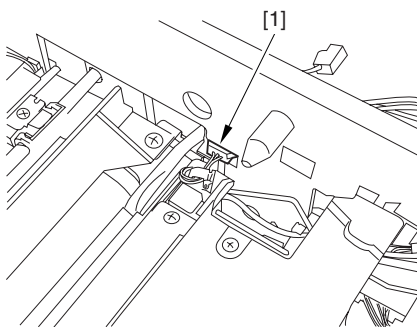

F-7-625


5) Push in the high-voltage cable [1] through the opening [2] indicated in the figure.

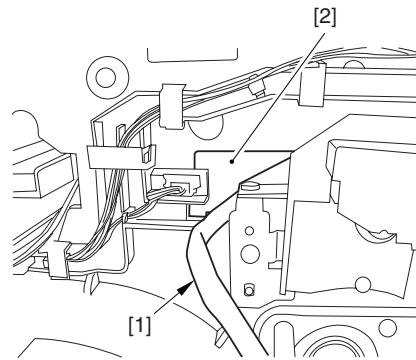

F-7-626

6) While holding the high-voltage cable [1] in place as shown, detach the black developing assembly [2] in upward direction.

⚠ When detaching the black developing assembly, be sure to work with the high-voltage cable kept at the top of the assembly so that its connector will not damage the surface of the photosensitive drum.

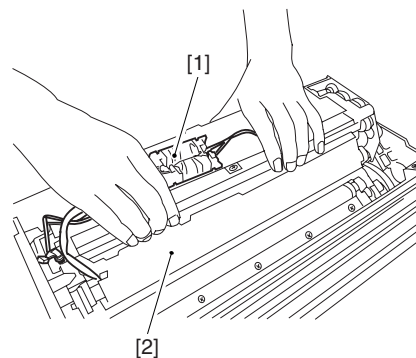

F-7-627


7.11.19.6 Removing the Black

Developing Cylinder

0003-6707


⚠ When mounting the developing cylinder, take care not to touch the surface of the cylinder. Also, take full care not to damage the surface.

The machine's black developing unit is equipped with a potential sensor. Do not touch the sensor window [1] shown in the figure. Also, take care not to drop or otherwise subject the black developing assembly to impact to avoid damage to the potential sensor.

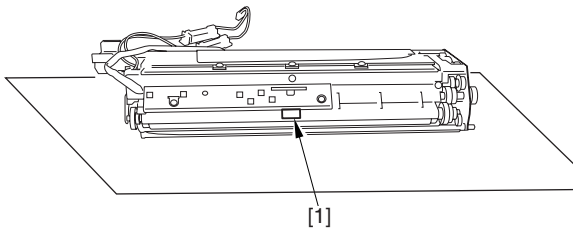


F-7-628

- 1) Remove the black developing assembly.
- 2) Remove the 3 screws [1], and detach the cylinder cover [2].

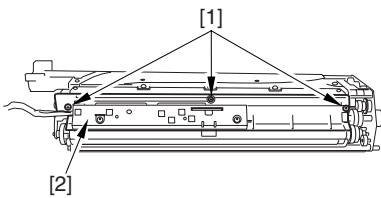


F-7-629

- 3) Remove the 5 screws [1], and detach the developing cartridge lid [2].

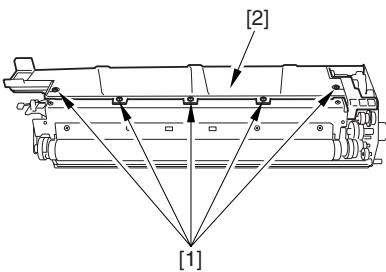

F-7-630


- 4) Remove the screw [1], and detach the magnetic positioning plate [2].

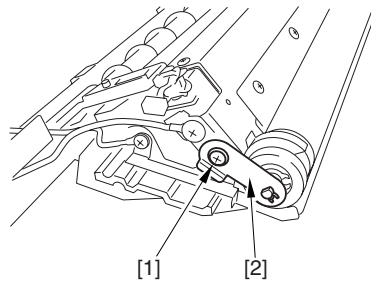

F-7-631

- 5) Remove the screw [1], and detach the lower guide plate [2].


- 6) Remove the 3 screws [2], and pull out the gear box [4].

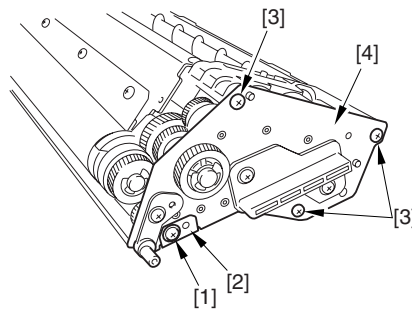

F-7-632


- 7) Remove the 2 screws [1], and detach the blade [2].

⚠ The blade is adjusted at the factory to an extremely high level of accuracy. Be sure not to loosen the screw [3] indicated in the figure in the field.

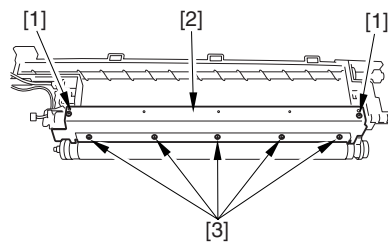


F-7-633

- 8) Remove the E-ring [1], gear [2], collar [3], and bearing [4] from the rear of the machine.

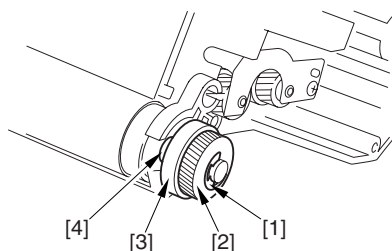

F-7-634

- 9) Remove the stop ring [1], collar [2], and bearing [3] from the front of the machine.

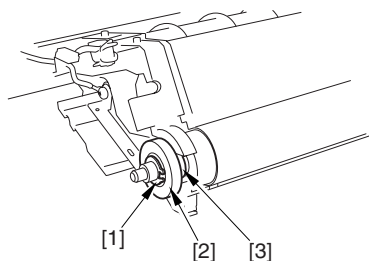

F-7-635

7.11.19.7 Points to Note When

Handling the Black

Developing Cylinder

0005-0954

⚠ The black developing cylinder need not be cleaned on a periodical basis. If you must clean the surface of the cylinder, be sure to dry wipe it with lint-free paper, NEVER using water or solvent.

7.11.19.8 Points to Note When

Mounting the Polarity


Positioning Plate

0006-0539

Go through the following steps in strict sequence when mounting the polarity positioning plate:


- 1) Let go of your hand so that the developing cylinder moves and stops on its own.

- 2) Shift the polarity positioning plate [1] counterclockwise as much as the length of the play of the D-cut notch [2]; then, read the index [4] of the marking found on the blade support base.

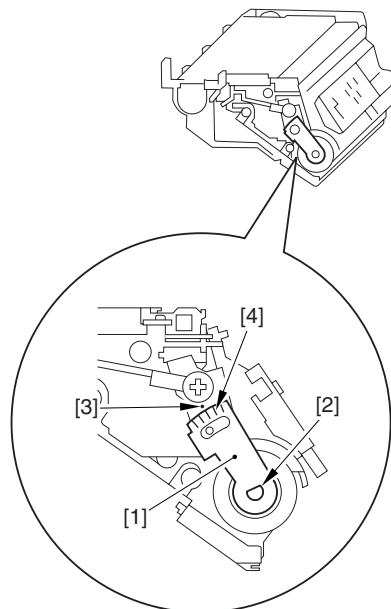

F-7-636

- 3) Turn the polarity positioning plate [1] counterclockwise by a single index (5 deg); then, tighten the screw [2] to fix it in place.

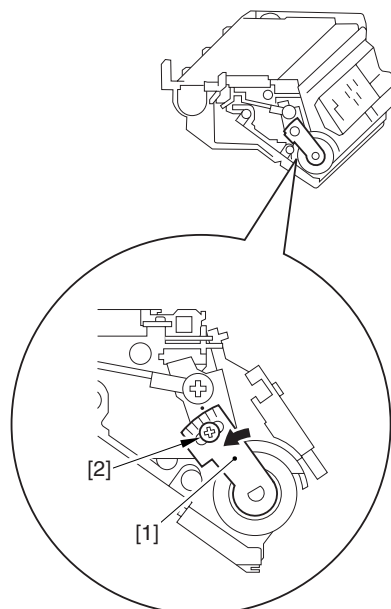

F-7-637


7.11.20 Black Developing Clutch

7.11.20.1 Remove the Rear


Cover (upper)

0004-1057

- 1) Free the cable [2] from the 2 cable clamps [1].
- 2) Remove the 2 screws [3].

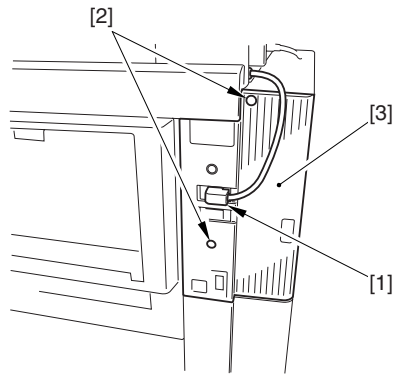


F-7-640

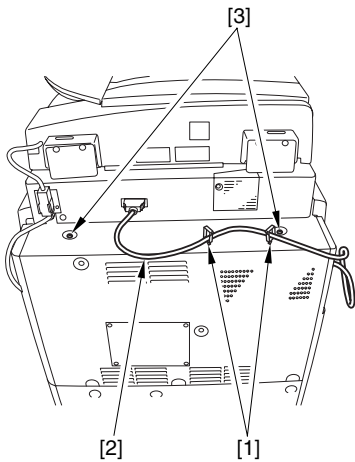

F-7-638

- 3) Remove the 5 screws [1], and detach the rear cover (upper) [2].

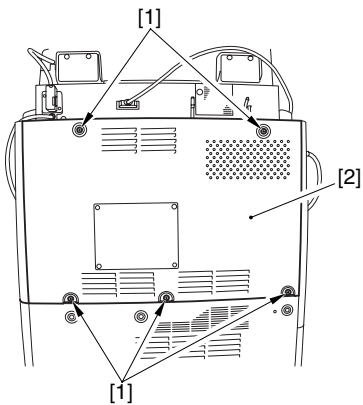

F-7-639

7.11.20.2 Removing the Right

Cover (upper rear)

0004-1060


- 1) Detach the reader communications cable [1].
- 2) Remove the 2 screws [2], and detach the right cover (upper rear) [3].

7.11.20.3 Sliding the DC

Controller Box


0004-1063

- 1) Remove the 9 screws [1], and detach the DC controller cover [2].

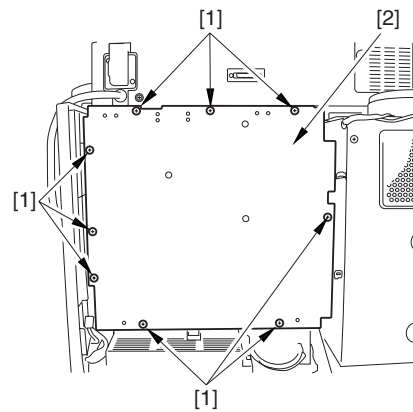

F-7-641

- 2) Remove the 6 screws [1], and slide the DC controller box [2] to the left.

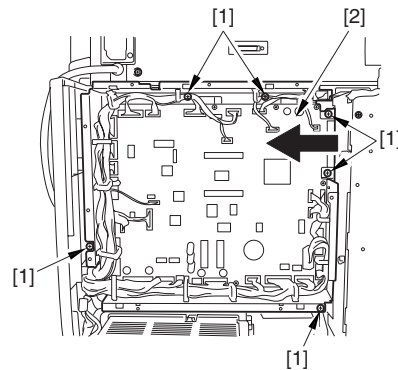


F-7-642

7.11.20.4 Removing the DC

Controller Box


0004-1066

- 1) Open the 3 cable guides [1], and free the harness [2].

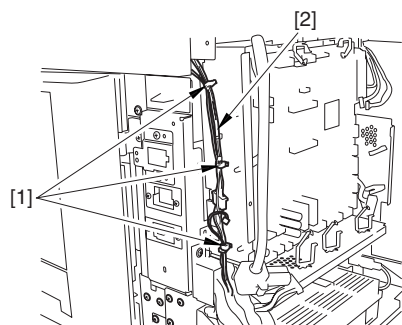


F-7-643

- 2) Disconnect the 33 connectors [1], and open that 13 cable guides [2]; then, free the harness [3].

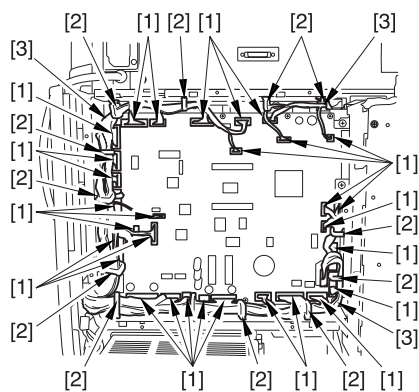

F-7-644

- 3) Lift the DC controller box [1] to detach.

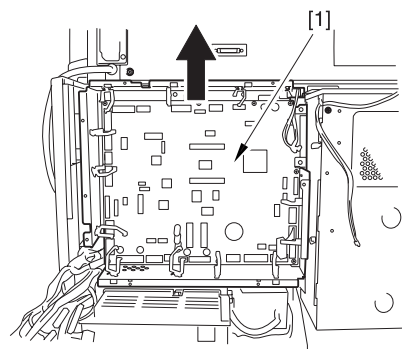

F-7-645


7.11.20.5 Points to Note When Mounting
the DC Controller Box

0005-7218

⚠ During assembly work, be sure to connect the harness to the DC controller PCB as follows:

-Connect the connector of the harness [1] first, and then the other harness [2].

-Fix the harnesses [1] [2] in place using the wire saddle [3] so that the harness [1] is on the left side of the harness [2].

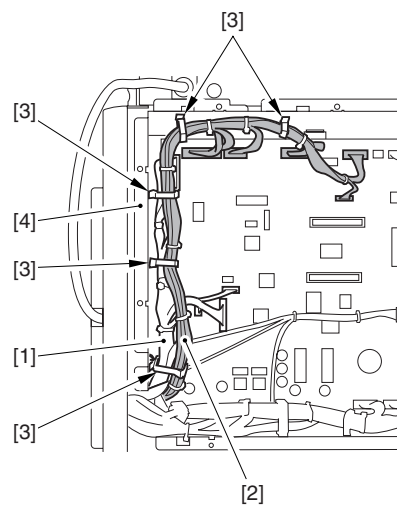

F-7-646


Supplementary Information:

If the harness [1] is away from the side plate [4] of the DC controller box, wrong detection (E070-0102) of the ITB home position tends to occur because of noise.

7.11.20.6 Removing the Black Developing Clutch

0004-1069


1) Remove the 2 screws [1], and detach the fly wheel [2].

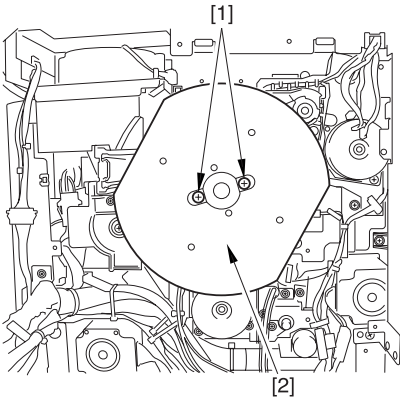

F-7-647

2) Remove the screw [1], and loosen the screw [2]; then, turn the tensioner [3] counterclockwise.


3) Detach the timing belt [4].

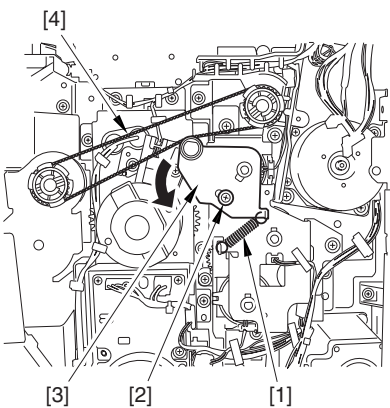

F-7-648


4) Disconnect the 3 connectors [1], and free the 3 harnesses [2] from the 6 cable guides [3].

5) Remove the 3 screws [4], and detach the side plate [5].

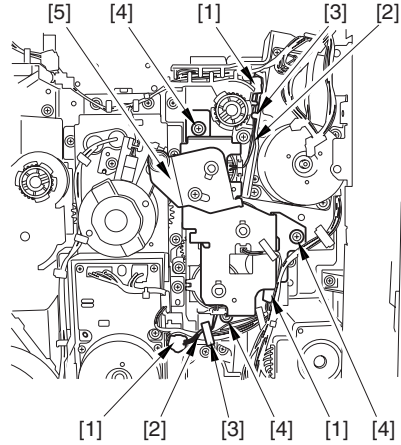

F-7-649

6) Remove the black developing cylinder [1].

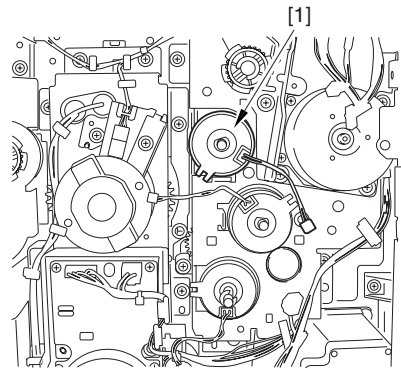

F-7-650


7.11.21 Color Toner Supply Clutch

7.11.21.1 Removing the Rear

Cover (upper)


0004-1058

- 1) Free the cable [2] from the 2 cable clamps [1].
- 2) Remove the 2 screws [3].

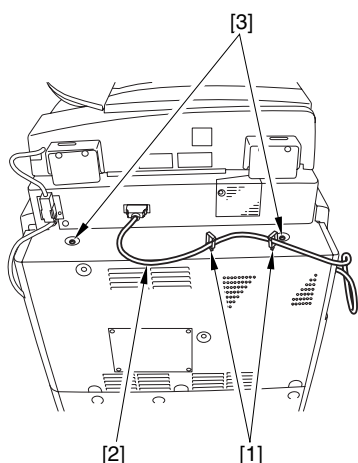

F-7-651

- 3) Remove the 5 screws [1], and detach the rear cover (upper) [2].

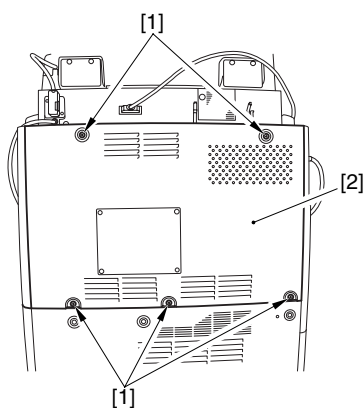


F-7-652

7.11.21.2 Removing the Right

Cover (upper rear)

0004-1061

- 1) Detach the reader communications cable [1].
- 2) Remove the 2 screws [2], and detach the right cover (upper rear) [3].

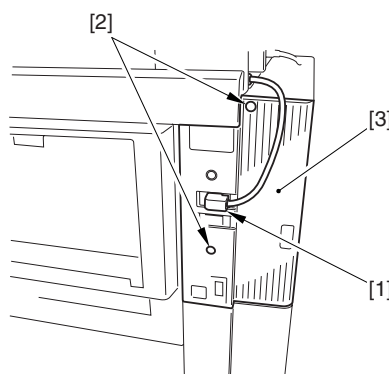


F-7-653

7.11.21.3 Sliding the DC

Controller Box


0004-1064

- 1) Remove the 9 screws [1], and detach the DC controller cover [2].

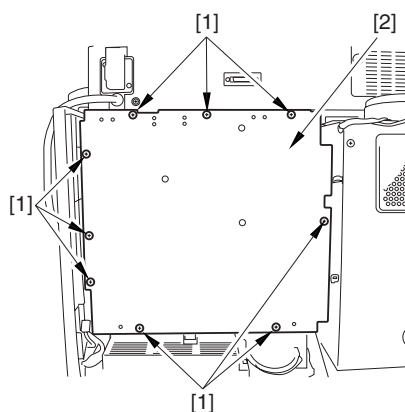

F-7-654

- 2) Remove the 6 screws [1], and slide the DC controller box [2] to the left.

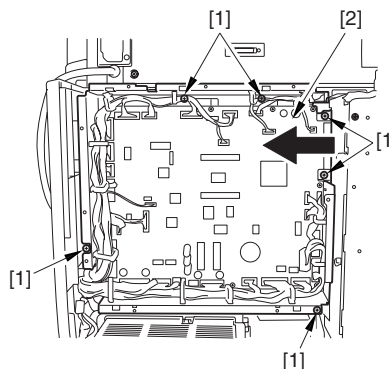


F-7-655

7.11.21.4 Removing the DC Controller Box


0004-1067

1) Open the 3 cable guides [1], and free the harness [2].

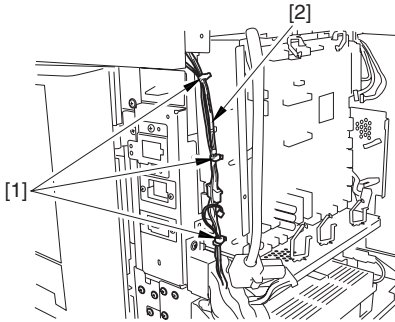


F-7-656

2) Disconnect the 33 connectors [1], and open that 13 cable guides [2]; then, free the harness [3].

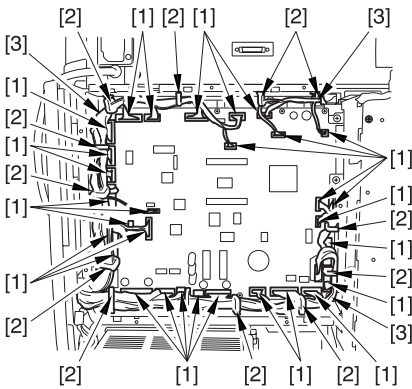

F-7-657

3) Lift the DC controller box [1] to detach.

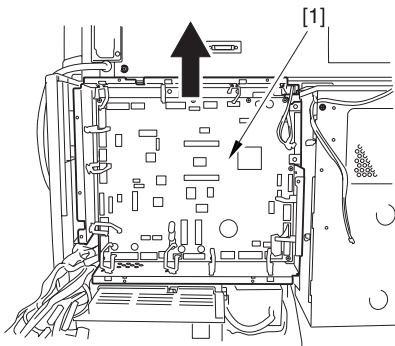

F-7-658


7.11.21.5 Points to Note When Mounting the DC Controller Box

0005-7219

⚠ During assembly work, be sure to connect the harness to the DC controller PCB as follows:

-Connect the connector of the harness [1] first, and then the other harness [2].

-Fix the harnesses [1] [2] in place using the wire saddle [3] so that the harness [1] is on the left side of the harness [2].

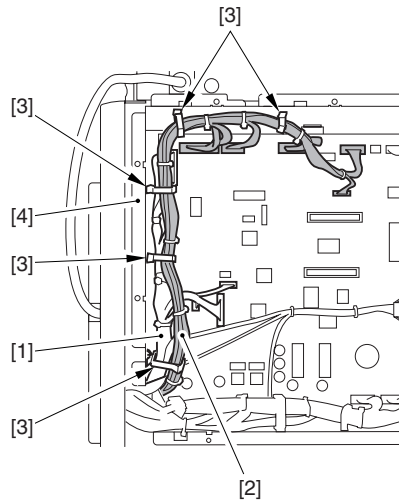

F-7-659

Supplementary Information:


If the harness [1] is away from the side plate [4] of the DC controller box, wrong detection (E070-0102) of the ITB home position tends to occur because of noise.

7.11.21.6 Removing the Color

Toner Supply Clutch


0004-1070

1) Remove the 2 screws [1], and detach the fly wheel [2].

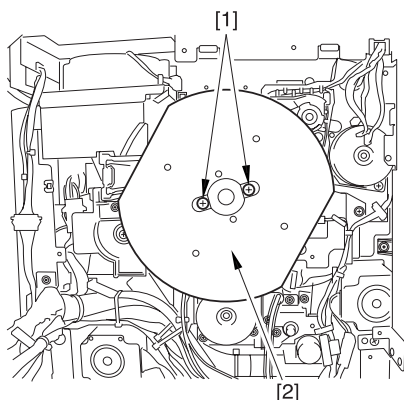


F-7-660

- 2) Remove the spring [1], and loosen the screw [2]; then, turn the tensioner [3] clockwise.
- 3) Detach the timing belt [4].

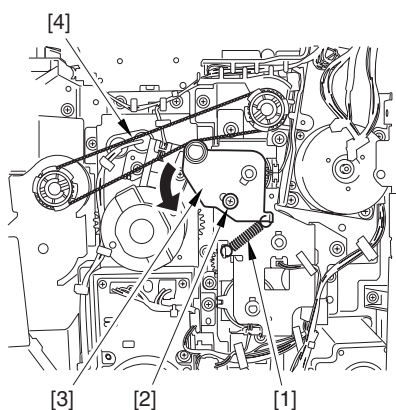


F-7-661

- 4) Disconnect the connector [1], and free the 3 harnesses [2] from the 6 cable guides [3].
- 5) Remove the 3 screws [4], and detach the side plate [5].

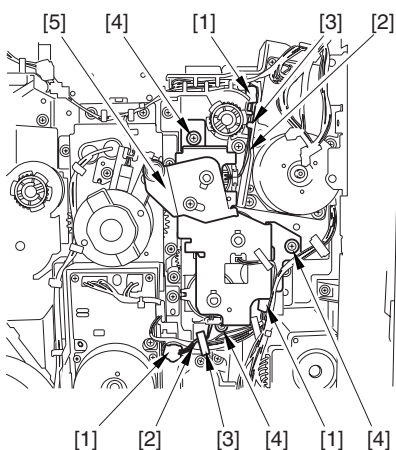

F-7-662

- 6) Remove the color toner supply clutch [1].

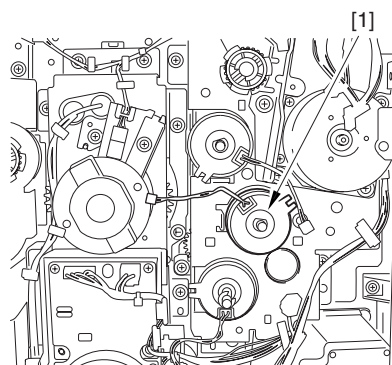

F-7-663


7.11.22 Color Developing Clutch

7.11.22.1 Removing the Rear

Cover (upper)


0004-1059

- 1) Free the cable [2] from the 2 cable clamps [1].
- 2) Remove the 2 screws [3].

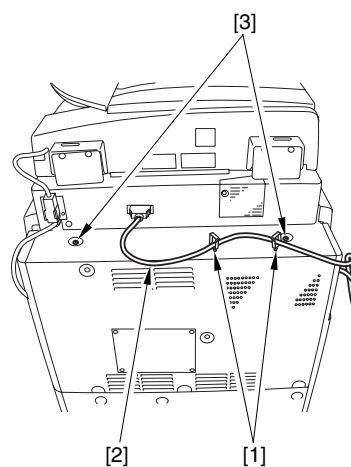

F-7-664


3) Remove the 5 screws [1], and detach the rear cover (upper) [2].

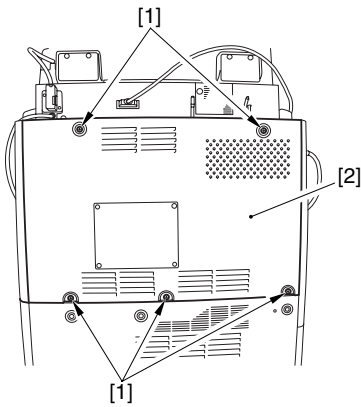

F-7-665

7.11.22.2 Removing the Right Cover (upper rear) 0004-1062


- 1) Detach the reader communications cable [1].
- 2) Remove the 2 screws [2], and detach the right cover (upper rear) [3].

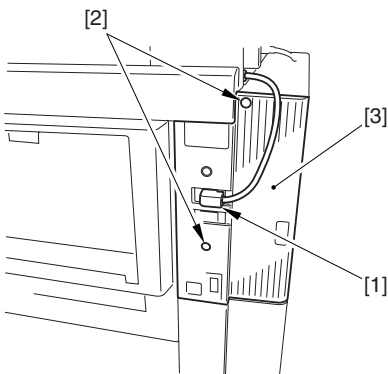

F-7-666


7.11.22.3 Sliding the DC Controller Box 0004-1065

1) Remove the 9 screws [1], and detach the DC controller cover [2].

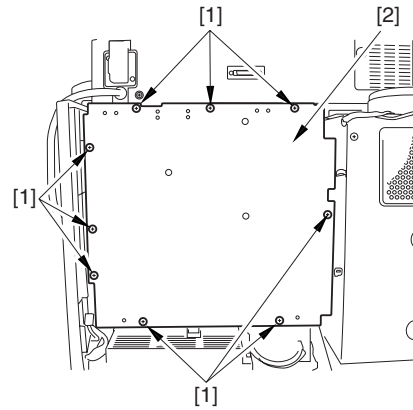

F-7-667

2) Remove the 6 screws [1], and slide the DC controller box [2] to the left.

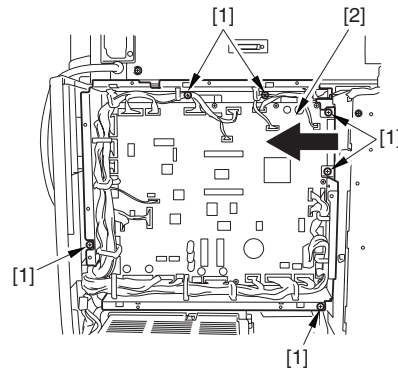


F-7-668

7.11.22.4 Removing the DC

Controller Box


0004-1068

- 1) Open the 3 cable guides [1], and free the harness [2].

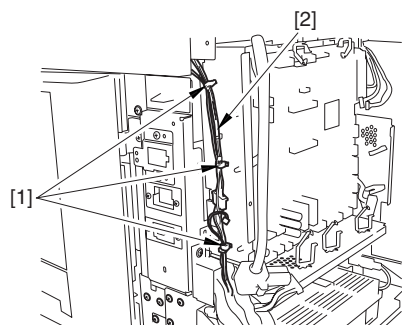


F-7-669

- 2) Disconnect the 33 connectors [1], and open that 13 cable guides [2]; then, free the harness [3].

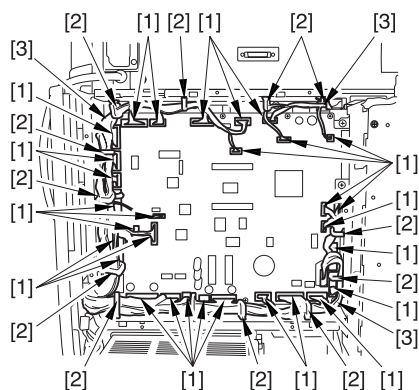

F-7-670

- 3) Lift the DC controller box [1] to detach.

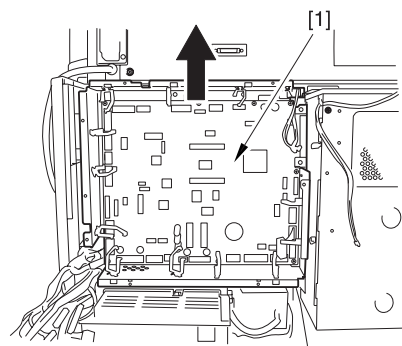

F-7-671

7.11.22.5 Points to Note When

Mounting the DC Controller


Box

0005-7220

⚠ During assembly work, be sure to connect the harness to the DC controller PCB as follows:

-Connect the connector of the harness [1] first, and then the other harness [2].

-Fix the harnesses [1] [2] in place using the wire saddle [3] so that the harness [1] is on the left side of the harness [2].

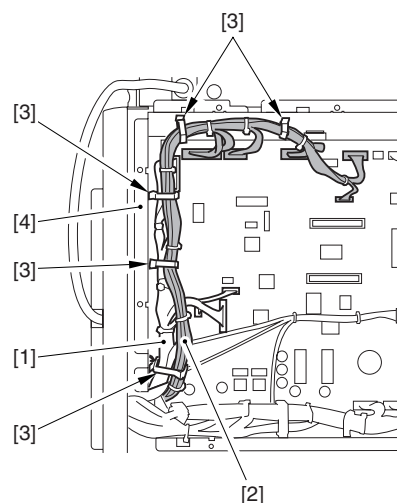

F-7-672

Supplementary Information:


If the harness [1] is away from the side plate [4] of the DC controller box, wrong detection (E070-0102) of the ITB home position tends to occur because of noise.

7.11.22.6 Removing the Color

Developing Clutch

0004-1071


1 Remove the 2 screws [1], and detach the fly wheel [2].

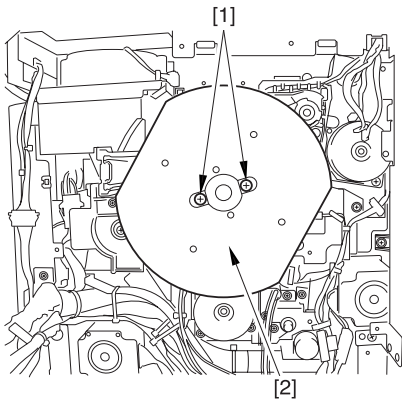

F-7-673

2) Remove the spring [1], and loosen the screw [2]; then, turn the tensioner [3] clockwise.


3) Detach the timing belt [4].

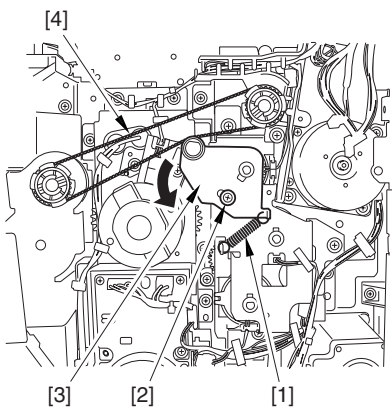

F-7-674


4) Disconnect the 3 connectors [1], and free the 3 harnesses [2] from the 6 cable guides [3].

5) Remove the 3 screws [4], and detach the side plate [5].

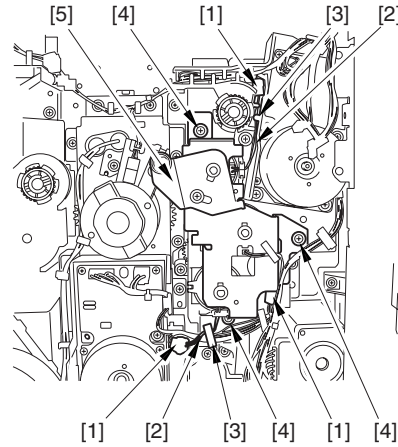

F-7-675

6) Remove the 2 E-rings [1], and detach the color developing clutch [2].

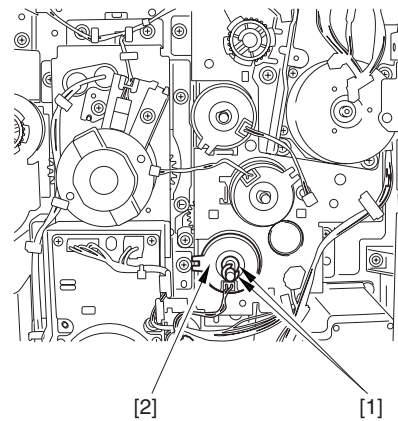

F-7-676


7.11.23 Cleaning Assembly

Scoop-Up Sheet

7.11.23.1 Removing the Right Cover (upper)

0003-8259

- 1) Remove the 2 screws [1], and detach the right cover (upper) [2].

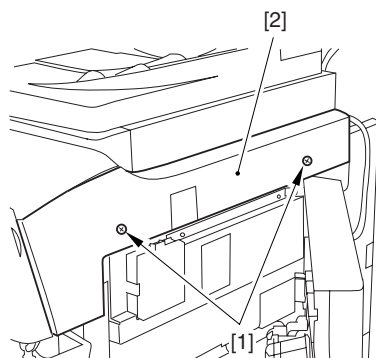


F-7-677

7.11.23.2 Releasing the Front Cover


0003-2851

- 1) Open the front cover.
- 2) While pulling on the grip [1], fully open the manual feed cover [2] to the front.

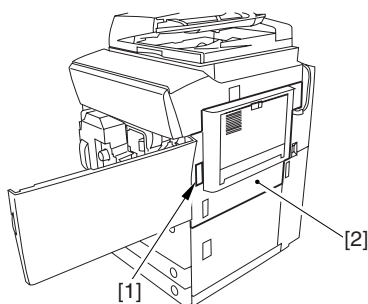


F-7-678

- ⚠ If a side paper deck exists, remove the 2 screws [1] and the latch plate (front)

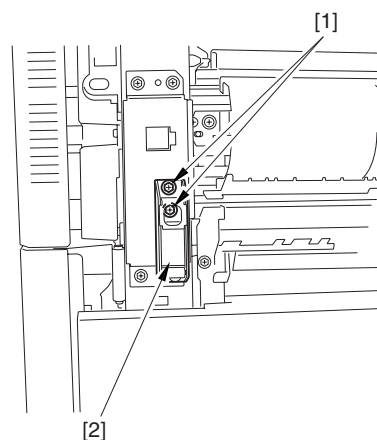


F-7-679

- 3) Slide out the fixing/feeding assembly
- 4) Remove the 2 screws [1], and detach the process unit cover [2].

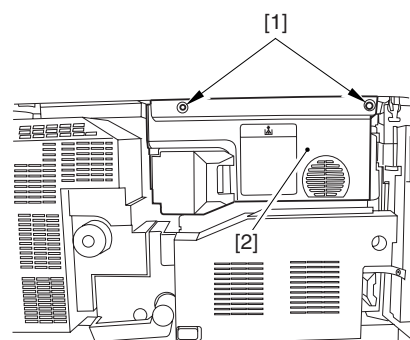


F-7-680

- 5) Push in the fixing/feeding assembly, and set the lever in place.
- 6) Push the release button [1] of the right deck, and slide out the right deck [2].

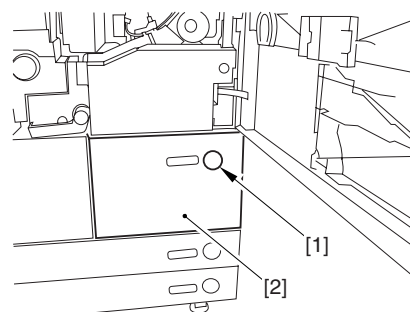


F-7-681

7) Remove the screw [1] from lower right, and detach the front cover strap [2].

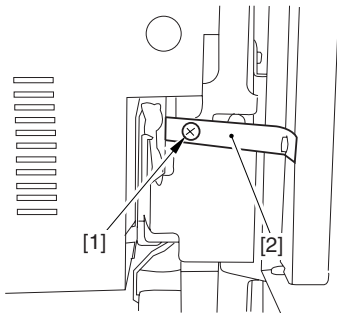


F-7-682

2) Shift down the lever [1], and detach the black toner bottle [2].

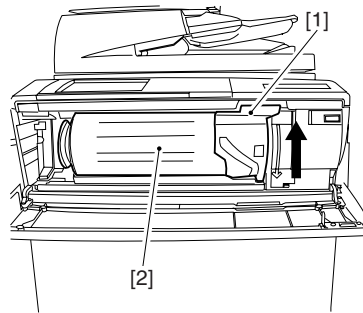


F-7-685

8) Remove the 2 screws [1] (binding) of the front cover hinge, and fully open the front cover [2].

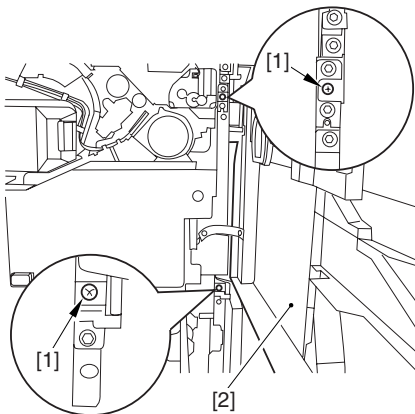

F-7-683

⚠ Once you have released the hopper assembly, toner can spill over the toner bottle supply mouth of the hopper assembly cover. Be sure to wipe off any such toner.

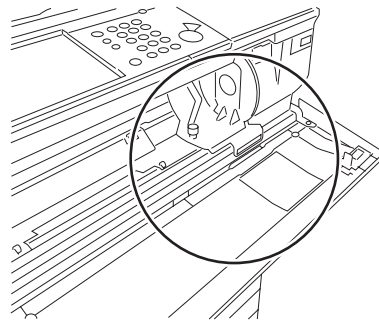


F-7-686

9) Close the right deck.

7.11.23.3 Releasing the Hopper Assembly


0003-2854

1) Open the black toner supply cover [1].

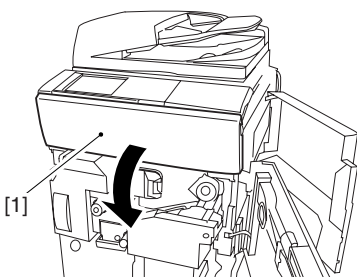


F-7-684

3) Remove the 3 screws [1].

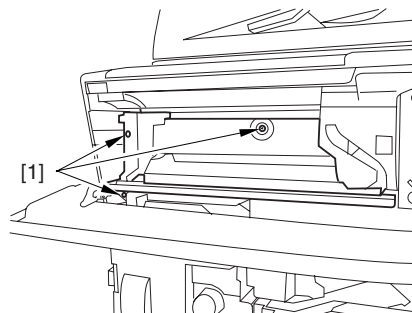

F-7-687


- 4) Close the black toner supply cover [1]; then, fully open the hopper assembly [2].

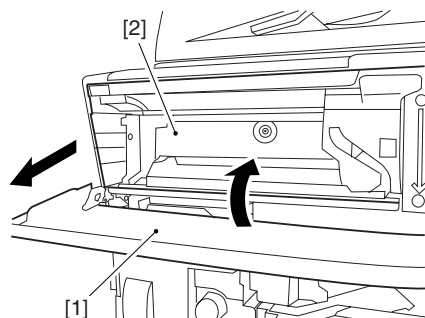

F-7-688

7.11.23.4 Removing the Pre-Transfer Charging Assembly [0003-2861](#)


- 1) Remove the screw [1], and disconnect the connector [1]; then, detach the pre-transfer charging assembly [3] from the machine.

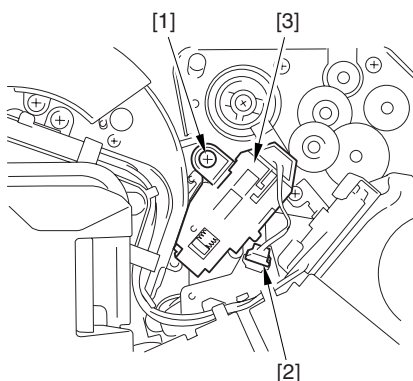

F-7-689


7.11.23.5 Removing the Transfer Cleaning Drive Assembly [0003-2855](#)

- 1) Open the color toner supply mouth cover [1].

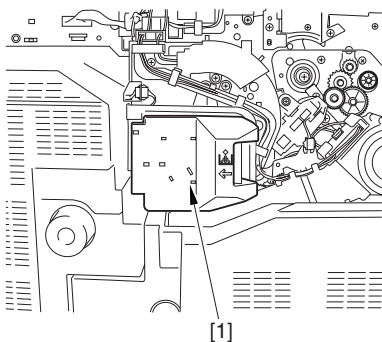


F-7-690

- 2) Disconnect the connector [1], and remove the screw [2]; then, detach the color toner supply cover [3].

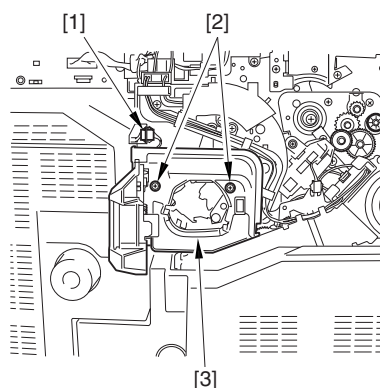


F-7-691

- 3) Slightly slide out the fixing/feeding assembly.
4) Disconnect the connector [1] to free it from the wire guide [2].

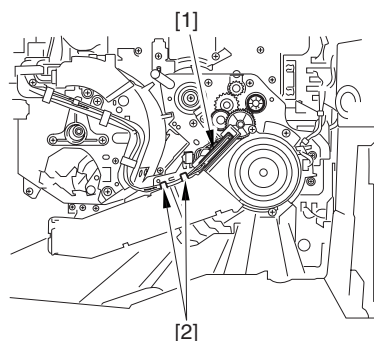


F-7-692

- 5) Remove the screw [1], and shift down the locking plate [2].

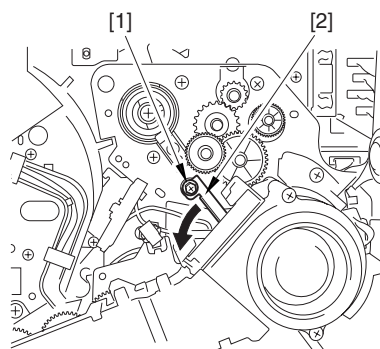

F-7-693

- 6) Disconnect the connector [1], and remove the 5 screws [2]; then, detach the transfer cleaner driver assembly [3].

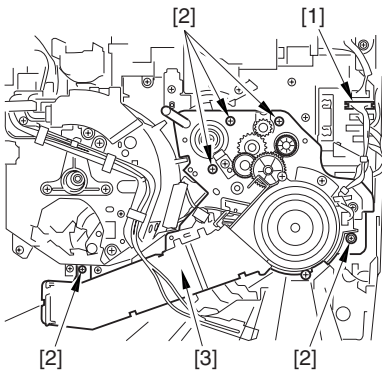


F-7-694

7.11.23.6 Removing the Intermediate Transfer Unit

0003-2856


- 1) Disconnect the 2 connectors [1].

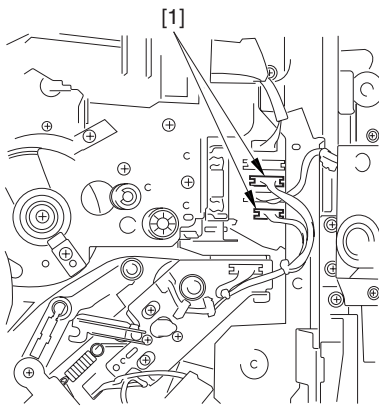

F-7-695

- 2) Fully slide out the fixing/feeding assembly.
- 3) Slide out the intermediate transfer assembly [1] to the front; when it stops, shift it slightly to the upper right and then slide it farther out to detach.

⚠ Do not touch the surface of the ITB. Also, be sure to slide the intermediate transfer assembly straight out so as to prevent damage to the surface of the ITB.

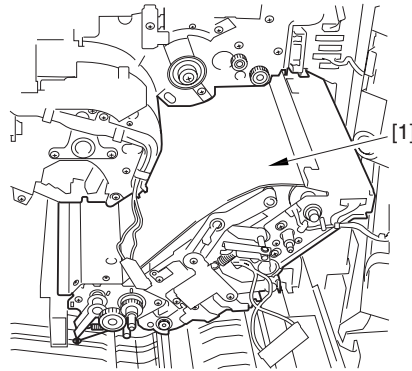


F-7-696

7.11.23.7 Cleaning the Surface of the Intermediate Transfer Unit


0006-0332

- 1) Place the ITB unit [1] on paper for protection.

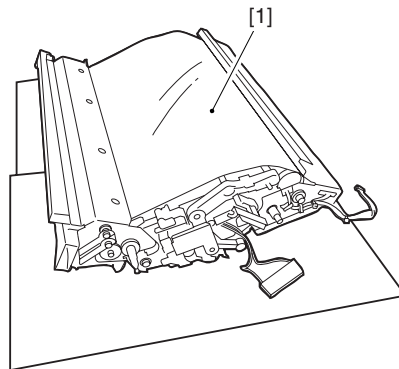


F-7-697

2) Turn the drive gear [1] by hand in the direction of the arrow to move the intermediate transfer belt [2] about 50 mm.

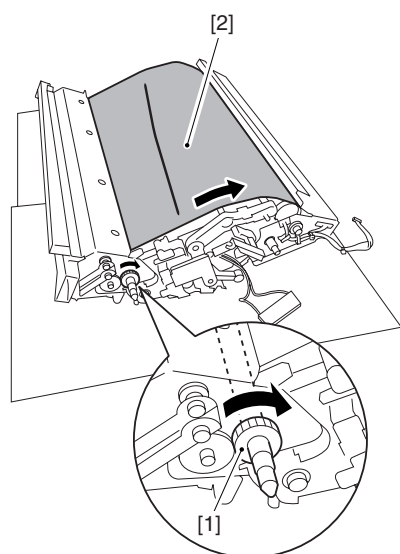


F-7-698

3) If there is any toner [3] on the surface of the intermediate transfer belt, dry wipe it with lint-free paper.

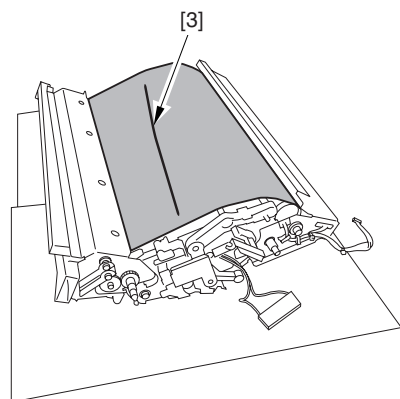

F-7-699

⚠ When you remove the transfer cleaner drive assembly, the ITB cleaning blade [1] is likely to come into contact with the intermediate transfer belt by the work of a spring, causing toner [2] to deposit on the belt surface in the form of lines. The toner can then be forced against the photosensitive drum by the primary transfer assembly, thus affecting the photosensitive drum cleaning blade [3].

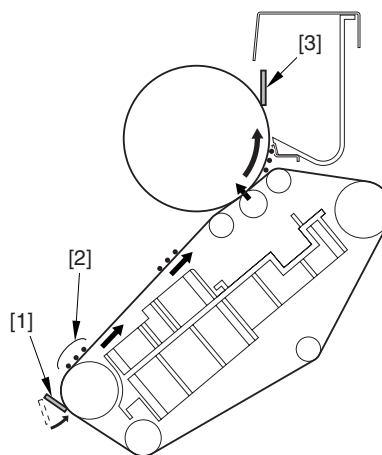


F-7-700

7.11.23.8 Sliding Out the Process Unit


0003-2857

1) Disconnect the 5 connectors [1] found at the upper right.

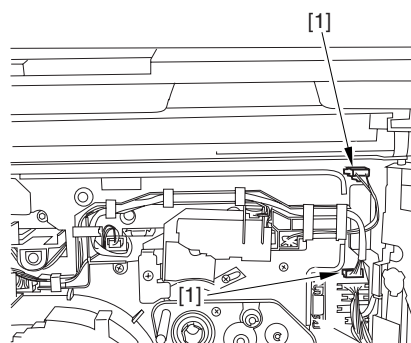


F-7-701

2) Disconnect the 5 connectors [1] found at the upper left.

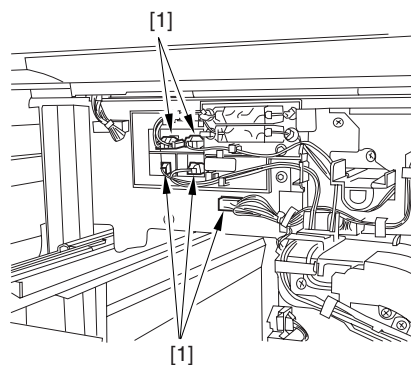


F-7-702

3) After freeing the high-voltage connector cable [1] from the 2 wire saddles [2], fix the cable in place using the cable hook [3].

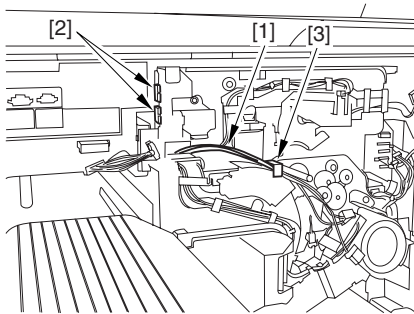

F-7-703

4) Take out the process unit cover [1] from the shipping box, and detach the drum stop tool [2] from the back of the cover.

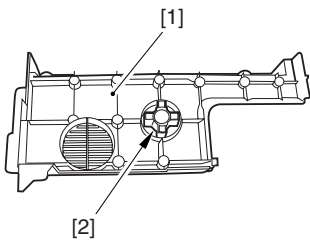


F-7-704

5) While forcing the drum stop tool [3] against the drum fixing member [2] of the drum shift [1], remove the fixing screw [4].



1: Be sure to match the protrusion [5] of the drum fixing member and the protrusion [6] of the drum stop tool.

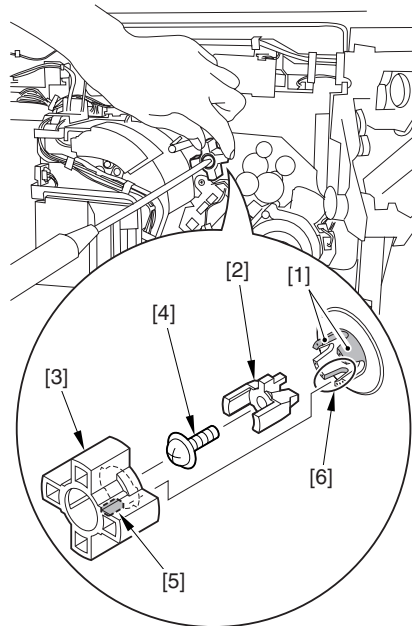


F-7-705

2: When drawing out the process unit, be sure to find out the position of the protrusion [1] of the drum fixing member in relation to the marking [2] on the drum flange.

In the example in the figure, the marking [2] on the drum flange is at "." on the left and at ".." on the right in relation to the protrusion [2] of the drum fixing member.


Moreover, when you close the process unit, it is important that the spatial relationship between the protrusion of the drum fixing member and the marking on the drum flange is as it was before you drew out the unit.

6) Using a pair of fine pliers, remove the drum fixing member [1].

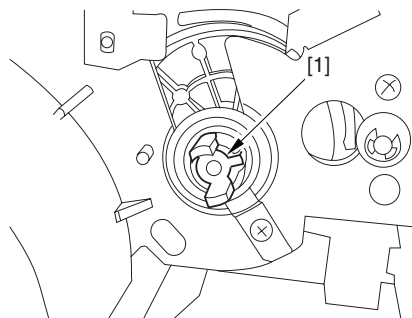


F-7-706

7) Remove the 3 binding screws (M4x8) [1].

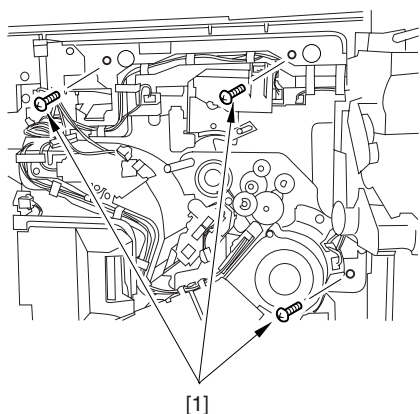


F-7-707

8) Shift down the fixing/feeding assembly releasing lever [1] in the direction of the arrow.

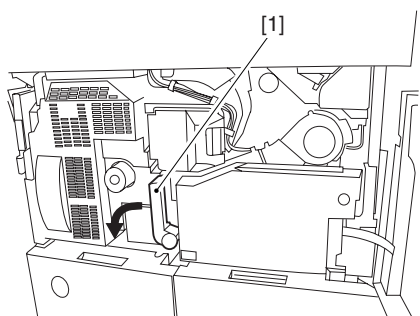


F-7-708

9) Slide out the fixing/feeding assembly [1] toward the front.

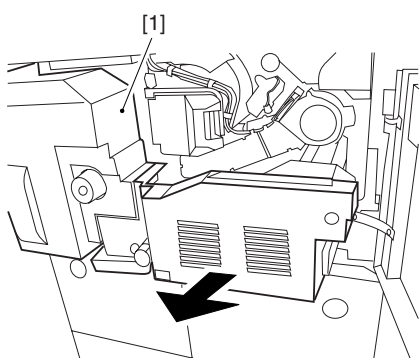


F-7-709

10) While pushing on the 2 hooks [1] found on both sides of the fixing/feeding assembly, fully slide out the fixing/feeding assembly [2].

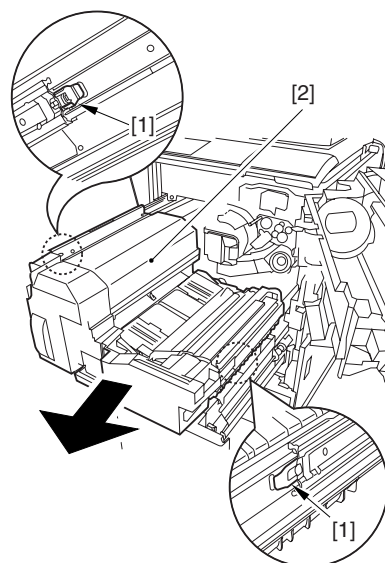

F-7-710


11) Slightly lift both ends [1] of the process unit, and fully slide out the process unit [2].

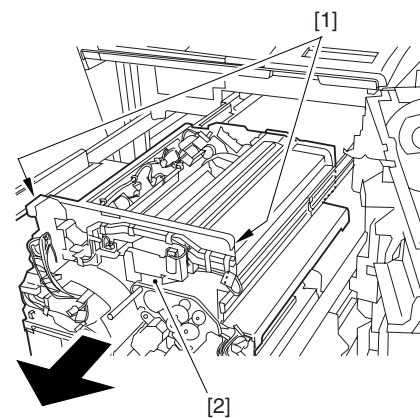


F-7-711

When you have slid out the process unit, check to see if any of the following parts is soiled with toner before fitting it back in; if soiled, dry wipe the part:

- entire surface of the deck top panel [1]
- front bend of the deck top panel [2]
- lower rear sheet (4 locations) of the fixing/feeding assembly [3].

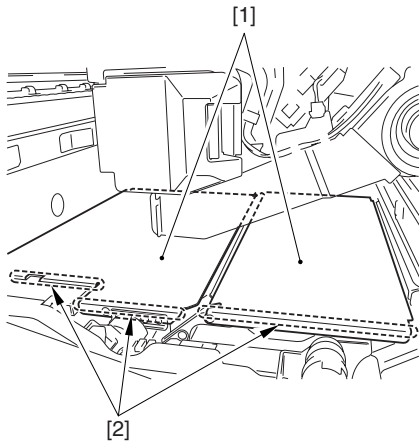

F-7-712

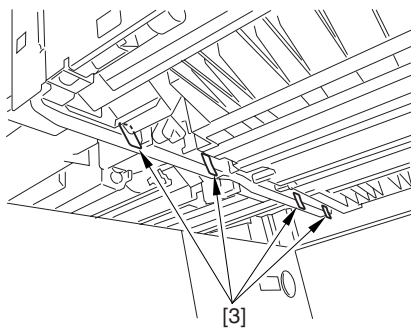


F-7-713

7.11.23.9 Removing the Photosensitive Drum Cleaning Scoop-Up Sheet

0002-5818

1) Remove the screw [1], and slide the photosensitive drum cleaning scoop-up sheet [2] toward the rear to detach.

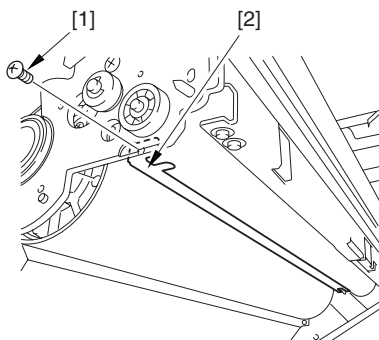


F-7-714

7.11.23.10 Mounting the Photosensitive Drum Cleaner Scoop-Up Sheet

0003-2876

1) Engage the hole found at the rear of the photosensitive drum scoop-up sheet [1] on the hook [2]: then, pull it toward the front and fix in place with a screw [3].

During the work, be sure that the tip of the scoop-up sheet is not bent between the cartridge and the photosensitive drum.

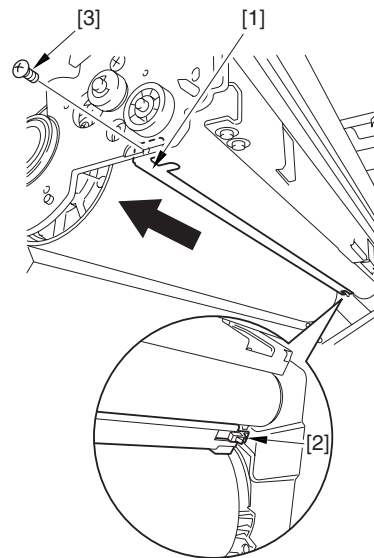

F-7-715

⚠ Making Checks After Mounting the Photosensitive Drum Scoop-Up Sheet

1. Be sure that the scoop-up sheet is not bent or broken from below.
2. Be sure that the photosensitive drum is rotated counterclockwise, NOT clockwise; failure to observe this will lead to bending or deformation of the scoop-up sheet.


7.11.24 Secondary Transfer Unit

7.11.24.1 Removing the Secondary Transfer Unit

0003-1968


- 1) Open the front cover.
- 2) Slide out the fixing/feeding assembly.

3) While pushing the 2 hooks [1] frond on both sides of the fixing/feeding assembly, slide out the fixing/feeding assembly [2] fully.

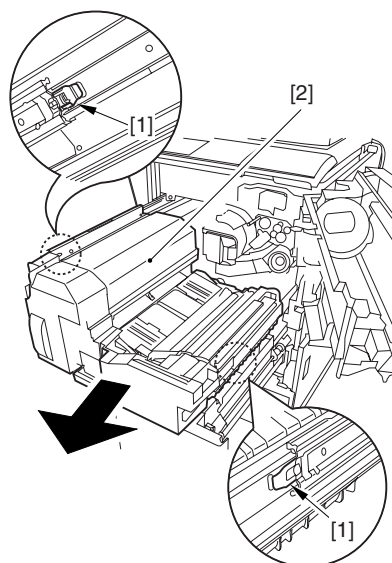


F-7-716

4) Remove the screw [1], and detach the connector cover [2].

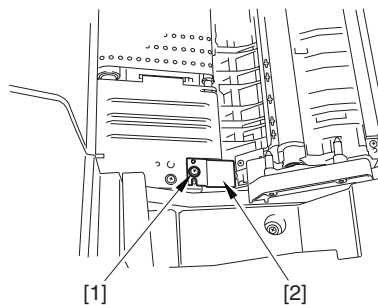


F-7-717

5) Disconnect the connector [1].

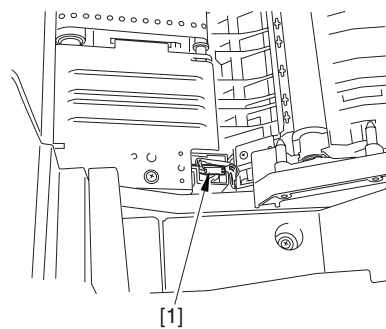


F-7-718

6) Remove the 2 stepped screws [1].

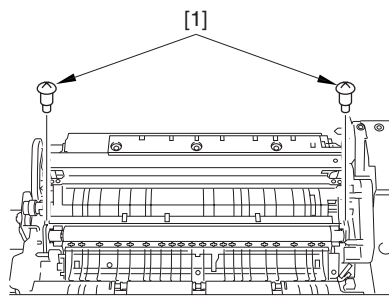

F-7-719

7) While shifting the secondary transfer unit [1], disconnect the 2 connectors [2]; then, detach the secondary transfer unit.

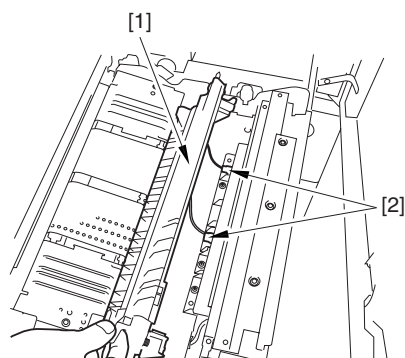


F-7-720

7.11.25 ITB Cleaning Unit

7.11.25.1 Removing the Right Cover (upper)

0003-8260

1) Remove the 2 screws [1], and detach the right cover (upper) [2].

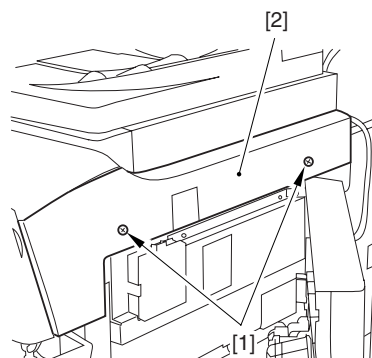


F-7-721

7.11.25.2 Releasing the Front Cover


0003-2532

- 1) Open the front cover.
- 2) While pulling on the grip [1], fully open the manual feed cover [2] to the front.

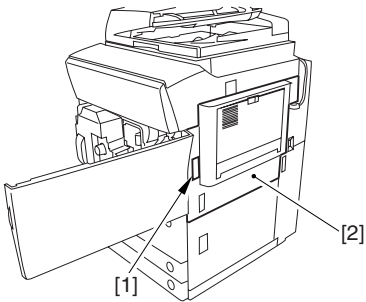


F-7-722

⚠ If a side paper deck exists, remove the 2 screws [1] and the latch plate (front)

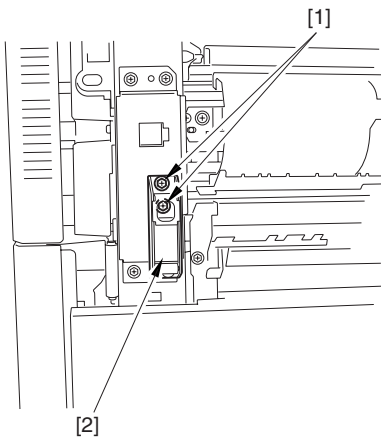


F-7-723

- 3) Slide out the fixing/feeding assembly
- 4) Remove the 2 screws [1], and detach the process unit cover [2].

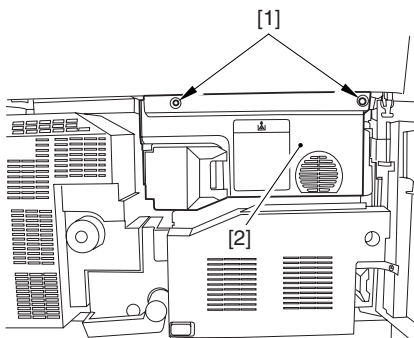


F-7-724

- 5) Push in the fixing/feeding assembly, and set the lever in place.
- 6) Push the release button [1] of the right deck, and slide out the right deck [2].

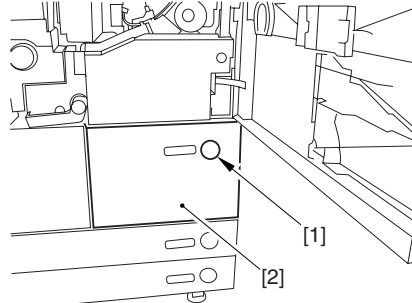


F-7-725

- 7) Remove the screw [1] from lower right, and detach the front cover strap [2].

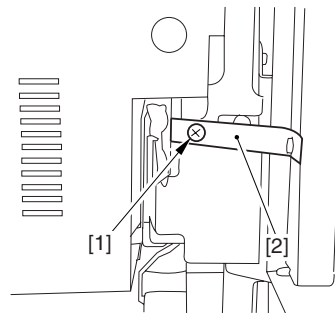

F-7-726

- 8) Remove the 2 screws [1] (binding) of the front cover hinge, and fully open the front cover [2].

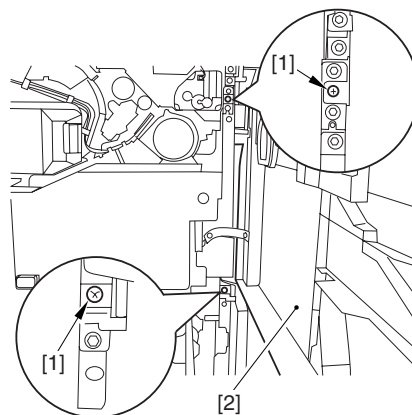

F-7-727


- 9) Close the right deck.

7.11.25.3 Releasing the Hopper

Assembly


0003-2533

- 1) Open the black toner supply cover [1].

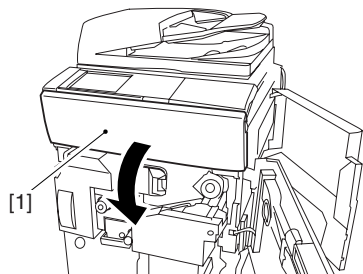


F-7-728

- 2) Shift down the lever [1], and detach the black toner bottle [2].

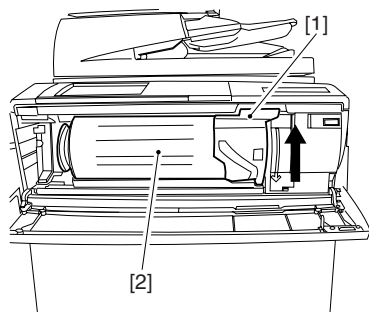


F-7-729

⚠ Once you have released the hopper assembly, toner can spill over the toner bottle supply mouth of the hopper assembly cover. Be sure to wipe off any such toner.

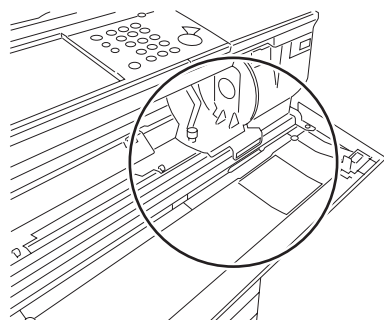


F-7-730

- 3) Remove the 3 screws [1].

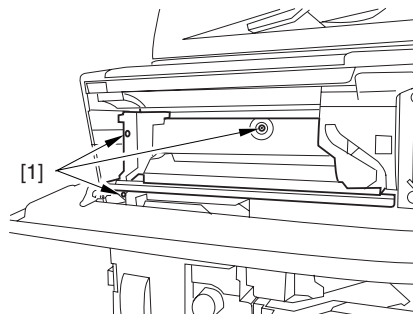

F-7-731

- 4) Close the black toner supply cover [1]; then, fully open the hopper assembly [2].

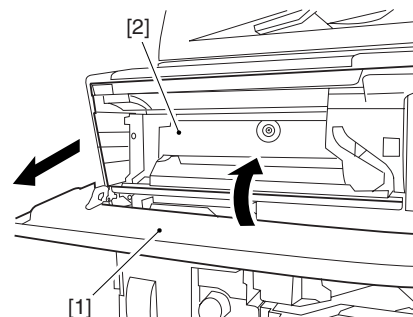


F-7-732

7.11.25.4 Removing the Pre-

Transfer Charging Assembly

0005-7255


- 1) Remove the screw [1], and disconnect the connector [1]; then, detach the pre-transfer charging assembly [3] from the machine.

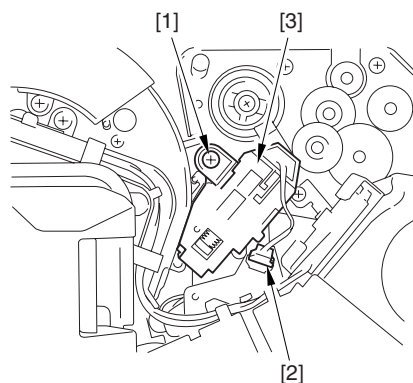

F-7-733


7.11.25.5 Removing the Transfer
Cleaning Drive Assembly 0003-2531

1) Open the color toner supply mouth cover [1].

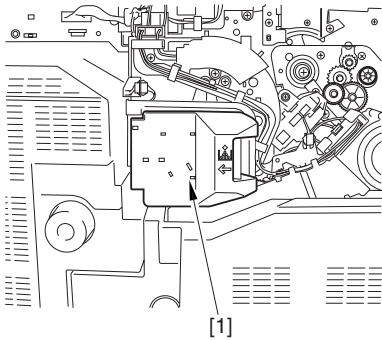


F-7-734

2) Disconnect the connector [1], and remove the screw [2]; then, detach the color toner supply cover [3].

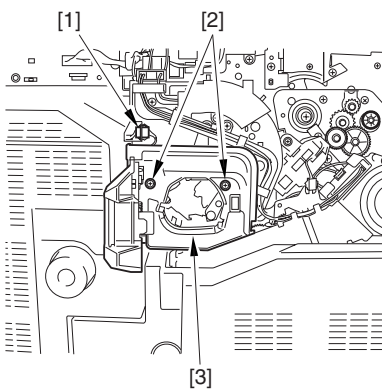


F-7-735

3) Slightly slide out the fixing/feeding assembly.
4) Disconcert the connector [1] to free it from the wire guide [2].

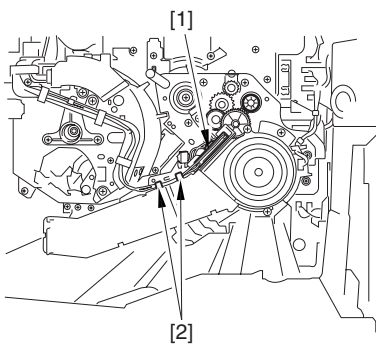


F-7-736

5) Remove the screw [1], and shift down the locking plate [2].

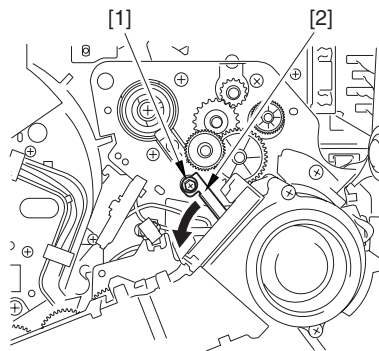

F-7-737


6) Disconnect the connector [1], and remove the 5 screws [2]; then, detach the transfer cleaner driver assembly [3].

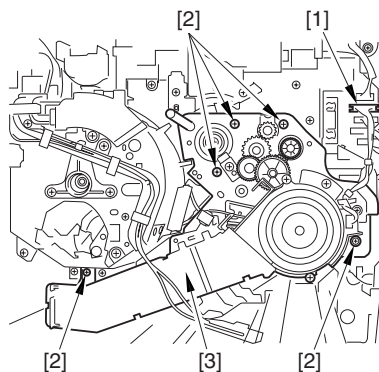

F-7-738

7.11.25.6 Removing the
Intermediate Transfer Unit 0003-2530


1) Disconnect the 2 connectors [1].

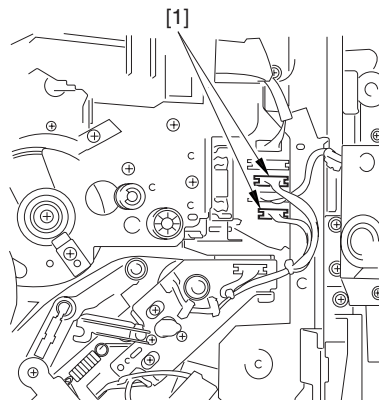

F-7-739

- 2) Fully slide out the fixing/feeding assembly.
- 3) Slide out the intermediate transfer assembly [1] to the front; when it stops, shift it slightly to the upper right and then slide it farther out to detach.

⚠ Do not touch the surface of the ITB. Also, be sure to slide the intermediate transfer assembly straight out so as to prevent damage to the surface of the ITB.

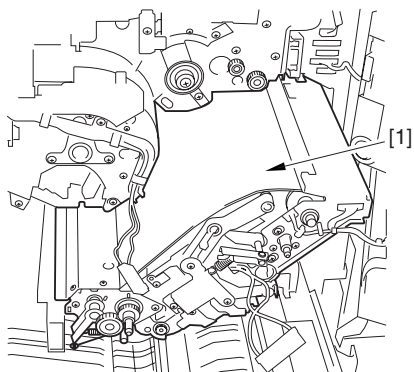


F-7-740

7.11.25.7 Cleaning the Surface of the Intermediate Transfer Unit


0005-9861

- 1) Place the ITB unit [1] on paper for protection.

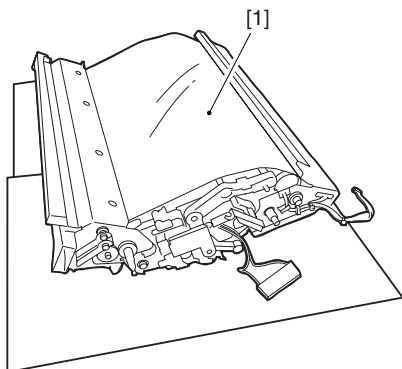


F-7-741

- 2) Turn the drive gear [1] by hand in the direction of the arrow to move the intermediate transfer belt [2] about 50 mm.

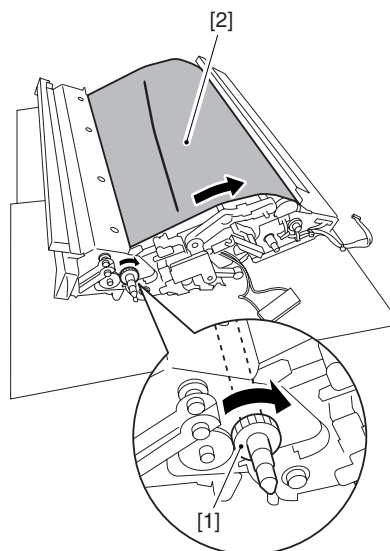


F-7-742

- 3) If there is any toner [3] on the surface of the intermediate transfer belt, dry wipe it with lint-free paper.

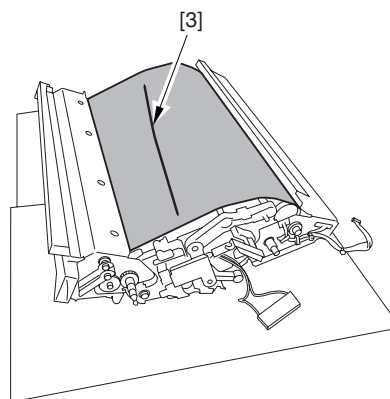

F-7-743

⚠When you remove the transfer cleaner drive assembly, the ITB cleaning blade [1] is likely to come into contact with the intermediate transfer belt by the work of a spring, causing toner [2] to deposit on the belt surface in the form of lines. The toner can then be forced against the photosensitive drum by the primary transfer assembly, thus affecting the photosensitive drum cleaning blade [3].

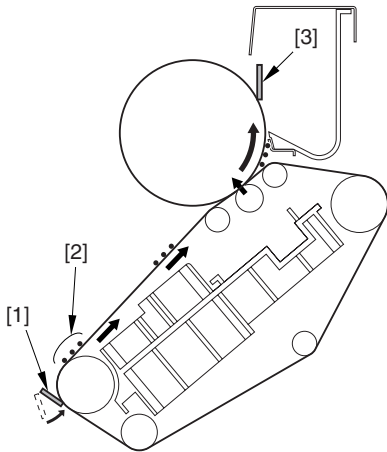


F-7-744

7.11.25.8 Removing the ITB

Cleaning Unit

0002-6349

1) Remove the 2 screws [1]; then, slide the ITB cleaning unit [2] in the direction of the arrow to detach.

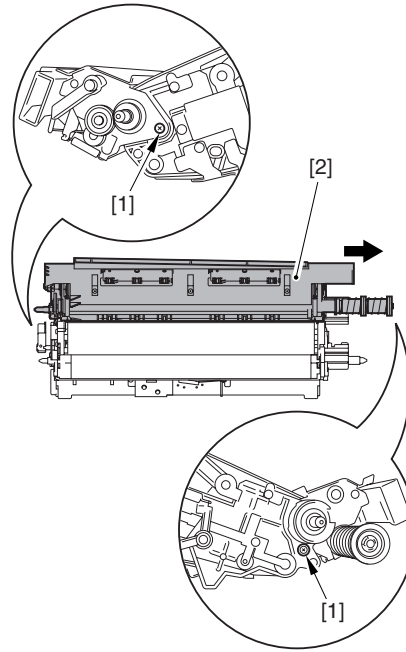

F-7-745


7.11.26 ITB Cleaner End Scraper

7.11.26.1 Removing the Right

Cover (upper)

0005-9396

- 1) Remove the 2 screws [1], and detach the right cover (upper) [2].

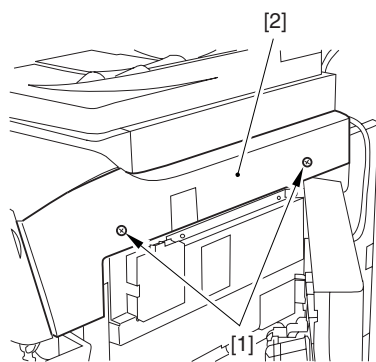


F-7-746

7.11.26.2 Releasing the Front

Cover


0005-9397

- 1) Open the front cover.
- 2) While pulling on the grip [1], fully open the manual feed cover [2] to the front.

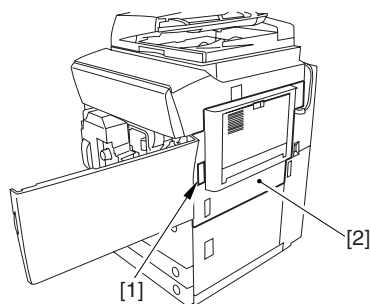


F-7-747

- ⚠ If a side paper deck exists, remove the 2 screws [1] and the latch plate (front)

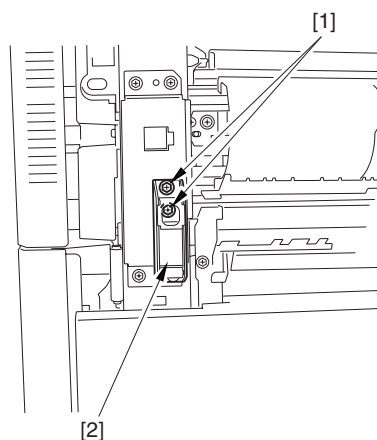


F-7-748

- 3) Slide out the fixing/feeding assembly
- 4) Remove the 2 screws [1], and detach the process unit cover [2].

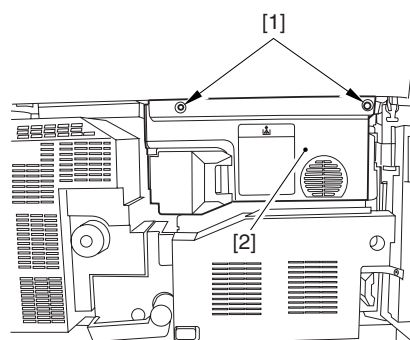


F-7-749

- 5) Push in the fixing/feeding assembly, and set the lever in place.
- 6) Push the release button [1] of the right deck, and slide out the right deck [2].

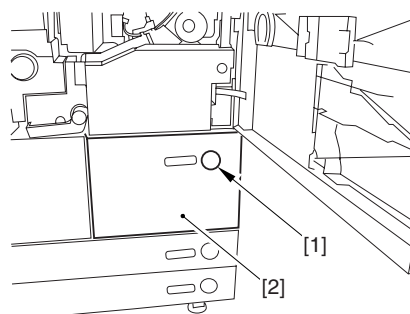


F-7-750

7) Remove the screw [1] from lower right, and detach the front cover strap [2].

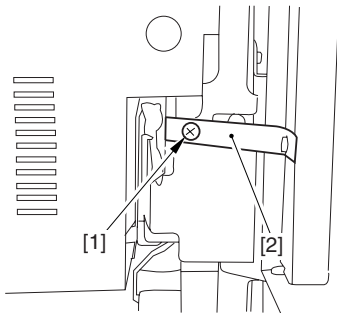


F-7-751

2) Shift down the lever [1], and detach the black toner bottle [2].

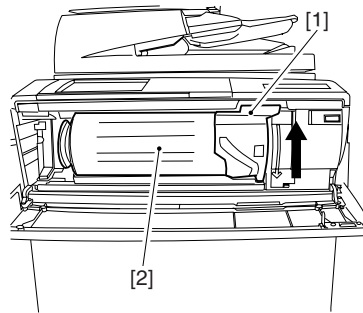


F-7-754

8) Remove the 2 screws [1] (binding) of the front cover hinge, and fully open the front cover [2].

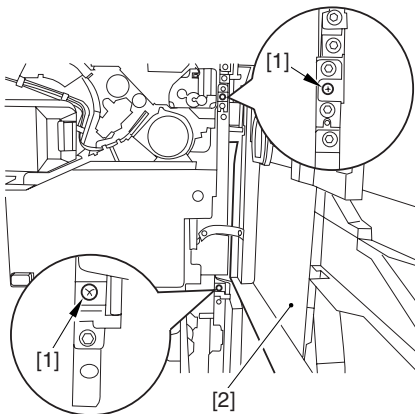

F-7-752

⚠ Once you have released the hopper assembly, toner can spill over the toner bottle supply mouth of the hopper assembly cover. Be sure to wipe off any such toner.

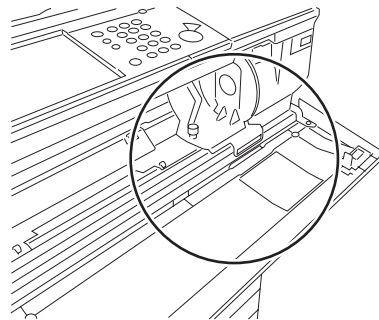


F-7-755

9) Close the right deck.

7.11.26.3 Releasing the Hopper Assembly


0005-9398

1) Open the black toner supply cover [1].

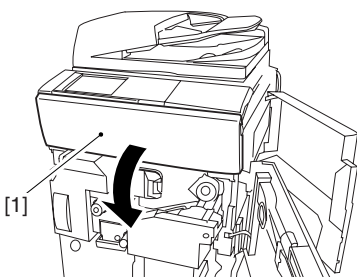


F-7-753

3) Remove the 3 screws [1].

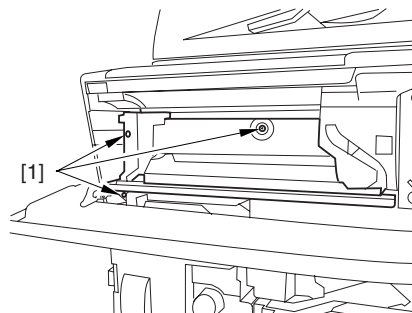

F-7-756

- 4) Close the black toner supply cover [1]; then, fully open the hopper assembly [2].

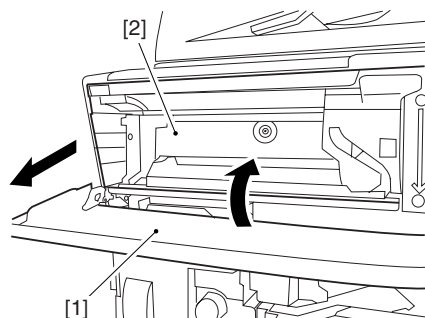


F-7-757

7.11.26.4 Removing the Pre-Transfer

Charging Assembly

0006-1403

- 1) Remove the screw [1], and disconnect the connector [1]; then, detach the pre-transfer charging assembly [3] from the machine.

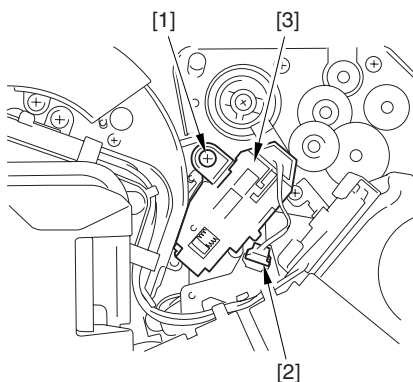


F-7-758

7.11.26.5 Removing the Transfer

Cleaning Drive Assembly


0005-9402

- 1) Open the color toner supply mouth cover [1].

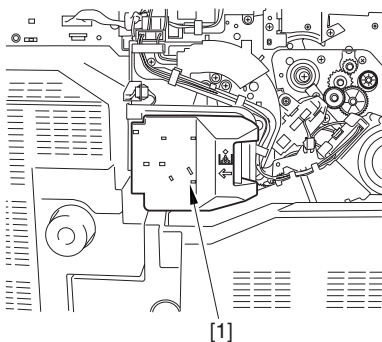


F-7-759

- 2) Disconnect the connector [1], and remove the screw [2]; then, detach the color toner supply cover [3].

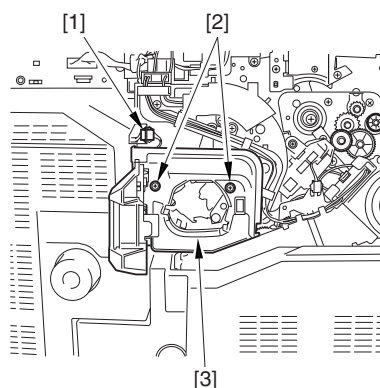


F-7-760

- 3) Slightly slide out the fixing/feeding assembly.
4) Disconnect the connector [1] to free it from the wire guide [2].

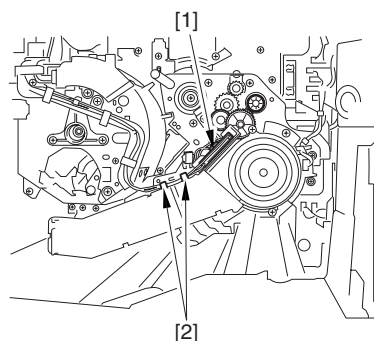


F-7-761

- 5) Remove the screw [1], and shift down the locking plate [2].

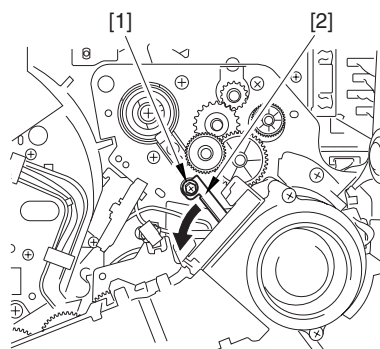

F-7-762

6) Disconnect the connector [1], and remove the 5 screws [2]; then, detach the transfer cleaner driver assembly [3].

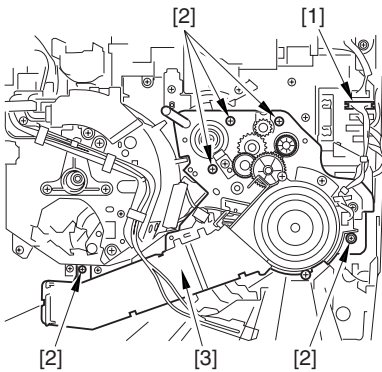


F-7-763

7.11.26.6 Removing the Intermediate Transfer Unit

0005-9400


1) Disconnect the 2 connectors [1].

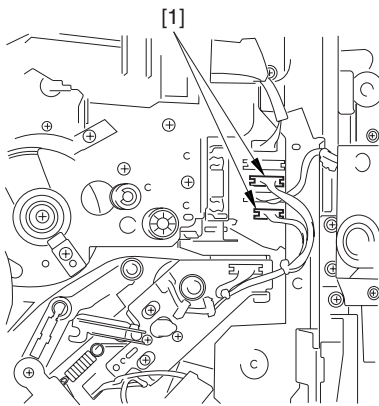

F-7-764

2) Fully slide out the fixing/feeding assembly.
 3) Slide out the intermediate transfer assembly [1] to the front; when it stops, shift it slightly to the upper right and then slide it farther out to detach.

⚠ Do not touch the surface of the ITB. Also, be sure to slide the intermediate transfer assembly straight out so as to prevent damage to the surface of the ITB.

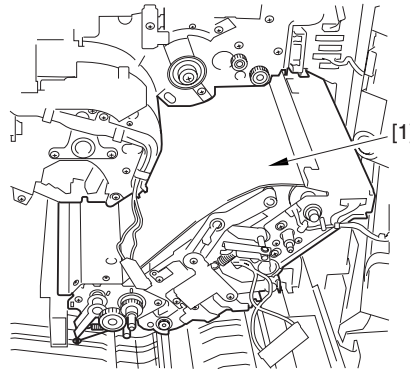


F-7-765

7.11.26.7 Cleaning the Surface of the Intermediate Transfer Unit


0006-0340

1) Place the ITB unit [1] on paper for protection.

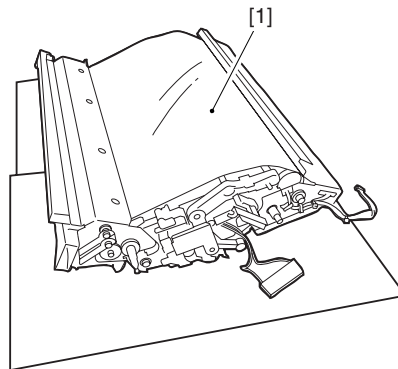


F-7-766

2) Turn the drive gear [1] by hand in the direction of the arrow to move the intermediate transfer belt [2] about 50 mm.

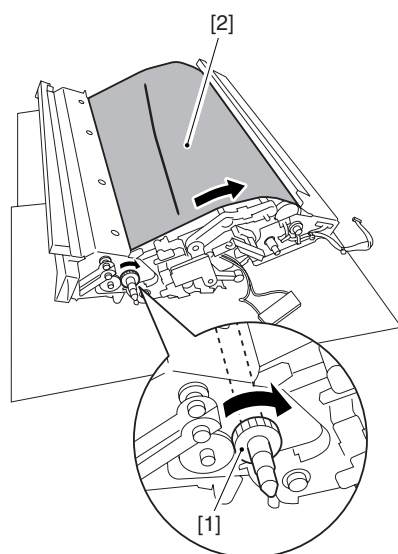


F-7-767

3) If there is any toner [3] on the surface of the intermediate transfer belt, dry wipe it with lint-free paper.

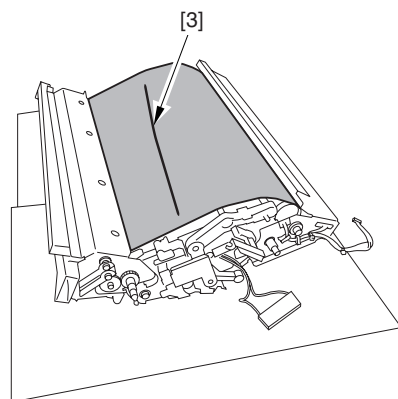

F-7-768

⚠ When you remove the transfer cleaner drive assembly, the ITB cleaning blade [1] is likely to come into contact with the intermediate transfer belt by the work of a spring, causing toner [2] to deposit on the belt surface in the form of lines. The toner can then be forced against the photosensitive drum by the primary transfer assembly, thus affecting the photosensitive drum cleaning blade [3].

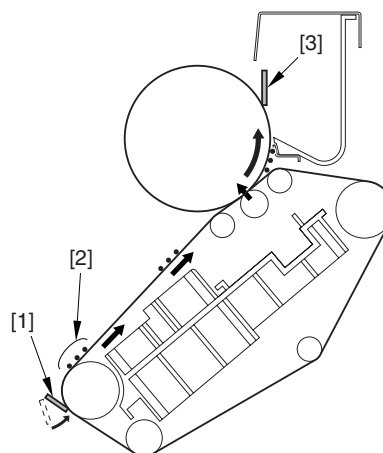


F-7-769

7.11.26.8 Removing the ITB

Cleaning Unit

0005-9401

1) Remove the 2 screws [1]; then, slide the ITB cleaning unit [2] in the direction of the arrow to detach.

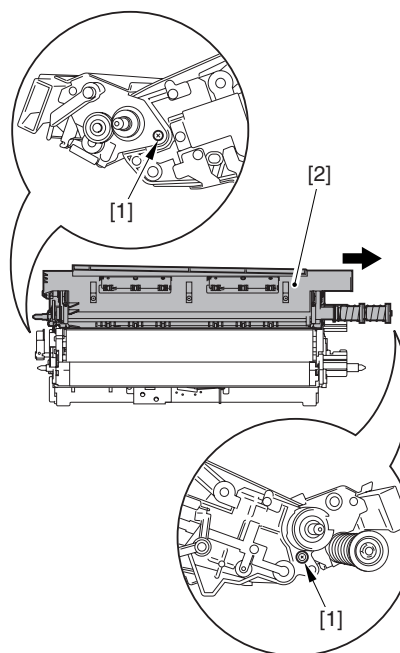


F-7-770

7.11.26.9 Removing the ITB

Cleaner End Scraper 0005-9394

1) Detach the 2 end scrapers [1] by peeling off the 2 strips of double-sided tape.

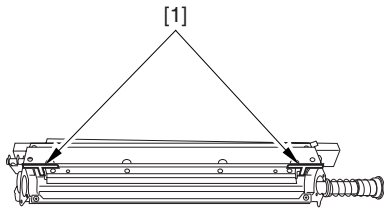


F-7-771

⚠ Points to Note When Mounting the End Scraper
Clean the area from where you have detached the end scraper with alcohol so that adhesive from the double-sided tape will not remain.

7.11.26.10 Mounting the ITB

Cleaner End Scraper 0005-9395

Peel the 2 strips of double-sided tape from the end scraper [1]; then, attach the 2 end scrapers [1] by aligning their edges against the ends of the ITB cleaner plate.

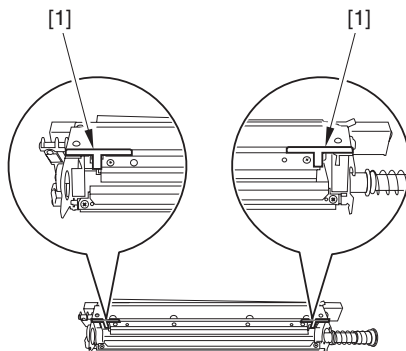


F-7-772

⚠ Points to Note When Mounting the End Scraper
Before starting the work, be sure to clean the area with alcohol so that no adhesive will remain.

7.11.27 Intermediate Transfer Unit

7.11.27.1 Removing the Right Cover (upper) 0003-8261


1) Remove the 2 screws [1], and detach the right cover (upper) [2].

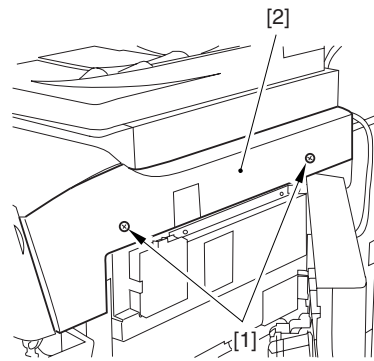

F-7-773


7.11.27.2 Releasing the Front Cover 0003-2484

1) Open the front cover.
2) While pulling on the grip [1], fully open the manual feed cover [2] to the front.

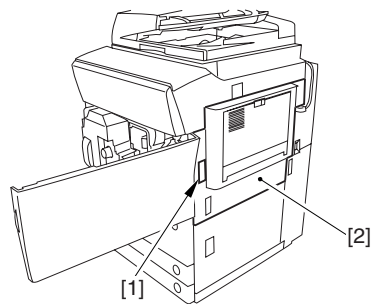


F-7-774

⚠ If a side paper deck exists, remove the 2 screws [1] and the latch plate (front)

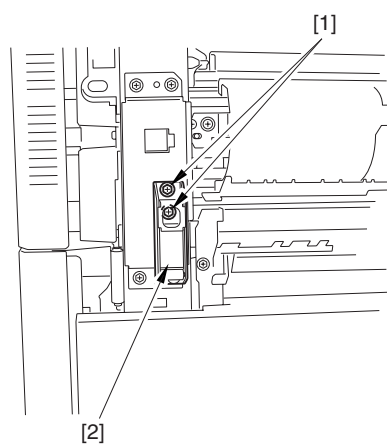


F-7-775

- 3) Slide out the fixing/feeding assembly
- 4) Remove the 2 screws [1], and detach the process unit cover [2].

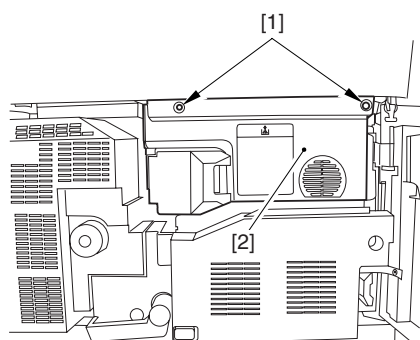


F-7-776

- 5) Push in the fixing/feeding assembly, and set the lever in place.
- 6) Push the release button [1] of the right deck, and slide out the right deck [2].

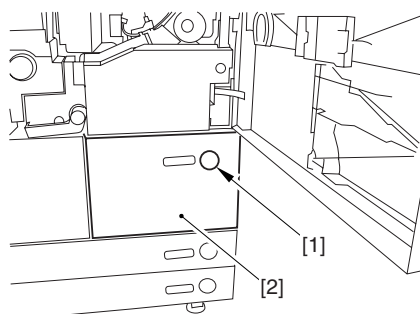


F-7-777

7) Remove the screw [1] from lower right, and detach the front cover strap [2].

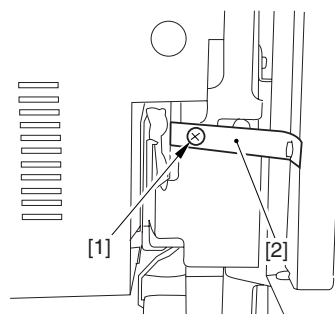

F-7-778

8) Remove the 2 screws [1] (binding) of the front cover hinge, and fully open the front cover [2].

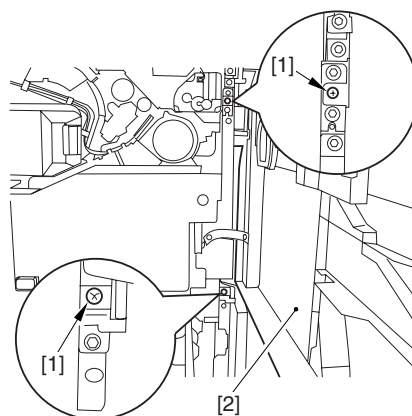


F-7-779

9) Close the right deck.

7.11.27.3 Releasing the Hopper Assembly


0003-2485

1) Open the black toner supply cover [1].

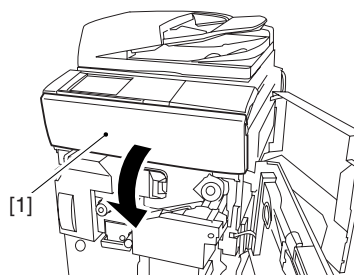


F-7-780

2) Shift down the lever [1], and detach the black toner bottle [2].

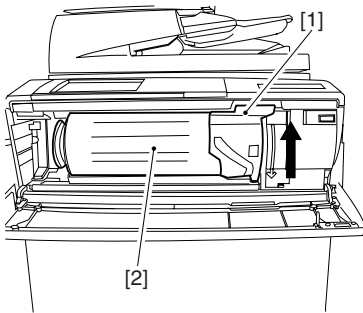


F-7-781

4) Close the black toner supply cover [1]; then, fully open the hopper assembly [2].

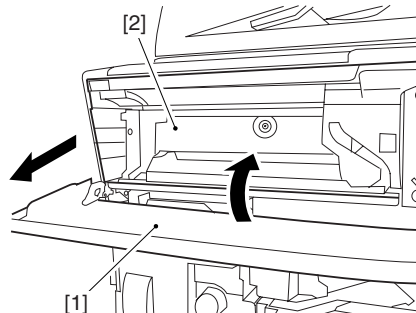


F-7-784

⚠Once you have released the hopper assembly, toner can spill over the toner bottle supply mouth of the hopper assembly cover. Be sure to wipe off any such toner.

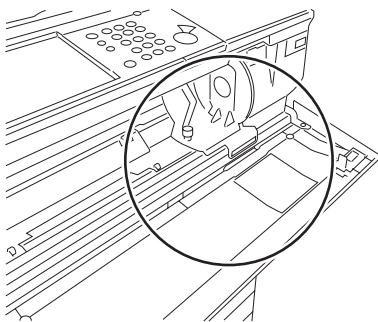

F-7-782


3) Remove the 3 screws [1].

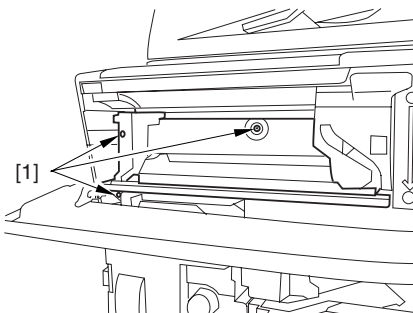

F-7-783

7.11.27.4 Removing the Pre-Transfer Charging Assembly 0005-7254


1) Remove the screw [1], and disconnect the connector [1]; then, detach the pre-transfer charging assembly [3] from the machine.

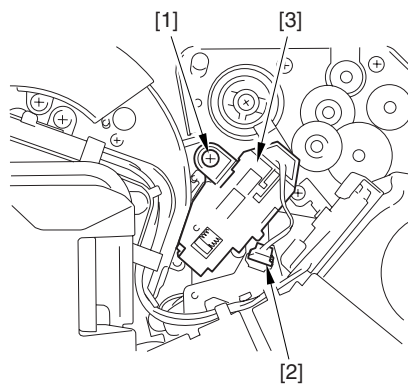

F-7-785


7.11.27.5 Removing the Transfer Cleaner Drive Assembly 0003-2456

1) Open the color toner supply mouth cover [1].

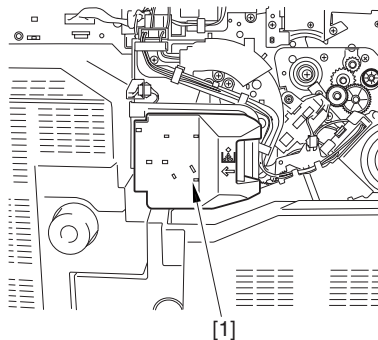


F-7-786

- 2) Disconnect the connector [1], and remove the screw [2]; then, detach the color toner supply cover [3].

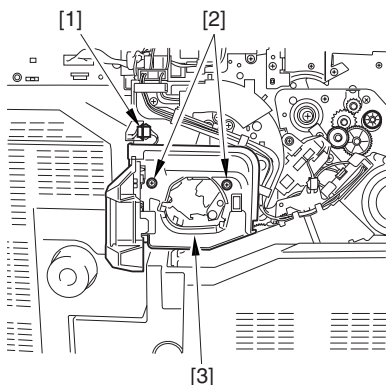


F-7-787

- 3) Slightly slide out the fixing/feeding assembly.
4) Disconnect the connector [1] to free it from the wire guide [2].

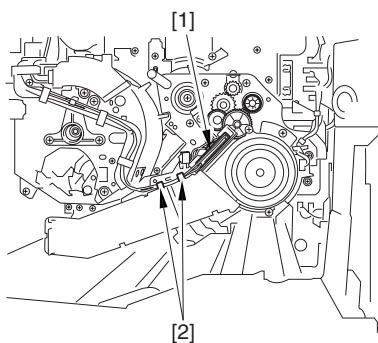


F-7-788

- 5) Remove the screw [1], and shift down the locking plate [2].

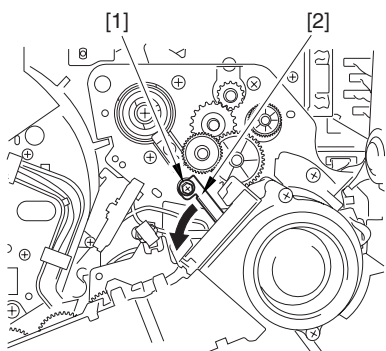

F-7-789


- 6) Disconnect the connector [1], and remove the 5 screws [2]; then, detach the transfer cleaner driver assembly [3].

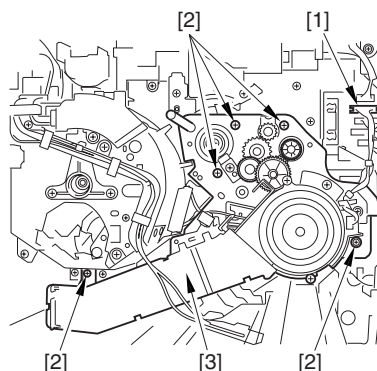

F-7-790

7.11.27.6 Removing the Intermediate Transfer Unit 0002-6336


- 1) Disconnect the 2 connectors [1].

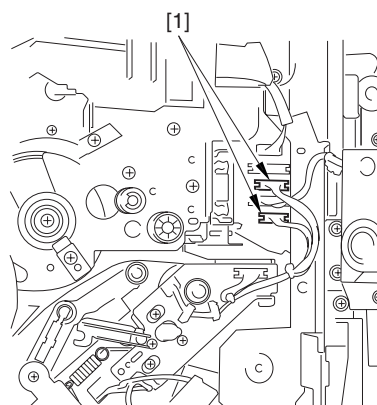

F-7-791


- 2) Fully slide out the fixing/feeding assembly.
- 3) Slide out the intermediate transfer assembly [1] to the front; when it stops, shift it slightly to the upper right and then slide it farther out to detach.

⚠ Do not touch the surface of the ITB. Also, be sure to slide the intermediate transfer assembly straight out so as to prevent damage to the surface of the ITB.

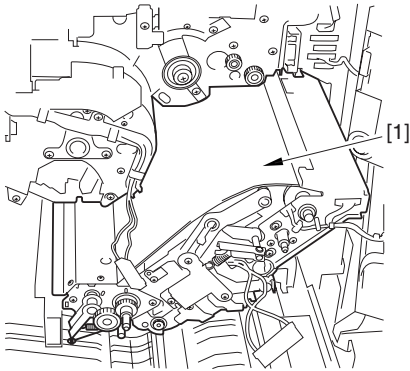

F-7-792


- 2) Turn the drive gear [1] by hand in the direction of the arrow to move the intermediate transfer belt [2] about 50 mm.

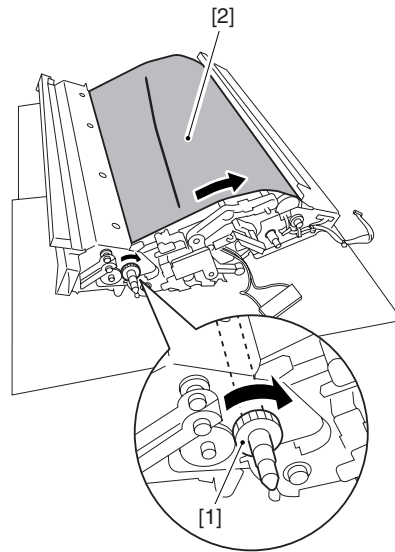

F-7-794


7.11.27.7 Cleaning the Surface of the Intermediate Transfer Unit 0005-9403

- 1) Place the ITB unit [1] on paper for protection.

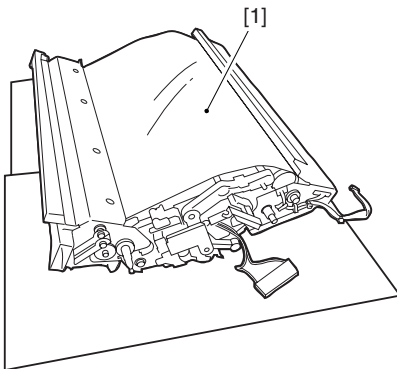


F-7-793

- 3) If there is any toner [3] on the surface of the intermediate transfer belt, dry wipe it with lint-free paper.

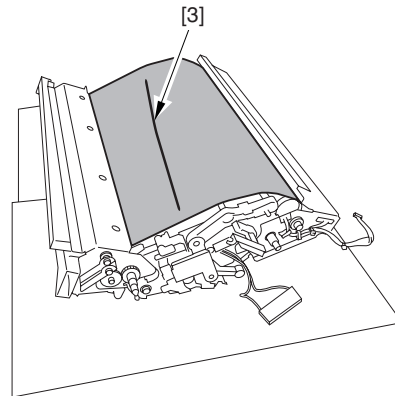

F-7-795

⚠ When you remove the transfer cleaner drive assembly, the ITB cleaning blade [1] is likely to come into contact with the intermediate transfer belt by the work of a spring, causing toner [2] to deposit on the belt surface in the form of lines. The toner can then be forced against the photosensitive drum by the primary transfer assembly, thus affecting the photosensitive drum cleaning blade [3].

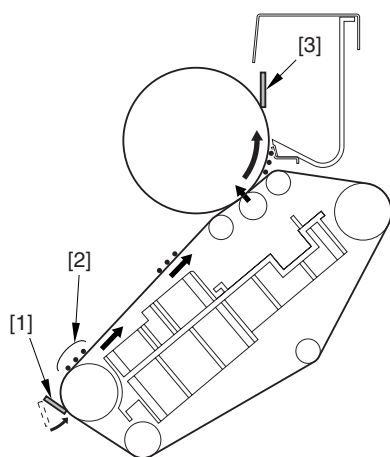

F-7-796

7.11.27.8 Points to Note When Replacing the Intermediate Transfer Unit

0002-6338

1. When replacing the intermediate transfer unit, be sure to hold it by both its ends (10 mm from either edge), avoiding its imaging area.

If its image area is soiled, be sure to clean the area using lint-free paper coated with a small amount of black toner.


2. Be sure to keep a clean sheet of print paper under the intermediate transfer unit during the work.

7.11.28 Intermediate Transfer Belt

7.11.28.1 Removing the Right Cover (upper)

0003-8264

1) Remove the 2 screws [1], and detach the right cover (upper) [2].

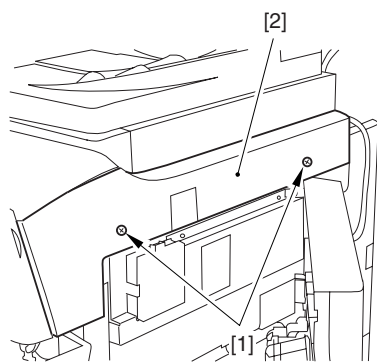


F-7-797

7.11.28.2 Releasing the Front Cover


0003-2578

1) Open the front cover.
2) While pulling on the grip [1], fully open the manual feed cover [2] to the front.

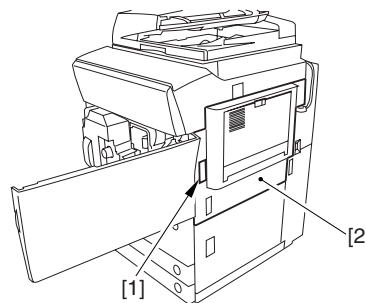


F-7-798

⚠ If a side paper deck exists, remove the 2 screws [1] and the latch plate (front)

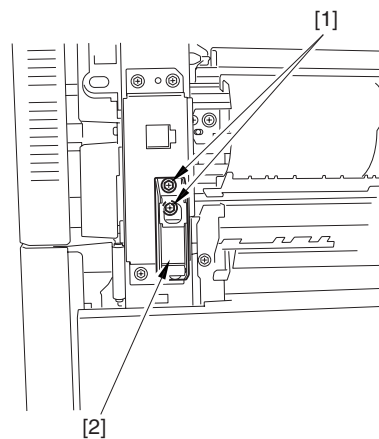


F-7-799

3) Slide out the fixing/feeding assembly
4) Remove the 2 screws [1], and detach the process unit cover [2].

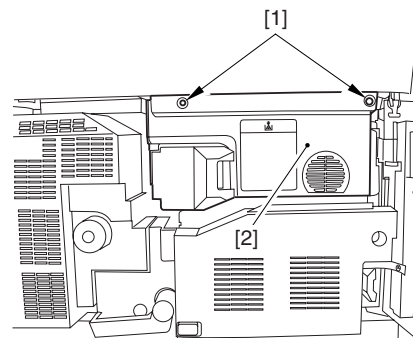


F-7-800

- 5) Push in the fixing/feeding assembly, and set the lever in place.
- 6) Push the release button [1] of the right deck, and slide out the right deck [2].

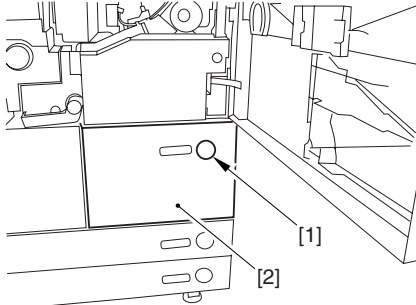


F-7-801

- 7) Remove the screw [1] from lower right, and detach the front cover strap [2].

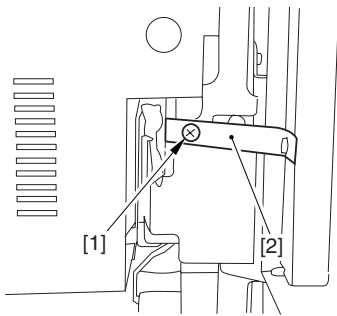

F-7-802

- 8) Remove the 2 screws [1] (binding) of the front cover hinge, and fully open the front cover [2].

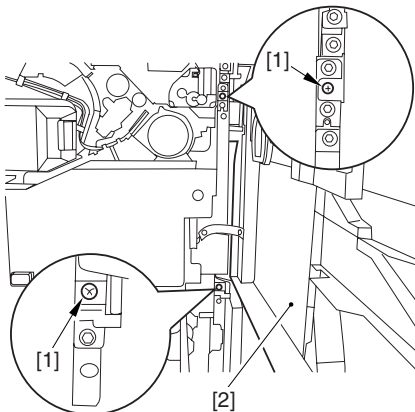

F-7-803


- 9) Close the right deck.

7.11.28.3 Releasing the Hopper

Assembly


0003-2580

- 1) Open the black toner supply cover [1].

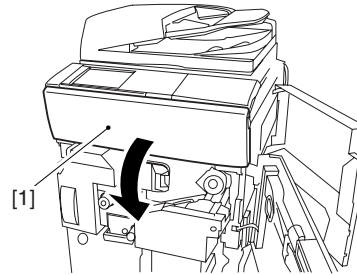


F-7-804

- 2) Shift down the lever [1], and detach the black toner bottle [2].

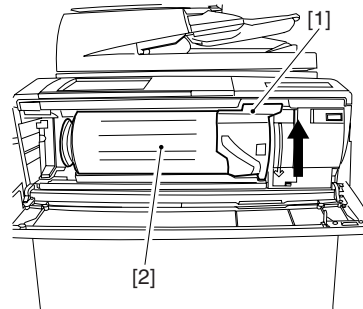


F-7-805

⚠ Once you have released the hopper assembly, toner can spill over the toner bottle supply mouth of the hopper assembly cover. Be sure to wipe off any such toner.

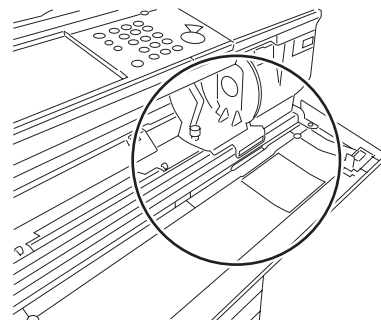


F-7-806

3) Remove the 3 screws [1].

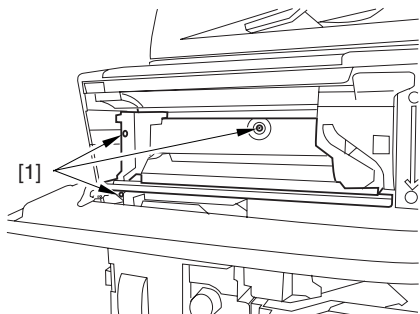

F-7-807


4) Close the black toner supply cover [1]; then, fully open the hopper assembly [2].

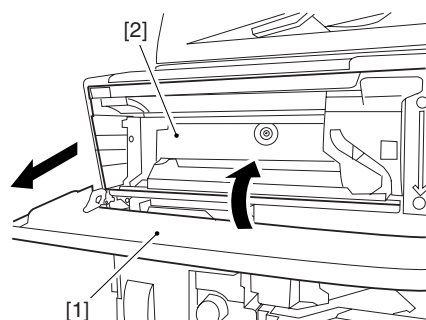

F-7-808

7.11.28.4 Removing the Pre-Transfer Charging Assembly [0005-7256](#)


1) Remove the screw [1], and disconnect the connector [1]; then, detach the pre-transfer charging assembly [3] from the machine.

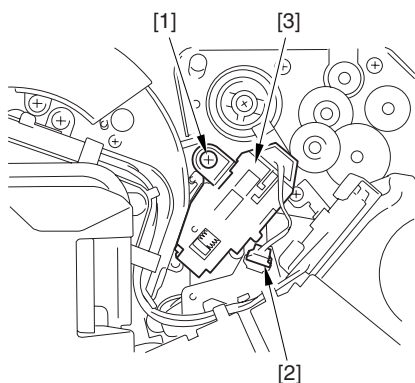

F-7-809


7.11.28.5 Removing the Transfer Cleaning Drive Assembly [0003-2577](#)

1) Open the color toner supply mouth cover [1].

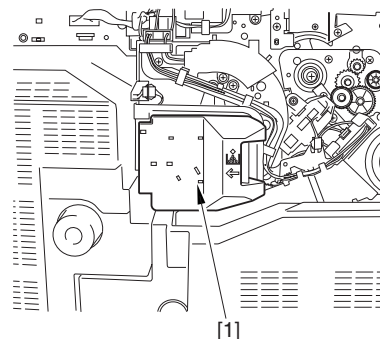

F-7-810


2) Disconnect the connector [1], and remove the screw [2]; then, detach the color toner supply cover [3].

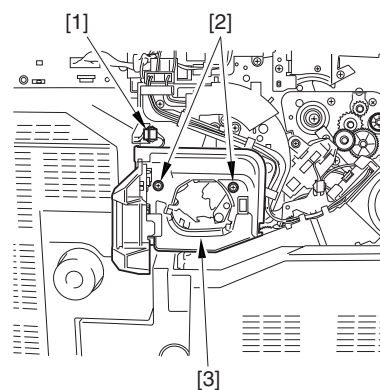

F-7-811


3) Slightly slide out the fixing/feeding assembly.

4) Disconnect the connector [1] to free it from the wire guide [2].

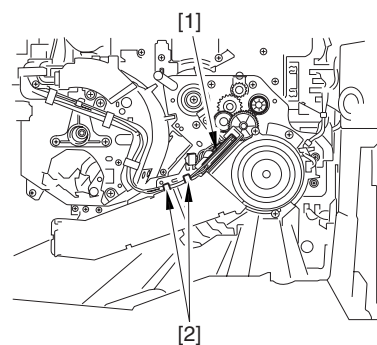


F-7-812

- Remove the screw [1], and shift down the locking plate [2].

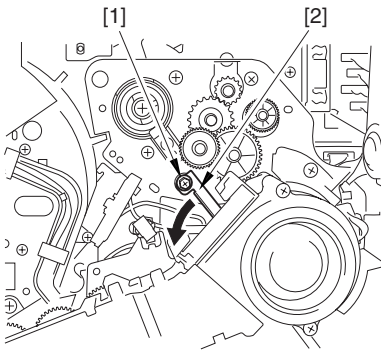

F-7-813

- Disconnect the connector [1], and remove the 5 screws [2]; then, detach the transfer cleaner driver assembly [3].

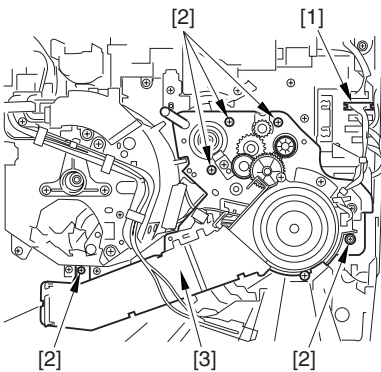


F-7-814

7.11.28.6 Removing the Intermediate Transfer Unit

0003-2576


- Disconnect the 2 connectors [1].

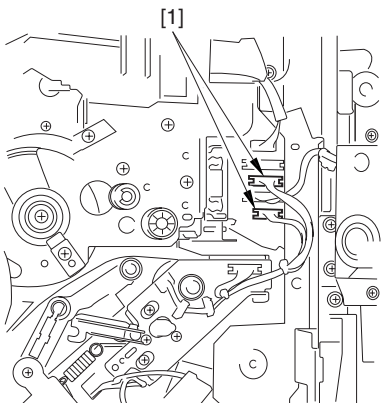

F-7-815

- Fully slide out the fixing/feeding assembly.
- Slide out the intermediate transfer assembly [1] to the front; when it stops, shift it slightly to the upper right and then slide it farther out to detach.

⚠ Do not touch the surface of the ITB. Also, be sure to slide the intermediate transfer assembly straight out so as to prevent damage to the surface of the ITB.

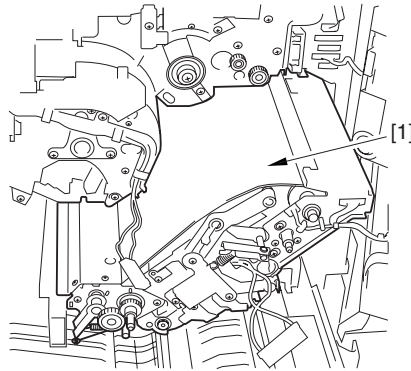


F-7-816

7.11.28.7 Removing the ITB

Cleaning Unit

0003-2575

- Remove the 2 screws [1]; then, slide the ITB cleaning unit [2] in the direction of the arrow to detach.

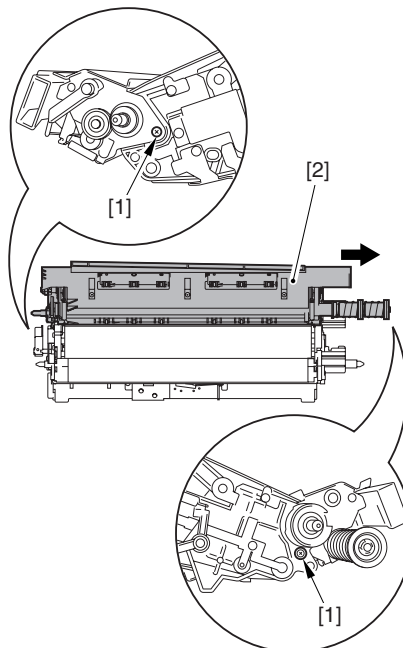


F-7-817

7.11.28.8 Removing the Patch

Image Reading Unit

0003-9012


- 1) Shift the arm [1] shown in the figure to lock it in place; thus releasing the roller (both front and rear).

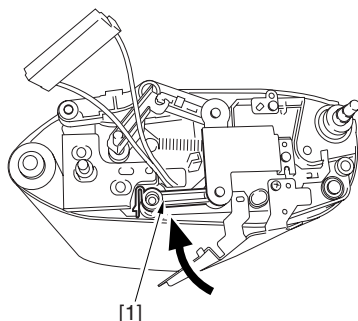

F-7-818


- 2) Stand the intermediate transfer unit by fitting its 2 pints [2] in the 2 holes of the fixing/feeding assembly.

⚠ Make sure that the ITB cleaner unit has been already removed.

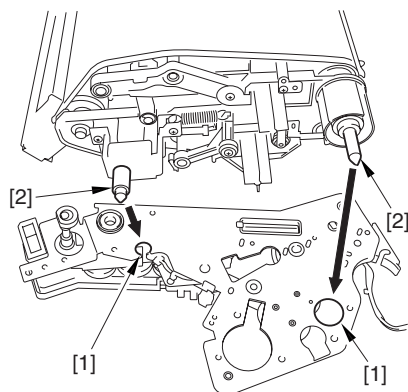

F-7-819

- 3) Disconnect the connector [1], and free the cable [3] from the 3 cable clamps [2].
- 4) Remove the 2 screws [4], and detach the patch image reading unit [5].

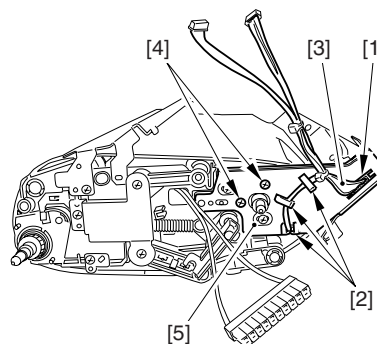


F-7-820

7.11.28.9 Removing the Idler

Roller


0003-2655

- 1) Remove the screw [1], and detach the pre-transfer guide [2].

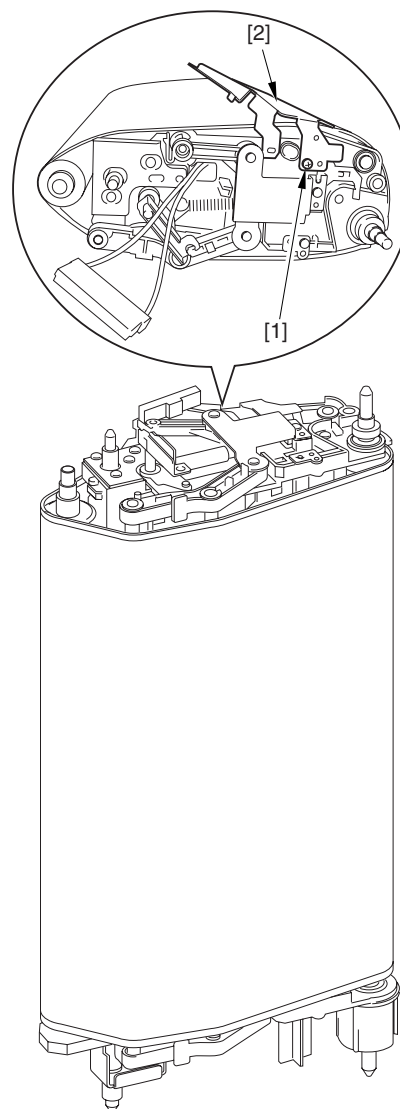

F-7-821

2) Holding the shaft of the idler roller [1], pull the roller upright to detach.

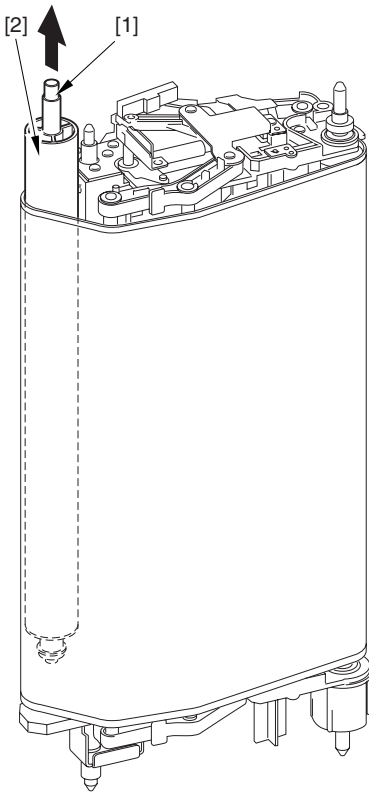


F-7-822

⚠ When detaching the roller, take care not to damage the surface of the ITB by the roller.

7.11.28.10 Removing the ITB 0002-6341

1) Holding the ITB [1] by the edge, pull it straight up to detach.

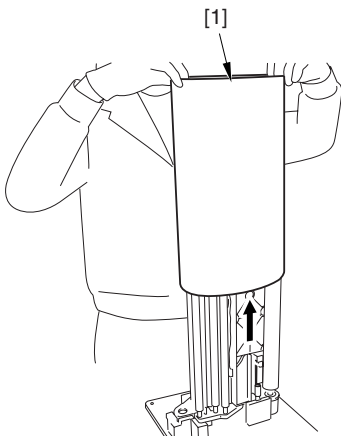

F-7-823

7.11.28.11 Points to Note

When Attaching the ITB


0002-6342



When attaching the intermediate transfer belt, take full care so that the belt will not be upside down.

See that the red marking [1] is found on the edge of the intermediate transfer belt. Otherwise, you must detach the belt, turn it over, and then attach it.

To prevent reversed attachment of the intermediate transfer belt, there is a number marking (10-digit) [2] on its surface (edge) in addition to the foregoing marking.

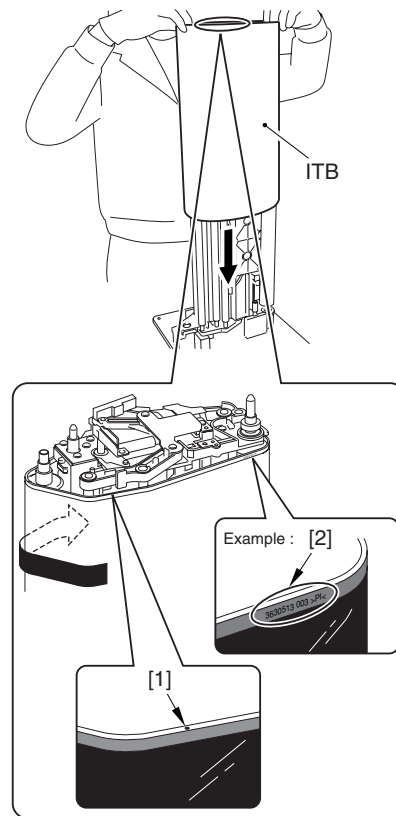

F-7-824

When you have replaced the ITB, be sure to execute the following service mode item.

Be sure that you execute service mode immediately after the control panel screen has appeared after turning on the main switch. :


COPIER>FUNCTION>MISC-P>1TR-ROT

7.11.29 ITB Home Position Sensor PCB

7.11.29.1 Removing the ITB Home

Position Sensor (right, left) [0002-6353](#)

- 1) Detach the ITB.
- 2) Remove the screws [1] (2 pc. each), and disconnect the connectors [2] (1 pc. each); then, detach the ITB home position sensor (right) [3] and the other ITB home position sensor (left) [4].

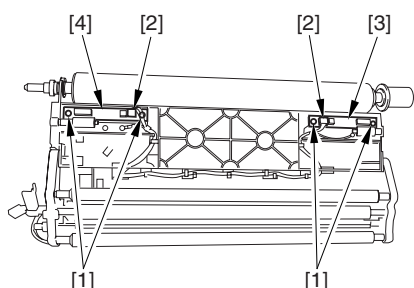

F-7-825


⚠ If you are replacing the ITB home position sensor (right, left), take care to avoid touching the sensor widow; otherwise, wrong detention can occur.

7.11.30 Secondary Transfer Roller Shift Motor

7.11.30.1 Secondary Transfer


Roller Shift Motor [0002-6348](#)

- 1) Fully slide out the fixing/feeding assembly.
- 2) Remove the 24 screws [1], and disconnect the connector [2]; then, detach the secondary transfer cam assembly [3].

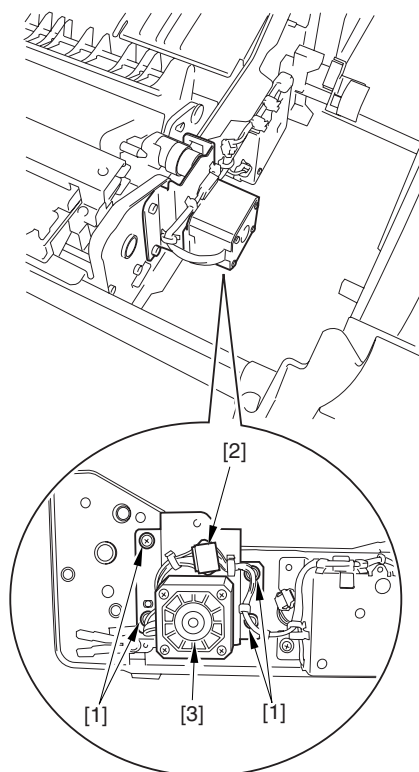

F-7-826

- 3) Remove the 2 screws [1], and detach the secondary roller shift motor [3] from the secondary transfer cam assembly [2].

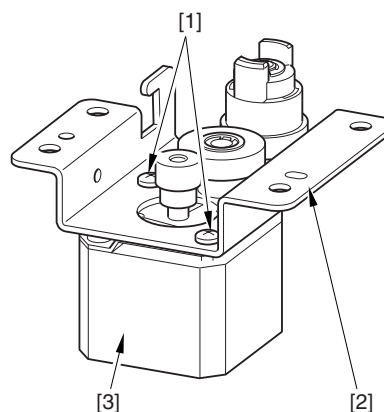

F-7-827


7.11.31 Primary Transfer Roller

7.11.31.1 Removing the Right

Cover (upper)

0003-8265

- 1) Remove the 2 screws [1], and detach the right cover (upper) [2].

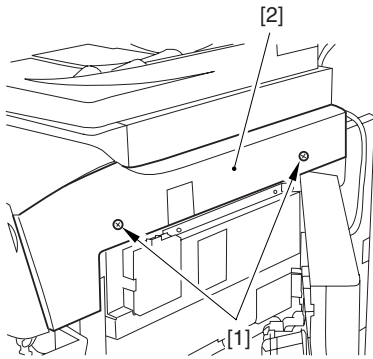


F-7-828

7.11.31.2 Releasing the Front

Cover


0003-2586

- 1) Open the front cover.
- 2) While pulling on the grip [1], fully open the manual feed cover [2] to the front.

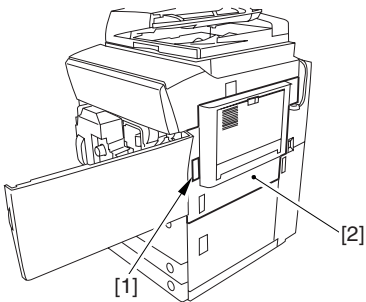


F-7-829

- ⚠** If a side paper deck exists, remove the 2 screws [1] and the latch plate (front)

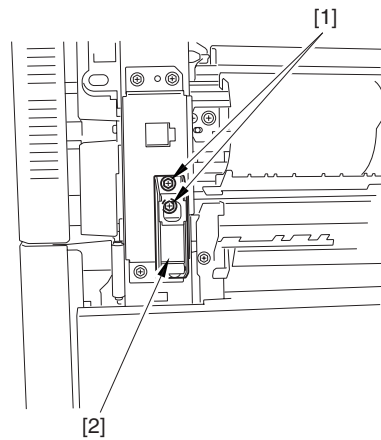


F-7-830

- 3) Slide out the fixing/feeding assembly
- 4) Remove the 2 screws [1], and detach the process unit cover [2].

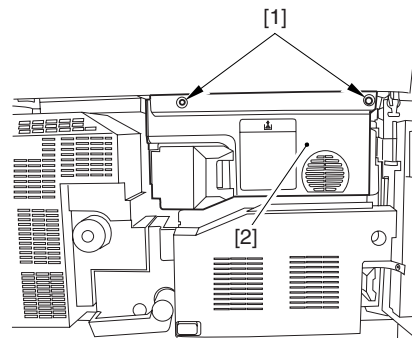


F-7-831

- 5) Push in the fixing/feeding assembly, and set the lever in place.
- 6) Push the release button [1] of the right deck, and slide out the right deck [2].

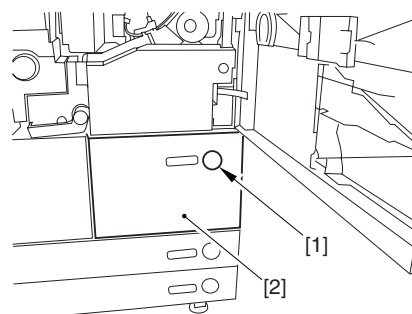


F-7-832

7) Remove the screw [1] from lower right, and detach the front cover strap [2].

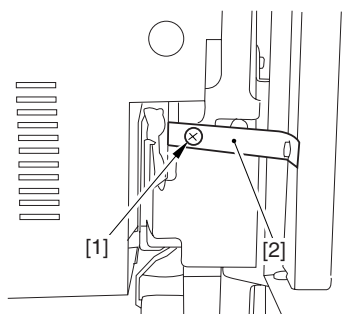


F-7-833

2) Shift down the lever [1], and detach the black toner bottle [2].

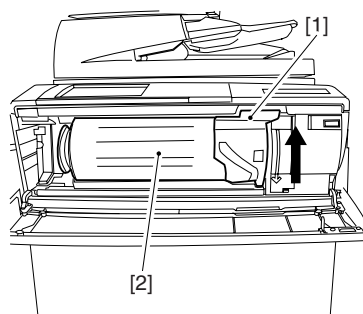


F-7-836

8) Remove the 2 screws [1] (binding) of the front cover hinge, and fully open the front cover [2].

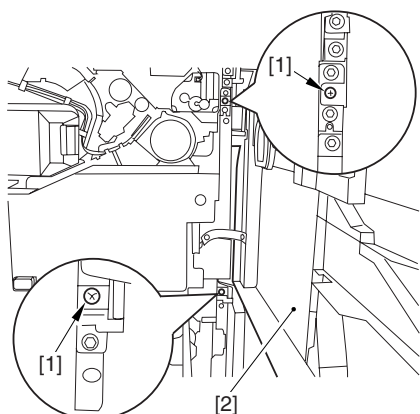

F-7-834

⚠ Once you have released the hopper assembly, toner can spill over the toner bottle supply mouth of the hopper assembly cover. Be sure to wipe off any such toner.

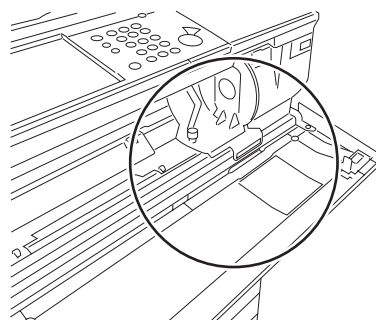


F-7-837

9) Close the right deck.

7.11.31.3 Releasing the Hopper Assembly


0003-2587

1) Open the black toner supply cover [1].

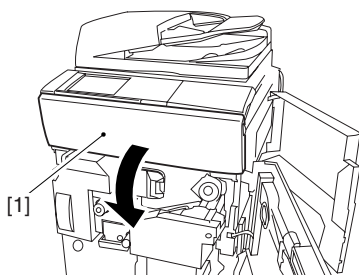


F-7-835

3) Remove the 3 screws [1].

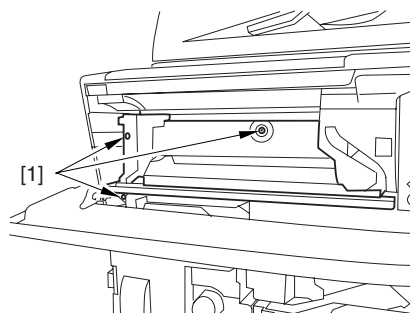

F-7-838


- 4) Close the black toner supply cover [1]; then, fully open the hopper assembly [2].

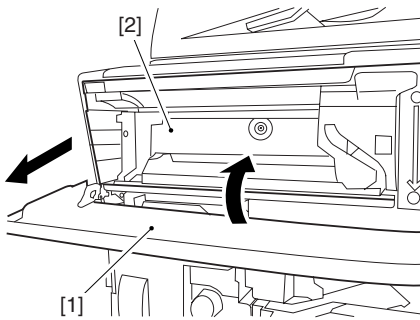

F-7-839

7.11.31.4 Removing the Pre-Transfer Charging Assembly 0005-7257


- 1) Remove the screw [1], and disconnect the connector [1]; then, detach the pre-transfer charging assembly [3] from the machine.

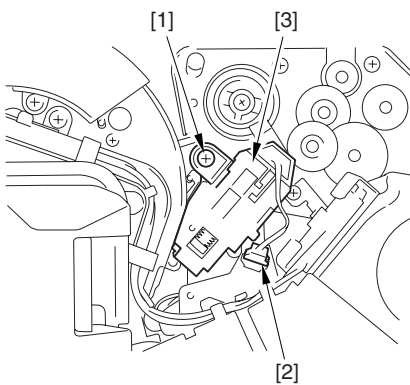

F-7-840


7.11.31.5 Removing the Transfer Cleaner Drive Assembly 0003-2585

- 1) Open the color toner supply mouth cover [1].

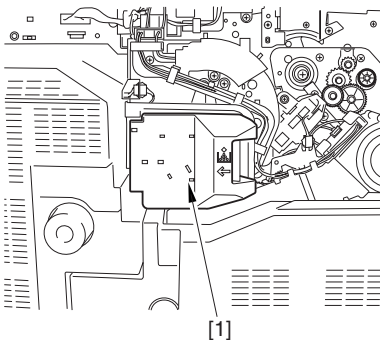


F-7-841

- 2) Disconnect the connector [1], and remove the screw [2]; then, detach the color toner supply cover [3].

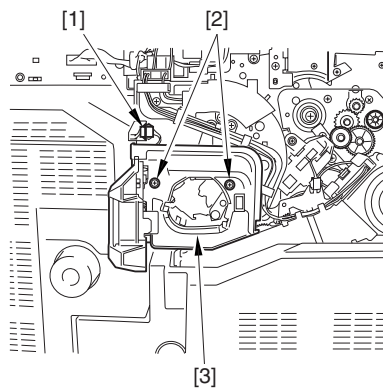


F-7-842

- 3) Slightly slide out the fixing/feeding assembly.
4) Disconcert the connector [1] to free it from the wire guide [2].

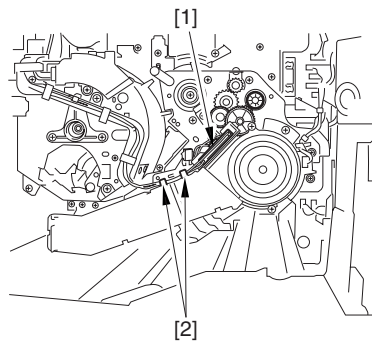


F-7-843

- 5) Remove the screw [1], and shift down the locking plate [2].

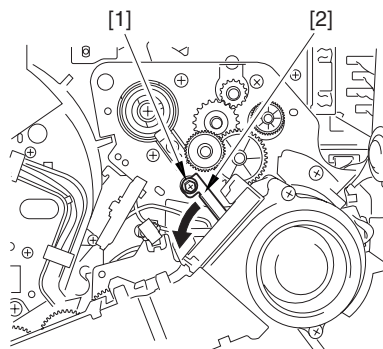

F-7-844


6) Disconnect the connector [1], and remove the 5 screws [2]; then, detach the transfer cleaner driver assembly [3].

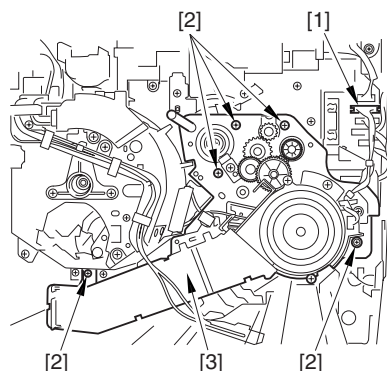

F-7-845

7.11.31.6 Removing the Intermediate Transfer Unit 0003-2584


1) Disconnect the 2 connectors [1].

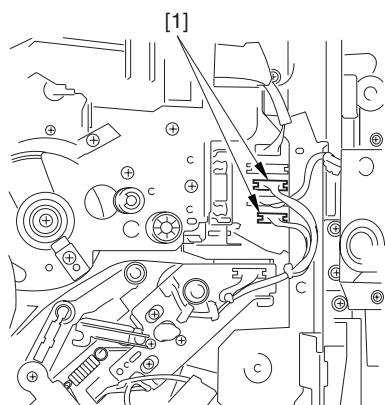

F-7-846

2) Fully slide out the fixing/feeding assembly.
3) Slide out the intermediate transfer assembly [1] to the front; when it stops, shift it slightly to the upper right and then slide it farther out to detach.


⚠ Do not touch the surface of the ITB. Also, be sure to slide the intermediate transfer assembly straight out so as to prevent damage to the surface of the ITB.

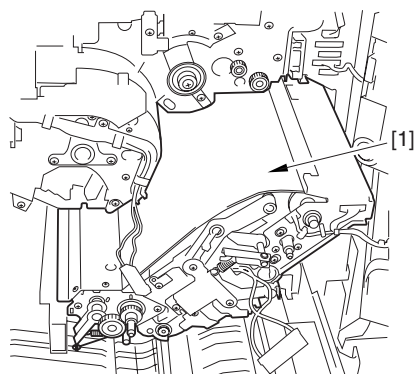

F-7-847


7.11.31.7 Cleaning the Surface of the Intermediate Transfer Unit 0006-0341

1) Place the ITB unit [1] on paper for protection.

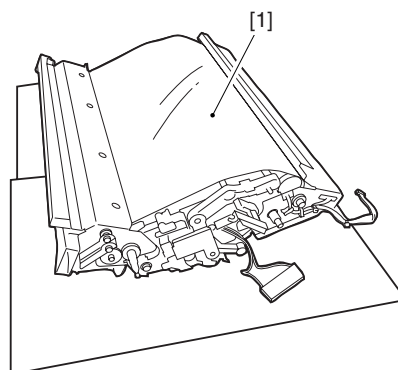


F-7-848

2) Turn the drive gear [1] by hand in the direction of the arrow to move the intermediate transfer belt [2] about 50 mm.

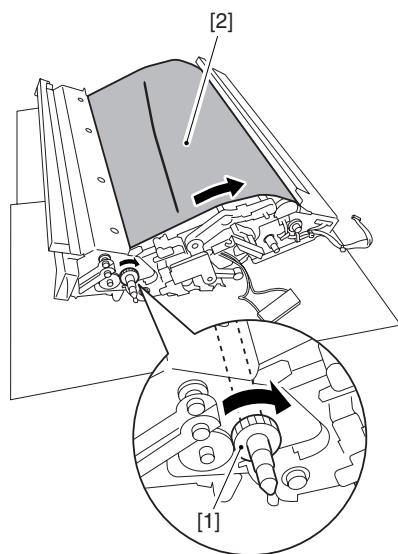


F-7-849

3) If there is any toner [3] on the surface of the intermediate transfer belt, dry wipe it with lint-free paper.

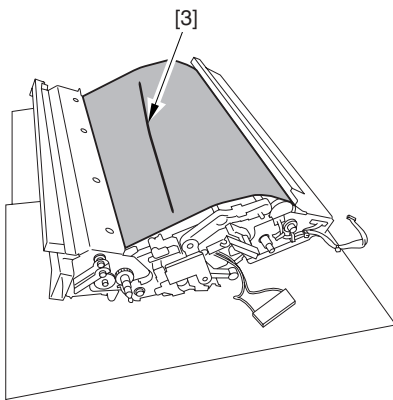

F-7-850

⚠When you remove the transfer cleaner drive assembly, the ITB cleaning blade [1] is likely to come into contact with the intermediate transfer belt by the work of a spring, causing toner [2] to deposit on the belt surface in the form of lines. The toner can then be forced against the photosensitive drum by the primary transfer assembly, thus affecting the photosensitive drum cleaning blade [3].

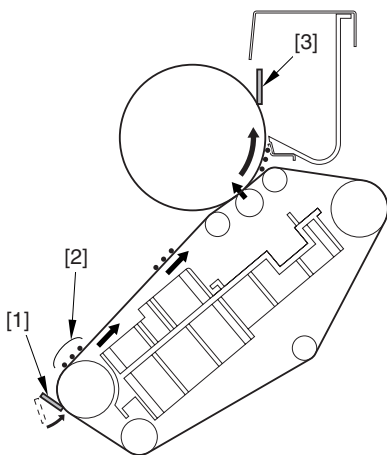


F-7-851

7.11.31.8 Removing the ITB

Cleaning Unit

0003-2583

1) Remove the 2 screws [1]; then, slide the ITB cleaning unit [2] in the direction of the arrow to detach.

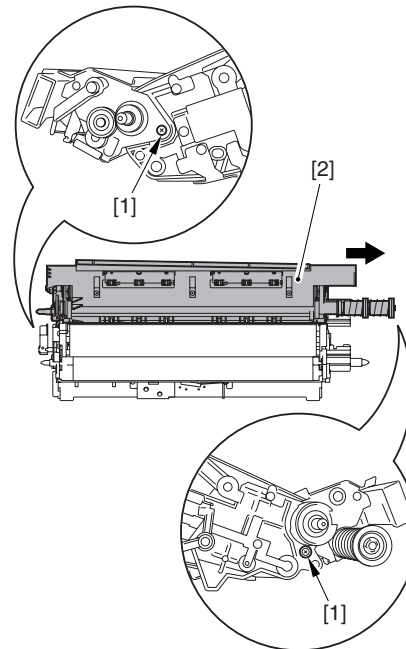


F-7-852

7.11.31.9 Removing the Patch

Image Reading Unit

0003-9013


1) Shift the arm [1] shown in the figure to lock it in place; thus releasing the roller (both front and rear).

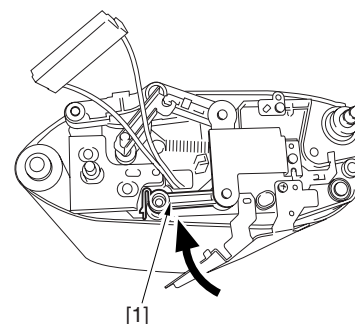

F-7-853

2) Stand the intermediate transfer unit by fitting its 2 pins [2] in the 2 holes of the fixing/feeding assembly.


⚠ Make sure that the ITB cleaner unit has been already removed.

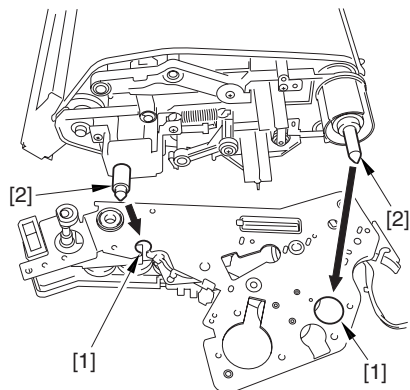

F-7-854

3) Disconnect the connector [1], and free the cable [3] from the 3 cable clamps [2].

4) Remove the 2 screws [4], and detach the patch image reading unit [5].

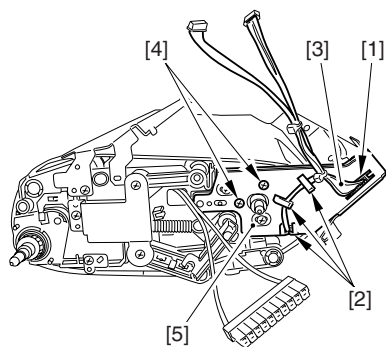


F-7-855

7.11.31.10 Removing the Idler Roller


0003-2660

1) Remove the screw [1], and detach the pre-transfer guide [2].

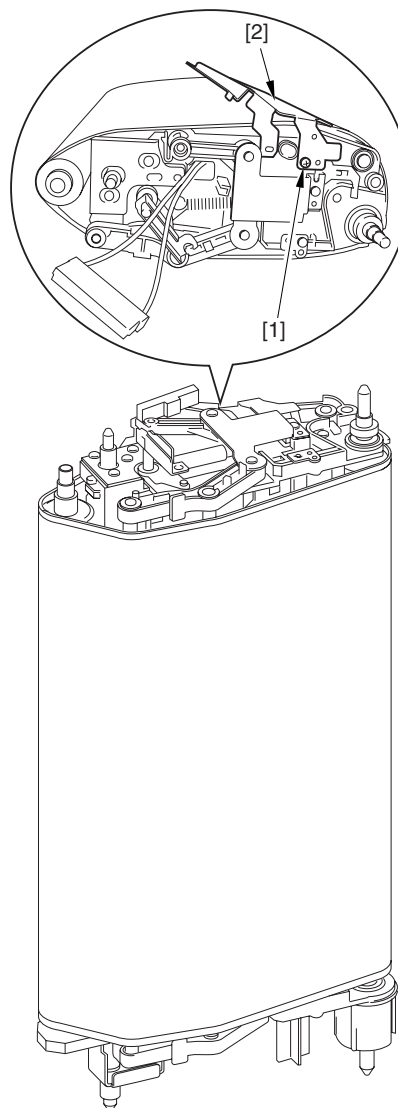

F-7-856

2) Holding the shaft of the idler roller [1], pull the roller upright to detach.

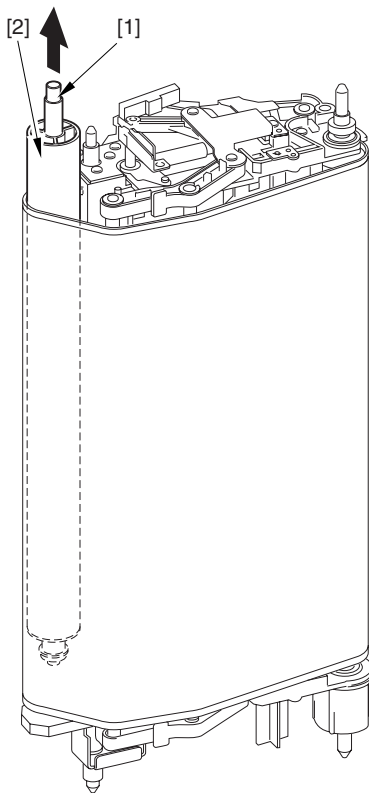


F-7-857

⚠ When detaching the roller, take care not to damage the surface of the ITB by the roller.

7.11.31.11 Removing the ITB 0003-2581


1) Holding the ITB [1] by the edge, pull it straight up to detach.

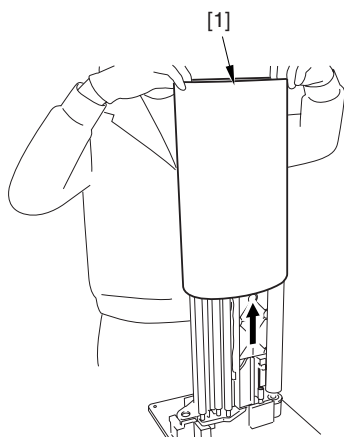

F-7-858


7.11.31.12 Removing the Primary Transfer Roller 0002-6343

1) Shift the locking lever [1] in the direction of the arrows; then, lift the roller arm [2].

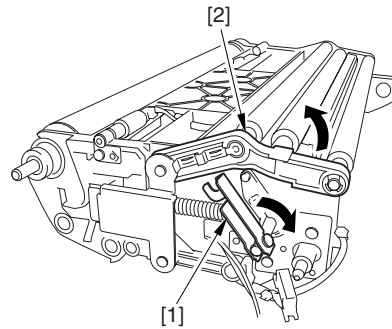

F-7-859

2) Pick the shaft [1] of the primary transfer roller [2], and detach the roller.

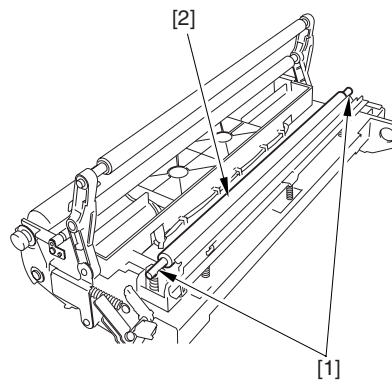


F-7-860

7.11.31.13 Points to Note When Replacing the Primary Transfer Roller 0005-9148

As the machine is used more and more, the shavings from the primary transfer roller can start to collect on the rollers behind the belt.

When you have replaced the primary transfer roller, be sure to clean the 6 rollers [1] and the scraper [2] indicated below.


▲ The idler roller (indicated by an arrow) is designed for mounting after fitting the intermediate transfer belt. Although the figure shows the roller, it is only for reference purposes, and the roller is not in its indicated position at this point in time.

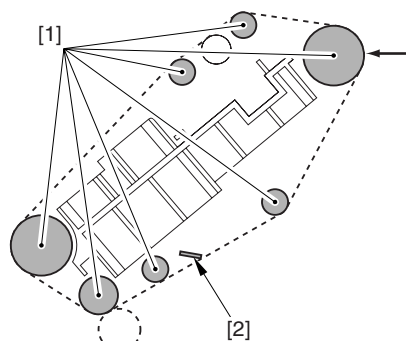

F-7-861



<Cleaning Procedure>

1) Place the ITB cleaner drive unit [1] with its cover facing down; then, stand the ITB unit [2].

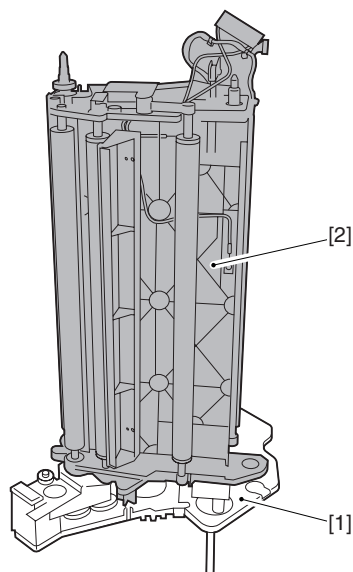


F-7-862

2) Clean the rollers [1] and the inside scraper [2] using alcohol.

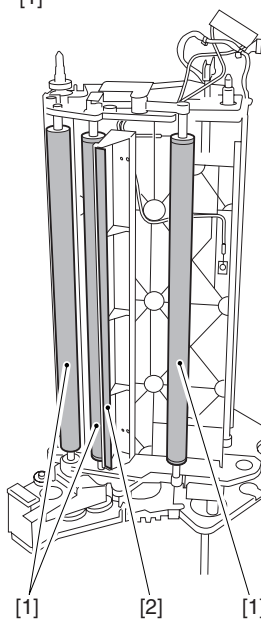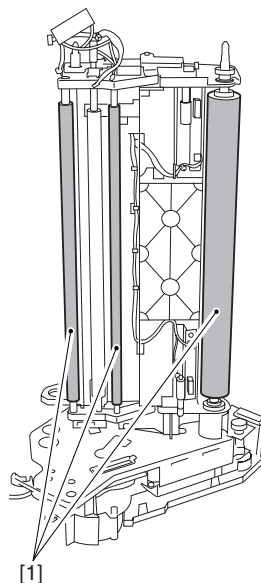

F-7-863

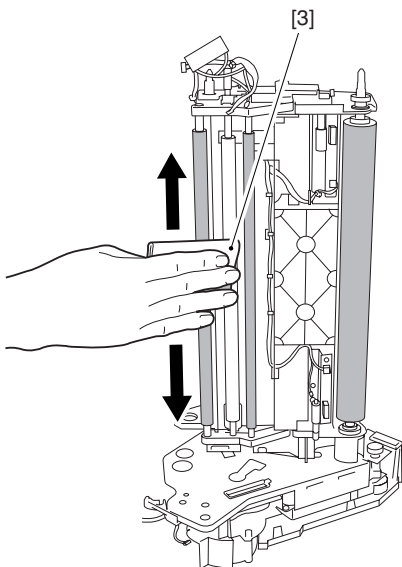

F-7-864

⚠ When you have replaced the primary transfer roller, be sure to execute the following service mode item.


Be sure that you execute service mode immediately after the control panel screen has appeared after turning on the main switch. :
 COPIER>FUNCTION>MISC-P>ITR-ROT.

7.11.32 Secondary Transfer Internal Roller

7.11.32.1 Removing the Right

Cover (upper) 0003-8266

1) Remove the 2 screws [1], and detach the right cover (upper) [2].

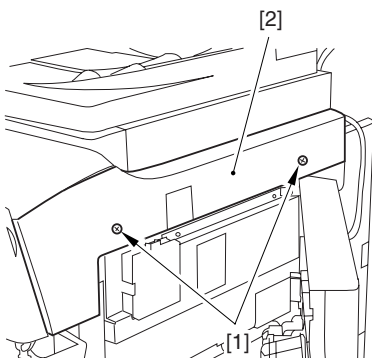


F-7-865

7.11.32.2 Releasing the Front


Cover 0003-2592

1) Open the front cover.
 2) While pulling on the grip [1], fully open the manual feed cover [2] to the front.

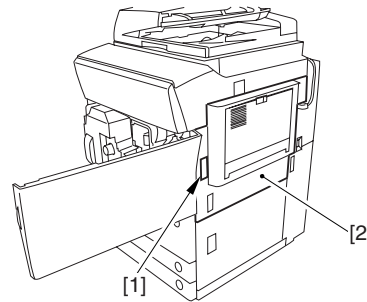


F-7-866

⚠ If a side paper deck exists, remove the 2 screws [1] and the latch plate (front)

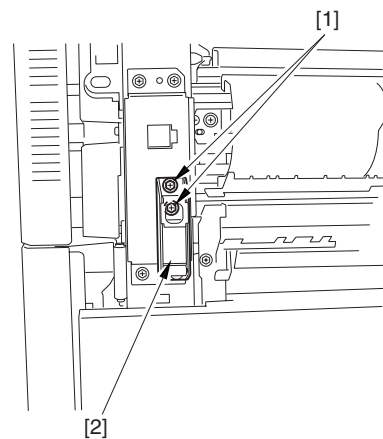


F-7-867

3) Slide out the fixing/feeding assembly
 4) Remove the 2 screws [1], and detach the process unit cover [2].

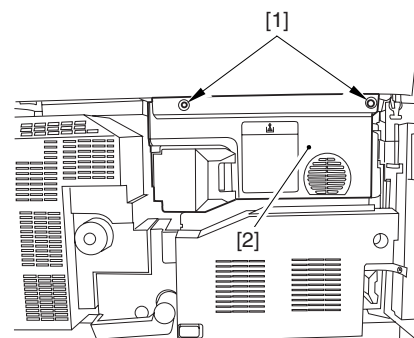


F-7-868

- 5) Push in the fixing/feeding assembly, and set the lever in place.
- 6) Push the release button [1] of the right deck, and slide out the right deck [2].

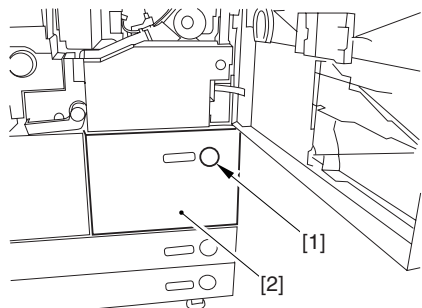


F-7-869

- 7) Remove the screw [1] from lower right, and detach the front cover strap [2].

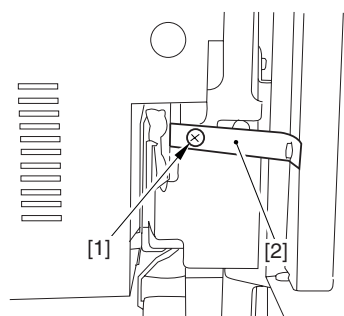

F-7-870

- 8) Remove the 2 screws [1] (binding) of the front cover hinge, and fully open the front cover [2].

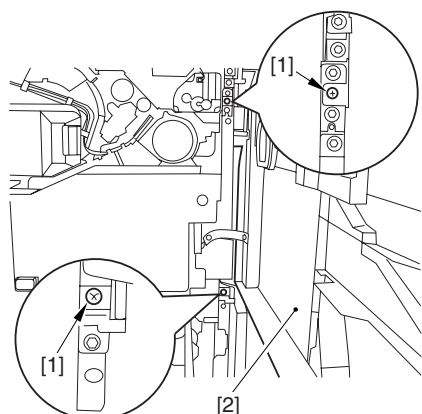


F-7-871

- 9) Close the right deck.

7.11.32.3 Releasing the Hopper Assembly


0003-2593

- 1) Open the black toner supply cover [1].

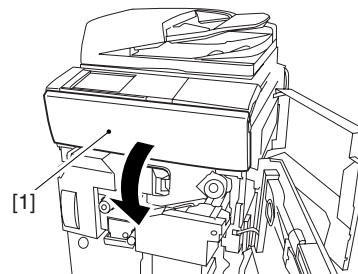


F-7-872

- 2) Shift down the lever [1], and detach the black toner bottle [2].

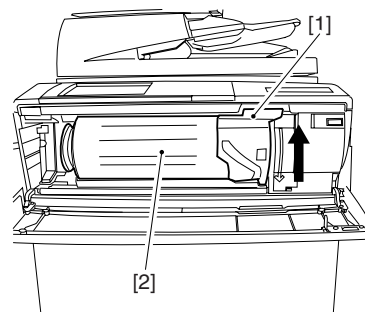


F-7-873

⚠ Once you have released the hopper assembly, toner can spill over the toner bottle supply mouth of the hopper assembly cover. Be sure to wipe off any such toner.

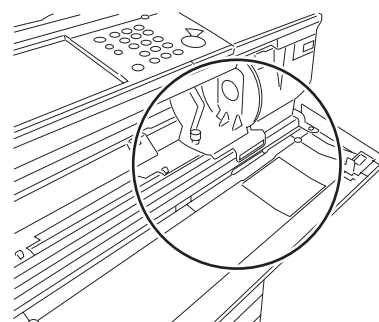


F-7-874

3) Remove the 3 screws [1].

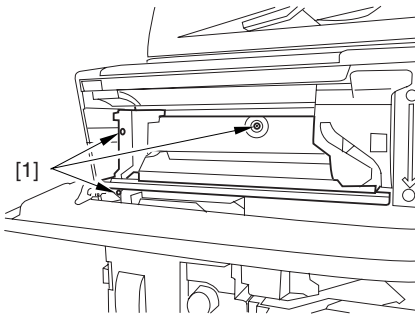

F-7-875


4) Close the black toner supply cover [1]; then, fully open the hopper assembly [2].

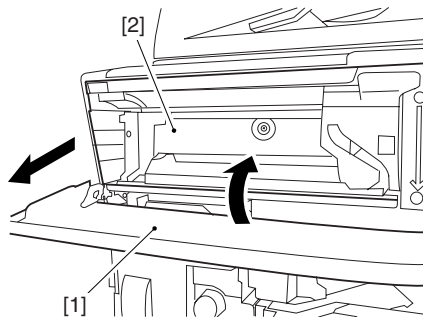

F-7-876

7.11.32.4 Removing the Pre-Transfer Charging Assembly 0005-7258


1) Remove the screw [1], and disconnect the connector [1]; then, detach the pre-transfer charging assembly [3] from the machine.

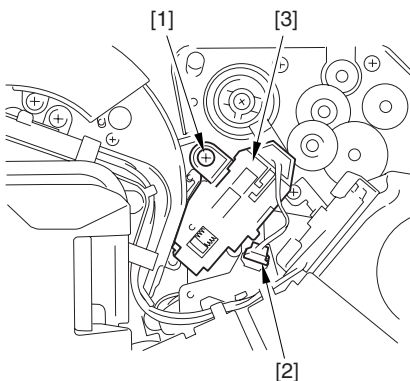

F-7-877


7.11.32.5 Removing the Transfer Cleaner Drive Assembly 0003-2591

1) Open the color toner supply mouth cover [1].

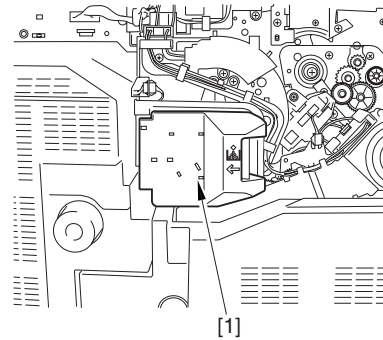


F-7-878

2) Disconnect the connector [1], and remove the screw [2]; then, detach the color toner supply cover [3].

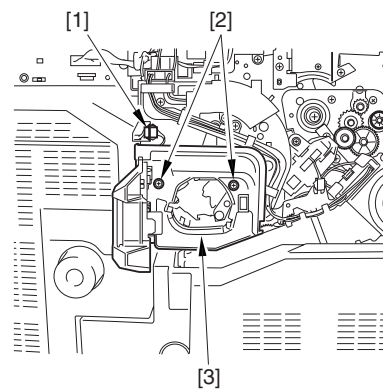


F-7-879

3) Slightly slide out the fixing/feeding assembly.
4) Disconcert the connector [1] to free it from the wire guide [2].

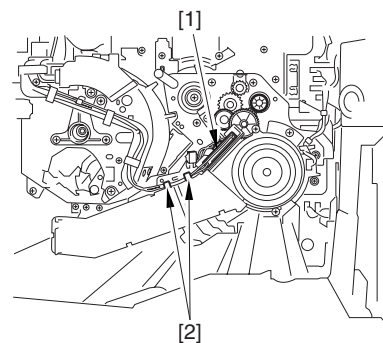


F-7-880

- 5) Remove the screw [1], and shift down the locking plate [2].

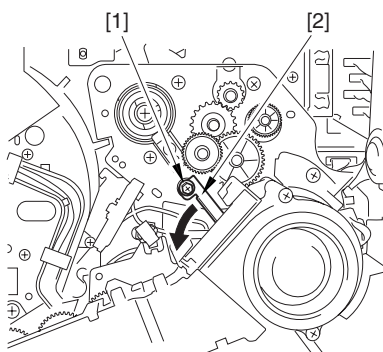

F-7-881

- 6) Disconnect the connector [1], and remove the 5 screws [2]; then, detach the transfer cleaner driver assembly [3].

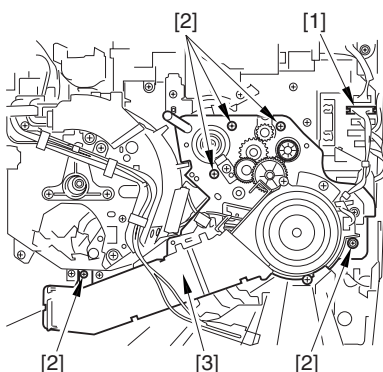


F-7-882

7.11.32.6 Removing the Intermediate Transfer Unit

0003-2590


- 1) Disconnect the 2 connectors [1].

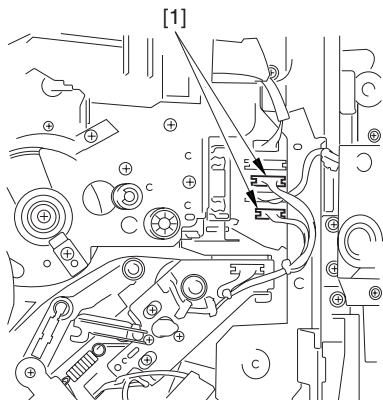

F-7-883

- 2) Fully slide out the fixing/feeding assembly.
3) Slide out the intermediate transfer assembly [1] to the front; when it stops, shift it slightly to the upper right and then slide it farther out to detach.

⚠ Do not touch the surface of the ITB. Also, be sure to slide the intermediate transfer assembly straight out so as to prevent damage to the surface of the ITB.

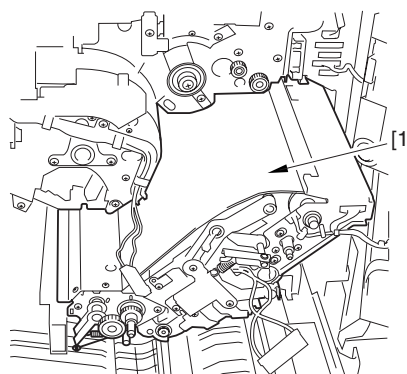


F-7-884

7.11.32.7 Cleaning the Surface of the Intermediate Transfer Unit


0006-0330

- 1) Place the ITB unit [1] on paper for protection.

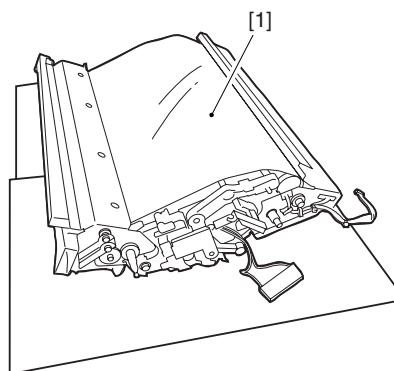


F-7-885

2) Turn the drive gear [1] by hand in the direction of the arrow to move the intermediate transfer belt [2] about 50 mm.

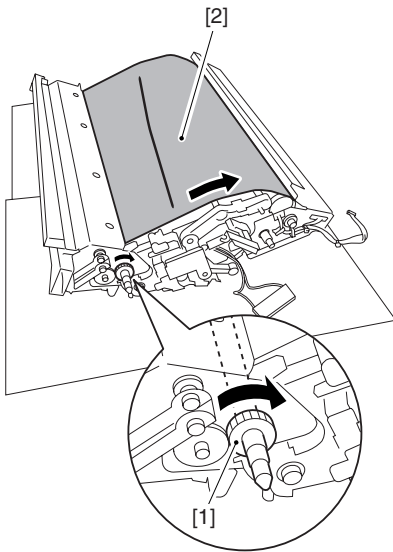


F-7-886

3) If there is any toner [3] on the surface of the intermediate transfer belt, dry wipe it with lint-free paper.

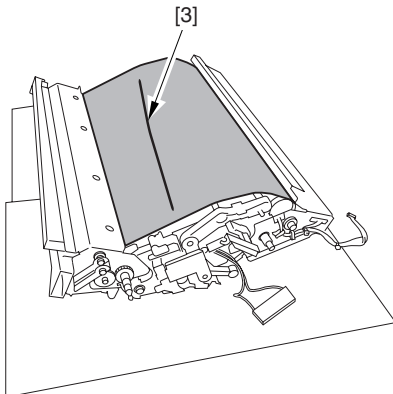

F-7-887


⚠ When you remove the transfer cleaner drive assembly, the ITB cleaning blade [1] is likely to come into contact with the intermediate transfer belt by the work of a spring, causing toner [2] to deposit on the belt surface in the form of lines. The toner can then be forced against the photosensitive drum by the primary transfer assembly, thus affecting the photosensitive drum cleaning blade [3].

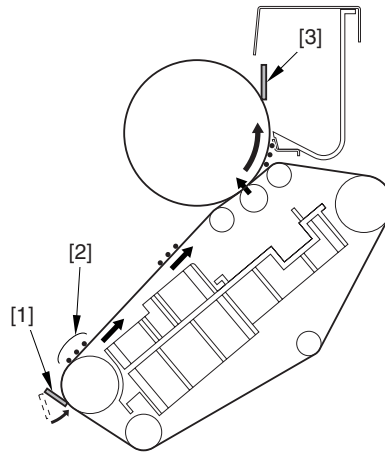

F-7-888

7.11.32.8 Removing the ITB Cleaning Unit 0003-2589

1) Remove the 2 screws [1]; then, slide the ITB cleaning unit [2] in the direction of the arrow to detach.

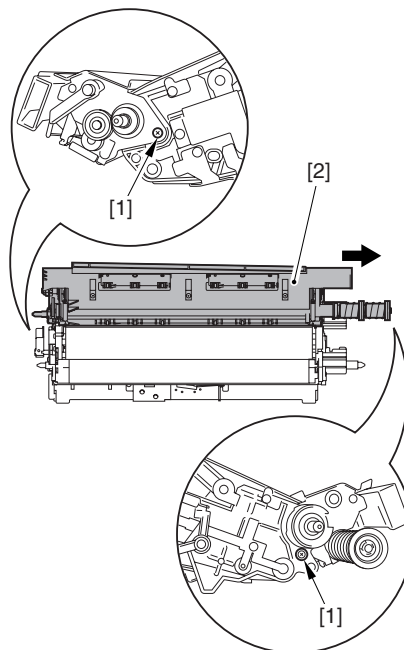


F-7-889

7.11.32.9 Removing the Patch

Image Reading Unit

0003-9011


- 1) Shift the arm [1] shown in the figure to lock it in place; thus releasing the roller (both front and rear).

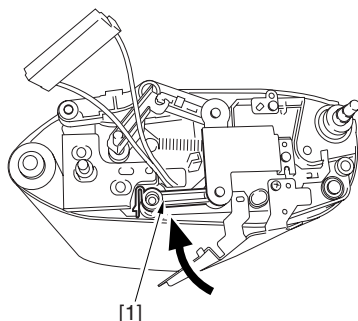

F-7-890


- 2) Stand the intermediate transfer unit by fitting its 2 pins [2] in the 2 holes of the fixing/feeding assembly.

⚠ Make sure that the ITB cleaner unit has been already removed.

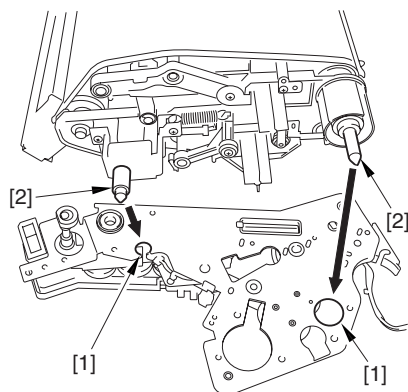

F-7-891

- 3) Disconnect the connector [1], and free the cable [3] from the 3 cable clamps [2].
- 4) Remove the 2 screws [4], and detach the patch image reading unit [5].

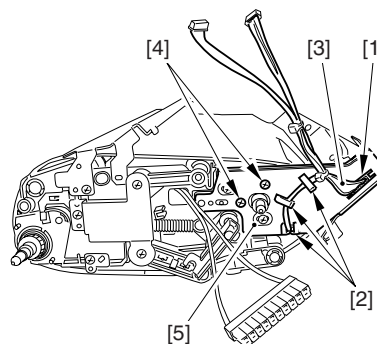


F-7-892

7.11.32.10 Removing the Idler

Roller


0003-2662

- 1) Remove the screw [1], and detach the pre-transfer guide [2].

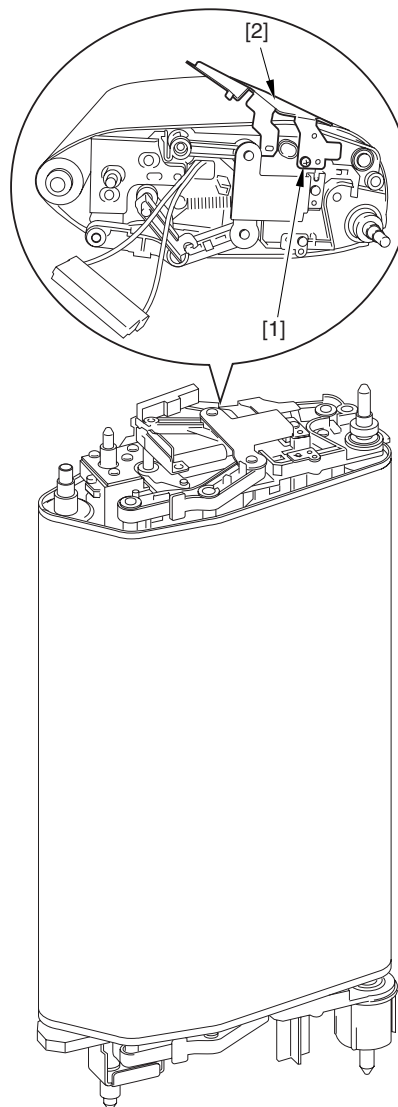

F-7-893

- 2) Holding the shaft of the idler roller [1], pull the roller upright to detach.

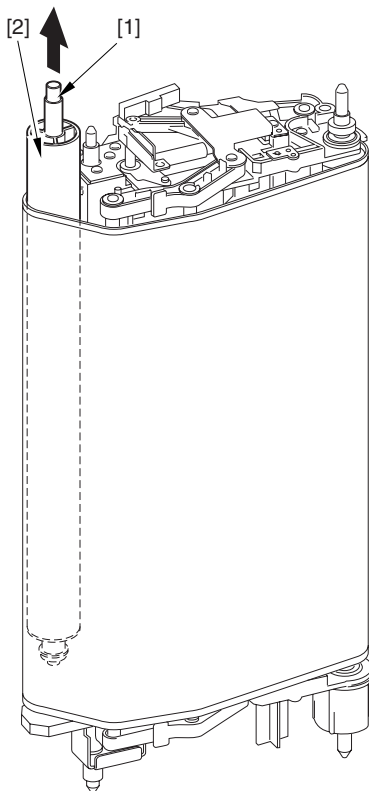


F-7-894

⚠ When detaching the roller, take care not to damage the surface of the ITB by the roller.

7.11.32.11 Removing the ITB [0003-2588](#)


- 1) Holding the ITB [1] by the edge, pull it straight up to detach.

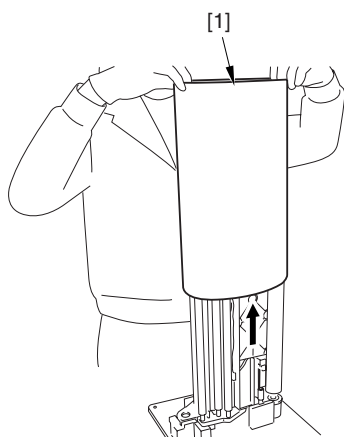

F-7-895


7.11.32.12 Removing the Secondary Transfer Inside Roller [0002-5733](#)

- 1) Remove the 2 screws [1] found at the rear of the intermediate transfer unit; then, shift the electrode [2] in counterclockwise direction.

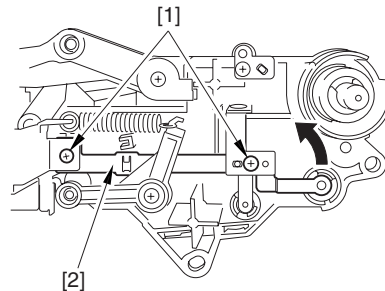

F-7-896

- 2) Remove the E-ring [1], washer [2], and bearing [3] from the front of the intermediate transfer unit.
- 3) Remove the E-ring [4] and the bearing [5] from the rear of the intermediate transfer unit.
- 4) Remove the secondary transfer inside roller [6].

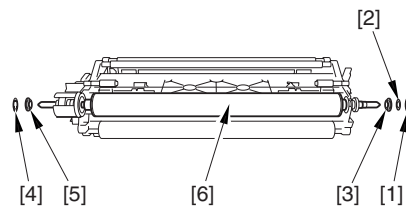


F-7-897

7.11.33 Secondary Transfer Roller

7.11.33.1 Removing the


Secondary Transfer Unit [0003-1984](#)

- 1) Open the front cover.
- 2) Slide out the fixing/feeding assembly.
- 3) While pushing the 2 hooks [1] front on both sides of the fixing/feeding assembly, slide out the fixing/feeding assembly [2] fully.

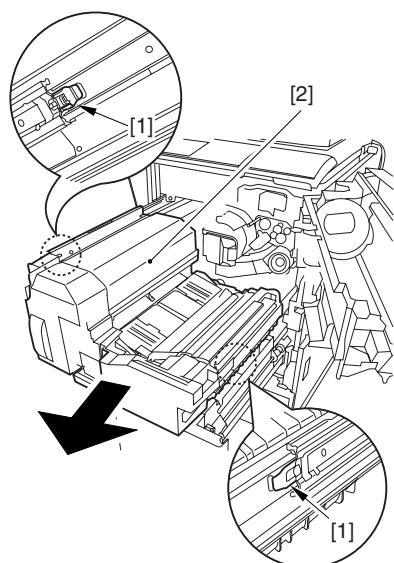


F-7-898

4) Remove the screw [1], and detach the connector cover [2].

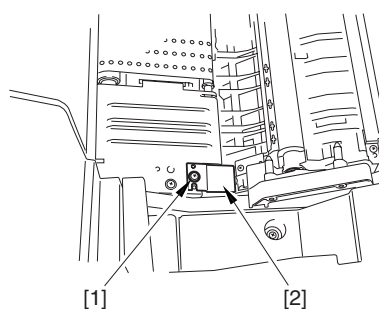


F-7-899

5) Disconnect the connector [1].

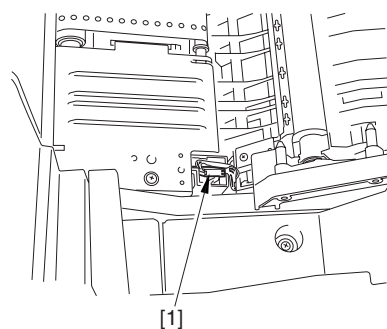


F-7-900

6) Remove the 2 stepped screws [1].

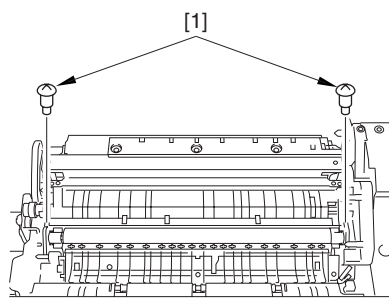

F-7-901

7) While shifting the secondary transfer unit [1], disconnect the 2 connectors [2]; then, detach the secondary transfer unit.

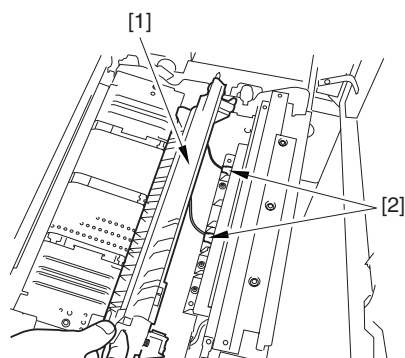


F-7-902

7.11.33.2 Removing the Secondary Transfer Static Eliminator Holder

0003-1986

1) Remove the 2 screws [1], and detach the secondary transfer guide [2].

2) Remove the secondary transfer static eliminator holder [3].

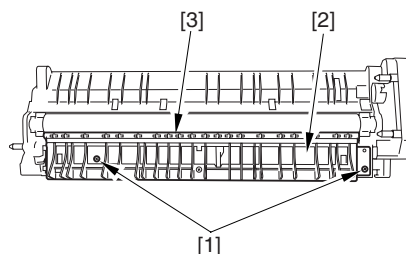


F-7-903

7.11.33.3 Removing the


Secondary Transfer Roller 0002-6346

1) Remove the 2 E-rings [1], and detach the left roller arm [2] and the right roller arm [3].

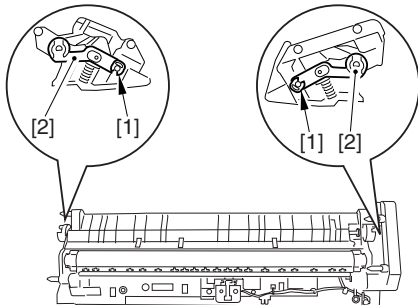

F-7-904

2) Pull out the 2 secondary roller bushing [1] in the direction of the arrow; then, detach the secondary transfer roller [2].

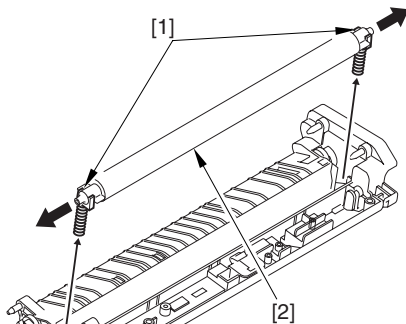

F-7-905


⚠ If you are replacing the secondary transfer roller, be sure to hold the roller shaft. Also, take care not to touch the surface of the roller and not to damage the roller.

7.11.34 ITB Cleaning Blade

7.11.34.1 Removing the Right

Cover (upper) 0003-8267

1) Remove the 2 screws [1], and detach the right cover (upper) [2].

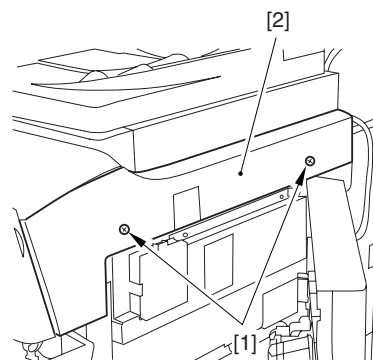


F-7-906

7.11.34.2 Releasing the Front

Cover


0003-2597

1) Open the front cover.
2) While pulling on the grip [1], fully open the manual feed cover [2] to the front.

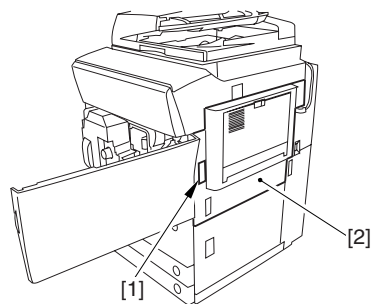


F-7-907

⚠ If a side paper deck exists, remove the 2 screws [1] and the latch plate (front)

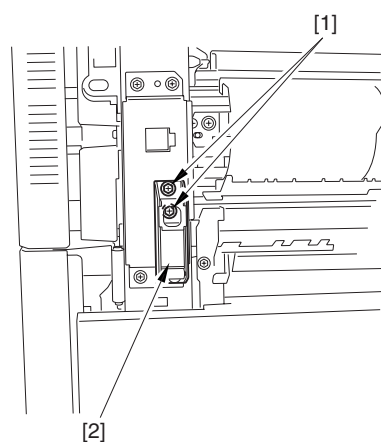


F-7-908

- 3) Slide out the fixing/feeding assembly
- 4) Remove the 2 screws [1], and detach the process unit cover [2].

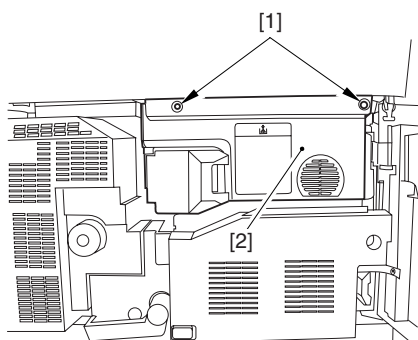


F-7-909

- 5) Push in the fixing/feeding assembly, and set the lever in place.
- 6) Push the release button [1] of the right deck, and slide out the right deck [2].

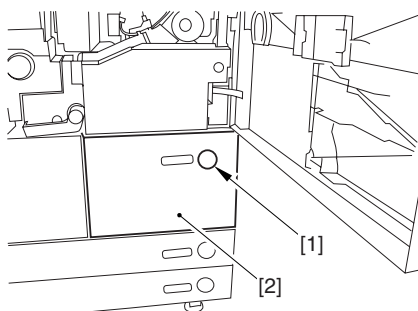


F-7-910

- 7) Remove the screw [1] from lower right, and detach the front cover strap [2].

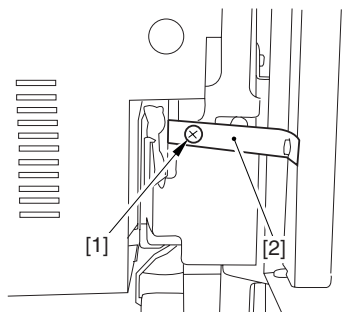

F-7-911

- 8) Remove the 2 screws [1] (binding) of the front cover hinge, and fully open the front cover [2].

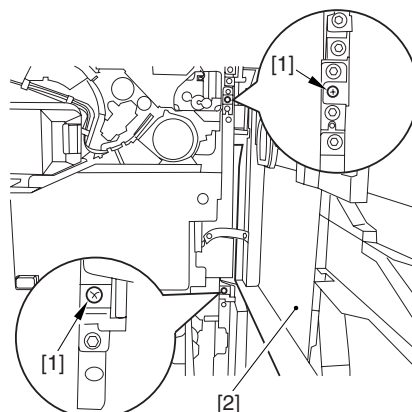


F-7-912

- 9) Close the right deck.

7.11.34.3 Releasing the Hopper Assembly


0003-2598

- 1) Open the black toner supply cover [1].

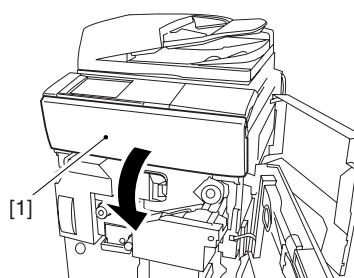


F-7-913

- 2) Shift down the lever [1], and detach the black toner bottle [2].

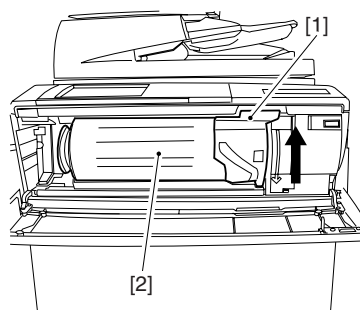


F-7-914

⚠ Once you have released the hopper assembly, toner can spill over the toner bottle supply mouth of the hopper assembly cover. Be sure to wipe off any such toner.

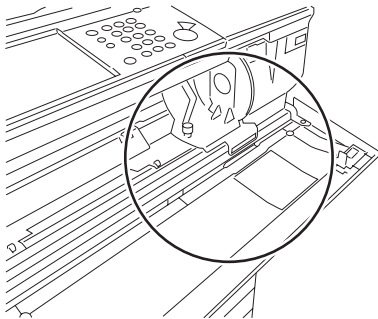


F-7-915

3) Remove the 3 screws [1].

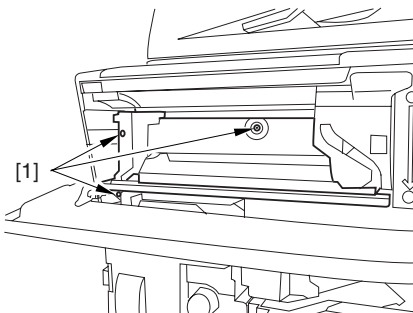

F-7-916


4) Close the black toner supply cover [1]; then, fully open the hopper assembly [2].

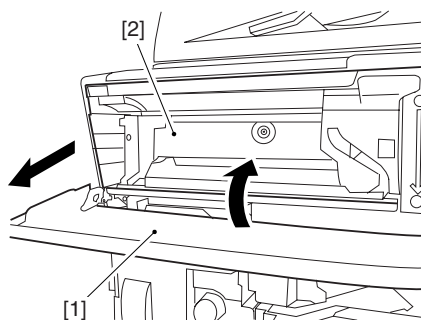

F-7-917

7.11.34.4 Removing the Pre-Transfer Charging Assembly 0005-7259


1) Remove the screw [1], and disconnect the connector [1]; then, detach the pre-transfer charging assembly [3] from the machine.

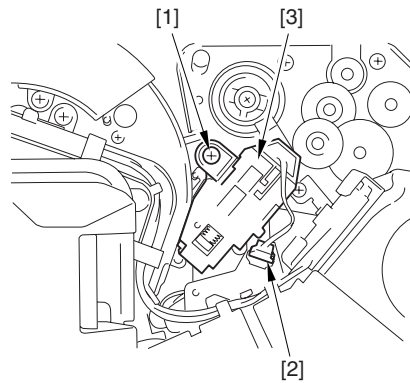

F-7-918


7.11.34.5 Removing the Transfer Cleaner Drive Assembly 0003-2596

1) Open the color toner supply mouth cover [1].

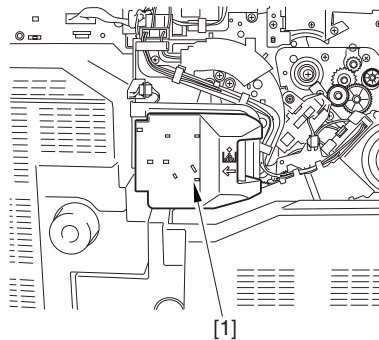


F-7-919

2) Disconnect the connector [1], and remove the screw [2]; then, detach the color toner supply cover [3].

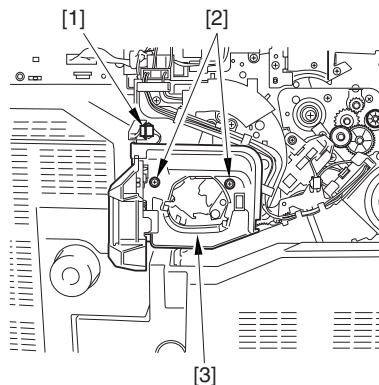


F-7-920

- 3) Slightly slide out the fixing/feeding assembly.
- 4) Disconcert the connector [1] to free it from the wire guide [2].

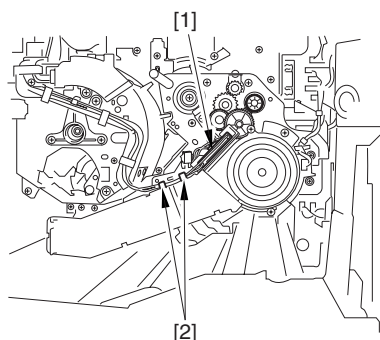


F-7-921

- 5) Remove the screw [1], and shift down the locking plate [2].

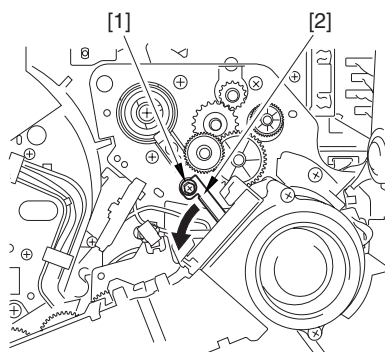

F-7-922

- 6) Disconnect the connector [1], and remove the 5 screws [2]; then, detach the transfer cleaner driver assembly [3].

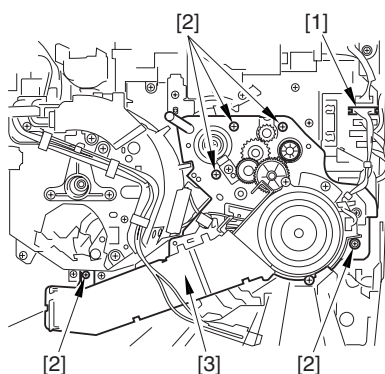


F-7-923

7.11.34.6 Removing the Intermediate Transfer Unit

0003-2595


- 1) Disconnect the 2 connectors [1].

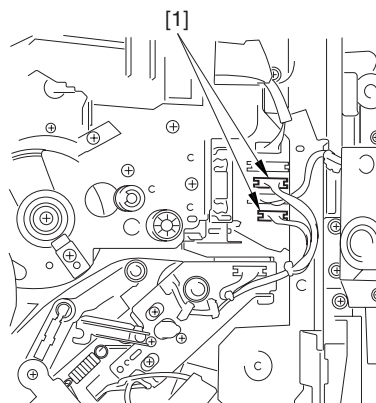

F-7-924

- 2) Fully slide out the fixing/feeding assembly.
- 3) Slide out the intermediate transfer assembly [1] to the front; when it stops, shift it slightly to the upper right and then slide it farther out to detach.


▲ Do not touch the surface of the ITB. Also, be sure to slide the intermediate transfer assembly straight out so as to prevent damage to the surface of the ITB.

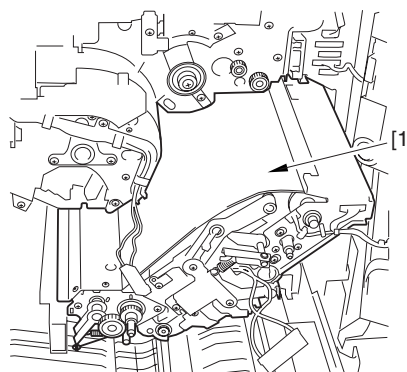

F-7-925


7.11.34.7 Cleaning the Surface of the Intermediate Transfer Unit 0006-0335

1) Place the ITB unit [1] on paper for protection.

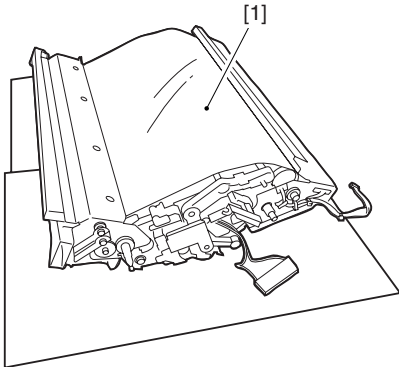


F-7-926

2) Turn the drive gear [1] by hand in the direction of the arrow to move the intermediate transfer belt [2] about 50 mm.

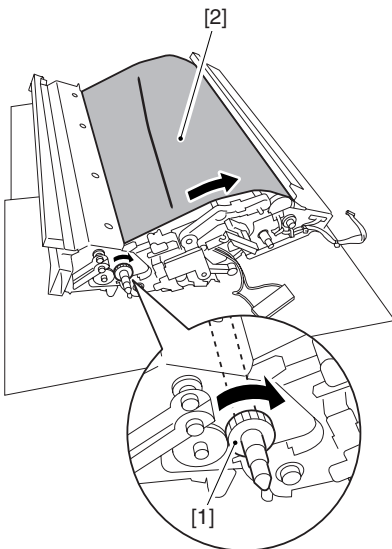


F-7-927

3) If there is any toner [3] on the surface of the intermediate transfer belt, dry wipe it with lint-free paper.

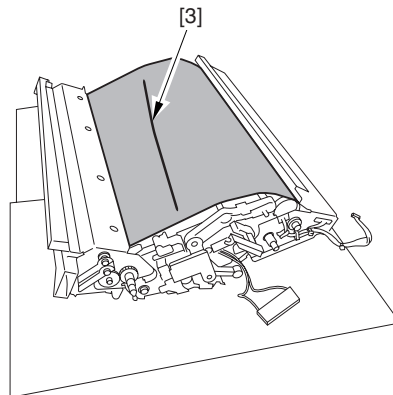

F-7-928

⚠ When you remove the transfer cleaner drive assembly, the ITB cleaning blade [1] is likely to come into contact with the intermediate transfer belt by the work of a spring, causing toner [2] to deposit on the belt surface in the form of lines. The toner can then be forced against the photosensitive drum by the primary transfer assembly, thus affecting the photosensitive drum cleaning blade [3].

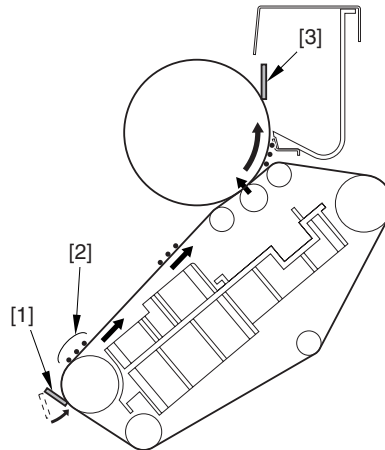


F-7-929

7.11.34.8 Removing the ITB

Cleaning Unit

[0003-2594](#)

1) Remove the 2 screws [1]; then, slide the ITB cleaning unit [2] in the direction of the arrow to detach.

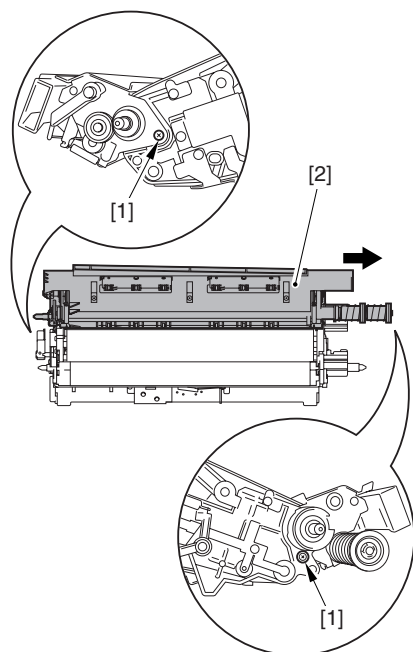


F-7-930

7.11.34.9 Remove the ITB

Cleaning Blade

[0002-6351](#)

1) Remove the 4 screws [1], and detach the ITB cleaner blade [2].

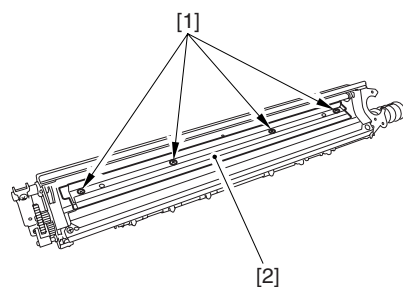


F-7-931

7.11.34.10 When Replacing the ITB Cleaning Blade

[0005-9885](#)


Whenever you need to replace the ITB cleaning blade, be sure to go through the following steps to apply blade lubricant (TKN-0480) to the edge of the blade.

1) Turn the primary transfer roller locking lever [1] in the direction of the arrow to engage the intermediate transfer belt.

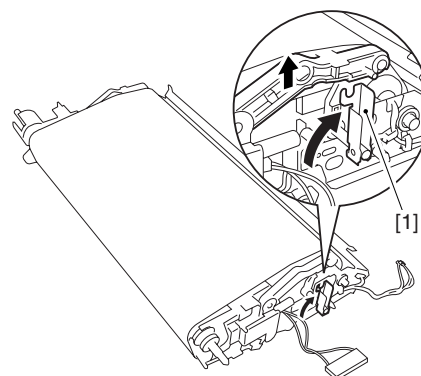


F-7-932

2) Apply an appropriate amount of blade lubricant [1] as if to sprinkle it over an area of the surface as shown.

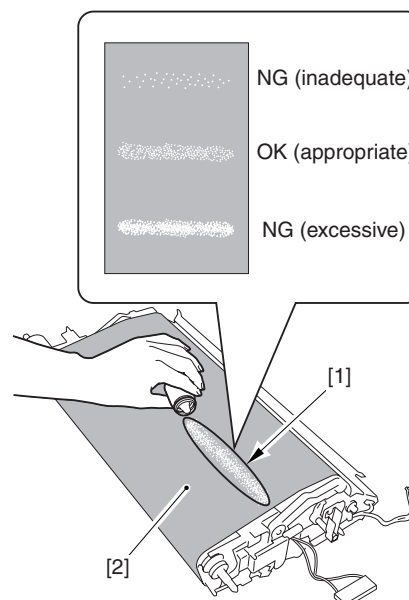

F-7-933


3) Spread the blade lubricant [1] using lint-free paper [2] as shown to cover an area of the belt about 10 cm wide.

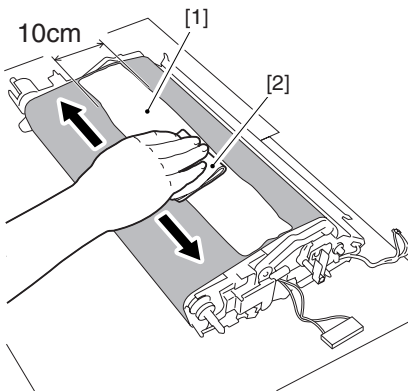

F-7-934


⚠ Take care so that the blade lubricant will not make its way behind the intermediate transfer belt. Otherwise, the presence of blade lubricant behind the intermediate transfer belt can cause the ITB home position sensor to make wrong detection.

4) Turn the drive gear [1] in the direction of the arrow so that the area of blade lubricant [2] is found as shown.

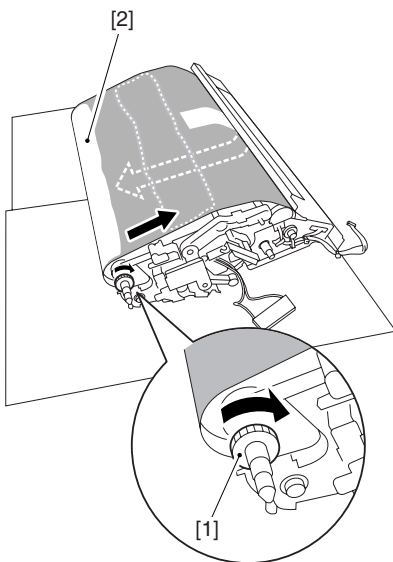


F-7-935

5) Mount the ITB cleaning unit [2] to the intermediate transfer unit [1]; then, fix it in place using 2 screws [3].

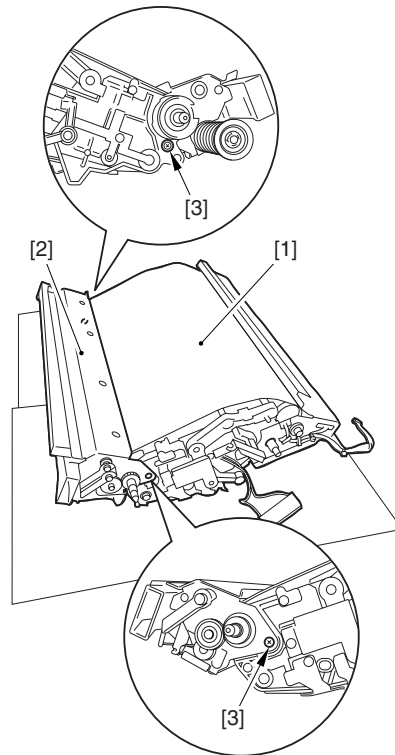

F-7-936

6) Turn the drive gear [3] until the area [2] of blade lubricant is no longer visible on the intermediate transfer belt [1].

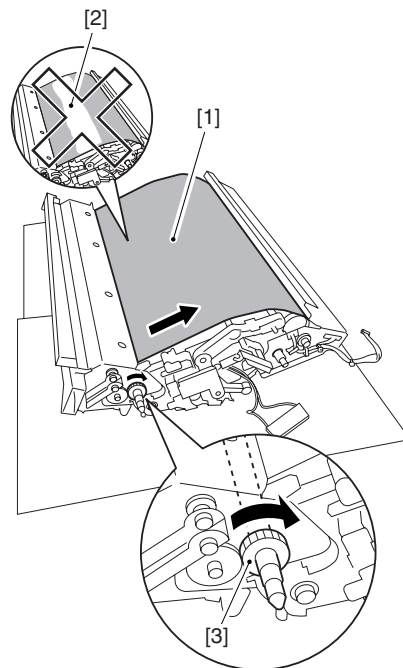

F-7-937

⚠ If you have replaced the ITB cleaner blade, be sure to perform the following:

1) Execute the following service mode item (black band sequence):

COPIER>FUNCTION>CLEANING>BK-BNDEX.


7.11.35 ITB Scoop-up Sheet

7.11.35.1 Removing the Right

Cover (upper)

0003-6740

1) Remove the 2 screws [1], and detach the right cover (upper) [2].

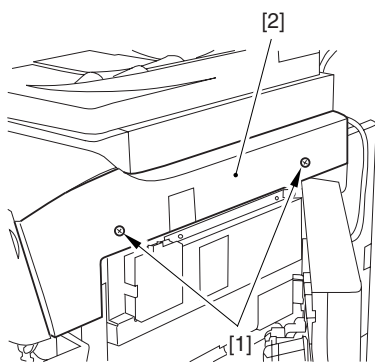


F-7-938

7.11.35.2 Releasing the Front

Cover


0003-6741

1) Open the front cover.
2) While pulling on the grip [1], fully open the manual feed cover [2] to the front.

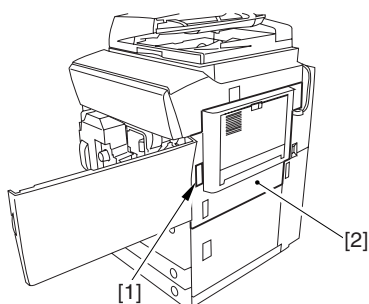

F-7-939


⚠ If a side paper deck exists, remove the 2 screws [1] and the latch plate (front)

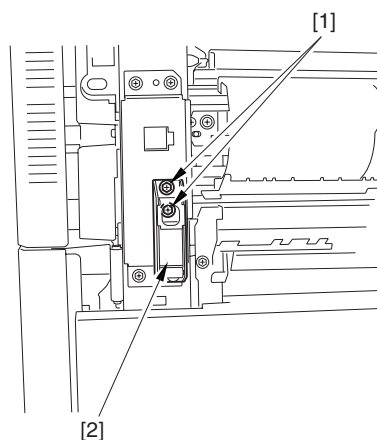

F-7-940

3) Slide out the fixing/feeding assembly


4) Remove the 2 screws [1], and detach the process unit cover [2].

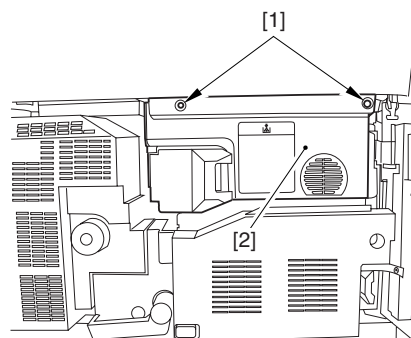

F-7-941


5) Push in the fixing/feeding assembly, and set the lever in place.

6) Push the release button [1] of the right deck, and slide out the right deck [2].

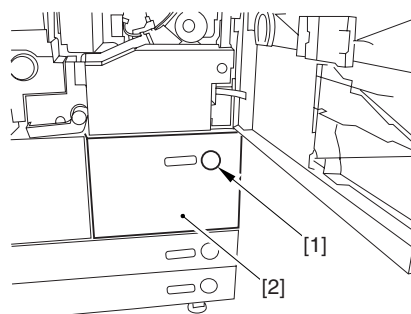


F-7-942

7) Remove the screw [1] from lower right, and detach the front cover strap [2].

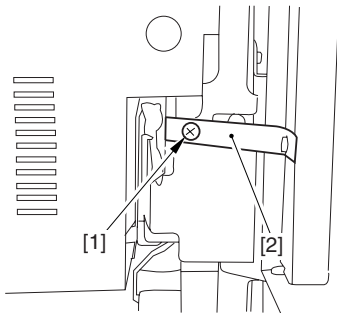


F-7-943

2) Shift down the lever [1], and detach the black toner bottle [2].

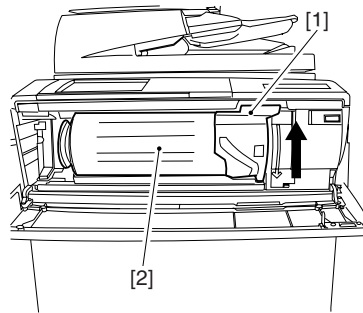


F-7-946

8) Remove the 2 screws [1] (binding) of the front cover hinge, and fully open the front cover [2].

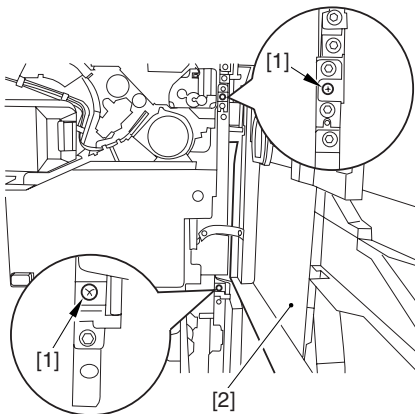

F-7-944

⚠ Once you have released the hopper assembly, toner can spill over the toner bottle supply mouth of the hopper assembly cover. Be sure to wipe off any such toner.

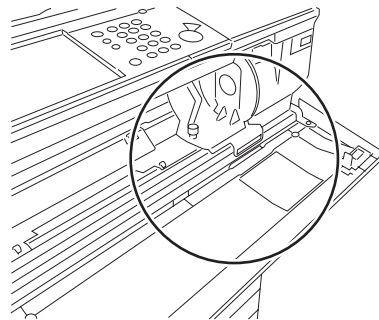


F-7-947

9) Close the right deck.

7.11.35.3 Releasing the Hopper Assembly


0003-6742

1) Open the black toner supply cover [1].

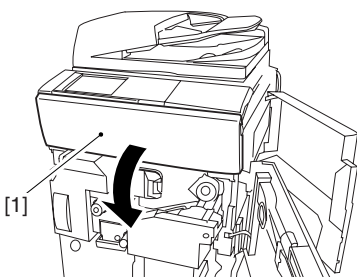


F-7-945

3) Remove the 3 screws [1].

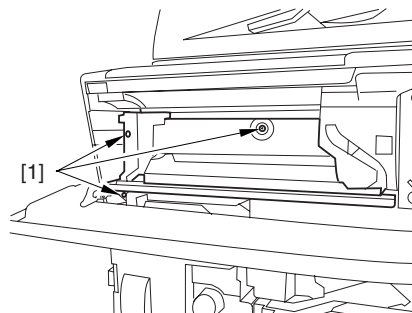

F-7-948


- 4) Close the black toner supply cover [1]; then, fully open the hopper assembly [2].

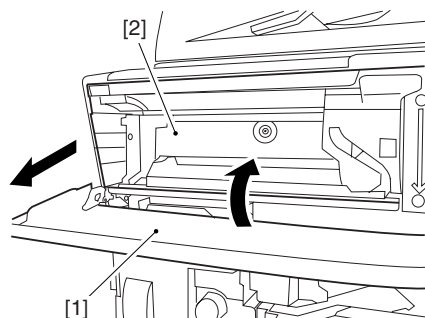

F-7-949

7.11.35.4 Removing the Pre-Transfer Charging Assembly 0005-7260


- 1) Remove the screw [1], and disconnect the connector [1]; then, detach the pre-transfer charging assembly [3] from the machine.

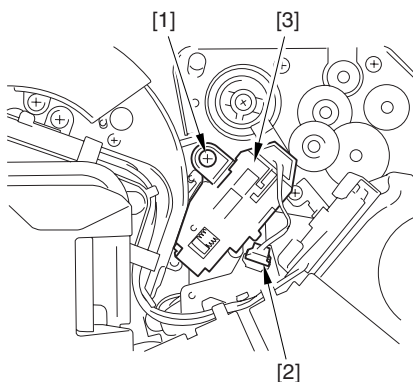

F-7-950


7.11.35.5 Removing the Transfer Cleaner Drive Assembly 0003-6743

- 1) Open the color toner supply mouth cover [1].

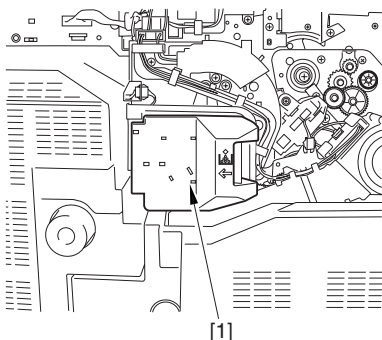


F-7-951

- 2) Disconnect the connector [1], and remove the screw [2]; then, detach the color toner supply cover [3].

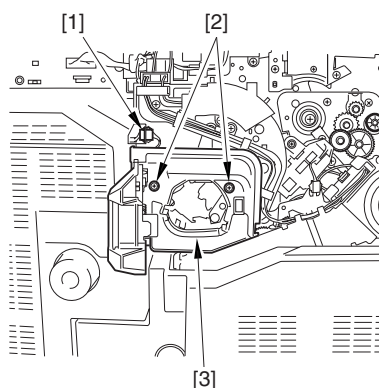


F-7-952

- 3) Slightly slide out the fixing/feeding assembly.
4) Disconnect the connector [1] to free it from the wire guide [2].

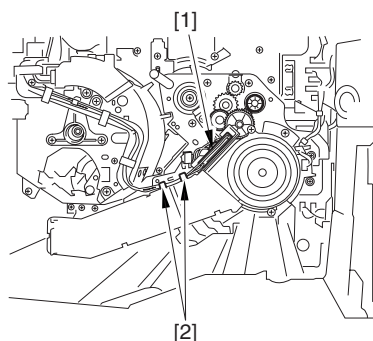


F-7-953

- 5) Remove the screw [1], and shift down the locking plate [2].

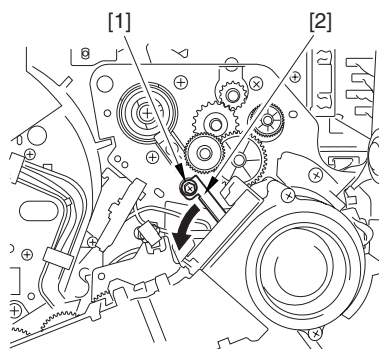

F-7-954

6) Disconnect the connector [1], and remove the 5 screws [2]; then, detach the transfer cleaner driver assembly [3].

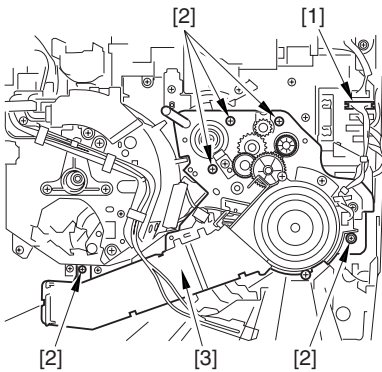


F-7-955

7.11.35.6 Removing the Intermediate Transfer Unit

[0003-6744](#)


1) Disconnect the 2 connectors [1].

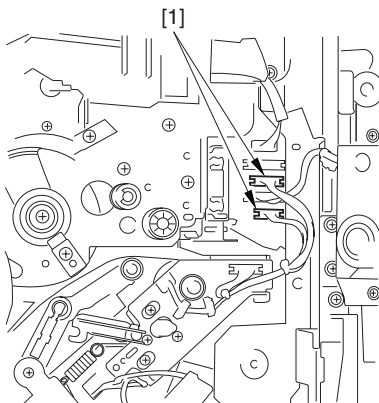

F-7-956

2) Fully slide out the fixing/feeding assembly.
3) Slide out the intermediate transfer assembly [1] to the front; when it stops, shift it slightly to the upper right and then slide it farther out to detach.

⚠ Do not touch the surface of the ITB. Also, be sure to slide the intermediate transfer assembly straight out so as to prevent damage to the surface of the ITB.

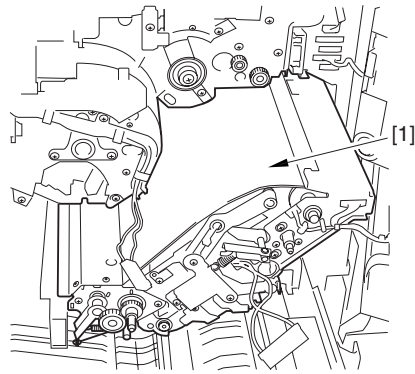


F-7-957

7.11.35.7 Cleaning the Surface of the Intermediate Transfer Unit


[0006-0343](#)

1) Place the ITB unit [1] on paper for protection.

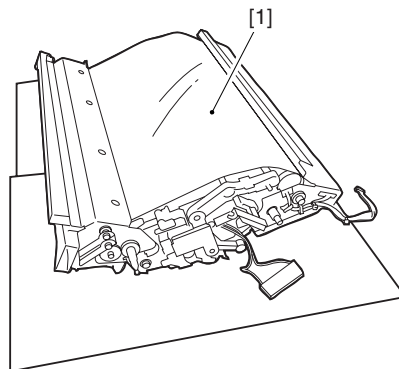


F-7-958

2) Turn the drive gear [1] by hand in the direction of the arrow to move the intermediate transfer belt [2] about 50 mm.

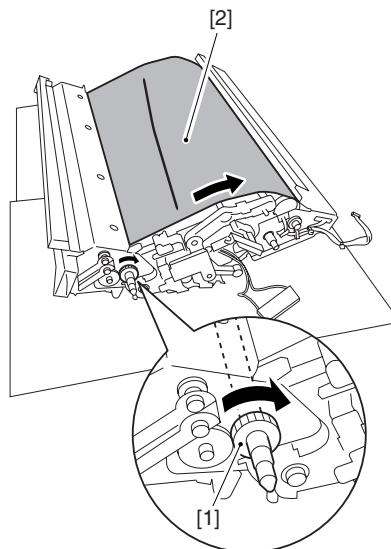


F-7-959

3) If there is any toner [3] on the surface of the intermediate transfer belt, dry wipe it with lint-free paper.

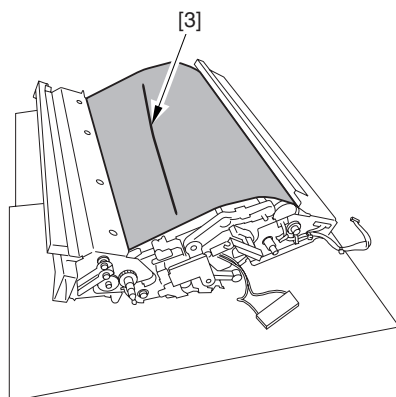

F-7-960

⚠ When you remove the transfer cleaner drive assembly, the ITB cleaning blade [1] is likely to come into contact with the intermediate transfer belt by the work of a spring, causing toner [2] to deposit on the belt surface in the form of lines. The toner can then be forced against the photosensitive drum by the primary transfer assembly, thus affecting the photosensitive drum cleaning blade [3].

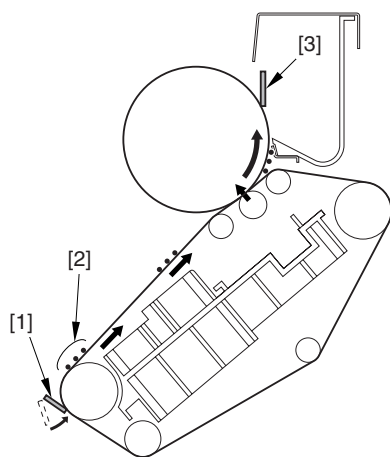


F-7-961

7.11.35.8 Removing the ITB

Cleaning Unit

0003-6738

1) Remove the 2 screws [1]; then, slide the ITB cleaning unit [2] in the direction of the arrow to detach.

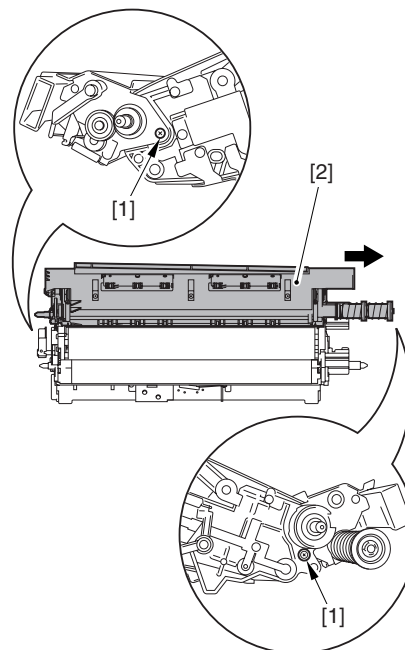


F-7-962

7.11.35.9 Removing the ITB

Scoop-Up Sheet

0003-6737

1) Remove the 2 screws [1], and detach the ITB scoop-up sheet [2].

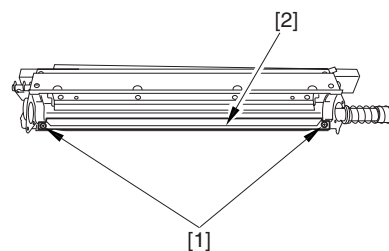


F-7-963

7.11.36 Intermediate Transfer Belt Static Eliminator

7.11.36.1 Removing the Right Cover (upper)

0003-8268

- 1) Remove the 2 screws [1], and detach the right cover (upper) [2].

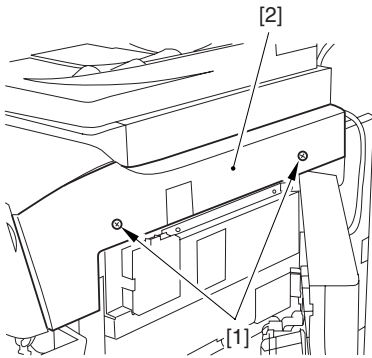


F-7-964

7.11.36.2 Releasing the Front Cover


0003-2606

- 1) Open the front cover.
- 2) While pulling on the grip [1], fully open the manual feed cover [2] to the front.

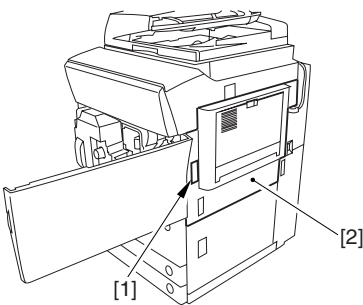


F-7-965

- ⚠** If a side paper deck exists, remove the 2 screws [1] and the latch plate (front)

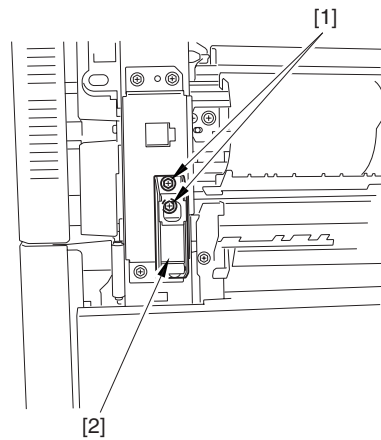


F-7-966

- 3) Slide out the fixing/feeding assembly
- 4) Remove the 2 screws [1], and detach the process unit cover [2].

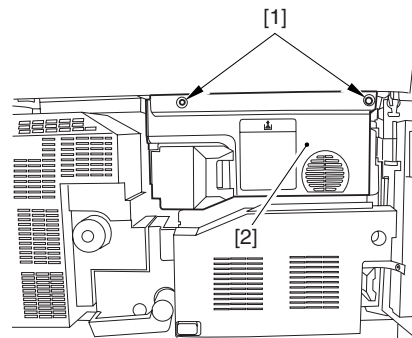


F-7-967

- 5) Push in the fixing/feeding assembly, and set the lever in place.
- 6) Push the release button [1] of the right deck, and slide out the right deck [2].

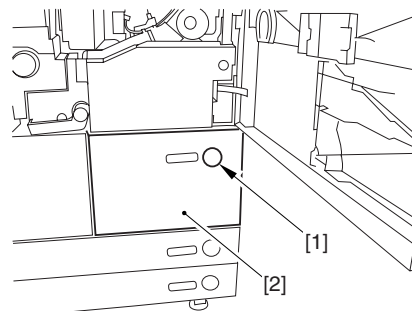


F-7-968

7) Remove the screw [1] from lower right, and detach the front cover strap [2].

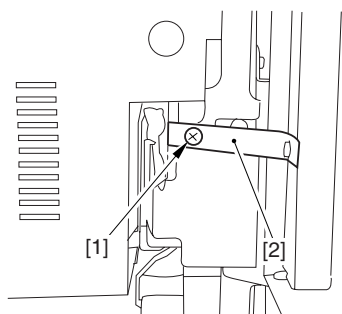


F-7-969

2) Shift down the lever [1], and detach the black toner bottle [2].

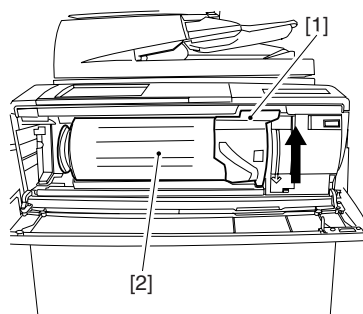


F-7-972

8) Remove the 2 screws [1] (binding) of the front cover hinge, and fully open the front cover [2].

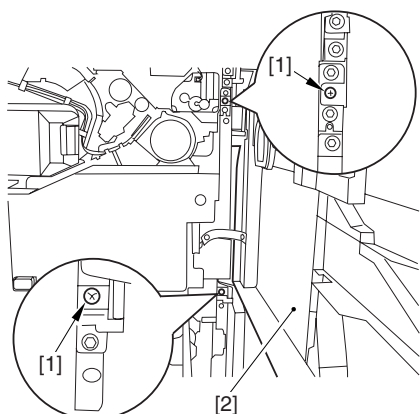

F-7-970

⚠ Once you have released the hopper assembly, toner can spill over the toner bottle supply mouth of the hopper assembly cover. Be sure to wipe off any such toner.

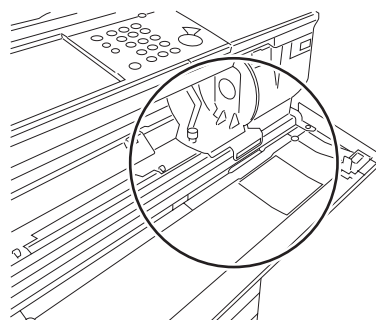


F-7-973

9) Close the right deck.

7.11.36.3 Releasing the Hopper Assembly


0003-2607

1) Open the black toner supply cover [1].

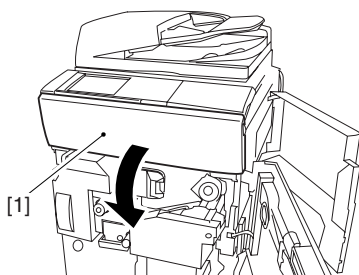


F-7-971

3) Remove the 3 screws [1].

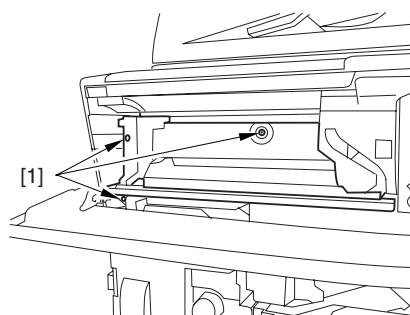

F-7-974


- 4) Close the black toner supply cover [1]; then, fully open the hopper assembly [2].

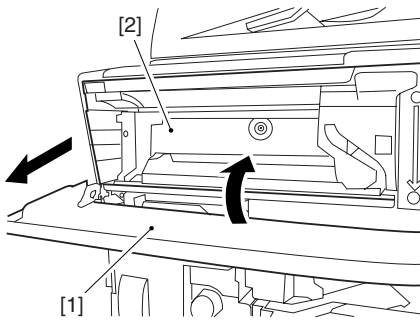

F-7-975

7.11.36.4 Removing the Pre-Transfer Charging Assembly 0005-7261


- 1) Remove the screw [1], and disconnect the connector [1]; then, detach the pre-transfer charging assembly [3] from the machine.

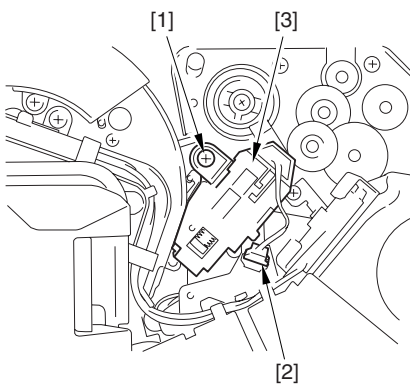

F-7-976


7.11.36.5 Removing the Transfer Cleaner Drive Assembly 0003-2605

- 1) Open the color toner supply mouth cover [1].

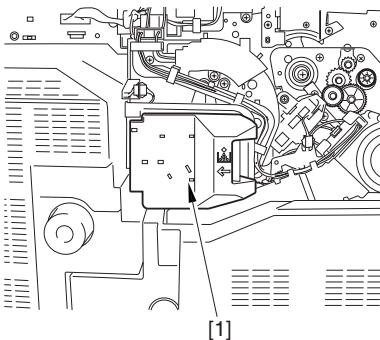


F-7-977

- 2) Disconnect the connector [1], and remove the screw [2]; then, detach the color toner supply cover [3].

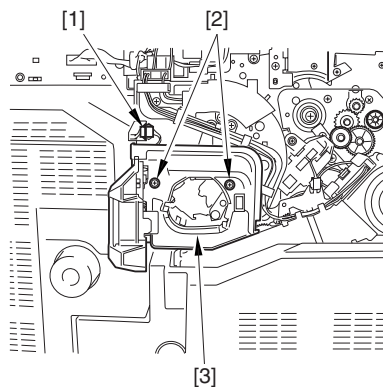


F-7-978

- 3) Slightly slide out the fixing/feeding assembly.
4) Disconcert the connector [1] to free it from the wire guide [2].

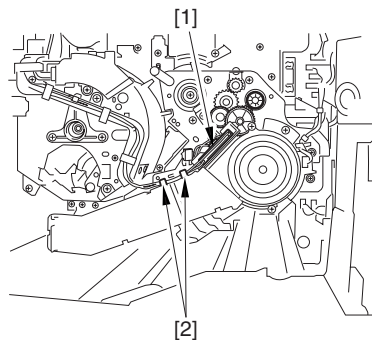


F-7-979

- 5) Remove the screw [1], and shift down the locking plate [2].

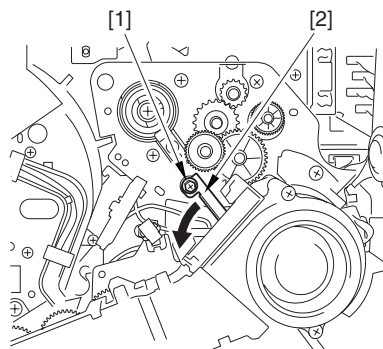

F-7-980


6) Disconnect the connector [1], and remove the 5 screws [2]; then, detach the transfer cleaner driver assembly [3].

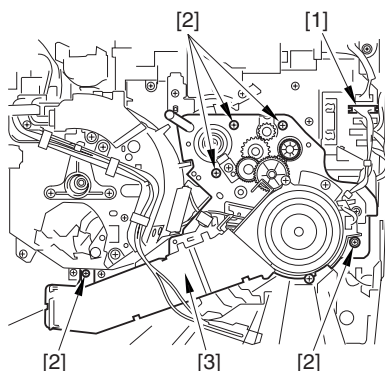

F-7-981

7.11.36.6 Removing the Intermediate Transfer Unit 0003-2604


1) Disconnect the 2 connectors [1].

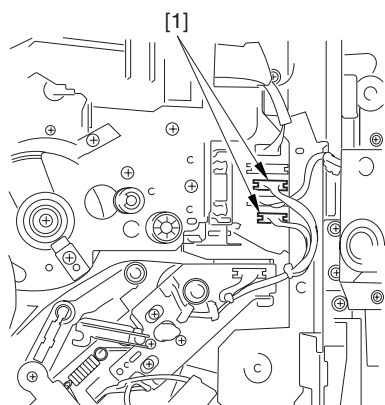

F-7-982

2) Fully slide out the fixing/feeding assembly.
3) Slide out the intermediate transfer assembly [1] to the front; when it stops, shift it slightly to the upper right and then slide it farther out to detach.


⚠ Do not touch the surface of the ITB. Also, be sure to slide the intermediate transfer assembly straight out so as to prevent damage to the surface of the ITB.

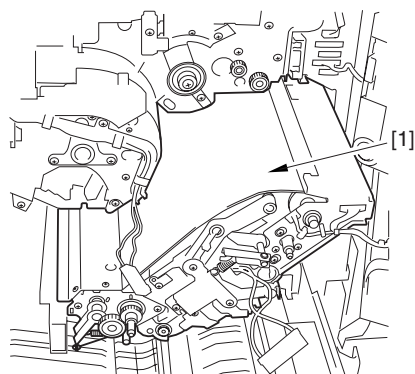

F-7-983


7.11.36.7 Cleaning the Surface of the Intermediate Transfer Unit 0006-0342

1) Place the ITB unit [1] on paper for protection.

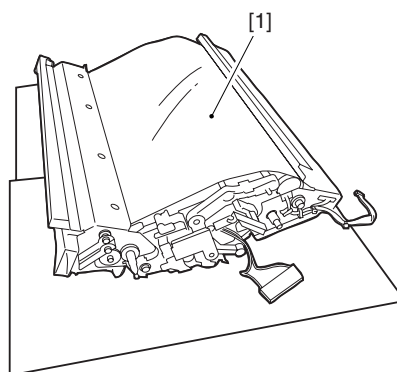


F-7-984

2) Turn the drive gear [1] by hand in the direction of the arrow to move the intermediate transfer belt [2] about 50 mm.

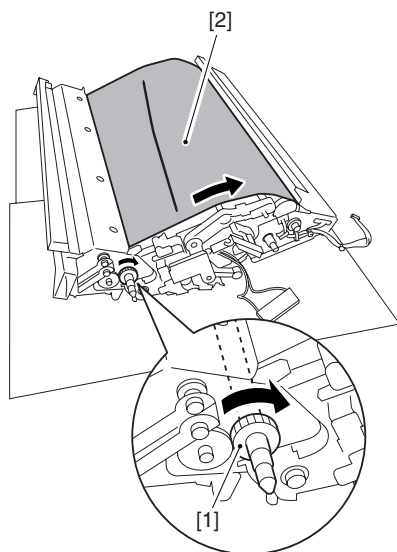


F-7-985

3) If there is any toner [3] on the surface of the intermediate transfer belt, dry wipe it with lint-free paper.

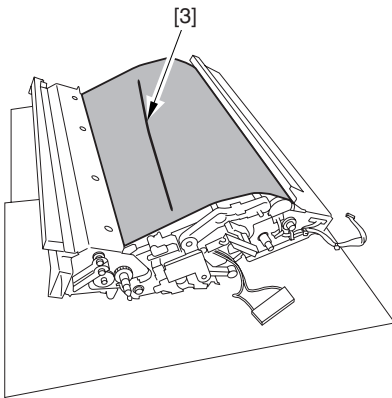

F-7-986

⚠When you remove the transfer cleaner drive assembly, the ITB cleaning blade [1] is likely to come into contact with the intermediate transfer belt by the work of a spring, causing toner [2] to deposit on the belt surface in the form of lines. The toner can then be forced against the photosensitive drum by the primary transfer assembly, thus affecting the photosensitive drum cleaning blade [3].

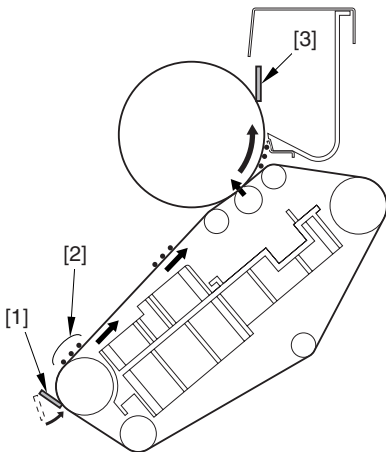


F-7-987

7.11.36.8 Removing the ITB

Cleaning Unit

0003-2602

1) Remove the 2 screws [1]; then, slide the ITB cleaning unit [2] in the direction of the arrow to detach.

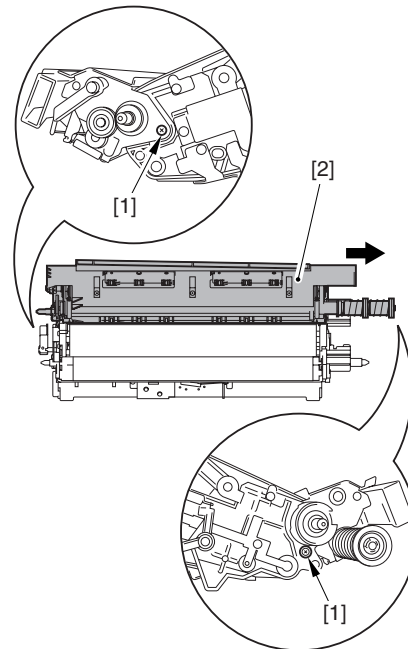


F-7-988

7.11.36.9 Removing the Patch

Image Reading Unit

0003-9014


1) Shift the arm [1] shown in the figure to lock it in place; thus releasing the roller (both front and rear).

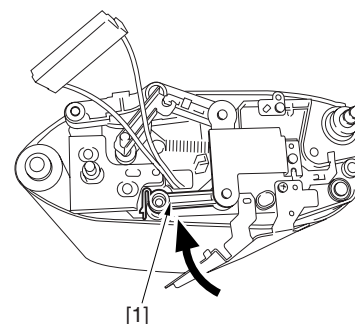

F-7-989

2) Stand the intermediate transfer unit by fitting its 2 pins [2] in the 2 holes of the fixing/feeding assembly.


⚠ Make sure that the ITB cleaner unit has been already removed.

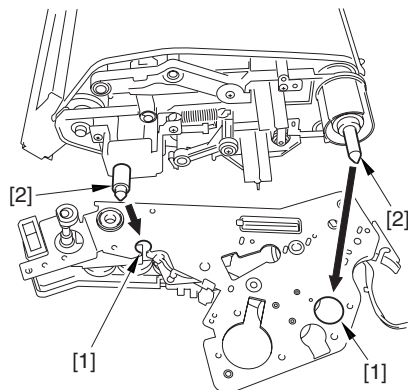

F-7-990

3) Disconnect the connector [1], and free the cable [3] from the 3 cable clamps [2].

4) Remove the 2 screws [4], and detach the patch image reading unit [5].

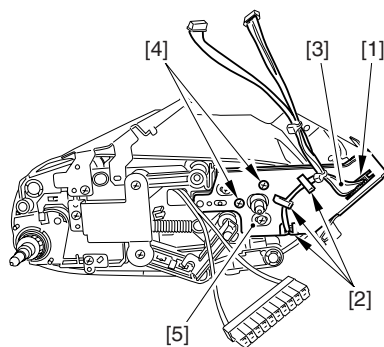


F-7-991

7.11.36.10 Removing the Idler Roller


0003-2664

1) Remove the screw [1], and detach the pre-transfer guide [2].

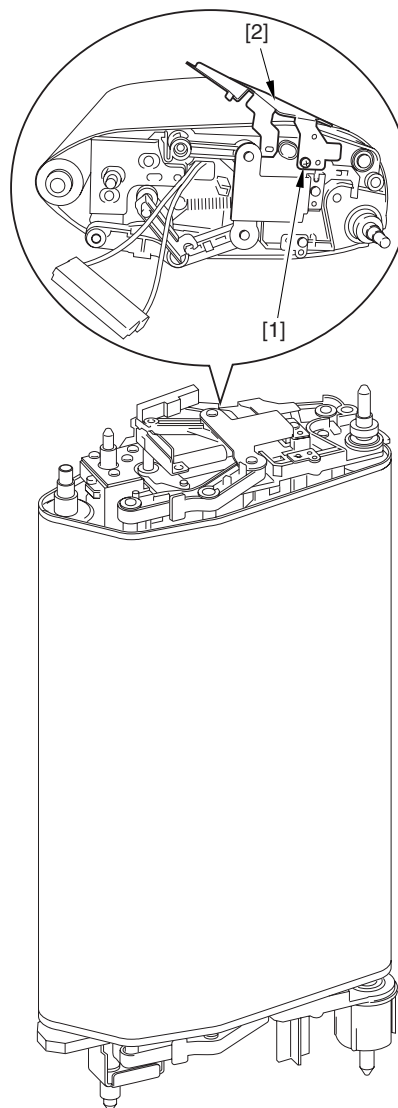

F-7-992

- 2) Holding the shaft of the idler roller [1], pull the roller upright to detach.

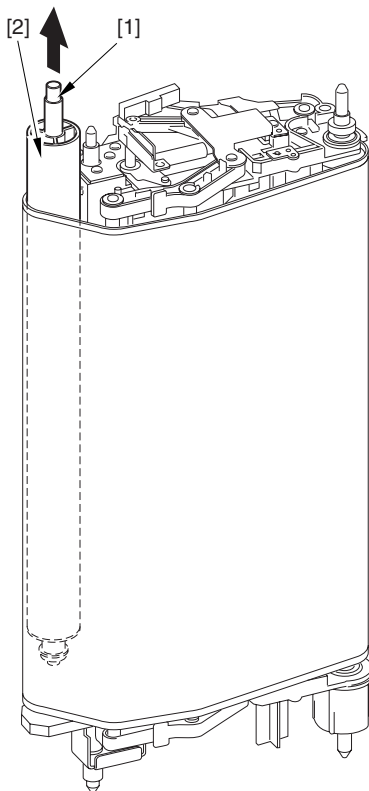


F-7-993

⚠ When detaching the roller, take care not to damage the surface of the ITB by the roller.

7.11.36.11 Removing the ITB 0003-2600

- 1) Holding the ITB [1] by the edge, pull it straight up to detach.

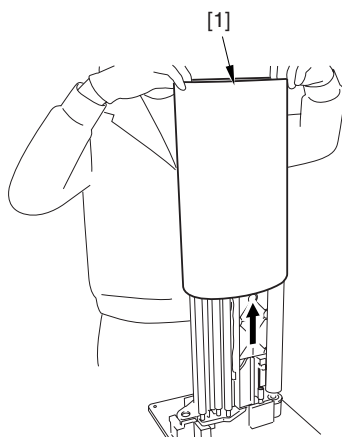


F-7-994

7.11.36.12 Removing the ITB

Static Eliminator

0002-6352

- 1) Shift down the lock lever [1] in the direction of the arrow; then, pull up the roller arm [2].
- 2) Free the 2 claws [3], and detach the ITB static eliminator [4].

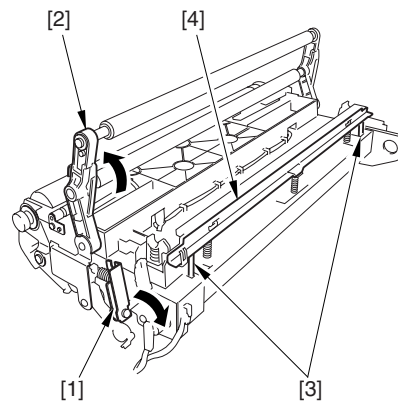


F-7-995

7.11.37 Secondary Transfer Static Eliminator

7.11.37.1 Removing the Secondary Transfer Static Eliminator Holder 0003-6734

- 1) Open the front cover.
- 2) Slide out the fixing/feeding assembly.
- 3) Remove the 2 screws [1], and detach the secondary transfer guide [2].
- 4) Remove the secondary transfer static eliminator holder [3].

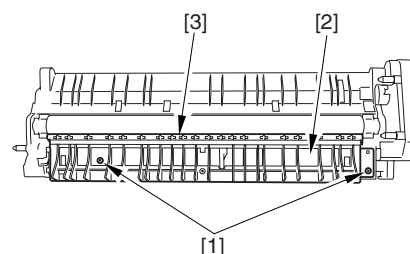

F-7-996

7.11.38 Potential Sensor Unit

7.11.38.1 Outline

0004-5165

The potential sensor unit includes the following 4 parts:

- potential control PCB
- potential sensor
- potential sensor relay harness (between relay connector and potential control PCB)
- potential sensor harness (between potential sensor and relay connector)


⚠ Be sure that the potential sensor and the potential control PCB are always replaced at the same time.

7.11.38.2 Removing the

Potential Control PCB


0004-5166

- 1) Open the upper right cover.
- 2) Remove the screw [1], and open the upper right cover [1] wider.

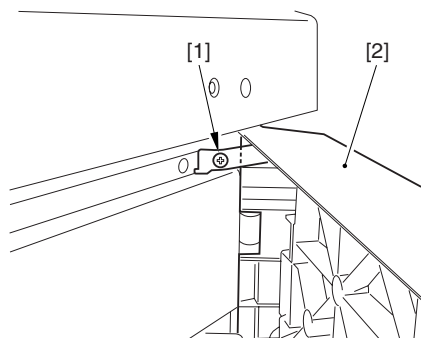


F-7-997

- 3) Remove the screw [1], and detach the filter retainer [2] and the filter [3].
- 4) Remove the screws [4], and detach the connector cover [4].

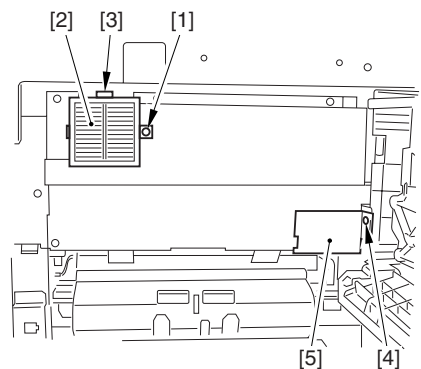


F-7-998

- 5) Remove the screw [1], and detach the grounding wire [2].
- 6) Remove the 5 screws [3], and detach the side plate [4].

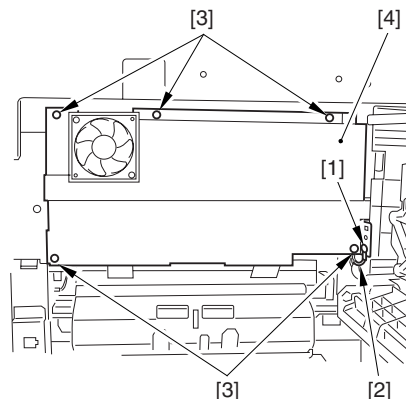

F-7-999

- 7) Disconnect the 2 connectors [1].
- 8) Remove the 2 screws [2], and detach the potential control PCB [3].

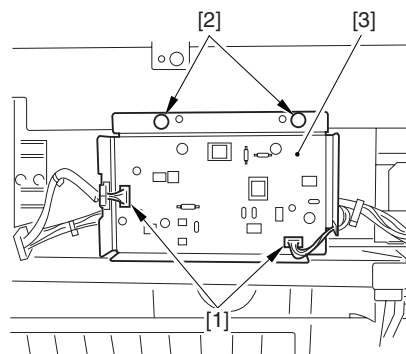


F-7-1000

7.11.38.3 Removing the Right Cover (upper)

0004-5168

- 1) Remove the 2 screws [1], and detach the right cover (upper) [2].

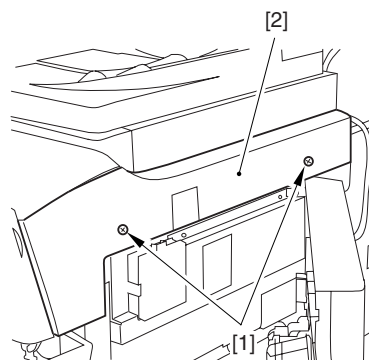


F-7-1001

7.11.38.4 Releasing the Front

Cover


0004-5169

- 1) Open the front cover.
- 2) While pulling on the grip [1], fully open the manual feed cover [2] to the front.

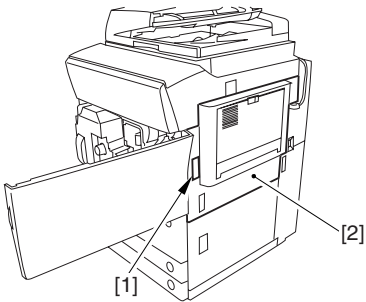


F-7-1002

⚠ If a side paper deck exists, remove the 2 screws [1] and the latch plate (front)

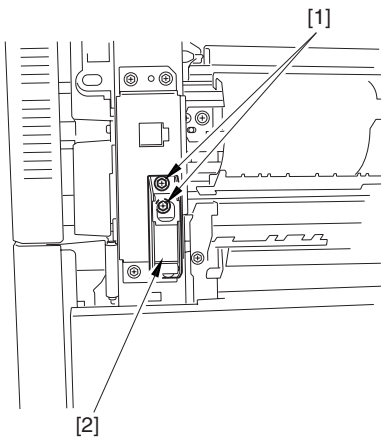


F-7-1003

- 3) Slide out the fixing/feeding assembly
- 4) Remove the 2 screws [1], and detach the process unit cover [2].

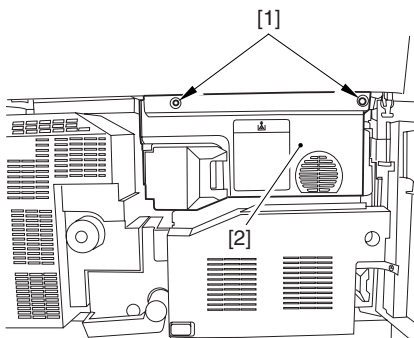


F-7-1004

- 5) Push in the fixing/feeding assembly, and set the lever in place.
- 6) Push the release button [1] of the right deck, and slide out the right deck [2].

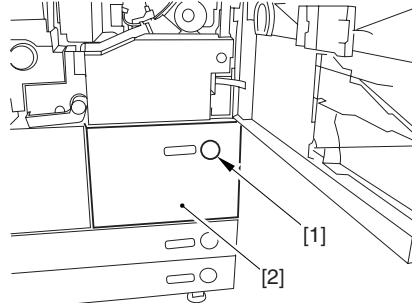


F-7-1005

- 7) Remove the screw [1] from lower right, and detach the front cover strap [2].

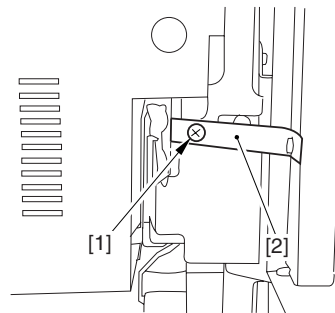

F-7-1006

- 8) Remove the 2 screws [1] (binding) of the front cover hinge, and fully open the front cover [2].

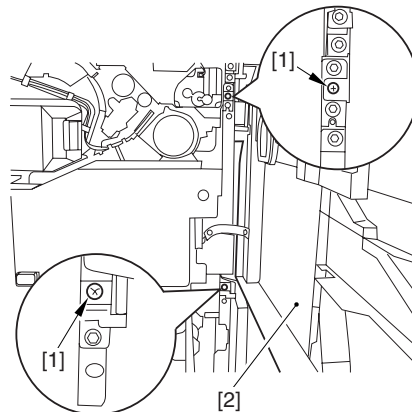

F-7-1007


- 9) Close the right deck.

7.11.38.5 Releasing the Hopper

Assembly


0004-5170

- 1) Open the black toner supply cover [1].

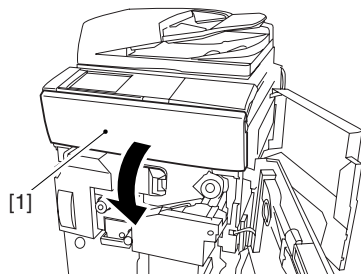


F-7-1008

- 2) Shift down the lever [1], and detach the black toner bottle [2].

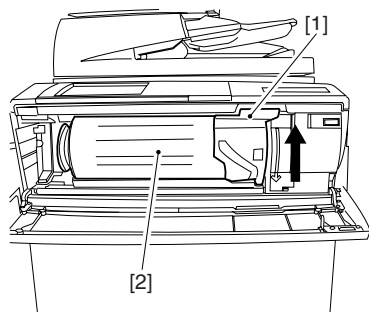


F-7-1009

⚠ Once you have released the hopper assembly, toner can spill over the toner bottle supply mouth of the hopper assembly cover. Be sure to wipe off any such toner.

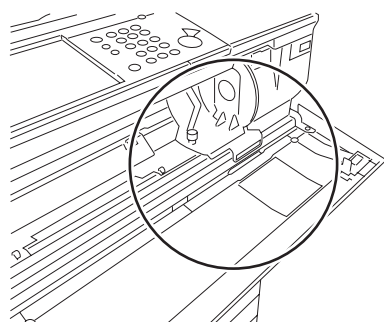


F-7-1010

- 3) Remove the 3 screws [1].

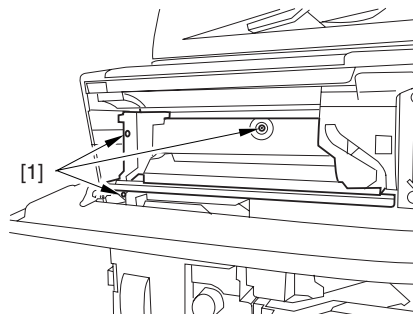

F-7-1011

- 4) Close the black toner supply cover [1]; then, fully open the hopper assembly [2].

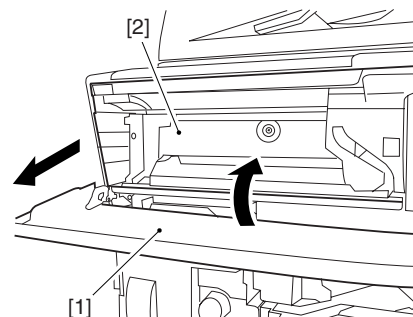


F-7-1012

7.11.38.6 Sliding Out the Process Unit


0004-5171

- 1) Disconnect the 5 connectors [1] found at the upper right.

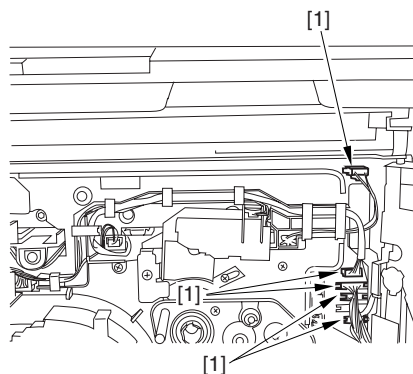


F-7-1013

2) Disconnect the 5 connectors [1] found at the upper left.

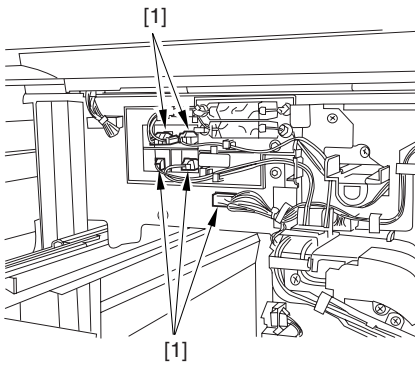


F-7-1014

3) After freeing the high-voltage connector cable [1] from the 2 wire saddles [2], fix the cable in place using the cable hook [3].

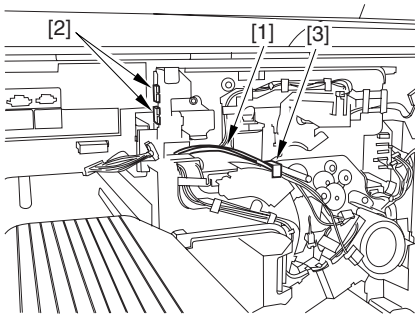

F-7-1015

4) Take out the process unit cover [1] from the shipping box, and detach the drum stop tool [2] from the back of the cover.

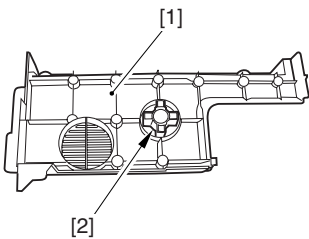


F-7-1016

5) While forcing the drum stop tool [3] against the drum fixing member [2] of the drum shift [1], remove the fixing screw [4].



1: Be sure to match the protrusion [5] of the drum fixing member and the protrusion [6] of the drum stop tool.

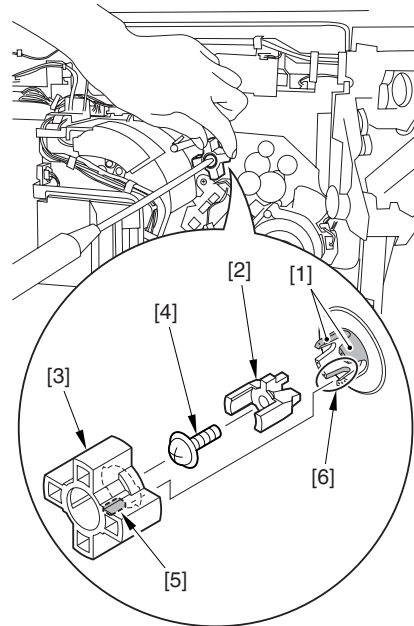


F-7-1017

2: When drawing out the process unit, be sure to find out the position of the protrusion [1] of the drum fixing member in relation to the marking [2] on the drum flange.

In the example in the figure, the marking [2] on the drum flange is at "." on the left and at ".." on the right in relation to the protrusion [2] of the drum fixing member.


Moreover, when you close the process unit, it is important that the spatial relationship between the protrusion of the drum fixing member and the marking on the drum flange is as it was before you drew out the unit.

6) Using a pair of fine pliers, remove the drum fixing member [1].

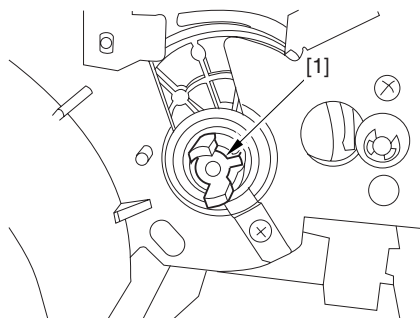


F-7-1018

7) Remove the 3 binding screws (M4x8) [1].

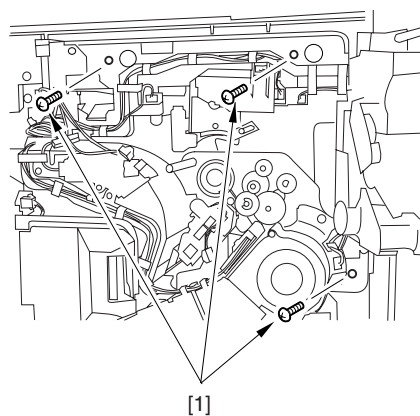


F-7-1019

8) Shift down the fixing/feeding assembly releasing lever [1] in the direction of the arrow.

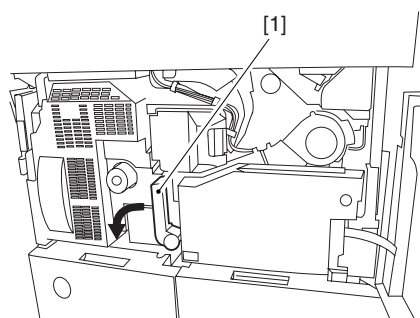


F-7-1020

9) Slide out the fixing/feeding assembly [1] toward the front.

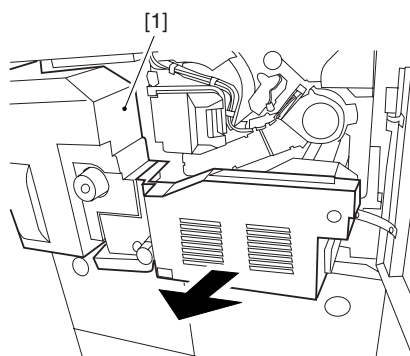


F-7-1021

10) While pushing on the 2 hooks [1] found on both sides of the fixing/feeding assembly, fully slide out the fixing/feeding assembly [2].

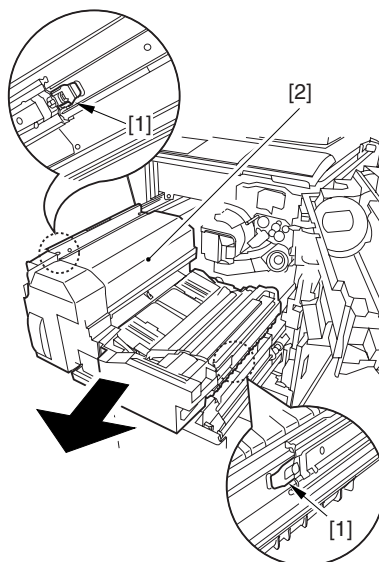

F-7-1022


11) Slightly lift both ends [1] of the process unit, and fully slide out the process unit [2].

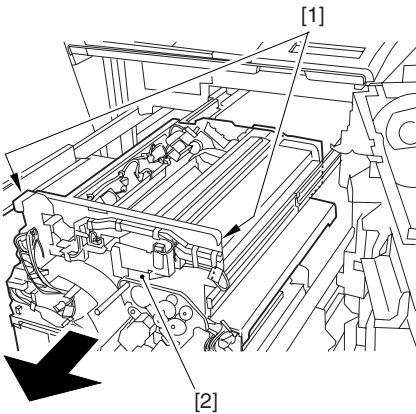


F-7-1023

When you have slid out the process unit, check to see if any of the following parts is soiled with toner before fitting it back in; if soiled, dry wipe the part:

- entire surface of the deck top panel [1]
- front bend of the deck top panel [2]
- lower rear sheet (4 locations) of the fixing/feeding assembly [3].

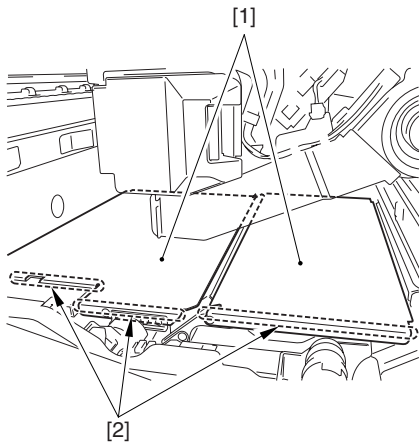

F-7-1024

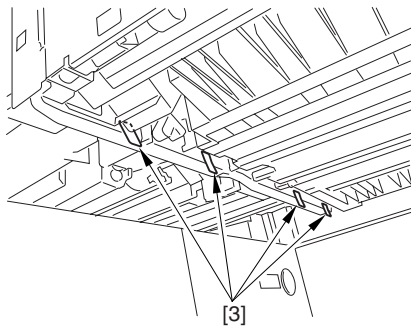

F-7-1025

7.11.38.7 Removing the Black Developing Unit


0004-5172

⚠ Points to Note About the Work

1 The machine's developing unit is not equipped with a developing cylinder protection cover. Take full care, therefore, not to damage the developing cylinder when you have detached the developing unit.


The waste toner collecting inside the machine can move into the fixing/feeding assembly through the outlet; be sure to place paper under the process unit for the work.

2. The machine's black developing unit is equipped with a potential sensor. Do not touch the sensor window [1] indicated in the figure. Moreover, take care not to drop the black developing assembly or otherwise subject it to impact so as to avoid damage to the potential sensor.

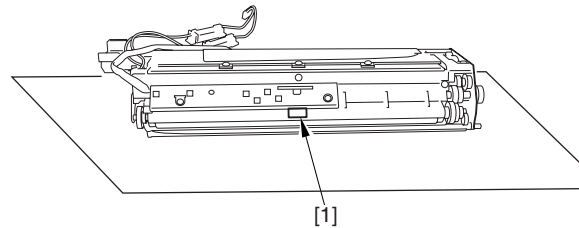


F-7-1026

1) Open the harness guide used to fix the high-voltage cable [1] in place.

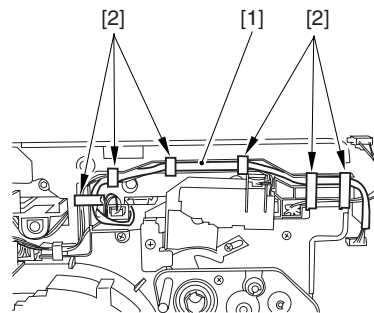


F-7-1027

2) Remove the screw [2], and detach the black developing assembly locking plate [1].

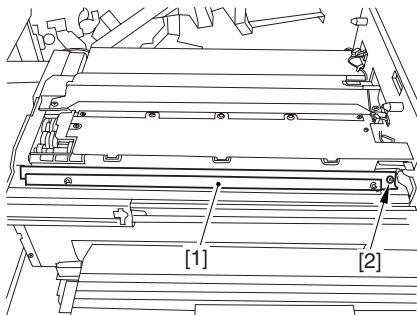


F-7-1028

3) Remove the 2 screws [2], and detach the black developing assembly joint plate [1].

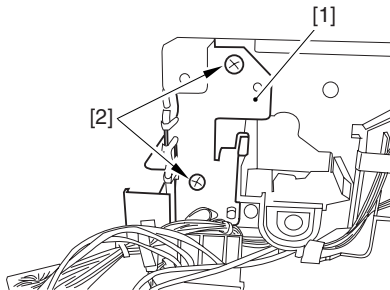


F-7-1029

4) Disconnect the connector [1].

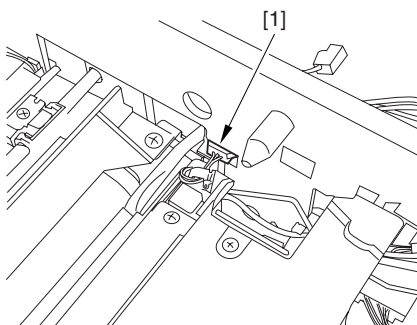

F-7-1030


5) Push in the high-voltage cable [1] through the opening [2] indicated in the figure.

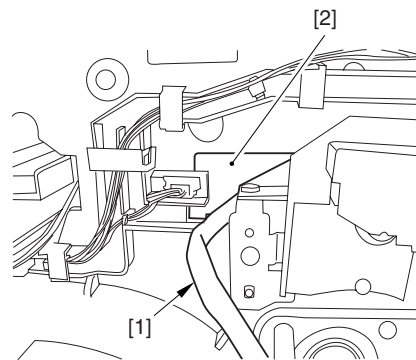

F-7-1031

6) While holding the high-voltage cable [1] in place as shown, detach the black developing assembly [2] in upward direction.

⚠ When detaching the black developing assembly, be sure to work with the high-voltage cable kept at the top of the assembly so that its connector will not damage the surface of the photosensitive drum.

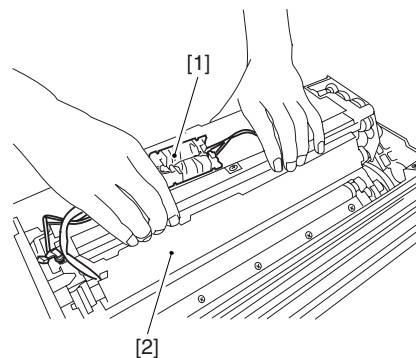


F-7-1032

7.11.38.8 Removing the Potential Sensor

0004-5173

- 1) Remove the 3 screws [1], and detach the potential sensor together with developing cover [2].

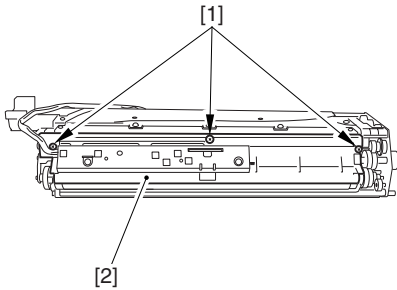


F-7-1033

7.11.39 ATR Sensor Unit

7.11.39.1 Removing the Right Cover (upper)

0003-8270

- 1) Remove the 2 screws [1], and detach the right cover (upper) [2].

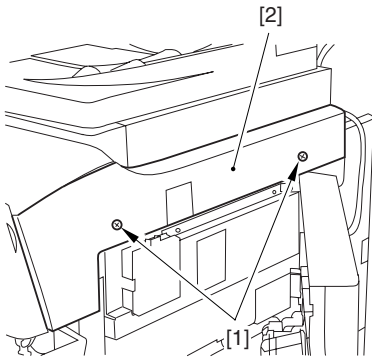


F-7-1034

7.11.39.2 Releasing the Front Cover


0003-2673

- 1) Open the front cover.
- 2) While pulling on the grip [1], fully open the manual feed cover [2] to the front.

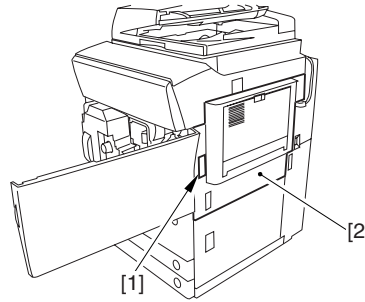


F-7-1035

⚠ If a side paper deck exists, remove the 2 screws [1] and the latch plate (front)

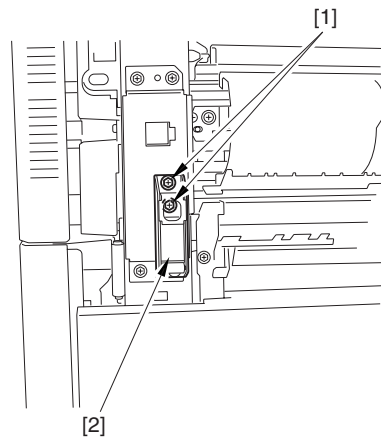


F-7-1036

- 3) Slide out the fixing/feeding assembly
- 4) Remove the 2 screws [1], and detach the process unit cover [2].

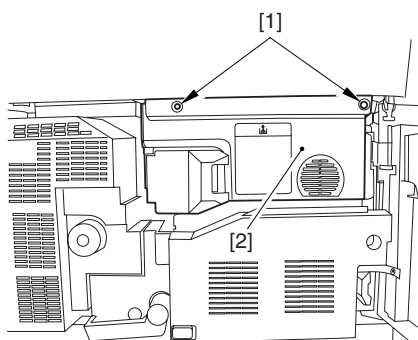


F-7-1037

- 5) Push in the fixing/feeding assembly, and set the lever in place.
- 6) Push the release button [1] of the right deck, and slide out the right deck [2].

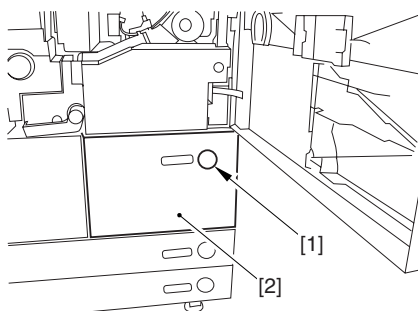


F-7-1038

- 7) Remove the screw [1] from lower right, and detach the front cover strap [2].

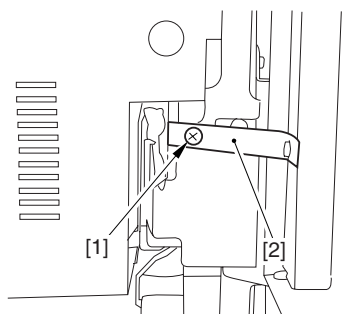

F-7-1039

- 8) Remove the 2 screws [1] (binding) of the front cover hinge, and fully open the front cover [2].

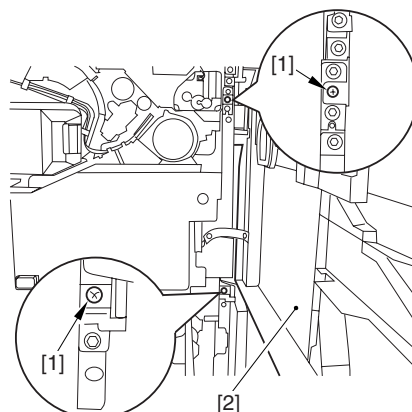


F-7-1040

- 9) Close the right deck.

7.11.39.3 Releasing the Hopper Assembly


0003-2675

- 1) Open the black toner supply cover [1].

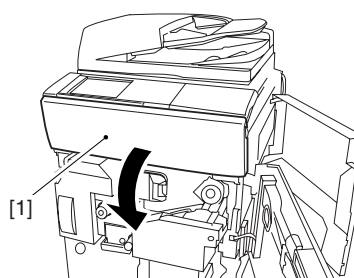


F-7-1041

- 2) Shift down the lever [1], and detach the black toner bottle [2].

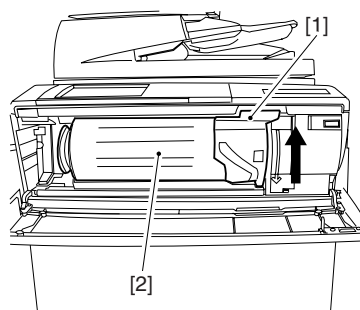


F-7-1042

⚠ Once you have released the hopper assembly, toner can spill over the toner bottle supply mouth of the hopper assembly cover. Be sure to wipe off any such toner.

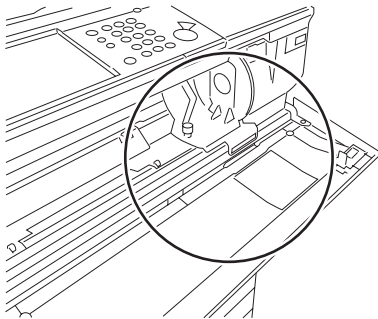


F-7-1043

3) Remove the 3 screws [1].

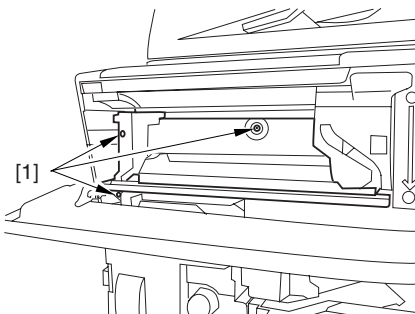

F-7-1044

4) Close the black toner supply cover [1]; then, fully open the hopper assembly [2].

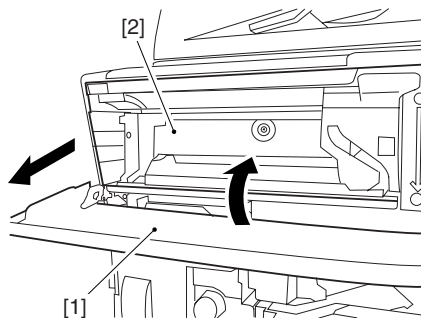


F-7-1045

7.11.39.4 Sliding Out the Process Unit


0003-2672

1) Disconnect the 5 connectors [1] found at the upper right.

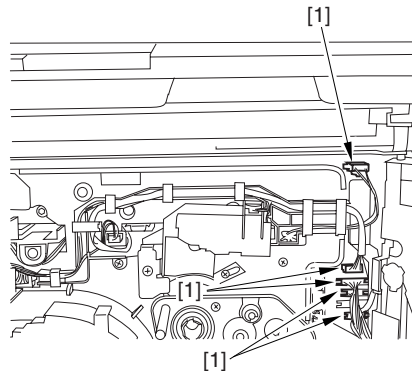


F-7-1046

2) Disconnect the 5 connectors [1] found at the upper left.

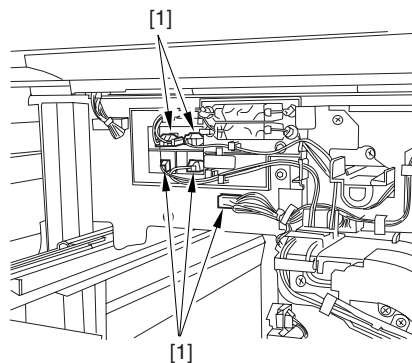


F-7-1047

3) After freeing the high-voltage connector cable [1] from the 2 wire saddles [2], fix the cable in place using the cable hook [3].

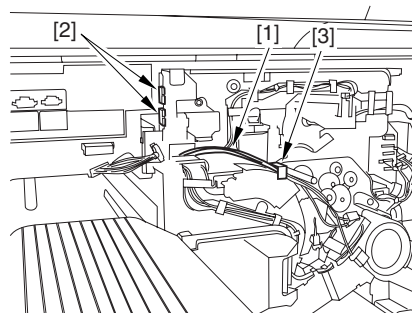

F-7-1048

4) Take out the process unit cover [1] from the shipping box, and detach the drum stop tool [2] from the back of the cover.

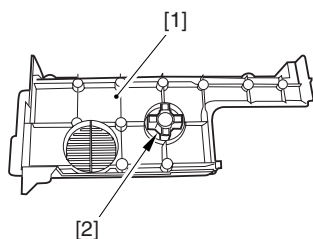


F-7-1049

5) While forcing the drum stop tool [3] against the drum fixing member [2] of the drum shift [1], remove the fixing screw [4].



1: Be sure to match the protrusion [5] of the drum fixing member and the protrusion [6] of the drum stop tool.

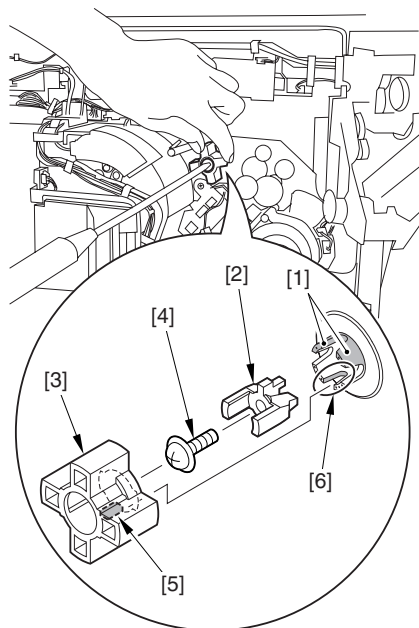


F-7-1050

2: When drawing out the process unit, be sure to find out the position of the protrusion [1] of the drum fixing member in relation to the marking [2] on the drum flange.

In the example in the figure, the marking [2] on the drum flange is at "." on the left and at ".." on the right in relation to the protrusion [2] of the drum fixing member.


Moreover, when you close the process unit, it is important that the spatial relationship between the protrusion of the drum fixing member and the marking on the drum flange is as it was before you drew out the unit.

6) Using a pair of fine pliers, remove the drum fixing member [1].

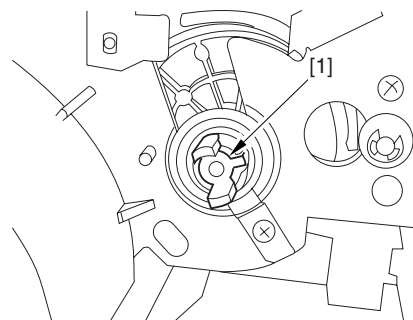


F-7-1051

7) Remove the 3 binding screws (M4x8) [1].

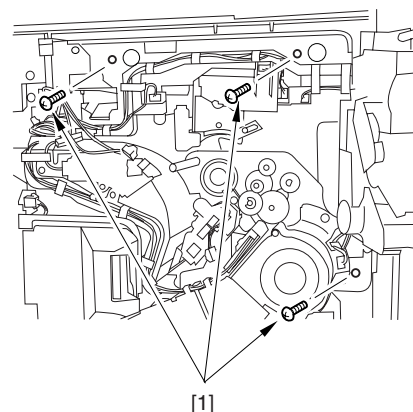


F-7-1052

8) Shift down the fixing/feeding assembly releasing lever [1] in the direction of the arrow.

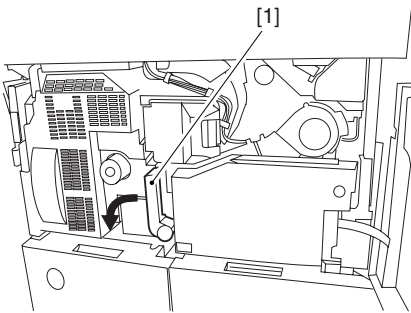


F-7-1053

9) Slide out the fixing/feeding assembly [1] toward the front.

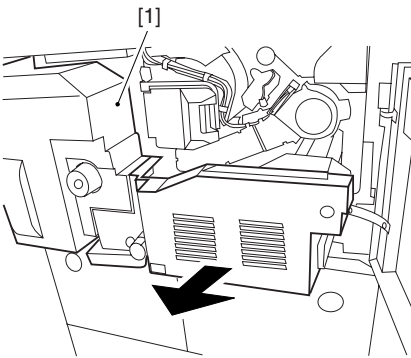


F-7-1054

10) While pushing on the 2 hooks [1] found on both sides of the fixing/feeding assembly, fully slide out the fixing/feeding assembly [2].

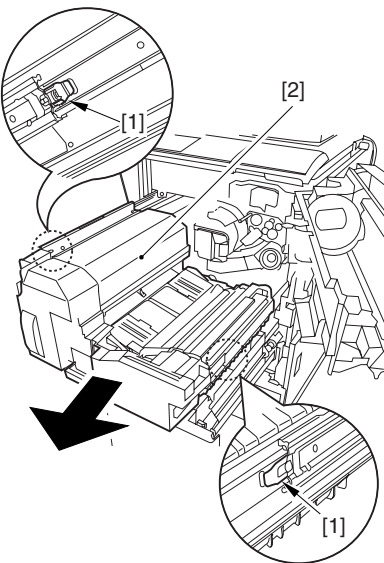

F-7-1055


11) Slightly lift both ends [1] of the process unit, and fully slide out the process unit [2].

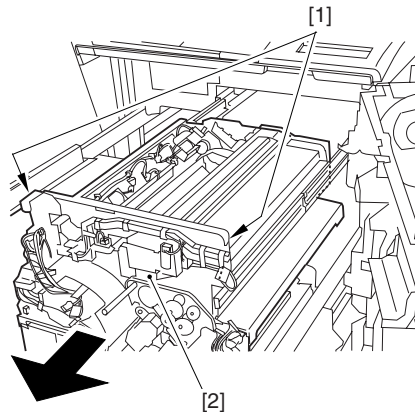


F-7-1056

When you have slid out the process unit, check to see if any of the following parts is soiled with toner before fitting it back in; if soiled, dry wipe the part:

- entire surface of the deck top panel [1]
- front bend of the deck top panel [2]
- lower rear sheet (4 locations) of the fixing/feeding assembly [3].

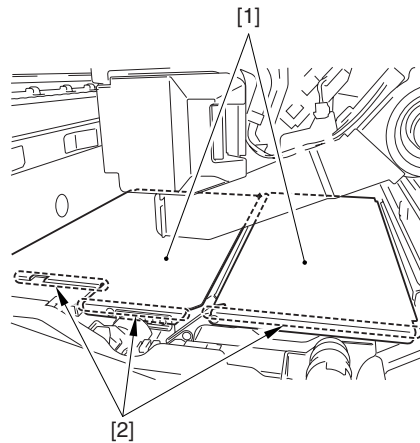

F-7-1057

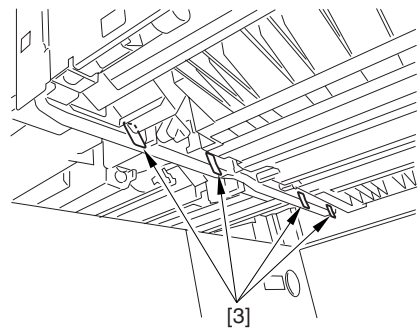

F-7-1058

7.11.39.5 Removing the Black

Developing Unit


0003-2668

▲ Points to Note About the Work

1 The machine's developing unit is not equipped with a developing cylinder protection cover. Take full care, therefore, not to damage the developing cylinder when you have detached the developing unit.


The waste toner collecting inside the machine can move into the fixing/feeding assembly through the outlet; be sure to place paper under the process unit for the work.

2. The machine's black developing unit is equipped with a potential sensor. Do not touch the sensor window [1] indicated in the figure. Moreover, take care not to drop the black developing assembly or otherwise subject it to impact so as to avoid damage to the potential sensor.

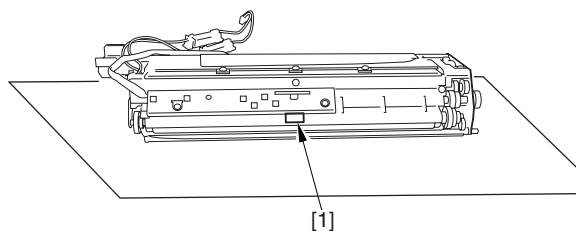


F-7-1059

1) Open the harness guide used to fix the high-voltage cable [1] in place.

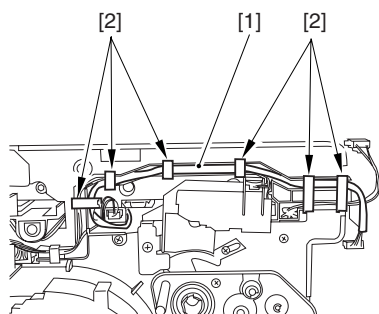


F-7-1060

2) Remove the screw [2], and detach the black developing assembly locking plate [1].

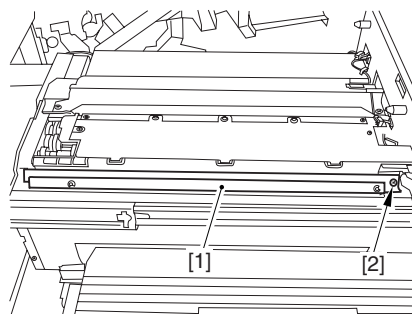


F-7-1061

3) Remove the 2 screws [2], and detach the black developing assembly joint plate [1].

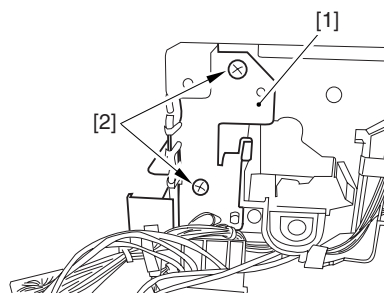


F-7-1062

4) Disconnect the connector [1].

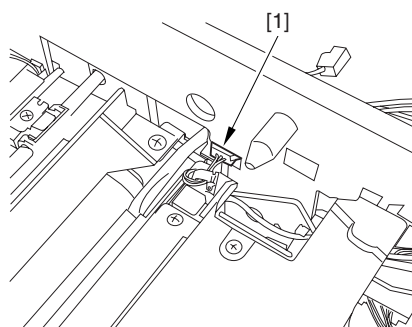

F-7-1063


5) Push in the high-voltage cable [1] through the opening [2] indicated in the figure.

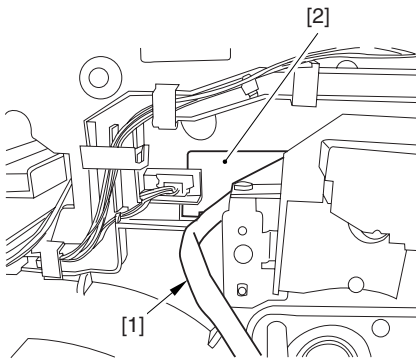

F-7-1064

6) While holding the high-voltage cable [1] in place as shown, detach the black developing assembly [2] in upward direction.

⚠ When detaching the black developing assembly, be sure to work with the high-voltage cable kept at the top of the assembly so that its connector will not damage the surface of the photosensitive drum.

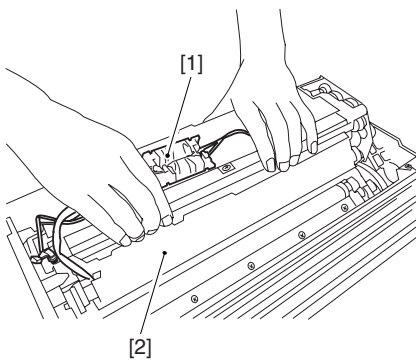


F-7-1065

7.11.39.6 Removing the ATR

Sensor Unit

0002-6228

- 1) Disconnect the connector [1].
- 2) Open the clamp [2], and free the harness for the wire guide [3].
- 3) Remove the 2 screws [4].
- 4) Free the 2 lock claws [5], and detach the ATR sensor unit [6].

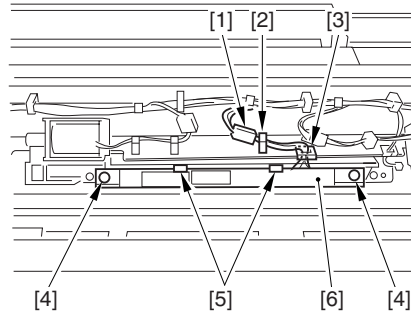

F-7-1066


7.11.40 Patch Image Sensor

7.11.40.1 Removing the Right

Cover (upper)

0003-8380

- 1) Remove the 2 screws [1], and detach the right cover (upper) [2].

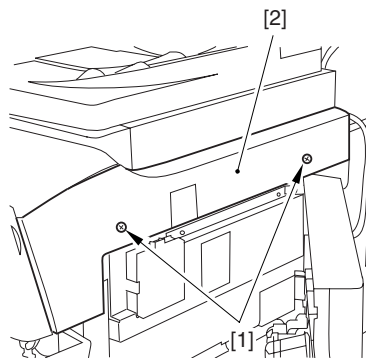


F-7-1067

7.11.40.2 Releasing the Front

Cover


0003-8381

- 1) Open the front cover.
- 2) While pulling on the grip [1], fully open the manual feed cover [2] to the front.

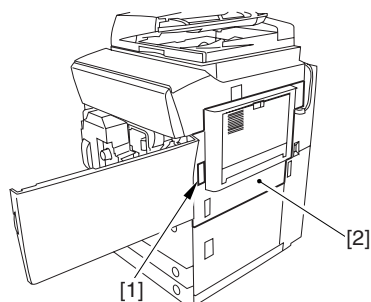


F-7-1068

- ⚠** If a side paper deck exists, remove the 2 screws [1] and the latch plate (front)

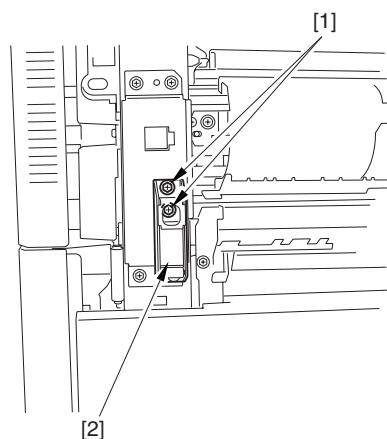


F-7-1069

- 3) Slide out the fixing/feeding assembly
- 4) Remove the 2 screws [1], and detach the process unit cover [2].

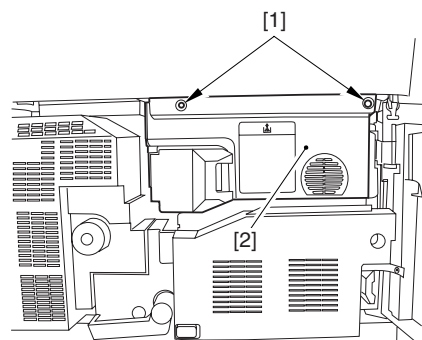


F-7-1070

- 5) Push in the fixing/feeding assembly, and set the lever in place.
- 6) Push the release button [1] of the right deck, and slide out the right deck [2].

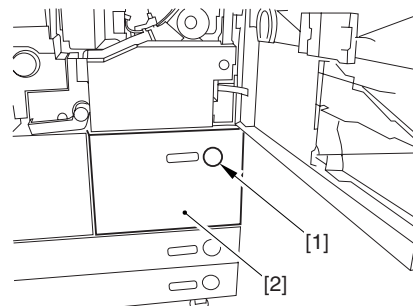


F-7-1071

- 7) Remove the screw [1] from lower right, and detach the front cover strap [2].

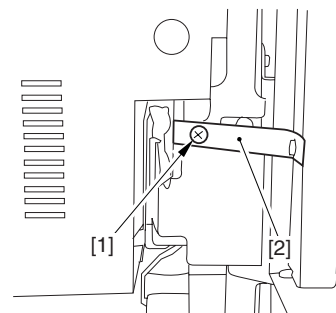

F-7-1072

- 8) Remove the 2 screws [1] (binding) of the front cover hinge, and fully open the front cover [2].

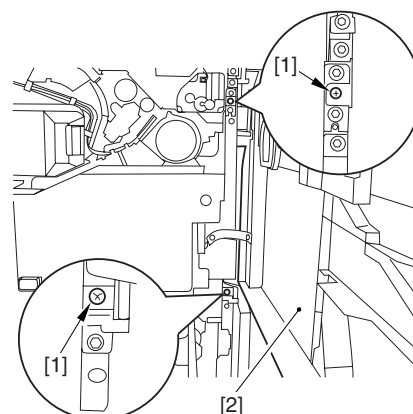

F-7-1073


- 9) Close the right deck.

7.11.40.3 Releasing the Hopper

Assembly


0003-8382

1) Open the black toner supply cover [1].

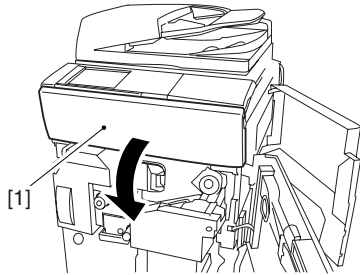


F-7-1074

2) Shift down the lever [1], and detach the black toner bottle [2].

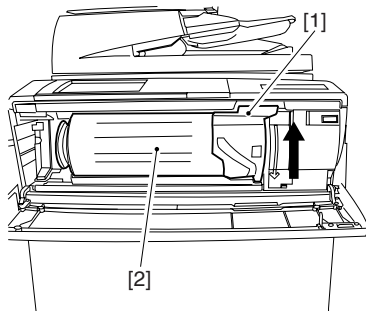


F-7-1075

⚠ Once you have released the hopper assembly, toner can spill over the toner bottle supply mouth of the hopper assembly cover. Be sure to wipe off any such toner.

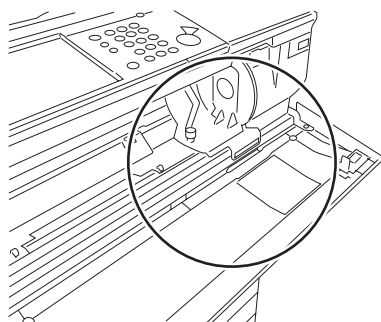


F-7-1076

3) Remove the 3 screws [1].

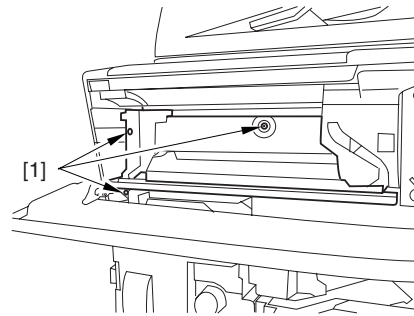

F-7-1077

4) Close the black toner supply cover [1]; then, fully open the hopper assembly [2].

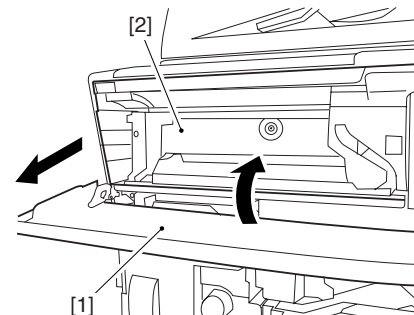


F-7-1078

7.11.40.4 Removing the Pre-

Transfer Charging Assembly

0005-7264

1) Remove the screw [1], and disconnect the connector [1]; then, detach the pre-transfer charging assembly [3] from the machine.

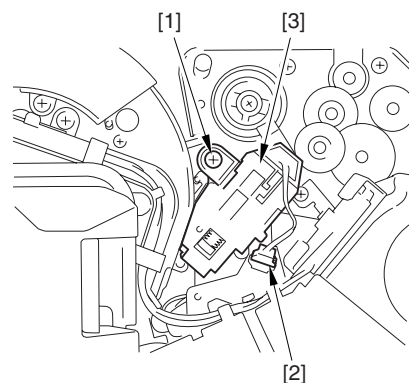


F-7-1079

7.11.40.5 Removing the Transfer

Cleaner Drive Assembly


0003-8383

- 1) Open the color toner supply mouth cover [1].

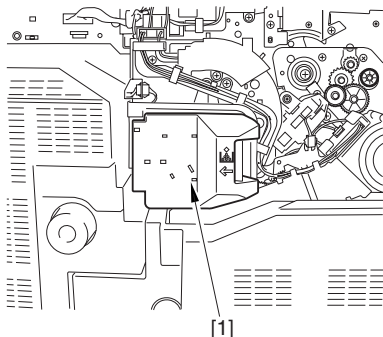


F-7-1080

- 2) Disconnect the connector [1], and remove the screw [2]; then, detach the color toner supply cover [3].

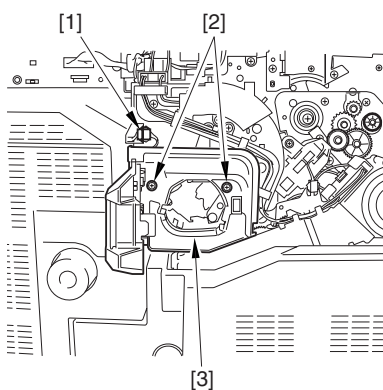


F-7-1081

- 3) Slightly slide out the fixing/feeding assembly.
4) Disconnect the connector [1] to free it from the wire guide [2].

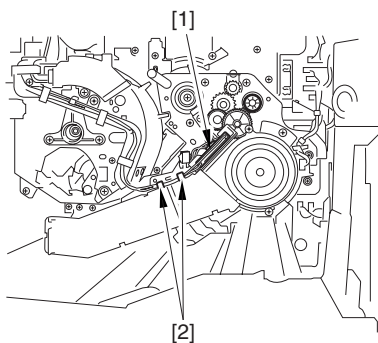


F-7-1082

- 5) Remove the screw [1], and shift down the locking plate [2].

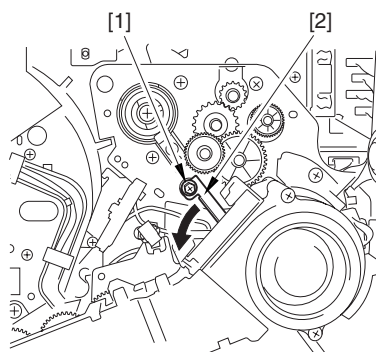

F-7-1083

- 6) Disconnect the connector [1], and remove the 5 screws [2]; then, detach the transfer cleaner driver assembly [3].

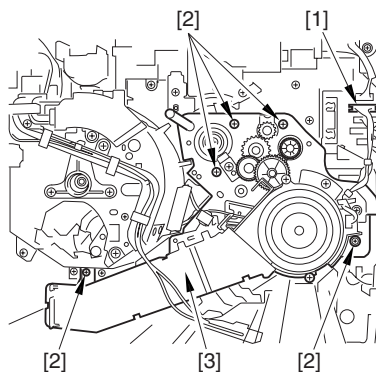


F-7-1084

7.11.40.6 Removing the

Intermediate Transfer Unit

0003-8384


- 1) Disconnect the 2 connectors [1].

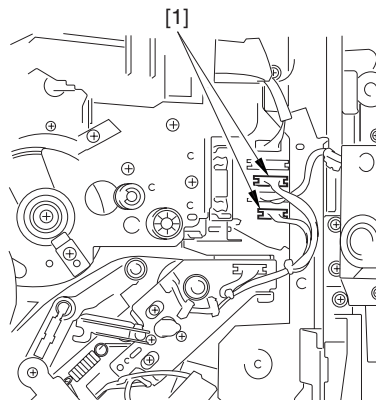

F-7-1085


- 2) Fully slide out the fixing/feeding assembly.
- 3) Slide out the intermediate transfer assembly [1] to the front; when it stops, shift it slightly to the upper right and then slide it farther out to detach.

⚠ Do not touch the surface of the ITB. Also, be sure to slide the intermediate transfer assembly straight out so as to prevent damage to the surface of the ITB.

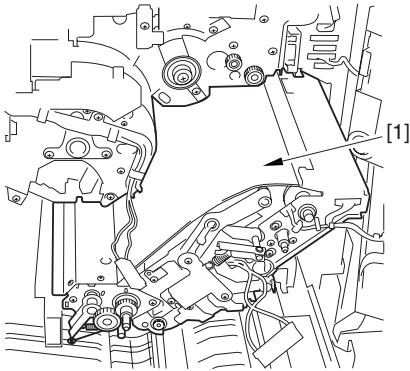

F-7-1086


- 2) Turn the drive gear [1] by hand in the direction of the arrow to move the intermediate transfer belt [2] about 50 mm.

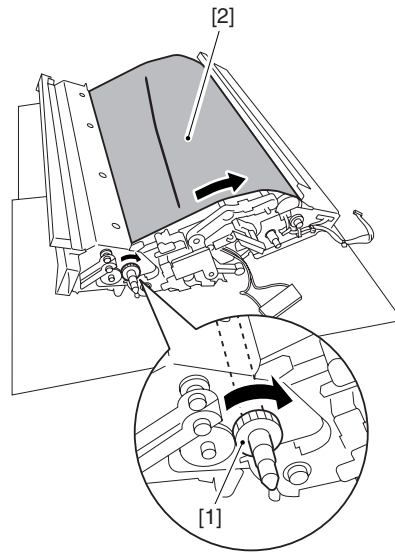

F-7-1088


7.11.40.7 Cleaning the Surface of the Intermediate Transfer Unit 0006-0329

- 1) Place the ITB unit [1] on paper for protection.

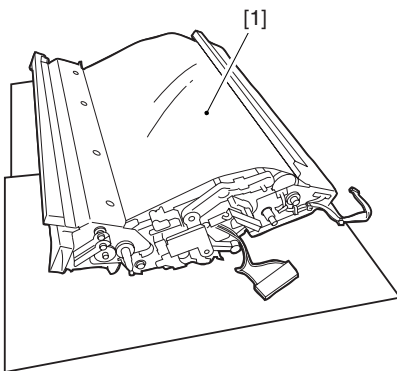


F-7-1087

- 3) If there is any toner [3] on the surface of the intermediate transfer belt, dry wipe it with lint-free paper.

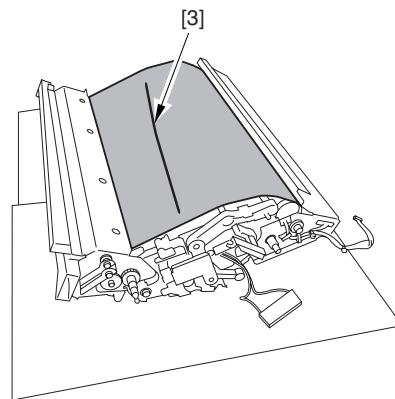

F-7-1089

⚠ When you remove the transfer cleaner drive assembly, the ITB cleaning blade [1] is likely to come into contact with the intermediate transfer belt by the work of a spring, causing toner [2] to deposit on the belt surface in the form of lines. The toner can then be forced against the photosensitive drum by the primary transfer assembly, thus affecting the photosensitive drum cleaning blade [3].

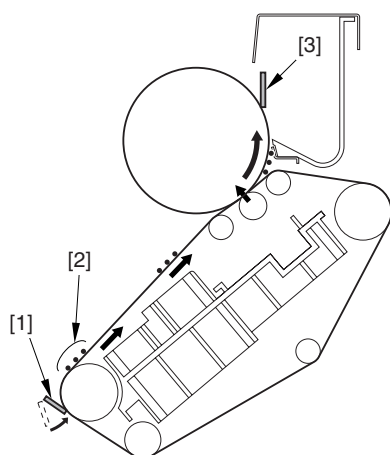


F-7-1090

7.11.40.8 Removing the ITB

Cleaning Unit

0003-8385

1) Remove the 2 screws [1]; then, slide the ITB cleaning unit [2] in the direction of the arrow to detach.

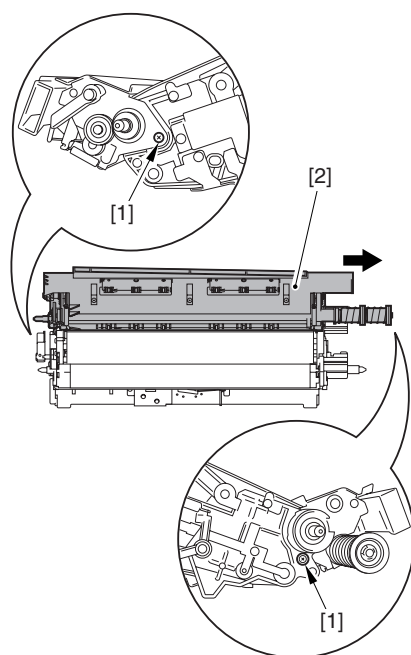


F-7-1091

7.11.40.9 Removing the Patch

Image Reading Unit

0003-9008


1) Shift the arm [1] shown in the figure to lock it in place; thus releasing the roller (both front and rear).

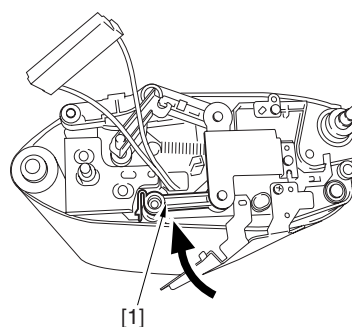

F-7-1092

2) Stand the intermediate transfer unit by fitting its 2 pins [2] in the 2 holes of the fixing/feeding assembly.


⚠ Make sure that the ITB cleaner unit has been already removed.

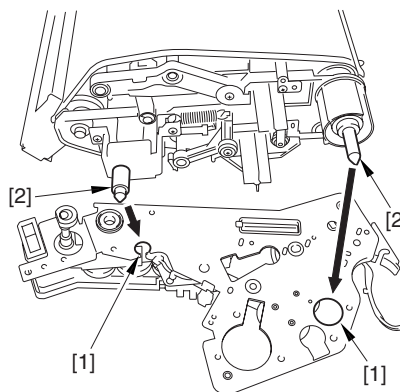

F-7-1093

3) Disconnect the connector [1], and free the cable [3] from the 3 cable clamps [2].

4) Remove the 2 screws [4], and detach the patch image reading unit [5].

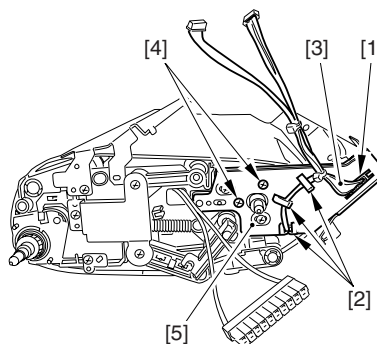


F-7-1094

7.11.40.10 Removing the Patch


Image Reading Sensor 0003-8387

1) Remove the 2 screws [1], and detach the pattern reader holder [2].

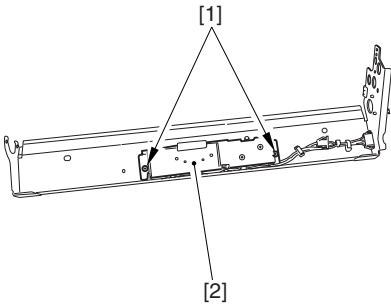

F-7-1095

2) Remove the 2 screws [1], and detach the connector [2]; then, detach the patch image reading sensor [3].

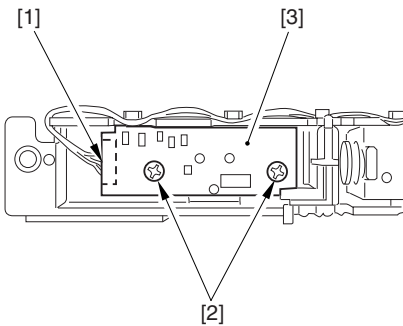


F-7-1096

7.11.41 Idle Roller

7.11.41.1 Removing the Right

Cover (upper) 0003-8272

1) Remove the 2 screws [1], and detach the right cover (upper) [2].

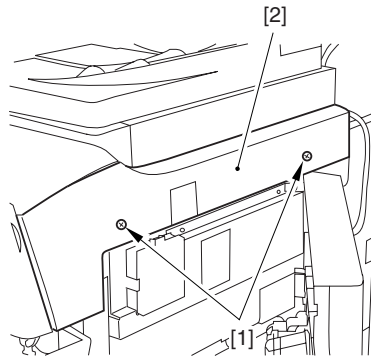


F-7-1097

7.11.41.2 Releasing the Front


Cover 0003-2647

1) Open the front cover.
2) While pulling on the grip [1], fully open the manual feed cover [2] to the front.

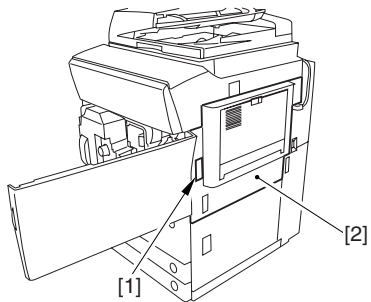


F-7-1098

⚠ If a side paper deck exists, remove the 2 screws [1] and the latch plate (front)

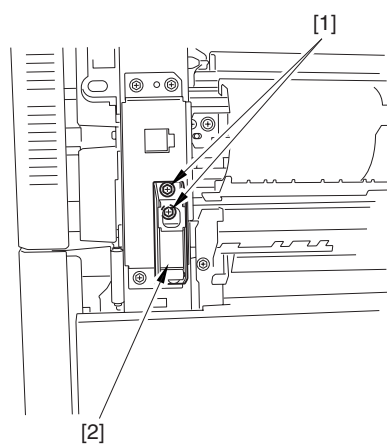

F-7-1099


- 3) Slide out the fixing/feeding assembly
- 4) Remove the 2 screws [1], and detach the process unit cover [2].

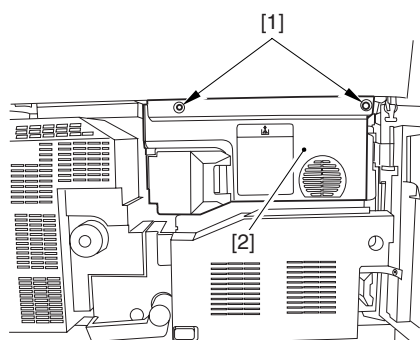

F-7-1100


5) Push in the fixing/feeding assembly, and set the lever in place.

6) Push the release button [1] of the right deck, and slide out the right deck [2].

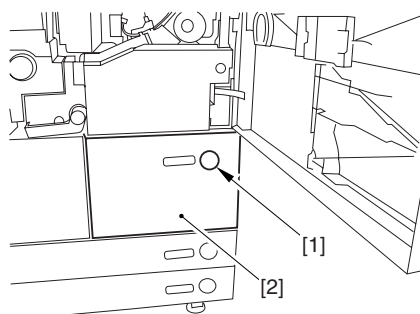


F-7-1101

7) Remove the screw [1] from lower right, and detach the front cover strap [2].

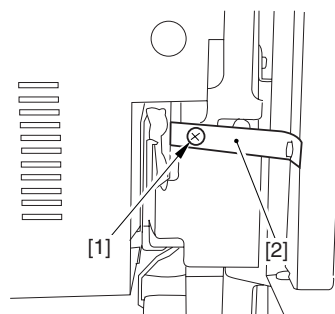

F-7-1102

8) Remove the 2 screws [1] (binding) of the front cover hinge, and fully open the front cover [2].

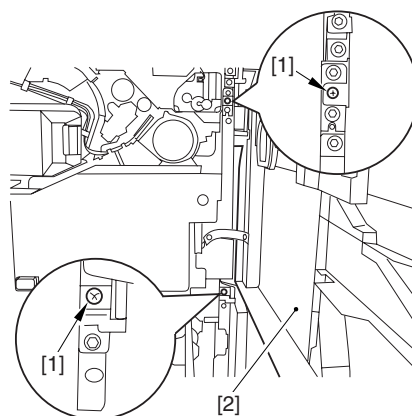


F-7-1103

9) Close the right deck.

7.11.41.3 Removing the Hopper Assembly


0003-2648

1) Open the black toner supply cover [1].

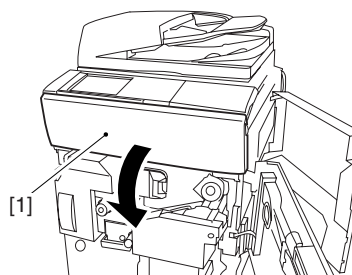


F-7-1104

2) Shift down the lever [1], and detach the black toner bottle [2].

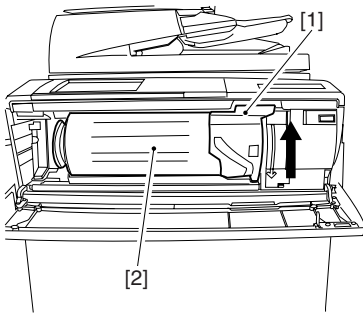


F-7-1105

4) Close the black toner supply cover [1]; then, fully open the hopper assembly [2].

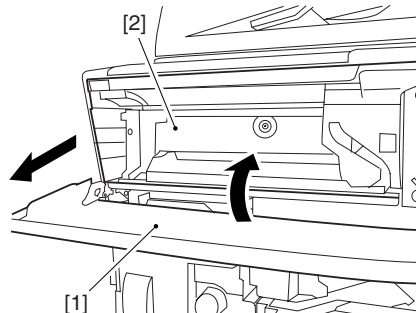


F-7-1108

⚠Once you have released the hopper assembly, toner can spill over the toner bottle supply mouth of the hopper assembly cover. Be sure to wipe off any such toner.

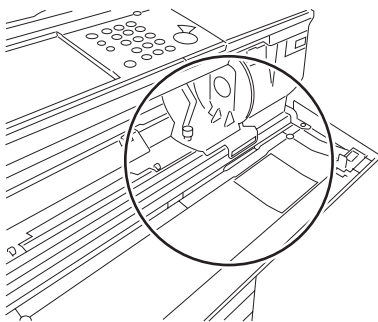

F-7-1106


3) Remove the 3 screws [1].

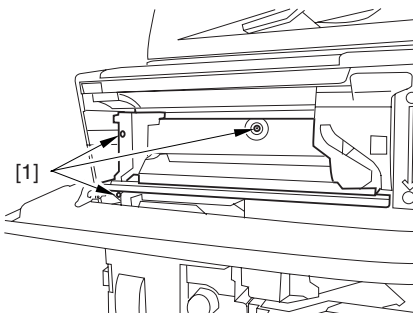

F-7-1107

7.11.41.4 Removing the Pre-Transfer Charging Assembly 0005-7262


1) Remove the screw [1], and disconnect the connector [1]; then, detach the pre-transfer charging assembly [3] from the machine.

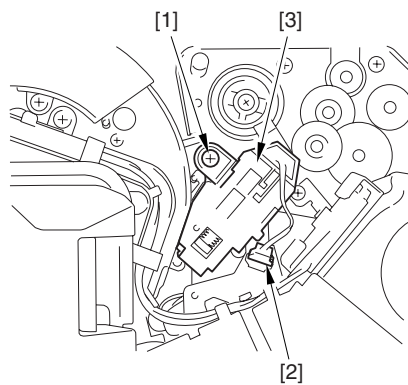

F-7-1109


7.11.41.5 Removing Transfer Cleaner Drive Assembly 0003-2646

1) Open the color toner supply mouth cover [1].

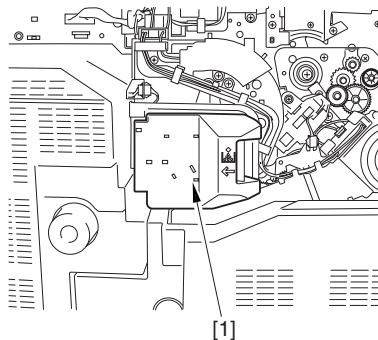


F-7-1110

2) Disconnect the connector [1], and remove the screw [2]; then, detach the color toner supply cover [3].

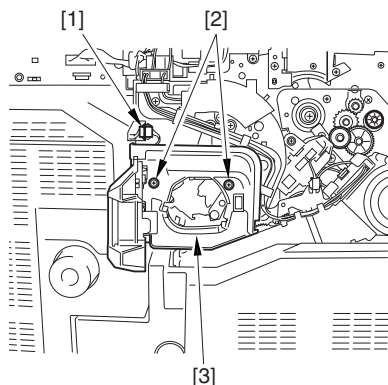


F-7-1111

3) Slightly slide out the fixing/feeding assembly.
4) Disconnect the connector [1] to free it from the wire guide [2].

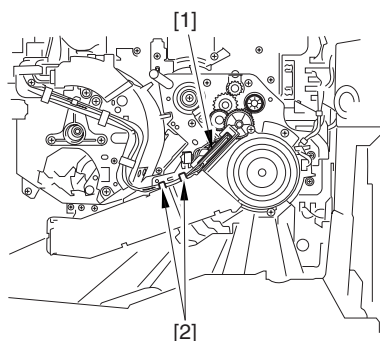


F-7-1112

5) Remove the screw [1], and shift down the locking plate [2].

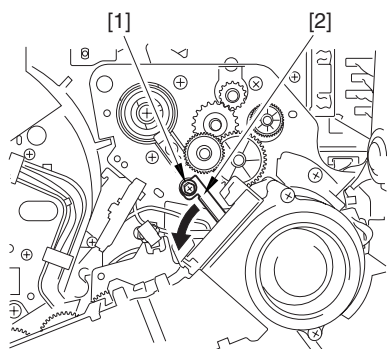

F-7-1113

6) Disconnect the connector [1], and remove the 5 screws [2]; then, detach the transfer cleaner driver assembly [3].

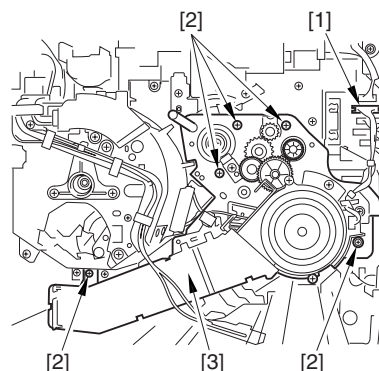


F-7-1114

7.11.41.6 Remove the Intermediate Transfer Unit

0003-2645


1) Disconnect the 2 connectors [1].

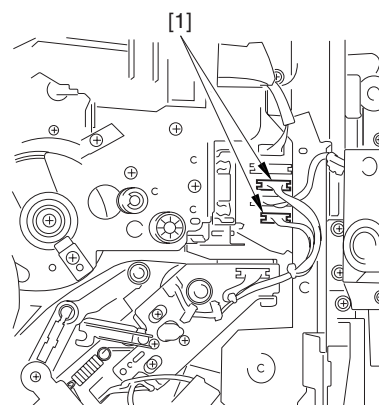

F-7-1115

- 2) Fully slide out the fixing/feeding assembly.
- 3) Slide out the intermediate transfer assembly [1] to the front; when it stops, shift it slightly to the upper right and then slide it farther out to detach.

⚠ Do not touch the surface of the ITB. Also, be sure to slide the intermediate transfer assembly straight out so as to prevent damage to the surface of the ITB.

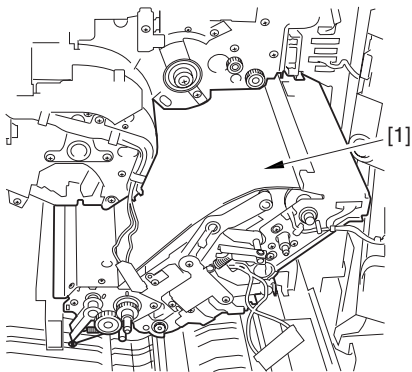


F-7-1116

7.11.41.7 Cleaning the Surface of the Intermediate Transfer Unit


0006-0333

- 1) Place the ITB unit [1] on paper for protection.

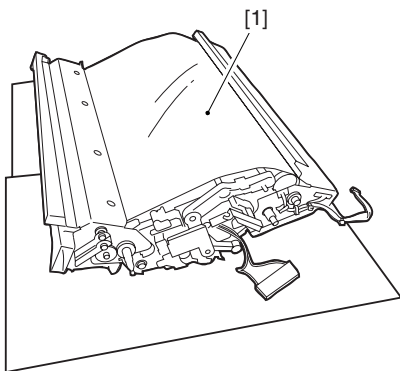


F-7-1117

- 2) Turn the drive gear [1] by hand in the direction of the arrow to move the intermediate transfer belt [2] about 50 mm.

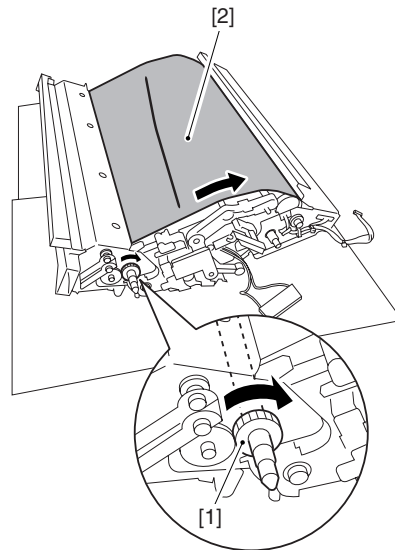


F-7-1118

- 3) If there is any toner [3] on the surface of the intermediate transfer belt, dry wipe it with lint-free paper.

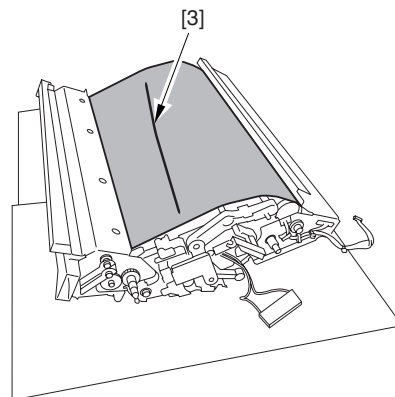

F-7-1119

⚠ When you remove the transfer cleaner drive assembly, the ITB cleaning blade [1] is likely to come into contact with the intermediate transfer belt by the work of a spring, causing toner [2] to deposit on the belt surface in the form of lines. The toner can then be forced against the photosensitive drum by the primary transfer assembly, thus affecting the photosensitive drum cleaning blade [3].

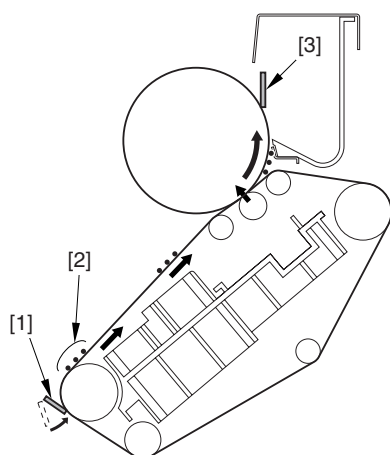


F-7-1120

7.11.41.8 Removing the ITB

Cleaning Unit

0003-2643

1) Remove the 2 screws [1]; then, slide the ITB cleaning unit [2] in the direction of the arrow to detach.

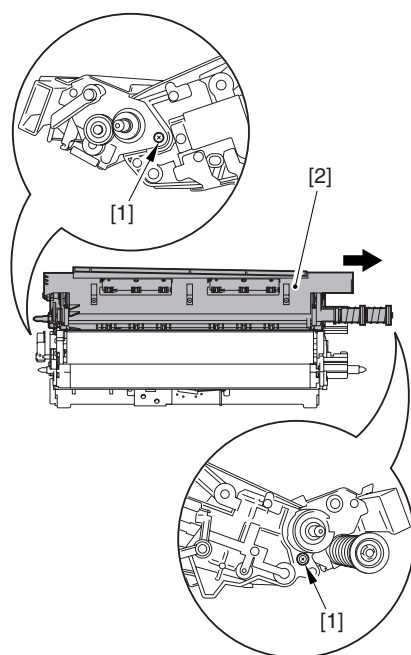


F-7-1121

7.11.41.9 Remove the Patch

Image Reading Unit

0003-9010


1) Shift the arm [1] shown in the figure to lock it in place; thus releasing the roller (both front and rear).

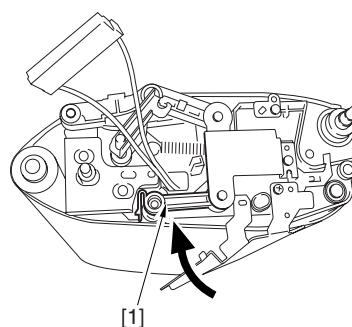

F-7-1122

2) Stand the intermediate transfer unit by fitting its 2 pins [2] in the 2 holes of the fixing/feeding assembly.


⚠ Make sure that the ITB cleaner unit has been already removed.

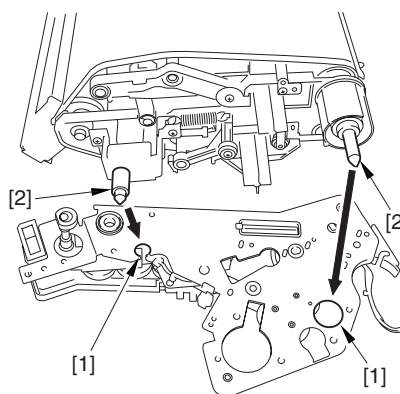

F-7-1123

3) Disconnect the connector [1], and free the cable [3] from the 3 cable clamps [2].

4) Remove the 2 screws [4], and detach the patch image reading unit [5].

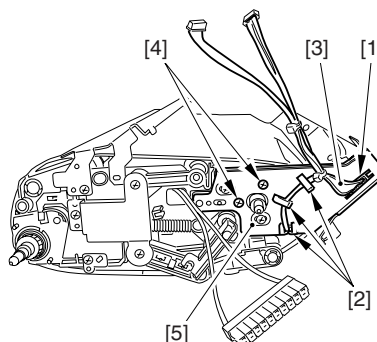


F-7-1124

7.11.41.10 Removing the Idler

Roller


0003-2619

1) Remove the screw [1], and detach the pre-transfer guide [2].

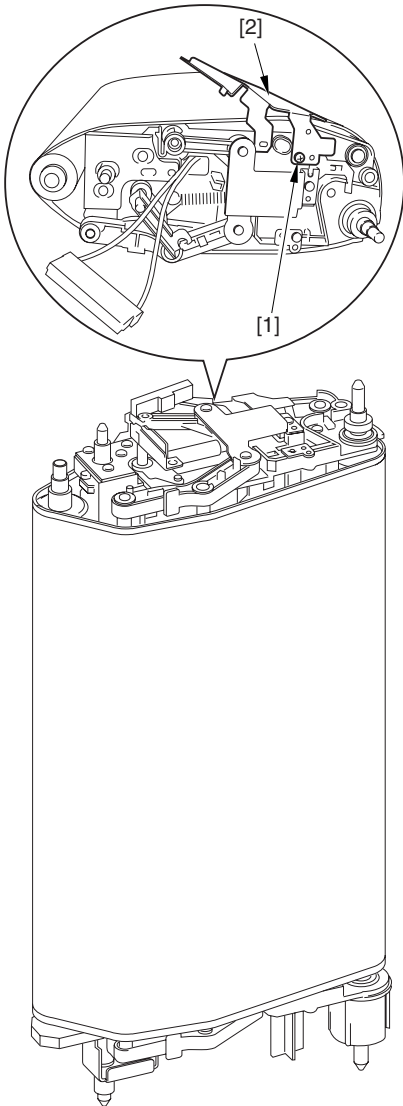

F-7-1125

2) Holding the shaft of the idler roller [1], pull the roller upright to detach.

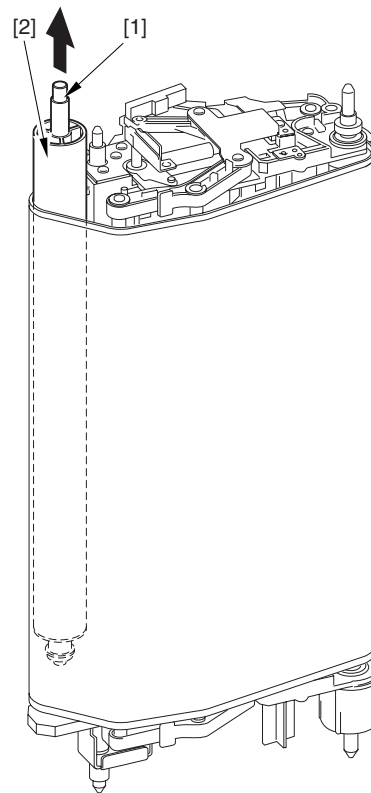

F-7-1126


⚠ When detaching the roller, take care not to damage the surface of the ITB by the roller.

7.11.41.11 Remove the Idler

Roller

0002-6344

1) Remove the 2 bushings [1], bearing [2], and E-ring from the idler roller.

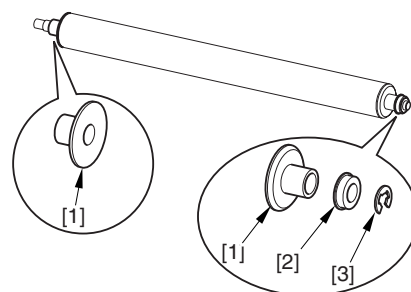


F-7-1127

7.11.42 Patch Image Reading Sensor Shutter Solenoid

7.11.42.1 Remove the Right Cover (upper)

0004-5885

- 1) Remove the 2 screws [1], and detach the right cover (upper) [2].

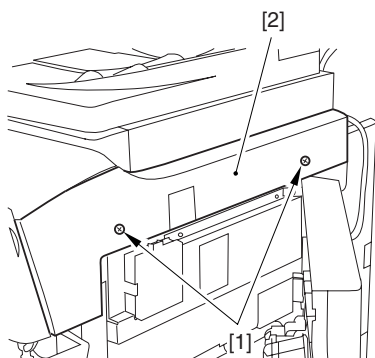


F-7-1128

7.11.42.2 Releasing the Front Cover


0004-5887

- 1) Open the front cover.
- 2) While pulling on the grip [1], fully open the manual feed cover [2] to the front.

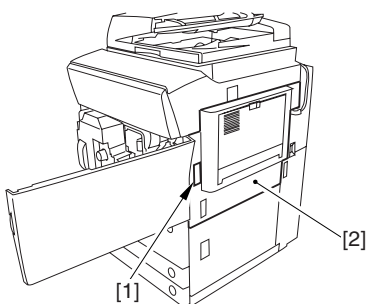


F-7-1129

- ⚠ If a side paper deck exists, remove the 2 screws [1] and the latch plate (front)

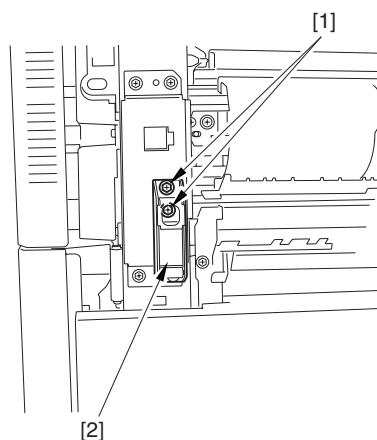


F-7-1130

- 3) Slide out the fixing/feeding assembly
- 4) Remove the 2 screws [1], and detach the process unit cover [2].

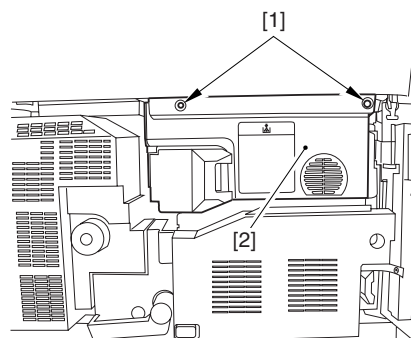


F-7-1131

- 5) Push in the fixing/feeding assembly, and set the lever in place.
- 6) Push the release button [1] of the right deck, and slide out the right deck [2].

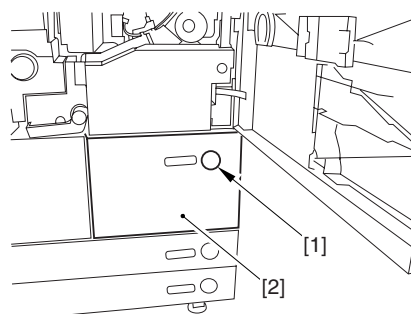


F-7-1132

7) Remove the screw [1] from lower right, and detach the front cover strap [2].

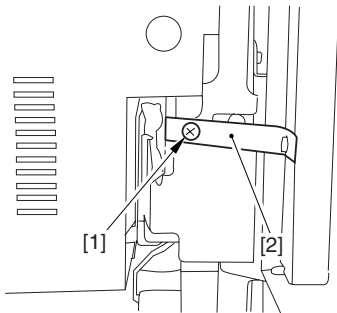


F-7-1133

2) Shift down the lever [1], and detach the black toner bottle [2].

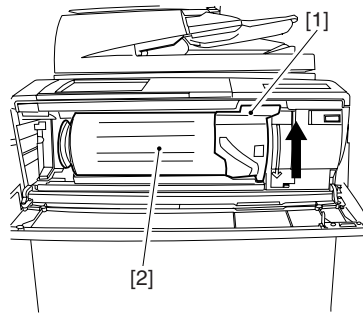


F-7-1136

8) Remove the 2 screws [1] (binding) of the front cover hinge, and fully open the front cover [2].

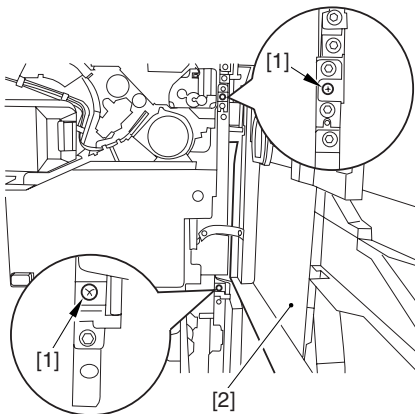

F-7-1134

⚠ Once you have released the hopper assembly, toner can spill over the toner bottle supply mouth of the hopper assembly cover. Be sure to wipe off any such toner.

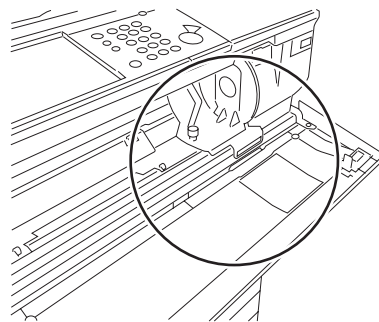


F-7-1137

9) Close the right deck.

7.11.42.3 Releasing the Hopper Assembly


0004-5889

1) Open the black toner supply cover [1].

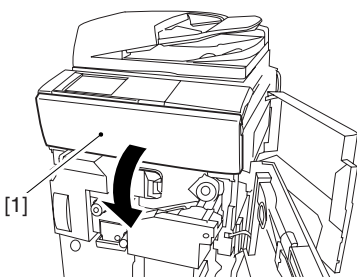


F-7-1135

3) Remove the 3 screws [1].

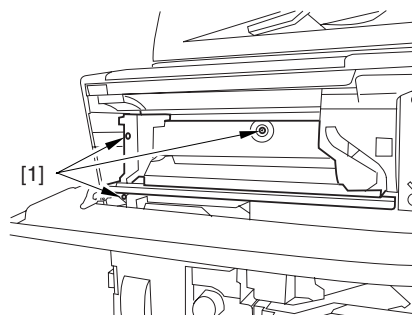

F-7-1138


- 4) Close the black toner supply cover [1]; then, fully open the hopper assembly [2].

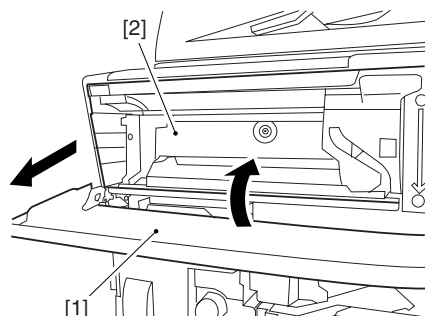

F-7-1139

7.11.42.4 Removing the Pre-Transfer Charging Assembly 0005-7263


- 1) Remove the screw [1], and disconnect the connector [1]; then, detach the pre-transfer charging assembly [3] from the machine.

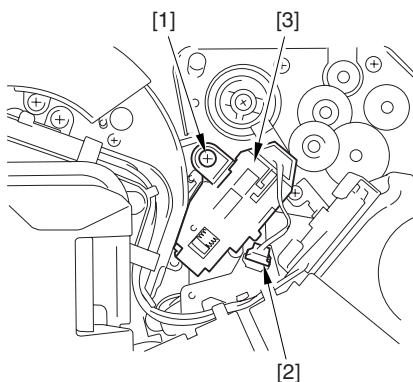

F-7-1140


7.11.42.5 Removing the Transfer Cleaner Drive Assembly 0004-5890

- 1) Open the color toner supply mouth cover [1].

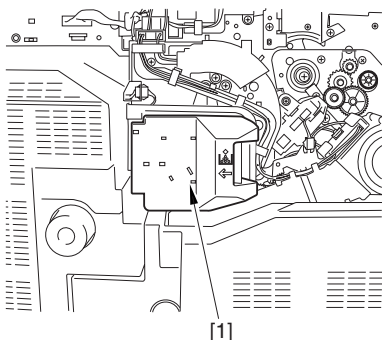


F-7-1141

- 2) Disconnect the connector [1], and remove the screw [2]; then, detach the color toner supply cover [3].

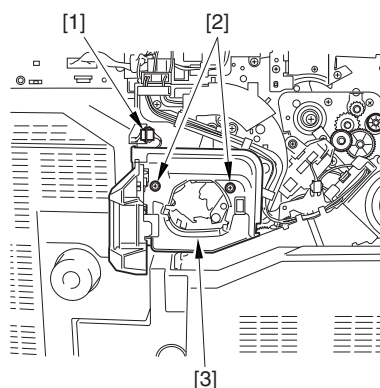


F-7-1142

- 3) Slightly slide out the fixing/feeding assembly.
4) Disconnect the connector [1] to free it from the wire guide [2].

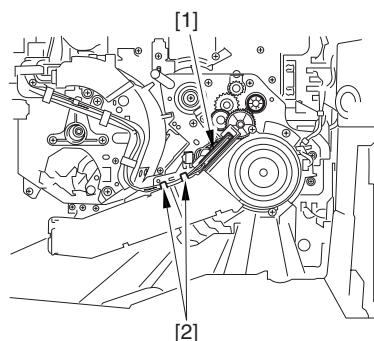


F-7-1143

- 5) Remove the screw [1], and shift down the locking plate [2].

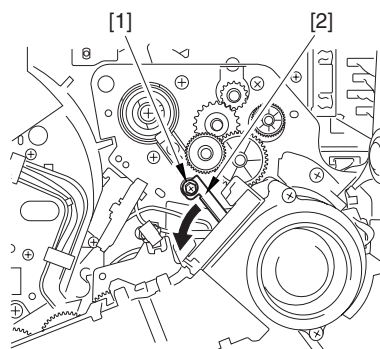

F-7-1144

- 6) Disconnect the connector [1], and remove the 5 screws [2]; then, detach the transfer cleaner driver assembly [3].

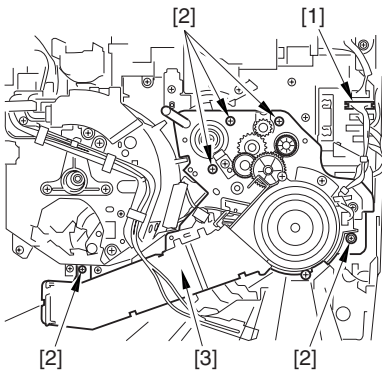


F-7-1145

7.11.42.6 Removing the Intermediate Transfer Unit

0004-5892


- 1) Disconnect the 2 connectors [1].

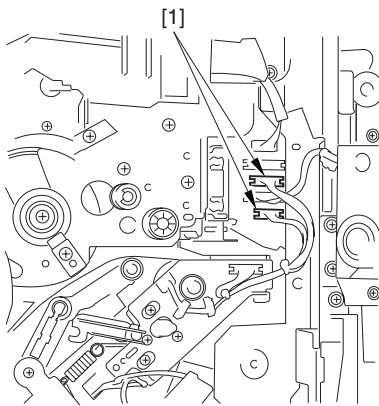

F-7-1146

- 2) Fully slide out the fixing/feeding assembly.
- 3) Slide out the intermediate transfer assembly [1] to the front; when it stops, shift it slightly to the upper right and then slide it farther out to detach.

⚠ Do not touch the surface of the ITB. Also, be sure to slide the intermediate transfer assembly straight out so as to prevent damage to the surface of the ITB.

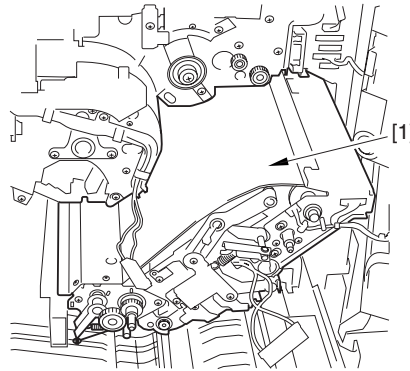


F-7-1147

7.11.42.7 Cleaning the Surface of the Intermediate Transfer Unit


0006-0328

- 1) Place the ITB unit [1] on paper for protection.

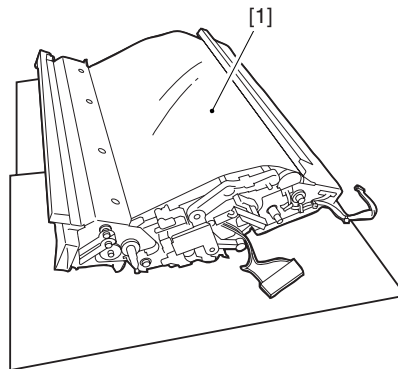


F-7-1148

2) Turn the drive gear [1] by hand in the direction of the arrow to move the intermediate transfer belt [2] about 50 mm.

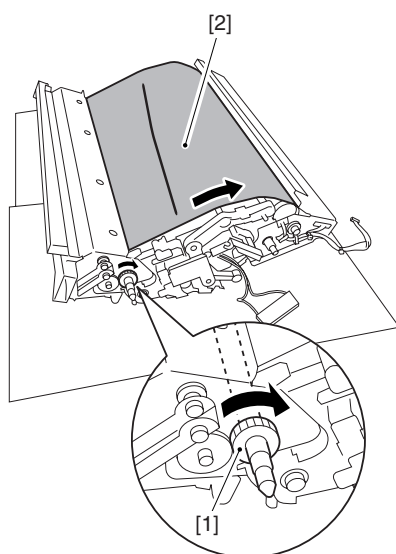


F-7-1149

3) If there is any toner [3] on the surface of the intermediate transfer belt, dry wipe it with lint-free paper.

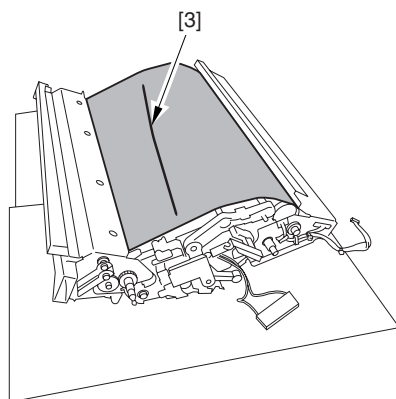

F-7-1150

⚠ When you remove the transfer cleaner drive assembly, the ITB cleaning blade [1] is likely to come into contact with the intermediate transfer belt by the work of a spring, causing toner [2] to deposit on the belt surface in the form of lines. The toner can then be forced against the photosensitive drum by the primary transfer assembly, thus affecting the photosensitive drum cleaning blade [3].

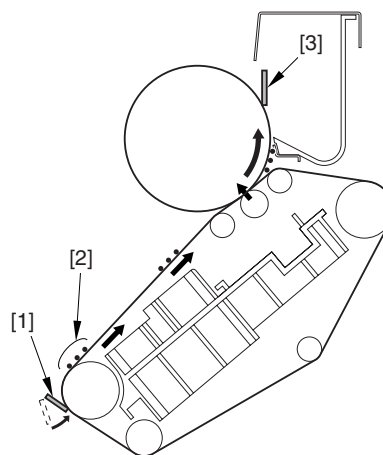


F-7-1151

7.11.42.8 Removing the ITB

Cleaning Unit

0004-5894

1) Remove the 2 screws [1]; then, slide the ITB cleaning unit [2] in the direction of the arrow to detach.

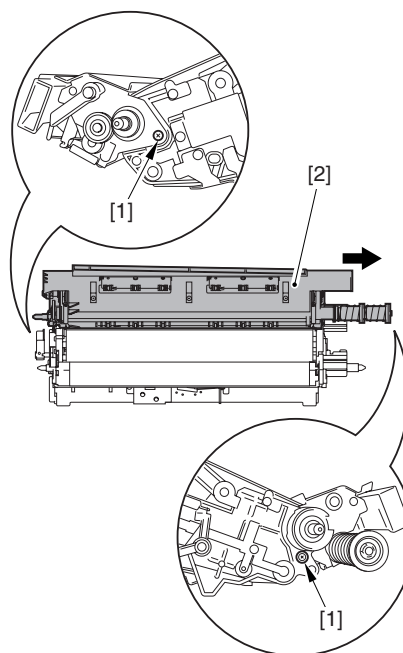


F-7-1152

7.11.42.9 Removing the Patch

Image Reading Unit 0004-5900


1) Shift the arm [1] shown in the figure to lock it in place; thus releasing the roller (both front and rear).

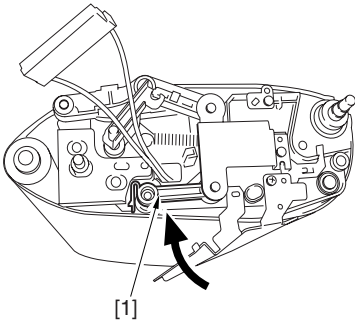

F-7-1153

2) Stand the intermediate transfer unit by fitting its 2 pints [2] in the 2 holes of the fixing/feeding assembly.


⚠ Make sure that the ITB cleaner unit has been already removed.

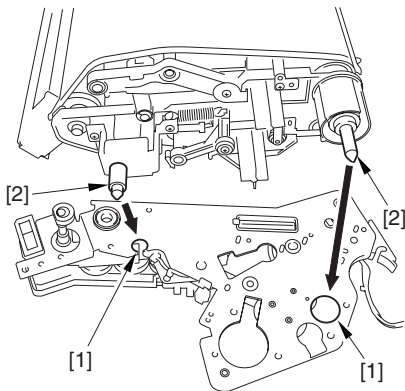

F-7-1154

3) Disconnect the connector [1], and free the cable [3] from the 3 cable clamps [2].

4) Remove the 2 screws [4], and detach the patch image reading unit [5].

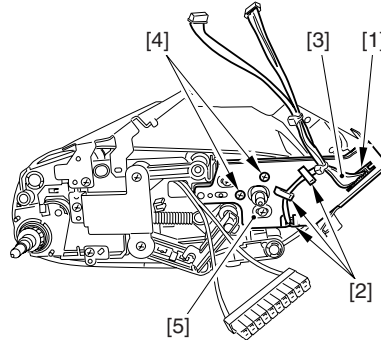


F-7-1155

7.11.42.10 Removing the Patch


Image Reading Sensor Shutter Solenoid 0004-5880

1) Remove the 4 screws [1].

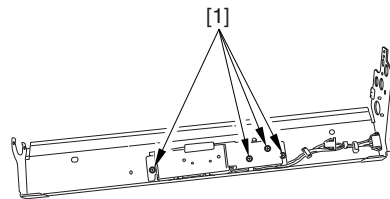

F-7-1156

2) Disconnect the connector [1], and detach the patch image reading sensor shutter solenoid [2].

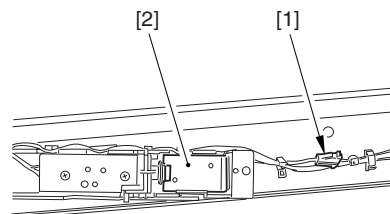

F-7-1157

7.11.43 Charging Wire

7.11.43.1 Outline

0002-5835

Around the photosensitive drum are 2 charging wires used for primary and pre-transfer charging. These wires are brown wires 0.06 mm in diameter. Be sure not to use gold-plated wires in their place; otherwise, image faults may occur.

Be sure also to use a high-polish pad (blue) designed for a brown wire as the cleaning pad for the primary and pre-transfer charging assemblies.


7.11.43.2 Removing the Wire

Cleaner of the Primary

Charging Assembly

0002-5836

1) Pick the wire cleaner hook [1], and remove the wire cleaner [2].

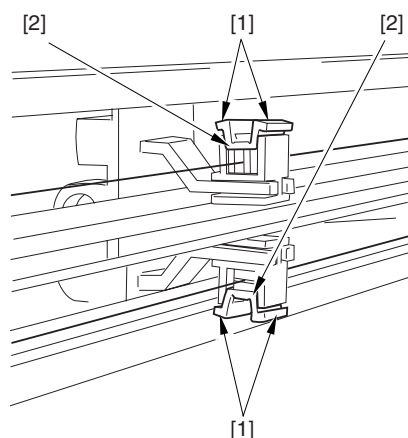

F-7-1158


7.11.43.3 Stringing the Charging Wires

0002-5844

All charging wires (except the grid wire) may be strung in the same way, and the following shows how to string the charging wire of the primary charging assembly.

1) Remove the shield plates (left, right) of the charging assembly. Be sure to detach the left and right shield plates separately so as to prevent warping of the primary charging assembly.

At this time, be sure NOT to loosen both right and left mounting screws [1] at the same time on the left and right shield plates.

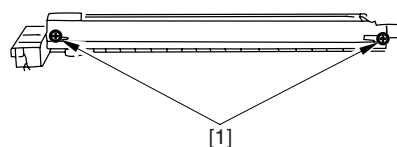

F-7-1159

2) Remove the wire cleaner.


Note: In the case of the pre-transfer charging assembly, remove the 2 lids.

3) Free a length of about 5 cm from a 0.06-mm-dia charging wire reel, and form a loop at its end about 2 mm in diameter.

Reference: To form a loop, wind the charging wire around a hex key once, turn the key 3 to 4 times, and twist the wire.


4) Cut off the excess end of the charging wire with nippers.

5) Hook the loop on the stud.

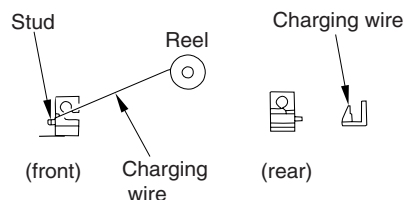


F-7-1160

6) Hook the charging wire [2] on the charging wire positioner [1] at the rear; then, hook the charging wire on the hook [3] for tension.

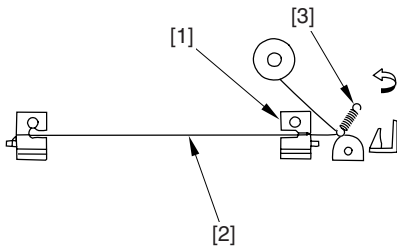

F-7-1161


7) Cut the excess charging wire with nippers.
 8) Pick the end [1] of the tension spring with tweezers, and hook it on the charging power supply terminal [2]. In the case of the pre-transfer charging assembly, hook the spring on the pin at the front.

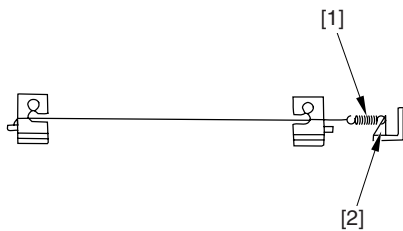

F-7-1162

Make sure of the following:

- the charging wire must not be bent or twisted.
- the charging wire must be in the V-groove of the charging wire positioner.

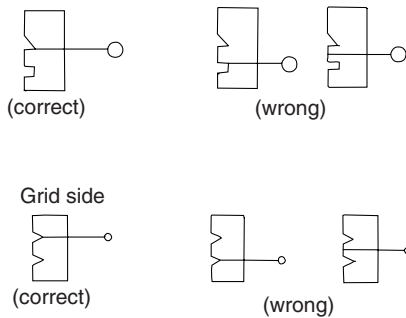


F-7-1163

9) Fit the cushion at the front of the charging wire. (This does not apply to the primary charging assembly.)

10) Mount the left and right shield plates (or, 2 lids)..
 11) Mount the wire cleaner. At this time, be sure to pay attention to the orientation of the wire cleaner.
 12) Wipe the charging wire with lint-free paper moistened with alcohol.


7.11.43.4 Stringing the Grid 0002-5849

1) Loosen the 2 mounting screws [1] used to hold the left and right shield plates in place.
 2) Loosen the 3 mounting screws [2] used to hold the motor unit at the front.

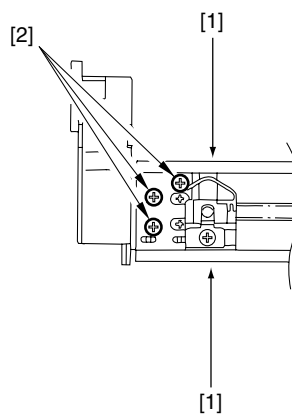

F-7-1164

3) Loosen the screw [1], and move the block [2] in the direction of the arrow; then, fix it in place temporarily.

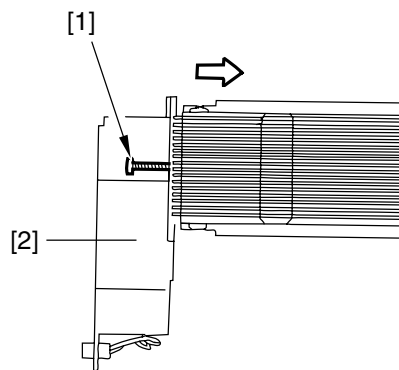


F-7-1165

4) Free a length of about 5 cm from a 0.1-mm-dia charging wire reel, and form a loop of about 2 mm in diameter at its end.

Reference: To form a loop, wind the charging wire around a hex key once, turn the key 3 to 4 times, and twist the charging wire

- 5) Cut the excess of the charging wire with nippers.
- 6) When you have strung the charging wire on all studs, pass its end [2] between the motor unit and the washer found behind the charging assembly. Then, wind the charging wire around the mounting screw [3] once (clockwise), and fix it in place using the screw.

- 7) After routing the wire for stud, lead it through wire end [2], put it between the washer and the motor unit, and wind it once around the mounting screw (clockwise) [3], and secure it in place with a mounting screw.

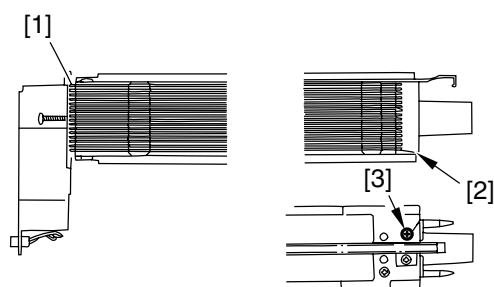


F-7-1166

- 8) Cut the excess of the charging wire with nippers.
 - 9) Tighten the mounting screw you loosened in step 3). (Be sure to tighten it until the tension of the grid wire is even and while making sure that the charging assembly is free of deformation.
 - 10) Tighten the mounting screws you loosened in steps 1) and 2).
 - 11) Wipe the grid wire with lint-free paper moistened with alcohol.
- Note: Check to be sure that the grid wire is free of bends and twists. Also, the lengths of the wire must be at equal intervals. (The grid wire must be in the groove of the block.)

7.11.43.5 Adjusting the Primary Charging Wire

0002-5850

If you have to replace the primary charging wire, check to be sure that the height of the charging wire is as indicated:

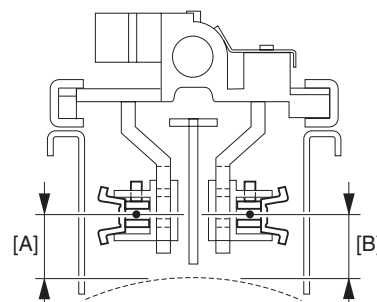

F-7-1167

left (on the developing unit side) [A]: 7.5 +/-0.5 mm
right (on the photosensitive drum cleaning unit side) [B]: 8.0 +/-0.5 mm

If the height is not as indicated, make the necessary adjustments.

Reference: The height of the primary charging wire may be adjusted by turning the screw found behind the charging assembly. A full turn will change the height by about 0.7 mm.

Chapter 8 Pickup/ Feeding System

Contents

8.1 Construction	8-1
8.1.1 Specifications, Control Mechanisms, and Functions	8-1
8.1.2 Major Divisions of the Machine.....	8-2
8.1.3 Arrangement of Rollers	8-3
8.1.4 Diagram of the Paper Path.....	8-5
8.1.5 Arrangement of Sensors	8-6
8.1.6 Arrangement of Solenoids.....	8-8
8.1.7 Arrangement of Drive Mechanisms	8-9
8.2 Basic Sequence.....	8-10
8.2.1 Basic Sequence of Operation (in response to a press on the Start key)	8-10
8.2.2 Interval Acceleration	8-12
8.2.3 Stopping the Paper Before Registration	8-16
8.3 Detecting Jams	8-17
8.3.1 Delivery Jams	8-17
8.3.1.1 Cassette/Deck Pickup Assembly (right deck, left deck, cassette 3/4)	8-17
8.3.1.2 Delay Jam (source of paper other than cassette/deck).....	8-18
8.3.2 Stationary Jams.....	8-19
8.3.2.1 Common Stationary Jam	8-19
8.3.2.2 Stationary Jam at Power-On.....	8-20
8.3.3 Other Jams	8-21
8.3.3.1 Wrong Paper Size	8-21
8.3.3.2 Wrong Material	8-21
8.4 Cassette.....	8-22
8.4.1 Overview	8-22
8.4.2 Identifying Paper Sizes.....	8-23
8.4.3 Setting the Universal Cassette.....	8-25
8.4.4 Checking the Level of Remaining Paper.....	8-26
8.5 Cassette Pick-Up Unit	8-28
8.5.1 Overview	8-28
8.5.2 Basic Sequence.....	8-29
8.5.3 Movement of the Lifter	8-30
8.6 Manual Feed Pickup Unit.....	8-31
8.6.1 Overview	8-31
8.6.2 Basic Sequence.....	8-32
8.6.3 Identifying the Size of Paper	8-32
8.6.4 Identifying the Last Sheet.....	8-33
8.7 Deck.....	8-34
8.7.1 Overview	8-34
8.7.2 Basic Sequence.....	8-35
8.7.3 Identifying the Size of Paper	8-36
8.7.4 Checking the Level of Remaining Paper.....	8-37
8.8 Registration Unit	8-38
8.8.1 Overview	8-38
8.9 Duplex Feeding Unit	8-39
8.9.1 Overview	8-39
8.9.2 Detecting the Horizontal Registration Position.....	8-43
8.9.3 A5, 5 Sheets in Circulation.....	8-45
8.9.4 A3, 3 Sheets in Circulation.....	8-47

8.10 Delivery	8-49
8.10.1 Overview.....	8-49
8.10.2 Face-Up Delivery.....	8-49
8.10.3 Face-Down Delivery.....	8-50
8.11 Parts Replacement Procedure	8-53
8.11.1 Cassette Pickup Unit.....	8-53
8.11.1.1 Removing the Cassette Pickup Unit	8-53
8.11.2 Cassette Pickup Motor.....	8-53
8.11.2.1 Removing the Right Cover (lower rear)	8-53
8.11.2.2 Removing the Rear Cover (lower).....	8-53
8.11.2.3 Removing the Waste Toner Bottle Base.....	8-54
8.11.2.4 Removing the Cassette Pickup Motor	8-54
8.11.3 Cassette Lifter Motor.....	8-54
8.11.3.1 Removing the Rear Cover (lower).....	8-54
8.11.3.2 Removing the DC Power Supply Unit.....	8-55
8.11.3.3 Removing the Cassette Lifter Motor	8-55
8.11.4 Left Deck Lifter Motor	8-55
8.11.4.1 Removing the Rear Cover (lower).....	8-55
8.11.4.2 Removing the DC Power Supply Unit.....	8-56
8.11.4.3 Removing the Left Deck Lifter Motor.....	8-56
8.11.5 Right Deck Lifter Motor.....	8-56
8.11.5.1 Removing the Right Cover (lower rear)	8-56
8.11.5.2 Removing the Rear Cover (lower).....	8-57
8.11.5.3 Removing the Waste Toner Bottle Base.....	8-57
8.11.5.4 Removing the Right Deck Lifter Motor	8-57
8.11.6 Left Deck Pickup Motor	8-58
8.11.6.1 Removing the Rear Cover (lower).....	8-58
8.11.6.2 Removing the DC Power Supply Unit.....	8-58
8.11.6.3 Removing the Left Deck Pickup Motor.....	8-58
8.11.7 Right Deck Pickup Motor.....	8-59
8.11.7.1 Removing the Right Cover (lower rear)	8-59
8.11.7.2 Removing the Rear Cover (lower).....	8-59
8.11.7.3 Removing the Waste Toner Bottle Base.....	8-59
8.11.7.4 Removing the Right Deck Pickup Motor	8-60
8.11.8 Vertical Path Motor	8-60
8.11.8.1 Removing the Right Cover (lower rear)	8-60
8.11.8.2 Removing the Rear Cover (lower).....	8-60
8.11.8.3 Removing the Waste Toner Bottle Base.....	8-60
8.11.8.4 Removing the Vertical Path Motor.....	8-61
8.11.9 Right Deck Pull-Off Motor.....	8-61
8.11.9.1 Removing the Right Cover (lower rear)	8-61
8.11.9.2 Removing the Rear Cover (lower).....	8-61
8.11.9.3 Removing the Waste Toner Base.....	8-62
8.11.9.4 Removing Right Deck Pull-Off Motor	8-62
8.11.10 Cassette Paper Level Sensor (A/B).....	8-62
8.11.10.1 Removing the Rear Cover (lower).....	8-62
8.11.10.2 Removing the DC Power Supply Unit.....	8-63
8.11.10.3 Removing the Cassette Lifter Motor	8-63
8.11.10.4 Removing the Cassette Paper Level Sensor	8-63
8.11.11 Left Deck Paper Level Sensor	8-64
8.11.11.1 Removing the Rear Cover (lower).....	8-64
8.11.11.2 Removing the Left Cover (lower).....	8-64
8.11.11.3 Removing the Power Cord Base.....	8-65
8.11.11.4 Removing the Left Deck Paper Level Sensor.....	8-66

8.11.12 Right Deck Pickup Assembly.....	8-66
8.11.12.1 Removing the Right Deck Pickup Unit.....	8-66
8.11.13 Left Deck Pickup Assembly.....	8-67
8.11.13.1 Removing the Left Deck Pickup Unit.....	8-67
8.11.14 Right Deck Pickup/Feed/Separation Roller.....	8-68
8.11.14.1 Removing the Right Deck Pickup, Feed, and Separation Rollers.....	8-68
8.11.15 Left Deck Pickup/Feed/Separation Roller.....	8-69
8.11.15.1 Removing the Left Deck Pickup, Feed, and Separation Roller.....	8-69
8.11.16 Cassette Pickup/Feed/Separation Roller.....	8-70
8.11.16.1 Removing the Cassette Pickup, Feed, and Separation Rollers.....	8-70
8.11.17 Manual Feed Unit.....	8-71
8.11.17.1 Removing the Manual Feed Unit.....	8-71
8.11.18 Manual Feed Roller.....	8-71
8.11.18.1 Removing the Manual Feed Roller.....	8-71
8.11.19 Manual Feed Separation Roller.....	8-72
8.11.19.1 Removing the Manual Feed Roller.....	8-72
8.11.19.2 Removing the Manual Feed Separation Roller.....	8-72
8.11.20 Manual Feed Pre-Registration Motor.....	8-73
8.11.20.1 Removing the Rear Cover (upper).....	8-73
8.11.20.2 Removing the Right Cover (upper rear).....	8-74
8.11.20.3 Removing the Rear Cover (lower).....	8-74
8.11.20.4 Removing the Right Cover (lower rear).....	8-74
8.11.20.5 Sliding the DC Controller Box.....	8-74
8.11.20.6 Removing the DC Controller Box.....	8-75
8.11.20.7 Points to Note When Mounting the DC Controller Box.....	8-75
8.11.20.8 Removing the HV1 PCB.....	8-76
8.11.20.9 Manual Feed Pre-Registration Motor.....	8-77
8.11.21 Horizontal Registration Assembly.....	8-77
8.11.21.1 Removing the Fixing Assembly.....	8-77
8.11.21.2 Removing the Horizontal Registration Unit.....	8-78
8.11.22 Registration Motor.....	8-79
8.11.22.1 Removing the Fixing/Feeding Driver PCB.....	8-79
8.11.22.2 Removing the Registration Motor.....	8-80
8.11.23 Horizontal Registration Motor.....	8-81
8.11.23.1 Removing the Fixing Assembly.....	8-81
8.11.23.2 Removing the Horizontal Registration Unit.....	8-82
8.11.23.3 Removing the Horizontal Registration Motor.....	8-83
8.11.24 Duplex Reversal Motor.....	8-84
8.11.24.1 Removing the Fixing Front Cover.....	8-84
8.11.24.2 Removing the Duplexing Reversal Motor.....	8-84
8.11.25 Duplex Left Motor.....	8-84
8.11.25.1 Removing the Fixing Front Cover.....	8-84
8.11.25.2 Removing the Duplexing Left Motor.....	8-85
8.11.26 Duplex Middle Motor.....	8-86
8.11.26.1 Removing the Fixing/Feeding Driver PCB.....	8-86
8.11.26.2 Removing the Duplexing Middle Motor.....	8-87
8.11.27 Duplex Right Motor.....	8-87
8.11.27.1 Removing the Fixing/Feeding Driver PCB.....	8-87
8.11.27.2 Removing the Duplexing Right Motor.....	8-88
8.11.28 Outside Delivery Motor.....	8-88
8.11.28.1 Removing the Left Cover (upper).....	8-88
8.11.28.2 Removing the Delivery Cover.....	8-88
8.11.28.3 Removing the Left Cover (middle).....	8-89
8.11.28.4 Removing the Rear Cover (upper).....	8-89

8.11.28.5 Removing the Controller Box Cover	8-89
8.11.28.6 Removing the Controller Box.....	8-90
8.11.28.7 Removing the Outside Delivery Motor	8-91

8.1 Construction

8.1.1 Specifications, Control Mechanisms, and Functions

0002-4685


The following shows the major specifications, control mechanisms, and functions of the pickup/feeding system:

T-8-1

Item	Description	Remarks
Method of paper accommodation	front loading	
Method of pickup	front deck (right, left)	separation retard
	cassette (3, 4)	separation retard
	manual feed tray	separation retard
reference of paper movement	center	
accommodation of paper	front deck (right, left)	1500 sheets (80 g/m ²)
	cassette (3, 4)	550 sheets (80 g/m ²)
	manual feed tray	100 sheets (80 g/m ²)
Size of paper	front deck (left, right)	A4, B5, LTR
	cassette (3, 4)	A3, B4, A4, A4R, B5, B5R, A5R, 305X457mm, 320X450mm(SRA3), 330X483mm, 11X17, LGL, LTR, LTRR, STMTR, EXEC, 12X18, 12-5/8X17-11/16, 13X19
	manual feed tray	main scanning: 100 to 330 mm sub scanning: 148.5 to 482 mm
Weight of paper	front deck (left, right)	64 to 209g/m ²
	cassette (3, 4)	64 to 209g/m ²
	manual feed tray	64 to 250g/m ²
	duplexing	mono color: 64 to 209 g/m ² color: 64 to 163 g/m ²
Switching paper sizes	front deck (left, right)	by service person
	cassette (3,4)	by user
	manual feed tray	by user
Method of duplexing	through path	

8.1.2 Major Divisions of the Machine

0002-4689

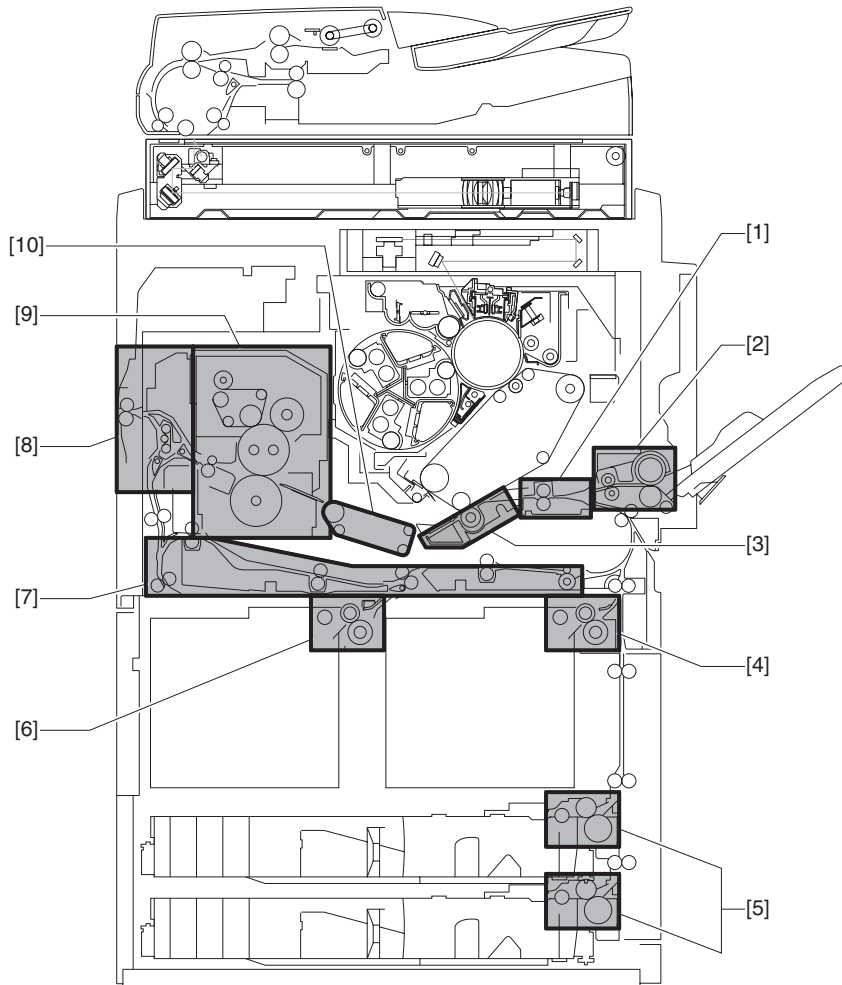


F-8-1

- [1] Registration roller assembly
- [2] Manual feed pickup assembly
- [3] Secondary transfer assembly
- [4] Right deck pickup assembly
- [5] Cassette pickup assembly
- [6] Left deck pickup assembly
- [7] Duplexing feeding assembly
- [8] Delivery assembly
- [9] Fixing assembly
- [10] Feeding assembly

8.1.3 Arrangement of Rollers

0002-4701

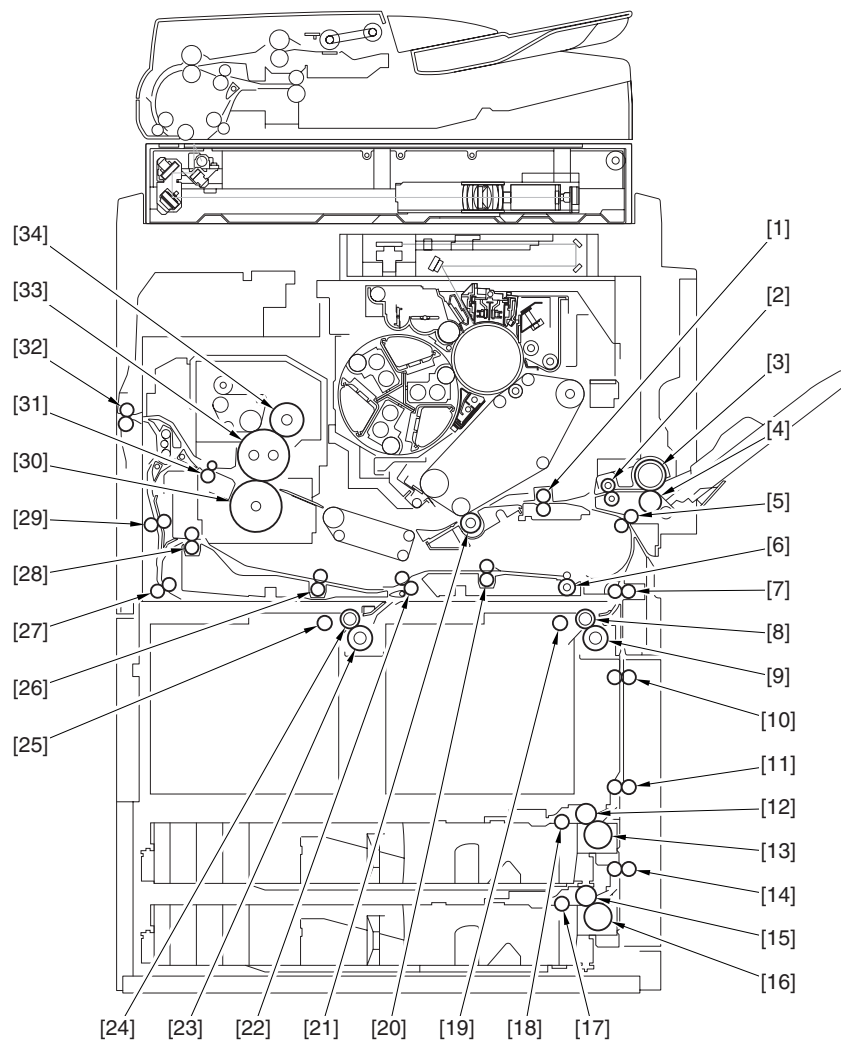


F-8-2

- [1] Registration roller
- [2] Manual feed pull-off roller
- [3] Manual feed roller
- [4] Manual feed separation roller
- [5] Pre-registration roller
- [6] Duplexing outlet roller
- [7] Vertical path 1 roller
- [8] Right deck feed roller
- [9] Right deck separation roller
- [10] Vertical path 2 roller
- [11] Vertical path 3 roller
- [12] Cassette 3 feed roller
- [13] Cassette 3 separation roller

- [14] Vertical path 4 roller
- [15] Cassette 4 feed roller
- [16] Cassette 4 separation roller
- [17] Cassette 4 pickup roller
- [18] Cassette 3 pickup roller
- [19] Right deck pickup roller
- [20] Duplexing right roller
- [21] Secondary transfer roller
- [22] Duplexing confluence roller
- [23] Left deck separation roller
- [24] Left deck feed roller
- [25] Left deck pickup roller
- [26] Duplexing left roller
- [27] Reversing 2 roller
- [28] Duplexing inlet roller
- [29] Reversing 1 roller
- [30] Pressure roller
- [31] Inside paper roller
- [32] Outside delivery roller
- [33] Fixing roller
- [34] Outside heat roller

8.1.4 Diagram of the Paper Path

0003-2745

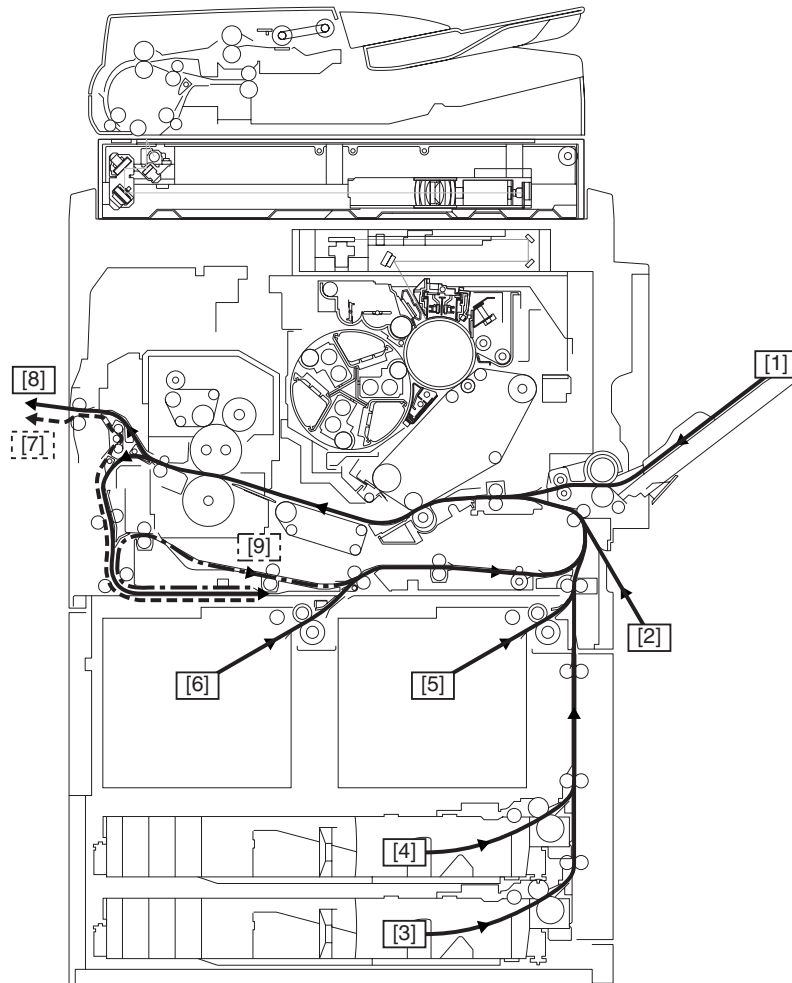


F-8-3

- [1] Manual feed pickup
- [2] Side paper deck pickup
- [3] Cassette 4 pickup
- [4] Cassette 3 pickup
- [5] Right deck pickup
- [6] Left deck pickup
- [7] Face-down delivery
- [8] Face-up delivery
- [9] Duplexing re-pickup

8.1.5 Arrangement of Sensors

0003-2748

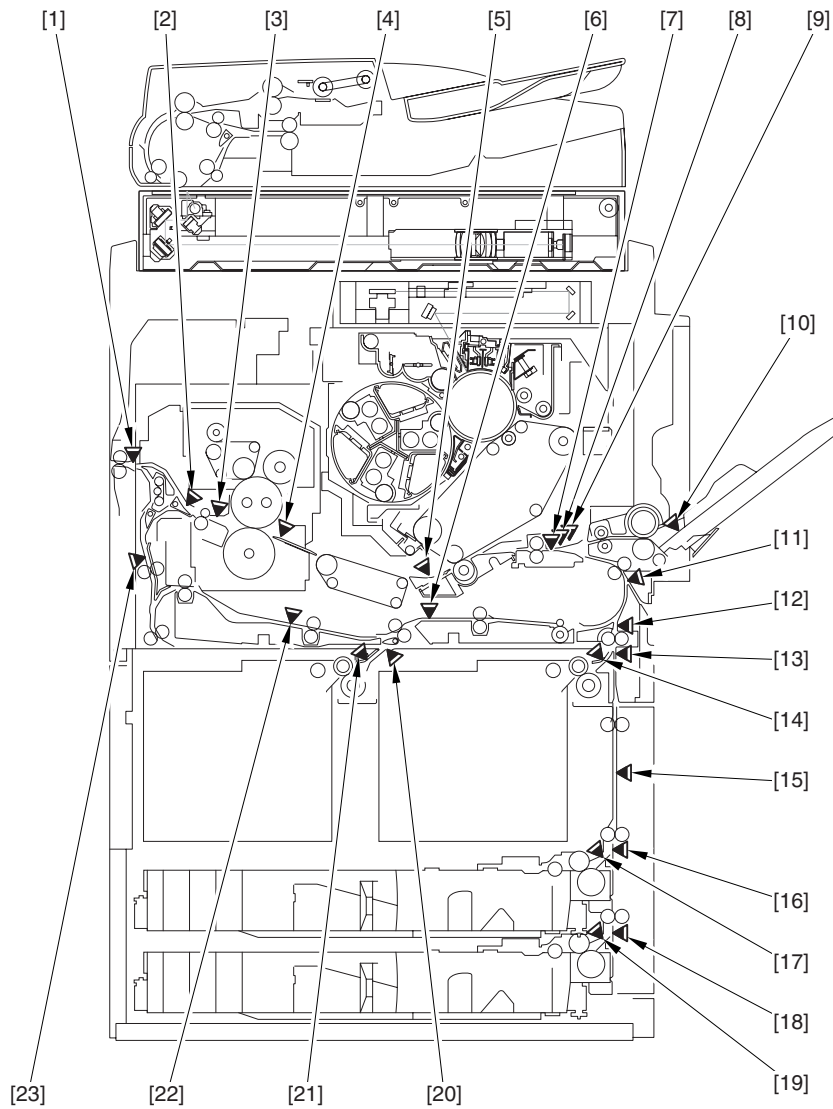


F-8-4

- [1] External delivery sensor
- [2] Reversal sensor
- [3] Inside delivery sensor
- [4] Fixing inlet sensor
- [5] Post-transfer sensor
- [6] Duplexing confluence sensor
- [7] Transparency sensor (front; PS3)
- [8] Registration sensor
- [9] Transparency sensor (rear; PS29)
- [10] Manual feed paper sensor
- [11] Vertical path confluence sensor

- [12] Vertical path 0 sensor
- [13] Vertical path 1 sensor
- [14] Right deck pickup sensor
- [15] Vertical path 2 sensor
- [16] Vertical path 3 sensor
- [17] Cassette 3 pickup sensor
- [18] Vertical path 4 sensor
- [19] Cassette 4 pickup sensor
- [20] Left deck stationary sensor
- [21] Left deck pickup sensor
- [22] Duplexing left sensor
- [23] Reversal vertical path sensor

8.1.6 Arrangement of Solenoids

0003-2750

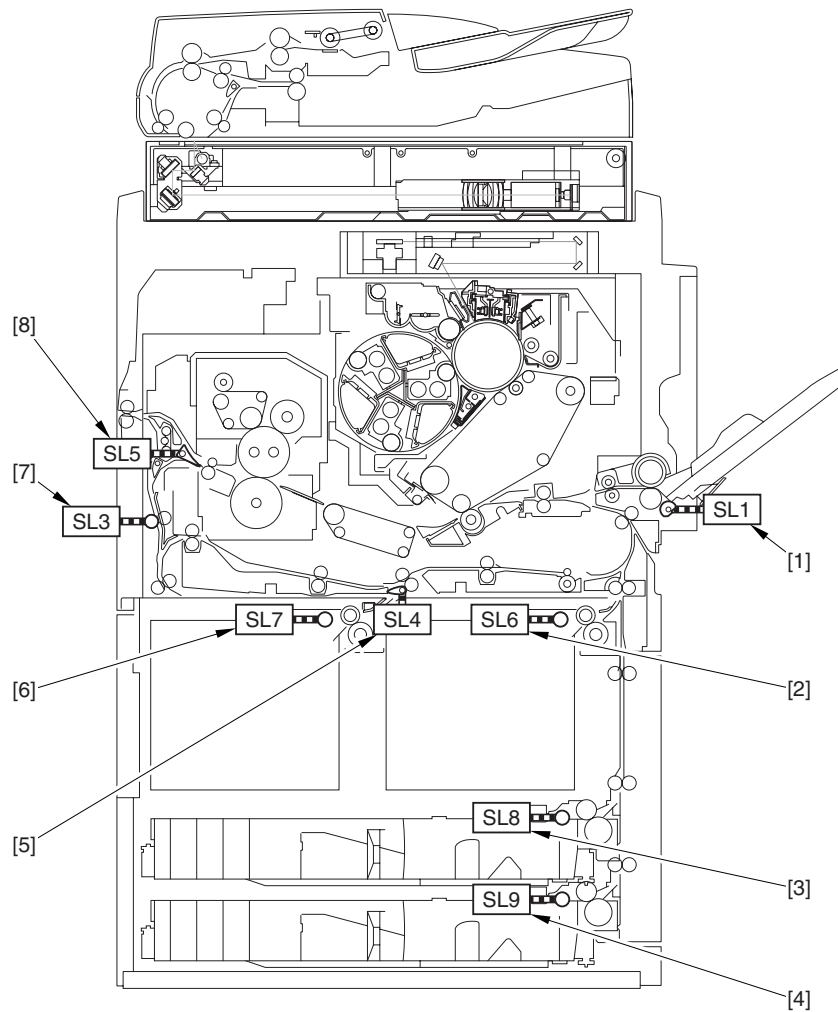


F-8-5

- [1] Manual feed pickup solenoid
- [2] Deck (right) pickup solenoid
- [3] Cassette 3 pickup solenoid
- [4] Cassette 4 pickup solenoid
- [5] Left deck confluence solenoid
- [6] Deck (left) pickup solenoid
- [7] Reversal shifting solenoid
- [8] Delivery solenoid

8.1.7 Arrangement of Drive Mechanisms

0003-2752

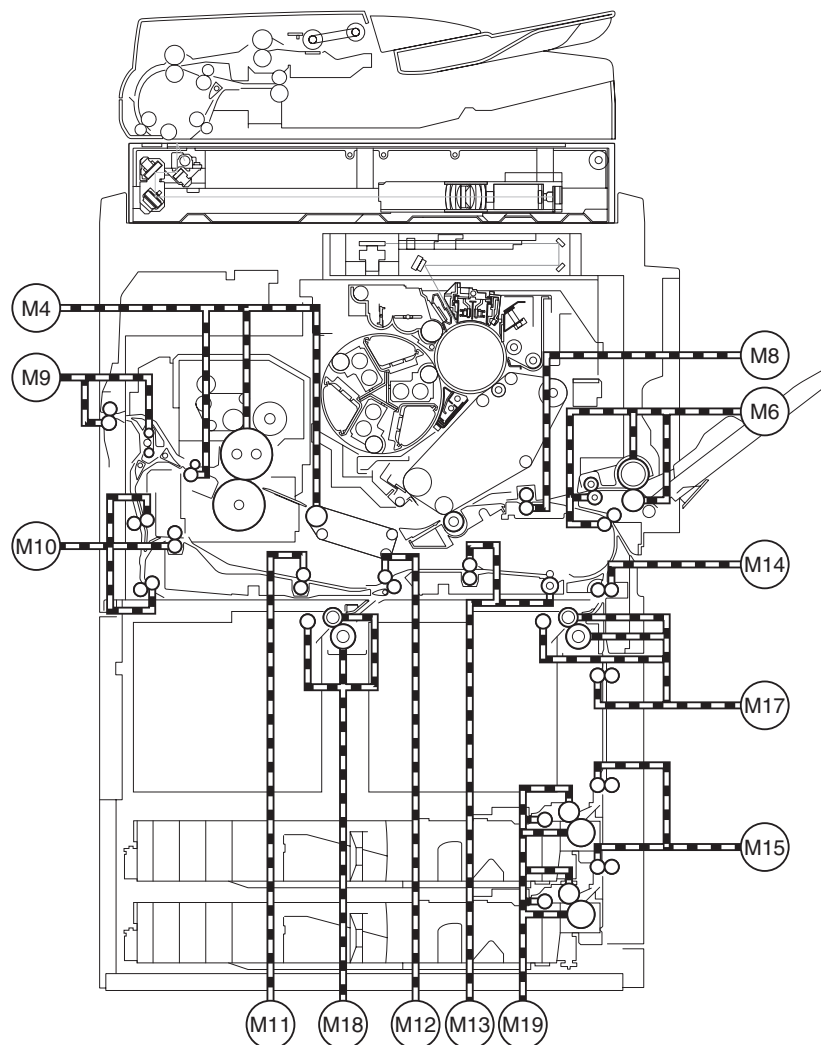

F-8-6

- M4 Fixing motor
- M6 Manual feed pre-registration motor
- M8 Registration motor
- M9 Outside delivery motor
- M10 Duplexing reversal motor
- M11 Duplexing left motor
- M12 Duplexing middle motor
- M13 Duplexing right motor
- M14 Right deck pull-off motor
- M15 Vertical path motor
- M17 Right deck pickup motor
- M18 Left deck pickup motor
- M19 Cassette pickup motor


8.2 Basic Sequence

8.2.1 Basic Sequence of Operation (in response to a press on the Start key)

0005-4709

a. Right Deck


<A4, plain, 2 sheets continuous, secondary transfer speed at normal, face-up delivery>

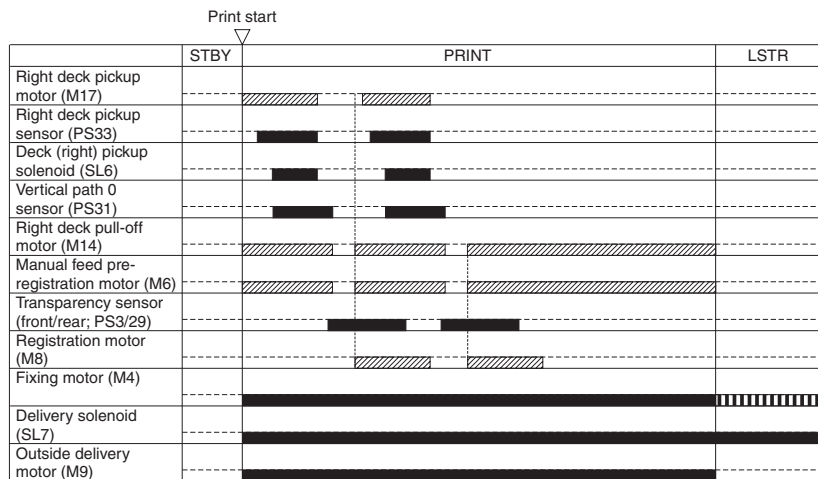

▨ : acceleration control used.
 ▨ : rotates at 1/3 speed (92 mm/sec).

F-8-7

<A4, plain, 2 sheets continuous, secondary transfer speed at 2/3, face-up delivery>

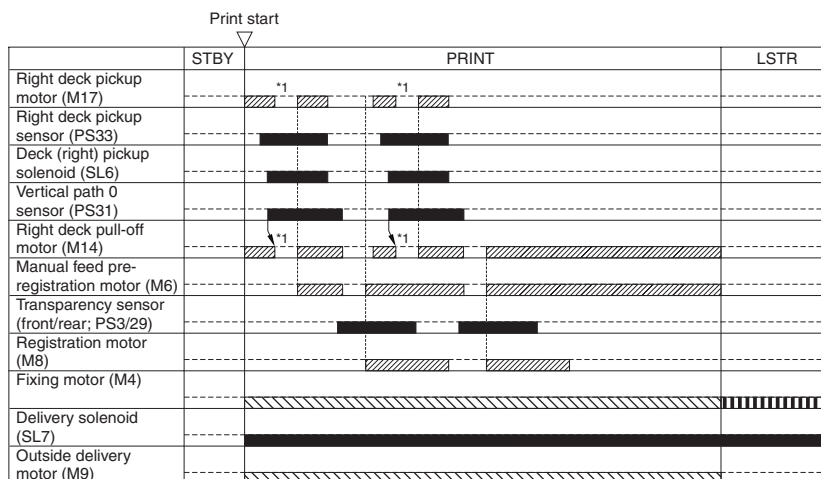


▨ : acceleration control used.
 ▨ : 2/3 rotates at 2/3 speed (184 mm/sec).
 ▨ : rotates at 1/3 speed (92 mm/sec).
 *1 : pre-registration stop.

F-8-8

b. Cassette 3

<A4, plain, 2 sheets continuous, secondary transfer speed at normal, face-up delivery>

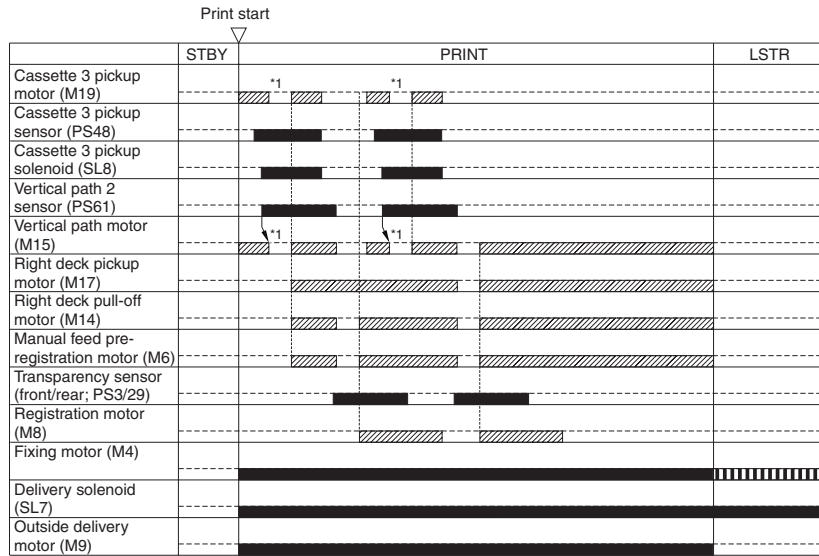


▨ : acceleration control used.
 ▩ : rotates at 1/3 speed (92 mm/sec).
 *1 : pre-registration stop.

F-8-9

c. Manual Feeder

<A4, plain, 2 sheets continuous, face-up delivery>

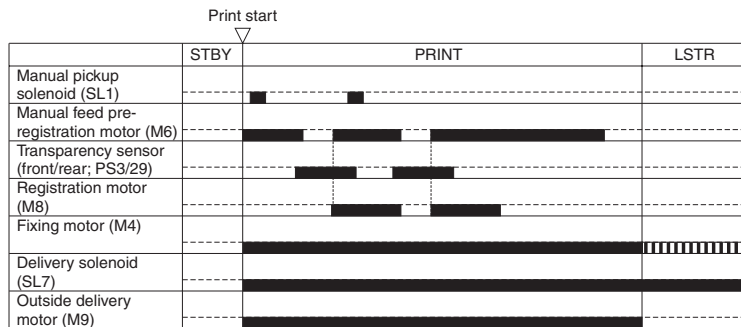


▩ : rotates at 1/3 speed (92 mm/sec).

F-8-10

8.2.2 Interval Acceleration

0003-2759

The machine provides 3 types of secondary transfer speed (normal, 2/3 speed, 1/3 speed) to suit the type of paper (material, weight) and the selected color mode. These speeds are in keeping with the image formation speed (276 mm/sec; if normal speed, 276 mm/sec; if 2/3 speed, 184 mm/sec; if 1/3 speed, 92 mm/sec).

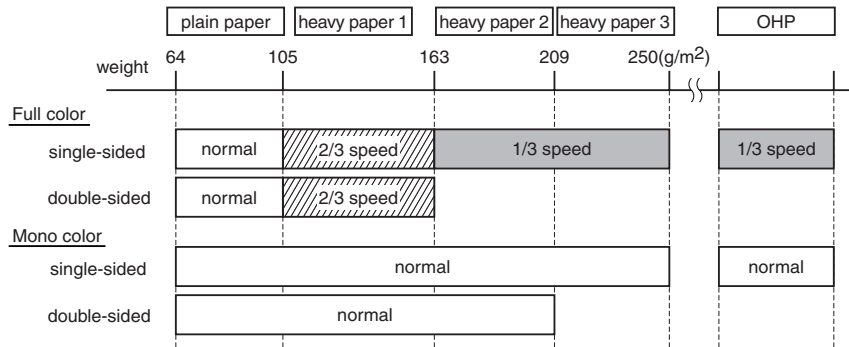


F-8-11

Instead of relying on electromagnetic clutches, the machine's feeding system makes use of a number of drive motors for finer control of interval acceleration, thus increasing the level of productivity. The rate of acceleration in response to transfer speed at respective intervals is as follows:

a. between pickup and secondary transfer roller

T-8-2

	Transfer speed	Normal (276 mm/sec)	2/3 speed (184 mm/sec)	1/3 speed (92 mm/sec)
	Interval	A to D	A to D	A to D
Feed speed	Right deck	1.8 times as fast (speed partly variable) *2	2.2 times as fast	2.7 times as fast
	left deck cassette 3/4 side deck (optional)	1.8 times as fast	2.2 times as fast	2.7 times as fast
	Manual feed	Equivalent to transfer speed	Equivalent to transfer speed	Equivalent to transfer speed

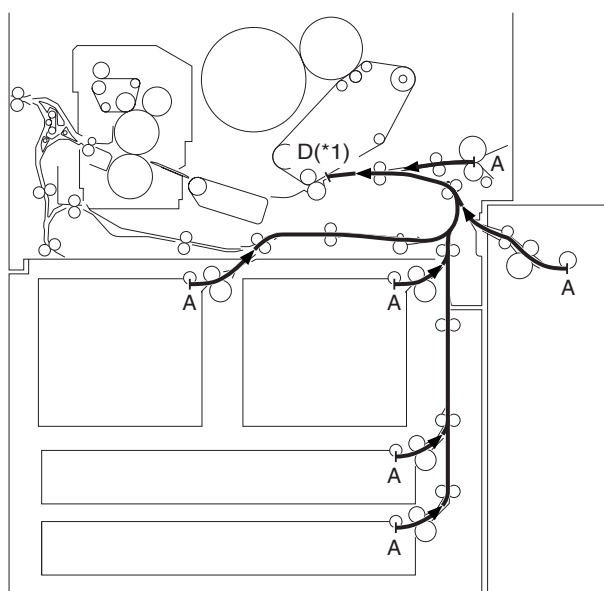


F-8-12

*1. Point 20 mm in front of secondary transfer.

*2. If the source of paper is the right deck and normal speed is used, the machine executes variable speed control (speed used between normal speed and x1.8 speed) in relation to the timing at which the paper reaches the vertical path 0 sensor (PS31) within interval B and C; this is to prevent interference between the trailing edge of the preceding paper and the leading edge of the following paper otherwise occurring if the speed was fixed to x1.8 (because of the short distance from the point of pickup to the point of registration).

T-8-3

	Transfer speed	Normal speed (276 mm/sec)		
	Interval	A to B	B to C	C to D
Feed speed	right deck	1.8 times speed	variable speed	1.8 times speed

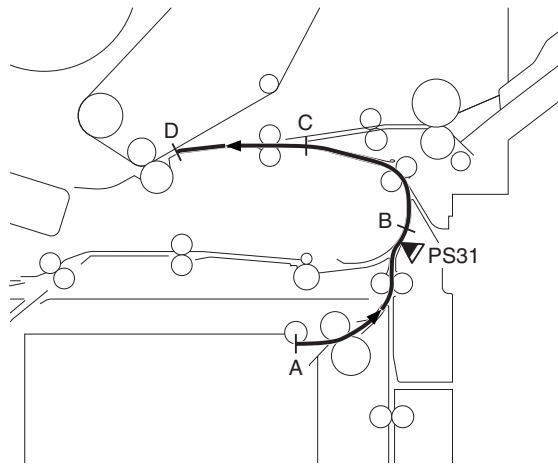

F-8-13

- A: Point of pickup
- B: Point of pre-registration
- C: Point 36 mm in front of the registration sensor
- D: Point 20 mm in front of secondary transfer


b. Secondary Transfer Roller to Outside Delivery

T-8-4

	Transfer speed	Normal speed (276 mm/sec)	2/3 speed (184 mm/sec)	1/3 Speed (92 mm/sec)
	Interval	E to F to H	E to F to H	E to F to H
Feed speed	face-up delivery	equivalent to transfer speed *3	equivalent to transfer speed	equivalent to transfer speed

T-8-5

	Transfer speed	Normal speed (276 mm/sec)		2/3 speed (184 mm/sc)		1/3 speed (92 mm/sec)	
	Interval	E to F	F to G to H	E to F	F to G to H	E to F	F to G to H
Feed speed	Face-down delivery	equivalent to transfer speed	2.3 as fast *4	equivalent to transfer speed	3.4 times as fast *4	equivalent to transfer speed	3.4 times as fast *4

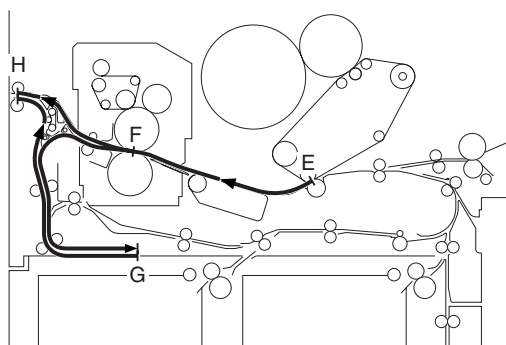


F-8-14

- *3. If the paper is A4, B5, or LTR, the speed of movement will be 2.3 times as high between F and H. However, the normal speed may be selected in service mode for better stacking (COPIER>OPTION>BODY>DLV>SPSW).
- *4. Acceleration occurs when the trailing edge of paper leaves the inside delivery sensor.

c. Secondary Transfer Roller to Duplexing Re-Pickup

T-8-6

	Transfer speed	Normal speed (276 mm/sec)			2/speed (184 mm/sec)		
	Interval	E to F	F to G to H	H to D	E to F	F to G to H	H to D
Feed speed	duplexing	equivalent to transfer speed	2.3 time as fast *5	1.8 times as fast	equivalent to transfer speed	3.4 times as fast *5	2.2 times as fast

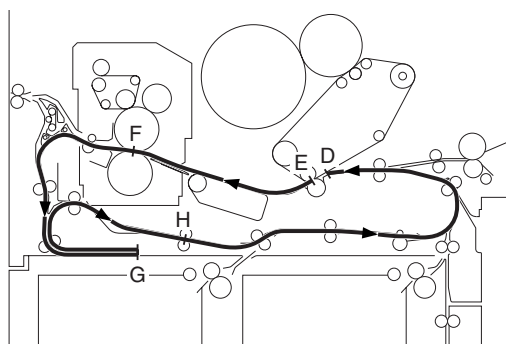

F-8-15

- *5. Acceleration occurs when the trailing edge of paper leaves the fixing roller. In duplexing mode, 1/3 speed cannot occur at tune of transfer.

8.2.3 Stopping the Paper Before Registration


0003-2796

The machine stops the paper before registration to prevent interference between preceding paper and following paper (otherwise occurring as the result of changes in feed speed over certain intervals).

The paper is stopped at the following points (according to sources of paper). If the manual feed pickup unit is used as the source of paper or if the source of paper is the right deck and, at the same time, while the normal transfer speed is used (i.e., variable speed control is executed), paper will not be stopped before registration:

T-8-7

Source of paper	Point of stopping paper
Right deck	[1] about 10 mm ahead of the vertical path 0 sensor (PS31)
Left deck	[2] about 25 mm ahead of the duplexing confluence sensor (PS18)
Cassette 3	[3] about 24 mm ahead of the vertical path 2 sensor (PS61)
Cassette 4	[4] about 57 mm ahead of the vertical path 3 sensor (PS62)
Side deck	[5] about 29 mm ahead of the deck feed sensor (PS106)

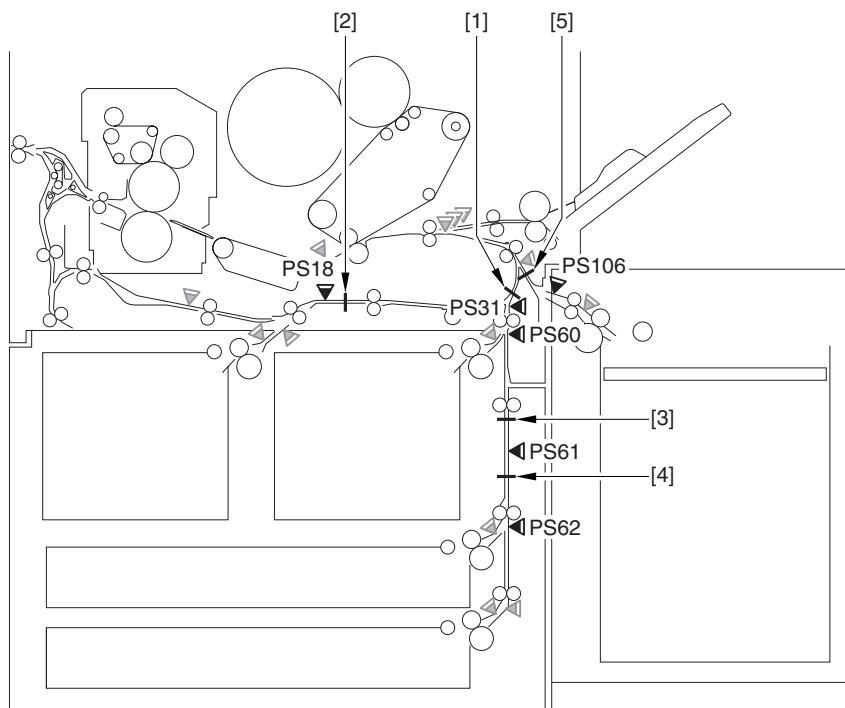

F-8-16


8.3 Detecting Jams

8.3.1 Delivery Jams

8.3.1.1 Cassette/Deck Pickup Assembly (right deck, left deck, cassette 3/4)

0003-2804

The leading edge of paper does not reach the sensor in question within a specific period of time after the pickup motor goes on.

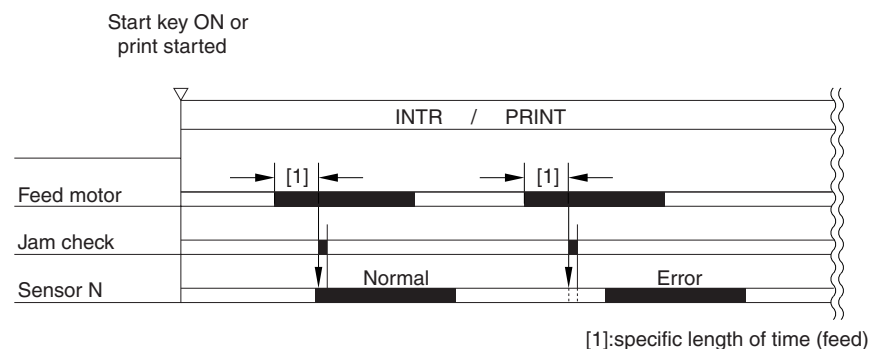

F-8-17

T-8-8


Source of paper	Motor	Sensor used
Right deck	right deck pickup motor (M17)	right deck pickup sensor (PS33)
Left deck	left deck pickup motor (M18)	left deck pickup sensor (PS40)
Cassette 3	cassette pickup motor (M19)	cassette 3 pickup sensor (PS48)
Cassette 4	cassette pickup motor (M19)	cassette 4 pickup sensor (PS54)

8.3.1.2 Delay Jam (source of paper other than cassette/deck)

0003-2805

The machine identifies a delay jam as follows when the source of paper is not the cassette:

The machine monitors the length of time between when paper leaves the sensor N-1 and when it reaches the sensor N (i.e., the sensor used for detection), and it will identify a delay jam if the sensor N does not go on within a specific period of time after the sensor N-1 has gone on.

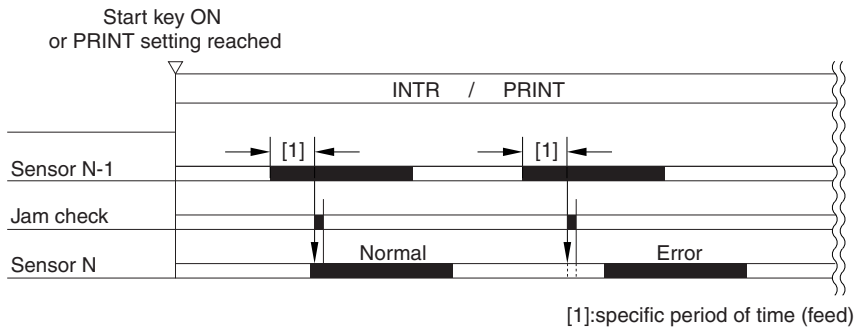

F-8-18

T-8-9


Sensor	Remarks
Vertical path confluence sensor (PS32)	
Vertical path 0 sensor (PS31)	
Vertical path 1 sensor (PS60)	
Vertical path 2 sensor (PS61)	
Vertical path 3 sensor (PS62)	
Vertical path 4 sensor (PS63)	
Transparency sensor (front; PS3)	if not transparency
Transparency sensor (rear; PS29)	if not transparency
Registration sensor (PS9)	if transparency
Post-transfer sensor (PS10)	
Inside delivery sensor (PS12)	
Reversal sensor (PS14)	
Outside delivery sensor (PS13)	
Reversal vertical path sensor (PS15)	
Duplexing left sensor (PS17)	
Duplexing confluence sensor (PS18)	

8.3.2 Stationary Jams

8.3.2.1 Common Stationary Jam

0003-2807

The sensor N does not go off within a specific period of time after it has gone on.

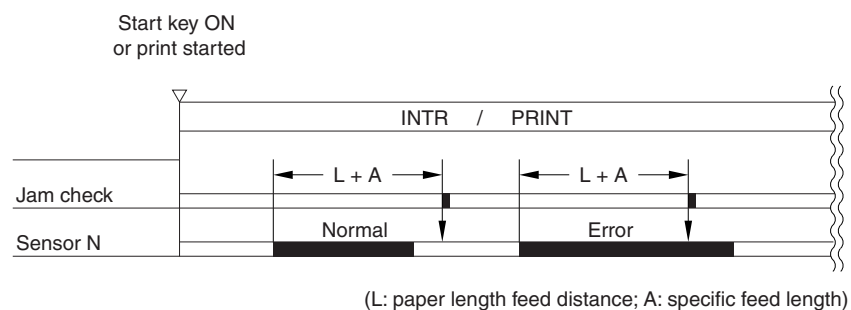

F-8-19

T-8-10

Sensor	Remarks
Vertical confluence sensor (PS32)	
Vertical path 0 sensor (PS31)	
Vertical path 1 sensor (PS60)	
Vertical path 2 sensor (PS61)	
Vertical path 3 sensor (PS62)	
Vertical path 4 sensor (PS63)	
Transparency sensor (front; PS3)	if not transparency
Transparency sensor (rear; PS29)	if not transparency
Registration sensor (PS9)	if transparency
Reversal sensor (PS14)	if face-down delivery
Outside delivery sensor (PS13)	
Reversal vertical path sensor (PS15)	
Duplexing left sensor (PS17)	
Duplexing confluence sensor (PS18)	

8.3.2.2 Stationary Jam at Power-On

0003-2808

Paper exists over the following sensor before the machine starts initial multiple rotation at power-on:

T-8-11

Sensor	Remarks
Vertical path confluence sensor (PS32)	
Vertical path 0 sensor (PS31)	
Vertical path 1 sensor (PS60)	
Vertical path 2 sensor (PS61)	
Vertical path 3 sensor (PS62)	
Vertical path 4 sensor (PS63)	
Transparency sensor (front; PS3)	
Transparency sensor (rear; PS29)	
Registration sensor (PS9)	
Reversal sensor (PS14)	
Outside delivery sensor (PS13)	
Reversal vertical path sensor (PS15)	
Duplexing left sensor (PS17)	
Duplexing confluence sensor (PS18)	
Fixing inlet sensor (PS11)	
Left deck stationary sensor (PS47)	

8.3.3 Other Jams

8.3.3.1 Wrong Paper Size

0003-2809

The machine identifies a jam if it detects paper shorter than the specified size:

T-8-12

Sensor	Remarks
Transparency sensor (front; PS3)	if not transparency
Transparency sensor (rear; PS29)	if not transparency
Registration sensor (PS9)	if transparency

8.3.3.2 Wrong Material

0003-2810

The machine identifies a jam if it detects paper of a material not indicated by the transparency sensor.

T-8-13

Sensor
Transparency sensor (front: PS3)
Transparency sensor (rear: PS29)

8.4 Cassette


8.4.1 Overview

0003-2814

Paper is held in position inside the cassette by means of the side guide plate and the rear guide plate.

The index special guide must be fitted before using an index sheet.

The cassette is set to a specific paper size using the cassette size dial.

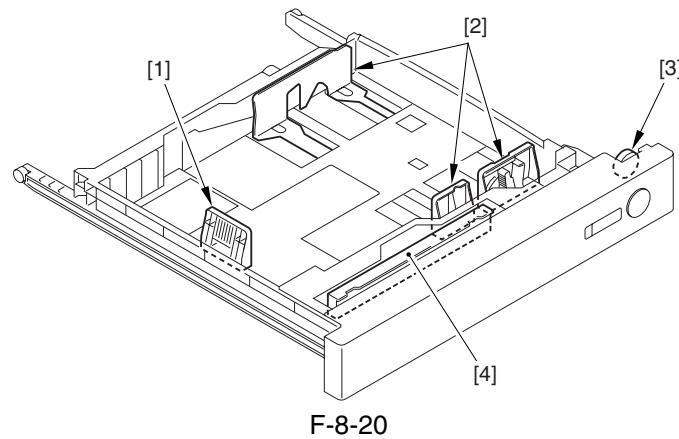

- [1] Rear guide plate
- [2] Side guide plate
- [3] Cassette size dial
- [4] Index special guide

8.4.2 Identifying Paper Sizes


0003-2826

The size of paper inside the cassette is identified by the cassette size dial, and the result is communicated to the cassette size detection PCB.

The array of 4 actuators on the cassette size detection PCB found on the machine indicates a specific state in keeping with the states (on/off) of the 4 actuators, enabling the identification of as many as 15 paper sizes.

If the cassette is absent, all 4 actuators are off, causing the machine to identify the absence of a cassette.

The cassette is set to AB-configuration or Inch-configuration by means of the switch mounted to the side of the dial. When the cassette is fitted to the machine, the switch goes off or on to indicate that the cassette is of the AB or inch configuration.

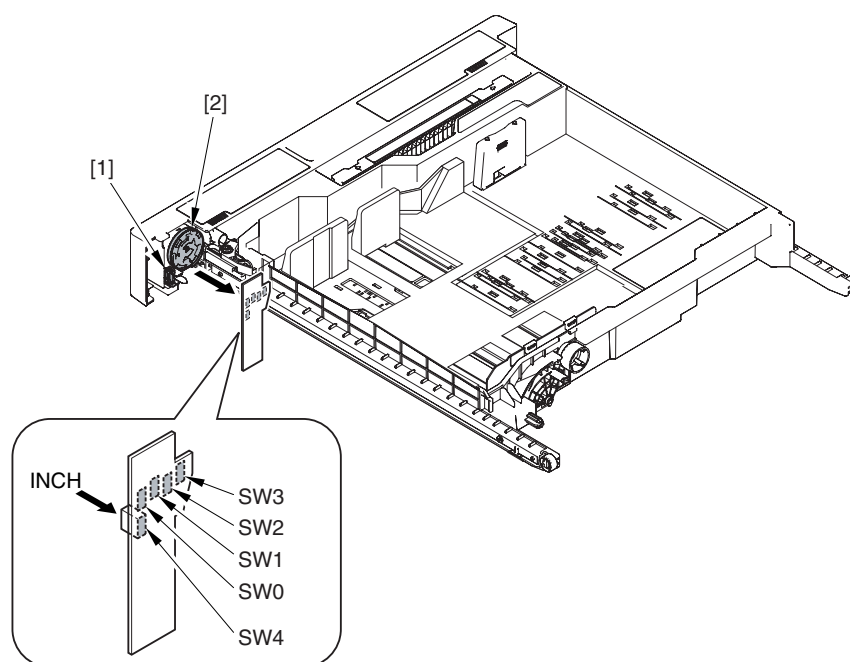

F-8-21

[1] AB/inch-configuration switch

[2] Cassette size dial

T-8-14

(AB-Configuration)

Size	SW0	SW1	SW2	SW3	SW4
(no cassette)	OFF	OFF	OFF	OFF	OFF
A5R	ON	OFF	ON	ON	OFF
A4	ON	ON	ON	ON	OFF
A4R	OFF	ON	ON	ON	OFF
A3	OFF	ON	OFF	ON	OFF
B5	ON	ON	OFF	ON	OFF
B5R	OFF	OFF	OFF	ON	OFF
B4	ON	OFF	OFF	ON	OFF
305x457mm	ON	ON	OFF	OFF	OFF
320x450mm(SRA3)	ON	ON	ON	OFF	OFF
330x483mm	OFF	OFF	ON	OFF	OFF
U1	OFF	ON	OFF	OFF	OFF
U2	OFF	ON	ON	OFF	OFF

T-8-15

(Inch-Configuration)

Size	SW0	SW1	SW2	SW3	SW4
(no cassette)	OFF	OFF	OFF	OFF	OFF
STMTR	ON	OFF	ON	ON	ON
LTR	ON	ON	ON	ON	ON
LTRR	OFF	ON	ON	ON	ON
LGL	OFF	ON	OFF	ON	ON
11 x 17	ON	ON	OFF	ON	ON
EXEC	OFF	OFF	OFF	ON	ON
12 x 18	ON	ON	OFF	OFF	ON
12-5/8 x 17-11/16	ON	ON	ON	OFF	ON
13 x 19	OFF	OFF	ON	OFF	ON
U3	OFF	ON	OFF	OFF	ON
U4	OFF	ON	ON	OFF	ON

If a combination not found in the foregoing table is found, the machine will assume the absence of a cassette, and will not move up the cassette lifter.

If the machine fails to identify a paper size (no indication of a paper size on the control panel), it will indicate the Add Paper message if the cassette in question is selected.

8.4.3 Setting the Universal Cassette

0003-2832

The following is a list of default sizes identified in relation to U1 through U4:

T-8-16

U1	G-LTR
U2	FLSC
U3	G-LGL
U4	A-LTR

In addition to the foregoing default sizes, the following may be assigned in service mode:

T-8-17

(Universal U1 through U4)

Size

FLSC
 OFI
 E-OFI
 B-OFI
 A-OFI
 M-OFI
 FOLI
 A-FLS
 G-LTR
 G-LGL
 A-LTR (LTR)
 A-LTRR (LTRR)


8.4.4 Checking the Level of Remaining Paper

0003-2833

The machine uses the following sensors to check the level of remaining paper:

T-8-18

Sensor	Cassette 3	Cassette 4
Paper level sensor A	PS52	PS58
Paper level sensor B	PS53	PS59
Paper sensor	PS50	SP56



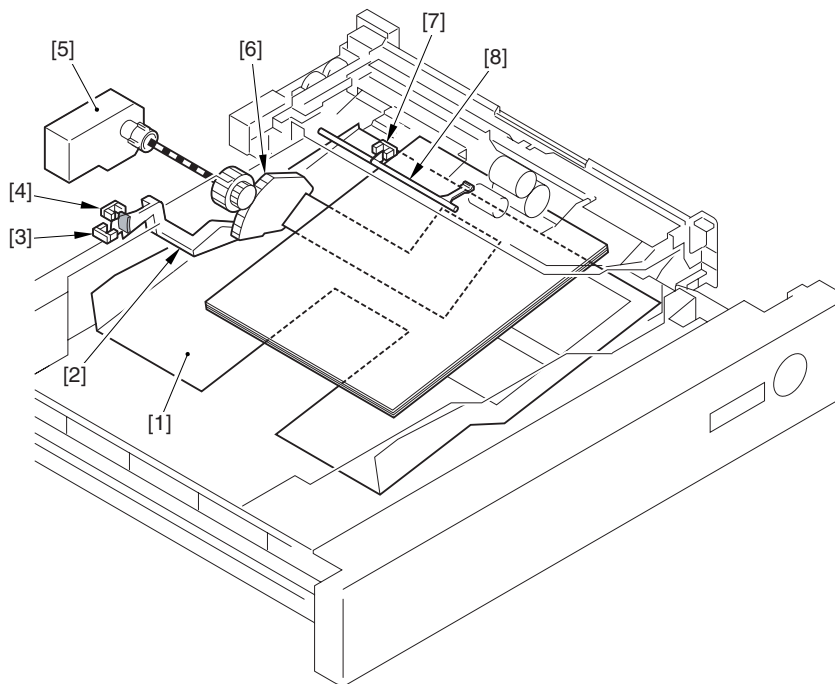


F-8-22


- [1] Tray
- [2] Paper level sensor flag
- [3] Cassette paper level sensor A
- [4] Cassette paper level sensor B
- [5] Lifter motor
- [6] Lifter gear
- [7] Cassette paper sensor
- [8] Flag

View Front the Front of the Machine

Full of paper

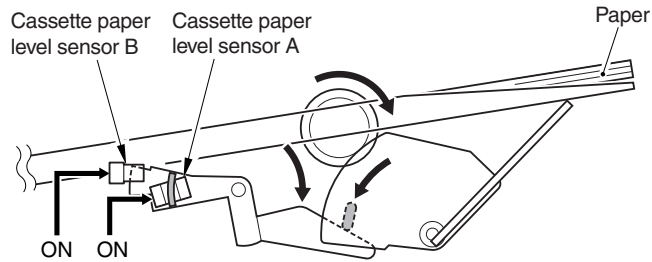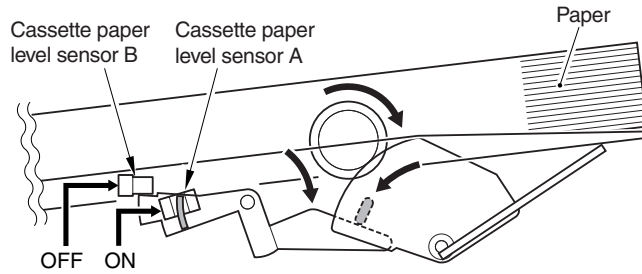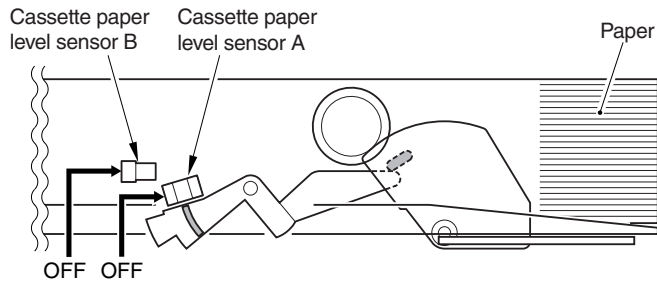

Empty of paper

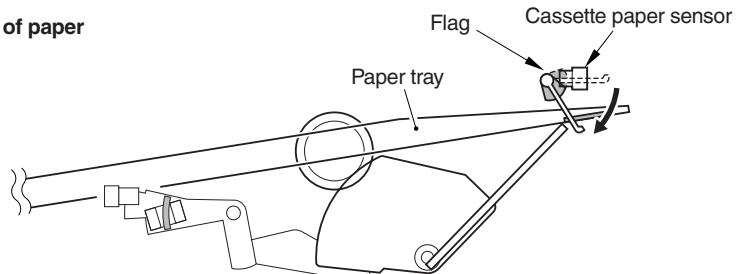

F-8-23

T-8-19

Paper level sensor A	Paper level sensor B	Paper sensor	Level of paper	Indication on control panel
OFF	OFF	OFF	from 100% to about 50% of capacity	
ON	OFF	OFF	from about 50% to about 10% of capacity	
ON	ON	OFF	about 10% or less of capacity	
--	--	ON	no paper	

8.5 Cassette Pick-Up Unit

8.5.1 Overview

0003-2838


The paper inside the cassette is held up by the lifter so that the paper remains in contact with the pickup roller.

When the cassette pickup motor goes on, the pickup roller starts to rotate to pick up paper.

When the cassette solenoid goes on, on the other hand, the pickup roller starts to leave the surface of paper.

The feed roller and the separation roller make sure that only one sheet of paper is moved ahead to the feed path to reach the vertical path roller.

The pickup roller, feed roller, and separation roller of the cassette 3/4 are driven by the cassette pickup motor (M19), and its drive is switched from the cassette 3 pickup assembly to the cassette 4 pickup assembly by reversing the rotation of the cassette pickup motor.

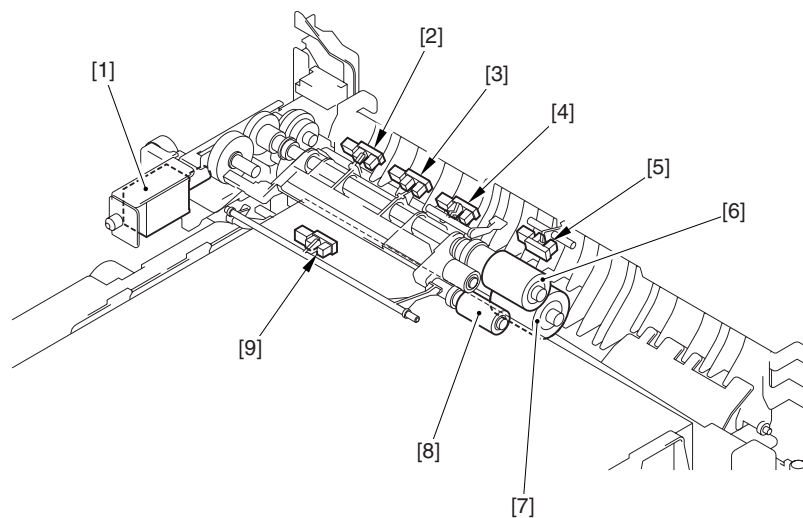


F-8-24

- [1] Cassette 3/4 pickup solenoid (SL8/SL9)
- [2] Cassette 3/4 limit sensor (PS49/PS55)
- [3] Cassette 3/4 lifter sensor (PS51/PS57)
- [4] Cassette 3/4 pickup sensor (PS48/PS54)
- [5] Vertical path 3/4 sensor (PS62/PS63)
- [6] Cassette 3/4 feed roller
- [7] Cassette 3/4 separation roller
- [8] Cassette 3/4 pickup roller
- [9] Cassette 3/4 paper sensor

8.5.2 Basic Sequence

0005-4710

<A4, plain, 2 sheets continuous, secondary transfer speed at normal, face-up delivery>

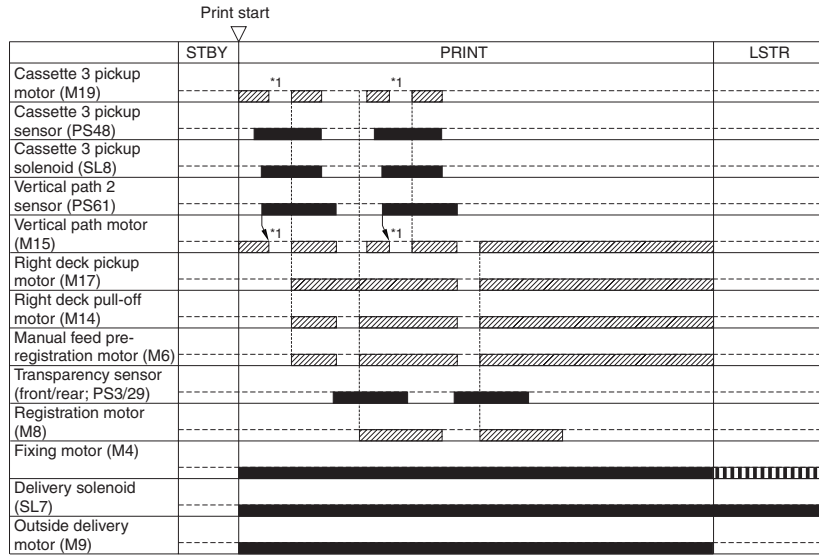

▨ : acceleration control used.

■ : rotates at 1/3 speed (92 mm/sec).

*1 : pre-registration stop.


F-8-25

8.5.3 Movement of the Lifter

0003-2840

When the cassette is slid inside the machine, the pickup roller starts to move down and, at the same time, the sensor flag leaves the lifter sensor, thus turning on the cassette lifter motor to move up the lifter.

When the lifter sensor detects the surface of paper, on the other hand, the lifter stops to move up. The limit sensor is used to prevent damage in the event that the lifter motor fails to stop.

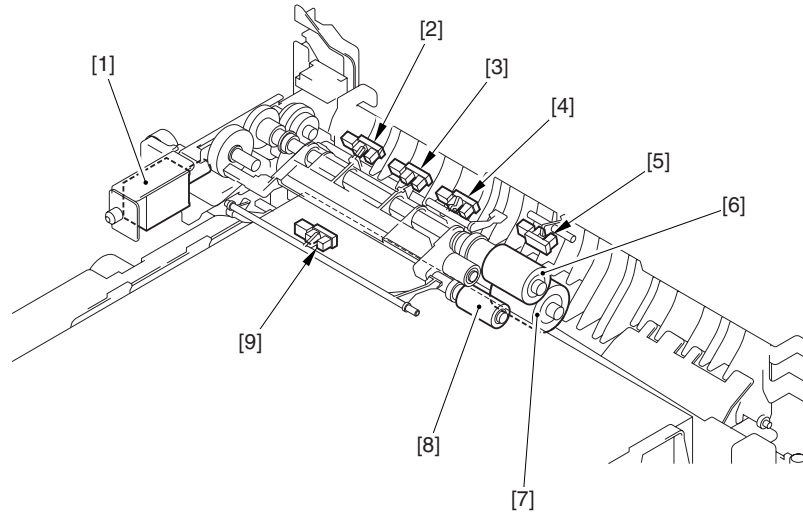

F-8-26

- [1] Cassette 3/4 pickup solenoid (SL8/SL9)
- [2] Cassette 3/4 limit sensor (PS49/PS55)
- [3] Cassette 3/4 lifter sensor (PS51/PS57)
- [4] Cassette 3/4 pickup sensor (PS48/PS54)
- [5] Vertical path 3/4 sensor(PS62/PS63)
- [6] Cassette 3/4 feed roller
- [7] Cassette 3/4 separation roller
- [8] Cassette 3/4 pickup roller
- [9] Cassette 3/4 paper sensor (PS50/PS56)

8.6 Manual Feed Pickup Unit


8.6.1 Overview

0003-2845


When the manual feed pickup solenoid (SL1) goes on, the manual feed holding plate is moved up; as a result, the paper on the tray is forced against the manual feed pickup roller, causing a single sheet of paper to be picked up by the manual feed pick up tray and the separation roller.

The manual feed roller, manual feed separation roller, and manual feed pull-off roller are driven by the pre-registration motor.

The paper on the tray of the manual feed pickup unit is monitored using the manual feed paper sensor (PS6). The last sheet of the tray, on the other hand, is identified using the last paper sensor (PS7).

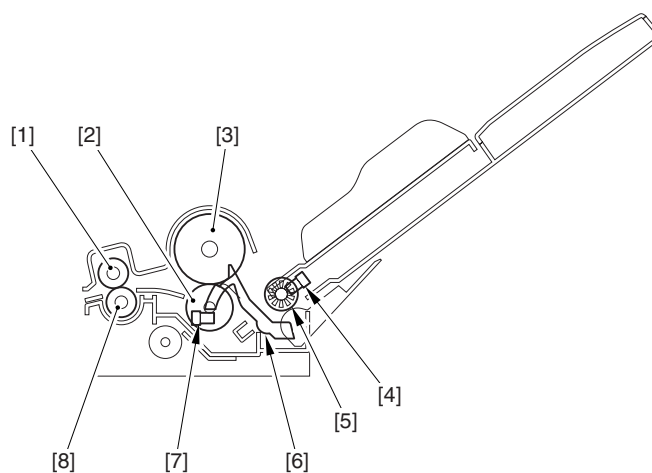

F-8-27

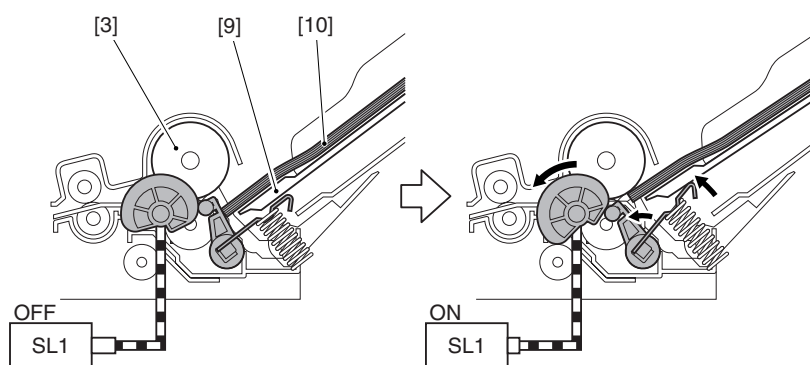


F-8-28

- [1] Manual feed pull-off upper roller
- [2] Manual feed separation roller
- [3] Manual feed pickup roller
- [4] Last paper sensor (PS7)
- [5] Last paper detecting roll
- [6] Paper sensor flag
- [7] Manual feed paper sensor (PS6)
- [8] Manual feed pull-off lower roller
- [9] Manual feed holding plate
- [10] Paper

8.6.2 Basic Sequence

0005-4711

<A4, plain, 2 sheets continuous, face-up delivery>

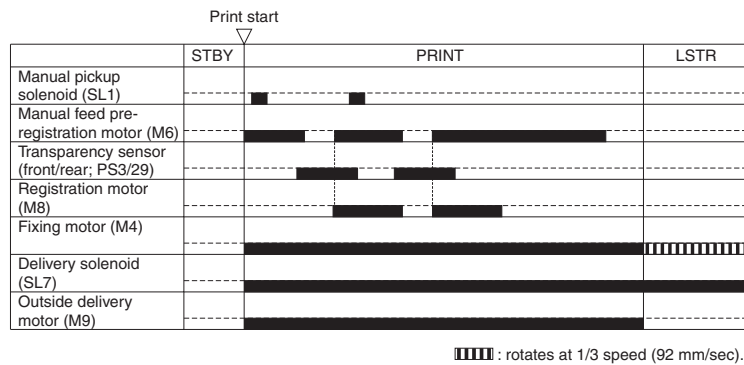


F-8-29

8.6.3 Identifying the Size of Paper

0003-2850

The machine identifies the width of paper with reference to the output of the variable resistor (SVR1) operating in keeping with the movement of the side guides. The width of the side guide on the manual feed tray is adjusted by the user by manually moving the guides.

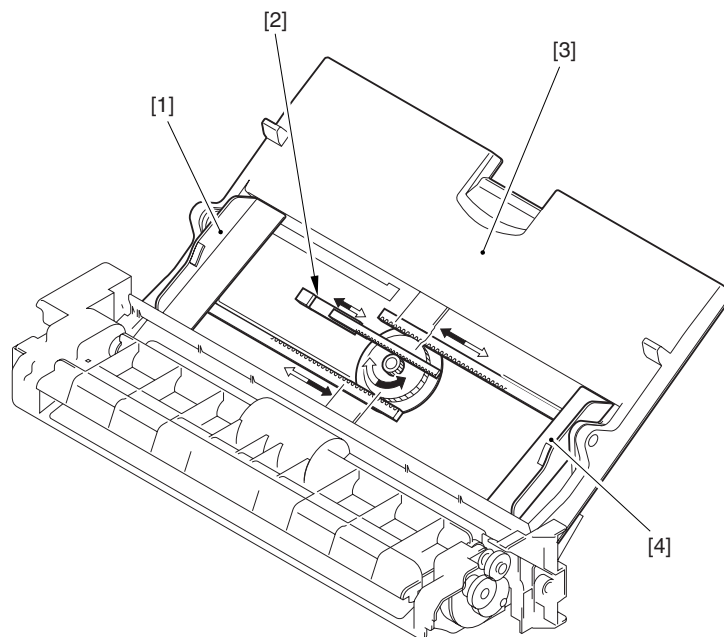

F-8-30


- [1] Slide guide (rear)
- [2] Variable resistor
- [3] Manual feed tray
- [4] Slid guide (front)

8.6.4 Identifying the Last Sheet

0003-2853

The machine uses a secondary transfer method, which requires it to identify the last sheet so that no image will be formed on the ITB in the absence of paper.

When the last paper pickup roll rotates, the slit cut into the roll causes the output of the last paper sensor (PS7) to take on a pulse wave form. The last paper pickup roller rotates only when the last sheet is picked up, and remains stationary at other times; if 4 or more output pulses are detected from the last paper sensor, therefore, the machine automatically assumes that the paper in question is the last sheet.

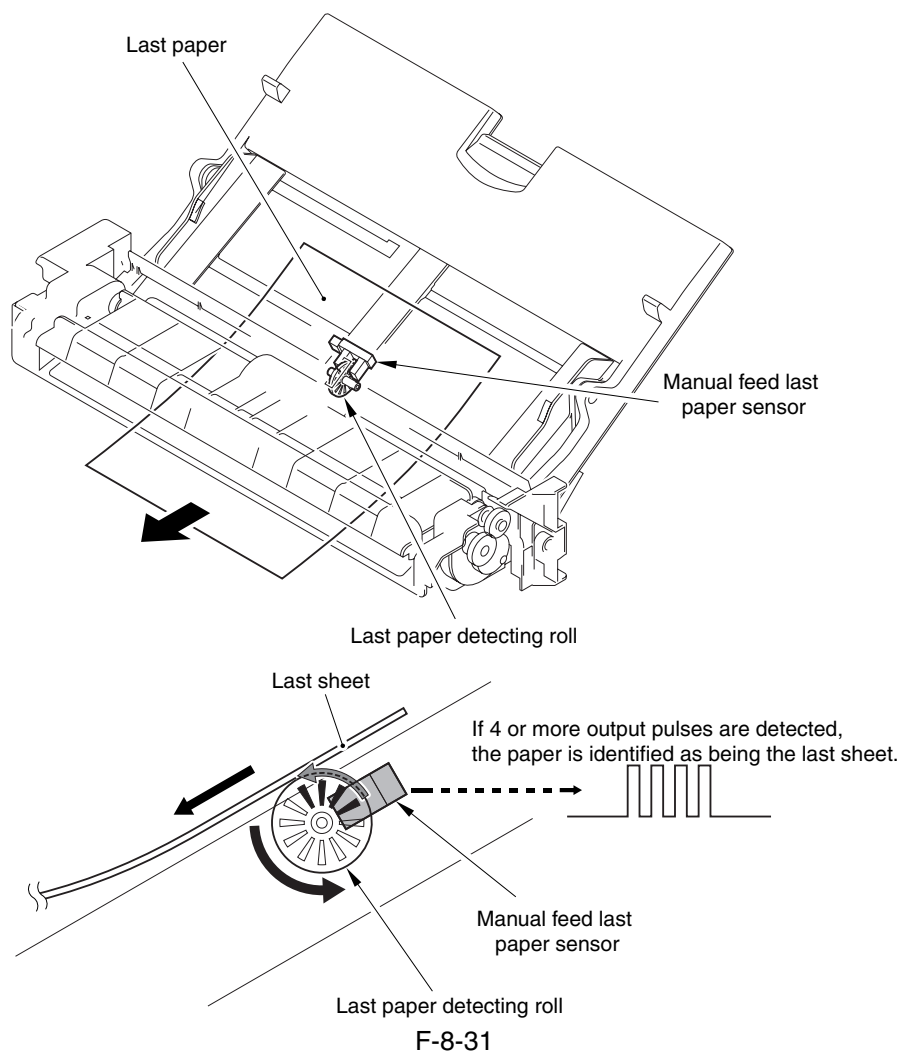


8.7 Deck

8.7.1 Overview

0003-2859

The paper inside the left/right front deck is held up by the work of the lifter so that the paper remains in contact with the pickup roller at all times. When the deck pickup motor goes on, the pickup roller starts to rotate to pick up paper. The pickup roller leaves the paper when the deck pickup solenoid (SL6, SL7) goes on. The feed roller and the separation roller serve to make sure that no more than a single sheet of paper is moved ahead to the paper path.

The pickup roller, feed roller, and separation roller are driven by the deck pickup motor (M17, M18).

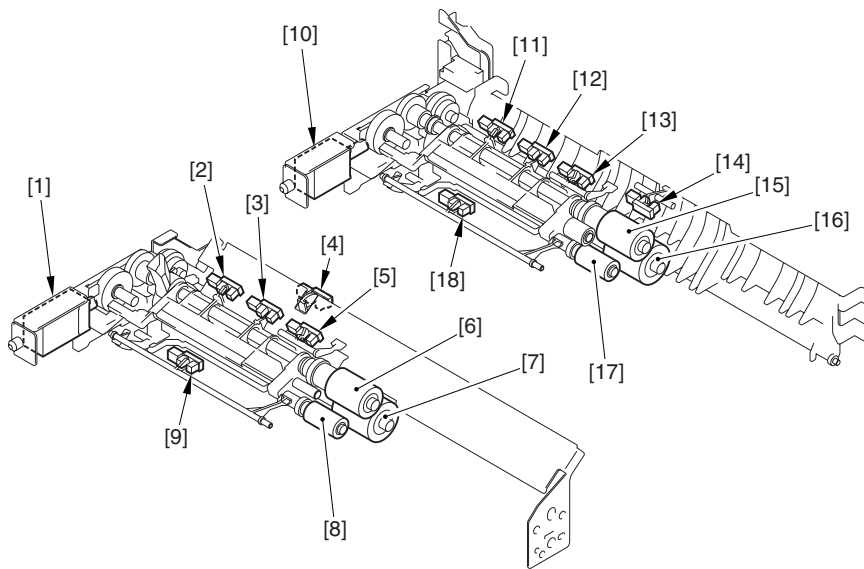

F-8-32


T-8-20

[1]	Left deck pickup solenoid	SL6	[10]	Right deck pickup solenoid	SL7
[2]	Left deck limit sensor	PS41	[11]	Right deck limit sensor	PS34
[3]	Left deck lifter sensor	PS43	[12]	Right deck lifter sensor	PS36
[4]	Left deck stationary sensor	PS47	[13]	Vertical path 1 sensor	PS60
[5]	Left deck pickup sensor	PS40	[14]	Right deck pickup sensor	PS33
[6]	Left deck feed roller		[15]	Right deck feed roller	
[7]	Left deck separation roller		[16]	Right deck separation roller	
[8]	Left deck pickup roller		[17]	Right deck pickup roller	
[9]	Left deck paper sensor	PS42	[18]	Right deck paper sensor	PS35

8.7.2 Basic Sequence

0005-4712


<Right Deck, A4, plain, 2 sheets continuous, secondary transfer speed at normal, face-up delivery>

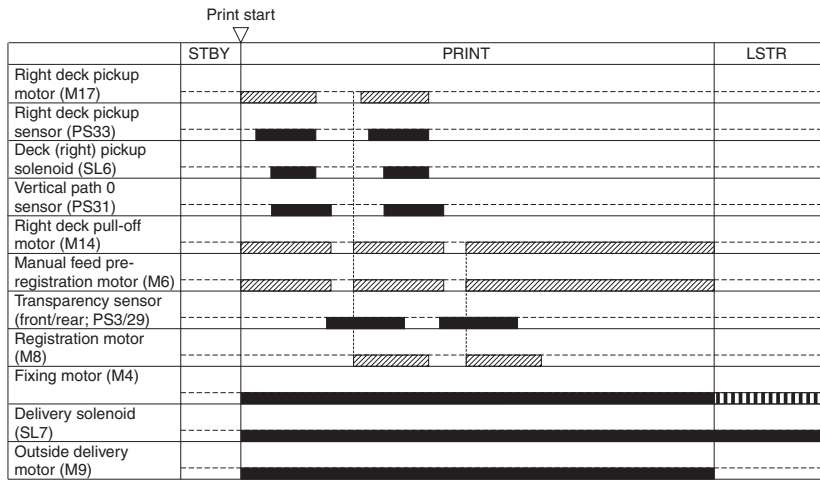

▨ : acceleration control used.
 ▩ : rotates at 1/3 speed (92 mm/sec).

F-8-33

<Right Deck, A4, plain, 2 sheets continuous, secondary transfer speed at 2/3, face-up delivery>

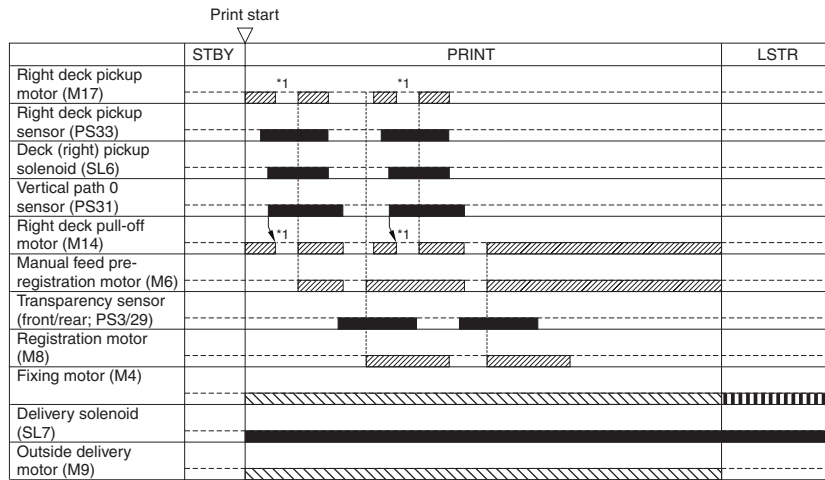

▨ : acceleration control used.
 ▨ : 2/3 rotates at 2/3 speed (184 mm/sec).
 ▩ : rotates at 1/3 speed (92 mm/sec).
 *1 : pre-registration stop.

F-8-34

8.7.3 Identifying the Size of Paper

0003-2867

The left/right front deck is not equipped with a mechanism used to identify the size of paper, and its configuration is switched in service mode. The left and right front decks may be switched to A4, B5, or LTR as follows:

- (1) Change the position of the paper size guide plates of the deck.
- (2) Register the new paper size in service mode.

Service Mode:

COPIER>OPTION>CST>P-SZ-C1

Right deck paper size selection

setting:

0: A4 (default); 1: B5, 2: LTR

COPIER>OPTION>CST-SZ-C2

Left deck paper size selection

setting:

0: A4 (default); 1: B5, 2: LTR


8.7.4 Checking the Level of Remaining Paper

0003-2869

The level of paper remaining in the left/right front deck is checked using the following sensors:

T-8-21

Sensor	Right deck	Left deck
Paper level sensor A	PS37	PS44
Paper level sensor B	PS38	PS45
Paper sensor	PS35	SP42

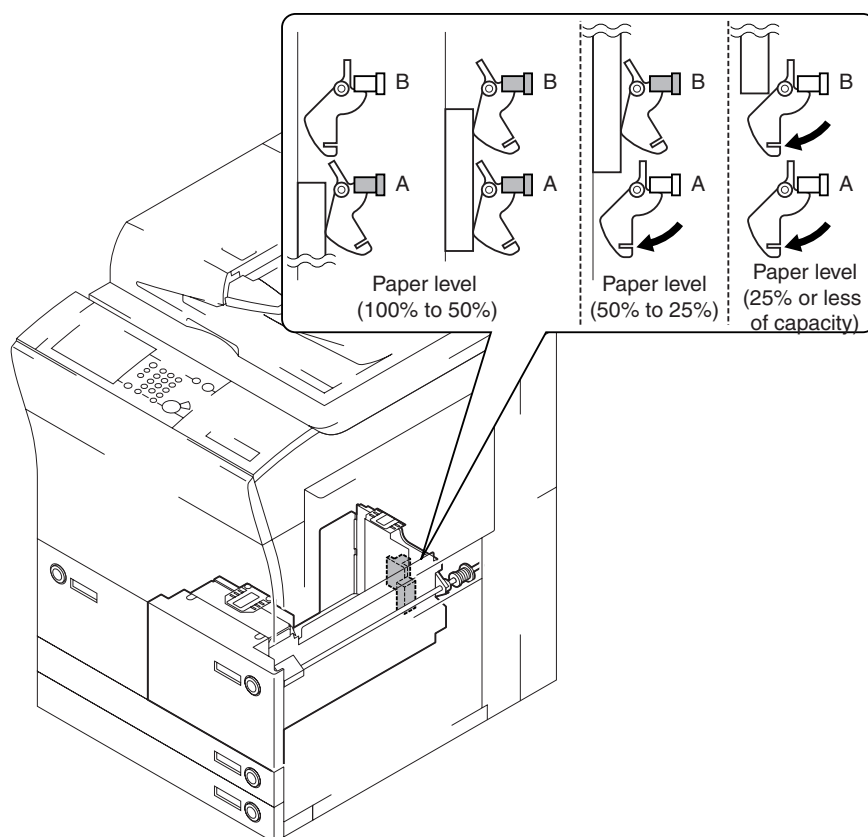

F-8-35

T-8-22

Paper level sensor A	Paper level sensor B	Paper sensor	Level of paper	Indication on control panel
ON	ON	OFF	from 100% to about 50% of capacity	
OFF	ON	OFF	from about 50% to about 25% of capacity	
OFF	OFF	OFF	about 25% or less of capacity	
--	--	ON	no paper	

8.8 Registration Unit

8.8.1 Overview


0003-2870

The registration roller is driven by the registration motor (M8), and is turned on and off to make sure that the paper will match the image on the intermediate transfer belt.

The registration assembly is equipped with 3 sensors: registration sensor (PS9), transparency sensor (front; PS3), and transparency sensor (rear; PS29).

When a transparency is used, the registration sensor (PS9) detects it. When the medium is not a transparency, the transparency sensor (front; PS3) and the transparency sensor (rear; PS29) detect it.

The transparency sensor (front) and the transparency sensor (rear) serve to find out whether the arriving medium is a transparency or not; if a plain paper is detected when the machine is in transparency mode or if a transparency is detected when the machine is in plain paper mode, the machine will identify the condition as indicating the presence of a jam and stop its operation.

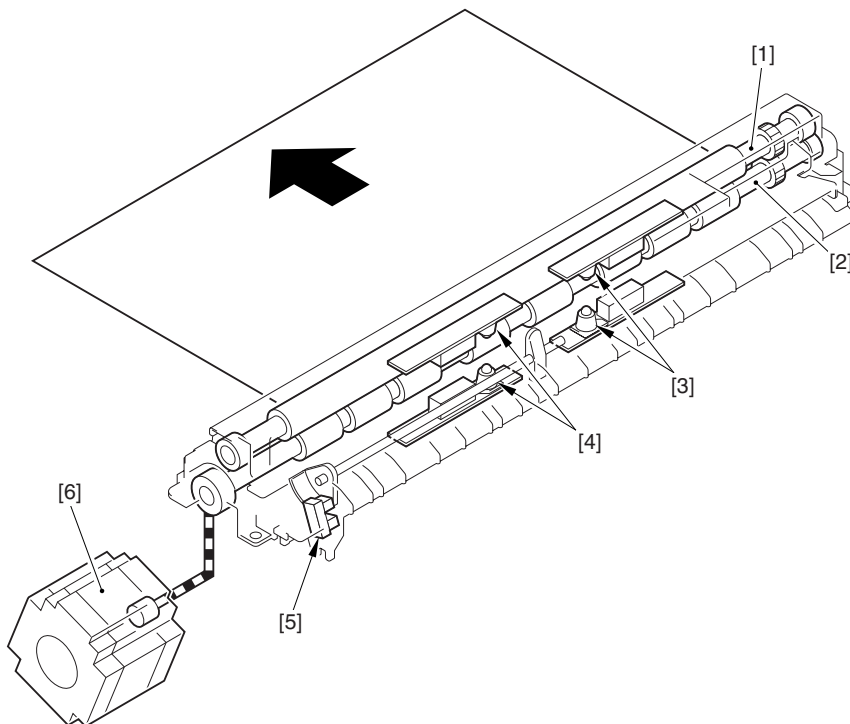

F-8-36


- [1] Registration upper roller
- [2] Registration lower roller
- [3] Transparency sensor (rear; PS29)
- [4] Transparency sensor (front; PS3)
- [5] Registration sensor
- [6] Registration motor

8.9 Duplex Feeding Unit

8.9.1 Overview

0003-2871


To move the 1st side of a double-sided print, the delivery reversal solenoid (SL5) remains off and the reversing flapper is shifted up. When the paper moves past the reversal vertical path sensor (PS15) and reaches a specific point, the duplexing reversal motor (M10) stops/rotates in reverse to move the paper to the duplexing left feeding assembly. The paper is caused to arch in the duplexing left roller assembly for removal of any skew, all of which takes place at the same time as horizontal registration detection. Thereafter, the duplexing left motor (M11) goes on to move the paper to the re-pickup standby position, which starts at specific timing of operation to move the paper to the duplexing right feeding assembly and then to the registration roller assembly. The paper is never stopped in the duplexing right feeding assembly.

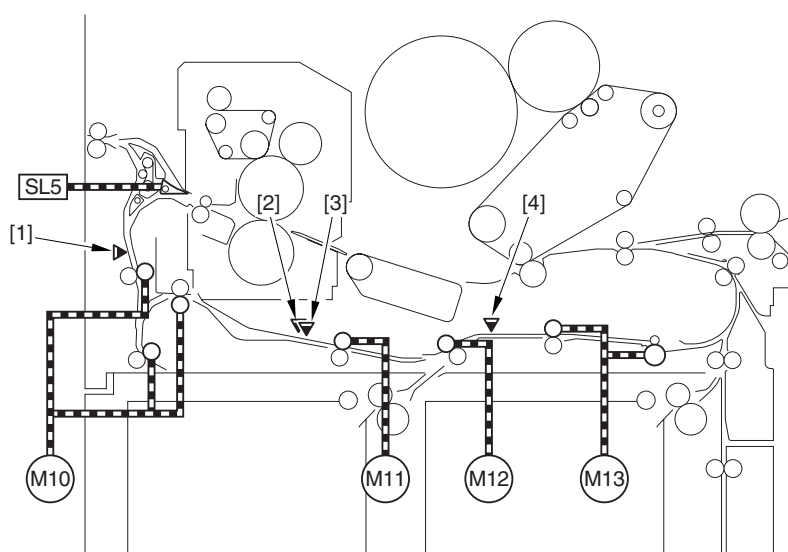

F-8-37


- [1] Reversal vertical path sensor (PS15)
- [2] Horizontal registration sensor (PS24)
- [3] Duplexing left sensor (PS17)
- [4] Duplexing confluence sensor (PS18)

1) With the delivery reversing solenoid (SL5) remaining off, the reversing flapper is in up position so that the paper moves to the reversal vertical path assembly.

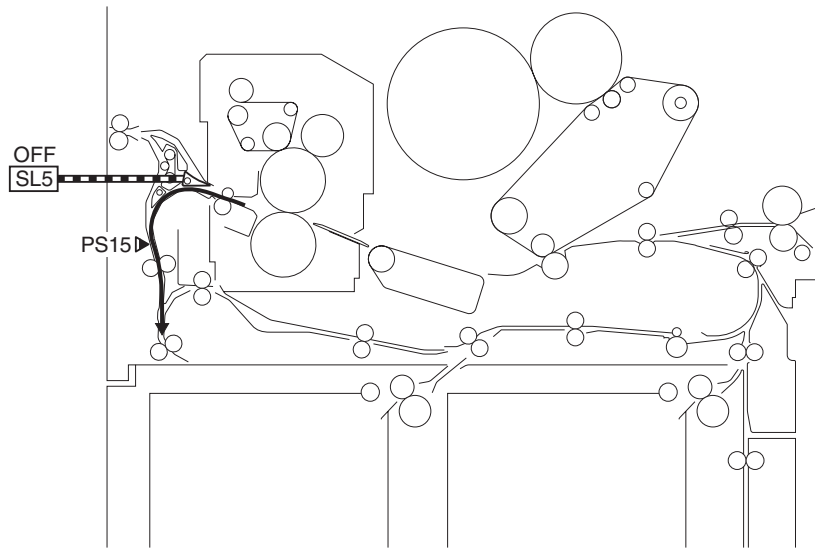


F-8-38

2) When the trailing edge of paper reaches a point about 20 mm from the reversing 2 roller, the duplexing reversal motor (M10) stops/rotates in reverse to move the paper to the duplexing left feeding assembly.

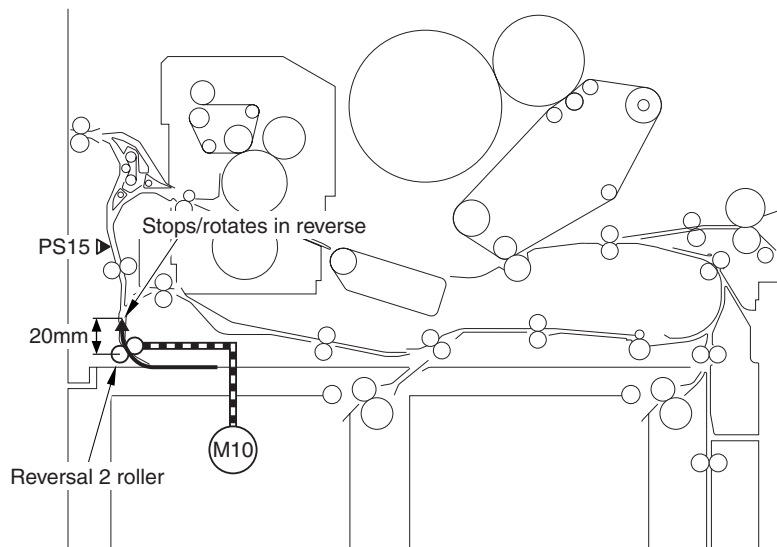


F-8-39

- 3) The paper moves to the duplexing left feeding assembly, and the horizontal registration sensor (PS24) checks the horizontal registration. The paper is also butted against the duplexing left roller so that it arches.

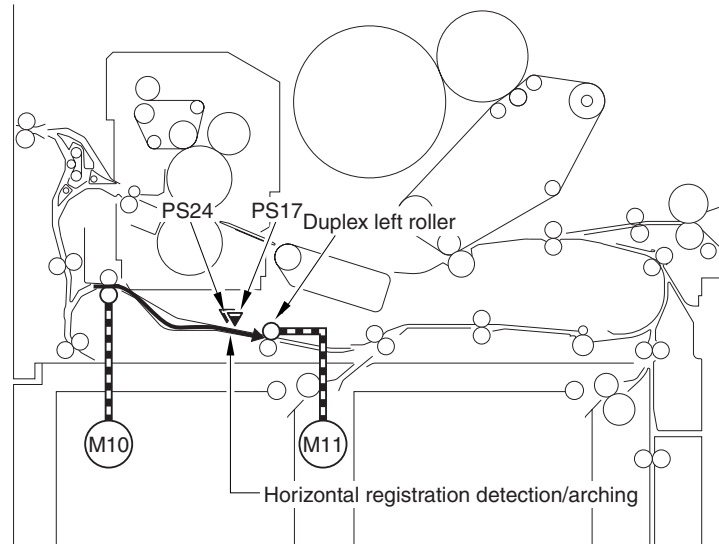


F-8-40

- 4) When the paper moves past the duplexing left roller, it stops when its leading edge reaches a point 35 mm from the duplexing left roller, remaining in wait for the next operation.

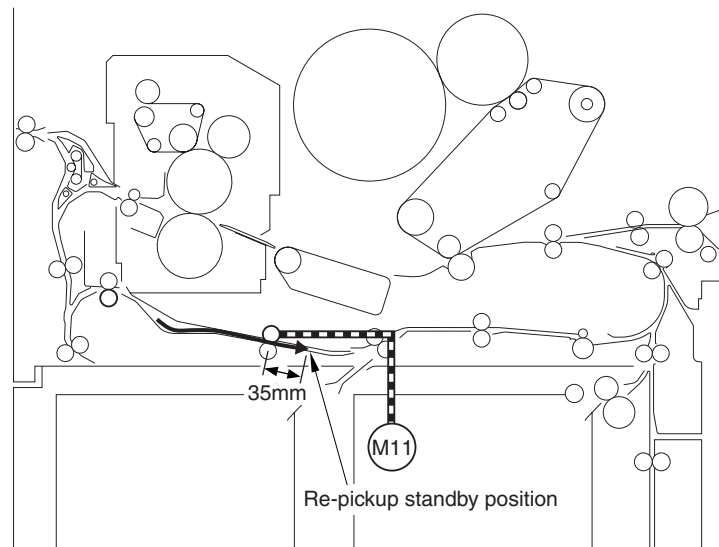

F-8-41

- 5) A specific period of time thereafter, the duplexing left motor rotates to move the paper to the duplexing right feeding assembly and then to the registration roller assembly. Paper will never stop in the duplexing right feeding assembly.

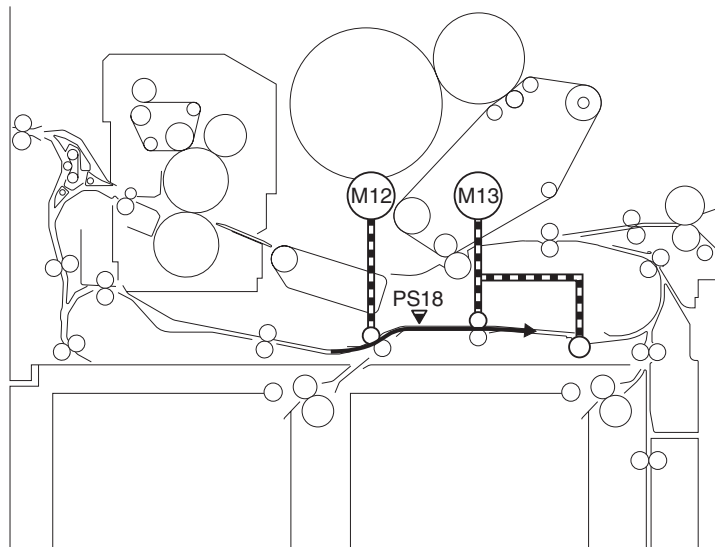

F-8-42


8.9.2 Detecting the Horizontal Registration Position

0003-2872

The machine executes a duplexing registration sensor home position search when the main power switch is turned on, front cover is opened/closed, manual feed unit is opened/closed, lower right cover is opened/closed, power save function is reset, or printing ends, causing the sensor to move to the point of 13x19 paper detection.

Inside the duplexing left feeding assembly, the paper reaches the duplexing left sensor (PS17); thereafter, the horizontal registration motor (M28) goes on, and the horizontal registration sensor (PS24) starts a search for the edge of the paper.

The search start position is set to a point of the paper edge (in the cassette of A4, 165 mm from the middle of the unit) with reference to the distance of the slide guides on the manual feed tray and the cassette/deck size at the start of copying operation.

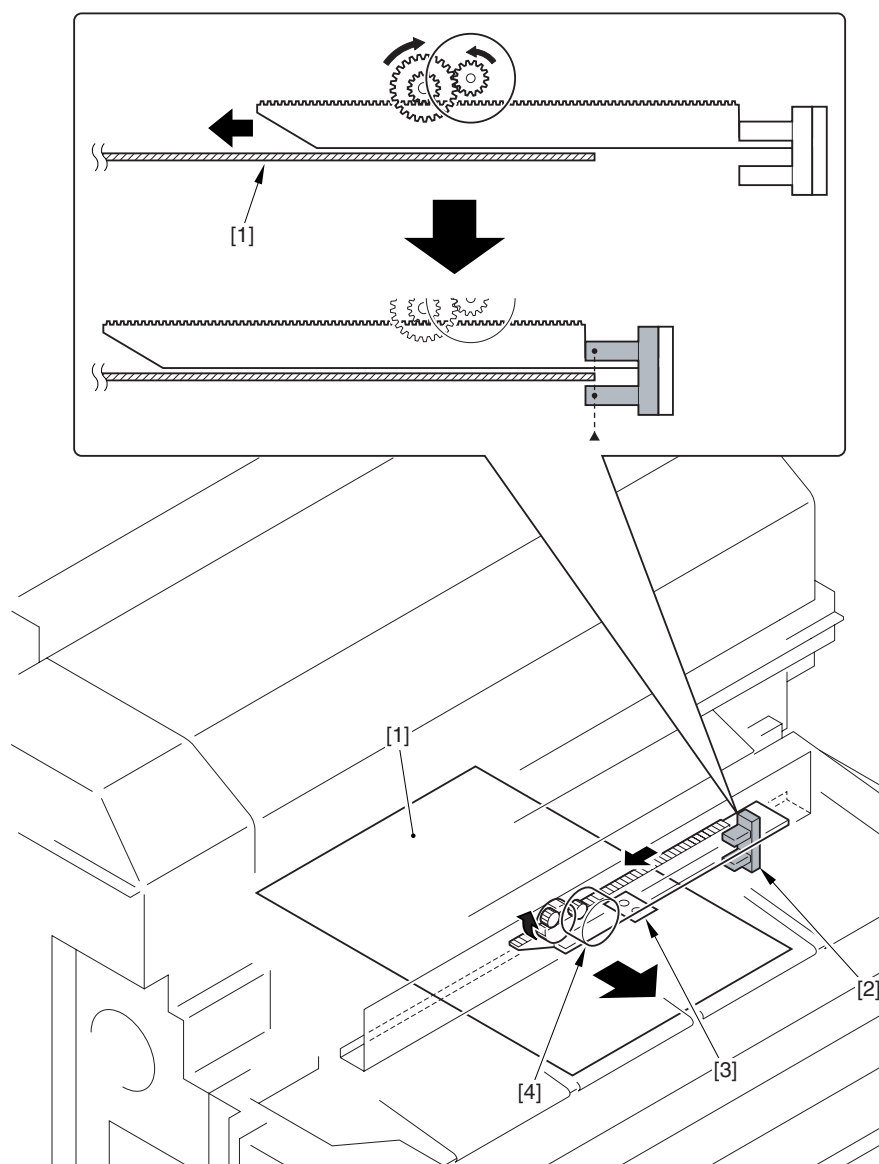

F-8-43


- [1] Paper
- [2] Horizontal registration sensor (PS24)
- [3] Sensor plate
- [4] Horizontal registration motor (M28)

a. Horizontal Registration Search

1) After a home position search*1, the horizontal registration sensor (PS24) moves to the 13x19 paper detection position *2.


*1. Where the horizontal registration sensor detects the sensor plate (i.e., 61.5 mm toward the rear from the middle of the feeding assembly).

*2. 165 mm toward the rear from the middle of the feeding assembly.

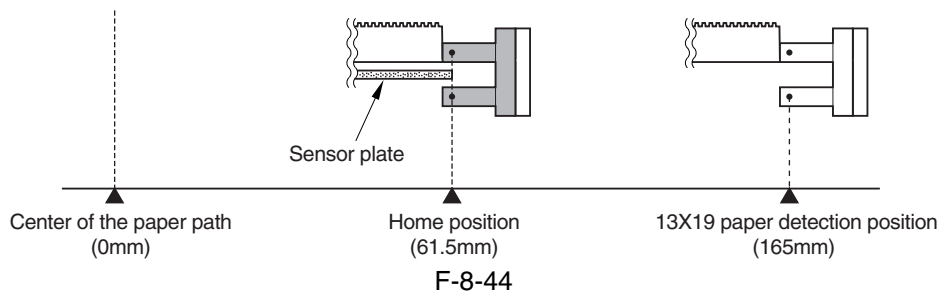


2) The horizontal registration sensor checks the presence/absence of paper.

2-1) If the presence of paper is identified in step 1., the horizontal registration sensor is moved away from the paper until it detects the absence of paper; after it has been moved 2 mm from the paper, it is then moved closer to the paper once again, identifying the point at which paper is detected as the edge of paper.

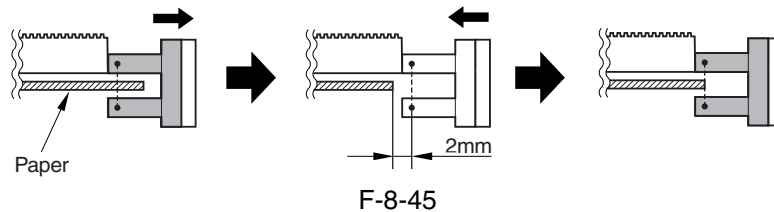


2-2) If the absence of paper is identified, the horizontal registration sensor is moved away by 2 mm from the paper and then back closer to the paper, identifying the point at which paper is detected as the edge of the paper.

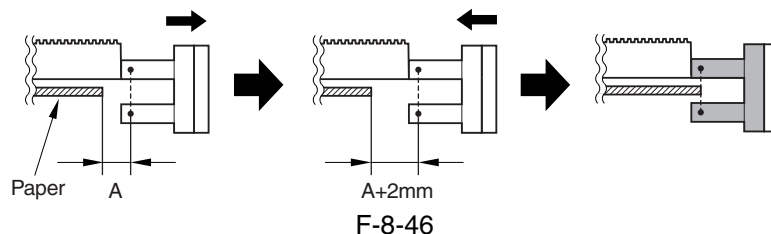


3) The machine counts the number of motor pulses generated when the horizontal registration sensor is moved in step 2-1 or 2-2 to find out the displacement of paper, thus determining the image write start position (for each single pulse, the sensor moves over a length of 0.157 mm).

8.9.3 A5, 5 Sheets in Circulation


0003-2875

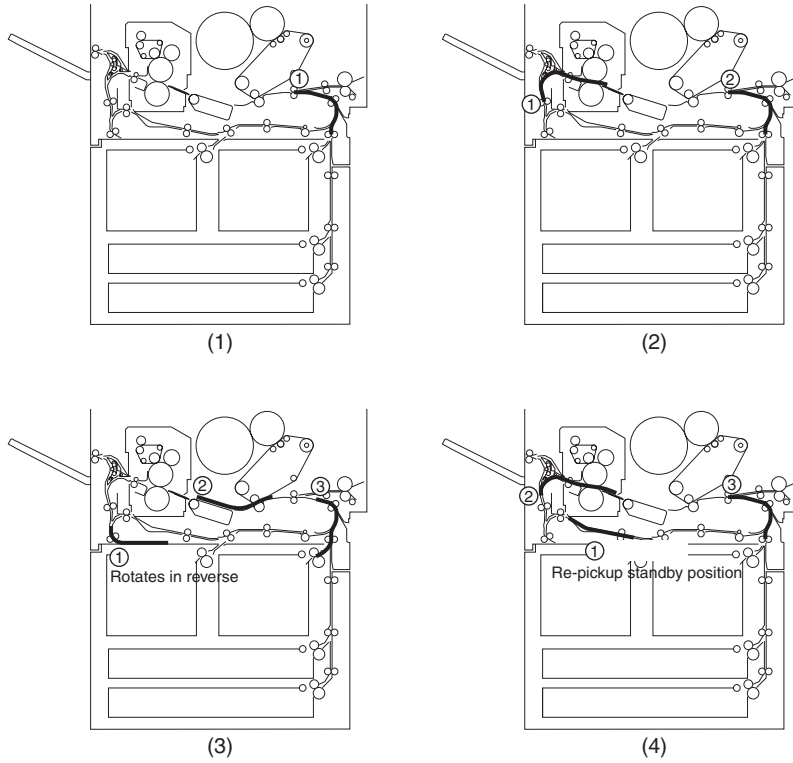

F-8-47

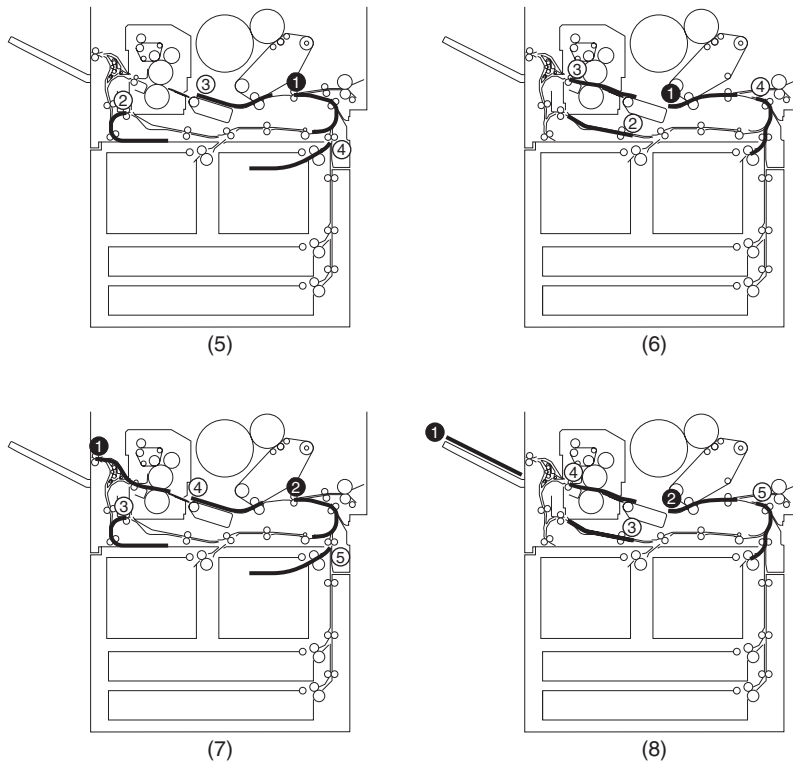


F-8-48

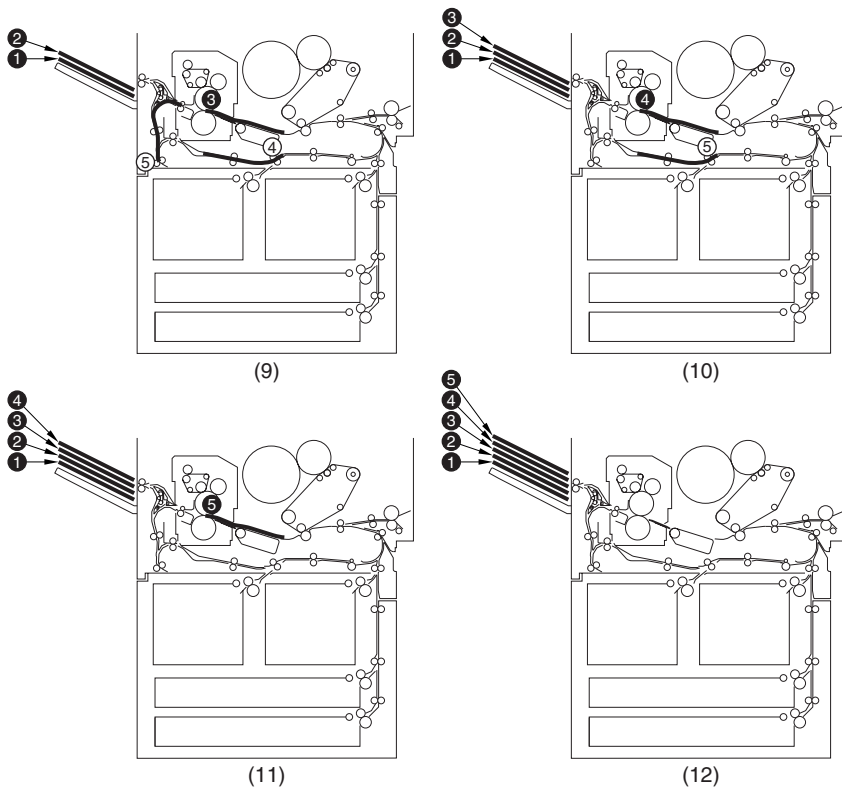


F-8-49

8.9.4 A3, 3 Sheets in Circulation


0003-2877

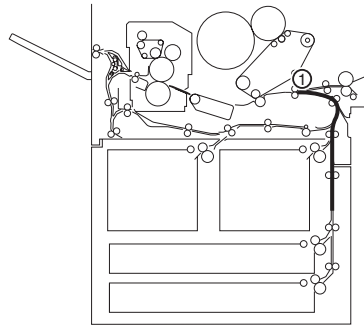


(1)

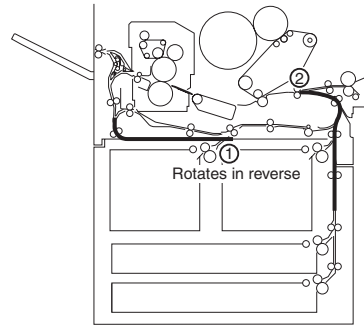

(2)


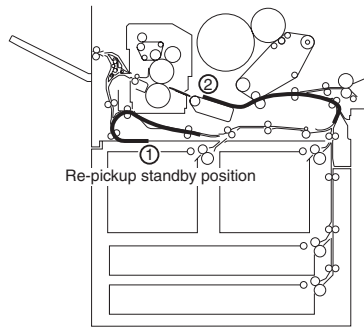


(3)

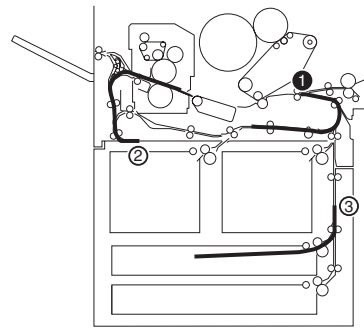

(4)

F-8-50

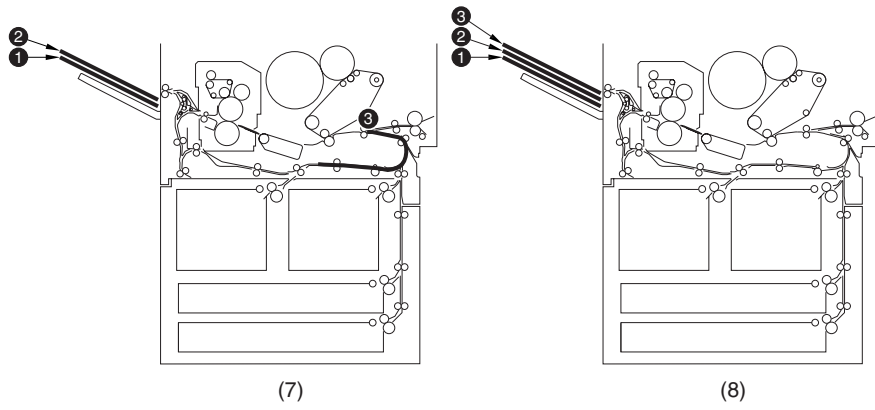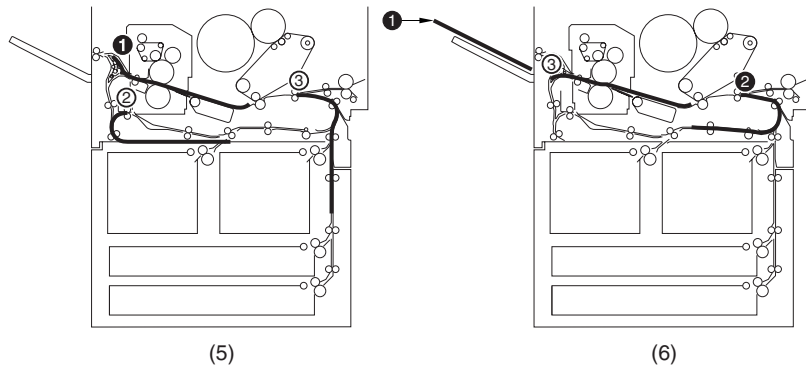

F-8-51

8.10 Delivery

8.10.1 Overview

0003-2878

The machine discharges paper either face-up or face-down:


T-8-23

Mode of delivery	Mode of operation
Face-up	<ul style="list-style-type: none"> -When making single print of a single original -When making multiple prints of a single original (however, face-down if a finisher is installed) -If heavy paper 3 is selected -If the source of paper is from the manual feed tray and the paper is not plain paper (default size)
Face-down	<p>When the selected mode of operation is other than the above; however, face-down delivery may be selected for the above modes using the following service mode item: COPIER>OPERATION>BODY>FDW-DLV (valid only if no finisher is installed).</p>

8.10.2 Face-Up Delivery

0004-4321

When the delivery solenoid (SL5) goes on, the flapper shifts down to move the paper to the delivery assembly.

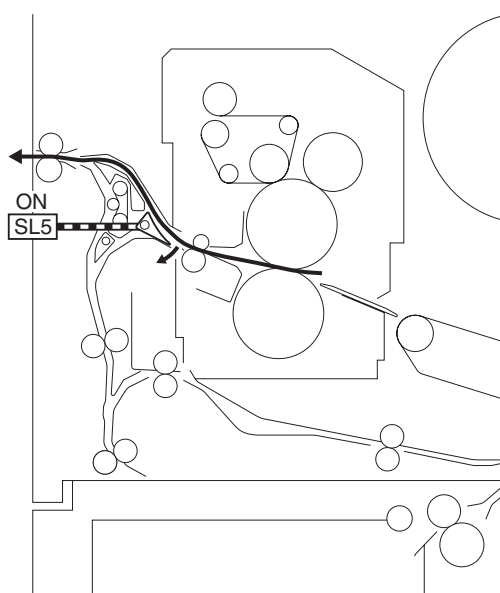


F-8-52

8.10.3 Face-Down Delivery

0004-4320


The machine operates as follows when in face-down delivery mode:

- 1) The delivery solenoid (SL5) is off, and the paper is moved in the direction of the duplexing feeding assembly.

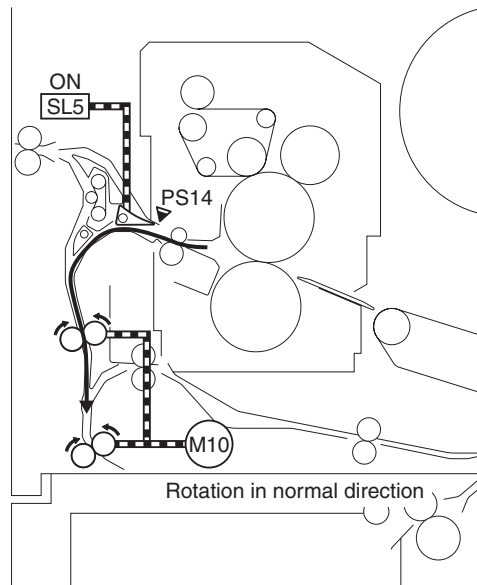


F-8-53

- 2) A specific period of time after the reversal sensor (PS14) goes on, the duplexing reversal motor (M10) rotates in normal direction; it then stops when the trailing edge of paper reaches the reversal stop position (15 mm farther down the reversal confluence point).

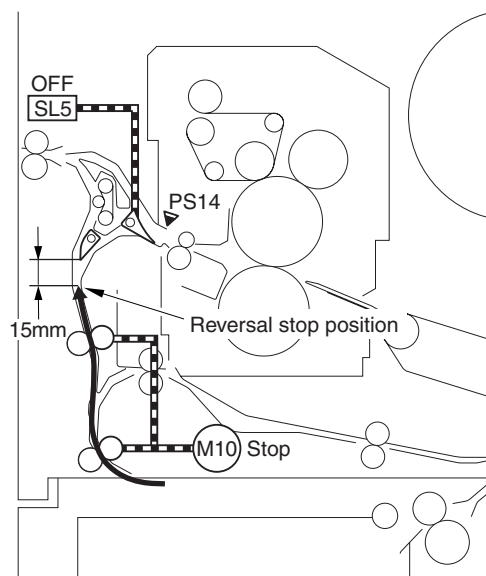


F-8-54

- 3) In 100 msec, the duplexing reversal motor (M10) rotates in reverse to move the paper with the trailing edge first in the direction of delivery.

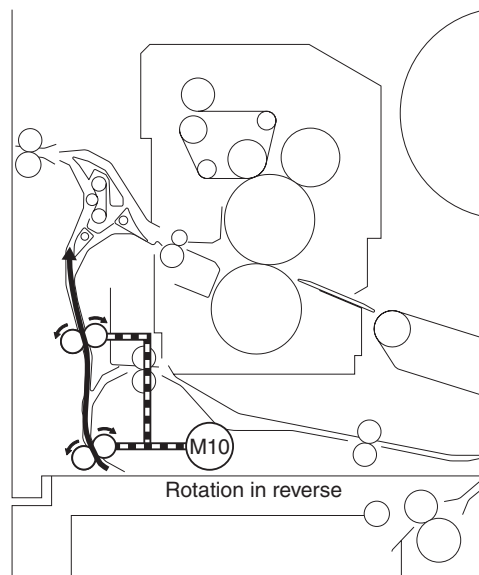

F-8-55


- 4) When the leading edge of preceding paper moves past the curl removing roller by 20 mm, the reversal shifting solenoid (SL3) goes on to move away the reversal 1 roller in preparation for the arrival of the following paper. The duplexing reversal motor (M10) stops after the trailing edge of the paper has moved past the reversal 2 roller.

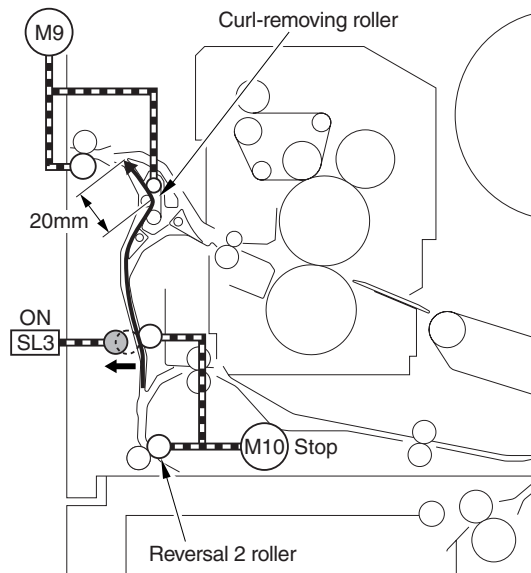

F-8-56


5) The length of overlap between the trailing edge of the preceding paper and the leading edge of the following paper is 42 mm at maximum.

*1. The length of overlap between the trailing edge of the preceding paper and the leading edge of the following paper is 42 mm at maximum.

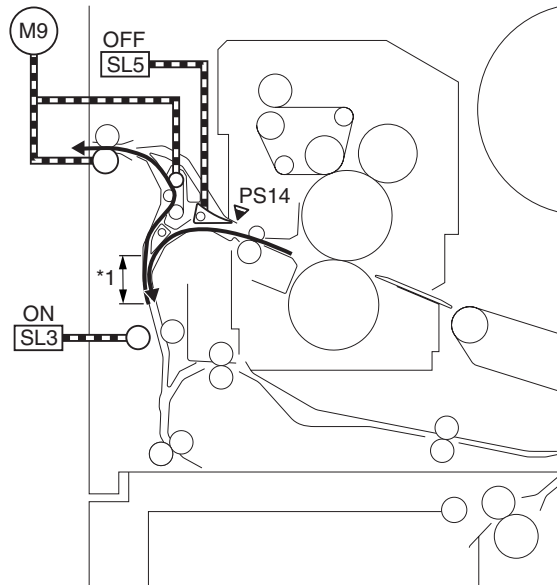

F-8-57

6) A specific period of time after the reversal sensor (PS14) goes on in response to the arrival of the following paper, the duplexing reversal motor (M10) starts to move in normal direction. When the leading edge of the following paper moves past the reversal 1 roller by about 20 mm, the reversal shifting solenoid (SL3) goes off so that the following paper is moved to the reversal stop position. Then, the machine repeats step 3) and thereafter.

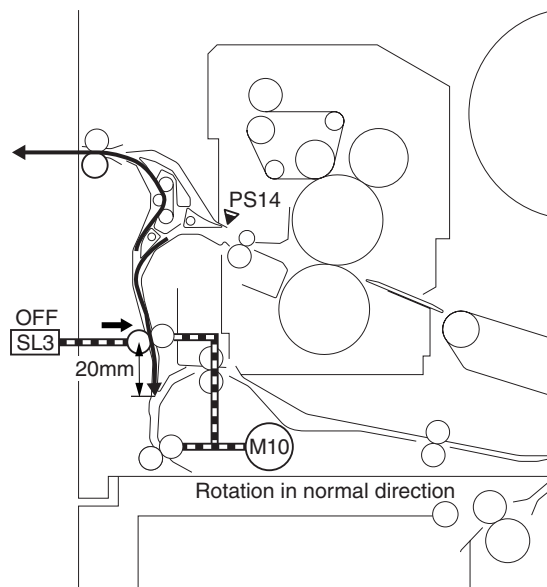

F-8-58


8.11 Parts Replacement Procedure

8.11.1 Cassette Pickup Unit

8.11.1.1 Removing the Cassette Pickup Unit


0002-9785

- 1) Slide out the cassette 3/4.
- 2) Remove the lower rear right cover.
- 3) Open the lower right cover.
- 4) Remove the 2 screws [1], and disconnect the connector cover [2].

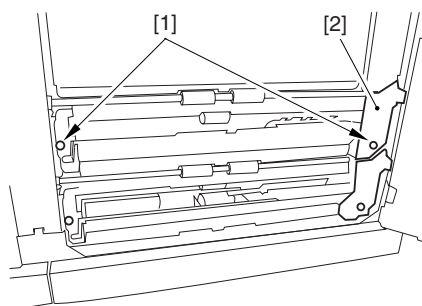

F-8-59

- 5) Disconnect the connector [1], and detach the pickup unit (cassette 3/4) [2].

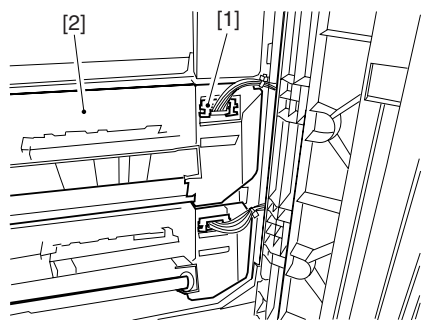


F-8-60

8.11.2 Cassette Pickup Motor

8.11.2.1 Removing the Right Cover (lower rear)

0003-6626

- 1) Remove the 2 screws [1], and detach the right cover (lower rear) [2].

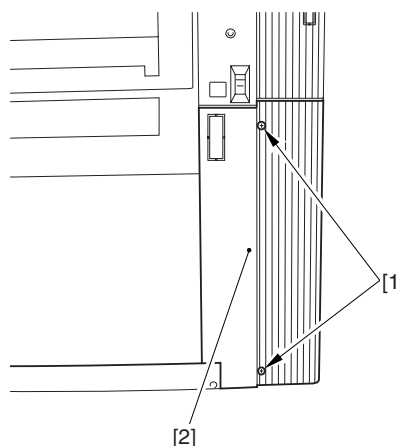


F-8-61

8.11.2.2 Removing the Rear Cover (lower)

0003-6627

- 1) Remove the 7 screws [1], and detach the rear cover (lower) [2].

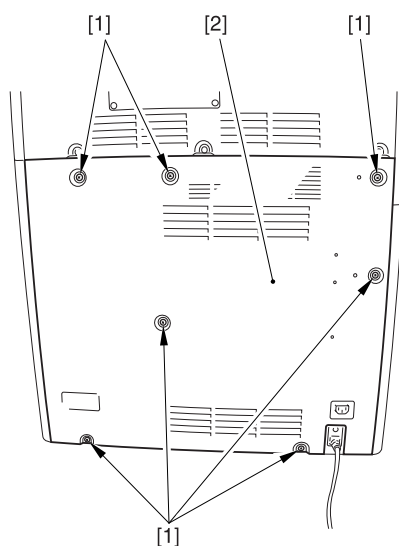


F-8-62

8.11.2.3 Removing the Waste Toner Bottle Base


0003-6628

1) Remove the waste toner bottle [1].

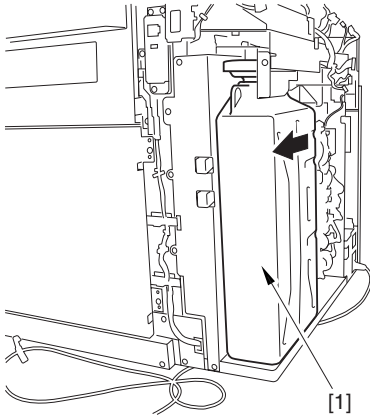

F-8-63

2) Remove the 7 screws [1], and lift the waste toner bottle base [2] to detach it in the direction of the arrow.

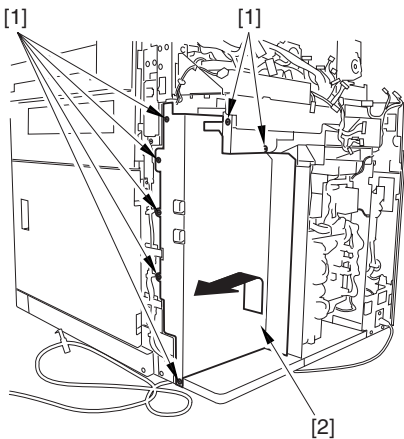


F-8-64

8.11.2.4 Removing the Cassette Pickup Motor

0003-6634

1) Disconnect the connector [1], and remove the 2 screws [2]; then, detach the cassette pickup motor [3].

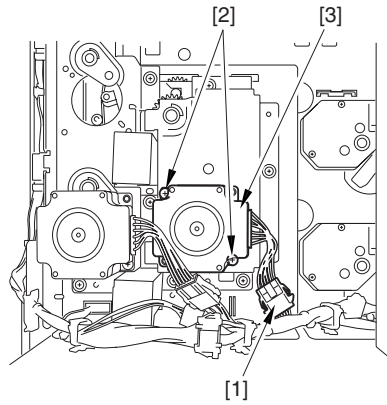


F-8-65

8.11.3 Cassette Lifter Motor

8.11.3.1 Removing the Rear Cover (lower)

0003-8332

1) Remove the 7 screws [1], and detach the rear cover (lower) [2].

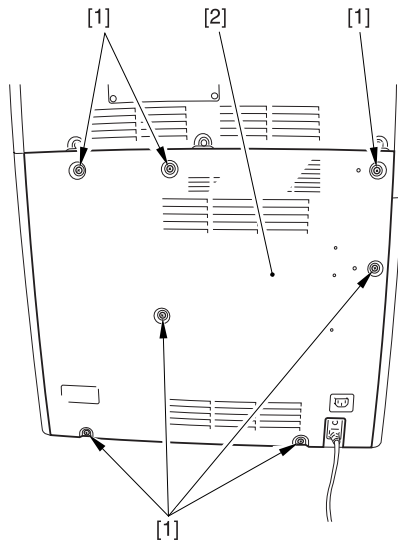


F-8-66

8.11.3.2 Removing the DC

Power Supply Unit


0003-5799

- 1) Open the 2 wire saddles [1], and free the harness [2].

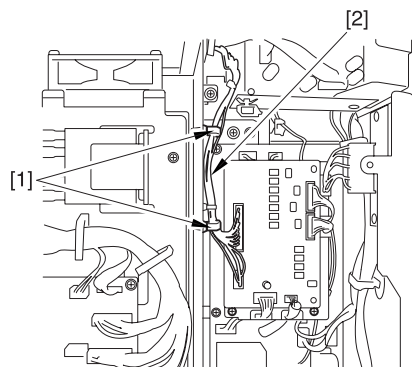

F-8-67

- 2) Disconnect the 16 connectors [1], and open the 3 wire saddles [2] to free the harness [3].
- 3) Remove the 4 screws [4], and detach the DC power supply unit [5].

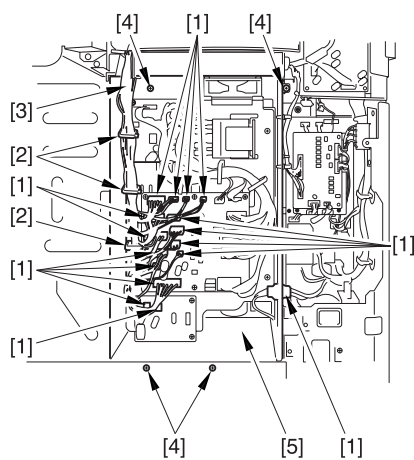


F-8-68

8.11.3.3 Removing the Cassette

Lifter Motor

0003-5800

- 1) Slide out the cassette 3 or 4.
- 2) Disconnect the connector [1], and remove the 3 screws [3]; then, detach the cassette lifter motor [3].

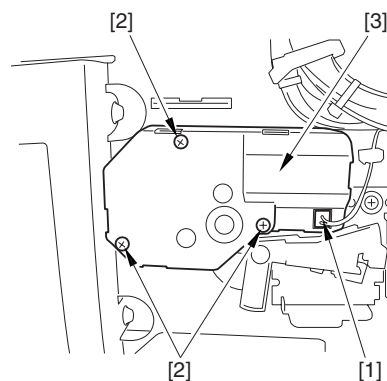

F-8-69


8.11.4 Left Deck Lifter Motor

8.11.4.1 Removing the Rear

Cover (lower)

0003-6675

- 1) Remove the 7 screws [1], and detach the rear cover (lower) [2].

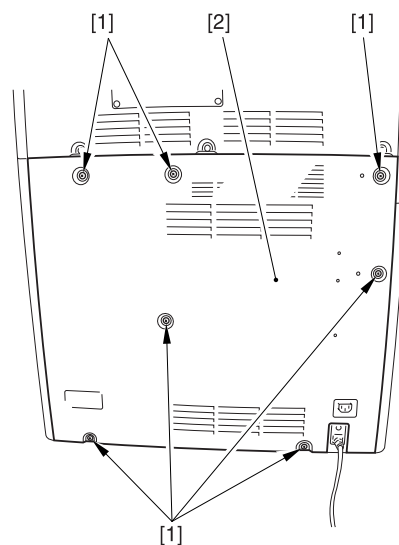


F-8-70

8.11.4.2 Removing the DC Power Supply Unit


0003-6676

- 1) Open the 2 wire saddles [1], and free the harness [2].

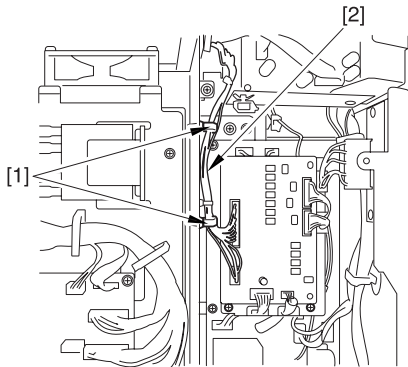

F-8-71

- 2) Disconnect the 16 connectors [1], and open the 3 wire saddles [2] to free the harness [3].
- 3) Remove the 4 screws [4], and detach the DC power supply unit [5].

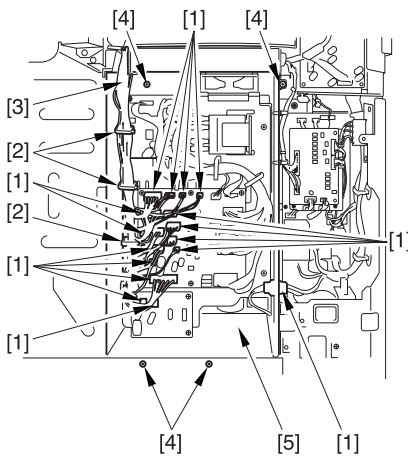


F-8-72

8.11.4.3 Removing the Left Deck Lifter Motor

0003-6677

- 1) Disconnect the connector [1], and remove the 3 screws [2]; then, detach the left deck lift motor [3].

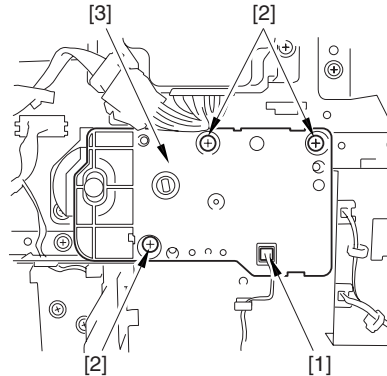

F-8-73


8.11.5 Right Deck Lifter Motor

8.11.5.1 Removing the Right

Cover (lower rear)

0003-6655

- 1) Remove the 2 screws [1], and detach the right cover (lower rear) [2].

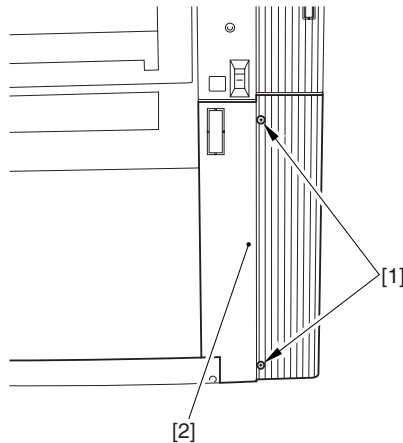


F-8-74

8.11.5.2 Removing the Rear

Cover (lower)

0003-6656

- 1) Remove the 7 screws [1], and detach the rear cover (lower) [2].

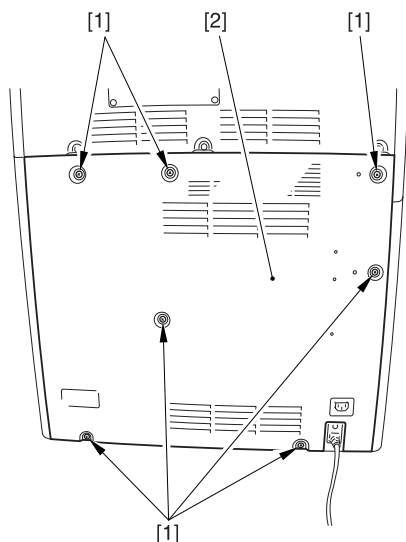


F-8-75

8.11.5.3 Removing the Waste

Toner Bottle Base


0003-6657

- 1) Remove the waste toner bottle [1].

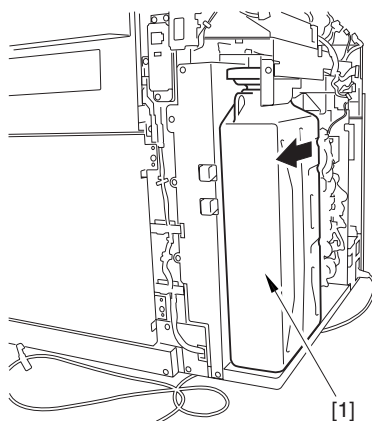

F-8-76

- 2) Remove the 7 screws [1], and lift the waste toner bottle base [2] to detach it in the direction of the arrow.

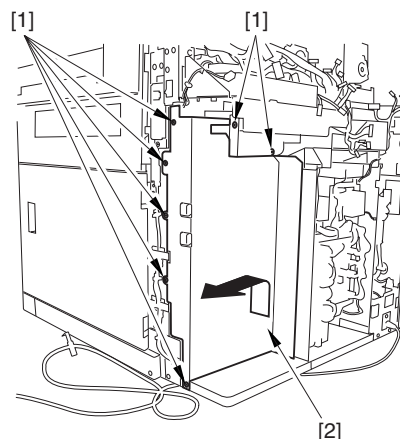


F-8-77

8.11.5.4 Removing the Right

Deck Lifter Motor

0003-6659

- 1) Disconnect the connector [1], and remove the 3 screws [2]; then, detach the right deck lifter motor [3].

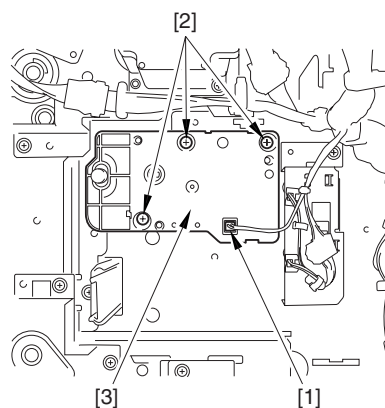


F-8-78

8.11.6 Left Deck Pickup Motor

8.11.6.1 Removing the Rear

Cover (lower) 0003-6665

1) Remove the 7 screws [1], and detach the rear cover (lower) [2].

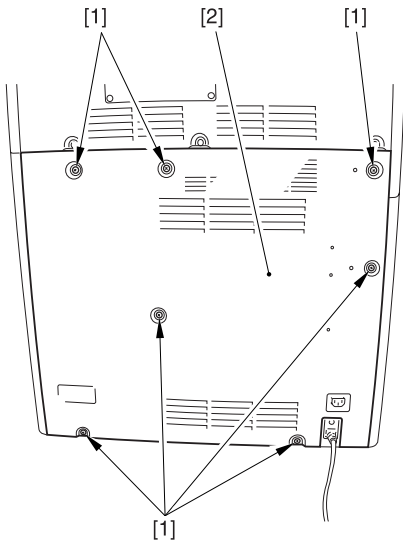


F-8-79

8.11.6.2 Removing the DC Power Supply Unit

0003-6667


1) Open the 2 wire saddles [1], and free the harness [2].

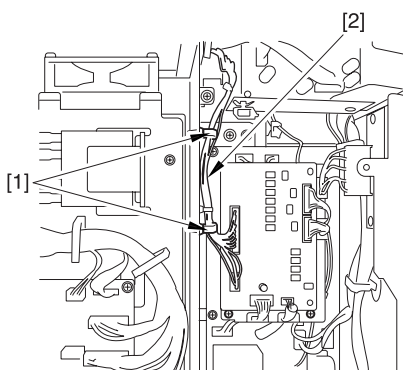

F-8-80

2) Disconnect the 16 connectors [1], and open the 3 wire saddles [2] to free the harness [3].

3) Remove the 4 screws [4], and detach the DC power supply unit [5].

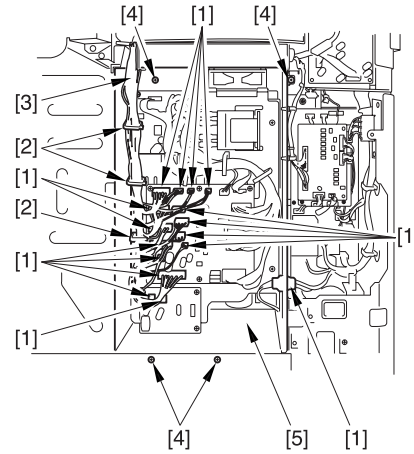


F-8-81

8.11.6.3 Removing the Left Deck Pickup Motor

0003-6668

1) Disconnect the connector [1], and remove the 2 screws [2]; then, detach the left deck pickup motor [3].

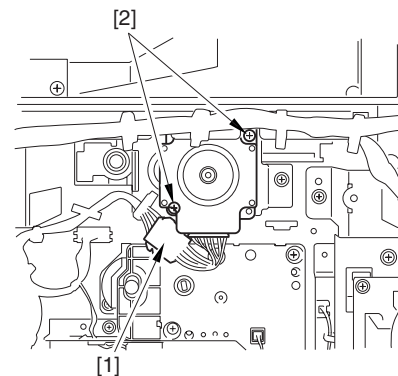

F-8-82


8.11.7 Right Deck Pickup Motor

8.11.7.1 Removing the Right

Cover (lower rear)

0003-6647

- 1) Remove the 2 screws [1], and detach the right cover (lower rear) [2].

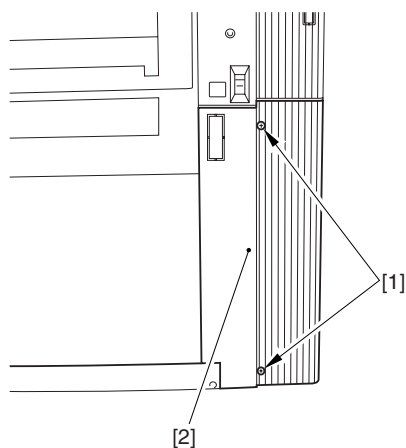


F-8-83

8.11.7.2 Removing the Rear

Cover (lower)

0003-6648

- 1) Remove the 7 screws [1], and detach the rear cover (lower) [2].

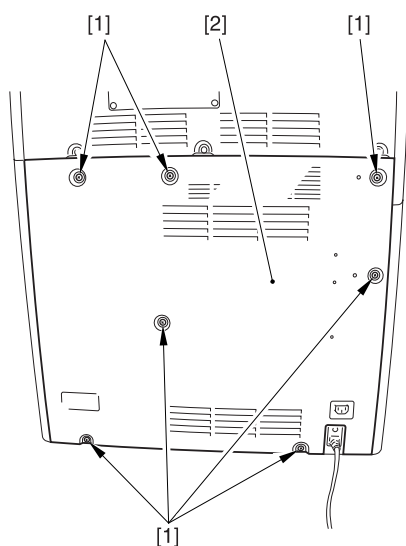


F-8-84

8.11.7.3 Removing the Waste Toner Bottle Base


0003-6649

- 1) Remove the waste toner bottle [1].

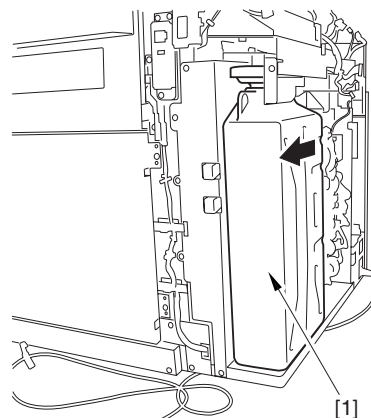

F-8-85

- 2) Remove the 7 screws [1], and lift the waste toner bottle base [2] to detach it in the direction of the arrow.

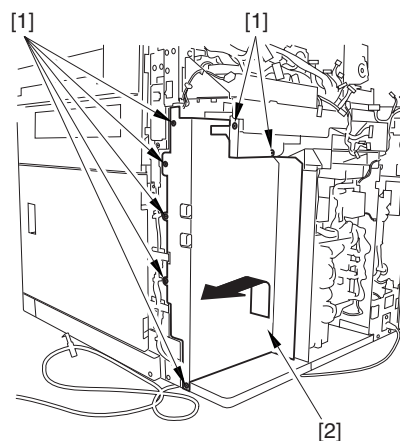


F-8-86

8.11.7.4 Removing the Right

Deck Pickup Motor

0003-6650

Disconnect the connector [1], and remove the 2 screws [2]; then, detach the right deck pickup motor [3].

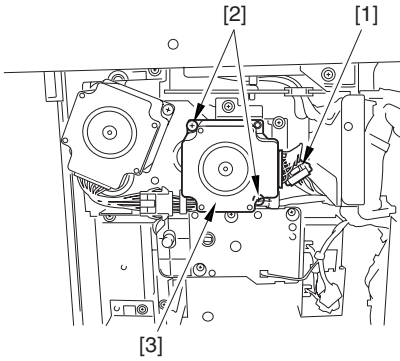

F-8-87


8.11.8 Vertical Path Motor

8.11.8.1 Removing the Right

Cover (lower rear)

0004-1074

1) Remove the 2 screws [1], and detach the right cover (lower rear) [2].

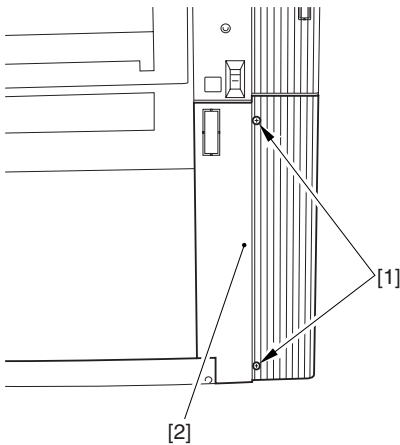


F-8-88

8.11.8.2 Removing the Rear

Cover (lower)

0004-1076

1) Remove the 7 screws [1], and detach the rear cover (lower) [2].

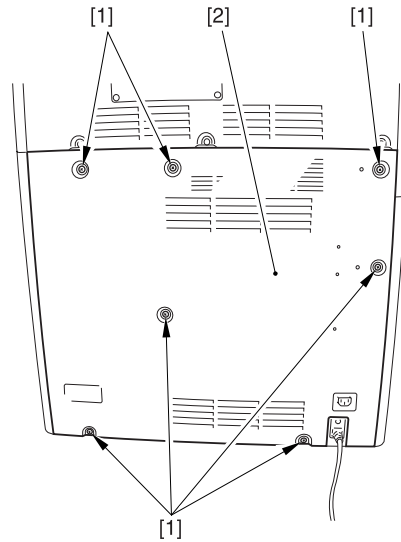


F-8-89

8.11.8.3 Removing the Waste

Toner Bottle Base


0004-1073

1) Remove the waste toner bottle [1].

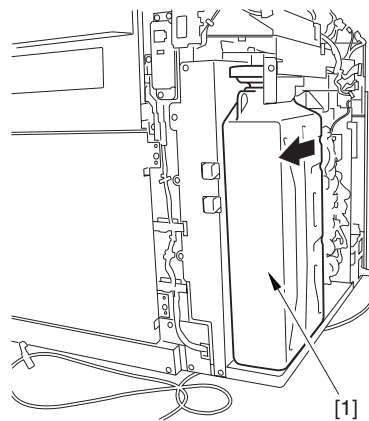

F-8-90

2) Remove the 7 screws [1], and lift the waste toner bottle base [2] to detach it in the direction of the arrow.

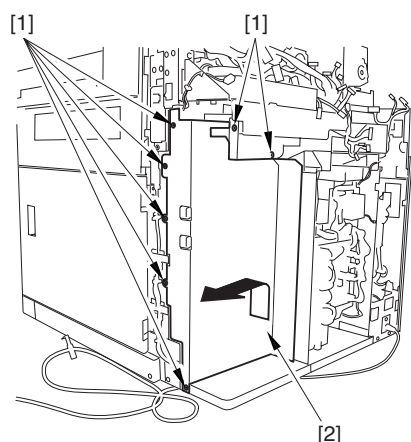


F-8-91

8.11.8.4 Removing the Vertical

Path Motor

0004-1072

1) Disconnect the connector [1], and remove the 2 screws [2]; then, detach the vertical path motor [3].

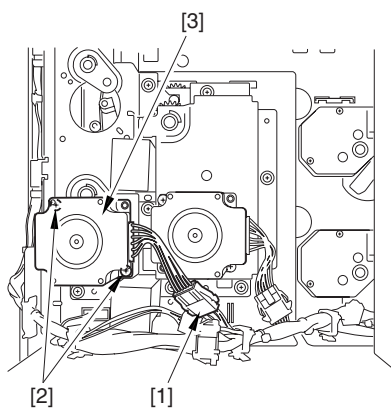

F-8-92


8.11.9 Right Deck Pull-Off Motor

8.11.9.1 Removing the Right

Cover (lower rear)

0004-1078

1) Remove the 2 screws [1], and detach the right cover (lower rear) [2].

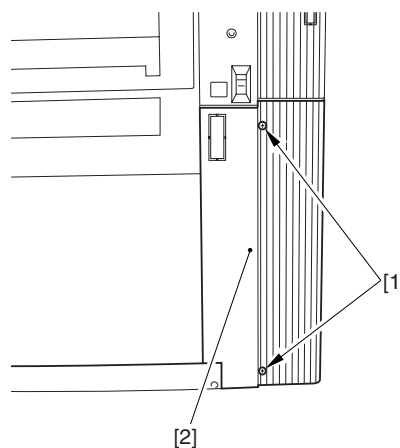


F-8-93

8.11.9.2 Removing the Rear

Cover (lower)

0004-1079

1) Remove the 7 screws [1], and detach the rear cover (lower) [2].

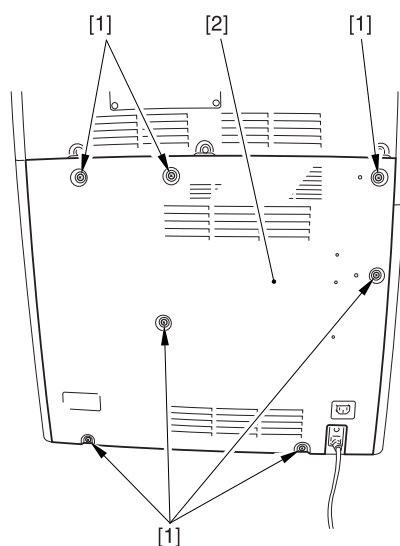


F-8-94

8.11.9.3 Removing the Waste Toner Base


0004-1077

1) Remove the waste toner bottle [1].

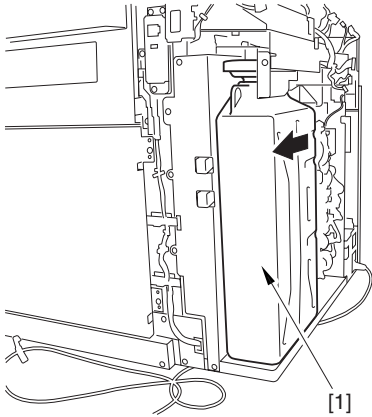

F-8-95

2) Remove the 7 screws [1], and lift the waste toner bottle base [2] to detach it in the direction of the arrow.

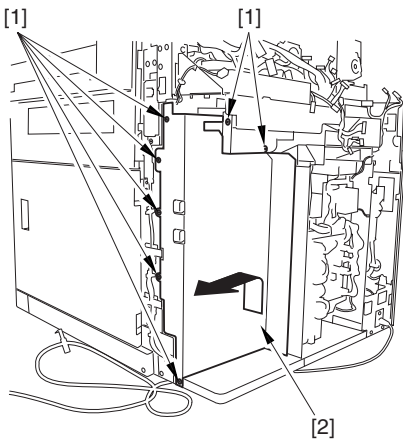


F-8-96

8.11.9.4 Removing Right Deck Pull-Off Motor

0004-1080

1) Disconnect the connector [1], and remove the 2 screws [2]; then, detach the right deck pull-off motor [3].

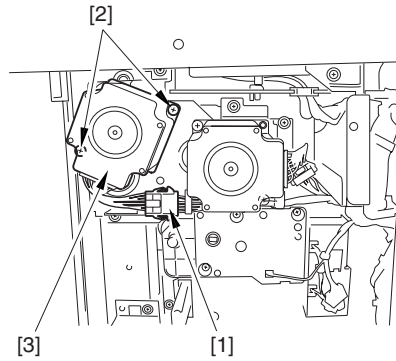


F-8-97

8.11.10 Cassette Paper Level Sensor (A/B)

8.11.10.1 Removing the Rear Cover (lower)

0003-8334

1) Remove the 7 screws [1], and detach the rear cover (lower) [2].

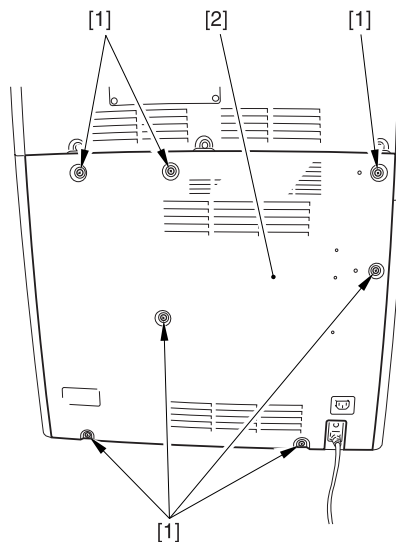


F-8-98

8.11.10.2 Removing the DC

Power Supply Unit

[0003-5802](#)


- 1) Open the 2 wire saddles [1], and free the harness [2].

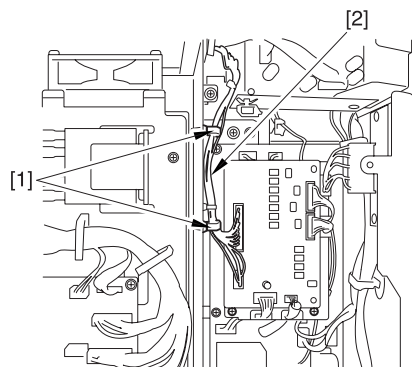

F-8-99

- 2) Disconnect the 16 connectors [1], and open the 3 wire saddles [2] to free the harness [3].

- 3) Remove the 4 screws [4], and detach the DC power supply unit [5].

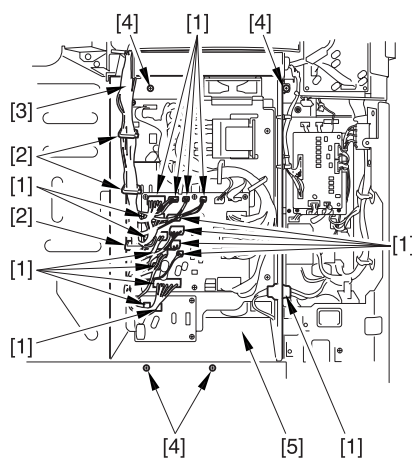


F-8-100

8.11.10.3 Removing the

Cassette Lifter Motor

[0003-5803](#)

- 1) Slide out the cassette 3 or 4.
- 2) Disconnect the connector [1], and remove the 3 screws [3]; then, detach the cassette lifter motor [3].

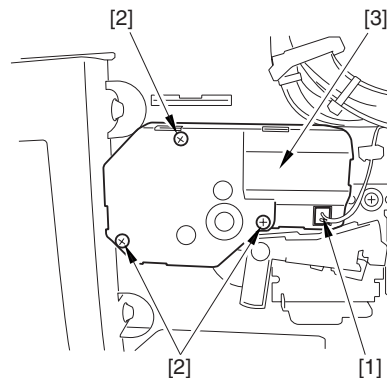


F-8-101

8.11.10.4 Removing the

Cassette Paper Level Sensor


[0003-5804](#)

- 1) Slide out the cassette 3/4.
- 2) Disconnect the connector [1], and open the 2 wire saddles [2].
- 3) Remove the screw [3], and detach the sensor base [4].

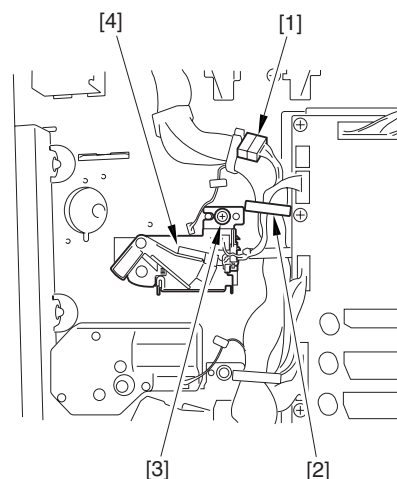


F-8-102

4) Free the harness from the wire saddle [1], and disconnect the connector [2].

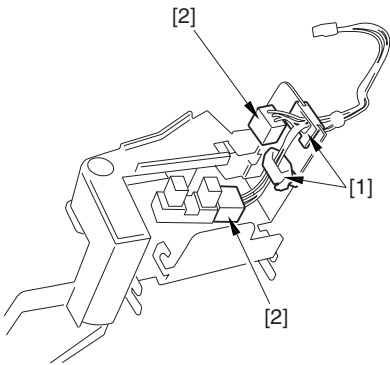

F-8-103

5) Release the hook [1], and detach the cassette power level sensor [2].

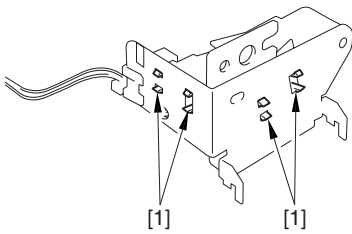

F-8-104


8.11.11 Left Deck Paper Level Sensor

8.11.11.1 Removing the Rear

Cover (lower)

0003-6669

1) Remove the 7 screws [1], and detach the rear cover (lower) [2].

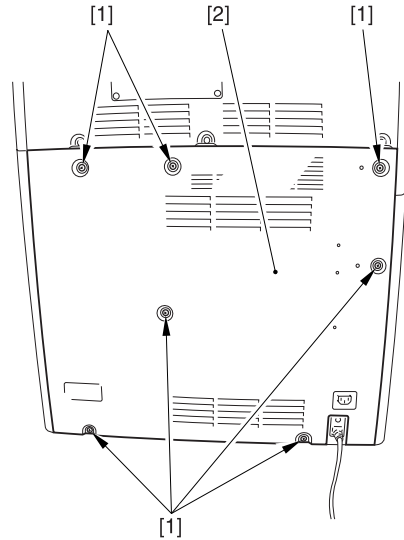


F-8-105

8.11.11.2 Removing the Left

Cover (lower)

0003-6670

1) Remove the 2 grip covers [1].
2) Remove the 6 screws [2], and detach the left cover (lower) [3].

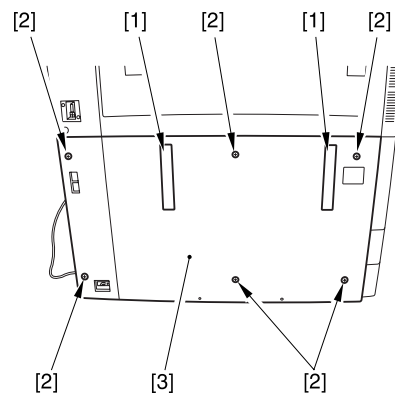


F-8-106

8.11.11.3 Removing the Power

Cord Base


0004-5216

1) Remove the 4 screws [1] from the left side.

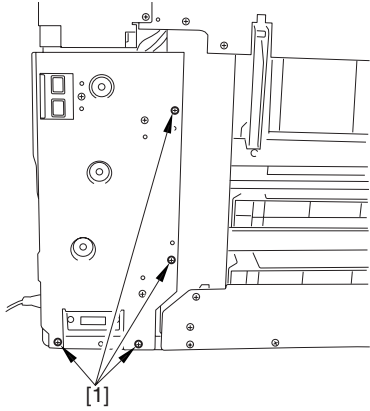


F-8-107

2) Disconnect the 4 connectors [1], and open the 3 wire saddles [2].

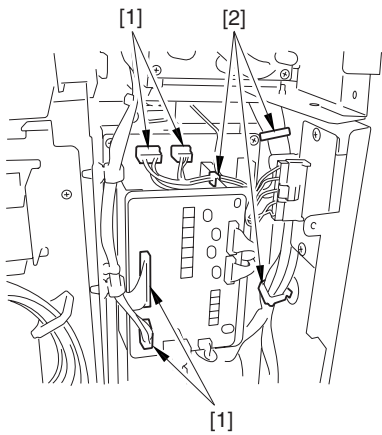


F-8-108

3) Disconnect the 8 connectors [1], and open the wire saddle [2].

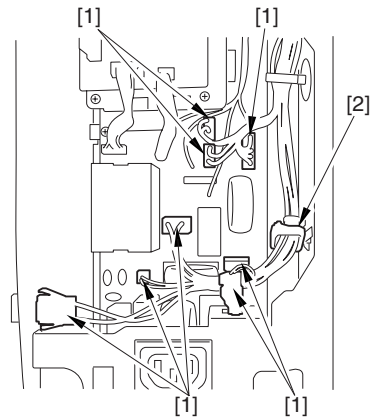

F-8-109

4) Remove the 3 screws [1], and detach the AC driver box [2].

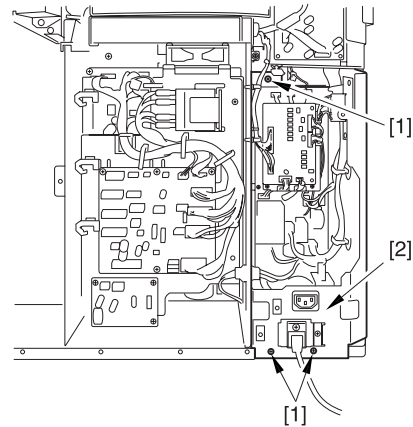


F-8-110

8.11.11.4 Removing the Left


Deck Paper Level Sensor 0003-6673

1) Disconnect the connector [1], and remove the screw [2]; then, detach the sensor base [3].

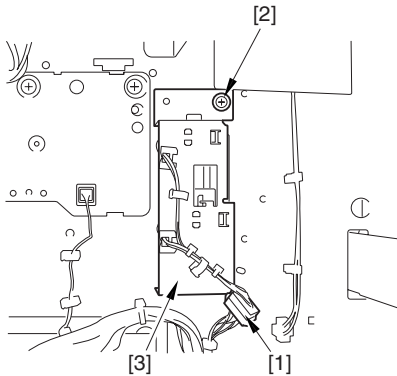


F-8-111

2) Disconnect the connector [1].

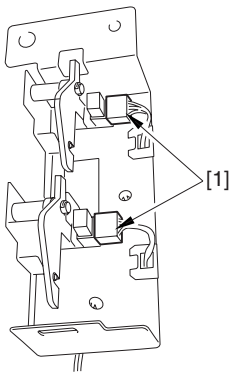

F-8-112

3) Release the hook [1], and detach the left deck paper level sensor.

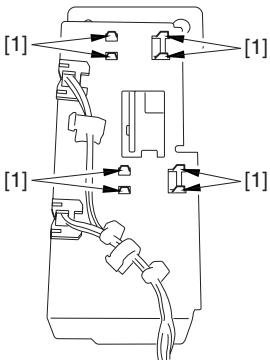


F-8-113

8.11.12 Right Deck Pickup Assembly

8.11.12.1 Removing the Right


Deck Pickup Unit 0002-9781

- 1) Slide out the right deck.
- 2) Remove the upper rear right cover.
- 3) Open the lower right cover.
- 4) Open the manual feed unit.
- 5) Remove the screw [1], and open the manual feed unit wide

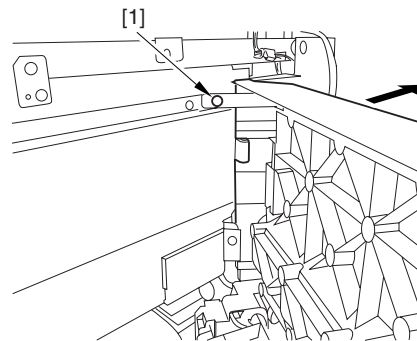


F-8-114

6) Remove the 2 screws [1], and detach the connector cover [2].

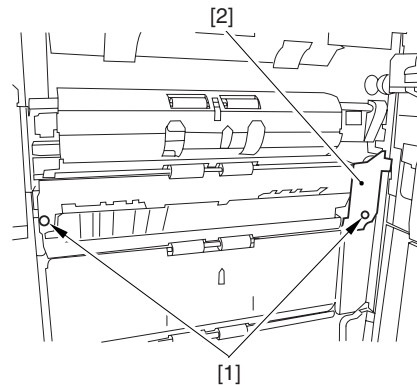

F-8-115

7) Disconnect the connector [1], and detach the pickup unit (right deck) [1].

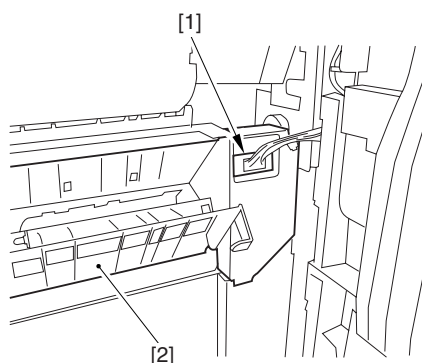


F-8-116

8.11.13 Left Deck Pickup Assembly

8.11.13.1 Removing the Left Deck Pickup Unit


0002-9541

- 1) Open the front door.
- 2) Slide out the left deck, and remove the 2 screws [1] from the left side of the compartment.

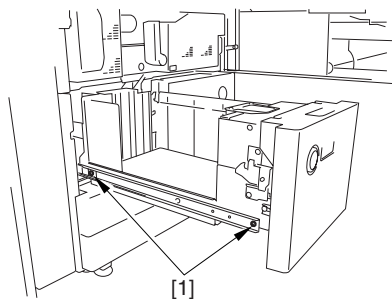


F-8-117

- 3) Remove the 2 screws [1] from the right side of the deck compartment

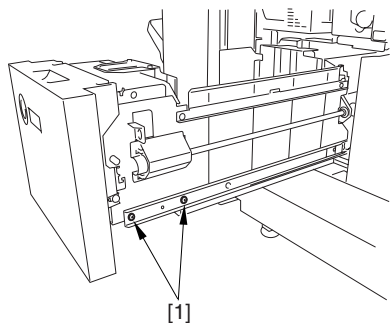


F-8-118

- 4) Lift the left deck compartment [1] to detach.

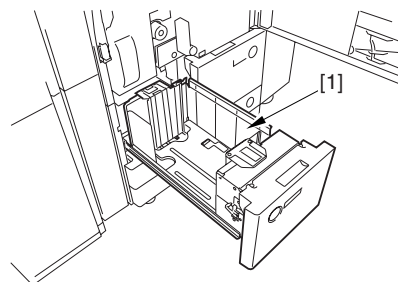

F-8-119


- 5) Put back the 2 rails [1] into the machine.

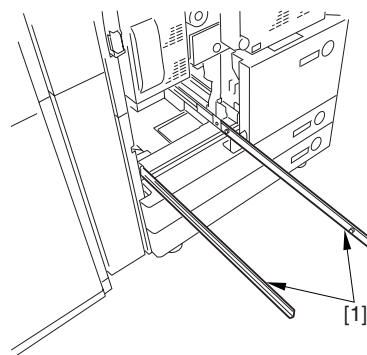

F-8-120


- 6) In the same way, detach the right deck compartment.

- 7) Disconnect the connector [2] found at the rear of the left deck pickup assembly [1].

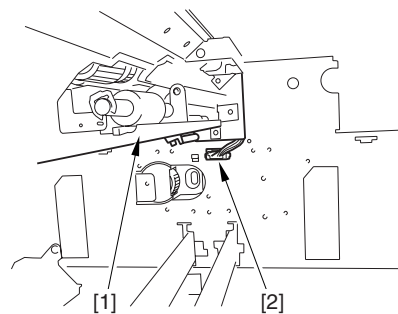

F-8-121


- 8) Slide out the fixing/freeing assembly.
- 9) Remove the 2 screws [1], and detach the pickup fixing plate [2]

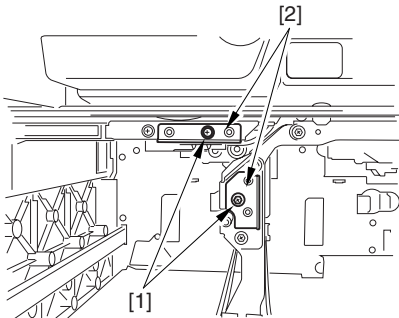

F-8-122

⚠ When detaching the fixing plate, be sure to support the pickup assembly with your hand. (The pickup assembly may fall.)

- 10) While supporting the bottom of the left deck pickup assembly, slide out the pickup assembly [1] to detach.

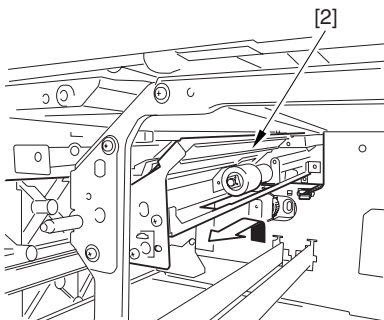


F-8-123

8.11.14 Right Deck Pickup/Feed/ Separation Roller


8.11.14.1 Removing the Right Deck Pickup, Feed, and Separation Rollers

0003-8601

- 1) Slide out the right deck.
- 2) From both sides of the deck compartment [1], remove the 2 screws each [2]; then, detach the deck compartment.

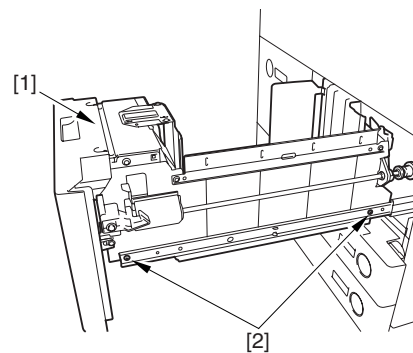


F-8-124

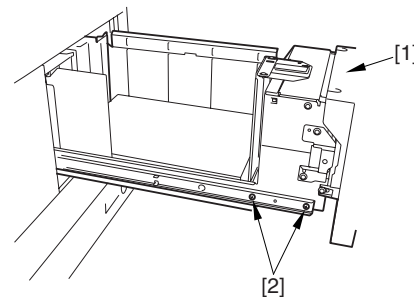


F-8-125

- 3) Push the 2 rails [1] into the machine.

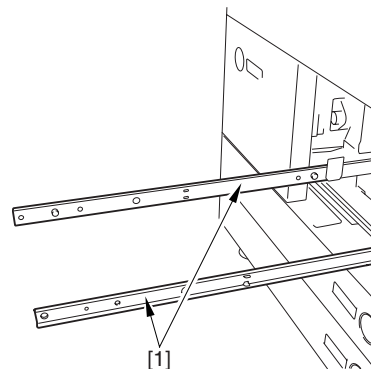


F-8-126

- 4) Free the hook [1], and pull out the pickup roller [2].
- 5) Remove the resin ring [3], and pull out the feed roller [4].
- 6) Remove the resin ring [5], and pull out the separation roller [6].

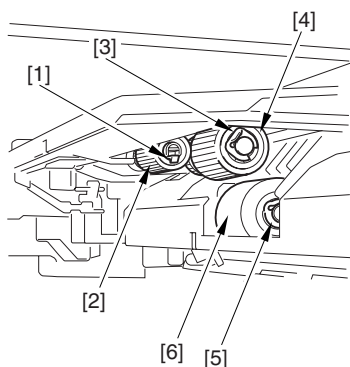

F-8-127

⚠ When mounting the pickup roller [1], be sure the protrusion [2] indicated in the diagram faces the rear.

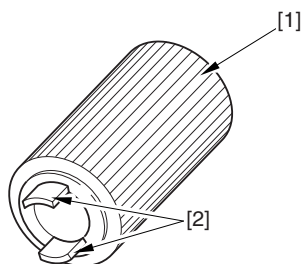


F-8-128

8.11.15 Left Deck Pickup/Feed/ Separation Roller


8.11.15.1 Removing the Left Deck Pickup, Feed, and Separation Roller

0003-8616

- 1) Slide out the right deck.
- 2) Slide out the left deck.
- 3) From both sides of the left deck compartment [1], remove the 2 screws each [2]; then, detach the left deck compartment.

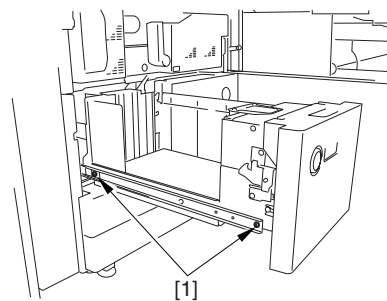


F-8-129

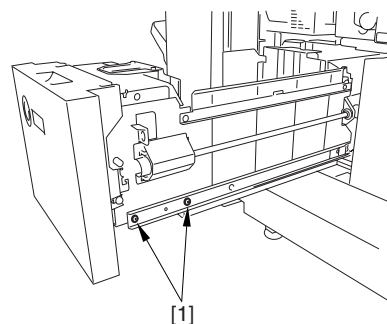


F-8-130

- 4) Push the 2 rails [1] into the machine.

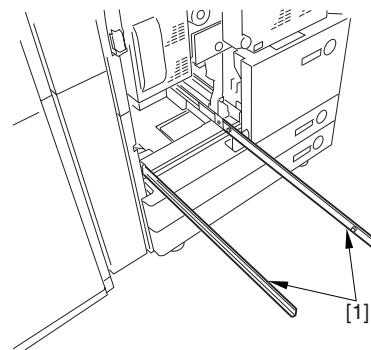


F-8-131

- 5) Free the hook [1], and pull out the pickup roller [2].
- 6) Remove the resin ring [3], and pull out the feed roller [4].
- 7) Remove the resin ring [5], and pull out the separation roller [6].

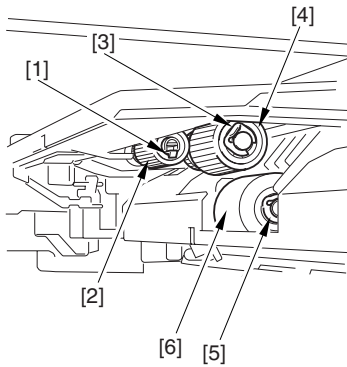

F-8-132

⚠ When mounting the pickup roller [1], be sure that the protrusion [2] indicated in the diagram faces the rear.

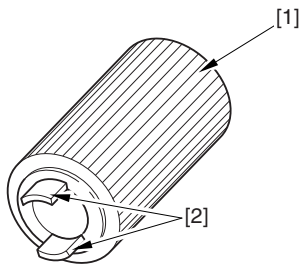


F-8-133

8.11.16 Cassette Pickup/Feed/ Separation Roller

8.11.16.1 Removing the Cassette Pickup, Feed, and Separation Rollers


0003-8618

- 1) Slide out the cassette 3/4.
- 2) Free the hook [1], and pull out the pickup roller [2].
- 3) Remove the resin ring [3], and pull out the feed roller [4].
- 4) Remove the resin ring [5], and pull out the separation roller [6].

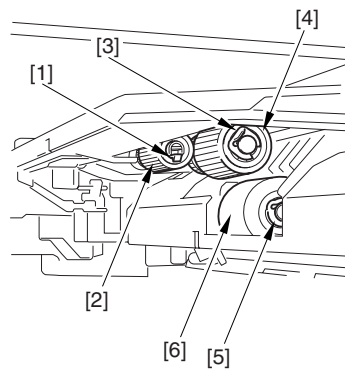

F-8-134

⚠ When mounting the pickup roller [1], be sure that the protrusion [2] indicated in the diagram faces the rear.

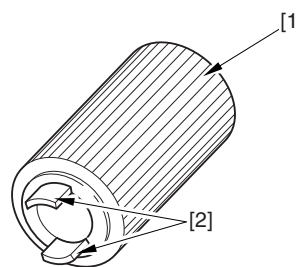


F-8-135

8.11.17 Manual Feed Unit

8.11.17.1 Removing the Manual Feed Unit


0002-9702

- 1) Open the manual feed unit.
- 2) Remove the 2 screws [1], and detach the cover [2].

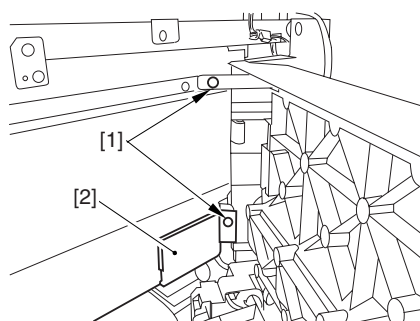


F-8-136

Remove the screw [1] used to hold the grounding wire in place, disconnect the connector [2], and detach the harness retainer [3].

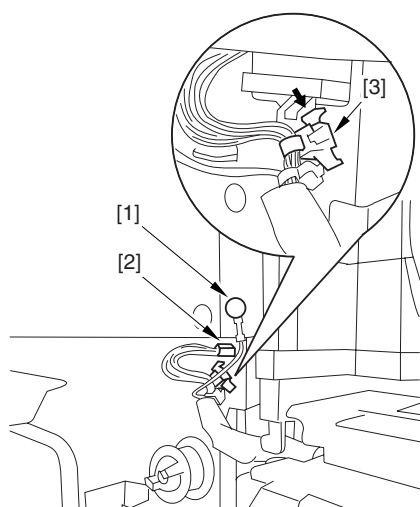

F-8-137

- 4) Lift the manual feed unit [1] to detach.

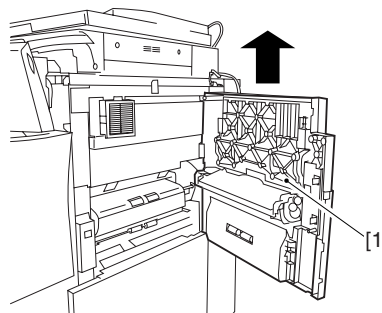


F-8-138

8.11.18 Manual Feed Roller

8.11.18.1 Removing the Manual Feed Roller


0002-9766

- 1) Open the manual feed unit.
- 2) Release the claw [1], and detach the gear [2] and the bushing [3].

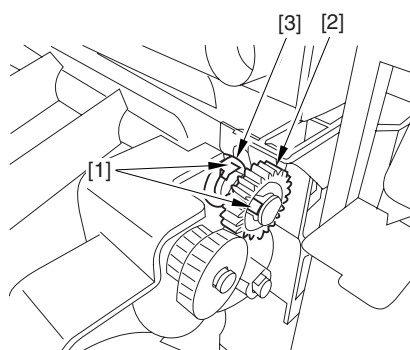


F-8-139

- 3) Remove the feeder upper cover [1].

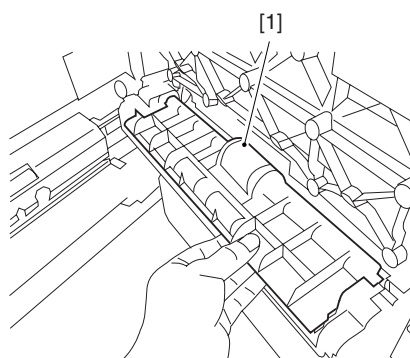


F-8-140

4) Remove the resin ring [1], and pull out the feed roller [2] to the front.

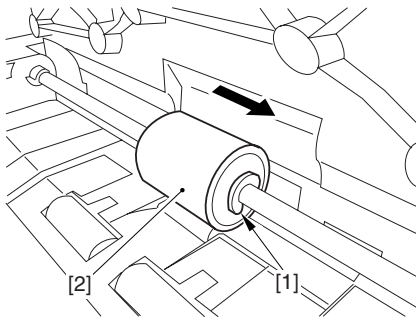

F-8-141

3) Remove the feeder upper cover [1].

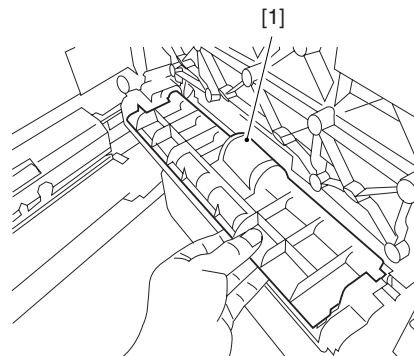


F-8-143

8.11.19 Manual Feed Separation Roller

8.11.19.1 Removing the Manual Feed Roller


0003-2536

- 1) Open the manual feed unit.
- 2) Release the claw [1], and detach the gear [2] and the bushing [3].

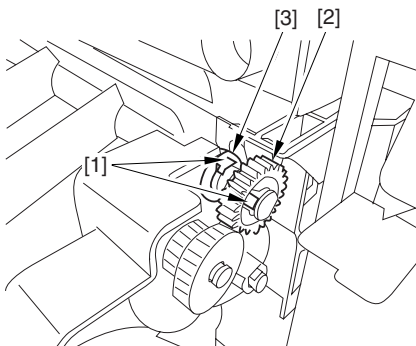

F-8-142

4) Remove the resin ring [1], and pull out the feed roller [2] to the front.

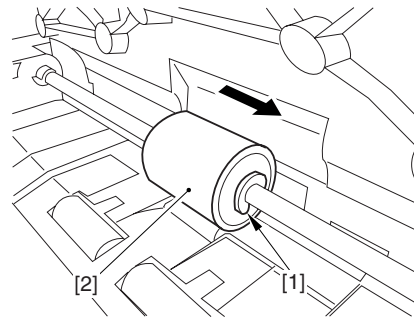


F-8-144

8.11.19.2 Removing the Manual Feed Separation Roller


0002-9780

- 1) Lift the paper guide to free the hook [1]; then, slide it to free the claw [2], thereby detaching the paper guide (front) [3] and the other paper guide (rear) [4].

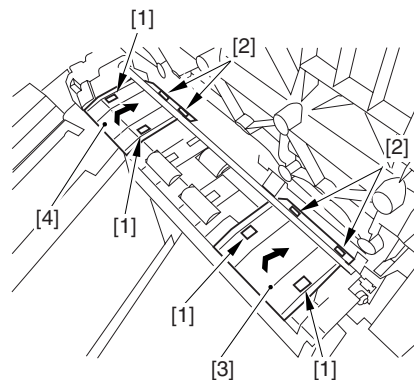


F-8-145

2) As in step 1), detach the paper guide (middle) [1].
Reference: When attaching the paper guide (middle), try pushing down on the separation roller shaft [2] to facilitate the work.

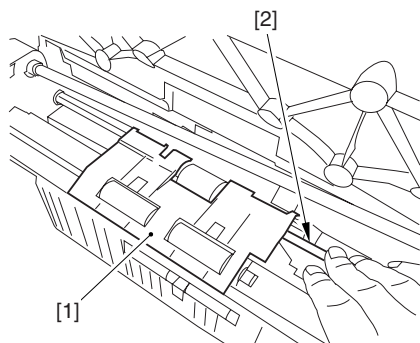

F-8-146

3) Pick its tab [1], and pull out the separation roller [2] toward the rear.

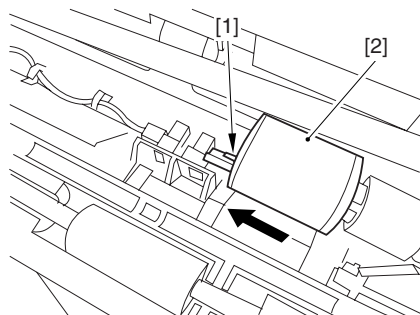


F-8-147

8.11.20 Manual Feed Pre-Registration Motor

8.11.20.1 Removing the Rear Cover (upper)


0003-8323

- 1) Free the cable [2] from the 2 cable clamps [1].
- 2) Remove the 2 screws [3].

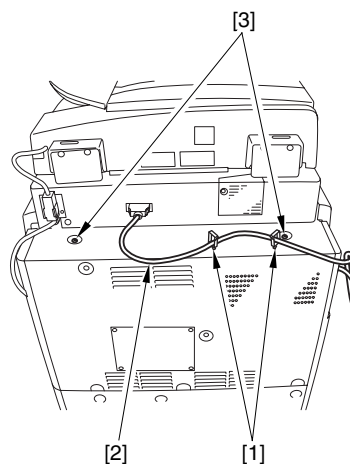

F-8-148

- 3) Remove the 5 screws [1], and detach the rear cover (upper) [2].

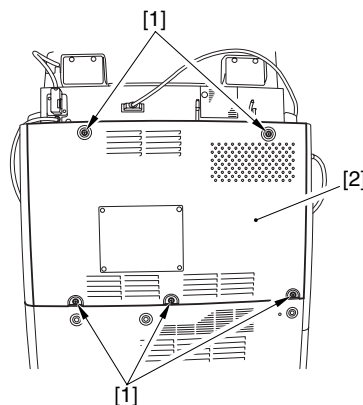


F-8-149

8.11.20.2 Removing the Right

Cover (upper rear)

0003-8300

- 1) Detach the reader communications cable [1].
- 2) Remove the 2 screws [2], and detach the right cover (upper rear) [3].

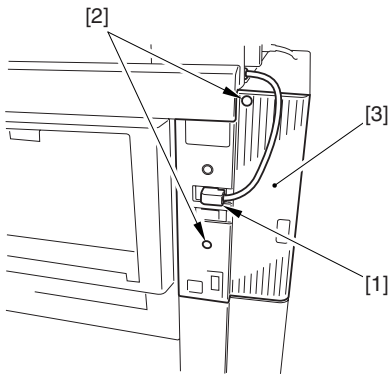


F-8-150

8.11.20.4 Removing the Right

Cover (lower rear)

0003-8305

- 1) Remove the 2 screws [1], and detach the right cover (lower rear) [2].

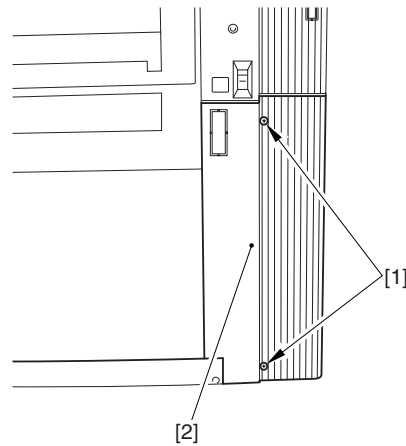


F-8-152

8.11.20.3 Removing the Rear

Cover (lower)

0003-8331

- 1) Remove the 7 screws [1], and detach the rear cover (lower) [2].

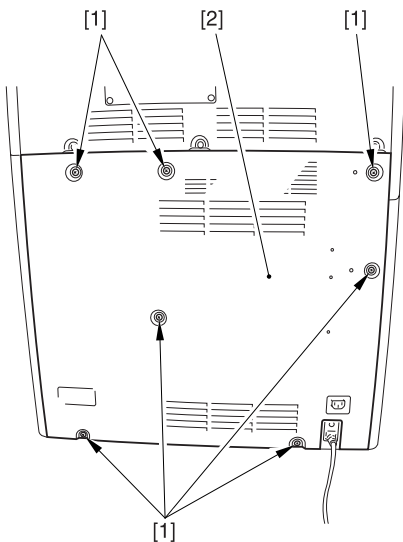


F-8-151

8.11.20.5 Sliding the DC

Controller Box


0003-6522

- 1) Remove the 9 screws [1], and detach the DC controller cover [2].

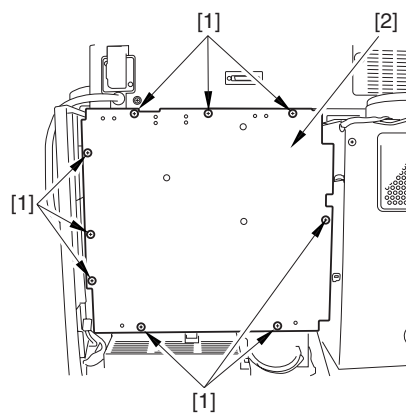

F-8-153

2) Remove the 6 screws [1], and slide the DC controller box [2] to the left.

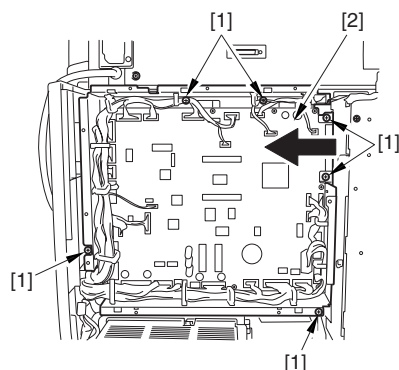


F-8-154

8.11.20.6 Removing the DC Controller Box


0003-8714

1) Open the 3 cable guides [1], and free the harness [2].

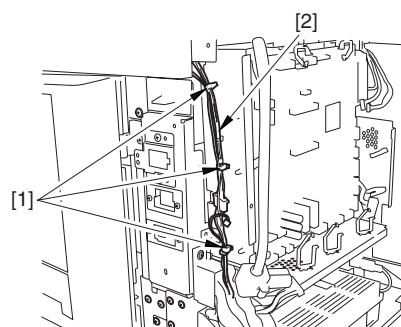


F-8-155

2) Disconnect the 33 connectors [1], and open that 13 cable guides [2]; then, free the harness [3].

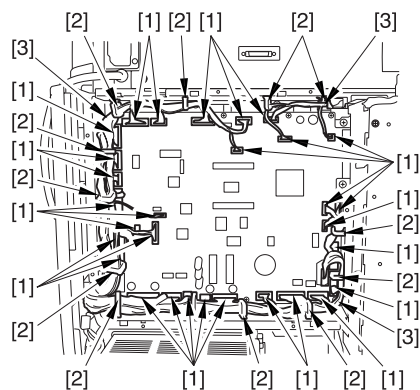

F-8-156

3) Lift the DC controller box [1] to detach.

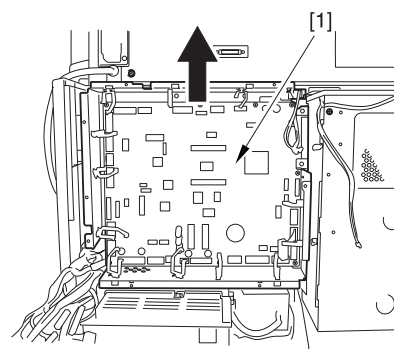

F-8-157

8.11.20.7 Points to Note When Mounting the DC Controller Box


Box

0005-7217

⚠ During assembly work, be sure to connect the harness to the DC controller PCB as follows:

-Connect the connector of the harness [1] first, and then the other harness [2].

-Fix the harnesses [1] [2] in place using the wire saddle [3] so that the harness [1] is on the left side of the harness [2].

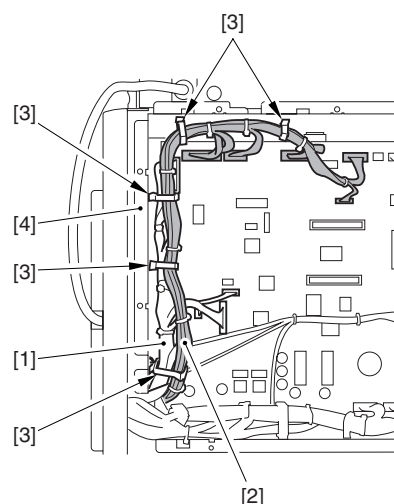

F-8-158

Supplementary Information:


If the harness [1] is away from the side plate [4] of the DC controller box, wrong detection (E070-0102) of the ITB home position tends to occur because of noise.

8.11.20.8 Removing the HV1


PCB

0003-6524

1) Free the 2 hooks [1], and detach the HV1 transformer lid [2].

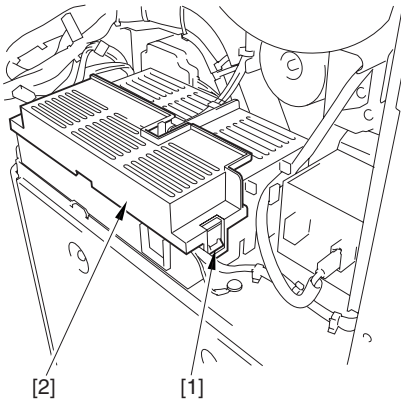


F-8-159

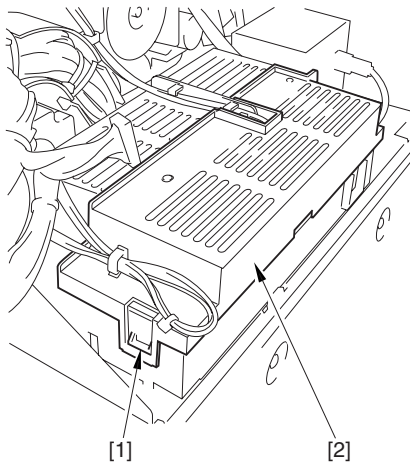


F-8-160

2) Disconnect the 6 connectors [1], and free the harness from the 6 cable guides [2].

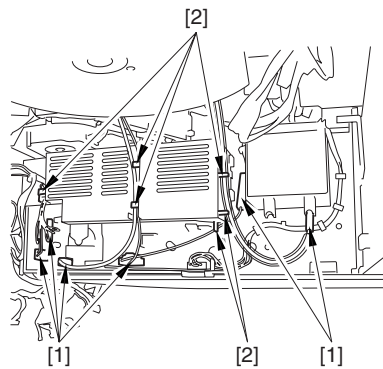


F-8-161

3) Free the harness [1] from the 2 cable guides [2]; then, remove the screw.

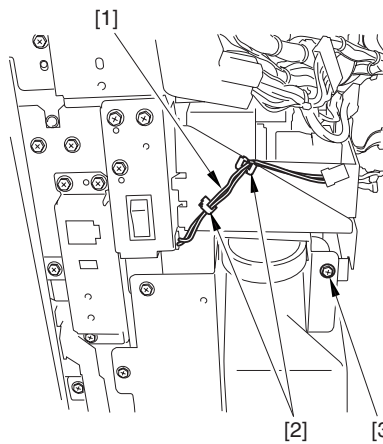

F-8-162

4) Remove the 2 screws [1], and lift the HV1 PCB [2] to detach.

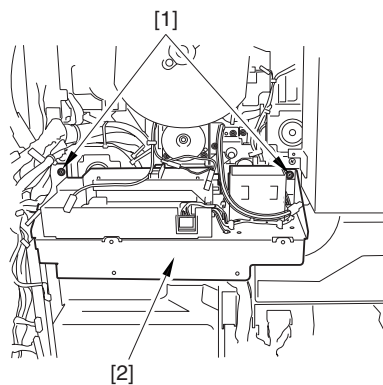


F-8-163

8.11.20.9 Manual Feed Pre-Registration Motor

0003-6525

1) Disconnect the connector [1], and remove the 2 screws [2]; then, move the manual feed pre-registration motor [3] to the right to detach

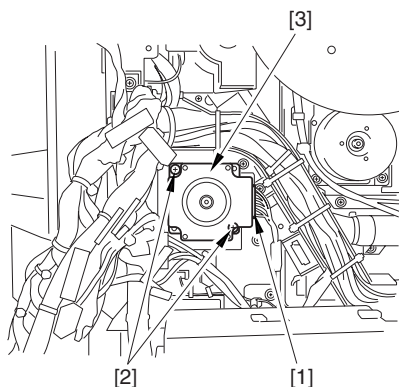


F-8-164

8.11.21 Horizontal Registration Assembly

8.11.21.1 Removing the Fixing Assembly


0003-7951

1) Open the front cover.
 2) Slide out the fixing/feeding assembly.
 3) Push the leaf springs [1] found at the left and right to slide farther out the fixing/feeding assembly [2].

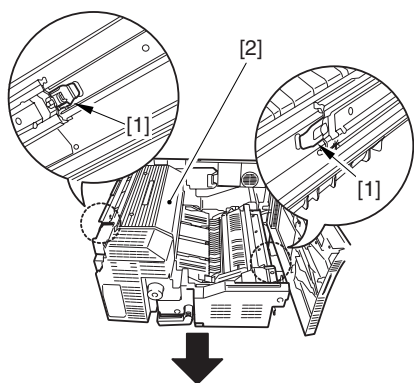


F-8-165

4) Open the reversal delivery cover [1] and the middle cover [2].

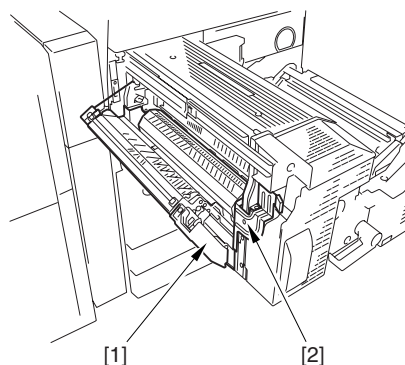


F-8-166

5) Remove the screw [1] and the 2 screws [2]; then, detach the fixing front cover [3].

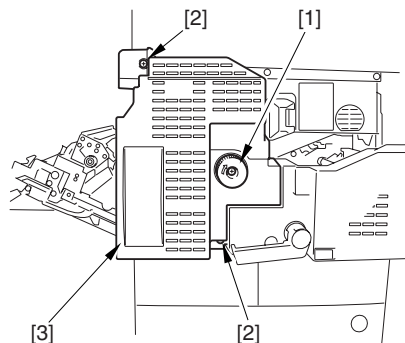


F-8-167

6) Remove the 3 screws [1], and disconnect the 3 connectors [2]; then, after shifting the timing belt [3] to the front, detach it together with the fixing motor base [4].

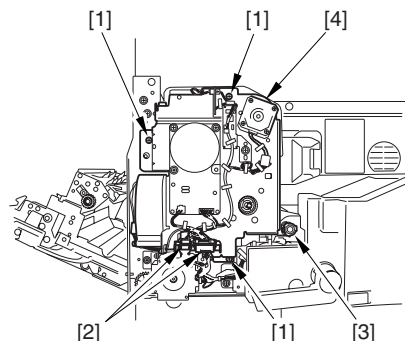


F-8-168

7) Remove the screw [2] found at the rear of the fixing assembly [1].

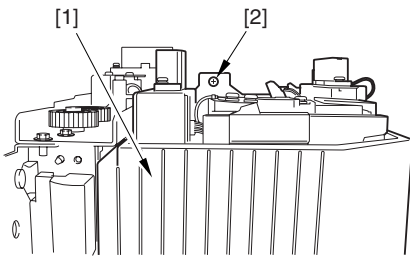


F-8-169

8) Holding the 2 grips [1], detach the fixing assembly [2].

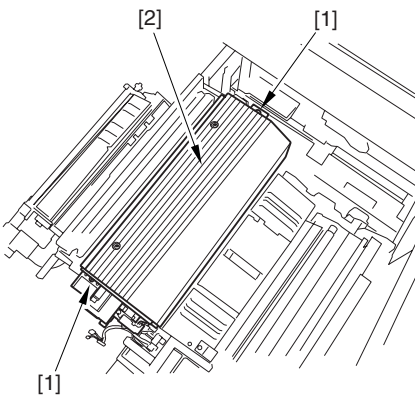

F-8-170


⚠ When lifting the fixing assembly, be sure to take care not to touch the web length detecting arm [1] so that the arm will be free of damage.

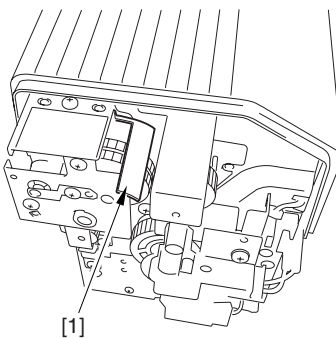

F-8-171

8.11.21.2 Removing the Horizontal Registration Unit 0003-7968


1) Remove the screw [1], and detach the handle [2].
2) Remove the 2 screws [3], and detach the fixing/feeding front cover [4].

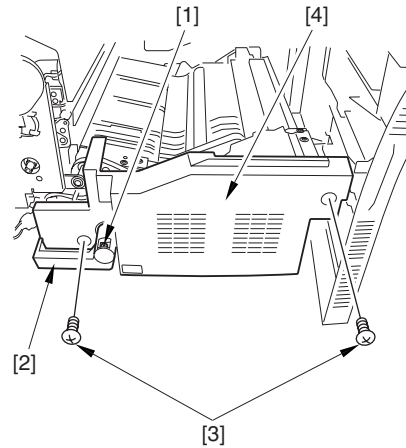

F-8-172


3) Disconnect the connector [1], and open the 3 wire saddles [2].

4) Remove the 2 screws [3], and detach the duplexing left motor [4] together with its base.

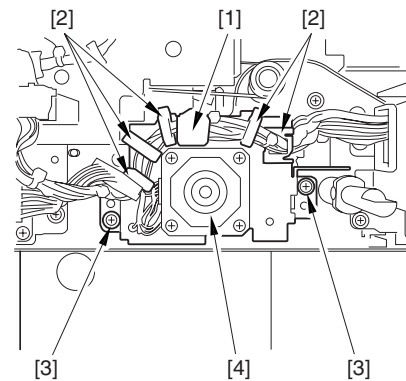

F-8-173


5) Remove the screw [1] from the front side.

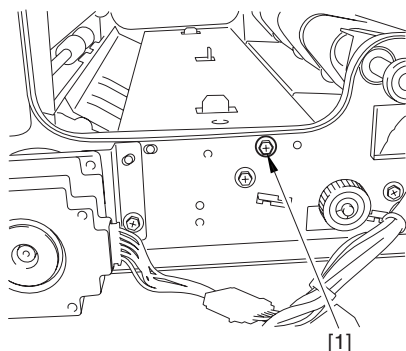

F-8-174


6) Remove the screw [1] from the rear.

7) Detach the side plate [2].

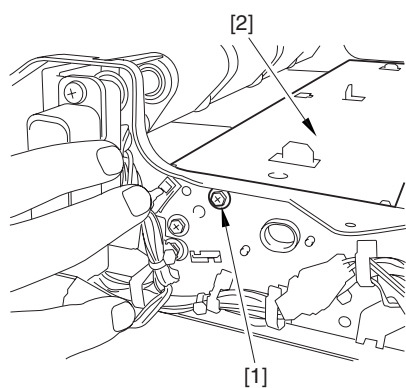

F-8-175


8) Disconnect the connector [1].

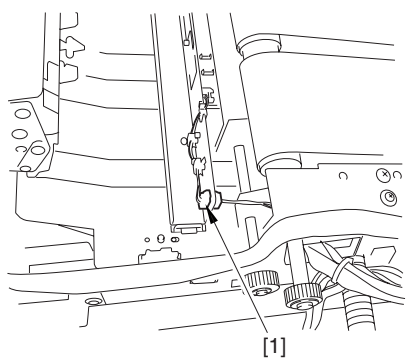

F-8-176

9) Disconnect the 2 connectors [1], and open the wire guide [2].

10) Remove the screw [3], and slide the horizontal registration unit [4] in the direction of the arrow to detach.

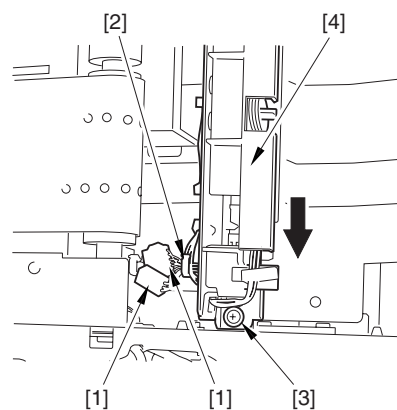


F-8-177

8.11.22 Registration Motor


8.11.22.1 Removing the Fixing/Feeding Driver PCB 0003-7031

- 1) Open the front cover.
- 2) Slide out the fixing/feeding assembly.
- 3) Remove the screw [1], and detach the handle [2].
- 4) Remove the 2 screws [3], and detach the fixing/feeding front cover [4].

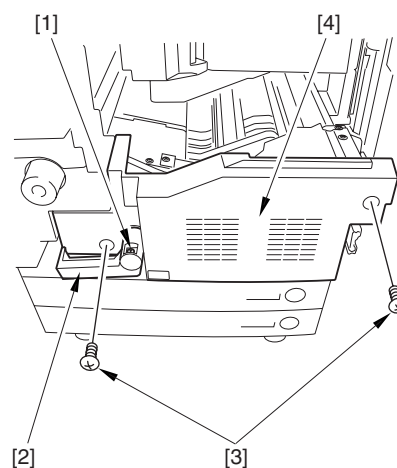


F-8-178

5) Remove the 2 screws [1], and detach the fixing/feeding upper cover [2].

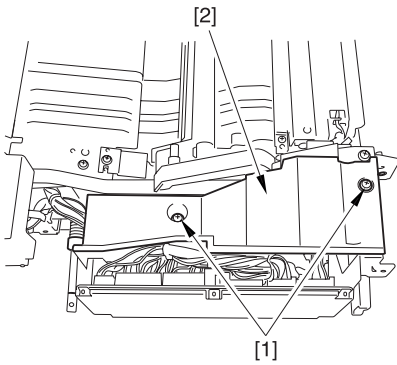


F-8-179

6) Disconnect the 6 connectors [1], and open the 3 wire saddles [2].

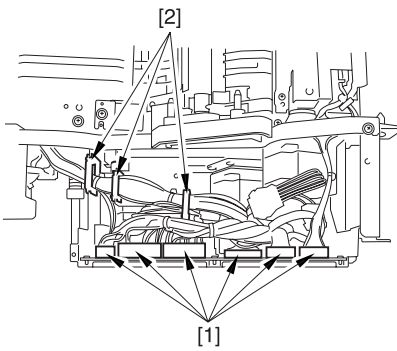


F-8-180

7) Disconnect the 3 connectors [1].

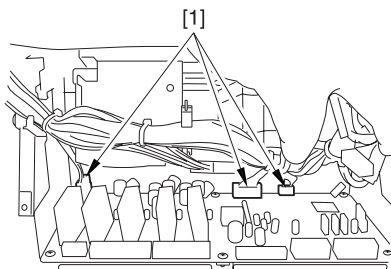

F-8-181


8) Remove the 2 screws [1], and shift the fixing/feeding driver PCB [2] toward the front to detach.

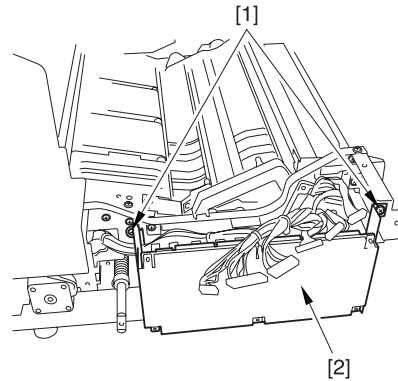

F-8-182

8.11.22.2 Removing the Registration Motor 0003-7032

1) Disconnect the connector [1], and remove the 2 screws [2]; then, detach the registration motor [3].

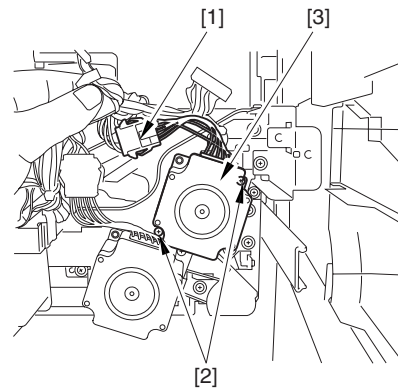


F-8-183

8.11.23 Horizontal Registration Motor

8.11.23.1 Removing the Fixing Assembly


0003-7979

- 1) Open the front cover.
- 2) Slide out the fixing/feeding assembly.
- 3) Push the leaf springs [1] found at the left and right to slide farther out the fixing/feeding assembly [2].

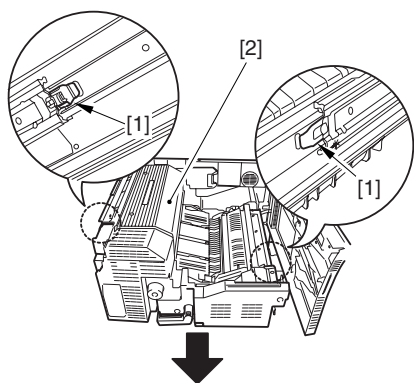


F-8-184

- 4) Open the reversal delivery cover [1] and the middle cover [2].

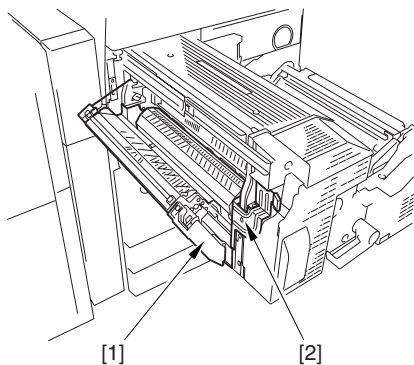


F-8-185

- 5) Remove the screw [1] and the 2 screws [2]; then, detach the fixing front cover [3].

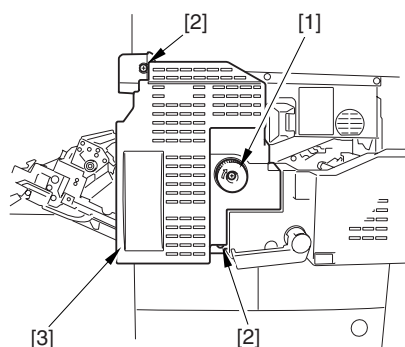


F-8-186

- 6) Remove the 3 screws [1], and disconnect the 3 connectors [2]; then, after shifting the timing belt [3] to the front, detach it together with the fixing motor base [4].

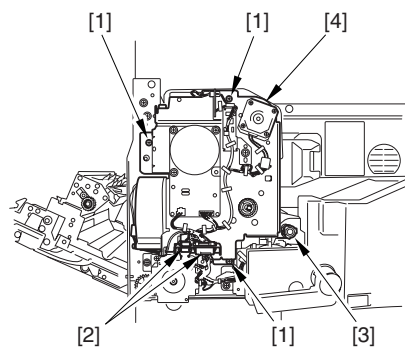


F-8-187

- 7) Remove the screw [2] found at the rear of the fixing assembly [1].

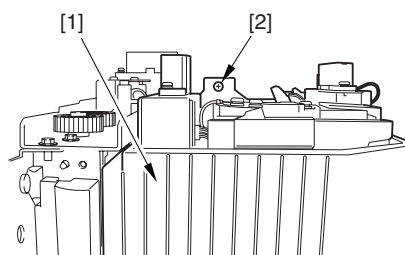


F-8-188

8) Holding the 2 grips [1], detach the fixing assembly [2].

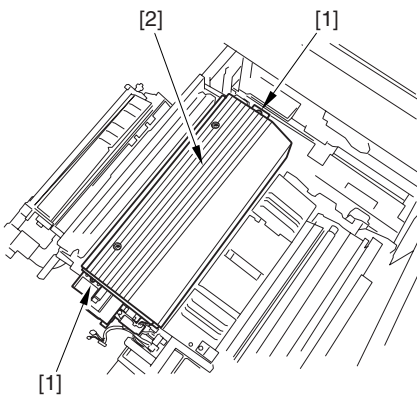

F-8-189


⚠ When lifting the fixing assembly, be sure to take care not to touch the web length detecting arm [1] so that the arm will be free of damage.

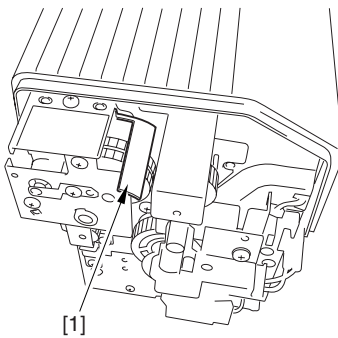

F-8-190


8.11.23.2 Removing the Horizontal Registration Unit 0003-7978

1) Remove the screw [1], and detach the handle [2].
 2) Remove the 2 screws [3], and detach the fixing/feeding front cover [4].

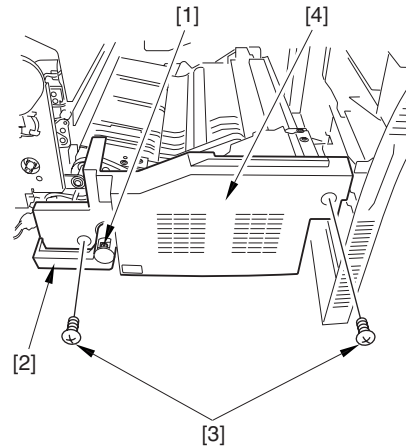


F-8-191

3) Disconnect the connector [1], and open the 3 wire saddles [2].
 4) Remove the 2 screws [3], and detach the duplexing left motor [4] together with its base.

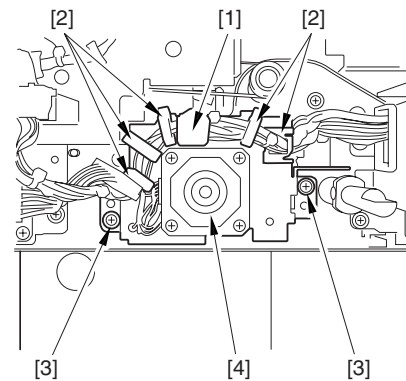

F-8-192


5) Remove the screw [1] from the front side.

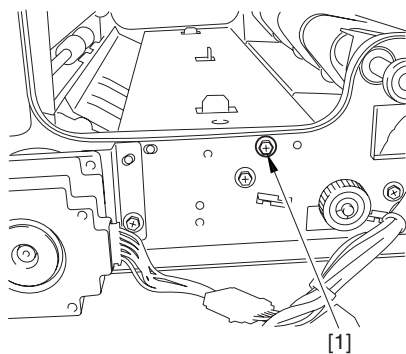

F-8-193


6) Remove the screw [1] from the rear.

7) Detach the side plate [2].

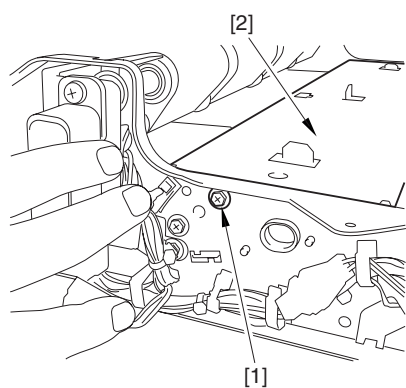

F-8-194


8) Disconnect the connector [1].

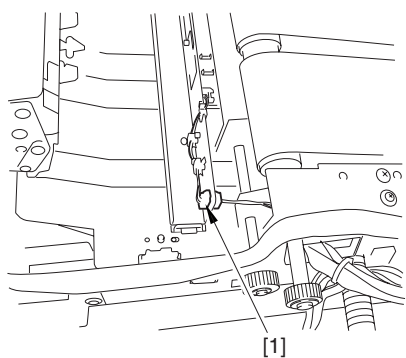

F-8-195

9) Disconnect the 2 connectors [1], and open the wire guide [2].

10) Remove the screw [3], and slide the horizontal registration unit [4] in the direction of the arrow to detach.

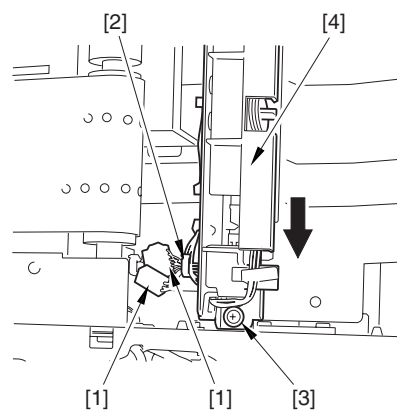


F-8-196

8.11.23.3 Removing the Horizontal Registration Motor

0003-7981

1) Remove the 2 screws [1], and open the 2 wire guides [2] to detach the horizontal registration motor [3].

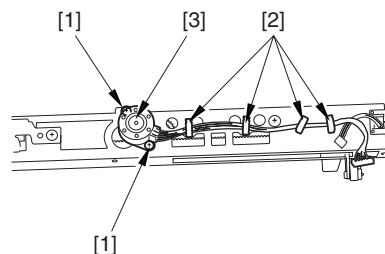

F-8-197


8.11.24 Duplex Reversal Motor

8.11.24.1 Removing the Fixing

Front Cover


0004-1085

- 1) Open the font cover.
- 2) Slide out the fixing/feeding assembly.
- 3) Open the re reversal delivery cover [1] and the middle cover [2].

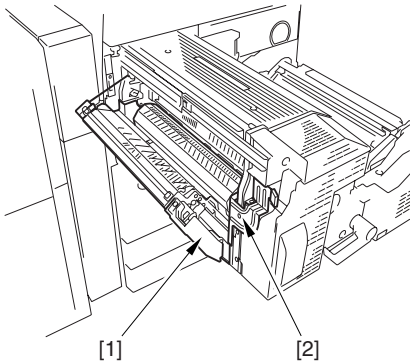

F-8-198

- 5) Remove the knob [1] and the 2 screws [2]; then, detach the fixing front cover [3].

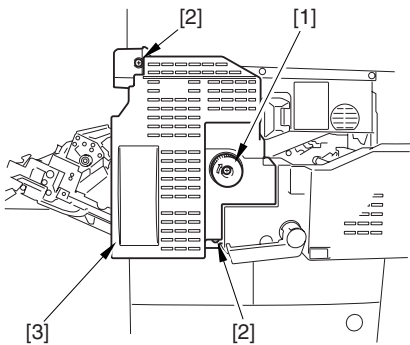


F-8-199

8.11.24.2 Removing the Duplexing Reversal Motor

0004-1086

- 1) Disconnect the connector [1], and remove the 2 screws [2]; then, detach the duplexing reversal motor [3].

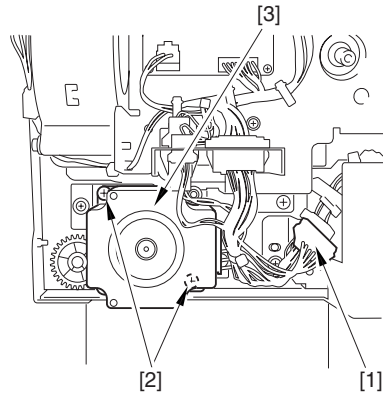

F-8-200


8.11.25 Duplex Left Motor

8.11.25.1 Removing the Fixing

Front Cover


0004-1087

- 1) Open the font cover.
- 2) Slide out the fixing/feeding assembly.
- 3) Open the re reversal delivery cover [1] and the middle cover [2].

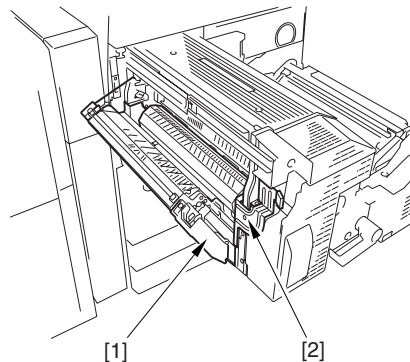

F-8-201

5) Remove the knob [1] and the 2 screws [2]; then, detach the fixing front cover [3].

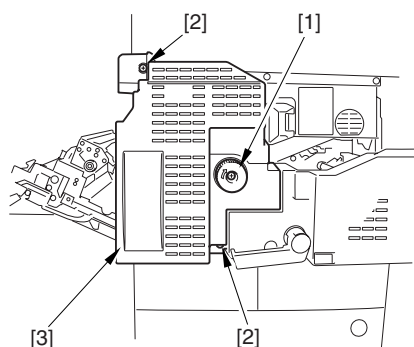


F-8-202

8.11.25.2 Removing the Duplexing Left Motor

0004-1088


1) Remove the screw [1], and detach the handle [2].
 2) Remove the 2 screws [3], and detach the fixing/feeding front cover [4].

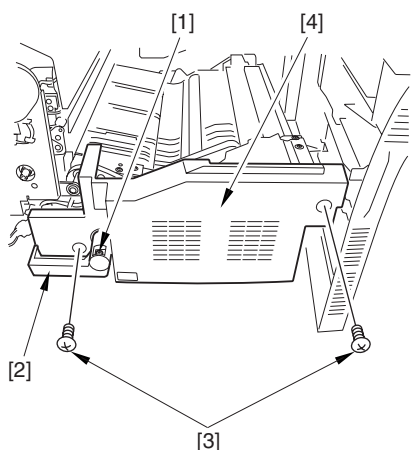

F-8-203


3) Disconnect the connector [1], and open the 3 wire saddles [2].

4) Remove the 2 screws [3], and detach the duplexing left motor [4] together with its base.

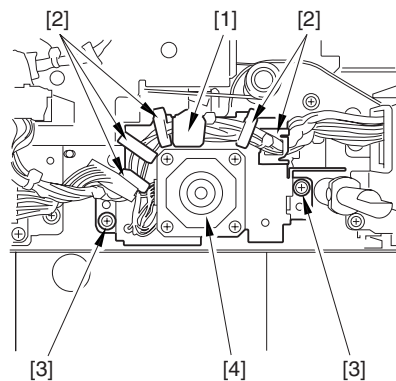

F-8-204

5) Remove the 2 screws [1], and detach the duplexing left motor [2].

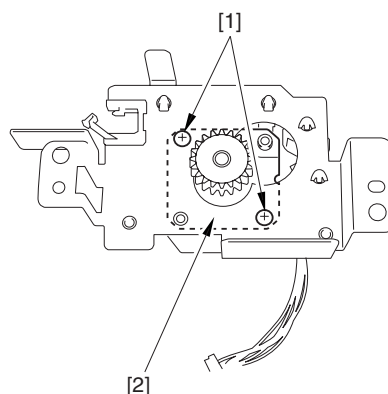


F-8-205

8.11.26 Duplex Middle Motor


8.11.26.1 Removing the Fixing/Feeding Driver PCB 0004-1082

- 1) Open the front cover.
- 2) Slide out the fixing/feeding assembly.
- 3) Remove the screw [1], and detach the handle [2].
- 4) Remove the 2 screws [3], and detach the fixing/feeding front cover [4].

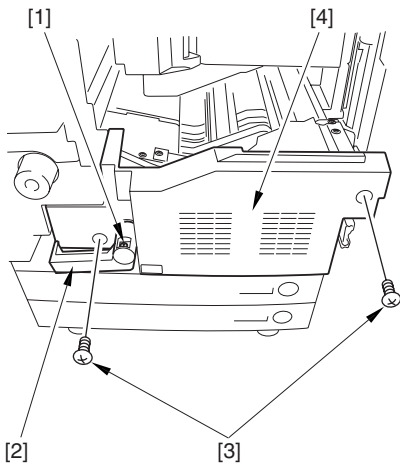


F-8-206

- 5) Remove the 2 screws [1], and detach the fixing/feeding upper cover [2].

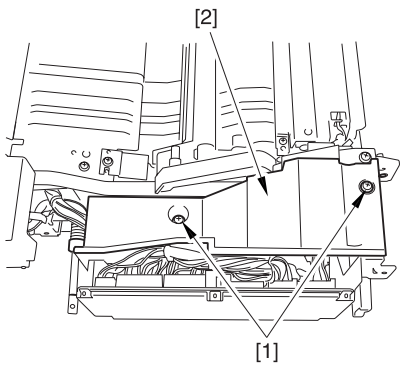


F-8-207

- 6) Disconnect the 6 connectors [1], and open the 3 wire saddles [2].

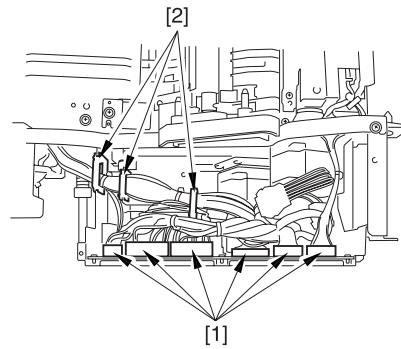


F-8-208

- 7) Disconnect the 3 connectors [1].

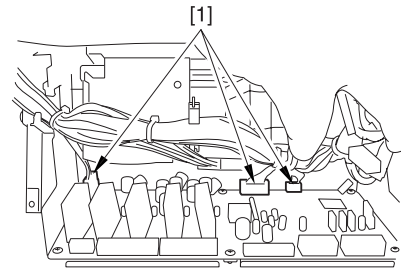

F-8-209


- 8) Remove the 2 screws [1], and shift the fixing/feeding driver PCB [2] toward the front to detach.

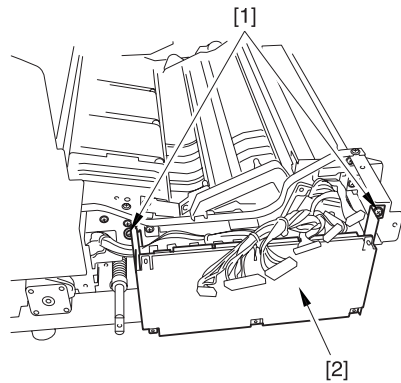

F-8-210

8.11.26.2 Removing the Duplexing Middle Motor 0004-1081

1) Disconnect the connector [1], and remove the 2 screws [2]; then, detach the duplexing middle motor [3].

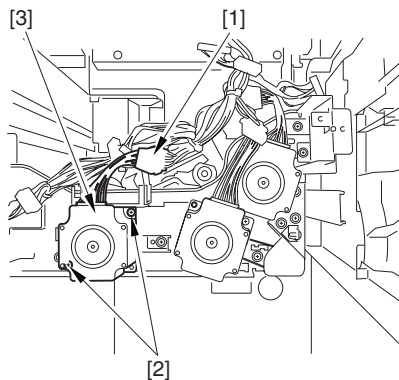


F-8-211

8.11.27 Duplex Right Motor


8.11.27.1 Removing the Fixing/Feeding Driver PCB 0004-1083

1) Open the front cover.
 2) Slide out the fixing/feeding assembly.
 3) Remove the screw [1], and detach the handle [2].
 4) Remove the 2 screws [3], and detach the fixing/feeding front cover [4].

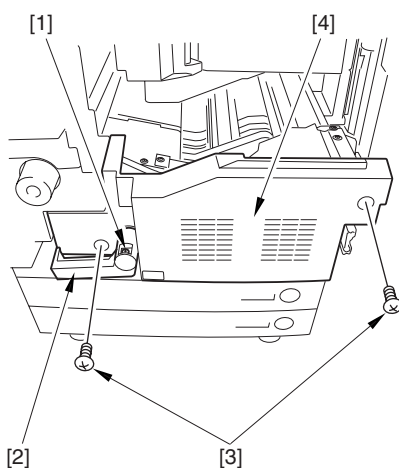


F-8-212

5) Remove the 2 screws [1], and detach the fixing/feeding upper cover [2].

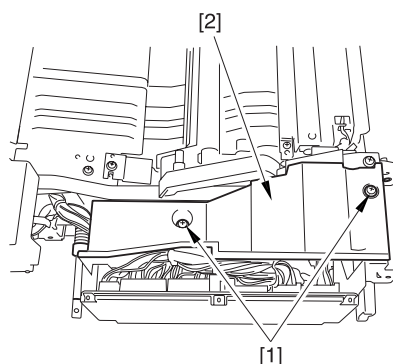


F-8-213

6) Disconnect the 6 connectors [1], and open the 3 wire saddles [2].

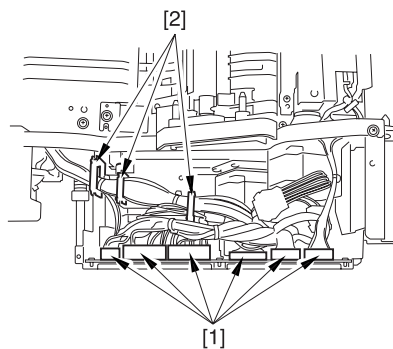


F-8-214

7) Disconnect the 3 connectors [1].

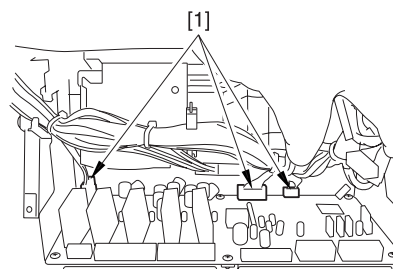

F-8-215


8) Remove the 2 screws [1], and shift the fixing/feeding driver PCB [2] toward the front to detach.

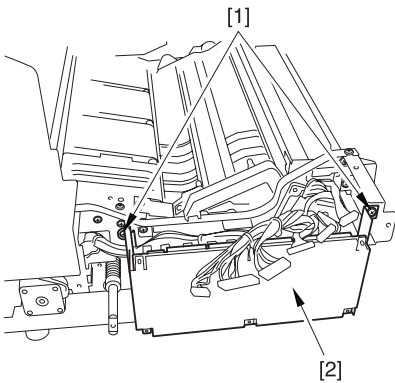

F-8-216

8.11.27.2 Removing the Duplexing Right Motor 0004-1084

1) Disconnect the connector [1], and remove the 2 screws; then, detach the duplexing right motor [3].

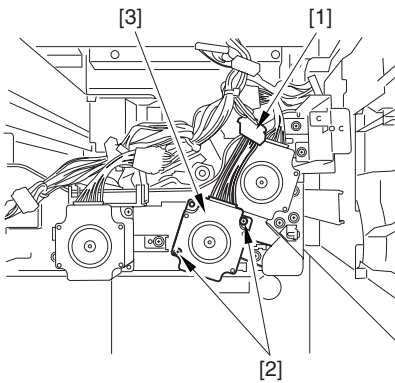


F-8-217

8.11.28 Outside Delivery Motor

8.11.28.1 Removing the Left Cover (upper) 0003-6681


1) Remove the 3 screws [1], and detach the left cover (upper) [2].

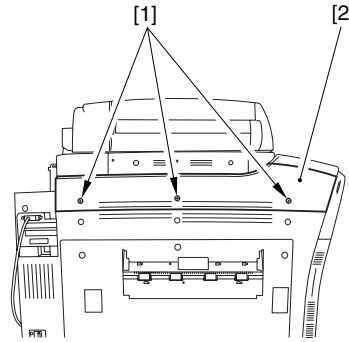

F-8-218

8.11.28.2 Removing the Delivery Cover 0003-6682

1) Remove the 3 screws [1], and detach the delivery cover [2].

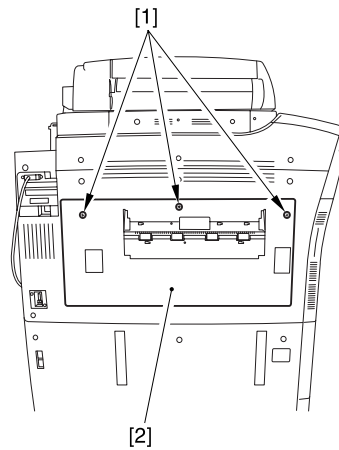


F-8-219

8.11.28.3 Removing the Left Cover (middle)

0003-6683

- 1) Disconnect the connector [1].
- 2) Remove the 5 screws [2], and detach the left cover (middle) [3].

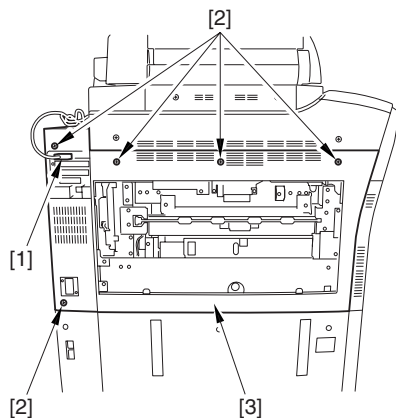


F-8-220

8.11.28.4 Removing the Rear Cover (upper)


0003-6684

- 1) Free the cable [2] from the 2 cable clamps [1].
- 2) Remove the 2 screws [3].

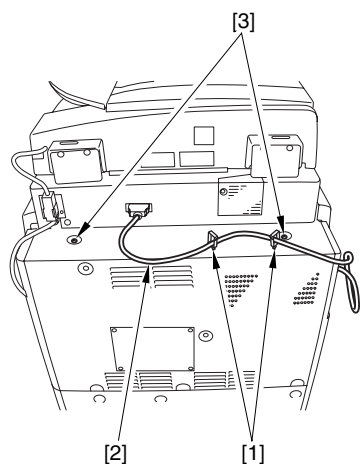

F-8-221

- 3) Remove the 5 screws [1], and detach the rear cover (upper) [2].

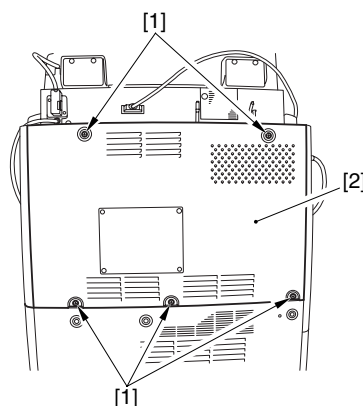


F-8-222


8.11.28.5 Removing the Controller Box Cover

0003-6686

- 1) Remove the 2 screws [1], and detach the controller box cover [2].

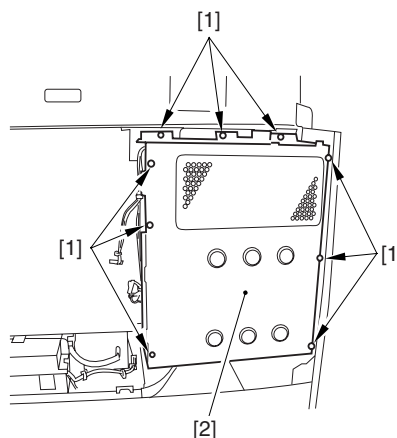

F-8-223

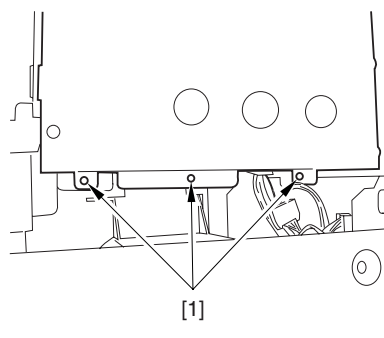


F-8-224


8.11.28.6 Removing the Controller Box

0003-6687

1) Disconnect the 9 connectors [1].

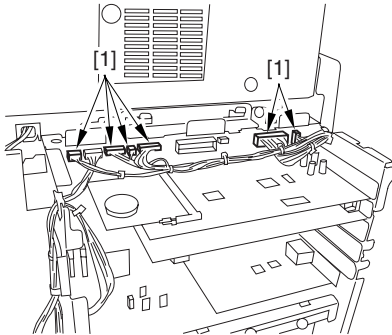


F-8-225

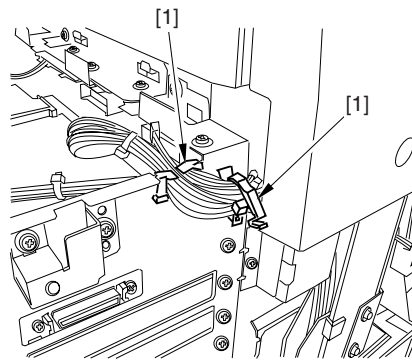


F-8-228

3) Remove the 9 screws [1] used to fix the main controller box in place.

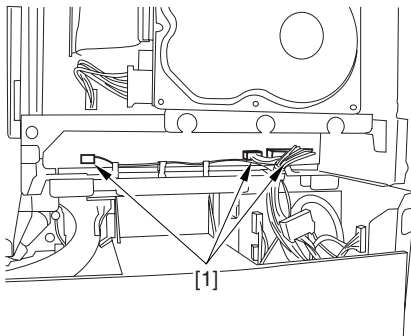


F-8-226

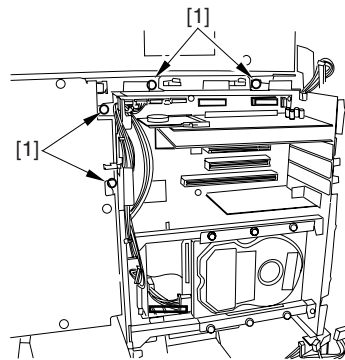


F-8-229


2) Free the harness from the 3 harness retainers [1].

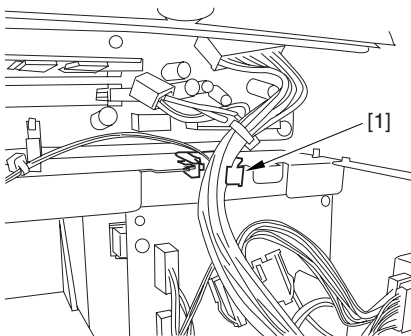

F-8-227

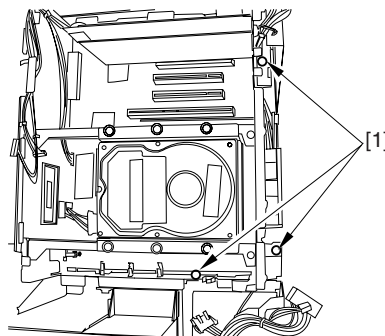


F-8-230

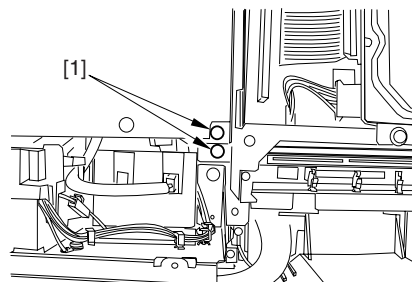


F-8-231

- 4) Slide the main controller box [1] toward the delivery side to detach.

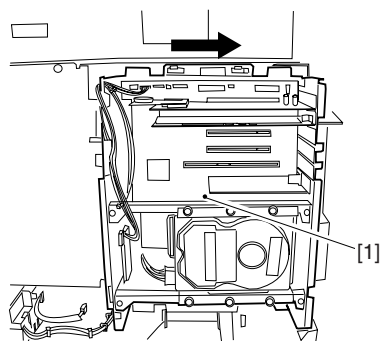

F-8-232


⚠ During removal/mounting, be sure to take care not to damage the connector [2] found at the joint to the DC controller PCB.

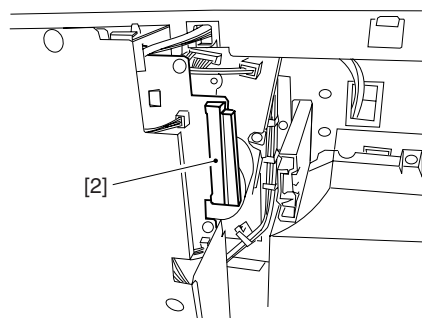

F-8-233

8.11.28.7 Removing the Outside Delivery Motor 0003-6688

- 1) Disconnect the connector [1], and remove the 2 screws; then, detach the outside delivery motor [3].

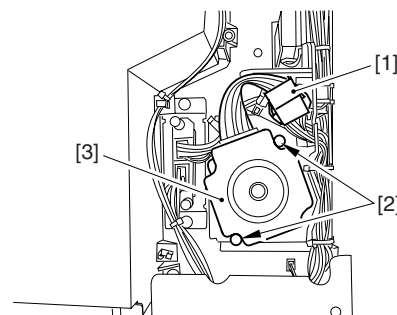

F-8-234

Chapter 9 Fixing System

Contents

9.1 Construction	9-1
9.1.1 Specifications, Control Mechanisms, and Functions	9-1
9.1.2 Major Components	9-2
9.1.3 Construction of the Control System	9-5
9.2 Basic Sequence	9-6
9.2.1 Sequence of Operation at Power-On	9-6
9.2.2 Basic Sequence of Operation (printing)	9-7
9.3 Various Control Mechanisms	9-9
9.3.1 Controlling the Speed of the Fixing Roller	9-9
9.3.1.1 Controlling the Speed According to Paper Type	9-9
9.3.1.2 Controlling the Speed for Large Volume Printing (down-sequence)	9-9
9.3.1.3 Interval Rotation	9-11
9.3.2 Controlling the Fixing Roller Temperature	9-12
9.3.2.1 Overview	9-12
9.3.2.2 At Power-On	9-13
9.3.2.3 In Standby	9-14
9.3.2.4 When Producing Mono Color (Black) Single-Sided Prints	9-15
9.3.2.5 When Producing Mono Color (Black) Double-Sided Prints	9-15
9.3.2.6 When Producing Full Color Prints	9-16
9.3.2.7 With Power Save Mode Enabled	9-17
9.3.2.8 Controlling the Overheating at the End of the Roller	9-17
9.3.3 External Heat Roller Drive Control	9-17
9.3.3.1 Overview	9-17
9.4 Fixing Cleaning Web Mechanisms	9-19
9.4.1 Overview	9-19
9.4.2 Web Retaining Mechanism	9-20
9.5 Protective Functions	9-22
9.5.1 Detecting Overheating Using Thermistors	9-22
9.5.2 Cutting Off the Power Using Thermal Switches	9-22
9.5.3 Errors	9-22
9.6 Parts Replacement Procedure	9-24
9.6.1 Fixing Unit	9-24
9.6.1.1 Removing the Fixing Assembly	9-24
9.6.1.2 Points to Note When Mounting the Fixing Assembly	9-25
9.6.2 Fixing Roller	9-25
9.6.2.1 Removing the Fixing Assembly	9-25
9.6.2.2 Removing the Fixing Upper Heater	9-27
9.6.2.3 Removing the Fixing Roller	9-28
9.6.2.4 Points to Note When Removing the Fixing Roller	9-29
9.6.3 Pressure Roller	9-29
9.6.3.1 Removing the Fixing Assembly	9-29
9.6.3.2 Removing the Fixing Lower Heater	9-31
9.6.3.3 Removing the Pressure Roller	9-31
9.6.3.4 Points to Note When Mounting the Pressure Roller	9-32
9.6.4 External Heat Roller	9-32
9.6.4.1 Removing the Fixing Assembly	9-32
9.6.4.2 Removing the Outside Heating Roller Heater	9-34
9.6.4.3 Removing the Outside Heating Roller	9-36

9.6.5 Fixing Thermistor (Upper)	9-36
9.6.5.1 Removing the Fixing Assembly	9-36
9.6.5.2 Removing the Fixing Upper Thermistor.....	9-37
9.6.5.3 Points to Note When Mounting the Fixing Upper Thermistor	9-38
9.6.6 Fixing Thermistor (Lower).....	9-38
9.6.6.1 Removing the Fixing Assembly	9-38
9.6.6.2 Removing the Fixing Lower Thermistor	9-39
9.6.6.3 Points to Note When Mounting the Fixing Lower Thermistor.....	9-40
9.6.7 External Heat Thermistor	9-41
9.6.7.1 Removing the Fixing Assembly	9-41
9.6.7.2 Removing the Outside Heating Roller Thermistor	9-42
9.6.7.3 Points to Note When Mounting the External Heat Thermistor	9-43
9.6.8 Fixing Thermal Switch	9-43
9.6.8.1 Removing the Fixing Assembly	9-43
9.6.8.2 Removing the Fixing Thermal Switch.....	9-44
9.6.8.3 Points to Note When Mounting the Fixing Thermal Switch	9-45
9.6.9 Fixing Locking Thermal Switch	9-45
9.6.9.1 Removing the Fixing Assembly	9-45
9.6.9.2 Removing the Fixing Pressure Thermal Switch	9-47
9.6.9.3 Points to Note When Mounting the Fixing Pressure Thermal Switch.....	9-47
9.6.10 Thermal Switch.....	9-48
9.6.10.1 Removing the Fixing Assembly	9-48
9.6.10.2 Removing the Outside Heating Roller Thermal Switch	9-49
9.6.10.3 Points to Note When Mounting the Outside Heating Roller Thermal Switch.....	9-49
9.6.11 Upper Fixing Heater	9-50
9.6.11.1 Removing the Fixing Assembly	9-50
9.6.11.2 Removing the Fixing Upper Heater.....	9-51
9.6.12 Lower Fixing Roller	9-52
9.6.12.1 Removing the Fixing Assembly	9-52
9.6.12.2 Removing the Fixing Lower Heater	9-53
9.6.13 Fixing Locking Heater	9-54
9.6.13.1 Removing the Fixing Assembly	9-54
9.6.13.2 Removing the Outside Heating Roller Heater	9-55
9.6.14 Fixing Web	9-57
9.6.14.1 Removing the Fixing Assembly	9-57
9.6.14.2 Removing the Fixing Web Unit.....	9-59
9.6.14.3 Removing the Fixing Web.....	9-59
9.6.14.4 Attaching the Fixing Web.....	9-59
9.6.14.5 When Replacing the Fixing Web.....	9-60
9.6.15 Fixing Motor.....	9-60
9.6.15.1 Removing the Fixing Front Cover.....	9-60
9.6.15.2 Removing the Fixing Motor	9-60
9.6.16 External Heater Shift Motor	9-61
9.6.16.1 Removing the Fixing Front Cover.....	9-61
9.6.16.2 Removing the Outside Heating Roller Shift Motor	9-61
9.6.17 Upper Separation Claw	9-62
9.6.17.1 Removing the Delivery Upper Separation Claw	9-62
9.6.18 Lower Separation Claw	9-62
9.6.18.1 Removing the Delivery Lower Separation Claw	9-6

9.1 Construction

9.1.1 Specifications, Control Mechanisms, and Functions

0003-2879

The following shows the major functions of the fixing system:

T-9-1

Item	Description
Method of fixing	by heating roller
Fixing heater	on fixing roller side 2 pc. (main heater, sub heater)
	on pressure roller side 1 pc.
	on outside heating roller side 1 pc.
Control temperature	fixing roller 200 deg C (in standby)
	pressure roller 170 deg C (in standby)
	outside heating roller 225 deg C (in standby)
Fixing temperature detection	fixing roller main thermistor THM1 (contact type; middle) sub thermistor THM4 (contact type; rear edge)
	pressure roller main thermistor THM2 (contact type; middle) sub thermistor THM5 (contact type; rear edge)
	outside heating roller main thermistor THM3 (contact type) sub thermistor THM6 (contact type; front edge)
Protective mechanism	The following mechanisms are used, and the power to the fixing heater is cut upon detection of a fault:
	-monitoring of temperature by main/sub thermistor
	-operation of thermal switch
	fixing roller: TP1 220 +/-8 deg C
	pressure roller: TP2 220 +/-8 deg C
outside heating roller: TP3 250 +/-10 deg C	
	-detection of thermistor open circuit
Separation claw	upper/lower separation claw (contact type)
Cleaning mechanism	fixing roller cleaning web
	pressure roller none
	outside heating roller none


9.1.2 Major Components

0003-2881


The following shows the major components of the fixing system:

T-9-2

Component		Notation	Description
Diameter of fixing roller			60 mm
Diameter of pressure roller			60 mm
Diameter of outside heating roller			36 mm
Fixing main heater		H1	halogen heater; 430 W (100 V), 450 W (120/230 V)
Fixing sub heater		H2	halogen heater; 400 W (100/120/230 W)
Pressure heater		H3	halogen heater; 400 W (100/120/230 W)
Outside heater		H4	halogen heater; 400 W (100 V), 500 W (120/230 V)
Main thermistor	fixing	THM1	contact type (thermal control, overheating detection)
	pressure	THM2	contact type (temperature control, overheating detection)
	outside heating	THM3	contact type (temperature control, overheating detection)
Sub thermistor	fixing	THM4	Contact type (overheating detection)
	pressure	THM5	Contact type (overheating detection)
	outside heating	THM6	Contact type (overheating detection)
Thermal switch	fixing	TP1	contact type (220 +/-8 deg C)
	pressure	TP2	contact type (220 +/-8 deg C)
	outside heating	TP3	contact type (250 +/-10 deg C)
Cleaning web			driven by fixing web solenoid (SL2) -If large size paper (B4 or larger), goes on twice per sheet -If small size (smaller than B4), goes on once per sheet
Separation claw (upper)			contact type
separation claw (lower)			contact type
Fixing inlet sensor		PS11	residual jam detection
Inside delivery sensor		PS12	detects delay/residual jam
Web solenoid		SL2	takes up cleaning web
Fixing motor		M4	DC brushless motor
Outside heating roller shift motor		M22	stepping motor

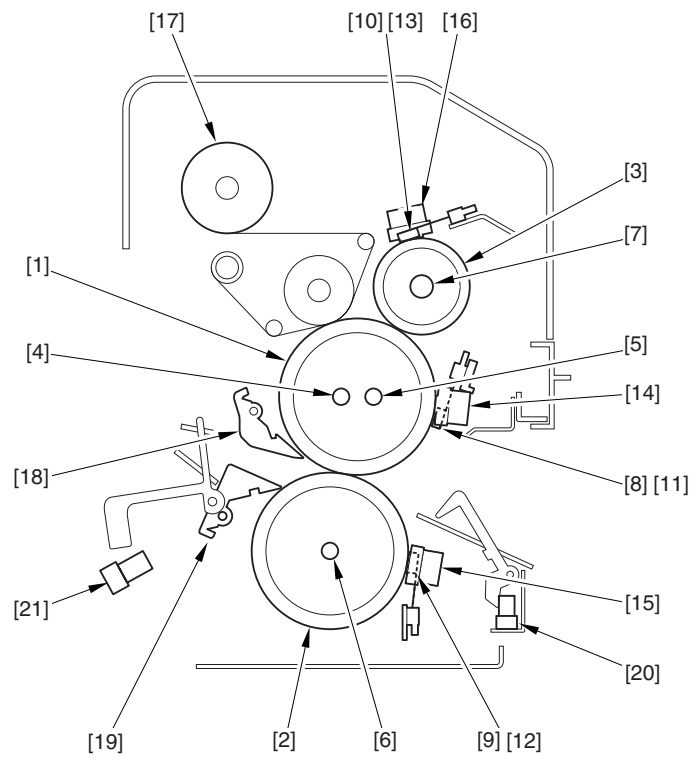

F-9-1

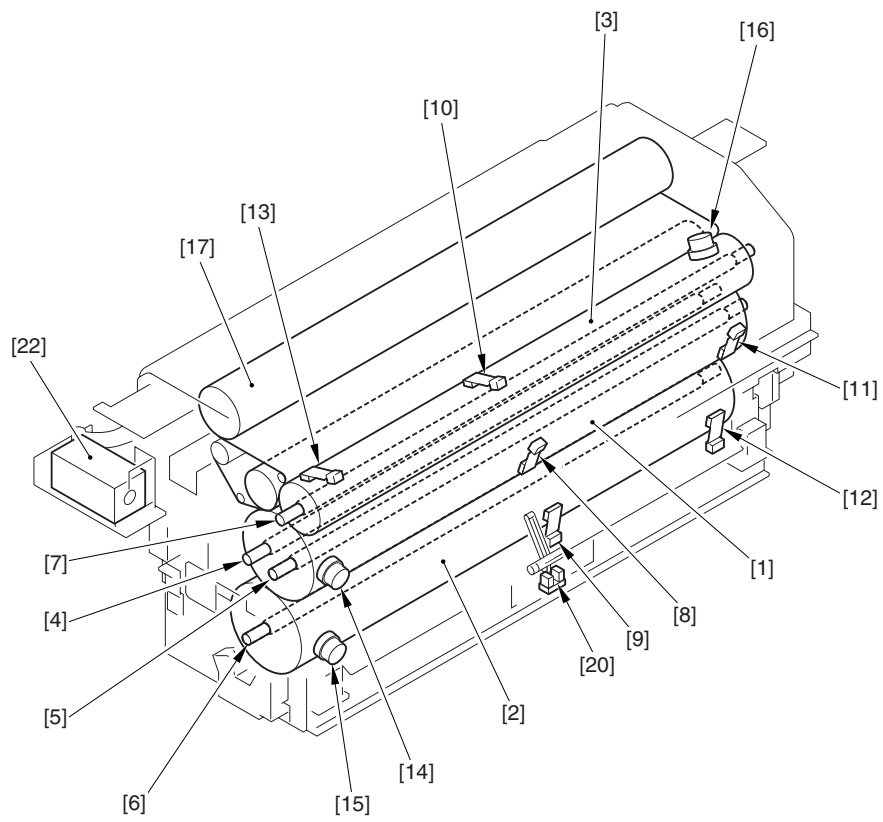

F-9-2


T-9-3

- | | |
|--------------------------------------|-------------------------------------|
| [1] Fixing roller | [12] Pressure sub thermistor |
| [2] Pressure roller | [13] Outside heating sub thermistor |
| [3] Outside heater roller | [14] Fixing thermal switch |
| [4] Fixing main heater | [15] Pressure thermal switch |
| [5] Fixing sub heater | [16] Outside heating thermal switch |
| [6] Pressure heater | [17] Cleaning web |
| [7] Outside heating roller heater | [18] Separation claw (upper) |
| [8] Fixing main thermistor | [19] Separation claw (lower) |
| [9] Pressure main thermistor | [20] Fixing inlet sensor |
| [10] Outside heating main thermistor | [21] Inside delivery sensor |
| [11] Fixing sub thermistor | [22] Web solenoid |

9.1.3 Construction of the Control System

0003-2884

The following shows the major components of the fixing system:

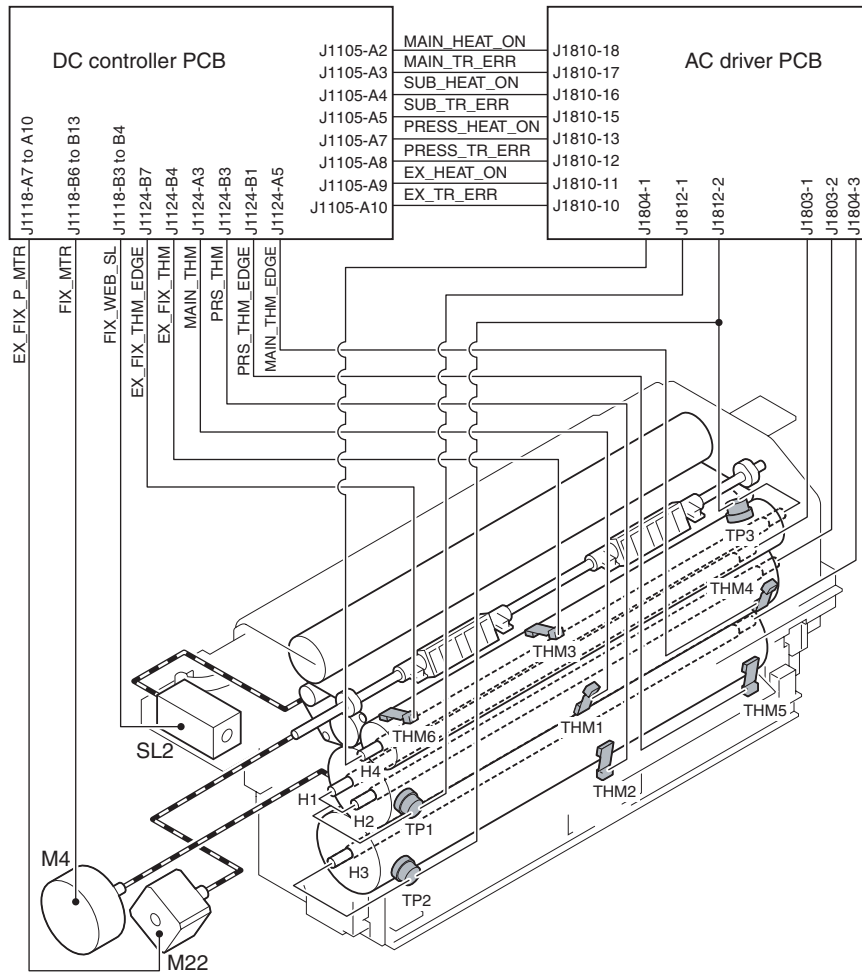


F-9-3

9.2 Basic Sequence

9.2.1 Sequence of Operation at Power-On


0003-2886

The machine starts WMUPR1 (fixing idle rotation) when the surface temperature of the outside heating roller reaches 190 deg C. It then starts WMUP2 (start-up sequence) when the fixing roller exceeds 200 deg C, the pressure roller exceeds 140 deg C, and the outside heating roller exceeds 225 deg C, at the end of which it enters the standby state.

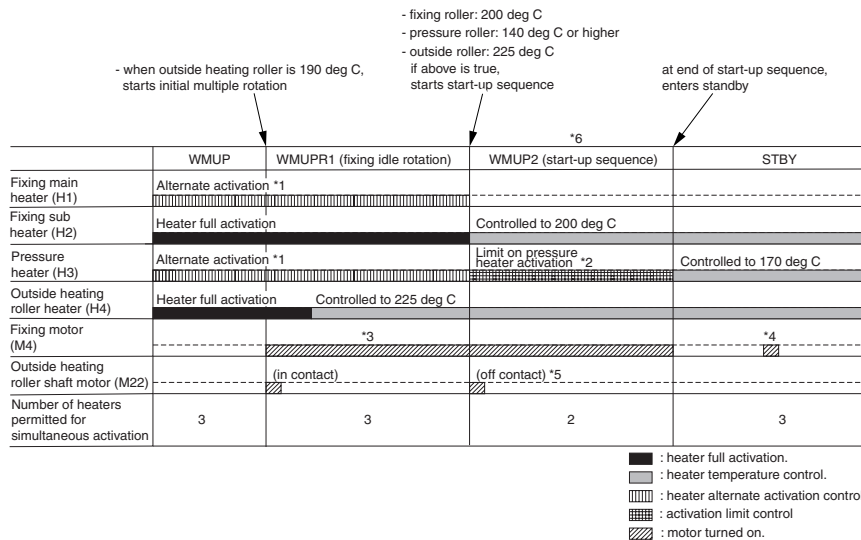

F-9-4

*1: As many as 3 heaters may simultaneously be turned on during the warm-up period (other than start-up sequence WMUP2). To start up individual rollers in the shortest time possible under the limit, the fixing main heater (H1) and the pressure heater (H34) are turned on alternately.

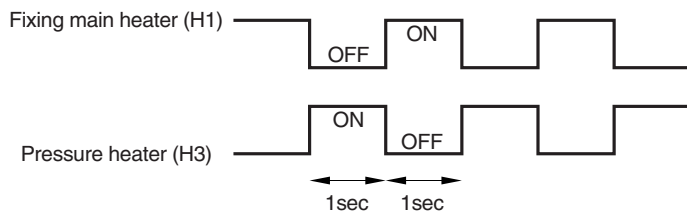

F-9-5

*2: As many as 2 heaters may simultaneously be turned on during WMUP2 (start-up sequence). In other words, during this period, the pressure heater (H3) may go on only when the fixing sub heater (HJ2) or the outside heating roller heater (H4) is off.

*3: Rotates at 1/3 speed (92 mm/sec).

*4: Rotates idly for 1 sec at 1/3 speed every 30 min after the fixing roller stops.


*5: When the fixing roller reaches 200 deg C, the outside heating roller moves away from the fixing roller.

*6: During WMUP2 (start-up sequence), the machine performs drum surface potential control, primary transfer ATVC control, and D-MAX control.

9.2.2 Basic Sequence of Operation (printing)

0003-2887

a. Mono Color (Black), Single-Sided

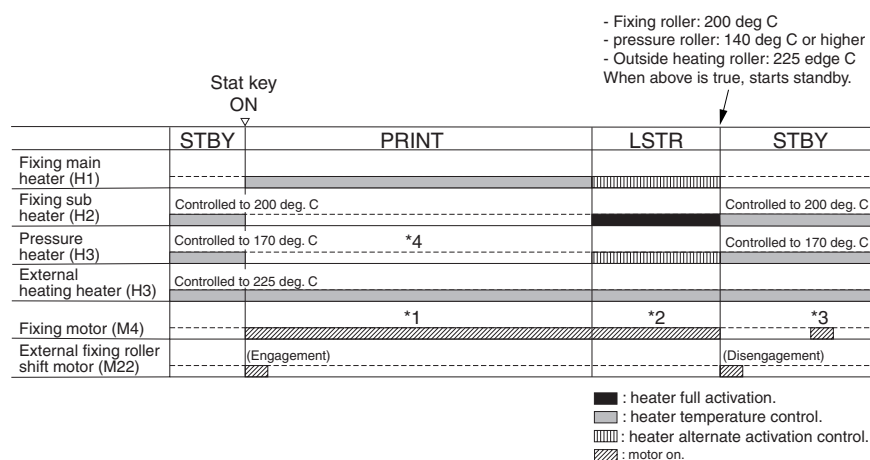

F-9-6


*1: Rotates at normal speed (276 mm/sec).

*2: Rotates at 1/3 speed (92 mm/sec).

*3: Rotates idly for 1 sec at 1/3 speed every 30 min after the fixing roller stops.

*4: In the case of the 120/230-V model, the 400-W pressure heater is turned on at 200-W equivalent during printing (by turning on and off the pressure heater very cycle of the power supply, using a control signal generated by the DC controller).

b. Mono Color (Black), Double-Sided

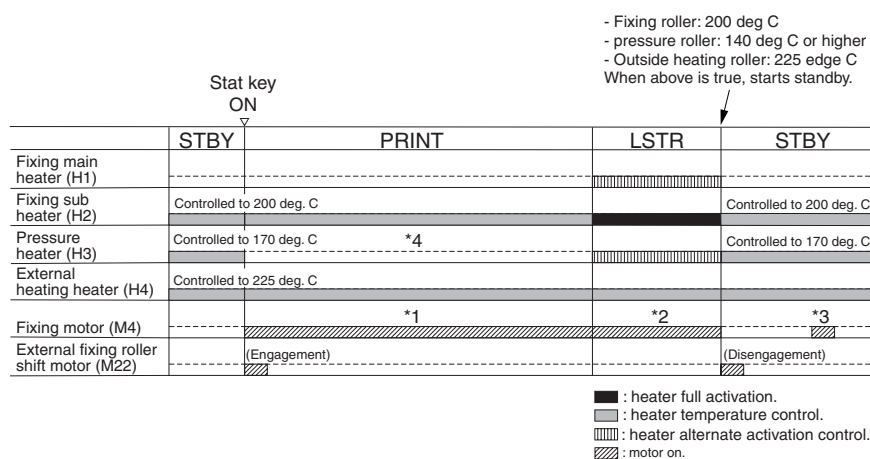

F-9-7


*1: Rotates at normal speed (276 mm/sec).

*2: Rotates at 1/3 speed (92 mm/sec).

*3: Rotates idly for 1 sec at 1/3 speed every 30 min after the fixing roller stops.

*4: In the case of the 120/230-V model, the 400-W pressure heater is turned on at 200-W equivalent during printing (by turning on and off the pressure heater for every single cycle of the power supply using a control signal generated by the DC controller).

c. Full Color

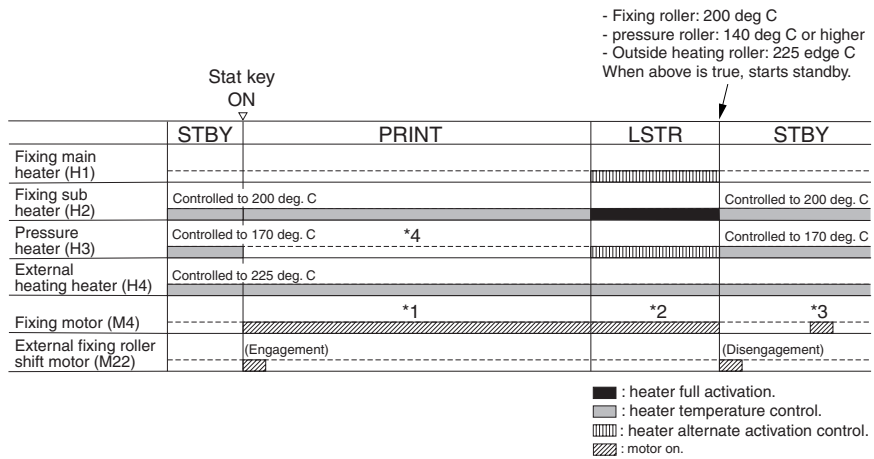

F-9-8

- *1: In the case of plain paper (64 to 105 g/m²), rotates at normal speed (276 mm/sec); if heavy paper 1 (106 to 163 g/m²), rotates at 2/3 speed (184 mm/sec); if heavy paper 2 (64 to 209 g/m²), heavy paper 3 (164 to 250 g/m²) or transparency, rotates at 1/3 speed (92 mm/sec).
- *2: Rotates at 1/3 speed (92 mm/sec).
- *3: Rotates idly for 1 sec at 1/3 speed every 30 min after the fixing roller stops.
- *4: In the case of the 120/230-model, the 400-W pressure heater is turned on at 200-W during printing (by turning on and off the pressure heater for every single cycle of the power supply using a control signal generated by the DC controller).

9.3 Various Control Mechanisms

9.3.1 Controlling the Speed of the Fixing Roller

9.3.1.1 Controlling the Speed According to Paper Type

0003-2889

The machine controls the fixing roller to any of 3 speeds according to paper type.

T-9-4

	Paper type	Fixing speed
Mono color print	plain paper	normal speed (276 mm/sec)
	heavy paper, transparency, postcard	normal speed (276 mm/sec)
Color print	plain paper (64 to 105 g/m ²)	normal speed (276 mm/sec)
	heavy paper (106 to 163 g/m ²), postcard	2/3 speed (184 mm/sec)
	heavy paper 2 (164 to 209 g/m ²), heavy paper 3 (210 to 250 g/m ²), transparency	1/3 speed (92 mm/sec)

9.3.1.2 Controlling the Speed for Large Volume Printing (down-sequence)

0003-2890

If the main thermistor (THM1) of the machine's fixing roller identifies the surface temperature of the fixing roller as being any of the following, the machine starts down-sequence, in which distance between sheets is increased to decrease the speed of printing, thereby preventing poor fixing otherwise caused by drops in the roller temperature when continuous printing is under way.

The speed of printing is relatively low in color mode and, therefore, the temperature of the fixing roller rarely drops, thus not calling for down-sequence.

The following is a table of control mechanisms used for down-sequence prepared according to site environments and paper types; the notations within the table indicate the following:

LV: down-sequence level

deg C: temperature of the fixing roller triggering down-sequence

PPM: printing speed

Toner fixing starts to fail when the temperature of the fixing roller drops to level 4 or below. The machine, therefore, stops (suspends) printing when it detects a level 4 condition; it then starts (resumes) printing using the speed it used at the start when the temperature of the fixing roller returns to the recovery level.

If the room temperature is less than 20 deg C and heavy paper or a transparency is used, the machine reduces its print speed (except when heavy paper 1 is used for the 120V or 230V model).

Memo:

If you changed the setting in service mode(*), the particulars of the down sequence table may not be as shown below: for instance, if '1' (priority on fixing) is selected, the down sequence start temperature tends to be slightly higher; on the other hand, if '2' is selected (priority on productivity), the temperature tends to be slightly lower.

* The following applies:

Plan paper: COPIER>OPTION>BODY>FIX-TEMP

Heavy paper 1: COPIER>OPTION>BODY>T1-TEMP

Heavy paper 2: COPIER>OPTION>BODY>T2-TEMP

Heavy paper 3, transparency: COPIER>OPTION>BODY>OHP-TEMP

a. 100V Model, A4 Paper, Room Temperature of 20 deg C or Higher

T-9-5

Plain paper			Heavy paper 1			Heavy paper 2			Heavy paper 3/ transparency		
LV	deg C	PPM	LV	deg C	PPM	LV	deg C	PPM	LV	deg C	PPM
Initial		68	Initial		68	Initial		68	Initial		40
1	174	60	1	184	40	1	184	40	1	184	40
2	173	50	2	180	30	2	180	30	2	180	30
3	172	35	3	176	20	3	176	20	3	176	20
4	170	Stop	4	173	Stop	4	173	Stop	4	173	Stop
Recovery	185	68	Recovery	200	68	Recovery	200	68	Recovery	200	40

b. 100-V Model, A4 Paper, Room Temperature of Lower Than 20 deg C

T-9-6

Plain paper			Heavy paper 1			Heavy paper 2			Heavy paper 3/ transparency		
LV	deg C	PPM	LV	deg C	PPM	LV	deg C	PPM	LV	deg C	PPM
Initial		68	Initial			Initial			Initial		
1	174	60	1		30	1		30	1		30
2	173	50	2	188	20	2	188	20	2	188	20
3	172	35	3	184	15	3	184	15	3	184	15
4	170	Stop	4	182	Stop	4	182	Stop	4	182	Stop
Recovery	185	68	Recovery	200	30	Recovery	200	30	Recovery	200	30

c. 120/230-V Model, A4 Paper, Room Temperature of 20 deg C or Higher

T-9-7

Plain paper			Heavy paper 1			Heavy paper 2			Heavy paper 3/ transparency		
LV	deg C	PPM	LV	deg C	PPM	LV	deg C	PPM	LV	deg C	PPM
Initial		68	Initial		68	Initial		68	Initial		40
1	171	60	1	184	50	1	184	50	1	184	40
2	170	50	2	180	40	2	180	40	2	176	30
3	169	35	3	176	30	3	176	30	3	174	25
4	167	Stop	4	173	Stop	4	173	Stop	4	173	Stop
Recovery	185	68	Recovery	200	68	Recovery	200	68	Recovery	200	40

d. 120/230-V Model, A4 Paper, Room Temperature of Lower Than 20 deg C

T-9-8

Plain paper			Heavy paper 1			Heavy paper 2			Heavy paper 3/ transparency		
LV	deg C	PPM	LV	deg C	PPM	LV	deg C	PPM	LV	deg C	PPM
Initial		68	Initial		68	Initial			Initial		
1	171	60	1	188	40	1		40	1		40
2	170	50	2	182	30	2	188	30	2	188	30
3	169	35	3	178	20	3	184	20	3	184	20
4	167	Stop	4	176	Stop	4	182	Stop	4	182	Stop
Recovery	185	68	Recovery	200	68	Recovery	200	40	Recovery	200	40

9.3.1.3 Interval Rotation

0003-2891

To prevent deformation that could otherwise occur on the fixing roller (nip) if the machine is left alone for a long time in a temperature control state, the fixing roller is rotated (interval rotation) at 92 mm/sec (1/3 speed) every 30 min while the machine is in standby.


The interval rotation is also executed in power save mode and low power mode, and the intervals of rotation may be changed in service mode: COPIER>OPTION>BODY>FX-CROT).

9.3.2 Controlling the Fixing Roller Temperature

9.3.2.1 Overview

0003-2893

Each of the heat rollers of the fixing assembly is controlled based on the output of the main thermistor mounted in contact with the center of the roller. The sub thermistor mounted in contact with the edge of the roller is used to detect overheating at the edge of the roller, which can occur when small-size paper (e.g., A4R) is move past continuously. The mechanisms used to control these individual heat rollers are as follows:

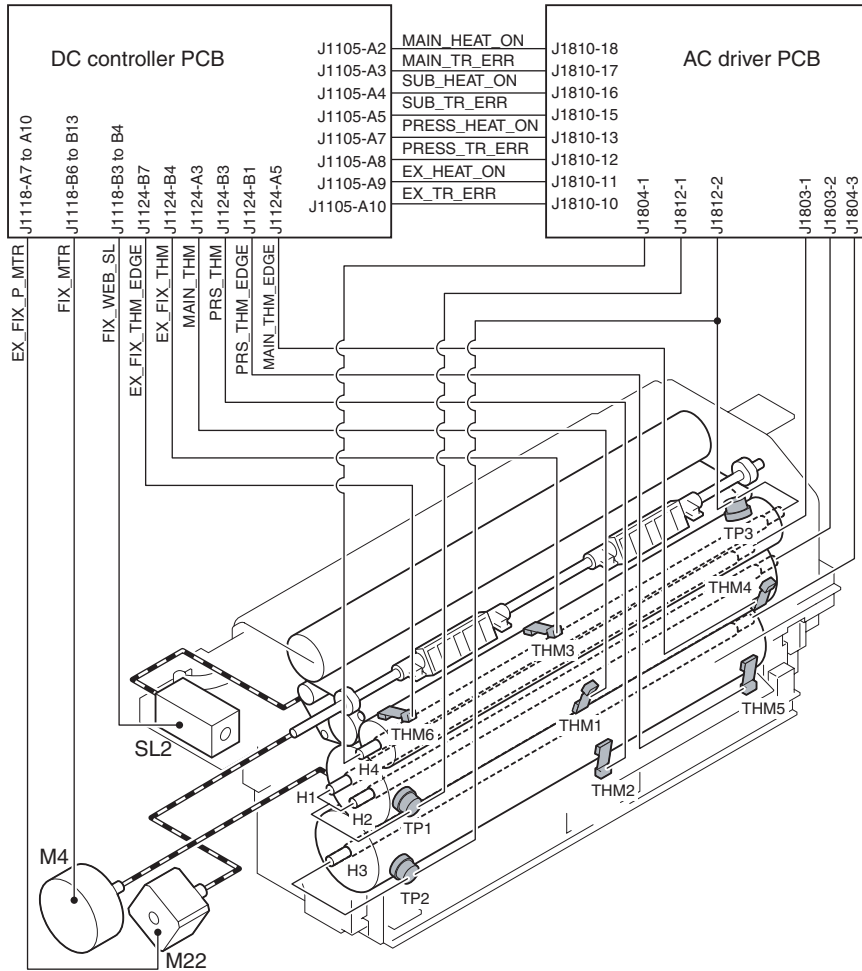

F-9-9

9.3.2.2 At Power-On

0003-2894

The fixing roller is heated by the fixing main heater (H1) and the fixing sub heater (H2), while the pressure roller is heated by the pressure heater (H3). The outside heating roller, on the other hand, is heated by the outside heating roller heater (H4).

During the warm-up period (other than start-up sequence), as many as 3 heaters may simultaneously be turned on. To start up each of the rollers in the shortest time possible, the fixing sub heater and the outside heating roller heater are turned on for full activation, while alternately turning on the fixing main heater and the pressure heater.


When the outside heating roller reaches 190 deg C, the outside pressure roller shift motor (M22) goes on to move the outside heating roller into contact with the fixing roller, thereby starting fixing idle rotation. The outside heating roller remaining in contact with the fixing roller helps increase the temperature of the fixing roller.

When the fixing roller reaches 200 deg C, the outside heating roller shift motor (M22) goes on so that the outside heating roller moves away from the fixing roller.

When the fixing roller reaches 200 deg C, the pressure roller reaches 140 deg C, and the outside heating roller reaches 225 deg C, the machine starts start-up sequence, causing the fixing main heater to go off. The outside heating roller heater is put under temperature control when the outside heating roller reaches 225 deg C; on the other hand, the fixing sub heater is put under temperature control when the fixing roller reaches 200 deg C.


As no more than 2 heaters may be turned on simultaneously while start-up sequence is under way, the pressure heater may be turned on only while either the outside heating roller heater or the fixing sub heater remains off. When the temperature of the pressure roller reaches 170 deg C, the pressure heater is put under temperature control.

The warm-up period ends when the start-up sequence ends, causing the machine to enter the standby state.

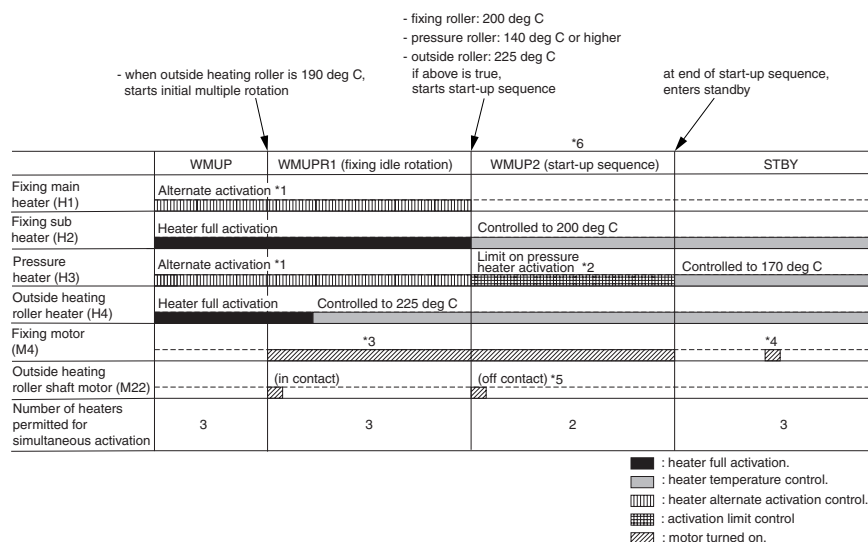

F-9-10

*1: As many as 3 heaters may be turned on at a time during warm-up (other than during start-up sequence WMUP2). To start up the rollers in the shortest time possible under this limit, the fixing heater (H1) and the pressure heater (H3) are turned on alternately.

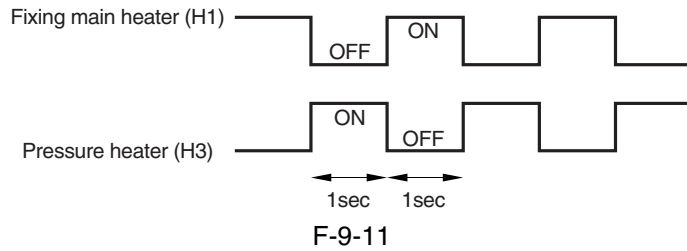

*2: As many as 2 heaters may be turned on at a time while start-up sequence (WMUP2) is under way; in other words, the pressure heater (H3) may be turned on only when either the fixing sub heater (H2) or the outside heating roller heater (H) is off.

*3: Rotates at 1/3 speed (92 mm/sec).

*4: Rotates idly for 1 sec at 1/3 speed every 30 min after the fixing roller stops.

*5: The outside heating roller moves away from the fixing roller when the fixing roller reaches 200 edge C.

*6: While start-up sequence (WMUP2) is under way, the machine executes drum surface potential control, primary transfer ATVC control, and D-MAX control.

9.3.2.3 In Standby

0003-2895

When the machine is in standby, the fixing roller is controlled to 200 deg C, pressure roller to 170 deg C, and outside heating roller to 225 deg C.

STBY	
Fixing main heater (H1)	
Fixing sub heater (H2)	Controlled to 200 deg. C
Pressure heater (H3)	Controlled to 170 deg. C
External heating heater (H4)	Controlled to 225 deg. C
Fixing motor (M4)	*1
External heating rollershift motor (M22)	

: heater temperature control.
 : motor on.


F-9-12

*1: Rotates idly for 1 sec at 1/3 speed every 3 min after the fixing roller stops.

9.3.2.4 When Producing Mono Color (Black) Single-Sided Prints

0003-2896

A roller tends to be deprived of heat as a result of contact with paper while the machine is making mono color single-sided prints (especially in continuous printing). The machine, therefore, uses the fixing main heater (H1), which has high output, and executes temperature control at 200 deg C. The outside heating roller is controlled to 225 deg C by the work of the outside heating roller heater.

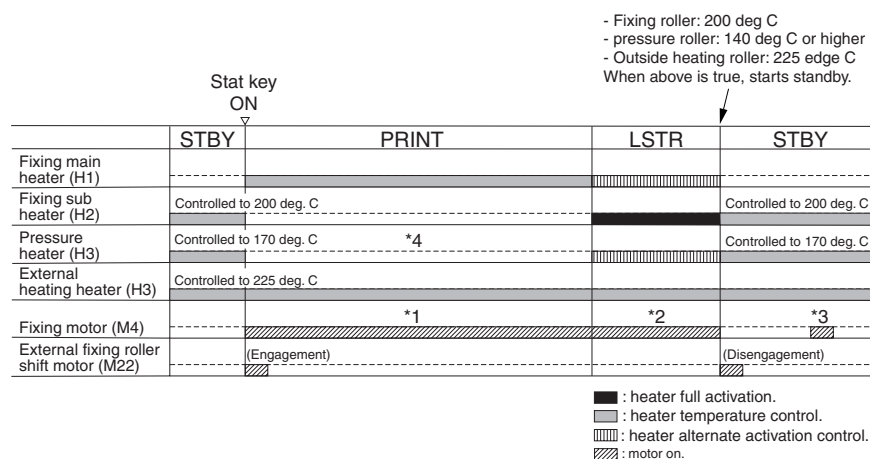

F-9-13

*1: Rotates at normal speed (276 mm/sec).

*2: Rotates at 1/3 speed (92 mm/sec).


*3: Rotates idly for 1 sec at 1/3 speed every 30 min after the fixing roller stops.

*4: In the case of the 120/230-V model, the 400-W pressure heater is turned on at 200-W equivalent during printing (by turning on and off the pressure heater for every single cycle of the power supply using the control signal generated by the DC controller).

9.3.2.5 When Producing Mono Color (Black) Double-Sided Prints

0003-2897

The fixing roller is controlled to 200 deg C by the fixing sub heater (H2), and the outside heating roller heater is controlled to 225 deg C by the outside heating roller heater.

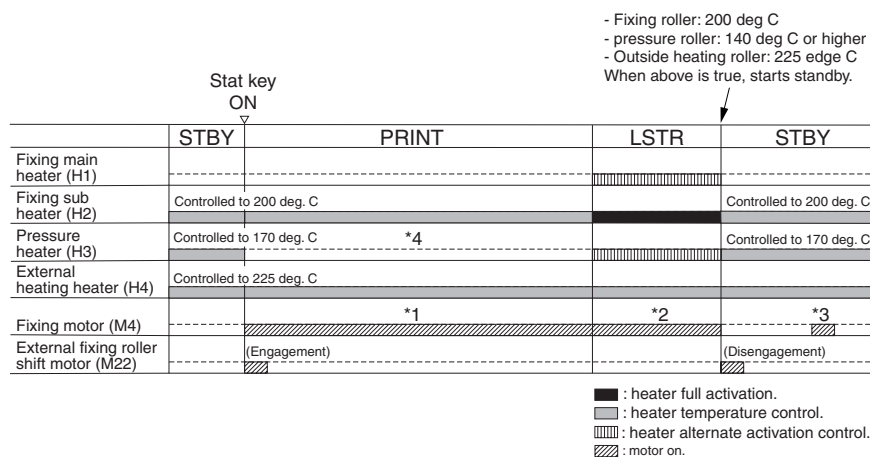


F-9-14

- *1: Rotates at normal speed (276 mm/sec).
- *2: Rotates at 1/3 speed (92 mm/sec).
- *3: Rotates idly for 1 sec at 1/3 speed every 30 min after the fixing roller stops.
- *4: In the case of the 120/230-V model, the 400-W heater is turned on at 200-W equivalent during printing (by turning the pressure heater on and off for every single cycle of the power supply using the control signal generated by the DC controller).

9.3.2.6 When Producing Full Color Prints

0003-2898

The fixing roller is controlled to 200 deg C by the fixing sub heater (H2), and the outside heating roller is controlled to 225 deg C by the outside heating roller heater.

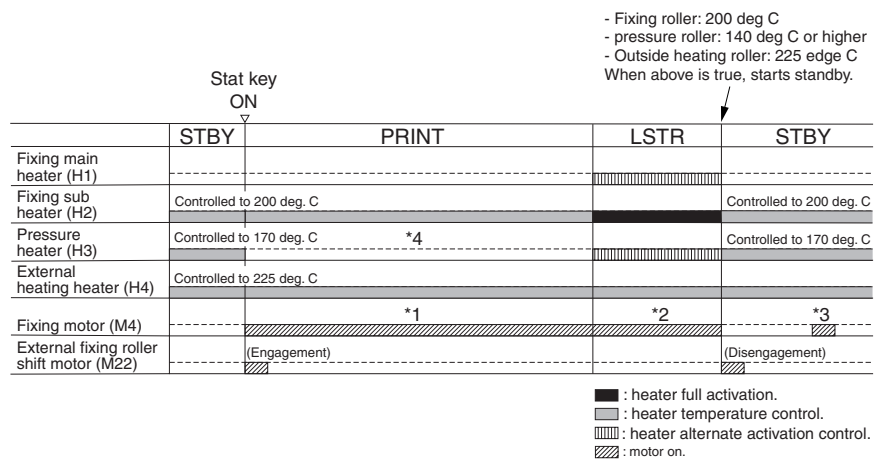

F-9-15

- *1: In the case of plain paper (64 to 105 g/m²), rotates at normal speed (276 mm/sec); if heavy paper 1 (106 to 163 g/m²), at 2/3 speed (184 mm/sec); if heavy paper 2, heavy paper 3 (164 to 250 g/m²), or transparency, at 1/3 speed (92 mm/sec).
- *2: Rotates at 1/3 speed (92 mm/sec).
- *3: Rotates idly for 1 sec at 1/3 speed every 30 min after the fixing roller stops.
- *4: In the case of the 120/230-V model, the 400-W pressure heater is turned on at 200-W equivalent during printing (by turning on and off the pressure heater for every single cycle of the power supply using a control signal generated by the DC controller).

9.3.2.7 With Power Save Mode Enabled

0004-3516

The following shows the temperature to which the individual rollers of the fixing assembly are controlled when the machine enters low power mode or power save mode, with the lengths of time between when the power save mode is disabled and when the machine enters the standby (STBY) state.

In sleep mode, all fixing heaters are off.

T-9-9

	STBY	Low power mode	Power save mode		
			-10%	-25%	-50%
Fixing roller	200 deg C	110 deg C	180 deg C	150 deg C	85 deg C
Pressure roller	170 deg C	110 deg C	170 deg C	150 deg C	85 deg C
Outside heating roller	225 deg C	110 deg C	200 deg C	150 deg C	85 deg C
Recovery time	--	about 240 sec	about 70 sec	about 150 sec	about 450 sec

9.3.2.8 Controlling the Overheating at the End of the Roller

0005-4713

If the end of the heat roller overheats as when small-size paper (e.g., A4R) is moved past continuously and, as a result, if the sub thermistor detects any of the following temperatures, the heater will be forced off to avoid damage to the heat roller.

The overheating control mechanism is executed when printing in mono color mode or at time of recovery, and is not executed in color mode, in which sheets are moved at longer intervals.

T-9-10

Heater (that is forced off)	Sub thermistor	Control temperature
Fixing main/sub heater (H1/H2)	THM4	215 deg C
Pressure heater (H3)	THM5	185 deg C
Outside heating roller heater (H4)	THM6	240 deg C

9.3.3 External Heat Roller Drive Control

9.3.3.1 Overview

0003-2899

The outside heating roller helps the temperature control mechanism for the fixing roller by remaining in contact with the fixing roller during warm-up, printing, and last rotation.


The outside heating roller is moved in contact with or away from the fixing roller by the drive of the outside heating roller shift motor (M22).

When the temperature of the fixing roller reaches 190 deg C during warm-up to start initial multiple rotation or when printing starts, the outside heating roller shift motor (M22) goes on (normal direction of rotation) to move the outside heating roller in contact with the fixing roller.

When the temperature of the fixing roller reaches 200 deg C during warm-up or when last rotation ends, the outside heating roller shift motor goes on (in reverse direction of rotation) to move the outside heating roller away from the fixing roller. When the paper jam also occurs, the outside heating roller shift motor goes on to move the outside heating roller away from the fixing roller.

The timing at which the outside heating roller is moved is monitored using the outside heating roller HP sensor (PS21) for the following:

- When the main power switch is turned on
- When the front cover, upper right cover, or lower right cover is opened/closed
- When the power save mechanism (power save mode, low power mode, sleep mode) is disabled

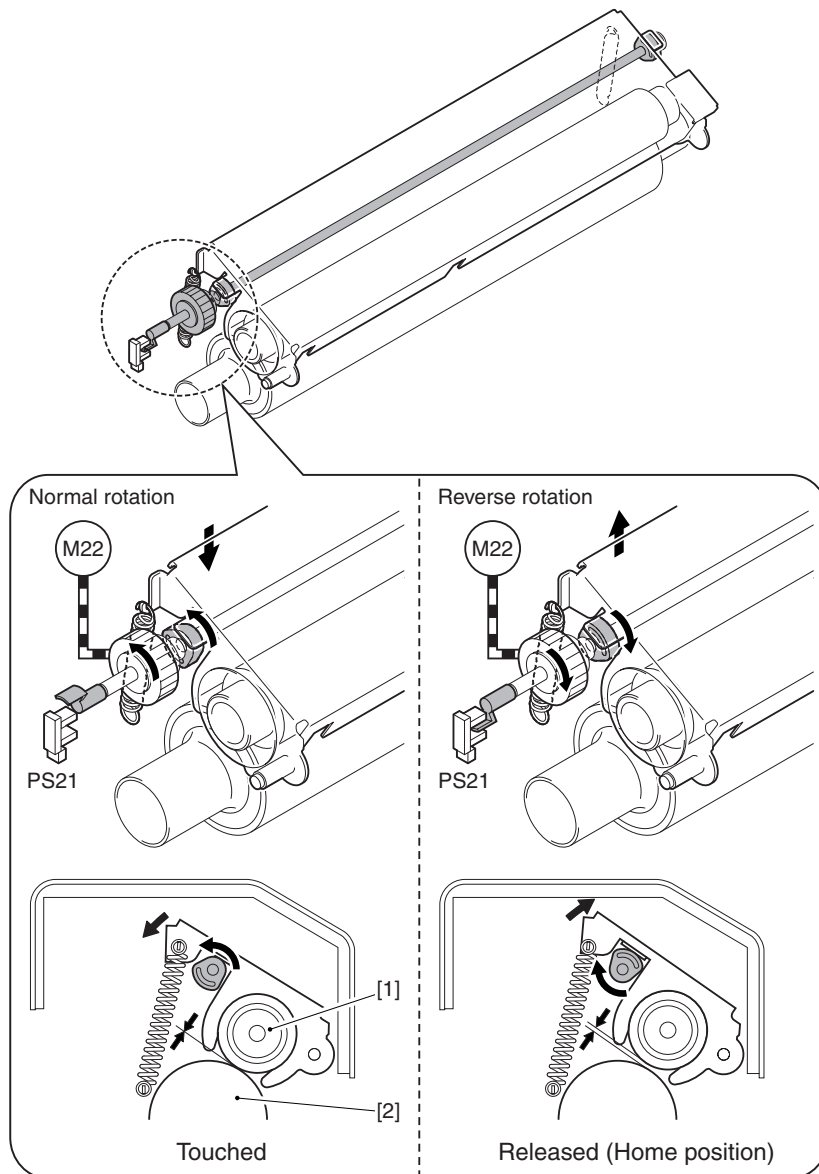

F-9-16

[1] Outside heating roller


[2] Fixing roller

9.4 Fixing Cleaning Web Mechanisms

9.4.1 Overview

0003-2900

The cleaning web used to clean the fixing upper roller is fed by means of a one-way clutch (fixing web solenoid SL2). The web is fed coinciding with the detection of the leading edge of paper by the registration sensor (PS9) while printing is under way. The remaining length of the web is checked by the following 2 ways:

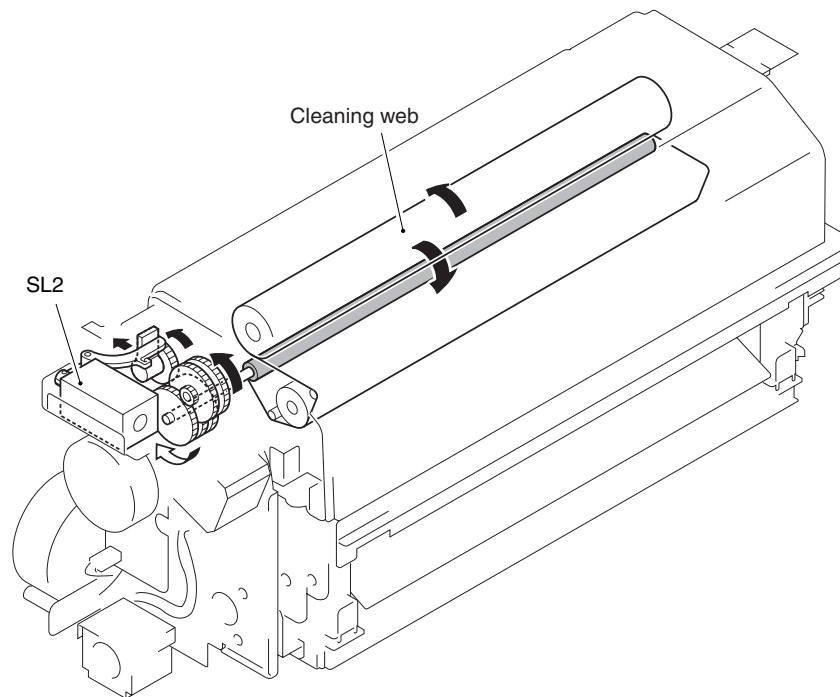


F-9-17

When the web detecting lever moves off the web at the cut-off, the lever that has been blocking the web length sensor (PS20) moves away from the sensor, thus causing the machine to indicate a pre-warning(*1) to alert the user that the web is running out. If the fixing web solenoid goes on 3,000 times(*2) without replacement of the web, the machine will then indicate 'E005' on its control panel.

*1: The alert indication may be disabled in service mode: COPIER>OPTION>USER>WEB-DISP.

*2: The count may be checked in service mode: COPIER>COUNTER>MISC>FIX-WEB.

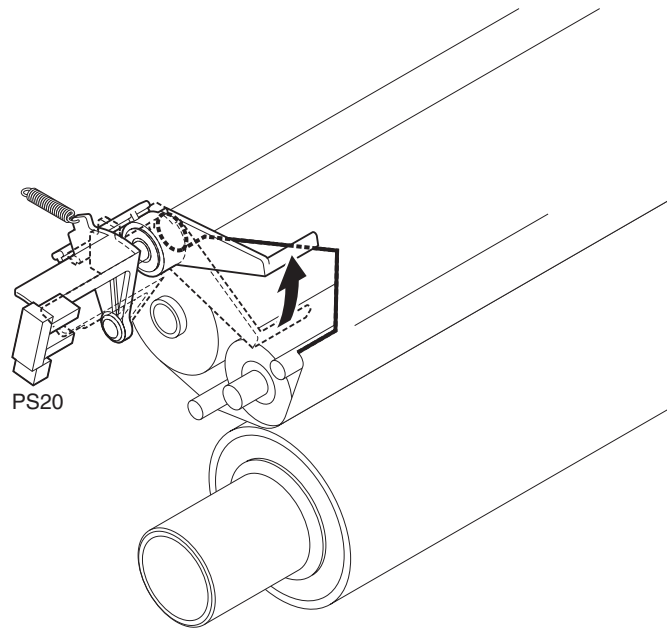

F-9-18

⚠ Whenever you have replaced the fixing web, be sure to reset the following service mode item to '0':

COPIER>COUNTER>MISC>FIX-WEB

COPIER>COUNTER>DRBL-1>FX-WEB

9.4.2 Web Retaining Mechanism

0004-3925

The web retaining pad is used to hold the web in place (i.e., to keep it from becoming slack) when the fixing roller is rotated in reverse, as when a paper jam is being removed.


The web retaining pad is fixed in place to the shaft to which the cam used to move the outside heating roller to and from the fixing roller is attached; while the outside heating roller is in contact with the fixing roller, the pad is away from the web, coming into contact to hold the web in place when the outside roller moves away from the fixing roller.



The machine indicates the message "Printer is warming up..." on its LCD while it executes last rotation after printing.

While the message is on the LCD, the fixing roller is under temperature control, and the outside heating roller is in contact with the fixing roller, i.e., the web retaining pad is away from the web. If you open the front cover and turn the fixing assembly release knob, the web will become slack and possibly displaced. Do not open the front door while the message is on the LCD. If you must, do not turn the fixing assembly releasing knob.

The web retainer is also away from the web when you force the front cover to open while printing or fixing idle rotation is under way during warm-up: be sure to keep this in mind during service work.

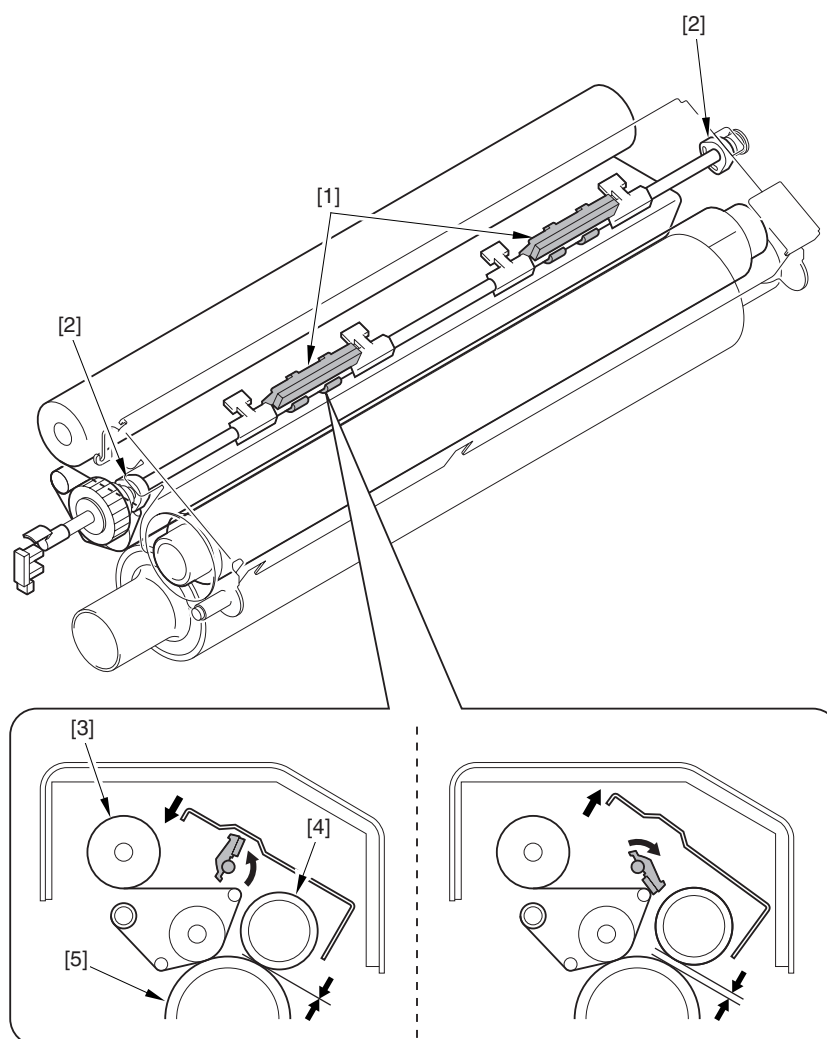

F-9-19

- [1] Web retaining pad
- [2] Cam
- [3] Cleaning Web
- [4] Outside heating roller
- [5] Fixing roller

9.5 Protective Functions

9.5.1 Detecting Overheating Using Thermistors

0003-2901

The main thermistor and the sub thermistor of individual rollers may detect any of the following temperatures; in response, the DC controller issues signals to cut off the heater drive circuit, thereby depriving the heaters of power.

T-9-11

	Main (middle)	Sub (end)
Fixing roller	235 deg C	245 deg C
Pressure roller	200 deg C	210 deg C
External heating roller	245 deg C	247 deg C

9.5.2 Cutting Off the Power Using Thermal Switches

0003-2902

If the reading of the inside temperatures of the thermal switch of individual rollers indicates a temperature higher than the following, the thermal switch goes off to stop the power to the fixing heater:

Fixing roller: 220 +/-8 deg C

Pressure roller: 220 +/-8 deg C

Outside roller: 250 +/-10 deg C

9.5.3 Errors

0003-2903

Related Error

E000 (inadequate rise in temperature of the fixing assembly at power-on)

The main thermistor (THM1, THM2, THM3) has an open circuit or poor contact. The thermal switch (TP1, TP2, TP3) has an open circuit. The heater (H1, H2, H3, H4) has an open circuit. The AC driver PCB is faulty. The DC controller PCB is faulty.

A check is made during initial multiple rotation.

E001 (overheating of the fixing assembly)

The main thermistor (THM1, THM2, THM3) has an open circuit or poor contact. The sub thermistor (THM4, THM5, THM6) has an open circuit or poor contact. The thermal switch (TP1, TP2, TP3) has an open circuit. The heater (H1, H2, H3, H4) has an open circuit. The AC driver PCB is faulty. The DC controller PCB is faulty.

A check is made at all times.

E002 (inadequate rise in temperature of the fixing assembly)

The main thermistor (THM1, THM2, THM3) has an open circuit or poor contact. The thermal switch (TP1, TP2, TP3) has an open circuit. The heater (H1, H2, H3, H4) has an open circuit. the AC rive PCB is faulty. The DC controller PCB is faulty.

A check is made during initial multiple rotation.

E003 (abnormal drop in temperature of the fixing assembly after standby)

The main thermistor (THM1, THM2, THM3) has an open circuit or poor contact. The thermal switch (TP1, TP2, TP3) has an open circuit. The heater (H1, H2, H3, H4) has an open circuit. The AC driver PCB is faulty. The DC controller PCB is faulty.

Detail code: 004X

A check is made during standby.

Detail code: 005X

A check is made during printing.

E004 (fixing assembly protection circuit error)

The main thermistor (THM1, THM2, THM3) has an open circuit or poor contact. The sub thermistor (THM4, THM5, THM6) has an open circuit or poor contact. The AC driver PCB is faulty. The DC controller PCB is faulty.

A check is made during initial multiple rotation.

E005 (web take-up error)

The fixing web has been taken up. The web length sensor (PS20) is faulty. The DC controller PCB is faulty. The fixing web solenoid is not connected.

E006 (fixing assembly connection error)

The fixing/feed unit is not fitted correctly (the fixing assembly is not detected even when the front cover is identified as being closed). The DC controller PCB is faulty.

A check is made at all times.

E008 (fixing roller end of life)

As many as 20,000 prints(*) have been counted after a message has been issued to prompt replacement of the fixing roller. The DC controller is faulty.

* May be changed in service mode: COPIER>OPTION>BODY>FXERRLVL.

E009 (outside heating roller shift error)

The outside heating roller shift motor (M22) is faulty. The outside heating roller HP sensor (PS21) is faulty. The DC controller PCB is faulty.

A check is made at all times.


9.6 Parts Replacement Procedure

9.6.1 Fixing Unit

9.6.1.1 Removing the Fixing Assembly


0002-9347

- 1) Open the front cover.
- 2) Slide out the fixing/feeding assembly.
- 3) Push the leaf springs [1] found at the left and right to slide farther out the fixing/feeding assembly [2].

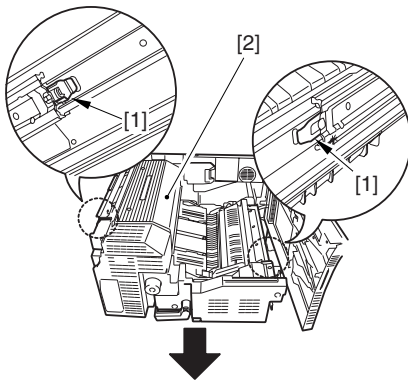


F-9-20

- 4) Open the reversal delivery cover [1] and the middle cover [2].

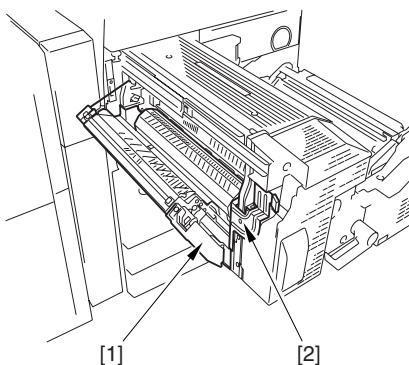


F-9-21

- 5) Remove the screw [1] and the 2 screws [2]; then, detach the fixing front cover [3].

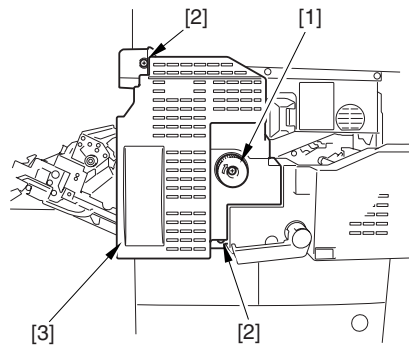


F-9-22

- 6) Remove the 3 screws [1], and disconnect the 3 connectors [2]; then, after shifting the timing belt [3] to the front, detach it together with the fixing motor base [4].

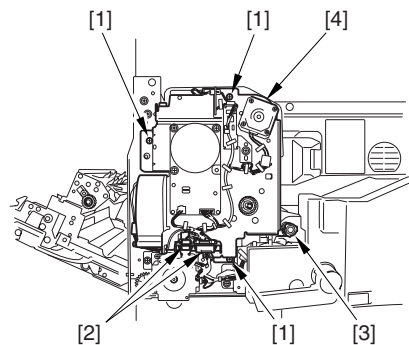


F-9-23

- 7) Remove the screw [2] found at the rear of the fixing assembly [1].

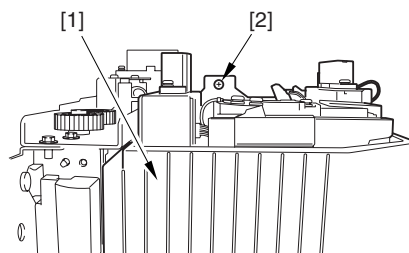


F-9-24

- 8) Holding the 2 grips [1], detach the fixing assembly [2].

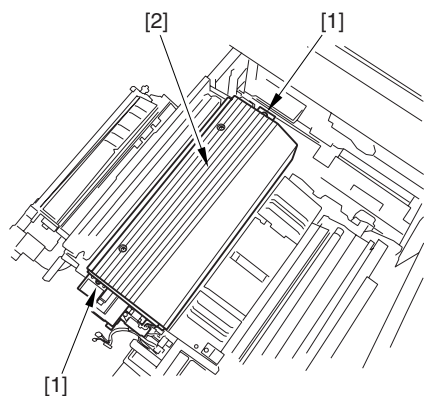

F-9-25

- ⚠ When lifting the fixing assembly, be sure to take care not to touch the web length detecting arm [1] so that the arm will be free of damage.

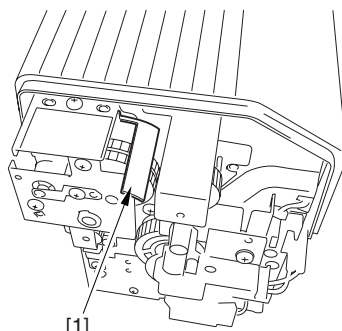


F-9-26

9.6.1.2 Points to Note When Mounting the Fixing Assembly

0002-9355

- ⚠ When fitting the fixing assembly into the fixing/feeding assembly, take full care not to damage the 2 sensors [1].

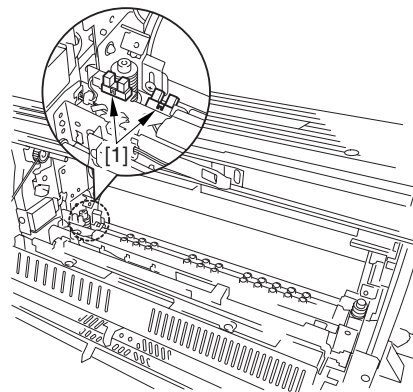


F-9-27

9.6.2 Fixing Roller

9.6.2.1 Removing the Fixing Assembly


0003-3900

- 1) Open the front cover.
- 2) Slide out the fixing/feeding assembly.
- 3) Push the leaf springs [1] found at the left and right to slide farther out the fixing/feeding assembly [2].

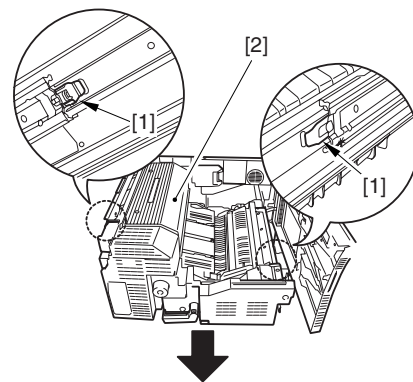


F-9-28

4) Open the reversal delivery cover [1] and the middle cover [2].

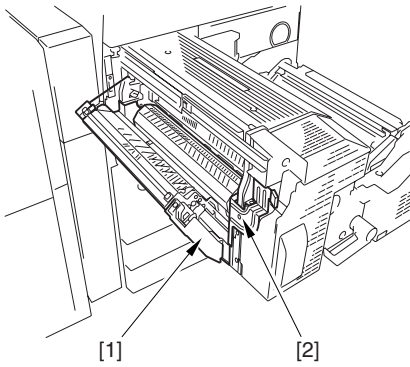


F-9-29

5) Remove the screw [1] and the 2 screws [2]; then, detach the fixing front cover [3].

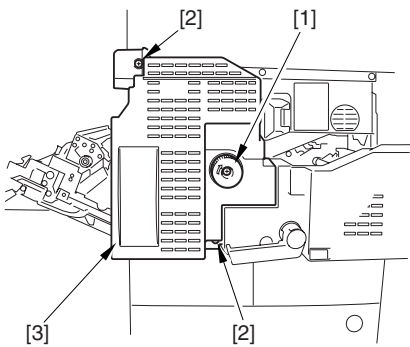


F-9-30

6) Remove the 3 screws [1], and disconnect the 3 connectors [2]; then, after shifting the timing belt [3] to the front, detach it together with the fixing motor base [4].

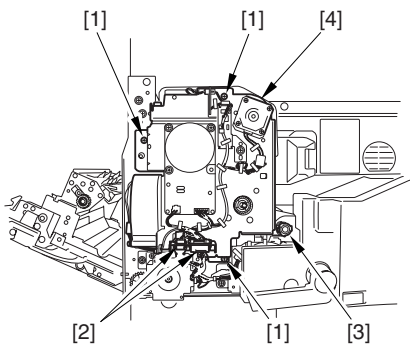


F-9-31

7) Remove the screw [2] found at the rear of the fixing assembly [1].

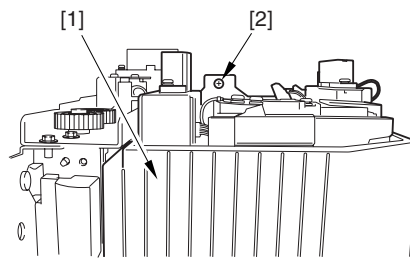


F-9-32

8) Holding the 2 grips [1], detach the fixing assembly [2].

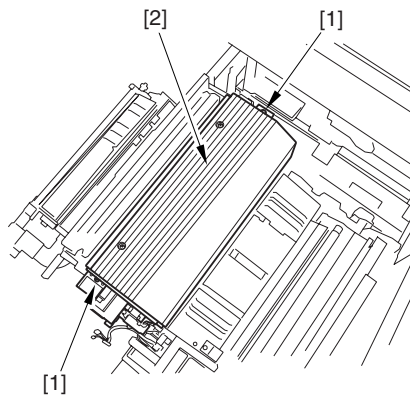

F-9-33

⚠ When lifting the fixing assembly, be sure to take care not to touch the web length detecting arm [1] so that the arm will be free of damage.

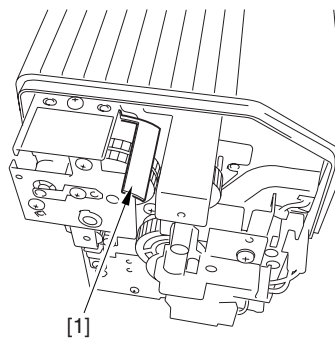


F-9-34

9.6.2.2 Removing the Fixing

Upper Heater


0003-3903

1) Remove the screw [1], and shift the thermistor cover [2] to detach.

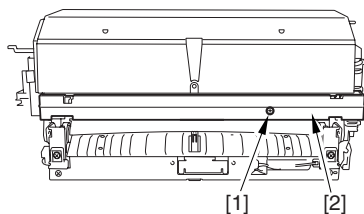


F-9-35

2) Remove the faston [1] of the heater.

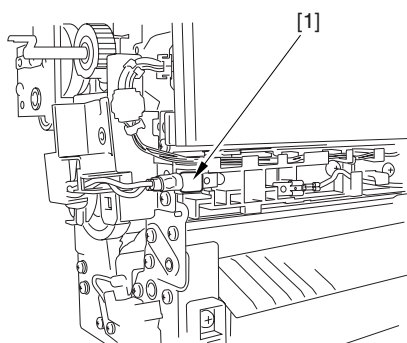


F-9-36

3) Remove the screw [1], and detach the heater cover [2] while moving the heater harness [3] out of the way.

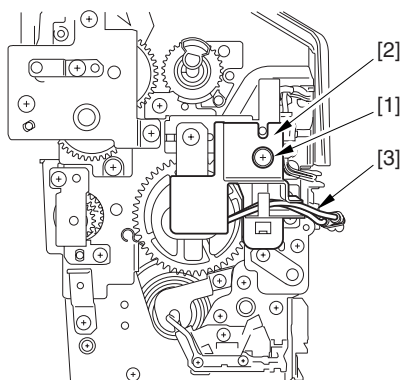


F-9-37

4) Remove the screw [1], and detach the heater retainer [2].

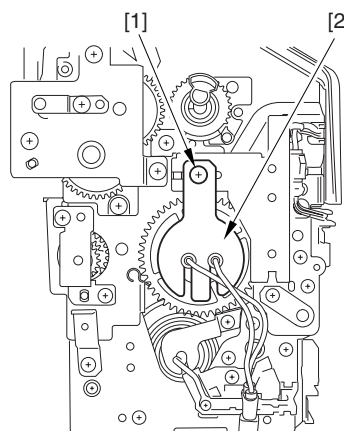

F-9-38

5) Remove the 4 screws [1], and move the heater harness [2] out of the way. Remove the 2 screws [3], and detach the heater cover [4]. Then, detach the heater [5].

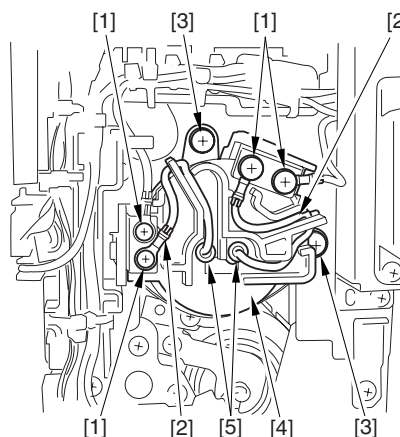


F-9-39

9.6.2.3 Removing the Fixing Roller


0003-3904

1) Remove the screws [1], and pull out the pin while pushing down on the fixing assembly.

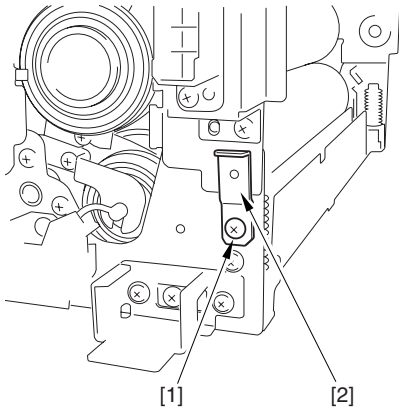


F-9-40

2) Remove the screw [1], and pull out the pin [2]; then, open the fixing assembly.

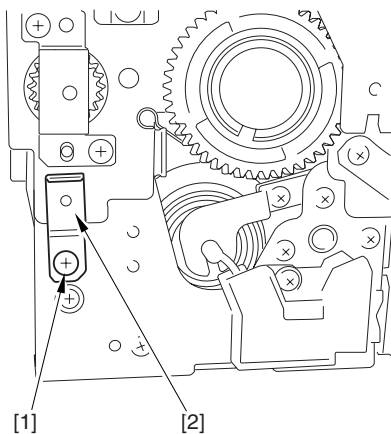


F-9-41

3) Remove 2 screws [1], and detach the upper inlet guide [2].

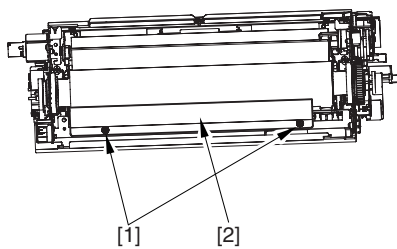


F-9-42

4) Remove the 2 wires [1], and detach the fixing roller [2] together with the gear and the bearing.

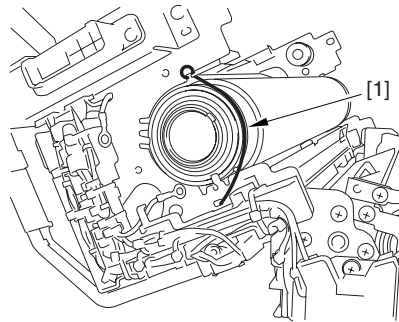


F-9-43

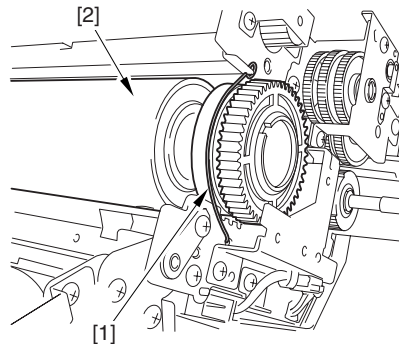


F-9-44

5) Remove the ring [1], gear [2], bush [3], and bearing [4] from the front in the order indicated.

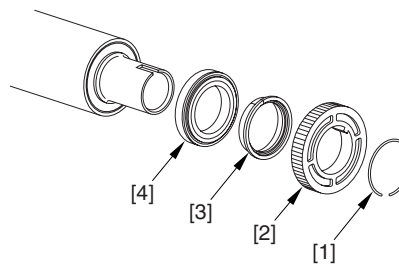


F-9-45

⚠ When mounting the gear you have removed previously, be sure that the protrusion [1] of the gear is toward the front of the machine.

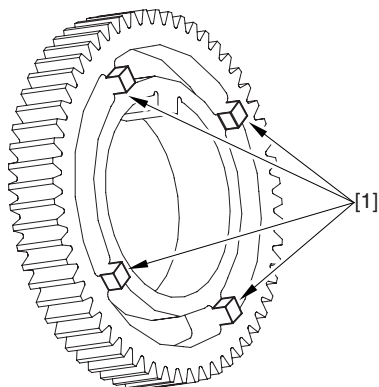

F-9-46

6) Remove the ring [2], spacer [3], bearing [4], and bush [5] from the rear.

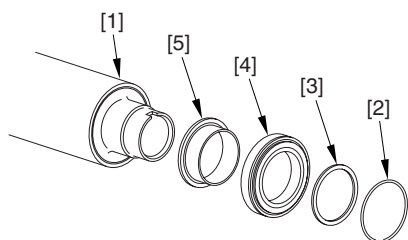

F-9-47

9.6.2.4 Points to Note When


Removing the Fixing Roller [0005-9439](#)



When mounting the inlet upper guide [1], be sure to place print paper [2] under the edge of the guide.



To detach the paper after the work, go through the following sequence: close the fixing assembly, while pushing the fixing assembly downward, fit 2 pins, tighten the screws, and then pull on the paper to detach.

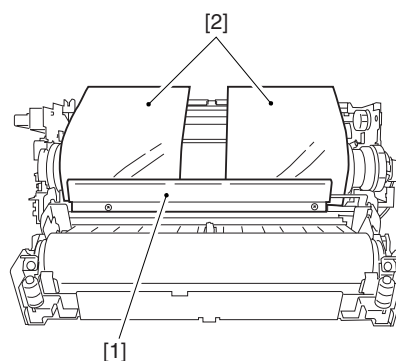


F-9-48

9.6.3 Pressure Roller

9.6.3.1 Removing the Fixing Assembly


[0003-3910](#)

- 1) Open the front cover.
- 2) Slide out the fixing/feeding assembly.
- 3) Push the leaf springs [1] found at the left and right to slide farther out the fixing/feeding assembly [2].

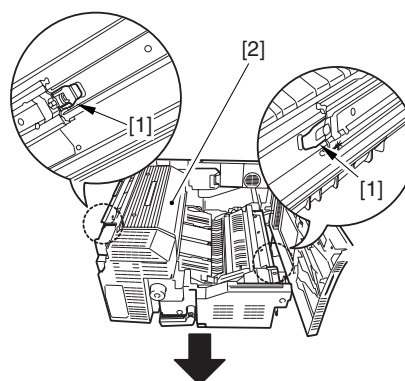


F-9-49

4) Open the reversal delivery cover [1] and the middle cover [2].

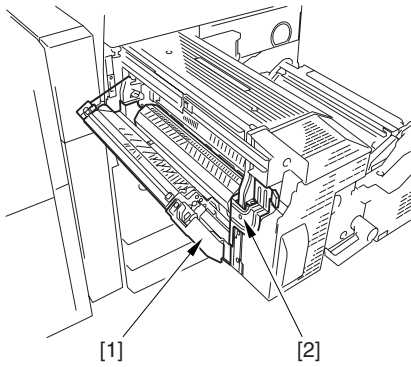


F-9-50

5) Remove the screw [1] and the 2 screws [2]; then, detach the fixing front cover [3].

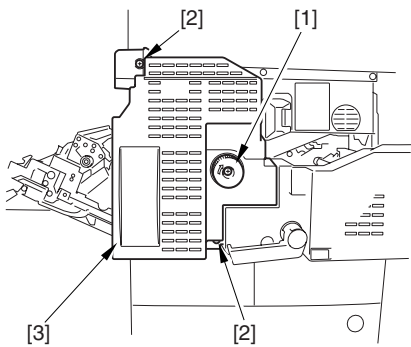


F-9-51

6) Remove the 3 screws [1], and disconnect the 3 connectors [2]; then, after shifting the timing belt [3] to the front, detach it together with the fixing motor base [4].

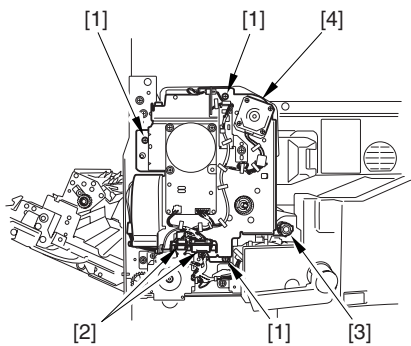


F-9-52

7) Remove the screw [2] found at the rear of the fixing assembly [1].

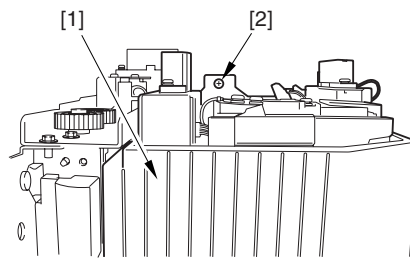


F-9-53

8) Holding the 2 grips [1], detach the fixing assembly [2].

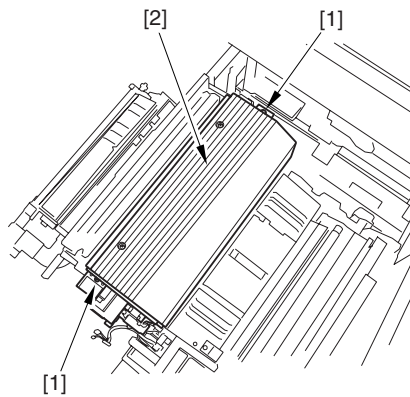

F-9-54

⚠ When lifting the fixing assembly, be sure to take care not to touch the web length detecting arm [1] so that the arm will be free of damage.

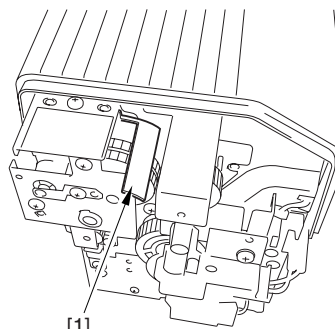


F-9-55

9.6.3.2 Removing the Fixing

Lower Heater


0003-3912

1) Remove the screw [1], and detach the heater terminal cover [2].

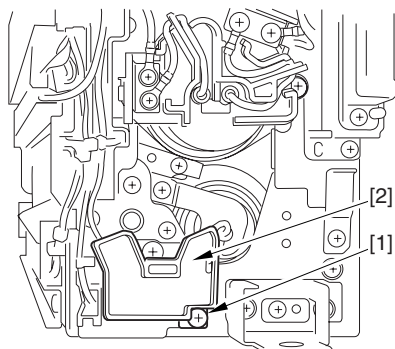

F-9-56


2) Remove the screw [1], and free the heater harness [2].

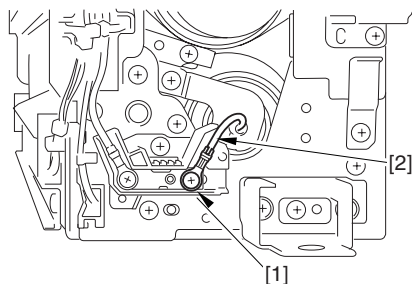

F-9-57

3) Remove the screw [1], and detach the heater terminal cover [2].


4) Remove the screw [3], and detach the heater retainer [4].

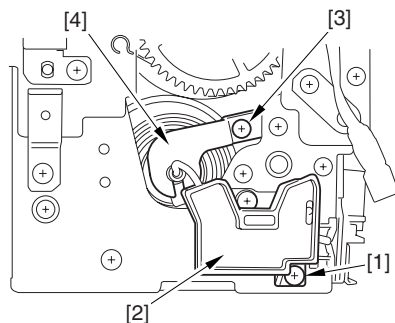

F-9-58

5) Remove the screw [1], and free the heater harness [2].

6) Remove the screw [3], and detach the heater retainer [4]; then, pull out the heater [5].

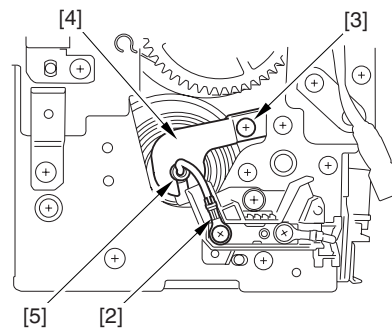


F-9-59

9.6.3.3 Removing the Pressure

Roller


0003-3914

1) Remove the screw [1], and detach the pin [2] while pushing down on the fixing assembly

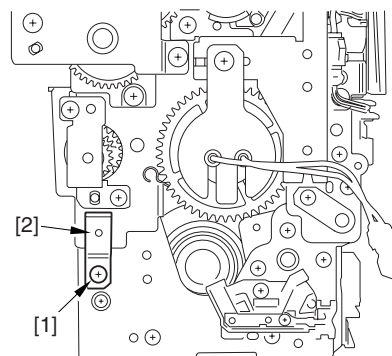


F-9-60

2) Remove the screw [1], and pull out the pin; then, open the fixing assembly.

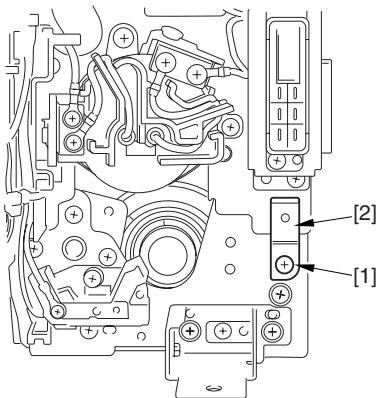


F-9-61

3) Lift the pressure roller [1] together with the bearing and the bush to detach.

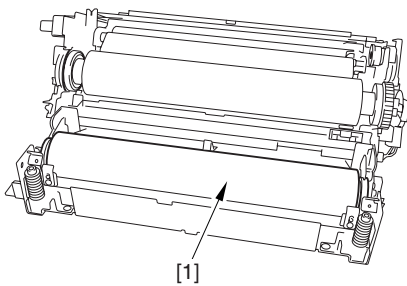

F-9-62


4) Detach the bearing [2] and the bush [3] from both ends of the pressure roller [1].

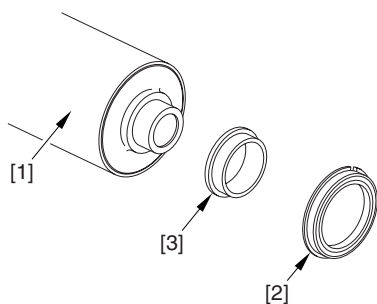

F-9-63

9.6.3.4 Points to Note When Mounting the Pressure Roller 0005-8186

Be sure to mount the pressure roller [1] so that the lot number [2] found on its edge is found toward the front of the machine.

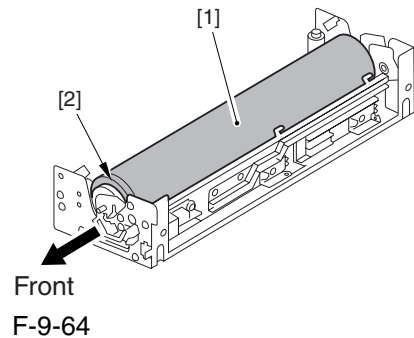


F-9-64

9.6.4 External Heat Roller


9.6.4.1 Removing the Fixing Assembly 0003-2544

- 1) Open the front cover.
- 2) Slide out the fixing/feeding assembly.
- 3) Push the leaf springs [1] found at the left and right to slide farther out the fixing/feeding assembly [2].

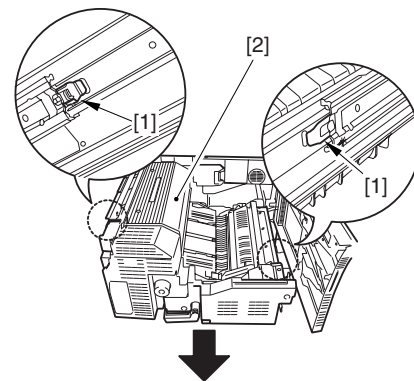


F-9-65

4) Open the reversal delivery cover [1] and the middle cover [2].

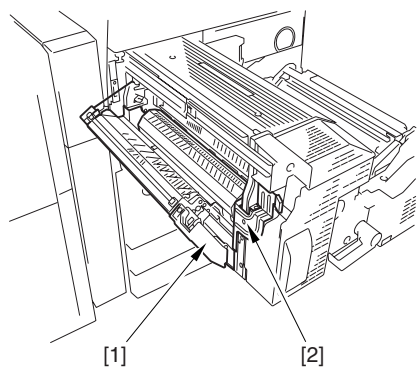


F-9-66

5) Remove the screw [1] and the 2 screws [2]; then, detach the fixing front cover [3].

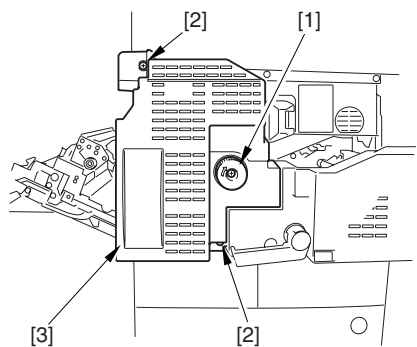


F-9-67

6) Remove the 3 screws [1], and disconnect the 3 connectors [2]; then, after shifting the timing belt [3] to the front, detach it together with the fixing motor base [4].

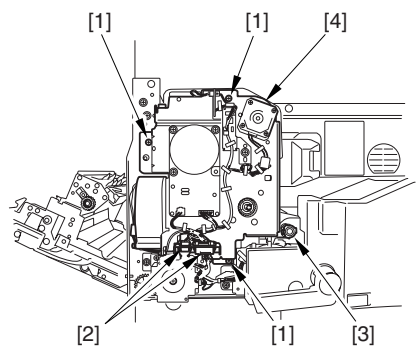


F-9-68

7) Remove the screw [2] found at the rear of the fixing assembly [1].

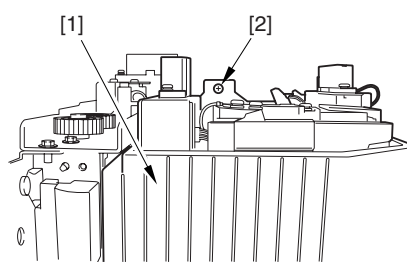


F-9-69

8) Holding the 2 grips [1], detach the fixing assembly [2].

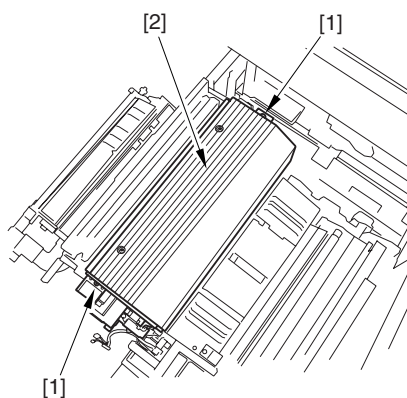

F-9-70

⚠ When lifting the fixing assembly, be sure to take care not to touch the web length detecting arm [1] so that the arm will be free of damage.

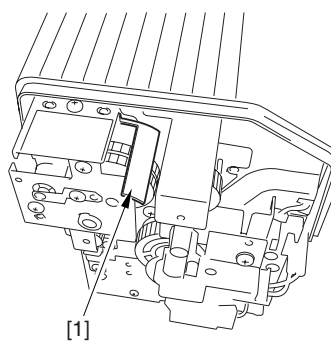


F-9-71

9.6.4.2 Removing the Outside Heating Roller Heater


0002-9918

1) Engage the ends of the 2 springs [1] on the hooks [2] of the side plate.

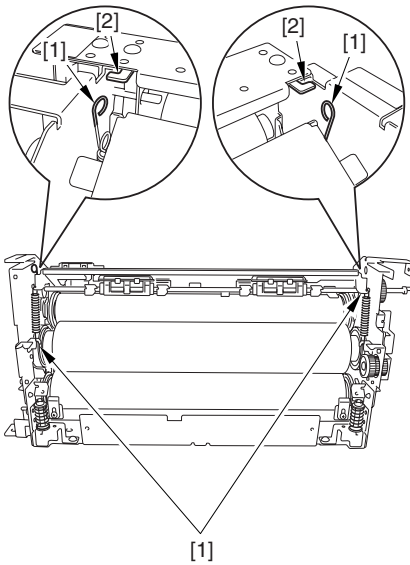


F-9-72

2) Disconnect the connector [1], and free the harness [2] from the 2 wire saddles [3].

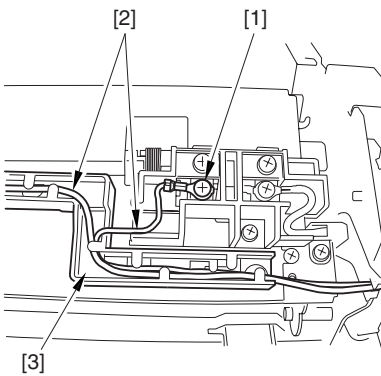


F-9-73

3) Remove the 2 screws [1], and free the 2 heater harnesses [2] from the wire guide [3].

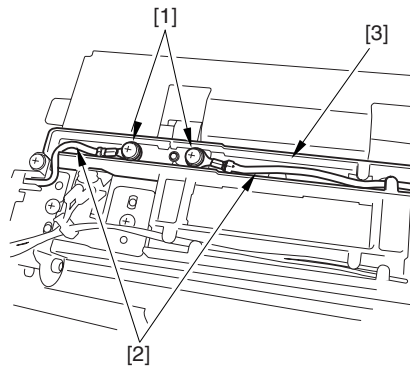


F-9-74

4) Remove the screw [1], and pull out the pin [2]; then, pull out the outside heating roller [3].

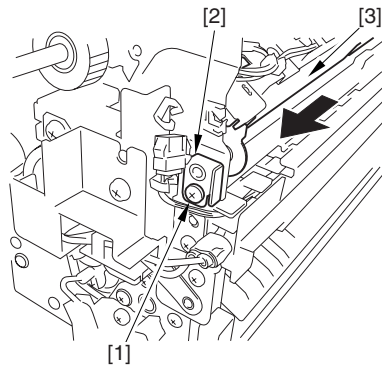


F-9-75

- 5) Remove the screw [1].
- 6) Remove the screw [2], and detach the wire guide [3].
- 7) Remove the screw [4], and detach the heater retainer [5].

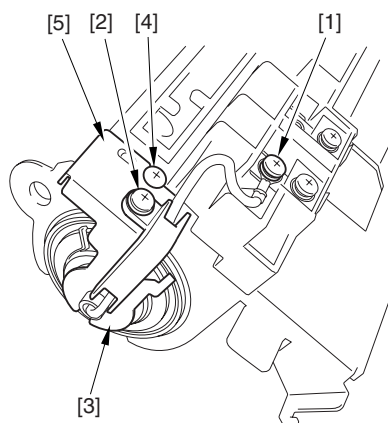


F-9-76

- 8) Remove the screw [1].
- 9) Remove the screw [2], and detach the wire guide [3].
- 10) Remove the screw [4], and detach the heater retainer [5].

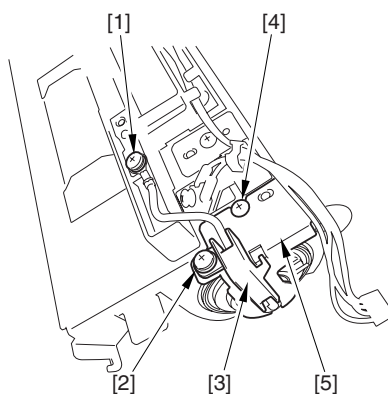


F-9-77

- 11) Pull the heater [2] out of the outside heating roller [1].

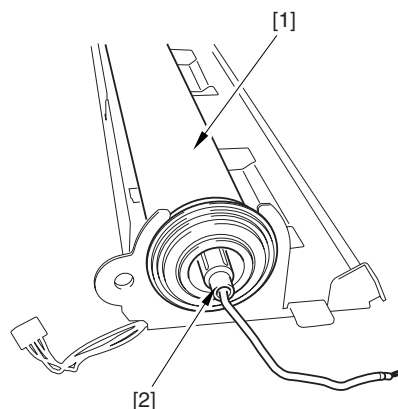

F-9-78

⚠ When mounting the outside heating roller heater, be sure that the length A of the heater cable [2] sticking out the heater holder [1] is no more than 4 mm.

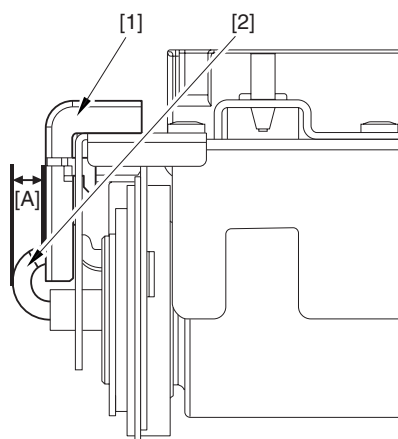


F-9-79

9.6.4.3 Removing the Outside Heating Roller

0003-2560

1) Detach the ring [1], bush [2], and bearing [4] from both ends of the outside heating roller [1]; then, detach the outside heating roller.

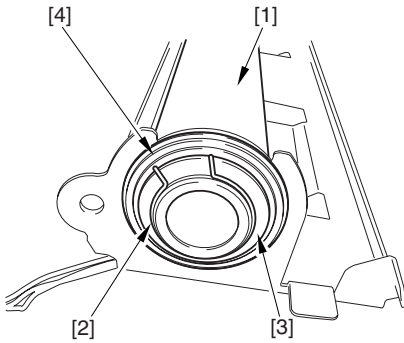


F-9-80

9.6.5 Fixing Thermistor (Upper)

9.6.5.1 Removing the Fixing Assembly


0003-2546

- 1) Open the front cover.
- 2) Slide out the fixing/feeding assembly.
- 3) Push the leaf springs [1] found at the left and right to slide farther out the fixing/feeding assembly [2].

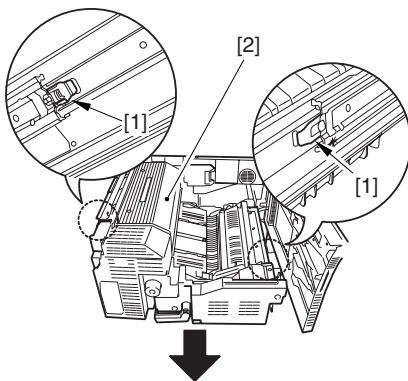


F-9-81

4) Open the reversal delivery cover [1] and the middle cover [2].

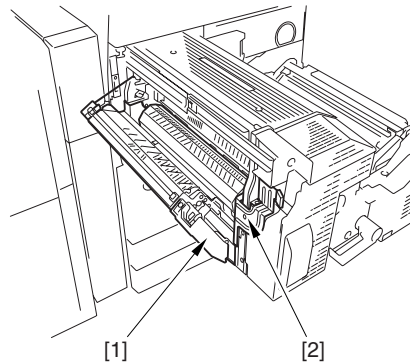


F-9-82

5) Remove the screw [1] and the 2 screws [2]; then, detach the fixing front cover [3].

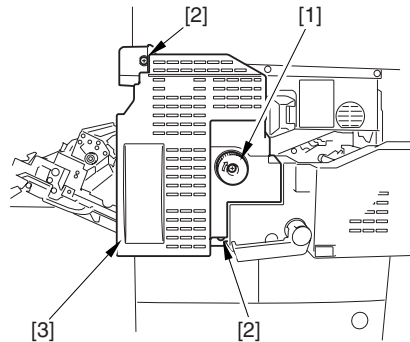


F-9-83

6) Remove the 3 screws [1], and disconnect the 3 connectors [2]; then, after shifting the timing belt [3] to the front, detach it together with the fixing motor base [4].

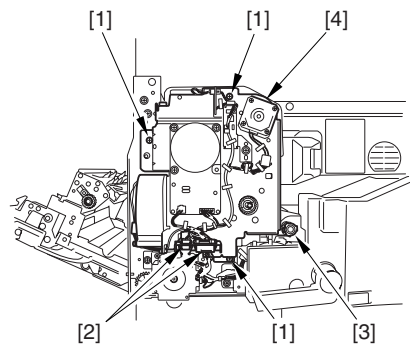


F-9-84

7) Remove the screw [2] found at the rear of the fixing assembly [1].

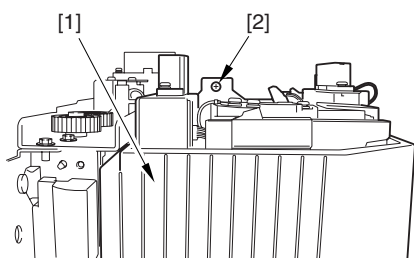


F-9-85

8) Holding the 2 grips [1], detach the fixing assembly [2].

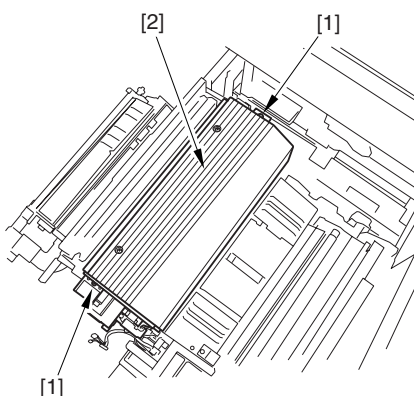

F-9-86

⚠ When lifting the fixing assembly, be sure to take care not to touch the web length detecting arm [1] so that the arm will be free of damage.

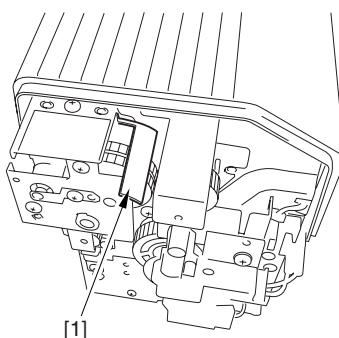


F-9-87

9.6.5.2 Removing the Fixing Upper Thermistor


0002-9923

1) Remove the screw [1], and detach the thermistor cover [2].

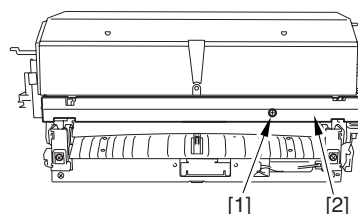


F-9-88

2) Disconnect the connector [1], and remove the 2 screws [2]; then, move the harness out of the way, and detach thermistor [3] together with the holder

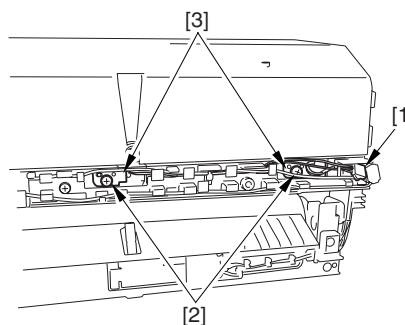

F-9-89

3) Remove the 2 screws [1], and detach the thermistor [2].

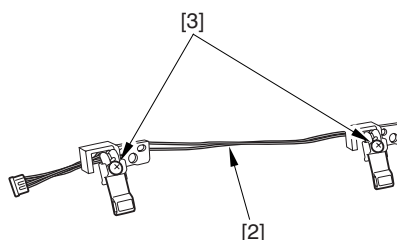


F-9-90

9.6.5.3 Points to Note When Mounting the Fixing Upper Thermistor


0005-5541

⚠ After mounting the thermistor, make sure of the following:

The surface of the thermal switch [1] must be parallel to the fixing roller. (Check to be sure by shining the thermal switch with a pen light.) Otherwise, re-mount it.

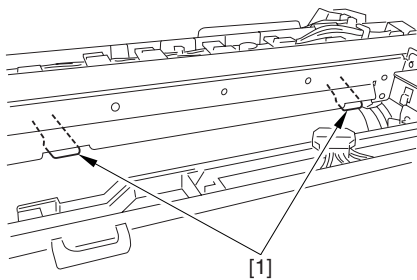

F-9-91

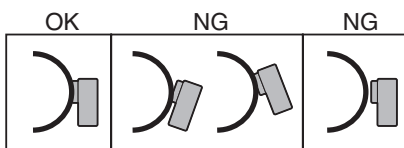


F-9-92

9.6.6 Fixing Thermistor (Lower)

9.6.6.1 Removing the Fixing Assembly


0003-2547

- 1) Open the front cover.
- 2) Slide out the fixing/feeding assembly.
- 3) Push the leaf springs [1] found at the left and right to slide farther out the fixing/feeding assembly [2].

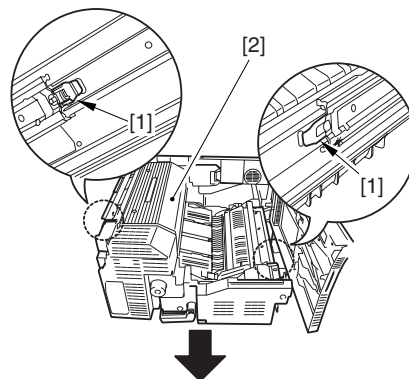


F-9-93

- 4) Open the reversal delivery cover [1] and the middle cover [2].

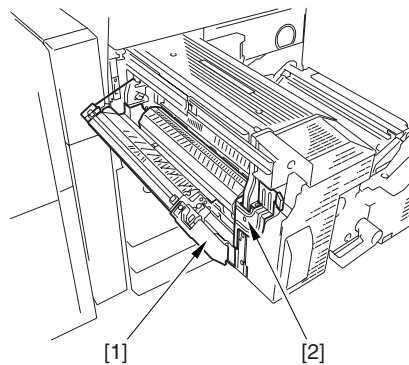


F-9-94

5) Remove the screw [1] and the 2 screws [2]; then, detach the fixing front cover [3].

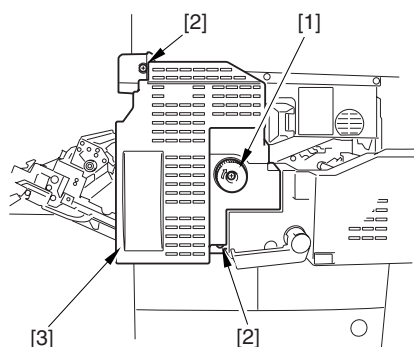


F-9-95

6) Remove the 3 screws [1], and disconnect the 3 connectors [2]; then, after shifting the timing belt [3] to the front, detach it together with the fixing motor base [4].

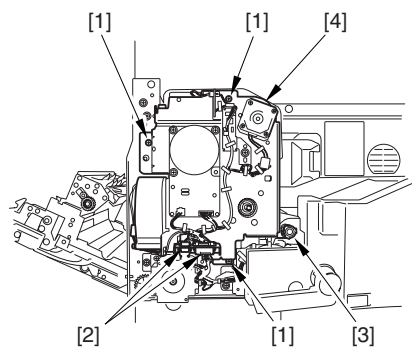


F-9-96

7) Remove the screw [2] found at the rear of the fixing assembly [1].

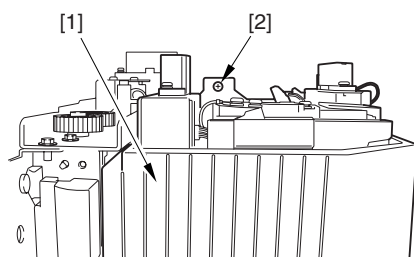


F-9-97

8) Holding the 2 grips [1], detach the fixing assembly [2].

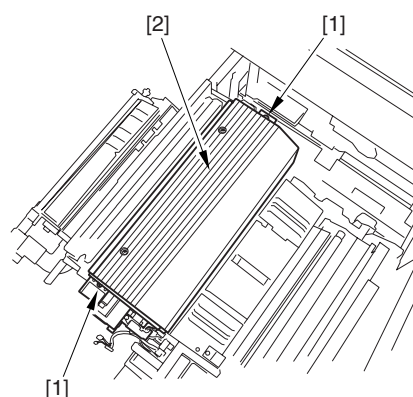

F-9-98

⚠ When lifting the fixing assembly, be sure to take care not to touch the web length detecting arm [1] so that the arm will be free of damage.

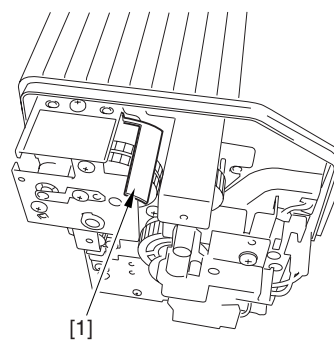


F-9-99

9.6.6.2 Removing the Fixing

Lower Thermistor


0003-0174

1) Disconnect the connector [1], and free the harness [2] from the 4 wire saddles [3].

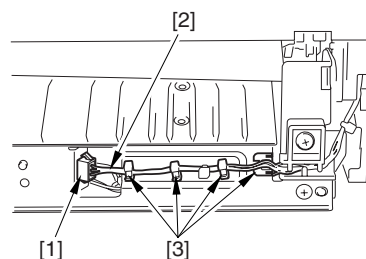


F-9-100

2) Remove the 2 screws [1], and detach the inlet guide [2].

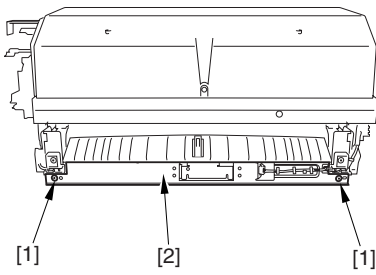


F-9-101

3) Disconnect the connector [1], and free the harness [2] from the 2 wire saddles [3].

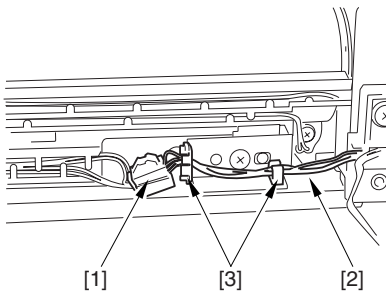


F-9-102

4) Free the harness [1] from the wire saddle [2].
5) Remove the 2 screws [3], and detach the 2 holders [4].

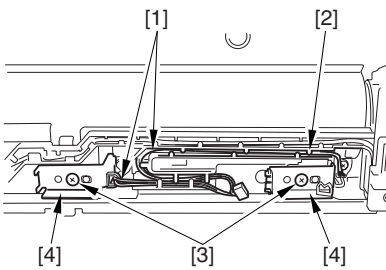

F-9-103

6) Remove the 2 screws [1], and free the harness [2] from the 2 wire saddles [3].

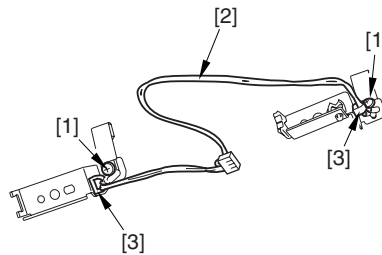


F-9-104

9.6.6.3 Points to Note When Mounting the Fixing Lower Thermistor


0005-5546

⚠ After mounting the thermistor, make sure of the following:

The surface of the thermal switch [1] must be parallel to the fixing roller. (Check to be sure by shining the thermal switch with a pen light.) Otherwise, re-mount it.

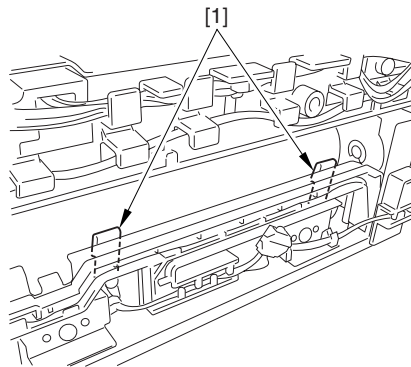

F-9-105

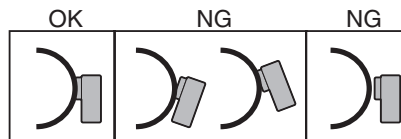

F-9-106


9.6.7 External Heat Thermistor

9.6.7.1 Removing the Fixing

Assembly


0003-2549

- 1) Open the front cover.
- 2) Slide out the fixing/feeding assembly.
- 3) Push the leaf springs [1] found at the left and right to slide farther out the fixing/feeding assembly [2].

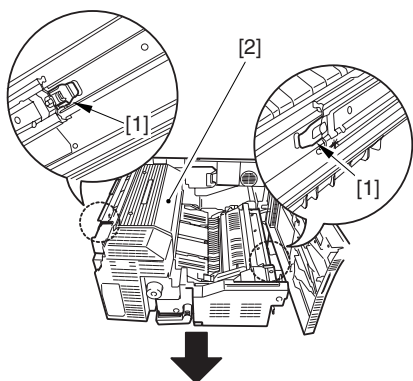


F-9-107

- 4) Open the reversal delivery cover [1] and the middle cover [2].

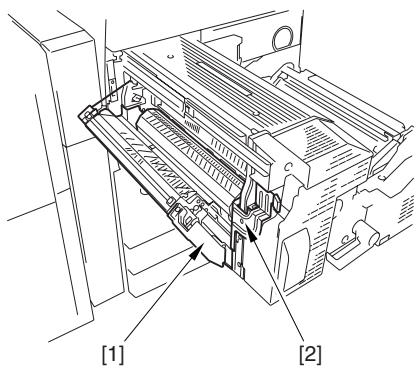


F-9-108

- 5) Remove the screw [1] and the 2 screws [2]; then, detach the fixing front cover [3].

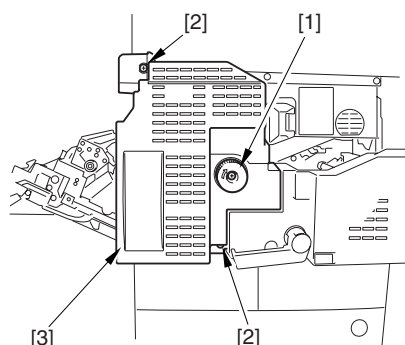


F-9-109

- 6) Remove the 3 screws [1], and disconnect the 3 connectors [2]; then, after shifting the timing belt [3] to the front, detach it together with the fixing motor base [4].

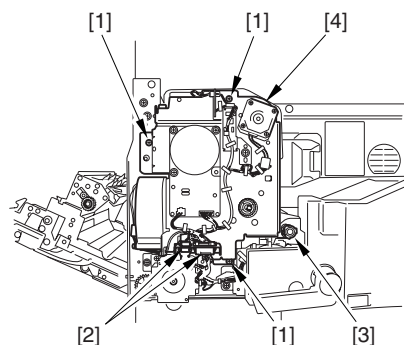


F-9-110

- 7) Remove the screw [2] found at the rear of the fixing assembly [1].

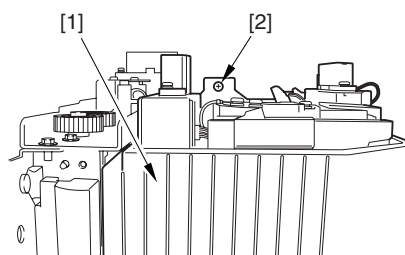


F-9-111

8) Holding the 2 grips [1], detach the fixing assembly [2].

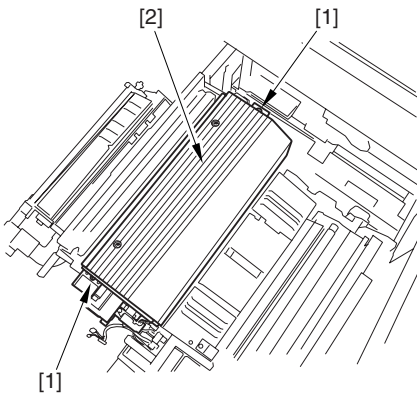

F-9-112

⚠ When lifting the fixing assembly, be sure to take care not to touch the web length detecting arm [1] so that the arm will be free of damage.

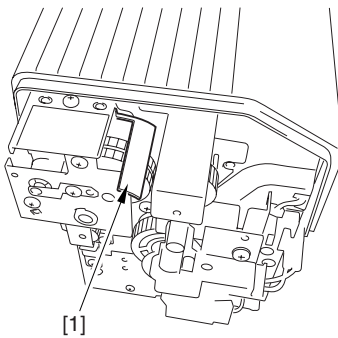


F-9-113

9.6.7.2 Removing the Outside


Heating Roller Thermistor [0002-9920](#)

1) Remove the 2 screws [1], and detach the fixing upper cover [2].

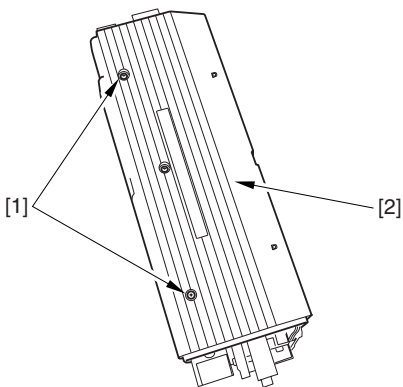


F-9-114

2) Disconnect the connector [1], and free the harness [2] from the wire saddle [3].

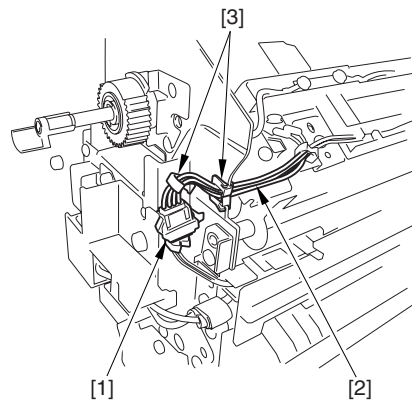


F-9-115

3) Free the harness [1] from the wire saddle [2]; then, remove the screw [3], and detach the thermistor mounting plate [4].

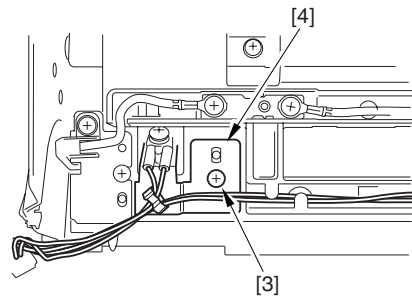


F-9-116

4) Free the harness [1] from the wire saddle [2]; then, remove the screw [3], and detach the thermistor mounting plate [4].

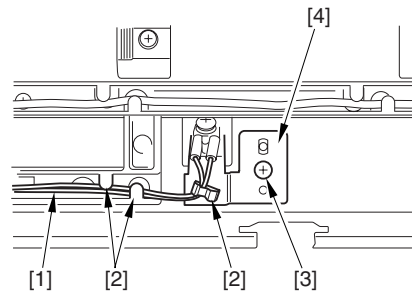

F-9-117

- 5) Remove the 2 screws [1], and detach the thermistor [2] from the thermistor mounting plate [3].

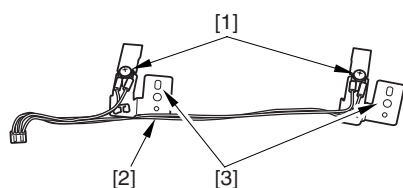


F-9-118

9.6.7.3 Points to Note When Mounting the External Heat Thermistor


0005-5547

⚠ After mounting the thermistor, make sure of the following:

The surface of the thermal switch [1] must be parallel to the fixing roller. (Check to be sure by shining the thermal switch with a pen light.) Otherwise, re-mount it.

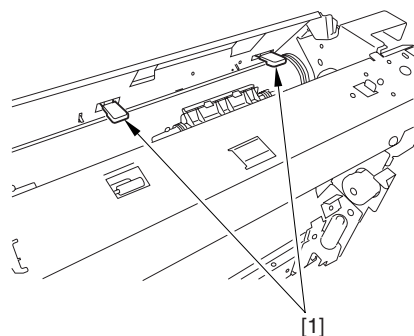

F-9-119

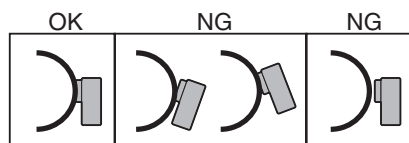


F-9-120

9.6.8 Fixing Thermal Switch

9.6.8.1 Removing the Fixing Assembly


0003-2550

- 1) Open the front cover.
- 2) Slide out the fixing/feeding assembly.
- 3) Push the leaf springs [1] found at the left and right to slide farther out the fixing/feeding assembly [2].

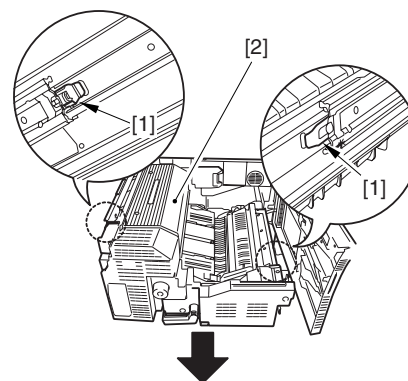


F-9-121

- 4) Open the reversal delivery cover [1] and the middle cover [2].

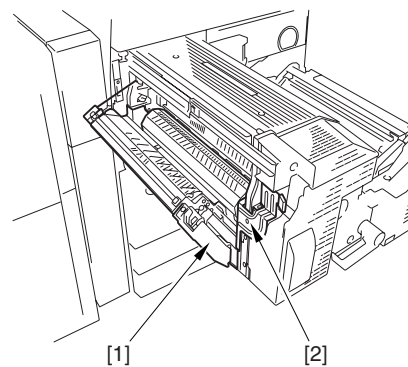


F-9-122

5) Remove the screw [1] and the 2 screws [2]; then, detach the fixing front cover [3].

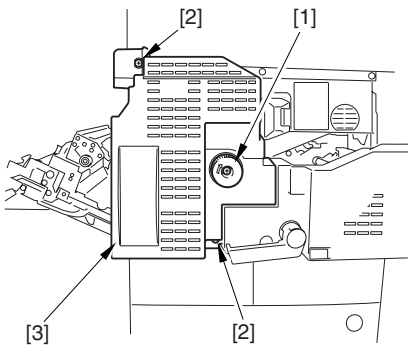


F-9-123

6) Remove the 3 screws [1], and disconnect the 3 connectors [2]; then, after shifting the timing belt [3] to the front, detach it together with the fixing motor base [4].

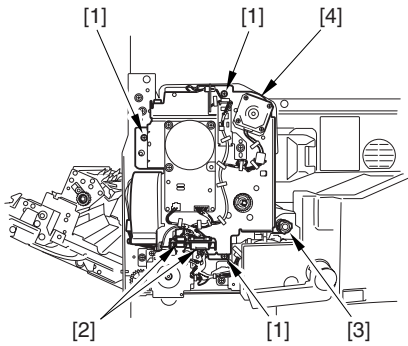


F-9-124

7) Remove the screw [2] found at the rear of the fixing assembly [1].

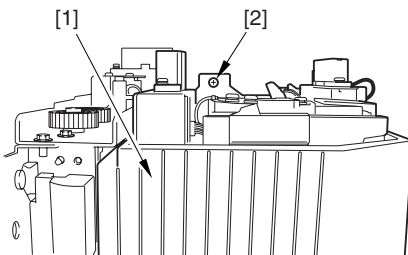


F-9-125

8) Holding the 2 grips [1], detach the fixing assembly [2].

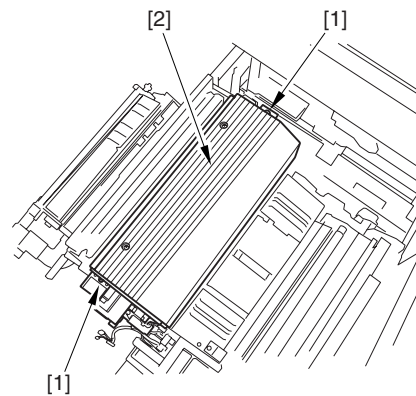

F-9-126

⚠ When lifting the fixing assembly, be sure to take care not to touch the web length detecting arm [1] so that the arm will be free of damage.

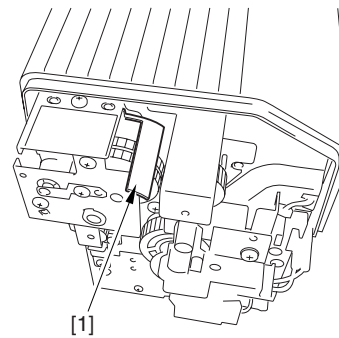


F-9-127

9.6.8.2 Removing the Fixing Thermal Switch


0003-0170

1) Remove the screw [1], and detach the thermistor cover [2].

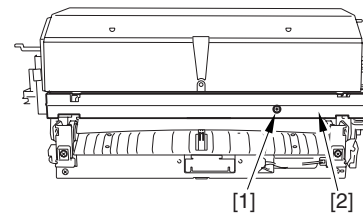

F-9-128

- 2) Disconnect the connector [1], and free the harness [2] from the wire guide [3].
- 3) Remove the 2 fastons [4].
- 4) Remove the screw [5], and detach the thermal switch [6].

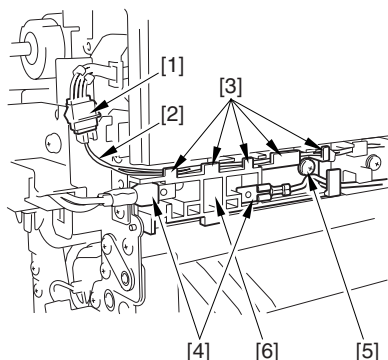


F-9-129

9.6.8.3 Points to Note When Mounting the Fixing Thermal Switch


0004-5055

⚠ After mounting the thermal switch, make sure of the following:

The surface of the thermal switch [1] must be parallel to the fixing roller. (Check to be sure by shining the thermal switch with a pen light.) Otherwise, re-mount it.

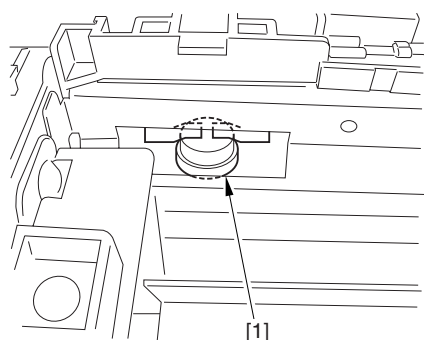

F-9-130

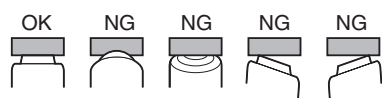


F-9-131

9.6.9 Fixing Locking Thermal Switch

9.6.9.1 Removing the Fixing Assembly


0003-2551

- 1) Open the front cover.
- 2) Slide out the fixing/feeding assembly.
- 3) Push the leaf springs [1] found at the left and right to slide farther out the fixing/feeding assembly [2].

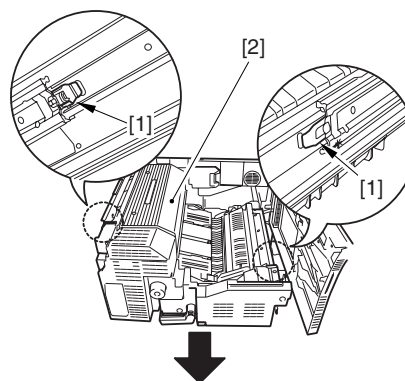


F-9-132

- 4) Open the reversal delivery cover [1] and the middle cover [2].

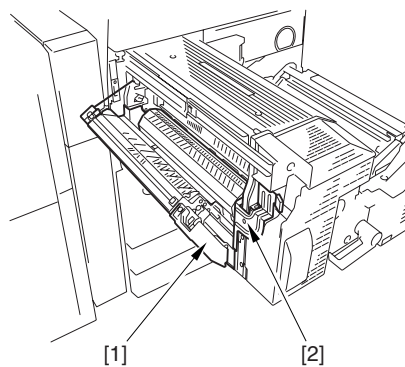


F-9-133

5) Remove the screw [1] and the 2 screws [2]; then, detach the fixing front cover [3].

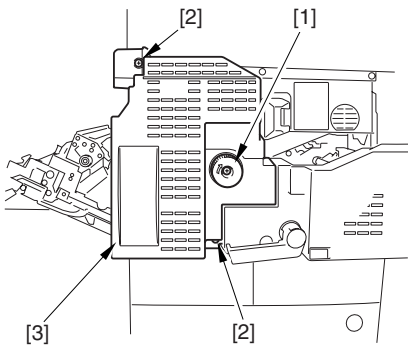


F-9-134

6) Remove the 3 screws [1], and disconnect the 3 connectors [2]; then, after shifting the timing belt [3] to the front, detach it together with the fixing motor base [4].

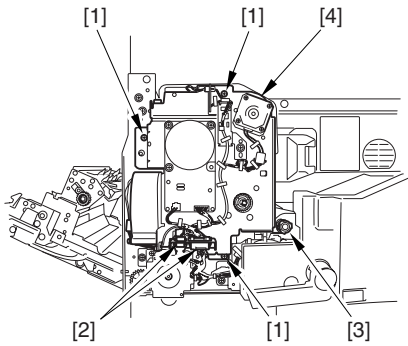


F-9-135

7) Remove the screw [2] found at the rear of the fixing assembly [1].

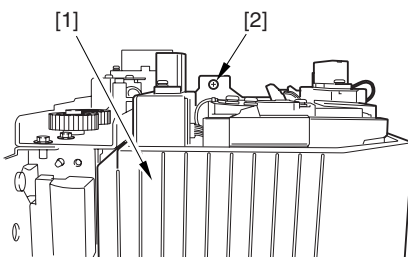


F-9-136

8) Holding the 2 grips [1], detach the fixing assembly [2].

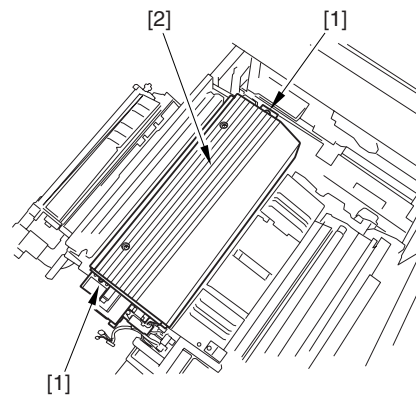

F-9-137

⚠ When lifting the fixing assembly, be sure to take care not to touch the web length detecting arm [1] so that the arm will be free of damage.

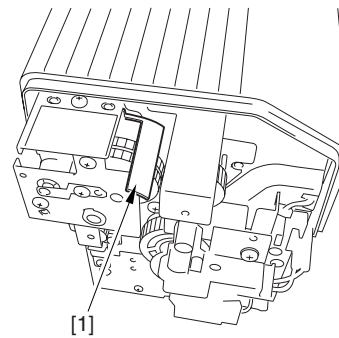


F-9-138

9.6.9.2 Removing the Fixing


Pressure Thermal Switch 0003-0172

- 1) Disconnect the connector [1], and free the harness [2] from the 4 wire saddles [3].

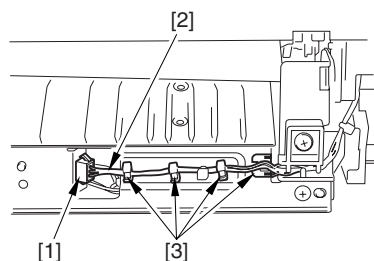

F-9-139


- 2) Remove the 2 screws [1], and detach the inlet unit [2].

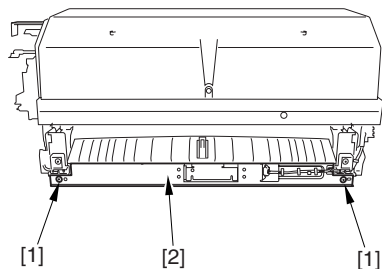

F-9-140

- 3) Remove the 2 screws [1], and move the 2 heater harnesses [2] out of the way.

- 4) Remove the screw [3], and detach the thermal switch.

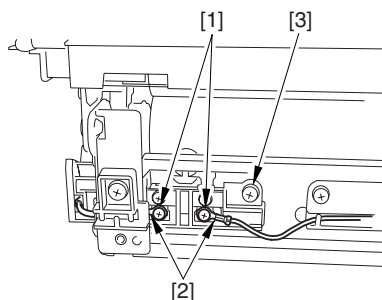


F-9-141


9.6.9.3 Points to Note When Mounting the Fixing Pressure Thermal Switch 0004-5057

⚠ After mounting the thermal switch (before mounting the inlet guide), check to make sure of the following:

The surface of the thermal switch [1] must be parallel to the pressure roller. (Be sure to check it by shining the thermal switch by a pen light.) If not, re-mount it.

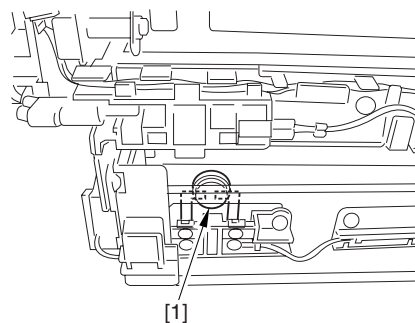

F-9-142

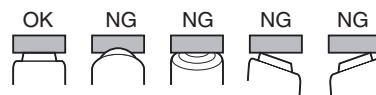

F-9-143


9.6.10 Thermal Switch

9.6.10.1 Removing the Fixing

Assembly


0003-2552

- 1) Open the front cover.
- 2) Slide out the fixing/feeding assembly.
- 3) Push the leaf springs [1] found at the left and right to slide farther out the fixing/feeding assembly [2].

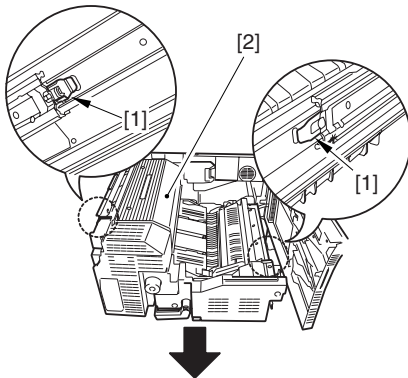


F-9-144

- 4) Open the reversal delivery cover [1] and the middle cover [2].

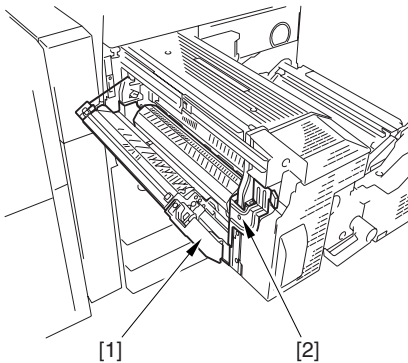


F-9-145

- 5) Remove the screw [1] and the 2 screws [2]; then, detach the fixing front cover [3].

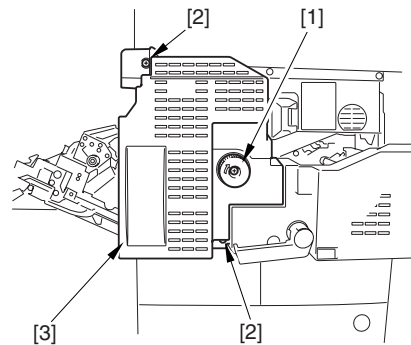


F-9-146

- 6) Remove the 3 screws [1], and disconnect the 3 connectors [2]; then, after shifting the timing belt [3] to the front, detach it together with the fixing motor base [4].

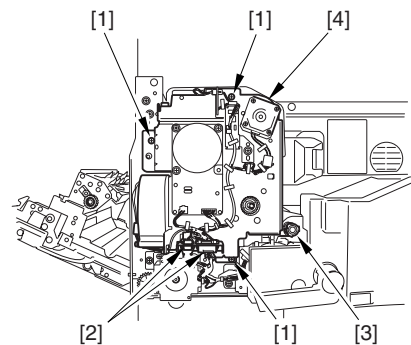


F-9-147

- 7) Remove the screw [2] found at the rear of the fixing assembly [1].

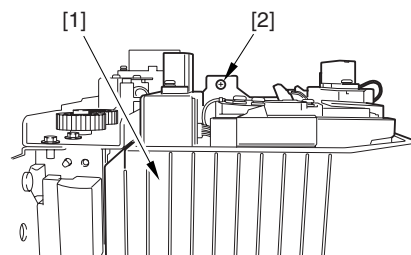


F-9-148

8) Holding the 2 grips [1], detach the fixing assembly [2].

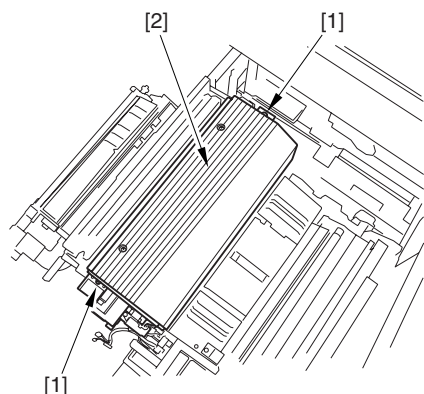

F-9-149

⚠ When lifting the fixing assembly, be sure to take care not to touch the web length detecting arm [1] so that the arm will be free of damage.

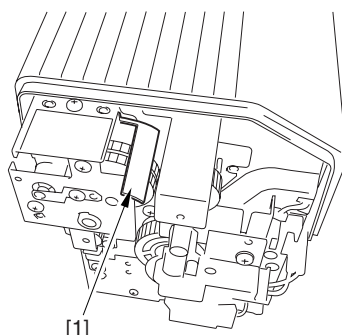


F-9-150

9.6.10.2 Removing the Outside Heating

Roller Thermal Switch [0003-0140](#)


1) Remove the 2 screws [1], and detach the fixing upper cover [2].

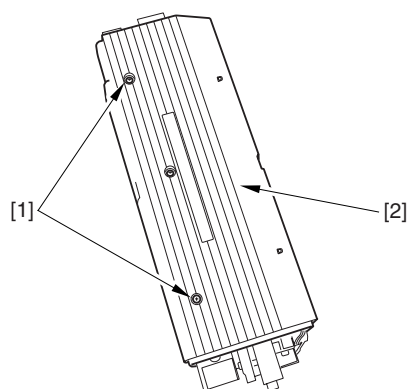

F-9-151

2) Remove the 2 screws [1], and free the 2 heater harnesses [2].

3) Remove the screw [3], and detach the thermal switch.

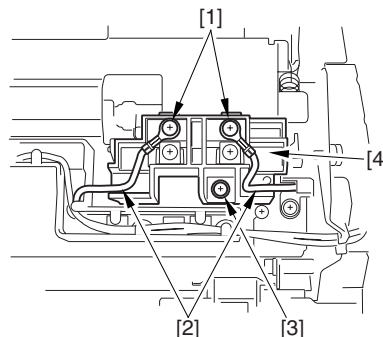


F-9-152

9.6.10.3 Points to Note When Mounting the Outside Heating


Roller Thermal Switch [0004-5059](#)

⚠ After mounting the thermal switch, check to be sure of the following:

The surface of the thermal switch [1] must be parallel to the outside heating roller. (Be sure to shine the thermal witch switch a pen light.) If not, re-mount it.

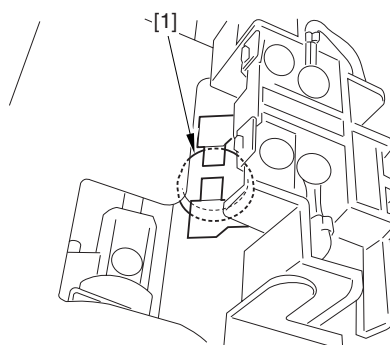

F-9-153

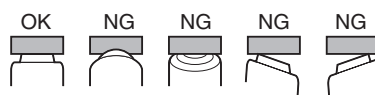


F-9-154

9.6.11 Upper Fixing Heater

9.6.11.1 Removing the Fixing Assembly


0003-2555

- 1) Open the front cover.
- 2) Slide out the fixing/feeding assembly.
- 3) Push the leaf springs [1] found at the left and right to slide farther out the fixing/feeding assembly [2].

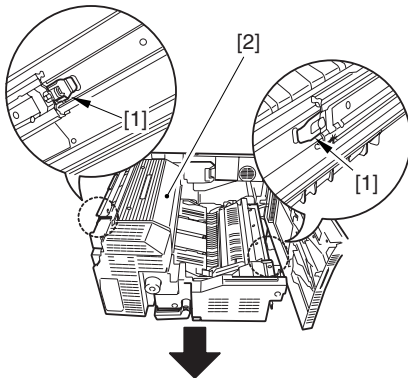


F-9-155

- 4) Open the reversal delivery cover [1] and the middle cover [2].

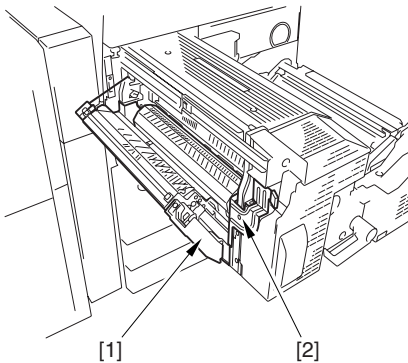


F-9-156

- 5) Remove the screw [1] and the 2 screws [2]; then, detach the fixing front cover [3].

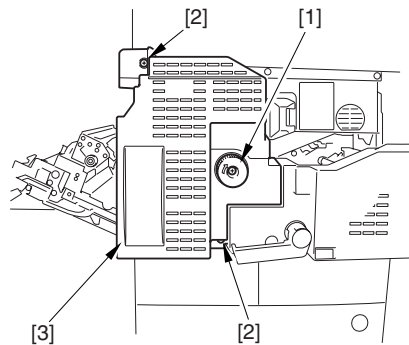


F-9-157

- 6) Remove the 3 screws [1], and disconnect the 3 connectors [2]; then, after shifting the timing belt [3] to the front, detach it together with the fixing motor base [4].

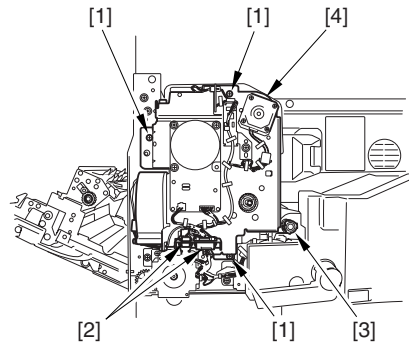


F-9-158

- 7) Remove the screw [2] found at the rear of the fixing assembly [1].

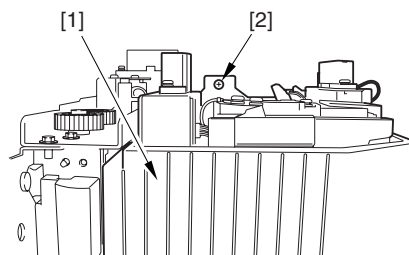


F-9-159

8) Holding the 2 grips [1], detach the fixing assembly [2].

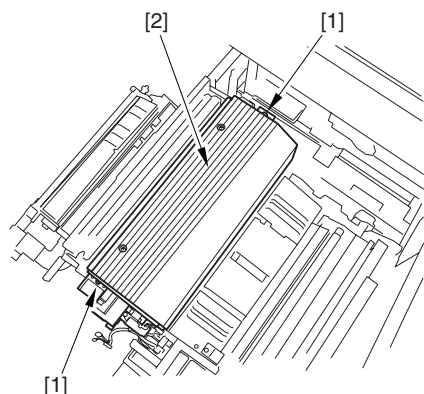

F-9-160

⚠ When lifting the fixing assembly, be sure to take care not to touch the web length detecting arm [1] so that the arm will be free of damage.

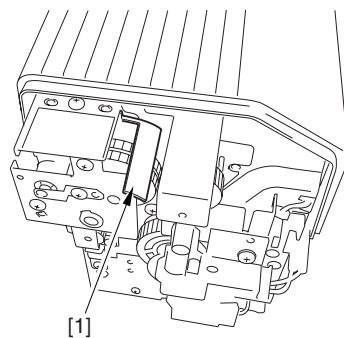


F-9-161

9.6.11.2 Removing the Fixing

Upper Heater


0003-3908

1) Remove the screw [1], and shift the thermistor cover [2] to detach.

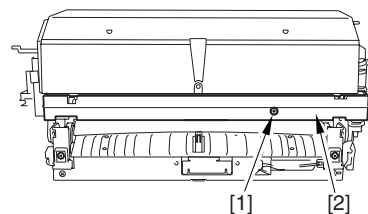


F-9-162

2) Remove the faston [1] of the heater.

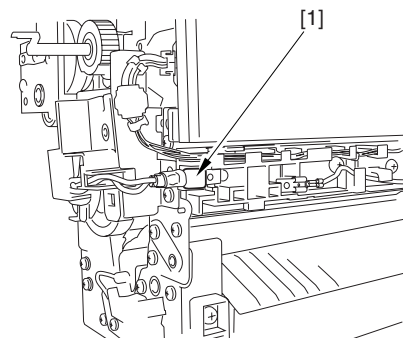


F-9-163

3) Remove the screw [1], and detach the heater cover [2] while moving the heater harness [3] out of the way.

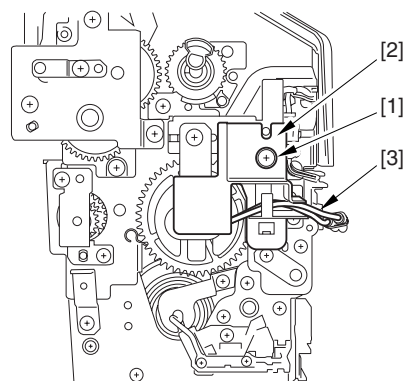


F-9-164

4) Remove the screw [1], and detach the heater retainer [2].

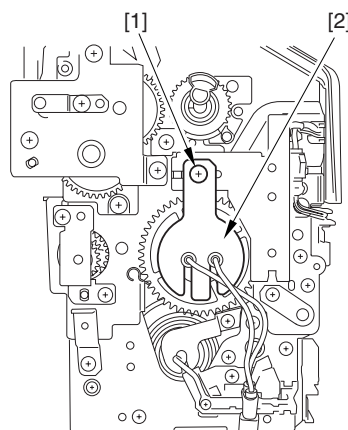

F-9-165

5) Remove the 4 screws [1], and move the heater harness [2] out of the way. Remove the 2 screws [3], and detach the heater cover [4]. Then, detach the heater [5].

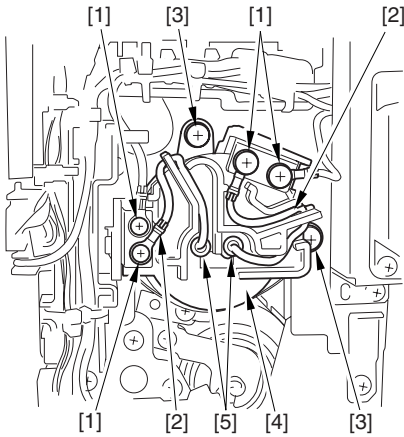


F-9-166

9.6.12 Lower Fixing Roller

9.6.12.1 Removing the Fixing Assembly


0003-2559

1) Open the front cover.
 2) Slide out the fixing/feeding assembly.
 3) Push the leaf springs [1] found at the left and right to slide farther out the fixing/feeding assembly [2].

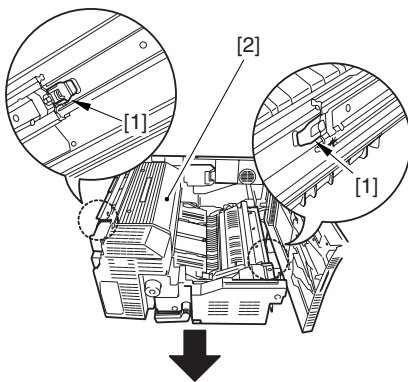


F-9-167

4) Open the reversal delivery cover [1] and the middle cover [2].

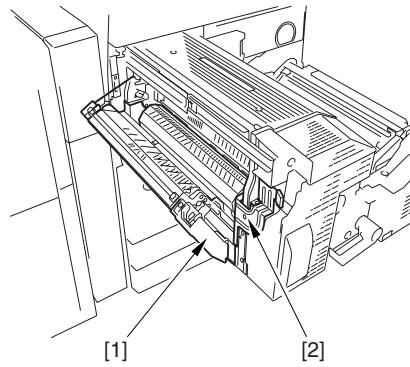


F-9-168

5) Remove the screw [1] and the 2 screws [2]; then, detach the fixing front cover [3].

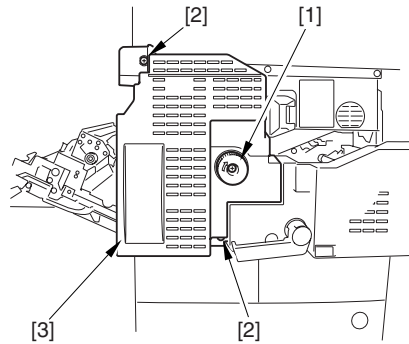


F-9-169

6) Remove the 3 screws [1], and disconnect the 3 connectors [2]; then, after shifting the timing belt [3] to the front, detach it together with the fixing motor base [4].

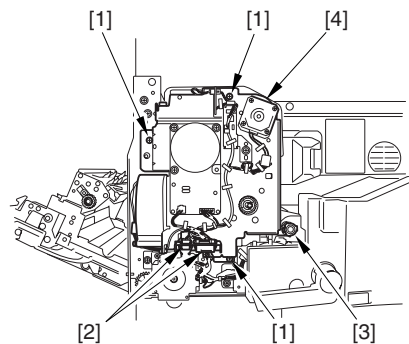


F-9-170

7) Remove the screw [2] found at the rear of the fixing assembly [1].

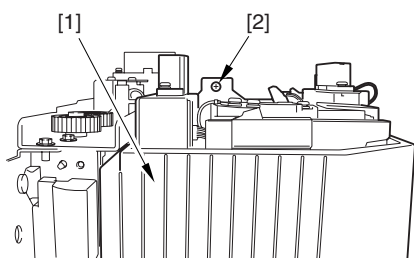


F-9-171

8) Holding the 2 grips [1], detach the fixing assembly [2].

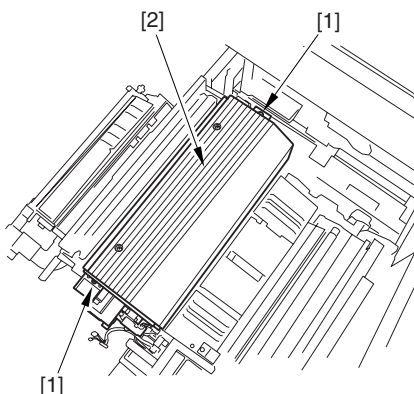

F-9-172

⚠ When lifting the fixing assembly, be sure to take care not to touch the web length detecting arm [1] so that the arm will be free of damage.

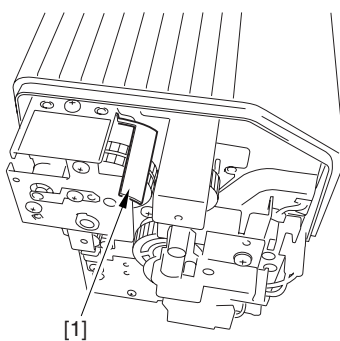


F-9-173

9.6.12.2 Removing the Fixing Lower Heater


0003-3917

1) Remove the screw [1], and detach the heater terminal cover [2].

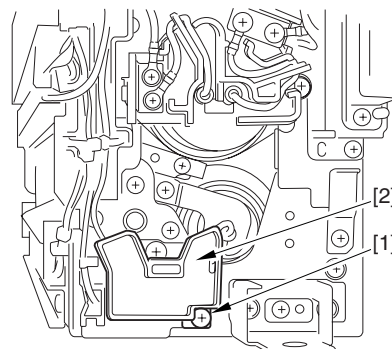

F-9-174


2) Remove the screw [1], and free the heater harness [2].

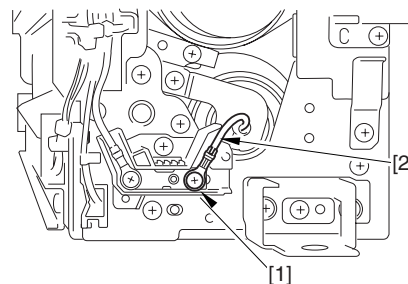

F-9-175


3) Remove the screw [1], and detach the heater terminal cover [2].

4) Remove the screw [3], and detach the heater retainer [4].

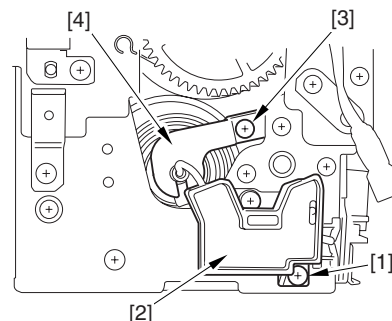

F-9-176

- 5) Remove the screw [1], and free the heater harness [2].
- 6) Remove the screw [3], and detach the heater retainer [4]; then, pull out the heater [5].

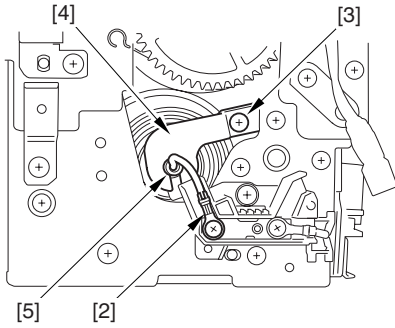


F-9-177

9.6.13 Fixing Locking Heater

9.6.13.1 Removing the Fixing Assembly


0003-2562

- 1) Open the front cover.
- 2) Slide out the fixing/feeding assembly.
- 3) Push the leaf springs [1] found at the left and right to slide farther out the fixing/feeding assembly [2].

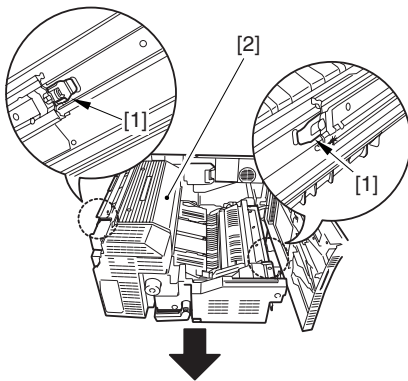


F-9-178

- 4) Open the reversal delivery cover [1] and the middle cover [2].

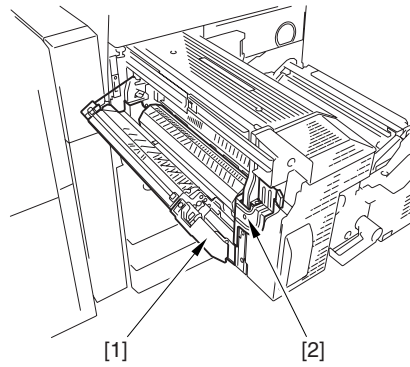


F-9-179

- 5) Remove the screw [1] and the 2 screws [2]; then, detach the fixing front cover [3].

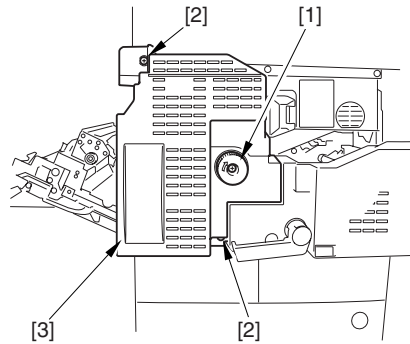


F-9-180

- 6) Remove the 3 screws [1], and disconnect the 3 connectors [2]; then, after shifting the timing belt [3] to the front, detach it together with the fixing motor base [4].

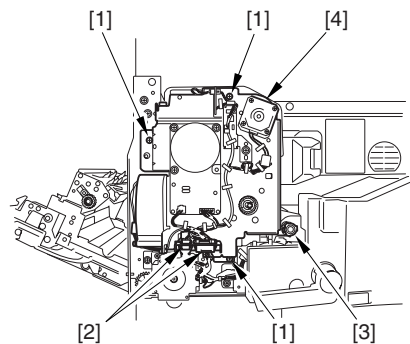


F-9-181

7) Remove the screw [2] found at the rear of the fixing assembly [1].

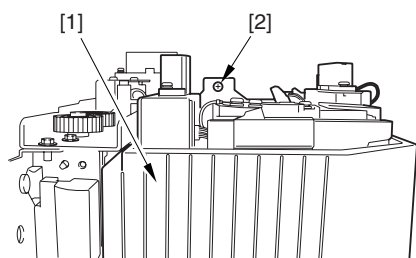


F-9-182

8) Holding the 2 grips [1], detach the fixing assembly [2].

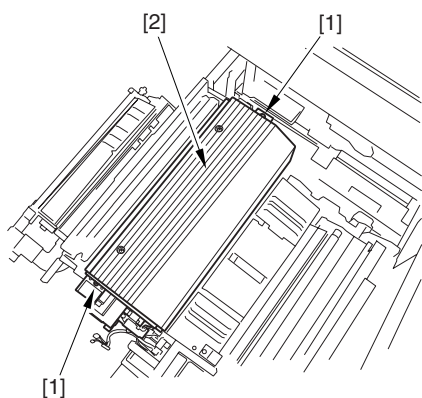

F-9-183

⚠ When lifting the fixing assembly, be sure to take care not to touch the web length detecting arm [1] so that the arm will be free of damage.

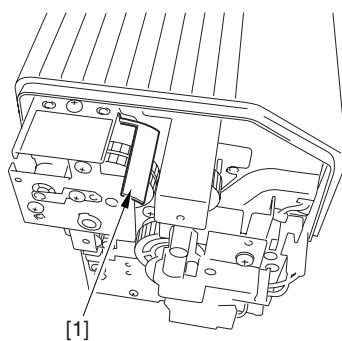


F-9-184

9.6.13.2 Removing the Outside Heating Roller Heater


0003-2561

1) Engage the ends of the 2 springs [1] on the hooks [2] of the side plate.

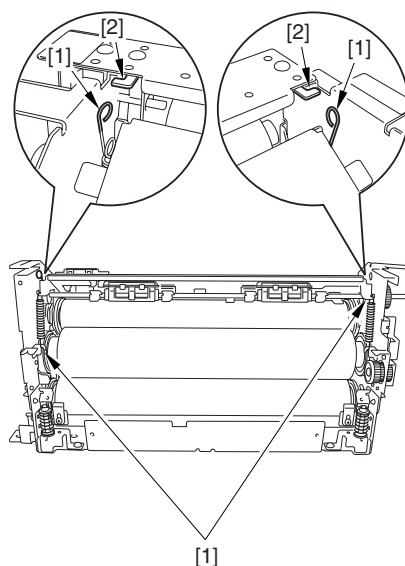


F-9-185

2) Disconnect the connector [1], and free the harness [2] from the 2 wire saddles [3].

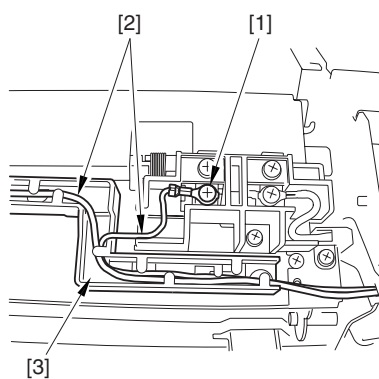


F-9-186

3) Remove the 2 screws [1], and free the 2 heater harnesses [2] from the wire guide [3].

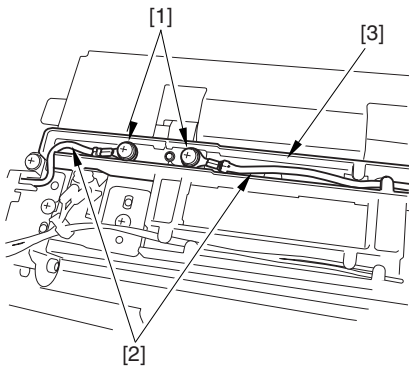

F-9-187

4) Remove the screw [1], and pull out the pin [2]; then, pull out the outside heating roller [3].

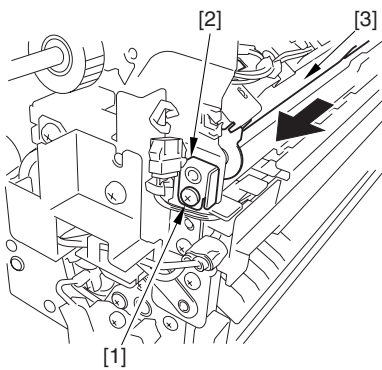


F-9-188

5) Remove the screw [1].

6) Remove the screw [2], and detach the wire guide [3].

7) Remove the screw [4], and detach the heater retainer [5].

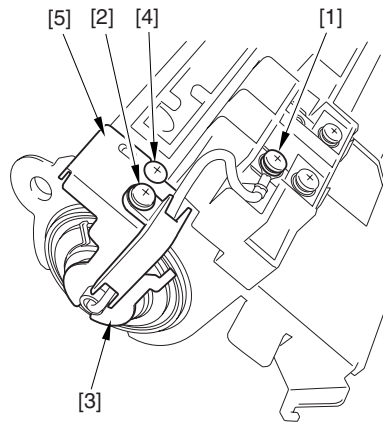


F-9-189

8) Remove the screw [1].


9) Remove the screw [2], and detach the wire guide [3].

10) Remove the screw [4], and detach the heater retainer [5].

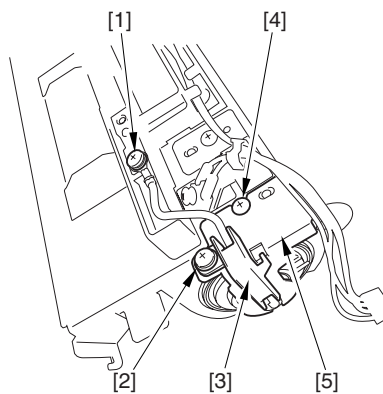


F-9-190

- 11) Pull the heater [2] out of the outside heating roller [1].

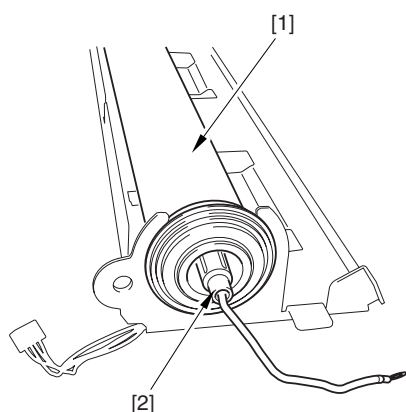

F-9-191

⚠ When mounting the outside heating roller heater, be sure that the length A of the heater cable [2] sticking out the heater holder [1] is no more than 4 mm.

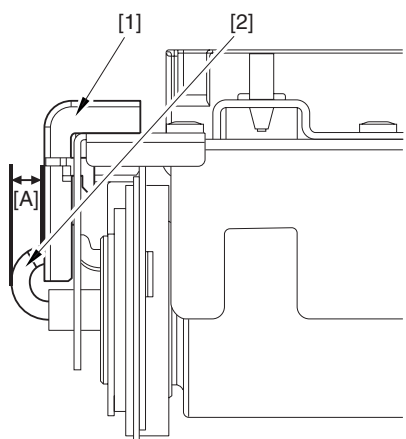

F-9-192


9.6.14 Fixing Web

9.6.14.1 Removing the Fixing

Assembly


0003-2543

- 1) Open the front cover.
- 2) Slide out the fixing/feeding assembly.
- 3) Push the leaf springs [1] found at the left and right to slide farther out the fixing/feeding assembly [2].

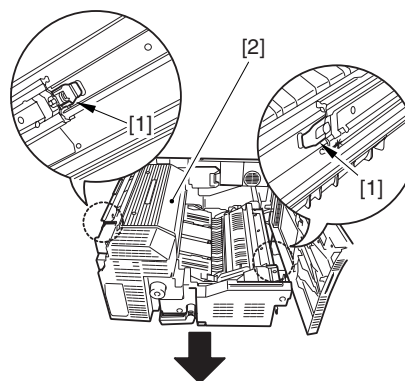


F-9-193

- 4) Open the reversal delivery cover [1] and the middle cover [2].

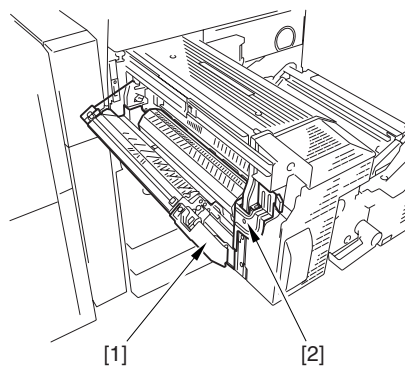


F-9-194

5) Remove the screw [1] and the 2 screws [2]; then, detach the fixing front cover [3].

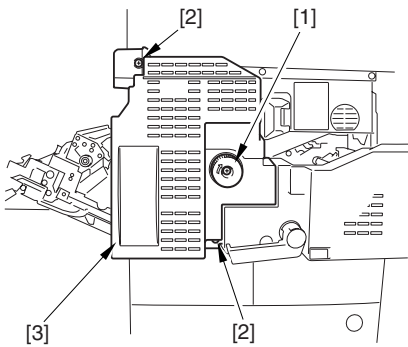


F-9-195

6) Remove the 3 screws [1], and disconnect the 3 connectors [2]; then, after shifting the timing belt [3] to the front, detach it together with the fixing motor base [4].

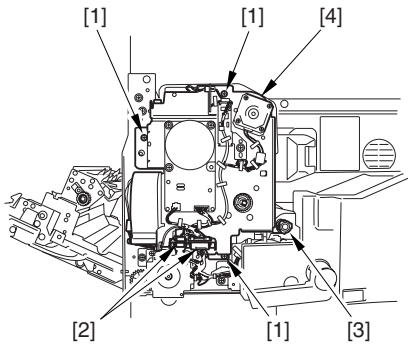


F-9-196

7) Remove the screw [2] found at the rear of the fixing assembly [1].

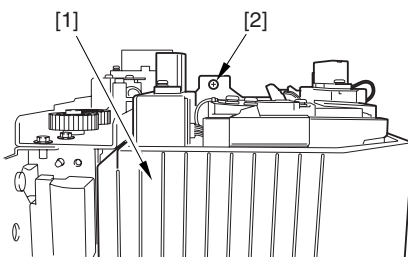


F-9-197

8) Holding the 2 grips [1], detach the fixing assembly [2].

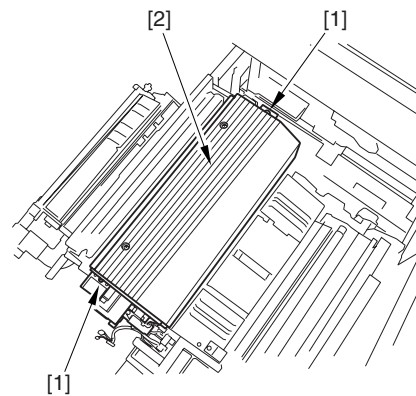

F-9-198

⚠ When lifting the fixing assembly, be sure to take care not to touch the web length detecting arm [1] so that the arm will be free of damage.

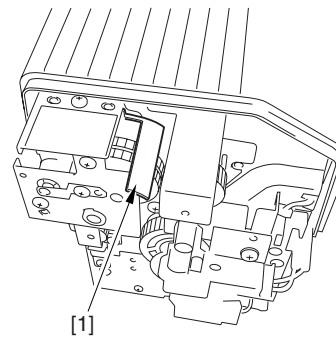


F-9-199

9.6.14.2 Removing the Fixing

Web Unit


0003-2541

1) Remove the 2 screws [1], and detach the fixing upper cover [2].

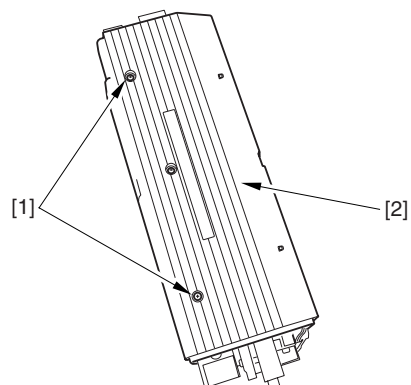

F-9-200

2) Remove the 1 screws [1], and detach the fixing web unit [2].

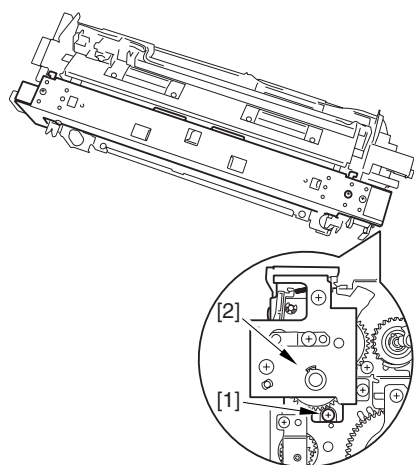


F-9-201

9.6.14.3 Removing the Fixing

Web

0002-9569

1) Remove the 2 screws [1], and detach the 2 fixings [2]; then, detach the fixing web [3].

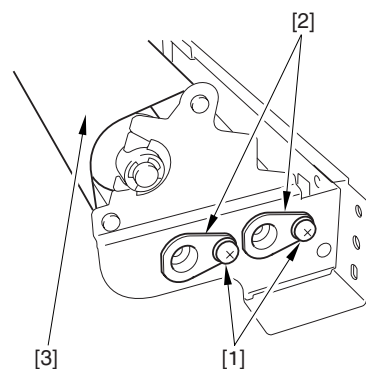


F-9-202

9.6.14.4 Attaching the Fixing

Web

0002-9570

Attach the fixing web as shown:

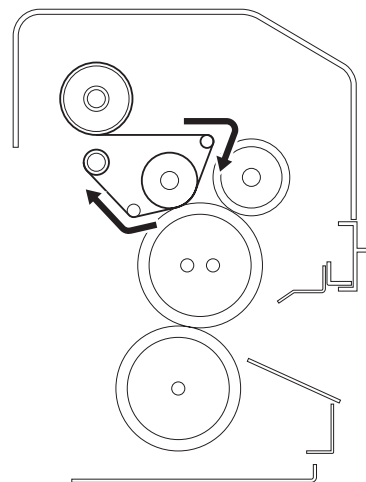

F-9-203

9.6.14.5 When Replacing the Fixing Web 0002-9572


1. After attaching the web, take up its slack so that there will be no slack when the web unit is fitted in the fixing assembly.
2. After replacing the web, reset the readings of the following service mode items:

COPIER>COUNTER>MISC>FIX-WEB
COPIER>COUNTER>DRBL-1>FX-WEB

9.6.15 Fixing Motor


9.6.15.1 Removing the Fixing Front Cover 0003-7052

- 1) Open the front cover.
- 2) Slide out the fixing/feeding assembly.
- 3) Open the re reversal delivery cover [1] and the middle cover [2].

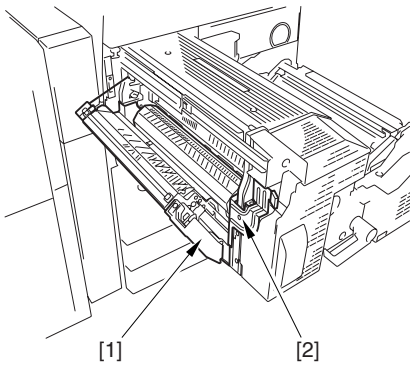

F-9-204


- 5) Remove the knob [1] and the 2 screws [2]; then, detach the fixing front cover [3].

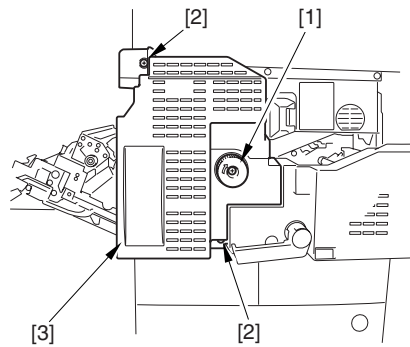

F-9-205

9.6.15.2 Removing the Fixing Motor 0003-7054

- 1) Disconnect the 2 connectors [1], and remove the 3 screws [2]; then, detach the fixing motor [3].

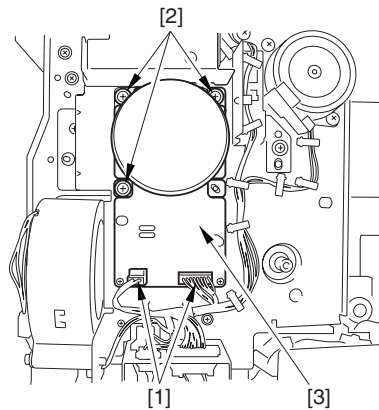

F-9-206


9.6.16 External Heater Shift Motor

9.6.16.1 Removing the Fixing

Front Cover


0003-7984

- 1) Open the front cover.
- 2) Slide out the fixing/feeding assembly.
- 3) Open the re reversal delivery cover [1] and the middle cover [2].

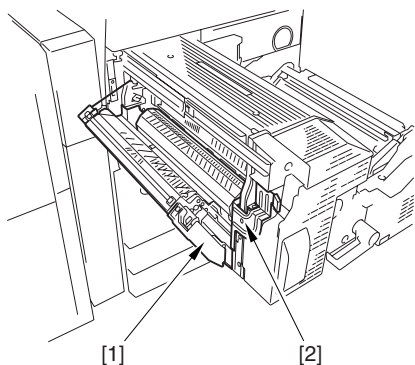

F-9-207

- 5) Remove the knob [1] and the 2 screws [2]; then, detach the fixing front cover [3].

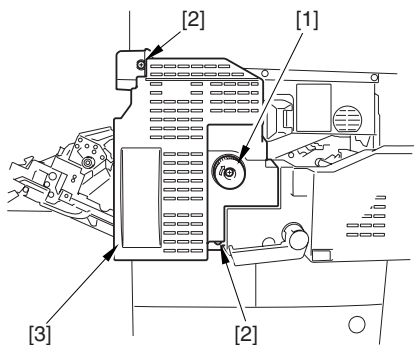


F-9-208

9.6.16.2 Removing the Outside

Heating Roller Shift Motor


0003-7985

- 1) Remove the 3 screws [1], and disconnect the 3 connectors [2]; then, after shifting the timing belt [3] to the front, detach it together with the fixing motor base [4].

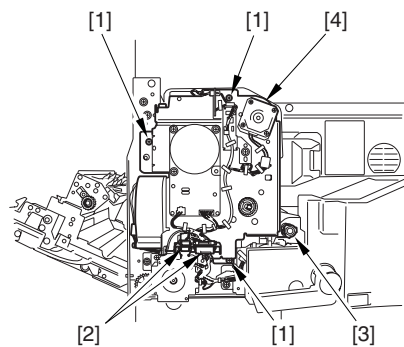

F-9-209

- 2) Free the harness from the cable guide [1]; then, disconnect the connector [2].
- 3) Remove the screw [3], and detach the outside heating roller shift motor [4].

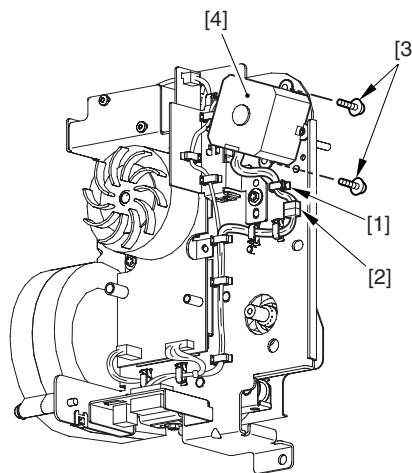

F-9-210


9.6.17 Upper Separation Claw

9.6.17.1 Removing the Delivery

Upper Separation Claw


0003-2571

- 1) Open the front cover.
- 2) Slide out the fixing/feeding assembly.
- 3) Open the reversal delivery cover.

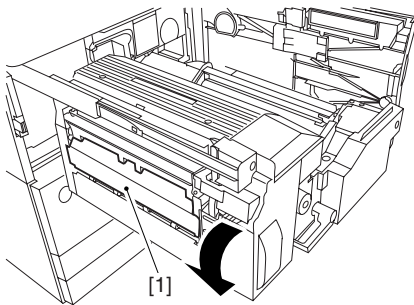


F-9-211

- 4) Open the middle cover.

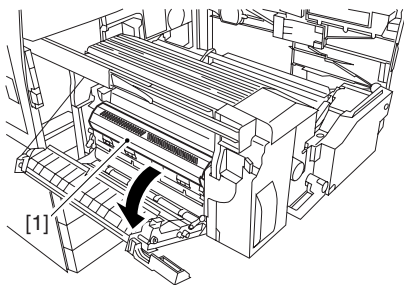


F-9-212

- 5) Remove the screw [1], and detach the leaf spring [2].

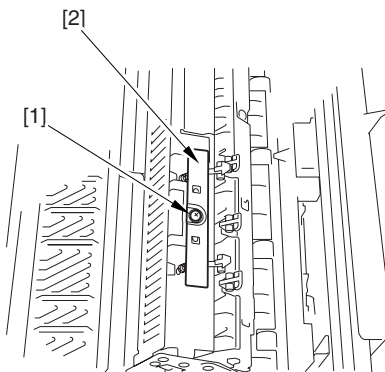

F-9-213

- 6) Turn the separation claw [1] in the direction of the arrow; then, free the hook of the spring [2] to detach it in upward direction.

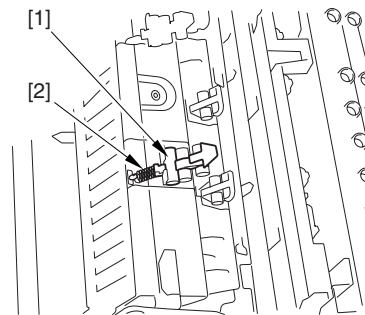

F-9-214


9.6.18 Lower Separation Claw

9.6.18.1 Removing the Delivery

Lower Separation Claw


0003-2572

- 1) Open the front cover.
- 2) Slide out the fixing/feeding assembly.
- 3) Open the reversal delivery cover.

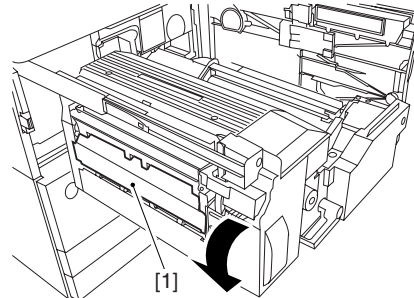


F-9-215

- 4) Open the middle cover.

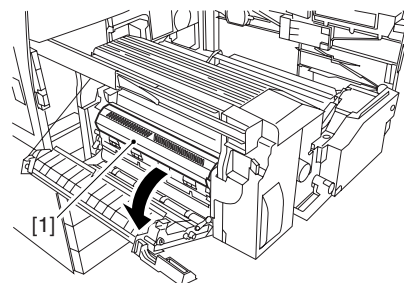


F-9-216

5) Detach the spring [1] from the rear of the delivery assembly.

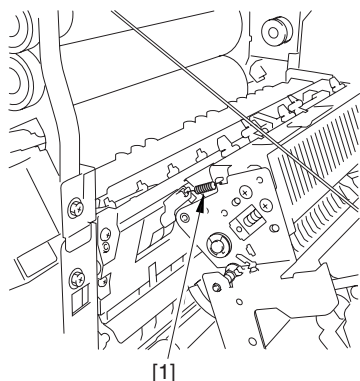


F-9-217

6) Remove the screw [1] from the front of the delivery assembly; then, pull out the pin [2], and slide the lower separation claw assembly [3] toward the front to detach.

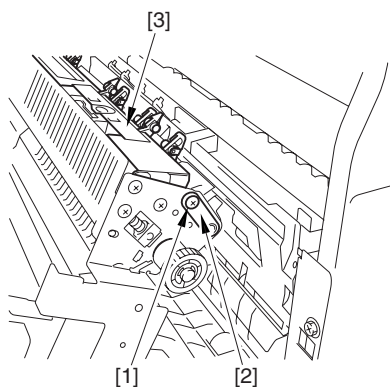


F-9-218

7) Remove the screw [1], and detach the leaf spring [2].

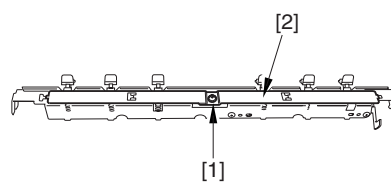

F-9-219

8) Free the hook of the spring [1], and detach the lower separation claw [2].

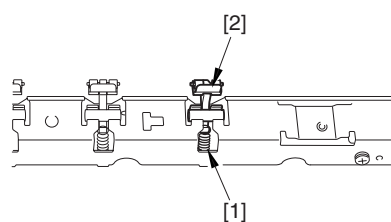

F-9-220

Chapter 10 Externals and Controls

Contents

10.1 Control Panel.....	10-1
10.1.1 Overview	10-1
10.1.2 LCD Processing.....	10-2
10.1.3 LCD Contrast Adjustment.....	10-2
10.1.4 Control Panel CPU	10-2
10.2 Counters.....	10-3
10.2.1 Overview	10-3
10.2.2 Increasing the Count.....	10-6
10.3 Fans	10-7
10.3.1 Overview	10-7
10.3.2 Sequence of Operations.....	10-9
10.4 Power Supply	10-10
10.4.1 Power Supply	10-10
10.4.1.1 Route of Power Supply Inside the Printer Unit.....	10-10
10.4.1.2 Power to the Environment Heater	10-13
10.4.2 Rated Output of DC Power Supply PCB.....	10-14
10.4.2.1 Rated Output of the Printer Power Supply PCB	10-14
10.4.2.2 Rated Output of the DC/DC Converter PCB 1.....	10-14
10.4.2.3 Rated Output of the DC/DC Converter PCB 2.....	10-15
10.4.3 Protection Function	10-15
10.4.3.1 Protection of the Power Supply PCB	10-15
10.4.3.2 Protection by a Fuse	10-15
10.4.4 Backup Battery	10-17
10.4.4.1 Backup Battery	10-17
10.5 Parts Replacement Procedure.....	10-18
10.5.1 Hopper Drive Unit.....	10-18
10.5.1.1 Removing the Right Cover (upper).....	10-18
10.5.1.2 Releasing the Front Cover	10-18
10.5.1.3 Releasing the Hopper Assembly	10-19
10.5.1.4 Removing the Hopper Assembly.....	10-20
10.5.1.5 Removing the Hopper Drive Assembly	10-20
10.5.2 Power Cord Base	10-21
10.5.2.1 Removing the Rear Cover (lower)	10-21
10.5.2.2 Removing the Left Cover (lower)	10-21
10.5.2.3 Removing the Power Cord Base.....	10-22
10.5.3 Control Panel.....	10-23
10.5.3.1 Removing the Right Cover (upper).....	10-23
10.5.3.2 Releasing the Hopper Assembly	10-23
10.5.3.3 Removing the Reader Left Cover.....	10-24
10.5.3.4 Removing the Control Panel	10-24
10.5.4 DC Controller PCB	10-25
10.5.4.1 Removing the Rear Cover (upper)	10-25
10.5.4.2 Sliding the DC Controller Box.....	10-25
10.5.4.3 Removing the DC Controller PCB.....	10-25
10.5.4.4 Points to Note When Mounting the DC Controller PCB	10-26
10.5.5 Printer Power Supply PCB	10-26
10.5.5.1 Removing the Rear Cover (lower)	10-26
10.5.5.2 Removing the DC Power Supply Unit	10-26

10.5.6 Leakage Breaker	10-27
10.5.6.1 Removing the Rear Cover (lower).....	10-27
10.5.6.2 Removing the Left Cover (lower).....	10-27
10.5.6.3 Removing the Power Cord Base.....	10-27
10.5.6.4 Removing the Leakage Breaker.....	10-28
10.5.7 Fixing Relay.....	10-29
10.5.7.1 Removing the Rear Cover (lower).....	10-29
10.5.7.2 Removing the DC/DC converter PCB2.....	10-29
10.5.8 Relay PCB	10-29
10.5.8.1 Removing the Rear Cover (lower).....	10-29
10.5.8.2 Removing the Relay PCB.....	10-30
10.5.9 DC Relay	10-30
10.5.9.1 Removing the Rear Cover (lower).....	10-30
10.5.9.2 Removing the DC Relay.....	10-30
10.5.10 HV1 PCB	10-30
10.5.10.1 Removing the Rear Cover (upper).....	10-30
10.5.10.2 Removing the Rear Cover (lower).....	10-31
10.5.10.3 Removing the Right Cover (upper rear)	10-31
10.5.10.4 Removing the Right Cover (lower rear)	10-31
10.5.10.5 Removing the HV1 PCB.....	10-32
10.5.11 HV2 PCB	10-33
10.5.11.1 Detaching the Left Cover (upper).....	10-33
10.5.11.2 Removing the delivery cover.....	10-33
10.5.11.3 Removing the Left Cover (middle).....	10-33
10.5.11.4 Removing the HV2 PCB.....	10-33
10.5.12 HV3 PCB	10-34
10.5.12.1 Removing the Secondary Transfer Unit	10-34
10.5.12.2 Removing the HV3 PCB.....	10-35
10.5.13 Fixing/Feed Driver PCB.....	10-36
10.5.13.1 Removing Fixing/Feeding Driver PCB	10-36
10.5.13.2 Fixing/Feeding Driver PCB.....	10-37
10.5.14 Pickup Driver PCB	10-37
10.5.14.1 Removing the Rear Cover (lower).....	10-37
10.5.14.2 Removing the DC Power Supply Unit.....	10-37
10.5.14.3 Removing Pickup Driver PCB.....	10-38
10.5.15 Switch PCB.....	10-38
10.5.15.1 Removing the Rear Cover (lower).....	10-38
10.5.15.2 Removing the Left Cover (lower).....	10-38
10.5.15.3 Removing the Switch PCB	10-38
10.5.16 Primary Exhaust Fan.....	10-39
10.5.16.1 Removing the Rear Cover (upper).....	10-39
10.5.16.2 Removing the Right Cover (Upper rear)	10-39
10.5.16.3 Sliding the DC Control Box	10-40
10.5.16.4 Removing the DC Controller Box	10-40
10.5.16.5 Points to Note When Mounting the DC Controller Box.....	10-41
10.5.16.6 Removing the Primary Exhaust Fan.....	10-41
10.5.17 Fixing Heat Discharge Fan	10-42
10.5.17.1 Removing the Rear Cover (upper).....	10-42
10.5.17.2 Removing the Rear Cover (lower).....	10-42
10.5.17.3 Removing the Delivery Cover.....	10-43
10.5.17.4 Removing the Left Cover (middle).....	10-43
10.5.17.5 Removing the Controller Box Cover.....	10-43
10.5.17.6 Removing the Controller Box.....	10-44
10.5.17.7 Removing the Fixing/Delivery Fan	10-45

10.5.18 Power Supply Cooling Fan.....	10-46
10.5.18.1 Removing the Rear Cover (lower)	10-46
10.5.18.2 Removing the DC Power Supply Unit	10-46
10.5.18.3 Removing the Power Supply Cooling Fan	10-46
10.5.19 Delivery Cooling Fan 1	10-47
10.5.19.1 Removing the Left Cover (upper)	10-47
10.5.19.2 Removing the Delivery Cover	10-47
10.5.19.3 Removing the Left Cover (middle)	10-47
10.5.19.4 Removing the Delivery Cooling Fan 1.....	10-48
10.5.20 Delivery Cooling Fan 2	10-48
10.5.20.1 Removing the Fixing Front Cover.....	10-48
10.5.20.2 Removing the Delivery Cooling Fan 2.....	10-49
10.5.21 Ozone Filter	10-49
10.5.21.1 Removing the Ozone Filter	10-49
10.5.21.2 Removing the Fixing Heat Discharge Ozone Filter	10-50
10.5.22 Toner Filter.....	10-50
10.5.22.1 Removing the Toner Filter	10-50
10.5.23 Sub Toner Filter.....	10-51
10.5.23.1 Removing the Left Cover (upper)	10-51
10.5.23.2 Removing the Delivery Cover	10-51
10.5.23.3 Removing the Left Cover (middle)	10-52
10.5.23.4 Removing the HV2 PCB	10-52
10.5.23.5 Removing the Sub Toner Filter	10-52


10.1 Control Panel

10.1.1 Overview

0003-2955

The machine's control panel consists of PCBs, LCD, and touch panel as shown below, and its functions include the following:

- LCD display
- contrast adjustment
- touch switch input processing
- hard key input processing

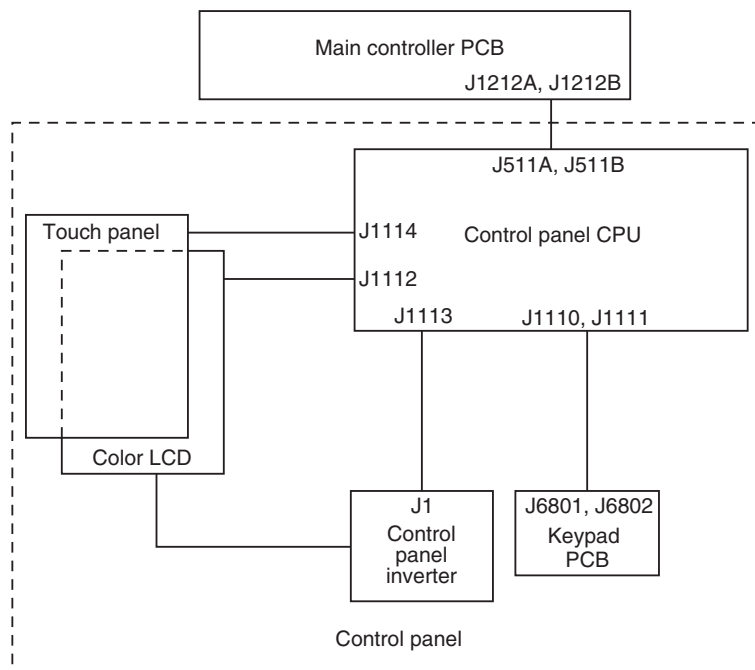

F-10-1

10.1.2 LCD Processing

0003-2956

The CPU on the main controller PCB sends data (display information) to the control panel CPU PCB according to the instructions at such times as programmed.

The data goes through the control panel CPU PCB for display on the color LCD.

10.1.3 LCD Contrast Adjustment

0003-2957

The machine's keypad PCB is equipped with a contrast adjustment volume (VR6801) to enable the user to adjust the contrast of the LCD.

10.1.4 Control Panel CPU

0003-2958

-Monitoring Key Inputs

communicates the inputs made on the keypad or function keys to the CPU on the main controller PCB.

-Monitoring Touch Panel Inputs

communicates the inputs made on the touch panel to the CPU on the main controller PCB.

-Controlling the Buzzer Sound

-Controlling the Control Panel LED

Memo:

The color LCD is driven by the main controller, and the control panel CPU PCB serves to relay the drive signals.

10.2 Counters

10.2.1 Overview

0003-2959

The machine is equipped with counters used to keep count of prints according to output functions; the counters are indicated on the control panel in response to a press on the Check key on the panel. The following shows the counters and the settings made at time of shipment from the factory:

T-10-1

Model	Counter 1	Counter 2	Counter 3	Counter 4	Counter 5	Counter 6
100V *1 ***	total 1	total (black-and-white 1)	copy (full color + mono color 1)	print (full color + mono color 1)	not indicated**	not indicated**
	101	108	232	324	000	000

T-10-2

Model	Counter 1	Counter 2	Counter 3	Counter 4	Counter 5	Counter 6
100V *1 ****	total 2	copy (full color + mono color 2)	total A (full color + mono color 2)	copy (black-and-white 1)	total A (black-and-white 2)	not indicated**
	102	231	148	222	133	000

T-10-3

Model	Counter 1	Counter 2	Counter 3	Counter 4	Counter 5	Counter 6
120V TW *2	total 1	total (black-and-white 1)	copy + print (full color; large)	copy + print (full color; small)	total (mono color 1)	not indicated**
	101	108	401	402	118	000

T-10-4

Model	Counter 1	Counter 2	Counter 3	Counter 4	Counter 5	Counter 6
120V UL *3	total 1	total (black-and-white 1)	copy (full color + mono color; large)	copy (full color + mono color; small)	print (full color + mono color; large)	print (full color + mono color; small)
	101	108	229	230	321	322

T-10-5

Model	Counter 1	Counter 2	Counter 3	Counter 4	Counter 5	Counter 6
230V *4	total 1	total (black-and-white 1)	copy + print (full color; large)	copy + print (full color; small)	total (mono color 1)	total 1 (double-sided)
	101	108	401	402	118	114

T-10-6

Model	Counter 1	Counter 2	Counter 3	Counter 4	Counter 5	Counter 6
240V UK *5	total 1	total (full color + mono color; large)	total (full color + mono color; small)	total (black-and-white; large)	total (black-and-white; small)	scan (total 1)
	101	122	123	112	113	501

T-10-7

Model	Counter 1	Counter 2	Counter 3	Counter 4	Counter 5	Counter 6
240V CA *6	total 1	total (black-and-white 1)	copy (full color + mono color; large)	copy (full color + mono color; small)	print (full color + mono color; large)	print (full color + mono color; small)
	101	108	229	230	321	322

T-10-8

Model	Counter 1	Counter 2	Counter 3	Counter 4	Counter 5	Counter 6
230V FRN *7	total 1	total (full color + mono color; large)	total (full color + mono color; small)	total (black-and-white; large)	total (black-and-white; small)	scan (total 1)
	101	122	123	112	113	501

T-10-9

Model	Counter 1	Counter 2	Counter 3	Counter 4	Counter 5	Counter 6
230V GER *8	total 1	total (full color + mono color; large)	total (full color + mono color; small)	total (black-and-white; large)	total (black-and-white; small)	scan (total 1)
	101	122	123	112	113	501

T-10-10

Model	Counter 1	Counter 2	Counter 3	Counter 4	Counter 5	Counter 6
230V AMS *9	total 1	total (full color + mono color; large)	total (full color + mono color; small)	total (black-and- white; large)	total (black-and- white; small)	scan (total 1))
	101	122	123	112	113	501

T-10-11

Model	Counter 1	Counter 2	Counter 3	Counter 4	Counter 5	Counter 6
230V ITA *10	total 1	total (full color + mono color; large)	total (full color + mono color; small)	total (black-and- white; large)	total (black-and- white; small)	scan (total 1)
	101	122	123	112	113	501

<Notations>

large: large-size paper (sheet in excess of 364 mm in length in paper feed direction; count increased by 1).

small: small-size paper (sheet 364 mm or shorter in length in paper feed direction).

total: all (copy + print); count increased by 1.

double-sided: in auto duplexing mode, count increased by 1.

-the 3-digit notation in the Counter column shows the setting of the following service mode item:
COPIER>OPTION>USER>COUNTER 1 through 6

-counters 2 through 6 may be changed using the following service mode item: COPIER>OPTION>USER.

*1 : F14-4011/4012

*2 : F14-4001

*3 : F14-4031

*4 : F14-4041/4042/4060/4070

*5 : F14-4051/4054

*6 : F14-4061/4062

*7 : F14-4071/4072

*8 : F14-4081/4082

*9 : F14-4091/4091

*10 : F14-4021/4022

** : by default, not indicated; may be changed in serve mode.

*** : if '0' is set for the following: COPIER>OPTION>USER>CNT-SW.

****: if '1' is set for the following: COPIER>OPTION>USER>CNT-SW.

10.2.2 Increasing the Count

0003-2960

The machine increases the count based on the type of print (single-sided or double-sided) and the presence/absence of a finisher.

a. Single-Sided Print, 2nd Side of a Double-Sided Print

When making a single-sided print or the 2nd side of a double-sided print, the machine increases the count when the trailing edge of paper is discharged outside the machine (as indicated by the output of the following sensor).

T-10-12

Finisher	Sensor
present	outside delivery sensor (PS13)
absent	delivery sensor of the finisher

b. 1st Side of a Double-Sided Print

The machine assumes the end of printing on the 1st side of a double-sided print to be when the duplexing left sensor (PS17) goes on, thus increasing the count.

10.3 Fans


10.3.1 Overview

0003-2962

The following shows the names and functions of the fans used in the machine:

T-10-13

Notation	Name	Filter	2-speed control	Description	error
FM1	primary charging suction fan	yes	yes	draws air from outside the machine to the primary charging assembly.	E824-0000
FM2	primary charging exhaust fan	yes	yes	discharges exhaust from around the primary charging assembly.	E824-0001
FM3	feed fan 1	no	no	keeps paper on the feed belt.	
FM4	feed fan 2	no	no	keeps paper on the feed belt.	
FM11	feed fan 3	no	no	keeps paper on the feed belt.	
FM12	feed fan 4	no	no	keeps paper on the feed belt.	
FM5	fixing heat exhaust fan	no	yes	discharges heat generated by the fixing assembly.	E805-0003
FM6	delivery cooling fan 1	no	no	cools the delivery assembly.	
FM7	process unit cooling fan	no	yes	cools the process unit.	E804-0002
FM8	controller cooling fan	no	no	cools the controller.	E804-0004
FM9	power supply cooling fan	no	no	cools the power supply.	E804-0007
FM10	delivery cooling fan 2	no	yes	cools paper at time of delivery.	
FM13	reader cooling fan	no	no	cools reader unit	
FM14	DF feed motor cooling fan	no	no	cools DF feed motor	

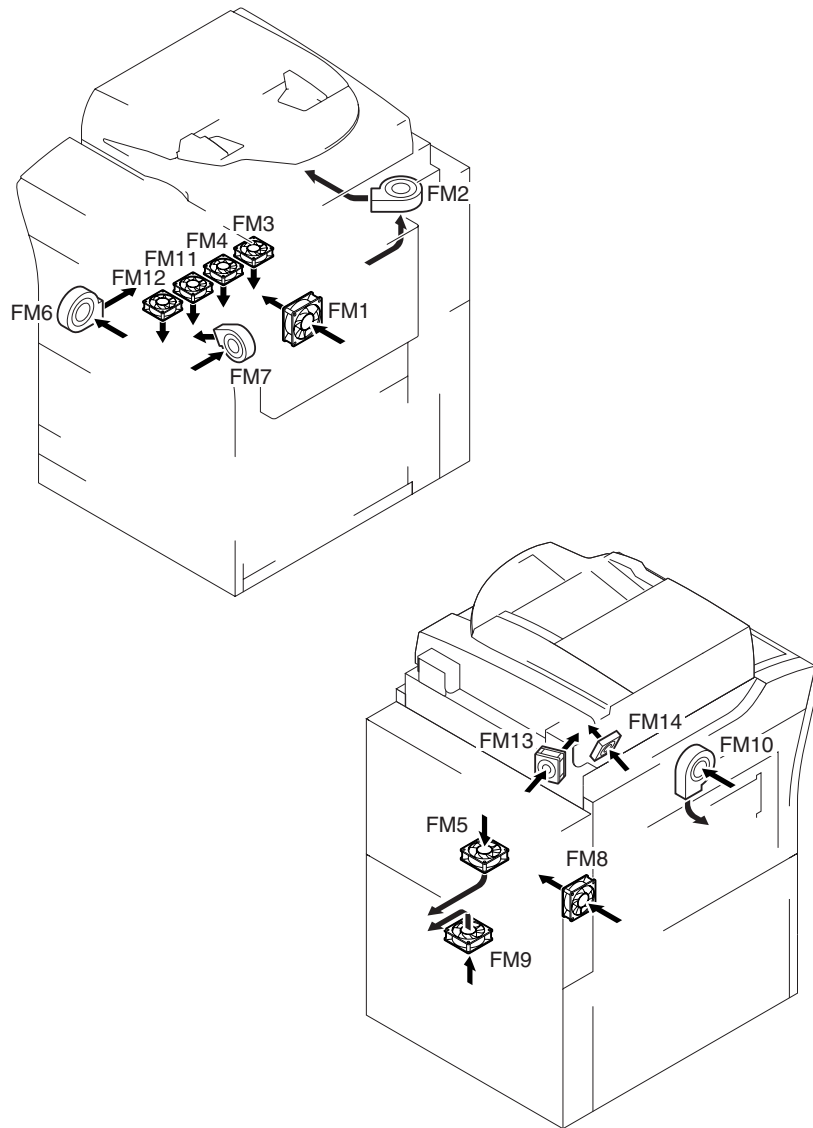


F-10-2

10.3.2 Sequence of Operations

0005-4704

The machine uses the following sequence of operation to turn on or off the fans:

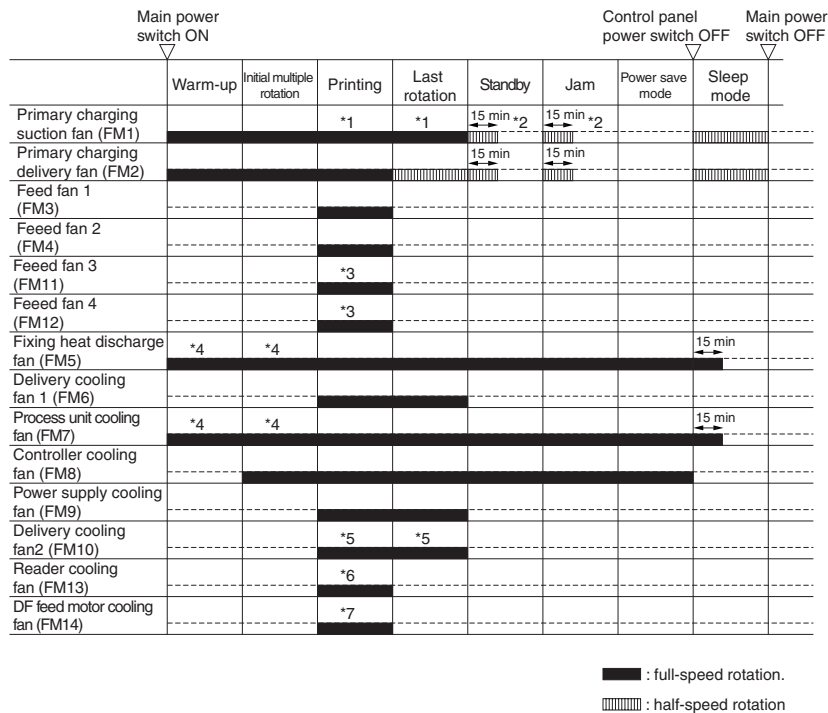

F-10-3

- *1: if in a high temperature/humidity environment, half-speed rotation.
- *2: if in a high temperature/humidity environment, full-speed rotation.
- *3: rotates only if all following conditions exist: paper shorter than LTR (216 mm or less), heavy paper mode, full color duplexing mode.
- *4: if the fixing temperature is 100 deg C or higher when the main power switch is tuned on, full-speed rotation; if lower than 100 deg C, stops. However, even when the fixing roller is lower than 100 deg C, half-speed rotation will be used if the temperature of the outside heating roller is 100 deg C or higher.
- *5: if a finisher is installed, full-speed rotation at all times; if a delivery tray or a shift tray is installed, rotates only in mono color transparency mode. (for the US mode, full-speed rotation; for non-US models, half-speed rotation)
- *6: rotates when the scanning lamp goes on.
- *7: rotates when the DF feed motor is on.

10.4 Power Supply

10.4.1 Power Supply

10.4.1.1 Route of Power Supply Inside the Printer Unit

0003-2965

The machine's DC power supply is controlled by the printer power supply PCB. The power to accessories is also controlled by the printer power supply PCB.


The following shows the functions of PCBs associated with power supply:

T-10-14

Name	Description
Printer power supply PCB (DC power supply PCB + DC power supply relay PCB)	generates DC power (24 V, 13 V); supplies DC power to the controller power supply PCB, DC controller PCB, pickup driver PCB, fixing diver PCB, high-voltage power supply PCB, reader unit, finisher, side deck, fax board.
AC driver PCB	supplies AC power to the printer power supply PCB and the fixing heater drive.
Environment switch PCB	turns on and off the power to the drum heater, reader heater 1, cassette heater, and deck heater*1.
DC/DC converter PCB 1	supplies DC power to the main controller PCB and the DC controller PCB.
Main power switch	turns on and off the AC power to the printer power supply PCB.
Door switch	turns on and off the 3 VA.
Leakage breaker	cuts off power in the event of an error.

*1: in the case of the 100/230-V model, optional; in the case of the 120-V model, not available.

*2: in the case of the 100-V model, standard; in the case of the 120-V model, not available.

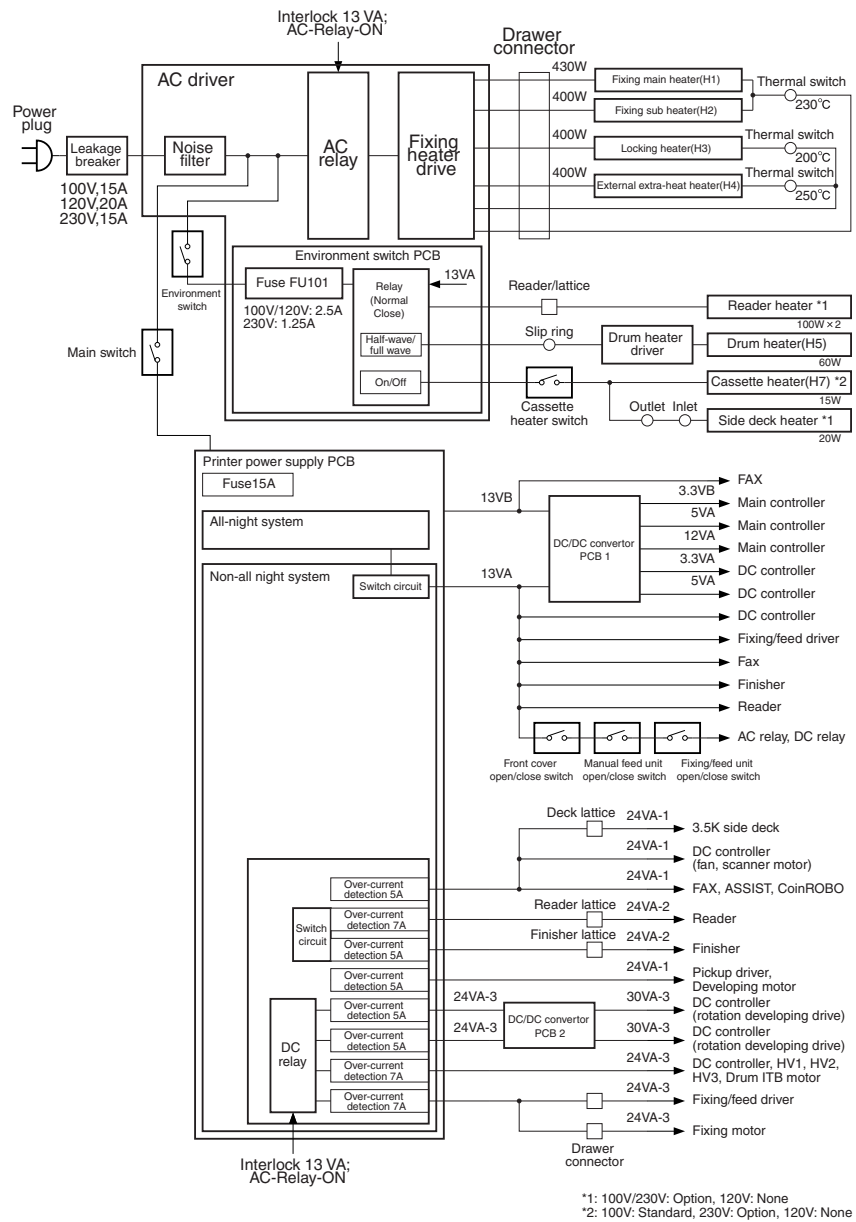

F-10-4


T-10-15

Operating mode		Main power switch	Sleep	Low power	Door open	Fixing error	Print*
Main power switch		OFF	ON	ON	ON	ON	ON
all-night	13VB	OFF	ON	ON	ON	ON	ON
non-all night	13VA	OFF	OFF	ON	ON	ON	ON
	24VA-1	OFF	OFF	OFF	ON	ON	ON
	24VA-2	OFF	OFF	OFF	ON	ON	ON
	24VA-3	OFF	OFF	OFF	OFF	ON	ON
	30VA-3	OFF	OFF	OFF	OFF	ON	ON
	DC relay	OFF	OFF	OFF	OFF	ON	ON
	AC relay	OFF	OFF	ON	OFF	OFF	ON

* same is true for standby, warm-up, and recovery.

10.4.1.2 Power to the Environment Heater

0003-9458

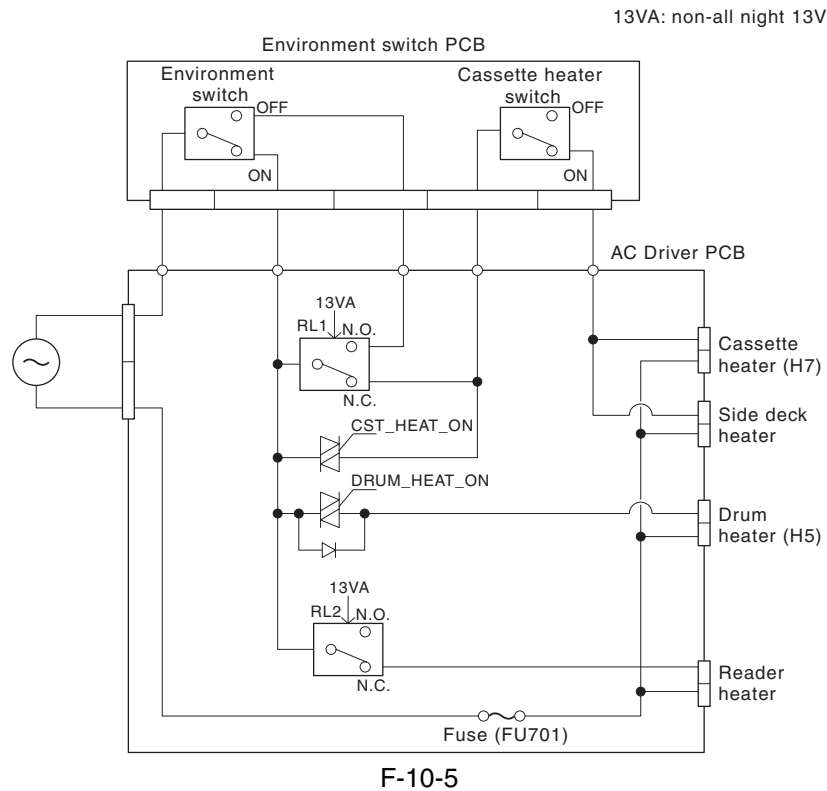

The following shows how the environment heater is supplied with power according to the machine's different modes: (full-wave: full-wave control; half-wave: half-wave control)

a. Environment Switch OFF

T-10-16

Operating mode	Main power OFF		Sleep		Lower power		Standby		Printing		
Main power OFF	OFF		ON								
Cassette heater switch	OFF	ON	OFF	ON	OFF	ON	OFF	ON	OFF	ON	
Drum Heater	OFF	OFF	OFF	OFF	full-wave	full-wave	full-wave	full-wave	half-wave	half-wave	
Cassette Heater	OFF	OFF	OFF	OFF	OFF	ON	OFF	ON	OFF	OFF	
Reader unit Heater	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	

b. Environment Switch ON

T-10-17

Operating mode	Main power OFF		Sleep		Low power		Standby		Printing	
Main power OFF	OFF		ON							
Cassette heater switch	OFF	ON	OFF	ON	OFF	ON	OFF	ON	OFF	ON
Drum Heater	half-wave	half-wave	half-wave	half-wave	full-wave	full-wave	full-wave	full-wave	half-wave	half-wave
Cassette Heater	OFF	ON	OFF	ON	OFF	ON	OFF	ON	OFF	OFF
Reader unit Heater	ON	ON	ON	ON	OFF	OFF	OFF	OFF	OFF	OFF

10.4.2 Rated Output of DC Power Supply PCB**10.4.2.1 Rated Output of the Printer Power Supply PCB**0003-2966

The following shows the ratings and the power supply tolerances of the printer power supply PCB (DC power supply PCB + DC power supply relay PCB):

T-10-18

Output	13VA	13VB	24VA-1	24VA-2	24VA-3
All-night /non-all night	non-all night	all-night	non-all night	non-all night	non-all night
Rated output	13.2V	13.2V	24V	24V	24V
Tolerance	+/-3%	+/-3%	+8%, -6%	+8%, -6%	+8%, -6%

10.4.2.2 Rated Output of the DC/DC Converter PCB 10003-2967

The following shows the ratings and the power supply tolerances of the DC/DC converter PCB 1:

T-10-19

Output	3VA	3VB	5VA	12VA
All-night /non-all night	non-all night	all-night	non-all night	non-all night
Rated output	3.4V	3.4V	5.1V	12V
Tolerances	+/-4%	+/-4%	+/-3%	+5%, -6%

10.4.2.3 Rated Output of the DC/DC Converter PCB 2

0003-9715

The following shows the rating and the power supply tolerances of the DC/DC converter PCB:

T-10-20

Output	30VA-3
All-night/non-all night	non-all night
Rated output	30V
Tolerance	+/-5%

10.4.3 Protection Function

10.4.3.1 Protection of the Power Supply PCB

0003-2968

The machine's printer power supply PCB is equipped with a protective mechanism against the presence of excess current or voltage; i.e., if a short-circuit, for instance, occurs on any of the loads to cause over-current or over-voltage, the machine will automatically shut off the output voltage to protect the power supply circuit.

When the protective mechanism has gone on, turn off the main power switch of the printer unit, remove the cause of the activation, leave the machine alone for about 3 min or more, and then turn it back on to reset the protective circuit.

10.4.3.2 Protection by a Fuse

0005-4708

Some PCBs of the machine are equipped with a fuse to protect against over-current occurring in a load. The fuse will melt in the presence of over-current, thereby cutting off the output of the power line.

T-10-21

PCB	Fuse notation	Rating	Reference voltage	Load
DC controller PCB	FU1	2A/60V	13VDC	Primary charging suction fan (FM1), Fixing heat discharge fan (FM5), Process unit cooling fan (FM7); half-speed drive
	FU2	2A/60V	24VDC	Primary charging suction fan (FM1), Fixing heat discharge fan (FM5), Process unit cooling fan (FM7); full-speed drive
	FU3	7A/60V	30VDC	Developing rotary motor (phase A)
	FU4	7A/60V	30VDC	Developing rotary motor (phase B)
AC driver PCB (100 V)	FU701	2.5A/125V	100VAC	Cassette heater, Deck heater
AC driver PCB (200 V)	FU701	1.25A/250V	200VAC	Cassette heater, Deck heater
DC power supply PCB (100 V)	FU101	15A/250V	100VAC	DC power supply PCB

PCB	Fuse notation	Rating	Reference voltage	Load
DC power supply PCB (200 V)	FU101	6.3A/250V	200VAC	DC power supply PCB
DC/DC converter PCB 1	FU500	5A/24V	13VDC	3.3V DC/DC convert pickup (on DC/DC convert PCB 1)
DC power supply relay PCB	FU801	2A/60V	12VDC	ATR sensor (through DC controller PCB)
	FU802	2A/60V	12VDC(-)	ATR sensor (through DC controller PCB)
Fixing/feed driver PCB	FU201	60V/1.5A	24VDC	Feed fan 3, 4 (FM11, FM12)
	FU202	60V/1.5A	24VDC	Feed fan 1, 2 (FM3, FM4)
	FU301	60V/1.5A	24VDC	Reversal shifting solenoid (SL3), Delivery solenoid (SL5)
	FU401	60V/1.5A	24VDC	Delivery cooling fan 1 (FM6)
	FU405	60V/3.15A	24VDC	Secondary transfer outside roller shift motor (M20)
	FU701	50V/800mA	13VDC	5V DC/DC converter circuit (on Fixing/feed driver PCB)
	FU702	50V/800mA	13VDC	3.3 DC/DC converter circuit (on Fixing/feed driver PCB)
Pickup driver PCB	FU1	60V/1.5A	24VDC	not used
	FU2	50V/1.0A	13VDC	5V DC/DC converter circuit (on Pickup drive PCB)

10.4.4 Backup Battery

10.4.4.1 Backup Battery

0003-2969

The SRAM PCB and the DC controller PCB of the machine's main controller PCB are equipped with a lithium battery (1 pc. each) serving as a backup source of power in the event of a power shortage or when the power plug is disconnected.

T-10-22

SRAM PCB	manganese dioxide lithium battery (3 V, 100 mAh)
DC controller PCB	lithium battery (3 V, 6000 mAh)
Life	10 yr or more (true of both; with power plug disconnected)
Replacement	not possible in the field on its own.

⚠ You must always handle the batteries properly. Be sure to use batteries indicated by the manufacture (same name or equivalent). Be sure to dispose of any used battery in strict accordance with the instructions of the manufacturer. Do not use a battery which is not of a type specifically indicated (same name, or equivalent). Dispose of any used battery according to the instructions of its manufacturer.


10.5 Parts Replacement Procedure

10.5.1 Hopper Drive Unit

10.5.1.1 Removing the Right Cover (upper)

0003-6708

- 1) Remove the 2 screws [1], and detach the right cover (upper) [2].

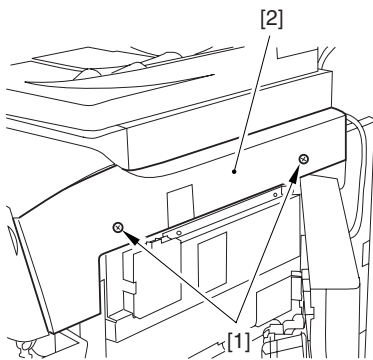


F-10-6

10.5.1.2 Releasing the Front Cover


0003-6709

- 1) Open the front cover.
- 2) While pulling on the grip [1], fully open the manual feed cover [2] to the front.

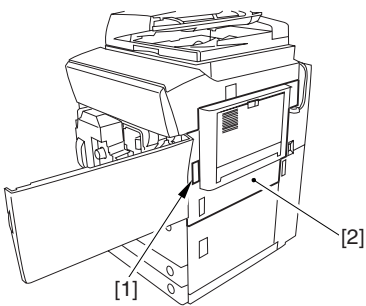


F-10-7

- ⚠** If a side paper deck exists, remove the 2 screws [1] and the latch plate (front)

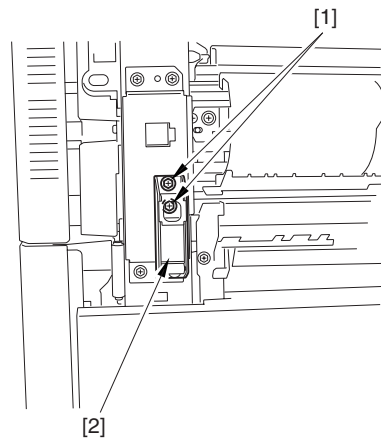


F-10-8

- 3) Slide out the fixing/feeding assembly
- 4) Remove the 2 screws [1], and detach the process unit cover [2].

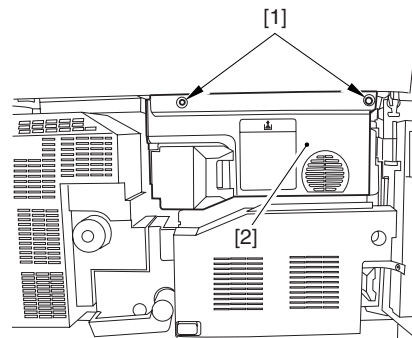


F-10-9

- 5) Push in the fixing/feeding assembly, and set the lever in place.
- 6) Push the release button [1] of the right deck, and slide out the right deck [2].

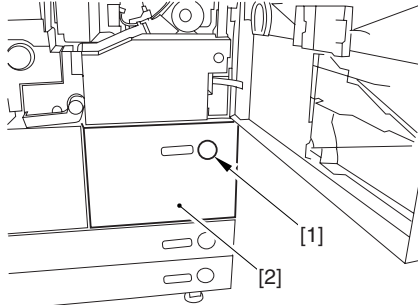


F-10-10

- 7) Remove the screw [1] from lower right, and detach the front cover strap [2].

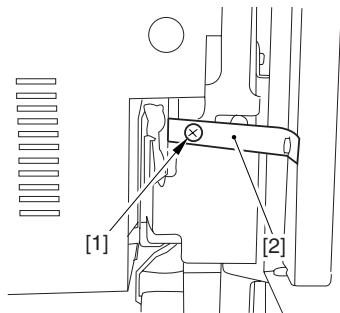

F-10-11

- 8) Remove the 2 screws [1] (binding) of the front cover hinge, and fully open the front cover [2].

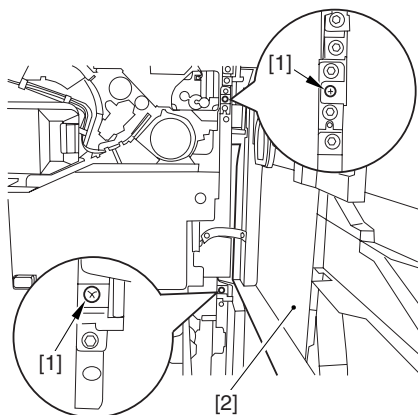


F-10-12

- 9) Close the right deck.

10.5.1.3 Releasing the Hopper Assembly


0003-6710

- 1) Open the black toner supply cover [1].

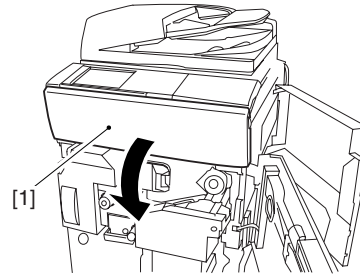


F-10-13

- 2) Shift down the lever [1], and detach the black toner bottle [2].

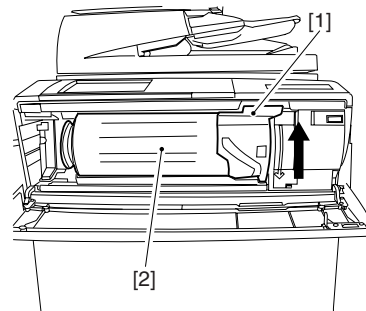


F-10-14

⚠ Once you have released the hopper assembly, toner can spill over the toner bottle supply mouth of the hopper assembly cover. Be sure to wipe off any such toner.

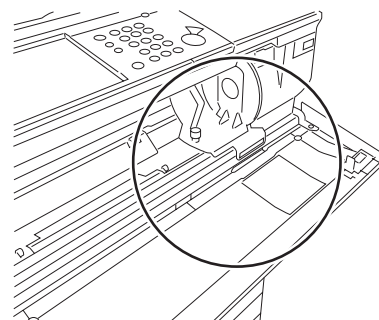


F-10-15

3) Remove the 3 screws [1].

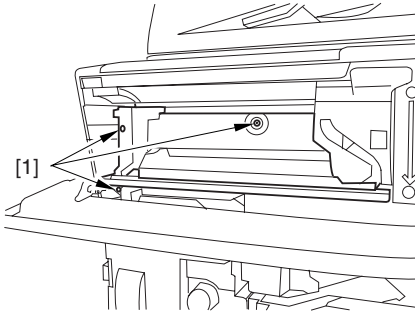

F-10-16

4) Close the black toner supply cover [1]; then, fully open the hopper assembly [2].

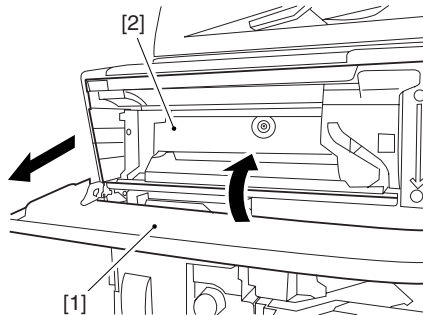


F-10-17

10.5.1.4 Removing the Hopper Assembly

0003-6712


1) Disconnect the connector [1], and pick and detach the wire saddle [2].

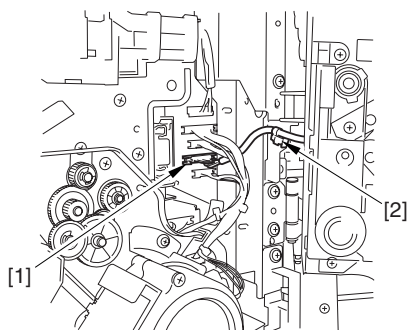

F-10-18

2) Close the hopper assembly.

3) Remove the E-ring [1].

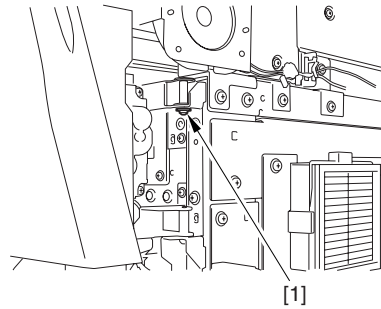

F-10-19


4) Open the hopper assembly, and lift it to detach.

10.5.1.5 Removing the Hopper

Drive Assembly


0003-6713

1) Open the black toner supply cover [1], and remove the 2 screws [1]; then, detach the hopper inside cover [3].

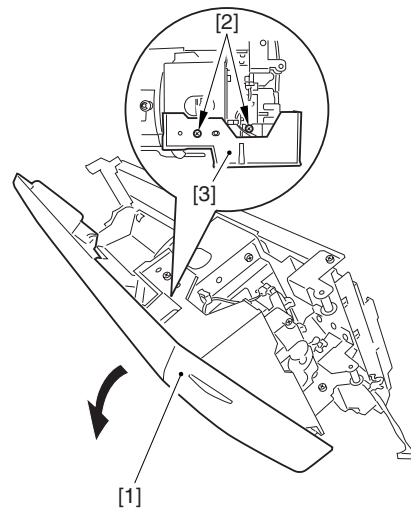


F-10-20

2) Remove the screw [1], and detach the pipe cover [2].

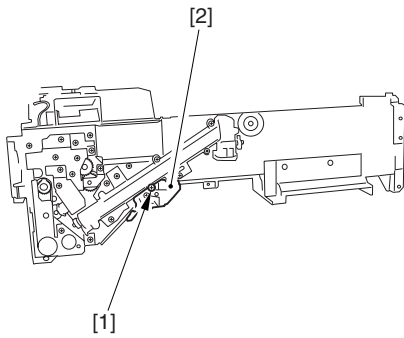


F-10-21

3) Remove the 3 screws [1], and detach the toner feed pipe [2].

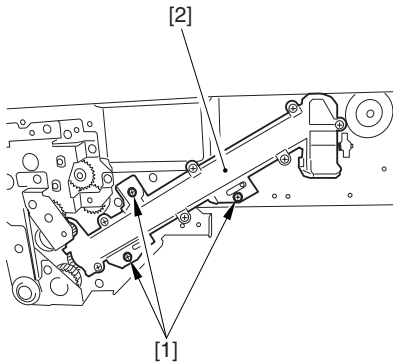

F-10-22

4) Remove the 6 screws [1], and detach the hopper drive assembly [2].

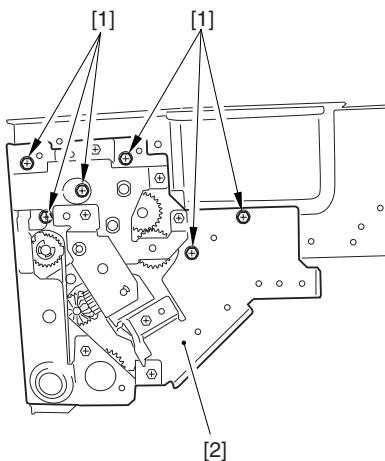

F-10-23


10.5.2 Power Cord Base

10.5.2.1 Removing the Rear

Cover (lower)

0004-5212

1) Remove the 7 screws [1], and detach the rear cover (lower) [2].

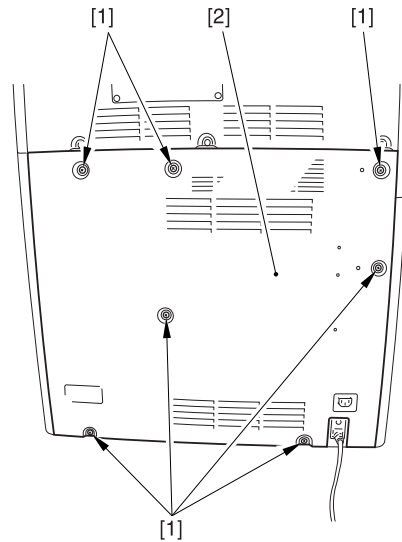

F-10-24


10.5.2.2 Removing the Left

Cover (lower)

0004-5213

1) Remove the 2 grip covers [1].

2) Remove the 6 screws [2], and detach the left cover (lower) [3].

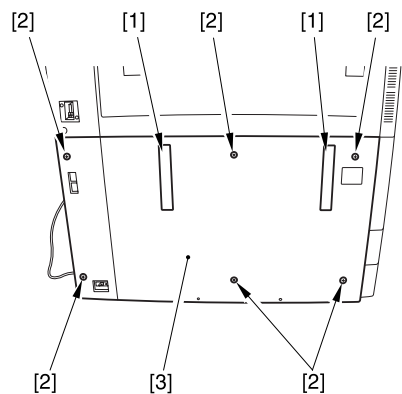


F-10-25

10.5.2.3 Removing the Power Cord Base


0004-5214

1) Remove the 4 screws [1] from the left side.

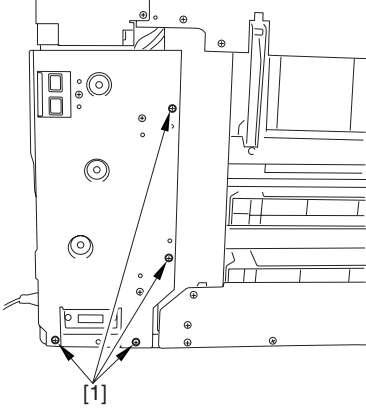


F-10-26

2) Disconnect the 4 connectors [1], and open the 3 wire saddles [2].

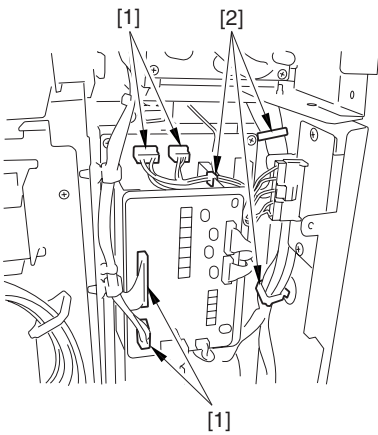


F-10-27

3) Disconnect the 8 connectors [1], and open the wire saddle [2].

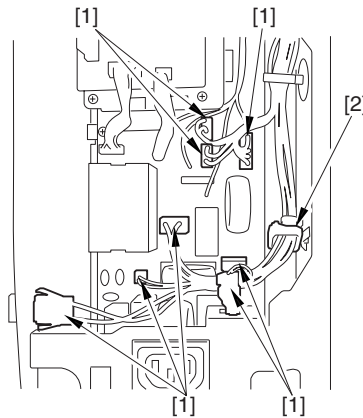

F-10-28

4) Remove the 3 screws [1], and detach the AC driver box [2].

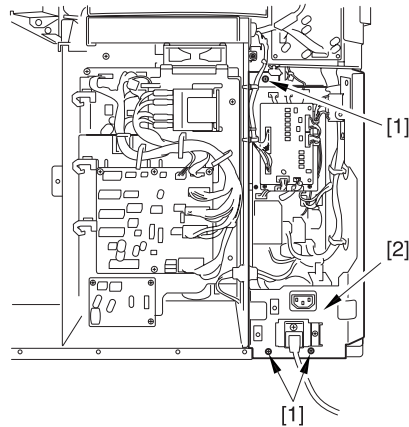

F-10-29


10.5.3 Control Panel

10.5.3.1 Removing the Right

Cover (upper)

0003-8234

- 1) Remove the 2 screws [1], and detach the right cover (upper) [2].

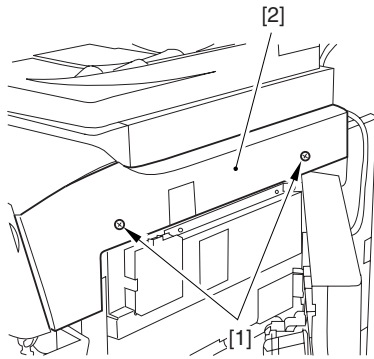


F-10-30

10.5.3.2 Releasing the Hopper

Assembly


0003-4067

- 1) Open the black toner supply cover [1].

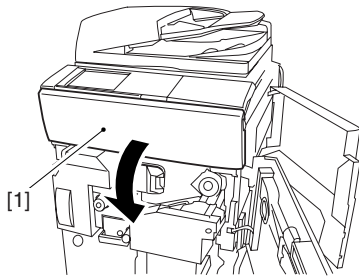


F-10-31

- 2) Shift down the lever [1], and detach the black toner bottle [2].

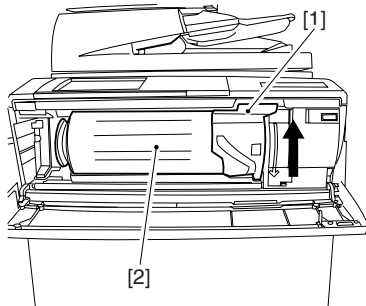


F-10-32

⚠ Once you have released the hopper assembly, toner can spill over the toner bottle supply mouth of the hopper assembly cover. Be sure to wipe off any such toner.

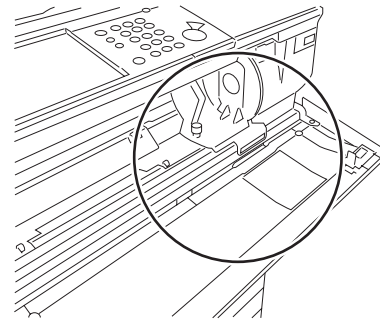


F-10-33

- 3) Remove the 3 screws [1].

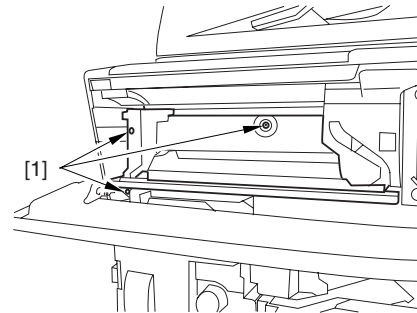

F-10-34

- 4) Close the black toner supply cover [1]; then, fully open the hopper assembly [2].

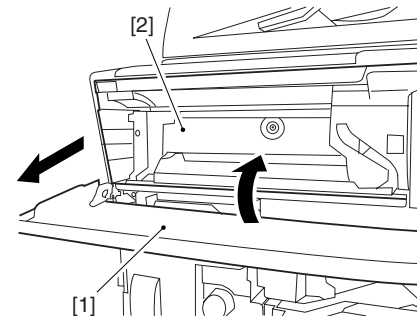


F-10-35

10.5.3.3 Removing the Reader

Left Cover

0003-8243

1) Remove the 2 screws [1], and detach the reader left cover [2].

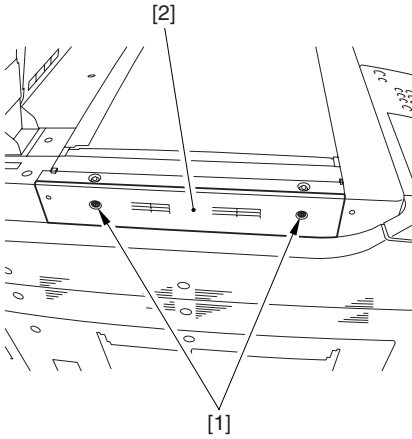


F-10-36

10.5.3.4 Removing the Control Panel

Panel


0003-4090

1) Remove the 2 screws [1], and disconnect the connector [1]; then, detach the control panel inside cover [3].

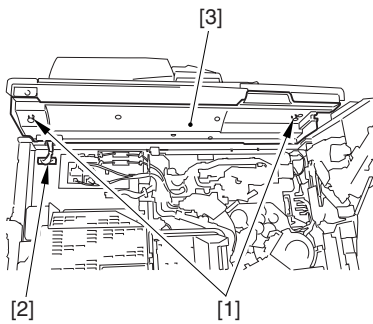


F-10-37

2) Remove the 4 screws [1].

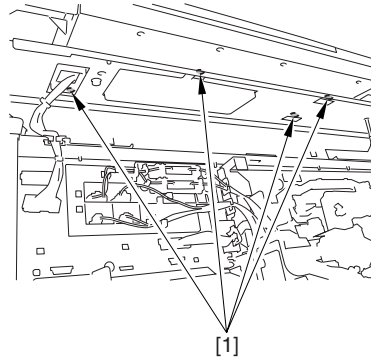

F-10-38

3) Slide the control panel [1] in the direction of the arrow to detach.

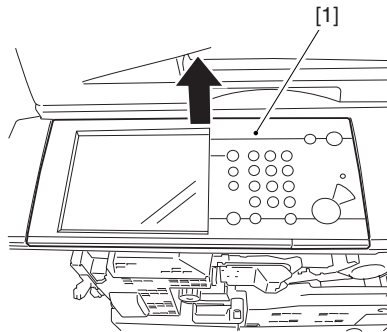

F-10-39


10.5.4 DC Controller PCB

10.5.4.1 Removing the Rear

Cover (upper)


0003-8322

- 1) Free the cable [2] from the 2 cable clamps [1].
- 2) Remove the 2 screws [3].

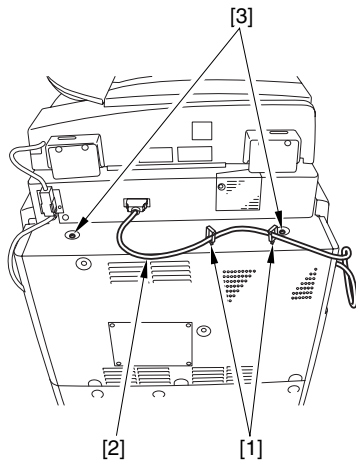

F-10-40

- 3) Remove the 5 screws [1], and detach the rear cover (upper) [2].

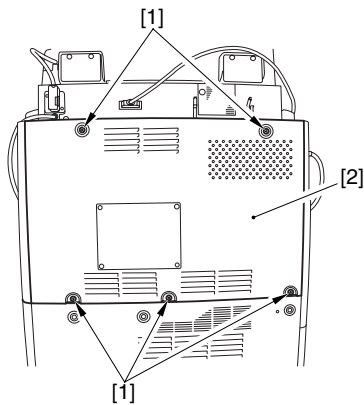


F-10-41

10.5.4.2 Sliding the DC

Controller Box


0003-6210

- 1) Remove the 9 screws [1], and detach the DC controller cover [2].

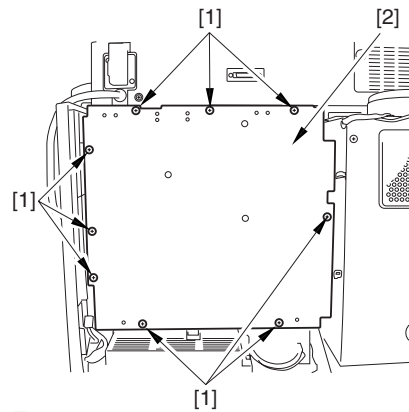

F-10-42

- 2) Remove the 6 screws [1], and slide the DC controller box [2] to the left.

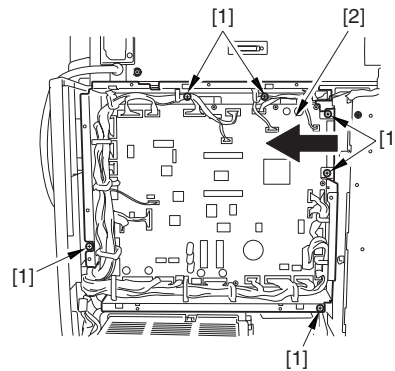


F-10-43

10.5.4.3 Removing the DC

Controller PCB

0003-6223

- 1) Disconnect the 33 connectors [1], and remove the 10 screws [2]; then, as necessary, open the cable guide.

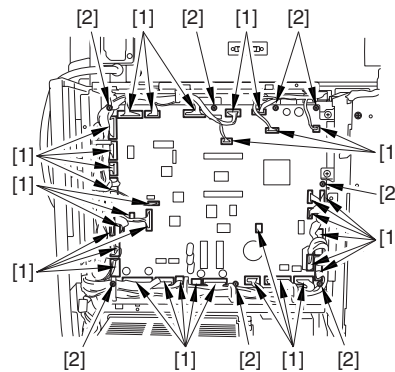

F-10-44


- 2) Detach the DC controller PCB.

10.5.4.4 Points to Note When Mounting the DC Controller PCB

0005-7177

⚠ During assembly work, be sure to connect the harness to the DC controller PCB as follows:

- Connect the connector of the harness [1] first, and then the other harness [2].
- Fix the harnesses [1] [2] in place using the wire saddle [3] so that the harness [1] is on the left side of the harness [2].

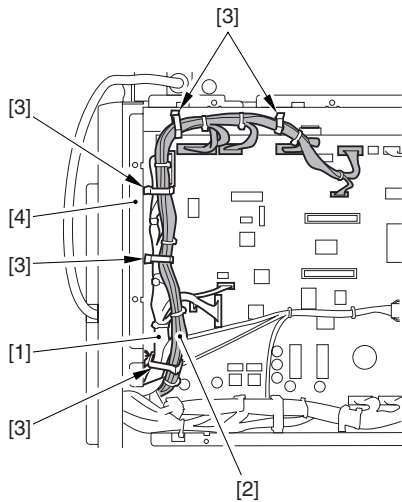

F-10-45

Supplementary Information:


If the harness [1] is away from the side plate [4] of the DC controller box, wrong detection (E070-0102) of the ITB home position tends to occur because of noise.

10.5.5 Printer Power Supply PCB

10.5.5.1 Removing the Rear Cover (lower)

0003-8325

- 1) Remove the 7 screws [1], and detach the rear cover (lower) [2].

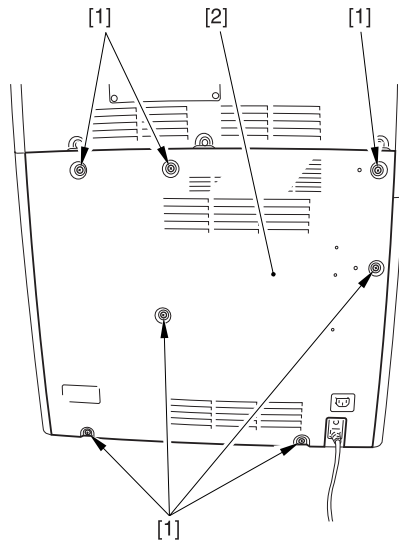


F-10-46

10.5.5.2 Removing the DC Power Supply Unit

0004-5220


- 1) Open the 2 wire saddles [1], and free the harness [2].

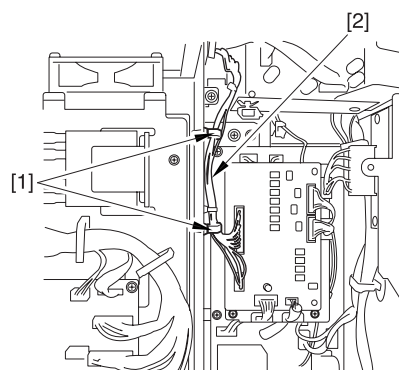

F-10-47

2) Disconnect the 16 connectors [1], and open the 3 wire saddles [2] to free the harness [3].

3) Remove the 4 screws [4], and detach the DC power supply unit [5].

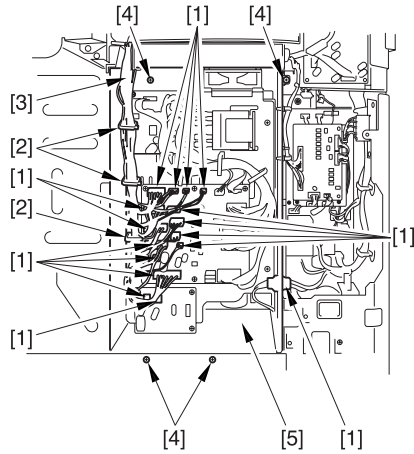

F-10-48


10.5.6 Leakage Breaker

10.5.6.1 Removing the Rear

Cover (lower)

[0003-8326](#)

1) Remove the 7 screws [1], and detach the rear cover (lower) [2].

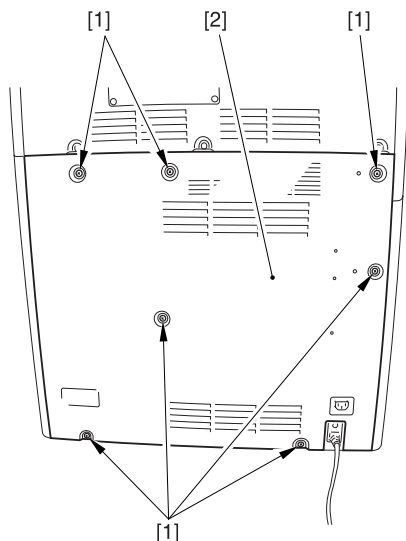

F-10-49


10.5.6.2 Removing the Left

Cover (lower)

[0003-8288](#)

1) Remove the 2 grip covers [1].

2) Remove the 6 screws [2], and detach the left cover (lower) [3].

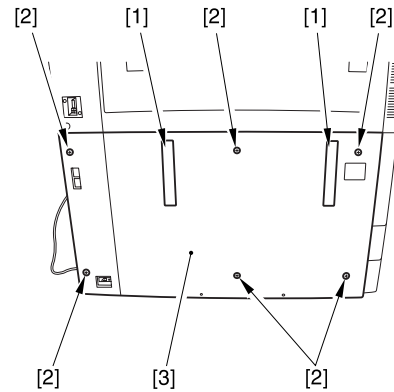


F-10-50

10.5.6.3 Removing the Power

Cord Base


[0004-5215](#)

1) Remove the 4 screws [1] from the left side.

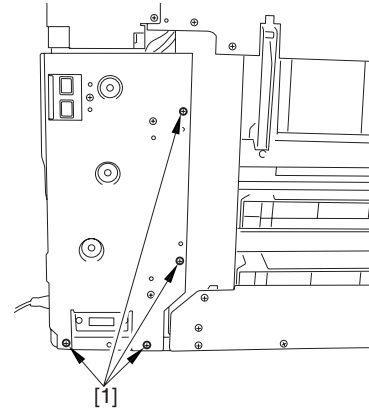


F-10-51

2) Disconnect the 4 connectors [1], and open the 3 wire saddles [2].

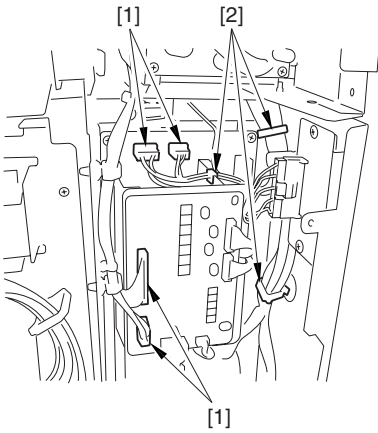


F-10-52

3) Disconnect the 8 connectors [1], and open the wire saddle [2].

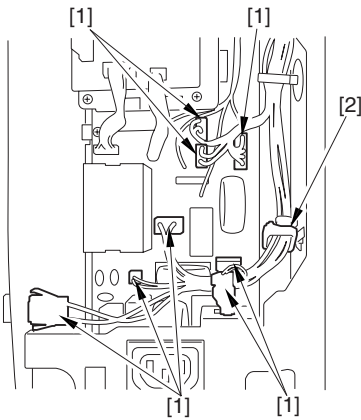

F-10-53

4) Remove the 3 screws [1], and detach the AC driver box [2].

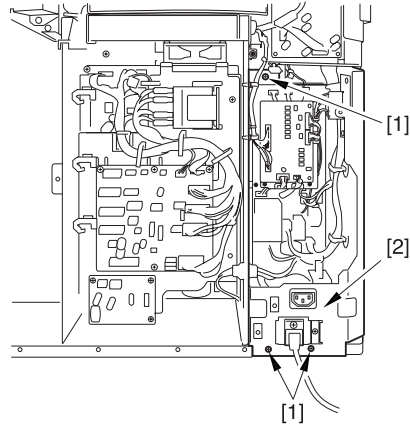


F-10-54

10.5.6.4 Removing the Leakage Breaker


0003-5822

1) Remove the 4 fastons [1].

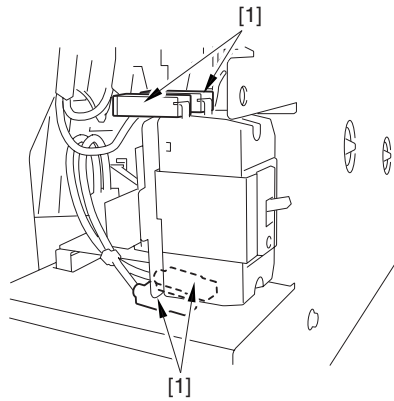

F-10-55

2) Remove the 2 screws [1], and detach the leakage breaker [2].

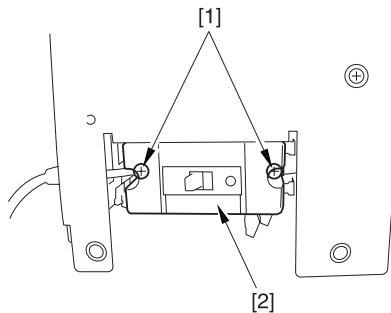

F-10-56


10.5.7 Fixing Relay

10.5.7.1 Removing the Rear

Cover (lower)

0004-5252

- 1) Remove the 7 screws [1], and detach the rear cover (lower) [2].

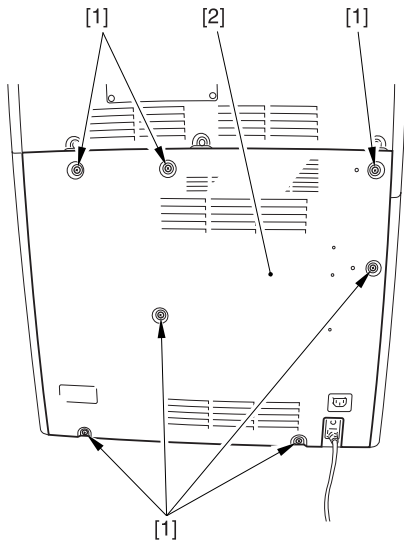


F-10-57

10.5.7.2 Removing the DC/DC converter PCB2


0004-5254

- 1) Disconnect the 2 connectors [1].

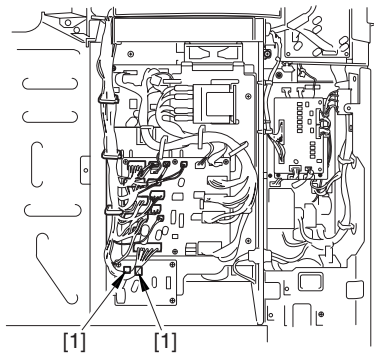

F-10-58

- 2) Remove the 4 screws [1], and detach the DC/DC converter PCB2 [2].

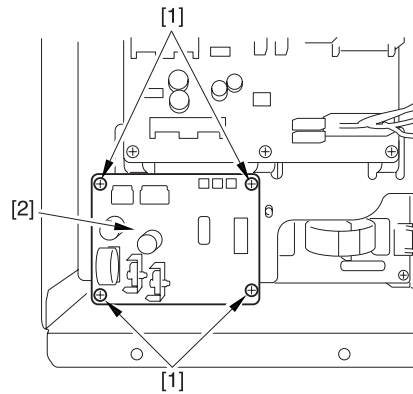

F-10-59


10.5.8 Relay PCB

10.5.8.1 Removing the Rear

Cover (lower)

0003-6695

- 1) Remove the 7 screws [1], and detach the rear cover (lower) [2].

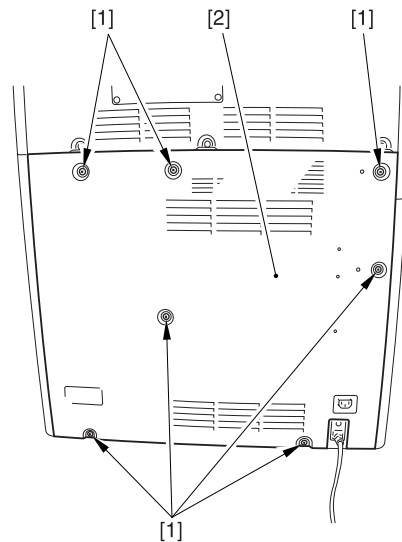


F-10-60

10.5.8.2 Removing the Relay

PCB

0003-6696

- 1) Disconnect the 20 connectors [1], and remove the 6 screws [2]; then, detach the relay PCB [3].

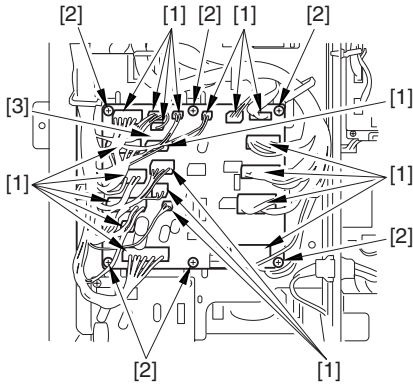

F-10-61


10.5.9 DC Relay

10.5.9.1 Removing the Rear

Cover (lower)

0004-1301

- 1) Remove the 7 screws [1], and detach the rear cover (lower) [2].

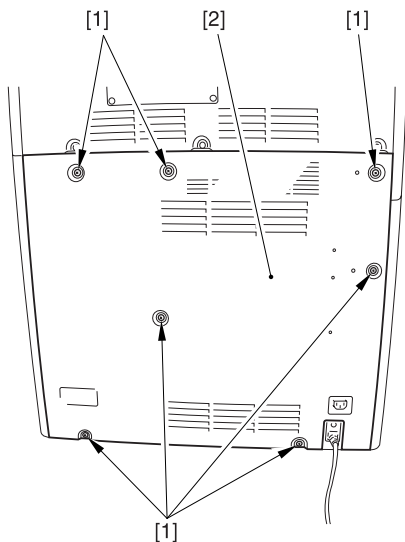


F-10-62

10.5.9.2 Removing the DC

Relay

0004-1296

- 1) Remove the 8 fastons [1].
- 2) Pull the leaf spring [2] to the front, and detach the relay [3].

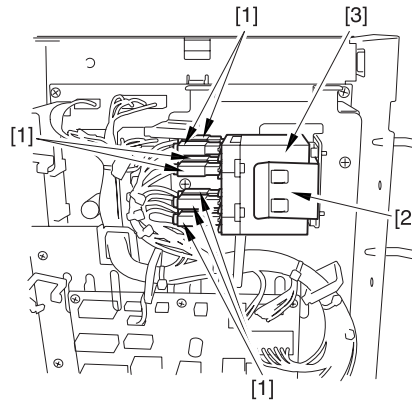

F-10-63


10.5.10 HV1 PCB

10.5.10.1 Removing the Rear

Cover (upper)


0003-8318

- 1) Free the cable [2] from the 2 cable clamps [1].
- 2) Remove the 2 screws [3].

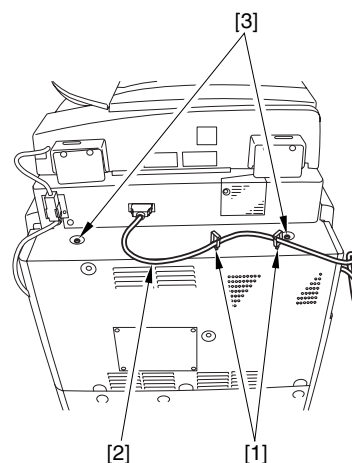

F-10-64

3) Remove the 5 screws [1], and detach the rear cover (upper) [2].

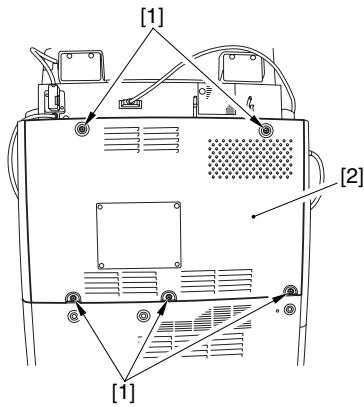


F-10-65

10.5.10.2 Removing the Rear

Cover (lower)

[0003-8710](#)

1) Remove the 7 screws [1], and detach the rear cover (lower) [2].

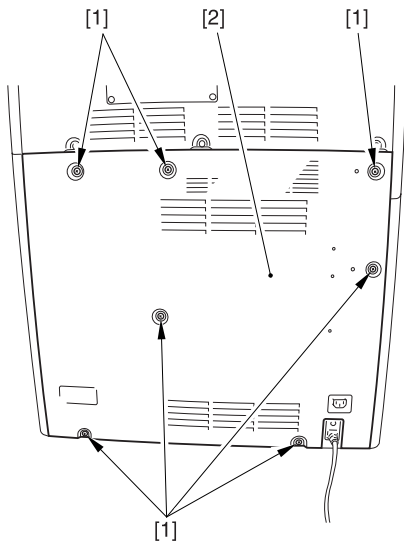


F-10-66

10.5.10.3 Removing the Right

Cover (upper rear)

[0003-8297](#)

1) Detach the reader communications cable [1].
2) Remove the 2 screws [2], and detach the right cover (upper rear) [3].

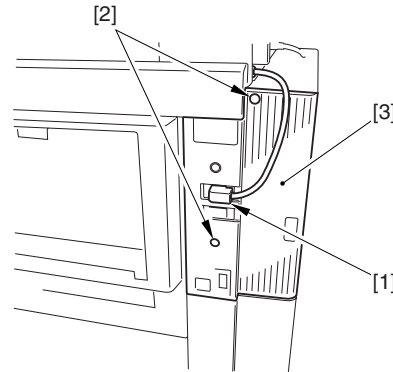


F-10-67

10.5.10.4 Removing the Right

Cover (lower rear)

[0003-8709](#)

1) Remove the 2 screws [1], and detach the right cover (lower rear) [2].

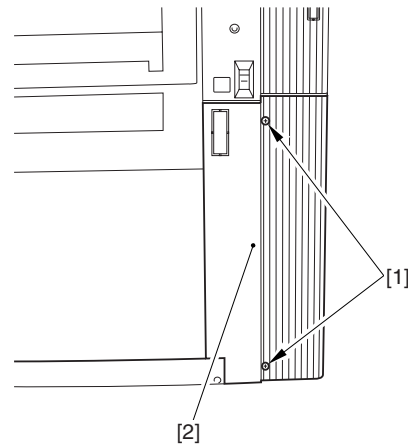


F-10-68

10.5.10.5 Removing the HV1

PCB


0003-8715

- 1) Open the 3 wire saddles [1], and free the 2 cables [2].
- 2) Remove the screw [3].
- 3) Release the hook [4].

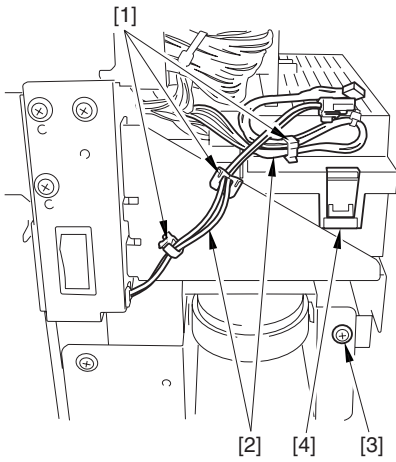


F-10-69

- 4) Disconnect the 2 connectors [1], and free the cable [3] from the cable guide [2].
- 5) Release the hook [3], and detach the lid [4].

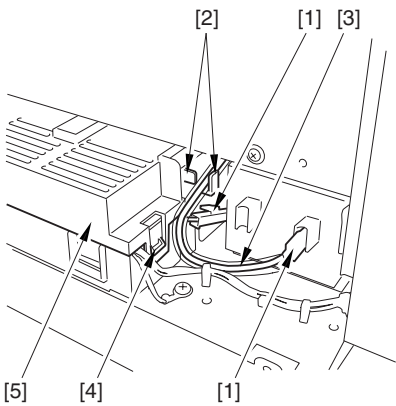


F-10-70

- 6) Disconnect the 5 connectors [1], and free the cable from the cable guide [2].

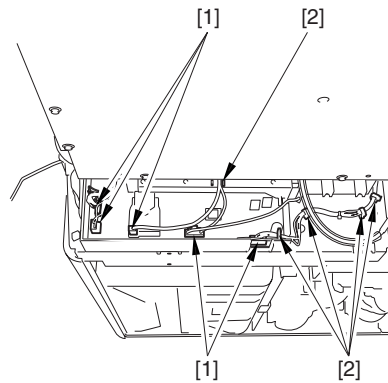

F-10-71

- 7) Remove the 2 screws [1], and lift the HV1 PCB [2] to detach.

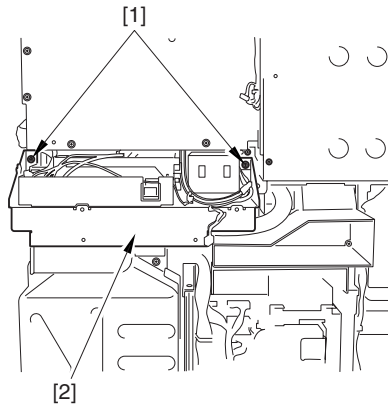


F-10-72

10.5.11 HV2 PCB

10.5.11.1 Detaching the Left

Cover (upper) 0003-6978

- 1) Remove the 3 screws [1], and detach the left cover (upper) [2].

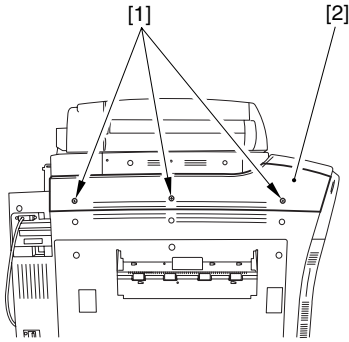


F-10-73

10.5.11.2 Removing the delivery cover

0003-6979

- 1) Remove the 3 screws [1], and detach the delivery cover [2].

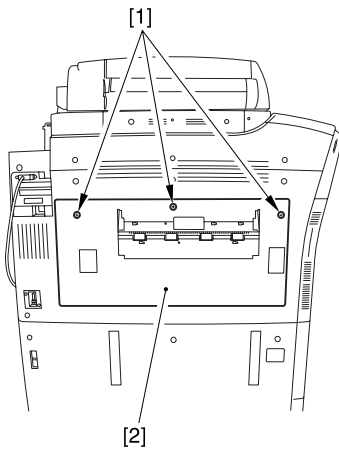


F-10-74

10.5.11.3 Removing the Left Cover (middle)

0003-6980

- 1) Disconnect the connector [1].
- 2) Remove the 5 screws [2], and detach the left cover (middle) [3].

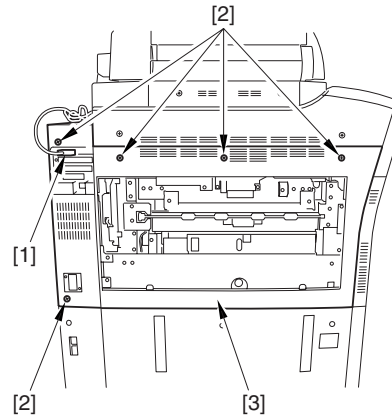


F-10-75

10.5.11.4 Removing the HV2 PCB


0003-6982

- 1) Disconnect the connector [1], and free the harness [2] from the cable guide [3].

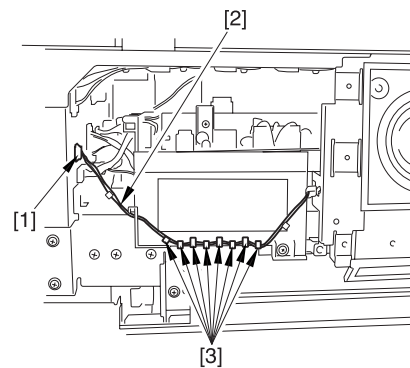


F-10-76

- 2) Remove the 3 screws [1], and detach the delivery cooling fan [2] together with its base.

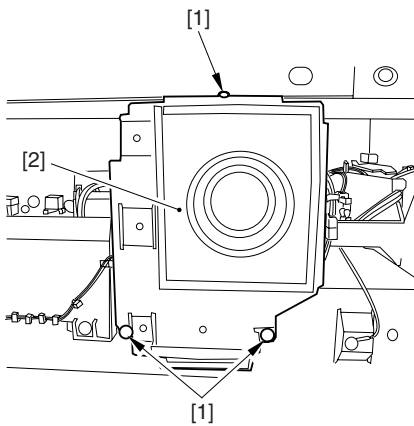

F-10-77

- 3) Disconnect the 5 connectors [1], and free the harness from the cable guide [3].
- 4) Remove the 2 screws [4], and detach the HV2 PCB [5].

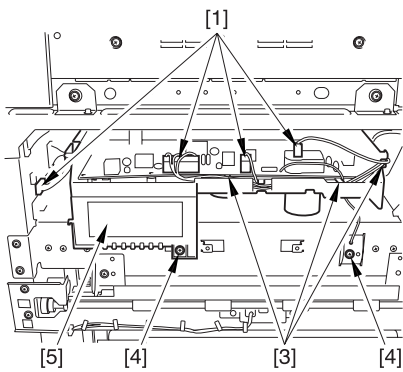


F-10-78

10.5.12 HV3 PCB

10.5.12.1 Removing the Secondary Transfer Unit


0004-0910

- 1) Open the front cover.
- 2) Slide out the fixing/feeding assembly.
- 3) While pushing the 2 hooks [1] front on both sides of the fixing/feeding assembly, slide out the fixing/feeding assembly [2] fully.

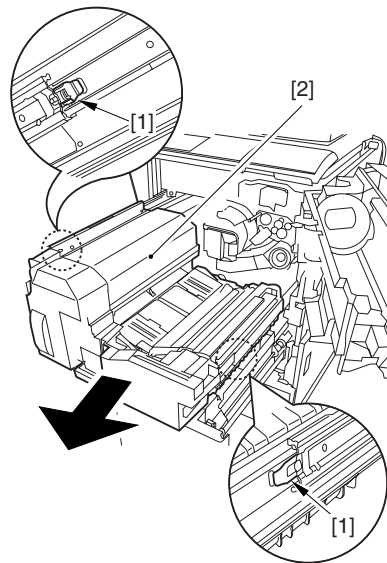


F-10-79

- 4) Remove the screw [1], and detach the connector cover [2].

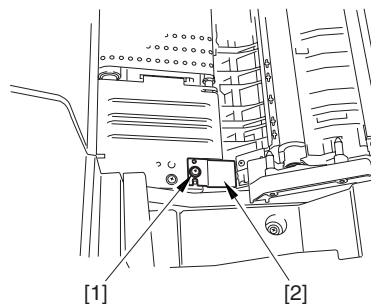


F-10-80

5) Disconnect the connector [1].

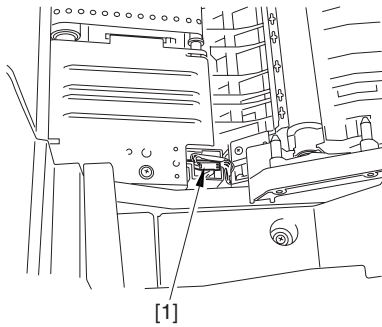


F-10-81

6) Remove the 2 stepped screws [1].

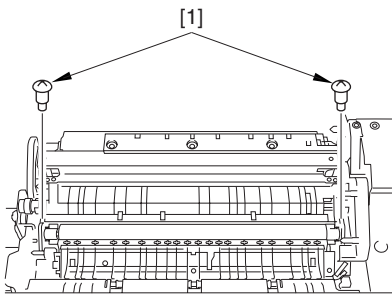

F-10-82

7) While shifting the secondary transfer unit [1], disconnect the 2 connectors [2]; then, detach the secondary transfer unit.

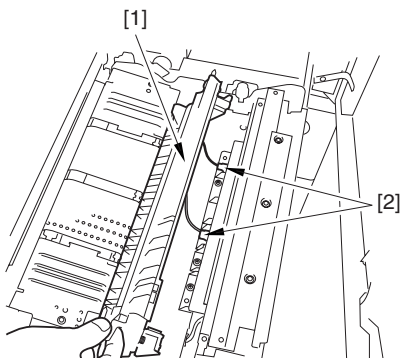


F-10-83

10.5.12.2 Removing the HV3

PCB


0004-0911

1) Disconnect the connector [1], and remove the 4 screws [2]; then, detach the registration guide unit [3].

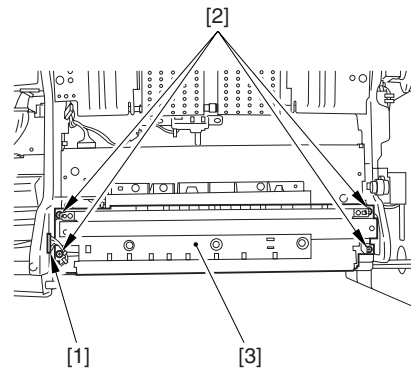


F-10-84

2) Remove the screw [1], and detach the cover [2].

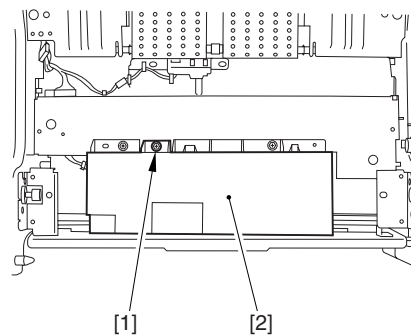

F-10-85

3) Disconnect the 3 connectors [1], and remove the 3 screws [2]; then, detach the HV3 PCB [3].

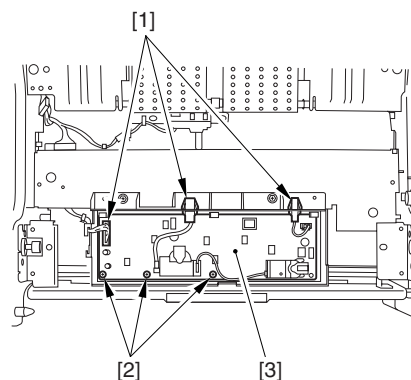


F-10-86

10.5.13 Fixing/Feed Driver PCB

10.5.13.1 Removing Fixing/ Feeding Driver PCB


0003-7006

- 1) Open the front cover.
- 2) Slide out the fixing/feeding assembly.
- 3) Remove the screw [1], and detach the handle [2].
- 4) Remove the 2 screws [3], and detach the fixing/feeding front cover [4].

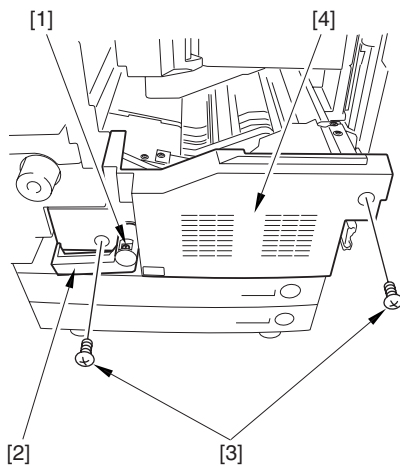


F-10-87

- 5) Remove the 2 screws [1], and detach the fixing/feeding upper cover [2].

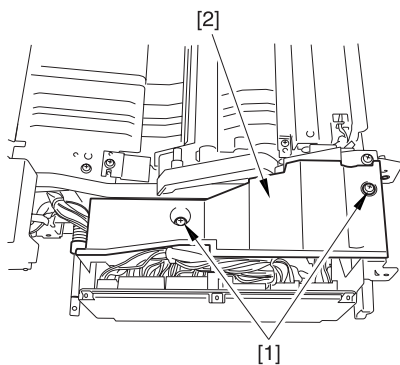


F-10-88

- 6) Disconnect the 6 connectors [1], and open the 3 wire saddles [2].

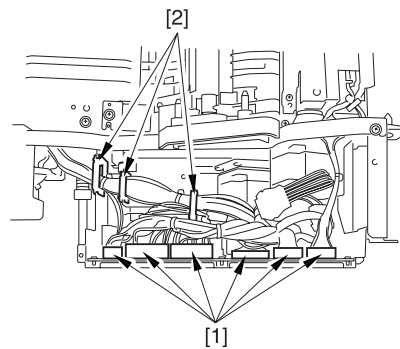


F-10-89

- 7) Disconnect the 3 connectors [1].

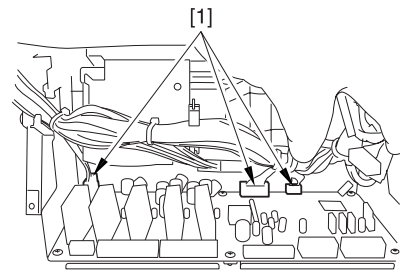

F-10-90

- 8) Remove the 2 screws [1], and shift the fixing/feeding driver PCB [2] toward the front to detach.

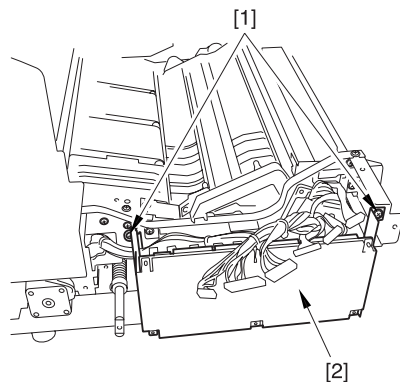


F-10-91

10.5.13.2 Fixing/Feeding

Driver PCB

0003-7025

- 1) Remove the 4 screws [1], and detach the fixing/feeding driver PCB [2].

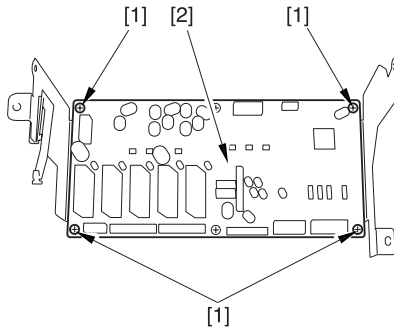

F-10-92


10.5.14 Pickup Driver PCB

10.5.14.1 Removing the Rear

Cover (lower)

0003-8328

- 1) Remove the 7 screws [1], and detach the rear cover (lower) [2].

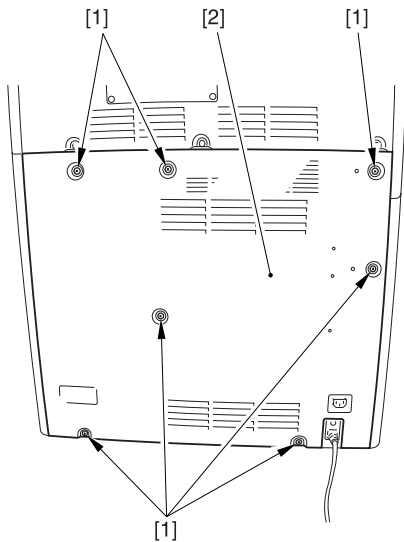


F-10-93

10.5.14.2 Removing the DC

Power Supply Unit

0003-5796


- 1) Open the 2 wire saddles [1], and free the harness [2].

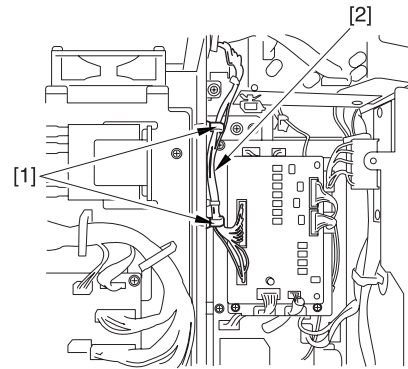

F-10-94

- 2) Disconnect the 16 connectors [1], and open the 3 wire saddles [2] to free the harness [3].

- 3) Remove the 4 screws [4], and detach the DC power supply unit [5].

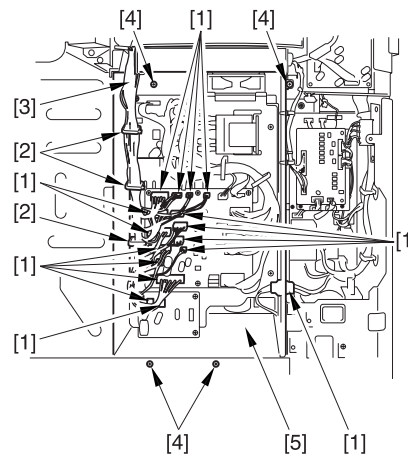


F-10-95

10.5.14.3 Removing Pickup

Driver PCB

0003-5797

- 1) Disconnect the 7 connectors [1], remove the 5 screws [2], and free the PCB support [3]; then, detach the pickup drive PCB [4].

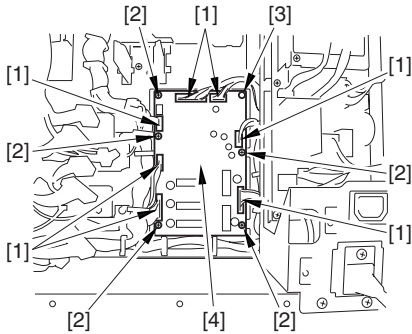

F-10-96


10.5.15 Switch PCB

10.5.15.1 Removing the Rear

Cover (lower)

0003-6691

- 1) Remove the 7 screws [1], and detach the rear cover (lower) [2].

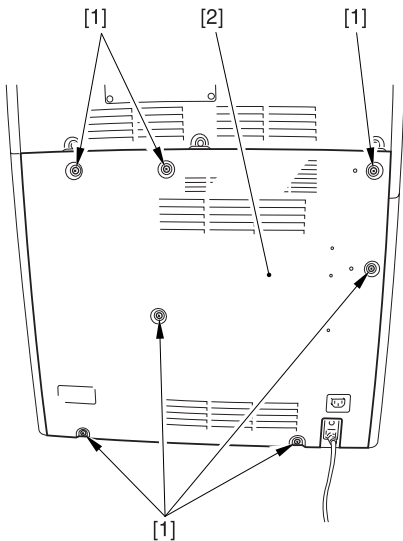


F-10-97

10.5.15.2 Removing the Left

Cover (lower)

0003-6692

- 1) Remove the 2 grip covers [1].
- 2) Remove the 6 screws [2], and detach the left cover (lower) [3].

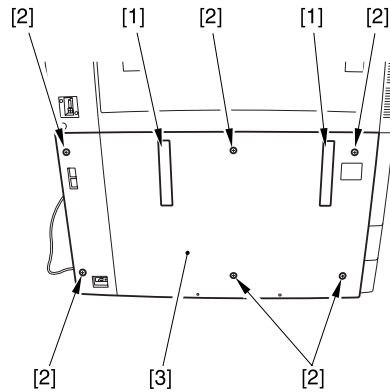


F-10-98

10.5.15.3 Removing the Switch

PCB


0003-6693

- 1) Disconnect the connector [1].

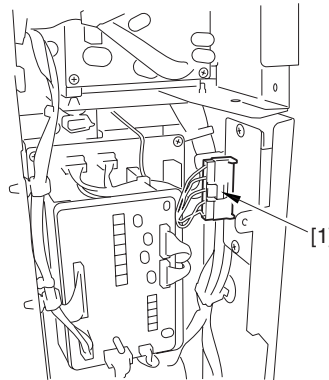


F-10-99

- 2) Remove the screw [1], and detach the switch PCB [2].

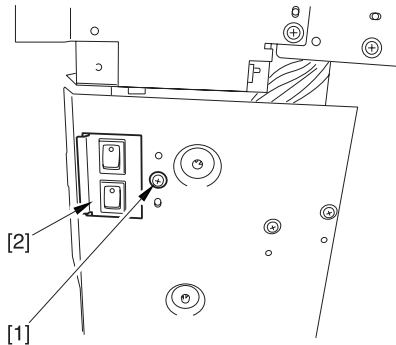

F-10-100

- 3) Remove the 5 screws [1], and detach the rear cover (upper) [2].

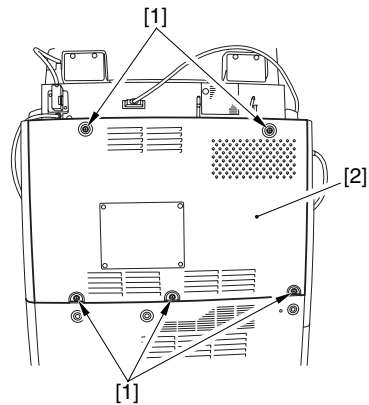

F-10-102


10.5.16 Primary Exhaust Fan

10.5.16.1 Removing the Rear

Cover (upper)

0003-8321

- 1) Free the cable [2] from the 2 cable clamps [1].
- 2) Remove the 2 screws [3].

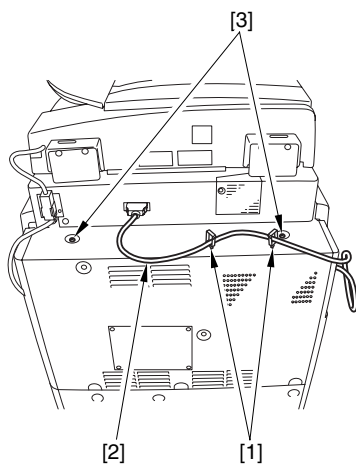


F-10-101

10.5.16.2 Removing the Right

Cover (Upper rear)

0003-6580

- 1) Detach the reader communications cable [1].
- 2) Remove the 2 screws [2], and detach the right cover (upper rear) [3].

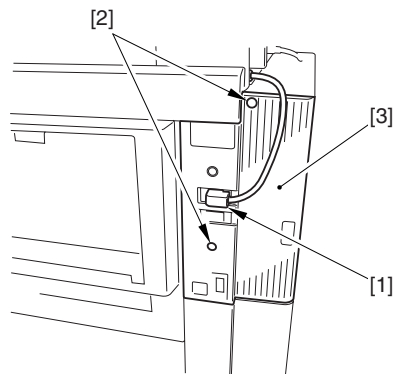


F-10-103

10.5.16.3 Sliding the DC

Control Box


0003-6581

1) Remove the 9 screws [1], and detach the DC controller cover [2].

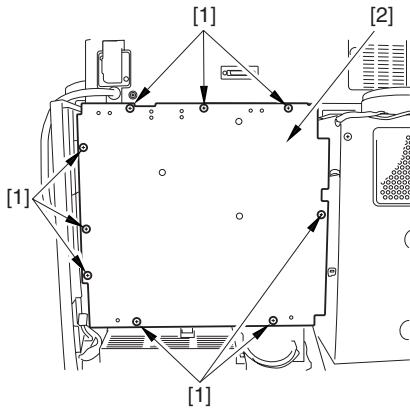

F-10-104

2) Remove the 6 screws [1], and slide the DC controller box [2] to the left.

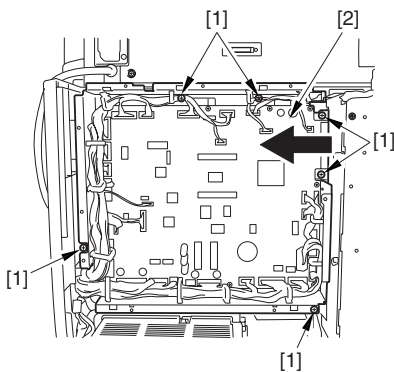


F-10-105

10.5.16.4 Removing the DC

Controller Box


0003-8711

1) Open the 3 cable guides [1], and free the harness [2].

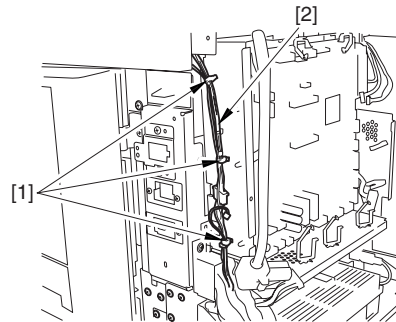


F-10-106

2) Disconnect the 33 connectors [1], and open that 13 cable guides [2]; then, free the harness [3].

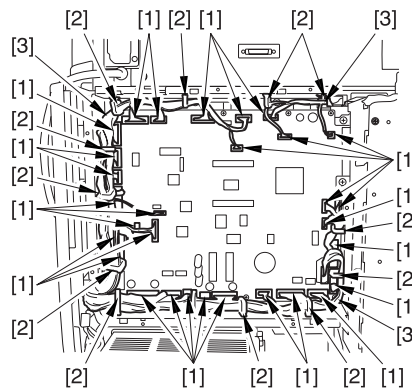

F-10-107

3) Lift the DC controller box [1] to detach.

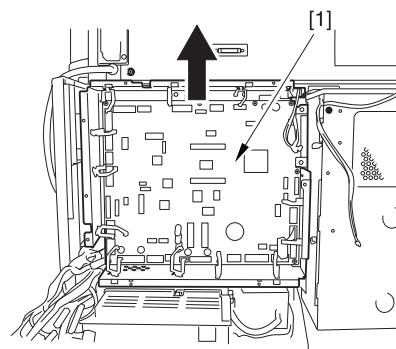

F-10-108


10.5.16.5 Points to Note When Mounting the DC Controller Box

0005-7216

⚠ During assembly work, be sure to connect the harness to the DC controller PCB as follows:

-Connect the connector of the harness [1] first, and then the other harness [2].

-Fix the harnesses [1] [2] in place using the wire saddle [3] so that the harness [1] is on the left side of the harness [2].

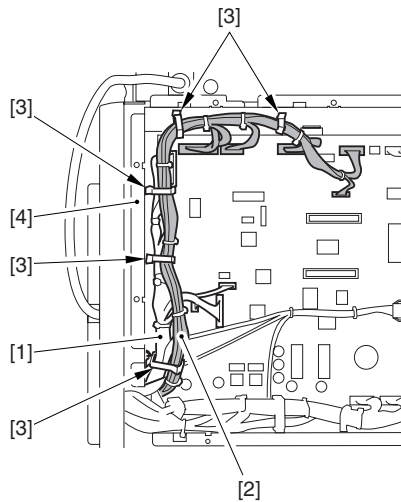

F-10-109


Supplementary Information:

If the harness [1] is away from the side plate [4] of the DC controller box, wrong detection (E070-0102) of the ITB home position tends to occur because of noise.

10.5.16.6 Removing the Primary Exhaust Fan


0003-6583

1) Disconnect the connect [1], and open the 2 cable guides [2].

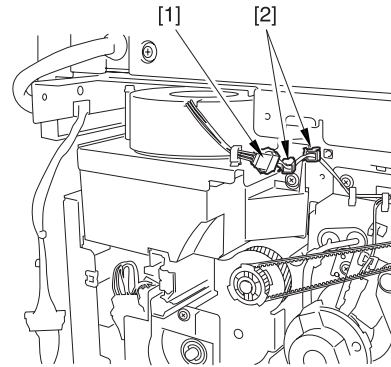


F-10-110

2) Remove the 3 screws [1], and detach the primary exhaust fan [2] together with the duct.

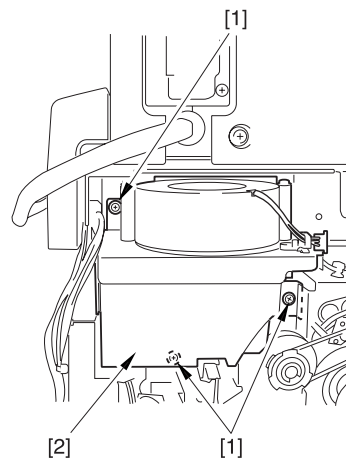


F-10-111

3) Open the cable guide [1], and remove the 2 screws [2]; then, detach the primary exhaust fan [3].

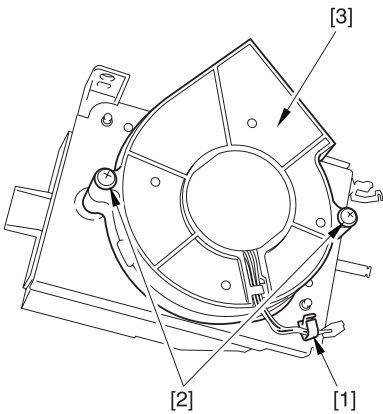

F-10-112

3) Remove the 5 screws [1], and detach the rear cover (upper) [2].

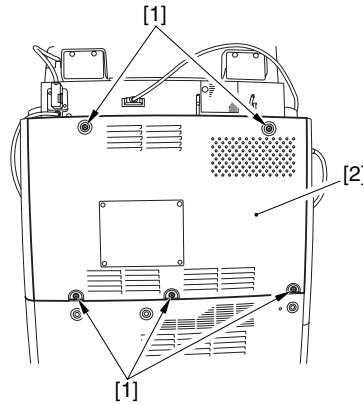

F-10-114

10.5.17 Fixing Heat Discharge Fan

10.5.17.2 Removing the Rear

Cover (lower)

0003-6602


10.5.17.1 Removing the Rear

Cover (upper)


0003-6599

- 1) Free the cable [2] from the 2 cable clamps [1].
- 2) Remove the 2 screws [3].

- 1) Remove the 7 screws [1], and detach the rear cover (lower) [2].

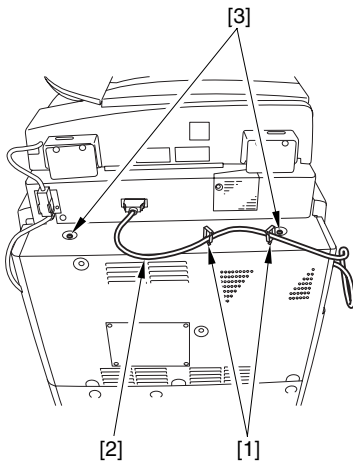


F-10-113

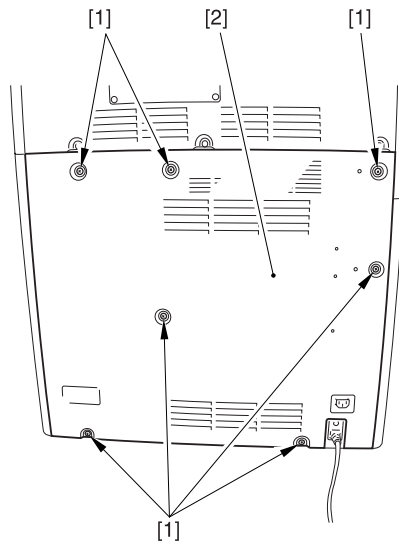

F-10-115

10.5.17.3 Removing the Delivery Cover 0003-6605


1) Remove the 3 screws [1], and detach the delivery cover [2].

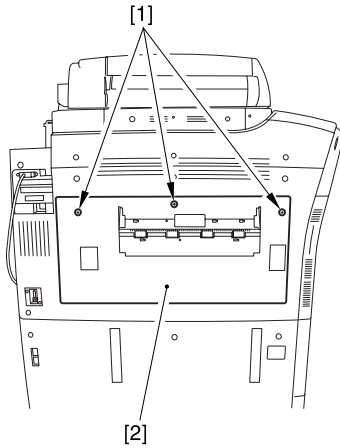

F-10-116

10.5.17.5 Removing the Controller Box Cover 0003-6609


1) Remove the 2 screws [1], and detach the controller box cover [2].

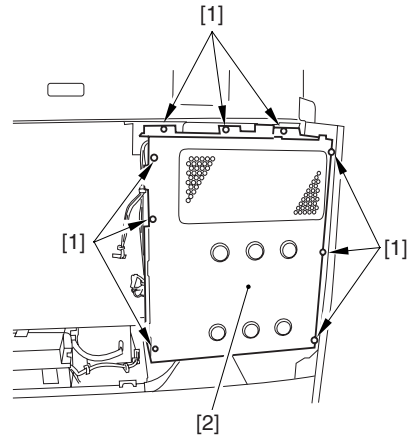


F-10-118

10.5.17.4 Removing the Left Cover (middle) 0003-6607

1) Disconnect the connector [1].
2) Remove the 5 screws [2], and detach the left cover (middle) [3].

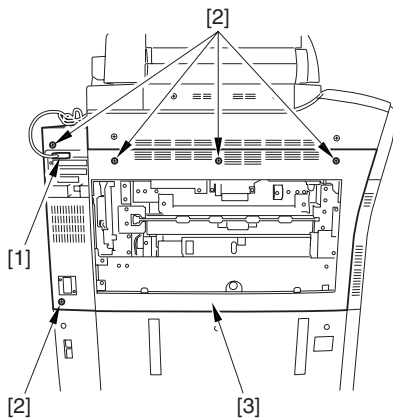

F-10-117

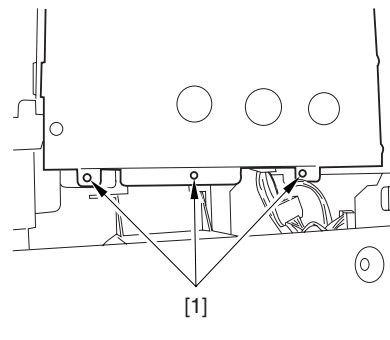


F-10-119


10.5.17.6 Removing the Controller Box

0003-6612

1) Disconnect the 9 connectors [1].

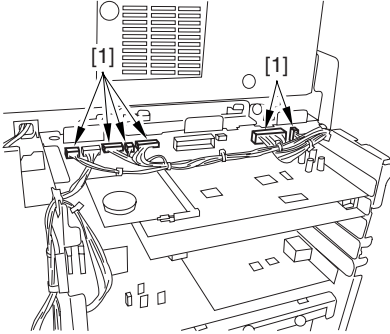


F-10-120

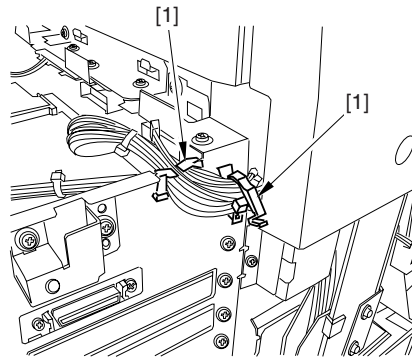


F-10-123

3) Remove the 9 screws [1] used to fix the main controller box in place.

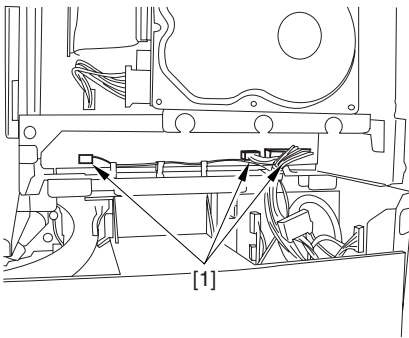


F-10-121


2) Free the harness from the 3 harness retainers [1].

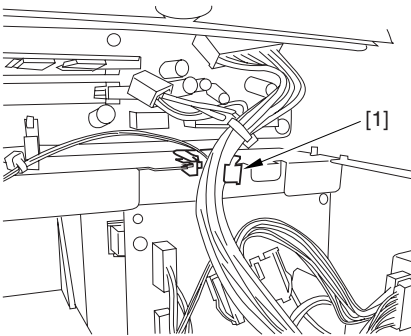


F-10-122

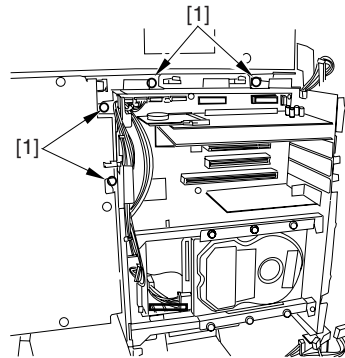

F-10-124

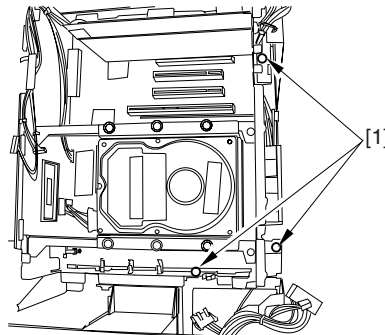


F-10-125

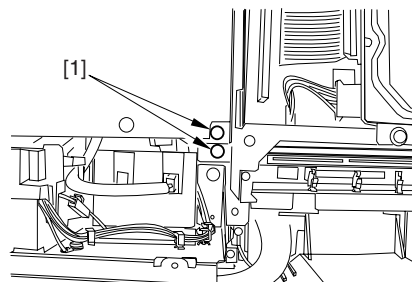


F-10-126

4) Slide the main controller box [1] toward the delivery side to detach.

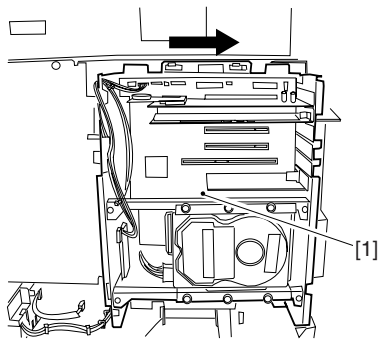

F-10-127


⚠ During removal/mounting, be sure to take care not to damage the connector [2] found at the joint to the DC controller PCB.

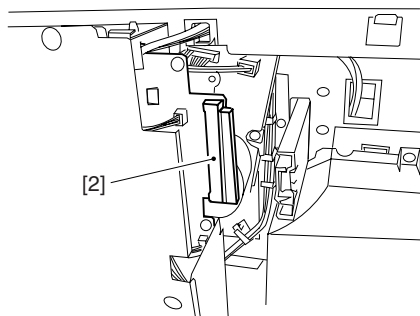

F-10-128


10.5.17.7 Removing the Fixing/Delivery Fan 0003-6619

1) Remove the fixing heat discharge ozonefilter [1].

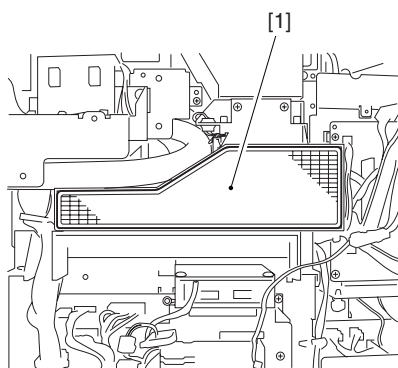


F-10-129

2) Disconnect the connector [1], and remove the 5 screws [2]; then, detach the duct [3].

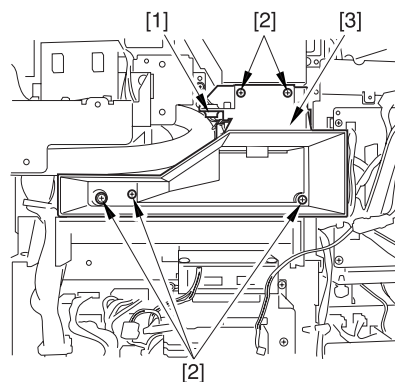

F-10-130

3) Disconnect the connector [1], and remove the 2 screws [2]; then, detach the fixing heat discharge fan [3].

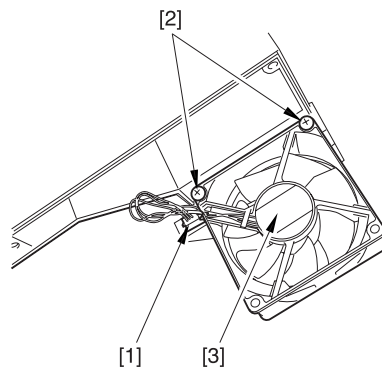

F-10-131


10.5.18 Power Supply Cooling Fan

10.5.18.1 Removing the Rear

Cover (lower)

0003-8330

1) Remove the 7 screws [1], and detach the rear cover (lower) [2].

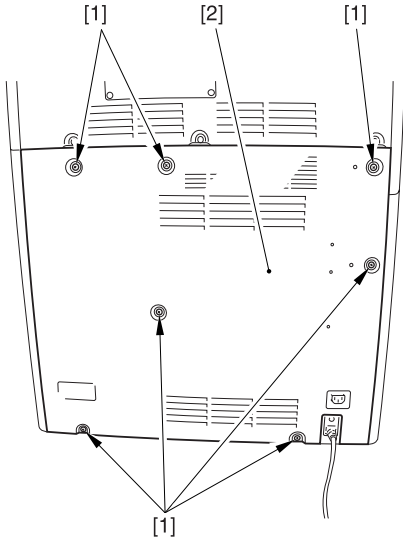


F-10-132

10.5.18.2 Removing the DC

Power Supply Unit

0003-5592


1) Open the 2 wire saddles [1], and free the harness [2].

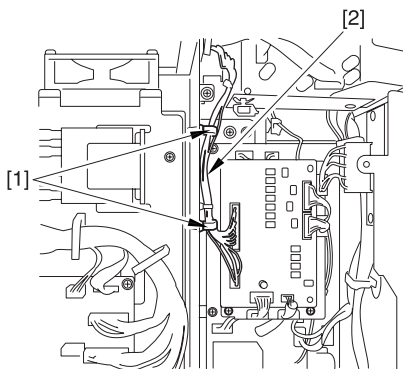

F-10-133

2) Disconnect the 16 connectors [1], and open the 3 wire saddles [2] to free the harness [3].

3) Remove the 4 screws [4], and detach the DC power supply unit [5].

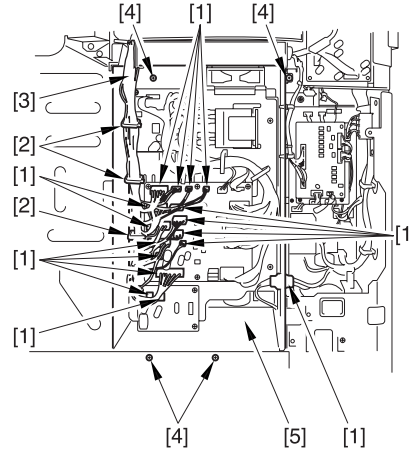


F-10-134

10.5.18.3 Removing the Power

Supply Cooling Fan


0003-5611

1) Remove the 2 screws [1], and detach the power supply unit upper cover [2].

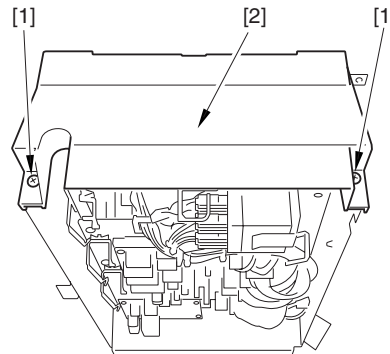

F-10-135

2) Disconnect the connector [1], and remove the 2 screws [2]; then, detach the power supply cooling fan [3].

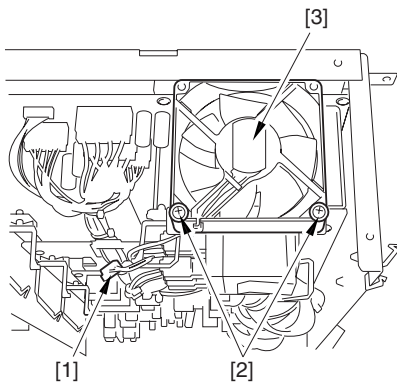


F-10-136

10.5.19 Delivery Cooling Fan 1

10.5.19.1 Removing the Left Cover (upper)

0004-1045

1) Remove the 3 screws [1], and detach the left cover (upper) [2].

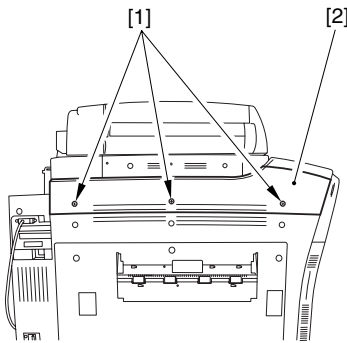


F-10-137

10.5.19.2 Removing the Delivery Cover

0004-1046

1) Remove the 3 screws [1], and detach the delivery cover [2].

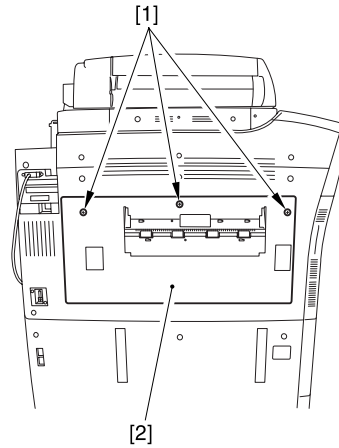


F-10-138

10.5.19.3 Removing the Left Cover (middle)

0004-1047


1) Disconnect the connector [1].
2) Remove the 5 screws [2], and detach the left cover (middle) [3].

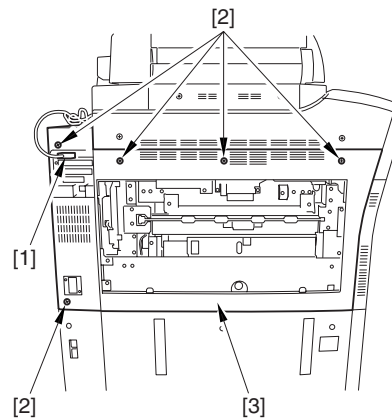

F-10-139


10.5.19.4 Removing the Delivery Cooling Fan 1 0004-1048

1) Disconnect the connector [1], and free the harness [2] from the cable guide [3].

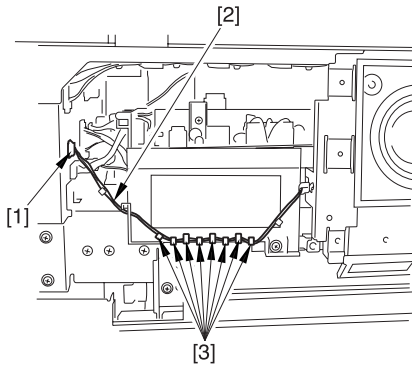

F-10-140


2) Remove the 3 screws [1], and detach the delivery cooling fan [2].

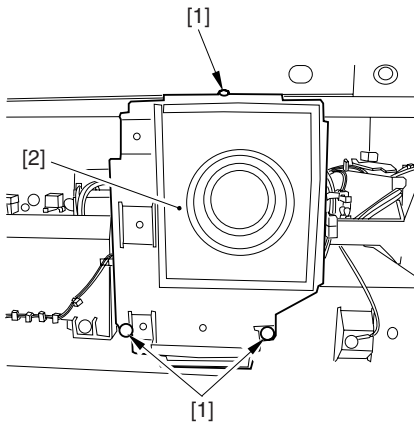

F-10-141

3) Disconnect the connector [1], and free the harness [2] from the cable guide [3].

4) Remove the 2 screws [4], and detach the delivery cooling fan 1.

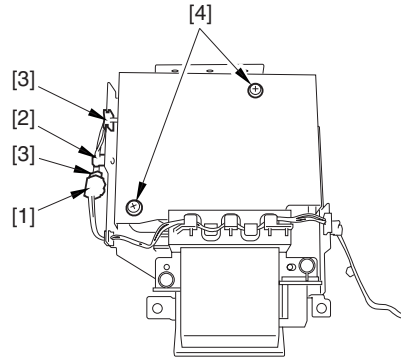

F-10-142


10.5.20 Delivery Cooling Fan 2

10.5.20.1 Removing the Fixing

Front Cover


0004-1049

1) Open the front cover.
 2) Slide out the fixing/feeding assembly.
 3) Open the reversal delivery cover [1] and the middle cover [2].

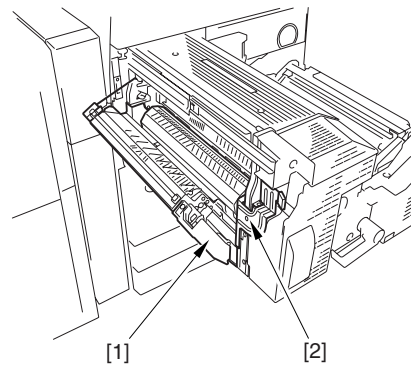

F-10-143


5) Remove the knob [1] and the 2 screws [2]; then, detach the fixing front cover [3].

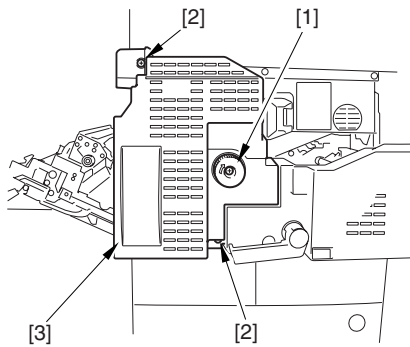

F-10-144

10.5.20.2 Removing the Delivery Cooling Fan 2 0004-1050

1) Disconnect the connector [1], and remove the 2 screws [2]; then, detach the delivery cooling fan 2 [3].

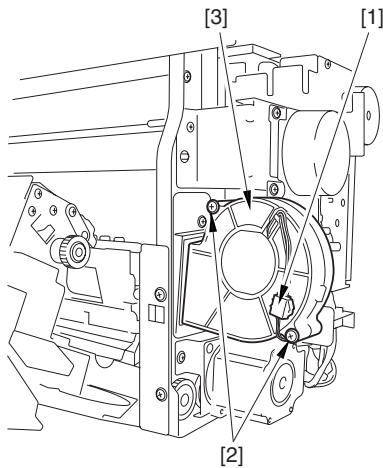


F-10-145

10.5.21 Ozone Filter


10.5.21.1 Removing the Ozone Filter 0003-3764

1) Remove the face cover [1] from the right cover (upper rear).

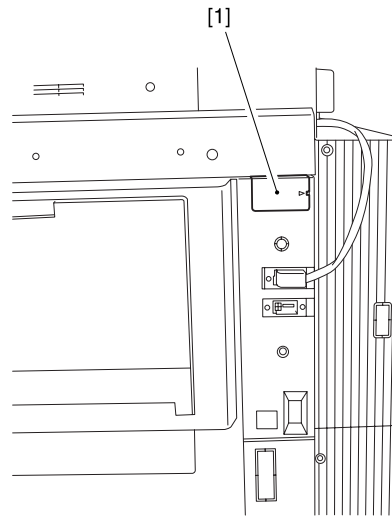


F-10-146

2) Pull out the filter holder [1].

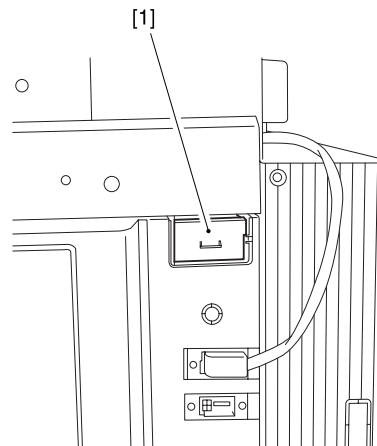


F-10-147

3) Detach the ozone filter [2] from the filter holder [1].

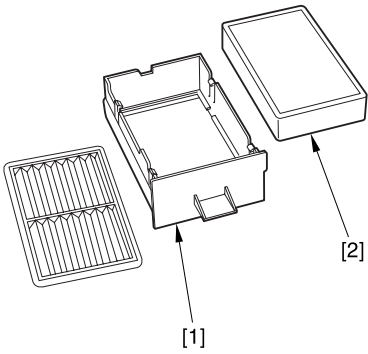

F-10-148

2) Remove the fixing heat discharge ozone filter [1].

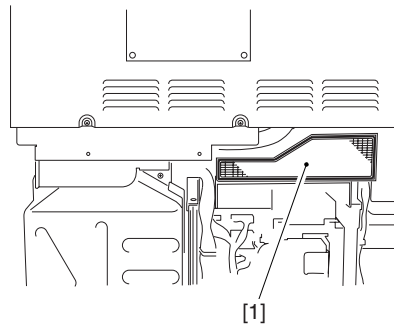


F-10-150

10.5.21.2 Removing the Fixing

Heat Discharge Ozone Filter 0005-0740

1) Remove the 7 screws [1], and detach the rear cover (lower) [2].

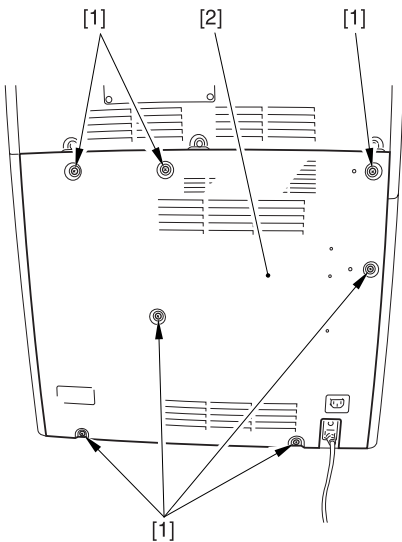


F-10-149

10.5.22 Toner Filter

10.5.22.1 Removing the Toner


Filter 0003-4092

1) Remove the face cover [1] from the upper rear upper cover.

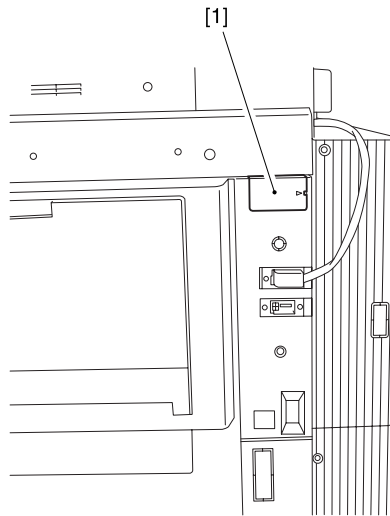


F-10-151

2) Pull out the filter holder [1].

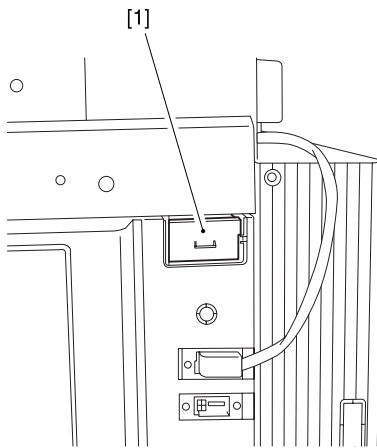

F-10-152

3) Detach the toner filter [2] from the filter holder [1].

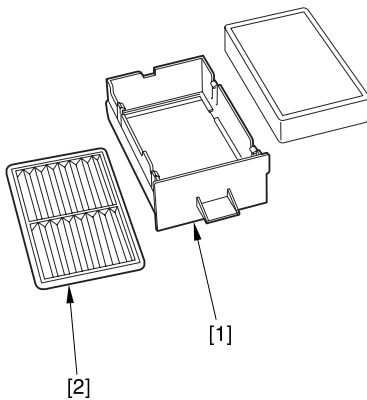


F-10-153

10.5.23 Sub Toner Filter

10.5.23.1 Removing the Left Cover (upper) 0005-7956


1) Remove the 3 screws [1], and detach the left cover (upper) [2].

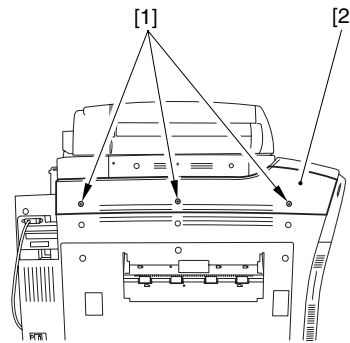

F-10-154

10.5.23.2 Removing the Delivery Cover 0005-7958

1) Remove the 3 screws [1], and detach the delivery cover [2].

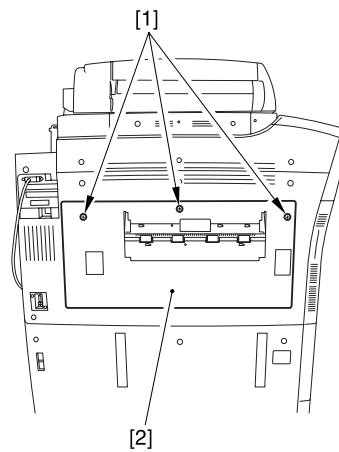


F-10-155

10.5.23.3 Removing the Left Cover (middle)

0005-7959

- 1) Disconnect the connector [1].
- 2) Remove the 5 screws [2], and detach the left cover (middle) [3].

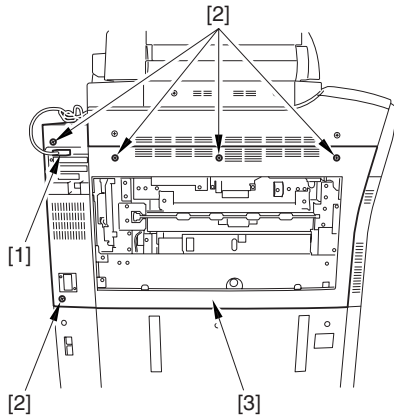


F-10-156

10.5.23.4 Removing the HV2 PCB


0005-7960

- 1) Disconnect the connector [1], and free the harness [2] from the cable guide [3].

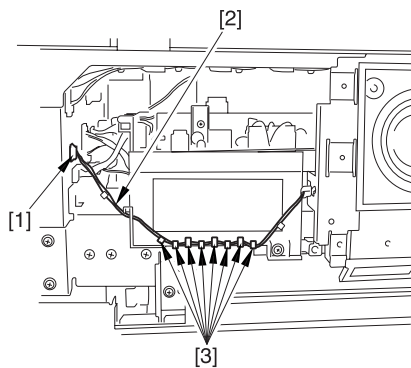


F-10-157

- 2) Remove the 3 screws [1], and detach the delivery cooling fan [2] together with its base.

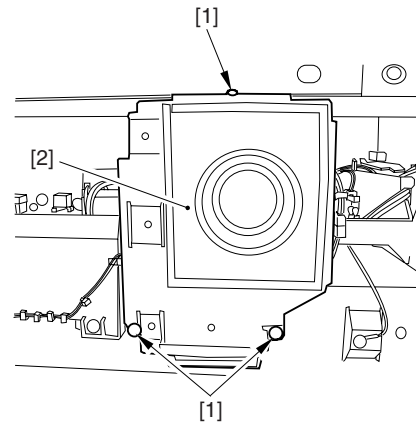

F-10-158

- 3) Disconnect the 5 connectors [1], and free the harness from the cable guide [3].
- 4) Remove the 2 screws [4], and detach the HV2 PCB [5].

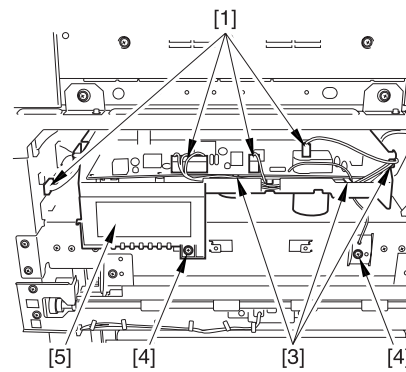


F-10-159

10.5.23.5 Removing the Sub Toner Filter

0005-7961

- 1) Remove the sub toner filter [1].

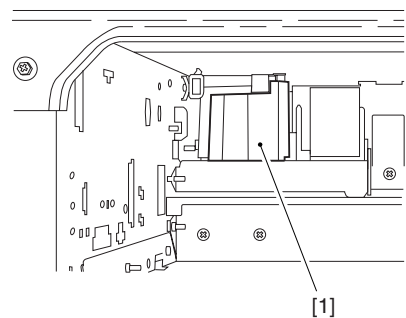

F-10-160

Chapter 11 Maintenance and Inspection

Contents

11.1 Periodically Replaced Parts	11-1
11.1.1 Overview	11-1
11.1.2 Reader Unit.....	11-1
11.1.3 Printer Unit	11-2
11.2 Durables and Consumables	11-3
11.2.1 Overview	11-3
11.2.2 Reader Unit.....	11-3
11.2.3 Printer Unit	11-4
11.3 Scheduled Servicing Basic Procedure	11-5
11.3.1 Scheduled Servicing Basic Procedure	11-5
11.3.2 Scheduled Servicing (reader unit)	11-6
11.3.3 Scheduled Servicing (printer unit)	11-7
11.3.4 Shifting the Photosensitive Drum Phase	11-13
11.4 Cleaning.....	11-21
11.4.1 Cleaning the Secondary Transfer Rear Guide.....	11-21
11.4.2 Cleaning the Registration Roller, Registration Guide, and Transparency Sensor	11-22

11.1 Periodically Replaced Parts

11.1.1 Overview

0002-9397

Some parts of the machine must be replaced on a periodical basis for the machine to maintain a specific level of performance. They must be replaced regardless of the presence/absence of external changes or damage, as the performance of the machine will be considerably affected once they fail.

If possible, plan any replacement to coincide with a scheduled visit.



The intervals indicated may vary depending on the site environment and user habit.

-Checking the Timing of Replacement

The timing of replacement may be checked using the following service mode items:

-Copier

COPIER>COUNTER>PRDC-1

-Accessory

COPIER>COUNTER>PRDC-2

11.1.2 Reader Unit

0000-9633

The machine's reader unit does not have parts that must be replaced on a periodical basis.

11.1.3 Printer Unit

0002-9400

T-11-1

as of March 2004					
Ref.	Parts name	Parts No.	Q'ty	Interval	Remarks
1	Ozone filter	FC5-2486-000	1	250,000 images*	
2	Toner filter	FL2-0554-000	1	250,000 images*	
3	Primary charging wire	FB4-3687-000	AR	500,000 images*	
4	Charging wire cleaner 1	FL2-2427-000	1	500,000 images*	**
5	Charging wire cleaner 2	FL2-2428-000	1	500,000 images*	**
6	Pre-transfer charging wire	FB4-3687-000	AR	500,000 images*	
7	Pre-transfer charging assembly wire cleaner 1	FL2-2427-000	1	500,000 images*	
8	Pre-transfer charging assembly wire cleaner 2	FL2-2428-000	1	500,000 images*	
9	Primary grid wire	FY1-0883-000	1	500,000 images*	
10	Fixing thermistor	FK2-0013-000	1	500,000 prints	
11	Pressure thermistor	FK2-0013-000	1	500,000 prints	
12	Outside heating roller thermistor	FK2-0013-000	1	500,000 prints	
13	Primary charging assembly	FM2-0429-000	1	1,000,000 images*	
14	Pre-transfer charging assembly	FM2-0427-000	1	1,000,000 images*	
15	Fixing thermal switch	FM2-0497-000	1	1,000,000 prints	
16	Pressure thermal switch	FM2-0498-000	1	1,000,000 prints	
17	Outside heating thermal switch	FM2-0499-000	1	1,000,000 prints	

* In the case of a black mono color print, counted as 1; in the case of a full color print, counted as 4 images.

** Under high humidity and high temperature condition, 100,000 images

11.2 Durables and Consumables

11.2.1 Overview

0005-8047

Some parts of the machine may have to be replaced once or more over the period of machine warranty because of wear or damage. Replace them as needed by referring to the table of estimated lives (expressed in terms of the number of prints they make).

Making Checks When Replacing Durables

Use the following service mode items to find out when to replace parts:

-Machine

COPIER>COUNTER>DRBL-1

-Accessory

COPIER>COUNTER>DRBL-2

11.2.2 Reader Unit

0000-9645

The machine's reader unit does not have parts that are classified as durables.

11.2.3 Printer Unit

0002-9470

T-11-2

as of March 2004					
Ref.	Parts name	Parts No.	Q'ty	Interval	Remarks
[1]	Feed roller (manual feed)	FB1-8581-000	1	120,000 prints	
[2]	Separation roller (manual feed)	FB5-0873-000	1	120,000 prints	
[3]	ITB cleaner scoop-up sheet	FL2-0411-000	1	150,000 prints	
[4]	Secondary transfer static eliminator holder	FL2-0598-000	1	150,000 prints	
[5]	Fixing roller	FC5-6298-000	1	150,000 prints*	
[6]	Pressure roller	FC5-6299-000	1	150,000 prints*	
[7]	Outside heating roller	FC5-2285-000	1	150,000 prints*	
[8]	ITB cleaner blade	FC5-1662-000	1	195,000 images*2	lubricate fluorine graphite
[9]	Secondary transfer outside roller	FC5-2157-000	1	195,000 images*2	
[10]	Primary transfer roller	FC5-1660-000	1	195,000 images*2	
[11]	Cleaner blade	FC5-1788-000	1	195,000 images*2	one edge in use, lubricate fluorine graphite
[12]	Pickup roller (left/right paper deck)	FC5-2524-000	1 each	250,000 prints	
[13]	Feed roller (left/right paper deck)	FC5-2526-000	1 each	250,000 prints	
[14]	Separation roller (left/right paper deck)	FC5-2528-000	1 each	250,000 prints	
[15]	Pickup roller (cassette 3/4)	FC5-2524-000	1 each	250,000 prints	
[16]	Feed roller (cassette 3/4)	FC5-2526-000	1 each	250,000 prints	
[17]	Separation roller (cassette 3/4)	FC5-2528-000	1 each	250,000 prints	
[18]	Primary transfer static eliminator	FM2-0420-000	1	300,000 images*2	
[19]	ITB	FC5-1658-000	1	300,000 images*2	
[20]	Secondary transfer inside roller	FC5-1661-000	1	300,000 prints	
[21]	Cleaner scoop-up sheet	FL2-0422-000	1	390,000 images*2	
[22]	Edge scraper	FC5-5136-000	2	500,000 images*2	
[23]	Color developing assembly	FM2-0446-000	3	500,000 prints	
[24]	Fixing web	FC5-2286-000	1	500,000 prints	
[25]	Fixing heat insulating bush	FB5-3613-000	2	500,000 prints	
[26]	Delivery upper separation claw	FM2-1672-000	4	500,000 prints	
[27]	Delivery lower separation claw unit	FM2-0501-000	6	500,000 prints	
[28]	Pressure insulating bush	RB1-0325-000	2	500,000 prints	
[29]	Outside heat insulating bush	FC5-2582-000	2	500,000 prints	
[30]	ITB edge scraper	FC6-2843-000	2	600,000 images*2	
[31]	Fixing heat discharge ozone filter	FC5-6370-000	1	1,000,000 images*2	
[32]	Tner filter (inside)	FL2-0554-000	1	1,000,000 images*2	
[33]	Bk developing cylinder (black developing assembly)	FM2-0434-000	1	1,000,000 prints	
[34]	Developing roll (black developing assembly)	FC5-1863-000	2	1,000,000 prints	

*1: in the case of a color ratio of 10%; if 100%, 60,000 prints; if 0%, 180,000 prints.

*2: in the case of a black mono color print, counted as 1 image; in the case of a full color print, counted as 4 images.

11.3 Scheduled Servicing Basic Procedure

11.3.1 Scheduled Servicing Basic Procedure

0003-4125



- As a rule, provide scheduled servicing every 150,000 prints.
 - Check with the Service Book before setting out for a scheduled service visit, and take parts for which replacement is expected.
 - If the power plug is left connected for a long time in a place subject to dust, humidity, or oil smoke, a fire hazard is a possibility (i.e., the dust collecting around the plug can absorb moisture, resulting in insulating failure). Be sure to disconnect the power plug on a periodical basis, and wipe off the dust and dirt collecting around it.
-

<Work Procedure>

- 1) Report to the person in charge, and check the general condition.
- 2) Record the counter reading, and check the faulty prints.
- 3) Make the following checks, and clean/adjust the items that are indicated:

T-11-3

Items

Text copy	<ul style="list-style-type: none"> against image density standard for soiling of back of paper for clarity of characters for margin for fixing for margin standards (single-sided print) (double-sided print) 	<ul style="list-style-type: none"> misplaced registration, soiled back of paper leading edge: 4.0+1.5/-1.0mm left edge: 2.5+/-1.5mm leading edge: 4.0+1.5/-1.0mm left edge: 2.5+/-2.0mm
Feeding system	<ul style="list-style-type: none"> registration upper/lower roller for paper lint along front edge of registration assembly 	

- 4) Check the waste toner case.

If half full or more, dispose of the waste toner in a vinyl bag or the like for collection; or, replace the waste toner case.



- If you need to dispose of the waste toner, be sure to do so in strict accordance with the regulations imposed by the local authorities.
 - Do not dispose of waste toner in a fire. Doing so may cause an explosion.
-

- 5) Clean the copyboard glass and the reading glass.
- 6) Make test copies.
- 7) Make sample copies.
- 8) Check the operation of the leakage breaker.

With the power switch at ON, push the test switch of the leakage breaker to see that it operates normally (i.e., the breaker switch shifts to the OFF side to cut off the power).

If the leakage beaker fails to operate normally, replace it, and run a check once again.

<Resetting the Breaker>

When you have made the check, turn off the main power switch, and turn on the breaker switch, and then turn the main power switch back on.

- 9) Put the sample copies in order, and clean up the area around the machine.
- 10) Record the final counter reading; at this time, be sure to fill out the blanks for 'FX-UP-RL' and 'DV-UNT-K' (service counters).
- 11) Fill out the Service Book, and report to the person in charge. Be sure to update the history of checks on the leakage breaker in the Service Book.

11.3.2 Scheduled Servicing (reader unit)

0003-4139



Do not use solvents or oils other than those indicated herein.

T-11-4

Unit	Location	Work	Intervals	Remarks
Original exposure system	Copyboard glass	clean	195,000 images	clean the face, back, and the white plate on the back.
Original exposure system	ADF reading glass	clean	195,000 images	clean the back and the face.
Original exposure system	Scanner rail	clean/ lubricate	as needed	
Original exposure system	Scanner mirror (No. 1 through No. 3 mirrors)	clean	195,000 images	
Original exposure system	Reflecting plate	clean	195,000 images	



The foreign values are estimates only, and are subject to change based on future data.

11.3.3 Scheduled Servicing (printer unit)


0003-4126









Do not use solvents or oils other than those permitted.




T-11-5

Unit	Location	Item	Interval	Remarks
Externals and controls	Ozone filter	replace	250,000 images	<p>[1]Toner filter [2]Ozone filter</p>
Externals and controls	Toner filter	replace	250,000 images	

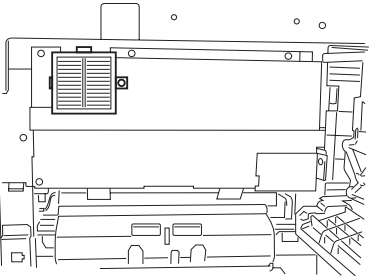Unit	Location	Item	Interval	Remarks
Externals and controls	Dust-collecting filter (primary)	clean	250,000 prints	 <p>inside of the right upper cover</p>
Laser exposure system	Dust-collecting glass	clean	250,000 prints	
Charging assembly	Primary charging assembly	replace	1,000,000 images	
Charging assembly	Primary charging wire	clean	upon installation	
		replace	500,000 images	
Charging assembly	Primary grid wire	clean	upon installation, 250,000 images	
		replace	500,000 images	
Charging assembly	Charging wire cleaner 1/2 (primary charging assembly)	replace	500,000 images	
Charging assembly	Pre-transfer charging assembly	replace	1,000,000 images	
Charging assembly	Pre-transfer charging wire	clean	upon installation	
		replace	500,000 images	
Charging assembly	Charging wire cleaner 1/2 (pre-transfer charging assembly)	replace	500,000 images	
Charging assembly	Charging assembly shielding plate	clean	upon installation, 250,000 images	

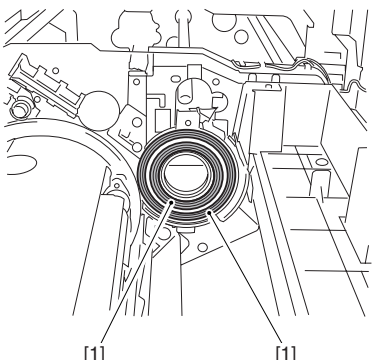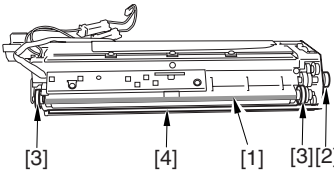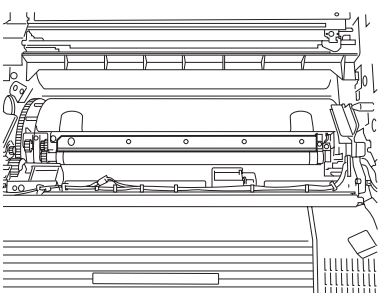Unit	Location	Item	Interval	Remarks
Photosensitive drum	Drum heater sliding area	clean/ lubricate	1,000,000 images	 <p>Clean the terminal [1] of the slip ring using alcohol; then, apply a small amount of lubricant (FY9-6008).</p>
Photosensitive drum	Shifting the photosensitive drum phase	adjustment	250,000 images	
Black developing assembly	Developing cylinder	check	upon installation	
Black developing assembly	Developing stray toner-blocking sheet	clean	250,000 prints	 <p>[1]Developing stray toner-blocking sheet [2]Developing drive gear [3]Developing roll [4]Bias roller toner collection case</p>
Black developing assembly	Developing drive gear	clean	250,000 prints	
Black developing assembly	Developing roll	clean	250,000 prints	
Black developing assembly	Bias roller toner collection case	clean	250,000 images	
Color developing assembly	Developing cylinder	check	upon installation	
Color developing assembly	Developing stray toner-blocking sheet	clean	250,000 prints	
Color developing assembly	ATR sensor window	clean	250,000 images	
Color developing assembly	Color toner cartridge level sensor window	clean	250,000 images	

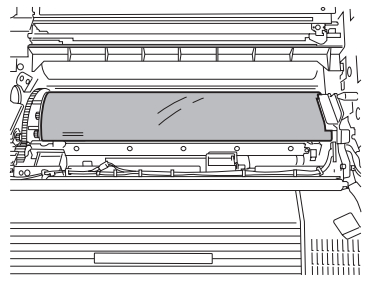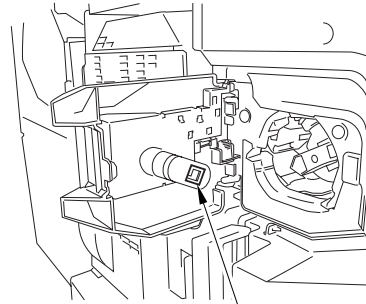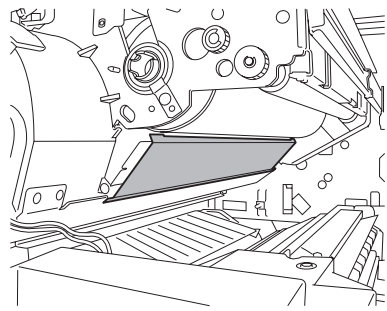Unit	Location	Item	Interval	Remarks
Color developing assembly	Developing cylinder bushing	clean	250,000 images	
Color developing assembly	Bottle cover	clean	250,000 images	
Color developing assembly	Color toner cartridge placement sensor window	clean	250,000 images	 [1] [1]Color toner cartridge placement sensor window
Intermediate transfer assembly	Patch image sensor window	clean	250,000 images	
Intermediate transfer assembly	ITB inside scraper/roller(when replacing primary transfer roller)	clean	195,000 images	
Intermediate transfer assembly area	Pre-transfer corona assembly rail, thereunder	clean	150,000 prints	

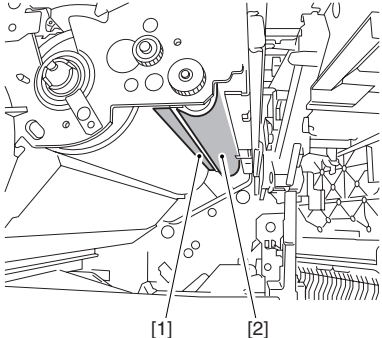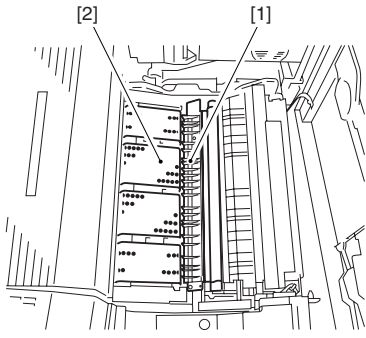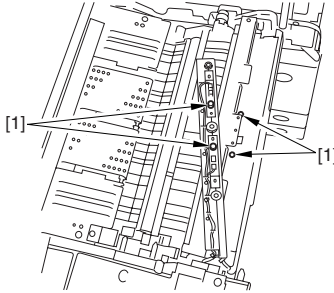Unit	Location	Item	Interval	Remarks
Intermediate transfer assembly area	Scoop-up sheet base, thereunder	clean	150,000 prints	 <p>[1] Scoop-up sheet base, thereunder [2] Cleaner container, hereunder</p>
Intermediate transfer assembly area	Cleaner container, hereunder	clean	150,000 prints	
Secondary transfer assembly	Secondary transfer rear guide	clean	150,000 prints	 <p>[1] Secondary transfer rear guide [2] Feeding belt</p>
Feeding assembly	Feeding belt	clean	150,000 prints	
Feeding assembly	OHP sensor	clean	250,000 prints	 <p>[1] clean upper/lower OHP sensor using blow brush</p>
Feeding assembly	Registration roller	clean	250,000 prints	
Feeding assembly	Registration guide	clean	250,000 prints	
Hopper assembly	Toner receptacle/ supply mouth	clean	250,000 prints	
Fixing assembly	Fixing web	check	upon installation	
Fixing assembly	Fixing thermistor	clean	150,000 prints	
		replace	500,000 prints	

Unit	Location	Item	Interval	Remarks
Fixing assembly	Pressure thermistor	clean	150,000 prints	
		replace	500,000 prints	
Fixing assembly	Outside heating roller thermistor	clean	150,000 prints	
		replace	500,000 prints	
Fixing assembly	Fixing thermal switch	clean	300,000 prints	
		replace	1,000,000 prints	
Fixing assembly	Pressure thermal switch	clean	150,000 prints	
		replace	1,000,000 prints	
Fixing assembly	Outside heating thermal switch	clean	150,000 prints	
		replace	1,000,000 prints	
Fixing assembly	Inlet guide	clean	150,000 prints	use lint-free with specified solvent.
Delivery assembly	Upper/lower separation claw	clean	150,000 prints	use lint-free paper with specified solvent.
Waste toner collection assembly	Waste toner box	inspect	250,000 images*	

note:

The black developing cylinder need not be cleaned on a periodical basis. If you must clean the surface of the cylinder, be sure to dry wipe it with lint-free paper, NEVER using water or solvent.

*:

The intervals are based on a color ratio of 10% and image ratio of 5%, and thus are subject to variation depending on the actual ratios.




The foregoing values are estimates only, and are subject to change based on future data.

11.3.4 Shifting the Photosensitive Drum Phase

0006-0350

The photosensitive drum can develop drum memory unless the image write start position is shifted at specific intervals. Be sure to shift the drum phase every so many copies/prints have been made as shown below.

<Overview of the Work>

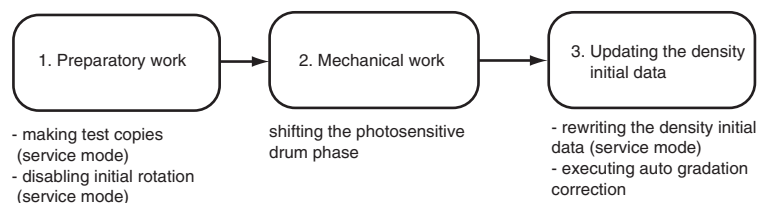

F-11-1

<When to Perform the Work>

-every some copies or prints made continuously

-when detaching and attaching the drum (i.e., when the initial drum phase is lost) Here,3.

"Mechanical Work" in the detailed instructions is not needed. To avoid the possible discrepancy in phase, however, be sure to perform 1. "Preparatory Work" and 3. "Updating the Density Initial Data."

<Detailed Instructions>

1. Preparatory Work

1-1 Turn off the main power switch, and wait until the machine has entered a ready state.

1-2 To stabilize the machine operation, generate 5 test pattern printouts (A3, double-sided) by executing the following in service mode: COPIER>TEST>PG>TYPE=16.



Be sure not to forget to select a cassette loaded with A3 paper and double-sided printing in service mode.

-to select a particular cassette in service mode, execute COPIER>TEST>PG>PG-PICK=3 or =4.

-to select double-sided printing in service mode, execute COPIER>TEST>PG>2-SIDE=1.

1-3 Set "1" to the following service mode to disable initial multiple rotation:


COPIER>FUNCTION>INSTALL>AINR-OFF.

1-4 Turn off the main power switch.

2. Mechanical Work


2-1 Open the front cover.

2-2 Shift down the fixing/feeding release lever [1], and draw out the fixing/feeding assembly [2] to the front.

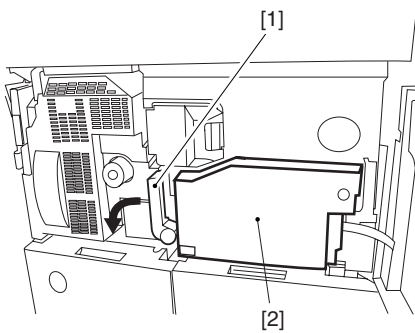


F-11-2

2-3 Open the color toner supply cover [1]. Remove the 2 screws [2], and detach the process cover [3].

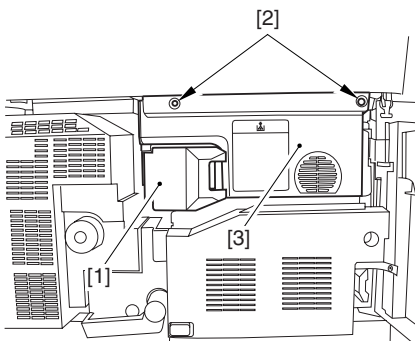

F-11-3


2-4 Remove the screw [1], and shift down the primary transfer roller locking lever [2] (so that the primary transfer roller is freed).

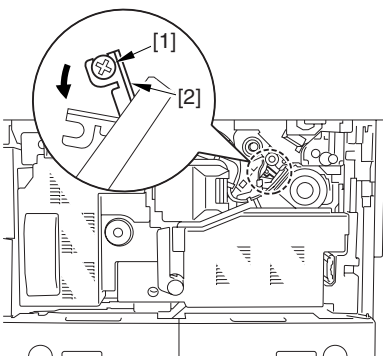

F-11-4


2-5 Check to find out the position of the marking [2] on the drum flange in relation to the protrusion [1] of the drum fixing member. (checking the drum phase)

In the figure, the marking [2] on the drum flange is at "." on the left and ".." on the right in relation to the protrusion [1] of the drum fixing member.

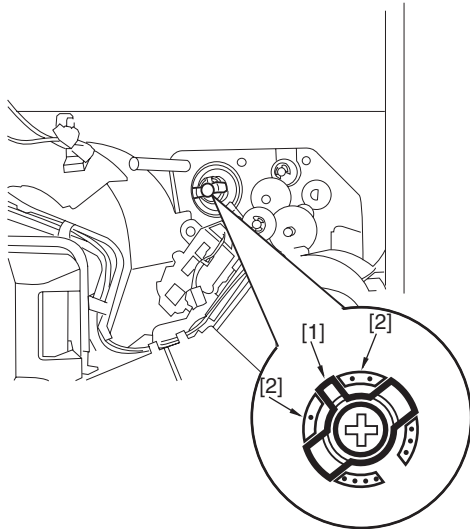


F-11-5

At this time, check the drum phase label [1] attached behind the process unit cover. If there is no check mark on the label indicating the present phase position, be sure to put a check mark.

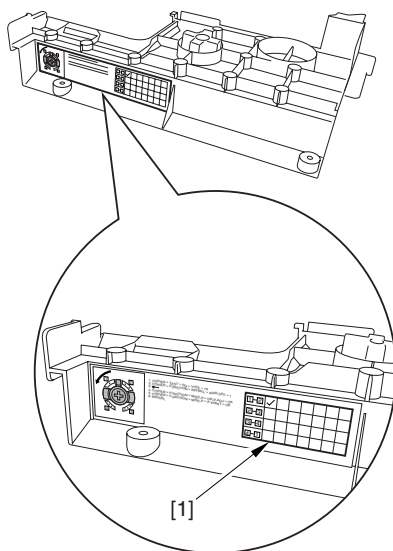


F-11-6

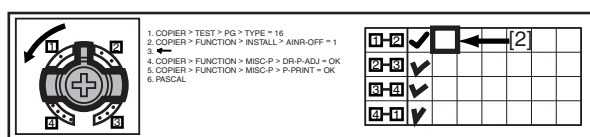

F-11-7


2-6 Hold down the drum fixing member [1] using the drum stop tool [2]: then, using a screwdriver, remove the drum fixing screw [3].

As shown, be sure to remove the screw only after matching the protrusion [4] of the drum stop tool against the cut-off [5] of the drum flange.

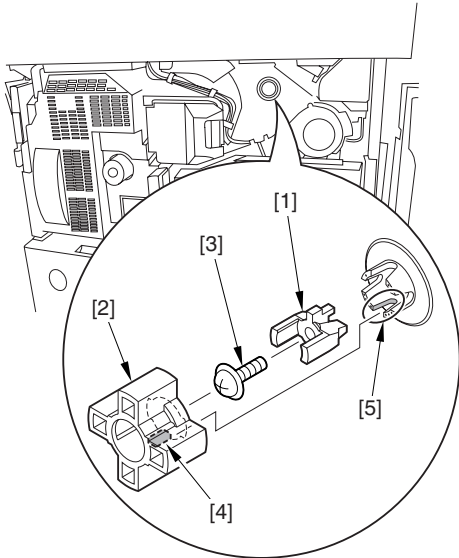

F-11-8


2-7 Fit the drum stop tool [1] in the drum flange [2]; then, turn the drum counterclockwise by 90 deg.

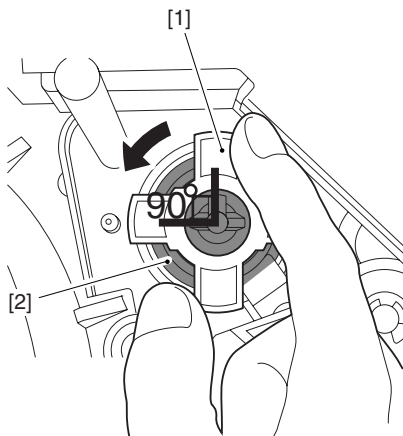

F-11-9



1: When fixing the tool to the flange, be sure to turn the drum only after matching the protrusion [2] of the tool against the cut-off [1] of the drum flange.

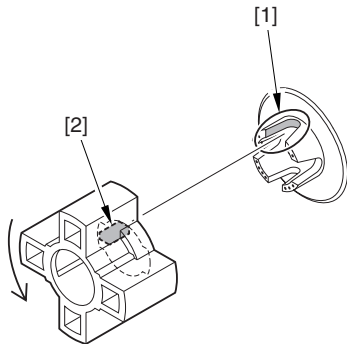


F-11-10


2: The drum phase position is identified by means of a marking of 1 to 4 dots on the flange. At time of shipment from the factory, dent A in the drum shaft is between "." and "..".

The following figures show the position of the drum flange before and after a shift is introduced:

Position of the Flange Before the Phase Is Shifted (at time of shipment)

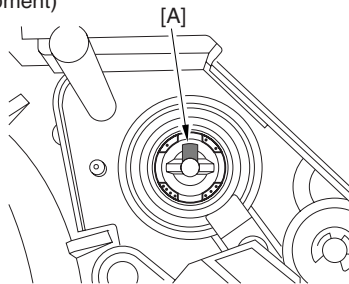

Position of the Flange After the Phase Is Shifted (after the shift work for the first time)

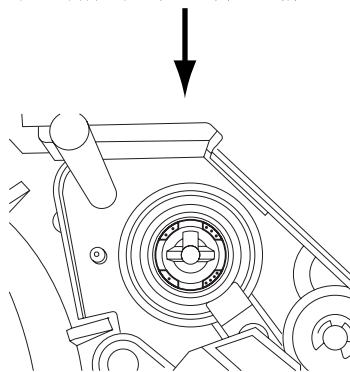


F-11-11

3: Do not shift the drum phase as part of normal work involving drawing out of the process unit.


2-8 After fitting the drum fixing member [2] to the drum flange [1], hold it down from above using the drum stop tool [3]. Thereafter, tighten the drum fixing screw [4] with a screwdriver.

Be sure to fix the protrusion [5] of the drum stop tool in place with a screw after matching it against the cut-off [6] of the drum flange.

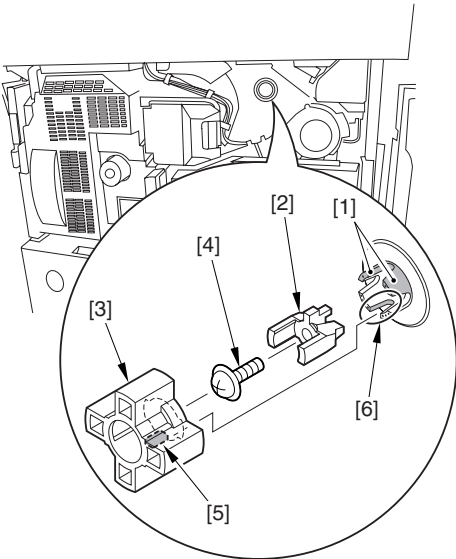


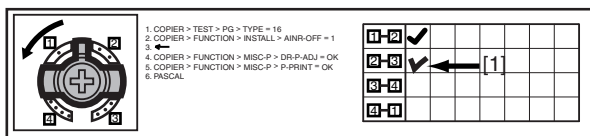
F-11-12

2-9 After checking the drum phase position, put a check mark on the drum phase label [1] attached behind the process cover.

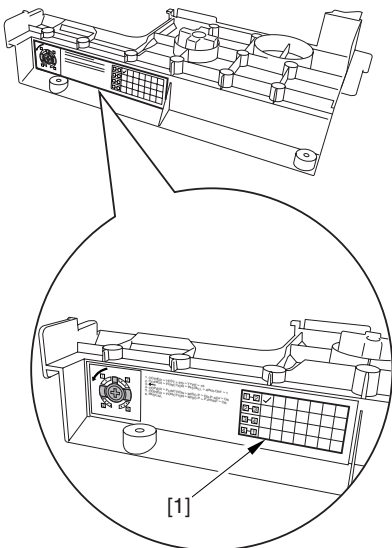

F-11-13

 The following figure shows a label with a check mark indicating that the work has been performed.




F-11-14

2-10 Attach the cover by performing step 2-1 through 2-4 in reverse.


3. Updating the Density Initial Data

3-1 Turn on the main power switch, and wait until the machine has entered a ready state.


3-2 Execute the following in service mode: COPIER>FUNCTION>MISC-P>DR-P-ADJ

 When the machine ends the service mode item normally, the setting (AINR-OFF) will automatically return to "0".

3-3 Execute the following in service mode: COPIER>FUNCTION>MISC-P>P-PRINT. Then, record the values of the following on the service label attached behind the front cover: COPIER>ADJT>DENS>P-SGNL-Y/M/C.

 Store the output of P-PRINT in the service book case. If there is previous output in the case, replace it with the new output.

3-4 Execute auto gradation correction in user mode (adjust/cleaning>auto gradation correction>full correction).

 Be sure to perform the foregoing steps to position the drum in phase whenever you are not sure whether the drum is in correct phase.

Related Service Mode Item

1. counter mode for phase shift work: COPIER>COUNTER>MISC>DRM-PHAS

Particulars

Use it to indicate the counter reading for determining the intervals of the work. (The denominator indicates the counter reading of the work intervals, while the numerator indicates the counter reading on an actual machine).

-Settings:

00000000 to 99999999

-At Time of Shipment

denominator of counter reading:

200,000 images (Japan); 100,000 images (outside Japan)

(numerator of counter reading):

0

2. message switchover mode associated with the foregoing counter: COPIER>OPTION>BODY>DRM-DISP

Particulars

Use it to enable/disable the indication of the foregoing count reading:

Settings:0 to 2

0: disable indication

1: indicate in service mode only (factory default)

2: indicate both on User screen and in service mode

3. confirmation mode for phase shift work: COPIER>DISPLAY>ALARM-2

A record of the work will be indicated in terms of the number of times the work has been performed.

11.4 Cleaning


11.4.1 Cleaning the Secondary Transfer Rear Guide

0004-6732

- 1) Open the front cover.
- 2) Slide out the fixing/feeding assembly.
- 3) Wipe the ribs one by one by moving lint-free paper moistened with alcohol in the direction of the arrow in the figure.



1. Do not dry wipe, as the ribs are likely to become charged.
2. The ribs of the secondary transfer rear guide are located near the static eliminating brush [3]; do not move the lint-free paper in the wrong direction to avoid trapping and bending the static eliminator.

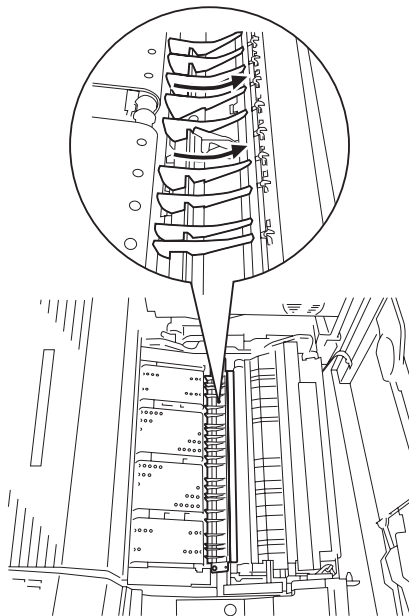


F-11-15

11.4.2 Cleaning the Registration Roller, Registration Guide, and Transparency Sensor


0005-6999

- 1) Slide out the fixing/feeding assembly.
- 2) Push the leaf springs on both sides, and slide the fixing/feeding assembly farther out.
- 3) Remove the 3 screws [1], and turn over the transparency upper sensor unit [2].

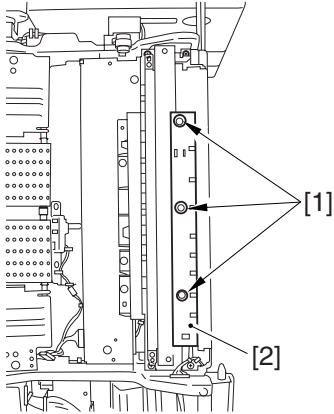


F-11-16

- 4) Remove the paper lint building up over the transparency sensor [1] using a blower brush.

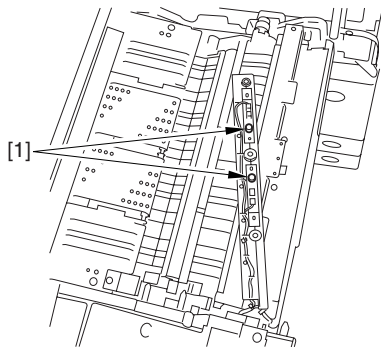


F-11-17

- 5) Remove the 2 screws [1], and detach the grounding spring [2].
- 6) Remove the screw [3].

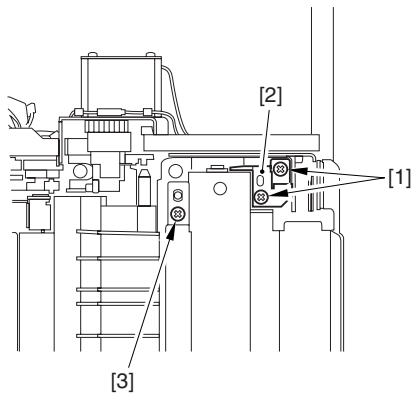


F-11-18

- 7) Remove the 3 screws [1], and detach the registration roller upper stay [3] together with the grounding spring [4] while freeing the spring [2] off its hook.

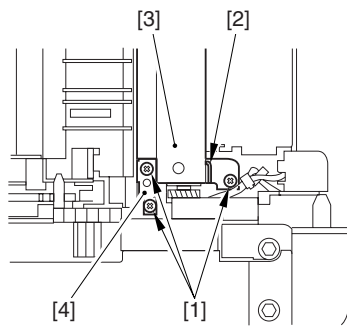


F-11-19

- 8) Open the registration upper guide [1], and clean the back [1] of the upper guide and the lower guide [2] using lint-free paper moistened with alcohol.
- 9) Remove the paper lint building up on the transparency sensor [3] using a blower brush.

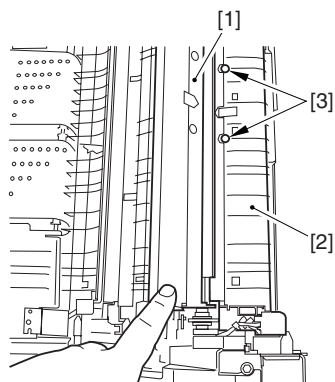

F-11-20

10) Turn the upper registration roller [1] and the lower registration roller [2] to clean them with lint-free paper moistened with alcohol.

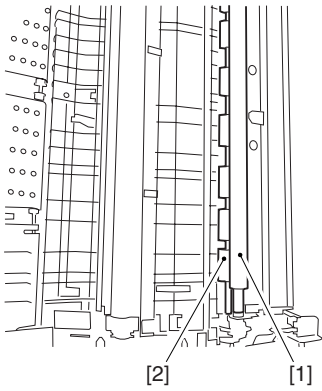

F-11-21

Chapter 12 Standards and Adjustments

Contents

12.1 Image Adjustment Basic Procedure	12-1
12.1.1 Image Adjustment Basic Procedure 1	12-1
12.1.2 Image Adjustment Basic Procedure 2	12-3
12.1.3 Image Adjustment Basic Procedure 3	12-4
12.1.4 Image Adjustment Basic Procedure 4	12-5
12.1.5 Image Adjustment Basic Procedure 5	12-6
12.1.6 Image Adjustment Basic Procedure 6	12-7
12.1.7 Potential Control Conversion Table	12-8
12.2 Image Adjustments	12-16
12.2.1 Image Position	12-16
12.2.2 Checking the Image Position	12-16
12.2.3 Cassette	12-17
12.2.4 Manual Feed Tray	12-18
12.2.5 Front Deck	12-18
12.3 Scanning System	12-20
12.3.1 After Replacing the CCD Unit	12-20
12.3.2 After Replacing the Copyboard Glass	12-21
12.3.3 After Replacing the Reader Controller PCB or Initializing the RAM	12-21
12.4 Laser Exposure System	12-23
12.4.1 After Replacing the Laser Scanner	12-23
12.5 Image Formation System	12-23
12.5.1 After Replacing the Black Developing Unit	12-23
12.5.2 Points to Note When Mounting the Polarity Positioning Plate	12-23
12.5.3 Replacing the Color Developing Unit	12-24
12.5.4 Replacing the Starter of the Color Developing Unit	12-26
12.5.5 After Replacing the Primary Charging Assembly	12-29
12.5.6 After Replacing the Primary Charging Wire	12-29
12.5.7 After Replacing the Pre-Transfer Charging Wire	12-29
12.5.8 After Replacing the Pre-Transfer Charging Wire	12-29
12.5.9 After Replacing the Waste Toner Box	12-29
12.5.10 After Replacing the ITB Cleaning Blade	12-29
12.5.11 After Repacking the Photosensitive Drum Cleaning Blade	12-31
12.5.12 Replacing the Photosensitive Drum	12-32
12.5.13 Points to Note When Replacing the Drum Heater	12-33
12.5.14 Points to Note When Replacing the Drum Heater PCB	12-34
12.5.15 After Repacking the ITB	12-35
12.5.16 After Replacing the Primary Transfer Roller	12-35
12.6 Fixing System	12-37
12.6.1 Points to Note When Mounting the Fixing Assembly	12-37
12.6.2 After Replacing the Fixing Roller	12-37
12.6.3 After Replacing the Fixing Web	12-37
12.6.4 Position of the Fixing inlet Guide	12-38
12.6.5 Points to Note When Mounting the Pressure Roller	12-38
12.6.6 Adjusting the Nip Pressure of the Pressure Roller	12-38
12.6.7 Adjusting the Position of the Feeding Web Solenoid (SL2)	12-39
12.6.8 Points to Note About the Position of the Fixing Thermal Switch	12-39
12.6.9 Points to Note When Mounting the Shift Thermal Switch	12-39
12.6.10 Points to Note When Mounting the Outside Heating Roller Thermal Switch	12-40
12.6.11 Points to Note When Mounting the Fixing Upper Thermistor	12-40

12.6.12 Points to Note When Mounting the Fixing Lower Thermistor.....	12-40
12.6.13 Points to Note When Mounting the External Heat Thermistor	12-41
12.7 Electrical Components.....	12-41
12.7.1 When Replacing the Reader Controller PCB	12-41
12.7.2 After Replacing the DC Controller PCB	12-42
12.7.3 Points to Note When Mounting the DC Controller PCB/ DC Controller Box.....	12-43
12.7.4 After Replacing the Main Controller PCB (main).....	12-44
12.7.5 After Repacking the SRAM Board.....	12-44
12.7.6 After Replacing the HDD	12-44
12.7.7 When Replacing the HV2 PCB	12-45
12.7.8 When Replacing the ATR Sensor/Patch Image Read Sensor.....	12-46
12.8 Pickup/Feeding System	12-46
12.8.1 Adjusting the Horizontal Registration After Replacing the Pickup Cassette.....	12-46
12.8.2 Adjusting the Manual Feed Pickup Horizontal Registration	12-47
12.8.3 Adjusting the Front Deck Pickup Horizontal Registration.....	12-47
12.8.4 Registering the Paper Width Basic Value	12-49


12.1 Image Adjustment Basic Procedure

12.1.1 Image Adjustment Basic Procedure 1

0005-4335

The image adjustment basic procedure consists of the following steps:

Image Adjustment Basic Procedure 1

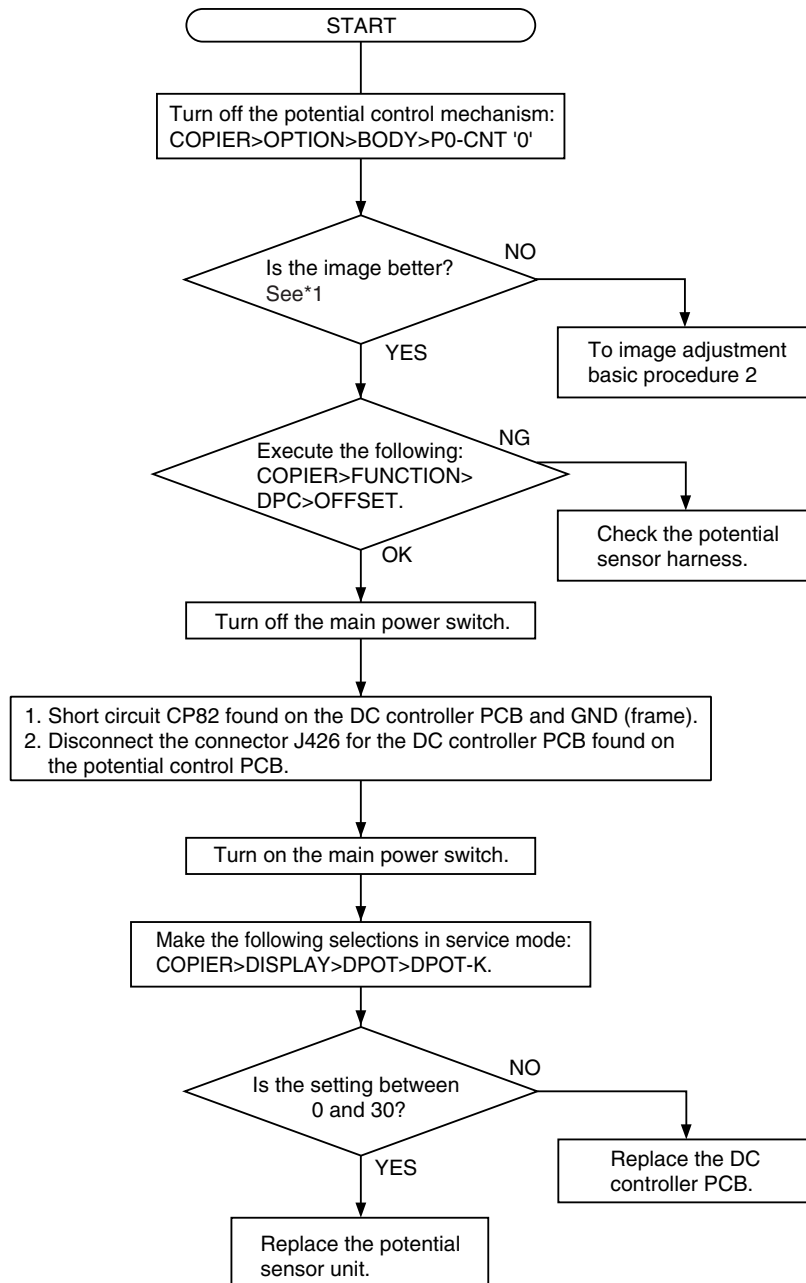


F-12-1

*1: Make a Bk mono copy. If the said fault is absent, make a full color copy. (Be sure not to make more than 5 full color copies.)

<At the End of the Work>

When done, go through the following so that the machine is ready to generate images of optimum quality.

- 1) Enable the potential control mechanism in service mode (set '1' to the following, and execute the item: COPIER>option>PO-CNT).
- 2) Execute image stabilization control in service mode (i.e., execute COPIER>FUNCTION>MISC-P>INTR-EX).
- 3) If the sure to execute full correction in user mode (under auto gradation correction) to ensure optimum density.


 When done, be sure to set '1' to the service mode item (potential control function); otherwise, image faults can occur.

12.1.2 Image Adjustment Basic Procedure 2

0005-4336

Image Adjustment Basic Procedure 2

<Check the Primary / Grid output>

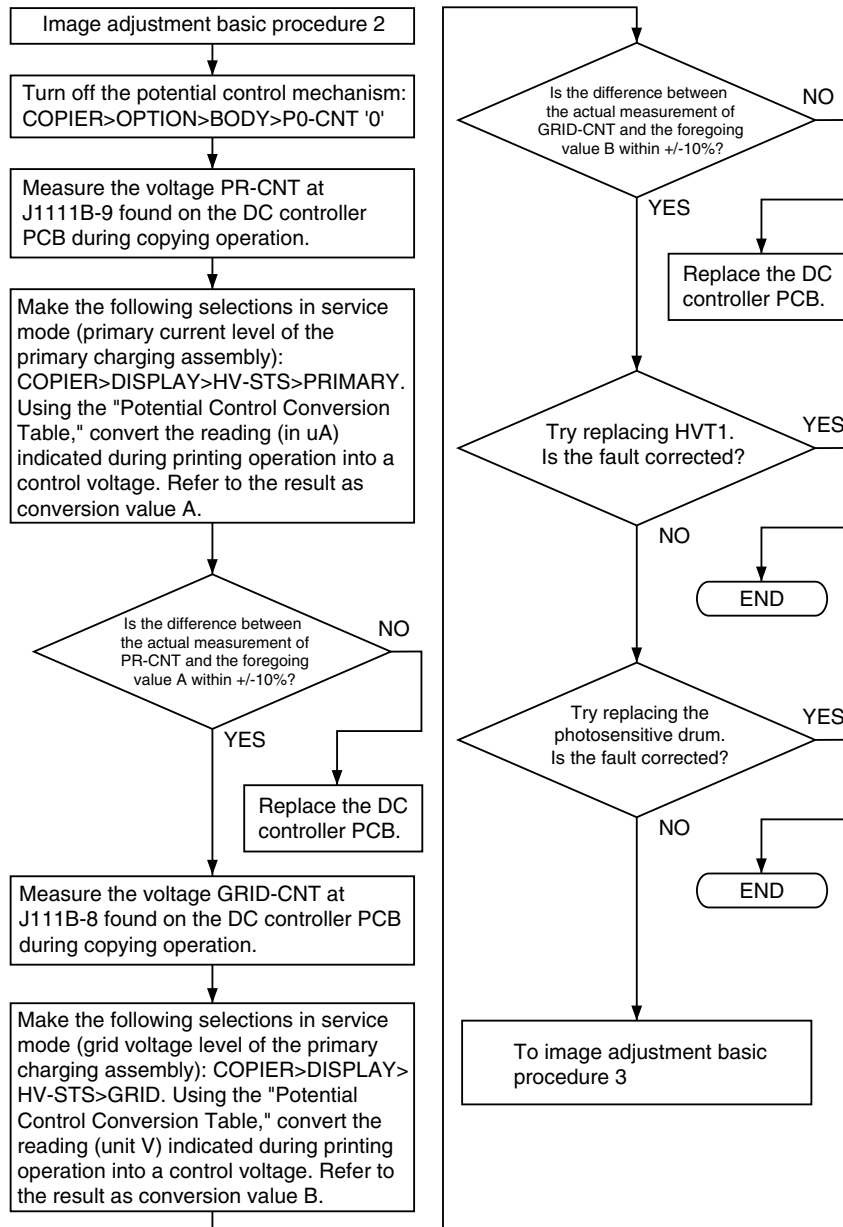


F-12-2

12.1.3 Image Adjustment Basic Procedure 3

0005-4337

Image Adjustment Basic Procedure 3

<Check the Laser output>

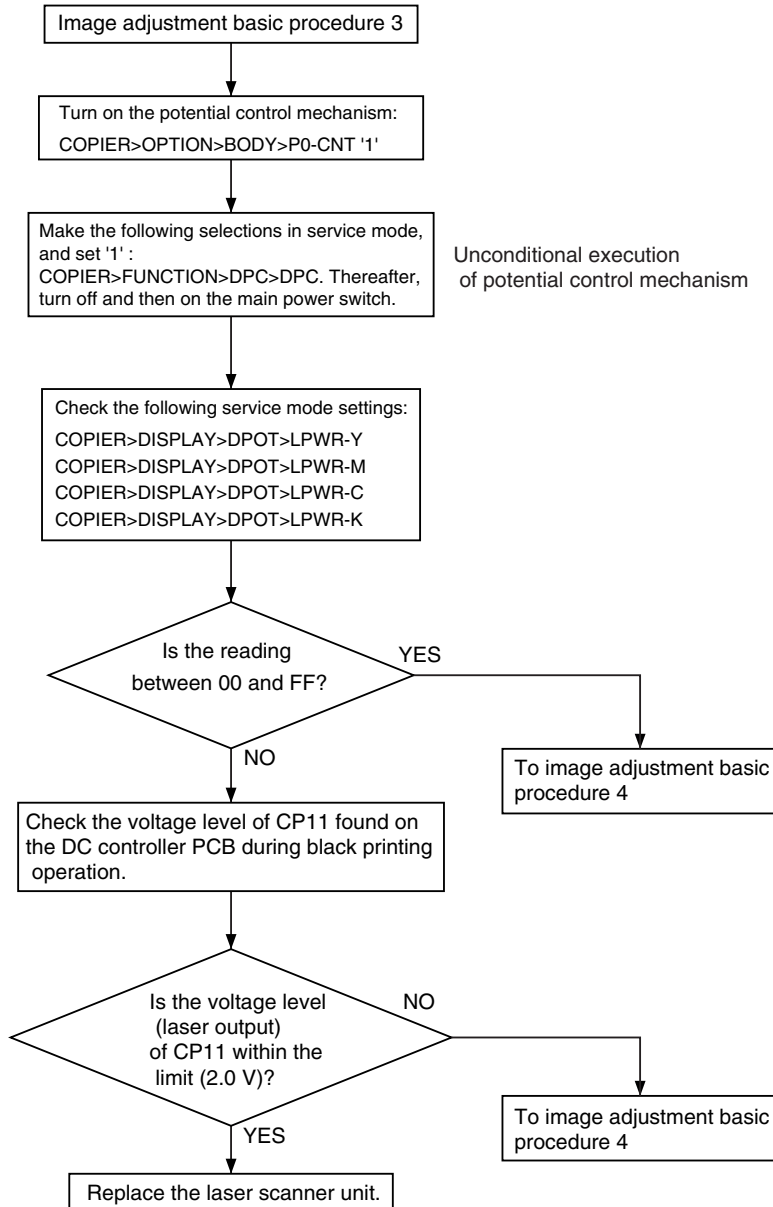


F-12-3

12.1.4 Image Adjustment Basic Procedure 4

0005-4338

Image Adjustment Basic Procedure 4

<Check the Developing output>

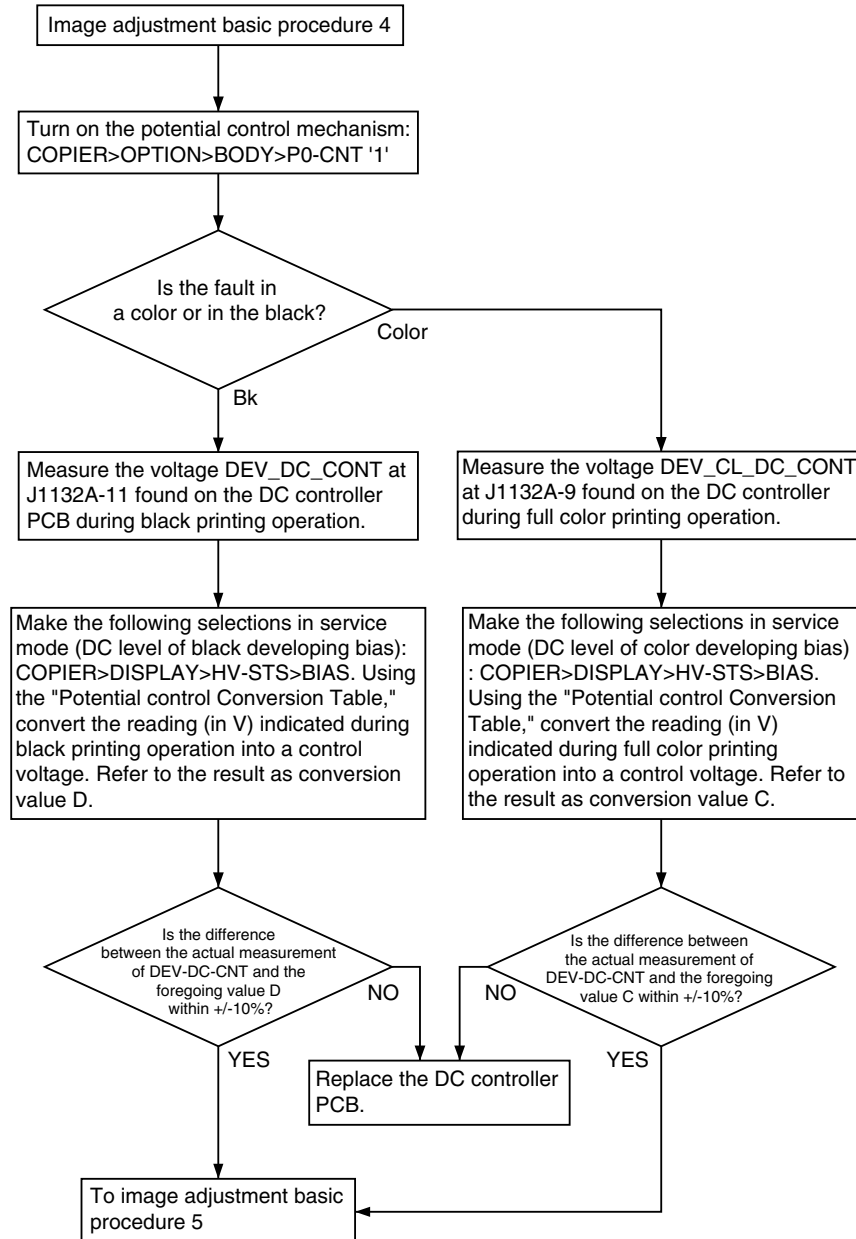


F-12-4

12.1.5 Image Adjustment Basic Procedure 5

0005-4339

Image Adjustment Basic Procedure 5

<Check the Primary transfer output>

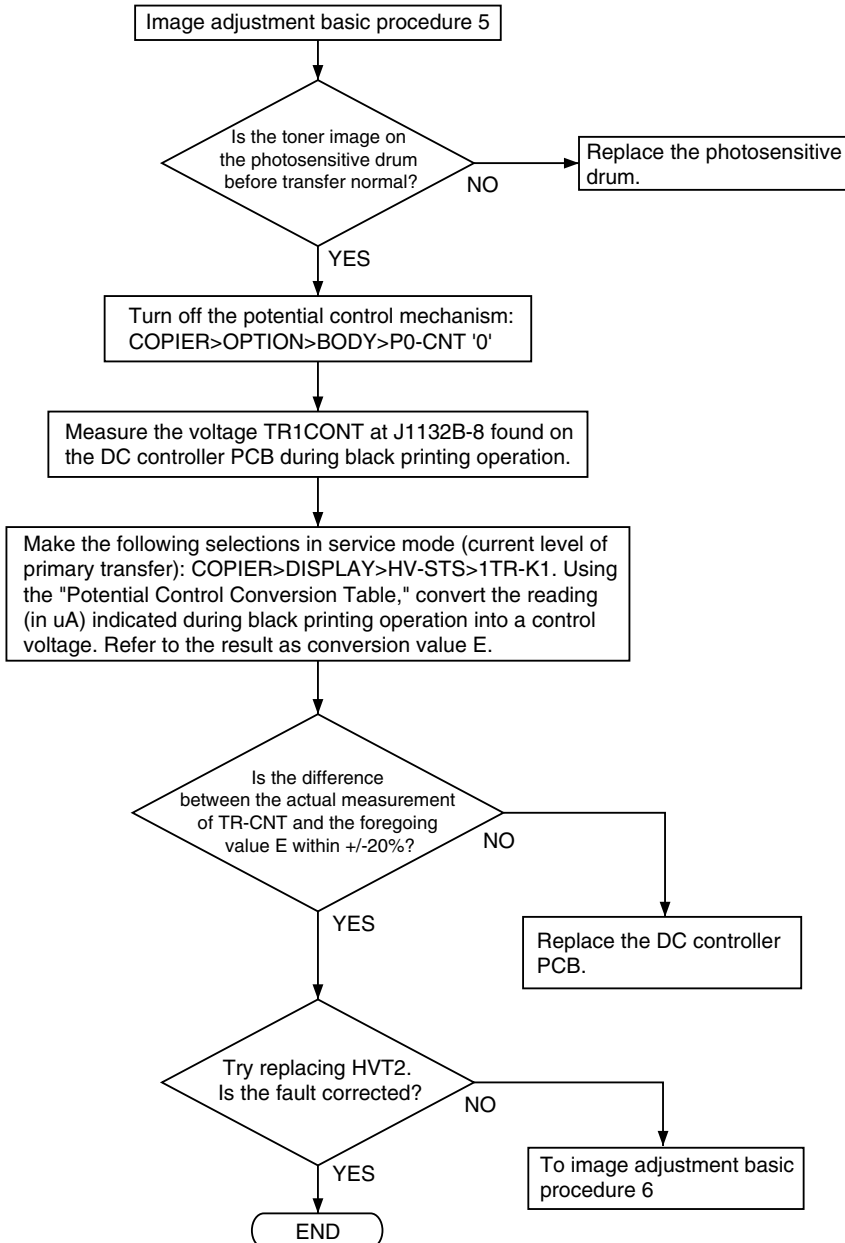


F-12-5

12.1.6 Image Adjustment Basic Procedure 6

0005-4340

Image Adjustment Basic Procedure 6

<Check the Secondary output>

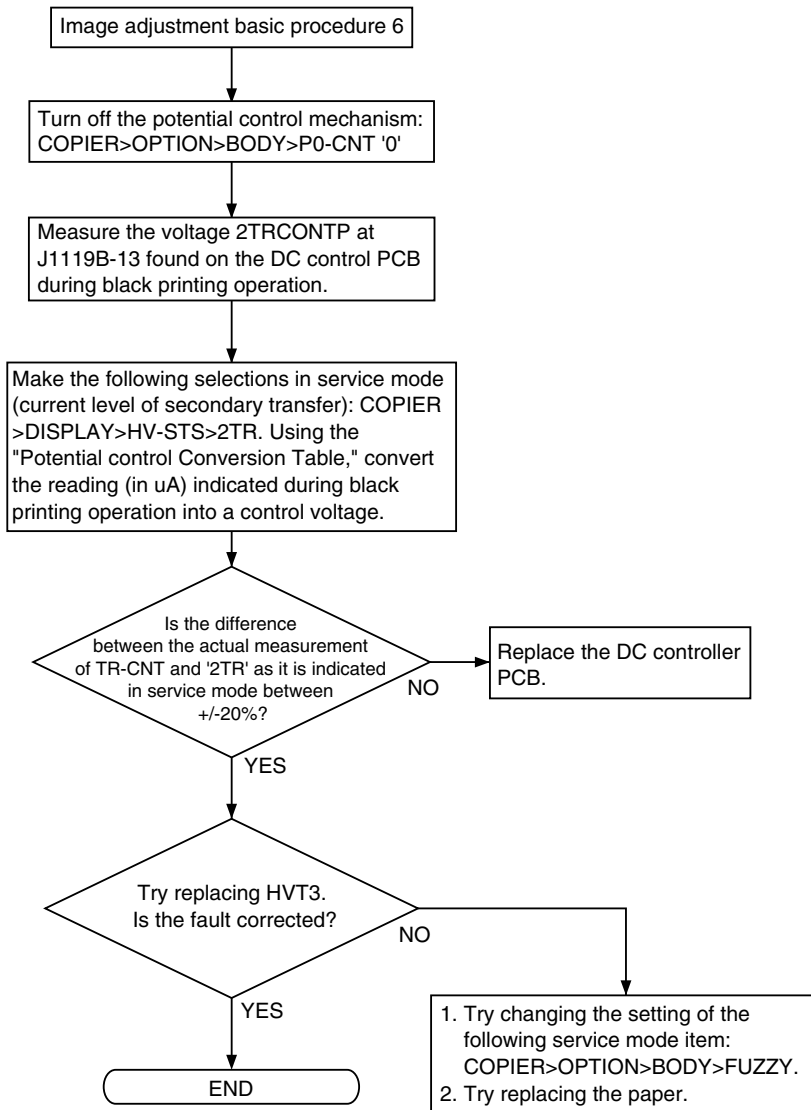

F-12-6

12.1.7 Potential Control Conversion Table

0005-4608

Potential Control Conversion Table

T-12-1

Control voltage (V)	Primary (uA)	Grid (V)	Color development (V)	Black development (V)	Primary transfer (uA)	Secondary transfer (uA)
1.031	1395.5	2.6	1.7	2	0	99.4
1.078	1388.9	6.8	4.1	5.8	0	98.9
1.125	1382.3	11.1	6.5	9.5	3	98.5
1.172	1375.7	15.3	8.8	13.3	3.6	98
1.219	1369.1	19.5	11.2	17	4.1	97.5
1.266	1362.6	23.8	13.5	20.8	4.7	97.1
1.313	1356	28	15.9	24.5	5.2	96.6
1.359	1349.4	32.2	18.2	28.3	5.8	96.1
1.406	1342.8	36.4	20.6	32.1	6.3	95.7
1.453	1336.3	40.7	22.9	35.8	6.9	95.2
1.5	1329.7	44.9	25.3	39.6	7.4	94.7
1.547	1323.1	49.1	27.6	43.3	8	94.3
1.594	1316.5	53.4	30	47.1	8.6	93.8
1.641	1310	57.6	32.3	50.8	9.1	93.3
1.688	1303.4	61.8	34.7	54.6	9.7	92.9
1.734	1296.8	66.1	37	58.3	10.2	92.4
1.781	1290.2	70.3	39.4	62.1	10.8	91.9
1.828	1283.7	74.5	41.7	65.9	11.3	91.5
1.875	1277.1	78.8	44.1	69.6	11.9	91
1.922	1270.5	83	46.4	73.4	12.4	90.5
1.969	1263.9	87.2	48.8	77.1	13	90
2.016	1257.3	91.5	51.1	80.9	13.5	89.6
2.063	1250.8	95.7	53.5	84.6	14.1	89.1
2.109	1244.2	99.9	55.8	88.4	14.7	88.6
2.156	1237.6	104.1	58.2	92.2	15.2	88.2
2.203	1231	108.4	60.6	95.9	15.8	87.7
2.25	1224.5	112.6	62.9	99.7	16.3	87.2
2.297	1217.9	116.8	65.3	103.4	16.9	86.8
2.344	1211.3	121.1	67.6	107.2	17.4	86.3
2.391	1204.7	125.3	70	110.9	18	85.8

Control voltage (V)	Primary (uA)	Grid (V)	Color development (V)	Black development (V)	Primary transfer (uA)	Secondary transfer (uA)
2.438	1198.2	129.5	72.3	114.7	18.5	85.4
2.484	1191.6	133.8	74.7	118.5	19.1	84.9
2.531	1185	138	77	122.2	19.6	84.4
2.578	1178.4	142.2	79.4	126	20.2	84
2.625	1171.9	146.5	81.7	129.7	20.8	83.5
2.672	1165.3	150.7	84.1	133.5	21.3	83
2.719	1158.7	154.9	86.4	137.2	21.9	82.6
2.766	1152.1	159.2	88.8	141	22.4	82.1
2.813	1145.5	163.4	91.1	144.7	23	81.6
2.859	1139	167.6	93.5	148.5	23.5	81.2
2.906	1132.4	171.9	95.8	152.3	24.1	80.7
2.953	1125.8	176.1	98.2	156	24.6	80.2
3	1119.2	180.3	100.5	159.8	25.2	79.8
3.047	1112.7	184.5	102.9	163.5	25.7	79.3
3.094	1106.1	188.8	105.2	167.3	26.3	78.8
3.141	1099.5	193	107.6	171	26.9	78.4
3.188	1092.9	197.2	109.9	174.8	27.4	77.9
3.234	1086.4	201.5	112.3	178.6	28	77.4
3.281	1079.8	205.7	114.6	182.3	28.5	77
3.328	1073.2	209.9	117	186.1	29.1	76.5
3.375	1066.6	214.2	119.4	189.8	29.6	76
3.422	1060.1	218.4	121.7	193.6	30.2	75.6
3.469	1053.5	222.6	124.1	197.3	30.7	75.1
3.516	1046.9	226.9	126.4	201.1	31.3	74.6
3.563	1040.3	231.1	128.8	204.9	31.8	74.2
3.609	1033.7	235.3	131.1	208.6	32.4	73.7
3.656	1027.2	239.6	133.5	212.4	33	73.2
3.703	1020.6	243.8	135.8	216.1	33.5	72.8
3.75	1014	248	138.2	219.9	34.1	72.3
3.797	1007.4	252.2	140.5	223.6	34.6	71.8
3.844	1000.9	256.5	142.9	227.4	35.2	71.4
3.891	994.3	260.7	145.2	231.1	35.7	70.9
3.938	987.7	264.9	147.6	234.9	36.3	70.4
3.984	981.1	269.2	149.9	238.7	36.8	69.9

Control voltage (V)	Primary (uA)	Grid (V)	Color development (V)	Black development (V)	Primary transfer (uA)	Secondary transfer (uA)
4.031	974.6	273.4	152.3	242.4	37.4	69.5
4.078	968	277.6	154.6	246.2	37.9	69
4.125	961.4	281.9	157	249.9	38.5	68.5
4.172	954.8	286.1	159.3	253.7	39.1	68.1
4.219	948.3	290.3	161.7	257.4	39.6	67.6
4.266	941.7	294.6	164	261.2	40.2	67.1
4.313	935.1	298.8	166.4	265	40.7	66.7
4.359	928.5	303	168.7	268.7	41.3	66.2
4.406	921.9	307.3	171.1	272.5	41.8	65.7
4.453	915.4	311.5	173.5	276.2	42.4	65.3
4.5	908.8	315.7	175.8	280	42.9	64.8
4.547	902.2	320	178.2	283.7	43.5	64.3
4.594	895.6	324.2	180.5	287.5	44	63.9
4.641	889.1	328.4	182.9	291.3	44.6	63.4
4.688	882.5	332.6	185.2	295	45.2	62.9
4.734	875.9	336.9	187.6	298.8	45.7	62.5
4.781	869.3	341.1	189.9	302.5	46.3	62
4.828	862.8	345.3	192.3	306.3	46.8	61.5
4.875	856.2	349.6	194.6	310	47.4	61.1
4.922	849.6	353.8	197	313.8	47.9	60.6
4.969	843	358	199.3	317.6	48.5	60.1
5.016	836.5	362.3	201.7	321.3	49	59.7
5.063	829.9	366.5	204	325.1	49.6	59.2
5.109	823.3	370.7	206.4	328.8	50.1	58.7
5.156	816.7	375	208.7	332.6	50.7	58.3
5.203	810.1	379.2	211.1	336.3	51.3	57.8
5.25	803.6	383.4	213.4	340.1	51.8	57.3
5.297	797	387.7	215.8	343.8	52.4	56.9
5.344	790.4	391.9	218.1	347.6	52.9	56.4
5.391	783.8	396.1	220.5	351.4	53.5	55.9
5.438	777.3	400.3	222.8	355.1	54	55.5
5.484	770.7	404.6	225.2	358.9	54.6	55
5.531	764.1	408.8	227.6	362.6	55.1	54.5
5.578	757.5	413	229.9	366.4	55.7	54.1

Control voltage (V)	Primary (uA)	Grid (V)	Color development (V)	Black development (V)	Primary transfer (uA)	Secondary transfer (uA)
5.625	751	417.3	232.3	370.1	56.2	53.6
5.672	744.4	421.5	234.6	373.9	56.8	53.1
5.719	737.8	425.7	237	377.7	57.4	52.7
5.766	731.2	430	239.3	381.4	57.9	52.2
5.813	724.7	434.2	241.7	385.2	58.5	51.7
5.859	718.1	438.4	244	388.9	59	51.3
5.906	711.5	442.7	246.4	392.7	59.6	50.8
5.953	704.9	446.9	248.7	396.4	60.1	50.3
6	698.3	451.1	251.1	400.2	60.7	49.8
6.047	691.8	455.4	253.4	404	61.2	49.4
6.094	685.2	459.6	255.8	407.7	61.8	48.9
6.141	678.6	463.8	258.1	411.5	62.3	48.4
6.188	672	468.1	260.5	415.2	62.9	48
6.234	665.5	472.3	262.8	419	63.5	47.5
6.281	658.9	476.5	265.2	422.7	64	47
6.328	652.3	480.7	267.5	426.5	64.6	46.6
6.375	645.7	485	269.9	430.2	65.1	46.1
6.422	639.2	489.2	272.2	434	65.7	45.6
6.469	632.6	493.4	274.6	437.8	66.2	45.2
6.516	626	497.7	276.9	441.5	66.8	44.7
6.563	619.4	501.9	279.3	445.3	67.3	44.2
6.609	612.9	506.1	281.7	449	67.9	43.8
6.656	606.3	510.4	284	452.8	68.4	43.3
6.703	599.7	514.6	286.4	456.5	69	42.8
6.75	593.1	518.8	288.7	460.3	69.6	42.4
6.797	586.5	523.1	291.1	464.1	70.1	41.9
6.844	580	527.3	293.4	467.8	70.7	41.4
6.891	573.4	531.5	295.8	471.6	71.2	41
6.938	566.8	535.8	298.1	475.3	71.8	40.5
6.984	560.2	540	300.5	479.1	72.3	40
7.031	553.7	544.2	302.8	482.8	72.9	39.6
7.078	547.1	548.4	305.2	486.6	73.4	39.1
7.125	540.5	552.7	307.5	490.4	74	38.6
7.172	533.9	556.9	309.9	494.1	74.5	38.2

Control voltage (V)	Primary (uA)	Grid (V)	Color development (V)	Black development (V)	Primary transfer (uA)	Secondary transfer (uA)
7.219	527.4	561.1	312.2	497.9	75.1	37.7
7.266	520.8	565.4	314.6	501.6	75.7	37.2
7.313	514.2	569.6	316.9	505.4	76.2	36.8
7.359	507.6	573.8	319.3	509.1	76.8	36.3
7.406	501.1	578.1	321.6	512.9	77.3	35.8
7.453	494.5	582.3	324	516.6	77.9	35.4
7.5	487.9	586.5	326.3	520.4	78.4	34.9
7.547	481.3	590.8	328.7	524.2	79	34.4
7.594	474.7	595	331	527.9	79.5	34
7.641	468.2	599.2	333.4	531.7	80.1	33.5
7.688	461.6	603.5	335.7	535.4	80.6	33
7.734	455	607.7	338.1	539.2	81.2	32.6
7.781	448.4	611.9	340.5	542.9	81.8	32.1
7.828	441.9	616.2	342.8	546.7	82.3	31.6
7.875	435.3	620.4	345.2	550.5	82.9	31.2
7.922	428.7	624.6	347.5	554.2	83.4	30.7
7.969	422.1	628.8	349.9	558	84	30.2
8.016	415.6	633.1	352.2	561.7	84.5	29.7
8.063	409	637.3	354.6	565.5	85.1	29.3
8.109	402.4	641.5	356.9	569.2	85.6	28.8
8.156	395.8	645.8	359.3	573	86.2	28.3
8.203	389.3	650	361.6	576.8	86.7	27.9
8.25	382.7	654.2	364	580.5	87.3	27.4
8.297	376.1	658.5	366.3	584.3	87.9	26.9
8.344	369.5	662.7	368.7	588	88.4	26.5
8.391	362.9	666.9	371	591.8	89	26
8.438	356.4	671.2	373.4	595.5	89.5	25.5
8.484	349.8	675.4	375.7	599.3	90.1	25.1
8.531	343.2	679.6	378.1	603	90.6	24.6
8.578	336.6	683.9	380.4	606.8	91.2	24.1
8.625	330.1	688.1	382.8	610.6	91.7	23.7
8.672	323.5	692.3	385.1	614.3	92.3	23.2
8.719	316.9	696.5	387.5	618.1	92.8	22.7
8.766	310.3	700.8	389.8	621.8	93.4	22.3

Control voltage (V)	Primary (uA)	Grid (V)	Color development (V)	Black development (V)	Primary transfer (uA)	Secondary transfer (uA)
8.813	303.8	705	392.2	625.6	94	21.8
8.859	297.2	709.2	394.6	629.3	94.5	21.3
8.906	290.6	713.5	396.9	633.1	95.1	20.9
8.953	284	717.7	399.3	636.9	95.6	20.4
9	277.5	721.9	401.6	640.6	96.2	19.9
9.047	270.9	726.2	404.0	644.4	96.7	19.5
9.094	264.3	730.4	406.3	648.1	97.3	19
9.141	257.7	734.6	408.7	651.9	97.8	18.5
9.188	251.1	738.9	411.0	655.6	98.4	18.1
9.234	244.6	743.1	413.4	659.4	98.9	17.6
9.281	238	747.3	415.7	663.2	99.5	17.1
9.328	231.4	751.6	418.1	666.9	100.1	16.7
9.375	224.8	755.8	420.4	670.7	100.6	16.2
9.422	218.3	760	422.8	674.4	101.2	15.7
9.469	211.7	764.3	425.1	678.2	101.7	15.3
9.516	205.1	768.5	427.5	681.9	102.3	14.8
9.563	198.5	772.7	429.8	685.7	102.8	14.3
9.609	192	776.9	432.2	689.5	103.4	13.9
9.656	185.4	781.2	434.5	693.2	103.9	13.4
9.703	178.8	785.4	436.9	697	104.5	12.9
9.75	172.2	789.6	439.2	700.7	105	12.5
9.797	165.7	793.9	441.6	704.5	105.6	12
9.844	159.1	798.1	443.9	708.2	106.2	11.5
9.891	152.5	802.3	446.3	712	106.7	11.1
9.938	145.9	806.6	448.7	715.7	107.3	10.6
9.984	139.3	810.8	451.0	719.5	107.8	10.1
10.031	132.8	815	453.4	723.3	108.4	9.6
10.078	126.2	819.3	455.7	727	108.9	9.2
10.125	119.6	823.5	458.1	730.8	109.5	8.7
10.172	113	827.7	460.4	734.5	110	8.2
10.219	106.5	832	462.8	738.3	110.6	7.8
10.266	99.9	836.2	465.1	742	111.1	7.3
10.313	93.3	840.4	467.5	745.8	111.7	6.8
10.359	86.7	844.6	469.8	749.6	112.3	6.4

Control voltage (V)	Primary (uA)	Grid (V)	Color development (V)	Black development (V)	Primary transfer (uA)	Secondary transfer (uA)
10.406	80.2	848.9	472.2	753.3	112.8	5.9
10.453	73.6	853.1	474.5	757.1	113.4	5.4
10.5	67	857.3	476.9	760.8	113.9	5
10.547	60.4	861.6	479.2	764.6	114.5	4.5
10.594	53.9	865.8	481.6	768.3	115	4
10.641	47.3	870	483.9	772.1	115.6	3.6
10.688	40.7	874.3	486.3	775.9	116.1	3.1
10.734	34.1	878.5	488.6	779.6	116.7	2.6
10.781	27.5	882.7	491.0	783.4	117.2	2.2
10.828	21	887	493.3	787.1	117.8	1.7
10.875	14.4	891.2	495.7	790.9	118.4	1.2
10.922	7.8	895.4	498.0	794.6	118.9	0.8
10.969	1.2	899.7	500.4	798.4	119.5	0.3
11.016	0	903.9	Outside of warranty	802.1	120	-0.2
11.063	0	Outside of warranty	Outside of warranty	Outside of warranty	120.6	-0.6
11.109	0	Outside of warranty	Outside of warranty	Outside of warranty	Outside of warranty	-1.1
11.156	0	Outside of warranty	Outside of warranty	Outside of warranty	Outside of warranty	0
11.203	0	Outside of warranty	Outside of warranty	Outside of warranty	Outside of warranty	0
11.25	0	Outside of warranty	Outside of warranty	Outside of warranty	Outside of warranty	0
11.297	0	Outside of warranty	Outside of warranty	Outside of warranty	Outside of warranty	0
11.344	0	Outside of warranty	Outside of warranty	Outside of warranty	Outside of warranty	0
11.391	0	Outside of warranty	Outside of warranty	Outside of warranty	Outside of warranty	0
11.438	0	Outside of warranty	Outside of warranty	Outside of warranty	Outside of warranty	0
11.484	0	Outside of warranty	Outside of warranty	Outside of warranty	Outside of warranty	0
11.531	0	Outside of warranty	Outside of warranty	Outside of warranty	Outside of warranty	0

Control voltage (V)	Primary (uA)	Grid (V)	Color development (V)	Black development (V)	Primary transfer (uA)	Secondary transfer (uA)
11.578	0	Outside of warranty	Outside of warranty	Outside of warranty	Outside of warranty	0
11.625	0	Outside of warranty	Outside of warranty	Outside of warranty	Outside of warranty	0
11.672	0	Outside of warranty	Outside of warranty	Outside of warranty	Outside of warranty	0
11.719	0	Outside of warranty	Outside of warranty	Outside of warranty	Outside of warranty	0
11.766	0	Outside of warranty	Outside of warranty	Outside of warranty	Outside of warranty	0
11.813	0	Outside of warranty	Outside of warranty	Outside of warranty	Outside of warranty	0
11.859	0	Outside of warranty	Outside of warranty	Outside of warranty	Outside of warranty	0
11.906	0	Outside of warranty	Outside of warranty	Outside of warranty	Outside of warranty	0
11.953	0	Outside of warranty	Outside of warranty	Outside of warranty	Outside of warranty	0
12	0	Outside of warranty	Outside of warranty	Outside of warranty	Outside of warranty	0

12.2 Image Adjustments


12.2.1 Image Position

0003-8718

The margin and the non-image width of a printout made at 100% magnification must be as follows:

-Leading Edge Margin


4.0+1.5/-1.0mm
[double-sided copy, 2nd side:4.0+1.5/-1.0mm]

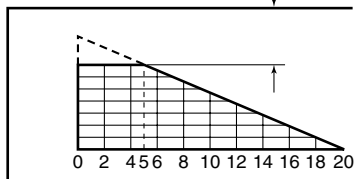

F-12-7


-Left/Right Margin

2.5+1.5mm/-1.5mm
(double-sided copy, 2nd side :2.5+2.0mm/-2.0mm)

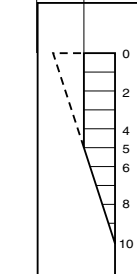


F-12-8

-Leading Edge Non-Image Width

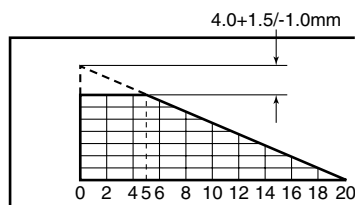

F-12-9

-Left/Right Non-Image Width

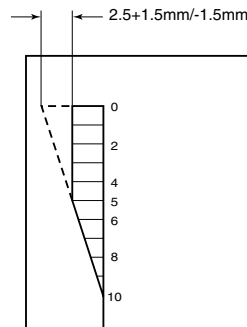

F-12-10

12.2.2 Checking the Image

Position

0003-8719

Make 10 prints using the following as the source of paper; then, check to see if the margin and the non-image width are as indicated:


- 1 cassettes
- 2 manual feed tray
- 3 left/right front deck

If outside the standards, make the following adjustments:

1. Leading Edge Image Margin Adjustment (1st side)

Execute the following service mode to adjust the registration:

COPIER > ADJUST > FEED-ADJ > REGIST

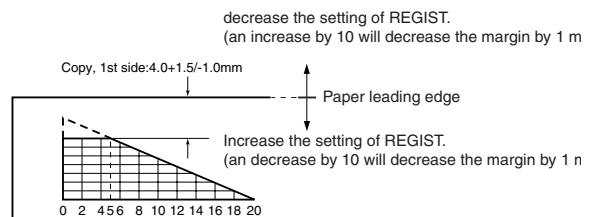

F-12-11


2. Left/Right Image Margin Adjustment

Adjust the horizontal registration mechanically.

3. Leading Edge Image Margin Adjustment (2nd side)

Execute the following service mode items to adjust the registration:

COPIER > ADJUST > FEED-ADJ > RG-REFE

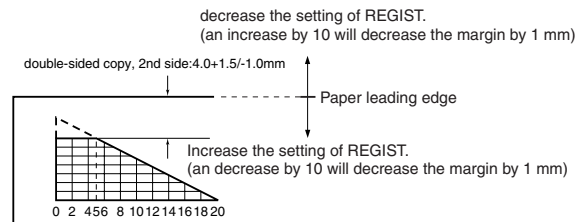


F-12-12

4. Leading Edge Non-Image Width Adjustment

Execute the following service mode item:

COPIER > ADJUST > ADJ-XY > ADJ-X

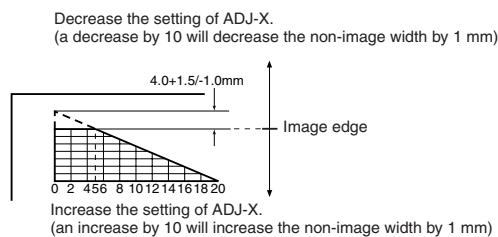


F-12-13

5. Left/Right Non-Image Width Adjustment

Execute the following service mode item:

COPIER > ADJUST > ADJ-XY > ADJ-Y

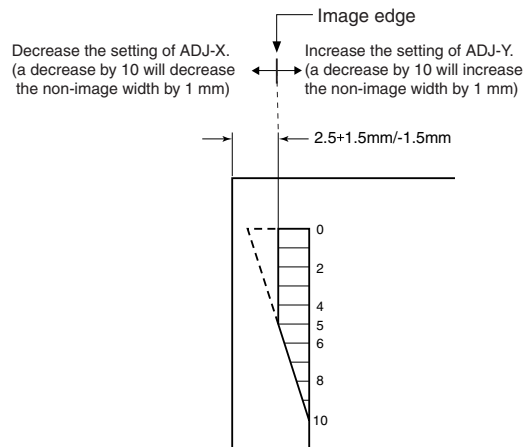

F-12-14


12.2.3 Cassette

0003-8720

Make prints using the cassettes 3 and 4 as the source of paper, and check to make sure that the left/right margin is as indicated.

-If not as indicated, make the following adjustments:

- 1) Press the cassette release button, and slide out the cassette 3 or 4 to the front.
- 2) Open the upper right cover and the lower right cover.
- 3) Insert a screwdriver through the opening in the front right stay; then, loosen the screw [1], and adjust the position of the adjusting plate [2].

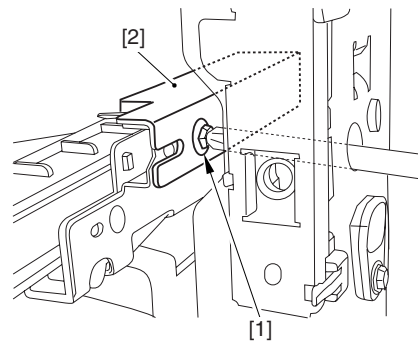

F-12-15

-move the adjusting plate toward the rear to increase the left margin.

-move the adjusting plate toward the front to decrease the left margin.


- 4) Tighten the screw.
- 5) Close the upper right cover and the lower right cover.
- 6) Put the cassette 3 or 4 back in the machine.

12.2.4 Manual Feed Tray 0003-8721

Make copies using the manual feed tray as the source of paper, and check to make sure that the left/right margin is as indicated.

-if not, make the following adjustments:

- 1) Loosen the screw [1], and move the position of the slide guide [2] to adjust the horizontal registration.

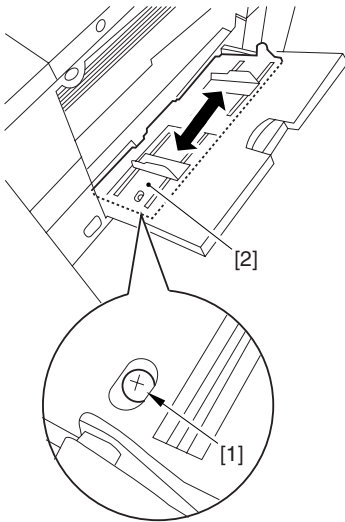

F-12-16

- 2) Check to make sure that the left/right margin of the prints is as indicated.
- 3) Tighten the screw.


12.2.5 Front Deck 0003-8722

Make prints using the right deck and left deck as the source of paper, and check to be sure that the left/right margin is as indicated:

-if not, make the following adjustments:


1. Adjusting the Left/Right Margin for the Left Deck

- 1) Push the release button, and slide out the left deck.
- 2) Using a flat-bladed screwdriver, detach the left face cover [1].

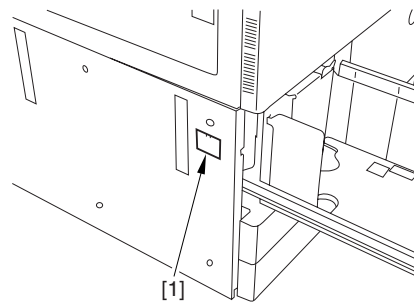


F-12-17

- 3) Loosen the 2 screws [1], and insert a screwdriver [2] through the opening of the left front stay; then, turn the adjusting screw to adjust the left/right margin.

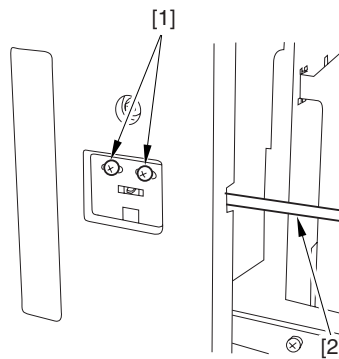

F-12-18

- 4) Check to make sure that the left/right margin of the printouts on paper from the left deck is as indicated.
- 5) As necessary, make the following adjustments:

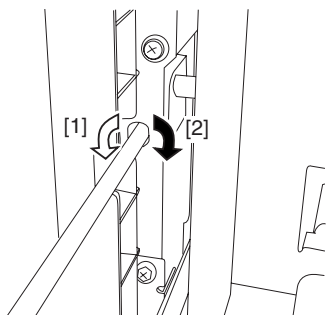


F-12-19

-turn the screwdriver counterclockwise to decrease the left margin [1].

-turn the screwdriver clockwise to increase the left margin [2].

A full turn of the screwdriver will change the left margin by 1.0 mm.

- 6) Tighten the 2 screws you loosened in step 3).
- 7) Attach the left face cover you removed in step 2) back to the machine.
- 8) Close the left deck.
- If the gap between the front cover/cassette 3 front cover and the left front cover is appreciable, perform the following:
- 9) Slide out the left deck, and loosen the 4 screws [1]; then, shift the front left cover [2].

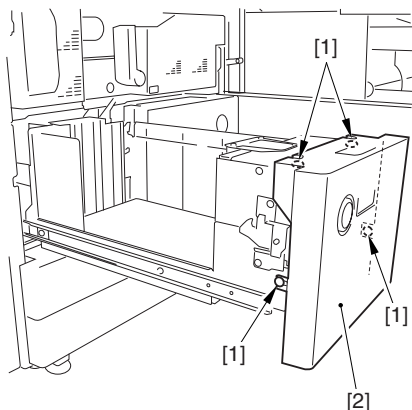

F-12-20


- 10) Close the left deck; when the gap is gone, slide out the left deck once again, and tighten the 4 screws you loosened in step 9).

-If there still is a gap, go back to step 9).

- 11) Close the left deck.

2. Right Deck Left/Right Margin Adjustment


- 1) Push the release button, and slide out the right deck.
- 2) Open the upper right color and the lower right cover
- 3) Loosen the 2 screws [1]; then, insert a screwdriver [2] through the opening in the front right stay, and turn the adjusting screw to adjust the horizontal registration.

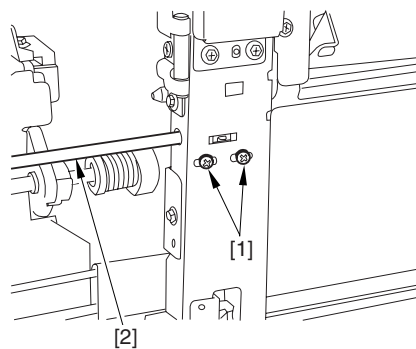

F-12-21

- 4) Check to make sure that the left/right margin of printouts made on paper from the right deck is as indicated.

- 5) As necessary, perform the following:

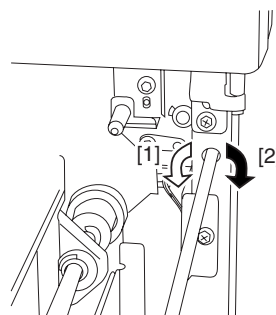


F-12-22

-turn the screwdriver counterclockwise to decrease the left margin [1].

-turn the screwdriver clockwise to increase the left margin [1].

A full turn of the screwdriver changes the left margin by 1.0 mm.

- 6) Tighten the 2 screws you loosened in step 3).
- 7) Close the upper right cover and the lower right cover
- 8) Close the right deck.
-If the gap between the front cover/cassette 3 front cover and the front right cover is appreciable, perform the following:
- 9) Slide out the right deck, and loosen the 4 screws, and shift the front right cover [2].

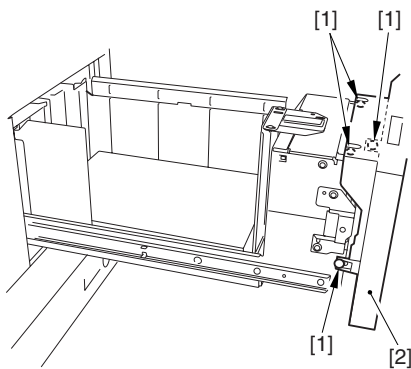

F-12-23

- 10) Close the right deck; when the gap is gone, slide out the right deck once again, and tighten the 4 screws you loosened in step 9).
- If there still is a gap, go back to step 9).
- 11) Close the right deck.

12.3 Scanning System

12.3.1 After Replacing the CCD Unit

0003-9936


If you have replaced the CCD unit, be sure to enter the settings indicated on the label attached to the CCD unit:

COPIER>ADJUST>CCD>CCDU-RG

(to enter the correction value for CCD-dependent RG color displacement in sub scanning direction)

COPIER>ADJUST>CCD>CCDU-GB

(to enter the correction value for CCD-dependent GB color displacement in sub scanning direction)

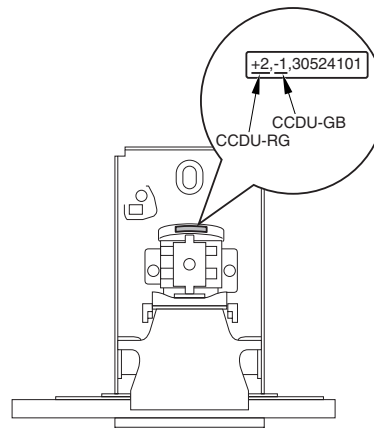

F-12-24

Moreover, be sure to update the settings indicated on the service label attached behind the reader unit front cover with the settings indicated on the label attached to the CCD unit.

12.3.2 After Replacing the Copyboard Glass 0003-8724



If you have replaced the copyboard glass, be sure to enter the bar code value indicated in the upper right of the copyboard glass using the following service mode items:

COPIER>ADJUST>CCD>W-PLT-X

COPIER>ADJUST>CCD>W-PLT-Y

COPIER>ADJUST>CCD>W-PLT-Z

(to enter the standard white plate white level data X, Y, Z)

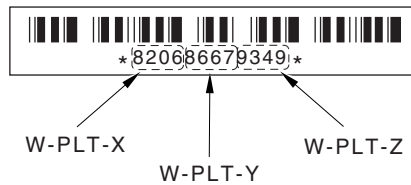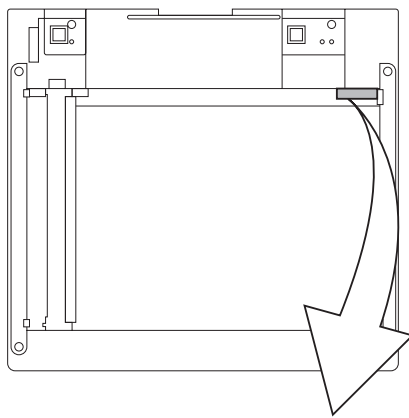

F-12-25

12.3.3 After Replacing the Reader Controller PCB or Initializing the RAM 0003-8726

⚠ -Be sure to generate the latest P-PRINT printout before replacing the reader controller PCB.

<if you are initializing the RAM of the reader controller without replacing the PCB>

-Using the SST, upload the backup data of the reader controller; then, after initializing the RAM, download the data to eliminate the need for the following adjustments:

1. Reader Unit-Related Adjustments

1) Using the SST, download the latest version of the system software (R-CON).



2) Make the following selections in service mode, and press the OK key to initialize the RAM:
COPIER>FUNCTION>CLEAR>R-CON.

Thereafter, turn off and then on the main power.

3) Enter the settings for the following items in service mode:

a. standard white plate white level data

COPIER>ADJUST>CCD>W-PLT-X,Y,Z

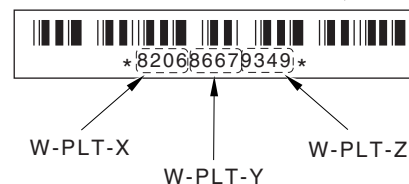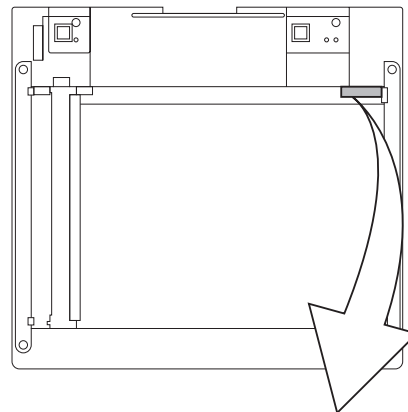

F-12-26

b. service label settings (label attached behind reader unit front cover)

b-1 image read start position adjustment (x direction; for fixed reading)

COPIER>ADJUST>ADJ-XY>ADJ-X

b-2 image read start position adjustment (Y direction; fixed reading)

COPIER>ADJUST>ADJ-XY>ADJ-Y

b-3 shading position adjustment (for fixed reading)

COPIER>ADJUST>ADJ-XY>ADJ-S

b-4 feeder mode main scanning position adjustment

COPIER>ADJUST>ADJ-XY>ADJ-Y-DF

b-5 ADF stream reading CCD read position adjustment

COPIER>ADJUST>ADJ-XY>STRD-POS

b-6 CCD unit-dependent RB/GB sub scanning direction color displacement correction value

COPIER>ADJUST>CCD>CCDU-RG/GB

b-7 CCD unit-dependent RG/GB sub scanning direction color displacement value at shipment

COPIER>ADJUST>CCD>FCCDU-RG/GB

b-8 auto gradation adjustment target value

COPIER>ADJUST>PASCAL>OFST-P-Y,M,C,K

2. ADF-Related Adjustments

⚠ The machine uses the RAM on its reader controller to hold ADF-related service data; as such, you must make the appropriate adjustments for the ADF whenever you have replaced the reader controller or initialized the RAM.

1) Enter the settings indicated on the P-PRINT printout you have previously generated for the following items:

a. original stop position adjustment

FEEDER>ADJSUT>DOCST

b. original feed speed (magnification) adjustment

FEEDER>ADUST>LA-SPEED

2) Make adjustments using the following items:

a. ADF sensor sensitivity adjustment

FEEDER>FUNCTION>SENS-INT

b. tray width adjustment

AB system: **FEEDER>FUNCTION>TRY-A4** and

FEEDER>FUNCTION>TRY-A5R

inch system: **FEEDER>FUNCTION>TRY-LTR**


and **FEEDER>FUNCTION>TRY-LTRR**

c. white level adjustment

COPIER>FUNCTION>CCD>DF-WLV1

COPIER>FUNCTION>CCD>DF-WLV2

When done, put the P-PRINT printout [1] you have previously generated in the service book, disposing of the older printout, if any.

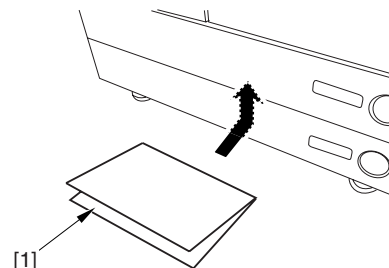

F-12-27

12.4 Laser Exposure System

12.4.1 After Replacing the

Laser Scanner

0004-2103

1) Make the following selections in service mode, and press the OK key:

COPIER>FUNCTION>DPC>DPC.

2) Turn off and then on the main power switch.

12.5 Image Formation System

12.5.1 After Replacing the

Black Developing Unit

0004-2117

Be sure to perform the following whenever you have replaced the black developing assembly:

1) Make the following selections in service mode (black toner supply):

FUNCTION>INSTALL>TONER-S.

12.5.2 Points to Note When

Mounting the Polarity


Positioning Plate

0006-0541

Go through the following steps in strict sequence when mounting the polarity positioning plate:


1) Let go of your hand so that the developing cylinder moves and stops on its own.

2) Shift the polarity positioning plate [1] counterclockwise as much as the length of the play of the D-cut notch [2]; then, read the index [4] of the marking found on the blade support base.

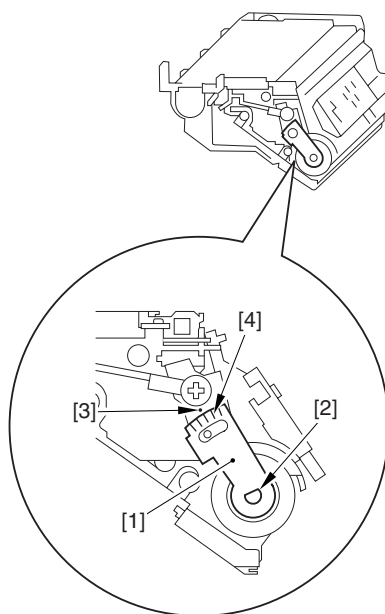

F-12-28

- 3) Turn the polarity positioning plate [1] counterclockwise by a single index (5 deg); then, tighten the screw [2] to fix it in place.

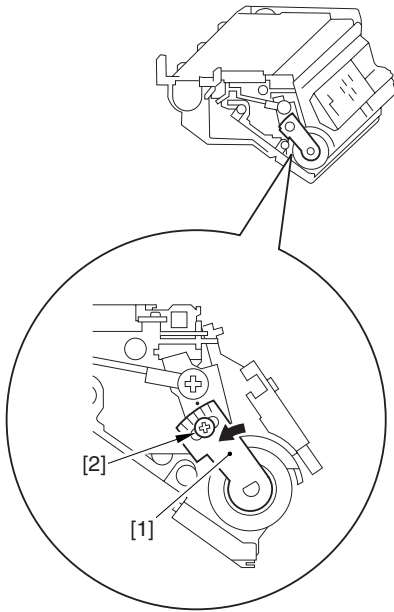


F-12-29

12.5.3 Replacing the Color Developing Unit


0004-0872

- 1) Open the packing box, and take out the new color developing unit.
- 2) Remove the screw [1], and free the 4 hooks [2]; then, remove the developing assembly lid [3].

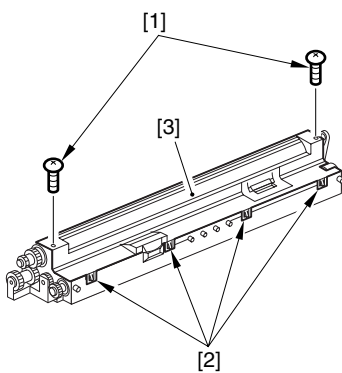


F-12-30

- 3) Even out the starter by shaking the container about 10 times.
- 4) Open the lid [2] of the starter bottle [1]; then, remove the middle lid [3], and close the lid.

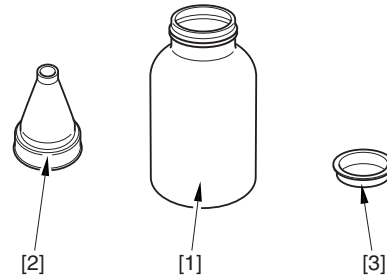


F-12-31

- 5) Supply half the starter so that it is even in the lengthwise direction around the stirring screw inside the color developing unit.

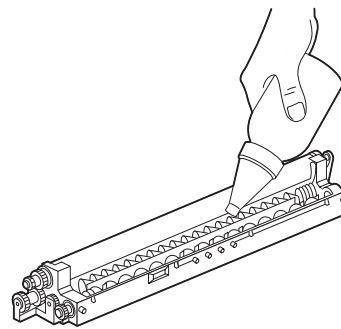


F-12-32

- 6) Turn the developing gear 5 to 6 times by hand in the direction indicated in the figure so that the starter will be even inside the unit.

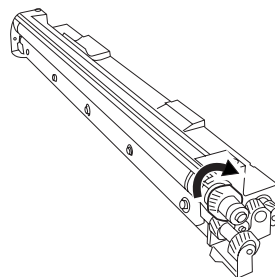


F-12-33

- 7) Supply the remaining half of the starter around the stirring screw inside the color developing unit.
- 8) Turn the developing gear 5 to 6 times once again so that the starter inside the unit is even.
- 9) Move the starter found on the inner side of the container wall off the wall.

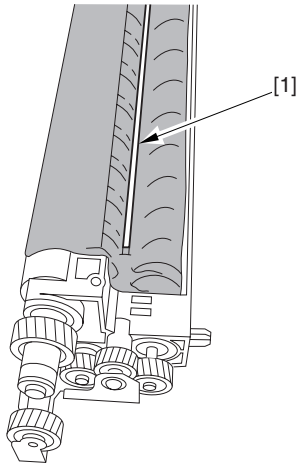


F-12-34

- 10) Fit the container lid you removed in step 2) back on in the direction indicated in the figure.

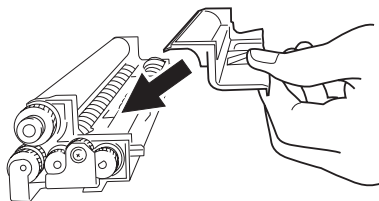


F-12-35

Thereafter, engage the 4 hooks [1]; then, fix the container lid [3] in place using the 2 screws [2] you removed in step 3).

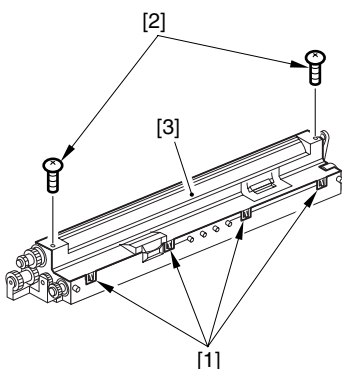

F-12-36


- ⚠** Force down the lid against the container so that the gap [1] indicated in the figure is small enough to prevent insertion of a transparency.

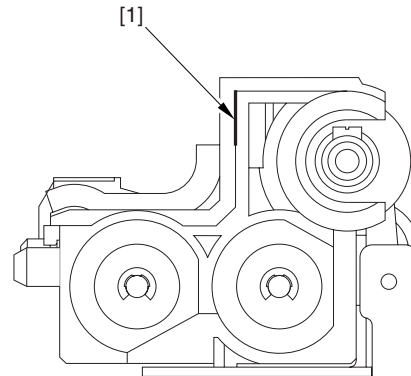

F-12-37

- ⚠** When tightening the screw, take full care so that no shavings caused by turning the screw into the lid of the developing assembly and the container will move into the container.

- 11) Cut off the appropriate tab [1]] to suit the color of the starter you have supplied. The tab A in the figure is an extra tab.

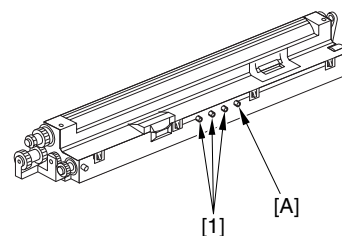

F-12-38

- 12) Fit the color developing unit by going through the steps used to detach it but in reverse.
- 13) Turn on the main power switch.
- 14) Make the following selections in service mode, and set '1', and press the OK key:
COPIER>FUNCTION>INSTALL>AINR-OFF.
- 15) Select one of the following service mode items to suit the color of the starter you have supplied; then, press the OK key.
-if for the Y developing assembly,
COPIER>FUNCTION>INSTALL>INISSET-Y

-if for the M developing assembly,
 COPIER>FUNCTION>INSTALL>INISSET-M

-if for the C developing assembly,
 COPIER>FUNCTION>INSTALL>INISSET-C

-if for the CMY developing assemblies,
 COPIER>FUNCTION>INSTALL>INISSET-3

⚠A countdown is shown on the screen while this mode item is under way. At the end, the screen will show "OK!".


This mode uses ATVC control, possibly taking a while depending on the site environment. The count on the screen, for this reason, may loop between 690 and 620.

16) Execute the following service mode item:
 COPIER>FUNCTION>MISC-P>P-PRINT. Store away the generated printout in the service book case. (If there is a previous printout, dispose of it.)

17) End service mode, and start user mode; on the Auto Gradation Correction screen, follow the instructions to execute auto gradation correction (full).


12.5.4 Replacing the Starter of the Color Developing Unit 0004-0874

- 1) Remove the color developing unit.
- 2) Remove the screw [1], and free the 4 hooks [2]; then, detach the developing unit lid [3].

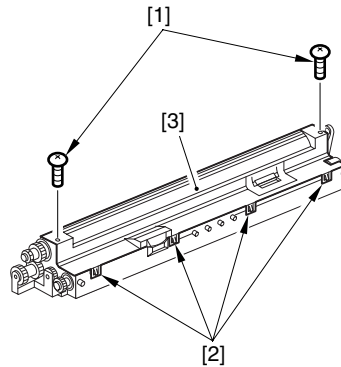


F-12-39

- 3) On A3 paper or in a vinyl bag, dispose of the contents of the unit by turning it over.

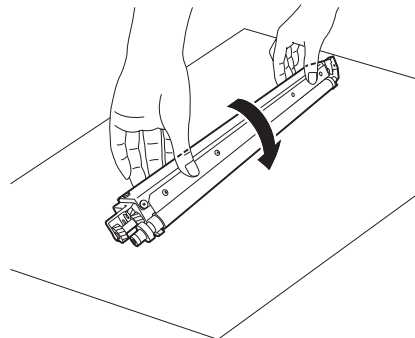


F-12-40

4) Turn back over the developing unit, and turn the developing gear in the direction in which the cylinder normally turns so that the agent will drop into the developing assembly.

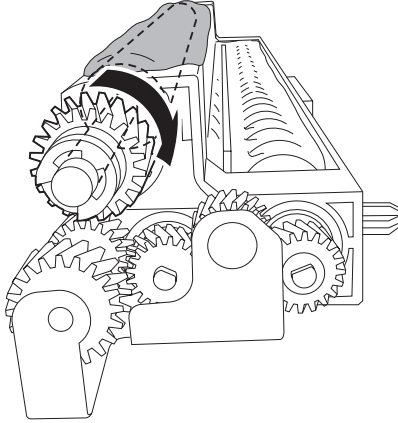


F-12-41

5) Dispose of the agent into a vinyl bag or on paper by turning over the developing unit.
 6) Repeat steps 4) and 5) about 3 times (e.g., until no agent drops into the developing assembly).
 7) Shake the container of the starter about 10 times.
 8) Detach the funnel [2] of the starter bottle [1]; then, detach the middle lid [3], and put the funnel back on [2].

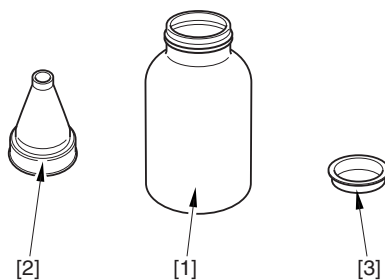


F-12-42

9) Pour the starter along the length of the stirring screw inside the color developing unit so that it is about half full.

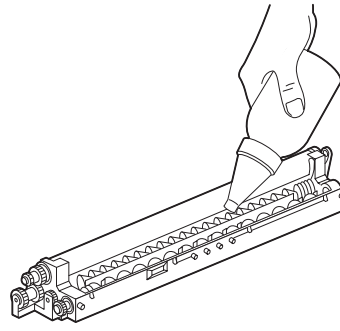


F-12-43

10) Turn the developing gear in its normal direction 5 to 6 by hand to even out the starter inside it.
 11) Pour the rest of the starter around the string screw inside the color developing unit.
 12) Turn the developing gear 5 to 6 times once again to even out the starter inside the unit.
 13) Move the starter that may remain on the inner side of the unit wall [1] into the developing assembly.

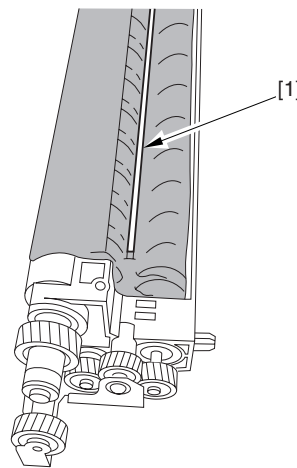


F-12-44

14) Attach the developing assembly lid you removed in step 2), making sure that the lid is oriented as shown.

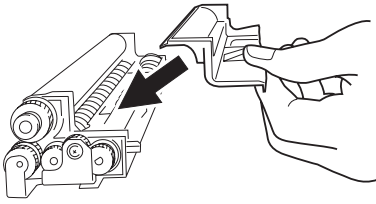


F-12-45

Engage the 4 hooks [1], and attach the developing assembly lid [3] using the 2 screws [2] you removed in step 2).

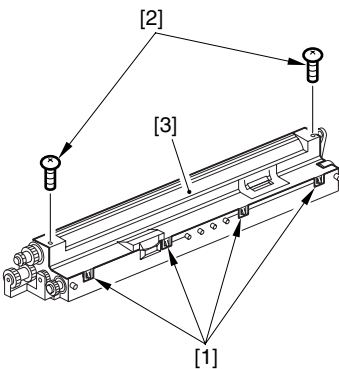

F-12-46

⚠ Be sure to force the lid against the developing container so that no transparency will enter the gap [1] shown in the figure.

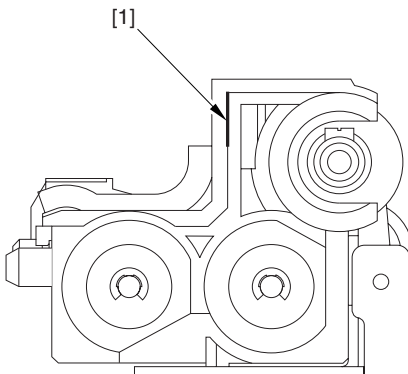

F-12-47

⚠ When tightening the screw, take care so that the shavings from the developing unit or its lid will not enter the unit.

15) Mount the color developing unit using the steps you used to remove it but in reverse.

16) Turn on the main power switch.

17) Make the following selections in service mode; then, enter '1', and press the OK key: COPIER>FUNCTION>INSTALL>AINR-OFF.

18) Select the appropriate mode item from the following to suit the color of the starter you have used; then, press the OK key

-if Y developing assembly, COPIER>FUNCTION>INSTALL>INISSET-Y.

-if M developing assembly, COPIER>FUNCTION>INSTALL>INISSET-M.

-if C developing assembly, COPIER>FUNCTION>INSTALL>INISSET-C.

⚠ A countdown is shown on the screen while this mode item is under way. At the end, the screen will show "OK!".

This mode uses ATVC control, possibly taking a while depending on the site environment. The count on the screen, for this reason, may loop between 690 and 620.

19) Execute the following in service mode: COPIER>FUNCTION>MISC-P>P-PRINT. Then, put the generated printout in the service book case. If there is any previous printout, dispose of it.

20) End service mode, and select 'auto gradation correction' in sure mode; execute auto gradation correction (full correction) by going through the instructions on the screen.

12.5.5 After Replacing the Primary Charging Assembly 0004-2166

If you have replaced the primary charging assembly, be sure to make the following adjustments:

1) Check the settings indicated on the primary charging assembly height adjustment label attached behind the front cover.

2) Make adjustments so that the charging wire height of the new charging assembly is as indicated.

3) Execute primary charging assembly cleaning in service mode:

COPIER>FUNCTION>CLEANING>WIRE-CLN.

4) Make the following selections in service mode (potential control):

COPIER>FUNCTION>DPC>DPC.

5) Turn off and then on the main power.

12.5.6 After Replacing the Primary Charging Wire 0004-9315

1) Clean the charging wire, grid wire, and shielding plates.

2) Execute the following in service mode (primary charging wire cleaning):

COPIER>FUNCTION>CLEANING>WIRE-CLN.

12.5.7 After Replacing the Pre-Transfer Charging Wire 0004-2672

Execute the following in service mode (pre-transfer charging wire cleaning):

COPIER>FUNCTION>CLEANING>WIRE-CLN.

12.5.8 After Replacing the Pre-Transfer Charging Wire 0004-9316

1) Clean the charging wire and the shielding plates.

2) Execute the following in service mode (pre-transfer charging wire cleaning):

COPIER>FUNCTION>CLEANING>WIRE-CLN.

12.5.9 After Replacing the Waste Toner Box 0004-3914

1) Set the new waste toner box in the machine.


2) Execute the following service mode, thereby resetting the waste toner counter reading to '0' (waste toner counter reset):

COPIER>COUNTER>MISC>WASTE-TURN.

12.5.10 After Replacing the ITB Cleaning Blade 0004-4219


Whenever you need to replace the ITB cleaning blade, be sure to go through the following steps to apply blade lubricant (TKN-0480) to the edge of the blade.

1) Turn the primary transfer roller locking lever [1] in the direction of the arrow to engage the intermediate transfer belt.

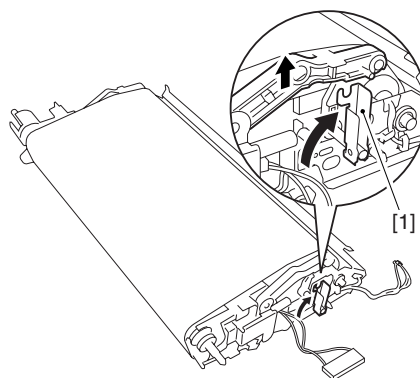


F-12-48

2) Apply an appropriate amount of blade lubricant [1] as if to sprinkle it over an area of the surface as shown.

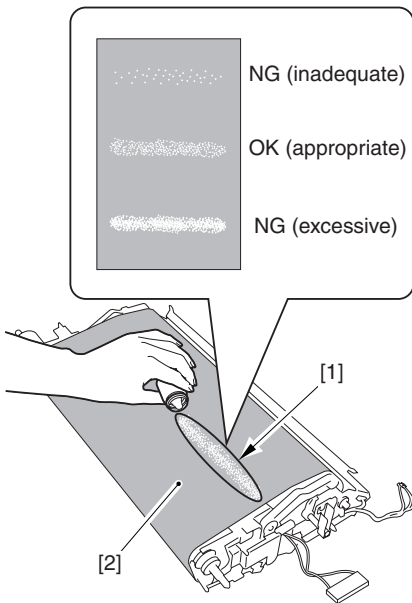

F-12-49


3) Spread the blade lubricant [1] using lint-free paper [2] as shown to cover an area of the belt about 10 cm wide.

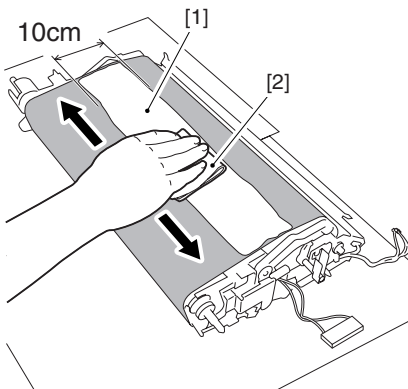

F-12-50


⚠ Take care so that the blade lubricant will not make its way behind the intermediate transfer belt. Otherwise, the presence of blade lubricant behind the intermediate transfer belt can cause the ITB home position sensor to make wrong detection.

4) Turn the drive gear [1] in the direction of the arrow so that the area of blade lubricant [2] is found as shown.

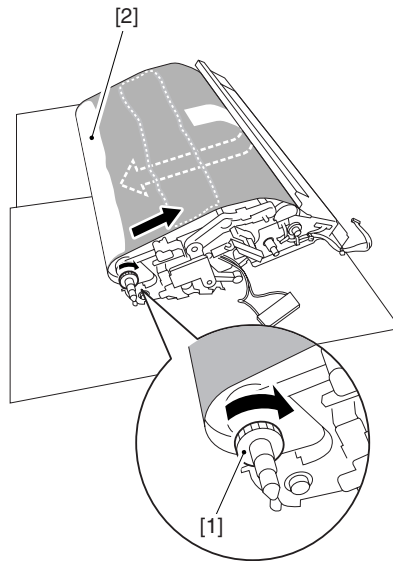


F-12-51

5) Mount the ITB cleaning unit [2] to the intermediate transfer unit [1]; then, fix it in place using 2 screws [3].

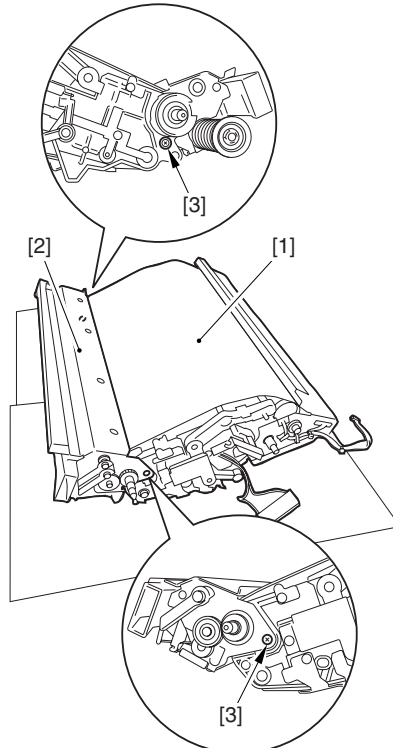

F-12-52

6) Turn the drive gear [3] until the area [2] of blade lubricant is no longer visible on the intermediate transfer belt [1].

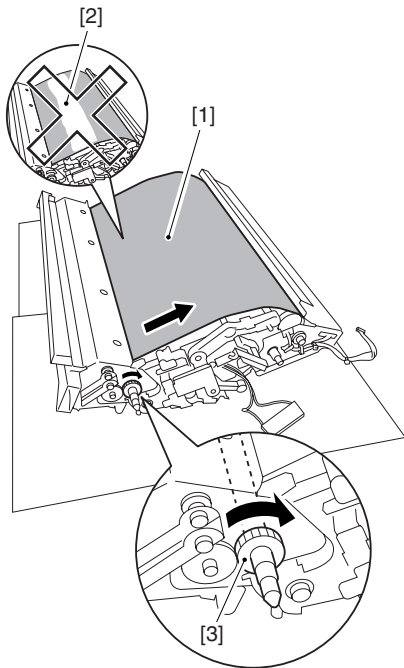

F-12-53

⚠ If you have replaced the ITB cleaner blade, be sure to perform the following:

- 1) Execute the following service mode item (black band sequence):
COPIER>FUNCTION>CLEANING>BK-BNDEX.


12.5.11 After Repacking the Photosensitive Drum Cleaning Blade

0004-4224

Be sure of the following when mounting the photosensitive drum cleaning blade:


1. Do not turn over the cleaning blade. Replace it when one side has been used.
2. Clean the area [1] of the retainer plate coming into contact with the cleaning blade and the blade plate [2] using alcohol; then, dry wipe it to remove any toner.

⚠ The fine particle of toner under the blade edge can put the blade out of alignment, allowing toner on the photosensitive drum to remain on the drum in the form of residual toner.

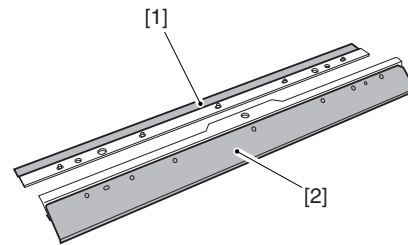


F-12-54

3. Be sure to mount the cleaning blade [1] so that the lot No. [2] faces the front and is upright.

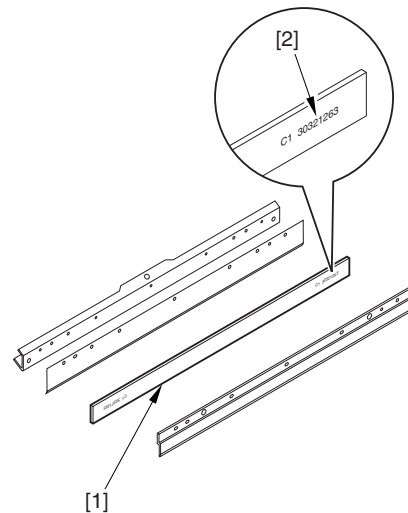


F-12-55

4. Be sure to force the cleaning blade [1] firmly against the retaining plate [2], and check to make sure that there is no gap in the area [3] indicated in the figure.

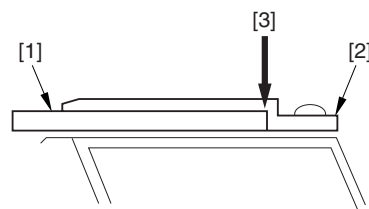


F-12-56

5. Be sure to tighten the screws [1] on the cleaning blade in the order indicated in the figure.

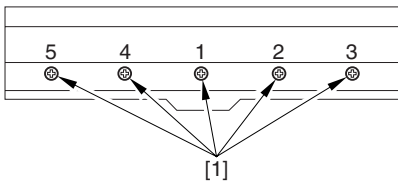

F-12-57

6. Apply blade lubricant (TKN-0480) along the edge (shaded; coming into contact with the photosensitive drum) of the cleaning blade.

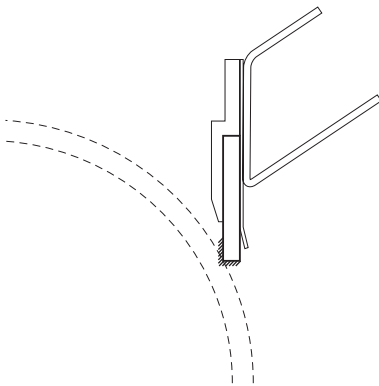

F-12-58

⚠ When you have replaced the photosensitive drum cleaning blade, be sure to execute the following service mode item.

Be sure that you execute service mode immediately after the control panel screen has appeared after turning on the main switch. :
COPIER>FUNCTION>MISC-P>ITR-ROT.

12.5.12 Replacing the Photosensitive Drum

0004-8937

If you have replaced the photosensitive drum, be sure to go through the following:

- 1) Remove the drum heater and the drum heater PCB; then, mount them to the new photosensitive drum.
- 2) Mount the photosensitive drum so that the lot number label [1] attached to its inner side is toward the front of the machine.



F-12-59

Memo:

There is a light difference in the inside diameter of the photosensitive drum between its front and its rear. (The front and rear drum flanges are designed in relation to the photosensitive drum.) If you mount the photosensitive drum in the wrong orientation, the gap between the developing cylinder and the photosensitive drum will be uneven, possibly causing uneven density.


- 3) Replace the starter (3 types) of the color developing unit.

12.5.13 Points to Note When Replacing the Drum Heater

0006-1891


Drum memory can occur if the phase of the drum is changed, as when replacing the drum heater. Take full care not to change the phase of the drum during the work by making sure of the following:

1. When detaching the drum flange, check the location of the marking [2] on the drum flange in relation to the lot No. label [1] found on the inner side of the drum. (In the case of the figure, the left of the marking is at ".." and the right is at "... " with the lot No. label facing upward.)
2. When attaching the drum flange, be sure to fix it in place with a screw where it was found in step 1.

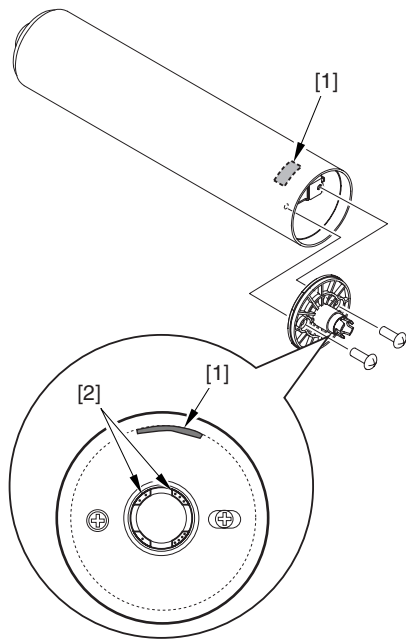


F-12-60

3. Check the drum phase label [1] attached behind the process unit cover.

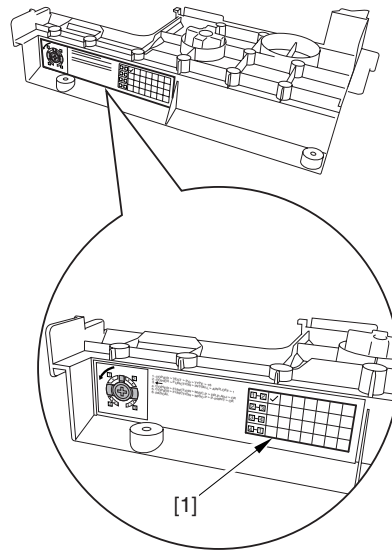


F-12-61

⚠ See the following sample. The cell with a check mark [1] indicates the present drum phase location. In this case, the marking [3] is located in relation to the protrusion [2] of the drum fixing member with its left at ".." and right at "...".

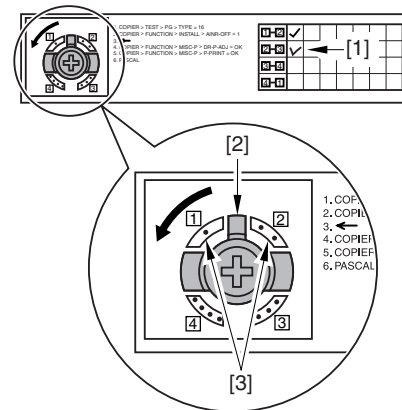

F-12-62

4. Be sure to fit the drum fixing member [1] to the drum flange [2] in correct relation to the phase location indicated on the drum phase label.

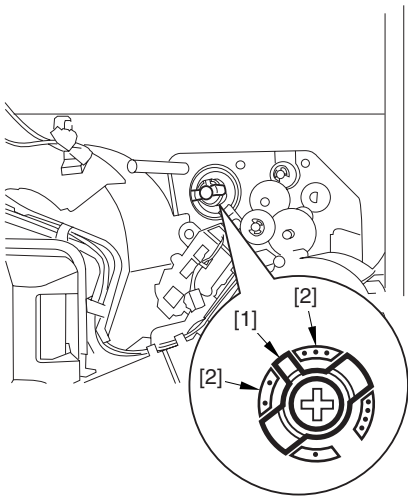

F-12-63


12.5.14 Points to Note When Replacing the Drum Heater PCB

0006-2063

Drum memory can occur if the phase of the drum is changed, as when replacing the drum heater PCB. Take full care not to change the phase of the drum during the work by making sure of the following:


1. When detaching the drum flange, check the location of the marking [2] on the drum flange in relation to the lot No. label [1] found on the inner side of the drum. (In the case of the figure, the left of the marking is at ".." and the right is at "..." with the lot No. label facing upward.)

2. When attaching the drum flange, be sure to fix it in place with a screw where it was found in step 1.

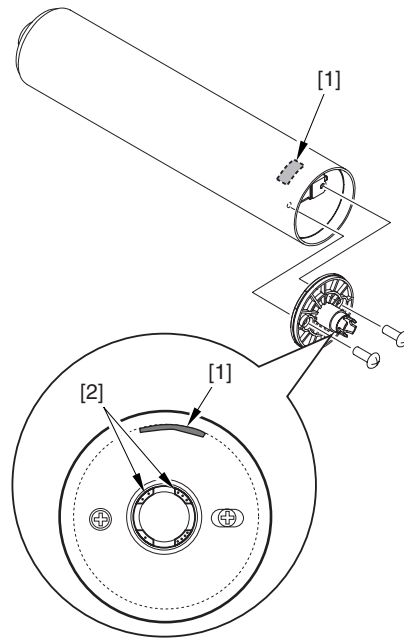


F-12-64

3. Check the drum phase label [1] attached behind the process unit cover.

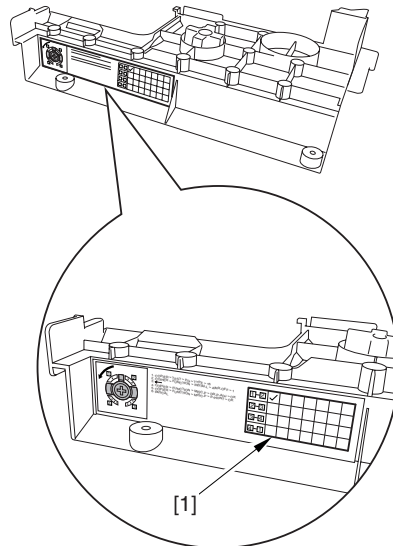


F-12-65

⚠ See the following sample. The cell with a check mark [1] indicates the present drum phase location. In this case, the marking [3] is located in relation to the protrusion [2] of the drum fixing member with its left at ".." and right at "...".

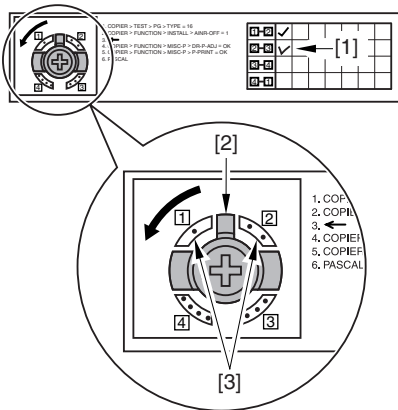

F-12-66

4. Be sure to fit the drum fixing member [1] to the drum flange [2] in correct relation to the phase location indicated on the drum phase label.

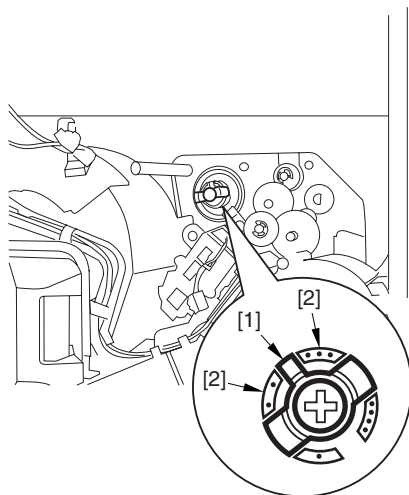

F-12-67

12.5.15 After Repacking the ITB

0004-4225

When you have replaced the ITB belt, be sure to execute the following service mode item.

Be sure that you execute service mode immediately after the control panel screen has appeared after turning on the main switch. :
COPIER>FUNCTION>MISC-P>ITR-ROT.


12.5.16 After Replacing the Primary Transfer Roller

0004-4230

As the machine is used more and more, the shavings from the primary transfer roller can start to collect on the rollers behind the belt.

When you have replaced the primary transfer roller, be sure to clean the 6 rollers [1] and the scraper [2] indicated below.


⚠ The idler roller (indicated by an arrow) is designed for mounting after fitting the intermediate transfer belt. Although the figure shows the roller, it is only for reference purposes, and the roller is not in its indicated position at this point in time.

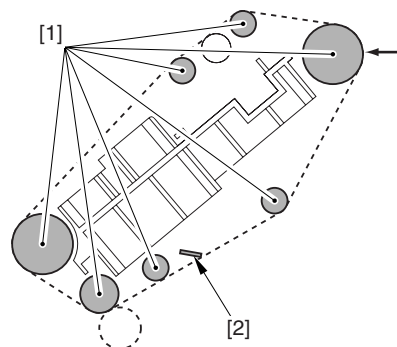

F-12-68



<Cleaning Procedure>

1) Place the ITB cleaner drive unit [1] with its cover facing down; then, stand the ITB unit [2].

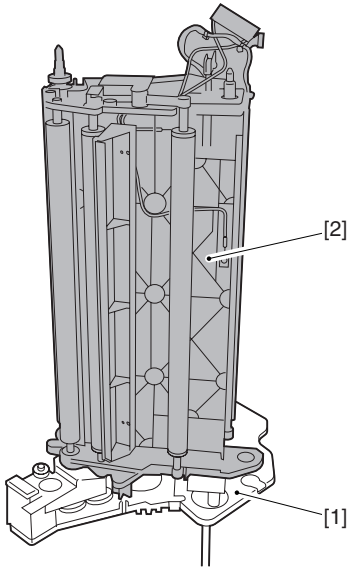


F-12-69

2) Clean the rollers [1] and the inside scraper [2] using alcohol.

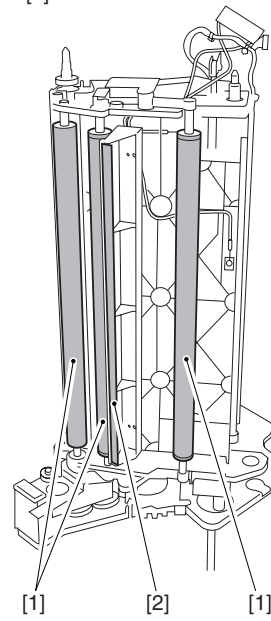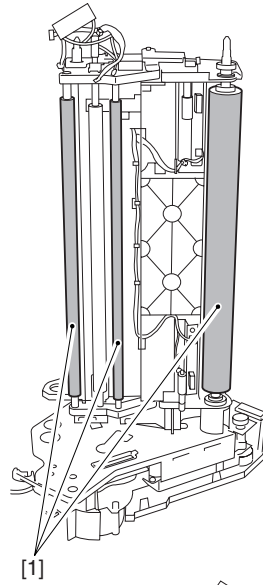

F-12-70

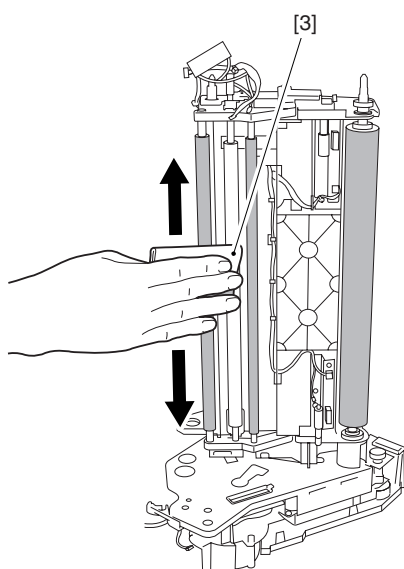

F-12-71

⚠ When you have replaced the primary transfer roller, be sure to execute the following service mode item.

Be sure that you execute service mode immediately after the control panel screen has appeared after turning on the main switch. :
COPIER>FUNCTION>MISC-P>ITR-ROT.


12.6 Fixing System

12.6.1 Points to Note When Mounting the Fixing Assembly

Assembly

0004-1594

⚠ When fitting the fixing assembly into the fixing/feeding assembly, take full care not to damage the 2 sensors [1].

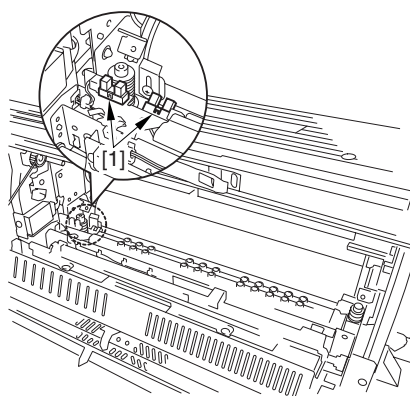

F-12-72

12.6.2 After Replacing the Fixing Roller

0004-5054

If you have replaced the fixing roller, be sure to execute the following service mode item to reset the counter reading:

COPIER>COUNTER>DRBL-1>FX-UP-RL

12.6.3 After Replacing the Fixing Web

0004-1786

1. After attaching the web, take up its slack so that there will be no slack when the web unit is fitted in the fixing assembly.

2. After replacing the web, reset the readings of the following service mode items:


COPIER>COUNTER>MISC>FIX-WEB

COPIER>COUNTER>DRBL-1>FX-WEB


12.6.4 Position of the Fixing inlet Guide 0004-2213

⚠ Do not loosen the screw on the inlet guide base [1], as you would have to adjust the position of the guide if you detached it. If you loosened it for some reason, be sure to perform the following:

- 1) Adjust the position of the inlet guide base [1] so that the height [A] at the center of the fixing inlet guide [2] is 60.7 +/-0.2 mm and the difference in height between the ribs [B] on both sides of the inlet guide is 0.5 or less.

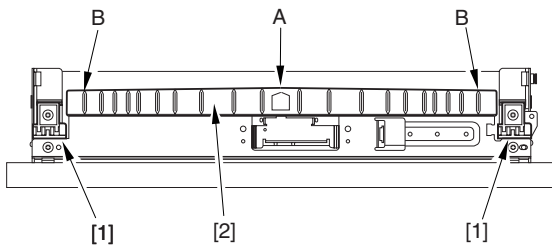


F-12-73

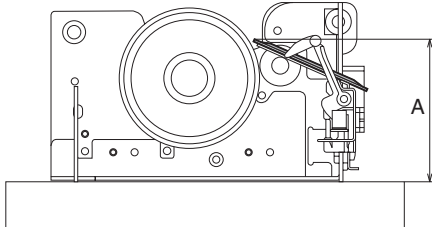

F-12-74

12.6.5 Points to Note When Mounting the Pressure Roller 0005-8345


Be sure to mount the pressure roller [1] so that the lot number [2] found on its edge is found toward the front of the machine.

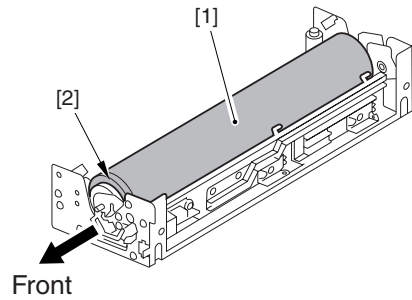

F-12-75

12.6.6 Adjusting the Nip Pressure of the Pressure Roller 0005-9076

⚠ The nip is adjusted to a high degree of accuracy before the machine is shipped out of the factory, and it cannot be adjusted in the field. Do not turn the 2 hex bolts [1] found on the delivery side of the fixing assembly. If you turned it by mistake, be sure to turn it back to its initial position.

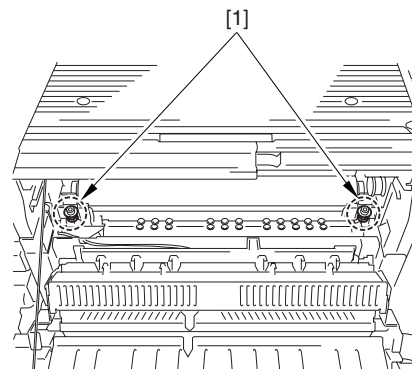


F-12-76

12.6.7 Adjusting the Position of the Feeding Web Solenoid (SL2)

0004-2616

Pull on the solenoid [1], and tighten the screw [4] while making sure that the lever [2] is in firm contact with the plate at a specific point [3].

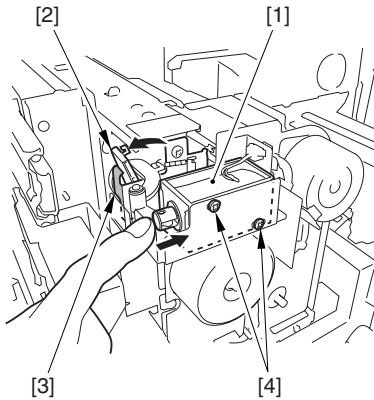


F-12-77

12.6.8 Points to Note About the Position of the Fixing Thermal Switch


0004-5056

⚠ After mounting the thermal switch, make sure of the following:

The surface of the thermal switch [1] must be parallel to the fixing roller. (Check to be sure by shining the thermal switch with a pen light.) Otherwise, re-mount it.

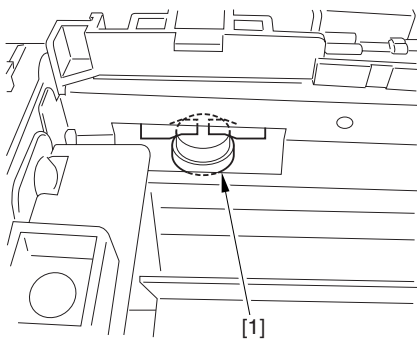

F-12-78

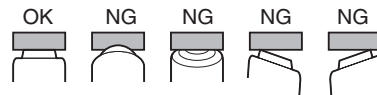

F-12-79


12.6.9 Points to Note When Mounting the Shift

Thermal Switch


0004-5058

⚠ After mounting the thermal switch (before mounting the inlet guide), check to make sure of the following:

The surface of the thermal switch [1] must be parallel to the pressure roller. (Be sure to check it by shining the thermal switch by a pen light.) if not, re-mount it.

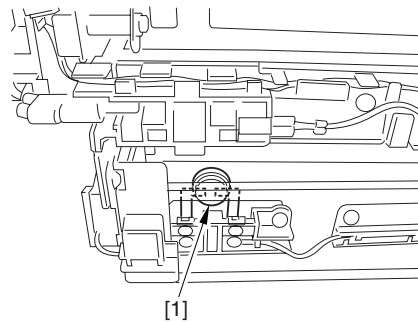

F-12-80

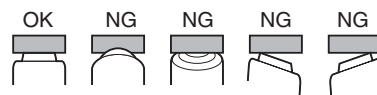


F-12-81

12.6.10 Points to Note When Mounting the Outside Heating Roller Thermal Switch

Roller Thermal Switch 0004-5060

⚠ After mounting the thermal switch, check to be sure of the following:

The surface of the thermal switch [1] must be parallel to the outside heating roller. (Be sure to shine the thermal witch switch a pen light.) If not, re-mount it.

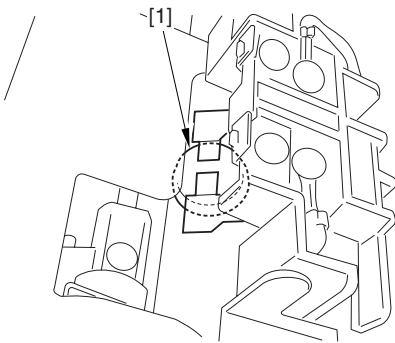

F-12-82




F-12-83

12.6.11 Points to Note When Mounting the Fixing Upper Thermistor


Thermistor 0005-5549

⚠ After mounting the thermistor, make sure of the following:

The surface of the thermal switch [1] must be parallel to the fixing roller. (Check to be sure by shining the thermal switch with a pen light.) Otherwise, re-mount it.

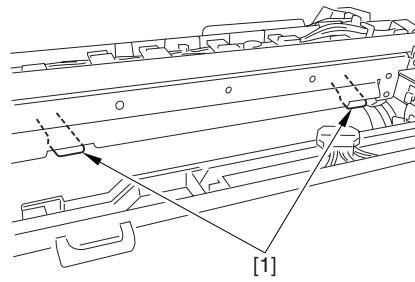

F-12-84

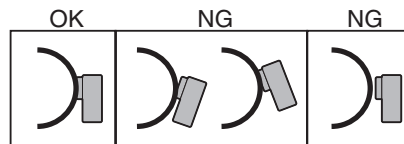


F-12-85

12.6.12 Points to Note When Mounting the Fixing Lower Thermistor


0005-5550

⚠ After mounting the thermistor, make sure of the following:

The surface of the thermal switch [1] must be parallel to the fixing roller. (Check to be sure by shining the thermal switch with a pen light.) Otherwise, re-mount it.

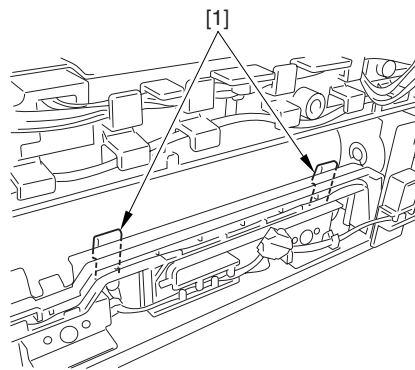

F-12-86

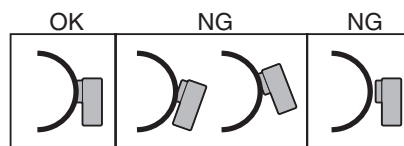


F-12-87

12.6.13 Points to Note When Mounting the External Heat Thermistor


0005-5551

⚠ After mounting the thermistor, make sure of the following:

The surface of the thermal switch [1] must be parallel to the fixing roller. (Check to be sure by shining the thermal switch with a pen light.) Otherwise, re-mount it.

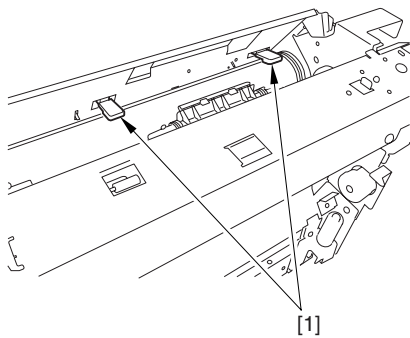

F-12-88

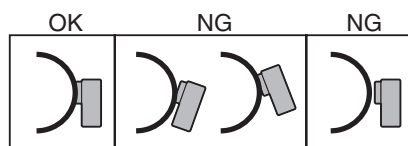

F-12-89

12.7 Electrical Components

12.7.1 When Replacing the Reader Controller PCB

0003-9937

⚠ -Be sure to generate the latest P-PRINT printout before replacing the reader controller PCB.

<if you are initializing the RAM of the reader controller without replacing the PCB>

-Using the SST, upload the backup data of the reader controller; then, after initializing the RAM, download the data to eliminate the need for the following adjustments:

1. Reader Unit-Related Adjustments

1) Using the SST, download the latest version of the system software (R-CON).



2) Make the following selections in service mode, and press the OK key to initialize the RAM: COPIER>FUNCTION>CLEAR>R-CON.

Thereafter, turn off and then on the main power.

3) Enter the settings for the following items in service mode:

a. standard white plate white level data

COPIER>ADJUST>CCD>W-PLT-X,Y,Z

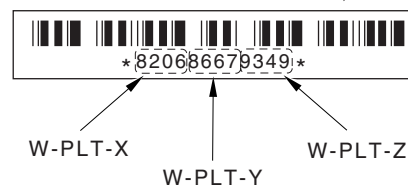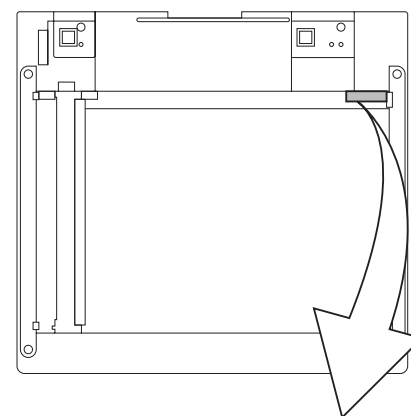

F-12-90

b. service label settings (label attached behind reader unit front cover)

b-1 image read start position adjustment (x direction; for fixed reading)

COPIER>ADJUST>ADJ-XY>ADJ-X

b-2 image read start position adjustment (Y direction; fixed reading)

COPIER>ADJUST>ADJ-XY>ADJ-Y

b-3 shading position adjustment (for fixed reading)

COPIER>ADJUST>ADJ-XY>ADJ-S

b-4 feeder mode main scanning position adjustment

COPIER>ADJUST>ADJ-XY>ADJ-Y-DF

b-5 ADF stream reading CCD read position adjustment

COPIER>ADJUST>ADJ-XY>STRD-POS

b-6 CCD unit-dependent RB/GB sub scanning direction color displacement correction value

COPIER>ADJUST>CCD>CCDU-RG/GB

b-7 CCD unit-dependent RG/GB sub scanning direction color displacement value at shipment

COPIER>ADJUST>CCD>FCCDU-RG/GB

b-8 auto gradation adjustment target value

COPIER>ADJUST>PASCAL>OFST-P-Y,M,C,K

2. ADF-Related Adjustments

⚠ The machine uses the RAM on its reader controller to hold ADF-related service data; as such, you must make the appropriate adjustments for the ADF whenever you have replaced the reader controller or initialized the RAM.

1) Enter the settings indicated on the P-PRINT printout you have previously generated for the following items:

a. original stop position adjustment

FEEDER>ADJUST>DOCST

b. original feed speed (magnification) adjustment

FEEDER>ADJUST>LA-SPEED

2) Make adjustments using the following items:

a. ADF sensor sensitivity adjustment

FEEDER>FUNCTION>SENS-INT

b. tray width adjustment

AB system: **FEEDER>FUNCTION>TRY-A4 and**

FEEDER>FUNCTION>TRY-A5R

inch system: **FEEDER>FUNCTION>TRY-LTR**


and FEEDER>FUNCTION>TRY-LTRR

c. white level adjustment

COPIER>FUNCTION>CCD>DF-WLVL1

COPIER>FUNCTION>CCD>DF-WLVL2

When done, put the P-PRINT printout [1] you have previously generated in the service book, disposing of the older printout, if any.

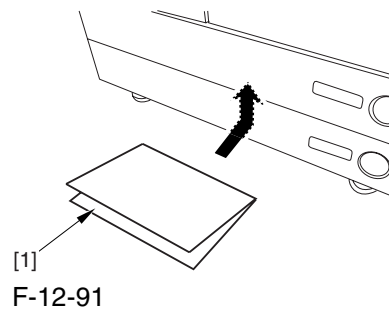

12.7.2 After Replacing the

DC Controller PCB

0004-1683

⚠ Be sure to generate the latest P-PRINT printout before replacing the DC controller PCB.

COPIER>FUNCTION>MISC-P>P-PRINT

1) Using the SST, download the latest version of the system software.

2) Replace the DC controller PCB, and initialize the RAM of the DC controller using the following service mode item:

COPIER>FUNCTION>CLEAR>DC-CON

3) Check to see that the settings of the following service mode items are the same as the settings indicated in the P-PRINT printout; if not, enter the settings indicated on the printout

-COPIER>ADJUST>LASER>(all items)

-COPIER>ADJUST>IMG-REG>(all items)

- COPIER>ADJUST>DEVELOP>(all items)
- COPIER>ADJUST>DENS>(all items)
- COPIER>ADJUST>V-CONT>(all items)
- COPIER>ADJUST>HV-PRI>(all items)
- COPIER>ADJUST>HV-TR>(all items)
- COPIER>ADJUST>FEED-ADJ>(all items)
- COPIER>ADJUST>CST-ADJ>(all items)
- COPIER>ADJUST>MISC>(ATM WT-ER-LV
WT-FL-LM)
- COPIER>ADJUST>EXP-LED>(all items)

4) Enter the counter backup settings indicated on the P-PRINT printout in service mode:

- COPIER>COUNTER>MISC>FIX-WEB
- COPIER>COUNTER>MISC>PRI-CLN
- COPIER>COUNTER>MISC>FX-UP-RL
- COPIER>COUNTER>MISC>DV-UNT-K
- COPIER>COUNTER>MISC>DV-CAR-Y
- COPIER>COUNTER>MISC>DV-CAR-M
- COPIER>COUNTER>MISC>DV-CAR-C
- COPIER>COUNTER>DRBL-1>FX-UP-RL

5) Execute the following service mode item (compulsive initial rotation sequence):
COPIER>FUNCTION>MISC-P>INTR-EX.

6) Execute auto gradation correction in user mode (adjust/cleaning>auto gradation correction>full correction).

7) You will have to dispose of the waste toner in the waste toner bottle.

⚠ After replacing the DC controller PCB or initialized the RAM, you have to dispose waste toner, because you cannot enter a setting for the following in service mode:
COUNTER>MISC>WASTE-TNR.


12.7.3 Points to Note When Mounting the DC Controller PCB/ DC Controller Box

0005-7222

⚠ During assembly work, be sure to connect the harness to the DC controller PCB as follows:

-Connect the connector of the harness [1] first, and then the other harness [2].

-Fix the harnesses [1] [2] in place using the wire saddle [3] so that the harness [1] is on the left side of the harness [2].

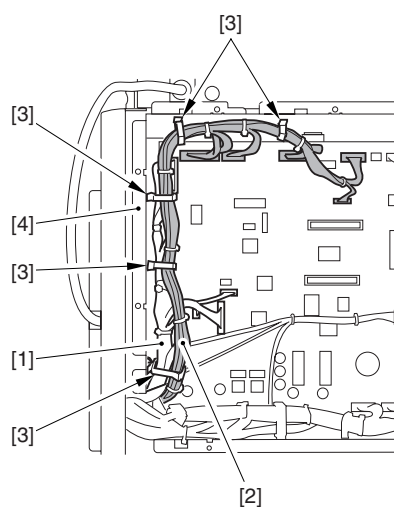

F-12-92

Supplementary Information:


If the harness [1] is away from the side plate [4] of the DC controller box, wrong detection (E070-0102) of the ITB home position tends to occur because of noise.

12.7.4 After Replacing the Main


Controller PCB (main) 0004-1717

After mounting the main controller PCB (main), be sure to mount the PCBs you may have removed before replacing the main controller PCB:

- 1 boot ROM
- 2 image memory (SDRAM)
- 3 expansion bus PCB
- 4 main controller PCB (sub)
- 5 UFR board (optional)
- 6 Ethernet board

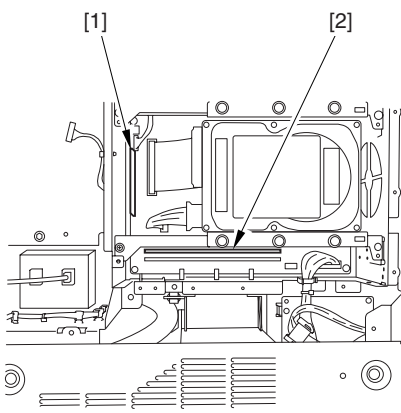

F-12-93

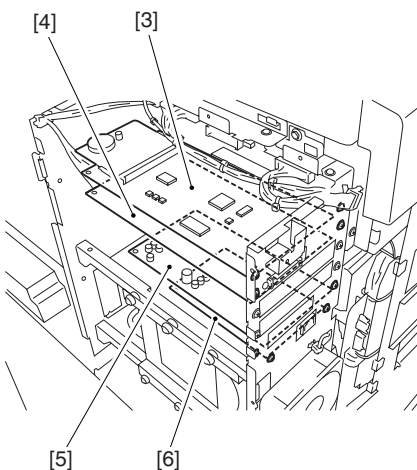

F-12-94

12.7.5 After Repacking the

SRAM Board 0004-1721

⚠ Be sure to inform the user that replacing the SRAM board will lead to the loss of all image data held in Boxes, and obtain his/her consent before starting the work.

-if you are replacing the SRAM board, be sure to use a new one. The use of a used SRAM board (used in a different printer) will likely cause malfunction.

- 1) Replace the SRAM board, and turn on the main power (so that the machine will run an auto initialization session).
- 2) When the control panel indicates the message "Turn Off and Then On the Power Switch on the Left" on its control panel, turn off and then on the power.
- 3) Make the following selections in service mode, and press the OK key to initialize the RAM: COPIER>FUNCTION>CLEAR>MN-CON.

12.7.6 After Replacing the

HDD 0004-1730

A. If NetSpot Accountant (NSA) Is Not Used

- 1) Format the HDD.

Start in safe mode (i.e., turn on the main power while holding down the 2 and 8 keys).

Using the SST's hard disk formatting function, format all partitions. (For instructions, see the chapter on upgrading.)

- 2) Download the system software.

Using the SST, download the system, language, and RUI files. (It may take about 5 min for the machine to start up after a download session.)

B. If NetSpot Account (NSA) Is Used in Combination with a Card Reader

The HDD retains the card ID used by NSA. If you have replaced the HDD, you will have to download the card data from NSA once again for NSA to operate. As shown under A. "If NetSpot Accountant Is Not Used," format the HDD and download the system

software, and then perform extra steps:

1) Format the HDD.

Start up in safe mode (i.e., by turning on the main power while holding down the 2 and 8 keys).

Using the SST's hard disk formatting function, format all partitions. (For instructions, see the chapter on upgrading.)

2) Download the system software.

Using the SST, download the system, language, and RUI files. (It may take about 5 min for the machine to start up after a download session.)

3) Start service mode.

Make the following selections in service mode: COPIER>FUNCTION>INSTALL>CARD.

4) Enter the appropriate card No.

Enter the lowest of the numbers of the cards used for group control, and press the OK key (e.g., enter '1' if cards run from No. 1 to No. 1000).

5) Turn off and then on the main power.

6) Check the count control function.

In sure mode, make the following selections, and check to see IDs between ID00000001 and ID00001000 have been created.

7) Set the address.

Set 'IP address', 'gateway address', and 'sub net mask' in sure mode: system control setup>network setup>TCP/IP setup>IP address.

8) Enter the appropriate number in sure mode: system administrator info setup>system control group ID>system control ID No.

9) Turn off and then on the main power.

⚠ If you fail to set 'system control group ID' and 'system control ID No.', you will not be able to set 'register card to device' as part of the NetSpot Account setup work.

10) Download the card ID.

While the machine is in a standby state, download the card ID from NSA.

11) Check the count control function.

In sure mode, make the following selections, and check to see that only the ID data is indicated on the screen: system control setup>group ID control>count control.

12) Check to see that the machine operates normally.

Make copies using a sure card that has been registered using NSA; then, check to make sure that the use of the card is properly indicated.

12.7.7 When Replacing the

HV2 PCB

0004-2092

1) Enter the settings indicated on the PCB label [1] attached to the new HV2 for the following 6 service mode items:

COPIER>ADJUSUT>HV-TR>1TR-GAIN


COPIER>ADJUSUT>HV-TR>1TR-OFST

COPIER>ADJUSUT>HV-TR>1TR-CGAI

COPIER>ADJUSUT>HV-TR>1TR-COFS

COPIER>ADJUSUT>HV-TR>1TR-GAI2


COPIER>ADJUSUT>HV-TR>1TR-OFS2

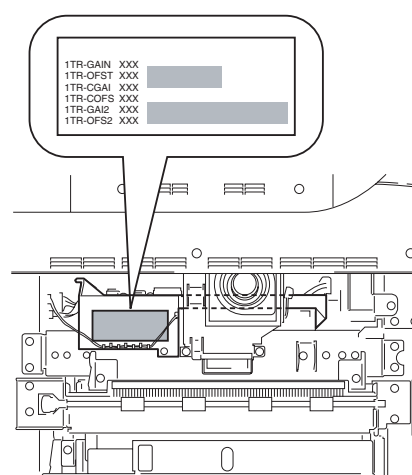

F-12-95

2) Generate a P-PRINT printout in service mode.

3) Put the generated P-PRINT printout [1] in the service book case, replacing any existing printout.

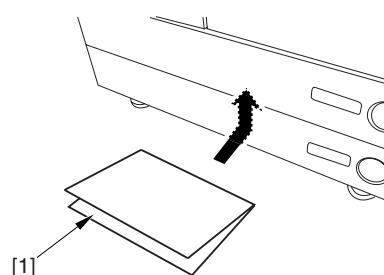

F-12-96

12.7.8 When Replacing the ATR Sensor/Patch Image

Read Sensor

0004-4764

If you have replaced the ATR sensor/patch image read sensor, be sure to execute the following:

- 1) Replace the contents of the color developing unit with starter (3 types).

12.8 Pickup/Feeding System


12.8.1 Adjusting the Horizontal Registration After Replacing the Pickup Cassette

0003-9954

Make prints using the cassettes 3 and 4 as the source of paper, and check to make sure that the left/right margin is as indicated.

-If not as indicated, make the following adjustments:

- 1) Press the cassette release button, and slide out the cassette 3 or 4 to the front.
- 2) Open the upper right cover and the lower right cover.
- 3) Insert a screwdriver through the opening in the front right stay; then, loosen the screw [1], and adjust the position of the adjusting plate [2].

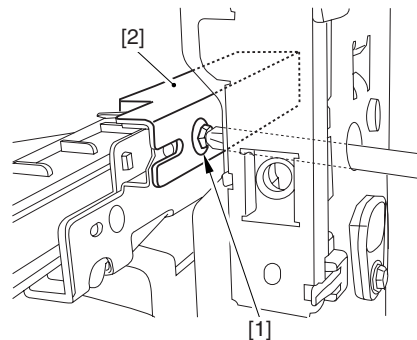

F-12-97

-move the adjusting plate toward the rear to increase the left margin.

-move the adjusting plate toward the front to decrease the left margin.

- 4) Tighten the screw.
- 5) Close the upper right cover and the lower right cover.
- 6) Put the cassette 3 or 4 back in the machine.


12.8.2 Adjusting the Manual Feed Pickup Horizontal Registration

0003-9955

Make copies using the manual feed tray as the source of paper, and check to make sure that the left/right margin is as indicated.

-if not, make the following adjustments:

1) Loosen the screw [1], and move the position of the slide guide [2] to adjust the horizontal registration.

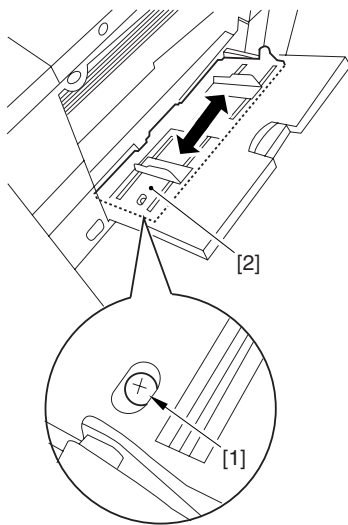

F-12-98

2) Check to make sure that the left/right margin of the prints is as indicated.
3) Tighten the screw.

12.8.3 Adjusting the Front Deck Pickup Horizontal Registration


0003-9957

Make prints using the right deck and left deck as the source of paper, and check to be sure that the left/right margin is as indicated:

-if not, make the following adjustments:


1. Adjusting the Left/Right Margin for the Left Deck

1) Push the release button, and slide out the left deck.
2) Using a flat-bladed screwdriver, detach the left face cover [1].

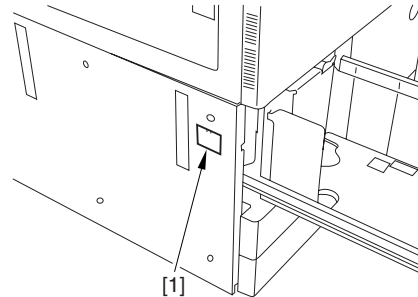


F-12-99

3) Loosen the 2 screws [1], and insert a screwdriver [2] through the opening of the left front stay; then, turn the adjusting screw to adjust the left/right margin.

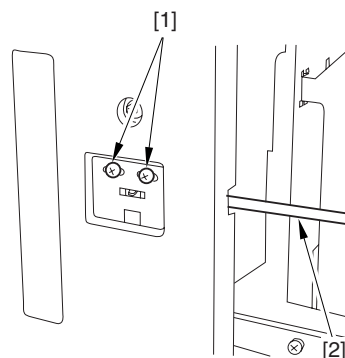

F-12-100


- 4) Check to make sure that the left/right margin of the printouts on paper from the left deck is as indicated.
- 5) As necessary, make the following adjustments:

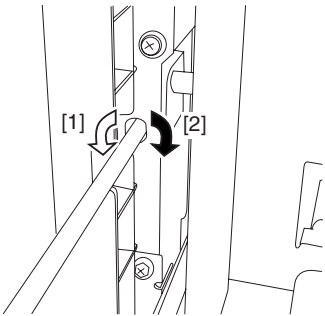

F-12-101

- turn the screwdriver counterclockwise to decrease the left margin [1].
 - turn the screwdriver clockwise to increase the left margin [2].
- A full turn of the screwdriver will change the left margin by 1.0 mm.

- 6) Tighten the 2 screws you loosened in step 3).
- 7) Attach the left face cover you removed in step 2) back to the machine.
- 8) Close the left deck.
- If the gap between the front cover/cassette 3 front cover and the left front cover is appreciable, perform the following:
- 9) Slide out the left deck, and loosen the 4 screws [1]; then, shift the front left cover [2].

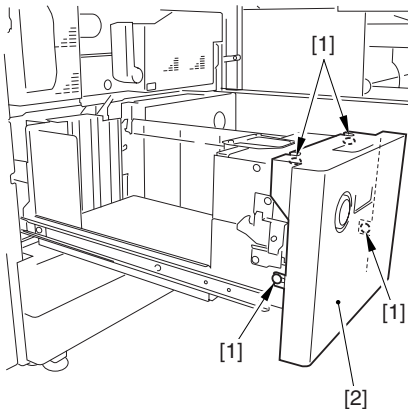


F-12-102

- 10) Close the left deck; when the gap is gone, slide out the left deck once again, and tighten the 4 screws you loosened in step 9).
- If there still is a gap, go back to step 9).
- 11) Close the left deck.


2. Right Deck Left/Right Margin Adjustment

- 1) Push the release button, and slide out the right deck.
- 2) Open the upper right color and the lower right cover
- 3) Loosen the 2 screws [1]; then, insert a screwdriver [2] through the opening in the front right stay, and turn the adjusting screw to adjust the horizontal registration.

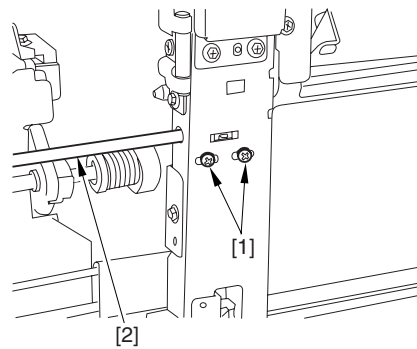

F-12-103


- 4) Check to make sure that the left/right margin of printouts made on paper from the right deck is as indicated.
- 5) As necessary, perform the following:

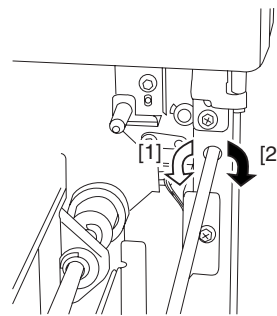

F-12-104

- turn the screwdriver counterclockwise to decrease the left margin [1].
 - turn the screwdriver clockwise to increase the left margin [1].
- A full turn of the screwdriver changes the left margin by 1.0 mm.

- 6) Tighten the 2 screws you loosened in step 3).
- 7) Close the upper right cover and the lower right cover
- 8) Close the right deck.
-If the gap between the front cover/cassette 3 front cover and the front right cover is appreciable, perform the following:
- 9) Slide out the right deck, and loosen the 4 screws, and shift the front right cover [2].

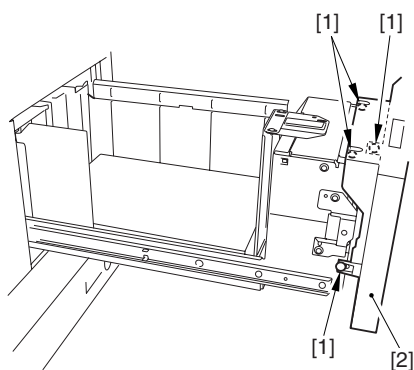

F-12-105


- 10) Close the right deck; when the gap is gone, slide out the right deck once again, and tighten the 4 screws you loosened in step 9).
- If there still is a gap, go back to step 9).
- 11) Close the right deck.

12.8.4 Registering the Paper

Width Basic Value

0003-9967

- 1) Turn on the main power switch.
- 2) Register the A4R paper width basic value as follows:
 - 2-1) Set the manual feed side guide [1] to A4R.

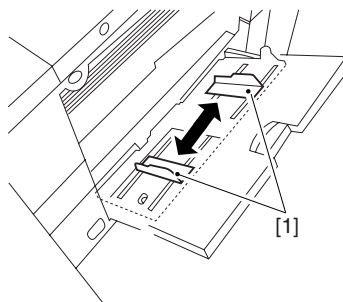

F-12-106

- 2-2) Start service mode, and make the following selections to register manual feed A4R width:
CPOIER>FUNCTION>CST>MF-A4R
- 2-3) Press the OK key to store the new A4R width.
- 2-4) Record the A4R basic setting indicated on the control panel on the service label.
- 3) Register the A4 paper width basic value as follows:
 - 3-1) Set the manual feed side guide to A4.
 - 3-2) Make the following selections to register manual feed A4 width:
CPOIER>FUNCTION>CST>MF-A4
 - 3-3) Press the OK key to register the A4 width.
 - 3-4) Record the A4 basic value indicated on the control panel on the service label.
- 4) Register the A6R paper with basic value as follows:
 - 4-1) Set the manual feed side guide to A6R.
 - 4-2) Make the following selections to register the A6R width:
CPOIER>FUNCTION>CST>MF-A6R
 - 4-3) Press the OK key to register the new A6R width.
 - 4-4) Record the A6R basic value indicated on the control panel on the service label.
- 5) Press the Reset key twice to end service mode.
- 6) Turn off the control panel power switch.
- 7) Turn off the main power switch.

Chapter 13 Correcting Faulty Images

Contents

13.1 Making Initial Checks	13-1
13.1.1 Checking the Site Environment.....	13-1
13.1.2 Checking the Paper.....	13-1
13.1.3 Checking the Placement of Paper.....	13-1
13.1.4 Checking the Durables	13-1
13.1.5 Checking the Periodically Replaced Parts.....	13-1
13.1.6 Checking the Units and Functional Blocks	13-1
13.1.7 Others	13-3
13.2 Test Print	13-4
13.2.1 Overview	13-4
13.2.2 Test Print TYPE	13-4
13.2.3 Selecting Test Print TYPE	13-4
13.2.4 16-Gradation (TYPE=4).....	13-5
13.2.5 Full Page Halftone (TYPE=5).....	13-6
13.2.6 Grid (TYPE=6).....	13-7
13.2.7 MCYBk Horizontal Stripes (TYPE=10).....	13-8
13.2.8 64-Gradation (TYPE=12).....	13-9
13.2.9 Full Color 16-Gradation (TYPE=14)	13-9
13.3 Troubleshooting.....	13-10
13.3.1 Symptoms	13-11
13.3.1.1 Symptoms	13-11
13.3.1.2 Maintenance Recommendations for Components Around the Photosensitive Drum/Intermediate Transfer Unit in the Event of an Image Fault.....	13-13
13.3.2 Image Faults	13-16
13.3.2.1 Solid Image.....	13-16
13.3.2.1.1 Solid black / Poor contact of connectors around process unit	13-16
13.3.2.2 Light Image / Weak Density.....	13-20
13.3.2.2.1 Overall light image on black area, uneven image	13-20
13.3.2.2.2 Low density / Poor contact of connectors around process unit	13-21
13.3.2.3 Uneven Density	13-25
13.3.2.3.1 Uneven Density Along the Leading Edge in a Solid Color Image	13-25
13.3.2.3.2 Uneven Density in the Form of a Feedscrew in Color Images	13-27
13.3.2.3.3 Uneven Density in Halftone Images	13-29
13.3.2.3.4 Colored Dots	13-30
13.3.2.3.5 Uneven Density On Rough-Textured Paper	13-31
13.3.2.3.6 Coarse Image in a Solid C Original	13-32
13.3.2.3.7 Transfer Faults on Mono-Color Prints	13-34
13.3.2.4 Out of Focus	13-35
13.3.2.4.1 Color Displacement in Sub Scanning Direction	13-35
13.3.2.4.2 Smear of Colored Characters/Lines	13-37
13.3.2.5 Partially Blank/Streaked.....	13-39
13.3.2.5.1 Vertical Lies in Halftone Images	13-39
13.3.2.5.2 Image Fault Occurring at Specific Intervals	13-40
13.3.2.5.3 Missing Color	13-41
13.3.2.5.4 White Spots at 51mm Intervals	13-45
13.3.2.5.5 Vertical Lines Caused by an ITB Cleaning Fault	13-46
13.3.2.6 Smudged/Streaked.....	13-48
13.3.2.6.1 Vertical Lines	13-48
13.3.2.6.2 Soiling of the Left/Right Margin on Double-Sided Prints (1st side)	13-50

13.3.2.6.3 Stray Toner	13-51
13.3.2.6.4 Oil Lines in Vertical Direction	13-52
13.3.2.6.5 Soiling as Dots at Drum Intervals	13-52
13.3.2.6.6 Horizontal Line Caused by Impact from the Developing Rotary	13-54
13.3.2.6.7 Soiling in the Form of a Ring	13-56
13.3.2.7 Ghost / Memory	13-58
13.3.2.7.1 Ghost Caused by a Bend on the ITB Cleaning Blade	13-58
13.3.2.8 Faulty Color Reproduction	13-59
13.3.2.8.1 Faulty Color Reproduction Caused by an Error in Primary Transfer ATVC	13-59
13.3.3 Faulty Feeding	13-63
13.3.3.1 Wrap.....	13-63
13.3.3.1.1 Wrapping Around the Pressure Roller / Oil Traces / Separation Claw Traces / Wrinkle Traces	13-63
13.3.4 Malfunction.....	13-65
13.3.4.1 Malfunction/Faulty Detection.....	13-65
13.3.4.1.1 Fixing Web Displacement / 0A15/020D Jam Code	13-65
13.3.4.2 Noise	13-67
13.3.4.2.1 Abnormal Noise from the Rotating Rotary	13-67
13.3.4.3 User Warning Message.....	13-67
13.3.4.3.1 Message [Check the network connection.] / Message [Check the TCP/IP.]	13-67
13.3.4.3.2 Frequent DF Reading Glass Cleaning Message	13-68
13.3.4.3.3 Frequent DF reading Glass Cleaning Message (user requesting disabling of the message) ..	13-68
13.3.5 Error Code	13-69
13.3.5.1 E013-0001 Error Code: How to clear waste toner full detection	13-69
13.3.5.2 E013-0001 Error Code: How to change the waste toner detection timing	13-69
13.3.5.3 E020/E021/E061/E070/E078/E820 Error Code / Poor contact of connectors around process unit.....	13-69
13.3.5.4 E020-03A0/E020-01A2 Error Code	13-73
13.3.5.5 E061-0001 Error Code.....	13-73
13.3.5.6 E070-0102 Error Code.....	13-74
13.3.5.7 E070-0101/E070-0102/E070-0201/E070-0202/E070-0302 Error Code	13-75
13.3.5.8 E542-8001 Error Code.....	13-76
13.4 Outline of Electrical Components	13-77
13.4.1 Clutch/Solenoid	13-77
13.4.1.1 Clutches and Solenoids.....	13-77
13.4.2 Motor	13-79
13.4.2.1 Motors	13-79
13.4.3 Fan	13-84
13.4.3.1 Fans.....	13-84
13.4.4 Sensor	13-87
13.4.4.1 Sensors	13-87
13.4.5 Switch	13-95
13.4.5.1 Switches	13-95
13.4.6 Lamps, Heaters, and Others.....	13-97
13.4.6.1 Heaters, Lamps, and Others.....	13-97
13.4.7 PCBs	13-100
13.4.7.1 PCB.....	13-100
13.4.8 Variable Resistors (VR), Light-Emitting Diodes (LED), and Check Pins by PCB	13-103
13.4.8.1 Variable Resistors (VR), Light-Emitting Diodes (LED), and Check Pins by PCB.....	13-103
13.4.8.2 Points to Note About the Leakage Breaker	13-103
13.4.8.3 Main Controller PCB (main)	13-104
13.4.8.4 DC Controller PCB.....	13-105
13.4.8.5 HV1 PCB	13-106
13.4.8.6 HV2 PCB	13-106
13.4.8.7 HV3 PCB	13-107

13.1 Making Initial Checks

13.1.1 Checking the Site Environment

0001-6073

- a. The voltage of the source of power must be as indicated (+/-10%), and the power plug must remain connected day and night.
- b. The temperature and humidity of the site must be as indicated, and the site must be away from a water faucet, water boiler, humidifier; moreover, the machine must not be near a fire or subjected to dust.
- c. The site must be free of ammonium gas.
- d. The machine must not be subjected to the direct rays of the sun. As necessary, curtains must be furnished.
- e. The site must be well ventilated, and its floor must keep the machine level.
- f. The machine must remain connected to the wall outlet at all times.

13.1.2 Checking the Paper

0001-6076

- a. Check to see if the paper is of a type recommended by Canon.
- b. Check to see if the paper is dry. If moist, try paper fresh out of package.

13.1.3 Checking the Placement of Paper

0001-6077

- a. Check to see that the amount of paper placed in the cassette and the manual feed tray is as indicated.
- b. If transparencies are used, check to see if they are placed in the correct orientation.

13.1.4 Checking the Durables

0001-6079

Check the Durables Table, and replace those parts that have reached the end of the indicated lifetimes.

13.1.5 Checking the Periodically Replaced Parts

0001-6080

Check the Scheduled Servicing Chart and the Periodically Replaced Parts Table, and replace those parts that have reached the end of the indicated lifetimes.

13.1.6 Checking the Units and Functional Blocks

0001-6082

<Reader Unit>

- Check the optical system (contact sensor, white plate, copyboard glass) for a scar, dirt, and foreign matter.
- Check the contact sensor unit to see if it moves smoothly. Check its rail for dirt.
- Check the contact sensor for flickering.
- Check the scanner for condensation.

<Process>

- Check the drum unit/developing unit to see if it is fitted properly.
- Check the photosensitive drum for a scar and dirt.
- Check the patch image read sensor window for dirt.

<Transfer>

- Check the secondary transfer outside roller for wear, scar, dirt, and deformation.
- Check the blade of the cleaning unit for a tear, warping, deformation, and stray toner.

<Fixing>

- Check the fixing roller/pressure roller for wear, scar, dirt, and deformation.
- Check the fixing heater (main/sub) to see if it goes on when the power is turned on.
- Check the fixing thermistor for an open circuit.
- Check the thermal switch for electrical continuity.

<Paper Movement>

- Check to see if there is foreign matter such as paper lint.
- Check the pickup/feed/separation roller for a buildup of paper powder, wear, scar, dirt, and deformation.
- Check the registration roller (middle, outside)/paper path roller for wear, scar, dirt, and deformation.
- Check the feed guide for wear, scar, dirt, and deformation.
- Check the paper for a bent leading edge, curling, waving, and moisture.
- As necessary, try transparencies of a type recommended by Canon to see if the problem, if any, is corrected.

<Machine>

- Check to see if an excess load is imposed on the drive system.
- Check the gears for wear and chipping.

<Cassette>

- Check to see if the cassettes are fitted properly. Check also to see that an appropriate paper size is selected. As necessary, try a normal cassette to see if the problem, if any, stops.
- Check to see that the movement of the cassette holding plate is smooth. Check also to see that the holding plate is free of deformation.
- Check to see if the side guide plate/trailing edge plate inside the cassette are set correctly.
- Check to see if the cassette heater switch is at the ON side (if a cassette heater is fitted).

<Service Mode>

- Check to see that the various CCD adjustment values are as indicated on the service label.
(COPIER>ADJUST>CCD>all items)
- Check to see if registration adjustment is correct.
(COPIER>ADJUST>FEED-ADJ>REGIST)
- Check to see if the machine inside temperature/humidity is the correct reading.
(COPIER>DISPLAY>ANALOG>TEMP/ABS-HUM)
- Check to see that the image read position adjustment is correct.
(COPIER>ADJUST>ADJ-XY>ADJ-X/ADJ-Y)
- Check to see if the value for ADJUST/OPTION is as indicated on the service label.
- Check to see if error initialization has been executed.
(COPIER>FUNCTION>CLEAR>ERR)

<General>

- Check to see that the power plug is connected properly.
- Check to see that there is the rated AC voltage at the power outlet.
- Check to see that the sensors, clutches, motors, and solenoids operate normally. Check the connectors for poor contact.
(Be sure to check with the General Timing Chart for reference to power/signal routes.)
- Check to see that the leakage breaker/circuit breaker operates normally.
- Check the wiring for trapping and loose screws.
- Check to see that the external cover are all fitted properly.
- Check to see that the main power switch/control panel power switch are at the ON side.
- Check to see that the power cable/signal cable to accessories are correctly routed.
- Check to see that the cover switch operates normally.
- Check the fuses on the PCBs to see if they have blown.
- Check to see that the user knows how to use the machine correctly.

13.1.7 Others

0001-6094

If a machine is brought in from a cold to a warm place, its inside can develop condensation, which will lead to various problems.

- a. condensation on the BD sensor can cause faults associated with E100.
- b. condensation on the dust-blocking glass can cause the images in sub scanning direction to be too light.
- c. condensation on the contact sensor of the reader unit or the copyboard glass can lead to light images.
- d. condensation on the pickup/feed guide can cause faulty paper movement.

If d above is noted, be sure to dry wipe the units involved in the feed system.

The same is true of toner cartridges, developing units, and drum units, i.e., when they are unpacked after being brought in from a cold place. To prevent condensation, advise the user to leave the package alone (for about 1 to 2 hr) before opening it.

13.2 Test Print

13.2.1 Overview

0001-6108

The machine offers the following 6 types of test prints (TYPE), each designed for identification of a specific type of image fault. The data for these test prints is prepared by the main controller: if the output of a test print is free of the fault in question, suspect a fault on the PDL input or the reader unit.

13.2.2 Test Print TYPE

0001-6109

T-13-1

Type No.	Description
0	normal copy/print
1-3	-(for R&D)
4	16 gradations
5	full half-tone
6	grid
7-9	-(for R&D)
10	MCYBk horizontal stripe (sub scanning direction)
11	-(for R&D)
12	64 gradations
13	-(for R&D)
14	full color 16 gradations
15-100	-(for R&D)

13.2.3 Selecting Test Print TYPE

0001-6111

- 1) Set the copy count, paper size, and pickup mode (single-sided or double-sided).
- 2) Make the following selections in service mode: COPIER>TEST>PG.
- 3) Make the following selections: COPIER>TEST>PG>TYPE.
- 4) Enter the appropriate TYPE No. using the keypad, and press the OK key.
- 5) Select the appropriate color using COLOR-Y/M/C/K (output at 1).
- 6) Set the density using DENS-Y/M/C/K (valid only if TYPE=5).
- 7) Press the start key.

13.2.4 16-Gradation (TYPE=4)

0001-6113

Use this test print to check gradation, fogging, white line, and uneven density at the front/rear.

a. Gradation

If the 16-gradation[1] is not properly produced, suspect a fault in the drum unit or the laser exposure system.

b. Fogging


If fogging is found only in the white area[2], suspect a fault in the drum unit or the laser exposure system.

c. White Line

If a white line is found in the image, suspect a fault in the developing system.

d. Uneven Density at the Front/Rear

If uneven density is found at the front/rear, suspect a fault in the drum unit, laser exposure system, or transfer system.

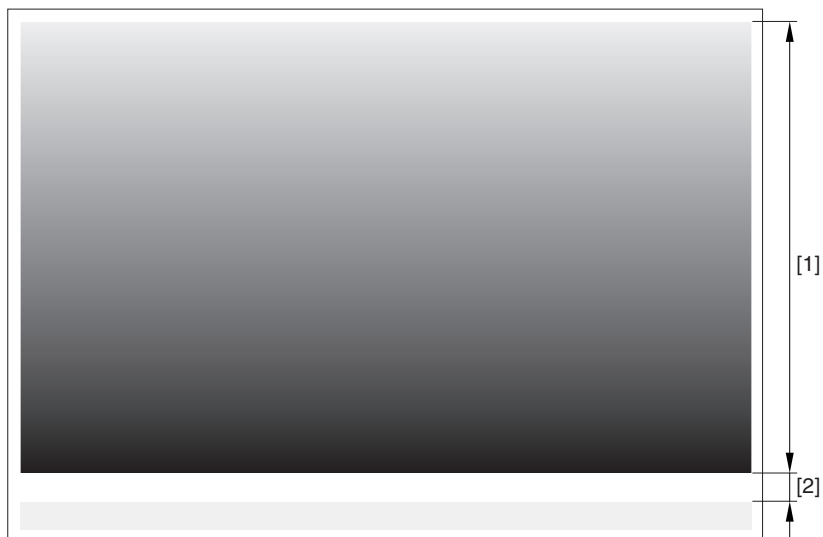

F-13-1

13.2.5 Full Page Halftone (TYPE=5)

0001-6115

Use this test print to check a transfer fault, black line, white line, and uneven density at specific intervals.

Memo:

- You can print out test prints for individual colors by making the following selections in service mode:
COPIER>TEST>PG and then COLOR-Y/M/C/K.
 - You can also change the density of the test prints by making the following selections in service mode:
TEST>PG>DENS>Y/M/C/K.
-

a. Transfer Fault

If a transfer fault is found, suspect a fault in the ITB unit or the secondary transfer outside roller.

b. Black Line

If a black line is found, suspect a scar in the photosensitive drum or dirt on the primary charging roller.

c. White Line

If a white line is found at the same location for all colors, suspect a fault in the ITB unit or the secondary transfer outside roller.

If it is found in different locations, or it is found in a specific color, suspect a fault in the drum unit or the laser exposure system.

 
d. Uneven Density at Specific Intervals

If the uneven density is at specific intervals, suspect the following:

- if at 194.7 mm, photosensitive drum.
- if at 37.6 mm, developing cylinder

e. Uneven Density

If uneven density is found, suspect dirt on the dust blocking glass of the laser scanner unit and deterioration of the ITB.



COLOR-M=1, COLOR-Y/C/K=0

F-13-2

13.2.6 Grid (TYPE=6)

0001-6117


Use this text print to check color displacement, right angles, and straight lines.

a. Color Displacement

If color displacement is found, suspect a scar in the ITB and a fault in the drum unit.

b. Right Angle, Straight Lines

If the right angles or straight lines are not correct, suspect a fault in the laser exposure system, a fault in the shape of the registration (middle/outside) roller, and a fault in the secondary transfer outside roller.

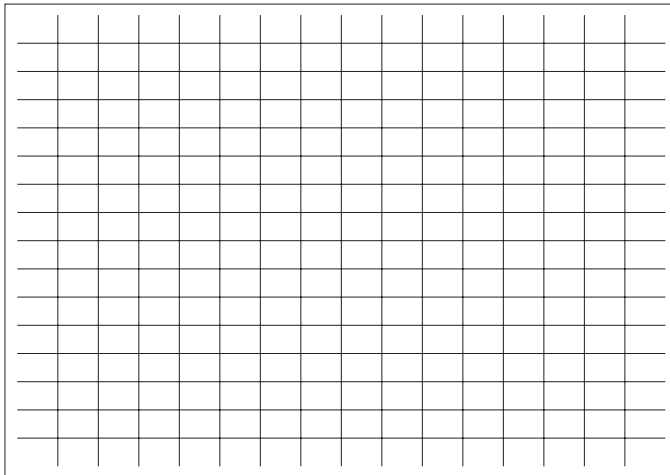

F-13-3

13.2.7 MCYBk Horizontal Stripes (TYPE=10)

0001-6118

Use this test print to check the density of dark areas of individual colors, balance among colors, and white lines associated with development.

a. Solid Density of Individual Colors and Balance Among Colors

-the density must not be appreciably low (too light).

-if the density of a specific color is too low (too light), suspect a fault in the developing system.


-if the density of all colors is low (too light), suspect a fault in the laser exposure system and the transfer block.

b. While Line

If a white line is found in a specific color, suspect a fault in the development system of that particular color.

c. Uneven Density at the Front/Rear

If uneven density is found in a specific color, suspect a fault in the development system of that particular color. If it is found in all colors, suspect a fault in the drum unit, ITB unit, and laser exposure system.

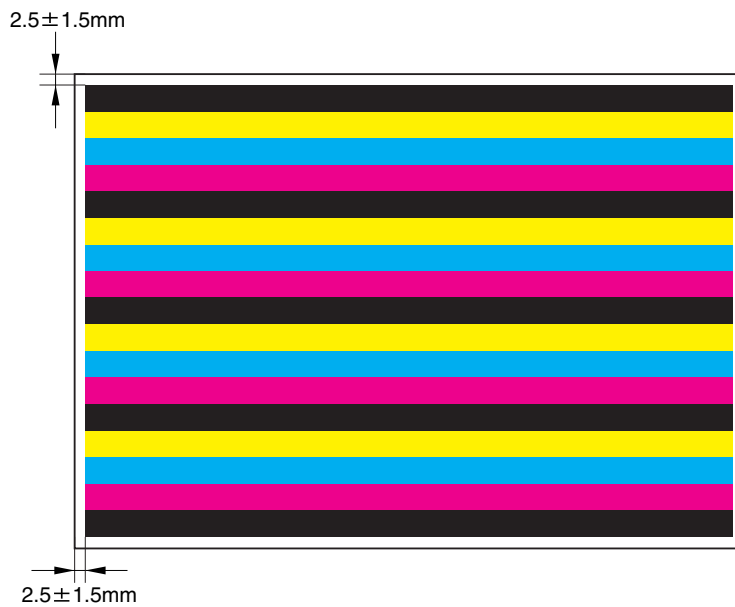

F-13-4

13.2.8 64-Gradation (TYPE=12)

0001-6119

Use this test print to check the gradation of Y, M, C, and Bk at once.



F-13-5

13.2.9 Full Color 16-Gradation (TYPE=14)

0001-6120

Use this test print to check the gray balance, gradation of individual colors (YMCBk), and fogging.

a. Gray Balance


Check the grayscale area to see if the densities of all colors are even.

b. Gradation

Check the gradation of individual colors (YMCBk) and for any difference in color.

c. Fogging

If fogging is found in the white area, suspect a fault in the developing system, a fault in the drum unit, and poor adjustment of the laser exposure system.

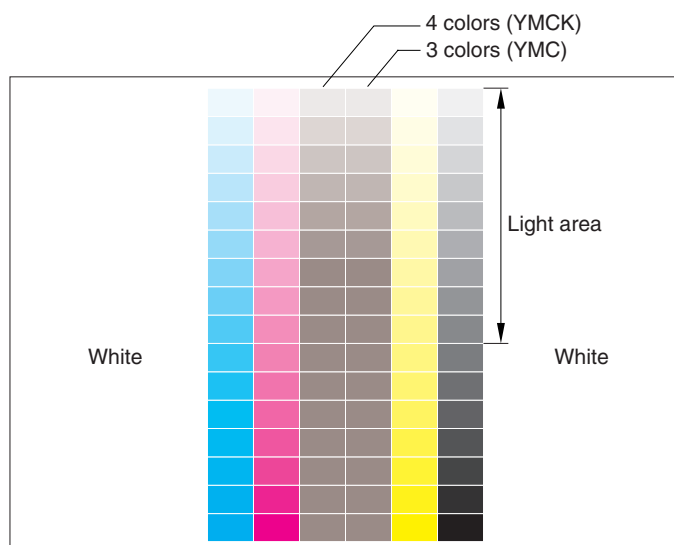

F-13-6

13.3 Troubleshooting

13.3.1 Symptoms

13.3.1.1 Symptoms

0005-4102

T-13-2

Item	Symptoms
Image fault	Solid black / Poor contact of connectors around process unit Overall light image on black area, uneven image Low density / Poor contact of connectors around process unit Uneven Density Along the Leading Edge in a Solid Color Image Uneven Density in the Form of a Feedscrew in Color Images Uneven Density in Halftone Images Colored Dots Uneven Density On Rough-Textured Paper Coarse Image in a Solid C Original Transfer Faults on Mono-Color Prints Color Displacement in Sub Scanning Direction Smeared or Colored Characters/Lines Vertical Lies in Halftone Images Image Fault Occurring at Specific Intervals Missing Color White Spots at 51mm Intervals Vertical Lines Caused by an ITB Cleaning Fault Vertical Lines Soiling of the Left/Right Margin on Double-Sided Prints (1st side) Oil Lines in Vertical Direction Stray Toner Soiling as Dots at Drum Intervals Horizontal Line Caused by Impact from the Developing Rotary Soiling in the Form of a Ring Ghost Caused by a Bend on the ITB Cleaning Blade Faulty Color Reproduction Caused by an Error in Primary Transfer ATVC
Paper feed fault	Wrapping Around the Pressure Roller / Oil Traces / Separation Claw Traces / Wrinkle Traces

Item	Symptoms
Malfunction	Fixing Web Displacement / 0A15/020D Jam Code Abnormal Noise from the Rotating Rotary Frequent DF Reading Glass Cleaning Message Frequent DF reading Glass Cleaning Message (user requesting disabling of the message)
Jam (Main Unit)	0103/0104 Jam Code Neussiedler large-size/RA3 pickup fault
Error code	E020/E021/E061/E070/E078/E820 Error Code / Poor contact of connectors around process unit E020-03A0/E020-01A2 Error Code E061-0001 Error Code E070-0102 Error Code E070-0101/E070-0102/E070-0201/E070-0202/E070-0302 Error Code E542-8001 Error Code

13.3.1.2 Maintenance Recommendations for Components Around the Photosensitive Drum/Intermediate Transfer Unit in the Event of an Image Fault 0006-0542

If any of the following image faults has occurred as the result of wear on any of the durable components around the photosensitive drum or the intermediate transfer unit, refer to the tables that follow for guidance; the tables have been prepared in view of frequency of servicing, length of servicing work, and parts cost:

For a detailed description of individual faults, field remedies, and image samples, see their respective symptoms.

1. Transfer Fault on 2nd Side (2nd color; as first in the morning)

<Cause> Wear on Secondary Transfer Roller

T-13-3

Parts name (work)		Servicing intervals	Field with high labor cost	Field with low labor cost
[1]	Photosensitive drum (dry wiping)	images with spots	-	-
[2]	Photosensitive drum cleaning blade	195,000 images	replace	replace
[3]	Photosensitive drum scoop-up sheet	390,000 images	-	-
[4]	Photosensitive drum cleaner scoop-up sheet	150,000 prints	clean	clean
[5]	Photosensitive drum cleaner assembly (lower)	150,000 prints	clean	clean
[6]	Pre-transfer charging assembly rail	150,000 prints	clean	clean
[7]	Primary transfer roller	195,000 images	replace	replace
[8]	Primary transfer static eliminator	300,000 images	-	-
[9]	ITB(replacement;)	300,000 images	-	-
	ITB(cleaning of outer surface)	unit replacement	clean	clean
[10]	Secondary transfer inside roller	300,000 prints	replace	-
[11]	Patch detection sensor (cleaning)	250,000 images	clean	clean
[12]	ITB inside roller, scraper (cleaning)	Primary transfer roller replacement	clean	clean
[13]	ITB cleaning blade	195,000 images	replace	replace
[14]	ITB cleaner scoop-up sheet	150,000 prints	replace	replace
[15]	Secondary transfer outside roller	195,000 images	replace *	replace *

* : required

Line/White Spot, Color Displacement at 51mm Intervals

<Cause> Wear on Primary Transfer Roller, Soiling Inside ITB Unit

T-13-4

Parts name (work)		Servicing intervals	Field with high labor cost	Field with low labor cost
[1]	Photosensitive drum (dry wiping)	images with spots	-	-
[2]	Photosensitive drum cleaning blade	195,000 images	replace	replace
[3]	Photosensitive drum scoop-up sheet	390,000 images	-	-
[4]	Photosensitive drum cleaner scoop-up sheet (lower)	150,000 prints	clean	clean
[5]	Photosensitive drum cleaner assembly (lower)	150,000 prints	clean	clean
[6]	Pre-transfer charging assembly rail	150,000 prints	clean	clean
[7]	Primary transfer roller	195,000 images	replace *	replace *
[8]	Primary transfer static eliminator	300,000 images	-	-
[9]	ITB(replacement;)	300,000 images	-	-
	ITB(cleaning of outer surface)	unit replacement	clean	clean
[10]	Secondary transfer inside roller	300,000 prints	replace	-
[11]	Patch detection sensor (cleaning)	250,000 images	clean	clean
[12]	ITB inside roller, scraper (cleaning)	Primary transfer roller replacement	clean *	clean *
[13]	ITB cleaning blade	195,000 images	replace	replace
[14]	ITB cleaner scoop-up sheet	150,000 prints	replace	replace
[15]	Secondary transfer outside roller	195,000 images	replace	replace

* : required

3. Soiling in Dots at Drum Intervals, Slippage Under Cleaner (ghost)


<Cause> Wear on Photosensitive Drum Cleaning Blade/ITB Cleaning Blade

T-13-5

Parts name (work)		Servicing intervals	Field with high labor cost	Field with low labor cost
[1]	Photosensitive drum (dry wiping)	images with spots	clean *	clean *
[2]	Photosensitive drum cleaning blade	195,000 images	replace *	replace *
[3]	Photosensitive drum scoop-up sheet	390,000 images	-	-

Parts name (work)		Servicing intervals	Field with high labor cost	Field with low labor cost
[4]	Photosensitive drum cleaner scoop-up sheet (lower)	150,000 prints	clean	clean
[5]	Photosensitive drum cleaner assembly (lower)	150,000 prints	clean	clean
[6]	Pre-transfer charging assembly rail	195,000 images	clean	clean
[7]	Primary transfer roller	150,000 prints	replace	replace
[8]	Primary transfer static eliminator	300,000 images	-	-
[9]	ITB(replacement;)	300,000 images	-	-
	ITB(cleaning of outer surface)	unit replacement	clean	clean
[10]	Secondary transfer inside roller	300,000 prints	replace	-
[11]	Patch detection sensor (cleaning)	250,000 images	clean	clean
[12]	ITB inside roller, scraper (cleaning)	Primary transfer roller replacement	clean	clean
[13]	ITB cleaning blade	195,000 images	replace *	replace *
[14]	ITB cleaner scoop-up sheet	150,000 prints	replace	replace
[15]	Secondary transfer outside roller	195,000 images	replace	replace

* : required

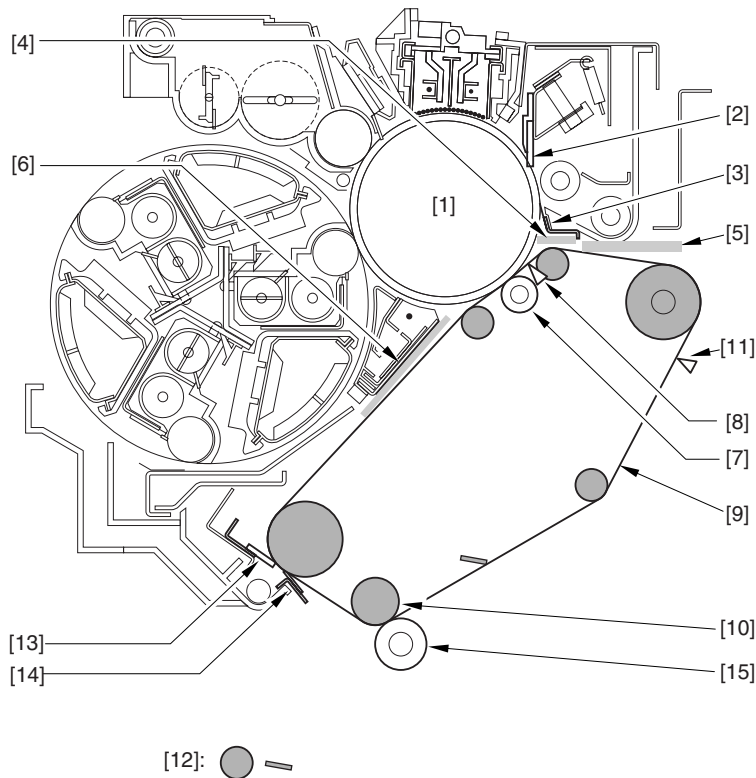

F-13-7

13.3.2 Image Faults

13.3.2.1 Solid Image

13.3.2.1.1 Solid black / Poor contact of connectors around process unit

0005-9759

For details of error codes, see the following:

E020-0080/E020-0180/E020-0280/E020-0380/E020-0090/E020-0190/E020-0290/E020-0091/E020-0191/E020-0291/E020-0092/E020-0192/E020-0292/E020-0392/E020-00A0/E020-01A0/E020-02A0/E020-03A0/E020-00A1/E020-01A1/E020-02A1/E020-03A1/E020-00A2/E020-01A2/E020-02A2/E020-03A2/E020-00A3/E020-01A3/E020-02A3/E020-03A3/E021-0001/E021-0002/E061-0005/E061-0007/E070-0000/E070-0001/E070-0002/E070-0003/E078-0001/E820-0020

Cause

When drawing out the Pkit as part of servicing work, you need to disconnect and then connect the connectors. When repeated, their internal pins can start to suffer from poor connection, resulting in wrong operation/detection.

Description

A break in the harness can occur when the harness is disconnected/connected about 30 times.


The following is a list of harnesses that are subject to a break with descriptions of symptoms expected when a break occurs.

T-13-6


Name (part No.)		
Pin No.	Connection load (notation)	Expected error condition (symptom in response to error)
[1]ITB cleaner harness (FM2-0946)		connector: J214L
1/2/3/4	ITB cleaner shift motor (M21)	E078-0001 The motor stops.
5/6/7	ITB cleaning HP sensor (PS23)	E078-0001 The sensor fails to operate
8/9/10	process unit cooling fan (FM7)	E820-0002 The fan stops. The machine fails to detect rotation.
11/12	post-charging assembly cleaning motor (M27)	image fault (vertical line) The motor stops.
[2]PKIT harness (FM2-0947)		connector: J201LA/J201B
1/2	primary charging wire cleaning motor (M26)	image fault (vertical line) The motor stops.

3/4/5	color toner cartridge sensor (PS26)	message calling for the bottle. The absence of a bottle is wrongly detected in the presence of a bottle.
		The presence of a bottle is wrongly detected in the absence of a bottle.
6/7	pre-exposure LED (LED1)	image fault (solid black) E061-0005 The LED fails to go on.
8/9/10/11	color toner level sensor (PS25)	message calling for replacement of toner The absence of toner is wrongly detected in the presence of toner.
		image fault (low density) E020-**92 The presence of toner is wrongly detected in the absence of toner.
12/13/14	black toner level sensor (TS1)	2-min supply error E020-00FF black developing assembly excess toner supply The absence of toner is wrongly detected in the presence of toner.
		black developing assembly without toner -> image fault (low density) The presence of toner is wrongly detected in the absence of toner.
15/16	NC	
1/2	developing rotary locking solenoid (SL10)	E021-0002 The solenoid fails to operate
3/4/5	developing rotary solenoid sensor (PS8)	E021-0002 The sensor fails to operate.
6/7/8	developing rotary HP sensor (PS19)	E021-0001 The sensor fails to operate.
9-14	ATR sensor (PS4)	E020-**A0 E020-**A1 E020-**A2 E020-**A3 An error sensor value is detected
15/16	ATR sensor shutter solenoid (SL12)	E020-**A0 E020-**A1 E020-**A2 E020-**A3 A sensor error value is detected.

[3]ITB harness (FM2-0949)		connector: J261L/J267L
1/2	patch image read sensor shutter solenoid (SL11)	E020-**81 E020-**90 E020-**91 A sensor error value is detected
3-8	patch image read sensor (PS2)	E020-**81 E020-**90 E020-**91 A sensor error value is detected
1/2/3	ITB HP sensor B (PS30)	E070-00** The sensor fails to operate.
4/5/6	ITB sensor A (PS1)	E070-00** The sensor fails to operate.
[4]Hopper harness (FM2-0950)		connector: J301L
1/2	hopper stirring motor (M23)	black developing assembly without toner -> image fault (low density) The motor stops.
3/4/5	hopper inside toner level sensor (TS2)	2-min supply error (reset by opening/closing the door) hopper excess toner supply The absence of toner is wrongly detected in the presence of toner.
		hopper without toner -> black developing assembly inside without toner The job stops. The presence of toner is wrongly detected in the absence of toner.
6/7	black toner supply motor (M25)	hopper without toner -> black developing assembly inside without toner The job stops. The hopper is without toner.
8/9/10	hopper open/closed sensor (PS28)	message calling for replacement of the bottle, not permitting recovery. remains closed.
		The black cartridge motor stops. remains closed
[5]Potential sensor harness (FL2-0986)		connector: J407L
1-6	potential sensor	E061-0007 An error potential level is detected.

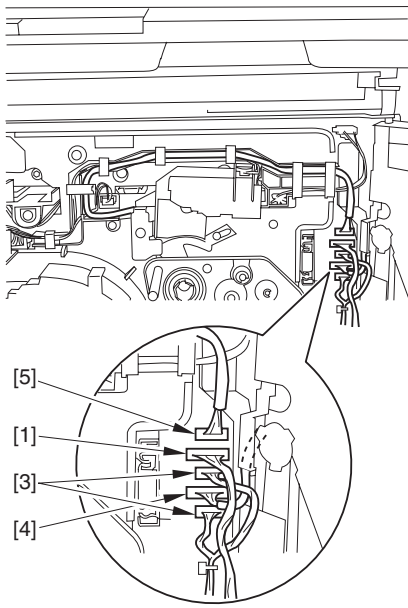

F-13-8

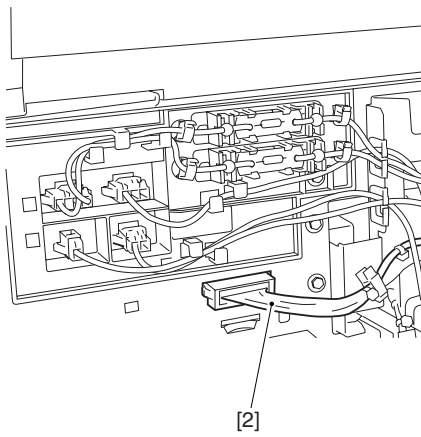

F-13-9

Field Remedy

Replace the connector with the harness intact.

13.3.2.2 Light Image / Weak Density

13.3.2.2.1 Overall light image on black area, uneven image

0006-2424


[Inspected by Canon Inc.]

Cause

As a result of inspection, it was found that this symptom occurred for the following reasons: The black developing ass'y was not supplied with toner because the 3P connector of the toner level sensor inside the black developing ass'y was not securely fitted. Finally, the toner level became low and light image or uneven image occurred.

Field Remedy

1. Make sure that bit8 in service mode [COPIER> DC-CON> I/O> P009] shows "1", which means that the toner level sensor detects toner remaining.
2. Pull out the AP kit from the main unit and unplug/reinsert the 3P connector once again.
3. Check the service mode value in Step 1 once again. If bit8 shows "0", this symptom might have occurred because of poor contact of the 3P connector. In such a case, the toner level is low, so replenish the black developing ass'y with toner in service mode [COPIER> Function> INSTALL> TONER-S> OK].

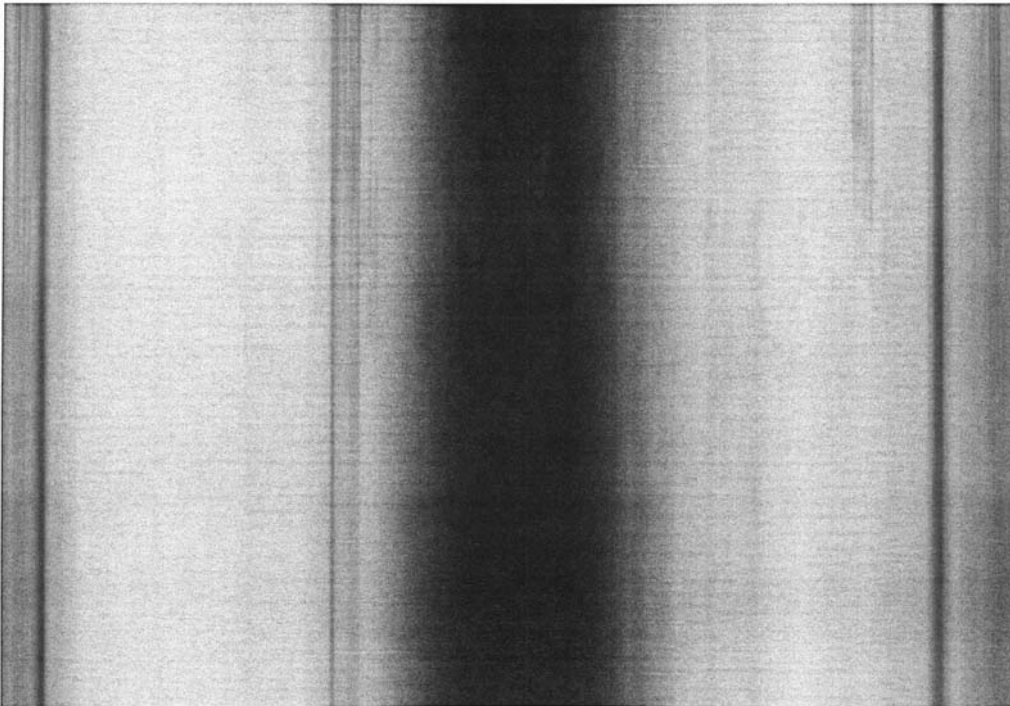

F-13-10

13.3.2.2.2 Low density / Poor contact of connectors around process unit

0005-9762

For details of error codes, see the following:

E020-0080/E020-0180/E020-0280/E020-0380/E020-0090/E020-0190/E020-0290/E020-0091/E020-0191/E020-0291/E020-0092/E020-0192/E020-0292/E020-0392/E020-00A0/E020-01A0/E020-02A0/E020-03A0/E020-00A1/E020-01A1/E020-02A1/E020-03A1/E020-00A2/E020-01A2/E020-02A2/E020-03A2/E020-00A3/E020-01A3/E020-02A3/E020-03A3/E021-0001/E021-0002/E061-0005/E061-0007/E070-0000/E070-0001/E070-0002/E070-0003/E078-0001/E820-0020

Cause

When drawing out the Pkit as part of servicing work, you need to disconnect and then connect the connectors. When repeated, their internal pins can start to suffer from poor connection, resulting in wrong operation/detection.

Description

A break in the harness can occur when the harness is disconnected/connected about 30 times.


The following is a list of harnesses that are subject to a break with descriptions of symptoms expected when a break occurs.

T-13-7


Name (part No.)		
Pin No.	Connection load (notation)	Expected error condition (symptom in response to error)
[1]ITB cleaner harness (FM2-0946) connector: J214L		
1/2/3/4	ITB cleaner shift motor (M21)	E078-0001 The motor stops.
5/6/7	ITB cleaning HP sensor (PS23)	E078-0001 The sensor fails to operate
8/9/10	process unit cooling fan (FM7)	E820-0002 The fan stops. The machine fails to detect rotation.
11/12	post-charging assembly cleaning motor (M27)	image fault (vertical line) The motor stops.
[2]PKIT harness (FM2-0947) connector: J201LA/J201B		
1/2	primary charging wire cleaning motor (M26)	image fault (vertical line) The motor stops.
3/4/5	color toner cartridge sensor (PS26)	message calling for the bottle. The absence of a bottle is wrongly detected in the presence of a bottle.
		The presence of a bottle is wrongly detected in the absence of a bottle.
6/7	pre-exposure LED (LED1)	image fault (solid black) E061-0005 The LED fails to go on.

8/9/10/11	color toner level sensor (PS25)	message calling for replacement of toner The absence of toner is wrongly detected in the presence of toner.
		image fault (low density) E020-***92 The presence of toner is wrongly detected in the absence of toner.
12/13/14	black toner level sensor (TS1)	2-min supply error E020-00FF black developing assembly excess toner supply The absence of toner is wrongly detected in the presence of toner.
		black developing assembly without toner -> image fault (low density) The presence of toner is wrongly detected in the absence of toner.
15/16	NC	
1/2	developing rotary locking solenoid (SL10)	E021-0002 The solenoid fails to operate
3/4/5	developing rotary solenoid sensor (PS8)	E021-0002 The sensor fails to operate.
6/7/8	developing rotary HP sensor (PS19)	E021-0001 The sensor fails to operate.
9-14	ATR sensor (PS4)	E020-***A0 E020-***A1 E020-***A2 E020-***A3 An error sensor value is detected
15/16	ATR sensor shutter solenoid (SL12)	E020-***A0 E020-***A1 E020-***A2 E020-***A3 A sensor error value is detected.
[3]ITB harness (FM2-0949)		connector: J261L/J267L
1/2	patch image read sensor shutter solenoid (SL11)	E020-***81 E020-***90 E020-***91 A sensor error value is detected
3-8	patch image read sensor (PS2)	E020-***81 E020-***90 E020-***91 A sensor error value is detected

1/2/3	ITB HP sensor B (PS30)	E070-00** The sensor fails to operate.
4/5/6	ITB sensor A (PS1)	E070-00** The sensor fails to operate.
[4]Hopper harness (FM2-0950) connector: J301L		
1/2	hopper stirring motor (M23)	black developing assembly without toner -> image fault (low density) The motor stops.
3/4/5	hopper inside toner level sensor (TS2)	2-min supply error (reset by opening/closing the door) hopper excess toner supply The absence of toner is wrongly detected in the presence of toner.
		hopper without toner -> black developing assembly inside without toner The job stops. The presence of toner is wrongly detected in the absence of toner.
6/7	black toner supply motor (M25)	hopper without toner -> black developing assembly inside without toner The job stops. The hopper is without toner.
8/9/10	hopper open/closed sensor (PS28)	message calling for replacement of the bottle, not permitting recovery. remains closed.
		The black cartridge motor stops. remains closed
[5]Poteantial sensor harness (FL2-0986) connector: J407L		
1-6	potential sensor	E061-0007 An error potential level is detected.

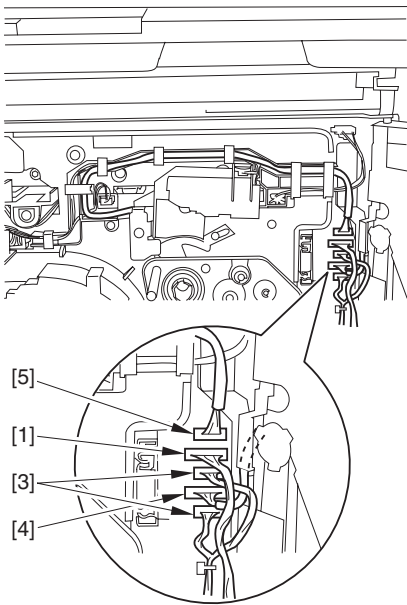

F-13-11

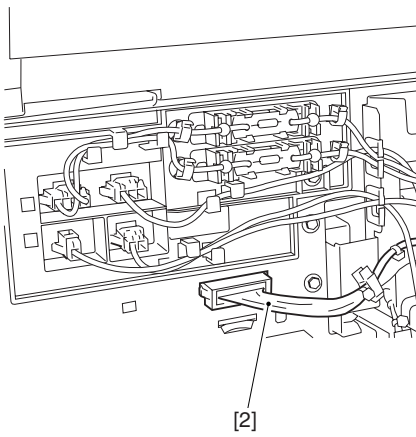

F-13-12

Field Remedy

Replace the connector with the harness intact.

13.3.2.3 Uneven Density

13.3.2.3.1 Uneven Density Along the Leading Edge in a Solid Color Image

0006-0349

Cause

In a H/H environment, toner tends to become moist and have less bonding with carrier, at times sticking directly to the developing cylinder. As a result, the ratio of toner to carrier will increase, causing the leading edge of the image to become darker because of the extra toner from the developing cylinder (as when a solid color image is produced).

Field Remedy


Perform the following steps to decrease the toner-to-carrier ratio by 1%:

1) In service mode, decrease the patch target value of the color in question:

-in the case of Y, lower the setting by '50' in COPIER>ADJUST>DENS>P-SGNL-Y.

-in the case of M, lower the setting by '50' in COPIER>ADJUST>DENS>P-SGNL-M.

-in the case of C, lower the setting by '50' in COPIER>ADJUST>DENS>P-SGNL-C.

 To change the setting, enter the value obtained by subtracting '50' from the present value (i.e., not '-50').

For instance, if the present value is '450', enter '400'.

2) When the machine has entered a ready state, make 2 prints of a full-page solid image of the color in question.

COPIER>TEST>PG>TYPE: 5

COPIER>TEST>PG>DENS-Y/M/C/K: for the color in question, '255'; for other colors, '0'

COPIER>TEST>PG>TYPE>PG-PICK: select the source of paper loaded with paper (3: cassette 3; 4: cassette

4)

COPIER>TEST>PG>TYPE>2-SIDE: 1

COPIER>TEST>PG>TYPE>PG-QTY:2

3) Execute [P-PRINT]. (in service mode, COPIER>FUNCTION>MISC-P>P-PRINT)

4) Put the output in the service book case for storage. If the case contains previous output, replace it with the new output.

Note:

This symptom tends to be most conspicuous under the following conditions:


-high humidity environment

-1st print after the machine has been left alone for a long time

-C mono solid image

-37 mm or so from the leading edge of the image

Image Sample

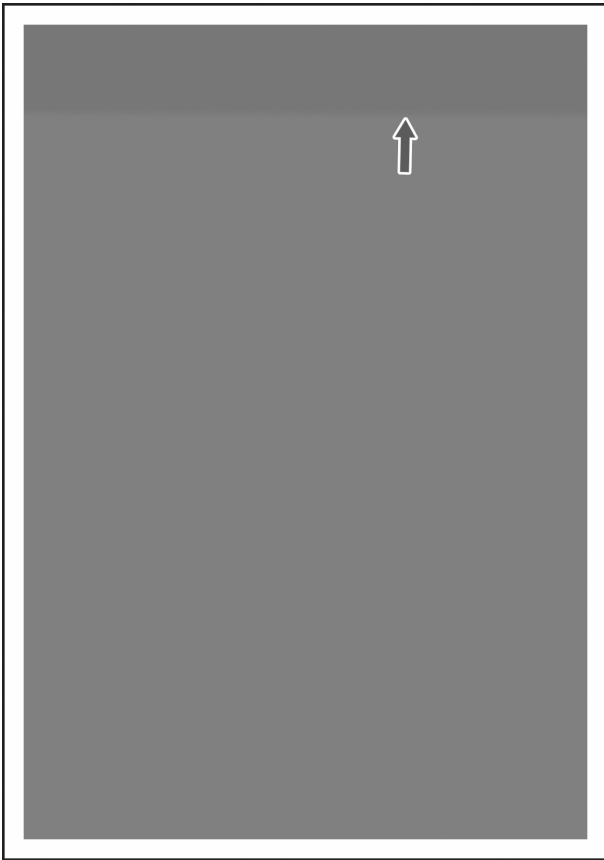

F-13-13

13.3.2.3.2 Uneven Density in the Form of a Feedscrew in Color Images

0005-5640

Cause


The developing assembly lid is not fitted correctly when a color toner is replaced.

Field Remedy

Take out the color developing assembly in question from the machine, and fit its lid so that there is no gap.



Be sure to force the lid against the developing assembly so that there is no gap in the area [1] indicated in the diagram, i.e., not permitting insertion of a transparency.

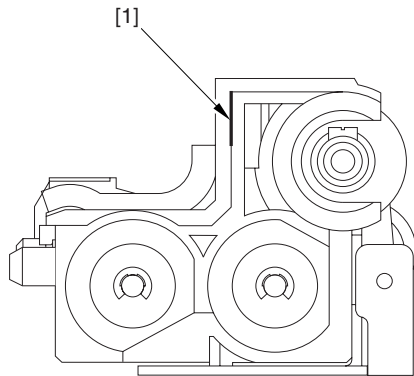


F-13-14



When tightening the screw, be sure to take care so that the shavings of the lid of the developing assembly or its lid will not enter the assembly (i.e., shavings occurring as a result of tightening the screw).

Image Sample

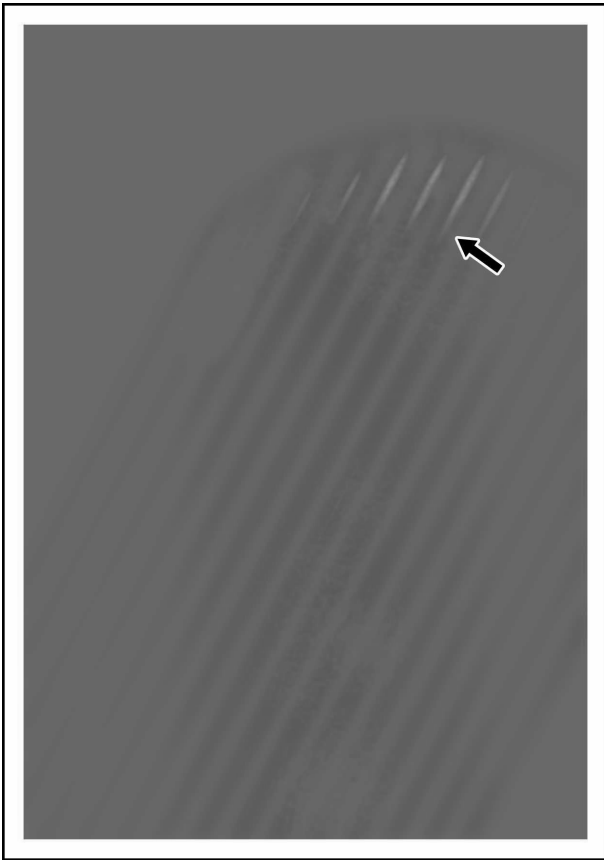

F-13-15

13.3.2.3.3 Uneven Density in Halftone Images

0005-7963

Description

In a high temperature/humidity environment, the symptom can start to occur relatively early (around 100,000 images) after replacement of the primary charging wire/cleaning pad.

The uneven density tends to be conspicuous in color half-tone images.

The uneven density tends to be found at the same area in all colors.

Cause

The symptom is caused by dirt on the primary charging wire or the dust-blocking glass.


In particular, the cleaning pad tends to start deteriorating early (about 100,000 images) in a high temperature/humidity environment.

Field Remedy

- 1) Clean the dust-blocking glass.
- 2) If the primary charging wire is approaching the end of its life, replace it. Be sure also to replace the cleaning pad at the same time.
- 3) If the area of friction of the cleaning pad is worn or deformed, replace the pad.
- 4) Execute the following in service mode to clean the charging wire: COPIER>FUNCTION>CLEANING>WIRE-CLN.

Memo:

The estimated life of the primary charging wire is 500,000 images: the cleaning pad is 500,000 images (however, in a high temperature/humidity environment, 100,000 images).

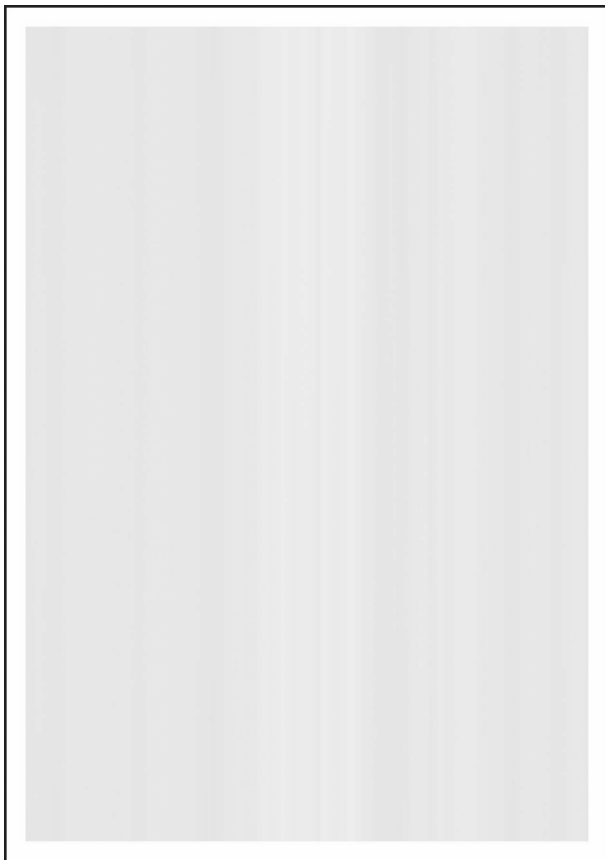

F-13-16

13.3.2.3.4 Colored Dots

0005-8491

Cause

When the 2nd and subsequent colors are developed in an M mono halftone area of full color printing, carrier can stick to the drum.

The presence of such carrier causes electrical discharge during primary transfer in the 2nd and subsequent colors, causing the polarity of the M toner on the intermediate transfer belt to reverse.

As a result, some of the M toner on the intermediate belt is returned to the drum, causing the image to show dots.

Field Remedy

Execute the following service mode item to adjust the potential used to remove fogging caused by a developing bias:


COPIER>ADJUST>V-CONT>VBACK-Y, M, C; set all to '-5' and execute; if the results are not satisfactory, set all to '10'.



If you have made a change to the setting of the foregoing service mode item (adjustment of potential to remove fogging caused by developing bias), you must be sure to return it to the default setting ('0') when you replace the toner or the developing assembly of the color in question. If you fail to do so, the images may once again start to have fogging.

Description

This symptom can occur as a combination of various factors; in other words, although the variation among individual bias outputs and the variation among carrier production lots may be well within allowance, the combined variation can lead to colored dots in images. Improvements have been made and the symptom is now at a level not causing any practical problem; it, however, can prove to be relatively noticeable when certain types of originals are used (although only to a negligible level).

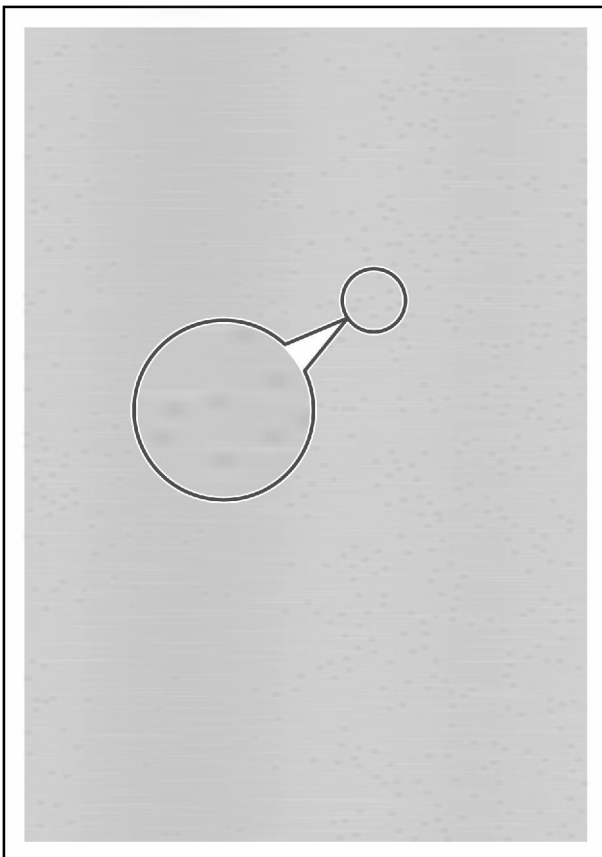Image Sample

F-13-17

13.3.2.3.5 Uneven Density On Rough-Textured Paper

0005-8571

Cause

When a Bk solid image is copied on rough-textured paper (not of a recommended type), the ups and downs on the surface of the paper can cause a shortage of transfer current, causing white spots and uneven density in images.


Field Remedy

Execute the following service mode to decrease the pre-transfer charging bias:

COPIER>ADJUST>HV-TR>PRE-TR; set it to '250'.

Description

This symptom is most conspicuous when a Bk solid image is copied on rough-textured paper (not of a recommended type). Advise the user to avoid rough-textured paper.

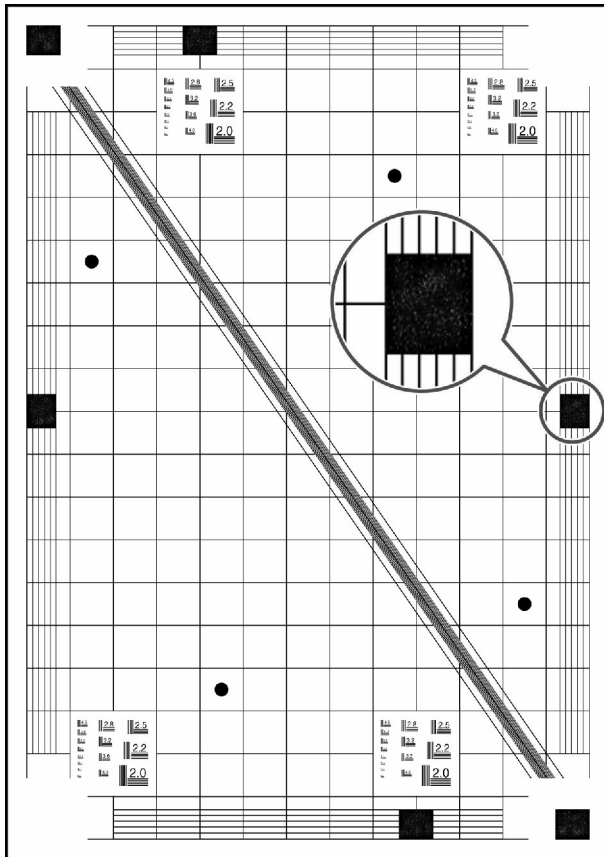Image Sample


F-13-18

13.3.2.3.6 Coarse Image in a Solid C Original

0006-1405

Cause


When a solid C original is used, the machine will faithfully reproduce any uneven surface of the original communicated by its reader unit. Moreover, the machine's controller possesses characteristics that tend to amplify a minute difference in an area of high density, causing any change in an area of a solid C original to be amplified and its print to show a coarse image.

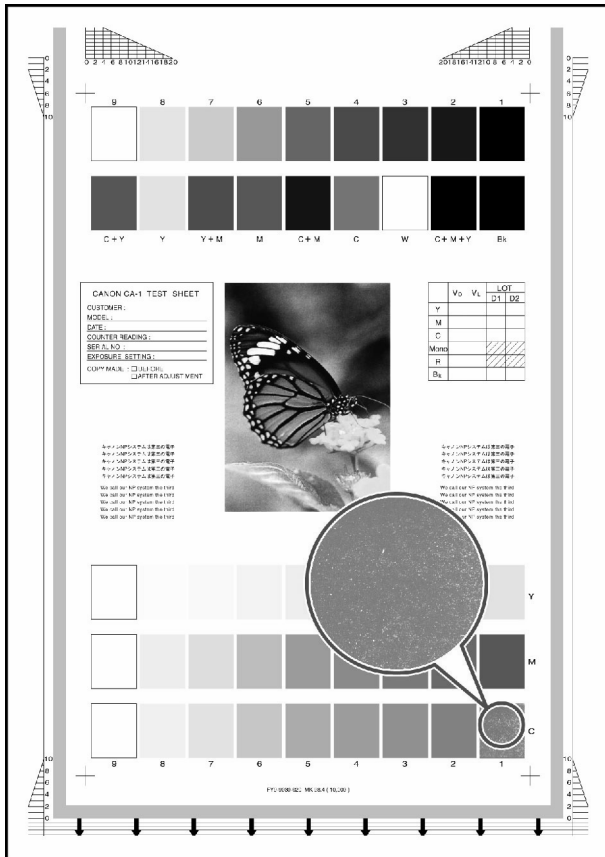

F-13-19

Field Remedy

If this symptom is noted, go through the following flow of work to correct it:

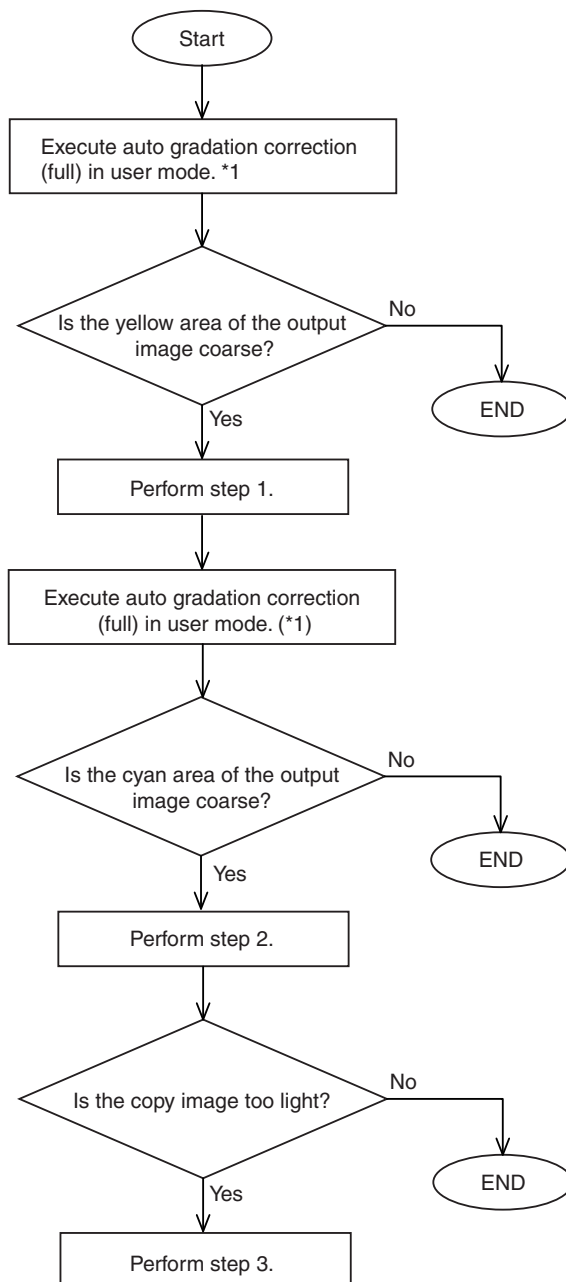

F-13-20

*1: Normally, as many as 3 copies are made in full mode of auto gradation correction. Here, however, stop full correction when the 1st copy has been made to save on work time.

<Step 1>

Adjust the gamma correction table of the controller as follows:

- 1) Set "3" to the following in service mode: COPIER>OPTION>BODY>GLUTLV-C.
- 2) Set "3" to the following in service mode: COPIER>OPTION>BODY>GLUTMX-C.

<Step 2>

1) Set "-3" or "-4" to the following in service mode: COPIER>ADJUST>COLOR>ADJ-C.

<Step 3>

1) Set "-1" or "-2" to the following in service mode: COPIER>ADJUST>COLOR>ADJ-C.

Description

This symptom does not occur while the printer unit is used on its own.

This symptom tends to be most conspicuous when a C mono color image is copied. Although the CA-1 Text Chart, in particular, is subject to this symptom, the degree of the symptom is not serious enough to cause practical problems to the user.

13.3.2.3.7 Transfer Faults on Mono-Color Prints

0006-3717

Cause

The machine executes primary transfer ATVC control at specific intervals when making mono-color prints. When there is a change in the environment, however, the machine can at times fail to execute the control, resulting in transfer faults.

Field Remedy


Perform the following work:

Execute the service mode item used to change the intervals of executing primary transfer control: i.e., set "1" to the following: COPIER>OPTION>BODY>INTROT-1.

Description

In the case of color prints, the machine executes ATVC control for every job; as such, the output is of the symptom.

Image Sample

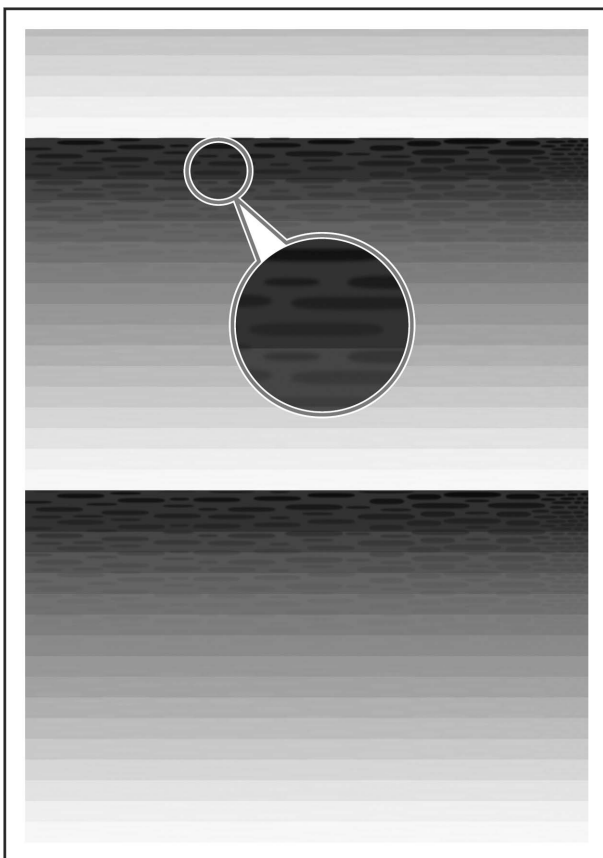

F-13-21

13.3.2.4 Out of Focus

13.3.2.4.1 Color Displacement in Sub Scanning Direction

0005-5828

Cause

- 1.the shock occurring when the ITB cleaning blade goes on or off causes the transfer to the ITB to be displaced.
- 2.the shock occurring when the secondary transfer outside roller goes on or off causes the transfer to the ITB to be displaced.

Filed Remedy (cause 1)

The following 3 remedies are offered for the field:

1. adjustment of the wire start position in sub scanning direction
2. change to the primary transfer color-to-color current level

<Adjustment>

1. Adjusting the Wire Start Position in Sub Scanning Direction

- 1) Print out a Rainbow Chart (by executing 31 in service mode: COPIER>TEST>PG>TYPE).
- 2) Check the printed chart to find out which color is displaced. (The machine is designed as a C-base machine; use yellow to serve as the point of reference).
- 3) Adjust the write start position of the displaced color in service mode.

-if Y is displaced on the 1st side, execute the following in service mode: COPIER>ADJUST>IMAGE-REG>REG-V-Y


-if M is displaced on the 1st side, execute the following in service mode: COPIER>ADJUST>IMAGE-REG>REG-V-M

-if K is displaced on the 1st side, execute the following in service mode: COPIER>ADJUST>IMAGE-REG>REG-V-K

-if Y is displaced on the 2nd side, execute the following in service mode: COPIER>ADJUST>IMAGE-REG>REG2-V-Y

-if M is displaced on the 2nd side, execute the following in service mode: COPIER>ADJUST>IMAGE-REG>REG2-V-M

-if K is displaced on the 2nd side, execute the following in service mode: COPIER>ADJUST>IMAGE-REG>REG2-V-K

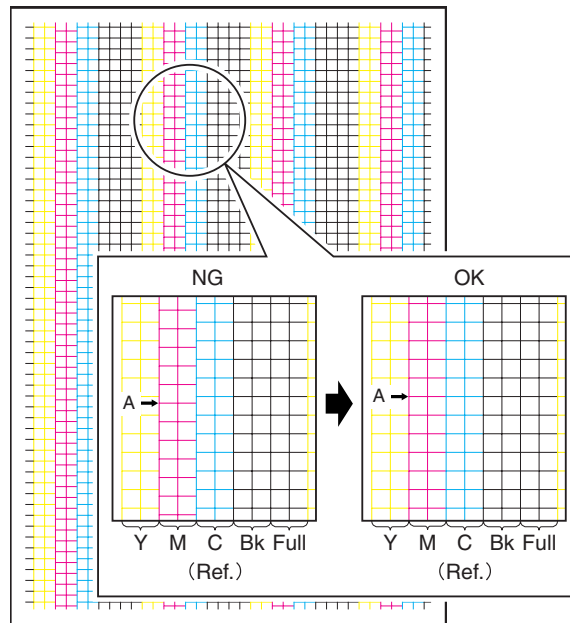

F-13-22



An increase of '1' made to the setting will move the write start position of the selected color by a single pixel (about 0.04 mm).

If you have initialized the DC controller PCB or if you have replaced the DC controller PCB, be sure to enter the values indicated on the service label

-range of adjustment: -10 to +10 (unit: pixel; at time of shipment: 0)


2. Changing the Primary Transfer Color-to-Color Current Level

Set '-2' to the following in service mode: COPIER>ADJUST>HV-TR>1TR-ST51.

range of adjustment: -5 to 0 (unit: 2 yA; at time of shipment: 0)

Filed Remedy (cause 2)

- 1) Replace the primary transfer roller.
- 2) Dry wipe the rollers [1] and the scraper [2] shown in the following figure with lint-free paper.

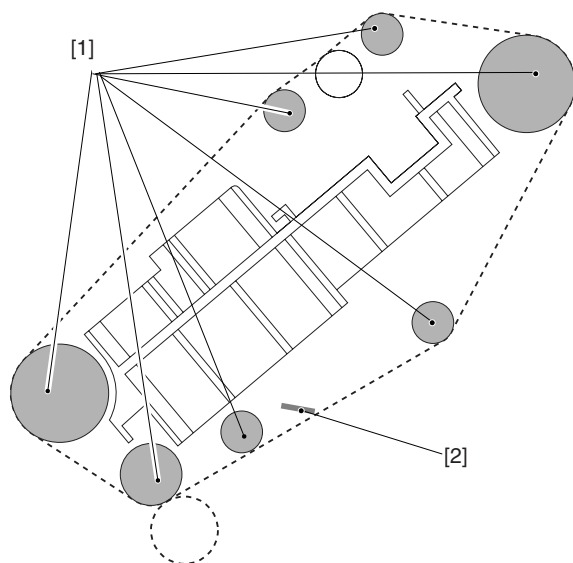

F-13-23

Memo:

When the primary transfer roller becomes worn, shavings from its surface will likely move on the intermediate transfer belt to reach all rollers inside the intermediate transfer unit. The presence of shavings between the belt and the rollers will hinder the movement of the belt, possibly causing displacement of color in sub scanning direction. The shavings, in passing, have a high degree of viscosity, and tends to resist removal from the rollers.

13.3.2.4.2 Smeared of Colored Characters/Lines

0005-8556

Cause

When 2-color (blue, green, red) is used to form an image of characters or lines, an excess of toner deposit can cause the layer of toner to grow too thick during the first transfer of the second color, thus leading to smears of toner (character edges) on the intermediate transfer belt because of separation discharges.

Field Remedy

Execute the following service mode item to decrease the amount of toner that is deposited for individual colors:

set '-3' to the following: COPIER>ADJUST>COLOR>ADJ-Y

set '-3' to the following: COPIER>ADJUST>COLOR>ADJ-M

set '-3' to the following: COPIER>ADJUST>COLOR>ADJ-C

set '-3' to the following: COPIER>ADJUST>COLOR>ADJ-K

Note:


If the images are too light after the change, set the item to '-1' to '-2'.

When you have executed these items, be sure to execute auto gradation correction (full; image characteristics corrective control) in user mode so as to maintain the optimum level of density.

Description

This symptom can also be caused by combined factors; in other words, the resistance of the intermediate transfer belt and the amount of deposited toner may well be within allowance individually, they can trigger the symptom when combined. Improvements have been made so that the level of the symptom is equal to that found in past machines; if the user points it out, however, provide the foregoing remedy. The fault, however, is of a negligible level.

Image Sample

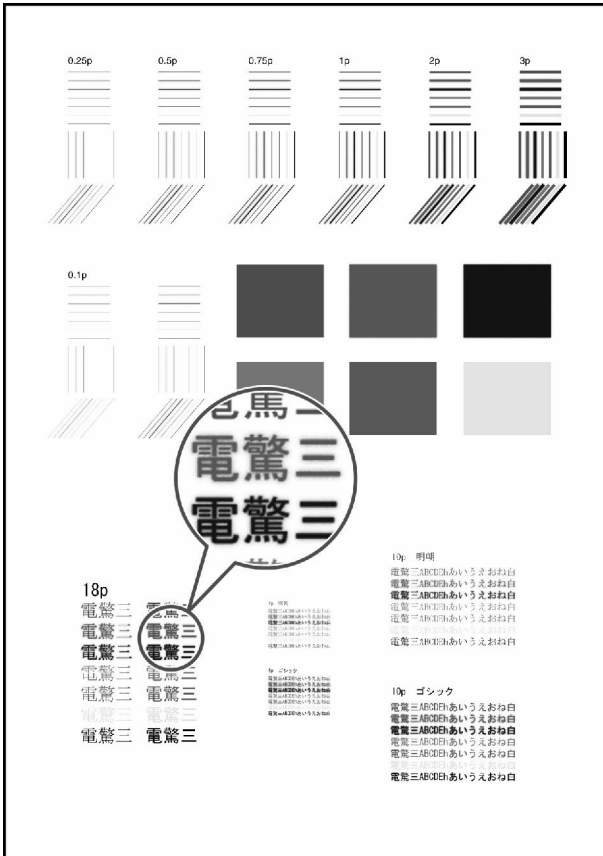

F-13-24

13.3.2.5 Partially Blank/Streaked

13.3.2.5.1 Vertical Lies in Halftone Images

0005-4285

Description

This fault tends to occur in halftone images.

Cause

The scoop-up sheet of the photosensitive drum cleaner bends over at time of replacement, scraping the surface of the photosensitive drum in the form of lines.

Field Remedy


Clean the photosensitive drum, or replace it.

Replace the scoop-up sheet of the photosensitive drum.

Note:

Fit the scoop-up sheet of the photosensitive drum properly.

1) Engage the hole at the rear of the scoop-up sheet [1] of the photosensitive drum on the hook [2]; then, pull it toward the front, and fix it in position using the screw [3]. While doing so, be sure that the tip of the scoop-up sheet is not bent in the gap between the cartridge and the photosensitive drum.

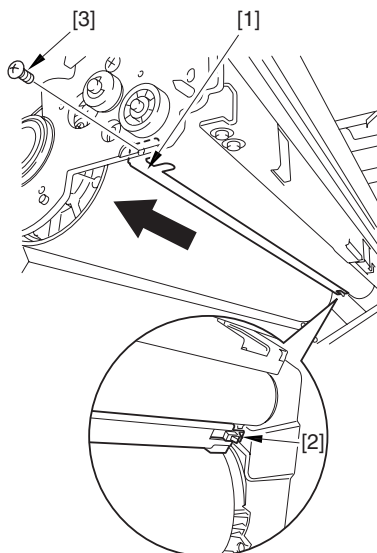


F-13-25



Checks to Make After Fitting the Photosensitive Drum Scoop-Up Sheet

1. After mounting the photosensitive drum, check to make sure that the scoop-up sheet is not warping or bent from below.
2. If wrapped or bent, the scoop-up sheet of the photosensitive drum is likely to lead to deformation. The photosensitive drum must always be rotated in counterclockwise direction only, NEVER in clockwise direction.

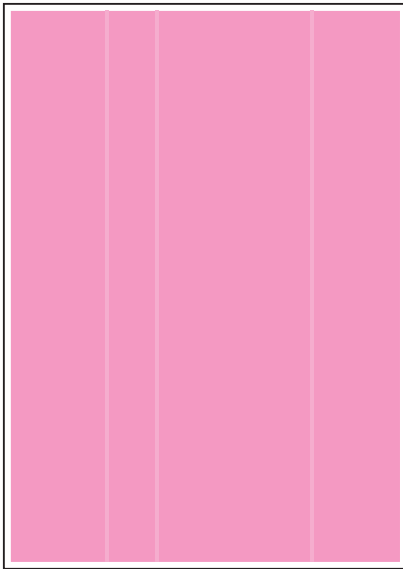

F-13-26

13.3.2.5.2 Image Fault Occurring at Specific Intervals

0005-4703

Description

This image fault occurs in main scanning direction.

Field Remedy

By referring to the following table of intervals, clean or replace the part identified:

T-13-8


Roller intervals (approx.)	Part
60 mm	black developing cylinder
37 mm	color developing cylinder
51 mm	primary transfer roller
63 mm	secondary transfer inside roller
75 mm	secondary transfer outside roller
168 mm	ITB
264 mm	photosensitive drum
188 mm	fixing roller
188 mm	pressure roller
113 mm	outside heating roller

13.3.2.5.3 Missing Color

0005-5813

Cause


When a double-sided print is made in a low humidity environment, the secondary transfer voltage tends to increase while processing the 2nd side, at times causing missing color because of an increase in the degree of discharge.

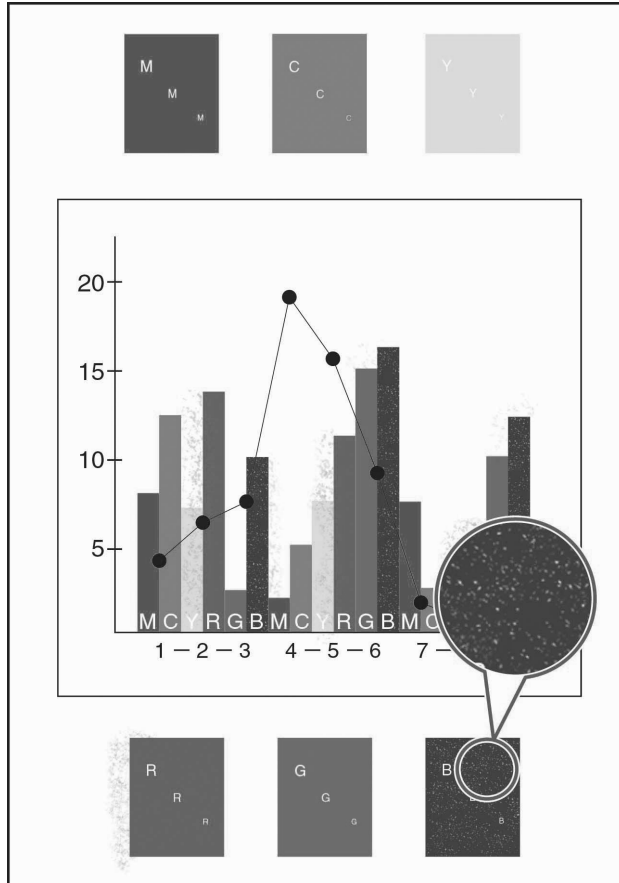

F-13-27


Field Remedy

If this symptom is noted, go through the following flow of work to correct it:

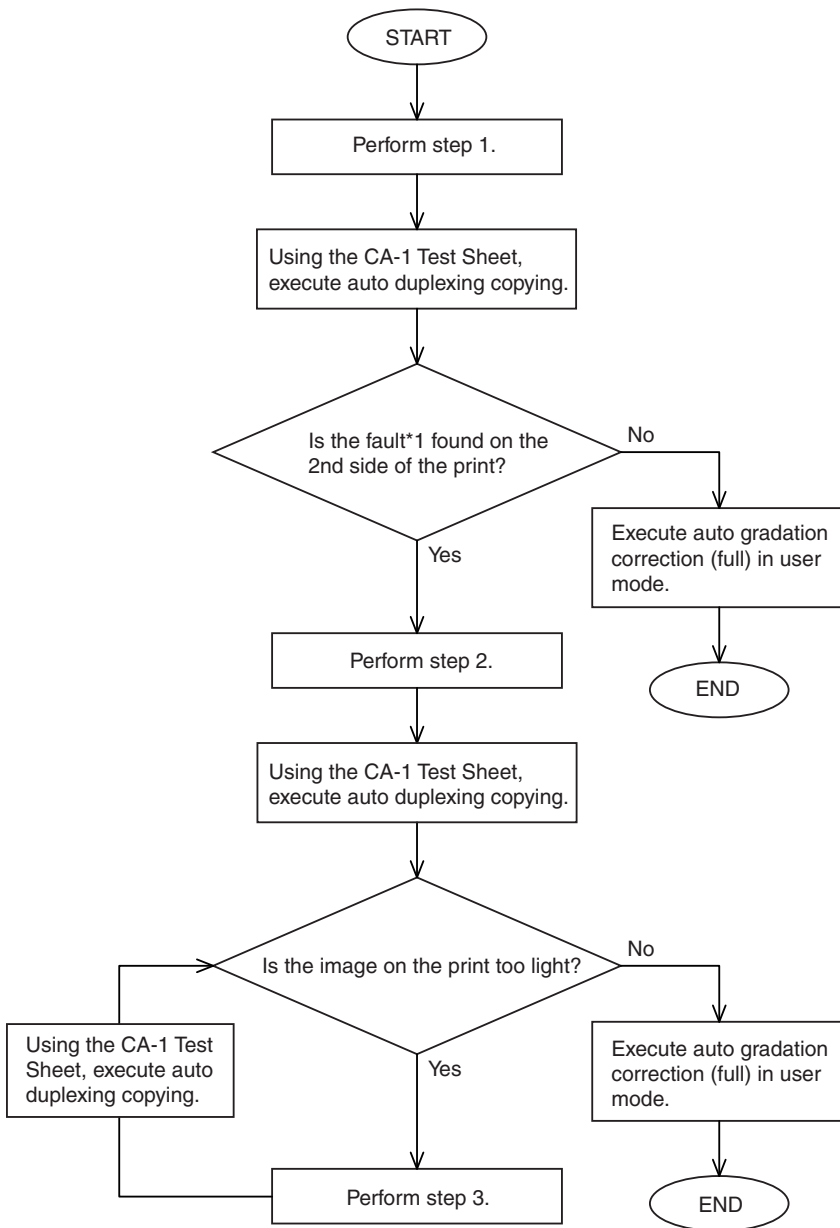

F-13-28

*1: It shows on prints as seen on the following image fault sample:

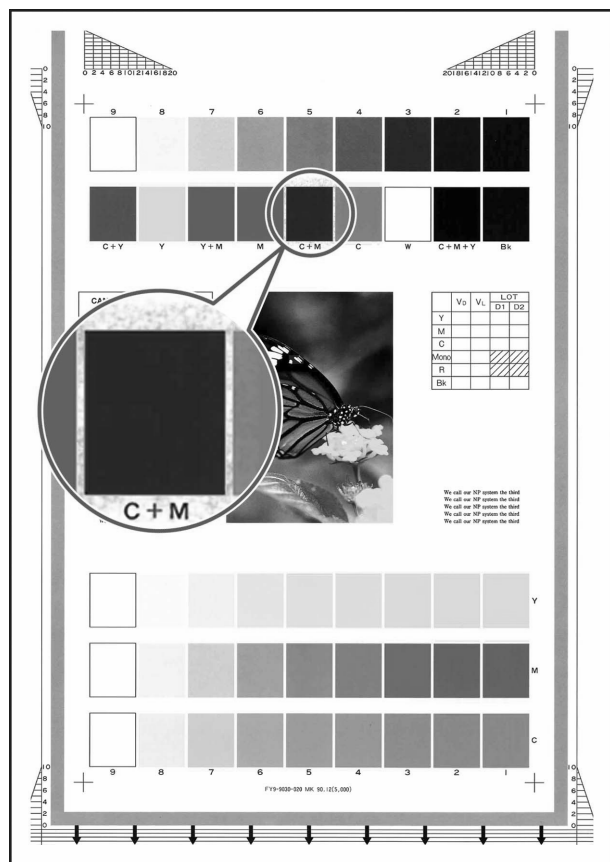

F-13-29

<Step 1>

Decrease the secondary transfer voltage for paper type, environment, and color mode using the following 6 service mode items:

1. Environment (TR-ENV1)

Set the environment in the following service mode item: COPIER>ADJUST>HV-TR>TR-ENV1. (1: low humidity; 2: normal humidity; 3: high humidity).

2. Paper Type (TR-PPR1)

Set the paper type in the following service mode item: COPIER>ADJUST>HV-TR>TR-PPR1. (1: plain paper; 2: recycled paper; 3: colored paper; 4: punch paper; 5: heavy paper 1; 6: heavy paper 2; 7: heavy paper 3; 8: transparency; 9: tracing paper; 10: postcard; 11: 2-pane postcard; 12: 4-pane postcard; 13: label sheet)

3. Color Mode (TR-CLR1)

Use the color mode in the following service mode item: COPIER>ADJUST>HV-TR>TR-CLR1. (1: Bk; 2: 4C)

4. Single-Side/Double-Sided (TR-DUP1)

Select either double-sided or single-sided in the following service mode item: COPIER>ADJUST>HV-TR>TR-DUP1. (1: single-sided; 2: auto double-sided; 3: manual double-sided)

5. Secondary Transfer ATVC Target Current Offset (2TR-TGT1)

Set '0' and execute the following service mode item: COPIER>ADJUST>HV-TR>2TR-TGT1. (range of setting: -10 to +10; in 5 yA)

6. Secondary Transfer ATVC Paper Voltage Offset (2TR-SHR1)

Set '-3' and execute the following service mode item: COPIER>ADJUST>HV-TR>2TR-SHR1. (range of settings: -10 to +10; in 100 V)



Be sure to go through the foregoing 6 service mode items before executing the following items; for instance, to decrease the transfer voltage by 300 V for low humidity, plain paper, 4C, auto duplexing:

```
COPIER> ADJUST> HT-TR> TR-ENV1 :1
COPIER> ADJUST> HT-TR> TR-PPR1 :1
COPIER> ADJUST> HT-TR> TR-CLR1 :2
COPIER> ADJUST> HT-TR> TR-DUP1 :2
COPIER> ADJUST> HT-TR> 2TR-TGT1 :0
COPIER> ADJUST> HT-TR> 2TR-SHR1 :-3
```

<Step 2>

Adjust the color balance using the following 4 service mode items, thus decreasing the density of individual colors:

1. Y Color Balance Adjustment

Set '-3' and execute the following service mode item: COPIER>ADJUST>COLOR>ADJ-Y. (range of settings: -8 to +8)

2. M Color Balance Adjustment

Set '-3' and execute the following service mode item: COPIER>ADJUST>COLOR>ADJ-M. (range of settings: -8 to +8)

3. C Color Balance Adjustment

Set '-3' and execute the following service mode item: COPIER>ADJUST>COLOR>ADJ-C. (range of settings: -8 to +8)

4. K Color Balance Adjustment

Set '-3' and execute the following service mode item: COPIER>ADJUST>COLOR>ADJ-K. (range of settings: -8 to +8)

<Step 3>

If the copy image is too light, set the service mode items (color balance adjustment) used in step 2 to '-1' or '-2'.

13.3.2.5.4 White Spots at 51mm Intervals


0005-6903

Cause

White spots can occur when wear starts on the primary transfer roller (i.e., an area of the roller is likely to become soft).

Field Remedy

1. Replace the primary transfer roller.
 2. Clean the rollers inside the ITB unit and the scraper inside the intermediate transfer belt.
- <Cleaning the Rollers Inside the ITB Unit and the Scraper Inside the Intermediate Transfer Belt>
- 1) Dry wipe the rollers [1] and the scraper [2] shown in the following figure with lint-free paper.

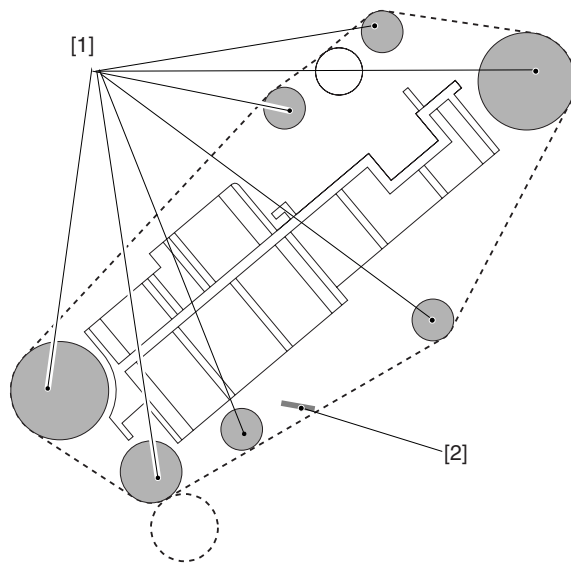


F-13-30

Description

The white spot in question tends to occur at intervals of about 51 mm.

Image Sample

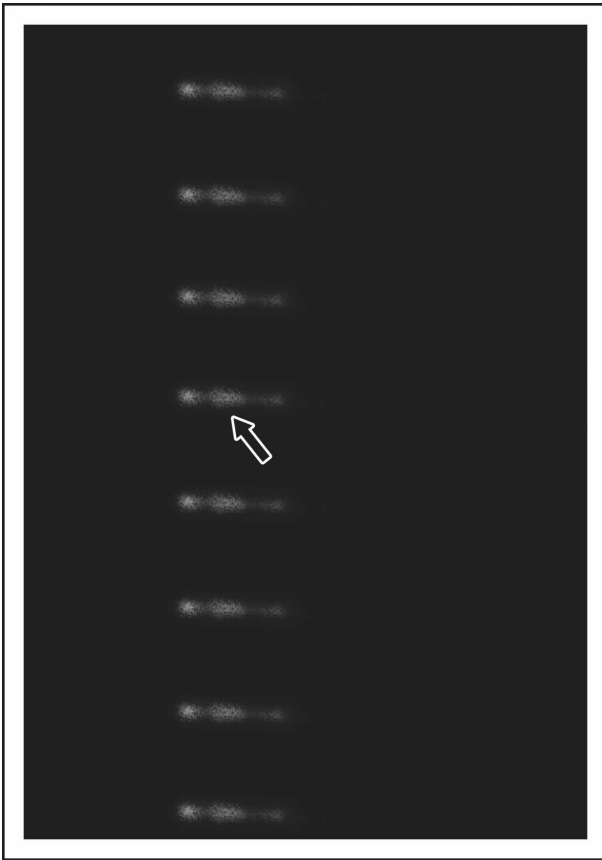

F-13-31

13.3.2.5.5 Vertical Lines Caused by an ITB Cleaning Fault

0006-4283

Cause

When the ITB cleaning blade becomes worn, a part of it can become appreciably rigid and bend. Once this phenomenon occurs, the cleaning blade tends to fail to remove all residual toner from the belt, permitting some (additive) to remain and stick to the ITB, leading to white spots in images.

Field Remedy

Perform the following work:

-Execute "clean roller" in user mode. This mode item is designed to start black band sequence (Note) to increase the cleaning performance of the blade.

user mode>adjust/clean/clean roller

If executing the mode item fails to bring about good results, execute it once again.

Note:

In black band sequence, the machine will deposit black toner on the ITB in the form of a black belt and collect the toner using the cleaning blade.

Explanation

This symptom is noticeable in color prints of halftone images, but is absent in mono-color prints.

A service mode item is also offered as a remedy against this system.

This mode item has been designed considering users making color prints of halftone images immediately turning on the main power.

The machine may be set so that it executes black band sequence a specific number of times when the main power is turned on. To do so, use COPIER>OPTION>BODY>ITB-CLN. The settings are as follows:

0: do not execute (factory default)


1: execute once

2: execute twice

3: execute 3 times

Note:

It takes 60 sec for the machine to run this mode item. In other words, if the mode is set to "3", the machine's wait time will be longer by 180 sec. In this regard, it may be good idea to set it to "1", thereby reducing the wait time.

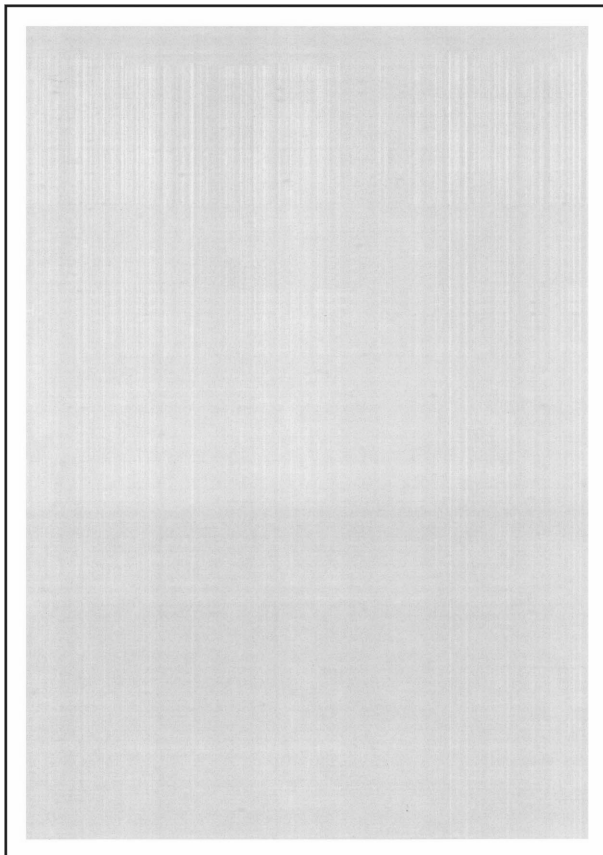Image Sample

F-13-32

13.3.2.6 Smudged/Streaked

13.3.2.6.1 Vertical Lines

0005-5802


Cause

The presence of dirt on the deflecting mirror inside the laser scanner unit can cause lines in vertical direction.

Field Remedy


Clean the deflecting mirror as follows:

- 1) Open the hopper assembly.
- 2) Hold the mirror cleaning tool [1] as shown, and fit it in the slit [2]. (mirror cleaning tool: FL2-2474)

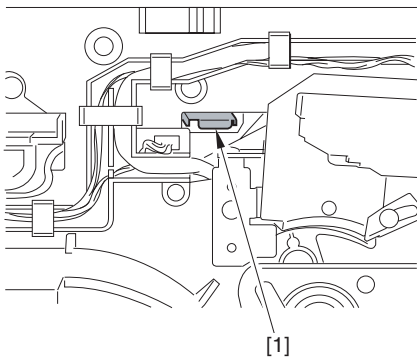

F-13-33


- 3) Slide out the fixing/feeding assembly.
- 4) Slide out the process unit.
- 5) Pull on the grip [1] found on the edge of the dust-blocking plate to detach the glass plate from the machine.

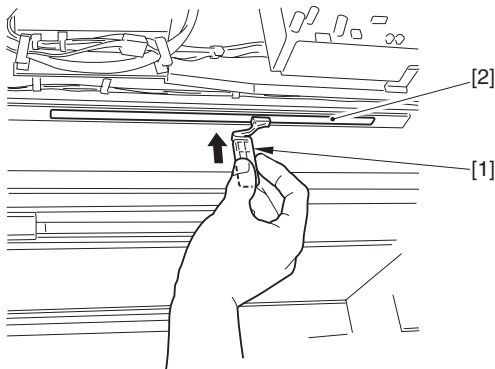

F-13-34

6) Turn the mirror cleaning tool [1] by 90 deg as shown. (step 1)

7) Move the mirror cleaning tool [1] to the front and to the rear as shown to clean the laser mirror. (step 2)

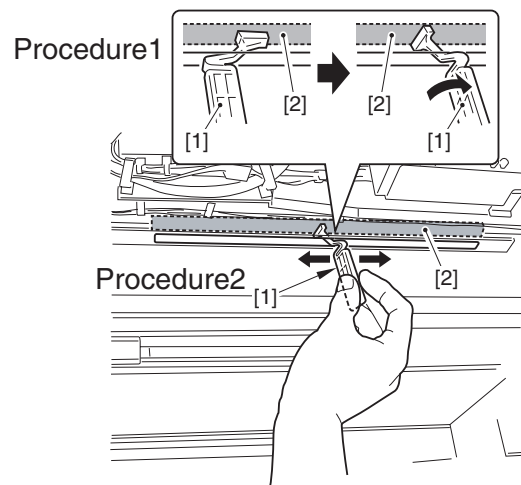

F-13-35

Description

The vertical lines tend to grow thicker as the machine is used longer.

13.3.2.6.2 Soiling of the Left/Right Margin on Double-Sided Prints (1st side)

0005-4707

Cause

The presence of dirt on the sheet found at the lower rear of the fixing/feed assembly can soil the left/right margin of double-side prints (1st side).


Field Remedy

Clean the sheet found at the lower rear of the fixing/feeding assembly. See the following figure [3].


Note:

Check to see if any of the following is soiled with toner; if soiled, dry wipe it:

- entire surface of the deck top plate [1]
- bend area of the deck top plate fan [2]
- sheet at fixing/feeding assembly (4 locations) [3]

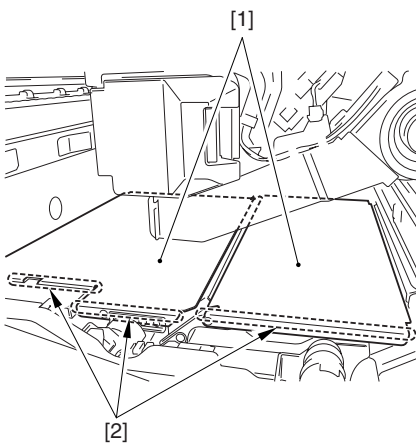

F-13-36

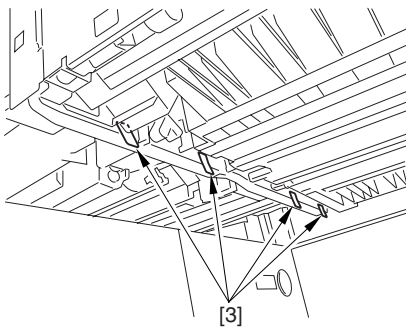

F-13-37

Description

This symptom does not occur if the paper is about 300 mm or less in width.

13.3.2.6.3 Stray Toner

0005-5806

<Cause>

When solid color double-sided prints are made in a low humidity environment, the inadequate secondary transfer current for the 2nd side can cause stray toner.

<Field Remedy>

Limit the amount of color toners by executing the following service mode items:

Set -3-to the following in service mode: COPIER>ADJUST>COLOR>ADJ-Y.

Set -3-to the following in service mode: COPIER>ADJUST>COLOR>ADJ-M.

Set -3-to the following in service mode: COPIER>ADJUST>COLOR>ADJ-C.

Set -3-to the following in service mode: COPIER>ADJUST>COLOR>ADJ-K.


<Caution>

If the image is too faint, increase the setting by using the foregoing service mode items. After performing this remedy, be sure to execute full correction in user mode (under auto gradation correction) to ensure optimum density.

<Remarks>

This symptom can occur when printing on the 2nd side of dry paper while making a double-side print of solid color images in a low humidity environment.

Advise the user to avoid the use of paper that has been left alone for a long time whenever possible, recommending the use of paper fresh out of package.

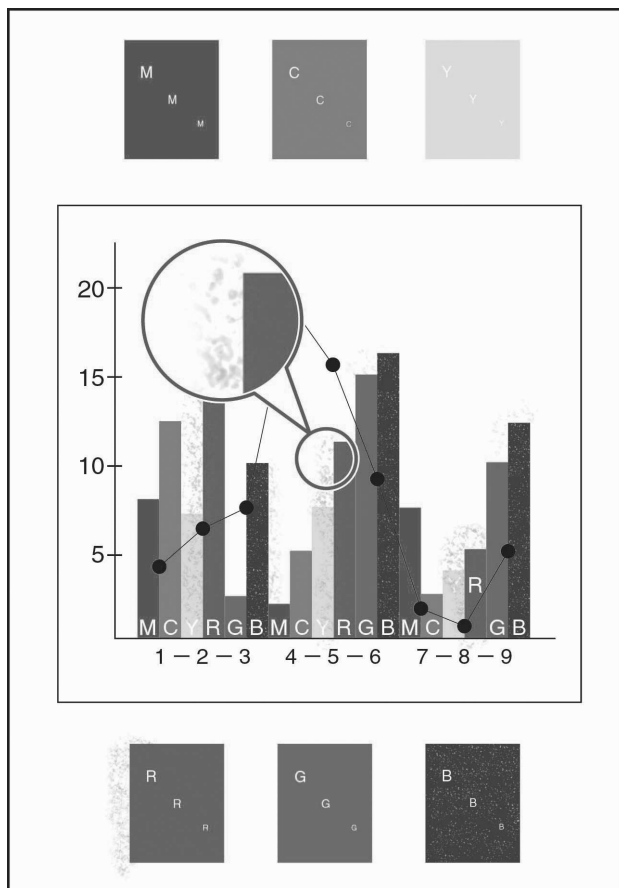

F-13-38

13.3.2.6.4 Oil Lines in Vertical Direction

0005-6054

Cause

When paper of the same size is used continuously, the area of the fixing roller coming into contact with the edge of paper tends to wear out, developing a dent. The dent in turn tends to collect oil from the belt, resulting in oil lines when paper of a larger size is used.

This symptom is most conspicuous on the 1st large size sheet, growing lighter and disappearing after several sheets. The symptom, on the other hand, tends to occur more readily when the fixing roller starts to deteriorate after long use (100,000 sheets or more).

EX: if A4 is used normally, and A3 extra-length paper is used as an exception:

Field Remedy

Replace the fixing roller/pressure roller.

13.3.2.6.5 Soiling as Dots at Drum Intervals


0005-9972

Cause

When the transfer cleaning drive assembly is removed, the force of the pressure spring causes the ITB cleaning blade to butt against the intermediate transfer belt. The contact in turn will cause the coating of the blade to stick to the belt. The coating will then be pressed against the photosensitive drum under the force of the primary transfer roller. When the photosensitive drum cleaning blade starts to wear, it can fail to collect the coating, and the coating will likely appear on the prints in the form of dots.

Field Remedy

If this symptom is noted, go through the following flow of work to correct it:

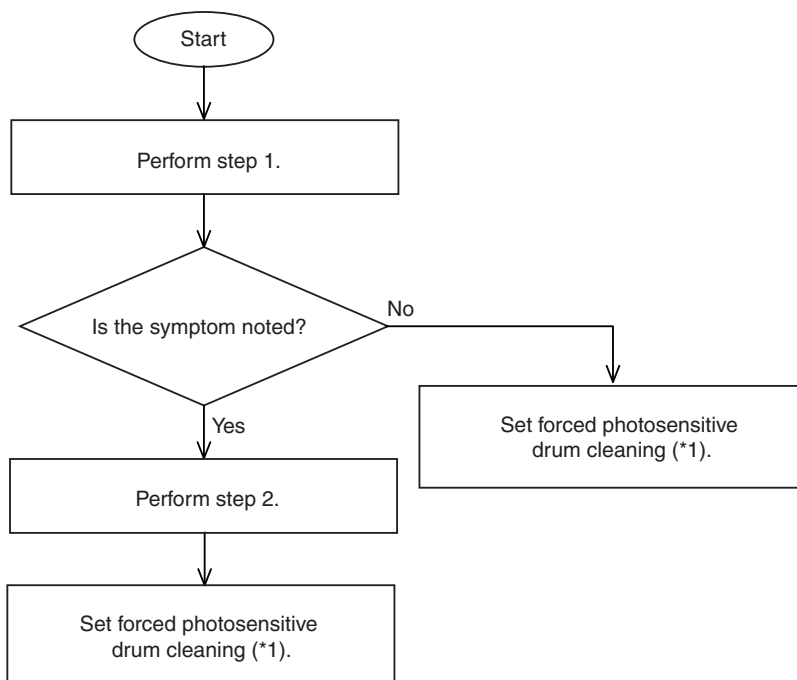

F-13-39

*1: To set forced photosensitive drum cleaning (at power-on), perform the following:

- 1) Set "1" the following service mode item: COPIER>OPTIONAL>BODY>D-CLN-TM.
- 2) Set "1" to the following service mode item: COPIER>OTPN>BODY>PAIR-FAN.


The machine executes the following in the course of this cleaning mode item:

- Stops drum idle rotation and magnet roller, and executes black band sequence.
- Executes full-speed rotation of the primary charging suction fan in an H/H environment.

Step 1


Clean the photosensitive drum as follows:

- 1) Draw out the process unit.
- 2) Take out the primary charging assembly.
- 3) Remove the 2 screws, and detach the charging assembly rail.

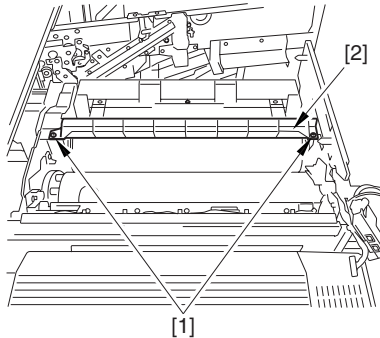

F-13-40

- 4) As shown in the figure, turn the photosensitive drum [1] counterclockwise while dry-wiping its surface with lint-free paper [2].

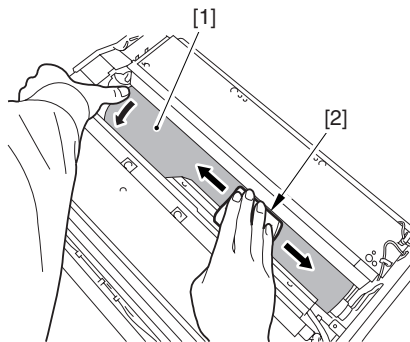

F-13-41


Step 2

Replace the ITB cleaning blade and the photosensitive drum cleaning blade.

Description

The coating on the photosensitive drum will appear white in response to light (e.g., from a pen light). Removing the coating from such an area will eliminate dots in the output.

Image Sample

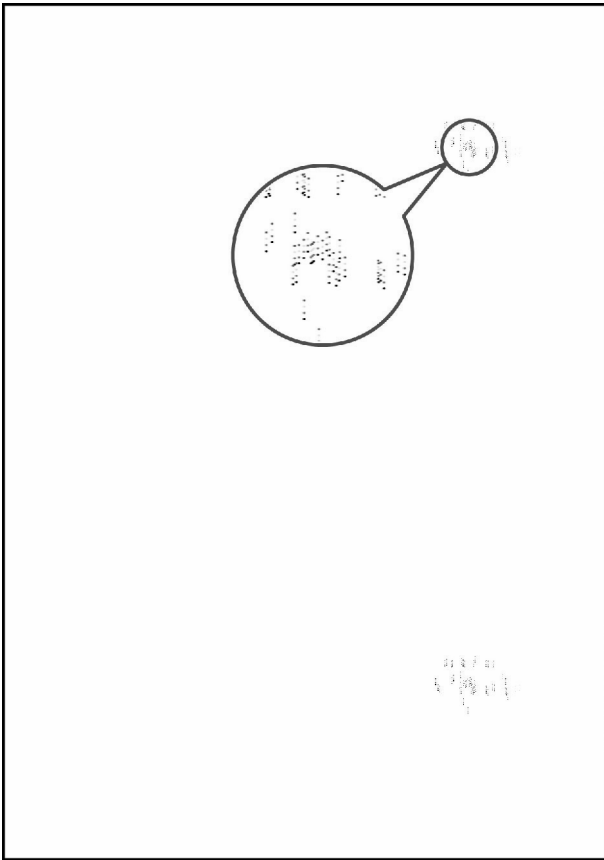

F-13-42

13.3.2.6.6 Horizontal Line Caused by Impact from the Developing Rotary

0006-0303

Cause

When a full color print is made, the vibration from the movement of the developing rotary affects the laser exposure mechanism, at times resulting in a horizontal line in the output.

Field Remedy

Perform the following to adjust the target contrast potential of individual colors:

- 1) Generate test prints (COPIER>TEST>PG>TYPE=1).
- 2) Decrease the target contrast of the color in which the line is conspicuous.
 - change the setting to '-30' in service mode (COPIER>ADJUST>V-CONT>VCONT-Y).
 - change the setting to '-30' in service mode (COPIER>ADJUST>V-CONT>VCONT-M).
 - change the setting to '-30' in service mode (COPIER>ADJUST>V-CONT>VCONT-C).
- 3) Once again, generate test prints (COPIER>TEST>PG>TYPE=1); then, check the output against the output generated in step 1). If there is no improvement, go to step 4).
- 4) Decrease the target contrast potential of the color in question further in service mode:
 - change the setting to '-50' in service mode (COPIER>ADJUST>V-CONT>VCONT-Y).
 - change the setting to '-50' in service mode (COPIER>ADJUST>V-CONT>VCONT-M).
 - change the setting to '-50' in service mode (COPIER>ADJUST>V-CONT>VCONT-C).

5) Once again, generate test prints (COPIER>TEST>PG>TYPE=1), and compare the output against the output generated in step 3), thereby making sure that improvement has been made.

Note:


Make copies using the CA-1 Test Chart and an appropriate original of the user. If the image contrast has adversely been affected, increase the setting using the foregoing service mode item (range of settings: -31 and -49).

After you have performed the foregoing remedy, be sure to execute auto gradation correction (full; image characteristic correction control) in user mode.

Description

This symptom tends to be conspicuous in M or C when making full color prints (halftone). In the case of M, the symptom tends to occur about 25 to 30 mm from the leading edge of the image; in the case of C, on the other hand, it tends to occur around 50 to 60 mm from the image leading edge.

Image Sample

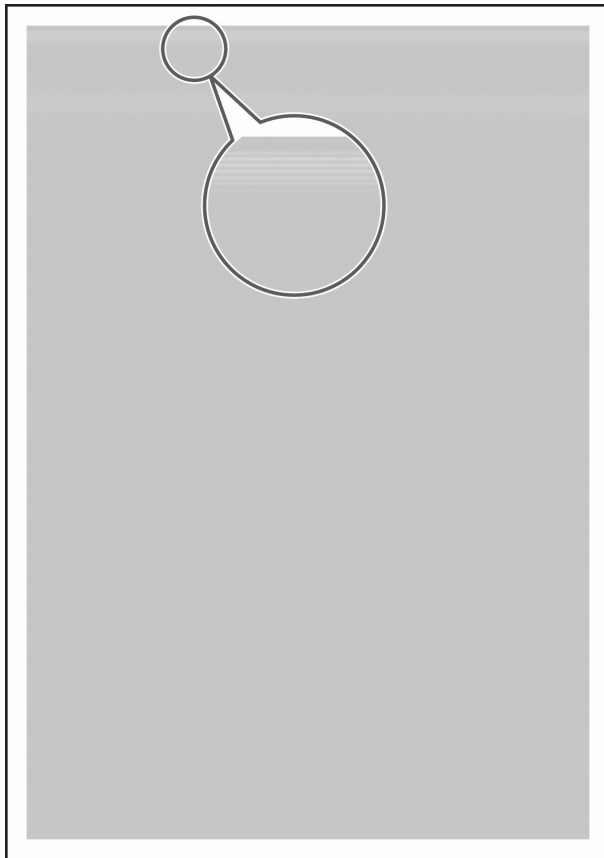

F-13-43

13.3.2.6.7 Soiling in the Form of a Ring


0006-2599

Cause

If, for some reason, fine particles (e.g., of oil) make their way inside a color developing assembly, electrical discharge is likely to occur between the metal particles on the surface of the developing cylinder and the photosensitive drum, causing soiling in the form of a ring.

Field Remedy

Shift SW1 SW2 (DIP switch) on the HV2 PCB to ON. (At time of shipment, these switches are kept to OFF.)

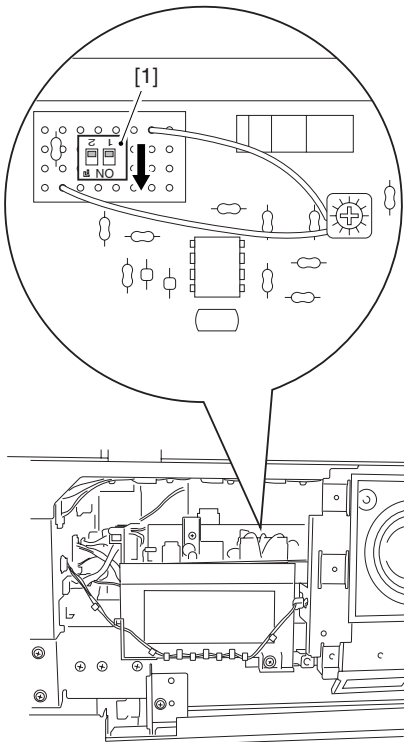

F-13-44


Description

If SW1 is OFF and SW2 is OFF, the AC component of the developing bias is 1,800 Vp-p (default).

If SW1 is ON and SW2 is ON, the AC component of the developing bias is 1,600 Vp-p.

A decrease in the AC component of the developing bias will limit the increase in potential occurring instantaneously between the metal particulars on the developing cylinder and the surface of the photosensitive drum, thus making electrical discharge less likely.

Image Sample

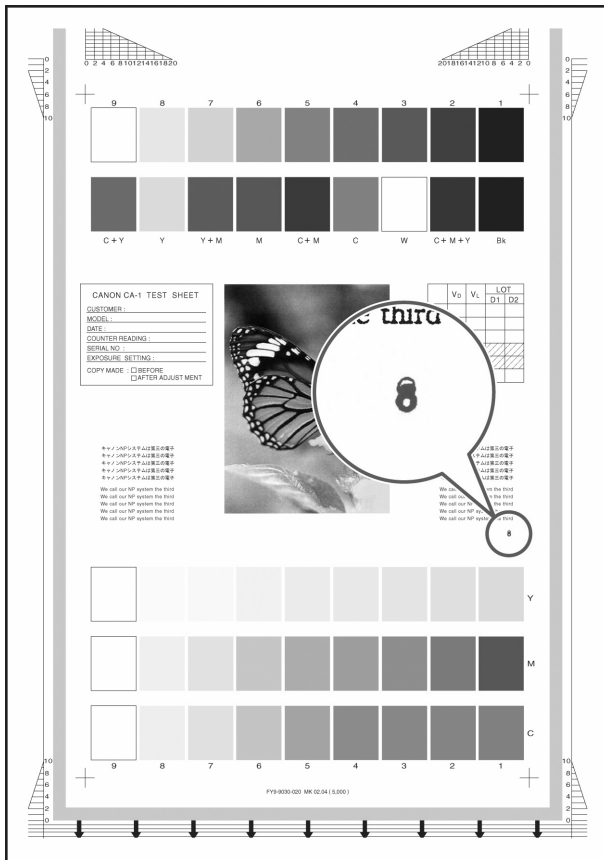

F-13-45

13.3.2.7 Ghost / Memory

13.3.2.7.1 Ghost Caused by a Bend on the ITB Cleaning Blade

0005-6902

Cause

The ITB cleaning blade can bend when used in a high humidity environment, causing a ghost image.


Field Remedy

Replace the ITB cleaning blade.

Description

This symptom tends to be conspicuous when an image with a high color ratio is copied.

Image Sample

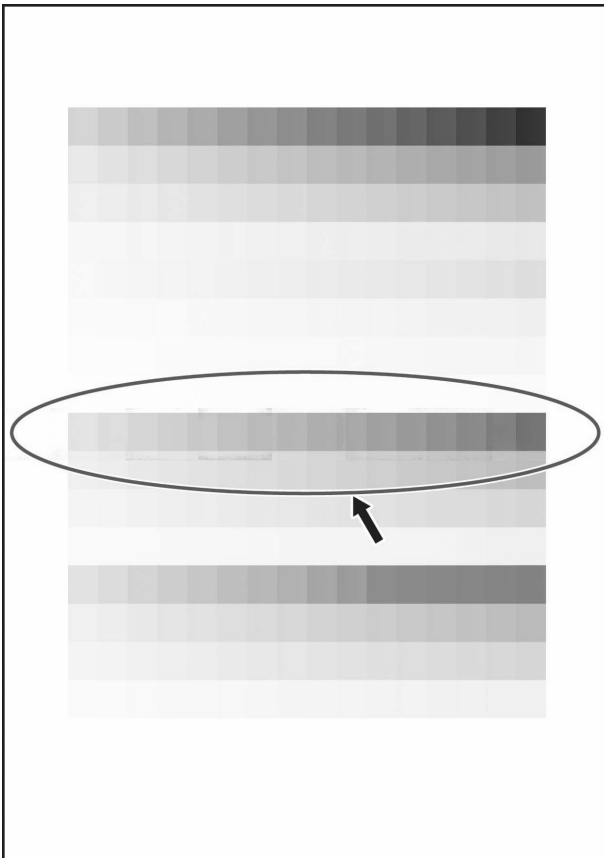

F-13-46

13.3.2.8 Faulty Color Reproduction

13.3.2.8.1 Faulty Color Reproduction Caused by an Error in Primary Transfer ATVC

0006-1872

Cause

If the process unit is left alone for a long time in a high humidity environment, the primary transfer ATVC control mechanism that goes on when the main power is turned on can cause electrical discharge between the primary transfer roller and the primary transfer static eliminator. The discharge can cause the resistance of the primary transfer roller to fluctuate. Malfunction of the primary transfer ATVC control mechanism can lead to an error associated with E020 or can adversely affect color reproduction.

Field Remedy

Use the following service mode item to execute primary transfer ATVC controller mechanism after idle rotation of the primary transfer roller. Execute this service mode item immediately after the control panel screen comes on (i.e., when the main power is turned on).

COPIER>FUNCTION>MISC-P>ITR-ROT

Description

The symptom is either an error associated with E020 or faulty color reproduction. Details are as follows:

-E020 Error

E020-xx90

E020-xx91

E020-xxD2

E020-xxDC



xx represents the color developing assembly suffering the error in question.

00= no specific color

01= Y

02= M


03= C

-Color Reproduction Fault

For instance, the faulty reproduction shows up as any of the following 3 types of image faults:


Image Sample

-image of a specific color is too light

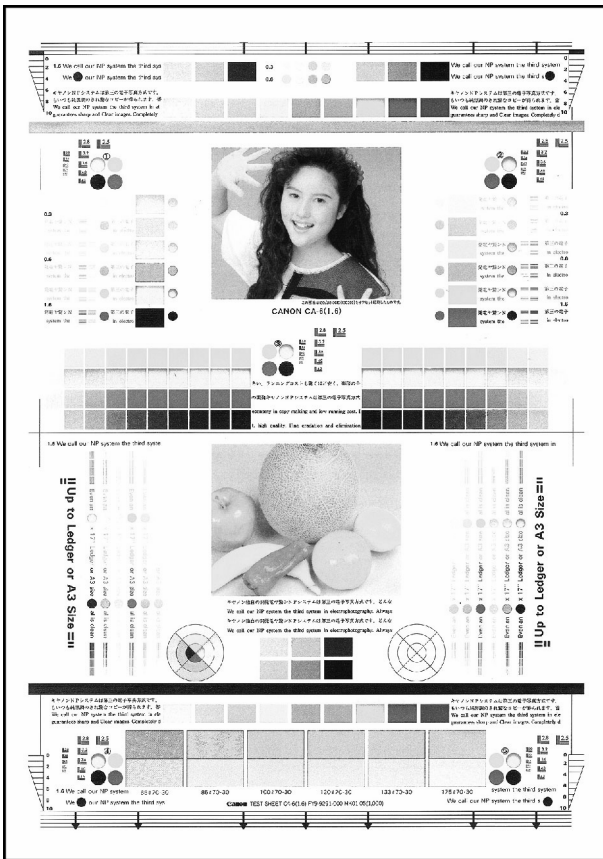

F-13-47

-image of a specific color is too dark

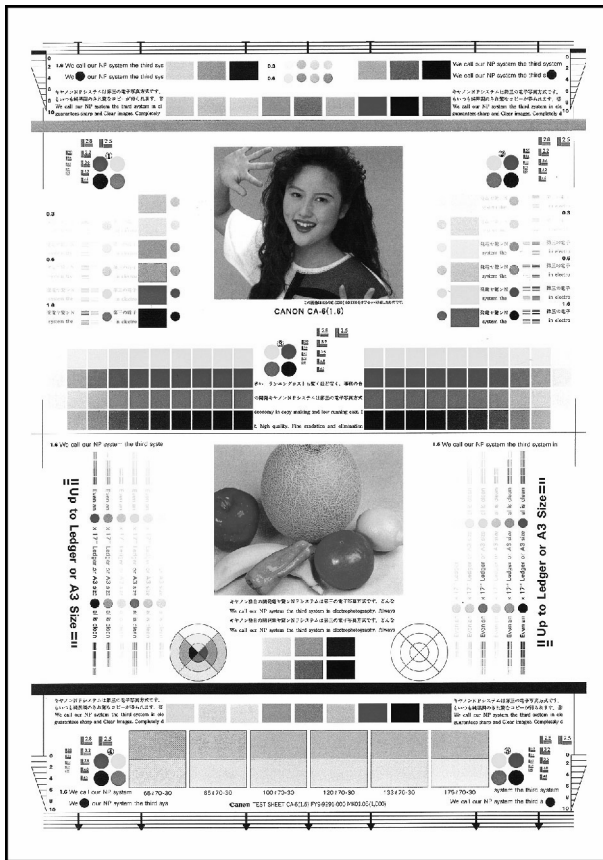

F-13-48

-image is too light overall



F-13-49

13.3.3 Faulty Feeding

13.3.3.1 Wrap

13.3.3.1.1 Wrapping Around the Pressure Roller / Oil Traces / Separation Claw Traces / Wrinkle Traces

0005-6299

Description

- wrapping around the pressure roller occurs when fixing on the 2nd side of a double-sided print is under way
- difference in color caused by oil along the leading edge of the 1st side of a double-sided print (wavy, unevenness in gloss) [1]
- traces of separation claws along the leading edge of the 1st side of a double-sided print (lines opposite the separation claws) [2]
- traces of wrinkles of the pressure roller on the 1st side of a double-sided print [3]

However, of the foregoing, the symptom may not occur or may not be noticeable because of the degree of the cause.

The symptom tends to occur more readily for the following:

- paper of 80 g or less is used on a non-Japanese machine
- the fixing roller or the pressure roller has deteriorated (tending to occur more readily after 100,000 prints)
- a solid image (mono-or 2-color) is made (with the symptom being absent in the case of a mono solid image)
- double-sided prints are made

Cause

As the pressure roller is used more and more, the rubber layer starts to soften, gradually increasing the nip width and, as a result, causing the symptom to occur more readily.

Field Remedy

Change the setting of the following from '0' (default) to '1' or '2' in service mode:
COPIER>OPTION>BODY>FXLW-TMP.

Memo:

1. The effects are greater when '2' is set; however, a drop in latitude in fixing will be a trade-off when heavy paper is used.
- 2: Be sure to return the setting to its initial value after replacing the fixing roller or the pressure roller. If the user seldom uses heavy paper and is likely to complain each time the roller starts to wear out, the setting need not be changed back to its initial value.
3. if the fixing roller or the pressure roller has been used for more than 150,000 prints, replacement of the roller is recommended.

Memo:

The pressure roller temperature control target is changed as follows to suit the setting selected in service mode:

- 1: 160 deg C
- 2: 150 deg C

Note 1:


The effects will be larger if it is set to '2'; however, a drop in latitude of fixing will be a trade-off when heavy paper is used.

Not 2:

Be sure to return the setting back to its initial value when you have replaced the fixing roller or the pressure roller. (If the user seldom uses heavy paper and is likely to complain each time the roller starts to wear out, the setting need not be changed back to its initial value.

Note 3:

If the fixing roller or the pressure roller has been used for more than 150,00 prints, replacement of the roller is recommended.

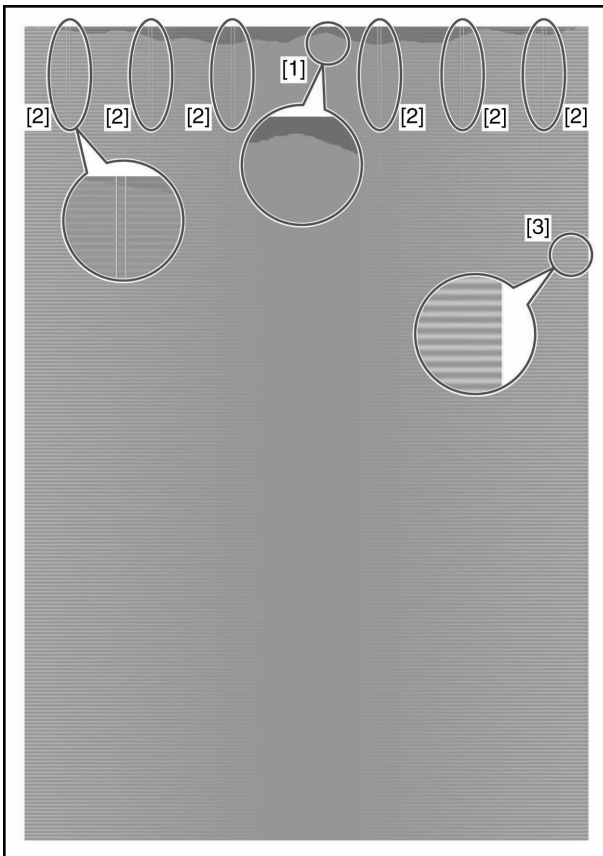

F-13-50

13.3.4 Malfunction

13.3.4.1 Malfunction/Faulty Detection

13.3.4.1.1 Fixing Web Displacement / 0A15/020D Jam Code

0005-6084

Cause

If you open the front cover in any of the following conditions and turn the fixing jam removal knob, the web will likely become slack and displaced:

- during last rotation after output ("Printer is warming up..." is indicated.)
- during fixing idle rotation at time of warm-up
- during printing

When the slack starts to increase and the belt becomes trapped by the fixing roller, the following jam can occur:

- 0A15 (fixing inlet sensor power-on jam)
- 0200 (reversal sensor stationary jam)

Field Remedy

Take up the fixing web so that it is not slack.

Observe the following, and advise the user on points of importance:

Note:


-Web retaining pad is used to keep the web in place so that the web will not become slack when the fixing roller is rotated in reverse for jam removal.

The web retaining pad is mounted to the same shaft as the cam used to move the outside heating roller to and from the fixing roller: while the outside heating roller is in contact with the fixing roller, the pad is away from the web; on the other hand, when the outside heating roller is away from the fixing roller, the pad is used to keep the web in place.



The machine indicates the message "Printer is warming up..." on its LCD while it executes last rotation after printing. While the message is on the LCD, the fixing roller is under temperature control, and the outside heating roller is in contact with the fixing roller, i.e., the web retaining pad is away from the web. If you open the front cover and turn the fixing assembly release knob, the web will become slack and possibly displaced. Do not open the front door while the message is on the LCD. If you must, do not turn the fixing assembly releasing knob.

The web retainer is also away from the web when you force the front cover to open while printing or fixing idle rotation is under way during warm-up: be sure to keep this in mind during service work.

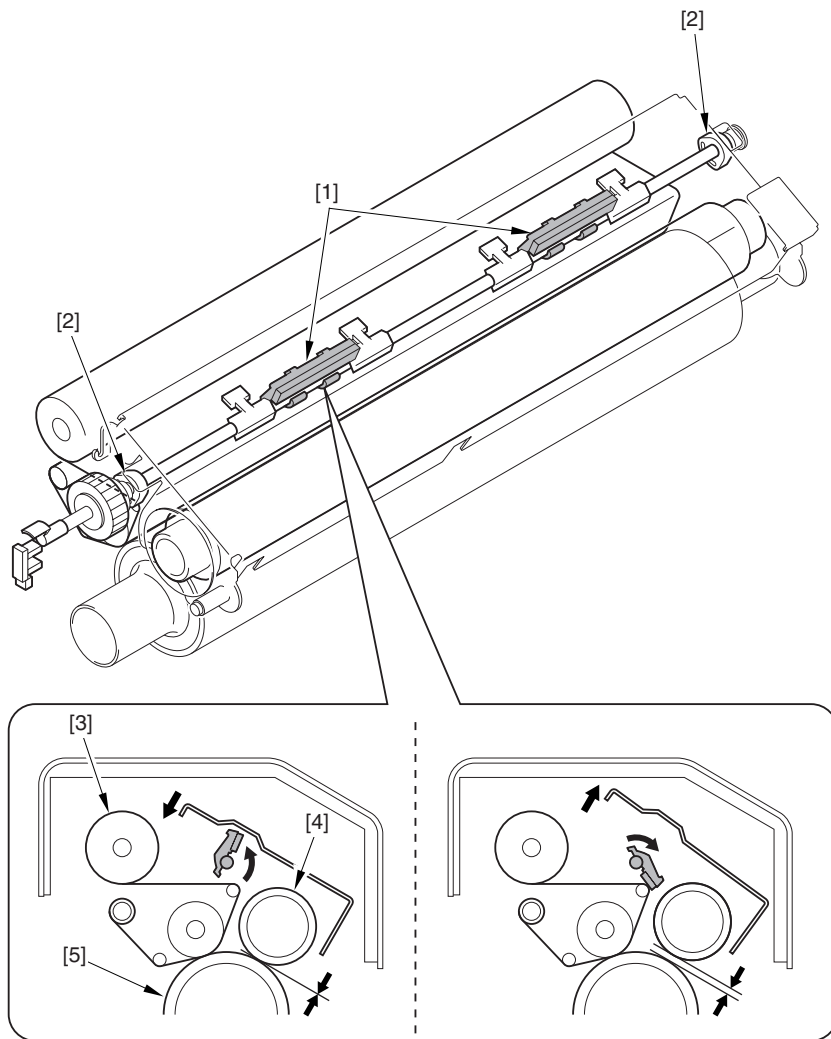

F-13-51

- 1 Web retaining pad
- 2 Cam
- 3 Cleaning web
- 4 Outside heating roller
- 5 Fixing roller

13.3.4.2 Noise

13.3.4.2.1 Abnormal Noise from the Rotating Rotary

0005-4270

Cause

During assembly work after servicing the machine, the controller box plate [1] is likely to have been screwed toward the rear of the plate of the DC controller box [2], thus imposing pressure on the rotary motor.


Field Remedy

Correct the location at which the plates are screwed in place.

The figure shows the correct location.

top: controller box plate [1]

bottom: plate of the DC controller box [2]

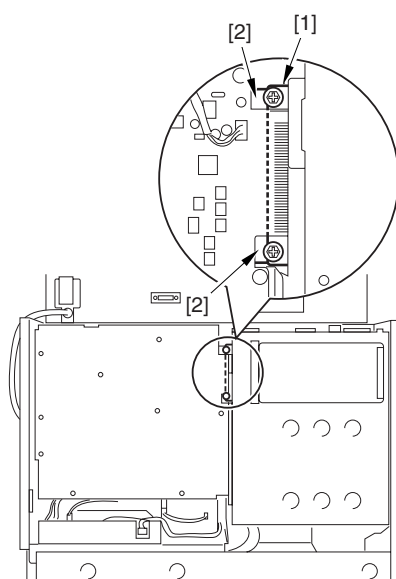

F-13-52

13.3.4.3 User Warning Message

13.3.4.3.1 Message [Check the network connection.] / Message [Check the TCP/IP.]

0006-4895

[Case in the field]

Field Remedy

If the host machine is not connected to network, follow the steps below:

Change the service mode setting so as not to display the network error messages.

In service mode (LEVEL 2) [COPIER> Option> BODY> NWERR-SW], change the set value from "1" to "0", and then turn the control panel switch off and turn the main power switch OFF/ON.

0: not display

1: display (value at time of factory shipment/value after RAM clear)

13.3.4.3.2 Frequent DF Reading Glass Cleaning Message

0004-9000

The following is a list of causes and field remedies associated with the symptom:

Cause

- A. dust or dirt on the reading glass; the reader unit detects dirt to issue the cleaning message, and it does not detect stray dust
- B. dirt on the read roller, or dirt on the white plastic film
- C. scratch on the reading glass: or dirt resisting cleaning
- D. scratches in radial direction of the red roller, or dirt remaining after cleaning
- E. dirt on the CCD

<Checking for Dirt on the CCD>

The presence of dirt on CCD cells will cause a line in the image in both stream reading and copyboard modes alike. If the particles are small, the reader unit will make up for their presence, removing lines from the output image. Set '0' to the following service mode item, and check the output image for a line; thereafter, be sure to change the setting back to its initial value:

COPIER>OPTION>BODY>DFDST-L1 (level 1)

Field Remedy

- A. Clean the reading glass using cleaning tissue or cleaning oil.
- B. Dry wipe the read roller/white plastic film; or, use alcohol to clean them.

Memo:

If the machine is installed in a dusty place, cleaning it on a periodical basis is desirable.

- C. Replace the reading glass.
- D. Replace the read roller.

Memo:If you have replaced the rear roller, be sure to perform the following:

- white level adjustment
- DF height adjustment
- E. Replace the CCD unit.

13.3.4.3.3 Frequent DF reading Glass Cleaning Message (user requesting disabling of the message) 0004-9024

This message is not issued in response to the presence of dirt inside the machine (i.e., it is not used to alert the user to an error condition). Nevertheless, if the user requests disabling the message, go through the following:

Field Remedy

- A. Change the level used to detect dust.

Decrease the level of detection (level 1) in service mode: COPIER>OPTION>BODY>DFDST-L in increments of '5'.

Memo:

A decrease in the level will decrease the level of correction executed for the presence of dust, possibly leaving a light black line in the output image. Setting it to '0' will disable dust detection all together.

- B. Change the setting of the cleaning message in service mode:

COPIER>OPTIONAL>BODY>DFDST-L1 (level 1).

Memo:

The cleaning message may be disabled in service mode, but the machine will still check for dust; varying the read position according to the result of detection.

13.3.5 Error Code

13.3.5.1 E013-0001 Error Code: How to clear waste toner full detection 0006-4907

[**Manual-related**]

Field Remedy

After replacing the waste toner case or removing the waste toner from the case, clear the toner counter in service mode as follows:

Select [COPIER> Counter> MISC> WST-TNR], press "C" (Clear key) to clear the counter, and turn the power OFF/ON.

Description

E013-0001 can be displayed when the waste toner case has become full.

13.3.5.2 E013-0001 Error Code: How to change the waste toner detection timing 0006-4909

[**Manual-related**]

Description

The waste toner detection timing is determined by the total page counts specified in service mode below:

1. Page counts until the warning message is indicated
2. Page counts between the warning message and E013 indication

Field Remedy

Follow the steps below if you want to change these page counts:

1. Page counts until the warning message is indicated

In service mode [COPIER> Adjust> MISC> WT-FL-LM], select any number from "0" through "4".

0: 80,000 / 1: 140,000 / 2: 210,000 (default) / 3: 320,000 / 4: 460,000

2. Page counts between the warning message and E013 indication

In service mode [COPIER> Adjust> MISC> WT-ER-LV], select any number from "0" though "3".

0: 1 / 1: 20,000 / 2: 40,000 (default) / 3: 60,000

13.3.5.3 E020/E021/E061/E070/E078/E820 Error Code / Poor contact of connectors around process unit 0005-9975

For details of error codes, see the following:

E020-0080/E020-0180/E020-0280/E020-0380/E020-0090/E020-0190/E020-0290/E020-0091/E020-0191/E020-0291/E020-0092/E020-0192/E020-0292/E020-0392/E020-00A0/E020-01A0/E020-02A0/E020-03A0/E020-00A1/E020-01A1/E020-02A1/E020-03A1/E020-00A2/E020-01A2/E020-02A2/E020-03A2/E020-00A3/E020-01A3/E020-02A3/E020-03A3/E021-0001/E021-0002/E061-0005/E061-0007/E070-0000/E070-0001/E070-0002/E070-0003/E078-0001/E820-0020

Cause

When drawing out the Pkit as part of servicing work, you need to disconnect and then connect the connectors. When repeated, their internal pins can start to suffer from poor connection, resulting in wrong operation/detection.

Description


A break in the harness can occur when the harness is disconnected/connected about 30 times.

The following is a list of harnesses that are subject to a break with descriptions of symptoms expected when a break occurs.


T-13-9

Name (part No.)		
Pin No.	Connection load (notation)	Expected error condition (symptom in response to error)
[1]ITB cleaner harness (FM2-0946) connector: J214L		
1/2/3/4	ITB cleaner shift motor (M21)	E078-0001 The motor stops.
5/6/7	ITB cleaning HP sensor (PS23)	E078-0001 The sensor fails to operate
8/9/10	process unit cooling fan (FM7)	E820-0002 The fan stops. The machine fails to detect rotation.
11/12	post-charging assembly cleaning motor (M27)	image fault (vertical line) The motor stops.
[2]PKIT harness (FM2-0947) connector: J201LA/J201B		
1/2	primary charging wire cleaning motor (M26)	image fault (vertical line) The motor stops.
3/4/5	color toner cartridge sensor (PS26)	message calling for the bottle. The absence of a bottle is wrongly detected in the presence of a bottle.
		The presence of a bottle is wrongly detected in the absence of a bottle.
6/7	pre-exposure LED (LED1)	image fault (solid black) E061-0005 The LED fails to go on.
8/9/10/11	color toner level sensor (PS25)	message calling for replacement of toner The absence of toner is wrongly detected in the presence of toner.
		image fault (low density) E020-**92 The presence of toner is wrongly detected in the absence of toner.
12/13/14	black toner level sensor (TS1)	2-min supply error E020-00FF black developing assembly excess toner supply The absence of toner is wrongly detected in the presence of toner.
		black developing assembly without toner -> image fault (low density) The presence of toner is wrongly detected in the absence of toner.
15/16	NC	
1/2	developing rotary locking solenoid (SL10)	E021-0002 The solenoid fails to operate
3/4/5	developing rotary solenoid sensor (PS8)	E021-0002 The sensor fails to operate.
6/7/8	developing rotary HP sensor (PS19)	E021-0001 The sensor fails to operate.

9-14	ATR sensor (PS4)	E020-**A0 E020-**A1 E020-**A2 E020-**A3 An error sensor value is detected
15/16	ATR sensor shutter solenoid (SL12)	E020-**A0 E020-**A1 E020-**A2 E020-**A3 A sensor error value is detected.
[3]ITB harness (FM2-0949) connector: J261L/J267L		
1/2	patch image read sensor shutter solenoid (SL11)	E020-**81 E020-**90 E020-**91 A sensor error value is detected
3-8	patch image read sensor (PS2)	E020-**81 E020-**90 E020-**91 A sensor error value is detected
1/2/3	ITB HP sensor B (PS30)	E070-00** The sensor fails to operate.
4/5/6	ITB sensor A (PS1)	E070-00** The sensor fails to operate.
[4]Hopper harness (FM2-0950) connector: J301L		
1/2	hopper stirring motor (M23)	black developing assembly without toner -> image fault (low density) The motor stops.
3/4/5	hopper inside toner level sensor (TS2)	2-min supply error (reset by opening/closing the door) hopper excess toner supply The absence of toner is wrongly detected in the presence of toner.
		hopper without toner -> black developing assembly inside without toner The job stops. The presence of toner is wrongly detected in the absence of toner.
6/7	black toner supply motor (M25)	hopper without toner -> black developing assembly inside without toner The job stops. The hopper is without toner.
8/9/10	hopper open/closed sensor (PS28)	message calling for replacement of the bottle, not permitting recovery. remains closed.
		The black cartridge motor stops. remains closed
[5]Poteantial sensor harness (FL2-0986) connector: J407L		
1-6	potential sensor	E061-0007 An error potential level is detected.

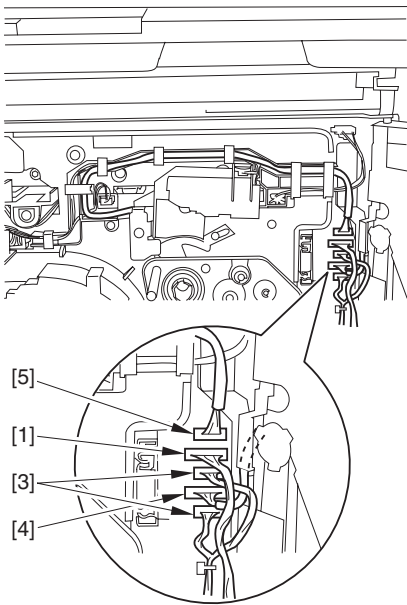

F-13-53

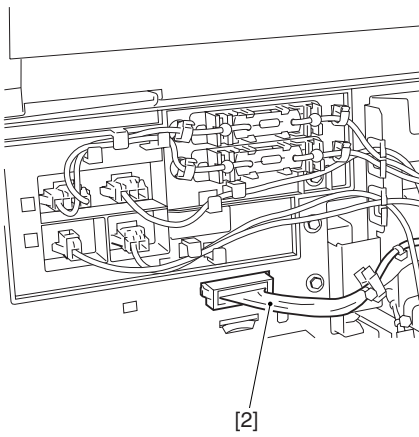

F-13-54

Field Remedy

Replace the connector with the harness intact.

13.3.5.4 E020-03A0/E020-01A2 Error Code


0005-6300

Description

This symptom tends to occur when the connection has been disconnected and then connected a number of times (30 times or more).

Cause

The pins inside the connector tend to wear out when the connector [1] is disconnected and then connected a number of times (left of the process unit).

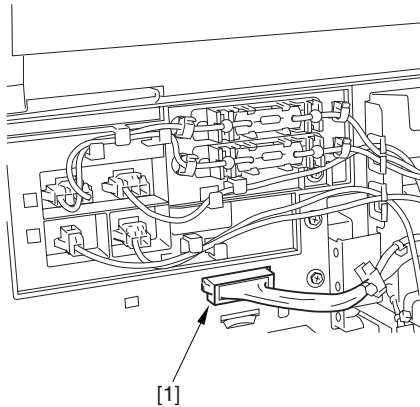

F-13-55

Field Remedy

Replace the connector together with its harness.

13.3.5.5 E061-0001 Error Code


0005-4274

Cause

The grounding wire [2] of HV1 [1] has poor contact.

Field Remedy

Connect the grounding wire correctly.

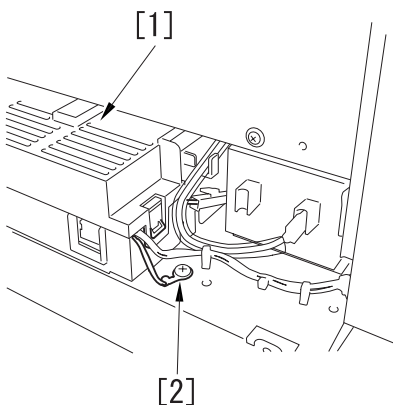

F-13-56

13.3.5.6 E070-0102 Error Code

0005-7223

Description

This symptom can occur when paper is placed in the manual feed tray in a low humidity environment and, as a result, the machine is subjected to static noise.


Cause

If the harness [1] connected to the DC controller PCB is away from the side plate [2] of the DC controller box, wrong detection (E070-0102) of the ITB home position tends to occur easily because of noise.

Field Remedy

When mounting the DC controller PCB or the DC controller box, be sure to connect the harness to the DC controller PCB as follows:

- 1) Connect the connector of the harness [1] first, then the other harness [3].
- 2) Fix the harnesses [1] [3] in place using the wire saddle [4] so that the harness [1] is on the left side of the other harness [3].

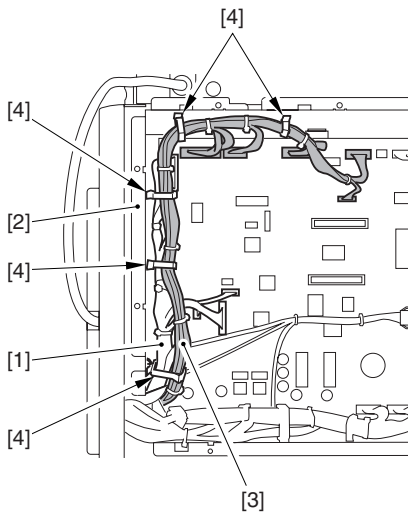

F-13-57

13.3.5.7 E070-0101/E070-0102/E070-0201/E070-0202/E070-0302 Error Code 0005-4278**Cause**


If the grounding spring found inside the intermediate transfer assembly becomes deformed, the resulting static noise can cause the ITB home position sensor to malfunction.

The grounding spring may have become deformed when a part inside the intermediate transfer assembly was replaced.


Field Remedy

Check the following contacts of the grounding spring. If any of these contacts is deformed and, thus, the electrical conductivity is poor, correct the spring:


- 1 contact with the end of the primary transfer upstream roller
- 2 contact with the edge of the plate
- 3 contact with a plate around the secondary transfer assembly
- 4 contact with a plate around the secondary transfer assembly
- 5 contact with the secondary upstream roller
- 6 contact with the secondary transfer inside roller
- 7 contact with the primary transfer downstream roller

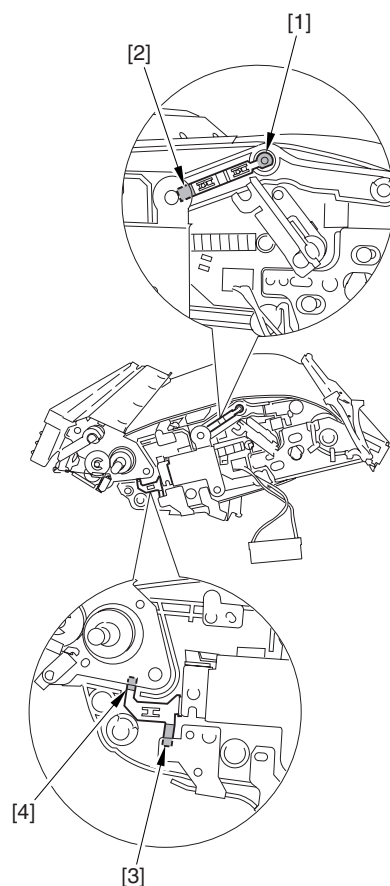

F-13-58

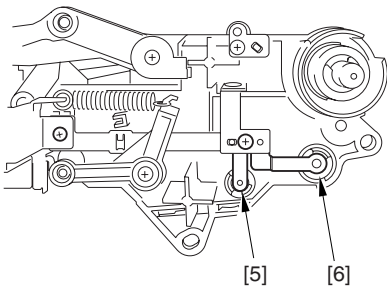

F-13-59

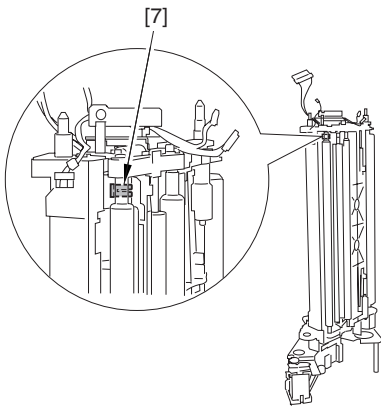

F-13-60

13.3.5.8 E542-8001 Error Code


0005-4273

Cause

If the saddle delivery tray door of the Saddle Finisher-R2 is not closed, the No. 2 tray will interfere with the door when it moves up/down, causing an error; particularly, the door fails to close at its rear.

Field Remedy

Close the saddle delivery tray door [1] (particularly, its rear) firmly. As necessary, advise the user on the importance of closing the door firmly.

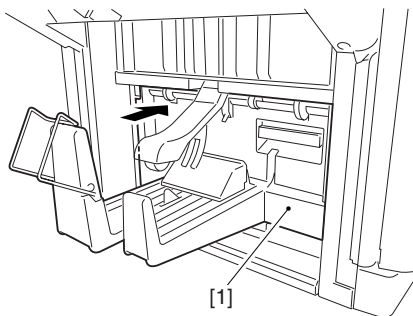

F-13-61

13.4 Outline of Electrical Components

13.4.1 Clutch/Solenoid

13.4.1.1 Clutches and Solenoids

0004-9524

<Reader Unit>



The reader unit does not use clutches or solenoids.

<Printer Unit>

T-13-10

Notation	Name			Connector No	
	Parts No.	I/O	PART-CHK	Fixing/feeding driver PCB	DC controller PCB
CL1	Color developing assembly clutch				
	FK2-0033		CL>1		J1109
CL2	Color toner supply clutch				
	FK2-0033		CL>2		J1109
CL3	Black developing assembly clutch				
	FK2-0033		CL>3		J1109
SL1	Manual feed pickup solenoid				
	FK2-0115		SL>1		J1107
SL2	Fixing web solenoid				
	FK2-0037		SL>2		J1118
SL3	Reversal shift solenoid				
	FM2-0584		SL>3	J1307/1303	J1119
SL4	Left deck confluence solenoid				
	FK2-0035		SL>4	J1307/1303	J1119
SL5	Delivery solenoid				
	FM2-0488		SL>5	J1308/1303	J1119
SL6	Deck (right) pickup solenoid				
	FK2-0116		SL>6		J1113
SL7	Deck (left) pickup solenoid				
	FK2-0116		SL>7		J1113
SL8	Cassette 3 pickup solenoid				
	FK2-0116		SL>8		J1114
SL9	Cassette 4 pickup solenoid				
	FK2-0116		SL>9		J1114

Notation	Name			Connector No	
	Parts No.	I/O	PART-CHK	Fixing/feeding driver PCB	DC controller PCB
SL10	Developing rotary locking solenoid				
	FK2-0117		SL>10		J1106
SL11	Patch image read sensor shutter solenoid				
	FK2-0100		SL>11		J1121
SL12	ATR sensor shutter solenoid				
	FK2-0100		SL>12		J1106

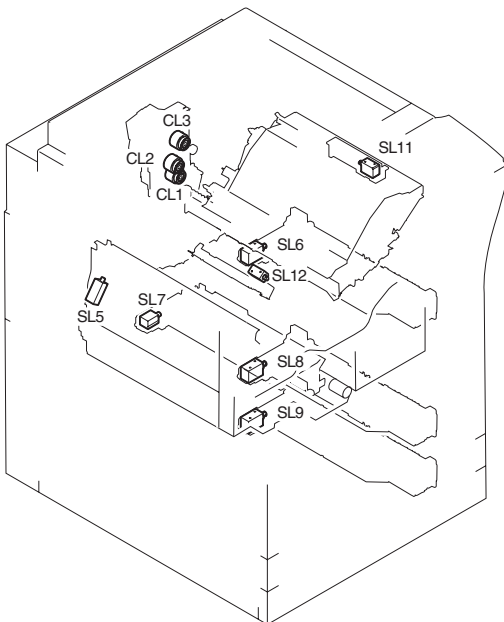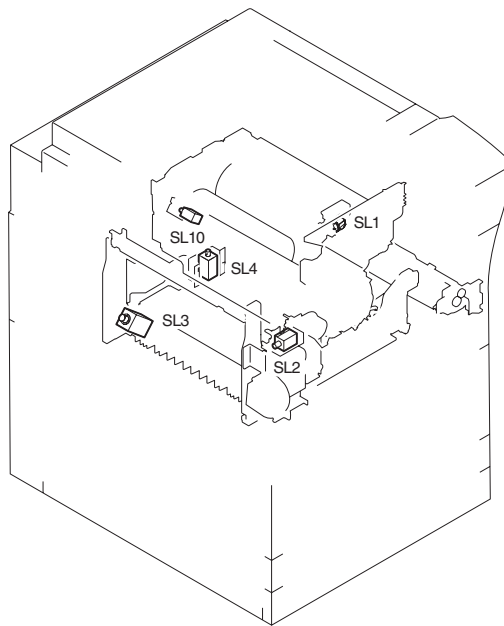

F-13-62

13.4.2 Motor

13.4.2.1 Motors

0004-9333


<Reader Unit>

T-13-11

Notation	Name		Description	
	Parts No.	I/O	PART-CHK	E code
M501	Scanner motor		drives the No. 1/No. 2 mirror base	
	FK2-0237			E202

T-13-12

Notation	Connector No.	
	I/F PCB	Reader controller PCB
M501	J306/307	J203

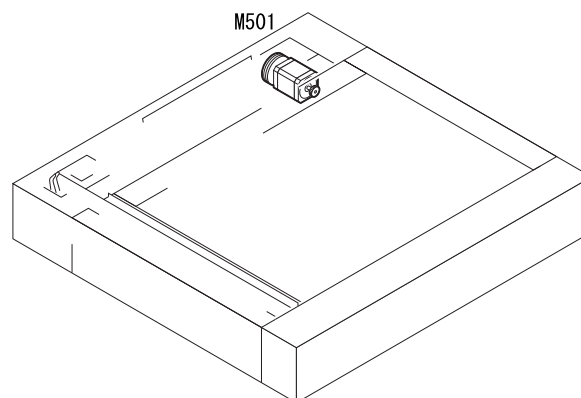

F-13-63

<Printer Unit>


T-13-13

Notation	Name		Description	
	Parts No.	I/O	PART-CHK	E code
M1	Polygon motor		drives the laser scanner	
	FM2-0394 (laser scanner assembly)		MTR>1	E110
M2	Drum/ITB motor		drives the photosensitive drum, photosensitive drum cleaner, intermediate transfer unit	
	FK2-0019		MTR>2	E012
M3	Developing motor		supplies color toner; drives the black/color developing assembly	
	FK2-0021		MTR>3	E023
M4	Fixing motor		drives the fixing assembly	
	FK2-0023		MTR>4	E014
M5	Developing rotary motor		drives the developing rotary	
	FK2-0025		MTR>5	E021
M6	Manual feed pre-registration motor		drives the manual feed pickup assembly, pre-registration front roller	
	FL2-0477		MTR>6	
M8	Registration motor		drives the registration roller	
	FL2-0476		MTR>8	
M9	Outside delivery motor		drives the outside delivery roller, curl-removing roller	
	FM2-1244		MTR>9	
M10	Duplexing reversal motor		drives the reversing 1/2 roller, duplexing inlet roller	
	FL2-0478		MTR>10	
M11	Duplexing left motor		drives the duplexing left roller	
	FK2-0032		MTR>11	
M12	Duplexing middle motor		drives the duplexing confluence roller	
	FL2-0479		MTR>12	
M13	Duplexing right motor		drives the duplexing right roller, duplexing outlet roller	
	FL2-0480		MTR>13	
M14	Right deck pull-off motor		drives the vertical path 1 roller	
	FL2-0583		MTR>14	
M15	Vertical path motor		drive the vertical path 3/4 roller	
	FL2-0583		MTR>15	

Notation	Name		Description	
	Parts No.	I/O	PART-CHK	E code
M17	Right deck pickup motor		Drives the right deck pickup assembly, vertical path roller 2	
	FL2-0582		MTR>17	
M18	Left deck pickup motor		drives the left deck pickup assembly	
	FL2-0581		MTR>18	
M19	Cassette pickup motor		drives the cassette 3/4 pickup assembly	
	FL2-0581		MTR>19	
M20	Secondary transfer outside roller shift motor		shifts the secondary transfer outside roller	
	FK2-0031		MTR>20	E077
M21	ITB cleaner shift motor		shifts the ITB cleaner	
	FK2-0155		MTR>21	E078
M22	Outside heating roller shift motor		shifts the outside heating roller	
	FK2-0153		MTR>22	E009/E079
M23	Hopper stirring motor		stirs toner (black) inside the hopper assembly	
	FK2-0015		MTR>23	E020
M25	Black toner supply motor		supplies toner from the black toner bottle	
	FK2-0015		MTR>25	E025
M26	Primary charging wire cleaning motor		drives the primary wire cleaner	
	FL2-0991		MTR>26	
M27	Pre-transfer charging wire cleaning motor		drives the pre-transfer wire cleaner	
	FL2-0991		MTR>27	
M28	Horizontal registration motor		drives the horizontal registration sensor	
	FM2-0163		MTR>28	E051
M29	Right deck lifter motor		drives the right deck lifter	
	FK2-0017			
M30	Left deck lifter motor		drives the left deck lifer	
	FK2-0017			
M31	Cassette 3 lifer motor		drives the upper cassette lifter	
	FK2-0016			
M32	Cassette 4 lifter motor		drives the lower cast lifter	
	FK2-0016			

T-13-14

Notation	Connector No.		
	Fixing/feeding assembly driver PCB	Pickup driver PCB	DC controller PCB
M1			J1104
M2			J1109
M3			J1109
M4			J1118
M5			J1127
M6			J1122
M8	J1311/1302		J1119
M9			J1122
M10	J1310/1302		J1119
M11	J1312/1302		J1119
M12	J1310/1302		J1119
M13	J1311/1302		J1119
M14		J1405/1402	J1115
M15		J1406/1402	J1115
M17		J1405/1402	J1115
M18		J1407/1402	J1115
M19		J1406/1402	J1115
M20	J1308/1302		J1115
M21			J1108
M22			J1118
M23			J1108
M25			J1108
M26			J1106
M27			J1108
M28	J1308/1302		J1119
M29		J1404/1403	J1116
M30		J1404/1403	J1116
M31		J1404/1403	J1116
M32		J1404/1403	J1116

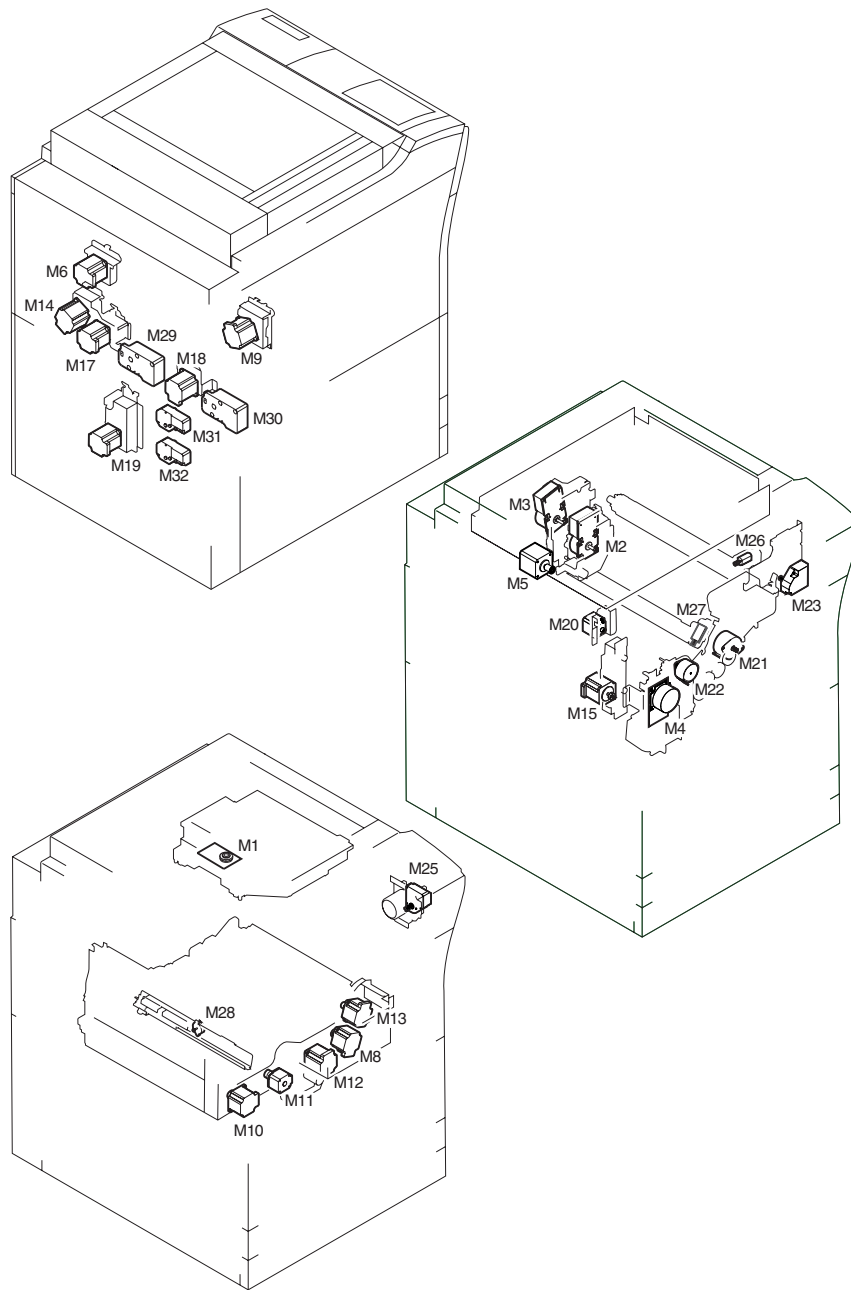

F-13-64

13.4.3 Fan

13.4.3.1 Fans

0005-0020


<Reader Unit>

T-13-15

Notation	Name		Function		
	Parts No.	I/O	PART-CHK	E code	
FM13	Reader cooling fan		cools the reader assembly		
	FH5-1061				

T-13-16

Notation	Connector No.	
	Interface PCB	Reader controller PCB
FM13	J313/J308	J202

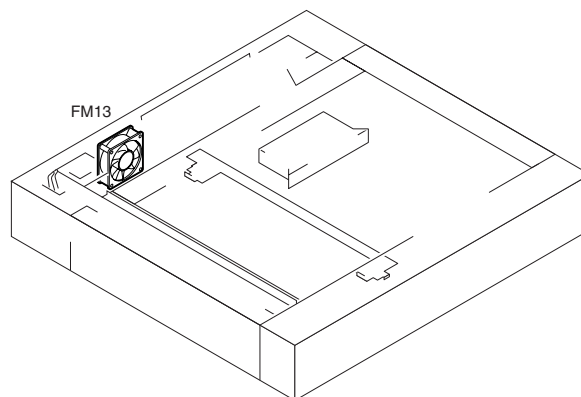

F-13-65

<Printer Unit>


T-13-17

Notation	Name		Description		
	Parts No.	I/O	PART-CHK	E alarm code	
FM1	primary charging suction fan		draws air from outside the machine to the primary charging assembly		
	FK2-0103			FAN-ON>1	E824-000
FM2	Primary charging assembly exhaust fan		discharges air from around the primary charging assembly		
	FK2-0124			FAN-ON>2	E824-0001
FM3	Feeding fan 1		keeps paper on the feed belt		
	FH5-1061			FAN-ON>3	330014
FM4	Feeding fan 2		keeps paper on the feed belt		
	FH5-1061			FAN-ON>4	330014
FM5	Fixing heat exhaust fan		discharges heat from the fixing assembly to the outside of the machine		
	FK2-0103			FAN-ON>5	E805-0003
FM6	Delivery cooling fan 1		cools the delivery assembly		
	FK2-0124	P003-10 1:half speed	1:ON	FAN-ON>6	330001
FM7	Process unit cooling fan		cools the process unit		
	FL2-1185			FAN-ON>7	E820-0002
FM8	Control cooling fan		cools the inside of the controller box		
	FH5-1033	MN-CONT>P001	1:ON		
FM9	Power supply cooling fan		cools the DC power supply PCB		
	FK2-0524			FAN-ON>9	E804-0007
FM10	Delivery cooling fan 2		cools paper being delivered outside the machine (only if equipped with a finisher)		
	FK2-0124			FAN-ON>10	330007
FM11	Feeding fan 3		keeps paper on the feed belt		
	FH5-1061			FAN-ON>3	330015
FM12	Feeding fan 4		keeps paper on the feed belt		
	FH5-1061			FAN-ON>4	330015

T-13-18

Notation	Connector No.			
	Fixing/feeding driver PCB	DC power supply relay PCB	DC controller PCB	Main controller PCB (main)
FM1			J1117	
FM2			J1109	
FM3	J1305		J1119	

Notation	Connector No.			
	Fixing/feeding driver PCB	DC power supply relay PCB	DC controller PCB	Main controller PCB (main)
FM4	J1305		J1119	
FM5			J1110	
FM6	J1308		J1119	
FM7			J1108	
FM8				J1113
FM9		J124		
FM10			J1110	
FM11	J1308		J1119	
FM12	J1308		J1119	

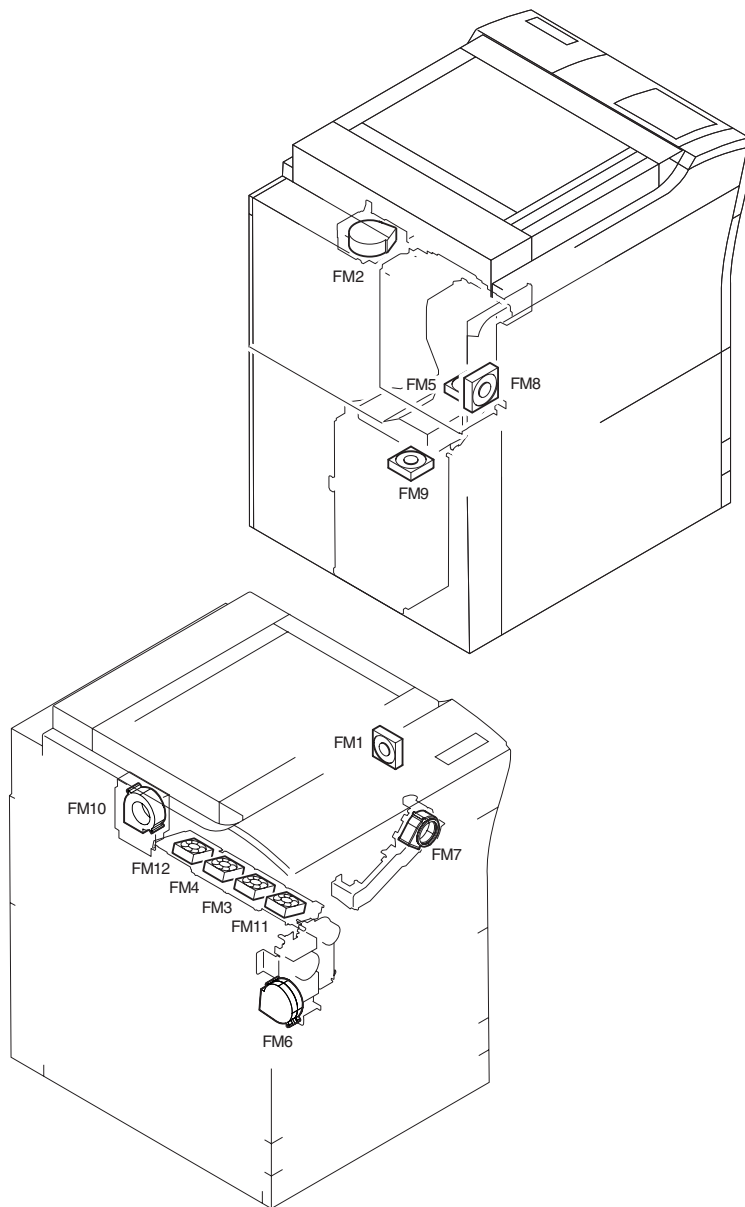

F-13-66

13.4.4 Sensor


13.4.4.1 Sensors

0005-0022

<Reader Unit>

T-13-19

Notation	Name		Description		
	Parts No.	I/O	Connector No.		Jam/E code
			Interface PCB	Reader controller PCB	
PS501	Scanner HP sensor		detects scanner home position		
	FK2-0149		J310/J308	J202	
PS502	ADF open/closed sensor 1		detects the state (open/closed) of the ADF		
	FK2-0149		J310/J307	J203	
PS503	ADF open/closed sensor 2		detects the timing of original size detection		
	FK2-0149		J310/J308	J202	

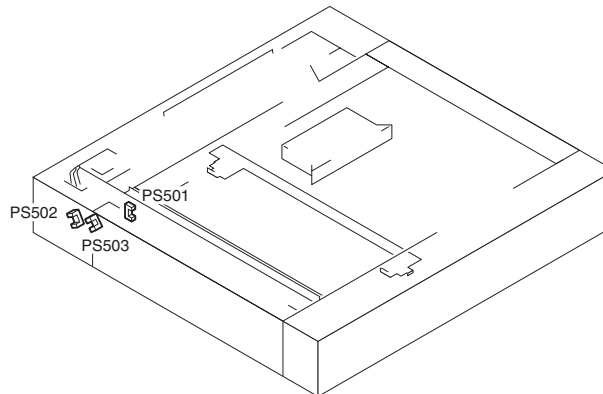

F-13-67

<Printer Unit>

T-13-20


Notation	Name		Description		
	Parts No.	I/O	Connector No.		Jam/E code
			Feed driver PCB	DC controller PCB	
PS1	ITB HP sensor A		detects the ITB home position		
	FK2-0161	P004-10 1:HP		J1121	E070
PS2	Patch image read sensor		checks the density of the toner on the ITB		
	FH7-7601			J1121	
PS3	Transparency sensor (front)		detects registration paper (if not transparency); detects transparency (if transparency)		
	FM2-0850 FM2-0851		J1305/J1302	J1119	xx0A, 0D90, 0D91, 0D92, 0D93
PS4	ATR sensor		checks the density of toner on the developing cylinder		
	FM2-0422			J1106	E020
PS5	Upper right cover open/closed sensor		detects the state (open/closed) of the upper right cover		
	FK2-0149	P002-0 0:open		J1117	
PS6	Manual feed paper sensor		Detects the presence/absence of paper from the manual feeder		
	FK2-0149	P007-14 1:paper present		J1107	
PS7	Last sheet sensor		identifies the last sheet from the manual feeder		
	FK2-0149	P007-15 1:paper present		J1107	
PS8	Developing rotary solenoid sensor		detects the activation of the developing rotary solenoid		
	FK2-0149	P004-12 1:ON(rotary lock)		J1106	
PS9	Registration sensor		detects registration paper		
	FK2-0149		J1305/J1302	J1119	xx0A, 0D91
PS10	Post-transfer sensor		detects paper after transfer		
	FK2-0149		J1305/J1302	J1119	xx0B (except stationary)
PS11	Fixing inlet sensor		detects paper at the fixing inlet		
	FK2-0149	P006-6 1:paper present		J1124	xx15 (stationary only)
PS12	Inside delivery sensor		detects inside delivery paper		
	FK2-0149		J1307/J1303	J1119	xx0C (except stationary)
PS13	Outside delivery sensor		detects outside delivery paper		
	FK2-0149	P006-7 1:paper present		J1110	xx0E
PS14	Reversal sensor		detects reversed paper		
	FK2-0149		J1307/J1303	J1119	xx0D (face-down delivery only)
PS15	Reversal vertical path sensor		detects reversal vertical path paper		
	FK2-0149		J1307/J1303	J1119	xx0F

Notation	Name		Description		
	Parts No.	I/O	Connector No.		Jam/E code
			Feed driver PCB	DC controller PCB	
PS17	Duplexing left sensor		detects duplexing left paper		
	FK2-0149		J1307/J1303	J1119	xx11
PS18	Duplexing confluence sensor		detects duplexing confluence paper		
	FK2-0149		J1307/J1303	J1119	xx12
PS19	Developing rotary HP sensor		detects developing rotary home position		
	FK2-0149			J1106	E021
PS20	Web length sensor		detects the remaining length of the fixing cleaning web		
	FK2-0149	P009-2 1:web absent		J1118	
PS21	Outside heating roller HP sensor		detects the outside heating roller home position		
	FK2-0149	P004-9 1:HP		J1118	E079
PS22	Secondary transfer outside roller HP sensor		detects the secondary transfer outside roller home position		
	FK2-0149		J1305/1302	J1119	E077
PS23	ITB cleaning HP sensor		detects the ITB cleaner home position		
	FK2-0149	P004-8 1:HP		J1108	
PS24	Horizontal registration sensor		detects duplexing horizontal registration		
	FH7-7196		J1307/J1303	J1119	E051
PS25	Color toner level sensor		detects the remaining level of color toner		
	FK2-0003	P009-9 1:toner present		J1106	
PS26	Color toner cartridge sensor		detects the presence/absence of a color toner cartridge		
	FK2-0004	P009-12 1:set		J1106	
PS28	Hopper assembly open/closed sensor		detects the state (open/closed) of the hopper assembly		
	FK2-0149	P009-13 0:open		J1108	
PS29	Transparency sensor (rear)		detects registration paper (if not transparency), detects a transparency (if transparency)		
	FM2-0850 FM2-0851		J1305/J1302	J1119	xx0A, 0D90, 0D91, 0D92, 0D93
PS30	ITB HP sensor B		detects the ITB home position		
	FK2-0161	P004-11 1:HP		J1121	
PS31	Vertical path 0 sensor		detects paper in the vertical path 0		
	FK2-0149	P006-1 1:paper present		J1107	xx09 (only if from right deck)
PS32	Vertical path confluence sensor		detects paper at the pickup vertical path confluence		
	FK2-0149	P006-0 1:paper present		J1117	
PS33	Right deck pickup sensor		detects paper from the right deck		
	FK2-0149	P007-9 1:paper present		J1113	xx01 (except stationary)


Notation	Name		Description		
	Parts No.	I/O	Connector No.		Jam/E code
			Feed driver PCB	DC controller PCB	
PS34	Right deck limit sensor		detects the right deck limit		
	FK2-0149	P005-9 1:limit state		J1113	
PS35	Right deck paper sensor		detects the presence/absence of paper in the right deck		
	FK2-0149	P005-8 1:paper present		J1113	
PS36	Right deck lifter sensor		detects the right deck lifter		
	FK2-0149	P005-10 0:pickup state(paper present)		J1113	
PS37	Right deck paper level sensor A		detects the remaining level of paper in the right deck		
	FK2-0149	P005-11 1:50% or more of capacity		J1111	
PS38	Right deck paper level sensor B		detects the remaining level of paper in the right deck		
	FK2-0149	P005-12 1:50% to 25% of capacity		J1111	
PS39	Right deck sensor		detects the presence/absence of the right deck		
	FK2-0149			J1110	
PS40	Left deck pickup sensor		detects pickup from the left deck		
	FK2-0149	P007-8 1:paper present		J1113	xx02 (except stationary)
PS41	Left deck limit sensor		detects the left deck limit		
	FK2-0149	P004-1 1:limit state		J1113	
PS42	Left deck paper sensor		detects paper in the left deck		
	FK2-0149	P004-0 1:paper present		J1113	
PS43	Left deck lifter sensor		detects the left deck lifer		
	FK2-0149	P004-2 0:pickup state(paper present)		J1113	
PS44	Left deck paper level sensor A		detects the remaining level of paper in the left deck		
	FK2-0149	P004-3 1:50% or more of capacity		J1111	
PS45	Left deck paper level sensor B		detects the remaining level of paper in the left deck		
	FK2-0149	P004-4 1:50% to 25% of capacity		J1111	
PS46	Left deck paper sensor		detects paper in the left deck		
	FK2-0149			J1110	
PS47	Left deck stationary paper sensor		detects stationary paper in the left deck		
	FK2-0149	P007-12 1:paper present		J1113	
PS48	Cassette 3 pickup sensor		detects pickup from the cassette 3		
	FK2-0149	P007-11 1:paper present		J1114	xx03 (except stationary)

Notation	Name		Description		
	Parts No.	I/O	Connector No.		Jam/E code
			Feed driver PCB	DC controller PCB	
PS49	Cassette 3 limit sensor		detects the cassette 3 limit		
	FK2-0149	P005-1 1:limit state		J1114	
PS50	Cassette 3 paper sensor		detects paper in the cassette 3		
	FK2-0149	P005-0 1:paper present		J1114	
PS51	Cassette 3 lifter sensor		detects the cassette 3 lifter		
	FK2-0149	P005-2 1:pickup state(paper present)		J1114	
PS52	Cassette 3 paper level sensor A		detects the remaining level of paper in the cassette 3		
	FK2-0149	P005-3 1:50% or less of capacity		J1117	
PS53	Cassette 3 paper level sensor B		detects the remaining level of paper in the cassette 3		
	FK2-0149	P005-4 1:10% or less of capacity		J1117	
PS54	Cassette 4 pickup sensor		detects pickup from the cassette 4		
	FK2-0149	P007-11 1:paper present		J1114	xx04 (except stationary)
PS55	Cassette 4 limit sensor		detects the cassette 4 limit		
	FK2-0149	P006-9 1:limit state		J1114	
PS56	Cassette 4 paper sensor		detects paper in the cassette 4		
	FK2-0149	P006-8 1:paper present		J1114	
PS57	Cassette 4 lifter sensor		detects the cassette 4 lifter		
	FK2-0149	P006-10 0:pickup state(paper present)		J1114	
PS58	Cassette 4 paper level sensor A		detects the remaining level of paper in the cassette 4		
	FK2-0149	P006-11 0:50% or less of capacity		J1117	
PS59	Cassette 4 paper level sensor B		detects the remaining level of paper in the cassette 4		
	FK2-0149	P006-12 0:10% or less of capacity		J1117	
PS60	Vertical path 1 sensor		detects paper in the pickup vertical path 1		
	FK2-0149	P006-2 1:paper present		J1113	xx08 (except stationary)
PS61	Vertical path 2 sensor		detects paper in the pickup vertical path 2		
	FK2-0149	P006-3 1:paper present		J1112	xx04
PS62	Vertical path 3 sensor		detects paper in the pickup vertical path 3		
	FK2-0149	P006-4 1:paper present		J1114	xx06
PS63	Vertical path 4 sensor		detects paper in the pickup vertical path 4		
	FK2-0149	P006-5 1:paper present		J1114	xx05


Notation	Name		Description		
	Parts No.	I/O	Connector No.		Jam/E code
			Feed driver PCB	DC controller PCB	
PS64	Lower right cover open/closed sensor		detects the state (pen/closed) of the lower right cover		
	FK2-0149	P002-1 0:open		J1112	
PS65	Drum HP sensor		detects the home position of the photosensitive drum		
	FK2-0149			J1109	

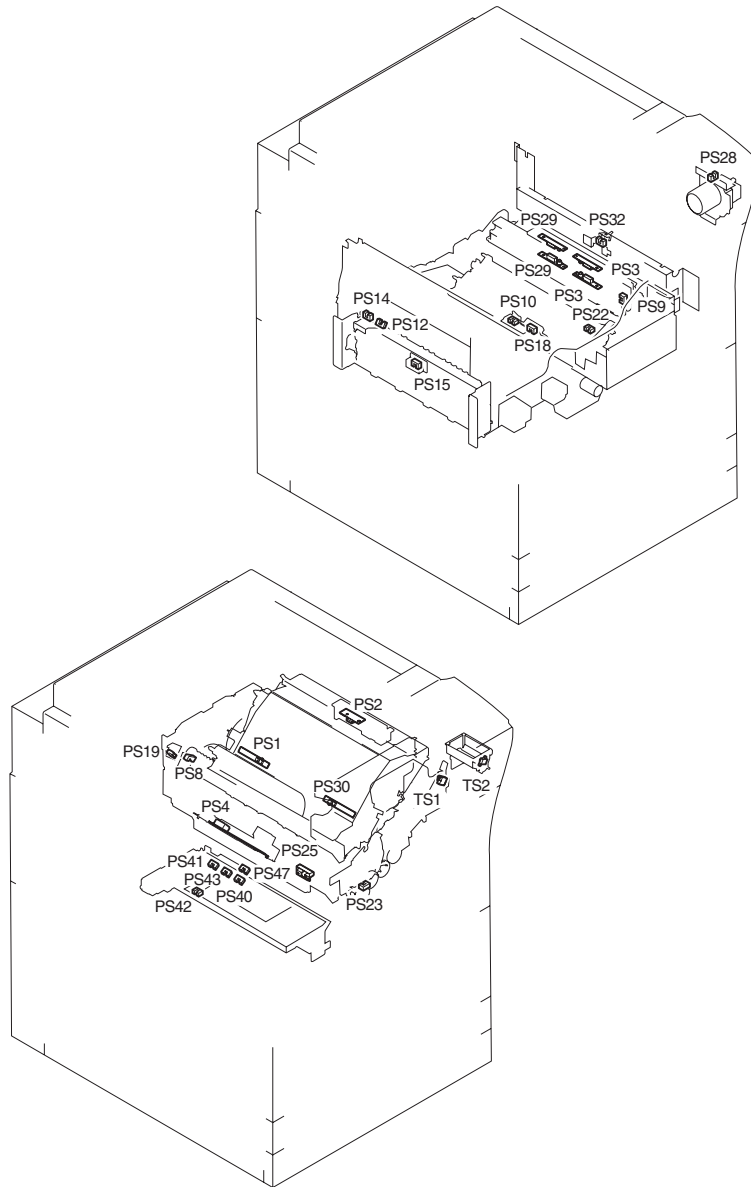

F-13-68

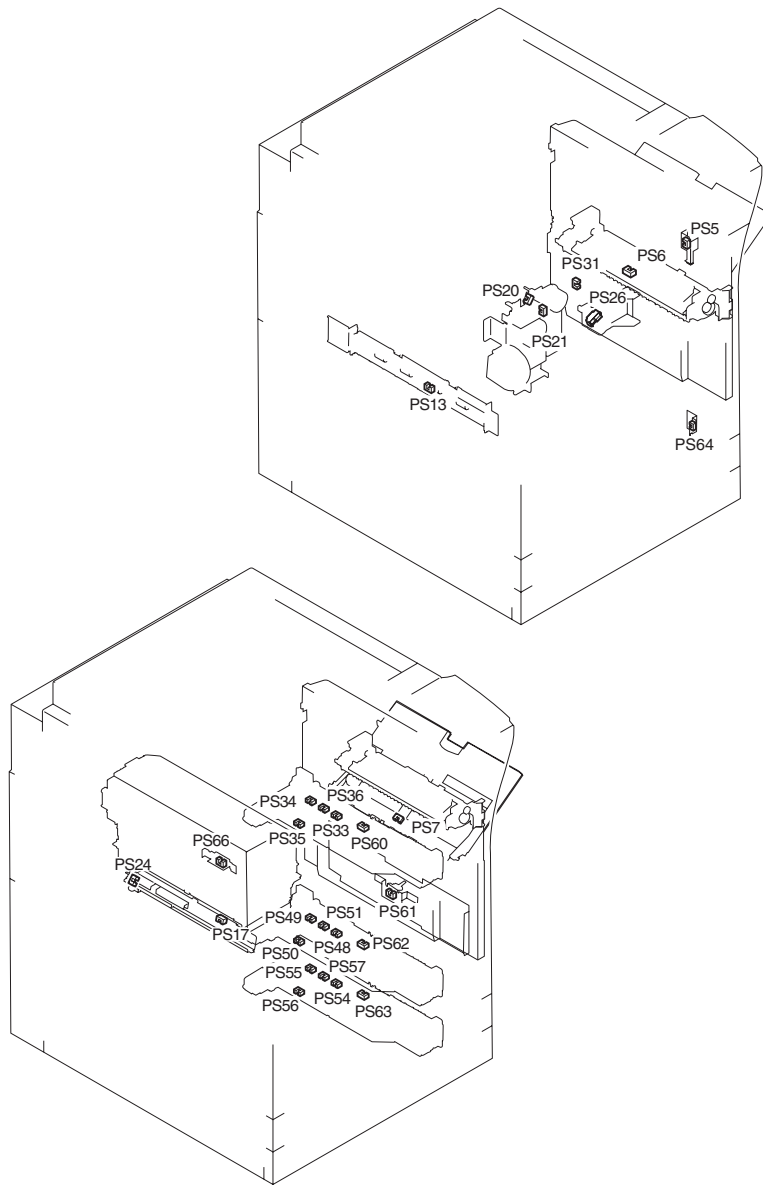

F-13-69

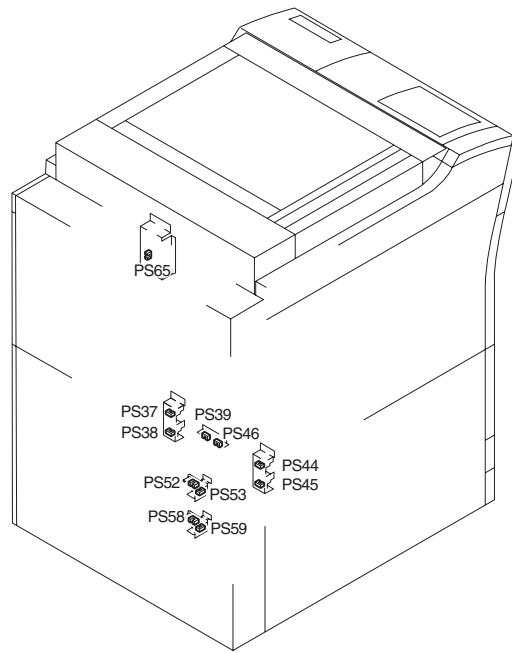

F-13-70

13.4.5 Switch

13.4.5.1 Switches

0005-0068


<Reader Unit>

The reader unit does not have any switch.

<Printer Unit>

T-13-21

Notation	Name		Description		
	Parts No.	I/O	COPIER>FUNCTION	Connector	E code
SW1	Main power switch		turns on/off the main power		
	FK2-0140				
SW2	Environment switch		turns on/off the drum heater, reader heater, cassette heater, deck heater		
	FM2-0844				
SW3	Cassette heater switch		turns on/off the cassette heater, deck heater		
	FM2-0844				
SW11	Upper right cover open/closed switch		detects the upper right cover		
	FM2-0960				
SW12	Front cover switch		detects the front cover		
	FM2-0398	P002-2 1:open			
SW13	Control key		control key		
	FG3-3004		INSTALL>KEY 0: do not recognize control key function 1: recognize control key function	J1208	
SW14	Waste toner lock detection switch		detects the state (locked/unlocked) of the waste toner screw		
	WC4-0241				E013-0002
SW15	Fixing/feeding lock switch		detects the state (locked/unlocked) of the feeder release lever		
	FC5-2496				

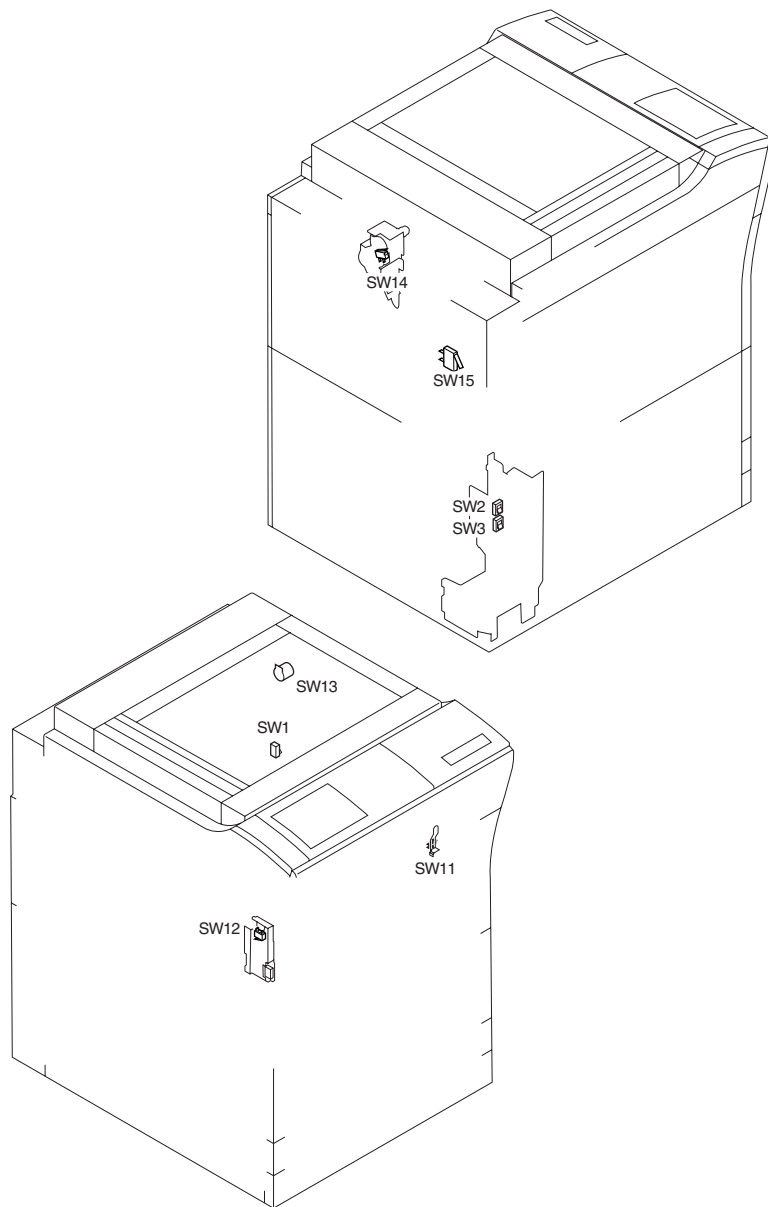


F-13-71

13.4.6 Lamps, Heaters, and Others

13.4.6.1 Heaters, Lamps, and Others

0004-3243

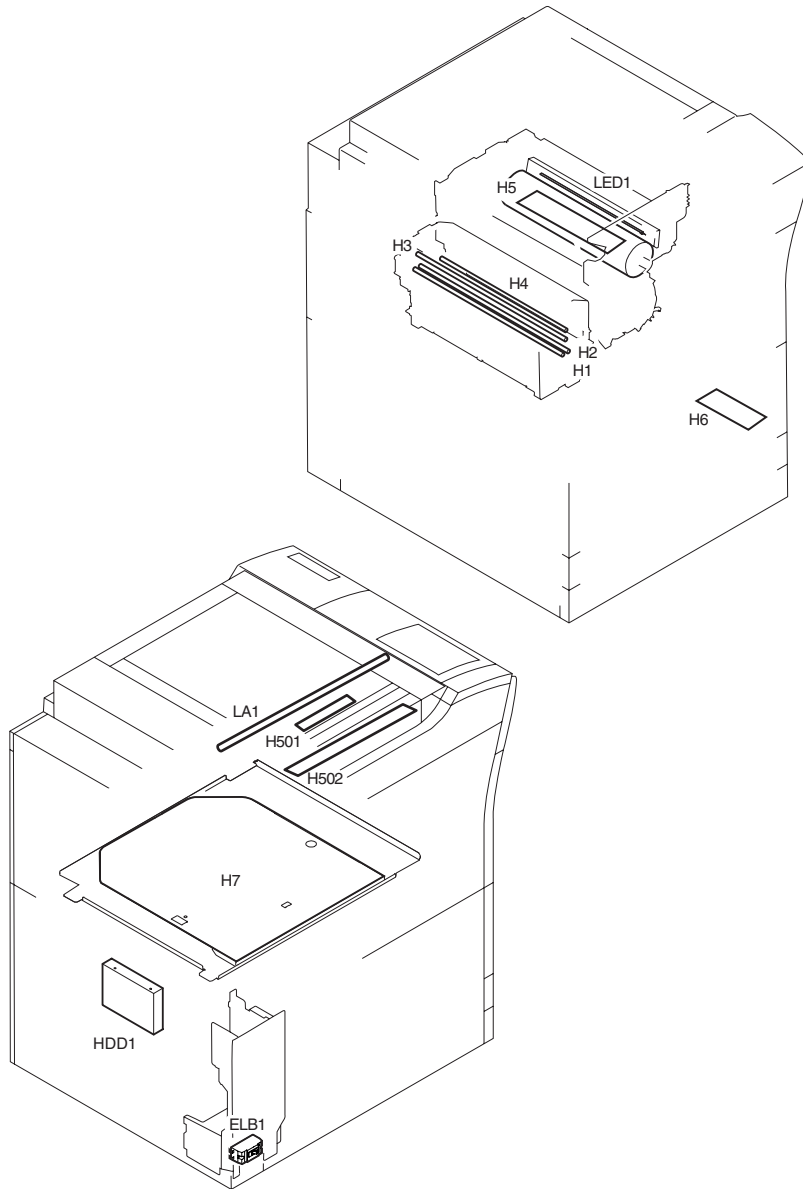

F-13-72

T-13-22

Notation	Name	Description	
	Parts No.	PART-CHK	E code
H1	Fixing main heater	main heater (controls the fixing roller temperature)	
	FK2-0043(100V)		E000,E001,E004
	FK2-0048(120V)		
	FK2-0053(230V)		
H2	Fixing sub heater	sub heater (controls the fixing roller temperature)	
	FK2-0044(100V)		E000,E001,E004
	FK2-0049(120V)		
	FK2-0054(230V)		
H3	Shift heater	shift heater (keeps the shift roller heated)	
	FK2-0045(100V)		E000,E001,E004
	FK2-0050(120V)		
	FK2-0055(230V)		
H4	Outside heating roller heater	fixing auxiliary heater (helps keep the fixing roller heated)	
	FK2-0047(100V)		E000,E001,E004
	FK2-0052(120V)		
	FK2-0057(230V)		
H5	Drum heater	prevents condensation on the drum	
	FL2-0419(100V)		
	FL2-0535(120V)		
	FL2-0536(230V)		
H7	Cassette heater	prevents absorption of moisture by paper inside the cassette	
	FH7-4740(100V)		
	FM2-0564(230V)		
H501	Lens heater	prevents condensation on the lens	
	FK2-0226(100V)		
	FK2-0229(230V)		
H502	Mirror heater	prevents condensation on the mirror	
	FK2-0227(100V)		
	FK2-0229(230V)		

Notation	Name	Description	
	Parts No.	PART-CHK	E code
ELCB1	Leakage breaker	leakage breaker	
	FK2-0151(100V)		
	FK2-0152(120V)		
	FK2-0150(230V)		
HDD1	Hard disk	holds programs, images	
	WM2-5208		E602,E606
LED1	Pre-exposure LED	removes residual charges from the photosensitive drum	
	FK2-0005		
LA1	scanning lamp	illuminates originals	
	FK2-0224	MISC-R>SCANLAMP	E225

T-13-23

Notation	Main controller PCB	Inverter PCB	Reader controller PCB	AC driver PCB	DC controller PCB
H1				J1803/1810	J1105
H2				J1803/1810	J1105
H3				J1804/1810	J1105
H4				J1804/1810	J1105
H5				J1805/1810	J1105
H7				J1806/1810	J1105
H501				J1807	-----
H502				J1807	-----
ELCB1				J1801	-----
HDD1	J2126/1204				
LED1					J1106
LA1		J602/601	J206		

13.4.7 PCBs


13.4.7.1 PCB

0004-9428

<Reader Unit>

T-13-24

Notation	Name	Parts No.	Description
[1]	Interface PCB	FM2-1102	communicates with the printer unit, ADF
[2]	Reader controller PCB	FM2-1101	controls the reader unit
[3]	CCD/AP PCB	FM2-0617 (CCD unit)	performs analog image processing
[4]	Inverter PCB	FK2-0225	drives the scanning lamp

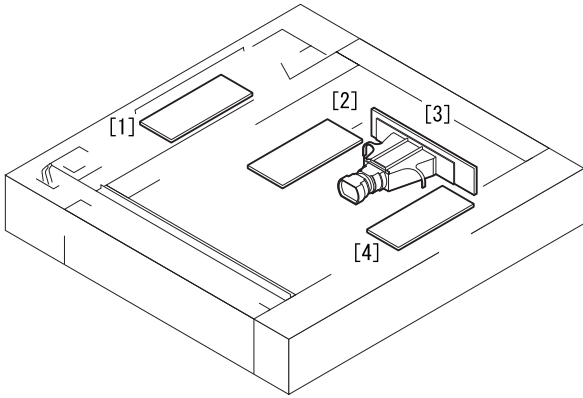


F-13-73

<Printer Unit>

T-13-25

Notation	Name	Parts No.	Description
[1]	BD PCB	FM2-0394(laser scanner)	generates the BD signal
[2]	Potential control PCB	FM2-0444(potential sensor unit)	converts the potential sensor output
[3]	Manual feed paper width PCB	FH7-7600	detects the width of paper from the manual feeder
[4]	Laser driver PCB	FM2-0394(laser scanner)	controls the drive of the laser unit
[5]	Potential sensor	FM2-0444(potential sensor unit)	measures the surface potential of the photosensitive drum
[6]	Drum heater PCB	FM2-0841(100/120), 0842(230)	controls the drum heater
[7]	HVT2	FM2-0528	controls the developing (black, color), primary transfer, primary static eliminator bias

Notation	Name	Parts No.	Description
[8]	Keypad PCB	FM2-1250	controls the input information from the keypad
[9]	Control panel inverter PCB	FM2-1251	controls the back-light activation of the LCD
[10]	Control panel CPU PCB	FM2-1249	controls the panel
[11]	HVT3	FM2-0826	controls the secondary transfer bias
[12]	Fixing/feeding driver PCB	FM2-0822	controls the sensors, motors, fans, and solenoids of the fixing/feeding and duplexing assemblies
[13]	Environment sensor	FK2-0160	takes measurements of the environment
[14]	Cassette 3 paper size detection PCB	FM2-0849	detects the size of the cassette 3
[15]	Cassette 4 paper size detection PCB	FM2-0849	detects the size of the cassette 4
[16]	DC/DC converter PCB 1	FM2-0832	converts DC power supply
[17]	SRAM PCB	FG3-2860	holds service mode settings/HDD control information
[18]	Expansion bus PCB	FM2-0536	controls the color LCD controller, card reader I/F
[19]	Main controller PCB (sub)	FM2-0535	connects the image signals from the reader units
[20]	Ethernet PCB	FG3-2865	connects to the network
[21]	Main controller PCB (main)	FG3-2857	processes image data for output to the printer unit
[22]	HDD	WM2-5208	holds system software, image data
[23]	Environment switch PCB	FM2-0523(100), 0550(120), 0551(230) (power code terminal assembly)	switches the heater
[24]	AC drive PCB	FM2-0523(100), 0550(120), 0551(230) (power code terminal assembly)	controls AC drive
[25]	Pickup drive PCB	FM2-0823	controls the motor of the pickup assembly
[26]	DC/DC converter PCB 2	FM2-0848	converts DC power supply
[27]	DC power relay PCB	FM2-0843	turns on/off the DC power supply, protects against over-voltage/over-current
[28]	DC power supply PCB	FM2-0524(100/120), 1229(230)	generates DC power
[29]	SDRAM	WA7-2922	temporarily holds image data
[30]	HVT1	FM2-0527	controls primary charging, grid, pre-transfer charging bias
[31]	Boot ROM		starts up the system
[32]	DC controller PCB	FM2-0821(100), 0857(120), 0858(230)	controls the printer unit/accessories

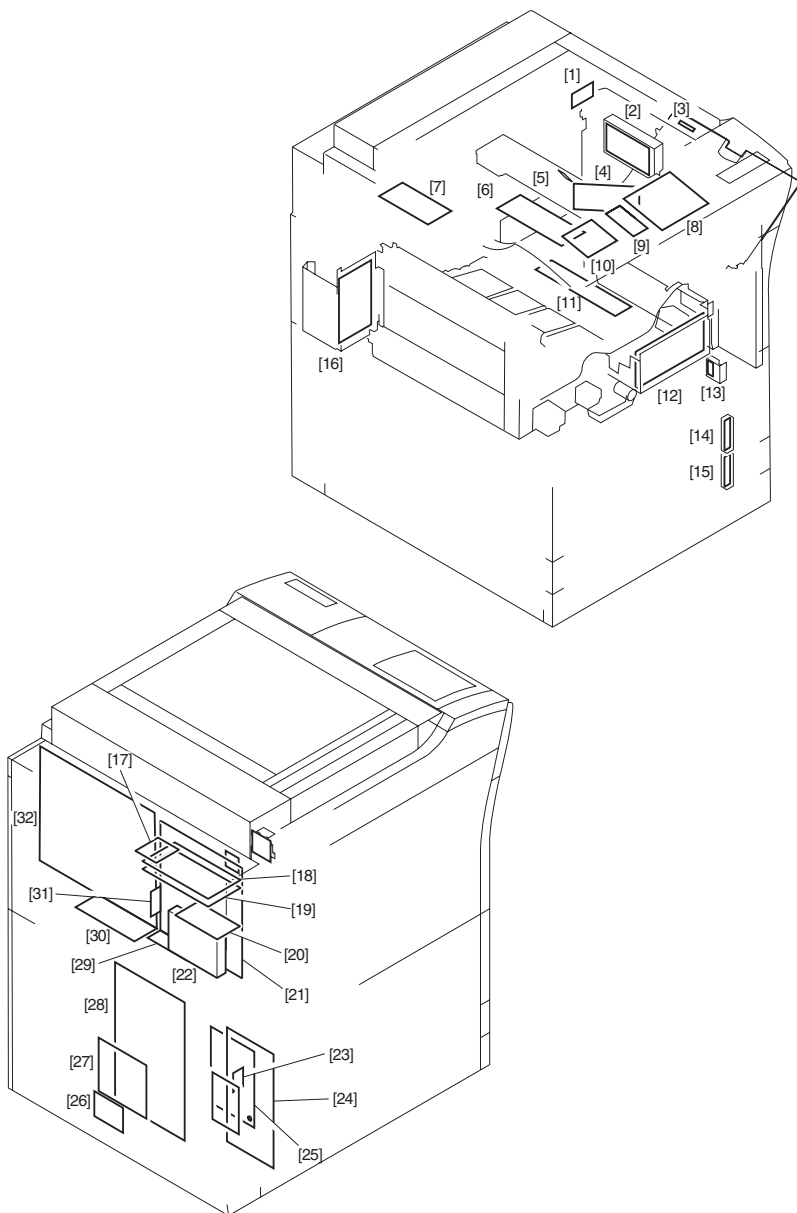

F-13-74

13.4.8 Variable Resistors (VR), Light-Emitting Diodes (LED), and Check Pins by PCB

13.4.8.1 Variable Resistors (VR), Light-Emitting Diodes (LED), and Check Pins by PCB

0001-1848

Of the variable resistors (VR), light-emitting diodes (LED), and check pins used in the machine those needed in the field are discussed.



-Although normal, some LEDs may emit dim light when they remain off because of leakage current.

-Keep the following symbols in mind;



---VR that may be used in the field.




---VR that must not be used in the field.

13.4.8.2 Points to Note About the Leakage Breaker

0004-1098

Points to Note When Checking the Output of the PCBs


Normally, an AC voltage is being applied to the terminals of the leakage breaker [1]. Take full care not to touch them when making a check.

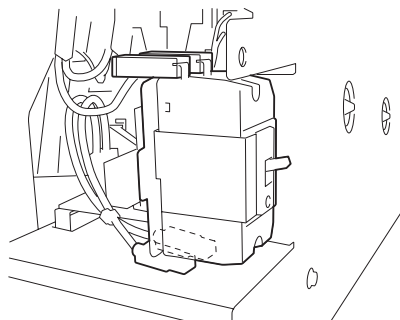

F-13-75

13.4.8.3 Main Controller PCB (main)

0005-0094

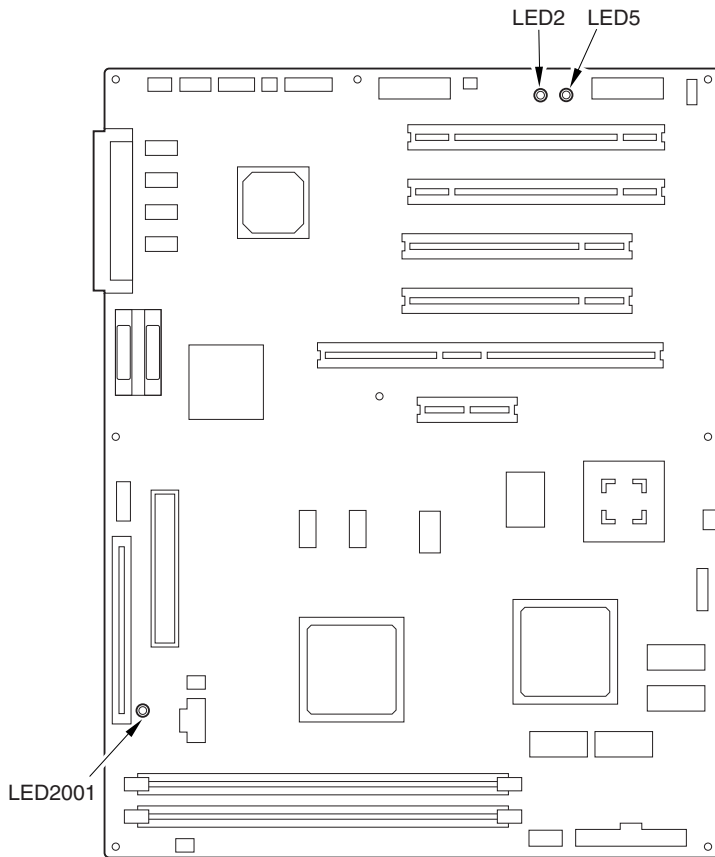


F-13-76

T-13-26

Notation	Description
LED2001	in operation
LED2	+3.3 V (all night) being supplied
LED5	+3.3 V (non-all night) being supplied

13.4.8.4 DC Controller PCB

0004-6239

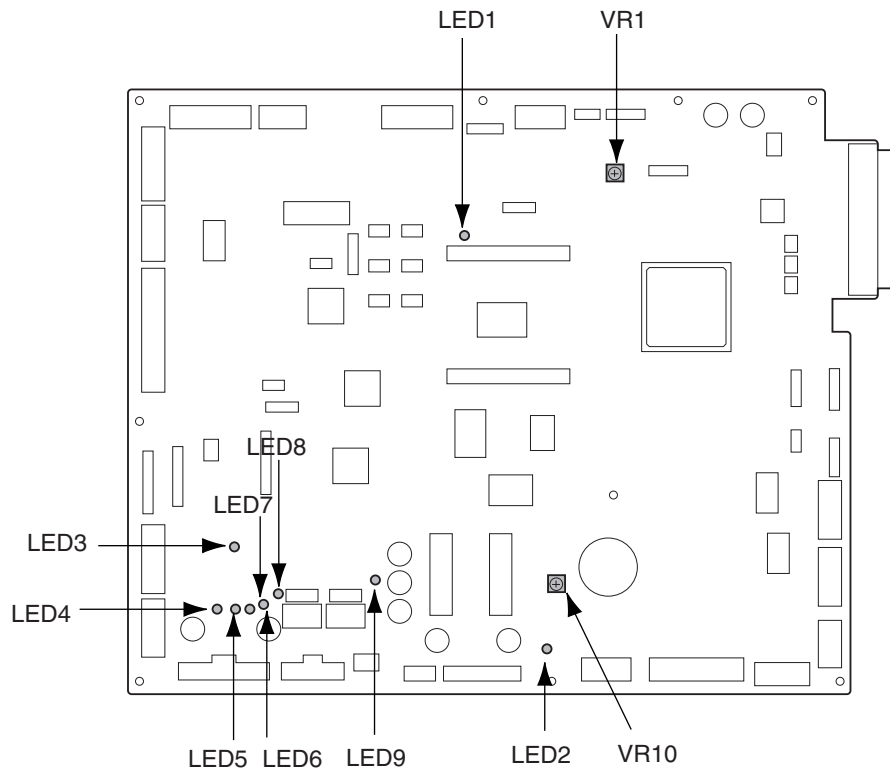


F-13-77

T-13-27

Notation	Description
VR1,VR10	for factory
LED1-9	in operation

13.4.8.5 HV1 PCB

0005-0082

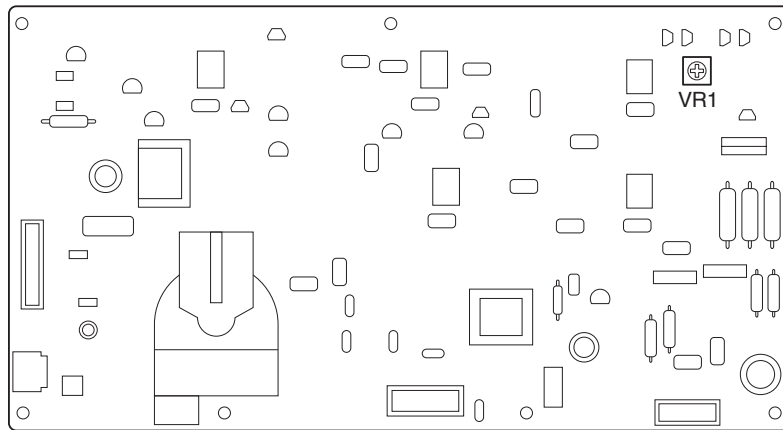


F-13-78

T-13-28

Notation	Description
VR1	for factory

13.4.8.6 HV2 PCB

0005-0085

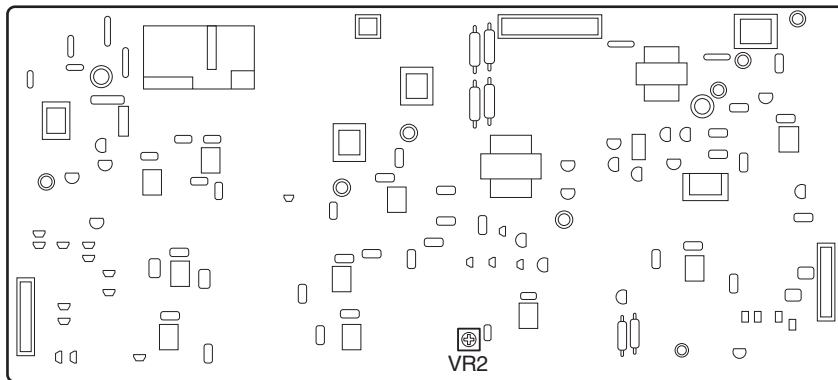


F-13-79

T-13-29

Notation	Description
VR2	for factory

13.4.8.7 HV3 PCB

0005-0087

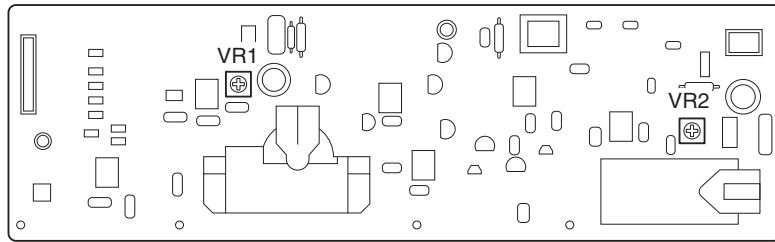

F-13-80

T-13-30

Notation	Description
-----------------	--------------------

VR1	for factory
-----	-------------

VR2	for factory
-----	-------------

Chapter 14 Self Diagnosis

Contents

14.1 Error Code Table	14-1
14.1.1 Error Code	14-1
14.2 Error Codes (SEND)	14-4
14.2.1 Self-Diagnostic Display	14-4
14.2.2 List of Error Codes without Messages	14-7
14.3 Error Code Details	14-14
14.3.1 Error Code Description	14-14
14.3.2 E000	14-14
14.3.3 E001	14-16
14.3.4 E002	14-16
14.3.5 E003	14-17
14.3.6 E004	14-18
14.3.7 E005	14-20
14.3.8 E006	14-20
14.3.9 E008	14-20
14.3.10 E009	14-21
14.3.11 E012	14-21
14.3.12 E013	14-21
14.3.13 E014	14-22
14.3.14 E020	14-22
14.3.15 E021	14-25
14.3.16 E023	14-25
14.3.17 E025	14-25
14.3.18 E032	14-26
14.3.19 E043	14-26
14.3.20 E051	14-26
14.3.21 E061	14-27
14.3.22 E070	14-27
14.3.23 E073	14-28
14.3.24 E077	14-28
14.3.25 E078	14-28
14.3.26 E079	14-28
14.3.27 E100	14-29
14.3.28 E110	14-29
14.3.29 E197	14-30
14.3.30 E202	14-30
14.3.31 E225	14-30
14.3.32 E227	14-31
14.3.33 E240	14-31
14.3.34 E248	14-31
14.3.35 E351	14-32
14.3.36 E400	14-32
14.3.37 E413	14-32
14.3.38 E490	14-33
14.3.39 E500	14-33
14.3.40 E503	14-33
14.3.41 E505	14-34
14.3.42 E514	14-34
14.3.43 E519	14-35

14.3.44 E530	14-35
14.3.45 E531	14-36
14.3.46 E532	14-36
14.3.47 E535	14-37
14.3.48 E537	14-37
14.3.49 E540	14-38
14.3.50 E542	14-38
14.3.51 E584	14-39
14.3.52 E590	14-39
14.3.53 E591	14-40
14.3.54 E592	14-40
14.3.55 E593	14-41
14.3.56 E5F0	14-41
14.3.57 E5F1	14-41
14.3.58 E5F2	14-42
14.3.59 E5F3	14-42
14.3.60 E5F4	14-42
14.3.61 E5F5	14-43
14.3.62 E5F6	14-43
14.3.63 E5F8	14-44
14.3.64 E5F9	14-44
14.3.65 E602	14-45
14.3.66 E602 in Detail	14-45
14.3.67 E604	14-49
14.3.68 E609	14-49
14.3.69 E674	14-49
14.3.70 E677	14-50
14.3.71 E710	14-50
14.3.72 E711	14-50
14.3.73 E713	14-51
14.3.74 E717	14-51
14.3.75 E719	14-51
14.3.76 E730	14-52
14.3.77 E731	14-53
14.3.78 E732	14-53
14.3.79 E733	14-54
14.3.80 E740	14-54
14.3.81 E743	14-54
14.3.82 E744	14-55
14.3.83 E745	14-55
14.3.84 E746	14-56
14.3.85 E747	14-56
14.3.86 E800	14-59
14.3.87 E804	14-59
14.3.88 E805	14-59
14.3.89 E820	14-60
14.3.90 E824	14-60
14.4 Jam Codes	14-61
14.4.1 Jam Code (printer unit)	14-61
14.4.2 Jam Code (finisher-related)	14-63
14.4.3 Jam Code (ADF-related)	14-64
14.5 Alarm Codes	14-66
14.5.1 Alarm Code	14-66

14.1 Error Code Table

14.1.1 Error Code

0005-0279

The machine is equipped with a self diagnostic mechanism which runs a check on the machine (particularly, on sensor output) at such times as programmed in advance, indicating the nature of any error it may have come across. The following is a compilation of error codes, with descriptions of how they are identified and possible causes. The 4-digit code is indicated to offer details, and may be checked in service mode (COPIER>DISPLAY>ERR).

T-14-1

Code	Description
E000	at power-on, the temperature of the fixing assembly is not high enough
E001	the temperature of the fixing assembly is abnormally high
E002	the temperature of the fixing assembly is not high enough
E003	the temperature of the fixing assembly drops abnormally after standby
E004	there is an error in the fixing assembly protection circuit
E005	there is an error in the take-up of the web
E006	there is an error in the connection of the fixing assembly
E008	there is an error in relation to the life of the fixing assembly
E009	there is an error in the shift of the external heating roller
E012	there is an error in the drum/ITB motor
E013	there is clogging by waste toner
E014	there is an error in the fixing motor
E020	there is an ATR error
E021	there is an error in the rotation of the developing assembly
E023	the developing sleeve motor does not rotate normally
E025	there is an overcurrent in the toner feed motor or the cartridge motor
E032	the NE controller counter does not operate
E043	there is an error in the 3.5K paper deck pickup motor, causing an error signal
E051	the horizontal registration home position is not detected within a specific period of time
E061	during potential control, a specific level of potential is not obtained or the limiter goes on
E070	there is an error in the detection of ITB home position
E073	with the front door closed, the transfer drawer connector or the transfer frame drawer connector is not connected
E077	the home position of the secondary transfer roller (engagement) is not detected
E078	the home position of the transfer belt cleaner unit (engagement) is not detected
E079	the home position of the outside heating roller (engagement) is not detected

Code	Description
E100	the BD is not detected
E110	there is an error in the scanner motor
E197	there is an error in the communication with the fixing/feed PCB
E202	there is a home position error
E225	the lamp has blown
E227	there is an error in the power supply (24 V)
E240	there is a DDI-P communication error (error in the communication between master and slave 0)
E248	there is an error in EEPROM
E351	there is an error in the main controller PCB (sub)
E400	there is a DF communication error
E413	there is an error in the DF shift motor
E490	the DF is of the wrong model
E500	there is a finisher communication error (common among finishers)
E503	there is an error within the finisher (finisher R1/R2)
E505	there is an error in the backup memory of the finisher (finisher R1/R2)
E514	there is an error in the trailing edge assist motor (finisher R1/R2)
E519	there is an error in the gear change motor (finisher R1/R2)
E530	there is an error in front alignment (finisher R1/R2)
E531	there is a stapling error (finisher R1/R2)
E532	there is an error in the shift of the stapler (finisher R1/R2)
E535	there is an error in the swing of the stapler (finisher R1/R2)
E537	there is an error in rear alignment (finisher R1/R2)
E540	there is an error in the up/down movement of the upper tray (finisher R1/R2)
E542	there is an error in the up/down movement of the lower tray (finisher R1/R2)
E584	there is an error in the shutter unit (finisher R1/R2)
E590	there is an error in the punch motor (punch unit)
E591	there is an error in the punch dust sensor (punch unit)
E592	there is an error in the punch horizontal sensor (punch unit)
E593	there is an error in the punch shift motor (punch unit)
E5F0	there is an error in saddle paper positioning
E5F1	there is an error in saddle paper folding
E5F2	there is an error in the saddle guide
E5F3	there is an error in saddle alignment
E5F4	there is an error in saddle rear stapling
E5F5	there is an error in saddle front stapling

Code	Description
E5F6	there is a saddle butting error
E5F8	there is an error in the saddle connector
E5F9	there is an error in saddle stitching
E602	there is a hard disk error
E604	there is a shortage of image memory (SDARM)
E605	there is an error in the image memory battery
E606	there is an error on the hard disk
E674	there is a fax board error
E677	there is an external controller error
E710	there is an IPC initialization error
E711	there is an IPC communication error
E712	there is an error in the communication between ADF and reader
E713	there is a finisher communication error
E717	there is an error in the communication with the NE controller
E719	there is an error in the communication with the coin vendor/card reader
E730	there is a PDL error
E731	there is a UFR board error
E732	there is a reader communication error
E733	there is a printer communication error
E740	there is an Ethernet board error
E743	there is a DDI communication error
E744	there is a language file/boot ROM error
E745	there is TokenRing board error
E746	the accessories board is of the wrong type
E747	there is an error in the ASIC for image processing or memory control; or, there is an error in the ASIC for communication control
E800	an interlock 24V off state has been identified for the fixing unit; with the door closed, the interlock 24V detection signal is off for 500 msec continuously
E804	there is a fan error (of any type)
E805	the fixing heat exhaust fan is identified as being closed; or, there is an error in the fan
E820	there is an error in the process unit cooling fan
E824	there is an error in the primary charging suction/exhaust fan

14.2 Error Codes (SEND)

14.2.1 Self-Diagnostic Display

0005-6121

T-14-2

Cause	Remedy
Scanning has stopped because the size of the data for the scanned original exceeds the limit. Scanning may be possible if [Data Cmprssn] is set to [High Ratio], Resolution is lowered, or [Sharpness] is reduced.	
Scanning was stopped because the data size of the scanned original exceeded the maximum data size that the machine could handle.	By selecting [High Ratio] for Data Compression Ratio, lowering the Resolution, and lowering the Sharpness setting, scanning may become possible.
Out of resources. Wait for a moment, then perform operation again.	
You cannot browse the network. There is a lack of TCP/IP resources because documents have just been continuously sent or are being continuously sent through FTP or Windows (SMB).	Wait for a while, and try browsing again.
Set the IP Address.	
This machine is not set with an IP address.	Specify the IP Address Settings in TCP/IP Settings in Network Settings in System Settings (from the Additional Functions screen), then turn the machine's main power OFF and back ON again.
No response from the server. Check the settings.	
The specified server settings are incorrect, or the server is not turned ON. Alternatively, the machine's TCP/IP resources may be low.	Wait for a while, and try browsing again. If there is still no response from the server, try selecting another server.
NetWare is in use. Wait for a moment, then perform operation again.	
You cannot browse the network because NetWare is printing through a Pserver or NDS PServer.	Wait until printing is complete, then try browsing again.
There are too many subdirectories.	
You have exceeded the maximum number of subdirectory levels allowed.	Specify a different destination because the directory level that you are trying to access cannot be specified.
No response.	
The server was not running when you tried to send.	Make sure that the server is ON, and check the destination.
The network connection was lost when you tried to send. (Either you could not connect to the destination, or the connection was lost before the job could be completed.)	Check the status of the network.

Cause	Remedy
You tried to send through NetWare, but the Tree name was not entered.	Enter the Tree name.
A TCP/IP error occurred when you tried to send an e-mail message or an I-fax.	Check that the network cables and connectors are properly connected.
Check the TCP/IP.	
The machine's TCP/IP connection is not operating.	Check the IP Address Settings (IP Address, DHCP, RARP, BOOTP) in TCP/IP Settings in Network Settings in System Settings (from the Additional Functions screen).
Cannot find the selected server. Check the settings.	
The IP address that the machine should connect to cannot be determined.	<ol style="list-style-type: none"> 1. Check the DNS Server Settings in TCP/IP Settings in Network Settings in System Settings (from the Additional Functions screen). 2. Check whether the DNS server's DNS settings are correct.
If Login Information in Register LDAP Server in System Settings (from the Additional Functions screen) is set to 'Use (security auth.)' for the LDAP server, the machine will not be able to determine the host name.	Check the DNS Server Settings in TCP/IP Settings in Network Settings in System Settings (from the Additional Functions screen).
Cannot connect to the selected server. Check the settings.	
The machine cannot connect to the specified IP address/port.	<ol style="list-style-type: none"> 1. Check the Gateway Address setting in IP Address Settings in TCP/IP Settings in Network Settings in System Settings (from the Additional Functions screen). 2. Check the Server Address and Port Number in Register LDAP Server in System Settings (from the Additional Functions screen). 3. Check whether the LDAP server is operating normally. 4. If Login Information in Register LDAP Server in System Settings (from the Additional Functions screen) is set to 'Use (security auth.)' for the LDAP server, check whether UDP (User Datagram Protocol) packages are blocked by the filter.
Check the user name and password or check settings.	
When setting Login Information for the LDAP server to 'Use' or 'Use (security auth.)', the user name or password is incorrect.	Check the User and Password settings when Login Information in Register LDAP Server in System Settings (from the Additional Functions screen) is set to 'Use' or 'Use (security auth.)'.

Cause	Remedy
When setting Login Information for the LDAP server to 'Use (security auth.)', the domain name is incorrect.	Check the Domain Name setting when Login Information in Register LDAP Server in System Settings (from the Additional Functions screen) is set to 'Use (security auth.)'.
Cannot complete searching due to timeout. Check the settings.	
The search could not be completed within the time specified under <Search Timeout>.	Increase the time setting for Search Timeout in Register LDAP Server in System Settings (from the Additional Functions screen).
The number of search results has exceeded limits. Change search conditions and try again.	
The number of addresses that meet the search criteria exceeds the specified maximum number of addresses to search.	<ol style="list-style-type: none"> 1. Narrow down the search criteria, and then search again. 2. Increase the maximum number of addresses to search.
Search condition includes characters that cannot be used with the selected server.	
"/" is used in the search criterion.	Remove "/" from the search criterion, and search again.
<p>The combination of characters used in the search criterion does not constitute an acceptable search criterion.</p> <p>There is an unequal number of "(" and ")".</p> <p>"*" is not placed within "(").</p>	Make sure that the characters for the search criterion are combined properly, and search again.
If <Server LDAP version and character code> is set to 'ver.2 (JIS)', characters other than ASCII Code (0x20-0x7E) are being used.	Omit characters that cannot be used, and search again.
Cannot start searching because the version setting for the server is incorrect. Check the settings.	
Although 'ver. 3' is set as the server LDAP version number in Register LDAP Server in System Settings (from the Additional Functions screen), the LDAP server is running on version 2.	Set Server LDAP version and character code in Register LDAP Server in System Settings (from the Additional Functions screen) to 'ver. 2'.

14.2.2 List of Error Codes without Messages

0005-6118

T-14-3

Cause	Remedy
# 001	
Paper or originals are jammed.	Remove any jammed paper or originals.
# 003	
Communications that take longer than the preset time (64 minutes) caused the error.	<ol style="list-style-type: none"> 1. Reduce the resolution, and try sending the document again. 2. When receiving a document, ask the remote party to either reduce the resolution at which the document is scanned, or divide the document into two or more parts before sending it.
# 005	
The other party did not answer within 35 seconds.	Confirm that the remote machine is able to communicate, and try again.
The receiving machine is not a G3 fax.	Check the type of receiving machine with the receiving party.
# 009	
There is no paper.	Load paper.
The paper drawer is not correctly inserted into the machine.	Insert the paper drawer properly.
# 011	
The document that you are sending is not placed correctly.	Place the document properly in the feeder or on the platen glass, and repeat the whole procedure from the beginning.
# 012	
The document could not be sent because the receiving fax machine was out of paper.	Ask the receiving party to load paper into their fax machine.
# 018	
The receiving machine did not respond when your machine redialed.	Confirm that the receiving machine is able to communicate, and try again.
The documents could not be sent because the receiving machine was engaged.	Confirm that the receiving machine is able to communicate, and try again.
The settings on your machine do not match the settings on the receiving machine.	Confirm that the receiving machine is able to communicate, and try again.
# 022	
Forwarding could not be performed because all of the addresses stored under the specified Group destination have been deleted, or User Inboxes are specified as the Group destination.	Re-enter the forwarding address and try sending again.
Transmission could not be performed because the specified destination was deleted while the documents were waiting to be sent.	Re-enter the address in the address book and try sending again.

Cause	Remedy
# 037	
Documents could not be received because there was insufficient memory available.	Erase unwanted documents and documents with errors from memory to increase the amount of available memory.
# 081	
A password is not set in the remote machine.	Check the password of the remote machine, and try again.
# 099	
Sending was interrupted.	Try sending again.
# 102	
The subaddress and/or password do not match.	Check the subaddress and/or password of the remote machine, and try again.
# 107	
The document could not be sent because there was insufficient memory available.	<ol style="list-style-type: none"> 1. Resend the document in a lower resolution. 2. Erase unwanted documents to make memory available. 3. If this problem occurs frequently, contact your local authorized Canon dealer.
# 701	
The specified Department ID does not exist, or the password has changed.	Enter the correct Department ID or password using 0-9 (numeric keys) on the control panel, and try sending again.
# 702	
The document could not be sent because the memory is full.	<ol style="list-style-type: none"> 1. Wait a few moments, and try again after the other send jobs are complete. 2. Do not send the document to too many recipients at the same time. Send the document to a smaller number of recipients each time.
# 703	
The memory for the image data is full.	<ol style="list-style-type: none"> 1. Wait a few moments, and try again after the other send jobs are complete. 2. Erase documents stored in inboxes. If the machine still does not operate normally, turn the main power OFF, and then back ON again.
# 704	
An error occurred while reading address information from the Address Book.	Check the address settings. If the machine still does not operate normally, turn the main power OFF, and then back ON again.
# 705	
The send operation was interrupted because the size of the image data is larger than the Maximum Data Size for Sending set in E-mail/I-Fax Settings in Communications Settings in System Settings (from the Additional Functions screen).	Change the Maximum Data Size for Sending setting in E-mail/I-Fax Settings in Communications Settings in System Settings (from the Additional Functions screen). Select a lower resolution, or if you are using I-fax, decrease the number of pages containing images that you are sending each time, so that you do not exceed the Maximum Data Size for Sending limit.

Cause	Remedy
# 706	
The Address Book is being imported or exported from the Remote UI, or it is being used by another sending component.	Wait until the Address Book import/export function from the Remote UI or the other sending component is complete, and try sending again.
# 711	
The inbox memory is full.	Erase the unnecessary documents stored in the inbox.
# 712	
The maximum number of documents is already stored in the inbox.	Erase the unnecessary documents stored in the inbox.
# 751	
The server is not functioning. The network is down (the server is unable to connect to the network or was disconnected).	Check the recipient's address. Check that the network is up.
# 752	
The SMTP server name for e-mail or I-fax is not correct, or the server is not functioning. The domain name or e-mail address may not be set. The network is down.	Check the SMTP Server name and E-mail Address in E-mail/I-Fax in Network Settings in System Settings (from the Additional Functions screen). Check that the SMTP server is operating properly. Check the network status.
# 753	
A TCP/IP error occurred while sending an e-mail message. (Socket, Select error, etc.)	Check the network cables and connectors. If the machine still does not operate normally, turn the main power OFF, and then back ON again.
# 754	
The server is not functioning or the network is down. The destination setting is not correct.	Check the server and network. Check the destination's address settings.
# 755	
You cannot send jobs because TCP/IP is not functioning correctly.	Check TCP/IP Settings in Network Settings in System Settings (from the Additional Functions screen).
The IP address is not set.	Check TCP/IP Settings in Network Settings in System Settings (from the Additional Functions screen).
When the machine was turned ON, an IP address was not assigned to the machine by the DHCP, RARP, or BOOTP server.	Check TCP/IP Settings in Network Settings in System Settings (from the Additional Functions screen).
# 756	
NetWare in NetWare Settings in Network Settings in System Settings (from the Additional Functions screen) is set to 'Off'.	Turn NetWare to 'On'.

Cause	Remedy
# 801	
A timeout error occurred while the machine was communicating with the SMTP server to send an e-mail message or send/receive an I-fax.	<ol style="list-style-type: none"> 1. Check that the SMTP server is functioning normally. 2. Check the network status.
The SMTP server returned an error while trying to connect. The destination is not correct. An error occurred on the server side during transmission to a file server.	<ol style="list-style-type: none"> 1. Check that the SMTP server is functioning normally. 2. Check the network status. 3. Check the destination setting. 4. Check the status and setting of the file server.
You are sending a file to a destination to which you have no write permission.	Check the destination setting.
When the machine tried to send a file to the server, a file with the same name already exists on the FTP server and that file cannot be overwritten.	Change the setting on the file server to enable the file to be overwritten.
When the machine tried to send a file to the server, either the folder name is incorrectly specified or the password is incorrect.	Check the destination setting.
# 802	
The name of the SMTP Server in E-mail/I-Fax settings in Network Settings in System Settings (from the Additional Functions screen) is incorrect. The DNS server name in DNS Server Settings in TCP/IP Settings in Network Settings in System Settings (from the Additional Functions screen) is incorrect. Connection to the DNS server failed.	<p>Check the name of the SMTP Server in E-mail/I-Fax and DNS Server Settings in TCP/IP Settings in Network Settings in System Settings (from the Additional Functions screen).</p> <p>Check that the DNS server is functioning normally.</p>
# 803	
The connection was interrupted due to reasons on the recipient's side before all of the pages could be sent.	Try sending again.
# 804	
Unable to match the specified directory name when sending data to a file server.	Check the destination.
You have no permission to access the folder.	Change the setting on the server to enable access to the folder.
# 806	
An incorrect user name or password was specified for the sending of a file to a file server.	Change the user name or password.
An incorrect destination was specified for the sending of an e-mail message or I-fax.	Check the e-mail or I-fax address.

Cause	Remedy
# 810	
A POP (Post Office Protocol) server connection error occurred while receiving an I-fax.	Check the POP Server name in E-mail/I-Fax in Network Settings in System Settings (from the Additional Functions screen). Confirm that the POP server is functioning normally. Check the network status.
The POP server returned an error during the connection.	Check the POP Server name in E-mail/I-Fax in Network Settings in System Settings (from the Additional Functions screen). Confirm that the POP server is functioning normally. Check the network status.
A timeout error occurred on the server while connecting to the POP server.	Check the POP Server name in E-mail/I-Fax in Network Settings in System Settings (from the Additional Functions screen). Confirm that the POP server is functioning normally. Check the network status.
# 815	
You cannot log on to the file server because the machine is printing a document sent to that server. Simultaneous connections are not possible.	Wait for a few moments before trying to send the data again, or change the NetWare server to which you are sending your documents. Alternatively, stop the Pserver.
# 818	
The received data is not in a printable file format.	Ask the sender to change the file format and resend the data.
# 819	
You have received data that cannot be processed (MIME information is incorrect).	Check the settings, and ask the sender to resend the data.
# 820	
You have received data that cannot be processed (BASE 64 or uuencode is incorrect).	Check the settings, and ask the sender to resend the data.
# 821	
You have received data that cannot be processed (TIFF analysis error).	Check the settings, and ask the sender to resend the data.
# 822	
You have received data that cannot be processed (image data cannot be decoded).	Check the settings, and ask the sender to resend the data.
# 827	
You have received data that cannot be processed (contains MIME information that is not supported).	Check the settings, and ask the sender to resend the data.
# 828	
You have received HTML data.	Ask the sender to use a file format other than HTML, and resend the data.

Cause	Remedy
# 829	
Data that contains more than 1,000 pages is received.	This machine can print or store up to 999 pages of data in memory, but will delete any data that exceeds this limit. Ask the sender to resend the remaining pages.
# 830	
A DSN (Delivery Status Notification) error notification is received because of an incorrect I-fax address or destination setting, or the data size of the sent documents exceeds the mail server capacity.	<ol style="list-style-type: none"> 1. Check the I-fax address or destination setting. 2. Set Maximum Data Size for Sending in E-mail/I-Fax Settings in Communication Settings in System Settings (from the Additional Functions screen) so that it is less than the mail server capability. 3. Check the status of the mail server, DNS server, and network.
# 831	
An I-fax document could not be received using SMTP because of the RX/Print Range setting in IP Address Settings in TCP/IP Settings in Network Settings in System Settings (from the Additional Functions screen).	Reset the RX/Print Range setting in IP Address Settings in TCP/IP Settings in Network Settings in System Settings (from the Additional Functions screen).
# 832	
DSN (Delivery Status Notification) mail was not sent because TCP/IP Settings or E-mail/I-Fax in Network Settings in System Settings (from the Additional Functions screen) have not been set, or trouble has occurred in the mail server.	<ol style="list-style-type: none"> 1. Check the DNS Server Settings and IP Address Settings in TCP/IP Settings, and E-mail/I-Fax in Network Settings in System Settings (from the Additional Functions screen). 2. Check the status of the mail server and DNS server.
# 833	
MDN (Mail Delivery Notification) mail was not sent because TCP/IP Settings or E-mail/I-Fax in Network Settings in System Settings (from the Additional Functions screen) have not been set, or trouble has occurred in the mail server.	<ol style="list-style-type: none"> 1. Check the DNS Server Settings and IP Address Settings in TCP/IP Settings, and E-mail/I-Fax in Network Settings in System Settings (from the Additional Functions screen). 2. Check the status of the mail server and DNS server.
# 834	
An MDN error notification is received because of an incorrect I-fax address or destination setting, or trouble has occurred in the network or mail server. Alternatively, the memory of the receiving machine is full.	Check the I-fax address and destination settings.
# 835	
The maximum number of text lines for receiving an I-fax has been exceeded.	Ask the sender to reduce the amount of text data in the body of the document, and resend the data.

Cause	Remedy
# 837	
A connection request was received from a host whose connection is restricted by IP Address Settings, which can be set in TCP/IP Settings in Network Settings in System Settings (from the Additional Functions screen).	Check the settings in IP Address Settings in TCP/IP Settings in Network Settings in System Settings (from the Additional Functions screen). Make sure that the connection request is made from an authorized host.
# 839	
The user name or password for the SMTP authentication (SMTP AUTH) in Authent./Encryption in E-mail/I-Fax in Network Settings in System Settings (from the Additional Functions screen) is incorrect.	Check the user name and password for SMTP Authentication (SMTP AUTH) in Authent./Encryption in E-mail/I-Fax in Network Settings in System Settings (from the Additional Functions screen).
# 841	
The encryption algorithm that matches the mail server does not exist for sending e-mail or I-fax.	<ol style="list-style-type: none"> 1. Set Allow SSL in Network Settings in System Settings (from the Additional Functions screen) to 'Off'. 2. Add the same encryption algorithm as the mail server in the mail server settings.
# 842	
Authentication using the client certificate was requested by the mail server for sending e-mail or I-fax.	<ol style="list-style-type: none"> 1. Set Allow SSL in Network Settings in System Settings (from the Additional Functions screen) to 'Off'. 2. Change the mail server settings so that the client certificate is not requested.
# 843	
There is large difference between the current time set in the KDC (Key Distribution Center) server and the one set in the machine.	<ol style="list-style-type: none"> 1. Change the current date and time in Date & Time Settings in Timer Settings (from the Additional Functions screen). 2. Change the current time set in the KDC (Key Distribution Center) server.
# 851	
There is insufficient memory remaining in the system.	Check the system's available memory, and delete unwanted documents in the inboxes.
The scanned document cannot be stored because there are more than 100 documents in the specified inbox.	Delete unnecessary documents from the specified inbox.
# 852	
An error occurred because the main power switch was turned OFF while a job was being processed.	Check to see if the main power switch is turned ON. Try processing the job again, if necessary.
# 899	
The e-mail message or I-fax has been successfully sent, but reception may be incomplete because the transmission was relayed via multiple servers.	<ol style="list-style-type: none"> 1. Confirm whether reception was complete. 2. Check if you received an error notification.
# 995	
Reserved communication jobs were cleared.	Reserve the jobs again, if necessary.

14.3 Error Code Details

14.3.1 Error Code Description

0004-6666

The machine is equipped with a self diagnostic mechanism which runs a check on the machine (particularly, on sensor output) at such times as programmed in advance, indicating the nature of any error it may have come across. The following is a compilation of error codes, with descriptions of how they are identified and possible causes.

14.3.2 E000

0004-2930

T-14-4

Code	Detail	Cause/Particulars of detection	Remarks
E000		At power-on, the rise in the temperature of the fixing assembly is not high enough. The main thermistor (THM1, THM2, THM3), thermal switch (TP1, TP2, TP3), or heater (H1, H2, H3, H4) has an open circuit or poor contact. The AC drive PCB or the DC controller PCB is faulty.	
	0010	After power-on, the temperature does not reach 50 deg C within 300 sec.	Check for an open circuit and poor contact in the main thermistor, thermal switch, and heater; then, reset in service mode: COPIER>FUNCTION>CLEAR>ERR.
	0011	The temperature reaches 50 deg C, but does not reach 80 deg C within 300 sec.	Check for an open circuit and poor contact in the main thermistor, thermal switch, and heater; then, reset in service mode: COPIER>FUNCTION>CLEAR>ERR.
	0012	The temperature reaches 80 deg C, but does not reach 110 deg C within 300 sec.	Check for an open circuit and poor contact in the main thermistor, thermal switch, and heater; then, reset in service mode: COPIER>FUNCTION>CLEAR>ERR.
	0013	The temperature reaches 110 deg C, but does not reach 140 deg C within 300 sec.	Check for an open circuit and poor contact in the main thermistor, thermal switch, and heater; then, reset in service mode: COPIER>FUNCTION>CLEAR>ERR.
	0014	The temperature reaches 140 deg C, but does not reach 170 deg C within 300 sec.	Check for an open circuit and poor contact in the main thermistor, thermal switch, and heater; then, reset in service mode: COPIER>FUNCTION>CLEAR>ERR.
	0015	The temperature reaches 170 deg c, but does not reach 200 deg C within 300 sec.	Check for an open circuit and poor contact in the main thermistor, thermal switch, and heater; then, reset in service mode: COPIER>FUNCTION>CLEAR>ERR.
	0020	After power-on, the temperature does not reach 50 deg C within 180 sec.	Check for an open circuit and poor contact in the main thermistor, thermal switch, and heater; then, reset in service mode: COPIER>FUNCTION>CLEAR>ERR.
	0021	The temperature reaches 50 deg C, but does not reach 80 deg C within 180 sec.	Check for an open circuit and poor contact in the main thermistor, thermal switch, and heater; then, reset in service mode: COPIER>FUNCTION>CLEAR>ERR.

Code	Detail	Cause/Particulars of detection	Remarks
0022		The temperature reaches 80 deg C, but does not reach 110 deg C within 180 sec.	Check for an open circuit and poor contact in the main thermistor, thermal switch, and heater; then, reset in service mode: COPIER>FUNCTION>CLEAR>ERR.
0023		The temperature reaches 110 deg C, but does not reach 140 deg C within 180 sec.	Check for an open circuit and poor contact in the main thermistor, thermal switch, and heater; then, reset in service mode: COPIER>FUNCTION>CLEAR>ERR.
0024		The temperature reaches 140 deg C, but does not reach 170 deg C within 180 sec.	Check for an open circuit and poor contact in the main thermistor, thermal switch, and heater; then, reset in service mode: COPIER>FUNCTION>CLEAR>ERR.
0025		The temperature reaches 170 deg C, but does not reach 200 deg C within 180 sec. If the outside heating roller is in contact, within 400 sec.	Check for an open circuit and poor contact in the main thermistor, thermal switch, and heater; then, reset in service mode: COPIER>FUNCTION>CLEAR>ERR.
0026		The temperature reaches 200 deg C, but does not reach 230 deg C within 180 sec. If the outside heating roller is in contact, within 400 sec.	Check for an open circuit and poor contact in the main thermistor, thermal switch, and heater; then, reset in service mode: COPIER>FUNCTION>CLEAR>ERR.
0030		After power-on, the temperature does not reach 50 deg C within 420 sec.	Check for an open circuit and poor contact in the main thermistor, thermal switch, and heater; then, reset in service mode: COPIER>FUNCTION>CLEAR>ERR.
0031		The temperature reaches 50 deg C, but does not reach 80 C deg in 420 sec.	Check for an open circuit and poor contact in the main thermistor, thermal switch, and heater; then, reset in service mode: COPIER>FUNCTION>CLEAR>ERR.
0032		The temperature reaches 80 deg C, but does not reach 110 deg C within 420 sec.	Check for an open circuit and poor contact in the main thermistor, thermal switch, and heater; then, reset in service mode: COPIER>FUNCTION>CLEAR>ERR.
0033		The temperature reaches 110 deg C, but does not reach 140 deg C within 420 sec.	Check for an open circuit and poor contact in the main thermistor, thermal switch, and heater; then, reset in service mode: COPIER>FUNCTION>CLEAR>ERR.
0034		The temperature reaches 140 deg C, but does not reach 170 deg C within 420 sec.	Check for an open circuit and poor contact in the main thermistor, thermal switch, and heater; then, reset in service mode: COPIER>FUNCTION>CLEAR>ERR.

14.3.3 E001

0004-2995

T-14-5

Code	Detail	Cause/Particulars of detection	Remarks
E001		The rise in the temperature of the fixing assembly is excessive. There is an open circuit or poor contact in the following: main thermistor (THM1, THM2, THM3), sub thermistor (THM4, THM5, THM6), or heater (H1, H2, H3, H4). The AC driver PCB or the DC controller PCB is faulty.	
	0001	The rise in the temperature of the fixing roller is excessive.	Check the main thermistor, sub thermistor, and heater for an open circuit and poor contact; then, reset in service mode: COPIER>FUNCTION>CLEAR>ERR.
	0002	The rise in the temperature of the outside heating roller is excessive.	Check the main thermistor, sub thermistor, and heater for an open circuit and poor contact; then, reset in service mode: COPIER>FUNCTION>CLEAR>ERR.
	0003	The rise in the temperature of the pressure roller is excessive.	Check the main thermistor, sub thermistor, and heater for an open circuit and poor contact; then, reset in service mode: COPIER>FUNCTION>CLEAR>ERR.

14.3.4 E002

0004-3005

T-14-6

Code	Detail	Cause/Particulars of detection	Remarks
E002		The rise in the temperature of the fixing assembly is not enough. There is an open circuit or poor contact in the main thermistor (THM1, THM2, THM3), thermal switch (TP1, TP2, TP3), or heater (H1, H2, H3, H4). The AC driver PCB or the DC controller PCB has a fault.	
	0010	The temperature of the fixing roller reaches 80 deg C, but drops below 50 deg C.	Check the main thermistor, thermal switch, and heater for an open circuit and poor contact; then, reset in service mode: COPIER>FUNCTION>CLEAR>ERR.
	0020	The temperature of the outside heating roller reaches 80 deg C, but drops below 50 deg C.	Check the main thermistor, thermal switch, and heater for an open circuit and poor contact; then, reset in service mode: COPIER>FUNCTION>CLEAR>ERR.
	0030	The temperature of the pressure roller reaches 80 deg C, but drops below 50 deg C.	Check the main thermistor, thermal switch, and heater for an open circuit and poor contact; then, reset in service mode: COPIER>FUNCTION>CLEAR>ERR.

14.3.5 E003

0004-3018

T-14-7

Code	Detail	Cause/Particulars of detection	Remarks
E003		After standby, the drop in the temperature of the fixing assembly is excessive. There is an open circuit or poor contact in the main thermistor (THM1, THM2, THM3), thermal switch (TP1, TP2, TP3), or heater (H1, H2, H3, H4). The AC driver PCB or the DC controller PCB has a fault.	
	0041	During standby, the temperature of the fixing roller drops below 150 deg C.	Check the main thermistor, thermal switch, and heater for an open circuit and poor contact; then, reset in service mode: COPIER>FUNCTION>CLEAR>ERR.
	0042	During standby, the temperature of the outside heating roller drops below 190 dg C.	Check the main thermistor, thermal switch, and heater for an open circuit and poor contact; then, reset in service mode: COPIER>FUNCTION>CLEAR>ERR.
	0043	During standby, the temperature of the pressure roller drops below 120 deg C.	Check the main thermistor, thermal switch, and heater for an open circuit and poor contact; then, reset in service mode: COPIER>FUNCTION>CLEAR>ERR.
	0051	During copying, the temperature of the fixing roller drops below 150 deg C.	Check the main thermistor, thermal switch, and heater for an open circuit and poor contact; then, reset in service mode: COPIER>FUNCTION>CLEAR>ERR.
	0052	During copying, the temperature of the outside heating roller drops below 190 deg C.	Check the main thermistor, thermal switch, and heater for an open circuit and poor contact; then, reset in service mode: COPIER>FUNCTION>CLEAR>ERR.
	0053	During copying, the temperature of the pressure roller drops below 60 deg C.	Check the main thermistor, thermal switch, and heater for an open circuit and poor contact; then, reset in service mode: COPIER>FUNCTION>CLEAR>ERR.

14.3.6 E004

0004-3055

T-14-8

Code	Detail	Cause/Particulars of detection	Remarks
E004		There is an error in the fixing assembly protection circuit. There is an open circuit or poor contact in the main thermistor (THM1, THM2, THM3) or sub thermistor (TH4, THM5, THM6). The AC driver PCB or the DC controller PCB has a fault.	
	0001	There is an SSR error in the outside heating roller heater.	Check the main thermistor and the sub thermistor for an open circuit and poor contact; then, reset in service mode: COPIER>FUNCTION>CLEAR>ERR.
	0002	There is an SSR error in the fixing sub heater.	Check the main thermistor and the sub thermistor for an open circuit and poor contact; then, reset in service mode: COPIER>FUNCTION>CLEAR>ERR.
	0003	There is an SSR error in the outside heating roller heater or the fixing sub heater.	Check the main thermistor and the sub thermistor for an open circuit and poor contact; then, reset in service mode: COPIER>FUNCTION>CLEAR>ERR.
	0004	There is an SSR error in the fixing main heater.	Check the main thermistor and the sub thermistor for an open circuit and poor contact; then, reset in service mode: COPIER>FUNCTION>CLEAR>ERR.
	0005	There is an SSR error in the outside heating roller heater or the fixing main heater.	Check the main thermistor and the sub thermistor for an open circuit and poor contact; then, reset in service mode: COPIER>FUNCTION>CLEAR>ERR.
	0006	There is an SSR error in the fixing sub heater or the fixing main heater.	Check the main thermistor and the sub thermistor for an open circuit and poor contact; then, reset in service mode: COPIER>FUNCTION>CLEAR>ERR.
	0007	There is an SSR error in the outside heating roller heater, fixing sub heater, or fixing main heater.	Check the main thermistor and the sub thermistor for an open circuit and poor contact; then, reset in service mode: COPIER>FUNCTION>CLEAR>ERR.
	0008	There is an SSR error in the pressure heater.	Check the main thermistor and the sub thermistor for an open circuit and poor contact; then, reset in service mode: COPIER>FUNCTION>CLEAR>ERR.
	0009	There is an SSR error in the outside heating roller heater or the contact heater.	Check the main thermistor and the sub thermistor for an open circuit and poor contact; then, reset in service mode: COPIER>FUNCTION>CLEAR>ERR.
	000A	There is an SSR error in the fixing sub heater or the contact heater.	Check the main thermistor and the sub thermistor for an open circuit and poor contact; then, reset in service mode: COPIER>FUNCTION>CLEAR>ERR.
	000B	There is an SSR error in the outside heating roller heater, fixing sub heater, or contact heater.	Check the main thermistor and the sub thermistor for an open circuit and poor contact; then, reset in service mode: COPIER>FUNCTION>CLEAR>ERR.

Code	Detail	Cause/Particulars of detection	Remarks
000C		There is an error in the fixing main heater or the contact heater.	Check the main thermistor and the sub thermistor for an open circuit and poor contact; then, reset in service mode: COPIER>FUNCTION>CLEAR>ERR.
000D		There is an SSR error in the outside heating roller heater, fixing main heater, or contact heater.	Check the main thermistor and the sub thermistor for an open circuit and poor contact; then, reset in service mode: COPIER>FUNCTION>CLEAR>ERR.
000E		There is an error in the fixing sub heater, fixing main heater, or contact heater.	Check the main thermistor and the sub thermistor for an open circuit and poor contact; then, reset in service mode: COPIER>FUNCTION>CLEAR>ERR.
000F		There is an SSR error in the outside heating roller heater, fixing sub heater, fixing main heater, or contact heater.	Check the main thermistor and the sub thermistor for an open circuit and poor contact; then, reset in service mode: COPIER>FUNCTION>CLEAR>ERR.
0010		The fixing roller thermistor has an open circuit.	Check the main thermistor and the sub thermistor for an open circuit and poor contact; then, reset in service mode: COPIER>FUNCTION>CLEAR>ERR.
0020		The outside heating roller thermistor has an open circuit. the main thermistor and the sub thermistor for an open circuit	Check the main thermistor and the sub thermistor for an open circuit and poor contact; then, reset in service mode: COPIER>FUNCTION>CLEAR>ERR.
0030		The outside heating roller thermistor has an open circuit. the main thermistor and the sub thermistor for an open circuit	Check the main thermistor and the sub thermistor for an open circuit and poor contact; then, reset in service mode: COPIER>FUNCTION>CLEAR>ERR.

14.3.7 E005

0004-3551

T-14-9

Code	Detail	Cause/Particulars of detection	Remarks
E005		There is an error in the take-up mechanism of the web.	
	0000	The web of the fixing assembly has been fully taken up. After the web sensor has detected an off state, the count has exceeded 3000. The web length sensor (PS20) is faulty. The DC controller PCB is faulty.	Reset in service mode: COPIER>FUNCTION>CLEAR>ERR. If you have replaced the web, reset the reading in the following, and turn off and then on the power: COPIER>COUNTER>DRBL-1>FIX-WEB.
	0010	The drive solenoid of the fixing assembly is not connected.	Check the drive solenoid of the fixing web for disconnection; then, reset in service mode: COPIER>FUNCTION>CLEAR>ERR.

14.3.8 E006

0004-3068

T-14-10

Code	Detail	Cause/Particulars of detection	Remarks
E006		The fixing assembly has a comparison error.	
	0001	The fixing drawer has been identified as being disconnected.	Check the connector of the drive solenoid of the fixing web; then, turn off and then on the main power.

14.3.9 E008

0005-5698

T-14-11

Code	Detail	Cause/Particulars of detection	Remarks
E008		There is an error in relation to the life of the fixing assembly.	
	0001	The counter reading for the fixing roller has exceeded a specific count.	At time of replacing the roller, reset by executing the following in service mode: COPIER>COUNTER>DRBL-1>FX-UP-RL; thereafter, turn off and then back on the main power.

14.3.10 E009

0004-3553

T-14-12

Code	Detail	Cause/Particulars of detection	Remarks
E009		There is an outside heating roller shift error. The outside heating roller shift motor (M22) is faulty. The outside heating roller HP sensor (PS21) is faulty. The DC controller PCB is faulty.	
	00FF	The outside heating roller remains in contact with the fixing roller.	Check the outside heating roller shift motor and the fixing motor; then, turn off and then on the main power.

14.3.11 E012

0004-3071

T-14-13

Code	Detail	Cause/Particulars of detection	Remarks
E012		There is an error in the drum/ITB motor.	
	0001	After motor start-up, a lock state is not identified for 1 sec or more.	Check the area around the photosensitive drum and the intermediate transfer belt; then, turn off and then on the main power.

14.3.12 E013

0004-3077

T-14-14

Code	Detail	Cause/Particulars of detection	Remarks
E013		There is clogging by waste toner.	
	0001	There is a waste toner full error. The waste toner inside the toner box (result of software conversion) is 90% or more of the capacity of the toner box (7100 cc), i.e., the soft counter reading is 250000 or higher.	Check the amount of waste toner; thereafter, turn the main power off and then back on. If you have replaced (cleaned) the waste toner box, be sure to reset the counter using the following service mode item: COPIER>COUNTER>MISC>WST-TNR; thereafter, turn the main power off and then back on.
	0002	There is a waste toner feedscrew error. The output of the waste toner lock detecting switch (SW14) is '1' for more than 1 sec.	Check the developing motor and the amount of waste toner; thereafter, turn the main power off and then back on. If you have replaced (cleaned) the waste toner box, reset the counter using the following service mode: COPIER>COUNTER>MISC>WST-TNR; thereafter, clean the waste toner feed pipe and turn the main power off and then back on.

14.3.13 E014

0004-3081

T-14-15

Code	Detail	Cause/Particulars of detection	Remarks
E014		There is a fixing motor error.	
	0001	After motor start-up, a lock state is not identified for 1 sec or more.	Check the fixing motor (fixing assembly); then, turn off and then on the main power.

14.3.14 E020

0004-3106

T-14-16

Code	Detail	Cause/Particulars of detection	Remarks
E020		There is an ATR error.	
		xx=01 for Y; xx=02 for M; xx=03 for C; xx=04 for without color distinction	
	xx10	For INIT control (service mode INISET-*) at time of initial setup, the Sig value is lower than 62. The ATR sensor is damage or has an open circuit. The connector may have poor contact. The intermediate transfer belt may be soiled.	Turn off and then on the main power; then, execute the intermediate transfer belt.
	xx11	For INIT control (service mode INISET-*) at time of initial setup, the Sig value is lower than 62. The ATR sensor is damaged or has an open circuit. The connector may have poor contact. The intermediate transfer belt may be soiled>	Turn off and then on the main power; then, execute the intermediate transfer belt.
	xx12	For INIT control (service mode INISET-*) at time of initial setup, the Sig value is 960 or higher. The ATR sensor is damaged or has an open circuit. The connector has poor contact. The opening/closing of the shutter is faulty. The intermediate transfer belt is soiled.	Turn off and then on the main power; then, execute the intermediate transfer belt.
	xx13	For INIT control (service mode INISET-*) at time of initial setup, the Sig value is lower than 62. The ATR sensor is damaged or has an open circuit. The connector has poor contact. The intermediate transfer belt is soiled.	Turn off and then on the main power; then, execute the intermediate transfer belt.
	xx81	When the background (intermediate transfer belt) is read during patch detection, the P_base_adj value is lower than 255. The ATR sensor is damaged or has an open circuit. The connector has poor contact. The ITB cleaner is faulty.	Turn off and then on the main power; then, execute the intermediate transfer belt.
	xx90	The result (Sig D) of computation based on the reading of the patch during patch detection (analog) is lower than 16.	Turn off and then on the main power; then, execute the intermediate transfer belt.

Code	Detail	Cause/Particulars of detection	Remarks
xx91		The result (Sig D) of computation based on the reading of the patch during patch detection (analog) is 1008 or higher. The patch sensor is damaged or has an open circuit. The connector has poor contact. The primary transfer pressure is faulty. The mounting of the developing assembly is faulty.	Turn off and then on the main power; then, execute the intermediate transfer belt.
xx92		The value delta D obtained from the result (Sig D) of computation based on the reading of the patch during patch detection is -5.0% or more 3 times continuously. The patch sensor may be damaged or has an open circuit. The connector has poor contact. The primary transfer engagement is faulty. The mounting of the developing assembly is faulty. The amount of supply is low.	Turn off and then on the main power; then, execute the intermediate transfer belt.
xx93		The value delta D obtained from the result (Sig D) of computation based on the reading of the patch during patch detection is +5.0% or lower 3 times continuously. The patch sensor is damaged or has an open circuit. The connector has poor contact. The primary transfer pressure is faulty. The mounting of the developing assembly is faulty. The amount of supply is low.	Turn off and then on the main power; then, execute the intermediate transfer belt.
xxA0		For ATR control, the Sig value is lower than 62. The ATR sensor is damaged or has an open circuit. The connector has poor contact.	Turn off and then on the main power; then, execute the intermediate transfer belt.
xxA1		For ATR control, the Ref value is lower than 62. The ATR sensor is damaged or has an open circuit. The connector has poor contact.	Turn off and then on the main power; then, execute the intermediate transfer belt.
xxA2		For ATR control, the Sig value is 960 or higher. The ATR sensor is damaged or has an open circuit. The connector has poor contact. The opening/closing of the shutter is faulty.	Turn off and then on the main power; then, execute the intermediate transfer belt.
xxA3		For ATR control, the Ref value is 960 or higher. The ATR sensor is damaged or has an open circuit. The connector has poor contact.	Turn off and then on the main power; then, execute the intermediate transfer belt.
xxA8		The T/D ratio identified for ATR control has exceeded the upper limit (12%) 3 times continuously. The ATR sensor is damaged or has an open circuit. The connector has poor contact. The amount of supply is too high.	Turn off and then on the main power; then, execute the intermediate transfer belt.
xxA9		The T/D ratio identified for ATR control has exceeded the lower limit (3%) 3 times continuously. The ATR sensor is damaged or has an open circuit. The connector has poor contact. The amount of supply is too low.	Turn off and then on the main power; then, execute the intermediate transfer belt.
xxC0		The variation among the 8 samplings of the light Sig value is 100 or higher. The ATR sensor is damaged or has an open circuit. The connector has poor contact. The stirring of toner is faulty.	Turn off and then on the main power; then, execute the intermediate transfer belt.
xxC1		The variation among the 8 samplings of the light Ref value is 100 or higher. The ATR sensor is damaged or has an open circuit. The connector has poor contact.	Turn off and then on the main power; then, execute the intermediate transfer belt.
xxC2		The variation among the 8 samplings of the patch Sig value is 400 or higher. The patch sensor is damaged or has an open circuit. The connector has poor contact. The primary transfer engagement is faulty.	Turn off and then on the main power; then, execute the intermediate transfer belt.

Code	Detail	Cause/Particulars of detection	Remarks
xxD0		For INIT control (service mode INISET-*) at time of initial setup, the average of the light Sig values is 200 or lower. The ATR sensor is damaged or has an open circuit. The connector has poor contact. The amount of supply is low.	Turn off and then on the main power; then, execute the intermediate transfer belt.
xxD1		For INIT control (service mode INISET-*) at time of initial setup, the average of the light Ref values is 462 or lower. The ATR sensor is damaged or has an open circuit. The connector has poor contact.	Turn off and then on the main power; then, execute the intermediate transfer belt.
xxD2		For INIT control (service mode INISET-*) at time of initial setup, the average of the patch Sig values is 200 or lower. The patch sensor is damaged or has an open circuit. the connector has poor contact. The primary transfer engagement is faulty. The mounting of the developing assembly is faulty.	Turn off and then on the main power; then, execute the intermediate transfer belt.
xxD4		For INTI control (service mode INISET-*) at time of initial setup, the average of the light Sig values is 800 or higher. The ATR sensor is damaged or has an open circuit. The connector has poor contact. The amount of supply is too high.	Turn off and then on the main power; then, execute the intermediate transfer belt.
xxD5		For INTI control (service mode INISET-*) at time of initial setup, the average of the light Ref values is 562 or higher. The ATR sensor is damaged or has an open circuit. The connector has poor contact.	Turn off and then on the main power; then, execute the intermediate transfer belt.
xxDA		For INIT control (service mode INISET-*) at time of initial setup, the variation among the 72 night Sig value samplings is 100 or more. The ATR sensor is damaged or has an open circuit. The connector has poor contact. The stirring of toner is faulty.	Turn off and then on the main power; then, execute the intermediate transfer belt.
xxDB		For INIT control (service mode INISET-*) at time of initial setup, the variation among the 72 light Ref samplings is 100 or more. The ATR sensor is damaged or has an open circuit. The connector has poor contact.	Turn off and then on the main power; then, execute the intermediate transfer belt.
xxDC		For INIT control (service mode INISET-*), the average of the patch Sig values is 800 or higher. The patch sensor is damaged or has an open circuit. The connector has poor contact. the primary transfer engagement if faulty. The mounting of the developing assembly is faulty. The amount of supply is too high.	Turn off and then on the main power; then, execute the intermediate transfer belt.
xxF1		The connector or the color toner supply clutch is not connected.	Turn off and then on the main power; then, execute the intermediate transfer belt.
xxFF		There is no toner inside the Bk developing assembly. -the toner is not supplied to the developing assembly correctly. -the hopper stirring motor is not rotating normally. The hopper connector has poor contact. The black toner supply motor (M25) is faulty. The hopper stirring motor (M23) is faulty. The black toner level sensor is faulty. The DC controller is faulty.	Turn off and then on the main power; then, execute the intermediate transfer belt.

14.3.15 E021

0004-3203

T-14-17

Code	Detail	Cause/Particulars of detection	Remarks
E021		There is an error in the rotation of the developing assembly.	
	0001	The developing rotary home position is not detected. The motor rotates out of sync because of poor torque caused by any of the following: The developing rotary HP sensor is faulty; the wiring of the DC controller is faulty; there is an excess load on the developing assembly.	Turn off and then on the main power.
	0002	The length of the flag detected during rotation is longer or shorter than the designed flag. The motor rotates out of sync because of poor torque caused by any of the following: the developing rotary HP sensor is faulty; the wiring of the DC controller PCB is faulty; there is an excessive load on the developing assembly.	Turn off and then on the main power.

14.3.16 E023

0004-3557

T-14-18

Code	Detail	Cause/Particulars of detection	Remarks
E023		The developing motor (M23) does not rotate normally.	
	0001	After motor start-up, a lock state is not detected for 1 sec or more.	Turn off and then on the main power.

14.3.17 E025

0004-3561

T-14-19

Code	Detail	Cause/Particulars of detection	Remarks
E025		There is an over-current in the toner feed motor or the cartridge motor.	
	0001	There is an overcurrent in the hopper stirring motor (M23).	Turn off and then on the main power.
	0002	There is an over-current in the black toner supply motor (M25).	Turn off and then on the main power.
	0410	The connector of the black toner supply motor (M25) is identified as being disconnected.	Turn off and then on the main power.

14.3.18 E032

0005-5699

T-14-20

Code	Detail	Cause/Particulars of detection	Remarks
E032		The NE connector counter does not operate.	
	0001	There is an open circuit in the line for the count pulse signal.	Turn off the main power, and check the cable for an open circuit; then, turn on the main power.

14.3.19 E043

0004-3564

T-14-21

Code	Detail	Cause/Particulars of detection	Remarks
E043		There is an error in the 3.5K paper deck pickup motor, causing an error signal.	
	0001	After motor start-up, a lock state is not detected for 1 sec or more. The mechanical load such as on the feeding system is excessive.	Turn off and then on the main power.

14.3.20 E051

0004-3569

T-14-22

Code	Detail	Cause/Particulars of detection	Remarks
E051		The horizontal registration home position is not detected within a specific period of time. The horizontal registration position is faulty (0003).	
	0001	The horizontal registration home position is not detected within a specific period of time.	Turn off and then on the main power.
	0002	The ON edge of the SUS plate is not detected during a search for home position.	Turn off and then on the main power.
	0003	The logical motor position differs between before and after the detection operation.	Turn off and then on the main power.

14.3.21 E061

0004-3573

T-14-23

Code	Detail	Cause/Particulars of detection	Remarks
E061		At time of potential control, a specific level of potential is absent. Or, the limiter goes on.	
	0001	When forming an image, the potential is 10 V or less during initial rotation.	Turn off and then on the main power.
	0002	At time of potential control, the potential is 10 V or less during initial rotation.	Turn off and then on the main power.
	0003	While the grid bias is being adjusted, a level of potential higher than the grid bias is sampled.	Turn off and then on the main power.
	0005	The difference in potential between dark and light areas is less than 100 V.	Turn off and then on the main power.
	0007	During adjustment of EPC offset, the potential that is read is outside the +/-30 V range.	Turn off and then on the main power.
	0008	During dark area potential adjustment, the sampling value is too low.	Turn off and then on the main power.
	0010	The sampling of the light area potential is faulty.	Turn off and then on the main power.

14.3.22 E070

0004-3209

T-14-24

Code	Detail	Cause/Particulars of detection	Remarks
E070		There is an error in the detection of the ITB home position. xx=01: HP1, xx=02: HP2; only at ITB 1/1 speed; XX=00: no distinction	
	00XX	The home position of the intermediate transfer belt is not detected within a specific period of time (4 sec). The ITB HP sensor is faulty.	Turn off the main power, and check the DC controller PCB and the ITB HP sensor; then, turn on the main power.
	01XX	The period of time between when the home position of the intermediate transfer belt is detected and the next home position is detected is longer than specified (standard period +5%). The presence of a tear may have caused the sensor to wrongly identify it as indicating the home position.	Turn off the main power, and check the drive of the intermediate transfer belt; then, turn on the main power.
	02XX	The period of time between when the home position of the intermediate transfer belt is detected and when the next home position is detected is shorter than specified (standard time -5%). The intermediate transfer belt slips on the drive roller, causing a delay in the timing at which the home position is detected.	Turn off the main power, and check the surface of the intermediate transfer belt for a tear; then, turn on the main power.
	03XX	The detection of the home position of the intermediate transfer belt has failed once. ITB HP1 and ITB HP2 must occur alternately; however, the same state has been detected continuously.	Turn off the main power, and check the DC controller PCB and the ITB HP sensor; then turn on the main power.

14.3.23 E073

0004-3581

T-14-25

Code	Detail	Cause/Particulars of detection	Remarks
E073		With the front door closed, the transfer drawer connector or the transfer frame drawer connector is not connected.	
	0001	The result of detecting the feed unit indicates the absence of the unit.	Turn off and then on the main power.

14.3.24 E077

0004-3587

T-14-26

Code	Detail	Cause/Particulars of detection	Remarks
E077		The home position of the secondary transfer roller (engagement) is not detected.	
	0001	The HP sensor does not go on within 5 sec after the start of a HP search.	Turn off and then on the main power.

14.3.25 E078

0005-5700

T-14-27

Code	Detail	Cause/Particulars of detection	Remarks
E078		The home position of the transfer belt cleaner unit (engagement) is not detected.	
	0001	The HP sensor does not go on within 5 sec after the start of a HP search.	Turn off and then on the main power.

14.3.26 E079

0004-3597

T-14-28

Code	Detail	Cause/Particulars of detection	Remarks
E079		The home position of the outside heating roller (engagement) is not detected. The outside heating roller (engagement) home position sensor does not go off.	
	0001	The HP sensor does not go on within 5 sec after the start of an HP search.	Turn off and then on the main power.
	0002	If there is an open circuit in the home position sensor of the outside heating roller (engagement) home position sensor, the state of the sensor will be identified as being ON. An error will be identified if the sensor fails to go off when it is at a point where it must normally go on and the outside heating roller shift motor is driven.	Turn off and then on the main power.

14.3.27 E100

0004-3216

T-14-29

Code	Detail	Cause/Particulars of detection	Remarks
E100		The BD is not detected.	
	0001	The BD signal is not detected when the polygon scanner has been driven for a specific period of time.	Turn off the main power, and check the DC controller PCB and the 24V system fuse; then, turn on the main power.
	0002	The BD signal is not detected while the polygon scanner is rotating stably.	Turn off the main power, and check the DC controller PCB and the 24V system fuse; then, turn on the main power.

14.3.28 E110

0004-3219

T-14-30

Code	Detail	Cause/Particulars of detection	Remarks
E110		There is a scanner motor error.	
	0001	The FG signal is not detected within a specific period of time after the polygon scanner has been driven.	Turn off the main power, and check the DC controller PCB and the 24V system fuse; then, turn on the main power.
	0002	The FG signal is not detected within a specific period of time after the polygon scanner has been driven. (the interval from when the motor starts to rotate and VLock=H is more than a specific length of time)	Turn off the main power, and check the DC controller PCB and the 24V system fuse; then, turn on the main power.
	0003	The FG signal is not detected while the polygon scanner is rotating stably. (VLock goes off when VLock=H and PLock=L)	Turn off the main power, and check the DC controller PCB and the 24V system fuse; then, turn on the main power.

14.3.29 E197

0005-8240

T-14-31

Code	detail	Cause/Particulars of detection	Remarks
E197		There is an error in the communication with the fixing feed PCB.	
	0002	In the course of initializing communication between the DC controller and the fixing/feeding unit, as many as 10 communication errors occur continuously.	Turn off the main power, and check the DC controller PCB wiring and the 24V system fuse; then, turn on the main power.
	0003	Following the end of initialization of the communication between the DC controller and the fixing/feeding unit, as many as 10 communication errors occur continuously.	Turn off the main power, and check the DC controller PCB wiring and the 24V system fuse; then, turn on the main power.
	0004	At the start of drum initial multiple rotation, there is no signal indicating the start of 24V in the fixing assembly in the communication between the DC controller and the fixing/feeding unit.	Turn off the main power, and check the DC controller PCB wiring and the 24V system fuse; then, turn on the main power.

14.3.30 E202

0004-3270

T-14-32

Code	Detail	Cause/Particulars of detection	Remarks
E202		There is an HP error.	
	0001	An error is found during the forward trip of the HP search. The scanner HP sensor is faulty. The scanner motor is faulty. The reader controller is faulty.	Check the harness connector for connection; then, as necessary, replace the faulty part.
	0002	An error is found during the return trip of the HP search. The scanner HP sensor is faulty. The scanner motor is faulty. The reader controller PCB is faulty.	Check the harness connector for connection; then, as necessary, replace the faulty part.

14.3.31 E225

0004-3275

T-14-33

Code	Detail	Cause/Particulars of detection	Remarks
E225		The lamp has blown.	
	0001	The level of shading is lower than specified.	Check the harness connector for connection. Check the scanning lamp (xenon), inverter, and reader controller PCB.

14.3.32 E227

0004-3545

T-14-34

Code	Detail	Cause/Particulars of detection	Remarks
E227		There is a power supply (24V) error.	
	0001	At power-on, the 24V port is off.	Check the power supply harness connector for connection; then, as necessary, replace the power supply.
	0002	At the start of a job, the 24V port is off.	Check the power supply harness connector for connection; then, as necessary, replace the power supply.
	0003	At the end of a job, the 24V port is off.	Check the power supply harness connector for connection; then, as necessary, replace the power supply.
	0004	While a load is being driven, the 24V port is off.	Check the power supply harness connector for connection; then, as necessary, replace the power supply.

14.3.33 E240

0004-3223

T-14-35

Code	Detail	Cause/Particulars of detection	Remarks
E240		There is a DDI-P communication error.	
	0000	There is a DDI-P communication error (error in communication between master and slave 0).	Turn off the main power, and check the wiring of the DC controller PCB and the 24V system fuse; then, turn on the main power.

14.3.34 E248

0004-3281

T-14-36

Code	Detail	Cause/Particulars of detection	Remarks
E248		There is an error in the EEPROM.	
	0000	At time of start-up, a check error has occurred on the SRAM board.	Turn off the main power, and check the SRAM board; then, as necessary, replace the SRAM board, and turn on the main power.
	0001	There is a power-on error.	Replace the reader controller PCB.
	0002	There is a write error.	Replace the reader controller PCB.
	0003	There is a wire/read error.	Replace the reader controller PCB.

14.3.35 E351

0005-5701

T-14-37

Code	Detail	Cause/Particulars of detection	Remarks
E351		There is an error in the main controller PCB (sub).	
	0000	At start-up, there is an error in the communication between main controller PCB (sub) and the main controller PCB (main).	Turn off the main power, and replace the main controller PCB (sub). If the result is not good, replace the main controller PCB (main), and turn on the main power.

14.3.36 E400

0004-3289

T-14-38

Code	Detail	Cause/Particulars of detection	Remarks
E400		There is a DF communication error.	
	0001	There is a check sum error.	Disconnect and connect the harness connector; then, replace the reader controller PCB or the ADF DC controller.
	0002	There is a reception status error.	Disconnect and connect the harness connector; then, replace the reader controller PCB or the ADF DC controller.
	0003	There is a reception interrupt error.	Disconnect and connect the harness connector; then, replace the reader controller PCB or the ADF DC controller.

14.3.37 E413

0004-3546

T-14-39

Code	Detail	Cause/Particulars of detection	Remarks
E413		There is an error in the DF shift motor.	
	0001	The shift HP sensor is open.	Check the harness; then, as necessary, replace the sensor and motor. Check the mounting of the parts around the cam.
	0002	The shift HP sensor is closed.	Check the harness; then, as necessary, replace the sensor and motor. Check the mounting of the parts around the cam.

14.3.38 E490

0004-3310

T-14-40

Code	Detail	Cause/Particulars of detection	Remarks
E490		The DF is of the wrong model.	
	0001	The installed DF is not of the correct type.	Replace the DF with one of an appropriate type.

14.3.39 E500

0005-0304

T-14-41

Code	Detail	Cause/Particulars of detection	Remarks
E500		There is a finisher communication error.	
	0001	There is an error in data communication. An error has been detected in terms of the number of errors or the duration of the error in the communication between copier and finisher.	Turn off the main power, and check the DC controller, wiring of the finisher PCB, and 24V system fuse; then, turn on the main power.

14.3.40 E503

0005-5730

T-14-42

Code	Detail	Cause/Particulars of detection	Remarks
E503		There is an error in the communication within the finisher (finisher R1/R2).	
	0002	finisher-to-saddle unit communication error	Check the connection between the saddle stitcher controller PCB and the finisher controller PCB.
	0003	finisher-to-punch unit communication error	Check the connection between the Punch controller PCB and the finisher controller PCB.

14.3.41 E505

0005-5756

T-14-43

Code	Detail	Cause/Particulars of detection	Remarks
E505		There is an error in the backup memory of the finisher (finer R1/R2).	
	0001	Indicates that there is an error in the check sum of the EEPROM on the finisher controller PCB at time of power-on.	Turn off the main power, and check the DC control, wiring of the finisher PCB, and 24V system fuse; then, turn on the main power.
	0002	Indicates that there is an error in the check sum of the EEPROM on the puncher driver PCB at time of power-on.	Turn off the main power, and check the wiring of the DC controller PCB and the puncher controller PCB: then, check the 24V system fuse, and turn back on the main power.

14.3.42 E514

0005-5761

T-14-44

Code	Detail	Cause/Particulars of detection	Remarks
E514		There is an error in the trailing edge assist motor (finisher R1/R2).	
	8001	The home position sensor does not go off when the trailing edge assist motor has been rotated for a specific period of time.	<ol style="list-style-type: none"> 1) Check the trailing edge assist home position sensor. Is the sensor normal? 2) Check the wiring between the finisher controller PCB and the trailing edge assist motor. Is the wiring normal? 3) Check the trailing edge assist mechanism. Is there a fault? 4) Try replacing the trailing edge assist motor. Is the problem corrected?
	8002	The home position sensor does not go on when the trailing edge assist motor has been rotated for a specific period of time.	<ol style="list-style-type: none"> 1) Check the trailing edge assist home position sensor. Is the sensor normal? 2) Check the wiring between the finisher controller PCB and the trailing edge assist motor. Is the wiring normal? 3) Check the trailing edge assist mechanism. Is there a fault? 4) Try replacing the trailing edge assist motor. Is the problem corrected?

14.3.43 E519

0005-5800

T-14-45

Code	Detail	Cause/Particulars of detection	Remarks
E519		There is an error in the gear change motor (finisher R1/R2).	
	8001	The home position sensor does not go off within a specific period of time after the gear change motor has started to rotate.	1) Check the gear change home position sensor. Is the sensor normal? 2) Check the wiring between the fisher controller PCB and the gear change motor. Is the wiring normal? 3) Check the gear change mechanism. Is there a fault? 4) Try replacing the gear change motor. Is the problem corrected?
	0002	The home position sensor does not go on within a specific period of time after the gear change motor has started to rotate.	1) Check the gear change home position sensor. Is the sensor normal? 2) Check the wiring between the fisher controller PCB and the gear change motor. Is the wiring normal? 3) Check the gear change mechanism. Is there a fault? 4) Try replacing the gear change motor. Is the problem corrected?

14.3.44 E530

0005-5809

T-14-46

Code	Detail	Cause/Particulars of detection	Remarks
E530		There is an error in front alignment (finisher R1/R2).	
	8001	The alignment motor has started to rotate. The home position sensor does not go off within a specific period of time after the front	1) Check the pre-aligning plate home position sensor. Is the sensor normal? 2) Check the wiring between the finisher controller PCB and the pre-aligning plate motor. Is the wiring normal? 3) Check the path of the aligning plate. Is there a mechanical obstacle? 4) Try replacing the pre-aligning plate motor. Is the problem corrected?
	8002	The home position sensor does not go on within a specific period of time after the front alignment motor has started to rotate.	1) Check the pre-aligning plate home position sensor. Is the sensor normal? 2) Check the wiring between the finisher controller PCB and the pre-aligning plate motor. Is the wiring normal? 3) Check the path of the aligning plate. Is there a mechanical obstacle? 4) Try replacing the pre-aligning plate motor. Is the problem corrected?

14.3.45 E531

0005-5814

T-14-47

Code	Detail	Cause/Particulars of detection	Remarks
E531		There is an error in stapling (finisher R1/R2).	
	0001	The home position sensor does not go off within a specific period of time after the stapler motor has started to rotate.	1) Check the wiring between the finisher controller PCB and the stapler. Is the wiring normal? 2) Try replacing the stapler. Is the problem corrected?
	0002	The home position sensor does not go on within a specific period of time after the stapler motor has started to rotate.	1) Check the wiring between the finisher controller PCB and the stapler. Is the wiring normal? 2) Try replacing the stapler. Is the problem corrected?

14.3.46 E532

0005-5815

T-14-48

Code	Detail	Cause/Particulars of detection	Remarks
E532		There is an error in the shift mechanism of the stapler. (finisher R1/R2)	
	8001	The home position sensor does not go off within a specific period of time after the stapler shift motor has started to rotate.	1) Check the stapler shift home position sensor. Is the sensor normal? 2) Check the wiring between the finisher controller PCB and the stapler shift motor. Is the wiring normal? 3) Check the path of the stapler shift base. Is there a mechanical obstacle? 4) Try replacing the stapler shift motor. Is the problem corrected?
	8002	The home position sensor does not go on within a specific period of time after the stapler shift motor has started to rotate.	1) Check the stapler shift home position sensor. Is the sensor normal? 2) Check the wiring between the finisher controller PCB and the stapler shift motor. Is the wiring normal? 3) Check the path of the stapler shift base. Is there a mechanical obstacle? 4) Try replacing the stapler shift motor. Is the problem corrected?

14.3.47 E535

0005-5816

T-14-49

Code	Detail	Cause/Particulars of detection	Remarks
E535		There is an error in the staple swing mechanism. (finisher R1/R2)	
	8001	The home position sensor does not go off even when the swing motor has rotated for a specific period of time.	1) Check the swing home position sensor. Is the sensor normal? 2) Check the wiring between the finisher controller PCB and the swing motor. Is the wiring normal? 3) Check the swing mechanism. Is there a fault? 4) Try replacing the swing motor. Is the problem corrected?
	8002	The home position sensor does not go on even when the swing motor has rotated for a specific period of time.	1) Check the swing home position sensor. Is the sensor normal? 2) Check the wiring between the finisher controller PCB and the swing motor. Is the wiring normal? 3) Check the swing mechanism. Is there a fault? 4) Try replacing the swing motor. Is the problem corrected?
	0003	There is an error in relation to an hazardous area.	1) Check the swing home position sensor. Is the sensor normal? 2) Check the wiring between the finisher controller PCB and the swing motor. Is the wiring normal? 3) Check the swing mechanism. Is there a fault? 4) Try replacing the swing motor. Is the problem corrected?

14.3.48 E537

0005-5817

T-14-50

Code	Detail	Cause/Particulars of detection	Remarks
E537		rear alignment error (Finisher-R1/R2)	
	8001	The home position sensor does not go off even when the swing motor has rotated for a specific period of time.	1) Check the post-aligning plate home position sensor. Is the sensor normal? 2) Check the wiring between the finisher controller PCB and the post-aligning plate motor. Is the wiring normal? 3) Check the path of the aligning plate. Is there a mechanical obstacle? 4) Try replacing the post-aligning plate motor. Is the problem corrected?
	8002	The home position sensor does not go on even when the swing motor has rotated for a specific period of time.	1) Check the post-aligning plate home position sensor. Is the sensor normal? 2) Check the wiring between the finisher controller PCB and the post-aligning plate motor. Is the wiring normal? 3) Check the path of the aligning plate. Is there a mechanical obstacle? 4) Try replacing the post-aligning plate motor. Is the problem corrected?

14.3.49 E540

0005-5818

T-14-51

Code	Detail	Cause/Particulars of detection	Remarks
E540		upper tray ascent/descent error (Finisher-R1/R2)	
8001	upper tray ascent/descent motor clock error		1) Check the No. 1 tray area sensors 1 through 3. Are the sensors normal? 2) Check the wiring between finisher controller PCB and the No. 1 tray shift motor. Is the wiring normal? 3) Is there a fault in the ascent/descent mechanism of the tray? 4) Try replacing the No. 1 tray shift motor. Is the problem corrected?
8002	area error		1) Check the No. 1 tray area sensors 1 through 3. Are the sensors normal? 2) Check the wiring between finisher controller PCB and the No. 1 tray shift motor. Is the wiring normal? 3) Is there a fault in the ascent/descent mechanism of the tray? 4) Try replacing the No. 1 tray shift motor. Is the problem corrected?
8003	safety switch activation		1) Check the No. 1 tray area sensors 1 through 3. Are the sensors normal? 2) Check the wiring between finisher controller PCB and the No. 1 tray shift motor. Is the wiring normal? 3) Is there a fault in the ascent/descent mechanism of the tray? 4) Try replacing the No. 1 tray shift motor. Is the problem corrected?

14.3.50 E542

0005-5819

T-14-52

Code	Detail	Cause/Particulars of detection	Remarks
E542		lower tray ascent/descent error (Finisher-R1/R2)	
8001	lower tray ascent/descent motor clock error		1) Check the No. 2 tray sensors 1 through 3. Are the sensors normal? 2) Check the wiring between the finer controller PCB and the No. 2 tray shift motor. Is the wiring normal? 3) Is there a fault in the tray ascent/descent mechanism? 4) Try replacing the No. 2 tray shift motor. Is the problem corrected?
8002	area error		1) Check the No. 2 tray sensors 1 through 3. Are the sensors normal? 2) Check the wiring between the finer controller PCB and the No. 2 tray shift motor. Is the wiring normal? 3) Is there a fault in the tray ascent/descent mechanism? 4) Try replacing the No. 2 tray shift motor. Is the problem corrected?
0003	safety switch activation		1) Check the No. 2 tray sensors 1 through 3. Are the sensors normal? 2) Check the wiring between the finer controller PCB and the No. 2 tray shift motor. Is the wiring normal? 3) Is there a fault in the tray ascent/descent mechanism? 4) Try replacing the No. 2 tray shift motor. Is the problem corrected?

14.3.51 E584

0005-5822

T-14-53

Code	Detail	Cause/Particulars of detection	Remarks
E584		shutter unit error (Finisher-R1/R2)	
	8001	The shutter open sensor does not go off (i.e., the shutter is not closed).	1) Check the shutter home position sensor. Is the sensor normal? 2) Check the wiring between the finisher controller PCB and the stack edging motor and between the finisher controller PCB and the shutter open/close clutch. Is the wiring normal? 3) Is there a fault in the shutter mechanism? 4) Try replacing the stack edging motor or the shutter open/close clutch. Is the problem corrected?
	0002	The shutter open/closed sensor does not go on (i.e., the shutter does not open).	1) Check the shutter home position sensor. Is the sensor normal? 2) Check the wiring between the finisher controller PCB and the stack edging motor and between the finisher controller PCB and the shutter open/close clutch. Is the wiring normal? 3) Is there a fault in the shutter mechanism? 4) Try replacing the stack edging motor or the shutter open/close clutch. Is the problem corrected?
	0003	hazardous area	1) Check the shutter home position sensor. Is the sensor normal? 2) Check the wiring between the finisher controller PCB and the stack edging motor and between the finisher controller PCB and the shutter open/close clutch. Is the wiring normal? 3) Is there a fault in the shutter mechanism? 4) Try replacing the stack edging motor or the shutter open/close clutch. Is the problem corrected?

14.3.52 E590

0005-5823

T-14-54

Code	Detail	Cause/Particulars of detection	Remarks
E590		There is an error in the punch motor. (punch unit)	
	8001	The punching home position sensor is not detected when the punch motor has been driven for 200 msec.	Check the punch home position sensor, horizontal registration motor, and punch driver PCB; then, turn off and then on the main power.
	8002	The puncher does not detect the punching home position after the motor has stopped (initial operation).	Check the punch home position sensor, horizontal registration motor, and punch driver PCB; then, turn off and then on the main power.

14.3.53 E591

0005-5824

T-14-55

Code	Detail	Cause/Particulars of detection	Remarks
E591		There is an error in the punch dust sensor. (punch unit)	
	8001	There is an error in the light-receiving voltage at time of light emission.	Turn off and then on the main power.
	8002	There is an error in the light-receiving voltage without emission of light.	Turn off and then on the main power.

14.3.54 E592

0005-5825

T-14-56

Code	Detail	Cause/Particulars of detection	Remarks
E592		There is an error in the punch horizontal registration sensor. (punch unit)	
	8001	There is an error in the light-receiving voltage at time of light emission. (trailing edge sensor)	Turn off and then on the main power.
	8002	There is an error in the light-receiving voltage without emission of light. (trailing edge sensor)	Turn off and then on the main power.
	8003	There is an error in the light-receiving voltage with emission of light. (horizontal registration sensor 1)	Turn off and then on the main power.
	8004	There is an error in the light-receiving voltage without emission of light. (horizontal registration sensor 1)	Turn off and then on the main power.
	8005	There is an error in the light-receiving voltage with emission of light. (horizontal registration sensor 2)	Turn off and then on the main power.
	8006	There is an error in the light-receiving voltage without emission of light. (horizontal registration sensor 2)	Turn off and then on the main power.
	8007	There is an error in the light-receiving voltage it the presence of emission of light. (horizontal registration sensor 3)	Turn off and then on the main power.
	8008	There is an error in the light-receiving voltage without emission of light. (horizontal registration sensor 3)	Turn off and then on the main power.
	8009	There is an error in the light-receiving voltage with emission of light. (horizontal registration sensor 4)	Turn off and then on the main power.
	800A	There is an error in the light-receiving voltage without emission of light. (horizontal registration sensor 4)	Turn off and then on the main power.

14.3.55 E593

0005-5826

T-14-57

Code	Detail	Cause/Particulars of detection	Remarks
E593		There is an error in the punch shift motor. (punch unit)	
	8001	The light-receiving voltage HP sensor does not go off at time of light emission.	Turn off and then on the main power.
	8002	The light-receiving voltage HP sensor does not go on without emission of light.	Turn off and then on the main power.

14.3.56 E5F0

0005-5827

T-14-58

Code	Detail	Cause/Particulars of detection	Remarks
E5F0		There is an error in saddle paper positioning.	
	0001	The paper positioning plate home position sensor does not go on when the paper positioning plate motor has been driven for 1.33 sec. The paper positioning plate motor (M4S) or the paper positioning plate home position sensor (PI7S) is faulty.	Check the paper positioning plate motor (M4S) /paper positioning plate home position sensor (PI7S).
	0002	The paper positioning plate home position sensor does not go off when the paper positioning plate motor has been driven for 1 sec. The paper positioning plate motor (M4S) or the paper positioning plate home position sensor (PI7S) is faulty.	Check the paper positioning plate motor (M4S) /paper positioning plate home position sensor (PI7S).

14.3.57 E5F1

0005-5829

T-14-59

Code	Detail	Cause/Particulars of detection	Remarks
E5F1		There is an error in saddle paper folding.	
	0001	The number of detection pulses of the paper folding motor clock sensor is lower than specified.	Check the paper folding motor (M2S) /paper folding motor clock sensor (PI4S).
	0002	The state of the paper folding home position sensor does not change when the paper folding motor has been driven for 3 sec.	Check the paper folding motor (M2S) /paper folding motor clock sensor (PI4S).

14.3.58 E5F2

0005-5832

T-14-60

Code	Detail	Cause/Particulars of detection	Remarks
E5F2		There is an error in the saddle guide.	
0001		The guide home position sensor does not go on when the guide motor has been driven for 0.45 sec. The guide motor (M3S) or the guide home position sensor (PI3S) is faulty.	Check the guide motor (M3S) /guide home position sensor (PI13S).
0002		The guide home position sensor does not go off when the guide motor has been driven for 1 sec. The guide motor (M3S) or the guide home position sensor (PI3S) is faulty.	Check the guide motor (M3S) /guide home position sensor (PI13S).

14.3.59 E5F3

0005-5834

T-14-61

Code	Detail	Cause/Particulars of detection	Remarks
E5F3		There is an error in saddle alignment.	
0001		The aligning plate home position sensors does not go on when the alignment motor has been driven for 0.5 sec (during initialization, 1.67 sec).	Check the alignment motor (M5S) / aligning plate home position sensor (PI5S).
0002		The alignment plate home position sensor does not go off when the alignment motor has been driven for 1 sec.	Check the alignment motor (M5S) / aligning plate home position sensor (PI5S).

14.3.60 E5F4

0005-5836

T-14-62

Code	Detail	Cause/Particulars of detection	Remarks
E5F4		There is an error in saddle rear sampling.	
0001		The stitching home position sensor does not go on when the stapler motor (rear) is rotated in reverse for 0.5 sec or more.	Check the stitching motor (rear; M6S) / stitching home position sensor (rear; MS5S).
0002		The stitching home position sensor does not go off when the switch motor (rear) is reverse for 0.5 sec or more.	Check the stitching motor (rear; M6S) / stitching home position sensor (rear; MS5S).

14.3.61 E5F5

0005-5837

T-14-63

Code	Detail	Cause/Particulars of detection	Remarks
E5F5		There is an error in saddle front stapling.	
	0001	The stitching home position sensor does not go on when the switch motor (front) is rotated in reverse for 0.5 sec or more.	Check the stitching motor (front; M7S) /stitching home position sensor (front; MS7S).
	0002	The stitching home position sensor does not go off when the switch motor (front) is rotated in normal direction for 0.5.	Check the stitching motor (front; M7S) /stitching home position sensor (front; MS7S).

14.3.62 E5F6

0005-5839

T-14-64

Code	Detail	Cause/Particulars of detection	Remarks
E5F6		There is an error in saddle butting.	
	8001	The paper pushing plate home position sensor does not go on when the paper pushing motor has been driven for 0.3 sec or more.	The paper pushing plate motor (M8S) or the paper pushing plate home position sensor (PI4) is faulty.
	8002	The paper pushing plate home position sensor does not go off when paper pushing plate motor has been driven for 80 msec or more.	The paper pushing plate motor (M8S) or the paper pushing plate home position sensor (PI4S) is faulty.
	8003	The number of detection pulses of the paper pushing plate motor clock sensor drops below a specific number.	The paper pushing plate motor (M8S) or the paper pushing plate motor clock sensor (PI1S) is faulty.
	8004	The paper pushing plate sensor does not go off when the paper pushing plate motor has been driven for 80 msec or more.	The paper pushing plate motor (M8S) or the paper pushing plate leading edge position sensor (PI15S) is faulty.
	8005	The paper pushing plate leading edge position sensor does not go on when the paper pushing plate motor has been driven for 0.3 sec or more.	The paper pushing plate motor (M8S) or the paper pushing plate leading edge position sensor (PI5S) is faulty.

14.3.63 E5F8

0005-5840

T-14-65

Code	Detail	Cause/Particulars of detection	Remarks
E5F8		There is an error in the saddle connector.	
	0001	The connector of the guide home position sensor is identified as being disconnected.	Check the connectors of the guide home position sensor (PI13S). Check the connectors of the paper pushing plate home position sensor (PI4S).
	0002	The connector of the paper pushing plate home position sensor is identified as being disconnected.	Check the connectors of the paper pushing plate leading edge position sensor (PI5S).
	0003	The connector of the paper pushing plate leading edge position sensor is identified as being disconnected.	Check the connectors of the paper pushing plate leading edge position sensor (PI5S).

14.3.64 E5F9

0005-5841

T-14-66

Code	Detail	Cause/Particulars of detection	Remarks
E5F9		There is an error in the saddle switch.	
	0001	With any of the following sensor is identifying its respective cover a being closed, the inlet cover switch is identified as being open for 1 sec or more after the start of the initial rotation of the machine or the start of printing: -inlet cover sensor (PI9S) -front cover open/closed sensor (PI2S) -delivery cover sensor (PI3S) Or, the front cover switch (MS2S) or the delivery cover switch (MS3S) is open.	Check the inlet cover switch (MS1S)/front cover switch (MS2S)/delivery cover switch (MS3S).
	0002	With any of the following sensor is identifying its respective cover as being closed, the front cove switch is identified as being open for 1 sec or more after the start of the initial rotation of the machine or the start of printing: -inlet cover sensor (PI9S) -front cover open/closed sensor (PI2S) -delivery cove sensor (PI3S)	Check the front cover switch (MS2S)/delivery cover switch (MS3S).
	0003	With any of the following sensors identifying its respective cover as being closed, the delivery cover switch is identified as being open for 1 sec or more after the start of the initial rotation of the machine or the start of printing: -inlet cover sensor (PI9S) -front cover open/closed sensor (PI2S) -delivery cover sensor (PI3S)	Check the delivery cover switch (MS3S).

14.3.65 E602

0005-0310

T-14-67

Code	Detail	Cause/Particulars of detection	Remarks
E602		There is a hard disk error.	




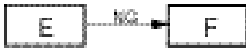
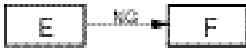
14.3.66 E602 in Detail

0005-5843







If the machine indicates 'E602-xyy', take the appropriate action according to the instructions indicated by the detail code.





⚠ If 'E602-xyy' is indicated, be sure always to turn off and then on the main power (so that auto recovery sequence is executed).

T-14-68

xx	Partition	yy	Description
00	HDD full	01	<p>The machine cannot recognize the HDD. The machine cannot find BOOTDEV at time of start-up.</p> <p>Remedy:</p> <p>Turn off the main power, and check the connection of the 2 cables from the HDD (power, SIDE); then, turn on the main power.</p> <p>At that time, check to see if the HDD rotates and power is supplied.</p> 
		02	<p>The machine cannot find the system software or the main controller (main PCB) in BOOTDEV.</p> <p>Remedy:</p> 
		03	<p>The machine detects a faulty sector while it is reading data from BOOTDEV.</p> <p>Remedy:</p> 
		06	<p>The machine cannot find the system software for the main controller (sub) CPU in BOOTDEV.</p> <p>Remedy:</p> 
		07	<p>The machine cannot find appropriate ICCProfile in BOOTDEV/PDLDEV.</p> <p>Remedy:</p> 

T-14-69

xx	Partition	yy	Description
01	DOSDEV	01,02	There is a read error or a file system error at time of start-up.
02	FSTDEV		Remedy:
03	DOSDEV2		
04	FSTPDEV		-if xxyy = 0701, 0702,
05	DOSDEV3		Remedy:
06	PDLDEV		Ask the user to collect address book data, transfer settings, and user mode data using the remote UI.
07	DOSDEV4		
08	BOOTDEV		-if xxyy = 0801, 0802,
09	DOSDEV5		Remedy:
FF	NOT TO SPECIFY TO SPECIFY	IMPOSSIBLE	 -if xxyy = FF01, FF02, Remedy: 
		03	There is an HDD contact fault or an opening system error. Remedy: Turn off the main power, and check the connection of the 2 cables (power, IDE) from the HDD; then, turn on the main power. At that time, check to see if the HDD is rotating and power is supplied. 
		11,21	There is an HDD contact faulty. Remedy: Turn off the main power, and check the connection of the 2 cables (power, IDE) from the HDD; then, turn on the main power. At that time, check to see if the HDD rotates and power is supplied. 

xx	Partition	yy	Description
		13,25	There is a read error. Remedy:  <pre> graph LR I[I] --> B[B] B --> F[F] </pre>
			-if xxyy = 0713, 0725, Remedy:  <pre> graph LR I[I] --> C[C] C --> F[F] </pre>
			-if xxyy= 0813, 0825, Remedy:  <pre> graph LR I[I] --> E[E] E --> F[F] </pre>
		10,12,14,2 2,23,24	There is a system error or a packet data error. Remedy:  <pre> graph LR E[E] --> F[F] </pre>

A:

- 1) Set '0' to the following: COPIER>FUNCTION>SYSTEM>CHK-TYPE.
- 2) Make the following selections, and press the OK key: COPIER>FUNCTION>SYSTEM>HD-CHECK*.
- 3) When the execution is over, turn off and then on the main power.

B:

- 1) While referring to "Formatting the HDD", enter the appropriate CHK-TYPE for the following: COPIER>FUNCTION>SYSTEM.
- 2) Make the following selections, and press the OK key: COPIER>FUNCTION>SYSTEM>HD-CLEAR.
- 3) When execution is over, turn off and then on the main power.

C:

- 1) ** Start up the machine in normal mode (i.e., by turning on the main power while pressing the 1 and 7 keys); then, make the following selections, and press the OK key: COPIER>FUNCTION>SYSTEM>DOWNLOAD.
- 2) Execute DOSDEV4 using the Service Support Tool.
- 3) When the execution is over, turn off and then on the main power.

D:

- 1) Replace the main controller (main) board.
- 2) Move the image memory (SDRAM) and the boot ROM from the old board to the new board.

E:

- 1) ** Start up the machine in safe mode (i.e., by turning on the main power while pressing the 2 and 8 keys).
- 2) Execute HDD formatting (ALL) and download the system software (SYSTEM, LANG, RUI) using the Service Support Tool.
- 3) When the execution is over, turn off and then on the main power.

F:

- 1) ** Replace the HDD, and start up the machine in safe mode (i.e., by turning on the main power while pressing the 2 and 8 keys).

2) Execute HDD formatting (ALL) and download the system software (SYSTEM, LANG, RUI) using the Service Support Tool.

3) When the execution is over, turn off and then on the main power.

G:

1) Set '1' to the following: COPIER>FUNCTION>SYSTEM>CHK-TYPE.

2) Make the following selections, and press the OK key: COPIER>FUNCTION>SYSTEM>HD-CLEAR.

3) When the execution is over, turn off and then on the main power.

H:

1) Turn off the main power, and turn on the power while pressing the 1 and 9 keys so that the machine will automatically start its recovery program* and turns its control panel solid black.

2) When the execution is over (i.e., when the screen is solid white), turn off and then on the main power.

⚠ If the machine does not start its recovery program in response to the foregoing operation, go to E.

I:

1) By referring to "Formatting the HDD," enter the appropriate CHK-TYPE in the following: COPIER>FUNCTION>SYSTEM.

2) Make the following selections, and press the OK key.

3) When the execution is over, turn off and then on the main power.

J:

1) Enter '4' to the following: COPIER>FUNCTION>SYSTEM>CHK-TYPE.

2) Make the following selections, and press the OK key: COPIER>FUNCTION>SYSTEM>HD-CHECK (1 to 5 min).

3) When the execution is over, turn off and then on the main power.

*Takes about 30 to 50 min.

**As necessary, ask the user to collect the address book data, transfer settings, and user mode data before starting the work.

T-14-70

' Formatting the HDD		
Partition	CHK-TYPE	Typical data that will be deleted
DOSDEV	1	all that relate to images (i.e., reservation, box, fax) mode memory, routine task button
FSTDEV	1	
DOSDEV2	1	
FSTPDEV	1	
DOSDEV3	2	PDL spool
PDLDEV	3	PDL-related file (front, registration form, ICCProfile)
DOSDEV4	4	user data (address book, transfer settings); system software
BOOTDEV	4	
DOSDEV5	5	-
not specified	0	-

14.3.67 E604

0005-0311

T-14-71

Code	Detail	Cause/Particulars of detection	Remarks
E604		There is a shortage of image memory (SDRAM).	
	0000	The amount of memory required by the model in question is not recognized.	Set it to the size of memory suited to the model in question.

14.3.68 E609

0005-9736

T-14-72

Code	details	Cause/Particulars of detection	Remarks
E609		E609 (Samsung HDD-related error code)	
	0008	The HDD does not increase to a specific temperature level within a specific time when the power is turned on.	Replace the HDD.
	0009	The HDD does not increase to a specific temperature level in relation to a sleep state.	Turn off and then on the power. If the return operation fails, replace the HDD.

14.3.69 E674

0005-0314

T-14-73

Code	Detail	Cause/Particulars of detection	Remarks
E674		There is an error in the fax board.	
	0001	The fax board is detected, but communication is not possible.	Turn off the main power, and check the fax board and the main controller PCB; then, turn on the main power. If the machine fails to reset, replaced the fax board or the main controller PCB.

14.3.70 E677

0005-0315

T-14-74

Code	Detail	Cause/Particulars of detection	Remarks
E677		There is an external controller error.	
	0003	An error has been detected by a check on the configuration when the external controller is being started up.	Turn off the main power, and check the cable; then, turn on the main power. If the machine fails to start up, re-install the system software of the external controller.
	0010	A controller for a non-Canon machine is connected.	Turn off the main power, and check to see if the controller is an appropriate type, and check the cable; then turn on the main power. If the machine fails to reset, re-install the system software of the external controller.
	0080	There is an error in the communication with the printer after the external controller has started up normally.	Turn off the main power, and check the cable; then, turn on the main power. If the machine fails to start up, re-install the system software of the external controller.

14.3.71 E710

0005-0316

T-14-75

Code	Detail	Cause/Particulars of detection	Remarks
E710		There is an error in IPC initialization.	
	0001	The machine fails to become ready within 3 sec after the IPC chip has started up.	Turn off the main power, and check the cable; then, turn on the main power.

14.3.72 E711

0005-0317

T-14-76

Code	Detail	Cause/Particulars of detection	Remarks
E711		There is an IPC communication error.	
	0002	An error has been detected 4 times or more within 1.5 sec after the communication has been interrupted between the finisher and the printer, and the machine does not reset.	Turn off the main power, and check the cable; then, turn on the main power. If the machine fails to reset, check the connector between the finisher and the copier for poor contact; as necessary, replace the finisher controller/DC controller.

14.3.73 E713

0004-3226

T-14-77

Code	Detail	Cause/Particulars of detection	Remarks
E713		There is a finisher communication error.	
	0001	There is an error in the IC used for communication by the sorter.	Turn off the main power switch, and check the wiring of the DC controller PCB and the finisher controller PCB, and check the 24V system fuse: then, turn on the main power switch. If the machine does not reset, replace the DC controller PCB/ finisher controller PCB.

14.3.74 E717

0005-0319

T-14-78

Code	Detail	Cause/Particulars of detection	Remarks
E717		There is an error in the communication with the NE controller.	
	0001	The NE controller that was connected before the power is turned off is not recognized after the power is turned on.	Check the cable, and reset in service mode: COPIER>FUNCTION>CLEAR>ERR.
	0002	An IPC open circuit or an IPC communication error is not reset.	Check the cable, and reset in service mode: COPIER>FUNCTION>CLEAR>ERR.

14.3.75 E719

0005-0320

T-14-79

Code	Detail	Cause/Particulars of detection	Remarks
E719		There is an error in the communication with the coin vendor/card reader.	
	0001	The coin vendor that is connected before the power is turned off is not recognized when the paper is turned on.	Check the cable, and reset in service mode: COPIER>FUNCTION>CLEAR>ERR.
	0002	-The IPC cable to the coin vendor is broken and the IPC communication cannot be recovered. -There is an open circuit in the pickup delivery signal line. -An improper connection is detected (short circuit between Tx and Rx of IPC).	Check the cable, and reset in service mode: COPIER>FUNCTION>CLEAR>ERR.
	0011	The card reader that is connected before the power is turned off is not recognized when the paper is turned on.	Check the cable, and reset in service mode: COPIER>FUNCTION>CLEAR>ERR.
	0012	There is an IPC cable open circuit or an IPC communication error in relation to the card reader that cannot be reset.	Check the cable, and reset in service mode: COPIER>FUNCTION>CLEAR>ERR.

14.3.76 E730

0005-0321

T-14-80

Code	Detail	Cause/Particulars of detection	Remarks
E730		There is a PDL error.	
1001		At the start of a job, an initialization error has occurred. There is a fault in the PDL software.	Perform PDL resetting, or turn off and then on the main power.
100A		A system error (e.g., failed initialization) has occurred during job processing. The PDL software has a fault.	Perform PDL resetting, or turn off and then on the main power.
100B		At start-up, a mismatch occurs between the version number indicated in the master font management file of /BOOTDEV and the bootable version. There is no master font management file in /BOOTDEV. There is an error in the PDL master font.	Perform PDL resetting, or turn off and then on the main power. If the machine fails to reset, re-install the font file or fully format and re-install the system software.
9004		There is an error in the PAI communication with the external controller. There is an OPEN/IF communication error.	Turn off the main power, and check the open I/F board and the cable; then, turn on the main power. If the machine fails to reset, replace the external controller, open I/F PCB, or the main controller PCB.
9005		There is an error in the connection of the video cable connected to the external controller.	Turn off the main power, and check the open I/F board and the cable; then turn on the main power. If the machine fails to reset, replace the external controller, open I/F PCB, or main controller PCB.
A006		PDL does not respond, subbootable is out of order or does not exist. There is a PDL communication error.	Perform PDL resetting, or turn off the main power, and check the connector of the UFR board; then, turn on the main power. If the machine fails to reset, re-install the firmware or replace the main control PCB.
A007		At time of start-up, a mismatch occurs between the version of the machine control software and the version of the PDL control software. The PDL version is wrong.	Perform PDL resetting, or turn off and then on the main power. If the machine fails to reset, fully format and re-install the system software.
B013		The font data is found to be damaged at start-up. PDL There is an error in the built-in font.	If the error is not reset when the main power has been turned off and then on, perform full system formatting and installation sessions.

14.3.77 E731

0005-0322

T-14-81

Code	Detail	Cause/Particulars of detection	Remarks
E731		There is a UFR board error.	
3000		There is a UFR board error. At start-up, the UFR board is not recognized.	Turn off the main power, and check the connection of the UFR board; then, turn on the main power. If the machine does not reset, replace the UFR board or the main controller PCB.
3001		At start-up, initialization of the UFR fails.	Turn off the main power, and check the connection of the UFR board; then, turn on the main power. If the machine fails to ret, replace the UFR board or the main control PCB.
3002		Initialization of Rambus fails.	Turn off the main power, and check the connection of the UFR board; then, turn on the main power. If the machine fails to ret, replace the UFR board or the main control PCB.
3015		While a job is being processed, there is no video data in the chip of the main controller PCB (main) although the software is operating without a problem.	Turn off and then on the main power. If the machine fails to start up, replace the main controller PCB.

14.3.78 E732

0005-0323

T-14-82

Code	Detail	Cause/Particulars of detection	Remarks
E732		There is an error in reader communication.	
0001		There is an error in reader communication.	Turn off the main power, and check the connectors to the reader, and check the power supply of the reader; then, turn on the main power.
9999		Although a printer model, the machine is identified as a reader unit at start-up. (A copier model is started up as a printer model when the RAM is initialized.)	Turn off and then on the main power. (The indication on the machine is limited to "Turn On the Power.")

14.3.79 E733

0005-0324

T-14-83

Code	Detail	Cause/Particulars of detection	Remarks
E733		There is a printer communication error.	
	0000	There is a printer communication error. At start-up, the printer is not detected.	Turn off the main power, and check the connectors to the DC controller PCB and the main controller PCB, and check the power supply of the printer; then, turn on the main power.
	0001	There is a DDI-P communication error.	Turn off the main power, and check the connectors to the DC control PCB and the main controller PCB, and check the power supply of the printer; then, turn on the main power.

14.3.80 E740

0005-0325

T-14-84

Code	Detail	Cause/Particulars of detection	Remarks
E740		There is an Ethernet board error.	
	0002	At time of start-up, the MAC address is found to be illegal. A non-Canon MAC address is detected.	Turn off the main power, and replace the NIC; then, turn on the main power.

14.3.81 E743

0004-3318

T-14-85

Code	Detail	Cause/Particulars of detection	Remarks
E743		There is a DDI communication error.	
	0000	There is an SCI error. The reception data is faulty. A reception time-out condition has occurred. An SEQ time-out error has occurred. An SEQ time-out error has occurred.	Disconnect and connect the DDI-S cable connector; then, as necessary, replace the reader controller PCB or the main controller PCB.

14.3.82 E744

0005-0326

T-14-86

Code	Detail	Cause/Particulars of detection	Remarks
E744		There is a language file/boot ROM error.	
	0001	The version of the language file on the HDD is different from the version of bootable.	Using the Service Support Tool, download a language file of the correct version.
	0002	The size of the language file on the HDD is too large.	Using the Service Support Tool, download a language file of the correct version.
	0003	There is no language to use in Config.txt on the HDD. Or, none of the languages on the HDD is appropriate for use.	Download the appropriate language fields of the correct version using the Service Support Tool.
	0004	A switchover cannot be made to a language file on the HDD.	Using the Service Support Tool, download a language file of the correct version.
	1000	There is a boot ROM project error. The installed boot ROM is of the wrong type.	Turn off the main power, and replace the boot ROM with one of the correct type; then, turn on the main power.
	3000	There is a mismatch in respect of the version of the boot ROM module. The installed boot ROM dose not permit normal start-up operation.	Upgrade the boot ROM, or replace it.

14.3.83 E745

0005-0327

T-14-87

Code	Details	Description	Remedy
E745		TokenRing board error	
	0001	When initializing the TokeRing driver, the machine failed to initialize the PCI.	Turn off the main power, and check the connector of the TokenRing board; then, replace the TokenRing, and turn the main power back on.
	0002	When initializing the TokenRing driver, the machine found that the MAC address was faulty.	Turn off the main power, and replace the TokenRing board; then, turn the main power back on.
	0003	When initializing the TokeRing driver, the machine suffered an error in obtaining/setting up the board information.	Turn off the main power, and replace the TokenRing board; then, turn the main power back on.
	0004	When starting up the TokeRing driver, the machine suffered a connection error.	Turn off the main power, and check the cable connection and the power supply of the MAU; then, turn the main power back on.

14.3.84 E746

0005-0328

T-14-88

Code	Detail	Cause/Particulars of detection	Remarks
E746		The accessories board is of the wrong type.	
	0003	At time of start-up, the UFR board is found to be of the wrong type. (A query is made to find out if the type is correct with reference to the engine ID.)	Replace it with a UFR board of the correct type.
	0004	At time of start-up, the scanner board is found to be of the wrong type. (A query is made to find out if the type is correct with reference to the engine ID.)	Replace it with a scanner board of the correct type.

14.3.85 E747

0005-0329

T-14-89

Code	Detail	Remedy
E747		image processing ASIC or memory control/communication control ASIC error
	2029	1.turn off and then on the main power.
	2028	2.replace the SDRAM.
	2027	3.replace the main controller PCB.
	2026	1.turn off and then on the main power.
	2121	2.replace the SDRAM.
	2120	3.replace the main controller PCB.
	2119	1.turn off and then on the main power.
	2118	2.replace the SDRAM.
	2213	3.replace the main controller PCB.
	2212	1.turn off and then on the main power.
	2211	2.replace the SDRAM.
	2210	3.replace the main controller PCB.
	2006	1.turn off and then on the main power.
	2005	2.replace the SDRAM.
	3028	3.replace the main controller PCB.

3027	1.turn off and then on the main power.
3026	2.replace the SDRAM.
3025	3.replace the main controller PCB.
3120	1.turn off and then on the main power.
3119	2.replace the SDRAM.
3118	3.replace the main controller PCB.
3117	1.turn off and then on the main power.
3212	2.replace the SDRAM.
3211	3.replace the main controller PCB.
3210	1.turn off and then on the main power.
3209	2.replace the SDRAM.
3304	3.replace the main controller PCB.
3303	1.turn off and then on the main power.
3302	2.replace the SDRAM.
3301	3.replace the main controller PCB.
8728	1.turn off and then on the main power.
8706	2.replace the SDRAM.
8702	3.replace the main controller PCB.
8701	1.turn off and then on the main power.
0919	2.replace the SDRAM.
8406	3.replace the main controller PCB.
8402	1.turn off and then on the main power.
8401	2.replace the SDRAM.
	3.replace the main controller PCB.
PIU : 0231 PRCPIU : 0331	1.turn off and then on the main power.
	2.replace the SDRAM.
	3.replace the main controller PCB.
PIU : 0230 PRCPIU : 0330	1.turn off and then on the main power.
	2.replace the SDRAM.
	3.replace the main controller PCB.
PIU : 0229 PRCPIU : 0329	1.turn off and then on the main power.
	2.replace the SDRAM.
	3.replace the main controller PCB.
PIU : 0228 PRCPIU : 0328	1.turn off and then on the main power.
	2.replace the SDRAM.
	3.replace the main controller PCB.
PIU : 0227 PRCPIU : 0327	1.turn off and then on the main power.
	2.replace the SDRAM.
	3.replace the main controller PCB.

PIU : 0226 PRCPIU : 0326	1.turn off and then on the main power. 2.replace the SDRAM. 3.replace the main controller PCB.
PIU : 0225 PRCPIU : 0325	1.turn off and then on the main power. 2.replace the SDRAM. 3.replace the main controller PCB.
PIU : 0224 PRCPIU : 0324	1.turn off and then on the main power. 2.replace the SDRAM. 3.replace the main controller PCB.
PIU : 0223 PRCPIU : 0323	1.turn off and then on the main power. 2.replace the SDRAM. 3.replace the main controller PCB.
PIU : 0222 PRCPIU : 0322	1.turn off and then on the main power. 2.replace the SDRAM. 3.replace the main controller PCB.
POU : 0531 SCCPOU : 0631 SFCPOU : 0831	1.turn off and then on the main power. 2.replace the SDRAM. 3.replace the main controller PCB.
POU : 0529 SCCPOU : 0629 SFCPOU : 0829	1.turn off and then on the main power. 2.replace the SDRAM. 3.replace the main controller PCB.
POU : 0528 SCCPOU : 0628 SFCPOU : 0828	1.turn off and then on the main power. 2.replace the SDRAM. 3.replace the main controller PCB.
POU : 0527 SCCPOU : 0627 SFCPOU : 0827	1.turn off and then on the main power. 2.replace the SDRAM. 3.replace the main controller PCB.
POU : 0526 SCCPOU : 0626 SFCPOU : 0826	1.turn off and then on the main power. 2.replace the SDRAM. 3.replace the main controller PCB.
0b31	1.turn off and then on the main power.
0c31	2.replace the SDRAM.
0c30	3.replace the main controller PCB.
0a31	1.turn off and then on the main power.
0f31	2.replace the SDRAM.
1131	3.replace the main controller PCB.
0131	1.turn off and then on the main power.
0126	2.replace the SDRAM.
0125	3.replace the main controller PCB.
00ee	1.turn off and then on the main power.
00ff	2.replace the SDRAM.
	3.replace the main controller PCB.

14.3.86 E800

0004-3229

T-14-90

Code	Detail	Cause/Particulars of detection	Remarks
E800		The interlock 24V mechanism of the fixing unit is identified as being off. With the door closed, the interlock 24V mechanism remains off for 500 msec.	
	0001		Turn off the main switch, and check the wiring of the DC controller PCB, check the fixing unit interlock, and check the 24V system fuse; then, turn on the interlock main switch.

14.3.87 E804

0004-3233

T-14-91

Code	Detail	Cause/Particulars of detection	Remarks
E804		There is any of the various types of fan errors.	
	0004	There is an error in the controller cooling fan.	Turn off the main switch, and check the wiring of the DC controller PCB and the 24V system fuse; then, turn on the main switch.
	0007	There is an error in the power supply cooling fan.	Turn off the main switch, and check the DC controller PCB and the 24V system fuse; then, turn on the main switch.

14.3.88 E805

0005-5873

T-14-92

Code	Detail	Cause/Particulars of detection	Remarks
E805		The fixing heat exhaust fan is identified as having stopped or having an error.	
	0003	There is an error in the fixing heat exhaust fan.	Turn off the main power, and check the supply of power to the fan; then, as necessary, replace the fan, and turn on the main power.

14.3.89 E820

0005-5874

T-14-93

Code	Detail	Cause/Particulars of detection	Remarks
E820		There is an error in the process unit cooling fan.	
	0002	There is an error in the process unit fan.	Turn off the main switch, and check the wiring of the DC controller PCB and the 24V system fuse; then, turn on the main switch.

14.3.90 E824

0005-5879

T-14-94

Code	Detail	Cause/Particulars of detection	Remarks
E824		There is an error in the primary charging suction/primary charging exhaust fan.	
	0000	There is an error in the primary charging suction mechanism.	Turn off the main power, and check the DC controller PCB and the 24V system fuse; then, turn on the main switch.
	0001	There is an error in the primary exhaust fan.	Turn off the main switch, and check the wiring of the DC controller PCB and 2V system fuse; then, turn on the main switch.

14.4 Jam Codes

14.4.1 Jam Code (printer unit)

0005-6301

Type of Jam Code

T-14-95

Code	Type of Jam Code
01xx	delay jam
02xx	stationary jam
0Axx	residual jam
0B00	door open jam
0B01	door open jam (detection by software)
0D91	size error (sheet shorter than specified)
0D92	material error (paper used instead of transparency)
0D93	material (transparency used instead of paper)

Jam Code (printer unit)

T-14-96

Code	Sensor	Notation	Remarks
xx01	right deck pickup sensor	PS33	does not detect stationary jam
xx02	left deck pickup sensor	PS40	does not detect stationary jam
xx03	cassette 3 pickup sensor	PS48	does not detect stationary jam
xx04	cassette 4 pickup sensor	PS54	does not detect stationary jam
xx05	vertical path 4 sensor	PS63	
xx06	vertical path 3 sensor	PS62	
xx07	vertical path 2 sensor	PS61	
xx08	vertical path 1 sensor	PS60	
xx09	vertical path confluence sensor	PS32	
xx10	vertical path 0 sensor	PS31	
xx0A	transparency sensor (front, rear)	PS3, PS29	other than in transparency mode
xx0A	registration sensor	PS9	in transparency mode
xx0B	post-transfer sensor	PS10	does not detect stationary jam
xx0C	internal delivery paper sensor	PS12	does not detect stationary jam
xx0D	reversal sensor	PS14	At Time of Face-Down Delivery

Code	Sensor	Notation	Remarks
xx0E	external delivery sensor	PS13	
xx0F	reversal vertical path sensor	PS15	
xx11	duplex left sensor	PS17	
xx12	duplex confluence sensor	PS18	
xx13	side paper deck pickup sensor	PS101	does not detect stationary jam
xx14	side paper deck feed sensor	PS106	
xx15	fixing inlet sensor	PS11	detects residual jam only
xx16	left deck stationary sensor	PS47	detects residual jam only
0D91	transparency sensor (front/rear)	PS3, PS29	other than in transparency mode
0D91	registration sensor	PS9	in transparency mode
0D92	plain paper detected by transparency sensor when transparency is selected as medium	PS3, PS29	
0D93	transparency detected by transparency sensor when a medium other than transparency is selected	PS3, PS29	

14.4.2 Jam Code (finisher-related)

0005-6302

T-14-97

Code	Sensor	Notation
1011	delivery sensor feed delay jam	SR1(finisher-P1)
1101	delivery sensor feed stationary jam	
1500	stapler staple jam	
1300	power-on jam	
1400	door open jam	

T-14-98

Code	Sensor	Notation
1001	inlet path sensor feed delay jam	P13
1002	punch path sensor (punch registration sensor) feed delay jam	LED5/PTR5
1004	delivery path sensor feed delay jam	P14
1101	inlet path sensor feed stationary jam	P13
1102	punch path sensor (punch registration sensor) feed stationary jam	LED5/PTR5
1104	delivery path sensor feed stationary jam	P14
1200	timing jam	P13
1500	stapler staple jam	STP
1300	power-on jam	P13,P14
1400	door open jam	DOOR
1644	punch jam	LED5/PTR5
1645	punch power-on jam	LED5/PTR5
1791	saddle feed sensor feed delay jam	P18S,PI19S,PI20S
1792	saddle delivery sensor feed delay jam	PI11S
1793	saddle inlet sensor feed delay jam	PI22S
17A1	saddle feed sensor feed stationary jam	P18S,PI19S,PI20S
17A2	saddle delivery sensor feed stationary jam	PI11S,PI17S
17A3	saddle inlet sensor feed stationary jam	PI22S
1786	saddle stapler staple jam	S STP
1787	saddle power-on jam	PI11S,PI18S,PI19S,PI20S,PI22S
1788	saddle door open jam	DOOR

14.4.3 Jam Code (ADF-related)

0005-6303

T-14-99

Code	Sensor	Sensor	Description
0001	post-separation sensor	PI7	The post separation sensor does not detect paper even when paper has been fed 452 mm after the start of separation.
0002	post-separation sensor	PI7	-the separation sensor detects paper after paper has been fed 50 mm (if extra length, +200 mm) -45.5 mm following registration pickup. -the sensor goes on (paper with hole) before paper has been fed 12 mm after the detection of the trailing edge; the separation sensor detects paper after paper has been fed 50 mm from when the separation sensor has gone on.
0003	registration sensor	PI1	the registration sensor does not detect paper even when paper has been fed 134.8 mm after the post-separation sensor has gone on.
0004	registration sensor	PI1	the read sensor goes off before the registration sensor goes off.
0005	read sensor	PI8	-the read sensor does not detect paper when paper has been fed 364.2 mm (182.1 x 2) after the point of registration. -the read sensor does not detect paper even when paper has been fed 157.4 mm (78.7 x 2) from the point of No. 2 registration.
0006	read sensor	PI8	-the read sensor detects paper when paper has been fed 500 mm (if extra length, +200 mm) from the start of feed following a temporary stop before reading. -in the course of LTRR/LGL identification in mix mode, the read sensor detects paper when paper has been fed 514 mm beginning at the advance edging standby position.
0007	delivery reversal sensor	PI9	-at time of switchback, the delivery sensor does not detect paper when paper has been fed 50 mm from the start of feed. -at time of switch-back, the delivery sensor does not detect paper after paper has been fed 50 mm from the start of feed.
0008	delivery reversal sensor	PI9	delivery reversal sensor the delivery sensor detects paper after paper has been fed 161.9 mm from the end of reading the trailing edge.
0042	post-separation sensor	PI7	a jam (1st sheet) is detected by the post-separation sensor.
0043	registration sensor	PI1	paper (1st sheet) fails to reach the registration sensor.
0044	registration sensor	PI1	a stationary jam (1st sheets) is detected by the registration sensor.
0045	read sensor	PI8	paper (1st sheet) fails to reach the read sensor.
0046	read sensor	PI8	a stationary jam (1st sheet) is detected by the read sensor.
0047	delivery reversal sensor	PI9	paper (1st sheet) fails to reach the delivery sensor.
0048	delivery reversal sensor	PI9	a stationary jam (1st sheet) is detected by the delivery sensor.
0071	timing fault	-	timing of software operation is faulty.
0073	timing fault	-	the shift motor has a fault.

Code	Sensor	Sensor	Description
0090	ADF open/closed sensor 1	PS502	the ADF is opened while the machine is in operation.
0091	ADF open/closed sensor 1	PS502	the ADF is opened while the machine is in operation (waiting for paper).
0092	DF cover open/closed sensor	PI6	the cover is opened while the machine is in operation (drive system in operation).
0093	DF cover open/closed sensor	PI6	the cover is opened while the machine is in operation (waiting for paper).
0094	registration sensor, separation sensor, feed sensor, delivery reversal sensor	PI1,PI7, PI8,PI9	paper is detected within the path during pickup of the 1st sheet.
0095	original placement sensor, DF cover open/closed sensor, ADF open/closed sensor 1	PI5,PI6, PS502	there is no paper in the tray, or the pickup start signal is received with the machine being in an open state.

14.5 Alarm Codes

14.5.1 Alarm Code

0005-6304

T-14-100

location code	detail code	
02 scanner system	0002	indicates soling of the glass in stream reading mode
	0020	line correction alarm (i.e., dust is detected on the stream reading glass during detection at the end of a job)
04 pickup/feed system	0001	cassette 1 lifter error
	0002	cassette 2 lifter sensor
	0003	cassette 3 lifter error
	0004	cassette 4 lifter error
	0008	optional deck lifter error
	0009	horizontal registration home position detection error
06 fixing system	0002	fixing upper roller end of life
09 drum	0005	History of work on drum phase shifting
11 waste toner collection system	0001	waste toner cassette full
32 potential control system	0001	potential control VD alarm
	0002	potential control VL alarm
33 fan	0001	delivery cooling fan 1 alarm
	0006	developing fan alarm
	0010	reader cooling fan alarm
	0011	fixing heat discharge fan alarm
	0012	primary charging suction fan alarm
	0013	primary charging exhaust fan alarm
	0014	feed fan 1 alarm
	0015	feed fan 2 alarm
50 ADF	0010	original separation alarm (1st original pickup fault) has occurred 3 times in succession.
	0007	Insufficient light intensity of the post-separation sensor
	0008	Insufficient light intensity of the read sensor
	0009	Insufficient light intensity of the delivery reversal sensor
	0010	The separation alarm is continuously given.
60 shift tray	0001	shift tray alarm
61 finisher	0001	staple absent
62 saddle stitcher	0001	staple absent
65 puncher	0001	punch waste paper case full
72 Surf	0007	Rendering error (LAM module)
	0008	Rendering error (MI module)

Chapter 15 Service Mode

Contents

15.1 Outline	15-1
15.1.1 Construction of Service Mode	15-1
15.1.2 Starting Service Mode and Making Selections	15-2
15.1.3 Ending Service Mode	15-3
15.1.4 Back-Up	15-3
15.1.5 Initial Screen	15-4
15.1.6 2nd/3rd Item Screen	15-4
15.1.7 4th Item Screen	15-5
15.2 DISPLAY (Status Display Mode)	15-6
15.2.1 COPIER	15-6
15.2.1.1 VERSION	15-6
15.2.1.1.1 Overview	15-6
15.2.1.1.2 <DC-CON>	15-6
15.2.1.1.3 <R-CON>	15-6
15.2.1.1.4 <PANEL>	15-6
15.2.1.1.5 <ECO>	15-6
15.2.1.1.6 <FEEDER>	15-6
15.2.1.1.7 <SORTER>	15-6
15.2.1.1.8 <FAX>	15-6
15.2.1.1.9 <NIB>	15-6
15.2.1.1.10 <PS/PCL>	15-6
15.2.1.1.11 <LIPS>	15-7
15.2.1.1.12 <SDL-STCH>	15-7
15.2.1.1.13 <OP-CON>	15-7
15.2.1.1.14 <MN-CON>	15-7
15.2.1.1.15 <BOOT-ROM>	15-7
15.2.1.1.16 <DIAG-DVC>	15-7
15.2.1.1.17 <RUI>	15-7
15.2.1.1.18 <PUNCH>	15-7
15.2.1.1.19 <LANG-EN>	15-7
15.2.1.1.20 <LANG-FR>	15-7
15.2.1.1.21 <LANG-DE>	15-7
15.2.1.1.22 <LANG-IT>	15-7
15.2.1.1.23 <LANG-JP>	15-7
15.2.1.1.24 <GDI-UFR>	15-8
15.2.1.2 ACC-STS	15-8
15.2.1.2.1 Overview	15-8
15.2.1.2.2 <FEEDER>	15-8
15.2.1.2.3 <SORTER>	15-8
15.2.1.2.4 <DECK>	15-8
15.2.1.2.5 <CARD>	15-8
15.2.1.2.6 <DATA-CON>	15-8
15.2.1.2.7 <RAM>	15-8
15.2.1.2.8 <COINROBO>	15-9
15.2.1.2.9 <NIB>	15-9
15.2.1.2.10 <NETWARE>	15-9
15.2.1.2.11 <SEND>	15-9
15.2.1.3 ANALOG	15-9
15.2.1.3.1 Overview	15-9

15.2.1.3.2 <TEMP>	15-9
15.2.1.3.3 <HUM>.....	15-9
15.2.1.3.4 <ABS-HUM>	15-9
15.2.1.3.5 <FIX-UC>.....	15-9
15.2.1.3.6 <FIX-UE>.....	15-10
15.2.1.3.7 <FIX-LC>	15-10
15.2.1.3.8 <FIX-LE>	15-10
15.2.1.3.9 <FIX-EXC>	15-10
15.2.1.3.10 <FIX-EXE>	15-10
15.2.1.4 JAM	15-11
15.2.1.4.1 Overview.....	15-11
15.2.1.4.2 <No.>.....	15-12
15.2.1.4.3 <DATE>	15-12
15.2.1.4.4 <TIME1>	15-12
15.2.1.4.5 <TIME2>	15-12
15.2.1.4.6 <L>	15-12
15.2.1.4.7 <CODE>.....	15-12
15.2.1.4.8 <P>.....	15-12
15.2.1.4.9 <CNTR>	15-13
15.2.1.4.10 <SIZE>	15-13
15.2.1.4.11 Jam Code (jam type)	15-13
15.2.1.4.12 Jam Code (printer unit).....	15-14
15.2.1.4.13 Jam Code (finisher-related)	15-15
15.2.1.4.14 Jam Sensor (ADF-related)	15-16
15.2.1.5 ERR.....	15-18
15.2.1.5.1 Overview.....	15-18
15.2.1.5.2 <No.>.....	15-18
15.2.1.5.3 <DATE>	15-18
15.2.1.5.4 <TIME1>	15-18
15.2.1.5.5 <DATE2>	15-18
15.2.1.5.6 <CODE>.....	15-18
15.2.1.5.7 <DTL>	15-18
15.2.1.5.8 <L>	15-19
15.2.1.5.9 <P>.....	15-19
15.2.1.6 HV-STTS	15-19
15.2.1.6.1 Overview.....	15-19
15.2.1.6.2 <PRI-GRID>.....	15-19
15.2.1.6.3 <PRE-TR>	15-19
15.2.1.6.4 <BIAS>.....	15-19
15.2.1.7 DPOT	15-20
15.2.1.7.1 Overview.....	15-20
15.2.1.7.2 <DPOT-K>	15-20
15.2.1.7.3 <VDM>.....	15-20
15.2.1.7.4 <ITR-DC4K>	15-20
15.2.1.8 DENS	15-20
15.2.1.8.1 Overview.....	15-20
15.2.1.8.2 <DENS-Y>	15-20
15.2.1.8.3 <DENS-M>.....	15-21
15.2.1.8.4 <DENS-C>	15-21
15.2.1.8.5 <REF-Y/M/C>.....	15-21
15.2.1.8.6 <SGNL-Y/M/C>.....	15-21
15.2.1.9 MISC.....	15-22
15.2.1.9.1 Overview.....	15-22
15.2.1.9.2 <ENV-TR>	15-22

15.2.1.10 ALARM-1	15-22
15.2.1.10.1 Overview	15-22
15.2.1.10.2 <IMG-DT-Y>	15-22
15.2.1.10.3 <IMG-DT-M>	15-22
15.2.1.10.4 <IMG-DT-C>	15-22
15.2.1.10.5 <IMG-DT-K>	15-22
15.2.1.11 ALARM-2	15-23
15.2.1.11.1 Overview	15-23
15.2.1.12 ENVRNT	15-25
15.2.1.12.1 Overview	15-25
15.2.2 FEEDER	15-26
15.2.2.1 <FEEDSIZE>	15-26
15.2.2.2 <TRY-WIDE>	15-26
15.2.2.3 <SPSN-LMN>	15-26
15.2.2.4 <SPSN-RCV>	15-26
15.2.2.5 <RDSN-LMN>	15-26
15.2.2.6 <RDSN-RCV>	15-27
15.2.2.7 <DRSN-LMN>	15-27
15.2.2.8 <RDSN-RCV>	15-27
15.2.3 DISPLAY(Status Display Mode)Level2	15-28
15.2.3.1 COPIER	15-28
15.2.3.1.1 VERSION	15-28
15.2.3.1.2 CST-ST5	15-29
15.2.3.1.3 HV-ST5	15-29
15.2.3.1.4 CCD	15-29
15.2.3.1.5 DPOT	15-30
15.2.3.1.6 DENS	15-31
15.2.3.1.7 MISC	15-33
15.2.3.1.8 ALARM-1	15-33
15.3 I/O (I/O Display Mode)	15-34
15.3.1 Overview	15-34
15.3.2 <DC-CON>	15-35
15.3.3 <R-CON>	15-42
15.3.4 <FEEDER>	15-45
15.3.5 <SORTER>	15-47
15.3.6 <MN-CON>	15-58
15.4 ADJUST (Adjustment Mode)	15-60
15.4.1 COPIER	15-60
15.4.1.1 ADJ-XY	15-60
15.4.1.1.1 Overview	15-60
15.4.1.1.2 <ADJ-X>	15-60
15.4.1.1.3 <ADJ-Y>	15-61
15.4.1.1.4 <ADJ-S>	15-61
15.4.1.1.5 <ADJ-Y-DF>	15-62
15.4.1.1.6 <STRD-POS>	15-62
15.4.1.2 CCD	15-63
15.4.1.2.1 Overview	15-63
15.4.1.2.2 <W-PLT-X/Y/Z>	15-63
15.4.1.2.3 CCDU-RG	15-63
15.4.1.2.4 CCDU-GB	15-64
15.4.1.2.5 FCCDU-RG	15-64
15.4.1.2.6 FCCDU-GB	15-64
15.4.1.2.7 <50-RG>	15-65
15.4.1.2.8 <50-GB>	15-65

15.4.1.2.9 <100-RG>	15-65
15.4.1.2.10 <100-GB>	15-66
15.4.1.2.11 <50DF-RG>	15-66
15.4.1.2.12 <50DF-GB>	15-66
15.4.1.2.13 <100DF-RG>	15-67
15.4.1.2.14 <100DF-GB>	15-67
15.4.1.2.15 <DFTAR-R>	15-67
15.4.1.2.16 <DFTAR-G>	15-68
15.4.1.2.17 <DFTAR-B>	15-68
15.4.1.3 LASER	15-69
15.4.1.3.1 Overview	15-69
15.4.1.3.2 PVE-OFST	15-69
15.4.1.3.3 POWER	15-69
15.4.1.4 IMG-REG	15-70
15.4.1.4.1 Overview	15-70
15.4.1.4.2 <REG-V-Y>	15-70
15.4.1.4.3 <REG-V-K>	15-70
15.4.1.4.4 <REG2-V-Y>	15-71
15.4.1.4.5 <REG2-V-K>	15-71
15.4.1.4.6 <REG-V-M>	15-72
15.4.1.4.7 <REG2-V-M>	15-72
15.4.1.5 DENS	15-73
15.4.1.5.1 Overview	15-73
15.4.1.5.2 <SGNL-Y>	15-73
15.4.1.5.3 <SGNL-M>	15-73
15.4.1.5.4 <SGNL-C>	15-73
15.4.1.5.5 <REF-Y>	15-74
15.4.1.5.6 <REF-M>	15-74
15.4.1.5.7 <REF-C>	15-74
15.4.1.5.8 <PTOFST-Y>	15-74
15.4.1.5.9 <PTOFST-M>	15-75
15.4.1.5.10 <PTOFST-C>	15-75
15.4.1.5.11 <P-SGNL-Y>	15-75
15.4.1.5.12 <P-SGNL-M>	15-75
15.4.1.5.13 <P-SGNL-C>	15-76
15.4.1.6 BLANK	15-76
15.4.1.6.1 Overview	15-76
15.4.1.6.2 <BLANK-T>	15-76
15.4.1.6.3 <BLANK-L>	15-76
15.4.1.6.4 <BLANK-R>	15-77
15.4.1.6.5 <BLANK-B>	15-77
15.4.1.6.6 <BLANK-C1>	15-77
15.4.1.6.7 <BLANK-C2>	15-77
15.4.1.6.8 <BLANK-C3>	15-78
15.4.1.6.9 <BLANK-C4>	15-78
15.4.1.6.10 <BLANK-PD>	15-78
15.4.1.7 V-CONT	15-79
15.4.1.7.1 Overview	15-79
15.4.1.7.2 <EPOTOFST>	15-79
15.4.1.8 PASCAL	15-79
15.4.1.8.1 Overview	15-79
15.4.1.8.2 <OFST-P-Y>	15-79
15.4.1.8.3 <OFST-P-M>	15-79
15.4.1.8.4 <OFST-P-C>	15-80

15.4.1.8.5 <OFST-P-K>	15-80
15.4.1.9 COLOR.....	15-80
15.4.1.9.1 Overview	15-80
15.4.1.9.2 <ADJ-Y>	15-80
15.4.1.9.3 <ADJ-M>	15-81
15.4.1.9.4 <ADJ-C>	15-81
15.4.1.9.5 <ADJ-K>	15-81
15.4.1.9.6 <OFST-Y>.....	15-81
15.4.1.9.7 <OFST-M>	15-82
15.4.1.9.8 <OFST-C>.....	15-82
15.4.1.9.9 <OFST-K>.....	15-82
15.4.1.10 HV-PRI.....	15-83
15.4.1.10.1 Overview	15-83
15.4.1.10.2 <PRIMARY>	15-83
15.4.1.10.3 <GRID>.....	15-83
15.4.1.11 HV-TR.....	15-83
15.4.1.11.1 Overview	15-83
15.4.1.11.2 <PRE-TR>.....	15-83
15.4.1.11.3 < TR-GAIN>	15-84
15.4.1.11.4 < TR-OFST>	15-84
15.4.1.11.5 < TR-CGAI>	15-84
15.4.1.11.6 < TR-COFS>	15-85
15.4.1.11.7 < TR-GAI2>	15-85
15.4.1.11.8 < TR-OFS2>.....	15-85
15.4.1.12 FEED-ADJ	15-86
15.4.1.12.1 Overview	15-86
15.4.1.12.2 <REGIST>.....	15-86
15.4.1.12.3 <ADJ-REFE>	15-86
15.4.1.12.4 <BLK-SML2>	15-86
15.4.1.13 CST-ADJ	15-87
15.4.1.13.1 Overview	15-87
15.4.1.13.2 <MF-A4R>.....	15-87
15.4.1.13.3 <MF-A6R>.....	15-87
15.4.1.13.4 <MF-A4>.....	15-88
15.4.1.14 MISC	15-88
15.4.1.14.1 Overview	15-88
15.4.1.14.2 <SEG-ADJ>	15-88
15.4.1.14.3 <K-ADJ>	15-88
15.4.1.14.4 <ATM>.....	15-89
15.4.1.14.5 <ACS-ADJ>	15-89
15.4.1.14.6 <WT-ER-LV>	15-89
15.4.1.14.7 <WT-FL-LM>	15-90
15.4.2 FEEDER.....	15-90
15.4.2.1 <DOCST>	15-90
15.4.2.2 <LA-SPEED>.....	15-90
15.4.3 SORTER.....	15-91
15.4.3.1 Overview	15-91
15.4.3.2 <PNCH-HLE>.....	15-91
15.4.4 ADJUST (Adjustment Mode)Level2	15-91
15.4.4.1 COPIER.....	15-91
15.4.4.1.1 LASER	15-91
15.4.4.1.2 DENS.....	15-92
15.4.4.1.3 V-CONT	15-93
15.4.4.1.4 COLOR.....	15-96

15.4.4.1.5 HV-PRI	15-97
15.4.4.1.6 HV-TR	15-99
15.4.4.1.7 FEED-ADJ	15-105
15.4.4.1.8 MISC	15-105
15.4.4.1.9 EXP-LED	15-106
15.5 FUNCTION (Operation/Inspection Mode)	15-108
15.5.1 COPIER	15-108
15.5.1.1 INSTALL	15-108
15.5.1.1.1 Overview	15-108
15.5.1.1.2 <TONER-S>	15-108
15.5.1.1.3 <STIR-Y>	15-108
15.5.1.1.4 <STIR-M>	15-108
15.5.1.1.5 <STIR-C>	15-109
15.5.1.1.6 <SPLY-H-Y>	15-109
15.5.1.1.7 <SPLY-H-M>	15-109
15.5.1.1.8 <SPLY-H-C>	15-109
15.5.1.1.9 <CARD>	15-109
15.5.1.1.10 <KEY>	15-110
15.5.1.1.11 <INISSET-Y>	15-110
15.5.1.1.12 <INISSET-M>	15-111
15.5.1.1.13 <INISSET-C>	15-111
15.5.1.1.14 <INISSET-3>	15-112
15.5.1.1.15 <STIR-3>	15-112
15.5.1.1.16 <SPLY-H-3>	15-112
15.5.1.1.17 <AINR-OFF>	15-113
15.5.1.2 CCD	15-113
15.5.1.2.1 Overview	15-113
15.5.1.2.2 <DF-WLVL1/2>	15-113
15.5.1.3 LASER	15-114
15.5.1.3.1 Overview	15-114
15.5.1.3.2 <POWER>	15-114
15.5.1.4 DPC	15-114
15.5.1.4.1 Overview	15-114
15.5.1.4.2 <DPC>	15-114
15.5.1.4.3 <OFST>	15-114
15.5.1.5 CST	15-115
15.5.1.5.1 Overview	15-115
15.5.1.5.2 <MF-A4R, MF-A6R, MF-A4>	15-115
15.5.1.6 CLEANING	15-115
15.5.1.6.1 Overview	15-115
15.5.1.6.2 <TBLT-CLN>	15-115
15.5.1.6.3 <WIRE-CLN>	15-116
15.5.1.6.4 <WIRE-EX>	15-116
15.5.1.7 FIXING	15-117
15.5.1.7.1 Overview	15-117
15.5.1.7.2 <NIP-CHK>	15-117
15.5.1.8 PANEL	15-119
15.5.1.8.1 Overview	15-119
15.5.1.8.2 <LCD-CHK>	15-119
15.5.1.8.3 <LED-CHK>	15-119
15.5.1.8.4 <LED-OFF>	15-119
15.5.1.8.5 <KEY-CHK>	15-120
15.5.1.8.6 <TOUCHCHK>	15-120
15.5.1.9 PART-CHK	15-121

15.5.1.9.1 <CL>	15-121
15.5.1.9.2 <CL-ON>	15-121
15.5.1.9.3 <FAN>.....	15-122
15.5.1.9.4 <FAN-ON>	15-122
15.5.1.9.5 <MTR>.....	15-123
15.5.1.9.6 <MTR-ON>.....	15-124
15.5.1.9.7 <MTR-ON>.....	15-124
15.5.1.9.8 <SL>.....	15-125
15.5.1.9.9 <SL-ON>.....	15-125
15.5.1.10 CLEAR	15-126
15.5.1.10.1 Overview	15-126
15.5.1.10.2 <ERR>.....	15-126
15.5.1.10.3 <DC-CON>	15-126
15.5.1.10.4 <R-CON>.....	15-127
15.5.1.10.5 <JAM-HIST>	15-127
15.5.1.10.6 <ERR-HIST>.....	15-127
15.5.1.10.7 <PWD-CLR>.....	15-127
15.5.1.10.8 <ADRS-BK>.....	15-128
15.5.1.10.9 <CNT-MCON>.....	15-128
15.5.1.10.10 <CNT-DCON>.....	15-128
15.5.1.10.11 <OPTION>.....	15-129
15.5.1.10.12 <MMI>.....	15-129
15.5.1.10.13 <MN-CON>	15-129
15.5.1.10.14 <CARD>	15-130
15.5.1.10.15 <W-TN-CLN>.....	15-130
15.5.1.11 MISC-R	15-130
15.5.1.11.1 Overview	15-130
15.5.1.11.2 <SCANLAMP>.....	15-130
15.5.1.12 MISC-P.....	15-131
15.5.1.12.1 Overview	15-131
15.5.1.12.2 <P-PRINT>	15-131
15.5.1.12.3 <USER-PRT>.....	15-131
15.5.1.12.4 <LBL-PRNT>	15-131
15.5.1.12.5 <PRE-EXP>	15-132
15.5.1.12.6 <DEV-DR-Y>	15-132
15.5.1.12.7 <DEV-DR-M>.....	15-133
15.5.1.12.8 <DEV-DR-C>	15-133
15.5.1.12.9 <D-PRINT>.....	15-133
15.5.1.12.10 <IATVC-EX>.....	15-134
15.5.1.12.11 <ENV-PRT>.....	15-134
15.5.1.12.12 <ITR-ROT>	15-134
15.5.1.12.13 <DR-P-ADJ>.....	15-134
15.5.1.13 SENS-ADJ.....	15-135
15.5.1.13.1 Overview	15-135
15.5.1.13.2 <STCK-LMT>.....	15-135
15.5.1.14 SYSTEM	15-137
15.5.1.14.1 Overview	15-137
15.5.1.14.2 <DOWNLOAD>.....	15-137
15.5.1.14.3 <CHK-TYPE>.....	15-137
15.5.1.14.4 <HD-CHECK>.....	15-138
15.5.1.14.5 <HD-CLEAR>.....	15-138
15.5.2 FEEDER.....	15-139
15.5.2.1 Overview	15-139
15.5.2.2 <SENS-INT>.....	15-139

15.5.2.3 <MTR-CHK>	15-139
15.5.2.4 <TRY-A4>.....	15-139
15.5.2.5 <TRY-A5R>.....	15-139
15.5.2.6 <TRY-LTR>.....	15-140
15.5.2.7 <TRY-LTRR>	15-140
15.5.2.8 <FEED-CHK>	15-140
15.5.2.9 <CL-CHK>.....	15-140
15.5.2.10 <CL-ON>.....	15-141
15.5.2.11 <FAN-CHK>	15-141
15.5.2.12 <FAN-ON>.....	15-141
15.5.2.13 <SL-CHK>	15-142
15.5.2.14 <SL-ON>	15-142
15.5.2.15 <MTR-ON>.....	15-142
15.5.2.16 <ROLL-CLN>	15-143
15.5.2.17 <FEED-ON>.....	15-143
15.5.3 FUNCTION (operation/inspection mode):Level 2.....	15-144
15.5.3.1 COPIER	15-144
15.5.3.1.1 INSTALL.....	15-144
15.5.3.1.2 CLEANING.....	15-144
15.5.3.1.3 CLEAR	15-144
15.5.3.1.4 MISC-P.....	15-145
15.6 OPTION (Machine Settings Mode).....	15-146
15.6.1 COPIER	15-146
15.6.1.1 BODY	15-146
15.6.1.1.1 Overview.....	15-146
15.6.1.1.2 <PO-CNT>	15-146
15.6.1.1.3 <MODEL-SZ>.....	15-146
15.6.1.1.4 <FIX-TEMP>	15-146
15.6.1.1.5 <PASCAL>.....	15-147
15.6.1.1.6 <CONFIG>.....	15-147
15.6.1.1.7 <TEMP-TBL>	15-147
15.6.1.1.8 <W/SCNR>.....	15-148
15.6.1.1.9 <RUI-DSP>	15-148
15.6.1.1.10 <NW-SPEED>.....	15-148
15.6.1.1.11 <ADJ-LVL>	15-148
15.6.1.1.12 <INTROT-1>.....	15-149
15.6.1.1.13 <INTROT-2>.....	15-149
15.6.1.1.14 <AUTO-DH>.....	15-149
15.6.1.1.15 <DFDST-L1>	15-150
15.6.1.1.16 <DFDST-L2>	15-150
15.6.1.1.17 <ENVP-INT>	15-150
15.6.1.1.18 <T1-TEMP>	15-150
15.6.1.1.19 <T2-TEMP>	15-151
15.6.1.1.20 <BLNK-THP>.....	15-151
15.6.1.1.21 <CD-IDL-T>.....	15-151
15.6.1.1.22 <OHP-SPED>.....	15-152
15.6.1.1.23 <FX-CROT>.....	15-152
15.6.1.1.24 <DRM-DISP>.....	15-153
15.6.1.2 USER	15-153
15.6.1.2.1 Overview.....	15-153
15.6.1.2.2 <COPY-LIM>.....	15-153
15.6.1.2.3 <SLEEP>	15-154
15.6.1.2.4 <WEB-DISP>.....	15-154
15.6.1.2.5 <COUNTER 1>.....	15-154

15.6.1.2.6 <COUNTER 2>.....	15-154
15.6.1.2.7 <COUNTER 3>.....	15-155
15.6.1.2.8 <COUNTER 4>.....	15-155
15.6.1.2.9 <COUNTER 5>.....	15-155
15.6.1.2.10 <COUNTER 6>.....	15-155
15.6.1.2.11 Software Counter Specifications	156
15.6.1.2.12 <CONTROL>.....	15-167
15.6.1.2.13 <B4-L-CNT>.....	15-167
15.6.1.2.14 <COPY-JOB>	15-167
15.6.1.2.15 <TAB-ROT>	15-168
15.6.1.2.16 <IDPRN-SW>	15-168
15.6.1.2.17 <CPRT-DSP>	15-168
15.6.1.2.18 <CNT-SW>	15-168
15.6.1.2.19 <BCNT-AST>	15-169
15.6.1.2.20 <DFLT-CPY>	15-169
15.6.1.2.21 <DFLT-BOX>.....	15-169
15.6.1.2.22 <DOC-REM>	15-169
15.6.1.3 CST.....	15-170
15.6.1.3.1 Overview	15-170
15.6.1.3.2 <P-SZ-C1>	15-170
15.6.1.3.3 <P-SZ-C2>	15-170
15.6.1.4 ACC.....	15-171
15.6.1.4.1 Overview	15-171
15.6.1.4.2 <COIN>.....	15-171
15.6.1.4.3 <DK-P>.....	15-171
15.6.1.4.4 <CARD-SW>	15-171
15.6.1.5 INT-FACE.....	15-172
15.6.1.5.1 Overview	15-172
15.6.1.5.2 <IMG-CONT>.....	15-172
15.6.2 FEEDER.....	15-174
15.6.2.1 <LS-DBL>.....	15-174
15.6.2.2 <STAMP-SW>.....	15-174
15.6.3 SORTER.....	15-175
15.6.3.1 Overview	15-175
15.6.3.2 <BLNK-SW>	15-175
15.6.3.3 <MD-SPRTN>	15-175
15.6.4 BOARD.....	15-176
15.6.4.1 Overview	15-176
15.6.4.2 <SURF-OFF>.....	15-176
15.6.5 OPTION (mechanical specifications setting mode):Level 2.....	15-176
15.6.5.1 COPIER.....	15-176
15.6.5.1.1 BODY.....	15-176
15.6.5.1.2 USER.....	15-204
15.6.5.1.3 CST.....	15-208
15.6.5.1.4 ACC.....	15-208
15.6.5.1.5 INT-FACE.....	15-209
15.6.5.2 BOARD.....	15-210
15.6.5.2.1 <MENU-1 to 4>	15-210
15.7 TEST (Test Print Mode).....	15-211
15.7.1 COPIER.....	15-211
15.7.1.1 PG.....	15-211
15.7.1.1.1 <TYPE>.....	15-211
15.7.1.1.2 <TXPH>.....	15-211
15.7.1.1.3 <THRU>.....	15-212

15.7.1.1.4 <DENS-Y>	15-212
15.7.1.1.5 <DENS-M>.....	15-212
15.7.1.1.6 <DENS-C>	15-212
15.7.1.1.7 <DENS-K>	15-212
15.7.1.1.8 <COLOR-Y>	15-213
15.7.1.1.9 <COLOR-M>	15-213
15.7.1.1.10 <COLOR-C>	15-213
15.7.1.1.11 <COLOR-K>	15-213
15.7.1.1.12 <F/M-SW>.....	15-214
15.7.1.1.13 <PG-PICK>	15-214
15.7.1.1.14 <2-SIDE>.....	15-214
15.7.1.1.15 <PG-QTY>	15-214
15.7.1.2 NETWORK	15-215
15.7.1.2.1 <PING>.....	15-215
15.8 COUNTER (Counter Mode).....	15-217
15.8.1 COPIER	15-217
15.8.1.1 TOTAL	15-217
15.8.1.1.1 <Overview>	15-217
15.8.1.1.2 <SERVICE1>	15-217
15.8.1.1.3 <SERVICE2>	15-217
15.8.1.1.4 <COPY>	15-217
15.8.1.1.5 <PDL-PRT>.....	15-217
15.8.1.1.6 <FAX-PRT>	15-217
15.8.1.1.7 <RMT-PRT>.....	15-218
15.8.1.1.8 <BOX-PRT>.....	15-218
15.8.1.1.9 <RPT-PRT>.....	15-218
15.8.1.1.10 <2-SIDE>.....	15-218
15.8.1.1.11 <SCAN>	15-218
15.8.1.2 PICK-UP.....	15-219
15.8.1.2.1 <Outline>	15-219
15.8.1.2.2 <C1>	15-219
15.8.1.2.3 <C2>	15-219
15.8.1.2.4 <C3>	15-219
15.8.1.2.5 <C4>	15-219
15.8.1.2.6 <MF>	15-219
15.8.1.2.7 <DK>	15-219
15.8.1.2.8 <2-SIDE>.....	15-219
15.8.1.3 FEEDER	15-220
15.8.1.3.1 <Overview>	15-220
15.8.1.3.2 <FEED>.....	15-220
15.8.1.4 JAM	15-220
15.8.1.4.1 <Overview>	15-220
15.8.1.4.2 <TOTAL>.....	15-220
15.8.1.4.3 <FEEDER>.....	15-220
15.8.1.4.4 <SORTER>.....	15-220
15.8.1.4.5 <2-SIDE>.....	15-220
15.8.1.4.6 <MF>	15-220
15.8.1.4.7 <C1>	15-220
15.8.1.4.8 <C2>	15-220
15.8.1.4.9 <C3>	15-220
15.8.1.4.10 <C4>	15-221
15.8.1.4.11 <DK>	15-221
15.8.1.5 MISC.....	15-221
15.8.1.5.1 <Overview>.....	15-221

15.8.1.5.2 <FIX-WEB>	15-221
15.8.1.5.3 <WST-TNR >	15-222
15.8.1.5.4 <PRI-CLN >	15-223
15.8.1.5.5 <DV-UNT-K>	15-223
15.8.1.5.6 <DV-CAR-Y>	15-224
15.8.1.5.7 <DV-CAR-M>	15-224
15.8.1.5.8 <DV-CAR-C>	15-224
15.8.1.5.9 <DRM-PHAS>	15-225
15.8.1.6 PRDC-1	15-225
15.8.1.6.1 Overview	15-225
15.8.1.6.2 <PRM-WIRE>	15-225
15.8.1.6.3 <PRM-GRID>	15-225
15.8.1.6.4 <PO-WIRE>	15-226
15.8.1.6.5 <PRM-CLN>	15-226
15.8.1.6.6 <PO-CLN>	15-226
15.8.1.6.7 <PRM-CLN2>	15-226
15.8.1.6.8 <PO-CLN2>	15-226
15.8.1.6.9 <PO-UNIT>	15-226
15.8.1.6.10 <PRM-UNIT>	15-226
15.8.1.6.11 <FIX-TH1>	15-226
15.8.1.6.12 <FX-TSW>	15-227
15.8.1.6.13 <FX-LW-TH>	15-227
15.8.1.6.14 <FX-EX-TH>	15-227
15.8.1.6.15 <FX-LW-TS>	15-227
15.8.1.6.16 <FX-EX-TS>	15-227
15.8.1.6.17 <OZ-FIL2>	15-227
15.8.1.6.18 <TN-FIL2>	15-227
15.8.1.7 DRBL-1	15-228
15.8.1.7.1 Overview	15-228
15.8.1.7.2 <LSR-DRV>	15-228
15.8.1.7.3 <LSR-MTR>	15-228
15.8.1.7.4 <SCN-MTR>	15-228
15.8.1.7.5 <TRD-CLN>	15-228
15.8.1.7.6 <TR-BLT>	15-229
15.8.1.7.7 <TR-ROLL>	15-229
15.8.1.7.8 <2TR-ROLL>	15-229
15.8.1.7.9 <TR-STC-H>	15-229
15.8.1.7.10 <1TR-STC>	15-229
15.8.1.7.11 <ITB-SUPS>	15-229
15.8.1.7.12 <2TR-INRL>	15-229
15.8.1.7.13 <PT-DRM>	15-229
15.8.1.7.14 <DRM-MTR>	15-230
15.8.1.7.15 <MAIN-MTR>	15-230
15.8.1.7.16 <CLN-BLD>	15-230
15.8.1.7.17 <CL-SUPS>	15-230
15.8.1.7.18 <DV-UNT-C>	15-230
15.8.1.7.19 <DVG-CYL>	15-230
15.8.1.7.20 <DVG-ROLL>	15-230
15.8.1.7.21 <DV-UNT-Y>	15-230
15.8.1.7.22 <DV-UNT-M>	15-230
15.8.1.7.23 <CL-SCRIP>	15-231
15.8.1.7.24 <C3-PU-RL>	15-231
15.8.1.7.25 <C3-SP-RL>	15-231
15.8.1.7.26 <C3-FD-RL>	15-231


15.8.1.7.27 <C4-PU-RL>	15-231
15.8.1.7.28 <C4-SP-RL>	15-231
15.8.1.7.29 <C4-FD-RL>	15-231
15.8.1.7.30 <LD-PU-RL>	15-231
15.8.1.7.31 <LD-SP-RL>	15-232
15.8.1.7.32 <LD-FD-RL>	15-232
15.8.1.7.33 <RD-PU-RL>	15-232
15.8.1.7.34 <RD-SP-RL>	15-232
15.8.1.7.35 <RD-FD-RL>	15-232
15.8.1.7.36 <M-PU-RL>	15-232
15.8.1.7.37 <M-SP-RL>	15-232
15.8.1.7.38 <FX-UP-RL>	15-232
15.8.1.7.39 <FX-LW-RL>	15-233
15.8.1.7.40 <FX-IN-BS>	15-233
15.8.1.7.41 <FX-WEB>	15-233
15.8.1.7.42 <FX-EX-RL>	15-233
15.8.1.7.43 <FX-LW-BS>	15-234
15.8.1.7.44 <FX-EX-BS>	15-234
15.8.1.7.45 <DLV-UCLW>	15-234
15.8.1.7.46 <DLV-LCLW>	15-234
15.8.1.7.47 <OZ-FIL5>	15-234
15.8.1.7.48 <TN-FIL2>	15-234
15.8.1.7.49 <TN-FIL5>	15-234
15.8.1.7.50 <FX-SPACE>	15-234
15.8.1.7.51 <ITB-SCRIP>	15-234
15.8.1.8 DRBL-2	15-235
15.8.1.8.1 <DF-PU-RL>	15-235
15.8.1.8.2 <DF-SP-PD>	15-235
15.8.1.8.3 <DF-FD-RL>	15-235
15.8.1.8.4 <LNT-TAPE>	15-235
15.8.1.8.5 <DF-SP-RL>	15-235
15.8.1.8.6 <LNT-TAP1>	15-235
15.8.1.8.7 <LNT-TAP2>	15-235
15.8.1.8.8 <LNT-TAP3>	15-236
15.8.1.8.9 <LNT-TAP4>	15-236
15.8.1.8.10 <LNT-TAP5>	15-236
15.8.1.8.11 <PD-PU-RL>	15-236
15.8.1.8.12 <PD-SP-RL>	15-236
15.8.1.8.13 <PD-FD-RL>	15-236
15.8.1.8.14 <SORT>	15-236
15.8.1.8.15 <FIN-STPR>	15-236
15.8.1.8.16 <SADDLE>	15-236
15.8.1.8.17 <SDL-STPL>	15-237
15.8.1.8.18 <PUNCH>	15-237
15.8.1.8.19 <FN-BFFRL>	15-237

15.1 Outline

15.1.1 Construction of Service Mode


0000-9782

The machine's service mode has a 3-layer screen construction: Initial screen, Level 1/2 screen, and Level 3 screen. Its mode items are grouped into those used in regular maintenance work (Level 1 items) and those used in response to faults (Level 2 items).

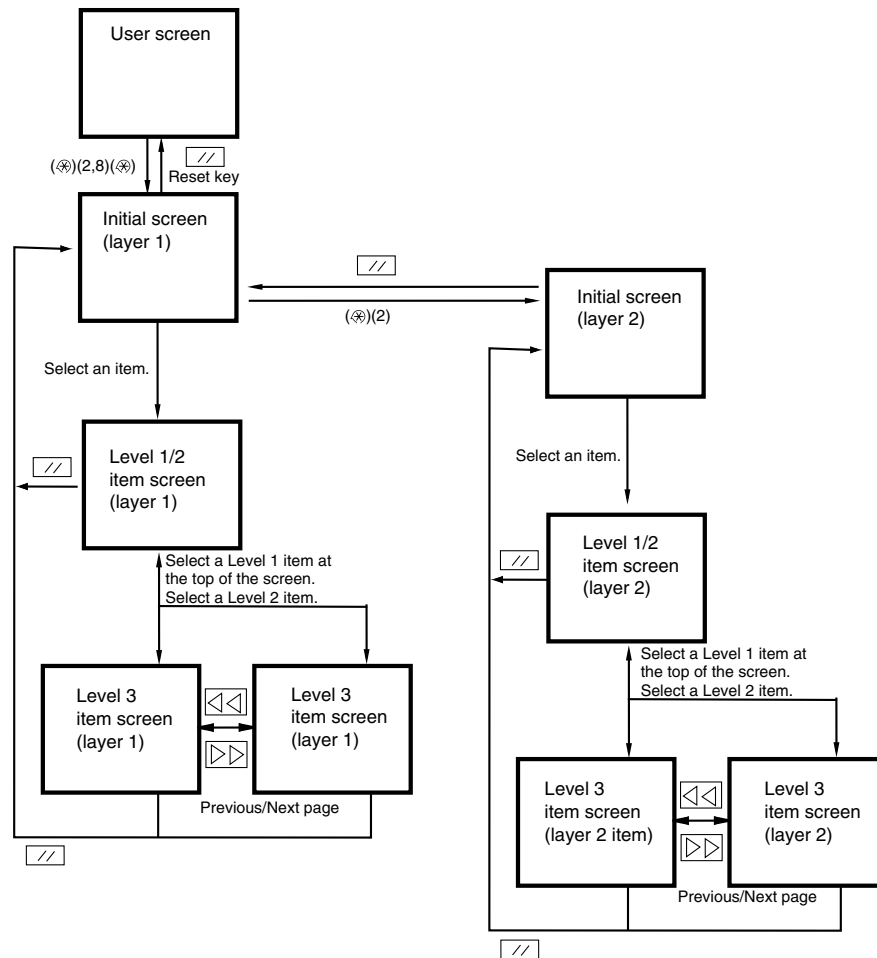

F-15-1

The machine's service mode is divided into the following 7 types:

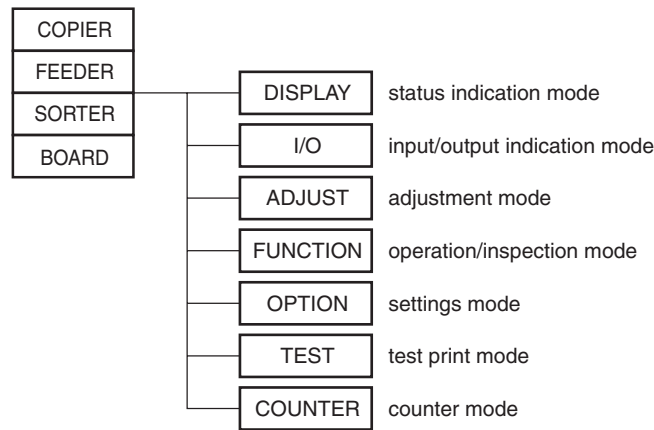

F-15-2


15.1.2 Starting Service Mode and Making Selections

0000-9783

⚠ If you want to execute a machine operation using a service mode item, be sure to disconnect all cables from an external controller or a network before starting service mode. Particularly, if you are using a FUNCTION (operation/inspection) mode item, the arrival of a print job from an external source can cause the machine to malfunction, leading to damage.

- 1) Press the asterisk key "" on the control panel.
- 2) Press the 2 and 8 keys of the keypad at the same time.
- 3) Press the asterisk key "" on the control panel.

In response to the foregoing key operations, the machine will bring up the following Initial screen:

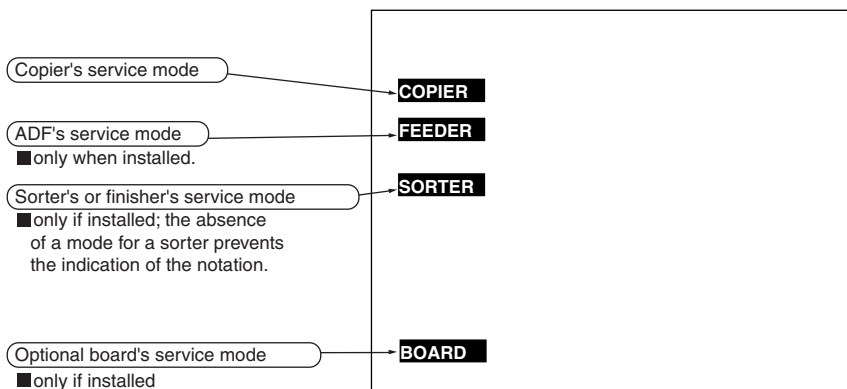

F-15-3

15.1.3 Ending Service Mode

0000-9785

A press on the Reset key will bring back the Service Mode Initial screen.

Another press on the Reset key will end service mode, and bring back the User screen (standard screen).

⚠If you used service mode (ADJUST, FUNCTION, OPTION), be sure to turn off and then on the main power switch after ending service mode.


15.1.4 Back-Up

0005-6296

At time of shipment from the factory, all machines are adjusted individually, and adjustment values are recorded in their respective service labels.


If you have replaced the reader controller PCB or the DC controller PCB, or if you have initialized the RAM, the adjustment values (for ADJUST and OPTION) will return to their default settings. If there has been any change in a service mode item, be sure to update its setting indicated on the service label. As necessary, make use of the space in the service label (as when recording an item not found on the label).

-Service Label for the Reader Controller PCB (behind the front cover [1] of the reader unit)

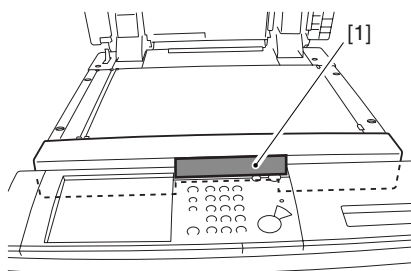

F-15-4


-Service Label [1] for the Main Controller PCB/DC controller PCB (behind the front cover of the printer unit)

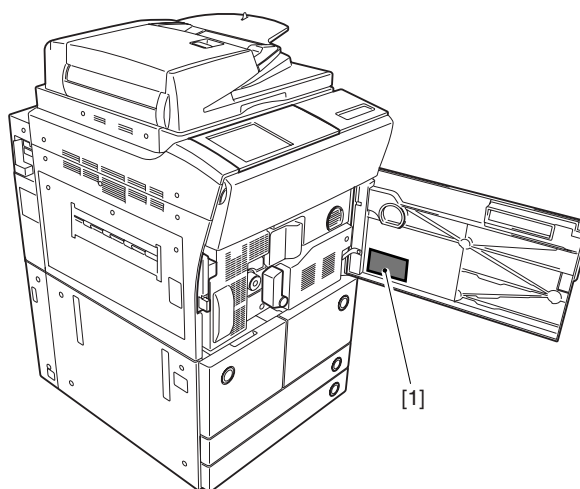

F-15-5

15.1.5 Initial Screen


0000-9788

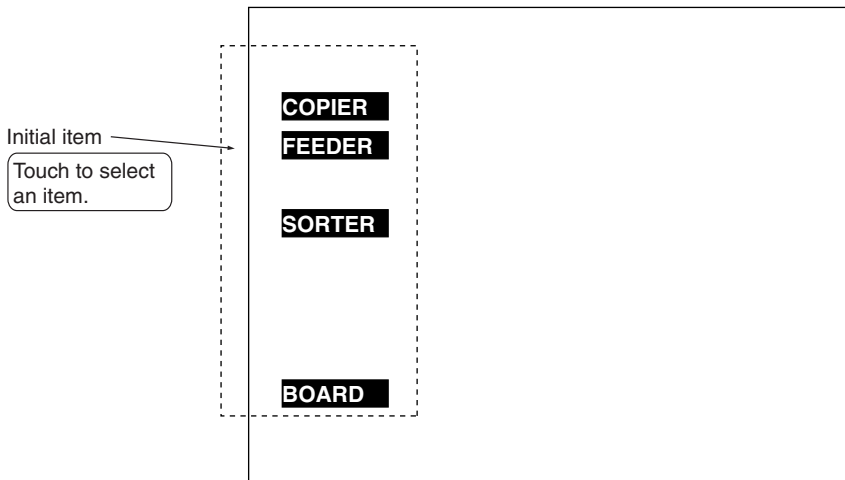

F-15-6

15.1.6 2nd/3rd Item Screen


0000-9789

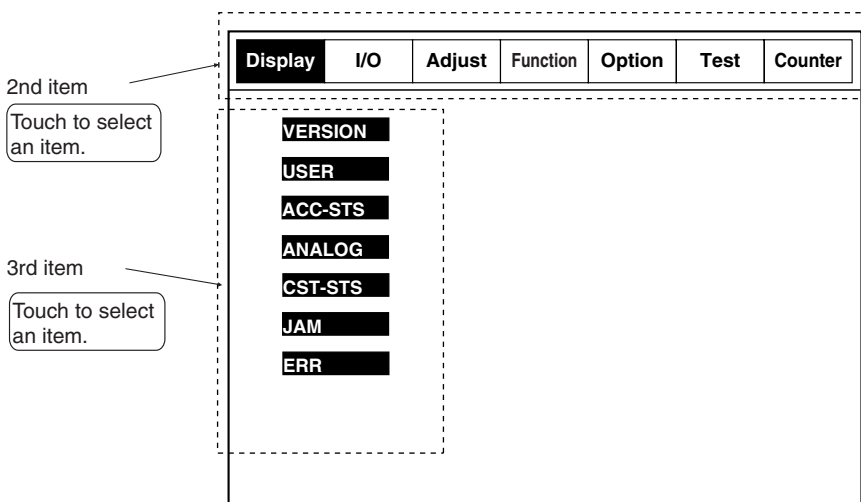


F-15-7

15.1.7 4th Item Screen

0000-9790

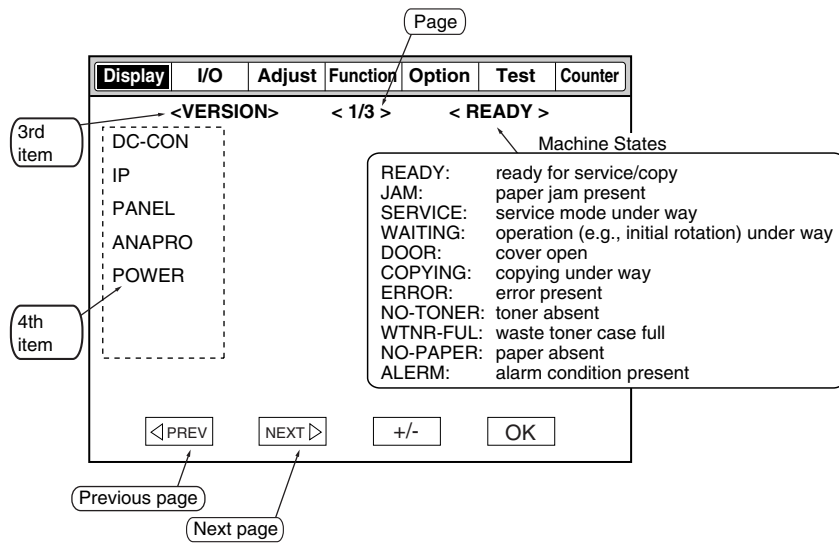

F-15-8

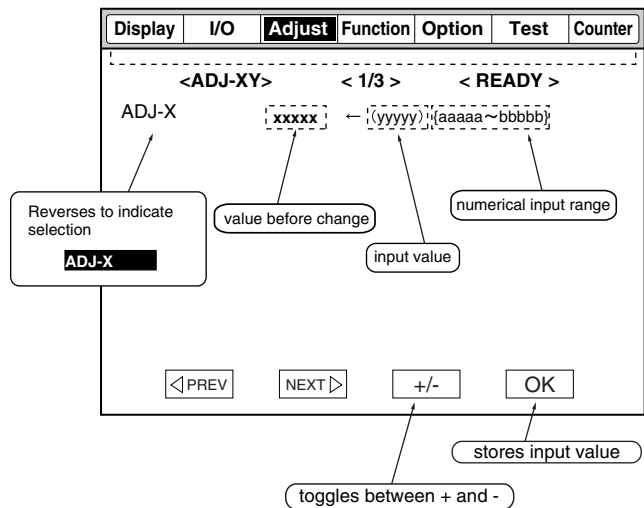

- Stop** key: press it to stop the ongoing operation.
- Clear** key: press to clear an input.
- Start** key: press to start copying without leaving service mode.

F-15-9

15.2 DISPLAY (Status Display Mode)

15.2.1 COPIER

15.2.1.1 VERSION

15.2.1.1.1 Overview

0000-9717

Use it to check the ROM version of individual PCBs (host machine and accessories).

-for example, in <R-CON XX.YY>, XX indicates the version and YY indicates R&D number.

-if no PCB is connected, the indication will be <--.-->.

15.2.1.1.2 <DC-CON>

0001-0006

Use it to check the ROM version of the DC controller PCB.

15.2.1.1.3 <R-CON>

0001-0008

Use it to check the ROM version of the reader controller PCB.

15.2.1.1.4 <PANEL>

0001-0011

Use it to check the ROM version of the control panel CPU PCB.

15.2.1.1.5 <ECO>

0001-0013

Use it to check the ROM version of the ECO PCB.

15.2.1.1.6 <FEEDER>

0001-0014

Uses it to check the ROM version of the DADF controller PCB.

15.2.1.1.7 <SORTER>

0001-0016

Use it to check the ROM version of the finisher controller PCB.

15.2.1.1.8 <FAX>

0001-0023

Use it to check the ROM version of the fax board.

15.2.1.1.9 <NIB>

0001-0024

Uses it to indicate the version of the network software.

15.2.1.1.10 <PS/PCL>

0001-0025

Use it to check the version of the UFR board (PS/PCL function).

15.2.1.1.11 <LIPS>	<u>0001-0027</u>
Use it to check the version of the UFR board (LIPS).	
15.2.1.1.12 <SDL-STCH>	<u>0001-0028</u>
Use it to check the ROM version of the saddle stitcher controller PCB.	
15.2.1.1.13 <OP-CON>	<u>0001-0029</u>
Use it to indicate the ROM version of the option controller PCB.	
15.2.1.1.14 <MN-CON>	<u>0001-0030</u>
Use it to check the ROM version of the main controller PCB.	
15.2.1.1.15 <BOOT-ROM>	<u>0001-0032</u>
Use it to check the boot ROM version of the main controller PCB.	
-copier model/GDI-UFR model: xx.yyC	
-LIPS mode: xx.yyL	
-PS/PCL model: xx.yyN	
15.2.1.1.16 <DIAG-DVC>	<u>0001-0033</u>
Use it to check the ROM version of the self-diagnosis device.	
15.2.1.1.17 <RUI>	<u>0001-0034</u>
Use it to check the remote UI.	
15.2.1.1.18 <PUNCH>	<u>0001-1200</u>
Use it to check the version of the punch unit.	
15.2.1.1.19 <LANG-EN>	<u>0001-0035</u>
Use it to check the version of an English language file.	
15.2.1.1.20 <LANG-FR>	<u>0001-0037</u>
Use it to check the version of a French language file.	
15.2.1.1.21 <LANG-DE>	<u>0001-0038</u>
Use it to check the version of a German language file.	
15.2.1.1.22 <LANG-IT>	<u>0001-0040</u>
Use it to check the version of an Italian language file.	
15.2.1.1.23 <LANG-JP>	<u>0001-0041</u>
Use it to check the version of a Japanese language file.	

15.2.1.1.24 <GDI-UFR> 0001-0042

Use it to check the version of the UFR board (GDI-UFR function).

15.2.1.2 ACC-STS

15.2.1.2.1 Overview 0000-9981

Use it to check the state of connection of accessories.

15.2.1.2.2 <FEEDER> 0000-9982

Use it to check the state of connection of a DADF:

0: not connected.

1: connected.

15.2.1.2.3 <SORTER> 0000-9991

Use it to check the state of connection of a finisher and punch unit.

0: not connected.

1: finisher connected.

2: saddle finisher connected.

15.2.1.2.4 <DECK> 0001-0055

Use it to check the state of connection of a paper deck.

0: not connected.

1: connected.

15.2.1.2.5 <CARD> 0001-0056

Use it to check the state of connection of a card reader:

0: card reader connected but card not inserted.

1: card reader not connected; or, card reader connected and card inserted

(indicates '1' if ready for copying; indicates '0' if not ready for copying)

15.2.1.2.6 <DATA-CON> 0001-0058

Use it to check the state of connection of a copy data controller.

0: not connected.

1: connected.

15.2.1.2.7 <RAM> 0001-0059

Use it to check the size of the memory mounted on the main controller PCB.

512MB, 768MB

15.2.1.2.8 <COINROBO> 0001-0060

Uses it to indicate the state of connection of a coin vendor.

0: not connected.

1: connected.

15.2.1.2.9 <NIB> 0001-0062

Use it to check the state of connection of a network board.

0: not connected.

1: Ethernet board connected.

2: TokenRing board connected.

3: Ethernet board and TokenRing board connected.

15.2.1.2.10 <NETWARE> 0001-0063

Use it to check the state of installation of network firmware.

0: not installed.

1: installed.

15.2.1.2.11 <SEND> 0001-0065

Use it to check the presence of the SEND function.

0: SEND function absent.

1: SEND function present.

15.2.1.3 ANALOG**15.2.1.3.1 Overview** 0000-9825

Use it to check the measurements taken by analog sensors.

15.2.1.3.2 <TEMP> 0000-9826

Use it to check the machine inside temperature (environment sensor; in deg C).

15.2.1.3.3 <HUM> 0000-9827

Use it to check the machine inside humidity (environment sensor; in %RH).

15.2.1.3.4 <ABS-HUM> 0000-9828

Use it to check moisture content (environment sensor; in g).

15.2.1.3.5 <FIX-UC> 0000-9829

Use it to check the surface temperature of the middle of the fixing upper roller (as detected by the main thermistor; in deg C)

15.2.1.3.6 <FIX-UE> 0000-9830

Use it to check the surface temperature at the edge of the fixing upper roller (as detected by the sub thermistor; in deg C)

15.2.1.3.7 <FIX-LC> 0002-7219

Use it to indicate the temperature of the center of the fixing lower roller. unit: deg C

15.2.1.3.8 <FIX-LE> 0002-7221

Use it to indicate the temperature of the edge of the fixing lower roller. unit: deg C

15.2.1.3.9 <FIX-EXC> 0002-7222

Use it to indicate the temperature of the center of the outside heating roller. unit: deg C

15.2.1.3.10 <FIX-EXE> 0002-7223


Use it to indicate the temperature of the edge of the outside heating roller unit: deg C

15.2.1.4 JAM

15.2.1.4.1 Overview

0001-0066

Use it to check jam data.

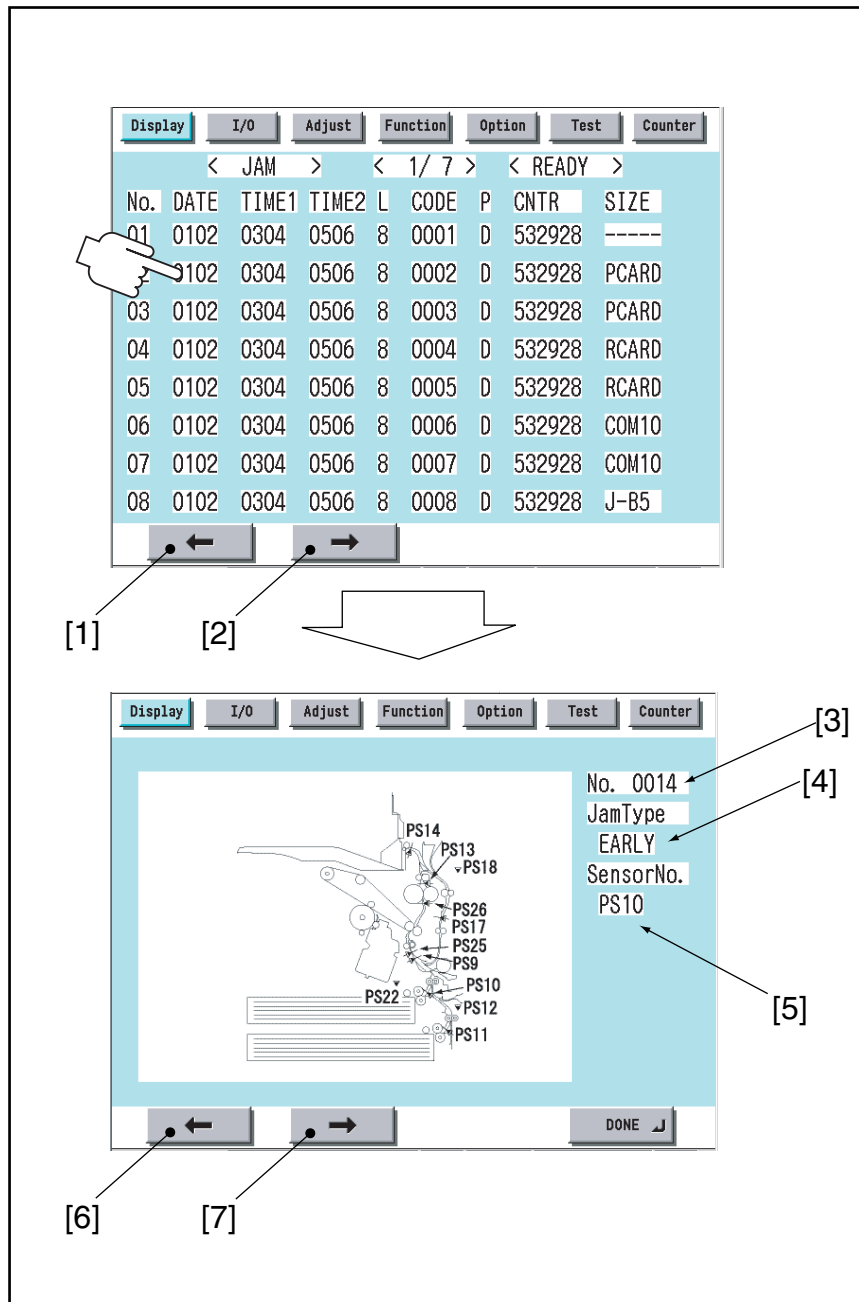

F-15-10

Touch any Jam Indication screen to go to the detailed screen of that particular type of jam.

1. press to go to the previous page.
 2. press to go to the next page.
 3. indicates the order of occurrence of the jam in question.
 4. indicates the type of jam.
 6. press to go to the previous Jam Indication screen.
 7. press it to go to the next Jam Indication screen.
-

15.2.1.4.2 <No.> 0001-0069

Indicates the order of occurrence of the jam in question.
1 through 50 (the higher the number, the older the jam)

15.2.1.4.3 <DATE> 0001-0070

Indicates the date of the jam in question.

15.2.1.4.4 <TIME1> 0001-0071

Indicates the time of the jam in question.

15.2.1.4.5 <TIME2> 0001-0072

Indicates the jam recovery time.

15.2.1.4.6 <L> 0001-0073

Indicates the location of the jam in question.

T-15-1

Code	Location/classification
0	host machine
1	feeder
2	finisher

15.2.1.4.7 <CODE> 0001-0074

Jam Code (See the list of jam codes.)

15.2.1.4.8 <P> 0001-0075

Indicates the source of paper used.

T-15-2

Code	Description
1	cassette 1
2	cassette 2
3	cassette 3
4	cassette 4
5	side paper deck
6	manual feed tray
7	duplexing unit

15.2.1.4.9 <CNTR>

0001-0077

Indicates the reading of the soft counter for the source of paper.

15.2.1.4.10 <SIZE>

0001-0078

Indicates the size of paper.

15.2.1.4.11 Jam Code (jam type)

0001-0081

T-15-3

Code	Type of jam
01xx	delay jam
02xx	stationary jam
0Axx	residual jam
0B00	door open jam
0B01	door open jam (detection by software)
0D91	size mismatch (paper shorter than specified size)
0D92	medium mismatch (paper instead of transparency)
0D93	medium mismatch (transparency instead of paper)

T-15-4

Code	Sensor type	Sensor number	Remarks
xx01	right deck pickup sensor	PS33	does not detect a stationary jam
xx02	left deck pickup sensor	PS40	does not detect a stationary jam
xx03	cassette 3 pickup sensor	PS48	does not detect a stationary jam
xx04	cassette 4 pickup sensor	PS54	does not detect a stationary jam
xx05	vertical path 4 sensor	PS63	
xx06	vertical path 3 sensor	PS62	
xx07	vertical path 2 sensor	PS61	
xx08	vertical path 1 sensor	PS60	
xx09	vertical path confluence sensor	PS32	when the source of paper is NOT the right deck
xx09	vertical path 0 sensor	PS31	when the source of paper is the right deck
xx0A	transparency sensor (front, rear)	PS3, PS29	when the mode is not transparency mode
xx0A	registration sensor	PS9	when the mode is transparency mode
xx0B	post-transfer sensor	PS10	does not detect a stationary jam
xx0C	inside delivery sensor	PS12	does not detect a stationary jam
xx0D	reversal sensor	PS14	when in face-down delivery mode
xx0E	outside delivery sensor	PS13	
xx0F	reversal vertical path sensor	PS15	
xx11	duplex left sensor	PS17	
xx12	duplex confluence sensor	PS18	
xx13	side paper deck pickup sensor	PS101	does not detect a stationary jam
xx14	side paper deck feed sensor	PS106	
xx15	fixing inlet sensor	PS11	detects a residual jam only
xx16	left deck stationary sensor	PS47	detects a residual jam only
0D90	transparency sensor (front, rear)	PS3, PS29	when the mode is transparency mode
0D91	transparency sensor (front, rear)	PS3, PS29	when the mode is not transparency mode
0D91	registration sensor	PS9	when the mode is transparency mode
0D92	transparency sensor (front, rear)	PS3, PS29	
0D93	transparency sensor (front, rear)	PS3, PS29	

15.2.1.4.13 Jam Code (finisher-related)

0005-0750

T-15-5

Code	Sensor type	Sensor notation
1001	inlet path sensor feed delay jam	PI33
1002	punch path sensor (punch registration sensor) feed delay jam	LED5/PTR5
1004	delivery path sensor feed delay jam	PI34
1101	inlet path sensor feed stationary jam	PI33
1102	inlet path sensor feed stationary jam punch path sensor (Punch registration sensor) feed stationary jam	LED5/PTR5
1104	delivery path sensor feed stationary jam	PI34
1200	timing jam	PI33
1500	stapler staple jam	STP
1300	power-on jam	PI33,PI34
1400	door open jam	DOOR
1644	punch jam	LED5/PTR5
1645	punch power-on jam	LED5/PTR5
1791	saddle feed sensor feed delay jam	PI18,PI19,PI20
1792	saddle delivery sensor feed delay jam	PI11
1793	saddle inlet sensor feed delay jam	PI22
17A1	saddle feed sensor feed stationary jam	PI18,PI19,PI20
17A2	saddle delivery sensor feed stationary jam	PI11,PI17
17A3	saddle inlet sensor feed stationary jam	PI22
1786	saddle stapler staple jam	S STP
1787	saddle power-on jam	PI11,PI18,PI19,PI20,PI22
1788	saddle door open jam	DOOR

15.2.1.4.14 Jam Sensor (ADF-related)

0002-7228

Jam Sensor (ADF-related)

T-15-6

Code	Sensor type	Sensor notation	Description
0001	post-separation sensor	PI7	the post-separation sensor does not detect paper when a feed of 452 mm has been made after the start of separation.
0002	post-separation sensor	PI7	-the separation sensor detects paper after a feed of "500 mm (if extra length, +200 mm) -45.5 mm" has been made. -the sensor goes on within a feed of 12 mm after detection of the trailing edge (holed paper); the post-separation sensor detects paper when a feed of 50 m has been made after the separation sensor goes on.
0003	registration sensor	PI1	the registration sensor does not detect paper when a feed of 134.8 mm has been made after the post-separation sensor goes on.
0004	registration sensor	PI1	the read sensor goes off before the registration sensor goes off.
0005	feed sensor	PI8	-read sensor does not detect paper when a feed of 364.2 mm (182.1 x 2) has been made from the point of registration. -the read sensor does not detect paper when a feed of 157.4 mm (78.7 x 2) has been made from the point of No. 2 registration.
0006	feed sensor	PI8	-the read sensor detects paper when a feed of 500 mm (if extra-length, +200 mm) has been made from the start of feed after a temporary stop at point of reading. -the read sensor detects paper when a feed of 514 mm has been made after the start of feed from the standby point in mix mode (LTRR/LGL identified).
0007	delivery reversal sensor	PI9	-if not in high-speed duplex mode, the delivery sensor does not detect when a feed of 132.1 mm has been made after paper has reached the leading edge downstream roller with respect to the activation of the read sensor. -the delivery sensor does not detect paper when a feed of 50 mm has been made after the start of feed during a switch-back operation.
0008	delivery reversal sensor	PI9	the delivery sensor detects paper when a feed of 161.9 mm has been made from the end of reading the trailing edge.
0042	post-separation sensor	PI7	1st; stationary jam at the post-separation sensor
0043	registration sensor	PI1	1st; not reaching the registration sensor
0044	registration sensor	PI1	1st; stationary at the registration sensor
0045	feed sensor	PI8	1st; not reaching the read sensor
0046	feed sensor	PI8	1st; stationary at the read sensor
0047	delivery reversal sensor	PI9	1st; not reaching heat delivery sensor

Code	Sensor type	Sensor notation	Description
0048	delivery reversal sensor	PI9	1st; stationary sensor at the delivery sensor
0071	wrong timing	-	error software timing
0073	wrong timing	-	the shift motor is faulty
0090	ADF open/closed sensor 1	PS502	the ADF is opened during operation
0091	ADF open/closed sensor 1	PS502	the ADF is opened during operation (while paper is in wait)
0092	DF cover open/closed sensor	PI6	A cover is opened during operation (while a drive mechanism is in operation).
0093	DF cover pen/closed sensor	PI6	A cover is opened during operation (in wait for paper).
0094	registration sensor, separation sensor, feed sensor, delivery reversal sensor	PI1,PI7,PI8,PI9	Paper is detected in the path while the 1st sheet is being picked up.
0095	original placement sensor, DF cover open/closed sensor, ADF open/closed sensor 1	PI5,PI6,PS502	A signal arrives indicating the start of pickup in the absence of an original in the tray or while the machine is in an OPEN state.

15.2.1.5 ERR

15.2.1.5.1 Overview

0001-0087

Use it to check error data.

Display	I/O	Adjust	Function	Option	Test	Counter
< ERR > < 1/ 7 > < READY >						
No.	DATE	TIME1	TIME2	CODE	DTL	L P
01	----	----	----	----	----	- -
02	0102	0304	0506	E0708	090A	C 0D
03	0102	0304	0506	E0708	090A	C 0D
04	0102	0304	0506	E0708	090A	C 0D
05	0102	0304	0506	E0708	090A	C 0D
06	0102	0304	0506	E0708	090A	C 0D
07	0102	0304	0506	E0708	090A	C 0D
08	0102	0304	0506	E0708	090A	C 0D
← →						

F-15-11

15.2.1.5.2 <No.>

0001-0092

Indicates the order of occurrence of the error in question.

1 to 50 (the higher the number, the older the error)

15.2.1.5.3 <DATE>

0001-0093

Indicates the date of the error in question.

15.2.1.5.4 <TIME1>

0001-0094

Indicates the time of the error in question.

15.2.1.5.5 <DATE2>

0001-9893

Indicates the error return time.

15.2.1.5.6 <CODE>

0001-0095

Indicates the cover of the error in question.

15.2.1.5.7 <DTL>

0001-0096

Indicates the detail code of the error in question. (if not, '0000')

15.2.1.5.8 <L>

0001-0097

T-15-7

Location Classification

0: main controller

1: DADF

2: finisher

3: not used

4: reader unit

5: printer unit

6: PDL board (any of)

7: fax board

15.2.1.5.9 <P>

0001-9894

not used

15.2.1.6 HV-STS

15.2.1.6.1 Overview

0002-7232

Use it to indicate measurements taken of the voltage/current.

15.2.1.6.2 <PRI-GRID>

0002-7247

grid voltage of primary charging assembly.unit: V

Use it to indicate the level of current of the primary grid bias. unit: A

15.2.1.6.3 <PRE-TR>

0002-7252

Use it to indicate the level of current of pre-transfer charging. unit: micro A

15.2.1.6.4 <BIAS>

0002-7254

Use it to indicate the developing bias DC level. unit: V

15.2.1.7 DPOT

15.2.1.7.1 Overview

0002-7276

Use it to indicate data collected of the photosensitive drum/transfer belt potential control mechanism.

15.2.1.7.2 <DPOT-K>

0002-7277

Use it to indicate the surface potential of the photosensitive drum. unit: V

15.2.1.7.3 <VDM>

0002-7308

Use it to indicate the dark-area potential (VD) for copying. unit: V

15.2.1.7.4 <1TR-DC4K>

0004-9499

Use it to indicate the primary transfer DC (Bk by 4C). unit: V
400 to 3000 [V]

15.2.1.8 DENS

15.2.1.8.1 Overview

0000-9819

Use it to check the concentration of developer inside the developing assembly.

15.2.1.8.2 <DENS-Y>

0000-9794

T-15-8

Use it to check the computed value of the density (Y) of the patch formed on the photosensitive drum. (indicates the discrepancy from the target value in %)

Reference

The value is updated when the machine executes toner supply operation after the main power switch is turned on.

Optimum

-25 to +25

15.2.1.8.3 <DENS-M>

0001-1242

T-15-9

Use it to check the computed value of the density (M) of the patch formed on the photosensitive drum. (indicates the discrepancy from the target value in %)

Reference	The value is updated when the machine executes toner supply operation after the main power switch is turned on.
Optimum	-25 to +25

15.2.1.8.4 <DENS-C>

0001-1243

T-15-10

Use it to check the computed value of the density (C) of the patch formed on the photosensitive drum. (indicates the discrepancy from the target value in %)

Reference	The value is updated when the machine executes toner supply operation after the main power switch is turned on.
Optimum	-25 to +25

15.2.1.8.5 <REF-Y/M/C>

0000-9807

T-15-11

Use it to check the density standard (Y/M/C) of the developer on the developing cylinder.

Reference	The value is updated when the machine executes toner supply operation after the main power switch is turned on.
Optimum	464 to 560

15.2.1.8.6 <SGNL-Y/M/C>

0000-9808

T-15-12

Use it to check the measurement (Y/M/C) of the density of the developer on the developing cylinder.

Reference	The value is updated when the machine executes toner supply operation after the main power switch is turned on.
Optimum	225 to 863

15.2.1.9 MISC

15.2.1.9.1 Overview

0000-9822

Others

15.2.1.9.2 <ENV-TR>

0002-7383

Indicates the environmental zone.

Indicates the environmental zone for transfer control according to the environment (temperature, humidity) inside the printer.

range of indications:

- 1: low humidity environment (up to 5.8 g)
 - 2: normal humidity environment (5.9 to 17.3 g)
 - 3: high humidity environment (17.4 g or higher)
- at time of shipment/upon RAM initialization: 2

15.2.1.10 ALARM-1

15.2.1.10.1 Overview

0001-7421

Use it to check the image ratio of the images formed using individual colors.

15.2.1.10.2 <IMG-DT-Y>

0001-7422

Use it to check the average of the image ratios of the images formed using yellow.

15.2.1.10.3 <IMG-DT-M>

0001-7423

Use it to check the average of the image ratios of the images formed using magenta.

15.2.1.10.4 <IMG-DT-C>

0001-7424

Use it to check the average of the image ratios of the images formed using cyan.

15.2.1.10.5 <IMG-DT-K>

0001-7426

Use it to check the average of the image ratios of the images formed using black.

15.2.1.11 ALARM-2

15.2.1.11.1 Overview

0001-1247

Use it to check alarm data.

No.	DATE	TIME1	TIME2	CODE	DTL	CNTR
01	---	---	---	---	---	---
02	---	---	---	---	---	---
03	---	---	---	---	---	---
04	---	---	---	---	---	---
05	---	---	---	---	---	---
06	---	---	---	---	---	---
07	---	---	---	---	---	---
08	---	---	---	---	---	---

F-15-12

T-15-13

Item	Description	Remarks
No.	indicates the order of occurrence of alarms (1 through 50; the higher the number, the older the error).	
DATE	indicates the date of the alarm in question.	
TIME1	indicates the time of the alarm in question.	
TIME2	indicates the alarm recovery time.	
CODE	indicates the code of the location at which the alarm in question occurred. (See the table on next page.)	
	indicates the code of the alarm in question. (See the table on next page.)	
DTL	Indicates the detail code of the alarm in question. (See the table on next page.)	
CNTR	indicates the total counter reading at the time of the alarm in question.	

T-15-14

Location code	Alarm code	
02 scanner	0002	indicates the presence of dirt on the glass for stream reading.
	0020	line correction alarm (upon detection of dust on the stream reading glass between originals)
04 pickup/feed	0001	cassette 1 lifter error
	0002	cassette 2 lifter error
	0003	cassette 3 lifter error
	0004	cassette 4 lifter error
	0008	optional deck lifter error
33 fan	0011	fixing heat discharge fan
50 ADF	0010	indicates that the original separation alarm condition has occurred 3 times in sequence (i.e., faulty pickup of the 1st original).
61 finisher	0001	staple absent
62 saddle stitcher	0001	stitch staple absent
65 puncher	0001	punch waste case full

15.2.1.12 ENVRNT

15.2.1.12.1 Overview

0002-6169

Displaying Environment Logs

Use it to indicate logs of changes that may have taken place for [machine inside temperature (deg C)/humidity (%)/fixing roller surface (middle) temperature (deg C)] collected from the monitor output of the fixing thermistor (main) and the environment sensor.

Remarks

The intervals of data collection may be set in service mode: COPIER>OPTION>BODY>ENVP-IN.

Display	I/O	Adjust	Function	Option	Test	Counter
< ENVRNT > < 1/13 > < READY >						
No.	DATE	TIME	D+t	E+%	F+t	
001	0101	0000	D000	E000	F000	
002	0201	0000	D000	E000	F000	
003	0301	0000	D000	E000	F000	
004	0401	0000	D000	E000	F000	
005	0501	0000	D000	E000	F000	
006	0601	0000	D000	E000	F000	
007	0701	0000	D000	E000	F000	
008	0801	0000	D000	E000	F000	

F-15-13

T-15-15

Item	Description
No.	number of a data piece (higher the number, older the data piece)
DATE	date of data collection
TIME	time of data collection
D + deg C	machine inside temperature
E + %	machine inside humidity
F + deg C	fixing roller surface (middle) temperature

15.2.2 FEEDER

15.2.2.1 <FEEDSIZE>

0001-7431

T-15-16

Use it to check the size of the original detected by the ADF.

Reference

Indicates the detection in terms of paper size (e.g., A4, LTR).

15.2.2.2 <TRY-WIDE>

0001-7433

Use it to check the original pickup tray width of the DF.

15.2.2.3 <SPSN-LMN>

0005-1229

T-15-17

Use it to indicate the manual adjustment value (light-emission voltage) of the post-separation sensor.

Optimum range

179 or less

15.2.2.4 <SPSN-RCV>

0005-1233

T-15-18

Use it to indicate the manual adjustment value (light reception voltage) of the post-separation sensor.

Optimum range

paper present: 154 or less
paper absent: 179 or more

15.2.2.5 <RDSN-LMN>

0005-1236

T-15-19

Use it to indicate manual adjustment value (light emission voltage of the reader sensor).

Optimum range

179 or less

15.2.2.6 <RDSN-RCV>

0005-1239

T-15-20

Use it to indicate the manual adjustment value (light reception voltage) of the read sensor.

Optimum range paper present: 154 or less
 paper absent: 179 or more

15.2.2.7 <DRSN-LMN>

0005-1241

T-15-21

Use it to indicate the manual adjustment value (light emission voltage) of the delivery reversal sensor.

Optimum range 905 or less

15.2.2.8 <RDSN-RCV>

0005-1242

T-15-22

Use it to indicate the manual adjustment value (light reception voltage) of the delivery reversal sensor.

Optimum range paper present: 154 or less
 paper absent: 179 or more

15.2.3 DISPLAY(Status Display Mode)Level2

15.2.3.1 COPIER

15.2.3.1.1 VERSION

<LANG-CS>	<u>0001-0125</u>
Use it to check the version of the Czech language file.	
<LANG-DA>	<u>0001-0126</u>
Use it to check the version of the Danish language file.	
<LANG-EL>	<u>0001-0127</u>
Use it to check the version of the Greek language file.	
<LANG-ES>	<u>0001-0128</u>
Use it to check the version of the Spanish language file.	
<LANG-ET>	<u>0001-0129</u>
Use it to check the version of the Estonian language file.	
<LANG-FI>	<u>0001-0130</u>
Use it to check the version of the Finnish language file.	
<LANG-HU>	<u>0001-0131</u>
Use it to check the version of the Hungarian language file.	
<LANG-KO>	<u>0001-0132</u>
Use it to check the version of the Korean language file.	
<LANG-NL>	<u>0001-0133</u>
Use it to check the version of the Dutch language file.	
<LANG-NO>	<u>0001-0134</u>
Use it to check the version of the Norwegian language file.	
<LANG-PL>	<u>0001-0135</u>
Use it to check the version of the Polish language file.	
<LANG-PT>	<u>0001-0136</u>
Use it to check the version of the Portuguese language file.	
<LANG-RU>	<u>0001-0138</u>
Use it to check the version of the Russian language file.	
<LANG-SL>	<u>0001-0139</u>
Use it to check the version of the Slovenian language file.	
<LANG-SV>	<u>0001-0140</u>
Use it to check the version of the Swedish language file.	
<LANG-TW>	<u>0001-0141</u>
Use it to check the version of the Chinese language file (traditional text).	
<LANG-ZH>	<u>0001-0143</u>
Use it to check the version of the Chinese language file (simplified text).	
<ECO-ID>	<u>0001-1219</u>
Use it to check the ECO-ID number	

<LANG-BU>	<u>0001-0144</u>
Use it to check the version of the Bulgarian language file.	
<LANG-CR>	<u>0001-0145</u>
Use it to check the version of the Croatian language file.	
<LANG-RM>	<u>0001-0146</u>
Use it to check the version of the Romanian language file.	
<LANG-SK>	<u>0001-0147</u>
Use it to check the version of the Slovakian language file.	
<LANG-TK>	<u>0001-0148</u>
Use it to check the version of the Turkish language file.	
15.2.3.1.2 CST-ST5	
<WIDTH-MF>	<u>0001-0149</u>
Use it to check the width of paper in the manual feed tray (in mm).	
15.2.3.1.3 HV-ST5	
<1EL>	<u>0002-7255</u>
Use it to indicate the primary transfer static eliminator bias level.	
Display range: -4000 to 0	
reference: -4000 (unit: V)	
<2EL>	<u>0002-7257</u>
Indicates the level of the secondary transfer static eliminator bias.	
standard: 0 (unit: yA)	
<PRE-TR-Y>	<u>0005-9884</u>
Indicating the Current Output Level(Y) for the Pre-Transfer Charging Assembly range of readings:-650 to 0	
<PRE-TR-M>	<u>0005-9886</u>
Indicating the Current Output Level(M) for the Pre-Transfer Charging Assembly range of readings:-650 to 0	
<PRE-TR-C>	<u>0005-9887</u>
Indicating the Current Output Level(C) for the Pre-Transfer Charging Assembly range of readings:-650 to 0	
15.2.3.1.4 CCD	
<TARGET-B>	<u>0001-2795</u>
Use it to check the shading target value for B.	
<TARGET-G>	<u>0001-2797</u>
Use it to check the shading target value for G.	
<TARGET-R>	<u>0001-2798</u>
Use it to check the shading target value for R.	
<GAIN-OB>	<u>0002-7266</u>
Use it to indicate the gain level adjustment value (for color) of odd-numbered blue bits of the CCD.	
<GAIN-OG>	<u>0002-7267</u>
Use it to indicate the gain level adjustment value (for color) of odd-numbered green bits of the CCD.	

<GAIN-OR>	<u>0002-7268</u>
Use it to indicate the gain level adjustment (for color) of odd-numbered red bits of the CCD.	
<GAIN-EB>	<u>0002-7269</u>
Use it to indicate the gain level adjustment value (for color) of even-numbered blue bits of the CCD.	
<GAIN-EG>	<u>0002-7271</u>
Use it to indicate the gain level adjustment (for color) of even-numbered green bits of the CCD.	
<GAIN-ER>	<u>0002-7274</u>
Use it to indicate the gain level adjustment value (for color) of even-numbered red bits of the CCD.	
15.2.3.1.5 DPOT	
<VCONT-Y>	<u>0001-1223</u>
Use it to check the current value of the target contrast potential (Y).	
<VCONT-M>	<u>0001-1224</u>
Use it to check the current value of the target contrast potential (M).	
<VCONT-C>	<u>0001-1225</u>
Use it to check the current value of the target contrast potential (C).	
<VCONT-K>	<u>0001-1226</u>
Use it to check the current value of the target contrast potential (K).	
<VBACK-Y>	<u>0001-1227</u>
Use it to check the current value of the defogging potential (Y).	
<VBACK-M>	<u>0001-1228</u>
Use it to check the current value of the defogging potential (M).	
<VBACK-C>	<u>0001-1229</u>
Use it to check the current value of the defogging potential (C).	
<VBACK-K>	<u>0001-1230</u>
Use it to check the current value of the defogging potential (K).	
<2TR-PPR>	<u>0001-0150</u>
Use it to check the output value of the paper separation voltage of the secondary transfer DC voltage generated last.	
<2TR-BASE>	<u>0001-0152</u>
Use it to check the output value of the reference voltage of the secondary transfer DC voltage generated last.	
<1TR-DC-Y>	<u>0001-0153</u>
Use it to check the output value of the primary transfer DC voltage (Y) generated last.	
<1TR-DC-M>	<u>0001-1231</u>
Use it to check the output value of the primary transfer DC voltage (M) generated last.	
<1TR-DC-C>	<u>0001-1232</u>
Use it to check the output value of the primary transfer DC voltage (C) generated last.	
<1TR-DC-K>	<u>0001-1233</u>
Use it to check the output value of the primary transfer DC voltage (K) generated last.	
<VDT-SNS>	<u>0002-7359</u>
Indicating the Dark Area Potential Target Value(potential sensor position) Use it to indicate the dark area potential target level(VD) for the potential sensor position.	
standard level:504V	

<VDT-BK>	<u>0002-7364</u>
Indicating the Dark Area Potential Target Value(black developing assembly position) Use it to indicate the dark area potential target value(VD) for the point of black development.	
standard level:490V	
<VDT-YMC>	<u>0002-7366</u>
Indicating the Dark Area Potential Target(color development position) Use it to indicate the dark area target value(VD) for the point of color development.	
standard level:450V	
<LPWR-Y>	<u>0002-7368</u>
Indicating the Y Color Laser Power Level (result of potential control used as VL target potential) Use it to indicate the laser power level for Y used as the VL target potential for potential control.	
range of settings:00 to FF(hexadecimal notation)	
<LPWR-M>	<u>0006-2684</u>
Indicating the M Color Laser Power Level (result of potential control used as VL target potential) Use it to indicate the laser power level for Y used as the VL target potential for potential control.	
range of settings:00 to FF(hexadecimal notation)	
<LPWR-C>	<u>0006-2690</u>
Indicating the C Color Laser Power Level (result of potential control used as VL target potential) Use it to indicate the laser power level for Y used as the VL target potential for potential control.	
range of settings:00 to FF(hexadecimal notation)	
<LPWR-K>	<u>0005-7037</u>
Indicating the K Color Laser Power Level (result of potential control used as VL target potential) Use it to indicate the laser power level for K used as the VL target potential for potential control.	
range of settings:00 to FF(hexadecimal notation)	
15.2.3.1.6 DENS	
<DENS-S-Y>	<u>0005-6451</u>
Use it to indicate the measurement (Y) of the density of the sample image formed during ATR control.	
<DENS-S-M>	<u>0005-8960</u>
Use it to check the density value (M) detected of the sample image formed at time of ATR control.	
<DENS-S-C>	<u>0005-8961</u>
Use it to check the density value (C) detected of the sample image formed at time of ATR control.	
<D-Y-TRGT>	<u>0005-8975</u>
Use it to check the target value (Y) of the developer density.	
<D-M-TRGT>	<u>0005-8966</u>
Use it to check the target value (M) of the developer density.	
<D-C-TRGT>	<u>0005-8967</u>
Use it to check the target value (C) of the developer density.	
<P-SENS-P>	<u>0005-9908</u>
Indicates the result of background detection (P wave component) executed as part of analog patch detection.	
The currently valid value will be indicated only upon execution of analog patch detection after the power is turned on.	

<DEV-DC-Y>	<u>0005-8976</u>
Use it to check the output value of the developing DC voltage (Y) generated last.	
<DEV-DC-M>	<u>0005-8969</u>
Use it to check the output value of the developing DC voltage (M) generated last.	
<DEV-DC-C>	<u>0005-8970</u>
Use it to check the output value of the developing DC voltage (C) generated last.	
<DEV-DC-K>	<u>0005-8971</u>
Use it to check the output value of the developing DC voltage (K) generated last.	
<D-CRNT-P>	<u>0005-8977</u>
Uses it to indicate the value (P wave) measured of the dark current at time of ATR control.	
<D-CRNT-S>	<u>0005-8972</u>
Uses it to indicate the value (S wave) measured of the dark current at time of ATR control.	
<P-SENS-S>	<u>0001-0159</u>
Use it to check the value (S wave) detected of the intensity of light from the background (drum) at time of ATR control.	
<DENS-Y-H>	<u>0005-8978</u>
Use it to check the history of measurements taken by the ATR sensor (Y; latest 8 measurements).	
<DENS-M-H>	<u>0005-8973</u>
Use it to check the history of measurements taken by the ATR sensor (M; latest 8 measurements).	
<DENS-C-H>	<u>0005-8974</u>
Use it to check the history of measurements taken by the ATR sensor (C; latest 8 measurements).	
<DS-S-Y-H>	<u>0004-9549</u>
Use it to indicate the history of the results of patch image detection (Y; latest 8).	
<DS-S-M-H>	<u>0005-8962</u>
Use it to indicate the history of the results of patch image detection (M; latest 8).	
<DS-S-C-H>	<u>0005-8963</u>
Use it to indicate the history of the results of patch image detection (C; latest 8).	
<P-LED-DA>	<u>0001-1023</u>
Use it to check the D/A settings of the LED for the path image sensor.	
<SPL-LG-Y>	<u>0004-9551</u>
Use it to indicate the present level of the density reference signal for the Y developing assembly.	
<SPL-LG-M>	<u>0005-8964</u>
Use it to indicate the present level of the density reference signal for the M developing assembly.	
<SPL-LG-C>	<u>0005-8965</u>
Use it to indicate the present level of the density reference signal for the C developing assembly.	
<PSENS-S>	<u>0005-7928</u>
Use it to indicate the measurement of the background at time of analog patch operation (S wave component).	
<PSENS-P>	<u>0004-9555</u>
Use it to indicate the measurement of the background at time of analog patch operation (P wave component).	

15.2.3.1.7 MISC

<LPOWER>

0002-7416

Use it indicate the laser intensity in real time.

range of display: 00 to FF (in hexadecimal notation)

15.2.3.1.8 ALARM-1

<LST-DY-Y>

0004-9559

Use it to indicate the image duty for Y generated most recently.

range of display: 0 to 100 (%)

<LST-DY-M>

0004-9560

Use it to indicate the image duty for M generated most recently.

range of display: 0 to 100 (%)

<LST-DY-C>

0004-9561

Use it to indicate the image duty for C generated most recently.


range of display: 0 to 100 (%)

15.3 I/O (I/O Display Mode)

15.3.1 Overview


0001-0118

The following appears in response to COPIER>I/O; descriptions of the items (limited to those needed in the field) area given on the pages that follow:

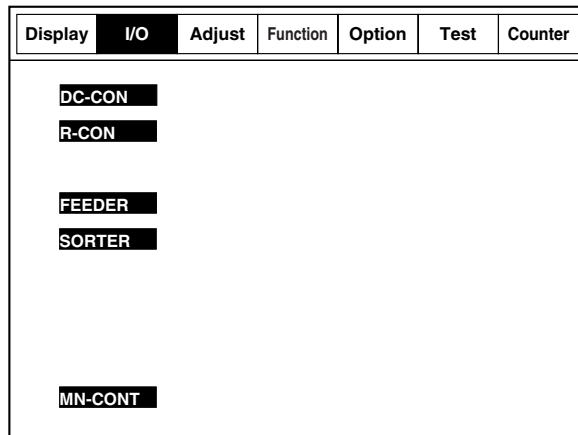

F-15-14

<Guide to the Screen>

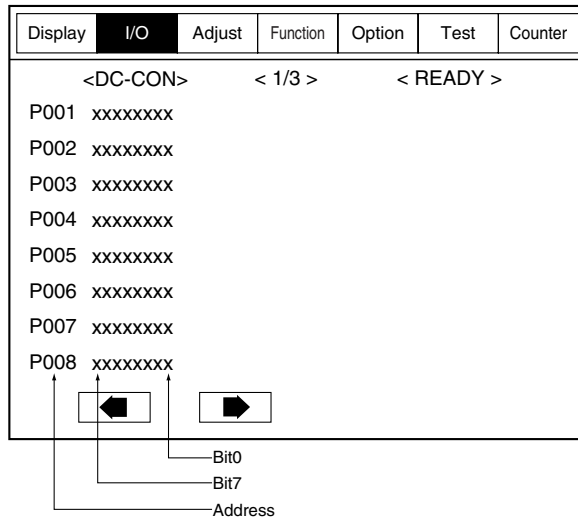

F-15-15

15.3.2 <DC-CON>

0005-1030

T-15-23

Address	bit	Item	Remarks
P001	0	main thermistor (overheating)	0: error
	1	main thermistor (open circuit)	0: error
	2	shift thermistor (overheating)	0: error
	3	shift thermistor (open circuit)	0: error
	4	outside heating roller thermistor (overheating)	0: error
	5	outside heating roller thermistor (open circuit)	0: error
	6	thermistor-related hard latch signal	0: error
	7	reserved	not used
	8	for check	1: blown fuse
	9	for check	1: blown fuse
	10	DDI general input	not used
	11	DDI general input	not used
	12	DDI general input	not used
	13	DDI power	0: POWER ON
	14	not used	
15	interlock 24 V (detected)	0: 24 V detected	

Address	bit	Item	Remarks
P002	0	Upper right cover open/closed sensor (PS5)	0: door open
	1	Lower right cover open/closed sensor (PS64)	0: door open
	2	Front cover switch (SW12)	1: door open
	3	Black toner supply motor connection (M25)	0: connected (valid only if motor at rest)
	4	fixing unit (detected)	0: unit installed
	5	feeder unit (detected)	0: unit installed
	6	right deck presence/absence (detected)	1: ON
	7	left deck presence/absence (detected)	1: ON
	8	Drum/ITB motor (M2) lock (detected)	0: lock (sync rotation)
	9	developing motor (M3) lock (detected)	0: lock (sync rotation)
	10	fixing motor (M4) lock (detected)	0: lock (sync rotation)
	11	primary charging suction fan (FM1) lock (detected)	0: lock (sync rotation)
	12	Primary charging assembly exhaust fan (FM2) lock (detected)	0: lock (sync rotation)
	13	Fixing heat exhaust fan (FM5) lock (detected)	0: lock (sync rotation)
	14	power supply motor lock (detected)	0: lock (sync rotation)
15	Delivery cooling fan 2 (fm10)	0: lock (sync rotation)	
P003	0	port 0	
	1	port 1	
	2	port 2	
	3	port 3	
	4	port 4	
	5	port 5	
	6	port 6	
	7	port 7	
	8	hard counter	1: ON
	9	hard counter	1: ON
	10	Delivery cooling fan 1 (fm6)	1: ON
	11	not used	
	12	not used	
	13	not used	
	14	not used	
15	black developing roller bias ON signal	0: ON	

Address	bit	Item	Remarks
P004	0	Left deck paper sensor (PS42)	1: paper present
	1	Left deck limit sensor (PS41)	1: limit state
	2	Left deck lifter sensor (PS43)	L: pickup state
	3	Left deck paper level sensor A (PS44)	1: paper present
	4	Left deck paper level sensor B (PS5)	1: paper present
	5	factory mode switch	
	6	factory mode switch	
	7	factory mode switch	
	8	ITB cleaning HP sensor (PS23)	1: sensor ON
	9	Outside heating roller HP sensor (PS21)	1: sensor ON
	10	ITB HP sensor A (PS1)	0: sensor ON
	11	ITB HP sensor B (PS30)	0: sensor ON
	12	Developing rotary solenoid sensor(PS8)	1: rotary lock (lock state: solenoid FF)
	13	Drum HP sensor (PS65)	check
	14	not used	not used
15	not used	not used	
P005	0	Cassette 3 paper sensor (PS50)	1: paper prevent
	1	Cassette 3 limit sensor (PS49)	1: limit state
	2	Cassette 3 lifter sensor (PS51)	L: pickup state
	3	Cassette 3 paper level sensor A (PS52)	0: full
	4	Cassette 3 paper level sensor B (PS53)	0: full
	5	not used	not used
	6	not used	not used
	7	not used	not used
	8	Right deck paper sensor (PS35)	1: paper present
	9	Right deck limit sensor (PS34)	1: limit state
	10	Right deck lifter sensor (PS36)	L: pickup state
	11	Right deck paper level sensor A (PS37)	1: paper present
	12	Right deck paper level sensor B (PS38)	1: paper present
	13	not used	not used
	14	not used	not used
15	not used	not used	

Address	bit	Item	Remarks
P006	0	Duplexing confluence sensor (PS18)	H: ON
	1	vertical path 0 sensor	H: ON
	2	Vertical path 1 sensor (PS60)	H: ON
	3	Vertical path 2 sensor (PS61)	H: ON
	4	Vertical path 3 sensor (PS62)	H: ON
	5	Vertical path 4 sensor (PS63)	H: ON
	6	Fixing inlet sensor (PS11)	H: ON
	7	Outside delivery sensor (PS13)	H: ON
	8	Cassette 4 paper sensor (PS56)	1: paper present
	9	Cassette 4 limit sensor (PS55)	1: limit state
	10	Cassette 4 lifter sensor (PS57)	L: pickup state
	11	Cassette 4 paper level sensor A (PS58)	0: full
	12	Cassette 4 paper level sensor B (PS59)	0: full
	13	not used	not used
	14	not used	not used
15	not used	not used	
P007	0	upper cassette size detection 0	0: active
	1	upper cassette size detection 1	0: active
	2	upper cassette size detection 2	0: active
	3	upper cassette size detection 3	0: active
	4	upper cassette size detection 4	0: active
	5	not used	
	6	fixing web solenoid connection detection	0: connected (valid only if solenoid at rest)
	7	color toner supply clutch connection detection	0: connected (valid only if solenoid at rest)
	8	Left deck pickup sensor (PS40)	1: ON
	9	Right deck pickup sensor (PS33)	1: ON
	10	Cassette 4 pickup sensor (PS54)	1: ON
	11	Cassette 3 pickup sensor (PS48)	1: ON
	12	Left deck limit sensor (PS41)	1: ON
	13	not used	
	14	Manual feed paper sensor (PS6)	1: ON
15	Last sheet sensor (PS7)	1: ON	

Address	bit	Item	Remarks
P008	0	shift tray connection detection	1: connected
	1	HP sensor (rear) (ps102)	1: HP detection
	2	HP sensor (front) (ps101)	1: HP detection
	3	Tray paper sensor (PS103)	0: paper present
	4	Limit sensor (front) (PS105)	0: full
	5	for R&D	
	6	for R&D	
	7	for R&D	
	8	lower cassette size detection 0	0: active
	9	lower cassette size detection 1	0: active
	10	lower cassette size detection 2	0: active
	11	lower cassette size detection 3	0: active
	12	lower cassette size detection 4	0: active
	13	for R&D	
	14	for R&D	
15	for R&D		
P009	0	waste toner error detection	
	1	not used	
	2	Web length sensor (PS20)	1: web absent
	3	for R&D	
	4	for R&D	
	5	for R&D	
	6	Process unit cooling fan(FM7) lock detection	1: locked (sync rotation)
	7	motor cooling fan detection	not used
	8	black toner level sensor (TS1)	1: toner present
	9	Color toner level sensor (ps25)	1: toner present
	10	sub hopper level sensor (TS2)	1: toner present
	11	not used	
	12	Transparency sensor (rear) (ps29)	1: set
	13	Hopper assembly open/closed sensor (ps28)	0: open
	14	not used	
15	not used		

Address	bit	Item	Remarks
P012	0	DDI serial transmission data	
	1	soft IPC serial transmission data	
	2	DDI serial reception data	
	3	soft IPC serial reception data	
	4	DDI serial	
	5	DDI serial	
	6	not used	
	7	not used	
P013	0	for R&D	
	1	for R&D	
	2	for R&D	
	3	for R&D	
	4	for R&D	
	5	for R&D	
	6	for R&D	
	7	for R&D	
P014	0	data on transmission to PC	
	1	data on reception for PC	
	2	flow control on communication with PC	
	3	flow control on communication with PC	
	4	not used	
	5	not used	
	6	not used	
	7	not used	
P015	0	for R&D	
	1	for R&D	
	2	DDI ready	
	3	DDI ready	
	4	ITOP_A sensor	
	5	ITOP interrupt	
	6	registration ON interrupt	
	7	rotary HP interrupt	

Address	bit	Item	Remarks
P016	0	not used	
	1	not used	
	2	not used	
	3	for R&D	
	4	for R&D	
	5	for R&D	
	6	for R&D	
	7	for R&D	
P017	0	FIN_RESET	
	1	FIN_DOWNLOAD	
	2	FIN_MODE	
	3	LWR*	
	4	HWR*	
	5	RD*	
	6	for R&D	
	7	CLK20	
P018	0	LED_ON	LED
	1	CS3*	CS for PIO [0],[1]
	2	CS2*	CS for RAM
	3	CS1*	CS for ASIC
	4	CS0*	CS for ROM
	5	not used	
	6	not used	
	7	not used	
P019	0 to 8	not used	
P020	0 to 8	not used	
P021	0 to 8	not used	
P022	0 to 8	not used	
P023	0 to 8	not used	
P024	0 to 8	not used	
P025	0 to 8	not used	
P026	0 to 8	not used	
P027	0 to 8	not used	
P028	0 to 8	not used	

15.3.3 <R-CON>

0005-1034

T-15-24

Indication	bit	Item	Remarks
P001	0	delivery reversal motor CLK	
	1	DDIS IF (OPT00-)	0: operation prohibited
	2	DDIS IF (SPRDY)	0: operation permitted
	3	DDIS IF (OPTI0)	0: active
	4	ADF pickup motor CLK	
	5	fan power ON signal	1: ON
	6	ADF read motor CLK	
	7	size sensor ON	1: ON
P002	0	shift motor CLK	
	1	24V power supply monitor	0: normal
	2	not used	
	3	not used	
	4	scanner motor CLK	
	5	13V power supply monitor	0: normal
	6	Canon Denshi switch	0: Canon Denshi
	7	DDIS IF (SCPRDY)	0: operation ready
P003	0	DDIS serial communication (TxD)	-
	1	ADF serial communication (TxD)	-
	2	DDIS serial communication (RxD)	-
	3	ADF serial communication (RxD)	-
	4	LED control	1: ON
	5	ADF serial communication (SCK)	-
	6	not used	
	7	not used	

Indication	bit	Item	Remarks
P004	0	original size detection 0	0: original present
	1	original size detection 1	0: original present
	2	original size detection 2	0: original present
	3	original size detection 3	0: original present
	4	DF connection detection	-
	5	DDIS IF (SRTS)	0: reception ready
	6	scanner motor Vref output	-
	7	not used	-
P005	0	PC connection IF (TxD)	-
	1	PC connecting IF (RxD)	-
	2	fan lock detection signal	0: enabled
	3	DDIS IF (SCTS)	0: reception ready
	4	not used	
	5	not used	
	6	not used	
	7	not used	
P006	0	not used	-
	1	PCB check terminal	1: normal
	2	DDIS IF (OPTI1)	0: active
	3	DDIS IF (OPTO1)	0: active
	4	ADF sensor interrupt input	0: active
	5	copyboard open/closed sensor interrupt input 0	1: copyboard cover closed
	6	HP sensor interrupt input	1: HP
	7	not used	-

Indication	bit	Item	Remarks
P007	0	address bus 16	-
	1	address bus 17	-
	2	address bus 18	-
	3	not used	-
	4	not used	-
	5	ADF pickup motor lock interrupt input	
	6	ADF pickup motor lock interrupt input	
	7	ADF delivery reversal motor lock interrupt input	
P008	0	lamp ON signal	1: on
	1	CCD drive ON signal	1: on
	2	wait signal	0: wait
	3	L light signal	0: active
	4	H light signal	0: active
	5	read signal	0: active
	6	ADF serial communication (LOAD)	0: enabled
	7	CPU clock output	-
P009	0	not used	
	1	shading RAM chip select	0: selected
	2	work RAM chip select	0: selected
	3	ASIC registration chip select	0: selected
	4	ROM chip select	0: selected
	5	not used	
	6	not used	
	7	not used	

15.3.4 <FEEDER>

0005-1035

T-15-25

Address	bit	Indication	Remarks
P001	0	read sensor	0: paper present
	1	registration sensor	1: paper present
	2	delivery reversal sensor	0: paper present
	3	ADF open/closed sensor	0: ADF open
	4	not used	
	5	not used	
	6	not used	
	7	not used	
P002	0	delivery reversal motor current setting 1	
	1	delivery reversal motor current setting 2	
	2	release motor current setting 1	
	3	release motor current setting 2	
	4	stamp solenoid drive	1: ON
	5	clutch drive	1: ON
	6	original detection LED	1: ON
	7	fan motor drive	1: ON
P003	0	pickup motor current setting CUT	
	1	read motor current setting CUT	
	2	shift motor current setting	
	3	read motor mode setting	
	4	read motor current setting 1	
	5	read motor current setting 2	
	6	pickup motor current setting 1	
	7	pickup motor current setting 2	

Address	bit	Indication	Remarks
P004	0	feeder cover open/closed sensor	0: feeder cover open
	1	not used	
	2	not used	
	3	not used	
	4	not used	
	5	not used	
	6	not used	
	7	stamp	0: stamp present
P005	0	not used	
	1	release HP sensor	1: released
	2	delivery reversal sensor	0: paper present
	3	post-separation sensor	0: paper present
	4	LGL sensor	1: paper present
	5	A4R/LTRR identification sensor	1: AB
	6	not used	
	7	original placement sensor	0: paper present
P006	0 to 7	for R&D	
P007	0 to 7	for R&D	
P008	0 to 7	for R&D	
P009	0 to 7	for R&D	
P010	0 to 7	for R&D	
P011	0 to 7	for R&D	

15.3.5 <SORTER>

0005-1036

T-15-26

Address	Controller	Bit	Indication	Remarks
P001	STACKER	0	inlet feed motor A	
		1	inlet feed motor B	
		2	inlet feed motor A	
		3	inlet feed motor B	
		4	inlet feed motor switch 0	0: ON
		5	inlet feed motor switch 1	0: ON
		6	inlet feed/stack delivery motor standby signal	1: ON
		7	common solenoid ON signal	0: ON
P002	STACKER	0	punch feed motor A	
		1	punch feed motor A	
		2	punch feed motor B	
		3	punch feed motor B	
		4	punch feed motor current switch 0	1: ON
		5	punch feed motor current switch 1	1: ON
		6	tray 2 motor clock	
		7	tray 1 motor clock	
P003	STACKER	0	for R&D	
		1	for R&D	
		2	for R&D	
		3	for R&D	
		4	for R&D	
		5	for R&D	
		6	for R&D	
		7	for R&D	

Address	Controller	Bit	Indication	Remarks
P004	STACKER	0	saddle connection detention signal	0: ON
		1	not used	
		2	swing HP sensor	1: ON
		3	upper cover open/closed sensor	0: ON
		4	front cover open/closed sensor	0: ON
		5	front cover interlock sensor	1: ON
		6	gear change HP sensor	1: ON
		7	not used	
P005	STACKER	0	for R&D	
		1	for R&D	
		2	punch transmission request signal	0: ON
		3	saddle 13V ON signal	1: ON
		4	not used	
		5	not used	
		6	not used	
		7	not used	
P006	STACKER	0	punch connection detection	0: ON
		1	not used	
		2	not used	
		3	punch motor standby	1: ON
		4	inlet sensor (IRQ0)	1: ON
		5	paper trailing edge sensor (IRQ1)	1: ON
		6	punch communication input (IRQ2)	0: ON
		7	not used	
P007	STACKER	0	tray approach sensor	0: ON
		1	tray 2 area sensor 1	0: ON
		2	tray 2 area sensor 2	0: ON
		3	tray 2 paper sensor 3	0: ON
		4	tray 2 paper sensor	1: ON
		5	tray paper surface sensor	1: ON
		6	inlet motor clock input	
		7	stack edging clock input	

Address	Controller	Bit	Indication	Remarks
P008	STACKER	0	tray 3 paper sensor	1: ON
		1	tray 3 connection detection	0: ON
		2	upper paper surface sensor	1: ON
		3	tray 1 interlock sensor	1: ON
		4	tray 1 area sensor 1	0: ON
		5	tray 1 area sensor 2	0: ON
		6	tray 1 area sensor 3	0: ON
		7	tray 1 paper sensor	1: ON
P009	STACKER	0	tray 1 shift motor CW	0: ON
		1	tray 1 shift motor enable	1: ON
		2	tray 1 shift motor power supply switch 0	0: ON
		3	tray 1 shift motor power supply switch 1	0: ON
		4	tray 2 shift motor CW	0: ON
		5	tray 2 shift motor enable	1: ON
		6	tray 2 shift motor power supply switch 0	0: ON
		7	tray 2 shift motor power supply switch 1	0: ON
P010	STACKER	0	not used	
		1	swing shift motor power supply switch 0	0: ON
		2	swing shift motor phase A pulse output	
		3	swing motor phase B pulse output	
		4	not used	
		5	not used	
		6	not used	
		7	not used	
P011	STACKER	0	inlet roller shift solenoid	1: ON
		1	for R&D	
		2	for R&D	
		3	buffer roller shift solenoid	1: ON
		4	feed path sensor	1: ON
		5	not used	
		6	not used	
		7	not used	

Address	Controller	Bit	Indication	Remarks
P012	STACKER	0	gear change phase A	
		1	gear change phase B	
		2	gear change motor current switch 0	0: ON
		3	gear change motor current switch 1	0: ON
		4	not used	
		5	for R&D	
		6	for R&D	
		7	for R&D	
P013	STACKER	0	for R&D	
		1	front alignment HP sensor	1: ON
		2	front alignment HP sensor	1: ON
		3	handling tray paper sensor	1: ON
		4	trailing edge assist HP sensor	1: ON
		5	not used	
		6	not used	
		7	not used	
P014	STACKER	0	rear alignment motor phase A	
		2	rear alignment motor phase B	
		3	rear alignment motor current switch 0	0: ON
		4	not used	
		5	not used	
		6	not used	
		7	not used	
		P015	STACKER	0
1	front alignment phase B			
2	front alignment motor current swing 0			0: ON
3	not used			
4	not used			
5	not used			
6	not used			
7	not used			

T-15-27

Address	Controller	Bit	Indication	Remarks
P016	STACKER	0	not used	
		1	for R&D	
		2	for R&D	
		3	for R&D	
		4	for R&D	
		5	CIS power supply ON signal	1: ON
		6	for R&D	
		7	size sensor drive signal	1: ON
P017	STACKER	0	not used	
		1	24V power supply monitor signal	0: normal
		2	scanner motor drive signal	1: forward 0: reverse
		3	for R&D	
		4	for R&D	
		5	13V power supply monitor signal	0: normal
		6	not used	
		7	for R&D	
P018	STACKER	0	for R&D	
		1	for R&D	
		2	for R&D	
		3	for R&D	
		4	LED control signal	1: ON
		5	for R&D	
		6	for R&D	
		7	for R&D	
P019	STACKER	0	not used	
		1	not used	
		2	original size detention 2	0: original present
		3	not used	
		4	not used	
		5	for R&D	
		6	for R&D	
		7	for R&D	

Address	Controller	Bit	Indication	Remarks
P020	STACKER	0-7	for R&D	
			not used	
			not used	
			not used	
			not used	
			not used	
			not used	
P021	STACKER	0	not used	
		1	for R&D	
		2	for R&D	
		3	for R&D	
		4	ADF sensor interrupt input	0: ON
		5	copyboard cover open/closed sensor interrupt input 0	1: cover open
		6	HP sensor interrupt input	1: HP
	7	copyboard open/closed sensor interrupt input 1	1: cover open	
P022	STACKER	0	for R&D	
		1	for R&D	
		2	for R&D	
		3	for R&D	
		4	scanner motor driver power save	0: ON
		5	ADF pickup motor clock interrupt input	0/1, alternating
		6	ADF pickup motor clock interrupt input	0/1, alternating
	7	not used		
P023	STACKER	0	lamp ON signal	1: ON
		1	CIS drive ON signal	1: ON
		2	for R&D	
		3	for R&D	
		4	for R&D	
		5	for R&D	
		6	for R&D	
	7	for R&D		

Address	Controller	Bit	Indication	Remarks
P024	SADDLE	0	for R&D	
		1	not used	
		2	not used	
		3	not used	
		4	not used	
		5	not used	
		6	not used	
		7	not used	
P025	SADDLE	0	not used	
		1	not used	
		2	not used	
		3	not used	
		4	not used	
		5	not used	
		6	not used	
		7	not used	
P026	SADDLE	0	not used	
		1	not used	
		2	not used	
		3	not used	
		4	not used	
		5	not used	
		6	not used	
		7	not used	
P027	SADDLE	0	not used	
		1	not used	
		2	not used	
		3	not used	
		4	not used	
		5	not used	
		6	not used	
		7	not used	

Address	Controller	Bit	Indication	Remarks
P028	SADDLE	0	not used	
		1	not used	
		2	not used	
		3	not used	
		4	not used	
		5	not used	
		6	not used	
		7	not used	
P029	SADDLE	0	not used	
		2	not used	
		3	not used	
		4	not used	
		5	not used	
		6	not used	
		7	not used	
		P030	SADDLE	0
1	not used			
2	not used			
3	not used			
4	not used			
5	not used			
6	not used			
7	not used			

T-15-28

Address	Controller	Bit	Indication	Remarks
P031	SADDLE	0	saddle tray paper sensor	0: ON
		1	paper positioning area paper sensor	0: ON
		2	crescent roller HP sensor	0: ON
		3	saddle delivery path sensor	0: ON
		4	saddle path (upstream) sensor	1: ON
		5	saddle path (middle) sensor	1: ON
		6	saddle path (downstream) sensor	1: ON
		7	saddle path sensor	1: ON

Address	Controller	Bit	Indication	Remarks
P032	SADDLE	0	butting motor enable signal	1: ON
		1	butting motor normal direction signal	1: ON
		2	butting motor reverse direction signal	1: ON
		3	folding roller HP sensor	1: ON
		4	front door open sensor	0: ON
		5	delivery over open detention (photo sensor)	0: ON
		6	saddle alignment HP sensor	0: ON
		7	delivery cover open 24 V down detection	1: ON
P033	SADDLE	0	inlet flapper solenoid	1: ON
		1	saddle path switch flapper 1	1: ON
		2	saddle path switch flapper 2	1: ON
		3	intermediate feed solenoid	1: ON
		4		
		5		
		6	inlet path sensor	1: ON
		7		
P034	SADDLE	0	rear staple motor normal direction	0: ON
		1	rear staple motor reverse direction	0: ON
		2	front staple motor normal direction	0: ON
		3		
		4	folding roller HP connector open detection	0: ON
		5		
		6		
		7		
P035	SADDLE	0	DIPSW_1	0: ON
		1	DIPSW_2	0: ON
		2	DIPSW_3	0: ON
		3	DIPSW_4	0: ON
		4	DIPSW_5	0: ON
		5	DIPSW_6	0: ON
		6	DIPSW_7	0: ON
		7	DIPSW_8	0: ON

Address	Controller	Bit	Indication	Remarks
P036	SADDLE	0		
		1		
		2	push switch 1	0: ON
		3	5V detection signal	0: ON
		4	24V detection signal	0: ON
		5		
		6		
		7		
P037	SADDLE	0	POWER_ON	1: ON
		1	LED1	1: ON
		2	LED2	1: ON
		3	LED3	1: ON
		4	LEDY	0: ON
		5	TRAY_MTR_CUR	0: ON
		6	TRAY_MTR_B	0: ON
		7	TRAY_MTR_A	0: ON
P038	PUNCHER	0	DIPSW1	0: ON
		1	DIPSW2	0: ON
		2	DIPSW3	0: ON
		3	-	
		4	PCH-OUT	
		5	trailing edge sensor	1: ON
		6	punch encoder clock	
		7	punch HP sensor	0: ON
P039	PUNCHER	0	(for R&D)	
		1	(for R&D)	
		2	(for R&D)	
		3	-	
		4	-	
		5	-	
		6	-	
		7	-	

Address	Controller	Bit	Indication	Remarks
P040	PUNCHER	0	(for R&D)	
		1	(for R&D)	
		2	(for R&D)	
		3	(for R&D)	
		4	horizontal registration HP sensor	1: ON
		5	horizontal registration motor STB	0: ON
		6	punch motor CCW	0: ON
		7	punch motor CW	0: ON
P041	PUNCHER	0	-	
		1	-	
		2	-	
		3	-	
		4	DIPSW4	0: ON
		5	horizontal registration motor CUR	0: ON
		6	(for R&D)	
		7	-	
P042	PUNCHER	0	LED1	0: ON
		1	(for R&D)	
		2	(for R&D)	
		3	LED2	0: ON
		4	front cover sensor	0: ON
		5	(for R&D)	
		6	PUSHSW2	0: ON
		7	PUSHSW1	0: ON
P043	PUNCHER	0	-	
		1	-	
		2	-	
		3	-	
		4	-	
		5	upper cover sensor	0: ON
		6	-	
		7	-	

15.3.6 <MN-CON>

0005-1164

T-15-29

Address	bit	Indication	Remarks
P001	0	PWR1	1: normal use
	1	PWR2	1: normal use
	2	Watchdog Timer Clear	from 1 to 0 every 50 msec
	3	Clock Enable	1: normal use
	4	cooling fan ON	cooling fan control
	5	LED1008	
	6	Watchdog Enable	
	7	DDI DOWNLOAD	
P002	0 to 7	not used	
	8	open I/F control	
	9	open I/F setting	
	10	open I/F setting	
	11	for R&D	
	12	for R&D	
	3 to 15	not used	
P003	0	IP TEST	0:normal 1: Test
	1	Sync_Mask	0: Mask 1: normal
	2	SRAM Mask	0: permit; 1: prohibit
	3	SUB Clock stop	0: stop 1: run
	4	PCI(PDL,HDD) soft reset	0: Reset 1: Normal
	5	serial EEPROM CS	
	6	serial EEPROM SCK	
	7	serial EEPROM DIN	0: IPC 1: Gchip Serial
	8	coin robot serial select	0: Normal 1: Livewake
	9	DDI live wake	0: off 1: on
	10	pickup count (for coin robot assist)	
	11	delivery count (for coin robot assist)	
	12	LCD backlight control	1: ON
	13	jail SROM access	0: access permitted; 1: access prohibited
	14	parallel EEPROM write protect	0: Write 1: Protect
15	fax SSB forced reset	0: Reset 1: Normal	

P004	0	SRAM board detection	0: yes; 1: no
	1	parallel EEPROM R/B#	0: Busy; 1: Ready
	2	not used	
	3	operation enable (key SCREW)	0: permitted; 1: prohibited
	4	operation enable (CC-W)	0: permitted; 1: prohibited
	5	operation enable (coin robot)	0: permitted; 1: prohibited
	6	serial EEPROM DO	
	7	not used	
P005	0 to 7	not used	
P006	0 to 7	for R&D	
	8	open I/F control (PRDY signal)	
	9	open I/F signal	Model 0
	10	open I/F setting	Model 1
	11	not used	
	12	not used	
	13	not used	
	14	open I/F board detection	0: present; 1: absent
	15	open I/F board control (CARD) 0: ready; 1: not ready	
P007	1 to 15	for R&D	
	16	FAX OPTION	0: connected; 1: not connected
	17 to 23	for R&D	
P008	0 to 2	not used	
	3	PSCNST	printer drive signal
	4	Printer Power Ready	0: Ready; 1: not ready
	5 to 7	not used	
	8	SPRTST signal	printer start-up signal
	9	not used	
P009	0 to 2	for R&D	
	3	PPRTST signal	
	4	printer power-on	printer start-up signal
	5	not used	
	6 to 8	for R&D	
	9	SSCNST signal	
	10	Scanner Power ON	scanner drive signal
	11	Controller Power Ready	0: Ready; 1: not ready

15.4 ADJUST (Adjustment Mode)

15.4.1 COPIER

15.4.1.1 ADJ-XY

15.4.1.1.1 Overview

0002-8400

Adjusting the Image Read Start Point

15.4.1.1.2 <ADJ-X>

0005-6682

T-15-30

Use it to adjust the scanner image leading edge position (image read start position in sub scanning direction).

Method of adjustment

-if the non-image width is larger than the indicated value, decrease the setting.
-if an area outside the original is copied, increase the setting.
-an increase by 1 of the setting will move the image read start position by 0.1 mm in the direction of the training edge (i.e., the image read area moves toward the trailing edge).
-if you have initialized the RAM on the reader controller PCB or replaced the reader controller PCB, enter the value indicated on the service label.

Range of adjustment

1 to 100
[at time of shipment: factory measurement/after RAM initialization: 20]

Attention1

If you have changed the setting, be sure to record the new setting on the service label.


15.4.1.1.3 <ADJ-Y>

0005-6796

T-15-31

Use it to adjust the CCD read start cell position (image read start position in main scanning direction).

Method of adjustment	<p>-if the non-image width is larger than the indicated value, decrease the setting.</p> <p>-if an area outside the original is copied, increase the setting.</p> <p>-an increase by 1 of the setting will move the image read start position by 0.1 mm in the direction of the leading edge (i.e., the image read area will move toward the leading edge).</p> <p>-if you have initialized the RAM on the reader controller PCB or replaced the reader controller PCB, enter the value indicated on the service label.</p>
Range of adjustment	47 to 131 [at time of shipment: factory measurement/after RAM initialization: 90]
Attention1	If you have changed the setting, be sure to record the new setting on the service label.

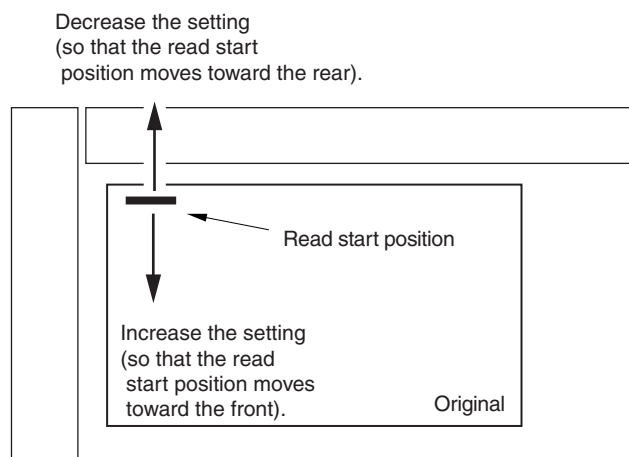

F-15-16

15.4.1.1.4 <ADJ-S>

0005-6793

T-15-32

Use it to enter an adjustment value for the point of measurement for scanner shading.

Method of adjustment	<p>-a decrease by 1 of the setting will move the point of measurement for shading by 0.1 mm in the direction of the leading edge.</p> <p>-if you have initialized the RAM on the reader controller PCB or replaced the reader controller PCB, enter the value indicated on the service label.</p>
Range of adjustment	30 to 50 [at time of shipment: factory measurement/after RAM initialization: 50]
Attention	If you have changed the setting, be sure to record the new setting on the service label.

15.4.1.1.5 <ADJ-Y-DF>

0005-6689

T-15-33

Use it to adjust the main scanning points for DF SRAM reading mode.

Method of adjustment

-an increase by '1' will move the image read start position to the front by 0.1 mm.

-if you have initialized the RAM on the reader controller PCB or replaced the reader controller PCB, enter the value indicated on the service label.

Range of adjustment

21 to 106
at time of shipment: factory adjustment value
upon RAM initialization: 53

Attention

If you have changed the setting, be sure to record the new setting on the service label.

15.4.1.1.6 <STRD-POS>

0005-6692

T-15-34

Use it to adjust the CCD read position for DF stream reading mode.

Method of adjustment

-an increase by '1' will move the image read position to the left by 1 mm.

-if you have initialized the RAM on the reader controller PCB or replaced the reader controller PCB, enter the value indicated on the service label.

Range of adjustment

1 to 200
at time of shipment: factory adjustment value
upon RAM initialization: 110

Attention

If you have changed the setting, be sure to record the new setting on the service label.

15.4.1.2 CCD

15.4.1.2.1 Overview

0002-8425

Making CCD-Related Adjustments


15.4.1.2.2 <W-PLT-X/Y/Z>

0005-7619

T-15-35

Use it to enter the white level data indicated on the standard while plate.

Method of adjustment	-if you have initialized the RAM on the reader controller or if you have replaced the reader controller PCB, enter the value indicated on the service label. -if you have replaced the copyboard glass, enter the value indicated on the copyboard glass. (See the figure below.)
Range of adjustment	1 to 9999 [at time of shipment: factory measurement/after RAM initialization: W-PLT-X=8271 W-PLT-Y=8735 W-PLT-Z=9418

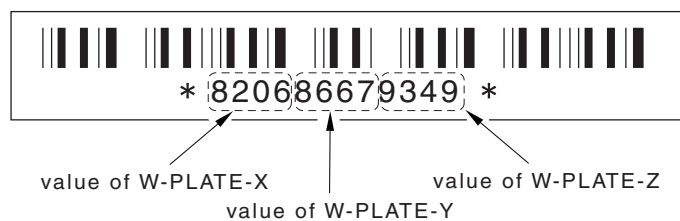

F-15-17

15.4.1.2.3 CCDU-RG

0002-7423

T-15-36

Use it to correct color displacement in sub scanning direction between R and G associated with the CCD unit.

Method of adjustment	-if you have initialized the RAM on the reader controller PCB or replaced the reader controller PCB, enter the value indicated on the service label.
Range of adjustment	-9 to 9 at time of shipment: factory measurement value upon RAM initialization: 0
Attention	If you have changed the setting, be sure to record the new setting on the service label.

15.4.1.2.4 CCDU-GB

0005-6801

T-15-37

correction value for displacement of color in sub scanning direction for GB associated with the CCD unit

Method of adjustment -if you have initialized the RAM on the reader controller PCB or replaced the reader controller PCB, enter the value indicated on the service label.

Range of adjustment -9 to 9
at time of shipment: factory measurement value
upon RAM initialization: 0

15.4.1.2.5 FCCDU-RG

0005-6803

T-15-38

Use it to correct color displacement in sub scanning direction between R and G associated with the CCD unit at time of shipment.

Method of adjustment -if you have initialized the RAM on the reader controller PCB or replaced the reader controller PCB, enter the value indicated on the service label.

Range of adjustment -9 to 9
at time of shipment: factory measurement value
upon RAM initialization: 0

Attention If you have changed the setting, be sure to record the new setting on the service label.

15.4.1.2.6 FCCDU-GB

0005-6804

T-15-39

Use it to correct color displacement in sub scanning direction between GB associated with the CCD unit at time of shipment.

Method of adjustment -if you have initialized the RAM on the reader controller or replaced the reader controller PCB, enter the value indicated on the service label.

Range of adjustment -9 to 9
at time of shipment: factory measurement value
upon RAM initialization: 0

Attention If you have changed the setting, be sure to record the new setting on the service label.

15.4.1.2.7 <50-RG>

0002-7433

T-15-40

Use it to indicate the degree of offset (color displacement; RG) for book mode at 50% reading.

Method of adjustment	-if you have initialized the RAM on the rear controller or replaced the reader controller PCB, enter the value indicated on the service label.
Range of adjustment	-256 to 256 at time of shipment: factory measurement value upon initialization: 0
Attention	If you have changed the setting, be sure to record the new setting on the service label.

15.4.1.2.8 <50-GB>

0002-7437

T-15-41

Use it to indicate the degree of offset (color displacement; GB) for book mode at 50% reading.

Method of adjustment	-if you have initialized the RAM on the reader controller PCB or replaced the reader controller PCB, enter the value indicated on the service label
Range of adjustment	-256 to 256 at time of shipment: factory measurement value upon RAM initialization: 0
Attention	If you have changed the setting, be sure to record the new setting on the service label.

15.4.1.2.9 <100-RG>

0002-7442

T-15-42

Use it to indicate the degree of offset (color displacement; RG) for book mode at 100% reading.

Method of adjustment	-if you have initialized the RAM on the reader controller PCB or replaced the reader controller, enter the value indicated on the service label.
Range of adjustment	-256 to 256 at time of shipment: factory measurement value upon RAM initialization: 0
Attention	If you have changed the setting, be sure to record the new setting on the service label.

15.4.1.2.10 <100-GB>

0002-7439

T-15-43

Use it to indicate the degree of offset (color displacement; GB) for book mode at 100% reading.

Method of adjustment	-if you have replaced the RAM on the reader controller PCB or replaced the reader controller PCB, enter the value indicated on the service label.
Range of adjustment	-256 to 256 at time of shipment: factory measurement value upon RAM initialization: 0
Attention	If you have changed the setting, be sure to record the new setting on the service label.

15.4.1.2.11 <50DF-RG>

0002-7445

T-15-44

Use it to indicate the degree of offset (color displacement RG) for ADF mode at 50% reading.

Method of adjustment	-if you have initialized the RAM on the reader controller PCB or replaced the reader controller PCB, enter the value indicated on the service label.
Range of adjustment	-256 to 256 at time of shipment: factory measurement value upon RAM initialization: 0
Attention	If you have changed the setting, be sure to record the new setting on the service label.

15.4.1.2.12 <50DF-GB>

0002-7448

T-15-45

Use it to indicate the degree of offset (color displacement; GB) for ADF mode at 50% reading.

Method of adjustment	-if you have initialized the RAM on the reader controller PCB or replaced the reader controller PCB, enter the value indicated on the service label.
Range of adjustment	-256 to 256 at time of shipment: factory measurement value upon RAM initiation: 0
Attention	If you have initialized the setting, be sure to record the new setting on the service label.

15.4.1.2.13 <100DF-RG>

0002-7450

T-15-46

Use it to indicate the degree of offset for color displacement (RG) when ADF mode is selected and the reading is at 100% magnification.

Making Adjustments	If you have initialized the RAM on the reader controller PCB or replaced the reader controller PCB, enter the value indicated on the service label.
Range of Adjustments	-256 to 256 at time of shipment/upon RAM Initialization: 0
Note	If you changed the setting of this service mode item, be sure to record the new setting on the service label.

15.4.1.2.14 <100DF-GB>

0002-7453

T-15-47

Use it to indicate the degree of offset (color displacement; GB) for ADF mode at 100% reading.

Method of adjustment	-if you have initialized the RAM on the reader controller PCB or replaced the reader controller PCB, enter the value indicated on the service label.
Range of adjustment	-256 to 256 at time of shipment: factory measurement value upon RAM initialization: 0
Attention	If you have changed the setting, be sure to record the new setting on the service label.

15.4.1.2.15 <DFTAR-R>

0005-6812

T-15-48

Use it to enter the shading target (red) for the DF (normal original read position).

Method of adjustment	-Use this mode item to enter the factory measurement if an image fault occurs (e.g., caused by soiling of the chart) after executing COPIER>FUNCTION>CCD>DF-WLV1/DF-WLV2. -if you have initialized the RAM on the reader controller PCB or replaced the reader controller PCB, enter the value indicated on the service label.
Range of adjustment	1 to 2047 [at time of shipment: factory measurement/after RAM initialization: 1159]
Attention	If you have changed the setting, be sure to record the new setting on the service label.

15.4.1.2.16 <DFTAR-G>

0005-6815

T-15-49

Use it to enter the shading target (GREEN) for the DF (normal original read position).

Method of adjustment	-Use this mode item to enter the factory measurement if an image fault occurs (e.g., caused by soiling of the chart) after executing COPIER>FUNCTION>CCD>DF-WLVL1/DF-WLV2. -if you have initialized the RAM on the reader controller PCB or replaced the reader controller PCB, enter the value indicated on the service label.
Range of adjustment	1 to 2047 [at time of shipment: factory measurement/after RAM initialization: 1189]
Attention	If you have changed the setting, be sure to record the new setting on the service label.

15.4.1.2.17 <DFTAR-B>

0005-6819

T-15-50

Use it to enter the shading target (BLUE) for the DF (normal original read position).

Method of adjustment	-Use this mode item to enter the factory measurement if an image fault occurs (e.g., caused by soiling of the chart) after executing COPIER>FUNCTION>CCD>DF-WLVL1/DF-WLV2. -if you have initialized the RAM on the reader controller PCB or replaced the reader controller PCB, enter the value indicated on the service label.
Range of adjustment	1 to 2047 [at time of shipment: factory measurement/after RAM initialization: 1209]
Attention	If you have changed the setting, be sure to record the new setting on the service label.

15.4.1.3 LASER

15.4.1.3.1 Overview

0002-8430

Making Laser-Related Adjustments

15.4.1.3.2 PVE-OFST

0005-6702

T-15-51

Use it to adjust the degree of offset (point of laser illumination) from the center of the laser beam.

Range of adjustment

1600 to 600

**at time of shipment: factory adjustment value
upon RAM initialization: 0**

15.4.1.3.3 POWER

0002-7455

T-15-52

Use it to adjust the laser output (max).

Method of adjustment

-if you have initialized the RAM on the DC controller PCB or replaced the DC controller PCB, enter the value indicated on the service label.

Range of adjustment

0 to 255

**at time of shipment: factory measurement value
upon RAM initialization: 0**

Reference

This item is for factory adjustment, and must NOT be used in the field.

15.4.1.4 IMG-REG

15.4.1.4.1 Overview

0002-8433

Adjusting the Image Position

15.4.1.4.2 <REG-V-Y>

0005-6707

T-15-53

	Use it to make rough adjustment of the write start position in sub scanning direction for Y.
Method of adjustment	-a higher setting will move the pattern toward the trailing edge. -if you have initialized the RAM on the DC controller PC or replaced the DC controller PCB, enter the value indicated on the service label.
Range of adjustment	-10 to 10 (unit: pixel) at time of shipment: factory measurement value upon RAM initialization: 0
Reference	This item is for use at the factory only, and must NOT be used in the field.

15.4.1.4.3 <REG-V-K>

0005-7967

T-15-54

	Use it to make rough adjustment of the write start position in sub scanning direction for K.
Method of adjustment	-a higher setting will move the pattern toward the trailing edge. -if you have initialized the RAM on the DC controller PCB or replaced the DC controller, enter the value indicated on the service label.
Range of adjustment	-10 to 10 (unit: pixel) at time of shipment: factory measurement value upon RAM installation: 0
Reference	This item is for use at the factory only, and must NOT be used in the field.

15.4.1.4.4 <REG2-V-Y>

0005-6712

T-15-55

	Use it to make rough adjustment of the write start position in sub scanning direction for Y (2nd side in 2-sheet placement).
Method of adjustment	-a higher setting will move the pattern toward the trailing edge. -if you have initialized the RAM on the DC controller PCB or replaced the DC controller PCB, enter the value indicated on the service label.
Range of adjustment	-10 to 10 (unit: pixel) at time of shipment: factory measurement value upon RAM initialization: 0
Reference	This item is for use at the factory only, and must NOT be used in the field.

15.4.1.4.5 <REG2-V-K>

0005-7968

T-15-56

	Use it to make rough adjustment of the write start position in sub scanning direction for K (2nd side in 2-sheet placement).
Method of adjustment	-a higher setting will move the pattern toward the trailing edge. -if you have initialized the RAM on the DC controller PCB or replaced the DC controller PCB, enter the value indicated on the service label.
Range of adjustment	-10 to 10 (unit: pixel) at time of shipment: factory measurement value upon RAM initialization: 0
Reference	This item is for use at the factory only, and must NOT be used in the field.

15.4.1.4.6 <REG-V-M>

0005-6714

T-15-57

Use it to make rough adjustment of the write start position in main scanning direction for M.

Method of adjustment -a higher setting will move the pattern toward the trailing edge.
-if you have initialized the RAM on the DC controller PCB or replaced the DC controller PCB, enter the value indicated on the service label.

**Range of adjustment -10 to 10 (unit: pixel)
at time of shipment: factory measurement value
upon RAM initialization: 0**

Reference This item is for use at the factory only, and must NOT be used in the field.

15.4.1.4.7 <REG2-V-M>

0005-6715

T-15-58

Use it to make rough adjustment of the write start position in sub scanning direction for M (2nd side in 2-sheet placement).

Method of adjustment -a higher setting will move the pattern toward the trailing edge.
-if you have initialized the RAM on the DC controller PCB or replaced the DC controller, enter the value indicated on the service label.

**Range of adjustment -10 to 10 (unit: pixel)
at time of shipment: factory measurement/RAM initialization: 0**

Reference This item is for use at the factory only, and must NOT be used in the field.

15.4.1.5 DENS

15.4.1.5.1 Overview

0002-8442

Making Developer Density-Related Adjustments

15.4.1.5.2 <SGNL-Y>

0002-8029

T-15-59

Use it to enter the toner density initial value (Y).

Method of
adjustment

-if you have initialized the RAM on the DC controller PCB or replaced the DC controller PCB, enter the value indicated on the service label.

**Range of
adjustment**

200 to 800
at time of shipment/upon RAM initialization: 512

15.4.1.5.3 <SGNL-M>

0005-6828

T-15-60

Use it to enter the toner density signal initial value (M).

Method of
adjustment

-if you have initialized the RAM on the DC controller PCB or replaced the DC controller PCB, enter the value indicated on the service label.

**Range of
adjustment**

200 to 800
at time of shipment/upon RAM initialization: 512

15.4.1.5.4 <SGNL-C>

0005-6829

T-15-61

Use it to enter the toner density signal initial value (C).

Method of
adjustment

-if you have initialized the RAM on the DC controller PCB or have replaced the DC controller PCB, enter the value indicated on the service label.

**Range of
adjustment**

200 to 800
at time of shipment/upon RAM installation: 512

15.4.1.5.5 <REF-Y>

0005-6833

T-15-62

Use it to enter the toner density reference signal (Y).

Method of
adjustment

-if you have initialized the RAM on the DC controller PCB or replaced the DC controller PCB, enter the value indicated on the service label.

**Range of
adjustment**

462 to 562 (at time of shipment/upon RAM initialization: 512)

15.4.1.5.6 <REF-M>

0005-6834

T-15-63

Use to enter the toner density signal reference value (M).

Method of
adjustment

If you have initialized the RAM on the DC controller PCB or replaced the DC controller PCB, enter the value indicated on the service label.

**Range of
adjustment**

462 to 562 (at time of shipment/upon RAM initialization: 512)

15.4.1.5.7 <REF-C>

0002-8297

T-15-64

Use it to enter the toner density signal reference value (C).

Method of
adjustment

-if you initialized the RAM on the DC controller PCB or replaced the DC controller PCB, enter the value indicated on the service label.

**Range of
adjustment**

462 to 562 (at time of shipment/upon RAM initialization: 512)

15.4.1.5.8 <PTOFST-Y>

0005-6836

T-15-65

Use it to enter the correction value of the Y laser output for ATR control.

Method of
adjustment

-if you have initialized the RAM on the DC controller PCB or replaced the DC controller PCB, enter the value indicated on the service label.

**Range of
adjustment**

-48 to 48 (at time of shipment/upon RAM initialization: 0)

15.4.1.5.9 <PTOFST-M>

0005-6838

T-15-66

Use it to enter the correction value of the M laser output for ATR control.

Method of
adjustment

-if you have initialized the RAM on the DC controller PCB or replaced the DC controller PCB, enter the value indicated on the service label.

**Range of
adjustment**

-48 to 48 (at time of shipment/upon RAM initialization: 0)

15.4.1.5.10 <PTOFST-C>

0002-8311

T-15-67

Use it to enter the correction value of the C laser output for ATR control.

Method of
adjustment

-if you have initialized the RAM on the DC controller or replaced the DC controller PCB, enter the value indicated on the service label.

**Range of
adjustment**

-48 to 48 (at time of shipment/upon RAM initialization: 0)

15.4.1.5.11 <P-SGNL-Y>

0005-6841

T-15-68

Use it to adjust the density of toner on the intermediate transfer belt for INIT execution (Y).

Method of
adjustment

-if you have initialized the RAM on the DC controller PCB or replaced the DC controller PCB, enter the value indicated on the service label.

**Range of
adjustment**

200 to 800 (at time of shipment/upon RAM initialization: 500)

15.4.1.5.12 <P-SGNL-M>

0005-6843

T-15-69

Use it to adjust the density of toner on the intermediate transfer belt for INIT execution (M).

Method of
adjustment

-if you have initialized the RAM on the DC controller PCB or replaced the DC controller PCB, enter the value indicated on the service label.

**Range of
adjustment**

200 to 800 (at time of shipment/upon RAM initialization: 500)

15.4.1.5.13 <P-SGNL-C>

0002-8325

T-15-70

Use it to adjust the density of toner on the intermediate transfer belt for INIT execution (C).

Method of adjustment

-if you have initialized the RAM on the DC controller PCB or replaced the DC controller PCB, enter the value indicated on the service label.

Range of adjustment

200 to 800 (at time of shipment/upon RAM initialization: 500)

15.4.1.6 BLANK

15.4.1.6.1 Overview

0002-8443

Adjusting the Non-Image Width

15.4.1.6.2 <BLANK-T>

0005-6861

T-15-71

Use it to enter the adjustment value for the non-image width (leading edge)

Method of adjustment

-Enter the value indicated on the service label if you have initialized the RAM on the main controller PCB or if you have replaced the SRAM PCB.

Range of adjustment

0 to 1000
[at time of shipment: factory measurement /after RAM initialization: +94]

15.4.1.6.3 <BLANK-L>

0001-0204

T-15-72

Use it to enter the adjustment value for the non-image width (left edge).

Method of adjustment

-Enter the value indicated on the service label if you have initialized the RAM on the main controller PCB or if you have replaced the SRAM PCB.

Range of adjustment

0 to 1000
[at time of shipment: factory measurement /after RAM initialization: +59]

15.4.1.6.4 <BLANK-R>

0001-0205

T-15-73

Enter the adjustment value for the non-image width (right edge).

Method of adjustment -Enter the value indicated on the service label if you have initialized the RAM on the main controller PCB or if you have replaced the SRAM PCB.

Range of adjustment **0 to 1000**
[at time of shipment: factory measurement/after RAM initialization: +59]

15.4.1.6.5 <BLANK-B>

0005-6864

T-15-74

Use it to enter the adjustment value for the non-image width (trailing edge).

Method of adjustment -Enter the value indicated on the service label if you have initialized the RAM on the main controller PCB or if you have replaced the SRAM PCB.

Range of adjustment 0 to 1000
[at time of shipment: factory measurement /after RAM initialization: +47]

15.4.1.6.6 <BLANK-C1>

0005-6734

T-15-75

Use it to set the leading edge margin for the right deck.

Method of adjustment The value herein will be used to affect the value of BLANK-T.

Range of adjustment **-35 to 35 (unit: 0.1 mm)**
at time of shipment: factory measurement /upon RAM initialization: 0

15.4.1.6.7 <BLANK-C2>

0005-7969

T-15-76

Use it to set the leading edge margin for the right deck.

Method of adjustment The value herein will be used to affect the value of BLANK-T.

Range of adjustment **-35 to 35 (unit: 0.1 mm)**
at time of shipment: factory measurement value upon RAM initialization: 0

15.4.1.6.8 <BLANK-C3>

0005-7970

T-15-77

use it to set the leading margin for the right deck.

Method of adjustment

The value herein will be used to affect the value of BLANK-T.

Range of adjustment

**-35 to 35 (unit: 0.1 mm)
at time of shipment: factory measurement value
upon RAM initialization: 0**

15.4.1.6.9 <BLANK-C4>

0005-7971

T-15-78

Use it to set the leading edge margin for the right deck.

Method of adjustment

The value herein will be used to affect the value of BLANK-T.

Range of adjustment

**-35 to 35 (unit: 0.1 mm)
at time of shipment: factory measurement value
upon RAM initialization: 0**

15.4.1.6.10 <BLANK-PD>

0005-6736

T-15-79

Use it to set the leading edge margin for the optional deck.

Method of adjustment

The value herein will be used to affect the value of BLANK-T.

Range of adjustment

**-35 to 35 (unit: 0.1 mm)
at time of shipment: factory measurement value
upon RAM initialization: 0**

15.4.1.7 V-CONT

15.4.1.7.1 Overview

0005-7060

Adjusting the Photosensitive Drum Surface Potential Contrast

15.4.1.7.2 <EPOTOFST>

0005-6738

T-15-80

Set it to adjust the potential offset value.

Range of adjustment

**-300 to 300 (unit: 0.1 V)
at time of shipment/upon RAM initialization: 0**

15.4.1.8 PASCAL

15.4.1.8.1 Overview

0002-8445

Adjusting Auto Gradation Correction

15.4.1.8.2 <OFST-P-Y>

0001-0208

T-15-81

Use it to apply an offset value on the text print read signal (yellow) for PASCAL control executed at time of auto gradation correction (full correction).

Method of adjustment

-A higher value darkens the image after auto gradation correction (full correction).

Range of adjustment

**-128 to +128
[at time of shipment/after RAM initialization: 0]**

15.4.1.8.3 <OFST-P-M>

0001-1630

T-15-82

Use it to apply an offset value on the text print read signal (magenta) for PASCAL control executed at time of auto gradation correction (full correction).

Method of adjustment

-A higher value darkens the image after auto gradation correction (full correction).

Range of adjustment

**-128 to +128
[at time of shipment/after RAM initialization: 0]**

15.4.1.8.4 <OFST-P-C>

0001-1631

T-15-83

Use it to apply an offset value on the text print read signal (cyan) for PASCAL control executed at time of auto gradation correction (full correction).

Method of adjustment

-A higher value darkens the image after auto gradation correction (full correction).

Range of adjustment**-128 to +128****[at time of shipment/after RAM initialization: 0]**

15.4.1.8.5 <OFST-P-K>

0001-1633

T-15-84

Use it to apply an offset value on the test print read signal (black) for PASCAL control executed at time of auto gradation correction (full correction).

Method of adjustment

-A higher value darkens the image after auto gradation correction (full correction).

Range of adjustment**-128 to +128****[at time of shipment/after RAM initialization: 0]**

15.4.1.9 COLOR

15.4.1.9.1 Overview

0002-8446

Adjusting Color Balance

15.4.1.9.2 <ADJ-Y>

0001-1638

T-15-85

Use it to adjust the color balance used in user mode (yellow).

Method of adjustment

-a higher value darkens the image.
-a lower value lightens the image.

Range of adjustment**-8 to +8****[at time of shipment/after RAM initialization: 0]**

15.4.1.9.3 <ADJ-M>

0001-1649

T-15-86

Use it to adjust the color balance used in user mode (magenta).

Method of adjustment

-a higher value darkens the image.

-a lower value lightens the image.

Range of adjustment**-8 to +8****[at time of shipment/after RAM initialization: 0]**

15.4.1.9.4 <ADJ-C>

0001-1651

T-15-87

Use it to adjust the color balance used in user mode (cyan).

Method of adjustment

-a higher value darkens the image.

-a lower value lightens the image.

Range of adjustment**-8 to +8****[at time of shipment/after RAM initialization: 0]**

15.4.1.9.5 <ADJ-K>

0001-1654

T-15-88

Use it to adjust the color balance of the user (black).

Method of adjustment

-a higher value darkens the image.

-a lower value lightens the image.

Range of adjustment**-8 to +8****[at time of shipment/after RAM initialization: 0]**

15.4.1.9.6 <OFST-Y>

0001-1659

T-15-89

Use it to adjust the color balance and the light area density (yellow).

Method of adjustment

A lower value decreases fogging.

Range of adjustment**-32 to +32****[at time of shipment/after RAM initialization: 0]**

15.4.1.9.7 <OFST-M>

0001-1670

T-15-90

Use it to adjust the color balance and the light area density (magenta).

Method of adjustment

A lower value decreases fogging.

Range of adjustment

-32 to +32

[at time of shipment/after RAM initialization: 0]

15.4.1.9.8 <OFST-C>

0001-1671

T-15-91

Use it to adjust the color balance and the light area density (cyan).

Method of adjustment

A lower value decreases fogging.

Range of adjustment

-32 to +32

[at time of shipment/after RAM initialization: 0]

15.4.1.9.9 <OFST-K>

0001-1672

T-15-92

Use it to adjust the color balance and the light area density (black).

Method of adjustment

A lower value decreases fogging.

Range of adjustment

-32 to +32

[at time of shipment/after RAM initialization: 0]

15.4.1.10 HV-PRI

15.4.1.10.1 Overview

0002-8447

Making Adjustments for the Primary Charging Assembly High-Voltage Output According to Conditions

15.4.1.10.2 <PRIMARY>

0002-8377

T-15-93

Use it to adjust the primary charging current.

Range of adjustment

0 to 1400 (unit: μ A)
at time of shipment: factory adjustment value
upon RAM initialization: 1099

15.4.1.10.3 <GRID>

0002-8387

T-15-94

Use it to adjust the primary charging assembly grid bias.

Range of adjustment

0 to 752 (unit: V)
 at time of shipment: factory adjustment value
 upon RAM initialization: 752

15.4.1.11 HV-TR

15.4.1.11.1 Overview

0002-8454

Adjusting the Transfer Charging Assembly High-Voltage Output According to Conditions

15.4.1.11.2 <PRE-TR>

0002-8488

T-15-95

Use it to adjust the current for the pre-transfer charging assembly.

Range of adjustment

-200 to 200 (unit: 2.0 μ A)
at time of shipment: factory adjustment value
upon RAM initialization: 0

15.4.1.11.3 <1TR-GAIN>

0002-8500

T-15-96

Use it to adjust the gain for the primary transfer current measurement.

Method of adjustment -if you have initialized the RAM of the DC controller PCB or replaced the DC controller PCB, enter the value indicated on the service label.
-if you have replaced the high-voltage PCB, enter the value indicated on the label attached to the PCB.

Range of adjustment 0 to 1000
at time of shipment: factory adjustment value /upon RAM initialization: 492

Reference This item is for use at the factory only, and must NOT be used in the field.

15.4.1.11.4 <1TR-OFST>

0002-8502

T-15-97

Use it to adjust the offset value of the primary transfer current measurement.

Method of adjustment -if you have initialized the RAM on the DC controller PCB or replaced the DC controller PCB, enter the value indicated on the service label.
-if you have replaced the high-voltage PCB, enter the value indicated on the label attached to the PCB.

Range of adjustment -1000 to 0
at time of shipment: factory adjustment value
upon RAM initialization: -442

Reference This item is for use at the factory only, and must NOT be used in the field.

15.4.1.11.5 <1TR-CGAI>

0005-6887

T-15-98

Use it to correct the constant current for the primary transfer high-voltage PCB. (slope)

Method of adjustment -if you have initialized the RAM on the DC controller PCB or replaced the DC controller PCB, enter the value indicated on the service label.
-if you have replaced the high-voltage PCB, enter the value indicated on the label attached to the PCB.

Range of adjustment 0 to 200
at time of shipment: factory measurement /upon RAM initialization: 118

15.4.1.11.6 <1TR-COFS>

0005-6890

T-15-99

Use it to correct the constant current for the primary transfer high-voltage PCB. (intercept)

Method of adjustment -if you have initialized the RAM on the DC controller PCB or replaced the DC controller PCB, enter the value indicated on the service label.
-if you have replaced the high-voltage PCB, enter the value indicated on the label attached to the PCB.

Range of adjustment **-200 to 0 (unit: 0.1 yA)**
at time of shipment: factory measurement /upon RAM initialization: -102

15.4.1.11.7 <1TR-GAI2>

0005-6891

T-15-100

Use it to correct the constant voltage output for the transfer high-voltage PCB. 2 (slope)

Method of adjustment -if you have initialized the RAM on the DC controller PCB or replaced the DC controller PCB, enter the value indicated on the service label.
-if you have replaced the high-voltage PCB, enter the value indicated on the label.

Range of adjustment **0 to 1000**
at time of shipment: factory adjustment value
upon RAM initialization: 492

15.4.1.11.8 <1TR-OFS2>

0005-6892

T-15-101

Use it to correct the constant voltage output for the primary transfer high-voltage PCB 2. (intercept)

Method of adjustment -if you have initialized the RAM on the DC controller PCB or replaced the DC controller PCB, enter the value indicated on the service label.
-if you have replaced the high-voltage PCB, enter the value indicated on the label attached on the PCB.

Range of adjustment **-100 to 0 (unit: V)**
at time of shipment: factory adjustment value
upon RAM initialization: -442

15.4.1.12 FEED-ADJ

15.4.1.12.1 Overview

0002-8458

Making Feeding System-Related Adjustments

15.4.1.12.2 <REGIST>

0005-6928

T-15-102

Use it to adjust the timing at which the registration roller clutch goes on.

Method of adjustment	-An increase of '1' will move the image toward the leading edge of paper by 0.1 mm. -Enter the value indicated on the service lable if you have initialized the RAM on the DC controller PCB or if you have replaced the DC controller PCB.
Range of adjustment	-50 to 50 (unit: 0.1 mm) [at time of shipment: factory adjustment value/after RAM initialization: 0]

15.4.1.12.3 <ADJ-REFE>

0005-6929

T-15-103

Use it to adjust the horizontal adjustment for duplexing (for factory use).

Method of adjustment	-an increase of '1' will move the image on the 2nd side to move toward the rear by 0.1 mm.
Range of adjustment	-100 to 100 at time of shipment: factory adjustment value upon RAM initialization: 0

15.4.1.12.4 <BLK-SML2>

0005-6930

T-15-104

Use it to adjust the left/right margin on the 2nd side for small size.

Method of adjustment	-an increase of '1' will make the left-right margin on the 2nd side longer by 0.1 mm.
Range of adjustment	-50 to +50 (unit: 0.1 mm) at time of shipment: factory adjustment value upon RAM initialization: -15 at time of shipment: factory adjustment value upon RAM initialization: 0

15.4.1.13 CST-ADJ

15.4.1.13.1 Overview

[0002-8462](#)

Making Pickup System-Related Adjustments

15.4.1.13.2 <MF-A4R>

[0005-6937](#)

T-15-105

Use it to enter the paper width basic value for the manual feed tray (A4R).

Method of
adjustment

-Enter the value indicated on the service label if you have initialized the RAM on the DC controller PCB or if you have replaced the DC controller PCB.

-If you have replaced the paper width detecting VR or if you are registering a value newly, be sure to execute the following in service mode: FUNCTION>CST.

Range of
adjustment

0 to 255

[at time of shipment: factory adjustment value/after RAM initialization: 125]

15.4.1.13.3 <MF-A6R>

[0005-6940](#)

T-15-106

Use it to enter the paper width basic value for the manual feed tray (A6R).

Method of
adjustment

-Enter the value indicated on the service label if you have initialized the RAM on the DC controller PCB or if you have replaced the DC controller PCB.

-If you have replaced the paper width detecting VR or if you are registering a value newly, be sure to execute the following in service mode: FUNCTION>CST.

Range of
adjustment

0 to 255

[at time of shipment: factory adjustment value/after RAM initialization: 193]

15.4.1.13.4 <MF-A4>

0005-6942

T-15-107

	Enter the paper width basic value for the manual feed tray (A4).
Method of adjustment	-Enter the value indicated on the service label if you have initialized the RAM on the DC controller PCB or if you have replaced the DC controller PCB. -If you have replaced the paper width detecting VR or if you are registering the value newly, be sure to execute the following in service mode: FUNCTION>CST.
Range of adjustment	0 to 255 [at time of shipment: factory adjustment value/after RAM initialization: 42]

15.4.1.14 MISC

15.4.1.14.1 Overview

0002-8465

Making Other Adjustments

15.4.1.14.2 <SEG-ADJ>

0001-0217

T-15-108

	Use it to adjust the separation level used between text and photo in text/photo/map mode.
Method of adjustment	-If you want the machine to identify an original to be a photo original, increase the setting. -If you want the machine to identify an original to be a text original, decrease the setting.
Range of adjustment	-4 to 4 [at time of shipment/after RAM initialization: 0]

15.4.1.14.3 <K-ADJ>

0001-0218

T-15-109

	Use it to adjust the black recognition level for black character processing.
Method of adjustment	-If you want the machine to identify a character as a black character, increase the setting.
Range of adjustment	-3 to 3 [at time of shipment/after RAM initialization: 0]

15.4.1.14.4 <ATM>

0002-8506

T-15-110

Use it to set the environment in respect of atmospheric pressure.

Range of
adjustment

0 to 2 (at time of shipment/upon RAM initialization: 0)

15.4.1.14.5 <ACS-ADJ>

0001-0219

T-15-111

Use it to adjust the color recognition level for ACS mode.

Method of
adjustment

-If you want the machine to identify an original to be a black-and-white original, increase the setting.

-If you want the machine to identify an original as a colored original, decrease the setting.

**Range of
adjustment**

-3 to 3 [at time of shipment/after RAM initialization: 0]

15.4.1.14.6 <WT-ER-LV>

0005-6945

T-15-112

Use it to set a threshold value referred to when issuing an error message in response to a waste toner box full condition.

An error cover (E013) will be indicated when a specific number of prints have been printed after the value indicated in WT-FL-LV has been reached.

setting: (number
of prints)

0:1 image

1:20000 image

2:40000 image

3:60000 image

estimates at a color ratio of 10% and image duty of 5%.

varies depending on the color ratio/image duty.

at time of shipment: factory adjustment value

upon RAM initialization: 2

15.4.1.14.7 <WT-FL-LM>

0005-6949

T-15-113

Use it to set a threshold for issuing an alert when the waste toner box is becoming full.

Use it to set a threshold for detection of a waste toner box error.

Use it to set a threshold referred to when issuing a pre-alert message in relation to the amount of waste toner in the waste toner box (intended for the user).

Use it to set a value referred to when issuing an alert on the User screen.

setting: (number of prints)

- 0: 80000 image
- 1: 140000 image
- 2: 210000 image
- 3: 320000 image
- 4: 460000 image

estimates at a color ratio of 10% and image duty of 5%.
varies depending on the color ratio/image duty.
at time of shipment: factory adjustment value
upon RAM initialization: 2

15.4.2 FEEDER

15.4.2.1 <DOCST>

0006-0289

T-15-114

Adjusting the Original Image Leading Edge

Method of adjustment	A higher setting will delay the image leading edge timing.
Range of adjustment	-50 to 50 (unit: 0.1mm) [at time of shipment/after RAM initialization: 0]

15.4.2.2 <LA-SPEED>

0001-7321

T-15-115

Adjusting the document feeding speed at the time of stream reading from the feeder

Method of adjustment	The speed becomes faster (image is reduced) by increasing setting value.
Range of adjustment	-30 to 30 (unit: 0.1%) [at time of shipment: factory adjustment value/after RAM initialization: 0]

15.4.3 SORTER

15.4.3.1 Overview

0002-8505

Making Finisher-Related Adjustments

15.4.3.2 <PNCH-HLE>

0006-0169

T-15-116

Use it to adjust the distance from the paper edge to the punch hole.

Range of adjustment -4to 2
 at time of shipment/upon RAM initialization: 512

15.4.4 ADJUST (Adjustment Mode)Level2

15.4.4.1 COPIER

15.4.4.1.1 LASER

LPWR-YMC

0005-6723

T-15-117

Use it to set the laser power for when potential control is off (Y/M/C).

Method of adjustment -set the laser power for Y/M/C with potential control off.

Range of adjustment 0 to 255
 at time of shipment: factory adjustment value
 upon RAM initialization: 112

LPWR-3

0005-6724

T-15-118

Use it to set the laser power for when potential control is off (feed speed at 1/3).

Method of adjustment -set the laser power (at feed speed 1/3) with potential control off.

Range of adjustment 0 to 255
 at time of shipment: factory adjustment value
 upon RAM initialization: 37

LPWR-2

0005-6725

T-15-119

Use it to set the laser power for when potential control is off (at feed speed 1/3).

Method of adjustment

-set the laser power (at feed speed 1/3) with potential control off.

Range of adjustment

0 to 255

at time of shipment: factory adjustment value

upon RAM initialization: 74

15.4.4.1.2 DENS

<HLMT-PTY>

0002-8333

Use it to set an upper limit to patch target density correction (Y).

range of adjustment: -20 to 20 (at time of shipment/upon RAM initialization: 0)

If possible, do not use it as long as machine operation is normal.

<HLMT-PTM>

0005-6857

Use it to set an upper limit to patch target density correction (M).

range of adjustment: -20 to 20 (at time of shipment/RAM initialization: 0)

If possible, do not use it as long as machine operation is normal.

<HLMT-PTC>

0005-6855

Use to set an upper limit to patch target density correction (C).

range of adjustment: -20 to 20 (at time of shipment/upon RAM initialization: 0)

If possible, do not use it as long as machine operation is normal.

<LLMT-PTY>

0005-6852

Use it to set a lower limit to patch target density correction (Y).

range of adjustment: -20 to 20 (at time of shipment/upon RAM initialization: 0)

If possible, do not use it as long as machine operation is normal.

<LLMT-PTM>

0005-6853

Use it to set a lower limit to path target density correction (M).

range of adjustment: -20 to 20 (at time of shipment/upon RAM initialization: 0)

If possible, do not use it as long as machine operation is normal.

<LLMT-PTC>

0005-6850

Use it to set a lower limit to patch target density correction (C).

range of adjustment: -20 to 20 (at time of shipment/upon RAM initialization: 0)

If possible, do not use it as long as machine operation is normal.

<DMAX-Y>

0002-8346

Use it to set an offset value for the Y density control target value.

Method of Adjustment

Set an offset value for the Y density control target value while in 2D-MAX control.

range of settings: -8 to 8

at time of shipment/upon RAM initialization: 0

<DMAX-M>	<u>0005-6849</u>
Use it to set an offset value for the M density control target value.	
Method of Adjustment	
Set an offset value for the Y density control value while in 2D-MAX control.	
range of settings: -8 to 8	
at time of shipment/upon RAM initialization: 0	
<DMAX-C>	<u>0005-6848</u>
Use it to set an offset value for the C density control target value.	
Method of Adjustment	
Set an offset value for the Y density control target value while in 2D-MAX control.	
range of settings: -8 to 8	
at time of shipment/upon RAM initialization: 0	
P-TG-Y	<u>0005-6732</u>
Use it to set an offset value for the ATR control target value (Y).	
Method of Adjustment	
Set an offset value for the target value of the Y toner while in ATR control.	
range of settings: -108 to 108	
at time of shipment/upon RAM initialization: 0	
P-TG-M	<u>0005-6846</u>
Use it to set an offset value for ATR control target value (M).	
Method of Adjustment	
Set an offset value for the target value of the Y toner density while in ATR control.	
range of settings: -108 to 108	
at time of shipment/upon RAM initialization: 0	
P-TG-C	<u>0005-6845</u>
Use it to set an offset value for the target value of the Y toner density while in ATR control.	
range of settings: -108 to 108	
at time of shipment/upon RAM initialization: 0	
 15.4.4.1.3 V-CONT	
<VCONT-Y>	<u>0002-8349</u>

T-15-120

Use it to adjust the target contrast potential (yellow).

Method of adjustment	A higher setting causes the images to be darker.
Range of adjustment	-50 to +50 (unit: 10 V) [at time of shipment/after RAM initialization: 0]
Attention	Avoid its use as much as possible if the operation is normal.

<VCONT-M>

0005-6874

T-15-121

Use it to adjust the target contrast potential (magenta).

Method of adjustment	A higher setting causes the images to be darker.
Range of adjustment	-50 to +50 (unit: 10 V) [at time of shipment/after RAM initialization: 0]
Attention	Avoid its use as much as possible if the operation is normal.

<VCONT-C>

0005-6873

T-15-122

Use it to adjust the target contrast potential (cyan).

Method of adjustment	A higher setting causes the images to be darker.
Range of adjustment	-50 to +50 (unit: 10 V) [at time of shipment/after RAM initialization: 0]
Attention	Avoid its use as much as possible if the operation is normal.

<VCONT-K>

0005-6872

T-15-123

Use it to adjust the target contrast potential (K).

Method of adjustment	-a higher setting will make the image darker.
Range of adjustment	U/M/C: -30 to +30 (unit: 10 V) K: -5 to + 5 at time of shipment/upon RAM initialization: 0
Attention	-if possible, do not use it as long as machine operation is normal.

<VBACK-Y>

0002-8350

T-15-124

Use it to adjust the fogging potential (Y).

Method of
adjustment

-a higher setting will serve to reduce following.

**Range of
adjustment**Y/M/C: -30 to +30 (unit: 5V)
at time of shipment/upon RAM initialization: 0

Attention

-if possible, do not use it as long as machine operation is normal.

<VBACK-M>

0005-6871

T-15-125

Use it to adjust the potential (M) used to remove fogging.

Method of
adjustment

-a higher setting will serve to reduce fogging.

**Range of
adjustment**Y/M/C: -30 to +30 (unit: 5V)
at time of shipment/upon RAM initialization: 0

Attention

-if possible, do not use it as long as machine operation is normal.

<VBACK-C>

0005-6870

T-15-126

Use it to adjust the potential (C) used to remove fogging.

Method of
adjustment

-a higher setting will serve to reduce fogging.

**Range of
adjustment**UY/M/C: -30 to +30 (unit: 5V)
at time of shipment/upon RAM initialization: 0

Attention

if possible, do not use it as long as machine operation is normal.

<VBACK-K>

0005-6869

T-15-127

	Use it to adjust the potential (K) used to remove fogging.
Method of adjustment	-a higher setting will serve to reduce fogging.
Range of adjustment	Y/M/C: -30 to +30 (unit: 5 V) at time of shipment/upon RAM initialization: 0
Attention	-if possible, do to use it as long as machine operation is normal.

15.4.4.1.4 COLOR

<LD-OFS-Y>

0001-1678

Use it to adjust the color balance for the low density range (yellow).
range of adjustment: -8 to +8 [at time of shipment/after RAM initialization: 0]
Avoid its use as much as possible if the operation is normal.

<LD-OFS-M>

0001-1680

Use it to adjust the color balance for the low density range (magenta).
range of adjustment : -8 to + 8 [at time of shipment/after RAM initialization: 0]
Avoid its use as much as possible if the operation is normal.

<LD-OFS-C>

0001-1681

Use it to adjust the color balance for the low density range (cyan).
range of adjustment: -8 to +8 [at time of shipment/after RAM initialization: 0]
Avoid its use as much as possible if the operation is normal.

<LD-OFS-K>

0001-1684

Use it to adjust the color balance of the low density range (black).
range of adjustment: -8 to +8 [at time of shipment/after RAM initialization: 0]
Avoid its use if the operation is normal.

<MD-OFS-Y>

0001-1686

Use it to adjust heat color balance for the medium density range (yellow).
range of adjustment: -8 to +8 [at time of shipment/after RAM initialization: 0]
Avoid its use as much as possible if the operation is normal.

<MD-OFS-M>

0001-1688

Use it to adjust the color balance for the medium density range (magenta).
range of adjustment: -8 to +8 [at time of shipment/after RAM initialization: 0]
Avoid its use as much as possible if the operation is normal.

<MD-OFS-C>

0001-1689

Use it to adjust the color balance of the medium density range (cyan).
range of adjustment: -8 to +8 [at time of shipment/after RAM initialization: 0]
Avoid its use as much as possible if the operation is normal.

<p><MD-OFS-K></p> <p>Use it to adjust the color balance of the medium density range (black). range of adjustment: -8 to +8 [at time of shipment/after RAM initialization: 0] Avoid its use as much as possible if the operation is normal.</p>	<p><u>0001-1691</u></p>
<p><HD-OFS-Y></p> <p>Use it to adjust the color balance for the high-density range (yellow). range of adjustment: -8 to +8 [at time of shipment/after RAM initialization: 0] Avoid its use as much as possible if the operation is normal.</p>	<p><u>0001-1693</u></p>
<p><HD-OFS-M></p> <p>Use it to adjust the color balance for the high density range (magenta). range of adjustment: -8 to +8 [at time of shipment/after RAM initialization: 0] Avoid its use as much as possible if the operation is normal.</p>	<p><u>0001-1695</u></p>
<p><HD-OFS-C></p> <p>Use it to adjust the color balance for the high density range (cyan). range of adjustment: -8 to +8 [at time of shipment/after RAM initialization: 0] Avoid its use as much as possible if the operation is normal.</p>	<p><u>0001-1697</u></p>
<p><HD-OFS-K></p> <p>Use it to adjust the color balance for the high density range (black). range of adjustment: -8 to +8 [at time of shipment/after RAM initialization: 0] Avoid its use as much as possible if the operation is normal.</p>	<p><u>0001-1698</u></p>

15.4.4.1.5 HV-PRI

<p><GRID-2></p>	<p><u>0005-6877</u></p>
-----------------------	-------------------------

T-15-128

<p>Method of adjustment</p>	<p>Use it to adjust the gain of the primary charging current measurement value.</p> <p>-if you have initialized the RAM on the DC controller PCB or replaced the DC controller PCB, enter the value indicated on the service label.</p> <p>-if you have recycled the high-voltage PCB, enter the value indicated on the label attached to the PCB.</p>
<p>Range of adjustment</p>	<p>0 to 00</p> <p>at time of shipment: factory adjustment value</p> <p>upon RAM initialization: 498</p>
<p>Note</p>	<p>-This item is for use at the factory, and must NOT be used in the field.</p>

<GRID-3>

T-15-129

	Use it to adjust the offset for the primary charging current measurement value.
Method of adjustment	-if you have initialized the RAM on the DC controller PCB or replaced the DC controller PCB, enter the value indicated on the service label. -if you have replaced the high-voltage PCB, enter the value indicated on the label attached to the PCB.
Range of adjustment	0 to 900 at time of shipment: factory adjustment value upon RAM initialization: 498
Note	-This item is for use at the factory, and must NOT be used in the field.

<HVRATE-3>

0005-6880

T-15-130

	Use it to adjust the parameter settings for primary charging bias/laser power (at feed speed 1/3).
Method of adjustment	-adjust the parameter setting for the primary charging bias/laser power for when 1/3 feed speed is used.
Range of adjustment	0 to 100 (in increments of 1) at time of shipment/upon RAM initialization: 33

<HVRATE-2>

0005-6881

T-15-131

	Use it to adjust the parameter setting for primary charging bias/laser power (at feed speed 2/3).
Method of adjustment	-adjust the parameter setting for the primary charging bias/laser power for when 2/3 feed speed is in use.
Range of adjustment	0 to 100 (in increments of 1) at time of shipment/upon RAM initialization: 33

15.4.4.1.6 HV-TR

<2TR-TGT1 to 8>

0005-6896

T-15-132

Use it to set an offset value used in relation to the secondary transfer ATVC target current level.

Method of Adjustment	When the machine's operation mode matches the particulars of the settings of TR-ENV, TR-PAPER, TR-CLR, and TR-DUP, the secondary ATVC target current level will be offset according to the setting made using this service mode item.
Settings	-10 to 10 (unit: 2 yA) at time of shipment/upon RAM initialization: 0
Reference	The following 6 items make up a single set of items: 2TR-TGT, 2TR-SHR, TR-PAPER, TR-ENV, TR-CLR, TR-DUP.

<2TR-SHR1 to 8>

0005-6897

T-15-133

Use it to set an offset value for secondary ATVC.

Method of Adjustment	When the machine's operation mode matches the particulars of the settings of TR-ENV, TR-PAPER, TR-CLR, and TR-DUP, the secondary ATVC voltage will be offset according to the setting made using this service mode item.
Settings	-10 to 10 (unit: 100V) at time of shipment/upon RAM initialization: 0
Reference	The following 6 items make up a single set of items: 2TR-TGT, 2TR-SHR, TR-PAPER, TR-ENV, TR-CLR, TR-DUP.

<TR-PPR1 to 8>

0006-2088

T-15-134

Use it to enter an offset value against the secondary transfer ATVC setting if necessary in response to a complaint from the user.

settings selection of paper type for cassette 1

Settings: 1, plain paper; 2, recycled paper; 3, colored paper; 4, punched paper; 5, heavy paper 1; 6, heavy paper 2; 7, heavy paper 3; 8, transparency; 9, tracing paper; 10, postcard; 11, 2-pane postcard; 12, 4-pane postcard; 13, label sheet

at time of shipment/upon RAM initialization: 1

Reference The following 6 items make up a single set: 2TR-TGT, 2TR-SHR, TR-PAPER, TR-ENV, TR-CLR, TR-DUP

<TR-ENV1 to 8>

0001-7361

T-15-135

Use it to make environmental settings for secondary transfer ATVC.

1: low humidity; 2: normal humidity; 3: high humidity

Reference

The following 6 items are grouped as a single set: 2TR-TGT, 2TR-SHR, TR-PPR, TR-ENV, TR-CLR, TR-DUP.

<TR-CLR1 to 8>

0001-7374

T-15-136

Use it to make color mode settings for secondary transfer ATVC.

1: Bk mode 2: C mode

Reference

The following 6 items are grouped as a single set: 2TR-TGT, 2TR-SHR, TR-PPR, TR-ENV, TR-CLR, TR-DUP.

<TR-DUP1 to 8>

0001-7383

T-15-137

Use it to make simplex/duplex pickup mode settings for secondary transfer ATVC.

1: single-sided; 2: auto double-sided; 3: manual double-sided

Reference

The following 6 items are grouped as a single set: 2TR-TGT, 2TR-SHR, TR-PPR, TR-ENV, TR-CLR, TR-DUP.

<1TR-TGY>

0002-8493

T-15-138

Use it to adjust the primary transfer ATVC target current offset value (Y).

Range of
adjustment

-10 to 10 (unit: 0.5 yA)
at time of shipment/upon RAM initialization: 0

<1TR-TGM>

0002-8494

T-15-139

Use it to adjust the primary transfer ATVC target offset value (M).

Range of
adjustment-10 to 10 (unit: 0.5 yA)
at time of shipment: factory adjustment value
upon RAM initialization: 0

<1TR-TGC>

0002-8495

T-15-140

Use it to adjust the primary transfer ATVC target current offset value (C).

Range of
adjustment-10 to 10 (unit: 0.5 yA)
at time of shipment: factory adjustment value
upon RAM initialization: 0

<1TR-TGK1>

0002-8498

T-15-141

Use it to adjust the primary transfer ATVC target current offset value (Bk, mono).

Range of
adjustment-10 to 10 (unit: 0.5 yA)
at time of shipment: factory adjustment value
upon RAM initialization: 0

<1TR-TGK4>

0002-8499

T-15-142

Use it to adjust the primary transfer ATVC target current offset value (Bk, 4C).

Range of
adjustment-10 to 10 (unit: 0.5 yA)
at time of shipment: factory adjustment value
upon RAM initialization: 0

<1EL>

0005-6905

T-15-143

Use it to set the primary transfer static eliminator bias level.
-Check the bias level using DISPLAY>HV-ST>1EL; then, use this mode to set the appropriate bias level.

Range of
adjustment

-4000 to 0 (unit: V)
at time of shipment/upon RAM initialization: 0

<2EL>

0005-6906

T-15-144

Use it to set the primary transfer static eliminator bias.
-check the bias level using DISPLAY>HV-ST>2EL; then, set the appropriate bias level.

Range of
adjustment

-4000 to 0 (unit: V)
at time of shipment/upon RAM initialization: 0

<1TR-ST>

0005-6907

T-15-145

Use it to set the offset value (normal speed) for the primary sheet-to-sheet target current.

Range of
adjustment

-10 to 10 (unit: 2 yA)
at time of shipment/upon RAM initialization: 0

<1TR-ST>

0005-6909

T-15-146

Use it to set the offset value (1/3 speed) for the primary sheet-to-sheet target current.

Range of
adjustment

-10 to 10 (unit: 2 yA)
at time of shipment/upon RAM initialization: 0

<1TR-ST3>

0005-6911

T-15-147

Use it to set the offset value (2/3 speed) for the primary transfer sheet-to-sheet target value.

Range of
adjustment

-10 to 10 (unit: 2 yA)
at time of shipment/upon RAM initialization: 0

<PRE-TR-Y>

0005-6912

T-15-148

Use it to adjust the current (Y) for the pre-transfer charging assembly.
-set the current offset value (Y) of the pre-transfer charging assembly.

Range of
adjustment

range of settings: -200 to 200 (in increments of 1)
at time of shipment/upon RAM initialization; 0

<PRE-TR-M>

0005-6913

T-15-149

Use it to adjust the current (Y) for the pre-transfer charging assembly.
-Set the offset value (M) for the pre-transfer charging assembly.

Range of
adjustment

range of settings: -200 to +200 (in increments of 1)
at time of shipment/upon RAM initialization; 0

<PRE-TR-C>

0005-6916

T-15-150

Use it to adjust the current level (Y) for the pre-transfer charging assembly.
Use it to set the current offset value (C) for the pre-transfer charging assembly.

Range of
adjustment

range of settings: -200 to +200 (may be in units of 1's)
at time of shipment/upon RAM initialization: 0

<POSTSW-Y>

0005-6917

T-15-151

Use it to adjust the current (Y) of the pre-transfer charging assembly.

-turn on or off the switch (Y) for the Y pre-transfer charging assembly to enable or disable the color Y for the pre-transfer charging assembly.

Settings

0: disable; 1: enable

at time of shipment/upon RAM initialization: 0

<POSTSW-M>

0005-6920

T-15-152

use it to adjust the current (Y) of the pre-transfer charging assembly.

-turn on or off the switch (M) to enable or disable the color Y for the pre-transfer charging assembly.

Settings

0: disable; 1: enable

at time of shipment/upon RAM initialization; 0

<POSTSW-C>

0005-6921

T-15-153

Use it to adjust the current (Y) of the pre-transfer charging assembly.

-turn on or off the switch (C) of the Y pre-transfer charging assembly to enable or disable the color Y for the pre-transfer charging assembly.

Settings

0: disable; 1: enable

at time of shipment/upon RAM initialization: 0

<POSTSW-K>

0005-6922

T-15-154

Use it to adjust the current (Y) of the pr-transfer charging assembly.

-turn on or off the switch (K) of the Y pre-transfer charging assembly to enable or disable the color Y for the pre-transfer charging assembly.

Settings

0: disable; 1: enable

at time of shipment/upon RAM initialization: 0

15.4.4.1.7 FEED-ADJ

<RVS-FD1>

0005-8984

T-15-155

Use it to adjust the point of reversal in reversal delivery mode.

**Range of
Adjustment**

-10 to +10 (in 1 mm increments)
 at time of shipment: factory adjustment value
 upon RAM initialization: 0

<RVS-DUP>

0005-8986

T-15-156

Use it to adjust the point of reversal in duplexing mode.

**Range of
Adjustment**

-10 to +10 (in 1-mm increments)
 at time of shipment : factory adjustment value
 upon RAM initialization: 0

<LOOP-T2>

0005-8982

T-15-157

Use it to adjust the arching at the registration roller for heavy paper.
 pickup up from the cassette or the deck (other than multifeder);
 arching at the registration roller at 1/3 speed operation

**Particulars of
Adjustment**

A lower setting (arching at the registration roller) will serve to limit
 noise; however, too low a setting can affect the margin or can cause
 skew movement of paper.

**Range of
Adjustment**

-10 to +10 (mm)
at time of shipment/upon initialization of RAM: 0

15.4.4.1.8 MISC

<ACS-EN>

0001-7406

T-15-158

Use it to adjust the ACS identification area.

**Range of
adjustment**

-2 to 2
 [at time of shipment/after RAM initialization: 1]

<ACS-CNT>

0001-7407

T-15-159

Use it to set the chrome count range for ACS identification.

Range of adjustment -2 to 2
[at time of shipment/after RAM initialization: 0]

<ACS-EN2>

0001-2652

T-15-160

Use it to adjust the ACS identification range (for DF stream reading).

Method of adjustment A higher setting increases the range of identification.

Range of adjustment -2 to 2
[at time of shipment/after RAM initialization: 1]

<ACS-CNT2>

0001-2653

T-15-161

Use it to adjust the count range of chrome pixels for ACS identification (for DF stream reading).

Method of adjustment A higher setting increases the range of identification.

Range of adjustment -2 to 2
[at time of shipment/after RAM initialization: 0]

15.4.4.1.9 EXP-LED

<PR-EXP>

0006-1265

T-15-162

Use it to set the pre-exposure LED current level for when potential control is off (feed speed at 1/1)

While keeping the potential control mechanism off, set the level of current for the pre-exposure LED (feed speed at 1/1).

range of settings 31 to 58 (in increments of 1)
at time of shipment/upon RAM initialization: 44

<EXP-ROT>

0006-0396

T-15-163

Use it to set the length of time for pre-exposure at time of last rotation.

Range of Settings

Range of Settings 0: forced pre-exposure last rotation disabled
1: 30 sec
2: 1 min
3: 1 min 30 sec
4: 2 min
at time of shipment/upon RAM initialization: 1

15.5 FUNCTION (Operation/Inspection Mode)

15.5.1 COPIER

15.5.1.1 INSTALL

15.5.1.1.1 Overview

0001-0232

Operation for Installation

15.5.1.1.2 <TONER-S>

0005-6464

T-15-164

Use it to stir the toner inside the developing assembly at time of installation.

Method of
operation

- 1) Select the item to highlight, and press the OK key.
-the machine starts operation.
-the machine begins a countdown.
- 2) See that 'OK' has appeared, indicating that the operation is over.

15.5.1.1.3 <STIR-Y>

0005-6466

T-15-165

Use it to stir the toner inside the developing unit (Y).

Opening

Select the item to highlight, and press the OK key to start operation.

15.5.1.1.4 <STIR-M>

0005-6784

T-15-166

Use it to stir the toner inside the developing unit (M).

Opening

Select the item to highlight, and press the OK key to start operation.

15.5.1.1.5 <STIR-C>

0005-6787

T-15-167

Opening

Use it to stir the toner inside the developing unit (C).
Select the item to highlight, and press the OK key to start operation.

15.5.1.1.6 <SPLY-H-Y>

0005-6467

T-15-168

Opening

Use it to start initial supply of toner from the toner cartridge (Y) to the toner buffer assembly.
Select the item to highlight, and press the OK key to start operation.

15.5.1.1.7 <SPLY-H-M>

0005-6789

T-15-169

Opening

Use it to start initial supply of toner from the toner cartridge (M) to the toner buffer assembly.
Select the item to highlight, and press the OK key to start operation.

15.5.1.1.8 <SPLY-H-C>

0005-6790

T-15-170

Opening

Use it to start initial supply of toner from the toner cartridge (C) to the toner buffer assembly.
Select the item to highlight, and press the OK key to start operation.

15.5.1.1.9 <CARD>

0001-0233

T-15-171

Method of operation

Use it to set up a card reader.
1 to 200 (at time of shipment/upon RAM initialization: 0)
Enter a number for the cards, and press the OK key. (As many as 100 cards each given a number starting with the one you entered will be enabled for use.)
At this time, the card control information (group ID and ID No.) is initialized.

15.5.1.1.10 <KEY>

0001-0235

T-15-172

Use it to set the control key function.

Settings

0: do not recognize control key. [at time of shipment/after RAM initialization: 0]

1: recognize control key function.

Method of operation

1) Make the following selections, and enter '1': COPIER>INSTALL>KEY.

2) Turn off and then on the main power switch (so that the control key function will be recognized).

15.5.1.1.11 <INISSET-Y>

0002-8517

T-15-173

Use it to set up the Y color developing assemblies for the first time.

Method of operation

1) Select the item to highlight, and press the OK key.

-the machine will start operation.

-the machine will start a countdown.

2) See that 'OK' appears, indicating that the operation is over.

note

The series of operations needed to initialize the Y/M/C color developing assembly will be executed at a time:

-power control offset adjustment

-EPC control

-primary transfer ATVC

-ITB cleaning

-secondary transfer power supply, idle rotation

-toner stirring

-optical ATR initialization

-patch initialization

15.5.1.1.12 <INISSET-M>

0006-1123

T-15-174

Use it to set up the M color developing assemblies for the first time.

Method of operatoin

- 1) Select the item to highlight, and press the OK key.
 - the machine will start operation.
 - the machine will start a countdown.
- 2) See that 'OK' appears, indicating that the operation is over.

note

The series of operations needed to initialize the Y/M/C color developing assembly will be executed at a time:

- power control offset adjustment
- EPC control
- primary transfer ATVC
- ITB cleaning
- secondary transfer power supply, idle rotation
- toner stirring
- optical ATR initialization
- patch initialization

15.5.1.1.13 <INISSET-C>

0006-1125

T-15-175

Use it to set up the C color developing assemblies for the first time.

Method of operatoin

- 1) Select the item to highlight, and press the OK key.
 - the machine will start operation.
 - the machine will start a countdown.
- 2) See that 'OK' appears, indicating that the operation is over.

note

The series of operations needed to initialize the Y/M/C color developing assembly will be executed at a time:

- power control offset adjustment
- EPC control
- primary transfer ATVC
- ITB cleaning
- secondary transfer power supply, idle rotation
- toner stirring
- optical ATR initialization
- patch initialization

15.5.1.1.14 <INISSET-3>

0002-8545

T-15-176

Use it to set up the 3 (YMC) developing assemblies.

Method of operatoin

- 1) Select the item to highlight, and press the OK key.
-the machine will start operation.
-the machine will make a countdown.
- 2) See that 'OK' appears, indicting that the operation is over.

Note

The series of operations needed to initialize the 3 color (YMC) developing assemblies will be executed at a time.

- LED intensity correction
- potential control sensor offset adjustment
- potential control
- primary transfer ATVC
- ITB cleaning
- secondary transfer powered idle rotation
- toner stirring
- optical ATR initialization
- patch initialization

15.5.1.1.15 <STIR-3>

0005-6469

T-15-177

Use it to stir the toner inside the developing assembly (Y/M/C).

Method of operatoin

Select the item to highlight, and press the OK key to start operation.

15.5.1.1.16 <SPLY-H-3>

0005-6470

T-15-178

Use it to supply toner from the toner cartridge (HY/MC) to the toner buffer assembly.

Method of operatoin

Select the item to highlight, and press the OK key to start operation.

15.5.1.1.17 <AINR-OFF>

[0002-8544](#)

T-15-179

	Use it to enable or disable initial multiple rotation used for installation work.
Overview	<p>You can disable initial multiple rotation if you are concerned about the image formation sequence (i.e., forming a patch or executing Dmax/Dhalf), which can soil or wear out internal components during installation work).</p> <p>If the color toner set-up run (FUNCTION>INSTALL>INSET-3) ends fully normally, the setting herein will automatically be cancelled (to prevent faults that otherwise could occur if the function is not manually switched back); if the run failed to end, however, the initial multiple rotation function will remain disabled.</p>
Settings	<p>0: enable initial multiple rotation</p> <p>1: disable initial multiple rotation (item under DC controller)</p> <p>at time of shipment: factory adjustment value</p> <p>upon RAM initialization: 0</p>

15.5.1.2 CCD

15.5.1.2.1 Overview

[0001-0236](#)

CCD-Related Automatic Adjustmant

15.5.1.2.2 <DF-WLVL1/2>

[0002-8546](#)

T-15-180

	Use it to adjust the ADF white level.
Method of operatoin	<p>Adjust the ADF white level as follows (copyboard scan):</p> <p>1) Place the type of original most often used by the user on the copyboard glass, and execute the following service mode item: COPIER>FUNCTION>CCD>DF-WLVL1. (In response, the machine will read the white level for book mode, checking the transmission quality of the glass for book mode).</p> <p>Adjust the ADF white level as follows (stream reading scan)</p> <p>2) Place the type of original most often used by the user in the DF, and execute the following service mode item: COPIER>FUNCTION>CCD>DF-WLVL2. (In response, the machine will read the white level for DF mode (stream reading mode), checking the transmission quality of the reading glass by reading both sides of the original.)</p> <p>face reading: computes DFTAR-R/G/B</p>
Attention	Be sure to execute this item in combination with item 2.

15.5.1.3 LASER

15.5.1.3.1 Overview

0002-8552

Making Laser-Related Adjustments

15.5.1.3.2 <POWER>

0002-8547

T-15-181

Use it to turn on the laser for adjustment of the laser power.

Method of Operation

- 1) Select the item to highlight.
 - 2) Press the OK key.
- To stop, press the Stop key.

15.5.1.4 DPC

15.5.1.4.1 Overview

0002-8553

Making Potential Control-Related Adjustments

15.5.1.4.2 <DPC>

0002-8550

T-15-182

Use it to execute potential control.

Method of Operation

Select the item to highlight, and press the OK key to execute the operation. (The operation will stop automatically.)

15.5.1.4.3 <OFST>

0002-8554

T-15-183

Use it to adjust the offset value of the potential measurement circuit.

Method of Operation

Select the item to highlight, and press the OK key to start operation. (The operation will stop automatically.)

15.5.1.5 CST

15.5.1.5.1 Overview

0001-0251

Cassette/Manual Feed Tray-Related Auto Adjustment

15.5.1.5.2 <MF-A4R, MF-A6R, MF-A4>

0001-0252

T-15-184

Use it to enter the paper width basic value for the manual feeder.

A4 width: 210 mm; A6R width: 105 mm; A4 width: 297 mm

-To make fine-adjustments, make the following selections:

COPIER>ADJUST>CST-ADJ>MF-A4, RMF-A6R, MF-A4.

Method of operation

- 1) Place A4 paper in the manual feeder, and adjust the size guide to A4R width.
- 2) Using this service mode item, select 'MF-A4R' to highlight, and press the OK key (so that the value will be stored after auto adjustment).
- 3) Likewise, perform steps 1) and 2) to register the basic value for A6R and A4.

15.5.1.6 CLEANING

15.5.1.6.1 Overview

0001-0254

Cleaning Operation

15.5.1.6.2 <TBLT-CLN>

0005-6481

T-15-185

Use it to clean the intermediate transfer belt.

The foreign matter, if any, (e.g., oils from fingers, paper lint) sticking to the intermediate transfer belt is removed to correct image faults

Operation

Select the item to highlight, and press the OK key to execute. The operation will stop automatically

15.5.1.6.3 <WIRE-CLN>

0002-8556

T-15-186

Use it to clean the primary charging wire/pre-transfer charging wire.

Method of Operation Select the item to highlight, and press the OK key to start operation.
Cleaning continues for about 80 sec, and will stop automatically.

15.5.1.6.4 <WIRE-EX>

0005-6482

T-15-187

Use it to clean the primary charging wire/pre-transfer charging wire (a single round trip).

Method of Operation Select the item to highlight, and press the OK key to start the operation. (The operation will stop automatically.)

Note The primary charging wire/pre-transfer charging wire may be cleaned for a signal round trip. Normally, the wire is cleaned by 5 round trips (about 3 min); on the other hand, the single trip in this mode will take no more than about 40 sec.)

15.5.1.7 FIXING

15.5.1.7.1 Overview


0001-0261

Fixing Unit-Related Auto Adjustments

15.5.1.7.2 <NIP-CHK>

0005-6486

⚠ NIP-CHK is a service mode item used to check the nip width of the fixing roller. The nip is adjusted to a high degree of accuracy before the machine is shipped out of the factory, and it cannot be adjusted in the field. Do not turn the 2 hex bolts [1] found on the delivery side of the fixing assembly. If you turned it by mistake, be sure to turn it back to its initial position.

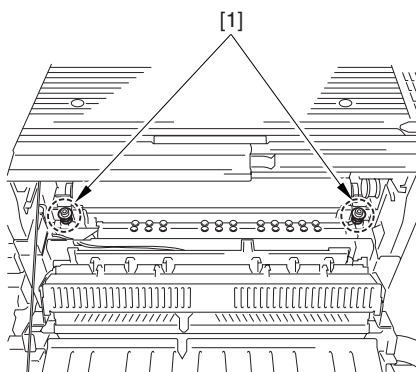

F-15-18

Generating a Printout for Fixing Nip Width Auto Measurement

Method of operation


- 1) Select 'plain paper' or 'recycled paper' as the type of paper to be placed in the manual feed tray (user mode>common settings>paper type).
- 2) Place A4 (LTR) plain paper or recycled paper in the manual feed tray.
- 3) Select service mode, and press the OK key. (The paper in the manual feed tray will be picked up.)
- 4) See that the paper is stopped between the fixing rollers and then is discharged in about 10 sec.
- 5) Check to see if the nip width of the discharged paper is as indicated.

Standard

The difference between a and b must be as follows:

Note 1: Measure a and b at points 15 to 20 mm from the edges of paper.

Note 2: The arrow in the figure indicates the movement of paper.

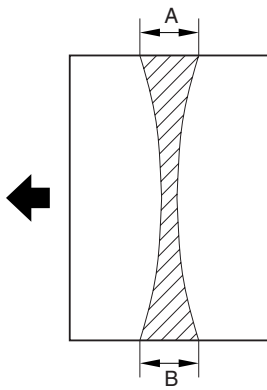

F-15-19

15.5.1.8 PANEL

15.5.1.8.1 Overview

0001-0263

Checks on the Control Panel

15.5.1.8.2 <LCD-CHK>

0005-6490

T-15-188

Use it to check the LCD for a missing dot.

Method of operation

- 1) Select the item, and press the OK key to start the operation.
See that the front face of the touch panel goes on in the following sequence: white, black, red, green, and blue.
- 2) Press the Stop key to end the operation. (In the case of the printer model, press the Clear key.)

15.5.1.8.3 <LED-CHK>

0005-6491

T-15-189

Use it to check the LEDs on the control panel.	
Method of operation	<ol style="list-style-type: none"> 1) Select it, and press the OK key to start the operation. See that the LEDs go on in sequence. 2) Press [LED-OFF] to stop the operation.

15.5.1.8.4 <LED-OFF>

0005-6492

T-15-190

Use it to check the LCD for a missing dot.

Method of operation

- 1) Select it to end the operation under [LED-CHK].

15.5.1.8.5 <KEY-CHK>

0005-6493

T-15-191

Use it to check the keys.

Method of operation	<ol style="list-style-type: none"> 1) Select [KEY-CHK] so that the machine indicates the numbers/names of the input keys. 2) Press any key to check; if normal, the appropriate character will appear on the touch panel. (See the table.) 3) Select [KEY-CHK] once again to end the key input check.
---------------------	--

T-15-192

Numbers/Names of the Keys

Key	Indication on screen
0 to 9, #, *	0 to 9, #, *
reset	RESET
stop	STOP
user mode	USER
start	START
power save	STAND BY
clear	CLEAR
ID	ID
help	?
counter check	BILL

15.5.1.8.6 <TOUCHCHK>

0005-6494

T-15-193

Use it to adjust the coordinates of the analog touch panel.

Operation	<p>Match the points pressed on the touch panel and their corresponding coordinates on the LCD.</p> <p>Execute this service mode whenever you have replaced the LCD.</p> <ol style="list-style-type: none"> 1) Select [TOUCHCHK] to highlight, and press the OK key. 2) Press the + symbols that appear on the touch panel at 9 locations in sequence to complete the adjustment.
-----------	--

15.5.1.9 PART-CHK

15.5.1.9.1 <CL>

0005-6495

T-15-194

Use it to select a clutch whose operation you want to check.

Operation

1) Select the item.

2) Enter the code of the clutch using the keypad.

1:color development clutch	CL1
2:color toner supply clutch (CL2)	CL2
3:black development clutch (CL3)	CL3
8:deck feed clutch(CL101)	CL101
9:deck pickup clutch(CL102)	CL102
4 through 7,10: reserved	

3) Press the OK key.

4) Press [CL-ON] to start checking the operation.

15.5.1.9.2 <CL-ON>

0005-6496

T-15-195

Use it to start a check on the selected clutch.

Operation

1) Select the item, and press the OK key so that the clutch will repeat going on and off as follows:

on for 0.5 sec > off for 10 sec > on for 0.5 sec > off for 10 sec >
on for 0.5 sec > off

15.5.1.9.3 <FAN>

0005-6497

T-15-196

Use it to select the clutch whose operation you want to check.

(range: 1 through 10; 4 through 10 are reserved)

(range: 1 through 10; 4 through 10 are reserved)

Operation

1)Select the time.

2)Enter the code of the selected clutch using the keypad.

1:primary charging suction fan (FM1)

2:primary charging exhaust fan (FM2)

3:feed fan 1 (FM3), feed fan 3 (FM11)

4:feed fan 2 (FM4), feed fan 4 (FM12)

5:fixing heat discharge fan (FM5)

6:delivery cooling fan 1 (FM6)

7:process unit cooling fan (FM7)

8:reserved

9:power supply cooling fan (FM9)

10:delivery cooling fan 2 (FM10)

4 to 10:reserved

3)Press the OK key.

4)Press [CL-ON] to start checking the operation.

15.5.1.9.4 <FAN-ON>

0005-6498

T-15-197

Use it to start a check on the selected fan.

Operation

1)Select the item, and press the OK key so that the following will take place:

on at full speed for 10 sec > on for half-speed for 10 sec > standby

T-15-198

Use it to select the clutch whose operation you want to check.

(range: 1 thorough 32; 16, 24, 29, 30, 31, 32 are reserved)

Operation

- 1) Select the item.
- 2) transfer the code of the clutch you want to check using the keypad.

1: polygon motor (M1)

2: drum/ITB motor (M2)

3: development motor (M3)

4: fixing motor (M4)

5: developing rotary motor (M5)

6: manual feed pre-registration motor (M6)

7: reserved

8: registration motor (M8)

9: external delivery motor (M9)

10: duplexing reversal motor (M10)

11: duplexing left motor (M11)

12: duplexing center motor (M12)

13: duplexing right motor (M13)

14: right deck pull-off motor (M14)

15: veridical path motor (M15)

16: reserved

17: right deck pickup motor (M17)

18: left deck pickup motor (M18)

19: cassette pickup motor (M19)

20: secondary transfer outside roller shift motor (M20)

21: ITB cleaner shift motor (M21)

22: outside heating roller shift motor (M22)

23: hopper stirring motor (M23)

24: reserved

25: black toner supply motor (M25)

26: primary charging wire cleaning motor (M26)

27:pre-transfer charging cleaning motor (M27)

28:horizontal registration motor (M28)

35:deck main motor(M101)

37:shift motor

3)Press the OK key.

4)Press [CL-ON] to start checking the operation.

15.5.1.9.6 <MTR-ON>

0001-0277

T-15-199

Use it to start the operation of the motor.

Method of Toner Cartridge Motor (Y, M, C, K)

operation

1) Remove the toner cartridge, and close the front cover.

2) Select the item, and press the OK key.

-for 10 sec ON > OFF

Horizontal Registration Motor

1) Select the item, and press the OK key.

-HP search starts > end automatically

Motors Other than Toner Cartridge Motor (Y, M, C, K) and Horizontal Motor

1) Select the item, and press the OK key.

-for 10 sec, ON > OFF

15.5.1.9.7 <MTR-ON>

0005-6500

T-15-200

Use it to start a check on the selected motor.

Operation 1)Select the item, and press the OK key.

2)-in the case of MOTOR=1 through 4, 6, 8 through 15, 17 through 19, 23, 25 through 28,
on for 10 sec > end

-in the case of MOTOR=20 through 22,
on for 5 sec > end

-in the case of MOTOR=5,
HP search start > end

15.5.1.9.8 <SL>

0005-6564

T-15-201

Use it to select the solenoid whose operation you want to check.

(range: 1 thorough 15)

- Operation
- 1) Select the item.
 - 1: manual feed solenoid (SL1)
 - 2: fixing web solenoid (SL2)
 - 3: reversal shift solenoid (SL3)
 - 4: left deck confluence solenoid (SL4)
 - 5: delivery solenoid (SL5)
 - 6: deck (right) pickup solenoid (SL6)
 - 7: deck (left) pickup solenoid (SL7)
 - 8: cassette 3 pickup solenoid (SL8)
 - 9: cassette 4 pickup solenoid (SL9)
 - 10: developing rotary locking solenoid (SL10)
 - 11: patch image read sensor shutter solenoid (SL1C)
 - 12: ATR sensor shutter solenoid (SL2C)
 - 14: deck feed clutch
 - 15: deck pickup clutch
 - 13 :reserved
 - 3) Press the OK key.
 - 4) Press [SL-ON] to start checking the operation.

15.5.1.9.9 <SL-ON>

0005-6565

T-15-202

Use it to start the operation of the solenoid.

- Operation
- Select the item, and press the OK key so that the selected solenoid will repeat going on and off as follows:
- on for 0.5 sec > off for 10 sec > on for 0.5 sec > off for 10 sec > on for 0.5 sec > off

15.5.1.10 CLEAR

15.5.1.10.1 Overview

0001-0281

Resetting RAM/Error Code/Jam History/Error History

15.5.1.10.2 <ERR>

0001-0283

T-15-203

Use it to reset an error code.

(E000, E001, E002, E003)

Method of
operation

- 1) Select the item, and press the OK key.
- 2) Turn off and then on the main power supply.

15.5.1.10.3 <DC-CON>

0001-0285

T-15-204

Use it to reset the RAM on the DC controller PCB.

Caution

The contents of the RAM are removed when the main power switch is turned off and then on once again.

Method of
operation

- 1) Obtain a printout of the service mode settings by making the following selections: COPIER>FUNCTION>MISC-P>P-PRINT.
- 2) Select the item, and press the OK key.
- 3) Turn off and then on the main power.
- 4) As necessary, enter the data indicated on the print obtained using [P-PRINT].

15.5.1.10.4 <R-CON>

0001-0286

T-15-205

Use it to initialize the RAM on the reader controller PCB.

Caution The contents of the RAM are initialized only when the main power switch has been turned off and then on once again.

Method of operation 1) Obtain a printout of the service mode settings by making the following selections: COPIER>FUNCTION>MISC-P>P-PRINT.

2) Select the item, and press the OK key.

3) Turn off and then on the main power.

4) As necessary, enter the data indicated on the printout obtained by [P-PRINT].

15.5.1.10.5 <JAM-HIST>

0001-0287

T-15-206

Use it to reset the jam history.

Caution The jam history is removed when the OK key is pressed.

Method of operation 1) Select the item, and press the OK key.

15.5.1.10.6 <ERR-HIST>

0001-0289

T-15-207

Use it to reset the error history.

Caution The error history is removed when the OK key is pressed.

Method of operation 1) Select the item, and press the OK key.

15.5.1.10.7 <PWD-CLR>

0006-0094

T-15-208

Use it to initialize the password of the system administrator.

Note The password will not be initialized until the OK key is pressed.

Operation 1) Select the item, and press the OK key.

15.5.1.10.8 <ADRS-BK>

0001-0292

T-15-209

Use it to reset the address book data.

Caution The address book data is removed when the main power switch is turned off and then on once again.

Method of operation 1) Select the item, and press the OK key.
2) Turn off and then on the main power.

15.5.1.10.9 <CNT-MCON>

0001-0293

T-15-210

Use it to reset the service counter readings controlled by the main controller PCB (main).

(For the readings that are reset, see the description under COUNTER mode.)

Caution The counter readings are removed when the OK key is pressed.

Method of operation 1) Select the item, and press the OK key.

15.5.1.10.10 <CNT-DCON>

0001-0294

T-15-211

Use the item to reset the service counter readings controlled by the DC controller PCB.

-COPIER>COUNTER>DRBL-2>SORT

-COPIER>COUNTER>DRBL-2>FIN-STPR

-COPIER>COUNTER>DRBL-2>FIN-PDDL

-COPIER>COUNTER>DRBL-2>SADDLE

-COPIER>COUNTER>DRBL-2>SDL-STPL

Caution The counter readings are removed when the OK key is pressed.

Method of operation 1) Select the item, and press the OK key.

15.5.1.10.11 <OPTION>

0001-0295

T-15-212

Use it to reset the service mode (OPTION) settings to default settings (RAM initialization).

Caution	The settings are reset when the OK key is pressed.
Reference	The data removed here is data in the main controller, DC controller, and reader controller.
Method of operation	1) Obtain a printout of the service mode settings by executing the following selections: COPIER>FUNCTION>MISC-P>P-PRINT. 2) Select the item, and press the OK key.

15.5.1.10.12 <MMI>

0001-0296

T-15-213

Use it to reset the following for user mode.

-backup data for copier control panel (user settings)

-common settings backup data (user settings)

-backup data (other than fax settings; user settings)

Caution	The settings are removed when the main power switch is turned off and then on again.
Method of operation	1) Select the item, and press the OK key. 2) Turn off and then on the main power.

15.5.1.10.13 <MN-CON>

0001-0297

T-15-214

Use it to reset the RAM in the main controller PCB SRAM board.

Caution	-The contents of the RAM are removed when the main power switch is turned off and then on once again. -When this item is executed, all data on the SRAM board will be initialized. In other words, the image data including the images in Boxes on the hard disk will also be lost. Be sure to obtain the consent of the user before executing this item.
Method of operation	1) Obtain a printout of the service mode settings by executing the following selections: COPIER>FUNCTION>MISC-P>P-PRINT. 2) Select the item, and press the OK key. The machine will restart automatically, and indicate a message asking you to turn off and then on the power. 3) Turn off and then on the main power.

15.5.1.10.14 <CARD>

0001-0298

T-15-215

Use it to reset card ID-related data (group).

Caution

The card ID-related data is removed when the main power switch is turned off and then on.

Method of operation

- 1) Select the item, and press the OK key.
- 2) Turn off and then on the main power.

15.5.1.10.15 <W-TN-CLN>

0005-6569

T-15-216

Use it to reset a waste toner box full alert/error.

Overview

If you have replaced the waste toner box, execute this item to reset the alert/error and initialize the counter used for the waste toner box detection mechanism.

Method of Operation

Select the item to highlight, and press the OK key to start operation.

15.5.1.11 MISC-R

15.5.1.11.1 Overview

0001-0299

Checking the Operation of the Reader Unit

15.5.1.11.2 <SCANLAMP>

0001-0301

T-15-217

Use it to check the operation of the scanning lamp.

Method of operation

- 1) Select the item.
- 2) Press the OK key so that the scanning lamp remains on for 3 sec.

15.5.1.12 MISC-P

15.5.1.12.1 Overview

0001-0302

Checking the Operation of the Printer Unit

15.5.1.12.2 <P-PRINT>

0001-0303

T-15-218

Use it to generate a printout of the service mode settings.

Method of
operation

- 1) Select the item.
- 2) Press the OK key to generate a printout.

Reference

It takes about 15 sec for the machine to generate a printout.

15.5.1.12.3 <USER-PRT>

0001-0304

T-15-219

Use it to obtain a printout of the user mode settings.

Method of
operation

- 1) Select the mode.
- 2) Press the OK key to generate a printout.

Reference

It takes about 3 sec for the machine to generate a printout.

15.5.1.12.4 <LBL-PRNT>

0001-0305

T-15-220

Use it to obtain a printout of the service label.

Method of
operation

- 1) Place 4/LTR paper in the cassette 1.
- 2) Select the item.
- 3) Press the OK key to generate a printout.

Reference

It takes about 15 sec for the machine to generate a printout.

15.5.1.12.5 <PRE-EXP>

0006-0097

T-15-221

Use it to check the activation of the pre-exposure lamp (LED).

- Operation
- 1) Press the item to highlight.
 - 2) Press the OK key so that the individual operations are executed for several seconds and the execution stops automatically (full activation).
 - 3) Press the OK key to generate a printout.
- Reference
- If a fault is noted on the photosensitive drum as the result of activating the pre-exposure lamp, rotate the drum.

15.5.1.12.6 <DEV-DR-Y>

0006-4858

T-15-222

Use it to move the developing assembly rotary to the point of replacement for the toner cartridge (Y).

- Method of operation
- 1) Select the item.
 - 2) Press the OK key so that the developing assembly rotary moves to the point of replacement for the toner cartridge (Y).
- Caution
- The machine is set in such a way that the user will not be able to remove a toner cartridge if it still contains toner. The cartridge may be removed by moving the developing rotary to the point of access only when the cartridge has run out of toner.
- The use of this service mode item enables the user to move the developing rotary to the point of access so that the Y toner cartridge may be removed regardless of the presence/absence of toner inside it.

15.5.1.12.7 <DEV-DR-M>

0006-4859

T-15-223

Use it to move the developing assembly rotary to the point of replacement for the toner cartridge (M).

Method of operation

- 1) Select the item.
- 2) Press the OK key so that the developing assembly rotary moves to the point of replacement for the toner cartridge (Y).

Caution

The machine is set in such a way that the user will not be able to remove a toner cartridge if it still contains toner. The cartridge may be removed by moving the developing rotary to the point of access only when the cartridge has run out of toner.

The use of this service mode item enables the user to move the developing rotary to the point of access so that the Y toner cartridge may be removed regardless of the presence/absence of toner inside it.

15.5.1.12.8 <DEV-DR-C>

0006-4860

T-15-224

Use it to move the developing assembly rotary to the point of replacement for the toner cartridge (C).

Method of operation

- 1) Select the item.
- 2) Press the OK key so that the developing assembly rotary moves to the point of replacement for the toner cartridge (Y).

Caution

The machine is set in such a way that the user will not be able to remove a toner cartridge if it still contains toner. The cartridge may be removed by moving the developing rotary to the point of access only when the cartridge has run out of toner.

The use of this service mode item enables the user to move the developing rotary to the point of access so that the Y toner cartridge may be removed regardless of the presence/absence of toner inside it.

15.5.1.12.9 <D-PRINT>

0002-8562

T-15-225

Use it to print out service mode settings (DISPLAY).
item under DISPLAY LEVEL 1 only

Method of Operation

- 1) Select the item to highlight, and press the OK key to start the operation.

15.5.1.12.10 <1ATVC-EX>

0005-6572

T-15-226

Use it to force primary ATVC.

Operation

- 1) Select the item.
- 2) Press the OK key to start operation. (The operation will end in about 1 min.)

Remarks

Be sure to execute this item if you have replaced the intermediate transfer belt, ITB unit, or primary transfer roller.

15.5.1.12.11 <ENV-PRT>

0005-6573

T-15-227

Use it to print out a log on the changes that may have taken place in machine inside temperature/humidity and fixing temperature.

Note

The log shows changes in machine inside temperature/humidity and fixing temperature (middle) as collected from the output of the environment sensor and non-contact thermistor.

15.5.1.12.12 <1TR-ROT>

0005-6570

T-15-228

Use it to execute idle rotation of the primary transfer roller.

Reference

Use it to force idle rotation of the primary transfer roller while applying a primary transfer bias so as to prevent a fault in primary transfer ATVC otherwise caused by changes in the environment.
When this service mode item is executed, the machine will automatically force execution of primary transfer ATVC.

15.5.1.12.13 <DR-P-ADJ>

0006-0189

T-15-229

Use it to adjust the phase shift of the photoactive drum.

Use it to execute the adjustment sequence for a phase shift of the photosensitive drum.

Operation

- 1) Select the item to highlight, and press the OK key.
In response, the adjustment will start and the indication will change to 'ACTIVE'. At the end, the indication will change to 'OK!'.

15.5.1.13 SENS-ADJ

15.5.1.13.1 Overview

0006-1861

Checking the Sensor Operation


15.5.1.13.2 <STCK-LMT>

0006-0100

Use it to adjust the position of the shift tray full sensor.


The indication will be 'ON' when the shift tray is identified as being full; otherwise, it will be 'OFF'.

- 1) Remove the 3 face covers.
- 2) Remove the 2 screws [1], and detach the delivery unit.
- 3) Loosen the screw [1], and temporarily fix the 2 tray full sensors in place farthest from the paper.

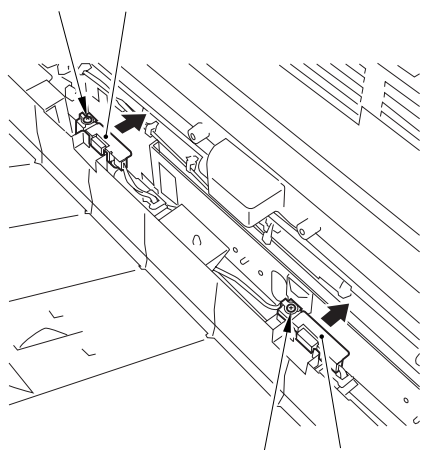


F-15-20

- 4) On the point of detection of either of the tray full sensors, place a stack of paper about 60 mm high.

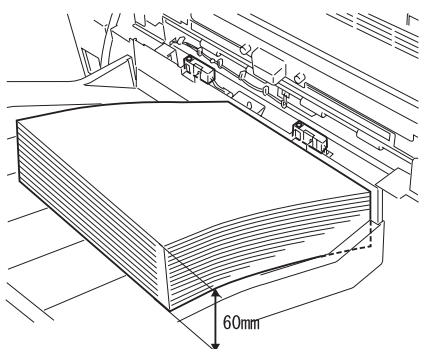


F-15-21

- 5) Select the time, and press the OK key.
- 6) While referring to the index, move the sensor toward the paper from the position farthest away from the paper; then, fix it in place where the indication turns 'OK'.

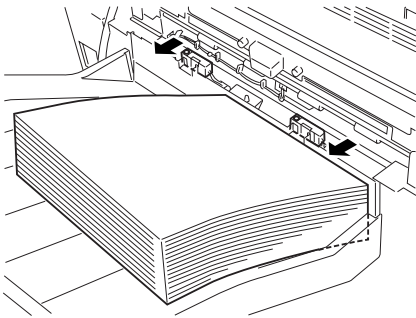

F-15-22

Memo : If the indication does not change to 'ON' even when the tray full sensor has been brought closest to the paper, add a sheet of paper until it does.

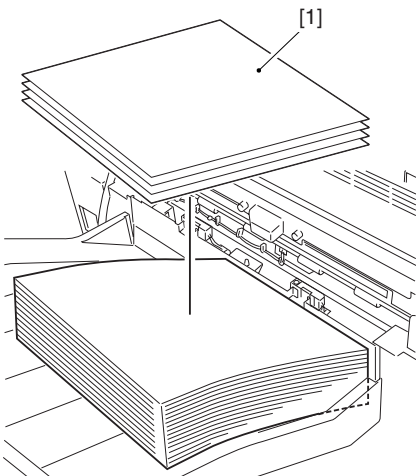

F-15-23

- 7) Move the stack of paper to the point of detection of the other tray full sensor.
- 8) Perform step 4) once again to adjust the position of the sensor.
- 9) When done, press the Stop key.

15.5.1.14 SYSTEM

15.5.1.14.1 Overview

0001-0306

Checking System-Related Operation

15.5.1.14.2 <DOWNLOAD>

0001-0307

T-15-230

Use it to switch over to download mode.

Method of
operation

- 1) Select the item.
- 2) Press the OK key so that the machine will enter download mode and waits for a command (connection). At this time, [STAND-BY] (or [STANDBY]) will be indicated next to the Level 3 field.
- 3) Uses the Service Support Tool to perform downloading work. (While connected to a PC, the machine will indicate [CONNECTED].)
- 4) See that that the notation has changed to [HOLD] to indicate that the communication has ended. (You may turn off the power while the indication is [HOLD].)

15.5.1.14.3 <CHK-TYPE>

0001-0309

T-15-231

Use it to select the number of the partition that you want to check (HD-CHECK).

Method of
operation

- 1) Select the item.
- 2) Select the number of the partition you want to check using the keypad.
 - 0: entire HDD (check and correction)
 - 1: image storage area
 - 2: multiple-use file storage area
 - 3: PDL-related file storage area
 - 4: firmware storage area

-A PDL file is a file that contains user settings data, various log data, PDL spool data, and image data (i.e., control information for data).
- 3) Press the OK key.

15.5.1.14.4 <HD-CHECK>

0001-0310

T-15-232

Use it to check and correct the partition you have selected using CHK-TYPE.

Method of operation	1) Select the item. 2) Press the OK key. 3) See the result (1: OK; 2: NG, hardware; 3: NG, software/corrected sector, switched sector).
---------------------	---

15.5.1.14.5 <HD-CLEAR>

0001-0311

T-15-233

Use it to initialize the partition you have selected using CHK-TYPE.

Caution	-if you have selected 0 or 4, the selections will be invalid. -if you have selected 1, the SRAM area and the image control data held in the multiple-purpose file storage area will also be initialized.
Method of operation	1) Select the item. 2) Press the OK key.

!The initialization is done when the power is turned off and then on if you execute [HD-CLEAR] after using [CHK-TYPE] to select 1: image storage area or 3: PDL-related file storage area.
The initialization takes about 5 min, during which time the progress bar moves slowly. Do not turn off the power while the progress bar is indicated.

15.5.2 FEEDER

15.5.2.1 Overview

0001-7201

Checking the DF on Its Own

15.5.2.2 <SENS-INT>

0006-0293

T-15-234

Use it to adjust the sensitivity of the individual sensors of the feeder.

Select the item, and press the OK key to start feeder sensor initialization, turning the screen indication to 'ACT'. The operation will end automatically, turning the indication to 'OK'.

15.5.2.3 <MTR-CHK>

0006-2514

T-15-235

Use it to check the motor and the like of the ADF on its own.

Operation

- 1) Press [MOTOR-CHK] to highlight.
- 2) Enter the number of the component using the keypad.
- 3) Press the OK key.
- 4) Press [MOTOR-ON] to start checking the operation.

Settings

- 0: pickup motor
- 1: feed motor
- 2: delivery reversal motor
- 4: lock motor

at time of shipment: factory default
upon RAM initialization: 0

15.5.2.4 <TRY-A4>

0001-7203

Use it to execute automatic adjustment (A4 Width) for DF original paper width detection.

15.5.2.5 <TRY-A5R>

0001-7205

Use it to execute automatic adjustment (A5R width) for DF original paper width detection.

15.5.2.6 <TRY-LTR>

0001-7207

Use it to execute automatic adjustment (LTR width) for DF original paper width detection.

15.5.2.7 <TRY-LTRR>

0001-7208

Use it to execute automatic adjustment (LTR-R width) for DF original paper width detection.

15.5.2.8 <FEED-CHK>

0006-2523

T-15-236

Use it to check paper movement in the ADF on its own.

Operation

- 1) Press [FEED-CHK] to highlight.
- 2) Enter the number of the component using the keypad.
- 3) Press the OK key.
- 4) Press [FEED-ON] to start checking the operation.

Feed Mode

- 0: single-sided operation
- 1: double-side operation
- 2: single-sided operation w/ stamp
- 3: double-sided operation w/ stamp

at time of shipment: factory default
upon RAM initialization: 0

15.5.2.9 <CL-CHK>

0006-0294

T-15-237

Use it to check the DF clutch on its own.

Press 'CL-ON' to start.

- 1) Press [CL-CHK] (to highlight).
- 2) Enter the code of the part you want to check.
- 3) Press the OK key.
- 4) Press [CL-ON] to start checking the operation.

Code of Part

- 0: pickup clutch

15.5.2.10 <CL-ON>

0006-0296

T-15-238

Use it to start the operation of the selected clutch.

Press [CL-ON] and then press the OK key to start the operation of the clutch.

Another press on the key will stop the operation.

(The operation will stop in 200 msec; however, unless you press the OK key once again, the indication will not change to STOP.)

15.5.2.11 <FAN-CHK>

0006-0298

T-15-239

Use it to check the DF cooling fan.

Execute using FAN-ON.

- 1) Press [FAN-CHK] to highlight.
- 2) Enter the number of the component using the keypad.
- 3) Press the OK key.
- 4) Press [FAN-ON] to start checking the operation.

Component Number

0: cooling fan

15.5.2.12 <FAN-ON>

0006-0299

T-15-240

Use it to start the operation of the selected fan.

Press [FAN-ON], and press the OK key to start the operation of the fan.

Another press on the OK key will stop the operation.

(The operation will automatically stop in 5 sec; however, unless you press the OK key once again, the indication will not turn 'STOP'.)

15.5.2.13 <SL-CHK>

0006-2526

T-15-241

Use it to check the ADF solenoid on its own.

Operation

- 1) Press [SL-CHK] to highlight
- 2) Enter the number of the component using the keypad.
- 3) Press the OK key.
- 4) Press [SL-ON] to start checking the operation.

Number of Component

- 0: lock solenoid
- 1: stamp solenoid

at time of shipment: factory default
upon RAM initialization: 0

15.5.2.14 <SL-ON>

0006-2532

T-15-242

Use it to start the operation of the selected solenoid.

Operation

The operation varies from model to model.

- 1) Press [SL] to highlight; then, press the OK key to start motor operation.
- 2) Press the OK key once again to stop the ongoing operation.
(The operation will stop automatically in 5 sec; however, the indication will not change to [STOP] unless the OK key is pressed once again.)

15.5.2.15 <MTR-ON>

0006-2527

T-15-243

Use it to start motor operation.

Operation

The operation varies from model to model.

- 1) Press [MTR-ON] to highlight; then, press the OK key to start motor operation.
- 2) Press the OK key once again to stop the motor.
(The operation will stop automatically in 5 sec; however, the indication will not change to [STOP] unless the OK key is pressed once again.)

15.5.2.16 <ROLL-CLN>

0006-2534

T-15-244

Use it to clean the ADF roller.

In this mode item, the roller is rotated by the work of its motor; it is cleaned by lint-free paper (moistened with alcohol) forced against it while it rotates.

Operation

- 1) Press [ROLL-CLN] to highlight.
- 2) While the roller is rotating, clean it by forcing lint-free paper (moistened with alcohol) against it.
- 3) Press [ROLL-CLN] to highlight, and press the OK key to stop the rotation of the roller.

15.5.2.17 <FEED-ON>

0006-2536

T-15-245

Use it to check the movement of paper in the ADF on its own.

Operation

- 1) Press [FEED-ON], and then press the OK key so that the ADF starts to move paper according to the operation mode selected using [FEED-CHK].

15.5.3 FUNCTION (operation/inspection mode):Level 2

15.5.3.1 COPIER

15.5.3.1.1 INSTALL

<INIT-Y/M/C>

0005-6562

T-15-246

Method of Operation Use it to cause the machine to read the initial value of the toner density signal (SGNL, REF) of Y/M/C.
Select the item to highlight, and press the OK key to start the operation.

<INIT-3>

0005-6563

T-15-247

Method of Operation Use it to cause the machine to read the initial value of the toner density signals (SGNL, REF) of 3 colors (YMC).
Select the item to highlight, and press the OK key to start the operation.

15.5.3.1.2 CLEANING

<BK-BNDEX>

0005-6484

T-15-248

Details of Control Use it to execute the black band sequence.
-a sequence of operations will be executed to clean the intermediate transfer belt to prevent image faults (white spots) after filed servicing. The operation will take about 15 sec.

Method of Operation 1) Select the item, and press the OK key.
-The notation will change to 'ACTIVE', and the wire will be cleaned.
2) To end the operation, press the OK key once again.

15.5.3.1.3 CLEAR

<SND-STUP>

0001-7218

Use it to initialize the setting for the transmission reading. (Execute this item when you switch language settings.)

15.5.3.1.4 MISC-P

<MAIN-DRV>

0005-6576

Use it to drive the intermediate transfer medium and the photosensitive drum for a specific period of time.

1) Select the item to highlight.

2) Press the OK key, and turn off and then on the power to start the operation. The operation will end in a specific period of time.

<KEY-HIST>

0001-0318

Use it to obtain a printout of the history of key inputs made on the control panel.

1) Select the item.

2) Press the OK key so that the machine generates the printout.

<HIST-PRT>

0001-0323

Use it to obtain a printout of the history of jams and errors.

1) Select the item.

2) Press the OK key so that the machine generates the printout.

<TRS-DATA>

0001-0326

Use it to move data received in memory mode to a Box.

1) Select the item.

2) Press the OK key to move the data.

<ITB-ROT>

0005-6578

Use it to start idle rotation of the secondary transfer roller/intermediate transfer belt.

Execute idle rotation of the secondary roller and the intermediate transfer belt to prevent the intermediate belt from turning into a particular shape.

1) Select the item to highlight, and press the OK key to start the operation.

<ATR-EX>

0005-6579

Force ATR control.

Use it to force ATR control if the correction value for ATR control is lost, as after E020 (field servicing) or after replacing the DC controller PCB.

1) Select the item to highlight, and press the OK key to start the operation.

<INTR-EX>

0005-6580

Use it to force initial rotation, as the first thing in the morning.

You can force the various image stabilization control mechanisms (usually executed first thing in the morning during initial rotation) consisting of the following:

-potential control

-primary transfer ATVC

-Dmax control

-ITB cleaning

-secondary transfer powered idle rotation (only if selected in service mode)

-patch detection (only in high temperature/humidity environment)

-developing sleeve rotation (only in high temperature /humidity environment)

The operation takes about 1 min.

1) Select the item to highlight, and press the OK key to start operation.

15.6 OPTION (Machine Settings Mode)

15.6.1 COPIER

15.6.1.1 BODY

15.6.1.1.1 Overview

0001-0328

Selecting Machine-Related Settings

15.6.1.1.2 <PO-CNT>

0005-6606

T-15-249

for factory adjustment

15.6.1.1.3 <MODEL-SZ>

0001-0330

T-15-250

Use it to switch the default magnification display function and the ADF original size detection function.

Caution The new settings become valid only when the main power switch has been turned off and then on.

Settings
0: AB (6R5E)
1: INCH (5R4E)
2: A (3R3E)
3: AB/INCH (6R5E)

15.6.1.1.4 <FIX-TEMP>

0005-6609

T-15-251

Use it to change the plain paper down sequence.

Note The new setting will not be valid until the power switch has been turned off and then on.

Settings
0: default
1: priority on fixing
2: priority on productivity
at time of shipment/upon RAM initialization: 0

15.6.1.1.5 <PASCAL>

0005-6613

T-15-252

Use it to enable/disable the use of contrast potential obtained from auto gradation correction (full) and the use of gradation correction data.

Attention The new setting will not be valid until the power switch has been turned off and then on.

Settings 0: do not use
1: use
2: reserved (same as 1)
3: reserved (same as 0)
at time of shipment/upon RAM initialization: 1

15.6.1.1.6 <CONFIG>

0001-0337

T-15-253

Use it to select multiple pieces of firmware stored on the hard disk, and to switch the machine's country, language, destination, and paper size configuration settings.

Caution The new settings become valid when the main power switch has been turned off and then on.

Method of operation 1) Select the item whose setting you want to change, and press the +/-key.
2) See that each press on the +/-key changes the setting.
3) When all items are as you want, press the OK key.
4) Turn off and then on the main power switch.

Settings XXYYZZAA
XX: country (e.g., JP for Japan)
YY: language (e.g., ja for Japanese)
ZZ: destination (e.g., 00 for Canon)
AA: paper size configuration (e.g., 00 for AB)

15.6.1.1.7 <TEMP-TBL>

0001-0338

T-15-254

Use it to adjust the fixing assembly control temperature.

Setting 0: OFF
1: +5 deg C
2: -5 deg C

Caution The new settings become valid only when the main power switch has been turned off and then on.
[at time of shipment/after RAM initialization: 0]

15.6.1.1.8 <W/SCNR>

0001-0341

T-15-255

Use it to specify the presence/absence of a reader unit in the case of a copier model.

Caution The new settings become valid when the main power switch has been turned off and then on.

Setting 0: printer model
1: model w/ leader
[at time of shipment: 1/after RAM initialization: 0]

15.6.1.1.9 <RUI-DSP>

0001-7220

T-15-256

Use it to permit or not to permit the selection of copier functions on the RUI screen.

Setting 0: disable display of copier screen on RUI
1: enable display of copier screen on RUI
[at time of shipment/after RAM initialization: 0]

15.6.1.1.10 <NW-SPEED>

0001-0342

T-15-257

Use it to select a data transfer speed for connection to a network for service work.

Setting 0: Auto
1: 100Base-TX
2: 10Base-T
[at time of shipment/after RAM initialization: 0]

15.6.1.1.11 <ADJ-LVL>

0006-1207

T-15-258

Use it to select an operation mode for patch detection.

Of the automatic adjusting sequences used, decreasing/increasing the frequency of potential control/primary transfer ATVC will lead to decrease/increase productivity.

Method of Adjustment A higher setting will increase the adjustment intervals and, thus, increase the productivity; it, however, will also increase color fluctuation.

Note: The new setting will not be valid until the power switch has been turned off and then back on.

Settings 0 to 4
at time of shipment/upon RAM initialization: 0

15.6.1.1.12 <INTROT-1>

0006-4071

T-15-259

intervals of executing ATVC during initial multiple rotation (number of prints)

-Increase the setting if soiling in the form of dots occurs in keeping with drum rotation (i.e., by increasing the intervals of ATVC control).

-Decrease the setting if transfer faults occurs (i.e., by decreasing the intervals of ATVC control).

Note The new setting will not be valid until the power switch has been turned off and then back on.

Settings 0 to 240
at time of shipment/upon RAM initialization: 90

15.6.1.1.13 <INTROT-2>

0005-6627

T-15-260

Use it to set intervals (in terms of the number of sheets) for process auto adjustment (full, at time of initial/last rotation) executed at specific intervals.

Attention The new setting will not be valid until the power switch has been turned off and then on.

Settings range of settings: 50 to 1000 (in terms of A4)
at time of shipment/upon RAM initialization: 200

15.6.1.1.14 <AUTO-DH>

0005-6679

T-15-261

Use it to enable/disable auto gradation correction for standby. The auto gradation correction mechanism is started in response to changes in the environment or when the machine is left alone in standby for a specific period of time.

Attention The new setting will not be valid until the power switch has been turned off and then on.

Settings 0: prohibit
1: permit (default)
at time of shipment/upon RAM initialization: 1

15.6.1.1.15 <DFDST-L1>

0001-7756

T-15-262

Use it to adjust the dust detection level (sheet-to-sheet correction) used when the DF is in use.

Method of adjustment	A higher setting enables the detection of smaller particles of dust.
Range of adjustment	0 to 255 [at time of shipment/after RAM initialization: 205]

15.6.1.1.16 <DFDST-L2>

0001-7758

T-15-263

Use it to adjust the dust detection level (post-job) valid when the DF is in use.

Method of adjustment	A higher setting enables the detection of smaller particles of dust.
Range of adjustment	0 to 255 [at time of shipment/after RAM initialization: 205]

15.6.1.1.17 <ENVP-INT>

0001-9453

T-15-264

Use it to set the intervals at which logs are obtained for the machine inside temperature/humidify and fixing temperature.
(COPIER>FUNCTION>MISC-P>ENV-PRT and
COPIER>DISPLAY>ENVRNT)

Range of Setting	0 to 480 (min) [at time of shipment/after RAM initialization: 60]
Reference	If 0, no log is obtained.

15.6.1.1.18 <T1-TEMP>

0005-6685

T-15-265

Use it to switch over the heavy paper 1 down sequence tables.

Attention	The new setting will not be valid until the power switch has been turned off and then on.
Settings	0: default 1: priority on fixing 2: priority on productivity at time of shipment/upon RAM initialization: 0

15.6.1.1.19 <T2-TEMP>

0005-6687

T-15-266

Use it to switch over the heavy paper 2 down sequence tables.

Attention	The new setting will not be valid until the power switch has been turned off and then on.
Settings	0: default 1: priority on fixing 2: priority on productivity at time of shipment/upon RAM initialization: 0

15.6.1.1.20 <BLNK-THP>

0005-6690

T-15-267

Use it to switch over leading edge margins for heavy paper 1/2 (color only; remedy against horizontal lines along leading edge).

Attention	The new setting will not be valid until the power switch has been turned off and then on.
Settings	0: default margin 1: 7 mm (leading edge margin median value) at time of shipment/upon RAM initialization: 0

15.6.1.1.21 <CD-IDL-T>

0005-6693

T-15-268

Use it to adjust the duration of idle rotation for IDL-T (color developing assembly YMC; otherwise executed first in the morning in a high humidity environment).

-a setting toward '-' will reduce the downtime associated with initial multiple rotation, but will not compensate fully for changes in density.

-a setting toward '+' will fully compensate for changes in density, but will increase downtime associated with initial multiple rotation.

Attention	The new setting will not be valid until the power switch has been turned off and then on.
settings range	-3 to +6 (unit: 5 sec) at time of shipment/upon RAM initialization; 0

15.6.1.1.22 <OHP-SPED>

0005-6695

T-15-269

Use it to switch over the cpm for value BK OHT (remedy against adhesion upon delivery).

Attention The new setting will not be valid until the main power switch has been turned off and then on.

Settings 0: 40 cpm if w/ finisher; 20 cpm if w/o finisher
1: 20 cpm
2: 10 cpm
at time of shipment/upon RAM initialization: 0

15.6.1.1.23 <FX-CROT>

0005-6696

T-15-270

Use it to change the intervals at which the fixing roller is rotated idly (remedy against deformation of the roller).

The fixing roller is rotated idly for 1 sec once every 30 min (default) to prevent it from suffering deformation while the machine remains in standby.

Attention The new setting will not be valid until the power switch has been turned off and then on.

settings range 0: 30 min
1: 20 min
2: 10 min
3: 5 min
at time of shipment/upon RAM initialization: 0

15.6.1.1.24 <DRM-DISP>

0006-1496

T-15-271

Use it to enable/disable the message for drum phase shifting.

If the E310's photopositive drum is used with its home position unchanged in relation to the drum shaft, uneven density at drum intervals or lines can occur in output images.

To limit the symptom, the phase of the photosensitive drum is shifted by 90 deg every specific number of prints. The machine does not shift the phase on its own, and requires the work of the service person.

When needed, the machine issues a message to prompt the work on the User screen and the Service Mode screen.

Use this mode item to enable/disable the message.

Note The new setting will not be valid until the power switch has been turned off and then back on.

Settings 0: disable message
1: indicate only in service mode (default)
2: indicate on both User and Service Mode screens
The message will go off automatically when the following is executed:
COPIER>FUNCTION>MISC-P>DR-P-ADJ.
at time of shipment/upon RAM initialization: 1
-To change the number of prints after which the message is indicated for
COPIER>OPTION>BODY>DRM-DISP, change the denominator in
COPIER>COUNTER>MISC>DRM-PHAS.

15.6.1.2 USER

15.6.1.2.1 Overview

0001-0351

Making User-Related Settings

15.6.1.2.2 <COPY-LIM>

0005-6748

T-15-272

Use it to change the upper limit on the copy count.

Settings 1 to 9999 (prints)
at time of shipment/upon RAM initialization: 9999

15.6.1.2.3 <SLEEP>

0001-0353

T-15-273

Use it to enable/disable the sleep function.

Setting

0: OFF

1: ON

[at time of shipment/after RAM initialization: 1]

Reference

To set up the sleep function, use [timer setting] in user mode.

15.6.1.2.4 <WEB-DISP>

0005-7195

T-15-274

Use it to enable/disable the indication of the message "Web Out" on the user screen.

Settings

0: do not display

1: display

at time of shipment/upon RAM initialization: 1

15.6.1.2.5 <COUNTER 1>

0001-0354

T-15-275

Use it to set the software counter 1 on the user mode screen.

Setting

101: total 1

[at time of shipment/after RAM initialization: 1 (fixed; cannot be changed)]

15.6.1.2.6 <COUNTER 2>

0001-0356

T-15-276

Use it to change the type of software counter 2 on the control panel to suit the needs of the user or dealer.

Range of setting

0 to 999

[at time of shipment/after RAM initialization: 108]

Reference

The type of counter may be changed to suit the needs of the user and dealer.

15.6.1.2.7 <COUNTER 3>

0001-0357

T-15-277

Use it to change the type of soft counter 3 on the control panel to suit the needs of the user or the dealer.

Range of setting 0 to 999
[at time of shipment/after RAM initialization; 232]

Reference The type of counter may be changed to suit the needs of the user or the dealer.

15.6.1.2.8 <COUNTER 4>

0001-0358

T-15-278

Use it to change the type of software counter 4 on the control panel to suit the needs of the user or the dealer.

Range of setting 0 to 999
[at time of shipment/after RAM initialization: 324]

Reference The type of counter may be changed to suit the needs of the user or the dealer.

15.6.1.2.9 <COUNTER 5>

0001-0360

T-15-279

Use it to change the type of software counter 5 on the control panel to suit the needs of the user or the dealer.

Range of setting 0 to 999
[at time of shipment/after RAM initialization: 0]

Reference The type of counter may be changed to suit the needs of the user or the dealer.

15.6.1.2.10 <COUNTER 6>

0001-0361

T-15-280

Use it to change the type of software counter 6 on the control panel to suit the needs of the user or the dealer.

Range of setting 0 to 999
[at time of shipment/after RAM initialization: 0]

Reference The type of counter may be changed to suit the needs of the user or the dealer.

15.6.1.2.11 Software Counter Specifications

0001-0364

<Software Counter Specifications>

The software counters are classified as follows according to input numbers:

T-15-281

000's: remote copy	500's: scan
100's: total copies	600's: box
200's: copies	700's: received prints
300's: prints	800's: report prints
400's: copier + prints	

Guide to the Table

-yes: counter valid for the machine

-4C: full color

-mono: mono color (Y, M, C/R, G, B/aged mono)

-Bk: black mono

-L: large-sized (B4 or smaller)

-S: small-size (paper of B4 or smaller)

-1/2: under "count of," the number of counts given to large-size paper.

You may change the following in service mode so that the paper as large as and larger than B4 is counted as large-size paper: COPIER>OPTION>USER>B4_L_CNT.

-copy: local copy + remote copy

-copy A: local copy + remote copy + box print

-print: PDL print + report print + box print

-print A: PDL print + report print

-scan: black-and-white scan + color scan

T-15-282

yes/no	No.	Description
	000	no indication
yes	002	remote copy (full color 1)
yes	003	remote copy (full color 2)
yes	004	remote copy (mono color 1)
yes	005	remote copy (mono color 2)
yes	006	remote copy (black-and-white 1)
yes	007	remote copy (black-and-white 2)
yes	008	remote copy (full color, large)
yes	009	remote copy (full color, small)

yes/no	No.	Description
yes	010	remote copy (mono color, large)
yes	011	remote copy (mono color, small)
yes	012	remote copy (black-and-white, large)
yes	013	remote copy (black-and-white, small)
yes	014	remote copy (full color + mono color, large)
yes	015	remote copy (full color + mono color, small)
yes	016	remote copy (full color + mono color 2)
yes	017	remote copy (full color + mono color 1)
yes	018	remote copy (full color, large, double-sided)
yes	019	remote copy (full color, small, double-sided)
yes	020	remote copy (mono color, large, double-sided)
yes	021	remote copy (mono color, small, double-sided)
yes	022	remote copy (black-and-white, large, double-sided)
yes	023	remote copy (black-and-white, small, double-sided)

T-15-283

yes/no	No.	Description
yes	101	total 1
yes	102	total 2
yes	103	total (large)
yes	104	total (small)
yes	105	total (full color 1)
yes	106	total (full color 2)
yes	108	total (black-and -white 1)
yes	109	total (black-and -white 2)
yes	110	total (mono color, large)
yes	111	total (mono color, small)
yes	112	total (black-and-white, large)
yes	113	total (black-and-white, small)
yes	114	total 1 (double-sided)
yes	115	total 2 (double-sided)
yes	116	large (double-sided)
yes	117	small (double-side)
yes	118	total (mono color 1)
yes	119	total (mono color 2)

yes/no	No.	Description
yes	120	total (full color, large)
yes	121	total (full color, small)
yes	122	total (full color + moo color, large)
yes	123	total (full color + mono color, small)
yes	124	total (full color + mono color 2)
yes	125	total (full color + mono color 1)

T-15-284

yes/no	No.	Description
yes	201	copy (total 1)
yes	202	copy (total 2)
yes	203	copy (large)
yes	204	copy (small)
yes	205	copy A (total 1)
yes	206	copy A (total 2)
yes	207	copy A (large)
yes	208	copy A (small)
yes	209	local copy (total 1)
yes	210	local copy (total 2)
yes	211	local copy (large)
yes	212	local copy (small)
yes	213	remote copy (total 1)
yes	214	remote copy (total 2)
yes	215	remote copy (large)
yes	216	remote copy (small)
yes	217	copy (full color 1)
yes	218	copy (full color 2)
yes	219	copy (mono color 1)
yes	220	copy (mono color 2)
yes	221	copy (black-and-white 1)
yes	222	copy (black-and-white 2)
yes	223	copy (full color, large)
yes	224	copy (full color, small)
yes	225	copy (mono color, large)
yes	226	copy (moo color, small)

yes/no	No.	Description
yes	227	copy (black-and-white, large)
yes	228	copy (black-and-write, small)
yes	229	copy (full color + mono color, large)
yes	230	copy (full color + mono color, small)
yes	231	copy (full color + mono color/2)
yes	232	copy (full color + mono color/1)
yes	233	copy (full color, large, double-sided)
yes	234	copy (full color, small, double-sided)
yes	235	copy (mono color, large, double-sided)
yes	236	copy (mono color, small, double-sided)
yes	237	copy (black-and-white, large, double-sided)
yes	238	copy (black-and-white, small, double-sided)
yes	245	copy A (full color 1)
yes	246	copy A (full color 2)
yes	247	copy A (mono color 1)
yes	248	copy A (mono color 2)
yes	249	copy A (black-and-white 1)
yes	250	copy A (black-and-white 2)
yes	251	copy A (full color, large)
yes	252	copy A (full color, mall)
yes	253	copy A (mono color, large)
yes	254	copy A (mono color, small)
yes	255	copy A (black-and-white, large)
yes	256	copy A (black-and-white, small)
yes	257	copy A (full color + mono color, large)
yes	258	copy A (full color + mono color, small)
yes	259	copy A (full color + mono color 2)
yes	260	copy A (full color + mono color 1)
yes	261	copy A (full color, large, double-sided)
yes	262	copy A (full color, small, double-sided)
yes	263	copy A (mono color, large, double-sided)
yes	264	copy A (mono color, large, double-sided)
yes	265	copy A (black-and-white, large, double-sided)
yes	266	copy A (black-and-white, small, double-sided)
yes	273	local copy (full color 1)

yes/no	No.	Description
yes	274	local copy (full color 2)
yes	275	local copy (mono color 1)
yes	276	local copy (mono color 2)
yes	277	local copy (black-and-white 1)
yes	278	local copy (black-and-white 2)
yes	279	local copy (full color, large)
yes	280	local copy (full color, small)
yes	281	local copy (mono color, large)
yes	282	local copy (mono color, small)
yes	283	local copy (black-and-white, large)
yes	284	local copy (black-and-white, small)
yes	285	local copy (full color + mono color, large)
yes	286	local copy (full color + mono color, small)
yes	287	local copy (full color + mono color 2)
yes	288	local copy (full color + mono color 1)
yes	289	local copy (full color, large, double-sided)
yes	290	local copy (full color, small, double-sided)
yes	291	local copy (mono color, large, double-sided)
yes	292	local copy (mono color, small, double-sided)
yes	293	local copy (black-and-white, large, double-sided)
yes	294	local copy (black-and-white, small, doubles-sided)

T-15-285

yes/no	No.	Description
yes	301	print (total 1)
yes	302	print (total 2)
yes	303	print (large)
yes	304	print (small)
yes	305	print A (total 1)
yes	306	print A (total 2)
yes	307	print A (large)
yes	308	print A (small)
yes	309	print (full color 1)
yes	310	print (full color 2)
yes	311	print (mono color 1)

yes/no	No.	Description
yes	312	print (mono color 2)
yes	313	print (black-and-white 1)
yes	314	print (black-and-white 2)
yes	315	print (full color, large)
yes	316	print (full color, small)
yes	317	print (mono color, large)
yes	318	print (mono color, small)
yes	319	print (black-and-white, large)
yes	320	print (black-and-large, small)
yes	321	print (full color + mono color, large)
yes	322	print (full color + mono color, small)
yes	323	print (full color + mono color/2)
yes	324	print (full color + mono color/1)
yes	325	print (full color, large, double-sided)
yes	326	print (full color, small, double-sided)
yes	327	print (mono color, large, double-sided)
yes	328	print (mono color, small, double sided)
yes	329	print (black-and-white, large, double-sided)
yes	330	print (black-and -white, small, double-sided)
yes	331	PDL print (total 1)
yes	332	PDL print (total 2)
yes	333	PDL print (large)
yes	334	PDL print (small)
yes	335	PDL print (full color 1)
yes	336	PDL print (full color 2)
yes	339	PDL print (black-and-white 1)
yes	340	PDL print (black-and-white 2)
yes	341	PDL print (full color, large)
yes	342	PDL print (full color, small)
yes	345	PDL print (black-and-white, large)
yes	346	PDL print (black-and-white, small)
yes	351	PDL print (full color, large, double-sided)
yes	352	PDL print (full color, small, double-sided)
yes	355	PDL print (black-and-white, large, double-sided)
yes	356	PDL print (black-and-white, small, double-sided)

T-15-286

yes/no	No.	Description
yes	401	copy + print (full color, large)
yes	402	copy + print (full color, small)
yes	403	copy + print (black-and-white, large)
yes	404	copy + print (black-and-white, small)
yes	405	copy + print (black-an-white 2)
yes	406	copy + print (black-and-white 1)
yes	407	copy + print (full color + mono color, large)
yes	408	copy + print (full color + mono color, small)
yes	409	copy + print (full color + mono color/2)
yes	410	copy + print (full color + mono color/1)
yes	411	copy + print (large)
yes	412	copy + print (small)
yes	413	copy + print (2)
yes	414	copy + print (1)
yes	415	copy + print (mono color, large)
yes	416	copy + print (mono color, small)
yes	417	copy + print (full color, large, double-sided)
yes	418	copy + print (full color, small, double-sided)
yes	419	copy + print (mono color, large, double-sided)
yes	420	copy + print (mono color, small, double-sided)
yes	421	copy + print (black-and-white, large, double-sided)
yes	422	copy + print (back-and-white, small, double-sided)

T-15-287

yes/no	No.	Description
yes	501	scan (total 1)
-	502	scan (total 2)
-	503	scan (large)
-	504	scan (small)
yes	505	black-and-white (total 1)
-	506	black-and-white (total 2)
-	507	black-and-white (large)
-	508	black-and-white scan (small)

yes/no	No.	Description
yes	509	color scan (total 1)
-	510	color scan (total 2)
-	511	color scan (large)
-	512	color scan (small)

T-15-288

yes/no	No.	Description
yes	601	box print (total 1)
yes	602	box print (total 2)
yes	603	box print (large)
yes	604	box print (small)
yes	605	box print (full color 1)
yes	606	box print (full color 2)
yes	607	box print (mono color 1)
yes	608	box print (mono color 2)
yes	609	box print (black-and-white 1)
yes	610	box print (black-and-white 2)
yes	611	box print (full color, large)
yes	612	box print (full color, small)
yes	613	box print (mono to color, large)
yes	614	box print (mono color, small)
yes	615	box print (black-and-white, large)
yes	616	box print (black-and-white, small)
yes	617	box print (full color + mono color, large)
yes	618	box print (full color + mono color, small)
yes	619	box print (full color + mono color 2)
yes	620	box print (full color + mono color 1)
yes	621	box print (full color, large, double-sided)
yes	622	box print (full color, small, double-sided)
yes	623	box print (mono color, large, double-sided)
yes	624	box print (mono color, small, double-sided)
yes	625	box print (black-and-white, large, double-sided)
yes	626	box print (black-and-white, small, double-sided)

T-15-289

yes/no	No.	Description
yes	701	reception print (total 1)
yes	702	reception print (total 2)
yes	703	reception print (large)
yes	704	reception print (small)
-	705	reception print (full color 1)
-	706	reception print (full color 2)
-	707	reception print (grayscale 1)
-	708	reception print (grayscale 2)
yes	709	reception print (black-and-white 1)
yes	710	reception print (black-and-white 2)
-	711	reception print (full color, large)
-	712	reception print (full color, small)
-	713	reception print (grayscale, large)
-	714	reception print (grayscale, small)
yes	715	reception print (black-and-white, large)
yes	716	reception print (black-and-white, small)
-	717	reception print (full color + grayscale, large)
-	718	reception print (full color + grayscale, small)
-	719	reception print (full color + grayscale 2)
-	720	reception print (full color, grayscale 1)
-	721	reception print (full color, large, double-sided)
-	722	reception print (full color, small, double-sided)
-	723	reception print (grayscale, large, double-sided)
-	724	reception print (grayscale, small, double-sided)
yes	725	reception print (black-and-white, large, double-sided)
yes	726	reception print (black-and-white, small, double-sided)

T-15-290

yes/no	No.	Description
yes	801	report print (total 1)
yes	802	report print (total 2)
yes	803	report print (large)
yes	804	report print (small)

yes/no	No.	Description
-	805	report print (full color 1)
-	806	report print (full color 2)
-	807	report print (grayscale 1)
-	808	report print (grayscale 2)
yes	809	report print (black-and-white 1)
yes	810	report print (black-and-white 2)
-	811	report print (full color, large)
-	812	report print (full color, small)
-	813	report print (grayscale, large)
-	814	report print (grayscale, small)
yes	815	report print (black-and-white, large)
yes	816	report print (black-and-white, small)
-	817	report print (full color + grayscale, large)
-	818	report print (full color + grayscale, small)
-	819	report print (full color + grayscale 2)
-	820	report print (full color + grayscale 1)
-	821	report print (full color, large, double-sided)
-	822	report print (full color, small, double-sided)
-	823	report print (grayscale, large, double-sided)
-	824	report print (grayscale, small, double-sided)
yes	825	report print (black-and-white, large, double-sided)
yes	826	report print (black-and-white, small, double-sided)

T-15-291

yes/no	No.	Description
-	901	copy scan total 1 (color)
-	902	copy scan total 1 (black-and-white)
-	903	copy scan total 2 (color)
-	904	copy scan total 2 (black-and-white)
-	905	copy scan total 3 (color)
-	906	copy scan total 3 (black-and-white)
-	907	copy scan total 4 (color)
-	908	copy scan total 4 (black-and-white)
-	909	local copy scan (color)
-	910	local coy scan (black-and-white)

yes/no	No.	Description
-	911	remote copy scan (color)
-	912	remote copy scan (black-and-white)
-	913	transmission scan total 1 (color)
-	914	transmission scan total 1 (black-and-white)
yes	915	transmission scan total 2 (color)
yes	916	transmission scan total 2 (black-and-white)
yes	917	transmission scan total 3 (color)
yes	918	transmission scan total 3 (black-and-white)
-	919	transmission scan total 4 (color)
-	920	transmission scan total 4 (black-and-white)
yes	921	transmission scan total 5 (color)
yes	922	transmission scan total 5 (black-and-white)
yes	929	transmission scan total 6 (color)
yes	930	transmission scan total 6 (black-and-white)
-	931	transmission scan total 7 (color)
-	932	transmission scan total 7 (black-and-white)
-	933	transmission scan total 8 (color)
-	934	transmission scan total 8 (black-and-white)
-	935	universal transmission scan total (color)
-	936	universal transmission scan total (black-and-white)
yes	937	box scan (color)
yes	938	box scan (black-and-white)
yes	939	remote scan (color)
yes	940	remote scan (black-and-white)
-	941	transmission scan/fax (color)
-	942	transmission scan/fax (black-and-white)
-	943	transmission scan/i fax (color)
-	944	transmission scan/i fax (black-and-white)
yes	945	transmission scan/e-mail (color)
yes	946	transmission scan/e-mail (black-and-white)
-	947	transmission scan/FTP (color)
-	948	transmission scan/FTP (black-and-white)
-	949	transmission scan/SMB (color)
-	950	transmission scan/SMB (black-and-white)
-	951	transmission scan/IPX (color)

yes/no	No.	Description
-	952	transmission scan/IPX (white-and-white)
-	953	transmission scan/database (color)
-	954	transmission scan/database (black-and-white)
-	955	transmission scan/local print (color)
-	956	transmission scan/local print (black-and-white)
-	957	transmission scan/box (color)
-	958	transmission scan/box (black-and-white)

15.6.1.2.12 <CONTROL>

0001-7227

T-15-292

Use it to limit the use of a control card for a PDL job.

setting

0: disable

1: enable

[at time of shipment/after RAM initialization: 0]

15.6.1.2.13 <B4-L-CNT>

0001-0367

T-15-293

Use it to set so that soft counters 1 through will count B4 as being of large size or small size.

Setting

0: small size

1: large size

[at time of shipment/after RAM initialization: 0]

15.6.1.2.14 <COPY-JOB>

0001-0368

T-15-294

Use it to disable the copy job reservation function when the card reader or the coin vendor is in use.

Setting

0: enable copy job reservation function

1: disable copy job reservation function

[at time of shipment/after initialization: 0]

15.6.1.2.15 <TAB-ROT>

0005-6752

T-15-295

Use it to enable/disable 180-deg rotation of a landscape image for a tab sheet.

Settings

0: do not rotate

1: rotate

at time of shipment/upon RAM initialization: 0

15.6.1.2.16 <IDPRN-SW>

0006-2154

T-15-296

Use it to switch between types of count jobs for group counters.

Setting

0: count the following for PRINT: box print, report print, send local print, PDL print.

1: count the following for PRINT: report printout, send local print, PDL print

[at time of shipment/after RAM initialization: 0]

15.6.1.2.17 <CPRT-DSP>

0005-6756

T-15-297

Use it to enable/disable indication of the count button on the Sales Counter Check screen.

Settings

0: do not indicate

1: indicate

at time of shipment/upon RAM initialization: 1

15.6.1.2.18 <CNT-SW>

0001-7228

T-15-298

Use it to switch between counter display items.

counters to use

when set to '0'

101 total 1

108 total <black-and-white 1>

232 copy <full color + mono color/1>

324 print <full color + mono color/1>

when set to '1'

102 total 2

231 copy <full color + mono color/2>

222 copy <black-and-white 2>

133 total A <black-and-white 2>

[at time of shipment/after RAM initialization: 0]

15.6.1.2.19 <BCNT-AST>

0001-7230

T-15-299

Use it to set a count for Box printing in relation to the NE controller.

Setting

0: count box print job as PDL job

1: count box print job as copy job

[at time of shipment/after RAM initialization: 0]

15.6.1.2.20 <DFLT-CPY>

0001-7231

T-15-300

Use it to set the default color mode for COPY.

setting

0: ACS

1: full color

2: black-and-white

JPN [at time of shipment/after RAM initialization: 2]

UL [at time of shipment/after RAM initialization: 0]

EUR [at time of shipment/after RAM initialization: 2]

other destination [at time of shipment/after RAM initialization: 2]

15.6.1.2.21 <DFLT-BOX>

0001-7232

T-15-301

Use it to set the default color mode for BOX.

setting

0: ACS

1: full color

2: black-and-white

JPN [at time of shipment/after RAM initialization: 2]

UL [at time of shipment/after RAM initialization: 0]

EUR [at time of shipment/after RAM initialization: 2]

other destinations [at time of shipment/after RAM initialization: 2]

15.6.1.2.22 <DOC-REM>

0001-7233

T-15-302

Use it to enable/disable the message used to prompt removal of originals.

setting

0: disable

1: enable

[at time of shipment/after RAM initialization: 0]

15.6.1.3 CST

15.6.1.3.1 Overview

0001-7255

Registering the Envelope Cassette Size

15.6.1.3.2 <P-SZ-C1>

0005-6766

T-15-303

Use it to select and register paper size for the cassette 1.

Settings

0: A4

1: B5

2: LTR

at time of shipment/upon RAM initialization: 0

15.6.1.3.3 <P-SZ-C2>

0006-0104

T-15-304

Use it to select and register paper size for the cassette 2.

Settings

0: A4

1: B5

2: LTR

at time of shipment/upon RAM initialization: 0

15.6.1.4 ACC

15.6.1.4.1 Overview

0001-0373

Making Accessory-Related Machine Settings

15.6.1.4.2 <COIN>

0005-6769

T-15-305

Use it set up the coin vendor mechanism.

Settings

0: coin vendor not used (control card permitted; no charging)

1: coin vendor (charging used)

2: remote counter (charging used)

at time of shipment/upon RAM initialization: 0

15.6.1.4.3 <DK-P>

0001-0375

T-15-306

Use it to set the paper size for the paper deck (option).

setting

0: A4 [at time of shipment/after RAM initialization: 0]

1: not supported

2: LTR

15.6.1.4.4 <CARD-SW>

0001-0376

T-15-307

Use it to switch between UI screens for support of the coin vendor function.

setting

0: coin [at time of shipment/after RAM initialization: 0]

1: card

2: coin & card

15.6.1.5 INT-FACE

15.6.1.5.1 Overview

0001-0378

Setting Up Conditions for Connection to an External Controller

15.6.1.5.2 <IMG-CONT>

0001-0380

T-15-308

Use it to make settings for connection to an EFI controller.

setting	0: normal operation
	1: not used
	2: not used
	3: EFI controller in use
	4: not used
	5: not used

Caution If set to '1', the following returns to its initial setting:
 -system control setup>network setup>TCP/IP setup>IP address setup>IP address

-system control setup>network setup>TCP/IP setup>IP address setup>sub net mask
 -system control setup>network setup>IP address setup>gateway address
 -system control setup>network setup>TCP/IP setup>Ethernet driver setup>communication system
 -system control setup>network setup>TCP/IP setup>Ethernet driver setup>Ethernet type
 -system control setup>network setup>TCP/IP setup>start-up time

Moreover, the following user mode settings will be set to OFF.

-system control setup>network setup>TCP/IP setup>IP address setup>DHCP in use
 -system control setup>network setup>TCP/IP setup>IP address setup>RARP in use
 -system control setup>network setup>TCP/IP setup>IP address setup>BOOTP in use
 -system control setup>network setup>TCP/IP setup>Ethernet driver setup>auto detection
 -system control setup>network setup>spool function in use
 -If set to '3' or '4', the following settings will be OFF in addition to the foregoing:
 -system control setup>network setup>TCP/IP setup>RAW setup
 -system control setup>network setup>TCP/IP setup>LPD setup
 -system control setup>network setup>TCP/IP setup>IPP print
 -system control setup>network setup>SMB setup

You will have to newly make settings for the foregoing items, as they will not return to their initial settings even when '0: normal mode' is selected.

-system control setup>network setup>TCP/IP setup>IP address setup>sub net mask
-system control setup>network setup>TCP/IP setup>IP address setup>gateway address
-system control setup>network setup>TCP/IP setup>Ethernet driver setup>communication method
-system control setup>network setup>TCP/IP setup>Ethernet driver setup>Ethernet type
-system control setup>network setup>TCP/IP setup>startup

Moreover, the following user mode settings will be OFF:

-system control setup>network setup>TCP/IP setup>IP address setup>DHCP in use
-system control setup>network setup>TCP/IP setup>IP address setup>RARP in use
-system control setup>network setup>TCP/IP setup>IP address setup>BOOTP in use
-system control setup>network setup>TCP/IP setup>Ethernet driver setup>auto detection
-system control setup>network setup>spool function in use

-If '3' or '4' is set, the following settings will be OFF in addition to the foregoing items:

-system control setup>network setup>TCP/IP setup>RAW setup
-system control setup>network setup>TCP/IP setup>LPD setup
-system control setup>network setup>TCP/IP setup>IPP print
-system control setup>network setup>SMB setup

You will have to newly make settings for the foregoing items, as they will not return to their initial settings even when '0: normal mode' is selected.

15.6.2 FEEDER

15.6.2.1 <LS-DBL>

0006-0300

T-15-309

Use it to enable/disable ADF high-speed duplex mode.

The mode may be disabled if the user uses an original size that is not suited to ADF high-speed duplex mode.

settings range 1: off (do not execute high-speed duplex mode; use low-speed duplex mode)
 0: on (execute high-speed duplex mode; normal, default)

15.6.2.2 <STAMP-SW>

0006-0301

T-15-310

Use it to specify the presence/absence of the stamp.

This mode item indicates the presence/absence of the stamp, and is designed for use by the service person.

settings 0:stamp absent
 1:stamp present
 at time of shipment/upon RAM initialization: 0

15.6.3 SORTER

15.6.3.1 Overview

0001-7259

Making Finisher-Related Machine Settings


15.6.3.2 <BLNK-SW>

0001-0420

T-15-311

Use it to set the marking width (W) for both sides of the crease for the saddle stitcher in use.

Setting 0: normal width (5 mm)
 1: large width (10 mm)
 [at time of shipment/after RAM initialization: 1]

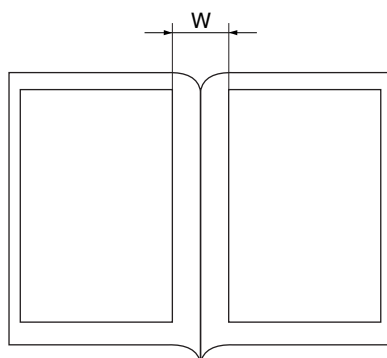

F-15-24

15.6.3.3 <MD-SPRTN>

0001-7260

T-15-312

Use it to limit the finisher functions.

setting 0: normal
 1: enable functional separation
 [at time of shipment/after RAM initialization: 0]

15.6.4 BOARD

15.6.4.1 Overview

0001-7261

Making Option Board-Related Machine Settings

15.6.4.2 <SURF-OFF>

0001-0421

T-15-313

Use it to enable/disable the UFR board function.

setting

0: enable operation as copier model without E code indication in absence of UFR board

1: check presence of UFR board; if absent, indicate E code [at time of shipment/after RAM initialization: 0]

15.6.5 OPTION (mechanical specifications setting mode):Level 2

15.6.5.1 COPIER

15.6.5.1.1 BODY

<W-CLN-P>

0005-6726

T-15-314

Use it to set the intervals at which the primary charging wire/pre-transfer charging wire is automatically cleaned in a normal environment in terms of the number of copies.

The new setting will not be valid until the main power switch has been turned off and then back on.

Note

The new setting will not be valid until the power switch has been turned off and then back on.

Range of settings

100p to 2000
at time of shipment/RAM initialization: 2000

<PRI-FAN>

0006-3954

T-15-315

Use it to select a primary fan drive mode.

Use it to prevent soiling in the form of dots occurring in keeping with drum rotation.

The temperature of the cleaning blade may be decreased so that the machine will better be able to remove the ingredients of the black toner sticking to the drum.

Note The new setting will not be valid until the power switch has been turned off and then back on.

Settings 0: in high temperature/humidity environment, half-speed
1: in high temperature/humidity environment, full-speed
at time of shipment/upon RAM initialization 0

<SCANSLCT>

0001-0438

T-15-316

Use it to enable/disable the function the machine uses to compute the scan area based on the selected paper size.

setting 0: OFF (determine scan based on original size)
1: ON (determine scan area based on paper size)
[at time of shipment/after RAM initialization: 0]

<OHP-TEMP>

0005-6733

T-15-317

Use it to switch over down sequence tables for transparencies and heavy paper 3.

Note The new setting will not be valid until the power switch has been turned off and then on.

Settings 0: default
1: priority on fixing
2: priority on productivity
at item of shipment/upon RAM initialization: 0

<DH-SW>

0001-7485

T-15-318

Use it to execute Dhalf.

Settings 0: do not execute Dhalf control
1: execute Dhalf control
at time of shipment/upon RAM initialization: 1

<DM-MODE>

0005-6735

T-15-319

Use it to enable/disable image density correction control as part of auto gradation correction (PASCAL)

Attention The new setting will not be valid until the power switch has been turned off and then on.

Settings 0: do not execute
1: execute
at time of shipment/upon RAM initialization: 0

<SENS-CNF>

0001-7486

T-15-320

Use it to select the original sensor configuration.

setting 0: AB-configuration [at time of shipment/after RAM initialization: 0]
1: Inch-configuration

<DM-SW>

0005-6737

T-15-321

Use it to enable/disable image gradation correction or image density correction executed after making a specific number of copies.

Note The new setting will not be valid until the power switch has been turned off and then on again.

Setting 0:disable
1:execute every 200 prints up to initial 2000 prints
2:execute every 200 prints up to initial 4000 prints
3:execute at al times (every 200 prints)
4:reserved

at time of shipment/upon RAM initialization: 3

To change the intervals of execution (default at 200 prints), use
COPIER>OPTION>BODY>INTROT2.

<RAW-DATA>

0001-0447

T-15-322

Use it to specify how received data should be printed out.

setting

0: normal operation

1: print as is

[at time of shipment/after RAM initialization: 0]

If received images have a fault, use it to isolate the cause between data itself and image processing.

<BK-BND>

0005-6739

T-15-323

Use it to increase the black belt in 4C mode.

Use it to prevent photosensitive drum cleaning faults in an N/L environment.

Note

The new setting will not be valid until the power switch has been turned off and then back on.

Settings

0: increase by 100%

1: increase by 150%

2: increase by 20%

at time of shipment/upon RAM initialization: 0

<FDW-DLV>

0005-6740

T-15-324

Use it to select face-up or face-down delivery when multiple sets are specified.

When multiple sets are specified, the machine uses face-up delivery. To ensure a specific level of stacking performance, however, the machine offers a mode for face-down delivery.

(This choice is not valid if a finisher is installed.)

Note

The new setting will not be valid until the power switch has been turned off and then back on.

Settings

0: use face-up delivery if no more than 1 original

1: use face-up delivery if no more than 1 original, but face-down delivery if set for multiple sets

at time of shipment/upon RAM initialization: 0

<RMT-LANG> 0001-0451

T-15-325

Method of setting Use it to select a language code by means of the +/-key of the remote UI used through the Web.

<IFAX-LIM> 0001-0452

T-15-326

Use it to limit the number of output lines for a large volume of data coming through i-fax.

setting 0: no limit
0 to 999 [at time of shipment/after RAM initialization: 500]

<TR-CLN> 0006-4122

T-15-327

Use it to execute the cleaning sequence designed to avoid soiling on the back of paper caused by the secondary transfer roller.

Settings 77-mm back soiling preventive mode
0: execute only in H/H environment
1: disable in all environments
2: enable in all environments
at time of shipment/upon RAM initialization: 0

<SMTPXPN> 0001-0456

T-15-328

Use it to change the SMTP transmission port number.

Range of setting 0 to 65535 (increments of '1')
[at time of shipment/after RAM initialization: 25]

<SMTPRXPN>

0001-0459

T-15-329

Use it to change the SMTP reception port number.

Range of
setting

0 to 65535 (in increments of '1')

[at time of shipment/after RAM initialization: 25]

<POP3PN>

0001-0462

T-15-330

Use it to change the POP reception port number.

Range of
setting

0 to 65535 (in increments of '1')

[at time of shipment/after RAM initialization: 110]

<ORG-LGL>

0001-0468

T-15-331

Use it to set a special paper whose size may not be recognized by the DF.

setting

0: LEGAL [at time of shipment/after RAM initialization]

1: FOOLSCAP

2: A-FOOLSCAP

3: FORIO

4: G-LEGAL

5: OFFICIO

6: E-OFFICIO

7: A-OFFICIO

8: B-OFFICIO

9: A-LEAGAL

10: M-OFFICIO

<ORG-LTR>

0001-0470

T-15-332

Use it to set a special paper whose size may not be recognized by the DF.

setting

0: LTR [at time of shipment/after RAM initialization]

1: G-LTR

2: A-LTR

3: EXECUTIVE

<ORG-LTRR>

0005-6745

T-15-333

Use it to set a special paper size not recognized by the DF size detection mechanism.

Settings

0: LTR (at time of shipment/upon RAM initialization)

1: G-LTR

2: A-LTR

3: EXECUTIVE

<ORG-B5>

0001-7489

T-15-334

Use it to set a special paper whose size may not be recognized by the DF.

setting

0: B5 [at time of shipment/after RAM initialization]

1: K-LEAGAL

<UI-BOX>

0001-0472

T-15-335

Use it to enable/disable the control panel box screen.

setting

0: disable

1: enable [at time of shipment/after RAM initialization]

<UI-SEND>

0001-0476

T-15-336

Use it to enable/disable the display of the transmission screen on the control panel.

setting

0: disable

1: enable [at time of shipment/after RAM initialization]

<UI-FAX>

0001-0478

T-15-337

Use it to enable/disable the display of the environment screen on the control panel.

setting

0: disable

1: enable [at time of shipment/after RAM initialization]

<UI-EXT>

0001-0479

T-15-338

Use it to enable/disable the display of the extended screen on the control panel.

setting

0: disable

1: enable [at time of shipment/after RAM initialization]

<SCR-SLCT>

0001-0491

T-15-339

Use it to specify how halftone must be processed in photo mode.

setting

0: use error diffusion

1: use low-number screen [at time of shipment/after RAM initialization]

2: use high-number screen

<TMC-SLCT>

0001-0492

T-15-340

Use it to switch between coefficients for error diffusion.

- setting
- 0: standard
 - 1: Texture Feel Smooth (less coarse)/stability low
 - 2: Texture Feel Rough (more coarse)/stability high

<D-CLN-TM>

0006-3974

T-15-341

Use it to change the length of drum idle rotation.

Use it to prevent soiling in the form of dots occurring in keeping with drum rotation.

The machine executes idle rotation when it is turned on to remove residual matter from the drum.

Note The new setting will not be valid until the power switch has been turned off and then back on.

Settings

- 0: do not execute idle rotation
- 1: execute idle rotation for 30 sec
- 2: execute idle rotation for 60 sec

at time of shipment/upon RAM initialization: 0
Settings 3 through 6 are reserved (currently invalid).

<DEVL-VTH>

0005-6749

T-15-342

Use it to set a threshold for image density over which the machine will execute discharge sequence (designed as a remedy against rough image texture on copies of low-density images made in continuous printing).

If possible, do not use it as long as machine operation is normal.

Attention The new setting will not be valid until the machine is turned on and then off.

settings range

- 1 to 5 (unit: %)

at time of shipment/upon RAM initialization: 2)

<FTPTXPN>

0001-0510

T-15-343

Use it to select a name for the target SEND port (FTP).

Range of Setting 0 through 65535 (16-bit) [at time of shipment/after RAM initialization: 21]

<PRN-FLG>

0005-6751

T-15-344

Selecting an Image Area Flag (for PDL images)

In the event that the controller fails to compress a PDL image at a specific rate of compression, image processing will be performed according to the image area flag selected in this mode item.

Attention The new setting will not be valid until the power switch is turned off and then on.

settings range 0: use high-number screen, gray compensation LUT (default)
1: use error diffusion, gray compensation LUT
2: use high-number screen, normal LUT
at time of shipment/upon RAM initialization: 0

<SCN-FLG>

0005-6753

T-15-345

Use it to select an image area flag (for copy image).

If compression at a specific rate fails on the controller over a scan image, image processing will be executed according to the image flag selected in this mode.

Attention The new setting will not be valid until the power switch has been turned off and then on.

settings range 0: text
1: screened photo image
2: printed photo image
at time of shipment/upon RAM initialization: 0

<T-LW-LVL>

0005-6755

T-15-346

Use it to change the setting at which an alert message is issued for the level of toner.

The threshold (%) of the level of toner over which the message is issued to indicate that toner is running short may be changed. A delay, however, can also result in the absence of toner immediately after the alert message.

Attention The new setting will not be valid until the power switch has been turned off and then on.

settings range 5 to 100
at time of shipment/upon RAM initialization: 10

<NWERR-SW>

0001-0527

T-15-347

Use it to enable/disable network-related error messages.

setting 0: disable
enable [at time of shipment/after RAM initialization]

<FX-SPD>

0005-6757

T-15-348

Use it to adjust the speed of the fixing roller.

If the arching of paper between the secondary transfer roller and the fixing roller is too great, the trailing edge of the paper tends to come into contact with the intermediate transfer belt, causing traces by friction. A change to the speed of fixing will also change the speed of the delivery vertical path roller (fine-adjustment) accordingly. A higher setting will increase the speed.

Attention The setting will not be valid until the power switch has been turned off and then on.

settings range -3 to 3
at time of shipment/upon RAM initialization: 0

<STS-PORT>

0001-7495

T-15-349

Use it to set the TOT synchronous type command communication port.

setting 0: OFF
 1: ON

<CMD-PORT>

0001-7496

T-15-350

Use it to set the TOT asynchronous type status communication port.

setting 0: OFF
 1: ON

<MODELSZ2>

0001-7497

T-15-351

Use it to set the global support function for book mode original detection.

setting 0: normal
 1: AB-configuration/Inch-configuration mixed detection

<SZDT-SW>

0005-6758

T-15-352

Use it to enable/disable the switch-over from CCD size detection to photo size detection for copyboard original size detection.

Attention The setting will not be valid until the power switch has been turned off and then on.

settings range 0: disable photo size detection
 1: enable photo size detection
 at time of shipment/upon RAM initialization: 0

<UISW-DSP>		<u>0003-4744</u>
		T-15-353
	not used	
<ITB-CLN>		<u>0006-4118</u>
		T-15-354
		Use it to execute the ITB black band sequence at time of initial multiple rotation automatic adjustment.
	Settings	0: disable 1: force execution once 2 and 3: reserved (input invalid) at time of shipment/upon RAM initialization: 0
<NS-CMD5>		<u>0001-7499</u>
		T-15-355
		Use it to set CRAM-MD5 authentication under SMTP authentication.
	setting	0: dependent on SMTP server 1: disable
<NS-GSAPI>		<u>0001-7501</u>
		T-15-356
		Use it to set GSSAPI authentication under SMTP authentication.
	setting	0: dependent on SMTP server 1: disable
<NS-NTLM>		<u>0001-7502</u>
		T-15-357
		Use it to set NTLM authentication under SMTP authentication.
	setting	0: dependent on SMTP server 1: disable it

<NS-PLNWS>

0001-7504

T-15-358

Use it to set PLAIN LOGIN authentication under SMTP authentication.
 <environment in which communication packets are subjected to coding>

setting 0: dependent on SMTP server
 1: disable

<NS-PLN>

0001-7505

T-15-359

Use it to set PLAIN LOGIN under SMTP authentication.
 <environment in which communication packages are not subjected to coding>

setting 0: dependent on SMTP server
 1: disable

<NS-LGN>

0001-9640

T-15-360

Use it to set LOGIN authentication under SMTP authentication.

setting 0: dependent on SMTP server
 1: disable

<T-CRG-SW>

0001-1086

T-15-361

Use it to permit or not to permit replacement of the toner cartridge
 by the user when there still is toner in the cartridge.

Settings 0: do not permit replacement by user
 (When the toner runs out (in the case of black toner, is running
 low), a button will appear to permit replacement of the toner
 cartridge: i.e., system status/stop>recovery procedure indication).
 1: permit replacement by user
 (A button will appear to permit replacement; i.e., user
 mode>adjust/cleaning.)

at time of shipment/upon RAM initialization: 0

<TNR-DWN>

0005-6795

T-15-362

Use it to set the amount of toner to be deposited.

You can decrease the amount of toner, as when stray toner tends to occur in full color mode or when paper tends to wrap around the fixing roller.

Settings	0: standard amount (default) 1: decrease for both single-sided and double-sided modes 2: standard for single-sided mode but decrease in double-sided mode for both 1st and 2nd sides (reserved) at time of shipment/upon RAM initialization: 0
Attention	An update has been made to do away with setting 2 as a result of recent findings (i.e., the expected operation does not take place in some PDL or copy jobs; although the setting exists in service mode, it behaves like 0).

<TMIC-BK>

0006-0108

T-15-363

Use it to set end edge correction for BkLUT for Tmic PDL and BkLUT for Copy under Tmic.

setting	0: PDL ON, Copy OFF PDL ON, Copy OFF [at time of shipment/after RAM initialization] 1: PDL OFF, Copy OFF 2: PDL ON, Copy ON 3: PDL OFF, Copy ON
---------	--

<DH-MODE>

0001-1902

T-15-364

Use it to select patch image read data (high density side) for patch image detection gradation correction (other than full correction).

setting	0: use patch image read data used for patch image read data [at time of shipment/after RAM initialization] 1: do not use patch image reading data used for full correction
---------	---

<W-CLN-PH >

0005-6810

T-15-365

Use it to set the intervals at which the primary charging wire/pre-transfer charging wire is automatically cleaned.

If an image fault (e.g., vertical lines) occurs in a high temperature/humidity environment, the intervals at which the primary charging wire/pre-transfer charging wire is automatically cleaned may be changed.

Note: In a normal environment, be sure to use W-CLN-P to set the intervals used to automatically clean the primary charging wire.

Note The new setting will not be valid until the power switch has been turned off and then back on.

Range of settings 100 to 1000
at time of shipment/upon RAM initialization: 1000

<B-SPL-SW>

0005-6814

T-15-366

Use it to set the environment table for black toner supply.

Attention The new setting will not be valid until the power switch has been turned off and then on.

Settings 0: variable
1: fixed
at time of shipment/upon RAM initialization: 0

<B-CNT-SW>

0005-6817

T-15-367

Use it to set the environment table for black development contrast.

Attention The new setting will not be valid until the power switch has been turned off and then on.

Settings 0: variable
1: fixed
at time of shipment/upon RAM initialization: 0

<1ROT-CR>

0005-6820

T-15-368

Use it to change the retention current for primary transfer retention current idle rotation.

If the user disconnects the power plug at night and thus the drum heater goes off, the temperature of the primary transfer roller is not likely to match that of the drum when the power is turned on the next morning; and the resulting temporary change in the resistance of the primary transfer roller at times prevents proper execution of ATVC. If the level of current set by default is not high enough, use this item to increase it.

Attention The new setting will not be valid until the power switch has been turned off and then on.

Settings 0: refer to environment sensor
1: 60uA
2: 70uA
3: 80uA
4: 90uA
5: 100uA
6: 110uA
7: 120uA
at time of shipment/upon RAM initialization: 0

<1ROT-TIM>

0005-6824

T-15-369

Use it to change the duration of primary transfer power retention current idle rotation.

Attention The new setting will not be valid until the power has been turned off and then on.

Settings 0: refer to the environment table.
1: 40sec
2: 60sec
3: 120sec
4: 180sec
5: 300sec
6: 420sec
7: 600sec
at time of shipment/upon RAM initialization: 0

<2ROT-TIM>

0005-6830

T-15-370

Use it to change the secondary transfer power retention idle rotation.

Attention The new setting will not be valid until the power is turned off and then on.

Settings 0: refer to the environment table.
1: 40sec
2: 60sec
3: 120sec
4: 180sec
5: 300sec
6: 420sec
7: 600sec
at time of shipment/upon RAM initialization: 0

<DEV-K-TM>

0005-6835

T-15-371

Use it to set the duration of toner discharge executed as part of the ITB black band cleaning sequence.

Attention The new setting will not be valid until the power switch has been turned off and then on.

Settings 1: 10
2: 20
at time of shipment/upon RAM initialization: 1

<CDEV-IDL>

0005-6839

T-15-372

Use it to enable/disable power-on idle rotation of the color developing assembly (YMC).
Use it to adjust the intervals of patch ATR for the No. 1 limit. A higher limit will increase the execution intervals, but will affect the density. On the other hand, although a lower limit will decrease the intervals, the density will be more stable.

1. the number of prints (CNT) reset upon execution of patch detection
2. cumulative video count CNT)

Timing

1. execute patch detection during last rotation of the ongoing job when the No. 1 limit (20 prints) is exceeded.
2. force patch detection by interrupting the job as soon as the No. 2 limit is exceeded.
3. force patch execution as soon as the cumulative VC exceeds 300% (in terms of A4).
1 print = 3 images (YMC only); for image count, 1 for small and 2 for large)

Attention

The new setting will not be valid until the power switch has been turned off and then on.

Settings

0: off
1: on
at time of shipment/upon RAM initialization: 1

<PCHINT-1>

0005-6842

T-15-373

Use it to change the intervals of 1-patch detection (No. 1 limit) in terms of the number of prints.
Use it to change the intervals of patch ATR for the No. 1 limit. A higher limit will increase the downtime intervals, but will affect the density. On the other hand, although a lower limit may decrease the downtime intervals, the density will be more stable.

The following triggers are used to initiate patch detection:

1. when the 1st limit (20 prints) is exceeded, execute patch detection during the last rotation of the ongoing job.
2. when the 2nd limit is exceed, stop the ongoing job and force patch detection.
(1 print = 3 images (YMC only); for image count, 1 for small and 2 for large)

The above No. 1 limit may be changes. A higher limit will increase downtime intervals, but will affect density. On the other hand, although a lower limit will decrease downtime intervals, the density will be more stable.

By default, the No. 1 limit is 20 prints (60 images), variable between -10 and + 10 (offset).

Attention

The new setting will not be valid until the power switch has been turned off and then on.

Settings

10 to +10
at time of shipment/upon RAM initialization: 0

<PCHINT-2>

0005-6844

T-15-374

Use it to adjust the intervals of patch detection (No. 2 limit).
 Use it to change the patch ATR intervals for the No. 2 limit.
 For the triggers used to initiate patch detection, see the list for PCHINT-1.

Attention	The new setting will not be valid until the power switch has been turned off and then on.
Settings	10 to +10 at time of shipment/upon RAM initialization: 0

<PCHINT-V>

0005-6847

T-15-375

Use it to adjust the intervals of patch detection (video counter cumulative count).

Use it to change the intervals of patch ATR in relation to the video counter cumulative count.

Attention	The new setting will not be valid until the power switch is turned off and then on.
Settings	10 to +10 at time of shipment/upon RAM initialization: 0

<POT-OFTM>

0005-6851

T-15-376

Use it to adjust the length of time for the detection of a disconnected connector or to adjust the potential sensor offset.

By default, the machine executes idle rotation of the fixing roller for 1 second every 30 min to prevent deformation of the roller while in standby.

Note	The new setting will not be valid until the power switch has been turned off and then on.
settings	5 to 50 (unit: sec) at time of shipment/upon RAM initialization: 5

<FXWRNLVL>

0005-6854

T-15-377

Fixing Upper Roller Warning Level Change.

Use it to change the level at which a warning is issued in relation to the fixing counter reading. The life of the fixing roller varies according to the environment and user habits. If you have replaced the fixing unit, be sure to set the level to the appropriate value.

Attention	The new setting will not be valid until the power switch has been turned off and then on.
Settings	0: 180,000 1: 150,000 2: 120,000 at time of shipment/upon RAM initialization: 0

<FXERRLVL>

0005-6858

T-15-378

Fixing Roller Error Level Change.

Use it to change the level at which an error is issued in relation to the fixing counter reading. The level which is the result of offsetting the value set in the fixing upper roller warning level change mode (COPIER>OPTION>BODY>FXWRNLVL) will be used as the threshold value for the fixing error level.

Attention	The new setting will not be valid until you turn off and then on the power switch.
Settings	0: +20K 1: +40K 2: +60K 3: no error (alert retained) at time of shipment/upon RAM initialization: 0

<PCHINTV2>

0005-6859

T-15-379

Use it to change the intervals of post rotation patch detection (video counter count).

Use it to change the intervals of patch ATR in relation to the cumulative video count. When a specific video count is exceeded, ATR patch detection is executed during last rotation at the end of the ongoing job, and the limit of the cumulative video count may be changed. A higher limit will increase the downtime intervals, but will affect the density. On the other hand, although a lower limit will decrease the downtime intervals, the density will be more stable.

Attention The new setting will not be valid until the power switch has been turned off and then on.

Settings -10 to +10 (level: 10% duty/A4)
default: 200% duty (A4, 5% duty x 40 prints)
at time of shipment/RAM initialization: 0

<DLV-SPSW >

0005-6860

T-15-380

Use it to change the delivery speed.

Attention The new setting will not be valid until the power switch has been turned off and then on.

Settings 0: delivery speed with priority on FCOT (627 mm/sec)
1: delivery speed with priority on paper edge damage avoidance (267 mm/sec)
at time of shipment/upon RAM initialization: 0

<FXMSG-SW >

0005-6863

T-15-381

Use it to enable/disable the message that prompts replacement of the fixing assembly.

Use it to enable/disable the message on the control panel indication the need for the replacement of the fixing assembly. Normally, the setting is enabled; however, you can disable the message if there is no need for replacement (so that the user will not feel unnecessarily concerned and place a service call). If replacement is necessary, be sure to replace it and enable the setting.

Attention The new setting will not be valid until the power has been turned off and then on.

Settings 0: do not indicate
1: indicate
a time of shipment/upon RAM initialization: 1

<G-LUT-LV>

0005-6865

T-15-382

Use it to change the gamma LUT auto correction function (used for a check on a steep slope).
Use it to change the threshold used to find out whether the gamma LUT slope is too steep as part of the gamma LUT auto correction function.

Attention The new setting will not be valid until the power switch is turned off and then on.

Settings 0: 2.8
1: 2.6
2: 2.4
3: 2.2
4: 2.0
at time of shipment/upon RAM initialization: 2

<G-LUT-SW>

0005-6867

T-15-383

Use it to change the gamma LUT auto correction function.
Use it to adjust the control on image formation in relation to the state (on/off) of the gamma LUT auto correction function.

Attention The new setting will not be valid until the power switch is turned off and then on.

Settings 0: off (do not apply gamma LUT auto correction)
1: copy T-mic (apply gamma LUT auto correction)
2: copy PDL T-mic (apply gamma LUT auto correction)
3: all (apply gamma a LUT auto correction)
at time of shipment/upon RAM initialization; 1

<G-LUT-MX>

0005-6879

T-15-384

Use it to change the gamma LUT auto correction function (maximum correction slope).
Use it to set the maximum correction slope used to determine the final correction point for gamma LUT auto correction function.

Attention The new setting will not be valid until the power switch has been turned off and then on.

Settings 0: 2.4
1: 2.2
2: 2.0
3: 1.8
4: 1.6
at time of shipment/upon RAM initialization: 2

<G-LUT-OF>

0005-6882

T-15-385

Use it to change the gamma LUT auto correction function (secondary curve correction start point offset).
Use it to set a degree of offset in relation to the bottommost start point for secondary curve correction used as part of the gamma LUT auto correction function.

Attention The new setting will not be valid until the power switch has been turned off and then on.

Settings 0: 140
1: 120
2: 100
3: 80
4: 60
at time of shipment/upon RAM initialization: 2

<G-LUT-SZ>

0005-6883

T-15-386

Use it to set the gamma LUT auto correction function (smoothing intervals).
Use it to set the intervals of smoothing executed as part of the gamma LUT auto correction function.

Attention The new setting will not be valid until the power switch has been turned off and then on.

Settings 0: 30
1: 35
2: 40
3: 45
4: 50
at time of shipment/upon RAM initialization: 0

<TR-BKBND>

0005-6884

T-15-387

Use it to set the black band used to prevent bending/slipping of the transfer cleaning blade.
The machine is designed to deposit a black band to prevent bending/shipping of the transfer charging cleaning blade before cleaning the photosensitive drum immediately after patch detection or before application of the secondary transfer reverse bias.

Attention The new setting will not be valid until the power switch has been turned off and then on.

Settings 0: off (default)
1: on only if H/H
2: on at all times
at time of shipment/upon RAM initialization: 0

<1TR-ATVC>

0005-6885

T-15-388

Use it to enable/disable the primary transfer ATVC retry function for initial multiple rotation.
Use it to enable/disable the primary transfer ATVC retry function for initial multiple rotation
to suit the site of installation.

Attention The new setting will not be valid until the power switch has been turned off and then on.

Settings 0: off at all times (spare)
1: on only if H/H (default)
2: on normally
at time of shipment/upon RAM initialization: 1

<FXLW-TMP>

0005-6888

T-15-389

Use it to change the control temperature for the pressure roller.

Attention The new setting will not be valid until the power switch has been turned off and then on.

Settings 0: 170 deg C (default)
1: 160 deg C
2: 150 deg C
at time of shipment/upon RAM initialization: 0

<GLUTLV-Y>

0005-7557

T-15-390

for study by design dpt

<GLUTLV-M>

0005-7577

T-15-391

for study by design dpt

<GLUTLV-C>

0005-7585

T-15-392

Use it to adjust the slope as part of the gamma LUT auto correction mechanism of the controller when improvement is needed to correct coarseness of images read of a cyan solid original.

Attention The new setting will not be valid until the power switch has been turned off and then on.

Settings 0: 2.4
1: 2.0
2: 1.6
3: 1.2
4: 0
at time of shipment/upon RAM initialization: 0

<GLUTLV-K>

0005-7587

T-15-393

for study by design dpt

<GLUTMX-Y>

0005-7588

T-15-394

for study by design dpt

<GLUTMX-M>

0005-7593

T-15-395

for study by design dpt

<GLUTMX-C>

0005-7595

T-15-396

Use it to adjust the maximum correction slope as part of the gamma LUT auto correction mechanism of the controller when improvement is needed to correct coarseness of images read of a cyan solid original.

Attention The new setting will not be valid until the power switch has been turned off and then on.

Settings 0: 2.4
1: 2.2
2: 2.0
3: 1.8
4: 1.6
at time of shipment/upon RAM initialization: 2

<GLUTMX-K>

0005-7597

T-15-397

for study by design dpt

<GLUTOF-Y>

0005-7599

T-15-398

for study by design dpt

<GLUTOF-M>

0005-7602

T-15-399

for study by design dpt

<GLUTOF-C>

0005-7605

T-15-400

for study by design dpt

<GLU-TOF-K>

0005-7606

T-15-401

for study by design dpt

<HDD-TMP>

0005-9738

T-15-402

Use it to set a level of temperature to serve as a reference for detecting a low temperature error.

Caution The new setting will not be valid until the power switch has been turned off and then on again.

Settings 0 to 30 deg C

at time of shipment/upon RAM initialization: 2

<HDD-TIM>

0005-9739

T-15-403

Use it to set the time interval allowed before a low temperature error is identified

Caution The new setting will not be valid until the power switch has been turned off and then on again.

Settings 0 to 200 min

at time of shipment/upon RAM initialization: 10

<HDD-SW>

0005-9740

T-15-404

Use it to enable/disable E code indication of a low temperature error

Caution The new setting will not be valid until the power switch has been turned off and then on again

Settings 0: indicate
1: do not indicate

at time of shipment/upon RAM initialization: 0

15.6.5.1.2 USER

<SIZE-DET> 0001-0560

T-15-405

Use it to turn on/off the original size detection function.

setting 0: off (The scanner will not go on when the copyboard is opened/closed,
thereby preventing the glare of the lamp.
1: ON [at time of shipment/after RAM initialization]

<DATE-DSP> 0001-0562

T-15-406

Use it to change the date indication.

setting 0: YYMM/DD
1: DD/MM'YY
2: MM/DD/YY

<MB-CCV> 0001-7731

T-15-407

Use it to limit the individuals holding control cards for mail boxes.

setting 0: do not limit[at time of shipment/after RAM initialization: 0]
1: limit

<TRY-STP> 0001-0565

T-15-408

Use it to specify how output is made when the tray becomes full.

setting 0: normal mode (cut operation when the finisher tray becomes full)
1: cut based on height detection

<MF-LG-ST> 0001-7520

T-15-409

Use it to set the extra-length key mode.

setting 0: normal
1: enable display of the Extra Length key in extension mode.

<CNT-DISP>

0001-0567

T-15-410

Use it to enable/disable indication of the serial number of the machine in response to a press on the Counter Check key.

setting
0: enable
1: disable

<OP-SZ-DT>

0005-6760

T-15-411

Use it to enable/disable the original size detection mechanism in book mode.

In copyboard mode, the user either has to enter an original size or have the machine automatically detect the size of the original.

Settings
0: require input of original size from control panel
1: detect original size automatically
at time of shipment/upon RAM initialization: 0

<NW-SCAN>

0001-0569

T-15-412

Use it to permit/not permit the network scan function.

setting
0: do not permit
1: permit (invalid if UFR board or open I/F board is not connected)

<HDCR-DSP>

0001-0570

T-15-413

Use it to enable/disable display and operation of HDD initialization for Additional Function.

setting
0: do not display and do not initialize
1: for '0', initialize once
2: at random (data), initialize once
3: at random (data), initialize 3 times

<JOB-INVL>

0001-0571

T-15-414

Use it to set intervals for job interruption.

setting

0: standard (at time of interrupt mode, generate next job in succession)

1: start next job after delivery of last of interrupt job

2: start next job after delivery of last sheet of group of jobs

<LGSW-DSP>

0001-0572

T-15-415

Use it to enable/disable display of 'log indication on/off setup' on the Additional Function screen.

setting

0: disable display of 'log display on/off setup'

1: enable 'log display on/off setup'

<PCL-COPY>

0005-6762

T-15-416

Use it to set the PCL command COPIES (Meru/Pinatubo/Hood compatibility mode).

Settings

0: control page by page according to COPIES command setting on pages

1: Meru/Pinatubo/Hood compatible mode

2 to 65535: space

at time of shipment/upon RAM initialization: 0

<PRJOB-CP>

0001-7525

T-15-417

Use it to set the CCV count pulse for reception/report output.

setting

0: do not generate count pulse [at time of shipment/after RAM initialization]

1: generate count pulse

<SND-RATE>

0001-1905

T-15-418

Use it to set a compression rate for SEND-RATE (i.e., when 'high' is selected under SEND for compression rate).

setting 0: rate of compression 1/16 [at time of shipment/after RAM initialization]
 1: rate of compression 1/20
 2: rate of compression 1/24
 A higher rate of compression means a lower image level.

<CTM-S06>

0006-1274

T-15-419

Use it to remove the password from an export file (file transmission address).

range of 0: do not remove password from export file
 settings 1: remove password from export file.
 at time of shipment/upon RAM initialization: 0

<CTM-S07>

0006-1275

T-15-420

Use it to remove the source indication of the transmission password on the Edit screen (RUI address indication).

range of 0: do not remove source indication of transmission password on Edit screen
 settings 1: remove source indication of transmission password on Edit screen
 at time of shipment/upon RAM initialization: 0

<FXEX-CNT>

0005-6765

T-15-421

Use it to set the temperature control hysteresis width for the outside heating roller. The outside heating roller of the machine has a low heating capacity and tends to go on and off frequently; this mode is offered to prevent flickering.

Settings 0: hysteresis width = $-/+1$ deg C (225 deg C $-/+1$ deg C)
 1: hysteresis width = $-/+2$ deg C (224 deg C $-/+2$ deg C)
 2: hysteresis width = $-/+3.5$ deg C (222.5 deg C $-/+3.5$ deg C)
 3: hysteresis width = $-/+4.5$ deg C (221.5 deg C $-/+4.5$ deg C)
 at time of shipment/upon RAM initialization: 0

15.6.5.1.3 CST
<U1 to 4NAME>

0006-1269

T-15-422

Use it to enable/disable the indication of the paper name identified with a paper size group (U1 through U4).

Settings 0: indication on touch panel as U1, U2, U3, U4.
1: indicate name of paper set in service mode (CST-U1, U2, U3, U4)
at time of shipment/upon RAM initialization: 0

<CST-U1 to U4>

0006-1273

T-15-423

Use it to select the names of paper sizes to be used in paper size groups. By registering a special size for U1, U2, U3, or U4, you can cause the machine to treat the paper in question as special size paper.

Settings 24: Foolscap (CST-U2; default)
25: Australian Foolscap
26: Officio
27: Ecuadorian Officio
28: Bolivian Officio
29: Argentine Letter (U4; default)
30: Argentine Letter-R
31: Government Letter (U1: default)
32: Government Letter-R
34: Government Legal (U3: default)
35: Folio
36: Argentine Officio
37: Mexico Officio
38: Executive

15.6.5.1.4 ACC
<STPL-LMT>

0001-0580

T-15-424

Use it to set a limit to the number of sheets that may be saddle-bound.

setting 0: 5 (w/o white band)
1: 10 (w/o white band)
2: 10 (w/ white band)
3: 15 (w/ white band)
[at time of shipment/after RAM initialization]

<SC-TYPE>

0005-6771

T-15-425

Use it to change the type of machine (self copy/coin vendor machine).
 This mode is effective only when the machine soft ID is "Lawson."
 Use it to switch between a Lawson model and a self copy model.

Settings
 0: Lawon model
 1: general self copy model
 at time of shipment/upon RAM initialization: 0

<CC-SPSW>

0001-1162

T-15-426

Use it to select the control card (CC IV/CC V) I/F support level.

setting
 0: do not support [at time of shipment/after RAM initialization]
 1: support (priority on speed)
 2: support (priority on upper limit)
 -If it is set to '1', the machine may not be able to make an accurate stop based on an upper limit, as it puts priority on the maintenance of engine performance.
 -If it is set to '2', the machine will be able to use proper control based on an upper limit, but may suffer from a drop in engine performance depending on which source of paper it uses.

15.6.5.1.5 INT-FACE

<AP-OPT >

0001-0585

T-15-427

Use it to enable/disable printing from PrintMe (application bundled with the PS print server unit).

setting
 0: permit printing by specific account
 1: permit printing by any account [at time of shipment/after RAM initialization]
 2: do not permit printing (permitting only for specific group ID)

<AP-ACCNT>

0001-0586

T-15-428

Use it to set a group ID for a print job (CPCA) from PintMe (application bundled with the PS print server unit).

Range of settings 0 to 9999999 [at time of shipment/after RAM initialization: 0]

<AP-CODE>

0001-0587

T-15-429

Use it to set a path code for a print job (CPCA) from PrintMe (application bundled with the PS print server unit).

Range of settings 0 to 9999999 [at time of shipment/after RAM initialization: 0]

15.6.5.2 BOARD

15.6.5.2.1 <MENU-1 to 4>

0001-0596

Indication of Levels 1 Through 4 for the Printer Setup Menu

T-15-430

setting 0: do no indicate [at time of shipment/after RAM initialization]
1: indicate

15.7 TEST (Test Print Mode)

15.7.1 COPIER

15.7.1.1 PG

15.7.1.1.1 <TYPE>

0005-7112

T-15-431

Use it to generate test prints. Enter the appropriate type number (test print), and press the Start key. (Be sure to return the setting to '0' after generating the test print.)

Settings	0: image from CCD (normal print)
	1 to 3: for R&D
	4: 16-gradation
	5: full page halftone
	6: grid
	7 to 9: for R&D
	10: MCYBk horizontal stripe
	11: for R&D
	12: YMCBk 64 gradation
	13: for R&D
	14: full color 16-gradation
	15 to 200: for R&D
	at time of shipment/upon RAM initialization: 0

15.7.1.1.2 <TXPH>

0005-7114

T-15-432

Use it to set image mode when generating test prints.

Settings	0: T-Mic (w/o end correction)
	1: SC1 (w/o end correction)
	2: SC2 (w/o end correction)
	3: T-Mic (w/ end correction only if Bk)
	4: SC2 (w/ end correction if Bk)
	5: T-Mic (w/ gamma LUT auto correction)
	6: SC1 (w/ gamma LUT auto correction)
	7: SC2 (w/gamma LUT auto correction)
	8: T-Mic (w/ end correction if Bk; w/ gamma LUT auto correction)
	9: SC2 (w/ end correction if Bk; w/ gamma LUT auto correction)
	The setting herein is valid only for test prints.
	at time of shipment/upon RAM initialization: 0

15.7.1.1.3 <THRU>

0001-0608

T-15-433

Use it to switch between image correction tables for text print output.

Setting 0: on (use)
 1: off (do not use)

15.7.1.1.4 <DENS-Y>

0005-7120

T-15-434

Use it to adjust the density of individual colors of a test print (TYPE=5).

Settings 0 to 255: a higher setting will make the image darker.
 at time of shipment/upon RAM initialization: 128

15.7.1.1.5 <DENS-M>

0005-7122

T-15-435

Use it to adjust the density of individual colors of a test print (TYPE=5).

Settings 0 to 255: a higher setting will make the image darker.
 at time of shipment/upon RAM initialization: 128

15.7.1.1.6 <DENS-C>

0005-7124

T-15-436

Use it to adjust the density of individual colors of a test print (TYPE=5).

Settings 0 to 255: a higher density will make the image darker.
 at time of shipment/upon RAM initialization: 128

15.7.1.1.7 <DENS-K>

0005-7125

T-15-437

Use it to adjust the density of individual colors of a test print (TYPE=5).

Settings 0 to 255: a higher setting will make the image darker.
 at time of shipment/upon RAM initialization: 128

15.7.1.1.8 <COLOR-Y>

0005-7127

T-15-438

Use it to set the output of individual colors for individual TYPES.
For example, to generate M in mono, set '1' to 'COLOR-M' and '0' to others.

Settings 0: do not generate
1: generate
at time of shipment/upon RAM initialization: 1

15.7.1.1.9 <COLOR-M>

0005-7130

T-15-439

Use it to set the output of individual colors for individual TYPES.
For example, to generate M in mono, set '1' to 'COLOR-M' and '0' to others.

Settings 0: do not generate
1: generate
at time of shipment/upon RAM initialization: 1

15.7.1.1.10 <COLOR-C>

0005-7132

T-15-440

Use it to set the output of individual colors for individual TYPES.
For example, to generate M in mono, set '1' to 'COLOR-M' and '0' to others.

Settings 0: do not generate
1: generate
at time of shipment/upon RAM initialization: 1

15.7.1.1.11 <COLOR-K>

0005-7133

T-15-441

Use it set the output of individual colors for individual TYPES.
for example, to generate M in mono, set '1' to 'COLOR-M', and '0' to others.

Settings 0: do not generate
1: generate
at time of shipment/upon RAM initialization: 1

15.7.1.1.12 <F/M-SW>

0001-7271

T-15-442

Use it to switch between full color and mono color for PG output.

Setting 0: full color output
1: mono color output

15.7.1.1.13 <PG-PICK>

0001-0616

T-15-443

Use it to select a source of paper for text print output.

Setting 1: cassette 1
2: cassette 2
3: cassette 3
4: cassette 4
5: side deck
6: manual feeder
7 and 8: not used

15.7.1.1.14 <2-SIDE>

0001-1163

T-15-444

Use it to set mode for text printing.

Setting 0: single-sided [at time of shipment/after RAM initialization]
1: double-sided

15.7.1.1.15 <PG-QTY>

0001-1166

T-15-445

Use it to set a copy count for text printing.

Setting 1 to 999 [at time of shipment/after RAM initialization: 1]

15.7.1.2 NETWORK


15.7.1.2.1 <PING>

0001-0431

T-15-446

Use it to check the connection of the machine to a network (only if TCP/IP).

Caution Use it when checking the connection to the network at time of installation if a fault occurs in the connection to the network.

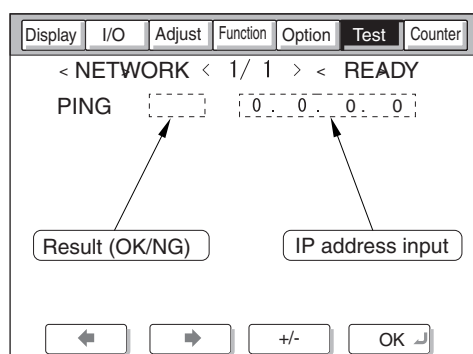

F-15-25

T-15-447

- Method of operation**
- 1) Turn off the main power switch.
 - 2) Connect the network cable to the machine and turn on the main power switch.
 - 3) Inform the user's system administrator that the installation work for the machine is over, and ask him/her to make necessary network settings.
 - 4) Advise the system administrator that you will be checking the network connection, and obtain the remote host address (IP address of a PC terminal on the user's network) for PING.
 - 5) Make the following selections in service mode: COPIER>TEST>NETWORK>PING. Then, using the keypad on the control panel, enter the IP address you obtained in step 4), and press the OK key and then the Start key.
 - The machine will indicate 'OK' if the connection to the network is correct. (end of work)
 - If the machine indicates 'NG', check the connection of the network cable; if it is normal, go to step 6). If a fault has been found in the connection of the network cable, correct it, and go back to step 5).
 - 6) Make the following selections in service mode: COPIER>TEST>NETWORK>PING. Then, enter the loopback address* (127.0.0.1), and press the OK key and then the Start key.

-If the machine indicates 'NG', suspect a fault in the TCP/IP settings of the machine; go back to step 3), and check the settings.

-If the machine indicates 'OK', the TCP/IP settings of the machine are likely to be correct. Suspect, on the other hand, a fault in the connection of the network interface board (NIC) or the board itself. Go on to step 7).

* A loopback address will return before it reaches the NIC, offering a means to check the TCP/IP settings of the machine itself.

7) Make the following selections in service mode: COPIER>TEST>NETWORK>PING. Then, enter the local host address (IP address of the machine), and press the OK key.

-If the machine indicates 'NG', suspect a fault in the connection of the NIC or the NIC itself. Check its connection, or replace it as necessary.

-If the machine indicates 'OK', the network settings of the machine and the NIC are likely to be correct. Suspect a fault in the user's network environment; ask the system administrator for corrective action.

15.8 COUNTER (Counter Mode)

15.8.1 COPIER

15.8.1.1 TOTAL

15.8.1.1.1 <Overview>

0001-0627

Total Counter

15.8.1.1.2 <SERVICE1>

0001-0629

Total Counter 1 for Service Work

It increases its count when paper is delivered outside the printer unit.

(It increases its count regardless of the size of paper, large or small.)

When the count exceeds '99999999', it returns to '00000000'.

15.8.1.1.3 <SERVICE2>

0001-0630

Total Counter 2 for Service Work

It increases its count when paper is delivered outside the printer unit.

(It increases its count by 2 if the paper is large size and by 1 if the paper is small size.)

When the count exceeds '99999999', it returns to '00000000'.

15.8.1.1.4 <COPY>

0001-0631

Total Copy Counter

It increases its count when copying operation has been executed and paper is delivered outside the printer.

When the count exceeds '99999999', it returns to '00000000'.

15.8.1.1.5 <PDL-PRT>

0001-0632

PDL Print Counter

It increases its count when paper is delivered outside the machine or stacked for duplexing in keeping with the charge counter when in PDL print mode.

It does not increase its count in the case of blank paper. It increases its count by 1 for large and small sheets alike.

When the count exceeds '99999999', it returns to '00000000'.

15.8.1.1.6 <FAX-PRT>

0001-0633

Fax Reception Print Counter

It increases its count when paper is delivered outside the machine or stacked for duplexing to suit the charge counter in fax reception mode.

It does not increase its count in the case of blank paper. It increases its count by 1 for large and small sheets alike. Its count may be reset.

When the count exceeds '99999999', it returns to '00000000'.

15.8.1.1.7 <RMT-PRT>

0001-0634

Remote Print Counter

It increases its count when paper is delivered outside the machine or stacked for duplexing in keeping with the charge counter in remote print mode.

It does not increase its count in the case of blank paper. It increases its count by 1 for large and small sheets alike. Its count may be reset.

When the count exceeds '99999999', it returns to '00000000'.

15.8.1.1.8 <BOX-PRT>

0001-0635

Box Print Counter

It increases its count when paper is delivered outside the machine or stacked for duplexing in keeping with the charge counter in box print mode.

It does not increase its count in the case of blank paper. It increases its count by 1 for large and small sheets alike. Its count may be reset.

When the count exceeds '99999999', it returns to '00000000'.

15.8.1.1.9 <RPT-PRT>

0001-0637

Report Print Counter

It increases its count when paper is delivered outside the machine or stacked for duplexing in keeping with the charge counter in report print mode.

It does not increase its count in the case of blank paper. It increases its count by 1 for large and small sheets alike. Its count may be reset.

When the count exceeds '99999999', it returns to '00000000'.

15.8.1.1.10 <2-SIDE>

0001-0640

Double-Sided Copy/Print Counter

It increases its count when paper is delivered outside the machine or stacked for duplexing in keeping with the charge counter, indicating the number of double-sided copies/prints.

It does not increase its count in the case of blank paper. It increases its count by 1 for large and small sheets alike. Its count may be reset.

When the count exceeds '99999999', it returns to '00000000'.

15.8.1.1.11 <SCAN>

0001-0643

Scan Counter

It increases its count at the end of reading operation, indicating the number of scans.

It increases its count by 1 for large and small sheets alike. It may be initialized.

When the count exceeds '99999999', it returns to '00000000'.

15.8.1.2 PICK-UP

15.8.1.2.1 <Outline>

0001-0645

Pickup-Related Counters

15.8.1.2.2 <C1>

0001-0648

Cassette 1 Pickup Total Counter

It indicates the number of sheets picked up from the cassette 1.

When the count exceeds '99999999', it returns to '00000000'.

15.8.1.2.3 <C2>

0001-0650

Cassette 2 Pickup Total Counter

It indicates the number of sheets picked up from the cassette 2.

When the count exceeds '99999999' it returns to '00000000'.

15.8.1.2.4 <C3>

0001-0651

Cassette 3 Pickup Total Counter

It indicates the number of sheets picked up from the cassette 3 (upper cassette of the cassette pedestal).

When the count exceeds '99999999', it returns to '00000000'.

15.8.1.2.5 <C4>

0001-0682

Cassette 4 Pickup Total Counter

It indicates the number of sheets picked up from the cassette 4 (lower cassette of the cassette pedestal).

When the count exceeds '99999999', it returns to '00000000'.

15.8.1.2.6 <MF>

0001-0683

Manual Feed Pickup Total Counter

It indicates the number of sheets picked up from the manual feed pickup unit.

When the count exceeds '99999999', it returns to '00000000'.

15.8.1.2.7 <DK>

0001-0684

Deck Pickup Total Counter

It indicates the number of sheets picked up from the deck pickup unit.

When the count exceeds '99999999', it returns to '00000000'.

15.8.1.2.8 <2-SIDE>

0001-0685

Duplex Pickup Total Counter

It indicates the number of sheets used for duplexing.

When the count exceeds '99999999', it returns to '00000000'.

15.8.1.3 FEEDER

15.8.1.3.1 <Overview> 0001-7279

DADF-Related Counters

15.8.1.3.2 <FEED> 0001-3081

total counter indicating the number of originals picked up by the ADF

15.8.1.4 JAM

15.8.1.4.1 <Overview> 0001-0686

Jam-Related Counters

15.8.1.4.2 <TOTAL> 0001-0687

copier total jam counter

15.8.1.4.3 <FEEDER> 0001-0689

feeder total jam counter

15.8.1.4.4 <SORTER> 0001-0690

finisher total jam counter

15.8.1.4.5 <2-SIDE> 0001-0691

duplex unit jam counter

15.8.1.4.6 <MF> 0001-0692

manual feed pickup jam counter

15.8.1.4.7 <C1> 0001-0693

cassette 1 jam counter

15.8.1.4.8 <C2> 0001-0694

cassette 2 jam counter

15.8.1.4.9 <C3> 0001-0695

cassette 3 jam counter

15.8.1.4.10 <C4> 0001-0696
cassette 4 jam counter

15.8.1.4.11 <DK> 0001-0698
side paper deck jam counter

15.8.1.5 MISC

15.8.1.5.1 <Overview> 0001-7280

Other Counters

15.8.1.5.2 <FIX-WEB> 0005-6776


T-15-448

fixing cleaning web counter (count retained by DC controller PCB)

- Operation**
- If you have replaced the fixing web, reset the counter reading.
 - If you have replaced the DC controller PCB, enter the reading indicated before the replacement.
 - The count in this mode begins a count, after a web-less preliminary announcement display is displayed.

Memo: Entering the Pre-Replacement Reading

Highlight the counter reading [1], and enter the reading indicated before the replacement.

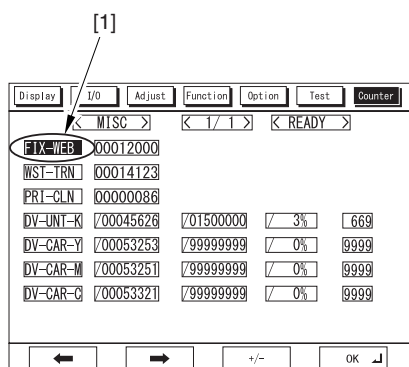

F-15-26


T-15-449

waste toner counter (count retained by DC controller PCB)

Operation	If you have disposed of waste toner, reset the counter reading. If you have replaced the DC controller, enter the reading indicated before the replacement.
Remarks	The counts are made as follows: Duty: 10% or less B/W if small, counted as 1 if large, counted as 2 4C if small, counted as 4 if large, counted as 8 Duty:10% or more B/W if small, counted as 3 if large, counted as 6 4C if small, counted as 12 if large, counted as 24 estimates at a color ratio of 10% and image duty of 5%.

Memo: Entering the Pre-Replacement Reading

Highlight the counter reading [1], and enter the reading indicated before the replacement.

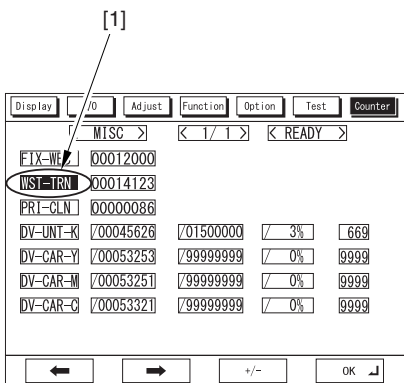

F-15-27

15.8.1.5.4 <PRI-CLN >

0005-6778


T-15-450

primary charging wire auto cleaning counter (count retained by DC controller PCB)

- Operation If you have replaced the primary charging wire, reset the counter reading.
 If you have replaced the DC controller PCB, enter the reading indicated before the replacement.

Memo: Entering the Pre-Replacement Reading

Highlight the counter reading [1], and enter the reading indicated before the replacement.

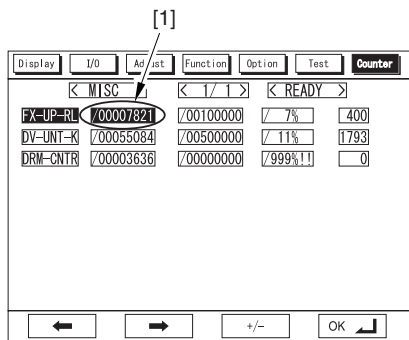

F-15-28

15.8.1.5.5 <DV-UNT-K>

0001-1169

T-15-451

It indicates the number of sheets that have moved past through the developing unit.

- Method of operation -If you have replaced the developing unit (Bk), initialize the reading.
 -If you have replaced the DC controller PCB, enter the reading recorded before the replacement.
- Caution Do not reset the reading or enter a new reading unless if you have done the foregoing.
 Otherwise, the machine may have to operate on incorrect image density, producing foggy output or damaging the drum (by carrier particles), requiring you to replace the developing unit (Bk), and initialize the reading.
- Reference The machine's ATR control consists in the correction of the toner supply amount based on the target density and the patch image density it measures at specific times. It corrects the target density for individual colors, and it makes correction for Bk based on the cumulative number of images made (i.e., the reading discussed herein).

15.8.1.5.6 <DV-CAR-Y>

0005-6779

T-15-452

toner life Y

Operation -if you have replaced the developing assembly/toner (Y), reset the reading of the counter.
-if you have replaced the DC controller PCB, enter the reading indicated before the replacement.

Estimated life 500,000 prints

15.8.1.5.7 <DV-CAR-M>

0005-6780

T-15-453

toner life M

Operation -if you have replaced the developing assembly/toner (M), reset the reading of the counter.
-if you have replaced the DC control PCB, enter the reading indicated before the replacement.

Estimated life 500,000 prints

15.8.1.5.8 <DV-CAR-C>

0005-6781

T-15-454

toner life C

Operation -if you have replaced the developing assembly/toner (C), reset the reading of the counter.
-if you have replaced the DC controller PCB, enter the reading indicated before the replacement.

Estimated life 500,000 prints

15.8.1.5.9 <DRM-PHAS>

0006-1497

T-15-455

Use it when shifting the photosensitive drum phase.

When the photosensitive drum is used without changing the home position in relation to the drum axis, uneven density at drum intervals or lines can occur in output images.

To limit the symptom, shift the phase of the photosensitive drum by 90 deg every specific number of prints. The machine does not shift the phase on its own, and requires the work of the service person.

The machine indicates a message to prompt the work on the User and Service Mode screens.

Use this mode item to obtain an idea of how much the photosensitive drum has been used so that the work cycle may be predicted.

Remarks -When the service mode item used in shifting the drum phase is executed (i.e., COPIER>FUNCTION>MISC-P>DR-P-ADJ), the counter reading will automatically be reset. -to change the timing at which the message is indicated (COPIER>FUNCTION>MISC-P>DR-P-ADJ), change the denominator of the setting. By default, the denominator is 200,000 images (Japan) or 100,000 images (outside Japan).

15.8.1.6 PRDC-1

15.8.1.6.1 Overview

0005-7253

The counter readings used in service mode are grouped into the following 5 types:

Type 1: black-and-white S size: count by 1 full color S size: count by 4

L size: count by 2 L size: count by 8

Type 2: black-and-white S size: count by 1 full color S size: count by 3

L size: count by 2 L size: count by 6

Type 3: black-and-white S size: count by 1 full color S size: count by 1

L size: count by 2 L size: count by 2

Type 4: black-and-white/ full color count by 1

Type 5: black-and-white no count full color count by 1

All the values of the items under COPIER>COUNTER>PRDC-1 are retained by the main controller PCB.

15.8.1.6.2 <PRM-WIRE>

0005-6915

for the primary charging wire, indicates the number of times high voltage has gone on.

Estimated life: 500,000 image

count type: type 1

15.8.1.6.3 <PRM-GRID>

0005-6932

for the grid plate, indicates the number of times high voltage has gone on.

Estimated life: 500,000 image

count type: type 1

15.8.1.6.4 <PO-WIRE>	<u>0005-6933</u>
for the pre-transfer charging wire, indicates the number of times high voltage has gone on. Estimated life: 500,000 image count type: type 1	
15.8.1.6.5 <PRM-CLN>	<u>0005-6935</u>
for the primary charging wire cleaner, indicates the number of times it has been replaced. Estimated life: 500,000 image count type: type 1	
15.8.1.6.6 <PO-CLN>	<u>0005-6936</u>
for the pre-transfer charging wire cleaner, indicates the number of times it has been replaced. Estimated life: 500,000 image count type: type 1	
15.8.1.6.7 <PRM-CLN2>	<u>0005-6938</u>
for the primary charging wire cleaner 2, indicates the number of times it has been replaced. Estimated life: 500,000 image count type: type 1	
15.8.1.6.8 <PO-CLN2>	<u>0006-2157</u>
for the pre-transfer charging wire cleaner2, indicates the number of times it has been replaced. Estimated life: 500,000 image count type: type 1	
15.8.1.6.9 <PO-UNIT>	<u>0005-6939</u>
for the post charging assembly, indicates the number of times it has gone on. Estimated life: 1,000,000 image count type: type 1	
15.8.1.6.10 <PRM-UNIT>	<u>0005-6941</u>
for the primary charging assembly, indicates the number of times it has gone on. Estimated life: 1,000,000 image count type: type 1	
15.8.1.6.11 <FIX-TH1>	<u>0005-6943</u>
for the fixing assembly main thermistor (TH1), indicates the number of times it has gone on in terms of the number of sheets involved. Estimated life: 500,000 image count type: type 3	

-
- 15.8.1.6.12 <FX-TSW> 0005-6944
for the fixing assembly thermal switch (TP1), indicates the number of times it has gone on in terms of the number of sheets involved.
Estimated life: 1,000,000 image
count type: type 3
- 15.8.1.6.13 <FX-LW-TH> 0005-6946
for the contact thermistor, indicates the number of sheets that have passed.
Estimated life: 500,000 image
counter type: type 3
- 15.8.1.6.14 <FX-EX-TH> 0005-6948
for the external heating roller thermistor, indicates the number of sheets that have passed.
Estimated life: 500,000 image
counter type: type 3
- 15.8.1.6.15 <FX-LW-TS> 0005-6950
for the contact thermal switch, indicates the number of sheets that have passed.
Estimated life: 1,000,000 image
counter type: type 3
- 15.8.1.6.16 <FX-EX-TS> 0005-6952
for the external heating roller thermal switch, indicates the number of sheets that have passed.
Estimated life: 1,000,000 image
count type: type 3
- 15.8.1.6.17 <OZ-FIL2> 0005-6954
for the ozone filter (FM2) fan, indicates the number of times it has gone on.
Estimated life: 250,000 image
count type: type 1
- 15.8.1.6.18 <TN-FIL2> 0005-6956
for the toner filter (FM2), indicates the number of times it has gone on.
Estimated life: 250,000 image
count type: type 1

15.8.1.7 DRBL-1

15.8.1.7.1 Overview

0005-7252

The readers of the counters used in service mode are grouped into the following 5 types:

Type 1: black-and-white S size: count by 1 full color S size: count by 4

L size: count by 2 L size: count by 8

Type 2: black-and-white S size: count by 1 full color S size: count by 3

L size: count by 2 L size: count by 6

Type 3: black-and-white S size: count by 1 full color S size: count by 1

L size: count by 2 L size: count by 2

Type 4: black-and-white/full color count by 1

Type 5: black-and-white not counted full color count by 1

The following is a list of service mode items whose data is retained by the DC controller PCB or the main controller PCB.

Main controller PCB

TRD-CLN,TR-BLT,TR-ROLL,2TR-TOLL,TR-STC-H,1TR-STC,ITB-SUPS,2TR-INRL,CLN-BLD,CL-SUPS,CL-SCRIP,C3-PU-RL,C3-SP-RL,C3-FD-RL,C4-PU-RL,C4-SP-RL,C4-FD-RL,LD-PU-RL,LD-SP-RL,LD-FD-RL,RD-PU-RL,RD-SP-RL,RD-FD-RL,M-PU-RL,M-SP-RL,FX-IN-BS,FX-WEB,FX-EX-RL,FX-RW-BS,FX-EX-BS,DLV-UCLW,DLV-LCLW,OZ-FIL5,TN-FIL2,TN-FIL5,FX-SPACE,ITB-SCRIP

DC controller PCB

DV-UNT-C,DV-UNT-Y,DV-UNT-M,FX-UP-RL,FX-LW-RL

If you are replacing the main controller PCB or the DC controller PCB, be sure to execute the following service mode item and keep the output stored away: COPIER>FUNCTION>MISC>P-PRINT.

15.8.1.7.2 <LSR-DRV>

0006-2633

not used

15.8.1.7.3 <LSR-MTR>

0006-2634

not used

15.8.1.7.4 <SCN-MTR>

0005-6957

not used

15.8.1.7.5 <TRD-CLN>

0005-6958

indicates the number of times the transfer drum cleaner has gone on in terms of the number of sheets involved.

Estimated life: 195000 image

count type: type 3

-
- 15.8.1.7.6 <TR-BLT> 0005-7245
for the intermediate transfer belt unit, indicates the number of sheets that have passed.
Estimated life: 300000 image
count type: type 1
- 15.8.1.7.7 <TR-ROLL> 0005-7246
for the secondary transfer outside roller, indicates the number of sheets that have passed.
Estimated life: 195000 image
count type: type 1
- 15.8.1.7.8 <2TR-ROLL> 0005-7247
for the secondary transfer outsider roller, indicates the number of times high voltage has gone on in terms of the number of sheets involved.
Estimated life: 195000 image
count type: type 3
- 15.8.1.7.9 <TR-STC-H> 0005-6959
indicates the number of times the secondary transfer static eliminator has gone on in terms of the number of sheets involved.
Estimated life: 150000 prints
count type: type 3
- 15.8.1.7.10 <1TR-STC> 0005-6960
indicates the number of times the primary transfer static eliminator has gone on in terms of the number of sheets involved.
Estimated life: 300000 image
count type: type 1
- 15.8.1.7.11 <ITB-SUPS> 0005-6961
for the ITB cleaner scoop-up sheet, indicates the number of sheets that have passed.
Estimated life: 150000 prints
count type: type 3
- 15.8.1.7.12 <2TR-INRL> 0005-6962
for the secondary transfer inside roller, indicates the number of sheets that have passed.
Estimated life: 300000 prints
count type: type 3
- 15.8.1.7.13 <PT-DRM> 0005-6963
indicates the number of times the photosensitive drum has rotated in terms of the number of sheets involved.
Estimated life: 3900000 image
count type: type 1

15.8.1.7.14 <DRM-MTR> [0005-6964](#)
not used

15.8.1.7.15 <MAIN-MTR> [0005-6965](#)
not used

15.8.1.7.16 <CLN-BLD> [0005-6967](#)
for the cleaner scoop-up sheet, indicates the number of times it has been used in terms of the number of sheets involved.
Estimated life: 195000 image
count type: type 1

15.8.1.7.17 <CL-SUPS> [0005-6968](#)
for the cleaner scoop-up sheet, indicates the number of times it has been used in terms of the number of sheets involved.
Estimated life: 390000 image
count type: type 1

15.8.1.7.18 <DV-UNT-C> [0005-7248](#)
indicates the number of times the C developing assembly has rotated in terms of the number of sheets involved.
Estimated life: 500000 prints
count type: type 5

15.8.1.7.19 <DVG-CYL> [0005-6971](#)
indicates the number of times the developing cylinder has rotated in terms of the number of sheets involved.
Estimated life: 1000000 prints
count type: type 3

15.8.1.7.20 <DVG-ROLL> [0005-6972](#)
indicates the number of times the developing assembly roll has rotated in terms of the number of sheets involved.
Estimated life: 1000000 prints
count type: type 3

15.8.1.7.21 <DV-UNT-Y> [0005-7249](#)
indicates the number of times the Y developing assembly has rotated in terms of the number of sheets involved.
Estimated life: 500000 prints
count type: type 5

15.8.1.7.22 <DV-UNT-M> [0005-7250](#)
indicates the number of times the M developing assembly has rotated in terms of the number of sheets involved.
Estimated life: 500000 prints
count type: type 5

15.8.1.7.23 <CL-SCR>	<u>0005-6978</u>
for the edge scraper, indicates the number of sheets that have passed. Estimated life: 500000 image Count type: type 1	
15.8.1.7.24 <C3-PU-RL>	<u>0005-6979</u>
for the cassette 3 pickup roller, indicates the number of sheets that have passed. Estimated life: 250000 prints count type: type 3	
15.8.1.7.25 <C3-SP-RL>	<u>0005-6980</u>
for the cassette 3 separation roller, indicates the number of sheets that have passed. Estimated life: 250000 prints count type: type 3	
15.8.1.7.26 <C3-FD-RL>	<u>0005-6981</u>
for the cassette 3 feed roller, indicates the number of sheets that have passed. Estimated life: 250000 prints count type: type 3	
15.8.1.7.27 <C4-PU-RL>	<u>0005-6982</u>
for the cassette 4 pickup roller, indicates the number of sheets that have passed. Estimated life: 250000 prints count type: type 3	
15.8.1.7.28 <C4-SP-RL>	<u>0005-6983</u>
for the cassette 4 separation roller, indicates the number of sheets that have passed. Estimated life: 250000 prints count type: type 3	
15.8.1.7.29 <C4-FD-RL>	<u>0005-6984</u>
of the cassette 4 feed roller, indicates the number of sheets that have passed. Estimated life: 250000 prints count type: type 3	
15.8.1.7.30 <LD-PU-RL>	<u>0005-6985</u>
for the left front deck pickup roller, indicates the number of sheets that have passed. Estimated life: 250000 prints count type: type 4	

15.8.1.7.31 <LD-SP-RL>	<u>0005-6986</u>
for the left front deck separation roller, indicates the number of sheets that have passed. Estimated life: 250000 prints count type: type 4	
15.8.1.7.32 <LD-FD-RL>	<u>0005-6987</u>
for the left front deck feed roller, indicates the number of sheets that have passed. Estimated life: 250000 prints count type: type 4	
15.8.1.7.33 <RD-PU-RL>	<u>0005-6988</u>
for the right front deck pickup roller, indicates the number of sheets that have passed. Estimated life: 250000 prints count type: type 4	
15.8.1.7.34 <RD-SP-RL>	<u>0005-6990</u>
for the right front deck separation roller, indicates the number of sheets that have passed. Estimated life: 250000 prints count type: type 4	
15.8.1.7.35 <RD-FD-RL>	<u>0005-6991</u>
for the right front deck feed roller, indicates the number of sheets that have passed. Estimated life: 250000 prints count type: type 4	
15.8.1.7.36 <M-PU-RL>	<u>0005-7251</u>
for the manual feed pickup roller, indicates the number of sheets that have passed. Estimated life: 120000 prints count type: type 3	
15.8.1.7.37 <M-SP-RL>	<u>0005-6993</u>
for the manual feed tray separation roller, indicates the number of sheets that have passed. Estimated life: 120000 prints count type; type 3	
15.8.1.7.38 <FX-UP-RL>	<u>0005-6994</u>
Fixing Upper Roller Number of sheets fed Estimated life: 180,000 (black-and-white mono; 100%) Count type: type 2 Be sure to reset the reading if you have replaced the fixing roller. If you have replaced the DC controller PCB, be sure to enter the reading recorded before the replacement.	

MEMO: Entering the Initial Reading

Highlight the counter reading [1], and type in the initial reading (from before the replacement work).

[1]

Display	Info	Adjust	Function	Option	Test	Counter
< / DRBL-1 >	< 5 / 7 >	< READY >				
RD-FD-RL	/00031652	/00250000	/ 12%			137
M-PU-RL	/00000010	/00120000	/ 0%			9999
M-SP-H	/00000010	/00120000	/ 0%			9999
FX-UP-RL	/00088577	/00180000	/ 49%			20
FX-LW-RL	/00088577	/00180000	/ 49%			20
FX-IN-BS	/00040335	/00500000	/ 8%			227
FX-WEB	/00040335	/00500000	/ 8%			227
FX-EX-RL	/00088577	/00180000	/ 49%			20

← → +/- OK ↵

F-15-29

The reading '18,000' (denominator) for [FX-UP-RL] may be changed, but a change will not affect the stored data, i.e., it will return to '180,000' when a different page is brought up or the power is turned off and then back on. To change the stored data (denominator), change the setting in the following service mode item: COPIER>OPERATION>BODY>FXWRNLVL.

The reading may be changed to any of the following three: 180,000/150,000/120,000.

15.8.1.7.39 <FX-LW-RL>**0005-7020**

for the fix lower roller, indicates the number of sheets that have passed.

Estimated life: 180000 prints

count type: type 2

15.8.1.7.40 <FX-IN-BS>**0005-7021**

for the fixing heat insulating bush, indicates the number of sheets that have passed.

Estimated life: 500000 prints

count type: type 3

15.8.1.7.41 <FX-WEB>**0005-7023**

for the fixing web, indicates the number of times it has been taken up.

Estimated life: 500000 prints

count type: type 3

Clear in COPIER>COUNTER>MISC>FIX-WEB and COPIER>COUNTER>DRBL-1>FX-WEB, when webs are exchanged

15.8.1.7.42 <FX-EX-RL>**0005-7024**

for the external heating roller, indicates the number of sheets that have passed.

Estimated life: 180000 prints

count type: type 2

15.8.1.7.43 <FX-LW-BS>	<u>0005-7027</u>
for the pressure roller heat insulating bush, indicates the number of sheets that have passed. Estimated life: 500000 prints count type: type 3	
15.8.1.7.44 <FX-EX-BS>	<u>0005-7028</u>
for the eternal heating roller bush, indicates the number of sheets that have passed. Estimated life: 500000 prints count type: type 3	
15.8.1.7.45 <DLV-UCLW>	<u>0005-7030</u>
for the delivery upper separation claw, indicates the number of sheets that have passed. Estimated life: 500000 prints count type: type 3	
15.8.1.7.46 <DLV-LCLW>	<u>0005-7031</u>
for the delivery lower separation claw, indicates the number of sheets that have passed. Estimated life: 500000 prints count type: type 3	
15.8.1.7.47 <OZ-FIL5>	<u>0005-7032</u>
for the fixing heat discharge fan, indicates the number of sheets that have passed. Estimated life: 1000000 image count type: type 1	
15.8.1.7.48 <TN-FIL2>	<u>0006-2159</u>
toner filter2; number of sheets fed Estimated life: 1,000,000 image count type: TYPE 1	
15.8.1.7.49 <TN-FIL5>	<u>0006-0071</u>
not used	
15.8.1.7.50 <FX-SPACE>	<u>0006-0075</u>
not used	
15.8.1.7.51 <ITB-SCRIP>	<u>0006-0076</u>
ITB scraper; number of sheets fed Estimated life: 600000 image count type: type 1	

15.8.1.8 DRBL-2

15.8.1.8.1 <DF-PU-RL>

0005-7033

for the ADF pickup roller, indicates the number of sheets it has picked up.

Estimated life: 80,000 prints

for both single-sided and double-sided modes, for each single original (not the sides), the count is increased by 1; large and small sizes are not distinguished

15.8.1.8.2 <DF-SP-PD>

0005-7036

for the ADF separation pad, indicates the number of sheets that have passed.

Estimated life: 80,000 prints

for both single-sided and double-sided modes, for each single original (not the sides), the count is increased by 1; large and small sizes are not distinguished

15.8.1.8.3 <DF-FD-RL>

0005-7039

for the DF separation plate, indicates the number of sheets that have been separated.

Estimated life: 80,000 prints

for single-sided mode, the count is increased by 1 for each single original; for double-sided mode, the count is increased by 3 (as feeding takes place 3 times for face, back, and idle); large and small sizes are not distinguished

15.8.1.8.4 <LNT-TAPE>

0005-7040

not used

15.8.1.8.5 <DF-SP-RL>

0005-7041

number of sheets passing the ADF feed (separation) roller

Estimated life: 80,000 prints

for both single-sided and double-sided modes, the count is increased by every single original (not the sides).

15.8.1.8.6 <LNT-TAP1>

0005-7043

for the dust collecting tape A, indicates the number of sheets that have passed.

Estimated life: 80,000 prints

for both single-sided and double-sided modes, the count is increased by 1 for every single original (not the sides); large and small sizes are not distinguished

15.8.1.8.7 <LNT-TAP2>

0005-7046

for the dust collecting tape B, indicates the number of sheets that have passed.

Estimated life: 80,000 prints

for both single-sided and double-sided modes, the count is increased by 1 for every single original (not the sides); large and small sizes are not distinguished

- 15.8.1.8.8 <LNT-TAP3> 0005-7050
for the dust-collecting tape C, indicates the number of sheets that have passed.
Estimated life: 80,000 prints
for both single-sided and double-sided modes, the count is increased by every signal original (not the sides); large and small sizes are not distinguished
- 15.8.1.8.9 <LNT-TAP4> 0005-7052
for the dust-collecting tape D, indicates the number of sheets that have passed.
Estimated life: 80,000 prints
for both single-sided and double-sided modes, the count is increased by for every single original (not the side); large and small sizes are not distinguished
- 15.8.1.8.10 <LNT-TAP5> 0005-7058
for the dust-collecting tape E, indicates the number of sheets that have passed.
Estimated life: 80,000 prints
for both single-sided and double-sided modes, the count is increased by 1 for every signal original (not the side); large and small size are not distinguished
- 15.8.1.8.11 <PD-PU-RL> 0005-7062
for the paper deck pickup roller, indicates the number of sheets that have passed.
Estimated life: 250,000 prints
- 15.8.1.8.12 <PD-SP-RL> 0005-7064
for the paper deck separation roller, indicates the number of sets that have passed.
Estimated life: 250,000 prints
- 15.8.1.8.13 <PD-FD-RL> 0005-7069
for the paper deck feed roller, indicates the number of sheets that have passed.
Estimated life: 250,000 prints
- 15.8.1.8.14 <SORT> 0005-7073
for the sort path, indicates the number of sheets that have passed.
(count retained by DC controller PCB)
- 15.8.1.8.15 <FIN-STPR> 0005-7077
for the stacker assembly, indicates the number of times the stapler has gone on.
(count retained by the DC controller PCB)
- 15.8.1.8.16 <SADDLE> 0005-7079
for the saddle path, indicates the number of sheets that have passed.
(count retained by DC controller PCB)

15.8.1.8.17 <SDL-STPL>

0005-7080

for the saddle assembly, indicates the number of times the stapler has gone on.
(count retained by DC controller PCB)

15.8.1.8.18 <PUNCH>

0005-7081

for the puncher, indicates the number of times it has gone on.
(count retained by DC controller PCB)

15.8.1.8.19 <FN-BFFRL>

0005-7082

for the buffer roller, indicates the number of times it has gone on.
(count retained by DC controller PCB)
for every single sheet that passes the buffer roller, the roller goes on once

Chapter 16 Upgrading

Contents

16.1 Outline	16-1
16.1.1 Outline of the Version Upgrade	16-1
16.1.2 Outline of the Service Support Tool.....	16-2
16.1.3 Network Interface of the Machine with the SST in Use	16-4
16.2 Making Preparations.....	16-8
16.2.1 Registering the System software	16-8
16.2.2 Making Connections.....	16-11
16.3 Formatting the HDD.....	16-17
16.3.1 Formatting All Partitions.....	16-17
16.3.2 Formatting Selected Partitions	16-18
16.3.3 Formatting the Procedure	16-20
16.4 Downloading System Software	16-27
16.4.1 Batch Downloading	16-27
16.4.1.1 Overview	16-27
16.4.1.2 Downloading Procedure	16-28
16.4.2 Downloading the System Software	16-40
16.4.2.1 Outline	16-40
16.4.2.2 Downloading Procedure	16-41
16.4.3 Downloading the RUI, and Language Module	16-48
16.4.3.1 Outline	16-48
16.4.3.2 Downloading Procedure	16-50
16.4.4 Downloading the BOOT Software	16-56
16.4.4.1 Outline	16-56
16.4.4.2 Downloading Procedure	16-57
16.4.5 Downloading the Dcon and Rcon Software	16-63
16.4.5.1 Outline	16-63
16.4.5.2 Downloading Procedure	16-64
16.4.6 Downloading the G3 FAX Software	16-70
16.4.6.1 Outline	16-70
16.4.6.2 Downloading Procedure	16-71
16.5 Uploading and Downloading Backup Data.....	16-77
16.5.1 Outline	16-77
16.5.2 Uploading Procedure	16-78
16.5.3 Downloading Procedure	16-84

16.1 Outline

16.1.1 Outline of the Version Upgrade

0005-6159

The version upgrade of this machine and the accessories can be done by downloading from a personal computer (PC) in which the service support tool (SST) is installed or by replacing DIMM-ROM. The table below shows a list of firmware and the associated way of upgrading.


T-16-1

	Firmware	Way of Version Upgrade		Notes
		SST	ROM-DIMM replacement	
Main Body	System (system software)	Yes	No	
	Language (language module)	Yes	No	
	RUI (remote UI)	Yes	No	
	Boot (boot program)	Yes	Yes	
	DCON (DC controller)	Yes	No	
	RCON (reader controller)	Yes	No	It also controls ADF reading.
Accessory	G3FAX (super G3FAX board-P1)	Yes	Yes	
	Fin_QR (Finisher-R1/ Saddle Finisher-R2)	Yes	No	The special service tool (Downloader PCB: FY9-2034) is necessary.

16.1.2 Outline of the Service Support Tool

0001-1613

The service support tool (SST, hereafter) provides the following functions:

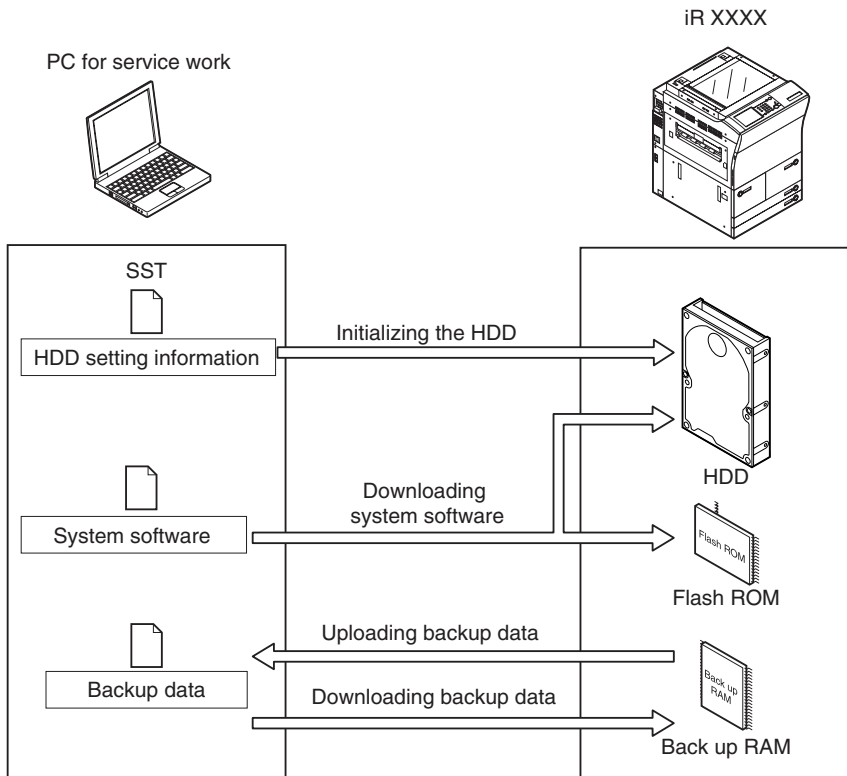

F-16-1


To use the SST, you must first set the machine to download mode.
The machine's download mode consists of 2 types.

-Normal Mode(Download mode B)

(With pressing 1+7, turn on the main power switch and select service mode: COPIER> FUNCTION> SYSTEM> DOWNLOAD.)

-Safe Mode(Download mode A)

(With pressing 2+8, turn on the main power switch.)

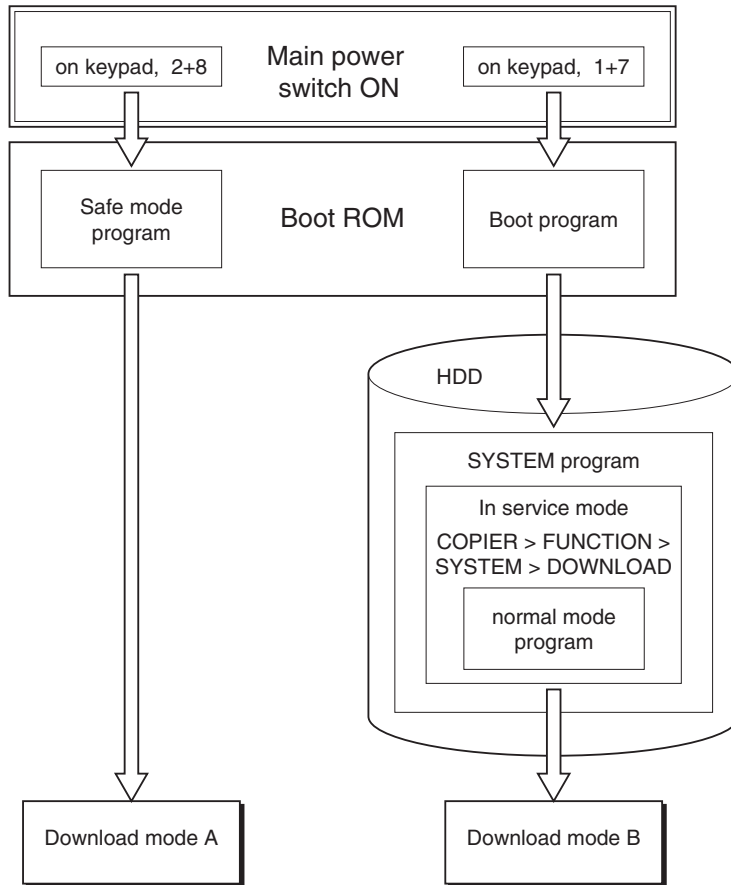

F-16-2



Use safe mode for the following:

- after replacing the HDD.
- if the system fails to operate normally.

The following shows combinations of functions that may be used in association with the SST and the download mode:

T-16-2

Function	Download mode	
	Normal mode (download mode B)	Safe mode (download mode A)
Formatting the HDD	-	ALL
	-	BOOTDEV
	DOSDEV	-
	FSTDEV	-
	DOSDEV2	-
	FSTPDEV	-
	DOSDEV3	-
	PDLDEV	-
	DOSDEV4 DOSDEV5	- -
Downloading system software	-System	-System
	-Language	-Language
	-RUI	-RUI
	-Boot	-Boot
	-G3FAX	-
	-Dcon	-
	-Rcon	-
Downloading/ Uploading back up data	-DconSRAM -RconSRAM	- -

16.1.3 Network Interface of the Machine with the SST in Use

0001-1615

The machine communicates with the SST using the Ethernet protocol(TCP/IP).

The machine offers 2 sets of network settings:

-user environment network settings

(Additional Function> system control settings> network settings)


-service network settings

(IP address: 172.16.1.160

Subnet mask: 255.255.255.0)


The network settings are dependent on how the machine is started up.
The user environment settings are retained while the service settings are selected.

⚠ You need not change the user environment network settings before or after the SST.

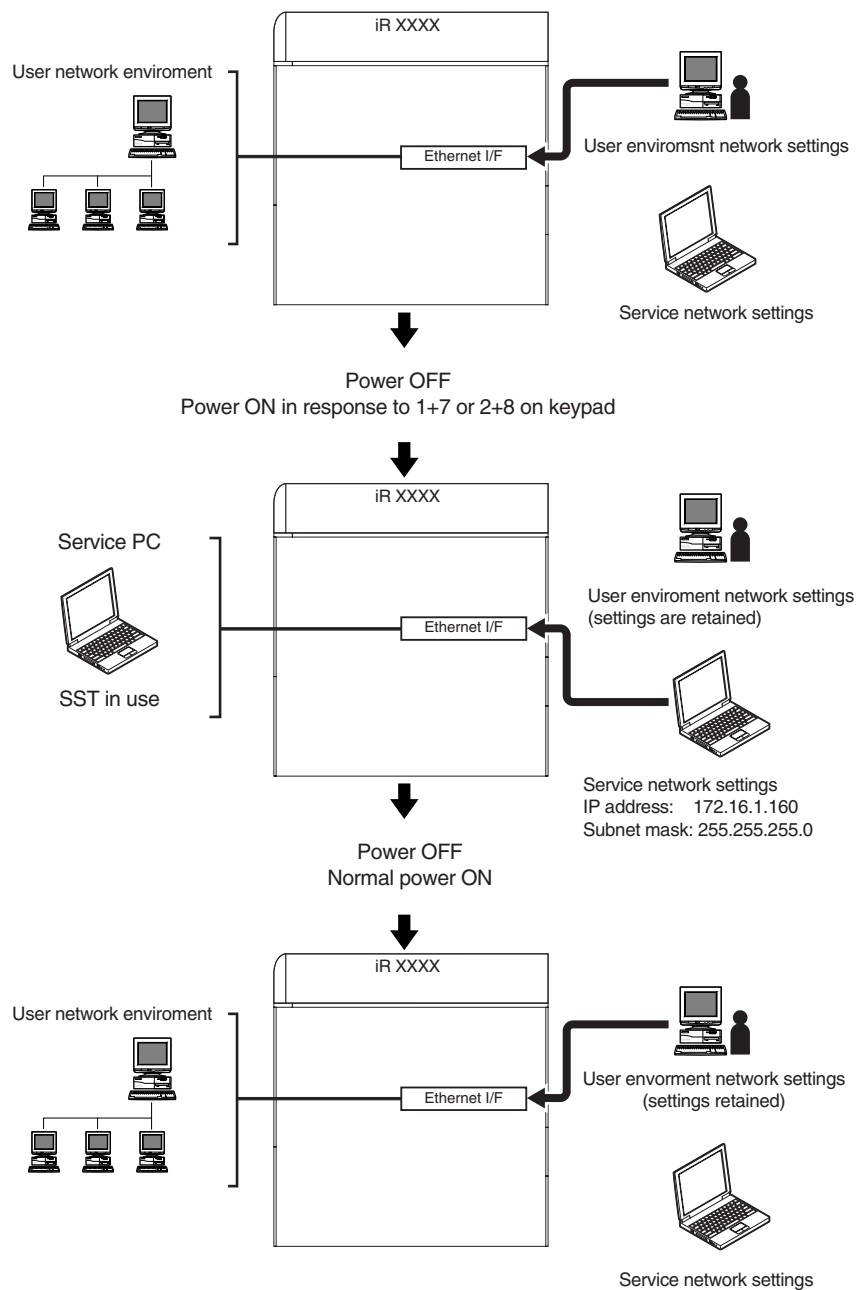

F-16-3

If you start up the machine by pressing 1+7, the machine indicates 'FIXIP' in the upper right of the LCD to distinguish its state from normal.

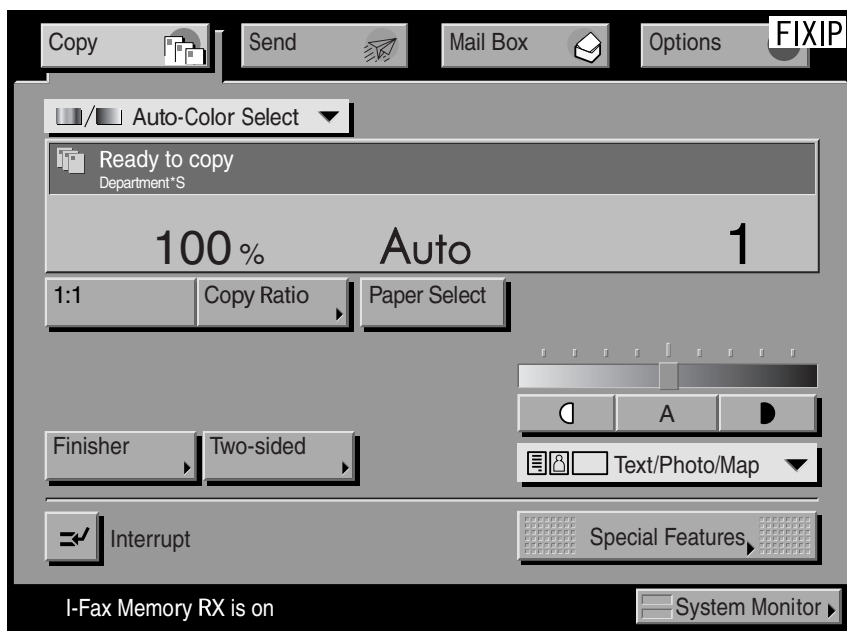

F-16-4


**Attention when installed option board****-Normal Power ON**

The Ethernet interface is disabled if a TokenRing board is installed.

-Power ON in response to 1+7 or 2+8

The Ethernet interface is enabled if a TokenRing board is installed, and the TokenRing board is disabled.

You need not remove the TokenRing board when connecting the SST.

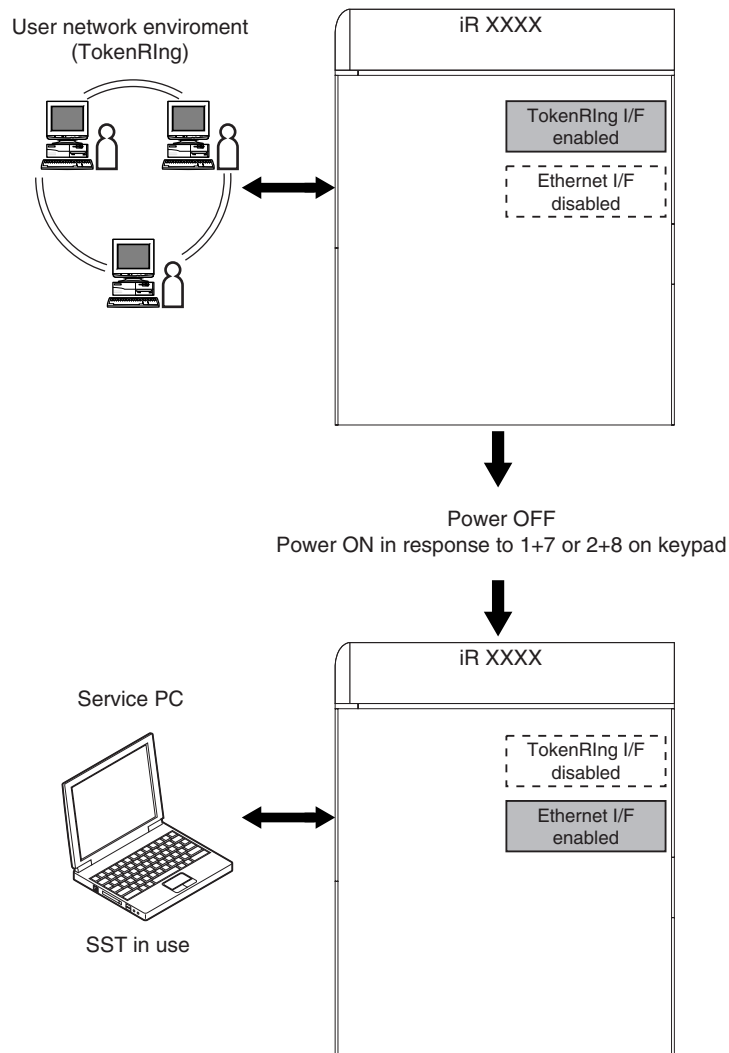

F-16-5

16.2 Making Preparations

16.2.1 Registering the System software

0005-4852

Register the System software stored on the system CD to the SST.


[Before starting the work]

Keep the following on hand:

- PC to which SST v1.73 or later has been installed.
- system CD for iRC6800
(if the machine supports the Netware, prepare the system CD for iRC6800N)


[Registering the System software]

- 1) Start up the PC.
- 2) Set the system CD to the PC.
- 3) Start up the SST.
- 4) Click [next] under Controlling Data.

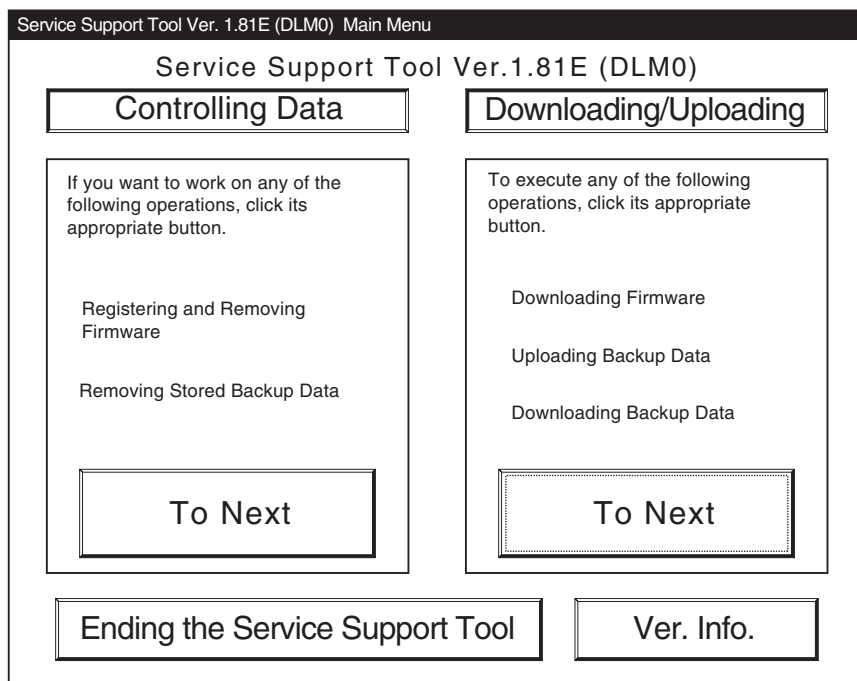


F-16-6

5) Click [Registering Firmware].

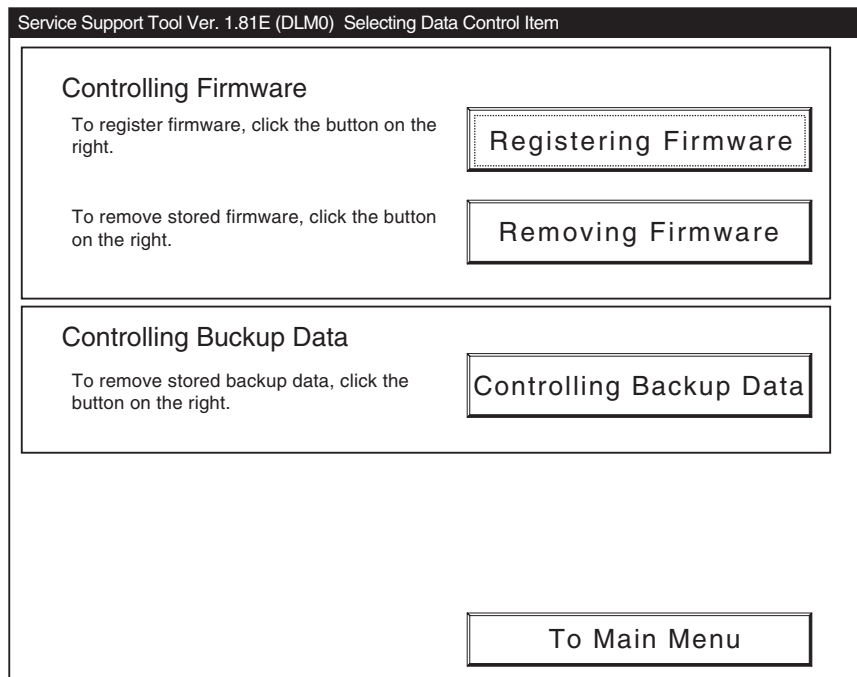


F-16-7

6) Click [Register from selected folder].

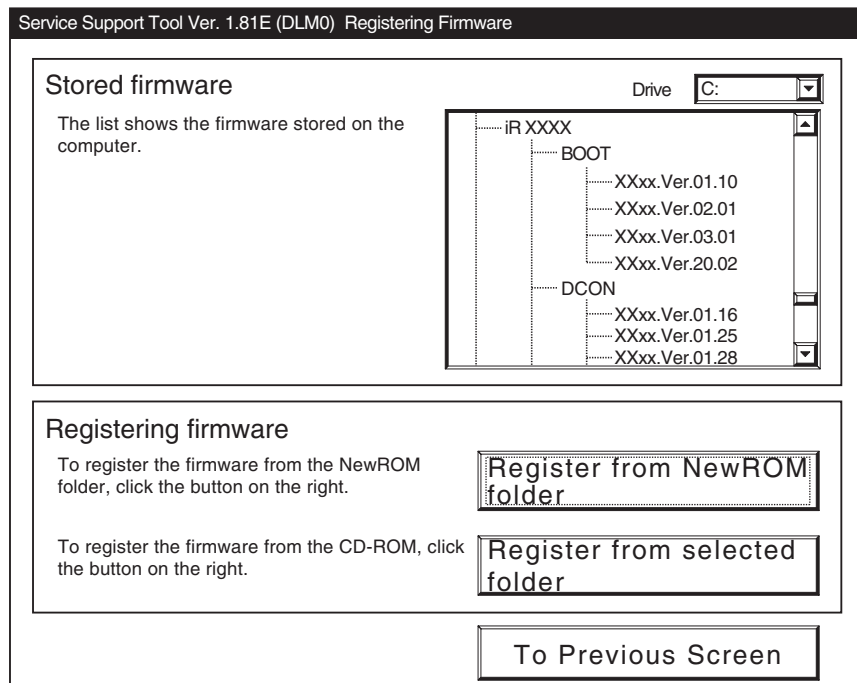


F-16-8

7) Select the drive in which you have set the system CD, and click [Search].

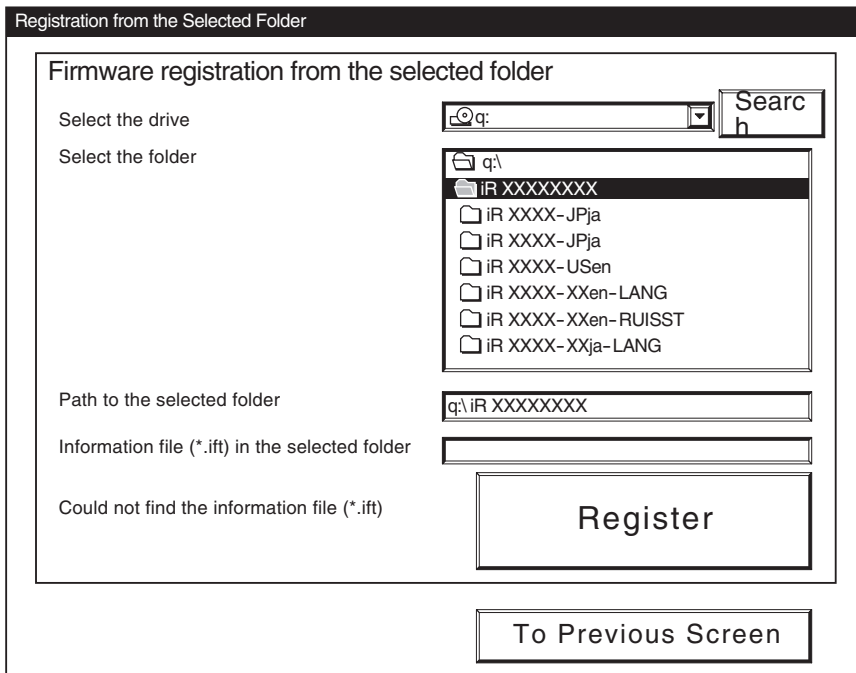


F-16-9

8) When the list of system software items contained on the system CD has appeared, click [Register All] after it becomes enabled.

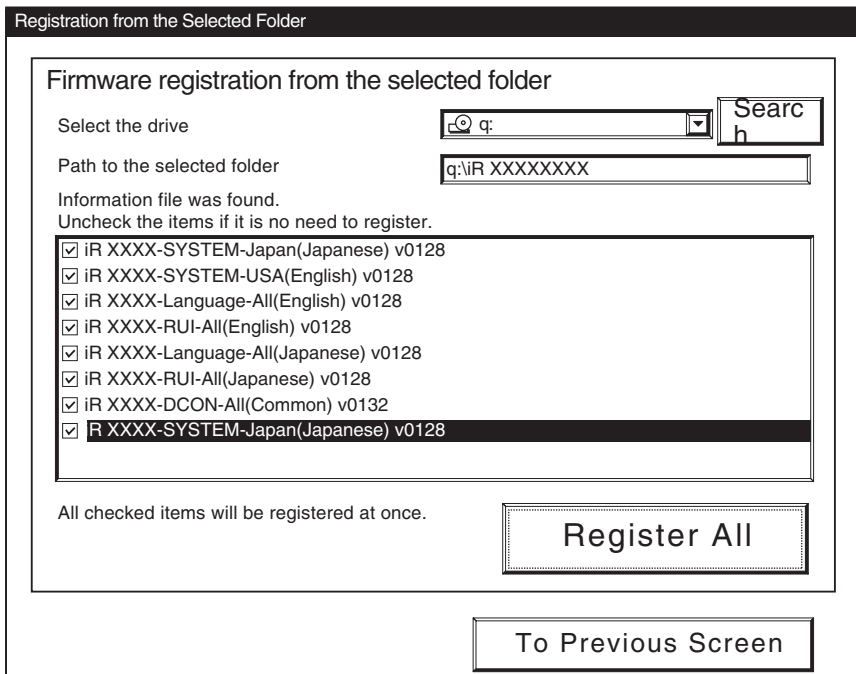

F-16-10

9) When the result of the registration have appeared, click [OK].

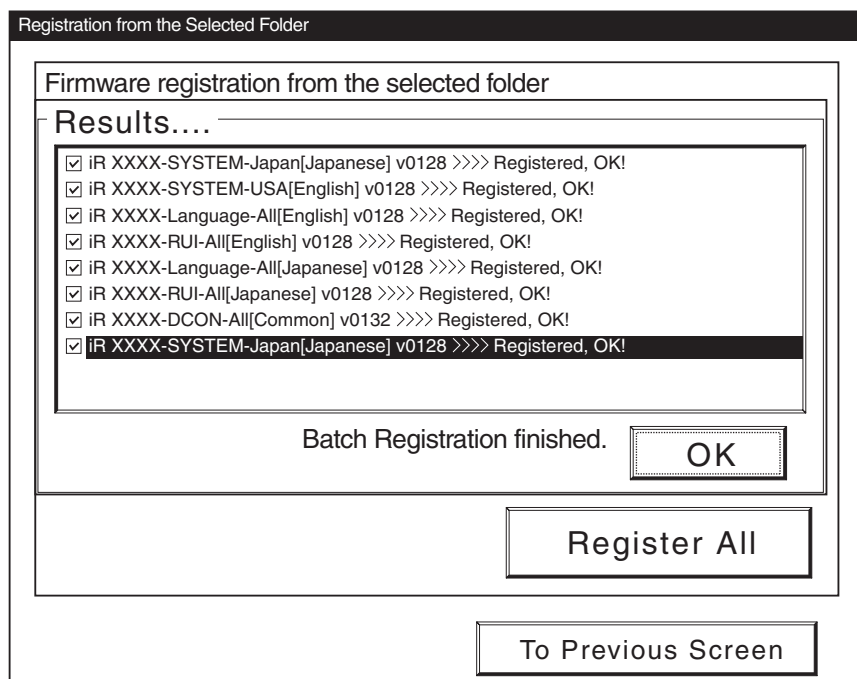

F-16-11

16.2.2 Making Connections

0005-4868

You will be connecting the PC to the machine.

[Before starting the work]

Keep the following on hand:

- PC to which SST v1.73 or later has been installed and iRC3100 system software has been registered.
- Twisted pair Cross cable
- 10BASE-T: category 3 or 5
- 100BASE-T: category 5

[Procedure]

- 1) Start up the PC.
- 2) Check the network settings of the PC.
 - Type '**IPCONFIG**' to the command prompt, and press the Enter key.
 - Check to see that the network settings are as follows:

IP address: 172.16.1.160


Subnet mask: 255.255.255.0

Default gateway: any

⚠ Do not use the following settings.


- 172.16.1.0
- 172.16.1.100
- 172.16.1.255

If the settings are not as indicated, change the PC network settings:

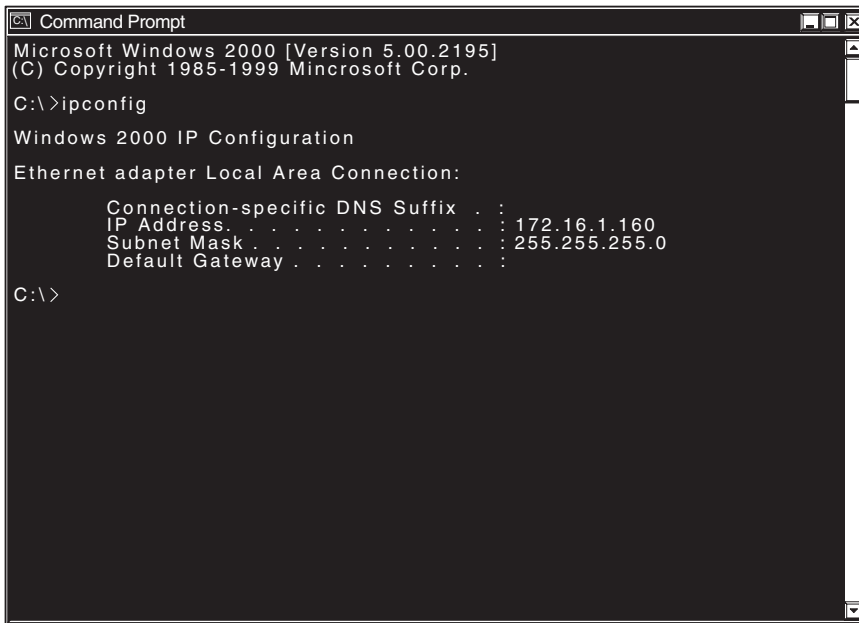

F-16-12

- 3) Check to see that the Execute/Memory lamp on the control panel is OFF; then, turn off the main power switch of the machine.
- 4) Connect the PC and the machine with a cross cable.

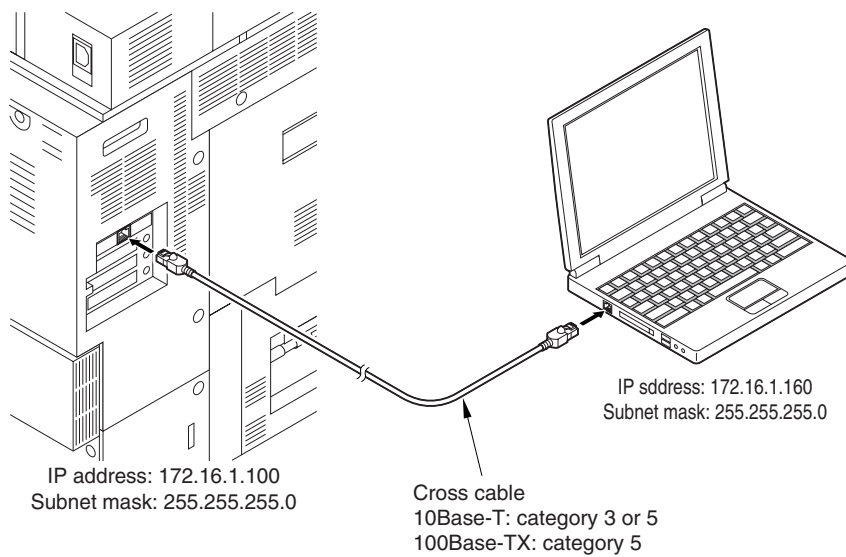

F-16-13

5) While holding down the keys suited to the download mode you are going to use, turn on the main power switch of the machine.

-if Normal mode

Turn on the main power switch in response to 1+7 on keypad.

Enter service mode, make the following selection in service mode:


COPIER> FUNCTION> SYSTEM> DOWNLOAD

-if Safe mode

Turn on the main power switch in response to 2+8 on keypad.


6) Start up the SST.

7) Click [To next] under Downloading/Uploading.

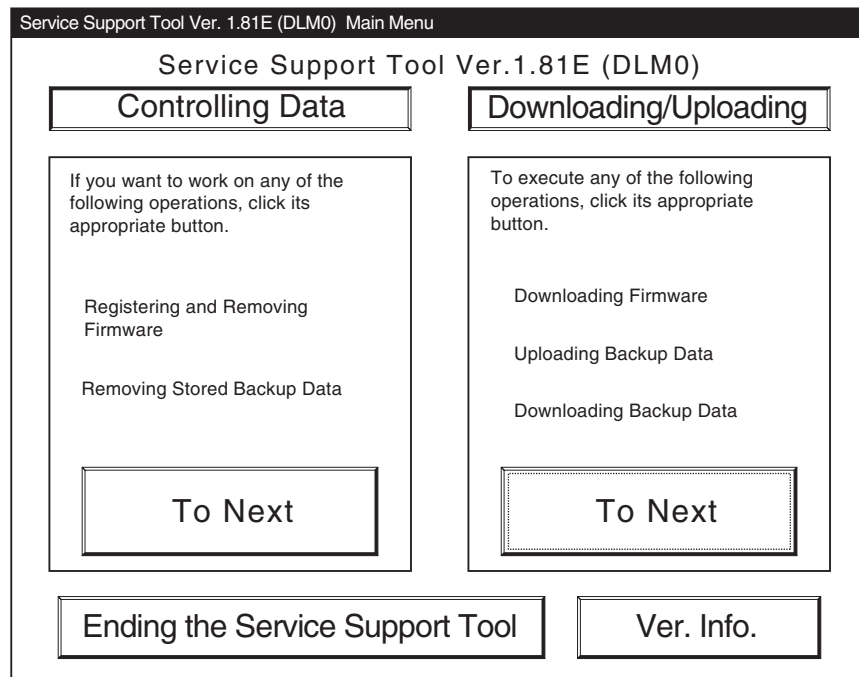


F-16-14

8) Select the model of the machine.

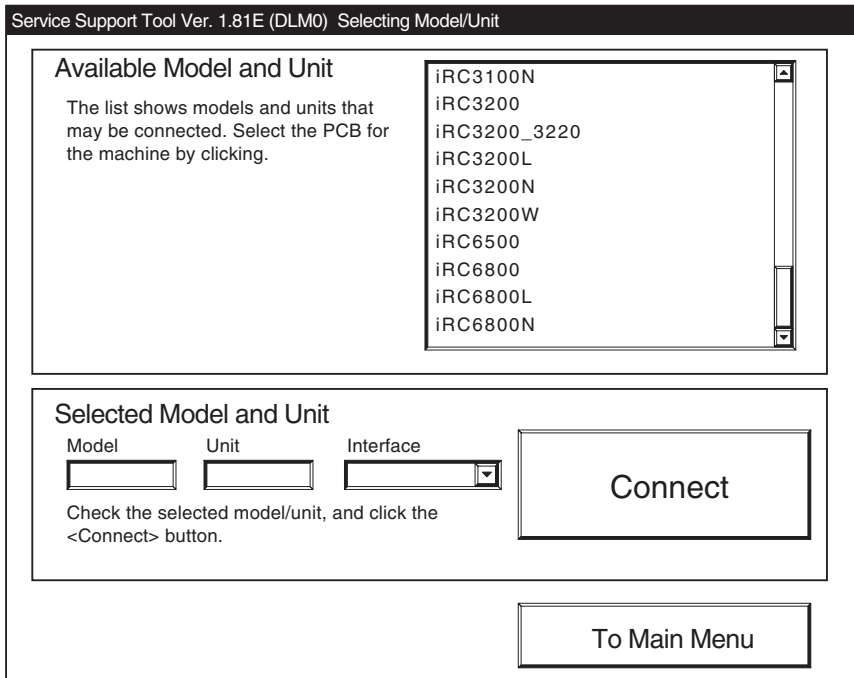


F-16-15

9) Select the unit you want, and click [Connect].

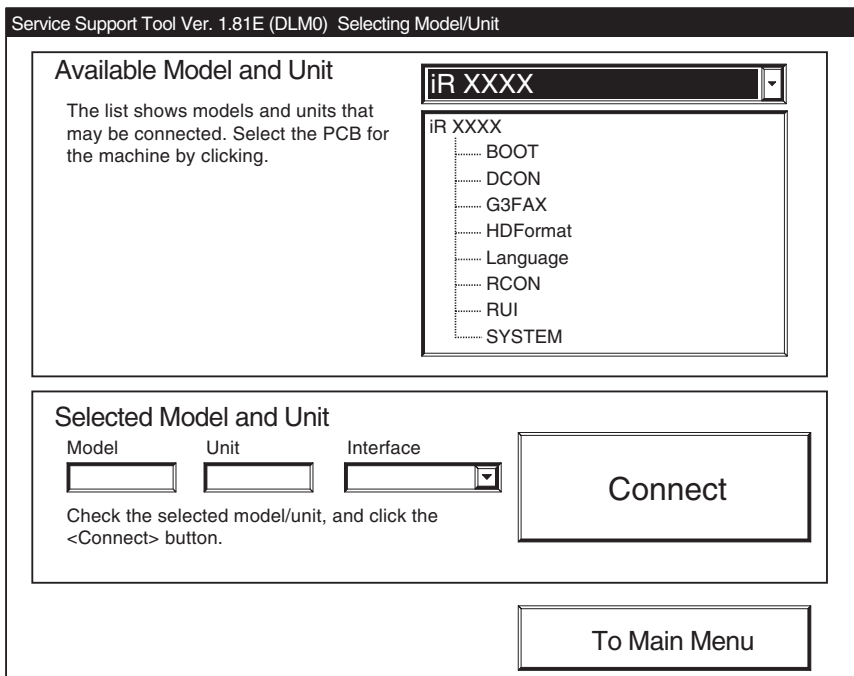


F-16-16

10) Click [Set host name].

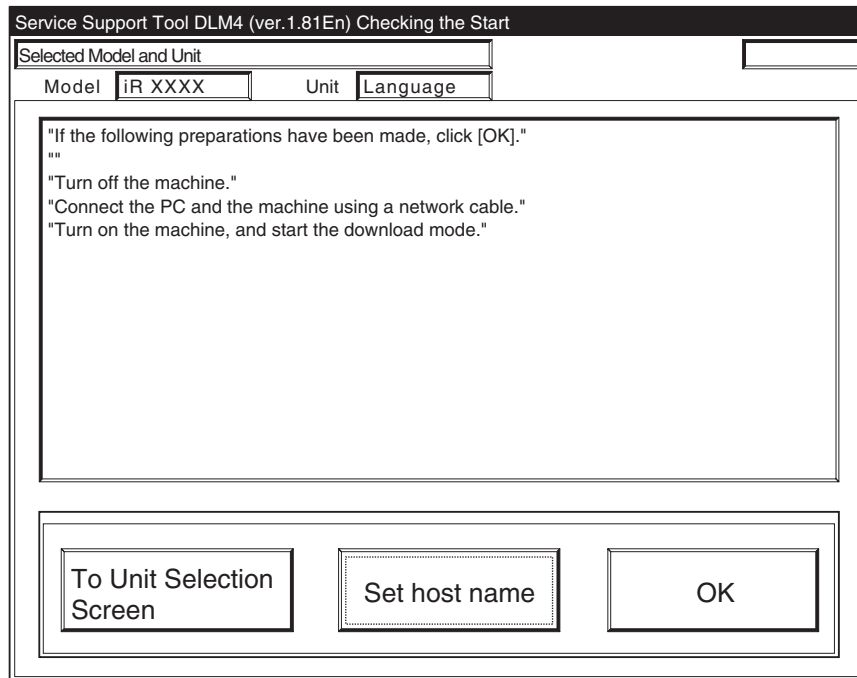


F-16-17

11) The machine's IP address is entered automatically; click [OK].

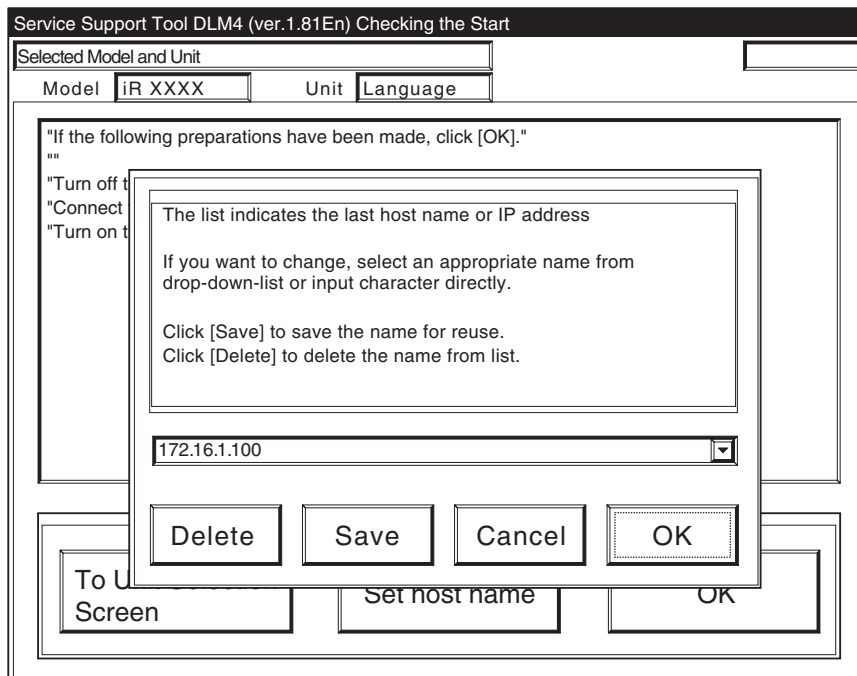


F-16-18

12) Click [OK] so that the machine makes a connection.

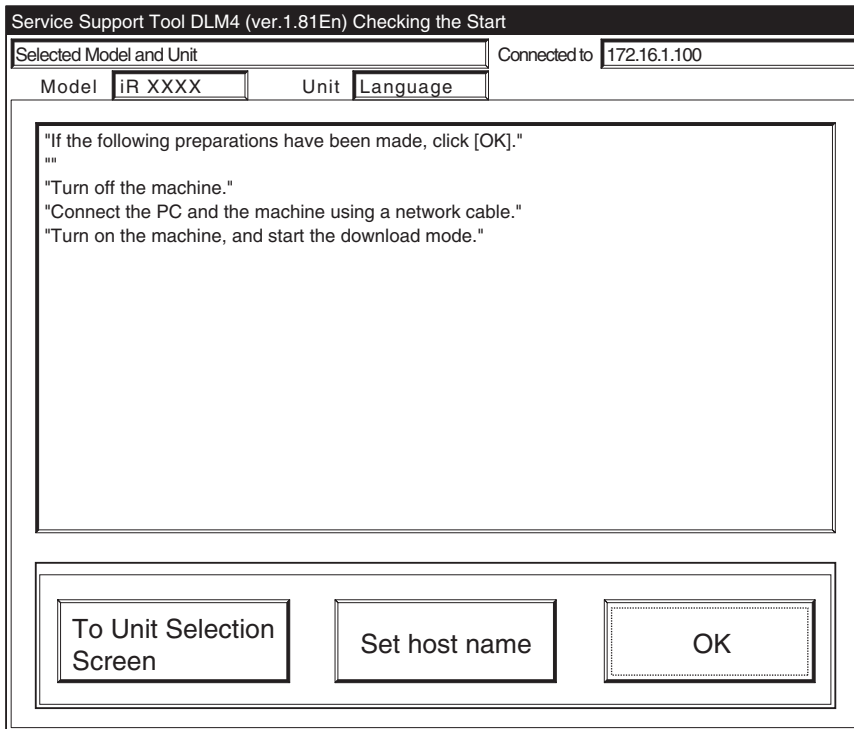

F-16-19

13) When the machine has made a connection and brings up the following screen, click [OK].

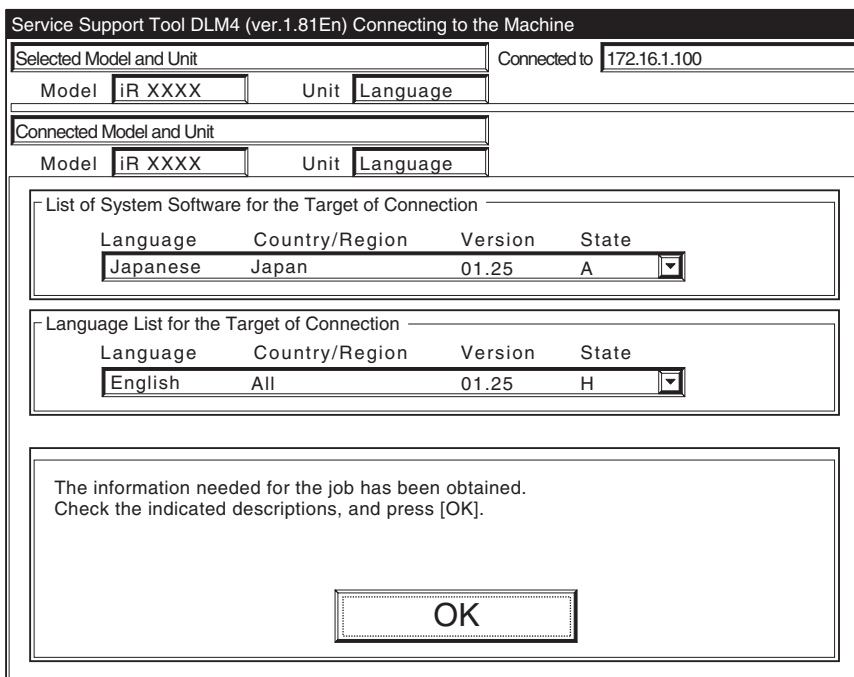


F-16-20

16.3 Formatting the HDD

16.3.1 Formatting All Partitions

0001-1640

You will be setting up partitions on the HDD and formatting (initializing) them for use by the main controller.

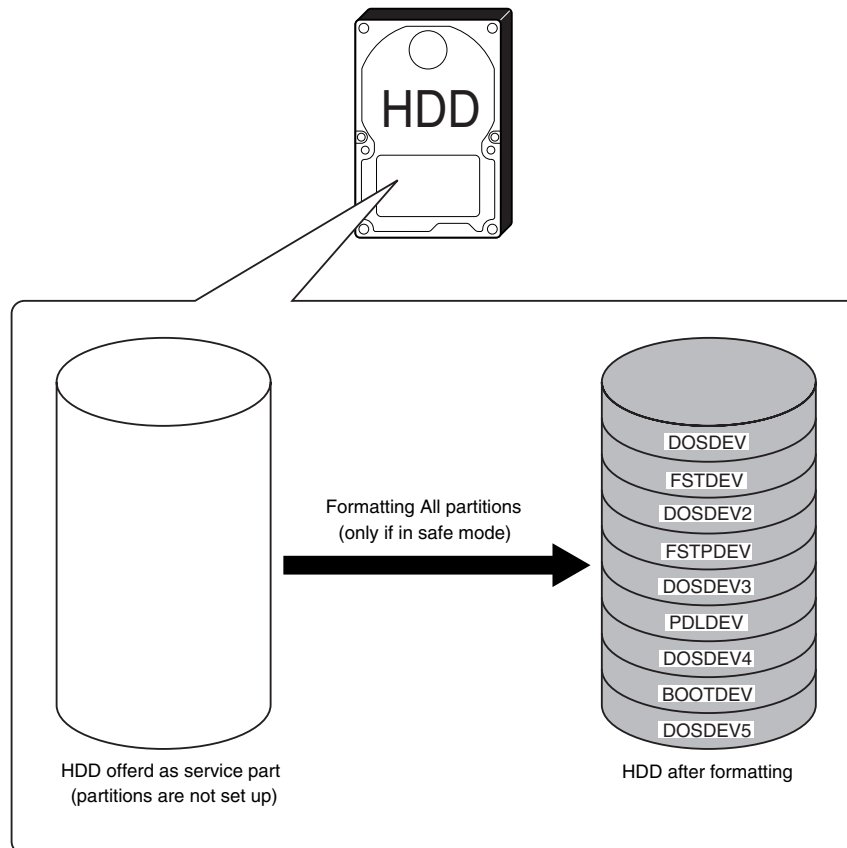


F-16-21

16.3.2 Formatting Selected Partitions

0001-1642

You will be formatting (initializing) partitions that you have selected.

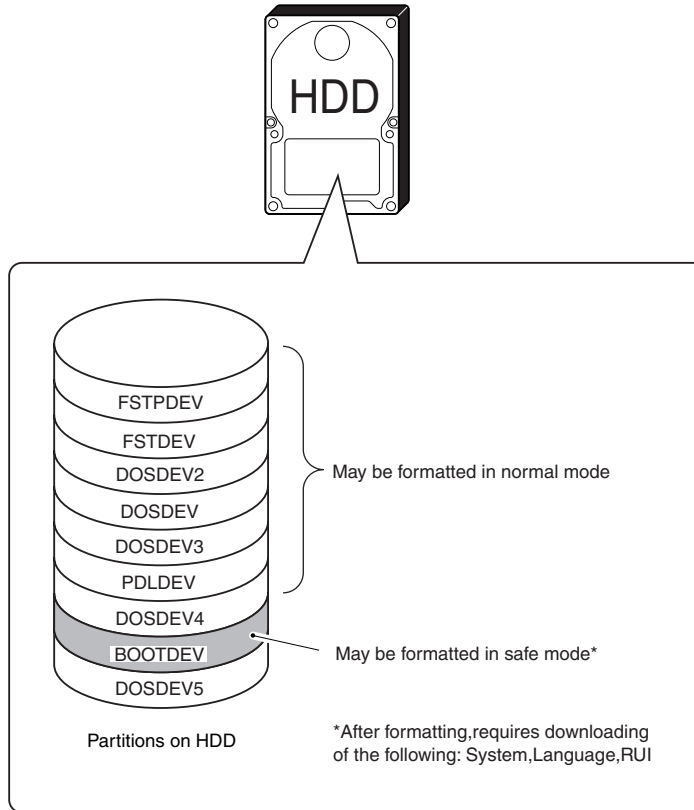

F-16-22

Formatting Partitions Using the SST

T-16-3

Name of partition selected by the SST	Partition that is formatted
FSTDEV	FSTDEV, FSTPDEV, DOSDEV, DOSDEV2
DOSDEV3	DOSDEV3
PDLDEV	PDLDEV
DOSDEV4	DOSDEV4
DOSDEV5	DOSDEV5
BOOTDEV	BOOTDEV



- 4 partitions (FSTDEV, FSTPDEV, DOSDEV, DOSDEV2) are formatted at the same time.
- Formatting of DOSDEV4 requires the use of the SST.

The actual formatting of FSTDEV and PDLDEV takes place when the machine is started up the next time, and it takes as long as the following:

Formatting of FSTDEV: 2 min (approx.)

Formatting of PDLDEV: 5 min (approx.)


Formatting of All partitions: 7 min (approx.)

- The times vary according to the state of the HDD, and the progress of formatting is indicated by means of a progress bar.
-

16.3.3 Formatting the Procedure


0005-4901

1) Click [To next] under Downloading/Uploading.

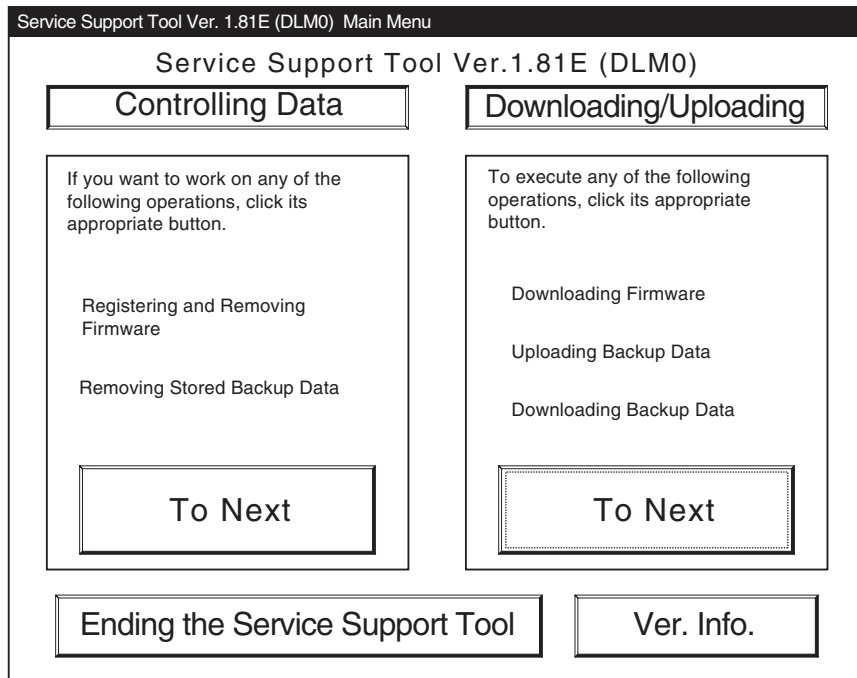


F-16-23

2) Select [HDForamt], and click [Connect].

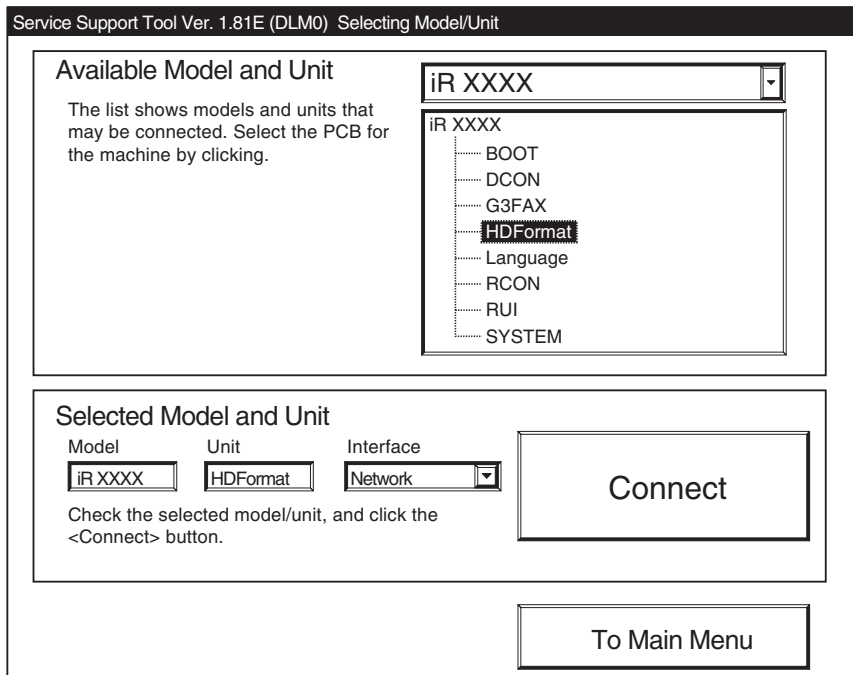


F-16-24

3) Click [Set host name].

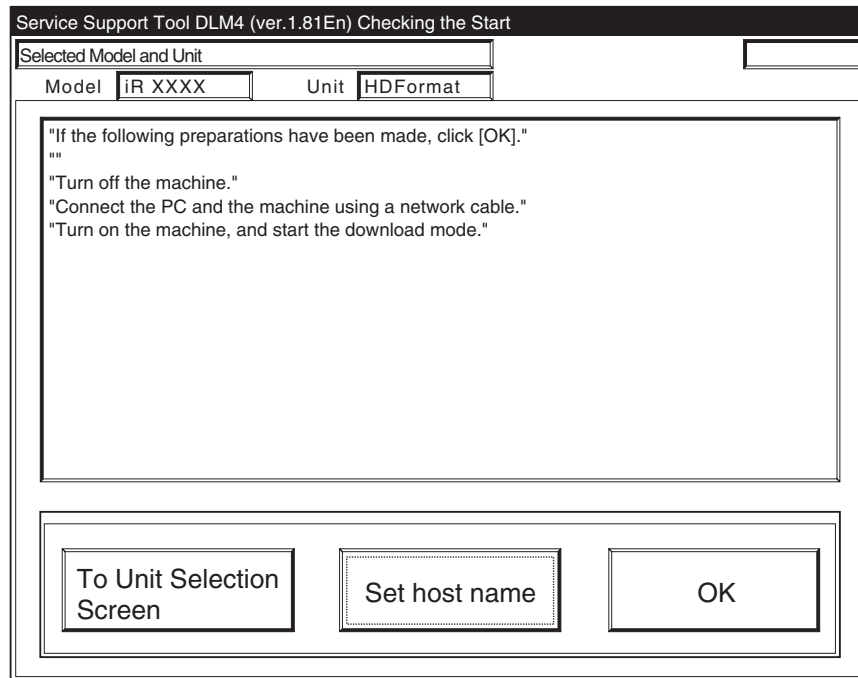


F-16-25

4) The machine's IP address is entered automatically; click [OK].

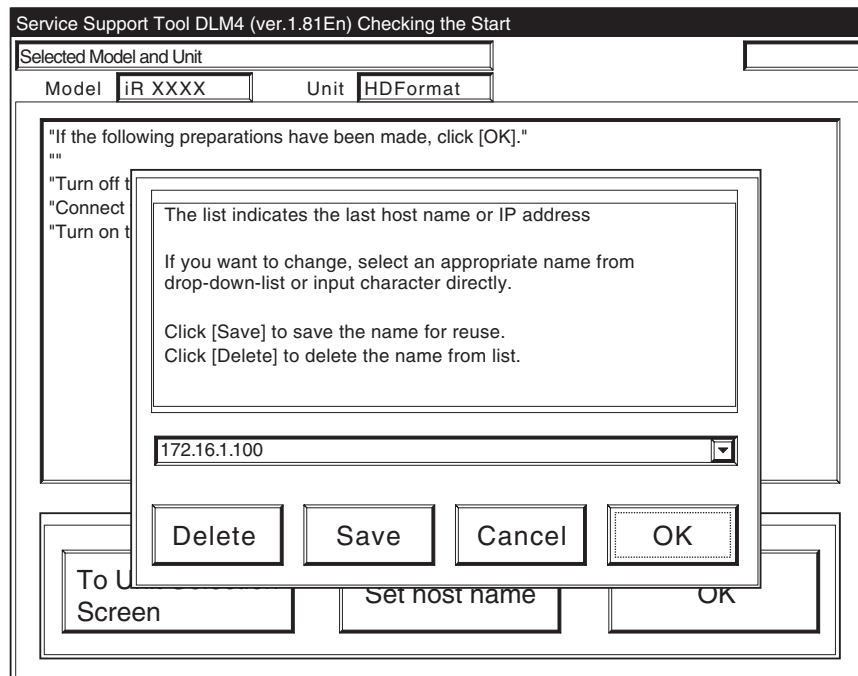


F-16-26

5) Click [OK] to start connection.

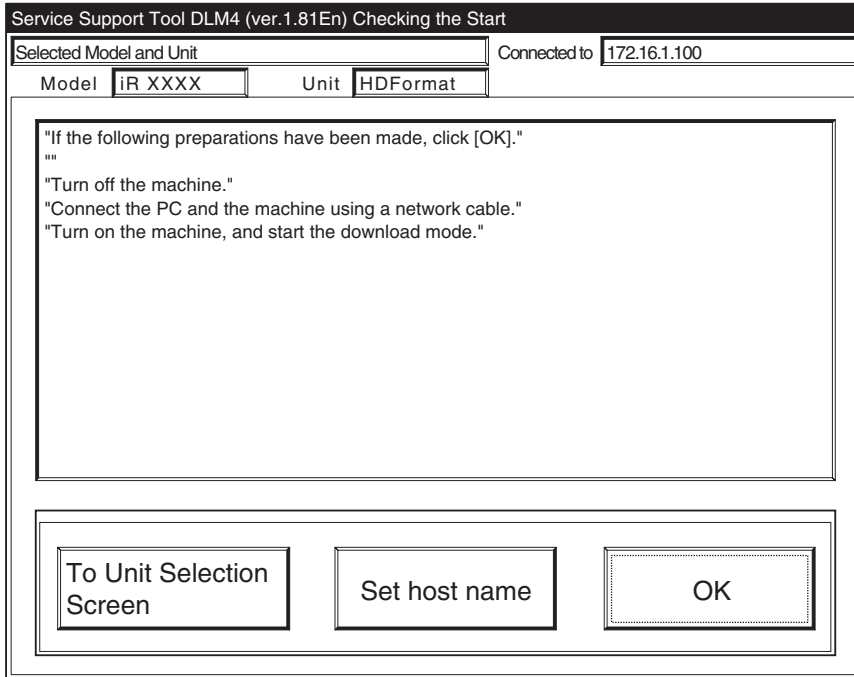


F-16-27

6) When the machine has made a connection and brings up the following screen, click [OK].

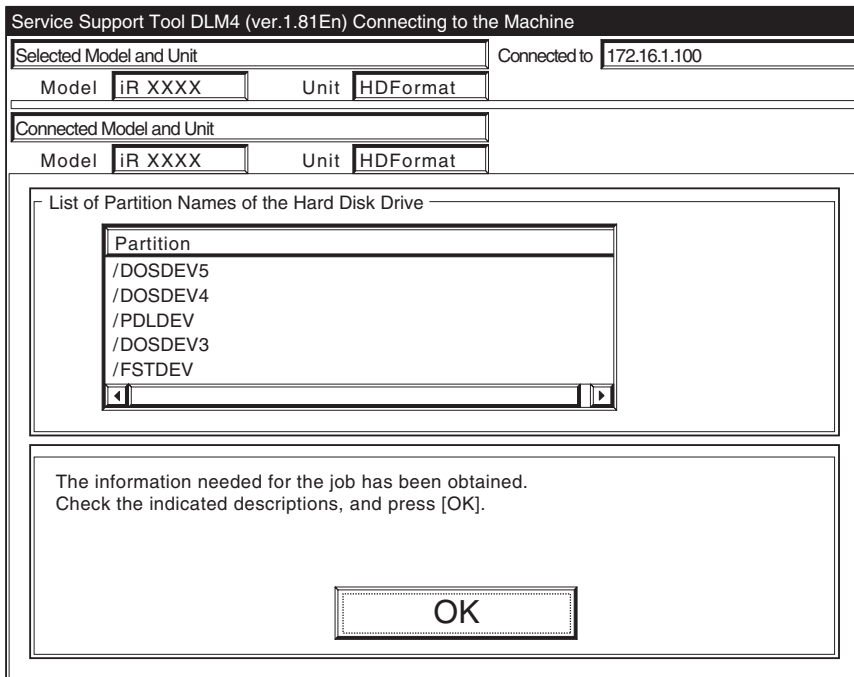

F-16-28

7) Click [Format].

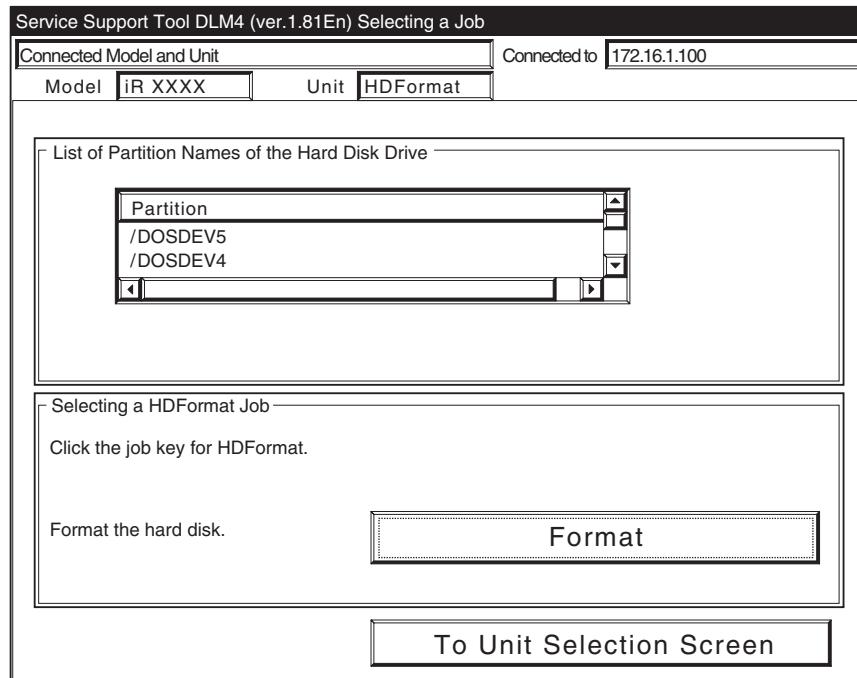


F-16-29

8) Select the partition you want to format from the list, and click [start].




When formatting all partitions, click [start] under All partitions (enabled if in safe mode).

-A.If formatting in Normal Mode (Power ON in response to 1+7)

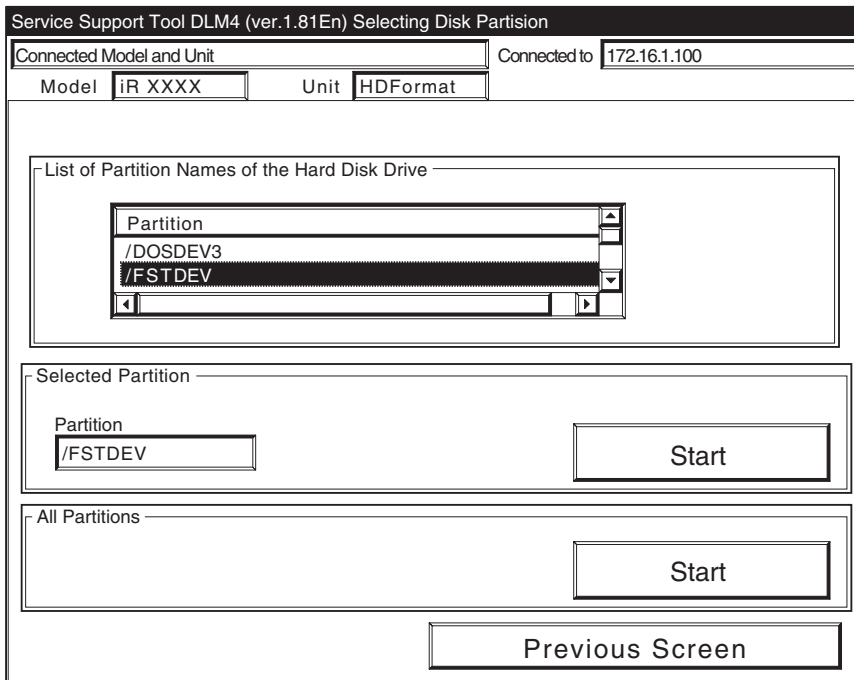

F-16-30

-B.If formatting in Safe Mode (Power ON in response to 2+8)

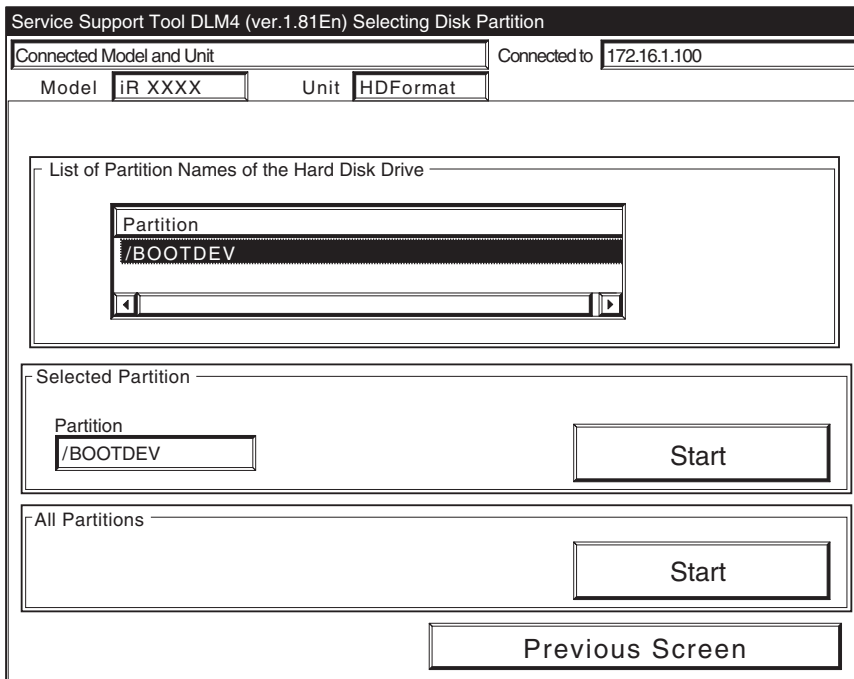

F-16-31

9) When the machine indicates the message for confirmation for the last time, click [Start].

Service Support Tool DLM4 (ver. 1.81En) Formatting the disk

Connected Model and Unit Connected to

Model Unit

Selected Partition

Partition

Final Confirmation

Formatting

F-16-32

10) After the machine indicates the message to the indicate the end of formatting, click [OK].

Service Support Tool DLM4 (ver. 1.81En) Formatting the disk

Connected Model and Unit Connected to

Model Unit

Selected Partition

Partition

Result of Formatting

Formatting has ended.

F-16-33

11) Click [To Unit Selection Screen].



-If you have formatted all partitions or BOOTDEV, you must download the following:

System, Language, RUI

(If you fail to download these, an error(E602) will occur when the main power switch is turned ON.)

-The actual formatting of FSTDEV and PDLDEV takes place when the machine is started up the next time, and it takes as long as the following:

Formatting of FSTDEV: 2 min (approx.)

Formatting of PDLDEV: 5 min (approx.)

Formatting of All partitions: 7 min (approx.)

-The times vary according to the state of the HDD, and the progress of formatting is indicated by means of a progress bar.

-You must not turn off the machine's main power switch while the progress bar is shown.

16.4 Downloading System Software

16.4.1 Batch Downloading

16.4.1.1 Overview

0005-9073


If you need to download multiple pieces of system software, you can do so automatically. To make use of batch downloading, you need to have the following:

-SST v2.01 or later

<Files to Register in the SST>

-information file for batch downloading

-system software

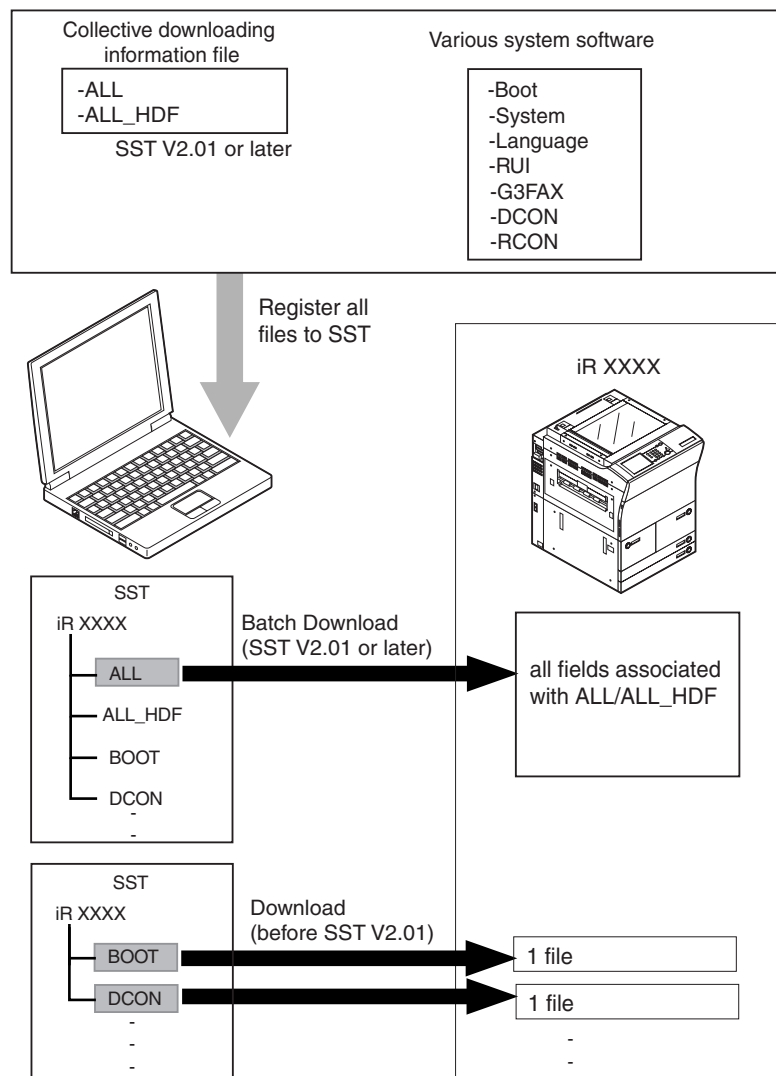

F-16-34

Memo

An information file for batch downloading:

It contains appropriate combinations of system software versions to download. Once it is registered in the SST, the relevant files will be identified by the notation "ALL" and "ALL_HDF".



ALL/ALL_HDF does not include the various system software itself.

To register ALL/ALL_HDF, be sure also to register the various system software at the same time.

Clicking 'ALL' or 'ALL_HDF' will download **the following system software pieces that have been registered in SST** in sequence:

[to HDD]

- System (system software)
- Language (language module)
- RUI (Remote UI)

[to each PCB]

- Boot (boot program)
- DCON (DC controller)
- RCON (reader controller)

16.4.1.2 Downloading Procedure

0005-9074

[Memo]

You can use either of the following two approaches for a downloading session as long as you have selected the appropriate "downloading information file":

-normal mode (turn on the main power while holding down 1+7): ALL

-safe mode (turn on the main power while holding down 2+8): ALL_HDF

[Items to Prepare]

Check to be sure that you have the following on hand:


- PC to which SST v2.01 or later has been installed
- iR C6800 System CD

A. Prepare for the Batch Download (Registering the Information File)

A-1) Start up the PC.


A-2) Start up the Service Support Tool.

A-3) Click [next] under [Controlling Data].

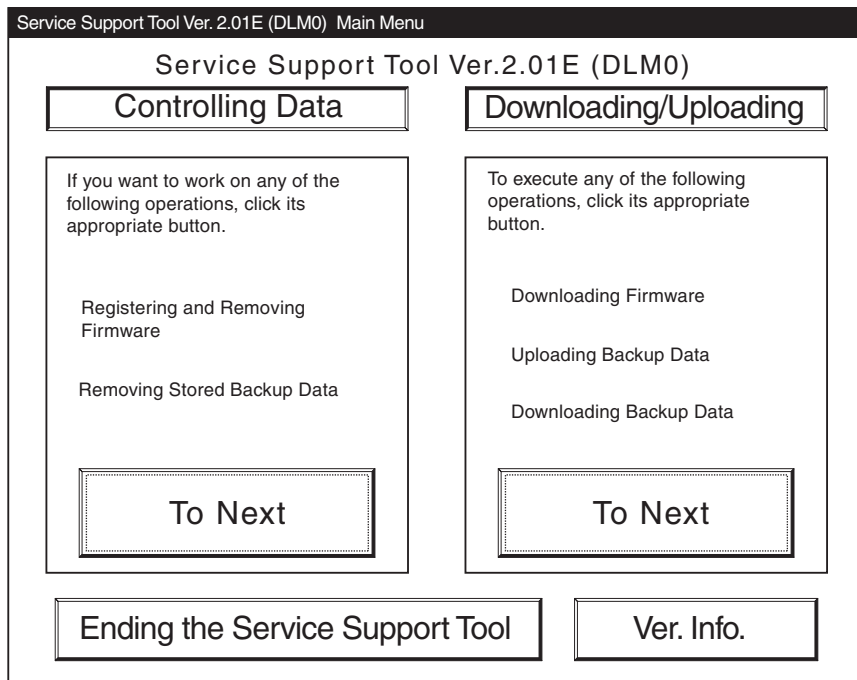


F-16-35

A-4) Click [Registering Firmware].

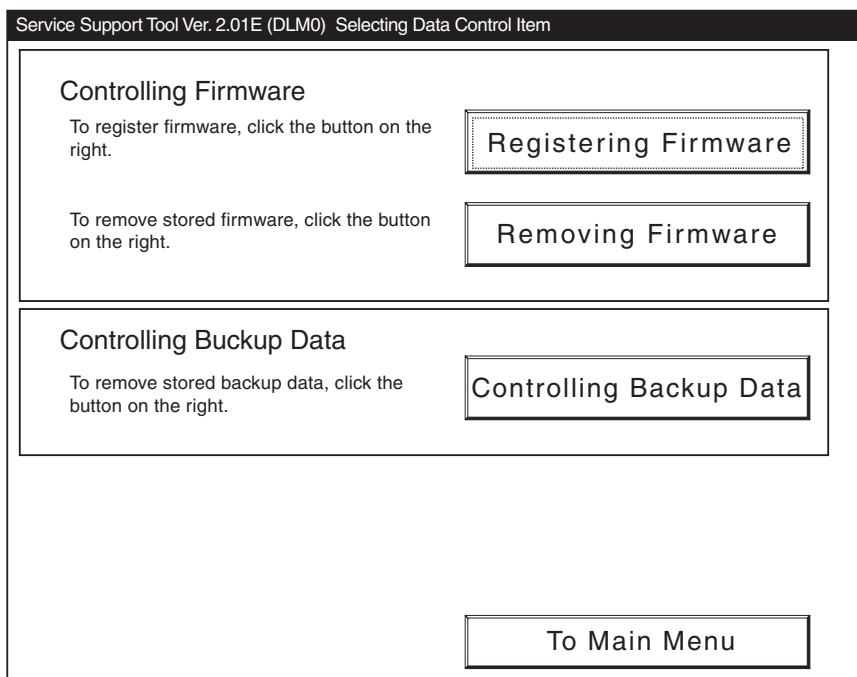


F-16-36

A-5) Click [register from selected folder].

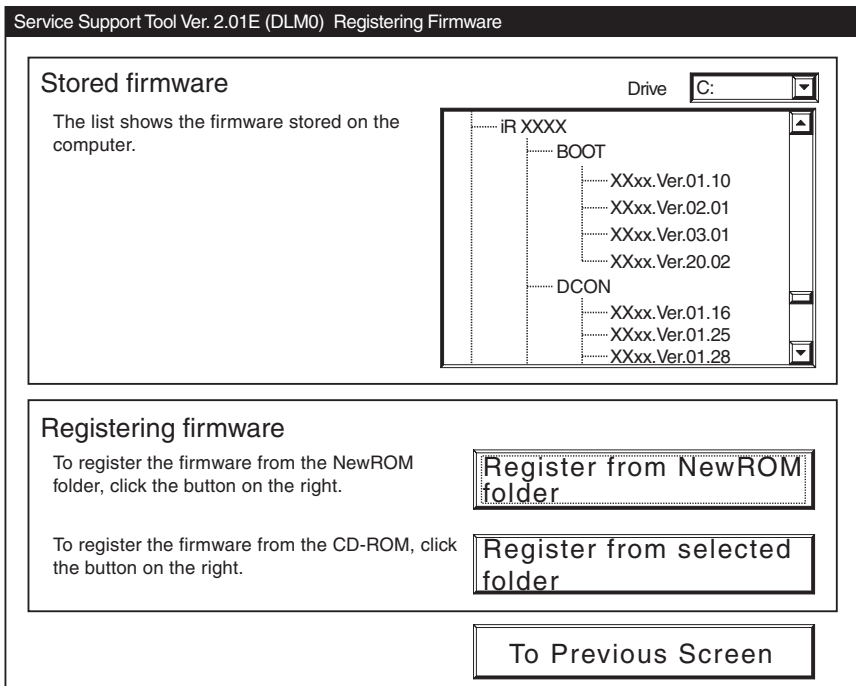


F-16-37

A-6) Select the folder containing the collective download information file, and click [Register].

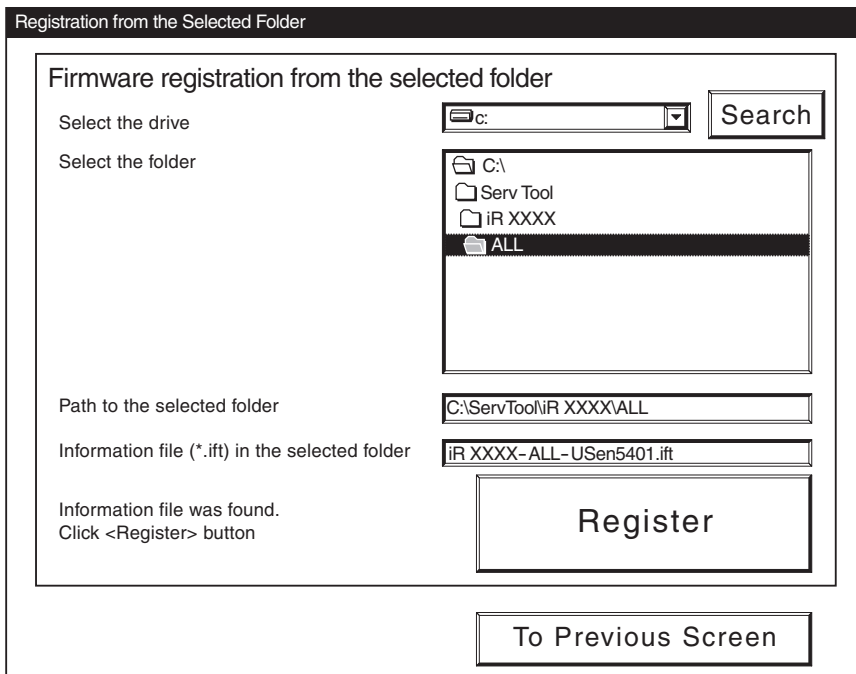

F-16-38

A-7) When 'Batch object files registration status' has appeared, click [OK].

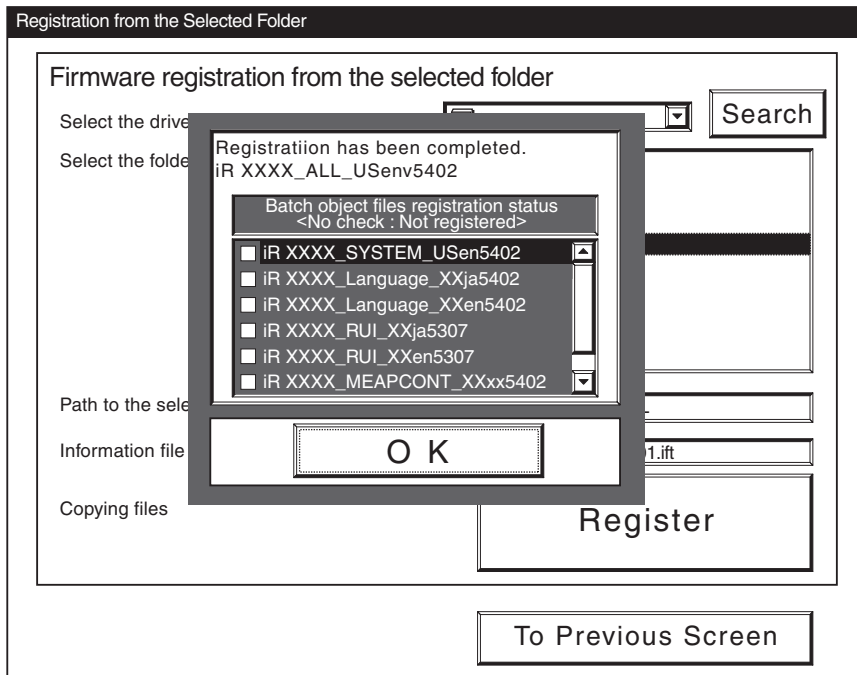

F-16-39



If you choose "Register All" using version 2.01 of the SST,

ALL will not be indicated under "Batch object files registration status" and all the check boxes of the field remain blank. Although this seems to indicate that no system software has been registered, the system software you have selected has been registered.

(In the case of version 2.02 or later of the SST, the appropriate check boxes will be checked.)

<Making Sure That the Appropriate System Software Has Been Registered>

- 1) On the Models and Units screen, select 'ALL' or 'ALL_HDF'.
- 2) Click [Batch Download].
- 3) Check to see that the Batch Download File List screen indicates the paths to the individual pieces of system software.

Service Support Tool Ver. 2.01E (DLM0) Batch Download Control Screen

Batch download list

"iR XXXX Ver2.01"
"Common to C-Boot and N-Boot"

Job	Path
Wait "Turn off the copier, then turn on..."	
Download iR XXXX_SYSTEM_USen2101	C:\ServTool\iR XXXX\SYSTEM\USen21.01\iR
Download iR XXXX_Language_XXja2101	C:\ServTool\iR XXXX\Langugage\XXjav21.01\iR
Download iR XXXX_Language_XXen2101	C:\ServTool\iR XXXX\Langugage\XXenv21.01\iR
Download iR XXXX_DCON_XXxx2007	C:\ServTool\iR XXXX\DCON\XXjav21.01\iR XX
Wait "Turn off the copier, then turn on..."	
Download iR XXXX_RUI_XXja1011	C:\ServTool\iR XXXX\RUI\XXjav1011\iR XXXX

Interface:

Device IP:

Confirm firmware versions
 Same Ver:Skip/Ver down:Confirm
 Confirm Overwrite


Start Batch Download

To Unit Selection Screen

F-16-40

Memo:

Any piece of system software that has not been registered is indicated by an appropriate notation for its path. Be sure to use [Registering Firmware] for the work.

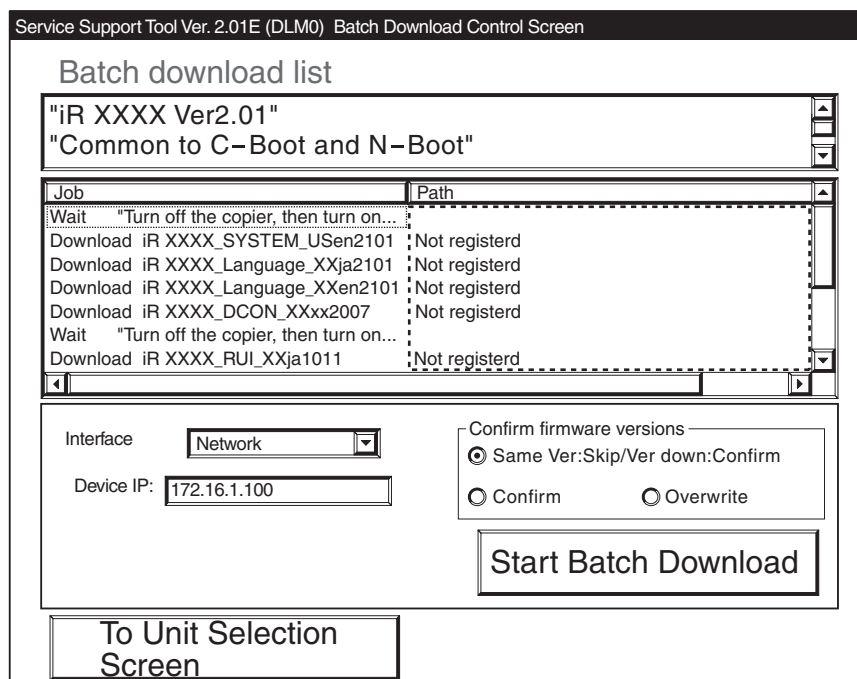

F-16-41

B. Executing Batch Downloading

Memo:

Although it varies from one type of system software to another, a typical session is executed as follows according to the mode you select:

Be sure to use safe mode, however, if you have formatted the HDD.

<Downloading in Normal mode>

- 1) Start up the PC and the copier (by turning on the main power while holding down 1+7).
- 2) Start downloading (SYSTEM, Language, Boot, DCON).
- 3) Turn off the copier, and start it up again in normal mode.
- 4) Start downloading (RUI, RCON).

<Downloading in Safe Mode>


- 1) Start up the PC and the copier (but turning on the main power while holding down 2+8).
- 2) Start downloading (SYSTEM, Language, RUI).

If you have formatted the HDD, the HDD will be in its initial state at this point.

- 3) Start downloading (BOOT).
- 4) Turn off the copier, and start it up again in normal mode.
- 5) Start downloading (DCON).
- 6) Turn off the copier, and start it up against in normal mode.
- 7) Start downloading (RCON).

The steps are following in the case of normal mode.


B-1) On the Main Menu screen of the Service Support Tool, click [To Next] under [Downloading/Uploading].

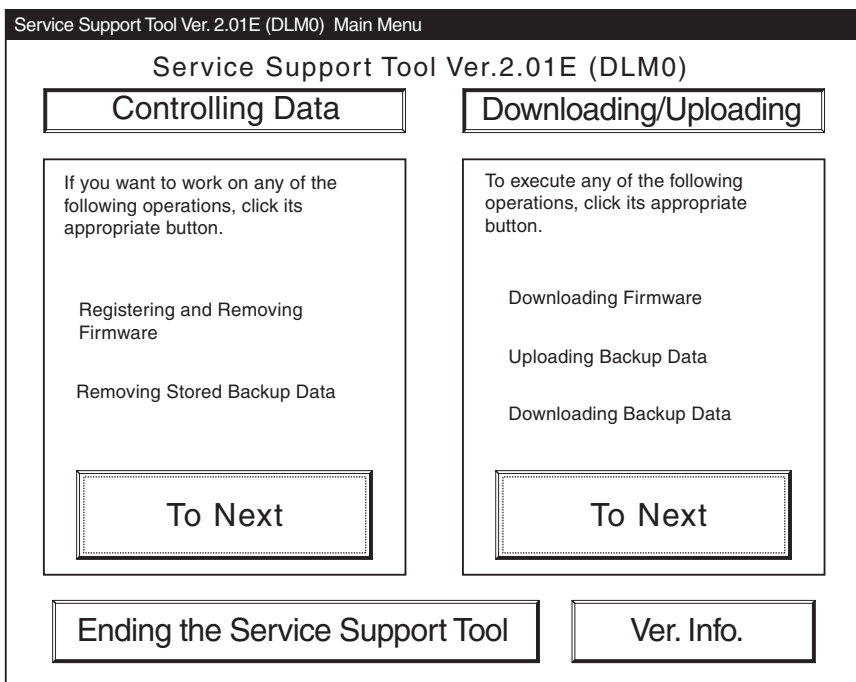

F-16-42


B-2) Select the file of the model name you have previously checked; then, click [all].

B-3) Click [Batch Download].

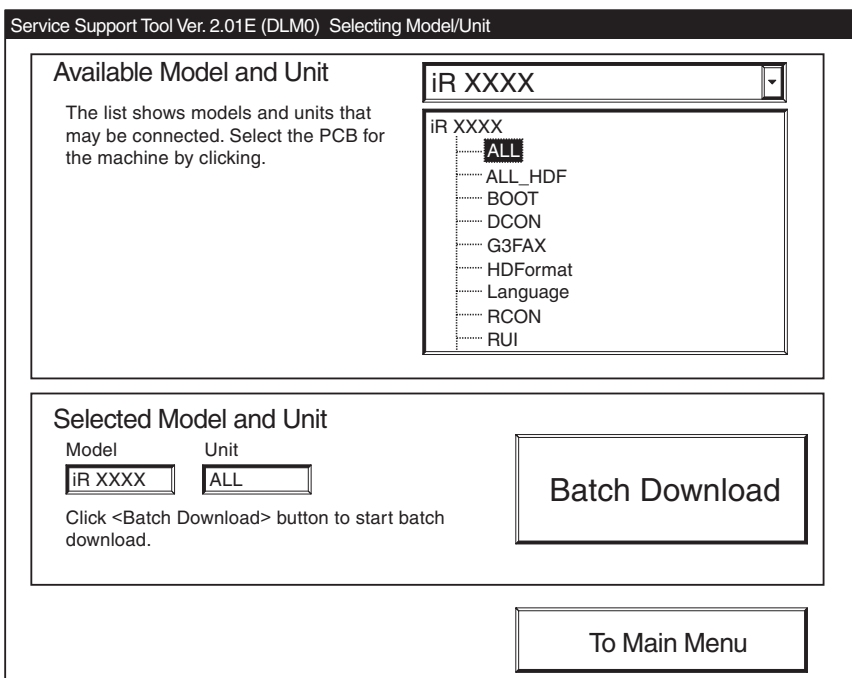

F-16-43

B-4) See that the Batch Download File List screen has appeared.

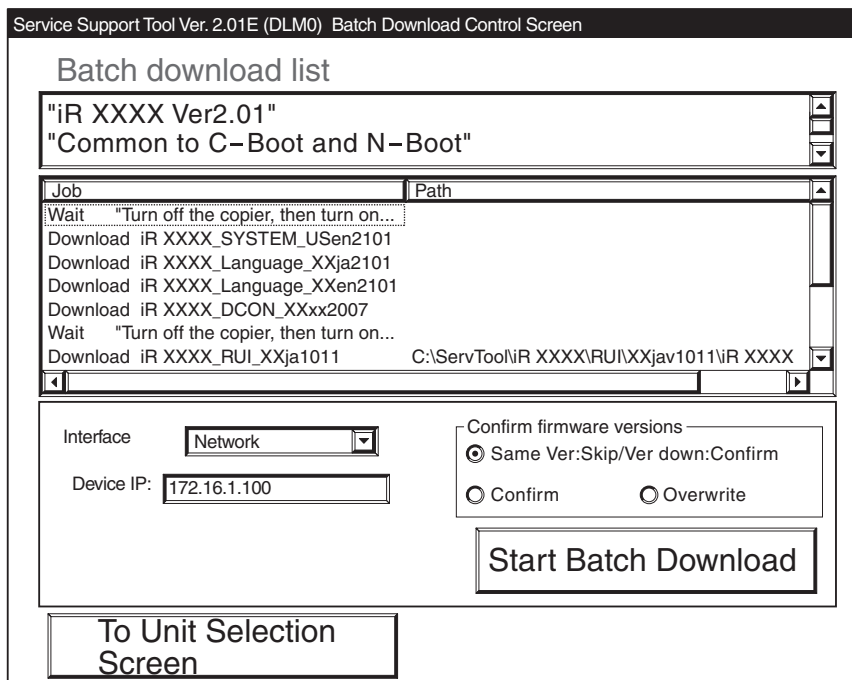

F-16-44

⚠ Confirm firmware versions

The System will check the following two items, and indicate the result, permitting you to check the progress of downloading:

- a: system software that has been installed to the machine
- b: system software that will be downloaded

There are 3 patterns to confirm:

- Same Ver:Skip/Ver down:Confirm
- Confirm
- Overwrite

T-16-4

SST indication


	same version:skip / ver down: confirm	confirm	overwrite
b is older (Downgrade)	check and then download	check and download	download
a and b of same version	do not download	check and download	download
b is new (Upgrade)	download	download	download

<Confirmation Message for Downgrading>

You will not be able to select a different version even if you select 'Skip'.


(The session will move to the confirmation of the next system software.)

⚠ In the case of version 2.01 of the SST, the notation 'Skip' is replaced by the notation 'Select Again'. The response, however, will be the same.

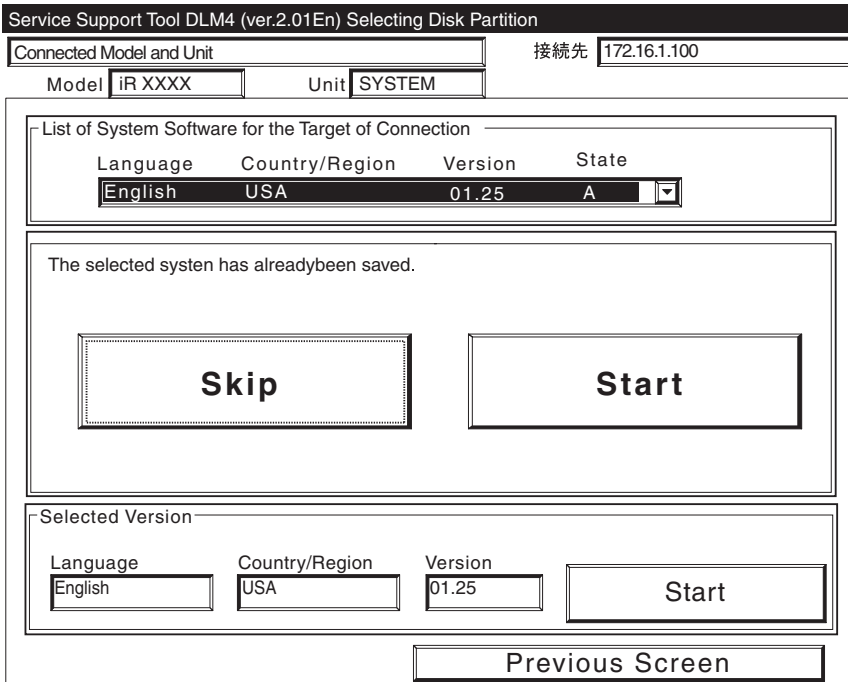

F-16-45


B-5) Click [Start Batch Download].

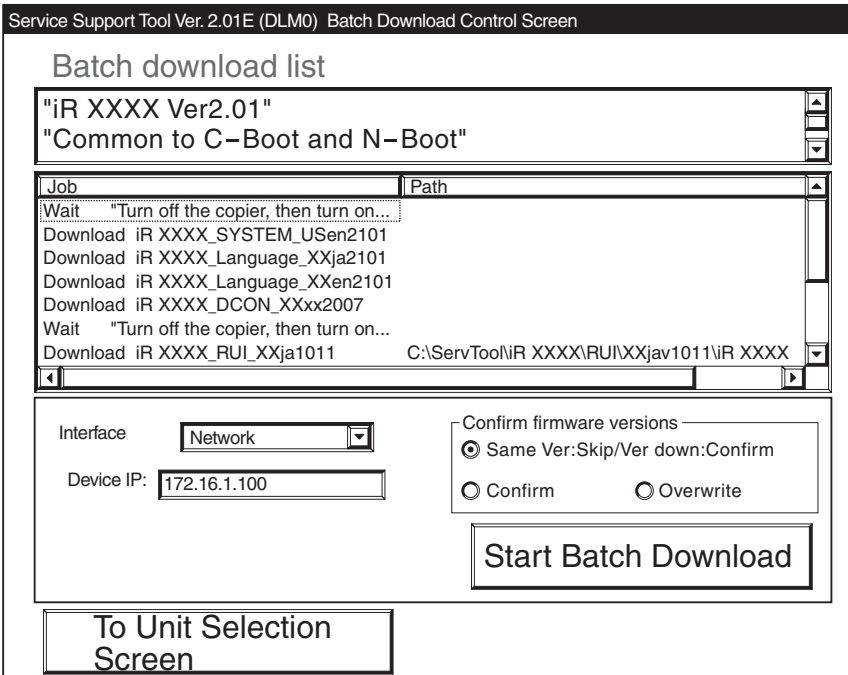

F-16-46

B-6) See that the download mode to be used is indicated.

When the mode has started, click [Resume].

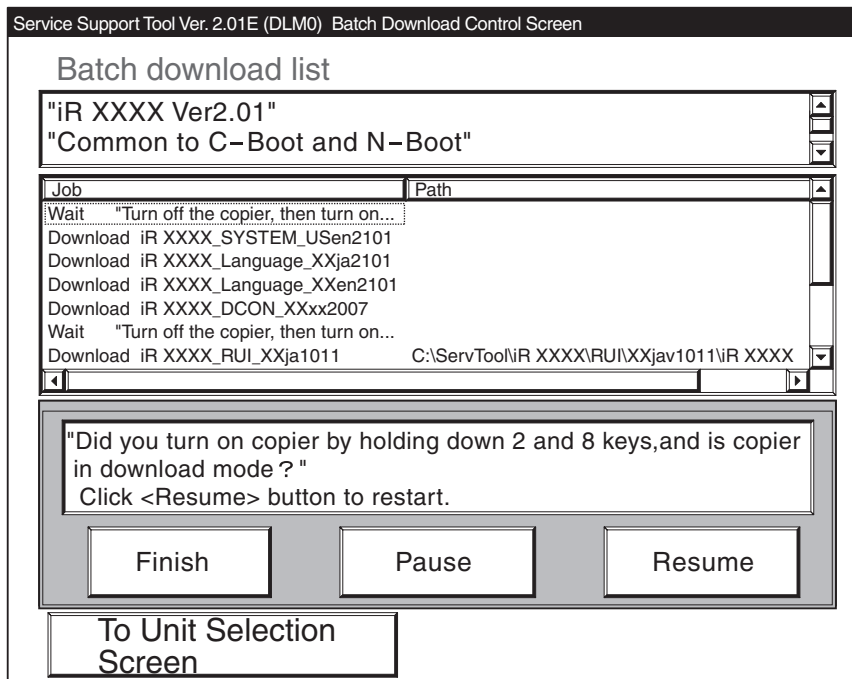


F-16-47

B-7) See that the system software that has been registered is downloaded one after another.
The System will show the progress (results) of downloading.




As necessary, e.g., when re-start is needed, an appropriate message will be indicated during a downloading session. In response, follow the instructions, and click [resume].

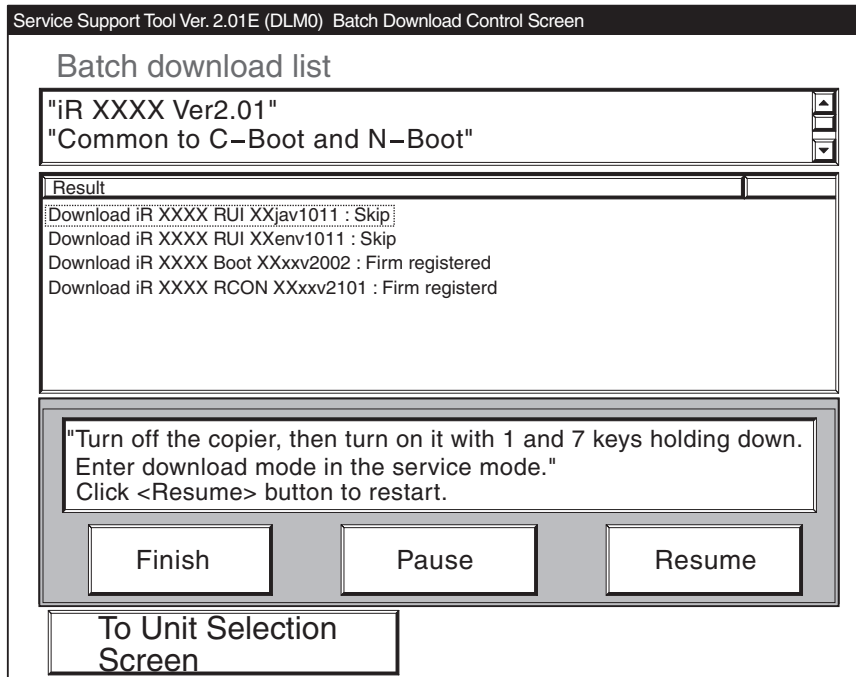

F-16-48

- B-8) Follow the instructions given by the SST to download the RUI and RCON files as done in the previous step.
B-9) See the results of downloading; then, click [return to unit selection screen].

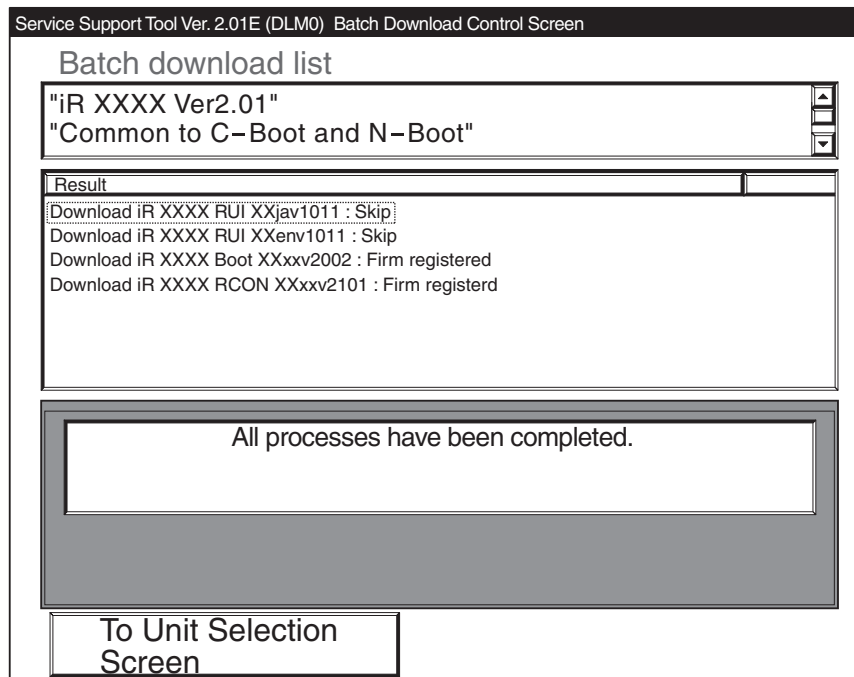


F-16-49

16.4.2 Downloading the System Software

16.4.2.1 Outline

0005-4902

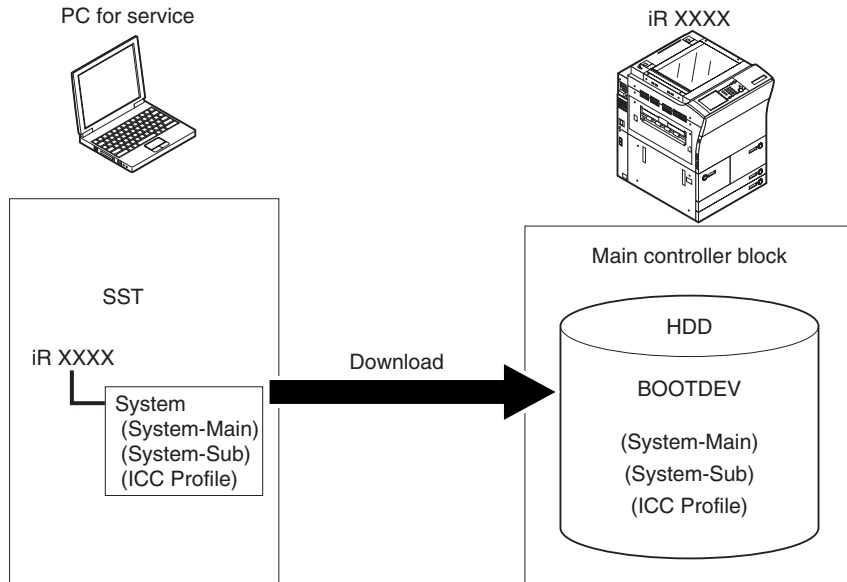

F-16-50

The system software comes in 3 types.(2 types for Japan)

! In the case of Japan, appropriate model must be selected with reference to the presence/absence of support for NetWare.

T-16-5

Country	SST installation model	NetWare	Remarks
100V	iRC6800	Not supported	Installed at time of shipment to iRC6800 (100V)
	iRC6800N	Supported	Installed at time of shipment to iRC6800N(100V)
120/230V	iRC6800	Supported	Installed at time of shipment to iR6800 (120/230V)/6800N(120/230V)

The machine's System software consists of multiple files.

The SST handles these files in group, and transfers them in succession at time of downloading.

T-16-6


Notation	Function
System-Main	Program for main CPU
System-Sub	Program for sub CPU
ICC Profile	color correction information file for PDL functions

16.4.2.2 Downloading Procedure

0005-4918


Making a Check Work (Jpn only)

Press the Counter Check key [1] on the control panel to check the model name [2] indicated on the LCD.

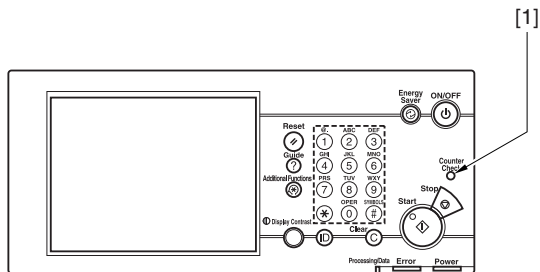

F-16-51


⚠ When checking the model name, see the indication in parentheses.

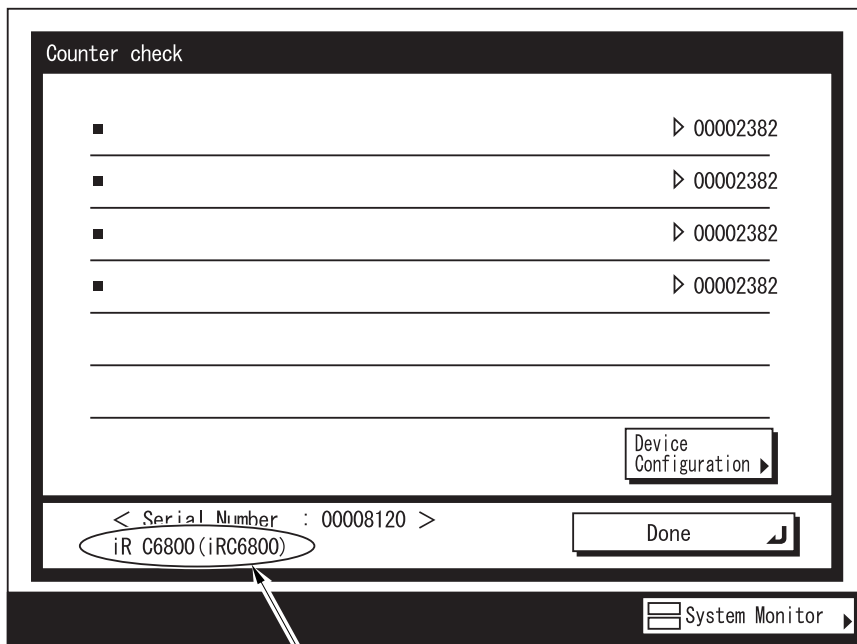

F-16-52


[Procedure]

1) Click [To Next] under Downloading/Uploading.

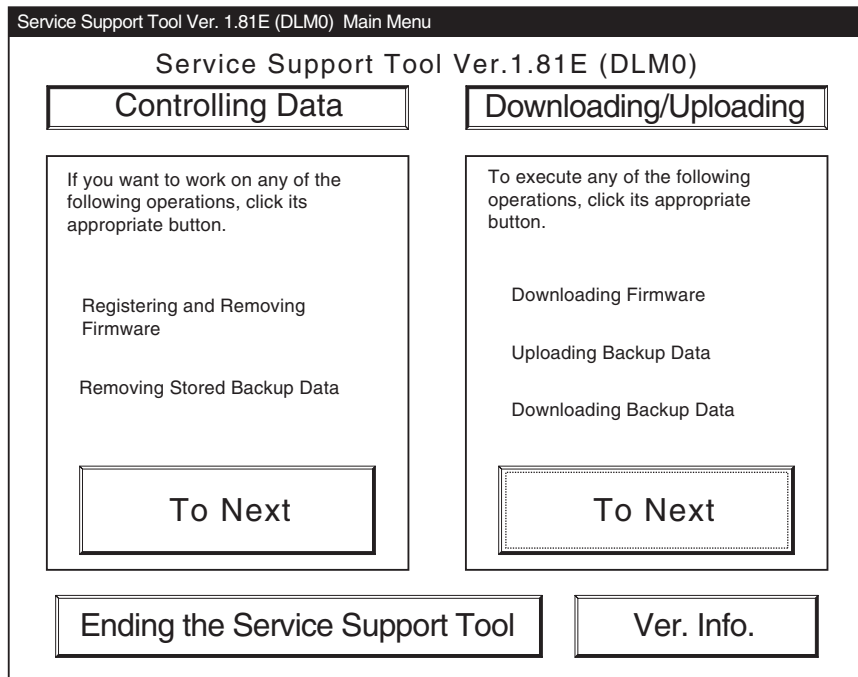


F-16-53

2) Select the SYSTEM of the iRC6800, and click [Connect].

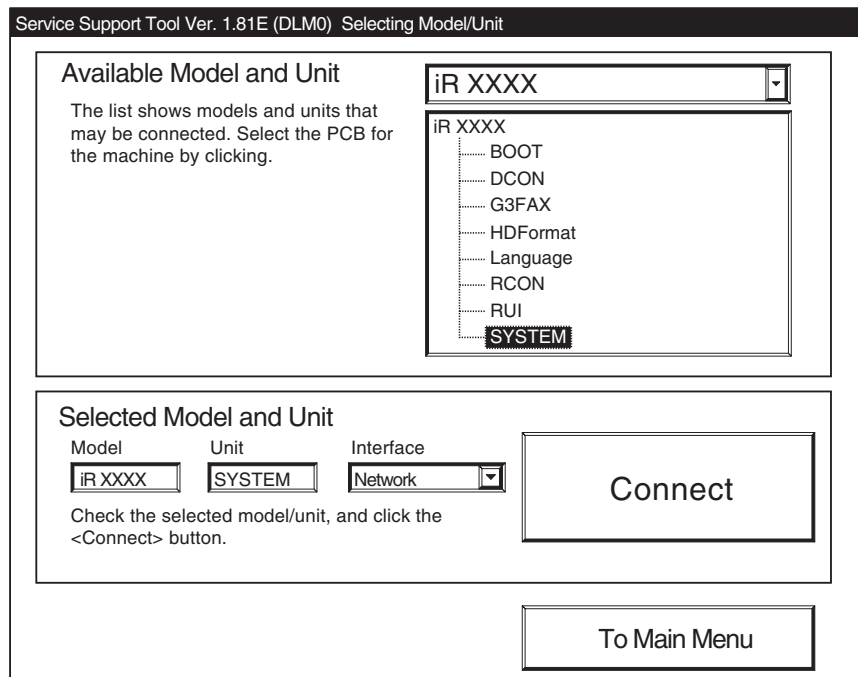


F-16-54

3) Click [Set host name].

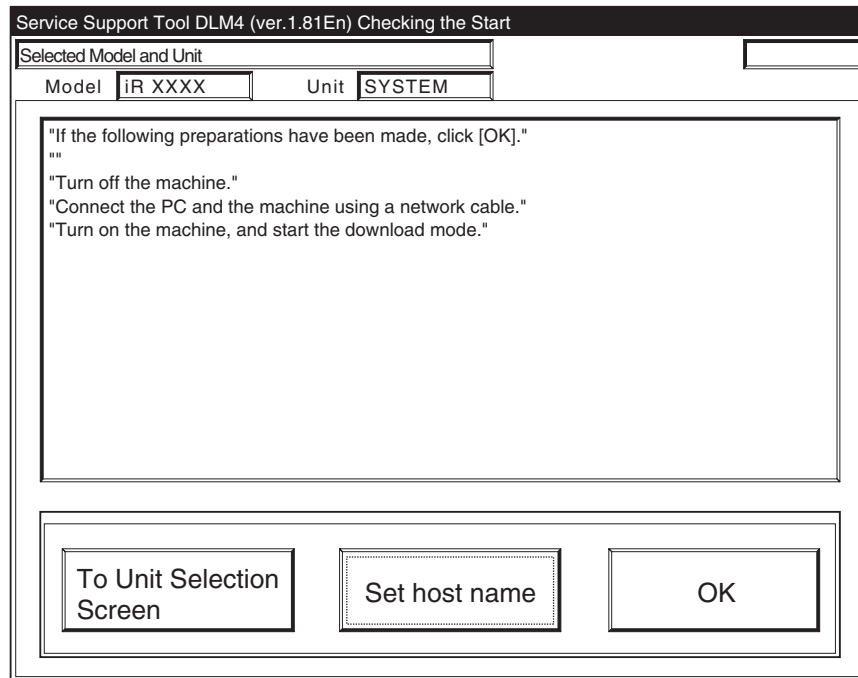


F-16-55

4) The machine's IP address is entered automatically; click [OK].

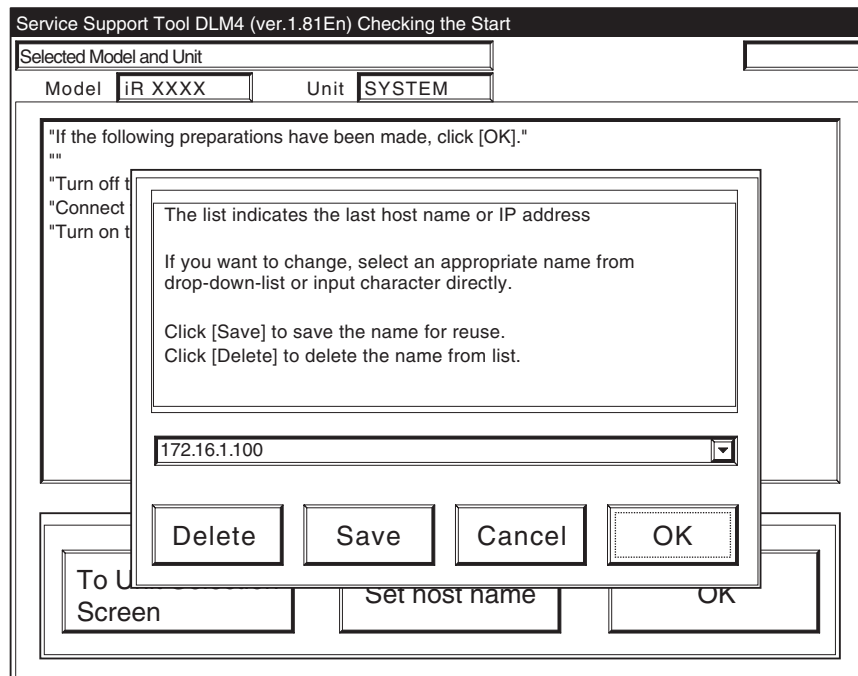


F-16-56

5) Click [OK] to start connection.

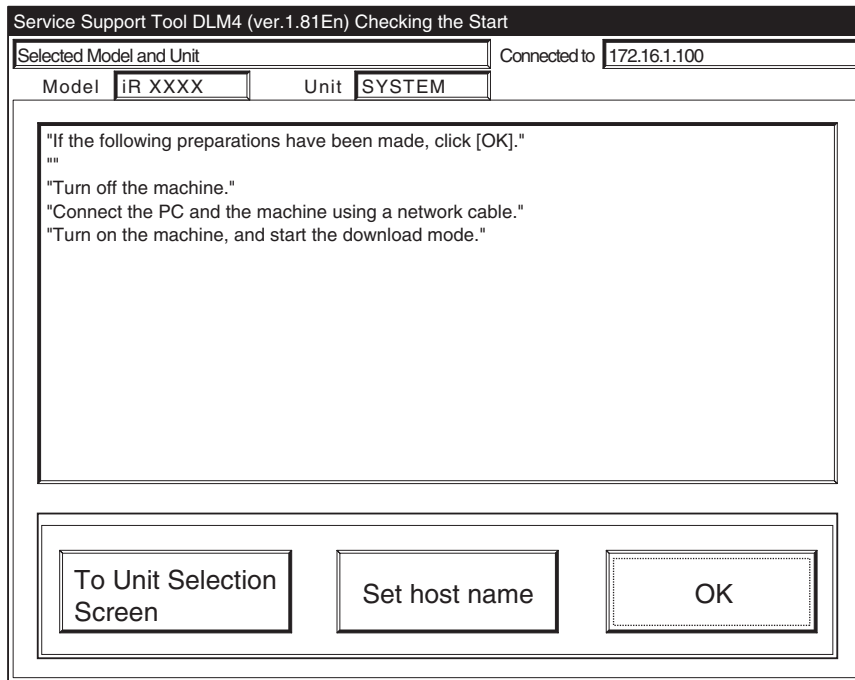

F-16-57

6) When the machine has made a connection and brings up the following screen, click [OK].

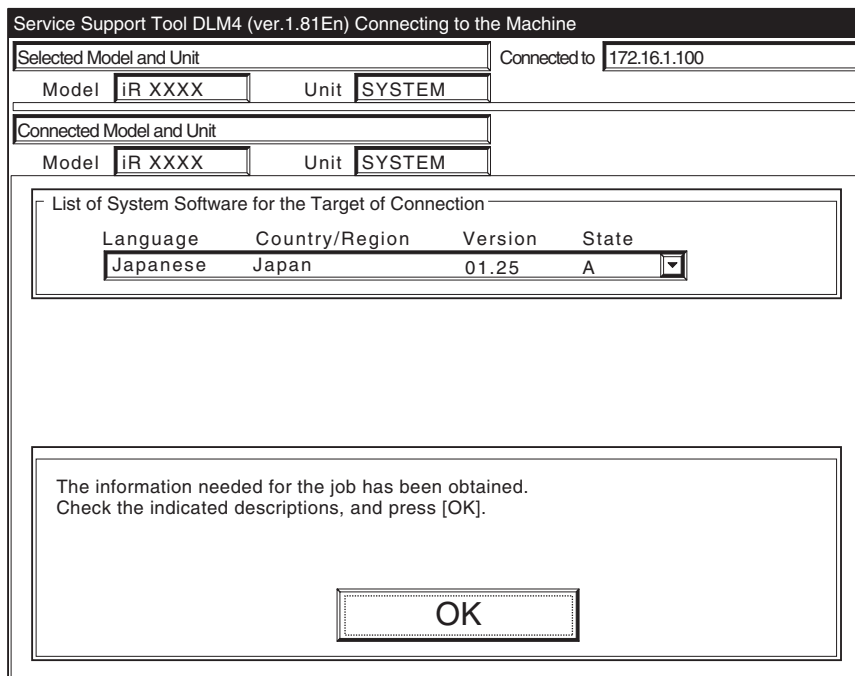

F-16-58

7) Click [System Software Download].

Service Support Tool DLM4 (ver.1.81En) Selecting a Job

Connected Model and Unit Connected to 172.16.1.100

Model Unit

List of System Software for the Target of Connection

Language	Country/Region	Version	State
Japanese	Japan	01.25	A

Selecting a SYSTEM Job

Click the job key for SYSTEM.

Write the system software to the machine.

Recover the system software that has been backed up.

Save the backup data of the machine.

Write the saved backup data to the machine.

F-16-59

8) Select the version to download, and click [Start].

Service Support Tool DLM4 (ver.1.81En) Selecting a Version

Connected Model and Unit Connected to 172.16.1.100

Model Unit

List of System Software for the Target of Connection

Language	Country/Region	Version	State
Japanese	Japan	01.25	A

System Software Versions Available for Selection

Click the appropriate version to select from among the available system software versions.

Information on the selected version will be indicated at the bottom.


Language	Country/Region	Version
English	USA	01.27
English	USA	01.28
Japanese	Japan	01.27
Japanese	Japan	01.28

Selected Version

Language Country/Region Version

F-16-60

9) When the results of the downloading are indicated, and click [OK].

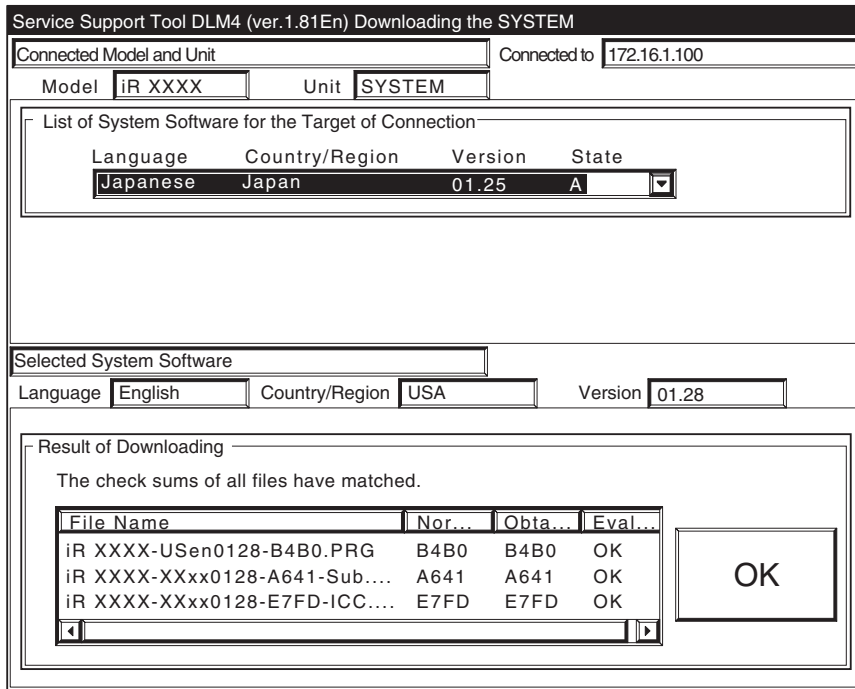

F-16-61

10) Click [To Unit Selection Screen].



Never turn off the machine while the following screen is shown.

Otherwise writing to the HDD will be suspended, preventing the machine to start up.

Service Support Tool DLM4 (ver. 1.81En) Downloading the SYSTEM

Connected Model and Unit: Unit: Connected to:

List of System Software for the Target of Connection

Language	Country/Region	Version	State
Japanese	Japan	01.25	A

Selected System Software

Language: Country/Region: Version:

Progress of Writing to the Hard Disk
Data has been transferred, and is now been written to the hard disk.

"Now, data writing. Don't power off target"

Time Remaining: sec


F-16-62

If the machine fails to start up, execute formatting BOOTDEV using HDFormat and download the following:
System, Language, RUI

16.4.3 Downloading the RUI, and Language Module

16.4.3.1 Outline

0001-1648

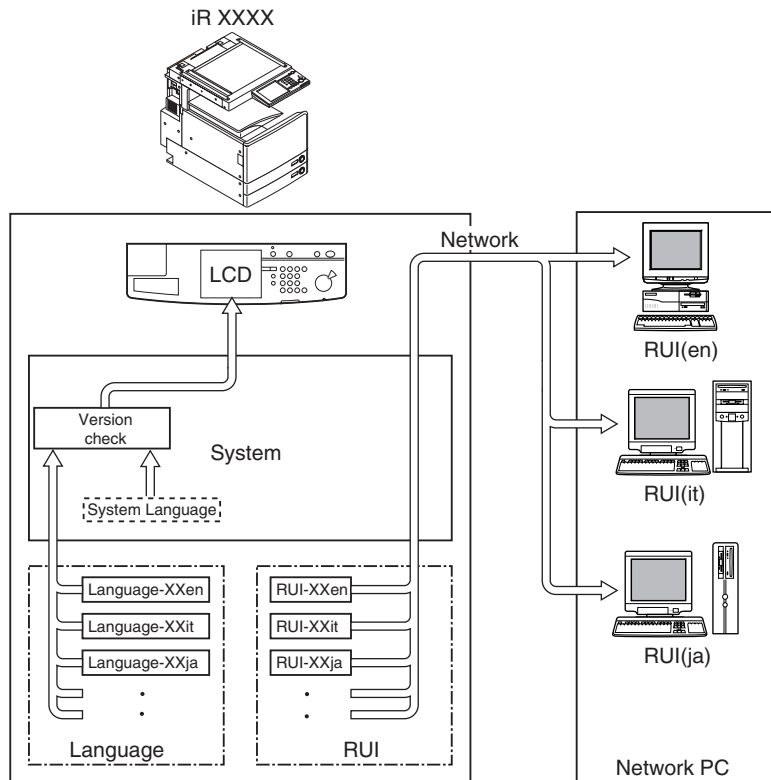

F-16-63

T-16-7

Language used on control panel LCD

Check the versions of system software and language files.

- 1) if the versions are correct
 - Selections may be made in Additional Function;
 - Common settings>Language Switch
- 2) if the versions are not correct
 - 'E744' will be indicated.
 - Turn off and then on the main power switch so that the system language will be used.


T-16-8

Language used in RUI

Select on the RUI.

A specific language may be selected for a specific PC.

<Language Code>	<Language>
de	German
en	English
fr	French
it	Italian
ja	Japanese

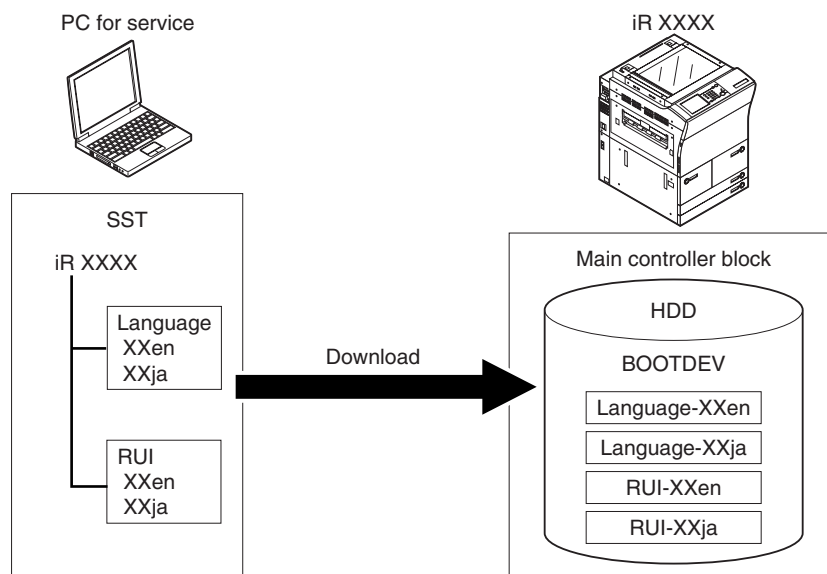

F-16-64

16.4.3.2 Downloading Procedure

0005-4924

[Procedure]


Downloading may take place when the machine is in normal or in safe mode.

Both Language and RUI files may be downloaded in common among models.

(here, the iRC6800 is selected)

[describes downloading of the Language]

1) Click [To next] under Downloading/Uploading.

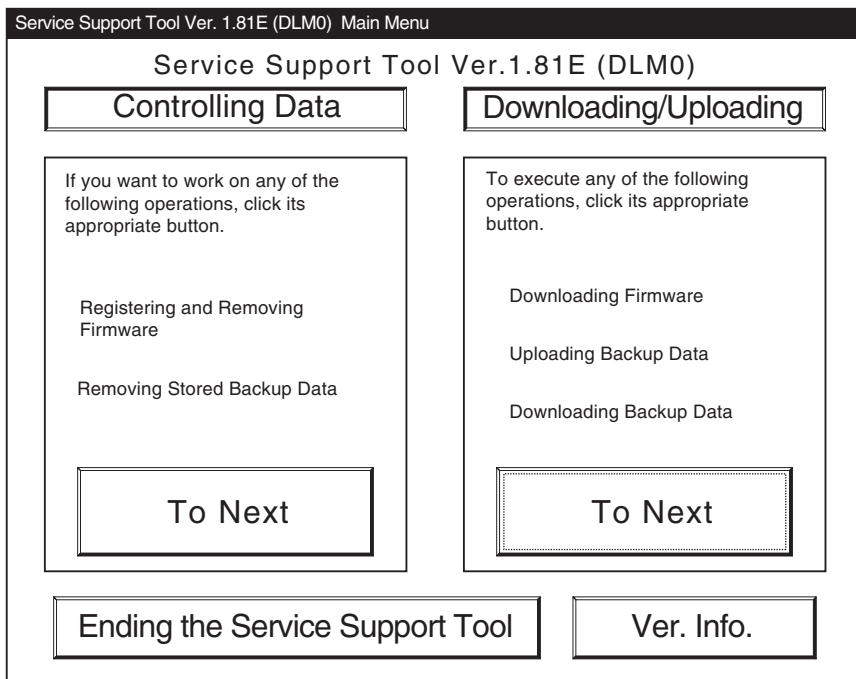

F-16-65

2) Select [Language] for the iRC6800, and click [Connect].

Service Support Tool Ver. 1.73E (DLM0) Selecting Model/Unit

Available Model and Unit

The list shows models and units that may be connected. Select the PCB for the machine by clicking.

iR XXXX

- iR XXXX
- BOOT
- DCON
- G3FAX
- HDFormat
- **Language**
- RCON
- RUI
- SYSTEM

Selected Model and Unit

Model Unit Interface

Check the selected model/unit, and click the <Connect> button.

F-16-66

3) Click [Set host name].

Service Support Tool DLM4 (ver. 1.81En) Checking the Start

Selected Model and Unit

Model Unit

"If the following preparations have been made, click [OK]."

""


"Turn off the machine."

"Connect the PC and the machine using a network cable."

"Turn on the machine, and start the download mode."


F-16-67

4) The machine's IP address is entered automatically; click [OK].

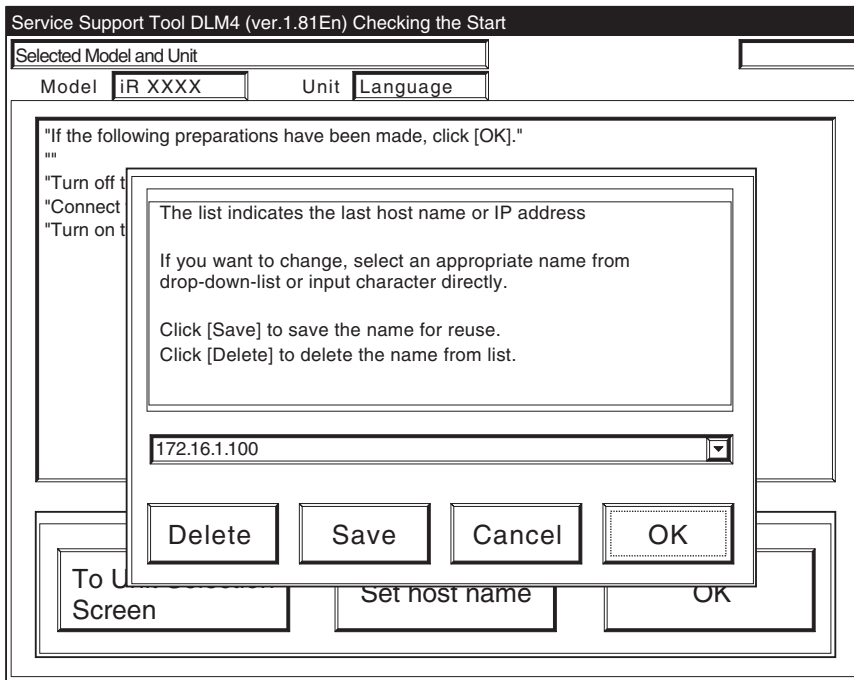

F-16-68

5) Click [OK] to start connection.

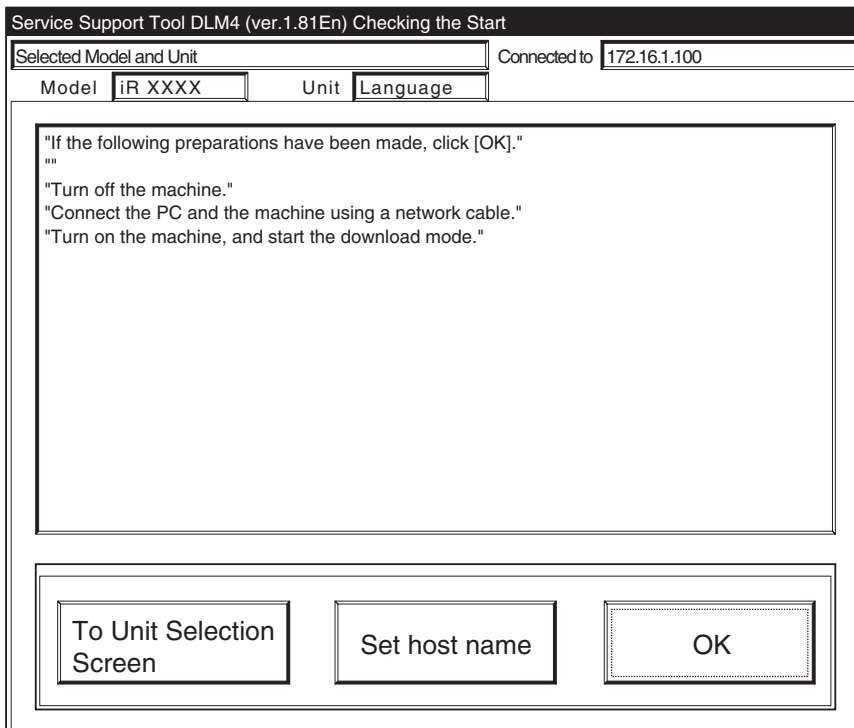

F-16-69

6) When the machine has made a connection and bring up the following screen, click [OK].

Service Support Tool DLM4 (ver. 1.81En) Connecting to the Machine

Selected Model and Unit Connected to

Model Unit

Connected Model and Unit

Model Unit

List of System Software for the Target of Connection

Language	Country/Region	Version	State
Japanese	Japan	01.25	A

Language List for the Target of Connection

Language	Country/Region	Version	State
English	All	01.25	H

The information needed for the job has been obtained.
Check the indicated descriptions, and press [OK].

F-16-70

7) Click [Language Download].

Service Support Tool DLM4 (ver. 1.81En) Selecting a Job

Connected Model and Unit Connected to

Model Unit

List of System Software for the Target of Connection

Language	Country/Region	Version	State
Japanese	Japan	01.25	A

Language List for the Target of Connection

Language	Country/Region	Version	State
English	All	01.25	H


Selecting a Language Job

Click the job key for Language

Write the Language to the machine.


F-16-71

8) Select the version to download, and click [Start].

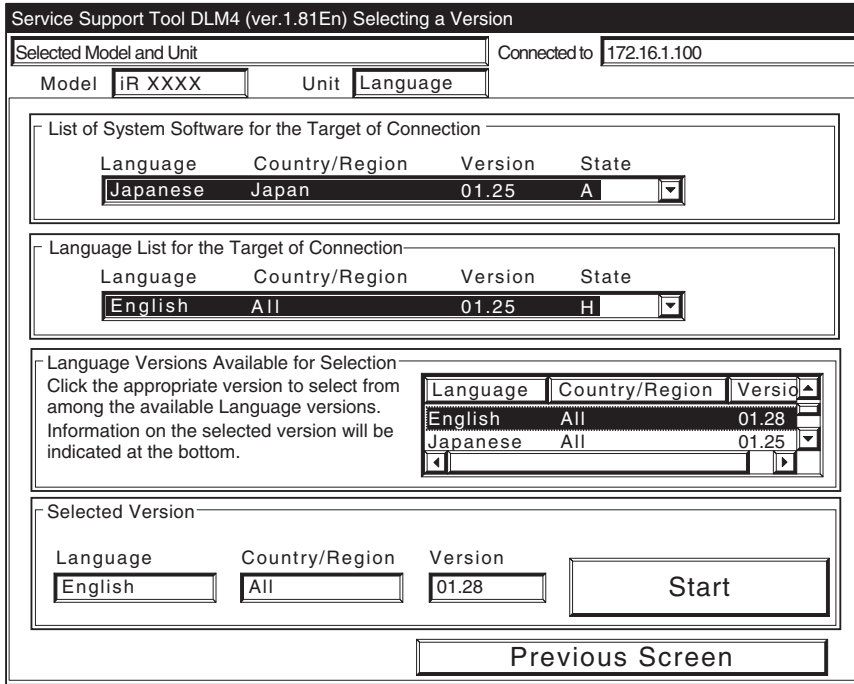

F-16-72

9) When the results of the downloading are indicated, click [OK].

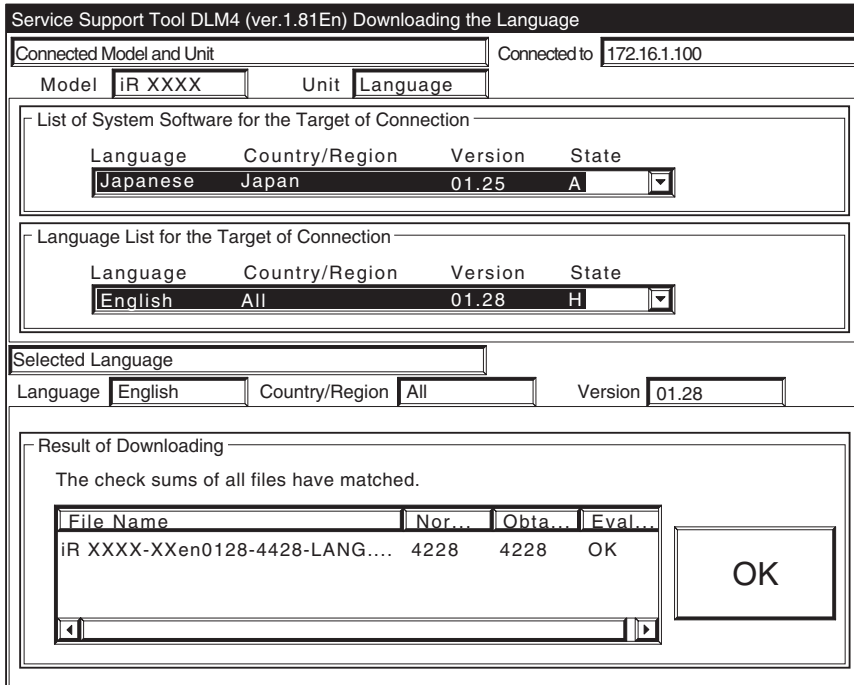

F-16-73

10) Click [To Unit Selection Screen].



Never turn off the machine while the following screen is shown.

Otherwise writing to the HDD will be suspended, preventing the machine to start up.

Service Support Tool DLM4 (ver. 1.81En) Downloading the Language

Connected Model and Unit: Connected to:

Model: Unit:

List of System Software for the Target of Connection

Language	Country/Region	Version	State
Japanese	Japan	01.25	A

Language List for the Target of Connection

Language	Country/Region	Version	State
English	All	01.28	H

Selected Language

Language: Country/Region: Version:

Progress of Writing to the Hard Disk
Data has been transferred, and is now been written to the hard disk.

"Now, data writing. Don't power off target"

Time Remaining: sec


F-16-74

If the machine fails to start up, execute formatting BOOTDEV using HDFormat and download the following:
System, Language, RUI

16.4.4 Downloading the BOOT Software

16.4.4.1 Outline

0005-4925

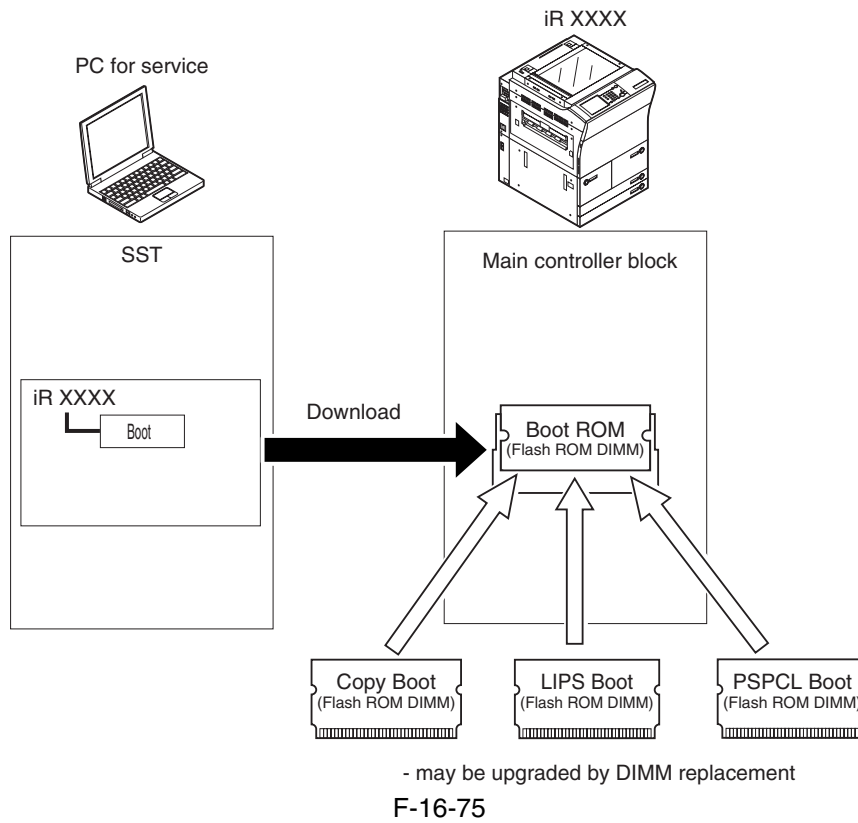

There are as many as three types of Boot:

- COPY Boot (100/120/230V model)
- LIPS Boot (100V model)
- PAPCL Boot (120/230V model)

If you are upgrading using a downloading function, be sure to select "iRC6800" as the model name regardless of the type of Boot that is installed. There is no need to change the model name to suit the type of Boot.




-If you fail to downloading files, you must replace the boot ROM.

16.4.4.2 Downloading Procedure

0005-4926


Downloading may take place in normal mode (1+7 on keypad) or in safe mode (2+8 on keypad).

1) Click [To next] under Downloading/Uploading.

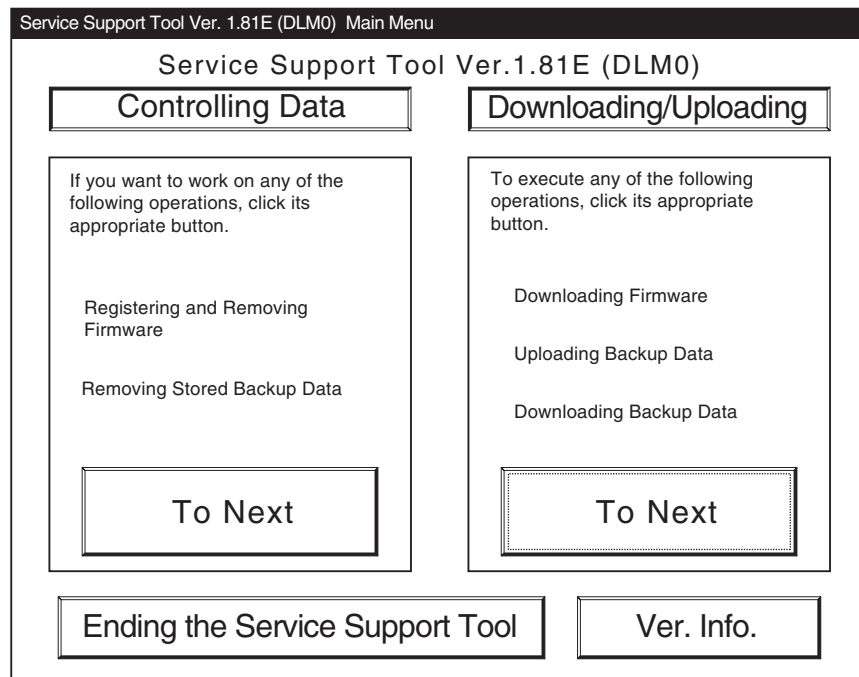


F-16-76

2) Select [BOOT] for the iRC6800 Series, and click [Connect].

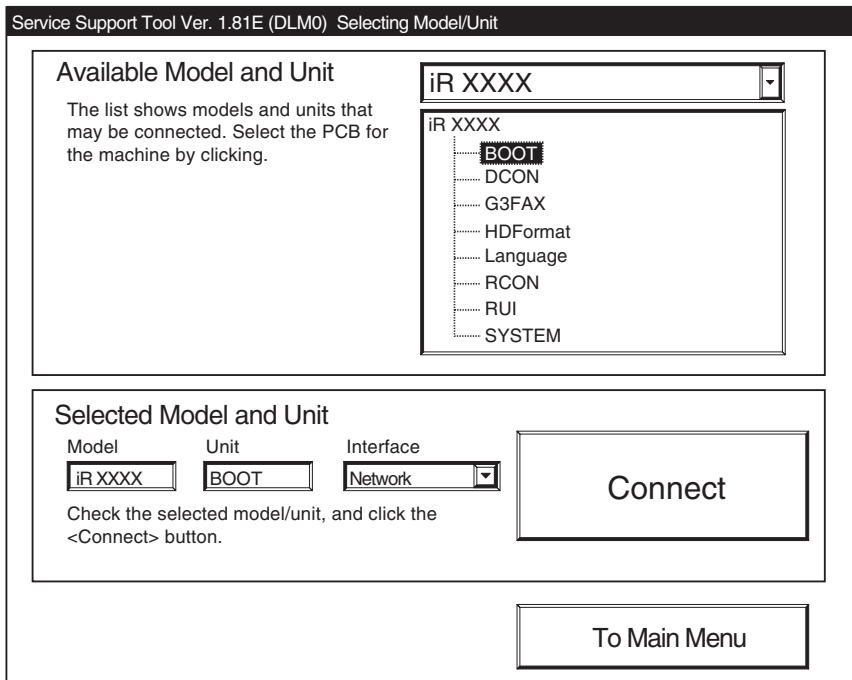


F-16-77

3) Click [Set host name].

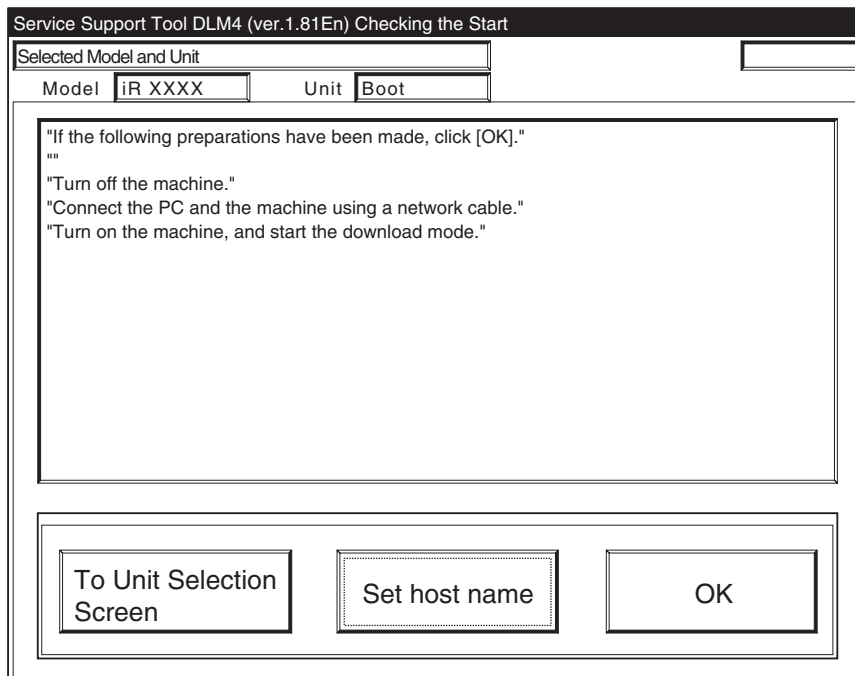


F-16-78

4) The machine's IP address is entered automatically; click [OK].

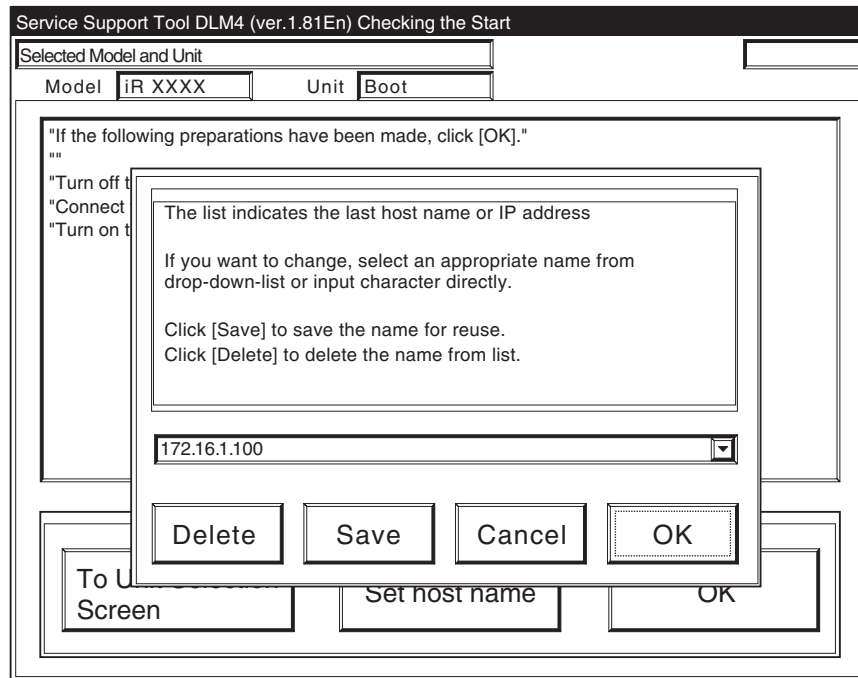


F-16-79

5) Click [OK] to start connection.

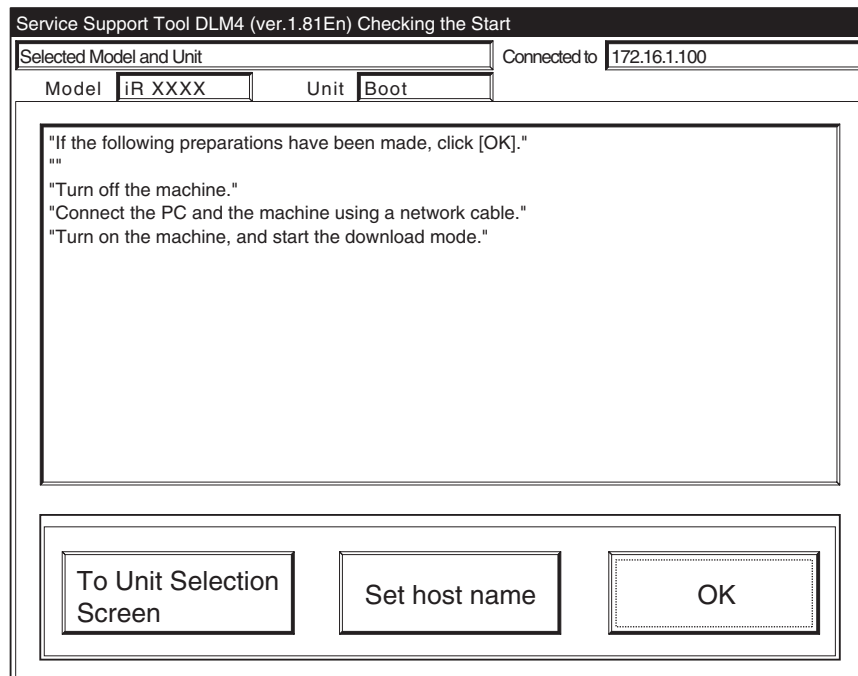


F-16-80

6) When the machine has made a connection and brings up the following screen, click [OK].

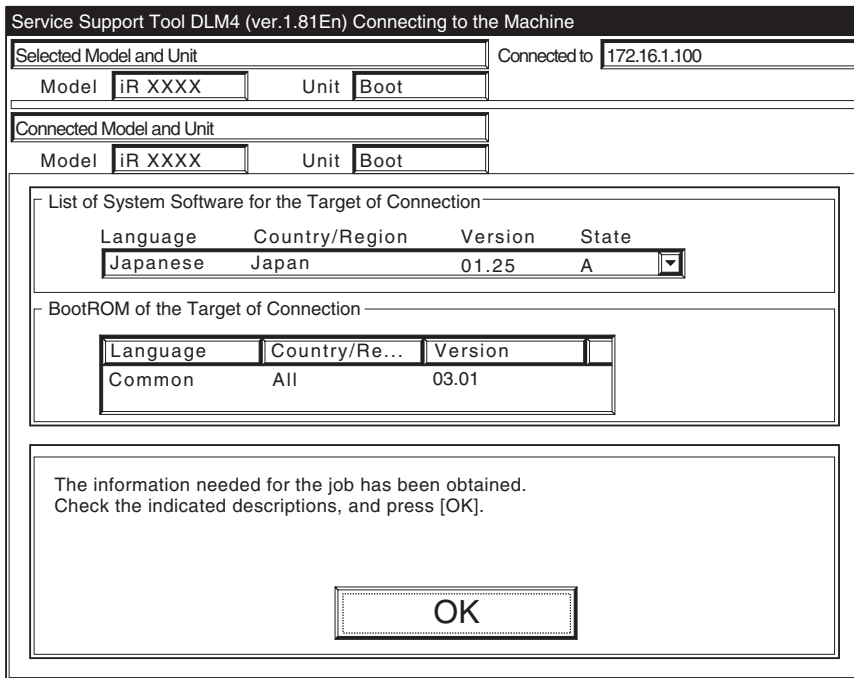

F-16-81

7) Click [BootROM Download].

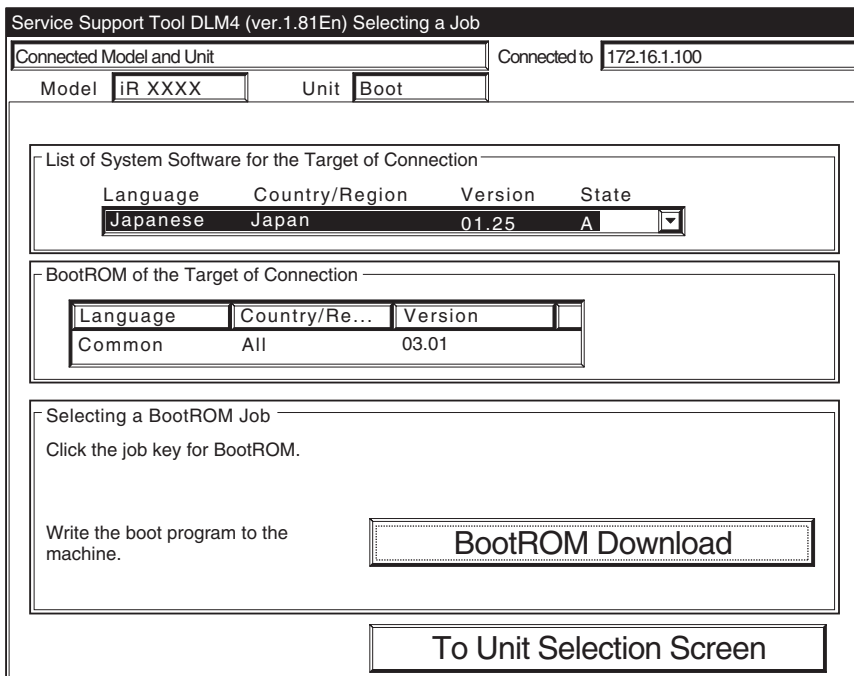

F-16-82

8) Select the version to download, and click [Start].

Service Support Tool DLM4 (ver. 1.81En) Selecting a Version

Connected Model and Unit Connected to 172.16.1.100

Model Unit

BootROM of the Target of Connection

Language	Country/Re...	Version
Common	All	03.01

BootROM Versions Available for Selection

Click the appropriate version to select from among the available BootROM versions.

Information on the selected version will be indicated at the bottom.

Langua...	Country/Re...	Versi...
Common	All	01.10
Common	All	02.01
Common	All	03.01
Common	All	20.02

Selected Version

Language Country/Region Version

F-16-83

9) When the results of the downloading are indicated, and click [OK].

Service Support Tool DLM4 (ver. 1.81En) Downloading the BOOT

Connected Model and Unit Connected to 172.16.1.100

Model Unit

BootROM of the Target of Connection

Language	Country/Re...	Version
Common	All	03.01

Selected BootROM

Language Country/Region Version

Result of Downloading

The check sums of all files have matched.

File Name	Nor...	Obta...	Eva...
iR XXXX-XXxx2002-F510-BOOT....	F510	F510	OK

F-16-84

10) Click [To Unit Selection Screen].


[after Downloading]

When you upgrade the boot ROM, be sure to turn off and then on the machine's main power switch so that the new version will be validated.



Never turn off the machine while the following screen is shown.

Otherwise writing to the HDD will be suspended, preventing the machine to start up.

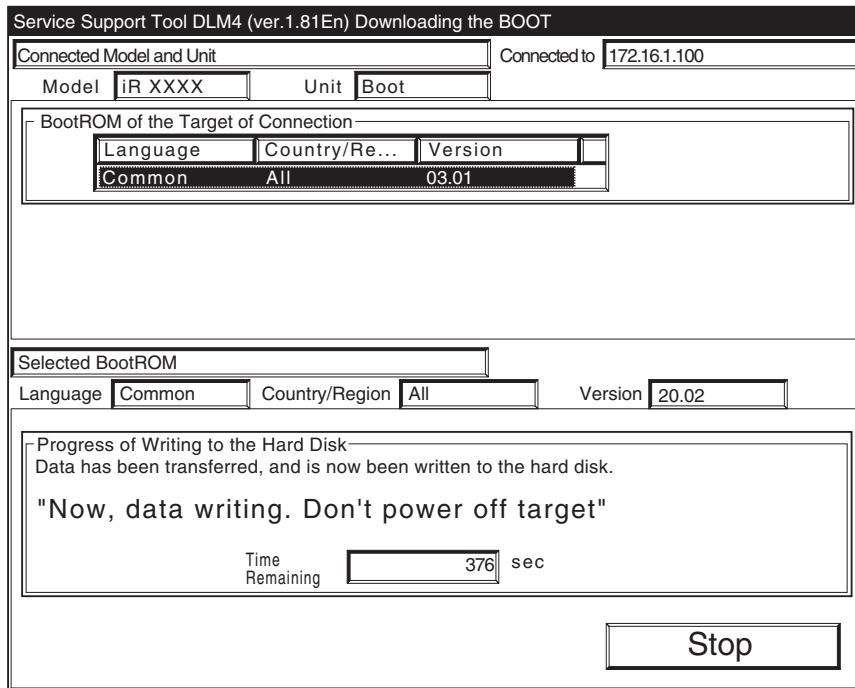

F-16-85

If the machine fails to start up, replace the boot ROM.

16.4.5 Downloading the Dcon and Rcon Software


16.4.5.1 Outline

0001-1660

The DC controller/Reader controller files are downloaded by way of the main controller block.



Both DC controller PCB and the Reader controller PCB are equipped with boot ROMs, permitting retries if downloading fails.

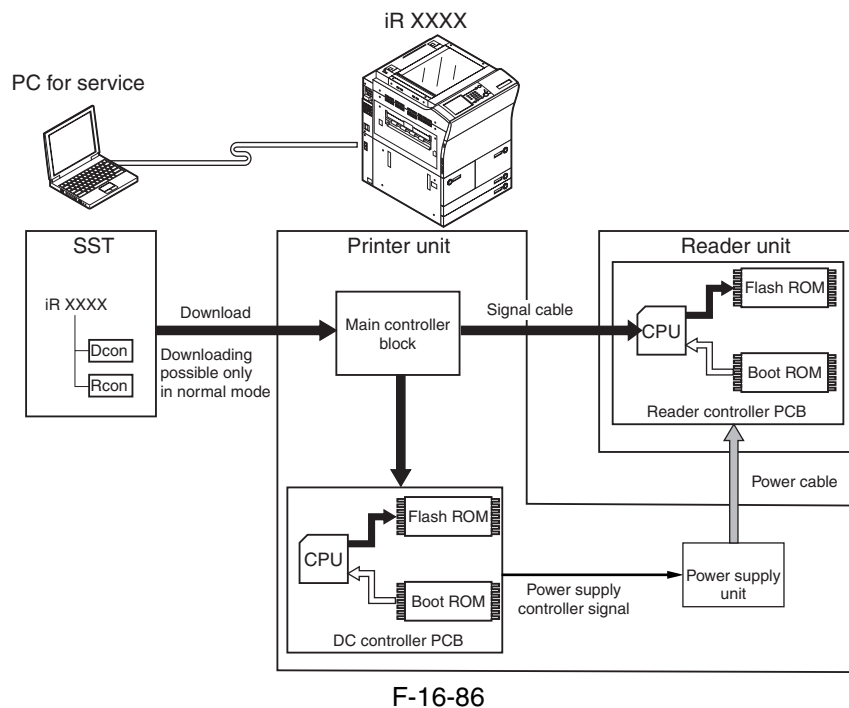


Unless the DC controller has started up normally, not permitting downloading of Reader controller files.
(Because the power supply control signal will not be validated, not supplying the reader unit with power.)

16.4.5.2 Downloading Procedure

0005-4927

[Making Checks in Advance]

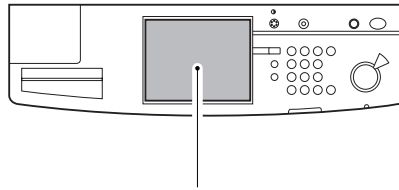

- No error code must be indicated.
- In the case of downloading Rcon files, the version of DC-CON must be indicated in service mode.


F-16-87

[Procedure]

The following describes downloading of DC controller files.


Both DC controller and Reader controller files are common among models.

1) Click [To next] under Downloading/Uploading.

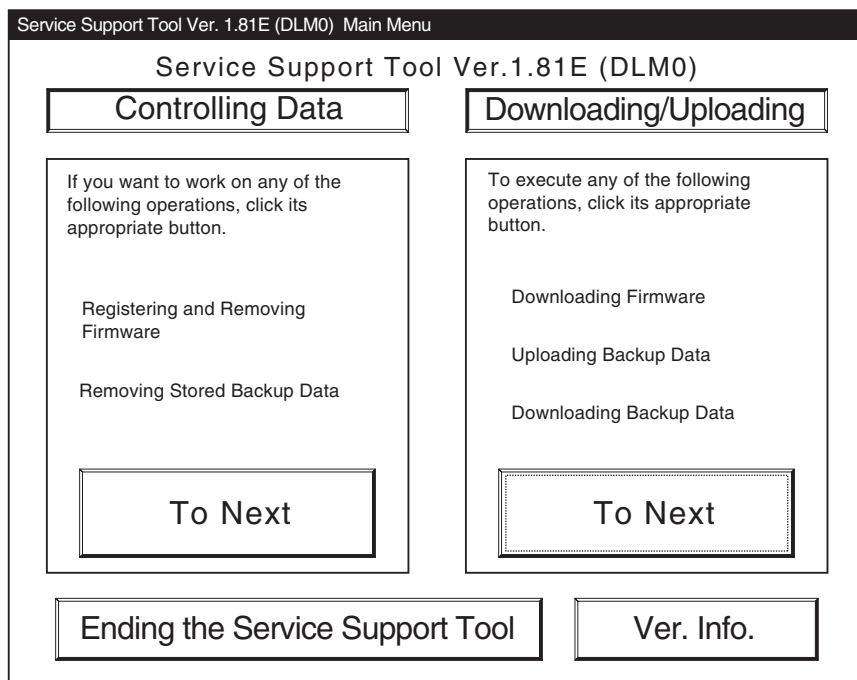


F-16-88

2) Select [DCON], and click [Connect].

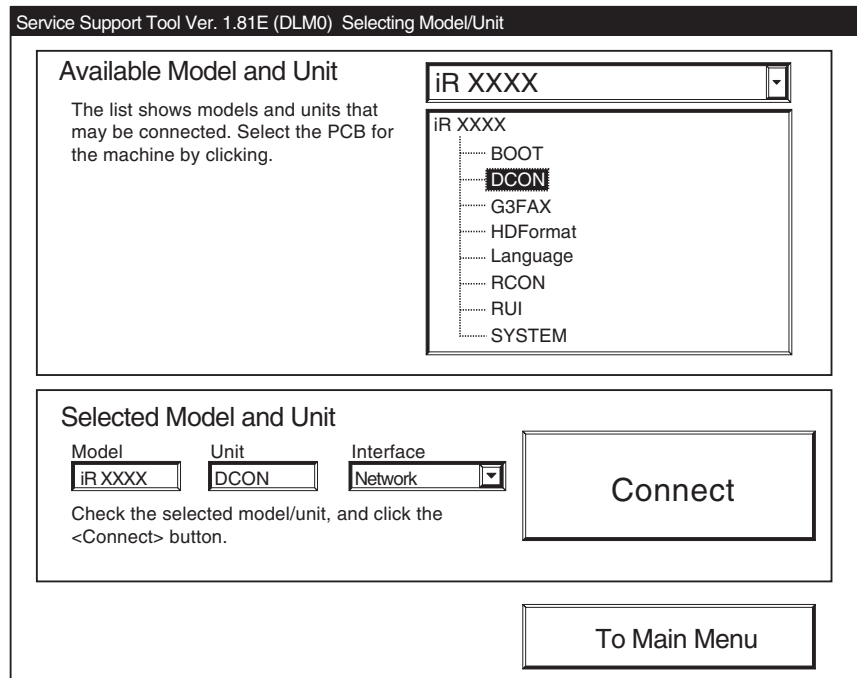


F-16-89

3) Click [Set host name].

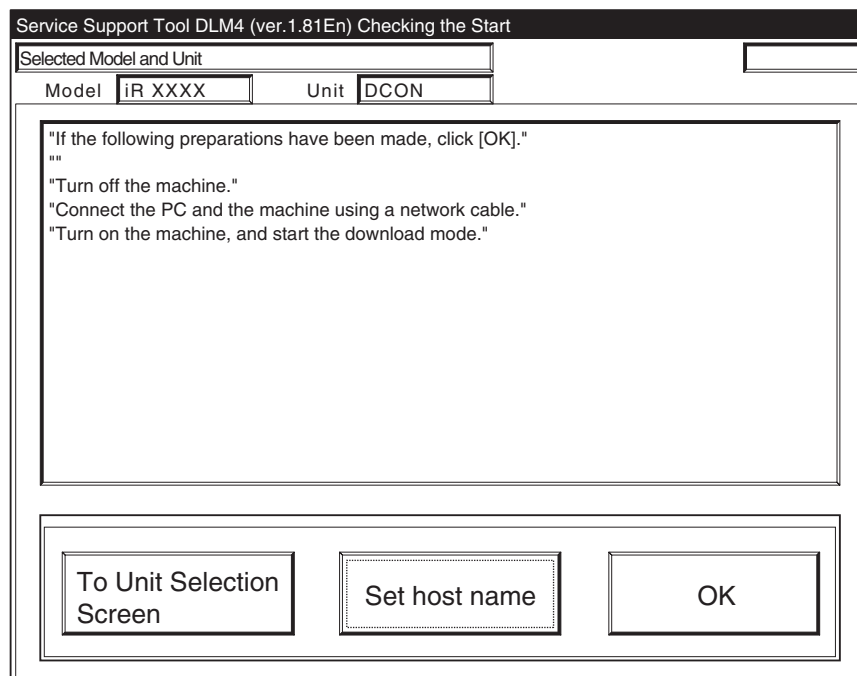


F-16-90

4) The machine's IP address is entered automatically; click [OK].

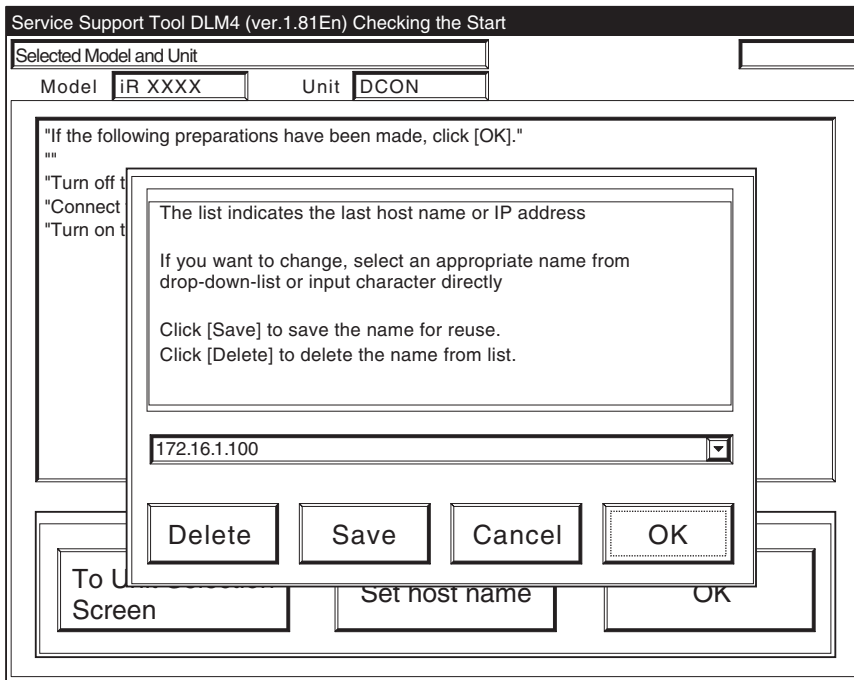

F-16-91

5) Click [OK] to start connection.

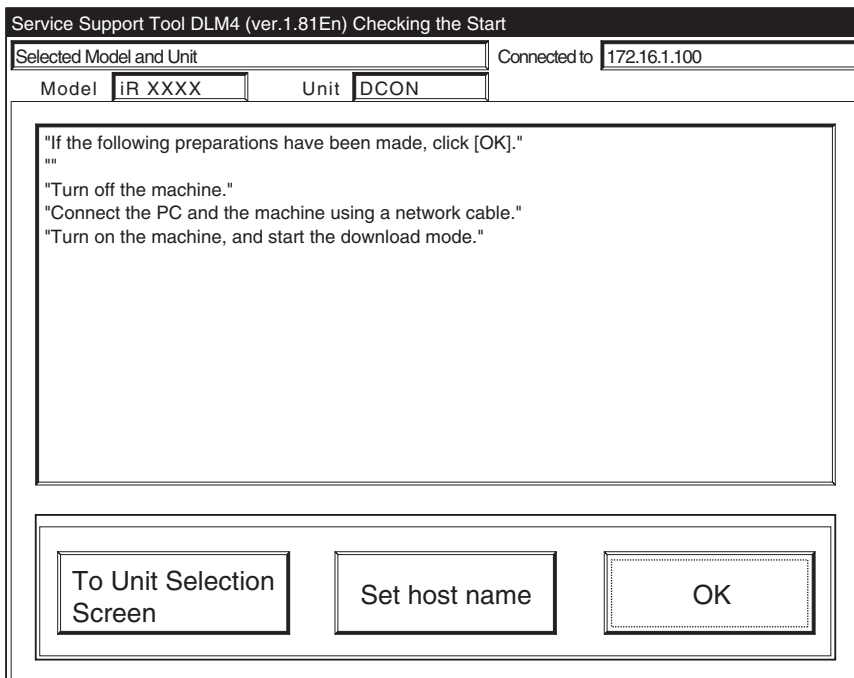

F-16-92

6) When the machine has made a connection and brings up the following screen, click [OK].

Service Support Tool DLM4 (ver. 1.81En) Connecting to the Machine

Selected Model and Unit Connected to 172.16.1.100

Model Unit

Connected Model and Unit

Model Unit

List of System Software for the Target of Connection

Language	Country/Region	Version	State
Japanese	Japan	01.25	A

DCON List for the Target of Connection

Language	Country/Region	Version	State
Common	All	01.26	A

The information needed for the job has been obtained.
Check the indicated descriptions, and press [OK].

OK

F-16-93

7) Click [DCON Download].

Service Support Tool DLM4 (ver. 1.81En) Selecting a Job

Connected Model and Unit Connected to 172.16.1.100

Model Unit

List of System Software for the Target of Connection

Language	Country/Region	Version	State
Japanese	Japan	01.25	A

DCON List for the Target of Connection

Language	Country/Region	Version	State
Common	All	01.26	A

Selecting a DCON Job

Click the job key for DCON


Write the DCON to the machine.

DCON Download

To Unit Selection Screen


F-16-94

8) Select the version to download, and click [Start].

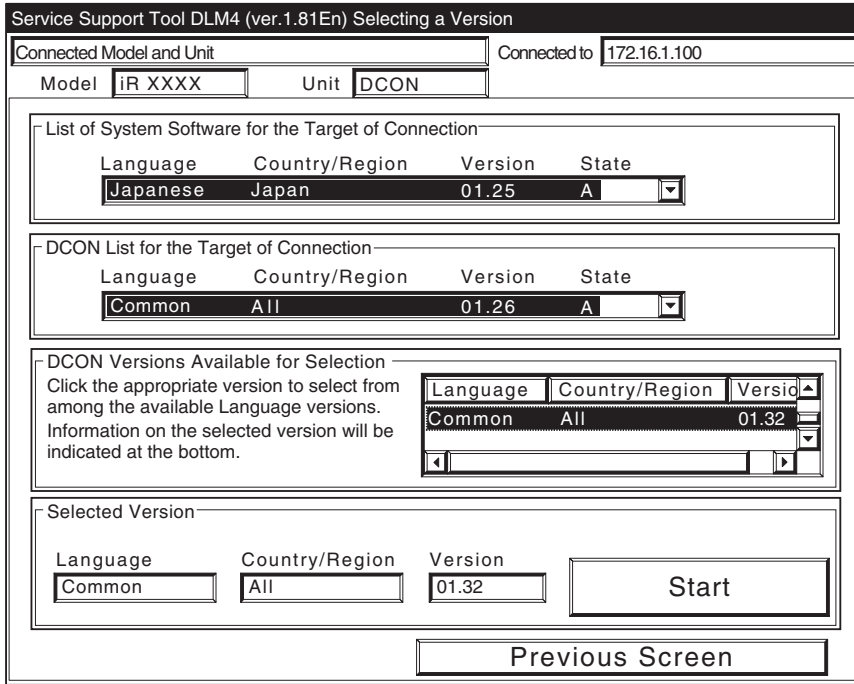

F-16-95

9) When the results of the downloading are indicated, and click [OK].

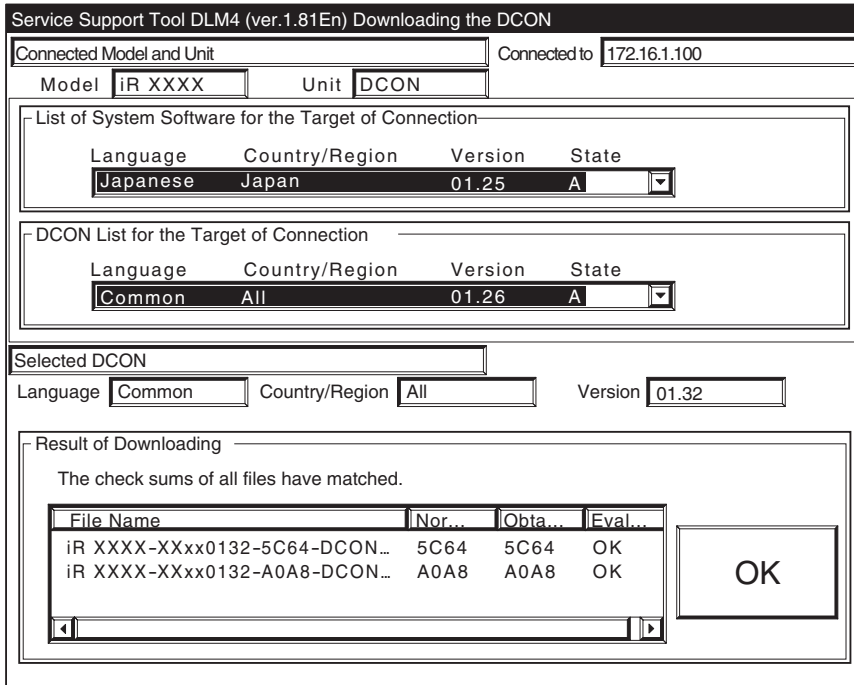

F-16-96

10) Click [To Unit Selection Screen].

[after Downloading]

When you have downloaded DC controller or Reader controller files, be sure to turn off and then on the machine's main power switch.



-You cannot download the DC controller and Reader controller files in succession.

-Never turn off the machine while the following screen is shown.

Otherwise, writing to `DCON/RCON' can fail, indicated by the error code.

DCON: E733

RCON: E732

Service Support Tool DLM4 (ver. 1.81En) Downloading the DCON

Connected Model and Unit: Model Unit Connected to

List of System Software for the Target of Connection

Language	Country/Region	Version	State
Japanese	Japan	01.25	A

DCON List for the Target of Connection

Language	Country/Region	Version	State
Common	All	01.26	A

Selected DCON

Language Country/Region Version

Progress of Writing to the Hard Disk
Data has been transferred, and is now been written to the hard disk.
"Now, data writing. Don't power off target"

Time Remaining sec

F-16-97


If an error code is indicated, be sure to download the appropriate system software.

16.4.6 Downloading the G3 FAX Software

16.4.6.1 Outline

0001-1664

The G3fax files are downloaded by way of the main controller block.

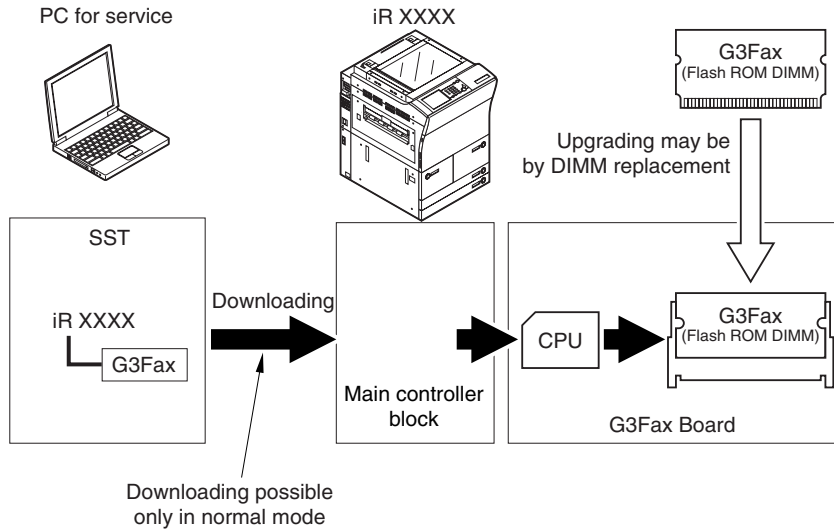

F-16-98



If downloading fails, the flash ROM DIMM must be replaced.


16.4.6.2 Downloading Procedure

0005-4934

[Procedure]


Use normal mode for downloading.

1) Click [To next] under Downloading/Uploading.

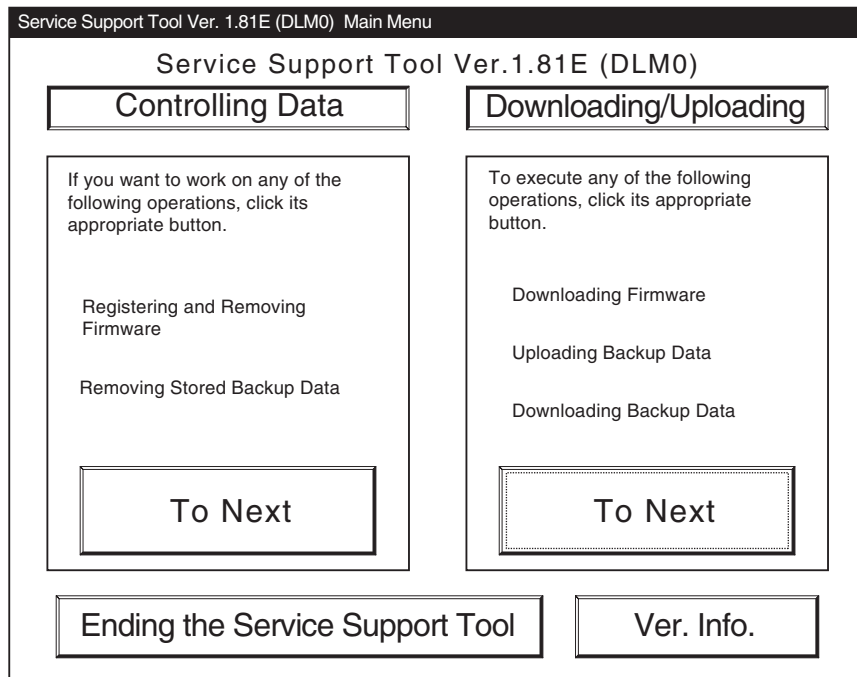


F-16-99

2) Select [G3FAX], and click [Connect].

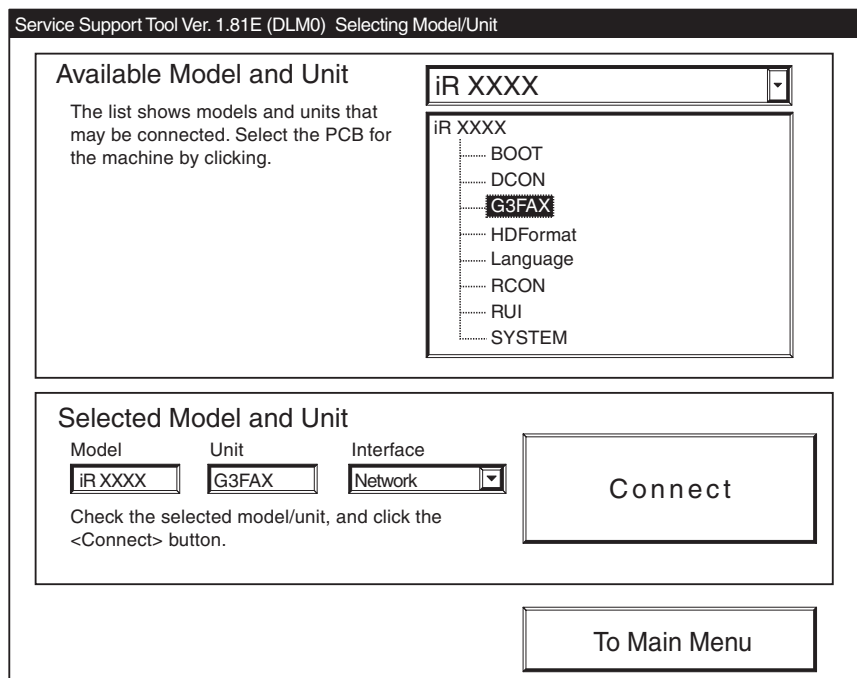


F-16-100

3) Click [Set host name].

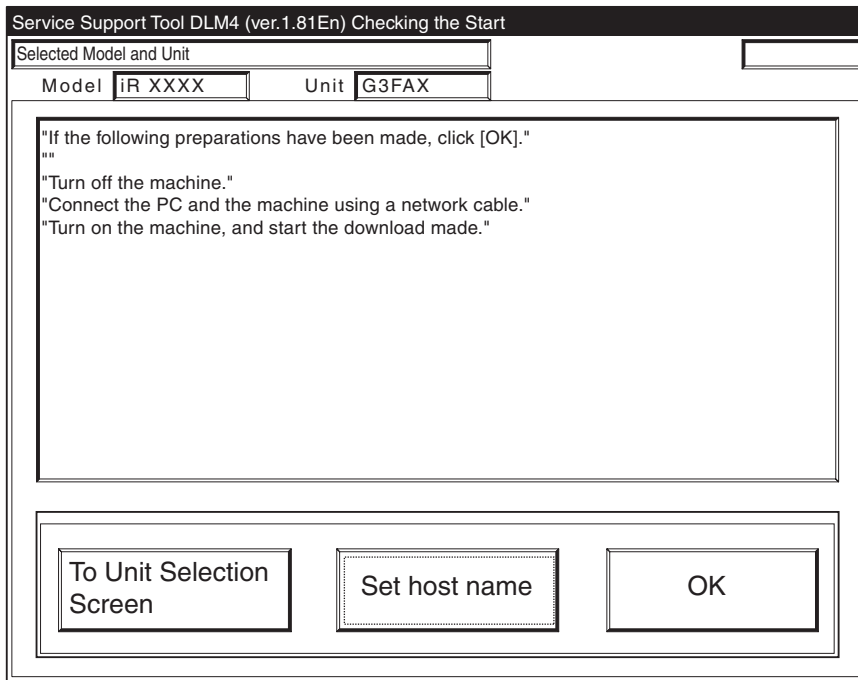


F-16-101

4) The machine's IP address is entered automatically; click [OK].

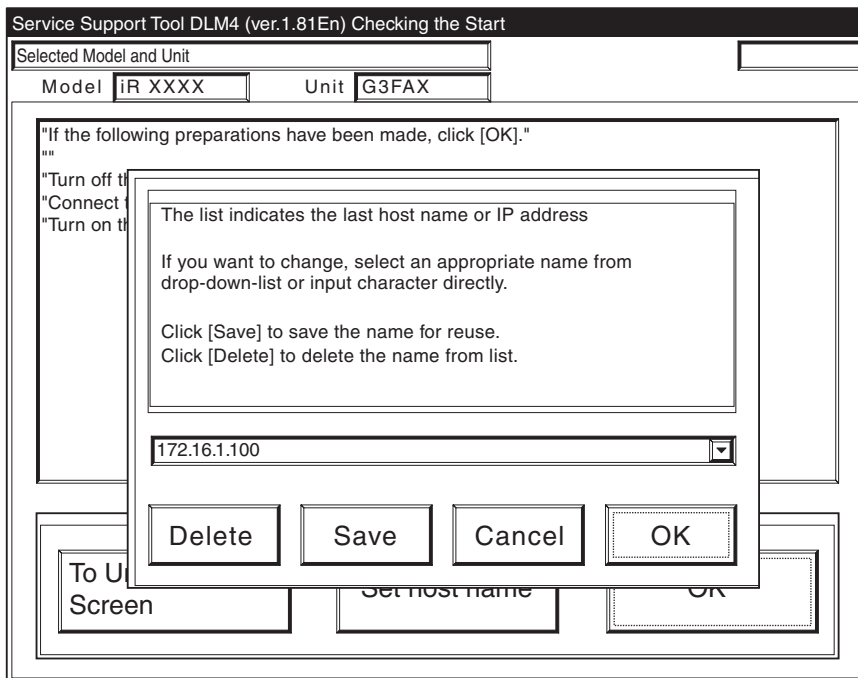


F-16-102

5) Click [OK] to start connection.

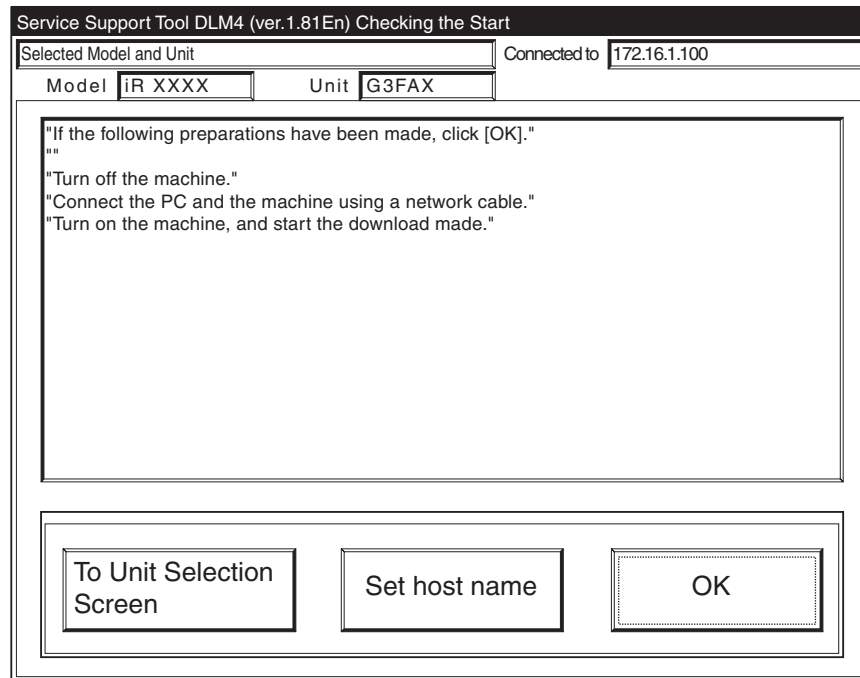


F-16-103

6) When the machine has made a connection and brings up the following screen, click [OK].

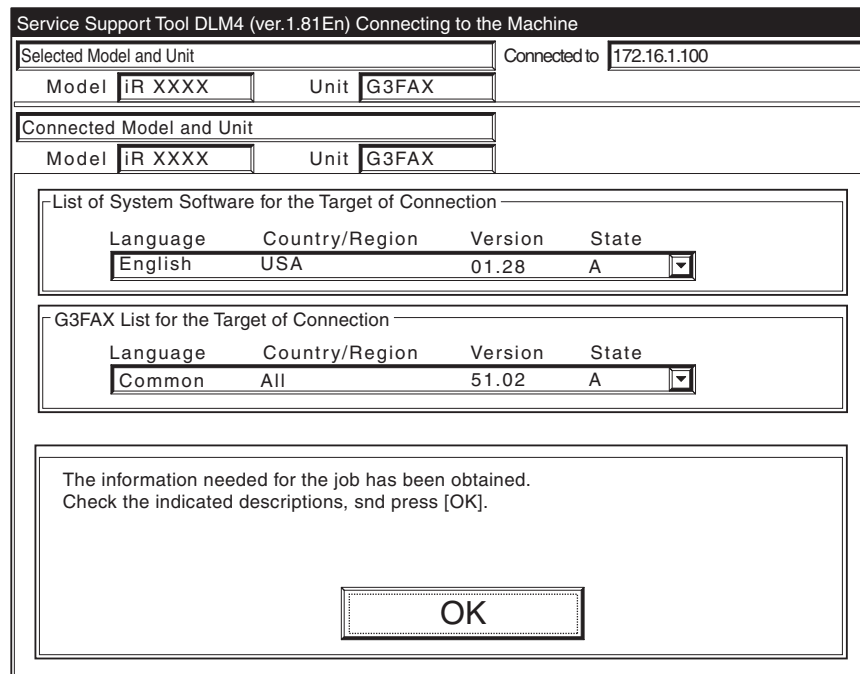


F-16-104

7) Click [G3FAX Download].

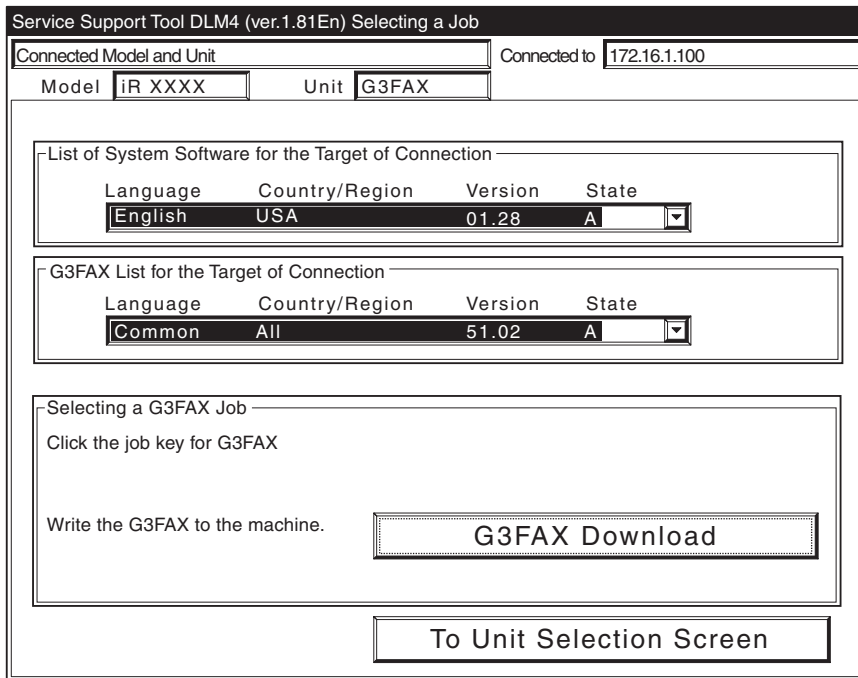

F-16-105

8) Select the version to download, and click [Start].

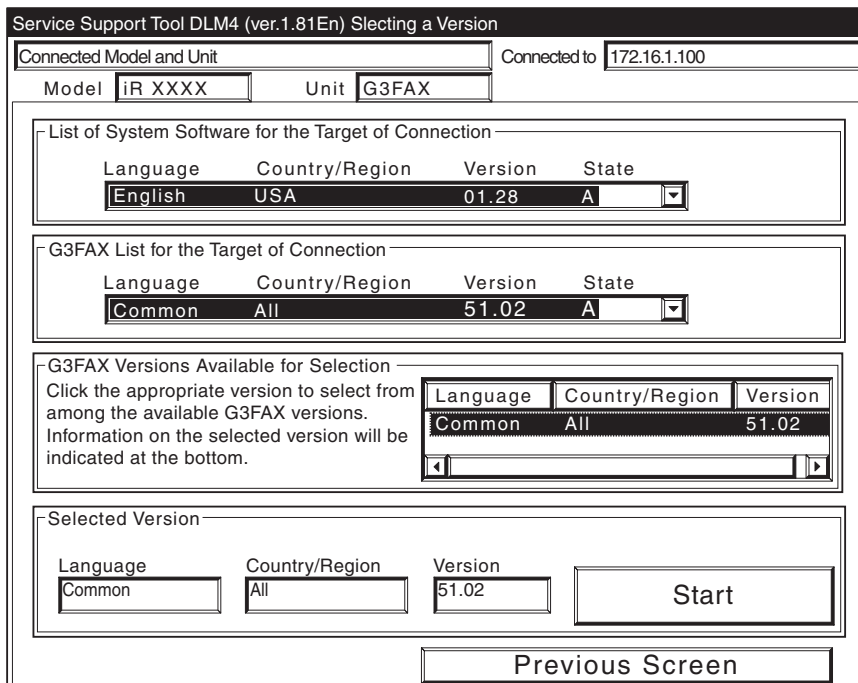

F-16-106

9) When the results of the downloading are indicated, and click [OK].

Service Support Tool DLM4 (ver.1.81En) Downloading the G3FAX

Connected Model and Unit Connected to

Model Unit

List of System Software for the Target of Connection

Language	Country/Region	Version	State
English	USA	01.28	A

G3FAX List for the Target of Connection

Language	Country/Region	Version	State
Common	All	51.02	A

Selected G3FAX

Language Country/Region Version

Result of Downloading

The check sums of all files have matched.

File Name	Nor...	Obta...	Eval...
iR XXXX-XXxx5102-A73D-G3FA...	A73D	A73D	OK

OK

F-16-107

10) Click [To Unit Selection Screen].

[after Downloading]

When you have downloaded G3FAX files, be sure to turn off and then on the machine's main power switch.



You cannot download G3FAX files twice in succession.

(Once downloading ends, the G3FAX board will be reset, leaving download mode.)

Never turn off the machine while the following screen is shown.

Writing to the flash ROM DIMM of the G3 fax board will fail, preventing the G3FAX board functions from operating normally.

The screenshot shows the 'Service Support Tool DLM4 (ver.1.81En) Downloading the G3FAX' window. It displays connection details (Model: iR XXXX, Unit: G3FAX, Connected to: 172.16.1.100) and lists system software (English, USA, 01.28, A) and G3FAX files (Common, All, 51.02, A). The 'Selected G3FAX' section shows 'Common', 'All', and '51.02'. A progress bar indicates 'Progress of Writing to the Hard Disk' with the message 'Data has been transferred, and is now been written to the hard disk.' and a warning: '"Now, data writing. Don't power off target"'. A 'Time Remaining' field shows '251 sec'. A 'Stop' button is located at the bottom right.

F-16-108

If the G3fax board fails to operate, be sure to replace the flash ROM DIMM on the G3fax board.

16.5 Uploading and Downloading Backup Data

16.5.1 Outline

0001-1666

The machine's backup data is stored on the SRAM, DC controller PCB, and Reader controller PCB. Any backup data is selected with reference to its file name used when uploading it.


T-16-9

Backup data	File name selected at time of uploading
DC controller PCB	SramDCON.bin
Reader controller PCB	SramRCON.bin
For R&D	Sublog.txt



-Be sure not to download or upload the [Sublog.txt] in the field.

-When replacing the DC controller PCB or the Reader controller PCB, it is a good idea to upload its data in advance, and download it after replacement so that parts counter reading and the like may be retained.

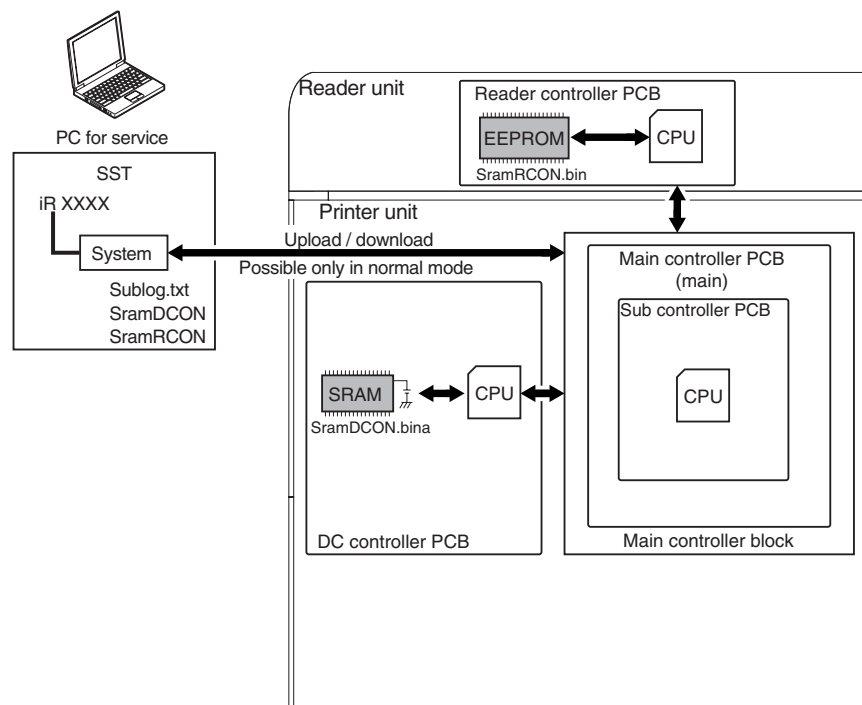

F-16-109


16.5.2 Uploading Procedure

0005-4936

[Procedure]

Use normal mode (Power ON 1+7 on keypad) for uploading.

1) Click the [To Next] under Downloading/Uploading.

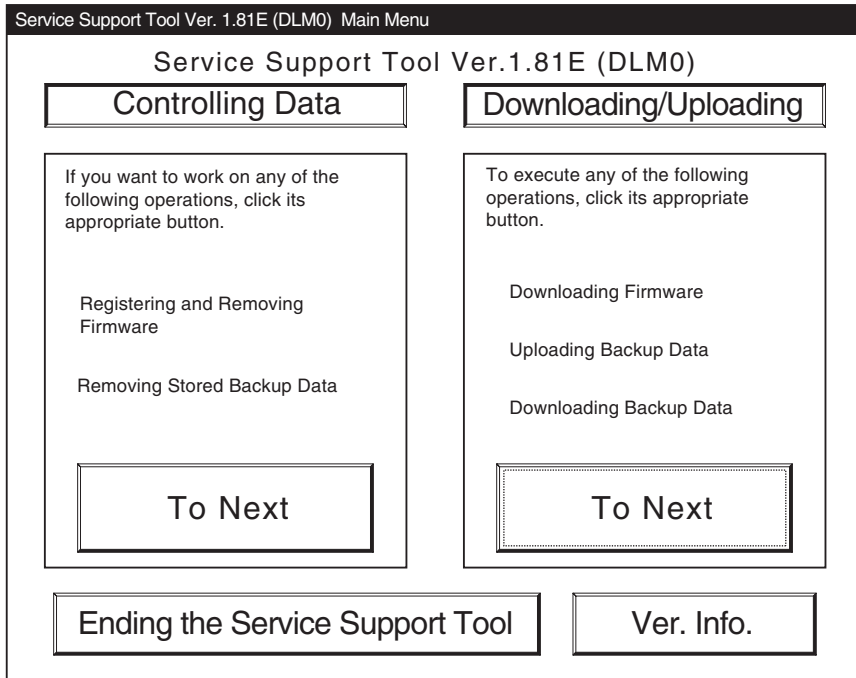

F-16-110

2) Select [SYSTEM] under iRC6800, and click [Connect].

Service Support Tool Ver. 1.81E (DLM0) Selecting Model/Unit

Available Model and Unit

The list shows models and units that may be connected. Select the PCB for the machine by clicking.

iR XXXX
 iR XXXX
 |--- BOOT
 |--- DCON
 |--- G3FAX
 |--- HDFormat
 |--- Language
 |--- RCON
 |--- RUI
 |--- **SYSTEM**

Selected Model and Unit

Model Unit Interface

Check the selected model/unit, and click the <Connect> button.

F-16-111

3) Click [Set host name].

Service Support Tool DLM4 (ver. 1.81En) Checking the Start

Selected Model and Unit

Model Unit

"If the following preparations have been made, click [OK]."

""


"Turn off the machine."

"Connect the PC and the machine using a network cable."

"Turn on the machine, and start the download mode."


F-16-112

4) The machine's IP address is entered automatically; click [OK].

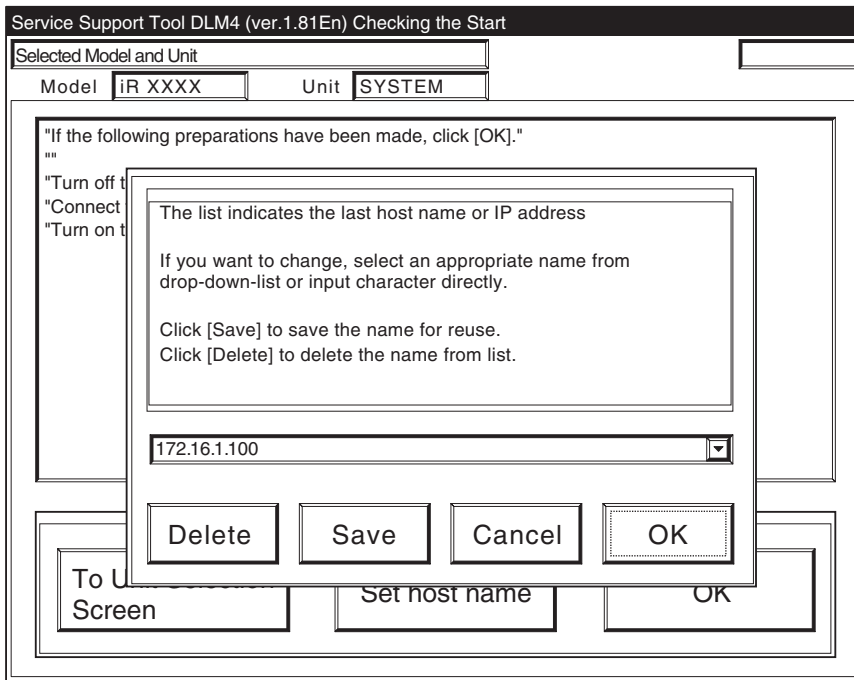

F-16-113

5) Click [OK] to start connection.

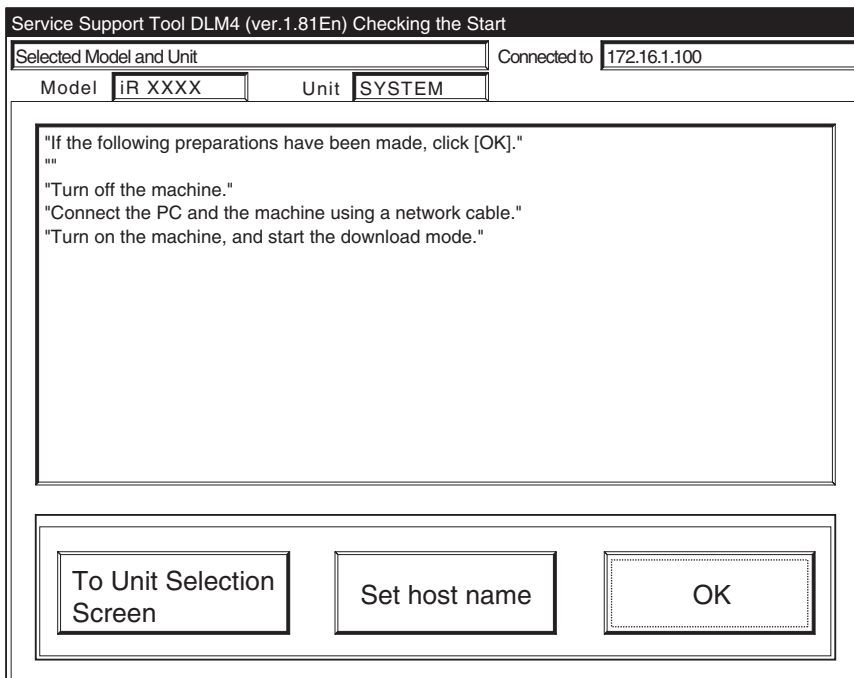

F-16-114

6) When the machine has made a connection and brings up the following screen, click [OK].

Service Support Tool DLM4 (ver. 1.81En) Connecting to the Machine

Selected Model and Unit Connected to 172.16.1.100

Model Unit

Connected Model and Unit

Model Unit

List of System Software for the Target of Connection

Language	Country/Region	Version	State
Japanese	Japan	01.25	A <input type="text"/>

The information needed for the job has been obtained.
Check the indicated descriptions, and press [OK].

F-16-115

7) Click [Upload the Backup Data].

Service Support Tool DLM4 (ver. 1.81En) Selecting a Job

Connected Model and Unit Connected to 172.16.1.100

Model Unit

List of System Software for the Target of Connection

Language	Country/Region	Version	State
Japanese	Japan	01.25	A <input type="text"/>

Selecting a SYSTEM Job
Click the job key for SYSTEM.

Write the system software to the machine.

Recover the system software that has been backed up.

Save the backup data of the machine.


Write the saved backup data to the machine.

F-16-116

8) Select the data to upload, and click [Start Storing].


-DC controller PCB: SramDCON.bin

-Reader controller PCB: SramRCON.bin

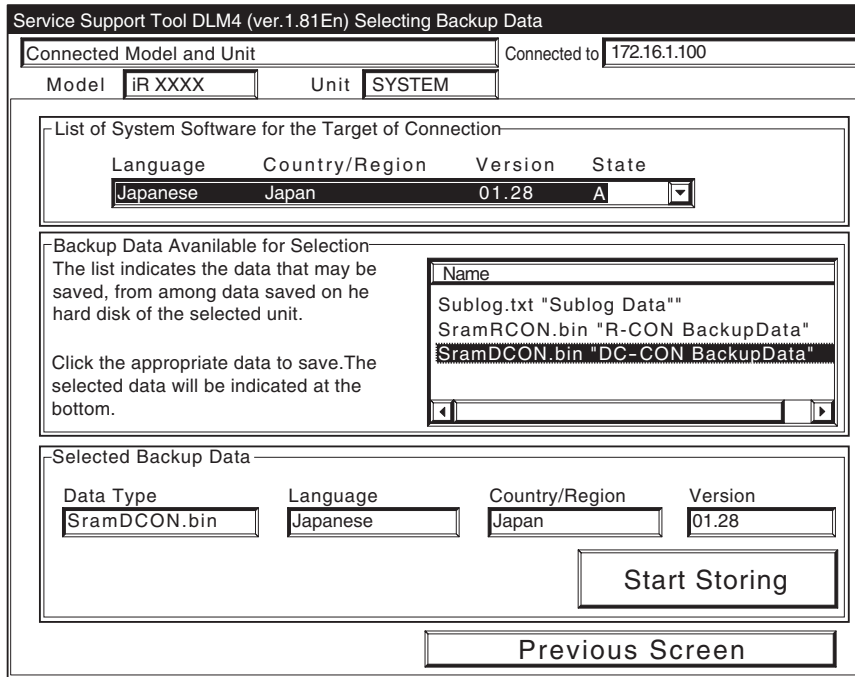

F-16-117

9) When uploading has ended, enter a file name to use, and click [Save].

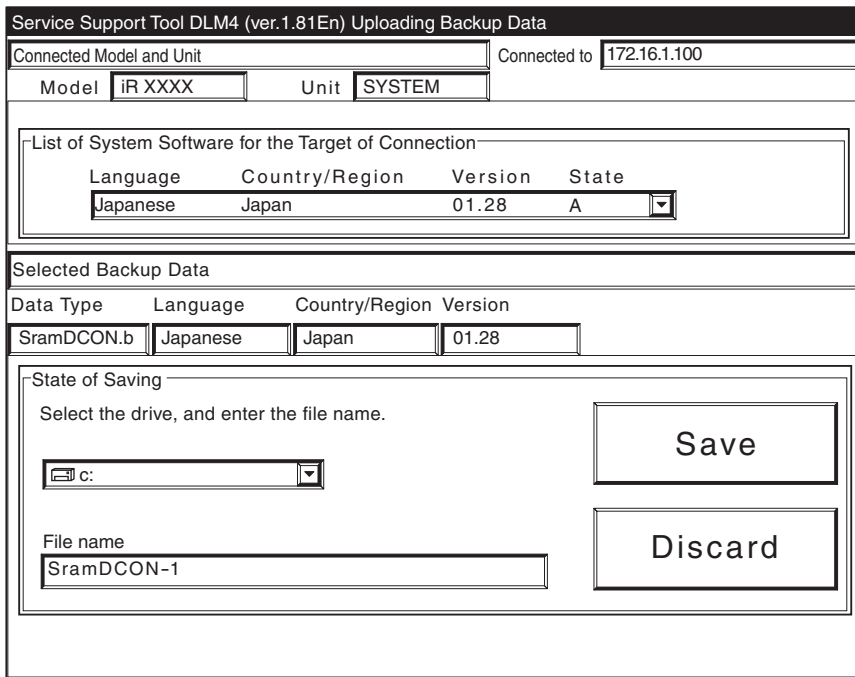

F-16-118

10) When the file has been saved, click [OK].

Service Support Tool DLM4 (ver.1.81En) Uploading Backup Data

Connected Model and Unit: Connected to:

Model: Unit:

List of System Software for the Target of Connection

Language	Country/Region	Version	State
Japanese	Japan	01.28	A

Selected Backup Data

Data Type	Language	Country/Region	Version
SramDCON.b	Japanese	Japan	01.28

Result of Uploading

The backup data has been saved.

c:

File name:

OK

F-16-119

11) Click [To Unit Selection Screen].


16.5.3 Downloading Procedure

0005-4937

[Procedure]

Use normal mode (Power ON 1+7 on keypad) for downloading.

1) Click the [To Next] under Downloading/Uploading.

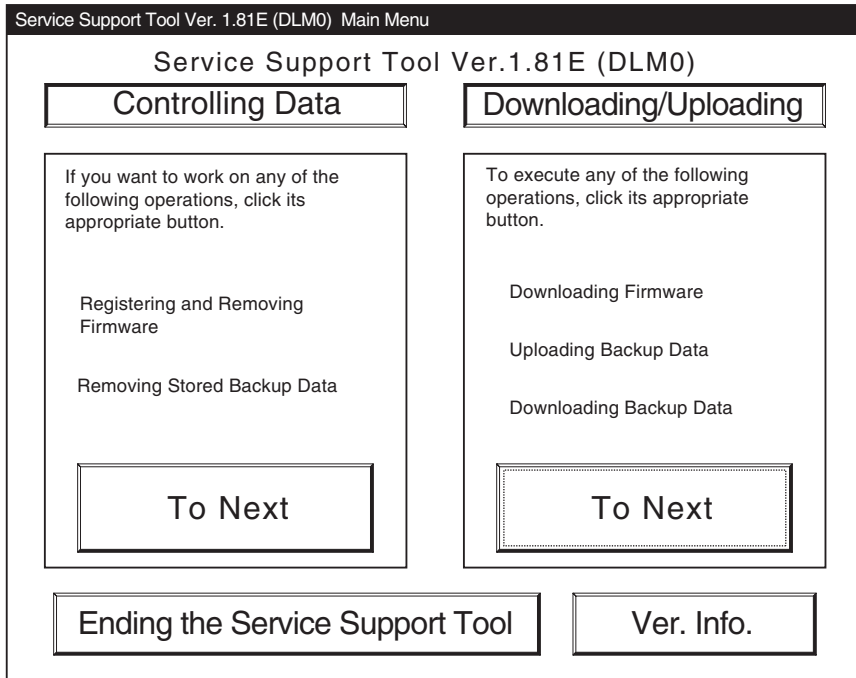

F-16-120

2) Select [SYSTEM] under iRC6800, and click [Connect].

Service Support Tool Ver. 1.81E (DLM0) Selecting Model/Unit

Available Model and Unit

The list shows models and units that may be connected. Select the PCB for the machine by clicking.

iR XXXX
 iR XXXX
 |--- BOOT
 |--- DCON
 |--- G3FAX
 |--- HDFormat
 |--- Language
 |--- RCON
 |--- RUI
 |--- **SYSTEM**

Selected Model and Unit

Model	Unit	Interface	
iR XXXX	SYSTEM	Network	Connect

Check the selected model/unit, and click the <Connect> button.

To Main Menu

F-16-121

3) Click [Set host name].

Service Support Tool DLM4 (ver.1.81En) Checking the Start

Selected Model and Unit

Model	Unit		
iR XXXX	SYSTEM		

"If the following preparations have been made, click [OK]."

""

"Turn off the machine."

"Connect the PC and the machine using a network cable."

"Turn on the machine, and start the download mode."


To Unit Selection Screen

Set host name

OK


F-16-122

4) The machine's IP address is entered automatically; click [OK].

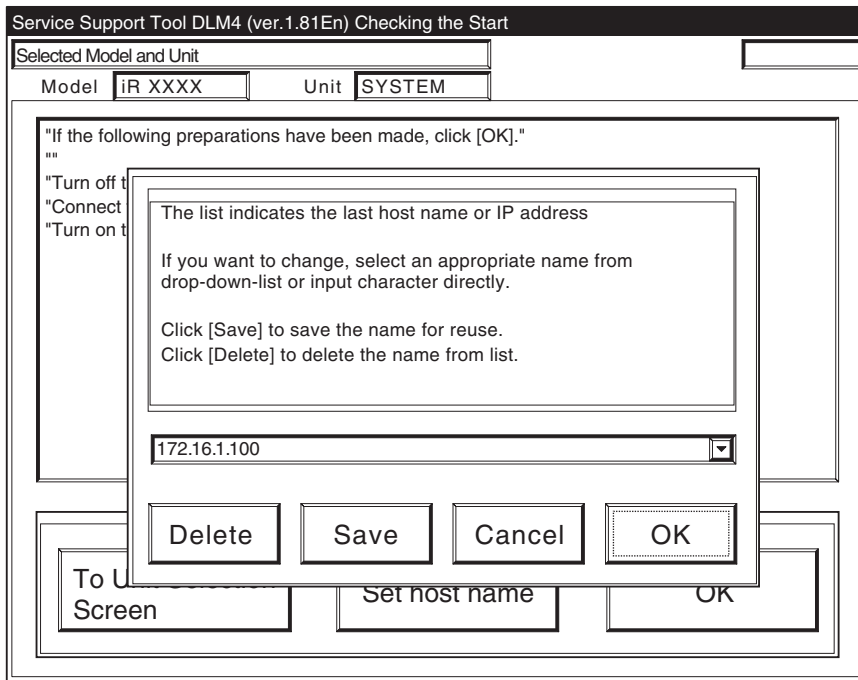


F-16-123

5) Click [OK] to start connection.

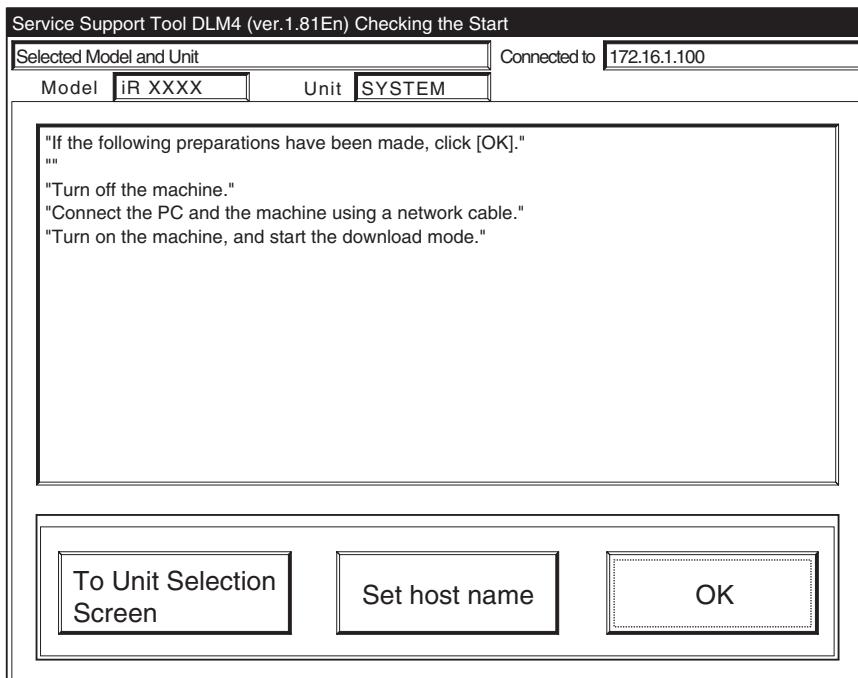


F-16-124

6) When the machine has made a connection and brings up the following screen, click [OK].

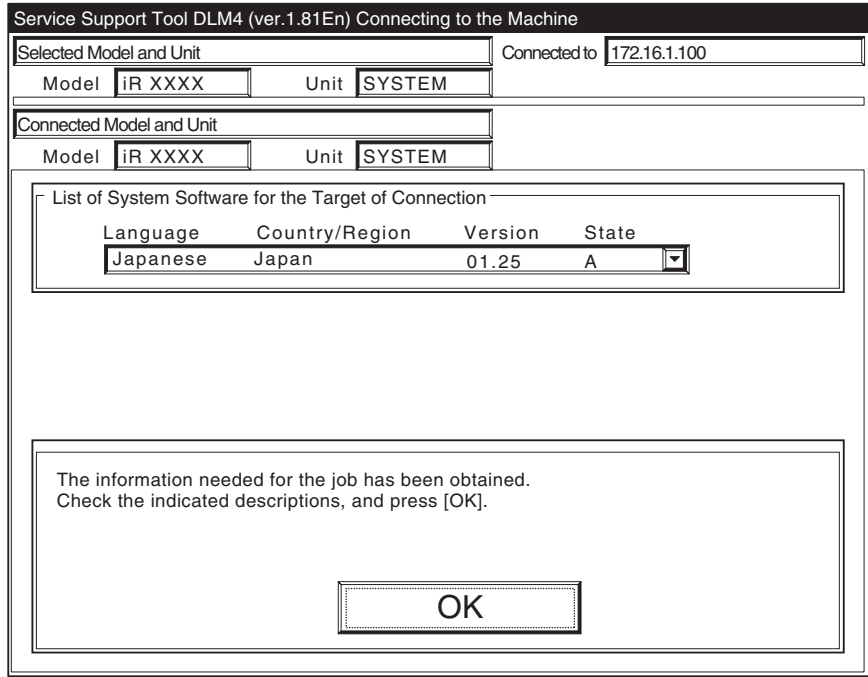


F-16-125

7) Click [Download the Backup Data].

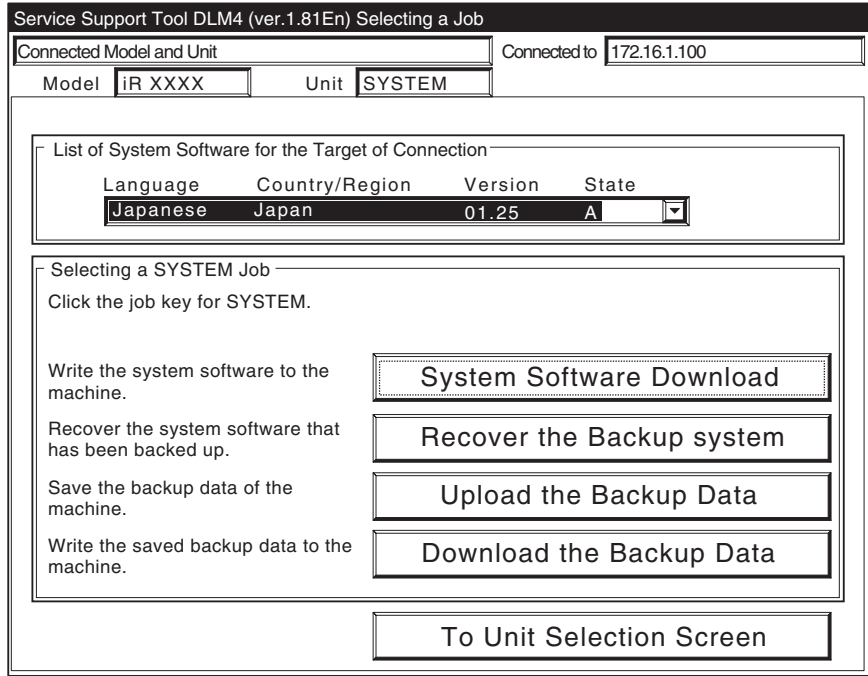


F-16-126

8) Select the file to download, and click [Start Writing].

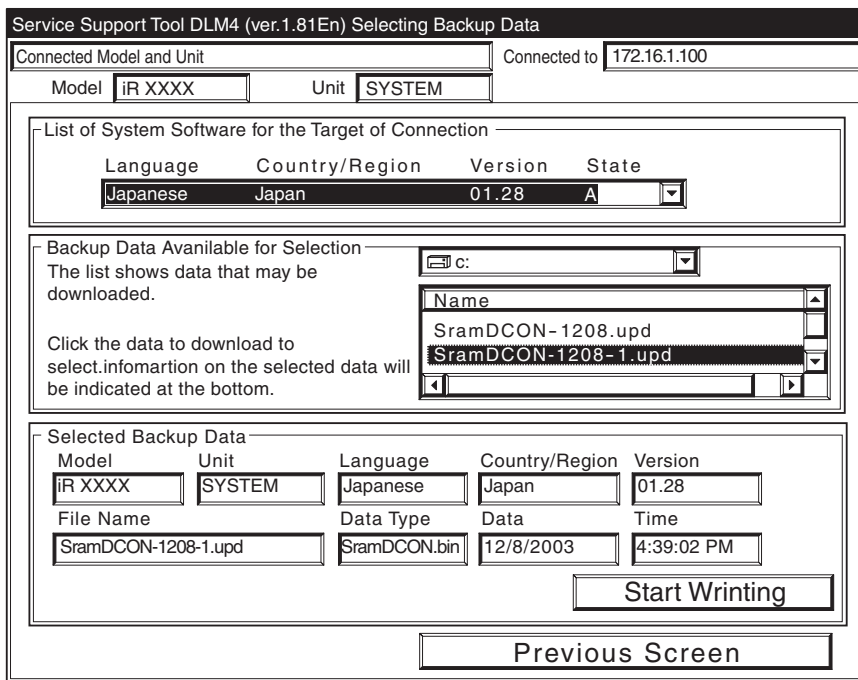

F-16-127

9) When uploading has ended, click [OK].

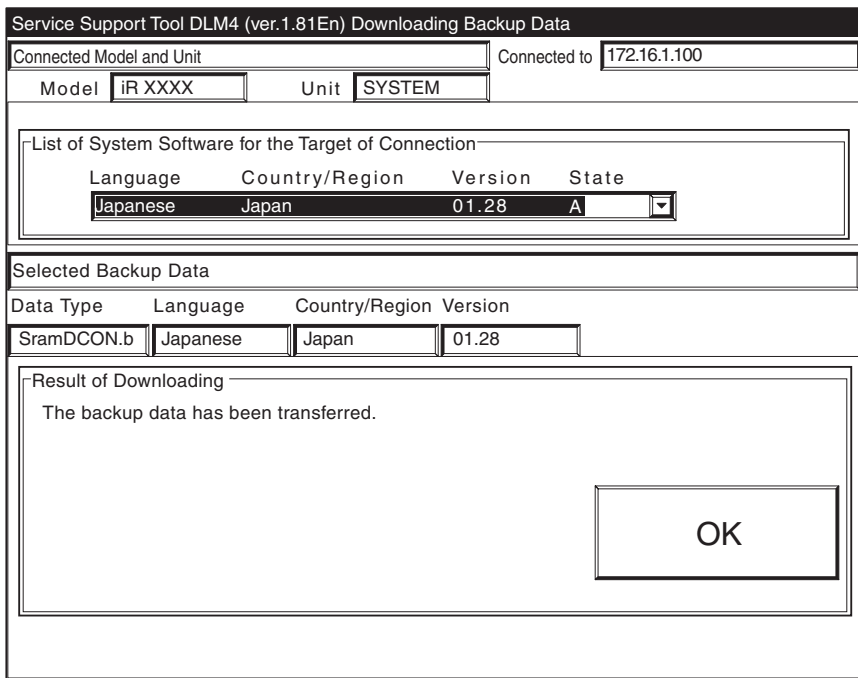

F-16-128

10) Click [To Unit Selection Screen].

Chapter 17 Service Tools

Contents







17.1 Special Tools	17-1
17.2 Solvents and Oils.....	17-3



17.1 Special Tools

0003-9975

In addition to the standard tooles set, the following special tools are required when servicing the machine:

T-17-1

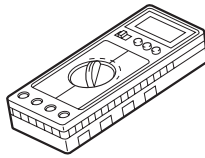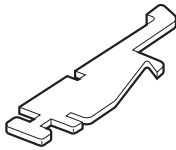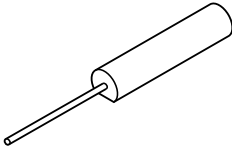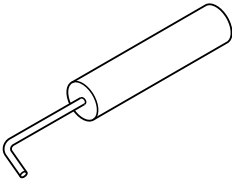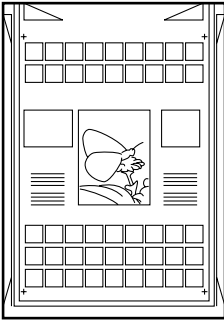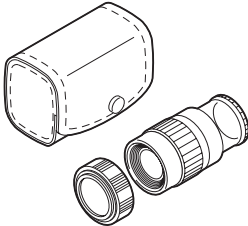Tool name	Tool No.	Ctgr	Appearance	Remarks
Digital multimeter	FY9-2002	A		Use for electrical checks; for adjustment of laser power in combination with the laser power checker.
Cover switch	TKN-0093	A		
Tester extension pin	FY9-3038	A		Used as a probe extension when making electrical checks.
Tester extension pin (L-shaped)	FY9-3039	A		Used as a probe extension when making electrical checks.
CA1 test Sheet	FY9-9030	A		Used for adjusting/checking images.
Loupe	CK-0056	B		Used for checking images.

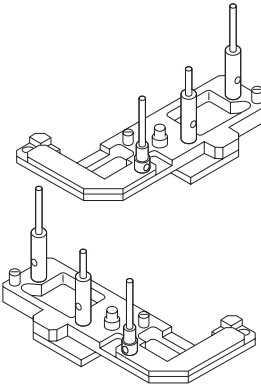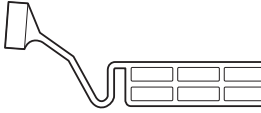Tool name	Tool No.	Ctgr	Appearance	Remarks
Mirror positioning tool	FY9-3009-040	B		Used for positioning mirror mounts.
Routing mirror cleaning tool	FL2-2474	B		Used for cleaning routing mirror

[Ctgr]

A: Must be kept by each service engineer.

B: Must be kept by each group of about five engineers.

C: Must be kept by each workshop.

17.2 Solvents and Oils

0003-9976

T-17-2

Item	Uses	Composition	Remarks
Alcohol	Cleaning; e.g., glass, plastic, rubber; external covers.	-Fluoride-family hydrocarbon -Alcohol -Surface activating -Water	-Do not bring near fire. -Procure locally. -Substitute: IPA(isopropyl alcohol)
Solvent	Cleaning; e.g., metal; oil or toner stain.	-Fluoride-family hydrocarbon -Chlorine-family hydrocarbon -Alcohol	-Do not bring near fire. -Procure locally. -Substitute: MEK
Heat-resisting grease	Lubrication; e.g., fixing drive areas.	-Mineral oil-family lithium soap -Molybdenum disulfide	-MO-138S -Tool No: CK-0427 (500 g/can)
Lubricating oil		-Mineral oil (paraffin-family)	-Tool No: CK-0524 (100 cc)
Lubricating oil	Lubrication; e.g., drive areas, friction areas.	-Silicone oil	-Tool No: CK-0551 (20 g)
Lubricating oil (EM-50L)	Lubrication; e.g., gears.	-Special oil -Special solid lubricating agent -Lithium soap	-Tool No: HY9-0007
Lubricating oil	Lubrication; e.g., scanner rail.	-Silicone oil	-Tool No: FY9-6011 (50 cc)
Conducting grease	Lubrication; e.g., edge of secondary transfer roller, drum heater sliding area.	-Fluorine poly methyl -Polytetra fluorine ethylene	-Tool No: FY9-6008 (75 g)
Lubricant	Lubrication; e.g., photosensitive drum cleaning blade.	Fluorine graphite	-Tool No: TKN-0480

Apr 6 2004

Canon