


Service Information

COPIER

⊠HARDWARE □SOFTWARE

Model	:	G	P605	GP555	<b>Ref. No. :</b> FF-T01-K1-000053-02 <b>Date :</b> August 3, 2000			
REVISE	ED	FF	<sup>7</sup> -T01-K1-000053-01(1	May 17, 2000): Full page replacement, p. 1-6.	© Canon (UK) Limited			
Location	l	:	FLUORESCE	NT LAMP HEATER (NO. 1 MIRRO	DR SEAT)			
Subject		:		Γ AND TEMPORARY MEASURES DF THE FLUORESCENT LAMP HE	AGAINST LIGHT IMAGES CAUSED BY EATER			
Reason		:	After some period of use, the fluorescent lamp heater starts to rotate, and close the opening for light, resulting in light images in some cases. This bulletin is prepared to provide field measures against the problem.					
Details		:		y, the heater starts to move around the ht, resulting in light image.	e fluorescent lamp clockwise. It may block the			
			<cause> The force gene heater rotate.</cause>	rated by the cable attached to the fluor	rescent lamp heater makes the fluorescent lamp			
			measures any 1) Make a loop fluorescent l	asures manent measure becomes definite, tl y more.)				

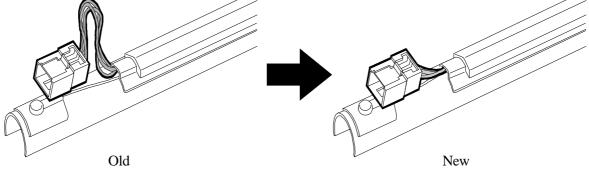



## Permanent measures

Change the shape of the heater stopper to reinforce the stopper so that the fluorescent lamp heater will not rotate. Along with this change, the shape of the reflecting support plate to which the heater stopper is attached is changed as well.

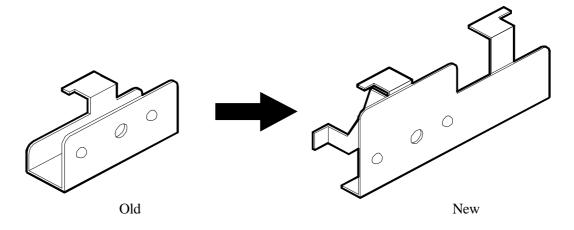


Figure 2: Change of the shape of the heater stopper


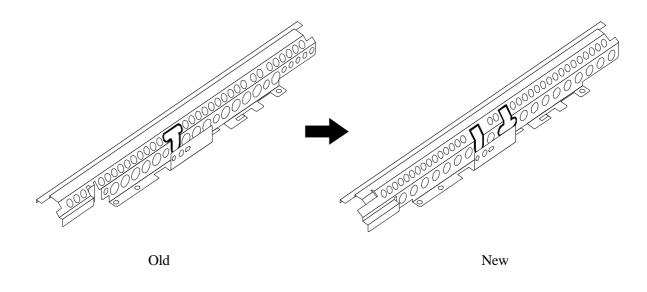


Figure 3: Change of the shape of the reflecting support plate

Note 1: Before taking this measure, be sure to verify the position of the fluorescent lamp heater. If the heater is out of position, move it in position. (See Figure 5)

Effect of the measure:

The heater stopper is used to prevent a fluorescent lamp heater from moving up and down, and left and right as described below.

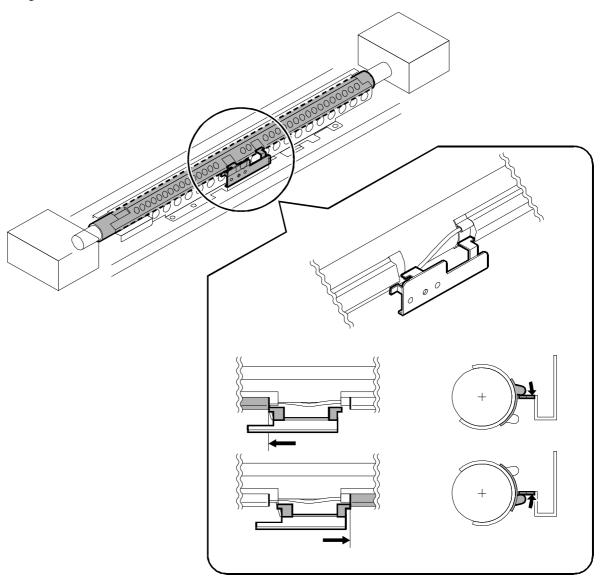

Prevent the heater from moving left and right.

Prevent the heater from moving up and down.


Figure 4

## Servicing Work :

No need to take following measures to the machines to which the permanent measure has been already taken.


Temporary measures :

- 1) Remove the fluorescent lamp (including the florescent lamp heater) from the machine.
- 2) Check whether the fluorescent lamp heater is located as in Figure 5.
- 3) If the fluorescent lamp heater is out of position, correct its position by referring to Figure 5.

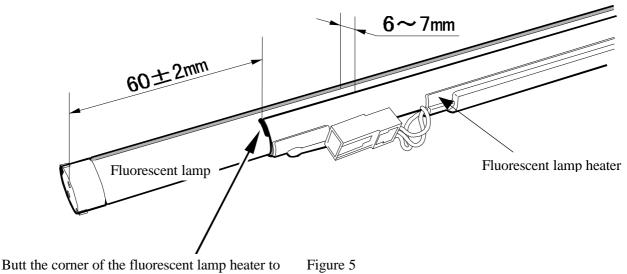

the line on the fluorescent lamp.

- 4) Butt the edge of the connector of the fluorescent lamp heater to the step as in Figure 6.
- 5) Push the connector against the heater, and bend the excess part of the cable as in Figure 6 to make a loop.

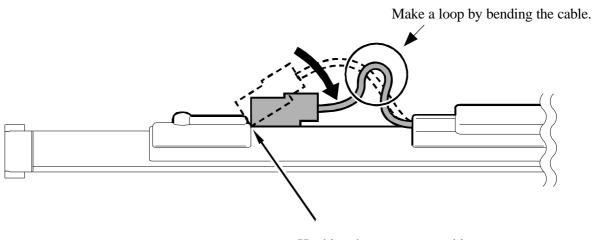

Hooking the connector to this step, attach it to the heater.

Figure 6

6) Hold together the fluorescent lamp and the connector with your left hand, and bring the cables, which are already bent and looped, down to the front with your right hand (so that the loops will face down when the fluorescent lamp is mounted to the machine).

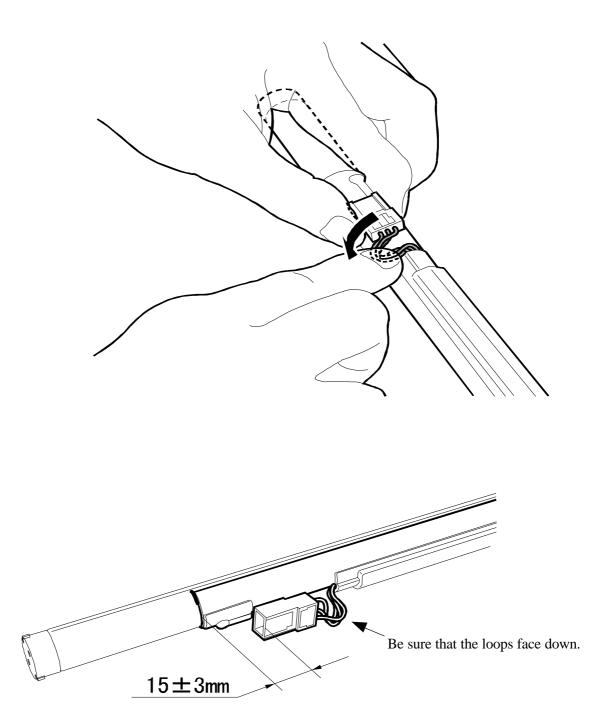


Figure 7: After making loops

7) Hold the fluorescent lamp (including the fluorescent lamp heater) while keeping the loops intact, and mount it to the machine.

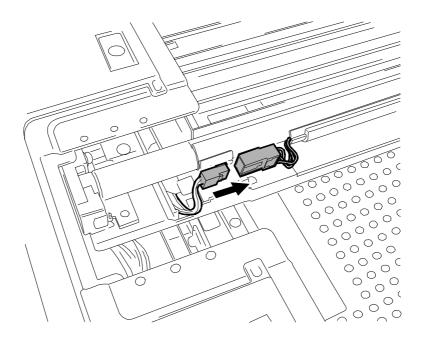


Figure 8

## Service Parts :

No.		Description	Part number	Q'ty	Stock	Inter- change- ability	P.C. Stock date
1	Old	MIRROR ASSEMBLY 1	FG6-2036-000	1→0	С	<b>I ▲</b>	420
	New	MIRROR ASSEMBLY 1	FG6-2036-040	$0 \rightarrow 1$	D	No Yes ▼	
2	Old						420
	New	HEATER STOPPER	FB5-4345-000	0→1	D	<b>+ 1</b>	
3	Old					I <b>▲</b>	420
	New	SUPPOR PLATE, REFLECTOR	FB4-0790-000	0→1	D	<b>↓  </b>	

\*1: Interchangeable by replacing all two parts at the same time.

## Affected machines:

Temporary measures 1):	F13-5631	NLE15321 (Next lot)			
	F13-5638	NNT13048 and later			
	F13-5641	PLP00614 and later			
	F13-5661	RLE00398 and later			
Temporary measures 2) :	Under arrangement.				
Permanent measures :	F13-5631	NLE15321 (Next lot)			
	F13-5628	NNT14995 and later			
	F13-5641	PLP00659 (Next lot)			
	F13-5661	RLE00458 (Next lot)			