

**HF SSB transceiver type 8528**  
Operators handbook



No part of this handbook may be reproduced,  
transcribed, translated into any language or transmitted  
in any form whatsoever without the prior written  
consent of Codan Pty Ltd.

© Copyright 1993 Codan Pty Ltd.

Codan Part No. 15-04016 Issue 4, April 1994







# Contents

---

|   |            |
|---|------------|
| <b>1. About this handbook.....</b>                | <b>1-1</b> |
| Who should use this handbook .....                | 1-1        |
| Icons and standards.....                          | 1-1        |
| Glossary.....                                     | 1-2        |
| <b>2. Overview .....</b>                          | <b>2-1</b> |
| The transceiver control panels .....              | 2-5        |
| The transceiver and control head rear panel ..... | 2-9        |
| <b>3. Installation .....</b>                      | <b>3-1</b> |
| Mounting the transceiver .....                    | 3-3        |
| Code 117 mounting cradle—front entry.....         | 3-4        |
| Code 118 mounting cradle—top/bottom entry.....    | 3-5        |
| Mounting the extended control head.....           | 3-6        |
| Power supply .....                                | 3-8        |
| Grounding.....                                    | 3-9        |
| Antennas and antenna tuners.....                  | 3-9        |
| <b>4. Using the transceiver.....</b>              | <b>4-1</b> |
| Switching the transceiver on or off.....          | 4-2        |
| Switching on or off without a PIN .....           | 4-2        |
| Switching on or off with a PIN.....               | 4-3        |
| The transceiver display .....                     | 4-4        |
| Option codes .....                                | 4-4        |
| Displaying the channel option.....                | 4-5        |
| Dimming the display indicators .....              | 4-6        |
| Reviewing the EPROM version and options.....      | 4-7        |

|  |      |
|--|------|
| Selecting channels .....                                     | 4-9  |
| Using the Channel Up or Down buttons.....                    | 4-9  |
| Using the recall buttons.....                                | 4-10 |
| Adjusting the volume .....                                   | 4-11 |
| Using the clarifier .....                                    | 4-12 |
| Changing the operating mode (USB - LSB) .....                | 4-13 |
| Using the mute controls .....                                | 4-14 |
| Voice mute .....   | 4-14 |
| Selective call mute .....                                    | 4-14 |
| Tuning the antenna .....                                     | 4-15 |
| Automatic tuning whip antenna.....                           | 4-15 |
| Multi-frequency tapped whip antenna.....                     | 4-16 |
| Antenna tuners .....   | 4-17 |
| Tune receive only mode.....                                  | 4-19 |
| Using the Tune Rx Frequency $\wedge$ or $\vee$ buttons ..... | 4-20 |
| Selecting the desired frequency.....                         | 4-21 |
| Storing a tuned receive only frequency.....                  | 4-23 |
| Transmitting.....  | 4-24 |
| Using the microphone .....                                   | 4-24 |
| Transmitting a message.....                                  | 4-25 |
| Making an emergency call (Australia only).....               | 4-27 |

## **5. Using selective call .....5-1**

|   |      |
|---|------|
| Selective call terms .....                                | 5-2  |
| Setting up selective call .....                           | 5-4  |
| Setting the pre-amble time period .....                   | 5-5  |
| Setting the fixed called address.....                     | 5-6  |
| Setting the self-identification address .....             | 5-7  |
| Enabling the beacon mode .....                            | 5-7  |
| Setting tone calls .....                                  | 5-8  |
| Setting up the selective call switches .....              | 5-9  |
| Checking if a channel is enabled for selective call ..... | 5-10 |
| Checking if a selective decode (SD) option is fitted..... | 5-11 |
| Selective call mute enable or inhibit.....                | 5-12 |
| Enabling a channel for selective call.....                | 5-14 |
| Transmitting a selective call .....                       | 5-16 |

Receiving a selective call ..... 5-19  
 Answering a received call ..... 5-21  
 Returning a received call ..... 5-22  
 Reviewing the list of received calls in memory ..... 5-23  
     Reviewing calls held in memory ..... 5-24  
     Recalling calls held in memory ..... 5-26  
 Using the beacon feature..... 5-27  
     Selective beacon mode ..... 5-29  
     (99) beacon mode..... 5-31  
 Using the external alarm feature ..... 5-33  
 Testing the selective call functions ..... 5-34

**6. Using the receiver in scan mode ..... 6-1**

Scan mode terms..... 6-2  
 Setting up the scan mode ..... 6-3  
 Programming the channels to be scanned ..... 6-6  
 Receiving in scan mode ..... 6-8  
     Start scanning ..... 6-8  
     Stop scanning ..... 6-8  
     Changing the scan mode..... 6-9  
 Using selective call in scan mode ..... 6-11  
 Programming frequency band scan ..... 6-13  
 Scanning frequency bands ..... 6-17  
 Deleting unwanted scan channels ..... 6-19

**7. Programming channels ..... 7-1**

Setting up the P-channel inhibit options ..... 7-2  
     Checking if the inhibit link is fitted to the PCB ..... 7-3  
     Changing the inhibit options ..... 7-5  
 Copying channels to P-channels ..... 7-7  
 Creating receive only P-channels..... 7-10  
 Creating transmit and receive P-channels ..... 7-12  
 Deleting unwanted P-channels ..... 7-15  
 Programming display messages ..... 7-16  
 Setting up temporary channels..... 7-18

|  |             |
|--|-------------|
| <b>8. Using tone call .....</b>                      | <b>8-1</b>  |
| Setting up tone call .....                           | 8-2         |
| Enabling a channel for tone call.....                | 8-5         |
| Using the tone call mode .....                       | 8-8         |
| Transmitting a tone call.....                        | 8-8         |
| Receiving a tone call .....                          | 8-9         |
| <br>   |             |
| <b>9. Making a telephone interconnect call.....</b>  | <b>9-1</b>  |
| Enabling the telephone mode.....                     | 9-2         |
| Making a telephone call.....                         | 9-3         |
| Sending a disconnect message .....                   | 9-6         |
| Storing a telephone number .....                     | 9-8         |
| Reviewing the stored telephone numbers.....          | 9-10        |
| Calling a stored telephone number .....              | 9-12        |
| Deleting a stored telephone number .....             | 9-15        |
| Received call messages.....                          | 9-17        |
| Reviewing the list of received calls in memory ..... | 9-18        |
| Returning a call.....                                | 9-20        |
| <br>   |             |
| <b>10. Operating with ARQ-FEC data.....</b>          | <b>10-1</b> |
| <br>   |             |
| <b>11. Changing the set-up options .....</b>         | <b>11-1</b> |
| Set-up option links.....                             | 11-1        |
| Front panel link.....                                | 11-2        |
| Changing the position of the front panel link .....  | 11-3        |
| The microprocessor PCB link .....                    | 11-4        |
| Inserting the microprocessor PCB link .....          | 11-5        |
| Reviewing set-up options.....                        | 11-6        |
| PTT timer .....                                      | 11-8        |
| Enter a PIN (Personal Identification Number).....    | 11-10       |
| Changing or deleting a PIN .....                     | 11-12       |



|   |             |
|---|-------------|
| Power-on settings.....                              | 11-14       |
| Mute settings.....                                  | 11-14       |
| Beep volume .....                                   | 11-16       |
| Clear all settings and P-channels .....             | 11-17       |
| Antenna select output.....                          | 11-18       |
| <b>12. Display messages .....</b>                   | <b>12-1</b> |
| Messages and operator errors .....                  | 12-2        |
| System errors .....                                 | 12-7        |
| Reviewing the EPROM program content.....            | 12-8        |
| <b>13. Front and rear panel sockets .....</b>       | <b>13-1</b> |
| Microphone socket .....                             | 13-2        |
| Options SD and PP - external alarm and battery..... | 13-3        |
| power outlet socket                                 |             |
| Option PS - miscellaneous facilities socket .....   | 13-4        |
| Antenna control socket .....                        | 13-5        |
| Remote control socket .....                         | 13-8        |
| <b>14. Specification.....</b>                       | <b>14-1</b> |
| <b>15. Options and accessories.....</b>             | <b>15-1</b> |
| <b>Appendix A—The 9300 ALE Controller .....</b>     | <b>A-1</b>  |
| ALE operation .....                                 | A-1         |
| ALE station addressing.....                         | A-2         |
| ALE scanning .....                                  | A-2         |
| ALE sounding.....                                   | A-2         |
| LQA exchange .....                                  | A-2         |
| Setting up the ALE system.....                      | A-3         |
| Setting the self-identification address .....       | A-4         |
| Programming the channels to scan .....              | A-6         |
| Setting the preamble time period.....               | A-8         |
| Changing the sounding interval.....                 | A-9         |

|  |      |
|--|------|
| Using the 9300.....                            | A-10 |
| Scanning.....                                  | A-10 |
| Calling a remote ALE station.....              | A-11 |
| Making a selective call to an ALE station..... | A-10 |
| Receiving an ALE call .....                    | A-12 |
| 9300 settings.....                             | A-13 |
| Disabling the 9300 ALE Controller.....         | A-19 |
| Link establishment time .....                  | A-20 |
| Limitations.....                               | A-21 |

## List of drawings

| <b>Figure</b> | <b>Title</b>                               | <b>Page</b> |
|---------------|--|-------------|
| 2.1           | Front panel control transceiver.....       | 2-11        |
| 2.2           | Extended control head transceiver .....    | 2-12        |
| 2.3           | The transceiver rear panel.....            | 2-13        |
| 2.4           | The extended control head rear panel ..... | 2-13        |
| 3.1           | Typical base station installation.....     | 3-1         |
| 3.2           | Typical mobile installation.....           | 3-2         |
| 5.1           | Selective call switches.....               | 5-9         |
| 9.1           | Telephone interconnect block diagram ..... | 9-1         |
| 11.1          | The front panel link.....                  | 11-2        |
| 11.2          | The microprocessor link.....               | 11-4        |





# 1. About this handbook






---

## Who should use this handbook

This handbook is written for the person who installs and operates the Codan 8528 transceiver.

## Icons and standards

The following icons and standards have been used throughout this handbook.

| <b>This icon...</b>   | <b>Means...</b>  |
|---|--|
|    | the subject is continued over the page.  |
|    | the end of a subject.  |
|  | this is a warning, and information associated with this symbol must be adhered to. |
|  | a button on the transceiver.   |
|  | an antenna symbol used in drawings.  |

## Glossary

|         |  |
|---------|--|
| AD      | Antenna Driver                               |
| ARQ     | Automatic Repeat Request                     |
| FEC     | Forward Error Correction                     |
| LCD     | Liquid Crystal Display                       |
| LSB     | Lower Side Band                              |
| PIN     | Personal Identification Number               |
| PS      | Miscellaneous facilities                     |
| PTT     | Press To Talk                                |
| R       | Remote                                       |
| RFDS    | Royal Flying Doctor Service (Australia only) |
| Rx      | Receive                                      |
| SD      | Selective call Decode                        |
| Telstra | Telstra (formerly OTC Australia)             |
| Tx      | Transmit                                     |
| USB     | Upper Side Band                              |

