



NOTE:  
 1. COMPONENTS MARKED WITH AN ASTERISK (\*) ARE CHANGED FOR 10KW OPERATION OR CHANGE WITH FREQUENCY.  
 2. COMPONENTS SHOWN WITH BROKEN LINES ARE ADDED FOR 10KW OPERATION.  
 3. UNLESS OTHERWISE INDICATED ALL RESISTANCE VALUES ARE IN OHMS AND ALL CAPACITANCE VALUES ARE IN MICROMICROFARADS.

# 21 E/M COMPLETE SCHEMATIC



