

table of contents

	<i>Page</i>
Section 1 Installation.....	1-1
1.1 Unpacking.....	1-1
1.2 Mounting, Cabling, and Adjustments.....	1-2
1.2.1 Mounting and Cabling.....	1-2
1.2.2 Adjustment.....	1-10
Section 2 Operation.....	2-1
2.1 Operation in SSB or CW Service.....	2-1
Section 3 Principles of Operation.....	3-1
3.1 General.....	3-1
3.2 Block Diagram.....	3-1
3.3 Input Circuits.....	3-1
3.4 Output Circuits.....	3-1
3.5 Power Supply Circuits.....	3-1
3.6 Protective Circuits.....	3-4
3.6.1 Safety Interlock Circuits.....	3-4
3.6.2 Time Delay and Step-Start Circuits.....	3-4
3.6.3 Thermal and Overload Circuits.....	3-4
3.6.4 Power Control Circuits.....	3-5
3.7 ALC and RF Negative Feedback Circuits.....	3-5
3.8 Tuning and Loading Meter Circuit.....	3-5
3.9 Description of Controls and Indicators.....	3-5
Section 4 Service Instructions.....	4-1
4.1 General.....	4-1
4.2 Blower Lubrication.....	4-1
4.3 Alignment of RF Input Circuits.....	4-1
4.3.1 Amateur Bands.....	4-1
4.3.2 General Coverage.....	4-2
4.4 Bias and Filament Voltage Adjustment.....	4-2
4.5 Loading Indicator Adjustment.....	4-2
4.6 Power Output Check.....	4-3
4.7 Dial Cord Replacement.....	4-3
4.8 PA Tube Replacement.....	4-3
4.9 Pilot Lamp Replacement.....	4-5
Section 5 Specifications.....	5-1
5.1 Specifications.....	5-1

table of contents (cont)

	<i>Page</i>
Section 6 Parts List.....	6-1
6.1 Introduction.....	6-1
6.1.1 General.....	6-1
6.1.2 Group Assembly Parts List.....	6-1
6.1.3 Numerical Index.....	6-1
6.1.4 Reference Designation Index.....	6-1
6.1.5 How to Use This Parts List.....	6-1
6.1.6 Manufacturer's Code, Name, and Address.....	6-2
6.1.7 Configuration Identifiers.....	6-4
6.2 Group Assembly Parts List.....	6-6
6.3 Numerical Index.....	6-28
6.4 Reference Designation Index.....	6-32
Section 7 Illustrations.....	7-1

list of illustrations

<i>Figure</i>	<i>Page</i>
1-1 30S-1 Plate Transformer Configuration and Terminal Strip Locations.....	1-3
1-2 Station Interconnections With 32S() and 75S().....	1-4
1-3 Station Interconnections With KWM-2.....	1-5
1-4 Station Interconnections With KWM-1.....	1-7
1-5 Power Supply Compartment, Parts Location and Wiring.....	1-9
1-6 Heater and Bias Adjustment Locations.....	1-10
1-7 30S-1 RF Linear Amplifier, Operating Controls.....	1-10
3-1 30S-1 Block Diagram.....	3-2
3-2 Connections for 2-Wire, 230-Volt Operations.....	3-3
3-3 Control and Interlock Circuits, Simplified Schematic Diagram.....	3-3
4-1 Input Tuned Circuit Adjustment Locations.....	4-1
4-2 2-Tone Test Setup.....	4-2
4-3 30S-1, Front Panel Lowered and Subpanel Exposed.....	4-4
4-4 Dial Cord Replacement Diagram.....	4-5
7-1 30S-1 RF Linear Amplifier, Schematic Diagram.....	7-5

list of tables

<i>Table</i>	<i>Page</i>
1-1 Equipment Furnished With 30S-1.....	1-1
2-1 Multimeter Scale Values.....	2-2
4-1 Frequency Coverage Allowable by Realignment.....	4-2