

www.orphancameras.com

This manual is for reference and historical purposes, all rights reserved.

This page is copyright© by M. Butkus, NJ.

This page may not be sold or distributed without the expressed permission of the producer

I have no connection with any camera company

On-line camera manual library

This is the full text and images from the manual. This may take 3 full minutes for the PDF file to download.


If you find this manual useful, how about a donation of \$3 to: M. Butkus, 29 Lake Ave., High Bridge, NJ 08829-1701 and send your e-mail address so I can thank you. Most other places would charge you \$7.50 for a electronic copy or \$18.00 for a hard to read Xerox copy.

This will allow me to continue to buy new manuals and pay their shipping costs.

It'll make you feel better, won't it?

**If you use Pay Pal or wish to use your credit card,
click on the secure site on my main page.**

Aperture-priority Auto Exposure

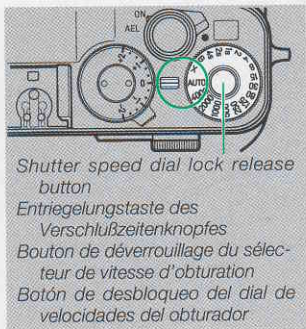

1 Set the shutter speed dial to "AUTO."

To change the mode, turn the shutter speed dial while depressing the dial lock release button.

2 Set the aperture and shoot.

If you set the aperture with the lens' aperture ring, the camera will automatically set the shutter speed suited for it. In the viewfinder, the shutter speed automatically set by the camera will turn on.

 
- Normally, set the aperture so that the shutter speed is set 1/60 sec. to 1/6000 sec.
- When the shutter speed is set to slower than 1/60 sec., it is recommended to use the flash unit. If you are not using the flash unit, mount the camera on a tripod to prevent camera shake.



*Overexposure warning
Überbelichtungswarnung
Avertissement de surexposition
Advertencia de sobreexposición*

<Overexposure Warning>

- If the exposure mark “▲” blinks, it means overexposure. Because the subject is too bright, readjust the aperture so that the “▲” mark turns off.




*Underexposure warning
Unterbelichtungswarnung
Avertissement de sous-exposition
Advertencia de subexposición*


<Underexposure Warning>

- If the exposure mark “▼” blinks, it means underexposure. Because the subject is too dark, use an additional light to brighten up the subject or change the aperture so that the “▼” mark disappears.
- Even when an over- or underexposure warning appears, you can take pictures by depressing the shutter release.

Manual Exposure

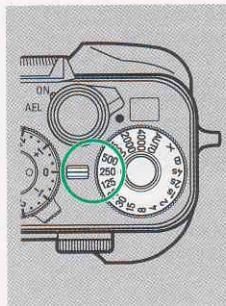

Aperture ring
Blendenring
Bague de diaphragme
Anillo de aberturas

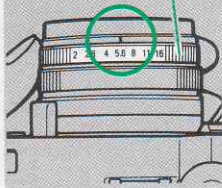

1 Turn the shutter speed dial so that the desired shutter speed comes opposite the dial index.

To change modes from aperture-priority automatic exposure ("AUTO") or "X" modes, turn the shutter speed dial while depressing the dial lock release button.

Shutter speed
Verschlußzeit
Vitesse d'obturation
Velocidad del obturador

Exposure mark
Belichtungssymbol
Marque d'exposition
Marca de la exposición



"▲": Overexposure
Überbelichtung
Surexposition
Sobrexposición



"◆": Correct exposure
richtige Belichtung
Exposition correcte
Exposición correcta



"▼": Underexposure
Unterbelichtung
Sous-exposition
Subexposición

2 Set the aperture with the lens' aperture ring and shoot.

In the viewfinder, the shutter speed selected and the exposure mark will turn on. Turn the shutter speed dial or the lens' aperture ring so that the correct exposure mark "◆" turns on.