

INDEX

- A, 24, (SYSTEM REF.)
- A+1, 24, (SYSTEM REF.)
- Absolute address, 360, (MONITOR CALLS)
- Absolute address mode, 205, 277, (MACRO)
- Absolute binary programs, 288, (MACRO)
- Absolute symbols, 695, (LINK-10)
- AC, 24, (SYSTEM REF.)
- Access block, 559, 642, (MONITOR CALLS)
- Access protection, 554, (MONITOR CALLS)
- Access time, 13, (SYSTEM REF.)
- Accumulators, 360, (MONITOR CALLS)
- Accumulators, 7, (SYSTEM REF.)
- Action switches, (LINK-10)
 - Delayed, 684, 695, 700, 708, 713, 717, 720, 726, 730, 731, 741, 743, 745, 748, 749, 755, 762, 765, 771
 - Immediate, 693, 697, 698, 703, 706, 718, 735, 739, 746, 754, 769
- ACTIVATE UO, 378, (MONITOR CALLS)
- Active search list, 562, (MONITOR CALLS)
- Active swapping list, 607, (MONITOR CALLS)
- ADD, 49, (SYSTEM REF.)
- Address assignments, 223, (MACRO)
- Address break, 102, (SYSTEM REF.)
- Addressing, 7, (SYSTEM REF.)
- Addressing by monitor, 550, (MONITOR CALLS)
- Address, (LINK-10)
 - ignoring start, 738
 - specifying start, 758
 - start, 666, 677, 689, 713, 738, 758
- Address mapping, 361, (MONITOR CALLS)
- Address mode, relocatable or absolute, 227, (MACRO)
- Addresses, symbolic, 212, (MACRO)
 - elements, 280
 - operands, 212
 - operators, 211
- ALGLIB, 740, (LINK-10)
- Algorithms, switch, 679, (LINK-10)
- Algorithms, 605, (MONITOR CALLS)
- Algorithms, 179, (SYSTEM REF.)
 - fixed point, 150
 - addition, 150
 - division, 183
 - multiplication, 181
 - subtraction, 181
- Algorithms, (Cont.)
 - floating point, 185
 - addition, 186
 - division, 188
 - double precision division, 190
 - multiplication, 188
 - scaling, 188
 - subtracting, 186
- Allocating COMMON, 692, (LINK-10)
- Allocating core, 360, 401, (MONITOR CALLS)
- Allocating disk space, 709, (LINK-10)
- Allocating patching space, 744, (LINK-10)
- Altering a monitor location, 417, (MONITOR CALLS)
- AND, 42, (SYSTEM REF.)
- ANDCA, 42, (SYSTEM REF.)
- ANDCB, 43, (SYSTEM REF.)
- ANDCM, 42, (SYSTEM REF.)
- Angle brackets (<>), 213, 261, 266, 327, (MACRO)
 - coding, 252
- AOBJN, 63, (SYSTEM REF.)
- AOBJP, 63, (SYSTEM REF.)
- AOJ, 66, (SYSTEM REF.)
- AOS, 67, (SYSTEM REF.)
- Appending a file, 586, (MONITOR CALLS)
- APR, 95, 101, 105, (SYSTEM REF.)
- APRENB UO, 373, 387, (MONITOR CALLS)
- APR trapping, 387, (MONITOR CALLS)
- AR, 6, (SYSTEM REF.)
- Area, (LINK-10)
 - COMMON, 692
 - DSK disk, 667
 - NEW disk, 667
 - OLD disk, 667
 - SYS disk, 667
 - expanding, 716
- Arithmetic operations, 219, (MACRO)
- Arithmetic shifting, 53, 163, (SYSTEM REF.)
- Arithmetic testing, 63, 163, (SYSTEM REF.)
- Arranging symbol table, 765, (LINK-10)
- ARRAY pseudo-op, 242, (MACRO)
- AS, 5, (SYSTEM REF.)
- ASCII, 6-bit, 240, (MACRO)
- ASCII, 7-bit, 240, (MACRO)
- ASCII interpretation, 268, (MACRO)
- ASCII card codes, 627, (MONITOR CALLS)
- ASCII statement, 240, (MACRO)
- ASCIIZ statement, 240, (MACRO)
- ASH, 53, (SYSTEM REF.)
- ASHC, 54, (SYSTEM REF.)
- Assembler control statements, 253, (MACRO)
- Assembler interpretation, 327, (MACRO)
- Assembler, MACRO, 205, (MACRO)

- Assembly, 900, (DDT)
 Assembly listing, 205, 283, (MACRO)
 Assigning values, 705, (LINK-10)
 Assignment delay, 652, (LINK-10)
 Assignment statements, direct, 215, (MACRO)
 Assignments, 215, (MACRO)
 Assignments, address, 223, (MACRO)
 ASUPPRESS pseudo-op, 248, (MACRO)
 ATTACH UO, 379, (MONITOR CALLS)
 @(at) character, 207, 224, (MACRO)
 Automatically, Using LINK-10, 656, 659, (LINK-10)
 Auxiliary output, 651, 654, (LINK-10)
- B** (binary radix), 218, (MACRO)
 Back Slash (\), 268, 328, (MACRO)
 /BACKSPACE, 686, 691, (LINK-10)
 Backspacing tapes, 691, (LINK-10)
 Bad address subtable, 439 (MONITOR CALLS)
 Bad allocation table, 612 (MONITOR CALLS)
 BCD (binary coded decimal) code, 639, (MONITOR CALLS)
 Binary files, 651, (LINK-10)
 Binary files, loading, 360, (MONITOR CALLS)
 Binary program output, 284, 285, (MACRO)
 Binary shifting, 221, (MACRO)
 Binary value interpretation, 903, (DDT)
 Bit assignments, in-out, 195, (SYSTEM REF.)
 Blank character, 331, (MACRO)
 Blank COMMON, 692, (LINK-10)
 Blank field, 233, (MACRO)
 BLIST, 36, (SYSTEM REF.)
 BLKI, 92, (SYSTEM REF.)
 BLKO, 92, (SYSTEM REF.)
 Block 10, 92, (SYSTEM REF.)
 Block allocation, DECTape, 540, (MONITOR CALLS)
 Block mode, 444, (MONITOR CALLS)
 BLOCK statements, 243, (MACRO)
 Block transfer, 32, (SYSTEM REF.)
 Block transfer instructions, 239, (MACRO)
 Block types, 290, 291, 292, (MACRO)
 BLT, 32, (SYSTEM REF.)
 Boolean functions, 39, 159, (SYSTEM REF.)
 BR, 7, (SYSTEM REF.)
 Brackets, angle, see angle brackets
 Breakpoints, 874, 891, 911, (DDT)
 checking status, 893, 912
 conditional, 893, 912
 proceeding from, 876, 892, 894, 912
- Breakpoints (Cont.)
 reassigning and removing, 876, 891, 912
 restrictions, 875, 892
 setting, 875, 891, 911
 type outs, 875, 907, 909
 Buffer, 466, (MONITOR CALLS)
 Buffered data mode, 465, 476, (MONITOR CALLS)
 Buffer header, 465, (MONITOR CALLS)
 Buffer initialization, 468, (MONITOR CALLS)
 Buffer ring, 467, (MONITOR CALLS)
 Buffer ring header block, 466, (MONITOR CALLS)
 Busy, 93, (SYSTEM REF.)
 Byte interrupt, 77, (SYSTEM REF.)
 Byte manipulation, 37, 160, (SYSTEM REF.)
 Byte manipulation, 237, 238, (MACRO)
 Byte pointer, 37, (SYSTEM REF.)
 Byte pointer, 225, (MACRO)
- CAI, 64, (SYSTEM REF.)
 CALL and CALLI operations, 371, (MONITOR CALLS)
 table of, 372
 CAM, 65, (SYSTEM REF.)
 Card codes, 627, (MONITOR CALLS)
 Card codes, 172, (SYSTEM REF.)
 Card punch, 494, (MONITOR CALLS)
 Card reader, 496, (MONITOR CALLS)
 Carries, 48, (SYSTEM REF.)
 Carriage return, 332, (MACRO)
 Carry 0, 77, (SYSTEM REF.)
 Carry 1, 77, (SYSTEM REF.)
 CDB constants table, 433 (MONITOR CALLS)
 CDB variables table, 434, (MONITOR CALLS)
 Central processor specification, 700, (LINK-10)
 Central processor flags, 387, (MONITOR CALLS)
 Change of unit pointer, 642, (MONITOR CALLS)
 Changing defaults, 678, 703, (LINK-10)
 Changing local radix, 235 (MACRO)
 Changing magnetic tape modes, 509, (MONITOR CALLS)
 Changing switches, (LINK-10)
 status, 684
 Changing the logical station, 412, (MONITOR CALLS)
 Channel command chaining, 611, (MONITOR CALLS)
 Channel interrupt routines, 613, (MONITOR CALLS)
 Character handling, 327, (MACRO)
 Character set, radix 50, 210, (MACRO)

- Characters, summary of special, 315 through 3-17, (MACRO)
- Checking file access, 588, (MONITOR CALLS)
- CHGPPN UVO, 378, (MONITOR CALLS)
- CHKACC UVO, 379, 588, (MONITOR CALLS)
- ↑C intercept, 389, (MONITOR CALLS)
- CLEAR, 30, (SYSTEM REF.)
- Clearing DECTapes, 774, (LINK-10)
- Clearing directory, 774, (LINK-10)
- Clearing initial symbol table, 734, (LINK-10)
- Clearing the write-protect bit, 403, (MONITOR CALLS)
- CLK, 113, (SYSTEM REF.)
- Clock, (SYSTEM REF.)
 - flag, 102
 - line frequency, 102
 - real time DK10, 113
 - operation, 116
- CLOCK function, 443, (MONITOR CALLS)
- CLOSE UVO, 371, 481, (MONITOR CALLS)
- Cluster count, 641, (MONITOR CALLS)
- Clusters, 550, 607, (MONITOR CALLS)
- COBDDT, 701 (LINK-10)
- COBOL programs, (LINK-10)
 - loading, 803, 805
- Code, (LINK-10)
 - impure, 753
 - pure, 753
 - relocatable, 651
- Colon, double (::), 246 (MACRO)
- Colon (:) as label terminator 210, 246, (MACRO)
- .COMM., 692, (LINK-10)
- Comma usage, 328, (MACRO)
- Commands, (LINK-10)
 - COMPIL-class, 656
 - DEBUG, 656, 660
 - EXECUTE, 654, 656, 660
 - GET, 654, 748
 - LOAD, 656, 659
 - R LINK, 656, 657, 675
 - RUN, 654
 - SAVE, 659, 668
 - SSAVE, 659, 668
 - START, 654, 659
- Command file, 404 (MONITOR CALLS)
- Command format, (LINK-10)
 - COMPIL-class, 660
- Command strings, 676, 681, (LINK-10)
- Comment, 208, 213, (MACRO)
- Comments, 675 (LINK-10)
- COMMENT statement, 251, (MACRO)
- /COMMON, 686, 692, (LINK-10)
- COMMON, (LINK-10)
 - allocating, 692
 - blank, 692
- COMMON area, 692, (LINK-10)
- COMMON symbols, 695, (LINK-10)
- Comparing files, (UTILITY)
 - FILCOM, 931
- Comparison of disk-like devices, 637, (MONITOR CALLS)
- COMPIL program, 656, (LINK-10)
- /COMPIL switch, 257, (MACRO)
- COMPIL switches, 662, 664, (LINK-10)
- COMPIL-class command, 656, (LINK-10)
 - format, 660
- Complement, 8, (SYSTEM REF.)
- Compressed file pointer, 552, (MONITOR CALLS)
- Concatenation, 263, 329, (MACRO)
- Conditional assembly, 252, (MACRO)
- Conditional break instruction, 894, 912, (DDT)
- Conditions in, 93, (SYSTEM REF.)
 - see status
- Conditions out, 93, (SYSTEM REF.)
 - clock, 114
 - interrupt, 98
 - processor, 98
- Configuration information, (MONITOR CALLS)
 - LIGHTS, 442
 - SWITCH, 442
- Configuration table, 423, (MONITOR CALLS)
- CONI, 89, (SYSTEM REF.)
- CONO, 90, (SYSTEM REF.)
- CONSO, 92, (SYSTEM REF.)
- Console, 95, (SYSTEM REF.)
- Console operator panel, 106, (SYSTEM REF.)
- Constants table, 433, (MONITOR CALLS)
- CONSZ, 91, (SYSTEM REF.)
- /CONTENTS, 687, 694, (LINK-10)
- Contents of map file, 694, (LINK-10)
- Continuation lines, 675, 681, (LINK-10)
 - Continued MFD, 551, (MONITOR CALLS)
 - Continued SFD, 552, (MONITOR CALLS)
 - Continued UFD, 552, (MONITOR CALLS)
- Control left arrow (CTRL←), 209 (MACRO)
- /CORE, 687, 697, (LINK-10)
- Core, (LINK-10)
 - free, 716
- Core allocation resource, 397, (MONITOR CALLS)
- Core allocation unit, 360, (MONITOR CALLS)
- Core control, 393, (MONITOR CALLS)
 - CORE, 401
 - definitions, 393
 - LOCK, 394
 - SETUWP, 403
 - UNLOK., 397
- Core image, 654, 659, 668, 750, 757, (LINK-10)
- Core image file, (LINK-10)
 - expanded, 690, 772
- Core memory, 652, (LINK-10)

- Core storage, 360, (MONITOR CALLS)
- CORE UO, 372, 401, (MONITOR CALLS)
- CORMAX, 394, (MONITOR CALLS)
- CORMAX, 716, (LINK-10)
- CORMIN, 393, (MONITOR CALLS)
- /COUNTER, 687, 698, (LINK-10)
- Counters, Relocation, 686, 689, 698, 754, (LINK-10)
- CPA, 101, (SYSTEM REF.)
- /CPU, 687, 700, (LINK-10)
- Created symbols, 262, (MACRO)
- Creating a file, 563, (MONITOR CALLS)
- Creating a saved file, 805, (LINK-10)
- Creating XPN file, 772, (LINK-10)
- CREF command, 928, (UTILITY)
- CREF program, 925, (UTILITY)
- Cross-referenced listings (UTILITY)
 - CREF, 925
 - GLOB, 951
- CTLJOB UO, 378, 520, (MONITOR CALLS)

- D (decimal radix), 218, (MACRO)
- /D, 687, (LINK-10)
- DAEFIN UO, 379, (MONITOR CALLS)
- DAEMON UO, 379, 442, (MONITOR CALLS)
- /DATA, 687, (LINK-10)
- Data channel, 463, (MONITOR CALLS)
- Data error, 612, (MONITOR CALLS)
- DATAI, 91, (SYSTEM REF.)
- DATAO, 91, (SYSTEM REF.)
- Data modes, 464, (MONITOR CALLS)
 - card punch, 494
 - card reader, 497
 - DEctape, 536
 - disk, 549
 - display, 499
 - line printer, 502
 - magnetic tape, 503
 - paper-tape punch, 512
 - paper-tape reader, 513
 - plotter, 515
 - terminal, 522
- Data transmission, 474, (MONITOR CALLS)
- DATE UO, 373, 415, (MONITOR CALLS)
- .DCORE function, 442, (MONITOR CALLS)
- DDT, 660, 664, 701, (LINK-10)
- /DDT, 664, (LINK-10)
- DDTGT UO, 372, (MONITOR CALLS)
- DDTIN UO, 372, 525, (MONITOR CALLS)
- DDTOUT UO, 372, 525, (MONITOR CALLS)
- DDTRL UO, 372, (MONITOR CALLS)
- DDT submode, 524, (MONITOR CALLS)
- DEACTIVATE UO, 378, (MONITOR CALLS)
- Dead reckoning, 548, (MONITOR CALLS)
- /DEBUG, 684, 687, 701, (LINK-10)
- DEBUG command, 656, 660, (LINK-10)
- Debugging, 654, 722, 723, 727, (LINK-10)
- Debugging program, 660, 686, 690, (LINK-10)
 - loading a, 701, 766
- DEC statement, 234, (MACRO)
- Decimal numbers, (MACRO)
 - fixed point, 222
 - floating point, 222
- Decimal print routine, 87, (SYSTEM REF.)
- DECsystem-1040, 368, (MONITOR CALLS)
- DEctape, 536, (MONITOR CALLS)
 - block allocation, 540
 - directory format, 537
 - file format, 539
 - format, 536
 - I/O programming, 540
- DEctape compatibility, 621, (MONITOR CALLS)
- DEctapes, clearing, 774, (LINK-10)
- DEC-029 card codes, 624, (MONITOR CALLS)
- DEC-026 card codes, 630 (MONITOR CALLS)
- /Default, 678, 687, 703, (LINK-10)
- Default values, (LINK-10)
 - initial, 677, 678, 686
- Defaults, (LINK-10)
 - changing, 678, 703
 - input, 677
 - output, 677
- /DEFINE, 687, 705 (LINK-10)
- Defined operator, 214, (MACRO)
- DEFINE operator, 259, (MACRO)
- Defining save file, 757, (LINK-10)
- Defining symbol file, 759, (LINK-10)
- Definition of macros, 259, (MACRO)
- Delay, (LINK-10)
 - assignment, 652
- Delayed action switches, 684, 695, 700, 708, 713, 717, 720, 726, 730, 731, 741, 743, 745, 748, 749, 755, 762, 765, 771, (LINK-10)
- Deleted symbols, 217, (MACRO)
- Delimiter, 663, (LINK-10)
- Delimiters, (MACRO)
 - =:, 216
 - parentheses, 237
- DEPHASE statement, 229, (MACRO)
- Determining buffer sizes, 490 (MONITOR CALLS)
- Determining properties of devices, 489, (MONITOR CALLS)
- Determining two-segment capability, 403, (MONITOR CALLS)

- DEVCHR UOU, 372, 488, (MONITOR CALLS)
- DEVTYP UOU, 378, (MONITOR CALLS)
- Device errors, 388, 586, (MONITOR CALLS)
- Device information, 487, (MONITOR CALLS)
 - DEVCHR, 488
 - DEVNAM, 491
 - DEVSIZ, 490
 - DEVSTS, 487
 - DEVTYP, 489
 - WHERE, 491
- Device initialization, 463, (MONITOR CALLS)
- Device name, 660, 677, (LINK-10)
- Device name, 463, (MONITOR CALLS)
- Device optimization, 609, (MONITOR CALLS)
- Device reassignment, 483, (MONITOR CALLS)
- Devices, 493, 535, (MONITOR CALLS)
 - card punch, 494
 - card reader, 496
 - DEctape, 536
 - disk, 549
 - display, 499
 - line printer, 502
 - magnetic tape, 503
 - paper-tape punch, 512
 - paper-tape reader, 513
 - plotter, 515
 - pseudo-TTY, 516
 - terminal, 521
- Device selection, 462, (MONITOR CALLS)
- Device status bits, 631, (MONITOR CALLS)
- Device switches, 680, 691, 733, 747, 756, 768, (LINK-10)
- Device termination, 483, (MONITOR CALLS)
- DEVLNM UOU, 380, 484, (MONITOR CALLS)
- DEVNAM UOU, 378, 491, (MONITOR CALLS)
- DEVPPN UOU, 377, 593, (MONITOR CALLS)
- DEVSIZ UOU, 379, 490, (MONITOR CALLS)
- DEVSTS UOU, 377, 487, (MONITOR CALLS)
- DEVTYP UOU, 377, 489, (MONITOR CALLS)
- DFN, 59, (SYSTEM REF.)
- Diagnostic messages (UTILITY)
 - CREF, 929
 - FILCOM, 935
 - FUDGE2, 946
 - GLOB, 953
- Differences, (LINK-10)
 - LOADER and LINK-10, 843
- Direct addressing, 11, (SYSTEM REF.)
- Directory algorithms, 613, (MONITOR CALLS)
- Direct assignment statements, 215, (MACRO)
- Directly, (LINK-10)
 - using LINK-10, 657, 675
- Directory, 660, 677, (LINK-10)
 - clearing, 774
- Directory devices, 463, 535, (MONITOR CALLS)
- Directory path, 552, 577, 580, (MONITOR CALLS)
- Disk, 549, (MONITOR CALLS)
 - access protection, 554
 - file directories, 551
 - file structure names, 560
 - job search list, 562
 - packs, 602
 - quotas, 559
 - status, 601
 - structure of files, 549
 - user programming, 563
 - UOUs, 577
- Disk area, (LINK-10)
 - DSK, 667
 - NEW, 667
 - OLD, 677
 - SYS, 667
- Disk file organization, 551, 553, (MONITOR CALLS)
- Disk overflow, 729 (LINK-10)
- Disk packs, 602, (MONITOR CALLS)
- Disk parameters, 429, (MONITOR CALLS)
- Disk priority, 599, (MONITOR CALLS)
- Disk quotas, 391, 412, 559, (MONITOR CALLS)
- Disk space, (LINK-10)
 - allocating, 709
- Disk unit offline, 390, (MONITOR CALLS)
- DISK.UOU, 381, 599, (MONITOR CALLS)
- Disk writing, types of, 563, (MONITOR CALLS)
- Dismissing an interrupt, 97, (SYSTEM REF.)
- Dismissing a real-time interrupt, 449, (MONITOR CALLS)
- Display, 499, (MONITOR CALLS)
- DIV, 51, (SYSTEM REF.)
- DK10, 113, (SYSTEM REF.)
- Done, 93, (SYSTEM REF.)
- Dormant segment, 607, (MONITOR CALLS)
- Double colon (::), 246, (MACRO)
- Double equal sign ==, 217, (MACRO)
- Double pound sign (##), 247, (MACRO)
- Double precision floating point, 89, (SYSTEM REF.)
- DPB, 38, (SYSTEM REF.)
- DS, 5, (SYSTEM REF.)
- DSK disk area, 667, (LINK-10)
- DSKCHR UOU, 376, 597, (MONITOR CALLS)
- Dump mode, 464, 475, (MONITOR CALLS)

- Dummy symbols, 264, (MACRO)
 DVRST.UUO, 381, (MONITOR CALLS)
 DVURS.UUO, 381, (MONITOR CALLS)
- E, 11, 23, (SYSTEM REF.)
 /E, 687, (LINK-10)
 Effective address calculation, 11,
 (SYSTEM REF.)
 End block type 5, 287, (MACRO)
 END statements, 243, 290, (MACRO)
 End-of-file card, 494, 497, (MONITOR
 CALLS)
 ENTER, 371, 471, (MONITOR CALLS)
 DEctape, 542
 disk, 565, 571
 error codes, 635
 /ENTRY, 687, 706, (LINK-10)
 Entry block type 4, 287, (MACRO)
 Entry name symbols, 695, (LINK-10)
 Entry points, 706, 713, 746,
 (LINK-10)
 ENTRY statement, 706, (LINK-10)
 ENTRY statement, 247, (MACRO)
 Entry symbols, 667, (LINK-10)
 Environmental information, 414,
 (MONITOR CALLS)
 configuration, 442
 job status, 416
 monitor, 416
 timing, 414
 EOF, magnetic tape, 503, 504,
 (MONITOR CALLS)
 Equal signs == (double), 217,
 (MACRO)
 EQV, 45, (SYSTEM REF.)
 Error codes, 635, (MONITOR CALLS)
 naming conventions, 384
 Error code printing, 284, (MACRO)
 Error codes, single-letter, 269
 through 274, (MACRO)
 Error intercepting, 388, (MONITOR
 CALLS)
 /ERRORLEVEL, 687, 708, 775,
 (LINK-10)
 Error messages, 275 through 281,
 (MACRO)
 Error messages, 877, 886, (DDT)
 Error messages, (UTILITY)
 CREF, 929
 FILCOM, 935
 FUDGE2, 946
 GLOB, 953
 Error recovery, RUN, 405, (MONITOR
 CALLS)
 Errors, total number, 284, (MACRO)
 Ersatz devices, 593, (MONITOR CALLS)
 /ESTIMATE, 687, 709, (LINK-10)
 Evaluation of expression, 214, 219,
 (MACRO)
- Evaluation of statement, 214, (MACRO)
 Examining storage words, 871, 879,
 908, (DDT)
 Examining the monitor, 416, (MONITOR
 CALLS)
 Examples, 669, 803, (LINK-10)
 Examples (MONITOR CALLS)
 ↑C intercept, 389, 390
 device initialization, 473
 dump output, 475
 expanding core, 403
 file reading, 485, 486
 file writing, 485, 486
 GETTAB subtables, 436
 inputting one character, 476
 outputting one character, 478
 paper-tape input, 534
 pointer list, display, 500
 reading search list, 591
 reading UFD, 595
 real-time trapping, 449, 454
 SFD's, 581
 terminating a file, 483
 testing high segments, 409
 TRPSET, 456
 user generated buffers, 469
 writing reentrant programs, 623
 Examples, (UTILITIES)
 FILCOM, 937
 FUDGE2, 949
 GLOB, 954
 Excess-128 code, 9, (SYSTEM REF.)
 EXCH, 31, (SYSTEM REF.)
 Exceeded time limit, 391, (MONITOR
 CALLS)
 /EXCLUDE, 687, 711, (LINK-10)
 Exec mode program, 734, (LINK-10)
 Executable version, 651, 653, 654,
 (LINK-10)
 /EXECUTE, 687, 713, (LINK-10)
 EXECUTE command, 654, 656, 660,
 (LINK-10)
 Execution, (LINK-10)
 specifying, 701, 713, 718, 766
 Execution control, 385, (MONITOR CALLS)
 starting, 385
 stopping, 385
 suspending, 391
 trapping, 387
 Executive mode, 368, (MONITOR CALLS)
 Executive mode debugging, (EDDT), 915,
 (DDT)
 Executive mode trapping, RTTRP, 453
 Exhausted disk quota, 391, 412,
 (MONITOR CALLS)
 Exit condition switch, 676, (LINK-10)
 EXIT UUO, 373, 386, (MONITOR CALLS)
 Expanded core image file, 690, 772,
 (LINK-10)
 Expanding areas, 716, (LINK-10)
 Expanding core, 402 (MONITOR CALLS)

- Experimental SYS, 579, (MONITOR CALLS)
- Expressions, 874, (DDT)
- Expressions, 207, (MACRO)
 - evaluation of, 214, 219
 - nesting of, 220
- Expression evaluation, 902, (DDT)
- Expressions, nesting of, 220, (MACRO)
 - literals, 225
 - macros, 265
- Extended arguments for LOOKUP,ENTER, RENAME, 571, (MONITOR CALLS)
- Extended instruction statements, 256, (MACRO)
- Extended RIB's 585, (MONITOR CALLS)
- Extension, (LINK-10)
 - filename, 660, 677
- EXTERN statement, 246, (MACRO)
- External symbols, 692, (LINK-10)

- F (fixed point decimal fractions), 218, (MACRO)
- FAD, 60, (SYSTEM REF.)
- FADR, 57, (SYSTEM REF.)
- Fast block mode, 444, (MONITOR CALLS)
- Fast memory, 7, (SYSTEM REF.)
- Fatality of messages, (LINK-10)
 - specifying, 755
- FDV, 62, (SYSTEM REF.)
- FDVR, 58, (SYSTEM REF.)
- Feature table, 439, (MONITOR CALLS)
- Feature test switches, 368, 439, (MONITOR CALLS)
- Fields, 214, (MACRO)
 - blank, 253
- Field separators, 901, 911, (DDT)
- FILCOM program, 931, (UTILITY)
- File, (LINK-10)
 - creating a saved, 805
 - creating XPN, 772
 - defining save, 757
 - defining symbol, 759
 - expanded core image, 690, 772
 - log, 683, 688, 723, 725
 - map, 688, 727, 731
 - save, 689, 750, 757
 - saving XPN, 772
 - specifying log, 723
 - specifying map, 727
 - symbol, 689, 690, 759
 - XPN, 772
- File dependent switches, 681, 712, 721, 722, 736, 737, 738, 752, 753, 758
- File directories, 551 (MONITOR CALLS)
- File format, (MONITOR CALLS)
 - DECTape, 539
 - disk, 554
- Filename, 660, 677, (LINK-10)
- Filename extension, 660, 677, (LINK-10)

- File reading, example, 485, (MONITOR CALLS)
- File retrieval pointers, 641, (MONITOR CALLS)
- Files, (LINK-10)
 - binary, 651
 - output, 677, 679, 682, 703, 718
- Files, 461, 552, (MONITOR CALLS)
- File selection, 470, (MONITOR CALLS)
- File specification, 660, 676, 703, (LINK-10)
- File specification switches, (LINK-10)
 - implicit, 702, 714, 715, 764, 766
- File status, 464, 479, (MONITOR CALLS)
 - card punch, 496
 - card reader, 498
 - DECTape, 547
 - disk, 601
 - display, 501
 - line printer, 502
 - magnetic tape, 511
 - paper-tape punch, 513
 - paper-tape reader, 514
 - plotter, 516
 - pseudo-TTY, 518
 - terminal, 533
- File status checking, 480, (MONITOR CALLS)
- File status setting, 480, (MONITOR CALLS)
- File structure names, 560, (MONITOR CALLS)
- File termination, 481, (MONITOR CALLS)
- File writing, example, 485, (MONITOR CALLS)
- FILSER, 549, 609, (MONITOR CALLS)
- Fixed point arithmetic, 48, 160, (SYSTEM REF.)
- Fixed point decimal numbers, 222, (MACRO)
- Fixed point numbers, 8, (SYSTEM REF.)
 - double length, 48
- Flag restoration, 81, (SYSTEM REF.)
- Flags, 76, (SYSTEM REF.)
- Floating overflow, 77, 102, (SYSTEM REF.)
- Floating point arithmetic, 54, 160, (SYSTEM REF.)
- Floating point decimal numbers, 222, (MACRO)
- Floating point numbers, 9, (SYSTEM REF.)
 - double length, 10
 - double precision, 89
- FMP, 62, (SYSTEM REF.)
- FMPR, 58, (SYSTEM REF.)
- Folded checksum, 641, (MONITOR CALLS)
- FORLIB, 740, (LINK-10)
- Format, (LINK-10)
 - COMPIL-class command, 660
 - triplet, 759

- Formats, 193, (SYSTEM REF.)
- Format for macro calls, 261, (MACRO)
- Format of instruction word, 206, (MACRO)
- Format, primary instruction, 207, (MACRO)
- /FOROTS, 664, 688, 714, (LINK-10)
- FOROTS, (LINK-10)
 - loading, 714
- /FORSE, 664, 688, 715, (LINK-10)
- FORSE, (LINK-10)
 - loading, 715
- Forward tapes, (LINK-10)
 - spacing, 756
- FRCUO UO, 379, (MONITOR CALLS)
- FRECHN UO, 377, (MONITOR CALLS)
- /FRECOR, 688, 716, (LINK-10)
- Free core, 716, (LINK-10)
- FSB, 61, (SYSTEM REF.)
- FSBR, 57, (SYSTEM REF.)
- FSC, 56, (SYSTEM REF.)
- FUDGE2 program, 737, (UTILITY)
- Full file structure, 391, 412, (MONITOR CALLS)
- Full word data transmission, 31, 161, (SYSTEM REF.)
- FUNCTION statement, 706, (LINK-10)
- Functions, (LINK-10)
 - performing magnetic tape, 732

- /G, 688, (LINK-10)
- General form of statements, 206, (MACRO)
- GET command, 654, 748, (LINK-10)
- GETCHR UO, 372, (MONITOR CALLS)
- GETLIN UO, 374, 529, (MONITOR CALLS)
- GETPPN UO, 374, 416, (MONITOR CALLS)
- GETSEG UO, 375, 407, (MONITOR CALLS)
- GETSTS UO, 370, 480, (MONITOR CALLS)
- GETTAB tables, 419, (MONITOR CALLS)
 - .GTADR, 419
 - .GTCM2, 421
 - .GTCNF, 419, 423
 - .GTCNO, 420
 - .GTCOM, 420
 - .GTCOR, 420
 - .GTCRS, 421
 - .GTCØC, 422, 433
 - .GTC2C, 422
 - .GTC3C, 422
 - .GTC4C, 422
 - .GTC5C, 422
 - .GTCØV, 422, 434
 - .GTC1V, 422
 - .GTC2V, 422
 - .GTC3V, 422
 - .GTC4V, 422
 - .GTC5V, 422
 - .GTDBS, 420
 - .GTDEV, 420
- .GTFET, 422, 439
- .GTISC, 421
- .GTKCT, 419
- .GTLDV, 419, 429
- .GTLIM, 421
- .GTLOC, 420
- .GTNML, 420
- .GTNM2, 420
- .GTNSW, 419, 427
- .GTODP, 419, 429
- .GTOSC, 421
- .GTPPN, 419
- .GTPRG, 419
- .GTPRV, 419, 423
- .GTQJB, 421
- .GTQQQ, 421
- .GTRCT, 420
- .GTRSP, 421
- .GTRTD, 420
- .GTSDD, 419, 429
- .GTSGN, 419
- .GTSLF, 420, 431
- .GTSPL, 420, 432
- .GTSPS, 422
- .GTSSC, 421
- .GTSTS, 419
- .GTSWP, 419
- .GTSYS, 421
- .GTTDB, 420
- .GTTIM, 419
- .GTTMP, 420
- .GTTRO, 421
- .GTTTY, 419
- .GTWCH, 420, 432
- .GTWCT, 420
- .GTWHY, 421
- .GTWSN, 420, 431
 - naming of, 383
 - subtables, 436
- GETTAB UO, 375, 417, (MONITOR CALLS)
- GLOB program, 951, (UTILITY)
- Global requests, 667, 746, (LINK-10)
 - undefined, 752, 763, 767
- Global symbol table, 688, (LINK-10)
 - initial, 734
- Global symbols, 694, 695, 769, (LINK-10)
 - typing in, 769
 - undefined, 705
- Global symbols, listing of, 951, (GLOB)
- Global symbols, 216, (MACRO)
- Globals, (LINK-10)
 - typing undefined, 767
- /GO, 688, 718, (LINK-10)
- GOBSTR UO, 378, 591, (MONITOR CALLS)
- Group pointer, 641, (MONITOR CALLS)
- Guidelines for locking jobs, 396, (MONITOR CALLS)

- Half word data transmission, 24,
161, (SYSTEM REF.)
- HALT, 386, (MONITOR CALLS)
- HALT, 81, (SYSTEM REF.)
- Hard error, 612, (MONITOR CALLS)
- Hardware detected errors, 612,
(MONITOR CALLS)
- Hash table, 719, (LINK-10)
- /HASHSIZE, 688, 719, (LINK-10)
- Hashsize, (LINK-10)
recommended, 719
- Header card, 494, 496, (MONITOR
CALLS)
- Hardware read-in format, 288,
(MACRO)
- HIBER UO, 378, 391, 517,
(MONITOR CALLS)
- .HIGH., 698, 754, (LINK-10)
- High priority queues, 457,
(MONITOR CALLS)
- High segment table, 419, (MONITOR
CALLS)
- HISEG pseudo-op, 232, (MACRO)
- HLL, 25, (SYSTEM REF.)
- HLLC, 26, (SYSTEM REF.)
- HLLD, 26, (SYSTEM REF.)
- HLLZ, 25, (SYSTEM REF.)
- HLR, 29, (SYSTEM REF.)
- HLRE, 30, (SYSTEM REF.)
- HLRO, 30, (SYSTEM REF.)
- HLRZ, 30, (SYSTEM REF.)
- HPQ UO, 378, 457, (MONITOR CALLS)
- HRL, 26, (SYSTEM REF.)
- HRLE, 27, (SYSTEM REF.)
- HRLO, 27, (SYSTEM REF.)
- HRLZ, 27, (SYSTEM REF.)
- HRR, 28, (SYSTEM REF.)
- HRRE, 29, (SYSTEM REF.)
- HRRO, 29, (SYSTEM REF.)
- HRRZ, 28, (SYSTEM REF.)
- Hyphen, 675, (LINK-10)
- I, 11, (SYSTEM REF.)
- IBP, 38, (SYSTEM REF.)
- IBUF, 465, (MONITOR CALLS)
- IDIV, 51, (SYSTEM REF.)
- Idle segment, 607, (MONITOR CALLS)
- IDPB, 38, (SYSTEM REF.)
- IF statement, 252, 253, (MACRO)
- Ignoring start address, 738,
(LINK-10)
- ILDB, 38, (SYSTEM REF.)
- Illegal instructions, 385, (MONITOR
CALLS)
- Illegal operation codes, 383,
(MONITOR CALLS)
- Image, (LINK-10)
core, 659, 668, 750, 757
- Image file, (LINK-10)
expanded core, 690, 772
- Immediate action switches, 693, 697,
698, 703, 718, 735, 739, 746,
754, 769, (LINK-10)
- Implicit file specifications switches,
684, 702, 714, 715, 764, 766,
(LINK-10)
- Impure code, 753, (LINK-10)
- Impure segment, 359, (MONITOR CALLS)
- IMUL, 50, (SYSTEM REF.)
- INBUF UO, 370, 468, (MONITOR CALLS)
- /INCLUDE, 688, 721, (LINK-10)
- Index registers, 7, (SYSTEM REF.)
- Indexing, 207, 244, (MACRO)
- Indicator panels, 182, (SYSTEM REF.)
- Indicators, 106, (SYSTEM REF.)
- Indirect addressing, 11, (SYSTEM REF.)
- Indirect addressing, 224, (MACRO)
- Inhibiting loading of modules, 711,
(LINK-10)
- Inhibiting searching, 740, (LINK-10)
- Initial conditions, 93, (SYSTEM REF.)
- Initial default values, 677, 678, 686,
(LINK-10)
- Initial file status, 464, (MONITOR
CALLS)
- Initial global symbol table, 734,
(LINK-10)
- Initial low segment size, 697, (LINK-10)
- Initial symbol table, (LINK-10)
clearing, 734
size, 719
- Initialization of LINK-10, 656 (LINK-10)
- Initializing devices, 464, (MONITOR
CALLS)
- Initializing the high segment, 407,
(MONITOR CALLS)
- INIT UO, 369, 463, (MONITOR CALLS)
- In-out, 82, 163, (SYSTEM REF.)
- In-out bit assignments, 180, (SYSTEM
REF.)
- In-out devices, 156, 180, (SYSTEM REF.)
- Input, buffered, 476, (MONITOR CALLS)
- Input defaults, 677, (LINK-10)
- Input specifications, 676, 703,
(LINK-10)
- Input-output, 82, 163, (SYSTEM REF.)
- Input spooling, 604, (MONITOR CALLS)
- Input to LINK-10, 651, (LINK-10)
- Input UO, 370, 474, (MONITOR CALLS)
- Instruction format, 10, (SYSTEM REF.)
- Instruction times, 23, (SYSTEM REF.)
- Instruction word format, 206, (MACRO)
- Instructions, 157, (SYSTEM REF.)
arithmetic testing, 63, 163
Boolean functions, 40, 159
byte, 38, 160
fixed point, 49, 160
floating point, 56, 160
without rounding, 59
with rounding, 57
full word, 31, 161
half word, 25, 161

- Instructions (Cont.)
 in-out, 90, 163
 jump, 78, 163
 logic, 40, 159
 logical testing, 70, 165
 move, 33, 161
 pushdown, 35, 84, 163
 rotate, 47, 163
 shift, 47, 53, 163
 INTEGER pseudo-op, 242, (MACRO)
 Interactive options, 656, 683,
 (LINK-10)
 Intercept, ↑C, 389, (MONITOR CALLS)
 Internal request, block type 10,
 288, (MACRO)
 Internal symbols, 692, (LINK-10)
 INTERN statement, 247, (MACRO)
 Inter-program communication, 412,
 (MONITOR CALLS)
 Interrupt, 95, (SYSTEM REF.)
 Interrupt chains, 614, (MONITOR
 CALLS)
 Interrupt level use of RTTRP, 447,
 (MONITOR CALLS)
 Interrupt requests, 96, (SYSTEM REF.)
 Introduction to LINK-10, 651,
 (LINK-10)
 IO, 82, (SYSTEM REF.)
 I/O error messages, 278, (MACRO)
 I/O monitor facilities, 209, (MACRO)
 I/O organization, 461, (MONITOR
 CALLS)
 I/O programming, 461, (MONITOR CALLS)
 DECTape, 540
 disk, 563
 I/O transfer words, 239, (MACRO)
 IOR, 43, (SYSTEM REF.)
 IOWD, 475 (MONITOR CALLS)
 IOWD statement, 239, (MACRO)
 IR, 6, (SYSTEM REF.)
 Item types, (LINK-10)
 LINK, 815

 JACCT bit, 404, (MONITOR CALLS)
 .JB41, 362, (MONITOR CALLS)
 .JBAPR, 363, (MONITOR CALLS)
 .JBBLT, 362, (MONITOR CALLS)
 .JBCN6, 362, (MONITOR CALLS)
 .JBCHN, 364, (MONITOR CALLS)
 .JBCNI, 363, (MONITOR CALLS)
 .JBCOR, 364, (MONITOR CALLS)
 .JBCST, 364, (MONITOR CALLS)
 .JBDA, 364, (MONITOR CALLS)
 .JBDDT, 362, (MONITOR CALLS)
 .JBERR, 362, (MONITOR CALLS)
 .JBFF, 363, (MONITOR CALLS)
 .JBH41, 365, (MONITOR CALLS)
 .JBHCR, 365, (MONITOR CALLS)
 .JBHDA, 365, (MONITOR CALLS)
 .JBHNM, 365, (MONITOR CALLS)
 .JBHRL, 362, (MONITOR CALLS)
 .JBHRN, 365, (MONITOR CALLS)

 .JBHSA, 365, (MONITOR CALLS)
 .JBHSM, 365, (MONITOR CALLS)
 .JBHVR, 365, (MONITOR CALLS)
 .JBINT, 364, 388, (MONITOR CALLS)
 .JBOPC, 363, (MONITOR CALLS)
 .JBOPS, 364, (MONITOR CALLS)
 .JBPFI, 362, (MONITOR CALLS)
 .JBREL, 362, (MONITOR CALLS)
 .JBREN, 363, (MONITOR CALLS)
 .JBSA, 363, (MONITOR CALLS)
 .JBSET.UUO, 380, (MONITOR CALLS)
 .JBSYM, 363, (MONITOR CALLS)
 .JBTPC, 363, (MONITOR CALLS)
 .JBUSY, 363, (MONITOR CALLS)
 .JBUUO, 362, (MONITOR CALLS)
 .JBVER, 364, (MONITOR CALLS)
 JCRY, 79, (SYSTEM REF.)
 JCRYO, 79, (SYSTEM REF.)
 JCRY1, 79, (SYSTEM REF.)
 JEN, 81, (SYSTEM REF.)
 JFCL, 79, (SYSTEM REF.)
 JFFO, 78, (SYSTEM REF.)
 JFOV, 79, (SYSTEM REF.)
 Jiffy, 415, 419, (MONITOR CALLS)
 JLOG bit, 404, (MONITOR CALLS)
 Job, 605, (MONITOR CALLS)
 JOBDAT, 360, 362, (MONITOR CALLS)
 Job data area, 360, 362, (MONITOR
 CALLS)
 vestigial, 365
 JOBDAT, 722, (LINK-10)
 Job's current name, 668, (LINK-10)
 Job I/O initialization, 461, (MONITOR
 CALLS)
 JOBPEK UUO, 379, (MONITOR CALLS)
 Job privilege table, 423, (MONITOR
 CALLS)
 Job search list, 562, (MONITOR CALLS)
 Job state codes, 431, (MONITOR CALLS)
 Job status information, (MONITOR CALLS)
 GETPPN, 416
 OTHUSR, 416
 PJOB, 416
 RUNTIME, 416
 JOBSTR UUO, 376, 590, (MONITOR CALLS)
 JOBSTS UUO, 377, 519, (MONITOR CALLS)
 JOV, 79, (SYSTEM REF.)
 JRA, 83, (SYSTEM REF.)
 JRST, 80, (SYSTEM REF.)
 JRST 4, 386, (MONITOR CALLS)
 JRSTF, 81, (SYSTEM REF.)
 JSA, 83, (SYSTEM REF.)
 JSP, 80, (SYSTEM REF.)
 JSR, 79, (SYSTEM REF.)
 JUMP, 65, (SYSTEM REF.)

 Key, (LINK-10)
 RETURN, 675
 Keys, 109, (SYSTEM REF.)
 KT10 Option, 360, (MONITOR CALLS)

/L, 688, (LINK-10)
 †L (qualifier), 218, (MACRO)
 Label field, 214, (MACRO)
 Label of statement, 206, (MACRO)
 Labels, 209, 210, 215, (MACRO)
 LALL statement, 250, (MACRO)
 Language, MACRO-10 statements, 206, (MACRO)
 Latency time, 609, (MONITOR CALLS)
 LDB, 38, (SYSTEM REF.)
 Left arrow shifting, 222, (MACRO)
 Level, (LINK-10)
 message, 708, 775
 severity, 755, 776
 LIB40, 740, (LINK-10)
 LIBOL, 740, (LINK-10)
 Library, (LINK-10)
 modules, 653
 search, 653, 666, 763
 search mode, 666, 688, 689, 737, 752
 search symbols, 686, 706, 746
 suppression of search mode, 737
 system, 653, 666, 667, 689, 690, 740, 752, 763
 system search, 718
 user, 667
 /LIBRARY, 665, (LINK-10)
 Library subroutines, 248, (MACRO)
 LIGHTS UO, 372, 442, (MONITOR CALLS)
 Line of program, 213, (MACRO)
 Line printer, 502, (MONITOR CALLS)
 Line printer listings, 250, (MACRO)
 Lines, (LINK-10)
 continuation, 675, 681
 LINK block, 257, (MACRO)
 formats, 284, 285
 /LINK, 665, (LINK-10)
 LINK item types, 815, (LINK-10)
 LINK-10, (LINK-10)
 command strings, 676
 differences between LOADER and, 843
 initialization of, 656
 input to, 651
 introduction to, 651
 loading, 806
 messages, 775
 message suppression, 708, 725
 output from, 653
 switch algorithms, 679
 switches, 663, 685, 686, 691
 Linking loader, 284, (MACRO)
 Linking modules, 652, (LINK-10)
 Linking subroutines, 246, (MACRO)
 Linking symbols, 653, (MACRO)
 List, (LINK-10)
 search, 667
 LIST statement, 250, (MACRO)
 Listing control statements, 250, (MACRO)
 Listing relocation counters, 698, (LINK-10)
 Literals, 255, (MACRO)
 nested, 255

LIT statements, 244, (MACRO)
 /LMAP, 665, (LINK-10)
 LOAD command, 656, 659, (LINK-10)
 LOADER and LINK-10, (LINK-10)
 differences, 843
 LOADER switches, 663, 846, (LINK-10)
 Loading, 806, (LINK-10)
 COBOL programs, 803, 805
 debugging program, 701, 766
 FOROTS, 714
 FORSE, 715
 inhibition of module loading, 711
 local symbols, 722
 MACRO programs, 804
 monitor, 811
 object time system, 742
 specified modules, 721
 symbols, 761
 termination, 718
 Loading (MONITOR CALLS)
 binary files, 360
 core area, 360
 Loading procedure, 869, 920, (DDT)
 Local symbol mode, 701, (LINK-10)
 Local symbols, 665, 688, 695, 701, 736, 759
 loading, 722
 Local symbols, 216, (MACRO)
 /LOCALS, 688, 722, (LINK-10)
 LOCATE UO, 378, 412, (MONITOR CALLS)
 Location counter, 224, (MACRO)
 LOC pseudo-op, 227, (MACRO)
 Lock UO, 377, 394, (MONITOR CALLS)
 Locking jobs, 394, 398, (MONITOR CALLS)
 Logged-in quota, 555, (MONITOR CALLS)
 Logged-out quota, 555, (MONITOR CALLS)
 /LOG, 683, 688, 723, (LINK-10)
 LOG, (LINK-10)
 logical name, 683, 723
 Log file, 683, 688, 723, 725, (LINK-10)
 Logic, 39, 159, (SYSTEM REF.)
 Logical device names, suppression of, 382, (MONITOR CALLS)
 Logical operations, 219, (MACRO)
 Logical shifting, 46, 163, (SYSTEM REF.)
 Logical station, 412, (MONITOR CALLS)
 Logical testing and modification, 63, 165, (SYSTEM REF.)
 Logical unit names, 560 (MONITOR CALLS)
 LOGIN UO, 373, (MONITOR CALLS)
 /LOGLEVEL, 688, 725, 775, (LINK-10)
 LOGOUT UO, 373, (MONITOR CALLS)
 LOOKUP UO, 371, 470, (MONITOR CALLS)
 DEctape, 541
 disk, 567, 571
 error codes, 635
 Lookup errors, 277, 278, (MACRO)
 Low segment size, (LINK-10)
 initial, 697
 maximum, 729
 .LOW., 698, 754, (LINK-10)
 LSH, 47, (SYSTEM REF.)
 LSHC, 47, (SYSTEM REF.)

- /M, 688, (LINK-10)
- MA, 6, (SYSTEM REF.)
- Machine instruction formats, 206, (MACRO)
- Machine mnemonics, summary, 309, (MACRO)
- Macros, definition of, 259, (MACRO)
- MACRO, (MACRO)
 - calls, 260, 261
 - capabilities, 205
 - instruction, 256
 - name, 211
 - nesting and redefinition, 266
 - program examples, 295
 - statements, 209
 - table, 213
- MACRO program, loading, 804, (LINK-10)
- Magnetic tape, 503, (MONITOR CALLS)
 - codes, 639
 - format, 504
 - 9-channel, 507
 - use of MTAPE, 506
 - UOs, 505
- Magnetic tape functions, 732, (LINK-10)
- Manipulating file structures, 588, (MONITOR CALLS)
- MANTIS, 660, 701, (LINK-10)
- Map, 666, 671, 679, (LINK-10)
- /MAP, 665, 688, 694, 727, (LINK-10)
- Map file, 688, 727, 731, (LINK-10)
 - contents, 694
- MAP program, 672, (MONITOR CALLS)
- Mapping, 359, 360, (MONITOR CALLS)
- Margin check panel, 107, (SYSTEM REF.)
- Masks, naming of, 383, (MONITOR CALLS)
- Master file directory, 551 (MONITOR CALLS)
- MATRIX subroutine, 247, 248, (MACRO)
- MAXCOR, 697, 716, (LINK-10)
- /MAXCOR, 688, 729, (LINK-10)
- Maximum low segment size, 729, (LINK-10)
- Meddling, 404, 409, (MONITOR CALLS)
- Memory, (LINK-10)
 - core, 652
- Memory, 12, (SYSTEM REF.)
 - access time, 13
 - allocation, 13
 - protection, 102, 103
 - stop, 108
- Memory parity error recovery, 618, (MONITOR CALLS)
- Memory protection and relocation, 359, (MONITOR CALLS)
- Memory protection register, 360, (MONITOR CALLS)
- Memory relocation register, 359, (MONITOR CALLS)
- Message level, 708, 775, (LINK-10)
- Messages, 775, (LINK-10)
 - specifying fatality of, 755
 - suppressing, 708, 725
- METER.UO, 380, 458, (MONITOR CALLS)
- MFD, 551, (MONITOR CALLS)
- MI, 6, (SYSTEM REF.)
- Miscellaneous commands, 897, (DDT)
- Miscellaneous features, 655, (LINK-10)
- Mnemonics, 14, 147, (SYSTEM REF.)
 - alphabetic, 152
 - derivation, 148
 - device, 156
 - numeric, 149
- Mnemonics, summary of machine, 309, (MACRO)
- Mnemonic table, 213, (MACRO)
- Mode, (LINK-10)
 - library search, 688, 689, 737, 752
 - local symbol, 701
 - search, 721
 - suppressing library search, 737
- Modes, 23, (SYSTEM REF.)
 - arithmetic testing, 64
 - fixed point, 49
 - floating point, 56, 60
 - half word, 25
 - logic, 39
 - logical testing, 69
 - move, 33
- Modifying shared segments, 409, (MONITOR CALLS)
- Modifying storage words, 872, 880, (DDT)
- Modules, (LINK-10)
 - inhibiting loading of, 711
 - library, 653
 - linking, 652
 - loading specified, 721
 - object, 651, 659
- Monitor, (LINK-10)
 - loading the, 811
- Monitor commands, 233, (MACRO)
 - summary, 307, 308
- Monitor error handling, 612, (MONITOR CALLS)
- Monitor examination, (MONITOR CALLS)
 - GETTAB, 417
 - PEEK, 416
 - POKE, 417
 - SPY, 416
- Monitor generated buffers, 468, (MONITOR CALLS)
- Monitor I/O facilities, 209, (MACRO)
- Monitor programming, 105, (SYSTEM REF.)
- Monitor symbols, naming of, 383, (MONITOR CALLS)
- Monitor UOs, 369 (MONITOR CALLS)
 - restrictions in reentrant programs, 382
- MONRT., 386, (MONITOR CALLS)
- MOVE, 33, (SYSTEM REF.)

MOVM, 34, (SYSTEM REF.)
MOV5, 33, (SYSTEM REF.)
/MPSORT, 688, 731, (LINK-10)
MQ, 7, (SYSTEM REF.)
MSTIME UO, 373, 415, (MONITOR CALLS)
/MTAPE, 688, 732, (LINK-10)
MTAPE UO, 371, 505, 546, (MONITOR CALLS)
MTCHR.UO, 380, 507, (MONITOR CALLS)
MUL, 50, (SYSTEM REF.)
Multiprogram assemblies, 244, (MACRO)

/N, 688, (LINK-10)
Name, (LINK-10)
 device, 660, 677
 program, 749
Name block, type 6, 287, (MACRO)
Naming of monitor symbols, 383, (MONITOR CALLS)
Naming programs, 230, (MACRO)
Nesting of, (MACRO)
 expressions, 220
 literals, 225
 macros, 266
Nested subroutines, 84, (SYSTEM REF.)
/NEW, 667, (LINK-10)
NEW disk area, 667, (LINK-10)
Nine-channel magtape, 507, (MONITOR CALLS)
/NOINITIAL, 688, 734, (LINK-10)
/NOLOCAL, 688, 736, (LINK-10)
Nondirectory devices, 462, 493, (MONITOR CALLS)
Nonexistent Memory, 102, (SYSTEM REF.)
Non-I/O UO's, 385, (MONITOR CALLS)
Nonsharable, 668, (LINK-10)
Non-standard I/O, DECTape, 547, (MONITOR CALLS)
Nonswapping data table, 427, (MONITOR CALLS)
No-ops, 76, (SYSTEM REF.)
Normal block mode, 444, (MONITOR CALLS)
/NOSEARCH, 666, 688, 737, (LINK-10)
/NOSTART, 689, 738, (LINK-10)
NOSYM statement, 250, (MACRO)
/NOSYMBOL, 689, 739, (LINK-10)
/NOSYSLIB, 689, 740, (LINK-10)
Null arguments, 264, (MACRO)
Number, (LINK-10)
 prime, 719
Numbers, naming of, 383, (MONITOR CALLS)
Number sign (#) usage, 242, (MACRO)
Number system, 8, (SYSTEM REF.)
 fixed point, 8
 floating point, 9
Numeric terms, 220, (MACRO)

O (octal radix), 218, (MACRO)
Object modules, 651, 659, (LINK-10)
Object time system, OTS, 742, (LINK-10)
OBUF, 465, (MONITOR CALLS)
Octal codes, summary, 309, (MACRO)
Octal-to-decimal conversion, 87, (SYSTEM REF.)
OCT statement, 234, (MACRO)
Off-line disk unit, 390, (MONITOR CALLS)
Offset, 363, (MONITOR CALLS)
/OLD, 667, (LINK-10)
OLD disk area, 667, (LINK-10)
Once-only disk parameters, 429, (MONITOR CALLS)
One-segment machine, 286, 287, (MACRO)
Ones complement, 8, (SYSTEM REF.)
Op-code table, 213, (MACRO)
OPDEF statement, 254, (MACRO)
OPEN UO, 370, 463, (MONITOR CALLS)
Operand field, 214, (MACRO)
Operands, 212, (MACRO)
 in primary statements, 206
Operating environment, 919, (DDT)
Operating instructions, 331, (MACRO)
Operating keys, 109, (SYSTEM REF.)
Operating switches, 111, (SYSTEM REF.)
Operation, (SYSTEM REF.)
 clock, 116
 processor, 106
Operator, defined, 214, (MACRO)
Operator field, 214, (MACRO)
Operators, 211, (MACRO)
 arithmetic, 219
 logical, 219
 unary, 222
Optimization, 583, (MONITOR CALLS)
Options, (LINK-10)
 interactive, 683
OR, 43, (SYSTEM REF.)
ORCA, 43, (SYSTEM REF.)
ORCB, 44, (SYSTEM REF.)
ORCM, 44, (SYSTEM REF.)
OTHUSR UO, 379, 416, (MONITOR CALLS)
/OTS, 689, 742, (LINK-10)
OUTBUF UO, 370, 468, (MONITOR CALLS)
Output, 653, (LINK-10)
 auxiliary, 651, 654
 defaults, 677
 files, 677, 679, 682, 703, 716
 specification, 676, 703
 switches, 682, 710, 724, 728, 751, 757, 760, 773, 774
Output, 283, (MACRO)
Output, (MONITOR CALLS)
 buffered, 477
 spooling, 604
 unit selection, 561

- OUTPUT UUU, 371, 474, (MONITOR CALLS)
 OUT UUU, 370, 474, (MONITOR CALLS)
 Overdrawn amount, 555, (MONITOR CALLS)
 Overflow, 48, 55, 77, 102, (SYSTEM REF.)
 Overflow, (LINK-10)
 disk, 729
 Overlay facility, 654, 706, (LINK-10)
 Owner of files, 555, (MONITOR CALLS)
- Page mapped, 359, (MONITOR CALLS)
 PAGE statement, 250, (MACRO)
 Paper-tape control, 905, 914, (DDT)
 Paper-tape input/output at TTY, 534, (MONITOR CALLS)
 Paper-tape punch, 512, (MONITOR CALLS)
 Paper-tape reader, 513, (MONITOR CALLS)
 Parentheses delimiters, 237, (MACRO)
 Parity subtable, 438, (MONITOR CALLS)
 PASS2 statements, 245, (MACRO)
 Passive search list, 562, (MONITOR CALLS)
 PAT., 744, 761, (LINK-10)
 Patching space, 689, (LINK-10)
 allocation, 744,
 /PATCHSIZE, 689, 744, (LINK-10)
 PATH.UUU, 380, 577, (MONITOR CALLS)
 PC, 5, (SYSTEM REF.)
 PC word, 76, (SYSTEM REF.)
 PEEK UUU, 374, 416, (MONITOR CALLS)
 Percent sign (%) symbol, 262, (MACRO)
 Performing magnetic tape functions, 732, (LINK-10)
 Period (.) symbol, see point symbol
 Permanent switches, 662, 681, (LINK-10)
 PHASE statement, 299 (MACRO)
 Physical address, 360, (MONITOR CALLS)
 Physical controller names, 560, (MONITOR CALLS)
 Physical-only bit (UU.PHS), 382, 462, (MONITOR CALLS)
 Physical-only I/O, 382, 462, (MONITOR CALLS)
 Physical unit names, 560, (MONITOR CALLS)
 PI, 95, 98, (SYSTEM REF.)
 PI ON, 108, (SYSTEM REF.)
 PJOB UUU, 374, 416, (MONITOR CALLS)
 Plotter, 515, (MONITOR CALLS)
 POINT statement, 237, (MACRO)
 Point (.) symbol, 224, (MACRO)
- Pointer, (SYSTEM REF.)
 byte, 37
 IO block, 92
 Points, (LINK-10)
 entry, 706, 713, 746
 POKE.UUU, 380, 417, (MONITOR CALLS)
 POP, 35, (SYSTEM REF.)
 POPJ, 85, (SYSTEM REF.)
 Position-done interrupt, 611, (MONITOR CALLS)
 Pound sign , double (##), 247, (MACRO)
 Preserved files, 556, (MONITOR CALLS)
 PRGEND pseudo-op, 244, (MACRO)
 Primary instruction format, 207, (MACRO)
 Primary statement operands, 206, (MACRO)
 Prime number, 719, (LINK-10)
 PRINTX MESSAGE statement, 251, (MACRO)
 Priority interrupt, 95, (SYSTEM REF.)
 Priority interrupt routines, 613, (MONITOR CALLS)
 Privilege word (.GTPRV), 423, (MONITOR CALLS)
 Proceed counter, 894, 912, (DDT)
 Processing of statement, 213, (MACRO)
 Processor conditions, 100, (SYSTEM REF.)
 Processor, (MONITOR CALLS)
 constants table, 433
 flags, 387
 modes, 367
 variable table, 434
 Program (MACRO)
 break, 284
 line, 213
 listing, 249
 listing output, 283
 origin, 231
 subtitles, 231
 Program and profile identification, 410, (MONITOR CALLS)
 LOCATE, 412
 SETNAM, 410
 SETUUO, 410
 Program control, 76, 163, (SYSTEM REF.)
 Program examples, 293, (MACRO)
 Programmed operator, 223, (MACRO)
 Programmed operators, 368, (MONITOR CALLS)
 tables, 369, 372
 Programming conventions, 14, (SYSTEM REF.)
 Program name, 749, (LINK-10)
 Programs, (LINK-10)
 COMPIL, 656
 debugging, 660, 686, 690, 701, 766
 exec mode, 734

Programs (Cont.)
 loading COBOL, 803, 805
 loading debugging, 701, 766
 loading MACRO, 804
 Program Stop, 108, (SYSTEM REF.)
 Program version number, 364,
 (MONITOR CALLS)
 Project-programmer number word, 419,
 (MONITOR CALLS)
 Protection, 103, (SYSTEM REF.)
 Protection, 554, (MONITOR CALLS)
 Protection address, 359, (MONITOR
 CALLS)
 Protection and relocation, 359,
 (MONITOR CALLS)
 Pseudo-operation code, 211, (MACRO)
 Pseudo-ops, 227, (MACRO)
 summary, 311, 312
 Pseudo-TTY, 516, (MONITOR CALLS)
 Pure code, 753, (LINK-10)
 Pure segment, 359, (MONITOR CALLS)
 PURGE statement, 245, (MACRO)
 PUSH, 35, (SYSTEM REF.)
 Pushdown list, 34, 163, (SYSTEM REF.)
 defined, 35
 subroutines, 85
 Pushdown overflow, 102, (SYSTEM
 REF.)
 PUSHJ, 84, (SYSTEM REF.)

Qualifier +L, 218, (MACRO)
 Quantum time, 606, (MONITOR CALLS)
 Queuing strategy, 610, (MONITOR
 CALLS)
 Quotas, disk, 391, 412, 559,
 (MONITOR CALLS)
 Quotation mark, single ('), 249,
 264, (MACRO)

R LINK command, 656, 657, 675
 (LINK-10)
 Radix changing, 889, 907, (DDT)
 Radix changing, 218, 235, (MACRO)
 Radix 50 character set, 210, (MACRO)
 Radix 50 representation, 325,
 (MACRO)
 Radix 50 representation, 759,
 (LINK-10)
 RADIX statements, 233, 236, (MACRO)
 Read in, 109, (SYSTEM REF.)
 Reading directory paths, 577,
 (MONITOR CALLS)
 Readin mode, 94, (SYSTEM REF.)
 Real-time programming, 444,
 (MONITOR CALLS)
 HPQ, 457
 RTTRP, 444
 TRPSET, 455
 UJEN, 457

Real-time trapping, 444, (MONITOR
 CALLS)
 data block, 446
 dismissing interrupt, 449
 examples, 449, 454
 exec mode, 453
 interrupt level use, 447
 removing devices, 449
 restrictions, 448
 returns, 447
 REASSI UUO, 373, 484, (MONITOR CALLS)
 Recommended hashsize, 719, (LINK-10)
 Redefinition of macros, 266, (MACRO)
 Reentrant program, 359, (MONITOR CALLS)
 Relative address, 360, (MONITOR CALLS)
 RELEAS UUO, 371, 483, (MONITOR CALLS)
 RELOC pseudo-op, 227, (MACRO)
 Relocatability of an expression, 279,
 (MACRO)
 Relocatable address mode, 227, (MACRO)
 Relocatable code, 651, (LINK-10)
 Relocatable object program, 279,
 (MACRO)
 Relocatable symbols, 694, 695,
 (LINK-10)
 Relocation, 103, (SYSTEM REF.)
 Relocation address, 359, (MONITOR
 CALLS)
 Relocation and protection word, 419,
 (MONITOR CALLS)
 Relocation counters, 686, 689, 698,
 754, (LINK-10)
 listing, 698
 REMAP UUO, 375, 408, (MONITOR CALLS)
 REMARK COMMENTS statement, 251,
 (MACRO)
 Remembering arguments on RUN, 405,
 (MONITOR CALLS)
 Removing devices from PI channel, 449,
 (MONITOR CALLS)
 RENAME UUO, 370, 472, (MONITOR CALLS)
 DECTape, 543
 disk, 568, 571
 error codes, 635
 REPEAT statement, 253, (MACRO)
 Representation, 759, (LINK-10)
 Requests, global, 667, 746, (LINK-10)
 undefined, 752, 763, 767
 /REQUIRE, 689, 746, (LINK-10)
 RESDV.UUO, 381, 483, (MONITOR CALLS)
 Reserving a single location, 242,
 (MACRO)
 RESET UUO, 370, 461, 587, (MONITOR
 CALLS)
 Response subtable, 436, (MONITOR
 CALLS)
 Restore, 81, (SYSTEM REF.)
 Restricted devices, 462, (MONITOR
 CALLS)
 Restrictions on monitor UUO's, 382,
 (MONITOR CALLS)
 Restrictions on real-time trapping,
 448, (MONITOR CALLS)

- Retrieval information block, 554, (MONITOR CALLS)
- Retrieval pointers, 641, (MONITOR CALLS)
- RETURN key, 675, (LINK-10)
- Reverse slash (\), 267, (MACRO)
- /REWIND, 689, 747, (LINK-10)
- Rewinding tapes, 747, 768, (LINK-10)
- RIB, 554, (MONITOR CALLS)
- RIM format, 290, (MACRO)
- RIM10 format, 289, (MACRO)
- RIM10B format, 292, (MACRO)
- Ring buffers, 466, (MONITOR CALLS)
- ROT, 47, (SYSTEM REF.)
- Rotate, 46, 163, (SYSTEM REF.)
- ROTC, 48, (SYSTEM REF.)
- Rounding, 56 (SYSTEM REF.)
- RSW, 95, (SYSTEM REF.)
- RTTRP UOO, 379, 444, (MONITOR CALLS)
- RUN, 107, (SYSTEM REF.)
- RUN command, 654, (LINK-10)
- /RUNAME, 689, 749, (LINK-10)
- /RUNCOR, 689, 748, (LINK-10)
- RUNTIM UOO, 374, 416, (MONITOR CALLS)
- RUN UOO, 374, 403, (MONITOR CALLS)

- /S, 689, (LINK-10)
- SALL statement, 250, (MACRO)
- SAT blocks, 550, (MONITOR CALLS)
- /SAVE, 689, 750, (LINK-10)
- SAVE command, 659, 668, (LINK-10)
- Save file, 689, 750, (LINK-10)
 - creating, 805
 - defining, 757
- Saving XPN file, 772, (LINK-10)
- Scaling, 55, (SYSTEM REF.)
- Scan switch, 577, (MONITOR CALLS)
- Scheduling, 605, (MONITOR CALLS)
- Searches, 895, 912, (DDT)
- /SEARCH, 666, 689, 752, (LINK-10)
- Search list, job, 562, (MONITOR CALLS)
- Search list, 667, (LINK-10)
- Search mode, 721, (LINK-10)
 - library, 666, 688, 689, 737, 752
 - surpressing library, 737
- SEARCH name, 258, (MACRO)
- SEARCH pseudo-op, 258, (MACRO)
- Search symbols, (LINK-10)
 - library, 686, 706, 746
- Searching, (LINK-10)
 - inhibiting, 740
 - system library, 718
- Searching, 609, (MONITOR CALLS)
- Searching libraries, 763, (LINK-10)
- SEEK UOO, 337, 587, (MONITOR CALLS)
- Segment control, 403, (MONITOR CALLS)
 - GETSEG, 407
 - modifying shared segments, 409
 - REMAP, 408
- Segment Control (Cont.)
 - RUN, 403
 - testing, 408
- /SEGMENT, 689, 753, (LINK-10)
- Segment size, (LINK-10)
 - initial low, 697
 - maximum low, 729
- Segments, 359, (MONITOR CALLS)
- /SELF, 667, (LINK-10)
- Semicolon (;) as terminator, 212, 328, (MACRO)
- Semi-standard I/O, DEctape, 547, (MONITOR CALLS)
- Sequence of operations, RUN, 406, (MONITOR CALLS)
 - /SET, 689, 754, (LINK-10)
- SETA, 40, (SYSTEM REF.)
- SETCA, 41, (SYSTEM REF.)
- SETCM, 41, (SYSTEM REF.)
- SETDDT UOO, 372, 385, (MONITOR CALLS)
- SETM, 41, (SYSTEM REF.)
- SETNAM UOO, 375, 410, (MONITOR CALLS)
- SETO, 40, (SYSTEM REF.)
- SETOV UOO, 374, (MONITOR CALLS)
- SETSTS UOO, 370, 480, (MONITOR CALLS)
- Setting directory paths, 577, (MONITOR CALLS)
- Setting disk priority, 599, (MONITOR CALLS)
- Setting job parameters, 410, (MONITOR CALLS)
- Setting logical names, 484, (MONITOR CALLS)
- Setting write-up bit, 403, (MONITOR CALLS)
- SETUOO, 378, 410, (MONITOR CALLS)
- SETUWP UOO, 375, 403, (MONITOR CALLS)
- SETZ, 40, (SYSTEM REF.)
- /SEVERITY, 689, 775, 776, (LINK-10)
- Severity levels, 775, 776, (LINK-10)
- SFD, 551, (MONITOR CALLS)
- SFD privileges, 556, (MONITOR CALLS)
- Sharable, 668, 757, (LINK-10)
- Shift, 163, (SYSTEM REF.)
 - arithmetic, 53
 - logical, 46
- Shifting, binary, 221, (MACRO)
- Simultaneous access, 560, (MONITOR CALLS)
- Simultaneous supersede/update, 600, (MONITOR CALLS)
- Single mode, 444, (MONITOR CALLS)
- Single quote mark ('), 263, (MACRO)
- SIXBIT statement, 240, (MACRO)
- Size, (LINK-10)
 - initial low segment, 697
 - initial symbol table, 719
 - maximum low segment, 729
- /SKIP, 689, 756, (LINK-10)
- SKIP, 66, (SYSTEM REF.)
- SLEEP UOO, 374, 391, (MONITOR CALLS)

Soft error, 612, (MONITOR CALLS)
Software detected errors, 613, (MONITOR CALLS)
SOJ, 67, (SYSTEM REF.)
Sorting symbol table, 731, (LINK-10)
SOS, 68, (SYSTEM REF.)
Space, (LINK-10)
 allocating disk, 709
 allocating patching, 744
 patching, 689
Spacing forward tapes, 756, (LINK-10)
Special symbols, 903, 910, (DDT)
Specification, (LINK-10)
 file, 660, 676, 703
 switch, 663, 686
Specification switches, (LINK-10)
 implicit file, 702, 714, 715, 764, 766
Specifications, Input/Output, 676, 703, (LINK-10)
Specified modules, loading of, 721, (LINK-10)
Specifying, (LINK-10)
 central processor, 700
 disk areas, 667
 execution, 701, 713, 718, 766
 fatality of messages, 755
 free core, 716
 log file, 723
 map file, 727
 start address, 758
Spool bits, 411, 432, (MONITOR CALLS)
Spooling, 603, (MONITOR CALLS)
SPY UO, 375, 416, (MONITOR CALLS)
Square bracket [, used as terminator, 226, (MACRO)
SQUOZE mnemonic, 236, (MACRO)
/SSAVE, 689, 757, (LINK-10)
SSAVE command, 659, 668, (LINK-10)
Standard listing operations, 250, (MACRO)
/START, 689, 758, (LINK-10)
Start address, 666, 677, 689, 713, (LINK-10)
 ignoring, 738
 specifying, 758
START command, 654, 659, (LINK-10)
Starting address, block type 7, 288, (MACRO)
Starting a program, 385, (MONITOR CALLS)
Starting the program, 876, 883, 912, (DDT)
State codes, 431, (MONITOR CALLS)
Statement, 209, (MACRO)
 elements, 206
 evaluation, 214
 formats, 249
 label, 206
 processing, 213
 general form of, 206
 operands in primary, 206
 Statement, (LINK-10)
 entry, 706, 746
 function, 706
 subroutine, 706
STATO UO, 370, 480, (MONITOR CALLS)
Status changing switches, 684, (LINK-10)
Status, 93, (SYSTEM REF.)
 clock, 114
 interrupt, 99
 processor, 101
Status checking and setting, 479, 480, (MONITOR CALLS)
Status word, 419, (MONITOR CALLS)
STATZ UO, 370, 480, (MONITOR CALLS)
Stopping a program, 385, (MONITOR CALLS)
Storage allocation, 319, (MACRO)
Storage allocation table, 550, (MONITOR CALLS)
Storage map for user mode, 917, (DDT)
Storage, reserving, 242, (MACRO)
Storage words, (DDT)
 examining, 871, 879, 908
 modifying, 872, 880
String, (LINK-10)
 command, 675, 676, 681
Structure of disk files, 549, (MONITOR CALLS)
STRUO, 376, 588, (MONITOR CALLS)
SUB, 49, (SYSTEM REF.)
Sub-file directories, 551, 577, (MONITOR CALLS)
Subroutines, 82, (SYSTEM REF.)
SUBROUTINE statement, 706, (LINK-10)
Subtables, GETTAB, 436, (MONITOR CALLS)
SUBTTL pseudo-op, 231, (MACRO)
Suffix ##, 216, (MACRO)
Suffixes K, M, and G, 219, (MACRO)
Superseding a file, 563, (MONITOR CALLS)
Superseding a sharable program, 409, (MONITOR CALLS)
Super-USETI/USETO, 587, (MONITOR CALLS)
Suppression of logical device names, 382, (MONITOR CALLS)
SUPPRESS pseudo-op, 248, (MACRO)
Suppression of, (LINK-10)
 library search mode, 737
 messages, 708, 725,
 symbol table, 739
Suspending, 391, (MONITOR CALLS)
Swapping, 607, (MONITOR CALLS)
Swapping classes, 608, (MONITOR CALLS)
Swapping data table, 429, (MONITOR CALLS)
Swapping parameter word, 419, (MONITOR CALLS)

- Switch, (LINK-10)
 - exit condition, 676
- Switch algorithms, 679, (LINK-10)
- Switch options, summary, 335, (MACRO)
- Switch specification, 663, 686, (LINK-10)
- Switches, 111, (SYSTEM REF.)
- Switches, (LINK-10)
 - COMPIL, 662, 664
 - delayed action, 684, 695, 700, 708, 713, 717, 720, 726, 730, 731, 741, 743, 745, 748, 749, 755, 762, 765, 771
 - device, 680, 691, 733, 747, 756, 768
 - file dependent, 681, 712, 721, 722, 736, 737, 738, 752, 753, 758
 - immediate action, 693, 697, 698, 703, 706, 718, 735, 739, 746, 754, 769
 - implicit file specification, 684, 702, 714, 715, 764, 766
 - LINK-10, 663, 685, 686, 691
 - LOADER, 663, 846
 - output, 682, 710, 724, 728, 751, 757, 760, 773, 774
 - permanent, 662, 681
 - status changing, 684
 - temporary, 662, 681
 - type-out, 683
- SWITCH UO, 373, 442, (MONITOR CALLS)
- /SYMBOL, 689, 759, (LINK-10)
- Symbol;! (suppressed local symbol), 218, (MACRO)
- Symbol;:!(suppressed internal symbol), 218 (MACRO)
- Symbol delimiter, 210, (MACRO)
- Symbol evaluation, 902, (DDT)
- Symbol expression, 248, (MACRO)
- Symbol file, 689, 690, (LINK-10)
 - defining, 759
- Symbolic, (MACRO)
 - addresses, 210, 212
 - elements, 280
 - operands, 212
 - operators, 211
- Symbols, 873, 883, (DDT)
 - defining, 899, 910
 - deleting, 900, 910
- Symbols, 652, (LINK-10)
 - absolute, 695
 - COMMON, 695
 - entry, 695
 - entryname, 695
 - external, 692
 - global, 694, 695, 769
 - internal, 692
 - library search, 686, 706, 746
 - linking, 653
 - loading, 761
- Symbols, (Cont.)
 - local, 665, 688, 695, 701, 722, 736, 759
 - relocatable, 694, 695
 - typing in global, 769
 - undefined, 656, 681, 767
 - undefined global, 705
 - zero length, 695
- Symbols, 209, (MACRO)
 - block type 2, 286
 - block type 3, 286
 - generated, 262
 - global, 216
 - local, 216
- Symbol table, 660, 679, 761, (LINK-10)
 - arranging, 765
 - clearing initial, 734
 - global, 688
 - initial global, 734
 - initial size, 719
 - sorting, 731
 - suppressing, 739
- /SYMSEG, 690, 761, (LINK-10)
- Synchronization of buffered I/O
 - 478, (MONITOR CALLS)
- SYN statement, 255, (MACRO)
- SYS device, 554, (MONITOR CALLS)
- SYS disk area, 667, (LINK-10)
- /SYSLIB, 690, 763, (LINK-10)
- /SYSORT, 690, 765, (LINK-10)
- SYSPHY UO, 376, 593, (MONITOR CALLS)
- SYSSTR UO, 376, 592, (MONITOR CALLS)
- System, Object Time (OTS), (LINK-10)
 - loading, 742
- System libraries, 653, 666, 667, 689, 690, 740, 752, 763
 - searching, 718
- System library, 554, (MONITOR CALLS)
- Table, (LINK-10)
 - arranging symbol, 765
 - clearing initial symbol, 734
 - global symbol, 688
 - hash, 719
 - initial global symbol, 734
 - size of initial symbol, 719
 - sorting symbol, 731
 - suppressing symbol, 739
 - symbol, 660, 679, 731, 761, 765
- Tape functions, (LINK-10)
 - performing magnetic, 732
- TAPE statement, 251, (MACRO)
- Tapes, (LINK-10)
 - backspacing, 691
 - rewinding, 747, 768
 - spacing forward, 756
 - unloading, 768
- TDC, 73, (SYSTEM REF.)

TDN, 72, (SYSTEM REF.)
TDO, 73, (SYSTEM REF.)
TDZ, 73, (SYSTEM REF.)
Temporary files, 405, 412, (MONITOR CALLS)
Temporary switches, 662, 681, (LINK-10)
Terminating loading, 718, (LINK-10)
Terminals, 521, (MONITOR CALLS)
Terminator, (MACRO)
 colon (:), 210
 right square bracket (]), 226
 semicolon (;), 212
Terms, numeric, 220, (MACRO)
/TEST, 690, 766, (LINK-10)
Testing of sharable segments, 408, (MONITOR CALLS)
Test instructions, (SYSTEM REF.)
 arithmetic, 63, 163
 logical, 70, 165
Text codes, summary, 323, (MACRO)
Text input, 240, (MACRO)
Time limit exceeded, 391, (MONITOR CALLS)
TIMER UO, 373, 415, (MONITOR CALLS)
Time sharing, 103, (SYSTEM REF.)
Timing, 23, 178, (SYSTEM REF.)
 clock, 115
 interrupt, 99
Timing information, 414, (MONITOR CALLS)
 DATE, 415
 MSTIME, 415
 TIMER, 415
TITLE pseudo-op, 230, (MACRO)
TLC, 72, (SYSTEM REF.)
TLN, 71, (SYSTEM REF.)
TLO, 72, (SYSTEM REF.)
TLZ, 71, (SYSTEM REF.)
TMPCOR UO, 375, 412, (MONITOR CALLS)
Total user core, 393, (MONITOR CALLS)
Transfer-done interrupt, 611, (MONITOR CALLS)
Transferring program control, 403, (MONITOR CALLS)
Trapping, 387, (MONITOR CALLS)
Traps, 13, (SYSTEM REF.)
TRC, 70, (SYSTEM REF.)
Triplet format, 759, (LINK-10)
TRMNO. UO, 381, 529, (MONITOR CALLS)
TRMOP. UO, 381, 530, (MONITOR CALLS)
TRN, 70, (SYSTEM REF.)
TRO, 71, (SYSTEM REF.)
TRPJEN UO, 374, (MONITOR CALLS)
TRPSET UO, 374, 455, (MONITOR CALLS)
TRZ, 70, (SYSTEM REF.)
TSC, 74, (SYSTEM REF.)
TSN, 74, (SYSTEM REF.)
TSO, 75, (SYSTEM REF.)
TSZ, 74, (SYSTEM REF.)
TTCALL UO, 370, 525, (MONITOR CALLS)
Type-in modes, 873, 909, (DDT)
Type-out modes, 871, 883, 889, 907, (DDT)
Type-out switches, 683, (LINK-10)
Typing errors, 876, 886, (DDT)
Typing in, 884, 909, (DDT)
 arithmetic expressions, 886, 911
 numbers, 885, 909
 symbolic instructions, 885, 909
 text characters, 885, 910
Typing, (LINK-10)
 global symbols, 769
 library search symbols, 706
 undefined globals, 767
Two half-words of data, entering, 239, (MACRO)
Twos complement, 8, (SYSTEM REF.)
Two-segment machine, 286, (MACRO)
TWOSEG pseudo-op, 232, 286, (MACRO)
/U, 690, (LINK-10)
UFA, 59, (SYSTEM REF.)
UFD, 551, (MONITOR CALLS)
UFD privileges, 556, (MONITOR CALLS)
UGETF UO, 371, 545, (MONITOR CALLS)
UJEN UO, 371, 457, (MONITOR CALLS)
Unary operators, 222, (MACRO)
Unbuffered data modes, 465, 475, (MONITOR CALLS)
/UNDEFINED, 690, 767, (LINK-10)
Undefined, (LINK-10)
 global requests, 752, 763, 767
 global symbols, 705,
 typing of globals, 767
 undefined symbols, 656, 681, 767
Unimplemented op codes, 383, 385, (MONITOR CALLS)
Unimplemented operations, 86, (SYSTEM REF.)
Unit of core allocation, 360, (MONITOR CALLS)
Unit selection on output, 561, (MONITOR CALLS)
Unit state codes, 610, (MONITOR CALLS)
Universal date-time standard, 415, (MONITOR CALLS)
Universal I/O index, 530, (MONITOR CALLS)
UNIVERSAL name, 257, (MACRO)
UNIVERSAL pseudo-op, 257, (MACRO)
 .UNIV symbol, 258, (MACRO)
/UNLOAD, 690, 768, (LINK-10)
Unloading tapes, 768, (LINK-10)
Unlocking jobs, 397, (MONITOR CALLS)
UNLOK.UO, 381, 397, (MONITOR CALLS)

- Unrestricted devices, 462, (MONITOR CALLS)
- Updating a file, 564, (MONITOR CALLS)
- Upper and lower case, 887, (DDT)
- Use of MTAPE operator, 506, (MONITOR CALLS)
- User, 77, (SYSTEM REF.)
- User address mapping, 361, (MONITOR CALLS)
- User core storage, 360, (MONITOR CALLS)
- User-defined operator, 245, (MACRO)
- User-defined symbols, 215, (MACRO)
- User file directories, 551, (MONITOR CALLS)
- User generated buffers, 469, (MONITOR CALLS)
- User in-out, 78, 102, (SYSTEM REF.)
- User I/O mode, 367, (MONITOR CALLS)
- User library, 667, (LINK-10)
- User mode, 359, 367, (MONITOR CALLS)
- User mode, 108, (SYSTEM REF.)
- User programming, 104, (SYSTEM REF.)
- User programming, introduction, 367, (MONITOR CALLS)
- User programming, disk, 563, (MONITOR CALLS)
- User program name word, 419, (MONITOR CALLS)
- User symbol table, 213, (MACRO)
- User UOs, 369, (MONITOR CALLS)
- User virtual address space, 652, (LINK-10)
- USETI UO, 371, 545, 584, (MONITOR CALLS)
- USETO UO, 371, 545, 584, (MONITOR CALLS)
- Using, (LINK-10)
 - automatically, 656, 659
 - directly, 657, 675
- UTPCLR, 373, 546, (MONITOR CALLS)
- UO, 91, (SYSTEM REF.)
- UOs, 368, (MONITOR CALLS)
 - APRENB, 387
 - CHKACC, 588
 - CLOSE, 481
 - CORE, 401
 - CTLJOB, 520
 - DAEMON, 442
 - DATE, 415
 - DDTIN, 525
 - DDTOUT, 525
 - DEVCHR, 488
 - DEVLNM, 484
 - DEVNAM, 491
 - DEVPPN, 593
 - DEVSIZ, 490
 - DEVSTS, 487
 - DEVTYP, 489
 - DISK., 599
 - DSKCHR, 597
- UOs, (Cont.)
 - ENTER, 471, 542, 565
 - EXIT, 386
 - GETLIN, 529
 - GETPPN, 416
 - GETSEG, 407
 - GETSTS, 480
 - GETTAB, 417
 - GOBSTR, 591
 - HIBER, 391
 - HPQ, 457
 - IN, 474
 - INBUF, 468
 - INIT, 465
 - INPUT, 474
 - JOBSTR, 590
 - JOBSTS, 519
 - LIGHTS, 442
 - LOCATE, 412
 - LOCK, 394
 - LOOKUP, 541, 567, 470
 - METER., 458
 - MSTIME, 415
 - MTAPE, 505, 546
 - MTCHR., 507
 - OPEN, 463
 - OTHUSR, 416
 - OUT, 474
 - OUTBUF, 468
 - OUTPUT, 474
 - PATH., 577
 - PEEK, 416
 - PJOB, 416
 - POKE., 417
 - REASSIGN, 484
 - RELEASE, 483
 - REMAP, 408
 - RENAME, 472, 543, 568
 - RESDV., 483
 - RESET, 461, 587
 - RTTRP, 444
 - RUN, 403
 - RUNTIM, 416
 - SEEK, 587
 - SETDDT, 385
 - SETNAM, 410
 - SETSTS, 480
 - SETUO, 410
 - SETUWP, 403
 - SLEEP, 391
 - SPY, 416
 - STATO, 480
 - STATZ, 480
 - STRUO, 588
 - SWITCH, 442
 - SYSPHY, 593
 - SYSSTR, 592
 - TIMER, 415
 - TMPCOR, 412
 - TRMNO., 529
 - TRMOP., 530

UOUs, (Cont.)
TRPSET, 455
TTCALL, 525
UGETF, 545
UJEN, 457
UNLOK, 397
USETI, 545, 584
USETO, 545, 584
UTPCLR, 546
WAIT, 478
WAKE, 392
WHERE, 491
UU.PHS, 382, 462, (MONITOR CALLS)

/VALUE, 769, (LINK-10)
Values, (LINK-10)
 assigning, 705
 initial default, 677, 678, 686
VAR statements, 243, (MACRO)
Variables tables, 434, (MONITOR CALLS)
Verbosity, 770, 771, (LINK-10)
/VERBOSITY, 690, 770, 775, 777, (LINK-10)
Verification, 609, (MONITOR CALLS)
Version number, 364, (MONITOR CALLS)
Vestigial job data area, 365, (MONITOR CALLS)
Virtual address, 360, (MONITOR CALLS)

WAIT UO, 372, 478, (MONITOR CALLS)
Wake-enable bits, 392, (MONITOR CALLS)
WAKE UO, 378, 392, (MONITOR CALLS)
WATCH bits, 411, 432, (MONITOR CALLS)
WHERE UO, 377, 491, (MONITOR CALLS)
Word format, 193, (SYSTEM REF.)
Write protect bit, 403, 409, (SYSTEM REF.)
Writing reentrant user programs, 623, (MONITOR CALLS)

X, 11, (SYSTEM REF.)
XALL statement, 250, (MACRO)
XCT, 78, (SYSTEM REF.)
XLIST statement, 250, (MACRO)
XOR, 44, (SYSTEM REF.)
/XPN, 690, 772, (LINK-10)
XPN file, creating and saving, 772, (LINK-10)
XPUNGE pseudo-op statement, 245, (MACRO)
XWD, 475, (MONITOR CALLS)
XWD statement, 239, (MACRO)

Y, 11, (SYSTEM REF.)

Z statement, 236, (MACRO)
/ZERO, 690, 774, (LINK-10)
Zero length symbols, 695, (LINK-10)
Zero-compression, 750, (LINK-10)
Zero word, 236, (MACRO)

READER'S COMMENTS

**DECsystem-10
ASSEMBLY LANGUAGE HANDBOOK
DEC-10-NRZC-D**

Digital Equipment Corporation maintains a continuous effort to improve the quality and usefulness of its publications. To do this effectively we need user feedback: your critical evaluation of this document. Please give specific page and line references when appropriate.

ERRORS NOTED IN THIS PUBLICATION:

SUGGESTIONS FOR IMPROVEMENT OF THIS PUBLICATION:

MISSING DOCUMENTATION:

Is there sufficient documentation on associated system programs required for use of the software described in this manual? If not, what material is missing and where should it be placed?

Name _____ Date _____

Organization _____

Please describe your position _____

Street _____

City _____ State _____ Zip Code _____

..... **Fold Here**


..... **Do Not Tear – Fold Here and Staple**

**FIRST CLASS
PERMIT NO. 33
MAYNARD, MASS.**

**BUSINESS REPLY MAIL
NO POSTAGE STAMP NECESSARY IF MAILED IN THE UNITED STATES**

Postage will be paid by:

**Digital Equipment Corporation
Software Information Services
146 Main Street
Maynard, Massachusetts 01754**

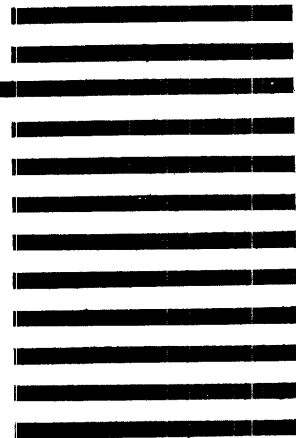

DIGITAL EQUIPMENT CORPORATION **digital** WORLD-WIDE SALES AND SERVICE

MAIN OFFICE AND PLANT

146 Main Street, Maynard, Massachusetts, U.S.A. 01754 • Telephone: From Metropolitan Boston: 646-8600 • Elsewhere: (617)-897-5111
 TWX: 710-347-0212 Cable: DIGITAL MAYN Telex: 94-8457

UNITED STATES

NORTHEAST

REGIONAL OFFICE

275 Wyman Street, Waltham, Massachusetts 02154
 Telephone: (617)-890-0320/0330 TWX: 710-324-6919

WALTHAM

15 Lunda Street, Waltham, Massachusetts 02154
 Telephone: (617)-891-1030 TWX: 710-324-6919

CAMBRIDGE/BOSTON

899 Main Street, Cambridge, Massachusetts 02139
 Telephone: (617)-491-6130 TWX: 710-320-1167

ROCHESTER

130 Allens Creek Road, Rochester, New York 14618
 Telephone: (716)-461-1700 TWX: 510-253-3078

CONNECTICUT

240 Pomeroy Ave., Meriden, Conn. 06450
 Telephone: (203)-237-8441/7468 TWX: 710-461-0054

MID-ATLANTIC — SOUTHEAST

REGIONAL OFFICE

U.S. Route 1, Princeton, New Jersey 08540
 Telephone: (609)-452-2940 TWX: 510-685-2338

NEW YORK

95 Cedar Lane, Englewood, New Jersey 07631
 Telephone: (201)-871-4984, (212)-594-8955, (212)-736-0447
 TWX: 710-991-9721

NEW JERSEY

1259 Route 46, Parsippany, New Jersey 07054
 Telephone: (201)-335-3300 TWX: 710-987-8319

PRINCETON

U.S. Route 1
 Princeton, New Jersey 08540
 Telephone: (609)-452-2940 TWX: 510-685-2338

LONG ISLAND

1 Huntington Quadrangle
 Suite 1507 Huntington Station, New York 11748
 Telephone: (516)-694-4131, (212)-895-8095

PHILADELPHIA

Station Square Three, Paoli, Pennsylvania 19301
 Telephone: (215)-647-4900/4410 Telex: 510-668-8395

WASHINGTON

Executive Building
 6811 Kenilworth Ave., Riverdale, Maryland 20840
 Telephone: (301)-779-1600/752-8797 TWX: 710-826-9682

DURHAM/CHAPEL HILL

2704 Chapel Hill Boulevard
 Durham, North Carolina 27707
 Telephone: (919)-489-3347 TWX: 510-927-0912

ORLANDO

Suite 130, 7001 Lake Ellenor Drive, Orlando, Florida 32809
 Telephone: (305)-851-4450 TWX: 810-850-0180

ATLANTA

2815 Clearview Place, Suite 100,
 Atlanta, Georgia 30340
 Telephone: (404)-451-3734/3735/3736 TWX: 810-757-4223

EUROPEAN HEADQUARTERS

Digital Equipment Corporation International Europe
 81 Route de l'Air
 1211 Geneva 26, Switzerland
 Telephone: 42 79 50 Telex: 22 683

FRANCE

Equipment Digital S.A.R.L.

PARIS

327 Rue de Charenton, 75 Paris 12^{ème}, France
 Telephone: 344-76-07 Telex: 21339

GRENOBLE

10 rue Auguste Ravet, F-38 Grenoble, France
 Telephone: (76) 87 87 32 Telex: 32 862 F (Code 212)

GERMANY

Digital Equipment GmbH

MUNICH

8 Muenchen 13, Wallensteinplatz 2
 Telephone: 0811-35031 Telex: 524-226

COLOGNE

5 Koeln, Bismarckstrasse 7,
 Telephone: 0221-522181 Telex: 888-2269
 Telegram: Flip Chip Koeln

FRANKFURT

6078 Neu-Issenburg 2
 Am Forsthaus Grevenbruch 5-7
 Telephone: 06102-5526 Telex: 41-76-82

HANNOVER

3 Hannover, Podbielskistrasse 102
 Telephone: 0511-69-70-95 Telex: 922-952

AUSTRIA

Digital Equipment Corporation Ges.m.b.H

VIENNA

Mariahilferstrasse 136, 1150 Vienna 15, Austria
 Telephone: 85 51 86

UNITED KINGDOM

Digital Equipment Co., Ltd.

U.K. HEADQUARTERS

Arkwright Road, Reading, Berks.
 Telephone: 0734-583555 Telex: 84327

READING

The Evening Post Building, Tessa Road
 Reading, Berks.

BIRMINGHAM

29/31, Birmingham Road, Sutton Coldfield, Warwickshire.
 Telephone: (0244) 21-355 5501 Telex: 337 060

MANCHESTER

13 Upper Precinct, Walkden, Manchester M28 5AZ
 Telephone: 061-790-8411 Telex: 668666

LONDON

Bilton House, Uxbridge Road, Ealing, London W.5.
 Telephone: 01-579-2334 Telex: 22371

EDINBURGH

Shiel House, Craighill, Livingston,
 West Lothian, Scotland
 Telephone: 32705 / Telex: 727113

NETHERLANDS

THE HAGUE

Digital Equipment N.V.
 Sir Winston Churchilllaan 370
 Rijswijk/The Hague, Netherlands
 Telephone: 070-995-180 Telex: 32533

BELGIUM

BRUSSELS

Digital Equipment N.V./S.A.
 108 Rue D'Arion
 1040 Brussels, Belgium
 Telephone: 02-136256 Telex: 25297

MID-ATLANTIC — SOUTHEAST (cont.)

KNOXVILLE

6311 Kingdon Pike, Suite 21E
 Knoxville, Tennessee 37919
 Telephone: (615)-583-6571 TWX: 810-583-0123

CENTRAL

REGIONAL OFFICE:

1850 Frontage Road, Northbrook, Illinois 60062
 Telephone: (312)-493-2500 TWX: 910-686-0655

PITTSBURGH

400 Penn Center Boulevard
 Pittsburgh, Pennsylvania 15235
 Telephone: (412)-243-9404 TWX: 710-797-3657

CHICAGO

1850 Frontage Road, Northbrook, Illinois 60062
 Telephone: (312)-498-2500 TWX: 910-686-0655

ANN ARBOR

230 Huron View Boulevard, Ann Arbor, Michigan 48103
 Telephone: (313)-761-1150 TWX: 810-223-6053

INDIANAPOLIS

21 Beachway Drive — Suite G
 Indianapolis, Indiana 46224
 Telephone: (317)-243-8341 TWX: 810-341-3436

MINNEAPOLIS

Suite 111, 8030 Cedar Avenue South,
 Minneapolis, Minnesota 55420
 Telephone: (612)-854-6562-3-4-5 TWX: 910-578-2818

CLEVELAND

Park Hill Bldg., 35104 Euclid Ave.
 Willoughby, Ohio 44094
 Telephone: (216)-945-8484 TWX: 810-427-2608

ST. LOUIS

Suite 110, 115 Progress Pky., Maryland Heights,
 Missouri 63043
 Telephone: (314)-878-4310 TWX: 910-784-0631

DAYTON

3101 Kettering Blvd., Dayton, Ohio 45439
 Telephone: (513)-299-7377 TWX: 810-459-1676

MILWAUKEE

8531 W. Capitol Drive, Milwaukee, Wisconsin 53222
 Telephone: (414)-463-9110 TWX: 910-262-1199

DALLAS

8855 North Stemmons Freeway
 Dallas, Texas 75247
 Telephone: (214)-638-4880 TWX: 910-861-4000

HOUSTON

3417 Milam Street, Suite A, Houston, Texas 77002
 Telephone: (713)-524-2961 TWX: 910-881-1651

INTERNATIONAL

SWEDEN

Digital Equipment Aktiebolag

STOCKHOLM

Vretenvagen 2, S-171 54 Solna, Sweden
 Telephone: 98 13 80 Telex: 170 50
 Cable: Digital Stockholm

NORWAY

Digital Equipment

OSLO

c/o Firma Service
 Waldenmarthansgate 84-B-86
 Oslo 1, Norway
 Telephone: 37 19 85, 37 02 30 Telex: 166 43

DENMARK

Digital Equipment Corporation

COPENHAGEN

Vesterbrogade 140, 1620 Copenhagen V

SWITZERLAND

Digital Equipment Corporation S.A.

GENEVA

81 Route de l'Air
 1211 Geneva 26, Switzerland
 Telephone: 42 79 50 Telex: 22 683

ZURICH

Scheuchzerstrasse 21
 CH-8006 Zurich, Switzerland
 Telephone: 01/60 35 66 Telex: 56059

ITALY

Digital Equipment S.p.A.

MILAN

Corso Garibaldi 49, 20121 Milano, Italy
 Telephone: 872 748 694 384 Telex: 33615

SPAIN

MADRID

Atalo Ingenieros S.A., Enrique Larreta 12, Madrid 16
 Telephone: 215 35 43 / Telex: 27246

BARCELONA

Atalo Ingenieros S.A., Ganduxer 78, Barcelona 6
 Telephone: 221 44 66
 Digital Equipment Corporation Ltd.

AUSTRALIA

Digital Equipment Australia Pty. Ltd.

SYDNEY

P.O. Box 491, Crows Nest
 N.S.W. Australia 3065
 Telephone: 439-2586 Telex: AA20740
 Cable: Digital, Sydney

MELBOURNE

80 Park Street, South Melbourne, Victoria, 3205
 Telephone: 696-142 Telex: AA40816

PERTH

843 Murray Street
 West Perth, Western Australia 6005
 Telephone: 214-983 Telex: AA92140

BRISBANE

139 Merivale Street, South Brisbane
 Queensland, Australia 4101
 Telephone: 444-047 Telex: AA40816

ADELAIDE

6 Montrose Avenue
 Norwood, South Australia 5087
 Telephone: 631-333 Telex: AA82825

CENTRAL (cont.)

NEW ORLEANS

3100 Ridgelaque Drive, Suite 106
 Metairie, Louisiana 70002
 Telephone: 504-837-0257

WEST

REGIONAL OFFICE

310 Soquel Way, Sunnyvale, California 94088
 Telephone: (408)-735-9200

ANAHEIM

801 E. Ball Road, Anaheim, California 92805
 Telephone: (714)-776-6932/8730 TWX: 910-591-1189

WEST LOS ANGELES

1510 Cotner Avenue, Los Angeles, California 90025
 Telephone: (213)-479-3791/4318 TWX: 910-342-6669

SAN DIEGO

3444 Hancock Street
 San Diego, California 92110
 Telephone: (714)-296-0591, 0593 TWX: 910-335-1230

SAN FRANCISCO

1400 Terra Bella
 Mountain View, California 94040
 Telephone: (415)-964-6200 TWX: 910-373-1286

PALO ALTO

580 San Antonio Rd., Palo Alto, California 94306
 Telephone: (415)-969-6200 TWX: 910-373-1286

OAKLAND

7850 Edgewater Drive
 Oakland, California 94621
 Telephone: (415)-635-5453/7830 TWX: 910-366-7238

ALBUQUERQUE

6303 Indian School Road, N.E.
 Albuquerque, N.M. 87110
 Telephone: (505)-296-5411/5428 TWX: 910-989-0614

DENVER

2305 South Colorado Blvd., Suite #5
 Denver, Colorado 80222
 Telephone: (303)-757-3332/758-1656/758-1659
 TWX: 910-931-2650

SEATTLE

1521 130th N.E., Bellevue, Washington 98005
 Telephone: (206)-454-4058/455-5404 TWX: 910-443-2308

SALT LAKE CITY

431 South 3rd East, Salt Lake City, Utah 84111
 Telephone: (801)-328-9838 TWX: 910-925-5834

PHOENIX

4358 East Broadway Road
 Phoenix, Arizona 85040
 Telephone: (602)-288-3488 TWX: 910-950-4891

PORTLAND

Suite 188
 5319 S.W. Canyon Court, Portland, Ore. 97221
 Telephone: (503) 297-3761/3765

NEW ZEALAND

Digital Equipment Corporation Ltd.

AUCKLAND

Hilton House, 430 Queen Street, Box 2471 A,
 Auckland, New Zealand
 Telephone: 75-533

CANADA

Digital Equipment of Canada, Ltd.

CANADIAN HEADQUARTERS

150 Rosamond Street, Carleton Place, Ontario
 Telephone: (613)-257-2615 TWX: 610-561-1651

OTTAWA

120 Holland Street, Ottawa 3, Ontario K1V 0K7
 Telephone: (613)-725-2193 TWX: 610-562-8807

TORONTO

230 Lakeshore Road East, Port Credit, Ontario
 Telephone: (416)-274-1241 TWX: 610-492-4306

MONTREAL

9675 Cote de Liesse Road
 Dorval, Quebec, Canada 760
 Telephone: 514-636-9393 TWX: 610-422-4124

EDMONTON

5531 - 103 Street
 Edmonton, Alberta, Canada
 Telephone: (403)-434-9333 TWX: 610-831-2248

VANCOUVER

Digital Equipment of Canada, Ltd.
 2210 West 12th Avenue
 Vancouver 9, British Columbia, Canada
 Telephone: (604)-736-5616 TWX: 610-929-2008

ARGENTINA

BUENOS AIRES

Coscin S.A.
 Virrey del Pino 4071, Buenos Aires
 Telephone: