

**SM1540-D**

**SM7020-D**

**SM3004-D**






**SWITCHED MODE DC POWER SUPPLIES**


**SM 1540-D**

- \* 600 W
- \* 0 - 15 V 0 - 40 A

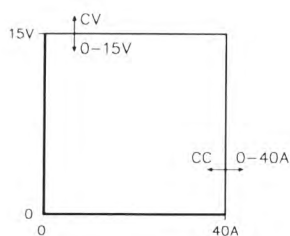


**SM 7020-D**

- \* 700 W
- \* AUTORANGING
- 0 - 35 V 0 - 20 A
- 35 - 70 V 0 - 10 A

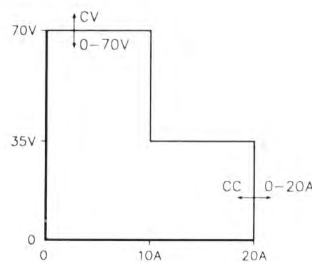

**SM 3004-D**

- \* 600 W
- \* AUTORANGING
- 0 - 150 V 0 - 4 A
- 150 - 300 V 0 - 2 A

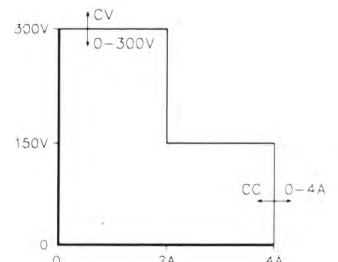

- 100 kHz power conversion technique.
- Efficiency 90 %.
- Weight only 7.4 kgs.
- Natural convection cooling, no blower, no noise.
- Designed for long life at full power
- Remote programming of voltage and current by analog voltages 0 - 5 V.
- **IEEE 488** or **RS232** programming with external interface PSC 44M or PSC232 (pin compatible).
- Master / Slave parallel and series operation with equal current and voltage sharing.
- Input / output insulation 3750 V rms.
- 10 turn potentiometers, 0.03% resolution
- 48 hours burn-in

		SM 1540-D	SM 7020-D	SM 3004-D
<b>Output</b>				
voltage range		0 - 15 V	0 - 70 V	0 - 300 V
current range		0 - 40 A	0 - 20 A	0 - 4 A
max: output power		600 W	700 W	600 W
AUTORANGING (2 ranges)		no	yes	yes
max. output <b>current</b> / volt. range		40 A / 0 - 15 V -	20 A / 0 - 35 V 10 A / 35 - 70 V	4 A / 0 - 150 V 2 A / 150 - 300 V
<b>Input</b>				
<b>AC input</b> , 50 - 60 Hz	110 V range 230 V range	90 - 132 V 185 - 265 V	95 - 132 V 192 - 265 V	95 - 132 V 192 - 265 V
current (110 V AC)		8.4 A rms	9.6 A rms	8.3 A rms
current (230 V AC)		3.9 A rms	4.5 A rms	3.9 A rms
<b>DC input</b>		215 - 350 V	215 - 350 V	220 - 350 V
fuses	230 / 110 V	8 AT / 16 AT	8 AT / 16 AT	8 AT / 16 AT
standby input power ( $V_o=I_o=0$ )		7.5 W	7.5 W	7.5 W
standby input power ( $V_o=V_{max.}$ )		13.5 W	16.5 W	21.5 W
<b>Efficiency</b>				
DC input, full load		88 %	90 %	90 %
AC input, full load		87 %	89 %	88 %
<b>Regulation</b>				
Load 0 - 100%	<b>CV</b>	5 mV	5 mV	20 mV
Line 190 - 265 V AC	<b>CV</b>	5 mV	5 mV	20 mV
Load 0 - 100%	<b>CC</b>	25 mA	12 mA	3 mA
Line 190 - 265 V AC	<b>CC</b>	25 mA	12 mA	3 mA
<b>Ripple + noise, rms / p-p</b>	<b>CV</b>	2 / 10 mV	3 / 15 mV	10 / 50 mV
	<b>CC</b>	10 / 25 mA	5 / 15 mA	1 / 3 mA
<b>Temp. coeff., per °C</b>	<b>CV</b>		$5.10^{-5}$	
	<b>CC</b>		$1.10^{-4}$	
<b>Stability</b>				
during 8 hrs after 1hr warm-up and $t_{amb} = 25 \pm 1$ °C	<b>CV</b>		$3.10^{-4}$	
	<b>CC</b>		$1.10^{-3}$	

Analog Programming		CV	CC
<b>Programming inputs</b>			
input range		0 - 5 V	0 - 5 V
accuracy		$\pm 0.2\%$ + 0 mV ... + 8 mV	$\pm 0.5\%$ + 0 mV ... + 20 mV
temp. coeff. offset		10 $\mu$ V / °C	150 $\mu$ V / °C
input impedance		1 MOhm	1 MOhm
<b>Monitoring output</b>			
output range		0 - 5 V	0 - 5 V
accuracy		$\pm 0.2\%$ - 3 mV ... + 11 mV	$\pm 0.5\%$ - 5 mV ... + 0 mV
temp. coeff. offset		10 $\mu$ V / °C	150 $\mu$ V / °C
output impedance		20 Ohm	20 Ohm

<b>Reference voltage</b> on prog. connector	$V_{ref}$ TC	$5.165 \pm 31$ mV typical 12 ppm / max. 30 ppm
<b>Status outputs</b> CC-status OVP-status		5V / 10 mA = logic 1 5V / 10 mA = logic 1
<b>Remote shutdown</b>		with + 5V or relay contact



Programming speed	SM 1540-D		SM 7020-D		SM 3004-D	
<b>programming UP</b>						
settling within	50 mV	500 mV	50 mV	1 V	200 mV	5 V
output voltage step	0 → 15 V	0 → 15 V	0 → 35 V	0 → 35 V	0 → 150 V	0 → 150 V
time, (100 % load)	30 ms	18 ms	50 ms	12 ms	50 ms	14 ms
time, (10 % load)	30 ms	10 ms	50 ms	12 ms	40 ms	12 ms
output voltage step	-	-	0 → 70 V	0 → 70 V	0 → 300 V	0 → 300 V
time, (100 % load)	-	-	100 ms	40 ms	100 ms	60 ms
time, (10 % load)	-	-	100 ms	12 ms	60 ms	16 ms
<b>programming DOWN</b>						
settling within	50 mV	500 mV	50 mV	1 V	200 mV	5 V
output voltage step	15 → 0.5 V	15 → 0.5 V	35 → 2 V	35 → 2 V	150 → 10 V	150 → 10 V
time, (100 % load)	30 ms	20 ms	50 ms	10 ms	50 ms	14 ms
time, (10 % load)	200 ms	200 ms	200 ms	100 ms	180 ms	120 ms
output voltage step	-	-	70 → 2 V	70 → 2 V	300 → 10 V	300 → 10 V
time, (100 % load)	-	-	100 ms	55 ms	100 ms	70 ms
time, (10 % load)	-	-	800 ms	120 ms	800 ms	700 ms
<b>Programming bandwidth</b>						
small signal	50 Hz		50 Hz		50 Hz	
large signal, 100 % load	50 Hz		50 Hz		50 Hz	
large signal, 10 % load	5 Hz		5 Hz		5 Hz	

	SM 1540-D	SM 7020-D	SM 3004-D
<b>Recovery time</b>			
recovery within	50 mV	50 mV	300 mV
di/dt of load step	4 A/μs	2 A/μs	0.5 A/μs
time, @ 50 - 100% load step	100 μs	150 μs	100 μs
max. deviation (high / low outp. range)	200 mV	80 / 150 mV	450 / 900 mV
<b>Noise suppression</b>			
line - line ⇒ output	88 dB	82 dB	75 dB
line - earth ⇒ output	88 dB	88 dB	75 dB
<b>Output impedance</b>			
CV, 0-100 kHz	< 40 mOhm	< 60 mOhm	< 700 mOhm
<b>Pulsating load</b>			
max. tolerable AC component			
of load current			
f > 1 kHz	10 A rms	5 A rms	1 A rms
f < 1 kHz	40 A peak	20 / 10 A peak	4 / 2 A peak


<b>Insulation</b>		
input / output		3750 Vrms (1 min.)
creepage / clearance		8 mm
input / case		2500 Vrms (1 min.)
output / case		600 V DC
<b>Safety</b>		EN 60950 / IEC 1010
<b>EMC</b>	<b>Emission</b>	EN50081-1, EN55022B, VDE 0871B, EN61000-3-2, EN61000-3-3
	<b>Immunity</b>	EN50082-1, EN50082-2, EN61000-4-2-lv3, EN61000-4-4-lv4, ENV50140-lv3, ENV50141-lv3, ENV50204-lv3, EN61000-4-5-lv3-diff-mode-on-output, EN61000-4-5-lv2-comm-mode-on-output, EN61000-4-5-lv4-on-input, EN61000-4-11 (lv=level)
<b>Operating Temperature at full load</b>		- 20 to + 50 °C
<b>Humidity</b>		max. 95% RH, non condensing, up to 40 °C max. 75% RH, non condensing, up to 50 °C
<b>Storage temperature</b>		- 40 to + 85 °C
<b>Thermal protection</b>		Output shuts down in case of insufficient cooling
<b>MTBF</b>		500 000 hrs

<b>Hold-Up time</b> 100% load Vin = 220V AC 50% load Vin = 220V AC	20 ms 45 ms
<b>Turn on delay</b> after mains switch on	500 ms
<b>Inrush current</b>	3C A @ 230V AC input

	SM 1540-D	SM 7020-D	SM 3004-D
<b>Series operation</b> max. total voltage Master / Slave operation	600 V yes	600 V yes	600 V yes
<b>Parallel operation</b> max. total current Master / Slave operation	no limit yes	no limit yes	no limit yes
<b>Remote sensing</b> max. voltage drop per load lead	2 V	2 V	not available
<b>OVP</b> trip range	0 - 17 V	0 - 80 V	0 - 350 V

<b>Potentiometers</b> front panel control with knobs resolution	standard 0.03 %	standard 0.03 %	standard 0.03 %
screwdriver adjustment at front panel at rear panel	option P001 option P002	option P001 option P002	option P001 option P002
<b>Meters</b> digital scale voltage / current accuracy	digital / 3.5 digit 0 - 15.00 V / 0 - 40.0 A 0.5% + 2 digits	digital / 3.5 digit 0 - 70.0V / 0 - 20.0 A 0.5% + 2 digits	digital / 3.5 digit 0 - 300 V / 0 - 4.00 A 0.5% + 2 digits



<b>Input Terminals</b> input connections	10 Amp / 65 °C Euro-connector at rear panel		
<b>Output Terminals</b> at rear panel	M8 bolts	6 mm bind post	4 mm bind post
<b>Programming connector</b>	15 pole D-connector at rear panel		
<b>Cooling</b>	convection cooling		
<b>Enclosure</b> degree of protection	IP20		
<b>Dimensions</b> behind front panel front panel	428 x 89 x 257 mm 483 x 89 mm (19", 2 U)		
<b>Weight</b>	7.4 kg		

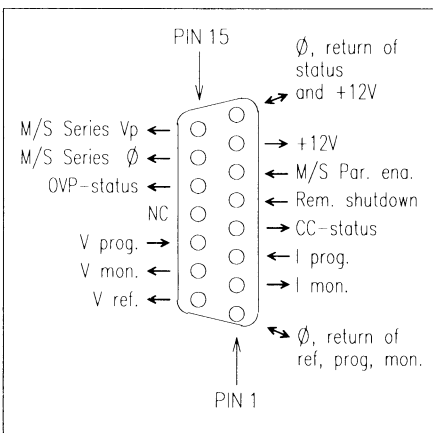

Connections programming connector

CV= Constant Voltage  
CC=Constant Current  
OVP=Over Voltage Protector

Specifications measured at  
 $t_{amb} = 25 \pm 5 \text{ }^\circ\text{C}$  and  $V_{in} = 220 \text{ V AC}$ ,  
50 Hz unless otherwise noted.

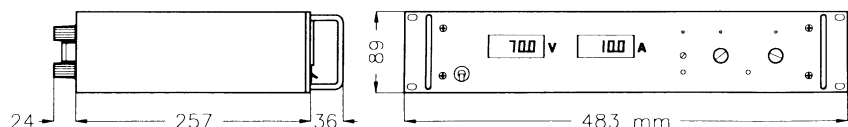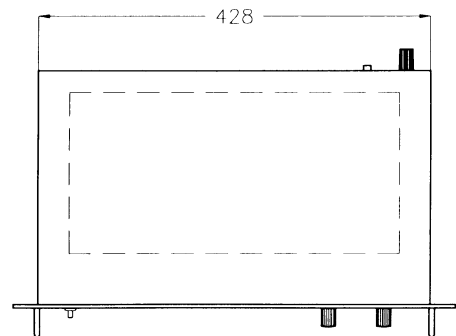

# DESCRIPTIONS

## 1) OUTPUT

The SM7020-D and SM3004-D feature an AUTORANGING facility where the power supply automatically switches over between two current ranges. This switching, which is unnoticeable the user, results in a versatile power supply with **twice the output voltage range**. This means for the SM7020-D: the maximum output power (700W) is available at both 35V and 70V. For the SM3004-D: 600W at both 150V and 300V. Fig. 2 - 1 shows the output ranges.

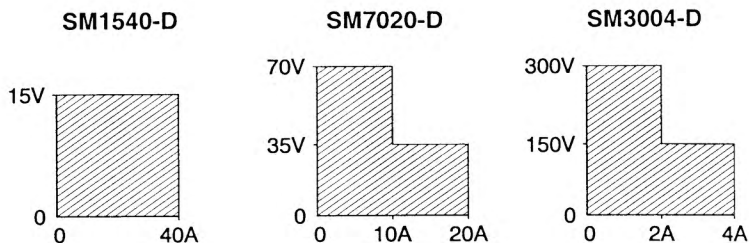


fig. 2 - 1  
the output ranges  
every point in hatched area can be used

Note: the voltage and current settings will never be altered by the AUTORANGING, only the maximum attainable current will change. E.g. on the SM3004-D, with an initial setting of 1.5A. When the voltage is decreased from 200V to 150V the max. current output remains 1.5A as originally set.

### ◦ DISPLAY CV/CC SETTING FUNCTION

The setting of the voltage and current control can be observed on the front panel meters by pressing the Display CV/CC Setting button. This allows the current limit to be set when operating in the CV mode without shorting the output terminals, and the voltage limit to be set when operating in the CC mode without opening the load leads.

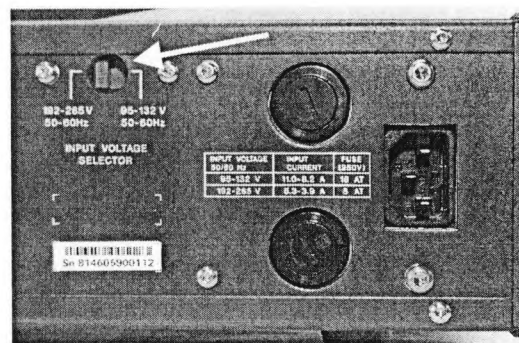


fig. 2 - 2  
input voltage selector at rearpanel

### ◦ OVERLOAD PROTECTION

The power supply is fully protected against all overload conditions, including short circuit.

## 2) INPUT VOLTAGE

The power supplies have a wide input voltage range. The 2 ranges (110V / 220V) are selectable with a switch on the rearpanel, see fig. 2 - 2. In the 220V position the units can also be used as a DC/DC converter.

### ◦ nonstandard line input voltage

The units will still operate at a line input voltage lower than standard, but with a reduction in output power. Fig. 2 - 3 shows the max. output current as a function of output voltage with AC or DC line input voltage as a parameter.

Example: When the required output voltage is 12.5 V at a line input voltage of 150 V AC.

Fig. 2 - 4 shows the maximum current for the SM1540-D to be 32.8 A.

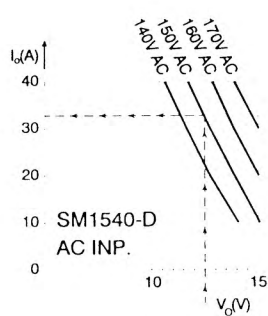
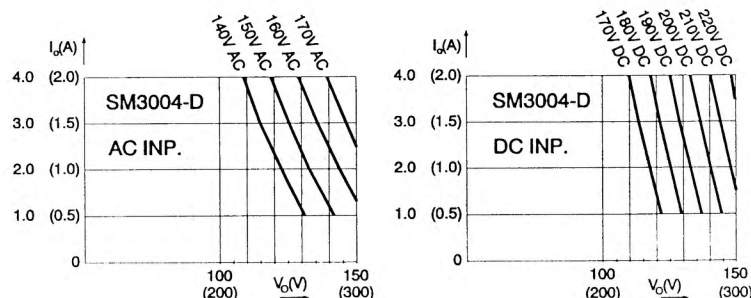
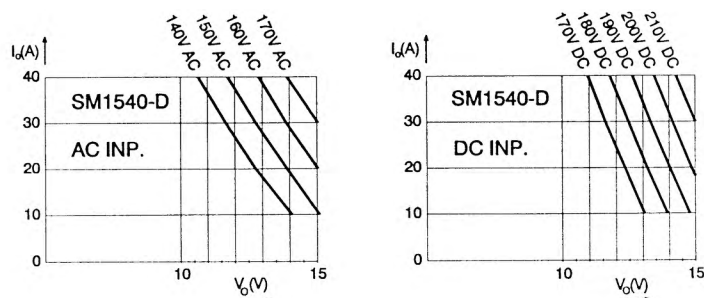


fig. 2 - 4  
example how to use the graph

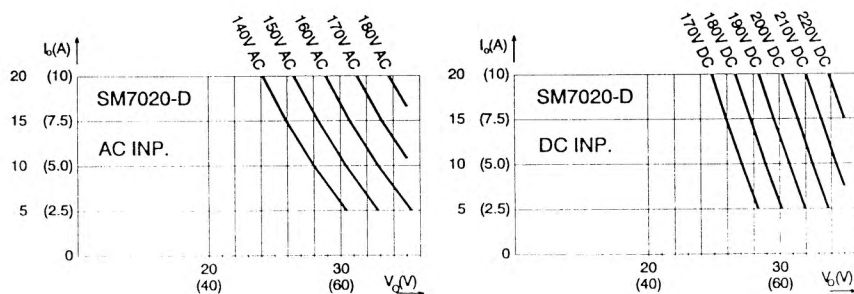


fig. 2 - 3  
max. output current vs output voltage with AC or DC line input voltage as a parameter

3) **INPUT CURRENT**

The input circuit has a large series choke to improve the waveform. The result is: a lower rms input current, less mains distortion and no large peak currents. The units also have an inrush current limiter and a soft start circuit, for smooth switch on.

◦ FUSES- At 220V: 8A Slow blow, at 110V: 16A Slow blow.

4) **STANDBY INPUT POWER**

The unit consumes very little power when in standby. This makes it possible to leave the input power on and use the Remote ShutDown input (pin 5 on prog. connector rear panel) to disable the output.

5) **EFFICIENCY**

The efficiency is very high and constant over a wide output current range, see fig. 2 - 5. High efficiency also means low power loss and low heat generation.

6) **REGULATION**

The load regulation should be measured directly on the output terminals. A few cm of cable can have a voltage drop of several mV (at high current!).

7) **RIPPLE & NOISE**

The output ripple is very low with almost no spikes. The ripple voltage has to be measured directly on the output terminals using a probe with very short connections (to avoid pick up of magnetic fields). See fig. 2 - 6 and fig. 2 - 7.

◦ LOW TEMPERATURE

At -20 °C the CV ripple increases to the following values:

	SM1540-D	SM7020-D	SM3004-D
CV ripple (rms/pp) @ -20 °C	6 / 20 mV	10 / 35 mV	no change

8) **PROGRAMMING INPUTS**

The output voltage and current can be programmed by an external analog voltage. This programming is very accurate and linear, (non-linearity < 0.15 %). The levels are all standardised on 5V. Always use a **shielded cable** for programming.

The inputs have a protection circuit formed by a series resistor and a parallel zener, see fig. 2 - 8. The capacitor limits the speed to a safe value. Note that the analog inputs (and outputs) are **not floating, but the common is connected to the negative output terminal**. Wrong connection of Ø can cause earth loops which can trip the fuse. After removing the fault, the fuse will reset (PTC-fuse). To prevent earth loops, use isolated programming with the **ISO AMP MODULE** (δ-product).

The programming mode (program and manual) can be selected by means of the prog. switches which are situated below the programming connector, see fig. 2 - 10.

9) **IEEE 488 / RS232 PROGRAMMING**

The prog. connector on the power supply is both pin and level compatible with the external interfaces **PSC44M** and **PSC232** (both δ-products).

Voltage and current can easily be programmed and read back, also the CC and OVP status can be read by the computer. Always use a **shielded cable** for programming.

10) **MONITORING OUTPUTS**

The monitor outputs give a voltage 0 - 5 V proportional to the output current or voltage. The output current can easily be measured without an external shunt using the I monitor, see fig. 2 - 9. The monitor outputs are buffered by op-amp's and protected by series resistors and parallel zeners see fig. 2 - 11. The table in fig. 2 - 12 shows the impedance levels of the monitoring outputs.

**Note:** in case of a **pulsating load**, the I monitor voltage will not exactly

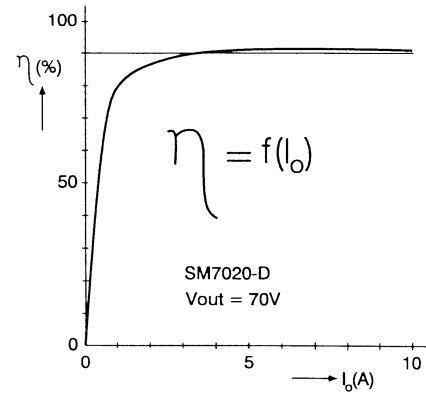


fig. 2 - 5  
efficiency vs output current, SM7020-D  
DC input, Vout = 70 V

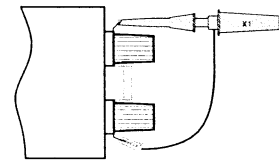


fig. 2 - 6  
measuring ripple voltage  
**WRONG!**

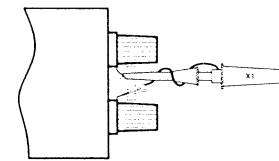


fig. 2 - 7  
measuring ripple voltage  
**RIGHT!**

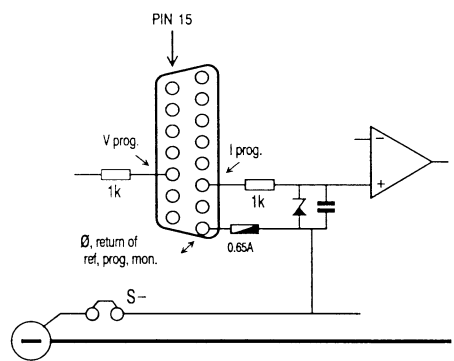


fig. 2 - 8  
programming inputs  
(internal circuit)

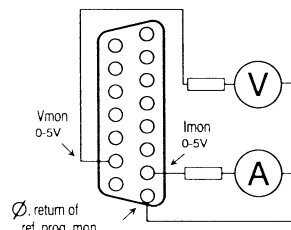


fig. 2 - 9  
external meters  
using monitor outputs

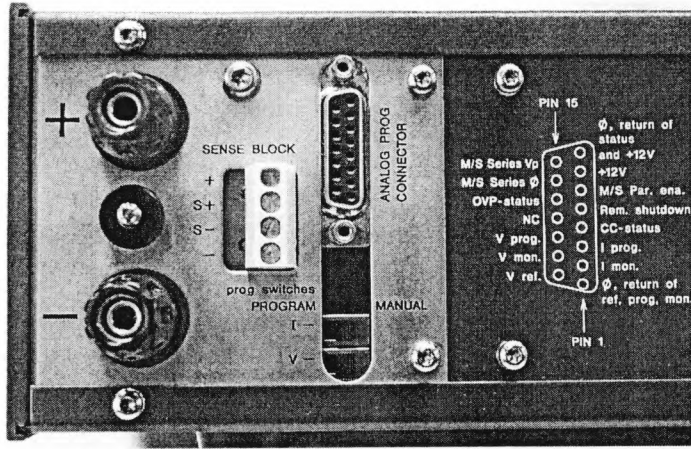


fig. 2 - 10 location of output terminals, sense block, analog prog. connector and PROG. / MAN. switches on rear panel (SM3004-D has no sense block).

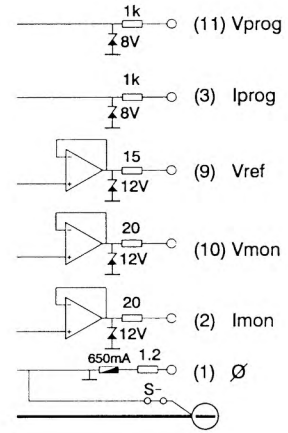


fig. 2 - 11 buffered monitor outputs (internal circuit)

Output	pin	Ro	Io max
Vref	9	15 Ohm	10 mA
Vmon	10	20 Ohm	10 mA
Imon	2	20 Ohm	10 mA
+12V	7	500 Ohm	25 mA
∅	1	1.2 Ohm	

fig. 2 - 12 outputs on programming connector

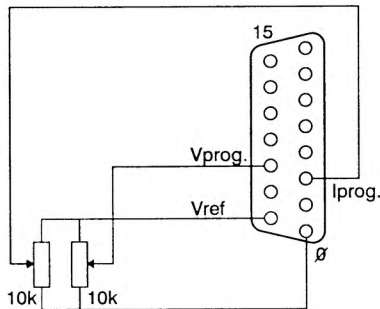
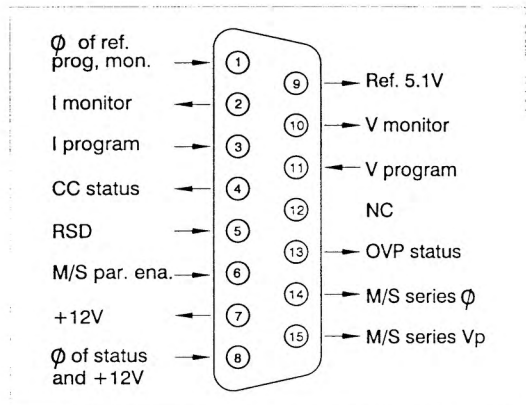


fig. 2 - 14 external potmeters

match the output current. This is mainly caused by the current through the output capacitors. Remote sensing will worsen this effect.

11) STATUS OUTPUTS

The status outputs have an open output voltage of 5 V and a short circuit current of 10 mA. This makes it possible to drive directly: an opto-coupler, a TTL gate or a CMOS gate (put leakage resistor to ∅).

12) REMOTE SHUTDOWN (RSD)

A voltage of +5V on the Remote ShutDown input on the programming connector will switch off the power circuit of the unit. In standby mode the power supply consumes very little power.

It is also possible to use a relay contact or a switch to shut down the unit: connect a switch between Vref and Rem. Shudt. (pin 9 and 5). Note: The Remote ShutDown will also cause the OVP-led to burn and the OVP-status will be high.

13) PROGRAMMING RESPONSE TIME

The response time is measured with a step waveform at the CV prog. input. Programming from a low to a high output voltage is nearly load independent, but programming down to a low voltage takes more time

pin	description
1	∅, return of reference, prog. inputs and monitor outputs.
2	current monitor output (0 - 5V)
3	current programming input (0 - 5V)
4	CC status output, logic 1 = CC mode (5 V / 10 mA)
5	Remote shutdown
6	M/S parallel, slave enable (only for autoranging)
7	+12 V output (Ri = 500 Ohm)
8	∅, return of status outputs, +12 V and remote shutdown
9	reference voltage 5.1 V
10	voltage monitor output (0 - 5V)
11	voltage programming input (0 - 5V)
12	NC
13	OVP status output, logic 1 = OVP mode (5 V / 10 mA)
14	M/S series, output for slave (∅)
15	M/S series, output for slave (prog.)

fig. 2 - 13 connections ANALOG PROG. CONN.

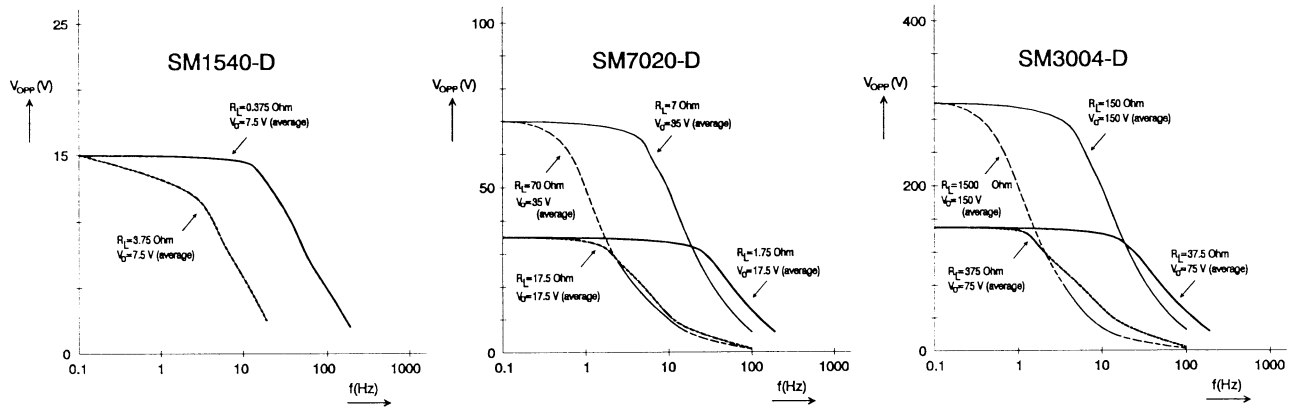


fig. 2 - 15  
max. peak to peak output voltage swing vs frequency

on lighter loads. This is caused by the output capacitors, which can only be discharged by the load because the power supply cannot sink current.

14) **PROGRAMMING BANDWIDTH**

For small signals the bandwidth is 50 Hz, but for large signals there is a limitation in the maximum amplitude of the output waveform. The output capacitors limit the max. slew rate. Fig. 2 - 15 shows the maximum peak to peak output voltage swing as a function of frequency, with the load as a parameter. The higher the load resistance the lower the max. amplitude. The measurements were carried out using a sine wave. The DC level of the output is 50 % of the max. output voltage. On the SM7020-D and SM3004-D measurements were also carried out at 25 % of the max. output voltage.

15) **RECOVERY TIME**

Fig. 2 - 16 shows the recovery time for the SM7020-D at 25 °C, a 50 – 100 % load step and at maximum output voltage. At –20 °C the recovery time increases by 100 µs.

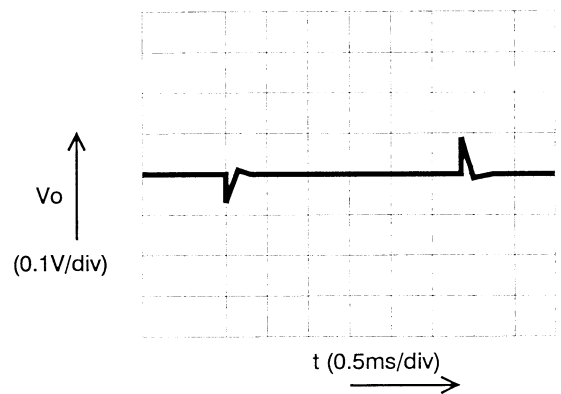


fig. 2 - 16  
recovery time SM7020-D  
50 - 100 % load step,  $V_o = 70 \text{ V}$

16) **NOISE SUPPRESSION (input / output)**

The input / output noise suppression is measured with a pulse generator (a) in series with the line input or (b) between input and case (earth). The generator should produce a high energy pulse of about 300 V. If there is an electrical connection between the output and the input through the oscilloscope, you will get a false reading. The suppression for the SM3004-D is lower, but the relative disturbance on the output is comparable to the SM1540-D.


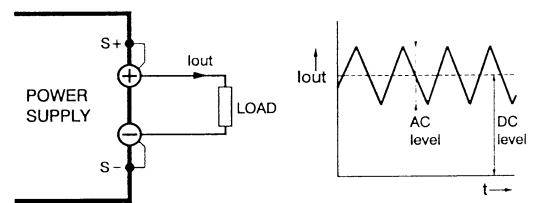


fig. 2 - 17  
pulsating load current

17) **PULSATING LOAD**

To avoid overheating the output capacitors, the AC component of the load current should be limited. See fig. 2 - 17.

One method of decreasing the AC current through the output capacitor is by using a large external electrolytic capacitor in parallel with the load. Care must be taken so that the capacitor in combination with the lead inductance will not form a series resonant circuit!

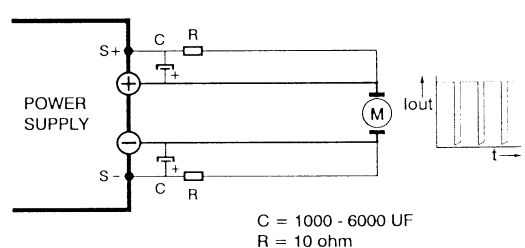

C = 1000 - 6000 UF  
R = 10 ohm

fig. 2 - 18  
remote sensing on a pulsating load

	SM1540-D	SM7020-D	SM3004-D
AC-level max.	10 A rms	5 A rms	1 A rms

When using **remote sensing** on a pulsating load (for instance a DC-motor), use a capacitor between S+ and + and between S- and - and a series resistor in the sense leads. See fig. 2 - 18. Like this the AC-component caused by the voltage drop across the load leads, is filtered.

## 18) INSULATION

For safety the insulation of the separating components (transformers) between input and output is tested at 3750 Vrms during 1 minute. This is tested before assembling.

**Warning!** The 3750 Vrms cannot be tested afterwards on the assembled unit because the insulation between the components on the input side to the case (like the bridge rectifier) is specified at 2500 Vrms. Since the insulation output - case is low (only 600 VDC) the insulation of the primary components to case will break down when 3750 Vrms is applied between input and output ( $2500 \text{ Vrms} + 600 \text{ VDC} < 3750 \text{ Vrms}$ ). See also fig. 2 - 19.

**Note:** when testing the insulation, take care to charge and discharge the capacitors between input - case and output - case slowly (e.g. in one second). This to prevent high peak currents, which could destroy the power supply. Make sure to have discharged the capacitors completely before using it again.

## 19) RFI SUPPRESSION

Both the input and output have RFI filters, resulting in very low conducted RFI to the line and load. Due to the output filter the output voltage is very clean, having almost no spikes.

## 20) OPERATING TEMP

At full power the operating temperature range is  $-20$  to  $+50$  °C. From  $50$  to  $75$  °C the output current has to be derated linearly to 20 % at  $75$  °C. See fig. 2 - 20. These temperatures hold for normal use, i.e. the air must be able to pass freely vertically along and through the unit.

## 21) THERMAL PROTECTION

A thermal switch shuts down the output in case of insufficient cooling. After cooling down the unit will start working again. In this condition the OVP led on the frontpanel will burn, and the OVP status output will be high.

## 22) HOLD - UP TIME

The hold - up time depends on the load, output voltage and line input voltage. A lighter load, a lower output voltage or a higher line input voltage all result in a longer hold - up time, see fig. 2 - 21. For example: the SM1540-D at 220 VAC input and 12 V / 40 A output will have a hold-up time of 50 ms.

## 23) TURN ON DELAY

The output voltage is available 0.5 sec after mains switch on.

## 24) INRUSH CURRENT

The inrush current is limited by a 50 Ohm PTC resistor, resulting in a very low current during switch on. The input current during switch on will be lower than during operation at full load.

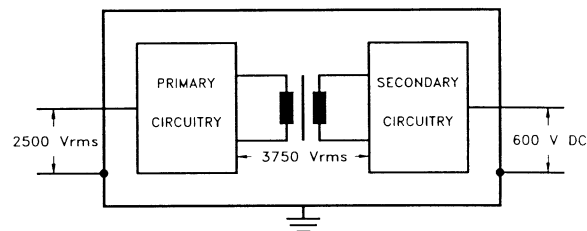


fig. 2 - 19  
insulation test voltages

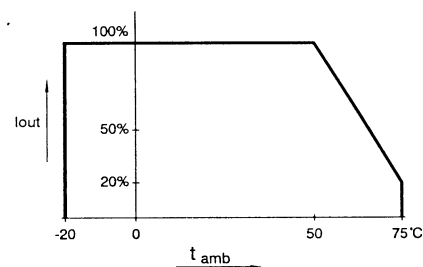


fig. 2 - 20  
operating temperature ranges

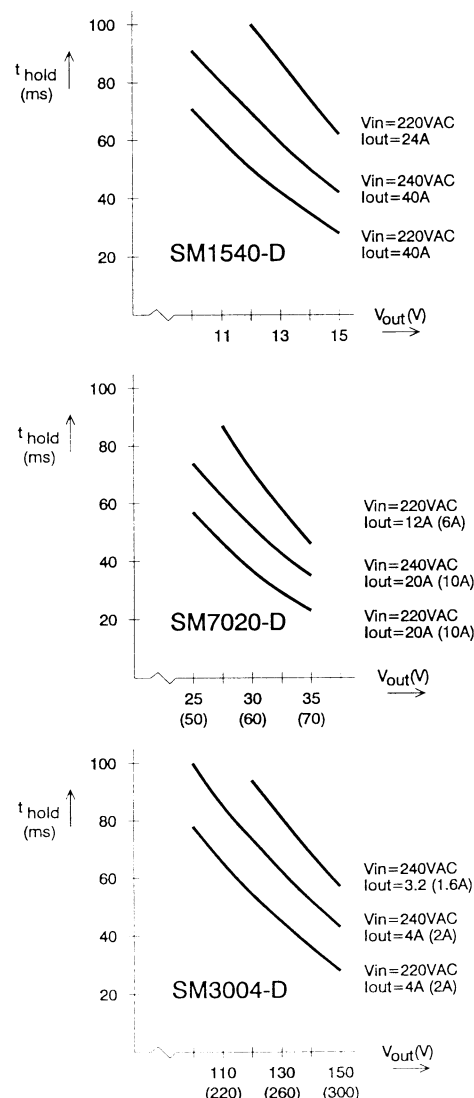


fig. 2 - 21  
holdup time vs  $V_{out}$  with line input  
and  $I_{out}$  as parameter

25) **SERIES OPERATION**

Series operation is allowed up to 600V total voltage. The power supplies can be connected in series without special precautions.

For easier control, Master / Slave operation is recommended (fig. 2 - 23).

By using the *Master / Slave - Series* feature a **dual tracking** power supply can be made with one unit as master and one as slave. See fig. 2- 22 (detailed descriptions in chapter "operations").

26) **PARALLEL OPERATION**

Paralleling of the units has no limitations. The power supplies can be connected in parallel without special precautions.

For easier control, Master / Slave operation is recommended (fig. 2 - 24).

**Note: Master / Slave parallel operation is not recommended for more than 4 units, consult factory for a solution with more than 4 units.**

27) **MASTER / SLAVE OPERATION**

The Master / Slave feature makes it possible to use the power supplies as building blocks to form one large unit, see fig. 2 - 23 and 24.

Mixed parallel - series operation is also possible (fig. 2 - 25), to a maximum of 600V.

The resulting combination of units behaves like one power supply and can be programmed on the master. In the Master / Slave mode the autoranging feature still works. Fig. 2 - 26 shows a computer controlled M / S parallel combination.

The slaves will follow the master. The result is true **current or voltage sharing** in the parallel or series mode respectively.

For series and mixed parallel - series operation the **MASTER / SLAVE SERIES ADAPTER** (&-product) is recommended. Without this ADAPTER it is also possible but it often gives problems. For parallel operation connections can easily be made on the analog programming connector.

In series mode the master controls one slave, which in turn controls the second slave and so on. In parallel mode the master controls all the slaves.

28) **REMOTE SENSING**

The voltage at the load can be kept constant by remote sensing. This feature is not recommended for normal use but only when the load voltage is not allowed to vary a few millivolts. Always use a **shielded cable** for sensing. Note that the SM3004-D has no remote sensing.

In order to compensate for the voltage drop across the load leads, the unit will have to supply a higher voltage:  $U_{out} = (\text{voltage drop across each lead}) + (\text{voltage across the load})$ , see fig. 2 - 27. The **OVP** reads the voltage directly at the output and the setting must be increased by the total voltage drop across the load leads.

The voltmeter is connected to the sense leads and therefore reads the voltage across the load and **not** the voltage on the output terminals.

The sense leads are protected for **accidental interruption**, in which case the output voltage will go to a max. of 115% of the set value.

**Warning:** Do not interrupt the minus lead while the S- lead is still connected to the load, during operation. It is possible that the capacitor C808 on P385 or P386 will be damaged.

For sensing on a **pulsating load** see par.17) of this chapter.

29) **OVP**

The Over Voltage Protector will protect your circuit from unwanted high voltages.

A high output voltage could be caused by accidental interruption of leads, accidentally turning up the voltage potmeter or a defect in the power supply. The OVP circuit uses a separate voltage divider connected directly to the output terminals.

The OVP limits the output voltage to a value which can be set by the OVP potmeter on the front panel. While doing this, press the DISPLAY OVP SETTING button to read the limit value in the left display. The led on the front panel will indicate whether the OVP has reached the limit. The OVP status output will give a logic 1 (+5 V)

Note: The Thermal Shutdown and Remote Shutdown will also cause the OVP-led to burn and the OVP-status will be high.

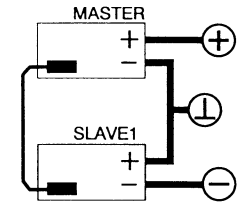


fig 2 - 22

Dual tracking power supply

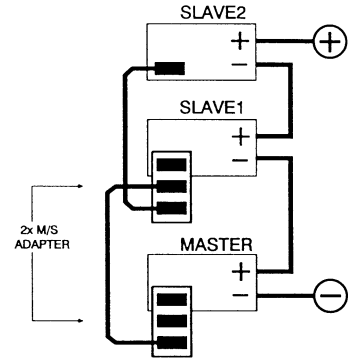


fig 2 - 23

Master / Slave Series operation

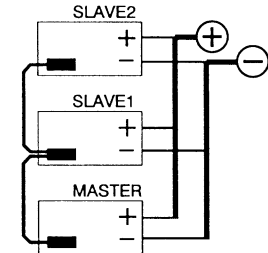


fig 2 - 24

Master / Slave Parallel operation

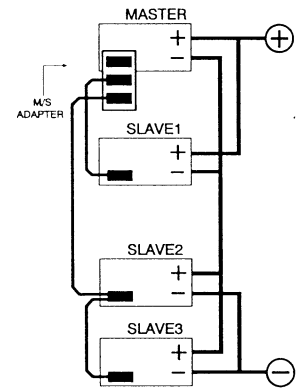


fig. 2 - 25

Master / Slave mixed Series-Parallel

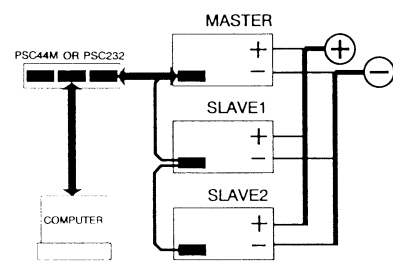


fig. 2 - 26

the Master / Slave combination can also be programmed with the interfaces PSC44M or the PSC232



When the OVP status output is used as an indication for accidental interruption of leads, a defect in the power supply etc., it is recommended to set the limit well above the working output voltage to avoid accidental limiting. The recommended OVP set voltages can be read from the following table:

Unit:	SM1540-D	SM7020-D	SM7020-D	SM3004-D	SM3004-D
		range 0 - 35 V	range 35 - 70 V	range 0-150 V	range 150-300 V
V <sub>ovp</sub>	V <sub>out</sub> + 2V	V <sub>out</sub> + 3V	V <sub>out</sub> + 5V	V <sub>out</sub> + 10V	V <sub>out</sub> + 25V

Example: For a SM7020-D set at 24V output voltage it is recommended to set the OVP on 24 + 3 = 27V.

30) **POTENTIOMETERS**

- Standard: - CV and CC potentiometers with knobs at front panel, OVP potentiometer with screwdriver adjustment at the front panel.
- Option P001: - Screwdriver adjustment for CV, CC and OVP at the front panel, fig. 2 - 28.
- Option P002: - Screwdriver adjustment for CV, CC and OVP at the rear panel (no potentiometers at front panel), fig. 2 - 29.

31) **COOLING**

The cooling is by natural convection, **no noisy blowers** are present. The unit should have sufficient free space to let the air flow vertically through the unit. See fig. 2 - 30. A distance of minimum 5 cm around the unit is recommended.

**For long life** the temperature of the air entering the unit, should be below 35 °C under normal conditions. Under extreme conditions it should be below 50 °C.

32) **DIMENSIONS**

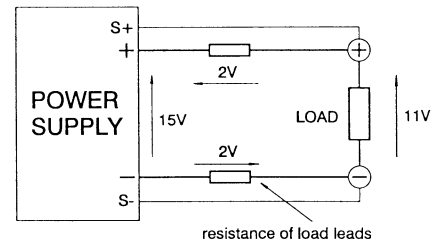
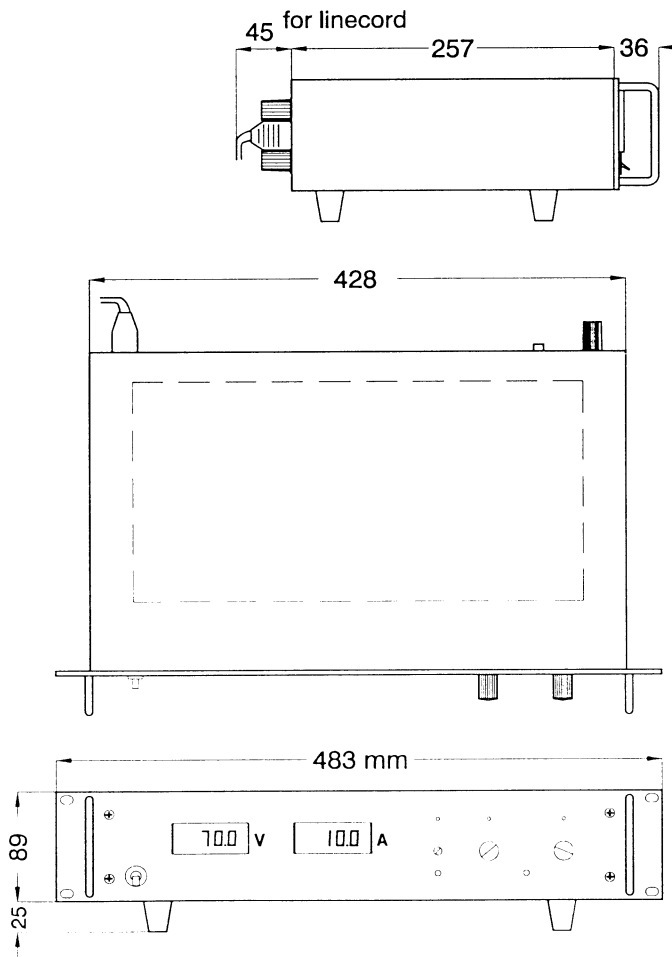


fig. 2 - 27

remote sensing, voltage drop in load leads subtracts from max. output

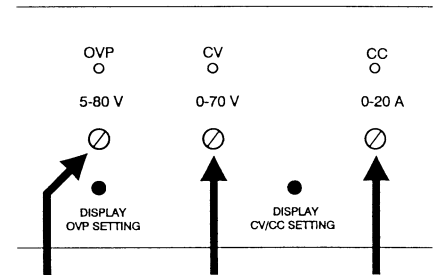


fig. 2 - 28

optional screwdriver adjustment at front panel

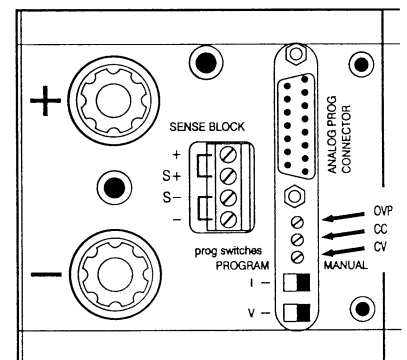


fig. 2 - 29

optional screwdriver adjustment at rearpanel

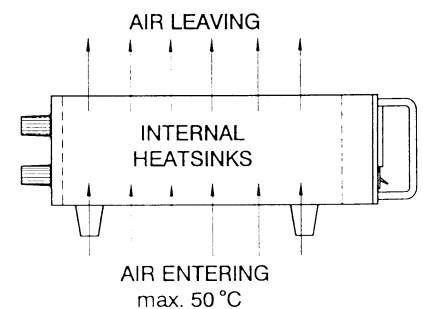


fig. 2 - 30

vertical airflow through the unit

## CIRCUIT DESCRIPTION

The 220 V AC line voltage is rectified by a bridge rectifier and smoothed by a large electrolytic capacitor. The 50 Hz choke in the input circuit improves the waveform of the input, so that no low frequency distortion is produced on the line voltage.

Carefully designed RFI filters protect the line and the load from the high frequency interference produced inside the power supply.

When the unit is switched on, the electrolytic capacitor is charged via the resistor of the SOFT START circuit, so no large inrush current will flow. As soon as the voltage is sufficiently high the power supply starts working and the series resistor is bypassed by a triac.

The operating switching frequency of 100 kHz has many advantages like small size, light weight, low ripple and fast regulation.

The rectified 220 V (300 V DC) is chopped by the transistors and transformed to a lower voltage. This 100 kHz power converter is of the feed forward type. The regulation is achieved by pulse width modulation.

Careful design, over-rating of vital components, several built-in protections and cool operation (because of the very high efficiency) make the SM series very reliable power supplies which can be used continuously at maximum rating.

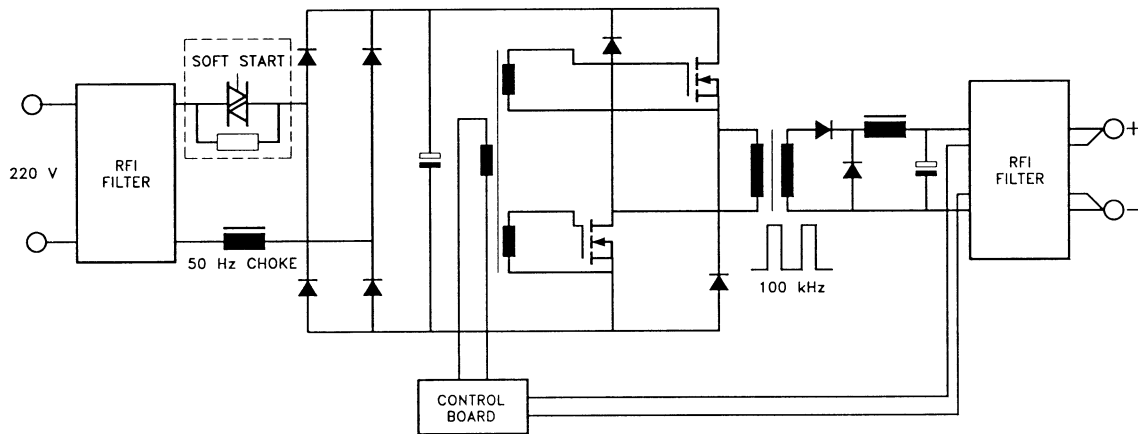


fig. 2 - 31 simplified functional diagram of SM1540-D, SM7020-D, SM3004-D

# OPERATING MANUAL

## 1) OPERATING THE UNIT FOR THE FIRST TIME

- Set the **input voltage selector** switch found on the rear panel to the required input voltage (110/230V). A wrong setting can seriously damage the unit. Do **not** switch the selector switch when the unit is in use.
- Check input fuses. For 110 V operation fuses have to be replaced. See text at rear panel.
- Check that there is no condensation on the unit. If there is, allow some time to dry.
- Set the prog. switches on the rear panel on **MANUAL**.
- Check that there is a link between + and S+ and between – and S– on the SENSE BLOCK (on rear panel). **SM3004-D has no remote sensing!**
- Set OVP potentiometer (on front panel) to maximum (fully clockwise). Use a screwdriver to set the OVP voltage.
- With **high output current** (SM1540-D!) make sure to use low resistive connections between the power supply and the load:
  - Mount the cable lugs between the two nuts and washers.
  - Only use nuts and washers supplied with the unit (tinned brass).
  - Never use extra washers, spring washers, serrated locks etc.
- Switch on unit.
- Turn both the CV and CC potentiometer a few turns clock wise. A voltage should now be present on the output.
- By pressing the DISPLAY CV/CC SETTING button the meters will show the setting of the CV and CC potentiometer.
- By pressing the DISPLAY OVP SETTING button the volt meter will show the setting of the OVP potentiometer.
- When the power supply is used on a fixed output voltage it is highly recommended to set the Over Voltage Protector. As set out in the following table:

SM1540-D	SM7020-D range 0 - 35 V	SM7020-D range 35 - 70 V	SM3004-D range 0 - 150 V	SM3004-D range 150 - 300 V
Vout + 2V	Vout + 3V	Vout + 5V	Vout + 10V	Vout + 25V

Example: For a SM7020-D set at 24V output voltage it is recommended to set the OVP on  $24 + 3 = 27V$ .

- Check that the cooling of the unit is not obstructed.

## 2) ANALOG PROGRAMMING

- Put the appropriate switch(es) in the position PROGRAM.
- Connect the programming voltage source(s) (0 - 5 V) to the ANALOG PROG. CONNECTOR on the rear panel. See fig. 3 - 1 and fig. 3 - 2. Always use a **shielded cable** for programming.
- If only the voltage is programmed, the maximum current can still be set with the CC potentiometer and vice versa. If this is not desirable the CC or CV can be set with an external potentiometer, in order to have a fixed setting.
- CAUTION:** The analog inputs are not isolated from the output. The  $\emptyset$  of the prog. input (pin 1) is internally connected to the S–, the S– is connected to the negative output. To protect the internal wiring a 650 mA self-resetting fuse is connected in series (F600 on P385, P386 or P387), see fig. 3 - 4. For isolated analog programming the **ISO AMP MODULE** ( $\delta$ -product) is recommended to avoid earth loops.
- To avoid hum or noise, the programming cable may have to be twisted in some cases.
- To program the unit by current instead of voltage, simply use a parallel resistor as a current to voltage converter.

## 3) IEEE 488 / RS232 PROGRAMMING

- With the external IEEE 488 /RS232 interface **PSC44M / PSC232** (both  $\delta$ -products) simply connect the prog. connector of the power supply with the mating connector of the PSC44M / PSC232 (pin compatible). Always use a **shielded cable**.
- Set both prog. switches to the position program.
- Both CV and CC can be programmed and read back. The CC and OVP status can also be read by the computer.

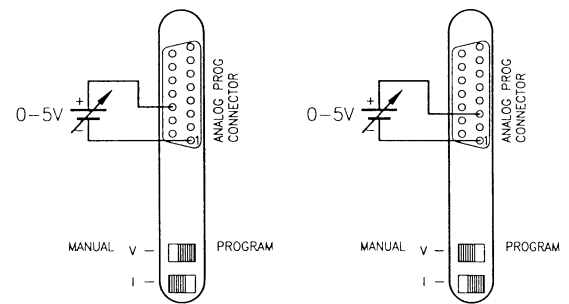


fig. 3 - 1  
programming by voltage  
left voltage -, right current programming

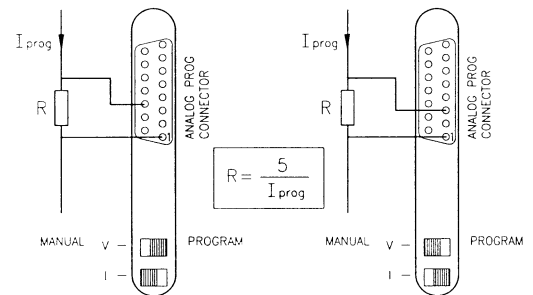


fig. 3 - 2  
programming by current  
left voltage -, right current programming

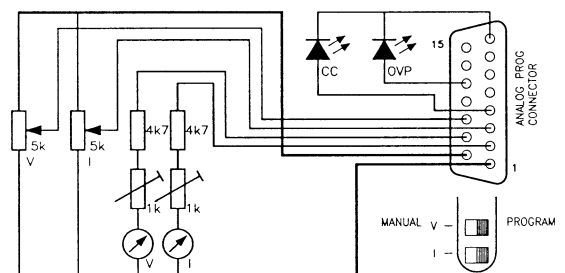


fig. 3 - 3  
remote control

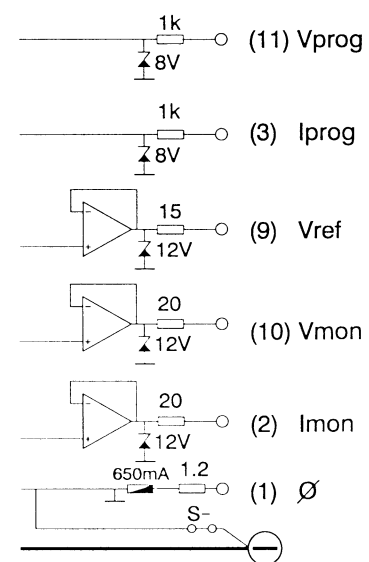


fig. 3 - 4  
internal circuit of programming inputs and outputs

4) **MONITORING OUTPUTS**

- The 5 V level is compatible with most interfaces.
- The monitoring outputs can drive a meter directly, fig. 3 - 3.

5) **STATUS OUTPUTS**

- The status outputs have a separate Ø connection (pin 8) to avoid unwanted offsets in the programming. This pin is protected with a 650 mA fuse (F601 on P385, P386 or P387).

6) **REMOTE SENSING**

- Not available on SM3004-D.
- Remove the links on the SENSE BLOCK (on rear panel) and connect sense leads (thin **shielded** measuring wires) to S+ and S-. See fig 3 - 5 and fig. 3 - 6.
- With remote sensing the voltage on the load can be kept constant. The voltage drop in the load leads will be compensated. This feature is not recommended for normal use, because it can easily give problems.
- Max. 2 V per load lead can be compensated. Note that the voltage drop in the leads decreases the max. output voltage rating. In fig. 3 - 7 it can be seen that on a 15V power supply only 11V will be available on the load when 2x 2V compensation is used.
- In order to prevent interference it is advisable to twist the sense leads. To minimise the inductance in the load leads keep the leads close to each other. The inductance of the loads leads could give a problem with pulsating loads. In this case a large electrolytic capacitor in parallel with the load will help. Check that the capacitor in combination with the load leads does not form a resonant circuit resulting in a large AC current flowing in the leads.
- Since the **voltmeter** is internally connected to the sensing terminals, it will automatically indicate the **voltage on the load**. Note that the voltage measured on the load will be lower than on the output terminals.
- The Over Voltage Protector measures the voltage on the output terminals, so the OVP setting should be increased by the total voltage drop in the load leads.

7) **BATTERY CHARGER**

- The CV / CC regulated power supplies are ideal battery chargers. Once the output is set at the correct voltage the battery will charge constantly without overcharging. This can be useful for emergency power systems.
- **Protective measures**  
Use a **CIRCUIT-BREAKER** in series in order to protect the power supply from **accidental reverse connection**, see fig. 3 - 8. The circuit-breaker should have a DC voltage rating 2x the battery voltage. Use the very fast type (Z), a type meant for protecting semiconductors.  
The unit has a reverse diode in parallel with the output, this diode and the wiring cannot withstand the thousands of amperes supplied by a wrongly connected battery.

Suggested Circuit Breakers for protection power supply			
Model	Type number Circuit Breaker	Brand	Remarks
SM1540-D	S281 UC-Z 40	ABB	
SM7020-D	S281 UC-Z 20	ABB	<b>extra parallel diode on output =OPTION P021</b>
SM3004-D	S282 UC-Z 4	ABB	<b>2 poles in series, extra parallel diode on output =OPTION P022</b>

- **Remote sensing** cannot be recommended, because it easily causes defects inside the power supply in case of wrong connection. If you really need remote sensing, please use the circuit in fig. 3 - 9 . The internal circuit can be protected by relatively small

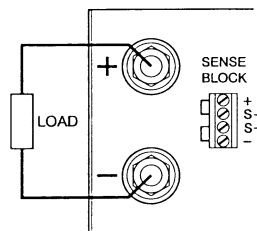


fig. 3 - 5  
local sensing

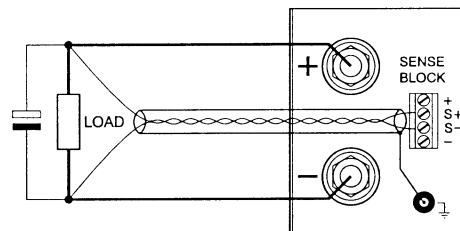


fig. 3 - 6  
remote sensing with shielded wires

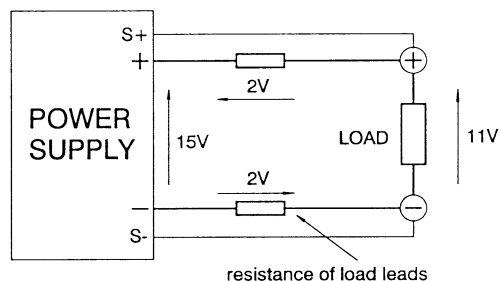


fig. 3 - 7  
remote sensing, voltage drop in load leads subtracts from max. output

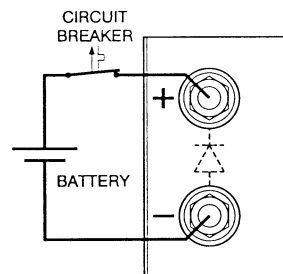


fig. 3 - 8  
charging battery with a circuit-breaker in series

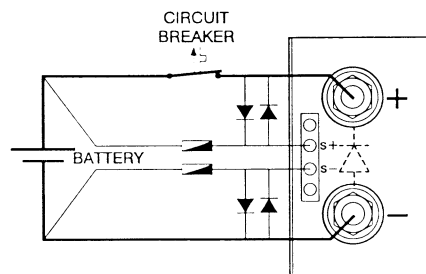


fig. 3 - 9  
protecting sense wires with diodes

anti-parallel diodes. To protect the anti-parallel diodes, please connect the fuses in series as indicated in fig. 3 - 9 . A practical choice for the fuses is 250mA, the diodes can be any normal 3 or 5A type.

- Note: The **SM7020-D** and **SM3004-D** need an extra parallel diode on the output, without this diode the internal diode will still blow. The diode should have a surge current rating of resp. 2000 and 3000 amps during 1msec ( $I_{FSM} = 2000 / 3000$  A). For the SM7020-D 2x BYT52PI200 and for the SM3004-D 2x BYT261PIV400 from ST will work. The SM7020-D with option P021 and the SM3004-D with option P022 have an extra diode built-in.

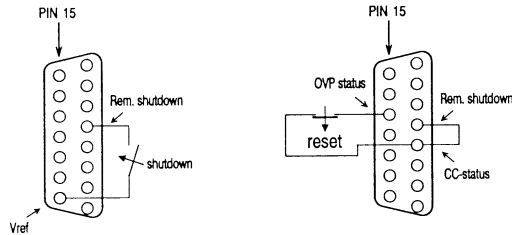


fig. 3 - 10

left: remote shutdown with switch,  
right: Over Current Trip

## 8) REMOTE SHUTDOWN / OVER CURRENT TRIP

- The remote shutdown can be operated with +5V or a relay contact, fig. 3 - 10.
- Using the remote shutdown input, an **Over Current Trip** could be made., fig. 3 - 10.

## 9) MASTER / SLAVE SERIES OPERATION

- For series operation the **MASTER / SLAVE SERIES ADAPTER** ( $\delta$ -product) is recommended. The advantage is that the masters position can be the upper or the lower unit (in particular for higher voltages, e.g. 150V and 300V). Other advantages are the fast and easy way of connecting.
- First, connect output terminals and test system in **normal series** operation. Ensure that all (output) power connections are reliable. An interruption of one of the power leads can cause a fuse to blow in the unit, see "trouble shooting".
- The voltage drop in the connecting leads between the units should be kept  $< 10$  mV.
- Second, switch off all units. When using the **M / S SERIES ADAPTER** connect units as shown in fig. 3 - 11. Use standard 15 pole (1:1) **shielded cables**. Without the ADAPTER, plug in prog. connectors with the connections according to fig. 3 - 12. Both prog. switches of the slaves should be in the position **PROGRAM**. Always use **shielded cables**. The shielding must be connected to the case of the supply.
- Do not forget the jumper on the slaves between pin 3 and pin 9 of the prog. connector. This jumper sets the current limit of the slaves at maximum.
- The max. number of slaves is only limited by the max. total voltage of 600 V.
- The **AUTORANGING** feature still works.
- WARNING when not using the M / S SERIES ADAPTER:** the master must always be on the positive (=upper) side of the combination. Wrong connection can damage the power supplies.

## 10) MASTER / SLAVE PARALLEL OPERATION

- Note: Master / Slave parallel is not recommended for more than 4 units, consult factory for using more than 4 power supplies in parallel.**
- First connect output terminals and test system in **normal parallel** operation. Ensure that all power connections are reliable. An interruption of one of the (output) power leads can cause a fuse to blow in the unit, see "trouble shooting".

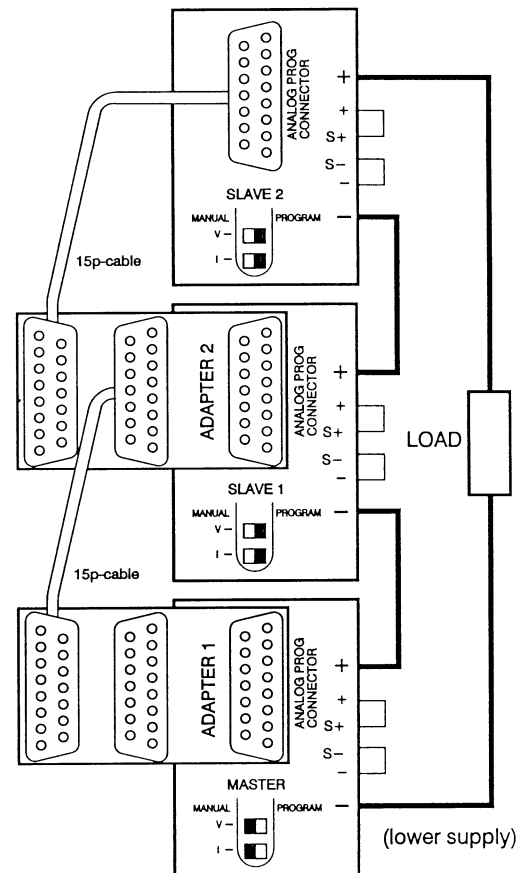


fig. 3 - 11

master slave series connection with  
two **M / S SERIES ADAPTERS**

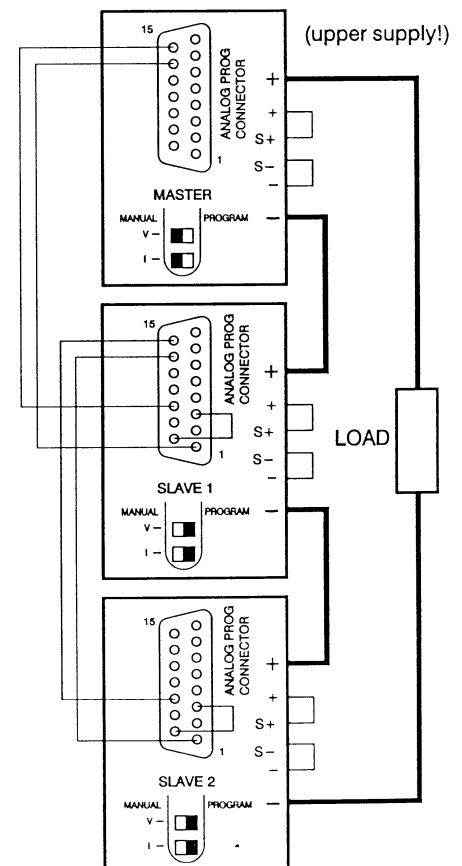


fig. 3 - 12

master slave series connection

- Second, switch off all units. Plug in prog. connectors with the connections according to fig. 3 - 13 (buss bar topology). Always use a **shielded cable**. The shielding must be connected to the case of the supply.  
Disconnect the links between the S- and - of the slaves **only**. If not removed the current sharing will not be proportional.  
Both prog. switches of the slaves should be in the position PROGRAM.
- The purpose of the link between pin 9 and 11 is to set the voltage limit of the slaves at maximum.
- an extra link on the slaves (between pin 6 and 8) is needed for the AUTORANGING feature.
- Keep the load close to the master. Keep wiring between master and slaves short. The voltage drop between a unit and the buss bar should be kept < 10mV.
- Accidental interruption of a negative load lead of a unit during operation will cause fuse F600 to blow, see section 'trouble shooting'.
- The S- and S+ could be connected to the load if desired, but this is not recommended because of the complexity.

12) **MASTER / SLAVE MIXED SERIES / PARALLEL OPERATION**

- For complex combinations as mixed series - parallel always use the **MASTER / SLAVE SERIES ADAPTER** ( $\delta$ -product).
- See fig. 3 - 14 for an example of how to connect 2 units in series in parallel with 2 units in series, controlled by 1 master.
- Note: A Master / Slave combination can always be programmed, also with the **IEEE488 / RS232 controller (PSC 44M / PSC232 (both  $\delta$ -products))**.

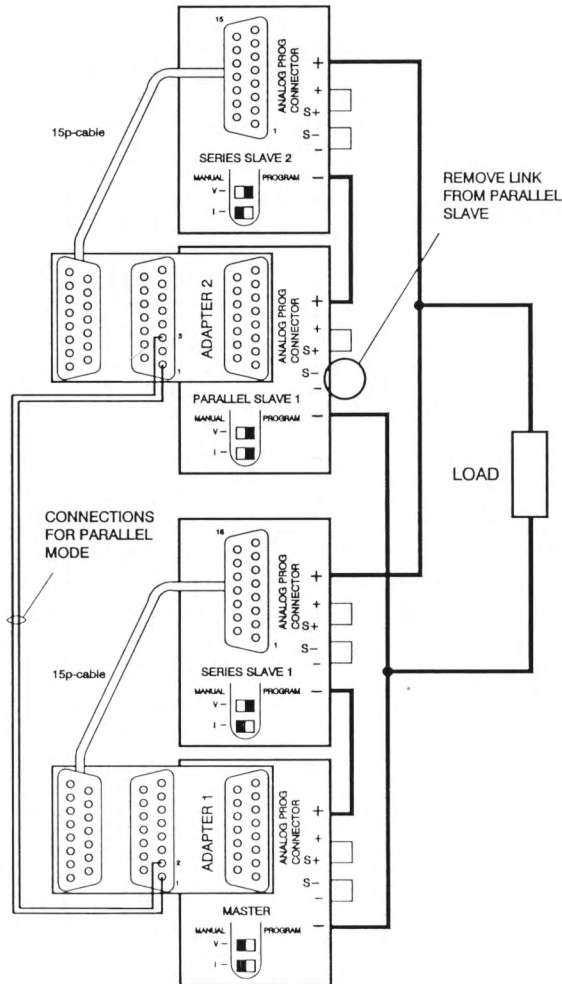


fig. 3 - 14

master slave mixed series - parallel connections with two M / S SERIES ADAPTERS

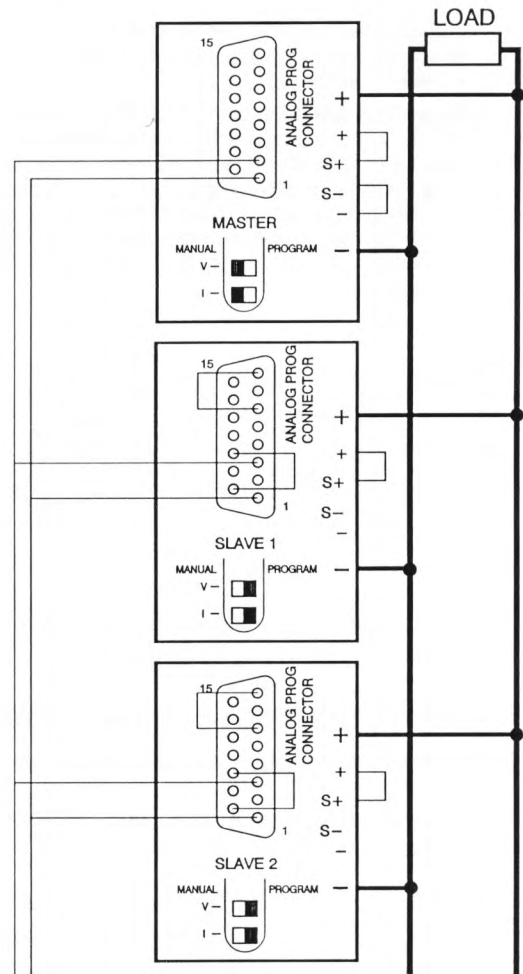


fig. 3 - 13

master slave parallel connections

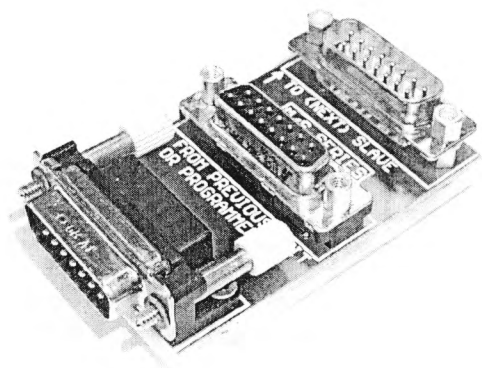


fig 3 - 15

The Master / Slave Series Adapter

## OPERATING AND STORAGE CONDITIONS

### 1) TEMPERATURE

- The operating temperature range at full load is  $-20$  to  $+50$  °C. But this temperature range only holds when the perforated bottom and cover are unobstructed and the temperature of the air entering is not higher than  $+50$  °C. See fig. 3 - 16.
- **Please note: a lower temperature extends the life of the power supply.**
- When the power supply is **mounted in a cabinet** please note that the temperature of the air entering should be kept low. Also avoid a short circuit in the airflow i.e. hot air leaving the perforated cover entering the bottom again.
- The storage temperature range is  $-40$  to  $+85$  °C.

### 2) HUMIDITY

- During normal operation humidity will not harm the power supply, provided the air is not aggressive. The heat normally produced in the power supply will keep it dry.
- **Condensation.** Avoid condensation inside the power supply, break-down could be the result. Condensation can occur during a period the power supply is switched off (or operating at no load) and the ambient temperature is decreasing . Always allow the power supply to dry before switching it on again.

### 3) GALVANIC INDUSTRY

- For using the power supplies in the galvanic industry it is strongly recommended to take precautions against an aggressive environment.
- An aggressive environment with acid, salt, etc. can harm the electronic components. Sometimes even the copper traces of the pc-boards dissolve.
- To avoid problems the power supplies should be mounted in a relative clean room, or mounted in a cabinet receiving clean air with over pressure. Or a cabinet with a heat exchanger.

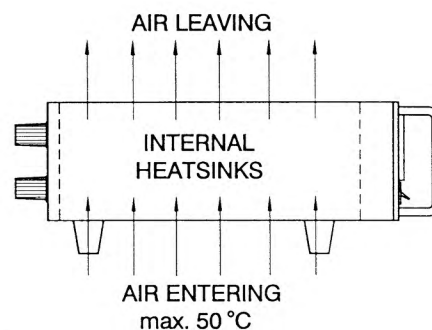


fig. 3 - 16

leave enough space below and above the unit  
to let the air flow through it.

## MAINTENANCE

### 1) GENERAL

- The SM-series power supplies normally need no maintenance or calibration. Only care must be taken that the cooling of the unit is not obstructed.

## TROUBLE SHOOTING

### 1) GENERAL

- In case you need assistance for repairing the unit, please first fill in the Problem Report (also in this manual) and fax it to us.

### 2) NO OUTPUT (normal operation)

- Check input voltage selector at rear panel. Wrong selection can cause serious damage to the unit. Do not operate the selector switch when the unit is switched on.
- Check input fuses. For 11 V operation fuses have to be replaced. See text at rear panel for values.
- Check position of prog. switches at the rear panel, they should be on MANUAL.
- Check the connections on the SENSE BLOCK (at rear panel), there should be a link between + and S+ and between - and S-.
- Set OVP potentiometer (at front panel) at maximum (fully clock wise).
- Switch on unit.
- Turn both the CV and CC potentiometer a few turns clock-wise. A voltage should be present on the output.

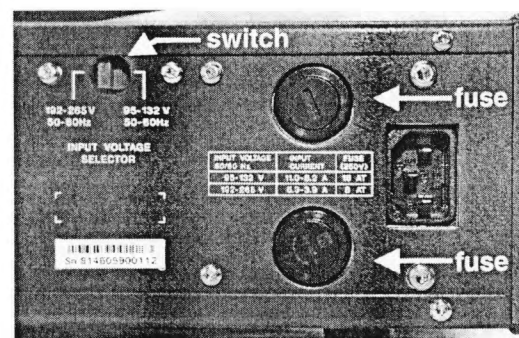


fig 3 - 17

Location of the input Selector Switch and  
the input fuses at the rear panel



3) **PROGRAMMING DOES NOT WORK OK**

- Check position of prog. switches at rear panel.
- **The unit works OK in manual control**, but in programming mode the output voltage / current has a large error.

Probably the fuse in series with Ø (pin 1) of prog. connector tripped, the fuse (F600 = 650 mA) is a self-resetting type. See fig.3 - 18.

- To check the fuse (F600) measure the voltage between Ø and the minus output, during the fault condition. The voltage should only be a few mV, a high voltage means that an unwanted current is flowing through pin 1 of the prog. connector. Please check why current is flowing through pin 1, see also next paragraph 'programming offsets' and fig.3 - 19.



fig. 3 - 18 location of programming fuses on output board P385, P386 or P387.

4) **PROGRAMMING OFFSETS**

- **Unwanted offsets in the programming can be caused by earth loops.**

Fig. 3 - 19 shows a typical earthing problem. In case the load has a connection to earth and the programming source as well, problems could occur. Improper choice of the earthing point of the load can give a voltage drop of  $\Delta V1$ . Connecting the minus or zero to a separate earth connection can give a voltage drop of  $\Delta V2$ . Because the internal wires of the programming input are thin, the voltage drops  $\Delta V1$  and  $\Delta V2$  will be across the internal wiring as well. Resulting in a error voltage in series with the programming voltage.

- The best **solution** for this is using a floating programming source with the help of the **ISO AMP MODULE** ( $\delta$ -product) or a floating load.

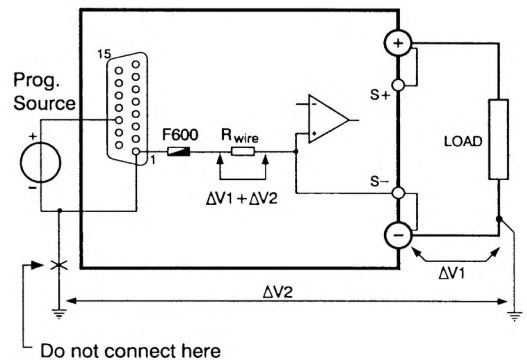


fig. 3 - 19 unwanted programming offsets

5) **STATUS OUTPUTS FAIL**

- Check fuse F601 in series with Ø (pin 8), see fig. 3 - 18. To check the fuse (F601) measure the resistance between Ø and the minus output, an open circuit means a blown fuse. F601 = 650 mA.

6) **MASTER / SLAVE PARALLEL PROBLEMS**

- Accidental interruption of a minus lead of a unit during operation will cause fuse F600 to blow. See fig. 3 - 18. To check the fuse (F600) measure the resistance between Ø (pin 1 of prog. conn.) and the minus output, the fuse is a self resetting type. F600 = 650 mA
- **AUTORANGING** behaves abnormally. Check link between pin 6 and 8 on the prog. connector of the **slaves**.
- Check link between pin 9 and 11 on the prog. connector of the **slaves**
- Current sharing is not ok. Probably the links between S- and - of the **slaves** are not removed.

7) **OUTPUT VOLTAGE IS HIGHER THAN SET VALUE**

- Check connections on **SENSE BLOCK** (on rear panel). For normal operation there should be a link between + and S+ and between - and S-. See also fig. 3 - 20. When remote sensing is used, check the wires of the sensing.

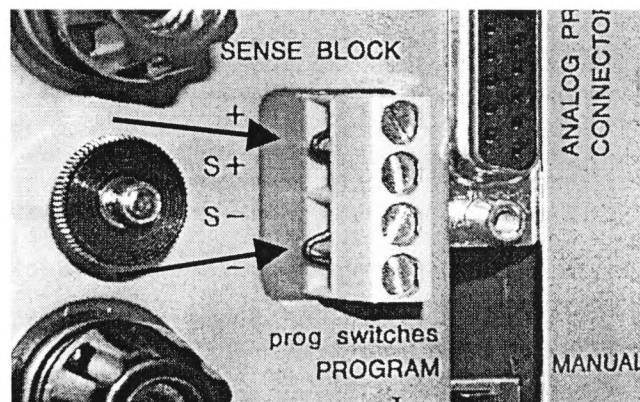


fig. 3 - 20 for normal operation links should be connected between S+ and + and between S- and -



8) **OVP LED burns.**

- Check OVP setting.
- Overheating also causes the OVP led to burn (see fig 3 - 22), cooling down will reset the thermal protection.
- You are using Remote Sensing. Even a short voltage pulse >3V between – and S – causes the OVP circuit to limit the output voltage.
- Remote Shutdown voltage is applied to the prog. connector.


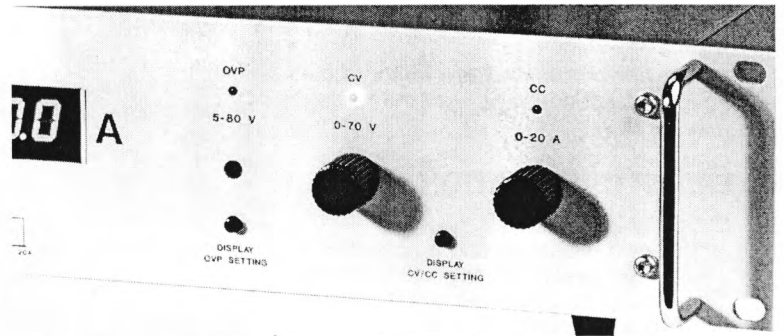


fig 3 - 22 Location of OVP, CV and CC LED's

9) **NO LEDS burn.**

- Overheating can be the cause, cooling down will reset the thermal protection.
- Check input power and input fuses (on rear panel)

10) **CHECK POINTS IN CASE OF A SERIOUS FAILURE**

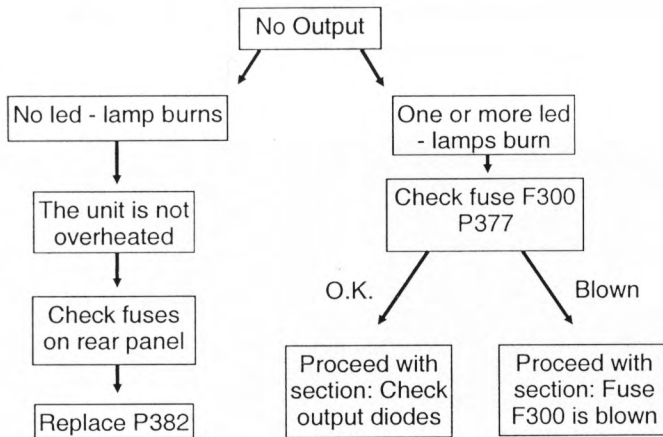

- Check output diodes. Defective diodes give a short.
  - SM1540-D Check diodes D400 - D403
  - SM7020-D Check diodes D400 and D402 on P380
  - SM3004-D Check diodes D400 - D404, D410 - D414, D420 - D424, D440 - D434 on P381
 Replace defective parts.
- Fuse F300 is blown. Do not replace F300 until unit is repaired. Probably defect on P378. First check output diodes, see above.
- Repairing P378. Check diodes D301 - D308, check transistors Q300 - Q303. When defective they usually give a short. Replace defective components.
- If necessary, send P378 for repair.

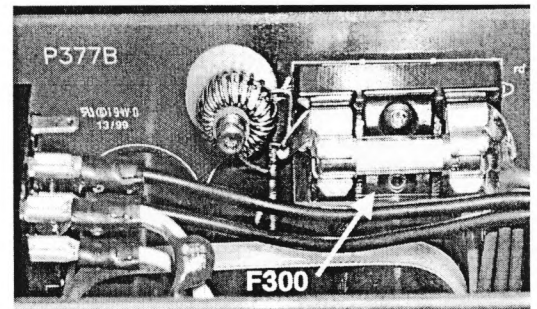


fig. 3 - 21 Location of F300 on P377

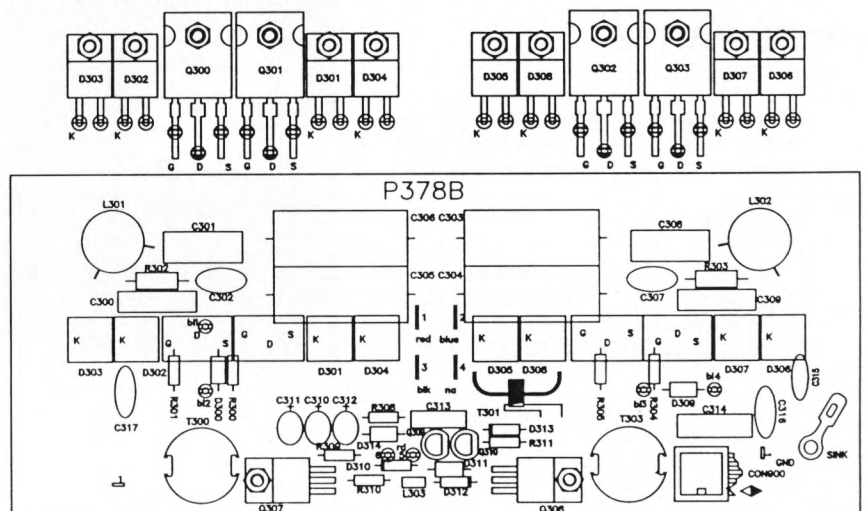


fig 3 - 23 P378: indicated are the polarity of the diodes (K) and the FET's (G/D/S)

# CALIBRATION

## 1) GENERAL

- The power supplies are factory calibrated and normally need no further calibration.

## 2) METER CALIBRATION

- **DIGITAL METERS**  
The zero indication can be calibrated with R712 and R716, the full scale indication can be calibrated with R706 and R708 on P388 (fig. 3 - 24).

## 3) SPECIAL CALIBRATIONS

- The following calibrations must be done by qualified personnel only. Wrong calibration causes malfunction. These calibrations are only needed after special repairs.  
**Warning !** Damage caused by wrong calibration is not warranted.

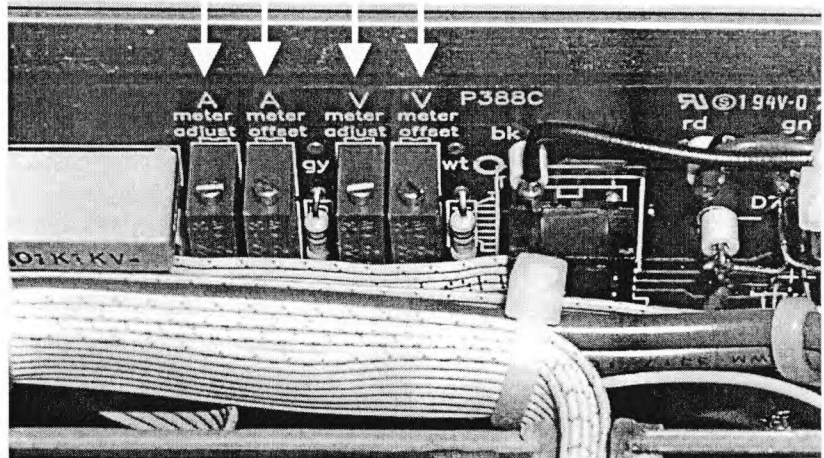


fig. 3 - 24 Meter calibration with 25-turn potmeters on P388

- **CALIBRATING MAX. CURRENT RANGE or CALIBRATING CC MONITOR FULL SCALE.**

The max. output current can be calibrated with R686. R686 is located on P385, P386 or P387. See fig. 3 - 25. Program CC input with exactly 5.00 V. Set output voltage to a low value, ensuring the power supply is in CC mode. Measure the output current with an accurate shunt. Calibrate the current with R686 exactly on the rated max. current.

**Warning!** Wrong calibration can damage the unit.

- **CALIBRATING THE CC MONITOR OFFSET.**

With R652 on P384 the offset of the CC monitor voltage can be calibrated. See fig. 3 - 26. The unit has to be unloaded, the output voltage set on a low value. Measure the offset voltage of the CC monitor on the prog. connector. Calibrate the offset on a negative value between -10 mV and zero mV.

**Warning!** wrong calibration can damage the unit.

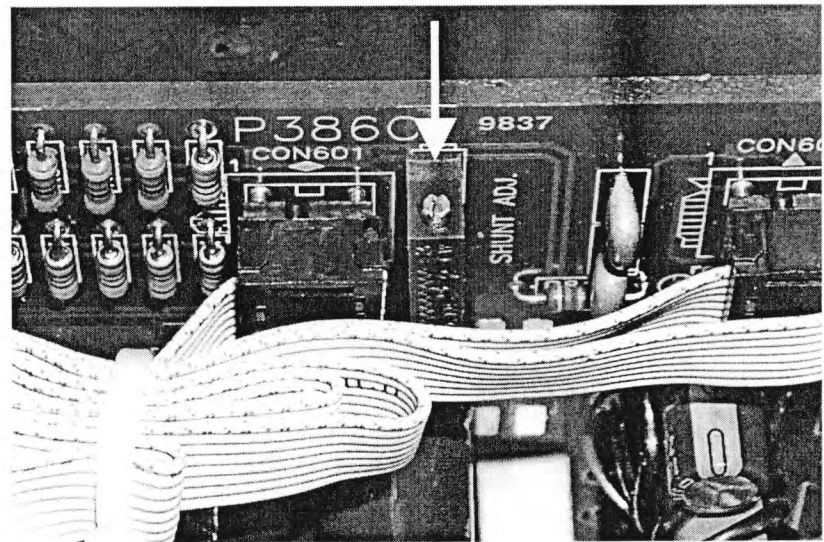


fig 3 - 25 calibrating max current P385, P386 or P387

## SPARE PARTS

- When ordering spare parts please state: Model, Serial number, Component number and Component description.  
example:

Model .....SM7020-D  
 Serial no.....814605900112  
 Component no. ....D402  
 Component descr..BYV52-PI-200

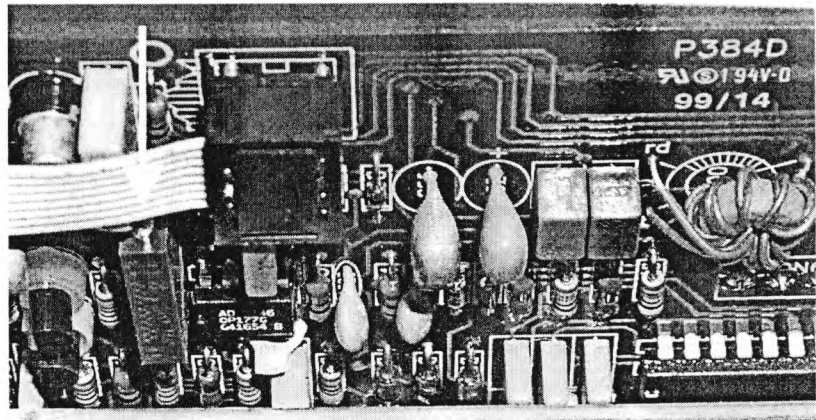


fig. 3 - 26 After lifting P384, CC monitor can be calibrated

# DELTA ELEKTRONIKA BV



P.O. BOX 27  
 4300 AA ZIERIKZEE  
 NETHERLANDS  
 TEL.+31 111 413656  
 FAX+31 111 416919  
 www.DeltaPowerSupplies.com

**From:**

.....

.....

.....

.....

## PROBLEM REPORT

Type number .....

Serial number .....

Date .....

CONDITIONS BEFORE OR DURING FAULT	
Output voltage, Output current	
Ambient temperature, Input voltage	
Programming used, Remote sense used	
Master / Slave used (parallel or series mode)	
Setting of Prog. Switches and setpoint of OVP	

FAULT DESCRIPTION	
Output voltage present	
Max. Output power available	
Problem continuous or intermittend	
Which LED-lamps are burning, which are not	
+12 V on programming connector present	

**Remarks:**

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

## RECOMMENDED SPARE PARTS FOR USE IN A SERVICE DEPARTMENT

Note: The listed spare parts are mainly modules.

### In case of a problem:

Please first fill in the problem report (also in this manual) and fax it to us.

We will then assist you with the repair of the unit.





Defective modules can be send to us for repair.

Quantity	Order code	Description
5	FUSE PTC .65	fuse for programming input
4	FUSE 5X20 8T (230V) FUSE 5X20 16T (110V)	input fuses
5	JUMP 0830 DIP	8 pole flat cable, with dip connectors
1	SKB 25-06	input bridge rectifier
2	16ER 15	15 ohm resistors for inrush current limiter
3	10SL 5K	potmeter, 5 kOhm, 10 turns
1	P378 + FUSE 6X32 6.3FF	switch unit + special fuse
1	P384	analog control board
1	P383	digital control board
1	P382	auxiliary power supply

Only for SM1540		
Quantity	Order code	Description
4	60HQ100	output rectifiers

Only for SM7020		
Quantity	Order code	Description
1	P380	output rectifier board, SM7020-D

Only for SM3004		
Quantity	Order code	Description
1	P381	output rectifier board, SM3004-D

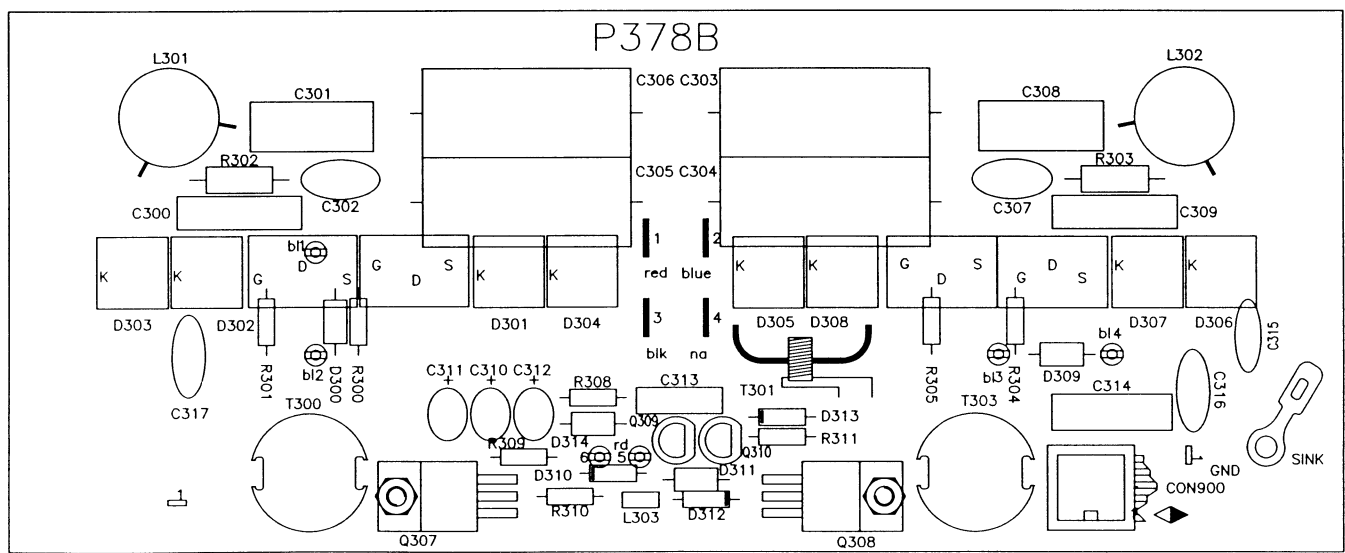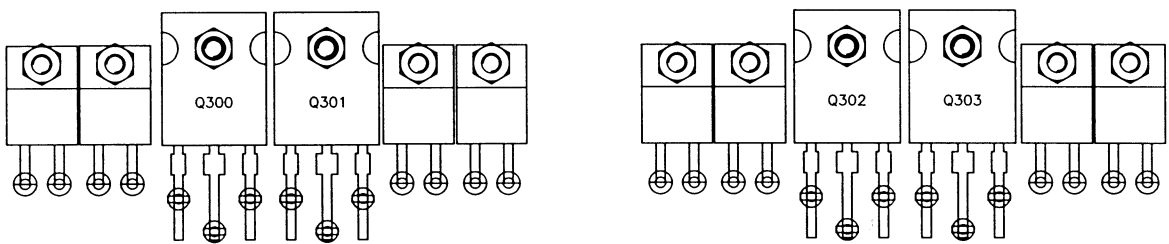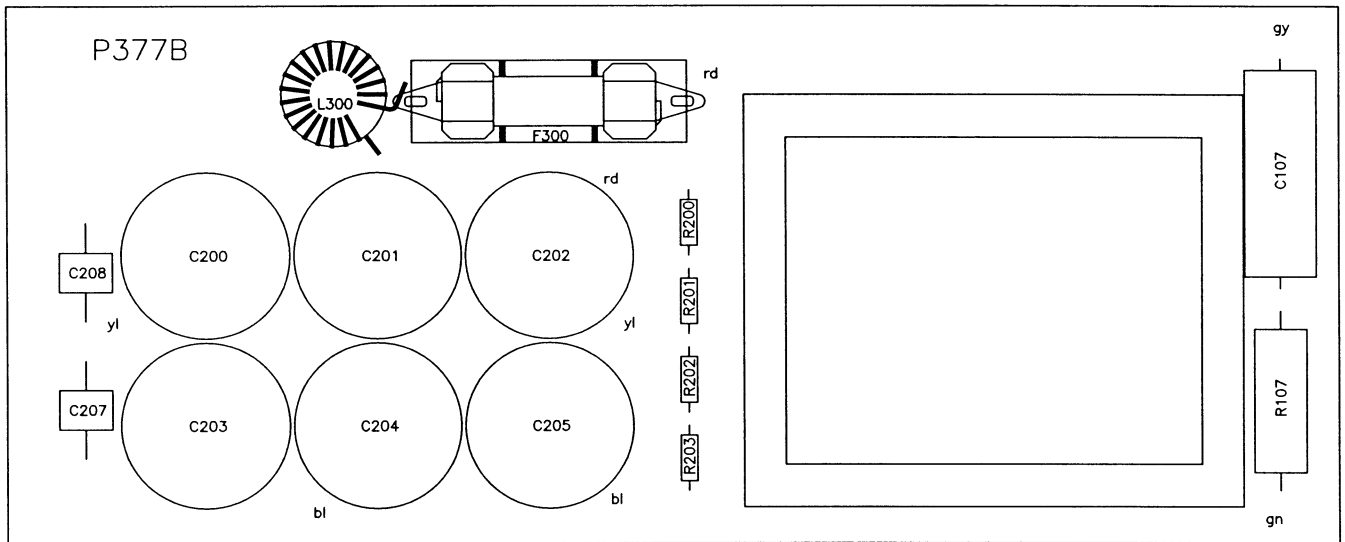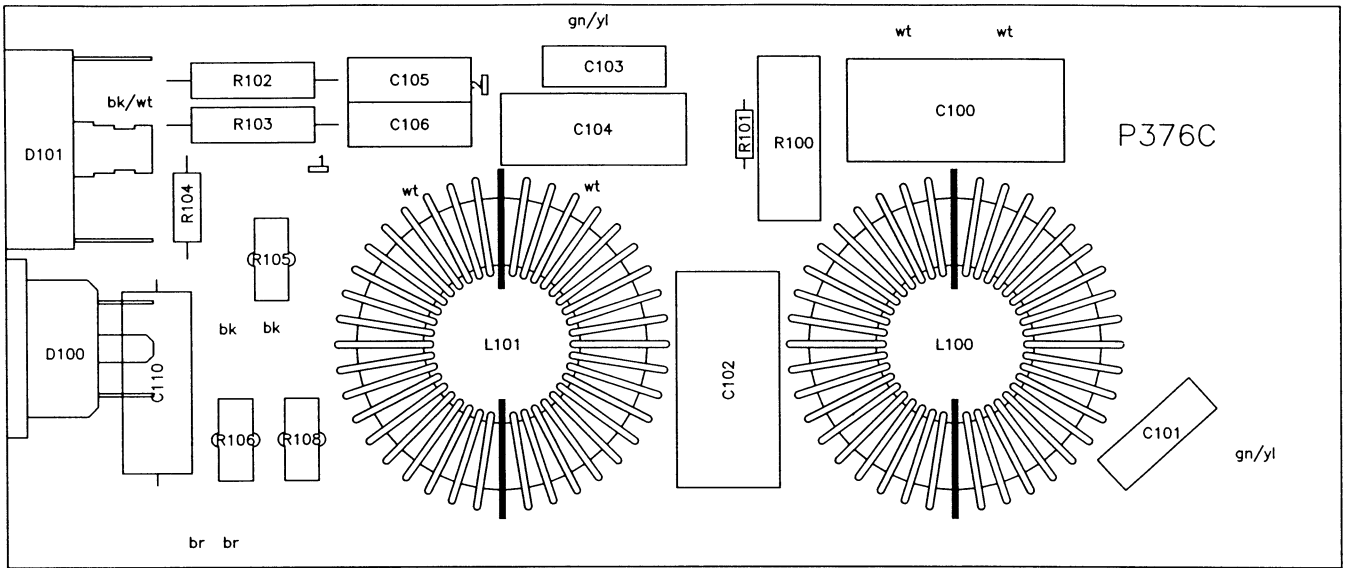




# MAIN SECTION

C100	=	1UF 250V RMS	X2
C101	=	4700PF 250V Y2	VISHA
C102	=	1UF 250V RMS	X2
C103	=	3300PF 250V Y2	VISHA
C104	=	0.22UF 250V RMS	X2
C105	=	22NF 630V	POLYPROP
C106	=	22NF 630V	POLYPROP
C107	=	1.5UF 250V	MET POLYES
C108	=	470PF 400V RMS	SAFETY
C109	=	68NF 250V RMS	X2
C110	=	0.33UF 400V	MET POYES
C200	=	680UF200	CHEM-CON
C201	=	680UF200	CHEM-CON
C202	=	680UF200	CHEM-CON
C203	=	680UF200	CHEM-CON
C204	=	680UF200	CHEM-CON
C205	=	680UF200	CHEM-CON
C207	=	N81-A230	SIEMENS
C208	=	N81-A230	SIEMENS
C300	=	2.7NF 1000V	POLYPROP
C301	=	10NF 630V	POLYPROP
C302	=	100PF 1000V	CERAMIC
C303	=	1UF 400V	MET POLYES
C304	=	1UF 400V	MET POLYES
C305	=	1UF 400V	MET POLYES
C306	=	1UF 400V	MET POLYES
C307	=	100PF 1000V	CERAMIC
C308	=	10NF 630V	POLYPROP
C309	=	2.7NF 1000V	POLYPROP
C310	=	15UF 16V	SOLID ALU
C311	=	15UF 16V	SOLID ALU
C312	=	15UF 16V	SOLID ALU
C313	=	0.22UF 63V	MET POLYES
C314	=	10NF 1000V	MET POLYES
C315	=	2200PF 250V	CERAMIC
C316	=	470PF 400V RMS	SAFETY
C317	=	33PF 400V RMS	SAFETY
C500	=	22UF 250V	CHEMI-CON
C501	=	22UF 250V	CHEMI-CON
C502	=	22UF 16V	SOLID ALU
C503	=	100PF 1000V	CERAMIC
C504	=	2200PF 100V	POLYPROP
C505	=	10NF 630V	MET POLYES
C506	=	2200PF 100V	POLYPROP
C507	=	2200PF 100V	POLYPROP
C508	=	100PF 1000V	CERAMIC
C509	=	1000PF 100V	POLYPROP
C510	=	220UF 35V	ERO
C511	=	220UF 35V	ERO
C512	=	22UF 250V	CHEMI-CON
C513	=	22UF 250V	CHEMI-CON
C514	=	10NF 1000V	MET POLYES
C610	=	0.22UF 63V	MET POLYES
C611	=	10NF 250V	MET POLYES
C612	=	2.2UF 25V	SOLID ALU
C613	=	0.22UF 63V	MET POLYES


C614	=	330NF 50V	MULT LAYER
C615	=	47NF 250V	MET POLYES
C616	=	2200PF 100V	POLYPROP
C618	=	100PF 1000V	CERAMIC
C619	=	1000PF 100V	POLYPROP
C620	=	100PF 1000V	CERAMIC
C621	=	470PF 100V	POLYPROP
C622	=	22NF 250V	MET POLYES
C623	=	47PF 1000V	CERAMIC
C625	=	15UF 16V	SOLID ALU
C626	=	470PF 500V	CERAMIC
C627	=	47PF 1000V	CERAMIC
C628	=	2200PF 100V	POLYPROP
C629	=	2200PF 100V	POLYPROP
C630	=	22NF 250V	MET POLYES
C631	=	100PF 1000V	CERAMIC
C632	=	470PF 100V	POLYPROP
C633	=	2.2UF 25V	SOLID ALU
C634	=	100PF 1000V	CERAMIC
C635	=	10NF 250V	MET POLYES
C636	=	100PF 1000V	CERAMIC
C637	=	100PF 1000V	CERAMIC
C638	=	2200PF 100V	POLYPROP
C639	=	2.2UF 25V	SOLID ALU
C640	=	470PF 100V	POLYPROP
C642	=	100PF 1000V	CERAMIC
C643	=	470PF 100V	POLYPROP
C644	=	2.2UF 25V	SOLID ALU
C645	=	15PF 500V	CERAMIC
C646	=	10NF 250V	MET POLYES
C647	=	10NF 250V	MET POLYES
C648	=	10NF 250V	MET POLYES
C649	=	10NF 250V	MET POLYES
C650	=	10NF 250V	MET POLYES
C651	=	10NF 250V	MET POLYES
C655	=	15UF 16V	SOLID ALU
C656	=	15UF 16V	SOLID ALU
C657	=	15UF 16V	SOLID ALU
C658	=	0.01UF 100V	MULT LAYER
C659	=	2.2UF 25V	SOLID ALU
C660	=	15UF 16V	SOLID ALU
C661	=	15UF 16V	SOLID ALU
C662	=	330NF 50V	MULT LAYER
C702	=	10NF 1000V	MET POLYES
C703	=	2.2UF 25V	SOLID ALU
C704	=	2.2UF 25V	SOLID ALU
C705	=	2.2UF 25V	SOLID ALU
C706	=	2.2UF 25V	SOLID ALU
C707	=	330NF 50V	MULT LAYER
C708	=	330NF 50V	MULT LAYER
C850	=	220NF 100V	MULT LAYER
C852	=	220NF 100V	MULT LAYER
C853	=	220NF 100V	MULT LAYER
C854	=	220NF 100V	MULT LAYER
C855	=	220NF 100V	MULT LAYER
C857	=	220NF 100V	MULT LAYER
C858	=	220NF 100V	MULT LAYER
C859	=	220NF 100V	MULT LAYER
C860	=	220NF 100V	MULT LAYER

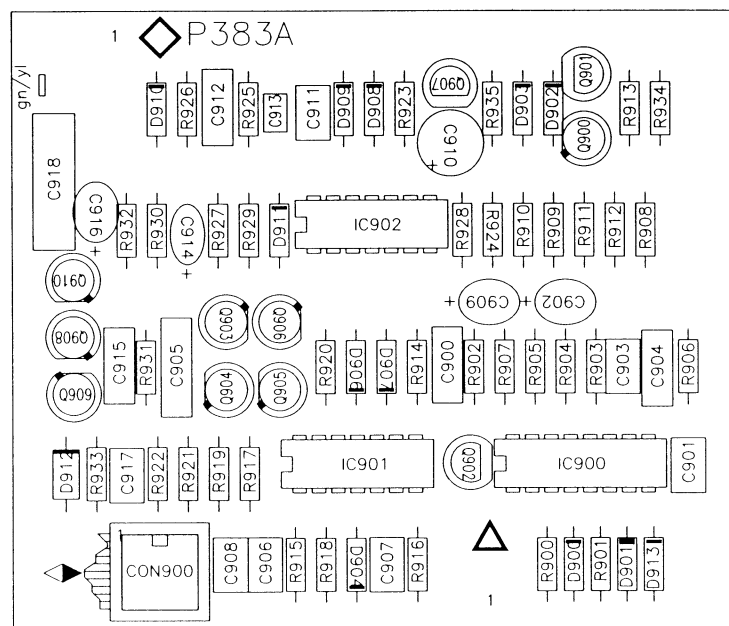




C861	=	220NF 100V	MULT LAYER
C862	=	220NF 100V	MULT LAYER
C864	=	0.22UF 250V	RMS X2
C865	=	220NF 100V	MULT LAYER
C866	=	220NF 100V	MULT LAYER
C867	=	220NF 100V	MULT LAYER
C900	=	47NF 250V	MET POLYES
C901	=	1000PF 100V	POLYPROP
C902	=	15UF 16V	SOLID ALU
C903	=	1000PF 100V	POLYPROP
C904	=	10NF 250V	MET POLYES
C905	=	0.22UF 63V	MET POLYES
C906	=	150PF 100V	POLYPROP
C907	=	220PF 100V	POLYPROP
C908	=	2200PF 100V	POLYPROP
C909	=	15UF 16V	SOLID ALU
C910	=	47UF 63V	ERO
C911	=	1000PF 100V	POLYPROP
C912	=	22NF 250V	MET POLYES
C913	=	0.1UF 100V	MULT LAYER
C914	=	2.2UF 25V	SOLID ALU
C915	=	47NF 250V	MET POLYES
C916	=	15UF 16V	SOLID ALU
C917	=	4700PF 63V	POLYPROP
C918	=	10NF 1000V	MET POLYES
D100	=	BTA 25-700B	ST
D101	=	GPBC35-10	GEN.INSTR.
D300	=	SA13CA	
D301	=	STTA 806 DI	ST
D302	=	STTA 806 DI	ST
D303	=	STTA 806 DI	ST
D304	=	STTA 806 DI	ST
D305	=	STTA 806 DI	ST
D306	=	STTA 806 DI	ST
D307	=	STTA 806 DI	ST
D308	=	STTA 806 DI	ST
D309	=	SA13CA	
D310	=	1N4148	PHILIPS
D311	=	1N5818	MOTOROLA
D312	=	ZPY20	ITT
D313	=	BZX55-C15	ITT
D314	=	1N5818	MOTOROLA
D500	=	SKB2-12L5A	SEMIKRON
D501	=	BYV26B	PHILIPS
D502	=	1N4148	PHILIPS
D503	=	BYV26B	PHILIPS
D504	=	BYV28-200	PHILIPS
D505	=	BYV26B	PHILIPS
D613	=	BZX85-C5V6	ITT
D614	=	1N4148	PHILIPS
D615	=	1N4148	PHILIPS
D617	=	1N4148	PHILIPS
D618	=	BZX55-C12	ITT
D619	=	ZPD 8.2	ITT
D620	=	TL431ILP	TEXAS
D621	=	1N4148	PHILIPS
D622	=	BZX55-C12	ITT
D623	=	BAS45	PHILIPS
D624	=	BAS45	PHILIPS

D625	=	1N4148	PHILIPS
D626	=	1N4148	PHILIPS
D627	=	BZX85-C5V6	ITT
D631	=	1N4148	PHILIPS
D632	=	1N4148	PHILIPS
D633	=	1N4148	PHILIPS
D634	=	1N4148	PHILIPS
D635	=	1N4148	PHILIPS
D636	=	ZPD 8.2	ITT
D637	=	1N4148	PHILIPS
D638	=	BZX55-C12	ITT
D639	=	ZPD 8.2	ITT
D641	=	BZX85-C12	ITT
D642	=	BZX85-C12	ITT
D643	=	BZX85-C12	ITT
D644	=	ZPD 8.2	ITT
D645	=	BZX55-C12	ITT
D646	=	ZPY 5.1	ITT
D700	=	LED 3MM GREEN	
D701	=	LED 3MM RED TELEFUNKEN	
D702	=	LED 3MM GREEN	
D900	=	1N4148	PHILIPS
D901	=	ZPD 6.2V	ITT
D902	=	BZX55-C10	ITT
D903	=	ZPD 8.2	ITT
D904	=	1N4148	PHILIPS
D906	=	1N4148	PHILIPS
D907	=	1N4148	PHILIPS
D908	=	1N4148	PHILIPS
D909	=	1N4148	PHILIPS
D910	=	1N4148	PHILIPS
D911	=	1N4148	PHILIPS
D912	=	BYV26B	PHILIPS
D913	=	1N825	CDI
F100A	=	FUSE 5X20 8T	220V
F100B	=	FUSE 5X20 16T	110V
F101A	=	FUSE 5X20 8T	220V
F101B	=	FUSE 5X20 16T	110V
F300	=	FUSE 6X32 6.3FF	
F500	=	FUSE 5X20 1T	SCHURT
F501	=	FUSE 0.5A/450VDC	BUSS
F600	=	FUSE PTC 0.65A	BOURNS
F601	=	FUSE PTC 0.65A	BOURNS
IC500	=	UC3842	UNITRODE
IC602	=	TL084BCN	TEXAS
IC603	=	TL084BCN	TEXAS
IC604	=	OP177GP	AD
IC605	=	REF02HP	
IC606	=	TL084BCN	TEXAS
IC700	=	TL084BCN	TEXAS
IC701	=	L7805CV	ST
IC702	=	L7905CV	ST
IC900	=	HEF4046 BP	PHILIPS
IC901	=	HEF4011BD	PHILIPS
IC902	=	HEF4069UBD	PHILIPS
L100	=	XL257	DELTA
L101	=	XL257	DELTA
L102	=	XL258A	DELTA

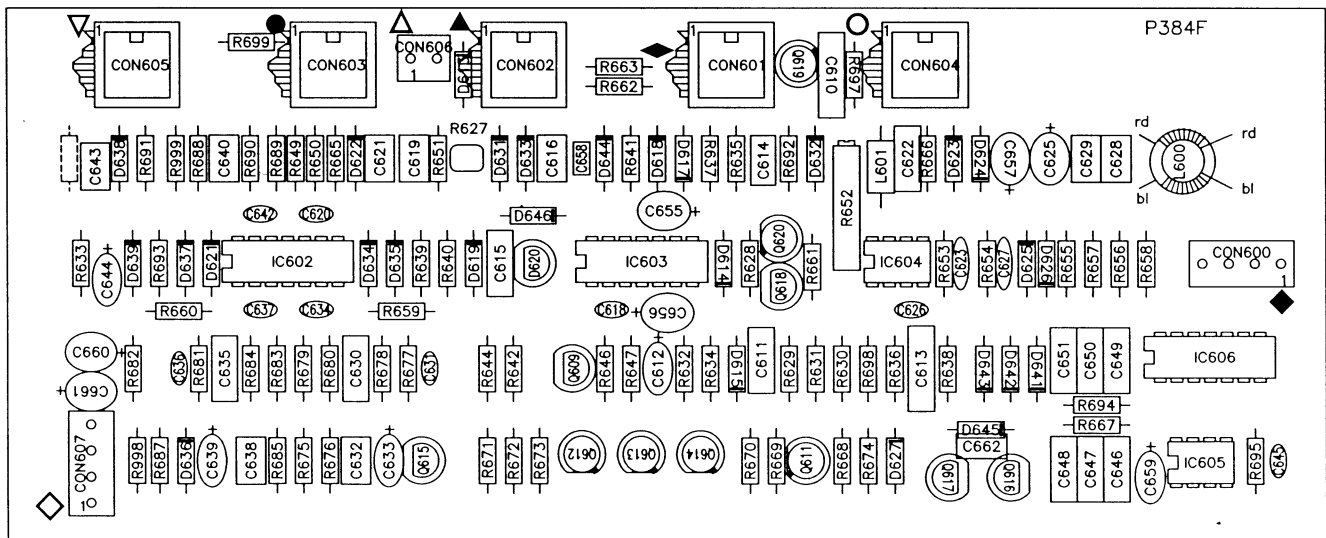




L300	=	XL259	DELTA	R308	=	2.21	MF/0.6W/350V
L301	=	XL260	DELTA	R309	=	4.75K	MF/0.6W/350V
L302	=	XL260	DELTA	R310	=	2.21	MF/0.6W/350V
L303	=	XL237	DELTA	R311	=	10K	MF/0.6W/350V
L600	=	XL245	DELTA	R500	=	33.2K	MF/0.6W/350V
L601	=	15UH	SIEMENS	R501	=	33.2K	MF/0.6W/350V
M1	=	3.5 DIGIT LED	DPM	R502	=	33.2K	MF/0.6W/350V
M2	=	3.5 DIGIT LED	DPM	R503	=	33.2K	MF/0.6W/350V
Q300	=	STH18NB40FI		R504	=	6.81	MF/0.6W/350V
Q301	=	STH18NB40FI		R505	=	68.1K	MF/0.6W/350V
Q302	=	STH18NB40FI		R506	=	15K	MF/0.6W/350V
Q303	=	STH18NB40FI		R507	=	392K	MF/0.6W/350V
Q307	=	IRF9520	IR	R508	=	8.25K	MF/0.6W/350V
Q308	=	IRF510	IR	R509	=	CR	MF/0.6W/250V
Q309	=	BST100	PHILIPS	R510	=	681K	MF/0.6W/350V
Q310	=	BST70	PHILIPS	R511	=	475	MF/0.6W/350V
Q500	=	STP3NB80FP	IR	R512	=	221	MF/0.6W/350V
Q609	=	BS170	ITT	R513	=	10K	MF/0.6W/350V
Q611	=	PH2907A	PHILIPS	R514	=	5.62	MF/0.6W/350V
Q612	=	PH2222A	PHILIPS	R515	=	2.2K	MF/2.0W/500V
Q613	=	PH2222A	PHILIPS	R516	=	2.2K	MF/2.0W/500V
Q614	=	PH2222A	PHILIPS	R628	=	562K	MF/0.6W/350V
Q615	=	BS170	ITT	R629	=	10K	MF/0.6W/350V
Q616	=	BS170	ITT	R630	=	12.1K	MF/0.6W/350V
Q617	=	BS170	ITT	R631	=	100K	MF/0.6W/350V
Q618	=	BS250	ITT	R632	=	10K	MF/0.6W/350V
Q619	=	PH2222A	PHILIPS	R633	=	56.2K	MF/0.6W/350V
Q620	=	PH2907A	PHILIPS	R634	=	10K	MF/0.6W/350V
Q900	=	PH2222A	PHILIPS	R635	=	332	MF/0.6W/350V
Q901	=	BS170	ITT	R636	=	22.1	MF/0.6W/350V
Q902	=	BS170	ITT	R637	=	681	MF/0.6W/350V
Q903	=	PH2907A	PHILIPS	R638	=	681	MF/0.6W/350V
Q904	=	PH2222A	PHILIPS	R639	=	2.21K	MF/0.6W/350V
Q905	=	PH2222A	PHILIPS	R640	=	6.81K	MF/0.6W/350V
Q906	=	PH2907A	PHILIPS	R641	=	1K	MF/0.6W/350V
Q907	=	BS250	ITT	R642	=	1K	MF/0.6W/350V
Q908	=	PH2222A	PHILIPS	R644	=	4.75K	MF/0.6W/350V
Q909	=	PH2222A	PHILIPS	R646	=	10K	MF/0.6W/350V
Q910	=	PH2907A	PHILIPS	R647	=	4.75K	MF/0.6W/350V
R100	=	TNR23G471K		R649	=	4.75K	MF/0.6W/350V
R101	=	1M	MF/0.25W/1600V	R650	=	4.75K	MF/0.6W/350V
R102	=	3.3	MF/3.0W/750V	R651	=	82.5K	MF/0.6W/350V
R103	=	3.3	MF/3.0W/750V	R652	=	10K TRIMPOTM 20 TURNS	
R104	=	120	MF/2.0W/500V	R653	=	100K	MF/0.6W/350V
R105	=	PTC 150	B754 SIEMENS	R654	=	100K	MF/0.6W/350V
R106	=	PTC 150	B754 SIEMENS	R655	=	825	MF/0.6W/350V
R107	=	47	WW/6.0W/200V	R656	=	825	MF/0.6W/350V
R108	=	PTC 150	B754 SIEMENS	R657	=	10	MF/0.6W/350V
R200	=	39.2K	MF/0.6W/350V	R658	=	10	MF/0.6W/350V
R201	=	39.2K	MF/0.6W/350V	R659	=	10K	MF/0.6W/350V
R202	=	39.2K	MF/0.6W/350V	R660	=	10K	MF/0.6W/350V
R203	=	39.2K	MF/0.6W/350V	R661	=	10K	MF/0.6W/350V
R300	=	6.81	MF/0.6W/350V	R662	=	1K	MF/0.6W/350V
R301	=	6.81	MF/0.6W/350V	R663	=	4.75K	MF/0.6W/350V
R302	=	150	MF/2.0W/500V	R665	=	332	MF/0.6W/350V
R303	=	150	MF/2.0W/500V	R666	=	825	MF/0.6W/350V
R304	=	6.81	MF/0.6W/350V	R667	=	10K	MF/0.6W/350V
R305	=	6.81	MF/0.6W/350V	R668	=	1K	MF/0.6W/350V

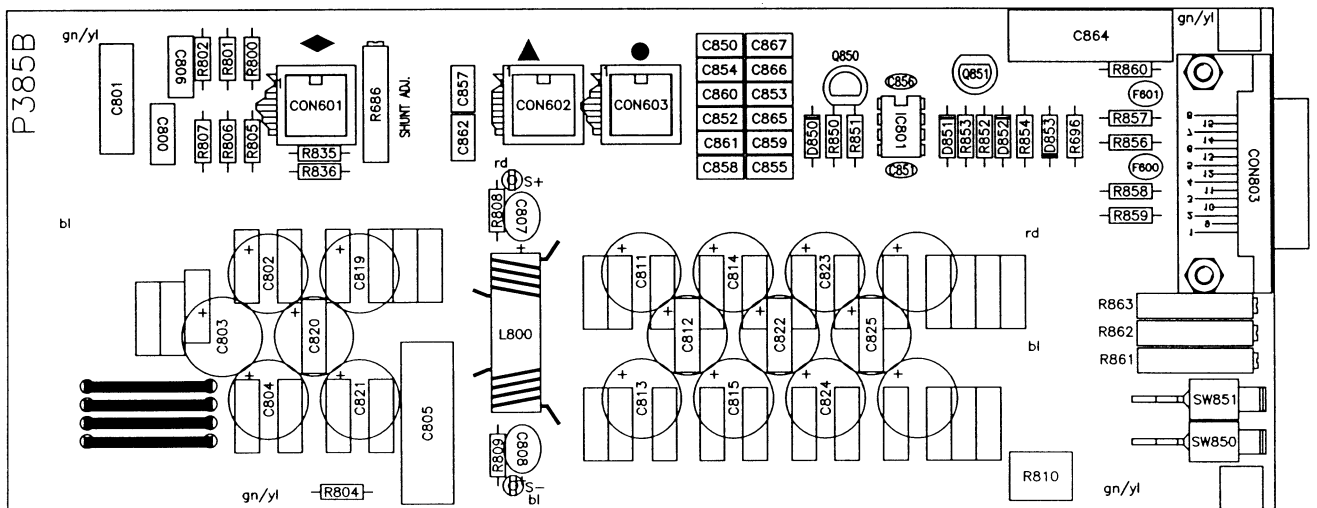

R669	=	10K	MF/0.6W/350V
R670	=	2.21K	MF/0.6W/350V
R671	=	2.21K	MF/0.6W/350V
R672	=	2.21K	MF/0.6W/350V
R673	=	2.21K	MF/0.6W/350V
R674	=	2.21K	MF/0.6W/350V
R675	=	475	MF/0.6W/350V
R676	=	10K	MF/0.6W/350V
R677	=	3.32K	MF/0.6W/350V
R678	=	4.75K	MF/0.6W/350V
R679	=	4.75K	MF/0.6W/350V
R680	=	4.75K	MF/0.6W/350V
R681	=	6.81K	MF/0.6W/350V
R682	=	2.2M	MF/0.25W/1600V
R683	=	4.75K	MF/0.6W/350V
R684	=	4.75K	MF/0.6W/350V
R685	=	2.21K	MF/0.6W/350V
R686	=	10K TRIMPOTM	20 TURNS
R687	=	1K	MF/0.6W/350V
R688	=	150K	MF/0.6W/350V
R689	=	4.75K	MF/0.6W/350V
R690	=	4.75K	MF/0.6W/350V
R691	=	10M	MF/0.25W/1600V
R692	=	332	MF/0.6W/350V
R693	=	1K	MF/0.6W/350V
R694	=	10K	MF/0.6W/350V
R695	=	26.7K	MF/0.6W/350V
R696	=	475	MF/0.6W/350V
R697	=	1K	MF/0.6W/350V
R698	=	47.5	MF/0.6W/350V
R699	=	47.5K	MF/0.6W/350V
R700	=	5K POTM	10 TURNS
R701	=	5K POTM	10 TURNS
R702	=	5K POTM	10 TURNS
R703	=	1K	MF/0.6W/350V
R704	=	4.75K	MF/0.6W/350V
R705	=	3.92K	MF/0.6W/350V
R706	=	2K TRIMPOTM	20 TURNS
R707	=	3.92K	MF/0.6W/350V
R708	=	2K TRIMPOTM	20 TURNS
R709	=	CR	MF/0.6W/250V
R710	=	1K	MF/0.6W/350V
R711	=	1M	MF/0.25W/1600V
R712	=	10K TRIMPOTM	20 TURNS
R713	=	CR	MF/0.6W/250V
R714	=	1K	MF/0.6W/350V
R715	=	1M	MF/0.25W/1600V
R716	=	10K TRIMPOTM	20 TURNS
R717	=	562	MF/0.6W/350V
R718	=	562	MF/0.6W/350V
R719	=	100	MF/0.6W/350V
R720	=	100K	MF/0.6W/350V
R721	=	100	MF/0.6W/350V
R722	=	100K	MF/0.6W/350V
R856	=	12.1	MF/0.6W/350V
R857	=	12.1	MF/0.6W/350V
R858	=	12.1	MF/0.6W/350V
R859	=	12.1	MF/0.6W/350V

R860	=	12.1	MF/0.6W/350V
R861	=	5K TRIMPOT	OPTION
R862	=	5K TRIMPOT	OPTION
R863	=	5K TRIMPOT	OPTION
R900	=	100	MF/0.6W/350V
R901	=	332	MF/0.6W/350V
R902	=	332	MF/0.6W/350V
R903	=	56.2K	MF/0.6W/350V
R904	=	CR	MF/0.6W/250V
R905	=	12.1K	MF/0.6W/350V
R906	=	12.1K	MF/0.6W/350V
R907	=	12.1K	MF/0.6W/350V
R908	=	10K	MF/0.6W/350V
R909	=	10K	MF/0.6W/350V
R910	=	10K	MF/0.6W/350V
R911	=	10K	MF/0.6W/350V
R912	=	10K	MF/0.6W/350V
R913	=	475	MF/0.6W/350V
R914	=	475	MF/0.6W/350V
R915	=	1.82K	MF/0.6W/350V
R916	=	2.21K	MF/0.6W/350V
R917	=	18.2	MF/0.6W/350V
R918	=	6.81K	MF/0.6W/350V
R919	=	1K	MF/0.6W/350V
R920	=	1K	MF/0.6W/350V
R921	=	3.32K	MF/0.6W/350V
R922	=	3.32K	MF/0.6W/350V
R923	=	100	MF/0.6W/350V
R924	=	10K	MF/0.6W/350V
R925	=	12.1K	MF/0.6W/350V
R926	=	100	MF/0.6W/350V
R927	=	8.25K	MF/0.6W/350V
R928	=	18.2	MF/0.6W/350V
R929	=	12.1K	MF/0.6W/350V
R930	=	2.21K	MF/0.6W/350V
R931	=	1K	MF/0.6W/350V
R932	=	1K	MF/0.6W/350V
R933	=	3.32	MF/0.6W/350V
R934	=	10K	MF/0.6W/350V
R935	=	56.2K	MF/0.6W/350V
R998	=	8.2M	MF/0.25W/1600V
R999	=	8.2M	MF/0.25W/1600V
SW100	=	SWITCH DPST	15A TGL
SW101	=	VOLTAGE SELECT	110/220V
SW600	=	SWITCH THERM	90 DEGR C
SW700	=	SWITCH DPDT	1A PUSH
SW701	=	SWITCH DPDT	1A PUSH
SW850	=	SWITCH SPDT	3A SLVE
SW851	=	SWITCH SPDT	3A SLVE
T300	=	XT265	DELTA
T301	=	XT242	DELTA
T303	=	XT265	DELTA
T500	=	XT239	DELTA

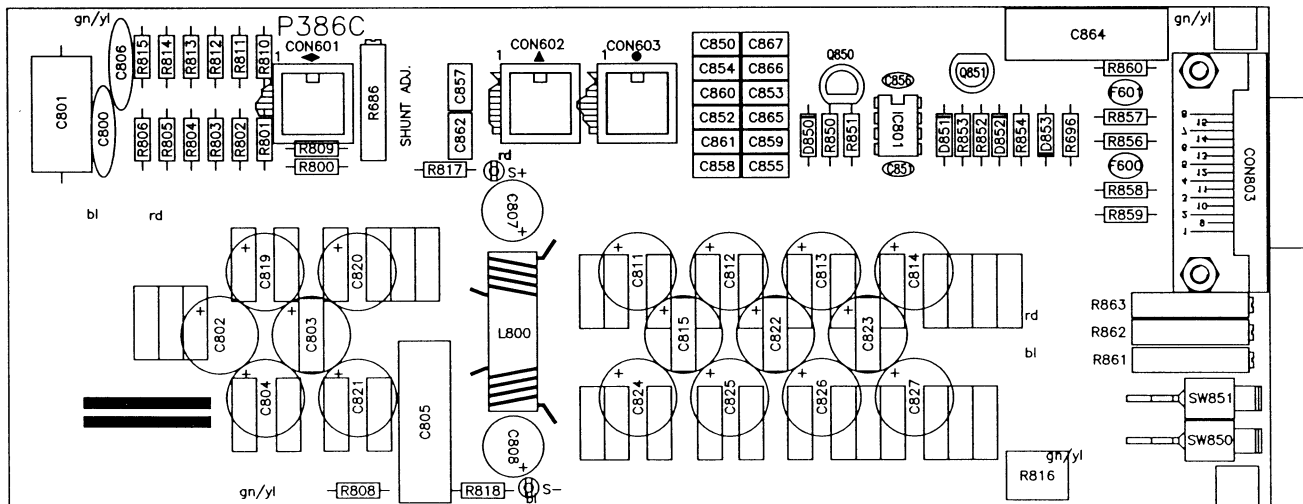


### OUTPUT SECTION SM1540

C400	=	2.7NF 1000V	POLYPROP
C401	=	10NF 1000V	MET POLYES
C402	=	10NF 1000V	MET POLYES
C403	=	10NF 1000V	MET POLYES
C800	=	10NF 250V	MET POLYES
C801	=	10NF 1000V	MET POLYES
C802	=	1000UF 25V	CHEMI-CON
C803	=	1000UF 25V	CHEMI-CON
C804	=	1000UF 25V	CHEMI-CON
C805	=	0.22UF 250V	RMS X2
C806	=	10NF 250V	MET POLYES
C807	=	15UF 16V	SOLID ALU
C808	=	15UF 16V	SOLID ALU
C809	=	0.1UF 630V	MET POLYES
C810	=	0.1UF 630V	MET POLYES
C811	=	1000UF 25V	CHEMI-CON
C812	=	1000UF 25V	CHEMI-CON
C813	=	1000UF 25V	CHEMI-CON
C814	=	1000UF 25V	CHEMI-CON
C815	=	1000UF 25V	CHEMI-CON
C816	=	330NF 50V	MULT LAYER
C817	=	330NF 50V	MULT LAYER
C818	=	330NF 50V	MULT LAYER
C819	=	1000UF 25V	CHEMI-CON
C820	=	1000UF 25V	CHEMI-CON
C821	=	1000UF 25V	CHEMI-CON
C822	=	1000UF 25V	CHEMI-CON
C823	=	1000UF 25V	CHEMI-CON
C824	=	1000UF 25V	CHEMI-CON
C825	=	1000UF 25V	CHEMI-CON
C851	=	100PF 1000V	CERAMIC
C856	=	100PF 1000V	CERAMIC
D400	=	60HQ100	IR
D401	=	60HQ100	IR
D402	=	60HQ100	IR
D403	=	60HQ100	IR
D850	=	BZX55-C3V3	ITT
D851	=	1N4148	PHILIPS
D852	=	1N4148	PHILIPS
D853	=	ZPD 8.2	ITT
IC801	=	LM358	ST
L400	=	XL270	DELTA
L401	=	XL298	DELTA
L402	=	XL488	DELTA
L403	=	XL488	DELTA
L404	=	XL488	DELTA
L800	=	XL275	DELTA
L801	=	XL279	DELTA
Q850	=	BS170	ITT
Q851	=	BSS92	PHILIPS
R400	=	56	MF/3.0W/750V
R401	=	56	MF/3.0W/750V
R402	=	56	MF/3.0W/750V
R403	=	56	MF/3.0W/750V
R404	=	PTC 70	C880 SIEMENS
R405	=	PTC 70	C880 SIEMENS
R406	=	PTC 70	C880 SIEMENS

R800	=	2.74K	MF/0.1%/TC=25
R801	=	2.74K	MF/0.1%/TC=25
R802	=	2.74K	MF/0.1%/TC=25
R803	=	0.137	R/M
R804	=	1.0	MF/0.6W/350V
R805	=	2.74K	MF/0.6W/350V
R806	=	2.74K	MF/0.6W/350V
R807	=	2.74K	MF/0.6W/350V
R808	=	562	MF/0.6W/350V
R809	=	100	MF/0.6W/350V
R810	=	TNR12G821K	MARCON
R811	=	1.0	MF/0.6W/350V
R812	=	1.0	MF/0.6W/350V
R835	=	475K	MF/0.6W/350V
R836	=	1.0	MF/0.6W/350V
R850	=	3.32K	MF/0.6W/350V
R851	=	10K	MF/0.6W/350V
R852	=	3.32K	MF/0.6W/350V
R853	=	1K	MF/0.6W/350V
R854	=	10K	MF/0.6W/350V
T302	=	XT264	DELTA

### OUTPUT SECTION SM7020

C400	=	1000PF 1600V	WIMA
C401	=	1000PF 1600V	WIMA
C402	=	4700PF 63V	POLYPROP
C403	=	4700PF 63V	POLYPROP
C404	=	4700PF 63V	POLYPROP
C405	=	220PF 100V	POLYPROP
C406	=	10NF 250V	MET POLYES
C407	=	10NF 250V	MET POLYES
C408	=	10NF 1000V	MET POLYES
C409	=	10NF 1000V	MET POLYES
C410	=	15UF 16V	SOLID ALU
C800	=	5000PF 250V	CERAMIC
C801	=	0.1UF 630V	MET POLYES
C802	=	100UF 100V	CHEM-CON
C803	=	100UF 100V	CHEM-CON
C804	=	100UF 100V	CHEM-CON
C805	=	0.22UF 250V	RMS X2
C806	=	5000PF 250V	CERAMIC
C807	=	22UF 100V	CHEMI-CON
C808	=	22UF 100V	CHEMI-CON
C809	=	0.1UF 630V	MET POLYES
C810	=	0.1UF 630V	MET POLYES
C811	=	100UF 100V	CHEM-CON
C812	=	100UF 100V	CHEM-CON
C813	=	100UF 100V	CHEM-CON
C814	=	100UF 100V	CHEM-CON
C815	=	100UF 100V	CHEM-CON
C816	=	220NF 100V	MULT LAYER
C817	=	220NF 100V	MULT LAYER
C818	=	220NF 100V	MULT LAYER
C819	=	100UF 100V	CHEM-CON
C820	=	100UF 100V	CHEM-CON
C821	=	100UF 100V	CHEM-CON
C822	=	100UF 100V	CHEM-CON
C823	=	100UF 100V	CHEM-CON
C824	=	100UF 100V	CHEM-CON

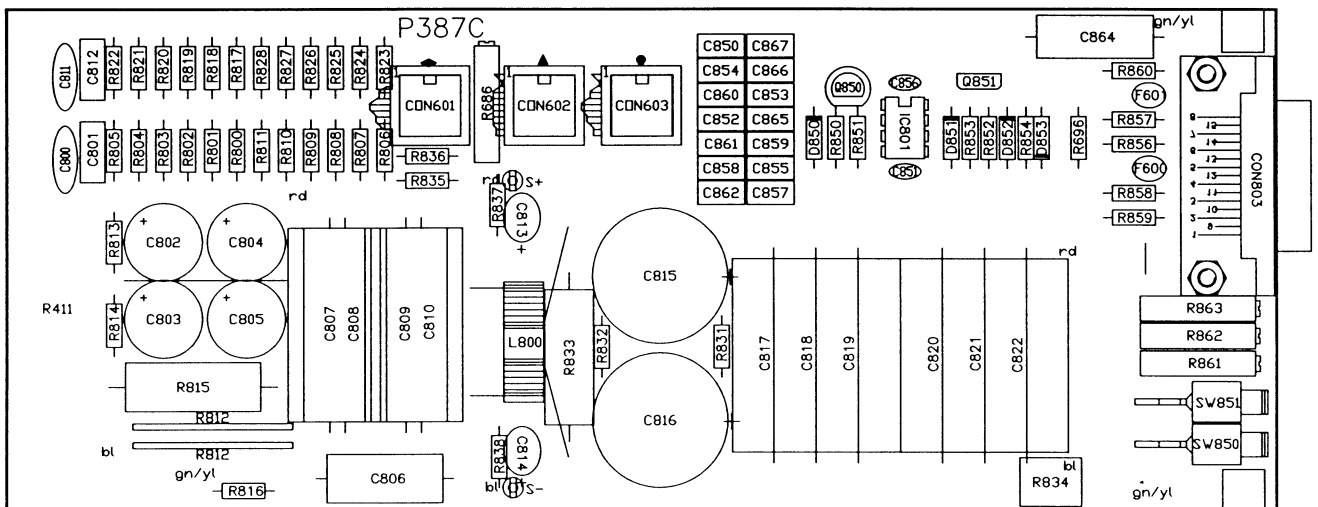


C825	=	100UF 100V	CHEM-CON
C826	=	100UF 100V	CHEM-CON
C827	=	100UF 100V	CHEM-CON
C851	=	100PF 1000V	CERAMIC
C856	=	100PF 1000V	CERAMIC
C870	=	2200PF 250V	CERAMIC
C871	=	470PF 400V RMS	SAFETY
C872	=	2200PF 250V	CERAMIC
C873	=	2200PF 250V	CERAMIC
D400	=	BYV52-PI-200	ST
D402	=	BYV52-PI-200	ST
D404	=	BZX85-C51	ITT
D405	=	BZX85-C51	ITT
D406	=	BZX85-C51	ITT
D407	=	BZX85-C15	ITT
D408	=	BZX85-C15	ITT
D409	=	BZX85-C15	ITT
D410	=	1N4148	PHILIPS
D411	=	1N4148	PHILIPS
D412	=	1N4148	PHILIPS
D445	=	BZX85-C36	ITT
D446	=	BZX85-C36	ITT
D447	=	1N4148	PHILIPS
D448	=	1N4148	PHILIPS
D850	=	BZX55-C3V3	ITT
D851	=	1N4148	PHILIPS
D852	=	1N4148	PHILIPS
D853	=	ZPD 8.2	ITT
IC400	=	HEF4011BD	PHILIPS
IC401	=	HEF4069UBD	PHILIPS
IC801	=	LM358	ST
L400	=	XL266	DELTA
L401	=	XL266	DELTA
L402	=	XL266	DELTA
L403	=	XL266	DELTA
L404	=	XL268	DELTA
L800	=	XL273	DELTA
L801	=	XL277	DELTA
Q400	=	IRFIZ44	IR
Q401	=	IRFIZ44	IR
Q402	=	IRFIZ44	IR
Q403	=	BS170	ITT
Q404	=	BS170	ITT
Q850	=	BS170	ITT
Q851	=	BSS92	PHILIPS
R400	=	68	MF/3.0W/750V
R401	=	68	MF/3.0W/750V
R402	=	1K	MF/0.6W/350V
R403	=	1K	MF/0.6W/350V
R404	=	1K	MF/0.6W/350V
R405	=	PTC 600	C884 SIEMENS
R406	=	PTC 600	C884 SIEMENS
R407	=	PTC 600	C884 SIEMENS
R417	=	10K	MF/0.6W/350V
R418	=	10K	MF/0.6W/350V
R419	=	2.21K	MF/0.6W/350V
R420	=	4.75K	MF/0.6W/350V


R421	=	6.81K	MF/0.6W/350V
R422	=	6.81K	MF/0.6W/350V
R423	=	10K	MF/0.6W/350V
R424	=	10K	MF/0.6W/350V
R800	=	1.8M	MF/0.25W/1600V
R801	=	8.25K	MF/0.6W/350V
R802	=	8.25K	MF/0.6W/350V
R803	=	6.81K	MF/0.6W/350V
R804	=	6.81K	MF/0.6W/350V
R805	=	5.62K	MF/0.6W/350V
R806	=	2.74K	MF/0.6W/350V
R807	=	0.137	R/M
R808	=	1.0	MF/0.6W/350V
R809	=	1.0	MF/0.6W/350V
R810	=	5K62	MF/0.1%/TC=25
R811	=	7.50K	MF/0.1%/TC=25
R812	=	7.50K	MF/0.1%/TC=25
R813	=	7.50K	MF/0.1%/TC=25
R814	=	7.50K	MF/0.1%/TC=25
R815	=	2.74K	MF/0.1%/TC=25
R816	=	TNR12G821K	MARCON
R817	=	4.75K	MF/0.6W/350V
R818	=	100	MF/0.6W/350V
R850	=	3.32K	MF/0.6W/350V
R851	=	10K	MF/0.6W/350V
R852	=	3.32K	MF/0.6W/350V
R853	=	1K	MF/0.6W/350V
R854	=	10K	MF/0.6W/350V
T302	=	XT262	DELTA
T400	=	XT271	DELTA
T401	=	XT272	DELTA

### OUTPUT SECTION SM3004


C402	=	4700PF 63V	POLYPROP
C403	=	68NF 250V RMS	X2
C404	=	10NF 1000V	MET POLYES
C405	=	220PF 100V	POLYPROP
C407	=	10NF 250V	MET POLYES
C410	=	15UF 16V	SOLID ALU
C425	=	VJ1206 470PF500V	VITRA
C426	=	VJ1206 470PF500V	VITRA
C427	=	VJ1206 470PF500V	VITRA
C428	=	680PF 500V NPO	VITR
C429	=	680PF 500V NPO	VITR
C430	=	VJ1206 470PF500V	VITRA
C431	=	VJ1206 470PF500V	VITRA
C432	=	VJ1206 470PF500V	VITRA
C433	=	680PF 500V NPO	VITR
C434	=	680PF 500V NPO	VITR
C435	=	VJ1206 470PF500V	VITRA
C436	=	VJ1206 470PF500V	VITRA
C437	=	VJ1206 470PF500V	VITRA
C438	=	VJ1206 470PF500V	VITRA
C439	=	VJ1206 470PF500V	VITRA
C440	=	VJ1206 470PF500V	VITRA

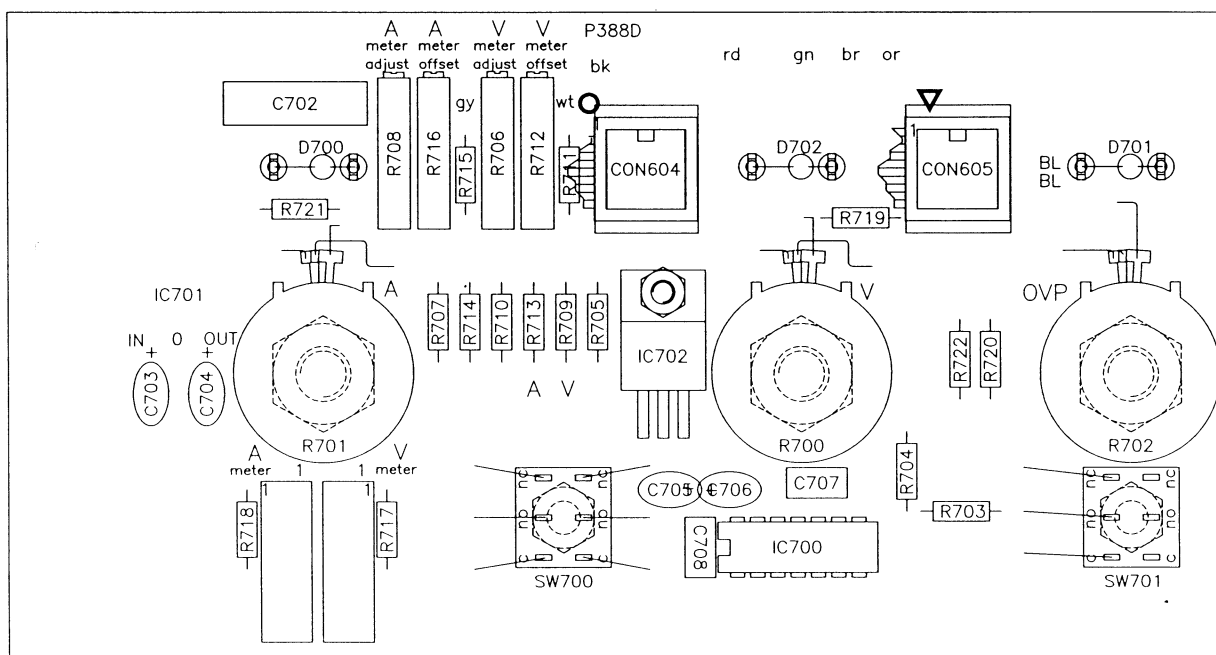

C441	=	VJ1206 470PF500V	VITRA	Q400	=	STP11NB 40FP	ST
C442	=	VJ1206 470PF500V	VITRA	Q404	=	BS170	ITT
C443	=	VJ1206 470PF500V	VITRA	Q850	=	BS170	ITT
C444	=	VJ1206 470PF500V	VITRA	Q851	=	ZVP 0540	ZETEX
C800	=	2200PF 250V	CERAMIC	R408	=	1K	MF/0.6W/350V
C801	=	47NF 250V	MET POLYES	R411	=	PTC 1K1	SIEMENS
C802	=	15UF 200V	CHEMI-CON	R418	=	10K	MF/0.6W/350V
C803	=	15UF 200V	CHEMI-CON	R419	=	2.21K	MF/0.6W/350V
C804	=	15UF 200V	CHEMI-CON	R420	=	4.75K	MF/0.6W/350V
C805	=	15UF 200V	CHEMI-CON	R422	=	6.81K	MF/0.6W/350V
C806	=	68NF 250V RMS	X2	R423	=	10K	MF/0.6W/350V
C807	=	1UF 400V	MET POLYES	R424	=	10K	MF/0.6W/350V
C808	=	1UF 400V	MET POLYES	R425	=	220	MF/2.0W/500V
C809	=	1UF 400V	MET POLYES	R426	=	220	MF/2.0W/500V
C810	=	1UF 400V	MET POLYES	R427	=	220	MF/2.0W/500V
C811	=	2200PF 250V	CERAMIC	R428	=	220	MF/2.0W/500V
C812	=	47NF 250V	MET POLYES	R429	=	220	MF/2.0W/500V
C813	=	15UF 16V	SOLID ALU	R430	=	220	MF/2.0W/500V
C814	=	15UF 16V	SOLID ALU	R431	=	220	MF/2.0W/500V
C815	=	220UF 200V	CHEMI-CON	R432	=	220	MF/2.0W/500V
C816	=	220UF 200V	CHEMI-CON	R433	=	220	MF/2.0W/500V
C817	=	1UF 400V	MET POLYES	R434	=	220	MF/2.0W/500V
C818	=	1UF 400V	MET POLYES	R435	=	220	MF/2.0W/500V
C819	=	1UF 400V	MET POLYES	R436	=	220	MF/2.0W/500V
C820	=	1UF 400V	MET POLYES	R437	=	220	MF/2.0W/500V
C821	=	1UF 400V	MET POLYES	R438	=	220	MF/2.0W/500V
C822	=	1UF 400V	MET POLYES	R439	=	220	MF/2.0W/500V
C823	=	68NF 250V RMS	X2	R440	=	220	MF/2.0W/500V
C824	=	1UF 400V	MET POLYES	R441	=	220	MF/2.0W/500V
C825	=	68NF 250V RMS	X2	R442	=	220	MF/2.0W/500V
C851	=	100PF 1000V	CERAMIC	R443	=	220	MF/2.0W/500V
C856	=	100PF 1000V	CERAMIC	R444	=	220	MF/2.0W/500V
C864	=	10NF 1000V	MET POLYES	R800	=	15K	MF/0.6W/350V
C870	=	2200PF 250V	CERAMIC	R801	=	15K	MF/0.6W/350V
C872	=	2200PF 250V	CERAMIC	R802	=	18.2K	MF/0.6W/350V
C873	=	2200PF 250V	CERAMIC	R803	=	18.2K	MF/0.6W/350V
D400	=	BYW81-PI-200	ST	R804	=	18.2K	MF/0.6W/350V
D401	=	BYW81-PI-200	ST	R805	=	2.74K	MF/0.6W/350V
D402	=	BYW81-PI-200	ST	R806	=	1.82K	MF/0.6W/350V
D403	=	BYW81-PI-200	ST	R807	=	15K	MF/0.6W/350V
D404	=	BYW81-PI-200	ST	R808	=	15K	MF/0.6W/350V
D410	=	BYW81-PI-200	ST	R809	=	15K	MF/0.6W/350V
D411	=	BYW81-PI-200	ST	R810	=	15K	MF/0.6W/350V
D412	=	BYW81-PI-200	ST	R811	=	15K	MF/0.6W/350V
D413	=	BYW81-PI-200	ST	R812	=	SHUNT 50MV	DELTA
D414	=	BYW81-PI-200	ST	R813	=	150K	MF/0.6W/350V
D420	=	BYW81-PI-200	ST	R814	=	150K	MF/0.6W/350V
D421	=	BYW81-PI-200	ST	R815	=	0.39R	WW/6.0W/200V
D422	=	BYW81-PI-200	ST	R816	=	1.0	MF/0.6W/350V
D423	=	BYW81-PI-200	ST	R817	=	14.7K	MF/0.1%/TC=25
D424	=	BYW81-PI-200	ST	R818	=	14.7K	MF/0.1%/TC=25
D430	=	BYW81-PI-200	ST	R819	=	14.7K	MF/0.1%/TC=25
D431	=	BYW81-PI-200	ST	R820	=	14.7K	MF/0.1%/TC=25
D432	=	BYW81-PI-200	ST	R821	=	14.7K	MF/0.1%/TC=25
D433	=	BYW81-PI-200	ST	R822	=	2.74K	MF/0.1%/TC=25
D434	=	BYW81-PI-200	ST	R823	=	14.7K	MF/0.1%/TC=25
D440	=	STTA 806 DI	ST	R824	=	14.7K	MF/0.1%/TC=25
D442	=	STTA 806 DI	ST	R825	=	14.7K	MF/0.1%/TC=25
D443	=	BZX85-C15	ITT	R826	=	14.7K	MF/0.1%/TC=25
D444	=	1N4148	PHILIPS	R827	=	14.7K	MF/0.1%/TC=25
D446	=	BZX85-C36	ITT	R828	=	14.7K	MF/0.1%/TC=25
D448	=	1N4148	PHILIPS	R831	=	150K	MF/0.6W/350V
D850	=	BZX55-C3V3	ITT	R832	=	150K	MF/0.6W/350V
D851	=	1N4148	PHILIPS	R833	=	0.39R	WW/6.0W/200V
D852	=	1N4148	PHILIPS	R834	=	TNR12G821K	MARCON
D853	=	ZPD 8.2	ITT	R835	=	5.6M	MF/0.25W/1600V
IC400	=	HEF4011BD	PHILIPS	R836	=	1.0	MF/0.6W/350V
IC401	=	HEF4069UBD	PHILIPS	R837	=	8.25K	MF/0.6W/350V
IC801	=	LM358	ST	R838	=	100	MF/0.6W/350V
L400	=	XL485	DELTA	R850	=	3.32K	MF/0.6W/350V
L401	=	XL485	DELTA	R851	=	10K	MF/0.6W/350V
L402	=	XL269	DELTA	R852	=	3.32K	MF/0.6W/350V
L403	=	XL280	DELTA	R853	=	1K	MF/0.6W/350V
L404	=	XL280	DELTA	R854	=	10K	MF/0.6W/350V
L405	=	XL300	DELTA	T302	=	XT263	DELTA
L800	=	XL274	DELTA	T401	=	XT272	DELTA
L801	=	XL279	DELTA				

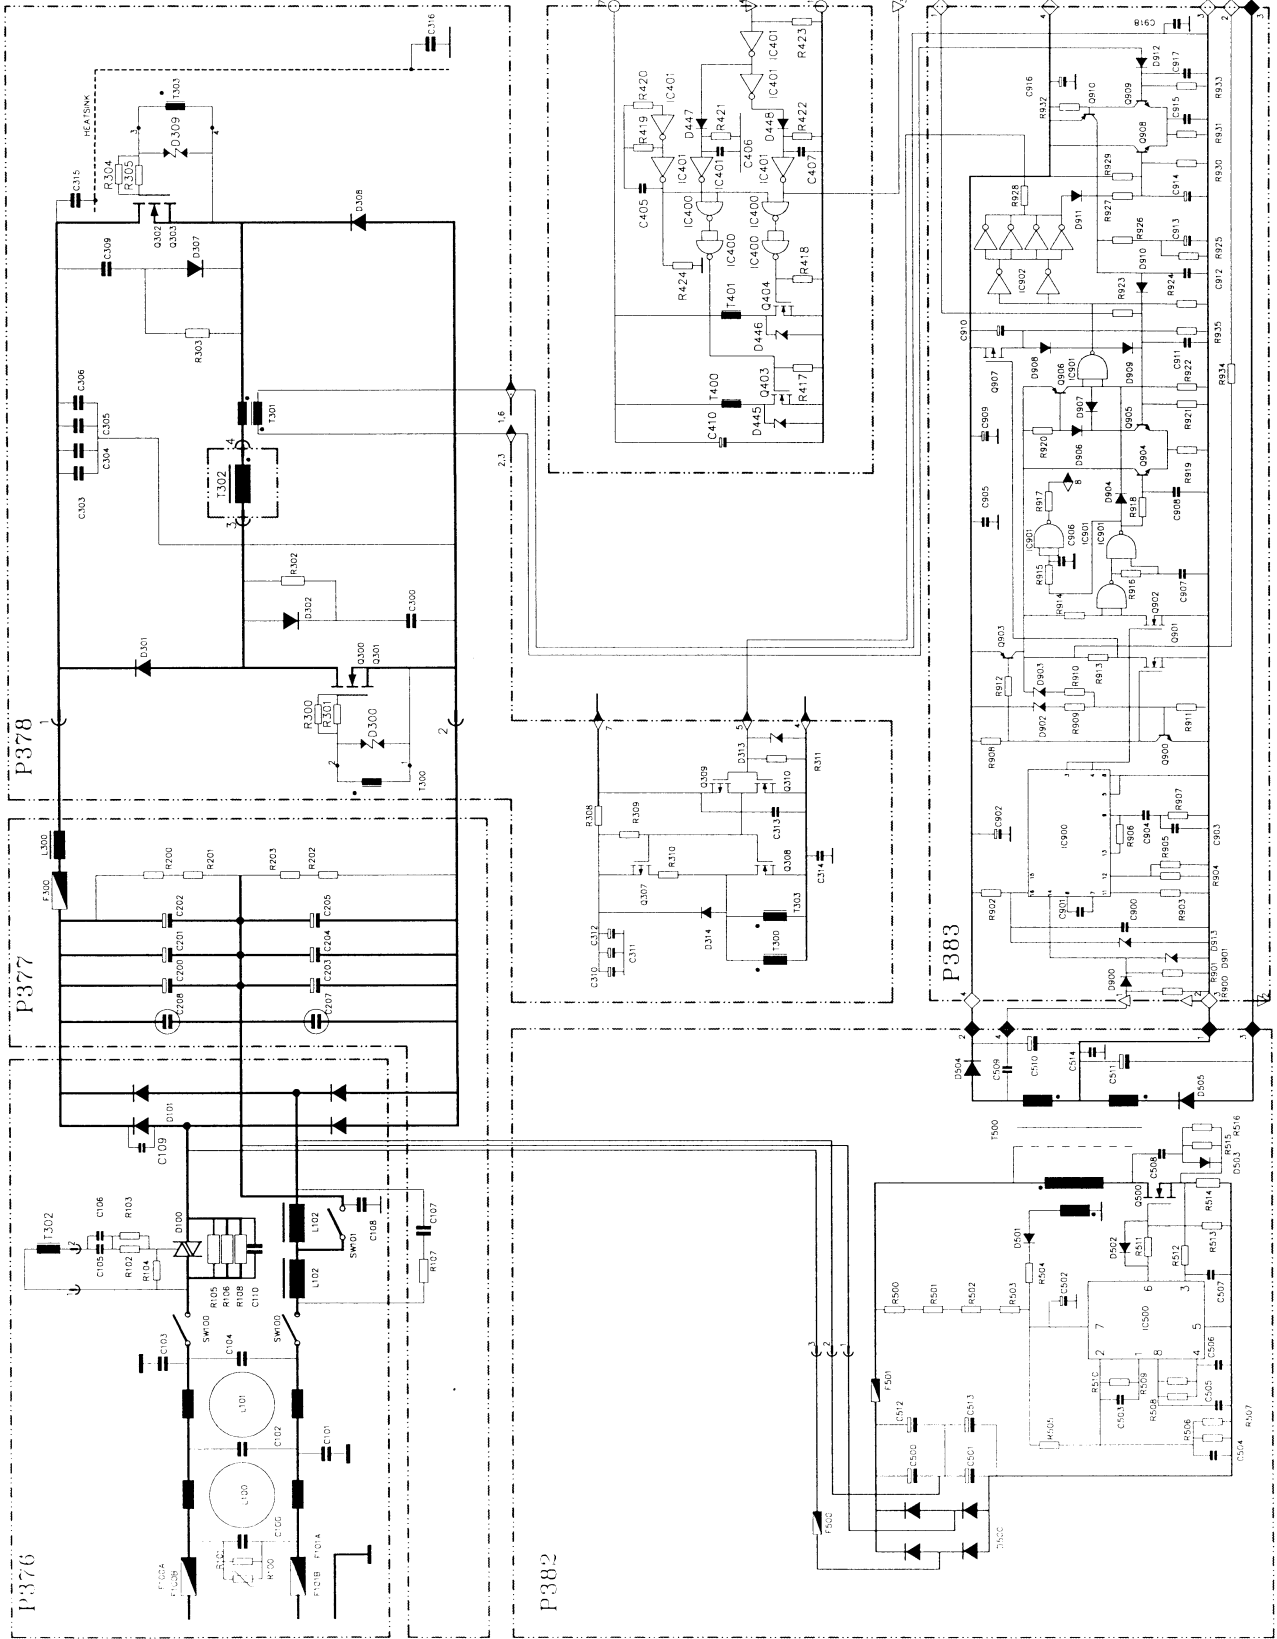


P386 = OUTPUT BOARD SM7020

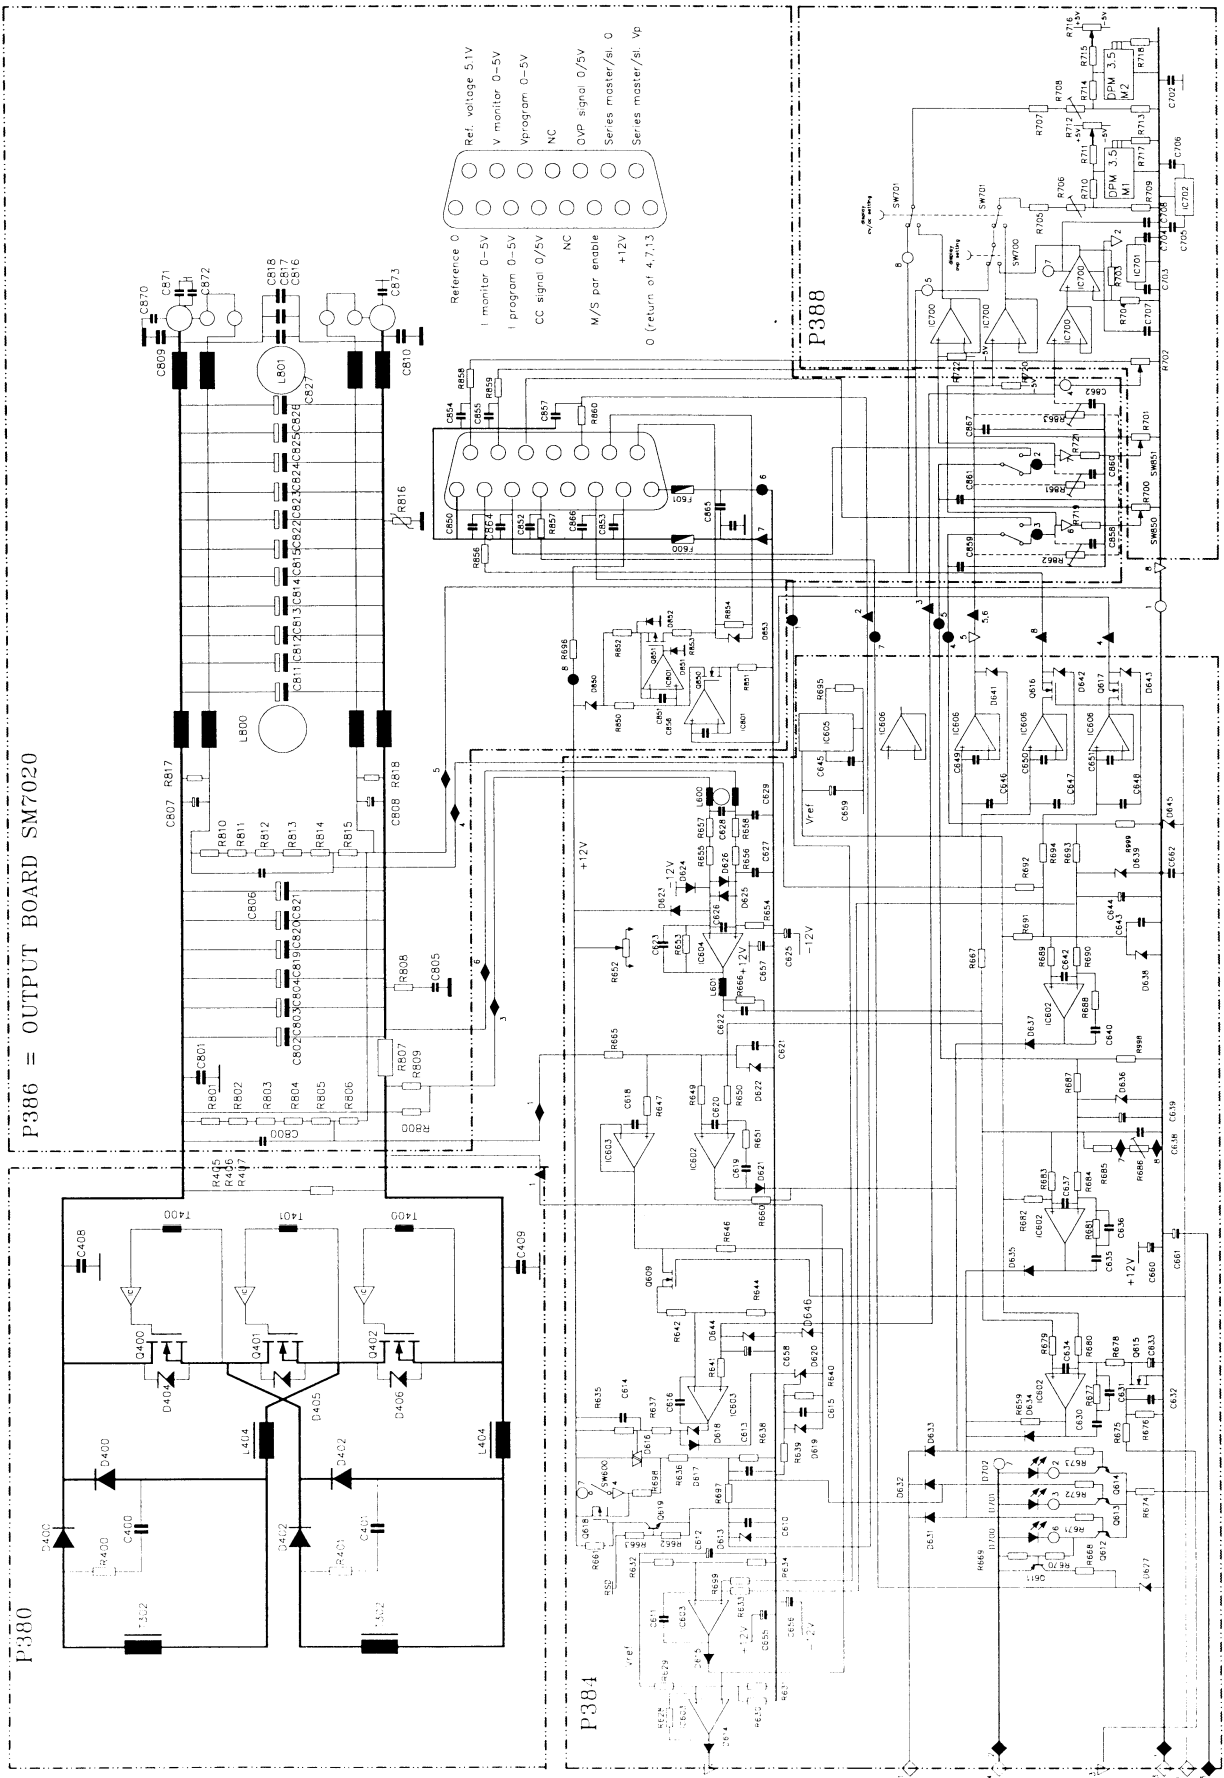

P380


P381

P388

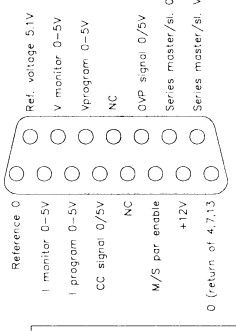


P381

P387 = OUTPUT BOARD SM3004

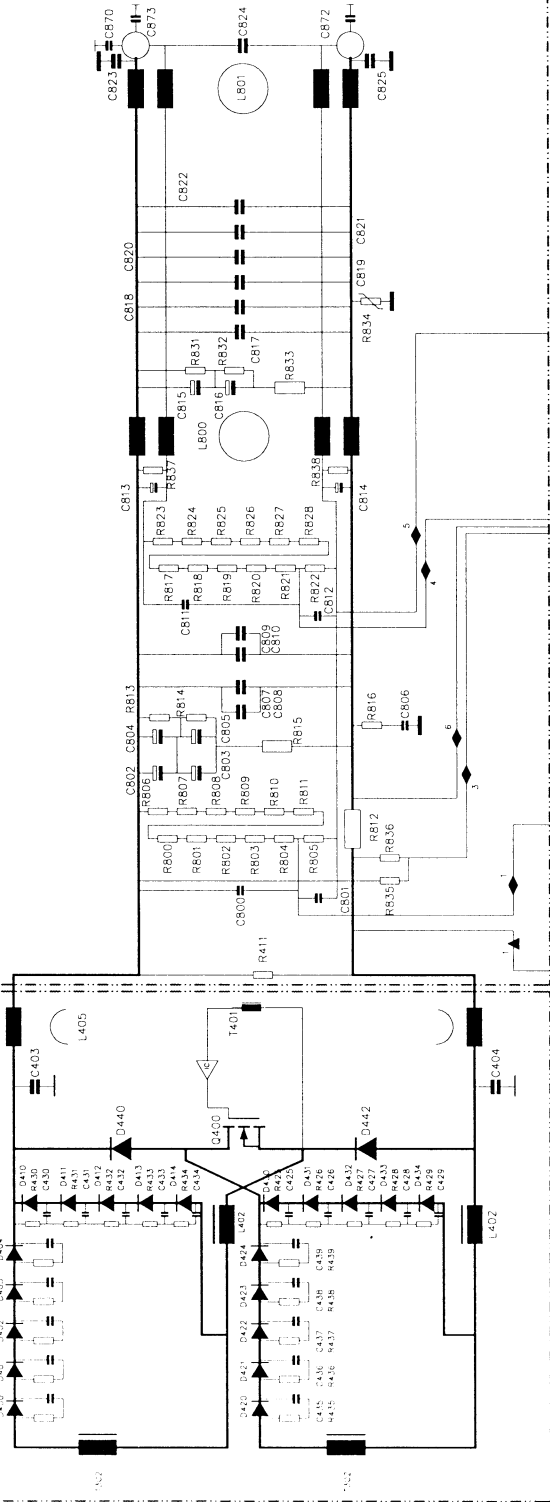

P385 = OUTPUT BOARD SM1540

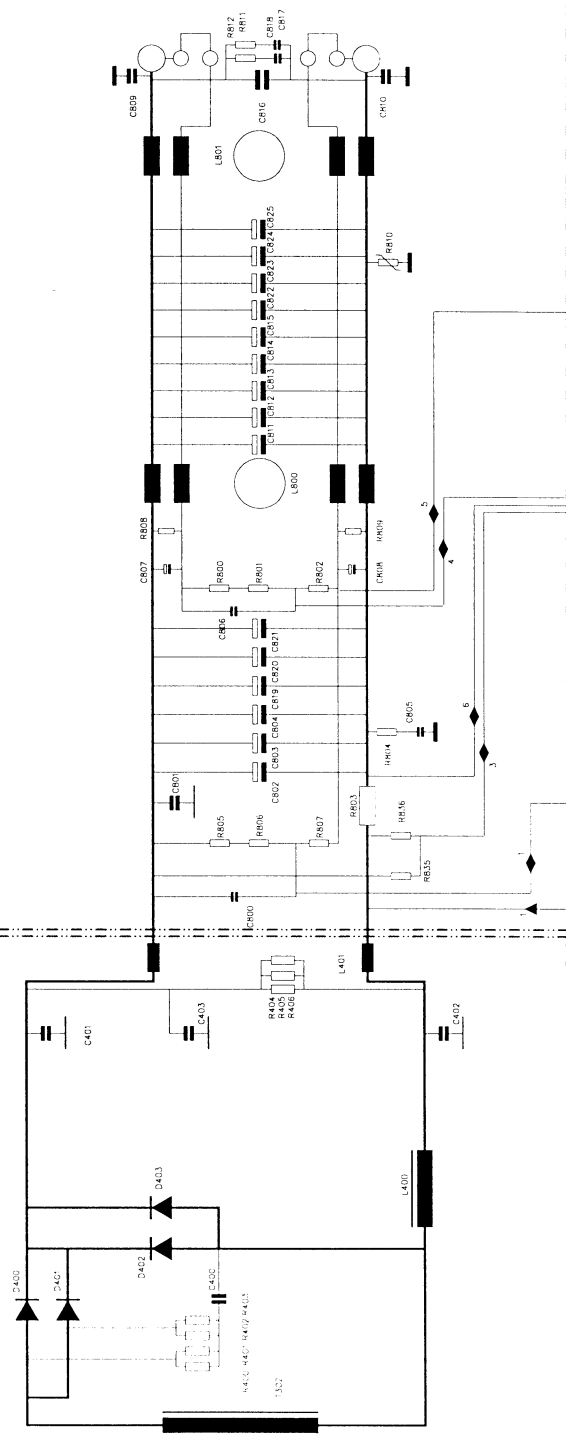





## EC Declaration of Conformity

We

Delta Elektronika  
P.O. BOX 27  
4300 AA Zierikzee  
The Netherlands

declare under sole responsibility that the following Power Supplies:

**SM 1540-D**  
**SM 7020-D**  
**SM 3004-D**

meet the intent of Directives 89/336/EEC; 92/31/EEC; 93/68/EEC for Electromagnetic Compatibility and Directives 73/23/EEC; 93/68/EEC regarding Electrical Safety. (Low Voltage Directive) Compliance was demonstrated to the following specification as listed in the official Journal of the European Communities:

**EN 50081-1 Generic Emissions:** (residential, light industrial)

EN 55022	Radiated, Class B
EN 55022	Conducted, Class B
EN 61000-3-2	Power Harmonics
EN 61000-3-3	Voltage fluctuation and flicker

**EN 50082-1 Generic Immunity:** (residential, light industrial)

**EN 50082-2 Generic Immunity:** (industrial environment)

EN 61000-4-2	Electrostatic Discharge	Level 3.
EN 61000-4-4	Electrical Fast Transients / Bursts	Level 4.
ENV 50140	Radiated electromagnetic fields	Level 3.
ENV 50141	Conducted electromagnetic fields	Level 3.
EN 61000-4-5	Surge on DC output	Level 3, differential mode.
EN 61000-4-5	Surge on DC output	Level 2, common mode.
EN 61000-4-5	Surge on line input	Level 4.
EN 61000-4-11	Voltage variations and dips	

**EN 60950 Safety of IT equipment**

**IEC 1010 Safety of electrical equipment for measurement, control and laboratory use**

Managing director