

Eddystone

GENERAL-PURPOSE HF/MF
COMMUNICATION RECEIVERS

MODEL 1830 SERIES



Model 1830/1

120kHz-31MHz

THIS HANDBOOK COVERS MODELS 1830/1, 1830/2
AND 1830/3, SER. Nos. 0001-0050 ONLY

Manufactured in England by



EDDYSTONE RADIO LIMITED

MEMBER OF MARCONI COMMUNICATIONS SYSTEMS LIMITED
ALVECHURCH ROAD, BIRMINGHAM B31 3PP

Telephone: 021-475 2231

Telex: 337081



ISSUE NUMBER 1, NOVEMBER 1971

PRINTED IN ENGLAND

L I S T O F C O N T E N T S

| | | | |
|-----------------------|--|--|----|
| <u>Section 1</u> | <u>GENERAL DESCRIPTION AND PERFORMANCE SUMMARY</u> | GENERAL DESCRIPTION | 5 |
| | | GENERAL SPECIFICATION | 6 |
| | | TYPICAL PERFORMANCE | 6 |
| <u>Section 2</u> | <u>CIRCUIT DESCRIPTION</u> | Introduction | 8 |
| | | Calibrator/Relay Unit | 9 |
| | | Main RF Assembly | 9 |
| | | Peak-RF Board | 9 |
| | | 1st Oscillator Circuitry | 9 |
| | | Tunable IF Unit | 11 |
| | | 100kHz IF Filter Unit | 12 |
| | | 100kHz IF Amplifier Board | 13 |
| | | CW/SSB Detector and BFO Unit | 13 |
| | | Noise Limiter, Meter and Negative Supply Board | 13 |
| | | Audio Amplifier Board | 13 |
| | | Power Supply Unit | 14 |
| <u>Section 3</u> | <u>MECHANICAL CONSTRUCTION</u> | General | 14 |
| | | Weights | 14 |
| | | Internal Construction | 14 |
| <u>Section 4</u> | <u>INSTALLATION</u> | GENERAL | 18 |
| | | Mounting | 18 |
| | | Guarantee Card | 18 |
| | | ASSEMBLY INSTRUCTIONS | 19 |
| | | MAINS VOLTAGE ADJUSTMENT | 19 |
| | | EXTERNAL CONNECTIONS: | |
| | | Earthing | 20 |
| | | Operating from AC Mains Supply | 21 |
| | | Operating from Battery Supplies | 21 |
| | | Aerial Input | 21 |
| | | Synthesizer Input | 21 |
| | | IF Output | 22 |
| | | Telephone Output | 22 |
| Ancillaries Connector | 22 | | |
| <u>Section 5</u> | <u>OPERATION</u> | CONTROLS | 23 |
| | | CONTROL FUNCTIONS | 23 |
| | | TUNING INSTRUCTIONS | 27 |
| | | CRYSTAL-CONTROLLED WORKING | 28 |
| | | Synthesized Operation | 30 |
| | | Operation with crystal- controlled 2nd Oscillator | 31 |
| | | Dual-Diversity Working | 31 |
| | | Standardising the Crystal Calibrator | 31 |

Section 6

MAINTENANCE

| | |
|---|----|
| GENERAL | 32 |
| FUSE REPLACEMENT | 32 |
| DIAL LAMP REPLACEMENT | 32 |
| INSTRUCTIONS FOR RE-STRINGING THE CURSOR DRIVE CORDS | 33 |
| INSTRUCTIONS FOR REMOVING UNITS, PRINTED BOARDS ETC. | 36 |
| RE-ALIGNMENT: | |
| General | 37 |
| Re-alignment of the 100kHz IF Amplifier and Filter | 37 |
| Re-alignment of the BFO | 38 |
| Re-alignment of the Incremental Osc. | 39 |
| Re-alignment of Tunable IF Transformer | 39 |
| Re-alignment of the RF Section | 39 |
| PERFORMANCE TESTING | 42 |

| | | |
|---------------------|---|----|
| <u>Appendix 'A'</u> | <u>VOLTAGE ANALYSIS</u> | 44 |
| <u>Appendix 'B'</u> | <u>SEMICONDUCTOR COMPLEMENT</u> | 48 |
| <u>Appendix 'C'</u> | <u>COMPONENT VALUES TOLERANCES AND RATINGS</u> | 49 |
| <u>Appendix 'D'</u> | <u>LIST OF SPARES</u> | 59 |
| <u>Appendix 'E'</u> | <u>PRINTED CIRCUIT BOARD PATTERNS AND LEGENDS</u> | 65 |

I L L U S T R A T I O N S

| | | |
|----------|--|-------|
| Fig. 2.1 | BLOCK DIAGRAM OF BASIC 1830/1 RECEIVER | 10/11 |
| Fig. 2.2 | SIMPLIFIED CIRCUITS OF 100kHz IF FILTER | 12 |
| Fig. 3.1 | OVERALL DIMENSIONS OF 1830 SERIES IN ALL MOUNTING STYLES | 15 |
| Fig. 3.2 | PLAN VIEW OF 1830/1 RECEIVER | 16 |
| Fig. 3.3 | UNDERSIDE VIEW OF 1830/1 RECEIVER | 17 |
| Fig. 4.1 | POWER TRANSFORMER PRIMARY TAPPINGS | 19 |
| Fig. 4.2 | LINKING OF DC SUPPLY CONNECTOR FOR AC WORKING | 21 |
| Fig. 4.3 | DC SUPPLY CONNECTOR ARRANGED FOR BATTERY WORKING | 21 |
| Fig. 4.4 | EXTERNAL CONNECTIONS TO ANCILLARIES CONNECTOR | 22 |
| Fig. 5.1 | 1830 SERIES PANEL CONTROLS | 26 |
| Fig. 6.1 | CORDING ARRANGEMENT ON MAIN CURSOR DRIVE | 34 |
| Fig. 6.2 | CORDING ARRANGEMENT ON INCREMENTAL CURSOR DRIVE | 34 |

CIRCUIT DIAGRAM OF 1830 SERIES RECEIVERS

Rear Cover.

A M E N D M E N T R E C O R D

| Amend No. | Pages subject to change | Amended by | Date |
|-----------|-------------------------|------------|------|
| 1 | | | |
| 2 | | | |
| 3 | | | |
| 4 | | | |
| 5 | | | |
| 6 | | | |
| 7 | | | |
| 8 | | | |
| 9 | | | |
| 10 | | | |
| 11 | | | |
| 12 | | | |
| 13 | | | |
| 14 | | | |
| 15 | | | |
| 16 | | | |
| 17 | | | |
| 18 | | | |
| 19 | | | |
| 20 | | | |
| 21 | | | |
| 22 | | | |
| 23 | | | |
| 24 | | | |
| 25 | | | |
| 26 | | | |
| 27 | | | |
| 28 | | | |
| 29 | | | |
| 30 | | | |

Eddystone Radio Limited reserve the right to modify the content of this publication as necessary to accommodate modifications, design improvements etc. Amendment Sheets will be incorporated where applicable at date of issue.

Section 1

GENERAL DESCRIPTION AND PERFORMANCE SUMMARY

Eddystone Model 1830/1 is the standard production version in a family of general-purpose communication receivers known collectively as the '1830 Series'. It provides reception facilities for CW, AM and SSB transmissions in the band 120kHz to 31MHz and operates directly from any 12V DC source or standard 40-60Hz supply. The receiver is designed for installation in 483mm (19in) equipment racking and is also available with cabinet for normal bench-mounting. In the latter form it can be equipped with a detachable plinth loudspeaker unit or special resilient mounts for mobile use.

A highly advanced circuit design is employed, utilising single-conversion on the low frequency ranges and double-conversion from 1.5MHz up. The 1st IF is tunable when using double-conversion, providing an incremental tuning facility with a coverage of ± 50 kHz relative to any frequency selected with the main tuning control. A crystal calibrator is incorporated which allows frequencies to be set to within 1kHz after standardising the main scale at the nearest 100kHz checkpoint.

The normal tunable 1st Oscillator can be taken out of circuit to permit crystal-controlled working at frequencies in the band 1.5-31MHz. Up to ten crystals can be installed at any one time, these being housed in a plug-in crystal box fitted at the front of the receiver. Interchangeable boxes are available to order when more than ten crystal-controlled channels are required.

The incremental 1st IF tuning facility can be retained when using the internal crystal-controlled 1st Oscillator, so relaxing the usual requirement for precise choice of crystal frequency in this mode of operation. Alternatively, the 2nd Oscillator can also be fitted with a crystal to permit fully unattended high-stability working. Circuit arrangements are such that both 1st Oscillators can be disabled to allow use of an external synthesizer for frequency control.

Selectivity is adjustable to suit signal mode and the normal diode detector is replaced by a product detector when receiving CW and SSB. The associated beat oscillator generates pre-tuned carrier insertion frequencies for SSB reception, fine adjustment being possible by use of the BFO control which functions with reduced coverage in this mode of operation. A noise limiter is fitted and 100kHz IF output is available for connection to ancillary equipment.

Separate AGC systems are employed for the RF and IF stages with provision for manual control of IF gain when required. The IF AGC line is brought out for interconnection when operating receivers in dual-diversity and is also used to operate the integral carrier-level meter. The RF AGC is permanently connected.

Audio outputs are available for loudspeaker, headset and lines, the line output being fed from an independent low-level amplifier with adjustable pre-set gain control. A monitor speaker is fitted and all external connections except the headset socket are located at the rear.

Models 1830/2 & 1830/3

These two receivers are current production variants of the standard receiver. Model 1830/2 differs from the 1830/1 in that provision is made for crystal-controlled working on up to fifty channels in the band 1.5-31MHz. This version has a deeper panel to accommodate the additional circuitry and controls.

Model 1830/3 is physically identical to the 1830/1 but differs electrically in the actual frequency coverage provided on Ranges 7 & 8. Frequencies in the range 535kHz to 920kHz are omitted on this version.

GENERAL SPECIFICATION

Frequency Coverage

1830/1 & 1830/2: 120kHz to 31MHz in nine ranges with incremental facility above 1.5MHz.

| | | |
|---------|----|-------------------|
| Range 1 | :: | 18.0MHz - 31.0MHz |
| Range 2 | :: | 10.0MHz - 19.0MHz |
| Range 3 | :: | 5.5MHz - 10.0MHz |
| Range 4 | :: | 2.9MHz - 5.5MHz |
| Range 5 | :: | 1.5MHz - 2.9MHz |
| Range 6 | :: | 920kHz - 1750kHz |
| Range 7 | :: | 480kHz - 950kHz |
| Range 8 | :: | 240kHz - 480kHz |
| Range 9 | :: | 120kHz - 250kHz |

1830/3: 120kHz to 31MHz in nine ranges with a break in coverage from 535-920kHz. Incremental facility above 1.5MHz.

| | | |
|---------|----|-------------------|
| Range 1 | :: | 18.0MHz - 31.0MHz |
| Range 2 | :: | 10.0MHz - 19.0MHz |
| Range 3 | :: | 5.5MHz - 10.0MHz |
| Range 4 | :: | 2.9MHz - 5.5MHz |
| Range 5 | :: | 1.5MHz - 2.9MHz |
| Range 6 | :: | 920kHz - 1750kHz |
| Range 7 | :: | 400kHz - 535kHz |
| Range 8 | :: | 200kHz - 400kHz |
| Range 9 | :: | 120kHz - 250kHz |

Intermediate Frequencies

1st IF :: Tunable 1300 - 1400kHz to provide incremental tuning facility on Ranges 1-5. 1350kHz at 'Ø' setting.

2nd IF :: 100kHz.

BFO/CIO :: ± 5kHz swing at 'CW' and ± 100Hz at 'USB'/'LSB'.

Aerial Input Impedance

75Ω (unbalanced) on all ranges.

Reception Modes

A1, A2 & A2H telegraphy. A3, A3A, A3H & A3J telephony with upper or lower side-band selectable in SSB mode.

Operational Temperature Rating

0°C to +50°C.

Power Supplies

AC :: 100/130V or 200/260V (40-60Hz). Consumption of the order 16VA.

DC :: 12V (+ve earth, -ve earth or floating battery). Consumption: 320mA quiescent, 700mA at 1.5W output.

Semiconductor Complement

Thirty-three transistors plus twenty-one diodes and one integrated circuit.

Mounting Styles

Rack-mounting, bench-mounting and bench-mounting with resilient mounts. Plinth loudspeaker unit available to order.

Dimensions and Weight

Refer to pages 14 and 15.

TYPICAL PERFORMANCE †

Sensitivity (taken with 3kHz B/W)

AM :: 3μV for 15dB S/N ratio.
 CW/SSB :: 1μV for 15dB S/N ratio.

IF Selectivity

| <u>Position</u> | <u>-6dB</u> | <u>-60dB</u> |
|-----------------|-------------|--------------|
| 'N' (CRYSTAL) | 0.1kHz | 2kHz |
| 'CW' | 1.3kHz | 4.5kHz |
| 'SSB' | 3.0kHz | 9.0kHz |
| 'AM' | 8.0kHz | 28.0kHz |

Image Rejection

| | | | | |
|--------|---|--------|----|------|
| 120kHz | - | 1.5MHz | :: | 50dB |
| 1.5MHz | - | 18MHz | :: | 70dB |
| 18MHz | - | 31MHz | :: | 50dB |

IF Rejection

| | | | | |
|--------|---|--------|----|------|
| 120kHz | - | 300kHz | :: | 50dB |
| 300kHz | - | 1.6MHz | :: | 60dB |
| 1.6MHz | - | 31MHz | :: | 70dB |

Any given image or 1st IF breakthrough can be eliminated by off-setting the 1st IF and retuning.

Frequency Stability

Figures quoted after 15-minute warm-up period with free-running 2nd Oscillator.

1 part in $10^4/^{\circ}\text{C}$ with free-running 1st Oscillator.

3 parts in $10^5/^{\circ}\text{C}$ with crystal-controlled 1st Oscillator.

Cross Modulation

With a wanted signal 60dB above $1\mu\text{V}$, the interference produced by an unwanted signal 20kHz off-tune and of level 90dB above $1\mu\text{V}$ will be more than 30dB below standard output.

Blocking

With a wanted signal 60dB above $1\mu\text{V}$, an unwanted carrier 20kHz off-tune must be of a level exceeding 100dB above $1\mu\text{V}$ to affect the output by 3dB.

Intermodulation

The level of third-order intermodulation products given by two signals of equal strength lying at carrier + 1kHz and carrier + 1.6kHz will be at least 30dB below the level of either signal.

With a wanted signal 30dB above $1\mu\text{V}$, two unwanted signals whose sum or difference frequency equals that of the wanted signal, must each be of a level 80dB above $1\mu\text{V}$ to produce standard output.

AGC Characteristic

Output is maintained within 9dB for 90dB increase in signal from $3\mu\text{V}$ reference level. (taken at 8MHz)

AGC Time Constant

| <u>Position</u> | <u>Charge</u> | <u>Discharge</u> |
|-----------------|---------------|------------------|
| SHORT | 30mS | 0.5 sec |
| LONG | 200mS | 6.5 secs |

Audio Output

| | | |
|----------------------------|---|------------------------------------|
| Ext. speaker (3Ω) | : | 500mW at 5% distortion (1.5W max.) |
| Line (600Ω) | : | 10mW (adjustable). |
| Headset | : | Low/medium-Z. |

Audio Response

Within 6 dB over the range 200Hz to 6kHz.

IF Output (100kHz)

$3\mu\text{V}$ at aerial produces an IF output of at least 20mV across 75Ω .

Radiation

Less than 400pW (typically 20pW).

Calibration Accuracy

Main scale: 0.5% with incremental set to ' \emptyset ' and Cal. Adj. at mid-setting.

Incremental: 1kHz after standardising the main scale against 100kHz marker.

(†) Not to be interpreted as a test specification.

Section 2

CIRCUIT DESCRIPTION

Introduction

All variants in the 1830 Series employ a fully solid-state circuit and include an integral power unit for operation from any standard 40-60Hz supply: provision is also made for direct connection to a 12V battery when portable or emergency working is required. Supplies with positive earth, negative earth and even batteries on float charge with neither pole at earth potential can be accommodated by virtue of the type of construction employed: this provides complete isolation between the internal circuit earth rail and the main frame of the receiver, i.e. its cabinet, panel etc.

Isolation is extended to include external connections to Aerial, IF Output, Synth. Input and Headset, so ensuring complete safety when the internal circuitry is operating at other than true earth potential. A capacitor (C333) is fitted to provide an RF path between the two earths, and terminals at the rear permit linking circuit earth to the frame when isolation is not required. External earth returns from the loudspeaker, muting control circuit and diversity AGC outlet are taken directly to circuit earth and will therefore require isolated wiring in certain installations.

The Table which follows lists all the major sub-assemblies that make up the complete receiver. Terminations on each sub-assembly are coded and the associated wiring harness is numbered for convenience in servicing. Pages 9 to 14 are devoted to a brief description of each sub-assembly - a block diagram appears on pages 10 and 11.

TABLE 2.1 SUB-ASSEMBLIES USED IN 1830 SERIES RECEIVERS

| Receiver Section | Sub-assemblies |
|----------------------|--|
| <u>RF SECTION</u> | CALIBRATOR/RELAY UNIT MAIN RF ASSEMBLY (Coil Box) PEAK-RF BOARD *CRYSTAL OSCILLATOR UNIT *CRYSTAL BOX (Plug-in Unit) <p style="text-align: right;">NB: Standard Calibrator provides 100kHz markers. 500kHz Calibrator is available to order.</p> |
| <u>IF SECTION</u> | TUNABLE IF UNIT (2nd Mixer and Incremental Oscillator) 100kHz IF FILTER UNIT 100kHz IF AMPLIFIER BOARD CW/SSB DETECTOR AND BFO UNIT |
| <u>AUDIO SECTION</u> | AUDIO AMPLIFIER BOARD (Comprises two separate amplifiers) |
| <u>MISCELLANEOUS</u> | NOISE LIMITER, METER & NEGATIVE SUPPLY BOARD POWER UNIT (for AC working) |

(*) Model 1830/2 includes five complete 10-channel Crystal Oscillators.

Calibrator/Relay Unit

Aerial Relay: Aerial input to the coupling coils in the RF Assembly is routed via the normally-closed contacts of relay RLA/1 which is utilised for desensitizing the receiver when installed with an associated transmitter. The relay is a high-speed reed type with SPCO contact which is arranged to interrupt the aerial feeder and short down the input when switched to the muted condition. It is energised from the internal +11V supply by closing an external control circuit wired between pins 2 & 4 of the Ancillary Connector PL7. RLA/1 is also employed to limit interference from outside signals when carrying out a scale calibration check. In this function it is energised from one section of the CAL SWITCH when this is set to 'ON'.

Protection against high induced aerial voltages is provided by two pairs of reverse-connected diodes which are wired directly across the aerial feeder at its point of entry into the Calibrator/Relay Unit.

Crystal Calibrator: The calibrator circuit employs a 100kHz crystal oscillator with an associated harmonic amplifier from which output is taken via a small capacitor (3pF) to the drain of TR6. Markers are available at all 100kHz points on the main tuning scale and also appear at +50kHz and -50kHz on the incremental scale. Provision is made for standardising the crystal when maximum accuracy is required.

Main RF Assembly

This unit is divided into three screened compartments which house the circuitry for the RF Amplifier (rear section), 1st Mixer (centre section) and tunable 1st Oscillator (front section).

The RF Amplifier utilises a junction-FET and a single-gate MOSFET in a cascode circuit which is permanently connected to a delayed AGC outlet taken from the 100kHz IF: manual gain control is not applied. The aerial input uses bandpass tuning on Ranges 1-6 and changes to single tuned circuits on Ranges 7-9. An IF rejector is introduced on the lowest range. All tuning circuits are ganged and provision is made for independent adjustment when using the incremental facility (see Peak-RF Board below).

Various forms of coupling are employed between the cascode stage and the 1st Mixer, these being chosen to maintain sensibly constant gain over the whole tuning range. Signal input is applied to gate 1 of the dual-gate MOSFET used in the Mixer position.

Peak-RF Board

The three separate pairs of reverse-biased voltage-variable capacitors located on this board are wired directly across the first three sections of the main tuning gang to permit independent adjustment of the signal frequency circuits when using the incremental facility on Ranges 1-5. Controlling voltage for the VVC's is derived from the PEAK-RF CONTROL which is a potentiometer wired directly across the 11V supply. It should be noted that on Ranges 6-9 this control functions primarily as an 'aerial trimmer' and should be adjusted for maximum signal in the normal manner. R44-R47 provide a DC path for the Mixer VVC's when operating on these ranges.

1st Oscillator Circuitry

General: Two totally separate 1st Oscillator circuits are provided - one for normal operation with manual tuning, and the other for use when crystal-controlled oscillator injection is required for high-stability working. The appropriate oscillator is selected by means of the OSC SYSTEM SWITCH which applies +11V to the tunable oscillator in the 'NORMAL' position and transfers this supply to the other oscillator when any one of the ten 'CRYSTAL' positions is selected. A further position marked 'SYNTH' disables the two internal oscillators to permit operation with an external frequency synthesizer for frequency control: the synthesizer input cable is switched by relay RLB/1.

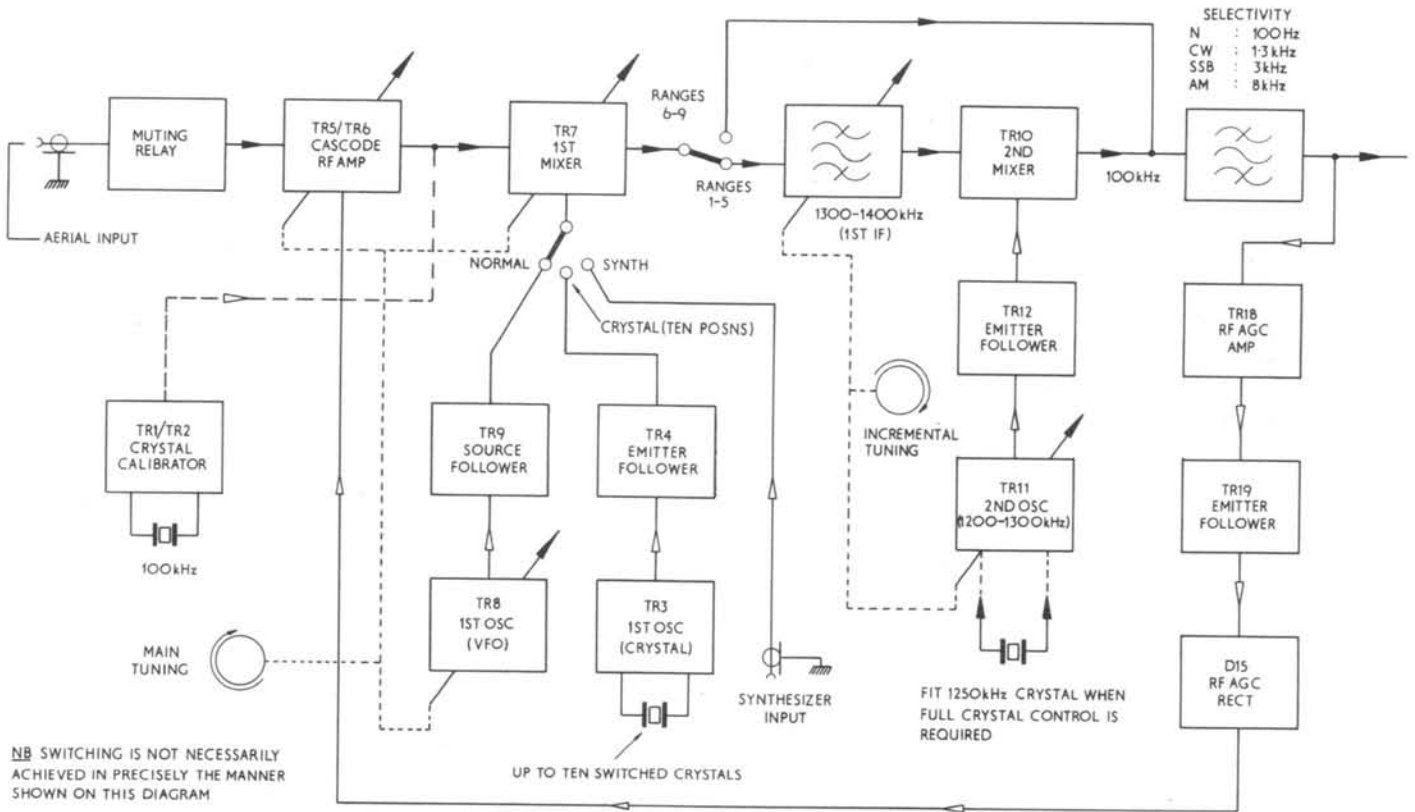



Fig. 2.1 Block diagram of basic 1830/1 receiver.

1st Oscillator Circuitry (contd.)

Tunable 1st Oscillator: This stage employs a single-gate MOSFET using the tuned-gate configuration with feedback winding in the drain circuit. The tuned circuits are temperature-compensated and tracked to tune 1350kHz above the signal on Ranges 1-5 and 100kHz above on Ranges 6-9. Oscillator output is taken via an isolating junction-FET source follower to gate 2 of the MOSFET 1st Mixer.

Crystal Oscillator Unit: This unit makes use of an untuned oscillator circuit with isolating emitter follower feeding output to the 1st Mixer gate in parallel with the output connection from the tunable 1st Oscillator. Crystals are housed in a removable box which is equipped with sockets for up to ten Style 'D' crystals. The OSCILLATOR SYSTEM SWITCH is part of this unit and serves also as crystal selector.

Calculation of the required crystal frequency for reception of any particular signal channel is quite straightforward and is covered in detail in the Section dealing with 'Operation' which appears later in the book. Briefly, the nominal oscillator injection frequency will be 1350kHz above or below the wanted signal channel but it can lie up to 50kHz away from the nominal frequency if advantage is taken of the incremental facility which is available at the 1st IF. Circuit arrangements permit use of the fundamental, 2nd harmonic or 3rd harmonic of the crystal, a feature which is of great value when it is necessary to control frequencies in the higher part of the range.

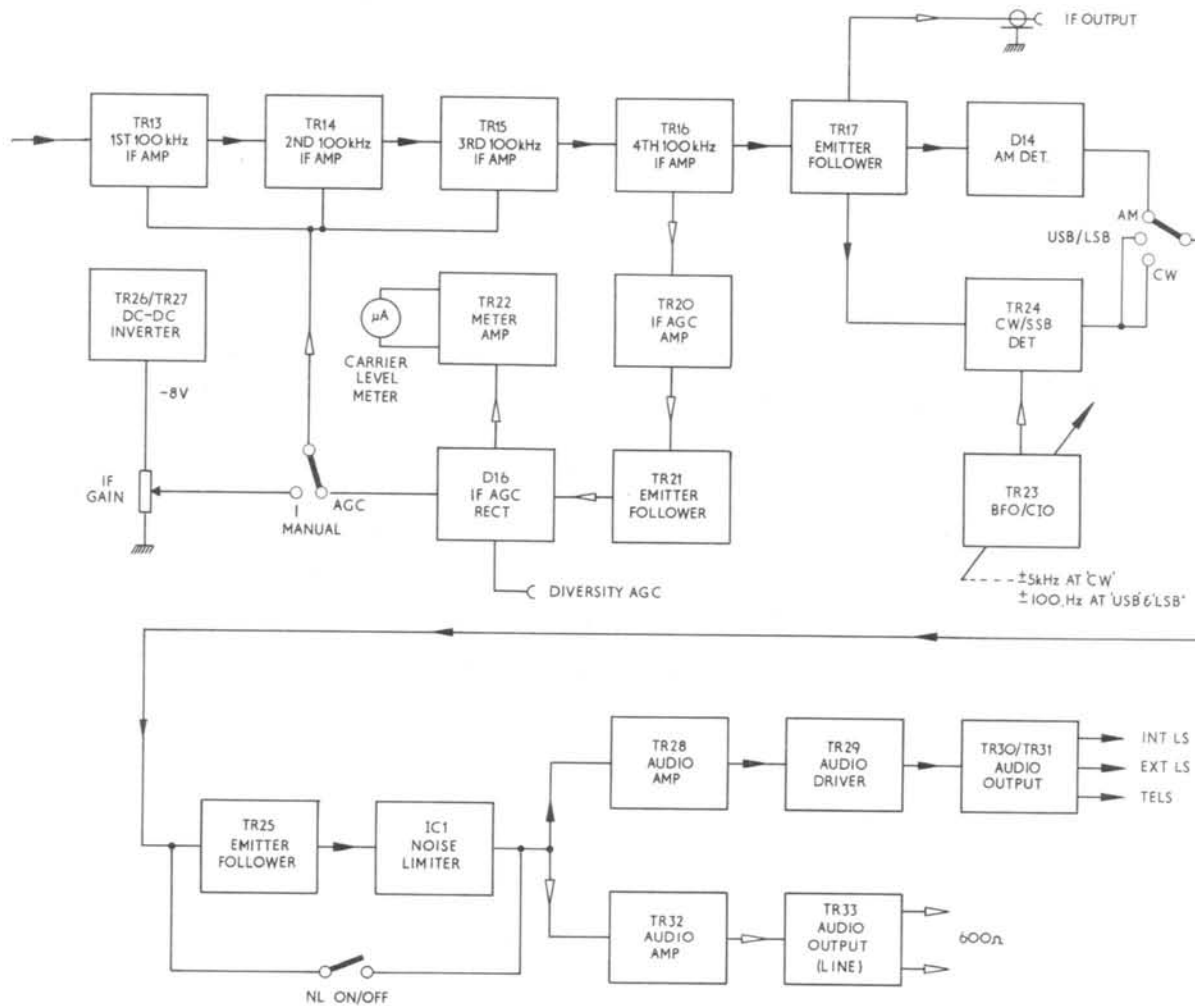

Crystal Oscillator - Model 1830/2: This variant has provision for crystal-controlled operation on up to fifty channels in the band 1.5-31MHz. Five separate integral Crystal Oscillator Units are employed, these being selected by a modified form of OSC SYSTEM SWITCH as shown in the inset on the circuit diagram at the rear of the Handbook. The Oscillator Units are basically identical to the single unit used in the 1830/1.

Tunable IF Unit

On Ranges 1-5, the drain of the 1st Mixer is switched to the input of the Tunable IF Unit and coupled to the 2nd Mixer via a gang-tuned bandpass circuit covering the range 1300 to 1400kHz. L30 & L31 serve as rejectors for frequencies in the vicinity of the upper and lower limits of this range.

Oscillator injection for the 2nd Mixer is derived from a high-stability oscillator which covers the range 1200-1300kHz and is ganged to the IF bandpass circuit. An isolating emitter follower is included and the oscillator supply is generated at 8.2V from the main 11V supply rail. Provision is made for operating the receiver with its 2nd Oscillator controlled by a 1250kHz crystal: in this mode of operation the INCREMENTAL TUNING CONTROL is set to '0' to correctly align the IF and oscillator circuits.

Output from the 2nd Mixer is routed to the 100kHz IF Filter Unit in parallel with the direct connection from the 1st Mixer used on Ranges 6-9. The 11V supply is removed from the Tunable IF Unit when using single-conversion.

CIRCUIT DESCRIPTION

100kHz IF Filter Unit

The IF filter employs five top-coupled circuits in which the coupling factor is modified by the switching to provide four degrees of bandwidth. A pre-phased crystal filter is introduced at the last switch position. 6dB bandwidths of 8kHz, 3kHz, 1.3kHz and 0.1kHz are available. Fig. 2.2 below shows the effective circuit of the filter in each position. (All capacitors in pF unless otherwise marked)

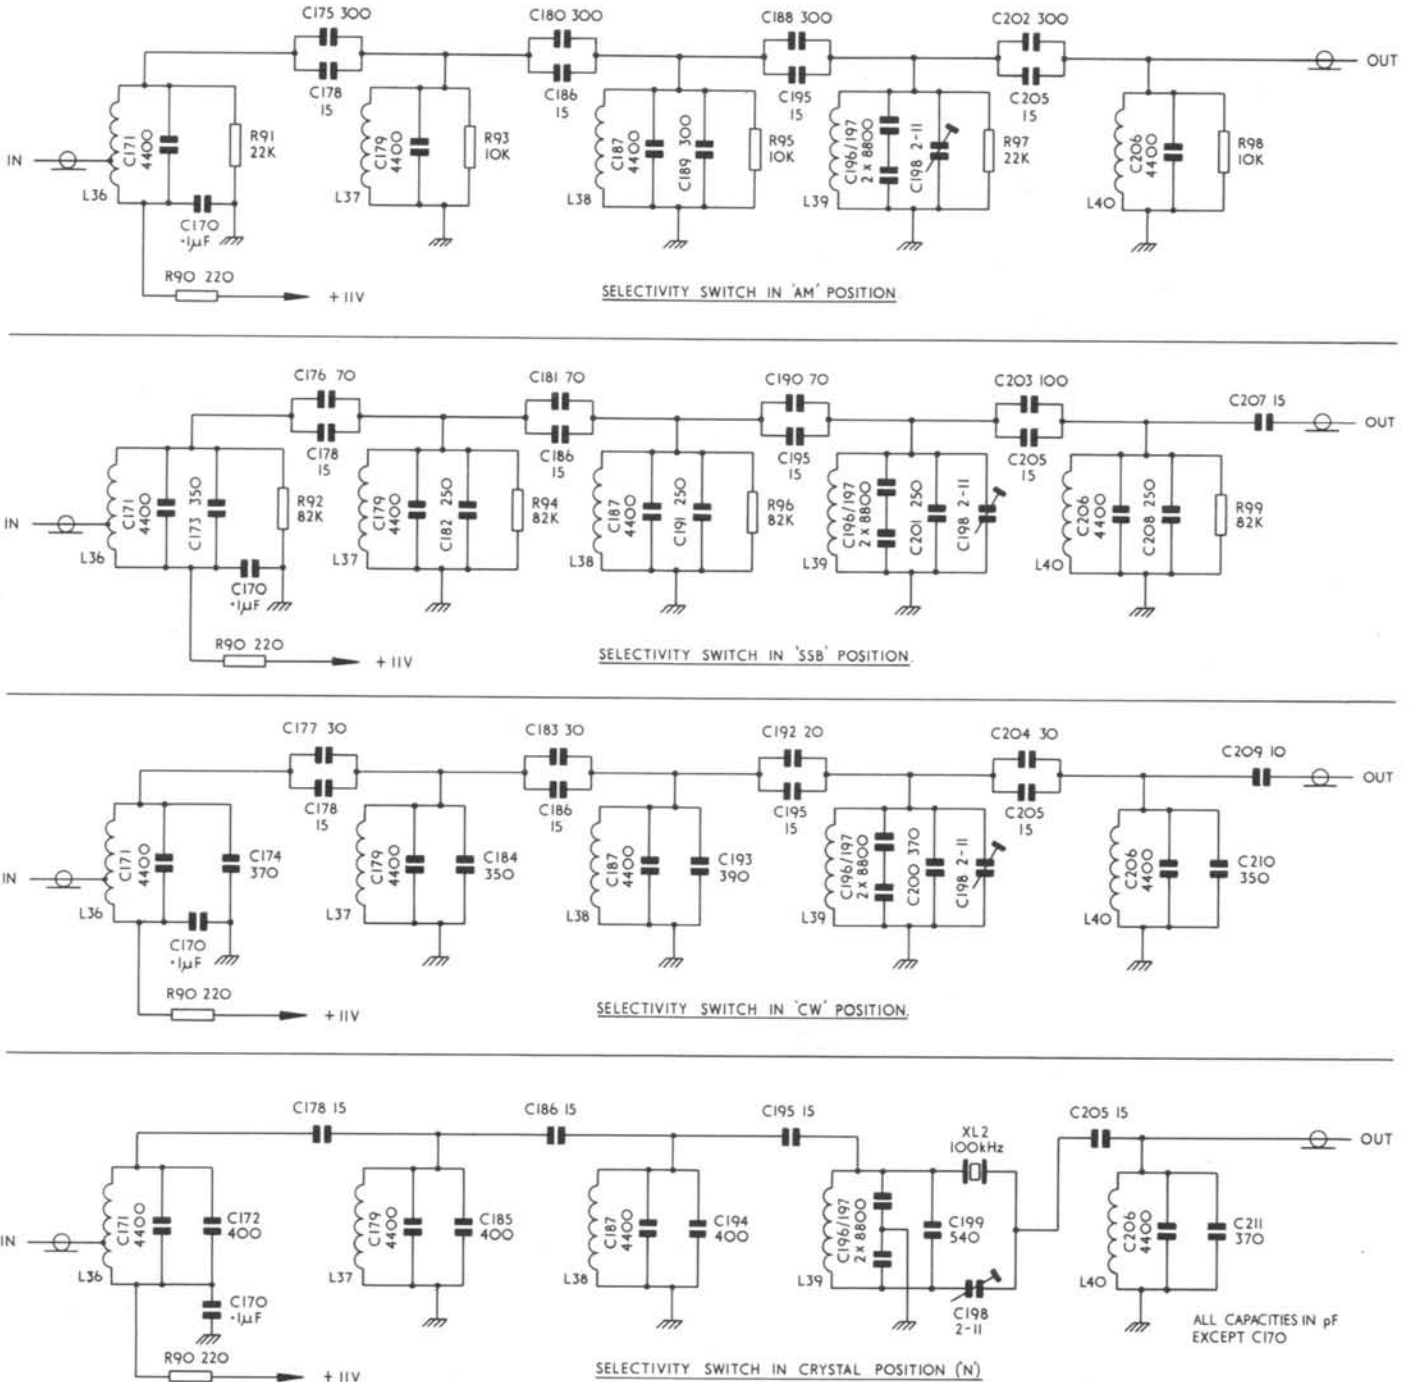


Fig. 2.2 Simplified circuits of 100kHz IF filter.

100kHz IF Amplifier Board

Output from the IF Filter Unit is taken to a four-stage junction-FET amplifier which feeds the AM Detector via an emitter follower. A low-level 100kHz output is provided for the CW/SSB Detector Unit and for connection to external ancillaries.

Separate RF and IF AGC circuits are included, the RF system being fed directly from the output of the IF Filter and having its control line permanently connected to the RF Amplifier. A large delay is applied to the RF AGC diode which conducts only at high signal levels.

The IF AGC system is fed from the final FET amplifier and controls the first three FET stages when the MANUAL/AGC SWITCH is set to 'AGC'. In the 'MANUAL' position, the controlling voltage is derived from the IF GAIN which is wired across the negative supply provided by the low power DC/DC Inverter (TR25/26). The AGC time constant is selected by switching C268 or C269 to the IF control line.

CW/SSB Detector and BFO Unit

A dual-gate MOSFET is used as CW/SSB Detector with a junction-FET in the associated BFO which also serves as carrier insertion oscillator for SSB reception.

At 'CW', the beat oscillator is tunable in the conventional manner by means of the BFO CONTROL which provides a tuning swing of ± 5 kHz. Selecting 'USB' or 'LSB' introduces a fixed capacitor to pre-tune the oscillator to the nominal frequency required for carrier insertion (101.5kHz at 'USB' and 98.5kHz at 'LSB')*. The BFO CONTROL remains in circuit but provides a much reduced tuning swing (of the order ± 100 Hz) to permit fine adjustment of the carrier frequency when resolving an SSB signal.

(*) These frequencies accommodate the signal inversion due to the 1st Mixer which normally operates with its local oscillator on the 'high' side of the received signal.

Noise Limiter, Meter and Negative Supply Board

Noise Limiter: Audio output from the selected detector is fed via an emitter follower to the integrated circuit IC1 which functions as a clipper and is effective in reducing certain types of impulse noise. The limiter can be used in all signal modes and is bypassed with the NOISE LIMITER SWITCH at 'OFF'.

Meter: The carrier-level meter is operated from the IF AGC line through a junction-FET amplifier and is scaled in arbitrary divisions 0-10. It has a logarithmic movement at 'AGC' and is essentially linear at 'MANUAL'. An adjustable pre-set potentiometer is provided for setting the needle to '0' under no-signal conditions.

Negative Supply: The DC/DC Inverter which produces the negative voltage required for the manual IF gain control circuit employs a 300Hz oscillator followed by an emitter follower which drives the rectifier diode: the output is zenered at 8.2V by D17A.

Audio Amplifier Board

This board carries a high-level amplifier which feeds the external loudspeaker, internal loudspeaker and telephones, plus a separate low-level amplifier for connection to 600 Ω line circuits. Balanced or unbalanced line terminations are available and the output transformer has an electrostatic screen connected to frame earth. An adjustable pre-set control is provided for setting the required line output level.

The telephone output is taken via an isolating transformer which has its secondary winding returned to frame. Auxiliary contacts on the headset socket mute the external speaker when telephones are in use: the internal speaker is muted by S9.

Power Supply Unit

This section of the receiver is of conventional design with screened transformer, bridge rectifier and R / C smoothing circuit. It provides outputs of +12V, +11V and +10V, the 11V line being zener regulated by D18.

The rectifier output is routed via a shorting link which must be removed to isolate the AC circuits when operating from a DC supply. The link is located in the DC Supply Connector (shown as SK5A on the circuit diagram). Diode D19 is included to provide reverse-polarity protection and will blow the DC fuse if the 12V battery supply is connected the wrong way round.

All stages in the receiver operate from the regulated 11V supply rail with the exception of the 100kHz IF Board (10V supply) and the Audio Board which is fed directly from the unregulated 12V line. Separate AC and DC fuses are fitted and the SUPPLY SWITCH is operative in both modes of operation.

Section 3M E C H A N I C A L C O N S T R U C T I O NGeneral

All versions of the 1830 are basically rack-mounting equipments with standard panel heights to suit 483mm (19in) racking. Models 1830/1 and 1830/3 have a panel height of 133mm (5.25in) and Model 1830/2 222mm (8.75in).

Matching cabinets can be supplied with all variants when these are to be installed as bench-mounted receivers. Other accessories include anti-vibration mounts for mobile applications and a detachable plinth loudspeaker unit which may be found advantageous in a permanent bench-mounted installation.

Overall dimensions for 1830/1 and 1830/3 Receivers can be taken from Fig. 3.1 on the opposite page. Model 1830/2 differs only in overall height: add 89mm (3.5in) to the figures shown on the drawing.


Weights

| | | | | |
|------------------------------|-----------|----------------|------------|----------------|
| Models 1830/1 and 1830/3: | Rack mtg. | 13.1kg (29 lb) | Bench mtg. | 18.1kg (40 lb) |
| Model 1830/2: | Rack mtg. | kg (lb) | Bench mtg. | kg (lb) |
| Anti-Vibration Mounting Kit: | | 0.9kg (2 lb) | | |
| Plinth Loudspeaker Unit: | | 1kg (2.25 lb) | | |


Internal Construction

The various units and printed board assemblies which make up the complete receiver are mounted on insulated fixing points which completely isolate the circuit earth rail from the outer frame, i.e. the panel, side-plates and cabinet etc. This form of construction eliminates the possibility of short-circuiting the supply when operating from a battery which has its positive pole already earthed, and provides maximum safety when the receiver is powered from a battery which is on charge with both poles floating at a dangerous potential above true earth.


Direct earthing of the receiver frame is possible in either mode of operation and protection extends to aerial connections etc. which are likewise totally isolated from the supply.

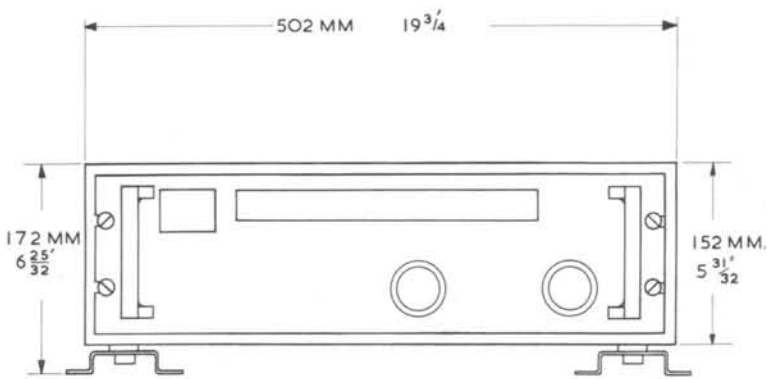



(A) Front view of 1830 Receiver in Cabinet 8256P fitted with LP2817/2 Shock Mounting.

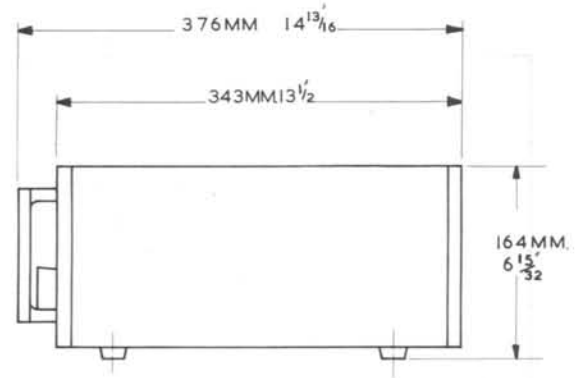

(B) Side view of 1830 Receiver in Cabinet 8256P fitted with Mounting Feet 7132P.

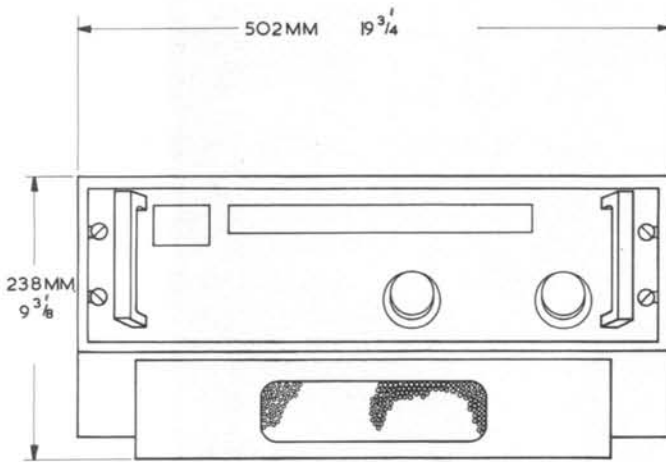

(C) Front and side views of 1830 Receiver mounted on Plinth Loudspeaker Unit Cat. No. 989.

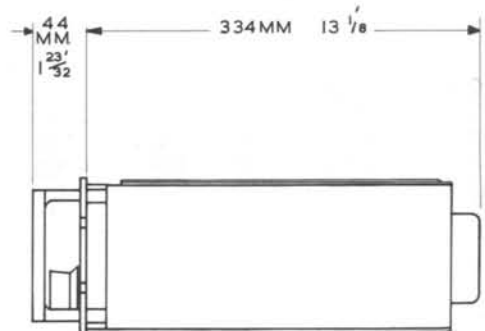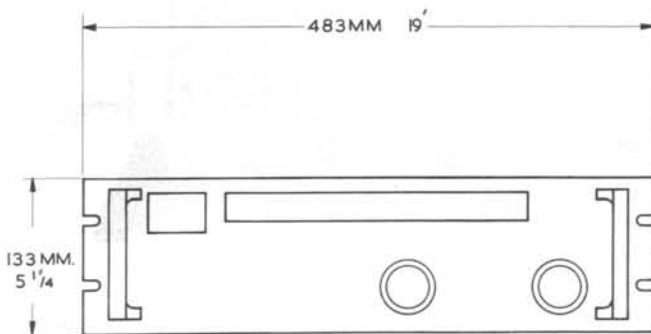

(D) Front and side views of 1830 Receiver in standard form for installation in 483mm (19in) racking.

Fig. 3.1 Overall dimensions of 1830 Series in all mounting styles.

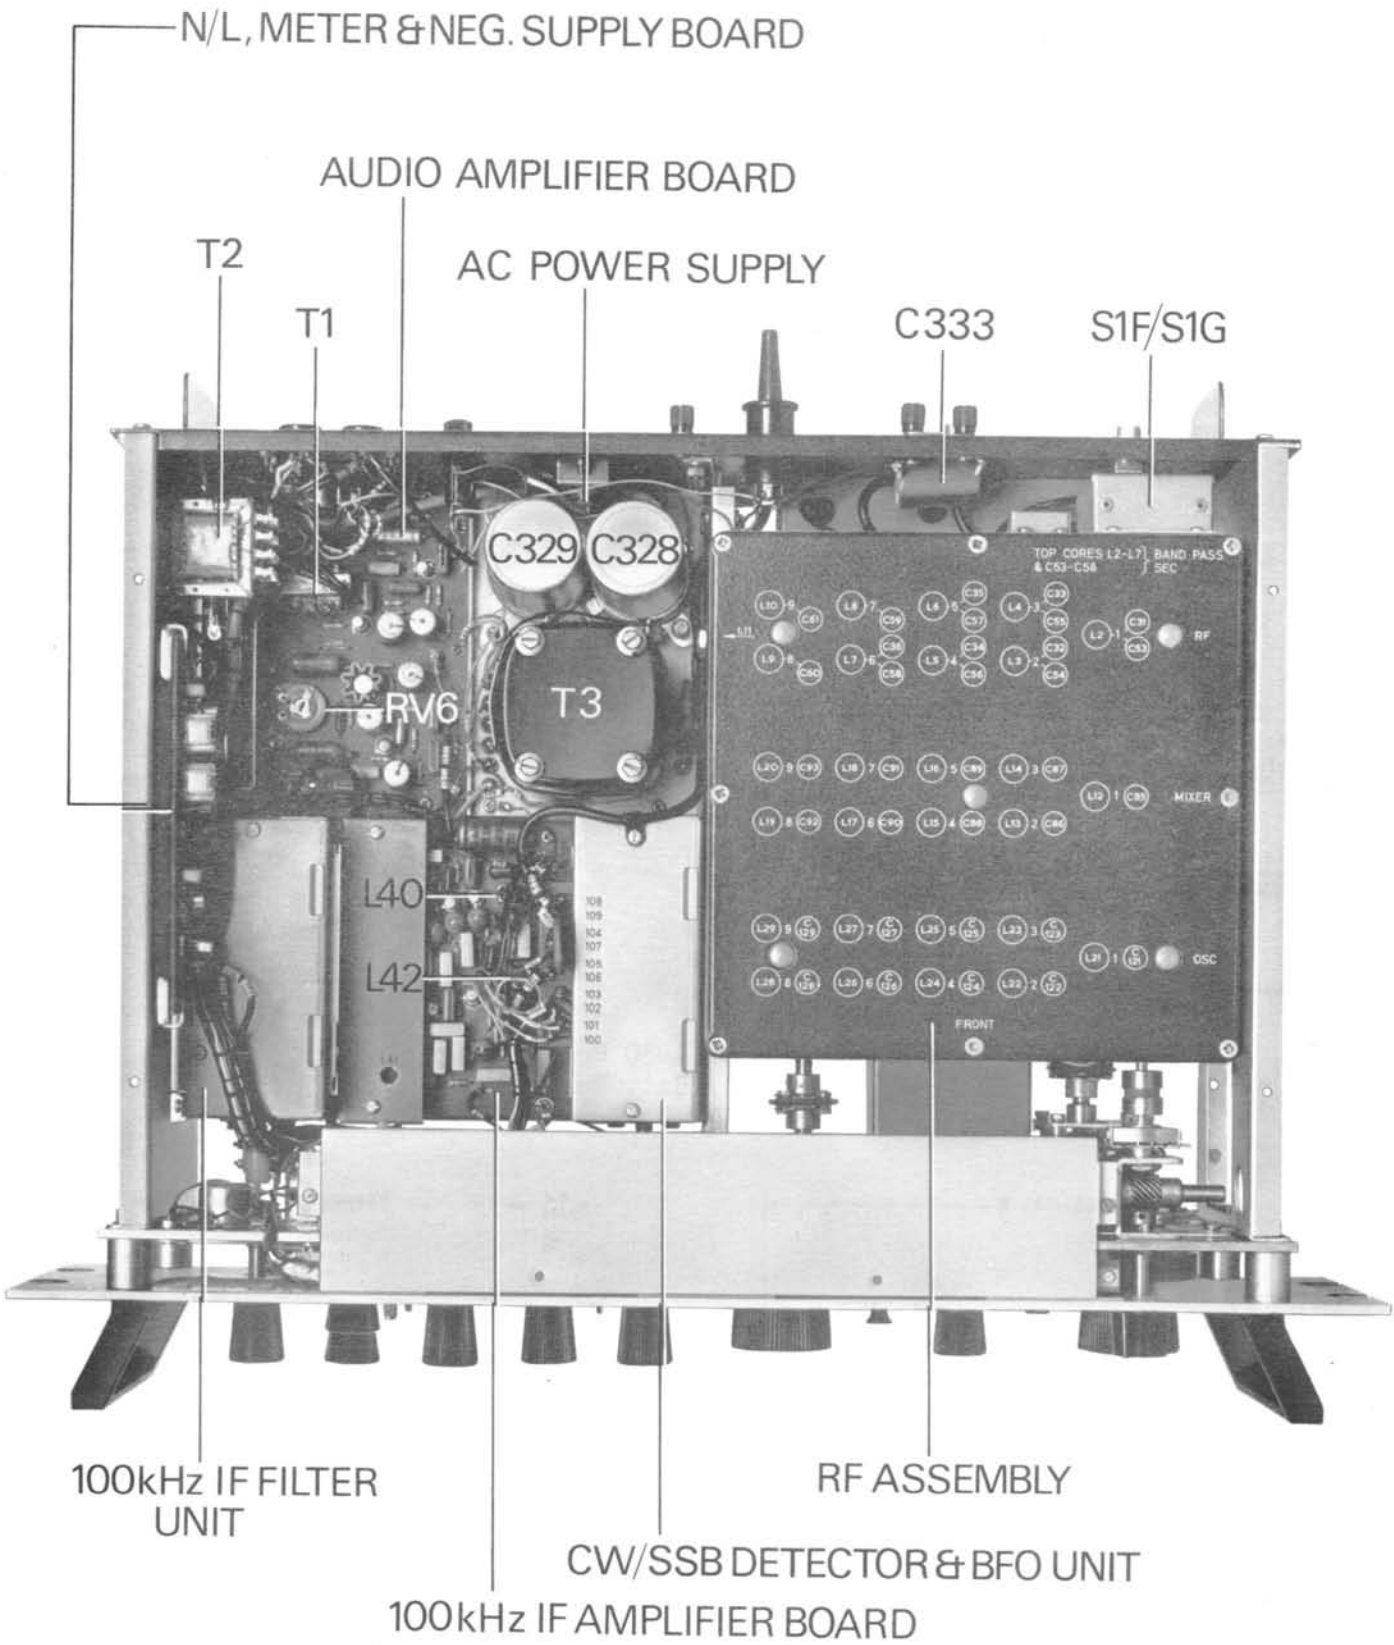


Fig. 3.2 Plan view of 1830/1 Receiver.

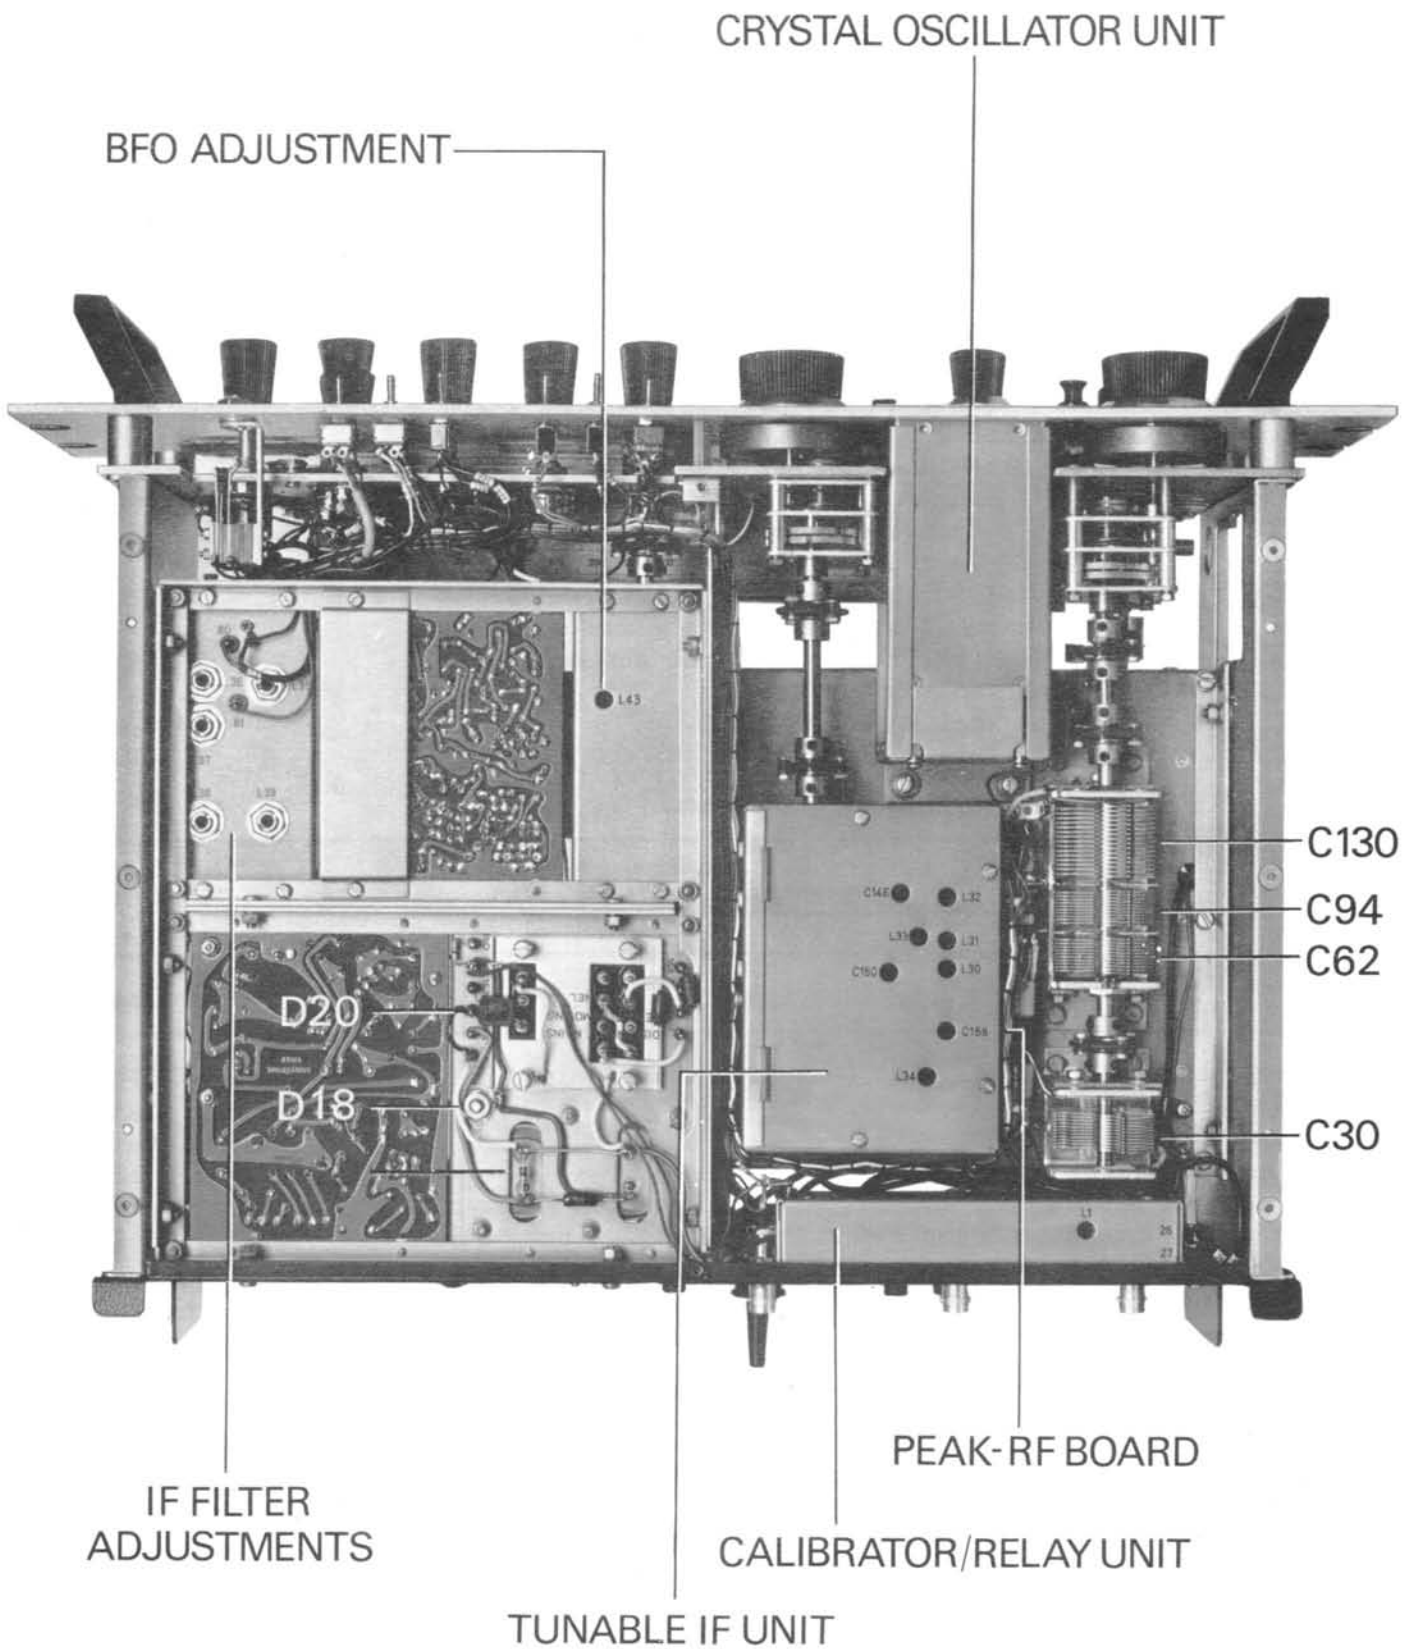


Fig. 3.3 Underside view of 1830/1 Receiver.

Section 4

I N S T A L L A T I O N

G E N E R A L

TABLE 4.1 LIST OF ACCESSORIES SUPPLIED WITH 1830 SERIES RECEIVERS

| Quantity | Description | Part No. |
|----------|---|----------|
| 4 | *Cabinet Mounting Feet (complete with 4 x 2BA screws) | 7132P |
| 1 | Ancillaries Plug (12-way, unwired) | 8037P |
| 3 | BNC bayonet-lock coaxial plugs (for Aerial Input, Synth. Input and IF Output) | 8012P |
| 1 | AC Supply Connector (complete with 2000mm of 3-core cable) | D2311/1 |
| 1 | DC Supply Connector (wired with link for AC working) | D3640 |
| 2 | Spare Dial Bulbs (12V, 1W, 5mm wire-ended) | 8448P |
| 2 | Spare Fuses (1 Amp, miniature glass-cartridge) | 7173P |
| 1 | Allen Key (to fit control knob screws) | 8449P |
| 1 | Trimming Tool - Eddystone | 8363P |
| 1 | Trimming Tool - Neosid H.S.1. | 8450P |
| 1 | Trimming Tool - T.T.1. | 8451P |
| | (* Not supplied with rack-mounting versions. | |

TABLE 4.2 LIST OF ADDITIONAL ACCESSORIES AVAILABLE TO ORDER

| Description | Part No. |
|---|----------|
| Shock-absorbent Mounting Kit (supplied unassembled) | LP2817/2 |
| Plinth Loudspeaker Unit | Cat. 989 |
| Cabinet Loudspeaker Unit | Cat. 935 |
| Telephone Headset | LP3242 |
| Telephone Headset | LP3301 |
| DC Supply Connector (complete with 2000mm of 2-core cable) | D3641 |
| Standard Cabinet (for converting rack receiver to bench-mounting) | 8256P |
| Spares Kit (list of items on request) | - |

Mounting

1830 Receivers are available for bench-mounting or rack-mounting, the latter being designated Model 1830/suffix/RM, e.g. Model 1830/1/RM. Bench-mounted receivers can be installed in standard 483mm (19in) racking after removing the normal cabinet. Both versions are equipped with protective dust covers - Part Nos 8419P (top) and 8420P (bottom). Spare cabinets are available to order for converting rack receivers for bench-mounting.

Guarantee Card

The Guarantee Card should be completed immediately on receipt of the equipment and then forwarded to Eddystone Radio Limited so that the appropriate details can be included in our records.

A S S E M B L Y I N S T R U C T I O N S

Rack-mounting Receivers

Rack-mounting versions of the 1830 can be installed directly in 483mm (19-in) racks, using four $\frac{1}{4}$ in. BSF chromium-plated screws Eddystone Ref. 40A-330. Plain washers Ref. 27E-57 should be used to prevent damage to the panel finish. Fixing slots conform to standard, the centre-spacing being 57.2mm (2.25in) in the case of the 1830/1 & 1830/3, and 146mm (5.75in) for the 1830/2.

Bench-mounting Receivers

A total of eight hank-bushes are provided in the underside of the cabinets used on standard bench-mounting receivers. These provide fixing points for (1) normal mounting feet, (2) Plinth Loudspeaker Unit Cat. No. 989, and (3) Anti-vibration Mounting Type LP2817/2.

The mounting feet should be attached using the four 2BA screws supplied, the correct fixing points being those nearest to the corners of the cabinet. These hank-bushes are also used when fitting the Anti-vibration Mounting, whereas the Plinth Loudspeaker Unit is screwed to the inner group of fixing points.

Instructions for fitting Anti-vibration Mountings LP2817/2

1. Invert receiver.
2. Place the large neoprene washers over the fixing holes provided in the underside of the cabinet with stepped face uppermost.
3. Lower the channel-shaped mountings onto the washers, keeping the fixing flanges towards the outside of the receiver and at the same time making sure that the step on the washers locates with the holes in the mountings.
4. Place the smaller neoprene washers on the inside of the channel-shaped pieces and pass the 2BA screws (with brass washers) through both neoprene washers.
5. Locate screws in hank-bushes and tighten.
6. Attach channel-shaped mountings to bench top with suitable screws: mountings should be bonded to bench if this is of metal construction.

M A I N S V O L T A G E A D J U S T M E N T

Transformer Input Tappings

Unless otherwise specified at the time of ordering, all receivers are dispatched from the factory with the power transformer input tappings set for 240V operation. Receivers set to other voltages on delivery can be readily identified by a small label attached to the rear which indicates the actual setting in use.

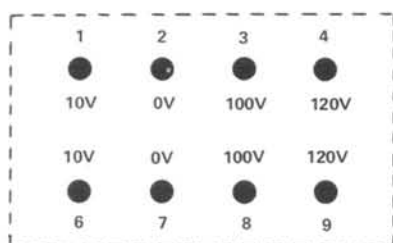


Fig. 4.1 Power Transformer Primary Tappings.

REAR OF RECEIVER →

The power transformer is located near the rear of the receiver and tappings are accessible from the underside after removing the bottom cover plate. The transformer has two separate 130V primaries which are tapped as shown in Fig. 4.1.

INSTALLATION

Transformer Input Tappings (contd.)

The two primaries are operated in series for voltages in the range 200/260V and in parallel for 100/130V. Connections should be arranged as detailed in Table 4.3.

TABLE 4.3 POWER TRANSFORMER VOLTAGE ADJUSTMENT

| Voltage | Link | Input | Voltage | Link | Input |
|---------|-------------|-------|---------|-------|-------|
| 100V | 2 & 7 3 & 8 | 7 & 8 | 220V | 3 & 6 | 1 & 8 |
| 110V | 1 & 6 3 & 8 | 6 & 8 | 230V | 3 & 7 | 1 & 9 |
| 120V | 2 & 7 4 & 9 | 7 & 9 | 240V | 3 & 6 | 1 & 9 |
| 130V | 1 & 6 4 & 9 | 6 & 9 | 250V | 2 & 6 | 4 & 9 |
| 200V | 3 & 7 | 2 & 8 | 260V | 4 & 6 | 1 & 9 |
| 210V | 3 & 6 | 2 & 8 | | | |

DISCONNECT FROM SUPPLY BEFORE ADJUSTING TAPS

Fuses

Separate AC and DC fuses are provided in holders at the rear of the receiver. The fuse complement should be as follows:-

| | | | | |
|------------------|-----------------|---------|----------------|--|
| 100/130V supply: | <u>AC Fuses</u> | 2 Amps. | <u>DC Fuse</u> | 1 Amp. (for all battery supplies - remains in circuit for AC working). |
| 200/260V supply: | | 1 Amp. | | |

EXTERNAL CONNECTIONS

Earthing

1830 Series Receivers are assembled in such a manner that all internal circuitry is totally isolated from the outer frame - i.e. the panel, cabinet etc. This form of construction provides a floating circuit earth which allows complete freedom in earthing the outer frame in situations where the receiver is powered either from a battery which has its positive pole connected to earth, or a battery that is connected to a charging circuit which places both poles above true earth potential. In neither case will there be any risk of short-circuiting the supply and with the latter arrangement there is no danger of aerial connections etc. attaining an unsafe potential.

Isolation of circuit earth from frame is unnecessary when operating from AC supplies or from a battery which has its negative pole connected to earth: the same applies if the battery is free from any other connection. In all three cases the receiver should be installed with a wire link fitted between the CIRCUIT EARTH and FRAME EARTH terminals located at the rear. The link must be removed when using any of the battery arrangements detailed in the previous paragraph.

In AC operation, it is desirable for reasons of safety that the earth lead (coloured green/yellow) attached to the AC Supply Connector should always be wired to the earth pin of the local supply socket: this lead is connected internally to the frame of the receiver. A separate earth connected to the EARTH terminal adjacent to the MAINS INPUT socket is essential for reception on Range 9 and advantageous on the other low frequency ranges where local noise levels are high. Earthing is advisable for battery working.

Operating 1830 Receivers from an AC Mains Supply

1830 Series Receivers are suitable for operation from 40-60Hz supplies in the ranges 100/130V and 200/260V. Reference should be made to the opposite page for instructions on setting the transformer tapings to suit the local mains supply voltage.

The free end of the 3-core cable connected to the AC Supply Connector should be terminated with a plug suitable for connection to the local supply socket. The lead is coded:- LIVE :: BROWN NEUTRAL :: BLUE EARTH :: GREEN/YELLOW

IMPORTANT: IT IS ESSENTIAL THAT THE 12V DC SUPPLY CONNECTOR IS IN POSITION WHEN OPERATING FROM AC SUPPLIES. IT MUST BE WIRED WITH A LINK AS SHOWN IN FIG. 4.2 IN ORDER TO COMPLETE THE RECTIFIER OUTPUT CIRCUIT WITHIN THE RECEIVER. THE CONNECTOR IS NORMALLY READY-WIRED WITH LINK WHEN THE RECEIVER IS DELIVERED FROM THE FACTORY.

Operating 1830 Receivers from a 12V Battery

The DC Supply Connector must be re-wired as shown in Fig. 4.3 when it is required to operate the receiver from a 12V battery supply. Particular reference should be made to the paragraphs on 'Earthing' (opposite) before connecting to the battery.

In cases where DC operation is required as an emergency standby facility, it will be necessary to order a spare DC Supply Connector to permit rapid changeover from one mode of operation to the other. The spare connector will be supplied ready-wired with 2000mm of two-core cable coded:- RED :: POSITIVE BLACK :: NEGATIVE

Take care to ensure that the supply leads are connected to the battery with correct polarity and note that the DC fuse will blow as a safety measure if the leads are inadvertently reversed.

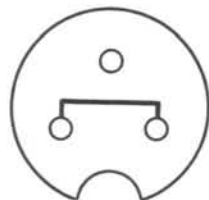


Fig. 4.2 Linking of DC Supply Connector for AC working.

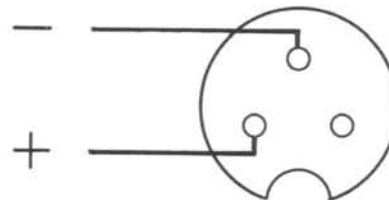


Fig. 4.3 DC Supply Connector arranged for battery working (viewed on wiring side).

Aerial Input

The BNC bayonet-lock coaxial connector supplied for connection to the Aerial Input socket is suitable for coaxial cable of up to 6.35mm (0.25in) outside diameter. The input impedance is close to 75Ω throughout the entire frequency coverage and efforts should be made to use aerial systems which approximate to this feed impedance.

Synthesizer Input

The two internal 1st Oscillator circuits can be disabled by setting the OSCILLATOR SYSTEM SWITCH to the 'SYNTH' position. 1st Oscillator drive can then be taken from a synthesizer connected to the SYNTH INPUT socket using the BNC connector supplied. The injection frequency should be 1350kHz away from the signal channel on Ranges 1-5, and 100kHz away on Ranges 6-9. Drive should be of the order 1V p-p at low impedance.

IF Output

The IF OUTPUT socket provides drive at 100kHz for use with external ancillary equipment. Output impedance is nominally 75Ω and bandwidth is governed by the setting of the SELECTIVITY SWITCH. Connection is by means of a BNC bayonet-lock connector. The output is blocked to DC by a series capacitor which allows safe connection to other equipment when the receiver is operated with floating circuit earth.

Telephone Output


This is located at the front of the receiver and is suitable for any low/medium impedance headset. The external loudspeaker circuit is interrupted when the telephones are connected.

Ancillaries Connector

External connections for LOUDSPEAKER, 600Ω LINES, MUTING and DIVERSITY AGC are provided on the 12-way Ancillaries Connector: terminations are shown in Fig. 4.4.

IMPORTANT: IT SHOULD BE NOTED THAT THE EARTHY CONNECTIONS FROM THE LOUDSPEAKER, MUTING AND DIVERSITY AGC CIRCUITS ARE RETURNED TO CIRCUIT EARTH WITHIN THE RECEIVER. CARE SHOULD BE TAKEN TO ARRANGE INSULATED EARTH RETURNS FROM THESE FACILITIES WHEN OPERATING THE RECEIVER WITH FLOATING CIRCUIT EARTH.

Fig. 4.4 External connections to Ancillaries Connector.
Viewed on wiring side.

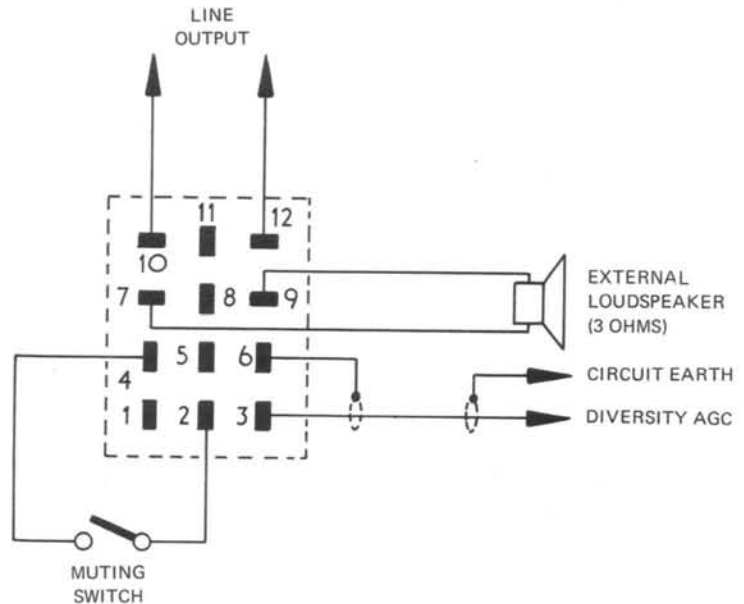

Loudspeaker Output: Suitable for connection to any 3Ω loudspeaker. Provides an output of 500mW at 5% distortion, 1.5W maximum.

600Ω Line Output: Output is adjustable up to 10mW maximum by means of pre-set LINE LEVEL CONTROL at rear of set. Pins 8 and 11 in the 12-way plug can be linked to provide a balanced output with transformer centre-tap returned to frame of receiver.

Muting: The external control circuit must close to operate the relay to desensitize the receiver. The relay is energised from the receiver supply and can be operated from a second relay to permit normal operation when the external control circuit is open in the muted condition.

Diversity AGC: The IF AGC line is brought out at pin 3. Connection should be made with screened cable, the braid being earthed to pin 6 (circuit earth). Refer to page 31 for information on installation and operation of 1830 Receivers in dual-diversity.

Section 5

OPERATIONCONTROLS

The following list details the full complement of operational controls provided on 1830 Series Receivers. All are located on the front panel with the exception of the two marked with an asterisk (*): these are pre-set controls mounted on the back-plate. Model 1830/2 has five separate switches for crystal selection.

| | |
|--------------------------------|----------------------------------|
| RANGE SWITCH (9) | CURSOR ADJUSTER (4) |
| MAIN TUNING CONTROL (17) | BFO PITCH CONTROL (7) |
| INCREMENTAL TUNING CONTROL (8) | NOISE LIMITER SWITCH (12) |
| PEAK-RF CONTROL (6) | MANUAL/AGC SWITCH (14) |
| OSCILLATOR SYSTEM SWITCH (16) | AGC TIME CONSTANT SWITCH (15) |
| MODE SWITCH (5) | INTERNAL LOUDSPEAKER SWITCH (13) |
| SELECTIVITY SWITCH (1) | SUPPLY SWITCH (10) |
| IF GAIN CONTROL (3) | *LINE LEVEL CONTROL |
| AF GAIN CONTROL (2) | *METER ZERO ADJUSTER |
| CALIBRATOR SWITCH (11) | |

Numbers refer to Fig. 5.1 on page 26.

CONTROL FUNCTIONS

RANGE SWITCH

Rotates scale drum to display selected frequency range in the upper half of the scale aperture. Calibration is in MHz on Ranges 1-5 and kHz on Ranges 6-9. Circuit configuration changes to double-conversion on Ranges 1-5 and the incremental facility becomes available for fine tuning.

| | | | |
|---------|----------------|---------|---------------|
| Range 1 | 18.0 - 31.0MHz | Range 6 | 920 - 1750kHz |
| Range 2 | 10.0 - 19.0MHz | Range 7 | 480 - 950kHz |
| Range 3 | 5.5 - 10.0MHz | Range 8 | 240 - 480kHz |
| Range 4 | 2.9 - 5.5MHz | Range 9 | 120 - 250kHz |
| Range 5 | 1.5 - 2.9MHz | | |

On 1830/3, Range 7 covers 400-535kHz and Range 8 200-400kHz.

MAIN TUNING CONTROL

The setting of this control determines the frequency to which the receiver is tuned as indicated by the main scale tuning cursor. On Ranges 1-5, the indicated frequency will be affected by the setting of the INCREMENTAL TUNING CONTROL and this should therefore be set to '0' when the receiver is to be tuned by means of the MAIN TUNING CONTROL alone.

In crystal-controlled working, or when using an external synthesizer to provide the 1st Oscillator frequency, the MAIN TUNING CONTROL must be adjusted to align the signal frequency circuits to the appropriate reception channel.

INCREMENTAL TUNING
CONTROL

Operative on Ranges 1-5 only. Provides electrical band-spread with a coverage of 50kHz above and 50kHz below any frequency selected by the MAIN TUNING CONTROL. Calibration is directly in 'kHz' and is read against the second tuning cursor in the lower part of the scale aperture.

Incremental settings should be added to or subtracted from the main scale reading to determine the actual frequency to which the receiver is tuned. For greatest accuracy and ease of calculation, the MAIN TUNING CONTROL should always be set to a 100kHz calibration mark when using this facility.

Refer also to Peak-RF Control below.

PEAK-RF CONTROL

The actual function of this control is governed by the setting of the RANGE SWITCH, but operationally it must always be adjusted for maximum signal in much the same way as when using the 'aerial trimmer' fitted on other types of communication receiver.

On Ranges 1-5 it is used to correct misalignment of the signal frequency circuits which occurs when the receiver is tuned by means of the INCREMENTAL TUNING CONTROL. One exception to this rule is that when using the crystal-controlled 1st Oscillator or an external synthesizer, full correction for 1st IF offset can be accomplished by using the MAIN TUNING CONTROL. In this event, the PEAK-RF CONTROL should be set to its mean position.

On Ranges 6-9 the PEAK-RF CONTROL serves primarily to correct detuning of the input circuit caused by variations in the characteristics of the aerial in use.

OSCILLATOR SYSTEM SWITCH

This control is located at the front of the plug-in crystal box used for crystal-controlled working on Ranges 1-5. In addition to its main function of selecting the appropriate oscillator arrangement, it also serves as a crystal selector switch. Crystal positions are numbered 1-10, and this same numbering is repeated alongside the holders within the box.

The other two positions of the switch are labelled 'NORMAL' and 'SYNTH'. The 'NORMAL' position activates the tunable 1st Oscillator for manual tuning and the 'SYNTH' position disables both internal 1st Oscillators to permit operation with external synthesized drive.

NB: The receiver is disabled when the Crystal Box is removed.

Model 1830/2: The OSCILLATOR SYSTEM SWITCH on this version of the receiver has seven positions only:-

'NORMAL' - 'A' - 'B' - 'C' - 'D' - 'E' - 'SYNTH'

The 'NORMAL' and 'SYNTH' positions are as on the other types of receiver. Positions 'A' - 'E' select the appropriate CRYSTAL SELECTOR SWITCH from five such switches located in the lower part of the panel.

Crystal Boxes can be removed without disabling receiver.

- MODE SWITCH
The MODE SWITCH selects the appropriate detector and effects various other circuit changes to suit the type of signal to be received.
The four positions are marked:- 'CW' - 'USB' - 'LSB' - 'AM'
- SELECTIVITY SWITCH
Provides a choice of four IF bandwidths to suit the various types of signal for which the receiver is designed. The bandwidths corresponding to each position of the switch are as follows (6dB figures quoted):-
'AM' : 8kHz 'CW' : 1.3kHz
'SSB' : 3kHz 'N' : 0.1kHz (Narrow 'CW')
- BFO PITCH CONTROL
This control is operative for both 'CW' and 'SSB' reception. With the MODE SWITCH at 'CW' it provides a BFO tuning swing of approximately ± 5 kHz and functions as a normal pitch control. In the two 'SSB' positions, the control swing is reduced to some 200Hz overall to permit fine adjustment of the carrier insertion frequency which is coarsely tuned by capacitors selected by the MODE SWITCH. A reduction drive is fitted for ease of adjustment.
- IF & AF GAIN CONTROLS
Dual-concentric potentiometer with AF GAIN on centre shaft. The IF GAIN is rendered inoperative when the MANUAL/AGC SWITCH is set to 'AGC'.
NB: An RF gain control is not provided on this receiver and the RF Amplifier is therefore permanently connected to a delayed AGC outlet derived from the 100kHz IF.
- CALIBRATOR SWITCH
Miniature toggle switch labelled 'CAL'. Setting the switch to 'ON' activates the internal crystal calibrator and operates the muting relay to prevent confusion between the calibration markers and normal signals. Markers appear at all 100kHz points throughout the entire range, and also at +50kHz and -50kHz on the incremental scale.
NB: In normal operation when using the tunable 1st Oscillator, incremental scale errors are automatically corrected when calibrating the main tuning scale. The two markers on the incremental scale are intended for use only when operating the receiver with crystal-controlled 1st Oscillator or external frequency synthesizer.
- CURSOR ADJUSTER
This is a mechanical control which permits lateral movement of the main tuning cursor independently of the MAIN TUNING CONTROL to allow correction for all scale errors. It is labelled 'CAL ADJ'.
- NOISE LIMITER SWITCH
Introduces an audio type noise clipper when set to 'ON'. The degree of limiting is dependent to some extent on the setting of the IF GAIN CONTROL which should always be adjusted for optimum limiting action when using the 'MANUAL' position of the MANUAL/AGC SWITCH. The limiter is effective in all signal modes.

OPERATION

- MANUAL/AGC SWITCH** Permits choice of manual or automatic control of the pre-detector gain. Manual control is by means of the IF GAIN CONTROL which is rendered inoperative when the MANUAL/AGC SWITCH is set to 'AGC'.
- AGC TIME CONSTANT SWITCH** Operative only at 'AGC' setting of MANUAL/AGC SWITCH. Allows choice of time constant to suit type of signal received. The 'FAST' position is suitable for all modes of reception, while the 'SLOW' position can be used for 'SSB' when a hang characteristic is required to prevent noise bursts during pauses in transmission.
- INTERNAL LOUDSPEAKER SWITCH** Mutes internal loudspeaker when set to 'OFF'. The external loudspeaker is muted on insertion of the telephone plug.
- SUPPLY SWITCH** Provides AC and Battery ON/OFF switching.
- LINE LEVEL CONTROL** Used for independent adjustment of the audio output on the 600Ω line channel. Adjustment should be made by reference to the normal line monitoring facilities provided on the installation. Output is adjustable to 10mW maximum.
- METER ZERO ADJUSTER** Permits adjustment of carrier-level meter to zero reading under no-signal conditions. Adjust with IF GAIN at minimum and MANUAL/AGC SWITCH at 'MANUAL'. Infrequent adjustment only will be required. Meter indicates relative carrier level and is calibrated in arbitrary divisions 0-10.

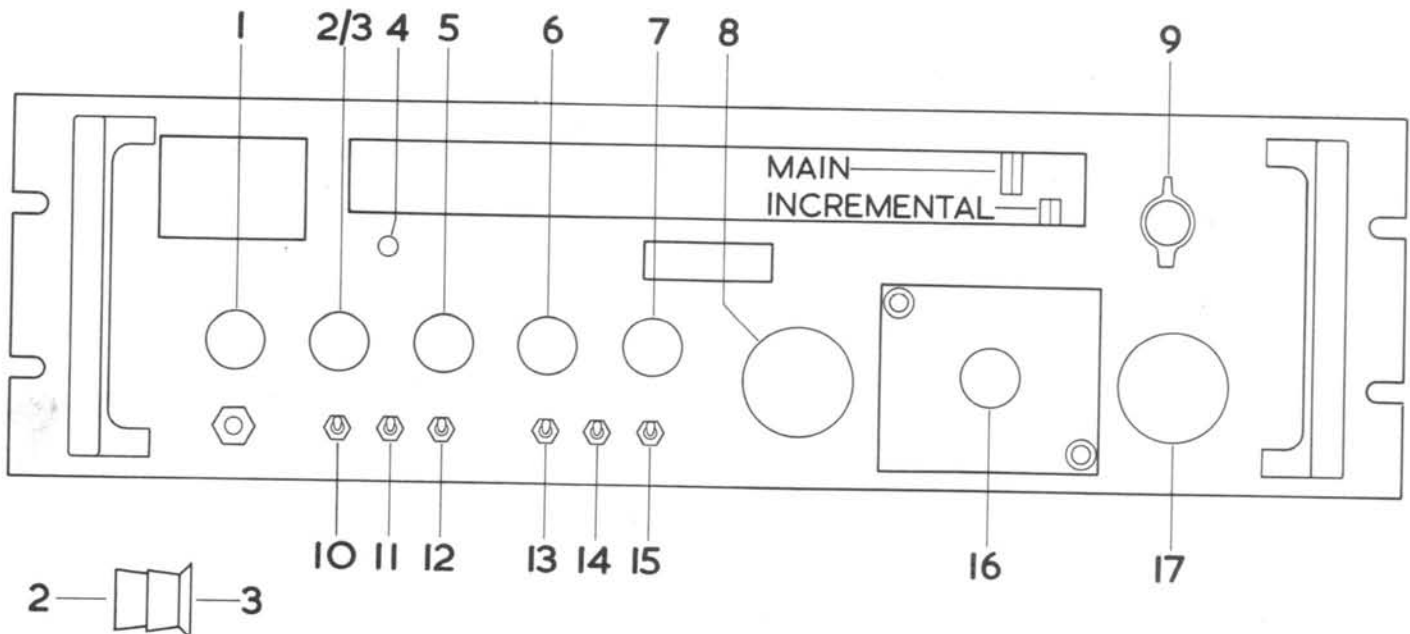


Fig. 5.1 1830 Series Panel Controls (Numbers correspond with text opposite)

T U N I N G I N S T R U C T I O N SManual Tuning

1. Install receiver in accordance with instructions given in Section 4. Set INT LS SWITCH (13) to 'ON' if telephones or external loudspeaker are not available.
2. Set controls as follows:- SUPPLY SWITCH (10) to 'ON' - CRYSTAL SELECTOR SWITCH (16) to 'NORMAL' - CAL ADJ (4) to mid-position - INCREMENTAL TUNING CONTROL (8) to '0' (Ranges 1-5 only) - PEAK-RF CONTROL (6) to mid-position.
3. Set MODE SWITCH (5) and SELECTIVITY SWITCH (1) to suit type of reception (AM, CW or SSB). NB: Selectivity can be increased if interference is severe, e.g. 'SSB' position can be used for AM reception. 'N' = 100Hz CW position (crystal filter).
4. Set RANGE SWITCH (9) and MAIN TUNING CONTROL (17) to obtain required frequency. NB: If precise scale accuracy is required, carry out scale calibration check as described below. Refer also to Incremental Tuning Facility.
5. Adjust IF GAIN (3) and AF GAIN (2) for suitable output. IF GAIN is inoperative with MANUAL/AGC SWITCH (14) at 'AGC'.
6. Adjust PEAK-RF CONTROL (6) for maximum signal - or maximum noise in the absence of signal.
7. Adjust BFO PITCH CONTROL (7) as follows:- CW Reception: set for desired audio beat (swing \pm 5kHz). SSB Reception: use for fine adjustment of re-inserted carrier frequency (swing reduced to \pm 100Hz).
8. Set NL SWITCH (12) to 'ON' if impulse noise is present.
9. Set MANUAL/AGC SWITCH (14) for manual or automatic gain control.
10. If using 'AGC' position, set AGC TIME CONSTANT SWITCH (15) to 'FAST' for CW/AM reception, 'SLOW' for SSB reception.

Scale Calibration Check (See also page 31 - Standardising Crystal Calibrator)

1. Set INCREMENTAL TUNING CONTROL (8) to '0' (Ranges 1-5 only).
2. Set MODE SWITCH (5) to 'AM' (or 'CW' with BFO at 100kHz when using Ranges 1-5).
3. Set CAL SWITCH (11) to 'ON'.
4. Adjust MAIN TUNING CONTROL (17) to nearest scale check-point, locate marker and tune to zero-beat. Markers occur at all 100kHz points. NB: On Range 1, check markers against WWV if independent 1MHz markers are not available.
5. Turn CAL ADJ CONTROL (4) to set cursor coincident with correct calibration mark.
6. Set CAL SWITCH (11) to 'OFF' and tune to working frequency.

Incremental Tuning Facility (Ranges 1-5 only)

1. Carry out scale calibration check at nearest 100kHz point.
2. Tune to wanted signal with INCREMENTAL TUNING CONTROL (8).
3. Add (or subtract) incremental reading to (from) main scale reading to obtain actual tune frequency.
4. Adjust PEAK-RF CONTROL (6) for maximum signal - or maximum noise in the absence of signal.
5. Refer to pages 29 / 30 for instructions on use of this facility when using crystal-controlled or synthesized 1st Oscillator.

CRYSTAL CONTROLLED WORKINGGeneral

Although provision is made for operating both the 1st and 2nd Oscillators with crystal control, most receivers will be operated with only the 1st Oscillator controlled in this manner. Fitting a crystal in the 2nd Oscillator circuit results in loss of the incremental tuning facility and would normally be contemplated only in the case of unattended installations where ultimate stability is required.

Operation with crystal-controlled 1st Oscillator

Crystals for control of the 1st Oscillator are fitted in the plug-in crystal box at the front of the receiver. This can be equipped with up to ten crystals for reception on channels in the band 1.5 - 31MHz, crystals being selected by the 'CRYSTAL SELECTOR' which activates the internal Crystal Oscillator Unit when set to any crystal position.

The plug-in crystal box is removed by pulling the two captive retainers and sliding it forward away from the panel: slight resistance will be felt as the plug and socket disengage. The crystal sockets are numbered to correspond with the ten switch positions and it is suggested that a small card is kept with the receiver detailing the signal frequency for each switch position: a note should also be made of the incremental setting required for each channel.

The usual requirement for precise choice of crystal frequency for reception on a specific signal channel is relaxed in the case of 1830 Series Receivers by virtue of the tunable 1st IF arrangement which is available in this mode of operation. Crystal-controlled injection frequencies up to 50kHz from the nominal frequency required can be accommodated, the resultant tune error being corrected by suitable adjustment of the INCREMENTAL TUNING CONTROL.

At signal frequencies higher than 3.0MHz, the crystal-controlled injection frequency can be chosen either above or below the desired signal channel. Below 3.0MHz, the injection frequency must be on the high side of the signal to prevent possible interference in the range of the 1st IF circuits.

Further freedom in the choice of crystal is possible at the higher frequencies in the tuning range where either the 2nd or 3rd harmonic of the crystal can be used to furnish the appropriate injection frequency.

Standard procedure for calculating crystal frequency

In many cases it will be necessary to order a crystal specially, in which event it will usually be found most convenient to calculate the frequency so that the desired signal channel occurs at the '0' setting of the INCREMENTAL TUNING CONTROL (i.e. with a 1st intermediate frequency of 1350kHz).

The appropriate frequency can easily be determined by applying the formula:-

CRYSTAL FREQ. = SIGNAL FREQ. + 1350kHz (for signal frequencies below 3.0MHz)

or SIGNAL FREQ. ± 1350kHz (for signal frequencies above 3.0MHz)

When the calculated crystal frequency lies above 20MHz, divide by 2 or 3 and use the second or third crystal harmonic to furnish the required oscillator injection.

Ordering crystals for 1st Oscillator control

Crystals can be ordered direct from Eddystone Radio Limited at our usual address. The order should be worded as follows:-

Quantity - Crystal Unit(s) for use with 1830 Series Receiver.

Frequency or frequencies of crystal(s) quoted in kHz.

If crystals are ordered from other suppliers, the full specification should be given as detailed below:-

Crystal Unit - Inter-Services Style 'D' (International Style 'AA'). Frequency in kHz (for parallel mode oscillator service with load capacity of 30pF). Tolerance 0.005% calibrated at 25°C.

NB: Tolerance should be 0.0015% when the crystal(s) is/are to be fitted in a receiver which also has its 2nd Oscillator crystal-controlled.

Alternative procedure for calculating crystal frequency

If a large stock of crystal frequencies is already available, it is quite possible that one of these could be pressed into service by taking advantage of the incremental tuning facility. In this event, determine all possible crystal frequencies which could be used to control the required signal channel by following the procedure detailed below.

1. Assume that it is necessary to crystal-control a reception frequency of 18.1MHz.
2. Apply the standard formula to determine the nominal frequencies which could be employed:-

$$18100 + 1350 = \underline{19450\text{kHz}} \quad \text{and} \quad 18100 - 1350 = \underline{16750\text{kHz}}$$

3. Calculate the full range of crystal frequencies which provide reception on 18.1MHz when use is made of the incremental tuning facility.

$$(19450 - 50) \text{ to } (19450 + 50) = \underline{19400 \text{ to } 19500\text{kHz}} \quad (\text{oscillator 'high'})$$

$$(16750 - 50) \text{ to } (16750 + 50) = \underline{16700 \text{ to } 16800\text{kHz}} \quad (\text{oscillator 'low'})$$

4. If a crystal in either of these ranges is not available, divide by 2 and by 3 to check whether an existing lower frequency crystal would perhaps be suitable.

Continuing the example above gives the following additional frequency bands which could also be used:-

| | <u>INJECTION FREQ. HIGH</u> | <u>INJECTION FREQ. LOW</u> |
|------------------------|-----------------------------|----------------------------|
| 2nd harmonic operation | <u>9700 to 9750kHz</u> | <u>8350 to 8400kHz</u> |
| 3rd harmonic operation | <u>6466.6 to 6500kHz</u> | <u>5566.6 to 5600kHz</u> |

Determining the incremental setting in crystal-controlled working

In cases where a random crystal frequency is employed, rather than one chosen to produce a 1st IF of 1350kHz, it will be necessary to determine the incremental setting which corresponds to the signal frequency required. The simplest approach is to first calculate the intermediate frequency produced by the available crystal, and then obtain the incremental setting from Table 5.1 on the following page.

OPERATION

The intermediate frequency is calculated as follows:-

Oscillator injection on 'high' side: 1st IF = OSC. INJECTION FREQ. - SIGNAL FREQ.

Oscillator injection on 'low' side: 1st IF = SIGNAL FREQ. - OSC. INJECTION FREQ.

TABLE 5.1 INCREMENTAL SETTING VERSUS INTERMEDIATE FREQUENCY

| | | | | | | |
|---------|---------|---------|---------|---------|---------|---------|
| 1st IF | 1300kHz | 1310kHz | 1320kHz | 1330kHz | 1340kHz | 1350kHz |
| Setting | +50 | +40 | +30 | +20 | +10 | 0 |
| 1st IF | 1360kHz | 1370kHz | 1380kHz | 1390kHz | 1400kHz | - |
| Setting | -10 | -20 | -30 | -40 | -50 | - |

IMPORTANT: When operating the receiver with oscillator injection on the 'low' side of the signal, the direction of the incremental calibration becomes reversed: i.e. 'plus' settings indicate frequencies lower than those shown by the main scale tuning cursor. In addition, the SSB settings of the MODE SWITCH will also become reversed - the 'USB' position should be used for lower sideband reception and the 'LSB' position for upper sideband.

Checking incremental calibration in crystal-controlled working

When operating the receiver with free-running 1st Oscillator, any minor error in incremental calibration is automatically corrected when calibrating the main scale against the internal crystal calibrator. This automatic correction is not available when the 1st Oscillator is crystal-controlled, and it is therefore necessary to make a check on the incremental calibration before setting to the desired signal channel.

Two check-points are available for this purpose, one at +50kHz and the other at -50 kHz. The check should be made at the check-point nearest to the intended setting. Select 'AM' mode, switch on the calibrator and tune for zero-beat. The amount and sign of any error which may exist is then obvious and can be taken into account when re-setting the INCREMENTAL TUNING CONTROL to the appropriate frequency.

Synthesized operation

Both internal 1st Oscillators are disabled when the OSC SYSTEM SWITCH is set to 'SYNTH' to permit operation with an external synthesizer. The synthesizer frequency is calculated as follows:-

| | | |
|------------|----|-------------------------|
| Ranges 1-4 | :: | SIGNAL FREQ. ± 1350kHz. |
| Range 5 | :: | SIGNAL FREQ. + 1350kHz. |
| Ranges 6-8 | :: | SIGNAL FREQ. ± 100kHz. |
| Range 9 | :: | SIGNAL FREQ. + 100kHz. |

Synthesized drive should be connected to the SYNTH INPUT socket at the rear using low-impedance coaxial cable: drive level should be of the order 1V p-p.

The incremental facility can be retained in the normal manner, or alternatively the 2nd Oscillator can be fitted with a crystal when optimum stability is required.

Operation with crystal-controlled 2nd Oscillator

A crystal for controlling the 2nd Oscillator can be supplied to order: specification is as follows:-

Crystal Unit. Inter-Services Style 'D' (International Style 'AA').
1250kHz series mode. Tolerance 0.005% calibrated at 25°C.

Increase tolerance to 0.0015% if 1st Oscillator is also crystal-controlled.

Fit crystal as follows: Remove cover from Tunable IF Unit, locate crystal holder and remove (unsolder) the wire link from the two printed circuit terminals adjacent to it. Fit 1250kHz crystal and replace cover.

NB: Any crystal in the range 1200-1300kHz can be used to control the 2nd Oscillator but the main scale calibration will be correct only when a crystal of 1250kHz is employed.

When using the receiver with crystal-controlled 2nd Oscillator, the INCREMENTAL TUNING CONTROL must be set to 'Ø' to align the 1st IF and 2nd Oscillator circuits to the appropriate frequencies. Some pulling of the crystal frequency is possible by fine adjustment of the INCREMENTAL TUNING CONTROL, so allowing accurate tuning when the receiver has its 1st Oscillator crystal-controlled.

The wire link must be replaced if the receiver is returned to normal service with tunable 2nd Oscillator. The crystal can remain in its holder for safe storage if so desired.

Dual-Diversity Working

Two 1830 Series Receivers can be operated in dual-diversity by interconnecting (1) their IF OUTPUT sockets, and (2) their IF AGC lines. Audio output can be taken from either receiver without need for the usual outboard combining transformer.

Consideration should be given to the possibility of crystal-control for the two 1st Oscillators, not only because of the greater stability which then obtains, but also because it allows much simpler adjustment when setting up the installation to any given channel. Tuning is effectively by use of the two INCREMENTAL TUNING CONTROLS when operating in this manner, the two MAIN TUNING CONTROLS tuning the signal frequency circuits only, and therefore not requiring such precise adjustment.

It should be borne in mind that when tuning the two receivers by reference to their carrier-level meters, both meters will register the same reading due to commoning of the IF AGC lines. It is therefore necessary to disable one receiver when the other is being tuned: this is most easily accomplished by setting the MANUAL/AGC SWITCH to the 'MANUAL' position with the IF GAIN at minimum.

Standardising the crystal calibrator

1. Remove receiver from cabinet.
2. Adjust receiver for AM reception with INCREMENTAL TUNING CONTROL at 'Ø'.
3. Tune to convenient frequency standard transmission on 5, 10, 15 or 20MHz (MSF, WWV etc.). Make positive identification by monitoring call sign etc.
4. Transfer SELECTIVITY SWITCH to 'N' and tune INCREMENTAL TUNING CONTROL very carefully for peak reading on carrier-level meter.
5. Set CAL SWITCH to 'ON'.
6. Adjust core in Crystal Calibrator coil L1 for peak reading on meter. (L1 is accessible through trimming aperture in underside of Calibrator Unit at rear of receiver: use miniature insulated screwdriver for adjustment).
7. Replace receiver in cabinet.

Section 6

M A I N T E N A N C E

G E N E R A L

1830 Series Receivers have been designed for maximum reliability and should require very little in the way of routine maintenance even when used continuously under arduous operating conditions. Any faults which may develop should be of a minor nature, well within the capabilities of properly trained technicians equipped with a reasonable range of test equipment.

This section of the Handbook gives guidance for simple operations such as changing fuses and dial lights, and more detailed instructions on re-alignment etc. Appendix 'A' on page 44 contains a comprehensive analysis of all circuit voltages for reference when carrying out fault finding. A full circuit diagram is bound at the rear. Spares for user-servicing can be supplied ex-stock and helpful advice will be freely given when required.

If major servicing should become necessary, or the user considers a complete overhaul desirable after many years of operation, the receiver can be returned to the manufacturer for specialised attention. It can be sent either direct or via one of the many Eddystone Agents, care being taken to ensure that packing is adequate to prevent damage during transit. Prior arrangements should be made if the equipment is sent direct, all communications being directed to the 'Sales and Service Department' at our usual address. The Receiver Type and Ser. No. should be quoted when writing.

F U S E R E P L A C E M E N T

Separate AC Input and DC Line fuses are fitted in holders at the rear of the set. In most cases they will both have a value of 1 Amp, but a 2 Amp fuse will be found in the AC position when the receiver has been supplied for 100/130V working.

Two spare fuses are supplied with each receiver and additional spares can be ordered from Eddystone Radio by quoting Part No. 7173P for 1 Amp fuse and 6704P for 2 Amp fuse.

DISCONNECT RECEIVER FROM SUPPLY BEFORE REMOVING FUSE CARRIER.

D I A L L A M P R E P L A C E M E N T

1. Remove two 6BA screws at ends of dial cover plate: lift off and then unsolder faulty bulb from printed circuit termination.
2. Push bulb out of retainer towards centre of cover plate.
3. Insert new bulb (wire-end first) and solder to printed circuit termination. Examine soldering for possible short-circuit.
4. Apply power to receiver and check that new bulb lights normally before re-fitting the dial cover plate.
5. Replace dial cover plate and tighten 6BA screws taking care not to trap wires.

Two spare bulbs are supplied with the receiver and additional spares can be ordered from Eddystone Radio by quoting Part No. 8448P.

INSTRUCTIONS FOR RE-STRINGING CURSOR DRIVE CORDSGeneral

Both cursor drive systems employ nylon cords and with normal use should never require attention during the operational life of the receiver. The instructions which follow are included as a guide for use in the unlikely event of a cord breaking or being inadvertently dislodged from the pulley system when working on the receiver. Replacement cords can be ordered from Eddystone Radio by quoting Part No. 8446P for the main cord, or Part No. 8447P for the incremental cord. Both cords are supplied ready knotted (knots spaced 1122.3mm (42.25in) on main cord, 914mm (36in) on incremental).

Main Cursor Drive (see Fig. 6.1)

NB: Left-hand and right-hand etc. with receiver viewed from front.

1. Remove scale drum for access to complete drive system:-
 - (a) Take out two 6BA screws and remove scale cover plate.
 - (b) Slacken 6BA grub screws in drum spindle collar (adjacent to panel loudspeaker).
 - (c) Slide collar off spindle and remove steel shim washer (trapped behind collar).
 - (d) Set Range Switch to Range 3 to place blank scale strip in uppermost position.
 - (e) Locate access holes at each end of blank scale strip.
 - (f) Slacken 4BA screws (about $1\frac{1}{2}$ turns) through access holes to free scale drum on its spindle. Drum will rotate due to tension of coil spring (right-hand end).
 - (g) Grip helical gear and withdraw spindle through right-hand side-plate, supporting drum and extracting coil spring as spindle clears end bearing.
 - (h) Lift drum clear and store with other loose items in readiness for re-assembly.
2. Take off broken cord and remove cursor.
3. Rotate Main Tuning Control to full extreme of anti-clockwise travel to position cord drum slot at 3 o'clock.
4. Trap one knotted end of replacement cord in front end of cord drum slot. Wind on approximately one turn in an anti-clockwise direction and bring free end of cord out through aperture in right-hand side-plate.
5. Maintain tension on free end of cord and rotate Main Tuning Control to full extreme of clockwise travel. This operation will wind a further five turns of cord onto the cord drum, making six turns in all.
6. Feed free end of cord under jockey pulley, then upwards and over top right-hand guide pulley. Secure cord in tension to prevent turns spilling off drum (a Bulldog clip or similar retainer is ideal for this application - clip to drive support plate, adjacent to Range Switch spindle).
7. Form the remaining length of cord into a loop with the knotted end towards the slow motion reduction drive. Loop should follow roughly the normal pulley route but do not attach to pulleys at this stage.
8. Pass knotted end of cord under top left-hand reduction drive support pillar and trap knot in back end of cord drum slot.
9. Attach cord loop to other pulleys by reference to Fig. 6.1 and then remove the Bulldog clip.

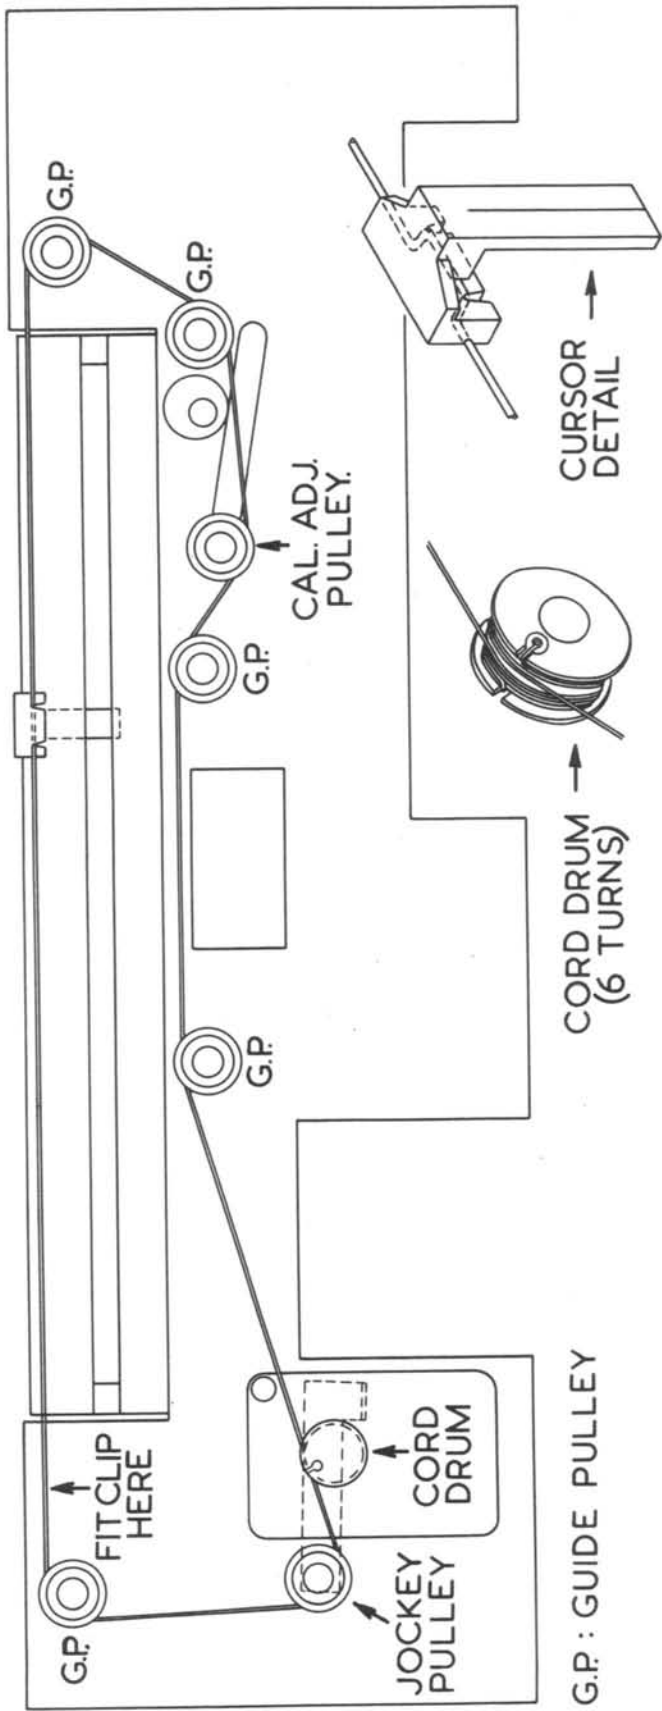


Fig. 6.1 Cording arrangement on main cursor drive.

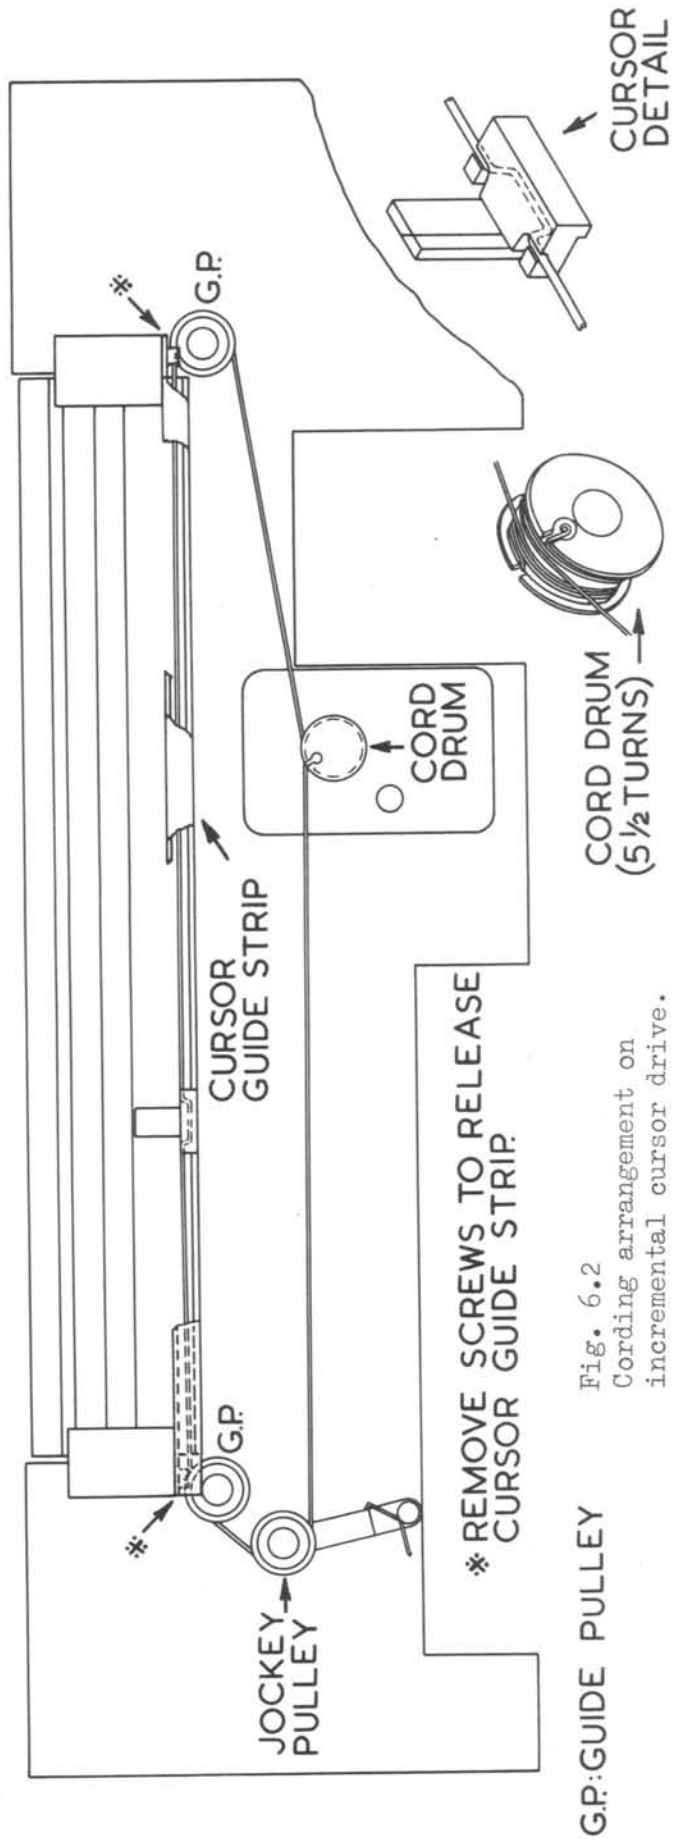


Fig. 6.2 Cording arrangement on incremental cursor drive.

Main Cursor Drive (contd.)

10. Rotate Main Tuning Control anti-clockwise through full travel and check that cord runs smoothly.
11. Replace scale drum by following procedure detailed below:-
 - (a) Pass scale drum spindle through right-hand bearing and slide on the tension spring removed in 1(g). Locate tail of spring in hole in bearing bracket.
 - (b) Cradle scale drum in left hand and continue feeding in spindle until it passes through bearing at left-hand end. Slide on the steel shim washer and the retaining collar.
 - (c) Push helical gear against bearing surface and secure collar so that gear is retained in this position.
 - (d) Insert other tail of tension spring in hole in end of drum. Rotate drum with fingers approximately four complete revolutions to apply tension to spring. Tighten retaining screws through apertures in blank scale strip with drum set so that Range 3 shows through the scale window: ensure that drum is central in window.
 - (e) Select all ranges in turn and observe that drum movement is positive in each position. If more positive action is required, increase spring tension by one or possibly two more turns.

DO NOT REPLACE SCALE COVER PLATE AT THIS STAGE.
12. Rotate Main Tuning Control five turns in clockwise direction and then attach the cursor to the drive cord in a position roughly one inch from left-hand end of dial.
13. Operate Cal. Adj. Control and observe cursor movement. Leave control set in position corresponding to middle of cursor adjustment range.
14. Rotate Main Tuning Control once more to fully anti-clockwise setting. Slide cursor along cord and position coincident with setting mark at left-hand end of scale calibration (adjacent to ringed 'Range' number).
15. Replace scale cover plate and tighten two 6BA screws taking care not to trap dial light leads. Check scale calibration against internal crystal calibrator.

Incremental Cursor Drive (see Fig. 6.2)

NB: Left-hand and right-hand etc. with receiver viewed from front.

1. Remove panel for access to complete drive system:-
 - (a) Remove crystal box, knobs, switch nuts/washers and telephone socket nut.
 - (b) Place receiver face-down with support blocks under outer edges near handles.
 - (c) Remove four handle retaining screws and lift receiver assembly clear of panel.
 - (d) Store all loose items in readiness for re-assembly.
2. Take out two 6BA screws and remove incremental cursor guide strip.
3. Take off broken cord and remove cursor.
4. Rotate Incremental Tuning Control to full extreme of clockwise travel to position the cord drum slot at 4 o'clock.

Incremental Cursor Drive (contd.)

5. Trap one knotted end of replacement cord at rear of cord drum slot with cord leaving drum from left to right.
6. Maintain tension on free end of cord and rotate Incremental Tuning Control to full extreme of anti-clockwise travel. This operation will wind on 5.5 turns of cord.
7. Pass cord over right-hand guide pulley, across scale and over left-hand guide pulley. Ignore jockey pulley at this stage and trap knotted end of cord in front of cord drum slot.
8. Maintain tension and fit cord underneath jockey pulley.
9. Attach cursor and slide along cord towards left-hand end of scale. Set coincident with setting mark after checking that Incremental Tuning Control is set to its fully anti-clockwise position.
10. Replace cursor guide strip and check that drive functions smoothly.
11. Check incremental scale calibration at +50kHz and -50kHz using internal calibrator.
12. Replace panel by reversing procedure in (1) above.

INSTRUCTIONS FOR REMOVING UNITS, PRINTED BOARDS ETC.

General

All sub-assemblies used in 1830 Series Receivers are arranged so that they can be removed easily for access to components which would otherwise be inaccessible with the units in-situ. In most cases the procedure for removal is obvious from visual inspection and the notes which follow serve merely for guidance in cases where caution is necessary or minor difficulties may be encountered. The procedure for removing the panel is particularly straightforward and allows immediate access to the meter and all operational controls.

Power Unit Chassis

Remove transparent cover over transformer connections to avoid risk of breakage when lifting chassis clear.

Audio Output Board

Remove board with heatsink attached (two screws in left-hand side-plate).

BFO and Filter Units

Remember to slacken screws in couplers before removing. Unit fixing screws are accessible from underneath.

Tunable IF Unit

Take off lid for access to four fixing screws.

Calibrator/Relay Unit

Tilt bottom of unit forward to facilitate removal.

RF Assembly

Access holes are provided in the back-plate to facilitate removal of the screws which hold the rear switch cover and aerial input shield.

RF Assembly (contd.)

The RF, Mixer and Oscillator board assemblies can be removed complete with their associated switch wafers. The following procedure is applicable to all boards:-

1. Slacken switch spindle coupler and withdraw spindle through hole in back-plate after removing plastic plug.
2. Disconnect all board terminations:-
 RF Board : 8 leads.* Mixer Board : 9 leads. Oscillator Board : 6 leads.
3. Remove four 6BA screws with washers (at extreme left and centre of board).
4. Remove screws etc. which retain top end of switch brackets - retrieve the spindle earthing wipers.
5. Lift board clear of box.

NB: When replacing, align switch wafers with spindle before tightening fixing screws removed in (3) and (4) above.

(* Excluding two leads to 100kHz IF rejector on side wall of box.

Panel and Scale Drum

Refer to instructions on page 33 (scale drum) and page 35 (panel).

RE - ALIGNMENT

General

Close-tolerance components are used in all tuned circuits throughout the receiver and re-alignment is not likely to be required unless coils and/or associated capacitors have been changed. Detailed instructions for re-aligning all pre-set circuits are given below on the assumption that the necessary adjustments will be carried out by skilled technicians with a sound knowledge of the basic procedures involved. An adequate range of test equipment must be available if the task is to be performed satisfactorily: receivers can be returned to the manufacturer for re-alignment if this course of action is preferred.

Reference should be made to the paragraphs on Performance Testing which should be read in conjunction with the instructions which follow.

NOTE: ALL CORES AND TRIMMERS ARE SELF-LOCKING: SEALING COMPOUNDS SHOULD NOT BE USED.

Re-alignment of the 100kHz IF Amplifier and Filter

Test Equipment

Standard Signal Generator covering 100kHz with slow tuning rate or incremental tuning facility.

Frequency Counter.

Valve or Solid-State Voltmeter with RF probe.

Insulated Screwdriver.

Terminating Resistor (75Ω ½-watt).

Re-alignment of the 100kHz IF Amplifier and Filter (contd.)

1. Adjust receiver controls as follows:-

| | | |
|------------------------|-----------------------------|-----------------------|
| RANGE SWITCH: Range 7. | CRYSTAL SELECTOR: 'SYNTH' | IF GAIN: Maximum. |
| MAIN TUNING: 450kHz. | MANUAL/AGC SWITCH: 'MANUAL' | AF GAIN: Mid-setting. |
| MODE SWITCH: 'AM' | | |

2. Connect generator to Mixer section of main tuning gang (ground earthy lead to frame of gang, not to side-plate).
3. Terminate IF Output socket with 75Ω resistor and connect valve voltmeter probe.
4. Set SELECTIVITY SWITCH to 'N' (crystal filter) and tune generator accurately to crystal peak (unmodulated signal).
5. Align core in L40 for maximum reading on valve voltmeter.
6. Switch to 'AGC' and adjust core in L42 for DIP in indicated reading (IF AGC).
7. Revert to 'MANUAL' and transfer valve voltmeter (DC range) to No. 99 on 100kHz IF Amplifier Board.
8. Increase generator output past AGC threshold level and then adjust core in L41 for further increase in voltmeter reading. Set to maximum value (RF AGC).
9. Re-connect valve voltmeter at IF Output socket (with probe). Check that generator is still accurately tuned to crystal peak.
10. Change SELECTIVITY SWITCH to 'CW' position and align the five filter inductors (L35 to L39) for maximum output reading. Repeat adjustments to ensure correct tuning.
11. Move SELECTIVITY SWITCH back to 'N' and connect Frequency Counter in parallel with IF Output termination. Detune generator 50Hz on either side of centre frequency, carefully noting filter attenuation at both settings.
12. If the attenuation at +50Hz and -50Hz is found to differ by more than 2dB, adjust C198 slightly to achieve a more symmetrical response. Bandwidth on completion of this adjustment should be of the order 100Hz at -6dB.
13. Increase generator output by 60dB and examine skirt selectivity. If alignment is correct, the 60dB points will lie approximately 1kHz either side of the centre frequency. Trim L38 and L39 slightly if necessary to achieve symmetrical response.
14. Re-check symmetry/bandwidth at 6dB points.
15. Switch to 'CW', 'SSB' and 'AM' selectivity positions and check that response agrees closely with figures quoted:-
 'CW' : 1.3kHz (-6dB) / 4.5kHz (-60dB).
 'SSB' : 3kHz / 9kHz. 'AM' : 8kHz / 28kHz.

Re-alignment of the BFO

| | |
|-------------------------|--|
| Test Equipment | Standard Signal Generator covering 100kHz and insulated trimming tool (Neosid T.T.1.). |
|-------------------------|--|

1. Proceed as (1) and (2) of instructions for IF alignment above.
2. Set SELECTIVITY SWITCH to 'N' and tune generator for peak reading on carrier meter.
3. Select 'USB' and 'LSB' positions of MODE SWITCH and compare pitch of beat notes with BFO PITCH CONTROL at mid-setting (index at 12 o'clock).
4. Adjust core in L43 through trimming aperture in underside of unit to equalise beat notes which should approximate to 1,500 cycles. Check that BFO PITCH gives a swing of the order ± 100Hz at 'USB' and 'LSB'.
5. Change to 'CW' setting of MODE SWITCH. Check that zero-beat occurs with index at or close to 12 o'clock setting, and that swing is approximately ± 5kHz.

Re-alignment of Incremental Oscillator

Test Equipment Crystal-controlled harmonic generator providing 10kHz markers in the range 1300 to 1400kHz.
Trimming Tool Type T.T.1.

Check incremental scale accuracy at +50kHz and -50kHz points, using internal crystal calibrator standardised against external reference frequency. Accuracy should be within 1kHz. If errors greater than 1kHz are noted, adjust trimmer C158 to correct -50kHz point, and core in L34 to correct +50kHz point. Repeat adjustments as necessary to eliminate interaction. C158/L34 are accessible through holes in lid of unit.

Check intermediate 10kHz points with external generator connected to Mixer section of main tuning gang. CRYSTAL SELECTOR SWITCH should be set to the 'SYNTH' position to disable the 1st Oscillator: RANGE SWITCH should be at Range 5, MAIN TUNING at 1.5MHz. It is most unlikely that errors in excess of 1kHz would be noted, but in this eventuality correction can be effected by slight fanning of the rotor vanes on C159.

Re-alignment of Tunable IF Transformer L32/L33

Test Equipment Standard Signal Generator covering the range 1300 - 1400kHz with 50-75Ω output impedance and 30% modulation at 400Hz.
Power Output Meter matched to 3Ω.
Trimming Tool Type T.T.1.

IMPORTANT: CHECK INCREMENTAL OSCILLATOR ALIGNMENT BEFORE CARRYING OUT ADJUSTMENTS BELOW

Connect generator at No. 70 on Tunable IF Unit and Output Meter to pins 7 & 9 of PL7. With receiver in 'AM' mode, set INCREMENTAL TUNING to +50kHz and generator to 1300kHz. Adjust L32 and L33 for maximum output.

Re-tune to -50kHz point with generator at 1400kHz and adjust trimmers C146 and C150 for maximum output. Repeat adjustments as necessary to eliminate interaction.

NOTE: Rejector circuits L30 & L31 are factory aligned and should not be adjusted.

Re-alignment of the RF Section

Test Equipment Standard Signal Generator covering 120kHz to 31MHz with output matched to 75Ω and 30% modulation at 400Hz.
Crystal-controlled harmonic generator providing 1 MHz markers up to 31MHz.
Power Output Meter matched to 3Ω.
Trimming Tools: Neosid H.S.1., T.T.1. and Eddystone 8363P.

1st Oscillator Circuits: Re-alignment of the 1st Oscillator circuits should be carried out if main scale errors greater than 0.5% are observed with the CAL ADJ CONTROL at mid-travel setting (and INCREMENTAL TUNING CONTROL at 'Ø' on Ranges 1-5).

Scale accuracy should be checked by combined use of the internal 100kHz crystal calibrator and an external 1MHz harmonic generator. The latter is required for positive identification of the 1MHz points on the higher frequency ranges.

Re-alignment of the RF Section (contd.)

The alignment procedure is quite conventional - trimmers and cores being adjusted at the frequencies listed in Table 6.1 below. Pre-set adjustments can be identified by reference to the legend printed on the coil box lid.

The slight change in calibration which occurs when the lid is replaced after alignment should be ignored: it can be corrected by very minor adjustment of the CAL ADJ CONTROL, the shift in cursor position being a very small proportion of the total travel available.

TABLE 6.1 1ST OSCILLATOR ALIGNMENT FREQUENCIES AND ADJUSTMENTS

NB: Ranges 7 & 8, frequencies in brackets refer to Model 1830/3

| Range | Freq. | Core | Freq. | Trimmer |
|-------|-----------------|------|-----------------|---------|
| 1 | 19.0MHz | L21 | 30.0MHz | C121 |
| 2 | 10.5MHz | L22 | 19.0MHz | C122 |
| 3 | 5.75MHz | L23 | 9.5MHz | C123 |
| 4 | 3.0MHz | L24 | 5.25MHz | C124 |
| 5 | 1.55MHz | L25 | 2.85MHz | C125 |
| 6 | 950kHz | L26 | 1700kHz | C126 |
| 7 | 500kHz (415kHz) | L27 | 950kHz (520kHz) | C127 |
| 8 | 250kHz (210kHz) | L28 | 450kHz (360kHz) | C128 |
| 9 | 130kHz | L29 | 240kHz | C129 |

SET CAL ADJ CONTROL TO MID-TRAVEL AND INCREMENTAL TO ZERO BEFORE COMMENCING ALIGNMENT

RF and 1st Mixer Circuits: Front-end alignment should be carried out if an overall performance check reveals substandard performance on one or several ranges. Standard alignment procedure applies and the appropriate pre-set adjustments can be determined from the coil box legend. Tables 6.2, 6.3 and 6.4 list the alignment frequencies to be used on all versions of the receiver.

It should be noted that the primary cores of the bandpass circuits L2-L7 are adjusted by passing the long end of the H.S.l. trimming tool through the secondary cores. All cores must be adjusted on their upper peak except the primary core of L2 which is set on the lower peak. The tuning gang should be rocked slightly to combat a minor degree of pulling which occurs when adjusting the Mixer circuits on Ranges 1 and 2.

100kHz IF Rejector: On completion of re-alignment on Range 9, leave the receiver tuned to 130kHz and set the generator to 100kHz. Increase generator output until IF break-through signal is audible and then trim core in L11 for minimum signal. L11 is accessible through hole in side of coilbox. Re-tune generator to 130kHz, reduce output and re-trim L10 for maximum signal. Repeat both adjustments until interaction is eliminated.

TABLE 6.2 RF/MIXER ALIGNMENT FREQUENCIES AND ADJUSTMENTS : RANGES 1-6

| Range | Freq. | Bandpass Core | | Mixer Core | Freq. | Bandpass Trimmers | | Mixer Trim. |
|-------|---------|---------------|--------|------------|---------|-------------------|------|-------------|
| | | Pri. | Sec. | | | Pri. | Sec. | |
| 1 | 19.0MHz | L2 Bttm. | L2 Top | L12 | 30.0MHz | C31 | C53 | C85 |
| 2 | 10.5MHz | L3 Bttm. | L3 Top | L13 | 19.0MHz | C32 | C54 | C86 |
| 3 | 5.75MHz | L4 Bttm. | L4 Top | L14 | 9.5MHz | C33 | C55 | C87 |
| 4 | 3.0MHz | L5 Bttm. | L5 Top | L15 | 5.25MHz | C34 | C56 | C88 |
| 5 | 1.55MHz | L6 Bttm. | L6 Top | L16 | 2.85MHz | C35 | C57 | C89 |
| 6 | 950kHz | L7 Bttm. | L7 Top | L17 | 1700kHz | C36 | C58 | C90 |

TABLE 6.3 RF/MIXER ALIGNMENT FREQUENCIES AND ADJUSTMENTS : RANGES 7-9 (1830/1 & /2)

| Range | Freq. | Core | | Freq. | Trimmer | |
|-------|--------|------|-------|--------|---------|-------|
| | | RF | Mixer | | RF | Mixer |
| 7 | 500kHz | L8 | L18 | 950kHz | C59 | C91 |
| 8 | 250kHz | L9 | L19 | 450kHz | C60 | C92 |
| 9 | 130kHz | L10 | L20 | 240kHz | C61 | C93 |

TABLE 6.4 RF/MIXER ALIGNMENT FREQUENCIES AND ADJUSTMENTS : RANGES 7-9 (1830/3 ONLY)

| Range | Freq. | Core | | Freq. | Trimmer | |
|-------|--------|------|-------|--------|---------|-------|
| | | RF | Mixer | | RF | Mixer |
| 7 | 415kHz | L8 | L18 | 520kHz | C59 | C91 |
| 8 | 210kHz | L9 | L19 | 360kHz | C60 | C92 |
| 9 | 130kHz | L10 | L20 | 240kHz | C61 | C93 |

P E R F O R M A N C E T E S T I N GGeneral

A selection of essential performance figures covering overall and stage testing is included below to assist personnel engaged in fault-finding on 1830 Series Receivers. Unit terminations are accessible without difficulty to permit attachment of test equipment when checks are necessary at intermediate circuit points.

Overall Performance Check

If substandard performance is suspected, the receiver should be withdrawn from service and subjected initially to an overall performance check at the mid-frequency in each of the nine frequency ranges. An accurately calibrated standard signal generator should be used, having an output impedance of 75Ω with reliable attenuator and low signal leakage. A power output meter matched to 3Ω should be connected to pins 7 & 9 of PL7 to serve as an output indicator.

Sensitivity readings should be taken for 15dB signal + noise to noise ratio with the controls set as indicated below. The normal sensitivity should be better than $3\mu\text{V}$ for 50mW output with the generator modulated 30% at 400Hz.

| | | | | | |
|--------------------|----|-----------------|------------|----|------------|
| INCREMENTAL TUNING | :: | ' \emptyset ' | N/L SWITCH | :: | 'OFF' |
| CRYSTAL SELECTOR | :: | 'NORMAL' | MANUAL/AGC | :: | 'MANUAL' |
| PEAK-RF CONTROL | :: | Max. signal | IF GAIN | :: | Maximum |
| MODE SWITCH | :: | 'AM' | AF GAIN | :: | Adjust for |
| SELECTIVITY SWITCH | :: | 'SSB' | | | 50mW o/p. |

Audio Sensitivity Checks3 Ω Channel:

Connect audio generator to No. 151 on Audio Board and output meter matched to 3Ω to pins 7 & 9 of PL7. Sensitivity should be 12-18mV for 50mW output at 1kHz with the controls adjusted as follows:-

AF GAIN :: Maximum. LINE LEVEL :: Maximum. N/L SWITCH :: 'OFF'

This test can also be performed from No. 121 on the N/L Board, at which point the performance check will include the N/L SWITCH and AF GAIN.

600 Ω Channel:

Connect audio generator to No. 147 on Audio Board and output meter matched to 600 Ω to pins 10 & 12 of PL7. Sensitivity should be of the order 30mV for 10mW output at 1kHz with controls adjusted as for 3 Ω Channel above.

This test can also be performed from No. 121 on the N/L Board, at which point the performance check will include the N/L SWITCH and LINE LEVEL CONTROL.

Noise Limiter:

An indication of normal operation can be obtained by feeding a 1kHz signal to No.121 and adjusting the input level to give 50mW output with the N/L SWITCH 'OFF' and AF GAIN at max. Switching to N/L 'ON' should show a drop in output of the order 6dB.

100kHz IF Sensitivity

Overall Check:

Connect standard signal generator with 50Ω output to stator of C149 in the Tunable IF Unit, and output meter matched to 3Ω to pins 7 & 9 of PL7. Modulate carrier 30% at 400Hz and adjust receiver controls as follows:-

| | | | | | | | | |
|-------------|----|----------|-------------|----|----------|---------|----|-------|
| MODE SWITCH | :: | 'AM' | SELECTIVITY | :: | 'SSB' | IF GAIN | :: | Max. |
| AF GAIN | :: | Maximum. | MANUAL/AGC | :: | 'MANUAL' | N/L | :: | 'OFF' |

Sensitivity should be of the order 6.5μV for 50mW output.

With MODE SWITCH transferred to 'CW', and with BFO adjusted for 1kHz beat, 50mW o/p should be obtained with a 3μV unmodulated carrier applied at stator of C149.

Stage Checks:

Sensitivities for 50mW output with modulated generator applied via 0.1μF blocking capacitor are as follows:-

| | | | | | | | | |
|-----------|---|-------|-----------|---|-------|-----------|---|------|
| Gate TR13 | : | 8μV | Gate TR15 | : | 600μV | Base TR17 | : | 30mV |
| Gate TR14 | : | 140μV | Gate TR16 | : | 3.2mV | | | |

IF Output:

A valve or solid-state RF voltmeter connected across a 75Ω terminating resistor should show an output of the order 100mV for 60μV applied at input of IF Filter. The SELECTIVITY SWITCH should be set to 'SSB' and the generator output lead must be blocked with a 0.1μF capacitor.

Tunable IF Sensitivity (1300kHz - 1400kHz)

Connect standard signal generator to Mixer section of main tuning gang and output meter matched to 3Ω to pins 7 & 9 of PL7. Tune generator to 1350kHz with modulation 30% at 400Hz: set receiver controls as follows:-

| | | | | | |
|-------------|----|----------|--------------|----|---------|
| IF/AF GAINS | :: | Maximum. | RANGE SWITCH | :: | Range 5 |
| MODE SWITCH | :: | 'AM' | MAIN TUNING | :: | 1.5MHz |
| SELECTIVITY | :: | 'AM' | INCREMENTAL | :: | '∅' |
| N/L SWITCH | :: | 'OFF' | | | |

CRYSTAL SELECTOR :: 'SYNTH' (to stop 1st Oscillator)

Sensitivity should be of the order 1μV for 50mW output.

Check also with INCREMENTAL at +50kHz (generator tuned to 1300kHz*), and at -50kHz (generator to 1400kHz*). Sensitivities should be within 3dB of figure obtained with the INCREMENTAL set at '∅'.

(*) Highest intermediate frequency occurs at low frequency end of incremental scale to accommodate frequency inversion in 1st Mixer.

A P P E N D I X ' A '
V O L T A G E A N A L Y S I S

In the event of the receiver failing to operate normally, first check all voltages at the unit/board terminations listed in Table 1 below. If these voltages check out normally, refer to Table 2 on page 46 and carry out a detailed check of individual transistor voltages. The readings given in the Tables were taken with a standard 20,000 Ω /V testmeter (AVO Model 8*): 10% variation should be allowed to cover the usual zener/semiconductor spreads. All voltages are relative to circuit earth.

Voltage readings should be taken with the essential receiver controls adjusted as follows, or as indicated in the relevant column in the Tables.

| | | | | | |
|------------------|----|-----------------|----------------|----|----------|
| RANGE SWITCH | :: | Range 5 | MODE SWITCH | :: | 'AM' |
| MAIN TUNING | :: | 2.0MHz | IF GAIN | :: | Maximum |
| INCREMENTAL | :: | ' \emptyset ' | CAL SWITCH | :: | 'OFF' |
| CRYSTAL SELECTOR | :: | 'NORMAL' | MAN/AGC SWITCH | :: | 'MANUAL' |
| PEAK-RF CONTROL | :: | Mid-position | | | |

(*) using 10V DC range unless otherwise stated.

TABLE 1 UNIT/BOARD SUPPLIES ETC.

| Unit/Board | Pin | Service | Voltage/Remarks |
|--|----------------|-----------------------|--|
| POWER UNIT | 160 | | +10V |
| | 161 | | +11V |
| | 162 | Rectifier output | +12V (nom.) |
| | 164 | | +12V (nom.) |
| NB: AC input to CH20/CH21 can be checked with meter connected to Nos 166 & 167 | | | |
| CALIBRATOR/ RELAY UNIT | 24 | Relay supply | +11V |
| | 25 | Relay switching | +10V. 0V with CAL SWITCH at 'ON' or with external muting control circuit (SK7/2-4) closed externally. |
| | 28 | Calibrator supply | +11V with CAL SWITCH at 'ON'. |
| PEAK-RF BOARD | 30 31 32 | VVC control voltage | +0.7V to +10.5V for full swing of PEAK-RF CONTROL. |
| CRYSTAL OSC. UNIT | 41 | 1st Oscillator supply | +11V (Remove Crystal Box for access). NB: Refer to Table 2 and associated note which details the procedure to be adopted when more detailed analysis of the Crystal Oscillator Unit is required. USE 25V RANGE WHERE NECESSARY |

| Unit/Board | Pin | Service | Voltage/Remarks |
|-------------------------------|-----|---|--|
| RF ASSEMBLY | 52 | RF AGC feed | +0.4V under no-signal conditions |
| | 54 | Supply to TR5, TR6 and TR7 | +11V under all conditions of switching |
| | 55 | Drain of TR7 (IF o/p) | +10.5V |
| | 57 | Supply to TR8 & TR9 | +11V with CRYSTAL SELECTOR SWITCH at 'NORMAL' |
| TUNABLE IF UNIT | 72 | Supply to TR10, TR11 and TR12 | +11V with RANGE SWITCH at Ranges 1-5 |
| | 75 | Drain of TR10 | +11V under all conditions of switching |
| | 76 | | |
| | 70 | Input to L30 etc. | +10.5V with RANGE SWITCH at Ranges 1-5 |
| 100kHz IF FILTER UNIT | 80 | Input to L36 | +10.5V under all conditions of switching |
| | 81 | Supply to drains of TR7 and TR10 | +11V under all conditions of switching |
| 100kHz IF AMPLIFIER BOARD | 92 | Gain control to TR13, TR14 and TR15 | 0V to -2.6V* for full rotation of IF GAIN with MANUAL/AGC SWITCH at 'MANUAL' (*) Dependent on value of R159 fitted |
| | 97 | Supply to TR13-TR21 | +10V under all conditions of switching |
| | 98 | IF AGC line | 0V under no-signal conditions |
| | 99 | RF AGC line | +0.4V under no-signal conditions |
| CW/SSB DET & BFO | 107 | Supply to TR22 & TR23 | +11V with MODE SWITCH at CW/USB/LSB |
| N/L, METER & NEG SUPPLY BOARD | 126 | Supply to TR24, TR25, TR26, TR27 & IC1 | +11V under all conditions of switching |
| | 128 | Neg. supply outlet | -8.2V under all conditions of switching |
| | 129 | RV3 supply | +8.7V) |
| | 130 | Meter line | +7V) with meter zero'd |
| | 131 | IF AGC line | 0V under no-signal conditions |
| AUDIO BOARD | 150 | Supply to TR28, TR29, TR30, TR31, TR32 & TR33 | +12V under all conditions of switching |

TABLE 2 TRANSISTOR VOLTAGES

NOTE: Control settings should be as detailed on page 44, except where modified by the Notes listed in the right-hand column. A 10% tolerance applies and all readings are POSITIVE w.r.t. circuit earth unless otherwise indicated.

| Unit/Board | Ref. | Emitter /Source | Base/ Gate/Gate 1 | Gate 2 | Collector / Drain | Notes |
|----------------------------|------|-----------------|-------------------|--------|-------------------|--------|
| Calibrator/Relay Unit | TR1 | 0.7V* | 1.2V* | - | 10.7V† | NOTE 1 |
| | TR2 | 0V | 0V | - | 10.7V† | -do- |
| Crystal Osc. Unit | TR3 | 0.8V* | 1.2V | - | 7V | NOTE 2 |
| | TR4 | 6.5V | 7V | - | 10V | -do- |
| RF Assembly | TR5 | 0.7V* | 0V | - | 1.8V | NOTE 3 |
| | TR6 | 1.8V | 0.4V | - | 8.7V | -do- |
| | TR7 | 0.85V* | 0V | 0.4V* | 10V | -do- |
| | TR8 | 0.6V* | 0V | - | 10V | -do- |
| | TR9 | 3.5V | 0.8V | - | 10V | -do- |
| Tunable IF Unit | TR10 | 0.5V* | 0V | 0.38V* | 10.5V† | |
| | TR11 | 2.4V | 0V | - | 8V | |
| | TR12 | 5.2V | 5.8V | - | 10V | |
| 100kHz IF Amplifier Board | TR13 | 1.7V | 0V | - | 8V | |
| | TR14 | 1.7V | 0V | - | 8V | |
| | TR15 | 1.7V | 0V | - | 8V | |
| | TR16 | 1.4V | 0V | - | 8V | |
| | TR17 | 0V | 0.7V* | - | 10.5V† | |
| | TR18 | 1.4V | 0V | - | 7V | |
| | TR19 | 0V | 0.7V* | - | 10.5V† | |
| | TR20 | 1.4V | 0V | - | 5V | |
| | TR21 | 0V | 0.7V* | - | 10.5V† | |
| CW/SSB Detector & BFO Unit | TR22 | 0V | 0V | - | 7.6V | NOTE 4 |
| | TR23 | 1V | 0V | 1V | 7.6V | -do- |

(*) 2.5V range. (†) 25V range.

| Unit/Board | Ref. | Emitter /Source | Base/ Gate/Gate 1 | Gate 2 | Collector / Drain | Notes |
|---|------|--------------------|----------------------|--------|----------------------|-------|
| N/L, Meter & Neg. Supply Board (IC1 - see below) | TR24 | 5V** | 5.6V** | - | 10.5V [†] | |
| | TR25 | 0.4V* | 1V* | - | 9.5V | |
| | TR26 | 9.5V | 10V | - | 0.15V* | |
| | TR27 | 1.5V | 0V | - | 7V | |
| Audio Board | TR28 | 6.2V** | 6.8V** | - | 10V | |
| | TR29 | 10.5V [†] | 10V | - | 6V | |
| | TR30 | 5.5V | 6V | - | 12.5V [†] | |
| | TR31 | 5.5V | 4.9V | - | 0V | |
| | TR32 | 0.4V* | 0.8V* | - | 6V | |
| | TR33 | 0.9V* | 1.5V | - | 10V | |

(**) 100V range.

IC1 voltages: Lead 1 : 6.8V. Lead 3 : 0V. Lead 5 : 6.8V. Lead 6 : 8.8V.
 Lead 7 : 3.7V. Lead 8 : 8.8V. Leads 2 & 4 : no connection.

NOTES

- NOTE 1 :: CAL SWITCH to 'ON'. Remove unit from back-plate for access to p.c.b.
- NOTE 2 :: Crystal Box removed. Link Nos 1 & 3 on 6-way socket to simulate CRYSTAL SELECTOR SWITCH at 'CRYSTAL' (No. 1 is at right-hand side when underside of receiver is viewed from front).
- NOTE 3 :: Measure TR5 drain and TR6 source on can of TR6 (internally connected to source).
 Voltage quoted for TR6 drain falls to 3.5V on Ranges 7-9.
 Readings quoted for TR7, TR8 & TR9 subject to 20% variation (dependent on actual level of oscillator drive).
- NOTE 4 :: MODE SWITCH at 'CW'.

A P P E N D I X ' B '

S E M I C O N D U C T O R C O M P L E M E N T

| Ref | Type | Manufacturer | Circuit Function | Loc |
|-------|------------|---------------|--------------------------------------|-----|
| TR1 | BC107B | Mullard | 100kHz Crystal Osc. (Calibrator) | A |
| TR2 | 2N4254 | Texas | Harmonic Amplifier | A |
| TR3 | 2N4254 | Texas | 1st Oscillator (CRYSTAL) | C |
| TR4 | 2N4254 | Texas | Emitter Follower (CRYSTAL Buffer) | C |
| TR5 | UC734B | Union Carbide | RF Amplifier | D |
| TR6 | 3N128 | RCA | | |
| TR7 | 40673 | RCA | 1st Mixer | D |
| TR8 | 3N128 | RCA | 1st Oscillator (VFO) | D |
| TR9 | UC734B | Union Carbide | Source Follower (VFO Buffer) | D |
| TR10 | 40673 | RCA | 2nd Mixer | E |
| TR11 | UC734B | Union Carbide | 2nd Oscillator (INCREMENTAL) | E |
| TR12 | 2N4254 | Texas | Emitter Follower (Inc Osc Buffer) | E |
| TR13 | UC734B | Union Carbide | 1st 100kHz IF Amplifier | G |
| TR14 | UC734B | Union Carbide | 2nd 100kHz IF Amplifier | G |
| TR15 | UC734B | Union Carbide | 3rd 100kHz IF Amplifier | G |
| TR16 | UC734B | Union Carbide | 4th 100kHz IF Amplifier | G |
| TR17 | 2N4254 | Texas | Emitter Follower | G |
| TR18 | UC734B | Union Carbide | RF AGC Amplifier | G |
| TR19 | 2N4254 | Texas | Emitter Follower | G |
| TR20 | UC734B | Union Carbide | IF AGC Amplifier | G |
| TR21 | 2N4254 | Texas | Emitter Follower | G |
| TR22 | UC734B | Union Carbide | BFO/CIO | H |
| TR23 | 40673 | RCA | CW & SSB Detector | H |
| TR24 | BC107B | Mullard | Emitter Follower | I |
| TR25 | 2N4254 | Texas | Emitter Follower | I |
| TR26 | 2N3702 | Texas | 300Hz Oscillator (Neg. Inverter) | I |
| TR27 | UC734B | Union Carbide | Meter Amplifier | I |
| TR28 | BC107B | Mullard | Audio Amplifier | J |
| TR29 | BFX88 | Mullard | Audio Driver | J |
| TR30 | 2N4921 | RCA | | |
| TR31 | 2N4918 | RCA | Push-pull Audio Output (3 Ω) | J |
| TR32 | BC107B | Mullard | Audio Amplifier | J |
| TR33 | BC107B | Mullard | Audio Output (600 Ω Channel) | J |
| IC1 | CA3053 | RCA | Noise Limiter | I |
| D1-D4 | 4 x DDO06 | Lucas | Aerial Protection | A |
| D5-10 | 6 x BA111 | STC | Peak RF VVC's | B |
| D11 | 1S44 | Texas | Breakdown Protection | C |
| D12 | 1S44 | Texas | Oscillator Bias Diode | D |
| D13 | BZY88C8V2 | Mullard | Zener Regulator (Inc Osc supply) | E |
| D14 | OA47 | Mullard | AM Detector | G |
| D15 | 1S44 | Texas | RF AGC Rectifier | G |
| D16 | 1S44 | Texas | IF AGC Rectifier | G |
| D17 | 1S44 | Texas | 300Hz Rectifier (Neg. Inverter) | I |
| D17A | BZY88C8V2 | Mullard | Zener Regulator (Neg. supply) | I |
| D18 | BZY93C11 | Mullard | Zener Regulator (+11V supply) | K |
| D19 | DDO06 | Lucas | Reverse Polarity Protection | †M |
| D20 | OSH01A-100 | Mullard | Supply Rectifier (Bridge) | K |
| *D21 | BZY93C13 | Mullard | Zener Regulator | N |

(*) Not fitted Ser. Nos 0001-0050

† Loc. K on Ser. Nos 0001-0050

APPENDIX 'C'

COMPONENT VALUES TOLERANCES AND RATINGS

Location Code

| | | | |
|---|--------------------------------------|---|------------------------------------|
| A | Calibrator/Relay Unit | H | CW/SSB Detector & BFO Unit |
| B | Peak-RF Board | I | Noise Limiter, Meter & Neg. Supply |
| C | Crystal Osc. Unit (C- = Crystal Box) | J | Audio Amplifier Board (Board) |
| D | RF Assembly (Coil Box) | K | Power Unit |
| E | Tunable IF Unit | L | Panel |
| F | 100kHz IF Filter Unit | M | Back-plate |
| G | 100kHz IF Amplifier Board | N | Side-plate |

Capacitors

| Ref | Value | Type | Tolerance | Wkg. V. | Loc | |
|---------------------------------------|----------------|--------------------------|-------------------------|-----------|------|----|
| C1 | 0.1 μ F | Polycarbonate | 20% | 100V | A | |
| C2 | 0.0047 μ F | Silvered Mica | 5% | 350V | A | |
| C3 | 0.0032 μ F | Silvered Mica | 5% | 350V | A | |
| C4 | 35pF | Tubular Ceramic | 20% | 750V | A | |
| C5 | 100pF | Tubular Ceramic | 10% | 500V | A | |
| C6 | 10 μ F | Tantalum | 20% | 16V | A | |
| C7 | 0.1 μ F | Polycarbonate | 20% | 100V | A | |
| C8 & 9 | - | References not allocated | - | - | - | |
| C15 & C16 : References not allocated. | C10 | 0.1 μ F | Polycarbonate | 20% | 100V | B |
| | C11 | 0.1 μ F | Polycarbonate | 20% | 100V | B |
| | C12 | 0.1 μ F | Polycarbonate | 20% | 100V | B |
| | C13 | 0.047 μ F | Polycarbonate | 20% | 100V | B |
| | C14 | 0.047 μ F | Polycarbonate | 20% | 100V | B |
| | C17 | 0.01 μ F | Polycarbonate | 20% | 100V | C- |
| | C18 | 0.047 μ F | Polycarbonate | 20% | 100V | C- |
| | C19 | 0.047 μ F | Polycarbonate | 20% | 100V | C- |
| | C20 | 0.001 μ F | Disk Ceramic | 20% | 500V | C |
| | C21 | 20pF | Tubular Ceramic | 5% | 750V | C |
| | C22 | 60pF | Tubular Ceramic | 5% | 750V | C |
| | C23 | 0.0047 μ F | Silvered Mica | 5% | 350V | C |
| | C24 | - | Reference not allocated | - | - | - |
| | C25 | 80 μ F | Tubular Electrolytic | +50% -10% | 25V | C |
| | C26 | 80 μ F | Tubular Electrolytic | +50% -10% | 25V | C |
| | C27 | 70pF | Polystyrene | 5% | 125V | C |
| | *C28 | 0.1 μ F | Disk Ceramic | +80% -20% | 500V | C |
| | C29 | 0.1 μ F | Polycarbonate | 20% | 100V | C |
| | C30 | 12-358pF | Air-spaced Variable | - | - | D |
| | C31 | 7-35pF | Disk Ceramic Trimmer | - | - | D |
| C32 | 7-35pF | Disk Ceramic Trimmer | - | - | D | |
| C33 | 7-35pF | Disk Ceramic Trimmer | - | - | D | |
| C34 | 7-35pF | Disk Ceramic Trimmer | - | - | D | |
| C35 | 7-35pF | Disk Ceramic Trimmer | - | - | D | |
| C36 | 7-35pF | Disk Ceramic Trimmer | - | - | D | |
| C37 | 80pF | Silvered Mica | 5% | 350V | D | |
| C38 | 70pF | Silvered Mica | 5% | 350V | D | |
| C39 | 70pF | Silvered Mica | 5% | 350V | D | |

(*) Not fitted on 1830/2

| Ref | Value | Type | Tolerance | Wkg. V. | Loc |
|------|----------------|-------------------------|-----------|---------|-----|
| C40 | 50pF | Silvered Mica | 5% | 350V | D |
| C41 | 40pF | Silvered Mica | 5% | 350V | D |
| C42 | 50pF | Silvered Mica | 5% | 350V | D |
| C43 | 0.0047 μ F | Polystyrene | 2% | 125V | D |
| C44 | 0.0047 μ F | Polystyrene | 2% | 125V | D |
| C45 | 0.007 μ F | Polystyrene | 1% | 125V | D |
| C46 | 110pF | Silvered Mica | 5% | 350V | D |
| C47 | 50pF | Silvered Mica | 5% | 350V | D |
| C48 | 50pF | Silvered Mica | 5% | 350V | D |
| C49 | 25pF | Silvered Mica | 5% | 350V | D |
| C50 | 10pF | Silvered Mica | 10% | 350V | D |
| C51 | 30pF | Silvered Mica | 5% | 350V | D |
| *C52 | 10pF | Silvered Mica | 10% | 350V | D |
| C53 | 7-35pF | Disk Ceramic Trimmer | - | - | D |
| C54 | 7-35pF | Disk Ceramic Trimmer | - | - | D |
| C55 | 7-35pF | Disk Ceramic Trimmer | - | - | D |
| C56 | 7-35pF | Disk Ceramic Trimmer | - | - | D |
| C57 | 7-35pF | Disk Ceramic Trimmer | - | - | D |
| C58 | 7-35pF | Disk Ceramic Trimmer | - | - | D |
| C59 | 7-35pF | Disk Ceramic Trimmer | - | - | D |
| C60 | 7-35pF | Disk Ceramic Trimmer | - | - | D |
| C61 | 7-35pF | Disk Ceramic Trimmer | - | - | D |
| C62 | 12-358pF | Air-spaced Variable | - | - | D |
| C62A | 15pF | Tubular Ceramic | 10% | 750V | D |
| C63 | 60pF | Tubular Ceramic | 10% | 750V | D |
| C64 | 0.1 μ F | Polycarbonate | 20% | 100V | D |
| C65 | 0.1 μ F | Polycarbonate | 20% | 100V | D |
| C66 | 0.1 μ F | Polycarbonate | 20% | 100V | D |
| C67 | 0.1 μ F | Polycarbonate | 20% | 100V | D |
| C68 | 6pF | Tubular Ceramic | 10% | 750V | D |
| C69 | 3pF | Tubular Ceramic | 10% | 750V | D |
| C70 | - | Reference not allocated | - | - | - |
| C71 | 50pF | Silvered Mica | 5% | 350V | D |
| C72 | 0.001 μ F | Silvered Mica | 5% | 350V | D |
| C73 | 0.001 μ F | Silvered Mica | 5% | 350V | D |
| C74 | 0.001 μ F | Silvered Mica | 5% | 350V | D |
| C75 | 110pF | Silvered Mica | 5% | 350V | D |
| C76 | 50pF | Silvered Mica | 5% | 350V | D |
| C76A | 6pF | Tubular Ceramic | 10% | 750V | D |
| C77 | 40pF | Silvered Mica | 5% | 350V | D |
| C77A | 6pF | Tubular Ceramic | 10% | 750V | D |
| C78 | 30pF | Silvered Mica | 5% | 350V | D |
| C79 | 15pF | Silvered Mica | 5% | 350V | D |
| C80 | 0.01 μ F | Metallised Paper | 10% | 200V | D |
| C81 | 25pF | Silvered Mica | 5% | 350V | D |
| C82 | 0.01 μ F | Metallised Paper | 10% | 200V | D |
| C83 | 0.01 μ F | Metallised Paper | 10% | 200V | D |
| C84 | 0.01 μ F | Metallised Paper | 10% | 200V | D |
| C85 | 7-35pF | Disk Ceramic Trimmer | - | - | D |

(*) 285pF on 1830/3 (1%tol.)

| Ref | Value | Type | Tolerance | Wkg. V. | Loc |
|-------|----------|----------------------|-----------|---------|-----|
| C86 | 7-35pF | Disk Ceramic Trimmer | - | - | D |
| C87 | 7-35pF | Disk Ceramic Trimmer | - | - | D |
| C88 | 7-35pF | Disk Ceramic Trimmer | - | - | D |
| C89 | 7-35pF | Disk Ceramic Trimmer | - | - | D |
| C90 | 7-35pF | Disk Ceramic Trimmer | - | - | D |
| C91 | 7-35pF | Disk Ceramic Trimmer | - | - | D |
| †C91A | 285pF | Silvered Mica | 1% | 350V | D |
| C92 | 7-35pF | Disk Ceramic Trimmer | - | - | D |
| C93 | 7-35pF | Disk Ceramic Trimmer | - | - | D |
| C94 | 12-358pF | Air-spaced Variable | - | - | D |
| C94A | 12pF | Tubular Ceramic | 10% | 750V | D |
| C95 | 60pF | Tubular Ceramic | 10% | 750V | D |
| C96 | 0.1μF | Polycarbonate | 20% | 100V | D |
| C97 | 150pF | Silvered Mica | 5% | 350V | D |
| C98 | 0.1μF | Polycarbonate | 20% | 100V | D |
| C99 | 0.1μF | Polycarbonate | 20% | 100V | D |
| C100 | 0.1μF | Polycarbonate | 20% | 100V | D |
| C101 | 0.047μF | Polycarbonate | 20% | 100V | D |
| C102 | 0.1μF | Polycarbonate | 20% | 100V | D |
| C103 | 0.003μF | Silvered Mica | 1% | 350V | D |
| C104 | 0.002μF | Silvered Mica | 1% | 350V | D |
| C105 | 0.002μF | Silvered Mica | 1% | 350V | D |
| C106 | 750pF | Silvered Mica | 1% | 350V | D |
| C107 | 540pF | Silvered Mica | 1% | 350V | D |
| C108 | 0.0028μF | Silvered Mica | 1% | 350V | D |
| *C109 | 0.0024μF | Silvered Mica | 1% | 350V | D |
| *C110 | 0.0013μF | Silvered Mica | 1% | 350V | D |
| C111 | 710pF | Silvered Mica | 1% | 350V | D |
| C112A | 30pF | Silvered Mica | 5% | 350V | D |
| C112B | 80pF | Tubular Ceramic N750 | 5% | 750V | D |
| C113A | 20pF | Silvered Mica | 5% | 350V | D |
| C113B | 50pF | Tubular Ceramic N750 | 5% | 750V | D |
| C114A | 20pF | Silvered Mica | 5% | 350V | D |
| C114B | 70pF | Tubular Ceramic N750 | 5% | 750V | D |
| C115A | 20pF | Silvered Mica | 5% | 350V | D |
| C115B | 50pF | Tubular Ceramic N750 | 5% | 750V | D |
| C116A | 20pF | Silvered Mica | 5% | 350V | D |
| C116B | 50pF | Tubular Ceramic N750 | 5% | 750V | D |
| C117 | 56pF | Polystyrene | ±2pF | 125V | D |
| *C118 | 39pF | Polystyrene | ±3pF | 125V | D |
| *C119 | 39pF | Polystyrene | ±3pF | 125V | D |
| C120 | 56pF | Polystyrene | ±2pF | 125V | D |
| C121 | 7-35pF | Disk Ceramic Trimmer | - | - | D |
| C122 | 7-35pF | Disk Ceramic Trimmer | - | - | D |
| C123 | 7-35pF | Disk Ceramic Trimmer | - | - | D |
| C124 | 7-35pF | Disk Ceramic Trimmer | - | - | D |
| C125 | 7-35pF | Disk Ceramic Trimmer | - | - | D |
| C126 | 7-35pF | Disk Ceramic Trimmer | - | - | D |

(†) Fitted on 1830/3
only.

(*) On 1830/3: C109 0.0042μF, C110 800pF, -51-
C118 390pF and C119 27pF.

| Ref | Value | Type | Tolerance | Wkg. V. | Loc |
|-------|----------------|------------------------------------|-----------|---------|-----|
| C127 | 7-35pF | Disk Ceramic Trimmer | - | - | D |
| C128 | 7-35pF | Disk Ceramic Trimmer | - | - | D |
| C129 | 7-35pF | Disk Ceramic Trimmer | - | - | D |
| C130 | 18-364pF | Air-spaced Variable | - | - | D |
| C131 | 100pF | Silvered Mica | 5% | 350V | D |
| C132 | 100pF | Silvered Mica | 5% | 350V | D |
| C133 | 0.047 μ F | Polycarbonate | 20% | 100V | D |
| C134 | 0.1 μ F | Polycarbonate | 20% | 100V | D |
| C135 | 0.01 μ F | Polycarbonate | 20% | 100V | D |
| C136 | | | | | |
| -139 | - | References not allocated | - | - | - |
| C140 | 0.1 μ F | Polycarbonate | 20% | 100V | E |
| C141 | 370pF | Silvered Mica | 5% | 350V | E |
| C142 | 150pF | Silvered Mica | 1% | 350V | E |
| C143 | 0.047 μ F | Polycarbonate | 20% | 100V | E |
| C144 | 0.0016 μ F | Silvered Mica | 1% | 350V | E |
| *C145 | 360pF | Polystyrene | 1% | 125V | E |
| C146 | 7-35pF | Disk Ceramic Trimmer | - | - | E |
| C147 | 20pF | Tubular Ceramic | 10% | 750V | E |
| C148 | 12-358pF | Air-spaced Variable | - | - | E |
| C149 | 12-358pF | Air-spaced Variable | - | - | E |
| C150 | 7-35pF | Disk Ceramic Trimmer | - | - | E |
| *C151 | 270pF | Polystyrene | 1% | 125V | E |
| C152 | 0.0016 μ F | Silvered Mica | 1% | 350V | E |
| C153 | 0.047 μ F | Polycarbonate | 20% | 100V | E |
| C154 | 0.1 μ F | Polycarbonate | 20% | 100V | E |
| C155 | 0.047 μ F | Polycarbonate | 20% | 100V | E |
| C156 | 0.0016 μ F | Silvered Mica | 1% | 350V | E |
| C157 | 100pF | Tubular Ceramic | 10% | 500V | E |
| C158 | 7-35pF | Disk Ceramic Trimmer | - | - | E |
| C159 | 18-364pF | Air-spaced Variable | - | - | E |
| C160 | 20pF | Silvered Mica | 5% | 350V | E |
| C161 | 0.1 μ F | Polycarbonate | 20% | 100V | E |
| C162 | 0.1 μ F | Polycarbonate | 20% | 100V | E |
| C163 | 0.001 μ F | Silvered Mica | 5% | 350V | E |
| C164 | 0.1 μ F | Polycarbonate | 20% | 100V | E |
| C165 | 0.047 μ F | Polycarbonate | 20% | 100V | E |
| C166 | | | | | |
| -169 | - | References not allocated | - | - | - |
| C170 | 0.1 μ F | Polycarbonate | 20% | 100V | F |
| C171 | 0.0044 μ F | Polystyrene | 2% | 30V | F |
| C172 | 400pF | Silvered Mica | 5% | 350V | F |
| C173 | 350pF | Silvered Mica | 5% | 350V | F |
| C174 | 370pF | Silvered Mica | 5% | 350V | F |
| C175 | 300pF | Silvered Mica | 5% | 350V | F |
| C176 | 70pF | Tubular Ceramic | 10% | 750V | F |
| C177 | 30pF | Tubular Ceramic | 10% | 750V | F |
| C178 | 15pF | Tubular Ceramic | 10% | 750V | F |
| C179 | 0.0044 μ F | Polystyrene | 2% | 30V | F |
| | | (*) Value may be adjusted on test | | | |

| Ref | Value | Type | Tolerance | Wkg. V. | Loc |
|------|----------------|--------------------------|-----------|---------|-----|
| C180 | 300pF | Silvered Mica | 5% | 350V | F |
| C181 | 70pF | Tubular Ceramic | 10% | 750V | F |
| C182 | 250pF | Silvered Mica | 5% | 350V | F |
| C183 | 30pF | Tubular Ceramic | 10% | 750V | F |
| C184 | 350pF | Silvered Mica | 5% | 350V | F |
| C185 | 400pF | Silvered Mica | 5% | 350V | F |
| C186 | 15pF | Tubular Ceramic | 10% | 750V | F |
| C187 | 0.0044 μ F | Polystyrene | 2% | 30V | F |
| C188 | 300pF | Silvered Mica | 5% | 350V | F |
| C189 | 300pF | Silvered Mica | 5% | 350V | F |
| C190 | 70pF | Tubular Ceramic | 10% | 750V | F |
| C191 | 250pF | Silvered Mica | 5% | 350V | F |
| C192 | 20pF | Tubular Ceramic | 10% | 750V | F |
| C193 | 390pF | Silvered Mica | 5% | 350V | F |
| C194 | 400pF | Silvered Mica | 5% | 350V | F |
| C195 | 15pF | Tubular Ceramic | 10% | 750V | F |
| C196 | 0.0088 μ F | Polystyrene | 2% | 30V | F |
| C197 | 0.0088 μ F | Polystyrene | 2% | 30V | F |
| C198 | 2-11pF | Air-spaced Trimmer | - | - | F |
| C199 | 540pF | Silvered Mica | 5% | 350V | F |
| C200 | 370pF | Silvered Mica | 5% | 350V | F |
| C201 | 250pF | Silvered Mica | 5% | 350V | F |
| C202 | 300pF | Silvered Mica | 5% | 350V | F |
| C203 | 100pF | Silvered Mica | 5% | 350V | F |
| C204 | 30pF | Tubular Ceramic | 10% | 750V | F |
| C205 | 15pF | Tubular Ceramic | 10% | 750V | F |
| C206 | 0.0044 μ F | Polystyrene | 2% | 30V | F |
| C207 | 12pF | Tubular Ceramic | 10% | 750V | F |
| C208 | 250pF | Silvered Mica | 5% | 350V | F |
| C209 | 10pF | Tubular Ceramic | 10% | 750V | F |
| C210 | 350pF | Silvered Mica | 5% | 350V | F |
| C211 | 370pF | Silvered Mica | 5% | 350V | F |
| C212 | - | - | - | - | - |
| -219 | - | References not allocated | - | - | - |
| C220 | 0.001 μ F | Disk Ceramic | 20% | 500V | G |
| C221 | 0.1 μ F | Polycarbonate | 20% | 100V | G |
| C222 | 0.047 μ F | Polycarbonate | 20% | 100V | G |
| C223 | 0.1 μ F | Polycarbonate | 20% | 100V | G |
| C224 | 0.1 μ F | Polycarbonate | 20% | 100V | G |
| C225 | 0.001 μ F | Disk Ceramic | 20% | 500V | G |
| C226 | 0.047 μ F | Polycarbonate | 20% | 100V | G |
| C227 | 0.1 μ F | Polycarbonate | 20% | 100V | G |
| C228 | 0.1 μ F | Polycarbonate | 20% | 100V | G |
| C229 | 0.001 μ F | Disk Ceramic | 20% | 500V | G |
| C230 | 0.047 μ F | Polycarbonate | 20% | 100V | G |
| C231 | 0.1 μ F | Polycarbonate | 20% | 100V | G |
| C232 | 0.001 μ F | Disk Ceramic | 20% | 500V | G |
| C233 | 540pF | Silvered Mica | 5% | 350V | G |
| C234 | 0.047 μ F | Polycarbonate | 20% | 100V | G |
| C235 | 0.1 μ F | Polycarbonate | 20% | 100V | G |

| Ref | Value | Type | Tolerance | Wkg. V. | Loc |
|------|---------------|--------------------------|------------|---------|-----|
| C236 | 0.001 μ F | Disk Ceramic | 20% | 500V | G |
| C237 | 0.1 μ F | Polycarbonate | 20% | 100V | G |
| C238 | 0.1 μ F | Polycarbonate | 20% | 100V | G |
| C239 | 0.002 μ F | Silvered Mica | 5% | 350V | G |
| C240 | 0.001 μ F | Disk Ceramic | 20% | 500V | G |
| C241 | 0.001 μ F | Disk Ceramic | 20% | 500V | G |
| C242 | 100pF | Silvered Mica | 5% | 350V | G |
| C243 | 0.1 μ F | Polycarbonate | 20% | 100V | G |
| C244 | 0.001 μ F | Disk Ceramic | 20% | 500V | G |
| C245 | 0.1 μ F | Polycarbonate | 20% | 100V | G |
| C246 | 0.002 μ F | Silvered Mica | 5% | 350V | G |
| C247 | 0.001 μ F | Disk Ceramic | 20% | 500V | G |
| C248 | 10 μ F | Tubular Electrolytic | +50% -10% | 16V | G |
| C249 | 0.1 μ F | Polycarbonate | 20% | 100V | G |
| C250 | 0.1 μ F | Polycarbonate | 20% | 100V | G |
| C251 | 0.1 μ F | Polycarbonate | 20% | 100V | G |
| C252 | 0.001 μ F | Tubular Ceramic | 20% | 750V | G |
| C253 | 0.047 μ F | Polycarbonate | 20% | 100V | G |
| C254 | 0.001 μ F | Disk Ceramic | 20% | 500V | G |
| C255 | 0.1 μ F | Polycarbonate | 20% | 100V | G |
| C256 | 0.1 μ F | Polycarbonate | 20% | 100V | G |
| C257 | 0.001 μ F | Disk Ceramic | 20% | 500V | G |
| C258 | 0.002 μ F | Silvered Mica | 5% | 350V | G |
| C259 | 10 μ F | Tubular Electrolytic | +50% -10% | 16V | G |
| C260 | 0.1 μ F | Polycarbonate | 20% | 100V | G |
| C261 | - | References not allocated | - | - | - |
| -266 | - | References not allocated | - | - | - |
| C267 | 0.47 μ F | Polycarbonate | 20% | 100V | L |
| C268 | 1 μ F | Tubular Electrolytic | +100% -10% | 40V | L |
| C269 | 22 μ F | Tantalum | 20% | 16V | L |
| C270 | - | References not allocated | - | - | - |
| -279 | - | References not allocated | - | - | - |
| C280 | 30pF | Silvered Mica | 5% | 350V | H |
| C281 | 110pF | Silvered Mica | 5% | 350V | H |
| C282 | 30pF | Silvered Mica | 5% | 350V | H |
| C283 | 170pF | Silvered Mica | 5% | 350V | H |
| C284 | 17-253pF | Air-spaced Variable | - | - | H |
| C285 | 680pF | Silvered Mica | 5% | 350V | H |
| C286 | 130pF | Tubular Ceramic | 5% | 500V | H |
| C287 | 50pF | Silvered Mica | 5% | 350V | H |
| C288 | 0.1 μ F | Polycarbonate | 20% | 100V | H |
| C289 | 0.005 μ F | Metallised Paper | 20% | 250V | H |
| C290 | 0.1 μ F | Polycarbonate | 20% | 100V | H |
| C291 | 0.001 μ F | Tubular Ceramic | 20% | 750V | H |
| C292 | 0.1 μ F | Disk Ceramic | +80% -20% | 500V | H |
| C293 | 10 μ F | Tubular Electrolytic | +50% -10% | 16V | H |
| C294 | 0.1 μ F | Polycarbonate | 20% | 100V | H |
| C295 | 10 μ F | Tubular Electrolytic | +50% -10% | 16V | H |
| C296 | 0.005 μ F | Metallised Paper | 20% | 250V | H |

| Ref | Value | Type | Tolerance | Wkg. V. | Loc |
|-------|---------------|--------------------------|-----------|---------|-----|
| C297 | 0.001 μ F | Disk Ceramic | 20% | 500V | H |
| C298 | 0.001 μ F | Disk Ceramic | 20% | 500V | H |
| C299 | 80 μ F | Tubular Electrolytic | +50% -10% | 25V | H |
| C300 | 0.1 μ F | Polycarbonate | 20% | 100V | I |
| C300A | 10 μ F | Tantalum | 20% | 25V | I |
| C301 | 10 μ F | Tantalum | 20% | 25V | I |
| C302 | 10 μ F | Tantalum | 20% | 25V | I |
| C303 | 0.1 μ F | Polycarbonate | 20% | 100V | I |
| C304 | 10 μ F | Tantalum | 20% | 25V | I |
| C305 | 80 μ F | Tubular Electrolytic | +50% -10% | 25V | I |
| C305A | 10 μ F | Tantalum | 20% | 25V | I |
| C306 | 10 μ F | Tantalum | 20% | 25V | I |
| C307 | 0.047 μ F | Polycarbonate | 20% | 100V | I |
| C308 | 0.047 μ F | Polycarbonate | 20% | 100V | I |
| C309 | 0.1 μ F | Polycarbonate | 20% | 100V | I |
| C310 | 0.1 μ F | Polycarbonate | 20% | 100V | J |
| C311 | 80 μ F | Tubular Electrolytic | +50% -10% | 25V | J |
| C312 | 0.01 μ F | Polycarbonate | 20% | 100V | J |
| C313 | 10 μ F | Tubular Electrolytic | +50% -10% | 16V | J |
| C314 | 0.005% | Metallised Paper | 20% | 250V | J |
| C315 | 80 μ F | Tubular Electrolytic | +50% -10% | 25V | J |
| C316 | 0.047 μ F | Polycarbonate | 20% | 100V | J |
| C317 | 80 μ F | Tubular Electrolytic | +50% -10% | 25V | J |
| *C318 | 500 μ F | Tubular Electrolytic | +50% -10% | 12V | J |
| C319 | 80 μ F | Tubular Electrolytic | +50% -10% | 25V | J |
| C320 | 0.01 μ F | Polycarbonate | 20% | 100V | J |
| C321 | 25 μ F | Tubular Electrolytic | +50% -10% | 25V | J |
| C322 | 0.1 μ F | Polycarbonate | 20% | 100V | J |
| C323 | 0.005 μ F | Metallised Paper | 20% | 250V | J |
| C324 | 0.1 μ F | Polycarbonate | 20% | 100V | J |
| C325 | 80 μ F | Tubular Electrolytic | +50% -10% | 25V | J |
| C326 | - | Reference not allocated | - | - | - |
| C327 | 400 μ F | Tubular Electrolytic | +50% -10% | 16V | K |
| C328 | 6400 μ F | Tubular Electrolytic | +50% -10% | 16V | K |
| C329 | 6400 μ F | Tubular Electrolytic | +50% -10% | 16V | K |
| C330 | 0.005 μ F | Disk Ceramic | +80% -20% | 3000V | K |
| C331 | 0.05 μ F | Metallised Paper | 20% | 400V | M |
| C332 | 0.05 μ F | Metallised Paper | 20% | 400V | M |
| C333 | 1 μ F | Polycarbonate | 20% | 400V | M |
| C334 | - | - | - | - | - |
| -339 | - | References not allocated | - | - | - |
| †C340 | 0.1 μ F | Disk Ceramic | +80% -20% | 500V | L |

(*) May be 470 μ F.

(†) Fitted on 1830/2
only.

Resistors

| Ref | Value | Tol | Rtg | Loc | Ref | Value | Tol | Rtg | Loc |
|-------|---------------|-----|-------|-----|------|---------------|-----|------|-----|
| R1 | 56,000Ω | 5% | 0.1W | A | R54 | 470Ω | 5% | 0.1W | D |
| R2 | 47,000Ω | 5% | 0.1W | A | R54A | 680Ω | 5% | 0.1W | D |
| R3 | 390Ω | 5% | 0.1W | A | R55 | 470Ω | 5% | 0.1W | D |
| R4 | 3,900Ω | 5% | 0.1W | A | R56 | 560Ω | 5% | 0.1W | D |
| R5-R9 | Not allocated | - | - | - | R57 | 0.1MΩ | 5% | 0.1W | D |
| R10 | 1.8MΩ | 10% | 0.05W | B | R58 | 22Ω | 5% | 0.1W | D |
| R11 | 1.8MΩ | 10% | 0.05W | B | R59 | 330Ω | 5% | 0.1W | D |
| R12 | 1.8MΩ | 10% | 0.05W | B | R60 | 0.22MΩ | 5% | 0.1W | D |
| R13 | 47,000Ω | 5% | 0.1W | B | R61 | 270Ω | 5% | 0.1W | D |
| R14 | 47,000Ω | 5% | 0.1W | B | R62 | 820Ω | 5% | 0.1W | D |
| R15 | 47,000Ω | 5% | 0.1W | B | R63 | 100Ω | 5% | 0.1W | D |
| R16 | | | | | R64 | | | | |
| -18 | Not allocated | - | - | - | -69 | Not allocated | - | - | - |
| R19 | 1,800Ω | 5% | 0.1W | L | R70 | 220Ω | 5% | 0.1W | E |
| R20 | 47,000Ω | 5% | 0.1W | C | R71 | 0.47MΩ | 5% | 0.1W | E |
| R21 | 0.27MΩ | 5% | 0.1W | C | R72 | 2,200Ω | 5% | 0.1W | E |
| R22 | 150Ω | 5% | 0.1W | C | R73 | 0.68MΩ | 5% | 0.1W | E |
| R23 | 4,700Ω | 5% | 0.1W | C | R74 | 47,000Ω | 5% | 0.1W | E |
| R24 | 1,000Ω | 5% | 0.1W | C | R75 | 470Ω | 5% | 0.1W | E |
| R25 | 1,000Ω | 5% | 0.1W | C | R76 | 0.47MΩ | 5% | 0.1W | E |
| R26 | Not allocated | - | - | - | R77 | 180Ω | 5% | 0.1W | E |
| R27 | 100Ω | 5% | 0.1W | C | R78 | 680Ω | 5% | 0.1W | E |
| R28 | Not allocated | - | - | - | R79 | 150Ω | 5% | 0.1W | E |
| R29 | Not allocated | - | - | - | R80 | 22,000Ω | 5% | 0.1W | E |
| R30 | 1.8MΩ | 10% | 0.05W | D | R81 | 47,000Ω | 5% | 0.1W | E |
| R31 | 270Ω | 5% | 0.1W | D | R82 | 470Ω | 5% | 0.1W | E |
| R32 | 1MΩ | 5% | 0.1W | D | R83 | 68Ω | 5% | 0.1W | E |
| R33 | 0.1MΩ | 5% | 0.1W | D | R84 | | | | |
| R34 | 22Ω | 5% | 0.1W | D | -89 | Not allocated | - | - | - |
| R35 | 180Ω | 5% | 0.1W | D | R90 | 220Ω | 5% | 0.1W | F |
| R36 | 2,700Ω | 5% | 0.1W | D | R91 | 22,000Ω | 5% | 0.1W | F |
| R37 | 2,700Ω | 5% | 0.1W | D | R92 | 82,000Ω | 5% | 0.1W | F |
| R38 | 2,200Ω | 5% | 0.1W | D | R93 | 10,000Ω | 5% | 0.1W | F |
| R39 | 2,200Ω | 5% | 0.1W | D | R94 | 82,000Ω | 5% | 0.1W | F |
| R40 | 2,200Ω | 5% | 0.1W | D | R95 | 10,000Ω | 5% | 0.1W | F |
| R41 | 2,200Ω | 5% | 0.1W | D | R96 | 82,000Ω | 5% | 0.1W | F |
| R42 | 0.1MΩ | 5% | 0.1W | D | R97 | 22,000Ω | 5% | 0.1W | F |
| R43 | 0.1MΩ | 5% | 0.1W | D | R98 | 10,000Ω | 5% | 0.1W | F |
| R44 | 0.1MΩ | 5% | 0.1W | D | R99 | 82,000Ω | 5% | 0.1W | F |
| R45 | Not allocated | - | - | - | R100 | | | | |
| R46 | 0.1MΩ | 5% | 0.1W | D | -109 | Not allocated | - | - | - |
| R47 | 1MΩ | 5% | 0.1W | D | R110 | 0.27MΩ | 5% | 0.1W | G |
| R48 | 33,000Ω | 5% | 0.1W | D | R111 | 1,000Ω | 5% | 0.1W | G |
| R49 | 270Ω | 5% | 0.1W | D | R112 | 5,600Ω | 5% | 0.1W | G |
| R50 | 4,700Ω | 5% | 0.1W | D | R113 | 330Ω | 5% | 0.1W | G |
| R51 | 0.47MΩ | 5% | 0.1W | D | R114 | 0.27MΩ | 5% | 0.1W | G |
| R52 | 22Ω | 5% | 0.1W | D | R115 | 1,000Ω | 5% | 0.1W | G |
| R53 | 220Ω | 5% | 0.1W | D | | | | | |

| Ref | Value | Tol | Rtg | Loc | Ref | Value | Tol | Rtg | Loc |
|-------|---------------|-----|------|-----|-------|---------------|-----|------|-----|
| R116 | 1,200Ω | 5% | 0.1W | G | R175 | 4,700Ω | 5% | 0.1W | H |
| R117 | 330Ω | 5% | 0.1W | G | R176 | 1,000Ω | 5% | 0.1W | H |
| R118 | 0.27MΩ | 5% | 0.1W | G | R177 | 2,700Ω | 5% | 0.1W | H |
| R119 | 1,000Ω | 5% | 0.1W | G | R178 | 100Ω | 5% | 0.1W | H |
| R120 | 5,600Ω | 5% | 0.1W | G | R179 | 33,000Ω | 5% | 0.1W | H |
| R121 | 330Ω | 5% | 0.1W | G | R180 | | | | |
| R122 | 0.1MΩ | 5% | 0.1W | G | -189 | Not allocated | - | - | - |
| R123 | 1,000Ω | 5% | 0.1W | G | R190 | 0.33MΩ | 5% | 0.1W | I |
| R124 | 8,200Ω | 5% | 0.1W | G | R191 | 0.22MΩ | 5% | 0.1W | I |
| R125 | 330Ω | 5% | 0.1W | G | R191A | 0.1MΩ | 5% | 0.1W | I |
| R126 | 47,000Ω | 5% | 0.1W | G | R192 | 0.27MΩ | 5% | 0.1W | I |
| R127 | 22,000Ω | 5% | 0.1W | G | R193 | 3,900Ω | 5% | 0.1W | I |
| R128 | 100Ω | 5% | 0.1W | G | R194 | 1,500Ω | 5% | 0.1W | I |
| R129 | 22,000Ω | 5% | 0.1W | G | R195 | 1,000Ω | 5% | 0.1W | I |
| R130 | 33,000Ω | 5% | 0.1W | G | R196 | 1,000Ω | 5% | 0.1W | I |
| R131 | 47Ω | 5% | 0.1W | G | R197 | 2,700Ω | 5% | 0.1W | I |
| R132 | 270Ω | 5% | 0.1W | G | R198 | 12,000Ω | 5% | 0.1W | I |
| R133 | 0.47MΩ | 5% | 0.1W | G | R199 | 2,700Ω | 5% | 0.1W | I |
| R134 | 1,000Ω | 5% | 0.1W | G | R200 | 2,700Ω | 5% | 0.1W | I |
| R135 | 22,000Ω | 5% | 0.1W | G | R201 | 0.15MΩ | 5% | 0.1W | I |
| R136 | 47,000Ω | 5% | 0.1W | G | R202 | 47,000Ω | 5% | 0.1W | I |
| R137 | 100Ω | 5% | 0.1W | G | R203 | Not allocated | - | - | - |
| R138 | 0.27MΩ | 5% | 0.1W | G | R204 | 68,000Ω | 5% | 0.1W | I |
| R139 | 10,000Ω | 5% | 0.1W | G | R205 | 12,000Ω | 5% | 0.1W | I |
| R140 | 2,200Ω | 5% | 0.1W | G | R206 | 220Ω | 5% | 0.1W | I |
| R141 | 47,000Ω | 5% | 0.1W | G | R207 | 220Ω | 5% | 0.1W | I |
| R142 | 0.27MΩ | 5% | 0.1W | G | R208 | 1,500Ω | 5% | 0.1W | I |
| R143 | 1,000Ω | 5% | 0.1W | G | R209 | 560Ω | 5% | 0.1W | I |
| R144 | 1,500Ω | 5% | 0.1W | G | R210 | 15,000Ω | 5% | 0.1W | I |
| R145 | 47,000Ω | 5% | 0.1W | G | R211 | 2.2MΩ | 5% | 0.1W | I |
| R146 | 22,000Ω | 5% | 0.1W | G | R212 | 1MΩ | 5% | 0.1W | I |
| R147 | 100Ω | 5% | 0.1W | G | R213 | 1,000Ω | 5% | 0.1W | I |
| R148 | 150Ω | 5% | 0.1W | G | R214 | 1,000Ω | 5% | 0.1W | I |
| R149 | 330Ω | 5% | 0.1W | G | R215 | 1,800Ω | 5% | 0.1W | I |
| R150 | 10,000Ω | 5% | 0.1W | G | R216 | Not allocated | - | - | - |
| R151 | 3,300Ω | 5% | 0.1W | G | R217 | Not allocated | - | - | - |
| R152 | 0.27MΩ | 5% | 0.1W | G | R218 | 390Ω | 5% | 0.1W | M |
| R153 | 22,000Ω | 5% | 0.1W | G | R219 | 4,700Ω | 5% | 0.1W | M |
| R154 | 10,000Ω | 5% | 0.1W | G | R220 | 33,000Ω | 5% | 0.1W | J |
| R155 | | | | | R221 | 27,000Ω | 5% | 0.1W | J |
| -158 | Not allocated | - | - | - | R222 | 0.1MΩ | 5% | 0.1W | J |
| *R159 | 0.18MΩ | 5% | 0.1W | L | R223 | 18Ω | 5% | 0.1W | J |
| R160 | | | | | R224 | 2,200Ω | 5% | 0.1W | J |
| -169 | Not allocated | - | - | - | R225 | 680Ω | 5% | 0.1W | J |
| R170 | 0.27MΩ | 5% | 0.1W | H | R226 | 39Ω | 5% | 0.1W | J |
| R171 | 680Ω | 5% | 0.1W | H | R227 | 82Ω | 5% | 0.1W | J |
| R172 | 22,000Ω | 5% | 0.1W | H | R228 | 22Ω | 5% | 0.1W | J |
| R173 | 2,200Ω | 5% | 0.1W | H | R229 | 1Ω w.w. | 5% | 6W | J |
| R174 | 1,000Ω | 5% | 0.1W | H | | | | | |

(*) May be adjusted on test.

Resistors (contd.)

| Ref | Value | Tol | Rtg | Loc |
|-------|--------------------------------------|-----|------|-----|
| R230 | 1 Ω w.w. | 5% | 6W | J |
| R231 | 220 Ω | 5% | 0.1W | J |
| R232 | 12 Ω | 5% | 0.1W | J |
| R233 | 1M Ω | 5% | 0.1W | J |
| R234 | 0.1M Ω | 5% | 0.1W | J |
| R235 | 82,000 Ω | 5% | 0.1W | J |
| R236 | 39 Ω | 5% | 0.1W | J |
| R237 | 10,000 Ω | 5% | 0.1W | J |
| R238 | 10,000 Ω | 5% | 0.1W | J |
| R239 | 150 Ω | 5% | 0.1W | J |
| R240 | 47,000 Ω | 5% | 0.1W | J |
| R241 | 8,200 Ω | 5% | 0.1W | J |
| R242 | 150 Ω | 5% | 0.1W | J |
| R243 | 47 Ω | 5% | 0.1W | J |
| R244 | | | | |
| -246 | Not allocated | - | - | - |
| *R247 | 10 Ω w.w. | 5% | 20W | N |
| R248 | 33 Ω | 5% | 0.1W | K |
| R249 | 3.3 Ω w.w. | 5% | 2.5W | K |
| | (*) Not fitted on Ser. Nos 0001-0050 | | | |

Potentiometers

| Ref | Value | Type | Loc |
|-----|--|----------------|-----|
| RV1 | 20,000 Ω lin. | Carbon | L |
| RV2 | 50,000 Ω inv log | Carbon | L |
| RV3 | 3,300 Ω lin. | Carbon pre-set | M |
| RV4 | 0.47M Ω lin. | Carbon pre-set | M |
| RV5 | 50,000 Ω log. | Carbon | L |
| RV6 | 250 Ω lin. | Carbon pre-set | J |
| | NB: RV2/RV5 are combined in dual-gang assembly with concentric spindles. | | |

Thermistors

| Ref | Type | Mfr. | Loc |
|-----|--------|---------|-----|
| TH1 | VA1097 | Mullard | J |

A P P E N D I X ' D 'LIST OF SPARES FOR 1830 SERIES RECEIVERS

The following list details all major spares for 1830 Series Receivers. Spares should be ordered by quoting the Circuit Ref. (where applicable), the written description given in the list and the Part No. in the right-hand column. All orders and enquiries should be directed to the address below, quoting the Serial No. of the receiver in all communications.

EDDYSTONE RADIO LIMITED,
SALES & SERVICE DEPT.,
ALVECHURCH ROAD,
BIRMINGHAM B31 3PP, ENGLAND.

Telephone : 021-475 2231
Telex : 337081
Cables : EDDYSTONE, Birmingham

| Ref | Description | Part No. |
|-----|---|-----------|
| | <u>UNITS</u> (COMPLETE) | |
| | Calibrator/Relay Unit | LP3300 |
| | Crystal Box (less crystals) 1830/1 & 1830/3: | LP3299 |
| | 1830/2: | LP3299/1 |
| | RF Assembly (less gangs) 1830/1 & 1830/2: | D4544 |
| | 1830/3: | D4545 |
| | Tunable IF Unit | LP3296 |
| | 100kHz IF Filter Unit | LP3298 |
| | CW/SSB Detector & BFO Unit | LP3297 |
| | Power Unit Chassis | D4546 |
| | <u>PRINTED CIRCUIT BOARDS</u> (EX-UNITS ABOVE) | |
| | Calibrator/Relay Board | LP3293/1 |
| | Crystal Mounting/Switching Boards (complete assembly) | LP3293/13 |
| | *RF Amplifier Board (complete with coils switches etc.) | LP3293/4 |
| | *Mixer Board (complete with coils, switches etc.) | LP3293/5 |
| | *Oscillator Board (complete with coils, switches etc.) | LP3293/6 |
| | (*) Part Nos for 1830/3 = RF : LP3293/14, Mixer : LP3293/15 and Oscillator : LP3293/16. | |
| | Tunable IF Board | LP3293/7 |
| | 100kHz IF Filter Board | LP3293/8 |
| | CW/SSB Detector & BFO Board | LP3293/11 |
| | <u>PRINTED CIRCUIT BOARDS</u> (OTHERS) | |
| | Peak-RF Board | LP3293/2 |
| | *Crystal Oscillator Board | LP3293/3 |
| | 100kHz IF Amplifier Board | LP3293/9 |
| | N/L, Meter & Neg. Supply Board | LP3293/10 |
| | Audio Amplifier Board (less o/p transistors and heat sink) | LP3293/12 |
| | (*) Part No. for 1830/2 = LP3293/17 | |

| Ref | Description | Part No. |
|-------|--|------------------------------------|
| | <u>SWITCHES, SWITCH WAFERS & ASSOCIATED ITEMS</u> | |
| S1 | RANGE SWITCH :: Wafers S1A, S1B, S1C, S1D, S1E, S1H and S1I (1P-10W with shorting plate) Wafers S1F & G (1P-10W no shorting plate) Clicker Mechanism (with gear/bracket) Insulated Coupler | 6302/1P 7014P D4510 6863P |
| S2 | CALIBRATOR SWITCH :: Miniature DPDT Toggle | 7352P |
| S3 | OSCILLATOR SYSTEM SWITCH (CRYSTAL SELECTOR) :: Wafer S3A (1P-12W without shorting plate) Wafers S3B & C (1P-10W with shorting plate) Clicker Mechanism | 8388P 8308P 8385P |
| S4 | SELECTIVITY SWITCH :: Wafers S4A, S4B/C, S4G/H (2P-5W) Wafer S4D/E/F (3P-4W) Clicker Mechanism Insulated Coupler | 7285PA 8359P 8360P 7353P |
| S5 | MODE SWITCH :: Wafer S5A/B/C (3P-4W) Clicker Mechanism | 8359P 8360P |
| S6 | MANUAL/AGC SWITCH :: Miniature SPDT Toggle | 6760P |
| S7 | AGC TIME CONSTANT SWITCH :: Miniature DPDT Toggle | 7352P |
| S8 | NOISE LIMITER SWITCH :: Miniature SPDT Toggle | 6760P |
| S9 | INTERNAL SPEAKER SWITCH :: Miniature SPDT Toggle | 6760P |
| S10 | SUPPLY SWITCH :: Miniature DPDT Toggle | 7352P |
| *S11 | OSCILLATOR SYSTEM SWITCH :: Wafer S11A (1P-7W no plate) Wafer S11B (1P-7W with plate) (*) 1830/2 only. Clicker Mechanism | 6303P 6302P 8461P |
| | <u>POTENTIOMETERS</u> | |
| RV1 | PEAK-RF CONTROL :: 20,000 Ω lin. carbon | 8358P |
| RV2/5 | IF/AF GAINS :: 50,000 Ω inv. log./50,000 Ω log. carbon with concentric spindles | 8354P |
| RV3 | METER ZERO CONTROL :: 3,300 Ω lin. carbon pre-set | 7850P |
| RV4 | LINE LEVEL CONTROL :: 0.47M Ω lin. carbon pre-set | 6077P |
| RV5 | See RV2 | |
| RV6 | TR30/TR31 Ic ADJUSTER :: 250 Ω lin. carbon pre-set | 8462P |

| Ref | Description | Part No. |
|--|--|----------|
| <u>VARIABLE CAPACITORS & TRIMMERS ETC.</u> | | |
| C30 | Main Tuning Gang - Aerial Section : 1 x 12-358pF | D4507 |
| C62/C94/ C130 | RF, Mixer and Osc. Sections : 2 x 12-358pF + 1 x 18-364pF | 7357PD |
| C148/C149/ C159 | Incremental Tuning Gang : 2 x 12-358pF + 1 x 18-364pF | 7357PD |
| C198 | Crystal Phasing Trimmer : 2-11pF (air-spaced) | 8467P |
| C284 | BFO Pitch : 2 x 8.5-126.5pF | 6761P |
| - | Disk Ceramic Trimmer (as used in RF Assy. etc) : 7-35pF | 8468P |
| - | Flexible Coupler (as used on tuning gangs) | LP2428 |
| - | Reduction Drive (as used on BFO Pitch) | 8466P |
| <u>PLUGS AND SOCKETS</u> | | |
| PL1 | Aerial Input plug (BNC bayonet-lock coaxial) | 6084P |
| PL2 | Crystal Oscillator Box plug (6-way moulded) | 6081P |
| PL3 | Synthesizer Input plug (BNC bayonet-lock coaxial) | 6084P |
| PL4 | IF Output plug (BNC bayonet-lock coaxial) | 6084P |
| PL5 | DC Supply Connector (fixed male : 3-pole polarised) | 7130P |
| PL6 | AC Supply Connector (fixed male : 2-pole with earthing) | D2310/1 |
| PL7 | Ancillaries Connector (free male : 12-way with cover) | 8037P |
| SK1 | Aerial Input socket (BNC) | 7225P |
| SK2 | Crystal Oscillator Unit socket (6-way moulded) | 6082P |
| SK3 | Synthesizer Input socket (BNC) | 7225P |
| SK4 | IF Output socket (BNC) | 7225P |
| SK5 | DC Supply Connector (with 2000mm twin lead for battery) | D3641 |
| SK6 | AC Supply Connector (with 2000mm 3-core lead) | D2311/1 |
| SK7 | Ancillaries Connector (fixed female : 12-way) | 8036P |
| JK1 | Telephone socket (with auxiliary switching contact) | 8463P |
| - | Telephone plug | 6567P |
| <u>CRYSTALS</u> | | |
| XL1 | Calibrator. 100kHz \pm 0.005% at 25°C, 30pF (GEC QC1023) | 8464P |
| XL2 | Filter. 100kHz \pm 0.005% series resonant (GEC QC855) | 8465P |

| Ref | Description | Part No. |
|-----|---|----------|
| | <u>INDUCTORS</u> | |
| L1 | Crystal Calibrator coil | D4479 |
| L2 | Range 1 RF Bandpass coil | D4452 |
| L3 | Range 2 RF Bandpass coil | D4453 |
| L4 | Range 3 RF Bandpass coil | D4454 |
| L5 | Range 4 RF Bandpass coil | D4455 |
| L6 | Range 5 RF Bandpass coil | D4456 |
| L7 | Range 6 RF Bandpass coil | D4457 |
| L8 | Range 7 RF coil (1830/1 & 1830/2) | D4458 |
| L8 | Range 7 RF coil (1830/3) | D4519 |
| L9 | Range 8 RF coil (1830/1 & 1830/2) | D4459 |
| L9 | Range 8 RF coil (1830/3) | D4522 |
| L10 | Range 9 RF coil | D4460 |
| L11 | IF Rejector coil (100kHz) | D4528 |
| L12 | Range 1 Mixer coil | D4461 |
| L13 | Range 2 Mixer coil | D4462 |
| L14 | Range 3 Mixer coil | D4463 |
| L15 | Range 4 Mixer coil | D4464 |
| L16 | Range 5 Mixer coil | D4465 |
| L17 | Range 6 Mixer coil | D4466 |
| L18 | Range 7 Mixer coil (1830/1 & 1830/2) | D4467 |
| L18 | Range 7 Mixer coil (1830/3) | D4520 |
| L19 | Range 8 Mixer coil (1830/1 & 1830/2) | D4468 |
| L19 | Range 8 Mixer coil (1830/3) | D4523 |
| L20 | Range 9 Mixer coil | D4469 |
| L21 | Range 1 Oscillator coil | D4470 |
| L22 | Range 2 Oscillator coil | D4471 |
| L23 | Range 3 Oscillator coil | D4472 |
| L24 | Range 4 Oscillator coil | D4473 |
| L25 | Range 5 Oscillator coil | D4474 |
| L26 | Range 6 Oscillator coil | D4475 |
| L27 | Range 7 Oscillator coil (1830/1 & 1830/2) | D4476 |
| L27 | Range 7 Oscillator coil (1830/3) | D4521 |
| L28 | Range 8 Oscillator coil (1830/1 & 1830/2) | D4477 |
| L28 | Range 8 Oscillator coil (1830/3) | D4524 |
| L29 | Range 9 Oscillator coil | D4478 |
| L30 | Tunable IF Rejector coil (No. 1) | D3883 |
| L31 | Tunable IF Rejector coil (No. 2) | D3883 |
| L32 | Tunable IF coil (primary) | D4481 |
| L33 | Tunable IF coil (secondary) | D4481 |
| L34 | Incremental Oscillator coil | D4480 |
| L35 | 100kHz IF Filter coil No. 1 | D3840 |
| L36 | 100kHz IF Filter coil No. 2 | D3841 |
| L37 | 100kHz IF Filter coil No. 3 | D3841 |
| L38 | 100kHz IF Filter coil No. 4 | D3841 |
| L39 | 100kHz IF Filter coil No. 5 | D3841 |
| L40 | AM Detector coil | D3871 |
| L41 | RF AGC coil | D3869 |
| L42 | IF AGC coil | D3870 |
| L43 | BFO coil | D3853 |


| Ref | Description | Part No. | |
|---------------------|---|--------------------------|---------|
| <u>CHOKES</u> | | | |
| CH1 | 100mH RF Choke | Calibrator/Relay Unit | 7760P |
| CH2 | 100mH RF Choke | RF Assembly | 7760P |
| CH3 | 4.7mH RF Choke | RF Assembly | 7472P |
| CH4 | 68mH RF Choke | 100kHz IF Amplifier | 7759P |
| CH5 | 68mH RF Choke | 100kHz IF Amplifier | 7759P |
| CH6 | 68mH RF Choke | 100kHz IF Amplifier | 7759P |
| CH7 | 68mH RF Choke | 100kHz IF Amplifier | 7759P |
| CH8 | 100mH RF Choke | 100kHz IF Amplifier | 7760P |
| CH9 | 100mH RF Choke | 100kHz IF Amplifier | 7760P |
| CH10 | 4.7mH RF Choke | 100kHz IF Amplifier | 7472P |
| CH11 | 68mH RF Choke | 100kHz IF Amplifier | 7759P |
| CH12 | 1mH RF Choke | 100kHz IF Amplifier | 7754P |
| CH13 | 100mH RF Choke | 100kHz IF Amplifier | 7760P |
| CH14 | 1mH RF Choke | CW/SSB Detector & BFO | 7754P |
| CH15 | 68mH RF Choke | CW/SSB Detector & BFO | 7759P |
| CH16 | 100mH RF Choke | CW/SSB Detector & BFO | 7760P |
| CH17 | 100mH RF Choke | N/L, Meter & Neg. Supply | 7760P |
| CH18 | 500mH Choke | N/L, Meter & Neg. Supply | 8428P |
| CH19 | 500mH Choke | N/L, Meter & Neg. Supply | 8428P |
| CH20 | 3μH RF Choke | Power Unit | D2854 |
| CH21 | 3μH RF Choke | Power Unit | D2854 |
| <u>TRANSFORMERS</u> | | | |
| T1 | Line Output Transformer (centre-tapped with shielded secondary) | | 7524P |
| T2 | Headset Isolating/Matching Transformer | | 7141P |
| T3 | Power Transformer | | 7022P |
| <u>KNOBS</u> | | | |
| | Main Tuning Control | | D3613/3 |
| | Incremental Tuning Control | | D3613/3 |
| | Skirt for Main and Incremental Controls | | 7089/1P |
| | Range Switch | | D4529 |
| | Mode Switch | | D3614* |
| | Peak-RF Control | (* add suffix " /BLACK " | D3614* |
| | Selectivity Switch | | D3614* |
| | IF Gain | | D3724* |
| | AF Gain | | D3723* |
| | BFO Pitch Control | | D3957* |
| | Skirt for BFO Pitch Control | | D3958 |
| | Crystal Selector Switch | | D3617/4 |
| | Cal. Adj. | | D4451 |






| Ref | Description | Part No. |
|-----|---|----------|
| | <u>DRIVE MECHANISM & ASSOCIATED ITEMS</u> | |
| | Main Tuning Drive Assembly (less flywheel) | LP3294 |
| | Incremental Tuning Drive Assembly (less flywheel) | LP3295 |
| | Flywheel (complete with grub screws) | 8469P |
| | Drive Cord (Main Tuning Cursor) | 8446P |
| | Drive Cord (Incremental Tuning Cursor) | 8447P |
| | Drive Cord Drum (Main and Incremental) | 8284P |
| | Guide Pulleys | 6125P |
| | Main Tuning Cursor | 8244PA |
| | Incremental Tuning Cursor | 8242PA |
| | Reduction Drive for BFO Pitch | 8466P |
| | <u>MISCELLANEOUS</u> | |
| | Panel Handles | 8253P |
| | Fuses (1 Amp) | 7173P |
| | Fuses (2 Amps) | 6704P |
| | Fuseholder | 6372P |
| | Dial Bulbs (12V, 0.08A, 5mm wire-ended) | 8448P |
| | Loudspeaker | 6101P |
| | Panel Fixing Screws | 40A-330 |
| | Washers for 40A-330 | 27E-57 |
| | Cabinet | 8256P |
| | Cabinet Mounting Feet | 7132P |
| | Meter | 8470P |
| | Muting Relay (RLA) | 8471P |
| | Synth. Relay (RLB) | 8472P |
| | Trimming Tools: | 8363P |
| | Eddystone | 8450P |
| | Neosid H.S.1. | 8451P |
| | T.T.1. | |
| | <u>ADDITIONAL ITEMS</u> | |

A P P E N D I X ' E '

PRINTED CIRCUIT BOARD PATTERNS AND LEGENDS

 
NOT AVAILABLE AT TIME OF PRINTING











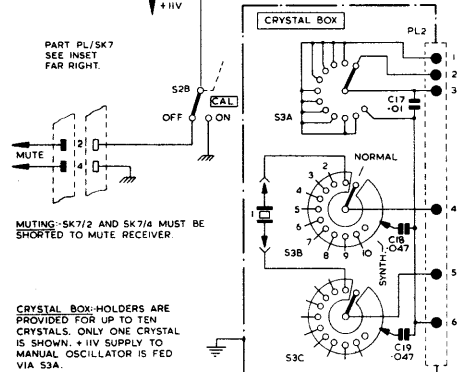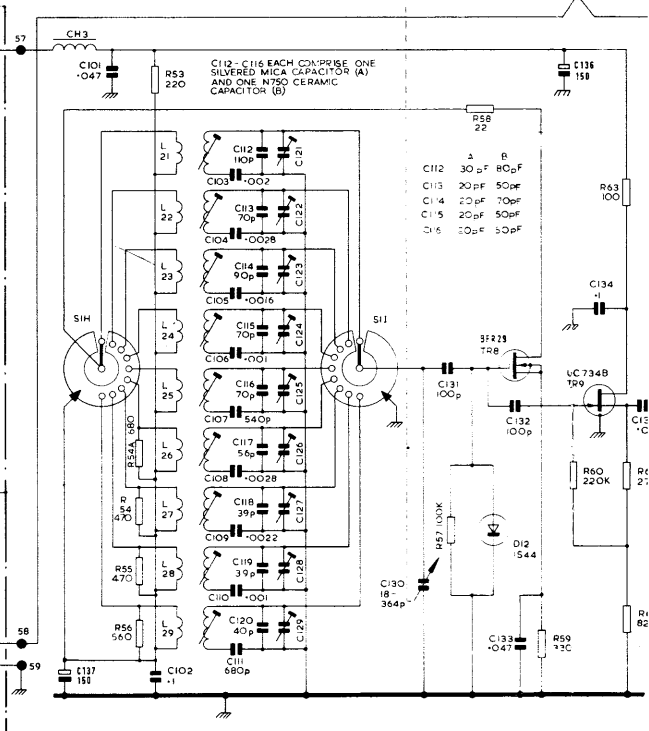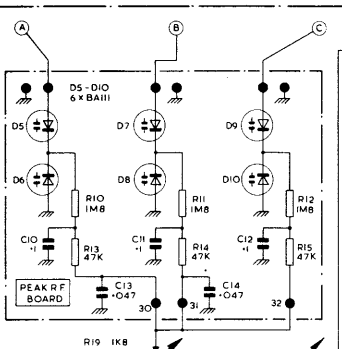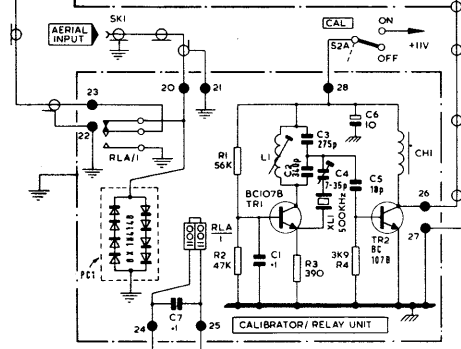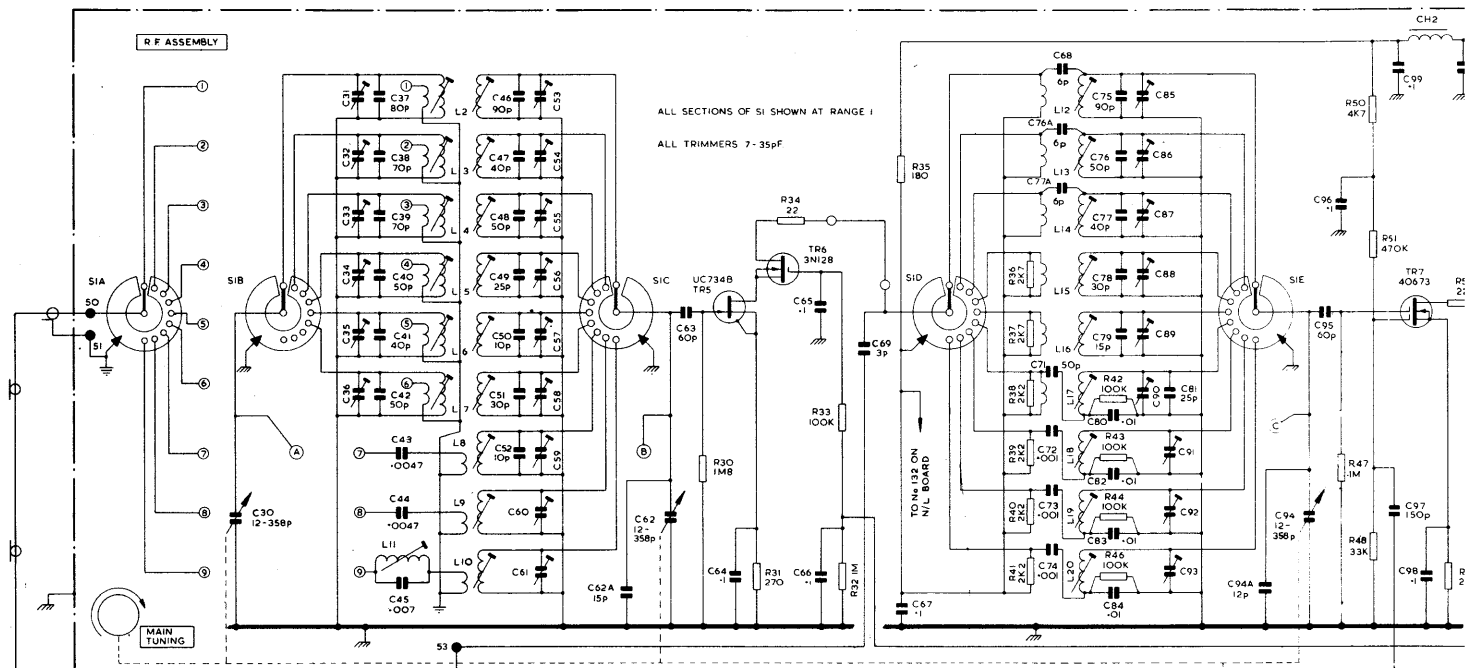


EARTHING - THE TWO EARTH SYMBOLS USED ON THIS DIAGRAM INDICATE ① FRAME EARTH AND ② CIRCUIT EARTH

| CIRCUIT MODIFICATION RECORD | | |
|--|------------------------|--|
| ADDITIONS | CHANGE OF VALUE | DELETIONS |
| C8 :: 0.001μF FROM CIRCUIT EARTH TO FRAME IN CALIB/RELAY UNIT. | C4 :: 6-30pF | C52 (NOT FITTED ON 1830/1, 1830/2 OR 1830/5) |
| C244A & C254A :: 15pF FROM DRAIN TO SOURCE OF TR18 & TR20. | C5 :: 33pF | |
| R158 :: 1MΩ (NOMINAL) FROM PIN NO. 99 OF 100kHz IF AMPLIFIER BOARD TO +11V SUPPLY. MAY BE OMITTED ON SOME RECEIVERS. | C37 :: 120pF | |
| R244 :: 27KΩ IN SERIES WITH CONNECTION FROM C310 TO PIN NO. 151 (AUDIO AMPLIFIER BOARD). | C39 :: 60pF | |
| | C46 :: 110pF | |
| | C48 :: 80pF | |
| | C76 :: 40pF | |
| | C103 :: 0.0022μF | |
| | C157 :: 90pF | |
| | R75 :: 220Ω | |
| | R134 :: 330Ω | |
| | R215 :: 3,300Ω | |

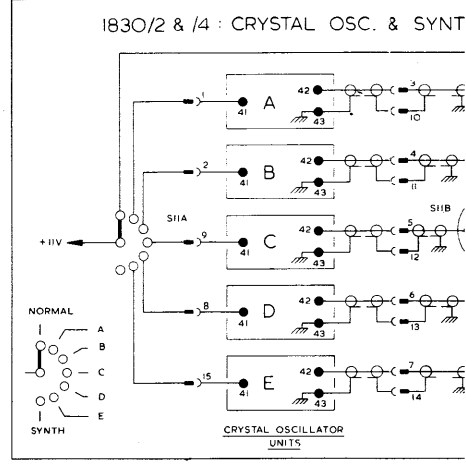

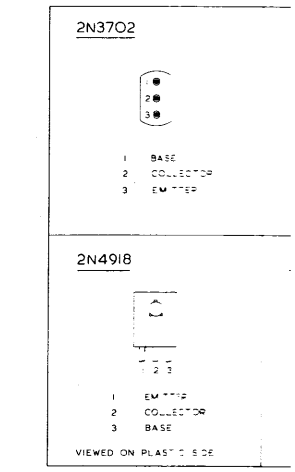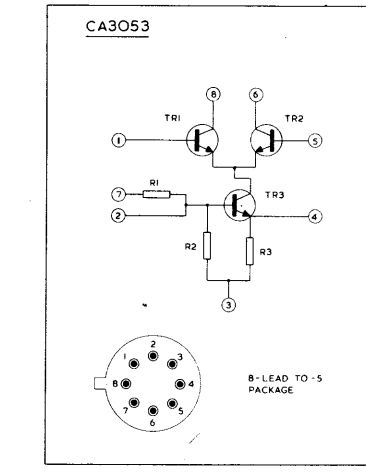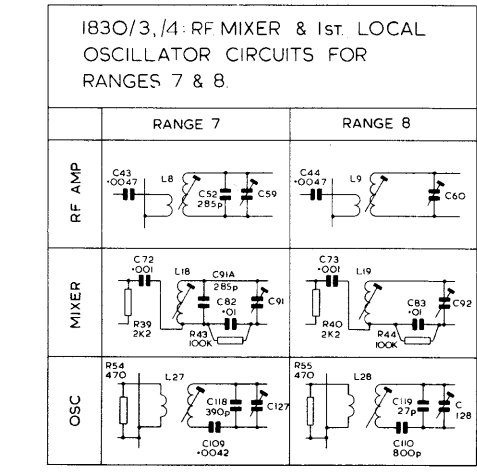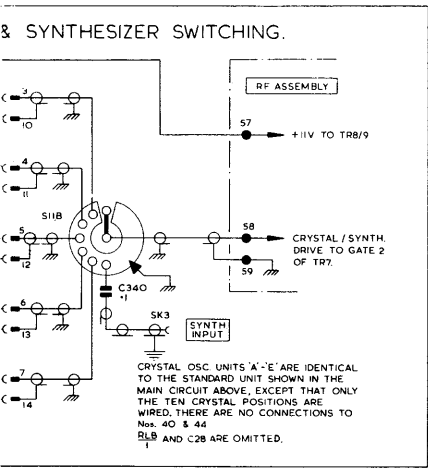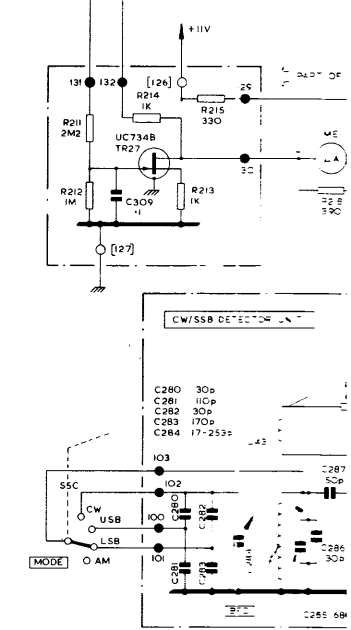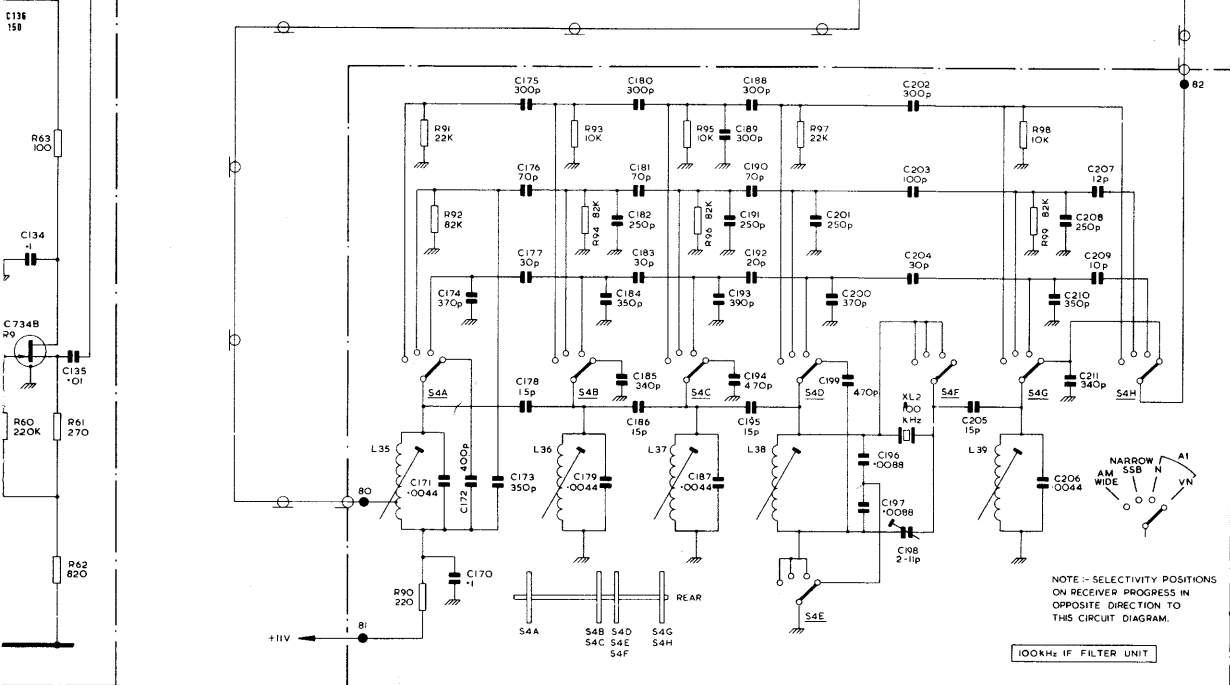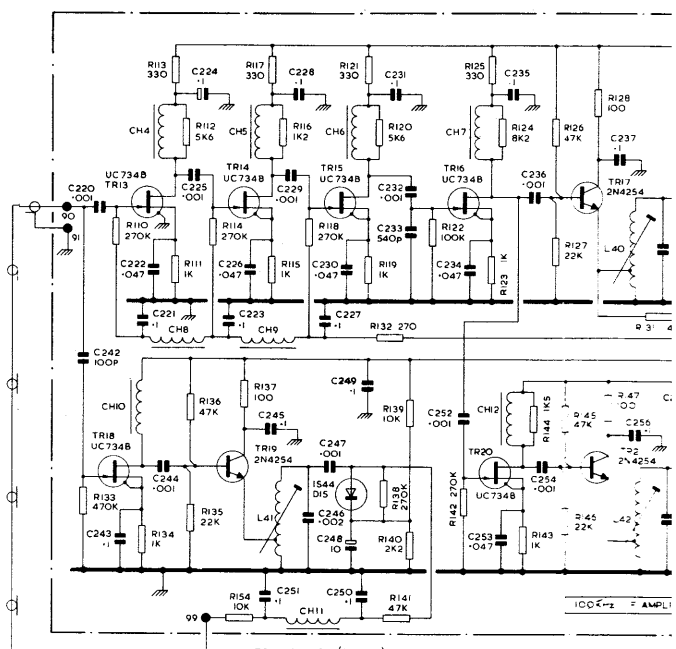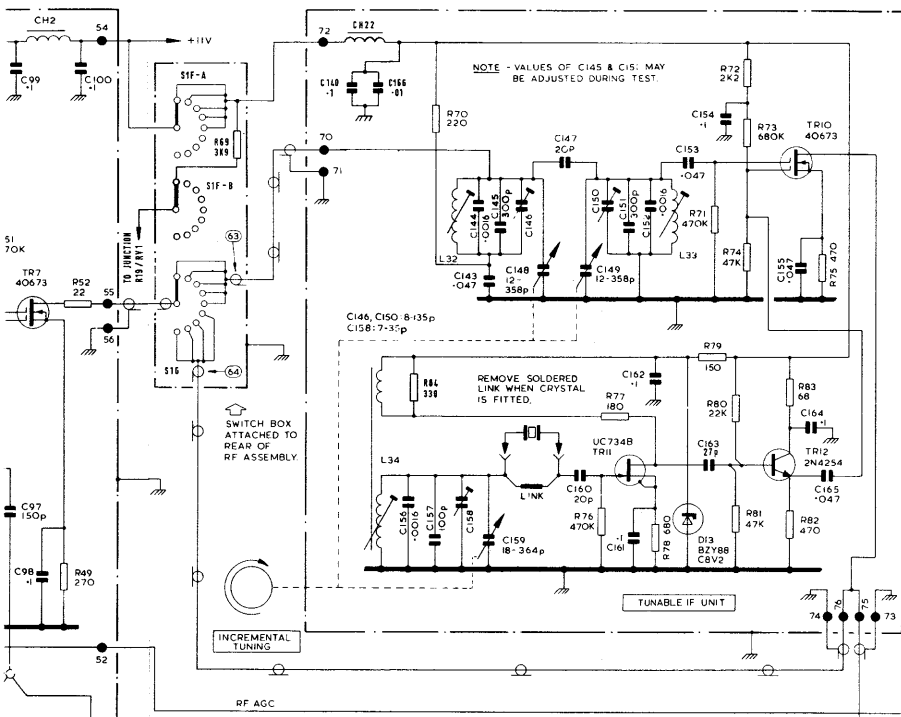

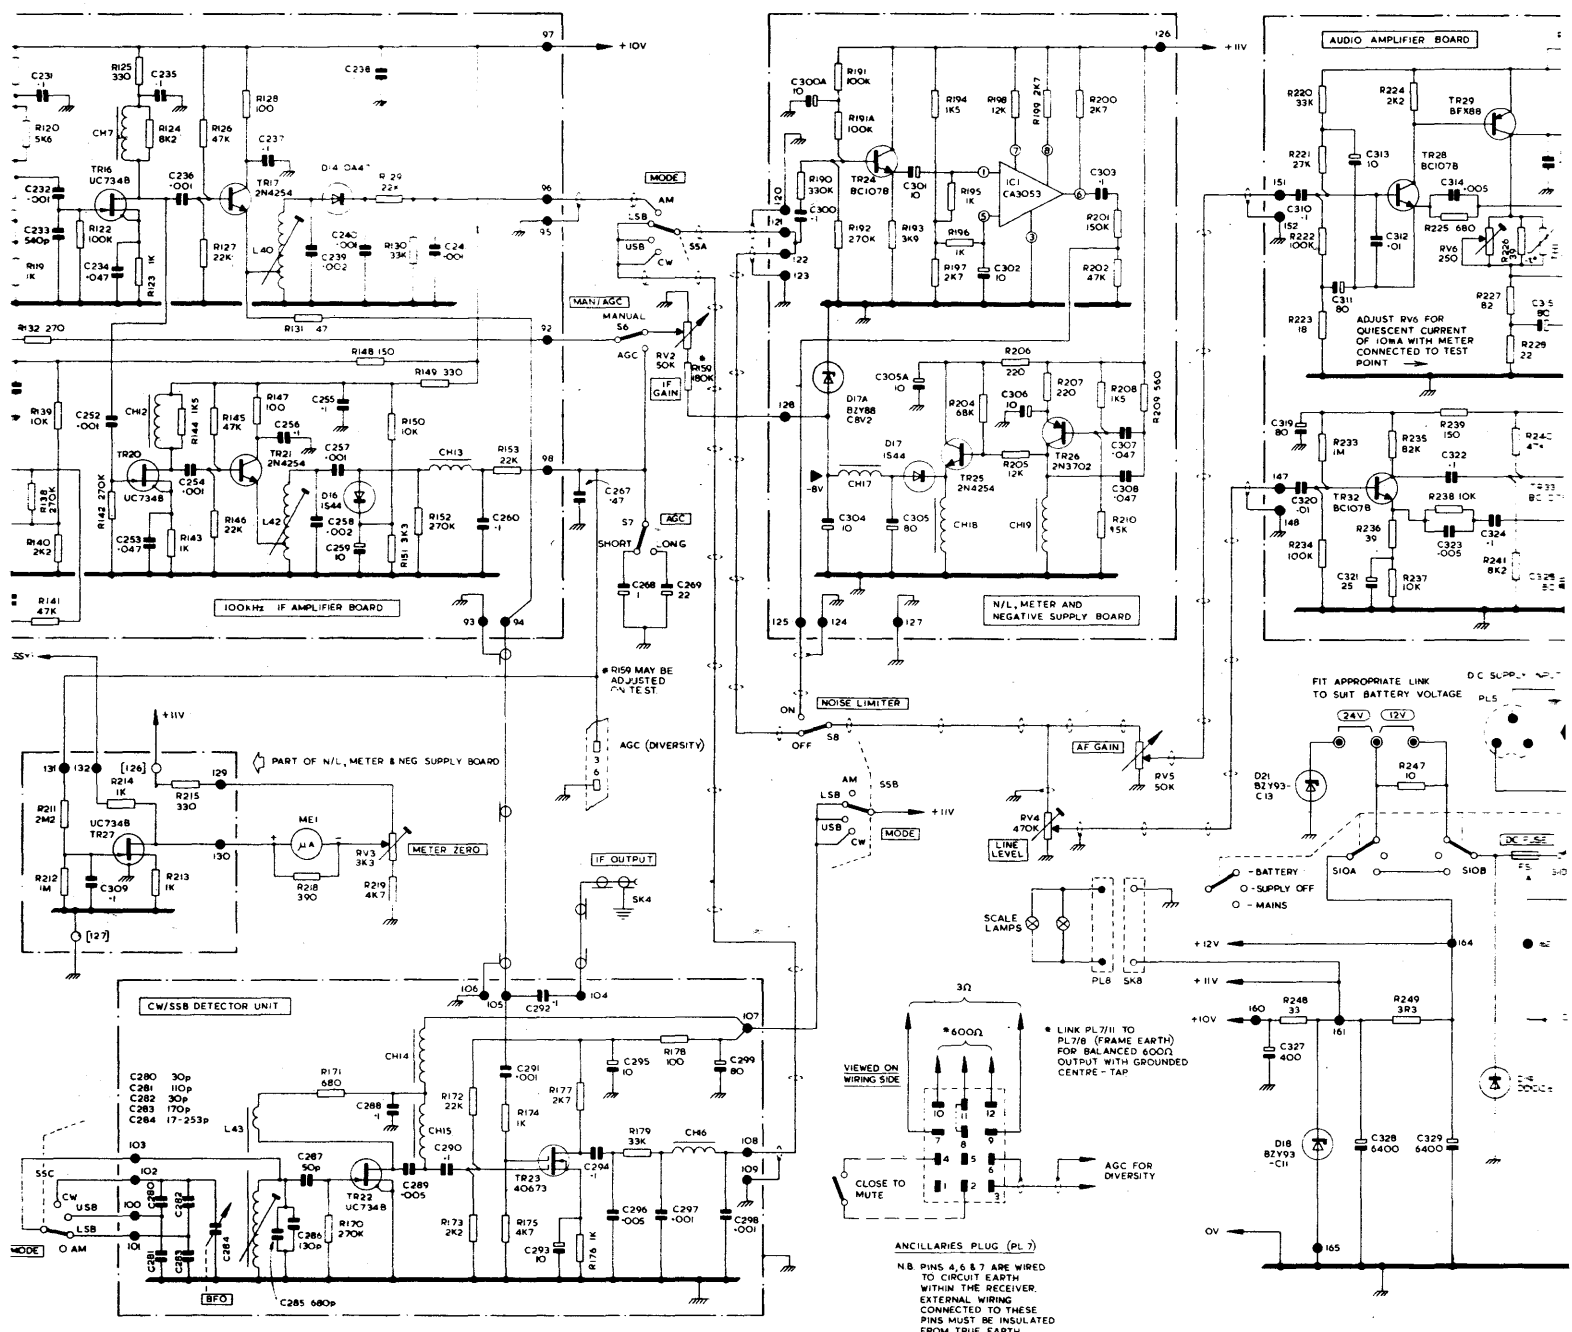


MODELS 1830/1 - 1830/5

| | | | | |
|--|--|---|--|--|
| <p>2N3702</p> <p>1 BASE 2 COLLECTOR 3 EMITTER</p> | <p>2N4254</p> <p>1 BASE 2 COLLECTOR 3 EMITTER</p> | <p>3N128</p> <p>1 DRAIN 2 SOURCE 3 GATE 4 SUBSTRATE & CASE</p> | <p>40673 (INCORPORATES DIODE PROTECTION)</p> <p>1 DRAIN 2 GATE 2 3 GATE 1 4 SOURCE, SUBSTRATE & CASE.</p> | |
| <p>2N4918</p> <p>1 EMITTER 2 COLLECTOR 3 BASE</p> <p>VIEWED ON PLASTIC SIDE</p> | <p>2N4921</p> <p>1 EMITTER 2 COLLECTOR 3 BASE</p> <p>VIEWED ON PLASTIC SIDE</p> | <p>BC107B</p> <p>1 EMITTER 2 BASE 3 COLLECTOR & CASE</p> | <p>BFX88</p> <p>1 EMITTER 2 BASE 3 COLLECTOR & CASE</p> | <p>UC734B</p> <p>1 SOURCE 2 DRAIN 3 GATE 4 CASE</p> |

THIS CIRCUIT DIAGRAM CONFORMS GENERALLY TO THE RECOMMENDATIONS GIVEN IN BS 3936 (IC1 (CA3053) CIRCUITRY IS REPRODUCED WITH PERMISSION FROM R.C.A. LIMITED REFER TO BP1271 FOR BLOCK DIAGRAM OF 1830 SERIES RECEIVERS.

MODEL 1830/2

THE CIRCUITRY OF THIS RECEIVER IS IDENTICAL TO THAT OF THE STANDARD 1830/1 EXCEPT THAT SH1/B TAKES THE PLACE OF THE USUAL CRYSTAL SELECTOR S3A/B/C. SH1 IS ARRANGED TO SELECT ANY ONE OF FIVE CRYSTAL OSCILLATOR UNITS AND SO PROVIDES 50-CHANNEL CAPABILITY REFER TO INSET FOR WIRING DETAILS.

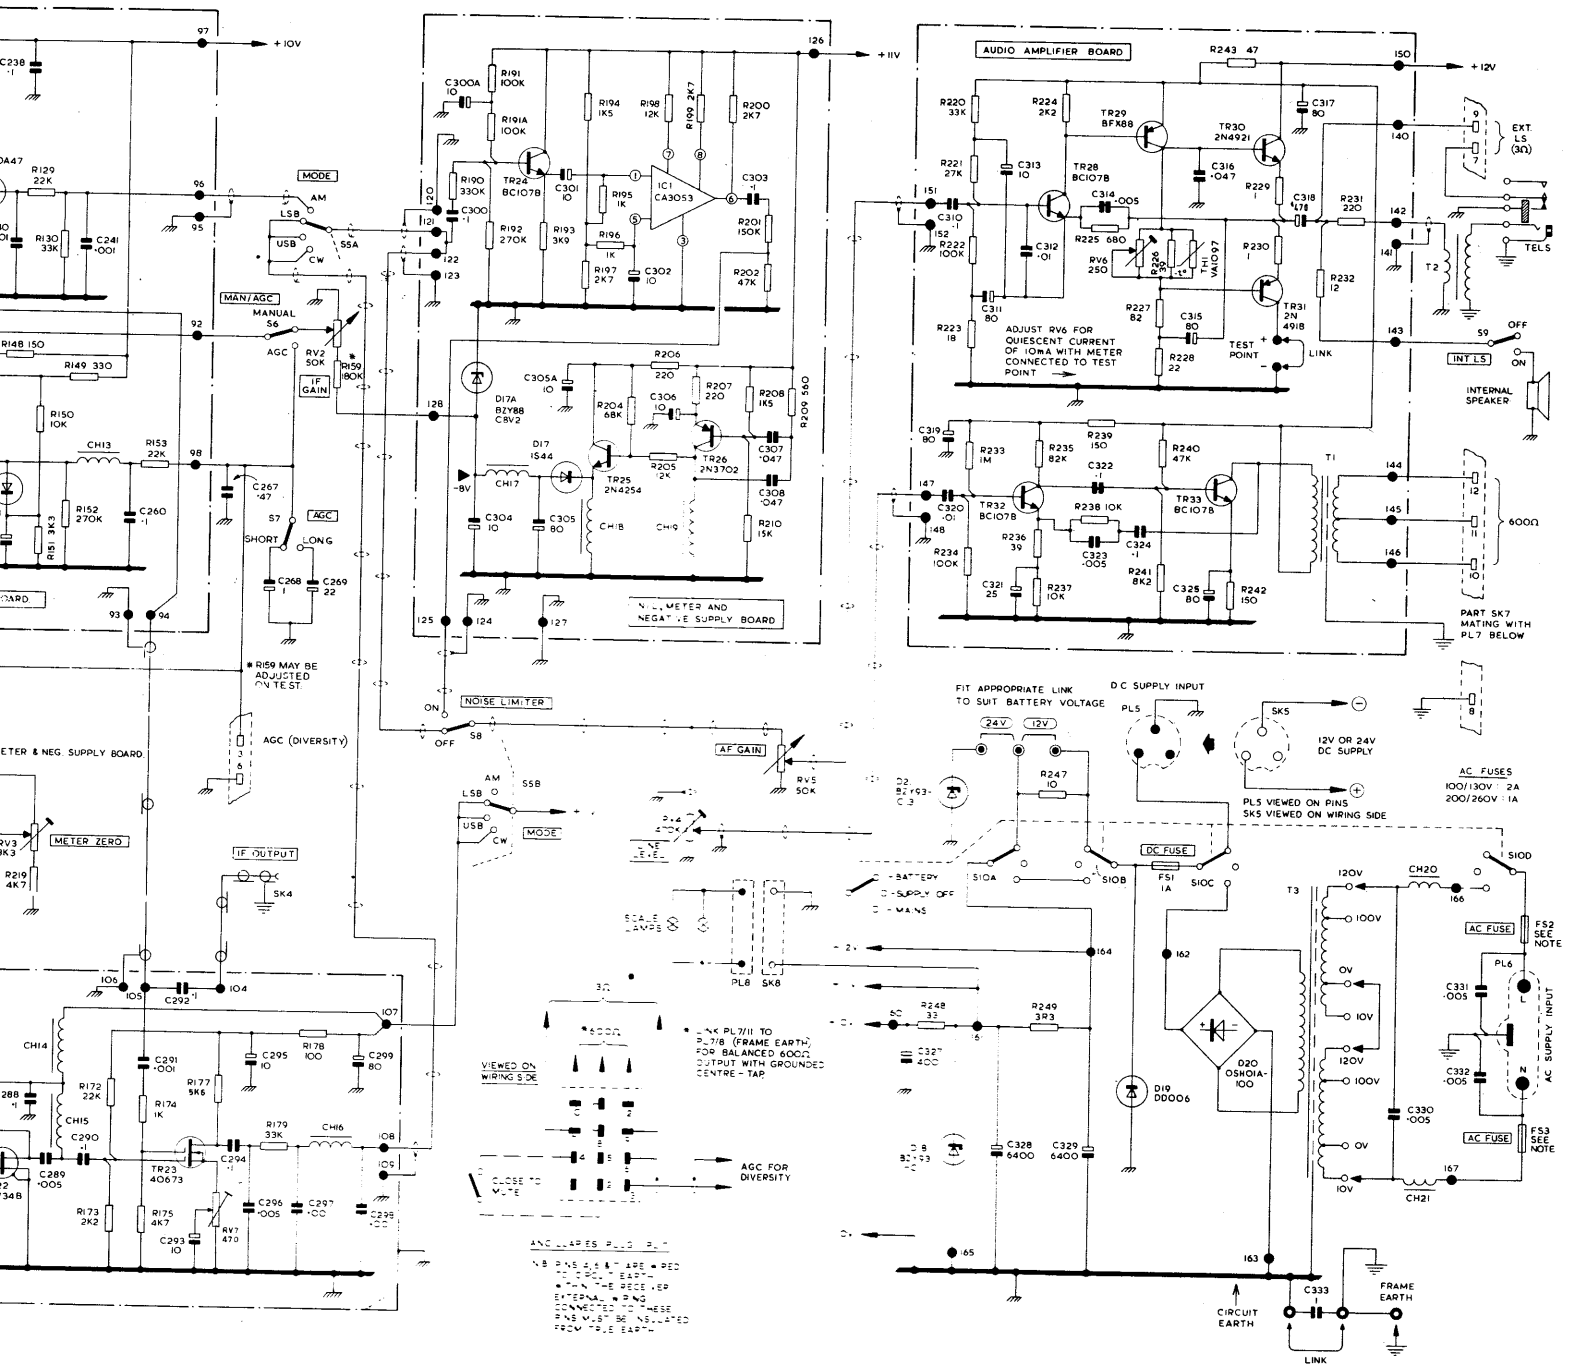

MODELS 1830/1 - 1830/5

BP1289. ISSUE 2.

| | | |
|---|---|--|
| <p>54</p> <p>BASE COLLECTOR EMITTER</p> | <p>3N128</p> <p>1 DRAIN 2 SOURCE 3 GATE 4 SUBSTRATE & CASE</p> | <p>40673 (INCORPORATES D.C. PROTECTION)</p> <p>1 DRAIN 2 GATE 2 3 GATE 4 SOURCE, SUBSTRATE & CASE</p> |
| <p>BC107B</p> <p>1 EMITTER 2 BASE 3 COLLECTOR & CASE</p> | <p>BFX88</p> <p>1 EMITTER 2 BASE 3 COLLECTOR & CASE</p> | <p>UC734B</p> <p>1 SOURCE 2 DRAIN 3 GATE 4 CASE</p> |

NOTES

THIS CIRCUIT DIAGRAM CONFORMS GENERALLY TO THE RECOMMENDATIONS GIVEN IN BS 3939. C (CA3053) CIRCUITRY IS REPRODUCED WITH PERMISSION FROM R.C.A. LIMITED. REFER TO BP127 FOR BLOCK DIAGRAM OF 1830 SERIES RECEIVERS.

MODEL 1830/2

THE CIRCUITRY OF THIS RECEIVER IS IDENTICAL TO THAT OF THE STANDARD 1830/1 EXCEPT THAT S1A/B TAKES THE PLACE OF THE USUAL CRYSTAL SELECTOR S3A/B/C. S11 IS ARRANGED TO SELECT ANY ONE OF FIVE CRYSTAL OSCILLATOR UNITS AND SO PROVIDES 50-CHANNEL CAPABILITY. REFER TO INSET FOR WIRING DETAILS.

MODEL 1830/3

THIS RECEIVER IS IDENTICAL TO THE STANDARD 1830/1 EXCEPT FOR MODIFIED FREQUENCY COVERAGE ON RANGES 7 & 8. REFER TO INSET FOR MINOR VARIATIONS IN RF MIXER & 1ST LOCAL OSCILLATOR CIRCUITRY.

MODEL 1830/4

THIS RECEIVER EMBODIES THE MODIFIED RANGE 7/8 COVERAGE OF THE 1830/3 PLUS 50-CHANNEL CRYSTAL CAPABILITY AS MODEL 1830/2.

MODEL 1830/5

VARIANT OF 1830/1 WITH SPECIAL PROVISION FOR SSB RECEPTION. REFER HANDBOOK SUPPLEMENT FOR CIRCUIT MODIFICATIONS.