

# W2 OWNER'S MANUAL ERRATA

Rev. D1-3, January 4, 2014


## MAKE THESE CHANGES TO YOUR REV D1 MANUAL

1. **Page 8, first paragraph:** Delete the last sentence, "The SWR Alarm function must be enabled each time the W2 power is turned on." The alarm function remains enabled with firmware 0.93 or later.

2. **Page 8: Add the following after the first paragraph:**

You may set the trip point for the SWR Alarm from 1.1:1 to 5.0:1. Sending the W2 a "[" lowers the trip point, and "]" raises the trip point in 0.1 steps. Note the decimal point is implied in the serial response, i.e. "[25;" means the trip point was lowered to an SWR of 2.5:1 and "]39" means the trip point was raised to 3.9:1.

3. **Page 19, Introduction:** Replace the last item under Cables with the following:

	Data Cable Assembly: Either RS232 or USB, chosen at the time order is placed. <b>NOTE:</b> If you chose the KXSER cable, the bag may be marked E850369.	1	KXUSB (USB) Or KXSER (RS232)
---	--	---	------------------------------------

4. **Page 25, Serial Interface Cable:** Add the following below the schematic diagram:

Above is the schematic diagram of the optional RS232 serial interface cable. A kit of parts to assemble the cable is available from Elecraft (order W1SERKT), or you can order a factory-assembled cable from Elecraft (order KXSER). If you order the KXSER cable, it may arrive in a bag marked E850369.