

ELECRAFT KX3-2M/4M INSTALLATION AND OPERATING MANUAL ERRATA

Rev. C-3, August 15, 2016

E740247E

**MAKE THESE CHANGES TO YOUR REV C MANUAL OR
ANNOTATE YOUR MANUAL WHERE INDICATED TO
REFER TO THIS ERRATA**

1. Page 9, “Sending DTMF Tones”, third bullet. Replace the text with the following:

- Tap the following keys to enter the needed characters. A brief tap will launch a timed duration tone pair. Do not press and hold the keys. Doing so may result in unexpected behavior of the KX3. To disable the DTMF keys, release the PTT or tap **FREQ ENT**.

Character	Press
0 – 9	Numbered keys
*	ATU TUNE
#	MSG
A	MODE
B	A/B
C	DATA
D	A>B

- 2. Page 14 (Parts List):** Last item on the page (part number E850634), in the description change KX2-M to KX3-M.
- 3. Page 21, last step:** Replace the text with the following.

Turn the coaxial connector to route the coaxial cable toward the end of the KX3 that has the antenna connector as shown in Figure 14. If the connector is properly mated, you can turn it without it disconnecting.