## K-POD OWNER'S MANUAL ERRATA

Rev. D-2, February 28, 2017 E740285E

## MAKE THESE CORRECTIONS TO YOUR REV D MANUAL OR ADD NOTES TO THE TEXT TO REFER TO THIS ERRATA AT THE PLACES INDICATED

**1. Page 8:** Insert the following under *Operating the K-Pod*:

## Feedback Tone

An annunciator in the K-Pod produces a brief audible tone whenever switches F1 through F8 are pressed. In addition, changing the position of the rocker switch produces a brief tone as follows:

Rocker Switch Position	Tone
VFO A	1000 Hz
VFO B	1500 Hz
RIT/XIT	2000 Hz

To disable the feedback tone, press and hold F1 while applying power to the K-Pod. To re-enable the feedback tone, turn the K-Pod off, then on again. (The disable command does not survive power cycles.)

**2. Page 12:** Under Example 1 near the bottom of the page, the "hold" and "tap" instructions to access macros 1 through 8 and 9 through 16 are reversed. Change the first sentence of the second paragraph to read:

As described earlier, a macro in position 1 through 8 will be enabled by a hold of the corresponding K-Pod switch and a macro in positions 9 through 16 will be enabled by a tap of K-Pod switches 1 through 8.

**3.** Page 16: Delete the part numbers shown for the resistors as shown below. The resistors are supplied as a pair. To obtain additional resistors order Elecraft part number E850755.

Description	Elecraft Part Number
6.8 Ohm, 1/10 W SMD (0603 size).	E500393
6.8 Ohm, 1/8 W Leaded Resistor	<del>E500661</del>