







## Connect adaptor and insert batteries at control panel (9/10)

Insert batteries



Remote control	7
PIR motion detector	13
Magnetic contact	17

## Registration of remote control (27)

### Press on control panel (24)

- KEY  - PIN CODE (default code= 1234)
- ENTER  = Display shows 1 user setup
- ENTER  = 1-1 admin setup
- ENTER  = Password

### Navigate with arrow keys to 6 remote (19)

- ENTER  = 6-1 learning ID
- ENTER  = wait for learning


Now press OFF button on remote control

- Display = learning ok = ok
- = time out = pressed too late
- = ID duplicate= remote control is already registered

Press and hold ESCAPE button  to leave programming mode.  
Remote control is now available.



## Registration of detectors (36)

Press on control panel

- KEY  - PINCODE (default code=1234)-ENTER 

Display shows 1 user setup

Navigate with arrow keys to 3 zone setup

- ENTER  = input 3-1 ser (01-36) zone selection with number keys starting with 01
- ENTER  = wait for learning

Now press sabotage switch on detector to be registered

- Display = learning ok = ok
- = time out = pressed too late
- = ID duplicate= remote control is already registered

Repeat this procedure with all detectors to be registered; Combination of zones is freely selected. Press and hold ESC  button to leave programming mode.

You will find complete instructions in the manual.