

Wireless Door Chime Kit with Flashing Light SX-1i/SX11i

1 Push Button unit. 2 Door Chime unit. Includes diagrams for battery installation and push button operation.

3 Melody Selection. 4 Digital Code Set Up. Includes diagrams for selecting a melody and setting a code.

Wireless Door Chime Kit with Flashing Light SX-1i/SX11i

1 Melody Selection. 2 Digital Code Set Up. Includes diagrams for selecting a melody and setting a code.

3 Front and back door Bell Push operation. 4 Signal Sent Indicator Light. Includes diagrams for door operation and signal indicator.

Kit sans fil de carillon de porte avec la lumière clignotante SX-1i/SX11i

1 Bouton de sonnette. 2 Récepteur. Includes diagrams for button and receiver installation.

3 Sélection d'une mélodie. 4 Indicateur lumineux d'envoi de signal. Includes diagrams for melody selection and signal indicator.

Kit sans fil de carillon de porte avec la lumière clignotante SX-1i/SX11i

1 Sélection mélodie. 2 Réglage du code digital. Includes diagrams for melody selection and digital code setting.

3 Fonctionnement de la sonnette. 4 Digital code instelling. Includes diagrams for bell operation and digital code setting.

De draadloze Uitrusting van het Klokkengelui van de Deur met opvlammend licht SX-1i/SX11i

1 Drukknop. 2 Deurbel. Includes diagrams for button and doorbell installation.

3 Melodie selectie. 4 Digital code instelling. Includes diagrams for melody selection and digital code setting.

De draadloze Uitrusting van het Klokkengelui van de Deur met opvlammend licht SX-1i/SX11i

Drukknopapparaat. Melodie selectie. Includes text for button operation and melody selection.

Digitale code instelling. Het bedienen van de Deurbel. Includes text for digital code setting and doorbell operation.

5 Push Button Installation. 6 Door Chime Installation. Includes diagrams for mounting the button and chime.

7 Adjust the volume. 8 Mode Selector. Includes diagrams for volume adjustment and mode selection.

Flashing Light Pattern. Important. Includes text for flashing light patterns and safety warnings.

Trouble Shooting & User Hints. Specification. Includes text for troubleshooting and technical specifications.

5 Installation du boîtier du bouton de sonnette. 6 Installation du récepteur de la sonnette. Includes diagrams for button and receiver installation.

7 Réglage du volume. 8 Fonctionnement. Includes diagrams for volume adjustment and operation.

Modes de flashes lumineux. Important. Includes text for light modes and safety warnings.

Conseils. Caractéristiques techniques. Includes text for tips and technical specifications.

5 Drukknop installatie. 6 Deurbel installatie. Includes diagrams for button and doorbell installation.

7 Pas het volume aan. 8 Bediening. Includes diagrams for volume adjustment and operation.

Knipperlicht patroon. Belangrijk. Includes text for light patterns and safety warnings.

Gebruikerstips. Specificaties. Includes text for user tips and technical specifications.

CH Byron Electrical Ltd. Byron House. 34 Sherwood Rd, Astonfield. Includes contact information and a CE mark.

CH Byron Electrical Ltd. Byron House. 34 Sherwood Rd, Astonfield. Includes contact information and a CE mark.

CH Byron Electrical Ltd. Byron House. 34 Sherwood Rd, Astonfield. Includes contact information and a CE mark.

CH Byron Electrical Ltd. Byron House. 34 Sherwood Rd, Astonfield. Includes contact information and a CE mark.

CH Byron Electrical Ltd. Byron House. 34 Sherwood Rd, Astonfield. Includes contact information and a CE mark.

