

SX Range Bell Push

SX-35

1

Remove Isolation Strip

CR2032 3V Lithium Battery

Push Button

- Open up the push button by pushing in the tab at the bottom of the push with a small flat screwdriver.
- Remove the isolation strip from the battery compartment then it is ready to use.
- When replacing the battery, ensure the battery polarity matches the internal markings (“+” facing upwards), then press the battery down so that it is sitting firmly in its compartment.

2

Melody Selector

Melody Selection

Press the melody selector once to select a melody as your Byron SX Range door chime sound.

3

Digital Code Set Up

- Press the Push Button once, a new operation code is generated randomly and sent to the Door Chime unit.
- The Door Chime will sound to indicate that a new operation code is registered and memorised.

4

Metal surface

UPVC Door-frames

IP44

+40°C

-10°C

Push Button Installation

- Using the holes on the back of push button as a template, mark the fixing position for the unit.
- Drill holes and fit wall plugs and secure the push button unit to the wall with screws.
- Do not mount it on any metal surface or UPVC door frame.

5

Wiring Installation

The Push Button can be used as converter to change your existing Wired Bell Push to wire free.

1. Connect your Wired Bell Push cable to the built-in terminal positions A & C of Wireless Bell Push.
2. Your Wired Bell Push with Wireless Push Button is ready to use.

In case a Transformer (A/C 8V) is used to power the Wired Bell Push and Wired Door Chime.

1. Remove the back of case by pushing in the tab on the bottom with a small, flat screwdriver.
2. Disconnect the wire that connected with Wired Door Chime.
3. Feed the wire via the hole on the back of the Push Button and connect the wire to the terminal positions A & B as marked.
4. Snap the back cover of Push Button back on, then it is ready to use.

Important: Do not connect the Wireless Push Button unit with any Lighted Bell Push.

SX Range Bell Push

SX-35

Important: This Bell Push is designed to work with Byron SX Range Door Chime only

Push Button unit

Power: 1 x 3volt Lithium battery (CR2032 - included)

Melody Selection

Press the melody selector to select a melody as your Byron SX Range door chime sound.

Digital Code Set Up - When work with Byron SX Range Door Chime

The Door Chime kit is equipped with an advanced random and self-learning operation coding ability no setting is needed. Read the following instructions before use.

1. First time operation:
 - After battery installation on the Push Button and Door Chime units, press the Push Button once and it will generate a new operation code randomly and send a wireless signal to the Door Chime unit. The door chime will sound to indicate that a new operation code is registered and memorised.
2. Interference from a similar unit operating nearby:
 - a) Simply remove the batteries from the Push Button and Door Chime units and rest for 10 seconds, this will erase the memory.
 - b) Insert the batteries into the Push Button and Door Chime units, the door chime unit will give 2-beeps to indicate that it is ready for the new code registration. Press the Push Button once, it will generate a new operation code randomly and send a wireless signal to the Door Chime and it will sound to indicate that a new operation code is registered and memorised.
3. Front and back door Bell Push operation:
 - a) Remove the batteries from the Push Buttons (Front & Back Door) and Door Chime units and rest for 10 seconds, this will erase the memory.
 - b) Insert the batteries into the Push Buttons and Door Chime units, the door chime unit will give 2-beeps to indicate that it is ready for the new code registration.
 - c) Press the front door Push Button once, it will generate a new operation code randomly and send a wireless signal to the door chime unit and it will sound to indicate that a new operation code is registered and memorised.
 - d) After, (within 2 minutes) press the back door Push Button once, it will generate a new operation code randomly and send a wireless signal to the door chime unit and it will sound to indicate that a new operation code is registered and memorised. The door chime unit has the ability to memorise both operation codes.
 - e) Test to ensure correct operation before final installation.

Wiring Installation

- The Push Button can be used as converter to change your existing Wired Bell Push to wire free.
1. Connect your Wired Bell Push cable to the built-in terminal positions A & C of Wireless Bell Push.
 2. Your Wired Bell Push with Wireless Push Button is ready to use.
- In case a Transformer (A/C 8V) is used to power the Wired Bell Push and Wired Door Chime.**
1. Remove the back of case by pushing in the tab on the bottom with a small, flat screwdriver.
 2. Disconnect the wire that connected with Wired Door Chime.

3. Feed the wire via the hole on the back of the Push Button and connect the wire to the terminal positions A & B as marked.
 4. Snap the back cover of Push Button back on, then it is ready to use.
- Important:** Do not connect the Wireless Push Button unit with any Lighted Bell Push.

Important

1. Do not mount either unit close to fireplace or expose to high temperatures.
2. Do not expose the Door Chime unit to direct sunlight or moisture
3. Always use alkaline battery. Please dispose of old, defective batteries in an environmentally friendly manner in accordance with the relevant legislation.
4. Make sure that no naked flame sources, such as lighted candles, should be placed on the unit.
5. The unit should not be exposed to dripping or splashing and no objects filled with liquids, such as vases, should be placed on the unit.
6. **CAUTION:** Replace only with the same or equivalent type of battery that is recommended by the manufacturer.
7. **CAUTION:** Make sure batteries are installed correctly as per the internal marking.
8. **CAUTION:** Danger of explosion if battery is incorrectly installed or replaced.
9. **IMPORTANT:** There are no serviceable parts in the units, do not attempt to repair it.

User Hints

If the door chime unit does not sound, please check the following:

- a) Flat batteries in either Push Button or Door Chime units - change the batteries.
- b) Wrong battery polarity in either Push Button or Door Chime units - re-insert the batteries.
- c) Push Button or Door Chime units are not on the same operation codes - re-set the code (see digital code set up).
- d) Units are out of range - Operate the Chime unit within the operation range.

Specification

Operating Temperature: -10C – +40C
 Selectable Tone: Total Eight (8) melodies available
 Selectable Digital Code: Total two hundred fifty six (256) possible digital codes

“Type R2 Device - device where the sound output is created by the initial operation of the control and where the period of sound output continues for the designed duration irrespective of condition of the control.”

CH Byron Electrical Ltd
 Byron House
 34 Sherwood Rd, Astonfield
 Bromsgrove, B60 3DR
 UK
 Tel: 0845 2301231
 e: support@chbyron.com
 w: www.chbyron.com

Byron 433MHz

R&TTE APPROVED **CE0681**

A	✓	IRL	✓	UK	✓	M	✓
B	✓	I	✓	BG	✓	N	✓
DK	✓	L	✓	CZ	✓	SK	✓
FIN	✓	NL	✓	EST	✓	SLO	✓
F	✓	P	✓	H	✓	CH	✓
D	✓	E	✓	IS	✓	PL	✓
GR	✓	S	✓	LV	✓	RO	✓
LT	✓						

CH Byron Electrical United Kingdom. www.chbyron.com

