

EPSON®



EPSON STYLUS® COLOR

850Ne

User's Guide



Printed on recycled paper with at least 10% post-consumer content

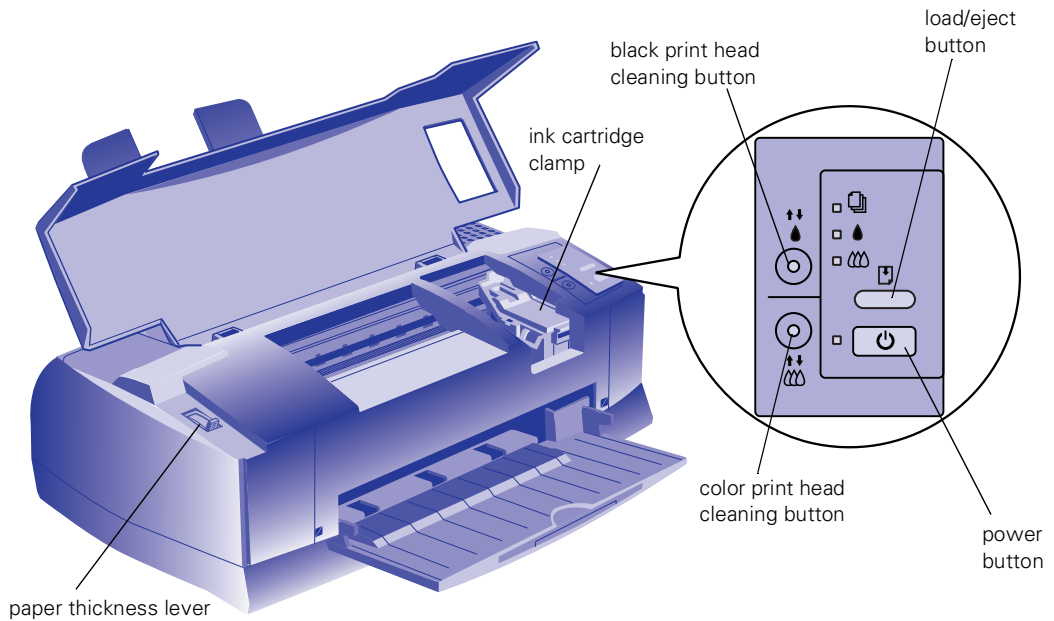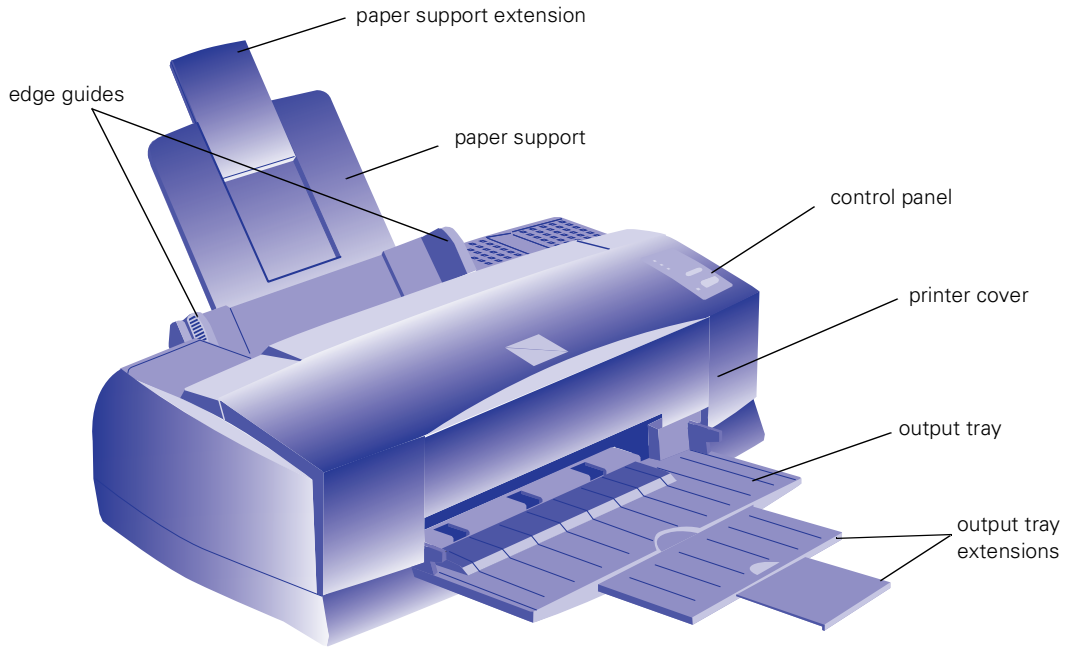

All rights reserved. No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic, mechanical, photocopying, recording, or otherwise, without the prior written permission of SEIKO EPSON CORPORATION. The information contained herein is designed only for use with this EPSON printer. EPSON is not responsible for any use of this information as applied to other printers.

Neither SEIKO EPSON CORPORATION nor its affiliates shall be liable to the purchaser of this product or third parties for damages, losses, costs, or expenses incurred by purchaser or third parties as a result of: accident, misuse, or abuse of this product or unauthorized modifications, repairs, or alterations to this product, or (excluding the U.S.) failure to strictly comply with SEIKO EPSON CORPORATION's operating and maintenance instructions.

SEIKO EPSON CORPORATION shall not be liable for any damages or problems arising from the use of any options or any consumable products other than those designated as Original EPSON Products or EPSON Approved Products by SEIKO EPSON CORPORATION.

EPSON, EPSON ESC/P, and EPSON Stylus are registered trademarks and EPSON ESC/P 2 is a trademark of SEIKO EPSON CORPORATION. EPSON SoundAdvice is a service mark and EPSON FaxAdvice, and PhotoEnhance are trademarks of Epson America, Inc.

General Notice: Other product names used herein are for identification purposes only and may be trademarks of their respective owners. EPSON disclaims any and all rights in those marks.

The ENERGY STAR emblem does not represent EPA endorsement of any product or service.

Copyright © 1998 by Epson America, Inc.

CPD-7449

10/98

FCC Compliance Statement For United States Users

This printer has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio or television reception. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause interference to radio and television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures.

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

WARNING

The connection of a non-shielded equipment interface cable to this equipment will invalidate the FCC Certification of this device and may cause interference levels which exceed the limits established by the FCC for this equipment. It is the responsibility of the user to obtain and use a shielded equipment interface cable with this device. If this equipment has more than one interface connector, do not leave cables connected to unused interfaces. Changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.

For Canadian Users

This Class B digital apparatus meets all requirements of the Canadian Interference-Causing Equipment Regulations.

Cet appareil numérique de la classe B respecte toutes les exigences du Règlement sur le matériel brouilleur du Canada.

Contents

Introduction

Windows System Requirements	1
Macintosh System Requirements	2
How To Use Your Manuals	3
Warnings, Cautions, Notes, and Tips	4
Where To Get Help	5
ENERGY STAR Compliance	6
Year 2000 Ready	6
Important Safety Instructions	7

1 Basic Printing

Printing from Windows	1-1
Setting Printer Options from Windows Applications	1-2
Setting Default Printer Options	1-4
Checking Printer Status	1-5
Printing from a Macintosh	1-7
What To Do When the Printer Lights Flash	1-10

2 *Printing on Special Paper*

Using Special Paper and Media	2-1
Letterhead, Preprinted Forms, and Legal-size Paper	2-3
EPSON 360 dpi, High Quality, and Photo Quality Ink Jet Paper	2-3
EPSON Photo Quality Glossy Paper, Film, and Transparencies	2-4
Envelopes	2-5
EPSON Photo Paper	2-6
EPSON Photo Quality Ink Jet Cards	2-7
EPSON Photo Quality Self Adhesive Sheets	2-8
EPSON Iron-On Transfer Paper	2-8

3 *Custom Printing*

Using Predefined Advanced Settings	3-2
Customizing Print Quality and Special Effects	3-4
Customizing Color Settings	3-7
Using ColorSync on the Macintosh	3-9
Selecting Paper Size and Orientation Options	3-11
Selecting Paper Options in Windows	3-11
Selecting Paper Options on a Macintosh	3-15
Selecting Print Layout Options	3-20
Choosing Print Layout Options in Windows	3-20
Choosing Print Layout Options on a Macintosh	3-27
Saving Custom Settings	3-33
Redefining Custom Settings	3-34
Deleting Custom Settings	3-34

4 *Managing Print Jobs*

Managing Print Jobs in Windows 98, Windows 95, and Windows NT 4.0	4-1
Using Status Monitor 2	4-2
Selecting the Speed & Progress Options (Windows 98 and Windows 95)	4-9
Using the Spool Manager (Windows 98 and Windows 95)	4-11
Additional Monitoring Options in Windows NT 4.0	4-12
Managing Print Jobs in Windows 3.1	4-13
Using the Spool Manager	4-13
Managing Print Jobs on a Macintosh	4-15
Using Monitor3	4-16
Using the Macintosh Status Monitor	4-17
Selecting Configuration Options	4-19

5 *Maintenance and Transportation*

Replacing an Ink Cartridge	5-1
Removing an Empty Ink Cartridge	5-2
Installing the New Cartridge	5-4
Replacing an Outdated Ink Cartridge	5-5
Cleaning the Print Heads	5-6
Using the Head Cleaning Utility	5-6
Using the Control Panel	5-7
Examining the Nozzle Check Pattern	5-8
Aligning the Print Heads	5-8
Using the Print Head Alignment Utility	5-9
Using the Control Panel	5-9
Cleaning the Printer	5-10
Transporting the Printer	5-10

6 *Troubleshooting*

Diagnosing Problems	6-1
Checking the Control Panel Lights	6-2
Running a Self Test	6-3
Using Hex Dump Mode	6-4
Improving Print Quality	6-4
Solving Printing Problems	6-8
Solving Printer Software Problems	6-10
Fixing Paper Problems	6-13
Solving Miscellaneous Printout Problems	6-15
Uninstalling Printer Software	6-17

A *EPSON Accessories*

B *Technical Specifications*

Glossary

Index

Introduction



Note:

Your EPSON Stylus COLOR 850Ne printer is identical to the EPSON Stylus COLOR 850 except for the added network capabilities. Therefore, this guide refers to the EPSON Stylus COLOR 850 printer driver software.

Your EPSON Stylus[®] COLOR 850Ne bundled printer/print server is the ideal shared output device for business graphics, layout proofs, digital photography, or any project created by users on your network. With resolutions up to 1440 by 720 dpi, you get amazingly realistic photographic images and vivid graphics in color, or razor-sharp black printing. All at the fastest speed of any EPSON ink jet printer.

The printer software for Microsoft[®] Windows[®] and Macintosh[®] provides advanced color management with adjustable levels of brightness, contrast, saturation, and ink colors. Support for ColorSync[™] 2.01 and Windows ICM ensures printouts that closely match the colors on your monitor.

Your printer offers flexible resource sharing; you can use it with multiple types of operating systems and network operating systems. With an integrated Ethernet card for complete network connectivity, setup is fast and easy.

Windows System Requirements

To use your printer and its software with a PC, your system should have:

- ▶ An IBM[®] compatible PC with at least a 386/25 MHz (for Windows 3.1) or 486/25 (for Windows 98, Windows 95 or Windows NT 4.0) or faster processor
- ▶ DOS, Microsoft Windows 3.1x, Windows 95, Windows 98, or Windows NT 4.0
- ▶ At least 16MB of RAM (20MB recommended)

- At least 50MB of free hard disk space for storing images (100MB or more is recommended)
- VGA, Super VGA, or better display adapter and monitor
- Double-speed CD-ROM drive (quad-speed or faster recommended) for installing the printer software
- Network connection to Ethernet
- A twisted-pair (10BaseT) cable to connect the printer's Ethernet card to your network

Macintosh System Requirements

To use your printer and its software with a Macintosh, your system should have:

- Any Macintosh or Power Macintosh model except the Macintosh +, Macintosh 512, Performa[®] 410, PowerBook[®] 100, and some early versions of the Macintosh, such as the II or Classic
- System 7.1 or later (7.5 or later recommended)
- At least 16MB of RAM (20MB or more is recommended)
- At least 50MB of free hard disk space for storing images (100MB or more is recommended)
- 13-inch RGB display or better
- Double-speed CD-ROM drive (quad-speed or faster recommended) for installing the printer software
- Network connection to Ethernet
- A twisted-pair (10BaseT) cable to connect the printer's Ethernet card to your network

How To Use Your Manuals

See the *Setup Guide* to set up your printer, install your software, and configure the card for the network. See the *Administrator's Guide* for network, configuration, and Ethernet card information. This *User's Guide* contains the following information:

Chapter 1 covers the basics of printing with Windows or Macintosh.

Chapter 2 gives guidelines for selecting the right paper or other media for your print job and instructions for loading it in your printer.

Chapter 3 tells you how to print special projects with custom settings for print quality, color management, and distinctive layouts.

Chapter 4 explains how to manage print jobs and check printer status while you're printing.

Chapter 5 gives instructions for replacing ink cartridges, cleaning and aligning the print heads, and cleaning and transporting the printer.

Chapter 6 provides solutions for problems you may have. (For solutions to network problems, see Chapter 7 in your *Administrator's Guide*.)

Appendix A lists the EPSON accessories you can use with your printer.

Appendix B provides technical details on your printer, ink cartridges, and media.

A **Glossary** and **Index** are included at the end of the book.

Warnings, Cautions, Notes, and Tips

You'll find this information throughout your manual:



Warnings must be followed carefully to avoid bodily injury.



Cautions must be observed to avoid damage to your equipment.



Notes contain important information about your printer.



Tips contain additional hints for great printing.

Where To Get Help

EPSON provides technical assistance through electronic support services and automated telephone services 24 hours a day. The following tables list the contact information:

Electronic support services

Service	Access
World Wide Web	From the Internet, you can reach EPSON's Home Page at http://www.epson.com .
EPSON Internet FTP Site	If you have Internet FTP capability, use your Web browser (or other software for FTP downloading) to log onto ftp.epson.com with the user name anonymous and your e-mail address as the password.
EPSON Download Service	You can call the EPSON Download Service at (800) 442-2007 . Set your communications software to 8 data bits, 1 stop bit, no parity. Modem speed can be up to 28.8 Kbps.
EPSON Forum on CompuServe®	Members of CompuServe can type GO EPSON at the menu prompt to reach the Epson America Forum. For a free introductory CompuServe membership, call (800) 848-8199 and ask for representative #529.

Automated telephone services

Service	Access
EPSON SoundAdvice SM	For pre-recorded answers to commonly asked questions about EPSON products 24 hours a day, seven days a week, call (800) 922-8911 .
EPSON FaxAdvice TM	Access EPSON's technical information library by calling (800) 922-8911 . You must provide a return fax number to use this service.
EPSON Referral Service	For the location of your nearest Authorized EPSON Reseller or Customer Care Center, call (800) 922-8911 .



Note:

If you need help using another manufacturer's software with an EPSON product, see the documentation for that program for technical support information.

To speak to a technical support representative, dial (310) 787-6346 (U.S.) 6 AM to 8 PM Pacific Time, Monday through Friday and 7 AM to 4 PM, Saturday, or (905) 709-2567 (Canada), 6 AM to 6 PM, Pacific Time, Monday through Friday. Toll or long distance charges may apply.

Before you call, please have the following information ready:

- Product name
- Product serial number
- Computer configuration
- Description of the problem

You can purchase ink cartridges, paper, manuals, and accessories from EPSON Accessories at (800) 873-7766 (U.S. sales only). In Canada, please call (800) 873-7766, for dealer referral. Or visit our website at www.epsonsupplies.com (U.S. sales only).



ENERGY STAR Compliance



As an ENERGY STAR Partner, EPSON has determined that this product meets the ENERGY STAR guidelines for energy efficiency.

The EPA ENERGY STAR Office Equipment program is a voluntary partnership with the computer and office equipment industry to promote the introduction of energy-efficient personal computers, monitors, printers, fax machines, and copiers in an effort to reduce air pollution caused by power generation.

Year 2000 Ready

Your EPSON Stylus COLOR 850Ne is *Year 2000 Ready*. However, be sure the other parts of your computer system are also ready for the year 2000.

**Caution:**

 Always turn the printer off using the  power button. If you're using a power strip, do not switch it off or unplug the printer until the  power light is off.


 

Important Safety Instructions


Before using your printer, read the following safety instructions to make sure you use the printer safely and effectively:

- Turn off and unplug the printer before cleaning. Clean with a damp cloth only. Do not spill liquid on the printer.
- Do not place the printer on an unstable surface or near a radiator or heating vent.
- Do not block or cover the openings in the printer's cabinet or insert objects through the slots.
- Use only the type of power source indicated on the printer's label.
- Connect all equipment to properly grounded power outlets. Avoid using outlets on the same circuit as photocopiers or air control systems that regularly switch on and off.
- Place the printer near a wall outlet where the plug can be easily unplugged.

Placez l'imprimante près d'une prise de contact où la fiche peut être débranchée facilement.

- Do not let the power cord become damaged or frayed.
- If you use an extension cord with the printer, make sure the total ampere rating of the devices plugged into the extension cord does not exceed the cord's ampere rating. Also, make sure the total ampere rating of all devices plugged into the wall outlet does not exceed the wall outlet's ampere rating.
- Except as specifically explained in this *User's Guide*, do not attempt to service the printer yourself.

- ▶ Unplug the printer and refer servicing to qualified service personnel under the following conditions:
If the power cord or plug is damaged; if liquid has entered the printer; if the printer has been dropped or the cabinet damaged; if the printer does not operate normally or exhibits a distinct change in performance. Adjust only those controls that are covered by the operating instructions.
- ▶ Do not put your hand inside the printer or touch the cartridge during printing.
- ▶ Under normal circumstances, ink will not come out of the cartridge. If it does get on your skin, wash it off with soap and water. If it gets in your eyes, flush them immediately with water.
- ▶ Keep ink cartridges out of the reach of children.
- ▶ Do not dismantle the ink cartridges or try to refill them. This could result in damage to the print head.
- ▶ Once you install an ink cartridge, do not open the clamp or remove the cartridge except to replace it with a new one. The cartridge may become unusable otherwise.
- ▶ Install the ink cartridge immediately after you remove it from its foil package. Leaving the cartridge unpacked for a long time before use may result in reduced print quality.
- ▶ Do not use an ink cartridge beyond the date printed on the cartridge carton. For best results, use up the ink cartridges within six months of installing them.
- ▶ Do not shake an ink cartridge; this can cause leakage.
- ▶ Always turn the printer off using the  power button. When you press this button, the  power light flashes briefly then goes out. Do not unplug the printer or turn off the power to the outlet until the  power light is off.
- ▶ Before transporting the printer, make sure the print head is capped in the far right position and the ink cartridges are in place.

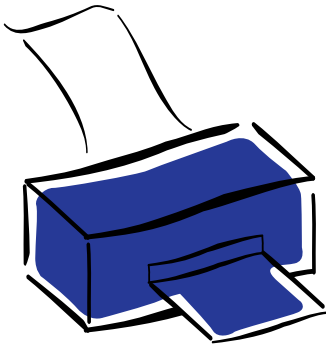

1

Basic Printing



Note:
Setup instructions for
NetWare using
PCONSOLE, OS/2, and
UNIX are in the
Administrator's Guide.
Appendix B has DOS
support information.

It's easy to print all your color and black-and-white documents with your EPSON Stylus COLOR 850Ne. First set up your printer, install the software, and configure the card on the network, following the instructions in the *Setup Guide*. Then read this chapter to find out about:

- ▶ Printing from Windows
- ▶ Printing from a Macintosh
- ▶ What to do when the printer lights flash

Printing from Windows

To print from a Windows application, you choose **Print** from the **File** menu. You can then choose which pages to print, the number of copies, and other options from your application's **Print** dialog box.

When you click a button in the **Print** dialog box, you select additional settings using your printer software, such as the media type you've loaded and the resolution you want to use.

The following sections tell you how to do the following:

- ▶ Select printer software settings and print from Windows applications
- ▶ Change the default printer software settings
- ▶ Check your printer's status while you print

Setting Printer Options from Windows Applications

This section describes the settings you'll need to check for all your everyday printouts. See Chapter 3 for information about advanced settings for special print jobs.



Note:


You can also set printer options by clicking **Print Setup** in the File menu, then clicking the **Printer, Setup, Properties, or Options** button.

However, in most applications you'll then have to select the **Print** option from the File menu to print using your changes.

1. Open your word processor or other Windows software application and open a file you want to print.
2. Choose **Print** from the File menu. You see the Print dialog box for your application.
3. Make sure your EPSON Stylus COLOR 850 printer is selected, and then click the **Printer, Setup, Properties, or Options** button. (You may have to click a sequence of buttons in different dialog boxes.)

You see the printer settings dialog box:

Use the Quality/Speed slider to select your print resolution

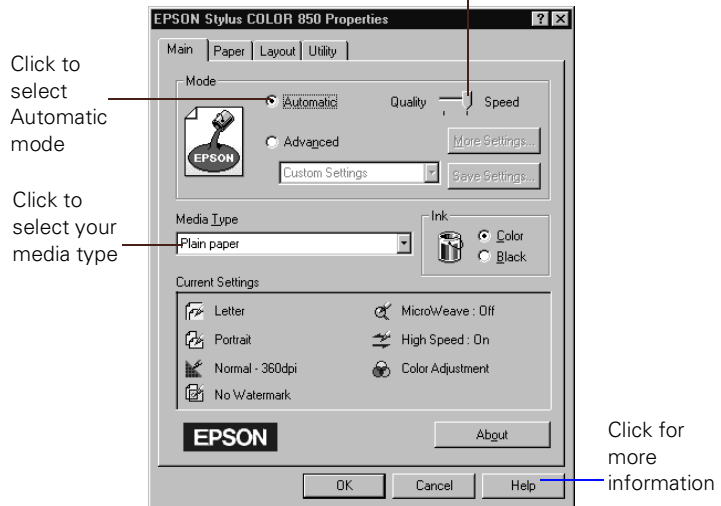

Click to select Automatic mode

Click to select your media type

Click for more information



For more information about printer settings, click the **Help** button. In Windows 98, Windows 95, and Windows NT, you can right-click any item on the screen and then click **What's This?**

4. Click the **Main** tab if necessary and make sure the Mode option is set to **Automatic**. This is the easiest way to get good printing results for all kinds of documents, on all types of paper.



To print at the highest resolution (1440 dpi), you can use plain paper, Photo Paper, or one of the Photo Quality media. For the best printing at any resolution, always use EPSON media.

The Quality/Speed slider is not available for certain media types.



Note:

See Chapter 3 for detailed instructions on using printer, layout, and paper settings.

If you installed Status Monitor 2, you may want to click the Utility tab and open the Printer Status window. See Chapter 4 for information on Status Monitor 2; see Chapter 5 for instructions on using the other utilities on the Utility tab.

5. Choose the **Media Type** you want to print on from the following list:

- Plain paper
- 360 dpi Ink Jet Paper
- Photo Quality Ink Jet Paper
- Photo Paper
- Photo Quality Glossy Film
- Ink Jet Transparencies

The type of paper or other media you choose determines the print quality (resolution) you can use. If you're not sure which setting to select for your media, see the table on page 2-1.

6. Choose **Color** or **Black** ink.
7. Set the slider to **Quality** or **Speed**. This lets you choose between the fastest printing or highest resolution for the media you're using.

To use the highest resolution available for plain paper (1440 dpi), access the More Settings dialog box. (Click **Advanced**, then click **More Settings**.)

8. Click the **Paper** tab and choose your paper size, number of copies, orientation, and printable area.
9. Click the **Layout** tab (not available in Windows 3.1x) and check the proportional printing, page layout, and watermark options to make sure they're correct for your print job.
10. Click **OK** when you're finished checking your settings.
11. In the Print dialog box, click **OK** or **Print**. You may need to click a sequence of these buttons on different dialog boxes.

While your document is printing, a dialog box appears showing the printer status and the progress of your print job. See “Checking Printer Status” on page 1-5 for more information.



Note:
Some application settings override driver settings (such as Paper Size or Orientation), so it's a good idea to check the settings in your application before you print. See page 1-2 for instructions.

Setting Default Printer Options

When you change printer settings through your software application, the settings apply only to the application you're using. To adjust the default settings for **all** your Windows applications, access the settings through the Windows 98, Windows 95, or Windows NT 4.0 Printers utility or the Windows 3.1 Control Panel. (Close all your applications before you start. If you don't, you may have to close and reopen them to use the new default settings.)

Setting Default Options in Windows 98 and Windows 95

1. Click **Start**, point to **Settings**, and select **Printers**.
2. Right-click the **EPSON Stylus COLOR 850** icon.
3. Select **Properties**. You see the printer software dialog box, as shown on page 1-2.



Note:
You can access the default Windows NT printer software settings only if you have the appropriate network access privileges, such as Administrator or Power User.

Setting Default Options in Windows NT 4.0

1. Click **Start**, point to **Settings**, and select **Printers**.
2. Double-click the **EPSON Stylus COLOR 850** icon.
3. Open the **File** menu and select **Document Defaults**. You see the printer software dialog box, as shown on page 1-2.

Setting Default Options in Windows 3.1


1. Double-click the Control Panel icon in the Main group.
2. Double-click the Printers icon.
3. Select EPSON Stylus COLOR 850 from the list of printers and click Setup. You see the printer software dialog box, as shown on page 1-2.

Checking Printer Status

While your document is printing, your printer software reports how the job is doing. See the section for your operating system below.

Windows 98 and Windows 95

After you send a print job in Windows 98 or Windows 95, the Progress Meter dialog box appears on your screen:

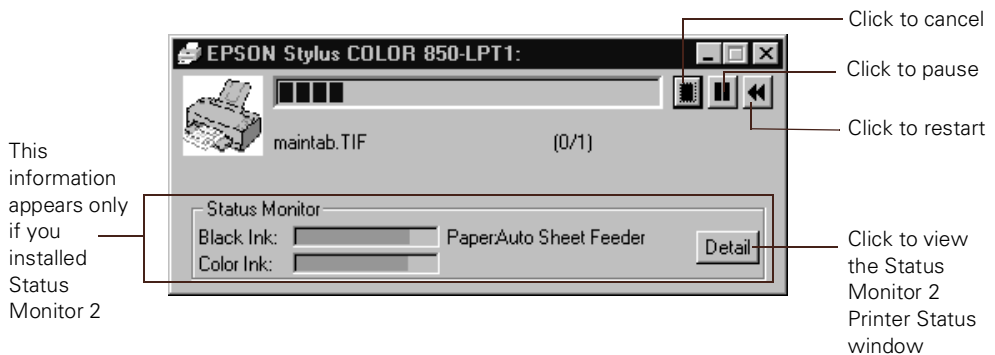

The Progress Meter shows the progress of your print job and the status of your printer. You can use the buttons to cancel, pause, or restart your print job. If you installed Status Monitor 2, you also see information about how much ink you have left and can view the Status Monitor 2 Printer Status window. See page 4-2 for more information about Status Monitor 2.

You can set up the way your printer software sends print jobs and select whether to display the Progress Meter dialog box or not; see page 4-9 for instructions.

Windows NT 4.0

If you installed Status Monitor 2, you see information about how much ink you have left and can view the Status Monitor 2 Printer Status window. See page 4-2 for more information. Windows NT 4.0 servers and workstations also include a messenger service to alert you to printer errors or let you know when a print job is finished. If you have appropriate network access privileges or you're controlling printing from the server, you can also cancel, pause, or restart print jobs and set other options. See your Windows NT documentation for details.

Windows 3.1

After you send your print job, the EPSON Despooler dialog box appears on your screen:



This dialog box shows the progress of your print job and the status of your printer. If you run out of paper while printing, for example, the Despooler warns you. You can use the buttons to cancel, pause, or restart your print job.

Printing from a Macintosh

When you print with a Macintosh, you need to check the printer software settings for documents in each application you use. When you choose **Page Setup** or **Print** from the File menu, you see the printer software dialog boxes that let you choose the settings that describe your print job—such as the media type you’ve loaded and the resolution you want to use.



Note:


On the Macintosh, printer settings are saved with your document, but you can’t save them from one application to another. You’ll have to check your settings each time you open a new application. If you want to reuse settings, you can create document templates for your favorite applications.

You can also create custom setting groups in your printer software that you can select each time you open an application. See page 3-33 for details.

This section describes the settings you’ll need to check for all your everyday printouts. See Chapter 3 for information about advanced settings for special print jobs.


Follow these steps to print from a Macintosh:

1. Open your word processor or other Macintosh software application and open a file you want to print.
2. Choose **Page Setup** from the File menu. You see the Page Setup dialog box:

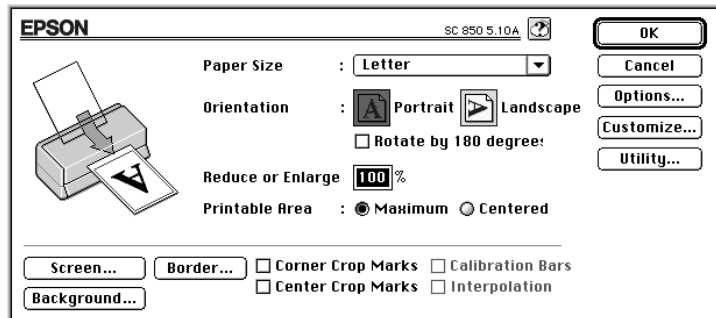

3. Choose your paper size, orientation, and other options as described on page 3-15 and click **OK**.

- Now select **Print** from the File menu in your application. You see the printer settings dialog box:

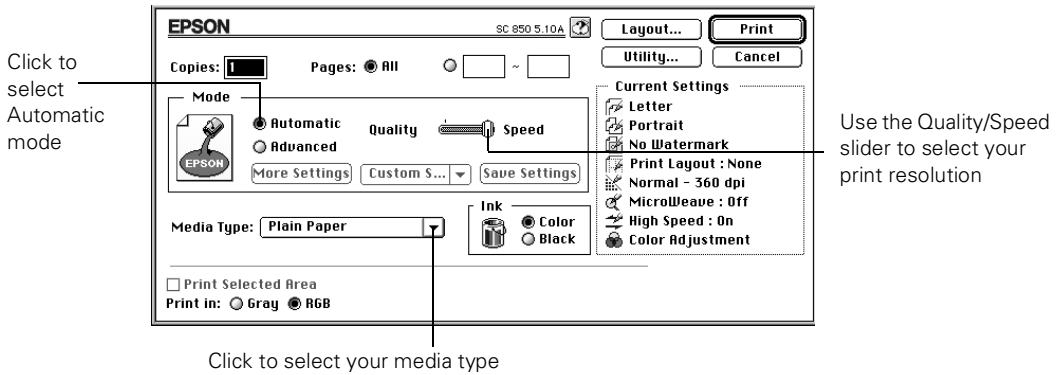

- Choose the number of copies and indicate which pages you want to print.
- Make sure the Mode option is set to **Automatic**. This is the easiest way to get good printing results for all kinds of documents, on all types of paper.
- Choose the **Media Type** you want to print on from the following list:



For printing at the highest resolution (1440 dpi), you need to use plain paper, Photo Paper, or one of the Photo Quality media. For the best printing at any resolution, always use EPSON media.

- Plain Paper
- 360 dpi Ink Jet Paper
- Photo Quality Ink Jet Paper
- Photo Paper
- Photo Quality Glossy Film
- Ink Jet Transparencies

The type of paper or other media you choose determines the print quality or resolution you can use. If you're not sure which setting to select for your media, see the table on page 2-1.

- Choose **Color** or **Black** ink.



Note:

The Quality/Speed slider is not available for certain media types.


For detailed instructions on using page layout options, see Chapter 3.

You may want to click the Utility button and open the Status Monitor window. See page 4-5 for more information. See Chapter 5 for instructions on using the other utilities available in the Utility dialog box.



9. Set the slider to **Quality** or **Speed**. This lets you choose between the fastest printing or the highest resolution for the media you're using. To use the highest resolution available for plain paper (1440 dpi), access the More Settings dialog box; see page 3-4 for instructions.
10. Click the **Layout** button and check the proportional printing, watermark, and page layout options to make sure they're correct for your print job. Then click **OK** to return to the printer settings dialog box.
11. Click **Print** when you're finished checking your settings.


 
If you chose background printing when you set up your printer, you can continue working while your document is printing. See "Using Monitor3" on page 4-16.

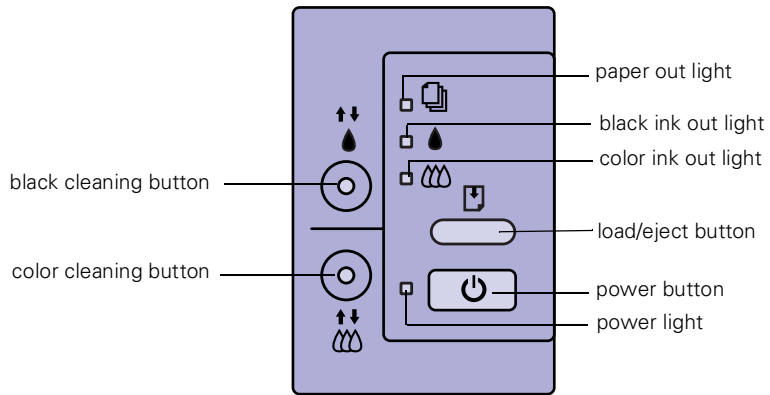

What To Do When the Printer Lights Flash






The four lights on your printer's control panel show the printer's status and alert you to problems like paper jams.





 When the paper out light *flashes*, paper is jammed in the printer. Turn off the printer and gently pull out all jammed paper. Then press the  load/eject button. See page 6-14 for more information.


 When the paper out light *comes on*, your paper ran out or is incorrectly loaded. Load paper in the feeder and then press the  load/eject button.

  When an ink out light *flashes*, your ink supply is low. Make sure you have a replacement cartridge.

  When an ink out light *comes on*, you need to replace the ink cartridge. See Chapter 5 for instructions.

 When the power light *flashes*, the printer is receiving a print job or performing a maintenance operation.

    When two or more lights *flash*, your printer may have a problem. See page 6-9 for more information.

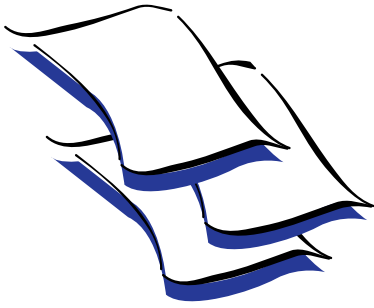

2

Printing on Special Paper



Note:

Be careful when printing on special paper over the network. If anyone else sends a job to the printer, your paper may be wasted. Or, with smaller paper, ink may spray inside the printer.

Your EPSON Stylus COLOR 850Ne lets you print on just about any kind of paper you want to use. You can get great results printing on various sizes of plain paper, letterhead, and envelopes, but you'll get even better results with specially coated ink jet paper.

For the best output, use EPSON's photo-quality media: ink jet paper, glossy paper, glossy film, index cards, and photo paper. For special projects, you can use a variety of EPSON media designed for ink jet printers, ranging from transparencies to iron-on transfer paper.

Using Special Paper and Media

When you print on special media, you need to be careful about choosing the correct Media Type and Paper Size settings in your printer software. The table below lists the available EPSON media and the corresponding Media Type setting for each one in your printer software.

EPSON ink jet media and their settings

Media name	Size	Part number	Media Type setting
EPSON 360 dpi Ink Jet Paper	Letter A4	S041060 S041059	360 dpi Ink Jet Paper
EPSON Iron-on Cool Peel Transfer Paper	Letter	S041153/S041155	
EPSON Special Coated Paper for 360 dpi Printing	Letter	S041060	

Printing on Special Paper

EPSON ink jet media and their settings

Media name	Size	Part number	Media Type setting
EPSON High Quality Ink Jet Paper	Letter A4	S041111 S041117	Photo Quality Ink Jet Paper
EPSON Photo Quality Ink Jet Paper	Letter A4 Legal	S041062 S041061 S041067	
EPSON Special Coated Paper for 720 dpi Printing	Letter	S041062	
EPSON Photo Quality Ink Jet Cards	4.1 × 5.8 (A6) 8 × 10	S041054 S041122	
EPSON 720 dpi Index Cards	4.1 × 5.8 (A6)	S041054	
EPSON Photo Quality Self Adhesive Sheets	A4	S041106	
EPSON Photo Quality Glossy Paper	Letter A4	S041124 S041126	Photo Paper
EPSON Photo Paper	4 × 6 Letter A4 Panoramic	S041134 S041141 S041140 S041145	
EPSON Photo Quality Glossy Film	Letter A4 4.1 × 5.8 (A6)	S041072 S041071 S041107	
EPSON High Quality Glossy Paper	Letter	S041072	Photo Quality Glossy Film
EPSON Photo Sticker Kit (CD-ROM and paper)	4.1 × 5.8 (A6)	S041144-KIT	
EPSON Photo Stickers (refill)	4.1 × 5.8 (A6)	S041144	
EPSON Ink Jet Transparencies	Letter A4	S041064 S041063	Ink Jet Transparencies
EPSON Iron-On Transfer Paper	Letter	SE41001/SE41002	

To order EPSON papers and other media, contact your dealer or call EPSON Accessories at **(800) 873-7766** (U.S. sales only). In Canada, call **(800) 873-7766** for dealer referral. Or visit our website at www.epsonsupplies.com (U.S. sales only).

The type of paper or other media you use is one of the most important factors in determining the quality of your printed output. The following tips will help you get the best results on any type of paper or other media.




Note:

When you load paper, make sure the printable side is facing up. Some special media have a cut corner that you need to position in the upper right of the paper support. Also follow any instructions in the package. Always handle sheets by the edges, and don't touch the printable surface.

Letterhead, Preprinted Forms, and Legal-size Paper

Load the top edge first. When you load long paper, pull up the paper support extension and both output tray extensions.

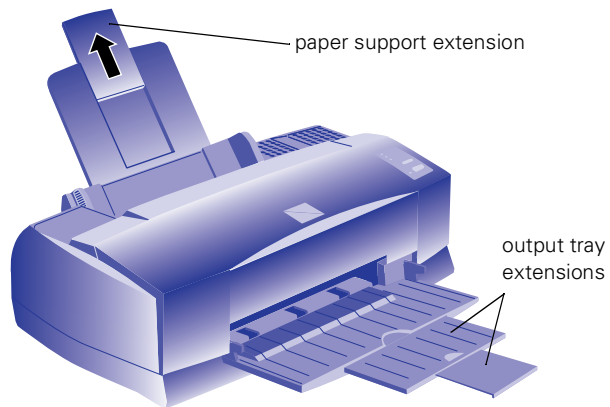

Caution:

Don't use the cleaning sheets that may be included with your special media; they may jam inside the printer.

EPSON 360 dpi, High Quality, and Photo Quality Ink Jet Paper

You can load paper up to the arrow mark on the left edge guide. If you use legal-size ink jet paper, don't load it more than half way to the arrow mark.

EPSON Photo Quality Glossy Paper, Film, and Transparencies

Before you load glossy film or transparencies, put a support sheet (packed with the media) or a plain paper sheet beneath the stack. (Don't use a support sheet with Photo Quality Glossy Paper.) You can load up to 20 sheets of glossy paper, up to 30 sheets of glossy film, or up to 10 transparencies.




Note:

Use ink jet papers within one year of purchase. Use glossy media and transparencies within six months. Return unused sheets and envelopes to their original package as soon as possible. See Appendix B for more storage information.

However, you may get better results by loading one sheet at a time. With multiple sheets loaded, the minimum top margin you can use is 1.2 inches (30 mm). If you want to use a smaller top margin, load and print one sheet at a time.

Remove each sheet from the output tray immediately after it's printed. Make sure each sheet is dry before stacking. If your media package included protective sheets, cover the printed side of your media with these sheets before stacking.

To print on transparencies, remove the paper support and reposition it in the slots at the back of the paper support holder:

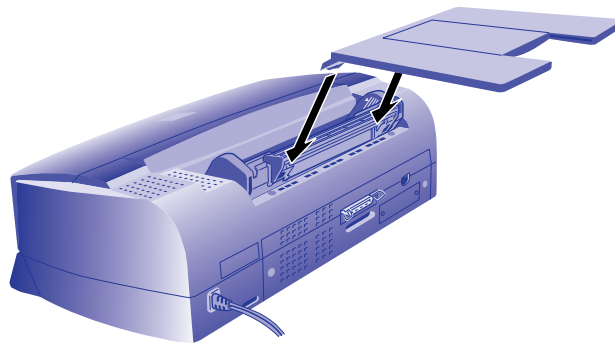




Note:

Load the envelopes flap edge first and printable side up. Also select the correct envelope size for the Paper Size setting in the printer software.


Envelopes

You can load up to 10 envelopes as shown below:

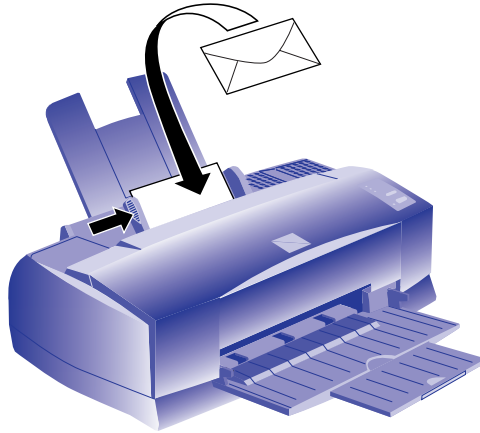

If ink smears when you print on envelopes or other thick media, set the paper thickness lever to the + position. Open the printer cover and position the lever as shown below. (Make sure you return the lever to the 0 position before you print on other media.)

Set the thickness lever to + if ink smears when you print on thick media

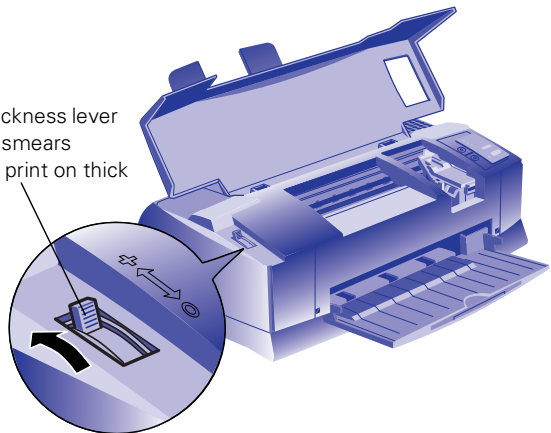



Note:

To keep your printouts looking their best, store them in a resealable plastic bag or other airtight covering and protect them from heat, humidity, and direct sunlight.


Be sure to support your Panoramic Photo Paper as it ejects from the printer so it doesn't fall onto the floor.


EPSON Photo Paper

You can use EPSON Photo Paper to print photographs that look almost as good as the ones you get from film processing. 4 × 6-inch Photo Paper is perforated around the edges, so you can trim your printouts and “bleed” the photo—extend it to the edge of the paper—on all sides.


You can load up to 20 sheets of 4 × 6-inch, Letter-size, or A4-size Photo Paper or 1 sheet of Panoramic paper at a time. Make sure you place a support sheet beneath the paper if it is included in the paper package.

Keep the following in mind when using EPSON Photo Paper:

- ▶ Load the paper with the whiter side facing up.
- ▶ If you're loading Panoramic Photo Paper, pull up the paper support extension as shown on page 2-3. Then load the Panoramic paper and hold up its top edge while you press the  load/eject button to feed it into the printer.
- ▶ If you're loading 4 × 6-inch Photo Paper, position the perforated margins as shown:

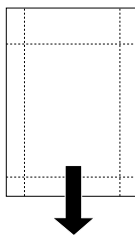

- ▶ When you create an image for printing on 4 × 6-inch Photo Paper in your application software, size it to 4.25 × 6.25 inches. For other sizes of Photo Paper, see Appendix B for the maximum printable area specifications.

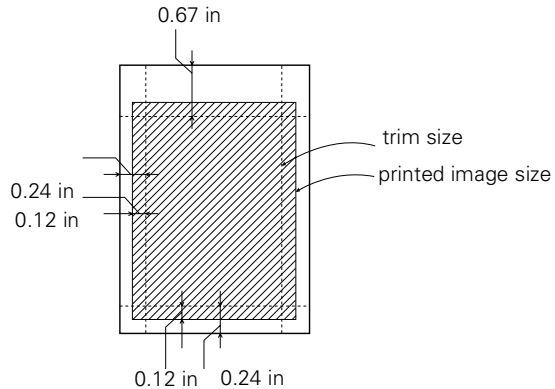

You can use 4 × 6-inch EPSON Photo Paper like a postcard. Simply print your image on the glossy side of the paper using Photo Paper as the Media Type setting and let your image dry. Then print your message on the uncoated side of the paper using 360 dpi Ink Jet Paper as the Media Type setting.

- ▶ Choose these printer software settings for your size of Photo Paper:
 - ▶ Choose **Photo Paper** as the Media Type setting.
 - ▶ For 4 × 6-inch Photo Paper, select **EPSON Photo Paper 4 × 6 in** as the Paper Size setting and **Maximum** as the Printable Area setting. After you print, fold the paper back and forth along the perforations and carefully tear the margins off.
 - ▶ For Letter- or A4-size Photo Paper, select **Letter** or **A4** as your Paper Size setting.
 - ▶ For Panoramic Photo Paper, choose **Panoramic 210 × 594 mm** as the Paper Size setting.

EPSON Photo Quality Ink Jet Cards

You can load up to 30 cards at a time. Always place the included support sheet under the cards. When you're ready to print, use your software to set the **Paper Size** option for the size card you're using. Make sure you set the paper thickness lever to the + position as shown on page 2-5.



For iron-on transfers, make sure you reverse your image before you print it, especially if it includes text. Then the text will read correctly when it's transferred. You can use the **Flip Horizontal** option in your printer software. See page 3-6 for more information.

EPSON Photo Quality Self Adhesive Sheets

Use these sheets to print labels or stickers. You can load one sheet at a time. Make sure your adhesive sheets are fully adhered to their backing sheet before you load them.

EPSON Iron-On Transfer Paper

You can print photos, company logos, or anything else you want on this paper, and then transfer your images to T-shirts or other cloth items. Load one sheet of transfer paper at a time. After you print, follow the instructions that came with the paper to iron the image onto the shirt or other item.

Be sure to select **Ink Jet Transparencies** as the **Media Type** setting for the best results.



3 *Custom Printing*

When your presentation graphics, photographs, or other projects have special printing requirements, you can use the custom settings in your EPSON Stylus COLOR 850 software. You can choose predefined settings or adjust individual options like brightness, contrast, saturation, and halftoning. For professional-quality color accuracy, you can use Image Color Matching (ICM) under Windows 98 and Windows 95 or ColorSync on the Macintosh.

If you're using Windows 98, Windows 95, Windows NT, or a Macintosh, your printer software's print layout options let you print almost any size image on your printer, proof multiple pages on one sheet of paper, and add watermarks.

This chapter includes the following information:

- ▶ Using predefined advanced settings
- ▶ Customizing print quality and special effects
- ▶ Customizing color settings
- ▶ Using ColorSync on the Macintosh
- ▶ Selecting paper size and orientation options
- ▶ Selecting print layout, page frame, and watermark options
- ▶ Saving custom settings

Using Predefined Advanced Settings


Predefined settings provide an easy way to fine-tune your printer's operation for special image types. Follow these steps to print with predefined settings:

1. Create your image or document in your application.
2. Access the printer settings dialog box: choose **Print** from your application's File menu. (You may need to choose **Page Setup** for Macintosh.)

For Windows, click the **Printer, Setup, Properties, or Options** button. (For more detailed instructions, see page 1-2 [Windows] or page 1-7 [Macintosh].)

You see one of the following dialog boxes:

Click **Advanced**, then click here to see a list of project types

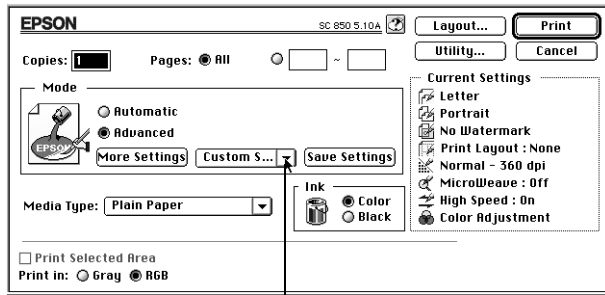

Click **Advanced**, then click here to see a list of project types

Windows

Macintosh

3. Choose **Color** or **Black** ink.
4. Click **Advanced**, and then **Custom Settings**. You see the list of project types.



Note:

Always choose your Ink setting before you select a project from the Custom Settings list.

Selecting PhotoEnhance or PhotoEnhance2, ICM, or ColorSync automatically sets the Ink option to Color.

Printing with PhotoEnhance or PhotoEnhance2 may take longer, depending on your computer system and image.



Photo, PhotoEnhance, and PhotoEnhance2 have similar effects. However, PhotoEnhance and PhotoEnhance2 intelligently analyze your image data and their effect varies widely depending on your image. The Photo setting consistently increases the contrast. You may want to experiment to choose the best setting for your image.

5. Choose the right setting following these guidelines:

- **Photo**
For printing scanned photographs. Increases contrast in the image.
- **Text/Graph**
For printing graphics-intensive documents like presentation pages with charts and graphs. Intensifies colors and lightens the midtones and highlights.
- **PhotoEnhance2 or PhotoEnhance™ (Windows 3.1 only)**
For video camera, digital camera, or scanner images. Produces sharper images and more vivid colors by automatically adjusting the contrast, saturation, and brightness. Corrects for overall under- and over-exposure of the original image.
- **Economy**
For rough drafts of text only, on plain paper. Saves ink.
- **ICM (Windows 98/Windows 95 only)**
Automatically adjusts printout colors to match the colors on your screen. Not available when printing on plain paper or Ink Jet Transparencies.
- **ColorSync (Macintosh only)**
Automatically adjusts printout colors to match the colors on your screen. Not available when printing on plain paper or Ink Jet Transparencies. For more information, see page 3-9.

6. Choose the **Media Type** you want to print on. (If you're not sure which setting to select, see the table on page 2-1.)

7. In Windows, click the **Paper and Layout** (not available on Windows 3.1) tabs to check or change any necessary settings, as described on page 3-11 and page 3-15.

On a Macintosh, check or change any necessary settings on the Page Setup and the Layout dialog boxes as described on page 3-15 and page 3-27.

- When you're finished, click **Print** (Macintosh) or **OK** (Windows). If you're using Windows, click any other buttons that your application uses for printing.



After you customize your print settings for a special project, you can save them as a group. Then you can reuse them whenever you print a similar project. See page 3-33 for instructions.

Customizing Print Quality and Special Effects

If you need the maximum control over your project, or you want to experiment with special effects, you can adjust individual settings in your printer software. Follow these steps:


- Create your document, image, or project in your application software.
- Access the printer settings dialog box: choose **Print** from your application's File menu. (You may need to choose **Page Setup** for Macintosh.)

For Windows, click the **Printer, Setup, Properties, or Options** button. (For more detailed instructions, see page 1-2 [Windows] or page 1-7 [Macintosh].)

- Click **Advanced**, and then click **More Settings**. You see the More Settings dialog box:

Click here to change your Print Quality (resolution)


Some of these options are automatically set or disabled by other settings you choose

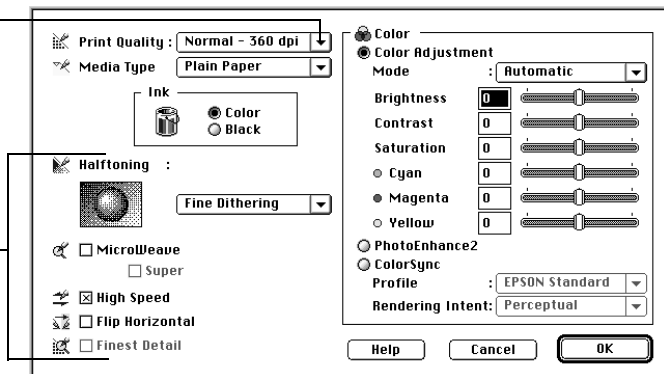

Macintosh

Click here to change your Print Quality (resolution)

Some of these options are automatically set or disabled by other settings you choose

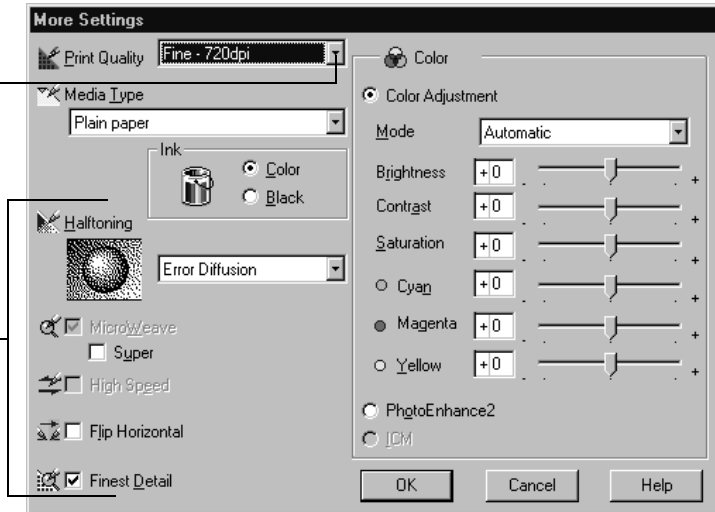

Windows



Note:
The **Print Quality** is selected automatically depending on the current Media Type. If you choose a Print Quality setting that is not appropriate for your media, the driver changes the Media Type setting. Be sure to check both of these settings.

4. Choose one of the following **Print Quality** options:
 - ▶ **Economy**
For low-resolution rough drafts on plain paper. Saves ink.
 - ▶ **Normal - 360 dpi**
For most documents on plain paper, transparencies, or 360 dpi Ink Jet paper.
 - ▶ **Fine - 720 dpi**
For high-resolution output on plain paper, Photo Paper, or Photo Quality media.
 - ▶ **SuperFine - 1440 dpi**
For the highest-resolution output on plain paper, Photo Paper, or Photo Quality media.
5. Choose the **Media Type** and **Ink** settings you want to use, following the guidelines in Chapters 1 and 2.



Note:

In Automatic mode, the Halftoning setting is selected based on the data in your print job. In Advanced mode, Halftoning is preselected for each project type setting. No Halftoning is available only when you select Black as the Ink setting.

Some of the print options at the bottom left of the More Settings window are automatically selected or disabled by the Print Quality (resolution) you choose.



If vertical lines in your printout are misaligned when you use the **High Speed** setting, you may need to align the print heads. See Chapter 5 for instructions.

6. Choose one of the following **Halftoning** options:
 - ▶ **No Halftoning**
For printing black text only.
 - ▶ **Error Diffusion**
For printing photographic or video/digital camera images. Blends each color dot with the dots around it.
 - ▶ **Fine Dithering, Coarse Dithering**
For printing graphs or other images that require precise, solid areas of bright colors. Use **Coarse** for images with more shading and less detail. Use **Fine** for images with more detail and less shading.

7. Choose any of the following print options.
 - ▶ **MicroWeave**
For improved print quality. Prints graphic data in finer increments to eliminate unwanted banding effects (light horizontal lines). Always use for color printing.
 - ▶ **Super MicroWeave**
Increases the **MicroWeave** function when you're printing with **Fine - 720 dpi** Print Quality on plain paper or using **SuperFine - 1440 dpi** with photo paper or one of the photo quality media.
 - ▶ **High Speed**
For fast, bidirectional printing at lower quality.
 - ▶ **Flip Horizontal**
Prints a mirror image of your document. Use for printing with iron-on transfer paper so your ironed-on printout will read correctly.
 - ▶ **Finest Detail**
For printing text, graphics, and line art with very sharp edges. Slows print speed and increases your system memory requirements.

8. Click **OK** if you're ready to return to the printer settings dialog box, or see the next section if you want to adjust your printer's color settings.

Customizing Color Settings


Choose from several color adjustment modes or manually adjust brightness, contrast, saturation, and CMY color values. Or, to correct digital images, you can use PhotoEnhance2 (PhotoEnhance on Windows 3.1). To achieve the maximum color accuracy, you can use Image Color Matching (ICM; Windows 98/Windows 95) or ColorSync (Macintosh).

Follow these steps to customize your color settings:

1. Create your document, image, or project in your application software.
2. Choose Print from your application's File menu. (You may need to choose **Page Setup** for Macintosh.)

For Windows, click the **Printer, Setup, Properties, or Options** button. (For more detailed instructions, see page 1-2 [Windows] or page 1-7 [Macintosh].)

3. Click **Advanced**, and then click **More Settings**. You see the More Settings dialog box. The color settings appear on the right side of the dialog box, as shown:

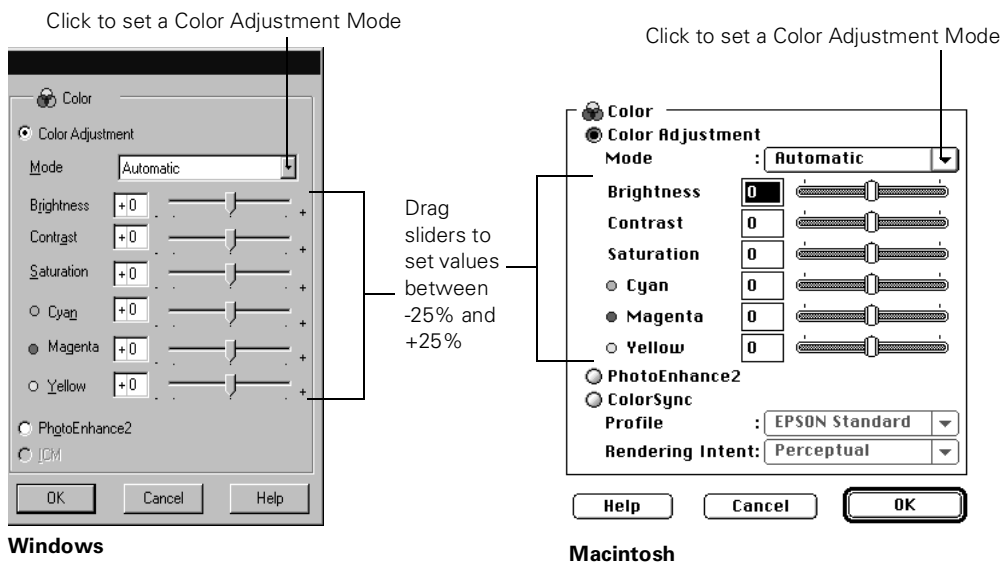

4. Choose one of the following **Color Adjustment Modes**. (You don't need to select any of these options if you'll be using ICM [Windows 98/Windows 95] or ColorSync [Macintosh] as described in step 4.)
 - ▶ **Automatic**
Analyzes the color information in your project and optimizes color correction accordingly.
 - ▶ **Photo-realistic**
For printing color photographs.
 - ▶ **Vivid**
For printing graphics-intensive documents like presentation pages with charts and graphs. Intensifies colors and lightens the midtones and highlights.
 - ▶ **No Color Adjustment**
Disables the color adjustment features of the printer software so you can use a stand-alone color management utility.

5. If you want to specify individual color correction values, use the sliders to increase (drag right) or decrease (drag left) the settings listed below. (If you use one of the options described in step 4, you won't be able to specify individual color correction values.)
 - ▶ **Brightness**
Makes your image lighter or darker.
 - ▶ **Contrast**
Increases or decreases the difference between the bright or dark parts of an image.
 - ▶ **Saturation**
Makes colors more vivid or less vivid.
 - ▶ **Cyan, Magenta, Yellow**
Increases or decreases the amount of the three ink colors that combine to make a full-color picture. Use these sliders to fine-tune the color balance in your printout.



Note:
When you choose PhotoEnhance, PhotoEnhance2, ICM, ColorSync, or No Color Adjustment all the other color options are preset.

6. For even more fine-tuning, choose one of these color correction methods:
 - ▶ **PhotoEnhance2** or **PhotoEnhance** (Windows 3.1 only)
Produces sharper images and more vivid colors by automatically adjusting the contrast, saturation, and brightness. Corrects for overall under- and over-exposure of the original image.
 - ▶ **ICM** (Windows 98/Windows 95 only)
Automatically adjusts printout colors to match colors on the screen.
 - ▶ **ColorSync** (Macintosh only)
Automatically adjusts printout colors to match colors on the screen. See the next section for more information.
7. Click **OK** to return to the printer settings dialog box.

Using ColorSync on the Macintosh

Every device you use for producing or viewing colors—your monitor, scanner, and printer—employs a different color technology. That's why it's difficult to get printed colors to match the colors displayed on your monitor or other device. The Macintosh ColorSync system helps you control all your devices so their colors match your printer's as closely as possible.

ColorSync uses profile information from each device—including your EPSON Stylus COLOR 850Ne printer—to achieve accurate color matching. First you have to make sure your monitor's profile is set. Then you can use your printer software to specify the exact method of color matching you want to use.

Follow these steps to set your monitor's ColorSync profile and use your printer software's ColorSync features:

1. Open the **ColorSync System Profile** under **Control Panels** on the Apple menu.
2. Click the **Set Profile** button.
3. Select your monitor from the list, and then click **Select**.
4. Close the **ColorSync System Profile**.
5. Access the **More Settings** dialog box as described on page 3-4.
6. Click **ColorSync**.
7. For **Profile**, choose **EPSON Standard**. This is the ColorSync profile created especially for your printer. **Don't choose any other printer profile you may have on your system.**
8. Choose one of the following options for **Rendering Intent**:
 - ▶ **Perceptual**
For printing scanned photographs.
 - ▶ **Saturation**
For printing graphics-intensive documents like presentation pages with charts and graphs.
 - ▶ **Colorimetric**
For matching colors on your screen as exactly as possible. Reproduces colors the way your eye distinguishes them.
9. Click **OK** to return to the printer settings dialog box.

Selecting Paper Size and Orientation Options

Your printer can print on paper up to 9.5 inches wide and up to 44 inches long in either portrait or landscape orientation. For multiple page documents or multiple copies of documents, you can print the pages collated and in reverse order. You can even rotate the printed image by 180 degrees to make it closer to the bottom of the paper (not available with Windows 3.1).


Selecting Paper Options in Windows

Follow these steps to select paper options on the Paper tab:

1. Create your document, image, or project in your application software.
2. Choose Print from your application's File menu. (You may need to choose **Page Setup** for Macintosh.)

For Windows, click the **Printer, Setup, Properties, or Options** button. (For more detailed instructions, see page 1-2 [Windows] or page 1-7 [Macintosh].)

3. Click the **Paper** tab. You see the Paper dialog box:

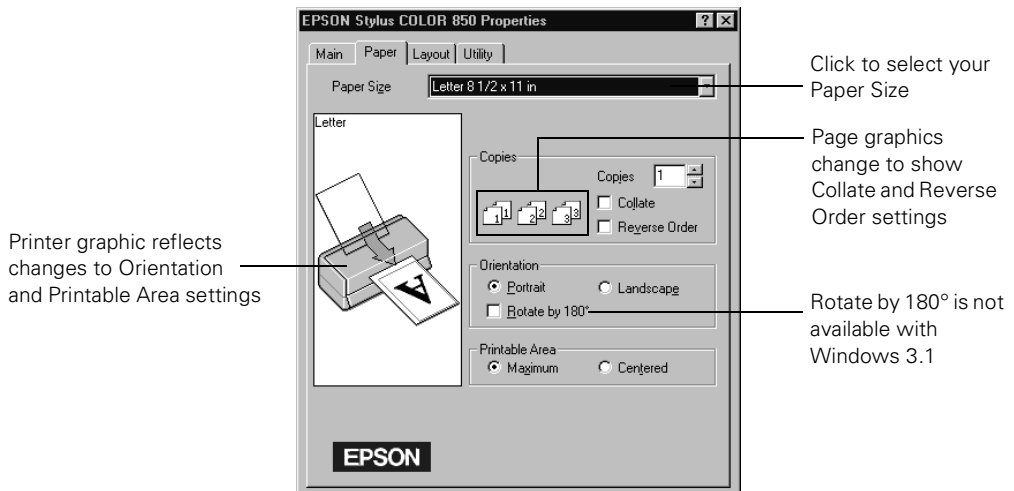



Note:

If the Proportional Printing setting is set to Normal and you select one of the paper sizes to the right that is marked with an asterisk (*), you see a dialog box asking you to select a paper size that fits your printer. See page 3-20 for more information.

4. Click the **Paper Size** drop-down list to select the size of paper you loaded in the printer.

The sizes marked with an asterisk (*) are not available with Windows 3.1. These sizes are larger than you can load in your printer and can be used only with the **Proportional Printing** setting on the **Layout** tab; see page 3-20.

A4 210 × 297 mm
B5 182 × 257 mm
A5 148 × 210 mm
Letter 8 1/2 × 11 in
Legal 8 1/2 × 14 in
Executive 7 1/4 × 10 1/2 in
Half Letter 5 1/2 × 8 1/2 in
A6 Index card 105 × 148 mm
Index card 5 × 8 in
Index card 8 × 10 in
Envelope #10 4 1/8 × 9 1/2 in
Envelope DL 110 × 220 mm
Envelope C6 114 × 162 mm
Photo Paper 4 × 6 in
Panoramic 210 × 594 mm
B4 257 × 364 mm *
B3 364 × 514 mm *
Ledger 11 × 17 in *
A3 297 × 420 mm *
Super A3/B 329 × 483 mm *
A2 420 × 594 mm *
US C 17 × 22 in *
User Defined (See page 3-14 for instructions.)


5. If you did not or cannot select the number of copies you want to print in your application program's Print dialog box, choose the number (from 1 to 99) in the **Copies** box. **Don't select the number of copies here and in your application's Print dialog box; you'll get twice the number of copies you want.**

6. If you're printing multiple copies of a multi-page document and you want the copies printed in sets, click the **Collate** checkbox. The page graphics change to show collated documents.
7. If you're printing a multi-page document and want the last page printed first so the pages come out without needing to be reordered, click the **Reverse Order** checkbox. The page graphics change to show later pages printing first.
8. Select the direction of printing on the page using the **Orientation** options. To print your document oriented as shown in one of the following printer graphics, select the options listed below it.




Note:


The Rotate by 180° setting lets you print the lower portion of a document first, with a bottom margin as small as 0.12 inch (3 mm) and a top margin as small as 0.55 inch (14 mm). This option is not available with Windows 3.1.

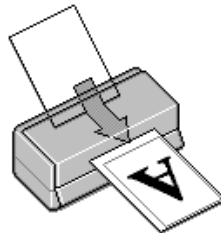


Portrait orientation

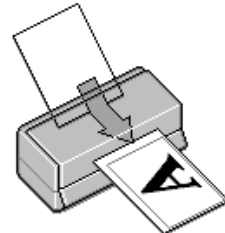

Landscape orientation

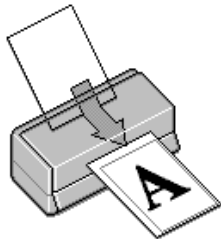

Portrait orientation
Rotate by 180°

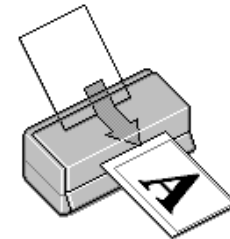

Landscape orientation
Rotate by 180°

9. To use the maximum printable area of your selected paper size, set the Printable Area option to **Maximum**. To center your document on the page, select **Centered**.
10. Click a tab for the settings you want to check or change next, or click **OK** to print your document.

Creating User Defined Paper Sizes




Note:

In Windows 98, Windows 95, and Windows NT, the Paper Width and Paper Height units are in hundredth of an inch (or centimeter) increments. For example, 850 equals 8.50 inches.


You can create up to 10 custom paper sizes (only one in Windows 3.1) and add them to the **Paper Size** list using the **User Defined** option. This is useful if you're printing a custom size document, such as a banner. You can select any width from 3.94 to 9.5 inches, and any height (length) from 3.94 to 44 inches.

Follow these steps to create a custom paper size with the **User Defined** option:

1. Follow the steps on page 3-11 to access the printer software and select the **Paper** tab.
2. Click the **Paper Size** list and scroll to the bottom of it using the arrows or scroll bar.
3. Click the **User Defined** option. You see one of the following dialog boxes:

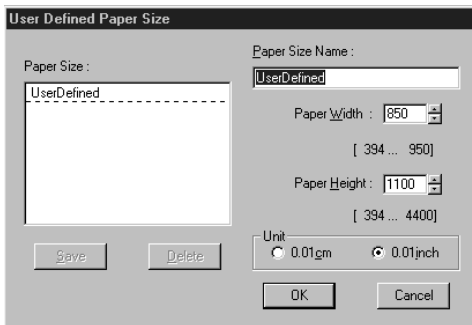

Windows 95/Windows NT

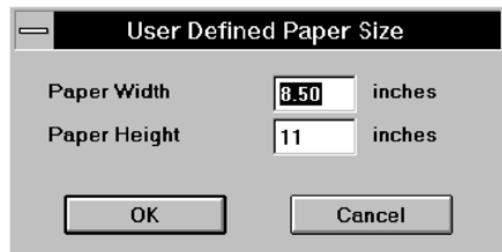

Windows 3.1

4. **Windows 98, Windows 95, or Windows NT**
Type a name (up to 24 characters) for your custom paper size in the **Paper Size Name** field. Then select a **Paper Width** and **Paper Height** for the paper. To use centimeters instead of inches, click the **0.01cm** option. When you're finished, click **Save**. The paper size name appears in the **Paper Size** list in the dialog box. Add more sizes if you want, and click **OK** when you're done.

Windows 3.1

You can create only one **User Defined** paper size. Type the width in the **Paper Width** field and the length in the **Paper Height** field. Then click **OK**.

5. You see the **Paper** tab again. The paper size name you defined is added to the **Paper Size** list and selected as the current setting. (In Windows 3.1, the setting is named **User Defined**.)
6. To change or delete a custom paper size:

Windows 98, Windows 95, or Windows NT

Click **User Defined** in the **Paper Size** list. Then, on the **User Defined Paper Size** dialog box, select the custom paper name in the **Paper Size** list and click **Delete** or change **Paper Width**, **Paper Height**, and/or **Unit** settings as necessary. Click **OK** when you're done.

Windows 3.1

You can change the custom paper size, but cannot delete it. Click **User Defined** in the **Paper Size** list. Then, on the **User Defined Paper Size** dialog box, change **Paper Width** and **Paper Height** settings as necessary. Click **OK** when you're done.

Selecting Paper Options on a Macintosh


The **Paper Size** and **Orientation** options for your printer software are on the **Page Setup** dialog box. The options for collating and reversing the page order are on the **Layout** dialog box. Follow the steps in these sections for selecting the paper options:

- ▶ Choosing paper size and orientation options
- ▶ Selecting print order options

Choosing Paper Size and Orientation Options

Follow these steps to select the Paper Size and Orientation options:

1. Create your image or document in your application.
2. Open the File menu and select **Page Setup**. You see the Page Setup dialog box:

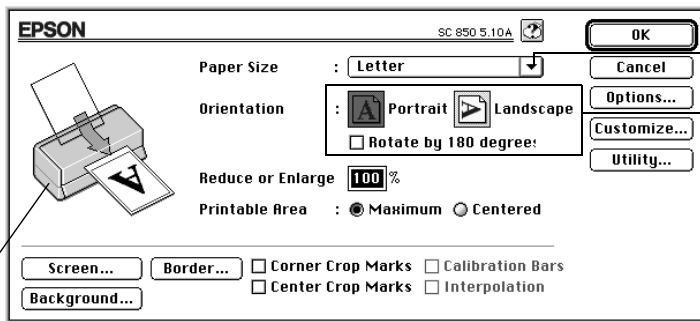

Click to select your Paper Size

Click to select your Orientation options

Printer graphic reflects changes to Orientation and Printable Area settings

3. Click the **Paper Size** pop-up list to select the size of paper you loaded in the printer.

A4	Envelope C6
B5	Envelope DL
A5	A6 Index card
Letter	Index card 5×8in
Legal	Index card 8×10in
Executive	EPSON Photo Paper 4×6in
Half Letter	Panoramic 210×594mm
Envelope #10	


If you don't see the exact size you need in the list, you can create a custom paper size; see page 3-18 for instructions.




Note:

The Rotate by 180° setting lets you print the lower portion of a document first, with a bottom margin as small as 0.12 inch (3 mm) and a top margin as small as 0.55 inch (14 mm).


4. Select the direction of printing on the page using the Orientation options. To print your document oriented as shown in one of the following printer graphics, select the options listed below it.

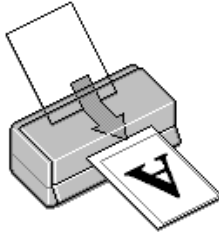


Portrait orientation

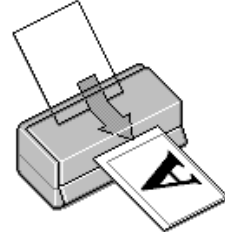

Landscape orientation

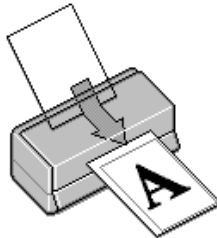

Portrait orientation
Rotate by 180°

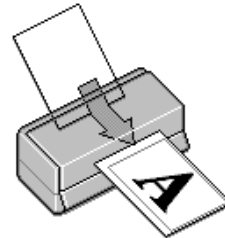

Landscape orientation
Rotate by 180°

5. To use the maximum printable area of your selected paper size, set the Printable Area option to **Maximum**. To center your document on the page, select **Centered**.
6. If you want to collate multiple copies of a multi-page document or you want to reverse the order in which pages are printed, click **OK**. Then see page 3-19 for instructions.


If you've finished selecting page size and orientation options, click **OK** to close the Page Setup dialog box. Then select **Print** from the File menu to select any other printer settings you may need and print your document.

Creating custom paper sizes

You can create up to 8 custom paper sizes and add them to the Paper Size list. This is useful if you're printing a custom size document, such as a banner. You can select any width from 3.94 to 9.5 inches, and any height (length) from 3.94 to 44 inches.

Follow these steps to create a custom paper size:

1. Follow the steps on page 3-16 to access the Page Setup dialog box.
2. Click the **Customize** button. You see the following dialog box:

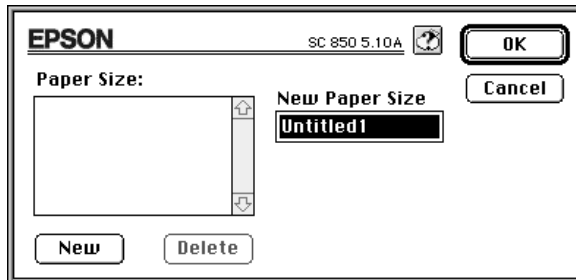

3. Click the **New** button. **Width** and **Height** fields and **Inches** and **cm** radio buttons appear on the screen.
4. Type the width and length of your custom paper in the **Width** and **Height** fields. If you need to change from inches to centimeters, click the correct radio button.
5. Type a name for your custom paper size in the **New Paper Size** field, then click **OK**. The name is added to the **Paper Size** list and selected as the current setting in the Page Setup dialog box.
6. To delete a custom paper size, click the **Customize** button. Then click the name of the custom paper size, and click **Delete**. Click **OK** to return to the Page Setup dialog box.


Selecting Print Order Options

Follow these steps to use the **Collate** and **Reverse Order** options:

1. Open your application's File menu and select **Print**.
2. Click the **Layout** button. You see the Layout dialog box:



Note:
For information on the other settings on the Layout dialog box, see page 3-27.

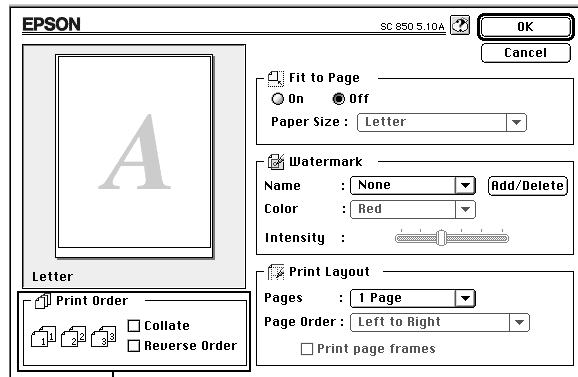

Print Order options

3. If you're printing multiple copies of a multi-page document and you want the copies printed in sets, click the **Collate** checkbox. The page graphics change to show collated documents.
4. If you're printing a multi-page document and want the last page printed first so the pages come out without needing to be reordered, click the **Reverse Order** checkbox. The page graphics change to show later pages printing first.
5. Click **OK** to close the Layout dialog box.



Note:

Layout options are available only when you're using Windows 98, Windows 95, Windows NT, or a Macintosh.

Selecting Print Layout Options

Your printer software's print layout options let you reduce or enlarge almost any size document to print on your printer. You can also select options to proof multiple pages on one sheet of paper, add page frames, and add a predefined or custom watermark.

For Windows 98, Windows 95, and Windows NT instructions, see the next section. For Macintosh instructions, see page 3-27.

Choosing Print Layout Options in Windows

Follow the steps in these sections to use options in the Layout dialog box:

- ▶ Using proportional printing
- ▶ Using multiple print layouts and page frames
- ▶ Adding a watermark

Using Proportional Printing


When you want to make the printed size of a document different from its actual size, you can use your printer software's proportional printing features to reduce or enlarge it. You can proportion the document to fit in the maximum, centered area on a selected paper size. You can also choose to reduce or enlarge it to a selected percentage.

Follow these steps to use proportional printing:

1. Follow the steps on page 3-11 to access the printer software and select the **Paper** tab.
2. Click the **Paper Size** list and select the actual size of the document you want to print.


For example, if your document size is 11 × 17 inches, select **Ledger 11 × 17 in.** This paper size is too large to fit in your printer, so you'll need to proportion it to fit on a **smaller** paper size (by **reducing** the document size). If your document size is 5 × 8 inches, but you want it to fit in the maximum area on Letter-size paper, you'll need to proportion it to fit on a **larger** paper size (by **enlarging** the document size).

3. If the **Paper Size** setting you selected for your document is **within** the maximum paper size that can fit on your printer, but you want to **enlarge or reduce** the image, you need to select proportional printing manually. Go to step 5.
4. If the **Paper Size** setting you selected is **larger** than the maximum size that can be printed on your printer, you see the following dialog box:

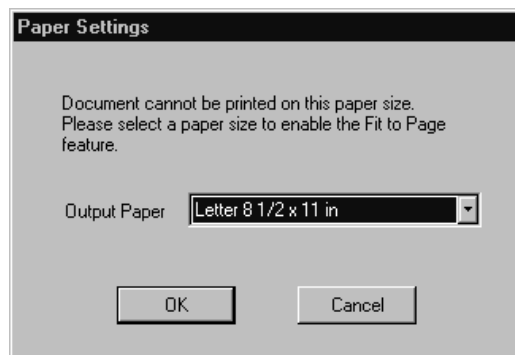


In the **Output Paper** list, select the actual size of the paper loaded in the printer and click **OK**. This automatically turns on proportional printing and sets the correct reduction percentage so the document fits into the maximum, centered printable area on the output paper you select.

The selected Paper Size, reduction percentage, and Output Paper settings now appear on the printer graphic. If you want to adjust the proportions or sizes, go to step 5. If you're ready to print, go to step 7.

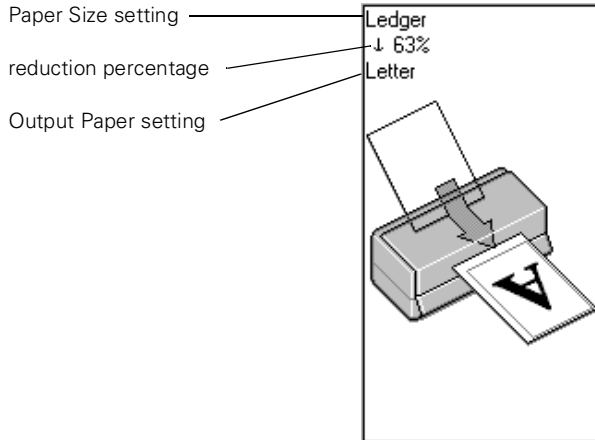

5. Click the Layout tab. You see the Layout dialog box:

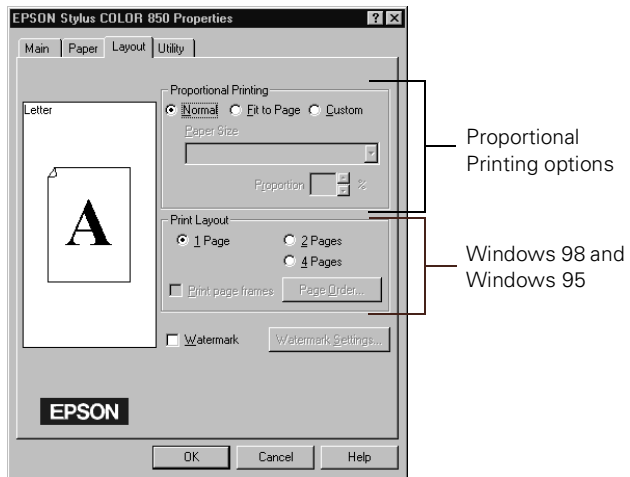




Note:
If you previously selected a Paper Size setting that is larger than the maximum paper size for your printer and then choose Normal, the printer software changes the Paper Size to Letter 8 1/2 x 11 inches.

6. Select one of the following proportional printing options:

- Select **Normal** to set the print proportion to 100%.
- Select **Fit to Page** to automatically reduce or enlarge the document to fit on the paper size loaded in the printer. The **Paper Size** option beneath the **Fit to Page** option becomes active; select the size of paper loaded in the printer.

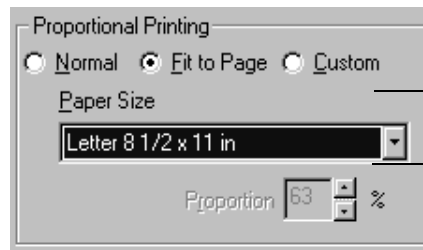

Select Fit to Page, then select the size of paper loaded in the printer here

- Select **Custom** to reduce or enlarge the image by a specific percentage (10% to 400%).

7. If you're finished selecting Layout options, click OK.

If you want to select more options, see the next sections.



Note:
You can't select a multiple print layout option if you're using a proportional printing option (either Fit to Page or Custom).

Using Multiple Print Layouts and Page Frames (Windows 98 and Windows 95 Only)

If you're printing a multiple page document, but you want a quick proof of the images on each page printed on one piece of paper, you can select **Print Layout** options in the printer software. You can choose the way the pages are placed on the paper and add a lined frame to each page, if you want.


Follow these steps to use the Print Layout options:

1. To print multiple pages of your document on one sheet of paper, select either the **2 Pages** or **4 Pages** radio button.



Note:

You can select a page order only if it works with the proportion of your selected Paper Size and/or your current orientation setting, either Portrait or Landscape.

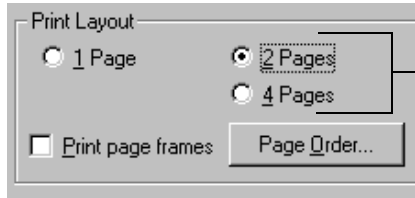

Click the button to select a multiple page print layout

2. If the page order of the layout shown in the printer graphic is how you want your document printed, go to step 3.

To change the page order, click the **Page Order** button. Then select the page order you want to use from the Print Layout dialog box that appears.

3. If you want to frame each page's contents with a black line, one dot wide, click the **Print page frames** checkbox.
4. If you're finished selecting Layout options, click **OK**.

If you want to select more options, see the next section.



Note:

To add a custom watermark, you must first create the watermark as a bitmap in an application program that can create bitmap files. See your application's documentation for instructions.


Adding a Watermark

You can add a watermark to each page in your document to emphasize its purpose or indicate how the document should be handled. For example, you may want to add a watermark of the word "Confidential" to documents you don't want distributed to other parties. Or you can add a custom bitmap of your company logo so your document looks like printed letterhead.

Follow the steps in the correct section below to add a predefined or custom watermark.

1. To turn on the watermark feature, click the **Watermark** checkbox.
2. The default watermark is **Confidential**. To change the watermark or specify how it appears, click the **Watermark Settings** button. You see the following dialog box:

See how your selections will look in the Layout graphic shown here

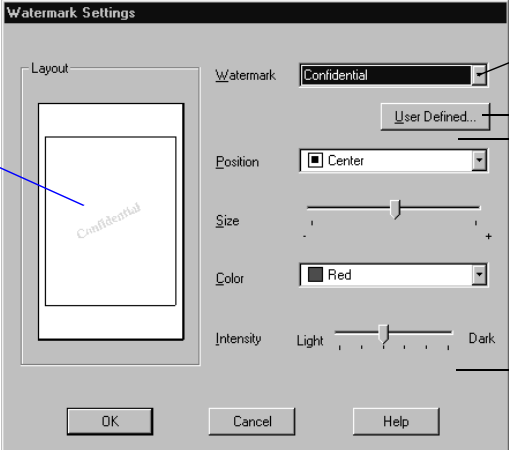

The dialog box is titled "Watermark Settings". It features a "Layout" preview window on the left showing a document with a "Confidential" watermark. To the right, there are controls for "Watermark" (a drop-down menu set to "Confidential"), "User Defined..." (a button), "Position" (a drop-down menu set to "Center"), "Size" (a slider), "Color" (a drop-down menu set to "Red"), and "Intensity" (a slider from "Light" to "Dark"). At the bottom are "OK", "Cancel", and "Help" buttons. Annotations with arrows point to the "Watermark" drop-down, the "User Defined..." button, and the "Position", "Size", "Color", and "Intensity" controls.

Click here to select a predefined watermark

Click here to load a custom watermark you've created

Specify how you want your watermark to appear using these options



Note:
If you selected a multiple page print layout option (as described on page 3-29), your watermark will appear on each page in the layout.

3. To select a different predefined watermark, click the arrow in the **Watermark** drop-down list and choose one of the following options:

Confidential
Draft
Urgent
Priority
Hot
Do Not Copy
For Your Eyes Only
Review Copy
Top Secret
Duplicate

Then go to step 5.



Note:

You can create up to 10 custom watermarks. In Windows 98 and Windows 95, you can use any bitmap file up to 15MB in size. With Windows NT, the file can be any size.


To delete a custom watermark you've added to the list, click the User Defined button. Then select the watermark and click Delete. Click OK to close the dialog box.



Note:

If your monitor displays only 16 colors, the Intensity adjustments are not shown in the Layout graphic. If you choose the No Halftoning setting, the Intensity setting does not determine how your watermark is printed.

4. To load a custom watermark you've created as a bitmap in an application program, click the **User Defined** button. You see the following dialog box:

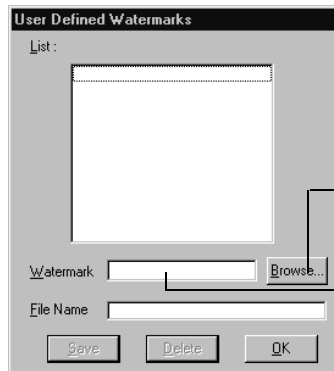

Click Browse to select your bitmap file

Then type a name for your custom watermark here and click Save

Click the **Browse** button. You see the Select a bitmap file dialog box. Navigate to the folder containing the bitmap file you want to use, select the file, and click **OK**.

Type a name for the custom watermark (up to 24 characters long) in the **Watermark** field. Click the **Save** button to add it to the list, then click **OK**.

The custom watermark now appears as the selected watermark in the **Watermark Settings** dialog box and is shown in the **Layout** graphic.

5. Now select the way you want the watermark to appear by choosing the following options. The **Layout** graphic changes to reflect all the settings you choose.
 - ▶ **Position** selects where you want the watermark to appear on your page: **Center**, **Top-Left**, **Top-Right**, **Bottom-Left**, or **Bottom-Right**.
 - ▶ **Size** adjusts the size of the watermark, either larger or smaller, as you move the slide bar.
 - ▶ **Color** lets you choose a color for your predefined watermark: **Red**, **Black**, **Blue**, **Aqua**, **Lime**, **Fuchsia**, or **Yellow**. You cannot select a color for a custom watermark; it is printed in its original colors.

- ▶ **Intensity** sets the lightness or darkness of the watermark (from 5% to 100%) based on where you move the slide bar.
6. If you're finished changing Layout options, click **OK** to close the Layout dialog box.

Choosing Print Layout Options on a Macintosh

Follow the steps in these sections to use options in the Layout dialog box:

- ▶ Using the Fit to Page option
- ▶ Using multiple print layouts and page frames
- ▶ Adding a watermark

Using the Fit to Page Option


When you want to make the printed size of a document different from its actual size, you can use your printer software's **Fit to Page** option to proportion it to fit in the maximum, centered area on a selected paper size.

Follow these steps to use the Fit to Page option:

1. Create your image or document in your application software.
2. Open the File menu and select **Page Setup**. You see the Page Setup dialog box.
3. Click the **Paper Size** list and select the actual size of the document you want to print. For example, if your **document** size is 8 1/2 × 11 inches, select **Letter** for the Paper Size option.


If you want to print this document at the maximum size on 4 × 6-inch EPSON Photo Paper, you'll use the Fit to Page option to **reduce** the image to that size. If you want to print this image at the maximum size on Legal-size paper (8 1/2 × 14 inches), you'll use the Fit to Page option to **enlarge** the document to that size.

4. Click **OK** to close the Page Setup dialog box.
5. Now open the File menu and select **Print**.
6. Click the **Layout** button. You see the Layout dialog box:

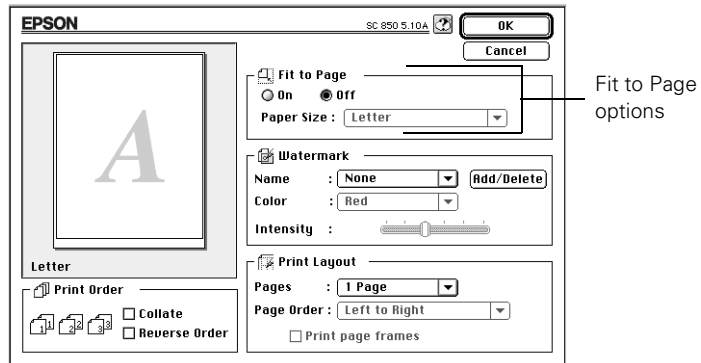

7. Select one of the following **Fit to Page** options:
 - ▶ Select **Off** to set the print proportion to 100%.
 - ▶ Select **On** to automatically reduce or enlarge the document to fit on the paper size loaded in the printer.

The **Paper Size** option beneath the **Fit to Page** option becomes active.

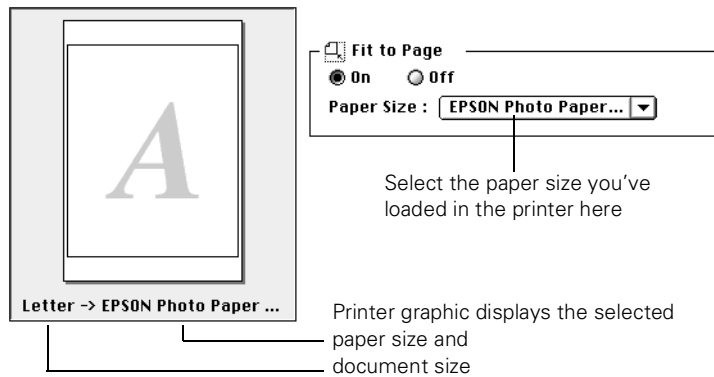

Now select the size of the paper you've loaded in the printer. This automatically sets the correct reduction or enlargement percentage to fit the document into the maximum, centered area on the selected paper size. The selected document size and paper size settings now appear beneath the printer graphic.

8. If you're finished selecting Layout options, click **OK**.

If you want to select more options, see the next sections.



Note:
You can't select a multiple print layout option if you're using the **Fit to Page** option.

Using Multiple Print Layouts and Page Frames

If you're printing a multiple page document and you want a quick proof of the images on each page printed on one piece of paper, you can select **Print Layout** options in the printer software. You can choose the way the pages are placed on the paper and add a lined frame to each page, if you want.


Follow these steps to use the **Print Layout** options:

1. To print multiple pages of your document on one sheet of paper, select either **2 Pages** or **4 Pages** in the **Pages** pop-up list.



Note:

You can select a page order only if it works with the proportion of your selected Paper Size and/or your current orientation setting, either Portrait or Landscape.

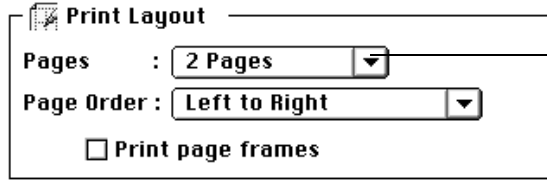

Click the arrow and select a multiple page print layout

2. If the page order of the layout shown in the printer graphic is how you want your document printed, go to step 3.

To change the page order, click the arrow in the **Page Order** pop-up list. Then select the page order you want to use.

3. If you want to frame each page's contents with a black line, one dot wide, click the **Print page frames** checkbox.
4. If you're finished selecting Layout options, click **OK**.

If you want to select more options, see the next section.



Note:

To add a custom watermark, you must first create the watermark as a PICT file in an application program that can create PICT files. See your application's documentation for instructions.

Adding a Watermark

You can add a watermark to each page in your document to emphasize its purpose or indicate how the document should be handled. For example, you may want to add a watermark of the word "Confidential" to documents you don't want distributed to other parties. Or you can add a custom PICT file of your company logo so your document looks like printed letterhead.

1. To use one of the predefined watermarks, click the arrow in the **Name** pop-up list in the **Watermark** box. Then choose one of the following options:



Note:

If you selected a multiple page print layout option (as described on page 3-29), your watermark will appear on each page in the layout.

Confidential
 Draft
 Urgent
 Priority
 Hot
 Do Not Copy
 For Your Eyes Only
 Review Copy
 Top Secret
 Duplicate

Then go to step 3.


2. To load a custom watermark you've created as a PICT file in an application program, click the **Add/Delete** button. You see the following dialog box:



Note:

You can create up to 10 custom watermarks from PICT files up to 1MB in size.

To delete a custom watermark you've added to the list, click the **Add/Delete** button. Then select the watermark and click **Delete**. Click **Save** to close the dialog box.

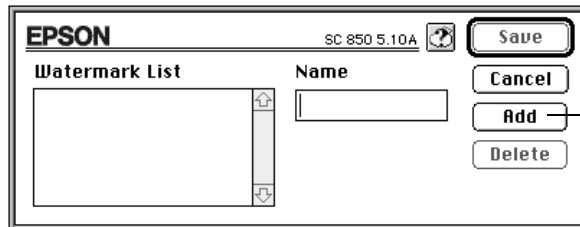

Click the **Add** button to select a PICT file

Click the **Add** button. You see a dialog box for selecting files. Navigate to the folder containing the PICT file you want to use, select the file, and click **Open**.

The name of your PICT file appears in the **Name** field and is added to the **Watermark List**. Click the **Save** button to close the dialog box.


The custom watermark now appears as the selected watermark in the **Layout** dialog box and is shown in the **Layout** graphic.



Note:

If your monitor displays only 16 colors, the Intensity adjustments are not shown in the Layout graphic. If you choose the No Halftoning setting, the Intensity setting does not determine how your watermark is printed.

3. Now select the way you want the watermark to appear by choosing the following options. The Layout graphic changes to reflect all the settings you choose.
 - **Color** lets you choose a color for your predefined watermark: **Red, Black, Blue, Aqua, Lime, Fuchsia, or Yellow**. You cannot select a color for a custom watermark; it is printed in its original colors.
 - **Intensity** sets the lightness or darkness of the watermark (from 5% to 100%) based on where you move the sidebar.
 - To adjust the size and position of the watermark, move the cursor over the Layout graphic. Four boxes appear in the corners of the graphic and the cursor changes to a hand.

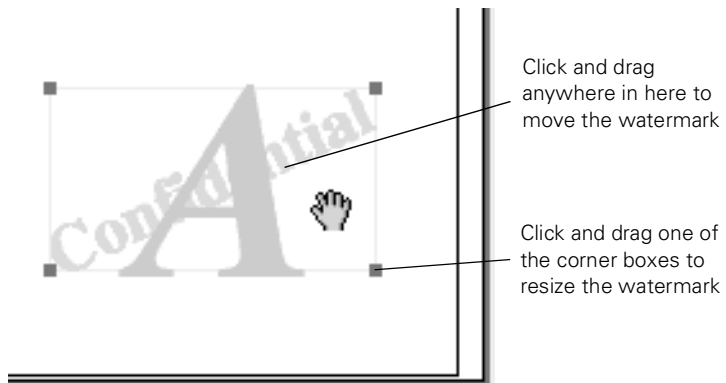

To move the watermark, click anywhere inside the graphic and drag it into one of five positions: center, upper-right, upper-left, lower-right, or lower-left.


To resize the watermark, move the cursor over one of the corner boxes; the cursor changes to a pointing hand. Click and drag the box corner to reduce or enlarge the watermark.

4. If you're finished changing Layout options, click **OK** to close the Layout dialog box.


Saving Custom Settings

After you've fine-tuned your printer settings for a special project, you can save the settings as a group. Then you can quickly reuse them the next time you print a similar project. You can save up to 10 (Windows) or 8 (Macintosh) groups of settings. Follow these steps:

1. Customize your printer settings as described in this chapter.
2. Click the **Save Settings** button on the main printer software dialog box. You see one of the following:

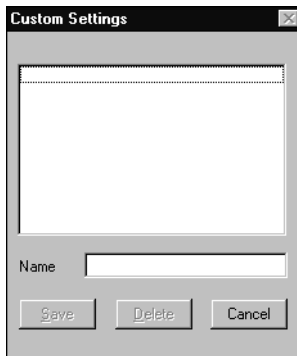

Windows

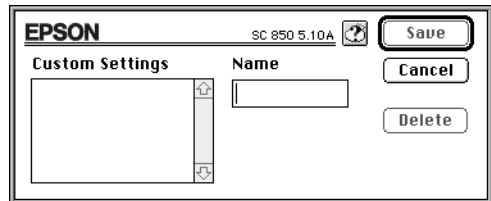

Macintosh



Note:

If you change the Media Type or Ink setting when your customized setting is selected, the setting selected in the list changes to Custom Settings. This does not affect your customized setting. To return to your customized setting, simply reselect it.

3. Type a unique name for your settings (up to 16 characters) and click the **Save** button.

The name you choose will now be available on the printer settings dialog box. To use the settings, click **Advanced**. Then open the Custom Settings list and double-click the name you selected for your custom settings group.

To redefine or delete your custom settings, see the next sections.

Redefining Custom Settings


To change the options in a customized settings group but keep the same name for it, follow these steps:

1. Select **Advanced** mode. Then select the name of the custom settings group you want to redefine in the Custom Settings list.
2. Change the printer settings as necessary. (If you change the **Media Type** and **Ink** settings, the custom settings group name reverts to Custom Settings; this doesn't affect your customized setting.)
3. Click **Save Settings**. Then select the name of the custom settings group you're redefining in the Custom Settings box.
4. If you're using Windows, click **Save**. You see the Save As dialog box. Click **OK** to save your redefined settings. (Click **Cancel** to cancel your changes.)

On a Macintosh, click the **Redefine** button. Then click **Replace** at the confirmation dialog box to save your redefined settings. (Click **Cancel** to cancel your changes.)

Deleting Custom Settings

1. Select **Advanced** mode. Then click **Save Settings**.
2. Select the custom settings group in the Custom Settings box, and click **Delete**. (You cannot delete any of the predefined document types.)

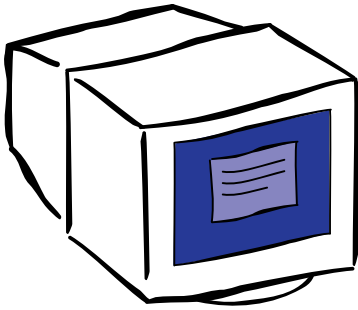

4

Managing Print Jobs

Your printer software includes several utilities for managing print jobs. You can use them to monitor your printer's status, schedule large jobs to print later, and handle network printing.

This chapter provides instructions for the following:

- Managing print jobs in Windows 98, Windows 95, and Windows NT 4.0
- Managing print jobs in Windows 3.1
- Managing print jobs on a Macintosh

If you are the network administrator, see the *Administrator's Guide* for more information on using EPSON Status Monitor 2 with your network.



Note:

You can only monitor your printer if you installed both the network part and the printer-specific part of Status Monitor 2. See page 13 in the *Setup Guide*.

Managing Print Jobs in Windows 98, Windows 95, and Windows NT 4.0

Your printer software offers several ways to manage and monitor your print jobs:


- EPSON Status Monitor 2 (Windows 98, 95, and NT), which provides a variety of print monitoring options, as described on page 4-2.
- Progress Meter (Windows 98 and 95), which appears each time you send a print job. You can turn the Progress Meter on or off and select other printing options using the **Speed & Progress** button; see page 4-9 for details.

- ▶ Spool Manager (Windows 98 and 95), which appears in the Taskbar at the bottom of the screen each time you print, as described on page 4-11.
- ▶ Additional monitoring features for Windows NT 4.0, which are discussed briefly on page 4-12.

Using Status Monitor 2

Status Monitor 2 lets you view detailed information about your print jobs and control how you want printing monitored.

There are three ways to access Status Monitor 2:

- ▶ Click **Start**, point to **Programs**, click the **Epson** folder, and click **EPSON Status Monitor 2**.
- ▶ Double-click the  icon (when background monitoring is enabled) on the taskbar in the bottom right corner of your screen.
- ▶ Access the printer software from your application or the Printers utility (see page 1-2 and page 1-4), click the **Utility** tab, and click the **EPSON Status Monitor 2** icon. (This method accesses the Printer Status window only; see page 4-5 for details.)




Note:

To control network traffic, you may need to limit the number of systems that monitor the printer.

The Status Monitor 2 icon appears on the taskbar only when background monitoring is enabled. See page 4-7 to enable background monitoring.

When you start Status Monitor 2, you see the main window:

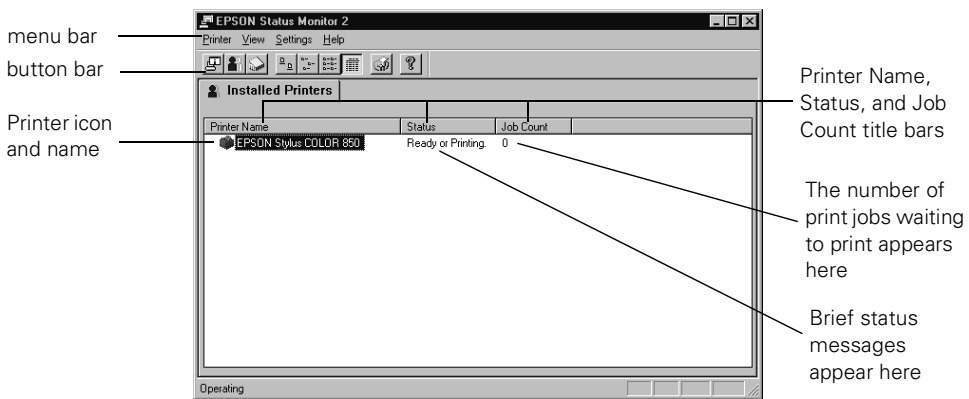



You can customize the appearance of items on the Status Monitor 2 main window using the View menu options or options on the button bar.

If you're monitoring multiple printers, you can reorder them in the Installed Printers list by clicking in the Printer Name, Status, or Job Count title bar.



Note: Background monitoring must be turned on to change the Background Monitoring and Status Alert preferences for individual printers in the Monitoring Preferences window. See page 4-7 for instructions.

If you have more than one printer you want to monitor, you can add them using the **Add Printers** option in the Settings menu. To save your computer memory and reduce network traffic, you may want to delete any printers from the Status Monitor 2 list that you don't need to monitor. To do this, click the printer in the Installed Printers list and select **Delete Printer** from the Settings menu.


The color of the Printer icon indicates the printer status as follows:

Icon color	Status message
Green	Ready to print
Yellow	Paper and/or ink level is low
Red	Paper and/or ink is out, paper is jammed, or a print or communication error has occurred


Other options in Status Monitor 2 let you set up monitoring preferences, view more details on the printer or job status, and enable or disable background monitoring for each printer as described in the next sections.

Setting Up Monitoring Preferences

You can select the way you want Status Monitor 2 to monitor each printer you use in the Monitoring Preferences window. There are several ways to open the window:


- ▶ Click the printer name in the Installed Printers list to highlight it and click the  icon.
- ▶ Click the printer name in the Installed Printers list to highlight it and select **Monitoring Preferences** from the Settings menu.
- ▶ Right-click the printer name in the Installed Printers list and select **Monitoring Preferences** from the drop-down menu.

You see the Monitoring Preferences window:

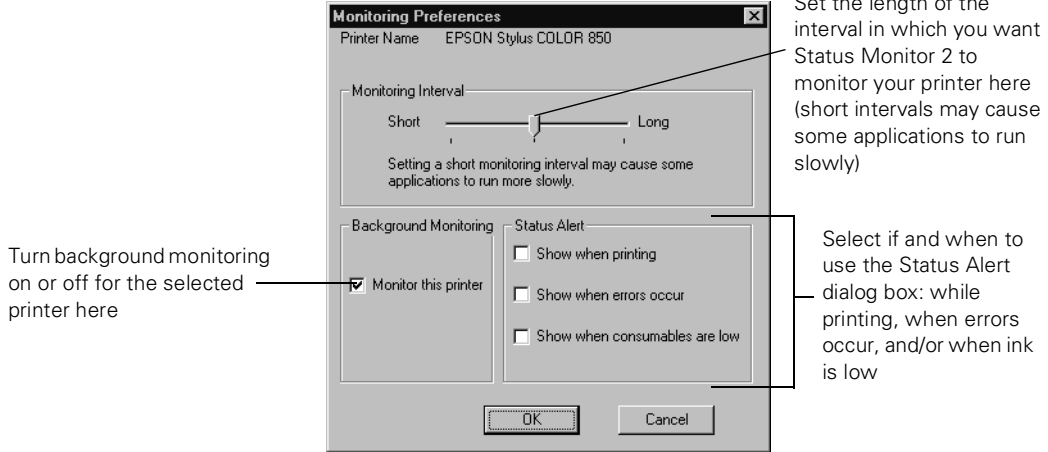


If you turn on one or more of the Status Alert options, you'll see the Status Alert dialog box when the selected condition occurs. For example, if you turn on **Show when errors occur**, the dialog box will appear only if a printing error occurs. If you select all the options, the dialog box will appear whenever you print, encounter an error, or have low ink levels.

The color of the printer icon in the Status Alert dialog box indicates the type of error, as described on page 4-3.

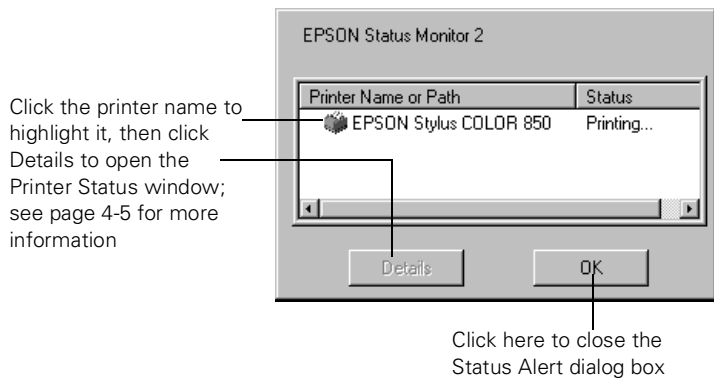

Using the Printer Status Window


For more details on the status of your printer, you can use the Printer Status window. There are several ways to open the window:

- ▶ Double-click the printer name in the Installed Printers list.
- ▶ Click the printer name in the Installed Printers list to highlight it and click the  icon or select **Printer Status** from the Printer menu.
- ▶ Right-click the printer name in the Installed Printers list and select **Printer Status** from the drop-down menu.
- ▶ If you're currently using the printer software, click the **Utility** tab, then click the **EPSON Status Monitor 2** icon. (For instructions on accessing your printer software, see page 1-2 and page 1-4.)
- ▶ You can also access the Printer Status window by clicking the **Details** button on the Progress Meter (see page 1-5) or the Status Alert dialog box (see page 4-4).

You see the Printer Status window. The Current Status tab gives printing status and error correction information.

Illustrations of what to do if an error occurs appear here


If your printer runs out of ink, this button becomes active and the screen displays cartridge replacement steps on the right and illustrations in the printer graphic area

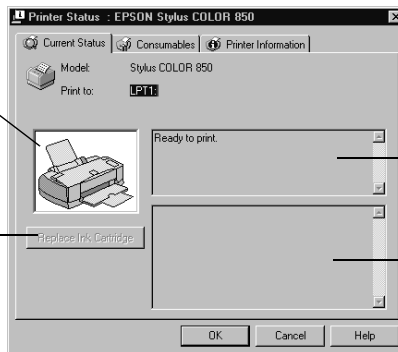

Printer status messages appear here

If an error occurs, troubleshooting tips appear here

To check the amount of ink you have, click the **Consumables** tab.

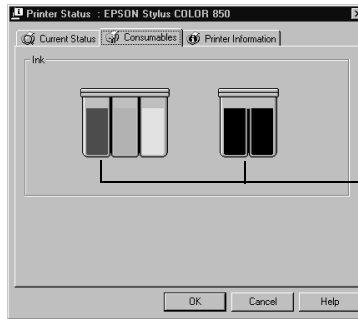

These graphics indicate the amount of ink remaining in your cartridges

To view information about your printer's network connections and other printer resources, click the **Printer Information** tab.


Using the Job Status Window

Use the Job Status window to view detailed information on the print jobs waiting to print. There are several ways to open the window:




Note:

The Job Status window is very similar to the Spool Manager window (Windows 98 and Windows 95). Both allow you to pause, cancel, and restart print jobs. See page 4-11 for information on Spool Manager.

- 1 Click the printer name in the Installed Printers list to highlight it and click the  icon or select **Job Status** from the Printer menu.
- 2 Right-click the printer name in the Installed Printers list and select **Job Status** from the drop-down menu.

You see the Job Status window:

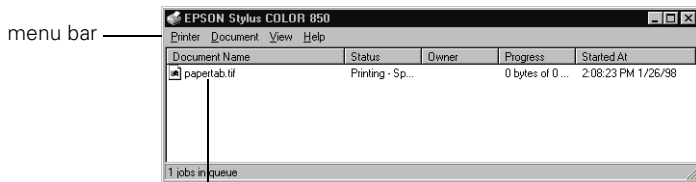

Jobs currently printing or waiting appear here


Options in the Printer menu let you pause printing or purge all waiting print jobs, select or deselect the printer as your Windows default, and access the printer software to change default settings.

The Document menu options let you pause or cancel printing of individual print jobs. First click the print job you want to pause or cancel in the Document Name list to highlight it.

Enabling or Disabling Background Monitoring

You can enable background monitoring for your printer if you want Status Monitor 2 to alert you to any error conditions while you're working on other tasks. This lets you find out if paper runs out or if any other printing problem has occurred without opening Status Monitor 2. If you have trouble with network traffic, you can disable background monitoring.

To turn on or turn off background monitoring, follow these steps:

1. Open Status Monitor 2 using one of these methods:
 - ▶ Click **Start**, point to **Programs**, click the **Epson** folder, and click **EPSON Status Monitor 2**.
 - ▶ Double-click the  icon on the Windows Taskbar in the bottom right corner of your screen (when background monitoring is enabled).
2. Click the name of the printer you want to background monitor (or stop monitoring) in the Printer Name list. The printer name is highlighted.
3. Open the Settings menu and select **Background Monitoring**.

4. Select **Monitor from restart** (to begin background monitoring on the printer after your next system restart), **Monitor now** (to begin background monitoring right away), or **Stop monitoring now** (to stop background monitoring).
5. Now set your monitoring preferences for the printer as described on page 4-3.

Changing Status Monitor 2 Settings

You can run through the Setup program and change your settings without uninstalling and reinstalling Status Monitor 2. This procedure allows you to change any of the following settings:

- Number of hops
- Types of printers you can monitor
- EPSON TCP/IP printing

You can also run this program any time you install the printer software and Status Monitor 2 is unable to find the printer.

Follow these steps to change your settings:

1. In Windows Explorer or My Computer, find the folder where your EPSON Status Monitor 2 files are located (ESM2 is the default) and double-click **Setup.exe**.
2. Close any open programs and click **Next**.
3. If you are using Windows 98 or Windows 95 and you have TCP/IP installed, you see a screen asking you if you want to enable EPSON TCP/IP printing. Select **Yes** if you want to print with TCP/IP, and then click **Next**. If you are printing with Novell NetWare, select **No**.

TCP/IP Printing: Yes _____ No _____



Note:

You may not see screens for all the steps here, depending on your computer's configuration.

Write down your settings in the spaces provided. You can refer to them if multiple systems are monitoring the printer.



Caution:

If you have dial-up routers in a NetWare environment, they may automatically dial up the next hop and you may be charged for the line connection depending on the number of hops you set. To prevent this and to keep network traffic to a minimum, ask your network administrator before you change this setting.

4. Select the type of printer(s) you want to monitor and click **Next**.

Monitor:

EPSON TCP/IP printers _____ LPR printers _____

NetWare printers _____ local printers _____

5. Select **Monitor** to monitor EPSON network printers that do not have drivers on your computer. Select **Do not monitor** if network traffic is a problem. Then click **Next**.

Printers: Monitor _____ **Do not monitor** _____

6. If you're using NetWare, set the number of hops (0 to 15) and click **Next**.

Number of hops: _____


7. Check the current settings and click **Next**. Select **Yes** and click **Finish** to restart your computer.

Selecting the Speed & Progress Options (Windows 98 and Windows 95)

You can set up the way your printer software sends print jobs and select whether to display the Progress Meter using the **Speed and Progress** dialog box. To access the dialog box, open your printer software as described below.

1. Click **Start**, point to **Settings**, then click **Printers**.
2. Right-click the EPSON Stylus COLOR 850 printer icon and select **Properties** from the drop-down menu. You see the printer settings dialog box.


3. Click the **Utility** tab. You see the Utility menu:

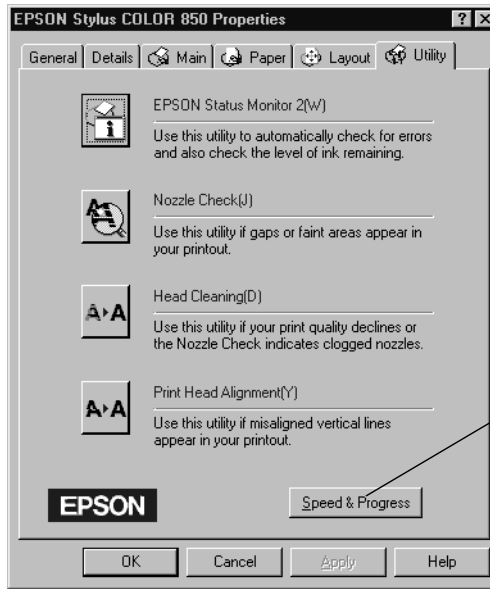

Speed & Progress button

4. Click the **Speed & Progress** button.

You see this dialog box:

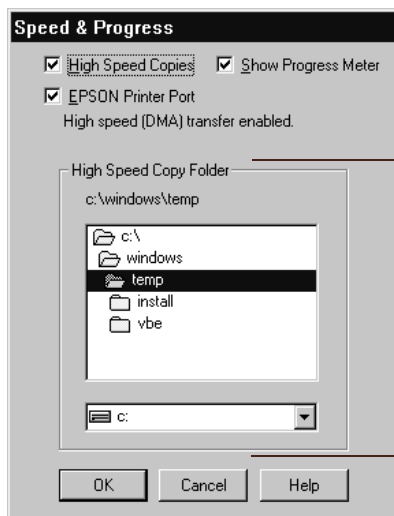

If you have more than one hard drive, you can select a folder for storing multiple copy print jobs here. You don't see this box if you have only one hard drive.

Select the following options:


- ▶ **High Speed Copies** speeds up printing of multiple copies of the same document by using your hard drive space as a cache.
 - ▶ **Show Progress Meter** lets you control whether or not the Progress Meter is displayed when you send a print job. See page 1-5 for information on the Progress Meter.
 - ▶ **EPSON Printer Port** lets you optimize the transfer rate of your printer port for EPSON printers instead of using the Windows default printer port. If you are printing over the network, ignore this option; it is for printing locally.
5. Click **OK** to close the Speed & Progress dialog box and return to the Utility menu. Then click **OK** again to exit your printer software.

Using the Spool Manager (Windows 98 and Windows 95)

The Spool Manager creates a temporary print job file and stores it in the C:\TEMP or C:\WINDOWS\TEMP folder. The software then sends the file to your printer at the right time.

To open Spool Manager while you're printing, click the **EPSON Stylus COLOR 850** icon that appears on the taskbar at the bottom of the screen.

You see the Spool Manager window:

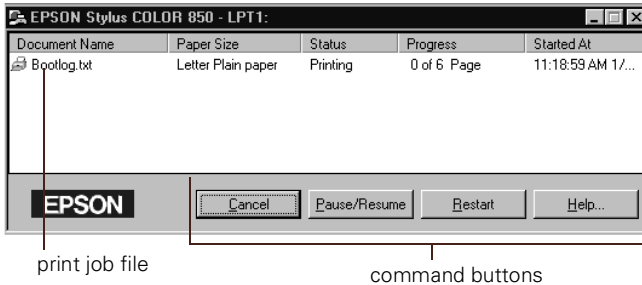

The Spool Manager window displays the status of your print job files and lets you control them. To cancel, pause, resume, or restart a print job, click the job to highlight it; then click one of the command buttons on the bottom of the window.

Deleting a Stalled Print Job

If you're having trouble printing, it may be because of a stalled print job. Follow these steps to delete it and continue printing:

1. Click the EPSON Stylus COLOR 850 icon on the taskbar.
2. Click on any print jobs marked Held.
3. Click the Cancel button.
4. Exit Spool Manager and try printing again.



Note:
See your Windows NT documentation for more information on monitoring options.

Additional Monitoring Options in Windows NT 4.0

Windows NT 4.0 servers and workstations include a messenger service to alert you to printer errors or let you know when a print job is finished. If you have appropriate network access privileges or you're controlling printing from the server, you can also cancel, pause, or restart print jobs and set the sharing, security, scheduling, and port options.

Managing Print Jobs in Windows 3.1

Your Windows printer software includes two management utilities: the Spool Manager and Despooler.

- The Spool Manager starts automatically when you send a job to the printer. It allows you to print in the background while you continue to work on your computer and to hold jobs to print at a later time. It also handles multiple print jobs that come in from different computers on the network at the same time. See the next section for details.
- The Despooler also starts automatically when you send a job to the printer. It displays on your screen to alert you about printer status. See page 1-6 for more information on the Despooler.

Using the Spool Manager

The Spool Manager works like the Windows Print Manager. When you send a job to your printer, your printer software creates a temporary print job file, stores it in the C:\TEMP or C:\WINDOWS\TEMP directory, and assigns it to a print queue. The software then sends the file to your printer at the right time.




Note:

You may not see the Spool Manager icon if Program Manager or the current window is maximized. Reduce the window size to see the Spool Manager icon.

To open Spool Manager, do one of the following:

- To open it while you're printing, click the **EPSON Spool Manager** icon at the bottom of your desktop.
- You can open Spool Manager at any time by double-clicking the **Spool Manager4** icon in the EPSON program group.

You see the Spool Manager window:

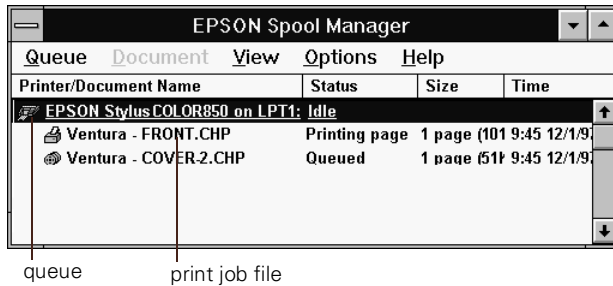

The Spool Manager window displays the status of your print job files and lets you control them. You can also control print queues, display of the Despooler, and the default spool directory. Click **Help** in the Spool Manager menu bar for detailed information.

Deleting a Stalled Print Job

If you're having trouble printing, it may be because of a stalled print job. Follow these steps to delete it and continue printing:

1. Open the Spool Manager as described on page 4-13.
2. Click on any print jobs marked **Held**.
3. Open the **Document** menu and click **Delete**. Then click **Yes**.
4. Exit Spool Manager and try printing again.

Changing the Default Spool Directory

If you get an error message while printing, or printing is very slow, you can try changing your default spool directory.

1. Make a directory on your hard drive where you want Spool Manager to store print job files, for example, C:\SPLTEMP.

2. Open the Spool Manager as described on page 4-13.
3. Make sure **EPSON Stylus COLOR 850** is selected, and then choose **Setup** from the Queue menu. The Queue Setup dialog box appears.
4. Change the spool directory to the one you created in step 1.
5. Make sure **Use Print Manager for this port** is checked. Then click **OK**.
6. Choose **Default Spool Directory** from the Options menu.
7. In the dialog box, change the spool directory to the one you created in step 1. Then click **OK**.
8. Close Spool Manager.

Managing Print Jobs on a Macintosh

Your Macintosh printer software includes two print job management utilities: Monitor3 and Status Monitor. It also includes a Configuration utility for setting up print monitoring options.

- ▶ If you're using background printing, Monitor3 starts automatically when you send a job to the printer. It handles printing while you continue to work on your Macintosh, lets you track documents that are waiting to be printed, and lets you set printing priorities for waiting print jobs.
- ▶ The Status Monitor alerts you to any problems that occur during printing. You can also use it at any time to see how much ink you have left.
- ▶ The Configuration utility lets you select how you want to be notified of printer errors and where you want print job files stored.

Using Monitor3

The Monitor3 utility lets you continue to work on your Macintosh while your document is printing (however, background printing is slower and may also slow down your system). You can then open the Monitor3 dialog box to check on your print jobs and cancel, pause, or restart them.


To use this utility, you need to turn on background printing and increase the memory allocation for Monitor3, as described in the next section.

Setting Up Monitor3

1. Open the Chooser from the Apple menu and select the SC 850(AT) icon. Then select the port or AppleTalk zone you're using.
2. Under **Background Printing**, click **On** and close the Chooser.
3. To increase the memory allocation, select **EPSON Monitor3** from the Extensions folder in your System folder. Then choose **Get Info** from the File menu and set the **Memory Requirements** to 2000 or 3000, depending on your system's available RAM.

Monitoring Print Jobs with Monitor3

While you're printing, click the EPSON Monitor3 icon on the Application menu at the right end of the menu bar. You see the following dialog box:

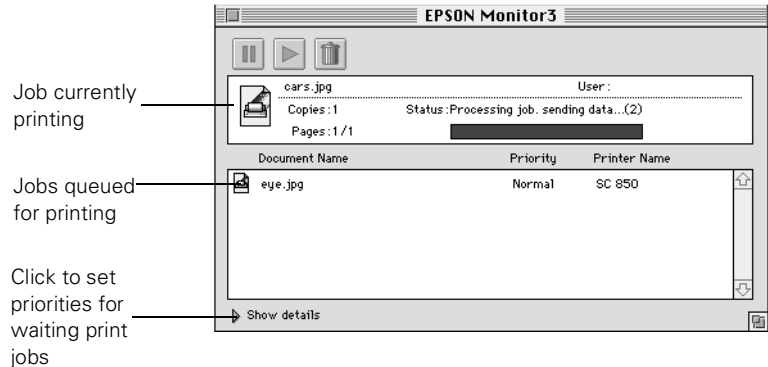

Note:

If you see a stop sign icon and the message "Print queue on hold" in the EPSON Monitor3 dialog box, select Start print queue from the Printer menu to release the queue and resume printing.

You can track the printer's progress with the current job and select a job that is currently printing or waiting to print and cancel, pause, or restart it.


To set priorities for a job waiting to print, click the job, then click the **Show details** arrow at the bottom of the window. The **Priority** list becomes active. Click the arrow and select **Normal**, **Urgent**, or **Hold**. The job moves up or down in the list of waiting print jobs.

Using the Macintosh Status Monitor


You can use the Status Monitor to check the level of ink in your printer. Follow these steps:

1. Choose **Page Setup** or **Print** from the File menu in your application. You see a printer settings dialog box.

2. Click the Utility button. You see the Utility menu:

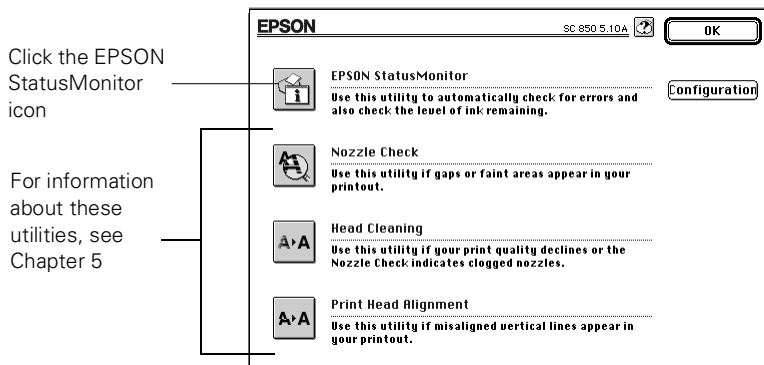

3. Click the EPSON StatusMonitor icon. The software checks the amount of ink remaining in the printer and displays the Status Monitor window:

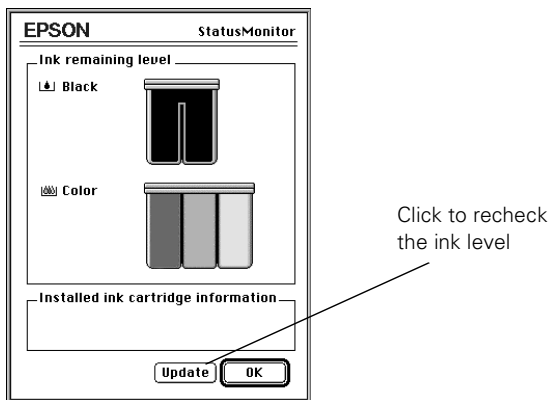


4. To update the ink level check, click the Update button. To close the Status Monitor dialog box, click OK.

Selecting Configuration Options


You can configure the way you want the printer to handle error messages, warnings, ink level checks, and temporary spool folders in the Configuration Settings dialog box. Follow these steps:

1. Choose **Page Setup** or **Print** from the File menu in your application. You see a printer settings dialog box.
2. Click the **Utility** button. You see the Utility menu.
3. Click the **Configuration** button. You see the Configuration Settings dialog box:

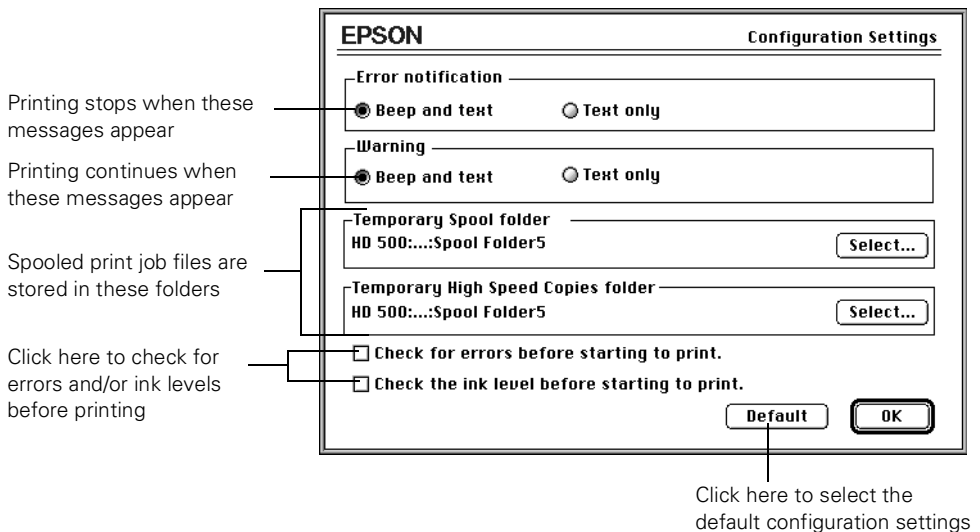

4. Select the configuration options you want:
 - **Error notification** lets you select whether you want your system to beep and display error message text or just display text if your printer encounters an error.
 - **Warning** lets you choose whether warning messages beep and display text or display text only.

- ▶ **Temporary Spool folder and Temporary High Speed Copies folder** let you select the folders on your hard disk that store the temporary print job and high speed multiple-copy print job files created when you send a job to the printer. Click the **Select** button to change the folder from the default folder shown.
 - ▶ Click the **Check for errors before starting to print** checkbox if you want your software to check for errors before starting your print job.
 - ▶ Click the **Check the ink level before starting to print** checkbox if you want your software to check for a low ink condition before starting your print job.
5. When you're finishing changing your configuration options, click **OK** to return to the Utility menu.

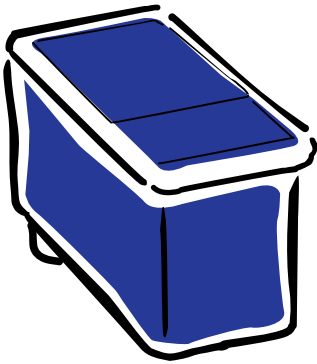

5

Maintenance and Transportation





Warn other users on your network that the printer will be unavailable when you perform maintenance on it, or any time you disconnect it from the network.

It's easy to keep your EPSON Stylus COLOR 850Ne printer working at its best. Just follow the simple instructions in this chapter for replacing ink cartridges, performing routine maintenance, and moving the printer in these sections:

- ▶ Replacing an ink cartridge
- ▶ Cleaning the print heads
- ▶ Aligning the print heads
- ▶ Cleaning the printer
- ▶ Transporting the printer

Replacing an Ink Cartridge

When a  black or  color ink out light flashes, the indicated cartridge is low on ink. This is a good time to make sure you have a new cartridge. When the light stays on, the cartridge is empty and you need to replace it.




Caution:
To ensure good results, use genuine EPSON cartridges and do not refill them. Other products may cause damage to your printer not covered by EPSON's warranty.

Use these EPSON ink cartridges within six months of installing them and before the expiration date on the package:

Black ink cartridge S020108

Color ink cartridge S020089

When you need new ink cartridges, contact your dealer or call EPSON Accessories at (800) 873-7766 (U.S. only). In Canada, please call (800) 873-7766 for dealer referral. Or visit our website at www.epsonsupplies.com (U.S. sales only).



When the  color ink out light comes on, you can continue to print with black ink. Simply turn the printer off and then back on again. When you print, make sure you choose **Black** as the Ink setting in your printer software.






Caution:

To avoid damaging the printer, never move the print heads by hand.

Removing an Empty Ink Cartridge



You can replace a cartridge when the  black or  color ink out light is either flashing or on. Determine which ink cartridge needs to be replaced, then follow these steps:


1. Make sure the printer is turned on and not printing.
2. Lower the output tray and raise the printer cover. Then locate the  black and  color cleaning buttons next to the control panel under the printer's cover.

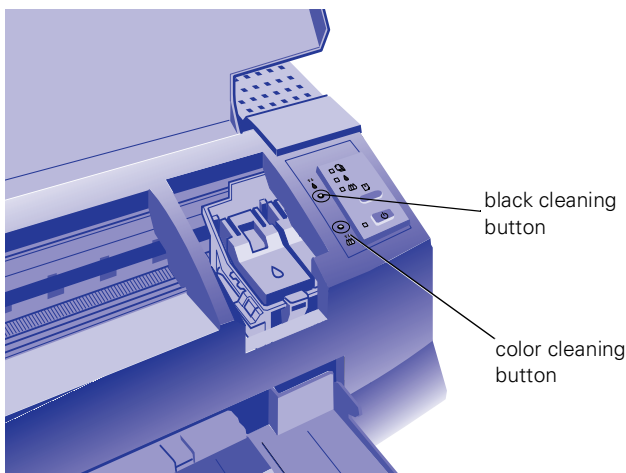

Caution:

  If you press a cleaning button when its corresponding ink out light is off or not flashing, the printer cleans the print heads, as described on page 5-6. If you need to replace an ink cartridge before the lights flash (because the ink is too old, for example) follow the instructions on page 5-5.

3. Press the  black or  color cleaning button and hold it for three seconds.

The print heads move slightly left and the  power light begins flashing. (The print heads return to their home position if you don't proceed to step 4 within 60 seconds.)



Caution:


Don't open the clamp or remove a cartridge except to replace it with a new one. Once you remove a cartridge, you can't reuse it, even if it contains ink.



Warning:

If ink gets on your hands, wash them thoroughly with soap and water. If ink gets into your eyes, flush them immediately with water.

4. Pull up the ink cartridge clamp. The cartridge rises up from its holder. (Although the illustration shows the black ink cartridge, the procedure is the same for replacing the color ink cartridge.)

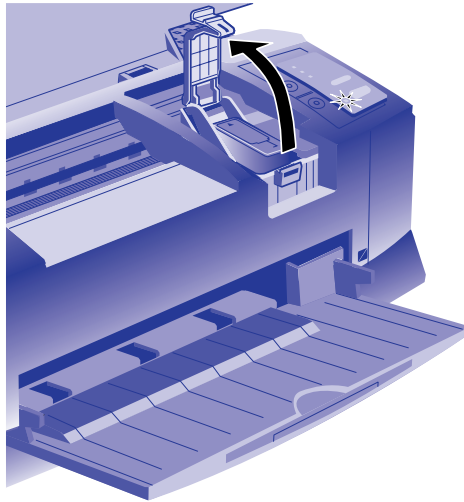

5. Lift the cartridge out of the printer and dispose of it carefully.

Follow the steps in the next section to install the new ink cartridge.

Installing the New Cartridge


Once you have removed the empty cartridge, you're ready to install the new one. Follow these steps:

1. Remove the new ink cartridge from its packaging.
2. Remove **only** the yellow part of the tape seal on top as shown below. **Don't pull off the white portion or try to remove the clear seal underneath the cartridge.**




Caution:


You must remove the yellow tape from the top of the cartridge or you will permanently damage it. It's okay if the tape doesn't tear off completely at the dotted line. Do not remove the clear seal from the bottom of the cartridge; ink will leak out.

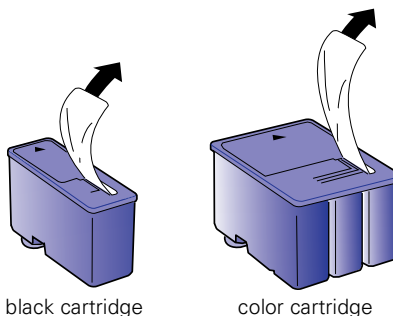


3. Lower the ink cartridge into its holder with the label facing up and the arrow pointing to the back of the printer.

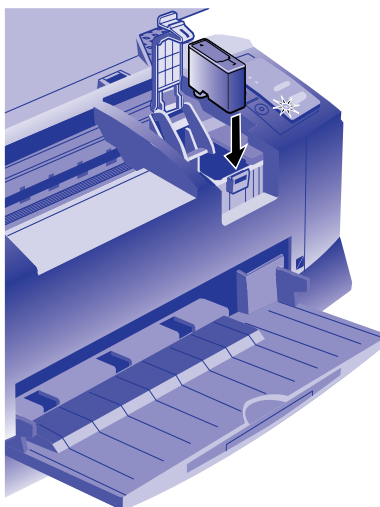


4. Press down the ink cartridge clamp until it locks in place.

5. If you need to replace the other ink cartridge, follow the steps under “Removing an Empty Ink Cartridge,” and then steps 1 through 4 under “Installing the New Cartridge.”
6. Press the  load/eject button and close the printer cover.





Caution:
Never turn off the printer while the  power light is flashing, unless the printer hasn't moved or made any noise for more than 10 minutes.




The printer moves the print heads and begins charging the ink delivery system. (Even if you don't press the button, ink charging begins 60 seconds after you close the clamp.)

The  power light flashes, and the printer makes various sounds. Charging takes about three minutes. When it's finished, you can print again.

Replacing an Outdated Ink Cartridge

If an ink cartridge is more than six months old, you may need to replace it. How can you tell? You may notice that your printouts don't look as good as they used to. If print quality doesn't improve after cleaning and aligning the print heads, you can replace one or both cartridges.

Follow these steps to replace an ink cartridge before the  black or  color ink out light is flashing or on:

1. Make sure the printer is turned on and not printing.
2. Lower the output tray and raise the printer cover.
3. Press **both** the  black and  color cleaning buttons and hold them down for a few seconds until the black print head moves to the left.
 - To replace the black ink cartridge, follow the instructions beginning with step 5 on page 5-3.
 - To replace the color ink cartridge, press the  color cleaning button and hold it down for a few seconds. After the color ink cartridge moves to the left, follow the instructions beginning with step 5 on page 5-3.



Caution:
To avoid damaging the printer, never move the print heads by hand.

Cleaning the Print Heads

 

 
If your printed image is unexpectedly light or faint, or dots are missing from the image, you may need to clean the print heads. This unclogs the nozzles so they can deliver ink properly.

Cleaning the print heads uses ink, so clean them only if print quality declines. You can clean the print heads in either of the following ways:

- ▶ With the Head Cleaning utility in your printer software (when Status Monitor 2 is installed)
- ▶ From the printer's control panel buttons


Using the Head Cleaning Utility

Follow these steps to run the utility from a Windows computer or a Macintosh:

1. Make sure the printer is turned on but not printing, and the  black and  color ink out lights are off.
2. Access the printer settings dialog box as described in Chapter 1.
3. Click the **Utility** tab (Windows) or the **Utility** button (Macintosh). You see the Utility menu.
4. Click the **Head Cleaning** button.
5. Follow the instructions on the screen to clean one or both print heads. Cleaning both heads takes about four minutes, during which the printer makes some noise and the  power light flashes.

When the power light stops flashing, you need to run a nozzle check to test the print quality and reset the cleaning cycle.






 
 

 
Caution:
Never turn off the printer while the  power light is flashing, unless the printer hasn't moved or made any noise for more than 10 minutes.

6. Make sure paper is loaded in the printer and click **Print nozzle check pattern** (Windows) or **Confirmation** (Macintosh). Then click **Next**. See page 5-8 for instructions on examining the nozzle check pattern.

If your print quality has not improved, repeat the steps above. If you don't notice any improvement after doing this two or three times, check the print quality solutions in Chapter 6.

Using the Control Panel


Follow these steps to clean the print heads:

1. Make sure the printer is turned on and not printing, and that the  black and  color ink out lights are off.
2. Open the printer cover, then press the  black or  color cleaning button and hold it down for three seconds. Cleaning takes about two minutes, during which the printer makes some noise and the  power light flashes.
3. When the  power light stops flashing, repeat step 2 for the other print head if necessary.
4. After you're finished cleaning and the  power light stops flashing, you need to print a page to test the print quality and reset the cleaning cycle. If you're using Status Monitor 2, run a nozzle check. Go to step 5.

If you're using DOS or you didn't install Status Monitor 2, open an application and print a document containing black and color data. Then go to step 7.

5. Access the printer settings dialog box as described in Chapter 1. Then click the **Utility** tab (Windows) or the **Utility** button (Macintosh). You see the Utility menu.
6. Click the **Nozzle Check** button, then click **Next**. See the next section for instructions on examining the nozzle check pattern.

 


Caution:
Never turn off the printer while the  power light is flashing, unless the printer hasn't moved or made any noise for more than 10 minutes.


7. If your print quality has not improved, repeat the steps above. If you don't notice any improvement after doing this two or three times, check the print quality solutions in Chapter 6.

Examining the Nozzle Check Pattern

Examine the nozzle check pattern you print. It should look something like this, with the lower pattern colored cyan, magenta, and yellow:



Each staggered horizontal and straight vertical line should be complete, with no gaps in the dot pattern. If your printout looks okay, you're done. If any dots are missing, as shown below, clean the print heads again; see page 5-6 for instructions.

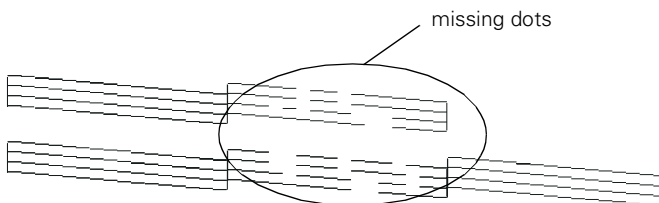

Note:
If you installed Status Monitor 2, you can use the Print Head Alignment utility.

Aligning the Print Heads

If your printouts contain misaligned vertical lines, you may need to align the print heads. You can align the print heads in either of the following two ways:

- ▶ With the print head alignment utility
- ▶ Using the printer's control panel buttons

Using the Print Head Alignment Utility

Follow these steps to run the utility (Windows or Macintosh):

1. Make sure the printer is turned on and paper is loaded.
2. Access the printer settings dialog box as described in Chapter 1.
3. Click the **Utility** tab (Windows) or the **Utility** button (Macintosh). You see the Utility menu.
4. Click the **Print Head Alignment** button.
5. Follow the instructions on the screen to print a test page and select the correct alignment.





Caution:

Load paper that's at least 8.27 inches (210 mm) wide. This prevents ink from spraying inside the printer and smudging your printouts.

For the best results, load EPSON ink jet paper in the printer whenever you check the print head alignment.

Using the Control Panel

Follow these steps to align the print heads:

1. Make sure the printer is turned off and paper is loaded. Then open the printer cover.
2. Hold down the  load/eject button and the  black cleaning button and turn on the printer. Then release the buttons. After a moment, the printer prints an instruction sheet telling you how to select a language for the alignment instructions.
3. Press the correct control panel buttons as instructed to select a language. The printer prints instructions for aligning the print heads.
4. Follow the instructions on the sheet to align the print heads. When you're finished, turn off the printer to exit the alignment mode.



Caution:

Don't touch the gears inside the printer.

Never use alcohol or thinner for cleaning; they can damage the printer components and case.

Don't use a hard or abrasive brush.


Don't get water on the printer components.

Don't spray lubricants or oils inside the printer.



Note:

If you move the printer to a new network, you need to initialize its Ethernet card and configure it for that network. (See your *Setup Guide*.)

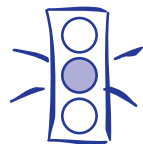

Caution:

To avoid damage, always leave the ink cartridges installed when transporting the printer.

Cleaning the Printer

To keep your printer working at its best, you should clean it several times a year, following these steps:


1. Turn off the printer, unplug the power cord, and disconnect the network cable.
2. Remove all the paper from the sheet feeder.
3. Clean the exterior of the printer with a soft, damp cloth. Keep the printer cover closed so water doesn't get inside.
4. Clean out the printer's interior with a soft, damp cloth.

Transporting the Printer

If you plan to transport your printer some distance, you'll need to repack it in its original box. Follow these steps:

1. Turn on the printer and wait until the print heads lock in the far right position. Then turn off the printer.
2. Unplug the power cord from the electrical outlet. Then disconnect the network cable from the printer.
3. Remove the paper support and any paper from the printer.
4. Push in the output tray extensions and close the tray.
5. Repack the printer and attachments in the original box using the protective materials that came with it. See the Notice Sheet that was packed with the printer.

Be sure to keep the printer level as you transport it. If you notice a decline in print quality after transporting the printer, clean the print heads; if output is misaligned, align the print heads. See the instructions in this chapter.

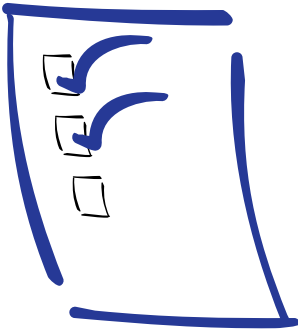

6

Troubleshooting



Note:

If you cannot solve the problem with the solutions in this chapter, check the troubleshooting chapter in your *Administrator's Guide* to see if you are having network-related problems.

As you use your printer, you may occasionally experience a paper jam or other problem. The first thing you should do is diagnose the problem, following the guidelines in this chapter. Then try the most likely solutions until the problem is fixed.

This chapter covers the following problems and solutions:

- Diagnosing problems
- Improving print quality
- Solving printing problems
- Solving printer software problems
- Fixing paper jams and other paper problems
- Solving miscellaneous printout problems
- Uninstalling the software


Diagnosing Problems

Your printer provides a number of ways to help you diagnose problems:

- To identify the most common problems, check the lights on the printer's control panel. See page 6-2 for details.
- You can also use the Status Monitor 2 utility to identify common problems. For instructions, see page 4-2 (Windows) or page 4-17 (Macintosh).

- ▶ To determine whether the problem is caused by the printer itself, run a self test. See page 6-3 for instructions.
- ▶ You can use the printer's hex dump mode to pinpoint communication problems. See page 6-4 for instructions.
- ▶ For the latest information, check the Help programs and the ReadMe files in the Epson program group or folder.
- ▶ If any of the suggested solutions in this chapter tell you to uninstall and then reinstall your printer software, see page 6-17 for instructions.
- ▶ If none of the suggested solutions in this chapter solve your problem, contact EPSON as described under "Where to Get Help" in the Introduction.

Checking the Control Panel Lights

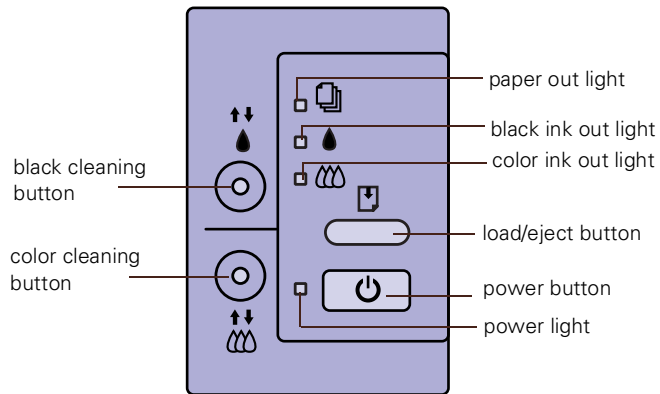

Follow these guidelines when the control panel lights come on or flash:

- 📄 When the paper light *flashes*, paper is jammed in the printer. Turn off the printer and gently pull out all the paper. Then press the 📄 load/eject button. See page 6-14 for details.
- 📄 When the paper light *comes on*, your paper ran out or is incorrectly loaded. Load paper in the feeder and then press the 📄 load/eject button.



When an ink light *flashes*, your ink supply is low. Make sure you have a replacement cartridge.



When an ink light *comes on*, you need to replace the ink cartridge. See Chapter 5 for instructions.



When the power light and paper out light *flash* and all the other lights are on, your printer has a carriage error. See page 6-9 for more information.



When all the lights *flash*, your printer may have an internal error. See page 6-10 for more information.

Running a Self Test


 
 
 
You can run a self test to determine whether the problem comes from the printer itself or some other source.

- ▶ If the results are satisfactory, the problem lies in your software settings, the network and configuration, or your computer.
- ▶ If the self test does not print correctly, you have a problem with your printer. See the suggestions in this chapter for possible solutions.



Caution:

Load paper that's at least 8.27 inches (210 mm) wide. This prevents ink from spraying inside the printer and smudging your printouts.




1. Make sure both the printer and computer are turned off.
2. Disconnect the network cable from the printer.
3. Make sure paper is loaded in the printer.
4. Hold down the  load/eject button (for a 360 dpi test) or the  black cleaning button (for a 180 dpi test) and press the  power button. Hold down the buttons until the  power light starts to flash, then release them.

The printer prints on the first and last lines of one sheet of paper, then prints a nozzle check pattern (shown on page 5-8) and samples of fonts and colors on the next sheet.

5. To end the test, turn off the printer. Then reconnect the network cable and turn on your printer and computer.

Using Hex Dump Mode

 
 
You can use the printer's hex dump mode to identify problems if you know how to interpret hex code. Or, you can fax the hex printout to a technical support representative. Follow these steps:

1. Make sure the printer is turned off and has paper loaded in it.
2. Open the cover.
3. Hold down the  load/eject button **and** the  color cleaning button and press the  power button. The printer prints **Hex Dump Mode** at the top of a page and then stops.
4. Print one or more pages from an application as usual. The printer prints the exact code it receives in hexadecimal format.
5. Turn off the printer to exit hex dump mode.

Improving Print Quality



If you find that your print quality has been declining, you can often improve it by doing one or more of the following:

- Clean the print heads by running a cleaning cycle. Follow the instructions in Chapter 5.
- Use higher quality paper appropriate for your print job. (See Chapter 2 for a list of EPSON papers.)
- Match the **Media Type** in the printer software to the type of paper you loaded in the printer. Then the printer software can automatically select other settings for the best quality. (See Chapter 1 for details.)
- Turn off **High Speed** mode in the More Settings dialog box, as described in Chapter 3.

- ▶ Make sure **Economy** mode is turned off in the printer software, as described in Chapter 3.
- ▶ Replace the ink cartridges as described in Chapter 5. (Check the status of the  black and  color ink out lights first.)

Here are some detailed solutions to specific print quality problems.



Printed image has horizontal banding.

Possible cause	Solution
The Media Type setting doesn't match the loaded paper.	Make sure the Media Type setting matches the paper you're using. See Chapter 1 for instructions.
The printable side of the paper is face down.	Remove the paper and reload it with the printable side face up. See Chapter 2 for instructions.
The print head nozzles are clogged.	Clean the print heads by running a cleaning cycle. See Chapter 5 for instructions.
The ink cartridges are low on ink.	Check the  black and  color ink out lights to see which cartridge you may need to replace. See Chapter 5.
The MicroWeave or Super MicroWeave option is not turned on.	Turn on MicroWeave or Super MicroWeave (if available) in the More Settings dialog box. See Chapter 3 for more information.

Vertical lines are misaligned or vertical banding appears.



Possible cause	Solution
The print head nozzles are clogged.	Clean the print heads by running a cleaning cycle. See Chapter 5 for instructions.
The High Speed setting is turned on.	Turn off the High Speed setting if vertical lines are misaligned. See Chapter 3 for information.
The print heads are misaligned.	Run the Print Head Alignment utility. See Chapter 5 for instructions.

The printed image has incorrect or missing colors.

Possible cause	Solution
The Ink option is set to Black .	Change the Ink setting to Color . See Chapter 1 for instructions.
The Media Type setting doesn't match the loaded paper.	Make sure the Media Type setting matches the paper you're using. See Chapter 1 for instructions.
The printable side of the paper is face down.	Remove the paper and reload it with the printable side face up. See Chapter 2 for instructions.
The Halftoning and Color Adjustment Mode options are set incorrectly for your document type.	Use the correct settings for the project you're printing, following the instructions in Chapter 3.
The ICM (Windows 98 or Windows 95) or ColorSync (Macintosh) settings are incorrect for your document.	Use the Automatic mode setting or choose a different Rendering Intent setting (Macintosh). See Chapter 3 for more information.
The print head nozzles are clogged.	Clean the print heads. See Chapter 5 for instructions.
The ink cartridges are low on ink or one or more ink colors are empty.	Check the  black and  color ink out lights to see which cartridge you may need to replace. See Chapter 5 for instructions.
The colors displayed on your monitor don't match the printed colors.	Because your monitor and printer use different technologies to represent colors, your printed colors can't exactly match the colors you see on your monitor screen. Use the ICM (Windows 98 or Windows 95) or ColorSync (Macintosh) settings to get as close a match as possible. See Chapter 3 for more information.
The color settings in your application software need adjustment.	You may be able to adjust various color settings in your application software. See your software documentation for more information.

The printed image is faint or has gaps.

Possible cause	Solution
The print head nozzles are clogged.	Clean the print heads by running a cleaning cycle. See Chapter 5 for instructions.
The Media Type setting doesn't match the loaded paper.	Make sure the Media Type setting matches the paper you're using. See Chapter 1 for instructions.


Possible cause	Solution
The loaded paper is damaged, old, or dirty.	Remove the paper and reload a new stack with the printable side face up. See Chapter 2 for instructions.
The ink cartridges are low on ink.	Check the  black and  color ink out lights to see which cartridge you may need to replace. See Chapter 5 for instructions.

The printed image is blurry or smeared.

Possible cause	Solution
The paper thickness lever is in the 0 position.	Set the paper thickness lever to the + position and try printing again. See Chapter 2 for instructions.
The paper is damp or the printable side is face down.	Remove the paper and reload a new stack with the printable side face up. See Chapter 2 for instructions.
You loaded special media without a support sheet.	Follow the special media loading instructions in Chapter 2 and on the paper packaging for media that require support sheets. Also try loading your media one sheet at a time.
You tried to print on cardboard or other non-recommended media.	Make sure your paper or media meets the specifications listed in Appendix B. If your printouts are still blurry after you change paper, clean the print heads as described in Chapter 5.
The Media Type setting doesn't match the loaded paper.	Make sure the Media Type setting matches the paper you're using. See Chapter 1 for instructions.
Ink has leaked inside the printer.	Clean carefully inside the printer to remove spilled ink. See Chapter 5 for instructions.
You're using the High Speed and MicroWeave settings with a misaligned print head.	Turn off High Speed following the instructions in Chapter 3. Run the Print Head Alignment utility following the instructions in Chapter 5.
The resolution of your image is too low.	If a photographic image looks grainy or rough, try using the PhotoEnhance 2 (PhotoEnhance on Windows 3.1) setting to improve the printed quality. See Chapter 3 for details. Increase the image resolution using your image editing software, or decrease the size of the image.

Solving Printing Problems

If the printer won't print, first check that:

- ▶ The printer is turned on and the  power light is on.
- ▶ Paper is loaded in the printer.
- ▶ The printer is plugged into a working electrical outlet that's not controlled by a switch or timer.
- ▶ The network cable is securely connected to the printer and the hub, and any relevant network cables are securely connected.

If you still can't print, check the following solutions.

All lights are off.


Possible cause	Solution
The printer is not receiving power.	Try these solutions: <ul style="list-style-type: none">▶ Make sure the printer is turned on.▶ Turn off the power and plug in the power cord securely.▶ Make sure the outlet is not controlled by a switch or timer and is operable.

Only the power light is on, but nothing prints.

Possible cause	Solution
The interface cable is not connected securely.	Turn off your printer and computer. Then make sure the cable is connected securely and meets the printer's specifications.
The printer has an internal problem.	Turn off the printer and computer, disconnect the interface cable, and run a self test as described on page 6-3.
The printer or application software is installed incorrectly.	If the self test works, check your printer, network, and application software for correct installation.
Your computer doesn't have enough memory to handle the file you're printing.	Try one of the following: <ul style="list-style-type: none">▶ Reduce the resolution of your image.▶ Select fewer colors or a lower resolution for your display or monitor.▶ Add more memory to your computer.

Possible cause	Solution
Printing is stalled.	In Windows 98/95/3.1x, delete the stalled print jobs in Spool Manager; see Chapter 4 for instructions. In Windows NT, use the spooler. On a Macintosh, delete stalled print jobs using Monitor3 or open the Extensions folder, EPSON folder, and Spool folder; then delete any queued files.
The print heads are clogged or the ink cartridges are too old.	Clean the print heads by running a cleaning cycle; see Chapter 5 for instructions. If cleaning doesn't help, replace the cartridges. For information on cartridge life and replacement instructions, see Chapter 5.


The  paper out light is flashing or on.

Possible cause	Solution
If flashing, paper is jammed.	Remove the paper and follow the guidelines for preventing jams as described on page 6-14.
If on, paper is used up or is loaded incorrectly.	Load paper or remove the stack and reload it as described in the <i>Setup Guide</i> and in Chapter 2. Then press the  load/eject button to turn off the light and resume printing.

A  black or  color ink out light is flashing or on.

Possible cause	Solution
If flashing, the ink supply is getting low.	You need to replace the indicated ink cartridge soon; see Chapter 5 for instructions.
If on, the ink cartridge is empty.	You must replace the indicated ink cartridge now to be able to print; see Chapter 5 for instructions.

The  and  lights are flashing.

Possible cause	Solution
A carriage error has occurred.	Remove any paper in the printer. Press the  load/eject button for about 30 seconds. Then press it again. Turn the printer off, wait a few seconds, and then turn it on and try printing again. If the error is not cleared, contact EPSON as described in the Introduction.

All the lights are flashing.

Possible cause	Solution
You haven't removed all the packing material from the printer.	Remove the packing material, following the instructions on the Notice Sheet in the box.
An internal error may have occurred.	Turn off your printer, wait a few seconds, and turn it on again. If the lights still flash or stay on, contact EPSON as described in the Introduction.

The printer has finished charging the ink cartridge, but the  power light is still flashing.

Possible cause	Solution
The ink cartridge clamp isn't locked down.	Press down on the clamp to lock it.
Packing material remains in the printer.	Remove all packing material, following the instructions on the Notice Sheet in the box.
The printer needs to initialize.	If the printer is not moving or making noise, but the light is still flashing for more than 10 minutes, turn the printer off. If the light is still flashing when you turn it back on, contact EPSON as described in the Introduction.

Solving Printer Software Problems

If you have trouble with your printer software, first check that your printer is selected as the default Windows printer or as the current printer in the Macintosh Chooser; see the *Setup Guide* for instructions.

If you still have problems with your printer software, check the following solutions.

The printer software installed with Windows 3.1 doesn't work correctly after you upgrade to Windows 98 or Windows 95.

Possible cause	Solution
Your printer software is not set up correctly for Windows 98 or Windows 95.	After installing Windows 98 or Windows 95, uninstall the printer software as described on page 6-17, then reinstall the printer software, as described in the <i>Setup Guide</i> .

After you install your printer software, you see the Windows 95 or Windows 98 New Hardware Found window.

Possible cause	Solution
An operating system error has occurred.	Click Do not install a driver , and then click OK . Never select any other option on the New Hardware Found window.

You see a spooling error message (Windows).

Possible cause	Solution
If you see error messages or printing is very slow, the problem may be caused by temporary files (Windows 3.1 only).	Change the Spool Manager default directory (Windows 3.1 only), following the instructions in Chapter 4.
Your hard drive is too full.	Delete unnecessary files to make room on the drive.
Your computer doesn't have enough memory for the file you're printing.	Try one of the following: <ul style="list-style-type: none"> ▶ Reduce the resolution of your image. ▶ Select fewer colors or a lower resolution for your display or monitor. ▶ Add more memory to your computer.

You see a memory error message (Macintosh).

Possible cause	Solution
You need to increase the memory allocation for your application, EPSON Monitor3, or both.	Choose Get Info from the File menu when the application is active or EPSON Monitor3 is selected and increase the memory requirements. See Chapter 4 for more information. If that doesn't work, turn off background printing if it's on (you won't be able to use Monitor3).

In Windows 98 or Windows 95, the Status Monitor 2 window doesn't appear.

Possible cause	Solution
You may not have restarted your computer after installing Status Monitor 2.	Click Start , select Shut Down , click Restart the computer , and click Yes to restart your computer. Then try using Status Monitor 2.
You don't have both parts of Status Monitor 2 installed.	Status Monitor 2 comes in two parts: one that finds the printer on the network, and the other that recognizes your specific printer. Uninstall Status Monitor 2 (as described on page 6-17) and reinstall it as described in the <i>Setup Guide</i> .
You're using ScanDisk.	Before using ScanDisk, turn off background monitoring in Status Monitor 2. (See page 4-7 for instructions.) Then turn it back on when you're finished using ScanDisk.
The printer isn't in the list of monitored printers.	Make sure your printer has been added to the monitored printers list in Status Monitor 2. See page 4-2 for more information.

Printing is too slow.

Possible cause	Solution
Your printer software options are set incorrectly.	For the fastest printing, try the following: <ul style="list-style-type: none">▶ Set Print Quality to Economy.▶ Turn MicroWeave off.▶ Turn High Speed on.▶ Choose Black ink.▶ Choose No Halftoning. See Chapters 1 and 3 for more information.
Your system doesn't have enough resources.	To free up resources, try the following: <ul style="list-style-type: none">▶ Clear space on your hard disk or run a defragmentation utility.▶ Don't run too many applications at the same time.▶ Turn off virtual memory.▶ Increase your system's memory (RAM)▶ Upgrade your CPU.
You're using background printing on a Macintosh.	Select EPSON Monitor3 and choose Get Info from the File menu to increase the Memory Requirements for EPSON Monitor3. See Chapter 4 for more information. If that doesn't work, turn off background printing (you won't be able to use Monitor3).

Your printer icon doesn't appear in the Chooser (Macintosh).

Possible cause	Solution
Your Macintosh has extension conflicts. See also "Solving Network Problems" on page 7-1 of your <i>Administrator's Guide</i> .	Disable Quick Draw GX in the Extensions Manager. Make sure EPSON Monitor3 and SC 850AT are enabled, and then restart your Macintosh.

The "SC 850AT cannot be used" message appears (Macintosh).

Possible cause	Solutions
The printer software has been corrupted.	Remove and reinstall the printer software as described on page 6-18. Then, in the Extensions Manager, disable Quick Draw GX, enable EPSON Monitor3 and SC 850AT, and restart your Macintosh.


Fixing Paper Problems

To avoid most paper handling problems, do the following:

- ▶ Use smooth, high-quality media designed for ink jet printers that meets the media specifications in Appendix C.
- ▶ Follow all loading and handling instructions included with the media.
- ▶ Load the media with the printable side face up as described in the *Setup Guide* and in Chapter 2.

If you have any paper problems, check here for solutions.

Paper doesn't feed.

Try this	Then do this
Remove the stack of paper from the printer.	<p>Check that the paper isn't:</p> <ul style="list-style-type: none">▶ Curled or creased.▶ Too old. (See Chapter 2 or your paper packaging for more information.)▶ Loaded above the arrow on the left edge guide.▶ Jammed inside the printer. (If the  paper out light is flashing, paper is jammed.) <p>Then reload the paper as described in the <i>Setup Guide</i> and in Chapter 2, making sure the left edge guide is adjusted to fit the paper's width.</p>


Multiple pages feed at the same time.

Try this	Then do this
Remove the stack of paper from the printer.	<ul style="list-style-type: none">▶ Make sure the paper isn't too thin (see the paper specifications in Appendix B).▶ Fan the edges of the stack of paper to separate the sheets.▶ Reload the paper as described in the <i>Setup Guide</i> and in Chapter 2.▶ If too many copies of a page or document are printing, check the Copies settings in both the printer software and your application program. See Chapter 1 for more information.

Paper jams inside the printer.

Try this	Then do this
Turn off your printer, open the cover, and remove all the paper that's inside, including any little pieces that may have torn off.	<p>Load more paper in the printer, following the instructions in the <i>Setup Guide</i> and in Chapter 2. If your paper jams frequently, make sure you:</p> <ul style="list-style-type: none">▶ Use smooth, high-quality paper, loaded printable side up.▶ Fan the stack and then even the edges before loading it.▶ Load paper beneath the arrow mark on the left edge guide.▶ Adjust the left edge guide to fit the width of your paper.

Paper doesn't eject fully or is wrinkled.

Possible cause	Solution
If the paper doesn't eject fully, you may have set the wrong paper size.	Press the  load/eject button to eject the paper. Then make sure you select the correct paper size in your printer software. See Chapter 3 for instructions.
If it's wrinkled when it comes out, the paper may be damp or too thin.	See the paper specifications in Appendix B for ranges of paper thicknesses you can print with, as well as environmental requirements for storage.

Solving Miscellaneous Printout Problems

If your printout results are not what you expected, try these solutions.

Characters are incorrect or garbled.

Possible cause	Solution
Your printer is not selected in your application or as the Windows default printer.	Select your printer in your application or select it as the default Windows printer. See your Windows documentation or online help for instructions.
Your printer is not selected in the Macintosh Chooser.	Select your printer in the Chooser as described in the <i>Setup Guide</i> .
Printing is stalled.	In Windows, delete the stalled print jobs in Spool Manager (in the spooler for Windows NT). On a Macintosh, select the stalled print jobs in Monitor3, or open the Extensions folder, EPSON folder, and Spool folder; then delete any queued files. See Chapter 4 for instructions.
The network cable is not securely connected.	Turn off your printer and computer. Then make sure the network cable is connected securely and meets the Ethernet card's specifications.
Your video driver may be conflicting with the EPSON printer driver.	Change to a standard VGA driver (see your computer or video card documentation for instructions). If your printout is correct, your video driver is interfering with the printer driver. Contact your computer or video card manufacturer for an updated driver.

The image is inverted as if viewed in a mirror.

Possible cause	Solution
You used a Flip Horizontal option.	Turn off the Flip Horizontal or mirror setting in your application software or the printer software. See Chapter 3 for instructions.

The image size or position is incorrect.

Possible cause	Solution
The paper and/or layout options are set incorrectly.	Check the paper settings and the settings on the Layout dialog box (not available in Windows 3.1x). See Chapter 3 for instructions. Also check the paper and layout options in your application software.

The margins are incorrect.

Possible cause	Solution
Margins are set incorrectly in your application software.	Check your software documentation for instructions on selecting the correct margins for your paper size. Make sure the margins are within the printable area of the page. See Appendix B for printable area specifications.
Paper settings in the printer software are incorrect for your paper size.	Check the settings in the paper dialog box to make sure they're correct for your paper size. See Chapter 3 for more information.

A portion of your image doesn't print (Macintosh).

Possible cause	Solution
Your system doesn't have enough available memory.	Close any other applications you are running and turn off background printing.
You need to increase the memory allocation for your application, EPSON Monitor3, or both.	Choose Get Info from the File menu when the application is active and increase the memory requirements. See Chapter 4 for more information.

The printer prints blank pages.

Possible cause	Solution
Your printer is not selected in your application or as the Windows default printer.	Select your printer as the default Windows printer. See your Windows documentation or online help for instructions.
Your printer is not selected in the Macintosh Chooser.	Select your printer in the Chooser as described in the <i>Setup Guide</i> .
Paper settings in the printer software are incorrect for your paper size.	Check the settings in the paper dialog box to make sure they're correct for your paper size. See Chapter 3 for more information.
The print head nozzles are clogged.	Clean the print heads by running a cleaning cycle following the instructions in Chapter 5.



Note:
In Windows NT 4.0, you can't uninstall the printer software with the Add/Remove Programs utility. See your Windows NT documentation to remove printer drivers from your system.

Uninstalling Printer Software

If any of the suggested solutions in this chapter tell you to uninstall and then reinstall your printer driver or Status Monitor 2, follow the steps in this section. To uninstall EPSON Net!2, see your *Administrator's Guide*.

Windows 98, Windows 95, and Windows NT 4.0

1. Double-click the **My Computer** icon, then double-click the **Control Panel** icon.
2. Double-click **Add/Remove Programs**.
3. To uninstall your printer driver (Windows 98 and Windows 95 only), select **EPSON Printer Software** in the program list.

To uninstall Status Monitor 2, select **EPSON Status Monitor 2** in the program list.
4. Click the **Add/Remove** button. Follow the instructions on the screen to uninstall your software.
5. To reinstall your software, see the *Setup Guide*.

Windows 3.1 Printer Software Instructions

1. Double-click the **Main** program group icon, then double-click the **Control Panel** icon.
2. Double-click **Printers**.
3. Select **EPSON Stylus COLOR 850** in the **Installed Printers** list and click the **Remove** button.
4. To reinstall your software, see the *Setup Guide*.

Macintosh Instructions

1. Insert the EPSON printer software CD-ROM in your drive.
2. Double-click the **Installer** icon. Then click **Continue**.
3. Click the arrow in the list at the top showing **Easy Install**, and select **Remove** from the list.
4. Click the **Remove** button on the bottom of the screen.
5. Follow the instructions on the screen to uninstall the printer software.
6. To reinstall your software, see the *Setup Guide*.

A

EPSON Accessories

EPSON offers a variety of accessories for your EPSON Stylus COLOR 850Ne printer, from replacement ink cartridges to special ink jet paper and other creative media.

To purchase EPSON accessories, contact your local printer retailer. You can also purchase ink cartridges, EPSON media, and manuals from EPSON Accessories at (800) 873-7766 (U.S. sales only). In Canada, please call (800) 873-7766 for dealer referral. Or visit our website at www.epsonsupplies.com (U.S. sales only).

When you order accessories, be sure to use the part numbers listed in this appendix.

Ink cartridges

Cartridge type	Part number
Black ink cartridge	S020108
Color ink cartridge	S020089

EPSON ink jet paper and other media

Media name	Size	Part number
EPSON 360 dpi Ink Jet Paper	Letter A4	S041060 S041059
EPSON High Quality Ink Jet Paper	Letter A4	S041111 S041117
EPSON Photo Quality Ink Jet Paper	Letter A4 Legal	S041062 S041061 S041067
EPSON Photo Quality Glossy Paper	Letter A4	S041124 S041126

EPSON ink jet paper and other media

Media name	Size	Part number
EPSON Photo Quality Glossy Film	Letter A4 4.1 × 5.8 (A6)	S041072 S041071 S041107
EPSON Photo Paper	4 × 6 Letter A4 Panoramic	S041134 S041141 S041140 S041145
EPSON Photo Sticker Kit (CD-ROM and paper)	4.1 × 5.8 (A6)	S041144-KIT
EPSON Photo Stickers (refill)	4.1 × 5.8 (A6)	S041144
EPSON Photo Quality Ink Jet Cards	4.1 × 5.8 (A6) 8 × 10	S041054 S041122
EPSON Ink Jet Transparencies	Letter A4	S041064 S041063
EPSON Photo Quality Self Adhesive Sheets	A4	S041106
EPSON Iron-on Cool Peel Transfer Paper	Letter	S041153/S041155

B

Technical Specifications

Printing

Printing method

On-demand ink jet

Nozzle configuration

128 black nozzles (32 × 4, staggered)
64 color nozzles × 3 (cyan, magenta, yellow)

Printable columns and printing speed

Character pitch (characters per inch)	Printable columns	Printing speed (characters per second)	
		Draft	Normal
10	80	533	400
12	96	640	480
15	120	800	600
17 (10 condensed)	137	912	684
20 (12 condensed)	160	1067	800

Print quality	CR speed (inches per second)
180 dpi × 180 dpi	26.7
360 dpi × 360 dpi	20
720 dpi × 720 dpi	20
1440 dpi × 720 dpi	20

Technical Specifications

Resolution	Maximum 1440 × 720 dpi
Input buffer	32KB
Print direction	Bidirectional with logic seeking for text and graphics
Control code	ESC/P 2™ and expanded raster graphics code IBM X24E emulation code
Line spacing	1/6-inch (default) programmable in 1/8-inch or 1/360-inch increments
Paper feed speed	100 milliseconds per 1/3-inch line
Character tables	1 italic and 10 graphics character tables
Character sets	14 international character sets and 1 legal character set
Bitmap fonts	<ul style="list-style-type: none">● EPSON Roman (proportional)● EPSON Sans Serif (proportional)● EPSON Courier● EPSON Prestige● EPSON Script <p>All bitmap fonts are available in 10, 12, and 15 cpi. You can select other font/pitch combinations using ESC/P 2 commands.</p>
Scalable fonts	<ul style="list-style-type: none">● EPSON Roman● EPSON Sans Serif● EPSON Roman T● EPSON Sans Serif H <p>All scalable fonts are available in sizes from 8 to 32 points, in 2 point increments, and four styles: normal, bold, italic, and bold italic.</p> <p>The printer always uses the fonts you select with your software application. You need to use the printer's internal fonts only if your application doesn't allow you to select fonts.</p>

Paper

Paper type	Size	Paper types	Thickness	Weight
Single sheets	Letter (8.5 × 11 inches) A4 (210 × 297 mm) A5 (148 × 210 mm) B5 (182 × 257 mm) Legal (8.5 × 14 inches) Half letter (5.5 × 8.5 inches) Executive (7.5 × 10 inches)	Plain paper and special ink jet papers distributed by EPSON	0.003 to 0.004 inch (0.08 to 0.11 mm)	17 to 24 lb (64 to 90 g/m ²)
Transparencies and glossy media	Letter (8.5 × 11 inches) A4 (210 × 297 mm) A6 (105 × 148 mm, glossy film only)	Transparencies, glossy paper, and glossy film distributed by EPSON	Glossy film and transparencies: 0.0051 to 0.0059 inch (0.13 to 0.15 mm) glossy paper: 0.0067 to 0.0071 inch (0.17 to 0.18 mm)	—
Photo Paper	4 × 6 inches (102 × 152 mm) Letter (8.5 × 11 inches) A4 (210 × 297 mm) Panoramic (8.27 × 23.4 inches)	Photo Paper distributed by EPSON	—	—
Self adhesive sheets and iron-on cool peel transfer paper	A4 (210 × 297 mm) Letter (8.5 × 11 inches; iron-on cool peel transfer paper only)	Self adhesive sheets and iron-on cool peel transfer paper distributed by EPSON	0.0079 inch (0.2 mm) maximum	—
Photo stickers	A6 (105 × 148 mm) with 16 frames	Photo stickers distributed by EPSON	—	—



Notes:

Since the quality of any particular brand or type of paper may be changed by the manufacturer at any time, EPSON cannot guarantee the use of any particular brand or type of paper. Always test samples of paper stock before purchasing large quantities or printing large jobs.

Poor quality paper may reduce print quality and cause paper jams and other problems. If you encounter problems, switch to a higher grade of paper.

Do not load curled or folded paper, envelopes, or transparencies.

Print on ink jet papers and envelopes only under these conditions:

Temperature: 59 to 77°F (15 to 25°C)


Humidity: 40 to 60% RH

Store glossy media and self adhesive sheets under these conditions:


Temperature: 59 to 86°F (15 to 30°C)

Humidity: 20 to 60% RH

Printable area

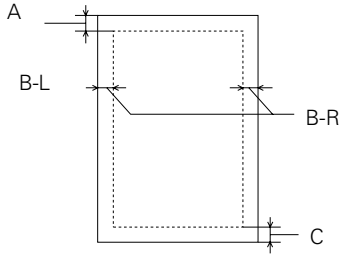


Single sheets and cards

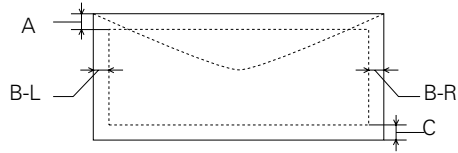


Envelope

- A The minimum top margin is 0.12 inch (3.0 mm).
When printing multiple sheets of glossy media, the minimum top margin is 1.2 inches (30 mm).
- BL The minimum left margin is 0.12 inch (3.0 mm).
- BR The minimum right margin is:
0.35 inch (9.0 mm) for Letter and Legal
1.10 inches (28 mm) for #10 envelopes
0.28 inch (7 mm) for DL envelopes
0.12 inch (3.0 mm) for all other paper sizes.
- C The minimum bottom margin is 0.55 inch (14.0 mm).

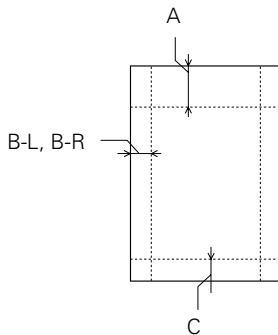

EPSON 4 × 6-inch Photo Paper
(dotted lines indicate perforations)

- A: The maximum top margin is 0.67 inch (17.0 mm).
- B-L, B-R: The maximum left and right margin is 0.24 inch (6.1 mm).
- C: The maximum bottom margin is 0.24 inch (6.1 mm).

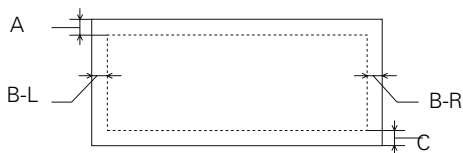

EPSON Panoramic Photo Paper

- A: The minimum top margin is 0.12 inch (3.0 mm).
- BL: The minimum left margin is 0.12 inch (3.0 mm).
- BR: The minimum right margin is 0.54 inch (14.0 mm).
- C: The minimum bottom margin is 0.12 inch (3.0 mm).



Note:
Always load paper into the sheet feeder short edge first except envelopes. Load envelopes long edge first.

Ink Cartridges

Specification	Black ink cartridge (S020108)	Color ink cartridge (S020089)
Color(s)	Black	Cyan, magenta, and yellow
Print capacity*	900 pages (A4 paper; text at Normal - 360 dpi) (ISO/IEC 10561 Letter Pattern)	300 pages (A4 paper; Normal - 360 dpi, 5% each color)
Cartridge life	2 years from production date and up to within 6 months after opening package at 77 °C (25 °F)	
Storage temperature	-4 to 104 °F (-20 to 40 °C) 1 month at 104 °F (40 °C)	
Transit temperature	-22 to 140 °C (-30 to 60 °F) 1 month at 104 °F (40 °C) 120 hours at 140 °F (60 °C)	
Freezing temperature**	-3.2 °F (16 °C)	-0.4 °F (-18 °C)
Dimensions	1.09 (W) × 2.1 (D) × 1.5 (H) inches 27.8 (W) × 52.7 (D) × 38.5 (H) mm	1.7 (W) × 2.1 (D) × 1.5 (H) inches 42.9 (W) × 52.7 (D) × 38.5 (H) mm

* The print capacity may vary depending on how often you use the print head cleaning function. Also, if you print large graphics and dense text with little white space, you use ink faster.

** The ink thaws and is usable after approximately 3 hours at 77 °F (25 °C).



Caution:
To ensure good results, use genuine EPSON cartridges and do not refill them. Other products may cause damage to your printer not covered by EPSON's warranty.

Do not use an ink cartridge after the expiration date on the package.

Mechanical

Paper feed method	Friction with auto sheet feeder, rear entry
Sheet feeder capacity	Maximum 100 sheets of 17 lb (64 g/m ²) paper
Dimensions	Storage Width: 18.7 inches (475 mm) Depth: 10.7 inches (274 mm) Height: 7.4 inches (177 mm) Printing Width: 18.7 inches (475 mm) Depth: 24.0 inches (610 mm) 27.2 inches (692 mm, when loading transparencies) Height: 12.4 inches (315 mm) 7.95 inches (202 mm, when loading transparencies)
Weight	14.3 lb (6.5 kg) without the ink cartridges

Electrical

Specification	120V model	240V model*
Input voltage range	103.5V to 132V	198V to 264V
Rated frequency range	50 to 60 Hz	
Input frequency range	49.5 to 60.5 Hz	
Rated current	0.4A	0.2A
Power consumption	Approx. 18 W (ISO/IEC 10561 Letter Pattern)	

* Also designed for IT power systems with Phase to Phase voltage 220–240V

Environmental

Temperature	Operation 50 to 95 °F (10 to 35 °C) Storage* –4 to 140 °F (–20 to 60 °C) 1 month at 104 °F (40 °C) 120 hours at 140 °F (60 °C)
Humidity	Operation 20 to 80% RH Storage* 5 to 85% RH (without condensation)

* Stored in shipping container

Safety Approvals

Safety standards	UL 1950 with D3, CSA 22.2 950 with D3
------------------	---------------------------------------

EMC

FCC part 15 subpart B class B
CSA C108.8 class B

DOS Support

If driver support for the EPSON Stylus COLOR 850Ne is not available from your software manufacturer, you can use one of the other EPSON ESC/P 2 printer drivers. Choose the first printer available from the following two lists:

Black printing only

- ▶ LQ-870/1170
- ▶ LQ-570(+)/1070(+)
- ▶ SQ-870/1070
- ▶ LQ-850
- ▶ LQ-500

Color and black printing

- ▶ EPSON Stylus PRO
- ▶ EPSON Stylus COLOR 500
- ▶ EPSON Stylus COLOR II
- ▶ LQ-860
- ▶ LQ-2550

Control Panel Settings




You can change the following default settings from the printer's control panel:

Setting	Options
Print direction	Auto, Bi-D, Uni-D
Font	Courier, Roman, Sans Serif, Prestige, Script, Roman T, Sans Serif H, Draft
Pitch	10 cpi, 12 cpi, 15 cpi, 17.1 cpi, 20 cpi, Proportional
I/F mode	Auto, Parallel, Serial, Option
Auto I/F wait time	10 seconds, 30 seconds
Software	ESC/P 2, IBM X24E
Auto CR (IBM mode only)	Off, On
AGM (IBM mode only)	Off, On
Character table	PC437, PC850, PC860, PC861, PC863, PC865, Abicomp, BRASCI, Roman 8, ISO Latin 1
International character set for italic table	Italic U.S.A., Italic France, Italic Germany, Italic U.K., Italic Denmark 1, Italic Sweden, Italic Italy, Italic Spain 1
Auto line feed	Off, On

Setting	Options
Network I/F mode	Off, On
Loading position	8.5 mm, 3 mm, Others
Economy	Off, On

Changing control panel settings

   Follow these steps to change the settings listed above:

1. Make sure the printer is turned off and has paper loaded.
2. Hold down the  color cleaning button and press the  power button. The printer prints a summary of instructions for changing settings and choosing the language to use for additional instructions.
3. Press the  color cleaning button to print a list of current settings and additional instructions.
4. After you make the changes you want, turn the printer off to save the settings. The settings remain in effect until you change them again.

Control Codes

ESC/P 2 control codes

See the *ESC/P[®] Reference Manual* for more information about these commands.

General operation:
ESC @, ESC U, ESC EM

Paper feeding:
CR, FF, LF, ESC 0, ESC 2, ESC 3, ESC +

Page format:
ESC (C, ESC C, ESC C 0, ESC Q, ESC I, ESC (c, ESC N, ESC O

Print position motion:
ESC \$, ESC \, ESC (V, ESC (v, ESC D, HT, ESC B, ESC J, VT

Font selection:
ESC k, ESC x, ESC X, ESC P, ESC M, ESC g, ESC p, ESC 4, ESC 5, ESC E, ESC F, ESC !

Font enhancement:
ESC W, DC 4, SO, DC2, SI, ESC w, ESC G, ESC H, ESC T, ESC S, ESC -, ESC (-, ESC q

Spacing:
ESC Space, ESC c, ESC (U

Character handling:
ESC t, ESC (t, ESC R, ESC %, ESC &, ESC :, ESC 6, ESC 7, ESC (^

Bit image:
ESC *

**IBM X24E emulation
control codes**

Graphics:

ESC (G, ESC ., ESC (i, ESC (e, ESC (\, ESC (s

Color:

ESC r, ESC (r

Printing mode:

ESC (K

This printer emulates the IBM Proprinter with the following commands. For detailed information, see IBM's X24E reference manual.

General operation:

NUL, DC3, ESC j, BEL, CAN, DC1, ESC Q, ESC [K, ESC U

Paper feeding:

FF, LF, ESC 5, ESC A, ESC A (AGM*), ESC 0, ESC 1, ESC 2, ESC 3, ESC 3 (AGM*), CR

Page format:

ESC C, ESC X, ESC N, ESC O, ESC 4

Print position motion:

ESC d, ESC R, ESC D, HT, ESC B, VT, ESC J, ESC J (AGM*)

Font selection:

DC2, ESC P, ESC :, ESC E, ESC F, ESC I

Font enhancement:

DC4, SO, ESC SO, ESC W, ESC [@, SI, ESC SI, ESC G, ESC H, ESC T, ESC S, ESC -, ESC _

Spacing:

BS, SP, ESC [\

Character handling:

ESC 6, ESC 7, ESC [T, ESC ^, ESC \

Bit image:

ESC K, ESC L, ESC Y, ESC Z, ESC [g, ESC * (AGM*)

* Alternate Graphics Mode

Character Tables

All character tables except Italic are the same as the PC437 table for hex codes 00 through 7F. Additional characters are available for hex codes 80 through FF. You can select the following character tables through the control panel or software commands:

- ◆ PC 437 (U.S./Standard Europe)
- ◆ PC850 (Multilingual)
- ◆ PC860 (Portuguese)
- ◆ PC861 (Icelandic)
- ◆ PC863 (Canadian-French)
- ◆ PC865 (Nordic)

**International
character sets**

- ▶ Abicomp
- ▶ BRASCII
- ▶ Roman 8
- ▶ ISO Latin 1
- ▶ Italic (no characters available for hex code 15)

You can select a number of international character sets with the control panel or the ESC R command. Other sets can only be selected with the ESC R command. You can select additional characters with the ESC (^ command.

Glossary

10BaseT	See <i>twisted-pair cable</i> .
address resolution protocol (arp)	Network protocol that is part of the TCP/IP protocol suite. See also <i>TCP/IP</i> .
AppleTalk	Macintosh networking protocol.
banding	The horizontal lines that sometimes appear in a printed image. See also <i>MicroWeave</i> .
buffer	The portion of the printer's memory used to store data before printing it.
character table	A collection of letters, numbers, and symbols that provides you with the characters used in a particular language.
characters per inch (dpi)	A measure of the size of text characters, sometimes referred to as pitch.
CMYK	Cyan (blue-green), magenta, yellow, and black. These colored inks are used to create printed colors.
ColorSync	Macintosh software that is designed to help you get WYSIWIG (what you see is what you get) output. This software prints colors as you see them on your screen.
configuration	The setup of a client, server, or network.
configure	To change the setup of a client, server, or network.
default	A value or setting that takes effect when the equipment is turned on, reset, or initialized.

- dithering** A halftoning method in which dots are arranged in an orderly pattern. Dithering works best for printing images with solid colors, such as charts and graphs. See also *halftoning*.
- dpi** Dots per inch. The dpi measures the resolution (print quality). See also *resolution*.
- driver** A software program that sends instructions to a computer peripheral to tell it what to do. For example, your printer driver accepts print data from your word processing application and sends instructions to the printer on how to print this data.
- Error Diffusion** This halftoning setting smooths out edges by randomly placing dots of varying colors.
- ESC/P** Abbreviation for Epson Standard Code for Printers. This system of commands gives you control of your printer from your computer. It is standard for all EPSON printers and supported by most application programs for personal computers.
- ESC/P 2** The enhanced version of the ESC/P printer command language. Commands in this language produce laser-like features, such as scalable fonts and enhanced graphics printing.
- Ethernet** Local area network technology that allows multiple transmissions to occur simultaneously.
- EtherTalk** Macintosh protocol for connecting to an Ethernet network.
- file server** A computer that holds files that other clients can access.
- font** A style of print designated by a name.
- gateway** A system connected to more than one network that receives and delivers information from one network to the other(s).
- grayscale** Shades of gray ranging from black to white. Grayscale is used to represent colors when you print with black ink only.

halftoning	A method of using dot patterns to represent an image. Halftoning makes it possible to produce varying shades of gray using only black dots, or a nearly infinite array of colors using only a few colors of dots.
hub	A physical network device that receives, routes, and sends information from computers or peripherals to the others on the network.
initialization	Returns the printer to its defaults. This happens every time you turn on or reset the printer.
ink jet	A method of printing in which each letter or symbol is formed by precisely spraying ink onto paper.
ips	Inches per second. This scale is used to measure the print head speed.
IPX/SPX	Network protocol used mostly by Novell NetWare.
LPR	Printing protocol.
media	Materials upon which data is printed, such as envelopes, plain paper, special paper, and transparency film.
MicroWeave	Printing technology that produces images in fine increments to reduce the possibility of banding. See also <i>banding</i> .
node address	The hardware address of any client, server, or peripheral on a network.
packet	A unit of data that can be sent over a network.
peripheral	A device such as a printer or a scanner that works with a computer.
ping	A command that requests a response from a remote computer over a network.
print queue	Print jobs that are sent to the printer while it is busy are stored in a waiting line, or print queue, until they can be printed.

- print server** A print server holds all the print information and performs all printing functions. The card can act as a print server when it is in print server mode, selectable through Novell NetWare.
- printable area** The area of a page on which the printer can print. It is smaller than the physical size of the page because of margins.
- printer driver** See *driver*.
- proportional printing** Printing in which the width of the character varies from character to character. For example, a capital *W* receives much more space than a lowercase *i*.
- Also, a setting in the EPSON Printer Software that allows you to make the printed size of a document different from its actual size.
- protocol** A set of rules and formats that computers use to communicate to one another and to peripherals over networks.
- remote printer** A printer that is connected directly to the network and chooses a specified print server when it is turned on.
- reset** To return a printer to its defaults either by sending a command, an INIT signal, or by turning the printer off and then back on.
- resolution** The number of dots per inch used to represent an image. The higher the resolution or print quality, the more detailed and realistic the image.
- router** A device that connects multiple segments of a network and determines when and where to send information from each segment to the others.
- scalable fonts** Fonts that can be enlarged or reduced. Non-scalable fonts (bitmap fonts) can't change in size.
- screen pattern** This feature prints shaded areas as they appear on screen, instead of printing them as halftones.
- spool manager** A software program that converts print data into codes that your printer understands.

- status monitor** A software program that allows you to check the printer's status, such as the amount of ink remaining before printing.
- subnet mask** A number used to separate different parts of a network, or subnets. The subnet mask can divide an IP network into smaller parts.
- TCP/IP** Transmission Control Protocol/Internet Protocol. A protocol suite made up of two parts (TCP and IP) that organizes and delivers data across a network.
- twisted pair cable** Also called 10BaseT. This cable is used in Ethernet networks.

Index

- A**
- Accessories, A-1 to A-2
 - Advanced mode, selecting, 3-2 to 3-4
 - Advanced settings
 - color, 3-7 to 3-10
 - custom, 3-4 to 3-33
 - predefined, 3-2 to 3-4
 - saving custom, 3-34
 - Aligning print heads, 5-8 to 5-9, 6-5
 - Automatic mode, 1-2, 1-8
- B**
- Background printing, Macintosh, 4-15 to 4-17
 - Banding, 6-5
 - Blank pages, 6-17
 - Blurry printouts, 6-7
 - Brightness setting, 3-8
- C**
- Cards, *see* Photo Quality media, Ink Jet Cards
 - Character sets, international, B-2
 - Character tables, B-2, B-9
 - Characters, garbled, 6-15
 - Cleaning print heads, 5-6 to 5-8
 - using Head Cleaning utility, 5-6 to 5-7
 - Cleaning printer, 5-10
 - Cleaning sheets, 2-3
 - Color Adjustment modes, 3-8
 - Color problems, 6-6
 - ColorSync, using, 3-3, 3-9 to 3-10
 - CompuServe, 5
 - Configuration button, 4-19
 - Contrast setting, 3-8
 - Control codes, B-2, B-8 to B-9
 - Control panel default settings, B-7
 - Control panel, using, 1-10, 5-7 to 5-9, 6-3
 - Custom settings
 - changing, 3-34
 - color, 3-7 to 3-33
 - deleting, 3-34
 - list, 3-2
 - print quality, 3-4 to 3-6
 - saving, 3-33 to 3-34
 - special effects, 3-4 to 3-6
 - Cyan setting, 3-8
- D**
- Default control panel settings, B-7
 - Default printer options, setting, 1-4
 - Deleting print job, 4-14
 - Despooler, 1-5, 6-12
 - Dithering, 3-6
 - DOS support, B-7
 - Driver, 1-1
- E**
- Economy setting, 3-3
 - Electrical specifications, B-6
 - Energy Star, 6
 - Envelopes
 - loading, 2-5
 - specifications, B-4 to B-5
 - Environmental specifications, B-6
 - EPSON
 - Accessories, A-1 to A-2
 - Customer Care Centers, 5
 - Electronic support services, 5 to 6
 - help, 5 to 6
 - media, 2-1 to 2-3
 - World Wide Web site, 5
 - EPSON Spool Manager, *see* Spool Manager

Error Diffusion setting, 3-6
Error notification, 4-20
ESC/P 2 control codes, B-2, B-8

F Faint printouts, 6-6
Film, *see* Photo Quality media,
glossy media
Finest Detail setting, 3-6
Fit to Page setting, 3-27 to 3-29
Flip Horizontal setting, 2-8, 3-6,
6-16
Fonts, B-2, B-7
Forms, loading, 2-3
FTP Site, EPSON, 5

G Garbled characters, 6-15
Glossy media, 2-3 to 2-4,
B-3 to B-4

H Halftoning setting, 3-6
Head Cleaning utility, 5-6 to 5-7
Help
 EPSON, 5 to 6
 software, 1-2, 6-2
Hex dump mode, 6-4
High Speed setting, 3-6
Horizontal banding, 6-5

I IBM X24E emulation control
codes, B-2, B-7 to B-9
ICM (Image Color Matching)
setting, 3-3, 3-9

Ink
 cartridge ordering, A-1
 cartridge specifications, B-5
 monitoring level, 1-10
 replacing cartridges, 5-1 to 5-5
 replacing outdated cartridge,
 5-5
 setting, 1-8
 smears, 2-5
 specifications, B-5
 supply, 4-18
Ink Jet Cards, *see* Photo Quality
Ink Jet Cards
Ink Jet Cards, *see* Photo Quality
media, Ink Jet Cards
Ink Jet Paper
 choosing, 1-8, 2-1 to 2-2,
 A-1 to A-2
 loading, 2-3
 specifications, B-3 to B-5
Ink Jet Transparencies, *see*
Transparencies
Interface (I/F) mode setting, B-7
International character sets, B-2,
B-9
Internet, 5
Iron-On Transfer Papers,
2-1 to 2-2, 2-8, B-3 to B-4

J Jammed paper, 1-10, 6-14

L Landscape setting, 3-17
Layout button, 1-9
Letterhead, *see* Paper
Lights, using, 1-10, 6-1 to 6-3

- M** Macintosh
 ColorSync, 3-9 to 3-10
 configuration options,
 4-19 to 4-20
 increasing memory allocation,
 4-16
 managing print jobs,
 4-16 to 4-20
 Monitor3, 4-15 to 4-17
 printing from, 1-7 to 1-9
 problems printing, 6-11
 Status Monitor, 1-9, 4-17
 uninstalling software, 6-18
 Magenta setting, 3-8
 Main tab, 1-2
 Maintaining printer, 5-1 to 5-10
 Manual, how to use, 3 to 4
 Margin
 problems, 6-16
 with multiple sheets, 2-4
 Mechanical specifications, B-6
 Media Type setting, 1-3, 1-8,
 2-1 to 2-2
 Memory allocation, increasing on
 Macintosh, 4-16
 MicroWeave setting, 3-6
 Monitor3, 4-15 to 4-17
 Monitoring
 ink level, 1-10
 More Settings dialog box,
 3-4 to 3-10
 Multiple print layouts,
 3-23 to 3-24, 3-29 to 3-30
- N** Nozzle Check, 5-8
- P** Packing printer, 5-10
 Page frames, 3-23 to 3-24,
 3-29 to 3-30
 Page Order options, 3-24
 Page Setup dialog box, 1-7
 Panoramic Photo Paper, *see* Photo
 Paper
- Paper
 EPSON, 2-1 to 2-8, A-1 to A-2
 handling problems,
 6-13 to 6-15
 loading, 2-3 to 2-7
 ordering, A-1
 plain, 1-3
 specifications, B-3 to B-5
 Paper jams, 1-10, 6-14
 Paper support, 2-4
 Paper tab, 1-3
 Paper thickness lever, 2-5, 6-7
 Photo Paper
 choosing, 1-8, 2-2, A-2
 loading, 2-6 to 2-7
 specifications, B-3 to B-5
 Photo Quality glossy media
 choosing, 1-8
 Photo Quality Ink Jet Cards, A-2
 Photo Quality media
 glossy media
 choosing, 1-8, 2-2, A-1 to A-2
 loading, 2-4
 specifications, B-3 to B-5
 Ink Jet Cards, 2-2, 2-7,
 B-3 to B-4
 Ink Jet Paper
 choosing, 1-8, 2-2, A-1
 specifications, B-3 to B-4
 Self Adhesive Sheets, 2-2, 2-8,
 A-2, B-3 to B-4
 Photo setting, 3-3
 Photo Stickers, 2-2, A-2, B-3
 PhotoEnhance setting, 3-3, 3-9
 Plain paper, 1-3, B-3 to B-4
 Portrait setting, 3-17
 Preprinted forms, loading, 2-3
 Print Head Alignment utility,
 5-8 to 5-9, 6-5
 Print heads, cleaning, *see* Cleaning
 print heads
 Print jobs
 deleting, 4-14
 managing in Windows,
 4-1 to 4-15
 managing on Macintosh,
 4-15 to 4-20

Print layouts, multiple,
3-23 to 3-24, 3-29 to 3-30

Print quality
customizing, 3-4 to 3-6
problems, 6-4 to 6-7

Print queues, 4-13 to 4-15

Printable area
specifications, B-4 to B-5

Printer driver, 1-1

Printer software
uninstalling, 6-17 to 6-18

Printing speed, B-1

Problems
diagnosing, 6-1 to 6-4
paper handling, 6-13 to 6-15
print quality, 6-4 to 6-7
printing, 6-8 to 6-13
slow printing, 6-12
solving, 6-1 to 6-18
Status Monitor 2, 6-12
unexpected printout results,
6-15 to 6-17
uninstalling software,
6-17 to 6-18

Progress Meter
dialog box, 1-5

Proportional Printing option, 3-12,
3-20 to 3-23

Q Quality/Speed slider, 1-9

R ReadMe files, 6-2

Rendering Intent setting, 3-10

Replacing ink cartridges, 5-1 to 5-5

Resolution, 1, 3-5
see also Print quality

Rotate by 180° setting, 3-17

S Safety
approvals, B-6
instructions, 7 to 8

Saturation setting, 3-8

Self Adhesive Sheets, *see* Photo
Quality media, Self Adhesive
Sheets

Self test, 6-3

Service, 5 to 6

Settings, default, 1-4

Settings, printer software
advanced, *see* Advanced settings
checking, 1-2 to 1-4, 1-7 to 1-9
reusing on Macintosh, 1-7

Slow printing, 6-12

Smears, 2-5

Special effects, 3-4 to 3-6

Specifications
character tables, B-9
control codes, B-8 to B-9
control panel settings, B-7
DOS support, B-7
electrical, B-6
environmental, B-6
ink cartridges, B-5
mechanical, B-6
paper, B-3 to B-5
printing, B-1 to B-2
safety approvals, B-6

Speed, printing, B-1

Spool directory, changing default,
4-14 to 4-15

Spool folders, 4-10, 4-19 to 4-20

Spool Manager
deleting print job, 4-14
problems, 6-9, 6-11, 6-15
using, 4-12, 4-13 to 4-15

Stalled print jobs, deleting, 4-12

Status Monitor
Macintosh, 1-9, 4-17

Status Monitor 2
problems, 6-12
Windows, 1-5, 6-17

Support, 5 to 6

System requirements, 1 to 2

T Technical specifications,
 B-1 to B-10
Testing printer, 6-3
Text/Graph setting, 3-3
Thickness lever, 2-5, 6-7
Transparencies
 choosing, 1-3, 1-8, 2-2, A-2
 loading, 2-4
 specifications, B-3 to B-4
Transporting printer, 5-10
Troubleshooting, 6-1 to 6-18

U Utility
 button, 1-9, 5-6 to 5-7, 5-9
 tab, 5-6 to 5-7, 5-9

W Windows
 checking printer status,
 1-5 to 1-6
 managing print jobs,
 4-1 to 4-15
 printing from, 1-1 to 1-6
 Spool Manager, 4-13 to 4-15
Windows 95
 problems, 6-11 to 6-12
World Wide Web, 5

Y Yellow setting, 3-8