 




# MODEL: WITNESS P SEMIAUTOMATIC PISTOL

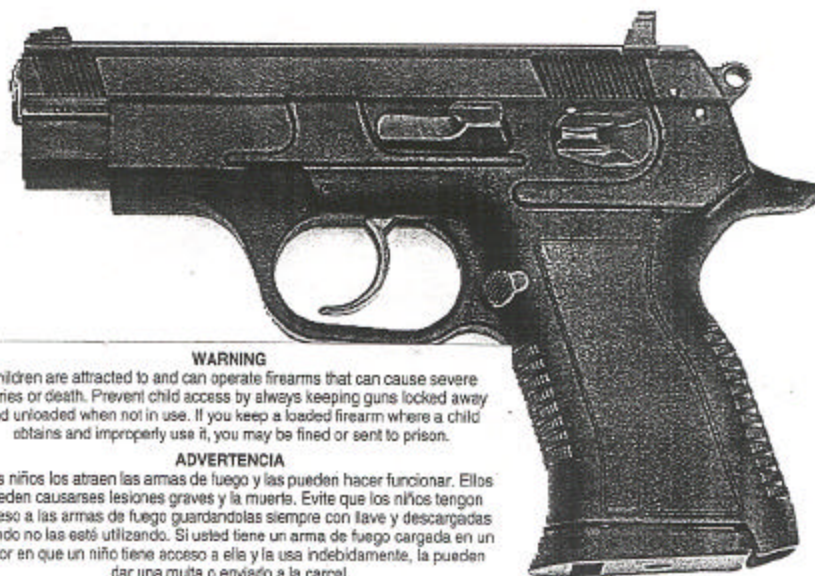

#### WARNING

Children are attracted to and can operate firearms that can cause severe injuries or death. Prevent child access by always keeping guns locked away and unloaded when not in use. If you keep a loaded firearm where a child obtains and improperly use it, you may be fined or sent to prison.

#### ADVERTENCIA

A los niños los atraen las armas de fuego y las pueden hacer funcionar. Ellos pueden causarse lesiones graves y la muerte. Evite que los niños tengan acceso a las armas de fuego guardandolas siempre con llave y descargadas cuando no las esté utilizando. Si usted tiene un arma de fuego cargada en un lugar en que un niño tiene acceso a ella y la usa indebidamente, la pueden dar una multa o enviarlo a la carcel.

## MANUAL FOR

45 ACP - Full size - 10RDS  
10 mm - Full size - 10RDS  
38 Super- Full size - 10RDS

45 ACP - Compact - 8RDS  
10 mm - Compact - 9RDS  
38 Super- Compact - 10RDS

#### Finishes Available:

Slides - Blue or wonderfinish  
Frames-Polymer (black, gray,  
blue, pink, yellow, red, green,  
purple, olive drab, white)

**Important!**  
**Read this book before using firearm**

#### Note:

 
If you have a wonderfinish slide model, you must oil and maintain it as if it were blue steel.



#### WARNING!

DO NOT USE + P Ammo or High Velocity High Pressure Ammunition (factory of handloaded)

# 1. ALWAYS USE THE SAFETY

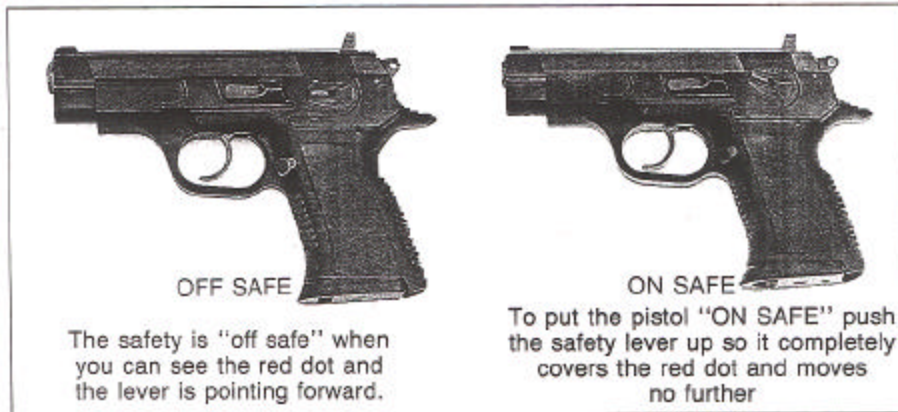

The safety can be operated with the hammer cocked or not cocked and with the pistol loaded or unloaded. There is not a magazine safety, so the pistol may be fired with the magazine removed.

**All guns can be dangerous if improperly used. Keep the pistol "on safe" all the time, except at the actual moment of firing, to help protect against accidental firing and possible injury or death of yourself or others.**

Your safety DOES:

- ☆ Locks the sear lever so the trigger cannot be pulled and the hammer fall.
- ☆ If hammer is back and safety is on, you can move the slide to safety check the chamber.

But your safety DOES NOT:

- ☆ Take the place of safe gun handling.
- ☆ Lessen your duty to use the pistol with great care.
- ☆ Provide foolproof protection against firing.

There is also an automatic internal firing pin block which stops the firing pin from traveling forward. The block is released only by pulling the trigger all the way to the rear, as in firing shot.

## LOWERING THE HAMMER

**EXTREME CAUTION REQUIRED!** Both the manual safety and the automatic internal firing pin block are "OFF SAFE" when you do this. **THE PISTOL CAN FIRE IF YOU DO IT WRONG.**

Point the pistol in a safe direction. Move the safety to the "OFF SAFE" position. Grasp the hammer very firmly and put a finger between the hammer and the firing pin. Then pull the trigger and slowly let the hammer move forward past the half-cock point. **RELEASE THE TRIGGER.** Then gently let the hammer down against the rear of the slide. **PUT THE MANUAL SAFETY "ON SAFE".**



## 2. HOW TO LOAD AND FIRE

- ☆ Press the magazine release button and remove the magazine from the pistol.
- ☆ Load the cartridges into the magazine. Do not force! (see front cover, do not overload)
- ☆ Push the magazine up into the pistol firmly until the magazine catch locks it in place (do not slam magazine into place).



### TO LOAD THE CHAMBER

#### **BE SURE YOUR FINGER IS OUT OF THE TRIGGER GUARD AND OFF THE TRIGGER.**

Holding the pistol grip, grasp the serrations as far back as possible on the slide and pull the slide rearward until it cannot travel any further. Release the slide and allow it to go forward into the closed position. It will automatically take a cartridge from the magazine and load it into the chamber. (Make sure your fingers or hand are not in front of the barrel).

### **WARNING!**

**YOUR PISTOL IS LOADED AND READY TO FIRE!  
PUSH THE SAFETY UP TO "ON SAFE" IMMEDIATELY!**

To fire, put the safety down (exposing the red dot) and squeeze the trigger. The pistol will fire one shot with every squeeze of the trigger until the magazine is empty. When the magazine is empty the slide will stay open. You may remove the magazine and reload it while the slide is open. Insert the loaded magazine into the pistol. Then press down on the slide stop, which lets the slide close and reloads the chamber, or pull back slightly on the slide and let it go and the pistol will automatically reload the chamber and be ready to fire.

**Choose your target carefully. Be sure there is a safe backstop.**

**THINK!** What will you **HIT** if you **MISS** the target?

### **AMMUNITION**

Because of the dangers of poor or nonexistent quality control standards among some companies and people who make reloaded ammunition, and the well known fact that dangerous overloads and underloads (squib loads) sometimes occur, we recommend that only good quality factory ammunition be fired in our products. If you prepare your own handloads do not exceed recommended pressures in line with those generated by standard factory loads as manufactured by Remington, Winchester, Federal, PMC or other reputable companies. Do not use + P Ammo or High Velocity High Pressure Ammunition.

## 3. HOW TO UNLOAD

BE SURE THE SAFETY IS "ON SAFE"

Press the magazine release button and remove the magazine from the pistol.

Simply removing the magazine does not unload the chamber. If a cartridge is still in the chamber the pistol can fire even with the magazine removed.

To unload the chamber point the pistol in a safe direction, keep your finger OUT of the trigger guard and OFF THE TRIGGER and move the safety to "OFF SAFE". THE PISTOL CAN NOW FIRE IF YOU PULL THE TRIGGER, SO BE VERY CAREFUL! When you grip the pistol for the next step, be sure your finger is not inside the trigger guard.

 
Pull the slide to the rear to remove any cartridge that may be in the chamber.

Always check the chamber to be sure the pistol is completely unloaded.

The magazine may be unloaded by pressing the cartridges forward and out with the thumb.

## 4. DISASSEMBLY AND CLEANING

Remove the magazine and clear the chamber to be sure the pistol is empty.

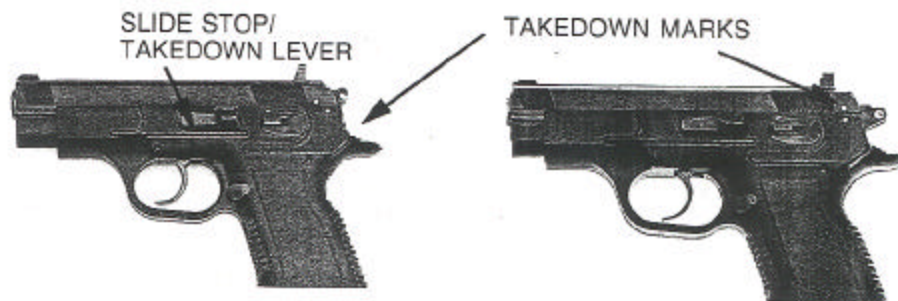

- ☆ Field stripping NO TOOLS. DO NOT pry or hammer on the pistol.
- ☆ Pull the hammer back to the full cock position.
- ☆ Identify the 2 take down marks behind the safety on the left sides of the slide and frame. Pull the slide back slightly to line up the 2 marks. (HINT. Use the rear sight for handy leverage when lining up the marks).
- ☆ Remove the slide stop-takedown lever by pushing on the end sticking out of the right side of the pistol. and pulling on the lever with your other hand.
- ☆ Slide the barrel/slide assembly forward and off the receiver.
- ☆ Hold the slide upside down, retract the recoil spring and remove the recoil spring and guide.
- ☆ Remove the barrel from the slide.
- ☆ NO FURTHER DISASSEMBLY of the pistol is recommended, unless performed by a qualified gunsmith. Remember that work done by others and unauthorized gunsmithing by non-factory personnel will void the warranty.
- ☆ To reassemble simply reverse this procedure.

### SPECIFICATIONS

Caliber	10 mm, 45 ACP, 38 Super	Barrel	4.44 inches / 3.66 inches
Height	5.30 inches / 5.12 inches	Length	8.26 inches / 7.67 inches
Magazine	Double Column	Weight	27 ounces / 24 ounces
Trigger	Single and double action		
Construction	Frame: Polymer Slide: Nickel steel alloy		
Safety	Colt type for "cocked and locked" carry or hammer down double-action carry		



## **WARNINGS**

### **READ THIS AND BE A SAFE SHOOTER**

- Always keep the muzzle pointed in a safe direction.
- Never point a gun at any person or thing you don't intend to shoot.
- Treat every gun as if it is loaded... all the time.
- Get instructions from a competent firearms instructor before using any gun.
- Never rely on a gun's "safety" to protect you from unsafe gun handling. A safety is only a mechanical device, not a substitute for common sense.
- Keep your finger **Off the trigger** until you are actually aiming at the target ready to shoot.
- Don't alter or modify your gun, and have guns serviced regularly.
- Be certain the gun is unloaded before cleaning.
- Always empty guns before entering a house , car, truck, boat, RV, camp or any building.
- Never leave a loaded gun unattended.
- Store guns and ammunition separately **beyond the reach of children.**
- Don't "test the safety" by pulling the trigger while the safety is on.
- Be sure of your target and backstop before you shoot. Ask yourself what your bullet will hit if it misses the target.
- Be sure the barrel is clear of obstruction before shooting.
- Guns and alcohol or drugs don't mix. Don't take them before or during shooting activities.
- Never pull a gun towards you by the muzzle. Don't climb a tree or cross a fence or ditch with a loaded gun.
- Load and unload with the muzzle pointed in a safe direction.
- If a gun fails to fire when trigger is pulled, keep it pointed at target for at least 30 seconds. Sometimes slow primer ignition will cause a "hang fire" and the cartridge will go off after a short pause.
- Never shoot at hard flat surfaces or water... bullets will ricochet.
- When receiving a gun always open the action and check that it's unloaded.
- Never put your hand over the muzzle of a gun.

## WARNINGS

### READ THIS AND BE A SAFE SHOOTER

Never leave a gun where it could fall and fire.

Always wear protective shooting glasses when shooting on the range or in a field or forest.

Old or reloaded ammo may be dangerous. We recommend against using it.

Spectators should be 10 feet behind and away from the shooter while loading, firing and unloading.

Wear hearing protection when shooting, or at a shooting range, or near shooting activities.

Load the gun only when on the range preparing to fire, and unload it before leaving the range.

Never carry any handgun in your pocket, purse or tucked in a belt or waistband. Use a pistol case or a proper holster with safety flap or strap.

Don't try to change your gun's trigger pull, because alterations of trigger pull usually affect sear engagement and may cause accidental firing.

If you do drop your gun, unload it and check it for proper function before using it again.

Always wear fluorescent orange vest, hat or jacket when in the woods or fields.

Never let water, snow, mud or other material enter barrel.

Firearms should be unloaded when not actually in use.

Many ammunition identifications sound similar. Make sure you do not use wrong size ammo in your gun.

Write to us concerning any items or circumstances which you don't understand and which might relate to your safety and the operation of any of our products.

**WARNING:** The actual firearm does not contain any lead; however, it does fire ammunition containing lead or lead compounds known to the State of California to cause cancer, birth defects and/or reproductive toxicity. Those who discharge a firearm, stand near someone who discharges a firearm or cleans firearms are hereby warned of the dangers presented by lead and lead compounds and should take protective health measures. Avoid exposure to lead while handling and wash your hands after contact. Proper air ventilation is absolutely necessary when shooting indoors.

**WARNING:** Lead or lead compounds are known to the State of California to cause cancer, birth defects and/or reproductive toxicity. Those who clean firearms should take protective measures to avoid contact or exposure to such chemicals.

#### WARNING

ANY BORE OBSTRUCTION, EVEN IF IT IS ONLY PARTLY BLOCKED, MAY CAUSE THE GUN TO BLOW UP IF IT IS FIRED, OR MAY CAUSE DAMAGE TO THE GUN SUCH AS A BULGED BARREL. TO AVOID INJURY OR DEATH TO THE SHOOTER OR BYSTANDERS, CHECK THE BARREL BEFORE SHOOTING OR IF A SHOT DOES NOT SOUND NORMAL.



### **LIFE TIME LIMITED WARRANTY**

All EAA guns are warranted to the original retail customer for life from date of purchase against defects in material and workmanship. All parts and labor or replacement (at our option) are covered. Transportation to and from our repair facilities, damage caused by failure to perform normal maintenance, sales outside the United States, damage due to use of high velocity, high pressure, reloaded or other nonstandard ammunition, or any unauthorized repair, modification, misuse, abuse, or alteration of the product is not covered by this Limited Warranty. Any implied warranties, including the implied warranties of merchantability and fitness for a particular purpose, are limited to one year from date of original retail purchase. Consequential or incidental damages or expenses, or any other expenses are not covered by this warranty.

To obtain warranty performance send your product with proof of retail purchase, freight prepaid, to:

EAA  
3855 NORTH US HIGHWAY ONE  
COCOA, FL. 32927

### **HOME SAFETY IS PROBABLY YOUR BIGGEST CONCERN**

We suggest the following gun lock:

Master Gun Lock is a good gun lock. It works on most Firearms. Master gun locks are available in Gun Shops and sporting goods departments. For more information write: Master Gun Locks; Master Lock Company, P.O. Box 10367, Milwaukee, WI. 53210. After all you have invested this much in your new gun, now invest a little more in you families safety.

### **USED FIREARMS**

If you got your EAA firearm as a used gun, BEFORE USING IT you should unload it and check all its functions to be sure it works correctly. Firearms are some times altered to work incorrectly, or parts may be removed, lost or replaced with incorrect parts. First, unload it and check it yourself and then: 1. Take it to a good gunsmith who knows about this model of EAA firearm, and have him check it over, or 2. Send it to EAA along with \$ 30.00 and your name and address, and our gunsmiths will inspect it and send it back to you with a report on its condition. This service is also available if you have an older EAA product, or if you think your EAA gun has been dropped, damaged or just needs to be checked.

EAA  
3855 NORTH US HIGHWAY ONE  
COCOA, FL. 32927

### **YOUR OWNER'S MANUAL**

This manual contains important warnings which must be understood BEFORE using this firearm. Always keep it with the firearm. When you lend, give or sell the firearm, be sure the manual goes with it. You can get a copy of this manual from EAA on request.