

MANUFACTURED BY:



PRECharge AB
Fagerlids Såg
SE-548 92 Hova
www.fxairguns.com

DISTRIBUTED BY:



251 E Broadway Rd.
Mesa, AZ 85210
(480)461-1113
www.airgunsolarizona.com

Images by:
AOA—Greg '02

FX SUPER STROKE PUMP



OWNER'S MANUAL


ASSEMBLY

1. Locate the small bag with parts enclosed




2. Place the nylon washer into open hole above the bleeder screw.

3. Attach the hose to the pump, and tighten down.

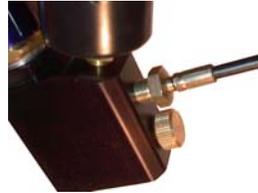

4. Remove tape from the filter on the hose. ***Note: Be sure not to remove innards when removing tape, keeping the nylon washer within.**

 5. Attach the fill probe (or adaptor) to the filter with a sealing washer between the two surfaces.



6. Make sure all the connections are tight.

7. Locate the pump base in the box.



8. Using bolts provided, fasten the pump base to the body.

9. The base screws should be flush in recessed holes to achieve a flat surface.



10. Your FX Super Stroke Pump is now ready to use!

WARRANTY

The FX Super Stroke Pump is covered under warranty for twelve months from the date of purchase. This warranty covers parts and labor for defects in materials and workmanship. This warranty does not cover abuse or misuse by the owner. FX assumes no liability resulting from the use of their products.

USING THE PUMP

1. Place your gun on a clean dry surface.

2. Connect the pump to your rifle.



3. Close bleeder screw on the base of the pump.

4. Begin pumping air into your gun, using smooth, full strokes.

5. Continue pumping until pressure reaches **200 bar**



6. Open bleeder screw on the base of the pump quickly.

7. Disconnect the pump from your gun.

MAINTENANCE

The FX Super Stroke Pump requires no maintenance other than general cleaning. To ensure proper functionality, keep dust from getting into the pump body. If pump appears to be “dry” along outer shaft, a small amount of silicone grease can be applied to smoothen the stroke.

**This owner's manual was
provided as a service to you
by:**



www.airgunsofarizona.com

airguns_az@yahoo.com

Phone: (480)461-1113

Fax: (480)461-3928