

The FX Timberwolf



OWNER'S MANUAL

READ THIS MANUAL BEFORE
USING YOUR NEW AIRGUN

Warranty

The FX Timberwolf carries a One Year Warranty against faulty workmanship and defective materials. Contact the dealer from which you purchased the gun if it becomes necessary.

*NOTE: Always use caution when operating this rifle. Learn and obey the laws of your city, and be responsible in your use of this weapon.

WARNING!

Never attempt to disassemble this rifle while it is charged. Failure to obey this instruction could result in personal injury or damage to the gun.

Specifications For Use and Maintenance of The FX Timberwolf

The FX Timberwolf is a 2-shot, pre-charged pneumatic air rifle. It is available in .177 (4.5mm) and .22 (5.5mm).

SPECIAL FEATURES:

1. Fixed, 2-shot, slide magazine reloadable on the rifle
2. Adjustable 2-stage trigger
3. Pressure gauge built-in to air cylinder
4. Top grade rifled barrel
5. Standard quick-fill nozzle
6. Checkered stock with pistol grip and rubber recoil pad. Available in beech or walnut.
7. Standard dovetail groove for scope mounts

BARREL LENGTH: 19.7 inches

OVERALL LENGTH: 39.0 inches

WEIGHT (without sight): 6.6 lbs

MAXIMUM CYLINDER FILL PRESSURE: 200 BAR

NUMBER OF SHOTS FROM A FULL CHARGE:

100@12ft/lbs in .177*

40@25ft/lbs in .177*

100 @12ft/lbs in .22*

30 @ 30ft/lbs in .22*

*Number represents count taken in a range of usable, consistent shots

General Instructions

The FX Timberwolf must be fitted with a scope or alternate optic sights before use. Before using your rifle, read and abide by the basic safety rules.

The Basic Safety Rules:

1. Treat every rifle as if it is loaded.
2. Never point the rifle at anyone, or allow anyone to point a rifle at you, even if you know it is not loaded.
3. Always carry the rifle so that the direction of the muzzle is under control, even if you stumble.
4. Always be sure of your target and what lies behind it before firing your rifle.
5. Never leave a loaded rifle unattended.
6. Beware of targets that tend to cause ricochets.


Operating Instructions

Charging the Rifle

Insert the nozzle of the fill hose into the rifle's fill hole located in the end plug at the muzzle end of the rifle, after making sure the hole is clear of dirt. Charge the rifle to its optimal range, without exceeding **200 BAR**.

***Undo the bleeder valve on the hose before disconnecting the fill nozzle from the rifle.**

Trigger Mechanism Adjustment

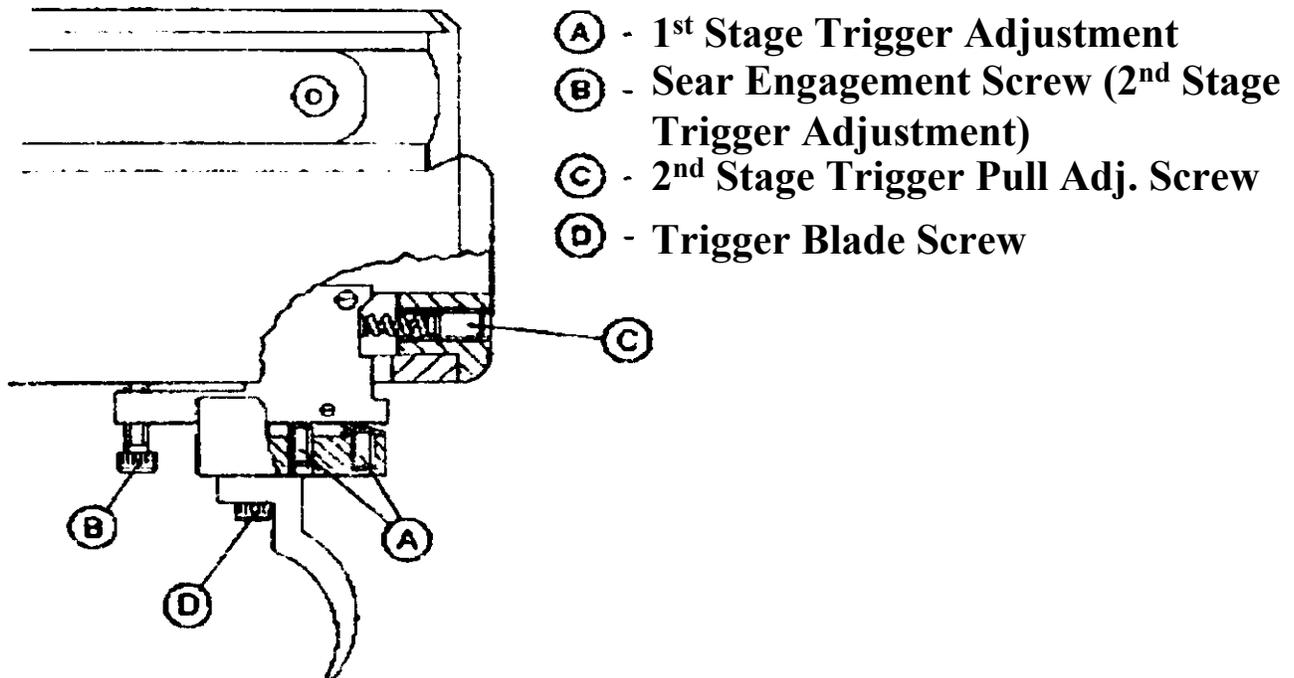

Note

1. Before making any adjustments to the trigger mechanism, make sure the magazine is removed and the barrel is not loaded with a pellet.
2. If the sear engagement screw is adjusted, make sure to leave enough sear engagement with the hammer to ensure safe operation of the rifle.
3. Test fire the rifle before replacing a loaded magazine.

Adjusting the Power

To adjust the power, remove the stock and locate the air transfer port restrictor screw, located on the right-hand side of the cylinder. Turn the restrictor screw counter-clockwise to increase the velocity and clockwise to reduce the velocity. Once the adjustments are complete, blue Loctite may be applied to the air transfer port restrictor screw.

Step-By-Step Loading Instructions



Draw back cocking bolt fully and push sliding magazine to right-hand side.



Place a pellet in magazine port and release magazine.



Seat the pellet into the bore by pushing the bolt forward, then draw back the bolt once again.



Push magazine to the right and insert a second pellet.



With magazine **STILL PUSHED FIRMLY TO THE RIGHT**, close the bolt.



The Timberwolf is now ready to fire two shots as fast as you can cycle the bolt!

NOTE: FAILURE TO OBSERVE STEP 5 WILL RESULT IN TWO PELLETS BEING LOADED AT THE SAME TIME!

Maintenance

WARNING!

Never attempt to strip this rifle while it is partially or fully charged. Failure to obey this instruction can result in serious injury and/or damage.

If the rifle develops a defect within the warranty period, contact the dealer from whom it was purchased. The guarantee does not cover any damage caused by tampering with the rifle.

This rifle should only be disassembled by factory-authorized repairmen, or by a competent gunsmith.

Lubrication

Do not apply lubrication to the air filler nozzle or the air filler hole on the rifle.

Apply proper mineral based oils occasionally to the following parts:

1. The trigger mechanism
2. The bolt slot shroud
3. The stem of the hammer assembly

Do Not Over-Lubricate the Rifle

Bolt Positions

To cock the rifle, lift the bolt and pull back to the rear position. This sets the trigger. Returning the bolt to the forward position loads a pellet and makes the rifle ready to fire. The rear slot serves as a safety and dry fire position. Rifle is fully disabled with bolt up and back. To cycle the magazine, slide bolt from forward to rear position. **Use Caution To Avoid Loading More Than One Pellet.**

“O” Ring Maintenance

Quick Fill Nozzle “O” Rings Replacement

After a period of time, the “O” rings on the fill nozzle will need to be replaced. The need for this will become noticeable if air is heard leaking from the nozzle while charging the rifle. Always be sure to replace both “O” rings.

**This owner's manual was
provided as a service to you
by:**



www.airgunsofarizona.com

airguns_az@yahoo.com

Phone: (480)461-1113

Fax: (480)461-3928