



Rolling Action
516183





Profi Dynamic
511932

Profi Dynamic
Parcours 3

Seite 68
Page 68
Page 68
Bladzijde 68
Página 68



Página 68
Página 68
Страница 68
页次 68

Farbig dargestellte Teile ausbauen.
Remove parts shown in color.
Démontez les pièces reproduites en couleurs.
In kleur weergegeven onderdelen uitbouwen.
Desmontar las piezas representadas en color.
Desmontar as peças representadas em colorido.
Smontare i componenti evidenziati dai colori.
Демонтируйте показанные цветом детали.
拆卸用颜色标出的零件。

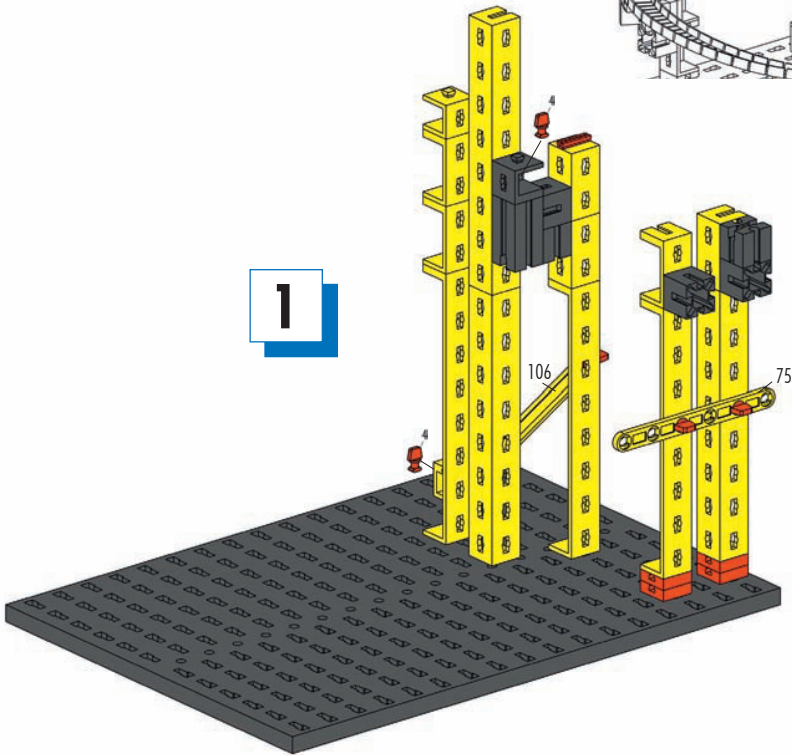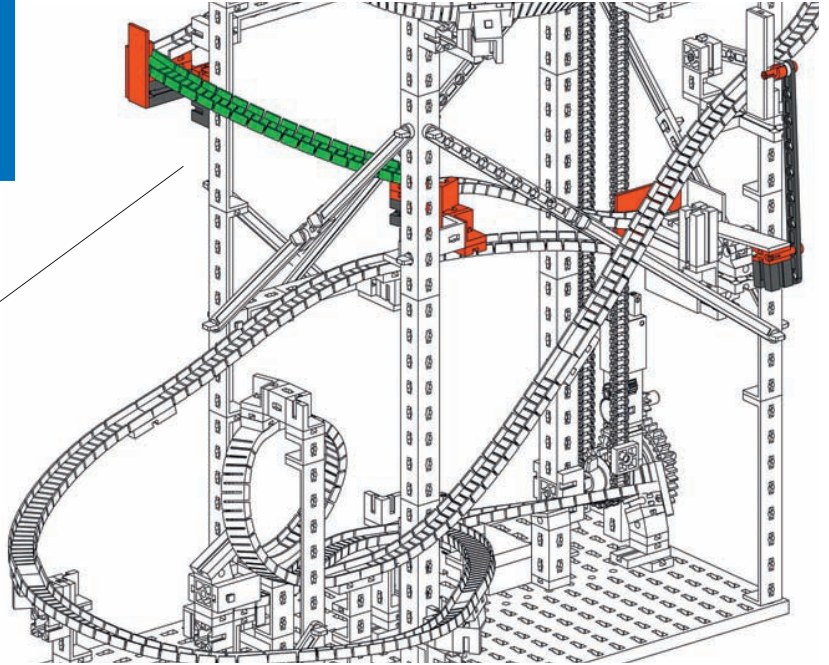


1



2

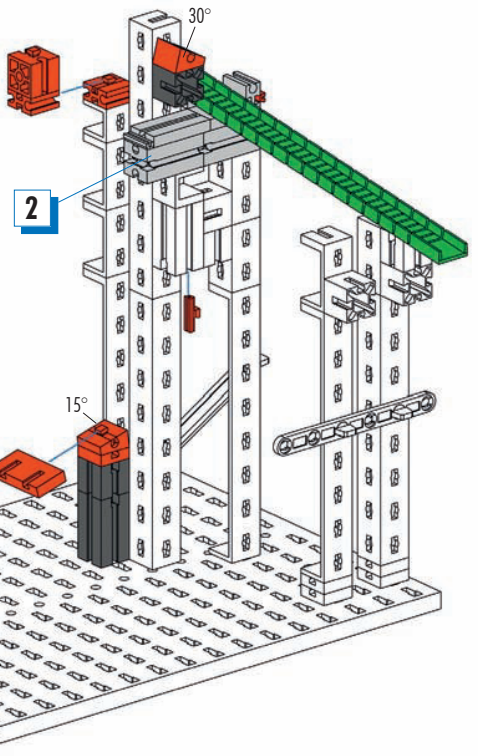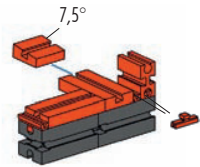


3

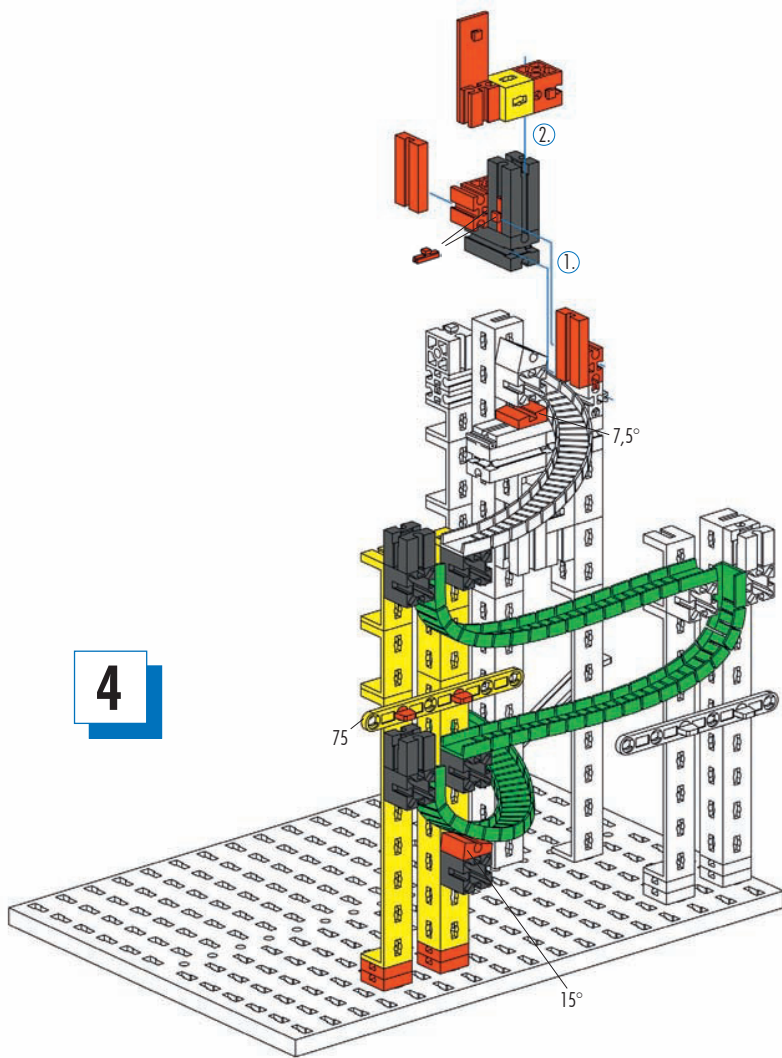


5

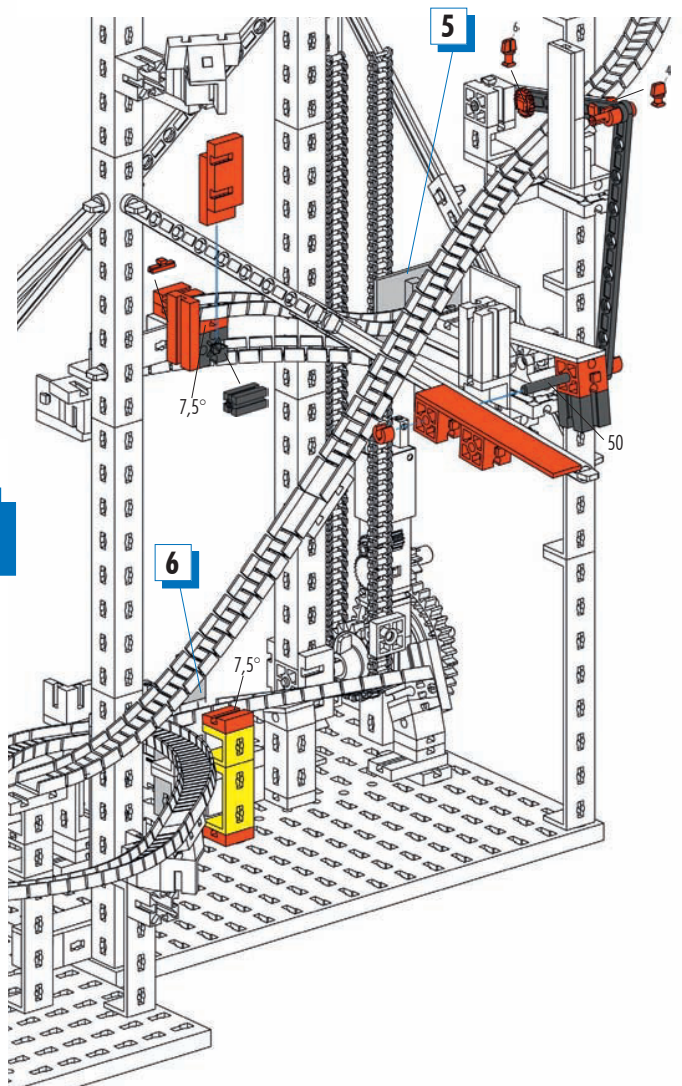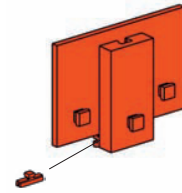


6

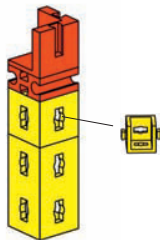

8

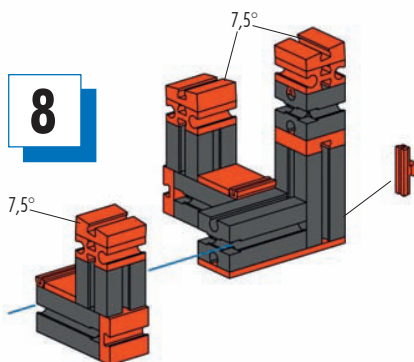

9

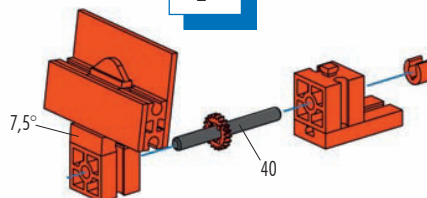

10

