

## **1550B MegOhmMeter Quick Reference Guide**

---

### **Warning**

- Read the 1550B Users Manual before using the tester.
- Lisez le mode d'emploi du 1550B avant d'utiliser le testeur.
- Leggere il manuale d'uso del 1550B prima di usare il tester.
- Vor dem Gebrauch des Testgeräts das 1550B-Bedienungshandbuch lesen.
- Lea el Manual de uso del comprobador 1550B antes de utilizarlo.
- Leia o Manual do Usuário 1550B antes de usar o testador.
- Lees de 1550B gebruiksaanwijzing vóór gebruik van de tester.
- Les bruksanvisningen for 1550B før måleinstrumentet tas i bruk.
- Man bør læse brugsanvisningen til modelserie 1550B, inden instrumentet tages i brug.
- Lue 1550B-käyttöopas ennen tämän testerin käyttöä.
- Läs användarhandboken för 1550B innan du använder testinstrumentet.
- 在使用测试仪之前请阅读 1550B 用户手册。



# / Connections



FUNCTION



UP







SCROLL









DOWN



ENTER

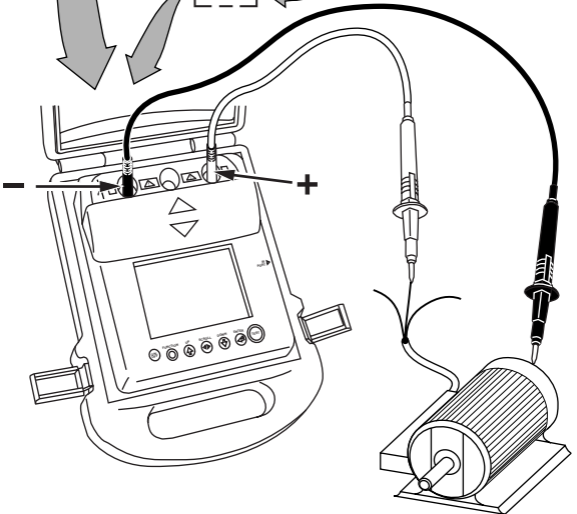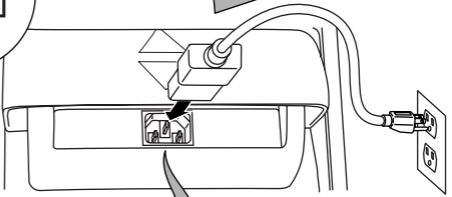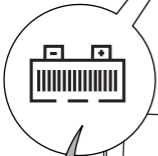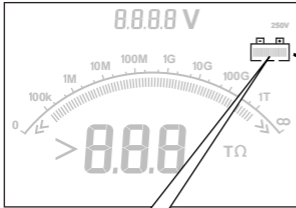

# Test Voltage

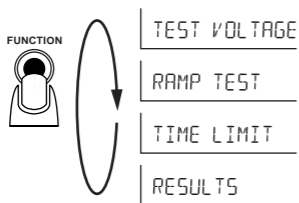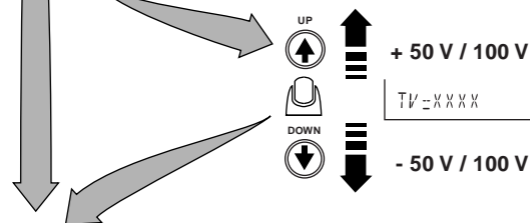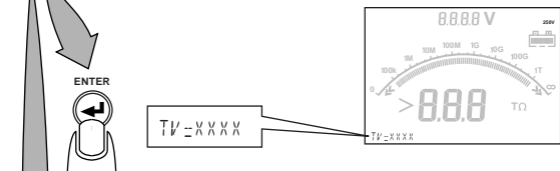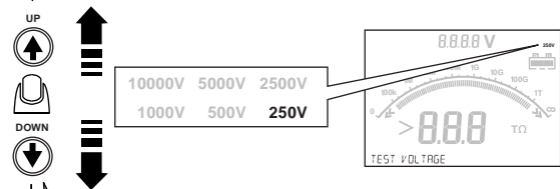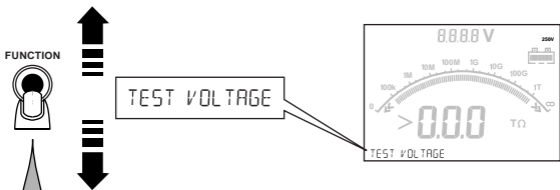 

# Ramp Test



FUNCTION



SCROLL




ENTER



FUNCTION



RAMP TEST

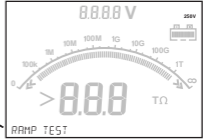

UP



DOWN



FUNCTION







TEST VOLTAGE

RAMP TEST

TIME LIMIT

RESULTS

# Time Limit

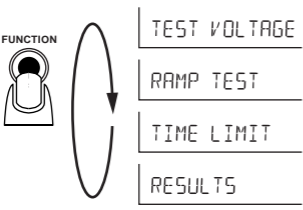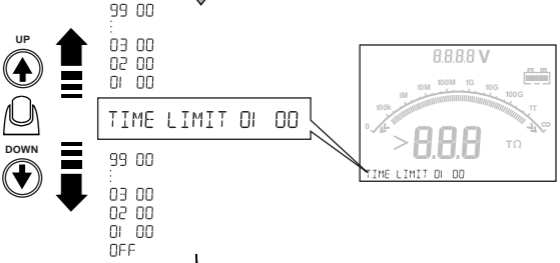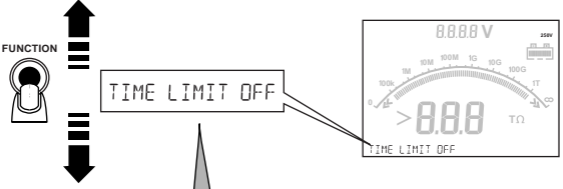 

# Test



FUNCTION



UP



SCROLL




DOWN



ENTER



1 Sec

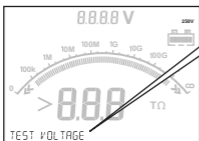

TEST VOLTAGE

TIME LIMITED



USER STOP



BREAK DOWN



ENTER



STORE RESULTS? UP=YES

YES



NO



0-9, A-Z



TAG \* 01  
|\_|\_|\_|

UP




ENTER



TEST VOLTAGE

# Results

 

RESULTS

- TEST VOLTAGE
- RAMP TEST
- TIME LIMIT
- RESULTS

NO RESULTS

RESULTS

(01, 02, 03 .. 99)  
or  
(01, 02, pump, .. 99)

TIMER    XX XX    XXXX  
TV=XXXXXV  
V=XXXXXV  
C=XXXXXUF  
PI=XXXXXX  
DAR=XXXX  
I XXXX  
**STOPPED**  
T LIMIT

TIME LIMITED  
USER STOP  
BREAK DOWN

OFF  
00 00

DELTE? UP=YES

REALLY DEL? DOWN=YES

Abort

99 LOCATION FREE

# IR

