



1587/1577 Insulation Tester Quick Reference Guide

⚠ See Users Manual for "Safety Information" and complete operating information.


Fuse Test

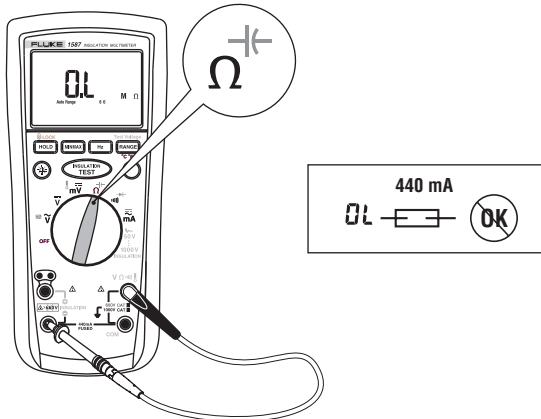


Voltage \tilde{V} \bar{V} mV

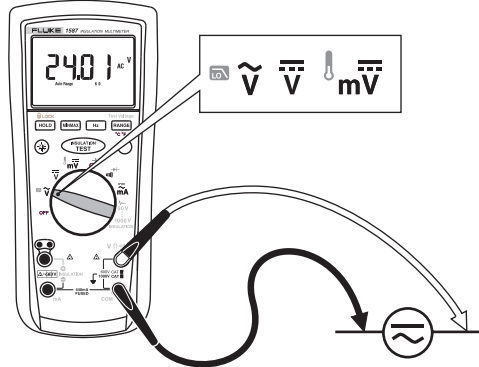


Temperature

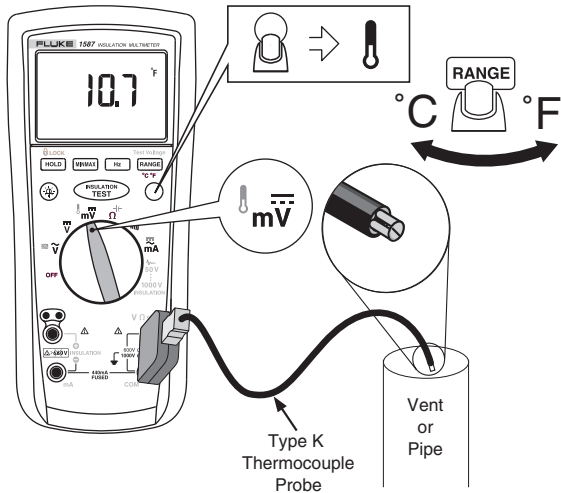


Resistance Ω

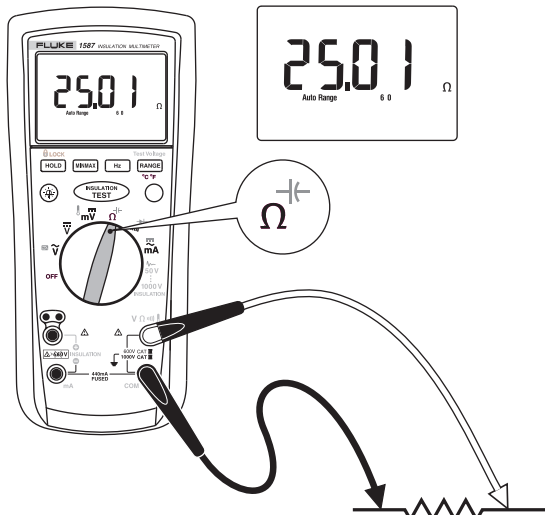


Testing Insulation

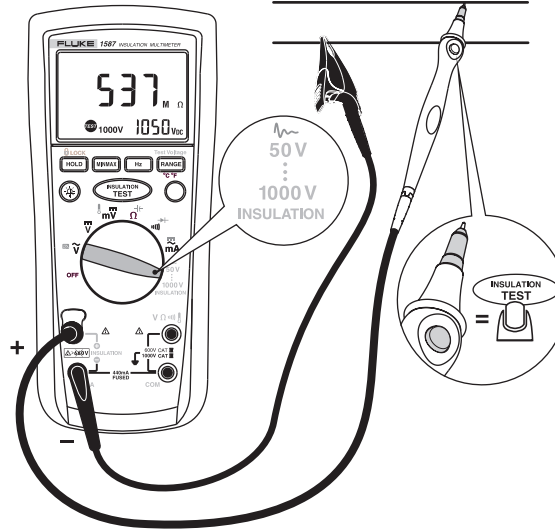


Smoothing (Power Up Option)

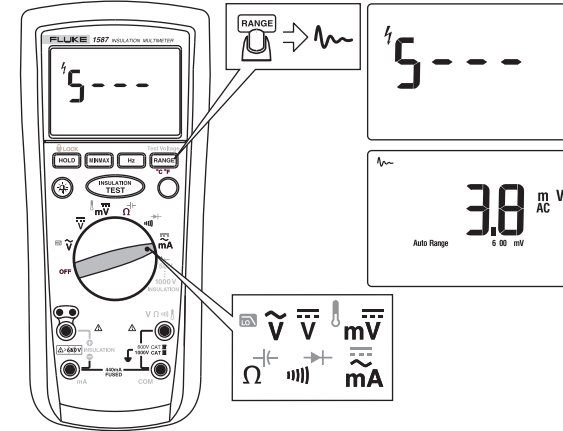



Continuity

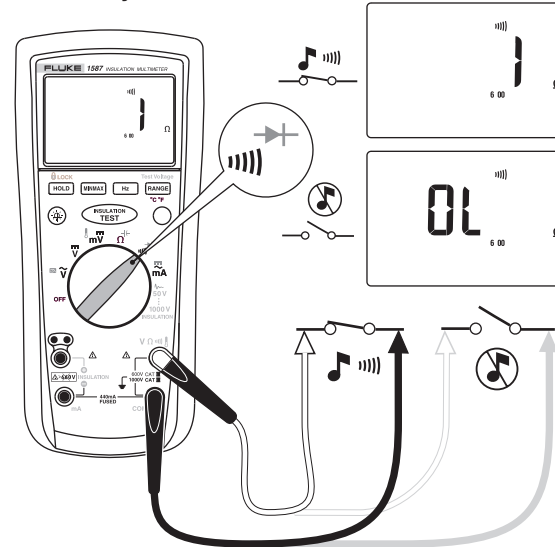


Current mA, mA

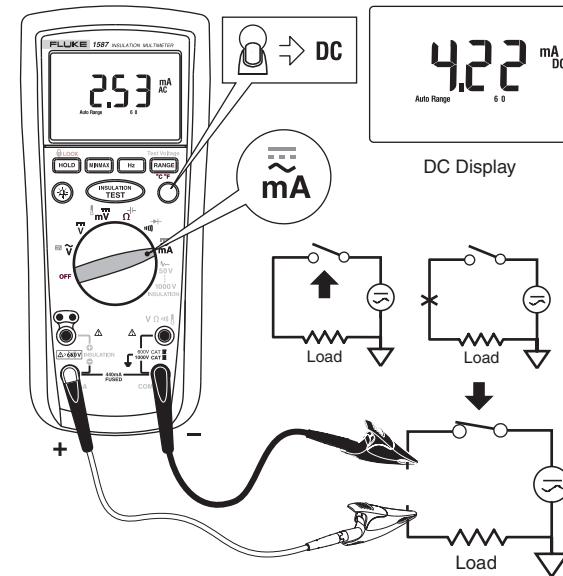


Diode Test \rightarrow

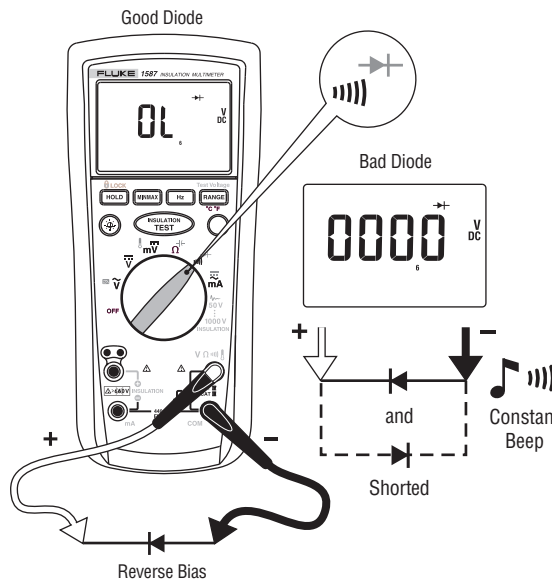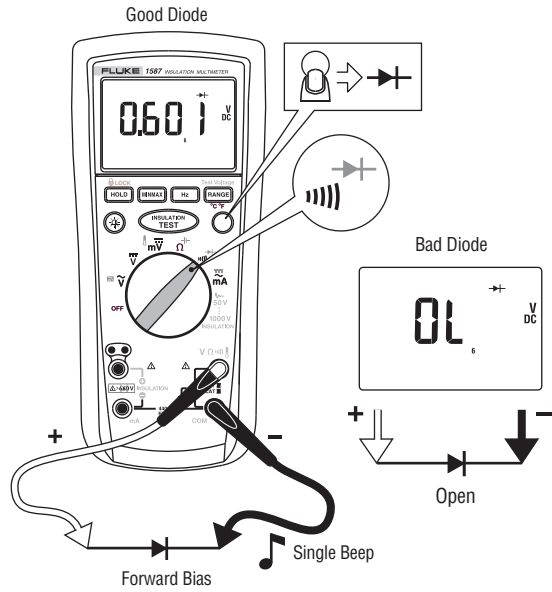

Resistance Ω

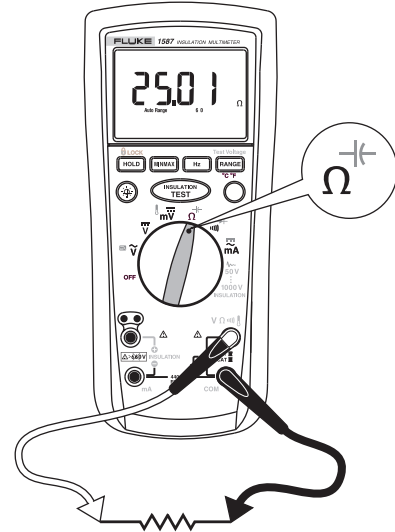


Capacitance μ F

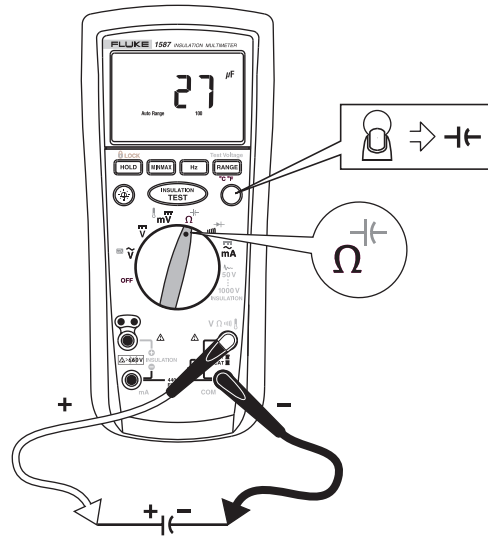


Frequency (Hz)


AC/DC Voltage Frequency

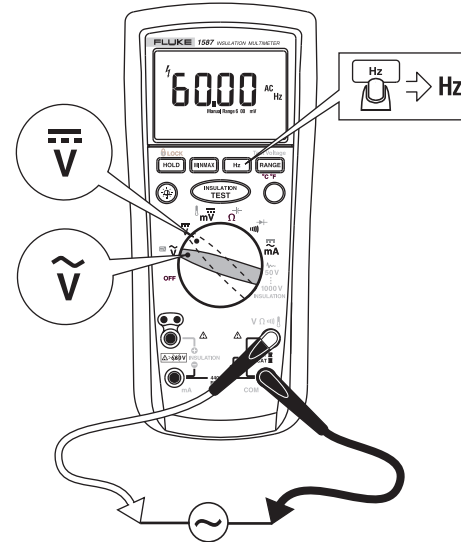

AC/DC Current Frequency

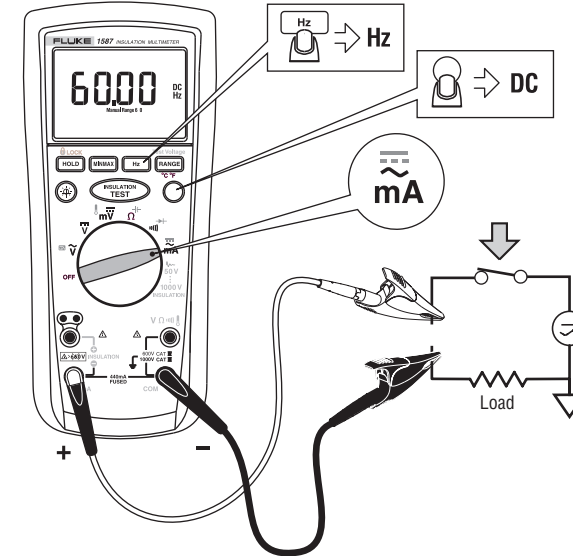

Low Pass Filter (Model 1587)

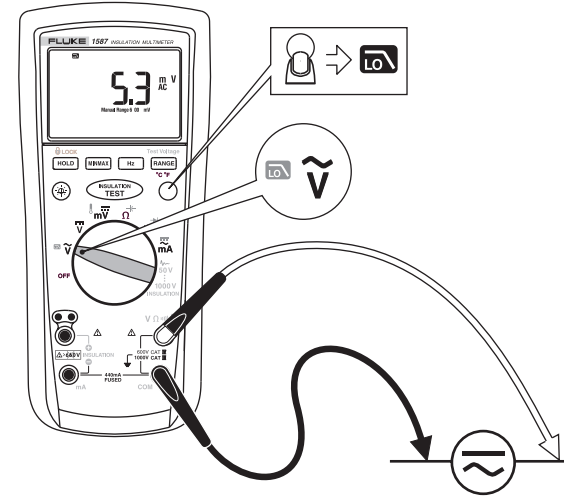

Battery and Fuse Replacement \rightarrow

