

5	CALIBRATION ADJUSTMENT PROCEDURE.....	5-1
5.1	GENERAL INFORMATION	5-1
5.2	RECOMMENDED CALIBRATION ADJUSTMENT EQUIPMENT	5-1
5.3	ENTERING THE CALIBRATION PROCEDURE	5-2
5.4	OPERATING THE CALIBRATION PROCEDURE.....	5-3
5.5	CONTRAST CALIBRATION ADJUSTMENT PROCEDURE.....	5-4
5.6	SCOPE CALIBRATION ADJUSTMENT PROCEDURE	5-4
5.6.1	Hardware SCOPE Calibration Adjustments	5-4
5.6.2	Closed Case SCOPE Calibration Adjustments.....	5-8
5.7	METER CALIBRATION ADJUSTMENT PROCEDURE	5-15
5.8	CALIBRATION ADJUSTMENT PROCEDURE SUMMARY.....	5-24
6	DISASSEMBLING THE SCOPEMETER.....	6-1
6.1	GENERAL INFORMATION	6-1
6.2	DISASSEMBLY PROCEDURES	6-1
6.2.1	Removing the battery pack	6-2
6.2.2	Opening the ScopeMeter	6-2
6.2.3	Removing the analog A2 PCB, to enable Hardware SCOPE Calibration Adjustments	6-4
6.2.4	Removing the digital A1 PCB	6-4
7	CORRECTIVE MAINTENANCE	7-1
7.1	DIAGNOSTIC TESTING AND TROUBLESHOOTING	7-1
7.1.1	Introduction	7-1
7.1.2	Troubleshooting techniques	7-1
7.1.3	Display and error messages	7-2
7.1.4	Main tests	7-5
7.1.4.1	<i>Operation Verification Procedure</i>	7-5
7.1.4.2	<i>Performance Verification Procedure</i>	7-7
7.1.5	Troubleshooting	7-7
7.1.5.1	<i>Trouble shooting hints</i>	7-7
7.1.6	Digital A1 PCB Troubleshooting	7-7
7.1.6.1	<i>Powering the ScopeMeter</i>	7-7
7.1.6.2	<i>Kernel Test</i>	7-7
7.1.6.3	<i>Test point signals</i>	7-9
7.1.6.4	<i>Default signals measured in the digital circuits</i>	7-11
7.1.7	Analog A2 PCB Troubleshooting	7-28
7.1.7.1	<i>Test point signals</i>	7-28
7.1.7.2	<i>Default signals measured on the Analog A2 pcb</i>	7-31
7.2	REPLACEMENTS	7-40
7.2.1	Standard parts	7-40
7.2.2	Special parts	7-40