

7.2.3	Transistors and integrated circuits	7-40
7.2.4	Static-sensitive components	7-40
7.2.5	Replacement of parts	7-42
	7.2.5.1 <i>Replacing parts in the battery compartment.</i>	7-42
	7.2.5.2 <i>Replacing parts on front cover</i>	7-43
	7.2.5.3 <i>Replacing parts on bottom cover</i>	7-45
	7.2.5.4 <i>Stand replacement</i>	7-47
	7.2.5.5 <i>30-pole flat cable replacement</i>	7-47
	7.2.5.6 <i>Input unit assembly replacement</i>	7-48
	7.2.5.7 <i>Top cover assembly replacement.</i>	7-48
	7.2.5.8 <i>Keypad replacement.</i>	7-49
	7.2.5.9 <i>Liquid crystal display (LCD), contact strips and backlight foil (Model 97 only) replacement.</i>	7-49
7.3	SOLDERING TECHNIQUES	7-51
	7.3.1 General soldering techniques	7-51
	7.3.2 Soldering micro-miniature semiconductors.	7-51
7.4	SPECIAL TOOLS	7-52
	7.4.1 Extender flat cable	7-52
7.5	RECALIBRATION AFTER REPAIR	7-52
7.6	INSTRUMENT REPACKING	7-52
8	MAINTENANCE OF THE PRIMARY CIRCUIT (PM8907/...).	8-1
9	REPLACEABLE PARTS LIST	9-1
	9.1 INTRODUCTION	9-1
	9.2 HOW TO OBTAIN PARTS	9-2
10	CIRCUIT DIAGRAMS	10-1
11	MODIFICATIONS.	11-1
	11.1 HARDWARE MODIFICATIONS, PCB REVISION LEVELS.	11-1
	11.2 DIGITAL BOARD A1 REVISION LEVEL OVERVIEW	11-1
	11.3 ANALOG BOARD A2 REVISION LEVEL OVERVIEW	11-4
	11.4 FIRMWARE MODIFICATIONS	11-12