
Calibration setup:

Connect the banana jack COM to the BNC common

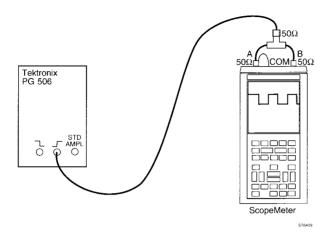

Procedure:

- A Apply a 1 MHz square wave signal with an amplitude of approximately 600 mV peak-to-peak to both channel A and B. Set the generator to the FAST RISE position. Use 50Ω terminations.
- B Press the READY softkey.
- C Now press the SCOPE softkey to go back to the CALIBRATE menu.

Continue with the meter calibration adjustment procedure, section 5.7