



**Calibration setup:**

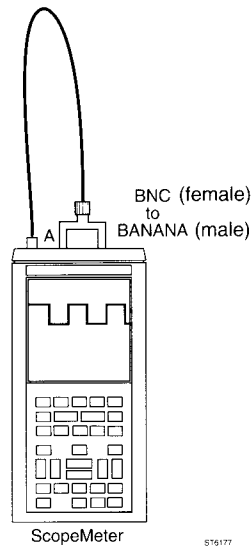

**Procedure:**

- A - Connect the channel A BNC to the red GENERATOR OUT banana connector, by means of a BNC cable and a BNC (female)-to- banana(male) connector.
- B - Press the READY softkey.

**M18. Current ramp calibration**

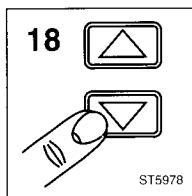


Purpose: calibrate the current ramp of the circuit tester.

**Calibration equipment:**

Fluke 5100B Calibrator

**Calibration setup:**

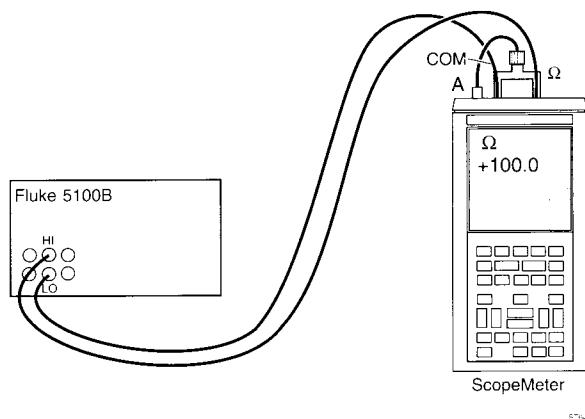

**Procedure:**

- A - Connect a resistance of 100Ω between both banana connectors. Connect channel A to the red banana connector. Do not use a probe! Refer to the calibration setup.
- B - Press the READY softkey.