

8 MAINTENANCE OF THE PRIMARY CIRCUIT (PM8907/...)

The ScopeMeter itself has no primary (mains) power supply.

The instrument is powered with a separate **Power adapter/battery charger PM8907/...**, in which the primary power supply is located. The PM8907/... is non-repairable. It can be ordered at your nearest Fluke/Philips Service Center.

Table 8.1 Power adapter/battery charger survey.

Typenumber	Description
PM8907/001	Universal Europe 220V, 50 Hz
PM8907/003	North American UL, CSA, 110V, 60 Hz
PM8907/004	United Kingdom 240V, 50 Hz
PM8907/008	Universal 115V / 230V

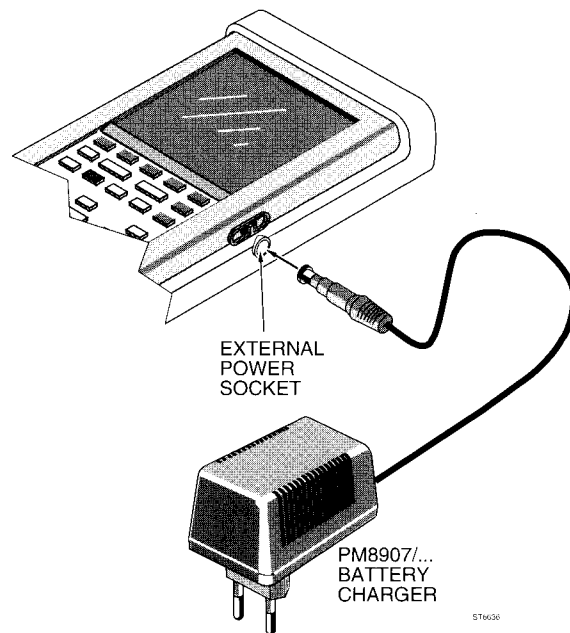


Figure 8.1 ScopeMeter Power Adapter/battery Charger PM8907/...