

2. Lift the front cover assembly (item 3) from the ScopeMeter.

NOTE: The gasket between the front cover and the two case halves is sealed to, and must remain with, the front cover. The front cover lifts away easily. Do not damage the gasket and do not separate the front cover from the gasket. A correctly fitted gasket assures the sealing of the ScopeMeter.

3. Reinstall the new front cover.

Front cover Torx screw replacement

1. Remove the front cover.
2. The two black M3 Torx screws (item 4) are captured type screws. Remove screws by unscrewing them with a Torx screwdriver. Add a little pressure with another small screwdriver at the back of the screw.

NOTE: Do not force the screws by pressing them in or out. The screw action is vital for the captured screws.

3. Reinstall the new Torx screws into the front cover.