

3. Reinstall the new battery cover.

Battery-cover Gasket replacement

1. Remove the battery cover (item 17).
2. Use a pair of tweezers to pull the elastic gasket (item 18) from the battery cover.
3. Mount the new elastic gasket on the battery cover.

NOTE: Take care that the gasket is not damaged. A correctly fitted gasket assures the sealing of the ScopeMeter.

Battery cover Torx screws and Feet replacement

1. Remove the battery cover.
2. The black M3 Torx screws are of a captured type (item 20). Remove screws by unscrewing them with a Torx screwdriver. Add a little pressure with another small screwdriver at the back of the screw.

NOTE: Do not force the screws by pressing them in or out. The screw action is vital for the captured screws.

3. Pull the two rubber feet (item 19) from the battery cover.
4. Push the new rubber feet onto the battery cover.
5. Reinstall the (new) black M3 Torx screws into the battery cover.

7.2.5.2 Replacing parts on front cover

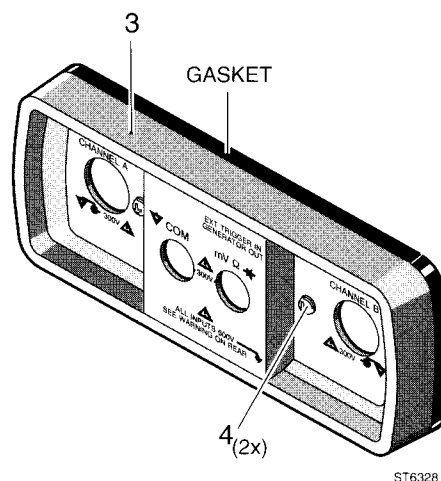


Figure 7.11 Replacing parts on front cover

Referring to figure 7.11, use the following procedure for replacements on the front cover.

Front cover assembly replacement

1. The front cover is secured to the ScopeMeter with two black M3 Torx screws (item 4). Use a Torx screwdriver to loosen the two screws (do not remove them) from the front cover.