2.9

**SPECIFICATIONS** ADDITIONAL INFORMATION **CHARACTERISTICS SETUP MEMORY (MODEL 97 ONLY)** Memory Size 10 maximum Front Panel setups. **Functions** Save Actual front panel settings are stored in memory, replacing contents of memory location indicated on LCD. Delete Contents of memory location indicated on LCD are deleted. Recall Actual front panel settings are replaced by contents of memory location indicated on LCD. Actual settings are replaced by With soft up/down keys Next contents of the next (+1) memory location indicated on LCD. Previous Actual settings are replaced by contents of the previous (-1) memory location indicated on LCD. Initial setup selection of AUTO SET only Amplitude only Time Time and Amplitude trace identification on/off trigger identification on/off trigger sensitivity external 0.2V/2V Clear after Hold/Run on/off refresh time @ RECORD infinite in scope mode 2 seconds 5 seconds 10 seconds

60 seconds