

## **CAUTION**

As noted in the Operator's Manual, it is preferred practice to plug the interface pod into the 9010A mainframe with the pod disconnected from the unit under test and with "power off" in the 9010A mainframe.

In order to activate the pod protection circuitry, turn power-on in the 9010A before plugging the pod into the unit under test.