

FURUNO

Furuno Radar Models Compatible with FMD1835 Remote Display



Converting the 1835, 1935 or 1945 radar display (RDP-152) into an FMD remote display




To convert a standard RDP-152 display into an FMD1835 remote display, turn on the display and access the **Initial Settings Menu**, press the **<Menu>** key to access the Main Menu. Use the **▲** or **▼** keys to select Installation and then press the **<ENTER>** key.

Use the **▲** or **▼** keys to highlight **Input Source** and then press the **<ENTER>** key. Press the **▲** or **▼** to change the selection from **Master** to **Slave** and then press the **<ENTER>** key.

Press the MENU key to close the Main Menu.

FURUNO

Using the FMD1835 with the 1835, 1935, 1945, NavNet 1 BB or NavNet VX2 BB radar models

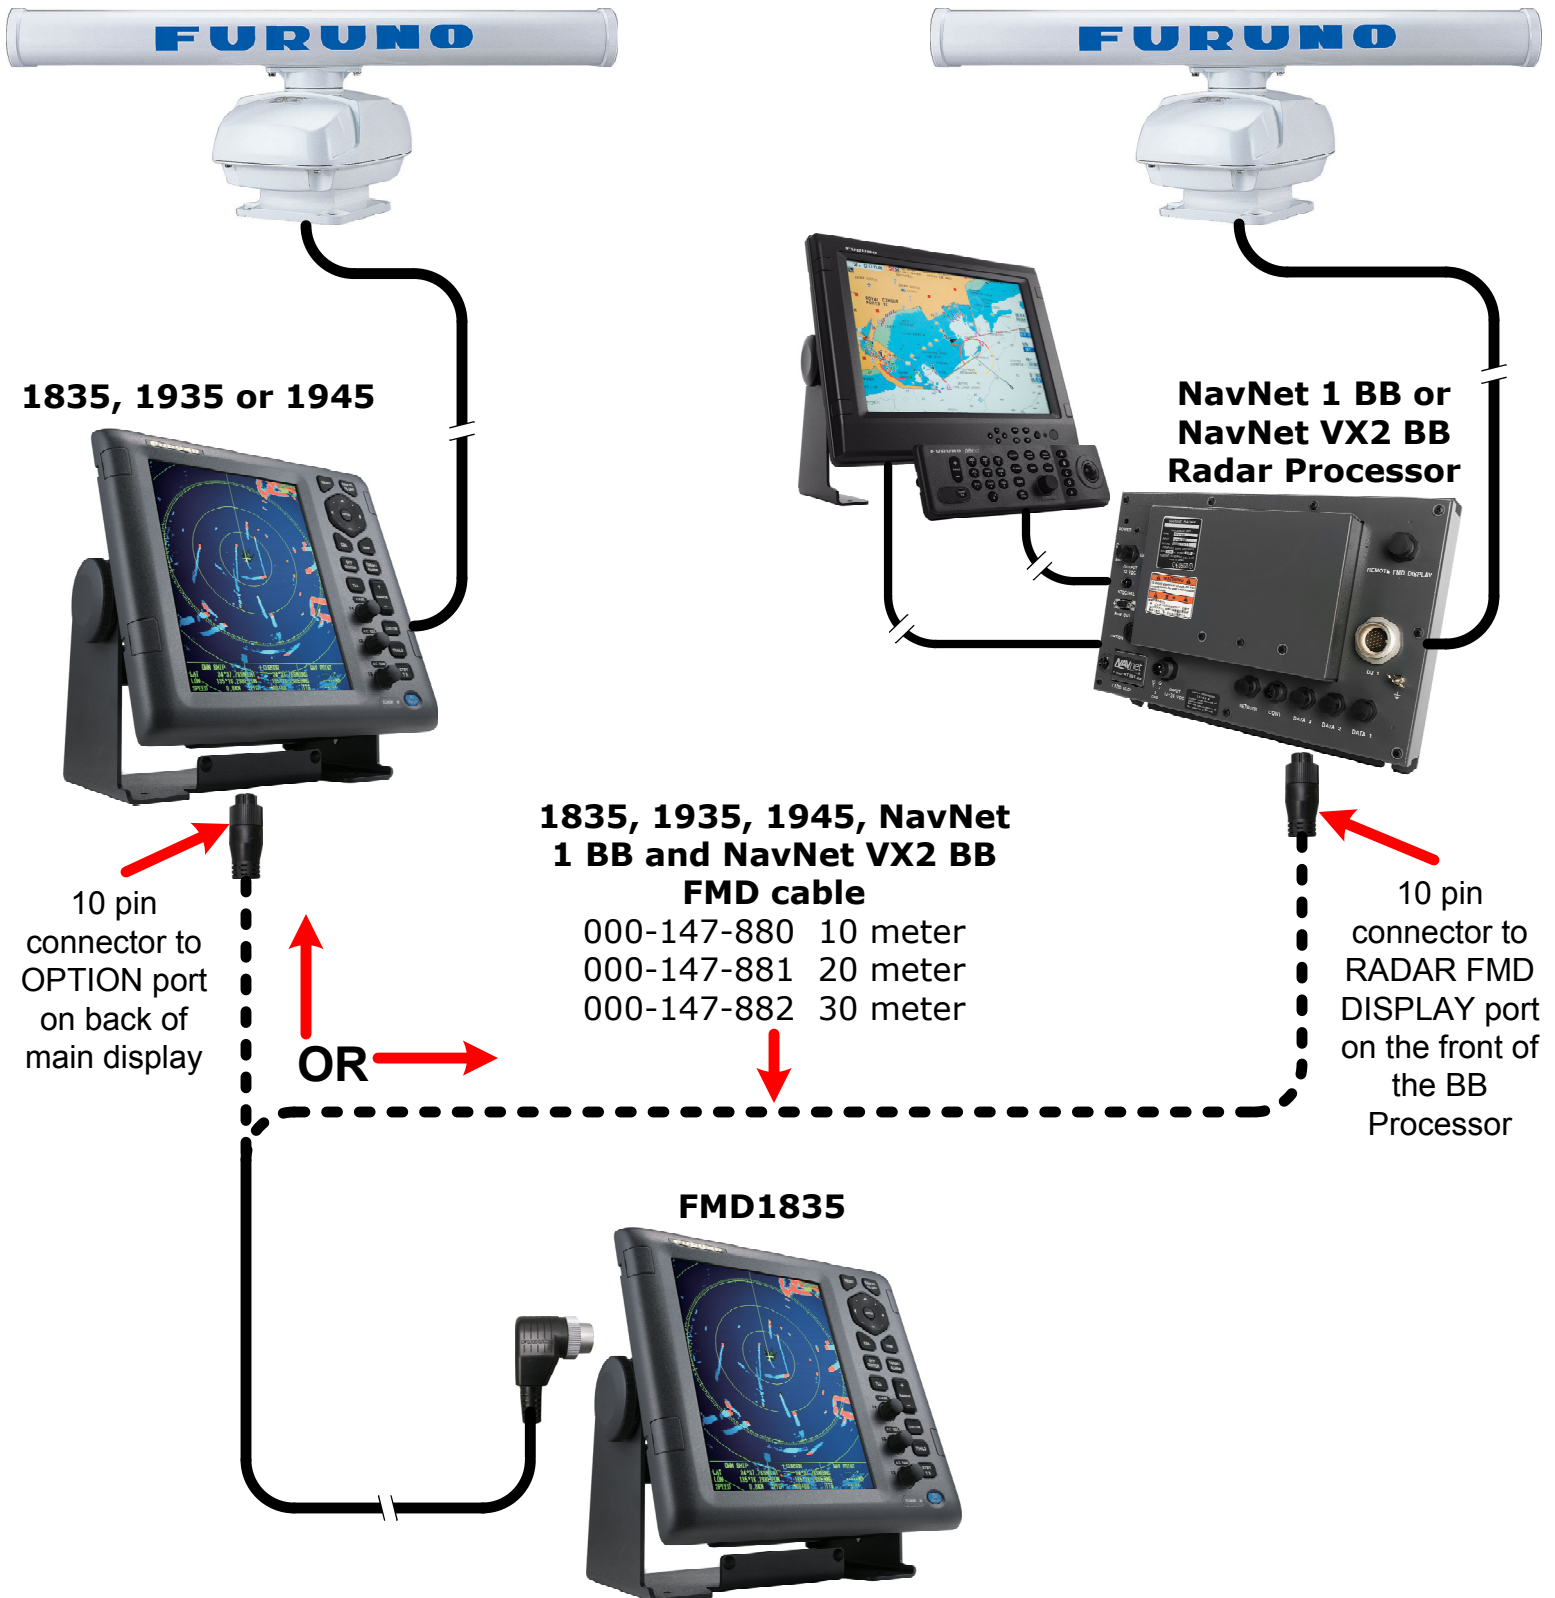

Using the FMD1835 with other Furuno radar models




FMD1835



FURUNO RADAR

1832, 1932MK2, 1942MK2
FR7XX1 Series
FR7XX2 Series
FR8XX1 Series
FR8XX2 Series
FR1500MK3 Series
FR21X5 Series
FAR21X7 Series
FAR28X5 Series
FAR28X7 Series
NavNet 10.4" Series
NavNet VX2 10.4" Series

(Instructions for connecting a Remote display can be found in the Installation Manual for the respective radar models)

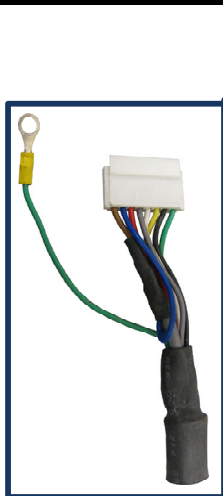

FMD Radar Cable Assy.

000-145-125 10 meter
000-145-126 20 meter
000-145-127 30 meter