

**SSB RADIOTELEPHONE
MODEL FS-1562/1552**

OPERATOR'S GUIDE

MODE SELECTION(Select the class of emission and AGC on/off)

Every press of MODE
1 key changes mode and AGC status as follows.



FREQUENCY SETTING

DIRECT KEY IN	TX	TX → (Enter frequency.) → ENT
	RX	RX → (Enter frequency.) → ENT
	TX/RX	TX → RX → (Enter frequency.) → ENT
USER CHANNEL	TX	TX → RCL → (Enter channel.) → ENT
	RX	RX → RCL → (Enter channel.) → ENT
	TX/RX	RCL → (Enter channel.) → ENT
ITU CHANNEL	Select mode before setting ITU channel.	
	TX	TX → RCL → (Enter channel.) → ENT
	RX	RX → RCL → (Enter channel.) → ENT
	TX/RX	RCL → (Enter channel.) → ENT

RECEIVER SENSITIVITY

CLARIFY 3 → (Adjust FREQ/CH encoder.) → 3 CLARIFY

TX FREQ. WATCH (It automatically returns after 3 seconds.)

RX → **ENT** (Tx freq. appears at the part of Rx indication.)

TRANSMISSION POWER REDUCTION

HI ↔ LOW
8 ("LOW" appears.)

SCANNING (AGC:ON. After frequency or channel setting)

START	User channel	(Select a user channel.) →	SCAN 6
	ITU channel	(Select an ITU channel.) → (Set cursor to band or channel to scan by CURS 2 key.) →	SCAN 6
STOP	SCAN 6 or PTT switch		

SWEEPING (AGC:ON)

START	(Select a center frequency of sweep by direct key-in.) →	SCAN 6	("SWEEP" appears.)
STOP	SCAN 6 or PTT switch		

INTERCOM (with the RB-500(option) remote station)

START	INTERCOM 0 → (Enter remote station number.) → ENT → (Press the PTT switch to talk.)
STOP	INTERCOM 0

DISTRESS CALLING (2182kHz Two-Tone Alarm)

2182 → **ALARM** + **ENT** (45 seconds)

(To suspend, press the **ENT** key.)

