

G1000[™]

*pilot's guide for the
Diamond DA42*

Record of Revisions			
Revision	Date of Revision	Revision Page Range	Description
A	12/10/04	i – xvi I-1 – I-6	Initial release.
B	01/19/05	i	New System Software version.

Record of Current Part Numbers Associated with Binder K00-00138-00	
190-00397-01	G1000 Pilot's Guide for the Diamond DA42
190-00302-00	G1000 Pilot's Guide Introduction
190-00398-01	G1000 System Overview for the Diamond DA42
190-00399-01	G1000 Primary Flight Display Pilot's Guide for the Diamond DA42
190-00401-00	G1000 VHF NAV/COM Pilot's Guide for the Diamond DA42
190-00382-00	G1000 Transponder Pilot's Guide
190-00378-02	G1000 Audio Panel Pilot's Guide
190-00402-00	G1000 Audio Panel Pilot's Guide Supplement for the Diamond DA42
190-00403-01	G1000 Engine Indication System for the Diamond DA42
190-00404-00	G1000 Multi Function Display Pilot's Guide for the Diamond DA42
190-00400-01	G1000 Annunciations and Alerts Pilot's Guide for the Diamond DA42
190-00383-02	G1000 Pilot's Guide Appendices

Copyright © 2004, 2005 Garmin Ltd. or its subsidiaries. All rights reserved.

This manual reflects the operation of System Software version 0370.07 or later. Some differences in operation may be observed when comparing the information in this manual to earlier or later software versions.

Garmin International, Inc., 1200 East 151st Street, Olathe, Kansas 66062, U.S.A.
Tel: 913/397.8200 Fax: 913/397.8282

Garmin AT, Inc., 2345 Turner Road SE, Salem, OR 97302, U.S.A.
Tel: 503/391.3411 Fax 503/364.2138

Garmin (Europe) Ltd., Unit 5, The Quadrangle, Abbey Park Industrial Estate, Romsey, Hampshire S051 9DL, U.K.
Tel: 44/0870.8501241 Fax: 44/0870.8501251

Garmin Corporation, No. 68, Jangshu 2nd Road, Shijr, Taipei County, Taiwan
Tel: 886/02.2642.9199 Fax: 886/02.2642.9099

Web Site Address: www.garmin.com

Except as expressly provided herein, no part of this manual may be reproduced, copied, transmitted, disseminated, downloaded or stored in any storage medium, for any purpose without the express written permission of Garmin. Garmin hereby grants permission to download a single copy of this manual and of any revision to this manual onto a hard drive or other electronic storage medium to be viewed for personal use, provided that such electronic or printed copy of this manual or revision must contain the complete text of this copyright notice and provided further that any unauthorized commercial distribution of this manual or any revision hereto is strictly prohibited.

Garmin® is a registered trademark of Garmin Ltd. or its subsidiaries, and G1000™ is a trademark of Garmin Ltd. or its subsidiaries. These trademarks may not be used without the express permission of Garmin.

NavData® is a registered trademark of Jeppesen, Inc.; Stormscope® is a registered trademark of L-3 Communications; Honeywell® is a registered trademark of Honeywell, Inc., and Becker® is a registered trademark of Becker Flugfunkwerk GmbH.

January 2005

Printed in the U.S.A.

FRONT MATTER

Copyright	i
Table of Contents	ii
List of Figures	ix
List of Tables	xiii
Warnings and Cautions	xiv
Warranty	xvi

1 – G1000 PILOT’S GUIDE INTRODUCTION

Binder Contents	1-1
Using the Binder	1-2
Part Number Content	1-2
Page Numbering Format	1-2
<i>General</i>	1-2
<i>Appendices</i>	1-2
<i>Index</i>	1-2
Section Numbering Format	1-2
Figure/Table Numbering Format	1-3
Table of Contents and List of Figures/Tables	1-3
Index	1-3
Storing the Binder	1-3

2 – SYSTEM OVERVIEW

2.1 System Description	2-1
2.2 LRU Descriptions	2-1
2.3 PFD/MFD Controls	2-6
2.4 Secure Digital Cards	2-8
2.5 System Power-up	2-9
2.6 Display Backlighting	2-11
2.7 System Operation	2-11
Normal Mode	2-11
Reversionary Mode	2-12

AHRS Operation	2-13
GPS Input Failure	2-13
Air Data Input Failure	2-13
Magnetometer Failure	2-13

3 – PRIMARY FLIGHT DISPLAY

3.1 Introduction	3-1
3.2 Backlighting	3-5
3.3 Softkey Function	3-7
3.4 Flight Instruments	3-11
Airspeed Indicator	3-11
Speed Indication	3-11
Speed Ranges	3-11
Airspeed Trend Vector	3-11
Vspeed References	3-11
True Airspeed Box	3-11
Attitude Indicator	3-12
Pitch Indication	3-12
Roll Indication	3-13
Slip/Skid Indication	3-13
Altimeter	3-14
Altitude Values	3-14
Altitude Reference Bug	3-14
Altitude Trend Vector	3-14
Altitude Reference Box	3-14
Barometric Setting Box	3-14
Altitude Alerting	3-15
Metric Display	3-16
Vertical Deviation/Glideslope Indicator	3-16
Marker Beacon Annunciations	3-16
Vertical Speed Indicator	3-17
Vertical Speed Pointer	3-17
Horizontal Situation Indicator	3-18
360° HSI	3-18
ARC HSI	3-19
Heading Indication	3-19
Turn Rate Indicator	3-20
Course Deviation Indicator	3-20
Bearing Pointers and Information Windows	3-21
DME Radio	3-22

ADF Radio	3-22
Radio Tuning Window	3-23
Navigation Source	3-24
3.5 Communication, Navigation & Surveillance	3-25
Communication Frequency Window	3-25
Navigation Frequency Window	3-25
Navigation Status Bar	3-26
Transponder Status Bar	3-27
Transponder Operation	3-27
Transponder Code Selection	3-27
3.6 Supplemental Flight Data	3-29
Outside Air Temperature Box	3-29
System Time Box	3-29
Traffic Annunciation	3-29
Inset Map	3-30
Working with Menus	3-32
Auxiliary Window Keys	3-33
Auxiliary Windows	3-33
Timer/References Window	3-33
<i>Generic Timer</i>	3-34
<i>Flight ID</i>	3-34
<i>Vspeeds and Vspeed Bug Status</i>	3-35
Nearest Airports Window	3-35
Direct-to Window	3-36
<i>Direct-to Navigation</i>	3-36
Flight Plan Window	3-38
<i>Create New Flight Plan</i>	3-39
<i>Activate Leg</i>	3-39
<i>Store Flight Plan</i>	3-39
<i>Invert Flight Plan</i>	3-40
<i>Delete Flight Plan</i>	3-40
<i>Load Departure</i>	3-41
<i>Load Arrival</i>	3-42
<i>Load Approach</i>	3-42
<i>Remove Departure</i>	3-43
<i>Remove Arrival</i>	3-43
<i>Remove Approach</i>	3-43
<i>Closest Point of FPL</i>	3-43
<i>Change Fields</i>	3-44
<i>Restore Defaults</i>	3-44
Procedures Window	3-44
<i>Select Approach</i>	3-45

<i>Select Arrival</i>	3-46
<i>Select Departure</i>	3-47
<i>Activate Approach</i>	3-47
<i>Activate Vector-To-Final</i>	3-47
3.7 Reversionary Mode	3-49
3.8 Alerts and Annunciations	3-51
Alerts Window	3-51
Annunciation Window	3-51

4 – VHF NAV/COM

4.1 Interface Introduction	4-1
Overview	4-1
Windows and Fields	4-2
Radio Selection	4-2
Color Code	4-3
Tuning Box	4-3
Frequency Toggle Arrow	4-3
Radio Status Indications	4-3
Controls	4-4
4.2 COM Frequency Window	4-5
Overview	4-5
Volume	4-5
Automatic Squelch	4-5
Switching the Tuning Box Between COM Radios	4-6
Manually Tuning a COM Frequency	4-6
Toggling COM Frequencies	4-6
Selecting a COM Radio	4-6
Radio Status	4-7
Emergency Frequency (121.500 MHz)	4-7
Quickly Tuning and Activating 121.500 MHz	4-7
Stuck Microphone	4-7
4.3 NAV Frequency Window	4-9
Overview	4-9
Volume	4-9
Morse Code Identifier	4-9
Switching the Tuning Box Between NAV Radios	4-10
Manually Tuning a NAV Frequency	4-10
Toggling NAV Frequencies	4-10
Selecting a NAV Radio	4-11

4.4 Optional NAV Radios	4-13
Overview	4-13
ADF/DME Tuning Window	4-13
Tuning and Toggling ADF Frequencies	4-14
Selecting the ADF Receiver Mode	4-15
Adjusting ADF Receiver Volume	4-15
Selecting the DME Transceiver Tuning Mode	4-16
4.5 Frequency Auto-tuning	4-17
Overview	4-17
Auto-tuning on the PFD	4-17
Auto-tuning on the MFD	4-18
WPT – Airport Information Page	4-18
WPT – VOR Information Page	4-20
NRST – Nearest Airports Page	4-21
NRST – Nearest VOR Page	4-22
NRST – Nearest Frequencies Page	4-23
Auto-Tuning Upon Approach Activation (NAV Frequencies)	4-24

5 – TRANSPONDER

5.1 Interface Description	5-1
Transponder Softkeys	5-1
Transponder Status Bar	5-1
5.2 Operation	5-3
Mode Selection	5-3
Ground Mode (Automatic)	5-3
Standby Mode (Manual)	5-3
ON Mode (Manual)	5-3
Altitude Mode (Automatic or Manual)	5-4
Reply Status	5-4
Code Selection	5-4
Entering a Code	5-4
VFR Code	5-5
Important Codes	5-5
IDENT Function	5-5
5.3 Mode-S Transponder Functionality	5-7
Traffic Information Service (TIS)	5-7

6A – AUDIO PANEL

6A.1 Introduction	6A-1
6A.2 Unit Description	6A-2
Front Panel Controls	6A-2
Transceivers	6A-4
Mono/Stereo Headsets	6A-4
Unmuted/Unswitched Inputs	6A-4
6A.3 Unit Operation	6A-5
Power-up and Fail-safe Operation	6A-5
Power-up	6A-5
Fail-safe Operation	6A-5
Selecting and Deselecting Keys	6A-5
Lighting	6A-5
Transceiver Keys	6A-5
COM MIC Keys	6A-5
COM Keys	6A-5
Transmitting	6A-6
COM Swap	6A-6
Optional COM Muting	6A-6
COM Muting on Receive	6A-6
COM Muting on Transmit	6A-6
Telephone Interface	6A-6
Split COM Function	6A-6
PA Function	6A-7
Speaker	6A-7
Marker Beacon Receiver	6A-7
Description and Operation	6A-7
Marker Beacon Signal Sensitivity	6A-7
Navigation Radios	6A-9
Entertainment Inputs	6A-9
MUSIC 1	6A-9
<i>MUSIC 1 Muting</i>	6A-9
MUSIC 2	6A-9
Intercom System (ICS) Isolation	6A-10
PILOT Mode	6A-10
COPILOT Mode	6A-10
CREW Mode	6A-10
ALL Mode	6A-10
Volume/Squelch Control	6A-12
Intercom VOL/SQ	6A-12
<i>Intercom Volume Control</i>	6A-12

Intercom Squelch Control	6A-13
Volume Adjustments	6A-13
Master Avionics Squelch (MASQ)	6A-13
Digital Clearance Recorder with Playback Capability	6A-14
Reversionary Mode	6A-15
Cockpit Voice Recorder Interface	6A-15
Dual Panel Operation	6A-15
Simultaneous COM Transmission	6A-15

6B – AUDIO PANEL SUPPLEMENT

Headset Jacks & Keyed ICS Operation	6B-1
Transceivers	6B-1
Aircraft Radios	6B-1
Aircraft Entertainment Inputs	6B-1
Cockpit Voice Recorder (CVR)	6B-1
Dual Panel Operation	6B-1

7 – ENGINE INDICATION SYSTEM

7.1 Engine	7-1
Engine Load Indicator	7-1
Tachometer	7-1
Fuel Flow GPH Indicator	7-1
Oil Temperature Indicator	7-1
Oil Pressure Indicator	7-2
Coolant Temperature Indicator	7-2
Fuel Temperature Indicator	7-2
Fuel Quantity Indicator	7-2

7.2 System	7-3
Voltmeter	7-3
Ammeter	7-3
Gearbox Temperature Indicator	7-3

7.3 Fuel	7-4
-----------------	-----

8 – MULTI FUNCTION DISPLAY

8.1 Introduction	8-1
Description	8-1
MFD Power-Up	8-1
Power-up Page	8-2

Operations	8-2
Backlighting	8-2
MFD Softkeys	8-3
MFD Page Groups	8-5
Working With Menus	8-6

8.2 Navigation Map Page 8-7

Navigation Map Page Operations	8-8
Changing the Map Orientation	8-8
Clearing Lightning Data (optional with WX-500 installation)	8-8
Selecting a Map Range	8-9
Using the Auto Zoom Feature	8-9
Identifying Aviation Map Data	8-9
Decluttering the Map	8-10
Map Panning	8-11
Displaying Topographic Data on the Navigation Map Page	8-13
Displaying Terrain Data on the Navigation Map Page	8-14
Displaying Traffic on the Navigation Map Page	8-15
Displaying Lightning Data on the Navigation Map Page (optional with WX-500 installation)	8-16
Lightning Data Display Range	8-16
MFD Navigation Status Window	8-16
Navigation Map Page Menu	8-17
First Option: 'MAP SETUP'	8-17
Map Group	8-17
<i>Orientation</i>	8-17
<i>Auto Zoom</i>	8-18
<i>Land Data</i>	8-18
<i>Track Vector</i>	8-19
<i>Wind Vector</i>	8-19
<i>Nav Range Ring</i>	8-20
<i>Topo Data</i>	8-20
<i>Topo Range</i>	8-21
<i>Terrain Data</i>	8-21
<i>Obstacle Data</i>	8-22
<i>Fuel Range Ring (Fuel RNG) (RSV)</i>	8-22
Weather Group (optional)	8-23
Traffic Group	8-25
Aviation Group Options	8-28
Land Group Options	8-30
Second Option: 'MEASURE BEARING/DISTANCE'	8-32

Third Option: 'CLEARING LIGHTNING DATA' (optional)	8-33	Load Approach	8-60
8.3 Traffic Map Page	8-35	Remove Departure, Arrival, or Approach	8-61
TIS Symbology	8-36	Closest Point of Flight Plan	8-61
Traffic Map Page Operations	8-36	Change Fields	8-62
Power-Up Test	8-36	Restore Defaults	8-62
Changing the Map Range	8-36	Shortcuts	8-62
Operating Mode	8-37	Flight Plan Catalog Page	8-63
TIS Audio Alert	8-37	Flight Plan Catalog Page Operations	8-63
TIS Traffic Status	8-38	Activate a Flight Plan	8-64
<i>Traffic Banner</i>	8-38	Stop Navigating a Flight Plan	8-64
8.4 Weather Map Page (optional)	8-39	Invert and Activate a Flight Plan	8-65
Weather Display Information	8-40	Copy a Flight Plan	8-65
Weather Map Page Operations	8-40	Delete a Flight Plan	8-66
8.5 Terrain Proximity Page	8-43	Delete All Flight Plans	8-67
Terrain Proximity Page Operations	8-44	Sort By Comment/Number	8-67
Displaying Obstacle Data	8-45	Point-n-Shoot Flight Plan Creation Feature	8-68
Obstacle Shapes	8-45	Vertical Navigation (VNAV) Page	8-69
Navigation Map Display Conditions	8-45	VNAV Page Menu Options	8-70
8.6 Direct-to Navigation	8-47	8.8 Procedures	8-71
Direct to Navigation Operations	8-48	Arrivals and Departures	8-71
Selecting a Direct-to Waypoint	8-48	Approaches	8-72
<i>Selecting a Direct-to Destination by Facility or</i>		G1000 Navigational Guidance for Approaches	8-72
<i>City Name</i>	8-48	Selecting Approaches	8-73
<i>Selecting a Direct-to Destination from the</i>		GPS Approach Examples	8-75
<i>Active Flight Plan</i>	8-49	No Procedure Turn	8-75
<i>Selecting a Nearest Airport as a Direct-to</i>		Flying the Missed Approach	8-77
<i>Destination</i>	8-50	Flying the Procedure Turn	8-79
<i>Shortcuts</i>	8-50	Flying the DME ARC	8-81
Canceling Direct-to Navigation	8-51	Vectors to the DME ARC	8-83
Specifying a Course to a Waypoint	8-51	Flying a Holding Pattern	8-84
8.7 Flight Plans	8-53	Flying a Course from Fix to Distance, or Course	
Active Flight Plan Page	8-53	from Fix to DME Distance	8-86
Active Flight Plan Page Operations	8-53	Flying a Course from Fix to Altitude	8-88
Create a New Flight Plan	8-54	Flying a Course from Fix to Manual Sequence	8-90
Activate Leg	8-55	Flying the ILS Approach	8-92
Store Flight Plan	8-56	Flying the Vectors Approach	8-95
Invert Flight Plan	8-57	8.9 Waypoint Page Group	8-97
Delete a Waypoint	8-57	Page Selection	8-97
Load Departure	8-58	Airport Information Page (INFO)	8-98
Load Arrival	8-59	Airport Information Page Operations	8-98
		Airport Runway Information Field	8-100
		Airport Frequency Information Field	8-101

Airport Frequency Descriptions	8-102	Audio Alerts	8-147
Airport Information Page Options	8-102	MFD Data Bar Fields	8-147
Departure Information Page (DP)	8-103	GPS CDI	8-148
Arrival Information Page (STAR)	8-104	COM Configuration	8-148
Approach Information Page (APR)	8-106	Nearest APT	8-149
Intersection Information Page	8-108	System Status Page	8-150
Intersection Information Page Operations	8-109		
NDB Information Page	8-110	8.11 Nearest Page Group	8-151
NDB Information Page Operations	8-111	Navigating to a Nearest Waypoint	8-152
NDB Information Page Options	8-112	Nearest Airports Page	8-154
VOR Information Page	8-113	Nearest Intersections Page	8-157
VOR Information Page Operations	8-114	Nearest NDB Page	8-159
VOR Information Page Options	8-115	Nearest VOR Page	8-161
User Waypoint Information Page	8-116	Nearest User Waypoint Page	8-163
User Waypoint Information Page Operations	8-117	Nearest Frequencies Page	8-165
Creating User Waypoints	8-118	Nearest Airspaces Page	8-167
Creating User Waypoints from the Navigation		Airspace Alerts Box	8-168
Map Page	8-119	Airspaces	8-169
Modifying User Waypoints	8-120		
User Waypoint Information Page Options	8-121		
8.10 Auxiliary Page Group	8-125		
Trip Planning Page	8-126		
Trip Planning	8-127		
Fuel Planning	8-128		
Other Statistics	8-129		
Utility Page	8-130		
Trip Statistics	8-132		
Scheduler	8-132		
GPS Status Page	8-133		
Satellite Status Page	8-134		
RAIM Prediction	8-136		
GPS Signal Strength	8-138		
System Setup Page	8-139		
Pilot Profiles	8-140		
<i>Selecting the Active Profile</i>	8-140		
<i>Creating a Profile</i>	8-140		
<i>Deleting a Profile</i>	8-141		
<i>Renaming a Profile</i>	8-141		
Date/Time	8-142		
Display Units	8-142		
Map Datums	8-143		
Airspace Alerts	8-144		
Arrival Alerts	8-146		
		9 – ANNUNCIATIONS AND ALERTS	
		<hr/>	
		9.1 Introduction	9-1
		9.2 Alert Level Definitions	9-3
		9.3 DA42 Aircraft Alerts	9-5
		WARNING Alerts	9-5
		CAUTION Alerts	9-5
		Annunciation Advisory Alerts	9-6
		Voice Alerts	9-6
		9.4 G1000 System Annunciations	9-7
		9.5 G1000 System Message Advisories	9-11
		MFD & PFD Message Advisories	9-11
		Database Message Advisories	9-12
		GMA 1347 Message Advisories	9-12
		GIA 63 Message Advisories	9-13
		GEA 71 Message Advisories	9-15
		GTX 33 Message Advisories	9-15
		GRS 77 Message Advisories	9-16
		GMU 44 Message Advisories	9-16
		GDC 74A Message Advisories	9-17
		Miscellaneous Message Advisories	9-17

APPENDICES

Appendix A: SD Card Use	A-1
Aviation Database	A-1
Terrain Database	A-1
Appendix B: Abbreviations, Acronyms & NAV Terms	B-1
Appendix C: Questions & Answers	C-1
Appendix D: G1000 Map Datums	D-1
Appendix E: General TIS Information	E-1
Introduction	E-1
TIS vs. TCAS	E-1
TIS Limitations	E-1
Appendix F: Map Symbols	F-1
Airport	F-1
NAVAIDs	F-1
Basemap	F-1
Traffic	F-2
Lightning Strike	F-2
Miscellaneous	F-2
Line Symbols	F-3
Obstacle Database	F-4
Terrain Color Chart	F-4
Appendix G: G1000 System Specifications	G-1
GDU 1040 MFD & PFD	G-1
GMA 1347 Audio Panel	G-1
GIA 63 Integrated Avionics Units	G-1
GDC 74A Air Data Computer	G-2
GTX 33 Mode S Transponder	G-2
GEA 71 Engine/Airframe Unit	G-2
GDL 69/69A Weather Data Link	G-2
GRS 77 AHRS	G-3

INDEX

Index	1
--------------	---

Figure 2.2.1	Basic G1000 System.....	2-4	Figure 3.4.25	Radio Tuning Window	3-23
Figure 2.2.2	G1000 Optional Interfaces	2-5	Figure 3.4.26	DME Selection Window.....	3-23
Figure 2.3.1	PFD/MFD Controls	2-6	Figure 3.4.27	GPS INTEG, GPS SUSP, LOC1 and VOR2	3-24
Figure 2.5.1	PFD Initialization.....	2-9	Figure 3.5.1	Communication Frequency Window	3-25
Figure 2.5.2	MFD Power-up Page.....	2-10	Figure 3.5.2	Navigation Frequency Window	3-25
Figure 2.7.1	G1000 Normal Mode.....	2-11	Figure 3.5.3	Navigation Status Bars.....	3-26
Figure 2.7.2	G1000 Reversionary Mode (Failed PFD)	2-12	Figure 3.5.4	Navigation Status Bar Message.....	3-26
Figure 3.1.1	Default PFD Information	3-2	Figure 3.5.5	Transponder Status Bar	3-27
Figure 3.1.2	Additional PFD Information	3-3	Figure 3.6.1	Outside Air Temperature Box	3-29
Figure 3.2.1	PFD Setup Menu Window	3-5	Figure 3.6.2	System Time Box.....	3-29
Figure 3.3.1	Softkey On.....	3-7	Figure 3.6.3	Traffic Annunciation.....	3-29
Figure 3.3.2	Softkey Off	3-7	Figure 3.6.4	Inset Map.....	3-30
Figure 3.3.3	PFD Softkey Flow Chart – 1	3-9	Figure 3.6.5	Page Menu – No Options with NRST Window Displayed.....	3-32
Figure 3.3.4	PFD Softkey Flow Chart – 2	3-9	Figure 3.6.6	Page Menu – Options with FPL Window Displayed.....	3-32
Figure 3.3.5	PFD Softkey Flow Chart – 3	3-10	Figure 3.6.7	Timer Status Prompts	3-34
Figure 3.4.1	Airspeed Indicator	3-11	Figure 3.6.8	Flight ID Field.....	3-34
Figure 3.4.2	Red Pointer at Vne.....	3-11	Figure 3.6.9	Timer/References Window.....	3-35
Figure 3.4.3	Attitude Indicator	3-12	Figure 3.6.10	Nearest Airports Window	3-35
Figure 3.4.4	Attitude Indicator Nose High.....	3-13	Figure 3.6.11	Airport Information Window.....	3-36
Figure 3.4.5	Attitude Indicator Nose Low.....	3-13	Figure 3.6.12	Direct-To Window.....	3-37
Figure 3.4.6	Altimeter	3-14	Figure 3.6.13	Cancel Direct-To NAV.....	3-38
Figure 3.4.7	Colors Associated with the Altitude Alerter	3-15	Figure 3.6.14	Flight Plan Window	3-38
Figure 3.4.8	Altimeter within 1,000 ft of Reference Altitude	3-15	Figure 3.6.15	Activate Leg Confirmation Window.....	3-39
Figure 3.4.9	Altimeter within 200 ft of Reference Altitude.....	3-15	Figure 3.6.16	Page Options Menu.....	3-39
Figure 3.4.10	Altimeter (Metric)	3-16	Figure 3.6.17	Invert Flight Plan Confirmation Window.....	3-40
Figure 3.4.11	Marker Beacon and Vertical Deviation	3-16	Figure 3.6.18	Delete Flight Plan Confirmation Window.....	3-40
Figure 3.4.12	Vertical Speed Indicator	3-17	Figure 3.6.19	Departure	3-41
Figure 3.4.13	Horizontal Situation Indicator.....	3-18	Figure 3.6.20	Departure Runway.....	3-41
Figure 3.4.14	ARC HSI.....	3-19	Figure 3.6.21	Departure Transition	3-41
Figure 3.4.15	Current Heading	3-19	Figure 3.6.22	Select Departure Window	3-41
Figure 3.4.16	Selected Heading Box	3-19	Figure 3.6.23	Closest Point of FPL Window	3-43
Figure 3.4.17	Selected Course Box.....	3-19	Figure 3.6.24	Change Fields on Flight Plan	3-44
Figure 3.4.18	Turn Rate Indicator and Trend Vector	3-20	Figure 3.6.25	Procedures Window.....	3-44
Figure 3.4.19	Arc CDI and Compass Rose CDI	3-20	Figure 3.6.26	Approach	3-45
Figure 3.4.20	HSI with Bearing Information	3-21	Figure 3.6.27	Approach Transition	3-45
Figure 3.4.21	BRG1 Information Window.....	3-21	Figure 3.6.28	Select Approach Window	3-45
Figure 3.4.22	BRG2 Information Window.....	3-21	Figure 3.6.29	Arrival.....	3-46
Figure 3.4.23	DME Information Window	3-22			
Figure 3.4.24	ADF Selected in BRG2 Information Window.....	3-22			

LIST OF FIGURES

Figure 3.6.30	Arrival Transition	3-46	Figure 4.5.9	NRST – Nearest Frequencies Page.....	4-23
Figure 3.6.31	Arrival Runway.....	3-46	Figure 4.5.10	Selecting an Approach	4-24
Figure 3.6.32	Select Arrival Window.....	3-46	Figure 4.5.11	Loading an Approach	4-24
Figure 3.7.1	PFD Reversionary Mode	3-49	Figure 4.5.12	Activating an Approach.....	4-25
Figure 3.8.1	Alerts Window	3-51	Figure 5.1.1	Top-level Softkeys.....	5-1
Figure 3.8.2	Annunciation Window.....	3-51	Figure 5.1.2	Mode Selection Softkeys	5-1
Figure 4.1.1	G1000 VHF NAV/COM Interface (PFD)	4-1	Figure 5.1.3	Code Selection Softkeys	5-1
Figure 4.1.2	Frequency Fields	4-2	Figure 5.2.1	Ground Mode	5-3
Figure 4.1.3	Frequency Toggle Arrow and Tuning Box	4-3	Figure 5.2.2	Standby Mode.....	5-3
Figure 4.1.4	NAV/COM Controls	4-4	Figure 5.2.3	ON Mode	5-3
Figure 4.2.1	COM Volume Level	4-5	Figure 5.2.4	Altitude Mode.....	5-4
Figure 4.2.2	Overriding Automatic Squelch	4-5	Figure 5.2.5	Reply Indication	5-4
Figure 4.2.3	Switching COM Radios	4-6	Figure 5.2.6	Entering a Code.....	5-4
Figure 4.2.4	Toggling COM Frequencies	4-6	Figure 5.2.7	IDENT Indication.....	5-5
Figure 4.2.5	Selecting a COM Radio	4-6	Figure 6A.2.1	Front Panel Controls.....	6A-3
Figure 4.2.6	Radio Status Indications.....	4-7	Figure 6A.3.1	Transceivers.....	6A-5
Figure 4.2.7	COM Tuning Failure	4-7	Figure 6A.3.2	Marker Beacon	6A-7
Figure 4.2.8	Quickly Tuning 121.500 MHz	4-7	Figure 6A.3.3	Marker Beacon Signal Indicator Lights on the PFD.....	6A-8
Figure 4.2.9	Stuck COM Microphone Alert.....	4-7	Figure 6A.3.4	Navigation Radios	6A-9
Figure 4.3.1	NAV Volume Level	4-9	Figure 6A.3.5	ICS Isolation Keys	6A-10
Figure 4.3.2	ID Indication	4-9	Figure 6A.3.6	Volume/Squelch Control.....	6A-12
Figure 4.3.3	Morse Code Identifier Audio.....	4-9	Figure 6A.3.7	Playback	6A-14
Figure 4.3.4	Switching NAV Radios.....	4-10	Figure 6A.3.8	Reversionary Mode Button	6A-15
Figure 4.3.5	Toggling NAV Frequencies	4-10	Figure 6A.3.9	Dual G1000 Audio Panels (GMA 1347).....	6A-17
Figure 4.3.6	Selecting a NAV Radio	4-11		Pilot Side	6A-17
Figure 4.4.1	ADF/DME Tuning Window.....	4-13		Copilot Side	6A-17
Figure 4.4.2	Entering ADF Standby Frequencies	4-14	Figure 6B.1.1	G1000 Audio Panel (GMA 1347)	6B-1
Figure 4.4.3	Toggling ADF Frequencies	4-14	Figure 7.1.1	ENGINE Page	7-2
Figure 4.4.4	Selecting ADF Receiver Mode	4-15	Figure 7.2.1	SYSTEM Page.....	7-3
Figure 4.4.5	Adjusting ADF Receiver Volume.....	4-15	Figure 7.3.1	FUEL Page	7-5
Figure 4.4.6	Selecting DME Tuning Mode.....	4-16	Figure 8.1.1	MFD Power-Up Page	8-1
Figure 4.5.1	Loading Frequencies.....	4-17	Figure 8.1.2	MFD Softkeys	8-4
Figure 4.5.2	Nearest Airports Window (PFD).....	4-17	Figure 8.1.3	Page Group Window (without Weather Map Page).....	8-5
Figure 4.5.3	MFD Page Group Icon	4-18	Figure 8.1.4	Page Title Window	8-5
Figure 4.5.4	WPT – Airport Information Page (INFO).....	4-18	Figure 8.1.5	Menu With Options	8-6
Figure 4.5.5	WPT – Airport Information Page (APR).....	4-19	Figure 8.1.6	Menu With No Options	8-6
Figure 4.5.6	WPT – VOR Information Page.....	4-20	Figure 8.2.1	Navigation Map Page.....	8-7
Figure 4.5.7	NRST – Nearest Airport Page.....	4-21			
Figure 4.5.8	NRST – Nearest VOR Page.....	4-22			

Figure 8.2.2	Navigation Map Range	8-9	Figure 8.7.18	Approaching Target Altitude Message (PFD) ...	8-70
Figure 8.2.3	Navigation Map Panning	8-12	Figure 8.7.19	VNAV Page Options Menu	8-70
Figure 8.2.4	Topography Scale	8-14	Figure 8.8.1	Procedures Page	8-71
Figure 8.2.5	TRAFFIC, TOPO and TERRAIN Softkeys	8-14	Figure 8.8.2	Selecting an Approach Procedure	8-73
Figure 8.2.6	MFD Navigation Status Window	8-16	Figure 8.8.3	Selecting an Approach Transition	8-73
Figure 8.2.7	Navigation Map Page Menu Options	8-17	Figure 8.8.4	Activating an Approach Procedure	8-74
Figure 8.2.8	Weather Group	8-23	Figure 8.8.5	Approach with No Procedure Turn	8-76
Figure 8.2.9	Traffic Group Options	8-25	Figure 8.8.6	Flying the Missed Approach	8-78
Figure 8.2.10	Aviation Group Options	8-28	Figure 8.8.7	Flying the Procedure Turn	8-80
Figure 8.2.11	Land Group Options	8-30	Figure 8.8.8	Flying the DME Arc and Vectors to the DME Arc	8-82
Figure 8.2.12	Measuring Bearing and Distance	8-32	Figure 8.8.9	Flying a Holding Pattern	8-85
Figure 8.3.1	Traffic Map Page	8-35	Figure 8.8.10	Course from Fix to Distance or Course from Fix to DME Distance	8-87
Figure 8.4.1	Weather Map Page	8-39	Figure 8.8.11	Flying a Course from Fix to Altitude	8-89
Figure 8.4.2	ARC View	8-40	Figure 8.8.12	Flying a Course from Fix to Manual Sequence ..	8-91
Figure 8.4.3	Weather Map Page Menu	8-41	Figure 8.8.13	Flying the ILS Approach	8-94
Figure 8.5.1	Terrain Proximity Page	8-43	Figure 8.8.14	Flying the Vectors Approach	8-96
Figure 8.5.2	Terrain Scale	8-44	Figure 8.9.1	Airport Information Page	8-97
Figure 8.6.1	Direct-to Page	8-47	Figure 8.9.2	Waypoint Facility or City Location	8-99
Figure 8.6.2	Flight Plan Waypoint Direct-to	8-49	Figure 8.9.3	Runway Information Field	8-100
Figure 8.6.3	Nearest Airport Direct-to	8-50	Figure 8.9.4	Frequency Information Field	8-101
Figure 8.6.4	Canceling Direct-to Navigation	8-51	Figure 8.9.5	Airport Information Page Menu	8-102
Figure 8.6.5	Manual Course Direct-to	8-51	Figure 8.9.6	Departure Page Menu	8-103
Figure 8.7.1	Active Flight Plan Page	8-54	Figure 8.9.7	Arrival Page Menu	8-104
Figure 8.7.2	New Flight Plan	8-54	Figure 8.9.8	Approach Page Menu	8-107
Figure 8.7.3	Activate Flight Plan Leg Confirmation	8-55	Figure 8.9.9	Intersection Information Page	8-108
Figure 8.7.4	Store Flight Plan Confirmation	8-56	Figure 8.9.10	NDB Information Page	8-110
Figure 8.7.5	Invert Flight Plan	8-57	Figure 8.9.11	NDB Page Menu	8-112
Figure 8.7.6	Invert Flight Plan Confirmation	8-57	Figure 8.9.12	VOR Information Page	8-113
Figure 8.7.7	Remove Waypoint Confirmation	8-57	Figure 8.9.13	VOR Page Menu	8-115
Figure 8.7.8	Loading Departure Options	8-58	Figure 8.9.14	User WPT Information Page	8-116
Figure 8.7.9	Selecting an Arrival	8-59	Figure 8.9.15	User WPT Page Menu	8-121
Figure 8.7.10	Flight Plan with Loaded Approach	8-60	Figure 8.10.1	Trip Planning Page	8-126
Figure 8.7.11	Removing an Approach	8-61	Figure 8.10.2	Trip Planning Page Menu	8-126
Figure 8.7.12	Flight Plan Catalog Page	8-63	Figure 8.10.3	Utility Page	8-130
Figure 8.7.13	Flight Plan Catalog Page Options	8-63	Figure 8.10.4	Utility Page Menu	8-130
Figure 8.7.14	Activate Stored Flight Plan Confirmation	8-64	Figure 8.10.5	GPS Status Page	8-133
Figure 8.7.15	Delete Flight Plan Confirmation	8-64	Figure 8.10.6	GPS Status Page Menu	8-133
Figure 8.7.16	Vertical Navigation (VNAV) Page	8-69			
Figure 8.7.17	Approaching VNAV Profile Message (PFD)	8-70			

LIST OF FIGURES

Figure 8.10.7	RAIM	8-137
Figure 8.10.8	GPS Signal Strength	8-138
Figure 8.10.9	System Setup Page	8-139
Figure 8.10.10	System Status Page	8-150
Figure 8.10.11	System Status Page Menu	8-150
Figure 8.11.1	Nearest Airports Page	8-152
Figure 8.11.2	Direct-to from Nearest Airports Page	8-153
Figure 8.11.3	APT, RNWY, FREQ, and APR Softkeys	8-154
Figure 8.11.4	LD APR Softkey	8-155
Figure 8.11.5	Nearest Approach	8-156
Figure 8.11.6	Nearest Intersections Page	8-157
Figure 8.11.7	Nearest NDB Page	8-159
Figure 8.11.8	Nearest VOR Page	8-161
Figure 8.11.9	Nearest User Waypoints Page	8-163
Figure 8.11.10	Nearest Frequencies Page	8-165
Figure 8.11.11	Nearest Airspaces Page	8-167
Figure 9.1.1	G1000 Alerting System	9-1
Figure 9.2.1	WARNING Softkey Annunciation	9-3
Figure 9.2.2	CAUTION Softkey Annunciation	9-3
Figure 9.2.3	ADVISORY Softkey Annunciation	9-3
Figure 9.4.1	G1000 System Failure Annunciations	9-9
Figure F.1	Terrain Color Chart	F-4

Table 6A.3.1	Marker Beacon Signal Characteristics	6A-8
Table 6A.3.2	ICS Isolation Mode Transitions.....	6A-10
Table 6A.3.3	ICS Isolation Modes & Telephone Distribution.....	6A-11
Table 6A.3.5	Transitioning from Auto to Manual Squelch Mode.....	6A-12
Table 8.2.1	Map Declutter Levels.....	8-11



WARNING: Navigation and terrain separation must **NOT** be predicated upon the use of the terrain function. The G1000 Terrain Proximity feature is **NOT** intended to be used as a primary reference for terrain avoidance and does not relieve the pilot from the responsibility of being aware of surroundings during flight. The Terrain Proximity feature is only to be used as an aid for terrain avoidance and is not certified for use in applications requiring a certified terrain awareness system. Terrain data is obtained from third party sources. Garmin is not able to independently verify the accuracy of the terrain data.



WARNING: The displayed minimum safe altitudes (MSAs) are only advisory in nature and should not be relied upon as the sole source of obstacle and terrain avoidance information. Always refer to current aeronautical charts for appropriate minimum clearance altitudes.



WARNING: The Garmin G1000, as installed in Diamond DA42 aircraft, has a very high degree of functional integrity. However, the pilot must recognize that providing monitoring and/or self-test capability for all conceivable system failures is not practical. Although unlikely, it may be possible for erroneous operation to occur without a fault indication shown by the G1000. It is thus the responsibility of the pilot to detect such an occurrence by means of cross-checking with all redundant or correlated information available in the cockpit.



WARNING: For safety reasons, G1000 operational procedures must be learned on the ground.



WARNING: The altitude calculated by G1000 GPS receivers is geometric height above Mean Sea Level and could vary significantly from the altitude displayed by pressure altimeters, such as the GDC 74A Air Data Computer, or other altimeters in aircraft. GPS altitude should never be used for vertical navigation. Always use pressure altitude displayed by the G1000 PFD or other pressure altimeters in aircraft.



WARNING: The Jeppesen database used in the G1000 system must be updated regularly in order to ensure that its information remains current. Updates are released every 28 days. A database information packet is included in the G1000 package. **Pilots using an outdated database do so entirely at their own risk.**



WARNING: The basemap (land and water data) must not be used for navigation, but rather only for non-navigational situational awareness. Any basemap indication should be compared with other navigation sources.



CAUTION: The United States government operates the Global Positioning System and is solely responsible for its accuracy and maintenance. The GPS system is subject to changes which could affect the accuracy and performance of all GPS equipment. Portions of the Garmin G1000 utilize GPS as a precision electronic NAVigation AID (NAVAID). Therefore, as with all NAVAIDs, information presented by the G1000 can be misused or misinterpreted and, therefore, become unsafe.



CAUTION: To reduce the risk of unsafe operation, carefully review and understand all aspects of the G1000 Pilot's Guide documentation and the G1000 Flight Manual Supplement. Thoroughly practice basic operation prior to actual use. During flight operations, carefully compare indications from the G1000 to all available navigation sources, including the information from other NAVAIDs, visual sightings, charts, etc. For safety purposes, always resolve any discrepancies before continuing navigation.



CAUTION: The Garmin G1000 does not contain any user-serviceable parts. Repairs should only be made by an authorized Garmin service center. Unauthorized repairs or modifications could void both the warranty and the pilot's authority to operate this device under FAA/FCC regulations.



CAUTION: The GDU 1040 PFD and MFD displays use a lens coated with a special anti-reflective coating that is very sensitive to skin oils, waxes, and abrasive cleaners. **CLEANERS CONTAINING AMMONIA WILL HARM THE ANTI-REFLECTIVE COATING.** It is very important to clean the lens using a clean, lint-free cloth and an eyeglass lens cleaner that is specified as safe for anti-reflective coatings.



CAUTION: All visual depictions contained within this document, including screen images of the G1000 panel and displays, are subject to change and may not reflect the most current G1000 system. Depictions of equipment may differ slightly from the actual equipment.



CAUTION: The illustrations in this guide are only examples. Never use the G1000 to attempt to penetrate a thunderstorm. Both the FAA Advisory Circular, Subject: Thunderstorms, and the Aeronautical Information Manual (AIM) recommend avoiding "by at least 20 miles any thunderstorm identified as severe or giving an intense radar echo."



CAUTION: There are several atmospheric phenomena in addition to nearby thunderstorms that can cause isolated discharge points in the strike display mode. However, clusters of two or more discharge points in the strike display mode do indicate thunderstorm activity if these points reappear after the screen has been cleared. Avoid the clusters to avoid the thunderstorms. In the cell display mode, even a single discharge point may represent thunderstorm activity and should therefore be avoided.



WARNING: This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

LIMITED WARRANTY

This Garmin product is warranted to be free from defects in materials or workmanship for two years from the date of purchase. Within this period, Garmin will, at its sole option, repair or replace any components that fail in normal use. Such repairs or replacement will be made at no charge to the customer for parts and labor, provided that the customer shall be responsible for any transportation cost. This warranty does not cover failures due to abuse, misuse, accident, or unauthorized alterations or repairs.

THE WARRANTIES AND REMEDIES CONTAINED HEREIN ARE EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES EXPRESS OR IMPLIED OR STATUTORY, INCLUDING ANY LIABILITY ARISING UNDER ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, STATUTORY OR OTHERWISE. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, WHICH MAY VARY FROM STATE TO STATE.

IN NO EVENT SHALL GARMIN BE LIABLE FOR ANY INCIDENTAL, SPECIAL, INDIRECT OR CONSEQUENTIAL DAMAGES, WHETHER RESULTING FROM THE USE, MISUSE, OR INABILITY TO USE THIS PRODUCT OR FROM DEFECTS IN THE PRODUCT. Some states do not allow the exclusion of incidental or consequential damages, so the above limitations may not apply to you.

Garmin retains the exclusive right to repair or replace the unit or software, or to offer a full refund of the purchase price, at its sole discretion. SUCH REMEDY SHALL BE YOUR SOLE AND EXCLUSIVE REMEDY FOR ANY BREACH OF WARRANTY.

To obtain warranty service, contact your local Garmin Authorized Service Center. For assistance in locating a Service Center near you, visit the Garmin Web site at "<http://www.garmin.com>" or contact Garmin Customer Service at 800-800-1020.

G1000[™]

*pilot's guide index
for the Diamond DA42*

A

- Accomplishing a holding pattern 8-84
- Acquisition squitter 5-3, 5-7
- Activate approach 3-47
- Activate a flight plan 8-55, 8-64
- Active 4-5, 4-9
- Active field 4-2, 4-3, 4-6, 4-10, 4-17, 4-25
- Active flight plan 8-28, 8-49
- Active flight plan page 8-53
- Active flight plan page options 8-53
- Active frequency 4-2, 4-3, 4-7
 - ADF 4-13
- ADF 3-22, 4-1, 4-13
 - ADF mode 4-13, 4-15
 - ANT mode 4-15
 - BFO mode 4-15
 - Volume 4-13, 4-15
- ADF/DME tuning window 4-13
- ADF tuning 3-23
- Advisory 3-51
- AHRS 2-2
- Air-initiated long replies 5-7
- Airborne 5-4
- Airborne status determination 5-7
- Aircraft alerts 9-5
- Airport frequency 8-102, 8-155
- Airport frequency information field 8-101
- Airport information 4-18, 4-19
- Airport information window 3-36
- Airport runway information field 8-100
- Airport symbols 8-9
- Airspace 8-9
- Airspace alerts box 8-168
- Airspace boundaries 8-28
- Airspace messages 8-169
- Airspeed indicator 3-11
- Airspeed trend vector 3-11
- Air Data Computer 2-1, 2-2
- Alerting system 9-1
- Alerts 9-1
- Alerts window 3-51
- Alert levels 9-3
- Altimeter 3-14
- Altitude alerting 3-15
- Altitude buffer 8-145
- Altitude mode 5-3, 5-4
- Altitude reference bug 3-14
- Altitude reporting 5-7
- Altitude trend vector 3-14
- ALT indication 5-4
- ALT mode 3-27
- ALT softkey 5-3, 5-4
- Ammeter 7-3
- Annunciation window 3-51
- Annunciator lights 4-9, 6A-5
- Approach C-1, C-2, C-3, C-4
- Approaches 8-72
- Approach activation 4-17, 4-18, 4-24
- Approach information page 8-103
- Approach markers
 - Inner 6A-7, 6A-12
 - Lamp color 6A-8
 - Middle 6A-7
 - Outer 6A-7, 6A-12
 - Signal augmentation 6A-7
- Approach page menu 8-107
- APR softkey 4-19, 8-106
- Arc HSI 3-19
- ARINC 429 2-2
- ARINC leg types 8-72
- Arrivals and departures 8-71
- Arrival alerts 8-146, 8-147
- Arrival information page 8-103
- Arrival page menu 8-104
- ARTCC 4-23, 8-165
- ARTCC softkey 4-23
- ATC 5-5, 5-7
- ATC vectors 8-81
- Attitude 2-1, 2-2
- Attitude indicator 3-12
- Audio alerts 8-147
- Audio panel 4-3, 4-6, 4-9
- Audio panel controls
 - ADF 6A-9
- AUX 6A-9
 - COM1 6A-4, 6A-5
 - COM1 MIC 6A-2
 - COM2 6A-4, 6A-5
 - COM2 MIC 6A-2, 6A-4
 - COM3 6A-4, 6A-5
 - COM3 MIC 6A-2, 6A-4
 - COM 1/2 6A-5, 6A-6
 - COPLT 6A-10
 - DME 6A-9
 - NAV1 6A-9
 - NAV2 6A-9
 - SPKR 6A-7
 - SQ 6A-12, 6A-13
 - TEL 6A-5
 - VOL 6A-12, 6A-13
- Auto-tuning 4-17, 4-18, 4-24
- Automated airborne determination 3-27
- Automatic 5-3, 5-4
- Automatic sequencing C-2, C-3
- Automatic squelch 4-4, 4-5
- Auto zoom 8-9, 8-18
- AUX 6B-1
- Auxiliary window 3-33
- AUX page group 4-5, 8-125
- Aviation database A-1
- Aviation group options 8-28
- Aviation map data 8-9

B

- Backlighting 3-5
- BACK softkey 5-1
- Barometric setting box 3-14
- Bearing pointers 3-21
- Bearing source 3-21
- BKSP softkey 5-4
- Bus voltage 7-3

C

- CAUTION softkey 9-3
- Caution xiv, xv, 3-51
- CDI scale 8-148, C-3

CDI scaling 8-74
 CDI softkey 4-11
 Change fields 3-44, 8-62
 Changing the map scale 8-36
 Channel status indications 4-1
 Closest point of FPL 3-43, 8-61
 Cockpit Voice Recorder 6A-15, 6B-1
 Codes (important) 5-5
 Code field 5-1, 5-4, 5-5
 Code selection 5-4
 Code selection softkeys 5-1, 5-4
 CODE softkey 5-1, 5-4
 Color 4-1, 4-3, 4-5, 4-9
 Cyan 4-3
 Gray 4-3
 Green 4-3, 4-6, 4-11
 Magenta 4-11
 White 4-3, 4-7, 4-11
 Color code 4-1, 4-9
 COM1 4-2, 4-5, 4-6
 COM1 MIC 4-2, 4-6
 COM2 4-2, 4-5, 4-6
 COM2 MIC 4-2, 4-6
 COM3 6B-1
 COM3 MIC 6B-1
 COM channel spacing 8-149
 COM configuration 8-148
 COM frequency window 3-25, 4-1
 COM knob 4-3, 4-4, 4-5, 4-6, 4-10
 COM swap 6A-6
 Controls 2-6, 4-1, 4-4
 Coolant temperature indicator 7-2
 Copyright i
 Copy a flight plan 8-65
 Course 3-19
 Course Deviation Indicator (CDI) 3-20
 Course from fix to an altitude 8-86
 Course from fix to distance 8-86
 Course from fix to DME distance 8-86
 Course from fix to manual
 termination 8-86
 Create a new waypoint 8-123
 Creating a flight plan 3-39, 8-65

Creating a profile 8-140
 Creating user waypoints 8-118

D

Database 2-10, A-1
 Date/Time box 8-142
 Declutter level 3-31
 Decluttering 8-10
 Default power-on settings 6A-5
 Delete 3-40
 Delete all flight plans 8-67
 Delete all user waypoints 8-121
 Delete a flight plan 8-66
 Delete a user waypoint 8-123
 Delete a waypoint 8-57
 Deleting a profile 8-141
 Density altitude 8-129
 Departure information page 8-108
 Departure procedures 8-103
 Departure timer 8-131
 Description 5-1
 Digit softkeys 5-4, 5-5
 Dilution of Precision 8-135
 Direct-to 3-36
 Direct-to navigation 8-47
 Direct-to page 8-47
 Direct-to waypoint 8-48
 Display backup 3-49
 Display units 8-142
 DME 3-22, 4-1, 4-13
 HOLD mode 4-16
 NAV1 mode 4-16
 NAV2 mode 4-16
 Tuning mode 4-13, 4-16
 DME tuning 3-23
 DP softkey 8-103
 Dual audio panel 6B-1
 Dual CDU failure 4-7

E

Edit a flight plan 8-55
 Emergency code 5-5
 Emergency frequency 4-7

ADF 4-14
 Engine Indication System (EIS) 7-1
 ENGINE softkey 7-1, 8-3
 Entering a code 5-4
 Entertainment inputs 6A-9
 Estimated Position Error 8-135

F

FCC xv
 Figure numbering format 1-3
 Flight ID reporting 5-7
 Flight plan 3-38
 Flight planning 8-53
 Flight plan catalog page 8-63
 Flight plan catalog page
 operations 8-63
 Flight plan catalog page options 8-63
 Flight timer 8-131
 Flying the DME arc 8-81
 Flying the ILS approach 8-92
 Flying the procedure turn 8-78
 Flying the vectors approach 8-95
 Frequency list 8-101
 Frequency toggle arrow 4-1, 4-3, 4-7
 Frequency toggle key 4-3, 4-4, 4-5,
 4-6, 4-7, 4-9, 4-10, 4-17
 FREQ softkey 4-21, 4-22
 Front matter 1-1, 1-2
 FSS 4-23
 FSS information 8-165
 FSS softkey 4-23
 Fuel flow indicator 7-1
 Fuel flow totalizer 7-4
 Fuel planning 8-128
 Fuel quantity 7-2
 Fuel range ring 8-22
 Fuel remaining 7-4
 Fuel reserve ring 3-30
 FUEL softkey 7-4
 Fuel temperature indicator 7-2
 Fuel used 7-4

G

G1000 pilot's guide binder 1-1
 Gallons Per Hour (GPH) 7-1
 Gearbox temperature 7-3
 Generic timer 3-34, 8-131
 GND indication 5-3
 GND mode 3-27
 GPS xiv, C-1
 GPS CDI 8-148
 GPS mode 4-3, 4-11
 GPS receiver 8-138
 GPS signal strength 8-137
 GPS status page 8-133
 Gray 4-3
 Ground mode 5-3
 GTX 33 5-1, 5-7

H

Heading 3-19
 Headset(s) 6A-4, 6A-9, 6A-15
 Stereo 6A-4
 Headset jacks 6B-1
 Hijack code 5-5
 HI SENS 6A-7
 Horizontal Situation Indicator
 (HSI) 3-18, 4-2, 4-3, 4-11

I

ICAO 5-5
 ID 4-3, 4-4, 4-9
 Ident 3-27
 Identification codes 5-4
 Identification code (previous) 5-5
 IDENT function 5-5
 IDENT softkey 5-3, 5-5
 IDNT indication 5-5
 Index 1-3
 INFO softkey 4-18
 Inset map 3-30
 INTEG 3-24
 Intercom system (ICS) 6A-6, 6A-9,
 6A-10, 6A-12, 6A-13

Interrogation 3-27, 5-3, 5-4, 5-7
 Intersection information page 8-108
 Intersection information page
 operations 8-109
 Invert 3-40
 Invert and activate a flight plan 8-65
 Invert flight plan 8-57

J

Jeppesen xiv, A-1
 Joystick (bezel) 2-6

K

Key 2-7, 2-8
 Key(s)
 CLR 2-6
 COM frequency toggle 2-6
 Direct-to 2-6
 ENT 2-6
 FPL 2-6
 MENU 2-6
 NAV frequency toggle 2-6
 PROC 2-6
 Keyed ICS operation 6B-1
 kHz 4-4, 4-5, 4-6, 4-9, 4-10
 Knob(s)
 ALT 2-6
 COM 2-6
 COM VOL/SQ 2-6
 CRS/BARO 2-6
 FMS 2-6
 HDG 2-6
 NAV 2-6
 NAV VOL/ID 2-6

L

Land data 8-18
 Land group options 8-30
 LD APR softkey 8-155
 LED 6A-5
 Level-2 5-7
 Lightning 8-23, 8-39

Liquid Crystal Displays 8-1
 List of figures 1-1, 1-3
 List of tables 1-1, 1-3
 Loading departure options 8-58
 Load approach 3-42, 8-60
 Load arrival 3-42, 8-59
 Load departure 3-41, 8-58
 Load indicator 7-1
 LOC1 4-2, 4-11
 LOC2 4-2, 4-11
 Loss of communication code 5-5
 LTNG softkey 8-16
 Flying the missed approach 8-77

M

Magnetic variation 8-113
 Magnetometer 2-1, 2-2
 Manual 5-3, 5-4
 Manual sequencing C-2
 Manual squelch (MAN SQ) 6A-12,
 6A-13
 Override 6A-13
 Manual tuning 4-6, 4-10
 MAP softkey 8-16
 Map datums 8-143, D-1
 Map group options 8-17
 Map orientation 3-30, 8-8
 Map panning 8-11
 Map scale 8-9
 Map symbols F-1
 Marker beacon 6A-7
 Marker beacon annunciation 3-16
 MASQ 6A-9
 Measuring bearing/distance 8-32
 Menus 3-32, 8-6
 MENU key 4-20, 4-25
 Message advisories 9-11, 9-12, 9-14,
 9-15, 9-16, 9-17, 9-18
 Metric display 3-16
 MFD 4-1, 4-2, 4-3, 4-5, 4-6, 4-10,
 4-17, 4-18
 MFD data bar fields 8-147
 MFD navigation status window 8-16

MFD page group 4-18
 MFD softkeys 8-3
 MHz 4-4, 4-5, 4-6, 4-9, 4-10
 Military interceptor operations code 5-5
 Minimum runway length 8-149
 Missed approach C-2, C-3
 MKR/MUTE 6A-7
 Mode A 3-27, 5-1, 5-3
 Mode C 3-27, 5-1, 5-3
 Mode field 5-1, 5-3, 5-4, 5-5
 Mode S 5-1, 5-3, 5-7, E-1, E-2
 Mode select 5-7
 Mode selection 5-3
 Mode selection softkeys 5-1, 5-3, 5-4
 Mode S transponder 3-27
 Morse code identifier 4-3, 4-4, 4-9, 4-15
 Multi-site long reply 5-7
 MUSIC #1 6A-9, 6A-10
 MUSIC #2 6A-9, 6A-10
 Muting
 COM 6A-6, 6A-14
 MUSIC #1 6A-9

N

NAV1 4-2, 4-6, 4-9, 4-10, 4-11, 6A-9
 NAV2 4-2, 4-9, 4-10, 4-11, 6A-9
 NAVAID xiv, xv
 Navigation map page 8-7
 Navigation map page options menu 8-17
 Navigation modes 4-11
 Navigation source 3-24
 Navigation status bar 3-26, 4-2, 4-5
 NAV frequency window 3-25, 4-1
 NAV knob 4-3, 4-4, 4-10
 NAV range ring 8-20
 NDB 4-15
 NDB information page 8-110
 NDB information page operations 8-111
 NDB information page options 8-112

NDB page menu 8-112
 Nearest airports 3-35, 4-17, 4-21, 8-50, 8-149
 Nearest airports page 8-154
 Nearest airspace page 8-167
 Nearest frequencies 4-23
 Nearest frequencies page 8-165
 Nearest intersections page 8-157
 Nearest NDB page 8-159
 Nearest page group 8-151
 Nearest user waypoint page 8-163
 Nearest VOR page 8-161
 No procedure turn 8-75

O

OAT 2-2
 OBS 3-24
 OBS mode C-2
 Oil pressure indicator 7-2
 Oil temperature indicator 7-1
 ON indication 5-3
 ON mode 5-3
 Operation 5-1, 6A-5, 6A-15
 Operational xiv
 Optional
 NAV radios 4-13
 Outside Air Temperature (OAT) 3-29
 Overspeed warning 7-1

P

PA 6A-7
 Page groups 8-5
 Page numbering format 1-2
 Pan map 3-32
 Part numbers 1-1
 Part number content 1-2
 Performance G-1, G-3
 PFD 4-1, 4-2, 4-3, 4-6, 4-7, 4-10, 4-17, 5-1, 6A-6, 6A-7, 6A-12, 6B-1
 PILOT 6A-10
 Pilot profiles 8-140
 Pitch indication 3-12

PLAY 6A-14
 Point-n-shoot flight plan creation feature 8-68, 8-70
 Power 8-36, 8-131
 Power-up 2-9
 Power-up test 8-36
 Pressure altitude 5-4
 Primary Flight Display (PFD) 3-1
 Primary NAV frequency 4-17, 4-19, 4-24, 4-25
 Procedures page 8-71
 Procedures window 3-44
 PROC key 4-24, 4-25
 PTT 6A-7

Q

Quickly tuning 121.500 MHz 4-7

R

Radio selection 4-1, 4-2
 Radio tuning window 3-23
 RAIM C-1
 RAIM prediction 8-136
 Range 8-39
 Recently used VORs 4-20
 Recorded COM signals 6A-14
 Registered Trademark i
 Remove approach 3-43, 8-61
 Remove arrival 3-43, 8-61
 Remove departure 3-43, 8-61
 Rename a user waypoint 8-123
 Renaming a profile 8-141
 Replies 5-3, 5-4, 5-7
 Restore defaults 3-44, 8-62
 Reversionary mode 3-49, 6A-2
 Revision levels 1-1
 Revolutions Per Minute (RPM) 7-1
 Roll indication 3-13
 Runway PCL frequency 4-19
 RX 4-3, 4-5, 4-7
 R indication 5-4

S

Satellites C-1
 Satellite status page 8-134
 Scheduler 8-132
 SD card 2-8, A-1
 Section numbering format 1-2
 Secure digital 2-8
 Selected NAV radio 4-18, 4-24, 4-25
 Selecting approaches 8-73
 Selecting a COM radio 4-6
 Selecting a NAV radio 4-11
 Select approach 3-45, 8-60
 Select arrival 3-46
 Select departure 3-47, 8-58
 Short squitter 5-7
 Single magenta arrow 4-11
 Slip/Skid indicator 3-13
 Softkeys 3-7
 Sort by comment/number 8-67
 Speaker 6A-7, 6A-15
 Special Position Identification (SPI) 3-27
 Specifications G-1, G-2
 Specifying a course to a waypoint 8-51
 Speed indication 3-11
 Speed ranges 3-11
 Spell N Find 8-48
 SPKR 6A-7
 Standard instrument departures 8-58
 Standby field 4-2, 4-3, 4-4, 4-18, 4-24, 4-25
 Standby frequency 4-2, 4-3, 4-6, 4-10, 4-17, 4-23
 ADF 4-13
 Standby mode 3-27, 5-1, 5-3, 5-5
 STAR softkey 8-104
 STBY indication 5-3
 STBY softkey 5-3
 Stop navigating a flight plan 8-64
 Store flight plan 3-39, 8-56
 Storing the binder 1-3
 Stuck COM microphone 4-7
 Alert 4-7

Surveillance identifier 5-7
 SUSP 3-24
 Symbols F-1
 System annunciations 9-1, 9-7
 System setup page 8-139
 SYSTEM softkey 7-3
 System status page 8-150
 System time box 3-29, 5-1
 System time format 8-142

T

Table numbering format 1-3
 Table of contents 1-1, 1-3
 Tab numbers 1-1
 Tachometer 7-1
 TCAS 5-7
 TCAS symbology 8-36
 TEL 6A-5, 6B-1
 Terrain xiv, 3-31, A-1, F-4
 Terrain data 8-21, 8-39
 Terrain data scale 8-21, 8-22
 Terrain Information 8-14
 Terrain proximity page 8-39, 8-43
 Terrain proximity page operations 8-44
 Terrain separation xiv
 Timer/References 3-33
 Time offset 8-142
 TIS 5-7, 8-15, E-1
 TIS symbology 8-36
 TIS traffic advisory 8-37
 TIS traffic status 8-38
 Toggling ADF frequencies 4-14
 Toggling COM frequencies 4-6
 Toggling NAV frequencies 4-10
 Top-level softkeys 5-1
 Topo 3-31
 Topographic information 8-13
 Topo data 8-20
 Topo scale box 8-21
 Total flight hours 7-4
 Track vector 8-19
 Trademark i
 Traffic 3-31, 8-15, 8-16, E-1

Traffic advisories 8-35
 Traffic banner 8-38
 Traffic group options 8-23
 Traffic information 5-7
 Traffic Information Service (TIS) 3-29
 Traffic label 8-27
 Traffic map page 8-35
 Traffic map page operations 8-36
 Traffic mode 8-26
 Traffic symbol 8-26
 Transceiver 4-5
 Transponder-equipped aircraft 5-7
 Transponder status bar 3-27, 5-1, 5-3, 5-4, 5-5
 Trip planning operations 8-127
 Trip planning page 8-126
 Trip statistics 8-132
 True airspeed box 3-11
 Tuning ADF frequencies 4-14
 Tuning box 4-1
 Turn rate indicator 3-20
 TX 4-3, 4-7

U

User waypoint information page 8-116, 8-120
 User waypoint information page options 8-121
 Using the binder 1-2
 Utility page 8-130

V

Vectors to final 8-95
 Vectors to the DME arc 8-83
 Vertical deviation/Glideslope indicator 3-16
 Vertical navigation (VNAV) page 8-69
 Vertical navigation profile 8-69
 Vertical Speed Indicator (VSI) 3-17
 Vertical speed pointer 3-17
 VFR 3-27
 VFR code 5-5
 VHF 4-1, 4-5, 4-1

- View recent user WPT list 8-121
- VLOC receiver 8-74
- VOL/PUSH ID 4-4, 4-9
- VOL/PUSH SQ 4-4, 4-5
- Voltmeter 7-3
- Volume 6A-6, 6A-12
- Volume/squelch 6A-12
- Volume level 4-4, 4-5, 4-9
 - ADF 4-13, 4-15
- VOR 4-18, 4-20, 4-22
- VOR/ILS approach 4-18, 4-25
- VOR/LOC name identifier 4-11
- VOR1 4-2, 4-11
- VOR2 4-2, 4-11
- VOR information 4-20
- VOR information page 8-113
- VOR information page
 - operations 8-114
- VOR information page options 8-115
- VOR list 8-115
- VOR page menu 8-115
- Vspeeds 3-35
- Vspeed bug 3-35
- Vspeed references 3-11

W

- WARN 3-24
- WARNING softkey 9-3
- Warning xiv, xv, 3-51, 6A-4
- Warranty xvi
- Waypoint facility or city location 8-99
- Waypoint identifier 8-98
- Waypoint page group 8-97
- Wind vector 8-19
- WX softkey 4-23

X

- XPDR softkey 5-1, 5-3, 5-4, 5-5

Z

- Zoom range 3-31



Garmin International, Inc.
1200 East 151st Street
Olathe, KS 66062, U.S.A.
p: 913.397.8200 f: 913.397.8282

Garmin AT, Inc.
2345 Turner Road SE
Salem, OR 97302, U.S.A.
p: 503.391.3411 f: 503.364.2138

Garmin (Europe) Ltd.
Unit 5, The Quadrangle
Abbey Park Industrial Estate
Romsey, SO51 9DL, U.K.
p: 44/0870.8501241 f: 44/0870.8501251

Garmin Corporation
No. 68, Jangshu 2nd Road
Shijr, Taipei County, Taiwan
p: 886/2.2642.9199 f: 886/2.2642.9099

www.garmin.com