

G1000TM

*pilot's guide for the
Diamond DA40*

Part Number	Change Summary
190-00363-01 (Rev. A)	Added XM Radio and XM Weather. Added DME capability. Added ADF capability. Added BRG1 and BRG2 pointers. Changed airspeed trend vector. Changed altitude trend vector. Added flight ID capability.
190-00363-02 (Rev. A)	Added DA40 Fixed Pitch to the Engine Indication System Pilot's Guide. Revised the softkey flow chart in the Multi Function Display Pilot's Guide.

Record of Revisions			
Revision	Date of Revision	Revision Page Range	Description
A	05/31/05	i – xviii l-1 – l-7	Initial release.

Record of Current Part Numbers Associated with Binder K00-00121-02	
190-00363-02	G1000 Pilot's Guide for the Diamond DA40
190-00302-00	G1000 Pilot's Guide Introduction
190-00374-01	G1000 System Overview for the Diamond DA40
190-00375-01	G1000 Primary Flight Display Pilot's Guide for the Diamond DA40
190-00377-01	G1000 VHF NAV/COM Pilot's Guide for the Diamond DA40
190-00382-00	G1000 Transponder Pilot's Guide
190-00378-02	G1000 Audio Panel Pilot's Guide
190-00379-01	G1000 Audio Panel Pilot's Guide Supplement for the Diamond DA40
190-00380-02	G1000 Engine Indication System for the Diamond DA40
190-00381-02	G1000 Multi Function Display Pilot's Guide for the Diamond DA40
190-00470-00	G1000 Multi Function Display Optional Equipment Addendum
190-00376-01	G1000 Annunciations and Alerts Pilot's Guide for the Diamond DA40
190-00383-02	G1000 Pilot's Guide Appendices

Copyright © 2004, 2005 Garmin Ltd. or its subsidiaries. All rights reserved.

This manual reflects the operation of System Software version 0369.07 or later for the DA 40 and DA 40 F. Some differences in operation may be observed when comparing the information in this manual to earlier or later software versions.

Garmin International, Inc., 1200 East 151st Street, Olathe, Kansas 66062, U.S.A.
Tel: 913/397.8200 Fax: 913/397.8282

Garmin AT, Inc., 2345 Turner Road SE, Salem, OR 97302, U.S.A.
Tel: 503/391.3411 Fax 503/364.2138

Garmin (Europe) Ltd., Unit 5, The Quadrangle, Abbey Park Industrial Estate, Romsey, Hampshire S051 9DL, U.K.
Tel: 44/0870.8501241 Fax: 44/0870.8501251

Garmin Corporation, No. 68, Jangshu 2nd Road, Shijr, Taipei County, Taiwan
Tel: 886/02.2642.9199 Fax: 886/02.2642.9099

Web Site Address: www.garmin.com

Except as expressly provided herein, no part of this manual may be reproduced, copied, transmitted, disseminated, downloaded or stored in any storage medium, for any purpose without the express written permission of Garmin. Garmin hereby grants permission to download a single copy of this manual and of any revision to this manual onto a hard drive or other electronic storage medium to be viewed for personal use, provided that such electronic or printed copy of this manual or revision must contain the complete text of this copyright notice and provided further that any unauthorized commercial distribution of this manual or any revision hereto is strictly prohibited.

Garmin® is a registered trademark of Garmin Ltd. or its subsidiaries, and G1000™ is a trademark of Garmin Ltd. or its subsidiaries. These trademarks may not be used without the express permission of Garmin.

Bendix/King® and Honeywell® are registered trademarks of Honeywell International, Inc.; Becker® is a registered trademark of Becker Flugfunkwerk GmbH; NavData® is a registered trademark of Jeppesen, Inc.; Stormscope® is a registered trademark of L-3 Communications; TCAD® is a registered trademark of Ryan International, Inc. and XM® is a registered trademark of XM Satellite Radio, Inc..

May 2005

Printed in the U.S.A.

FRONT MATTER		
Copyright		i
Table of Contents		ii
List of Figures		ix
List of Tables		xiii
Warnings and Cautions		xiv
Warranty		xvi
<hr/>		
1 – G1000 PILOT’S GUIDE INTRODUCTION		
Binder Contents		1-1
Using the Binder		1-2
Part Number Content		1-2
Page Numbering Format		1-2
General		1-2
Appendices		1-2
Index		1-2
Section Numbering Format		1-2
Figure/Table Numbering Format		1-3
Table of Contents and List of Figures/Tables		1-3
Index		1-3
Storing the Binder		1-3
<hr/>		
2 – SYSTEM OVERVIEW		
2.1 System Description		2-1
2.2 LRU Descriptions		2-1
2.3 PFD/MFD Controls		2-6
2.4 Secure Digital Cards		2-8
2.5 System Power-up		2-9
2.6 Display Backlighting		2-11
2.7 System Operation		2-11
Normal Mode		2-11
Reversionary Mode		2-12
AHRS Modes of Operation		2-13
GPS Input Failure		2-13
Air Data Input Failure		2-13
Magnetometer Failure		2-13
2.8 Checklists		2-14
<hr/>		
3 – PRIMARY FLIGHT DISPLAY		
3.1 Introduction		3-1
3.2 Backlighting		3-5
3.3 Softkey Function		3-7
3.4 Flight Instruments		3-11
Airspeed Indicator		3-11
Speed Indication		3-11
Speed Ranges		3-11
Airspeed Trend Vector		3-11
Vspeed References		3-11
True Airspeed Box		3-11
Attitude Indicator		3-12
Pitch Indication		3-12
Roll Indication		3-13
Slip/Skid Indication		3-13
Altimeter		3-14
Altitude Values		3-14
Altitude Reference Bug		3-14
Altitude Trend Vector		3-14
Altitude Reference Box		3-14
Barometric Setting Box		3-14
Altitude Alerting		3-15
Metric Display		3-16
Vertical Deviation/Glideslope Indicator		3-16
Marker Beacon Annunciations		3-16
Vertical Speed Indicator		3-17
Vertical Speed Pointer		3-17
Horizontal Situation Indicator		3-18
360° HSI		3-18
Arc HSI		3-19
Heading Indication		3-19
Turn Rate Indicator		3-20
Course Deviation Indicator		3-20

	Bearing Pointers and Information Windows	3-21		<i>Restore Defaults</i>	3-44
	DME Radio	3-22		Procedures Window	3-44
	ADF Radio	3-22		<i>Select Approach</i>	3-45
	Radio Tuning Window	3-23		<i>Select Arrival</i>	3-46
	Navigation Source	3-24		<i>Select Departure</i>	3-47
3.5	Communication, Navigation & Surveillance	3-25		<i>Activate Approach</i>	3-47
	Communication Frequency Window	3-25	3.7	Reversionary Mode	3-49
	Navigation Frequency Window	3-25			
	Navigation Status Bar	3-26	3.8	Alerts and Annunciations	3-51
	Transponder Status Bar	3-27		Alerts Window	3-51
	Transponder Operation	3-27		Annunciation Window	3-51
	Transponder Code Selection	3-27			
3.6	Supplemental Flight Data	3-29	<hr/> 4 – VHF NAV/COM <hr/>		
	Outside Air Temperature Box	3-29	4.1	Interface Introduction	4-1
	System Time Box	3-29		Overview	4-1
	Traffic Annunciation	3-29		Windows and Fields	4-2
	Inset Map	3-30		Radio Selection	4-2
	Working with Menus	3-32		Color Code	4-3
	Auxiliary Window Keys	3-33		Tuning Box	4-3
	Auxiliary Windows	3-33		Frequency Toggle Arrow	4-3
	Timer/References Window	3-33		Radio Status Indications	4-3
	<i>Generic Timer</i>	3-34		Controls	4-4
	<i>Vspeeds and Vspeed Bug Status</i>	3-34	4.2	COM Frequency Window	4-5
	<i>Flight ID</i>	3-35		Overview	4-5
	Nearest Airports Window	3-35		Volume	4-5
	Direct-to Window	3-36		Automatic Squelch	4-5
	<i>Direct-to Navigation</i>	3-36		Switching the Tuning Box Between COM	
	Flight Plan Window	3-38		Radios	4-6
	<i>Create New Flight Plan</i>	3-39		Manually Tuning a COM Frequency	4-6
	<i>Activate Leg</i>	3-39		Toggle COM Frequencies	4-6
	<i>Store Flight Plan</i>	3-39		Selecting a COM Radio	4-6
	<i>Invert Flight Plan</i>	3-40		Radio Status	4-7
	<i>Delete Flight Plan</i>	3-40		Emergency Frequency (121.500 MHz)	4-7
	<i>Load Departure</i>	3-41		Quickly Tuning and Activating 121.500 MHz	4-7
	<i>Load Arrival</i>	3-42		Stuck Microphone	4-7
	<i>Load Approach</i>	3-42	4.3	NAV Frequency Window	4-9
	<i>Remove Departure</i>	3-43		Overview	4-9
	<i>Remove Arrival</i>	3-43		Volume	4-9
	<i>Remove Approach</i>	3-43		Morse Code Identifier	4-9
	<i>Closest Point of FPL</i>	3-43			
	<i>Change Fields</i>	3-44			

	Switching the Tuning Box Between NAV Radios	4-10
	Manually Tuning a NAV Frequency	4-10
	Toggleing NAV Frequencies	4-10
	Selecting a NAV Radio	4-11
4.4	Optional NAV Radios	4-13
	Overview	4-13
	ADF/DME Tuning Window	4-13
	Tuning and Toggleing ADF Frequencies	4-14
	Selecting the ADF Receiver Mode	4-15
	Adjusting ADF Receiver Volume	4-15
	Selecting the DME Transceiver Tuning Mode	4-16
4.5	Frequency Auto-tuning	4-17
	Overview	4-17
	Loading Frequencies from the PFD	4-17
	Loading Frequencies from the MFD	4-18
	WPT – Airport Information Page	4-18
	WPT – VOR Information Page	4-20
	NRST – Nearest Airports Page	4-21
	NRST – Nearest VOR Page	4-22
	NRST – Nearest Frequencies Page	4-23
	Auto-Tuning Upon Approach Activation (NAV Frequencies)	4-24

5 – TRANSPONDER

5.1	Interface Description	5-1
	Transponder Softkeys	5-1
	Transponder Status Bar	5-1
5.2	Operation	5-3
	Mode Selection	5-3
	Ground Mode (Automatic)	5-3
	Standby Mode (Manual)	5-3
	ON Mode (Manual)	5-3
	Altitude Mode (Automatic or Manual)	5-4
	Reply Status	5-4
	Code Selection	5-4
	Entering a Code	5-4
	VFR Code	5-5
	Important Codes	5-5
	IDENT Function	5-5

5.3	Mode-S Transponder Functionality	5-7
	Traffic Information Service (TIS)	5-7

6A – AUDIO PANEL

6A.1	Introduction	6A-1
6A.2	Unit Description	6A-2
	Front Panel Controls	6A-2
	Transceivers	6A-4
	Mono/Stereo Headsets	6A-4
	Unmuted/Unswitched Inputs	6A-4
6A.3	Unit Operation	6A-5
	Power-up and Fail-safe Operation	6A-5
	Power-up	6A-5
	Fail-safe Operation	6A-5
	Selecting and Deselecting Keys	6A-5
	Lighting	6A-5
	Transceiver Keys	6A-5
	COM MIC Keys	6A-5
	COM Keys	6A-5
	Transmitting	6A-6
	COM Swap	6A-6
	Optional COM Muting	6A-6
	COM Muting on Receive	6A-6
	COM Muting on Transmit	6A-6
	Telephone Interface	6A-6
	Split COM Function	6A-6
	PA Function	6A-7
	Speaker	6A-7
	Marker Beacon Receiver	6A-7
	Description and Operation	6A-7
	Marker Beacon Signal Sensitivity	6A-7
	Navigation Radios	6A-9
	Entertainment Inputs	6A-9
	MUSIC 1	6A-9
	<i>MUSIC 1 Muting</i>	6A-9
	MUSIC 2	6A-9
	Intercom System (ICS) Isolation	6A-10
	PILOT Mode	6A-10
	COPILOT Mode	6A-10
	CREW Mode	6A-10
	ALL Mode	6A-10

Volume/Squelch Control	6A-12
Intercom VOL/SQ	6A-12
<i>Intercom Volume Control</i>	6A-12
Intercom Squelch Control	6A-13
Volume Adjustments	6A-13
Master Avionics Squelch (MASQ)	6A-13
Digital Clearance Recorder with Playback Capability	6A-14
Reversionary Mode	6A-15
Cockpit Voice Recorder Interface	6A-15
Dual Panel Operation	6A-15
Simultaneous COM Transmission	6A-15

6B – AUDIO PANEL SUPPLEMENT

Headset Jacks & Keyed ICS Operation	6B-1
Transceivers	6B-1
Aircraft Radios	6B-1
Aircraft Entertainment Inputs	6B-1
Cockpit Voice Recorder (CVR)	6B-1
Dual Panel Operation	6B-1

7 – ENGINE INDICATION SYSTEM

7.1 Introduction	7-1
Engine Page	7-1
Lean Page	7-1
System Page	7-1
7.2 Engine Indication System	7-1
ENGINE Page	7-1
Manifold Pressure Gauge (Constant Speed)	7-2
Tachometer	7-2
Fuel Flow GPH Indicator	7-2
CHT Indicator	7-2
Oil Temperature Indicator	7-2
Oil Pressure Indicator	7-2
Ammeter	7-2
Voltmeter	7-2
Fuel Qty GAL Indicator	7-2
<i>Standard Tanks</i>	7-3
<i>Long Range Tanks</i>	7-3
LEAN Page	7-4
Cylinder Select	7-4

Assist	7-4
SYSTEM Page	7-6

8A – MULTI FUNCTION DISPLAY

8A.1 Introduction	8A-1
Description	8A-1
MFD Power-up	8A-1
Splash Screen Information	8A-1
MFD Backlighting	8A-2
MFD Softkeys	8A-2
Electronic Checklists (optional)	8A-2
Displaying the Checklist Page	8A-2
Selecting a Procedure Group	8A-3
Selecting a Checklist within the Procedure Group	8A-3
Selecting a Checklist Item	8A-3
Removing the Check mark from a Checklist Item	8A-3
Advancing to the Next Checklist	8A-3
One-Button Access to Emergency Procedures	8A-4
Exiting the Checklist Page	8A-4
MFD Page Groups	8A-6
Working With Menus	8A-7
8A.2 Navigation Map Page	8A-9
Navigation Map Page Operations	8A-11
Changing the Map Orientation	8A-11
Selecting a Map Range	8A-11
Using the Auto Zoom Feature	8A-11
Identifying Aviation Map Data	8A-12
Decluttering the Map	8A-13
Map Panning	8A-14
Displaying Topographic Data on the Navigation Map Page	8A-16
Displaying Terrain Information on the Navigation Map Page	8A-17
Displaying Traffic on the Navigation Map Page	8A-17
MFD Data Bar	8A-18
Navigation Map Page Options Menu	8A-18
Map Setup	8A-18
Map Group Options	8A-18
<i>Orientation</i>	8A-19
<i>Auto Zoom</i>	8A-20
<i>Land Data</i>	8A-20
<i>Track Vector</i>	8A-21

TABLE OF CONTENTS

	<i>Wind Vector</i>	8A-21		Create a New Flight Plan	8A-48
	<i>Nav Range Ring</i>	8A-22		Activate Leg	8A-49
	<i>Topo Data</i>	8A-22		Store Flight Plan	8A-50
	<i>Topo Range</i>	8A-23		Invert Flight Plan	8A-51
	<i>Terrain Data</i>	8A-23		Delete a Waypoint	8A-51
	<i>Obstacle Data</i>	8A-24		Load a Departure	8A-52
	<i>Fuel Range Ring (Fuel RNG) (RSV)</i>	8A-24		Load an Arrival	8A-53
	Traffic Group	8A-25		Load an Approach	8A-54
	Aviation Group Options	8A-27		Remove a Departure, Arrival, or Approach	8A-55
	Land Group Options	8A-29		Closest Point of Flight Plan Feature	8A-55
	Measure Bearing/Distance	8A-31		Change Fields	8A-56
8A.3	Traffic Map Page	8A-33		Restore Defaults	8A-56
	TIS Symbology	8A-34		Shortcuts	8A-56
	Traffic Map Page Operations	8A-34		Flight Plan Catalog Page	8A-57
	Power-Up Test	8A-34		Flight Plan Catalog Page Operations	8A-57
	Changing the Map Range	8A-34		Activate a Flight Plan	8A-58
	Operating Mode	8A-35		Stop Navigating a Flight Plan	8A-58
	TIS Audio Alert	8A-35		Invert and Activate a Flight Plan	8A-59
	TIS Traffic Status	8A-36		Create a New Flight Plan	8A-59
	<i>Traffic Banner</i>	8A-36		Copy a Flight Plan	8A-60
8A.4	Terrain Proximity Page	8A-37		Delete a Flight Plan	8A-60
	Terrain Proximity Page Operations	8A-38		Delete All Flight Plans	8A-61
	Displaying Obstacle Data	8A-39		Sort By Comment/Number	8A-61
	<i>Obstacle Shapes</i>	8A-39		Point-n-Shoot Flight Plan Creation Feature	8A-62
	<i>Navigation Map Display Conditions</i>	8A-39		Vertical Navigation (VNAV) Page	8A-63
8A.5	Direct-to Navigation	8A-41		VNAV Page Menu Options	8A-64
	Direct-to Navigation Operations	8A-42	8A.7	Procedures	8A-65
	Selecting a Direct-to Waypoint	8A-42		Arrivals and Departures	8A-65
	<i>Selecting a Direct-to Destination by Facility or</i>			Approaches	8A-66
	<i>City Name</i>	8A-42		G1000 Navigational Guidance for	
	<i>Selecting a Direct-to Destination from the</i>			Approaches	8A-66
	<i>Active Flight Plan</i>	8A-43		Selecting Approaches	8A-67
	<i>Selecting the Nearest Airport as a Direct-to</i>		8A.8	Waypoint Page Group	8A-71
	<i>Destination</i>	8A-44		Page Selection	8A-71
	<i>Shortcuts</i>	8A-44		Airport Information Page (INFO)	8A-72
	Canceling Direct-to Navigation	8A-45		Airport Information Page Operations	8A-72
	Specifying a Course to a Waypoint	8A-45		Airport Runway Information Field	8A-74
8A.6	Flight Plans	8A-47		Airport Frequency Information Field	8A-75
	Active Flight Plan Page	8A-47		Airport Frequency Descriptions	8A-76
	Active Flight Plan Page Options	8A-47		Airport Information Page Options	8A-76
				Departure Information Page (DP)	8A-77
				Arrival Information Page (STAR)	8A-78

Approach Information Page 8A-80
Intersection Information Page 8A-82
 Intersection Information Page Operations 8A-83
NDB Information Page 8A-84
 NDB Information Page Operations 8A-85
 NDB Information Page Options 8A-86
VOR Information Page 8A-87
 VOR Information Page Operations 8A-88
 VOR Information Page Options 8A-89
User Waypoint Information Page 8A-90
 User Waypoint Information Page Operations 8A-91
Creating User Waypoints 8A-92
 Creating User Waypoints from the Navigation
 Map Page 8A-93
Modifying User Waypoints 8A-94
User Waypoint Information Page Options 8A-95

8A.9 Auxiliary Page Group 8A-99
Trip Planning Page 8A-99
 Trip Planning 8A-100
 Fuel Planning 8A-101
 Other Statistics 8A-102
 Utility Page 8A-103
 Utility Page Operations 8A-104
 Trip Statistics 8A-105
 Scheduler 8A-105
GPS Status Page 8A-106
 Satellite Status Page 8A-107
 RAIM Prediction 8A-109
 GPS Signal Strength 8A-111
System Setup Page 8A-112
Pilot Profiles 8A-113
Selecting the Active Profile 8A-113
Creating a Profile 8A-113
Deleting a Profile 8A-114
Renaming a Profile 8A-114
 Date/Time 8A-115
 Display Units 8A-115
 Map Datums 8A-116
 Airspace Alerts 8A-117
 Arrival Alerts 8A-118
 Audio Alerts 8A-119
 MFD Data Bar Fields 8A-119
 GPS CDI 8A-120

COM Configuration 8A-120
 Nearest APT 8A-121
System Status Page 8A-122
8A.10 Nearest Page Group 8A-123
Navigating to a Nearest Waypoint 8A-124
 Nearest Airports Page 8A-126
 The Nearest Airports Page displays the following
 information for a selected airport: 8A-126
Nearest Intersections Page 8A-128
Nearest NDB Page 8A-129
Nearest VOR Page 8A-130
Nearest User Waypoint Page 8A-132
Nearest Frequencies Page 8A-133
Nearest Airspaces Page 8A-135
 Airspace Alerts Box 8A-136
 Airspaces 8A-137

8B – MFD OPTIONAL INTERFACE ADDENDUM

8B.1 Introduction 8B-1
8B.2 Stormscope 8B-3
Introduction 8B-3
**Displaying Stormscope Lightning Data on
 the Navigation Map Page** 8B-3
 Stormscope Lightning Data Display Range 8B-3
 Customized Display 8B-5
 Removing Stormscope Lightning Data 8B-6
Stormscope Page 8B-6
 Stormscope Page Operations 8B-8
8B.3 Traffic Advisory Systems 8B-9
Introduction 8B-9
**L-3 SKYWATCH Traffic Advisory System
 (Model SKY497)** 8B-9
Power-up Self-Test 8B-9
User-Initiated Test 8B-11
Voice Announcements 8B-11
*Switching Between Standby and Various
 Operating Modes* 8B-11
Altitude Display Mode 8B-11
*Displaying and Configuring TAS Traffic on
 the Navigation Map Page* 8B-11

<i>Monitoring Traffic</i>	8B-12
<i>Failure Response</i>	8B-12
<i>Description of Traffic Advisory Criteria</i>	8B-12
<i>Traffic Map Page</i>	8B-13
<i>Traffic Map Page Display Range</i>	8B-13

8B.4 GDL 69/69A Weather and Digital

Audio Entertainment	8B-17
Introduction	8B-17
Radio IDs	8B-17
Activating XM Radio Services	8B-17
GDL 69 Weather	8B-19
Introduction	8B-19
Displaying Weather Data on the Navigation Map Page	8B-20
Navigation Map Page Weather Control Softkeys	8B-20
Navigation Map Setup Options	8B-22
Displaying Weather Data on the Nearest Pages	8B-23
Displaying METAR and TAF information on the Airport Information Page	8B-24
Displaying Weather Data on the AUX - Trip Planning Page Map	8B-26
Displaying Weather Data on the Flight Plan Page Maps	8B-26
Displaying Weather on the Weather Data Link Page	8B-27
Weather Data Link Page Softkeys	8B-28
NEXRAD Abnormalities	8B-28
NEXRAD Limitations	8B-28
NEXRAD Intensity	8B-28
Weather Data Link Page Setup	8B-34
Map Panning Information-Weather Data Link Page	8B-34
Weather Product Symbols	8B-36
Weather Product Age	8B-37
GDL 69A – Digital Audio Entertainment	8B-38
Introduction	8B-38
XM Information Page	8B-38
Data and Audio Radio ID	8B-39
Service Class	8B-39
Weather Products Window	8B-39
XM Radio Page	8B-40
XM Radio Softkeys	8B-40

Active Channel	8B-40
Channels	8B-40
Volume	8B-41
Presets	8B-41
GDL 69 Troubleshooting	8B-42

9 – ANNUNCIATIONS AND ALERTS

9.1 Introduction	9-1
9.2 Alert Level Definitions	9-3
9.3 DA40 Aircraft Alerts	9-5
WARNING Alerts	9-5
CAUTION Alerts	9-5
Message Advisory Alerts	9-6
Voice Alerts	9-6
9.4 G1000 System Annunciations	9-7
9.5 G1000 System Message Advisories	9-11
MFD & PFD Message Advisories	9-11
MFD & PFD Message Advisories (Cont.)	9-12
Database Message Advisories	9-12
GMA 1347 Message Advisories	9-13
GIA 63 Message Advisories	9-14
GEA 71 Message Advisories	9-16
GTX 33 Message Advisories	9-16
GRS 77 Message Advisories	9-17
GMU 44 Message Advisories	9-17
GDC 74A Message Advisories	9-18
Miscellaneous Message Advisories	9-18

APPENDICES

Appendix A: SD Card Use	A-1
Aviation Database	A-1
Terrain Database	A-1
Appendix B: Abbreviations, Acronyms & NAV Terms	B-1
Appendix C: Questions & Answers	C-1
Appendix D: G1000 Map Datums	D-1

Appendix E: General TIS Information E-1

- Introduction..... E-1
- TIS vs. TCAS E-1
- TIS Limitations E-1

Appendix F: Map Symbols F-1

- Airport F-1
- NAVAIDs..... F-1
- Basemap F-1
- Traffic F-2
- Lightning Strike..... F-2
- Miscellaneous..... F-2
- Line Symbols F-3
- Obstacle database F-4
- Terrain Color Chart..... F-4

Appendix G: G1000 System Specifications G-1

- GDU 1040 MFD & PFDG-1
- GMA 1347 Audio PanelG-1
- GIA 63 Integrated Avionics Units.....G-1
- GDC 74A Air Data ComputerG-2
- GTX 33 Mode S TransponderG-2
- GEA 71 Engine/Airframe Unit.....G-2
- GDL 69/69A Weather Data LinkG-2
- GRS 77 AHRSG-3

INDEX

Index I-1

LIST OF FIGURES

Figure 2.2.1	Basic G1000 System	2-4	Figure 3.4.20	HSI with Bearing Information.....	3-21
Figure 2.2.2	G1000 Optional Features	2-5	Figure 3.4.21	BRG1 Information Window	3-21
Figure 2.3.1	PFD/MFD Controls.....	2-6	Figure 3.4.22	BRG2 Information Window	3-21
Figure 2.5.1	PFD Initialization	2-9	Figure 3.4.23	DME Information Window	3-22
Figure 2.5.2	MFD Power-up Page	2-10	Figure 3.4.24	ADF Selected in BRG2 Information Window	3-22
Figure 2.7.1	G1000 Normal Mode.....	2-11	Figure 3.4.25	Radio Tuning Window	3-23
Figure 2.7.2	G1000 Reversionary Mode (Failed PFD).....	2-12	Figure 3.4.26	DME Selection Window	3-23
Figure 2.8.1	Sample Checklist.....	2-15	Figure 3.4.27	GPS INTEG, GPS SUSP, LOC1 and VOR2	3-24
Figure 3.1.1	Default PFD Information	3-2	Figure 3.5.1	Communication Frequency Window	3-25
Figure 3.1.2	Additional PFD Information.....	3-3	Figure 3.5.2	Navigation Frequency Window.....	3-25
Figure 3.2.1	PFD Setup Menu Window.....	3-5	Figure 3.5.3	Navigation Status Bar	3-26
Figure 3.3.1	Softkey On	3-7	Figure 3.5.4	Navigation Status Bar Message	3-26
Figure 3.3.2	Softkey Off.....	3-7	Figure 3.5.5	Transponder Status Bar.....	3-27
Figure 3.3.3	PFD Softkey Flow Chart – 1.....	3-9	Figure 3.6.1	Outside Air Temperature Box.....	3-29
Figure 3.3.4	PFD Softkey Flow Chart – 2.....	3-9	Figure 3.6.2	System Time Box.....	3-29
Figure 3.3.5	PFD Softkey Flow Chart – 3.....	3-9	Figure 3.6.3	Traffic Annunciation	3-29
Figure 3.3.6	PFD Softkey Flow Chart – 4.....	3-10	Figure 3.6.4	Inset Map	3-30
Figure 3.4.1	Airspeed Indicator.....	3-11	Figure 3.6.5	Page Menu – No Options with NRST Window Displayed	3-32
Figure 3.4.2	Red Pointer at V_{NE}	3-11	Figure 3.6.6	Page Menu – Options with FPL Window Displayed	3-32
Figure 3.4.3	Attitude Indicator.....	3-12	Figure 3.6.7	Timer Status Prompts.....	3-34
Figure 3.4.4	Attitude Indicator (Nose High).....	3-13	Figure 3.6.8	Timer/References Window	3-34
Figure 3.4.5	Attitude Indicator (Nose Low).....	3-13	Figure 3.6.9	Flight ID Field	3-35
Figure 3.4.6	Altimeter	3-14	Figure 3.6.10	Nearest Airports Window.....	3-35
Figure 3.4.7	Colors Associated with the Altitude Alerter	3-15	Figure 3.6.11	Airport Information Window	3-36
Figure 3.4.8	Altimeter within 1,000 ft of Reference Altitude.....	3-15	Figure 3.6.12	Direct-to Window	3-37
Figure 3.4.9	Altimeter within 200 ft of Reference Altitude.....	3-15	Figure 3.6.13	Cancel Direct-To NAV	3-38
Figure 3.4.10	Altimeter (Metric).....	3-16	Figure 3.6.14	Flight Plan Window.....	3-38
Figure 3.4.11	Marker Beacon and Vertical Deviation.....	3-16	Figure 3.6.15	Activate Leg Confirmation Window	3-39
Figure 3.4.12	Vertical Speed Indicator	3-17	Figure 3.6.16	Page Options Menu	3-39
Figure 3.4.13	Horizontal Situation Indicator	3-18	Figure 3.6.17	Invert Flight Plan Confirmation Window	3-40
Figure 3.4.14	Arc HSI.....	3-19	Figure 3.6.18	Delete Flight Plan Confirmation Window	3-40
Figure 3.4.15	Current Heading.....	3-19	Figure 3.6.19	Departure.....	3-41
Figure 3.4.16	Selected Heading Box	3-19	Figure 3.6.20	Departure Runway	3-41
Figure 3.4.17	Selected Course Box	3-19	Figure 3.6.21	Departure Transition.....	3-41
Figure 3.4.18	Turn Rate Indicator and Trend Vector.....	3-20	Figure 3.6.22	Select Departure Window	3-41
Figure 3.4.19	Arc CDI and Compass Rose CDI.....	3-20	Figure 3.6.23	Closest Point of FPL Window.....	3-43

Figure 3.6.24	Change Fields on Flight Plan.....	3-44	Figure 4.5.3	MFD Page Group Icon.....	4-18
Figure 3.6.25	Procedures Window	3-44	Figure 4.5.4	WPT – Airport Information Page (INFO)	4-18
Figure 3.6.26	Approach	3-45	Figure 4.5.5	WPT – Airport Information Page (APR).....	4-19
Figure 3.6.27	Approach Transition	3-45	Figure 4.5.6	WPT – VOR Information Page	4-20
Figure 3.6.28	Select Approach Window.....	3-45	Figure 4.5.7	NRST – Nearest Airport Page	4-21
Figure 3.6.29	Arrival	3-46	Figure 4.5.8	NRST – Nearest VOR Page.....	4-22
Figure 3.6.30	Arrival Transition.....	3-46	Figure 4.5.9	NRST – Nearest Frequencies Page	4-23
Figure 3.6.31	Arrival Runway	3-46	Figure 4.5.10	Selecting an Approach	4-24
Figure 3.6.32	Select Arrival Window	3-46	Figure 4.5.11	Loading an Approach.....	4-24
Figure 3.7.1	PFD Reversionary Mode.....	3-49	Figure 4.5.12	Activating an Approach	4-25
Figure 3.8.1	Alerts Window.....	3-51	Figure 5.1.1	Top-level Softkeys	5-1
Figure 3.8.2	Annunciation Window	3-51	Figure 5.1.2	Mode Selection Softkeys.....	5-1
Figure 4.1.1	G1000 VHF NAV/COM Interface (PFD)	4-1	Figure 5.1.3	Code Selection Softkeys.....	5-1
Figure 4.1.2	Frequency Fields	4-2	Figure 5.2.1	Ground Mode	5-3
Figure 4.1.3	Frequency Toggle Arrow and Tuning Box	4-3	Figure 5.2.2	Standby Mode	5-3
Figure 4.1.4	NAV/COM Controls.....	4-4	Figure 5.2.3	ON Mode	5-3
Figure 4.2.1	COM Volume Level.....	4-5	Figure 5.2.4	Altitude Mode	5-4
Figure 4.2.2	Overriding Automatic Squelch	4-5	Figure 5.2.5	Reply Indication.....	5-4
Figure 4.2.3	Switching COM Radios	4-6	Figure 5.2.6	Entering a Code	5-4
Figure 4.2.4	Toggling COM Frequencies.....	4-6	Figure 5.2.7	IDENT Indication	5-5
Figure 4.2.5	Selecting a COM Radio.....	4-6	Figure 6A.2.1	Front Panel Controls	6A-3
Figure 4.2.6	Radio Status Indications	4-7	Figure 6A.3.1	Transceivers	6A-5
Figure 4.2.7	COM Tuning Failure.....	4-7	Figure 6A.3.2	Marker Beacon	6A-7
Figure 4.2.8	Quickly Tuning 121.500 MHz	4-7	Figure 6A.3.3	Marker Beacon Signal Indicator Lights on the PFD.....	6A-8
Figure 4.2.9	Stuck COM Microphone Alert.....	4-7	Figure 6A.3.4	Navigation Radios.....	6A-9
Figure 4.3.1	NAV Volume Level.....	4-9	Figure 6A.3.5	ICS Isolation Keys.....	6A-10
Figure 4.3.2	ID Indication	4-9	Figure 6A.3.6	Volume/Squelch Control	6A-12
Figure 4.3.3	Morse Code Identifier Audio	4-9	Figure 6A.3.7	Playback	6A-14
Figure 4.3.4	Switching NAV Radios	4-10	Figure 6A.3.8	Reversionary Mode Button	6A-15
Figure 4.3.5	Toggling NAV Frequencies.....	4-10	Figure 6A.3.9	Dual G1000 Audio Panels (GMA 1347)	6A-17
Figure 4.3.6	Selecting a NAV Radio.....	4-11	Figure 6B.1.1	G1000 Audio Panel (GMA 1347).....	6B-1
Figure 4.4.1	ADF/DME Tuning Window	4-13	Figure 7.2.1	ENGINE Page (DA40 Constant Speed)	7-3
Figure 4.4.2	Entering ADF Standby Frequencies	4-14	Figure 7.2.2	ENGINE Page (DA40 Fixed Pitch).....	7-3
Figure 4.4.3	Toggling ADF Frequencies	4-14	Figure 7.2.3	LEAN Page (DA40 Constant Speed).....	7-5
Figure 4.4.4	Selecting ADF Receiver Mode.....	4-15	Figure 7.2.4	LEAN Page (DA40 Fixed Pitch).....	7-5
Figure 4.4.5	Adjusting ADF Receiver Volume	4-15	Figure 7.2.5	SYSTEM Page (DA40 Constant Speed)	7-7
Figure 4.4.6	Selecting DME Tuning Mode	4-16	Figure 7.2.6	SYSTEM Page (DA40 Fixed Pitch).....	7-7
Figure 4.5.1	Loading Frequencies	4-17	Figure 8A.1.1	MFD Splash Screen	8A-1
Figure 4.5.2	Nearest Airports Window (PFD).....	4-17			

LIST OF FIGURES

Figure 8A.1.2	Checklist Page (typical).....	8A-4	Figure 8A.6.15	Delete Flight Plan Confirmation	8A-58
Figure 8A.1.3	MFD Softkeys.....	8A-5	Figure 8A.6.16	Vertical Navigation (VNAV) Page	8A-63
Figure 8A.1.4	Page Group Window	8A-6	Figure 8A.6.17	Approaching VNAV Profile Message (PFD)	8A-64
Figure 8A.1.5	Page Title Window.....	8A-6	Figure 8A.6.18	Approaching Target Altitude Message (PFD)	8A-64
Figure 8A.1.6	Menu with Options	8A-7	Figure 8A.7.1	Procedures Page.....	8A-65
Figure 8A.1.7	Menu with No Options	8A-7	Figure 8A.7.2	Selecting an Approach Procedure	8A-68
Figure 8A.2.1	Navigation Map Page (not all features shown).....	8A-9	Figure 8A.7.3	Selecting an Approach Transition	8A-68
Figure 8A.2.2	Map Range.....	8A-11	Figure 8A.7.4	Activating an Approach Procedure.....	8A-69
Figure 8A.2.3	Map Panning.....	8A-15	Figure 8A.8.1	Airport Information Page.....	8A-71
Figure 8A.2.4	Topography Range	8A-16	Figure 8A.8.2	Waypoint Facility or City Location.....	8A-73
Figure 8A.2.5	MFD Data Bar (default)	8A-18	Figure 8A.8.3	Runway Information Field.....	8A-74
Figure 8A.2.5	Map Group Setup Options.....	8A-18	Figure 8A.8.4	Frequency Information Field	8A-75
Figure 8A.2.6	Traffic Group Options.....	8A-25	Figure 8A.8.5	Airport Information Page Menu	8A-76
Figure 8A.2.7	Aviation Group Options.....	8A-28	Figure 8A.8.6	Departure Page Menu.....	8A-77
Figure 8A.2.8	Land Group Options.....	8A-30	Figure 8A.8.7	Arrival Page Menu.....	8A-78
Figure 8A.2.9	Measuring Bearing and Distance	8A-32	Figure 8A.8.8	Approach Page Menu	8A-81
Figure 8A.3.1	Traffic Map Page	8A-33	Figure 8A.8.9	Intersection Information Page	8A-82
Figure 8A.4.1	Terrain Proximity Page	8A-37	Figure 8A.8.10	NDB Information Page.....	8A-84
Figure 8A.4.2	Terrain Scale	8A-38	Figure 8A.8.11	NDB Page Menu.....	8A-86
Figure 8A.5.1	Direct-to Page	8A-41	Figure 8A.8.12	VOR Information Page	8A-87
Figure 8A.5.2	Flight Plan Waypoint Direct-to	8A-43	Figure 8A.8.13	VOR Page Menu	8A-89
Figure 8A.5.3	Nearest Airport Direct-to	8A-44	Figure 8A.8.14	User WPT Information Page.....	8A-90
Figure 8A.5.4	Canceling Direct-to Navigation	8A-45	Figure 8A.8.15	User WPT Page Menu	8A-95
Figure 8A.5.5	Manual Course Direct-to	8A-45	Figure 8A.9.1	Trip Planning Page	8A-99
Figure 8A.6.1	Active Flight Plan Page	8A-48	Figure 8A.9.2	Trip Planning Page Menu.....	8A-100
Figure 8A.6.2	New Flight Plan.....	8A-48	Figure 8A.9.3	Utility Page	8A-103
Figure 8A.6.3	Activate Flight Plan Leg Confirmation	8A-49	Figure 8A.9.4	Utility Page Menu.....	8A-103
Figure 8A.6.4	Store Flight Plan Confirmation	8A-50	Figure 8A.9.5	GPS Status Page.....	8A-106
Figure 8A.6.5	Invert Flight Plan	8A-51	Figure 8A.9.6	GPS Status Page Menu	8A-106
Figure 8A.6.6	Invert Flight Plan Confirmation	8A-51	Figure 8A.9.7	RAIM.....	8A-110
Figure 8A.6.7	Remove Waypoint Confirmation	8A-51	Figure 8A.9.8	GPS Signal Strength.....	8A-111
Figure 8A.6.8	Loading Departure Options	8A-52	Figure 8A.9.9	System Setup Page.....	8A-112
Figure 8A.6.9	Selecting an Arrival	8A-53	Figure 8A.9.10	System Status Page.....	8A-122
Figure 8A.6.10	Flight Plan with Loaded Approach.....	8A-54	Figure 8A.10.1	Nearest Airports Page	8A-124
Figure 8A.6.11	Removing an Approach	8A-55	Figure 8A.10.2	Direct-to from Nearest Airports Page.....	8A-125
Figure 8A.6.12	Flight Plan Catalog Page	8A-57	Figure 8A.10.3	APT, RNWY, FREQ, and APR Softkeys.....	8A-126
Figure 8A.6.13	Flight Plan Catalog Page Options	8A-57	Figure 8A.10.4	Nearest Intersections Page	8A-128
Figure 8A.6.14	Activate Stored Flight Plan Confirmation ..	8A-58			

Figure 8A.10.5	Nearest NDB Page	8A-129	Figure 8B.4.19	LRU Information Window	8B-42
Figure 8A.10.6	Nearest VOR Page	8A-130	Figure 9.1.1	G1000 Alerting System	9-1
Figure 8A.10.7	Nearest User Waypoints Page	8A-132	Figure 9.2.1	WARNING Softkey Annunciation	9-3
Figure 8A.10.8	Nearest Airspaces Page	8A-135	Figure 9.2.2	CAUTION Softkey Annunciation	9-3
Figure 8B.2.1	In-Flight Navigation Map Page Displaying Stormscope Lightning Data	8B-4	Figure 9.2.3	ADVISORY Softkey Annunciation	9-3
Figure 8B.2.2	Lightning Display Range Annunciation	8B-5	Figure 9.4.1	G1000 System Failure Annunciations	9-9
Figure 8B.2.3	Weather Group Options Menu	8B-5	Figure F.1	Terrain Color Chart	F-4
Figure 8B.2.4	Stormscope Page	8B-7			
Figure 8B.2.5	Stormscope Page Options Menu	8B-8			
Figure 8B.3.1	In-Flight Navigation Map Page Displaying TAS Traffic	8B-10			
Figure 8B.3.2	Traffic Group Options Menu	8B-12			
Figure 8B.3.3	In-Flight Traffic Map Page	8B-14			
Figure 8B.3.4	Traffic Map Page (Test Mode)	8B-15			
Figure 8B.3.5	Traffic Map Page Standby Display	8B-16			
Figure 8B.4.1	XM Information Page	8B-18			
Figure 8B.4.2	Navigation Map Page Displaying NEXRAD Weather	8B-21			
Figure 8B.4.3	Map Setup Options	8B-22			
Figure 8B.4.4	Weather Display on the Nearest NDB Page	8B-23			
Figure 8B.4.5	METAR and TAF Text Displayed on the Airport (Weather) Information Page	8B-25			
Figure 8B.4.6	AUX - Trip Planning Page Map Displaying NEXRAD Weather	8B-26			
Figure 8B.4.7	Stored Flight Plan Page Map Displaying Weather Data	8B-26			
Figure 8B.4.8	Weather Data Link Page	8B-27			
Figure 8B.4.9	Weather Legends Window	8B-31			
Figure 8B.4.10	Weather Data Link Page Menu	8B-34			
Figure 8B.4.11	Panning on the Weather Data Link Page	8B-35			
Figure 8B.4.12	Weather Product Symbols	8B-36			
Figure 8B.4.13	XM Information Page	8B-38			
Figure 8B.4.14	XM Radio Page	8B-39			
Figure 8B.4.15	Channels Page	8B-40			
Figure 8B.4.16	Direct Channel Selection	8B-41			
Figure 8B.4.17	Categories List	8B-41			
Figure 8B.4.18	Volume Control	8B-41			

This page intentionally left blank.

Table 6A.3.1	Marker Beacon Signal Characteristics.....	6A-8
Table 6A.3.2	ICS Isolation Mode Transitions	6A-10
Table 6A.3.3	ICS Isolation Modes & Telephone Distribution.....	6A-11
Table 6A.3.5	Transitioning from Auto to Manual Squelch Mode	6A-12
Table 8A.2.1	Map Declutter Levels	8A-13
Table 8B.4.1	Advisory Messages.....	8B-43



WARNING: Navigation and terrain separation must NOT be predicated upon the use of the terrain function. The G1000 Terrain Proximity feature is NOT intended to be used as a primary reference for terrain avoidance and does not relieve the pilot from the responsibility of being aware of surroundings during flight. The Terrain Proximity feature is only to be used as an aid for terrain avoidance and is not certified for use in applications requiring a certified terrain awareness system. Terrain data is obtained from third party sources. Garmin is not able to independently verify the accuracy of the terrain data.



WARNING: The displayed minimum safe altitudes (MSAs) are only advisory in nature and should not be relied upon as the sole source of obstacle and terrain avoidance information. Always refer to current aeronautical charts for appropriate minimum clearance altitudes.



WARNING: The Garmin G1000, as installed in Diamond DA40 aircraft, has a very high degree of functional integrity. However, the pilot must recognize that providing monitoring and/or self-test capability for all conceivable system failures is not practical. Although unlikely, it may be possible for erroneous operation to occur without a fault indication shown by the G1000. It is thus the responsibility of the pilot to detect such an occurrence by means of cross-checking with all redundant or correlated information available in the cockpit.



WARNING: For safety reasons, G1000 operational procedures must be learned on the ground.



WARNING: The altitude calculated by G1000 GPS receivers is geometric height above Mean Sea Level and could vary significantly from the altitude displayed by pressure altimeters, such as the GDC 74A Air Data Computer, or other altimeters in aircraft. GPS altitude should never be used for vertical navigation. Always use pressure altitude displayed by the G1000 PFD or other pressure altimeters in aircraft.



WARNING: The Jeppesen database used in the G1000 system must be updated regularly in order to ensure that its information remains current. Updates are released every 28 days. A database information packet is included in the G1000 package. Pilots using an outdated database do so entirely at their own risk.



WARNING: The basemap (land and water data) must not be used for navigation, but rather only for non-navigational situational awareness. Any basemap indication should be compared with other navigation sources.



CAUTION: The illustrations in this guide are only examples. Never use the G1000 to attempt to penetrate a thunderstorm. Both the FAA Advisory Circular, Subject: Thunderstorms, and the Airman's Information Manual (AIM) recommend avoiding "by at least 20 miles any thunderstorm identified as severe or giving an intense radar echo."



CAUTION: The United States government operates the Global Positioning System and is solely responsible for its accuracy and maintenance. The GPS system is subject to changes which could affect the accuracy and performance of all GPS equipment. Portions of the Garmin G1000 utilize GPS as a precision electronic NAVigation AID (NAVAID). Therefore, as with all NAVAIDs, information presented by the G1000 can be misused or misinterpreted and, therefore, become unsafe.



CAUTION: To reduce the risk of unsafe operation, carefully review and understand all aspects of the G1000 Pilot's Guide documentation and the G1000 Flight Manual Supplement. Thoroughly practice basic operation prior to actual use. During flight operations, carefully compare indications from the G1000 to all available navigation sources, including the information from other NAVAIDs, visual sightings, charts, etc. For safety purposes, always resolve any discrepancies before continuing navigation.



CAUTION: The Garmin G1000 does not contain any user-serviceable parts. Repairs should only be made by an authorized Garmin service center. Unauthorized repairs or modifications could void both the warranty and the pilot's authority to operate this device under FAA/FCC regulations.



CAUTION: The GDU 1040 PFD and MFD displays use a lens coated with a special anti-reflective coating that is very sensitive to skin oils, waxes, and abrasive cleaners. **CLEANERS CONTAINING AMMONIA WILL HARM THE ANTI-REFLECTIVE COATING.** It is very important to clean the lens using a clean, lint-free cloth and an eyeglass lens cleaner that is specified as safe for anti-reflective coatings.



NOTE: All visual depictions contained within this document, including screen images of the G1000 panel and displays, are subject to change and may not reflect the most current G1000 system. Depictions of equipment may differ slightly from the actual equipment.



NOTE: This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.



NOTE: There are several atmospheric phenomena in addition to nearby thunderstorms that can cause isolated discharge points in the strike display mode. However, clusters of two or more discharge points in the strike display mode do indicate thunderstorm activity if these points reappear after the screen has been cleared. Avoid the clusters to avoid the thunderstorms. In the cell display mode, even a single discharge point may represent thunderstorm activity and should therefore be avoided.

LIMITED WARRANTY

This Garmin product is warranted to be free from defects in materials or workmanship for two years from the date of purchase. Within this period, Garmin will, at its sole option, repair or replace any components that fail in normal use. Such repairs or replacement will be made at no charge to the customer for parts and labor, provided that the customer shall be responsible for any transportation cost. This warranty does not cover failures due to abuse, misuse, accident, or unauthorized alterations or repairs.

THE WARRANTIES AND REMEDIES CONTAINED HEREIN ARE EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES EXPRESS OR IMPLIED OR STATUTORY, INCLUDING ANY LIABILITY ARISING UNDER ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, STATUTORY OR OTHERWISE. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, WHICH MAY VARY FROM STATE TO STATE.

IN NO EVENT SHALL GARMIN BE LIABLE FOR ANY INCIDENTAL, SPECIAL, INDIRECT OR CONSEQUENTIAL DAMAGES, WHETHER RESULTING FROM THE USE, MISUSE, OR INABILITY TO USE THIS PRODUCT OR FROM DEFECTS IN THE PRODUCT. Some states do not allow the exclusion of incidental or consequential damages, so the above limitations may not apply to you.

Garmin retains the exclusive right to repair or replace the unit or software, or to offer a full refund of the purchase price, at its sole discretion. SUCH REMEDY SHALL BE YOUR SOLE AND EXCLUSIVE REMEDY FOR ANY BREACH OF WARRANTY.

To obtain warranty service, contact your local Garmin Authorized Service Center. For assistance in locating a Service Center near you, visit the Garmin Web site at "<http://www.garmin.com>" or contact Garmin Customer Service at 800-800-1020.

G1000TM

*pilot's guide index
for the Diamond DA40*

A

- Acquisition squitter 5-3, 5-7
- Activate approach 3-47
- Activate a flight plan 8A-49, 8A-58
- Activation instructions 8B-17
- Active 4-5, 4-9
- Active Channel 8B-40
- Active Channel list 8B-41
- Active field 4-2, 4-3, 4-6, 4-10, 4-17, 4-25
- Active flight plan 8A-27, 8A-43
- Active flight plan page 8A-47
- Active flight plan page options 8A-47
- Active frequency 4-2, 4-3, 4-7
- ADF 3-22, 4-1, 4-13
 - ADF mode 4-13, 4-15
 - ANT mode 4-15
 - BFO mode 4-15
 - Volume 4-13, 4-15
- ADF/DME tuning window 4-13
- ADF tuning 3-23
- Advisory 3-51, 9-3
- Advisory messages 8B-43
- Age stamp 8B-37
- AHRS 2-2, 2-13
- Air-initiated long replies 5-7
- Airborne 5-4
- Airborne status determination 5-7
- Aircraft alerts 9-5
- Aircraft heading data 8B-11
- AIRMET 8B-30
- Airport frequency 8A-127
- Airport frequency information field 8A-73
- Airport information 4-18, 4-19
- Airport Information page 8B-19, 8B-24
- Airport information window 3-36
- Airport runway information field 8A-74
- Airport symbols 8A-12
- Airspace 8A-12
- Airspace boundaries 8A-28
- Airspace messages 8A-137
- Airspeed indicator 3-11
- Airspeed trend vector 3-11
- Air Data Computer (ADC) 2-1, 2-2
- Alerting system 9-1
- Alerts window 3-51, 9-1
- Alert levels 9-3
- Altimeter 3-14
- Altitude alerting 3-15
- Altitude buffer 8A-118
- Altitude display mode 8B-11
- Altitude display mode indicator 8B-15
- Altitude mode 5-3, 5-4
- Altitude reference bug 3-14
- Altitude reporting 5-7
- Altitude trend vector 3-14
- ALT indication 5-4
- ALT mode 3-27
- ALT softkey 5-3, 5-4
- Ammeter 7-2
- Annunciation window 3-51, 9-1
- Annunciator light 4-9, 6A-5
- Approach C-1, C-2, C-3, C-4
- Approach(es) 8A-66
- Approach activation 4-17, 4-18, 4-24
- Approach information page 8A-75
- Approach markers
 - Inner 6A-7, 6A-12
 - Lamp color 6A-8
 - Middle 6A-7
 - Outer 6A-7, 6A-12
 - Signal augmentation 6A-7
- Approach page menu 8A-81
- APR softkey 4-19, 8A-80
- Arc HSI 3-19
- ARINC 429 2-2
- ARINC leg types 8A-66
- Arrivals and departures 8A-65
- Arrival alerts 8A-119
- Arrival page menu 8A-78
- ARTCC 4-23, 8A-133
- ASSIST softkey 7-4, 7-10
- ATC 5-5, 5-7
- ATC guidance 8B-1
- Attitude Heading and Reference System (AHRS) 2-2
- Attitude indicator 3-12
- Audio alerts 8A-119
- Audio entertainment 8B-17
- Audio panel 4-3, 4-6, 4-9
- Audio panel controls
 - ADF 6A-9
 - AUX 6A-9
 - COM1 6A-4, 6A-5
 - COM1 MIC 6A-2
 - COM2 6A-4, 6A-5
 - COM2 MIC 6A-2, 6A-4
 - COM3 6A-4, 6A-5
 - COM3 MIC 6A-2, 6A-4
 - COM 1/2 6A-5, 6A-6
 - COPLT 6A-10
 - DME 6A-9
 - NAV1 6A-9
 - NAV2 6A-9
 - SPKR 6A-7
 - SQ 6A-12, 6A-13
 - TEL 6A-5
 - VOL 6A-12, 6A-13
- Auto-tuning 4-24
- Automated airborne determination 3-27
- Automatic 5-3, 5-4
- Automatic sequencing C-2, C-3
- Automatic squelch 4-4, 4-5
- Auto zoom 8A-11, 8A-20
- AUX 6B-1
- Auxiliary page group 8A-99
- Auxiliary window 3-33
- AUX – Trip planning map 8B-19
- AUX Page group 4-5
- Aviation database A-1
- Aviation group options 8A-27
- Aviation map data 8A-12

B

- Backlighting 2-11, 3-5, 8A-1
- BACK softkey 5-1

Barometric setting box 3-14
 Bearing pointers 3-21
 Bearing source 3-21
 Bendix/King KTA870
 TAS/KMH880 8B-9
 BKSP softkey 5-4

C

Canceling direct-to navigation 8A-45
 Category 8B-41
 CATGRY softkey 8B-40
 Caution xvi, xvii, 3-51, 9-3
 CDI scale 8A-120, C-3
 CDI scaling 8A-68
 CDI softkey 4-11
 Cell data 8B-3
 Cell movement status 8B-21
 Change fields 3-44, 8A-56
 Changing the map scale 8A-34
 Channel list 8B-39
 Channels 8B-40
 Checklists 2-14
 CHNL softkey 8B-40
 City forecast data 8B-19
 CLEAR softkey 8B-8
 Closest point of flight plan 3-43,
 8A-55
 Cockpit Voice Recorder 6A-15, 6B-1
 Code field 5-1, 5-4, 5-5
 Code selection 5-4
 Code selection softkeys 5-1, 5-4
 CODE softkey 5-1, 5-4
 Color 4-1, 4-3, 4-5, 4-9
 Cyan 4-3
 Gray 4-3
 Green 4-3, 4-6, 4-11
 Magenta 4-11
 White 4-3, 4-7, 4-11
 Color code 4-1, 4-9
 COM1 4-2, 4-5, 4-6
 COM1 MIC 4-2, 4-6
 COM2 4-2, 4-5, 4-6
 COM2 MIC 4-2, 4-6

COM3 6B-1
 COM3 MIC 6B-1
 Communication frequency
 window 3-25
 COM channel spacing 8A-121
 COM configuration 8A-120
 COM frequency window 4-1
 COM knob 4-3, 4-4, 4-5, 4-6, 4-10
 COM swap 6A-6
 Controls 2-6, 4-1, 4-4
 Convective SIGMET 8B-30
 Copyright i
 Copy a flight plan 8A-59
 COUNTY softkey 8B-33
 County Warnings 8B-19
 Course 3-19
 Course Deviation Indicator (CDI) 3-20
 Create a new flight plan 8A-59
 Create a new waypoint 8A-97
 Creating a flight plan 3-39
 Creating a profile 8A-113
 Customized display 8B-5
 CVR 6A-15
 CYCLONE softkey 8B-33
 Cylinder Head Temperature
 (CHT) 7-2, 7-4
 CYL SLCT softkey 7-4

D

Database 2-10, A-1
 Data and audio radio ID 8B-39
 Date/Time box 8A-115
 dBZ 8B-28
 Declutter 3-31
 Decluttering 8A-13
 Default power-on settings 6A-5
 Delete 3-40
 Delete all flight plans 8A-61
 Delete all user waypoints 8A-95
 Delete a flight plan 8A-60
 Delete a user waypoint 8A-97
 Delete a waypoint 8A-51
 Deleting a profile 8A-114

Density altitude 8A-102
 Departure procedures 8A-77
 Departure timer 8A-104
 Description 5-1
 Digital audio entertainment 8B-38
 Digit softkeys 5-4, 5-5
 Dilution of Precision 8A-108
 Direct-to 3-36
 Direct-to navigation 8A-41
 Direct-to page 8A-41
 Direct-to waypoint 8A-42
 Display backup 2-12, 3-49
 Display interpretation 8B-12
 Display units 8A-115
 DME 3-22, 4-1, 4-13
 HOLD mode 4-16
 NAV1 mode 4-16
 NAV2 mode 4-16
 Tuning mode 4-13, 4-16
 DME tuning 3-23
 DONE softkey 8B-40
 DP softkey 8A-77
 Dual audio panel 6B-1
 Dual CDU failure 4-7

E

ECHO TOP 8B-29
 Edit a flight plan 8A-49, 8A-61
 Emergency code 5-5
 Emergency frequency 4-7
 ADF 4-14
 Temporary Flight Restrictions 8B-19
 Engine Indication System (EIS) 7-1
 ENGINE softkey 7-1, 8A-2
 Entering a code 5-4
 Entertainment inputs 6A-9
 Estimated Position Error 8A-108
 Exhaust Gas Temperature
 (EGT) 7-4

F

Failure response 8B-12
 FCC xvii

Figure numbering format 1-3
 FIS-B 8B-19
 FIS weather information 8B-19
 Flight ID 3-35
 Flight ID reporting 5-7
 Flight plan 3-38
 Flight planning 8A-47
 Flight planning maps 8B-19
 Flight plan catalog page 8A-57
 Flight plan catalog page
 operations 8A-57
 Flight plan catalog page
 options 8A-57
 Flight timer 8A-104
 Freezing levels 8B-19
 Frequency list 8A-75
 Frequency toggle arrow 4-1, 4-3, 4-7
 Frequency toggle key 4-3, 4-4, 4-5,
 4-6, 4-7, 4-9, 4-10, 4-17
 FREQ softkey 4-21, 4-22
 Front matter 1-1, 1-2
 FRZ LVL softkey 8B-32
 FSS 4-23
 FSS information 8A-133
 FSS softkey 4-23
 Fuel flow indicator 7-2
 Fuel flow totalizer 7-6
 Fuel planning 8A-101
 Fuel quantity 7-2, 7-6
 Fuel range ring 8A-24
 Fuel remaining 7-6
 Fuel reserve ring 3-30
 Fuel used 7-6

G

Gallons Per Hour (GPH) 7-2
 GDL 69 8B-17
 GDL 69 Troubleshooting 8B-42
 GDL 69 Weather Interface 8B-19
 Generic timer 3-34, 8A-104
 GND indication 5-3
 GND mode 3-27
 GPS xvi, C-1

GPS mode 4-3, 4-11
 GPS receiver 2-13, 8A-111
 Graphical cloud tops 8B-19
 Graphical echo tops 8B-19
 Graphical lightning strikes 8B-19
 Graphical METAR data 8B-19
 Graphical NEXRAD data 8B-19
 Graphical wind data 8B-19
 Gray 4-3
 Ground clutter 8B-28
 Ground mode 5-3
 GTX 33 5-1, 5-7

H

Heading 3-19, 8B-11
 Headset(s) 6A-4, 6A-9, 6A-15
 Stereo 6A-4
 Headset jacks 6B-1
 Hijack code 5-5
 HI SENS 6A-7
 Horizontal Situation Indicator
 (HSI) 3-18, 4-2, 4-3, 4-11
 Hurricane Track 8B-19

I

ICAO 5-5
 Icing 8B-31
 ID 4-3, 4-4, 4-9
 Ident 3-27
 Identification codes 5-4
 Identification code (previous) 5-5
 IDENT function 5-5
 IDENT softkey 5-3, 5-5
 IDNT indication 5-5
 IFR conditions 8B-31
 Index 1-3
 INFO softkey 4-18, 8B-40
 Inset map 3-30
 INTEG 3-24
 Intercom system (ICS) 6A-6, 6A-9, 6A-
 10, 6A-12, 6A-13
 Interrogation 3-27, 5-3, 5-4, 5-7
 Intruder aircraft 8B-9

Invert 3-40
 Invert and activate a flight plan 8A-59
 Invert flight plan 8A-51

J

Jeppesen xvi, A-1
 Joystick (bezel) 2-6

K

Key 2-7, 2-8
 Key(s)
 CLR 2-6
 COM Frequency Toggle 2-6
 Direct-to 2-6
 ENT 2-6
 FPL 2-6
 MENU 2-6
 NAV Frequency Toggle 2-6
 PROC 2-6
 Keyed ICS operation 6B-1
 kHz 4-4, 4-5, 4-6, 4-9, 4-10
 Knob(s)
 ALT 2-6
 COM 2-6
 COM VOL/SQ 2-6
 CRS/BARO 2-6
 FMS 2-6
 HDG 2-6
 NAV 2-6
 NAV VOL/ID 2-6

L

L-3 SKYWATCH HP Traffic Advisory
 System 8B-9
 Land data 8A-20
 Land group options 8A-29
 LEAN softkey 7-4
 LED 6A-5
 LEGEND softkey 8B-31
 Level-2 5-7
 Lightning 8B-7
 Liquid crystal displays 8A-1

List of figures 1-1, 1-3
 List of tables 1-1, 1-3
 Loading departure options 8A-52
 Loading frequencies (MFD) 4-18
 Loading frequencies (PFD) 4-17
 Load approach 3-42, 8A-54
 Load arrival 3-42, 8A-53
 Load departure 3-41, 8A-52
 LOC1 4-2, 4-11
 LOC2 4-2, 4-11
 Localized SIGMET 8B-30
 Long-range planning 8B-1
 Long range tanks 7-3
 Loss of communication code 5-5
 LRU information window 8B-42

M

Magnetic variation 8A-87
 Magnetometer 2-1, 2-2
 Manifold pressure 7-2
 Manual 5-3, 5-4
 Manual sequencing C-2
 Manual squelch (MAN SQ) 6A-12, 6A-13
 Override 6A-13
 Manual tuning 4-6, 4-10
 Map datums 8A-116, D-1
 Map group options 8A-18
 Map orientation 3-30, 8A-11
 Map page group 8B-6
 Map panning 8A-14, 8B-34
 Map scale 8A-11
 Map setup 8A-18
 Map symbols F-1
 Marker beacon 6A-7
 Marker beacon annunciation 3-16
 MASQ 6A-9
 Measuring bearing/distance 8A-31
 Menus 3-32, 8A-7
 MENU key 4-20, 4-25
 Message advisories 9-11, 9-12, 9-13, 9-15, 9-16, 9-17, 9-18, 9-19
 METAR 8B-24

Metric display 3-16
 MFD 4-1, 4-2, 4-3, 4-5, 4-6, 4-10, 4-17, 4-18
 MFD data bar fields 8A-119
 MFD page group 4-18
 MFD softkeys 8A-2
 MHz 4-4, 4-5, 4-6, 4-9, 4-10
 Military interceptor operations code 5-5
 Minimum runway length 8A-121
 Missed approach C-2
 Missed approach procedure C-3
 MKR/MUTE 6A-7
 Mode A 3-27, 5-1, 5-3
 Mode C 3-27, 5-1, 5-3
 Mode field 5-1, 5-3, 5-4, 5-5
 Mode S 5-1, 5-3, 5-7, E-1, E-2
 Mode Select 5-7
 Mode selection 5-3
 Mode selection softkeys 5-1, 5-3, 5-4
 Mode S transponder 3-27
 Monitoring traffic 8B-12
 MORE WX softkey 8B-32
 Morse code identifier 4-3, 4-4, 4-9, 4-15
 Mountain obscuration 8B-31
 Multi-site long reply 5-7
 MUSIC #1 6A-9, 6A-10
 MUSIC #2 6A-9, 6A-10
 Muting
 COM 6A-6, 6A-14
 MUSIC #1 6A-9

N

National Weather Service 8B-33
 NAV1 4-2, 4-6, 4-9, 4-10, 4-11, 6A-9
 NAV2 4-2, 4-9, 4-10, 4-11, 6A-9
 NAVAIDs xvi, xvii
 Navigation frequency window 3-25
 Navigation map page 8A-9, 8B-3
 Navigation map page options menu 8A-18
 Navigation modes 4-11

Navigation source 3-24
 Navigation status bar 3-26, 4-2, 4-5
 NAV frequency window 4-1
 NAV knob 4-3, 4-4, 4-10
 NAV range ring 8A-22
 NDB 4-15
 NDB information page options 8A-86
 NDB page menu 8A-86
 Nearest airports 3-35, 4-17, 4-21, 8A-44, 8A-121
 Nearest airports page 8A-126
 Nearest frequencies 4-23
 Nearest pages 8B-19
 Nearest page group 8A-123
 NEXRAD 8B-19
 NEXRAD abnormalities 8B-28
 NEXRAD intensity 8B-28
 NEXRAD limitations 8B-28
 NEXRAD softkey 8B-20
 Normal operating mode 2-11

O

OBS 3-24
 Obstacles 8B-3
 OBS mode C-2
 Oil pressure indicator 7-2,
 Oil temperature indicator 7-2
 ON indication 5-3
 ON mode 5-3
 Operating mode 8B-11
 Operation 5-1, 6A-5, 6A-15
 Operational xvi
 Optional NAV radios 4-13
 Outside Air Temperature (OAT) 2-2, 3-29

P

PA 6A-7
 Page groups 8A-6
 Page numbering format 1-2
 Pan map 3-32
 Part numbers 1-1
 Part number content 1-2

Performance G-1, G-3
 PFD 4-1, 4-2, 4-3, 4-6, 4-7, 4-10,
 4-17, 5-1, 6A-6, 6A-7, 6A-12,
 6B-1
 PILOT 6A-10
 Pitch indication 3-12
 PLAY 6A-14
 Point-n-shoot flight plan 8A-62
 Power 8A-34, 8A-104
 Power-up 2-9
 Power-up test 8A-34, 8B-9
 Presets 8B-41
 PRESETS softkey 8B-40
 Pressure altitude 5-4
 Primary Flight Display (PFD) 3-1
 Primary NAV frequency 4-17, 4-19,
 4-24, 4-25
 Procedures 8A-65
 Procedures page 8A-65
 Procedures window 3-44
 PROC key 4-24, 4-25
 Proximity advisories 8B-12
 PTT 6A-7

Q

Quickly tuning 121.500 MHz 4-7

R

Radar coverage 8B-29
 Radio IDs 8B-17
 Radio selection 4-1, 4-2
 RADIO softkey 8B-38, 8B-40
 Radio status indications 4-1
 Radio tuning window 3-23
 RAIM C-1
 Range 8B-7
 Recently used VORs 4-20
 Recorded COM signals 6A-14
 Registered Trademark i
 Remove approach 3-43
 Remove arrival 3-43
 Remove departure 3-43
 Remove departure, arrival, or

approach 8A-55
 Removing Stormscope lightning
 data 8B-6
 Rename a user waypoint 8A-97
 Renaming a profile 8A-114
 Replies 5-3, 5-4, 5-7
 Restore defaults 3-44, 8A-56
 Reversionary mode 2-12, 3-49, 6A-2
 Revision levels 1-1
 Revolutions Per Minute (RPM) 7-2
 Roll indication 3-13
 Runway PCL frequency 4-19
 RX 4-3, 4-5, 4-7
 Ryan 9900B and 9900BX TAS 8B-9
 R indication 5-4

S

Satellites C-1
 Scheduler 8A-105
 SD card 2-8, 2-14, A-1
 Section numbering format 1-2
 Secure Digital 2-8
 Selected NAV radio 4-18, 4-24, 4-25
 Selecting a COM radio 4-6
 Selecting a NAV radio 4-11
 Select approach 3-45, 8A-54, 8A-67
 Select arrival 3-46
 Select departure 3-47, 8A-52
 Service class 8B-39
 Severe thunderstorm 8B-33
 SFC softkey 8B-32
 Short squitter 5-7
 SIGMET 8B-30
 SIGMETs/AIRMETs 8B-19
 Single magenta arrow 4-11
 SKYWATCH 8B-9
 Slip/Skid indicator 3-13
 Softkey
 ENGINE 8A-2
 SYSTEM softkey 8A-2
 Softkeys 3-7
 Sort by comment/number 8A-61
 Speaker 6A-7, 6A-15

Special Position Identification
 (SPI) 3-27
 Specifications G-1, G-2
 Specifying a course to a
 waypoint 8A-45
 Speed indication 3-11
 Speed ranges 3-11
 Spell N Find 8A-42
 SPKR 6A-7
 Standard instrument departures 8A-52
 Standard tanks 7-3
 Standby annunciation 8B-16
 Standby field 4-2, 4-3, 4-4, 4-18,
 4-24, 4-25
 Standby frequency 4-2, 4-3, 4-6,
 4-10, 4-17, 4-23
 ADF 4-13
 Standby mode 3-27, 5-1, 5-3, 5-5
 Standby softkey 8B-16
 STAR softkey 8A-78
 STBY indication 5-3
 STBY softkey 5-3
 Stop navigating a flight plan 8A-58
 Storing a flight plan 3-39, 8A-50
 Storing the binder 1-3
 Stormscope 8B-3
 Stormscope page 8B-6
 Stormscope page operations 8B-8
 Storm cells 8B-30
 Strike data 8B-3
 Strike location 8B-29
 Stuck COM microphone 4-7
 Alert 4-7
 Surface analysis including city
 forecasts 8B-19
 Surface winds 8B-31
 Surveillance identifier 5-7
 SUSP 3-24
 Symbols F-1
 System annunciations 9-1, 9-7
 SYSTEM softkey 7-6
 System status page 8B-42
 System time box 3-29, 5-1

System time format 8A-115

T

Table numbering format 1-3

Table of contents 1-1, 1-3

Tab numbers 1-1

Tachometer 7-2

TAF 8B-24

TAS Traffic 8B-11

TCAS 5-7, 8B-9

TCAS-equipped aircraft 5-7

TCAS symbology 8A-34

TEL 6A-5, 6B-1

Temporary Flight Restrictions 8B-19

Terrain xvi, 3-31, A-1, F-4

Terrain data 8A-23, 8B-3

Terrain data scale 8A-23, 8A-24

Terrain information 8A-17

Terrain proximity page 8A-37

Terrain proximity page
operations 8A-39

Terrain separation xvi

Test mode annunciation 8B-15

Test softkey 8B-15

Textual METAR data 8B-19

Textual Terminal Aerodrome
Forecasts 8B-19

Thunderstorm penetration 8B-1

Timer/References 3-33

Time offset 8A-115

TIS 5-7, 8A-17, E-1

TIS interface 8B-9

TIS symbology 8A-34

TIS Traffic Advisory 8A-35

TIS traffic status 8A-36

Toggling ADF frequencies 4-14

Toggling COM frequencies 4-6

Toggling NAV frequencies 4-10

Top-level softkeys 5-1

Topo 3-31

Topographic information 8A-16

Topo data 8A-22

Topo scale box 8A-23

Total flight hours 7-6

Tracking intruder aircraft 8B-9

Track vector 8A-21

Trademark i

Traffic 3-31, 8A-17, E-1

Traffic advisories 8B-12

Traffic advisory criteria 8B-12

Traffic Advisory Systems 8B-9

Traffic banner 8A-36

Traffic group options 8A-25

Traffic information 5-7

Traffic Information Service (TIS) 3-29

Traffic label 8A-27

Traffic map page 8A-33, 8B-13

Traffic map page operations 8A-34

Traffic mode 8A-25

TRAFFIC softkey 8B-11

Traffic symbol 8A-26

Transceiver 4-5

Transponder-equipped aircraft 5-7

Transponder status bar 3-27, 5-1, 5-3,
5-4, 5-5

Trip planning operations 8A-100

True airspeed box 3-11

Tuning ADF frequencies 4-14

Tuning box 4-1

Turbulence 8B-31

Turn rate indicator 3-20

TX 4-3, 4-7

U

Update rate 8B-29

User waypoint information
page 8A-94

Using the binder 1-2

V

Vertical deviation/Glideslope
indicator 3-16

Vertical Navigation (VNAV)
page 8A-63

Vertical navigation profile 8A-63

Vertical Speed Indicator (VSI) 3-17

Vertical speed pointer 3-17

VFR 3-27

VFR code 5-5

VHF 4-1, 4-5, 4-1

View recent user WPT list 8A-95

VLOC receiver 8A-68

Voice alerts 9-6

Voice announcements 8B-11

VOL/PUSH ID 4-4, 4-9

VOL/PUSH SQ 4-4, 4-5

Voltmeter 7-2

Volume 6A-6, 6A-12, 8B-41

Volume/squelch 6A-12

Volume level 4-4, 4-5, 4-9

ADF 4-13, 4-15

VOL softkey 8B-40

VOR 4-18, 4-20, 4-22

VOR/ILS approach 4-18, 4-25

VOR/LOC name identifier 4-11

VOR1 4-2, 4-11

VOR2 4-2, 4-11

VOR information 4-20

VOR list 8A-89

VOR page menu 8A-89

Vspeeds 3-34

Vspeed bug 3-34

Vspeed references 3-11

W

WARN 3-24

WARNING softkey 9-3

Warning 3-51, 6A-4

Warnings xvi, xvii

Warranty xviii

Waypoint facility or city
location vii, 8A-73

Waypoint identifier 8A-72

Waypoint page group 8A-71

Weather data link page 8B-19, 8B-27,
8B-31, 8B-34

Weather data link page softkeys 8B-28

Weather group options 8B-5

Weather group options menu 8B-5

Weather information 3-32
Weather legends window 8B-31
Weather products 8B-39
Weather product age 8B-37
Weather product symbols 8B-36
Wind shear 8B-30
WIND softkey 8B-33
Wind vector 8A-21
WPT – Weather information
 page 8B-19
WPT Page group. 8B-24
WSR-88D weather surveillance
 radar 8B-28
WX 4-23
WX-500 User's guide 8B-3
WX softkey 4-23, 8B-24

X

XM Information page 8B-38
XM Lightning 8B-19
XM LTNG softkey 8B-20
XM Radio 8B-17
XM Radio interface softkeys 8B-40
XM Radio page 8B-40
XM Satellite radio 8B-38
XM Weather 8B-17
XPDR softkey 5-1, 5-3, 5-4, 5-5

Z

Zoom range 3-31, 8B-6



Garmin International, Inc.
1200 East 151st Street
Olathe, KS 66062, U.S.A.
p: 913.397.8200 f: 913.397.8282

Garmin AT, Inc.
2345 Turner Road SE
Salem, OR 97302, U.S.A.
p: 503.391.3411 f: 503.364.2138

Garmin (Europe) Ltd.
Unit 5, The Quadrangle
Abbey Park Industrial Estate
Romsey, SO51 9DL, U.K.
p: 44/0870.8501241 f: 44/0870.8501251

Garmin Corporation
No. 68, Jangshu 2nd Road
Shijr, Taipei County, Taiwan
p: 886/2.2642.9199 f: 886/2.2642.9099

www.garmin.com