

# **G1000**<sup>TM</sup>

*pilot's guide introduction for  
Mooney M20M & M20R*

<b>Record of Revisions</b>			
<b>Revision</b>	<b>Date of Revision</b>	<b>Revision Page Range</b>	<b>Description</b>
A	5/26/05	-----	Initial release.

<b>Record of Current Part Numbers Associated with Binder K00-00175-01</b>	
190-00608-00	G1000 Pilot's Guide Introduction
190-00442-01	G1000 System Overview
190-00443-01	G1000 Primary Flight Display Pilot's Guide
190-00445-01	G1000 VHF NAV/COM Pilot's Guide
190-00382-00	G1000 Transponder Pilot's Guide
190-00378-02	G1000 Audio Panel Pilot's Guide
190-00446-01	G1000 Audio Panel Pilot's Guide Supplement
190-00447-01	G1000 Engine Indication System Pilot's Guide
190-00448-01	G1000 Multi Function Display Pilot's Guide
190-00470-00	G1000 Optional Equipment Pilot's Guide
190-00444-01	G1000 Annunciations and Alerts Pilot's Guide
190-00606-00	G1000 Pilot's Guide Appendices

Copyright © 2005 Garmin Ltd. or its subsidiaries. All rights reserved.

This manual reflects the operation of System Software version 0424.10 or later for Mooney M20M & M20R aircraft. Some differences in operation may be observed when comparing the information in this manual to earlier or later software versions.

Garmin International, Inc., 1200 East 151st Street, Olathe, Kansas 66062, U.S.A.  
Tel: 913/397.8200 Fax: 913/397.8282

Garmin AT, Inc., 2345 Turner Road SE, Salem, OR 97302, U.S.A.  
Tel: 503/391.3411 Fax 503/364.2138

Garmin (Europe) Ltd., Unit 5, The Quadrangle, Abbey Park Industrial Estate, Romsey, Hampshire S051 9DL, U.K.  
Tel: 44/0870.8501241 Fax: 44/0870.8501251

Garmin Corporation, No. 68, Jangshu 2nd Road, Shijr, Taipei County, Taiwan  
Tel: 886/02.2642.9199 Fax: 886/02.2642.9099

Web Site Address: [www.garmin.com](http://www.garmin.com)

Except as expressly provided herein, no part of this manual may be reproduced, copied, transmitted, disseminated, downloaded or stored in any storage medium, for any purpose without the express written permission of Garmin. Garmin hereby grants permission to download a single copy of this manual and of any revision to this manual onto a hard drive or other electronic storage medium to be viewed for personal use, provided that such electronic or printed copy of this manual or revision must contain the complete text of this copyright notice and provided further that any unauthorized commercial distribution of this manual or any revision hereto is strictly prohibited.

Garmin® is a registered trademark of Garmin Ltd. or its subsidiaries, and G1000™ is a trademark of Garmin Ltd. or its subsidiaries. These trademarks may not be used without the express permission of Garmin.

Bendix/King® and Honeywell® are registered trademarks of Honeywell International, Inc., Silver Crown Plus™ is a trademark of Honeywell International, Inc.; NavData® is a registered trademark of Jeppesen, Inc.; Stormscope® and Skywatch® are registered trademarks of L-3 Communications; TCAD® is a registered trademark of Ryan International, Inc.; and XM® is a registered trademark of XM Satellite Radio, Inc.

May 2005

Printed in the U.S.A.

## 1 - INTRODUCTION

<b>Copyright</b>	i
<b>Table of Contents</b>	ii
<b>Warnings and Cautions</b>	xiv
<b>Warranty</b>	xvi

## 2 – SYSTEM OVERVIEW

<b>2.1 System Description</b>	2-1
<b>2.2 Line Replaceable Units</b>	2-1
<b>2.4 Secure Digital Cards</b>	2-9
<b>2.5 System Power-up</b>	2-10
<b>2.6 Display Backlighting</b>	2-12
<b>2.7 System Operation</b>	2-12
<b>Normal Mode</b> .....	2-12
<b>Reversionary Mode</b> .....	2-13
<b>AHRS Operation</b> .....	2-14
GPS Input Failure	2-14
Air Data Input Failure	2-14
Magnetometer Failure	2-14

## 3 – PRIMARY FLIGHT DISPLAY

<b>3.1 Introduction</b>	3-1
<b>3.2 Backlighting</b>	3-5
<b>3.3 Softkey Function</b>	3-7
<b>3.4 Flight Instruments</b>	3-11
<b>Airspeed Indicator</b> .....	3-11
Speed Indication	3-11
Speed Ranges	3-11
Airspeed Trend Vector	3-11
Vspeed References	3-11
True Airspeed Box	3-11

<b>Attitude Indicator</b> .....	3-12
Pitch Indication	3-12
Roll Indication	3-13
Slip/Skid Indication	3-13
<b>Altimeter</b> .....	3-14
Altitude Values	3-14
Altitude Reference Bug	3-14
Altitude Trend Vector	3-14
Altitude Reference Box	3-14
Barometric Setting Box	3-14
Altitude Alerting	3-15
Metric Display	3-16
Vertical Deviation/Glideslope Indicator	3-16
Marker Beacon Annunciations	3-16
<b>Vertical Speed Indicator</b> .....	3-17
Vertical Speed Pointer	3-17
<b>Horizontal Situation Indicator</b> .....	3-18
360° HSI	3-18
ARC HSI	3-19
Heading Indication	3-19
Turn Rate Indicator	3-20
Course Deviation Indicator	3-20
Bearing Pointers and Information Windows	3-21
DME Radio	3-22
ADF Radio	3-22
Radio Tuning Window	3-23
Navigation Source	3-24

## 3.5 Communication, Navigation & Surveillance

<b>Communication Frequency Window</b>	3-25
<b>Navigation Frequency Window</b> .....	3-25
<b>Navigation Status Bar</b> .....	3-26
<b>Transponder Status Bar</b> .....	3-27
Transponder Operation	3-27
Transponder Code Selection	3-27

## 3.6 Supplemental Flight Data

<b>Outside Air Temperature Box</b> .....	3-29
<b>System Time Box</b> .....	3-29
<b>Traffic Annunciation</b> .....	3-29
<b>Inset Map</b> .....	3-30
<b>Working with Menus</b> .....	3-32
<b>Auxiliary Window Keys</b> .....	3-33
<b>Auxiliary Windows</b> .....	3-33

Timer/References Window	3-33
<i>Generic Timer</i>	3-34
<i>Vspeeds and Vspeed Bug Status</i>	3-34
<i>Flight ID</i>	3-35
Nearest Airports Window	3-35
Direct-to Window	3-36
<i>Direct-to Navigation</i>	3-36
Flight Plan Window	3-38
<i>Create New Flight Plan</i>	3-39
<i>Activate Leg</i>	3-39
<i>Store Flight Plan</i>	3-39
<i>Invert Flight Plan</i>	3-40
<i>Delete Flight Plan</i>	3-40
<i>Load Departure</i>	3-41
<i>Load Arrival</i>	3-42
<i>Load Approach</i>	3-42
<i>Remove Departure</i>	3-43
<i>Remove Arrival</i>	3-43
<i>Remove Approach</i>	3-43
<i>Closest Point of FPL</i>	3-43
<i>Change Fields</i>	3-44
<i>Restore Defaults</i>	3-44
Procedures Window	3-44
<i>Select Approach</i>	3-45
<i>Select Arrival</i>	3-46
<i>Select Departure</i>	3-47
<i>Activate Approach</i>	3-47
<i>Activate Vector-To-Final</i>	3-47
<b>3.7 Reversionary Mode</b>	3-49
<b>3.8 Alerts and Annunciations</b>	3-51
<b>Alerts Window</b> .....	3-51
<b>Annunciation Window</b> .....	3-51

**4 – VHF NAV/COM**

<b>4.1 VHF NAV/COM</b>	4-1
<b>Overview</b> .....	4-1
<b>Windows and Fields</b> .....	4-2
<b>Radio Selection</b> .....	4-2
<b>Tuning Box</b> .....	4-3
<b>Frequency Transfer Arrow</b> .....	4-3
<b>Radio Indicators</b> .....	4-3
<b>Controls</b> .....	4-4
<b>4.2 COM OPERATION</b>	4-5
<b>Frequency spacing</b> .....	4-5
<b>Volume</b> .....	4-5
<b>Automatic Squelch</b> .....	4-5
<b>Switching Between COM Radios</b> .....	4-6
<b>Manually Tuning a COM Frequency</b> .....	4-6
<b>Toggleing COM Frequencies</b> .....	4-6
<b>Selecting a COM Radio</b> .....	4-6
<b>Radio Status</b> .....	4-7
<b>Emergency Frequency (121.500 MHz)</b> .....	4-7
Quick-Tuning and Activating 121.500 MHz	4-7
<b>Stuck Microphone</b> .....	4-7
<b>4.3 NAV OPERATION</b>	4-9
<b>Frequency Range</b> .....	4-9
<b>Volume</b> .....	4-9
<b>Morse Code Identifier</b> .....	4-9
<b>Switching Between NAV Radios</b> .....	4-10
<b>Manually Tuning a NAV Frequency</b> .....	4-10
<b>Toggleing NAV Frequencies</b> .....	4-10
<b>Selecting a NAV Radio</b> .....	4-11
<b>4.4 Frequency Auto-tuning</b>	4-13
<b>Auto-tuning on the PFD</b> .....	4-13
<b>Auto-tuning on the MFD</b> .....	4-14
WPT – Information Page	4-14
WPT – VOR Information Page	4-16
NRST – Nearest Airports Page	4-17
NRST – Nearest VOR Page	4-18
NRST – Nearest Frequencies Page	4-19
<b>Auto-Tuning on Approach Activation (NAV Frequencies)</b> .....	4-20

**5 – TRANSPONDER**

<b>5.1 GTX 33 Transponder</b>	5-1
<b>Transponder Softkeys</b>	5-1
<b>Transponder Status Bar</b>	5-1
<b>Mode S Features</b>	5-2
<b>Traffic Information Service (TIS)</b>	5-2
<b>5.2 Operation</b>	5-3
<b>Mode Selection</b>	5-3
Ground Mode (Automatic)	5-3
Standby Mode (Manual)	5-3
Manual ON Mode	5-3
Altitude Mode (Automatic or Manual)	5-4
Reply Status	5-4
<b>Code Selection</b>	5-4
Entering a Code	5-4
VFR Code	5-5
Important Codes	5-5
<b>IDENT Function</b>	5-5

**6A – AUDIO PANEL**

<b>6A.1 Introduction</b>	6A-1
<b>6A.2 Unit Description</b>	6A-2
<b>Front Panel Controls</b>	6A-2
<b>transceivers</b>	6A-4
<b>Mono/Stereo Headsets</b>	6A-4
<b>Unmuted/Unswitched Inputs</b>	6A-4
<b>6A.3 Unit Operation</b>	6A-5
<b>Power-up and Fail-safe Operation</b>	6A-5
Power-up	6A-5
Fail-safe Operation	6A-5
<b>Selecting and Deselecting Keys</b>	6A-5
<b>Lighting</b>	6A-5
<b>Transceiver Keys</b>	6A-5
COM MIC Keys	6A-5
COM Keys	6A-5
Transmitting	6A-6
<b>COM Swap</b>	6A-6

<b>Optional COM Muting</b>	6A-6
COM Muting on Receive	6A-6
COM Muting on Transmit	6A-6
<b>Telephone Interface</b>	6A-6
<b>Split COM Function</b>	6A-6
<b>PA Function</b>	6A-7
<b>Speaker</b>	6A-7
<b>Marker Beacon Receiver</b>	6A-7
Description and Operation	6A-7
Marker Beacon Signal Sensitivity	6A-7
<b>Navigation Radios</b>	6A-9
<b>Entertainment Inputs</b>	6A-9
MUSIC 1	6A-9
<i>MUSIC 1 Muting</i>	6A-9
MUSIC 2	6A-9
<b>Intercom System (ICS) Isolation</b>	6A-10
PILOT Mode	6A-10
COPILOT Mode	6A-10
CREW Mode	6A-10
ALL Mode	6A-10
<b>Volume/Squelch Control</b>	6A-12
Intercom VOL/SQ	6A-12
<i>Intercom Volume Control</i>	6A-12
Intercom Squelch Control	6A-13
Volume Adjustments	6A-13
<b>Master Avionics Squelch (MASQ)</b>	6A-13
<b>Digital Clearance Recorder</b>	6A-14
<b>Reversionary Mode</b>	6A-15
<b>Cockpit Voice Recorder Interface</b>	6A-15
<b>Dual Panel Operation</b>	6A-15
Simultaneous COM Transmission	6A-15

**6B – AUDIO PANEL SUPPLEMENT**

<b>Headset Jacks &amp; Keyed ICS Operation</b>	6B-1
<b>Disabled Functions</b>	6B-1
<b>Cockpit Voice Recorder (CVR)</b>	6B-1
<b>Aircraft Entertainment Inputs</b>	6B-1
<b>Dual Panel Operation</b>	6B-1

**7 – ENGINE INDICATION SYSTEM**

**7.1 Engine** 7-1

- Manifold Pressure Gauge 7-1
- Tachometer 7-1
- Fuel Qty Indicator 7-1
- Fuel Flow GPH Indicator (Normally Aspirated) 7-2
- Fuel Pressure Indicator (Turbocharged) 7-2
- Oil Pressure Indicator 7-2
- Oil Temperature Indicator 7-2
- EGT Indicator (Normally Aspirated) 7-2
- TIT Indicator (Turbocharged) 7-2
- CHT Indicator 7-2
- Voltmeter 7-2
- Ammeter 7-2

**7.2 LEAN** 7-4

- Cylinder Select 7-4
- Lean Assist 7-4
- Normally Aspirated* 7-4

**7.3 System** 7-6

**7.4 Flap & Trim Indications** 7-8

- Rudder Trim Position Indicator 7-8
- Elevator Trim Position Indicator 7-8
- Flap Position Indicator 7-8

**8 – MULTI FUNCTION DISPLAY**

**8.1 Introduction** 8-1

- Description** ..... 8-1
- Optional Equipment** ..... 8-1
- MFD Power-up** ..... 8-2
- Splash Screen Information 8-2
- Reversionary Mode** ..... 8-2
- MFD Backlighting** ..... 8-2
- MFD Softkeys** ..... 8-2
- ELECTRONIC CHECKLISTS (optional)** ..... 8-3
- Displaying the Checklist Page 8-3
- Selecting a Procedure Group 8-3
- Selecting a Checklist within the Procedure Group 8-3
- Selecting a Checklist Item 8-3
- Removing the check mark from a checklist item 8-4

- Advancing to the Next Checklist 8-4
- One-Button Access to Emergency Procedures 8-4
- Exiting the Checklist Page 8-4

- MFD Page Groups** ..... 8-6
- Working With Menus** ..... 8-7

**8.2 Navigation Map Page** 8-9

- Navigation Map Page Procedures 8-10
- Changing the Map Orientation 8-11
- Selecting a Map Range* 8-11
- Using the Auto Zoom Feature* 8-11
- Map Panning* 8-12
- Displaying Topographic Data on the Navigation Map Page* 8-13
- Displaying Terrain Information* 8-13
- Displaying Traffic* 8-14
- Decluttering the Map* 8-14
- MFD Data Bar* 8-14
- The MFD Data Bar displays four, user-configurable fields which can display the following data:* 8-14

**Navigation Map Setup** ..... 8-16

- Navigation Map Page Options Menu* 8-16
- Restoring Defaults* 8-16
- Map Group Options:* 8-16
- Map Data 8-16
- Land Data* 8-16
- Track Vector* 8-17
- Wind Vector* 8-17
- Nav Range Ring* 8-17
- Topo Data* 8-18
- Topo Scale* 8-18
- Terrain Data* 8-19
- Obstacle Data* 8-19
- Fuel Range Ring (Fuel RNG) (RSV)* 8-20

- Weather Group 8-20
- Traffic Group 8-20
- Aviation Group Options* 8-23
- Land Group Options 8-24
- Option 2: Measure Bearing/Distance* 8-26
- Option 3: Clear Stormscope Lightning* 8-26

**8.3 Traffic Map Page** 8-29

- TIS Symbology** ..... 8-30
- Traffic Map Page Operations** ..... 8-30

# TABLE OF CONTENTS

Power-Up Test	8-30	Stop Navigating a Flight Plan	8-54
Changing the Map Range	8-30	Invert and Activate a Flight Plan	8-55
Operating Mode	8-31	Create a New Flight Plan	8-55
TIS Audio Alert	8-31	Copy a Flight Plan	8-56
TIS Traffic Status	8-32	Delete a Flight Plan	8-56
<i>Traffic Banner</i>	8-32	Delete All Flight Plans	8-57
<b>8.4 Terrain Proximity Page</b>	8-33	Sort By Comment/Number	8-57
<b>Terrain Proximity Page Operations</b> .....	8-34	Graphical Flight Planning Feature	8-58
<b>Displaying Obstacle Data</b> .....	8-35	<b>Vertical Navigation (VNAV) Page</b> .....	8-59
<i>Obstacle Shapes</i>	8-35	VNAV Page Menu Options	8-60
<i>Navigation Map Display Conditions</i>	8-35	<b>8.7 Procedures</b>	8-61
<b>8.5 Direct-to Navigation</b>	8-37	<b>Arrivals and Departures</b> .....	8-61
<b>Direct-to Navigation Operations</b> .....	8-38	<b>Approaches</b> .....	8-62
Selecting a Direct-to Waypoint	8-38	<b>G1000 Navigational Guidance for Approaches</b> .....	8-62
<i>Selecting a Direct-to Destination by Facility or City</i>		<b>Selecting Approaches</b> .....	8-63
<i>Name</i>	8-38	<b>8.8 Waypoint Page Group</b>	8-67
<i>Selecting a Direct-to Destination from the Active Flight Plan</i>		Page Selection	8-67
<i>Plan</i>	8-39	<b>AIRPORT Information Page (INFO)</b> .....	8-68
<i>Selecting the Nrst AP as a Direct-to Destination</i>	8-40	Airport Information Page Operations	8-68
<i>Shortcuts</i>	8-40	Airport Runway Information Field	8-70
Canceling Direct-to Navigation	8-41	<b>Airport Frequency Information Field</b> .....	8-71
Specifying a Course to a Waypoint	8-41	Airport Frequency Descriptions	8-72
<b>8.6 Flight Plans</b>	8-43	<b>AIRPORT Information Page Options</b> .....	8-72
<b>Active Flight Plan Page</b> .....	8-43	<b>Departure Information Page (DP)</b> .....	8-73
<b>Active Flight Plan Page Options</b> .....	8-43	<b>Arrival Information Page (STAR)</b> .....	8-74
Create a New Flight Plan	8-44	<b>Approach Information Page</b> .....	8-76
Activate Leg	8-45	<b>Intersection Information Page</b> .....	8-78
Store Flight Plan	8-46	Intersection Information Page Operations	8-79
Invert Flight Plan	8-47	<b>NDB Information Page</b> .....	8-80
Delete a Waypoint	8-47	NDB Information Page Operations	8-81
Load a Departure	8-48	NDB Information Page Options	8-82
Load an Arrival	8-49	<b>VOR Information Page</b> .....	8-83
Load an Approach	8-50	VOR Information Page Operations	8-84
Remove a Departure, Arrival, or Approach	8-51	VOR Information Page Options	8-85
Closest Point of Flight Plan Feature	8-51	<b>User Waypoint Information Page</b> .....	8-86
Change Fields	8-52	User Waypoint Information Page Operations	8-87
Restore Defaults	8-52	<b>Creating User Waypoints</b> .....	8-88
Shortcuts	8-52	Creating User Waypoints from the Nav Map Page	8-89
<b>Flight Plan Catalog Page</b> .....	8-53	<b>Modifying User Waypoints</b> .....	8-90
<b>Flight Plan Catalog Page Operations</b> .....	8-53	<b>User Waypoint Information Page Options</b> .....	8-91
Activate a Flight Plan	8-54		



<b>8.9 Auxiliary Page Group</b>	8-95
<b>Trip Planning Page</b> .....	8-95
Trip Planning	8-96
Fuel Planning	8-97
Other Statistics	8-98
Utility Page	8-99
Utility Page Operations	8-100
Trip Statistics	8-101
Scheduler	8-101
<b>GPS Status Page</b> .....	8-102
Satellite Status Page	8-103
RAIM Prediction	8-105
GPS Signal Strength	8-106
<b>System Setup Page</b> .....	8-107
<i>Pilot Profiles</i>	8-108
<i>Selecting the Active Profile</i>	8-108
<i>Creating a Profile</i>	8-108
<i>Deleting a Profile</i>	8-109
<i>Renaming a Profile</i>	8-109
Date/Time	8-110
Display Units	8-110
Map Datums	8-111
Airspace Alerts	8-112
Arrival Alerts	8-113
Audio Alerts	8-114
MFD Data Bar Fields	8-114
GPS CDI	8-115
COM Configuration	8-115
Nearest APT	8-116
<b>System Status Page</b> .....	8-117
<b>8.10 Nearest Page Group</b>	8-119
<b>Navigating to a Nearest Waypoint</b> .....	8-120
Nearest Airports Page	8-122
<b>Nearest Intersections Page</b> .....	8-124
<b>Nearest NDB Page</b> .....	8-125
<b>Nearest VOR Page</b> .....	8-126
<b>Nearest User Waypoint Page</b> .....	8-128
<b>Nearest Frequencies Page</b> .....	8-129
<b>Nearest Airspaces Page</b> .....	8-131
Airspace Alerts Box	8-132
Airspaces	8-133

## 9 – ANNUNCIATIONS AND ALERTS

<b>9.1 Introduction</b>	9-1
Alert Levels	9-2
<b>9.2 Mooney Aircraft Alerts</b>	9-3
Audio Alerts	9-3
Voice Alerts	9-3
<b>9.3 G1000 System Annunciations</b>	9-5
<b>9.4 G1000 System Message Advisories</b>	9-9
MFD & PFD Message Advisories	9-9
MFD & PFD Message Advisories (Cont.)	9-10
Database Message Advisories	9-10
GMA 1347 Message Advisories	9-11
GIA 63 Message Advisories	9-12
GEA 71 Message Advisories	9-14
GTX 33 Message Advisories	9-14
GRS 77 Message Advisories	9-15
GMU 44 Message Advisories	9-15
GDC 74A Message Advisories	9-16
Miscellaneous Message Advisories	9-16

## 10 – MFD OPTIONAL EQUIPMENT

<b>10.1 Introduction</b>	10-1
<b>10.2 Stormscope</b>	10-3
<b>Introduction</b> .....	10-3
<b>Displaying Stormscope Lightning Data on the Navigation Map Page</b> .....	10-3
Stormscope Lightning Data Display Range	10-3
Customized Display	10-5
Removing Stormscope Lightning Data	10-6
<b>Stormscope Page</b> .....	10-6
Stormscope Page Operations	10-8
<b>10.3 Traffic Advisory Systems</b>	10-9
<b>Introduction</b> .....	10-9
Traffic Map Page	10-10
<i>Monitoring Traffic</i>	10-10
<i>Failure Response</i>	10-10
<i>Description of Traffic Advisory Criteria</i>	10-10

<b>L-3 SKYWATCH Traffic Advisory Systems (SKY497 and SKY899)</b> .....	10-11
<i>Power-up Self-Test</i> .....	10-11
<i>Switching Between Standby and Various Operating Modes</i> .....	10-11
<i>Altitude Display Mode</i> .....	10-11
<i>Traffic Map Page Display Range</i> .....	10-12
<i>Skywatch Voice Announcements</i> .....	10-12
<b>Bendix/King KTA 870/KMH 880</b> .....	10-12
<i>User-Initiated Test</i> .....	10-12
<i>Switching Between Standby and Various Operating Modes</i> .....	10-12
<i>Altitude Display Mode</i> .....	10-13
<i>Traffic Map Page Display Range</i> .....	10-13
<b>Ryan 9900BX</b> .....	10-13

## 10.4 GDL 69/69A Weather and Digital Audio

<b>Entertainment</b> .....	10-15
<b>Introduction</b> .....	10-15
Radio IDs .....	10-15
Activating XM Radio Services .....	10-15
<b>GDL 69 Weather</b> .....	10-17
<b>Introduction</b> .....	10-17
Displaying Weather Data on the Navigation Map Page .....	10-18
Navigation Map Page Weather Control Softkeys .....	10-18
Navigation Map Setup Options .....	10-20
Displaying Weather Data on the Nearest Pages .....	10-21
Displaying METAR and TAF information on the Airport Information Page .....	10-22
Displaying Weather Data on the AUX - Trip Planning Page .....	10-24
Map .....	10-24
Displaying Weather Data on the Flight Plan Page Maps .....	10-24
Displaying Weather on the Weather Data Link Page .....	10-25
Weather Data Link Page Softkeys .....	10-26
NEXRAD Abnormalities .....	10-26
NEXRAD Limitations .....	10-26
NEXRAD Intensity .....	10-26
Weather Data Link Page Setup .....	10-32
Map Panning Information-Weather Data Link Page .....	10-32
Weather Product Symbols .....	10-34
Weather Product Age .....	10-35

<b>GDL 69A – Digital Audio Entertainment</b> .....	10-37
Introduction .....	10-37
XM Information Page .....	10-37
Data and Audio Radio ID .....	10-38
Service Class .....	10-38
Weather Products Window .....	10-38
XM Radio Page .....	10-39
XM Radio Softkeys .....	10-39
Active Channel .....	10-39
Channels .....	10-39
Volume .....	10-40
Presets .....	10-41
GDL 69 Troubleshooting .....	10-41

---

## APPENDICES

---

<b>Appendix A SD Card Use</b> .....	A-1
<b>Aviation Database</b> .....	A-1
<b>Terrain Database</b> .....	A-1
<b>Appendix B Abbreviations, Acronyms &amp; NAV Terms</b> .....	B-1
<b>Appendix C Questions &amp; Answers</b> .....	C-1
<b>Appendix D G1000 Map Datums</b> .....	D-1
<b>Appendix E General TIS Information</b> .....	E-1
<b>Introduction</b> .....	E-1
<b>TIS vs. TCAS</b> .....	E-1
<b>TIS Limitations</b> .....	E-1
<b>Appendix F Map Symbols</b> .....	F-1
<b>Airport</b> .....	F-2
<b>NAVAIDS</b> .....	F-2
<b>Basemap</b> .....	F-2
<b>Traffic</b> .....	F-3
<b>Lightning Strike</b> .....	F-3
<b>Miscellaneous</b> .....	F-3
<b>Line Symbols</b> .....	F-4

**Appendix G G1000 System Specifications** G-1

- Obstacle database .....G-1
- Terrain Color Chart .....G-1
- GDU 1040 MFD & PFD .....G-2
- GMA 1347 Audio Panel .....G-2
- GIA 63 Integrated Avionics Units .....G-2
- GDC 74A Air Data Computer .....G-3
- GTX 33 Mode S Transponder .....G-3
- GEA 71 Engine/Airframe Unit .....G-3
- GDL 69/69A Weather Data Link .....G-3
- GRS 77 AHRS .....G-4

---

**INDEX**

---

**Index** I-1



**WARNING:** Navigation and terrain separation must NOT be predicated upon the use of the terrain function. The G1000 Terrain Proximity feature is NOT intended to be used as a primary reference for terrain avoidance and does not relieve the pilot from the responsibility of being aware of surroundings during flight. The Terrain Proximity feature is only to be used as an aid for terrain avoidance and is not certified for use in applications requiring a certified terrain awareness system. Terrain data is obtained from third party sources. Garmin is not able to independently verify the accuracy of the terrain data.



**WARNING:** The displayed minimum safe altitudes (MSAs) are only advisory in nature and should not be relied upon as the sole source of obstacle and terrain avoidance information. Always refer to current aeronautical charts for appropriate minimum clearance altitudes.



**WARNING:** The Garmin G1000, as installed in Mooney aircraft, has a very high degree of functional integrity. However, the pilot must recognize that providing monitoring and/or self-test capability for all conceivable system failures is not practical. Although unlikely, it may be possible for erroneous operation to occur without a fault indication shown by the G1000. It is thus the responsibility of the pilot to detect such an occurrence by means of cross-checking with all redundant or correlated information available in the cockpit.



**WARNING:** For safety reasons, G1000 operational procedures must be learned on the ground.



**WARNING:** The altitude calculated by G1000 GPS receivers is geometric height above Mean Sea Level and could vary significantly from the altitude displayed by pressure altimeters, such as the GDC 74A Air Data Computer, or other altimeters in aircraft. GPS altitude should never be used for vertical navigation. Always use pressure altitude displayed by the G1000 PFD or other pressure altimeters in aircraft.



**WARNING:** The Jeppesen database used in the G1000 system must be updated regularly in order to ensure that its information remains current. Updates are released every 28 days. A database information packet is included in the G1000 package. Pilots using an outdated database do so entirely at their own risk.



**WARNING:** The basemap (land and water data) must not be used for navigation, but rather only for non-navigational situational awareness. Any basemap indication should be compared with other navigation sources.



**CAUTION:** The United States government operates the Global Positioning System and is solely responsible for its accuracy and maintenance. The GPS system is subject to changes which could affect the accuracy and performance of all GPS equipment. Portions of the Garmin G1000 utilize GPS as a precision electronic NAVI-gation AID (NAVAID). Therefore, as with all NAVAIDs, information presented by the G1000 can be misused or misinterpreted and, therefore, become unsafe.



**CAUTION:** To reduce the risk of unsafe operation, carefully review and understand all aspects of the G1000 Pilot's Guide documentation and the G1000 Flight Manual Supplement. Thoroughly practice basic operation prior to actual use. During flight operations, carefully compare indications from the G1000 to all available navigation sources, including the information from other NAVAIDs, visual sightings, charts, etc. For safety purposes, always resolve any discrepancies before continuing navigation.



**CAUTION:** The Garmin G1000 does not contain any user-serviceable parts. Repairs should only be made by an authorized Garmin service center. Unauthorized repairs or modifications could void both the warranty and the pilot's authority to operate this device under FAA/FCC regulations.



**CAUTION:** The GDU 1040 PFD and MFD displays use a lens coated with a special anti-reflective coating that is very sensitive to skin oils, waxes, and abrasive cleaners. **CLEANERS CONTAINING AMMONIA WILL HARM THE ANTI-REFLECTIVE COATING.** It is very important to clean the lens using a clean, lint-free cloth and an eyeglass lens cleaner that is specified as safe for anti-reflective coatings.



**CAUTION:** All visual depictions contained within this document, including screen images of the G1000 panel and displays, are subject to change and may not reflect the most current G1000 system. Depictions of equipment may differ slightly from the actual equipment.



**CAUTION:** The illustrations in this guide are only examples. Never use the G1000 to attempt to penetrate a thunderstorm. Both the FAA Advisory Circular, Subject: Thunderstorms, and the Airman's Information Manual (AIM) recommend avoiding "by at least 20 miles any thunderstorm identified as severe or giving an intense radar echo."



**CAUTION:** There are several atmospheric phenomena in addition to nearby thunderstorms that can cause isolated discharge points in the strike display mode. However, clusters of two or more discharge points in the strike display mode do indicate thunderstorm activity if these points reappear after the screen has been cleared. Avoid the clusters to avoid the thunderstorms. In the cell display mode, even a single discharge point may represent thunderstorm activity and should therefore be avoided.



**WARNING:** This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

## LIMITED WARRANTY

This Garmin product is warranted to be free from defects in materials or workmanship for two years from the date of purchase. Within this period, Garmin will, at its sole option, repair or replace any components that fail in normal use. Such repairs or replacement will be made at no charge to the customer for parts and labor, provided that the customer shall be responsible for any transportation cost. This warranty does not cover failures due to abuse, misuse, accident, or unauthorized alterations or repairs.

THE WARRANTIES AND REMEDIES CONTAINED HEREIN ARE EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES EXPRESS OR IMPLIED OR STATUTORY, INCLUDING ANY LIABILITY ARISING UNDER ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, STATUTORY OR OTHERWISE. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, WHICH MAY VARY FROM STATE TO STATE.

IN NO EVENT SHALL GARMIN BE LIABLE FOR ANY INCIDENTAL, SPECIAL, INDIRECT OR CONSEQUENTIAL DAMAGES, WHETHER RESULTING FROM THE USE, MISUSE, OR INABILITY TO USE THIS PRODUCT OR FROM DEFECTS IN THE PRODUCT. Some states do not allow the exclusion of incidental or consequential damages, so the above limitations may not apply to you.

Garmin retains the exclusive right to repair or replace the unit or software, or to offer a full refund of the purchase price, at its sole discretion. SUCH REMEDY SHALL BE YOUR SOLE AND EXCLUSIVE REMEDY FOR ANY BREACH OF WARRANTY.

To obtain warranty service, contact your local Garmin Authorized Service Center. For assistance in locating a Service Center near you, visit the Garmin Web site at "<http://www.garmin.com>" or contact Garmin Customer Service at 800-800-1020.

# **G1000<sup>TM</sup>**

*pilot's guide index  
for Mooney M20M & M20R*





**A**

Activate approach 3-47  
 Activate a flight plan 8-54  
 Activate a flight plan 8-45  
 Activation Instructions 10-15  
 Active Channel 10-39  
 Active Channel list 10-41  
 Active flight plan 8-23, 8-39  
 Active Flight Plan Page 8-43  
 Active Flight Plan Page options 8-43  
 Active frequency 4-2  
 ADF 3-22  
 ADF tuning 3-23  
 ADVISORY 3-51  
 Advisory Messages 10-42  
 Age stamp 10-35  
 AHRS 2-2, 2-14  
 AIRCRAFT ALERTS 9-3  
 Aircraft heading data 10-9  
 AIRMET 10-28  
 Airport frequency 8-123  
 Airport Frequency Information field 8-69  
 Airport Information Page 10-17, 10-22  
 Airport information window 3-36  
 Airport Runway Information Field 8-70  
 Airspace boundaries 8-23  
 Airspace messages 8-133  
 Airspeed indicator 3-11  
 Airspeed trend vector 3-11  
 Air Data Computer 2-1, 2-2  
 Alerting System 9-1  
 Alerts 9-1  
 Alerts window 3-51  
 Altimeter 3-14  
 Altitude alerter 3-15  
 Altitude band 3-15  
 Altitude buffer 8-113  
 Altitude Display Mode 10-11, 10-13  
 Altitude reference box 3-14  
 Altitude reference bug 3-14  
 Altitude trend vector 3-14  
 ALT mode 3-27

ALT softkey 5-3  
 Ammeter 7-2  
 Annunciation window 3-51  
 Annunciator lights 6A-5  
 Approach(es) 8-61  
 Approach Information Page 8-71  
 Approach markers  
   Inner 6A-7, 6A-12  
   Lamp color 6A-8  
   Middle 6A-7  
   Outer 6A-7, 6A-12  
   Signal augmentation 6A-7  
 Approach Page menu 8-77  
 APR softkey 8-76  
 ARC HSI 3-18  
 ARINC 429 2-2  
 ARINC leg types 8-62  
 Arrivals and departures 8-61  
 Arrival Alerts 8-114  
 Arrival Page Menu 8-74  
 Arrow, double green 4-11  
 Arrow, single green 4-11  
 Arrow, single magenta 4-11  
 ARTCC 8-129  
 ASSIST 7-4  
 ATC guidance 10-1  
 Attitude 2-1, 2-2  
 Attitude indicator 3-12  
 Audio Alerts 8-114  
 Audio Entertainment 10-15  
 Audio panel controls  
   ADF 6A-9  
   AUX 6A-9  
   COM1 6A-4, 6A-5  
   COM1 MIC 6A-2  
   COM2 6A-4, 6A-5  
   COM2 MIC 6A-2, 6A-4  
   COM3 6A-4, 6A-5  
   COM3 MIC 6A-2, 6A-4  
   COM 1/2 6A-5, 6A-6  
   COPLT 6A-10  
   DME 6A-9  
   NAV1 6A-9

NAV2 6A-9  
 SPKR 6A-7  
 SQ 6A-12, 6A-13  
 TEL 6A-5  
 VOL 6A-12, 6A-13  
 Auto-tuning 4-13, 4-14, 4-20  
 Automated Airborne Determination 3-27  
 Automatic squelch 4-4, 4-5  
 Auto zoom 8-11  
 Auxiliary Page Group 8-95  
 Auxiliary windows 3-33  
 AUX - Trip Planning Map 10-17  
 Aviation group options 8-23

**B**

Backlighting 2-12, 3-5, 8-2  
 Backup 2-13  
 BACK softkey 5-1  
 Barometric setting box 3-14  
 Bearing pointers 3-21  
 Bendix/King KTA870 TAS/KMH880 10-9  
 BKSP softkey 5-1, 5-4  
 BRG1 3-21  
 BRG2 3-21

**C**

Canceling direct-to navigation 8-41  
 Category 10-40  
 CATGRY softkey 10-39  
 CAUTION 3-51  
 Caution xiv, xv  
 CDI scale 8-115  
 CDI scaling 8-64  
 CDI softkey 4-11  
 Cell data 10-3  
 Change fields 3-44, 8-52  
 Changing the Map Scale 8-30  
 Channel List 10-38  
 Channels 10-39  
 CHNL softkey 10-39  
 City 3-37

City Forecast Data 10-17  
 CLEAR softkey 10-8  
 Closest point of flight plan 8-51  
 Closest point of FPL 3-43  
 Cockpit Voice Recorder 6A-15  
 Cockpit voice recorder 6B-1  
 Code selection softkeys 5-1, 5-4  
 CODE softkey 5-1  
 Communication frequency window 3-25  
 COM channel spacing 8-116  
 COM channel spacing setup 4-5  
 COM Configuration 8-115  
 COM frequency window 4-1  
 COM swap 6A-6  
 COM tuning knob 4-3, 4-4, 4-6  
 COM volume/squelch knob 4-4, 4-5  
 Controls (display bezel) 2-7  
 Convective SIGMET 10-28  
 Copyright i  
 Copy a flight plan 8-55  
 COUNTY softkey 10-31  
 County Warnings 10-17  
 Course 3-19  
 Course Deviation Indicator (CDI) 3-20  
 Course pointer 3-18  
 Create a new flight plan 8-55  
 Create a new waypoint 8-93  
 Creating a flight plan 3-39  
 Creating a Profile 8-108  
 Customized Display 10-5  
 CVR 6A-15  
 CYCLONE softkey 10-31  
 Cylinder head temperature 7-2  
 CYL SLCT 7-4

## D

Database 2-11  
 Data and Audio Radio ID 10-38  
 Data link 2-1  
 Date/Time box 8-110  
 dBZ 10-26  
 Decluttering 8-11, 8-12

Declutter level 3-31  
 Default power-on settings 6A-5  
 Delete 3-40  
 Delete all flight plans 8-57  
 Delete all user waypoints 8-91  
 Delete a flight plan 8-56  
 Delete a user waypoint 8-93  
 Delete a waypoint 8-47  
 Deleting a Profile 8-109  
 Density Altitude 8-98  
 Departure Procedures 8-73  
 Departure timer 8-100  
 Deviation band 3-15  
 Digital Audio entertainment 10-37  
 Digital audio entertainment 2-3  
 Dilution of Precision 8-104  
 Direct-to 3-36  
 Direct-to navigation 8-37  
 Direct-to Page 8-37  
 Direct-to Waypoint 8-38  
 Display backup 3-49  
 Display interpretation 10-10  
 Display Units 8-110  
 DME 3-22  
 DME tuning 3-23  
 DP softkey 8-73  
 Dual audio panel 6B-1

## E

ECHO TOP 10-27  
 Edit a flight plan 8-45  
 Edit flight plan 8-57  
 Elevator trim 7-8  
 Emergency frequency 4-4, 4-7  
 Engine Indication System 7-1  
 ENGINE softkey 7-1, 8-2  
 Entering a transponder code 5-4  
 Entering Flight ID 5-2  
 Entertainment inputs 6A-9  
 Estimated Position Error 8-104  
 Ethernet 2-1, 2-2, 2-12, 2-13  
 Exhaust gas temperature 7-2

## F

Facility 3-37  
 Failure  
   Display 2-13  
   Input 2-14  
 Failure Response 10-10  
 FCC xv  
 FIS-B 10-17  
 FIS weather information 10-17  
 Flap position indicator 7-8  
 Flight ID 3-35  
 Flight planning 8-43  
 Flight Planning Maps 10-17  
 Flight plans 3-38  
 Flight Plan Catalog Page 8-53  
 Flight Plan Catalog Page operations 8-53  
 Flight Plan Catalog Page options 8-53  
 Flight plan window 3-38  
 Flight timer 8-100  
 Freezing Levels 10-17  
 Frequency list 8-71  
 Frequency spacing 4-5, 4-9  
 Frequency transfer arrow 4-3  
 Frequency transfer key 4-4  
 FRZ LVL softkey 10-30  
 FSS information 8-129  
 FSS softkey 4-19  
 Fuel calculation 7-6  
 Fuel flow indicator 7-2  
 Fuel Planning 8-97  
 Fuel pressure indicator 7-2  
 Fuel quantity 7-1  
 Fuel range ring 8-20  
 Fuel reserve rings 3-30

**G**

G1000 Multi Function Display Pilot's Guide 10-1  
 Gallons per hour 7-2  
 GAL USED 7-6  
 GDC 74A 2-1, 2-2  
 GDL 69 10-15  
 GDL 69/69A 2-1, 2-3  
 GDL 69A 10-15  
 GDL 69 Troubleshooting 10-41  
 GDL 69 Weather Interface 10-17  
 GDU 1040 2-1  
 GEA 71 2-1, 2-2  
 Generic timer 3-34, 8-100  
 GIA 63 2-1, 2-2  
 GMA 1347 2-1, 2-10, 2-12  
 GMU 44 2-1, 2-2  
 GND mode 3-27  
 GPS xiv  
 GPS receiver 8-106  
 Graphical Cloud Tops 10-17  
 Graphical Echo Tops 10-17  
 Graphical Lightning Strikes 10-17  
 Graphical METAR Data 10-17  
 Graphical NEXRAD Data 10-17  
 Graphical Wind Data 10-17  
 Ground Clutter 10-26  
 GRS 77 2-1, 2-2  
 GTX 33 2-1, 2-3  
 GTX 33 Transponder 5-1, 5-2

**H**

Heading 10-9  
 Headset(s) 6A-4, 6A-9, 6A-15  
   Stereo 6A-4  
 HI SENS 6A-7  
 Horizontal Situation Indicator 3-18  
 Hottest cylinder 7-2  
 Hurricane Track 10-17

**I**

IDENT 3-27  
 IDENT softkey 5-3, 5-5  
 ID indicator 4-3, 4-4, 4-9  
 IFR conditions 10-29  
 INFO softkey 4-14, 10-39  
 Initialization (system) 2-10  
 Inset map 3-30  
 INTEG 3-24  
 Intercom system (ICS) 6A-6, 6A-9, 6A-10, 6A-12, 6A-13  
 Interrogations 3-27  
 Intruder aircraft 10-11, 10-12  
 Invert 3-40  
 Invert and activate a flight plan 8-55  
 Invert flight plan 8-47

**J**

Jeppesen xiv  
 Joystick (bezel) 2-7

**K**

Key(s) 2-8, 2-9  
   CLR 2-7  
   COM Frequency Toggle 2-7  
   Direct-to 2-7  
   ENT 2-7  
   FPL 2-7  
   MENU 2-7  
   NAV Frequency Toggle 2-7  
   PROC 2-7  
 Knob(s)  
   ALT 2-7  
   COM 2-7  
   COM VOL/SQ 2-7  
   CRS/BARO 2-7  
   FMS 2-7  
   HDG 2-7  
   NAV 2-7  
   NAV VOL/ID 2-7

**L**

L-3 SKYWATCH HP Traffic Advisory System 10-9  
 Land data 8-16, 8-20  
 Land group options 8-24  
 Lean page 7-4  
 LED 6A-5  
 LEGEND 10-29  
 LEGEND softkey 10-29  
 Lightning 10-7  
 Liquid crystal displays 8-1  
 Loading Departure options 8-48  
 Load an Arrival 8-49  
 Load approach 3-42, 8-50  
 Load arrival 3-42  
 Load departure 3-41, 8-48  
 Localized SIGMET 10-28  
 Long-range planning 10-1  
 LRU(s) 2-1  
 LRU Information Window 10-41

**M**

Magnetic Variation 8-83  
 Magnetometer 2-1, 2-2, 2-14  
 Manifold pressure 7-1  
 Manual squelch (MAN SQ) 6A-12, 6A-13  
   Override 6A-13  
 Manual tuning 4-6, 4-10  
 Map Datums 8-111  
 Map group options 8-16  
 Map orientation 3-30, 8-11  
 Map Page group 10-6  
 Map Panning 10-32  
 Map panning 8-12  
 Map scale 8-11  
 Map setup 8-16  
 Marker beacon 6A-7  
 Marker beacon annunciations 3-16  
 MASQ 6A-9  
 Measuring Bearing/Distance 8-26  
 Measuring bearing/distance 8-26

Menus 3-32, 8-7  
 Message advisories 9-9, 9-10, 9-11,  
 9-13, 9-14, 9-15, 9-16, c  
 METAR 10-22  
 Metric display 3-16  
 MFD Data Bar Fields 8-114  
 MFD softkeys 8-2  
 Minimum runway length 8-117  
 MKR/MUTE 6A-7  
 Mode A 3-27  
 Mode C 3-27  
 Mode S 5-1, 5-2, 5-3  
 Mode selection softkeys 5-1, 5-3, 5-4  
 Mode S transponder 3-27  
 Monitoring Traffic 10-10  
 MORE WX softkey 10-30  
 Morse code identifier 4-3, 4-4, 4-9  
 Mountain obscuration 10-29  
 MUSIC #1 6A-9, 6A-10  
 MUSIC #2 6A-9, 6A-10  
 Muting  
 COM 6A-6, 6A-14  
 MUSIC #1 6A-9

## N

National Weather Service 10-31  
 NAV1 6A-9  
 NAV2 6A-9  
 NAVAID xiv  
 NAVAIDS xv  
 Navigation frequency window 3-25  
 Navigation Map Page 8-9, 10-3  
 Navigation Map Page options menu  
 8-16  
 Navigation mode selection 4-11  
 Navigation source 3-24  
 Navigation Status bar 4-2  
 Navigation status bar 3-26  
 NAV frequencies 4-9, 4-15, 4-20, 4-21  
 NAV frequency window 4-1  
 NAV range ring 8-17  
 NAV station identifiers 4-9  
 NAV tuning knob 4-3, 4-4, 4-10

NAV volume/ID knob 4-4, 4-9  
 NDB Information Page Options 8-82  
 NDB Page Menu 8-82  
 Nearest Airport 8-116  
 Nearest airport 8-40  
 Nearest airports 3-35  
 Nearest airports, frequency tuning 4-  
 13, 4-17  
 Nearest Airports Page 8-122  
 Nearest Pages 10-17  
 Nearest Page Group 8-119  
 NEXRAD 10-17  
 NEXRAD Abnormalities 10-26  
 NEXRAD Intensity 10-26  
 NEXRAD Limitations 10-26  
 NEXRAD softkey 10-18  
 Normal operating mode 2-12

## O

OAT 2-2  
 OBS 3-24  
 Obstacles 10-3  
 Oil pressure indicator 7-2  
 Oil temperature indicator 7-2  
 Operating Mode 10-11, 10-12  
 Operation 6A-5, 6A-15  
 Operational xiv  
 Outside Air Temperature 3-29  
 Overview 2-1

## P

PA 6A-7  
 Page groups 8-6  
 Pan map 3-32  
 PFD 6A-6, 6A-7, 6A-12  
 PILOT 6A-10  
 Pilot Controlled lighting frequency  
 4-15  
 Pitch indication 3-12  
 PLAY 6A-14  
 Point-n-shoot flight plan 8-58  
 Pounds per square inch 7-2  
 Power 8-30, 8-100

Power-up 2-10  
 Power-up Self-Test 10-11  
 Power-up test 8-30  
 Presets 10-41  
 PRESETS softkey 10-39  
 Primary Flight Display 3-1  
 Procedures 8-61  
 Procedures Page 8-61  
 Procedures window 3-44  
 Proximity Advisories 10-9  
 PTT 6A-7

## Q

Quick tuning 121.500 MHz 4-7

## R

Radar coverage 10-27  
 Radio IDs 10-15  
 RADIO softkey 10-37, 10-39  
 Radio tuning window 3-23  
 Range 10-7  
 Recently used VORs 4-16  
 Recorded COM signals 6A-14  
 Registered Trademark i  
 Remove approach 3-43  
 Remove arrival 3-43  
 Remove departure 3-43  
 Remove departure, arrival, or approach  
 8-51  
 Removing Stormscope Lightning Data  
 10-6  
 Rename a user waypoint 8-93  
 Renaming a Profile 8-109  
 Restore defaults 3-44, 8-52  
 Reversionary mode 6A-2, 2-13, 2-14,  
 3-49  
 Revolutions per minute 7-1  
 Roll indication 3-13  
 RS-232 2-1, 2-3  
 RS-485 2-2  
 RST USED 7-6  
 Rudder trim 7-8  
 RX indicator 4-3, 4-5, 4-7

Ryan 9900B and 9900BX TAS 10-9

## S

Scheduler 8-101

SD card 2-9

Selecting a COM radio 4-6

Selecting a NAV radio 4-11

Select approach 3-45, 8-50, 8-63

Select arrival 3-46

Select departure 3-47, 8-48

Service Class 10-38

Severe Thunderstorm 10-31

SFC softkey 10-30

SIGMET 10-28

SIGMETs/AIRMETs 10-17

SKYWATCH 10-11, 10-12

Slip/Skid indicator 3-13

Softkey

ENGINE 8-2

SYSTEM softkey 8-2

Softkeys 3-7

Sort by comment/number 8-57

Speaker 6A-7, 6A-15

Special Position Identification 3-27

Specifying a course to a waypoint 8-41

Speed indication 3-11

Speed ranges 3-11

Spell N Find 8-38

SPKR 6A-7

Standard instrument departures 8-48

Standby frequency 4-2, 4-3, 4-6, 4-10, 4-13, 4-19

Standby frequency field 4-3, 4-4, 4-14, 4-20, 4-21

Standby mode 3-27

STAR softkey 8-74

STBY softkey 5-3

Stop navigating a flight plan 8-54

Store Flight Plan 8-46

Storing a flight plan 3-39

Stormscope 10-3

Stormscope Page 10-6

Stormscope Page Operations 10-8

Storm cells 10-28

Strike data 10-3

Strike location 10-27

Stuck microphone 4-7

Surface Analysis including City Forecasts 10-17

Surface winds 10-29

SUSP 3-24

System Annunciations 9-1

System annunciations 9-5

System page 7-6

System Status Page 10-41

System time box 3-29

System time format 8-110

## T

Tachometer 7-1

TAF 10-22

TAS Traffic 10-9

TCAS 5-2

TCAS symbology 8-30

TEL 6A-5

Temporary Flight Restrictions 10-17

TERRAIN 3-31

Terrain xiv

Terrain data 8-19, 10-3

Terrain data scale 8-19

Terrain information 8-13

Terrain Proximity Page 8-33

Terrain Proximity Page operations 8-35

Terrain separation xiv

Textual METAR Data 10-17

Textual Terminal Aerodrome Forecasts 10-17

Thunderstorm penetration 10-1

Timer/References 3-33

Time offset 8-110

TIS 8-14

TIS interface 10-9

TIS symbology 8-30

TIS Traffic Advisory 8-31

TIS Ttraffic status 8-32

TO/FROM arrow 3-18

Toggling COM frequencies 4-6

Toggling NAV frequencies 4-10

TOPO 3-31

Topographic Information 8-13

Topo data 8-18

Topo scale box 8-18

Totalizer 7-6

Tracking intruder aircraft 10-11, 10-12

Track vector 8-17

Trademark i

TRAFFIC 3-31

Traffic 8-14

Traffic Advisories 10-9

Traffic Advisory Criteria 10-10

Traffic Advisory Systems 10-9

Traffic annunciation 3-29

Traffic Banner 8-32

Traffic group options 8-20

Traffic Information Service (TIS) 5-2

Traffic label 8-22

Traffic Map Page 8-29

Traffic Map Page operations 8-30

Traffic mode 8-21

TRAFFIC softkey 10-9

Traffic symbol 8-22

Transponder-equipped aircraft 5-2

Transponder code field 5-1

Transponder code selection 5-4

Transponder ground mode 5-3

Transponder mode field 5-1, 5-3, 5-4

Transponder standby mode 5-1, 5-3

Transponder Status bar 5-1, 5-3, 5-4, 5-5

Transponder status bar 3-27

Trip planning operations 8-96

Turbine inlet temperature 7-2

Turbulence 10-29

Ture airspeed box 3-11

Turn rate indicator 3-20

TX indicator 4-3, 4-7

## U

Update rate 10-27  
 User Waypoint Information Page 8-90

## V

Vertical deviation/Glideslope indicator 3-16  
 Vertical Navigation (VNAV) Page 8-59  
 Vertical navigation profile 8-59  
 Vertical Speed Indicator 3-17  
 Vertical speed pointer 3-17  
 VFR 3-27  
 VFR code 5-5  
 View Recent User WPT List 8-91  
 VLOC receiver 8-64  
 Voice Announcements 10-12  
 VOL/PUSH ID knob 4-4, 4-9  
 VOL/PUSH SQ knob 4-4, 4-5  
 Voltmeter 7-2  
 Volume 6A-6, 6A-12, 10-40  
 Volume/squelch 6A-12  
 VOL softkey 10-39  
 VOR/ILS approach, frequency activation 4-14  
 VOR1 selection 4-2, 4-11  
 VOR2 selection 4-2, 4-11  
 VOR frequency loading 4-18  
 VOR information 4-16  
 VOR list 8-85  
 VOR Page Menu 8-85  
 Vspeeds 3-34  
 Vspeed bug 3-34  
 Vspeed bugs 3-33  
 Vspeed references 3-11

## W

WARN 3-24  
 WARNING 3-51  
 Warning 6A-4  
 Warnings xiv, xv  
 Warranty xvi

Waypoint Facility or City Location vi, 8-69  
 Waypoint identifier 8-68  
 Waypoint Page group 8-67  
 Weather (real-time) 2-3  
 Weather Data Link Page 10-17, 10-25, 10-29, 10-32  
 Weather Data Link Page Softkeys 10-26  
 Weather Group Options 10-5  
 Weather Group Options Menu 10-5  
 Weather information 3-32  
 Weather Legends Window 10-29  
 Weather Products 10-38  
 Weather Product Age 10-35  
 Weather Product Symbols 10-34  
 Wind shear 10-28  
 WIND softkey 10-31  
 Wind vector 8-17  
 WPT - Weather Information Page 10-17  
 WPT Page Group. 10-22  
 WSR-88D weather surveillance radar 10-26  
 WX-500 User's Guide 10-3  
 WX frequency loading 4-19  
 WX softkey 10-22

## X

XM Information Page 10-37  
 XM Lightning 10-17  
 XM LTNG softkey 10-18  
 XM Radio 10-15  
 XM Radio Interface Softkeys 10-39  
 XM Radio Page 10-39  
 XM Satellite Radio 10-37  
 XM Weather 10-15  
 XM weather/radio 2-3  
 XPDR softkey 5-1, 5-3, 5-4, 5-5

## Z

Zoom range 3-31  
 Zoom range 10-6





Garmin International, Inc.  
1200 East 151st Street  
Olathe, KS 66062, U.S.A.  
p: 913.397.8200 f: 913.397.8282

Garmin AT, Inc.  
2345 Turner Road SE  
Salem, OR 97302, U.S.A.  
p: 503.391.3411 f: 503.364.2138

Garmin (Europe) Ltd.  
Unit 5, The Quadrangle  
Abbey Park Industrial Estate  
Romsey, SO51 9DL, U.K.  
p: 44/0870.8501241 f: 44/0870.8501251

Garmin Corporation  
No. 68, Jangshu 2nd Road  
Shijr, Taipei County, Taiwan  
p: 886/2.2642.9199 f: 886/2.2642.9099

[www.garmin.com](http://www.garmin.com)